


SL-HF150ES / 150AS

RMT-231

SERVICE MANUAL

EC Model
Australian Model

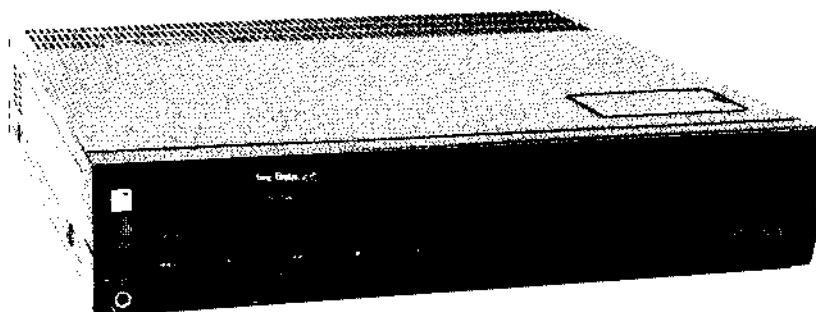

August, 1985

711B2 CHASSIS

SPECIFICATIONS

System

Video recording system

Rotary two-head helical scanning

Audio recording system

Beta hi-fi PAL system (2 channels)
(Recording on the conventional audio track is monaural.)

Video signal

SL-HF150ES:

CCIR standards, PAL and DDR
SECAM colour

SL-HF150AS:

CCIR standards, PAL colour

Aerial input

75-ohm, asymmetrical aerial socket

Stereo/bilingual system

SL-HF150ES:

West-German two-carrier system

SL-HF150AS:

Australian two-carrier system

Channel coverage

SL-HF150ES:

VHF: Western European channels
E2-U20

UHF: Western European channels
E21-E68

(Up to 30 programmes can be preset.)

SL-HF150AS:

VHF: Australian channels 0 - 11

UHF: Australian channels
28 - 34, 39 - 63

(Up to 30 programmes can be preset.)

RF output signal

SL-HF150ES:

UHF channels E30 to E39 (variable)
75 ohms, unbalanced

SL-HF150AS:

VHF channel 0 or 1, selectable
75 ohms, unbalanced

Video

Input

VIDEO IN: BNC connector
1.0 V (p-p) ± 1.0 V (p-p)
 -0.5
75 ohms, unbalanced,
sync negative

Output

VIDEO OUT: BNC connector
1.0 V (p-p) ± 0.1 V (p-p)
75 ohms, unbalanced,
sync negative

Horizontal resolution

260 lines

Signal-to-noise ratio

Colour: Better than 40 dB
B/W: Better than 43 dB

Audio

Input

AUDIO IN: 2 phono jacks
47 kilohms, -10 dBs
(0 dBs = 0.775 V rms)

Output

AUDIO OUT: 2 phono jacks
Load impedance less than
10 kilohms
-10 dBs with 47 kilohms load,
unbalanced
Headphones: Stereo phone jack
- 26 dBs, 8 ohms

- Continued on next page -



Beta



VIDEO CASSETTE RECORDER

SONY®

Beta hi-fi PAL sound

Frequency response 20 Hz to 20 kHz (MPX FILTER OFF)

Wow and flutter Less than 0.005 % WRMS

Dynamic range More than 80 dB

Video/audio output

AV connector 6-pin DIN connector

Tape transport

Tape speed 18.73 mm/sec.

Maximum recording time
2 hours 10 min. (with Sony L-500
cassette)
3 hours 15 min. (with L-750)

Fast forward/rewind time
Within 5 min. (with L-500)

Timer

Clock Crystal lock

Time indication 24-hour cycle

Timer setting Only for recording
4 events/3 weeks, adjustable for any
day or for all 7 days of the week

General

Power requirements
SL-HF150ES: 220 V AC $\pm 10\%$, 50/60 Hz
SL-HF150AS: 240 V AC $\pm 10\%$, 50 Hz

Power consumption
43 W

Storage temperature
-20° C to + 60° C (-4° F to + 140° F)

Operating temperature
5° C to 40° C (41° F to 104° F)

Dimensions Approx. 430 × 95 × 390 mm (w/h/d)
(17 × 3³/₄ × 15³/₈ inches)
including projecting parts and controls

Weight Approx. 9.3 kg (20 lbs 8 oz) net

Accessories supplied

Demonstration video cassette tape (1) (AS model)
75-ohm coaxial cable for recorder to TV connection (1)
Remote Commander RMT-231 with two IEC designation
R6 batteries (1)
RF channel adjustment screwdriver (1) (EC model)

Design and specifications subject to change without
notice.

SAFETY CHECK-OUT

After correcting the original service problem, perform the following
safety checks before releasing the set to the customer:

1. Check the area of your repair for unsoldered or poorly-soldered connections. Check the entire board surface for solder splashes and bridges.
2. Check the interboard wiring to ensure that no wires are "pinched" or contact high-wattage resistors.
3. Look for unauthorized replacement parts, particularly transistors, that were installed during a previous repair. Point them out to the customer and recommend their replacement.
4. Look for parts which, though functioning, show obvious signs of deterioration. Point them out to the customer and recommend their replacement.
5. Check the B+ voltage to see it is at the values specified.

TABLE OF CONTENTS

<u>Section</u>	<u>Title</u>	<u>Page</u>	<u>Section</u>	<u>Title</u>	<u>Page</u>
1. GENERAL			3-13. System Control Circuit and Servo Circuit Interface		49
1-1. Precautions		4	3-14. System Control Circuit and Audio Circuit Interface		49
1-2. Location and Function of Controls		5	3-15. Audio Block Diagram		51
1-3. TV Programme Recording (Beta hi-fi recording)		9	3-16. Audio Level Diagram (REC)		55
1-4. Playback		11	3-17. Audio Level Diagram (PB)		55
1-5. Timer-Activated Recording		13	3-18. AFM Level Diagram (REC, EE)		56
1-6. Quick Timer Recording		15	3-19. AFM Level Diagram (PB)		57
1-7. Beta Hi-Fi Audio Recording		15	3-20. Timer Block Diagram		59
1-8. Adjusting the TV (EC Model)		18	3-21. Tuner Block Diagram		61
1-9. Adjusting the TV (AS Model)		18	3-22. Power Block Diagram		63
1-10. TV Station Programming		19			
1-11. Clock Setting		20	4. SCHEMATIC DIAGRAM, PRINTED WIRING BOARDS		
2. DISASSEMBLY			4-1. Frame Schematic Diagram		65
2-1. Disassembly of Cabinet		21	4-2. RY-4 Board		70
2-2. Removal of the TU-73 Board		22	4-3. SA-9, RD-20, RD-21, LM-8, REEL MOTOR, CAPSTAN MOTOR Boards		80
2-3. Removal of the SA-9 Board		22	4-4. AF-7 Board		92
2-4. Removal of the RY-4 Board		23	4-5. TM-79, TM-80, FU-37, RS-12, HP-14 Board		102
2-5. Removal of the AF-7 Board		23	4-6. TU-73 Board		111
2-6. Removal of the Timer Block		24	4-7. PS-70, PS-71, PS-78 Boards		117
2-7. Removal of the FU-37 and HP-14 Boards		24	4-8. Semiconductors		121
2-8. Removal of the Power Block		25			
2-9. Removal of the RF Modulator		25	5. EXPLODED VIEWS		
2-10. Removal of the FL Cassette Compartment Assembly		26	5-1. Front Panel and Cabinet Assemblies		123
2-11. Removal of the Reel Block Assembly		26	5-2. Tuner, Timer and Power Assemblies		124
2-12. Internal Views		27	5-3. Front Loading Assembly		125
3. DIAGRAMS			5-4. Chassis Assembly 1		125
3-1. Circuit Boards Location		28	5-5. Chassis Assembly 2		127
3-2. Overall Block Diagrams		29	5-6. Drum Assembly		128
3-3-1. Video System Block Diagram (EC Model)		32	5-7. Reel Block Assembly		129
3-3-2. Video System Block Diagram (AS Model)		35	5-8. Hardware List		130
3-4. Video Y Block Diagram		38	6. ELECTRICAL PARTS LIST		131
3-5. Video CHROMA Block Diagram		39	7. ADJUSTMENTS		157
3-6. Servo System Block Diagram		41	REMOTE COMMANDER (RMT-231)		215
3-7. System Control Block Diagram		43	1. Remote Control Operation		215
3-8. System Control Circuit and Mechanism Block Interface		45	2. Printed Wiring Boards		217
3-9. System Control Circuit and Timer Circuit Interface		45	3. Schematic Diagram		218
3-10. System Control Circuit and its Peripheral Circuit Interface		46	4. Exploded View		219
3-11. System Control Circuit and Reel Motor Control Circuit Interface		48	5. Electrical Parts List		220
3-12. System Control Circuit and Video Circuit Interface		48			

SECTION 1

GENERAL

1-1. PRECAUTIONS

On safety

- SL-HF150ES operates on 220 V ac, 50/60 Hz.
- SL-HF150AS operates on 240 V ac, 50 Hz.
- Should any solid object or liquid fall into the cabinet, turn off the unit and have it checked by qualified personnel before operating it any further.
- To disconnect the mains lead (ac power cord), pull it out by the plug. Never pull the lead itself.
- The unit is not disconnected from the mains (ac power source) as long as it is connected to the mains outlet, even if the unit itself has been turned off.

On installation

- Allow adequate air circulation to prevent internal heat build-up. Do not place the unit on surfaces (rugs, blankets, etc.) or near materials (curtains, draperies) that may block the ventilation grille.
- Do not install the unit near heat sources such as radiators or air ducts or in a place subject to direct sunlight, excessive dust, mechanical vibration or shock.
- The unit is designed for operation in a horizontal position. Do not install it in an inclined position.
- Keep the unit and cassette tapes away from equipment with strong magnets, such as a microwave oven, large loudspeakers, etc.

On operation

- When the unit is not to be used for a long period, turn the unit off to conserve energy and to extend the useful life of your unit.
- Remove and store video cassettes after recording or playback. Always store the cassette in its case to keep the tape away from dust.

On cleaning

Clean the cabinet, panel and controls with a dry soft cloth. Do not use a moistened cloth or any type of solvent, such as alcohol or benzine, which might damage the finish.

On repacking

Do not throw away the carton and packing materials. They make an ideal container in which to transport the unit. When shipping the unit to another location, repack it as illustrated on the carton.

On colour broadcasting systems

This machine is designed to record and play back using the PAL colour system (SL-HF150AS) or the PAL and DDR SECAM colour systems (SL-HF150ES). Recording and playback of video sources based on other colour systems cannot be guaranteed.


If you have any questions about this unit, contact your Sony dealer.

What is Beta hi-fi PAL recording?

In conventional recording, audio signals are recorded on the audio track and the video signals on the video track. On Beta hi-fi recording, audio signals are recorded on the video track together with the video signals. In this recorder's Beta hi-fi PAL system, audio signals are recorded first, using the 2 audio heads, then video signals are recorded over the audio signals with an azimuth offset, using the 2 video heads.

Beta hi-fi audio signals are frequency-modulated and recorded on 2 channels, so you can record a stereo or bilingual programme with sound clearly superior to that of a conventional audio recording.

Beta hi-fi PAL recording pattern on the video tape

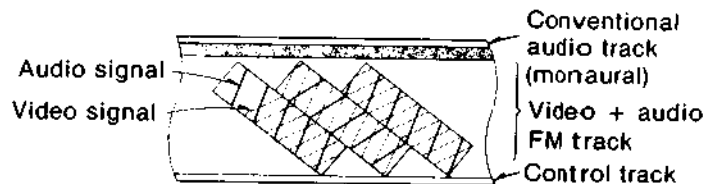


Video heads

For recording/playback of video signals

Audio heads

For recording/playback of Beta hi-fi audio signals

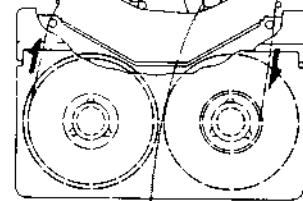

Audio/control heads


For recording/playback of conventional audio signals and control signals.

Beta hi-fi recording on this recorder

This recorder simultaneously records audio signals on the video track (Beta hi-fi recording) and on the conventional audio track (in monaural), so that tapes recorded with this recorder can be played back on an ordinary video cassette recorder without a Beta hi-fi system.

1-2. LOCATION AND FUNCTION OF CONTROLS

Front

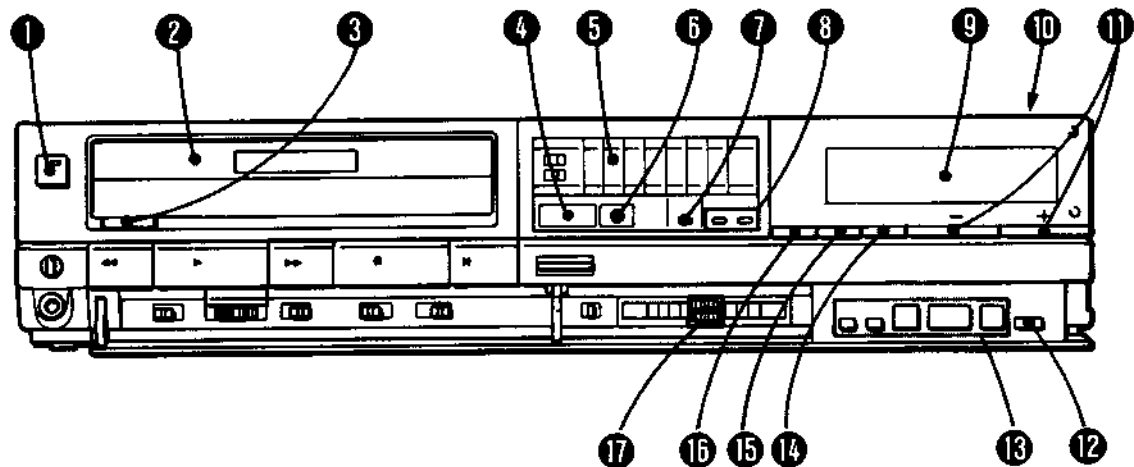


1 ON/STANDBY switch and indicator

Press to turn on the unit. The indicator will light up. Press again to turn it off.

The timer section will continue to operate and the time will be displayed even if the ON/STANDBY switch is off.

2 Cassette compartment

Insert a cassette after turning on the recorder. The  indication appears on the display window when a cassette is inside.

3 EJECT button

Press to remove the cassette. This button does not function when the recorder is turned off.

4 Beta hi-fi lamp

Lights to show Beta hi-fi recording, or playback of a Beta hi-fi recorded tape regardless of the BETA HIFI AUDIO OUT selector's position.

5 PEAK PROGRAM METER

These meters show the peak input level of each channel (left and right) during Beta hi-fi recording, and recorded levels during playback.

6 REMOTE SENSOR

Detects the remote control signal transmitted from the supplied Remote Commander.


7 SOUND lamp

When the BETA HIFI RECORD mode selector is set to SOUND, this lamp lights to show audio recording. It also lights when a tape with audio signals only is being played back.

8 STEREO A, B lamps

When a stereo TV programme is being received, both lamps light up. When a bilingual programme is being received, either A or B lamp lights up. These lamps do not activate when a pre-recorded stereo or bilingual tape is played.

9 Display window

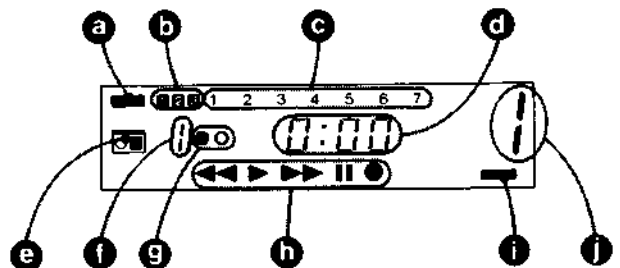

a TIMER REC indicator: Shows the recorder is in the timer standby mode. It remains displayed until the timer recording is finished.

b Week indications: Show the week in which the timer recording will take place.

c Day of the week indications

d Time and counter display: Usually shows the present time.

When the CLOCK/COUNTER button is pressed to COUNTER, the display shows the counter number.

e Cassette-inside indication: Shows a cassette is inserted.

f Event number indication

g Turn-on and turn-off setting indications: The "●" mark shows the display is the turn-on time of the timer recording and the "○" mark shows the turn-off time.

⑨ **Tape operation mode indicators:** Show the engaged tape operation mode: ◀◀ (rewind), ▶▶ (playback), ▶▶▶ (fast-forward), || (pause) or ● (recording).


⑩ **VTR indicator:** Shows the recorder is in the VTR mode.

⑪ **Programme number:** Shows the programme number selected with the PROGRAM/TIMER + and - buttons.

When the INPUT SELECT switch is set to LINE/PCM to record signals from the VIDEO IN and AUDIO IN jacks, the indication will change to "AU".

⑩ Tuning compartment

All the switches and buttons for programming stations are in this compartment.

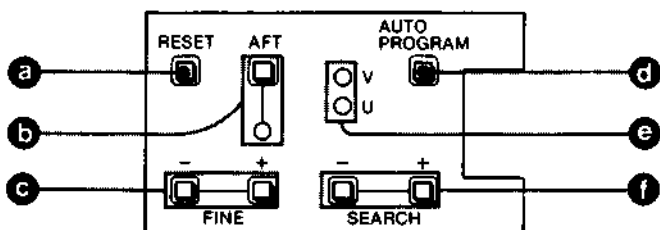

① **RESET button:** To clear the programmed station, press this button.

② **AFT button and lamp:** The AFT circuit activates automatically after the stations are tuned and memorized with automatic and manual programming. The AFT lamp will illuminate. If you wish to restore the AFT on the station which has been fine-tuned manually with the FINE buttons, press the AFT button.

③ **FINE + and - buttons:** Press to fine-tune the station.

④ **AUTO PROGRAM (automatic programming) button:** To preset the receivable stations automatically, press this button.

⑤ **Tuning indicator:** Indicates the tuning band.

⑥ **SEARCH + and - buttons:** Press to tune in a station. Press the - button to get a station of lower frequency and the + button to get a station of higher frequency.


⑪ PROGRAM/TIMER +/- button

Press + to advance or - to reverse the programme numbers. Also used for clock setting and timer setting.

⑫ QUICK TIMER button

Press to set the recording duration up to 4 hours in units of 30 minutes.

⑬ Buttons for clock and timer setting

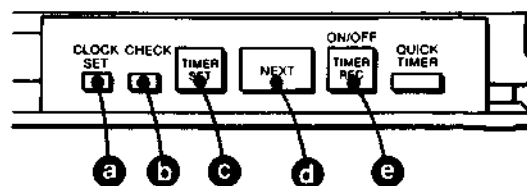

① **CLOCK SET button:** Press to initiate clock setting.

② **CHECK button:** Press to check timer settings.

③ **TIMER SET button:** Press to initiate timer setting.

④ **NEXT button:** Press to advance to the next item to be set during clock or timer setting.

⑤ **TIMER REC ON/OFF button:** Press to activate timer recording. Press it again to deactivate timer recording or quick timer recording in timer standby mode or while recording.

⑭ CLEAR/RESET button

Press to set the tape counter reading to "0000" when the tape counter is displayed. Also used for changing the timer setting or erasing the memory of the timer setting.

⑮ CLOCK/COUNTER button


Press to set the display to the tape counter. To reset to clock, press it again.

⑯ TV/VTR select button

To view a TV programme selected by the PROGRAM/TIMER buttons on the recorder or to monitor the picture being recorded, press this button so that the VTR indicator appears in the display window. When the ▶ PLAY button on the recorder is pressed, the recorder is automatically set in the VTR mode. To view a TV programme in the usual manner, press this button so that the indicator goes off. When the recorder is turned off, the recorder is automatically set in the TV mode.

⑰ REC LEVEL (recording level) controls

These controls adjust the audio recording level on the Beta hi-fi recording. The R control is for the right channel, and L is for the left channel. Normally set to 5 (green position) for recording TV programmes. When you are recording audio signals from other audio equipment, adjust manually to the correct position for the optimum result.

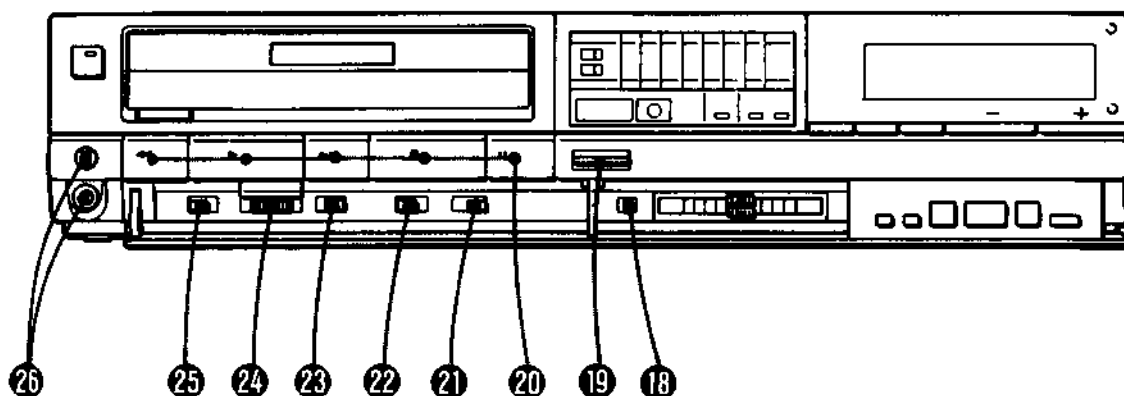

18 BILINGUAL select button

Selects the language of the bilingual TV programme.

19 RECORD button

Press to start recording.

20 Function buttons

- ◀ REW button: Press to rewind the tape. Also used for the reverse picture search, skip scan and auto play operation.
- ▶ PLAY button: Press to play the tape back. Also used for auto play operation.
- ▶▶ FF button: Press to advance the tape rapidly. Also used for the forward picture search and skip scan operation.
- STOP button: Press to stop the tape.
- ▬ PAUSE button: Press to stop the tape for a moment during recording or playback. A still picture will be seen during playback. Press again to release the pause mode.

21 INPUT SELECT switch

Select the programme to be recorded.
TUNER: for recording TV programmes.
SIMUL: for recording FM simulcast programmes or timer-activated audio recording.
LINE/PCM: for recording signals connected to the VIDEO IN and AUDIO IN jacks.

22 BETA HIFI MPX FILTER (multiplex filter) switch

Normally set to ON for Beta hi-fi recording. The multiplex filter cuts off the high-frequency signals which sometimes grate on the ear. If you wish to record without cutting the high frequencies, set to OFF.

23 BETA HIFI RECORD mode selector

VIDEO: Normally, set to this position. Sound and picture are recorded on the Beta hi-fi system.
SOUND: Set to this position to record sound only with the Beta hi-fi system.

24 TRACKING control

If streaks or snow appears during the playback of a tape recorded on another recorder, turn this knob to obtain the best possible picture.


25 BETA HIFI AUDIO OUT selector

Selects the video track or the audio track for sound playback.
AUTO: Normally, set to this position. The recorder will automatically select the video track for Beta hi-fi recorded tapes, or the audio track for tapes recorded without the Beta hi-fi system.
NORMAL: Set to this position when you wish to listen to the sound recorded on the audio track of a Beta hi-fi recorded tape.

26 Headphone jack and HEADPHONE LEVEL control

Connect headphones to the headphone jack (stereo phone jack) to monitor the sound. The HEADPHONE LEVEL control adjusts the headphone volume.

Rear

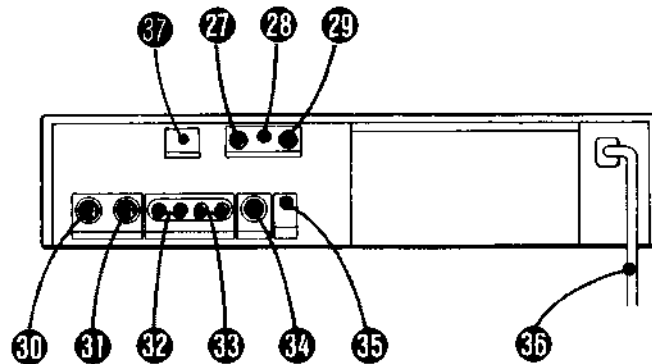

27 AERIAL OUT socket

Connect the aerial input of the TV receiver using the supplied cable.

28 DX/LOCAL switch (EC model)

Normally set this switch to DX. If the TV signal is very strong, set the switch to LOCAL.

29 RF unit selector (AS model)

Select the output channel at the AERIAL OUT socket. Set the selector to VHF 0 ch or 1 ch, whichever is not active in your area.

30 AERIAL IN socket

Connect the aerial cable.

31 VIDEO OUT jack (BNC type)

Connect to the video input of another video cassette recorder, a video monitor or a PCM digital audio processor.

32 VIDEO IN jack (BNC type)

Connect to the video output of a camera, another video cassette recorder, a PCM digital audio processor, etc.

33 AUDIO OUT jacks (phono type)

Connect to the audio inputs of a video monitor or video cassette recorder, or to the auxiliary inputs or tape inputs of a stereo amplifier.

34 AUDIO IN jacks (phono type)

Connect to the audio outputs of a camera or another video cassette recorder, or to the recording outputs of a stereo amplifier.

35 AV connector (6-pin, DIN)

Connect to the 6-pin or 8-pin DIN connector of a TV receiver or colour monitor. This connector provides the video and audio output signal.

36 TEST SIGNAL switch

Set to ON to obtain the test pattern for adjusting the TV so that it can receive the signal from the recorder.

37 AC mains lead

38 RF CHANNEL screw (EC model)

If there is interference on the factory-preset channel for RF output and the signal of this recorder cannot be displayed clearly on the TV screen, adjust this screw with the supplied screwdriver.


OPERATION

Before operating, complete the preparations on pages 19 to 22.

1.3. TV PROGRAMME RECORDING (Beta hi-fi recording)

CHECK BEFORE RECORDING


The green position is the standard setting position for Beta hi-fi recording.

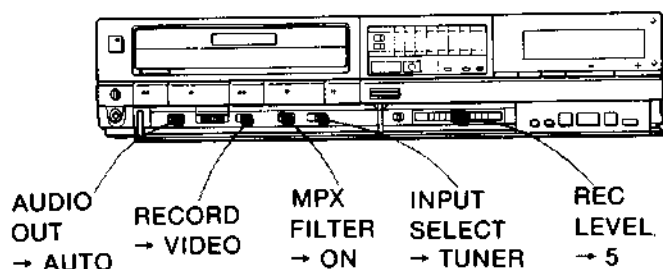

Recording will be done both on the video track (Beta hi-fi recording) and on the conventional audio track.

TO RECORD

Numbers in the illustration show the sequence of operation.

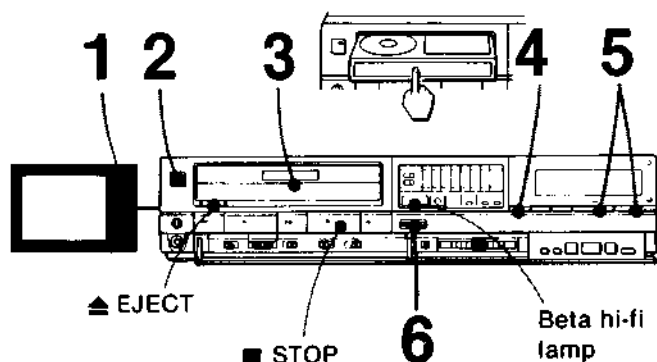

- 1 Turn on the TV and select the programme position for the recorder.
- 2 Press the ON/STANDBY switch. The indicator on the switch and the Beta hi-fi lamp will light up.
- 3 Insert the cassette with the round window to the left. The indication will appear in the display window.
 - Do not use force when inserting the cassette into the compartment.
- 4 Press the TV/VTR button so that the VTR indicator appears in the display window.
- 5 Select the programme to be recorded with the +/- PROGRAM/TIMER buttons.
 - + for higher numbered programmes, and - for lower numbered programmes.
- 6 Press the RECORD button. The indicator will appear on the display window and recording will begin.
 - If the inserted cassette does not have the safety tab, or if the tape is at its end, the cassette will be automatically ejected.

To stop recording, press the STOP button.

To eject the cassette, press the EJECT button after stopping the recording.

To view another TV programme while recording, press the TV/VTR button so that the VTR indicator goes off and select the programme you want to view with the TV's programme selector.

When the tape reaches the end during recording, it will be automatically rewound.

Note

The recorder can be automatically turned on by inserting a cassette without pressing the ON/STANDBY switch.

CAUTION

Television programmes, films, video tapes and other materials may be copyrighted. Unauthorized recording of such material may be contrary to the provision of the copyright laws.

TO STOP RECORDING MOMENTARILY

Press the PAUSE button. The indicator will appear on the display window. The TV programme can be seen on the TV, but the picture will not be recorded. To resume recording, press the PAUSE button again. To protect the video heads and the tape, the pause mode will be automatically released after about 8 minutes and recording will stop.


TO KEEP A RECORDED PROGRAMME FROM BEING ACCIDENTALLY ERASED

When a new recording is made on a previously recorded cassette, the previous recording will be automatically erased.

To avoid erasing a recording

Break off the safety tab using a screwdriver or similar object.

To re-record on a cassette which has had the safety tab removed
Cover the slot with a piece of plastic tape.

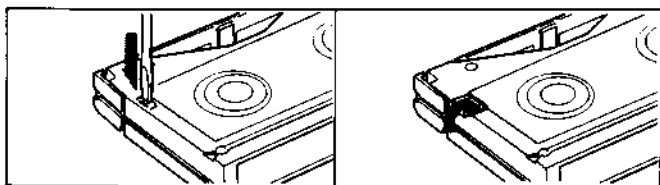


If you activate the ● RECORD button or the TIMER REC ON/OFF button with a cassette with its safety tab removed inserted, the cassette will be automatically ejected.

RECORDING A STEREO OR BILINGUAL PROGRAMME

When the STEREO A and B lamps light up, a stereo programme is being received. The recording procedure is the same as in TV programme recording.


If either the A or B lamp lights up, a bilingual programme is being received. Select the local language (usually broadcast on channel A) or the original language (usually broadcast on channel B) by pressing the BILINGUAL select button.

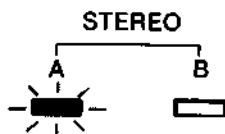

TO INDEX A RECORDED PROGRAMME USING THE TAPE COUNTER

Turn on the recorder and press the CLOCK/COUNTER button to display the counter reading in the display window.

To return the display to the present time, press the CLOCK/COUNTER button again.

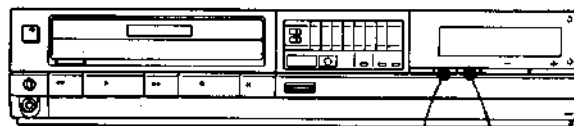

CLOCK/COUNTER CLEAR/RESET

Before starting recording or playback, press the CLEAR/RESET button to set the counter to "0000".

By noting the counter reading at the desired point, you can easily find that point later by referring to the counter.

Notes

- The counter reading is automatically reset to zero when a cassette is newly inserted.
- While the recorder is off, the display shows the present time, regardless of the CLOCK/COUNTER button setting.
- The counter reading will be retained in the memory even after the recorder is turned off, as long as the cassette is in the cassette compartment.
- The tape counter does not operate when a blank, unrecorded tape is played.


AUTOMATIC STOP

When the tape counter is displayed, rewinding stops at approximately "0000" on the tape counter. To rewind the tape further, press the ◀ REW button again.

When the current time is displayed, rewinding stops at the beginning of the tape.

1-4. PLAYBACK

Numbers in the illustration show the sequence of operation.

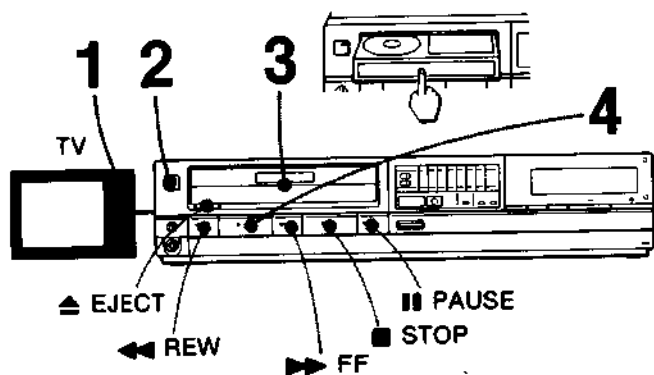

- 1 Turn on the TV and select the programme position for the recorder.
- 2 Press the ON/STANDBY switch. The indicator on the switch and the Beta hi-fi lamp will light up.
- 3 Insert the cassette with the round window to the left. The indication will appear in the display window.
- 4 Press the PLAY button. The indicator will appear in the display window and playback will begin.

To stop playback, press the STOP button.

To rewind the tape, press the REW button.

To advance the tape rapidly, press the FF button.

To eject the cassette, press the EJECT button.

When the tape reaches the end during playback, it will be automatically rewound.

To get a still picture, press the PAUSE button during playback. A still picture will be seen on the TV screen. To resume playback, press the button again. The pause mode will be automatically released after about 8 minutes and the playback will resume.

SELECTION OF PLAYBACK SOUND

Normally, set the BETA HIFI AUDIO OUT selector to AUTO. The sound recorded on the video track of Beta hi-fi recorded tapes, or the sound recorded on the conventional audio track of non-Beta hi-fi recorded tapes will automatically be played back.

If you wish to listen to the sound recorded on the conventional audio track of a Beta hi-fi recorded tape, set the selector to NORMAL. Return it to AUTO after playing back the tape.

Playback sound and Beta hi-fi lamp


The Beta hi-fi lamp lights to show that a Beta hi-fi recorded tape (not Beta hi-fi recorded sound) is being played back.

AUDIO OUT selector	Beta hi-fi recorded tape	Non Beta hi-fi recorded tape
AUTO	Sound on the video track (Beta hi-fi recorded)	Sound on the conventional audio track
NORMAL	Sound on the conventional audio track	

PICTURE SEARCH

—Viewing the picture at high speed to find a particular scene



During playback, keep the REW or FF button pressed to reverse or advance the picture at high speed. Release the button at the desired point. Normal playback will resume. The picture search mode can also be assured directly from the pause mode.

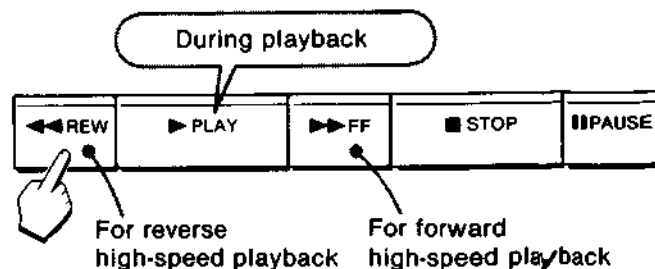

SKIP SCAN

—Viewing the picture momentarily in the fast-forward or rewind mode

During rewind mode, keep the ◀◀ REW button pressed for high-speed picture reverse. During fast forward mode, keep the ▶▶ FF button pressed for high-speed picture advance. The picture appears momentarily while either of the buttons is pressed. Release the button at the desired point. Normal rewind or fast forward mode will resume.

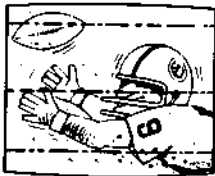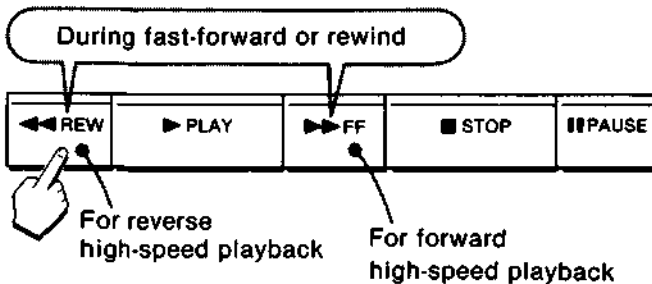

Streaks will appear during the picture search, the skip scan and the pause modes.


AUTO PLAY

—To rewind the tape and automatically play it back

Press the CLOCK/COUNTER button to display the tape counter. Press the ▶ PLAY button and ◀◀ REW button simultaneously in stop mode. After the tape is rewound to approximately "0000" on the tape counter, it will be automatically played back.


If the ▶ PLAY button and ◀◀ REW button are pressed when the current time is displayed, the tape will be played back from the beginning.

During rewinding, the ▶ and ◀◀ indicators in the display window blink alternately.

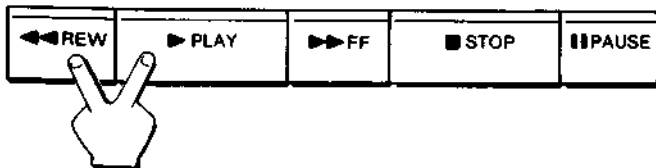

WHEN PLAYING BACK A TAPE RECORDED ON ANOTHER MACHINE

- A tape recorded on another recorder without Beta hi-fi system is played back automatically in the conventional way.
- If streaks or snow appears during playback, adjust the TRACKING control for the best possible picture. Return the control to the centre position after playing back the tape.
- If the sound of a tape recorded on another Beta hi-fi recorder is noisy or cannot be heard, adjust the TRACKING control.

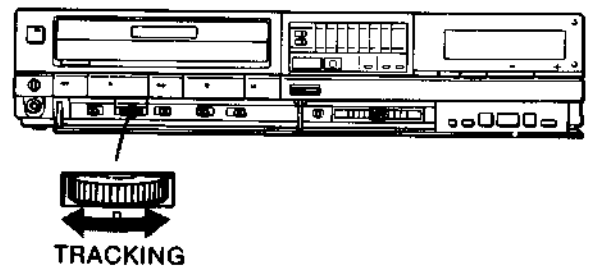

1-5. TIMER-ACTIVATED RECORDING

Using the built-in timer, you can make four recordings any day or every day, either this week, next week or the week after next.

Possible days for recording

The day you set the timer

MON	TUE	WED	THU	FRI	SAT	SUN
			1	2	3	4
5	6	7	8	9	10	11
12	13	14	15	16	17	18
19	20	21	22	23	24	25
26	27	28	29	30		

Labels: This week (points to 8), Next week (points to 15), The week after next (points to 22)


Check before setting the timer

- Is the clock set to the correct day and correct time? Timer setting can only be made after the clock has been set.
- Is a cassette inserted in the recorder?
- Is the cassette long enough to record the programmes?
- Does the cassette have a safety tab on the bottom?


Note: The timer cannot be set during recording or playback.

TO SET THE TIMER


Example: To record a PROGRAM 2 broadcast from 9:00 AM to 11:25 AM on Friday next week.

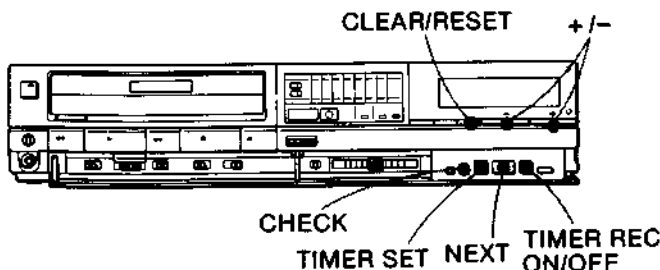


- 1 Press **TIMER SET**.
(If the recorder is off, it will be turned on automatically.)
An empty event number for which no timer setting has been made will appear.

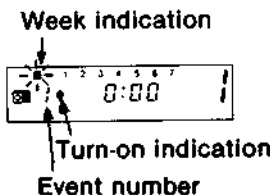


- 2 Set the week by pressing + or -.
Week indication changes:




- 3 Press **NEXT** and set the turn-on day by pressing + or -.
Day indication changes:
1234567(every day) -> 1 -> 2 -> ...7



- 4 Press **NEXT** and set the turn-on hour by pressing + or -.




- 5 Press **NEXT** and set the minute by pressing + or -.
(To set to 00 minutes, there is no need to press + or -.)



- 6 Press **NEXT** and set the turn-off hour and minute with + or - as in turn-on time setting.




- 7 Press **NEXT** and select the programme to be recorded with + or -.




To record the signals from the equipment connected to the VIDEO IN jacks, set INPUT SELECT to LINE/PCM so that "AU" indication appears.

- 8 Press **NEXT**.
The display reverts to the current time.



To set more events, press **TIMER SET** again to display the next event number. Repeat steps 2 to 8 above.

- 9 Press **TIMER REC ON/OFF**.
The **TIMER REC** indicator appears and the recorder is turned off.



At the preset turn-on time, recording will start automatically and will stop at the preset turn-off time.

Note

If the inserted cassette is at its end or does not have the safety tab, the cassette will be automatically ejected when the **TIMER REC ON/OFF** button is pressed.

ONCE THE TIMER REC INDICATOR HAS BEEN DISPLAYED, NO FUNCTION OF THE RECORDER CAN BE ACTIVATED, except for checking the timer setting.
To operate the recorder after setting the timer for recording, press the **TIMER REC ON/OFF** button so that the **TIMER REC** indicator goes off. To reactivate the timer recording standby mode, be sure to press the **TIMER REC ON/OFF** button again.

WHILE SETTING THE TIMER

To change the preset item

Press the CLEAR/RESET button and repeat the timer setting procedure from step 2.

To record to the end of the tape

Set the turn-off time to a time after the tape will reach its end.

BEFORE OR DURING TIMER RECORDING

To check the timer settings

Press the CHECK button. Each time the CHECK button is pressed, the display will change to the preset turn-on time and the turn-off time from event 1 to 4, then the current time.

During actual timer recording, only the turn-off time of that event can be checked.

To change the settings of an event

- 1 Press the TIMER REC ON/OFF button so that the TIMER REC indicator goes off.
- 2 Press the CHECK button enough times to display the event to be changed.
- 3 Press the CLEAR/RESET button.
- 4 Repeat the timer setting procedure from step 2.

To erase the timer setting of an event

- 1 Press the TIMER REC ON/OFF button so that the TIMER REC indicator goes off.
- 2 Press the CHECK button enough times to display the event to be erased.
- 3 Press the CLEAR/RESET button.
- 4 Press the TIMER SET button. The event will be erased from the memory.
- 5 If other events have been preset for recording, press the TIMER REC ON/OFF button again to reactivate.

Note: When the TIMER REC indicator is displayed, the timer setting cannot be erased.

If the tape reaches the end during timer recording

The recording will stop and the tape will be rewound to the beginning. Then after about a second, the recorder will be turned off.

To stop the on-going timer recording


Press the TIMER REC ON/OFF button so that the TIMER REC indicator goes off. The unit will be turned off automatically after about a second.

When a power interruption occurs

If the clock shows "0:00" and the dots blink, all the timer settings have been erased. Reset the clock time and the timer settings.

When two timer settings overlap

If two timer settings are preset as in the following example, the recording of the event 2 will begin after the first recording is completely finished. Consequently, the event 2 will be cut off in the beginning of its recording.

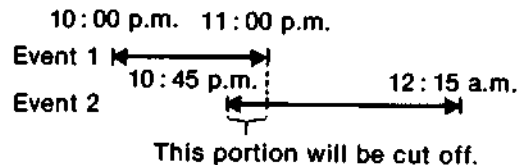

AFTER TIMER RECORDING

When a timer recording is finished, the setting (except the everyday setting) will be eliminated and the next timer settings will move up one event position each. For example, if you have preset 4 events, when the first timer recording is finished, the fourth event position will be vacant. If the TIMER SET button is pressed, "4" will appear in the window.

1-6. QUICK TIMER RECORDING

—To set the recording duration and to turn off the unit automatically

During recording, you can set the recording duration for up to 4 hours in units of 30 minutes by pressing the QUICK TIMER button. After the preset time has elapsed, recording stops and the recorder is turned off automatically.

- 1 Start recording.
- 2 Press the QUICK TIMER button to set the recording duration.
The TIMER REC indicator will appear.



Each time you press the QUICK TIMER button, the indication changes :

0 : 30 → 1 : 00 → 1 : 30 → 2 : 00 → ... 3 : 30 ... → 4 : 00

As the recording continues, the duration indication decreases minute by minute to 0:00 and the recording stops. The recorder is turned off automatically.

Note

When the TIMER REC indicator is displayed, no function of the recorder can be activated.

To extend the recording duration

The on-going recording duration can be extended simply by pressing the QUICK TIMER button. The duration will be extended in units of 30 minutes with each pressing.

Example : When 2:25 is indicated,
2:25 → 2:30 → 3:00 ...


To cancel the quick timer function

Press the TIMER REC ON/OFF button so that the TIMER REC indicator goes off. The recorder will be turned off automatically after about a second.

1-7. BETA HI-FI AUDIO RECORDING

You can record only audio signals without recording pictures.


CONNECTION TO AN AUDIO SYSTEM

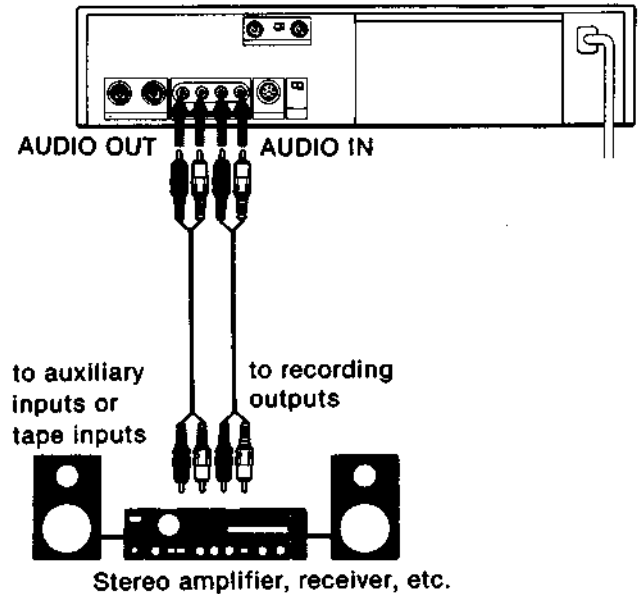

Note

When the TV aerial input socket is connected to the recorder AERIAL OUT socket, the recorded TV programme's sound may not be heard if pictures are not recorded on the tape. Listen to the sound through the equipment connected to the AUDIO OUT jacks.

TO RECORD FROM THE AUDIO SYSTEM

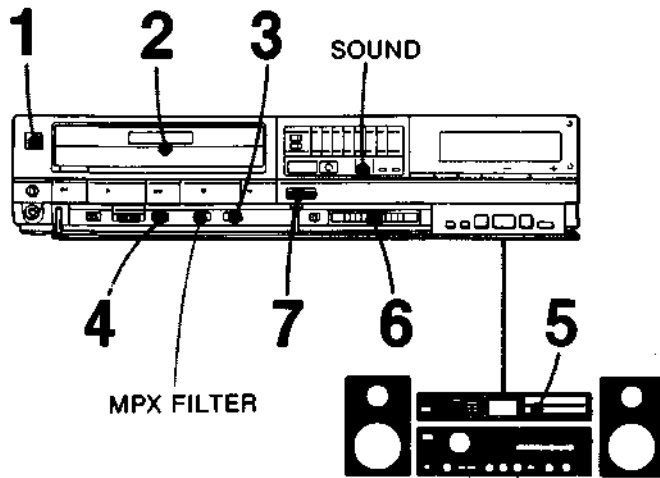

- 1 Press the ON/STANDBY switch.
- 2 Insert a cassette.
- 3 Set the INPUT SELECT switch to LINE/PCM.
- 4 Set the BETA HIFI RECORD mode selector to SOUND.
The SOUND lamp lights to show audio recording.
- 5 Turn on the power of the audio system and play the programme source to be recorded.
- 6 Adjust the recording level with the REC LEVEL controls.
(See "RECORDING LEVEL ADJUSTMENT".)
- 7 Press the ● RECORD button. Recording will begin.

BETA HIFI MPX FILTER (multiplex) switch

When recording from an FM tuner, set this switch to ON to cut off the high-frequency signals which sometimes grate on the ear. To record without cutting the high frequencies, set this switch to OFF.


RECORDING LEVEL ADJUSTMENT

When recording on the Beta hi-fi system, the recording level of the left and right channels can be adjusted with the REC LEVEL controls.



In most cases, when you record TV programme sound, the proper recording level is obtained by setting the REC LEVEL controls at 5 (green position).

When you record a sound source with a wide dynamic range, manually adjusting the recording level may result in a better recording.

If the recording level setting is too high, the sound will be distorted, and if the setting is too low, a noisy recording will result. The recording level should be set as high as possible while avoiding distortion.

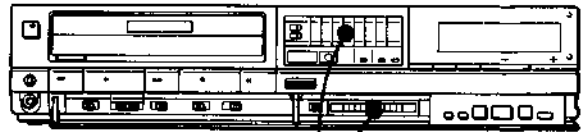


Adjust so that the meters deflect to the red portion only at the highest signal level.

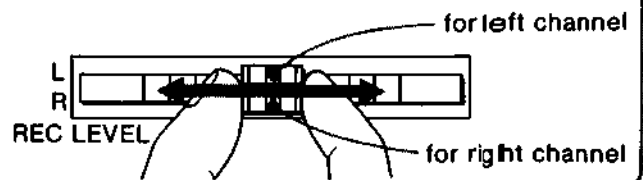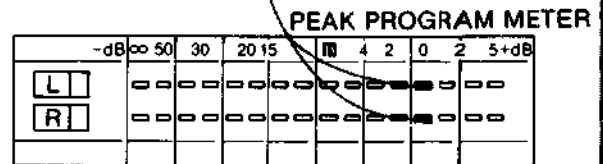

TIMER-ACTIVATED AUDIO RECORDING

Use an optional programme timer for turning on/off the audio system.

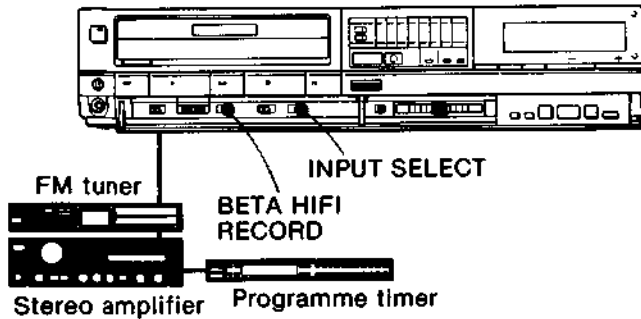


- 1 Make sure that the clock built into the recorder and the programme timer clock are set to the correct day and time.
- 2 Set the INPUT SELECT switch of the recorder to SIMUL.
- 3 Set the BETA HIFI RECORD mode selector to SOUND.
- 4 Preset the turn-on day and time, and the turn-off time in both timers.
For presetting the recorder timer, see page 12.

At the preset turn-on time, audio recording will start automatically and will stop at the preset turn-off time.

FM SIMULCAST RECORDING

By connecting an FM tuner to the AUDIO IN jacks when a TV aerial is connected, you can record the FM simulcast TV programmes (stereo sound transmitted from an FM radio station) while recording the TV programme pictures (video signals) from the TV aerial inputs.

Connection

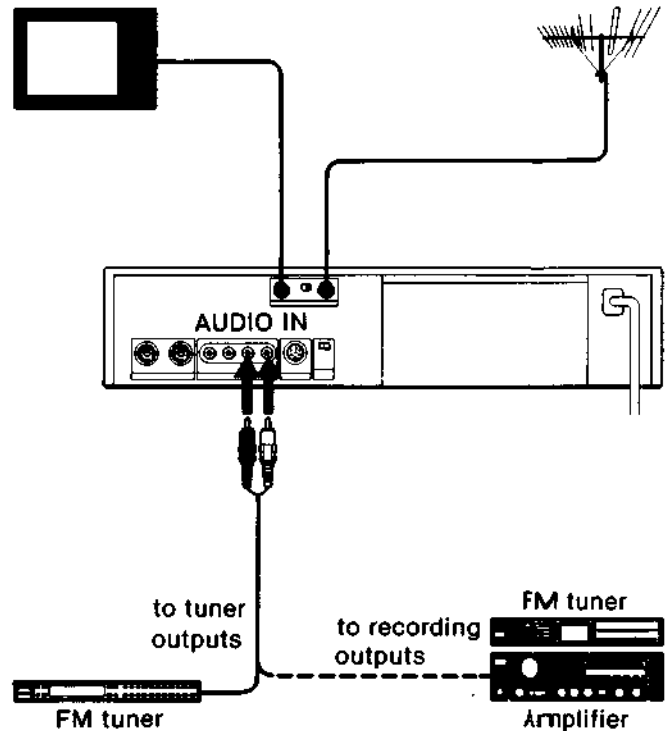

Recording

- 1 Tune in the station you wish on the recorder and the FM tuner.
- 2 Set the INPUT SELECT switch on the recorder to SIMUL.
- 3 Start recording.

Note

Be sure to return the INPUT SELECT switch to TUNER after recording FM simulcast TV programmes. When the switch is set to SIMUL, the sound of TV programmes cannot be recorded.

PREPARATION


1-8. ADJUSTING THE TV (EC MODEL)

One of the television programme positions must be adjusted to receive the signal from the recorder.

Note that the adjustment is not necessary, however, when the recorder is connected to the video/audio inputs on the TV receiver/monitor.

- 1 After making the connections, press the ON/STANDBY switch.
- 2 Make sure that the recorder is in the stop mode.
- 3 Set the TEST SIGNAL switch located at the rear of the recorder to ON. The test signal is transmitted on a channel between UHF channels E30 and E39.
- 4 Turn on the TV and select a programme position which is not being used to receive a TV station. Tune the channel until you see a clear black and white pattern on the TV screen and you hear a continuous tone. This is the recorder's test signal.

If you are not sure how to adjust your TV, please refer to the TV's instruction manual or consult your dealer.

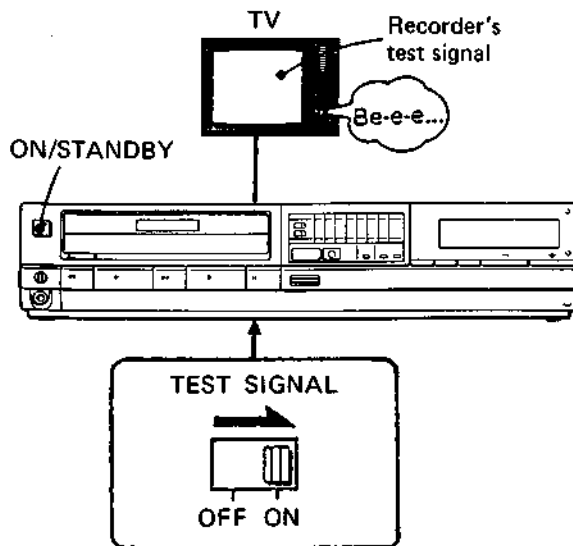


Whenever you use the video recorder, you should set the TV to the programme position selected in this adjustment.

If the test picture is free of disturbance, the TV adjustment is complete. Set the TEST SIGNAL switch of OFF.

If the test picture is not free of disturbance


- 1 Reset the TEST SIGNAL switch to OFF.
- 2 Adjust the channel of the TV to a channel between UHF channels E30 and E39 with the tuning control or the fine tuning control on the TV, so that the TV screen shows no picture and so that a steady rustling sound or no sound is heard.
- 3 Set the TEST SIGNAL switch to ON again.
- 4 Slowly turn the RF CHANNEL screw on the back of the recorder with the supplied screwdriver, until you see an undistorted test pattern on the TV screen.
- 5 Now the TV adjustment is complete. Reset the TEST SIGNAL switch of OFF.

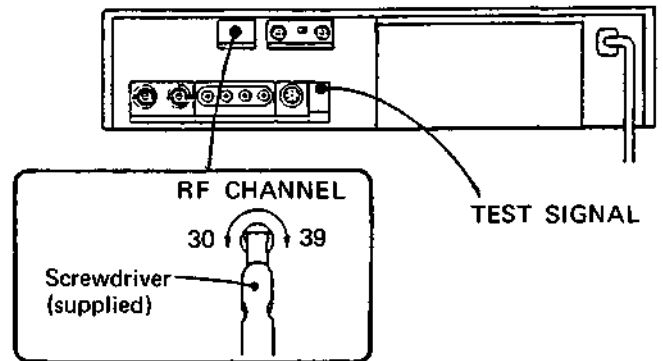

1-9. ADJUSTING THE TV (AS MODEL)

One of the television programme positions must be adjusted to receive the signal from the recorder.

Note that the adjustment is not necessary, however, when the recorder is connected to the video/audio inputs on the TV receiver/monitor.

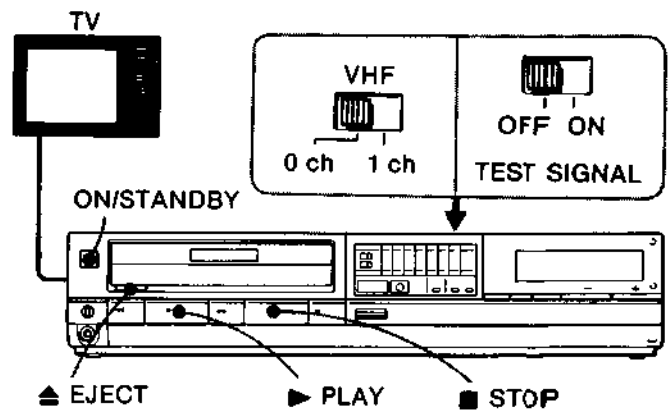

Using the supplied demonstration video cassette

- 1 Set the RF unit selector located at the rear of the recorder to VHF 0 ch or 1 ch, whichever channel is not active in your area.
- 2 Press the ON/STANDBY switch.
- 3 Insert the supplied demonstration video cassette with the round window to the left.
- 4 Press the ► PLAY button.
- 5 Turn on the TV.
- 6 Set the TV to either VHF channel 0 or 1 to agree with the setting of the RF unit selector. The tape programme will be displayed on the TV screen. If the display is not clear, fine-tune the channel on the TV.

After adjustment, check that the display on the screen changes when you stop the tape by pressing the ■ STOP button on the recorder. If the programme does not change, repeat the preceding steps. (To eject the cassette, press the ▲ EJECT button.)

Using the test signal

- 1 Set the RF unit selector located at the rear of the recorder to VHF 0 ch 1 ch, whichever channel is not active in your area.

- 2 Press the ON/STANDBY switch.
- 3 Make sure that the recorder is in the stop mode.
- 4 Set the TEST SIGNAL switch located at the rear of the recorder to ON. The test signal is transmitted on the VHF channel 0 or 1 to agree with the setting of the RF unit selector.
- 5 Turn on the TV and select a programme position which is not being used to receive a TV station. Using automatic tuning, tune the channel until you see a clear black and white pattern on the TV screen and you hear a continuous tone. This is the recorder's test signal.
- 6 Set the TEST SIGNAL switch to OFF.

● If you are not sure how to adjust your TV, please refer to the TV's instruction manual or consult your dealer.


Whenever you use this recorder, you should set the TV to the programme position selected in this adjustment.

1-10. TV STATION PROGRAMMING

Automatic and manual programming are available. Automatic programming automatically presets receivable stations from the lowest frequency to the highest. Manual programming is useful for presetting selected stations in any desired sequence.

Before programming

- Turn on the recorder by pressing the ON/STANDBY switch.
- Press the TV/VTR button so that the VTR indicator appears in the display window.
- Set the INPUT SELECT switch to TUNER.

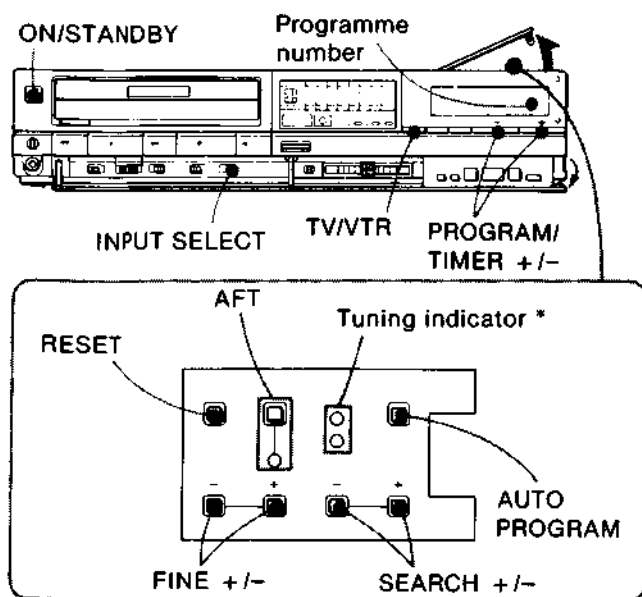

AUTOMATIC PROGRAMMING

Press the AUTO PROGRAM button. Up to 30 receivable stations will be preset one by one from programme position 1. When no more stations can be located, programme number "1" will light on the programme indicator and automatic programming will stop.

MANUAL PROGRAMMING

- 1 Press the + or - PROGRAM/TIMER button to select the programme position.
 - + for a higher-numbered programme position
 - for a lower-numbered programme position
- 2 Press the + SEARCH button to locate a station with higher frequency and the - SEARCH button to locate a station with lower frequency. When a station has been received, the search will stop. Press the + or - SEARCH button again, until the desired station is received.

Repeat these steps for all desired stations.

FINE TUNING OF A WEAK STATION

If the picture on a particular programme position is not acceptable, keep the + or - FINE button pressed until the picture becomes clearer. When either of the FINE buttons is pressed, the AFT of the selected station is deactivated and the AFT lamp goes off. To view this particular station, keep the AFT deactivated. (Do not press the AFT button.)

When other memorized stations are selected, the AFT automatically activates.

ELIMINATING NOISE ON UNUSED PROGRAMME POSITIONS

Simply press the RESET button. The annoying noise will be eliminated.

*Tuning indicator (EC model)

The tuning indicator lights to show the current tuning band.

V: E2 - E4, E5 - E12 and Cable TV S1 - S3, M1 - M10 and U11 - U20 channels.

U: E21 - E68 channels

Note: Cable TV channels are receivable on the SL-HF150ES only.

*Tuning indicator (AS model)

The tuning indicator lights to show the current tuning band.

V: 0 - 11 channels

U: 28 - 34 and 39 - 63 channels

1-11. CLOCK SETTING

When you connect the mains lead to a mains outlet, the clock indicates "0:00" with the two dots blinking.

Example: To set the clock to 7:35 p.m. (19:35) on Tuesday


Time indication

AM			
12:00 (midnight)	1:00		11:00
↓	↓	↓
0:00	1:00	11:00

PM					
12:00 (noon)	1:00	2:00		10:00	11:00
↓	↓	↓		↓	↓
12:00	13:00	14:00	22:00	23:00


Day indication

MON (Monday)	TUE (Tuesday)	WED (Wednesday)	THU (Thursday)	FRI (Friday)	SAT (Saturday)	SUN (Sunday)
↓	↓	↓	↓	↓	↓	↓
1	2	3	4	5	6	7

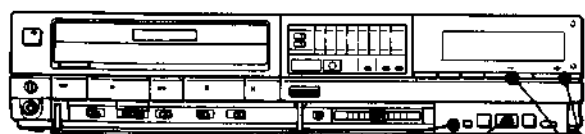


CLOCK SET
NEXT
+/- buttons
+ : to advance
- : to reverse


- 1 Press CLOCK SET.




- 2 Set the day by pressing + or -.




- 3 Press NEXT and set the hour by pressing + or -.



- 4 Press NEXT and set the minute by pressing + or -.



- 5 With an announced time signal, press NEXT. The clock now starts operating, showing the correct time.



NEXT button

Each time the NEXT button is pressed, the item to be set blinks to let you know the setting order.

+/- buttons

The + and - PROGRAM/TIMER buttons can be pressed in two ways.

When you hold a button down, the digits will advance continuously until the button is released.

When you press and immediately release a button, the digits will advance by one.



To change the actual clock setting

Press the CLOCK SET button and repeat the clock setting procedure from step 1.

Note

If you have pressed the CLOCK SET button inadvertently, press the NEXT button enough times until the dots of the colon blink.

When power has been interrupted, the time indication "0:00" blinks, showing that the clock must be reset.


SECTION 2 DISASSEMBLY

2-1. DISASSEMBLY OF CABINET

- 1) Remove the four case set screws ①.
- 2) Remove the upper case ② in the direction shown by the arrow A.
- 3) Remove the eight screws (BVTP3 x 8) ③.
- 4) Remove the lower case ④ in the direction shown by the arrow B.
- 5) Remove the three screws (BVTP3 x 8) ⑤.
- 6) Remove the four claws ⑥ in the direction shown by the arrow C, then remove the front panel ⑦ in the direction shown by the arrow D.
- 7) Remove the spring ⑧.
- 8) Remove the three claws ⑨ in the direction shown by the arrow E, then remove the front door assembly ⑩.


Note:

Follow the disassembly procedure in the numerical order given.

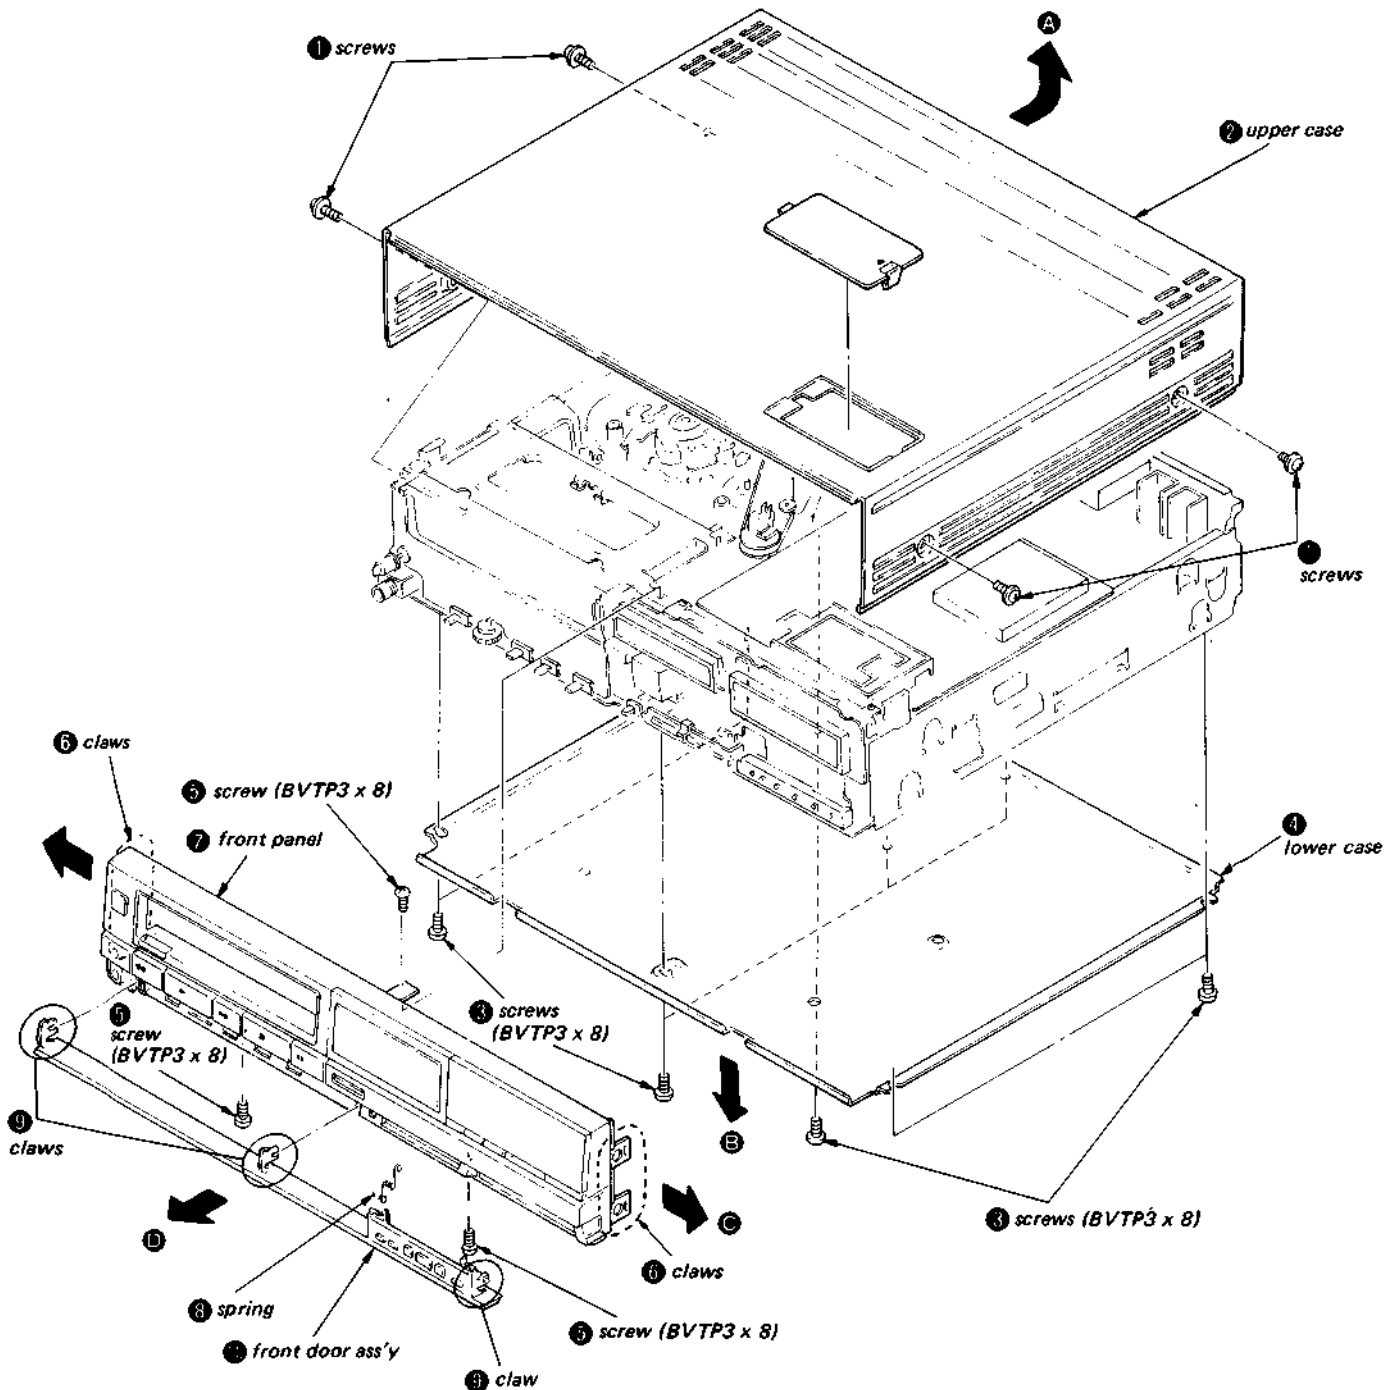


2-2. REMOVAL OF THE TU-73 BOARD

- 1) Remove the three screws (BVTP3 x 8) ❶.
- 2) Remove the TU-73 board ❷ in the direction shown by the arrow.

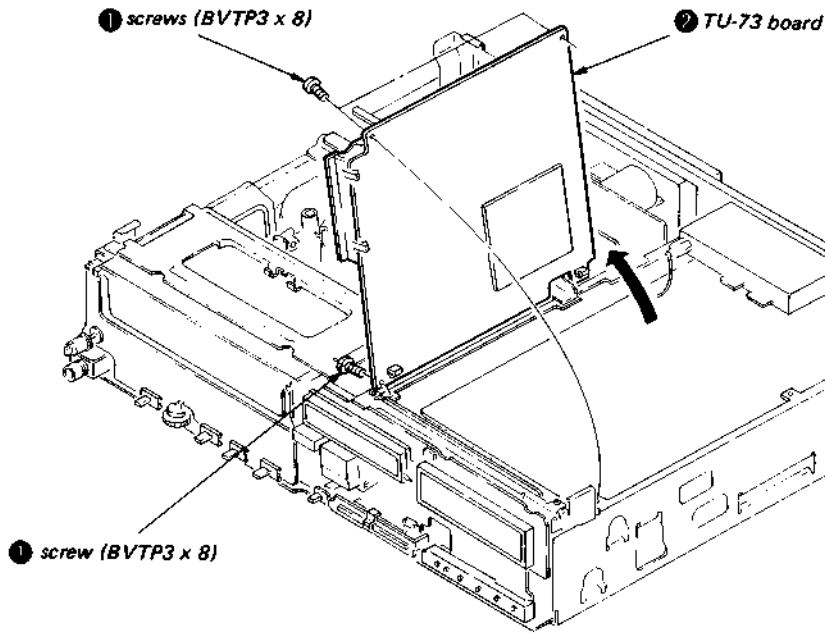


2-3. REMOVAL OF THE SA-9 BOARD

- 1) Remove the TU-73 board.
(Refer to section 2-2 REMOVAL OF THE TU-73 BOARD.)
- 2) Remove the four screws (BVTP3 x 8) ❶.
- 3) Remove the SA-9 board ❷ in the direction shown by the arrow.

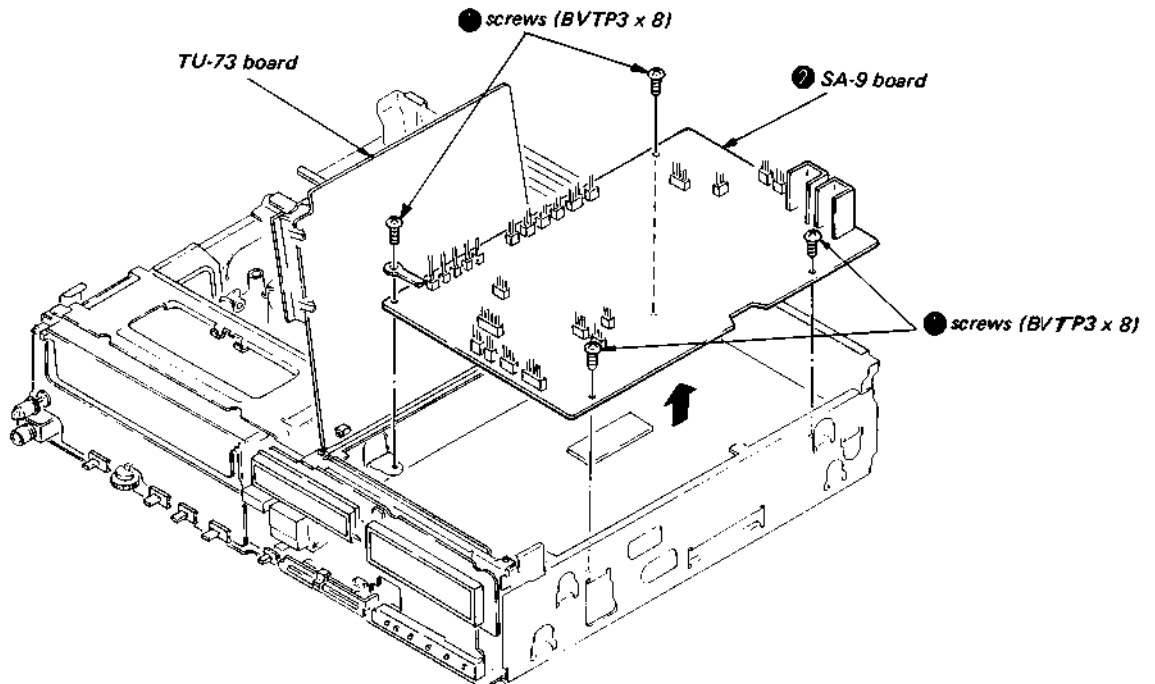


2-4. REMOVAL OF THE RY-4 BOARD

- 1) Stand the set with the left side panel on the bottom.
- 2) Remove the two screws (BVTP3 x 8) ●.
- 3) Remove the RY-4 board ② in the direction shown by the arrow and rest it on a cassette.

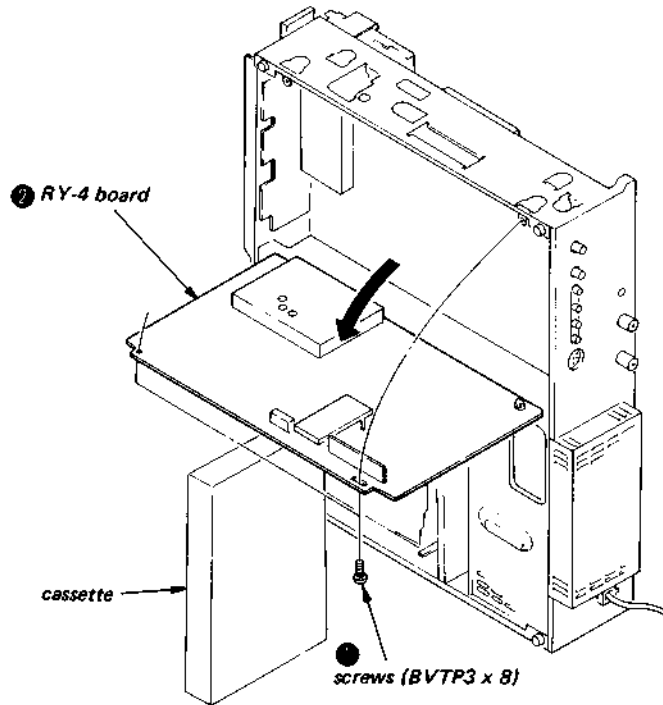


2-5. REMOVAL OF THE AF-7 BOARD

- 1) Remove the RY-4 board.
(Refer to section 2-4 REMOVAL OF THE RY-4 BOARD.)
- 2) Remove the four screws (BVTP3 x 8) ①.
- 3) Remove the AF-7 board ② in the direction shown by the arrow.

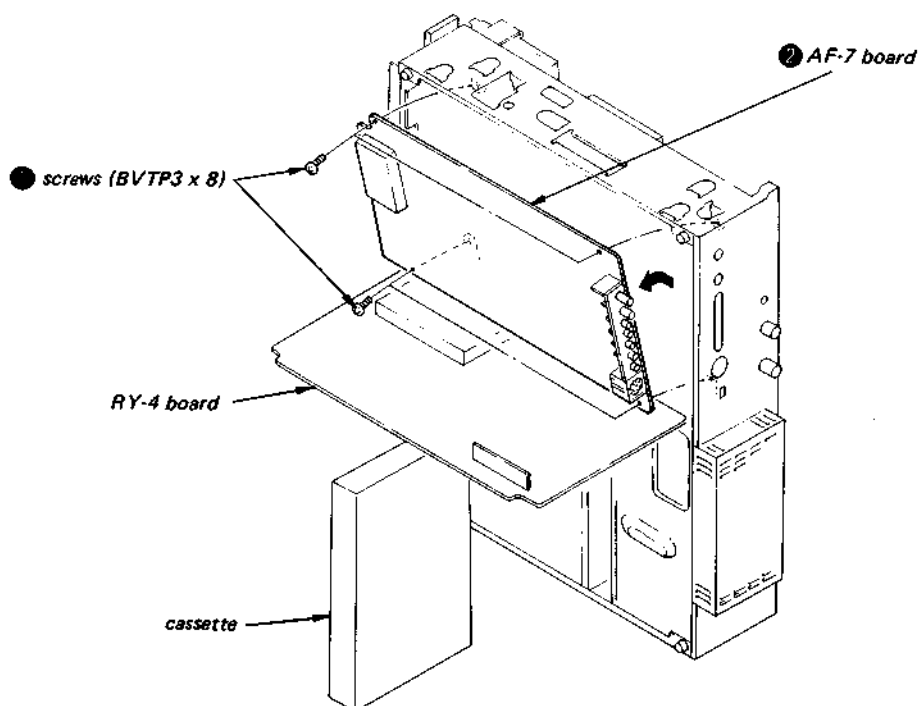


2-6. REMOVAL OF THE TIMER BLOCK

- 1) Pull out the connector ①.
- 2) Remove the screws (BVTP3 x 8) ②, ③.
- 3) Remove the TM-79 board ④.
- 4) Remove the two screws (BVTP3 x 8) ⑤.
- 5) Remove the TM-80 board ⑥.
- 6) Remove the three claws ⑦ and then remove the RS-12 board ⑧.

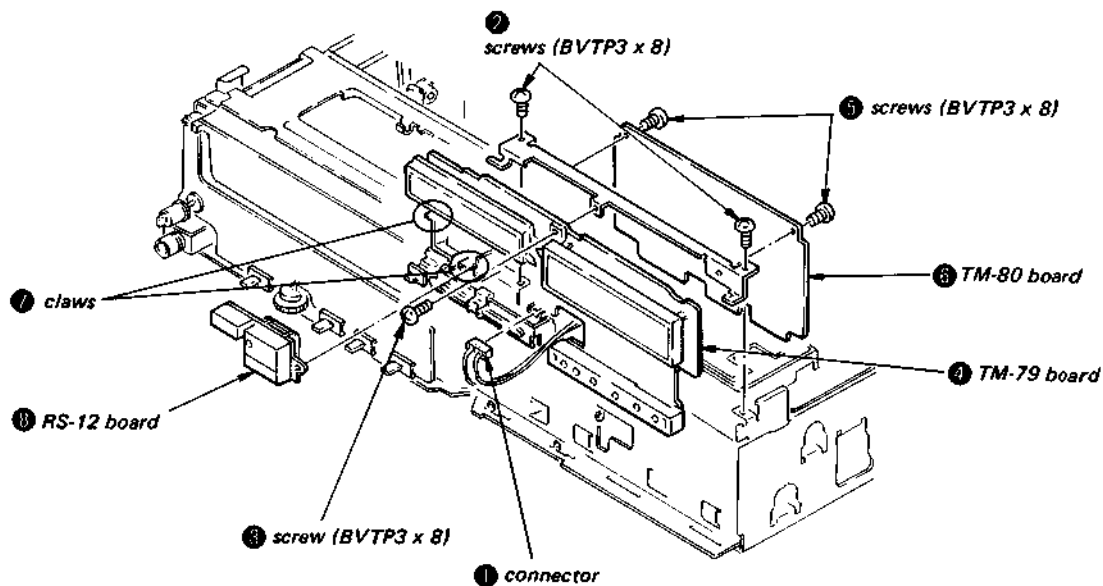


2-7. REMOVAL OF THE FU-37 AND HP-14 BOARDS

- 1) Remove the screw (BVTP3 x 8) ①.
- 2) Remove the clamp ②.
- 3) Remove the HP-14 board ③.
- 4) Remove the screw (BVTP3 x 8) ④.
- 5) Remove the FU-37 board ⑤.

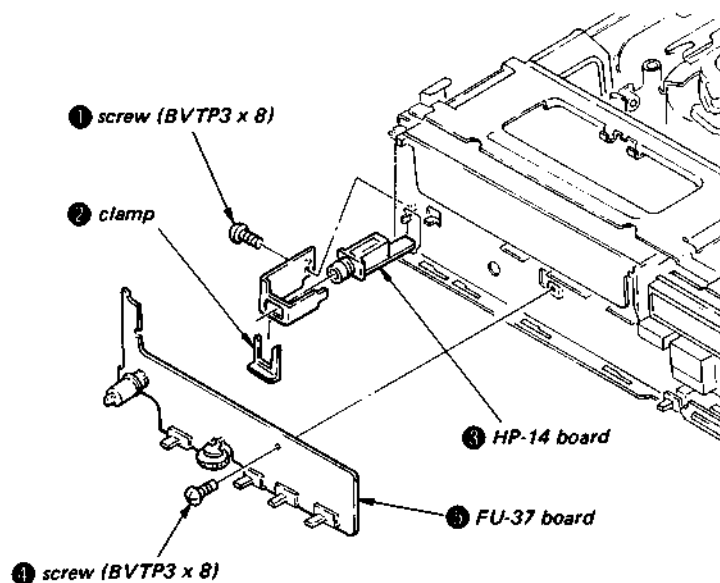


2-8. REMOVAL OF THE POWER BLOCK

- 1) Pull out the six connectors ①.
- 2) Remove the two screws (BVTP3 x 8) ②.
- 3) Remove the power block ③ in the direction shown by the arrow.

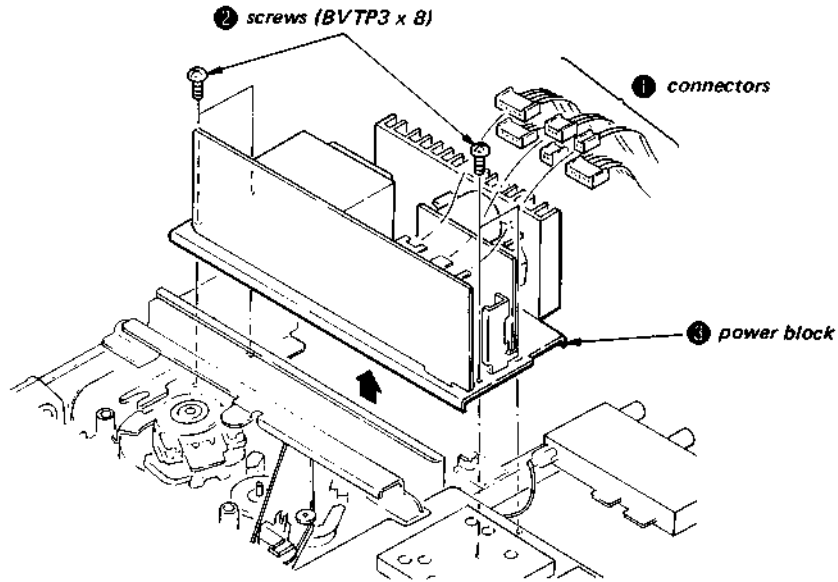


2-9. REMOVAL OF THE RF MODULATOR

- 1) Pull out the pin plug ① and the two connectors ②.
- 2) Remove the two screws (BVTP3 x 8) ③ and the two screws (PS2.5 x 5) ④.
- 3) Remove the RF modulator ⑤.

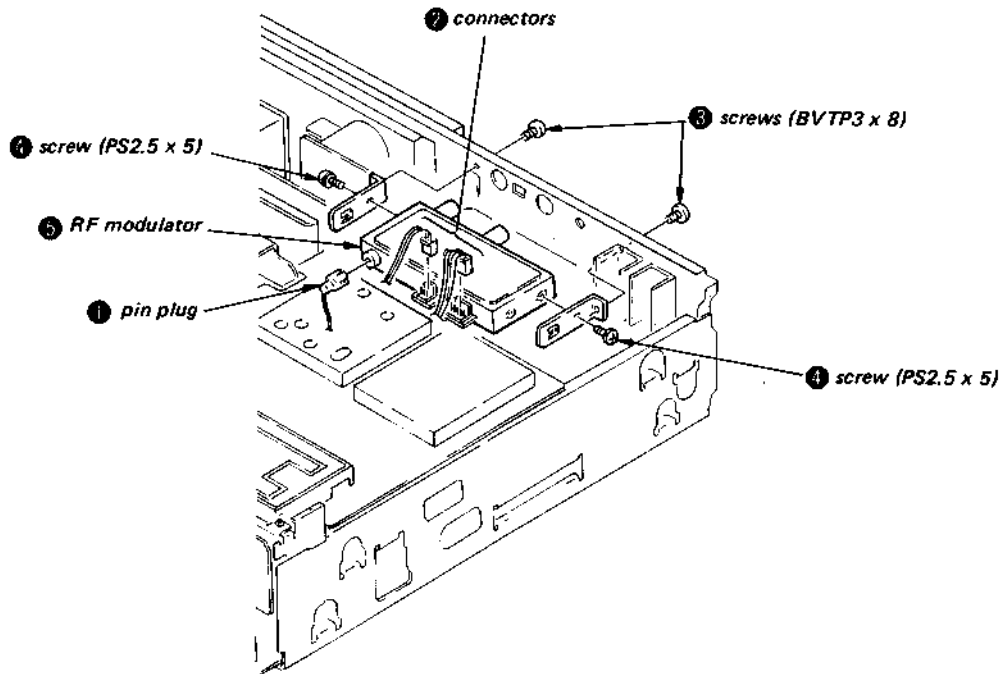


2-10. REMOVAL OF THE FL CASSETTE COMPARTMENT ASSEMBLY

- 1) Remove the TU-73 board.
(Refer to section 2-2 REMOVAL OF THE TU-73 BOARD.)
- 2) Remove the drum cover ●.
- 3) Pull out the connector ② from the SA-9 board.
- 4) Remove the four screws (BVTP3 x 8) ③.
- 5) Remove the internal gear flange ④.
- 6) Remove the loading belt ⑤.
- 7) Remove the FL cassette compartment assembly ⑥ in the direction shown by the arrow.

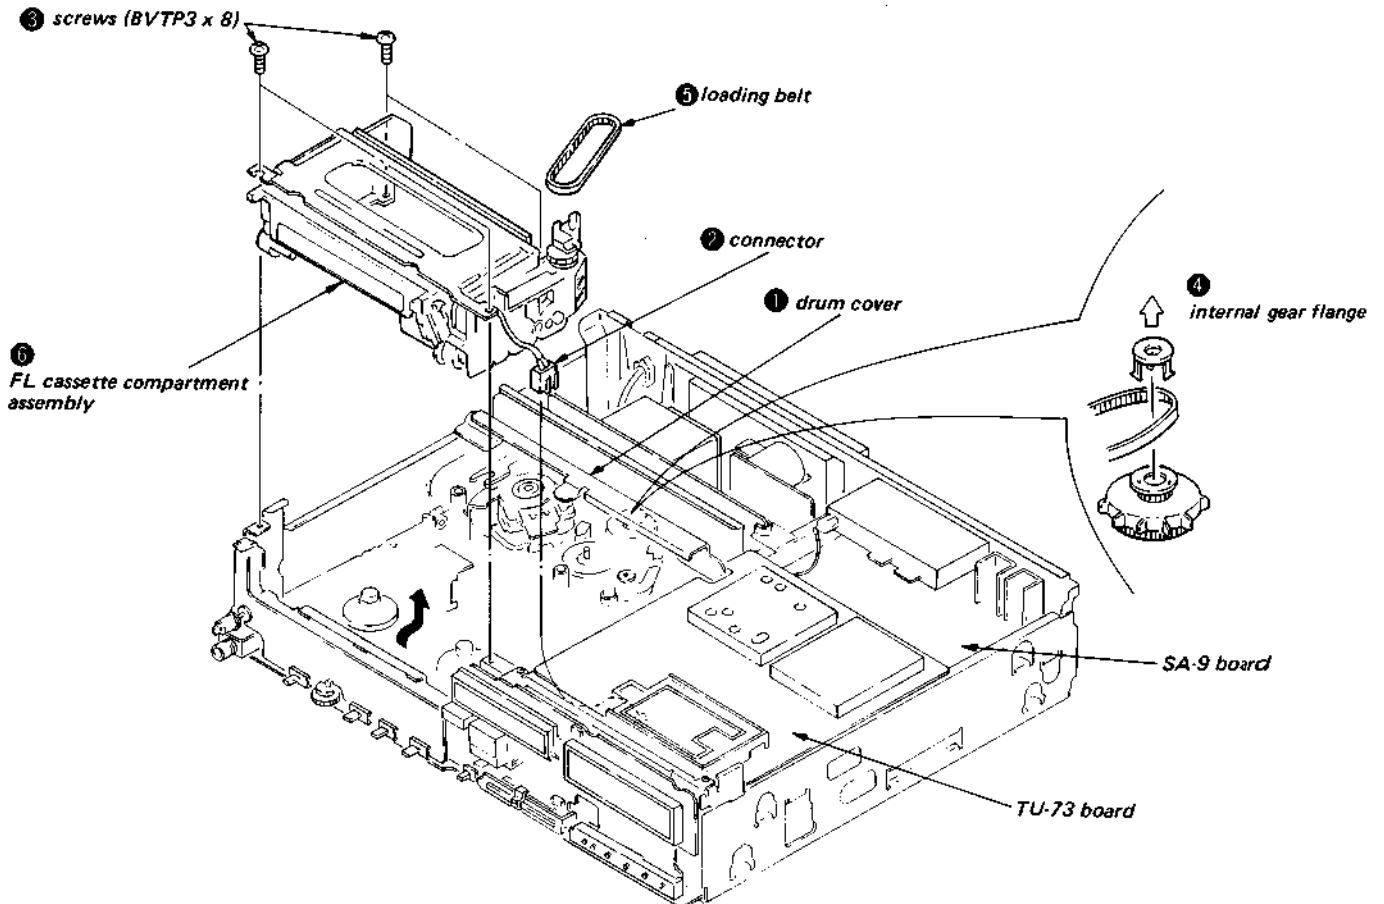


2-11. REMOVAL OF THE REEL BLOCK ASSEMBLY

- 1) Place the set upside down.
- 2) Remove the four screws (BVTP3 x 8) ●.
- 3) Remove the reel block assembly ② in the direction shown by the arrow.

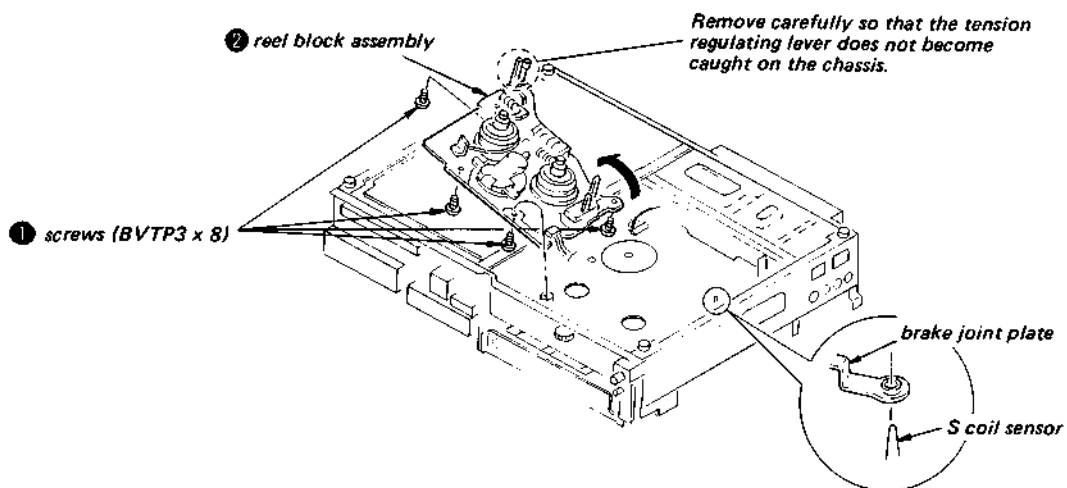


2-12. INTERNAL VIEWS

— Top Side —

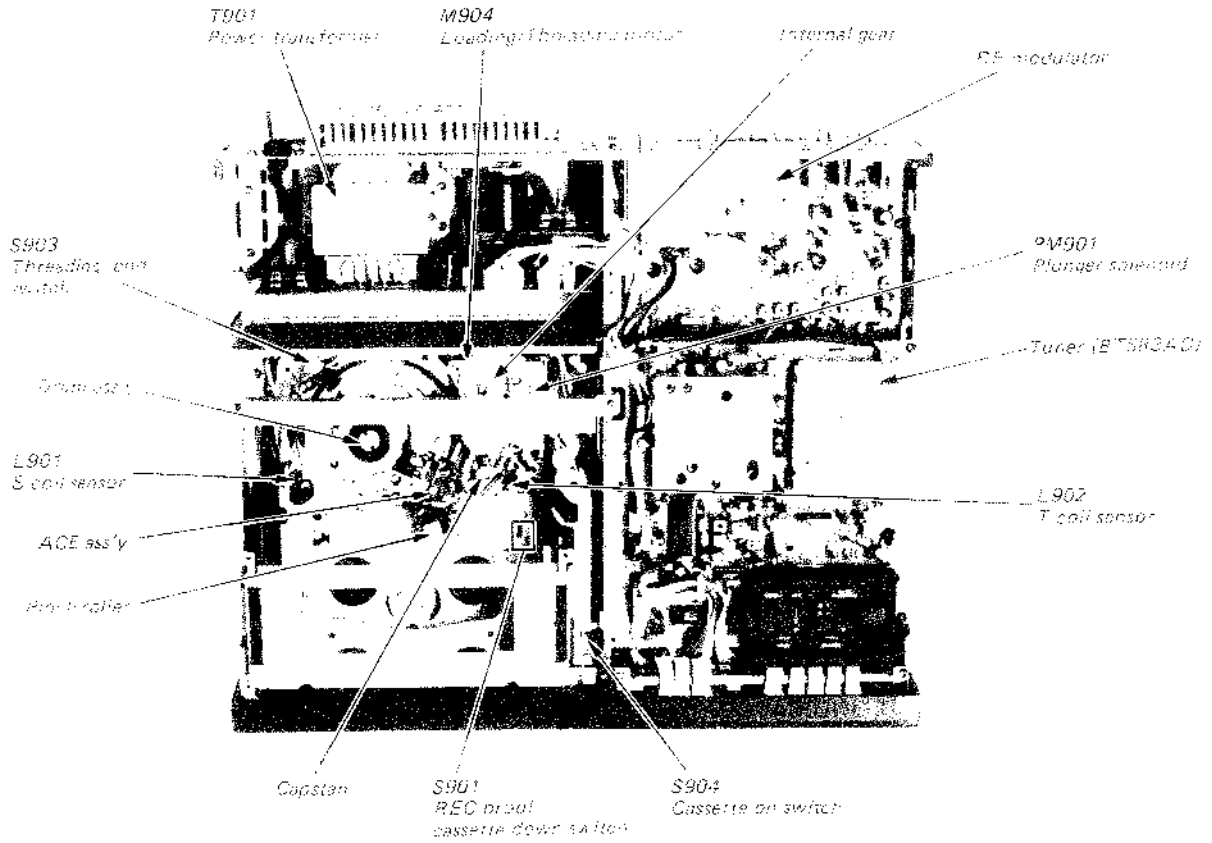


— Bottom Side —

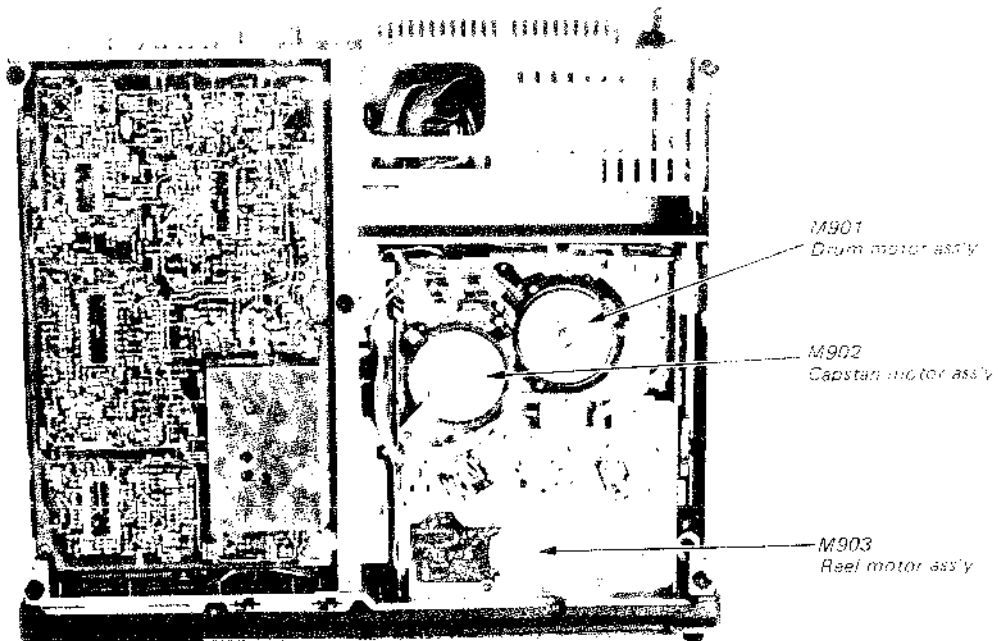



SECTION 3 DIAGRAMS

3-1. CIRCUIT BOARDS LOCATION

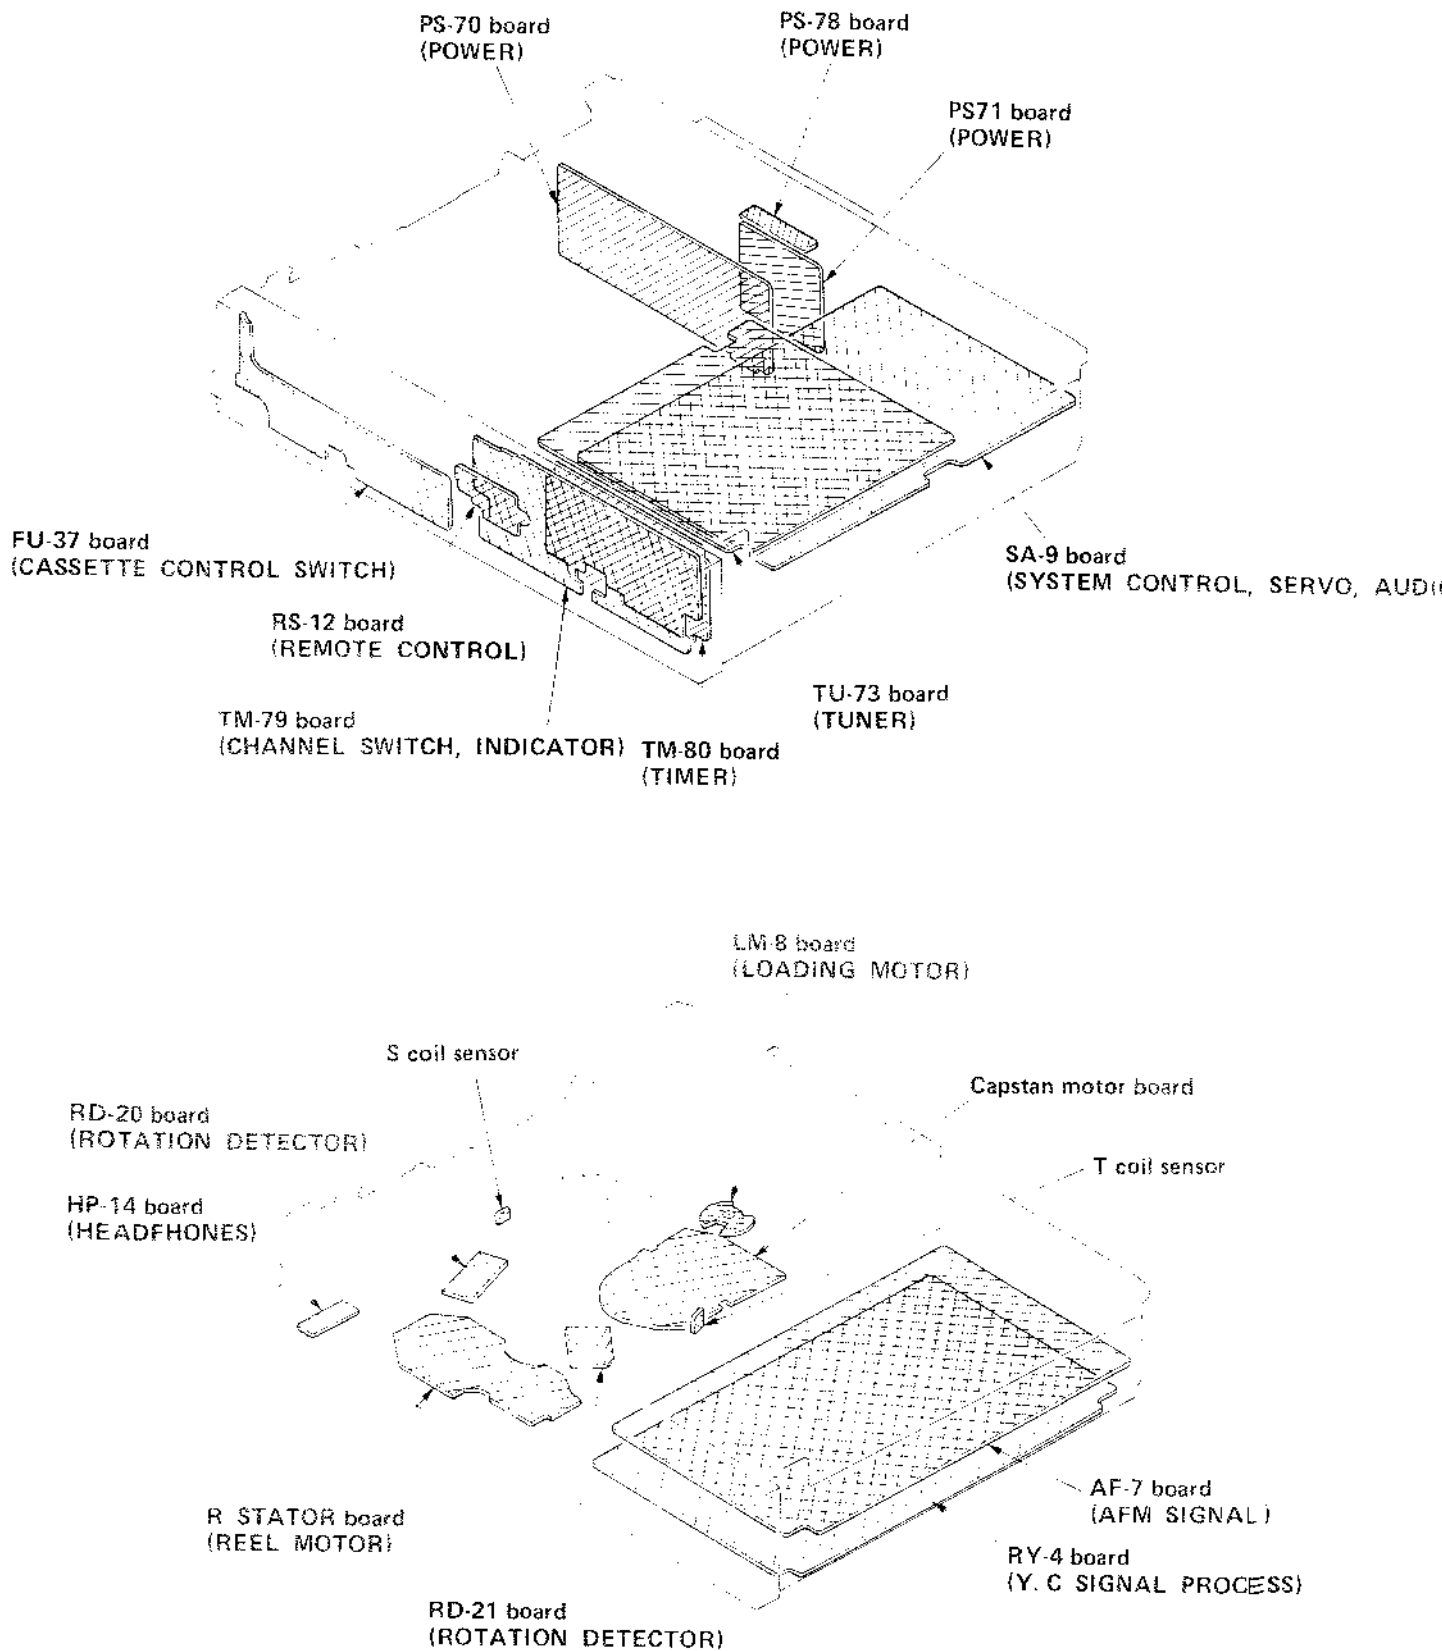


3-2. OVERALL BLOCK DIAGRAM

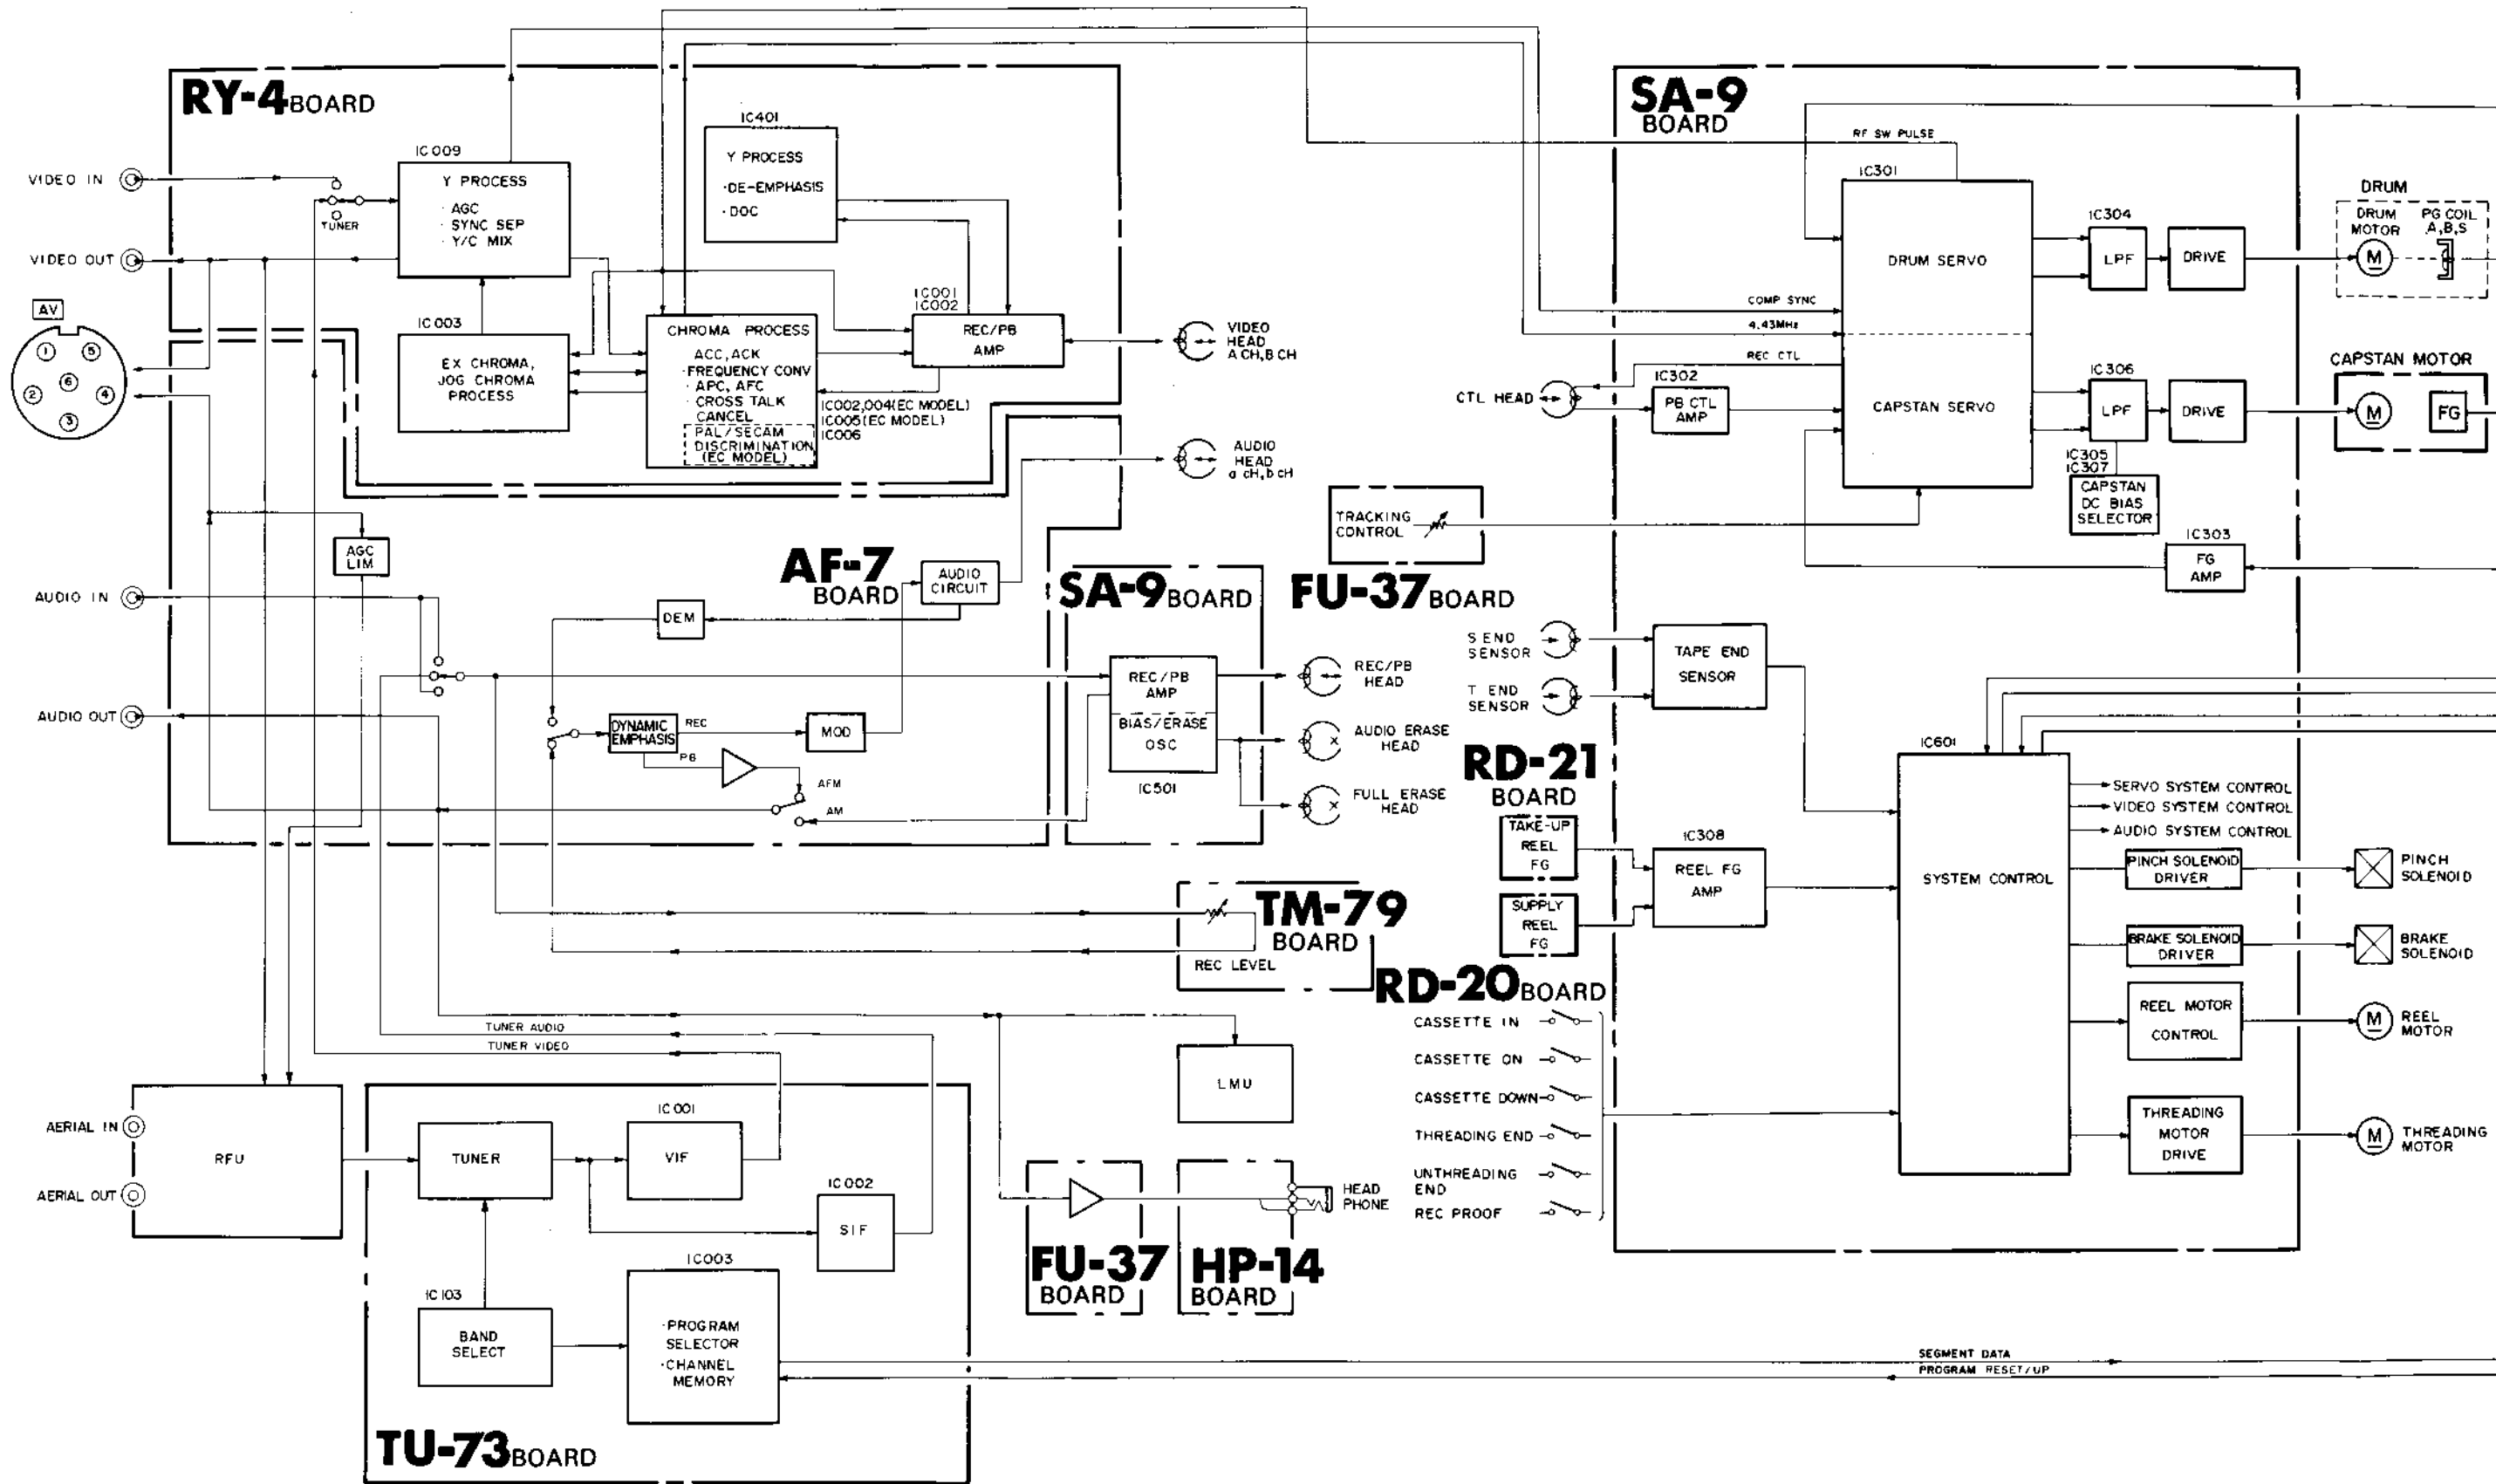


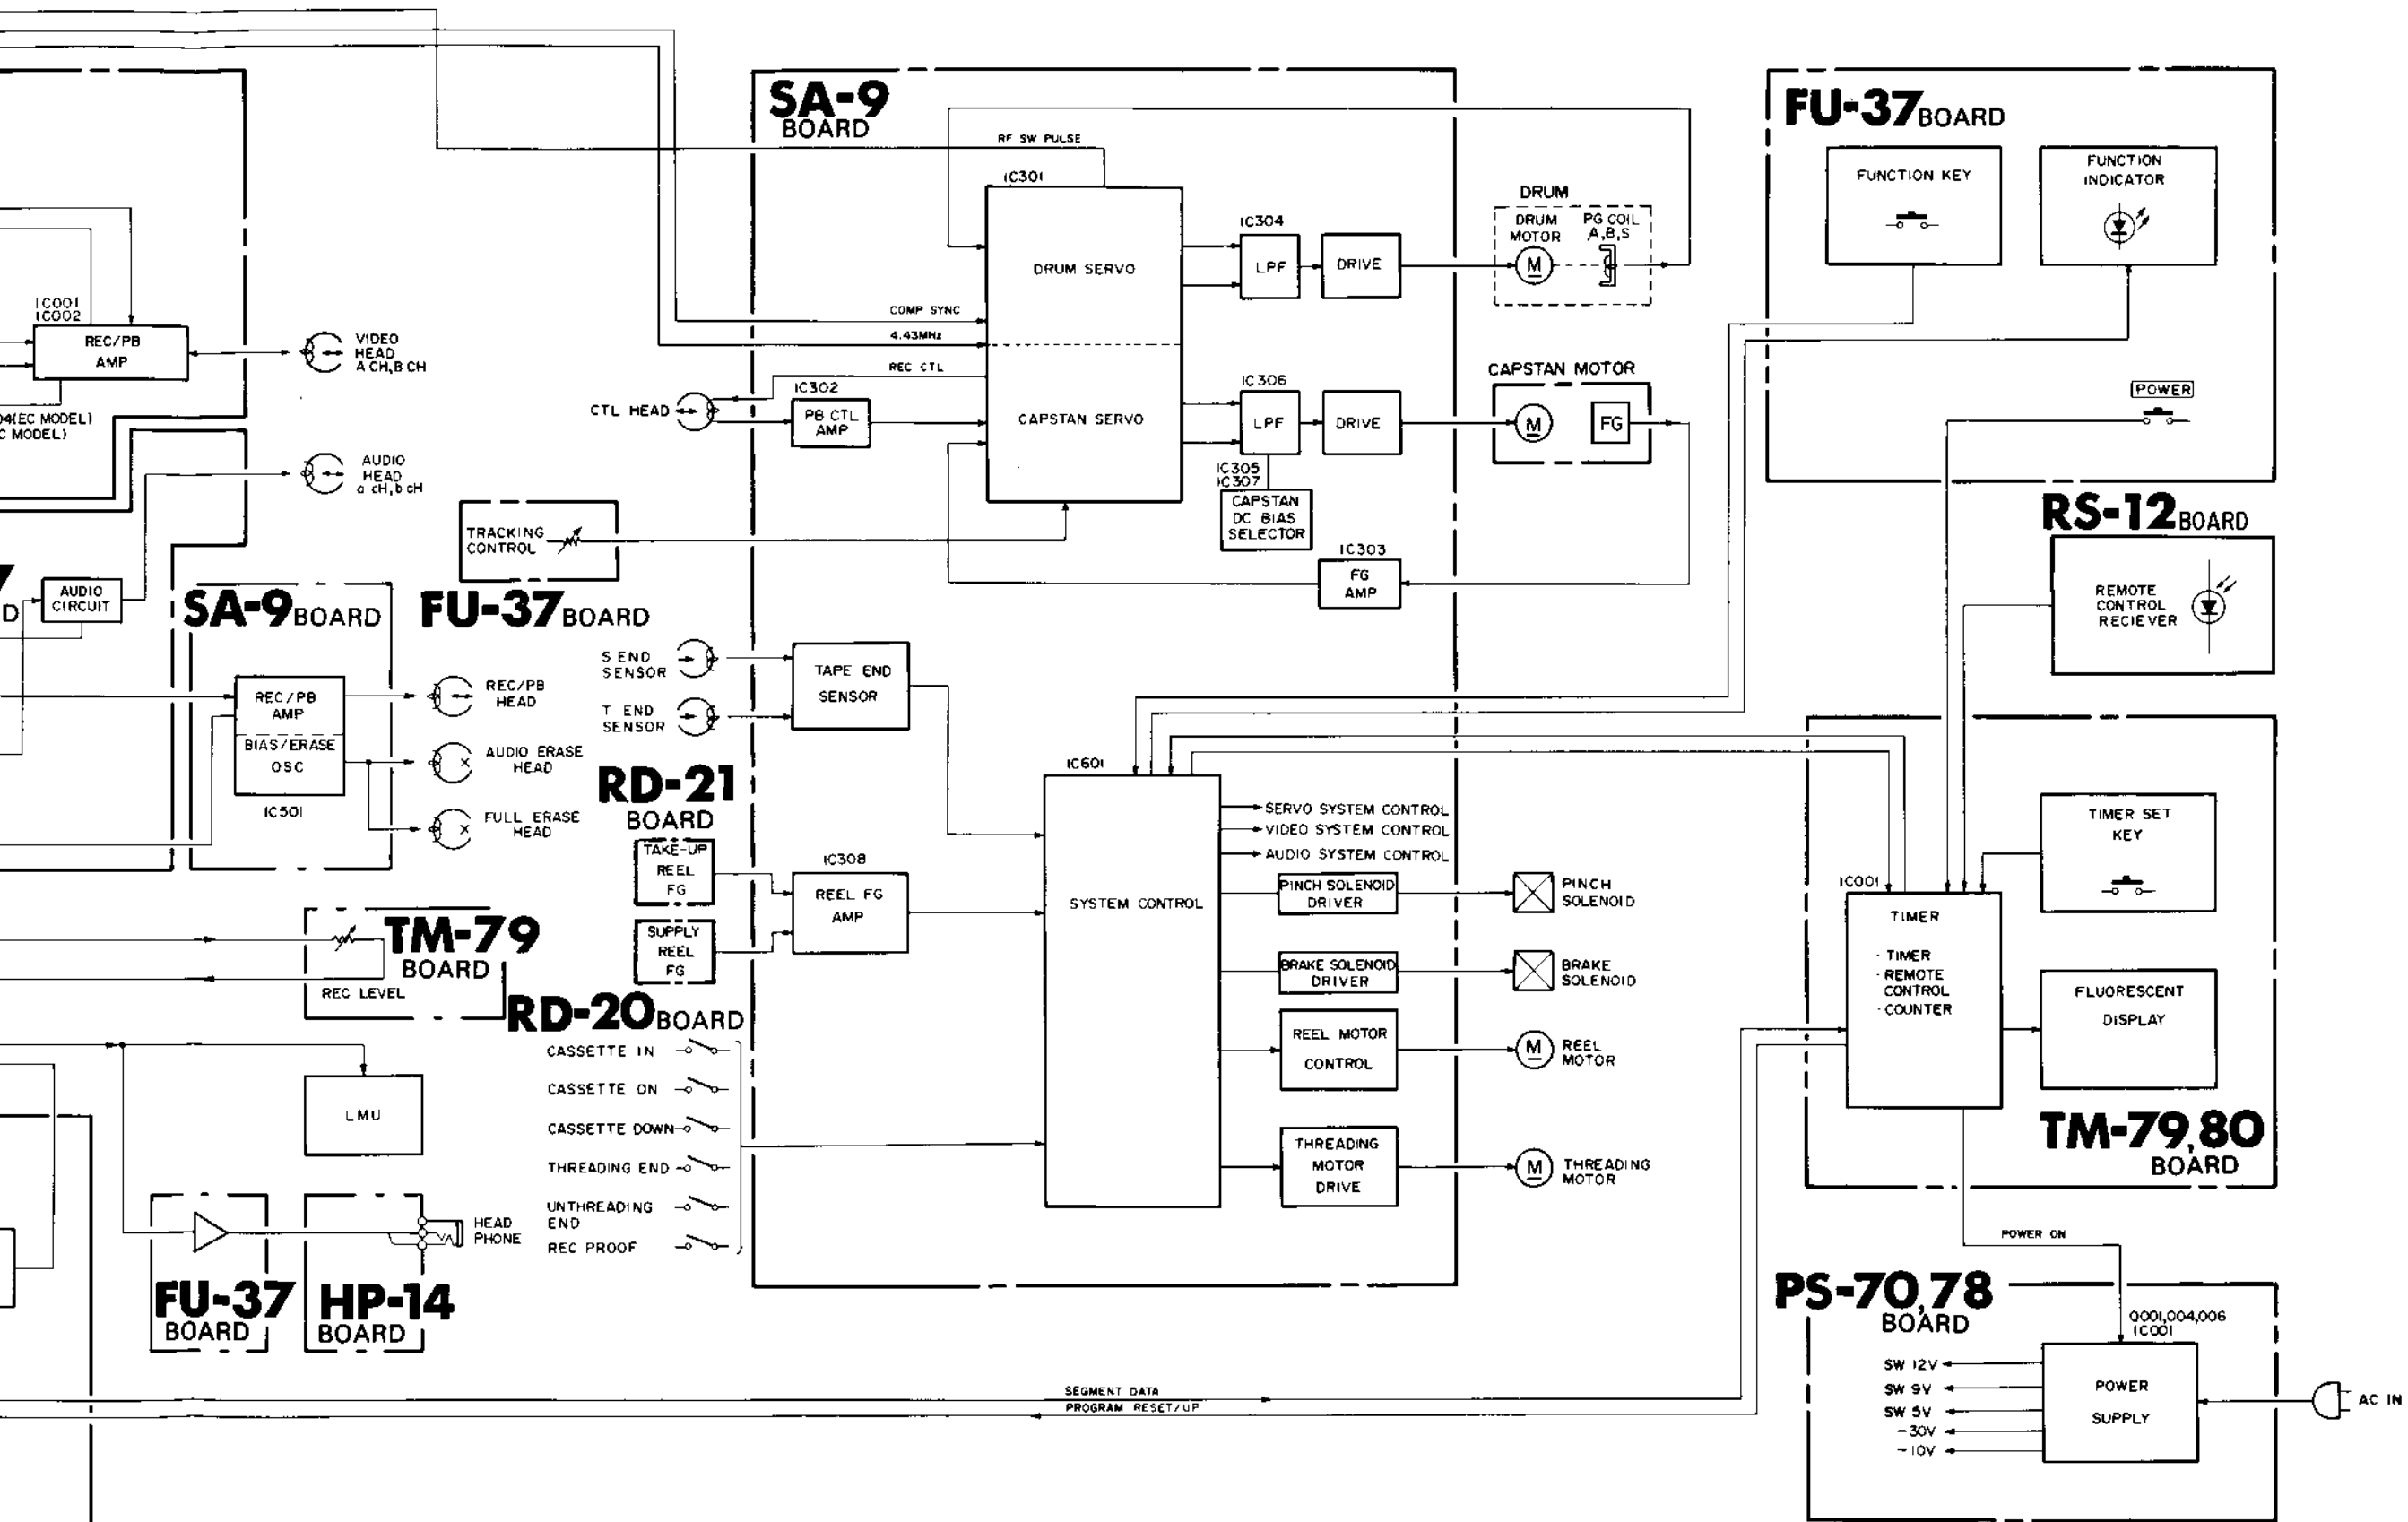

3-3.2. VIDEO SYSTEM BLOCK DIAGRAM (AS MODEL)

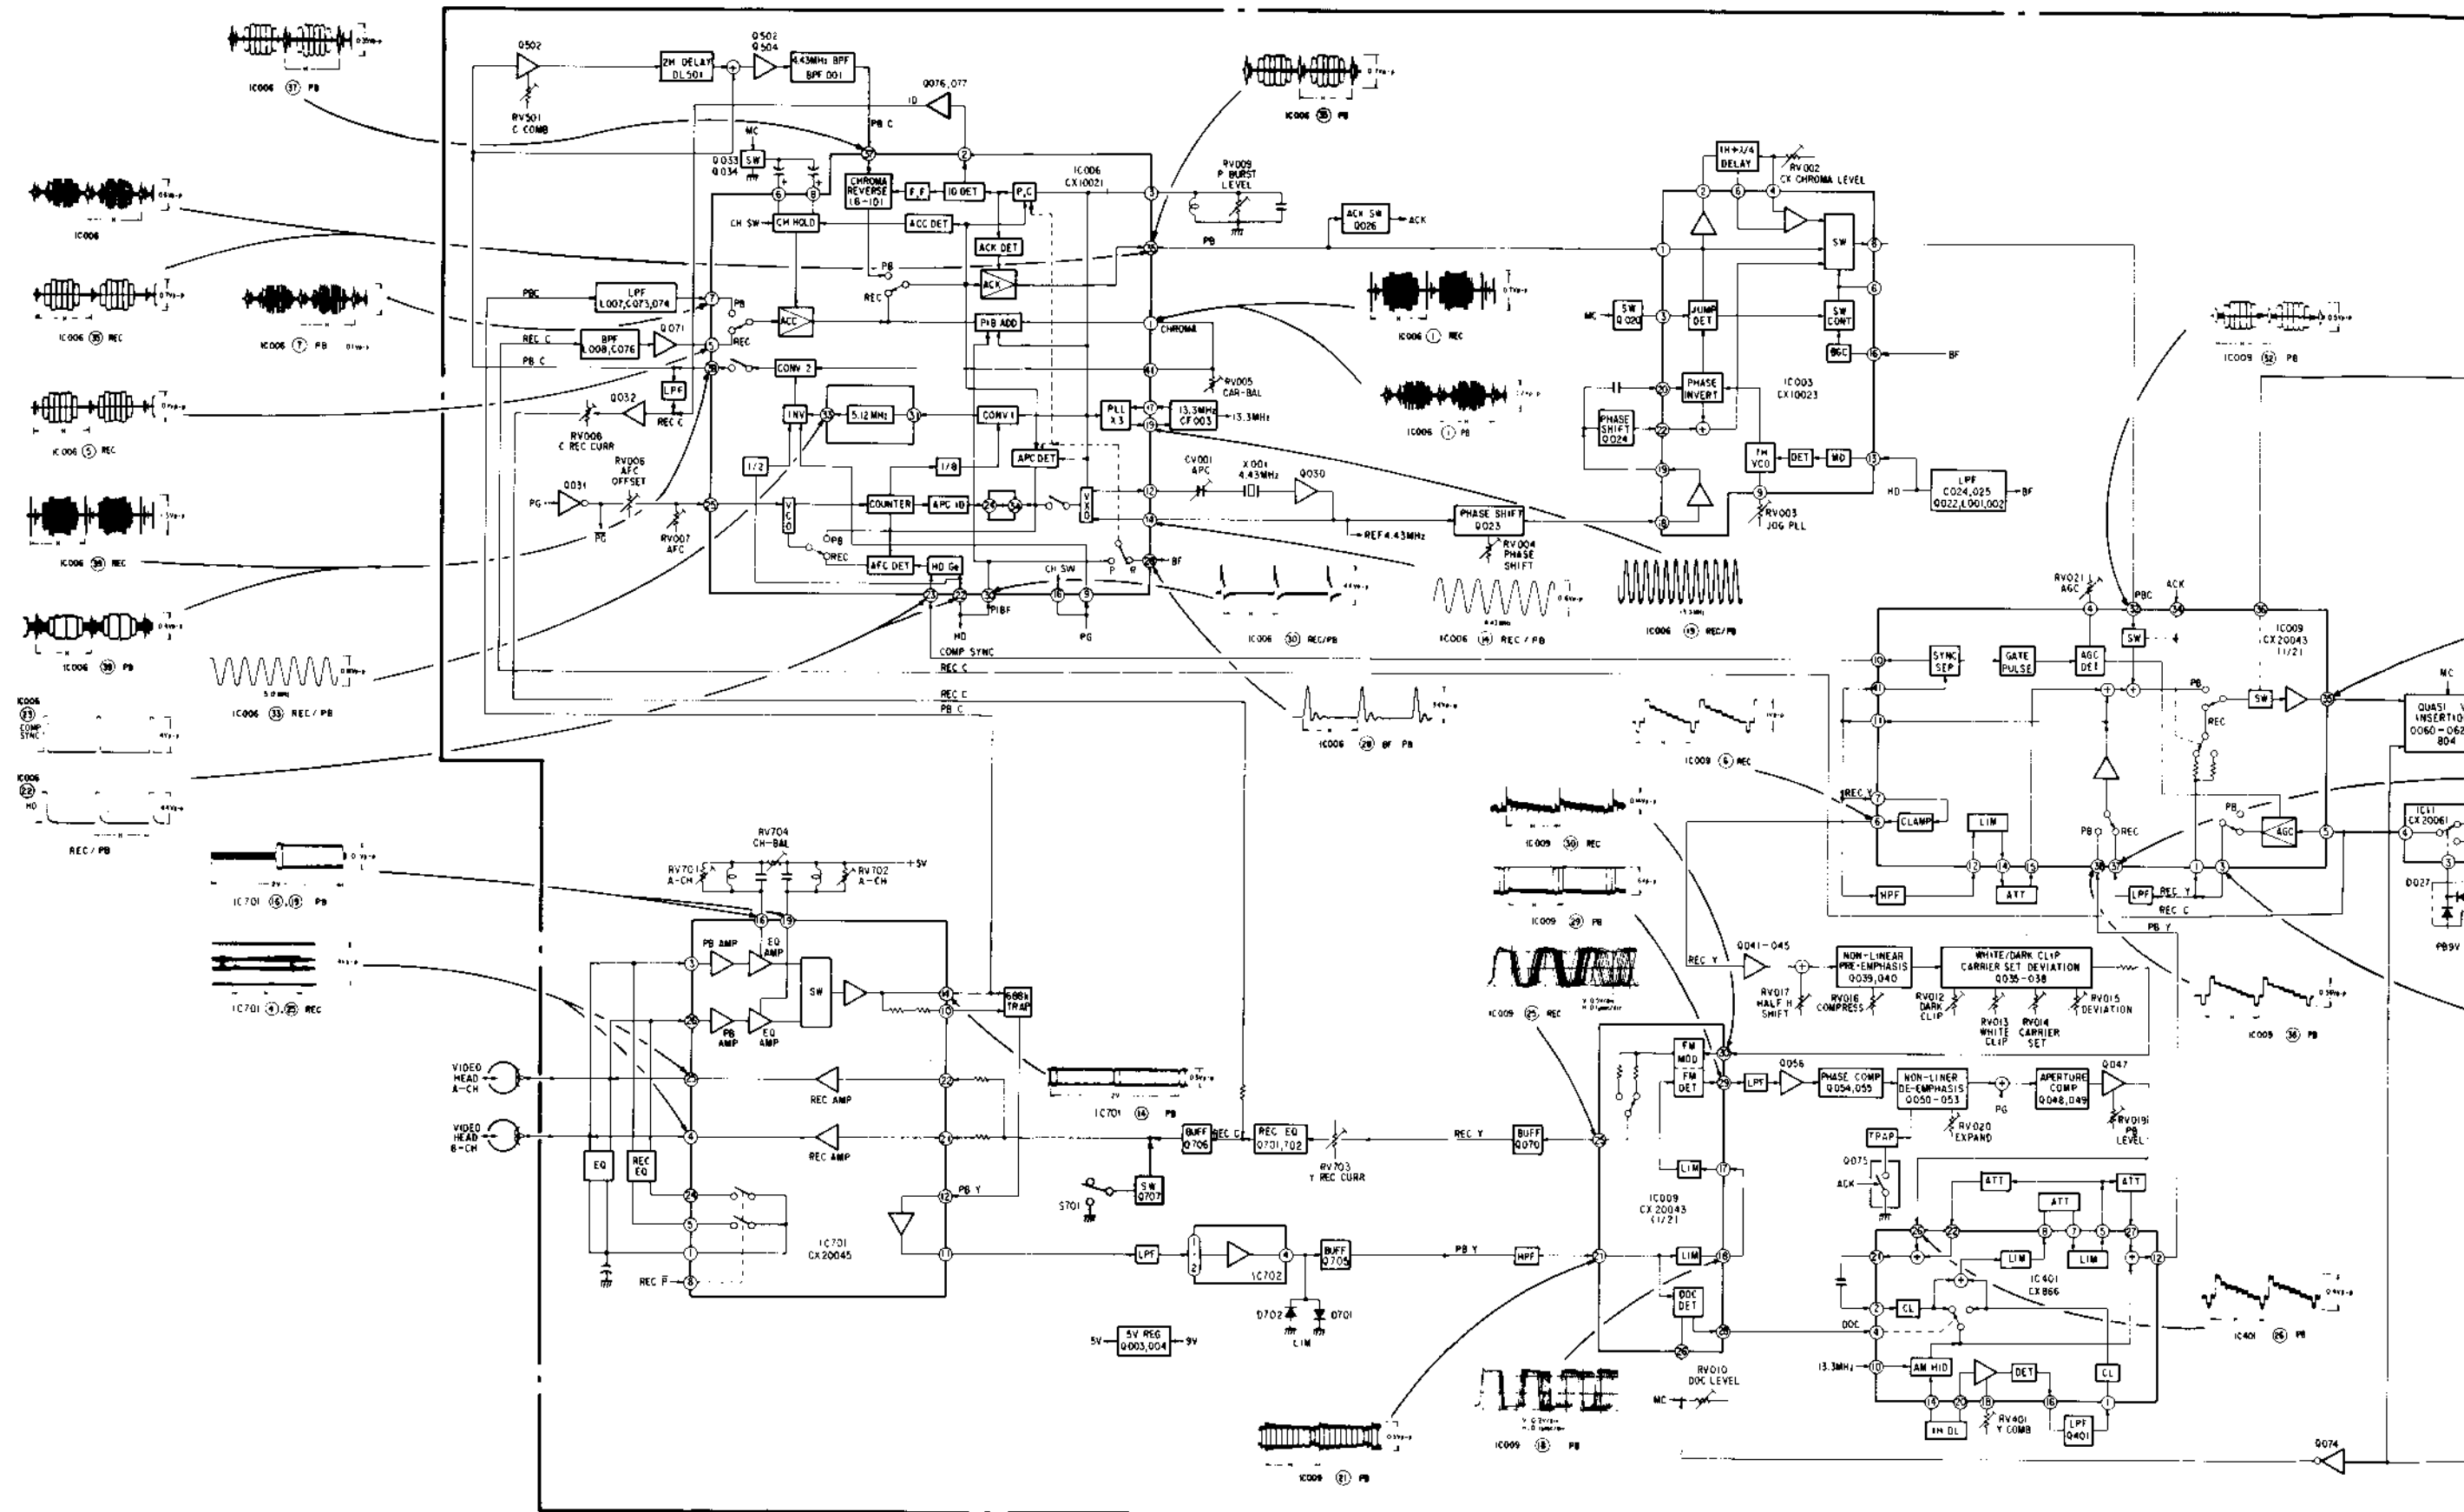


3-4. VIDEO Y BLOCK DIAGRAM

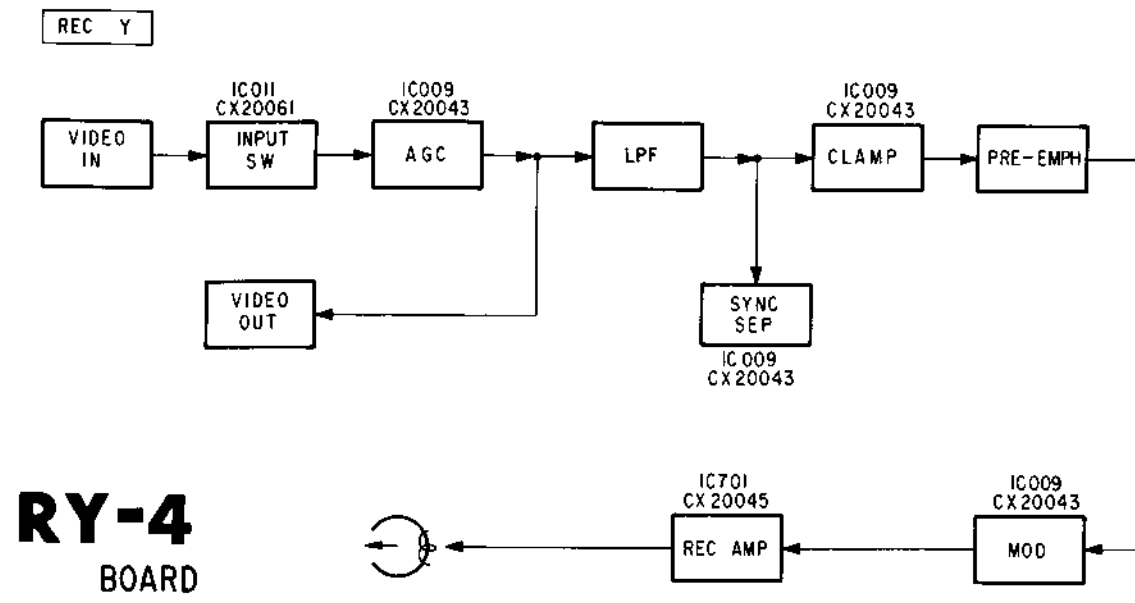


RY-4
BOARD

3-5. VIDEO CHROMA BLOCK DIAGRAM

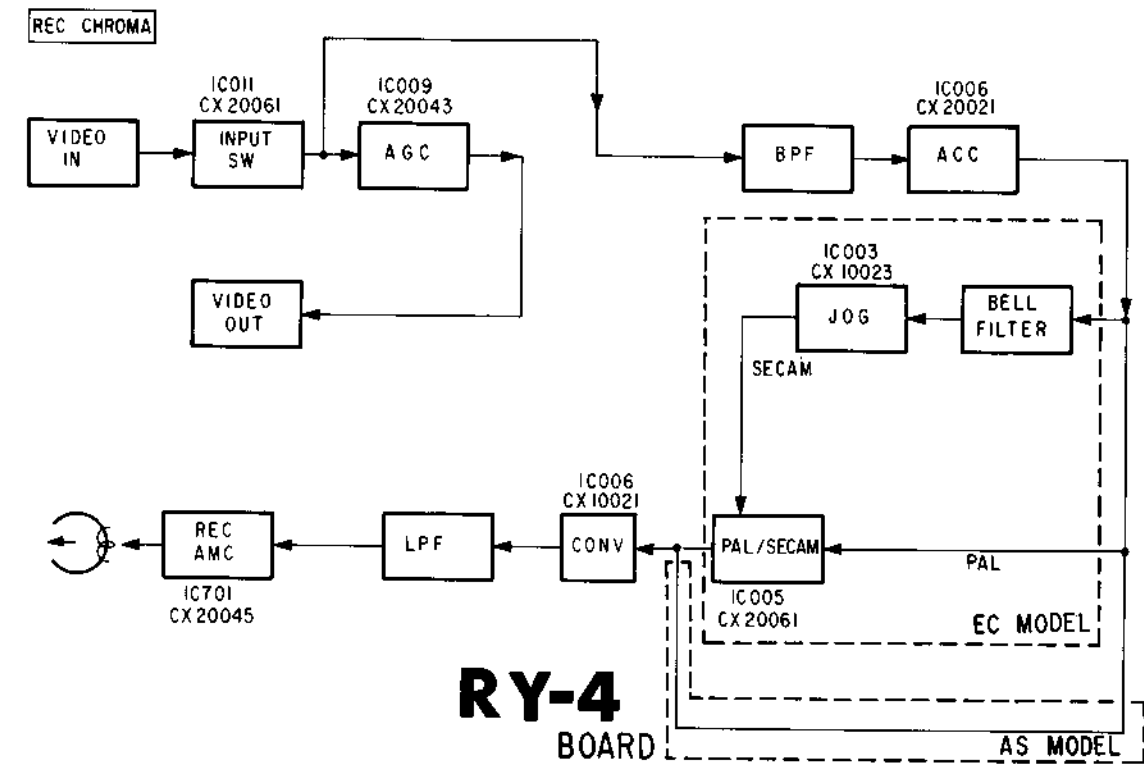


RY-4
BOARD

PB Y

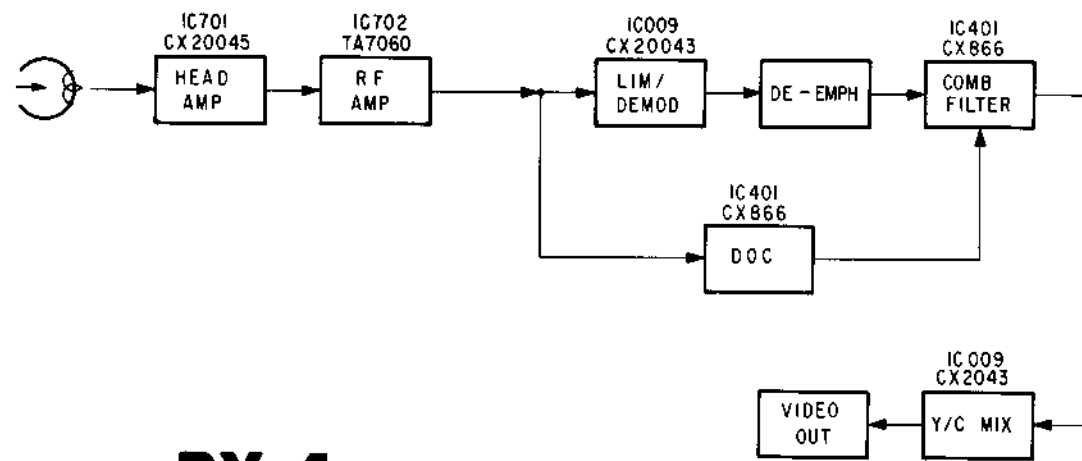


RY-4 BOARD

PB CHROMA

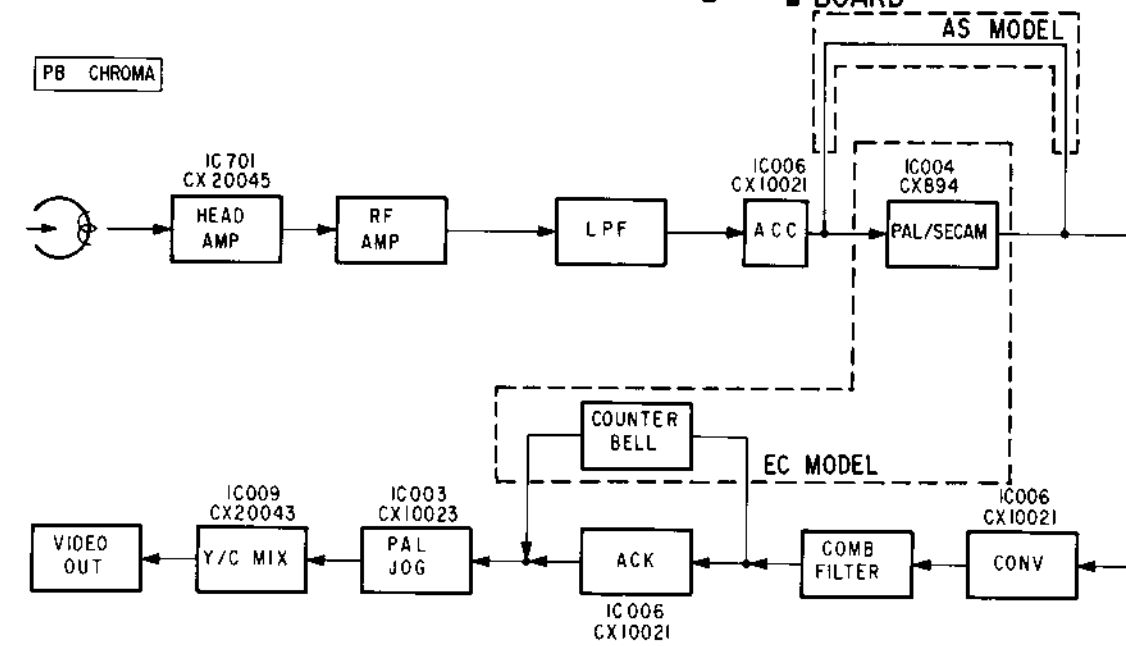


RY-4 BOARD

3-6. SERVO SYSTEM BLOCK DIAGRAM

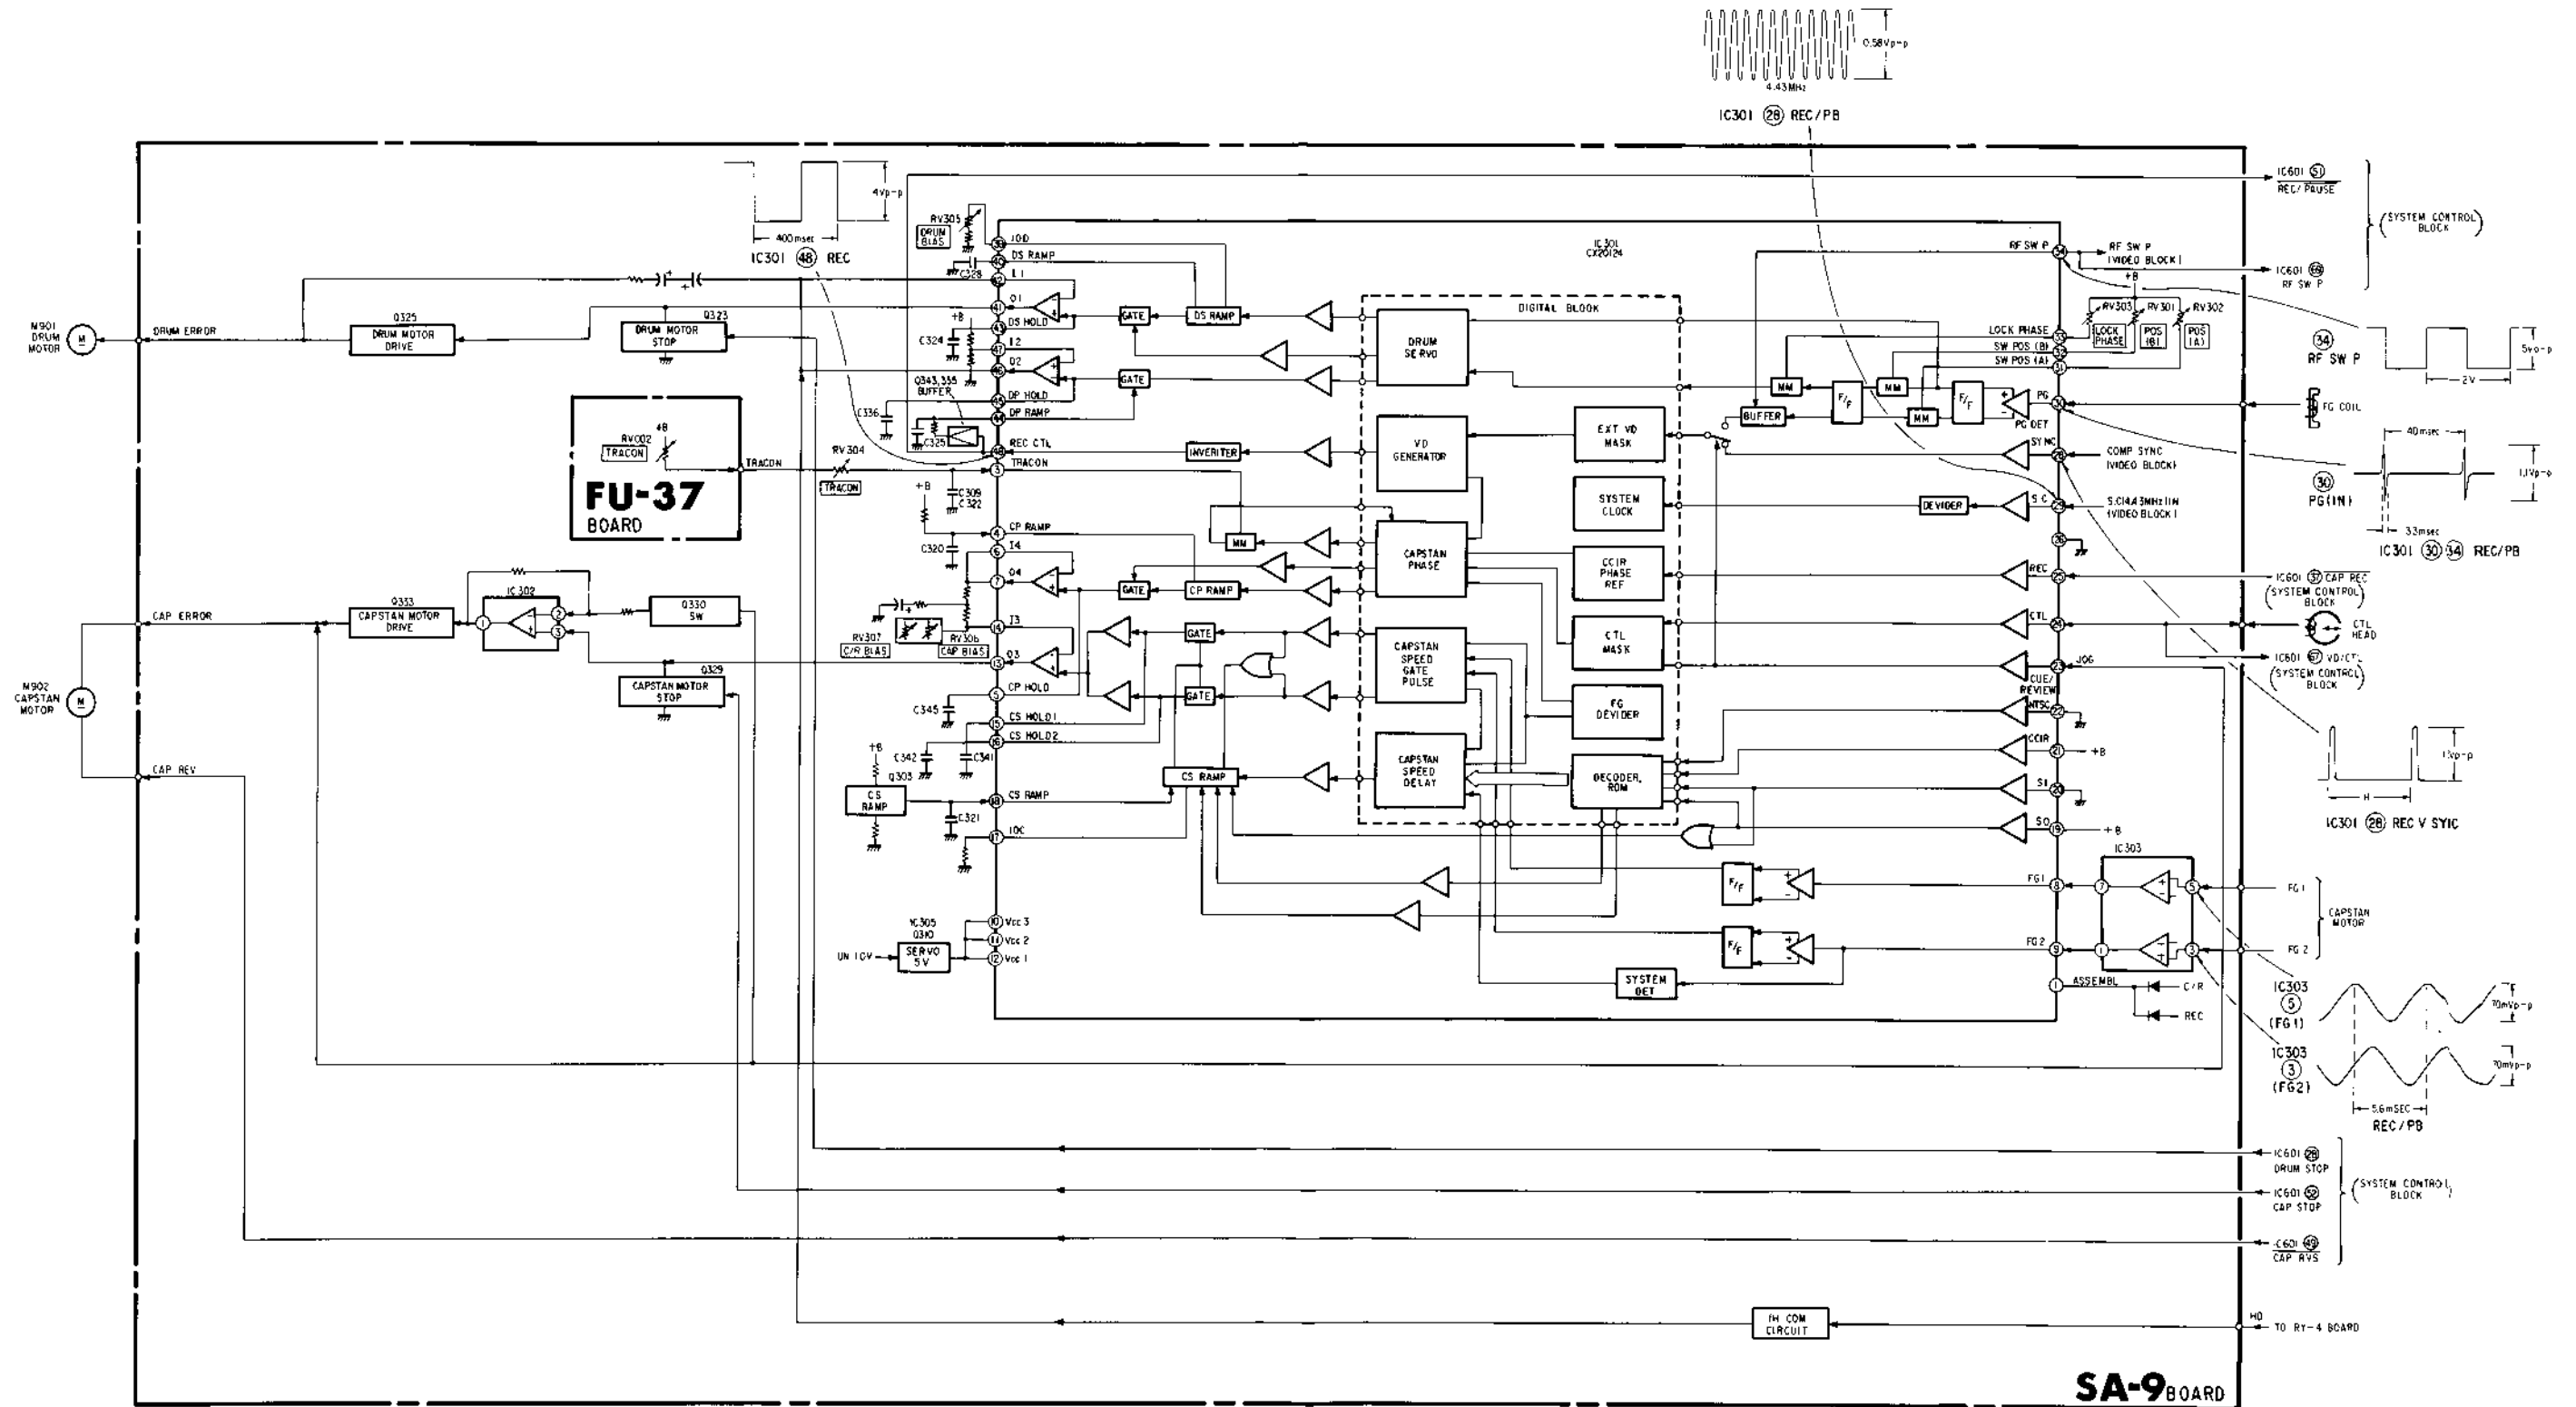

3-7. SYSTEM CONTROL BLOCK DIAGRAM

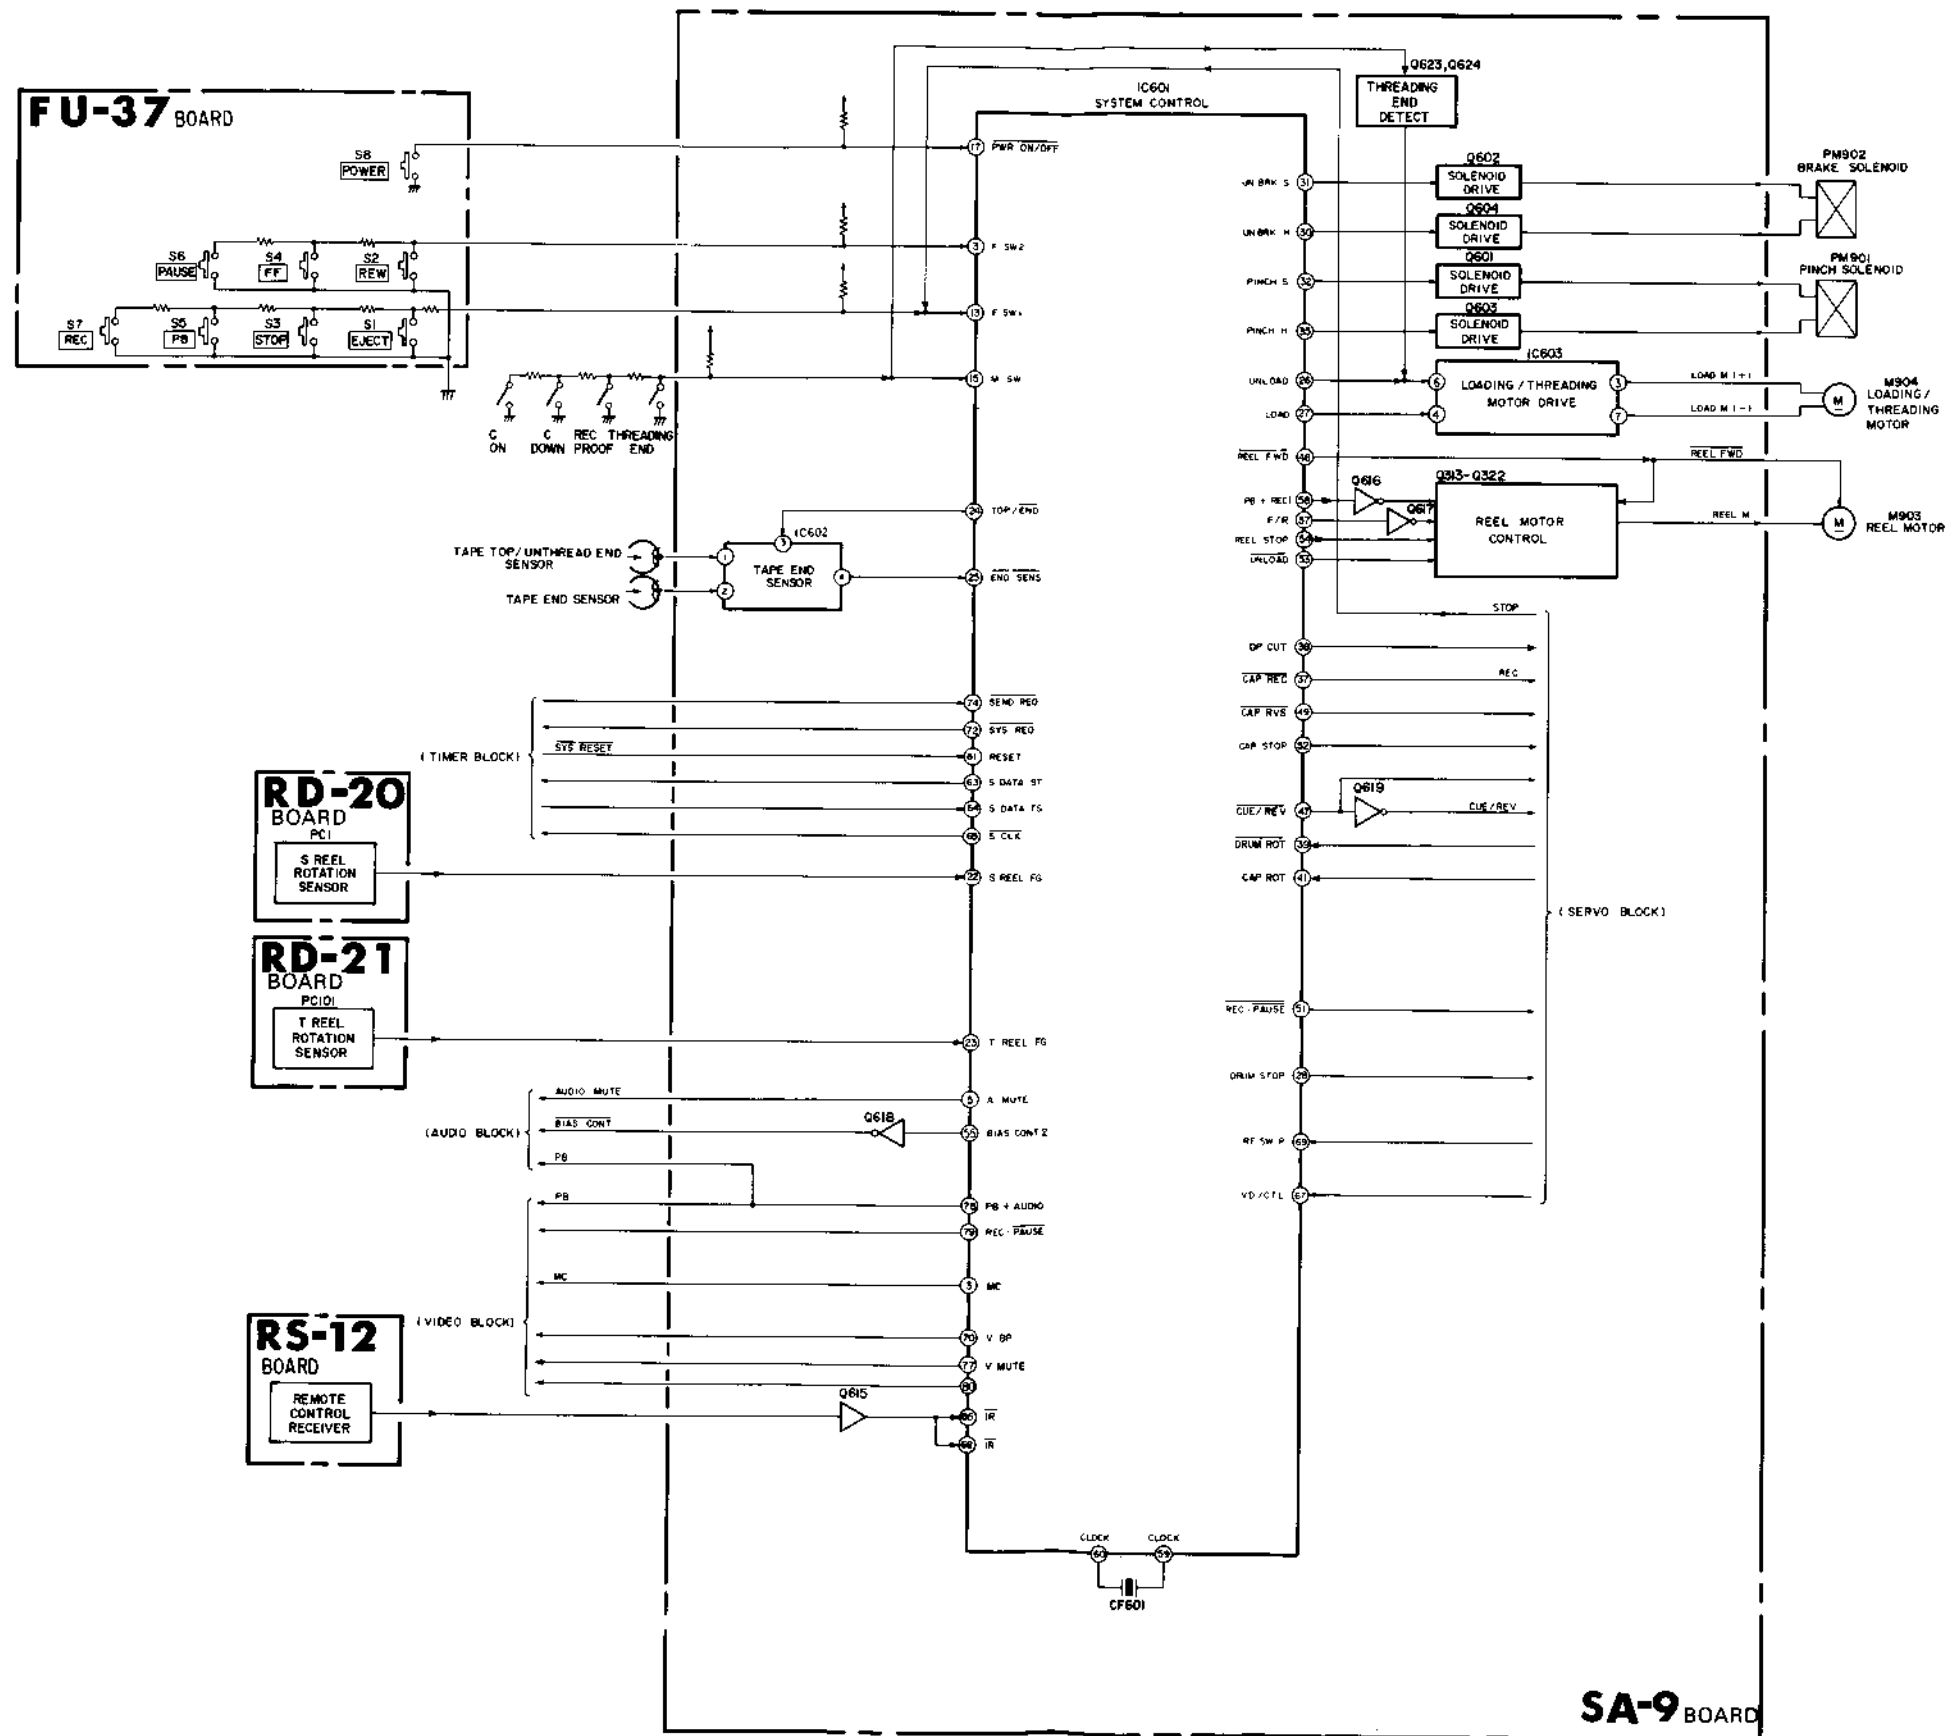

3-8. SYSTEM CONTROL CIRCUIT AND MECHANISM BLOCK INTERFACE

SIGNAL	I/O	IC601 Pin No.	EJECTED	LOADING	THREADING	STOP	UN-THREADING	UN-LOADING	FF	REW	PB	PB PAUSE	PICTURE SEARCH		REC	REC PAUSE	FR SEARCH	
													CUE	REV			CUE	REV
M SW *1	I	15	5V	3V	1V (2V)	0V	1V (2V)	3V	0V	0V	0V	0V	0V	0V	0V	0V	0V	0V
TOP/END	O	24	L	L	L	L	H	H	L	H	L	L	L	H	L	L	L	H
END SENS	I	25	H	H/L	H/L	H	H	L	H	H	H	H	H	H	H	H	H	H
UNLOAD	O	26	L	L	L	L	H	H	L	L	L	L	L	L	L	L	L	L
LOAD	O	27	L	H	H	L	L	L	L	L	L	L	L	L	L	L	L	L
UNBRK (H)	O	30	L	L	L	L	L	L	H	H	H	L	H	H	H	L	H	H
UNBRK (S)	O	31	L	L	L	L	L	L	L	L	L	L	L	L	L	L	L	L
PINCH (S)	O	32	L	L	L	L	L	L	L	L	L	L	L	L	L	L	L	L
PINCH (H)	O	35	L	H	L	L	L	H	L	L	H	L	H	H	H	L	L	L

*1 () : THE SAFTY TAB OF THE CASSETTE IS BROKEN

3-9. SYSTEM CONTROL CIRCUIT AND TIMER CIRCUIT INTERFACE

SIGNAL	I/O	IC601 Pin No.	MODE
			USUAL
S DATA ST	O	63	L
S DATA TS	I	64	L
S CLK	I	65	H
SYS REQ	O	72	H
SEND REQ	I	74	H

3-10. SYSTEM CONTROL CIRCUIT AND ITS PERIPHERAL CIRCUIT INT

SIGNAL	I/O	IC601 Pin No.	USUAL	MODE				
				PRESSED BUT				
				EJECT	STOP	PB	REC	
F SW 1	I	13	5V	0V	1V	2V	3V	
F SW 2	I	14	5V	-	-	-	-	
V HOLD *1	I	16	0V - 5V *2	-	-	-	-	
POWER ON/OFF	I	17	5V	-	-	-	-	
IR	I	66, 68	5V	-	-	-	-	

*1 : NOT USED
*2 : BY V HOLD VR

PICTURE SEARCH		REC	REC PAUSE	FR SEARCH	
EJECT	REV			CUE	REV
V	OV	OV	OV	OV	OV
	H	L	L	L	H
	H	H	H	H	H
	L	L	L	L	L
	L	L	L	L	L
	H	H	L	H	H
	L	L	L	L	L
	L	L	L	L	L
	H	H	L	L	L

3-10. SYSTEM CONTROL CIRCUIT AND ITS PERIPHERAL CIRCUIT INTERFACE

SIGNAL	I/O	IC601 Pin No.	USUAL	MODE									
				PRESSED BUTTON									
				EJECT	STOP	PB	REC		REW	FF	PAUSE	POWER	
F SW 1	I	⑬	5V	0V	1V	2V	3V			-	-	-	-
F SW 2	I	⑭	5V	-	-	-	-			0V	1V	2V	-
V HOLD *1	I	⑯	0V - 5V *2	-	-	-	-			-	-	-	-
POWER ON/OFF	I	⑰	5V	-	-	-	-			-	-	-	0V
$\bar{I}R$	I	⑱, ⑲	5V	-	-	-	-			-	-	-	-

*1: NOT USED
*2: BY V HOLD VR

3-11. SYSTEM CONTROL CIRCUIT AND REEL MOTOR CONTROL CIRCUIT INTERFACE

SIGNAL	I/O	IC601 Pin No.	EJECTED	LOADING	THREADING	STOP	UN- THREADING	UN- LOADING	FF	REW	PB	PB PAUSE	PICTURE SEARCH		REC	REC PAUSE	FR SEARCH	
													CUE	REV			CUE	REV
CUE/REV	O	47	H	H	H	H	H	H	H	H	H	H	L	L	H	H	H	H
REEL FWD	O	48	L	L	L	L	H	L	L	H	L	L	L	H	L	L	L	H
REEL STOP	O	54	H	H	L	H	L	H	L	L	L	H	L	L	L	H	L	L
F/R	O	57	L	L	L	L	L	L	L	L	L	L	L	L	L	L	H	H
PB + REC 1	O	58	L	L	L	L	L	L	L	L	H	H	L	L	H	H	L	L
UNLOAD	O	53	H	H	H	H	L	H	H	H	H	H	H	H	H	H	H	H

3-12. SYSTEM CONTROL CIRCUIT AND VIDEO CIRCUIT INTERFACE

SIGNAL	I/O	IC601 Pin No.	STOP	FF	REW	PB	PB PAUSE	PICTURE SERCH		REC OR TIMER REC	REC PAUSE	WAIT PAUSE	FR SEARCH	
								CUE	REV				CUE	REV
PAUSE	O	1	L	L	L	L	H	L	L	L	H	*1	L	L
MC	O	3	L	L	L	L	H	H	H	L	L	L	H	H
VBP	O	70	H	H	H	H	H	H	H	H	H	H	H	H
V MUTE	O	77	L	L	L	L	L	L	L	L	L	L	L	L
PB + AUDIO DUB	O	78	L	L	L	H	H	H	H	L	L	L	H	H
REC · P	O	79	L	L	L	L	L	L	L	H	L	L	L	L

*1: T = 2(SEC).
50% duty ratio pulse

3-13. SYSTEM CONTROL CIRCUIT AND SERVO CIRCUIT INTERFACE

SIGNAL	I/O	IC601 Pin No.	STOP	FF	REW	PB	PB PAUSE	PICTU SEARCH	
								CUE	REV
S REEL FG	I	22	H/L	FG	FG	FG	H/L	FG	
T REEL FG	I	23	H/L	FG	FG	FG	H/L	FG	
DRUM STOP	O	28	H	L	L	L	L	L	
REC	O	37	L	L	L	L	L	L	
DP CUT	O	38	L	L	L	L	H	H	
DRUM ROT	I	39	L	H	H	H	H	H	
CAP ROT	I	41	L	L	L	H	H	H	
PB + REC 2*	O	44	L	L	L	H	H	L	
CUE/REV	O	47	H	H	H	H	H	L	
CAP RVS	O	49	H	H	H	H	H	H	
REC · P	O	51	H	H	H	H	H	H	
CAP STOP	O	52	H	H	H	L	L	L	
VD/CTL	I	67	L	PB CTL	PB CTL	PB CTL	L	PB CTL	PB
RF SW P	I	59	H/L	RF SWP	RF SWP	RF SWP	RF SWP	RF SWP	RF

*1: NOT USED
*2: T = 2(SEC).
50% duty ratio pulse

3-14. SYSTEM CONTROL CIRCUIT AND AUDIO CIRCUIT INTERFACE

SIGNAL	I/O	IC601 Pin No.	STOP	FF	REW	PB	PB- PAUSE	PICTU SEARCH	
								CUE	REV
AUDIO DUB *1	O	4	L	L	L	L	L	L	
A MUTE	O	5	L	L	L	L	H	H	
BIAS CONT 2	O	55	L	L	L	L	L	L	
PB + AUDIO DUB	O	78	L	L	L	H	H	H	

PICTURE SEARCH		REC	REC PAUSE	FR SEARCH	
CUE	REV			CUE	REV
L	L	H	H	H	H
L	H	L	L	L	H
L	L	L	H	L	L
L	L	L	L	H	H
L	L	H	H	L	L
H	H	H	H	H	H

3-13. SYSTEM CONTROL CIRCUIT AND SERVO CIRCUIT INTERFACE

SIGNAL	I/O	IC601 Pin No.	STOP	FF	REW	PB	PB PAUSE	PICTURE SEARCH		REC OR TIMER REC	REC PAUSE	WAIT PAUSE	FR SEARCH	
								CUE	REV				CUE	REV
S REEL FG	I	22	H/L	FG	FG	FG	H/L	FG	FG	FG	H/L	H/L	FG	FG
T REEL FG	I	23	H/L	FG	FG	FG	H/L	FG	FG	FG	H/L	H/L	FG	FG
DRUM STOP	O	28	H	L	L	L	L	L	L	L	L	H	L	L
REC	O	37	L	L	L	L	L	L	L	H	H	L	L	L
DP CUT	O	38	L	L	L	L	H	H	H	L	L	L	H	H
DRUM ROT	I	39	L	H	H	H	H	H	H	H	H	L	H	H
CAP ROT	I	41	L	L	L	H	H	H	H	H	H	L	L	L
PB + REC 2 ¹⁾	O	44	L	L	L	H	H	L	L	H	H	L	L	L
CUE/REV	O	47	H	H	H	H	H	L	L	H	H	H	H	H
CAP RVS	O	49	H	H	H	H	H	H	L	H	H	H	H	H
REC · P	O	51	H	H	H	H	H	H	H	L	H	H	H	H
CAP STOP	O	52	H	H	H	L	L	L	L	L	L	H	H	H
VD/CTL	I	67	L	PB CTL	PB CTL	PB CTL	L	PB CTL	PB CTL	VD	L	L	PB CTL	PB CTL
RF SW P	I	59	H/L	RF SWP	RF SWP	RF SWP	RF SWP	RF SWP	RF SWP	RF SWP	RF SWP	H/L	RF SWP	RF SWP

*1: NOT USED

*2: T = 2(SEC).


50% duty ratio pulse

3-14. SYSTEM CONTROL CIRCUIT AND AUDIO CIRCUIT INTERFACE

SIGNAL	I/O	IC601 Pin No.	MODE											
			STOP	FF	REW	PB	PB PAUSE	PICTURE SEARCH		REC OR TIMER REC	REC PAUSE	WAIT PAUSE	FR SEARCH	
								CUE	REV				CUE	REV
AUDIO DUB *1	O	4	L	L	L	L	L	L	L	L	L	L	L	L
A MUTE	O	5	L	L	L	L	H	H	H	L	L	L	H	H
BIAS CONT 2	O	55	L	L	L	L	L	L	L	H	L	L	L	L
PB + AUDIO DUB	O	78	L	L	L	H	H	H	H	L	L	L	H	H

*1 NOT USED


FR SEARCH	
CUE	REV
L	L
H	H
H	H
L	L
H	H
L	L

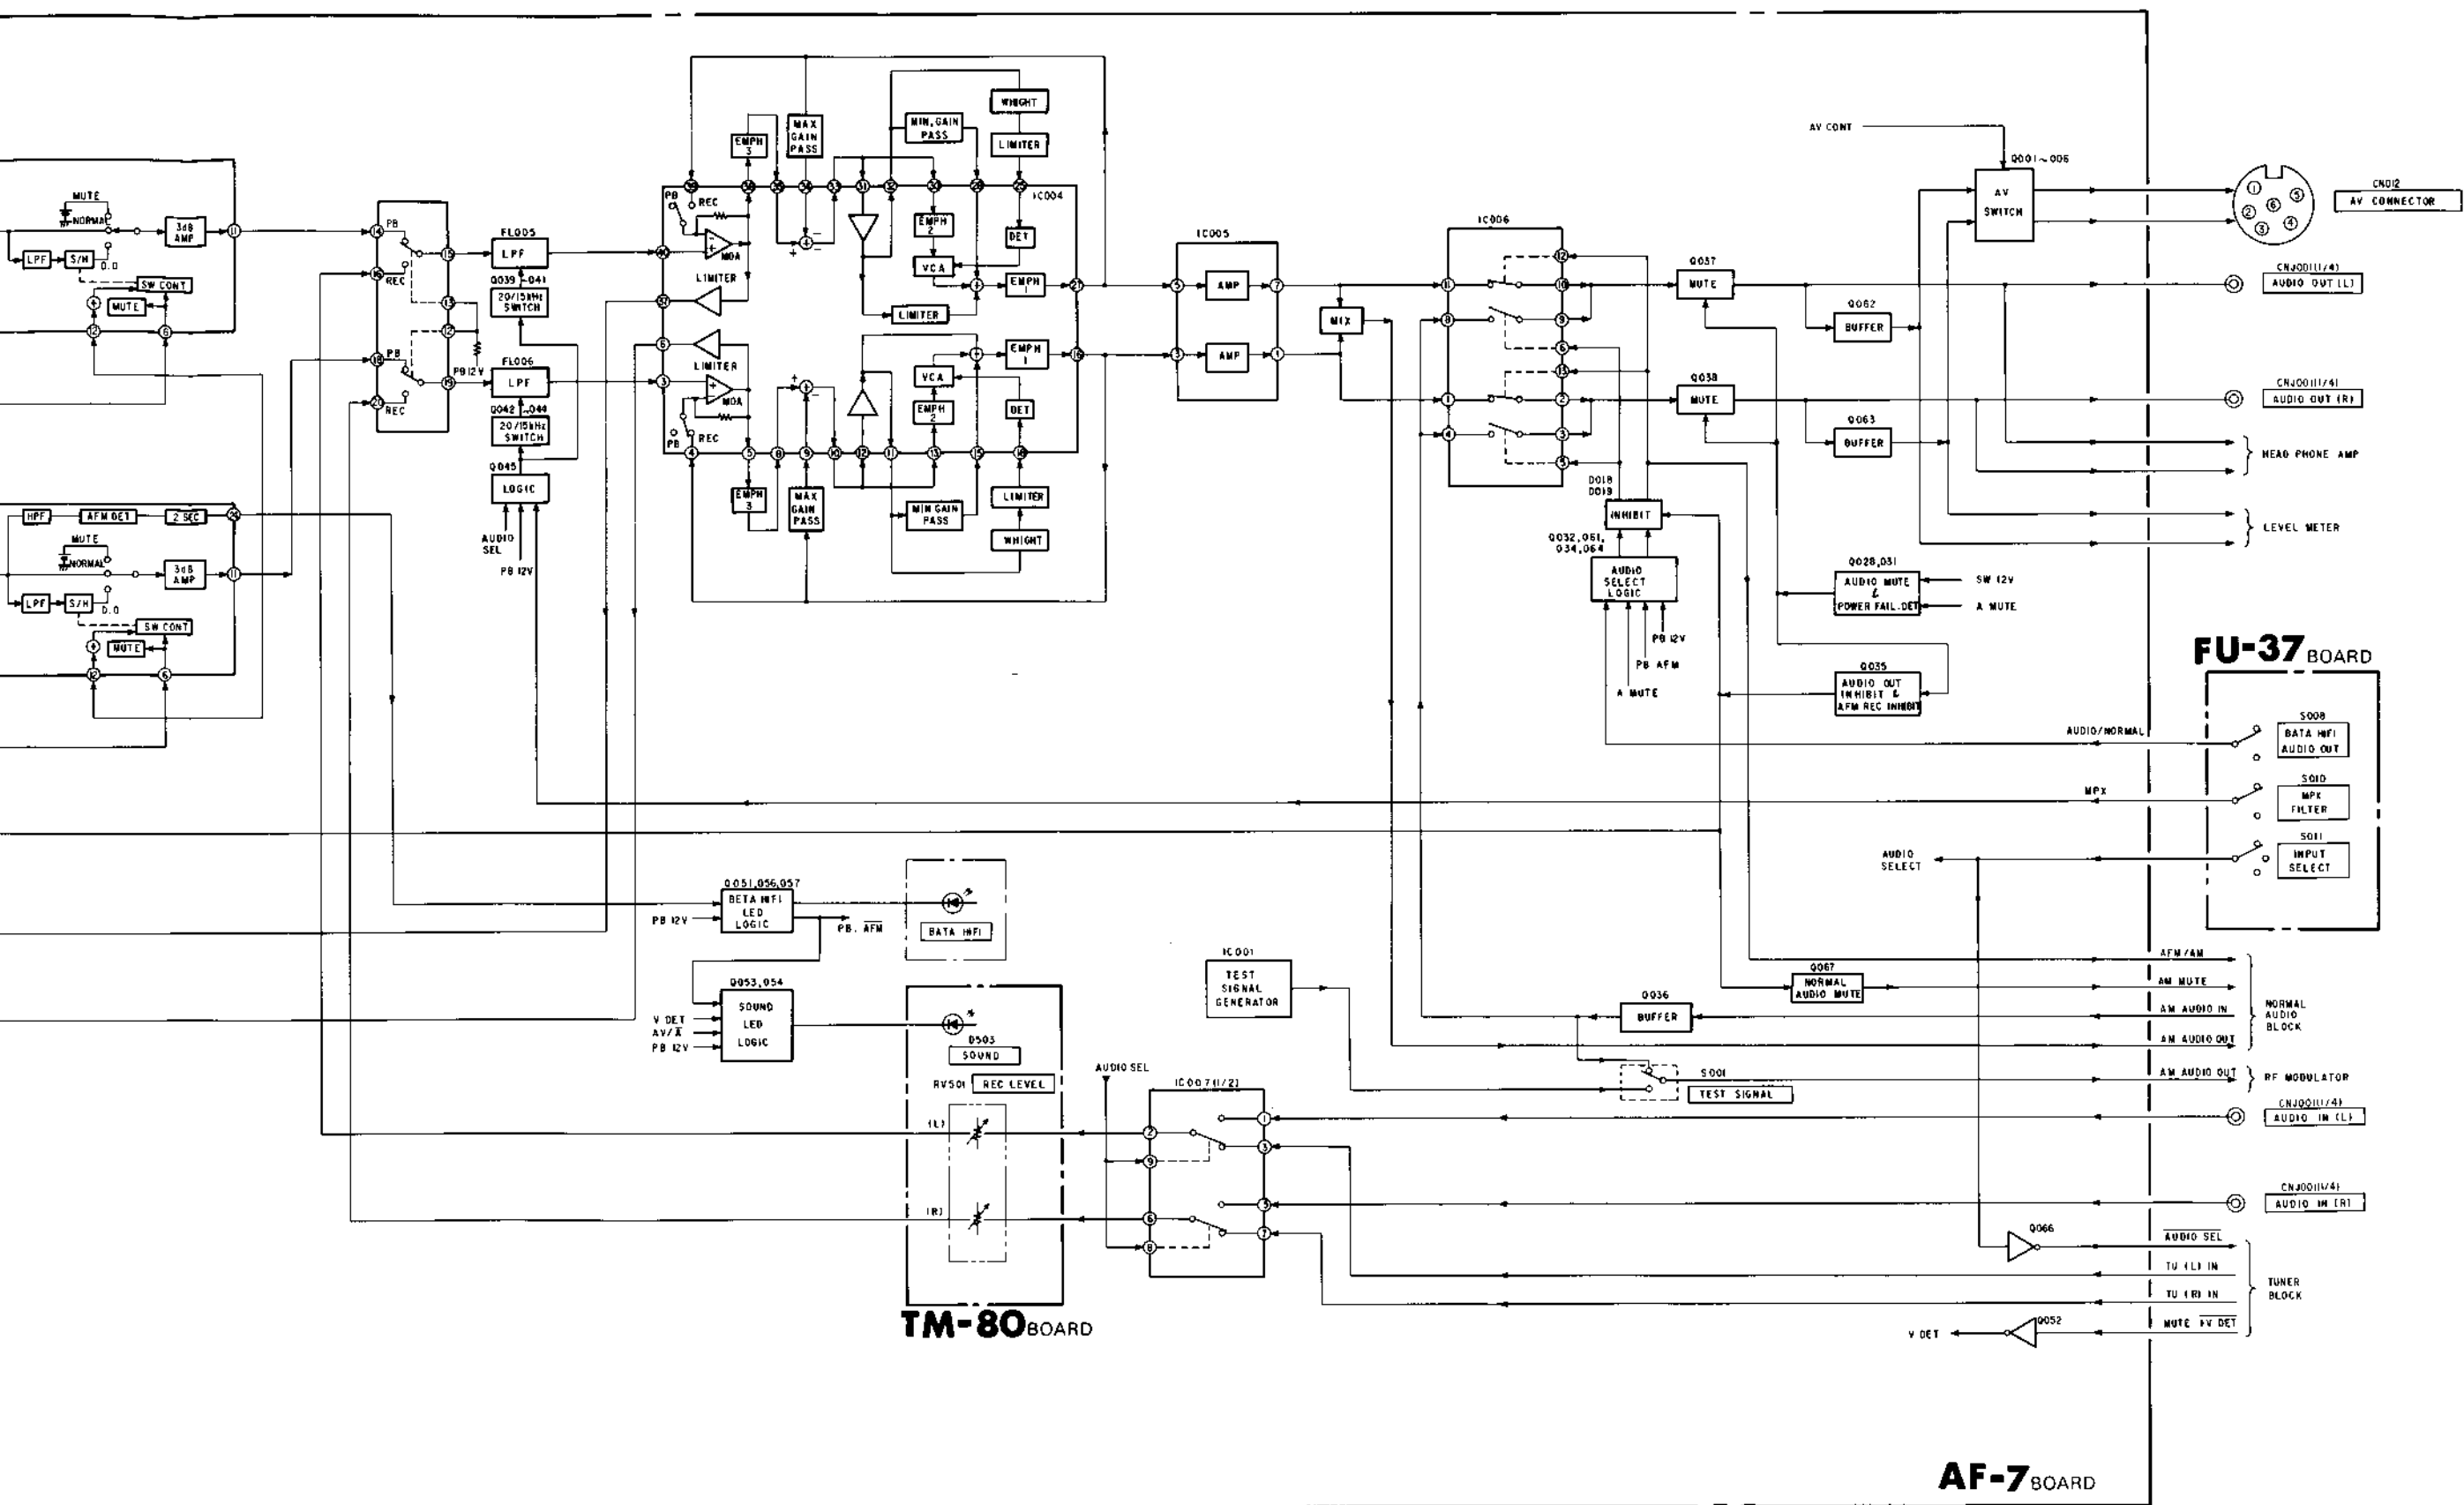

3-16. AUDIO LEVEL DIAGRAM (REC)

REC MODE


0dB = 0.775Vrms
 f = 400Hz
 BIAS OSC : STOPPED

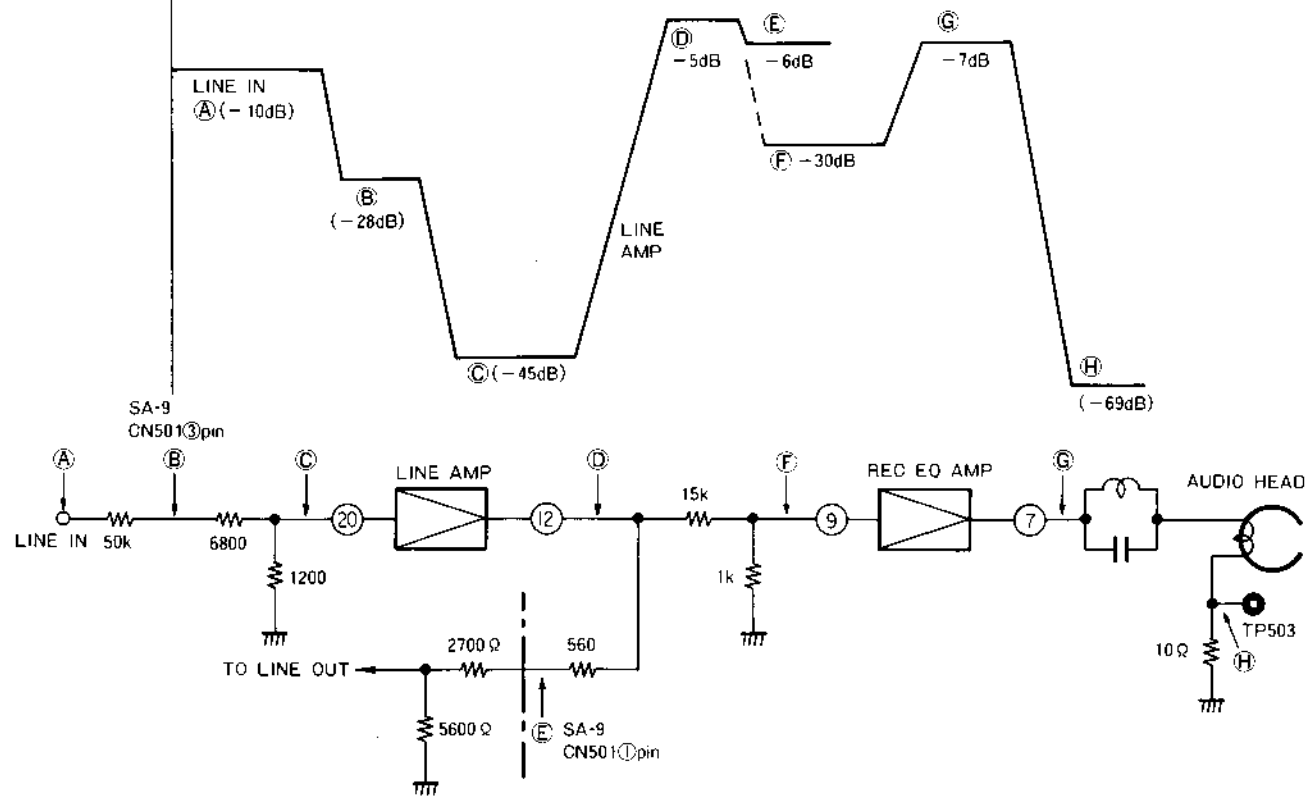

3-17. AUDIO LEVEL DIAGRAM (PB)



PB MODE

10dB = 0.775Vrms
 f = 400Hz

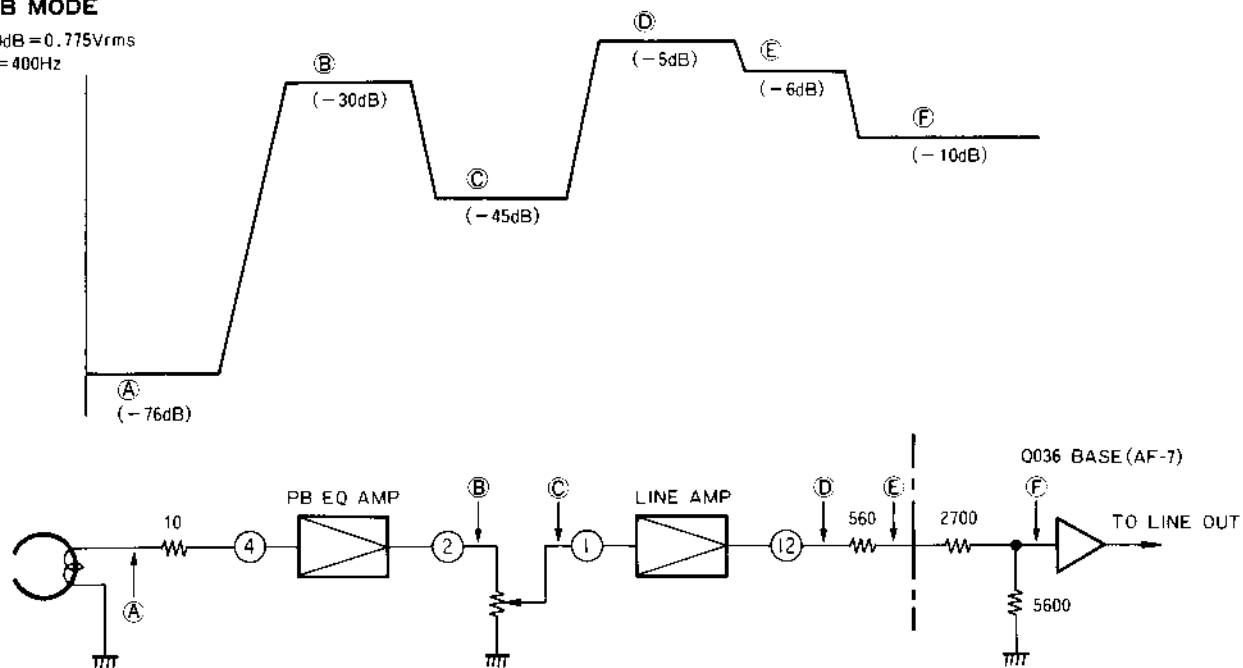

3-18. AFM LEVEL DIAGRAM (REC, EE)

REC, EE MODE

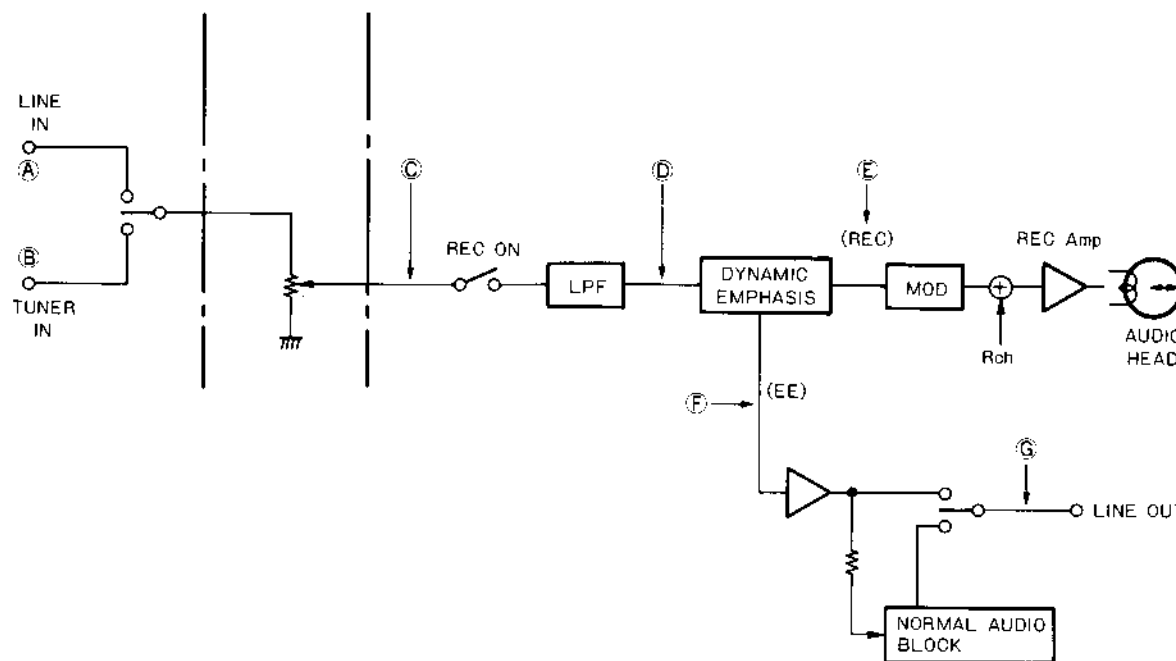
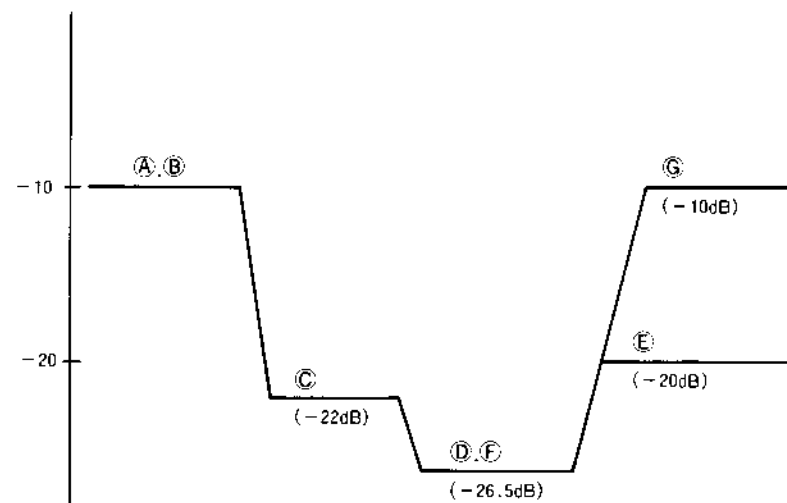


3-19.

PB MO



3-18. AFM LEVEL DIAGRAM (REC, EE)

REC, EE MODE

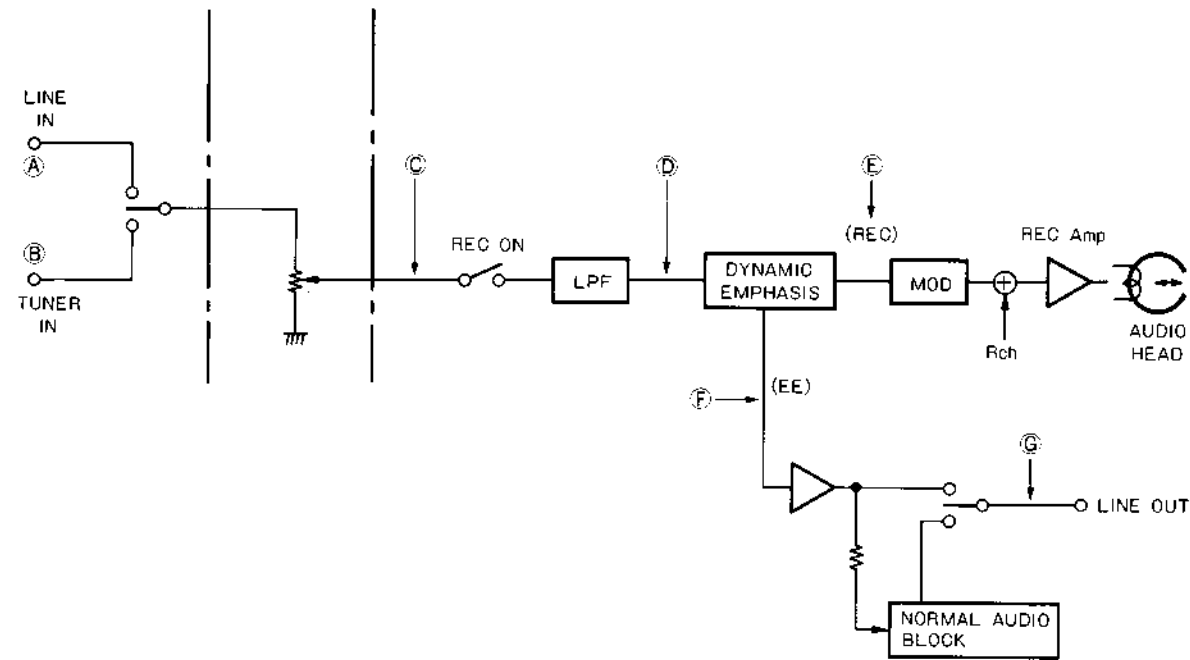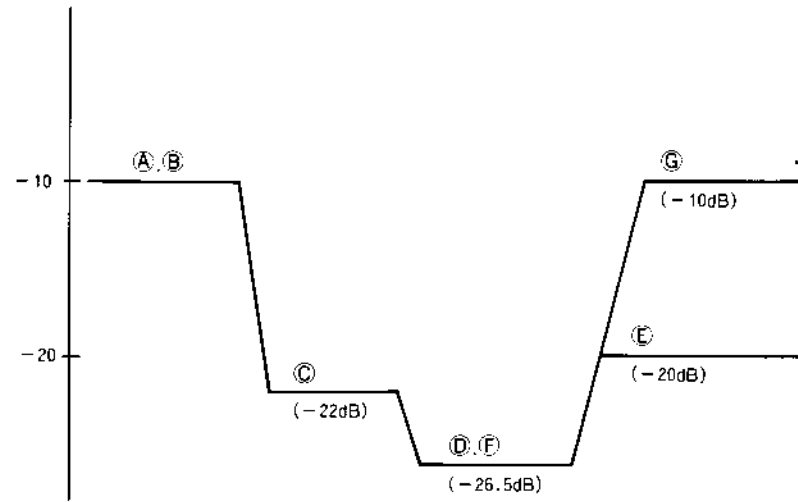

3-19. AFM LEVEL DIAGRAM (PB)

PB MODE

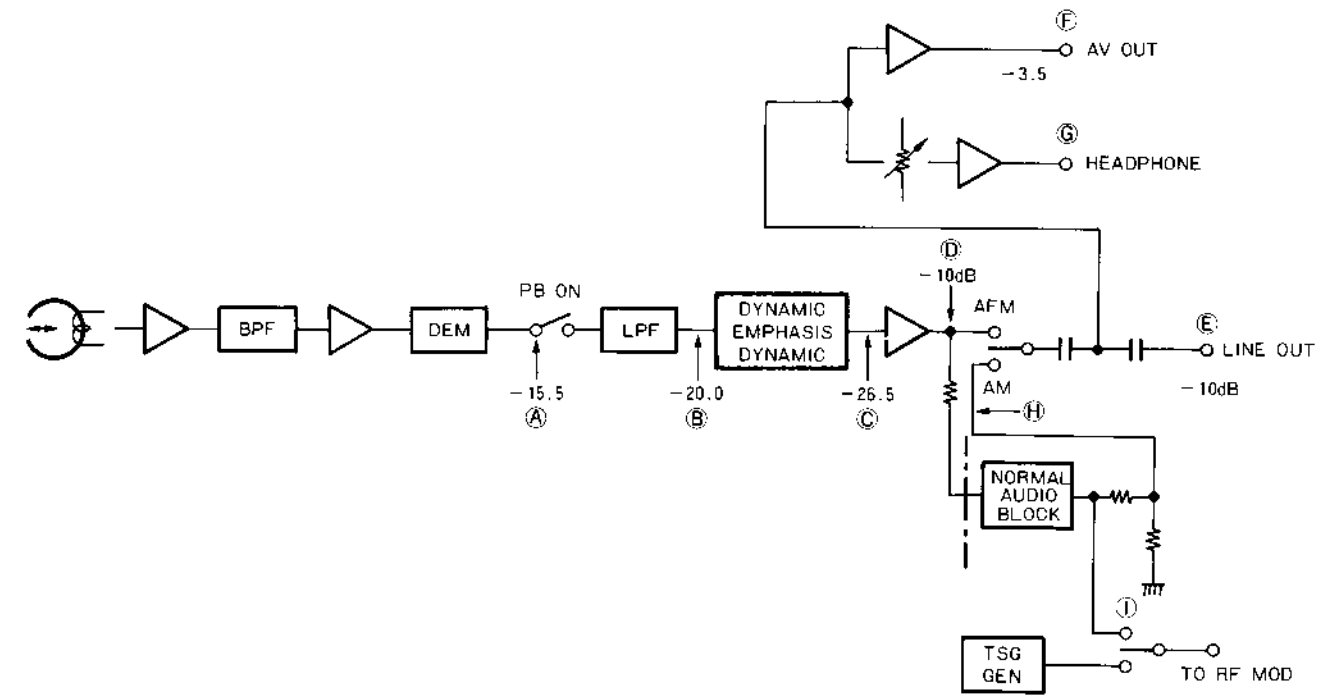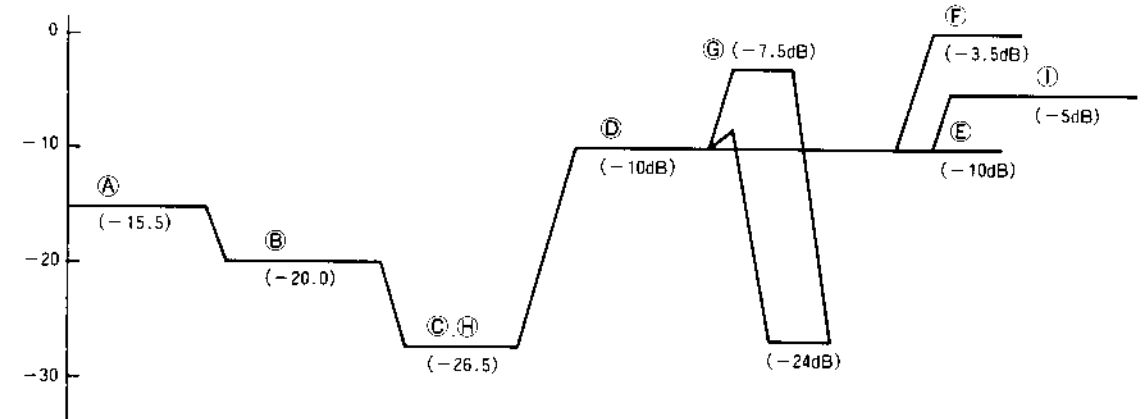


AUDIO HEAD

TP503


(AF-7)

LINE OUT


3-20. TIMER BLOCK DIAGRAM

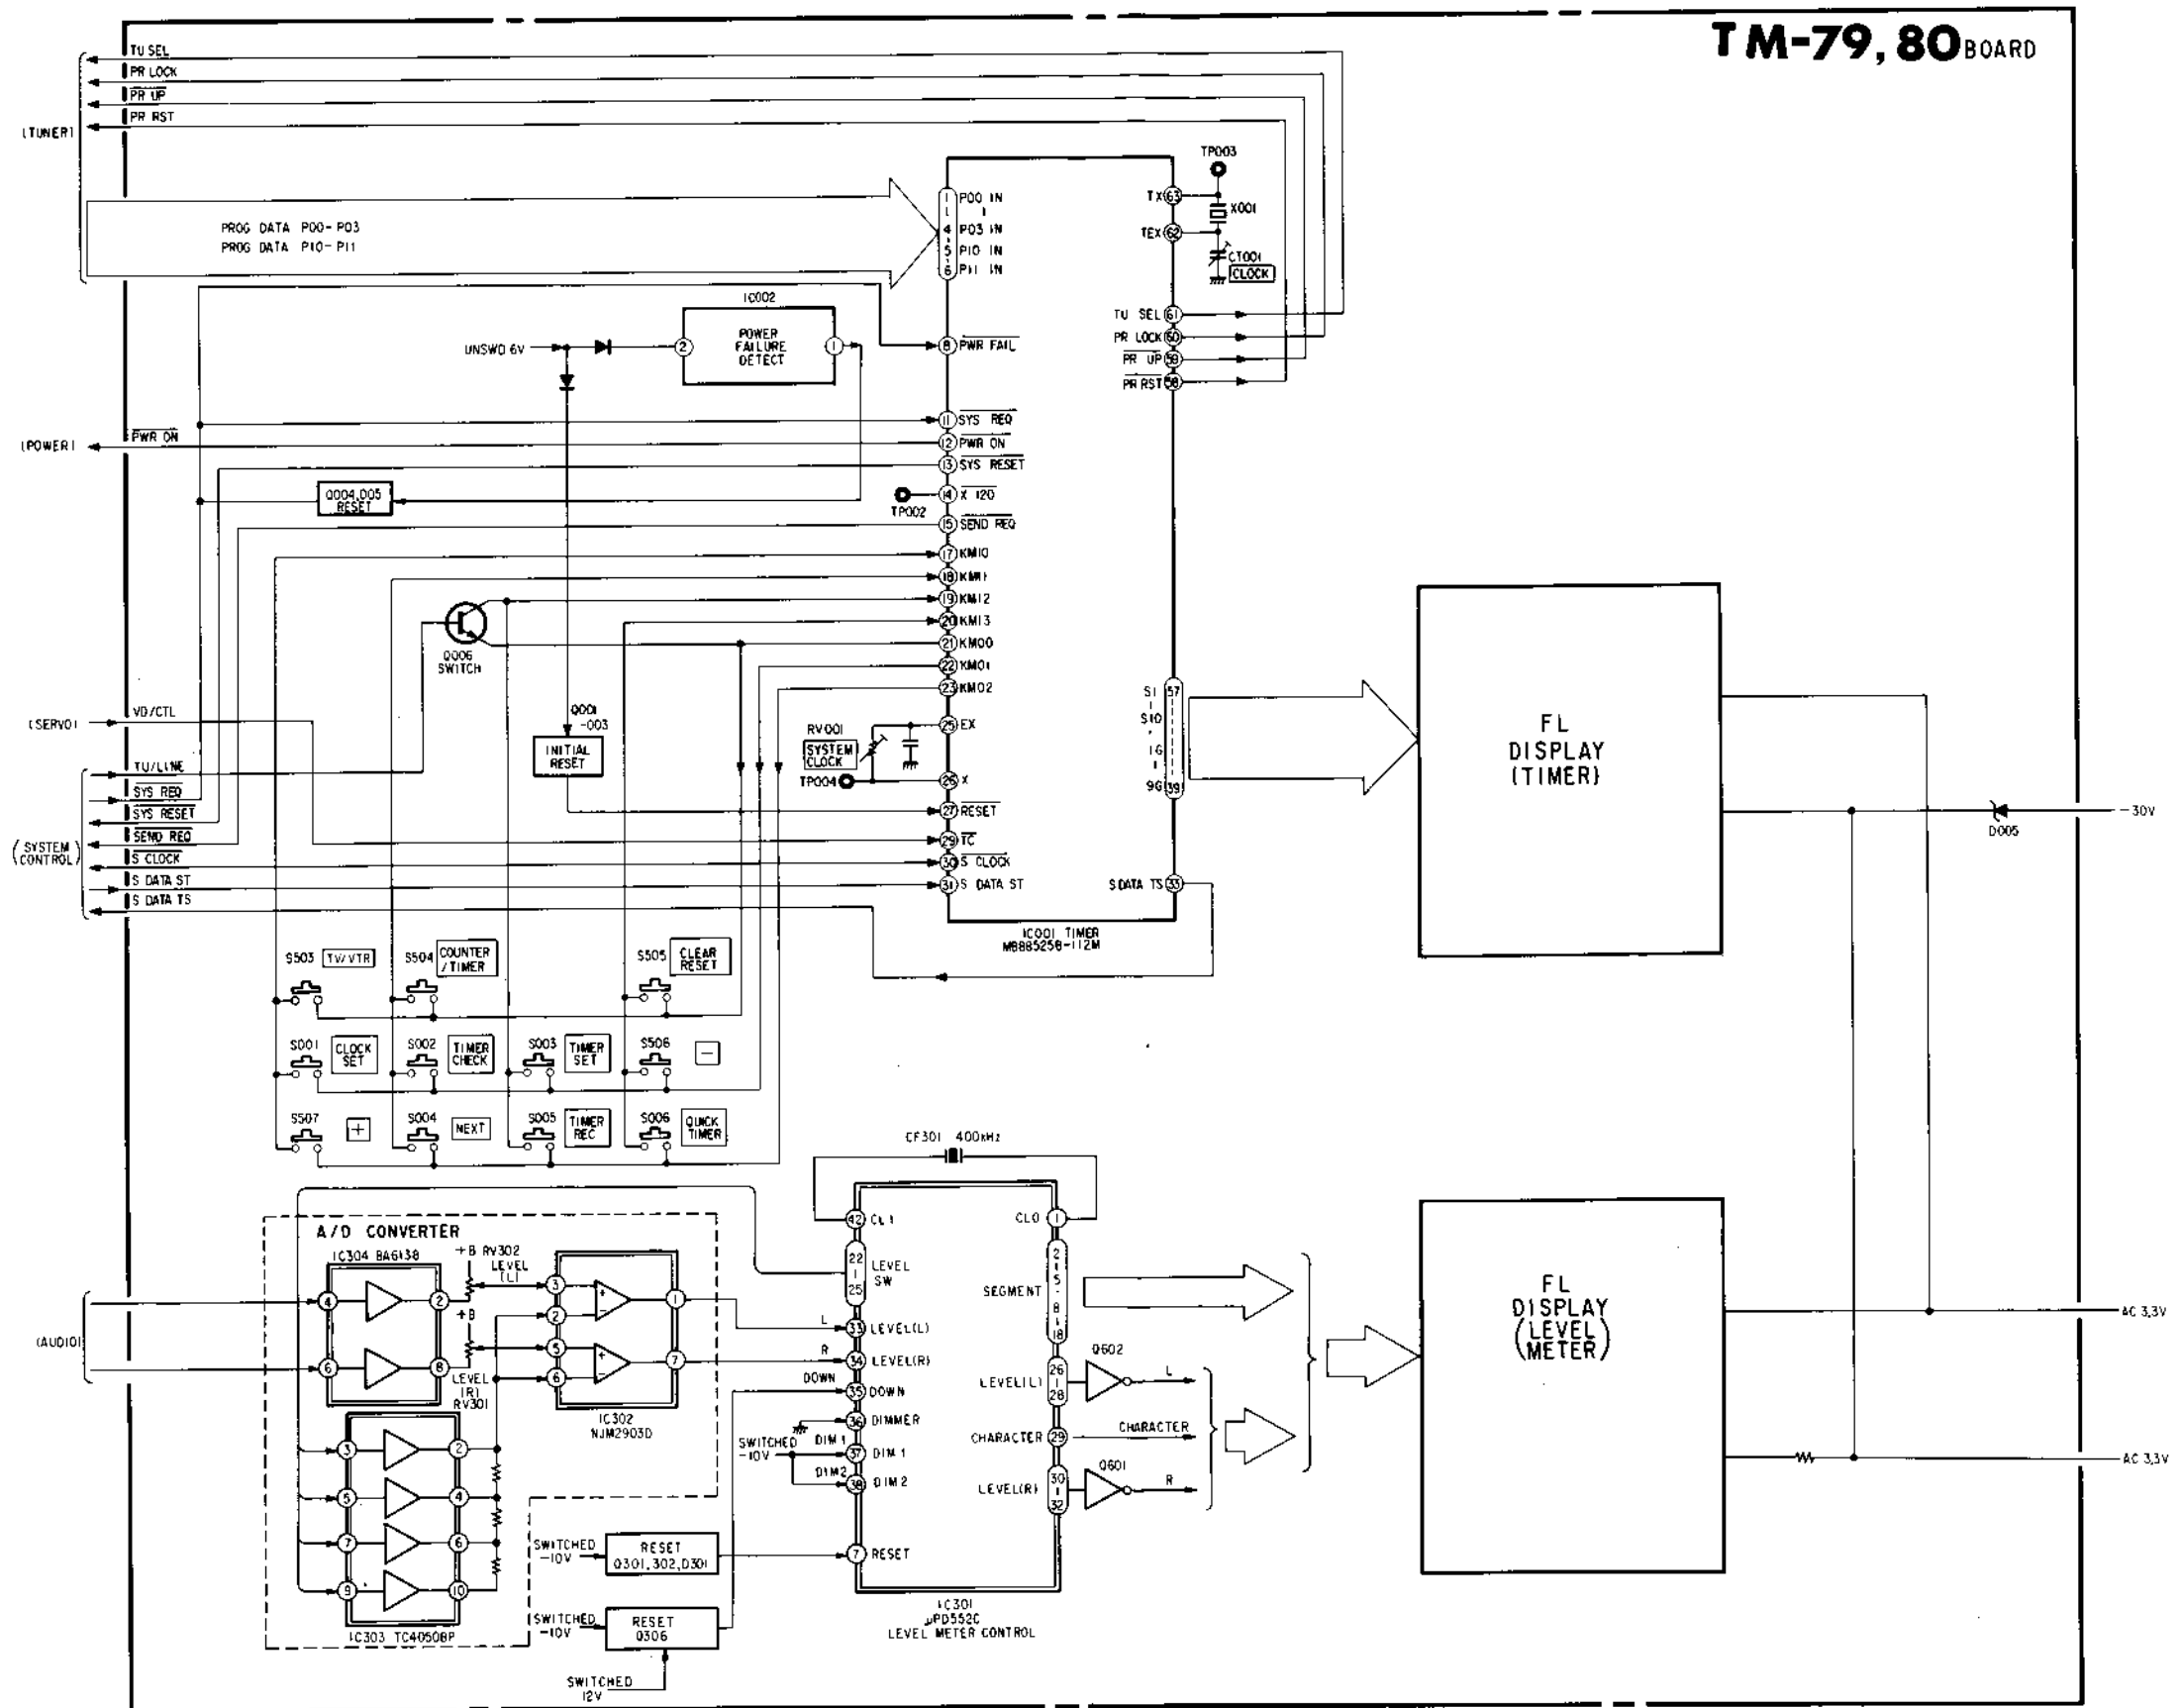

3-21. TUNER BLOCK DIAGRAM

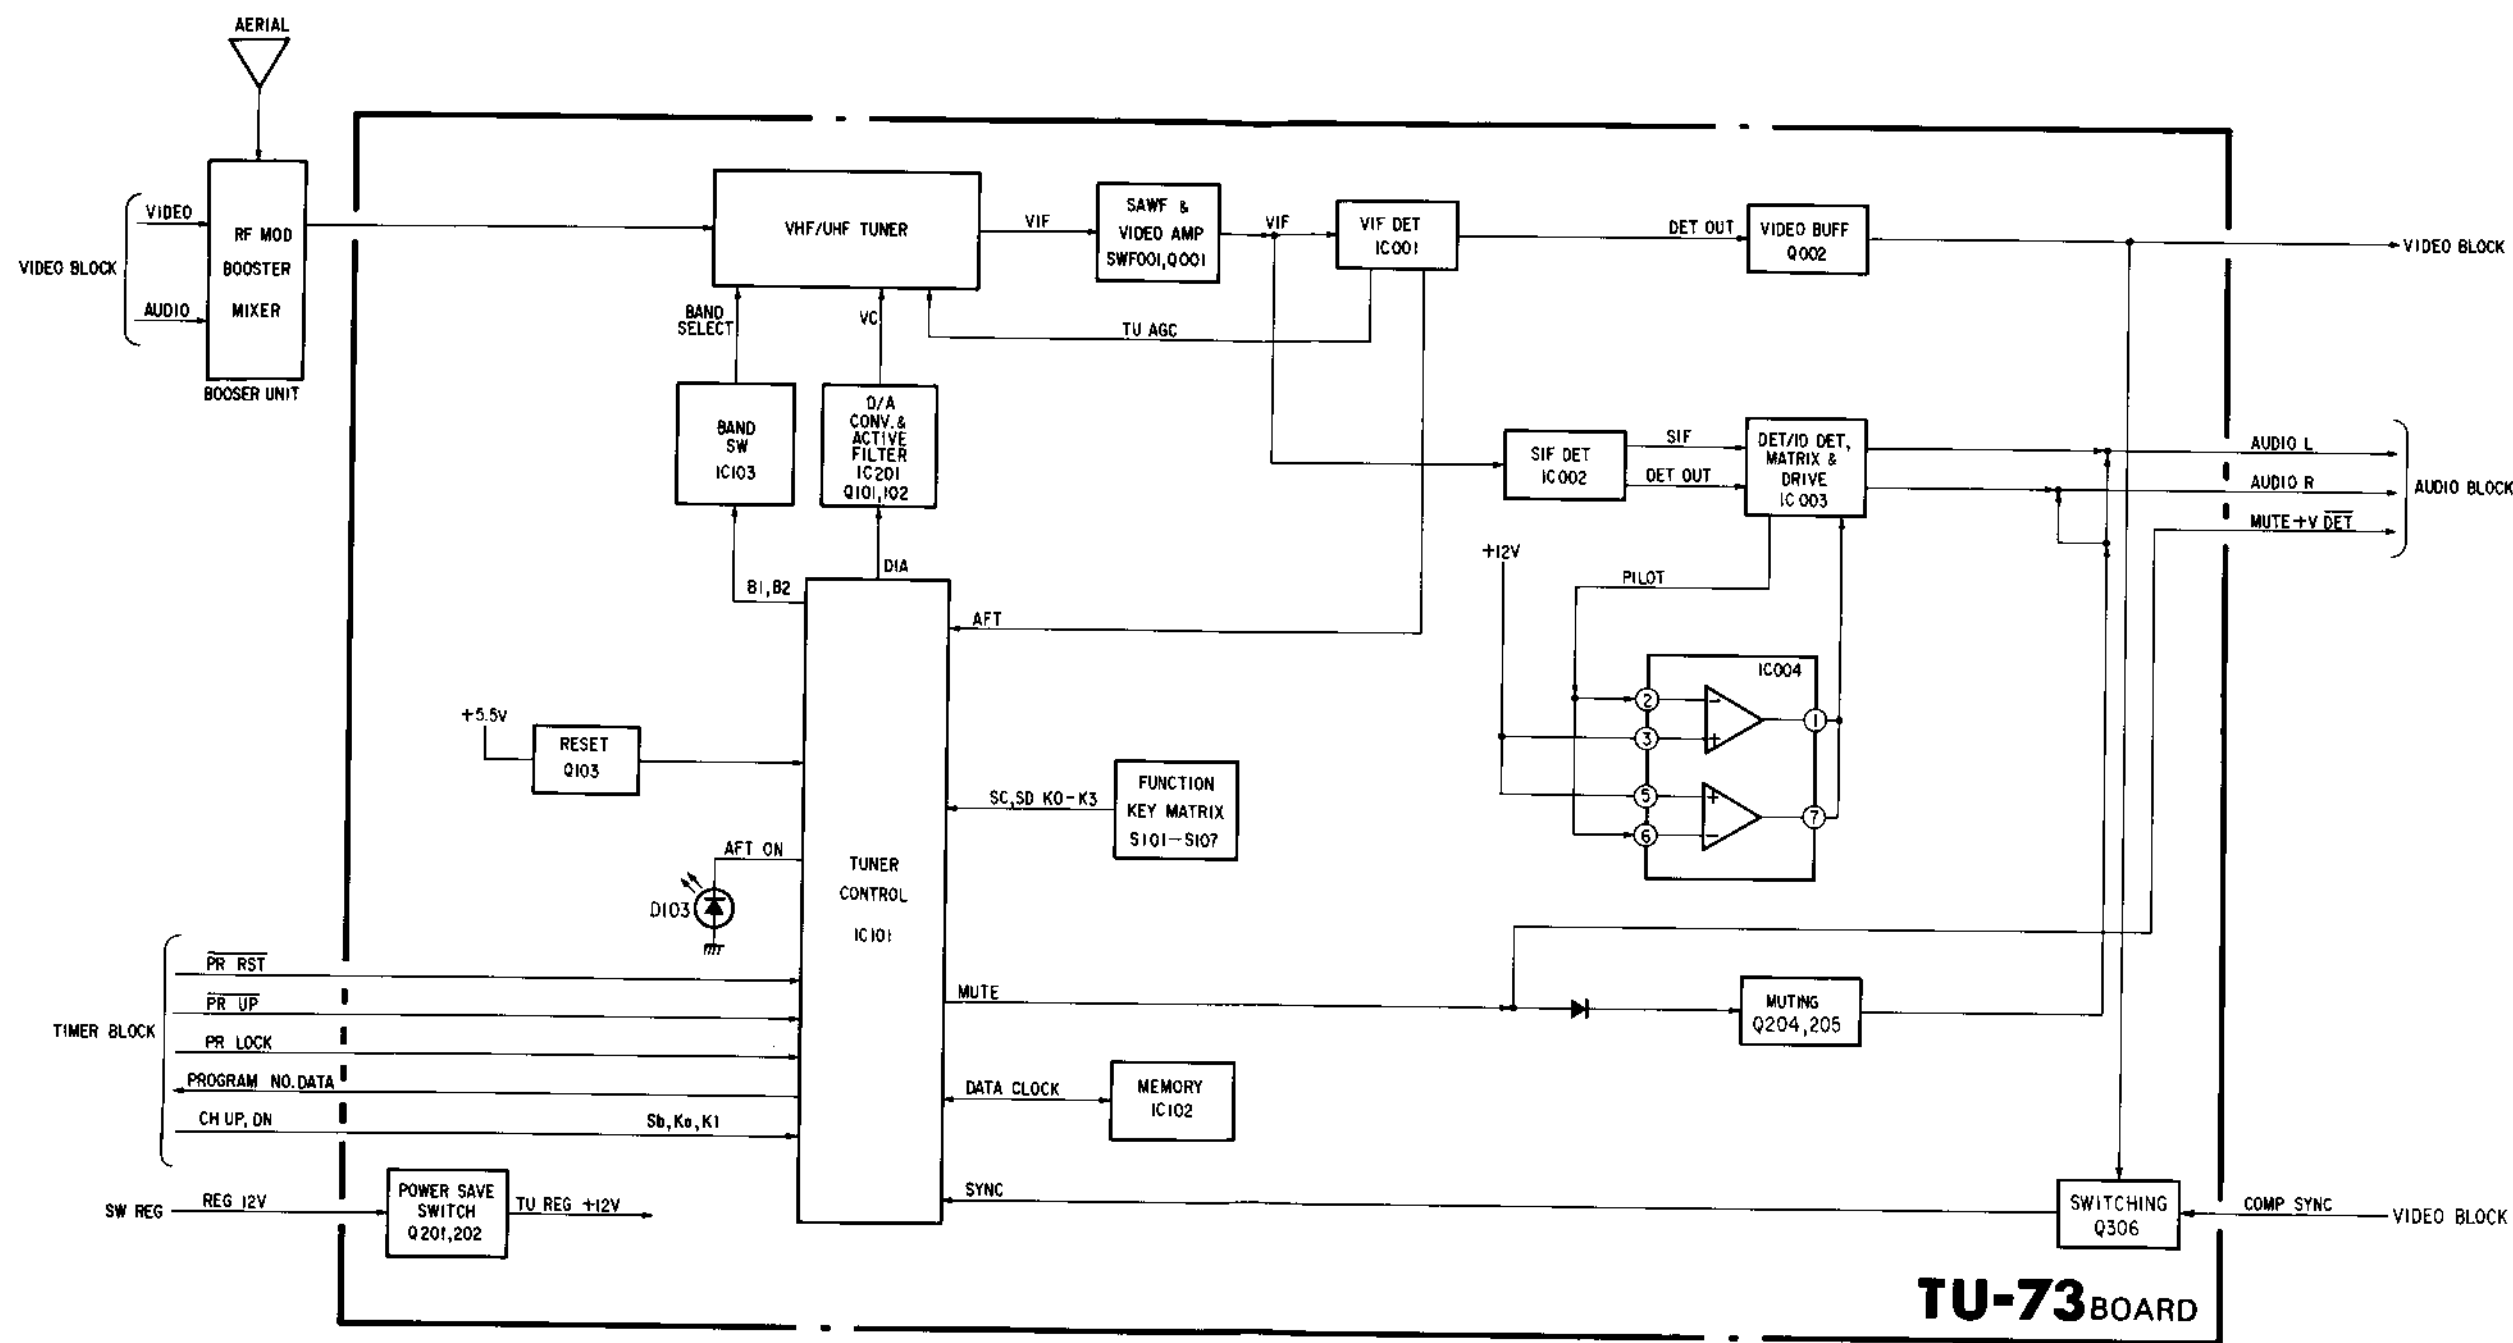

3-22. POWER BLOCK DIAGRAM

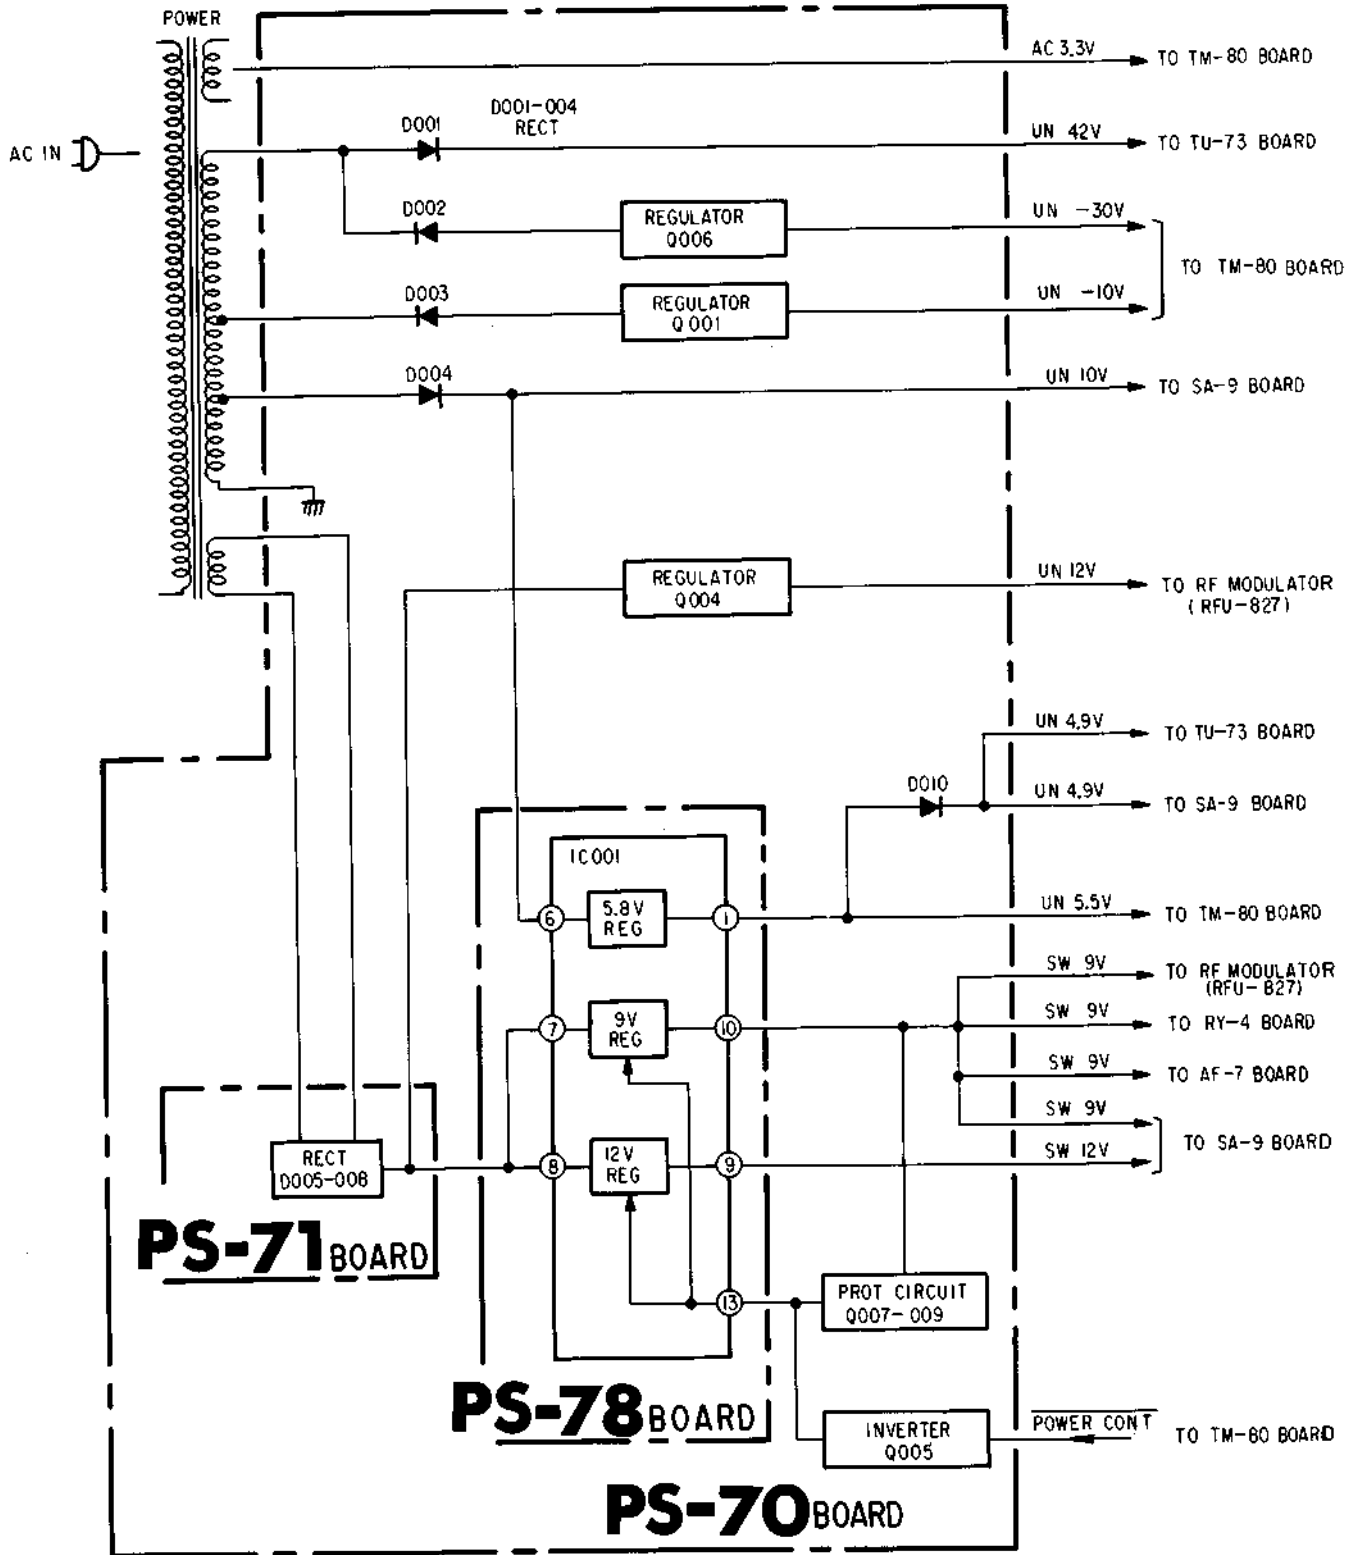

SCHEMATIC DIAGRAM, PRINTED WIRING BOARDS

4-1. FRAME SCHEMATIC DIAGRAM

4

5

6

7

8

9

10

11

12


13



14

15

16


A
B
C
D
E
F
G
H
I
J

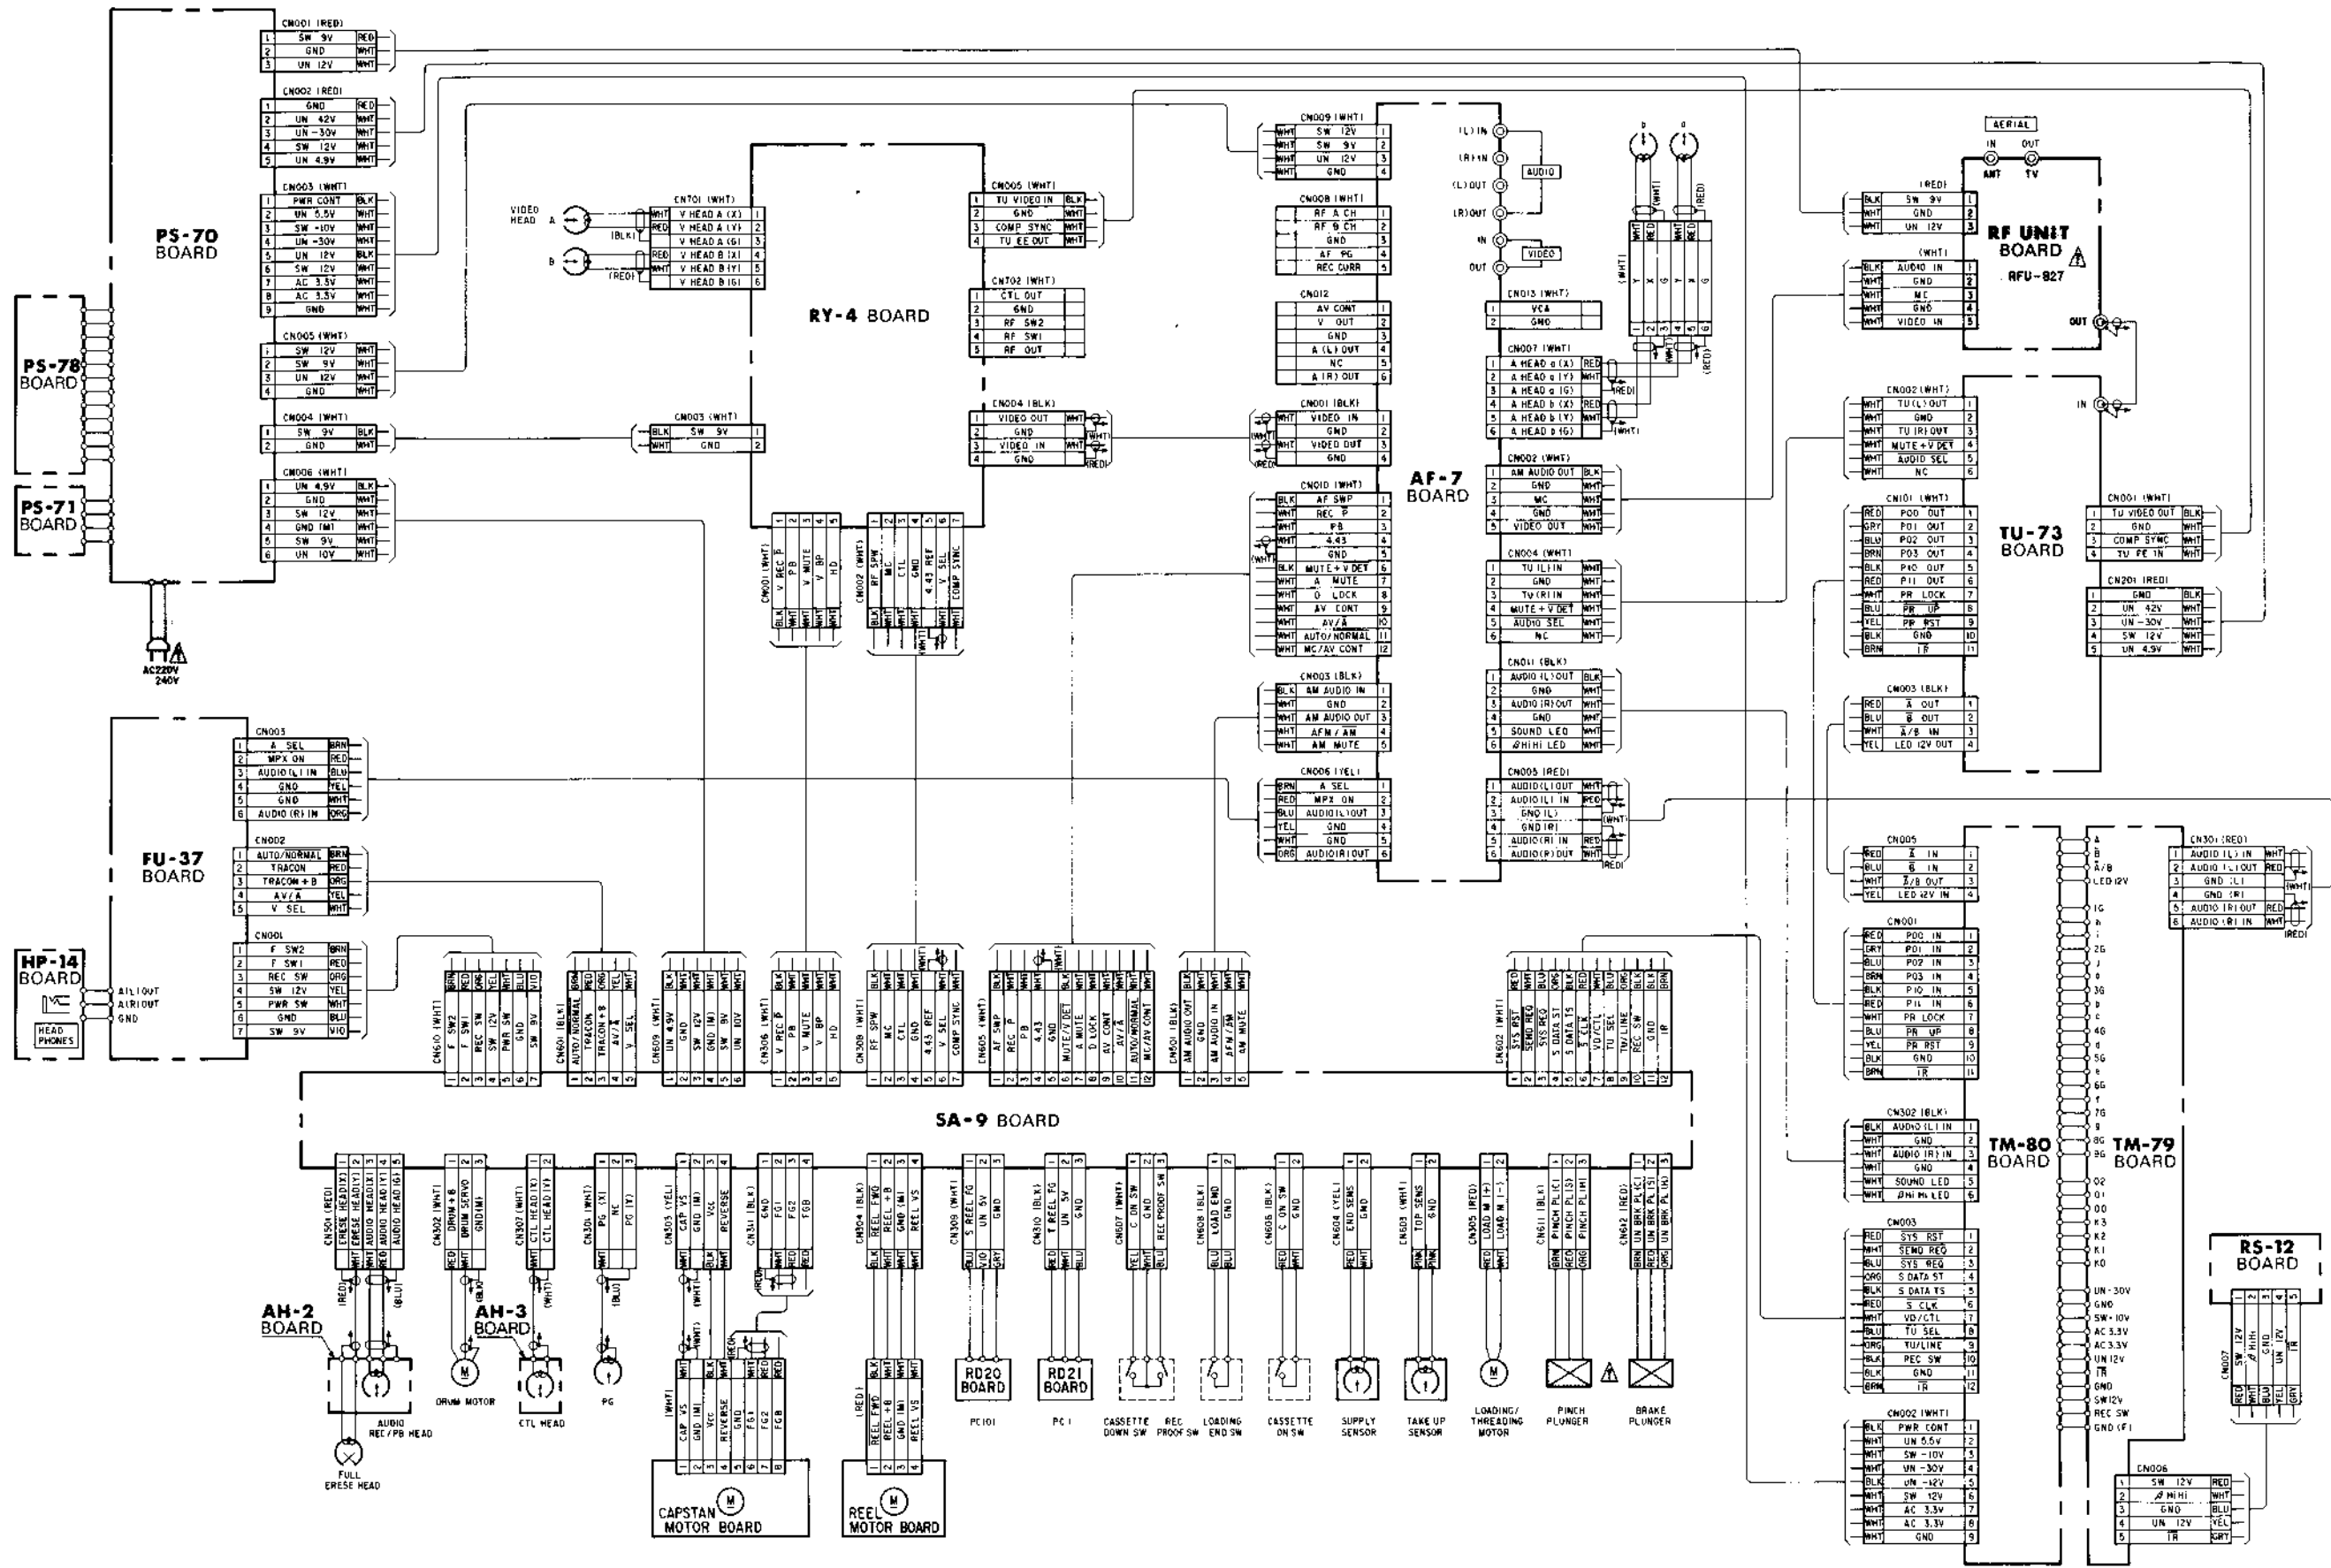


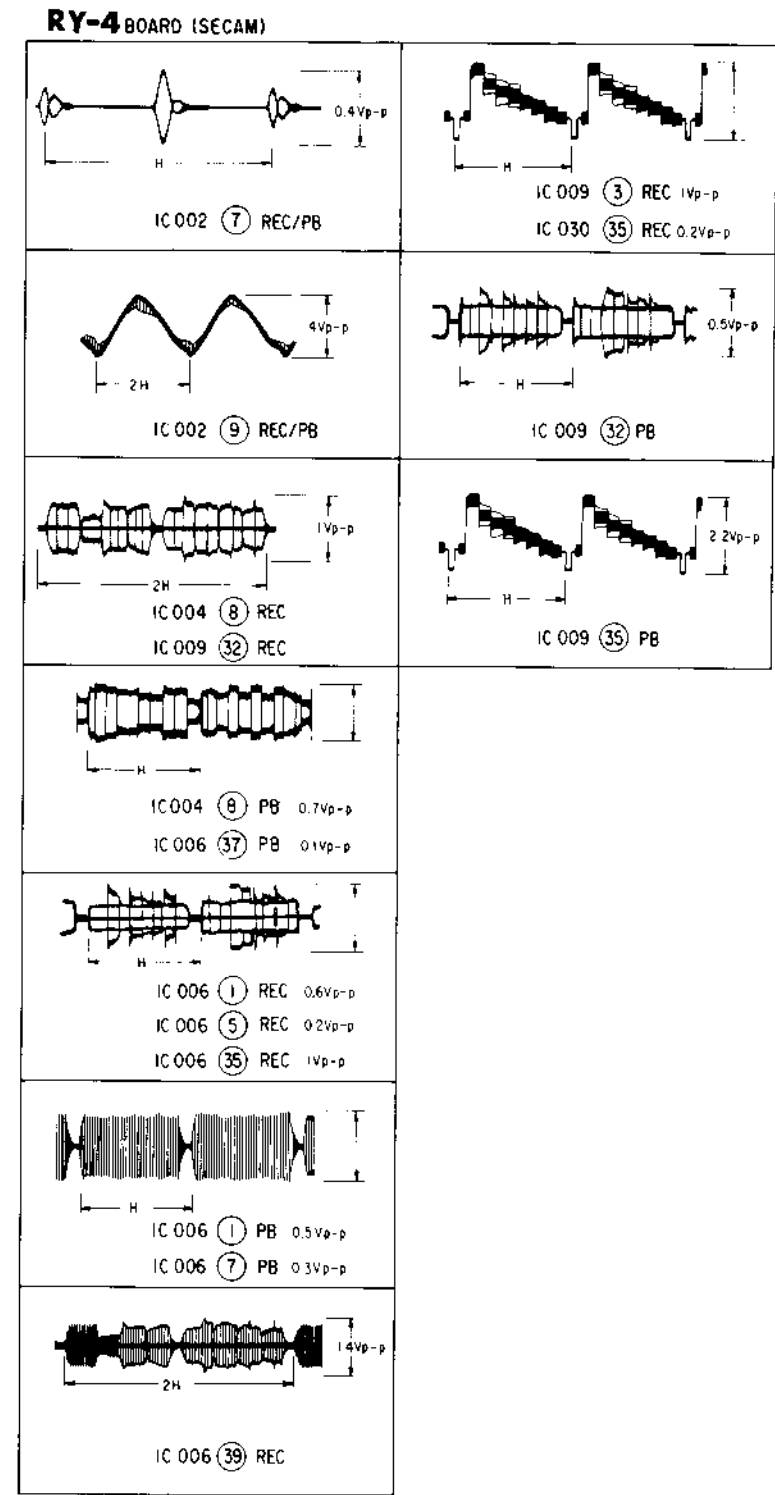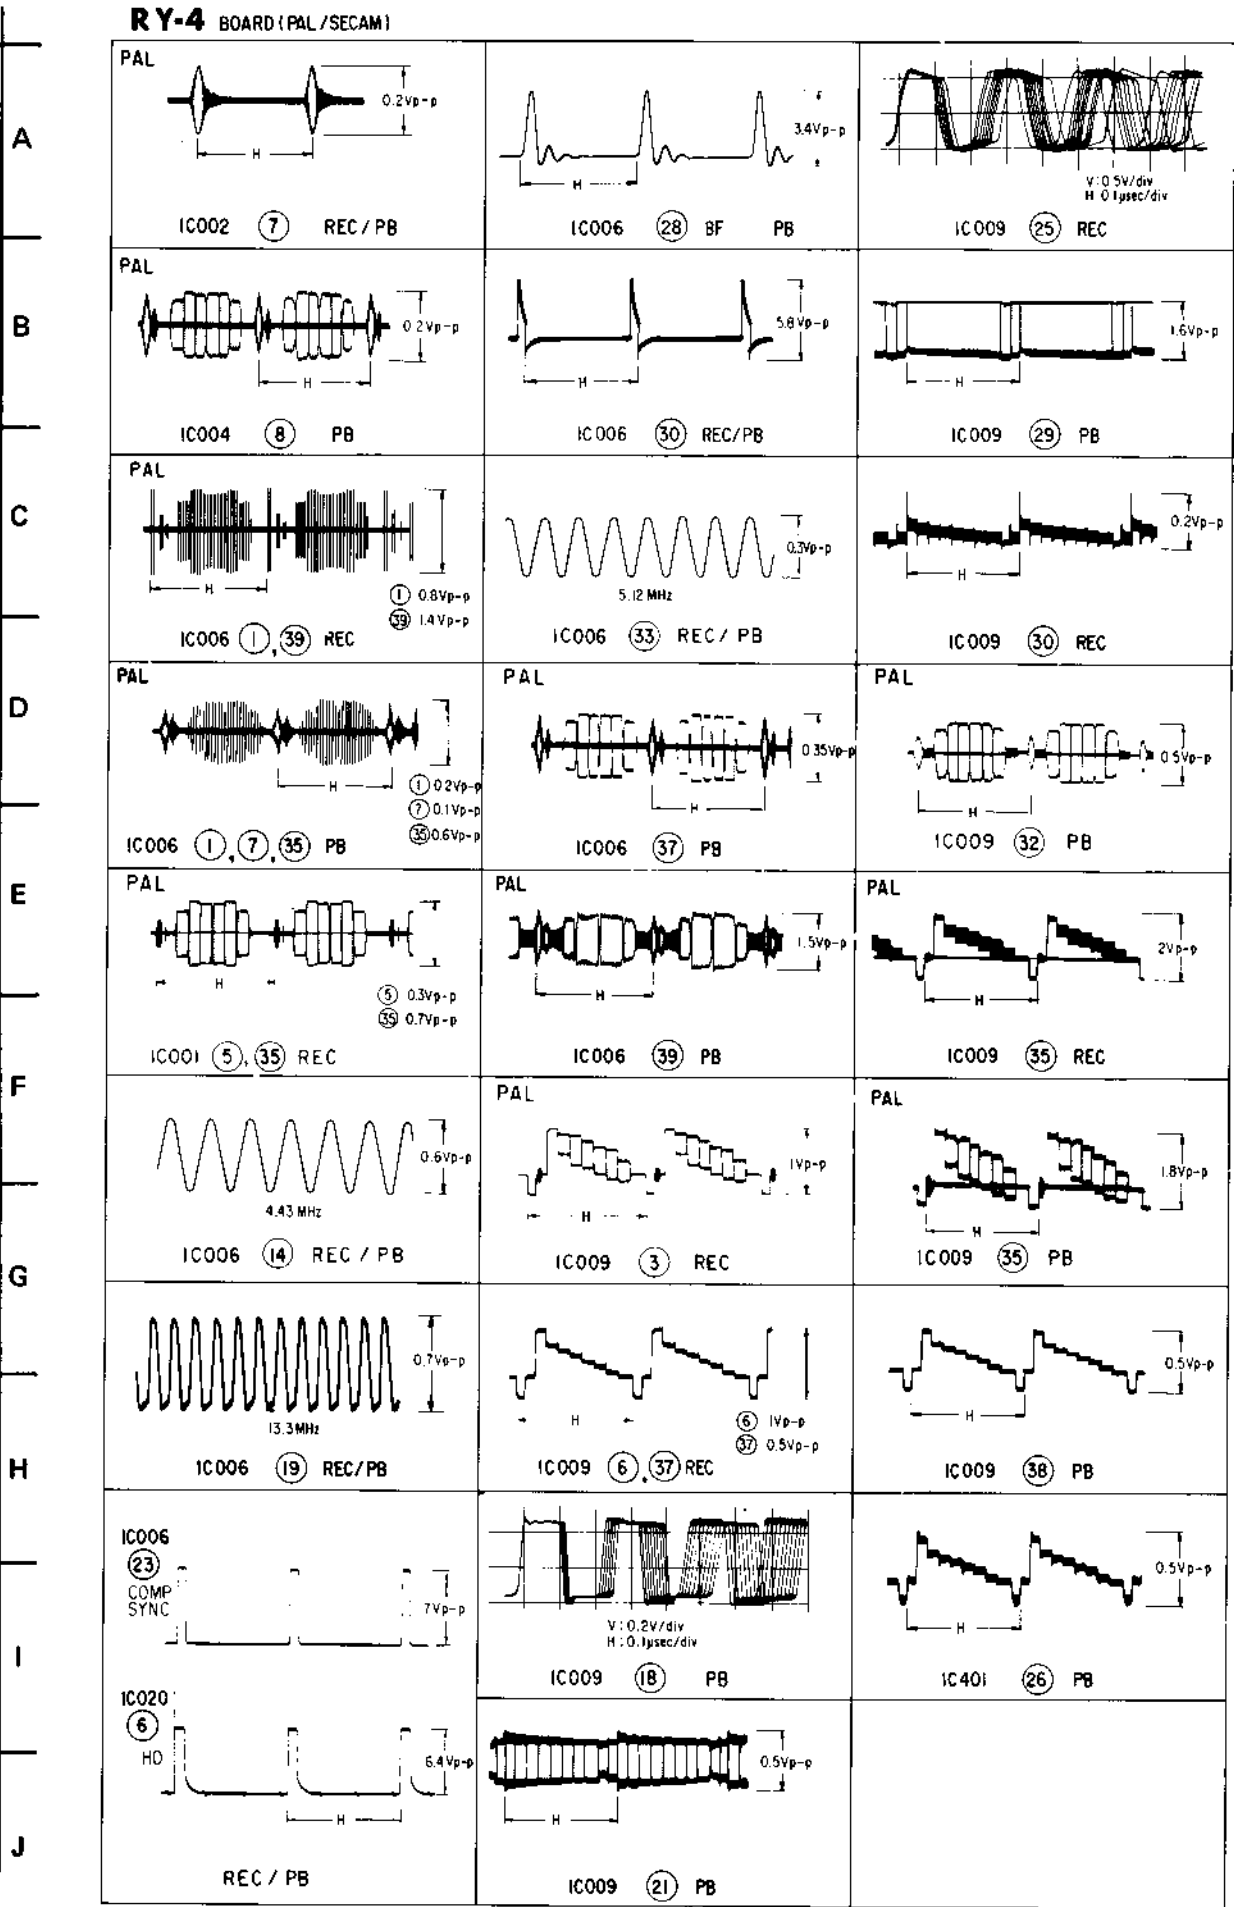

4-2. RY-4 (Y.C SIGNAL PROCESS) SCHEMATIC DIAGRAM


- Ref. No. RY-4 BOARD: 1,000 series -

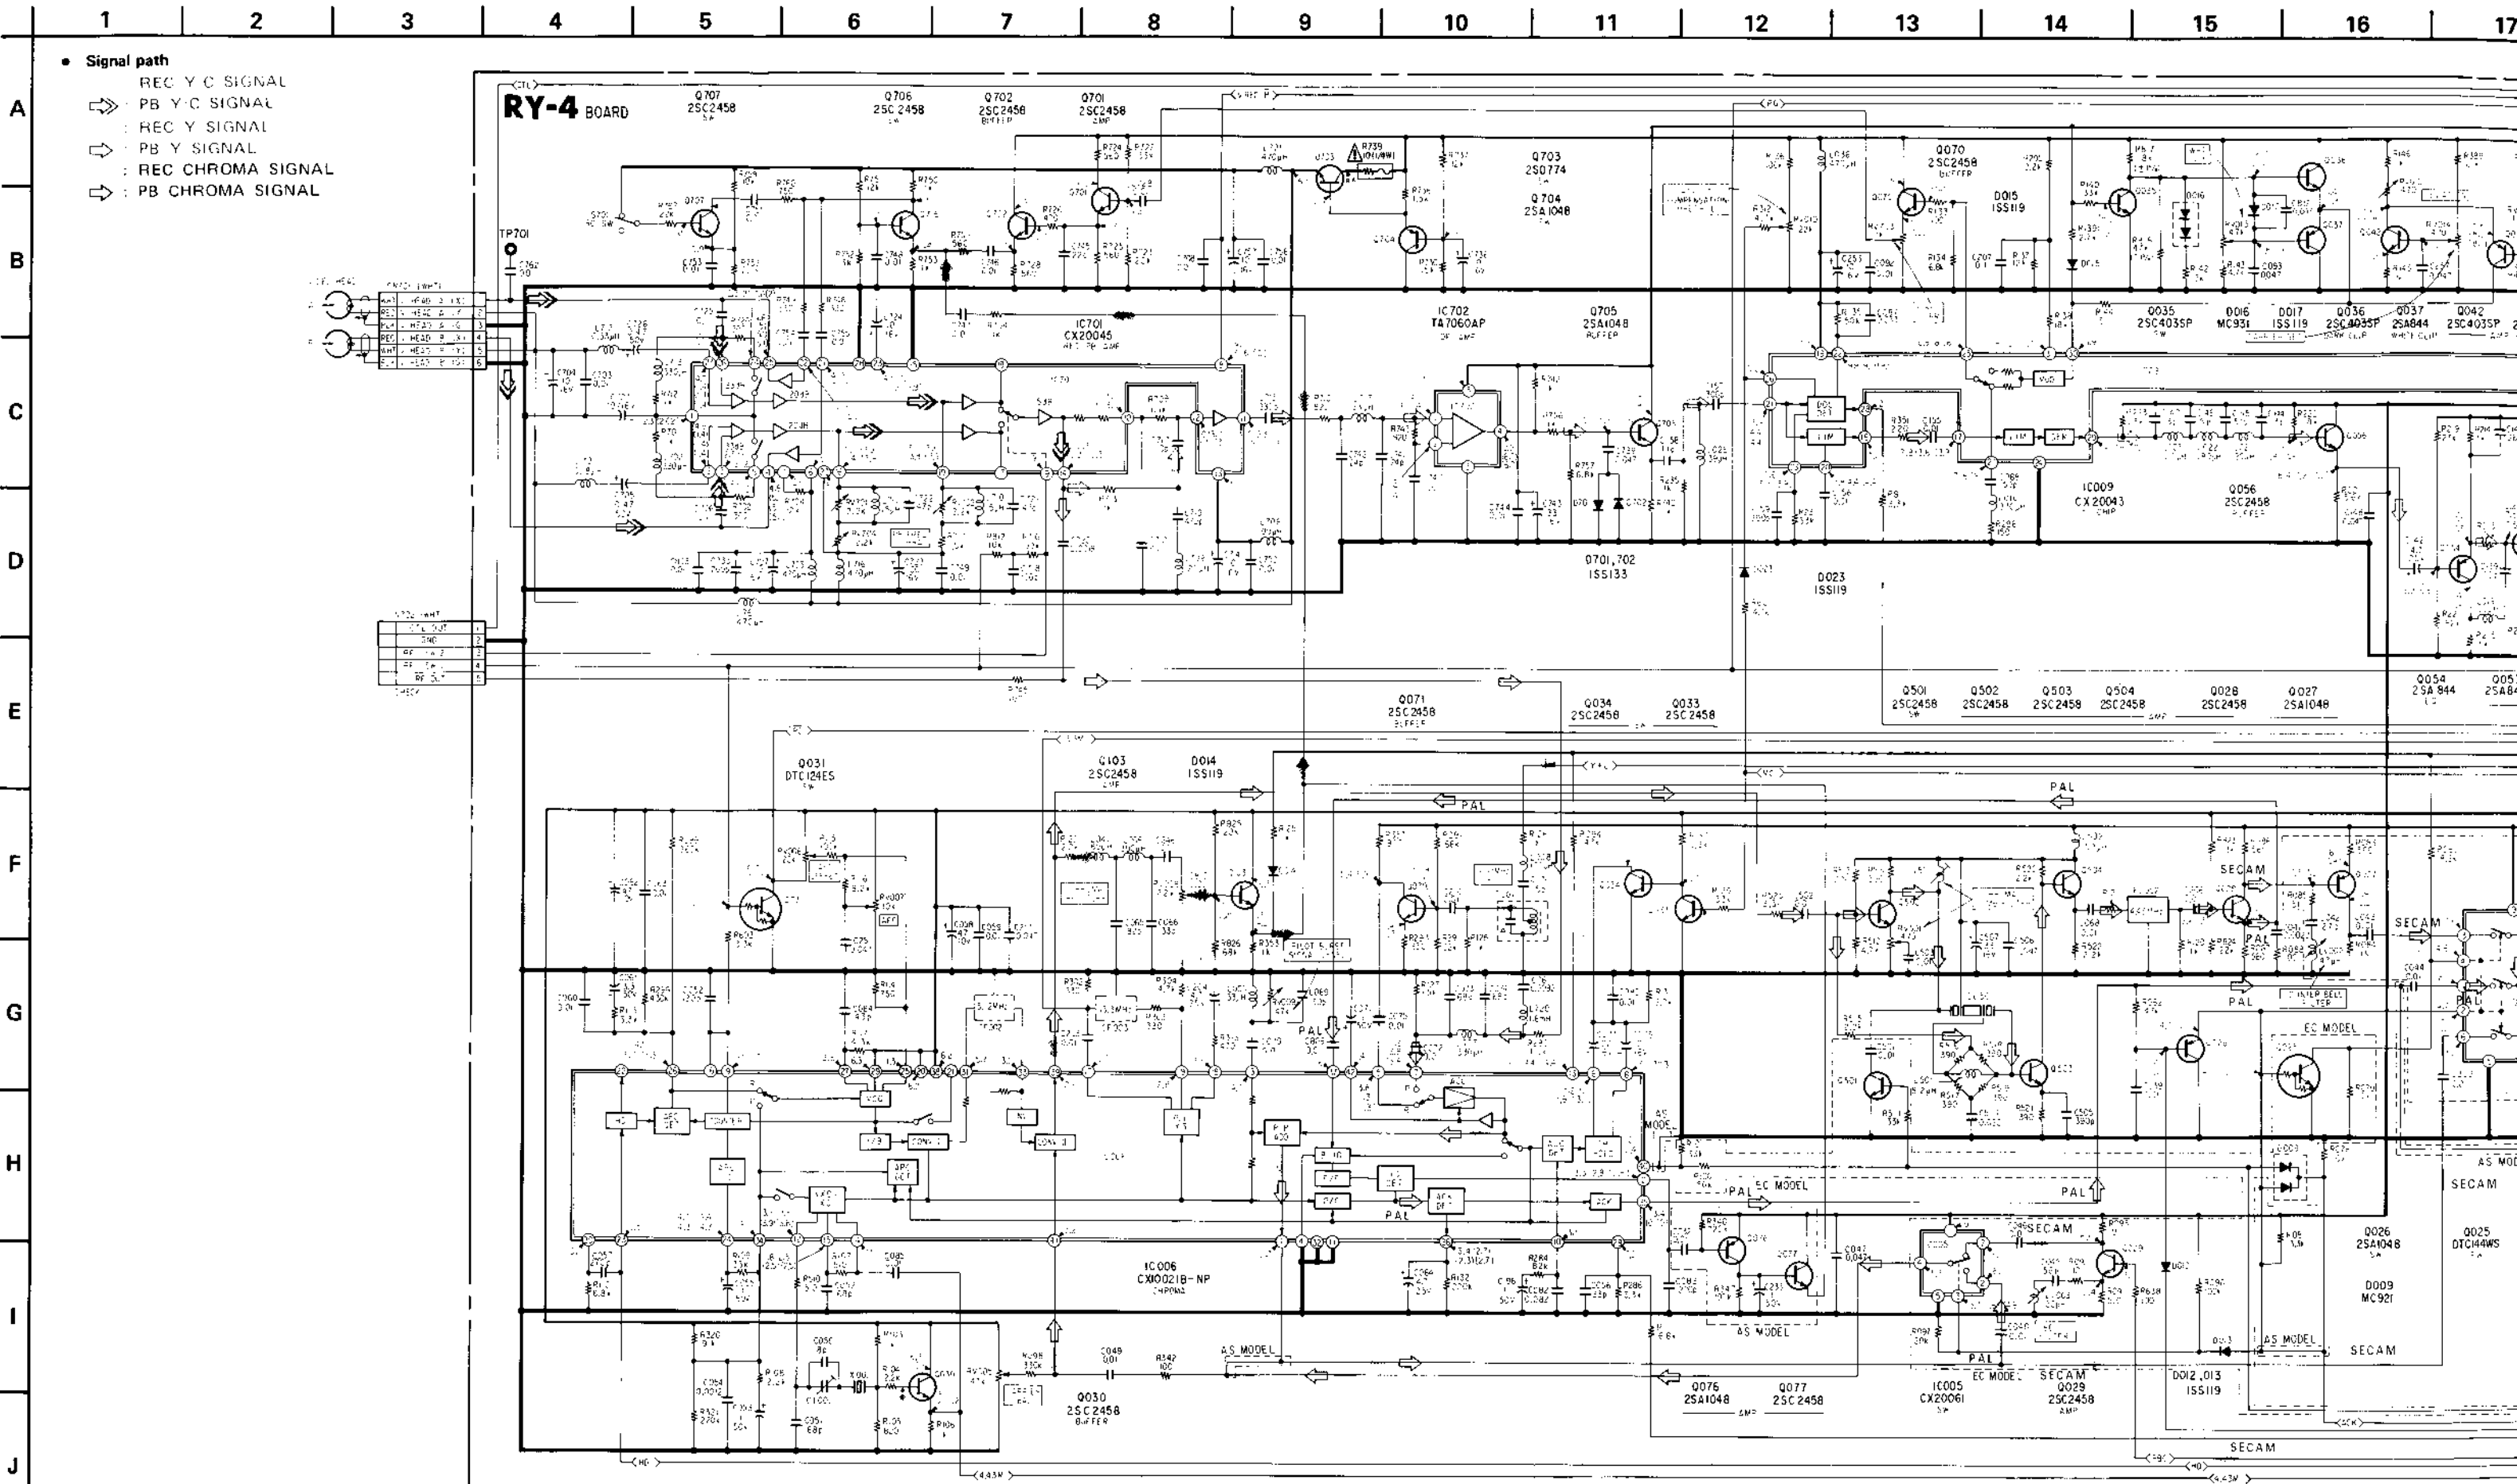

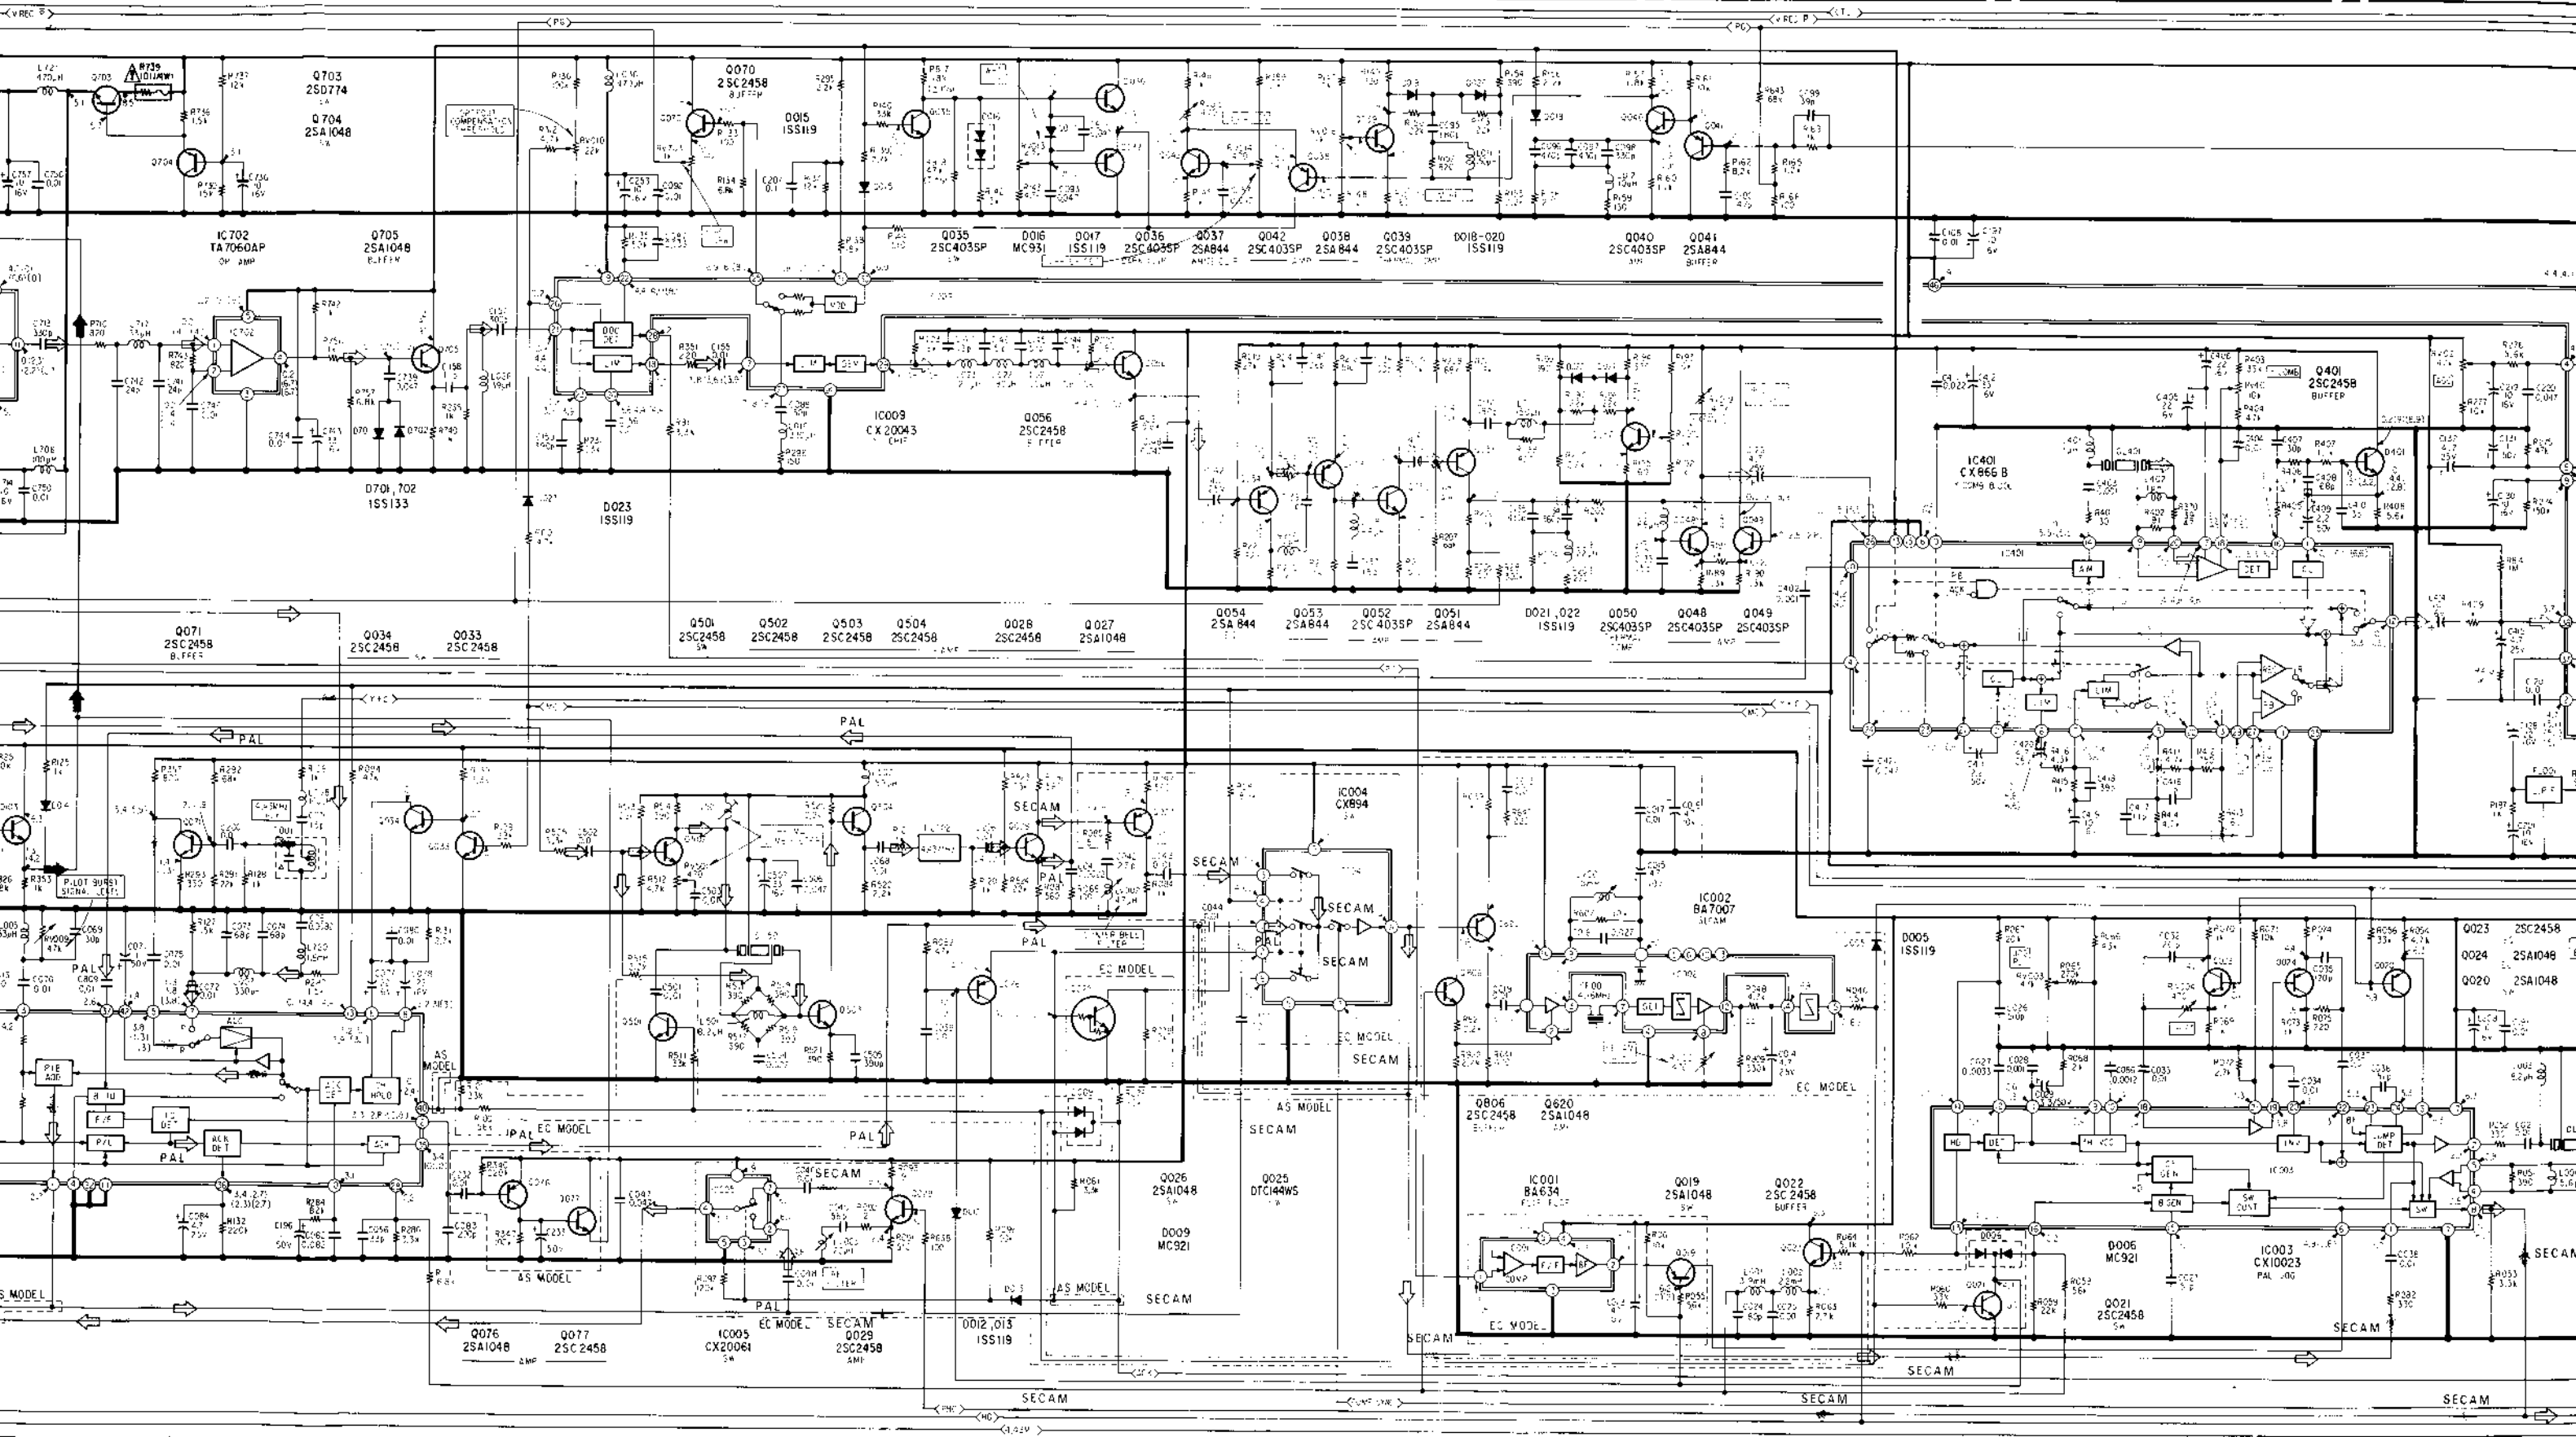

VIDEO VIDEO

18 19 20 21 22 23 24 25 26 27 28 29 30 31 32 33

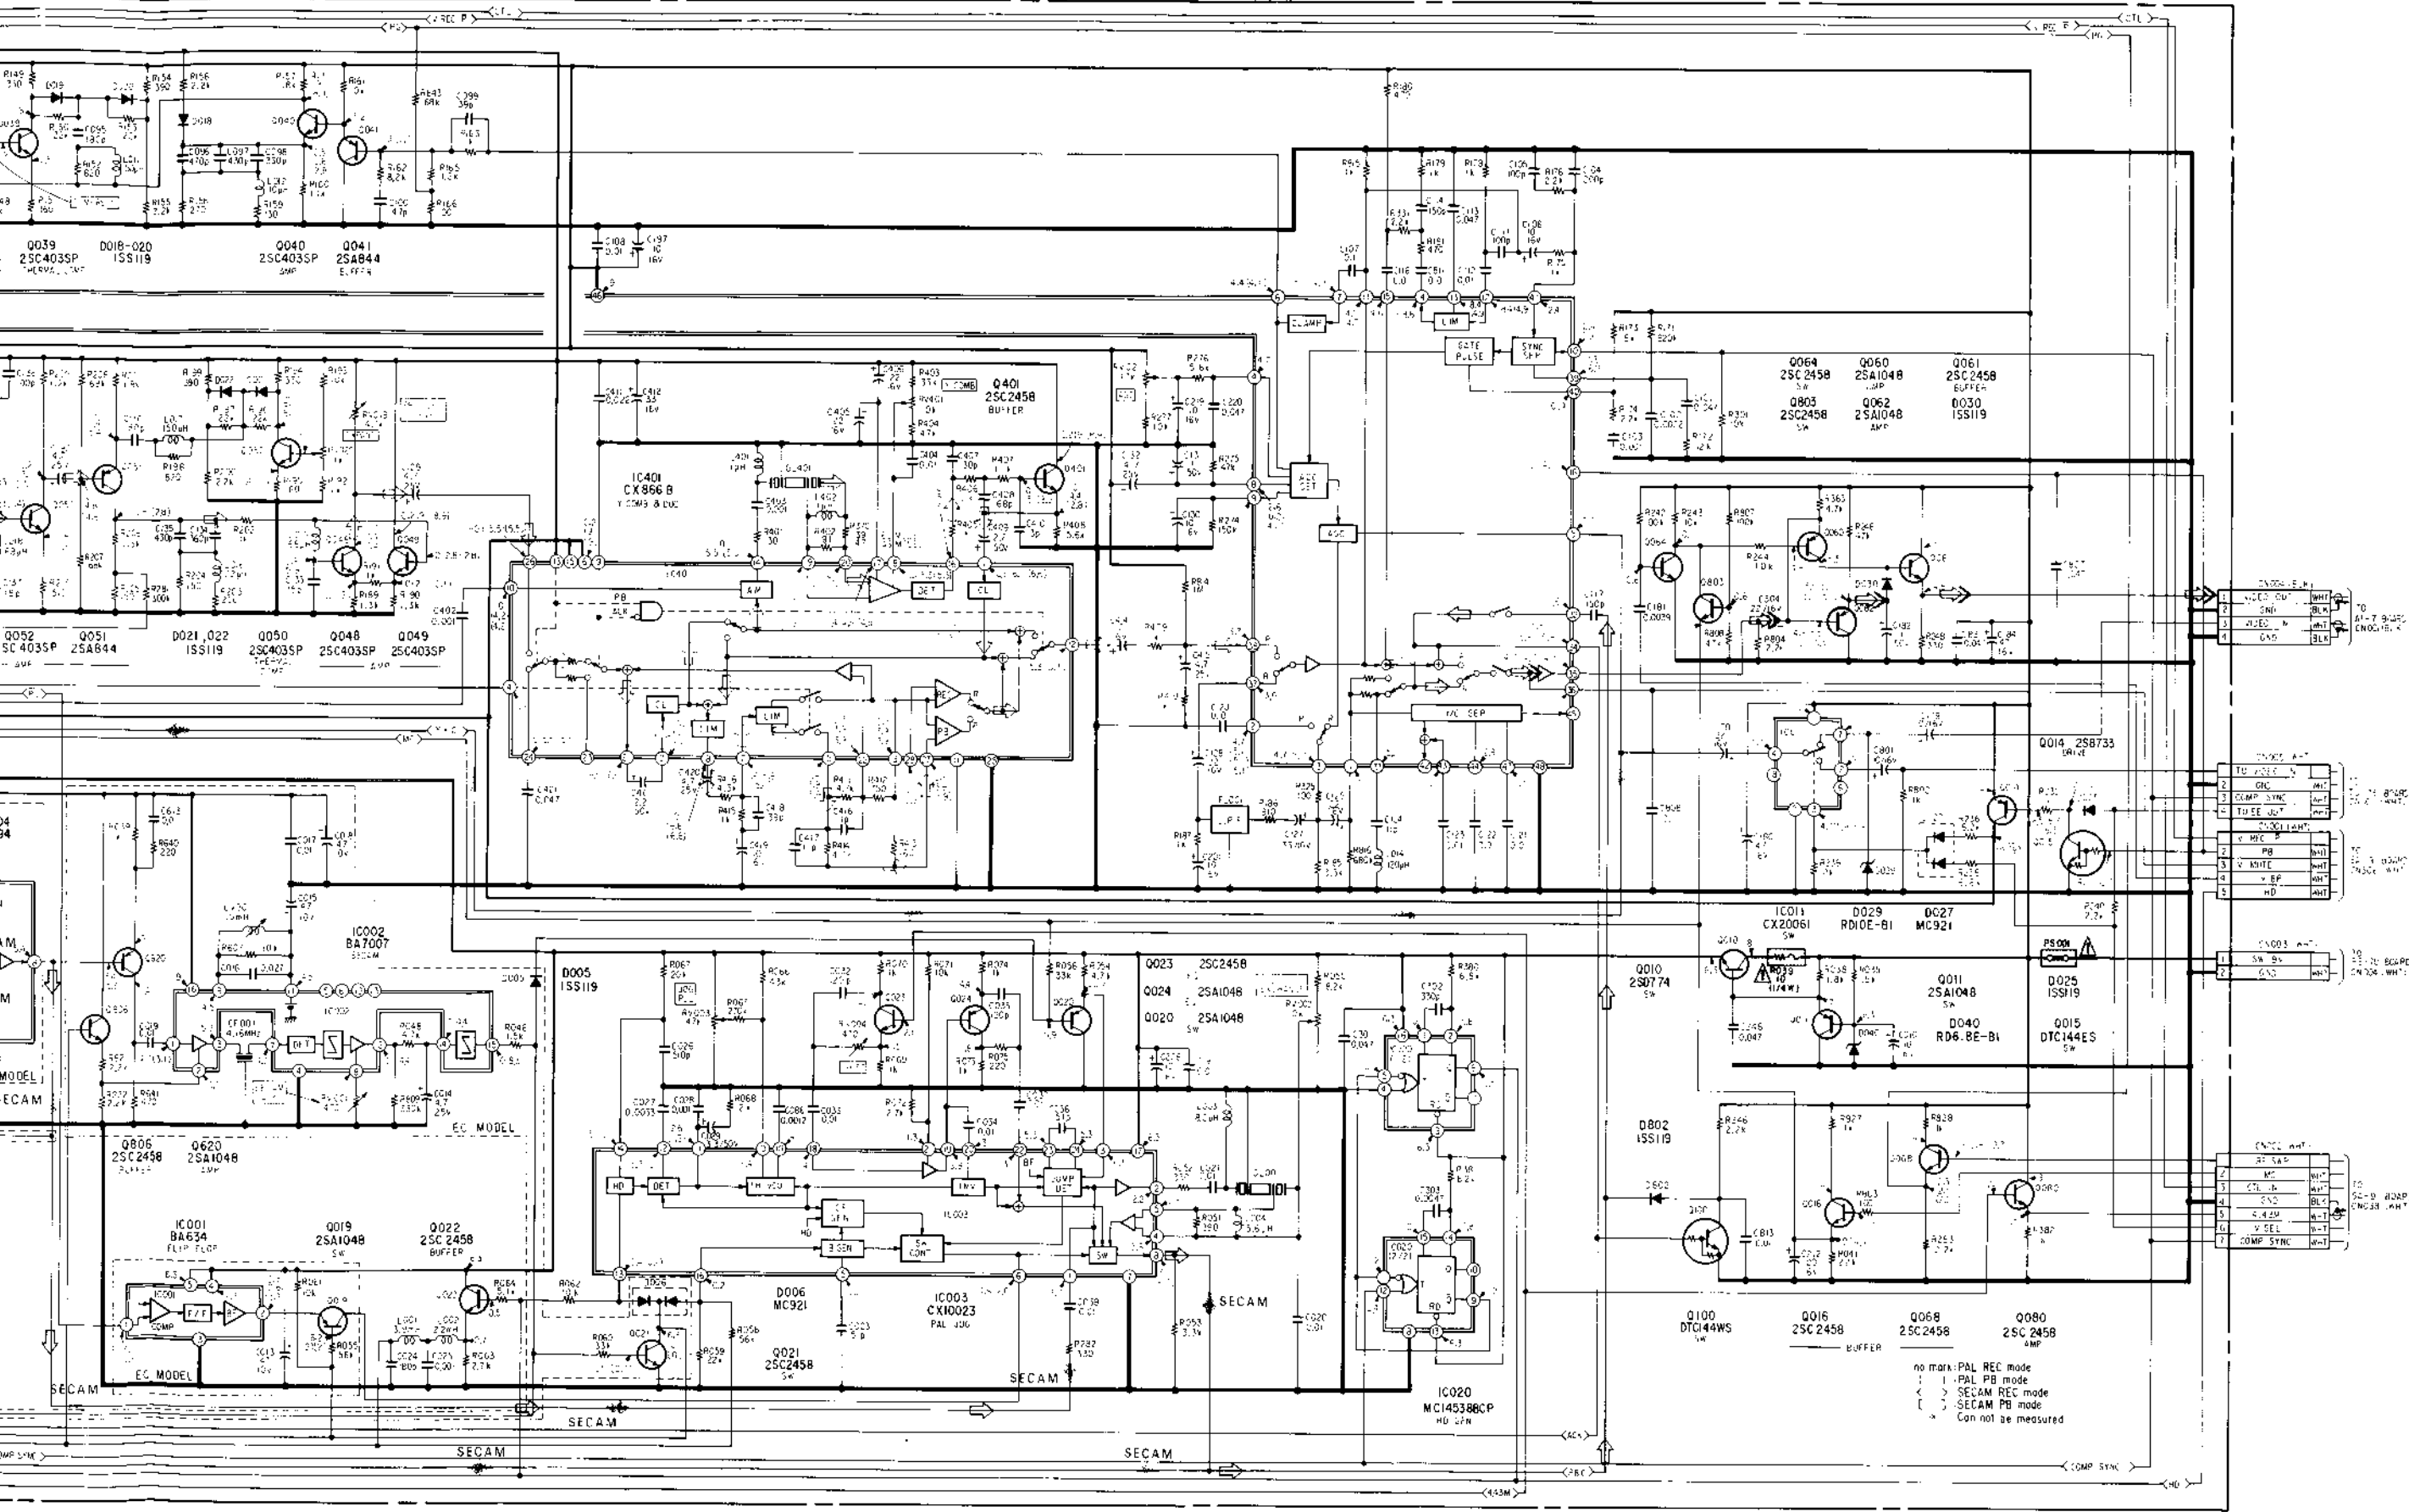

A
B
C
D
E
F
G
H
I

no mark - PAL REC mode
 1 - PAL PB mode
 < - SECAM REC mode
 > - SECAM PB mode
 [] - SECAM not measured

1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16


- Note:**
- All resistors are in ohms, $\frac{1}{2}W$ unless otherwise noted. $k\Omega$: 1000 Ω , $M\Omega$: 1000 $k\Omega$
 - All capacitors are in μF unless otherwise noted. p : μF 50WV or less are not indicated except for electrolytics.
 - All variable and adjustable resistors have characteristic curve B, unless otherwise noted.
 - : nonflammable resistor.
 - : fusible resistor.
 - The red lines show the main voltages.
 - All voltages are dc measured with a VOM (10 $M\Omega$).
 - : B+ bus.


Note: The components identified by shading and mark are critical for safety. Replace only with part number specified.

When indicating parts by reference number, please include the board name.

Q	401	IC401	056	037	IC009	020	IC003	021	620	IC002
IC	050	054	039	041	035	036	024	023	806	028,027
	048	053	040	070,703	070,703	042	504	503	103	IC004
	705	IC702	701	706	707	IC020	061	IC006	501	026
							100	019	502	025
							IC001	IC001	022	IC005
							011	015	071	029
							014	068	IC011	076
D	701,702	021	022	020	016	017	005	802	006	012
				018	019		015	023	013	009
							040	025	002	014
ADJ	020	019	401	704	013	010		029	003	004
T P	703		701	702	016	014	TP701	021	501	005
								006	007	009
								002	008	001




[RY-4 BOARD]

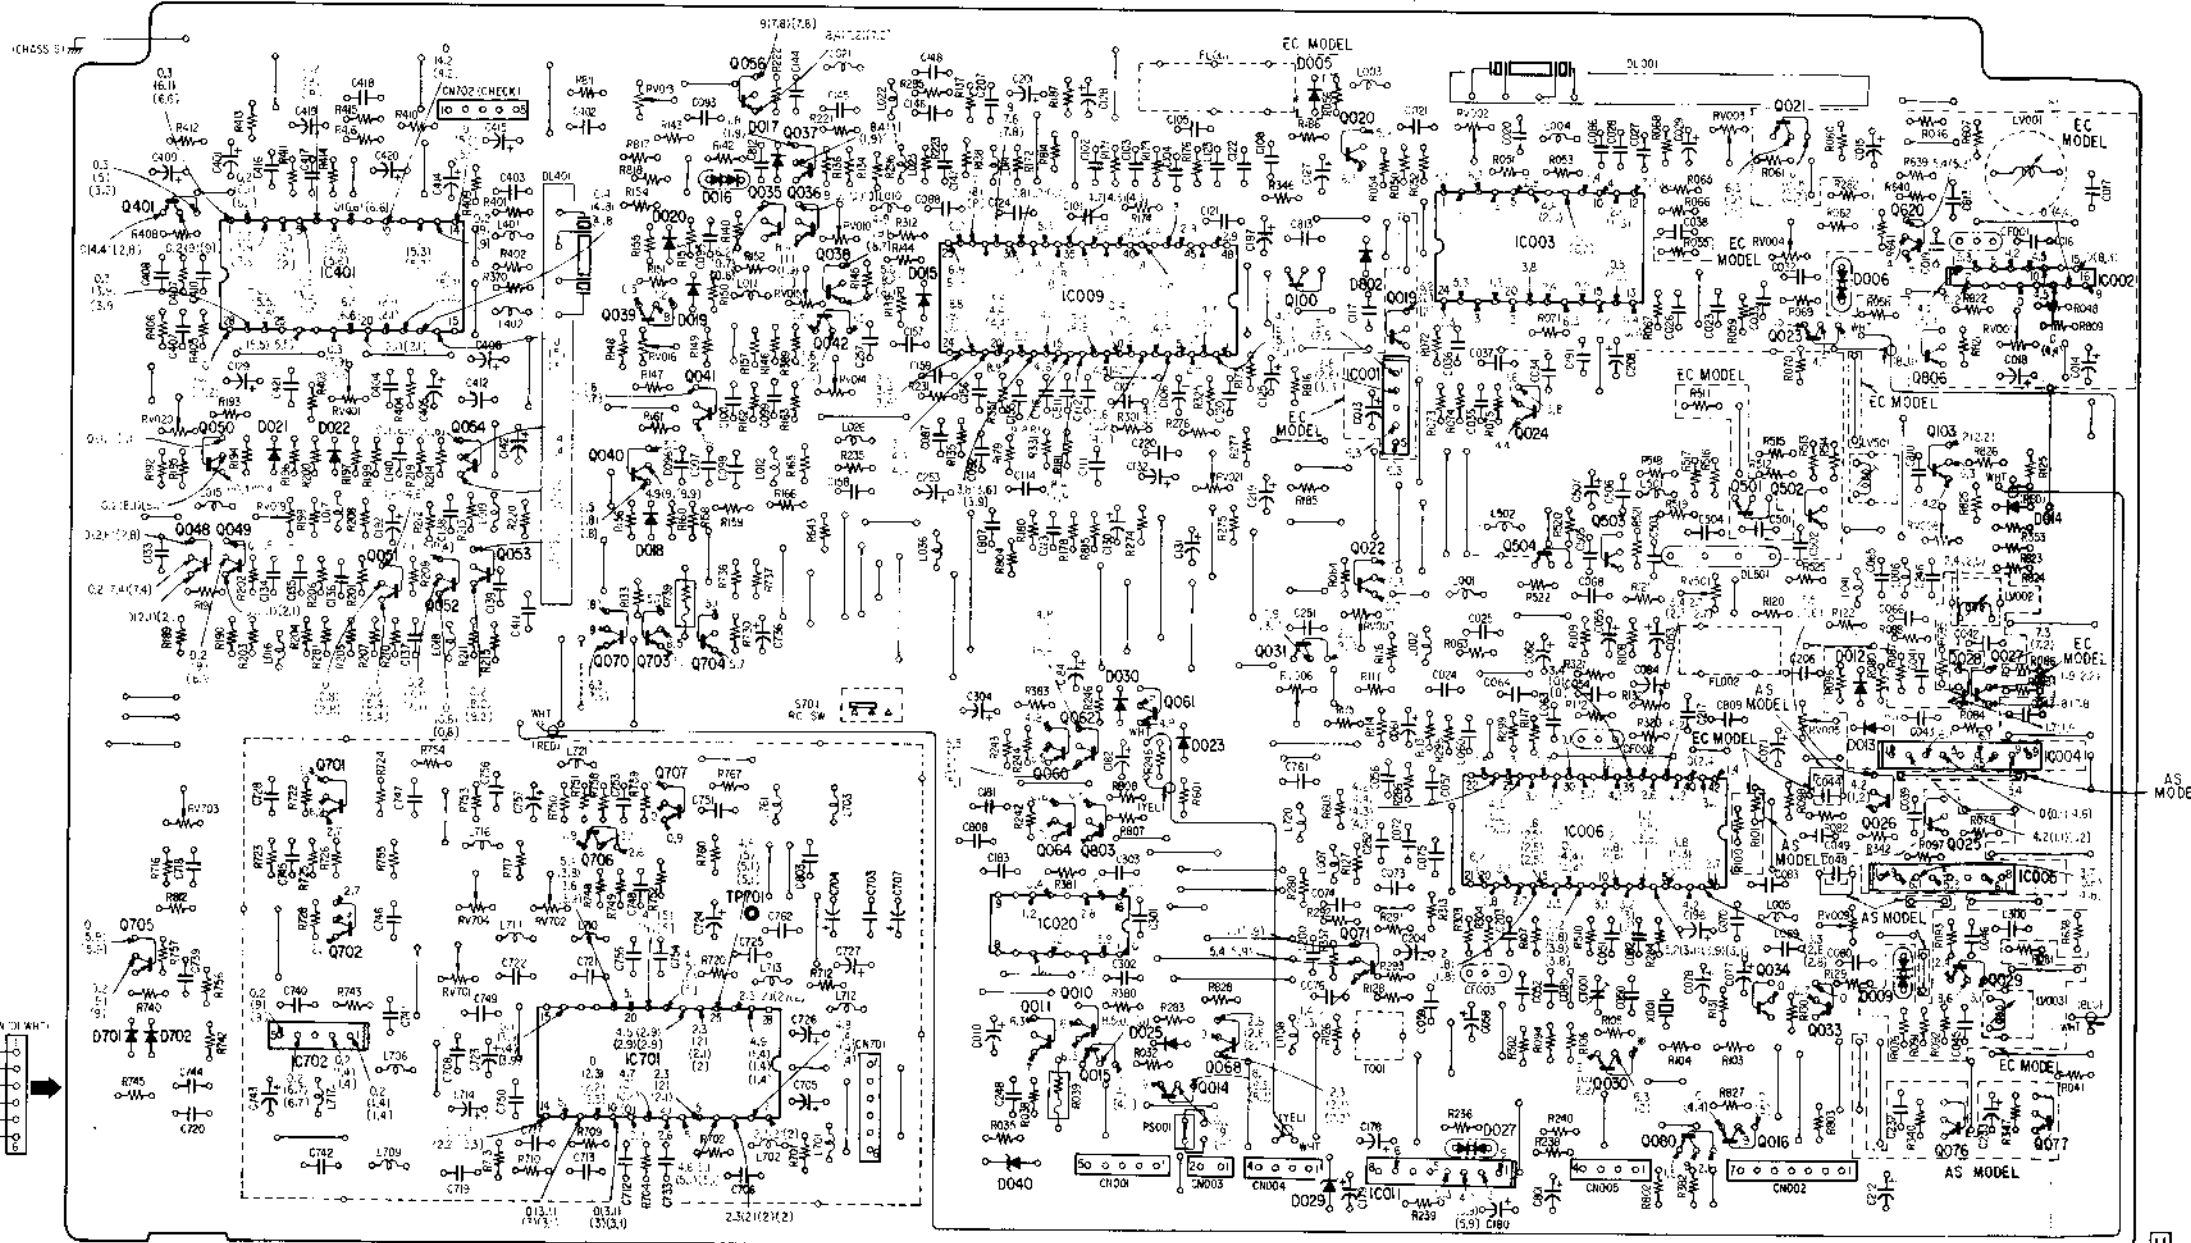

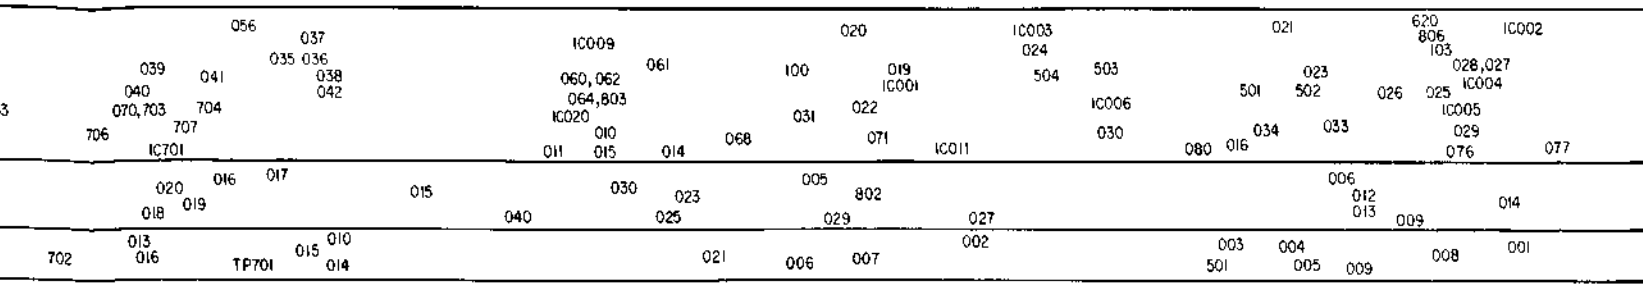


- Note:**
- — : Indicates a leadwire mounted on the component side.
 - — : Indicates a leadwire mounted on the printed side.
 - : soldering side.
 - : B + pattern

When indicating parts by reference number, please include the board name.

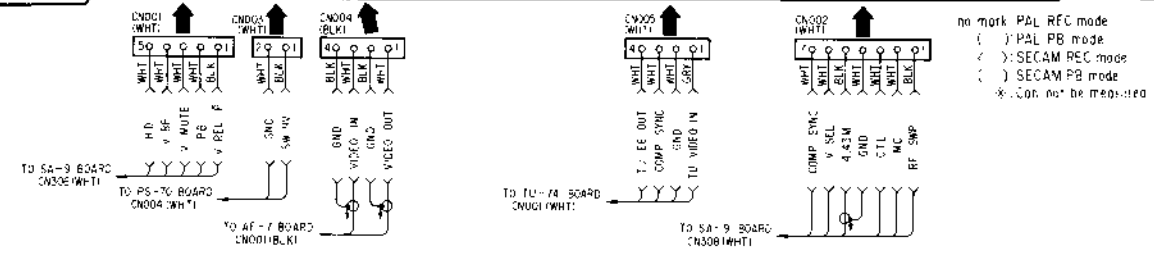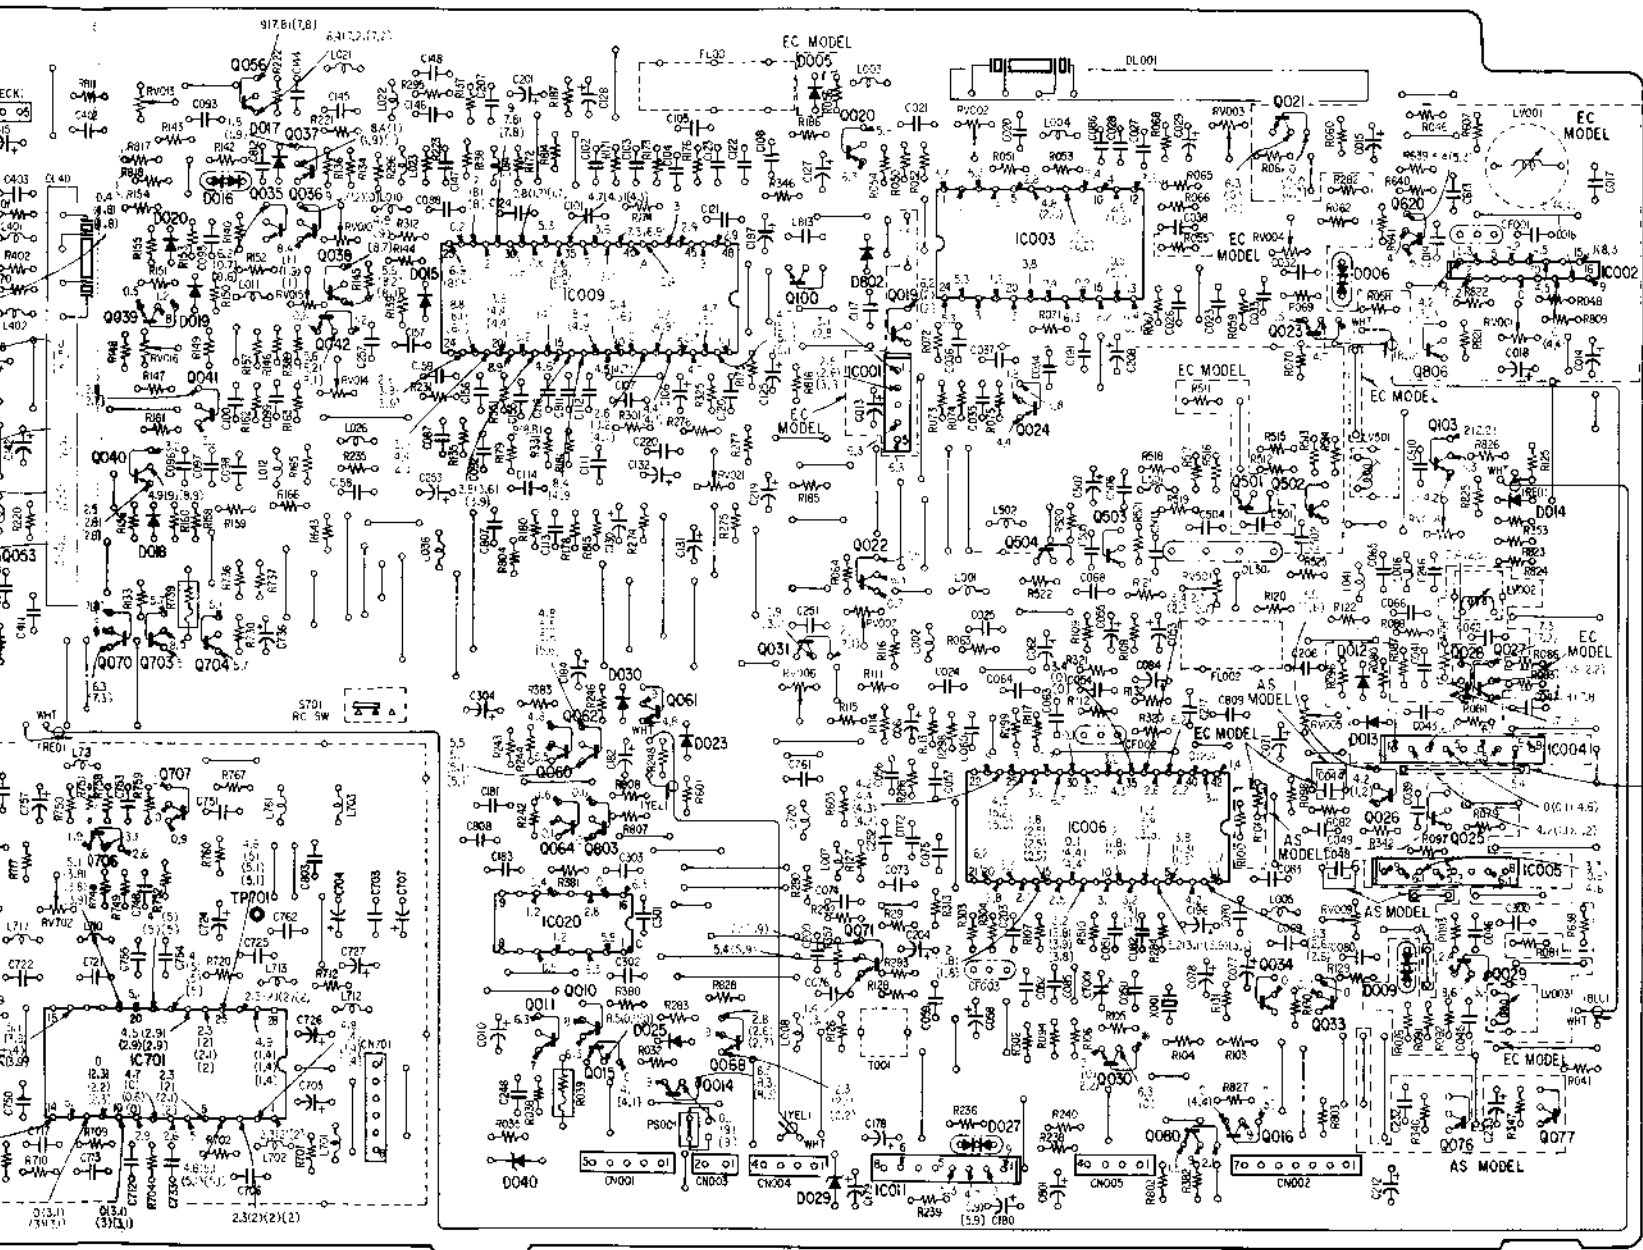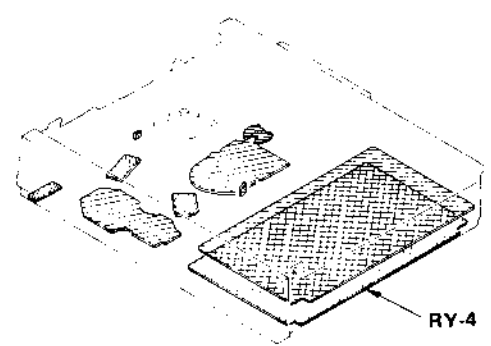

4-3. SA-9 (SYSTEM CONTROL, SERVO, AUDIO), RD-20 (ROTATION DETECTOR), RD-21 (ROTATION DETECTOR), LM-8 (LOADING MOTOR) SCHEMATIC DIAGRAMS

- Ref. No. SA-9 BOARD: 2,000 series, RD-20 BOARD: 4,000 series, RD-21 BOARD: 4,000 series, LM-8 BOARD: 7,100 series -

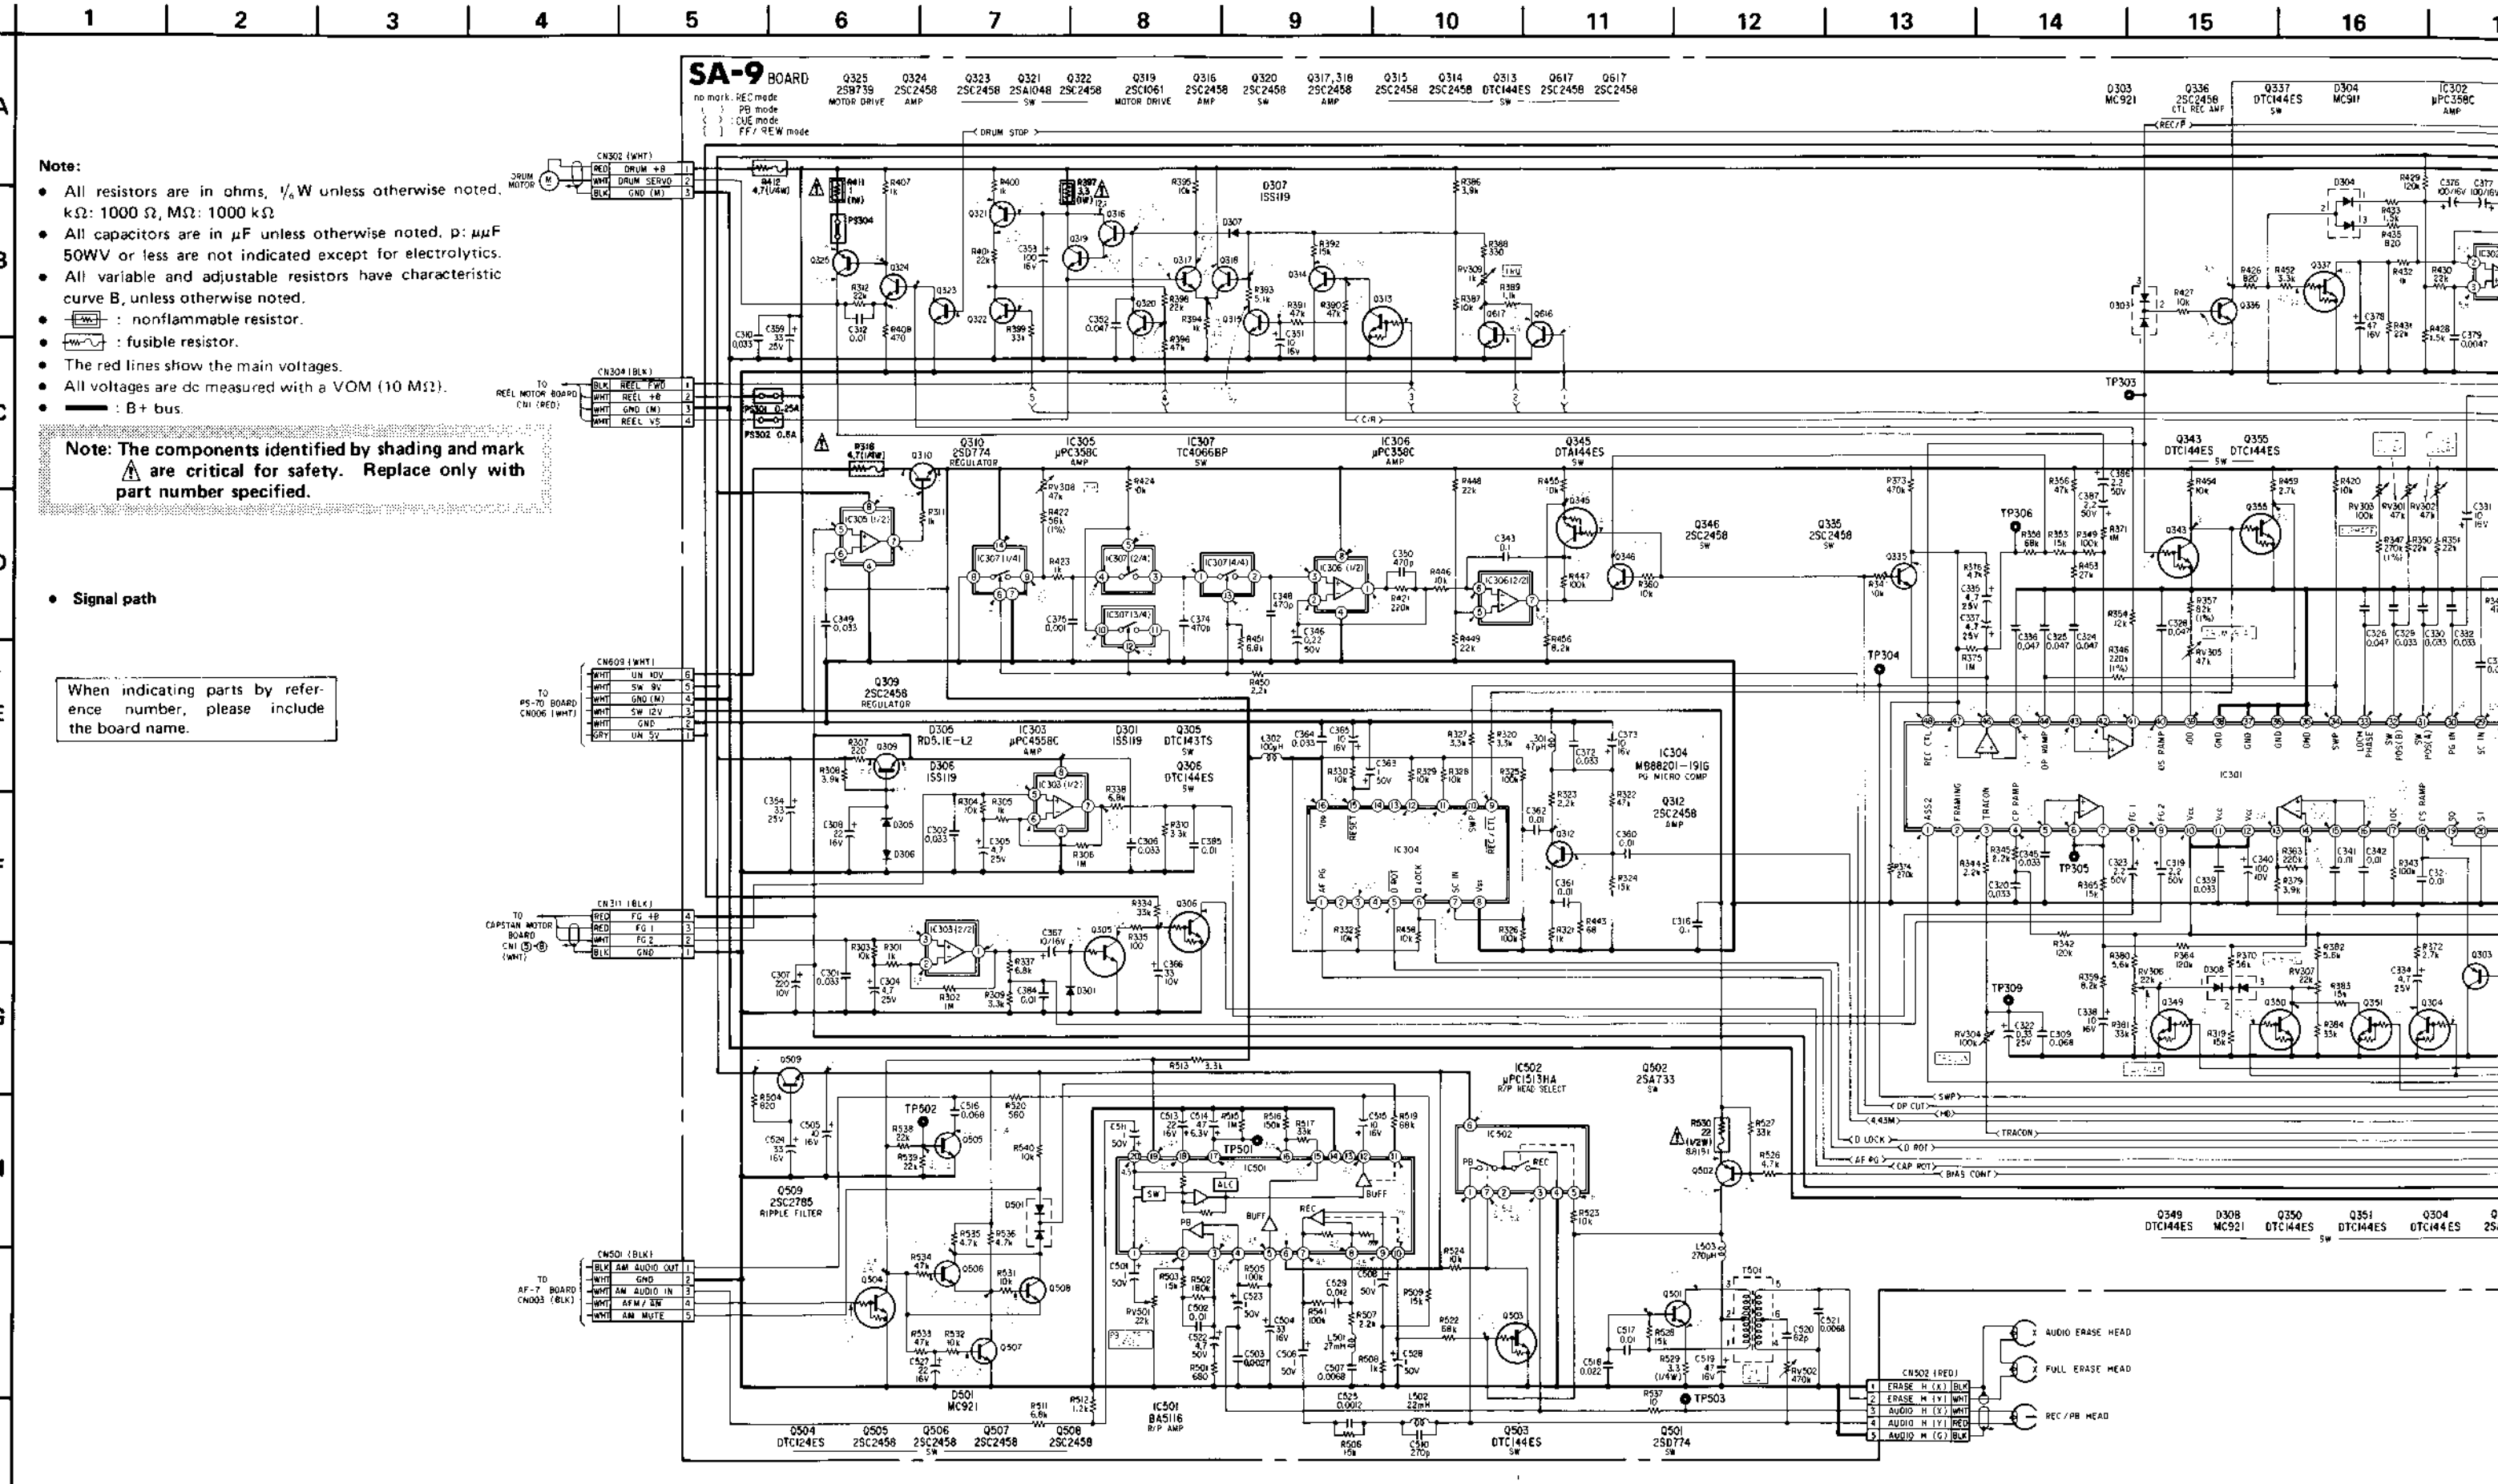

- Note:**
- All resistors are in ohms, $\frac{1}{4}$ W unless otherwise noted. k Ω : 1000 Ω , M Ω : 1000 k Ω
 - All capacitors are in μ F unless otherwise noted. p: μ F
 - 50WV or less are not indicated except for electrolytics.
 - All variable and adjustable resistors have characteristic curve B, unless otherwise noted.
 - : nonflammable resistor.
 - : fusible resistor.
 - The red lines show the main voltages.
 - All voltages are dc measured with a VOM (10 M Ω).
 - : B+ bus.

Note: The components identified by shading and mark are critical for safety. Replace only with part number specified.


Signal path

When indicating parts by reference number, please include the board name.

SERVO, SYSTEM CONTROL, AUDIO


REEL MOTOR, CAPSTAN MOTOR SCHEMATIC DIAGRAMS

- Ref. No. REEL MOTOR BOARD: 9,100 series, CAPSTAN MOTOR BOARD: 9,200 series -

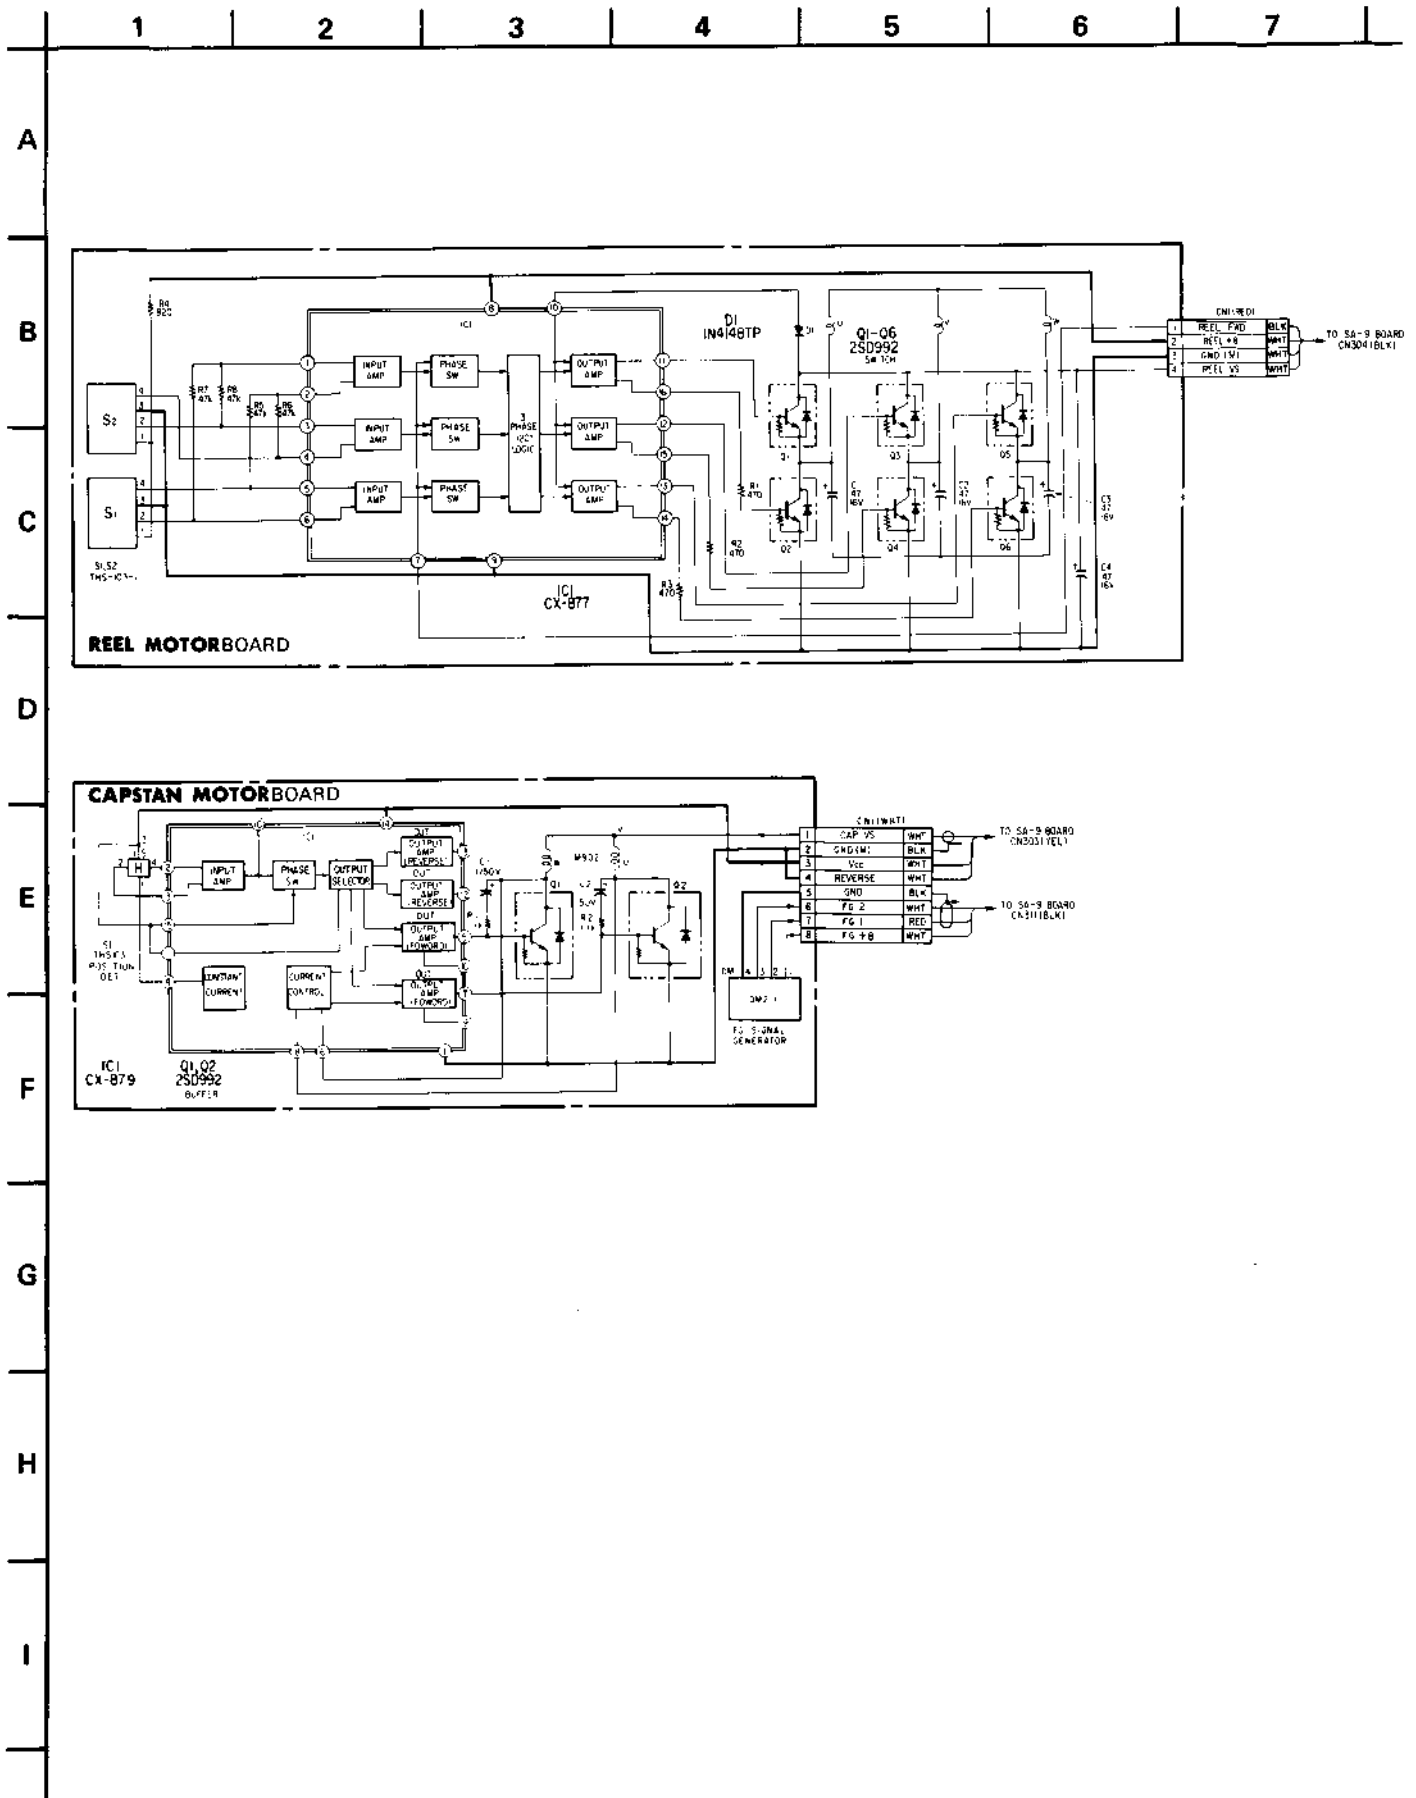


SERVO, SYSTEM CONTROL, AUDIO

SA-9 BOARD

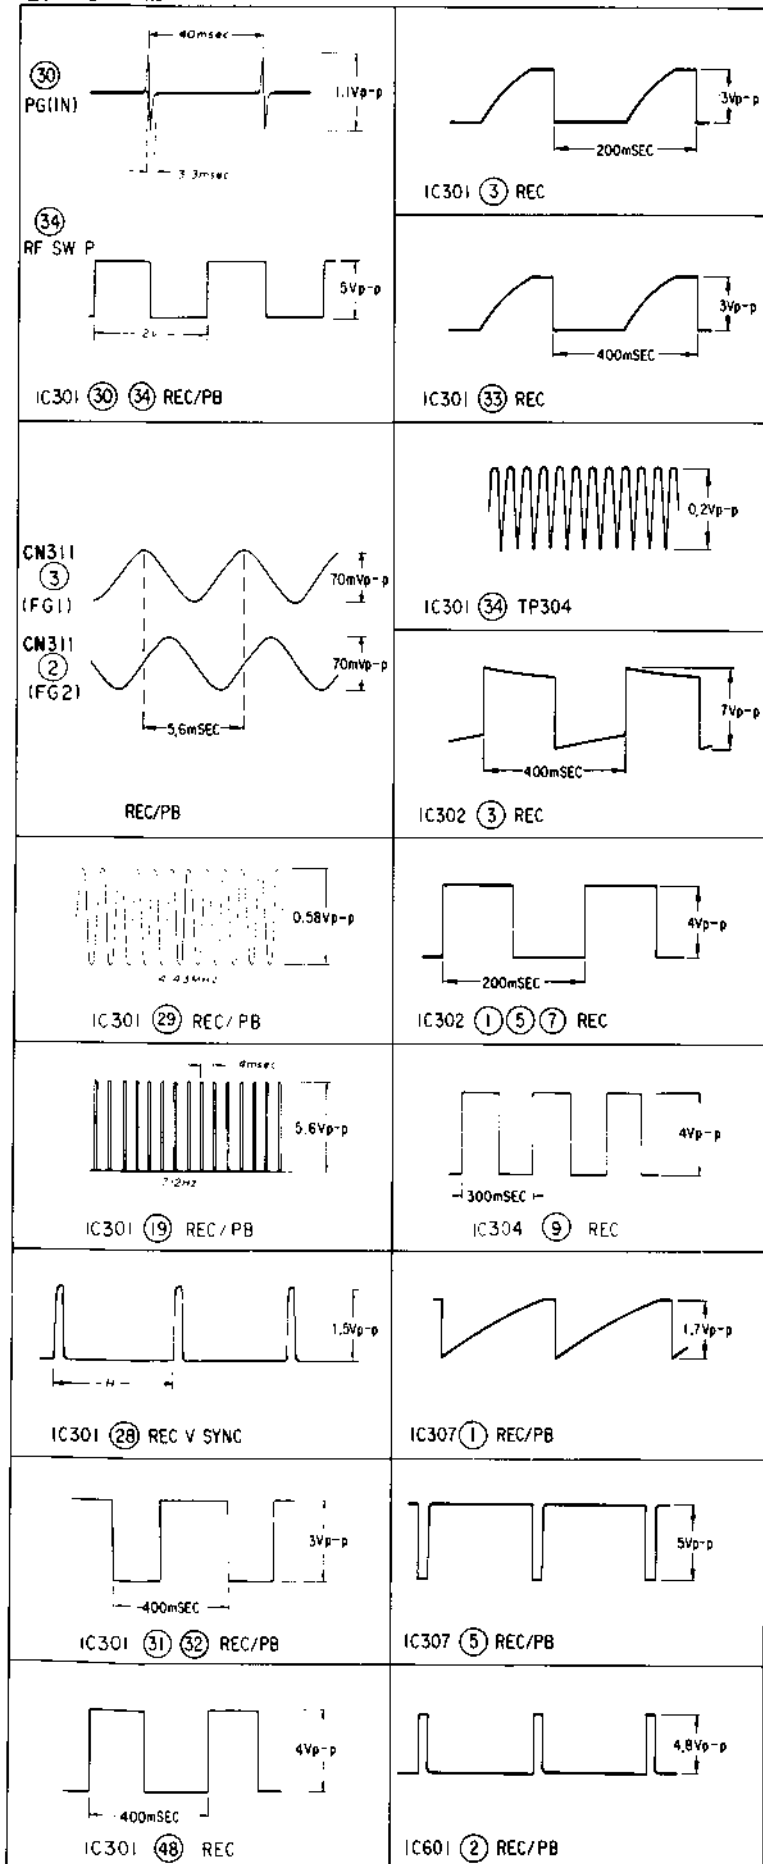


SA-9 (SYSTEM CONTROL, SERVO, AUDIO), RD-20 (ROTATION DETECTOR), RD-21 (ROTATION DETECTOR), LM-8 (LOADING MOTOR), REEL MOTOR, CAPSTAN MOTOR PRINTED WIRING BOARDS


— Ref. No. SA-9 BOARD: 2,000 series, RD-20 BOARD: 4,000 series, RD-21 BOARD: 4,000 series, LM-8 BOARD: 7,100 series, REEL MOTOR BOARD: 9,100 series, CAPSTAN MOTOR BOARD: 9,200 series

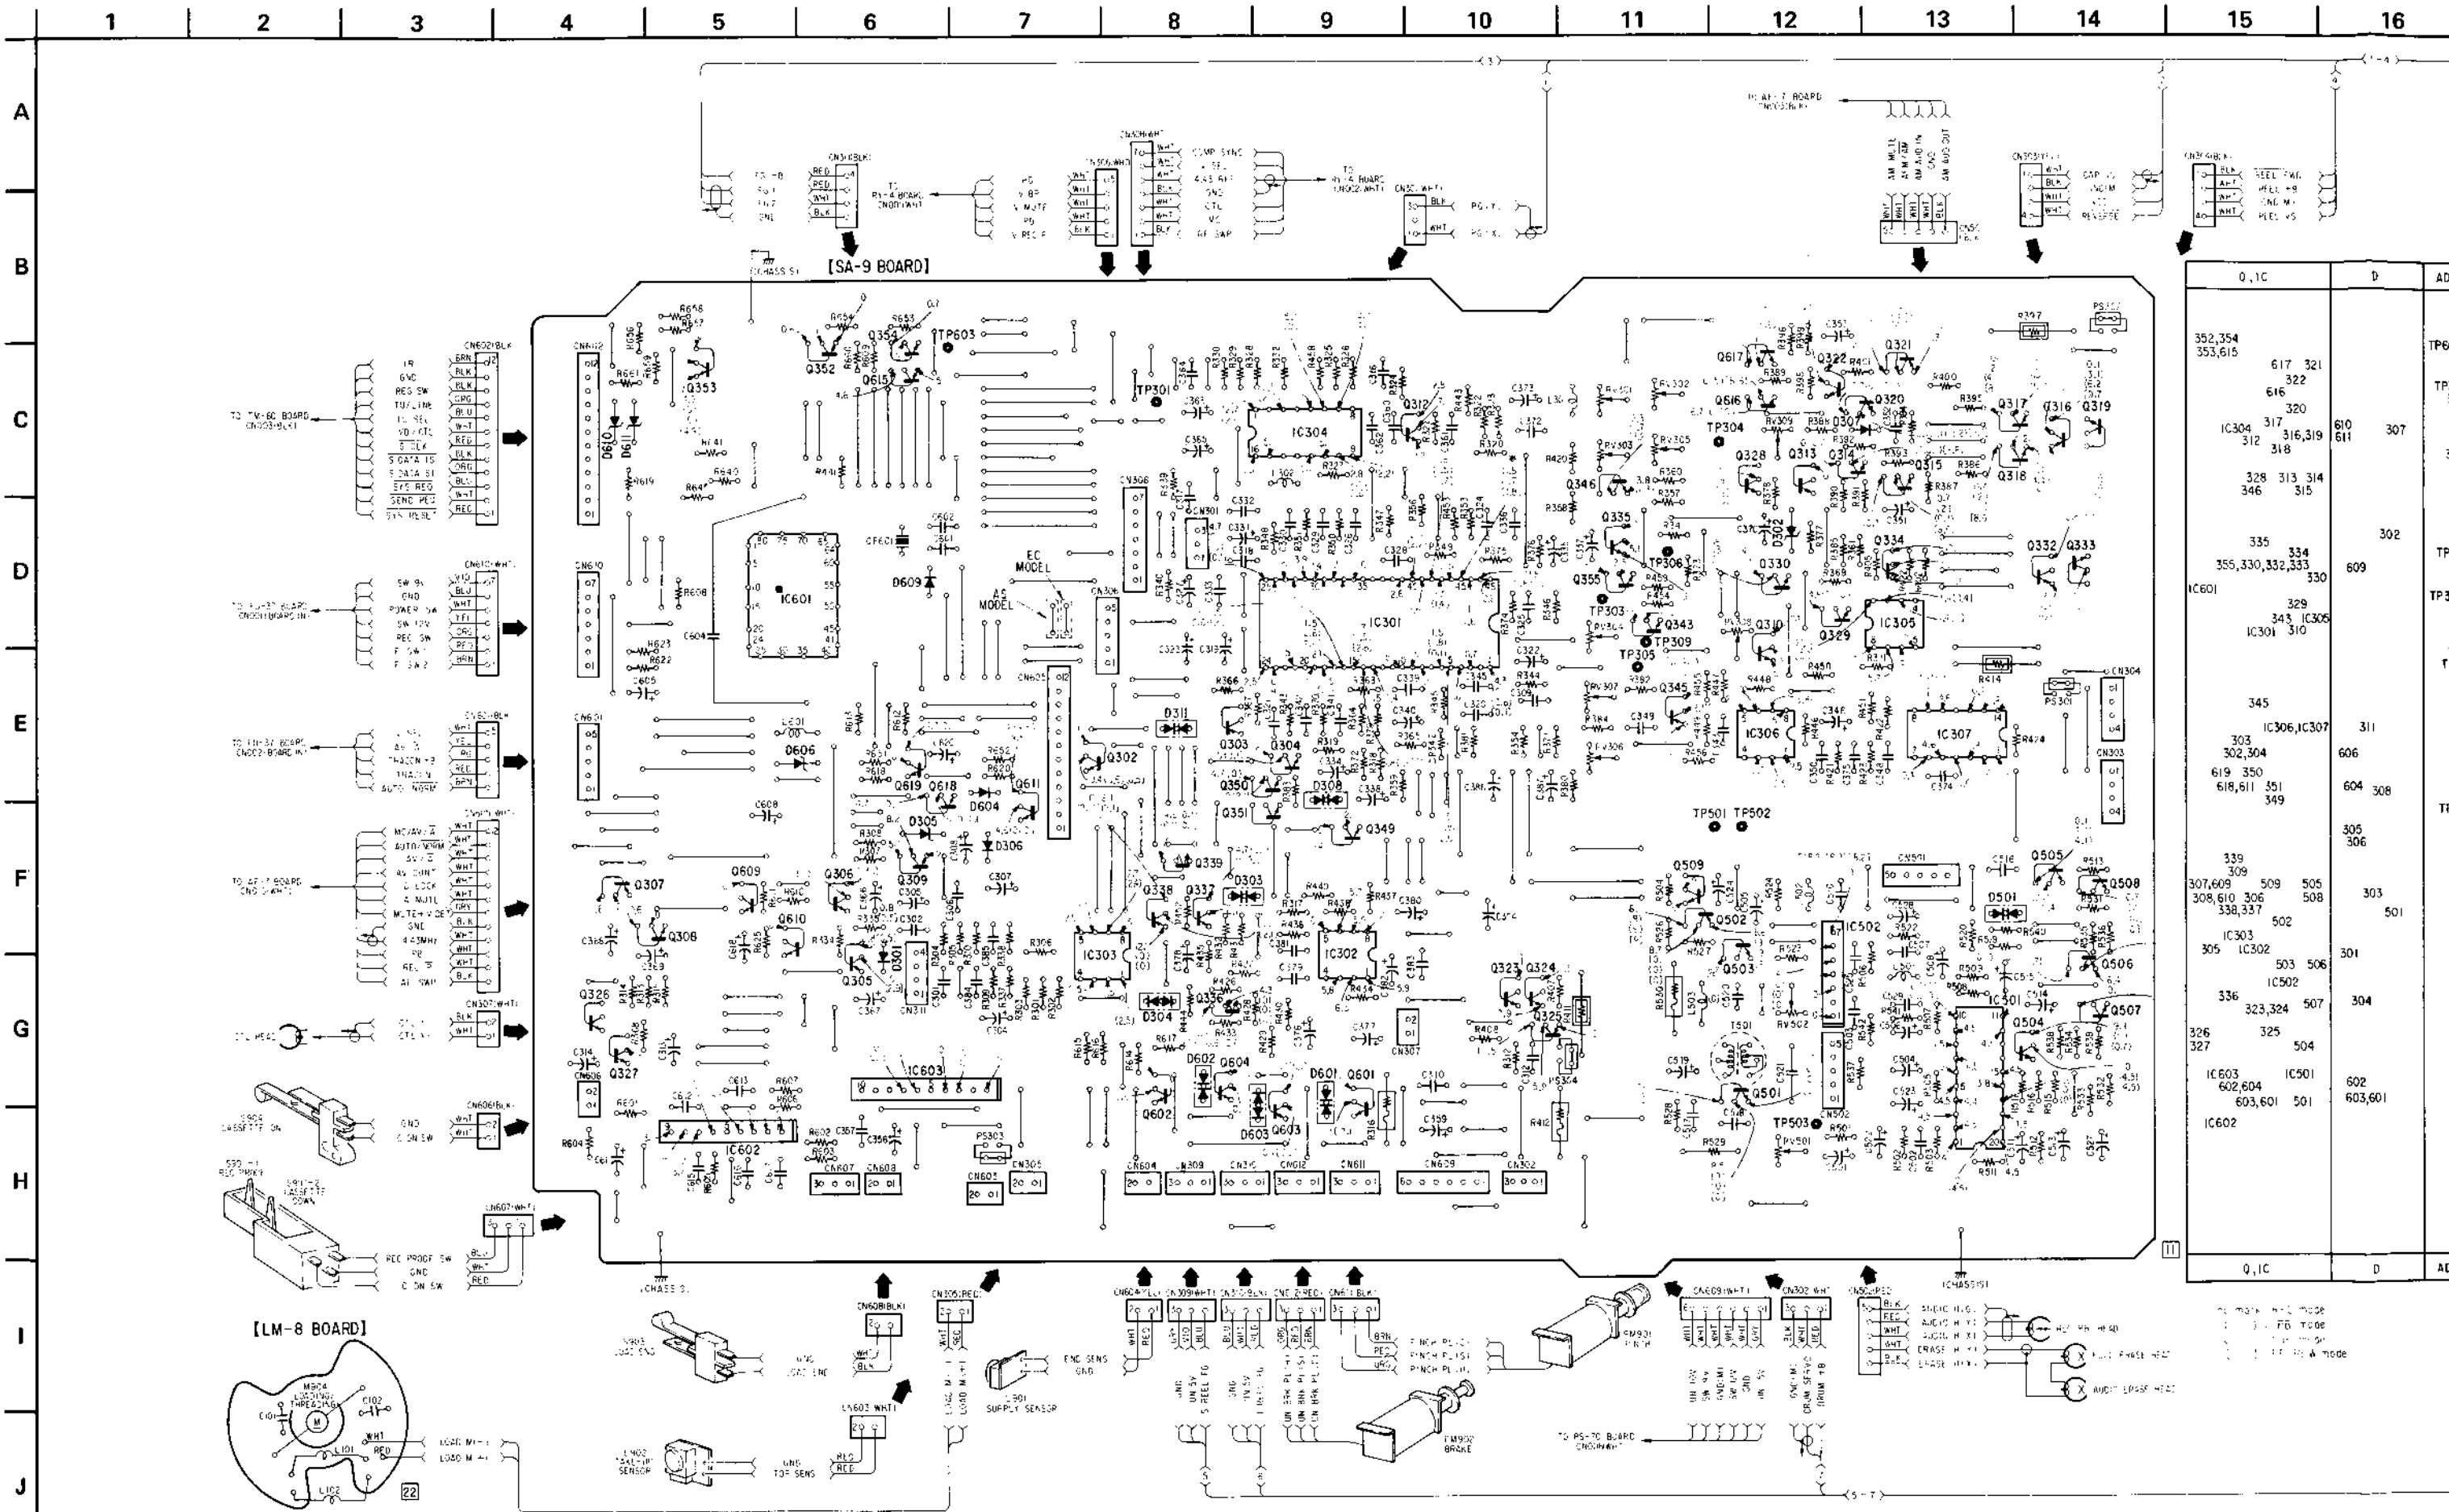



Q, IC	D	ADJ, TP
352,354 353,615	617 321 322 616 320	TP603 TP301 301,302
IC304	317 316,319 312 318	309 TP304 303,305
	328 313 314 346 315	
	335	302
IC601	355,330,332,333 330	TP306 TP303
	329 343 IC305 IC301 310	304 308 TP309 TP305
	345	307
	IC306, IC307	311
303 302,304 619 350 618,611	606 604 308 349	306 TP501 TP502
	305 306	
339 309	509 505 508	303
307,609 308,610 306 338,337	502	501
IC303 305 IC302	503 506	301
	IC502	304
	323,324 507	502
326 327	325 504	
IC603 602,604 603,601	IC501 501	602 603,601
IC602		501

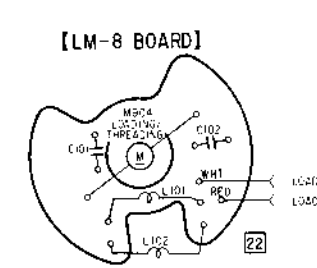


10 11 12 13 14 15 16 17 18 19 20 21 22 23 24 25 26

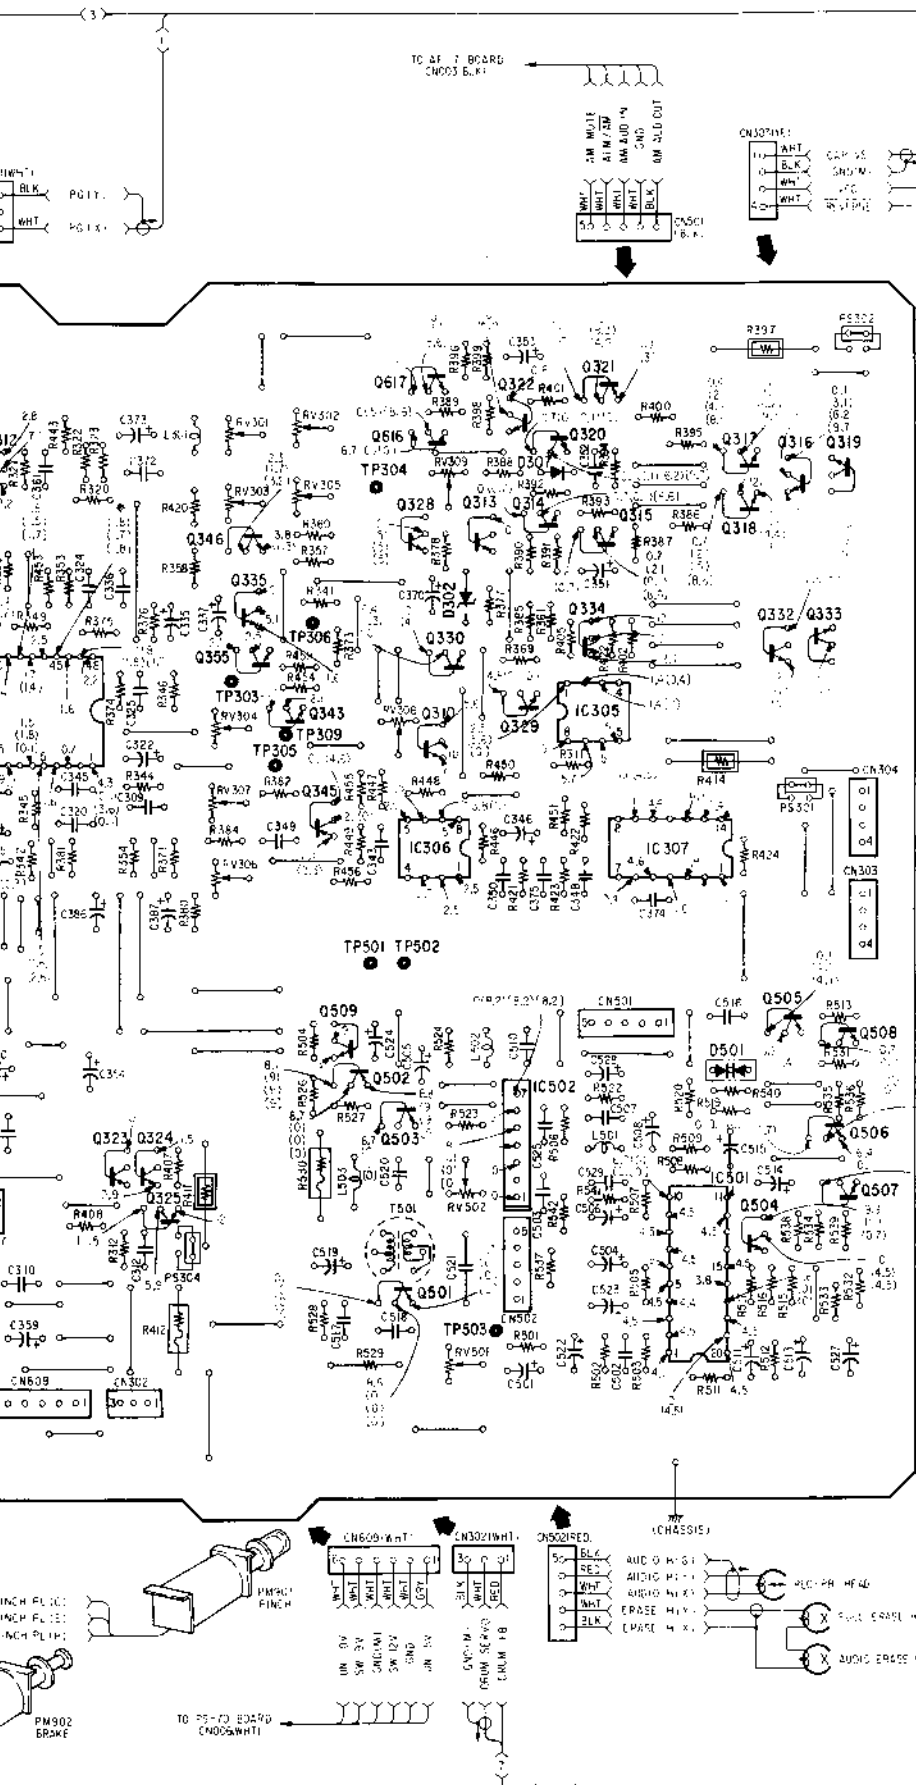



Q, IC	D	ADJ, TP
352,354 353,615	617 321 322 616 320	TP603 TP301 301,302
IC304	610 307 312 316,319 318	TP304 303,305
328 313 314 346 315		
335 334 355,330,332,333	302 609	TP306
IC601	329 343 IC305 IC301 310	TP303 304 308 TP309 TP305
345		307
IC306, IC307	311	
303 302,304 619 350 618,611 351 349	606 604 308 305 306	306 TP501 TP502
339 309		
307,609 509 505 308,610 306 508 338,337	303 501	
IC303 305 IC302	301	
336 323,324 507	304	502
326 325 327 504		
IC603 IC501 602,604 501 603,601	602 603,601	
IC602		501

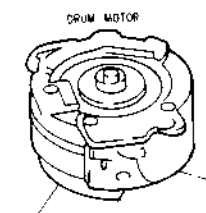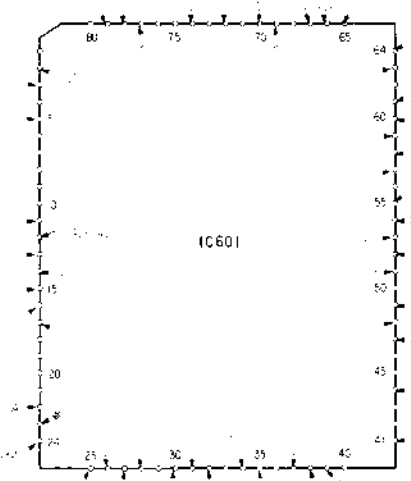

[RD-21 BOARD]

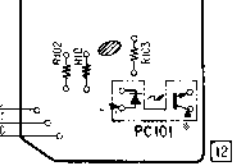


[RD-20 BOARD]

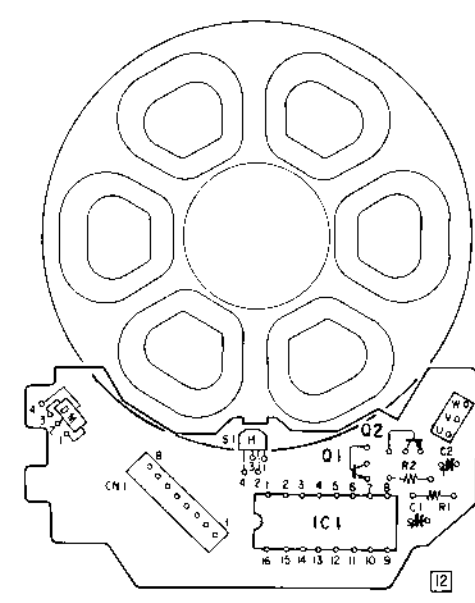
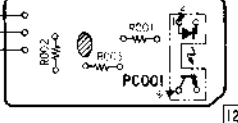


[CAPSTAN MOTOR BOARD]

[REEL MOTOR BOARD]



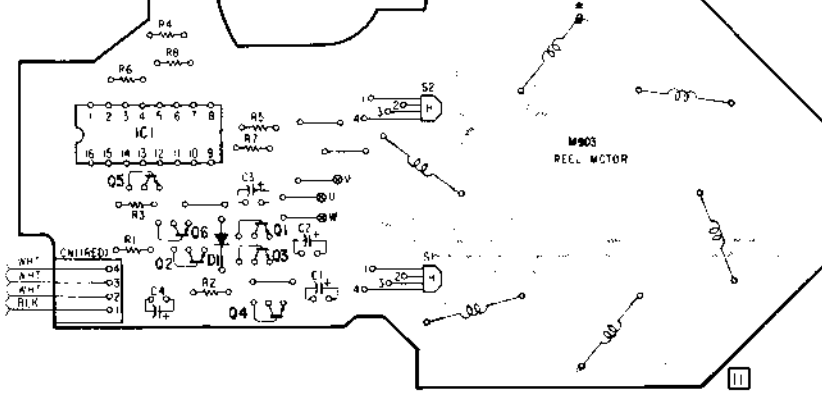


18 19 20 21 22 23 24 25 26 27 28 29 30 31 32 33

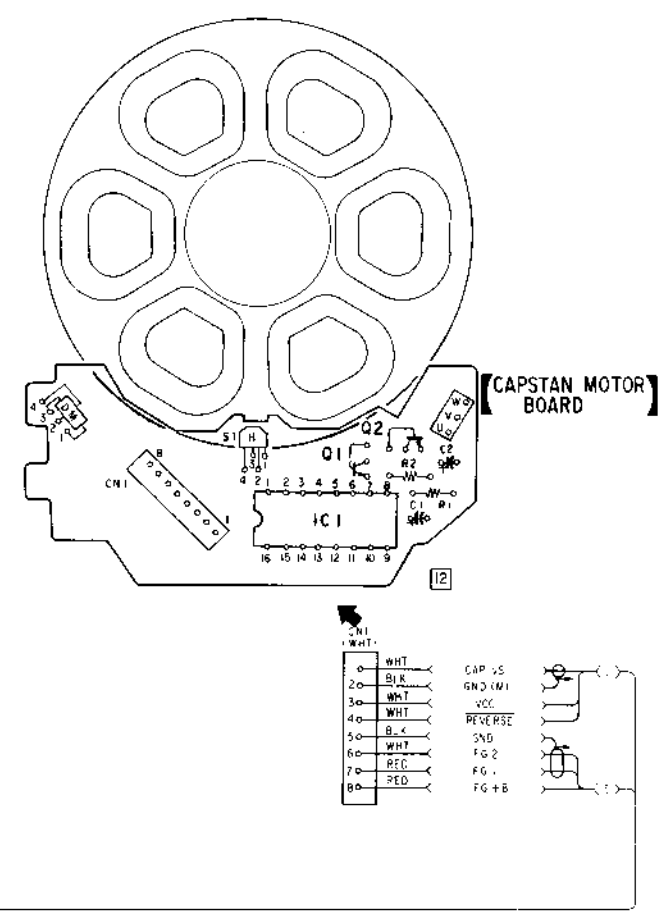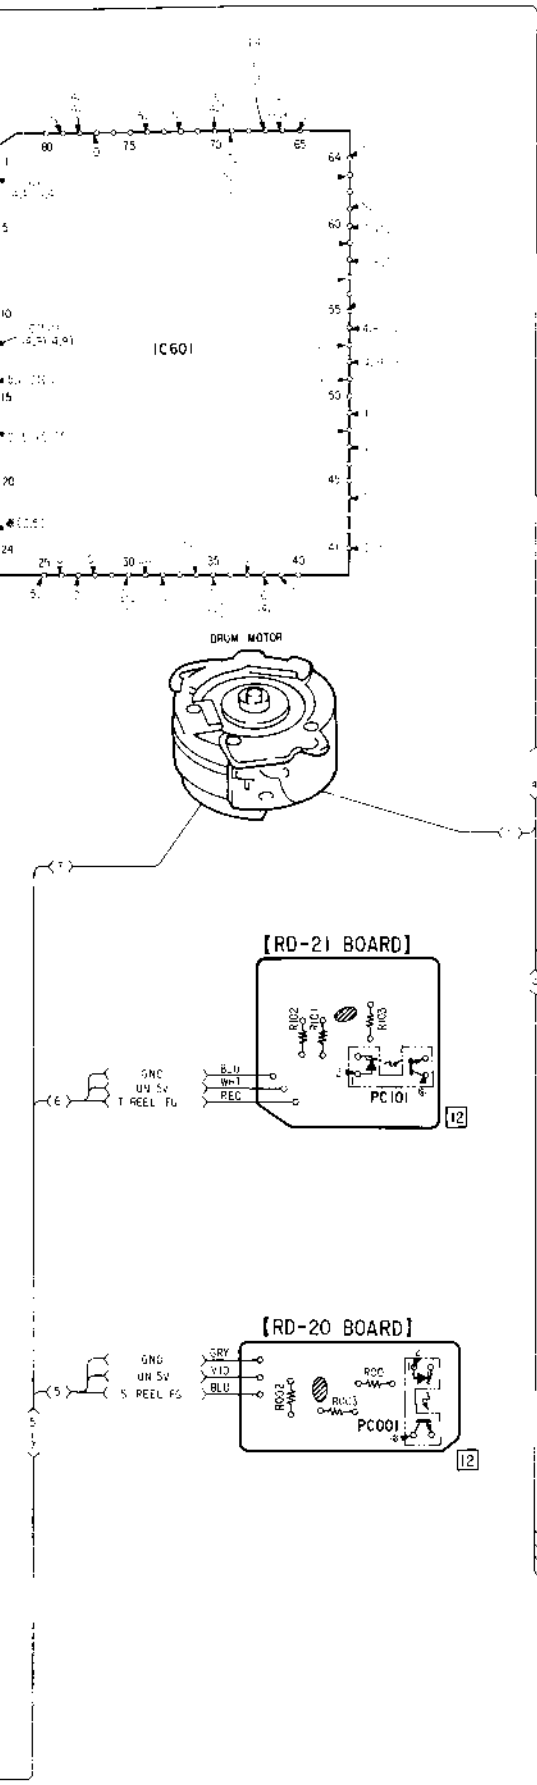

When indicating parts by reference number, please include the board name.

- Note:**
- — Indicates a leadwire mounted on the component side.
 - — Indicates a leadwire mounted on the printed side.
 - — B+ pattern

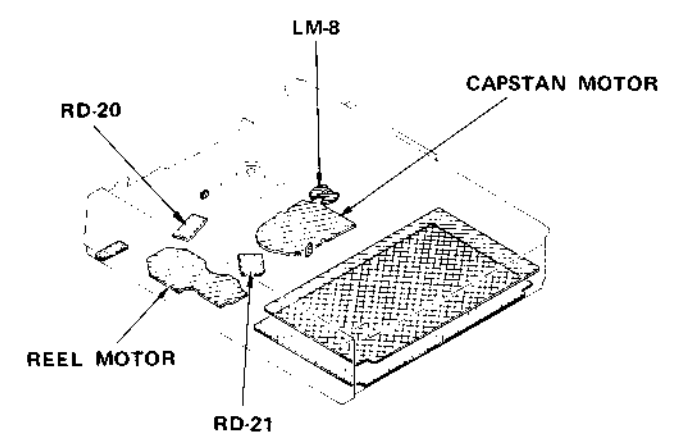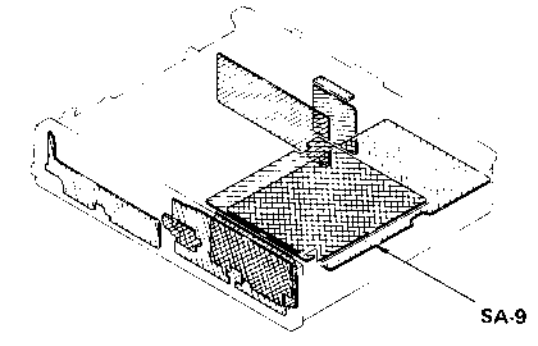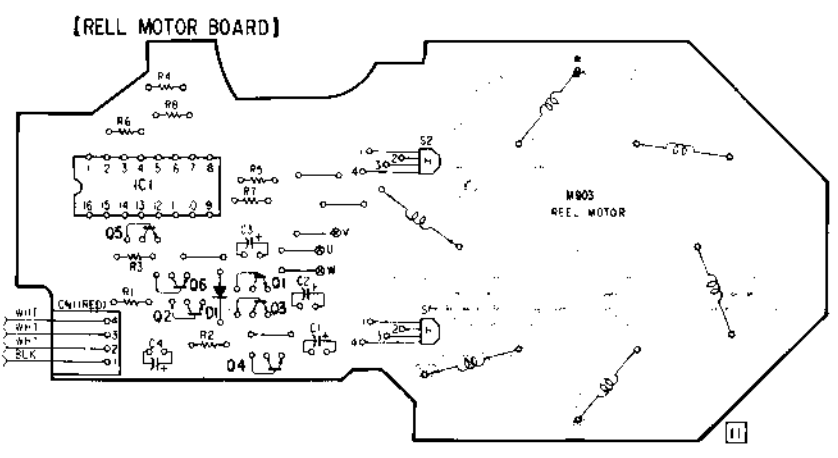


4-4. AF-7 (AFM SIGNAL) SCHEMATIC DIAGRAM


- Ref. No. AF-7 BOARD: 3,000 series -

AUDIO AUDIO

1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16

A
B
C
D
E
F
G
H
I
J

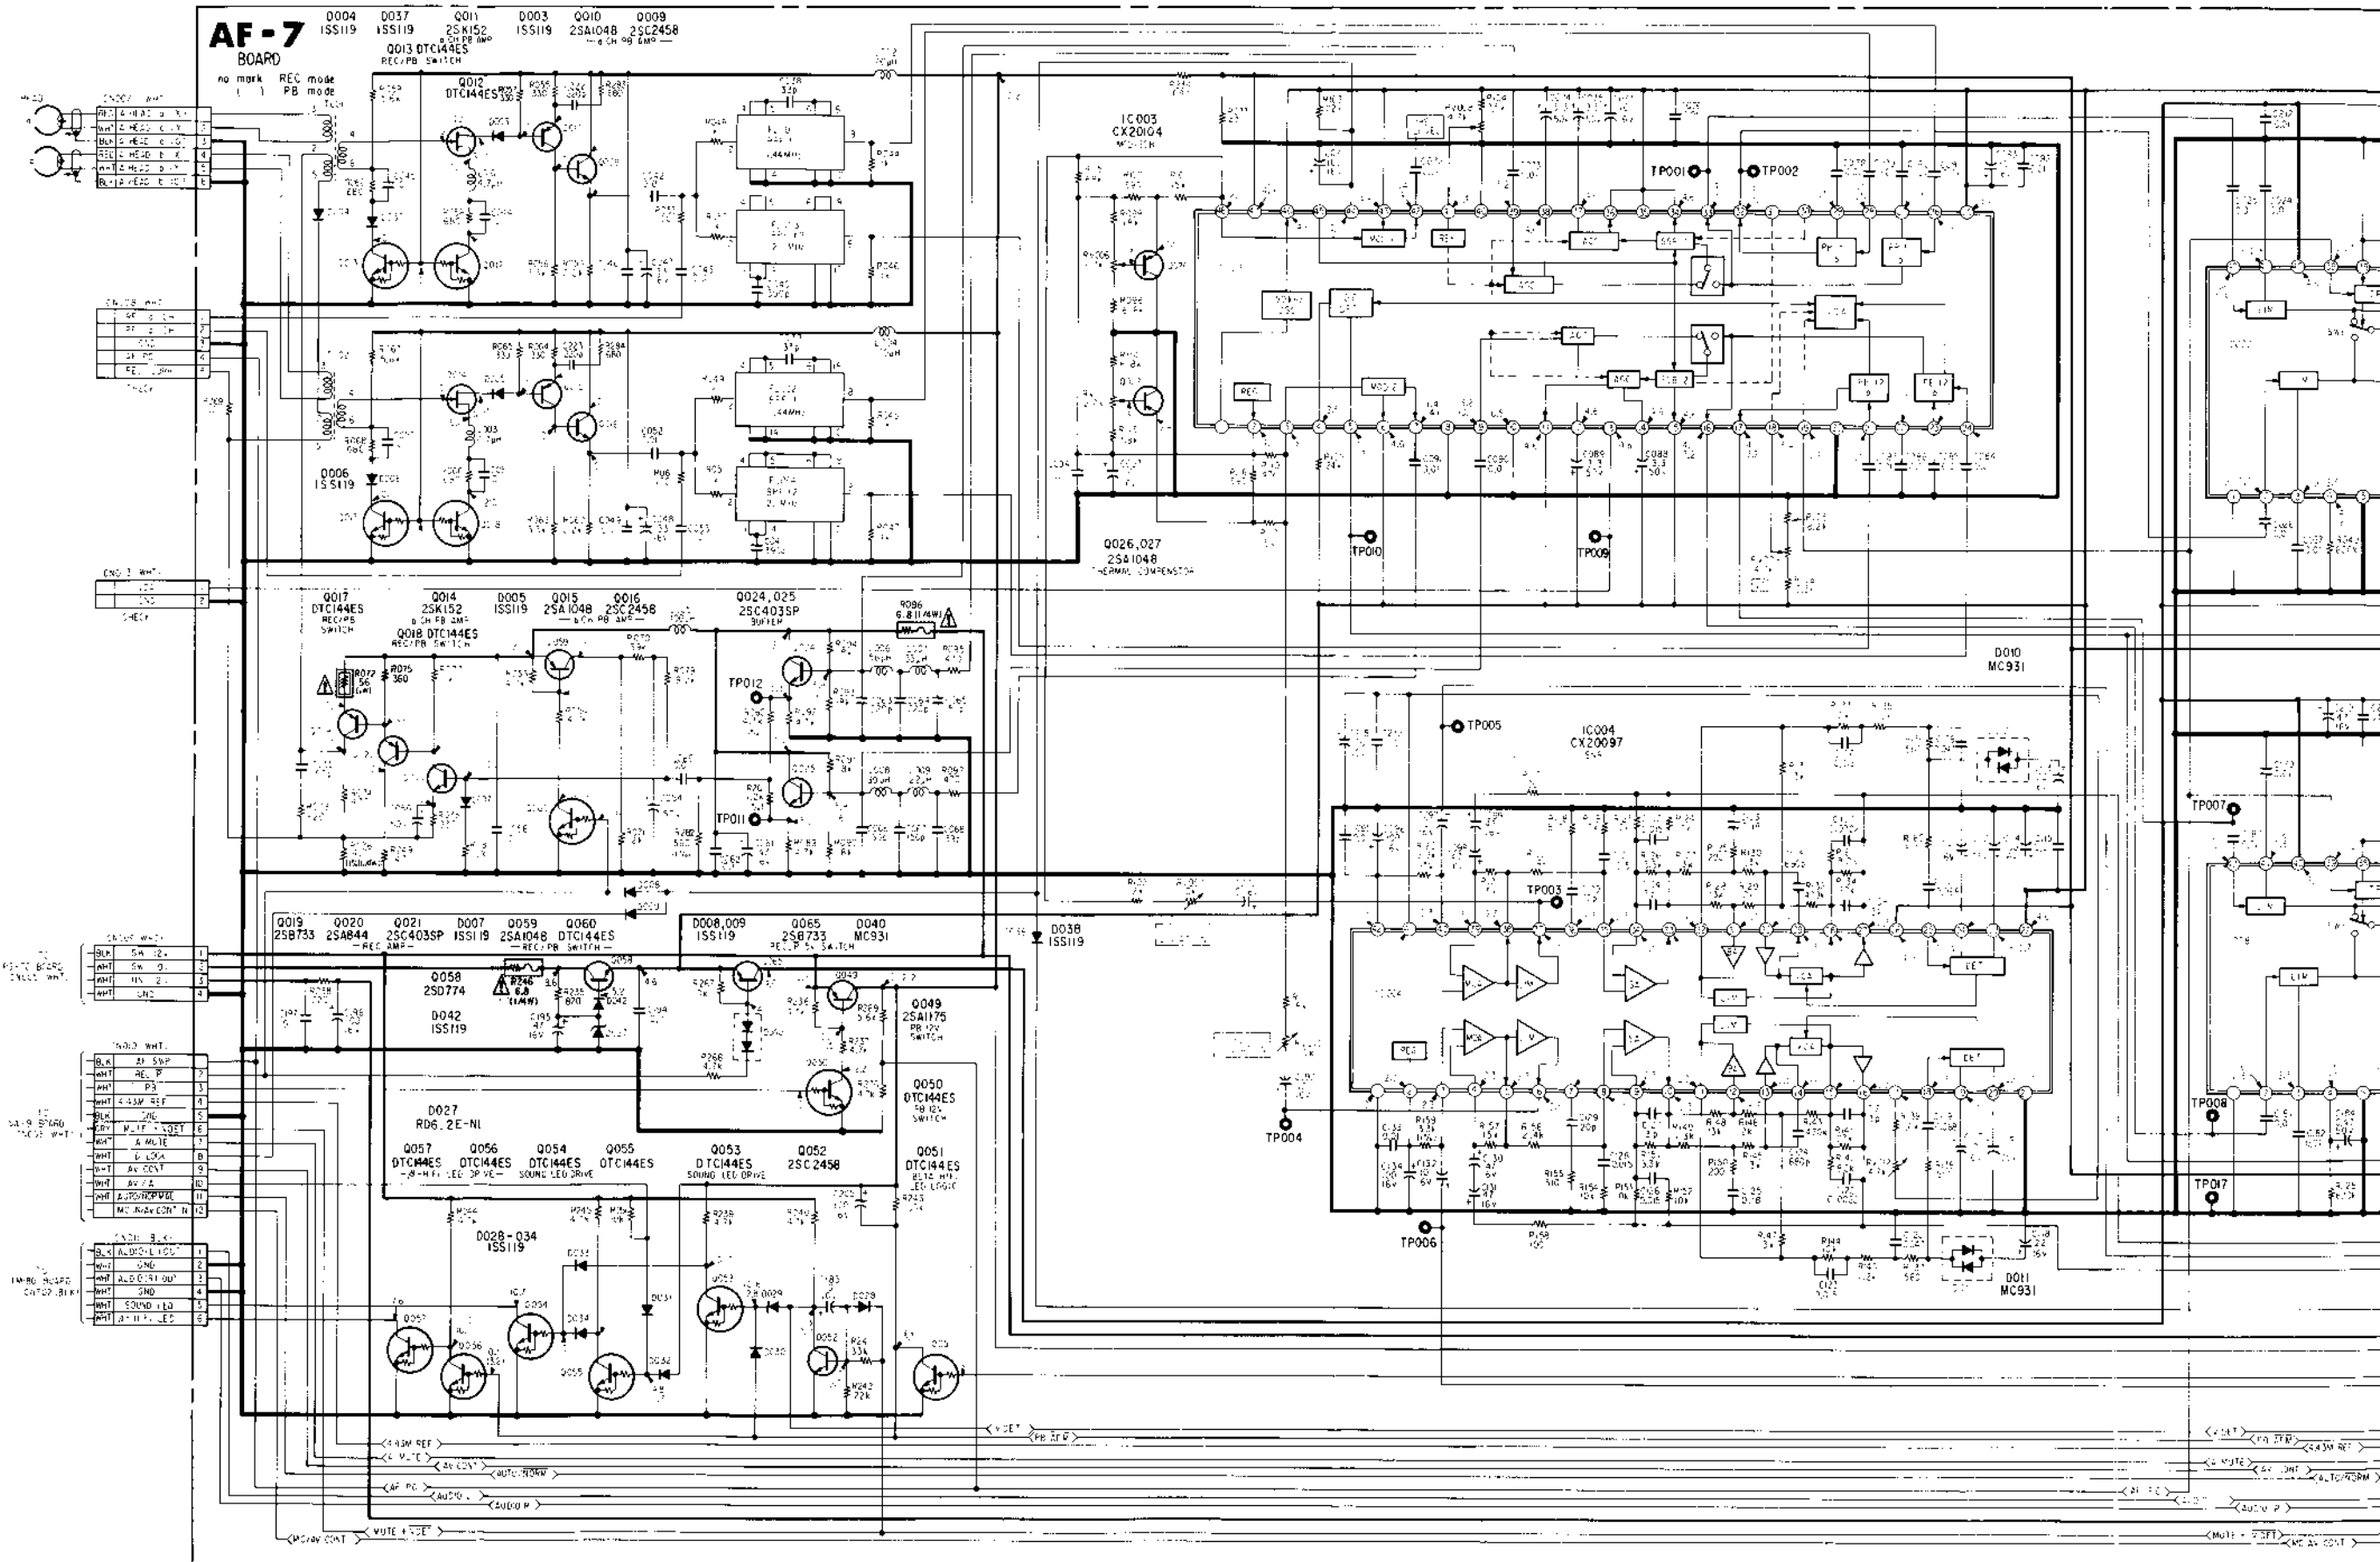

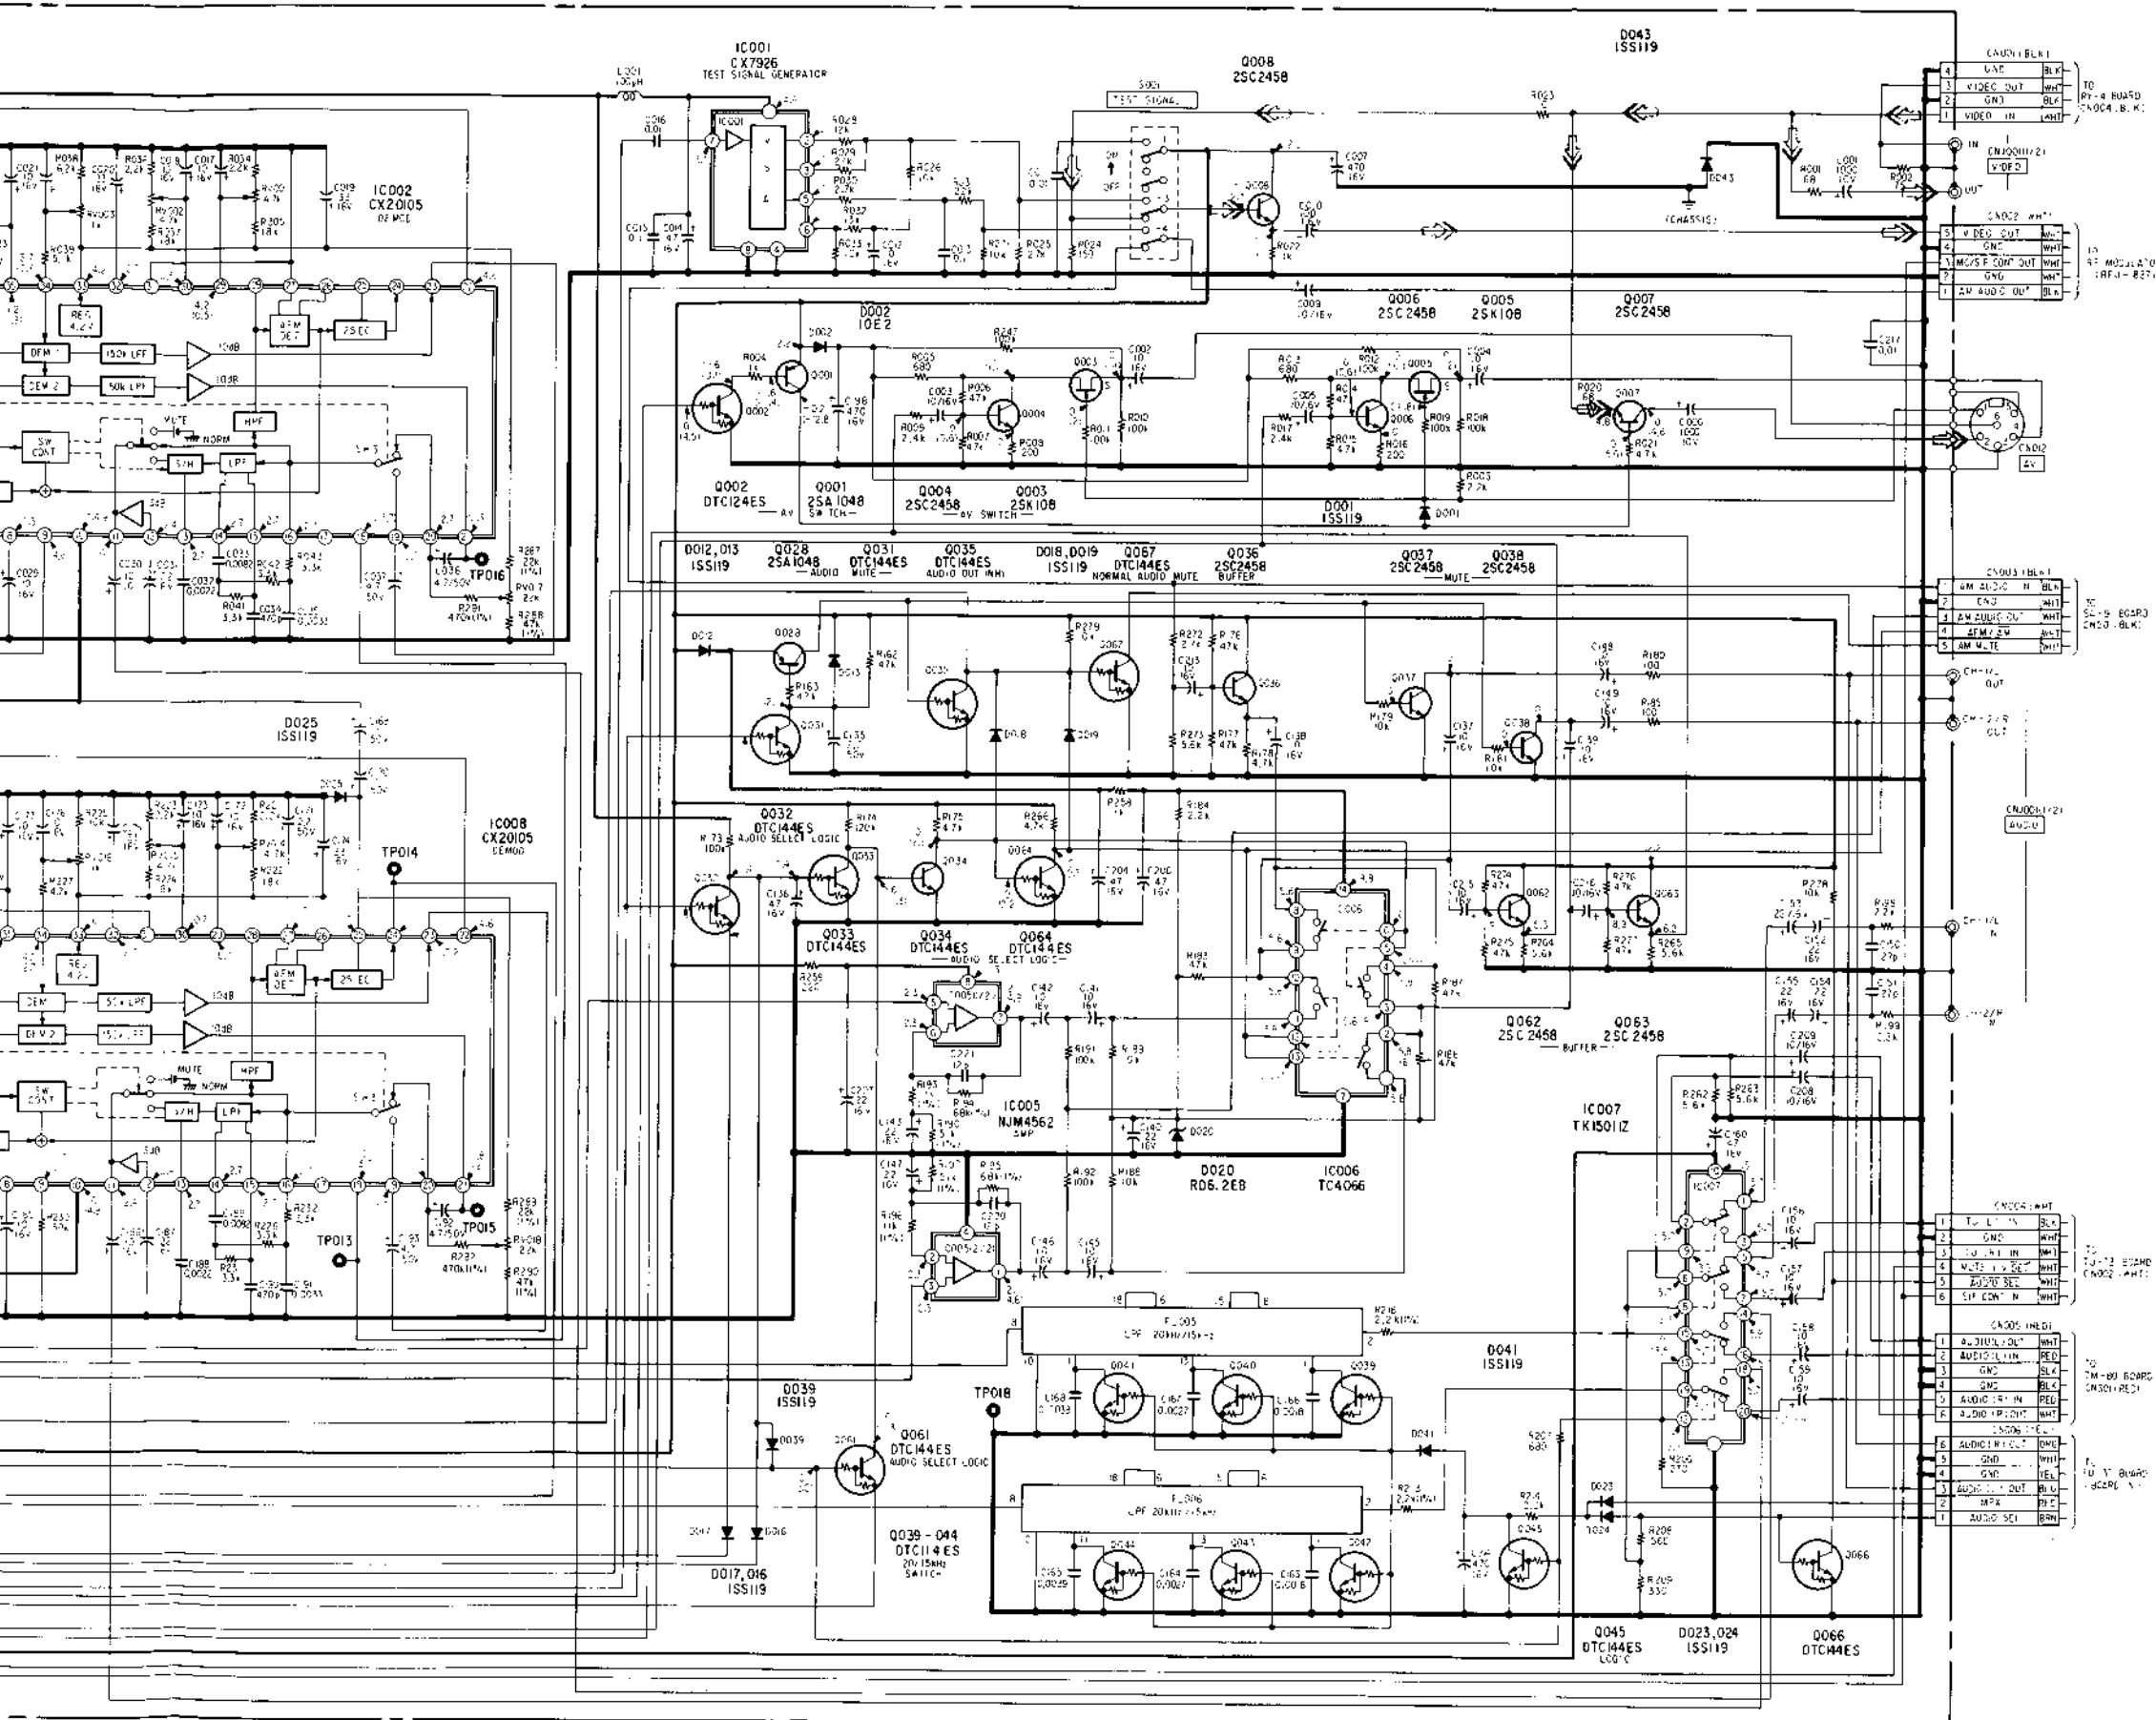

- Note:**
- All resistors are in ohms, 1/8 W unless otherwise noted. kΩ: 1000 Ω, MΩ: 1000 kΩ
 - All capacitors are in μF unless otherwise noted. p: pF
 - All variable and adjustable resistors have characteristic curve B, unless otherwise noted.
 - : nonflammable resistor.
 - : fusible resistor.
 - The red lines show the main voltages.
 - All voltages are dc measured with a VOM (10 MΩ).
 - : B+ bus.

Note: The components identified by shading and mark are critical for safety. Replace only with part number specified.

When indicating parts by reference number, please include the board name.




• Signal path



AUDIO AUDIO

1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16

A
B
C
D
E
F
G
H
I
J



Q, IC	D	ADJ, TP
	009	RV017
	008 040	017 RV018
		013 016, 008
050		
IC001		
058		015
060, 025		
008		
059	042	011
IC002		002
065		
049		
036	027	
		010, 014
		RV001
		012 RV002
		007 RV003
		RV014
		RV015
		RV016
024	067 002, 001	007 001
021	057	002
		001
020	056, 054, 005	031, 032
		030
019	055 007	034
		029, 033
		006, 004
041, 040, 039, 044, 043, 042	041	RV007
045		RV011
027		
026	066	023 RV006
		024 RV010
IC003	004	
		018
011, 014	010	
		039
		016
		RV008
013, 017	073, 006	003
		005
010, 015		012
IC004		019
012, 009	062, 063	017, 018
018, 016	032, 064	
		RV012
		004
		006
		009
IC005		
IC006	011 020	RV009
	043	

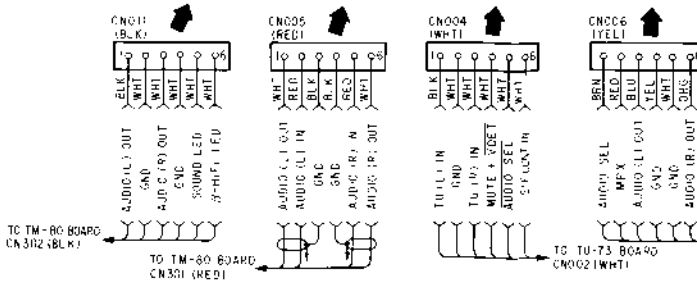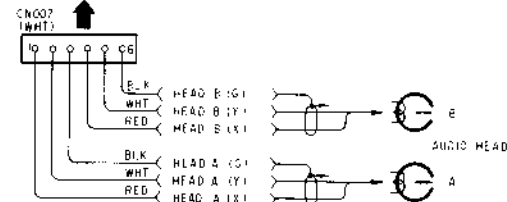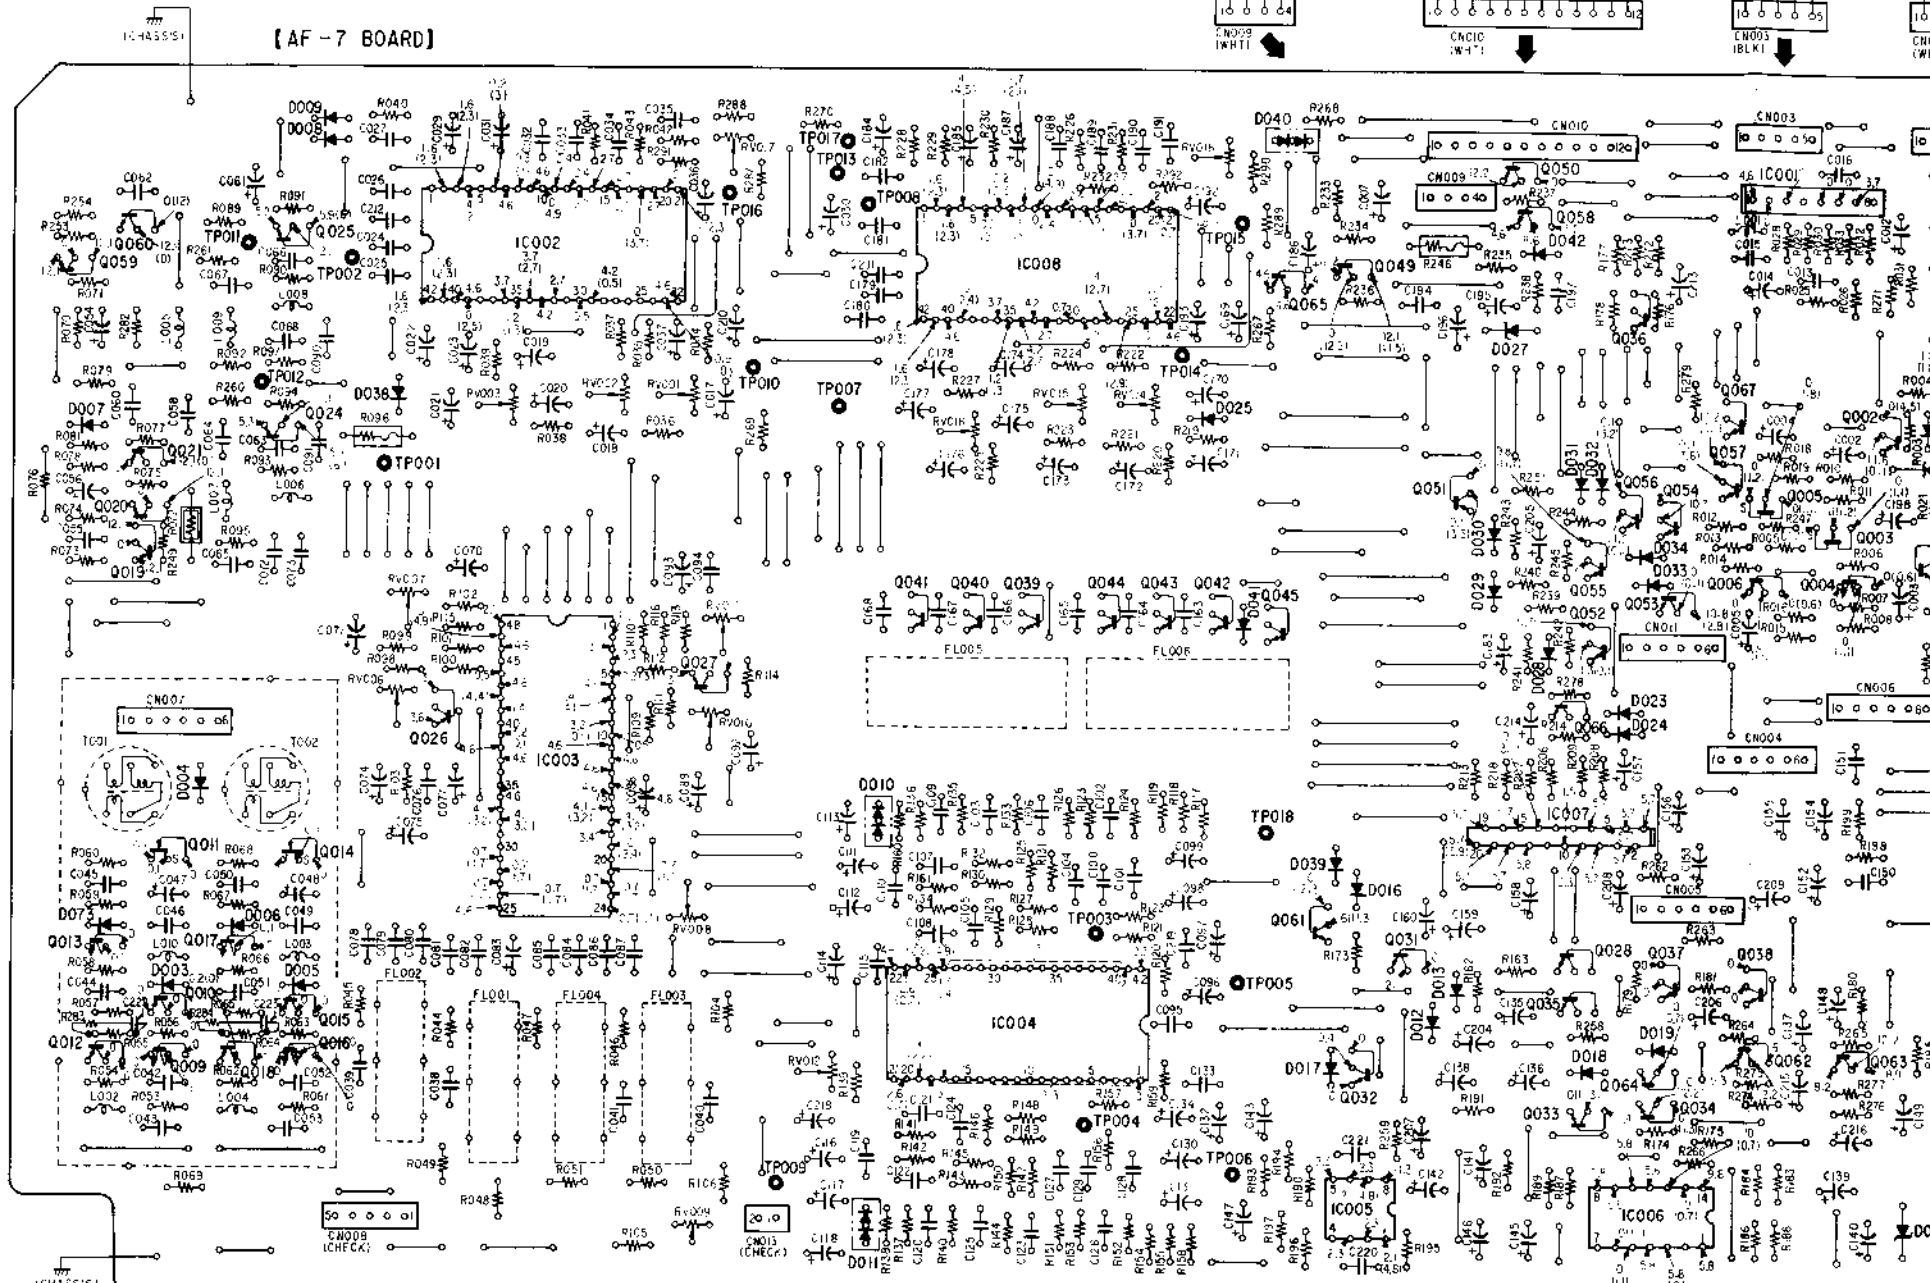

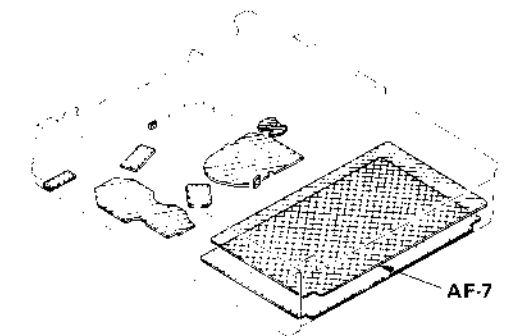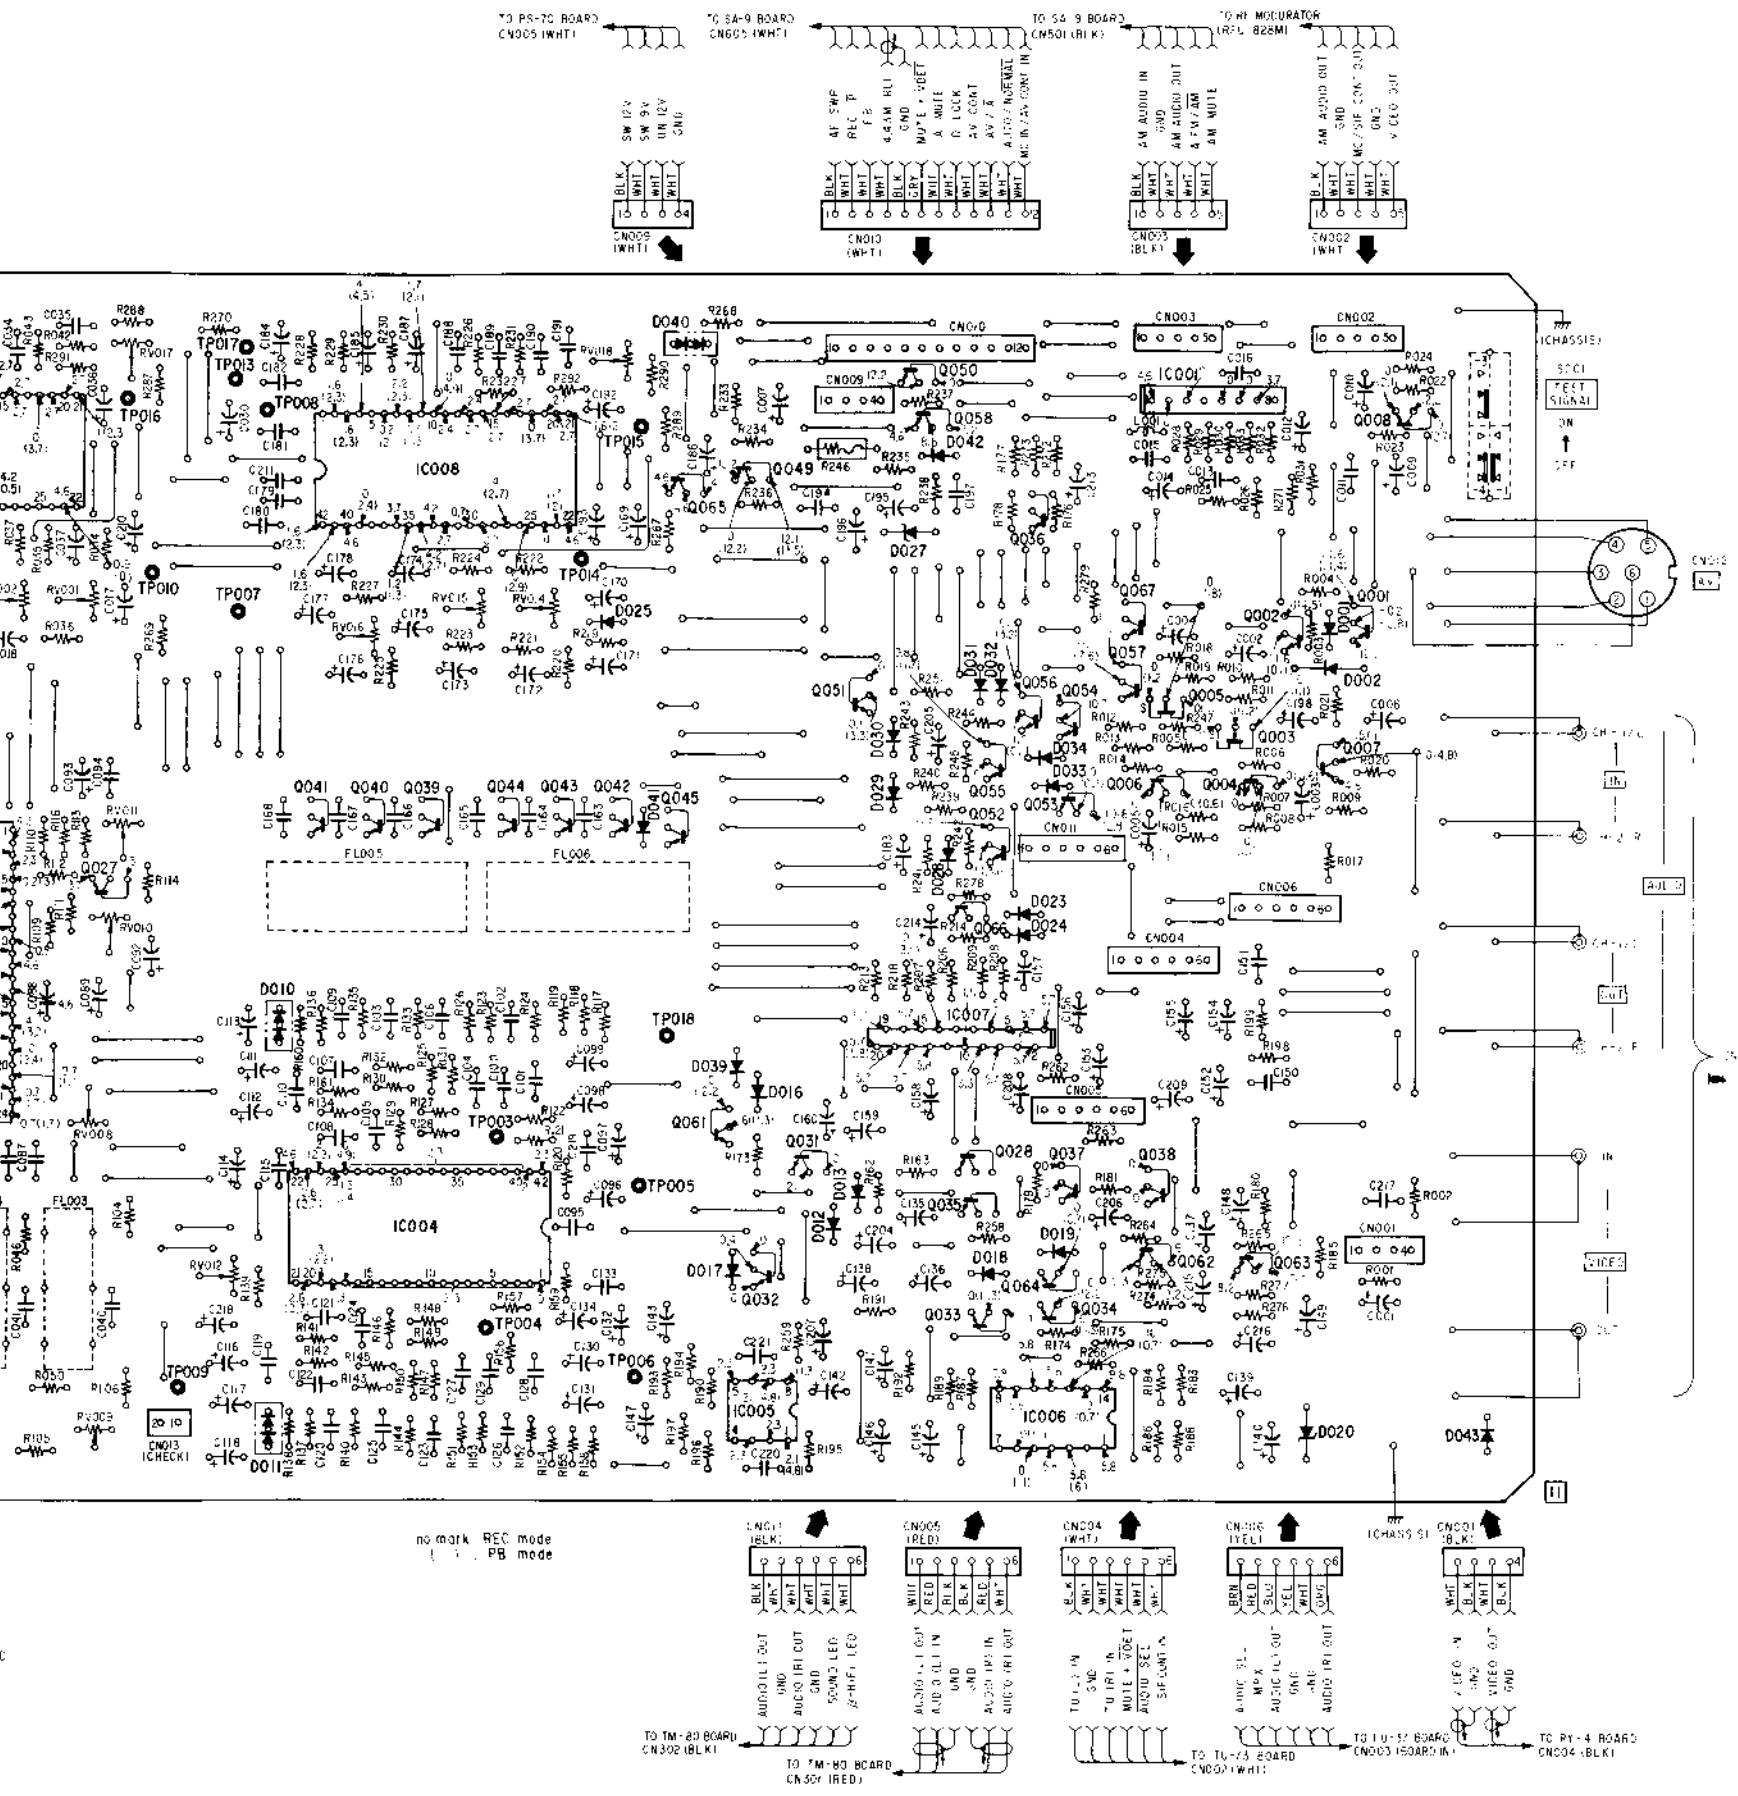

- Note:**
- — : Indicates a leadwire mounted on the component side.
 - — : Indicates a leadwire mounted on the printed side.
 - — : Soldering side.
 - — : B - pattern

When indicating parts by reference number, please include the board name.

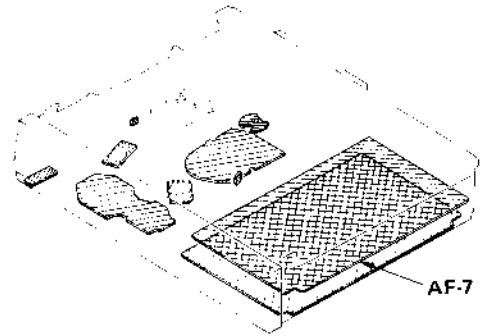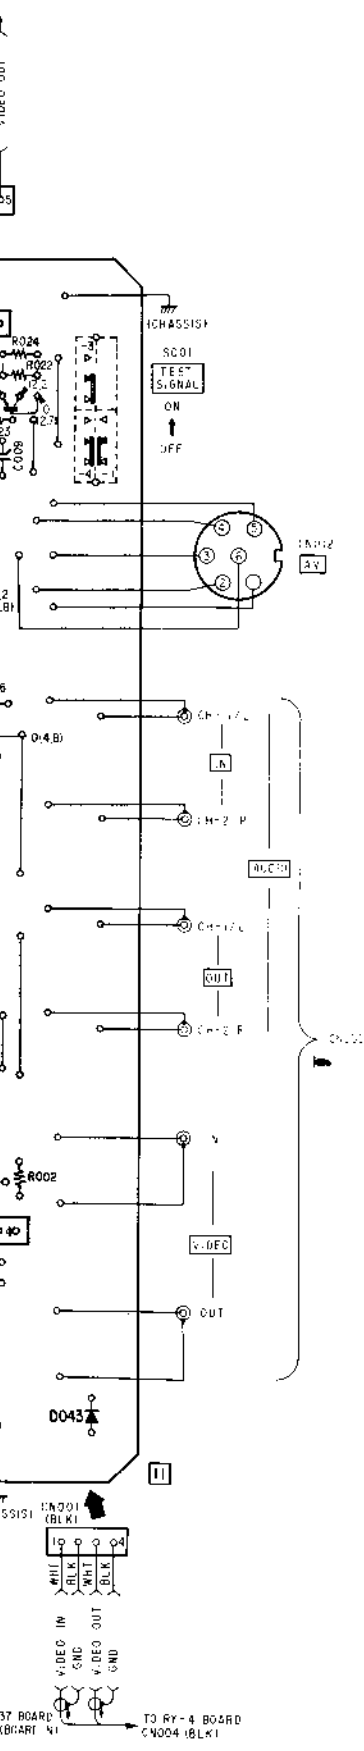

- Note:**
- ○ : Indicates a leadwire mounted on the component side.
 - ● : Indicates a leadwire mounted on the printed side.
 - : soldering side.
 - : B - pattern

When indicating parts by reference number, please include the board name.

A
B
C
D
E
F
G
H
I
J

10

11

12

13

14

15

16

17

18

19

20

21


22

23

24


25

26

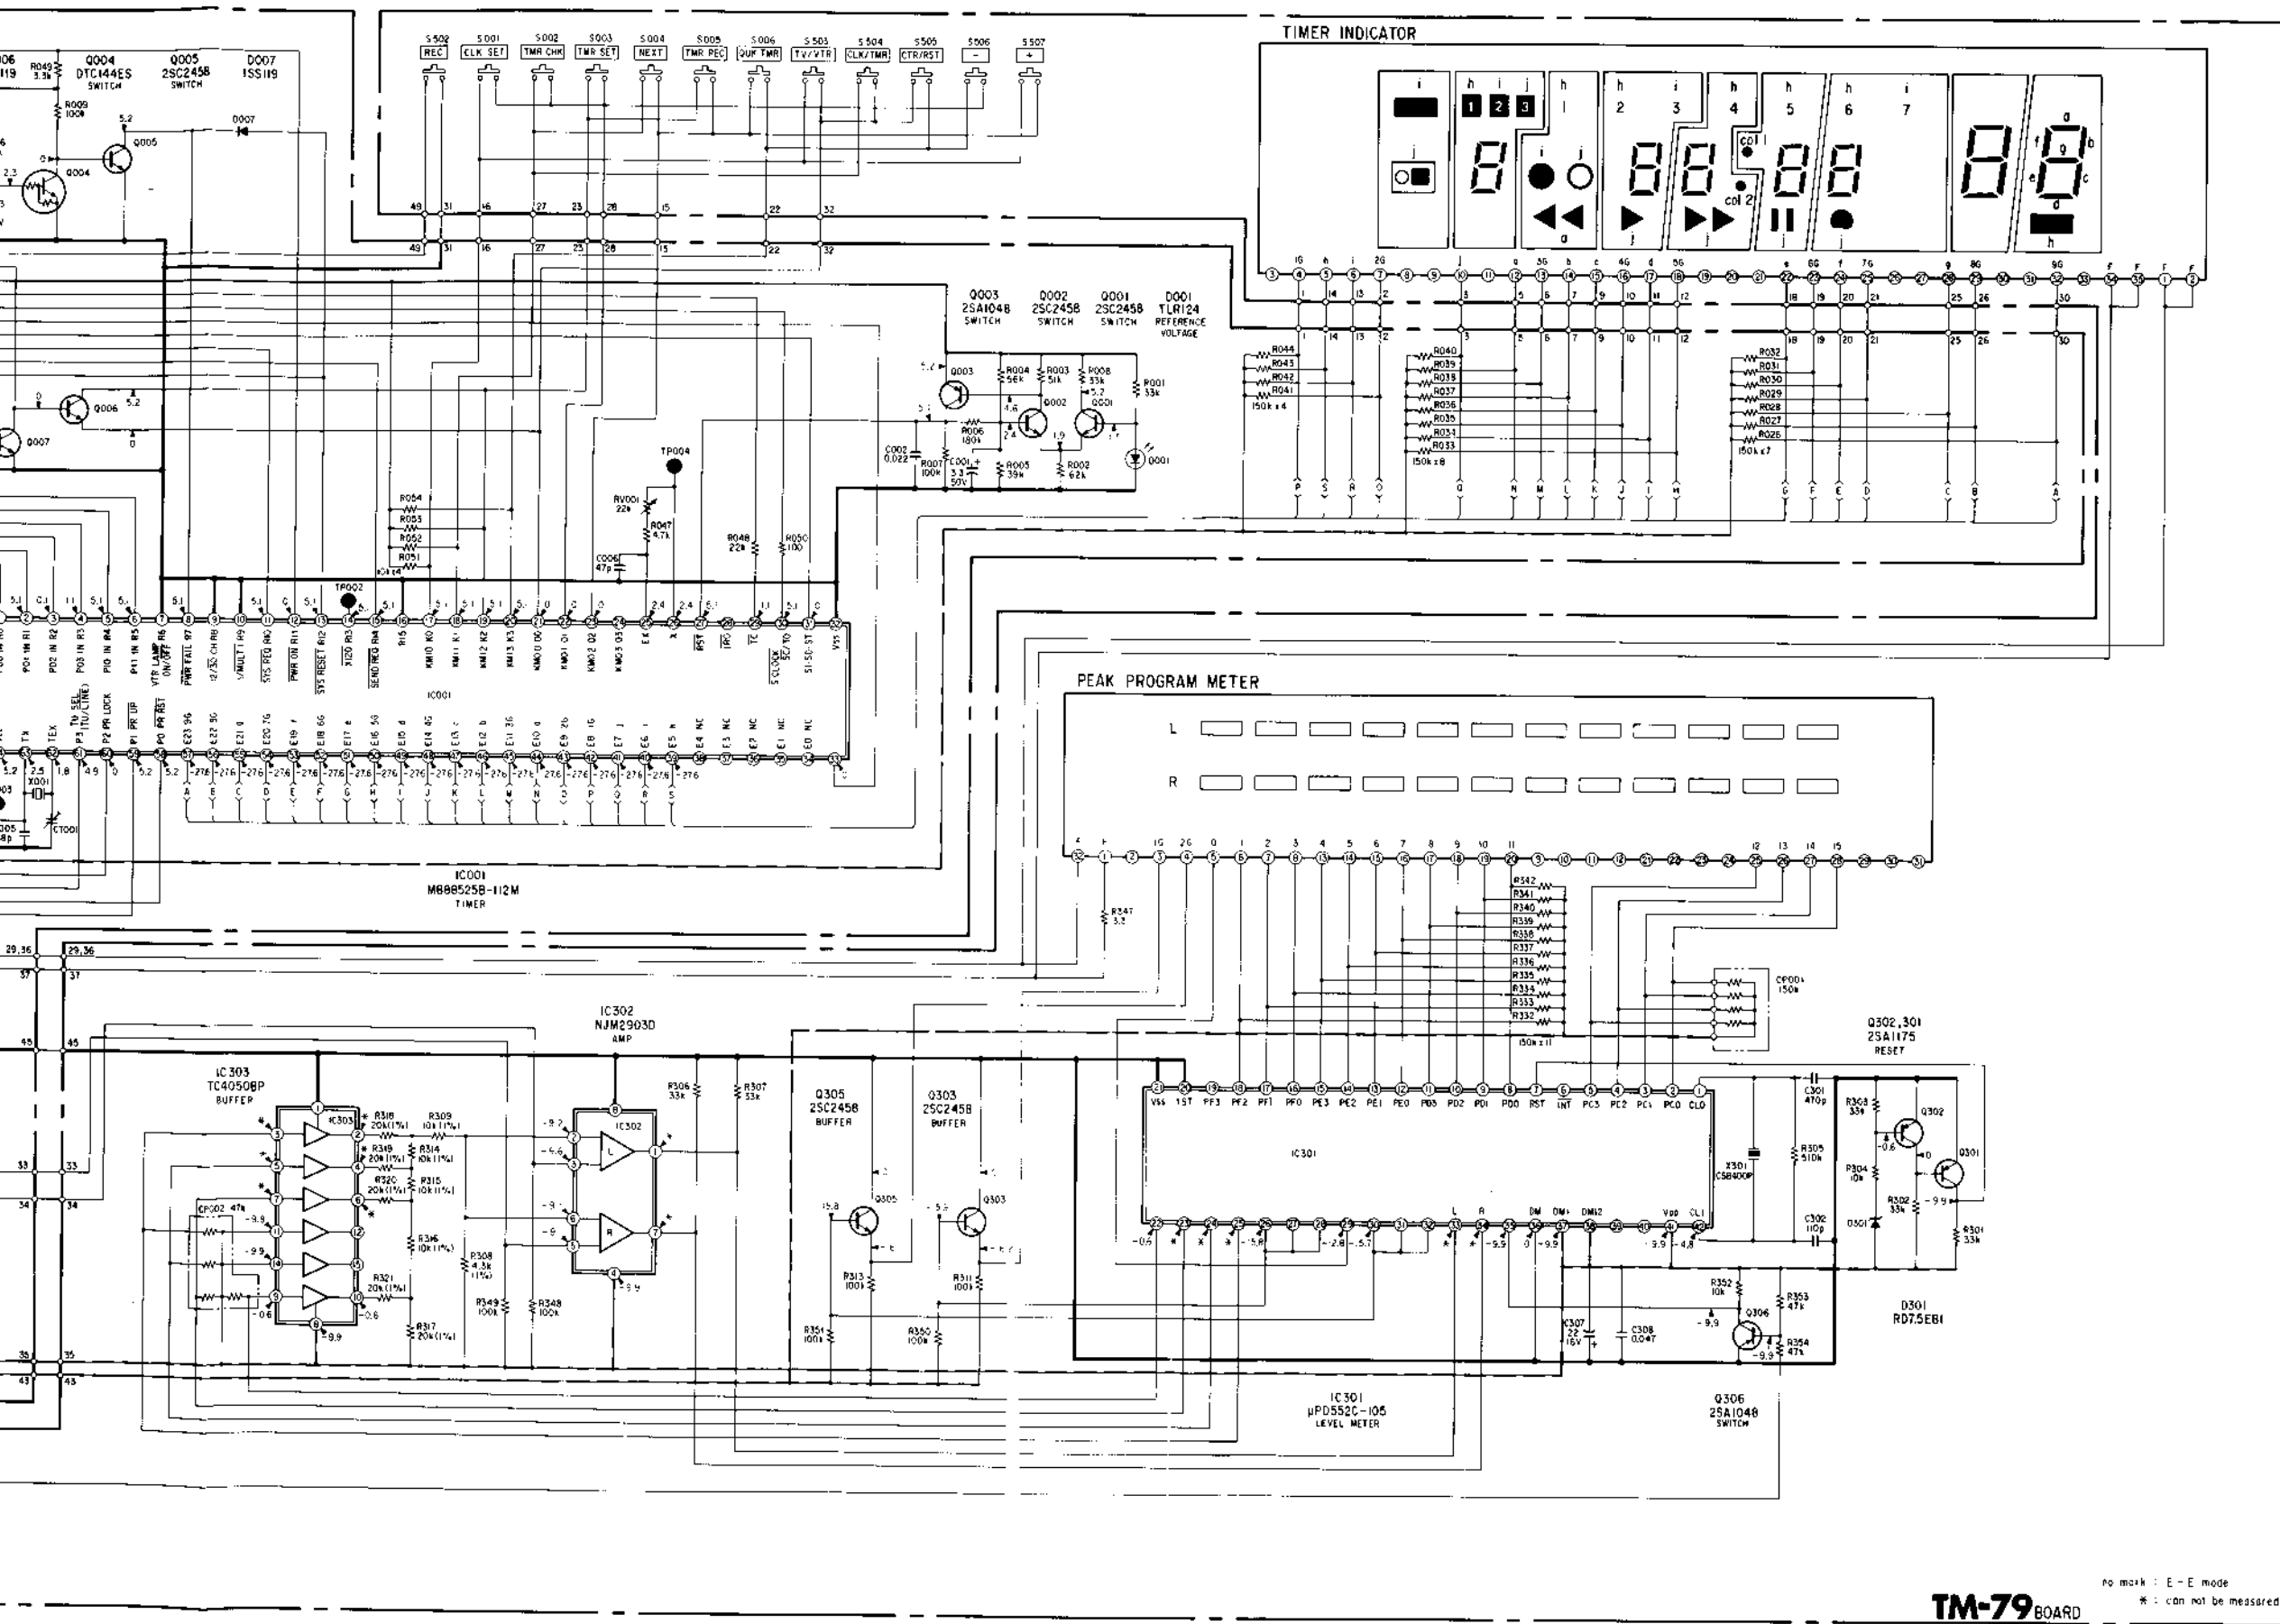



- Note:**
- All resistors are in ohms, 1/10 W unless otherwise noted.
 - All capacitors are in µF unless otherwise noted.
 - All variable and adjustable resistors are of the potentiometer type, curve B, unless otherwise noted.
 - : nonflammable resistor.
 - : fusible resistor.
 - The red lines show the main voltage.
 - All voltages are dc measured with a voltmeter.
 - : B+ bus.
 - : B- bus.

Note: The components identified by a triangle symbol are critical for safety. A part number is specified.

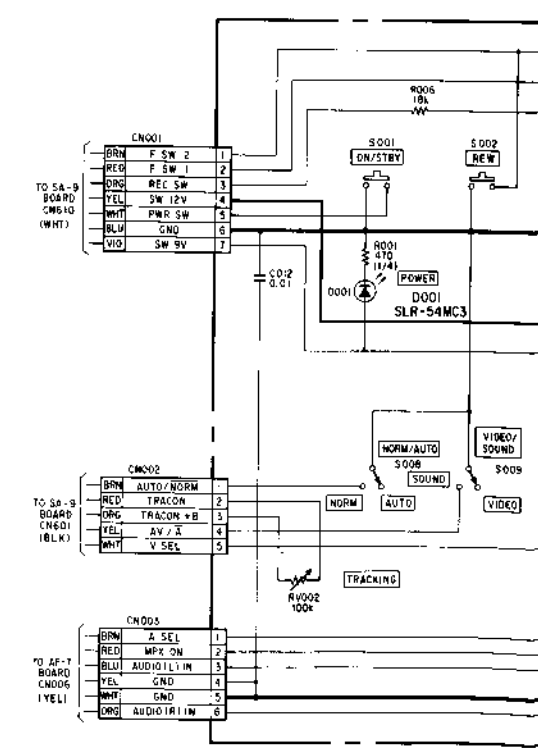


TM-79 BOARD

no mark : E-E mode
* : can not be measured

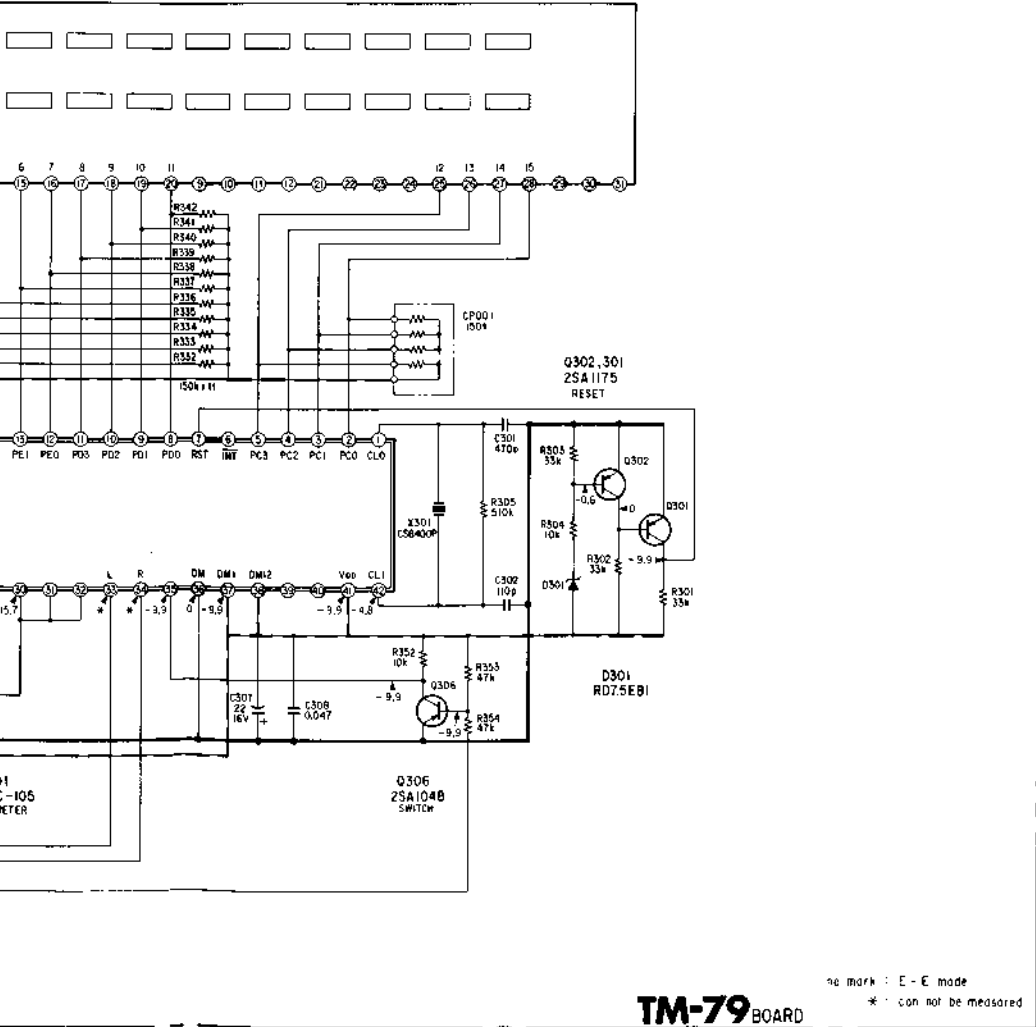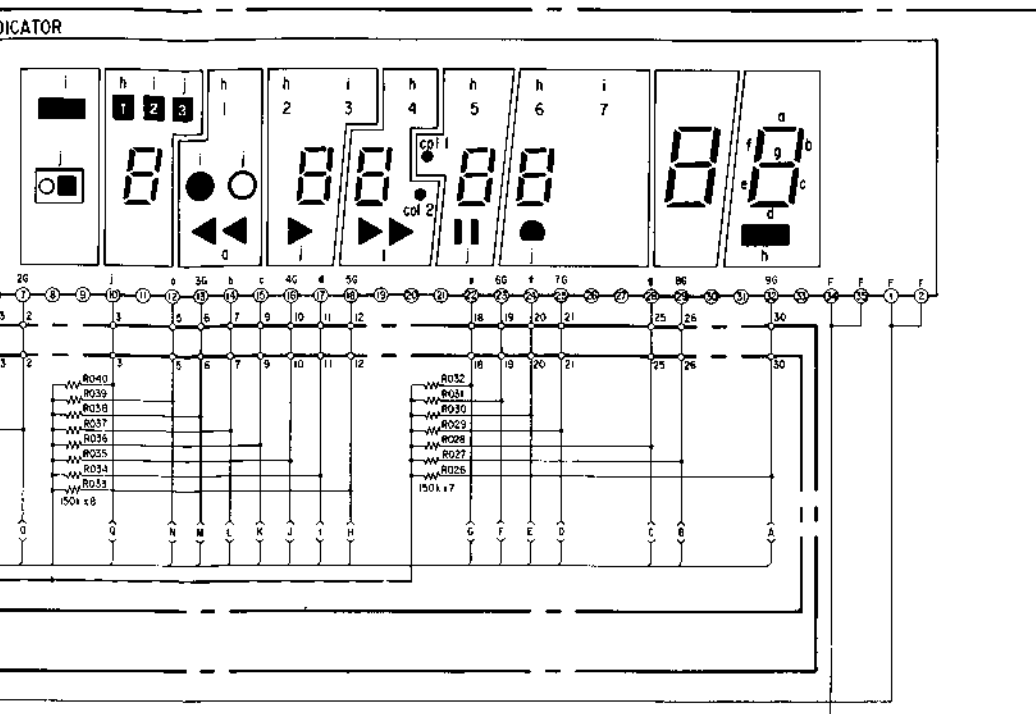

- Note:
- All resistors are in ohms, 1/8 W unless otherwise noted. kΩ: 1000 Ω, MΩ: 1000 kΩ
 - All capacitors are in μF unless otherwise noted. p: μμF
 - 50WV or less are not indicated except for electrolytics.
 - All variable and adjustable resistors have characteristic curve B, unless otherwise noted.
 - : nonflammable resistor.
 - : fusible resistor.
 - The red lines show the main voltages.
 - All voltages are dc measured with a VOM (10 MΩ).
 - : 8+ bus.
 - : 8- bus.


Note: The components identified by shading and mark are critical for safety. Replace only with part number specified.

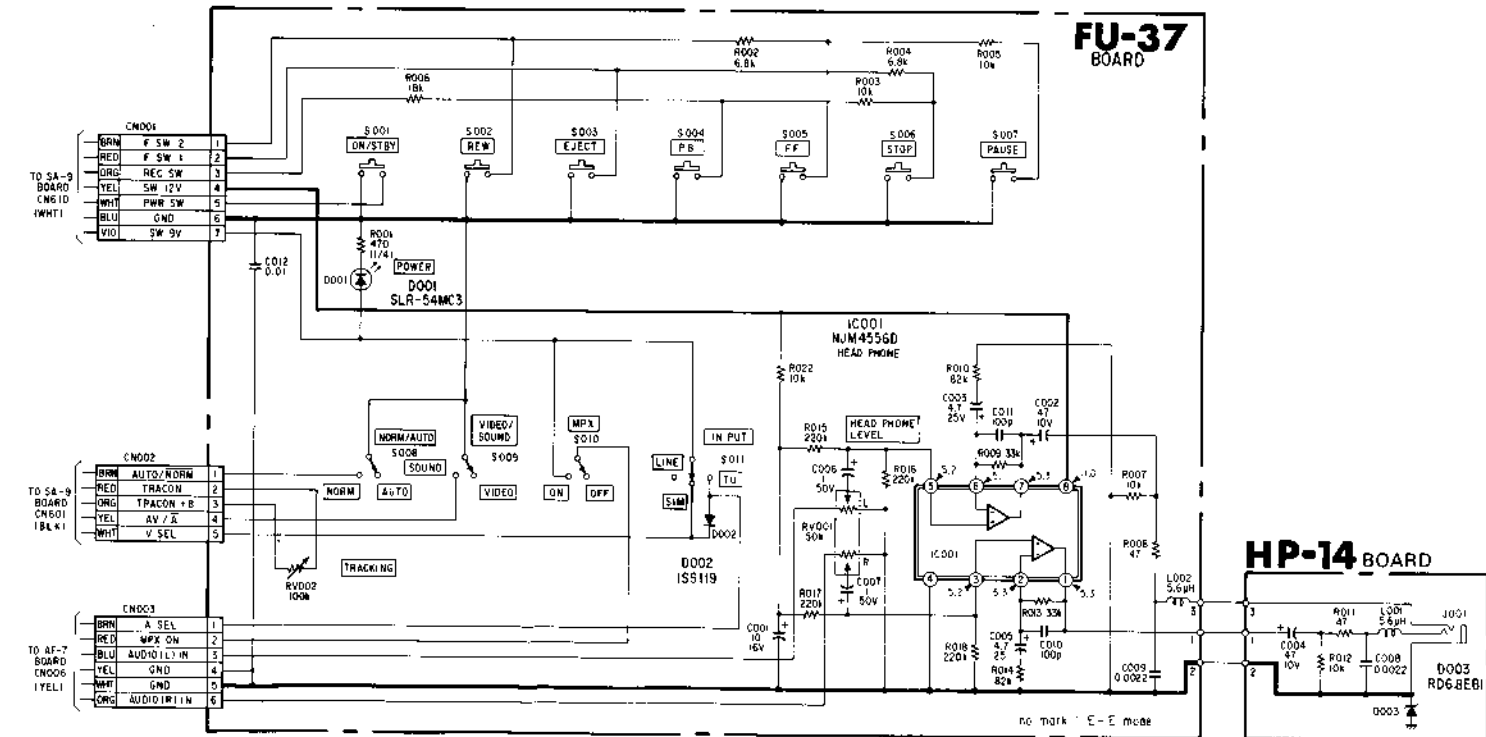


• Signal path

When indicating parts by reference number, please include the board name.

A
B
C
D
E
F
G
H
I
J

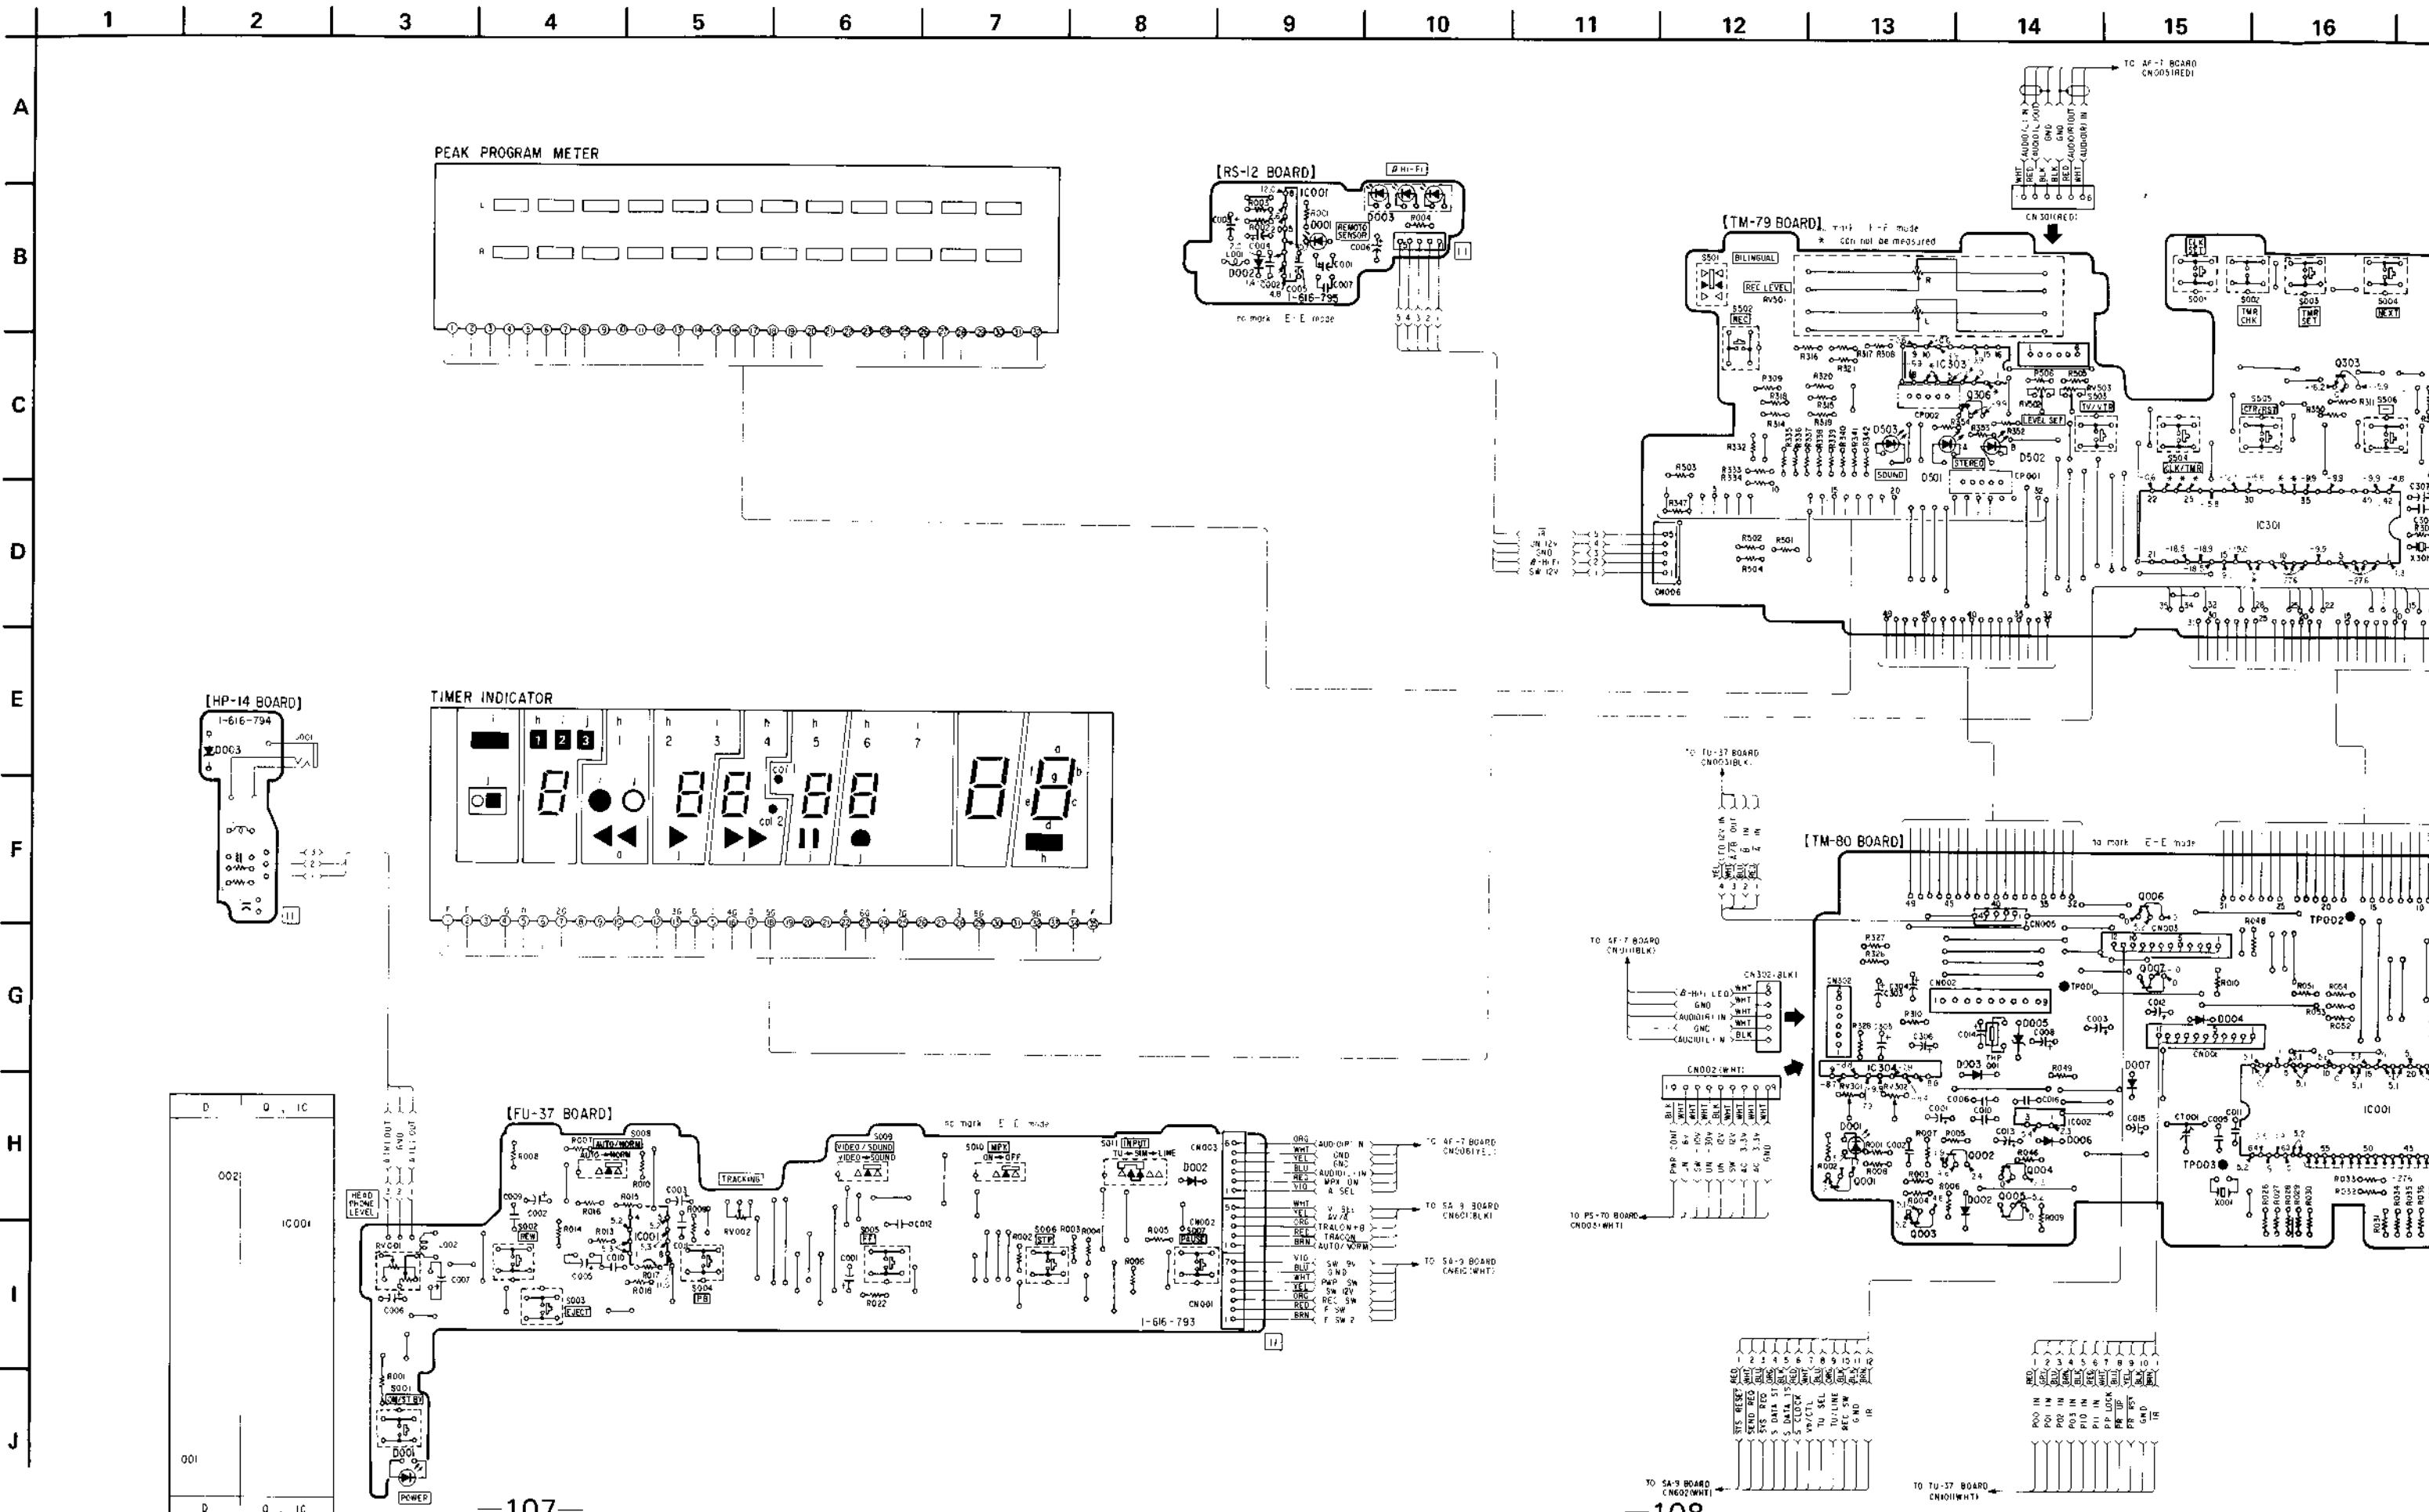

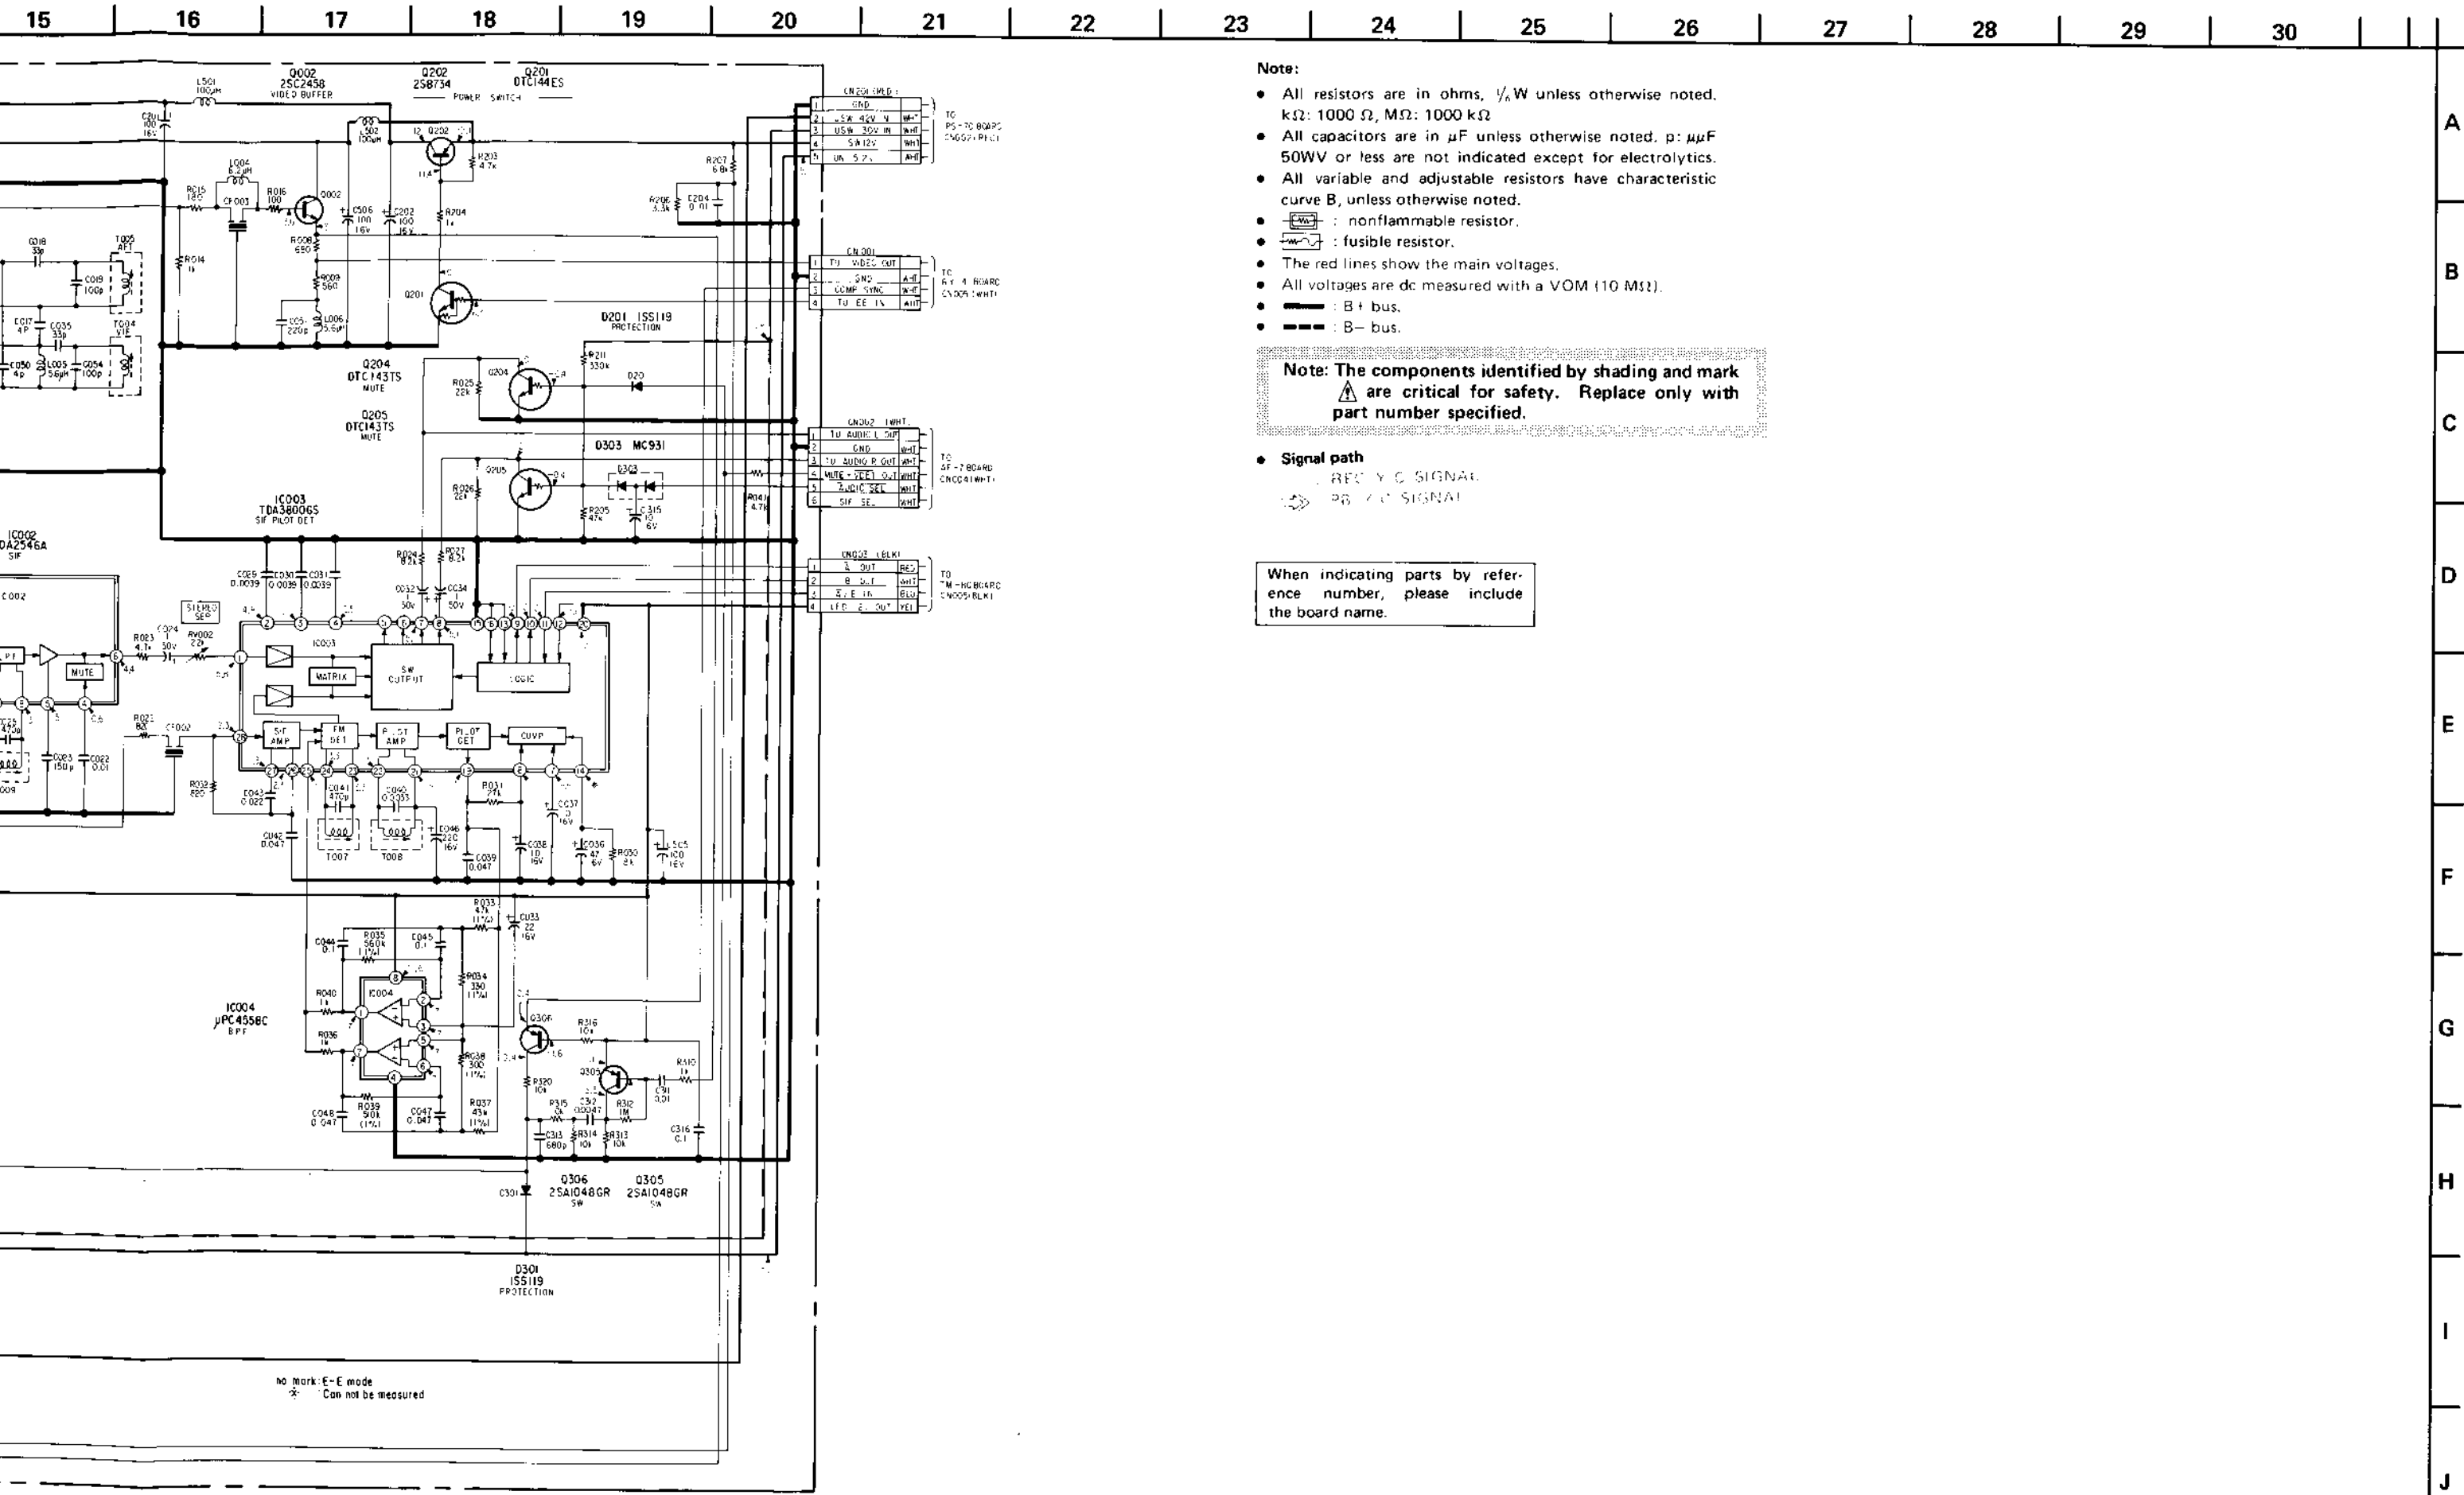

- Note:**
- All resistors are in ohms, $\frac{1}{8}$ W unless otherwise noted. k Ω : 1000 Ω , M Ω : 1000 k Ω
 - All capacitors are in μ F unless otherwise noted. p: μ F
 - 50WV or less are not indicated except for electrolytics.
 - All variable and adjustable resistors have characteristic curve B, unless otherwise noted.
 - : nonflammable resistor.
 - : fusible resistor.
 - The red lines show the main voltages.
 - All voltages are dc measured with a VOM (10 M Ω).
 - : B+ bus.
 - : B- bus.

Note: The components identified by shading and mark are critical for safety. Replace only with part number specified.

- Signal path**
- REC Y C SIGNAL
- PB V C SIGNAL

When indicating parts by reference number, please include the board name.

TUNER TUNER

TU-73 (TUNER) PRINTED WIRING BOARD


— Ref. No. TU-73 BOARD: 5,000 series —

1 2 3 4 5 6 7 8 9 10 11 12 13 14 15

Note:




- —○— : Indicates a leadwire mounted on the component side.
- —●— : Indicates a leadwire mounted on the printed side.
- —○— : soldering side.
- —●— : B+ pattern

Q IC	IC201	102	101	306	IC103	310	001	IC004	IC102	IC002	IC001	IC003	002	205, 204	201
D			305	301	102	306	104				IC101			203	201
T.P ADJ							RV001		001						RV002

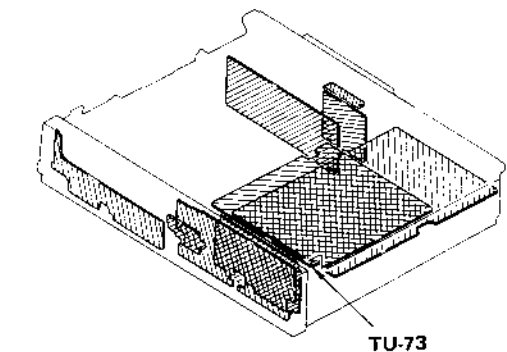


TU-73

A
B
C
D
E
F
G
H
I
J

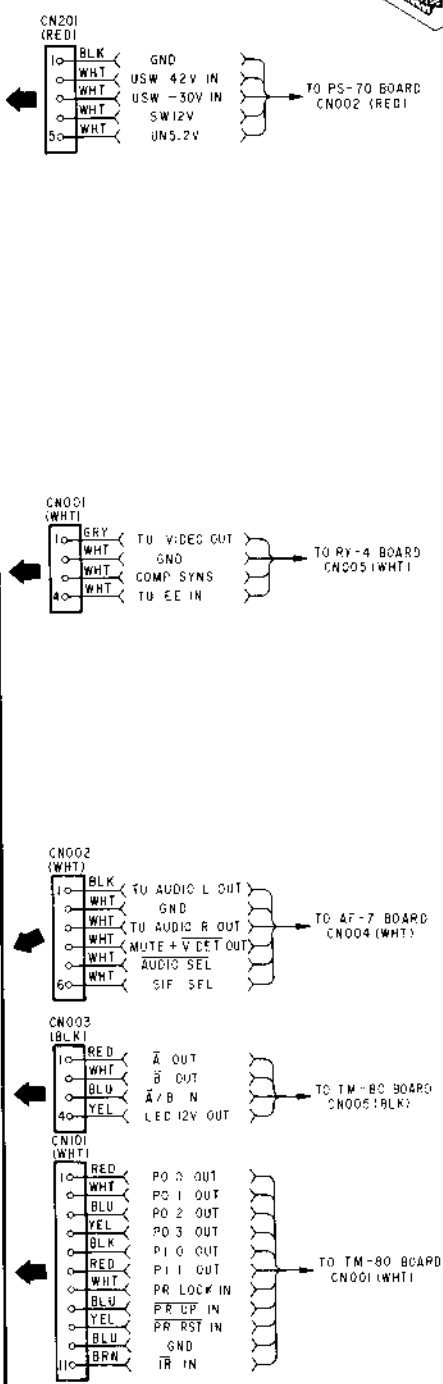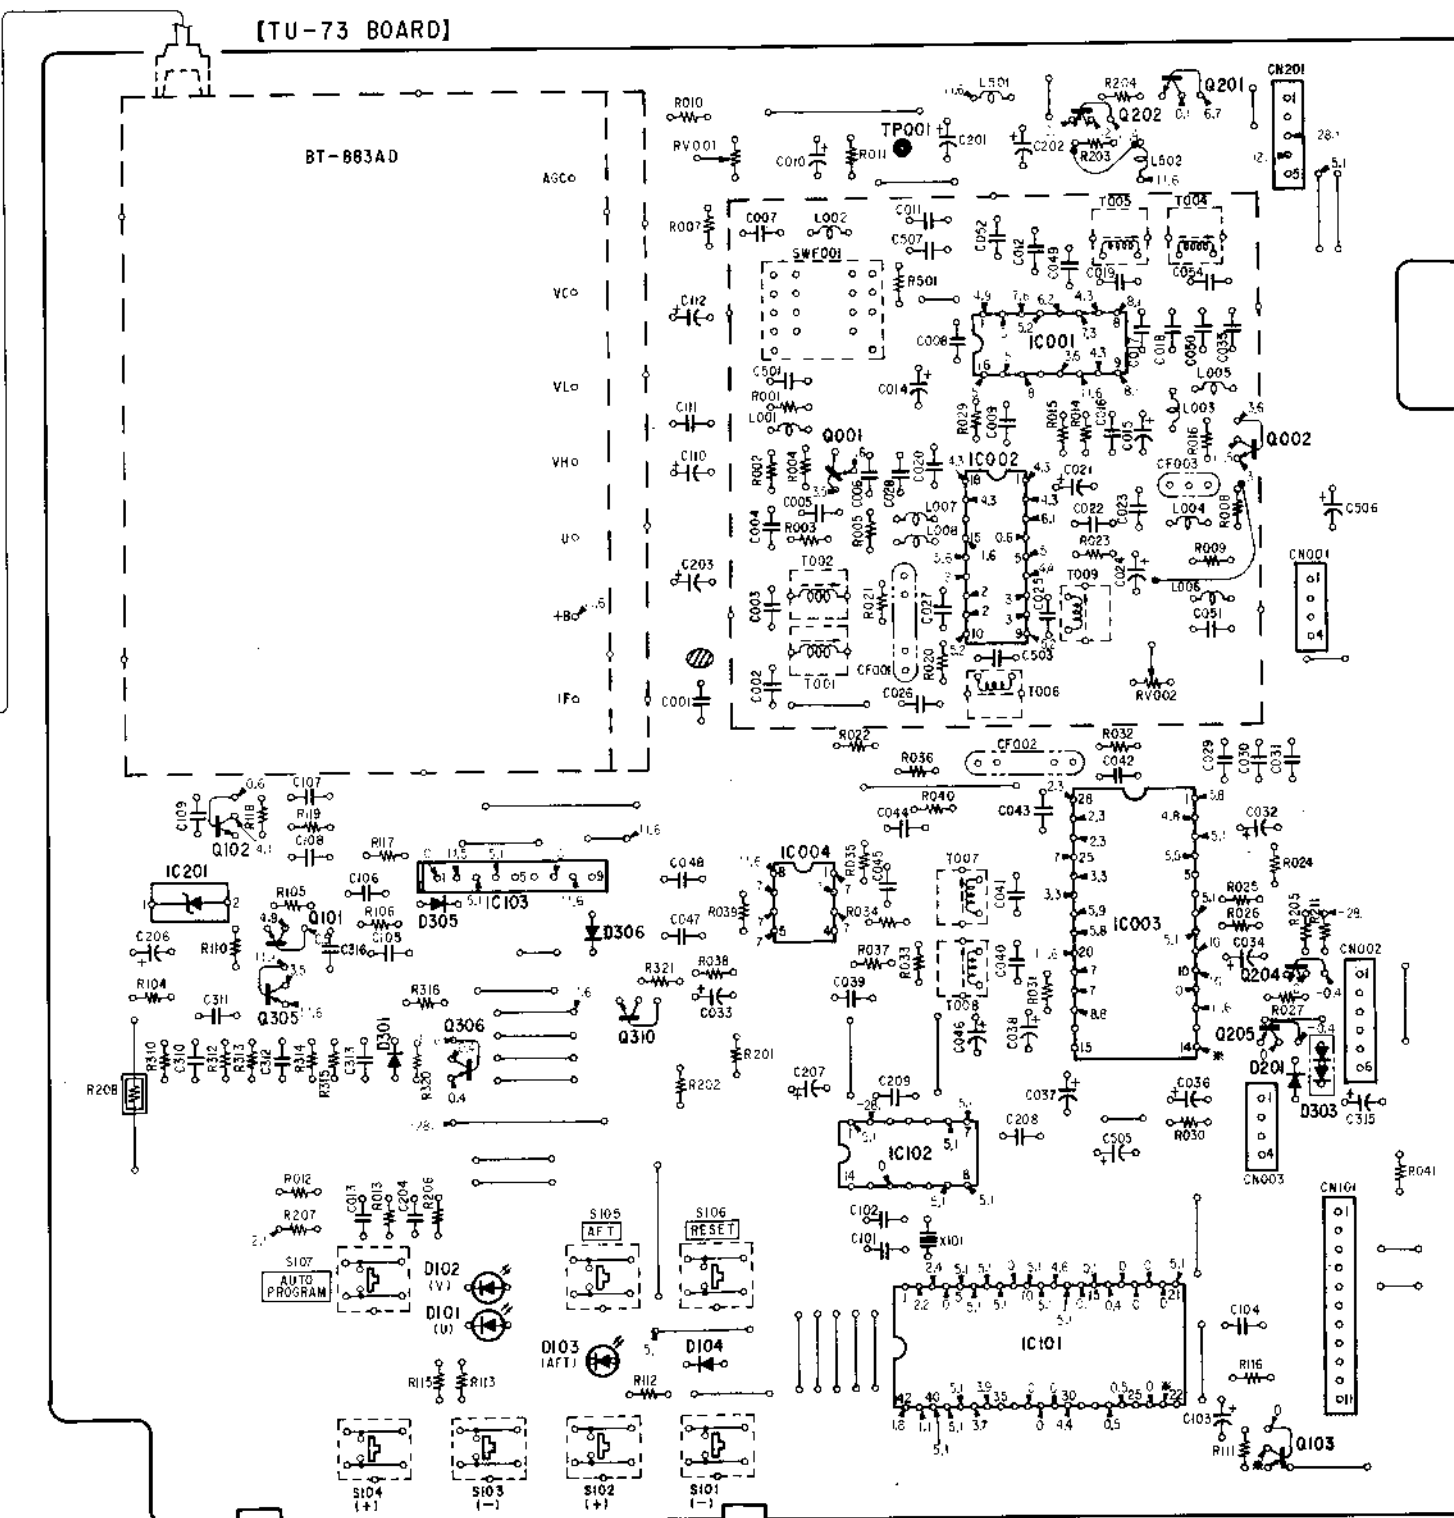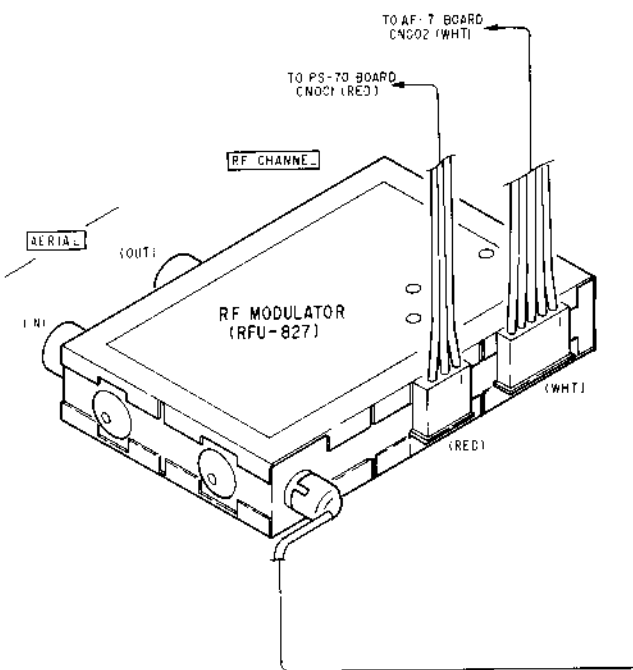

When indicating parts by reference number, please include the board name.

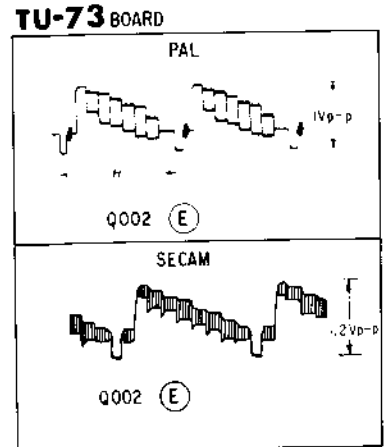


no mark: E-E mode
* : Can not be measured

4-7. PS-70 (POWER), PS-71 (POWER), PS-78 (POWER) SCHEMATIC DIAGRAMS

- Ref. No. PS-70 BOARD: 8,000 series, PS-71 BOARD: 8,000 series, PS-78 BOARD: 8,000 series -

POWER POWER

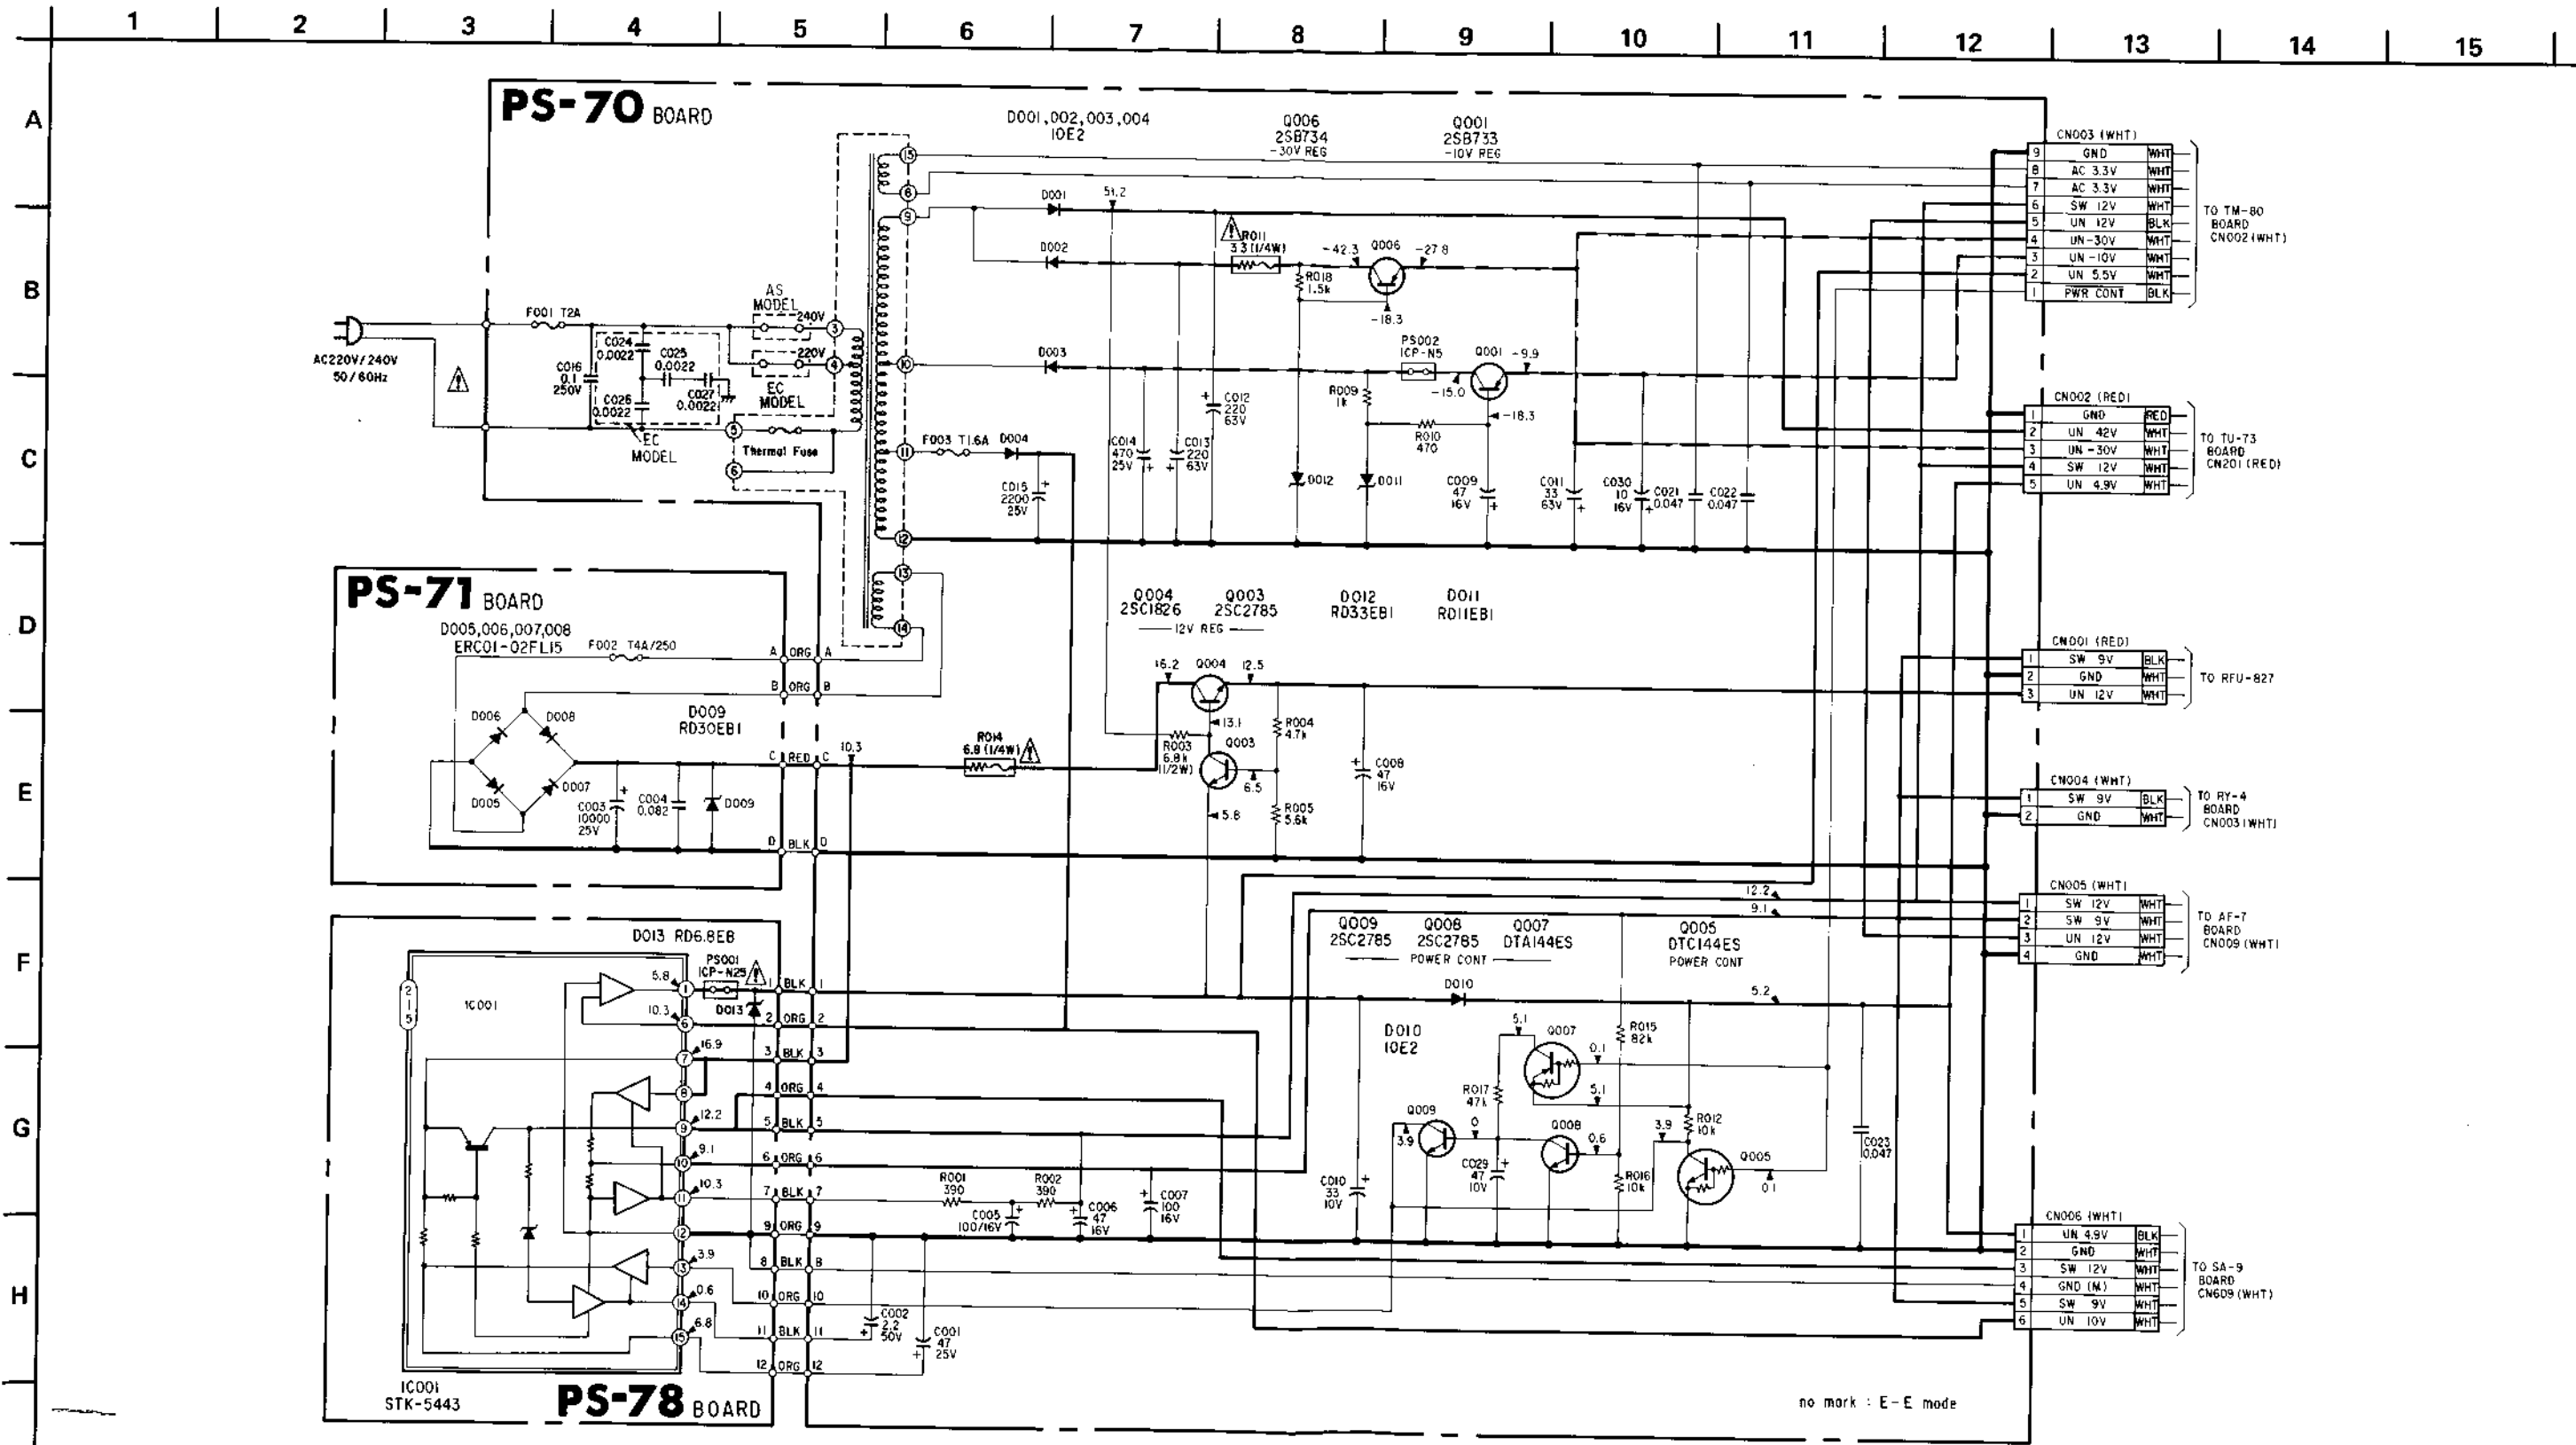

- Note:**
- All resistors are in ohms, 1/8W unless otherwise noted. kΩ: 1000 Ω, MΩ: 1000 kΩ
 - All capacitors are in μF unless otherwise noted. p: pμF
 - 50WV or less are not indicated except for electrolytics.
 - All variable and adjustable resistors have characteristic curve B, unless otherwise noted.
 - : nonflammable resistor.
 - : fusible resistor.

- The red lines show the main voltages.
- All voltages are dc measured with a VOM (10 MΩ).
- : B+ bus.
- : B- bus.


Note: The components identified by shading and mark are critical for safety. Replace only with part number specified.

When indicating parts by reference number, please include the board name.

no mark : E-E mode

POWER POWER

PS-70 (POWER), PS-71 (POWER), PS-78 (POWER) PRINTED WIRING BOARDS
 - Ref. No. PS-70 BOARD: 8,000 series, PS-71 BOARD: 8,000 series, PS-78 BOARD: 8,000 series -

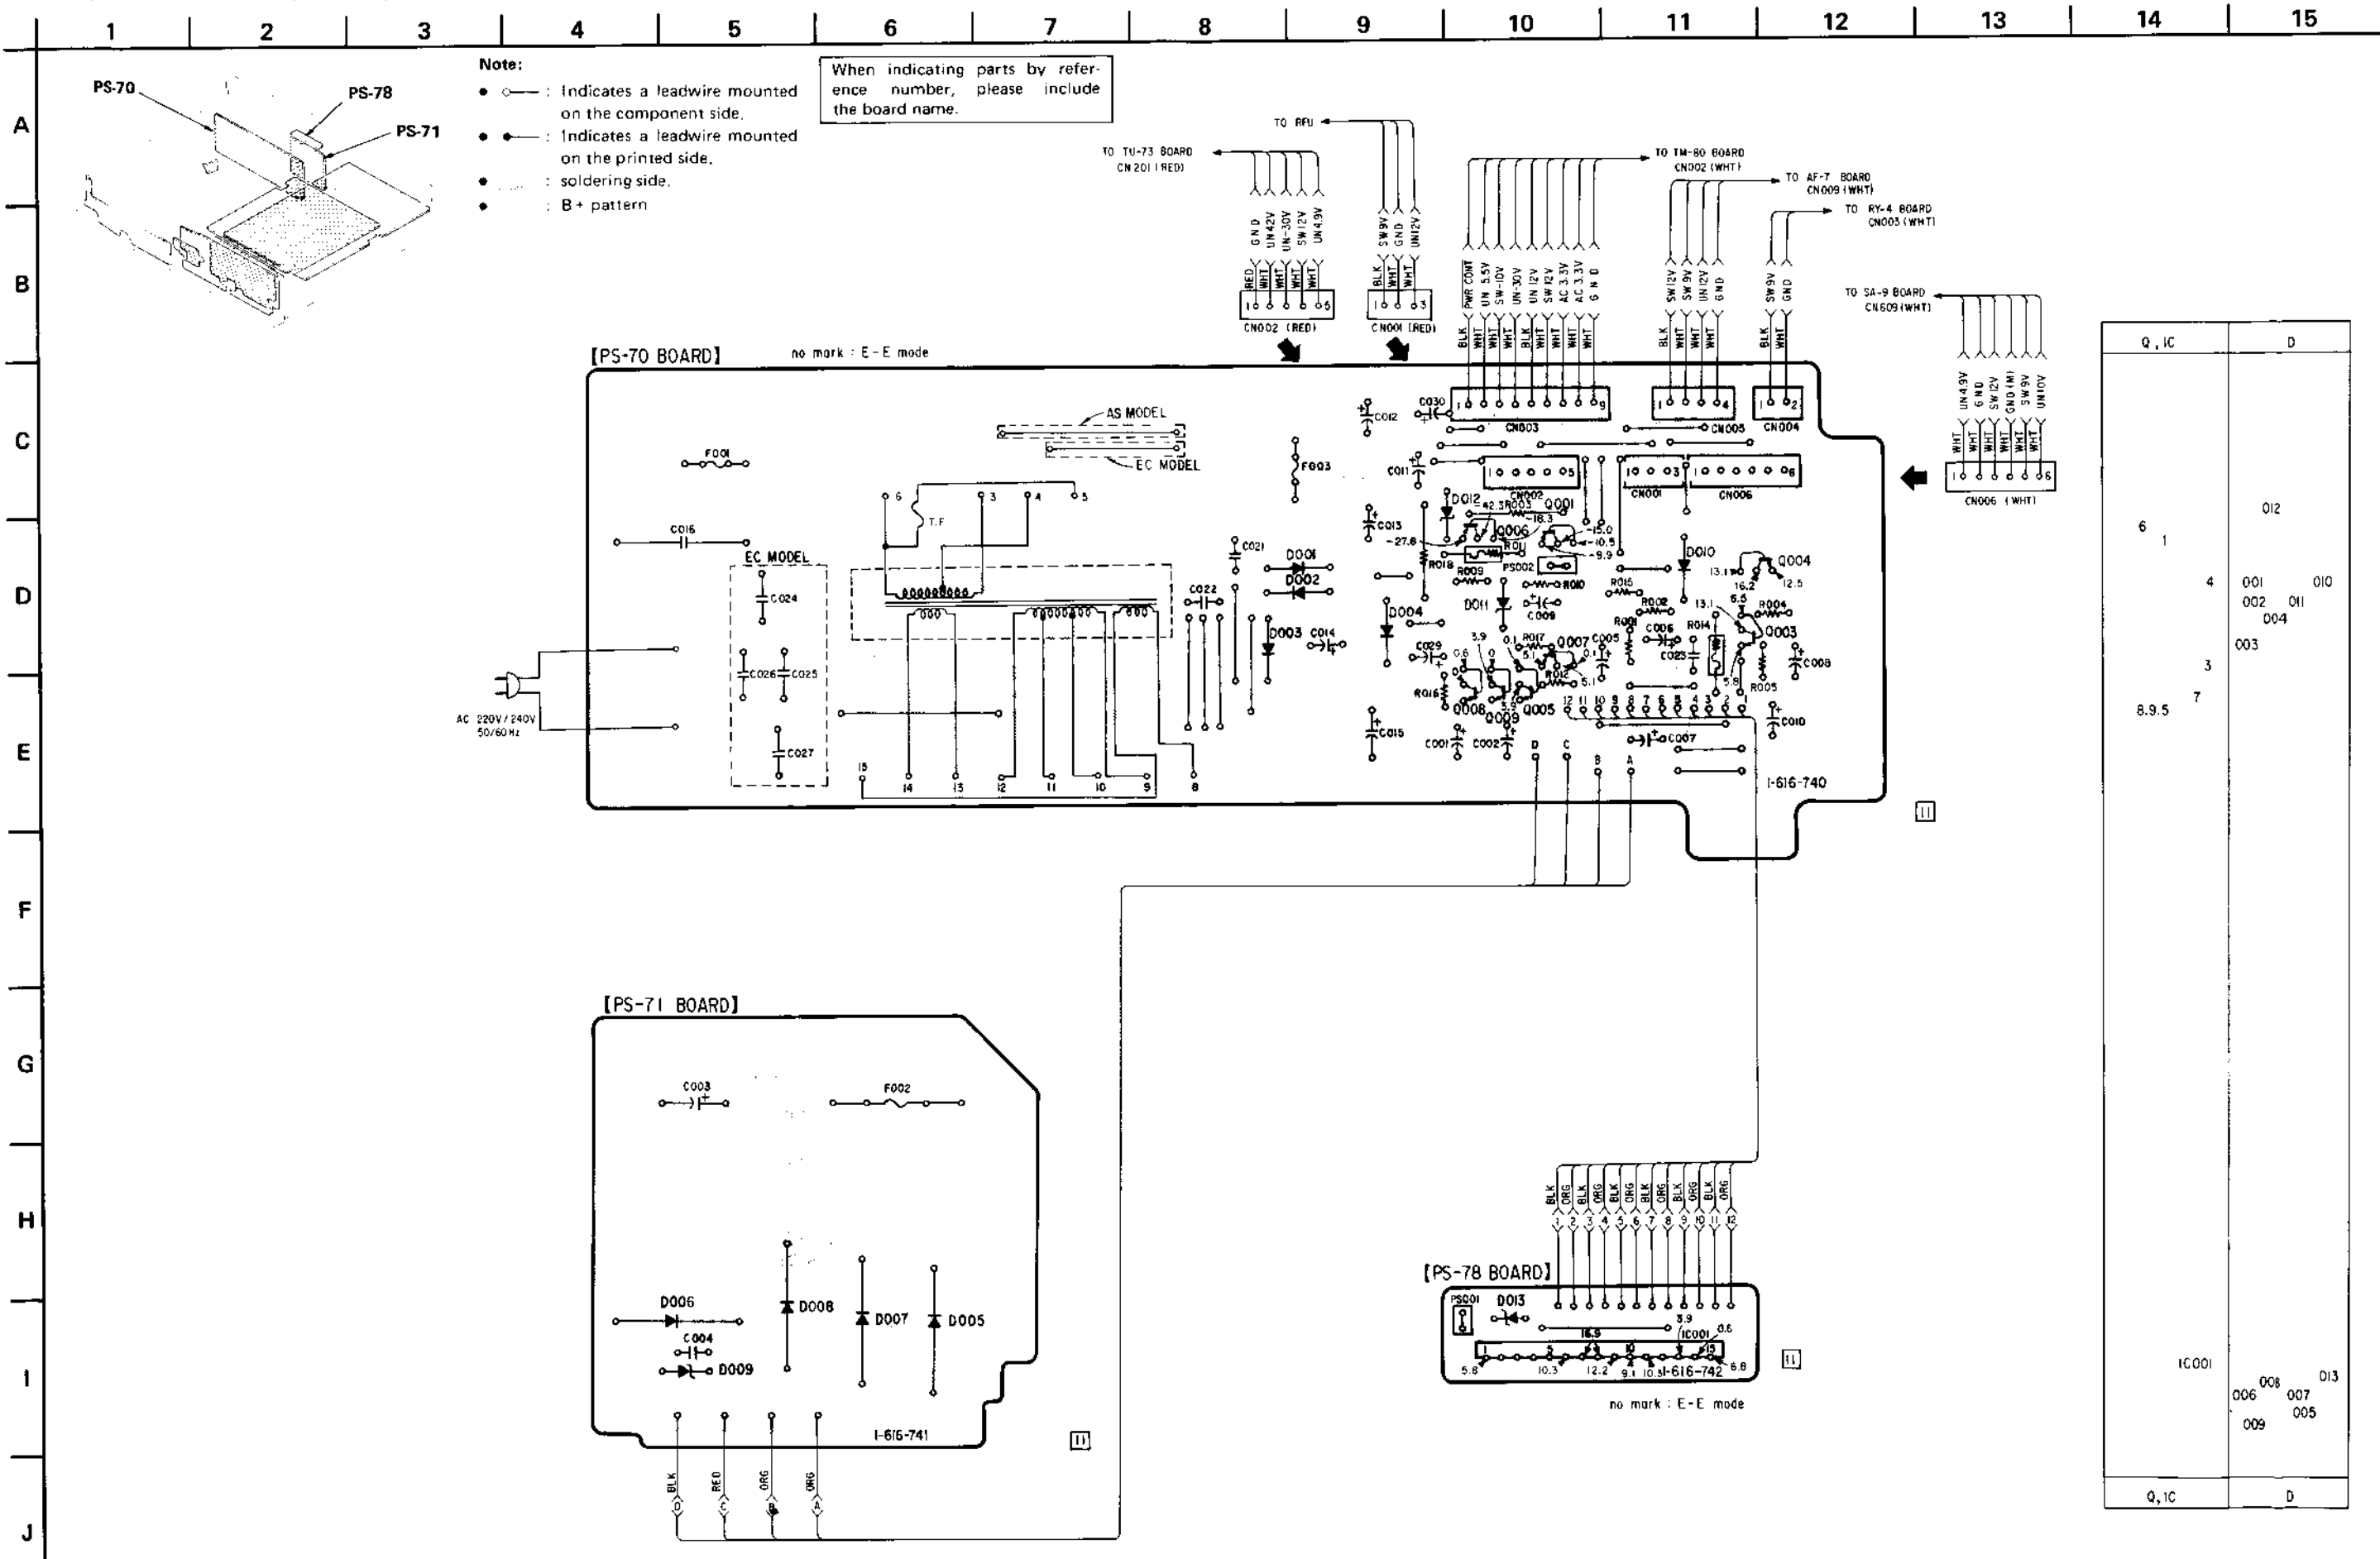


- Note:**
- — Indicates a leadwire mounted on the component side.
 - — Indicates a leadwire mounted on the printed side.
 - : soldering side.
 - : B+ pattern

When indicating parts by reference number, please include the board name.


Q, IC		D	
6	1	012	
	4	001	010
		002	011
		004	
	3	003	
	7		
	8.9.5		
		1C001	D13
		006	007
		009	005
Q, IC		D	

4-8. SEMICONDUCTORS


BA4558
HA17558
LM3587
NJM2903D
NJM4556D
NJM4558D
NJM4562D
 μ PC358C
 μ PC393C
 μ PC4558C



BA5116

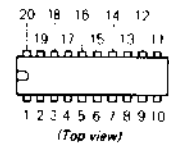


BA6138
CX894
LA7205
LA7920




BA634




BA7007



CX10021A-NP
CX10021A-P
CX10021B-NP
CX20097
CX20097A
CX20105
M50160-111SP
 μ PD552C-105




CX10023




CX20043
CX20104
CX20124




CX20045
CX866A
CX866B
TDA3800GS




CX7926
CX20061
 μ PC1373H
 μ PC1373HA
 μ PC1391H
 μ PC1391HA




LB1640N
M54543L

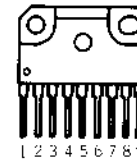


M58653P
TC4066BP

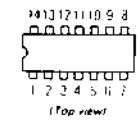


MB88201-191G
MC14538BCP
TA7607AP
TC4050BP
 μ PD4050BC




MB88525B-112M

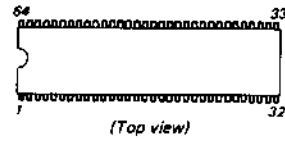

MB88551-150M

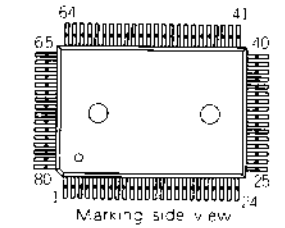


S8054ALB




STK5443




TA7060AP




TDA2546A

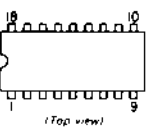


TK15011Z

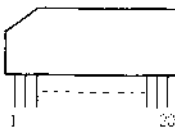


μ PC1513HA




μ PC574J



2SA1026




2SA1048-GR
2SA1115
2SA1115-F
2SC2458
2SC2603
2SC403SP-3
DTA114ES
DTA144ES
DTC114ES
DTC124ES
DTC143TS
DTC144ES
DTC144WS



2SA1175
2SC2785



2SA733-P
2SA844
2SA844-C
2SA933S
2SC1740S




2SB733
2SB733-4
2SB734
2SD773
2SD774




2SB739
2SB740-3
2SC1475
2SD788
2SD789
2SD789-4




2SC1061
2SC1826
2SC2216
2SD313HP-E
2SD880-GR



2SC2717




2SD1164




2SK108




2SK152




10E2




1S1555
EQA02-09D
EQA02-28B
HZ10E-B1
HZ30E-B1
HZ6.8E-B1
HZT33-02
RD10E-B1
RD11E-B1
RD30E-B1
RD5.1E-L2
RD6.2E-B
RD6.2E-N1
RD6.8E-B
RD6.8E-B1
RD7.5E-B1
RD8.2E-B
RD9.1E-B

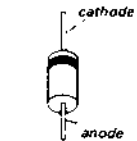


1SS119
1SS133
1SS148



ERC01-02FL
ERC01-02FL15




MC911




MC921




MC931



PH302B




SP1201-22




SLF206B



SLR-54MC3

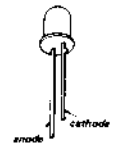

TLG123A
TLR123
TLR124

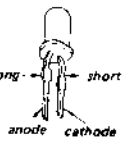


SECTION 5 EXPLODED VIEWS

NOTE:

- Items with no part number and no description are not stocked because they are seldom required for routine service.
- The construction parts of an assembled part are indicated with a collation number in the remark column.
- Items marked "*" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- The mechanical parts with no reference number in the exploded views are not supplied.


The components identified by shading and mark Δ are critical for safety. Replace only with part number specified.

5-1. FRONT PANEL AND CABINET ASSEMBLIES

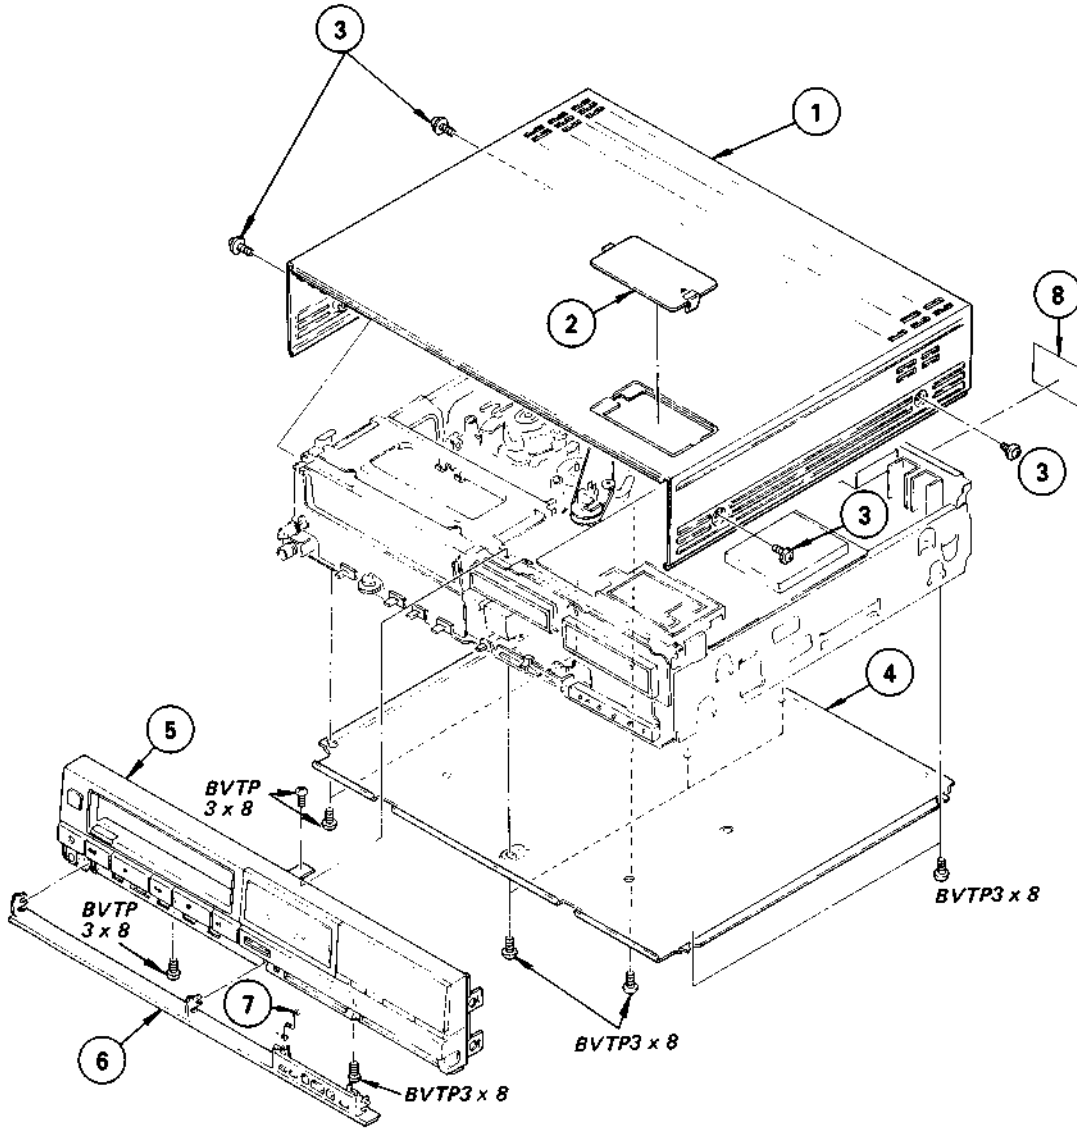


No.	Part No.	Description	Remark	No.	Part No.	Description	Remark
1	*X-0774-304-0	CASE ASSY, UPPER		6	X-0774-302-0	DOOR ASSY, FRONT	
2	3-684-177-01	LID, PRESET		7	3-696-118-01	SPRING	
3	4-886-821-01	SCREW, M3 CASE		8	*3-696-149-01	LABEL, MODEL NUMBER (NO.1) (EC MODEL)	
4	*3-696-147-01	PLATE, BOTTOM			*3-696-150-01	LABEL, MODEL NUMBER (NO.1) (AS MODEL)	
5	X-0774-301-0	PANEL BLOCK ASSY, FRONT (EC MODEL)					
	X-0774-323-0	PANEL BLOCK ASSY, FRONT (AS MODEL)					

5-2. TUNER, TIMER AND POWER ASSEMBLIES

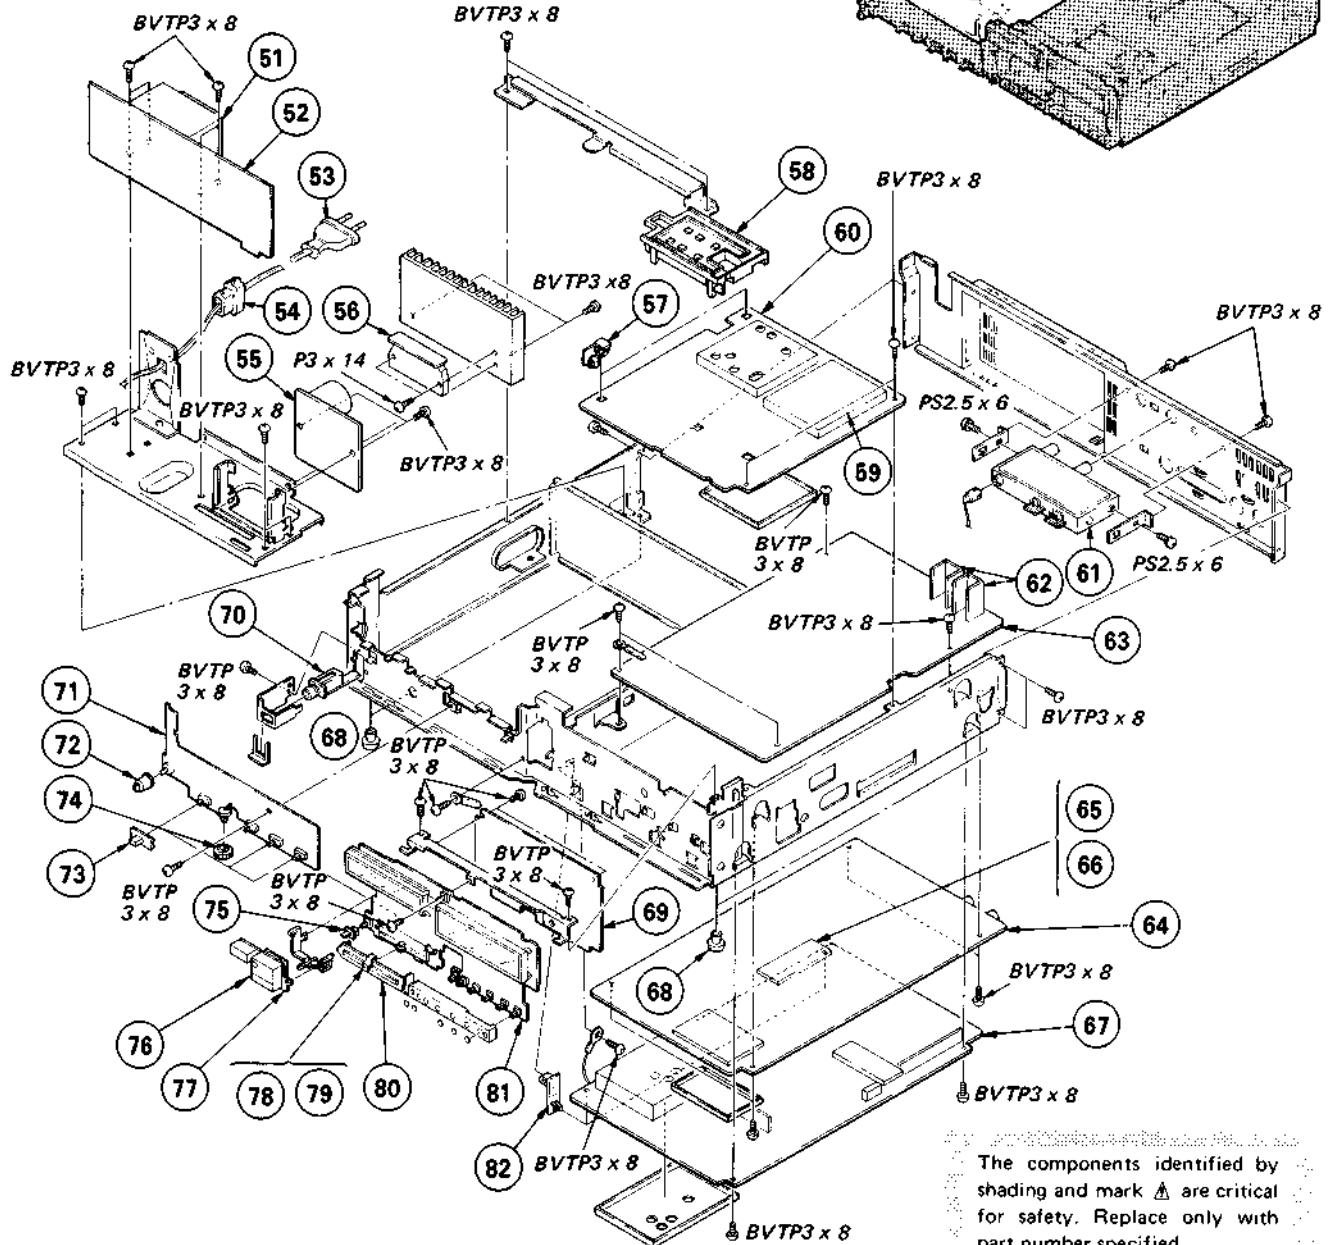


No.	Part No.	Description	Remark	No.	Part No.	Description	Remark
51	Δ 1-448-187-11	TRANSFORMER, POWER (T901)		65	*3-684-087-01	CASE (S) MAIN, SHIELD, AF	
52	*A-6729-228-A	PS-70 BOARD, COMPLETE (EC MODEL)		66	*3-684-072-01	LID, BOTTOM, AF SHIELD CASE (S)	
	*A-6729-231-A	PS-70 BOARD, COMPLETE (AS MODEL)		67	*A-6711-676-A	RY-4 BOARD, COMPLETE (EC MODEL)	
					*A-6711-678-A	RY-4 BOARD, COMPLETE (AS MODEL)	
				68	3-670-155-11	LEG	
				69	*A-6725-487-A	TM-80 BOARD, COMPLETE	
				70	*1-616-794-11	HP-14 BOARD	
				71	*A-6717-410-A	FU-37 BOARD, COMPLETE	
				72	3-696-103-01	KNOB, HP	
				73	3-696-106-01	KNOB, SLIDE	
				74	3-696-105-02	KNOB, TRACK CONTROL	
				75	3-696-111-01	BUTTON, BILIGUAL	
				76	*3-696-170-01	PLATE, BLIND, CATCHER, RAY	
				77	*A-6724-486-A	RS-12 BOARD, COMPLETE	
				78	3-696-130-01	KNOB (RIGHT), REC SLIDE	
				79	3-696-134-01	KNOB (LEFT), REC SLIDE	
				80	3-696-131-01	SCALE, DIAL, REC SLIDE	
				81	*A-6725-485-A	TM-79 BOARD, COMPLETE	
				82	*4-313-732-00	CLIP, HINGE, CIRCUIT BOARD	
62	*3-681-170-00	HEAT SINK, S					
63	*A-6715-282-A	SA-9 BOARD, COMPLETE (EC MODEL)					
	*A-6715-284-A	SA-9 BOARD, COMPLETE (AS MODEL)					
64	*A-6713-240-A	AF-7 BOARD, COMPLETE					

5-3. FRONT LOADING ASSEMBLY

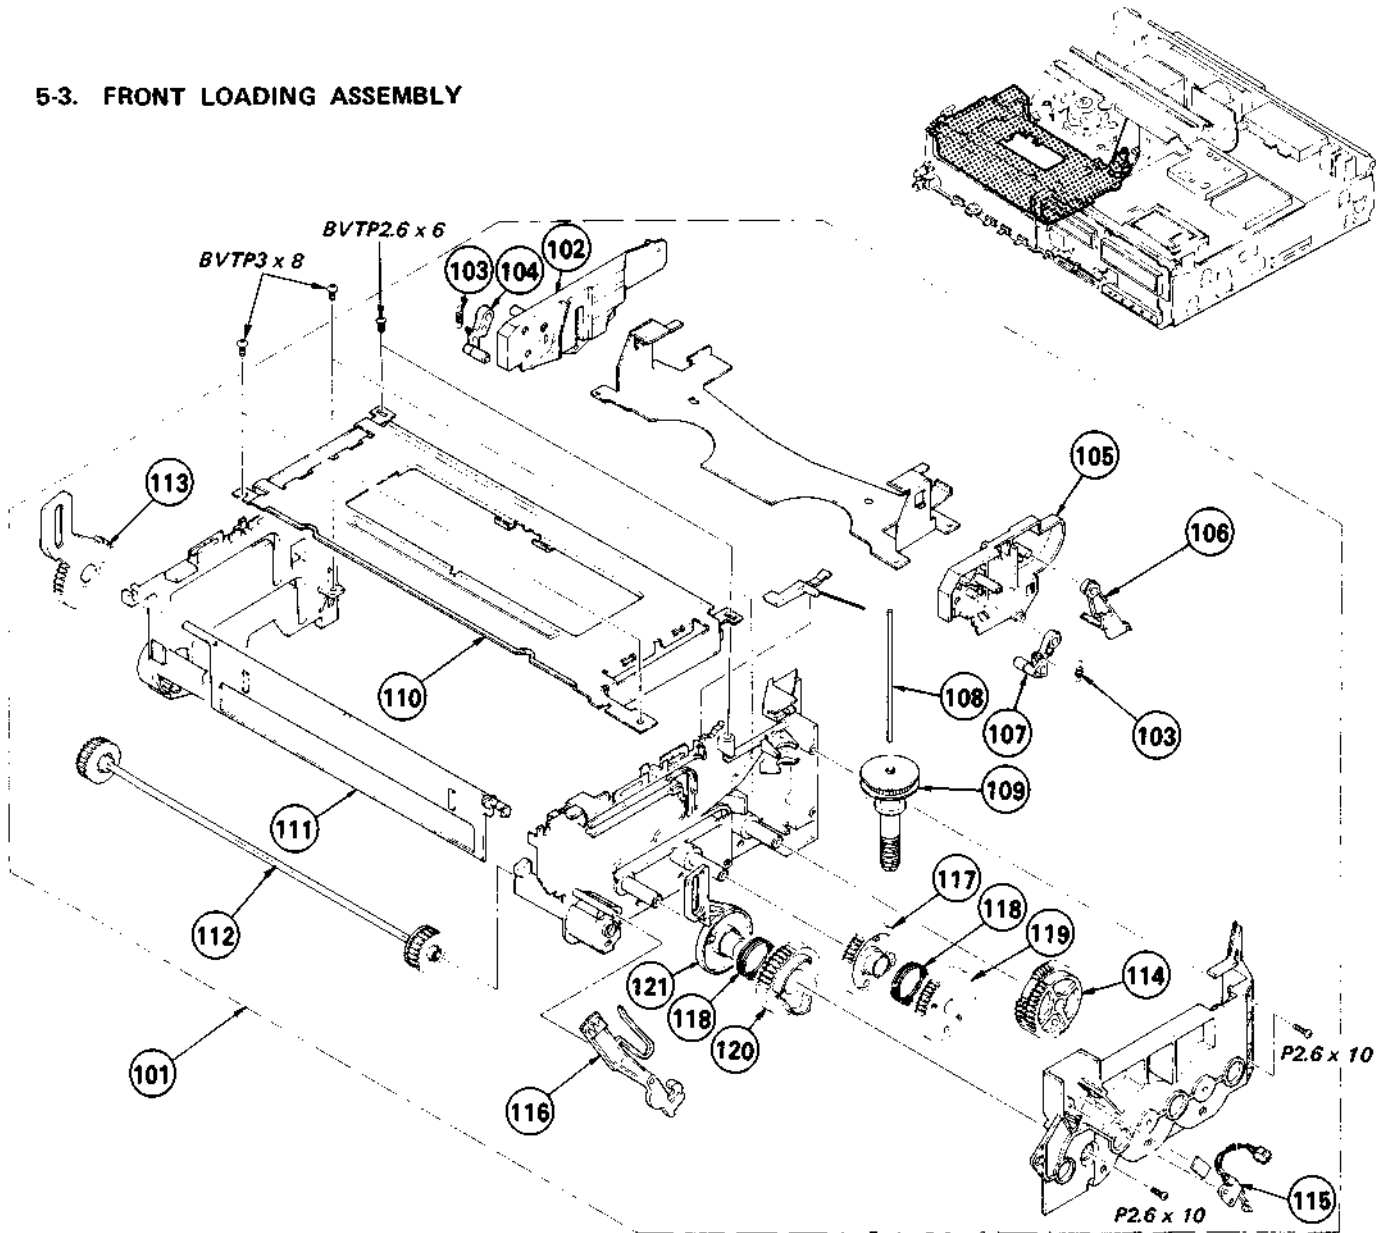


No.	Part No.	Description	Remark	No.	Part No.	Description	Remark
101	*A-6751-267-A	THREADING BLOCK ASSY, FRONT	102-121	112	X-3684-116-1	SHAFT ASSY, MIDWAY GEAR	
102	*X-3684-117-1	PLATE ASSY, SIDE, BASE (LEFT)		113	*3-684-166-01	ARM (LEFT), DRIVING	
103	3-684-258-01	SPRING, TENSION		114	X-3684-123-1	GEAR ASSY, DRIVING	
104	X-3684-125-1	RETAINER (LEFT) ASSY, CASSETTE		115	1-554-840-11	SWITCH, LEAF (CASSETTE ON) (S904)	
105	*X-3684-118-1	PLATE ASSY, SIDE, RIGHT		116	*3-693-854-01	ARM, SWITCHING, DOOR	
106	*3-684-108-01	ARM, LID OPEN		117	3-684-111-01	GEAR (B), LIMITER	
107	X-3684-124-1	RETAINER (RIGHT) ASSY, CASSETTE		118	3-684-115-01	SPRING	
108	3-679-123-00	SHAFT, GEAR, WORM		119	3-684-109-01	GEAR (A), LIMITER	
109	3-684-164-01	GEAR, WORM		120	3-684-163-01	GEAR, DRIVING ARM	
110	*3-684-195-01	PLATE, TOP		121	3-684-165-01	ARM (RIGHT), DRIVING	
111	X-3696-106-1	DOOR ASSY					

5-4. CHASSIS ASSEMBLY 1

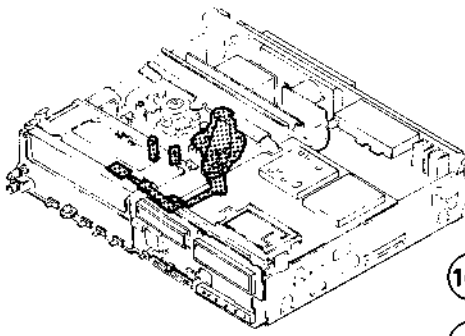


The components identified by shading and mark **A** are critical for safety. Replace only with part number specified.

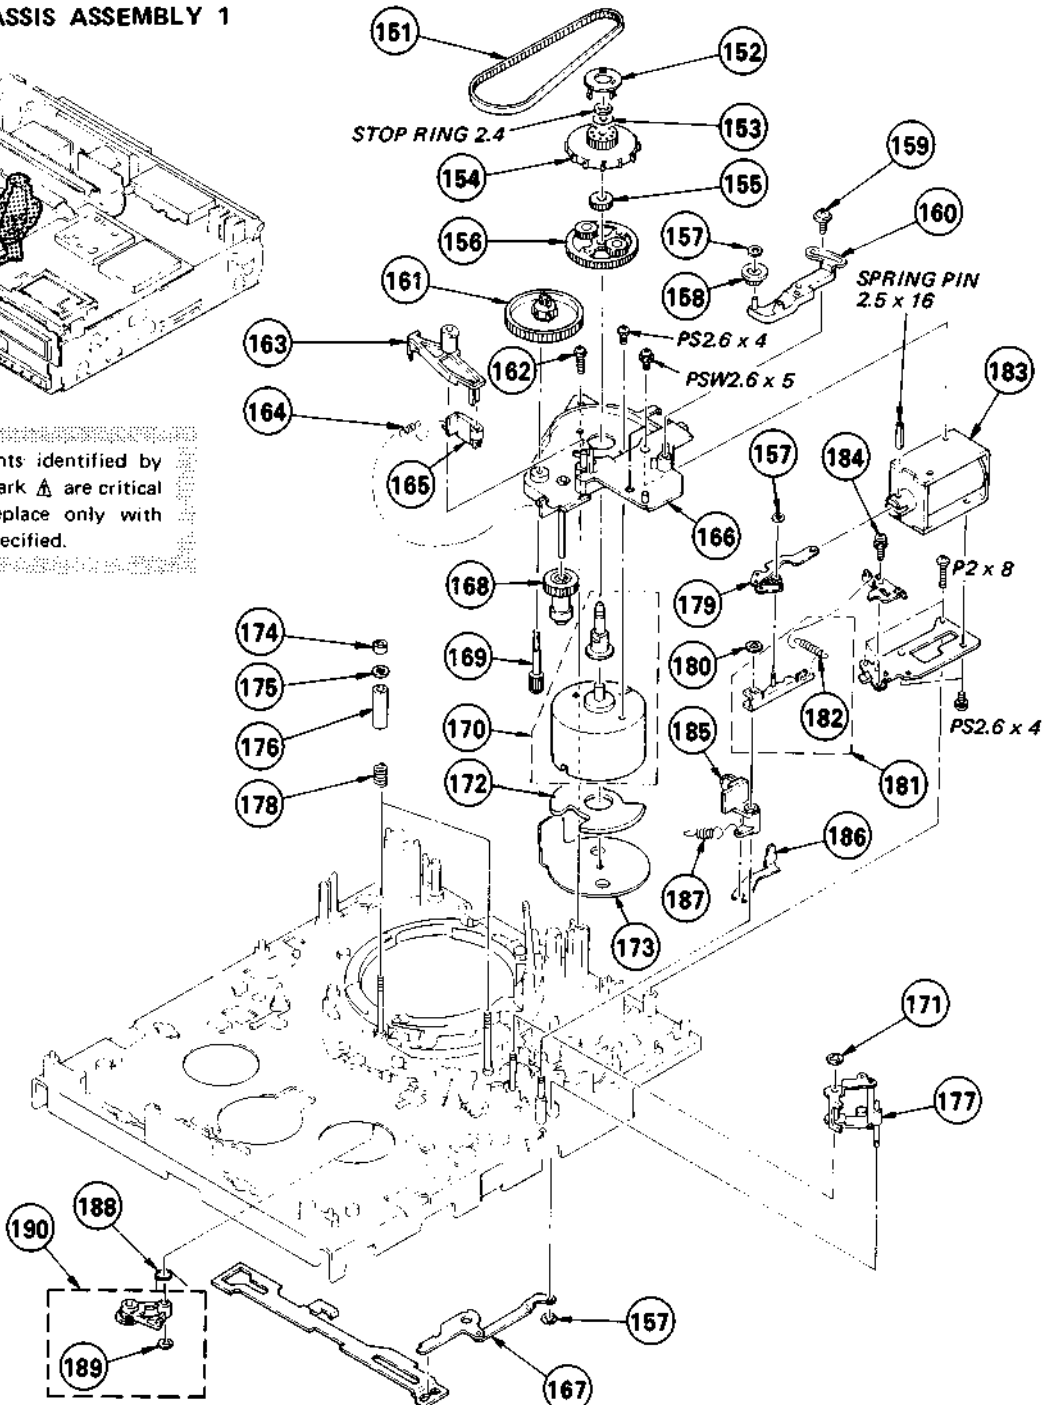



No.	Part No.	Description	Remark	No.	Part No.	Description	Remark
151	3-684-264-01	BELT, TIMING		171	3-669-596-00	WASHER (2.3), STOPPER	
152	3-684-152-01	FLANGE, INTERNAL GEAR		172	*1-605-071-00	LM-8 BOARD	
153	3-683-454-01	WASHER, POLYETHYLENE		173	*3-669-613-00	INSULATOR, L MOTOR	
154	3-684-178-01	GEAR, INTERNAL		174	3-669-318-21	NUT, ADJUSTMENT, GUIDE	
155	3-679-104-05	GEAR		175	3-684-135-01	WASHER (UPPER), GUIDE, #7, 8	
156	X-3679-111-0	CARRIER ASSY		176	3-684-133-01	SLEEVE, GUIDE, #7, 8	
157	3-669-465-00	WASHER (1.5), STOPPER		177	X-3684-113-1	ARM ASSY, PINCH PRESS	
158	3-684-151-02	GEAR		178	3-684-290-01	SPRING, COMPRESSION	
159	3-681-231-00	SCREW (+PW 2.6X8), TAPPING		179	X-3684-109-1	ARM ASSY, PINCH SOLENOID	
160	*3-682-047-01	HOLDER (A), PC BOARD		180	3-669-595-00	WASHER (2), STOPPER	
161	3-679-115-00	GEAR (LARGE), LOADING		181	*X-3684-112-1	ARM ASSY, PINCH LIMITER	
162	3-669-480-11	+ PTPWH 2		182	3-515-170-00	SPRING, TENSION	
163	3-684-167-01	ARM, STOPPER		183	A 1-494-349-61	A SOLENOID, PLUNGER (PINCH) (PH901)	
164	3-684-227-01	SPRING, TENSION		184	3-669-607-00	+PSW (SMALL ROUND) 2.6	
165	3-684-116-01	LIMITER, STOPPER		185	1-464-491-21	SENSOR, T COIL (TAKE-UP SENSOR) (L902)	
166	X-3684-129-1	CHASSIS ASSY, PLANET GEAR		186	*3-684-119-01	LINK, TAKE-UP SENSOR	
167	*X-3684-114-1	LEVER ASSY, COMMUNICATION		187	3-684-157-04	SPRING (T SENSOR), TENSION	
168	X-3669-321-0	GEAR (C) ASSY		188	3-681-154-00	SPRING, TORSION	
169	3-679-114-00	GEAR (SMALL), LOADING		189	3-701-436-11	WASHER, 1.6	
170	X-3679-268-1	MOTOR ASSY, L (LOADING/THREADING) (M904)		190	X-3687-503-1	ARM ASSY, REVIEW BRAKE	

5-5. CHASSIS ASSEMBLY 2

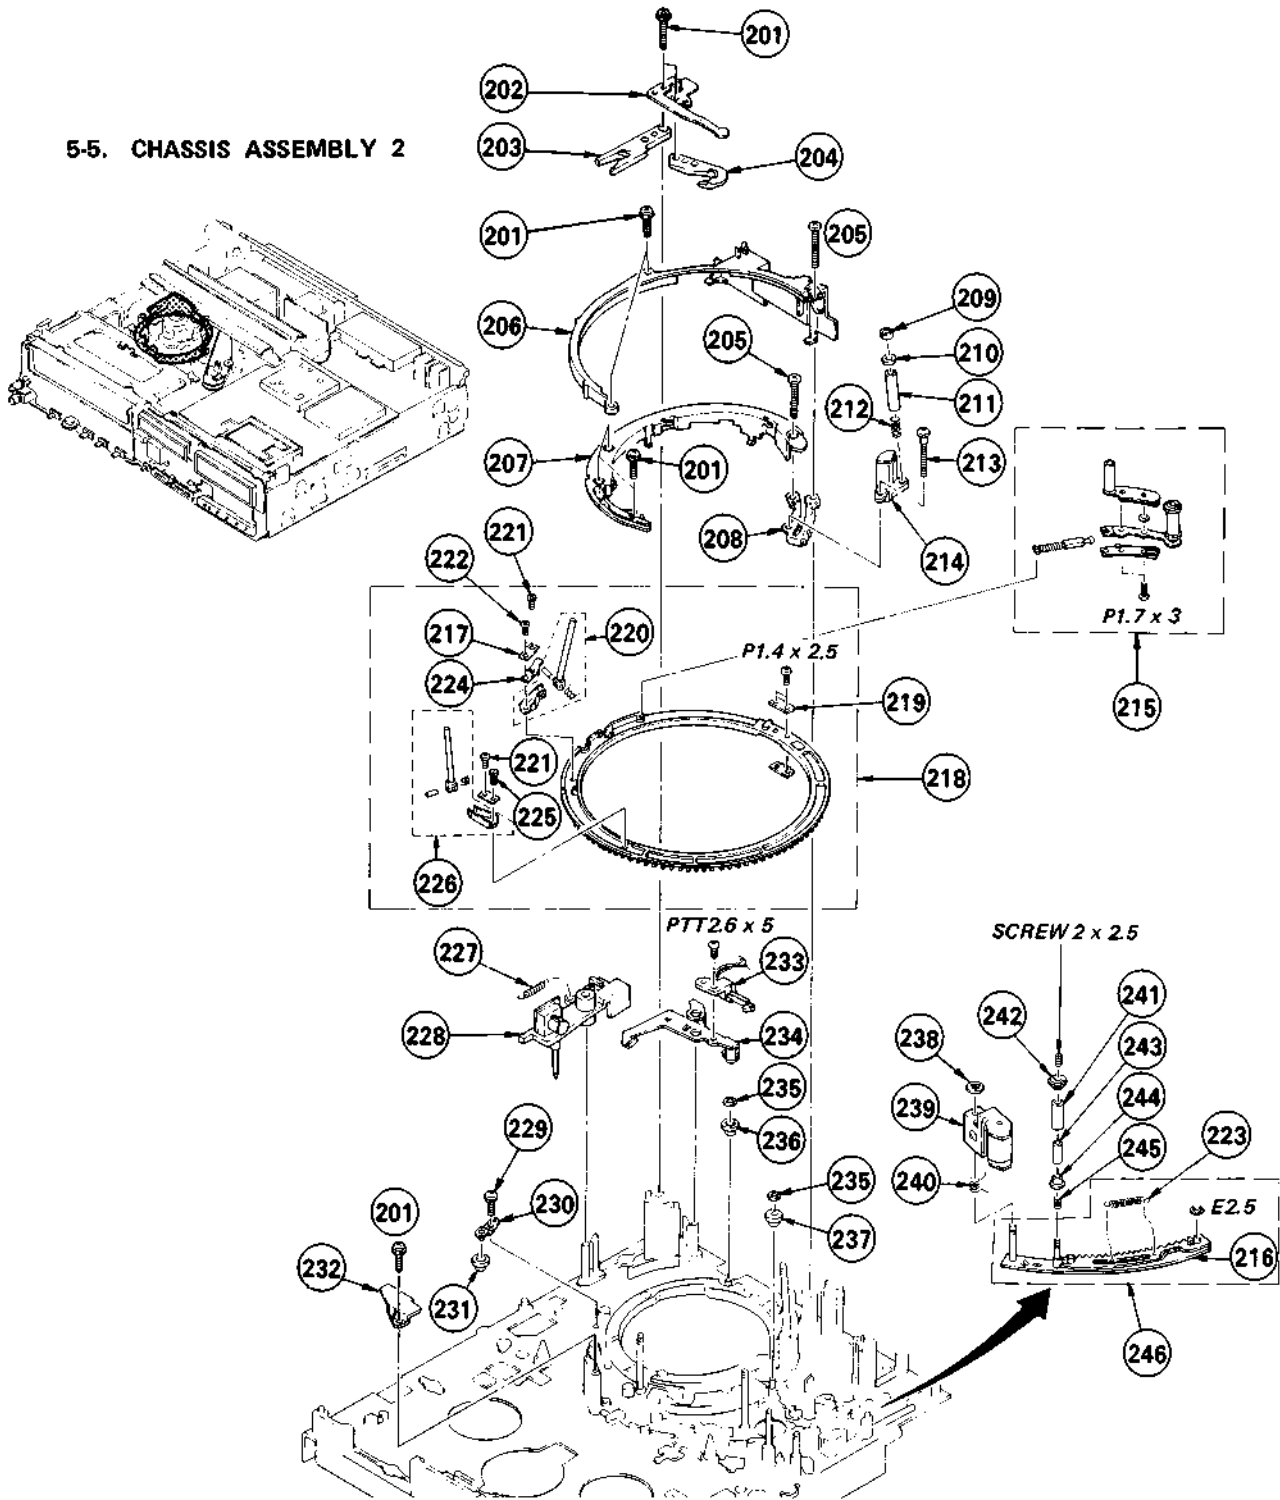


No.	Part No.	Description	Remark	No.	Part No.	Description	Remark
201	3-669-480-11	+ PTPWH 2		224	3-672-583-00	SPRING	
202	*3-684-158-01	PLATE, GROUND TAPE GUIDE		225	3-672-586-00	SCREW (1.4X3), TAPPING	
203	*3-669-618-00	PLATE (2), ADJUST		226	*X-3669-429-0	HOLDER BLOCK ASSY, #2 GUIDE	
204	*3-672-507-00	PLATE (3-1), ADJUSTMENT		227	3-684-161-01	SPRING (S SENSOR), TENSION	
205	3-669-466-21	SCREW (M 2.6)		228	1-464-503-21	SENSOR, S COIL (SUPPLY SENSOR) (L901)	
206	3-684-217-04	GUIDE (2), SHUTTLE		229	3-669-607-31	+PSW (SMALL ROUND) (2.6)	
207	*3-679-290-00	GUIDE (1-YA), SHUTTLE		230	*X-3669-329-0	PLATE ASSY, ADJUSTMENT	
208	*X-3679-263-1	BASE ASSY, SLANT		231	3-669-360-00	ROLLER, RING	
209	3-669-446-00	NUT, GUIDE, NO. 6		232	3-669-476-04	PLATE, GUIDE	
210	3-679-910-00	FLANGE (S), GUIDE, NUMBER 6		233	1-554-840-11	SWITCH, LEAF (THREADING END) (S)03	
211	3-669-445-00	SPACER, GUIDE, NO. 6		234	*X-3684-130-1	ARM ASSY, LOCK	
212	3-669-615-00	SPRING, COMPRESSION		235	3-669-465-00	WASHER (1.5), STOPPER	
213	3-669-606-00	SCREW (2.6)		236	3-669-630-00	ROLLER (C), RING	
214	8-825-508-10	HEAD, FE (FULL ERACE HEAD)		237	3-669-597-00	ROLLER (B), RING	
215	A-6750-158-B	SHUTTLE (2) BLOCK ASSY		238	3-669-596-00	WASHER (2.3), STOPPER	
216	*X-3679-265-1	SLIDER ASSY (2), T		239	X-3679-264-1	ARM ASSY, PINCH ROLLER	
217	*3-669-472-02	RETAINER, SPRING, LEAF		240	3-683-441-01	SPRING	
218	X-3684-178-1	RING (CF) ASSY, THREADING, S	217	241	3-676-649-11	ROLLER (#9), GUIDE	
218			219-222, 224-226	242	3-676-650-00	FLANGE (UPPER) (#9), GUIDE	
219	*3-669-616-00	RETAINER		243	3-672-559-00	SLEEVE, GUIDE	
220	*X-3669-430-0	HOLDER BLOCK ASSY, #3 GUIDE		244	3-672-558-00	FLANGE (LOWER) (#9), GUIDE	
221	3-669-478-00	SCREW (1X3), TAPPING		245	3-669-452-00	SPRING, COMPRESSION	
222	3-669-479-11	SCREW (1.4X3.5), TAPPING		246	A-6750-165-A	GEAR ASSY, SLIDER	216, 223
223	3-549-014-00	SPRING, TENSION					

5-6. DRUM ASSEMBLY

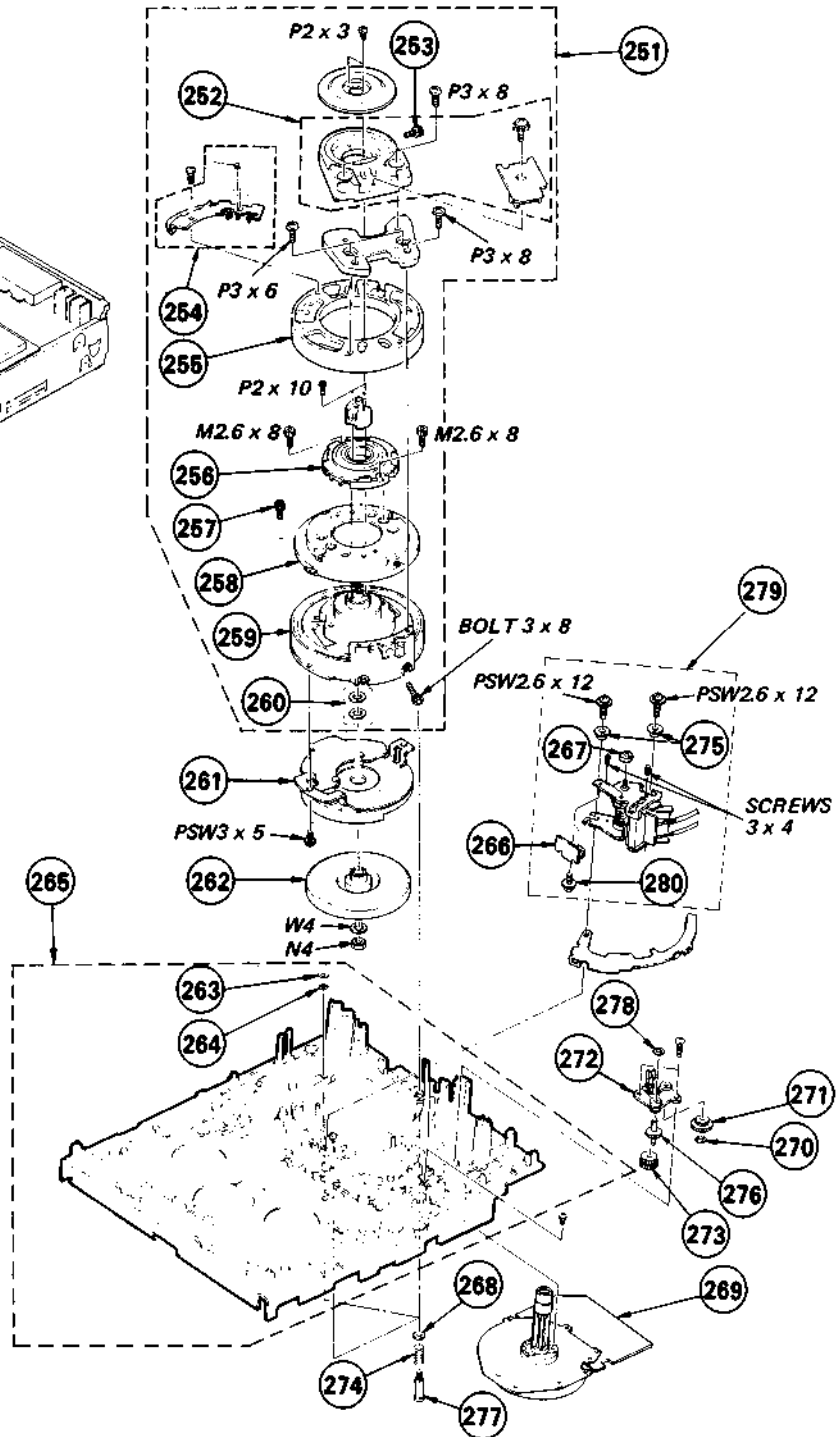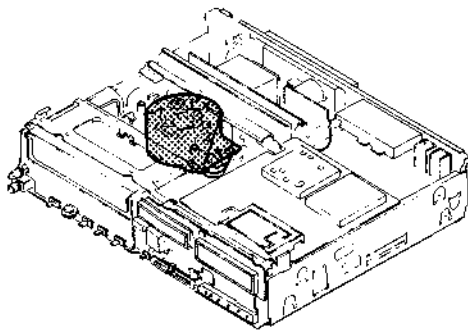

No.	Part No.	Description	Remark	No.	Part No.	Description	Remark
251	A-6050-333-A	DRUM ASSY (DSH-64A-R)	252-260	266	3-693-895-01	PROTECTOR (S)	
252	A-6050-237-B	ARM ASSY, GUIDE		267	*3-684-246-02	NUT, ADJUSTMENT, HEIGHT, ACE	
253	3-681-360-01	BOLT, HEX, SOCKET (WASHER) 2.6X8		268	3-669-600-11	WASHER, FLAT (3.5)	
254	A-6760-066-B	SPRING ASSY		269	8-938-071-01	MOTOR, DC (BHF-1909C) (CAPSTAN MOTOR) (M902)	
255	A-6760-178-A	DRUM UPPER		270	3-669-465-00	WASHER (1.5), STOPPER	
256	X-3681-312-1	ROTARY COUPLER ASSY		271	3-669-337-00	GEAR (D)	
257	3-669-157-00	BOLT (WASHER) 2.6X8		272	X-3679-147-0	CHASSIS (B) ASSY, DRIVE GEAR	
258	A-6762-226-A	DISK ASSY (DSR-64-R)		273	3-669-338-00	GEAR (E)	
259	A-6050-341-A	DRUM SUB ASSY (DSH-64A)		274	3-429-123-00	SPRING	
260	X-3669-106-1	DAMPER ASSY		275	3-684-247-01	BUSHING, ACE	
261	X-2621-204-0	STATOR ASSY, D		276	X-3679-148-0	GEAR (F) ASSY (D)	
262	X-2621-202-0	ROTOR ASSY, D		277	3-669-302-00	SCREW, FITTING	
263	3-669-646-00	SPACER, DRUM		278	3-669-595-00	WASHER (2), STOPPER	
264	3-669-646-11	SPACER, DRUM		279	A-6761-103-A	ACE ASSY	266, 267, 275, 280
265	*X-3687-505-6	CHASSIS ASSY, MECHANICAL	259, 260	280	3-693-439-11	SCREW (P2.6X5), (+)	

5-7. REEL BLOCK ASSEMBLY

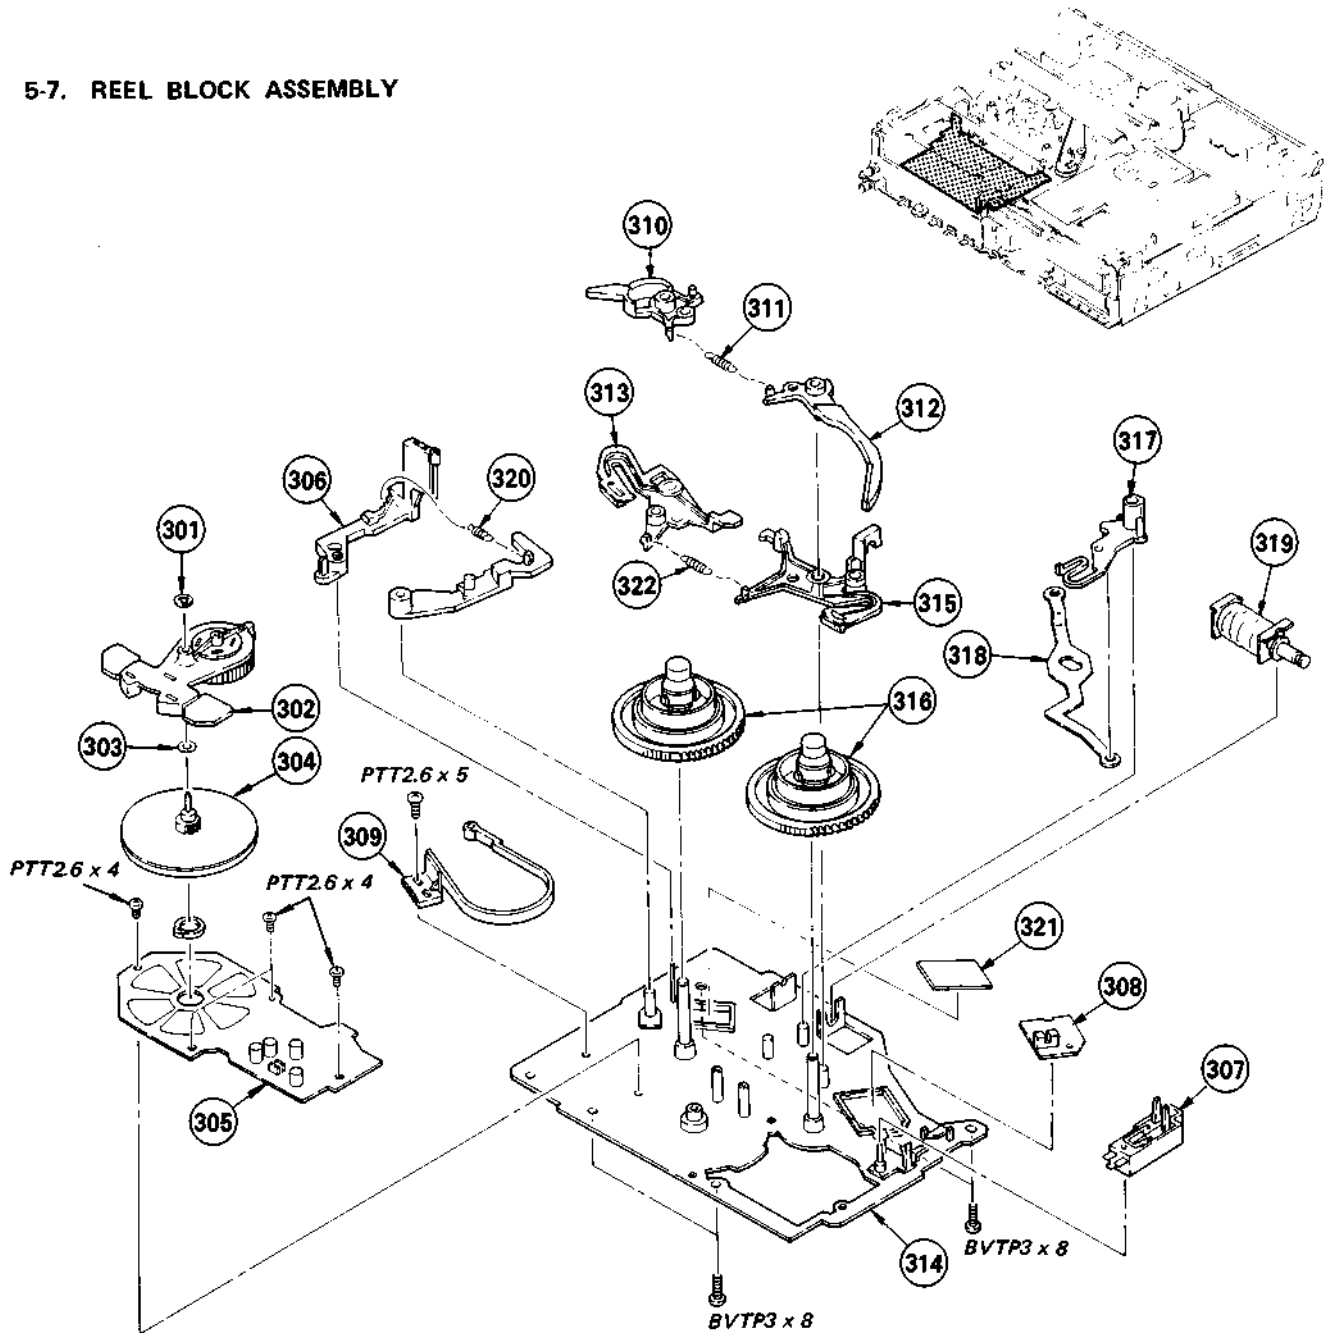

The components identified by shading and mark Δ are critical for safety. Replace only with part number specified.

No.	Part No.	Description	Remark	No.	Part No.	Description	Remark
301	3-669-595-00	WASHER (2), STOPPER		312	X-3684-137-1	BRAKE ASSY, T SOFT	
302	A-6759-074-A	ARM BLOCK ASSY, PENDULUM		313	X-3684-107-1	BRAKE ASSY, SUPPLY	
303	3-679-318-00	WASHER, PENDULUM ARM		314	*X-3684-131-1	CHASSIS ASSY, SUB	
304	X-2622-201-0	ROTOR ASSY, R		315	X-3684-108-1	BRAKE ASSY, TAKE-UP	
305	*A-4910-049-A	R STATOR (REEL MOTOR) BOARD, COMPLETE (M903)		316	X-3684-106-1	TABLE ASSY, REEL	
306	X-3684-121-1	LEVER ASSY, TENSION REGULATOR		317	3-684-193-01	ARM, PENDULUM STOPPER	
307	1-554-839-11	SWITCH, LEAF (2 GANG)		318	*3-684-183-01	LINK, L	
		(REC PROOF, CASSETTE DOWN) (S901)		319	Δ 1-454-371-31	SOLENOID, PLUNGER (BRACE) (M902)	
308	*1-613-233-11	RD-21 BOARD		320	3-679-151-00	SPRING, TORSION	
309	X-3679-120-0	BAND ASSY, TENSION REGULATOR		321	*1-613-232-11	RD-20 BOARD	
310	3-684-192-01	ARM, BRAKE, SUPPLY SOFT		322	3-685-772-01	SPRING, TENSION	
311	3-684-235-01	SPRING, TENSION					

5-8. HARDWARE LIST

SET-SCREW

7-621-731-08 SET-SCT, HEX. 2X2.5, FLAT POINT
7-621-732-08 SET-SCT, HEX. 2X3 FLAT POINT
7-683-174-21 SET-SCREW, SLOT 3X4 CONE POINT

SCREW

7-621-759-85 +PSW, 2.6X12
7-621-773-86 SCREW +B 2.6X4
7-627-552-38 SCREW, PRECISION +P 1.7X3
7-627-553-58 SCREW, PRECISION +P 2X4.5
7-627-554-07 SCREW, PRECISION +P 2X2.2

7-628-253-15 SCREW +PS 2X5
7-628-253-95 SCREW +PS 2.6X4
7-628-254-15 SCREW +PS 2.6X6
7-682-151-01 SCREW +P 3X14
7-685-134-14 SCREW +P 2.6X8 TYPE2 NON-SLIT

7-685-135-14 SCREW +P 2.6X10 TYPE2 NON-SLIT
7-685-645-71 SCREW +BVTP 3X6 TYPE2 IT-3
7-685-645-81 SCREW +BVTP 3X6 TYPE2
7-685-646-71 SCREW +BVTP 3X8 TYPE2 IT-3
7-685-646-81 SCREW +BVTP 3X8 TYPE2

7-685-790-04 SCREW +PTT 2.6X4 (S)
7-685-791-04 SCREW +PTT 2.6X5 (S)
7-685-791-04 SCREW +BVTT 2.6X5 (S)

RING

7-624-118-01 RING, RETAINING E-2.5
7-624-190-61 STOP RING 2.4, TYPE-CS

TAPPING

7-685-105-14 TPG +P 2X8, TYPE 2, NON-SLIT

SECTION 6

R STATOR

RY-4

ELECTRICAL PARTS LIST

NOTE:

The components identified by shading and mark Δ are critical for safety. Replace only with part number specified.

When indicating parts by reference number, please include the board name.

- Due to standardization, replacements in the parts list may be different from the parts specified in the diagrams or the components used on the set.
- All variable and adjustable resistors have characteristic curve B, unless otherwise noted.
- Items marked "*" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.

- RESISTORS**
- All resistors are in ohms
 - F : nonflammable

- CAPACITORS**
- MF : μ F, PF : μ μ F

- COILS**
- MMH : mH, UH : μ H

Ref.No	Part No.	Description	Remark	Ref.No	Part No.	Description	Remark
	*A-4910-049-A	R STATOR (REEL MOTOR) BOARD, COMPLETE *****		C017	1-101-004-00	CERAMIC	0.01MF 50V (EC MODEL)
	*1-560-460-00	PIN, CONNECTOR 4P		C018	1-123-306-00	ELECT	47MF 20% 10V (EC MODEL)
		<u>CAPACITOR</u>		C019	1-101-004-00	CERAMIC	0.01MF 50V (EC MODEL)
C1	1-123-821-00	ELECT	47MF 20% 16V	C020	1-101-004-00	CERAMIC	0.01MF 50V
C2	1-123-821-00	ELECT	47MF 20% 16V	C021	1-101-004-00	CERAMIC	0.01MF 50V
C3	1-123-821-00	ELECT	47MF 20% 16V	C023	1-101-882-00	CERAMIC	51PF 5% 50V
C4	1-123-821-00	ELECT	47MF 20% 16V	C024	1-130-047-00	FILM	180PF 5% 50V
		<u>DIODE</u>		C025	1-106-172-00	MYLAR	0.001MF 5% 50V
01	8-719-941-48	DIODE 1N4148TP		C026	1-101-059-00	CERAMIC	510PF 5% 50V
		<u>IC</u>		C027	1-161-045-00	CERAMIC	0.0033MF 10% 25V
IC1	8-759-108-77	IC CX-877		C028	1-106-172-00	MYLAR	0.001MF 5% 50V
		<u>TRANSISTOR</u>		C029	1-123-382-00	ELECT	3.3MF 20% 50V
Q1	8-729-100-01	TRANSISTOR 2SD992-N		C032	1-102-816-00	CERAMIC	120PF 5% 50V
Q2	8-729-100-01	TRANSISTOR 2SD992-N		C033	1-101-004-00	CERAMIC	0.01MF 50V
Q3	8-729-100-01	TRANSISTOR 2SD992-N		C034	1-101-004-00	CERAMIC	0.01MF 50V
Q4	8-729-100-01	TRANSISTOR 2SD992-N		C035	1-102-816-00	CERAMIC	120PF 5% 50V
Q5	8-729-100-01	TRANSISTOR 2SD992-N		C036	1-101-882-00	CERAMIC	51PF 5% 50V
Q6	8-729-100-01	TRANSISTOR 2SD992-N		C037	1-101-004-00	CERAMIC	0.01MF 50V
		<u>RESISTOR</u>		C038	1-101-004-00	CERAMIC	0.01MF 50V
R1	1-247-823-00	CARBON	470 5% 1/6W	C039	1-101-004-00	CERAMIC	0.01MF 50V
R2	1-247-823-00	CARBON	470 5% 1/6W	C041	1-161-043-00	CERAMIC	0.0022MF 10% 25V
R3	1-247-823-00	CARBON	470 5% 1/6W	C042	1-102-516-00	CERAMIC	27PF 5% 50V (EC MODEL)
R4	1-247-829-00	CARBON	320 5% 1/6W	C043	1-101-004-00	CERAMIC	0.01MF 50V (EC MODEL)
R5	1-247-871-00	CARBON	47K 5% 1/6W	C044	1-101-004-00	CERAMIC	0.01MF 50V (EC MODEL)
R6	1-247-871-00	CARBON	47K 5% 1/6W	C045	1-102-523-00	CERAMIC	56PF 5% 50V (EC MODEL)
R7	1-247-871-00	CARBON	47K 5% 1/6W	C046	1-101-004-00	CERAMIC	0.01MF 50V (EC MODEL)
R8	1-247-871-00	CARBON	47K 5% 1/6W	C047	1-101-006-00	CERAMIC	0.047MF 50V
		<u>DIODE</u>		C048	1-101-004-00	CERAMIC	0.01MF 50V (EC MODEL)
S1	8-719-810-31	DIODE THS103-1		C049	1-101-004-00	CERAMIC	0.01MF 50V
S2	8-719-810-31	DIODE THS103-1		C050	1-102-865-00	CERAMIC	8PF 0.5PF 50V

	*A-6711-676-A	RY-4 BOARD, COMPLETE (EC MODEL) *****		C051	1-102-525-00	CERAMIC	68PF 5% 50V
	*A-6711-678-A	RY-4 BOARD, COMPLETE (AS MODEL) *****		C052	1-102-525-00	CERAMIC	68PF 5% 50V
		<u>CAPACITOR</u>		C053	1-123-380-00	ELECT	1MF 20% 50V
C010	1-123-356-00	ELECT	10MF 20% 16V	C054	1-161-040-00	CERAMIC	0.0012MF 10% 25V
C013	1-123-306-00	ELECT	47MF 20% 10V (EC MODEL)	C055	1-123-380-00	ELECT	1MF 20% 50V
C014	1-123-369-00	ELECT	4.7MF 20% 25V (EC MODEL)	C056	1-102-963-00	CERAMIC	33PF 5% 50V
C015	1-123-306-00	ELECT	47MF 20% 10V (EC MODEL)	C057	1-102-980-00	CERAMIC	270PF 5% 50V
C016	1-108-589-00	MYLAR	0.027MF 5% 50V (EC MODEL)	C058	1-123-306-00	ELECT	47MF 20% 10V
				C059	1-101-004-00	CERAMIC	0.01MF 50V
				C060	1-108-579-00	MYLAR	0.01MF 5% 50V
				C061	1-123-382-00	ELECT	3.3MF 20% 50V
				C062	1-123-306-00	ELECT	47MF 20% 10V
				C063	1-101-004-00	CERAMIC	0.01MF 50V
				C064	1-102-521-00	CERAMIC	43PF 5% 50V
				C065	1-102-527-00	CERAMIC	82PF 5% 50V
				C066	1-102-518-00	CERAMIC	33PF 5% 50V
				C068	1-101-004-00	CERAMIC	0.01MF 50V
				C069	1-102-962-00	CERAMIC	30PF 5% 50V
				C070	1-101-004-00	CERAMIC	0.01MF 50V
				C071	1-123-380-00	ELECT	1MF 20% 50V
				C072	1-101-004-00	CERAMIC	0.01MF 50V
				C073	1-102-525-00	CERAMIC	68PF 5% 50V
				C074	1-102-525-00	CERAMIC	68PF 5% 50V

RY-4

Ref.No	Part No.	Description	Remark	Ref.No	Part No.	Description	Remark				
C075	1-101-004-00	CERAMIC	0.01MF	50V	C140	1-102-519-91	CERAMIC	36PF	5%	50V	
C076	1-102-951-00	CERAMIC	15PF	5%	50V	C142	1-123-369-00	ELECT	4.7MF	20%	25V
C077	1-123-330-00	ELECT	22MF	20%	16V	C144	1-102-511-00	CERAMIC	13PF	5%	50V
C078	1-123-330-00	ELECT	22MF	20%	16V	C145	1-102-522-00	CERAMIC	51PF	5%	50V
C080	1-101-004-00	CERAMIC	0.01MF	50V	C146	1-102-522-00	CERAMIC	51PF	5%	50V	
C082	1-161-024-00	CERAMIC	0.082MF	10%	25V	C147	1-102-511-00	CERAMIC	13PF	5%	50V
C083	1-102-977-00	CERAMIC	200PF	5%	50V	C148	1-101-006-00	CERAMIC	0.047MF		50V
C084	1-123-369-00	ELECT	4.7MF	20%	25V	C155	1-101-004-00	CERAMIC	0.01MF		50V
C085	1-101-004-00	CERAMIC	0.01MF	50V	C156	1-101-004-00	CERAMIC	0.01MF		50V	
C086	1-108-557-00	MYLAR	0.0012MF	5%	50V	C157	1-102-981-00	CERAMIC	300PF	5%	50V
C087	1-161-057-00	CERAMIC	0.033MF	10%	25V	C158	1-102-948-00	CERAMIC	11PF	5%	50V
C088	1-101-361-00	CERAMIC	150PF	5%	50V	C159	1-102-822-00	CERAMIC	390PF	5%	50V
C092	1-101-004-00	CERAMIC	0.01MF	50V	C178	1-123-330-00	ELECT	22MF	20%	16V	
C093	1-101-006-00	CERAMIC	0.047MF	50V	C179	1-123-356-00	ELECT	10MF	20%	16V	
C095	1-102-976-00	CERAMIC	180PF	5%	50V	C180	1-123-332-00	ELECT	47MF	20%	16V
C096	1-102-824-00	CERAMIC	470PF	5%	50V	C181	1-106-186-00	MYLAR	0.0039MF	5%	50V
C097	1-102-823-00	CERAMIC	430PF	5%	50V	C182	1-123-380-00	ELECT	1MF	20%	50V
C098	1-102-820-00	CERAMIC	330PF	5%	50V	C183	1-101-006-00	CERAMIC	0.047MF		50V
C099	1-102-520-00	CERAMIC	39PF	5%	50V	C184	1-123-332-00	ELECT	47MF	20%	16V
C100	1-102-852-00	CERAMIC	47PF	5%	50V	C191	1-101-004-00	CERAMIC	0.01MF		50V
C101	1-108-595-00	MYLAR	0.047MF	5%	50V	C192	1-123-369-00	ELECT	4.7MF	20%	25V
C102	1-161-043-00	CERAMIC	0.0022MF	10%	25V	C196	1-123-380-00	ELECT	1MF	20%	50V
C103	1-106-172-00	MYLAR	0.001MF	5%	50V	C197	1-123-356-00	ELECT	10MF	20%	16V
C104	1-102-977-00	CERAMIC	200PF	5%	50V	C200	1-101-004-00	CERAMIC	0.01MF		50V
C105	1-102-973-00	CERAMIC	100PF	5%	50V	C201	1-123-356-00	ELECT	10MF	20%	16V
C106	1-123-356-00	ELECT	10MF	20%	16V	C203	1-101-004-00	CERAMIC	0.01MF		50V
C107	1-161-025-00	CERAMIC	0.1MF	10%	25V	C204	1-123-369-00	ELECT	4.7MF	20%	25V
C108	1-101-004-00	CERAMIC	0.01MF	50V	C206	1-101-004-00	CERAMIC	0.01MF		50V	
C111	1-102-973-00	CERAMIC	100PF	5%	50V	C207	1-161-025-00	CERAMIC	0.1MF	10%	25V
C112	1-101-004-00	CERAMIC	0.01MF	50V	C208	1-123-356-00	ELECT	10MF	20%	16V	
C113	1-101-006-00	CERAMIC	0.047MF	50V	C212	1-123-333-00	ELECT	100MF	20%	16V	
C114	1-101-361-00	CERAMIC	150PF	5%	50V	C217	1-101-006-00	CERAMIC	0.047MF		50V
C116	1-101-004-00	CERAMIC	0.01MF	50V	C219	1-123-356-00	ELECT	10MF	20%	16V	
C117	1-101-361-00	CERAMIC	150PF	5%	50V	C220	1-101-006-00	CERAMIC	0.047MF		50V
C120	1-101-004-00	CERAMIC	0.01MF	50V	C232	1-101-004-00	CERAMIC	0.01MF		50V (AS MODEL)	
C121	1-101-004-00	CERAMIC	0.01MF	50V	C233	1-123-352-00	ELECT	1MF	20%	50V (AS MODEL)	
C122	1-101-004-00	CERAMIC	0.01MF	50V	C246	1-161-025-00	CERAMIC	0.1MF	10%	25V	
C123	1-101-004-00	CERAMIC	0.01MF	50V	C248	1-101-006-00	CERAMIC	0.047MF		50V	
C124	1-102-948-00	CERAMIC	11PF	5%	50V	C251	1-101-006-00	CERAMIC	0.047MF		50V
C125	1-123-330-00	ELECT	22MF	20%	16V	C252	1-102-816-00	CERAMIC	120PF	5%	50V
C127	1-123-318-00	ELECT	33MF	20%	16V	C253	1-123-356-00	ELECT	10MF	20%	16V
C128	1-123-330-00	ELECT	22MF	20%	16V	C257	1-101-006-00	CERAMIC	0.047MF		50V
C129	1-123-369-00	ELECT	4.7MF	20%	25V	C300	1-101-004-00	CERAMIC	0.01MF		50V (EC MODEL)
C130	1-123-356-00	ELECT	10MF	20%	16V	C301	1-101-006-00	CERAMIC	0.047MF		50V
C131	1-123-380-00	ELECT	1MF	20%	50V	C302	1-102-773-00	CERAMIC	330PF	5%	50V
C132	1-123-369-00	ELECT	4.7MF	20%	25V	C303	1-130-479-00	MYLAR	0.0047MF	5%	50V
C133	1-102-851-00	CERAMIC	15PF	5%	50V	C304	1-123-330-00	ELECT	22MF	20%	16V
C134	1-102-821-00	CERAMIC	360PF	5%	50V	C401	1-123-381-00	ELECT	2.2MF	20%	50V
C135	1-102-823-00	CERAMIC	430PF	5%	50V	C402	1-101-001-00	CERAMIC	0.001MF		50V
C136	1-102-976-00	CERAMIC	180PF	5%	50V	C403	1-101-001-00	CERAMIC	0.001MF		50V
C137	1-102-513-00	CERAMIC	18PF	5%	50V	C404	1-101-004-00	CERAMIC	0.01MF		50V
C138	1-102-529-00	CERAMIC	100PF	5%	50V	C405	1-123-330-00	ELECT	22MF	20%	16V
C139	1-102-529-00	CERAMIC	100PF	5%	50V	C406	1-123-330-00	ELECT	22MF	20%	16V

The components identified by shading and mark **A** are critical for safety. Replace only with part number specified.

When indicating parts by reference number, please include the board name.

Ref.No	Part No.	Description	Remark	Ref.No	Part No.	Description	Remark
C407	1-102-962-00	CERAMIC	30PF 5% 50V	C747	1-101-004-00	CERAMIC 0.01MF	50V
C408	1-101-888-00	CERAMIC	68PF 5% 50V	C748	1-101-004-00	CERAMIC 0.01MF	50V
C409	1-123-381-00	ELECT	2.2MF 20% 50V	C749	1-101-004-00	CERAMIC 0.01MF	50V
C410	1-102-936-00	CERAMIC	3PF 0.25PF 50V	C750	1-101-004-00	CERAMIC 0.01MF	50V
C411	1-101-005-00	CERAMIC	0.022MF 50V	C751	1-101-004-00	CERAMIC 0.01MF	50V
C412	1-123-318-00	ELECT	33MF 20% 16V	C753	1-101-004-00	CERAMIC 0.01MF	50V
C414	1-123-356-00	ELECT	10MF 20% 16V	C754	1-101-004-00	CERAMIC 0.01MF	50V
C415	1-123-369-00	ELECT	4.7MF 20% 25V	C755	1-101-004-00	CERAMIC 0.01MF	50V
C416	1-102-948-00	CERAMIC	11PF 5% 50V	C756	1-101-004-00	CERAMIC 0.01MF	50V
C417	1-102-948-00	CERAMIC	11PF 5% 50V	C757	1-123-356-00	ELECT 10MF	20% 16V
C418	1-102-965-00	CERAMIC	39PF 5% 50V	C761	1-102-128-00	CERAMIC 0.0082MF	10% 50V
C419	1-123-356-00	ELECT	10MF 20% 16V	C762	1-101-004-00	CERAMIC 0.01MF	50V
C420	1-123-369-00	ELECT	4.7MF 20% 25V	C801	1-123-356-00	ELECT 10MF	20% 16V
C421	1-101-006-00	CERAMIC	0.047MF 50V	C803	1-101-004-00	CERAMIC 0.01MF	50V
C501	1-101-004-00	CERAMIC	0.01MF 50V (EC MODEL)	C807	1-101-006-00	CERAMIC 0.047MF	50V
C502	1-101-004-00	CERAMIC	0.01MF 50V	C808	1-161-025-00	CERAMIC 0.1MF	10% 25V
C503	1-101-004-00	CERAMIC	0.01MF 50V	C809	1-101-004-00	CERAMIC 0.01MF	50V
C504	1-101-005-00	CERAMIC	0.022MF 50V	C810	1-101-004-00	CERAMIC 0.01MF	50V
C505	1-102-822-00	CERAMIC	390PF 5% 50V	C811	1-101-004-00	CERAMIC 0.01MF	50V
C506	1-101-006-00	CERAMIC	0.047MF 50V	C812	1-101-006-00	CERAMIC 0.047MF	50V
C507	1-123-318-00	ELECT	33MF 20% 16V	C813	1-101-004-00	CERAMIC 0.01MF	50V
C613	1-101-004-00	CERAMIC	0.01MF 50V (EC MODEL)			<u>FILTER</u>	
C703	1-101-004-00	CERAMIC	0.01MF 50V	CF001	1-527-998-00	FILTER, CERAMIC (EC MODEL)	
C704	1-123-356-00	ELECT	10MF 20% 16V	CF002	1-527-875-00	FILTER, CERAMIC	
C705	1-123-379-00	ELECT	0.47MF 20% 50V	CF003	1-527-849-00	FILTER, CERAMIC	
C706	1-108-603-00	MYLAR	0.1MF 5% 50V			<u>CONNECTOR</u>	
C707	1-123-356-00	ELECT	10MF 20% 16V	CN001	*1-564-030-00	PIN, CONNECTOR 5P	
C708	1-101-004-00	CERAMIC	0.01MF 50V	CN002	*1-564-032-00	PIN, CONNECTOR 7P	
C712	1-101-004-00	CERAMIC	0.01MF 50V	CN003	*1-564-027-00	PIN, CONNECTOR 2P	
C713	1-102-820-00	CERAMIC	330PF 5% 50V	CN004	*1-564-029-00	PIN, CONNECTOR 4P	
C714	1-123-356-00	ELECT	10MF 20% 16V	CN005	*1-564-029-00	PIN, CONNECTOR 4P	
C717	1-102-973-00	CERAMIC	100PF 5% 50V	CN701	*1-560-894-00	PIN, CONNECTOR 6P	
C718	1-102-973-00	CERAMIC	100PF 5% 50V	CN702	*1-564-030-00	PIN, CONNECTOR 5P	
C719	1-102-824-00	CERAMIC	470PF 5% 50V			<u>TRIMMER</u>	
C720	1-102-120-00	CERAMIC	0.0018MF 10% 50V	CT001	1-141-275-00	CAP, TRIMMER	
C721	1-102-852-00	CERAMIC	47PF 5% 50V			<u>DIODE</u>	
C722	1-102-852-00	CERAMIC	47PF 5% 50V	D005	8-719-911-19	DIODE 1SS119 (EC MODEL)	
C723	1-123-333-00	ELECT	100MF 20% 16V	D006	8-719-000-06	DIODE MC921 (EC MODEL)	
C724	1-123-356-00	ELECT	10MF 20% 16V	D009	8-719-000-06	DIODE MC921 (EC MODEL)	
C725	1-108-603-00	MYLAR	0.1MF 5% 50V	D012	8-719-911-19	DIODE 1SS119 (EC MODEL)	
C726	1-123-379-00	ELECT	0.47MF 20% 50V	D013	8-719-911-19	DIODE 1SS119 (EC MODEL)	
C727	1-123-356-00	ELECT	10MF 20% 16V	D014	8-719-911-19	DIODE 1SS119	
C728	1-101-004-00	CERAMIC	0.01MF 50V	D015	8-719-911-19	DIODE 1SS119	
C733	1-102-977-00	CERAMIC	200PF 5% 50V	D016	8-719-000-12	DIODE MC931	
C736	1-123-356-00	ELECT	10MF 20% 16V	D017	8-719-911-19	DIODE 1SS119	
C739	1-101-006-00	CERAMIC	0.047MF 50V	D018	8-719-911-19	DIODE 1SS119	
C740	1-101-004-00	CERAMIC	0.01MF 50V	D019	8-719-911-19	DIODE 1SS119	
C741	1-102-960-00	CERAMIC	24PF 5% 50V	D020	8-719-911-19	DIODE 1SS119	
C742	1-102-960-00	CERAMIC	24PF 5% 50V				
C743	1-123-318-00	ELECT	33MF 20% 16V				
C744	1-101-004-00	CERAMIC	0.01MF 50V				
C745	1-102-514-00	CERAMIC	22PF 5% 50V				
C746	1-101-004-00	CERAMIC	0.01MF 50V				

When indicating parts by reference number, please include the board name.

RY-4

Ref.No	Part No.	Description
D021	8-719-911-19	DIODE 1SS119
D022	8-719-911-19	DIODE 1SS119
D023	8-719-911-19	DIODE 1SS119
D025	8-719-911-19	DIODE 1SS119
D027	8-719-000-06	DIODE MC921
D029	8-719-100-56	DIODE RD10EB1
D030	8-719-911-19	DIODE 1SS119
D040	8-719-100-40	DIODE RD6,8EB1
D701	8-719-901-33	DIODE 1SS133
D702	8-719-901-33	DIODE 1SS133
D802	8-719-911-19	DIODE 1SS119
<u>DELAY LINE</u>		
DL001	1-415-313-00	DELAY LINE, 1H
DL401	1-415-352-11	DELAY LINE, 1H
DL501	1-415-419-11	DELAY LINE
<u>FILTER</u>		
FLO01	1-235-097-11	FILTER, LOW PASS
FLO02	1-235-098-00	FILTER, BAND PASS
<u>IC</u>		
IC001	8-759-909-20	IC BA634 (EC MODEL)
IC002	8-759-904-95	IC BA7007 (EC MODEL)
IC003	8-759-202-47	IC CX10023
IC004	8-759-208-94	IC CX-894 (EC MODEL)
IC005	8-752-006-10	IC CX20061 (EC MODEL)
IC006	8-759-203-99	IC CX10021A-NP
IC009	8-759-101-62	IC CX20043
IC011	8-752-006-10	IC CX20061
IC020	8-759-045-38	IC MC14538BCP
IC401	8-758-662-00	IC CX-866B
IC701	8-752-004-50	IC CX20045
IC702	8-759-200-60	IC TA7060AP
<u>COIL</u>		
L001	1-410-450-11	MICRO INDUCTOR 3.9MMH
L002	1-410-447-11	MICRO INDUCTOR 2.2MMH
L003	1-408-408-00	MICRO INDUCTOR 8.2UH
L004	1-408-406-00	MICRO INDUCTOR 5.6UH
L005	1-408-415-00	MICRO INDUCTOR 33UH
L006	1-408-428-00	MICRO INDUCTOR 390UH
L007	1-408-427-00	MICRO INDUCTOR 330UH
L008	1-408-421-00	MICRO INDUCTOR 100UH
L010	1-408-427-00	MICRO INDUCTOR 330UH
L011	1-408-423-00	MICRO INDUCTOR 150UH
L012	1-408-409-00	MICRO INDUCTOR 10UH
L014	1-408-422-00	MICRO INDUCTOR 120UH
L015	1-408-419-00	MICRO INDUCTOR 68UH
L016	1-408-413-00	MICRO INDUCTOR 22UH
L017	1-408-423-00	MICRO INDUCTOR 150UH
L018	1-408-419-00	MICRO INDUCTOR 68UH

The components identified by shading and mark **A** are critical for safety. Replace only with part number specified.

When indicating parts by reference number, please include the board name.

Ref.No	Part No.	Description	Remark
L019	1-408-421-00	MICRO INDUCTOR 100UH	
L021	1-408-422-00	MICRO INDUCTOR 120UH	
L022	1-408-424-00	MICRO INDUCTOR 180UH	
L023	1-408-422-00	MICRO INDUCTOR 120UH	
L026	1-408-416-00	MICRO INDUCTOR 39UH	
L036	1-408-429-00	MICRO INDUCTOR 470UH	
L041	1-408-424-00	MICRO INDUCTOR 180UH	
L401	1-408-397-00	MICRO INDUCTOR 1UH	
L402	1-408-397-00	MICRO INDUCTOR 1UH	
L501	1-408-408-00	MICRO INDUCTOR 8.2UH	
L502	1-408-423-00	MICRO INDUCTOR 150UH	
L701	1-408-876-00	MICRO INDUCTOR 0.18UH	
L702	1-408-427-00	MICRO INDUCTOR 330UH	
L703	1-408-429-00	MICRO INDUCTOR 470UH	
L706	1-408-421-00	MICRO INDUCTOR 100UH	
L709	1-408-422-00	MICRO INDUCTOR 120UH	
L710	1-408-411-00	MICRO INDUCTOR 15UH	
L711	1-408-411-00	MICRO INDUCTOR 15UH	
L712	1-408-878-00	MICRO INDUCTOR 0.33UH	
L713	1-408-427-00	MICRO INDUCTOR 330UH	
L716	1-408-429-00	MICRO INDUCTOR 470UH	
L717	1-408-415-00	MICRO INDUCTOR 33UH	
L720	1-407-495-00	MICRO INDUCTOR 1.8MMH	
L721	1-408-429-00	MICRO INDUCTOR 470UH	
L761	1-408-429-00	MICRO INDUCTOR 470UH	
<u>VARIABLE COIL</u>			
LV001	1-407-291-00	MICRO INDUCTOR 15MMH (EC MODEL)	
LV002	1-408-532-00	COIL, VARIABLE (EC MODEL)	
LV003	1-408-513-00	COIL (VARIABLE) (EC MODEL)	
LV501	1-408-512-00	COIL (VARIABLE)	
<u>IC</u>			
PS001	1-532-685-00	LINK IC	
<u>TRANSISTOR</u>			
Q010	8-729-177-43	TRANSISTOR 2SD774	
Q011	8-729-204-83	TRANSISTOR 2SA1048-GR	
Q014	8-729-113-33	TRANSISTOR 2SB733-4	
Q015	8-729-900-89	TRANSISTOR DTC144ES	
Q016	8-729-245-83	TRANSISTOR 2SC2458	
Q019	8-729-204-83	TRANSISTOR 2SA1048-GR (EC MODEL)	
Q020	8-729-204-83	TRANSISTOR 2SA1048-GR	
Q021	8-729-245-83	TRANSISTOR 2SC2458 (EC MODEL)	
Q022	8-729-245-83	TRANSISTOR 2SC2458	
Q023	8-729-245-83	TRANSISTOR 2SC2458	
Q024	8-729-204-83	TRANSISTOR 2SA1048-GR	
Q025	8-729-900-85	TRANSISTOR DTC144WS (EC MODEL)	
Q026	8-729-204-83	TRANSISTOR 2SA1048-GR (EC MODEL)	
Q027	8-729-204-83	TRANSISTOR 2SA1048-GR	
Q028	8-729-245-83	TRANSISTOR 2SC2458	
Q029	8-729-245-83	TRANSISTOR 2SC2458 (EC MODEL)	
Q030	8-729-245-83	TRANSISTOR 2SC2458	

Ref.No	Part No.	Description	Remark	Ref.No	Part No.	Description	Remark
Q031	8-729-900-36	TRANSISTOR DTC124ES		R046	1-247-835-00	CARBON 1.5K 5%	1/6W(EC MODEL)
Q033	8-729-245-83	TRANSISTOR 2SC2458		R048	1-247-847-00	CARBON 4.7K 5%	1/6W(EC MODEL)
Q034	8-729-245-83	TRANSISTOR 2SC2458		R050	1-247-853-00	CARBON 8.2K 5%	1/6W
Q035	8-729-603-30	TRANSISTOR 2SC403SP-3		R051	1-247-821-00	CARBON 390 5%	1/6W
Q036	8-729-603-30	TRANSISTOR 2SC403SP-3		R052	1-247-819-00	CARBON 330 5%	1/6W
Q037	8-729-384-46	TRANSISTOR 2SA844-C		R053	1-247-843-00	CARBON 3.3K 5%	1/6W
Q038	8-729-384-46	TRANSISTOR 2SA844-C		R054	1-247-847-00	CARBON 4.7K 5%	1/6W
Q039	8-729-603-30	TRANSISTOR 2SC403SP-3		R055	1-247-849-00	CARBON 5.6K 5%	1/6W(EC MODEL)
Q040	8-729-603-30	TRANSISTOR 2SC403SP-3		R056	1-247-867-00	CARBON 33K 5%	1/6W
Q041	8-729-384-46	TRANSISTOR 2SA844-C		R058	1-247-873-00	CARBON 56K 5%	1/6W
Q042	8-729-603-30	TRANSISTOR 2SC403SP-3		R059	1-247-863-91	CARBON 22K 5%	1/6W(AS MODEL)
Q048	8-729-603-30	TRANSISTOR 2SC403SP-3		R060	1-247-867-00	CARBON 33K 5%	1/6W(EC MODEL)
Q049	8-729-603-30	TRANSISTOR 2SC403SP-3		R061	1-247-855-00	CARBON 10K 5%	1/6W(EC MODEL)
Q050	8-729-603-30	TRANSISTOR 2SC403SP-3		R062	1-247-855-00	CARBON 10K 5%	1/6W
Q051	8-729-384-46	TRANSISTOR 2SA844-C		R063	1-247-841-00	CARBON 2.7K 5%	1/6W
Q052	8-729-603-30	TRANSISTOR 2SC403SP-3		R064	1-247-848-00	CARBON 5.1K 5%	1/6W
Q053	8-729-384-46	TRANSISTOR 2SA844-C		R065	1-247-889-00	CARBON 270K 5%	1/6W
Q054	8-729-384-46	TRANSISTOR 2SA844-C		R066	1-247-870-00	CARBON 43K 5%	1/6W
Q056	8-729-245-83	TRANSISTOR 2SC2458		R067	1-247-862-00	CARBON 20K 5%	1/6W
Q060	8-729-204-83	TRANSISTOR 2SA1048-GR		R068	1-247-838-00	CARBON 2K 5%	1/6W
Q061	8-729-245-83	TRANSISTOR 2SC2458		R069	1-247-831-00	CARBON 1K 5%	1/6W
Q062	8-729-204-83	TRANSISTOR 2SA1048-GR		R070	1-247-831-00	CARBON 1K 5%	1/6W
Q064	8-729-245-83	TRANSISTOR 2SC2458		R071	1-247-855-00	CARBON 10K 5%	1/6W
Q068	8-729-245-83	TRANSISTOR 2SC2458		R072	1-247-841-00	CARBON 2.7K 5%	1/6W
Q070	8-729-245-83	TRANSISTOR 2SC2458		R073	1-247-831-00	CARBON 1K 5%	1/6W
Q071	8-729-245-83	TRANSISTOR 2SC2458		R074	1-247-831-00	CARBON 1K 5%	1/6W
Q076	8-729-204-83	TRANSISTOR 2SA1048-GR (AS MODEL)		R075	1-247-815-00	CARBON 220 5%	1/6W
Q077	8-729-245-83	TRANSISTOR 2SC2458 (AS MODEL)		R076	1-247-855-00	CARBON 10K 5%	1/6W
Q080	8-729-245-83	TRANSISTOR 2SC2458		R079	1-247-855-00	CARBON 10K 5%	1/6W(EC MODEL)
Q100	8-729-900-85	TRANSISTOR DTC144WS		R080	1-247-853-00	CARBON 8.2K 5%	1/6W(EC MODEL)
Q103	8-729-245-83	TRANSISTOR 2SC2458		R081	1-247-843-00	CARBON 3.3K 5%	1/6W
Q401	8-729-245-83	TRANSISTOR 2SC2458		R082	1-247-871-00	CARBON 47K 5%	1/6W
Q501	8-729-245-83	TRANSISTOR 2SC2458		R083	1-247-825-00	CARBON 560 5%	1/6W(EC MODEL)
Q502	8-729-245-83	TRANSISTOR 2SC2458		R084	1-247-831-00	CARBON 1K 5%	1/6W(EC MODEL)
Q503	8-729-245-83	TRANSISTOR 2SC2458		R085	1-247-800-00	CARBON 51 5%	1/6W(EC MODEL)
Q504	8-729-245-83	TRANSISTOR 2SC2458		R086	1-247-825-00	CARBON 560 5%	1/6W
Q520	8-729-204-83	TRANSISTOR 2SA1048-GR (EC MODEL)		R087	1-247-825-00	CARBON 560 5%	1/6W
Q701	8-729-245-83	TRANSISTOR 2SC2458		R088	1-247-807-00	CARBON 100 5%	1/6W
Q702	8-729-245-83	TRANSISTOR 2SC2458		R091	1-247-824-00	CARBON 510 5%	1/6W(EC MODEL)
Q703	8-729-177-43	TRANSISTOR 2SD774		R092	1-247-785-00	CARBON 12 5%	1/6W(EC MODEL)
Q704	8-729-204-83	TRANSISTOR 2SA1048-GR		R093	1-247-806-00	CARBON 91 5%	1/6W(EC MODEL)
Q705	8-729-204-83	TRANSISTOR 2SA1048-GR		R094	1-247-871-00	CARBON 47K 5%	1/6W
Q706	8-729-245-83	TRANSISTOR 2SC2458		R095	1-247-879-00	CARBON 100K 5%	1/6W(EC MODEL)
Q707	8-729-245-83	TRANSISTOR 2SC2458		R097	1-247-881-00	CARBON 120K 5%	1/6W(EC MODEL)
Q803	8-729-245-83	TRANSISTOR 2SC2458		R098	1-247-891-00	CARBON 330K 5%	1/6W
Q806	8-729-245-83	TRANSISTOR 2SC2458 (EC MODEL)		R100	1-247-873-00	CARBON 56K 5%	1/6W(EC MODEL)
RESISTOR				R101	1-247-867-00	CARBON 33K 5%	1/6W(EC MODEL)
R032	1-247-831-00	CARBON	1K 5% 1/6W	R103	1-247-831-00	CARBON	1K 5% 1/6W
R035	1-247-859-00	CARBON	15K 5% 1/6W	R104	1-249-421-11	CARBON	2.2K 5% 1/6W
R038	1-247-837-00	CARBON	1.8K 5% 1/6W	R105	1-247-829-00	CARBON	820 5% 1/6W
R039	1-247-887-00	CARBON	10K 5% 1/6W	R106	1-247-831-00	CARBON	1K 5% 1/6W
R041	1-249-421-11	CARBON	2.2K 5% 1/6W	R107	1-247-824-00	CARBON	510 5% 1/6W
				R108	1-249-421-11	CARBON	2.2K 5% 1/6W

The components identified by shading and mark **A** are critical for safety. Replace only with part number specified.

When indicating parts by reference number, please include the board name.

RY-4

Ref.No	Part No.	Description	Remark	Ref.No	Part No.	Description	Remark
R109	1-247-867-00	CARBON	33K 5% 1/6W	R173	1-247-861-00	CARBON	18K 5% 1/6W
R111	1-247-851-00	CARBON	6.8K 5% 1/6W	R174	1-249-421-11	CARBON	2.2K 5% 1/6W
R112	1-247-851-00	CARBON	6.8K 5% 1/6W	R175	1-247-831-00	CARBON	1K 5% 1/6W
R113	1-247-843-00	CARBON	3.3K 5% 1/6W	R176	1-249-421-11	CARBON	2.2K 5% 1/6W
R114	1-247-828-00	CARBON	750 5% 1/6W	R178	1-247-831-00	CARBON	1K 5% 1/6W
R115	1-247-879-00	CARBON	100K 5% 1/6W	R179	1-247-831-00	CARBON	1K 5% 1/6W
R116	1-247-853-00	CARBON	8.2K 5% 1/6W	R180	1-247-823-00	CARBON	470 5% 1/6W
R117	1-247-846-00	CARBON	4.3K 5% 1/6W	R181	1-247-823-00	CARBON	470 5% 1/6W
R120	1-247-831-00	CARBON	1K 5% 1/6W	R185	1-247-843-00	CARBON	3.3K 5% 1/6W
R121	1-247-831-00	CARBON	1K 5% 1/6W	R186	1-247-830-00	CARBON	910 5% 1/6W
R122	1-249-421-11	CARBON	2.2K 5% 1/6W	R187	1-247-831-00	CARBON	1K 5% 1/6W
R125	1-247-831-00	CARBON	1K 5% 1/6W	R189	1-247-834-00	CARBON	1.3K 5% 1/6W
R126	1-247-831-00	CARBON	1K 5% 1/6W	R190	1-247-834-00	CARBON	1.3K 5% 1/6W
R127	1-247-835-00	CARBON	1.5K 5% 1/6W	R191	1-247-831-00	CARBON	1K 5% 1/6W
R128	1-247-831-00	CARBON	1K 5% 1/6W	R192	1-247-831-00	CARBON	1K 5% 1/6W
R129	1-247-867-00	CARBON	33K 5% 1/6W	R193	1-247-855-00	CARBON	10K 5% 1/6W
R130	1-247-843-00	CARBON	3.3K 5% 1/6W	R194	1-247-819-00	CARBON	330 5% 1/6W
R131	1-247-841-00	CARBON	2.7K 5% 1/6W	R195	1-247-812-00	CARBON	160 5% 1/6W
R132	1-247-887-00	CARBON	220K 5% 1/6W	R196	1-247-863-00	CARBON	22K 5% 1/6W
R133	1-247-807-00	CARBON	100 5% 1/6W	R197	1-247-863-00	CARBON	22K 5% 1/6W
R134	1-247-851-00	CARBON	6.8K 5% 1/6W	R198	1-247-829-00	CARBON	820 5% 1/6W
R135	1-247-883-00	CARBON	150K 5% 1/6W	R199	1-247-821-00	CARBON	390 5% 1/6W
R136	1-247-879-00	CARBON	100K 5% 1/6W	R200	1-249-421-11	CARBON	2.2K 5% 1/6W
R137	1-247-857-00	CARBON	12K 5% 1/6W	R201	1-247-837-00	CARBON	1.8K 5% 1/6W
R138	1-247-861-00	CARBON	18K 5% 1/6W	R202	1-247-831-00	CARBON	1K 5% 1/6W
R139	1-247-841-00	CARBON	2.7K 5% 1/6W	R203	1-247-815-00	CARBON	220 5% 1/6W
R140	1-247-867-00	CARBON	33K 5% 1/6W	R204	1-247-811-00	CARBON	150 5% 1/6W
R142	1-247-842-00	CARBON	3K 5% 1/6W	R205	1-247-811-00	CARBON	150 5% 1/6W
R143	1-247-847-00	CARBON	4.7K 5% 1/6W	R206	1-247-834-00	CARBON	1.3K 5% 1/6W
R144	1-247-824-00	CARBON	510 5% 1/6W	R207	1-247-875-00	CARBON	68K 5% 1/6W
R145	1-247-831-00	CARBON	1K 5% 1/6W	R208	1-247-875-00	CARBON	68K 5% 1/6W
R146	1-247-831-00	CARBON	1K 5% 1/6W	R209	1-247-833-00	CARBON	1.2K 5% 1/6W
R147	1-247-855-00	CARBON	10K 5% 1/6W	R210	1-247-824-00	CARBON	510 5% 1/6W
R148	1-247-831-00	CARBON	1K 5% 1/6W	R211	1-247-831-00	CARBON	1K 5% 1/6W
R149	1-247-819-00	CARBON	330 5% 1/6W	R212	1-247-824-00	CARBON	510 5% 1/6W
R150	1-247-863-00	CARBON	22K 5% 1/6W	R213	1-247-835-00	CARBON	1.5K 5% 1/6W
R151	1-247-812-00	CARBON	160 5% 1/6W	R214	1-247-831-00	CARBON	1K 5% 1/6W
R152	1-247-829-00	CARBON	820 5% 1/6W	R215	1-247-831-00	CARBON	1K 5% 1/6W
R153	1-247-863-00	CARBON	22K 5% 1/6W	R219	1-247-865-00	CARBON	27K 5% 1/6W
R154	1-247-821-00	CARBON	390 5% 1/6W	R220	1-247-877-00	CARBON	82K 5% 1/6W
R155	1-249-421-11	CARBON	2.2K 5% 1/6W	R221	1-247-849-00	CARBON	5.6K 5% 1/6W
R156	1-249-421-11	CARBON	2.2K 5% 1/6W	R222	1-247-837-00	CARBON	1.8K 5% 1/6W
R157	1-247-837-00	CARBON	1.8K 5% 1/6W	R223	1-247-837-00	CARBON	1.8K 5% 1/6W
R158	1-247-817-00	CARBON	270 5% 1/6W	R231	1-247-867-00	CARBON	33K 5% 1/6W
R159	1-247-810-00	CARBON	130 5% 1/6W	R235	1-247-831-00	CARBON	1K 5% 1/6W
R160	1-247-832-00	CARBON	1.1K 5% 1/6W	R236	1-247-853-00	CARBON	8.2K 5% 1/6W
R161	1-247-855-00	CARBON	10K 5% 1/6W	R238	1-247-851-00	CARBON	6.8K 5% 1/6W
R162	1-247-853-00	CARBON	8.2K 5% 1/6W	R239	1-247-855-00	CARBON	10K 5% 1/6W
R163	1-247-831-00	CARBON	1K 5% 1/6W	R240	1-249-421-11	CARBON	2.2K 5% 1/6W
R165	1-247-833-00	CARBON	1.2K 5% 1/6W	R242	1-247-879-00	CARBON	100K 5% 1/6W
R166	1-247-807-00	CARBON	100 5% 1/6W	R243	1-247-855-00	CARBON	10K 5% 1/6W
R171	1-247-901-00	CARBON	820K 5% 1/6W	R244	1-247-851-00	CARBON	6.8K 5% 1/6W
R172	1-247-857-00	CARBON	12K 5% 1/6W	R246	1-247-871-00	CARBON	47K 5% 1/6W

When indicating parts by reference number, please include the board name.

Ref.No	Part No.	Description	Quantity	Unit	Power	Remark	Ref.No	Part No.	Description	Quantity	Unit	Power	Remark
R248	1-247-819-00	CARBON	330	5%	1/6W		R413	1-247-812-00	CARBON	160	5%	1/6W	
R274	1-247-883-00	CARBON	150K	5%	1/6W		R414	1-247-847-00	CARBON	4.7K	5%	1/6W	
R275	1-247-871-00	CARBON	47K	5%	1/6W		R415	1-247-831-00	CARBON	1K	5%	1/6W	
R276	1-247-849-00	CARBON	5.6K	5%	1/6W		R416	1-247-846-00	CARBON	4.3K	5%	1/6W	
R277	1-247-855-00	CARBON	10K	5%	1/6W		R510	1-247-824-00	CARBON	510	5%	1/6W	
R280	1-247-835-00	CARBON	1.5K	5%	1/6W		R511	1-247-867-00	CARBON	33K	5%	1/6W	(EC MODEL)
R281	1-247-890-00	CARBON	300K	5%	1/6W		R512	1-247-847-00	CARBON	4.7K	5%	1/6W	
R282	1-247-819-00	CARBON	330	5%	1/6W		R513	1-247-863-00	CARBON	22K	5%	1/6W	
R283	1-249-421-11	CARBON	2.2K	5%	1/6W		R514	1-247-821-00	CARBON	390	5%	1/6W	
R284	1-247-877-00	CARBON	82K	5%	1/6W		R515	1-249-421-11	CARBON	2.2K	5%	1/6W	
R286	1-247-843-00	CARBON	3.3K	5%	1/6W		R516	1-247-821-00	CARBON	390	5%	1/6W	
R291	1-247-863-00	CARBON	22K	5%	1/6W		R517	1-247-821-00	CARBON	390	5%	1/6W	
R292	1-247-875-00	CARBON	68K	5%	1/6W		R518	1-247-821-00	CARBON	390	5%	1/6W	
R293	1-247-819-00	CARBON	330	5%	1/6W		R519	1-247-821-00	CARBON	390	5%	1/6W	
R295	1-249-421-11	CARBON	2.2K	5%	1/6W		R520	1-249-421-11	CARBON	2.2K	5%	1/6W	
R296	1-247-811-00	CARBON	150	5%	1/6W		R521	1-247-821-00	CARBON	390	5%	1/6W	
R298	1-247-894-00	CARBON	430K	5%	1/6W		R522	1-249-421-11	CARBON	2.2K	5%	1/6W	
R299	1-247-892-00	CARBON	360K	5%	1/6W		R525	1-247-843-00	CARBON	3.3K	5%	1/6W	
R301	1-247-855-00	CARBON	10K	5%	1/6W		R601	1-247-847-00	CARBON	4.7K	5%	1/6W	
R302	1-247-819-00	CARBON	330	5%	1/6W		R603	1-247-843-00	CARBON	3.3K	5%	1/6W	
R303	1-247-819-00	CARBON	330	5%	1/6W		R607	1-247-855-00	CARBON	10K	5%	1/6W	(EC MODEL)
R304	1-247-847-00	CARBON	4.7K	5%	1/6W		R638	1-247-807-00	CARBON	100	5%	1/6W	(EC MODEL)
R312	1-247-847-00	CARBON	4.7K	5%	1/6W		R639	1-247-831-00	CARBON	1K	5%	1/6W	(EC MODEL)
R313	1-247-823-00	CARBON	470	5%	1/6W		R640	1-247-815-00	CARBON	220	5%	1/6W	(EC MODEL)
R320	1-247-878-00	CARBON	91K	5%	1/6W		R641	1-247-823-00	CARBON	470	5%	1/6W	(EC MODEL)
R321	1-247-887-00	CARBON	220K	5%	1/6W		R643	1-247-875-00	CARBON	68K	5%	1/6W	
R325	1-247-807-00	CARBON	100	5%	1/6W		R701	1-247-831-00	CARBON	1K	5%	1/6W	
R331	1-249-421-11	CARBON	2.2K	5%	1/6W		R702	1-247-818-00	CARBON	300	5%	1/6W	
R340	1-247-887-00	CARBON	220K	5%	1/6W	(AS MODEL)	R704	1-247-857-00	CARBON	12K	5%	1/6W	
R346	1-249-421-11	CARBON	2.2K	5%	1/6W		R709	1-247-832-00	CARBON	1.1K	5%	1/6W	
R347	1-247-879-00	CARBON	100K	5%	1/6W	(AS MODEL)	R710	1-247-829-00	CARBON	820	5%	1/6W	
R351	1-247-815-00	CARBON	220	5%	1/6W		R712	1-247-831-00	CARBON	1K	5%	1/6W	
R353	1-247-831-00	CARBON	1K	5%	1/6W		R713	1-247-831-00	CARBON	1K	5%	1/6W	
R357	1-247-829-00	CARBON	820	5%	1/6W		R716	1-247-879-00	CARBON	100K	5%	1/6W	
R370	1-247-797-00	CARBON	39	5%	1/6W	(EC MODEL)	R717	1-247-835-00	CARBON	1.5K	5%	1/6W	
R370	1-247-799-00	CARBON	47	5%	1/6W	(AS MODEL)	R720	1-247-818-00	CARBON	300	5%	1/6W	
R380	1-247-851-00	CARBON	6.8K	5%	1/6W		R722	1-247-867-00	CARBON	33K	5%	1/6W	
R381	1-247-853-00	CARBON	8.2K	5%	1/6W		R723	1-247-863-00	CARBON	22K	5%	1/6W	
R382	1-247-831-00	CARBON	1K	5%	1/6W		R724	1-247-825-00	CARBON	560	5%	1/6W	
R383	1-247-847-00	CARBON	4.7K	5%	1/6W		R725	1-247-825-00	CARBON	560	5%	1/6W	
R389	1-247-832-00	CARBON	1.1K	5%	1/6W		R726	1-247-823-00	CARBON	470	5%	1/6W	
R401	1-247-810-00	CARBON	130	5%	1/6W		R728	1-247-825-00	CARBON	560	5%	1/6W	
R402	1-247-806-00	CARBON	91	5%	1/6W		R730	1-247-859-00	CARBON	15K	5%	1/6W	
R403	1-247-867-00	CARBON	33K	5%	1/6W		R736	1-247-835-00	CARBON	1.5K	5%	1/6W	
R404	1-247-873-00	CARBON	47K	5%	1/6W		R737	1-247-857-00	CARBON	12K	5%	1/6W	
R405	1-247-831-00	CARBON	1K	5%	1/6W		R739	1-217-387-00	FUSIBLE	10	5%	1/6W	
R406	1-247-832-00	CARBON	1.1K	5%	1/6W		R740	1-247-831-00	CARBON	1K	5%	1/6W	
R407	1-247-832-00	CARBON	1.1K	5%	1/6W		R742	1-247-831-00	CARBON	1K	5%	1/6W	
R408	1-247-849-00	CARBON	5.6K	5%	1/6W		R743	1-247-829-00	CARBON	820	5%	1/6W	
R409	1-247-831-00	CARBON	1K	5%	1/6W		R745	1-247-807-00	CARBON	100	5%	1/6W	
R410	1-247-831-00	CARBON	1K	5%	1/6W		R748	1-247-819-00	CARBON	330	5%	1/6W	
R411	1-247-847-00	CARBON	4.7K	5%	1/6W		R749	1-247-819-00	CARBON	330	5%	1/6W	
R412	1-247-828-00	CARBON	750	5%	1/6W		R750	1-247-831-00	CARBON	1K	5%	1/6W	

The components identified by shading and mark **A** are critical for safety. Replace only with part number specified.

When indicating parts by reference number, please include the board name.

Ref.No	Part No.	Description		Remark	Ref.No	Part No.	Description		Remark		
C033	1-130-482-00	MYLAR	0.0082MF	5%	50V	C089	1-123-382-00	ELECT	3.3MF	20%	50V
C034	1-102-824-00	CERAMIC	470PF	5%	50V	C090	1-101-004-00	CERAMIC	0.01MF		50V
C035	1-130-477-00	MYLAR	0.0033MF	5%	50V	C091	1-101-004-00	CERAMIC	0.01MF		50V
C036	1-123-369-00	ELECT	4.7MF	20%	50V	C092	1-123-356-00	ELECT	10MF	20%	16V
C037	1-123-369-00	ELECT	4.7MF	20%	50V	C093	1-123-356-00	ELECT	10MF	20%	16V
C038	1-102-518-00	CERAMIC	33PF	5%	50V	C094	1-101-004-00	CERAMIC	0.01MF		50V
C039	1-102-518-00	CERAMIC	33PF	5%	50V	C095	1-101-004-00	CERAMIC	0.01MF		50V
C040	1-102-822-00	CERAMIC	390PF	5%	50V	C096	1-123-333-00	ELECT	100MF	20%	16V
C041	1-102-822-00	CERAMIC	390PF	5%	50V	C097	1-123-356-00	ELECT	10MF	20%	16V
C042	1-101-004-00	CERAMIC	0.01MF		50V	C098	1-123-332-00	ELECT	47MF	20%	16V
C043	1-101-004-00	CERAMIC	0.01MF		50V	C099	1-123-332-00	ELECT	47MF	20%	16V
C044	1-161-025-00	CERAMIC	0.1MF	10%	25V	C100	1-102-958-00	CERAMIC	20PF	5%	50V
C045	1-161-025-00	CERAMIC	0.1MF	10%	25V	C101	1-130-485-00	MYLAR	0.015MF	5%	50V
C046	1-161-025-00	CERAMIC	0.1MF	10%	25V	C102	1-130-485-00	MYLAR	0.015MF	5%	50V
C047	1-123-318-00	ELECT	33MF	20%	16V	C103	1-130-498-00	MYLAR	0.18MF	5%	50V
C048	1-123-318-00	ELECT	33MF	20%	16V	C104	1-102-936-00	CERAMIC	3PF	0.25PF	50V
C049	1-161-025-00	CERAMIC	0.1MF	10%	25V	C105	1-130-469-00	MYLAR	680PF	5%	50V
C050	1-161-025-00	CERAMIC	0.1MF	10%	25V	C106	1-130-485-00	MYLAR	0.015MF	5%	50V
C051	1-161-025-00	CERAMIC	0.1MF	10%	25V	C107	1-130-475-00	MYLAR	0.0022MF	5%	50V
C052	1-101-004-00	CERAMIC	0.01MF		50V	C108	1-102-936-00	CERAMIC	3PF	0.25PF	50V
C053	1-101-004-00	CERAMIC	0.01MF		50V	C109	1-130-491-00	MYLAR	0.047MF	5%	50V
C054	1-123-380-00	ELECT	1MF	20%	50V	C110	1-130-493-00	MYLAR	0.068MF	5%	50V
C055	1-101-361-00	CERAMIC	150PF	5%	50V	C111	1-131-371-00	TANTALUM	10MF	10%	16V
C056	1-123-380-00	ELECT	1MF	20%	50V	C112	1-131-408-00	TANTALUM	1MF	10%	25V
C058	1-161-025-00	CERAMIC	0.1MF	10%	25V	C113	1-123-330-00	ELECT	22MF	20%	16V
C060	1-101-004-00	CERAMIC	0.01MF		50V	C114	1-123-333-00	ELECT	100MF	20%	16V
C061	1-123-332-00	ELECT	47MF	20%	16V	C115	1-101-004-00	CERAMIC	0.01MF		50V
C062	1-161-025-00	CERAMIC	0.1MF	10%	25V	C116	1-131-408-00	TANTALUM	1MF	10%	25V
C063	1-102-978-00	CERAMIC	220PF	5%	50V	C117	1-131-371-00	TANTALUM	10MF	10%	16V
C064	1-102-978-00	CERAMIC	220PF	5%	50V	C118	1-123-330-00	ELECT	22MF	20%	16V
C065	1-102-522-00	CERAMIC	51PF	5%	50V	C119	1-130-493-00	MYLAR	0.068MF	5%	50V
C066	1-102-531-00	CERAMIC	150PF	5%	50V	C120	1-130-491-00	MYLAR	0.047MF	5%	50V
C067	1-102-531-00	CERAMIC	150PF	5%	50V	C121	1-102-936-00	CERAMIC	3PF	0.25PF	50V
C068	1-102-520-00	CERAMIC	39PF	5%	50V	C122	1-130-475-00	MYLAR	0.0022MF	5%	50V
C070	1-123-356-00	ELECT	10MF	20%	16V	C123	1-130-485-00	MYLAR	0.015MF	5%	50V
C071	1-123-333-00	ELECT	100MF	20%	16V	C124	1-130-469-00	MYLAR	680PF	5%	50V
C072	1-101-004-00	CERAMIC	0.01MF		50V	C125	1-130-498-00	MYLAR	0.18MF	5%	50V
C073	1-101-004-00	CERAMIC	0.01MF		50V	C126	1-130-485-00	MYLAR	0.015MF	5%	50V
C074	1-123-382-00	ELECT	3.3MF	20%	50V	C127	1-102-936-00	CERAMIC	3PF	0.25PF	50V
C075	1-123-382-00	ELECT	3.3MF	20%	50V	C128	1-130-485-00	MYLAR	0.015MF	5%	50V
C076	1-101-004-00	CERAMIC	0.01MF		50V	C129	1-102-958-00	CERAMIC	20PF	5%	50V
C077	1-123-356-00	ELECT	10MF	20%	16V	C130	1-123-332-00	ELECT	47MF	20%	16V
C078	1-101-004-00	CERAMIC	0.01MF		50V	C131	1-123-332-00	ELECT	47MF	20%	16V
C079	1-101-004-00	CERAMIC	0.01MF		50V	C132	1-123-356-00	ELECT	10MF	20%	16V
C080	1-101-004-00	CERAMIC	0.01MF		50V	C133	1-101-004-00	CERAMIC	0.01MF		50V
C081	1-101-004-00	CERAMIC	0.01MF		50V	C134	1-123-333-00	ELECT	100MF	20%	16V
C082	1-101-004-00	CERAMIC	0.01MF		50V	C135	1-123-381-00	ELECT	2.2MF	20%	50V
C083	1-123-356-00	ELECT	10MF	20%	16V	C136	1-123-332-00	ELECT	47MF	20%	16V
C084	1-101-004-00	CERAMIC	0.01MF		50V	C137	1-123-356-00	ELECT	10MF	20%	16V
C085	1-101-004-00	CERAMIC	0.01MF		50V	C138	1-123-356-00	ELECT	10MF	20%	16V
C086	1-101-004-00	CERAMIC	0.01MF		50V	C139	1-123-356-00	ELECT	10MF	20%	16V
C087	1-101-004-00	CERAMIC	0.01MF		50V	C140	1-123-330-00	ELECT	22MF	20%	16V
C088	1-123-382-00	ELECT	3.3MF	20%	50V	C141	1-123-356-00	ELECT	10MF	20%	16V

When indicating parts by reference number, please include the board name.

AF-7

Ref.No	Part No.	Description		Remark	Ref.No	Part No.	Description		Remark		
C142	1-123-356-00	ELECT	10MF	20%	16V	C198	1-123-323-00	ELECT	470MF	20%	16V
C143	1-123-330-00	ELECT	22MF	20%	16V	C204	1-123-332-00	ELECT	47MF	20%	16V
C145	1-123-356-00	ELECT	10MF	20%	16V	C205	1-123-333-00	ELECT	100MF	20%	16V
C146	1-123-356-00	ELECT	10MF	20%	16V	C206	1-123-332-00	ELECT	47MF	20%	16V
C147	1-123-330-00	ELECT	22MF	20%	16V	C207	1-123-330-00	ELECT	22MF	20%	16V
C148	1-123-356-00	ELECT	10MF	20%	16V	C208	1-123-356-00	ELECT	10MF	20%	16V
C149	1-123-356-00	ELECT	10MF	20%	16V	C209	1-123-356-00	ELECT	10MF	20%	16V
C150	1-102-961-21	CERAMIC	27PF	5%	50V	C210	1-123-332-00	ELECT	47MF	20%	16V
C151	1-102-961-21	CERAMIC	27PF	5%	50V	C211	1-101-004-00	CERAMIC	0.01MF		50V
C152	1-123-330-00	ELECT	22MF	20%	16V	C212	1-101-004-00	CERAMIC	0.01MF		50V
C153	1-123-330-00	ELECT	22MF	20%	16V	C213	1-123-356-00	ELECT	10MF	20%	16V
C154	1-123-330-00	ELECT	22MF	20%	16V	C214	1-123-323-00	ELECT	470MF	20%	16V
C155	1-123-330-00	ELECT	22MF	20%	16V	C215	1-123-356-00	ELECT	10MF	20%	16V
C156	1-123-356-00	ELECT	10MF	20%	16V	C216	1-123-356-00	ELECT	10MF	20%	16V
C157	1-123-356-00	ELECT	10MF	20%	16V	C217	1-101-004-00	CERAMIC	0.01MF		50V
C158	1-123-356-00	ELECT	10MF	20%	16V	C218	1-123-307-00	ELECT	100MF	20%	10V
C159	1-123-356-00	ELECT	10MF	20%	16V	C219	1-101-004-00	CERAMIC	0.01MF		50V
C160	1-123-332-00	ELECT	47MF	20%	16V	C220	1-102-949-00	CERAMIC	12PF	5%	50V
C163	1-130-474-00	MYLAR	0.0018MF	5%	50V	C221	1-102-949-00	CERAMIC	12PF	5%	50V
C164	1-130-476-00	MYLAR	0.0027MF	5%	50V						
C165	1-130-478-00	MYLAR	0.0039MF	5%	50V						
C166	1-130-474-00	MYLAR	0.0018MF	5%	50V						
C167	1-130-476-00	MYLAR	0.0027MF	5%	50V						
C168	1-130-478-00	MYLAR	0.0039MF	5%	50V						
C169	1-123-380-00	ELECT	1MF	20%	50V						
C170	1-123-380-00	ELECT	1MF	20%	50V						
C171	1-123-381-00	ELECT	2.2MF	20%	50V						
C172	1-123-356-00	ELECT	10MF	20%	16V						
C173	1-123-356-00	ELECT	10MF	20%	16V						
C174	1-123-318-00	ELECT	33MF	20%	16V						
C175	1-123-318-00	ELECT	33MF	20%	16V						
C176	1-123-356-00	ELECT	10MF	20%	16V						
C177	1-123-356-00	ELECT	10MF	20%	16V						
C178	1-123-356-00	ELECT	10MF	20%	16V						
C179	1-101-004-00	CERAMIC	0.01MF		50V						
C180	1-101-004-00	CERAMIC	0.01MF		50V						
C181	1-101-004-00	CERAMIC	0.01MF		50V						
C182	1-101-004-00	CERAMIC	0.01MF		50V						
C183	1-123-356-00	ELECT	10MF	20%	16V						
C184	1-123-379-00	ELECT	0.47MF	20%	50V						
C185	1-123-356-00	ELECT	10MF	20%	16V						
C186	1-123-356-00	ELECT	10MF	20%	16V						
C187	1-123-330-00	ELECT	22MF	20%	16V						
C188	1-130-475-00	MYLAR	0.0022MF	5%	50V						
C189	1-130-482-00	MYLAR	0.0082MF	5%	50V						
C190	1-102-824-00	CERAMIC	470PF	5%	50V						
C191	1-130-477-00	MYLAR	0.0033MF	5%	50V						
C192	1-123-369-00	ELECT	4.7MF	20%	50V						
C193	1-123-369-00	ELECT	4.7MF	20%	50V						
C194	1-161-025-00	CERAMIC	0.1MF	10%	25V						
C195	1-123-332-00	ELECT	47MF	20%	16V						
C196	1-123-333-00	ELECT	100MF	20%	16V						
C197	1-161-025-00	CERAMIC	0.1MF	10%	25V						
C198	1-123-323-00	ELECT	470MF	20%	16V						
C204	1-123-332-00	ELECT	47MF	20%	16V						
C205	1-123-333-00	ELECT	100MF	20%	16V						
C206	1-123-332-00	ELECT	47MF	20%	16V						
C207	1-123-330-00	ELECT	22MF	20%	16V						
C208	1-123-356-00	ELECT	10MF	20%	16V						
C209	1-123-356-00	ELECT	10MF	20%	16V						
C210	1-123-332-00	ELECT	47MF	20%	16V						
C211	1-101-004-00	CERAMIC	0.01MF		50V						
C212	1-101-004-00	CERAMIC	0.01MF		50V						
C213	1-123-356-00	ELECT	10MF	20%	16V						
C214	1-123-323-00	ELECT	470MF	20%	16V						
C215	1-123-356-00	ELECT	10MF	20%	16V						
C216	1-123-356-00	ELECT	10MF	20%	16V						
C217	1-101-004-00	CERAMIC	0.01MF		50V						
C218	1-123-307-00	ELECT	100MF	20%	10V						
C219	1-101-004-00	CERAMIC	0.01MF		50V						
C220	1-102-949-00	CERAMIC	12PF	5%	50V						
C221	1-102-949-00	CERAMIC	12PF	5%	50V						
CONNECTOR											
CN001	*1-560-892-00	PIN, CONNECTOR	4P								
CN002	*1-560-893-00	PIN, CONNECTOR	5P								
CN003	*1-560-893-00	PIN, CONNECTOR	5P								
CN004	*1-560-894-00	PIN, CONNECTOR	6P								
CN005	*1-560-894-00	PIN, CONNECTOR	6P								
CN006	*1-560-894-00	PIN, CONNECTOR	6P								
CN007	*1-564-031-00	PIN, CONNECTOR	6P								
CN008	*1-564-030-00	PIN, CONNECTOR	5P								
CN009	*1-560-892-00	PIN, CONNECTOR	4P								
CN010	*1-560-900-00	PIN, CONNECTOR	12P								
CN011	*1-560-894-00	PIN, CONNECTOR	6P								
CN012	1-562-121-00	CONNECTOR, DIN	6P								
CN013	*1-564-027-00	PIN, CONNECTOR	2P								
DIODE											
D001	8-719-911-19	DIODE	1SS119								
D002	8-719-911-19	DIODE	1SS119								
D003	8-719-911-19	DIODE	1SS119								
D004	8-719-911-19	DIODE	1SS119								
D005	8-719-911-19	DIODE	1SS119								
D006	8-719-911-19	DIODE	1SS119								
D007	8-719-911-19	DIODE	1SS119								
D008	8-719-911-19	DIODE	1SS119								
D009	8-719-911-19	DIODE	1SS119								
D010	8-719-000-12	DIODE	MC931								
D011	8-719-000-12	DIODE	MC931								
D012	8-719-911-19	DIODE	1SS119								
D013	8-719-911-19	DIODE	1SS119								
D016	8-719-911-19	DIODE	1SS119								
D017	8-719-911-19	DIODE	1SS119								
D018	8-719-911-19	DIODE	1SS119								
D019	8-719-911-19	DIODE	1SS119								

When indicating parts by reference number, please include the board name.

Ref.No	Part No.	Description	Remark	Ref.No	Part No.	Description	Remark
D020	8-719-162-07	DIODE RD6.2E-B		Q004	8-729-245-83	TRANSISTOR 2SC2458	
D023	8-719-911-19	DIODE 1SS119		Q005	8-729-600-12	TRANSISTOR 2SK108-C	
D024	8-719-911-19	DIODE 1SS119		Q006	8-729-245-83	TRANSISTOR 2SC2458	
D025	8-719-911-19	DIODE 1SS119		Q007	8-729-245-83	TRANSISTOR 2SC2458	
D027	8-719-102-73	DIODE RD6.2EN1		Q008	8-729-245-83	TRANSISTOR 2SC2458	
D028	8-719-911-19	DIODE 1SS119		Q009	8-729-245-83	TRANSISTOR 2SC2458	
D029	8-719-911-19	DIODE 1SS119		Q010	8-729-204-83	TRANSISTOR 2SA1048-GR	
D030	8-719-911-19	DIODE 1SS119		Q011	8-729-800-42	TRANSISTOR 2SK152-2	
D031	8-719-911-19	DIODE 1SS119		Q012	8-729-900-89	TRANSISTOR DTC144ES	
D032	8-719-911-19	DIODE 1SS119		Q013	8-729-900-89	TRANSISTOR DTC144ES	
D033	8-719-911-19	DIODE 1SS119		Q014	8-729-800-42	TRANSISTOR 2SK152-2	
D034	8-719-911-19	DIODE 1SS119		Q015	8-729-204-83	TRANSISTOR 2SA1048-GR	
D037	8-719-911-19	DIODE 1SS119		Q016	8-729-245-83	TRANSISTOR 2SC2458	
D038	8-719-911-19	DIODE 1SS119		Q017	8-729-900-89	TRANSISTOR DTC144ES	
D039	8-719-911-19	DIODE 1SS119		Q018	8-729-900-89	TRANSISTOR DTC144ES	
D040	8-719-000-12	DIODE MC931		Q019	8-729-113-33	TRANSISTOR 2SB733-4	
D042	8-719-911-19	DIODE 1SS119		Q020	8-729-384-48	TRANSISTOR 2SA844-D	
D043	8-719-911-19	DIODE 1SS119		Q021	8-729-603-30	TRANSISTOR 2SC403SP-3	
		<u>FILTER</u>		Q024	8-729-603-30	TRANSISTOR 2SC403SP-3	
FL001	1-235-367-11	B.P.F		Q025	8-729-603-30	TRANSISTOR 2SC403SP-3	
FL002	1-235-367-11	B.P.F		Q026	8-729-204-83	TRANSISTOR 2SA1048-GR	
FL003	1-235-366-11	B.P.F		Q027	8-729-204-83	TRANSISTOR 2SA1048-GR	
FL004	1-235-366-11	B.P.F		Q028	8-729-204-83	TRANSISTOR 2SA1048-GR	
FL005	1-235-365-11	L.P.F		Q031	8-729-900-89	TRANSISTOR DTC144ES	
FL006	1-235-365-11	L.P.F		Q032	8-729-900-89	TRANSISTOR DTC144ES	
		<u>IC</u>		Q033	8-729-900-89	TRANSISTOR DTC144ES	
IC001	8-759-979-26	IC CX-7926		Q034	8-729-900-89	TRANSISTOR DTC144ES	
IC002	8-752-010-50	IC CX20105		Q035	8-729-900-89	TRANSISTOR DTC144ES	
IC003	8-752-010-40	IC CX20104		Q036	8-729-245-83	TRANSISTOR 2SC2458	
IC004	8-752-009-70	IC CX20097		Q037	8-729-245-83	TRANSISTOR 2SC2458	
IC005	8-759-700-62	IC NJM45620		Q038	8-729-245-83	TRANSISTOR 2SC2458	
IC006	8-759-240-66	IC TC4066BP		Q039	8-729-900-80	TRANSISTOR DTC114ES	
IC007	8-759-915-48	IC TK15011Z		Q040	8-729-900-80	TRANSISTOR DTC114ES	
IC008	8-752-010-50	IC CX20105		Q041	8-729-900-80	TRANSISTOR DTC114ES	
		<u>COIL</u>		Q042	8-729-900-80	TRANSISTOR DTC114ES	
L001	1-408-454-31	MICRO INDUCTOR 100UH		Q043	8-729-900-80	TRANSISTOR DTC114ES	
L002	1-408-454-31	MICRO INDUCTOR 100UH		Q044	8-729-900-80	TRANSISTOR DTC114ES	
L003	1-408-405-00	MICRO INDUCTOR 4.7UH		Q045	8-729-900-89	TRANSISTOR DTC144ES	
L004	1-408-454-31	MICRO INDUCTOR 100UH		Q049	8-729-117-54	TRANSISTOR 2SA1175-F	
L005	1-408-454-31	MICRO INDUCTOR 100UH		Q050	8-729-900-89	TRANSISTOR DTC144ES	
L006	1-408-418-00	MICRO INDUCTOR 56UH		Q051	8-729-900-89	TRANSISTOR DTC144ES	
L007	1-408-415-00	MICRO INDUCTOR 33UH		Q052	8-729-245-83	TRANSISTOR 2SC2458	
L008	1-408-416-00	MICRO INDUCTOR 39UH		Q053	8-729-900-89	TRANSISTOR DTC144ES	
L009	1-408-413-00	MICRO INDUCTOR 22UH		Q054	8-729-900-89	TRANSISTOR DTC144ES	
L010	1-408-405-00	MICRO INDUCTOR 4.7UH		Q055	8-729-900-89	TRANSISTOR DTC144ES	
		<u>TRANSISTOR</u>		Q056	8-729-900-89	TRANSISTOR DTC144ES	
Q001	8-729-204-83	TRANSISTOR 2SA1048-GR		Q057	8-729-900-89	TRANSISTOR DTC144ES	
Q002	8-729-900-36	TRANSISTOR DTC124ES		Q058	8-729-177-43	TRANSISTOR 2SD774-3	
Q003	8-729-600-12	TRANSISTOR 2SK108-C		Q059	8-729-204-83	TRANSISTOR 2SA1048-GR	
				Q060	8-729-900-89	TRANSISTOR DTC144ES	
				Q061	8-729-900-89	TRANSISTOR DTC144ES	
				Q062	8-729-245-83	TRANSISTOR 2SC2458	
				Q063	8-729-245-83	TRANSISTOR 2SC2458	

When indicating parts by reference number, please include the board name.

AF-7

Ref.No	Part No.	Description	Remark	Ref.No	Part No.	Description	Remark
Q064	8-729-900-89	TRANSISTOR DTC144ES		R051	1-247-831-00	CARBON 1K 5% 1/6W	
Q065	8-729-113-33	TRANSISTOR 2SB733-4		R053	1-247-807-00	CARBON 100 5% 1/6W	
Q066	8-729-900-89	TRANSISTOR DTC144ES		R054	1-249-421-11	CARBON 2.2K 5% 1/6W	
Q067	8-729-900-89	TRANSISTOR DTC144ES		R055	1-247-819-00	CARBON 330 5% 1/6W	
RESISTOR				R056	1-247-843-00	CARBON 3.3K 5% 1/6W	
R001	1-247-803-00	CARBON 68 5% 1/6W		R057	1-247-819-00	CARBON 330 5% 1/6W	
R002	1-247-804-00	CARBON 75 5% 1/6W		R058	1-247-827-00	CARBON 680 5% 1/6W	
R003	1-249-421-11	CARBON 2.2K 5% 1/6W		R059	1-247-849-00	CARBON 5.6K 5% 1/6W	
R004	1-247-831-00	CARBON 1K 5% 1/6W		R060	1-247-827-00	CARBON 680 5% 1/6W	
R005	1-247-827-00	CARBON 680 5% 1/6W		R061	1-247-807-00	CARBON 100 5% 1/6W	
R006	1-247-871-00	CARBON 47K 5% 1/6W		R062	1-249-421-11	CARBON 2.2K 5% 1/6W	
R007	1-247-871-00	CARBON 47K 5% 1/6W		R063	1-247-843-00	CARBON 3.3K 5% 1/6W	
R008	1-247-814-00	CARBON 200 5% 1/6W		R064	1-247-819-00	CARBON 330 5% 1/6W	
R009	1-247-840-00	CARBON 2.4K 5% 1/6W		R065	1-247-819-00	CARBON 330 5% 1/6W	
R010	1-247-879-00	CARBON 100K 5% 1/6W		R066	1-247-827-00	CARBON 680 5% 1/6W	
R011	1-247-879-00	CARBON 100K 5% 1/6W		R067	1-247-849-00	CARBON 5.6K 5% 1/6W	
R012	1-247-879-00	CARBON 100K 5% 1/6W		R068	1-247-827-00	CARBON 680 5% 1/6W	
R013	1-247-827-00	CARBON 680 5% 1/6W		R070	1-247-869-00	CARBON 39K 5% 1/6W	
R014	1-247-871-00	CARBON 47K 5% 1/6W		R071	1-247-857-00	CARBON 12K 5% 1/6W	
R015	1-247-871-00	CARBON 47K 5% 1/6W		R072 A	1-214-124-00	METAL OXIDE 56 5% 1/4W	
R016	1-247-814-00	CARBON 200 5% 1/6W		R073	1-247-826-00	CARBON 620 5% 1/6W	
R017	1-247-840-00	CARBON 2.4K 5% 1/6W		R074	1-247-823-00	CARBON 470 5% 1/6W	
R018	1-247-879-00	CARBON 100K 5% 1/6W		R075	1-247-820-00	CARBON 360 5% 1/6W	
R019	1-247-879-00	CARBON 100K 5% 1/6W		R076	1-214-673-00	METAL 4.7 1% 1/4W	
R020	1-247-803-00	CARBON 68 5% 1/6W		R077	1-247-831-00	CARBON 1K 5% 1/6W	
R021	1-247-847-00	CARBON 4.7K 5% 1/6W		R078	1-247-819-00	CARBON 330 5% 1/6W	
R022	1-247-831-00	CARBON 1K 5% 1/6W		R079	1-247-853-00	CARBON 8.2K 5% 1/6W	
R023	1-247-808-00	CARBON 110 5% 1/6W		R081	1-247-855-00	CARBON 10K 5% 1/6W	
R024	1-247-811-00	CARBON 150 5% 1/6W		R089	1-247-847-00	CARBON 4.7K 5% 1/6W	
R025	1-247-841-00	CARBON 2.7K 5% 1/6W		R090	1-247-861-00	CARBON 18K 5% 1/6W	
R026	1-247-855-00	CARBON 10K 5% 1/6W		R091	1-247-861-00	CARBON 18K 5% 1/6W	
R028	1-247-857-00	CARBON 12K 5% 1/6W		R092	1-247-847-00	CARBON 4.7K 5% 1/6W	
R029	1-247-865-00	CARBON 27K 5% 1/6W		R093	1-247-861-00	CARBON 18K 5% 1/6W	
R030	1-247-841-00	CARBON 2.7K 5% 1/6W		R094	1-247-861-00	CARBON 18K 5% 1/6W	
R031	1-247-863-00	CARBON 22K 5% 1/6W		R095	1-247-823-00	CARBON 470 5% 1/6W	
R032	1-247-858-00	CARBON 13K 5% 1/6W		R096 A	1-217-305-00	FUSIBLE 6.8 5% 1/4W	
R033	1-247-855-00	CARBON 10K 5% 1/6W		R097	1-247-823-00	CARBON 470 5% 1/6W	
R034	1-249-421-11	CARBON 2.2K 5% 1/6W		R098	1-247-851-00	CARBON 6.8K 5% 1/6W	
R036	1-249-421-11	CARBON 2.2K 5% 1/6W		R099	1-247-837-00	CARBON 1.8K 5% 1/6W	
R037	1-247-861-00	CARBON 18K 5% 1/6W		R100	1-247-821-00	CARBON 390 5% 1/6W	
R038	1-247-850-00	CARBON 6.2K 5% 1/6W		R101	1-247-859-00	CARBON 15K 5% 1/6W	
R039	1-247-848-00	CARBON 5.1K 5% 1/6W		R102	1-247-857-00	CARBON 12K 5% 1/6W	
R040	1-247-898-00	CARBON 620K 5% 1/6W		R103	1-247-863-00	CARBON 22K 5% 1/6W	
R041	1-247-843-00	CARBON 3.3K 5% 1/6W		R104	1-247-852-00	CARBON 7.5K 5% 1/6W	
R042	1-247-843-00	CARBON 3.3K 5% 1/6W		R105	1-247-853-00	CARBON 8.2K 5% 1/6W	
R043	1-247-843-00	CARBON 3.3K 5% 1/6W		R106	1-247-843-00	CARBON 3.3K 5% 1/6W	
R044	1-247-831-00	CARBON 1K 5% 1/6W		R107	1-247-835-00	CARBON 1.5K 5% 1/6W	
R045	1-247-831-00	CARBON 1K 5% 1/6W		R108	1-247-857-00	CARBON 12K 5% 1/6W	
R047	1-247-831-00	CARBON 1K 5% 1/6W		R109	1-247-864-00	CARBON 24K 5% 1/6W	
R048	1-247-831-00	CARBON 1K 5% 1/6W		R110	1-247-871-00	CARBON 47K 5% 1/6W	
R049	1-247-831-00	CARBON 1K 5% 1/6W		R111	1-247-861-00	CARBON 18K 5% 1/6W	
R050	1-247-831-00	CARBON 1K 5% 1/6W		R112	1-247-859-00	CARBON 15K 5% 1/6W	
				R113	1-247-837-00	CARBON 1.8K 5% 1/6W	

The components identified by shading and mark **A** are critical for safety. Replace only with part number specified.

When indicating parts by reference number, please include the board name.

Ref.No	Part No.	Description	Remark	Ref.No	Part No.	Description	Remark
R114	1-247-851-00	CARBON	6.8K 5% 1/6W	R176	1-247-871-00	CARBON	47K 5% 1/6W
R115	1-247-875-00	CARBON	68K 5% 1/6W	R177	1-247-871-00	CARBON	47K 5% 1/6W
R116	1-247-821-00	CARBON	390 5% 1/6W	R178	1-247-847-00	CARBON	4.7K 5% 1/6W
R117	1-247-807-00	CARBON	100 5% 1/6W	R179	1-247-855-00	CARBON	10K 5% 1/6W
R118	1-247-824-00	CARBON	510 5% 1/6W	R180	1-247-807-00	CARBON	100 5% 1/6W
R119	1-247-855-00	CARBON	10K 5% 1/6W	R181	1-247-855-00	CARBON	10K 5% 1/6W
R120	1-215-433-00	METAL	3.3K 1% 1/6W	R183	1-247-871-00	CARBON	47K 5% 1/6W
R121	1-247-859-00	CARBON	15K 5% 1/6W	R184	1-249-421-11	CARBON	2.2K 5% 1/6W
R122	1-247-840-00	CARBON	2.4K 5% 1/6W	R185	1-247-807-00	CARBON	100 5% 1/6W
R123	1-247-855-00	CARBON	10K 5% 1/6W	R186	1-247-871-00	CARBON	47K 5% 1/6W
R124	1-247-855-00	CARBON	10K 5% 1/6W	R187	1-247-871-00	CARBON	47K 5% 1/6W
R125	1-247-814-00	CARBON	200 5% 1/6W	R188	1-247-855-00	CARBON	10K 5% 1/6W
R126	1-247-843-00	CARBON	3.3K 5% 1/6W	R189	1-247-855-00	CARBON	10K 5% 1/6W
R127	1-247-834-00	CARBON	1.3K 5% 1/6W	R190	1-215-462-00	METAL	51K 1% 1/6W
R128	1-247-858-00	CARBON	13K 5% 1/6W	R191	1-247-879-00	CARBON	100K 5% 1/6W
R129	1-247-838-00	CARBON	2K 5% 1/6W	R192	1-247-879-00	CARBON	100K 5% 1/6W
R130	1-247-834-00	CARBON	1.3K 5% 1/6W	R193	1-215-446-00	METAL	11K 1% 1/6W
R131	1-247-858-00	CARBON	13K 5% 1/6W	R194	1-215-465-00	METAL	68K 1% 1/6W
R132	1-247-895-00	CARBON	470K 5% 1/6W	R195	1-215-465-00	METAL	68K 1% 1/6W
R133	1-247-855-00	CARBON	10K 5% 1/6W	R196	1-215-446-00	METAL	11K 1% 1/6W
R134	1-247-865-00	CARBON	27K 5% 1/6W	R197	1-215-462-00	METAL	51K 1% 1/6W
R135	1-247-833-00	CARBON	1.2K 5% 1/6W	R198	1-249-421-11	CARBON	2.2K 5% 1/6W
R136	1-247-825-00	CARBON	560 5% 1/6W	R199	1-249-421-11	CARBON	2.2K 5% 1/6W
R137	1-247-825-00	CARBON	560 5% 1/6W	R206	1-247-817-00	CARBON	270 5% 1/6W
R138	1-247-824-00	CARBON	510 5% 1/6W	R207	1-247-827-00	CARBON	680 5% 1/6W
R139	1-247-836-00	CARBON	1.6K 5% 1/6W	R208	1-247-825-00	CARBON	560 5% 1/6W
R140	1-247-833-00	CARBON	1.2K 5% 1/6W	R209	1-247-819-00	CARBON	330 5% 1/6W
R141	1-247-865-00	CARBON	27K 5% 1/6W	R213	1-215-429-00	METAL	2.2K 1% 1/6W
R142	1-247-853-00	CARBON	8.2K 5% 1/6W	R214	1-249-421-11	CARBON	2.2K 5% 1/6W
R143	1-247-895-00	CARBON	470K 5% 1/6W	R218	1-215-429-00	METAL	2.2K 1% 1/6W
R144	1-247-855-00	CARBON	10K 5% 1/6W	R221	1-249-421-11	CARBON	2.2K 5% 1/6W
R145	1-247-834-00	CARBON	1.3K 5% 1/6W	R222	1-247-861-00	CARBON	18K 5% 1/6W
R146	1-247-838-00	CARBON	2K 5% 1/6W	R223	1-249-421-11	CARBON	2.2K 5% 1/6W
R147	1-247-858-00	CARBON	13K 5% 1/6W	R224	1-247-861-00	CARBON	18K 5% 1/6W
R148	1-247-858-00	CARBON	13K 5% 1/6W	R225	1-247-855-00	CARBON	10K 5% 1/6W
R149	1-247-834-00	CARBON	1.3K 5% 1/6W	R226	1-247-843-00	CARBON	3.3K 5% 1/6W
R150	1-247-814-00	CARBON	200 5% 1/6W	R227	1-247-847-00	CARBON	4.7K 5% 1/6W
R151	1-247-843-00	CARBON	3.3K 5% 1/6W	R228	1-247-898-00	CARBON	620K 5% 1/6W
R152	1-247-855-00	CARBON	10K 5% 1/6W	R229	1-247-864-00	CARBON	24K 5% 1/6W
R153	1-247-855-00	CARBON	10K 5% 1/6W	R230	1-247-883-00	CARBON	150K 5% 1/6W
R154	1-247-855-00	CARBON	10K 5% 1/6W	R231	1-247-843-00	CARBON	3.3K 5% 1/6W
R155	1-247-824-00	CARBON	510 5% 1/6W	R232	1-247-843-00	CARBON	3.3K 5% 1/6W
R156	1-247-840-00	CARBON	2.4K 5% 1/6W	R233	1-247-823-00	CARBON	470 5% 1/6W
R157	1-247-859-00	CARBON	15K 5% 1/6W	R234	1-247-827-00	CARBON	680 5% 1/6W
R158	1-247-807-00	CARBON	100 5% 1/6W	R235	1-247-829-00	CARBON	820 5% 1/6W
R159	1-215-433-00	METAL	3.3K 1% 1/6W	R236	1-247-847-00	CARBON	4.7K 5% 1/6W
R160	1-247-824-00	CARBON	510 5% 1/6W	R237	1-247-847-00	CARBON	4.7K 5% 1/6W
R161	1-247-853-00	CARBON	8.2K 5% 1/6W	R238	1-247-815-00	CARBON	220 5% 1/6W
R162	1-247-871-00	CARBON	47K 5% 1/6W	R239	1-247-847-00	CARBON	4.7K 5% 1/6W
R163	1-247-871-00	CARBON	47K 5% 1/6W	R240	1-247-847-00	CARBON	4.7K 5% 1/6W
R173	1-247-879-00	CARBON	100K 5% 1/6W	R241	1-247-867-00	CARBON	33K 5% 1/6W
R174	1-247-881-00	CARBON	120K 5% 1/6W	R242	1-247-863-00	CARBON	22K 5% 1/6W
R175	1-247-847-00	CARBON	4.7K 5% 1/6W	R243	1-247-879-00	CARBON	100K 5% 1/6W

When indicating parts by reference number, please include the board name.

SA-9

Ref.No	Part No.	Description
CN606	*1-560-890-00	PIN, CONNECTOR 2P
CN607	*1-560-891-00	PIN, CONNECTOR 3P
CN608	*1-560-890-00	PIN, CONNECTOR 2P
CN609	*1-560-894-00	PIN, CONNECTOR 6P
CN610	*1-560-895-00	PIN, CONNECTOR 7P
CN611	*1-560-891-00	PIN, CONNECTOR 3P
CN612	*1-560-891-00	PIN, CONNECTOR 3P

DIODE

D301	8-719-911-19	DIODE 1SS119
D302	8-719-191-07	DIODE RD9.1E-B
D303	8-719-000-06	DIODE MC921
D304	8-719-000-04	DIODE MC911
D305	8-719-101-50	DIODE RD5.1EL2
D306	8-719-911-19	DIODE 1SS119
D307	8-719-911-19	DIODE 1SS119
D308	8-719-000-06	DIODE MC921
D311	8-719-000-06	DIODE MC921
D501	8-719-000-06	DIODE MC921
D601	8-719-000-06	DIODE MC921
D602	8-719-000-06	DIODE MC921
D603	8-719-000-04	DIODE MC911
D604	8-719-911-19	DIODE 1SS119
D606	8-719-168-07	DIODE RD6.8E-B
D609	8-719-911-19	DIODE 1SS119
D610	8-719-168-07	DIODE RD6.8E-B
D611	8-719-168-07	DIODE RD6.8E-B

IC

IC301	8-752-012-40	IC CX20124
IC302	8-759-135-80	IC UPC358C
IC303	8-759-145-58	IC UPC4558C
IC304	8-759-918-61	IC MB88201-1916
IC305	8-759-135-80	IC UPC358C
IC306	8-759-135-80	IC UPC358C
IC307	8-759-240-66	IC TC4066BP
IC501	8-759-915-38	IC BA5116
IC502	8-759-101-73	IC UPC1513HA
IC601	8-759-915-87	IC MB88551-150M
IC602	8-759-800-72	IC LA7205
IC603	8-759-600-24	IC M54543L

COIL

L301	1-408-417-00	MICRO INDUCTOR 47UH
L302	1-408-421-00	MICRO INDUCTOR 100UH
L501	1-408-222-00	MICRO INDUCTOR 27MMH
L502	1-408-221-00	MICRO INDUCTOR 22MMH
L503	1-407-710-00	MICRO INDUCTOR 270UH
L601	1-407-717-00	MICRO INDUCTOR 1MMH

IC LINK

PS301 Δ 1-532-727-11 LINK IC

The components identified by shading and mark Δ are critical for safety. Replace only with part number specified.

When indicating parts by reference number, please include the board name.

Remark	Ref.No	Part No.	Description	Remark
	PS301 Δ	1-532-727-11	LINK IC	
	PS302 Δ	1-532-637-00	LINK IC	
	PS303 Δ	1-532-637-00	LINK IC	
	PS304 Δ	1-532-637-00	LINK IC	
	TRANSISTOR			
	Q302	8-729-900-89	TRANSISTOR DTC144ES	
	Q303	8-729-204-83	TRANSISTOR 2SA1048-GR	
	Q304	8-729-900-89	TRANSISTOR DTC144ES	
	Q305	8-729-900-74	TRANSISTOR DTC143TS	
	Q306	8-729-900-89	TRANSISTOR DTC144ES	
	Q307	8-729-245-83	TRANSISTOR 2SC2458	
	Q308	8-729-245-83	TRANSISTOR 2SC2458	
	Q309	8-729-245-83	TRANSISTOR 2SC2458	
	Q310	8-729-177-43	TRANSISTOR 2SD774	
	Q312	8-729-245-83	TRANSISTOR 2SC2458	
	Q313	8-729-900-89	TRANSISTOR DTC144ES	
	Q314	8-729-245-83	TRANSISTOR 2SC2458	
	Q315	8-729-245-83	TRANSISTOR 2SC2458	
	Q316	8-729-245-83	TRANSISTOR 2SC2458	
	Q317	8-729-245-83	TRANSISTOR 2SC2458	
	Q318	8-729-245-83	TRANSISTOR 2SC2458	
	Q319	8-729-316-16	TRANSISTOR 2SC1061	
	Q320	8-729-245-83	TRANSISTOR 2SC2458	
	Q321	8-729-204-83	TRANSISTOR 2SA1048-GR	
	Q322	8-729-245-83	TRANSISTOR 2SC2458	
	Q323	8-729-245-83	TRANSISTOR 2SC2458	
	Q324	8-729-245-83	TRANSISTOR 2SC2458	
	Q325	8-729-373-92	TRANSISTOR 2SB739	
	Q326	8-729-245-83	TRANSISTOR 2SC2458	
	Q327	8-729-245-83	TRANSISTOR 2SC2458	
	Q328	8-729-178-54	TRANSISTOR 2SC2785-F	
	Q329	8-729-900-89	TRANSISTOR DTC144ES	
	Q330	8-729-900-89	TRANSISTOR DTC144ES	
	Q332	8-729-245-83	TRANSISTOR 2SC2458	
	Q333	8-729-316-16	TRANSISTOR 2SC1061	
	Q334	8-729-204-83	TRANSISTOR 2SA1048-GR	
	Q335	8-729-245-83	TRANSISTOR 2SC2458	
	Q336	8-729-245-83	TRANSISTOR 2SC2458	
	Q337	8-729-900-89	TRANSISTOR DTC144ES	
	Q338	8-729-900-61	TRANSISTOR DTA114ES	
	Q339	8-729-900-89	TRANSISTOR DTC144ES	
	Q343	8-729-900-89	TRANSISTOR DTC144ES	
	Q345	8-729-900-65	TRANSISTOR DTA144ES	
	Q346	8-729-245-83	TRANSISTOR 2SC2458	
	Q349	8-729-900-89	TRANSISTOR DTC144ES	
	Q350	8-729-900-89	TRANSISTOR DTC144ES	
	Q351	8-729-900-89	TRANSISTOR DTC144ES	
	Q352	8-729-245-83	TRANSISTOR 2SC2458	
	Q353	8-729-245-83	TRANSISTOR 2SC2458	
	Q354	8-729-245-83	TRANSISTOR 2SC2458	
	Q355	8-729-900-89	TRANSISTOR DTC144ES	
	Q501	8-729-177-43	TRANSISTOR 2SD774	
	Q502	8-729-173-37	TRANSISTOR 2SA733-P	

Ref.No	Part No.	Description	Remark	Ref.No	Part No.	Description	Remark
Q503	8-729-900-89	TRANSISTOR DTC144ES		R335	1-247-807-00	CARBON 100 5%	1/6W
Q504	8-729-900-36	TRANSISTOR DTC124ES		R337	1-247-851-00	CARBON 6.8K 5%	1/6W
Q505	8-729-245-83	TRANSISTOR 2SC2458		R338	1-247-851-00	CARBON 6.8K 5%	1/6W
Q506	8-729-245-83	TRANSISTOR 2SC2458		R339	1-247-855-00	CARBON 10K 5%	1/6W
Q507	8-729-245-83	TRANSISTOR 2SC2458		R340	1-247-859-00	CARBON 15K 5%	1/6W
Q508	8-729-245-83	TRANSISTOR 2SC2458		R341	1-247-855-00	CARBON 10K 5%	1/6W
Q509	8-729-178-54	TRANSISTOR 2SC2785		R342	1-247-881-00	CARBON 120K 5%	1/6W
Q601	8-729-116-42	TRANSISTOR 2SD1164-L		R343	1-247-879-00	CARBON 100K 5%	1/6W
Q602	8-729-116-42	TRANSISTOR 2SD1164-L		R345	1-247-863-00	CARBON 22K 5%	1/6W
Q603	8-729-177-43	TRANSISTOR 2SD-774		R346	1-215-477-00	METAL 220K 1%	1/6W
Q604	8-729-177-43	TRANSISTOR 2SD-774		R347	1-215-479-91	METAL 270K 1%	1/6W
Q609	8-729-900-89	TRANSISTOR DTC144ES		R348	1-247-871-00	CARBON 47K 5%	1/6W
Q610	8-729-245-83	TRANSISTOR 2SC2458		R349	1-247-879-00	CARBON 100K 5%	1/6W
Q611	8-729-900-89	TRANSISTOR DTC144ES		R350	1-247-863-00	CARBON 22K 5%	1/6W
Q615	8-729-204-83	TRANSISTOR 2SA1-48-GR		R351	1-247-863-00	CARBON 22K 5%	1/6W
Q616	8-729-245-83	TRANSISTOR 2SC2458		R353	1-247-859-00	CARBON 15K 5%	1/6W
Q617	8-729-245-83	TRANSISTOR 2SC2458		R354	1-247-857-00	CARBON 12K 5%	1/6W
Q618	8-729-900-85	TRANSISTOR DTC144WS		R356	1-247-871-00	CARBON 47K 5%	1/6W
Q619	8-729-900-89	TRANSISTOR DTC144ES		R357	1-215-467-00	METAL 82K 1%	1/6W
				R358	1-247-875-00	CARBON 68K 5%	1/6W
RESISTOR							
R301	1-247-831-00	CARBON 1K 5%	1/6W	R359	1-247-853-00	CARBON 8.2K 5%	1/6W
R302	1-247-903-00	CARBON 1M 5%	1/6W	R360	1-247-855-00	CARBON 10K 5%	1/6W
R303	1-247-855-00	CARBON 10K 5%	1/6W	R361	1-247-831-00	CARBON 1K 5%	1/6W
R304	1-247-855-00	CARBON 10K 5%	1/6W	R363	1-247-887-00	CARBON 220K 5%	1/6W
R305	1-247-831-00	CARBON 1K 5%	1/6W	R364	1-247-881-00	CARBON 120K 5%	1/6W
R306	1-247-903-00	CARBON 1M 5%	1/6W	R365	1-247-859-00	CARBON 15K 5%	1/6W
R307	1-247-815-00	CARBON 220 5%	1/6W	R366	1-247-837-00	CARBON 1.8K 5%	1/6W
R308	1-247-845-00	CARBON 3.9K 5%	1/6W	R367	1-249-421-11	CARBON 2.2K 5%	1/6W
R309	1-247-843-00	CARBON 3.3K 5%	1/6W	R368	1-247-863-00	CARBON 22K 5%	1/6W
R310	1-247-843-00	CARBON 3.3K 5%	1/6W	R369	1-247-883-00	CARBON 150K 5%	1/6W
R311	1-247-831-00	CARBON 1K 5%	1/6W	R370	1-247-873-00	CARBON 56K 5%	1/6W
R312	1-247-863-00	CARBON 22K 5%	1/6W	R371	1-247-903-00	CARBON 1M 5%	1/6W
R313	1-247-879-00	CARBON 100K 5%	1/6W	R372	1-247-841-00	CARBON 2.7K 5%	1/6W
R314	1-247-879-00	CARBON 100K 5%	1/6W	R373	1-247-895-00	CARBON 470K 5%	1/6W
R315	1-247-855-00	CARBON 10K 5%	1/6W	R374	1-247-889-00	CARBON 270K 5%	1/6W
R316	1-247-887-00	CARBON 47K 5%	1/6W	R375	1-247-903-00	CARBON 1M 5%	1/6W
R317	1-247-844-00	CARBON 3.6K 5%	1/6W	R376	1-247-871-00	CARBON 47K 5%	1/6W
R318	1-247-867-00	CARBON 33K 5%	1/6W	R377	1-247-871-00	CARBON 47K 5%	1/6W
R319	1-247-859-00	CARBON 15K 5%	1/6W	R378	1-247-871-00	CARBON 47K 5%	1/6W
R320	1-247-843-00	CARBON 3.3K 5%	1/6W	R379	1-247-845-00	CARBON 3.9K 5%	1/6W
R321	1-247-831-00	CARBON 1K 5%	1/6W	R380	1-247-849-00	CARBON 5.6K 5%	1/6W
R322	1-247-871-00	CARBON 47K 5%	1/6W	R381	1-247-867-00	CARBON 33K 5%	1/6W
R323	1-249-421-11	CARBON 2.2K 5%	1/6W	R382	1-247-849-00	CARBON 5.6K 5%	1/6W
R324	1-247-859-00	CARBON 15K 5%	1/6W	R383	1-247-859-00	CARBON 15K 5%	1/6W
R325	1-247-879-00	CARBON 100K 5%	1/6W	R384	1-247-867-00	CARBON 33K 5%	1/6W
R326	1-247-879-00	CARBON 100K 5%	1/6W	R385	1-247-891-00	CARBON 330K 5%	1/6W
R327	1-247-843-00	CARBON 3.3K 5%	1/6W	R386	1-247-845-00	CARBON 3.9K 5%	1/6W
R328	1-247-855-00	CARBON 10K 5%	1/6W	R387	1-247-855-00	CARBON 10K 5%	1/6W
R329	1-247-855-00	CARBON 10K 5%	1/6W	R388	1-247-819-00	CARBON 330 5%	1/6W
R330	1-247-855-00	CARBON 10K 5%	1/6W	R389	1-247-832-00	CARBON 1.1K 5%	1/6W
R332	1-247-855-00	CARBON 10K 5%	1/6W	R390	1-247-871-00	CARBON 47K 5%	1/6W
R334	1-247-867-00	CARBON 33K 5%	1/6W	R391	1-247-871-00	CARBON 47K 5%	1/6W
				R392	1-247-859-00	CARBON 15K 5%	1/6W

The components identified by shading and mark **Δ** are critical for safety. Replace only with part number specified.

When indicating parts by reference number, please include the board name.

SA-9

Ref.No	Part No.	Description	Remark	Ref.No	Part No.	Description	Remark
R393	1-247-848-00	CARBON	5.1K 5% 1/6W	R503	1-247-859-00	CARBON	15K 5% 1/6W
R394	1-247-831-00	CARBON	1K 5% 1/6W	R504	1-247-829-00	CARBON	820 5% 1/6W
R395	1-247-855-00	CARBON	10K 5% 1/6W	R505	1-247-879-00	CARBON	100K 5% 1/6W
R396	1-247-871-00	CARBON	47K 5% 1/6W	R506	1-247-859-00	CARBON	15K 5% 1/6W
R397 Δ	1-212-366-00	METAL OXIDE	3.3 5% 1W F	R507	1-247-829-00	CARBON	820 5% 1/6W
R398	1-247-863-00	CARBON	22K 5% 1/6W	R508	1-247-831-00	CARBON	1K 5% 1/6W
R399	1-247-867-00	CARBON	33K 5% 1/6W	R509	1-247-859-00	CARBON	15K 5% 1/6W
R400	1-247-831-00	CARBON	1K 5% 1/6W	R511	1-247-851-00	CARBON	6.8K 5% 1/6W
R401	1-247-863-00	CARBON	22K 5% 1/6W	R512	1-247-833-00	CARBON	1.2K 5% 1/6W
R402	1-247-871-00	CARBON	47K 5% 1/6W	R513	1-247-843-00	CARBON	3.3K 5% 1/6W
R405	1-247-871-00	CARBON	47K 5% 1/6W	R515	1-247-903-00	CARBON	1M 5% 1/6W
R407	1-247-831-00	CARBON	1K 5% 1/6W	R516	1-247-883-00	CARBON	150K 5% 1/6W
R408	1-247-823-00	CARBON	470 5% 1/6W	R517	1-247-867-00	CARBON	33K 5% 1/6W
R411 Δ	1-212-366-00	METAL OXIDE	3.3 5% 1W F	R519	1-247-875-00	CARBON	68K 5% 1/6W
R412 Δ	1-247-859-00	FUSIBLE	4.7 5% 1/6W F	R520	1-247-825-00	CARBON	560 5% 1/6W
R414 Δ	1-212-366-00	METAL OXIDE	1 5% 1W F	R522	1-247-875-00	CARBON	68K 5% 1/6W
R420	1-247-855-00	CARBON	10K 5% 1/6W	R523	1-247-855-00	CARBON	10K 5% 1/6W
R421	1-247-887-00	CARBON	220K 5% 1/6W	R524	1-247-855-00	CARBON	10K 5% 1/6W
R422	1-215-463-00	METAL	56K 1% 1/6W	R526	1-247-847-00	CARBON	4.7K 5% 1/6W
R423	1-247-831-00	CARBON	1K 5% 1/6W	R527	1-247-867-00	CARBON	33K 5% 1/6W
R424	1-247-855-00	CARBON	10K 5% 1/6W	R528	1-247-859-00	CARBON	15K 5% 1/6W
R426	1-247-829-00	CARBON	820 5% 1/6W	R529	1-247-077-00	CARBON	3.3 5% 1/6W
R427	1-247-855-00	CARBON	10K 5% 1/6W	R530 Δ	1-212-966-00	FUSIBLE	22 5% 1/2W F
R428	1-247-835-00	CARBON	1.5K 5% 1/6W	R531	1-247-855-00	CARBON	10K 5% 1/6W
R429	1-247-881-00	CARBON	120K 5% 1/6W	R532	1-247-855-00	CARBON	10K 5% 1/6W
R430	1-247-863-00	CARBON	22K 5% 1/6W	R533	1-247-871-00	CARBON	47K 5% 1/6W
R431	1-247-863-00	CARBON	22K 5% 1/6W	R534	1-247-871-00	CARBON	47K 5% 1/6W
R432	1-247-831-00	CARBON	1K 5% 1/6W	R535	1-247-847-00	CARBON	4.7K 5% 1/6W
R433	1-247-835-00	CARBON	1.5K 5% 1/6W	R536	1-247-847-00	CARBON	4.7K 5% 1/6W
R434	1-247-903-00	CARBON	1M 5% 1/6W	R537	1-247-783-00	CARBON	10 5% 1/6W
R435	1-247-829-00	CARBON	820 5% 1/6W	R538	1-247-863-00	CARBON	22K 5% 1/6W
R436	1-247-879-00	CARBON	100K 5% 1/6W	R539	1-247-863-00	CARBON	22K 5% 1/6W
R437	1-247-835-00	CARBON	1.5K 5% 1/6W	R540	1-247-855-00	CARBON	10K 5% 1/6W
R438	1-247-885-00	CARBON	180K 5% 1/6W	R541	1-247-879-00	CARBON	100K 5% 1/6W
R440	1-247-859-00	CARBON	15K 5% 1/6W	R601	1-247-864-00	CARBON	24K 5% 1/6W
R441	1-247-831-00	CARBON	1K 5% 1/6W	R602	1-247-851-00	CARBON	6.8K 5% 1/6W
R442	1-247-855-00	CARBON	10K 5% 1/6W	R603	1-247-855-00	CARBON	10K 5% 1/6W
R443	1-247-803-00	CARBON	68 5% 1/6W	R604	1-247-861-00	CARBON	18K 5% 1/6W
R446	1-247-855-00	CARBON	10K 5% 1/6W	R605	1-247-873-00	CARBON	56K 5% 1/6W
R447	1-247-879-00	CARBON	100K 5% 1/6W	R606	1-247-861-00	CARBON	18K 5% 1/6W
R448	1-247-863-00	CARBON	22K 5% 1/6W	R607	1-247-862-00	CARBON	20K 5% 1/6W
R449	1-247-863-00	CARBON	22K 5% 1/6W	R608	1-247-807-00	CARBON	100 5% 1/6W
R450	1-249-421-11	CARBON	2.2K 5% 1/6W	R609	1-247-875-00	CARBON	68K 5% 1/6W
R451	1-247-851-00	CARBON	6.8K 5% 1/6W	R610	1-247-855-00	CARBON	10K 5% 1/6W
R452	1-247-843-00	CARBON	3.3K 5% 1/6W	R611	1-247-855-00	CARBON	10K 5% 1/6W
R453	1-247-865-00	CARBON	27K 5% 1/6W	R612	1-247-843-00	CARBON	3.3K 5% 1/6W
R454	1-247-855-00	CARBON	10K 5% 1/6W	R613	1-247-843-00	CARBON	3.3K 5% 1/6W
R455	1-247-855-00	CARBON	10K 5% 1/6W	R614	1-247-845-00	CARBON	3.9K 5% 1/6W
R456	1-247-853-00	CARBON	8.2K 5% 1/6W	R615	1-247-855-00	CARBON	10K 5% 1/6W
R458	1-247-855-00	CARBON	10K 5% 1/6W	R616	1-247-845-00	CARBON	3.9K 5% 1/6W
R459	1-247-841-00	CARBON	2.7K 5% 1/6W	R617	1-247-855-00	CARBON	10K 5% 1/6W
R501	1-247-827-00	CARBON	680 5% 1/6W	R618	1-247-843-00	CARBON	3.3K 5% 1/6W
R502	1-247-885-00	CARBON	180K 5% 1/6W	R619	1-247-855-00	CARBON	10K 5% 1/6W

The components identified by shading and mark Δ are critical for safety. Replace only with part number specified.

When indicating parts by reference number, please include the board name.

FU-37**TU-73**

Ref.No	Part No.	Description	Remark	Ref.No	Part No.	Description	Remark
<u>VARIABLE RESISTOR</u>							
RV001	1-230-856-11	RES, VAR, CARBON 50K		C041	1-130-014-00	FILM 470PF	5% 50V
RV002	1-230-431-11	RES, VAR, CARBON 100K		C042	1-161-059-00	CERAMIC 0.047MF	10% 25V

*A-6721-252-A	TU-73 BOARD, COMPLETE			C043	1-161-055-00	CERAMIC 0.022MF	10% 25V

A-1-463-577-31	TUNER SET (BT-883AD)			C044	1-136-244-11	FILM 0.1MF	2% 50V
*3-662-227-00	HOLDER (R-3), LED			C045	1-136-244-11	FILM 0.1MF	2% 50V
*3-674-390-00	HOLDER (B), LED			C046	1-123-308-00	ELECT 220MF	20% 10V
<u>CAPACITOR</u>							
C001	1-102-527-00	CERAMIC 82PF	5% 50V	C047	1-136-243-11	FILM 0.047MF	2% 50V
C002	1-102-529-00	CERAMIC 100PF	5% 50V	C048	1-136-243-11	FILM 0.047MF	2% 50V
C003	1-102-949-00	CERAMIC 12PF	5% 50V	C049	1-102-125-00	CERAMIC 0.0047MF	10% 50V
C004	1-102-523-00	CERAMIC 56PF	5% 50V	C050	1-102-504-00	CERAMIC 4PF	0.25PF 50V
C005	1-102-125-00	CERAMIC 0.0047MF	10% 50V	C051	1-102-978-00	CERAMIC 220PF	5% 50V
C006	1-102-125-00	CERAMIC 0.0047MF	10% 50V	C052	1-102-125-00	CERAMIC 0.0047MF	10% 50V
C007	1-102-125-00	CERAMIC 0.0047MF	10% 50V	C054	1-102-529-00	CERAMIC 100PF	5% 50V
C008	1-102-125-00	CERAMIC 0.0047MF	10% 50V	C101	1-102-963-00	CERAMIC 33PF	5% 50V
C009	1-102-125-00	CERAMIC 0.0047MF	10% 50V	C102	1-102-963-00	CERAMIC 33PF	5% 50V
C010	1-123-369-00	ELECT 4.7MF	20% 25V	C103	1-123-381-00	ELECT 2.2MF	20% 50V
C011	1-102-125-00	CERAMIC 0.0047MF	10% 50V	C104	1-161-059-00	CERAMIC 0.047MF	10% 25V
C012	1-102-125-00	CERAMIC 0.0047MF	10% 50V	C105	1-102-973-00	CERAMIC 100PF	5% 50V
C013	1-161-059-00	CERAMIC 0.047MF	10% 25V	C106	1-130-495-00	MYLAR 0.1MF	5% 50V
C014	1-123-379-00	ELECT 0.47MF	20% 50V	C107	1-130-493-00	MYLAR 0.068MF	5% 50V
C015	1-123-333-00	ELECT 100MF	20% 16V	C108	1-130-493-00	MYLAR 0.068MF	5% 50V
C016	1-101-004-00	CERAMIC 0.01MF	50V	C109	1-102-963-00	CERAMIC 33PF	5% 50V
C017	1-102-504-00	CERAMIC 4PF	0.25PF 50V	C110	1-123-356-00	ELECT 10MF	20% 16V
C018	1-102-963-00	CERAMIC 33PF	5% 50V	C111	1-101-004-00	CERAMIC 0.01MF	50V
C019	1-102-529-00	CERAMIC 100PF	5% 50V	C112	1-123-356-00	ELECT 10MF	20% 16V
C020	1-102-125-00	CERAMIC 0.0047MF	10% 50V	C201	1-123-333-00	ELECT 100MF	20% 16V
C021	1-123-286-00	ELECT 0.33MF	20% 50V	C202	1-123-333-00	ELECT 100MF	20% 16V
C022	1-101-004-00	CERAMIC 0.01MF	50V	C203	1-123-332-00	ELECT 47MF	20% 16V
C023	1-101-361-00	CERAMIC 150PF	5% 50V	C204	1-101-004-00	CERAMIC 0.01MF	50V
C024	1-123-380-00	ELECT 1MF	20% 50V	C206	1-123-380-00	ELECT 1MF	20% 50V
C025	1-130-014-00	FILM 470PF	5% 50V	C207	1-123-356-00	ELECT 10MF	20% 50V
C026	1-161-055-00	CERAMIC 0.022MF	10% 25V	C208	1-101-004-00	CERAMIC 0.01MF	50V
C027	1-161-055-00	CERAMIC 0.022MF	10% 25V	C209	1-101-004-00	CERAMIC 0.01MF	50V
C028	1-161-055-00	CERAMIC 0.022MF	10% 25V	C311	1-161-057-00	CERAMIC 0.033MF	10% 25V
C029	1-130-478-00	MYLAR 0.0039MF	5% 50V	C312	1-161-047-00	CERAMIC 0.0047MF	20% 25V
C030	1-130-478-00	MYLAR 0.0039MF	5% 50V	C313	1-102-116-00	CERAMIC 680PF	10% 50V
C031	1-130-478-00	MYLAR 0.0039MF	5% 50V	C315	1-123-356-00	ELECT 10MF	20% 16V
C032	1-123-380-00	ELECT 1MF	20% 50V	C316	1-161-025-00	CERAMIC 0.1MF	10% 25V
C033	1-123-330-00	ELECT 22MF	20% 16V	C501	1-102-125-00	CERAMIC 0.0047MF	10% 50V
C034	1-123-380-00	ELECT 1MF	20% 50V	C503	1-102-525-00	CERAMIC 68PF	5% 50V
C035	1-102-963-00	CERAMIC 33PF	5% 50V	C505	1-123-333-00	ELECT 100MF	20% 16V
C036	1-123-332-00	ELECT 47MF	20% 16V	C506	1-123-333-00	ELECT 100MF	20% 16V
C037	1-123-356-00	ELECT 10MF	20% 16V	C507	1-102-125-00	CERAMIC 0.0047MF	10% 50V
C038	1-123-356-00	ELECT 10MF	20% 16V	<u>FILTER</u>			
C039	1-161-059-00	CERAMIC 0.047MF	10% 25V	CF001	1-527-840-00	FILTER, CERAMIC	
C040	1-130-024-00	FILM 0.0033MF	5% 50V	CF002	1-527-839-00	FILTER, CERAMIC	
<u>CONNECTOR</u>							
CN001	*1-560-892-00	PIN, CONNECTOR 4P		CF003	1-404-134-00	TRAP, CERAMIC (5.5MHZ)	
CN002	*1-560-894-00	PIN, CONNECTOR 6P					
CN003	*1-560-892-00	PIN, CONNECTOR 4P					

The components identified by shading and mark **A** are critical for safety. Replace only with part number specified.

When indicating parts by reference number, please include the board name.

Ref.No	Part No.	Description	Remark
Q302	8-729-204-83	TRANSISTOR 2SA1048-GR	
Q303	8-729-245-83	TRANSISTOR 2SC2458	
Q305	8-729-245-83	TRANSISTOR 2SC2458	
Q306	8-729-204-83	TRANSISTOR 2SA1048-GR	
<u>RESISTOR</u>			
R301	1-247-867-00	CARBON 33K 5% 1/6W	
R302	1-247-867-00	CARBON 33K 5% 1/6W	
R303	1-247-867-00	CARBON 33K 5% 1/6W	
R304	1-247-855-00	CARBON 10K 5% 1/6W	
R305	1-247-896-00	CARBON 510K 5% 1/6W	
R306	1-247-867-00	CARBON 33K 5% 1/6W	
R307	1-247-867-00	CARBON 33K 5% 1/6W	
R308	1-215-436-00	METAL 4.3K 1% 1/6W	
R309	1-215-445-00	METAL 10K 1% 1/6W	
R311	1-247-879-00	CARBON 100K 5% 1/6W	
R313	1-247-879-00	CARBON 100K 5% 1/6W	
R314	1-215-445-00	METAL 10K 1% 1/6W	
R315	1-215-445-00	METAL 10K 1% 1/6W	
R316	1-215-445-00	METAL 10K 1% 1/6W	
R317	1-215-452-00	METAL 20K 1% 1/6W	
R318	1-215-452-00	METAL 20K 1% 1/6W	
R319	1-215-452-00	METAL 20K 1% 1/6W	
R320	1-215-452-00	METAL 20K 1% 1/6W	
R321	1-215-452-00	METAL 20K 1% 1/6W	
R322	1-247-883-00	CARBON 150K 5% 1/6W	
R333	1-247-883-00	CARBON 150K 5% 1/6W	
R334	1-247-883-00	CARBON 150K 5% 1/6W	
R335	1-247-883-00	CARBON 150K 5% 1/6W	
R336	1-247-883-00	CARBON 150K 5% 1/6W	
R337	1-247-883-00	CARBON 150K 5% 1/6W	
R338	1-247-883-00	CARBON 150K 5% 1/6W	
R339	1-247-883-00	CARBON 150K 5% 1/6W	
R340	1-247-883-00	CARBON 150K 5% 1/6W	
R341	1-247-883-00	CARBON 150K 5% 1/6W	
R342	1-247-883-00	CARBON 150K 5% 1/6W	
R347	1-247-771-00	CARBON 3.3 5% 1/6W	
R348	1-247-879-00	CARBON 100K 5% 1/6W	
R349	1-247-879-00	CARBON 100K 5% 1/6W	
R350	1-247-879-00	CARBON 100K 5% 1/6W	
R351	1-247-879-00	CARBON 100K 5% 1/6W	
R352	1-247-855-00	CARBON 10K 5% 1/6W	
R353	1-247-871-00	CARBON 47K 5% 1/6W	
R354	1-247-871-00	CARBON 47K 5% 1/6W	
R501	1-247-805-00	CARBON 82 5% 1/6W	
R502	1-247-805-00	CARBON 82 5% 1/6W	
R503	1-247-829-00	CARBON 820 5% 1/6W	
R504	1-247-879-00	CARBON 100K 5% 1/6W	
R505	1-247-843-00	CARBON 3.3K 5% 1/6W	
R506	1-247-843-00	CARBON 3.3K 5% 1/6W	
<u>VARIABLE RESISTOR</u>			
RV501	1-226-709-00	RES, ADJ, SOLID 4.7K	

Ref.No	Part No.	Description	Remark
RV502	1-226-709-00	RES, ADJ, SOLID 4.7K	
<u>SWITCH</u>			
S001	0-366-843-00	SWITCH, KEY BOARD	
S002	0-366-843-00	SWITCH, KEY BOARD	
S003	0-366-843-00	SWITCH, KEY BOARD	
S004	0-366-843-00	SWITCH, KEY BOARD	
S005	0-366-843-00	SWITCH, KEY BOARD	
S006	0-366-843-00	SWITCH, KEY BOARD	
S501	1-554-419-00	SWITCH, PUSH (1 KEY)	
S502	1-554-174-00	SWITCH, KEY BOARD	
S503	1-554-174-00	SWITCH, KEY BOARD	
S504	1-554-174-00	SWITCH, KEY BOARD	
S505	1-554-174-00	SWITCH, KEY BOARD	
S506	1-554-174-00	SWITCH, KEY BOARD	
S507	1-554-174-00	SWITCH, KEY BOARD	
<u>VARIABLE RESISTOR</u>			
VR501	1-230-857-11	RES, VAR, SLIDE 20K/20K	
<u>CRYSTAL</u>			
X301	1-527-532-31	OSCILLATOR, CERAMIC	

*1-616-795-11	RS-12 BOARD	*****	
*3-696-114-02	SPACER, LED, BETA-HIFI		
*4-333-624-00	FILM (N), SPECIAL		
<u>CAPACITOR</u>			
C001	1-123-617-00	ELECT 10MF 20% 16V	
C002	1-106-184-00	MYLAR 0.0033MF 5% 50V	
C003	1-123-617-00	ELECT 10MF 20% 16V	
C004	1-123-617-00	ELECT 10MF 20% 16V	
C005	1-161-057-00	CERAMIC 0.033MF 10% 25V	
C006	1-123-821-00	ELECT 47MF 20% 16V	
C007	1-161-047-00	CERAMIC 0.0047MF 10% 25V	
<u>DIODE</u>			
D001	8-719-110-32	DIODE PH302B	
D002	8-719-815-55	DIODE 1S1555	
D003	8-719-915-49	DIODE SLF206B	
<u>IC</u>			
IC001	8-759-102-84	IC UPC1373HA	
<u>COIL</u>			
L001	1-404-310-00	COIL 4.7MMH	

When indicating parts by reference number, please include the board name.

RS-12**TM-80**

Ref.No	Part No.	Description	Remark	Ref.No	Part No.	Description	Remark
<u>RESISTOR</u>				<u>TRANSISTOR</u>			
R001	1-247-831-00	CARBON	1K 5% 1/6W	Q001	8-729-245-83	TRANSISTOR 2SC2458	
R002	1-247-791-00	CARBON	22 5% 1/6W	Q002	8-729-245-83	TRANSISTOR 2SC2458	
R003	1-247-887-00	CARBON	220K 5% 1/6W	Q003	8-729-204-83	TRANSISTOR 2SA1048-GR	
R004	1-247-823-00	CARBON	470 5% 1/6W	Q004	8-729-900-89	TRANSISTOR DTC144ES	
*****				Q005	8-729-245-83	TRANSISTOR 2SC2458	
*A-6725-487-A TM-80 BOARD, COMPLETE				Q006	8-729-245-83	TRANSISTOR 2SC2458	
*****				Q007	8-729-245-83	TRANSISTOR 2SC2458	
<u>CAPACITOR</u>				<u>RESISTOR</u>			
C001	1-123-382-00	ELECT	3.3MF 20% 50V	R001	1-247-867-00	CARBON	33K 5% 1/6W
C002	1-161-055-00	CERAMIC	0.022MF 10% 25V	R002	1-247-874-00	CARBON	62K 5% 1/6W
C003	1-123-298-00	ELECT	470MF 20% 6.3V	R003	1-247-872-00	CARBON	51K 5% 1/6W
C005	1-102-525-00	CERAMIC	68PF 5% 50V	R004	1-247-873-00	CARBON	56K 5% 1/6W
C006	1-102-852-00	CERAMIC	47PF 5% 50V	R005	1-247-869-00	CARBON	39K 5% 1/6W
C008	1-123-357-00	ELECT	22MF 20% 50V	R006	1-247-885-00	CARBON	180K 5% 1/6W
C009	1-161-055-00	CERAMIC	0.022MF 10% 25V	R007	1-247-879-00	CARBON	100K 5% 1/6W
C010	1-161-055-00	CERAMIC	0.022MF 10% 25V	R008	1-247-867-00	CARBON	33K 5% 1/6W
C011	1-161-773-91	CERAMIC	0.1MF 20% 25V	R009	1-247-879-00	CARBON	100K 5% 1/6W
C012	1-123-369-00	ELECT	4.7MF 20% 50V	R010	1-247-871-00	CARBON	47K 5% 1/6W
C013	1-123-380-00	ELECT	1MF 20% 50V	R026	1-247-883-00	CARBON	150K 5% 1/6W
C014	1-123-356-00	ELECT	10MF 20% 16V	R027	1-247-883-00	CARBON	150K 5% 1/6W
C015	1-123-308-00	ELECT	220MF 20% 10V	R028	1-247-883-00	CARBON	150K 5% 1/6W
C016	1-161-013-00	CERAMIC	0.01MF 10% 25V	R029	1-247-883-00	CARBON	150K 5% 1/6W
C303	1-123-369-00	ELECT	4.7MF 20% 25V	R030	1-247-883-00	CARBON	150K 5% 1/6W
C304	1-123-369-00	ELECT	4.7MF 20% 25V	R031	1-247-883-00	CARBON	150K 5% 1/6W
C305	1-123-381-00	ELECT	2.2MF 20% 50V	R032	1-247-883-00	CARBON	150K 5% 1/6W
C306	1-123-381-00	ELECT	2.2MF 20% 50V	R033	1-247-883-00	CARBON	150K 5% 1/6W
<u>CONNECTOR</u>				R034	1-247-883-00	CARBON	150K 5% 1/6W
CN002	*1-560-897-00	PIN, CONNECTOR	9P	R035	1-247-883-00	CARBON	150K 5% 1/6W
CN302	*1-564-005-00	PIN, CONNECTOR	6P	R036	1-247-883-00	CARBON	150K 5% 1/6W
<u>TRIMMER</u>				R037	1-247-883-00	CARBON	150K 5% 1/6W
CT001	1-141-022-21	CAP, TRIMMER, CERAMIC		R038	1-247-883-00	CARBON	150K 5% 1/6W
<u>DIODE</u>				R039	1-247-883-00	CARBON	150K 5% 1/6W
D001	8-719-812-41	DIODE TLR124		R039	1-247-883-00	CARBON	150K 5% 1/6W
D002	8-719-200-02	DIODE 10E-2		R040	1-247-883-00	CARBON	150K 5% 1/6W
D003	8-719-200-02	DIODE 10E-2		R041	1-247-883-00	CARBON	150K 5% 1/6W
D004	8-719-911-19	DIODE 1SS119		R042	1-247-883-00	CARBON	150K 5% 1/6W
D005	8-719-182-07	DIODE RD8.2E-B		R043	1-247-883-00	CARBON	150K 5% 1/6W
D006	8-719-911-19	DIODE 1SS119		R044	1-247-883-00	CARBON	150K 5% 1/6W
D007	8-719-911-19	DIODE 1SS119		R046	1-247-879-00	CARBON	100K 5% 1/6W
<u>IC</u>				R047	1-247-847-00	CARBON	4.7K 5% 1/6W
IC001	8-759-911-09	IC MB88525B-112M		R048	1-247-863-00	CARBON	22K 5% 1/6W
IC002	8-759-913-41	IC S-8054ALB		R049	1-247-843-00	CARBON	3.3K 5% 1/6W
IC304	8-759-961-38	IC BA6138		R050	1-247-807-00	CARBON	100 5% 1/6W
				R051	1-247-855-00	CARBON	10K 5% 1/6W
				R052	1-247-855-00	CARBON	10K 5% 1/6W
				R053	1-247-855-00	CARBON	10K 5% 1/6W
				R054	1-247-855-00	CARBON	10K 5% 1/6W
				R310	1-247-891-00	CARBON	330K 5% 1/6W
				R326	1-247-837-00	CARBON	1.8K 5% 1/6W
				R327	1-247-837-00	CARBON	1.8K 5% 1/6W
				R328	1-247-891-00	CARBON	330K 5% 1/6W

When indicating parts by reference number, please include the board name.

TM-80

HP-14

LM-8

PS-70

Ref.No	Part No.	Description	Remark	Ref.No	Part No.	Description	Remark
<u>VARIABLE RESISTOR</u>							
RV001	1-228-995-00	RES, ADJ, CARBON 22K		*A-6729-228-A	PS-70 BOARD, COMPLETE (EC MODEL)	*****	
RV301	1-228-994-00	RES, ADJ, CARBON 10K		*A-6729-231-A	PS-70 BOARD, COMPLETE (AS MODEL)	*****	
RV302	1-228-994-00	RES, ADJ, CARBON 10K		1-533-162-00	HOLDER, FUSE		
<u>THERMISTOR</u>				A-2-430-344-01 COVER (CC-1017), INSULATING (EC MODEL)			
THP001	1-806-892-11	THERMISTOR (POSITIVE)		<u>CAPACITOR</u>			
<u>CRYSTAL</u>							
X001	1-567-098-00	VIBRATOR, CRYSTAL		C001	1-123-332-00	ELECT 47MF	20% 25V
*****				C002	1-123-381-00	ELECT 2.2MF	20% 50V
	*1-616-794-11	HP-14 BOARD		C005	1-123-333-00	ELECT 100MF	20% 16V
*****				C006	1-123-332-00	ELECT 47MF	20% 16V
<u>CAPACITOR</u>				C007	1-123-333-00	ELECT 100MF	20% 16V
C004	1-123-822-00	ELECT 47MF	20% 10V	C008	1-123-332-00	ELECT 47MF	20% 16V
C008	1-161-043-00	CERAMIC 0.0022MF	10% 25V	C009	1-123-332-00	ELECT 47MF	20% 16V
<u>DIODE</u>				C010	1-123-318-00	ELECT 33MF	20% 10V
D003	8-719-100-40	DIODE RD6.8EB1		C011	1-123-372-00	ELECT 33MF	20% 63V
<u>JACK</u>				C012	1-123-375-00	ELECT 220MF	20% 63V
J001	1-507-796-21	JACK		C013	1-123-375-00	ELECT 220MF	20% 63V
<u>COIL</u>				C014	1-123-336-00	ELECT 470MF	20% 25V
L001	1-408-600-00	MICRO INDUCTOR 5.6UH		C015	1-123-338-00	ELECT 2200MF	20% 25V
<u>RESISTOR</u>				C016 A 1-123-710-00 FILM 0.1MF 20% 25V			
R011	1-247-799-00	CARBON 47 5% 1/6W		C021	1-101-006-00	CERAMIC 0.047MF	50V
R012	1-247-855-00	CARBON 10K 5% 1/6W		C022	1-101-006-00	CERAMIC 0.047MF	50V
*****				C023	1-101-006-00	CERAMIC 0.047MF	50V
	1-605-071-00	LM-8 BOARD		C024 A 1-101-742-00 CERAMIC 0.0022MF 20% 40V			
*****				C025 A 1-101-742-00 CERAMIC 0.0022MF 20% 40V			
<u>CAPACITOR</u>				C026 A 1-101-742-00 CERAMIC 0.0022MF 20% 40V			
C101	1-161-057-00	CERAMIC 0.033MF	10% 50V	C027 A 1-101-742-00 CERAMIC 0.0022MF 20% 40V			
C102	1-161-057-00	CERAMIC 0.033MF	10% 50V	C029	1-123-306-00	ELECT 47MF	20% 10V
<u>COIL</u>				C030	1-123-356-00	ELECT 10MF	20% 16V
L101	1-408-120-00	MICRO INDUCTOR 18UH		<u>CONNECTOR</u>			
L102	1-408-120-00	MICRO INDUCTOR 18UH		CN001	*1-560-891-00	PIN, CONNECTOR 3P	
*****				CN002	*1-560-893-00	PIN, CONNECTOR 5P	
				CN003	*1-560-897-00	PIN, CONNECTOR 9P	
				CN004	*1-560-890-00	PIN, CONNECTOR 2P	
				CN005	*1-560-892-00	PIN, CONNECTOR 4P	
				CN006	*1-560-894-00	PIN, CONNECTOR 6P	
<u>DIODE</u>				<u>DIODE</u>			
				D001	8-719-200-02	DIODE 10E-2	
				D002	8-719-200-02	DIODE 10E-2	
				D003	8-719-200-02	DIODE 10E-2	
				D004	8-719-200-02	DIODE 10E-2	
				D010	8-719-200-02	DIODE 10E-2	
				D011	8-719-100-60	DIODE RD11EB1	
				D012	8-719-100-97	DIODE RD30EB1	
<u>FUSE</u>				<u>FUSE</u>			
				F001 A1-532-203-11 FUSE, TIME-LAG T2.0A			
				F002 A1-532-350-11 FUSE, TIME-LAG T4.0A			

The components identified by shading and mark **A** are critical for safety. Replace only with part number specified.

When indicating parts by reference number, please include the board name.

PS-70

PS-71

PS-78

Ref.No	Part No.	Description	Remark
<u>IC LINK</u>			
<u>TRANSISTOR</u>			
Q001	8-729-113-32	TRANSISTOR 2SB733-3	
Q003	8-729-178-55	TRANSISTOR 2SC2785-K	
Q004	8-729-382-62	TRANSISTOR 2SC1826-G	
Q005	8-729-900-89	TRANSISTOR DTC144ES	
Q006	8-729-103-43	TRANSISTOR 2SB734-3	
Q007	8-729-900-65	TRANSISTOR DTA144ES	
Q008	8-729-178-55	TRANSISTOR 2SC2785-K	
Q009	8-729-178-55	TRANSISTOR 2SC2785-K	
<u>RESISTOR</u>			
R001	1-247-821-00	CARBON 390 5% 1/6W	
R002	1-247-821-00	CARBON 390 5% 1/6W	
R003	1-247-260-00	CARBON 6.8K 5% 1/2W	
R004	1-247-847-00	CARBON 4.7K 5% 1/6W	
R005	1-247-849-00	CARBON 5.6K 5% 1/6W	
R009	1-247-831-00	CARBON 1K 5% 1/6W	
R010	1-247-823-00	CARBON 470 5% 1/6W	
R012	1-247-855-00	CARBON 10K 5% 1/6W	
R015	1-247-877-00	CARBON 82K 5% 1/6W	
R016	1-247-855-00	CARBON 10K 5% 1/6W	
R017	1-247-871-00	CARBON 47K 5% 1/6W	
R018	1-244-877-51	CARBON 1.5K 5% 1/2W	

*1-616-741-11	PS-71 BOARD	*****	
1-533-162-00	HOLDER, FUSE		
<u>CAPACITOR</u>			
C003	1-125-298-00	ELECT(BLOCK) 10000MF 20% 25V	
C004	1-161-024-00	CERAMIC 0.082MF 10% 25V	
<u>DIODE</u>			
D005	8-719-907-48	DIODE ERC01-02FL15	
D006	8-719-907-48	DIODE ERC01-02FL15	
D007	8-719-907-48	DIODE ERC01-02FL15	
D008	8-719-907-48	DIODE ERC01-02FL15	
D009	8-719-100-97	DIODE RD30EB1	

The components identified by shading and mark Δ are critical for safety. Replace only with part number specified.

When indicating parts by reference number, please include the board name.

Ref.No	Part No.	Description	Remark
*1-616-742-11	PS-78 BOARD	*****	
<u>DIODE</u>			
<u>IC</u>			
IC001	8-749-954-43	IC STK5443	
<u>IC LINK</u>			

<u>MISCELLANEOUS</u>			

A-6761-103-A	ACE ASSY		

8-825-508-10	HEAD, FE (FULL ERACE HEAD)		
L901	1-464-503-21	SENSOR, S COIL (SUPPLY SENSOR) (L901)	
L902	1-464-491-21	SENSOR, T COIL (TAKE-UP SENSOR) (L902)	
M902	8-838-071-01	MOTOR, DC (BHF-1909C) (CAPSTAN MOTOR)	
M903	*A-4910-049-A	R STATOR(REEL MOTOR)BOARD, COMPLETE(M903)	
M904	X-3679-268-1	MOTOR ASSY, L (LOADING/THREADING)	

S901	1-554-839-11	SWITCH, LEAF (2 GANG) (REC PROOF, CASSETTE DOWN)	
S903	1-554-840-11	SWITCH, LEAF (THREADING END)	
S904	1-554-840-11	SWITCH, LEAF (CASSETTE ON)	

<u>ACCESSORIES AND PACKING MATERIALS</u>			

<u>Part No. Description Remark</u>			
1-556-893-00	CORD ASSY, COAXIAL		
*3-681-287-01	LID, ACCESSORY CASE		
*3-684-259-01	CASE, ACCESSORY		
3-694-484-01	DRIVER, VOLUME		

SECTION 7 ADJUSTMENTS

TABLE OF CONTENTS

<u>Section</u>	<u>Title</u>	<u>Page</u>	<u>Section</u>	<u>Title</u>	<u>Page</u>
1.	PREPARATION FOR MECHANICAL SECTION CHECK, ADJUSTMENT AND REPLACEMENT		3.	CHECK, ADJUSTMENT, AND REPLACEMENT PROCEDURES	
1-1.	Disassembly of Cabinet	159	3-1.	State of Wear of Video Heads Check	165
1-2.	Removal of the TU-73 Board	159	3-2.	Replacing Rotary Head Disk Assembly	166
1-3.	Removal of the SA-9 Board	159	3-2-1.	Removing Rotary Head Disk Assembly	166
1-4.	Removal of the RY-4 Board	159	3-2-2.	Refitting Rotary Head Disk Assembly	167
1-5.	Removal of the AF-7 Board	159	3-2-3.	Adjusting AFM Rotary Transformer Gap	168
1-6.	Removal of the Power Block	159	3-3.	Replacing Upper Drum	168
1-7.	Operation of the Unit with the FL Cassette Compartment Removed	160	3-3-1.	How to Remove Upper Drum	168
1-7-1.	How to Put the Unit into Threading Completed Mode when the FL Cassette Compartment is Removed	160	3-3-2.	How to Refit Upper Drum	169
1-7-2.	Playback Without Cassette Installed	160	3-3-3.	Centering Adjustment	169
1-7-3.	How to Put in Recording Mode Without Cassette Installed	160	3-4.	Caution when Changing Rotary Coupler Assy and Guide Arm Assy	169
1-8.	How to Load Thread, Unload and Unthread with the Power Off	161	3-5.	Video Head Dihedral Check and Adjustment	170
1-8-1.	Manual Loading and Unloading	161	3-6.	Replacement and Adjustment of the Drum Assembly	171
1-8-2.	Manual Threading and Unthreading	161	3-6-1.	Replacement of the Drum Assembly	171
1-9.	Tools and Fixtures Required for Servicing	162	3-6-2.	Adjustment of the Motor Gap when Replacing the Drum Assembly	172
2.	PERIODIC CHECK AND MAINTENANCE		3-7.	Replacement of the Capstan Motor	172
2-1.	Post-Repair Maintenance	163	3-7-1.	Removal of the Capstan Motor	172
2-1-1.	Cleaning of Rotating Head Disk Assembly	163	3-8.	Removal of the S Coil Sensor	173
2-1-2.	Cleaning of the Tape Movement System	163	3-9.	Removal of the FL Cassette Compartment Assembly	173
2-1-3.	Cleaning the Drive System	163	3-10.	Adjustment of the FL Cassette Compartment	174
2-2.	Periodic Check Items	164	3-10-1.	Adjustment of the Position of the Right Gear of the FL Cassette Compartment Assembly	174

— Continued on next page —

<u>Section</u>	<u>Title</u>	<u>Page</u>	<u>Section</u>	<u>Title</u>	<u>Page</u>
3-10-2.	Cassette ON Switch Operation Check and Adjustment	174	4.	TAPE PATH ADJUSTMENT	
3-10-3.	Checking and Adjustment of the Cassette Door Assembly	175	4-1.	Tracking Adjustment	186
3-10-4.	Mounting the FL Cassette Compartment Assembly	175	4-1-1.	Preparation	187
3-11.	Removal of the No. 2 and No. 3 Guides	176	4-1-2.	Entrance Side Adjustment	188
3-11-1.	Removal of the No. 2 Guide	176	4-1-3.	Exit Side Adjustment	190
3-11-2.	Removal of the No. 3 Guide	176	4-2.	Adjustment after Replacement of the ACE Assembly	191
3-12.	Replacement and Adjustment of the S Threading Ring	177	4-2-1.	Tracking Adjustment	191
3-12-1.	Preparation to Remove the S Threading Ring, Removal of the ACE Assembly, FE Head and Threading Motor	177	4-2-2.	Audio Head (ACE Assembly) Azimuth Adjustment	191
3-12-2.	Removal of the S Threading Ring	179	4-2-3.	CTL Head (ACE Assembly) Position Adjustment	192
3-12-3.	S Threading Ring Mounting and Position Adjustment	180	4-2-4.	Audio Head (ACE Assembly) Height Adjustment	192
3-13.	Pinch Snap-Fit Limiter Gap Check and Adjustment	181	4-3.	Adjustment after Replacement of the Capstan Motor	193
3-14.	Threading End Switch and T Coil Sensor	182	4-4.	Thin Tape Movement Check Method During Tape Path Adjustment	194
3-14-1.	Threading End Switch (TE Switch) Position Check and Adjustment	182	4-5.	BETA Hi-Fi RF Output Waveform Check	194
3-14-2.	T Coil Sensor Mounting and Operation Check	183	5.	ELECTRICAL ALIGNMENT	
3-15.	Removal and Adjustment of the Reel Block Assembly	184	5-1.	Power Supply Check (SA-9 board)	197
3-15-1.	Removal of the Reel Block Assembly	184	5-2.	System Control Check (SA-9 board)	197
3-15-2.	Adjustment of the Position of the Tension Regulating Lever	184	5-3.	Servo System Alignment	197
3-16.	Adjustment of the Forward Back Tension	185	5-3-1.	Drum Servo System Alignment	197
3-17.	Adjustment of the Forward Torque	185	5-3-2.	Capstan Servo System Alignment	198
			5-4.	PAL Video System Alignment	199
			5-4-1.	Record System Alignment	200
			5-4-2.	Playback System Alignment	202
			5-5.	SECAM Video System Alignment (EC model)	205
			5-6.	Audio System Adjustment	207
			5-6-1.	Normal Audio System Adjustment (SA-9 board)	207
			5-6-2.	BETA Hi-Fi Audio System Adjustment (AF-7, TM-79, TM-80 boards)	208
			5-7.	Tuner System Adjustment (TU-73 board)	210

1. PREPARATION FOR MECHANICAL SECTION CHECK, ADJUSTMENT AND REPLACEMENT

1-1. DISASSEMBLY OF CABINET

Refer to SECTION 2 DISASSEMBLY, 2-1 DISASSEMBLY OF CABINET.

1-2. REMOVAL OF THE TU-73 BOARD

Refer to SECTION 2 DISASSEMBLY, 2-2 REMOVAL OF THE TU-73 BOARD.

1-3. REMOVAL OF THE SA-9 BOARD

Refer to SECTION 2 DISASSEMBLY, 2-3 REMOVAL OF THE SA-9 BOARD.

1-4. REMOVAL OF THE RY-4 BOARD

Refer to SECTION 2 DISASSEMBLY, 2-4 REMOVAL OF THE RY-4 BOARD.

1-5. REMOVAL OF THE AF-7 BOARD

Refer to SECTION 2 DISASSEMBLY, 2-5 REMOVAL OF THE AF-7 BOARD.

1-6. REMOVAL OF THE POWER BLOCK

Refer to SECTION 2 DISASSEMBLY, 2-8 REMOVAL OF THE POWER BLOCK.

1-7. OPERATION OF THE UNIT WITH THE FL CASSETTE COMPARTMENT REMOVED

1-7-1. How to Put the Unit into Threading Completed Mode when the FL Cassette Compartment is Removed

- 1) Connect ordinary screwdriver to short the leaf switch (cassette-on switch).

Note:

Be careful that the ordinary screwdriver do not touch any other parts (use tape or other insulation).

- 2) Press the cassette-down switch and leave it pressed in. When the power button is turned ON threading starts.

* Refer to SECTION 2 DISASSEMBLY, 2-10 for instructions on how to remove the FL cassette compartment.

[How to EJECT in this condition]

- Press the EJECT button. When unthreading is completed and the internal gear starts to turn, turn the power OFF.

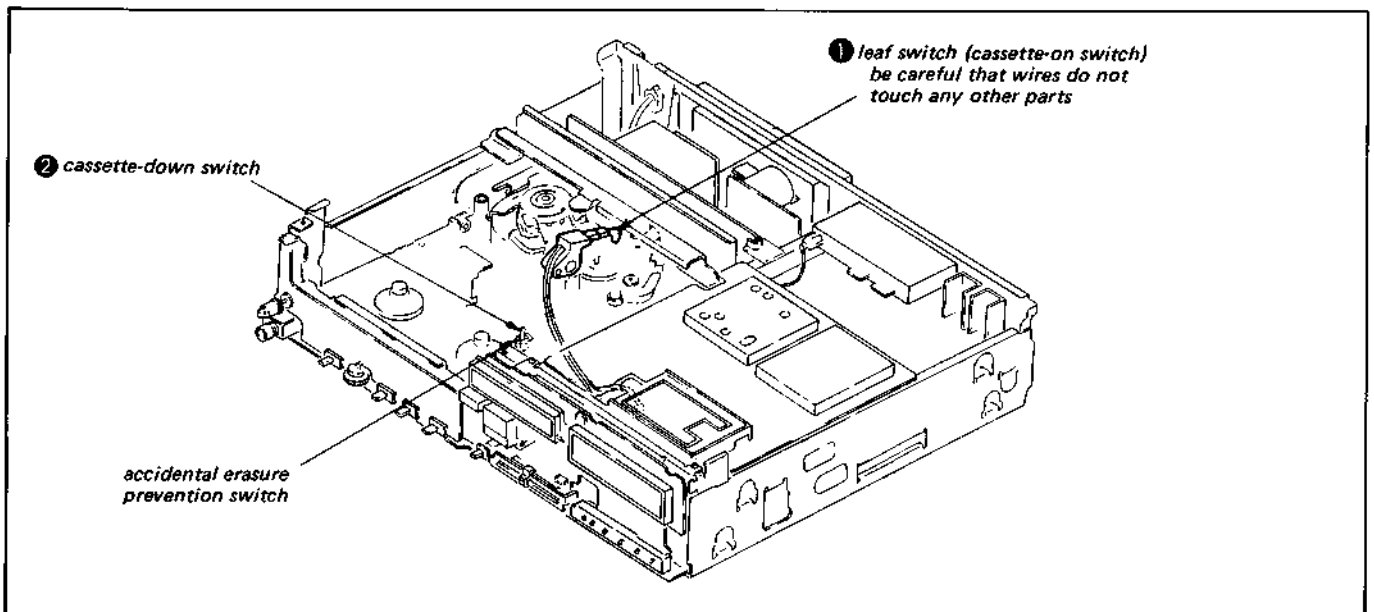


Fig. 1-1 How to thread the tape when the FL cassette compartment has been removed

1-7-2. Playback Without Cassette Installed

Complete threading by the procedure described in 1-8-1, then press the playback button.

1-7-3. How to Put in Recording Mode Without Cassette Installed

- 1) Thread by the procedure in 1-7-1, then press the accidental erasure prevention switch shown in Fig. 1-2.
- 2) With the accidental erasure prevention switch pressed down, press the recording button.

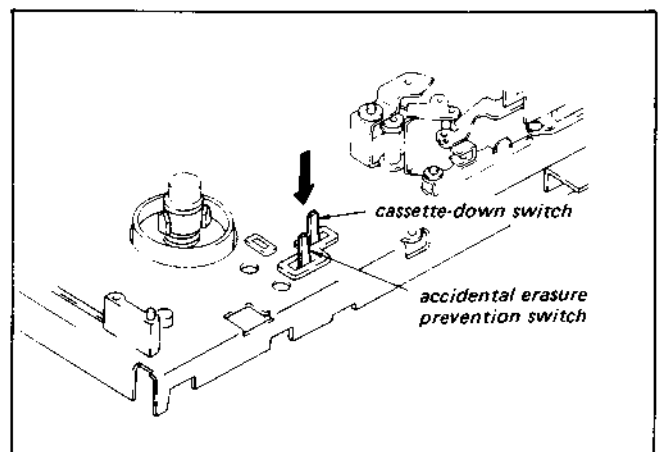


Fig. 1-2 How to put the recorder in recording mode with the FL cassette compartment removed

1-8. HOW TO LOAD, THREAD, UNLOAD AND UNTHREAD WITH THE POWER OFF

1-8-1. Manual Loading and Unloading

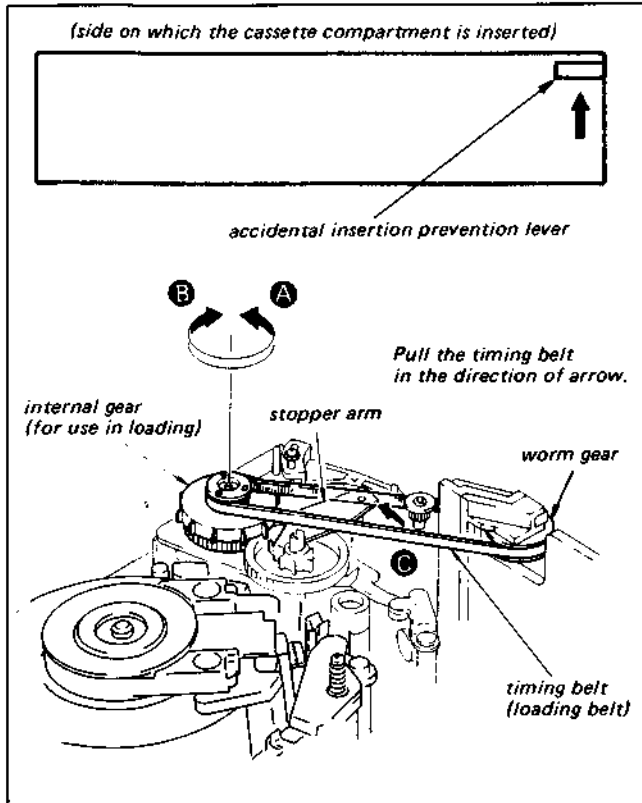


Fig. 1-3 Manual loading and unloading

- 1) Release the right accidental insertion prevention lever inside the cassette compartment, then press the stopper arm in the direction of arrow **C** and release the internal gear stop.
- 2) Turn the internal gear manually in the direction of arrow **A** until loading is completed.
- 3) To unload, turn the internal gear in the direction of arrow **B**.

Note:

When the loading belt has been removed, load and unload by turning the worm gear manually.

1-8-2. Manual Threading and Unthreading

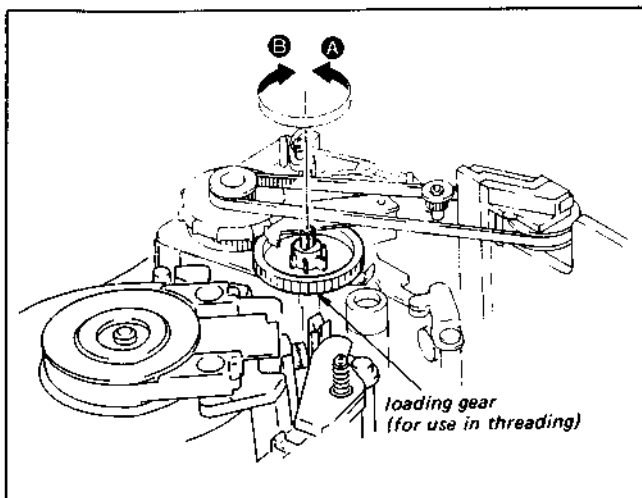


Fig. 1-4 Manual threading and unthreading

- 1) Turn the loading gear in the direction of arrow **A** until loading is completed.
- 2) To unthread, turn the loading gear in the direction of arrow **B**.

Note:

Always turn the loading gear sideways by hand.
Never use a screwdriver or other tool.

1-9. TOOLS AND FIXTURES REQUIRED FOR SERVICING

Ref. No.	Name	Part Code	Carved Jig No.	Use and Remarks
J-1	Torque Measurement Tape	J-6080-003-C	SL-0003C	forward torque and back tension measurement
J-2	Parallel Plate	J-6086-750-A	SL-0657	audio/CTL head lateral adjustment capstan shaft vertical adjustment
J-3	Dental Mirror (handle) Dental Mirror (mirror)	J-6080-029-A J-6080-030-1	SL-5052	tape path and tape traveling adjustment check
J-4	Alignment Tape (KR5-2H) Alignment Tape (KR5-10C)	8-969-995-52 8-192-508-01	—	tracking, overall adjustment of picture quality, etc.
J-5	Cleaning Fluid	Y-2031-001-0	—	
J-6	Thickness Gauge	9-911-053-00	—	
J-7	Chamois Cloth	2-034-697-00	—	cleaning
J-8	Head Demagnetizer	widely available	—	demagnetization of video head and audio head
J-9	Cleaning Cassette Tape	8-888-004-00	—	video head cleaning
J-10	Dihedral Adjustment Screw	J-6080-013-A	SL-0013	video dihedral adjustment
J-11	Video Head Checker	7-732-080-01	SL-5151	video head check

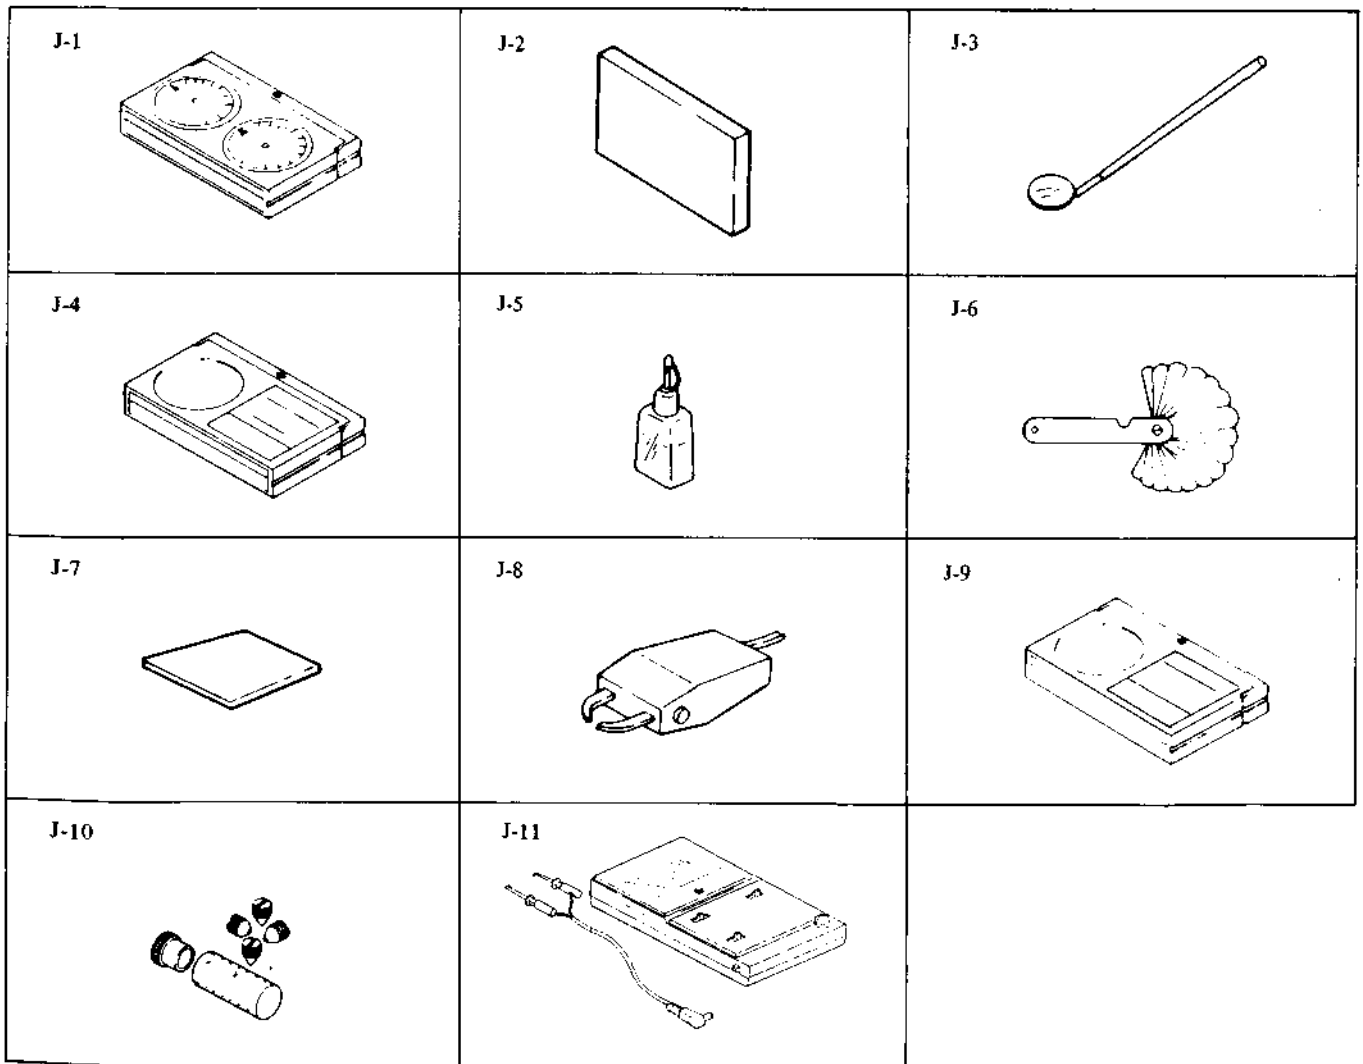


Fig. 1-5 Tools and fixtures required for servicing

2. PERIODIC CHECK AND MAINTENANCE

In order to obtain the best performance from this unit and make full use of its capabilities, and to extend the life of the unit and tapes, it is recommended that the following periodic checks and maintenance be performed.

2-1. POST-REPAIR MAINTENANCE

The following must be done after every repair regardless of how many hours the user has operated the machine.

2-1-1. Cleaning of Rotating Head Disk Assembly

- 1) Press a chamois cloth (Jig Ref. No. J-7) which has been dipped in cleaning fluid (Jig Ref. No. J-5) lightly against the rotating drum assembly, then do the cleaning by slowly rotating the rotating head disk by hand. (Never try to clean by using the motor to turn it.)
- 2) Never try to clean by moving the chamois cloth at a right angle to the head tip. There is a very great danger of damaging the head tip if this is done.

2-1-2. Cleaning of the Tape Movement System

- 1) Clean the surfaces which the tape contacts during its movement (tape guide, drum assembly surface, capstan, pinch roller, etc.) with a chamois cloth that has been dipped in cleaning fluid.

2-1-3. Cleaning the Drive System

- 1) Clean the driving parts with a cloth that has been dipped in cleaning fluid.

parts requiring cleaning

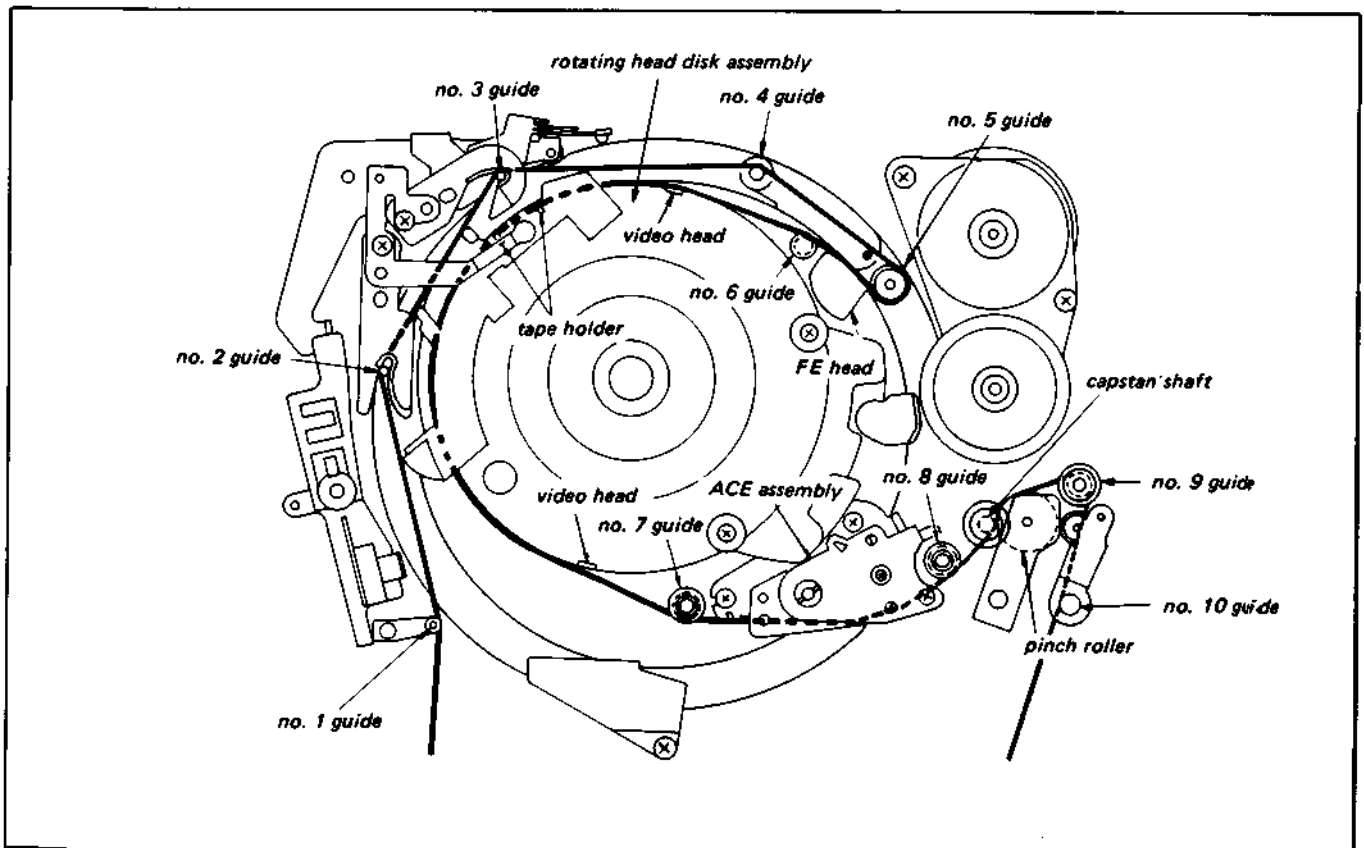


Fig. 2-1 Parts requiring cleaning

2-2. PERIODIC CHECK ITEMS

Perform the maintenance and check listed on the table below, according to user's operating hours.

Maintenance & Check		Operating Hours (H)											Remarks
		Replacement Part No.	500	1,000	1,500	2,000	2,500	3,000	3,500	4,000	4,500	5,000	
Tape Trans- portation System	Cleaning of tape transportation system	—	○	○	○	○	○	○	○	○	○	○	This cleaning must be done whenever a repair is made.
	Cleaning and degaussing of ACE ass'y	—	○	○	○	○	○	○	○	○	○	○	
	Cleaning & degaussing of video disk ass'y	—	○	○	○	○	○	○	○	○	○	○	
Driving System	Loading belt (synchro belt)	3-684-264-11	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	This cleaning must be done whenever a repair is made.
	Cleaning of iron core and opening of solenoid	—	-	-	-	○	-	-	-	○	-	-	Wipe iron core and opening of solenoid with dry cloth.
Performance Confirmation	Abnormal sound		☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	Adjust or replace the section which causes abnormal sound.
	Measurement of FWD back tension		-	☆	-	☆	-	☆	-	☆	-	☆	Confirmation must be made according to 3-13. Specified value: adjust to $3\pm - 35$ g·cm (When measured with torque cassette tape)
	Confirmation of brake system		-	☆	-	☆	-	☆	-	☆	-	☆	
	Confirmation of record & playback functions		☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	Perform the confirmation whenever repair is made.
	Measurement of forward torque		☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	Adjust to 80 ± 5 g·cm (SL-0003C)

○ Cleaning ☆ Replacement ☆ Confirmation

Note:

On overhaul

When overhauling the unit, replace parts as indicated in the above table.

3. CHECK, ADJUSTMENT, AND REPLACEMENT PROCEDURES

3-1. STATE OF WEAR OF VIDEO HEADS CHECK

As the accuracy of the check depends on the state of the heads and precision of the checker, the results should be taken only as an indication of the state of wear.

[Adjustment of video head checker]

- 1) Mechanical zero
Verify that the pointer of the video head checker is at the mechanical zero position. If it is not at this position, adjust the mechanical zero control.
- 2) Battery voltage check
Set the MODE switch to "BATT" and set the POWER switch to "ON". The deflection of the pointer should be within the range marked "BATT". If not, replace the battery (use a 6F22 battery) as follows.
- 3) Calibration check
Set the POWER switch to "ON" and the MODE switch to "CAL", then adjust the CAL control so that the pointer is on the CAL mark.

Note 1: Be sure to carry out this adjustment whenever the RANGE switch is changed.

Note 2: Be sure to check CAL before measuring the head and proceed the measurement after adjusting CAL, if CAL is not properly set.

[Method of measurement]

- 1) Remove the two screws that hold the damper assembly in place, then remove the damper assembly.
- 2) Detach the lead wires on the 2 video heads.
- 3) Attach the measuring clips to the head leads. Be sure to separate the leads by at least 1.5 cm.
- 4) Set RANGE switch to "B" and MODE switch to "MEAS". The pointer will deflect to indicate the state of wear of the heads.

Note: The deflection for the 2 video heads may be different, so be sure to measure both.

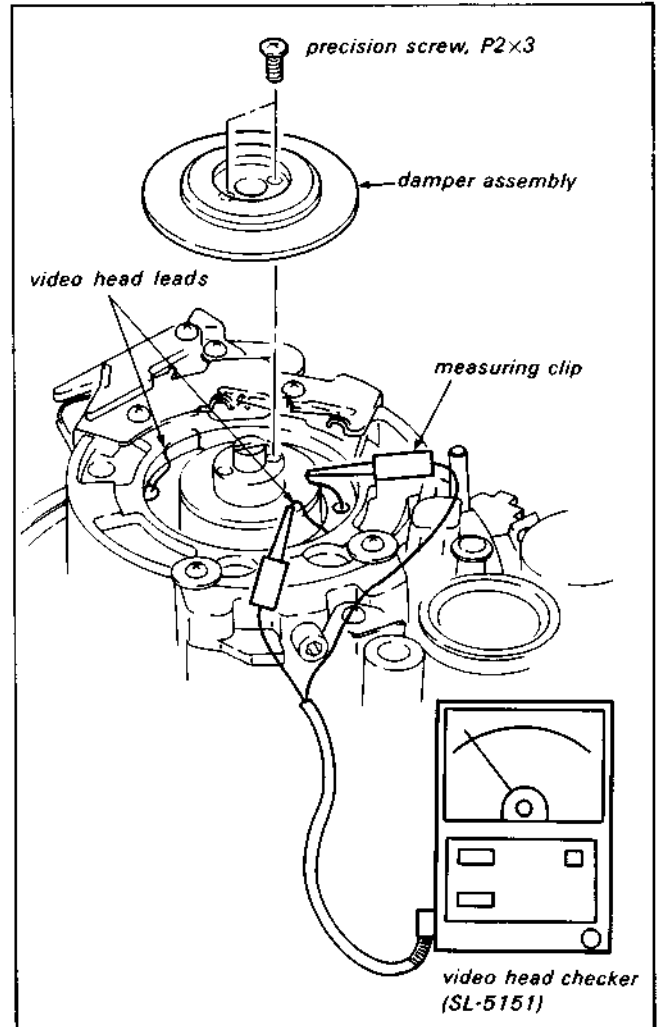


Fig. 3-1

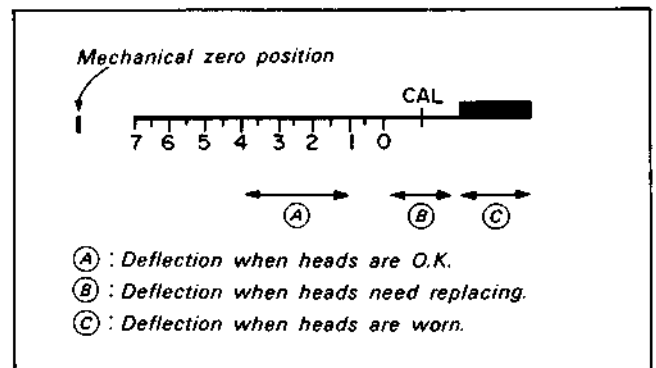


Fig. 3-2 Measured value

3-2. REPLACING ROTARY HEAD DISK ASSEMBLY

Accessory adjusting jig: Feeler gauge 1, feeler gauge 2

Note:

Keep them after replacing the rotary head disk, since they will be needed when replacing the guide arm assembly and the rotary coupler assembly. (They are not delivered with the guide arm assembly or the rotary coupler assembly.)

3-2-1. Removing Rotary Head Disk Assembly

(See Fig. 3-3)

Note:

While removing the rotary head disk assembly, never move screws ⑧ clamping the guide arm assembly. If they are moved, a centering adjustment will be required later. (Refer to Paragraph 3-3-3.)

- 1) Unscrew two screws ① clamping the damper assembly, and remove the damper assembly.
- 2) Unscrew hex. socket head bolt ② with an Allen wrench.

- 3) Unscrew two screws ③, and remove the upper drum assembly.

Note:

Remove while turning the upper drum assembly, taking care not to move the adjust plate. If the adjust plate is moved, the tape pass is badly influenced (See Fig. 3-13).

- 4) Unsolder the four connection pins ④ from the coupler disk.
- 5) Unscrew two hex. socket head bolts ⑤, and remove the rotary coupler assembly.

Note:

To be able to refit the rotary coupler in the correct relative position, memorize the position relative to connection pins 4.

- 6) Unsolder the red, white, and black leads at four positions from the intermediary board of the rotary head disk.
- 7) Unscrew four hex. socket head bolts ⑦, and remove the rotary head disk assembly.

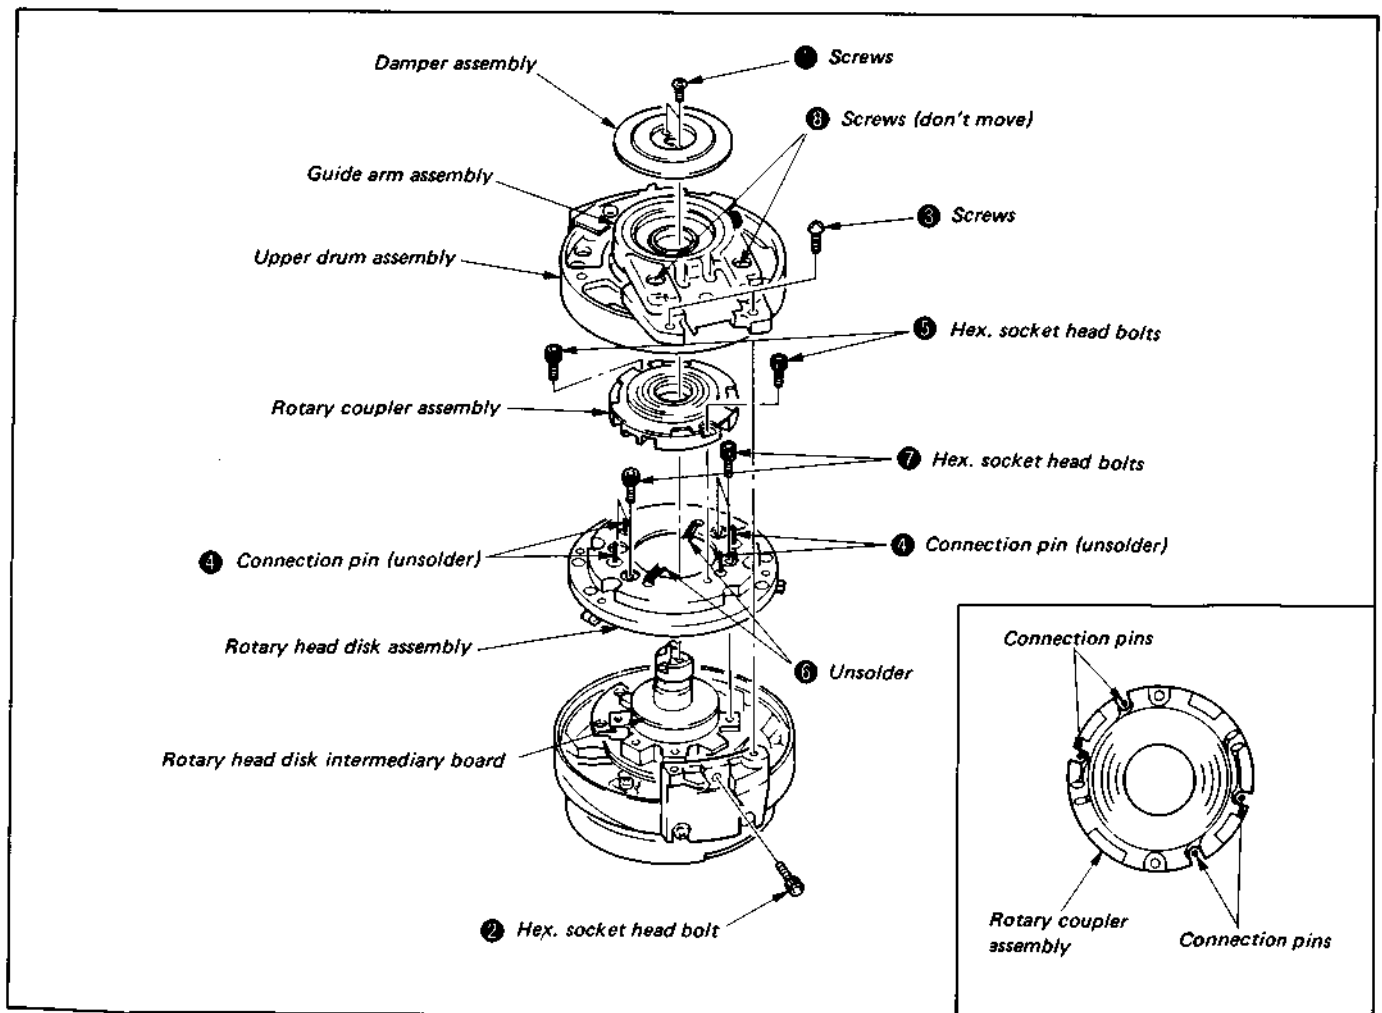


Fig. 3-3 How to remove rotary head disk

3-2-2. Refitting Rotary Head Disk Assembly

Note:

Be extremely careful not to damage the head chip by touching or fouling it.

- 1) Solder the four leads to the video head of the rotary head disk assembly. (Caution on correct orientation of the magnet.) Thread the leads through the holes (See Fig. 3-4).
- 2) Refit the four connection pins to the rotary head disk assembly (See Fig. 3-5).
- 3) Bend the connection pins and solder them to the AFM heads (See Fig. 3-5).
- 4) Refit the rotary head disk assembly, paying attention to the positions of the red, white, and black leads, and to the orientation of the connection pins. (White on Ach side)
- 5) Tighten four hex. socket head bolts ⑦ (see Fig. 3-3), and solder the leads to the head intermediary board of rotary head disk (See Fig. 3-6-a).
- 6) Refit the rotary coupler assembly, and tighten two hex. socket head bolts ⑤ (See Fig. 3-3).

Note:

Align A-a and B-b between the intermediary board of rotary head disk and the rotary coupler assembly (See Fig. 3-6).

- 7) Solder the four connection pins to the rotary coupler assembly (See Fig. 3-6-b).
- 8) Refit the upper drum assembly without moving the adjust plate, and lightly tighten screws ⑧ . Tighten hex. socket head bolt ② , and then, tighten screws ③ firmly (See Fig. 3-3).

Note:

While refitting the upper drum assembly, take care not to foul the head chip.

- 9) Check the AFM rotary transformer gap with the feeler gauges (See Fig. 3-7). Feeler 1 must go in and feeler 2 must not go in. If the gap is incorrect, readjust the gap. (Refer to Paragraph 3-2-3).
- 10) Refit the damper assembly, and tighten screw ① (See Fig. 3-3).

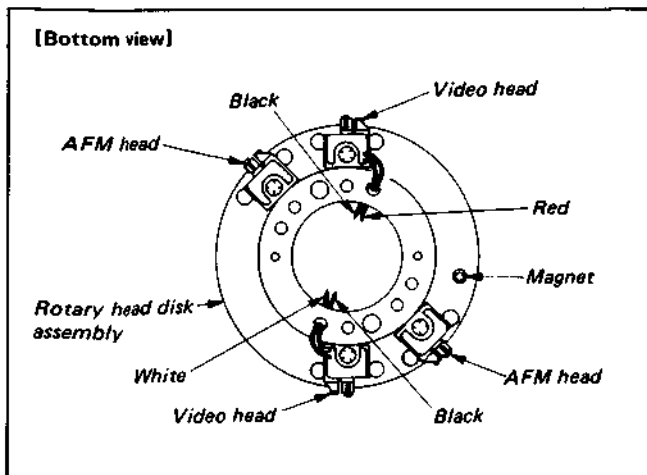


Fig. 3-4 How to refit rotary head disk (1)

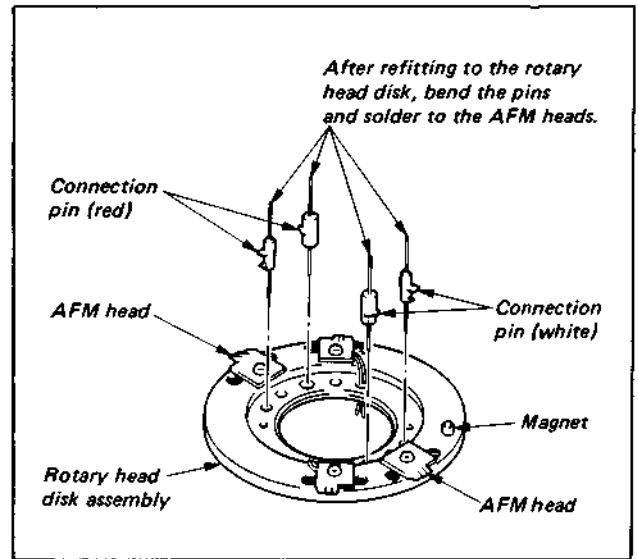


Fig. 3-5 How to refit rotary head disk (2)

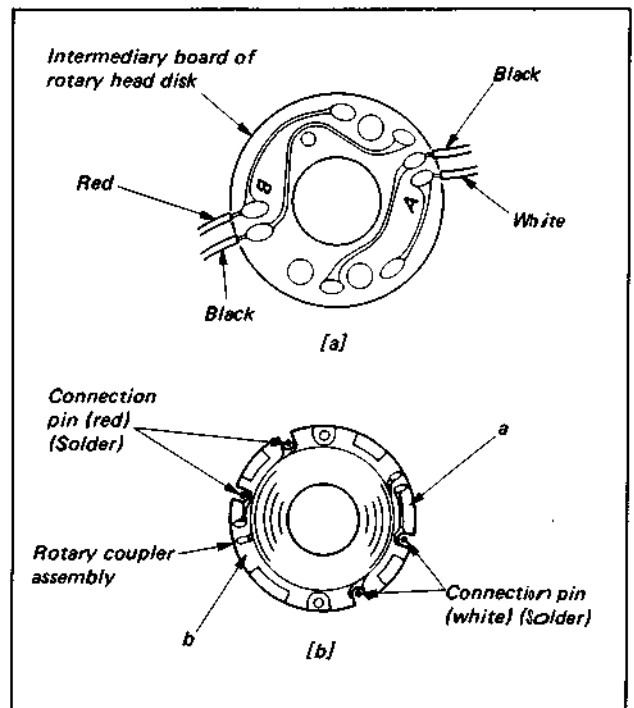


Fig. 3-6 How to refit rotary head disk (3)

3-2-3. Adjusting AFM Rotary Transformer Gap (See Fig. 3-7)

- 1) Loosen hex. socket head bolt ① for the guide arm assembly without unscrewing, and lift the upper ring assembly slightly.
- 2) Insert feeler gauge 1 into the gap in the rotary transformer, and push the upper ring assembly downward.
- 3) Tighten the hex. socket head bolt ① while holding the upper ring assembly down.

Note:

Take care not to move the upper ring assembly while tightening the bolt.

- 4) Remove feeler gauge 1, and ascertain that feeler gauge 2 does not enter the gap. If it enters, start readjusting from process 1) on.

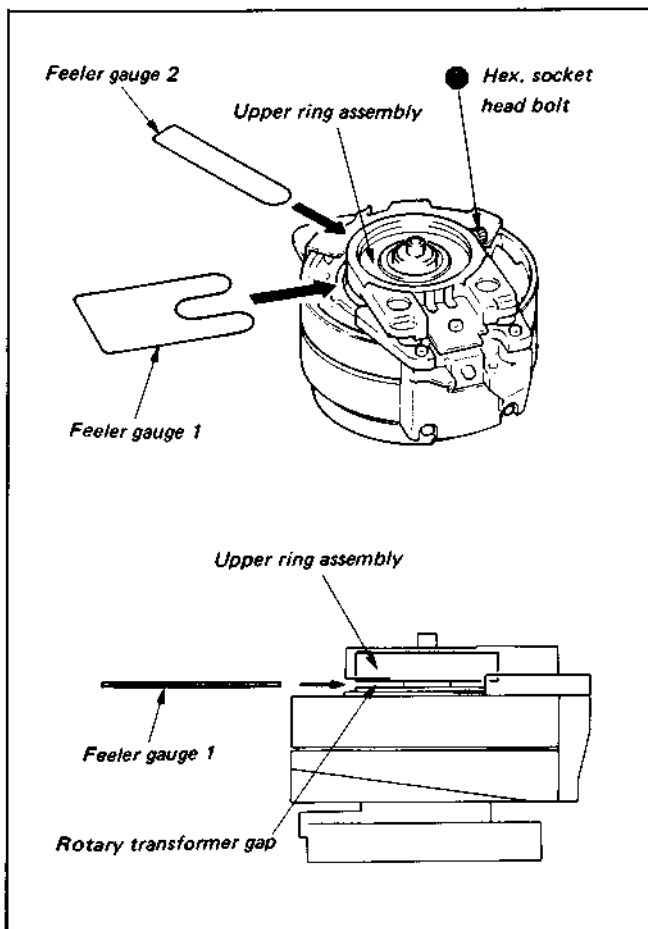


Fig. 3-7 Adjusting AFM rotary transformer gap

3-3. REPLACING UPPER DRUM

Accessory adjusting jig: Centering jig

Note:

Keep it carefully after replacing the upper drum, as it will be used again when replacing the guide arm assembly. (It does not accompany the guide arm assembly.)

3-3-1. How to Remove Upper Drum (See Fig. 3-8)

Note:

While removing the upper drum, never move hex. socket head bolt ⑦. If it is moved, the gap in the rotary transformer must be adjusted later. (Refer to Paragraph 3-2-3.)

- 1) Unscrew two screws ① and remove the damper assembly.
- 2) Unscrew two screws ②, and remove the guide arm assembly.
- 3) Unscrew hex. socket head bolt ③ with an Allen key.
- 4) Unscrew two screws ④, and remove the upper drum together with the upper drum mounting plate.

Note:

Be extremely careful not to touch parts around the drum.

- 5) Unscrew two screws ⑤, and remove the upper drum mounting plate from the upper drum.
- 6) Unscrew two screws ⑥, and remove the tape retainer spring assembly.

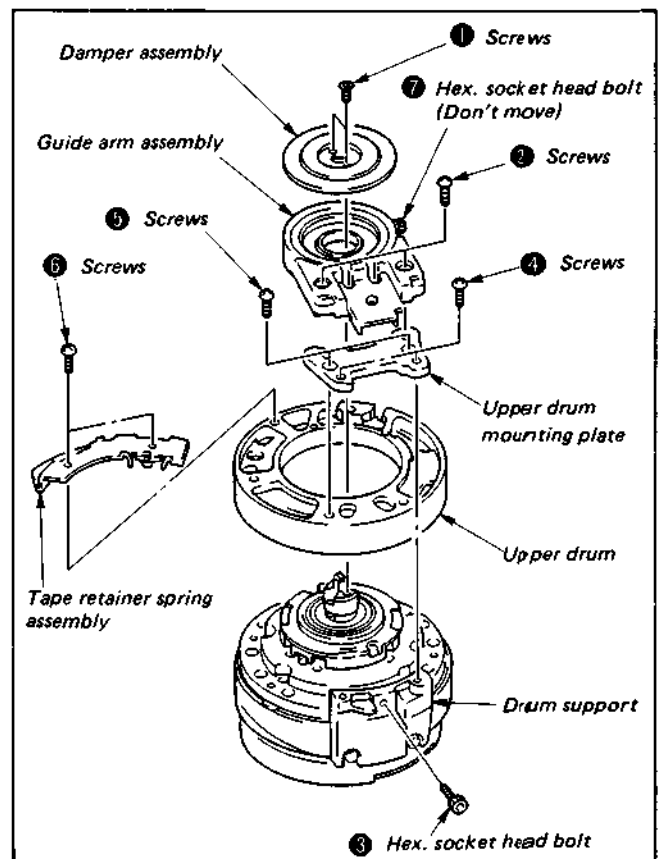


Fig. 3-8 How to remove upper drum

3-3-2. How to Refit Upper Drum (See Fig. 3-8)

- 1) Fit the tape retainer spring assembly to the replacement upper drum with two screws ⑥ .
- 2) Refit the upper drum mounting plate with two screws ⑤ .
- 3) Lightly clamp the upper drum mounting plate installed to the upper drum to the drum support with two screws ④ .
- 4) Tighten hex. socket head bolt ③ while holding the upper drum and the upper drum mounting plate tightly onto the drum support by hand.
- 5) Firmly tighten two screws ④ .
- 6) Refit the guide arm assembly with two screws ② .

Note:

Don't firmly tighten screws 2, but allow the guide arm assembly to move horizontally.

- 7) Insert the centering jig found in the box of the replacement upper drum between the guide arm assembly and the damper holder, and tighten screws ② firmly. Remove the centering jig, and check the clearance between the guide arm assembly and the damper holder for uniform distribution (See Fig. 3-8, 3-9).
- 8) Refit the damper assembly with two screws ① .

3-3-3. Centering Adjustment (See Fig. 3-9)

- 1) Loosen the screw ② fastening the guide arm assy without removing the screw, enabling the guide arm assy to move horizontally.
- 2) Insert the centering jig supplied as an accessory in the gap between the guide arm assy and damper holder on the change upper drum.
- 3) Tighten the screw ② holding the centering jig.
- 4) Remove the centering jig and check that the gap between the guide arm assy and damper holder is uniform. Readjust starting 1) if the gap is not even.

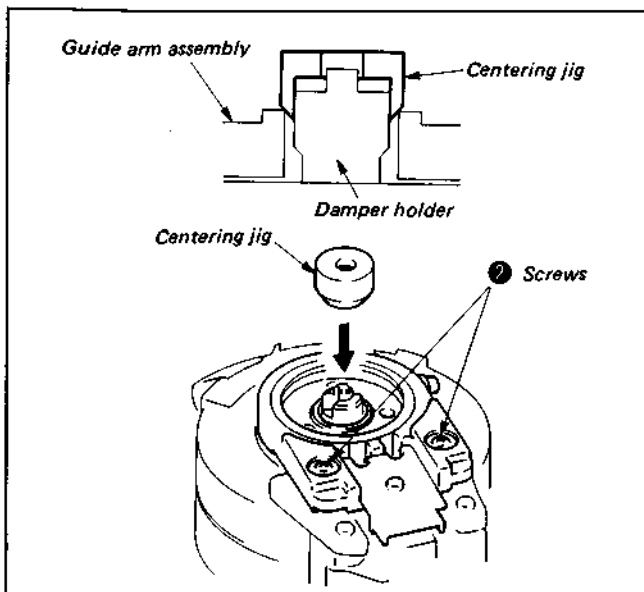


Fig. 3-9 Centering Adjustment

3-4. CAUTION WHEN CHANGING ROTARY COUPLER ASSY AND GUIDE ARM ASSY

- 1) Make sure to adjust the gap (refer to Paragraph 3-2-3) after changing the rotary coupler assy.
The adjust jigs (spacers 1 and 2) can be found with the rotary head disk assy for repair (A-6762-226-A).
- 2) Make sure to adjust centering (refer to Paragraph 3-3-3) and gap (refer to Paragraph 3-2-3) after changing the guide arm assy.
The adjust jigs (centering jig, feeler gauge 1 and 2) can be found with the upper drum for repair (A-6760-178-A) and rotary head disk assy for repair (A-6762-226-A). (Refer to Section 1-9)

3-5. VIDEO HEAD DIHEDRAL CHECK AND ADJUSTMENT

This adjustment is generally unnecessary, but it is sometimes necessary when the video head disk is replaced. (The video head disk used for maintenance has been precision adjusted at the factory using a microscope and almost never needs to be readjusted.)

When judging whether the video head dihedral angle is correct, the alignment tape is played back. When this is done the tracking control knob must be in the centering position. If the check is done with this knob in other than the center click position (if the tracking is off-center), even if the dihedral angle is correct the picture will be reproduced as if it were off.

Before this adjustment is performed, the ACE assembly position adjustment (refer to the section where the tape path adjustment is described) must be completed.

[Method of checking]

With the tracking control knob set to the center click position, play back the monoscope section of the alignment tape. Check to see if any of the vertical monoscope lines immediately below the switching pulse are reproduced double. If not, the dihedral angle is correct and does not have to be adjustment. If so, perform the adjustment as explained below.

[Adjusting method]

- 1) Insert the two dihedral adjusting screws (Jig Ref. No. J-10) into the adjusting screw holes on both sides of the video head - Ach (see Fig. 3-11) so that the tops of the adjusting screws flush with the upper face of the video head disk as shown in Fig. 3-10. (If screwing in is not sufficient, the video head disk does not rotate as the heads of the adjusting screws ram the upper drum. Conversely, if screwed in more than necessary, the head base is moved, and video head dihedral adjustment becomes very inaccurate.)

Note:

Be most careful the head under the part on the coupler board that is marked with white silk is the video head - Ach. The side marked b with white silk is the reference side. Never move it. (See Fig. 3-11.)

- 2) Of the two adjusting screws, screw in farther either one of them until resistance is felt. Screwing in the screw farther, the video head moves, and dihedral adjustment can be made. (See Fig. 3-12)
- 3) Play back the monoscope signal part of the alignment tape with the adjusting screw on and check the signal. Rotate the screwed in adjusting screw counterclockwise to loosen it, then screw in the adjusting screw on the other side if the dihedral quantity of the vertical line has become larger than before making the adjustment.
- 4) Remove the adjusting screws and recheck after completing the adjustment.

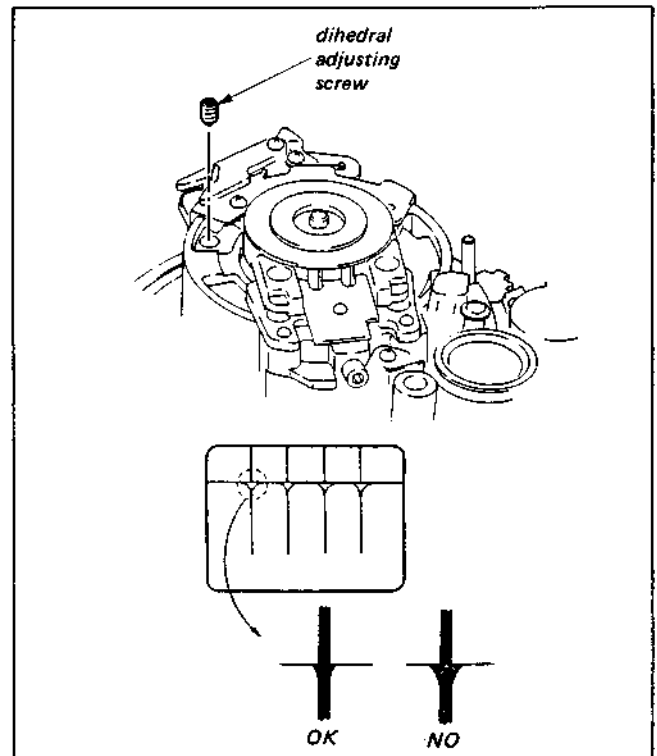


Fig. 3-10 Video Head Dihedral Adjustment (1)

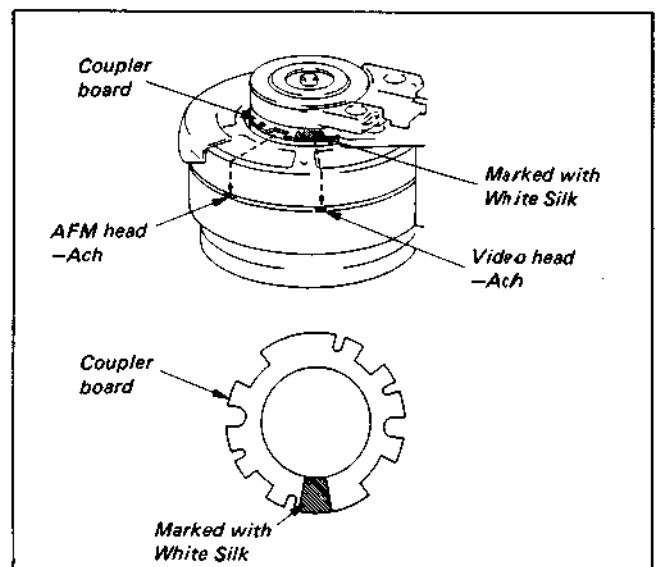


Fig. 3-11 Video Head Dihedral Adjustment (2)

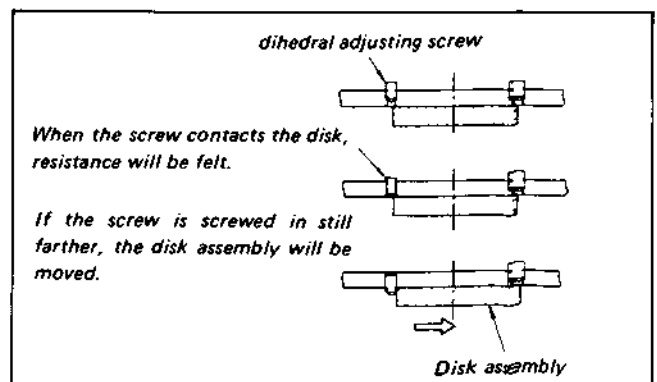


Fig. 3-12 Video Head Dihedral Adjustment (3)

3-6. REPLACEMENT AND ADJUSTMENT OF THE DRUM ASSEMBLY

3-6-1. Replacement of the Drum Assembly

- ① Measure gap **A** between adjusting plate 2 and the upper drum holder section and record the measurement.
Note:
The position where the adjusting plate is mounted has a large effect on the tape path, so this measurement must be performed.
- ② Measure gap **B** between adjusting plate 3-1 and the upper drum holder section, and record the measurement.
Note:
The position where the adjusting plate is mounted has a large effect on the tape path, so this measurement must be performed.
- ③ Remove the screws shown in Fig. 3-13, then remove the tape guide ground plate and adjusting plates 2 and 3-1.
- ④ Remove the 3 connectors from the rear of the chassis as shown in Fig. 3-14.
- ⑤ Remove the 3 drum mounting screws from the rear of the chassis, then remove the main body of the drum assembly. After the replacement has been completed, adjust the drum path.

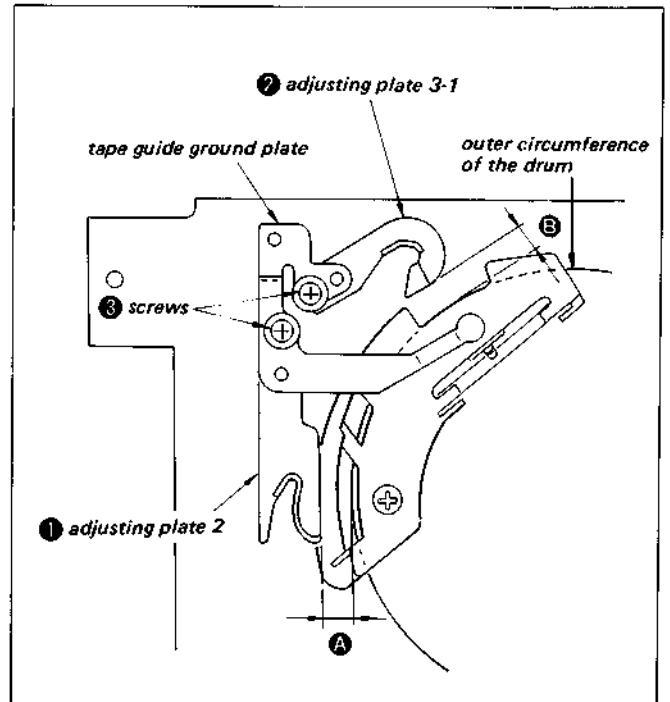


Fig. 3-13 Measurement of the position of adjusting plates 2 and 3-1

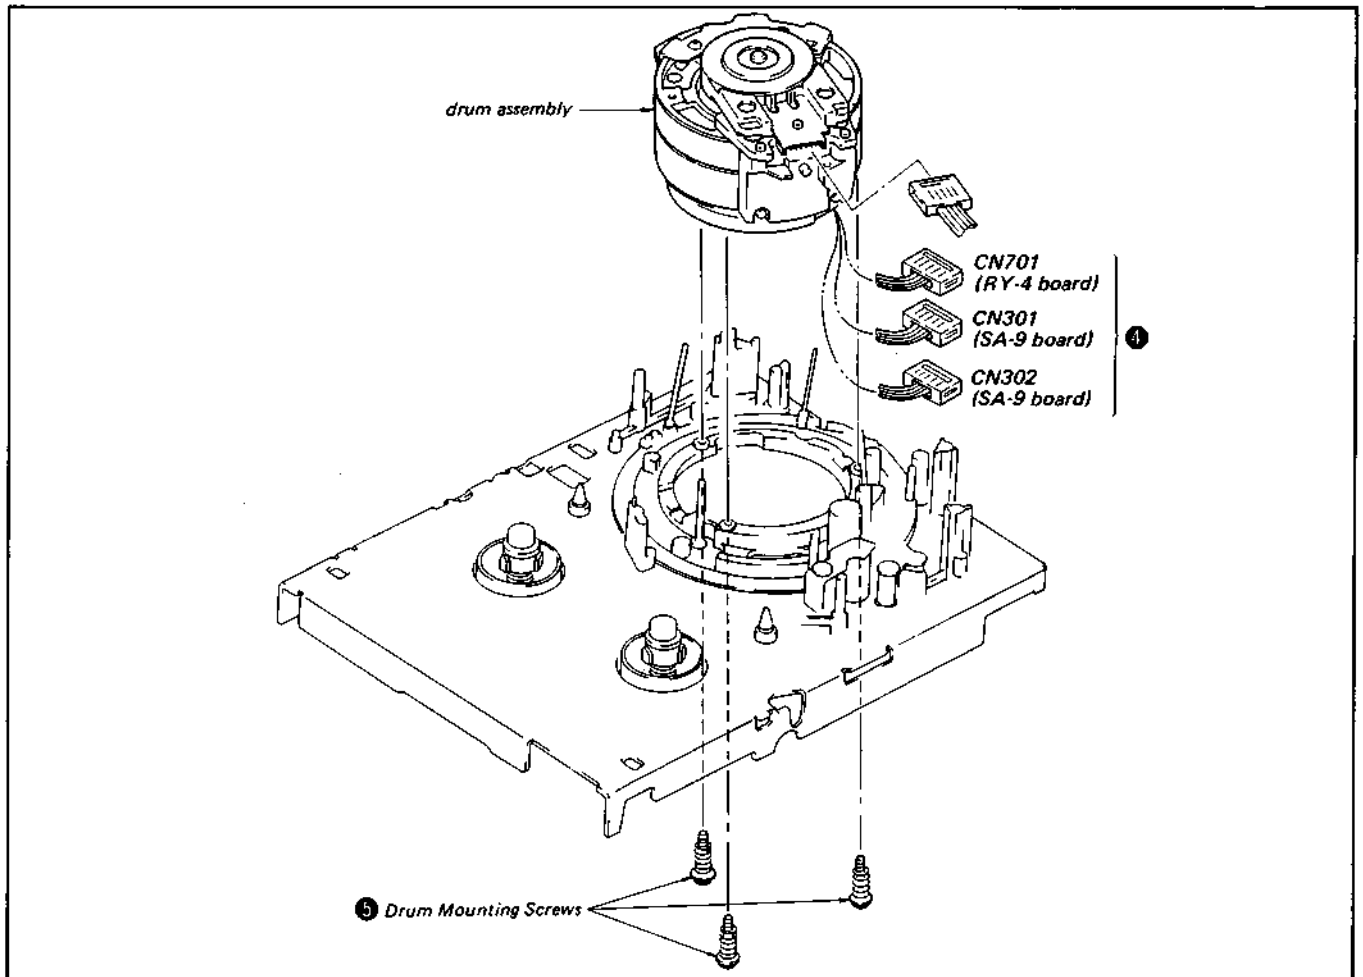


Fig. 3-14 Removal of the drum assembly

3-6.2. Adjustment of the Motor Gap when Replacing the Drum Assembly

After replacing the drum assembly, adjust the gap between the motor rotor and the coil to 0.3 mm to 0.6 mm (Fig. 3-15).

[Procedure]

- 1) When re-assembling the drum, use the spacers which were removed to produce a gap of between 0.3 mm and 0.6 mm. Measure the gap using the gauge that comes with the drum for assembly and maintenance use. One side of the gauge is 0.3 mm and the other side is 0.6 mm. If the gap is adjusted correctly, the 0.3 mm side should fit in and the 0.6 mm side should not.
- 2) If this fails to give the correct gap width, do not use the spacers which were removed; instead, use a combination of the 4 0.3 mm accessory spacers to obtain the correct width.

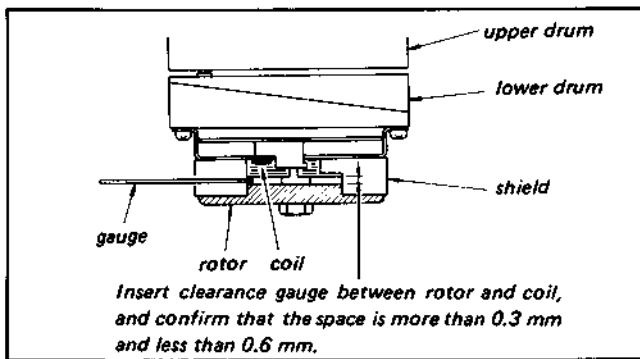


Fig. 3-15 Checking the motor gap width after replacing the drum assembly

Removal of the stator and rotor when replacing the drum

- 1) Remove the nut ① and washer ②.
- 2) Remove the rotor ③ from the stator ④.
- 3) Remove the ② screws ⑤, then remove the stator from the main body of the drum.

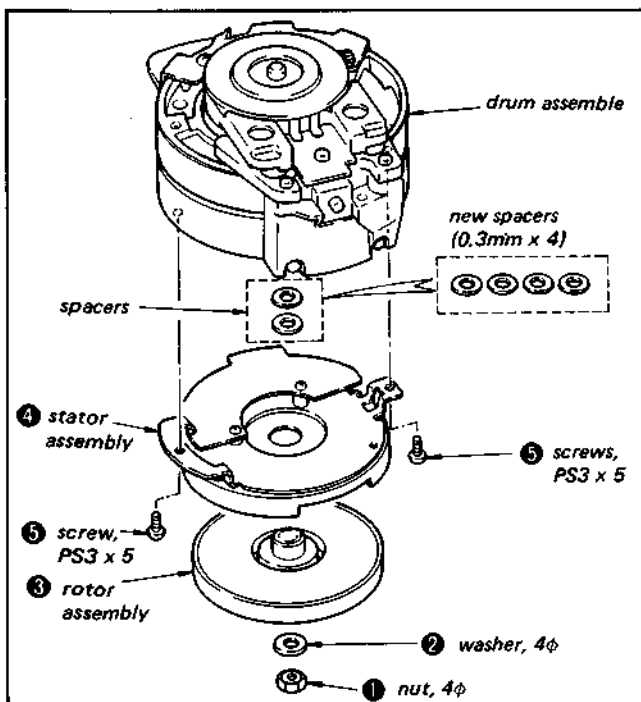


Fig. 3-16 Removal of the stator and rotor when replacing the drum

3-7. REPLACEMENT OF THE CAPSTAN MOTOR

3-7-1. Removal of the Capstan Motor (Fig. 3-17)

- Remove the three screws ① then remove the capstan motor from the rear of the mechanical chassis.

Note:

When the capstan motor has been removed or replaced, check the tape path once.

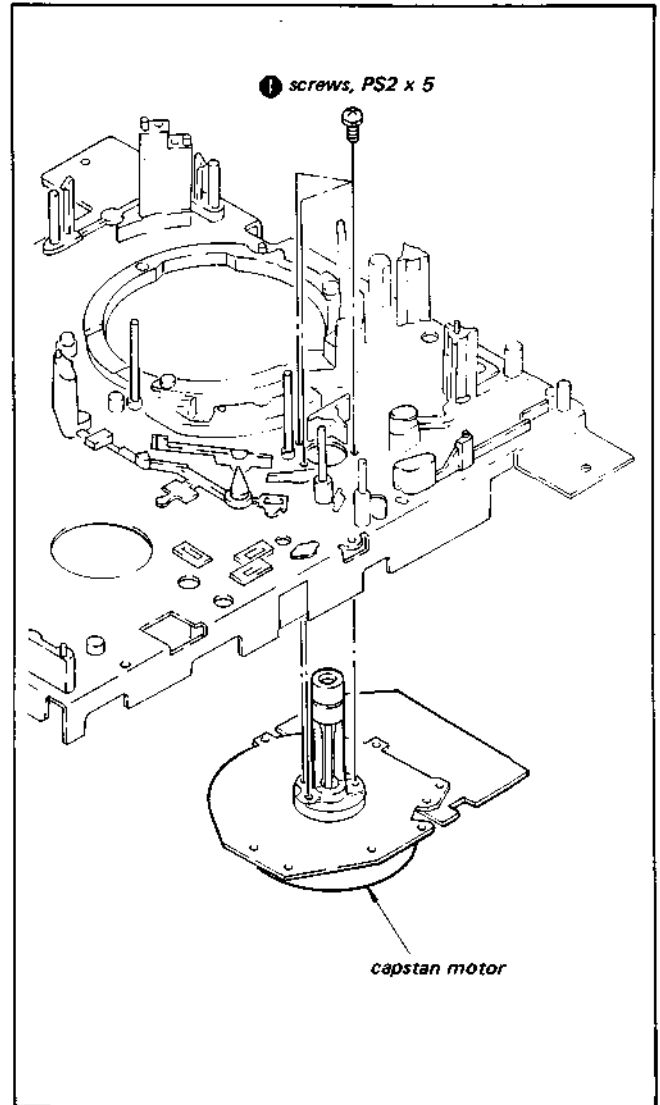


Fig. 3-17 Removal of the capstan motor

3-8. REMOVAL OF THE S COIL SENSOR (Fig. 3-18)

- ① Remove the spring.
- ② Remove the claw in the direction of arrow **A**, then pull the S coil sensor out.
- ③ Pull out the connector from CN604 on SA-9 board.

3-9. REMOVAL OF THE FL CASSETTE COMPARTMENT ASSEMBLY

Refer to SECTION 2 DISASSEMBLY, 2-10 REMOVAL OF THE FL CASSETTE COMPARTMENT ASSEMBLY.

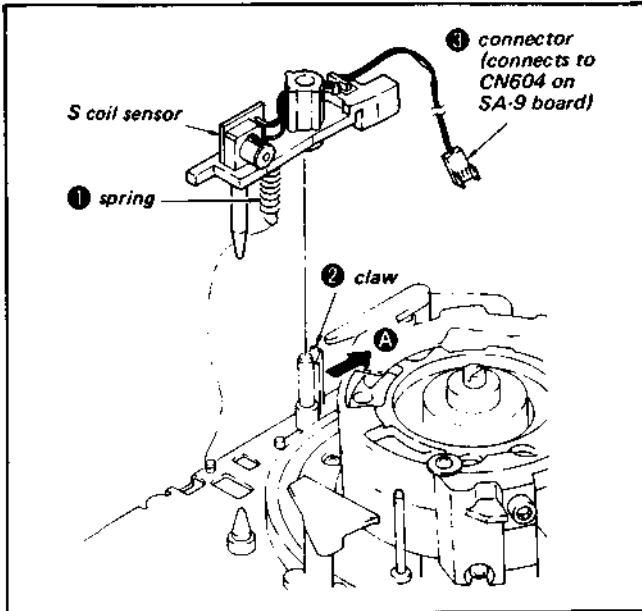


Fig. 3-18 Removal of the S coil sensor

3-10. ADJUSTMENT OF THE FL CASSETTE COMPARTMENT

3-10-1. Adjustment of the Position of the Right Gear of the FL Cassette Compartment Assembly

In the FL cassette compartment assembly, the cassette holder must always move parallel to the mechanical chassis. The gear system is used to control the amount by which the cassette holder advances so that this will be the case. Consequently, if the gears in this section slip out of mesh, the next time the unit is assembled the gear mesh must be adjusted to the correct position; otherwise the cassette will not feed properly.

[Adjustment of the gear positions]

- ① Get a positioning rod about 200 mm long and 1.5 mm in diameter ready.
- ② While passing the positioning rod through the combination of the drive arm right and cassette ON cam, fit the latter on the right side plate. Similarly, fit the drive arm left onto the left side plate.
- ③ Similarly, while passing the positioning rod through the worm wheel, fit the latter onto the right side plate.
- ④ Similarly, while passing the positioning rod through the combination of the limiter gear and cassette OFF cam, fit the latter onto the right side plate.

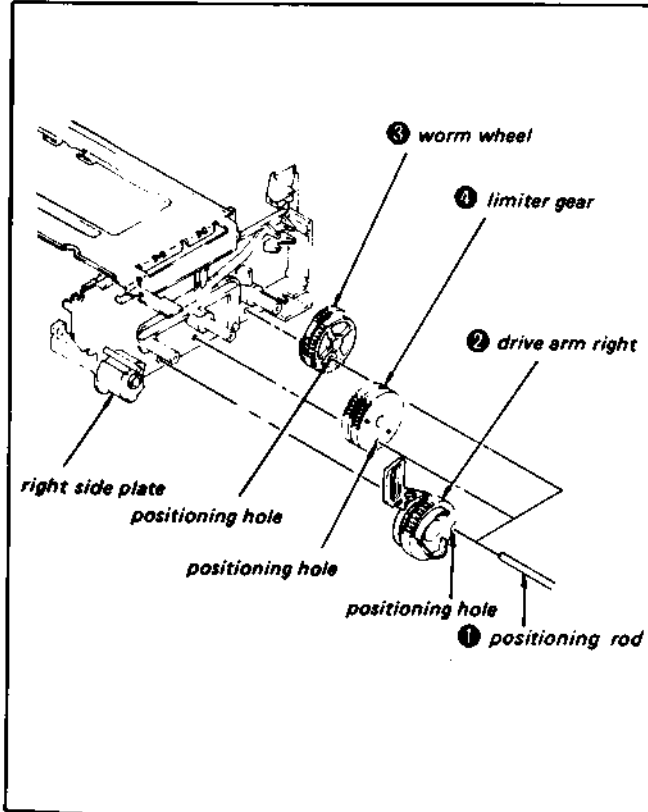


Fig. 3-19 Positioning of the FL cassette compartment gears

3-10-2. Cassette ON Switch Operation Check and Adjustment

[Method of checking]

When inserting a cassette into the FL cassette compartment assembly, confirm that, as the cassette is inserted, the leaf switch comes ON when the center of the drive roller is 8 to 13 mm from the end of the guide groove, as shown in Fig. 3-20.

[Method of adjustment]

Bend the tip of the cassette ON switch in the direction of the arrow.

Adjust so that the cassette ON switch comes ON when the above distance is 8 to 13 mm, and finally tighten the screw.

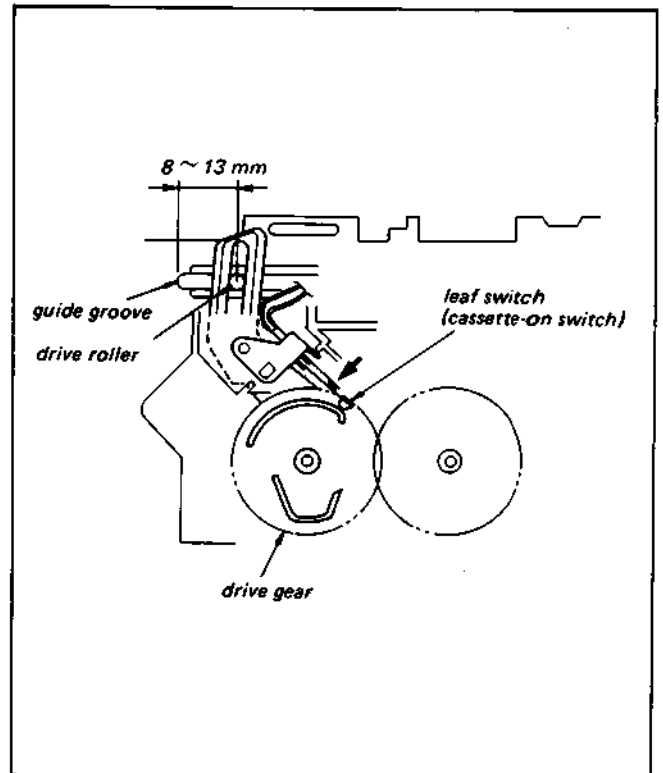


Fig. 3-20 Cassette ON switch operation check and adjustment

3-10-3. Checking and Adjustment of the Cassette Door Assembly

[Method of checking]

With the door opening and closing arm returned all the way in the direction of arrow **A**, check to make sure that the door is vertical.

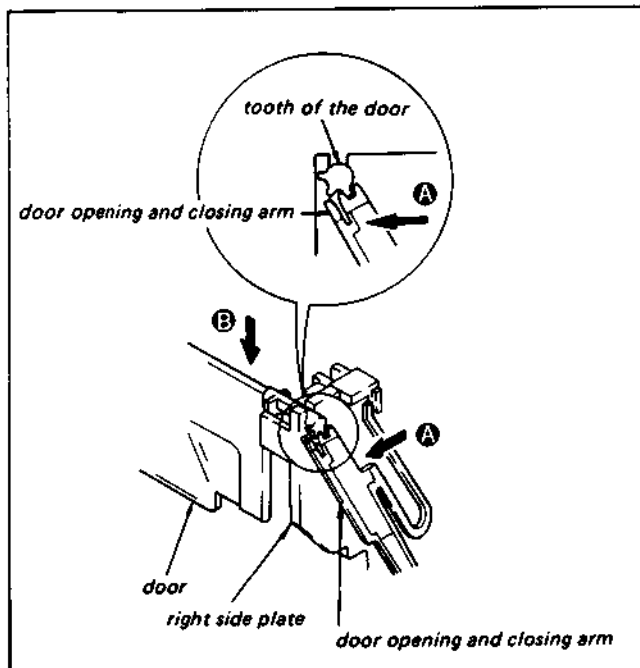


Fig. 3-21 Adjustment of the position of the cassette door assembly

[Method of adjustment]

Check to make sure that the door opening and closing rack plate has returned all the way. Then, close the door together in the direction of arrow **B** so that it is vertical, and mesh the gears.

3-10-4. Mounting the FL Cassette Compartment Assembly (Fig. 3-22)

- ① Hook the two holes of the FL cassette compartment assembly onto the mechanical chassis, then place the compartment in the specified position on the chassis.
- ② Loosely tighten the 4 mounting screws of the FL cassette compartment assembly. Move the FL cassette compartment assembly forward and backward with respect to the mechanical chassis, set it in the correct position, then tighten the mounting screws all the way.
- ③ Connect the timing belt (loading belt) between the threading motor and the worm gear, then hold it in place with the internal gear flange.
- ④ Press the tension roller arm in the direction of the arrow to adjust the tension of the timing belt (loading belt), then fix it in place with the arm fixing screw.
- ⑤ Insert the harness sticking out from the FL cassette compartment into connector CN606 on SA-9 board.

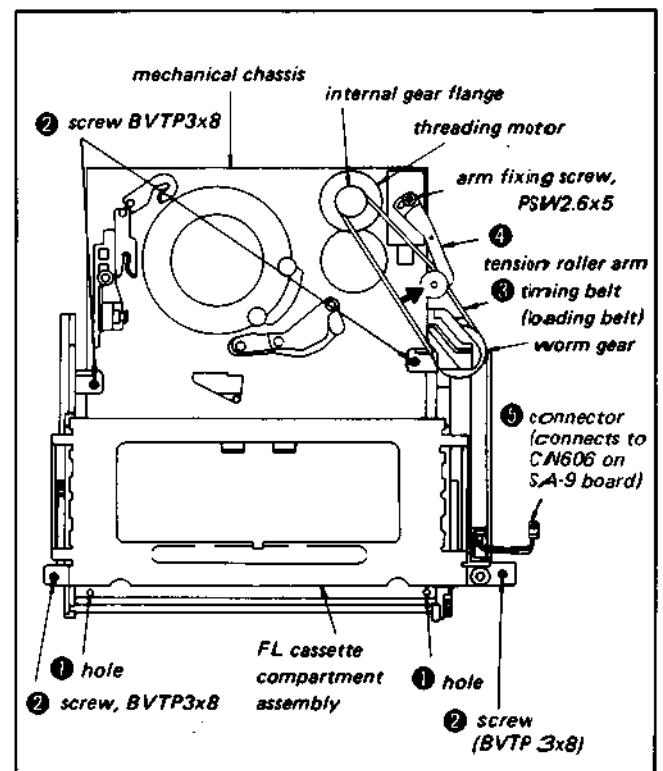


Fig. 3-22 Mounting the FL cassette compartment assembly

3-11. REMOVAL OF THE No. 2 AND No. 3 GUIDES

3-11-1. Removal of the No. 2 Guide

- ① Remove the 1x3 tap-in screw.
- ② Remove the 1.4x3 tap-in screw.
- ③ Remove the No. 2 guide assembly.

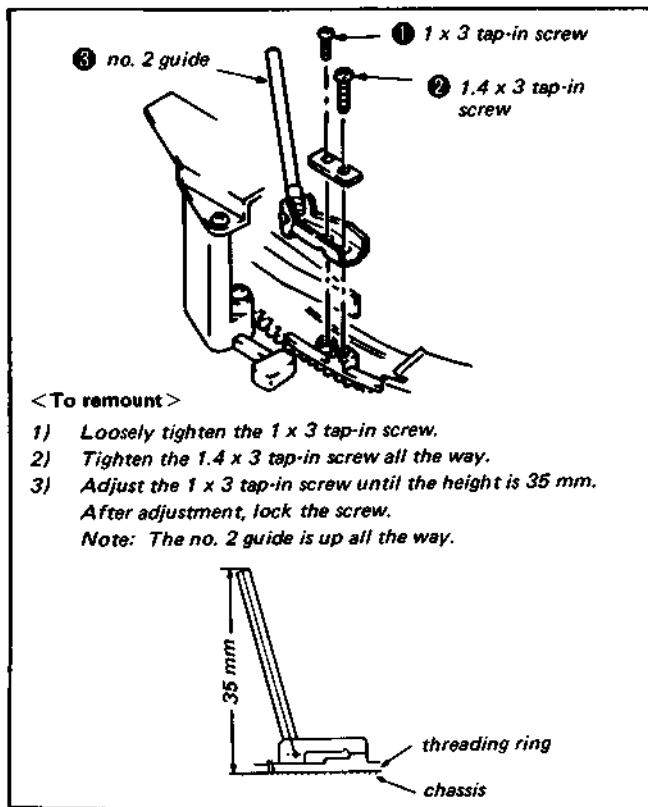


Fig. 3-23 Removal of the no. 2 guide

3-11-2. Removal of the No. 3 Guide

- ① Remove the 1x3 tap-in screw.
- ② Remove the 1.4x3.5 tap-in screw
- ③ Remove the limiter spring.
- ④ Remove the No. 3 guide assembly.

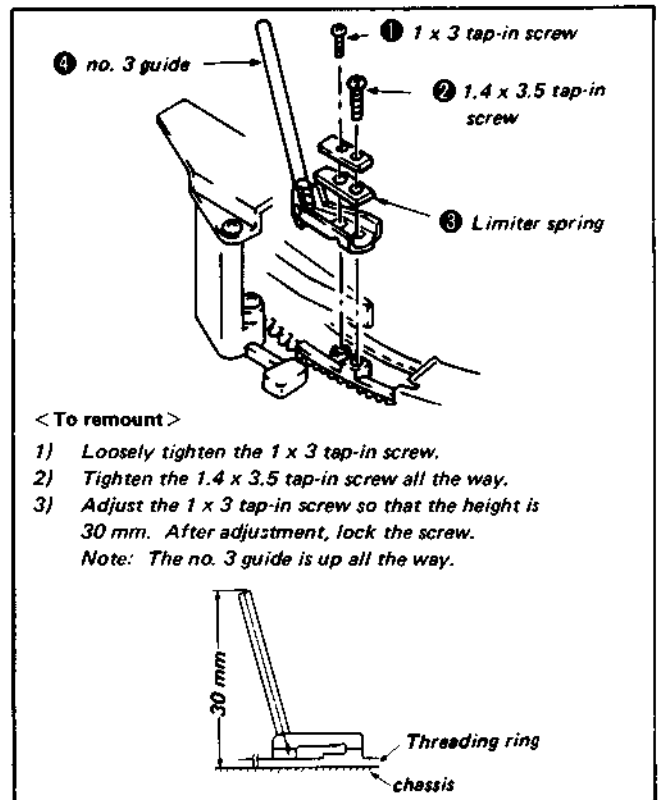


Fig. 3-24 Removal of the no. 3 guide

3-12. REPLACEMENT AND ADJUSTMENT OF THE S THREADING RING

3-12-1. Preparation to Remove the S Threading Ring, Removal of the ACE Assembly, FE Head and Threading Motor (Fig. 3-25)

- ① Remove the cross-recessed head screw.
- ② Remove the No. 6 guide nut.
- ③ Remove the No. 6 washer.
- ④ Remove the No. 6 guide spacer.
- ⑤ Remove the compression coil spring.
- ⑥ Remove the 2 guide adjustment screws, then remove the ACE assembly and the FE head.

Note:

Since the ACE assembly and the FE head are connected by a lead wire, be careful when removing them. It is not necessary to remove the compression coil spring below the ACE assembly, but be careful not to use it.

- ⑦ Remove the 3 screws, then remove the threading motor assembly by pulling it up and out.

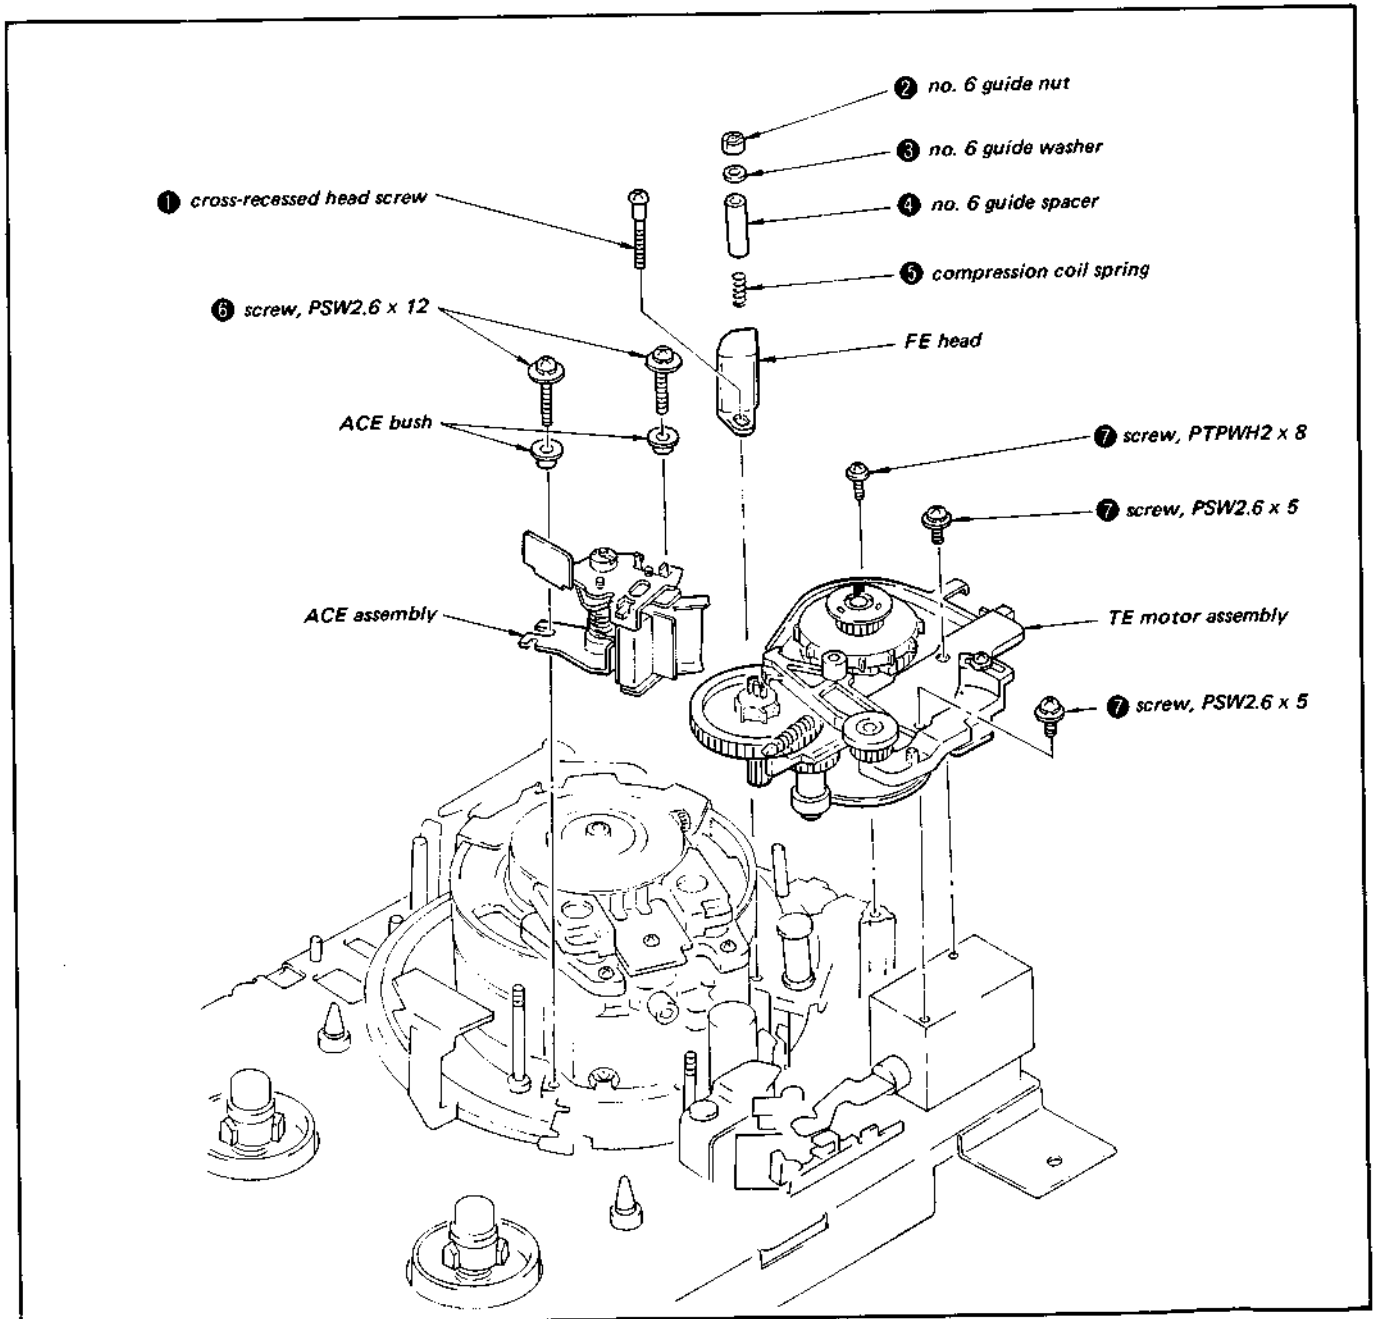


Fig. 3-25 Removal of the ACE assembly, FE head and TE motor assembly.

Removal of Miscellaneous Parts (Fig. 3-26)

Proceeding in the same manner as in replacement of the drum assembly, measure the width of the gap between the upper drum and the adjusting plates (Fig. 3-13).

- ① Remove the screw, then remove the tape guide ground plate and adjusting plates 3-1 and 2.
- ② Remove the two screws, then remove the tape holder assembly.
- ③ Remove the screw, then remove the guide plate.
- ④ Remove the 2 PTPWH2x8 screws and the M2.6 screw, then remove shuttle guide 2.

- ⑤ Remove the 3 PTPWH2x8 screws and the M2.6 screw. Then remove the 2 claws holding shuttle guide 1-YA in place, and finally remove shuttle guide 1-YA.
- ⑥ Remove the slant base assembly.
- ⑦ Remove the BVTT2.6x6 screw, then remove the pinch liner link.

Note:

After removing the guide plate, do not thread or unthread a tape with the shuttle guide mounted.

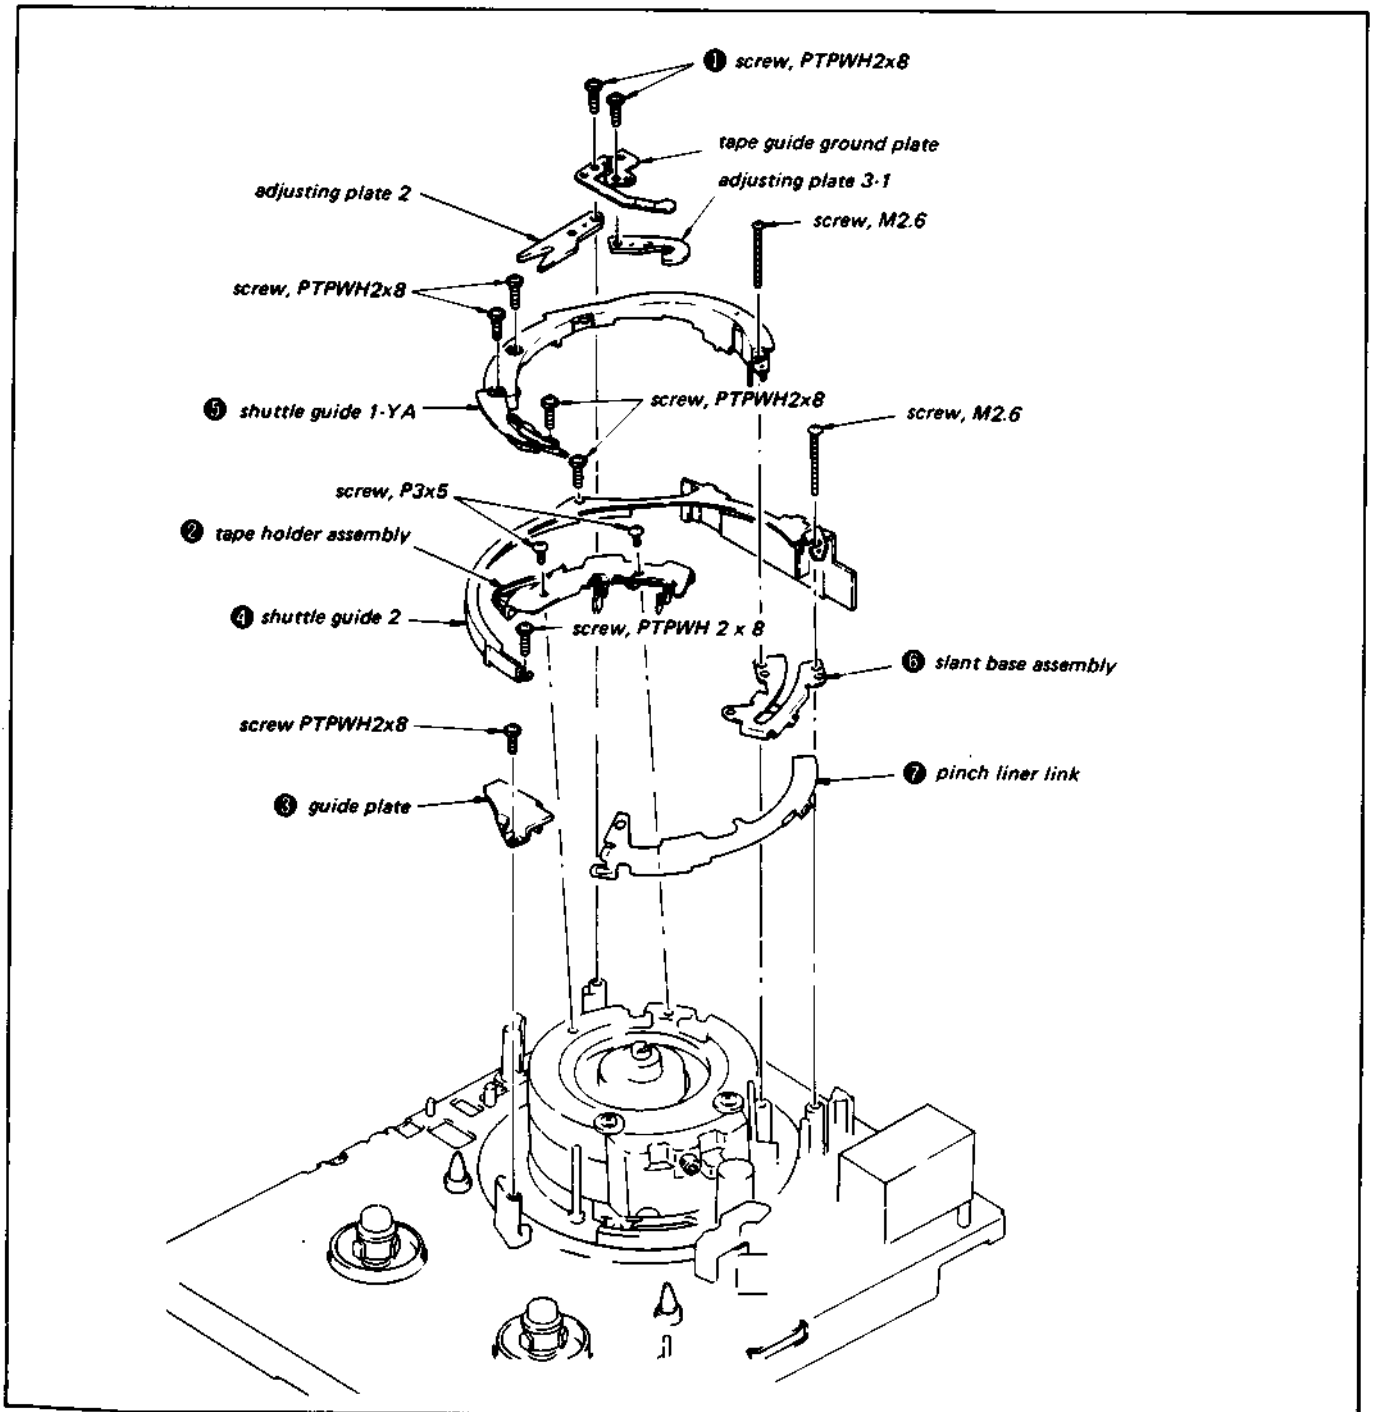


Fig. 3-26 Removal of miscellaneous parts

3-12-2. Removal of the S Threading Ring (Fig. 3-27)

- ① Turn the stop washer and remove the ring roller (B) and (C).
- ② Remove the screw, then remove the ring roller adjustment plate.
- ③ Remove the S threading ring.

Note:

Once a stop washer has been removed, do not use it again.

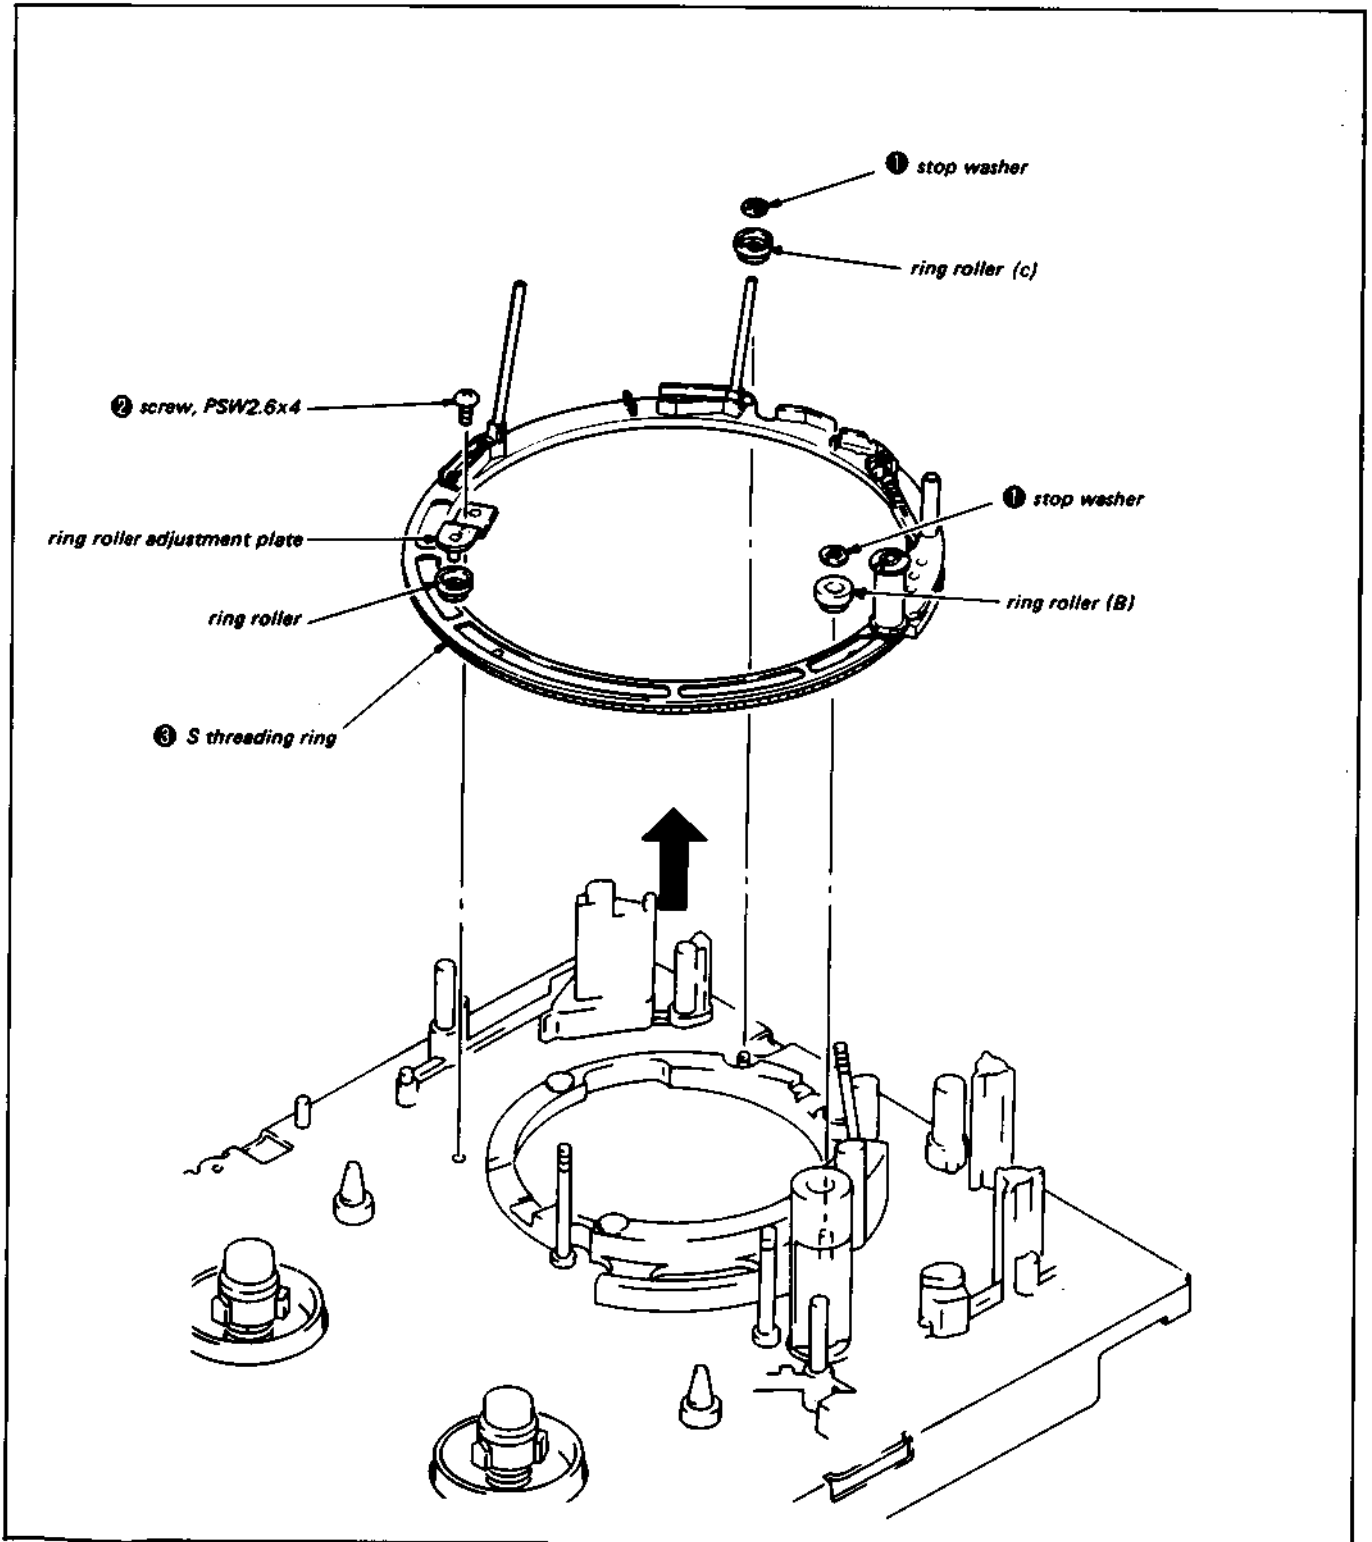


Fig. 3-27 Removal of the S threading ring

3-12-3. S Threading Ring Mounting and Position Adjustment (Fig. 3-28)

- 1 Set the slider gear assembly in the unthreading completed position.
(Slider gear assembly set so that it is up against part T slider stop mold.)
- 2 In this condition, fit the threading ring into place, match the chassis hole (3ϕ) of part A with the S threading ring hole (1.5ϕ), and mesh with the drive gear teeth.
- 3 Attach ring roller (B) and fix in place with a stop washer.
- 4 Attach the ring roller, and fix in place with the adjustment plate.

Note:

After replacement and mounting are completed, adjust the ACE assembly as explained in the section on tape path adjustment.

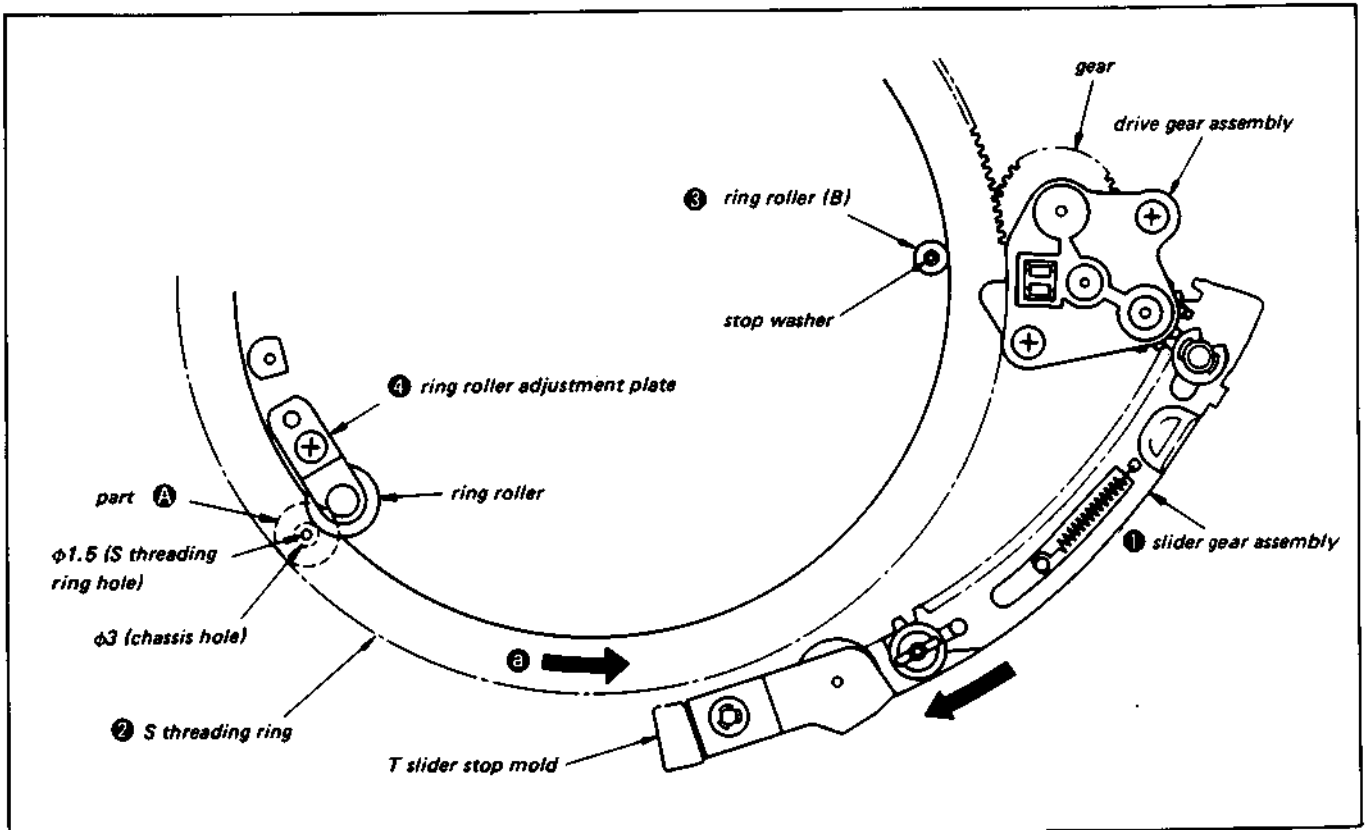


Fig. 3-28 S threading ring position adjustment

3-13. PINCH SNAP-FIT LIMITER GAP CHECK AND ADJUSTMENT

[Method of checking]

- 1) Set in the threading completed condition.
- 2) With the plunger pushed in all the way, confirm that the thickness of the pinch snap-fit limiter gap is 0.4 mm to 0.6 mm. If it is not, adjust as explained under [method of adjustment] below.

[Method of adjustment]

- ① With the pinch solenoid in the absorbed condition (when the plunger is pushed in all the way), loosen the adjustment screw.
- ② Press the pinch limiter adjustment plate in the direction of arrow **a** with an ordinary screwdriver, as in section **A** in the diagram, and adjust until the thickness of the gap in 0.4 mm to 0.6 mm.
Tighten the adjustment screw and then lock it to fix everything in place.

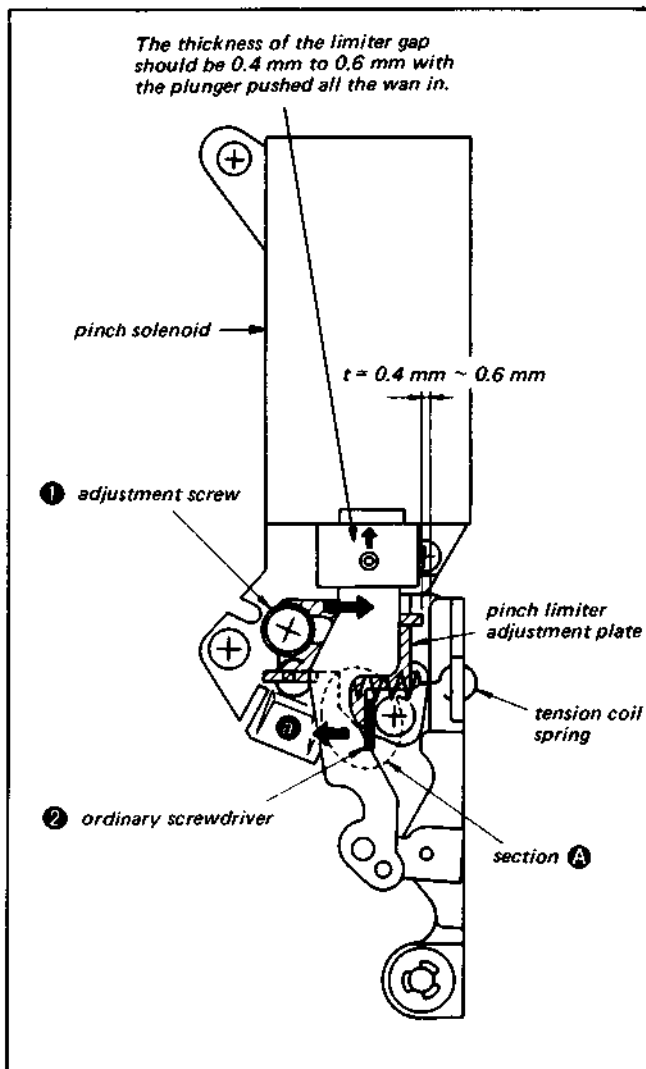


Fig. 3-29 Pinch snap-fit limiter gap adjustment plate

3-14. THREADING END SWITCH AND T COIL SENSOR

3-14-1. Threading End Switch (TE Switch) Position Check and Adjustment

[Method of checking]

Turn the S threading ring manually. Check to make sure that, when the lock roller moves from above the straight line part of the notch in the ring (Fig. 3-30 section A) to 1/3 of the way down it and back, the TE switch turns ON and OFF.

If the lock roller has to move outside of this range before the switch will turn ON and OFF, adjust as explained below.

[Method of adjustment]

- 1) Set the lock roller between the top of the notch in the S threading ring and 1/3 of the way down it, turn the TE switch in the direction of the arrow and, when the switch turns ON, fix the TE switch in place.
- 2) When the adjustment is completed, repeat the check as described above [method of checking].

[Removal]

- 1) Remove the tension coil spring that is attached to the S coil sensor assembly, then remove the S coil sensor.
- 2) Remove the lock arm assembly in the direction of arrow A.

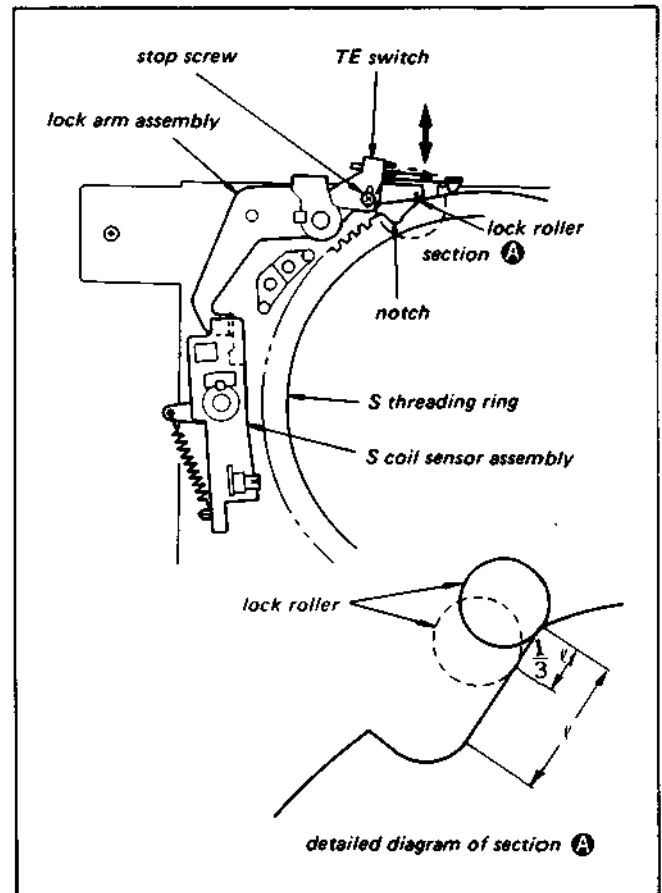


Fig. 3-30 TE switch position adjustment

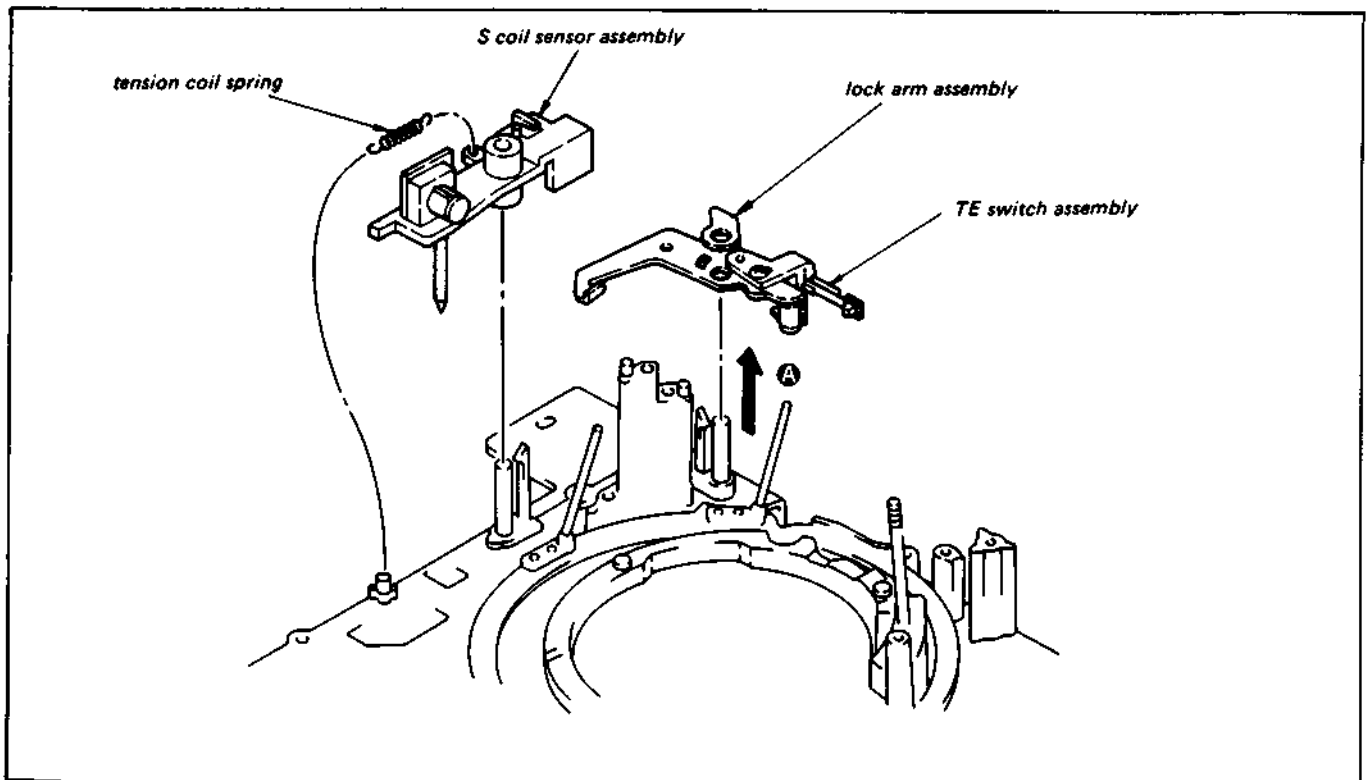


Fig. 3-31 Removal of the TE switch assembly and lock arm assembly

3-14-2. T Coil Sensor Mounting and Operation Check

[Method of checking]

Confirm that T coil sensor link ① is pressed and T coil sensor ② moves in the direction of arrow ⑤ when the T slider gear assembly is moved in the direction of arrow ④.

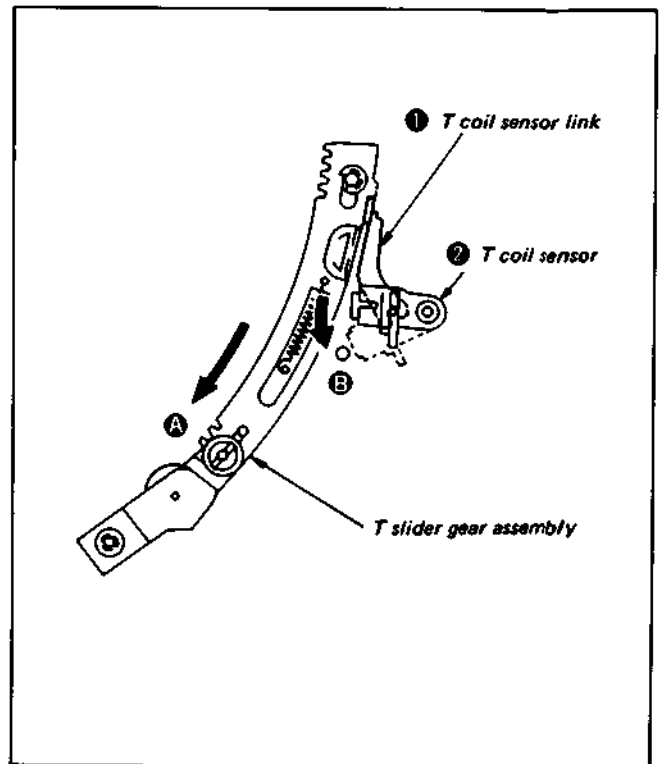


Fig. 3-32 T coil sensor operation check.

[Method of mounting]

- ① Place T coil sensor link in the prescribed position.
- ② Match up the T coil sensor hole with the chassis shaft ④ and insert. Place so that it engages with T coil sensor link.
- ③ Hook the tension coil spring on the T coil sensor and chassis claw.

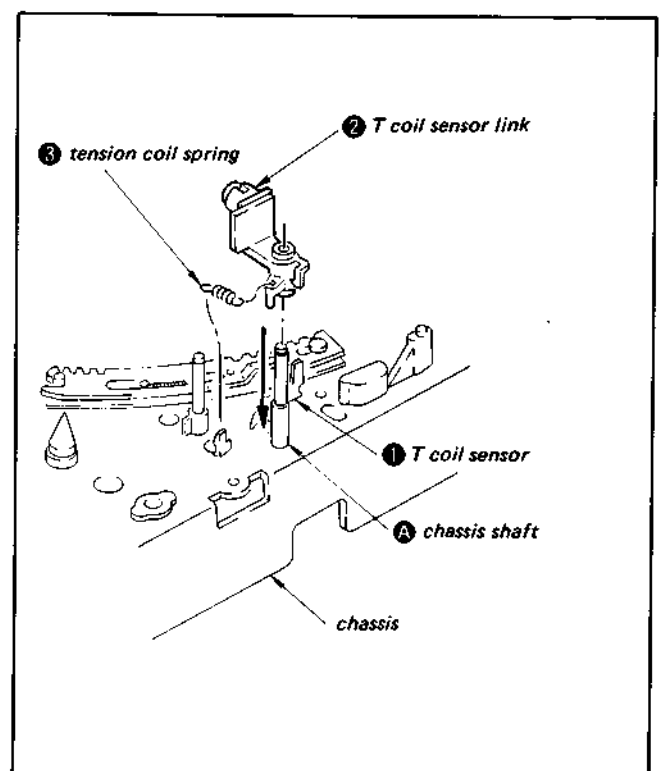


Fig. 3-33 T coil sensor link and T coil sensor mounting

3-15. REMOVAL AND ADJUSTMENT OF THE REEL BLOCK ASSEMBLY

3-15-1. Removal of the Reel Block Assembly

Refer to SECTION 2 DISASSEMBLY, 2-11 REMOVAL OF THE REEL BLOCK ASSEMBLY.

3-15-2. Adjustment of the Position of the Tension Regulating Lever

[Method of adjustment]

- 1) Put the unit in playback mode.
- 2) Loosen the adjustment spring until the tape guide pin of the tension regulating lever assembly is positioned to the outside of the outer circumference of shuttle guide 2, as shown in Fig 3-34. Then adjust by moving the tension regulating band assembly in the direction of arrow A.
- 3) After adjustment, tighten the adjustment screw, being careful that the tension regulating band assembly does not move.

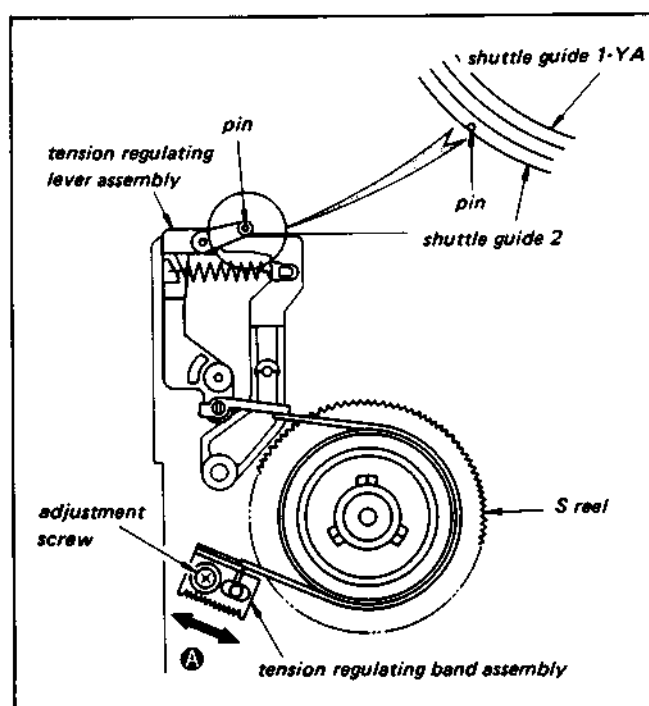


Fig. 3-34 Adjustment of the position of the tension regulating lever

3-16. ADJUSTMENT OF THE FORWARD BACK TENSION

[Method of measurement]

- 1) Insert the torque cassette (SL-0003C) and put the unit in playback mode.
- 2) Read the value on the meter on the S reel side after the needle has gone around about once.
The correct value is 31 g·cm – 35 g·cm

Notes:

- i) The set must be perfectly level during this measurement.
- ii) After the measurement, the tape can become slack when the stop button is pressed. If this happens set the unit in forward mode to take up the slack before removing the tape.

[Method of adjustment]

Move the position of the tension coil spring that is hooked on the tension regulating lever assembly in the direction of arrow **A** until the measured value falls within the correct range.

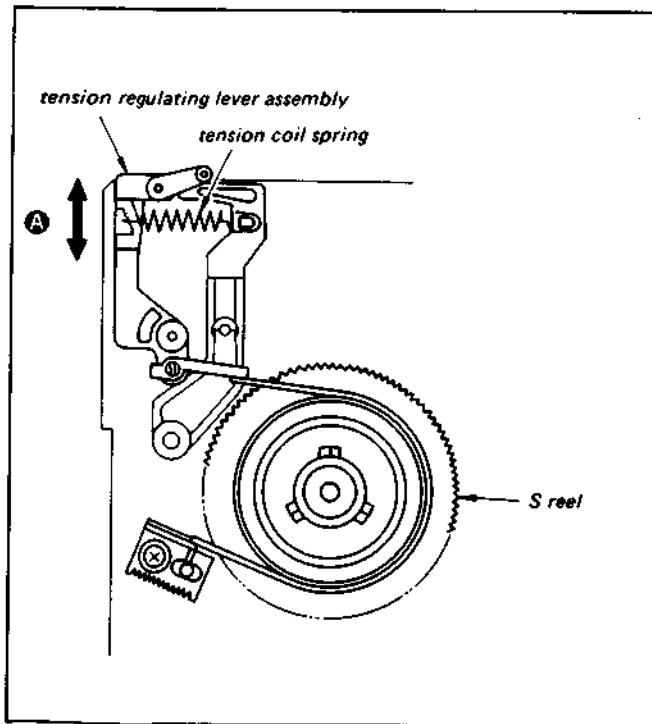


Fig. 3-35 Adjustment of the back tension

3-17. ADJUSTMENT OF THE FORWARD TORQUE

[Method of measurement]

- 1) Insert the torque cassette (SL-0003C) and start to record a telecast.
- 2) Read the value on the meter on the T reel side after the needle has gone around about once. The correct range is 80 g·cm \pm 5 g·cm.

[Method of adjustment]

- 1) Remove the front panel.
- 2) Turn potentiometer RV309 on SA-9 board to adjust the torque until its value falls within the correct range.

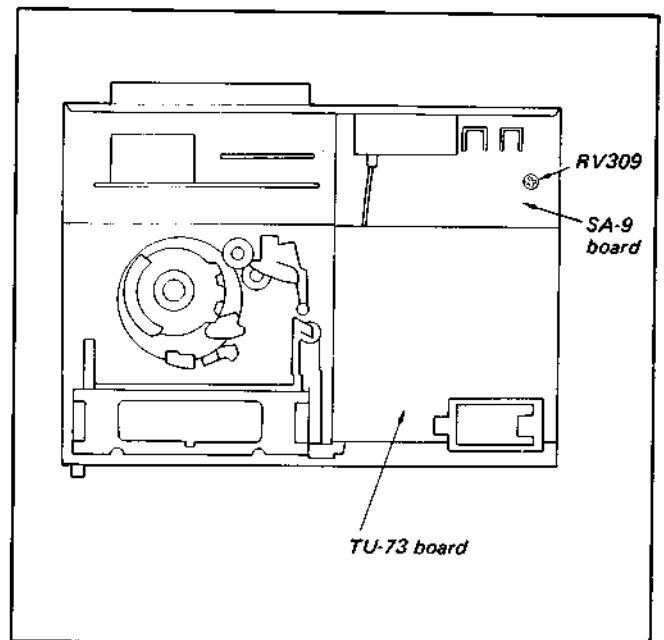


Fig. 3-36 Adjustment of the forward torque

Note:

When the forward torque is weakened during the measurement the tape can become slack, in which case the set will go into emergency stop mode. In such a case, the only switches that will work are the cassette eject switch and the power switch. It is necessary to temporarily remove the cassette, or to turn the power OFF and back ON.

4 TAPE PATH ADJUSTMENT

4-1. TRACKING ADJUSTMENT

This adjustment has significant effect on picture quality in each mode and tape interchangeability, so please perform it very carefully.

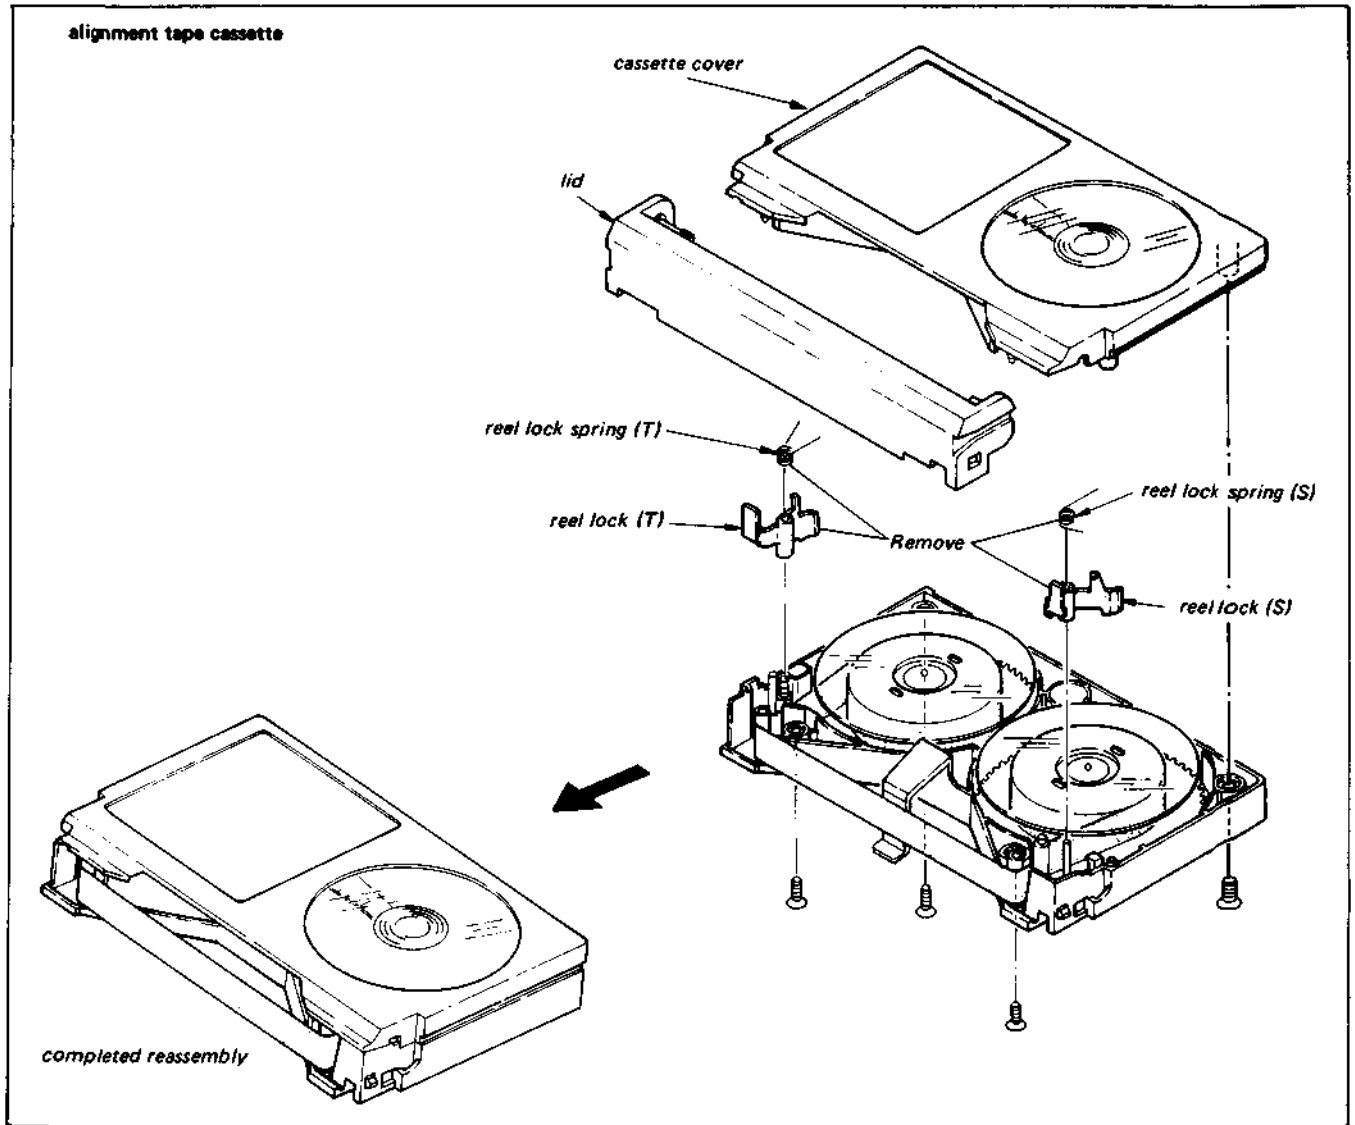


Fig. 4-1 Cassette Holder Remodeling

4-1-1. Preparation

- 1) When modifying alignment tape KRS-2H, use caution not to dislodge the tape reels from their correct position. Refer to Fig. 4-1 and remove the four screws that secure the upper cover to the lower cover.
Remove the upper cover and lid. Separate the lid and lid tension spring from the upper cover. Remove the two reel lock springs (T and S) and the two reel locks (T and S). Remount only the upper cover, being certain that it is properly mated with the lower cover. Secure the covers with four screws. **NOTE** — If the reel locks, and related springs are not removed from the cassette, the tape will load but will not thread. In this case the cassette will be ejected from the VTR approximately eight seconds after being loaded into the VTR.
- 2) Clean the tape contact surfaces (tape guides, drum, capstan shaft, pinch roller, ACE FE head surface) with chamois dampened with methanol.
- 3) Oscilloscope connections:
 - 1ch: CN702-5 pin (RY-4 board)
 - 2ch: CN702-3 pin (RY-4 board)
- 4) Play back the tracking portion of the modified alignment tape.
- 5) Confirm that the RF output waveform is flat, with maximum amplitude. (The waveform should increase and decrease, remaining flat, when the tracking control knob is turned back and forth.) Also, when the waveform is maximum, confirm that the RF output waveform variation and contact satisfy the specifications shown in Fig. 4-2. If they do not, follow the instructions in 6).
- 6) If the tracking control knob is turned and the entrance waveform does not flatten as shown in Fig. 4-3(a), perform the entrance side adjustment in 4-1-2. If the exit waveform does not flatten as shown in Fig. 4-3(b), perform the exit side adjustment in 4-1-3.

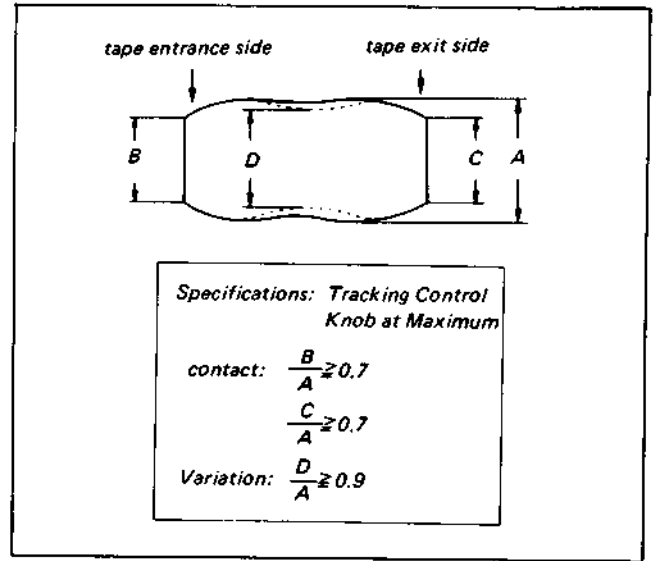
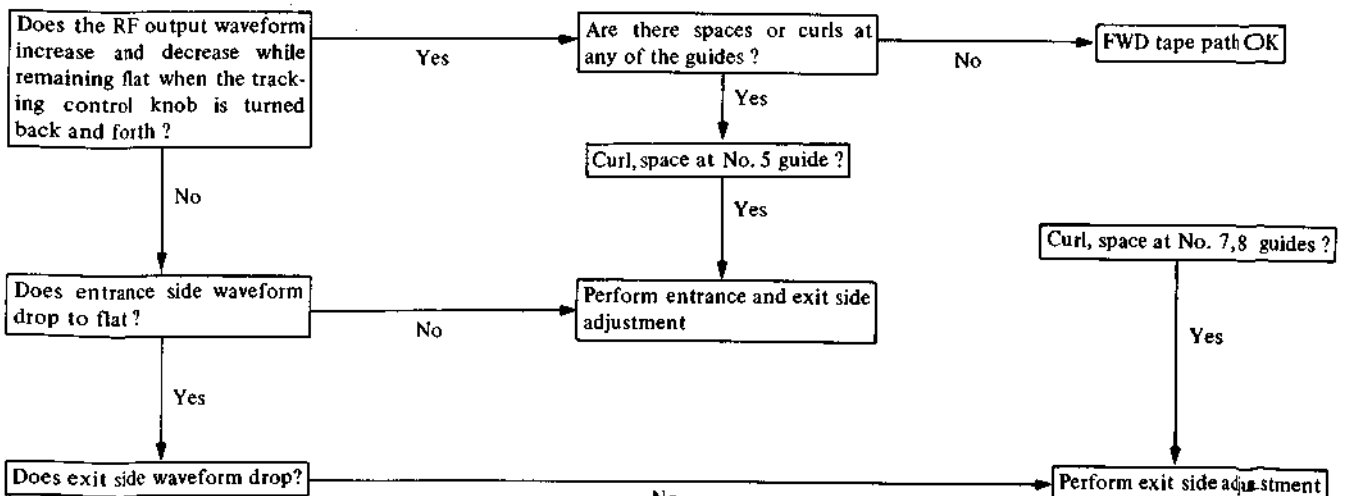


Fig. 4-2

	BOARD	CONNECTOR & PIN NO.
RF Output Waveform	RY-4	CN702-5
External Trigger	RY-4	CN702-3
Audio Out	SA-9	CN501-1
Video Out	AF-7	VIDEO OUT

Waveform Confirmation



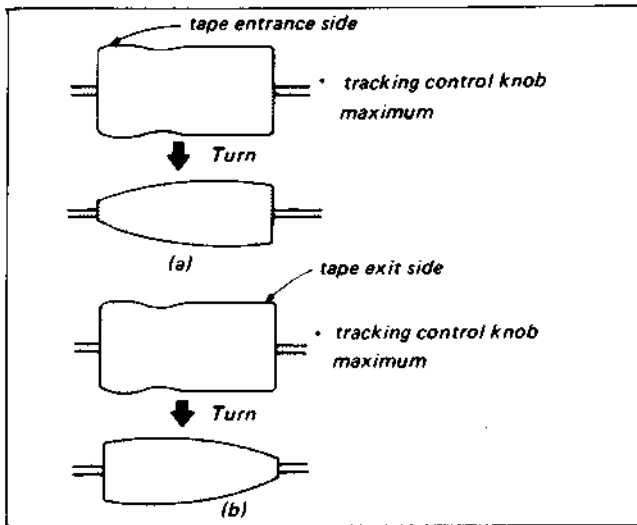


Fig. 4-3


Note:

After the indicated tape path adjustments that follow have been successfully completed using normal playback speed, operate the VTR in the Speed Search mode and look for curl at the tape guides. Readjust them if necessary. Then finally, playback a regulator LB30 tape as a check-up. See Section 4-4.

4-1-2. Entrance Side Adjustment

Always perform the exit side adjustment as well as the entrance side adjustment, Fig. 4-4 illustrates the guides and adjustment locations.

- 1) Turn tracking control knob counterclockwise to drop RF output waveform to about 60% of maximum
- 2) Turn No. 6 guide counterclockwise to free tape transportation to the drum. Use a special notched screw driver. (See section 1-8. Tools and Fixtures Required.)
- 3) Loosen No. 5 guide lock screw ①, turn No. 5 guide so that the entrance side waveform is almost flat, as shown in the figure below, and tighten lock screw ①. (See Fig. 4-5)

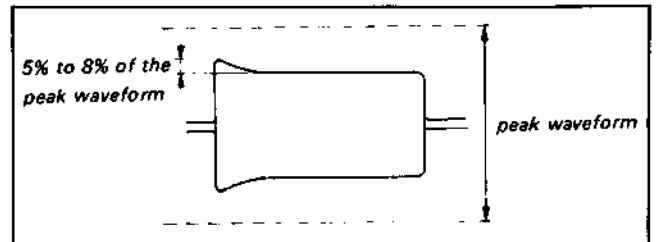

Note:


Be sure that the waveform remains as shown in the figure after tightening the lock screw ①.

- 4) Next lower No. 6 guide and flatten the waveform.
- 5) Push the tape down between No. 4 and No. 5 guides by hand, and confirm that the entrance side RF waveform returns to the original state after being lowered. If the waveform is not as illustrated, or if the waveform does not flatten, or takes too much time to flatten after the entrance side tape is pushed down, follow the procedure below to adjust.
- 6) Check No. 5 guide for space and curl. If space or curl exists, follow the appropriate adjustment procedure.

Note:

Be sure that there is tape tension upper and lower balance between No. 3 - No. 4 - No. 5 guides. Perform No. 3 or No. 5 guide lateral adjustment if necessary.

Entrance Side Flow Chart

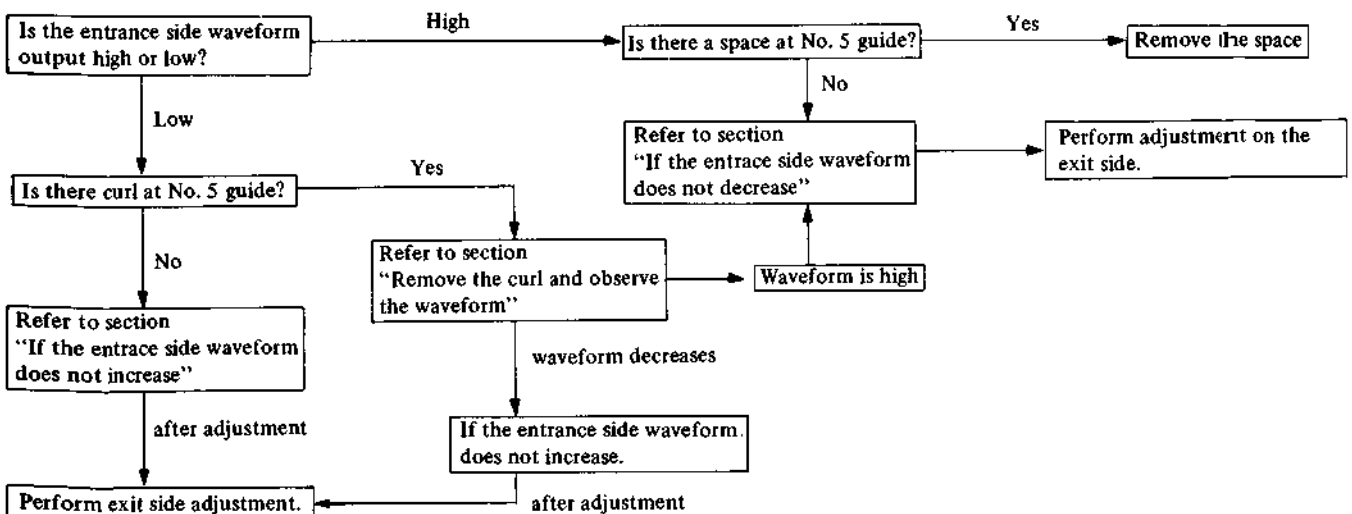

Note:

Upon failing to obtain the waveforms shown above, press down the tape at the entrance side, adjust as indicated below when a long time is needed for the waveform to return to the horizontal, or when it does not return at all.

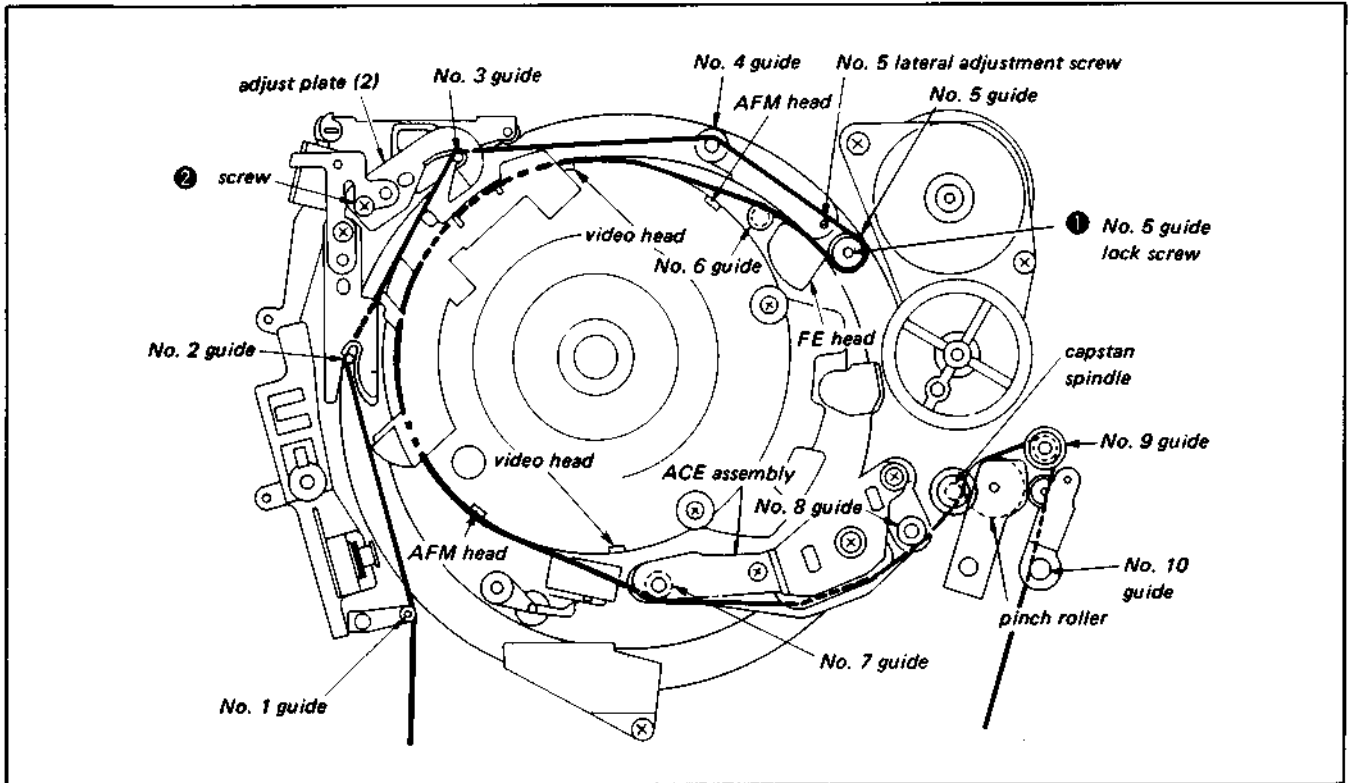


Fig. 4-4 Tape Guide Layout

[If the waveform entrance output does not increase]

- 1) Check to make sure tape upper and lower tension is equal between No. 3 — No. 4 — No. 5 guides. If it is not, perform No. 3 or No. 5 guide lateral adjustment.

Note:

Be sure there is no space at No. 4 guide lower flange.

- 2) Raise No. 4 guide lower flange to raise entrance output.

Note:

No. 4 guide lower flange may be raised 0.4 mm from its lowest position.

- 3) If the waveform does not increase in step 2), turn No. 5 lateral adjustment screw slightly (less than 360°) counterclockwise.

[If there is space at No. 5 guide]

Turn No. 4 guide counterclockwise to raise the tape and remove the space at No. 5 guide.

Note:

Be careful not to create a large space at the bottom of No. 4 guide.

[If the waveform entrance output does not decrease]

- 1) Move the No. 3 guide adjust plate away from the drum, and tighten screw ② at the point just before the lower tension of the tape loosens.
- 2) If the tape is touching No. 4 guide lower flange, lower the flange. If it is floating, adjust No. 5 guide laterally.

[If there is curl]

- 1) When there is a space at the bottom of No. 4 guide:
Lean the adjust plate of No. 3 guide toward the outside until the point just before the lower tape tension loosens.
- 2) When there is curl but no space at the bottom of No. 4 guide:
 - i) Confirm that No. 4 guide is not raised too high. Turn clockwise to lower if necessary.
 - ii) If this does not solve the problem, tighten No. 5 guide lateral adjustment screw by turning clockwise until the curl disappears.

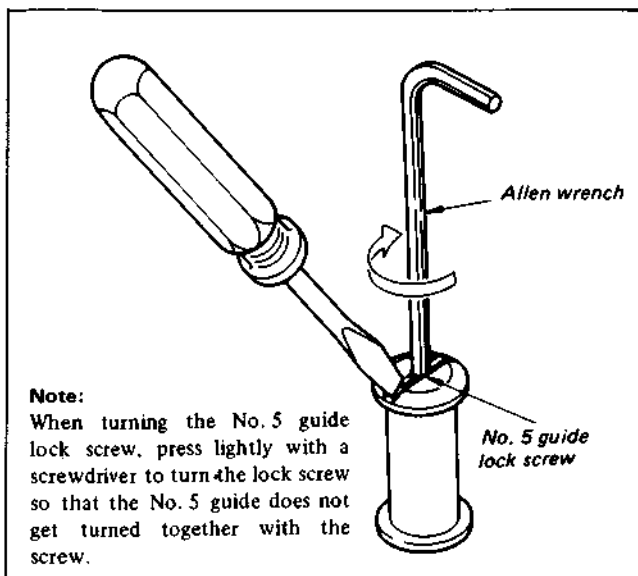


Fig. 4-5

4-1-3. Exit Side Adjustment

- 1) Turn the tracking control knob counterclockwise to lower the RF output waveform to about 60% of the maximum.
- 2) Raise No. 7, 8 guides to free the tape transportation, and check the waveform. (This waveform is called "exit free waveform".)

Note:

Be careful not to raise the guides too much. They should be raised about 0.3 mm, and also, the tape should not touch the ACE head bottom flange. (Fig. 4-6)

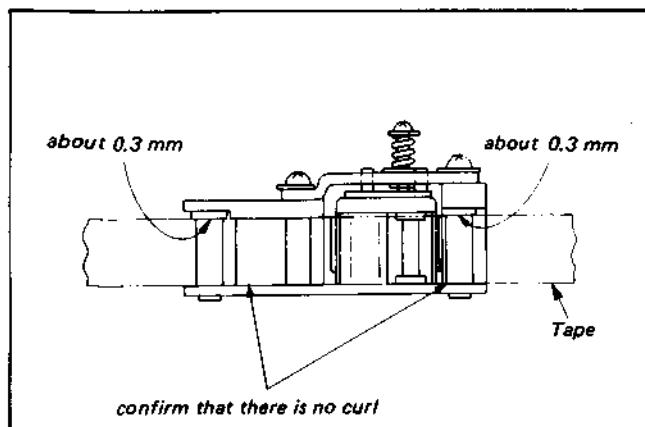


Fig. 4-6

- i) If the exit free waveform is within the range illustrated in Fig. 4-7(a), (b), proceed with exit side adjustment.
- ii) If it is not within the specified range, follow the adjustment procedure in 4-3.

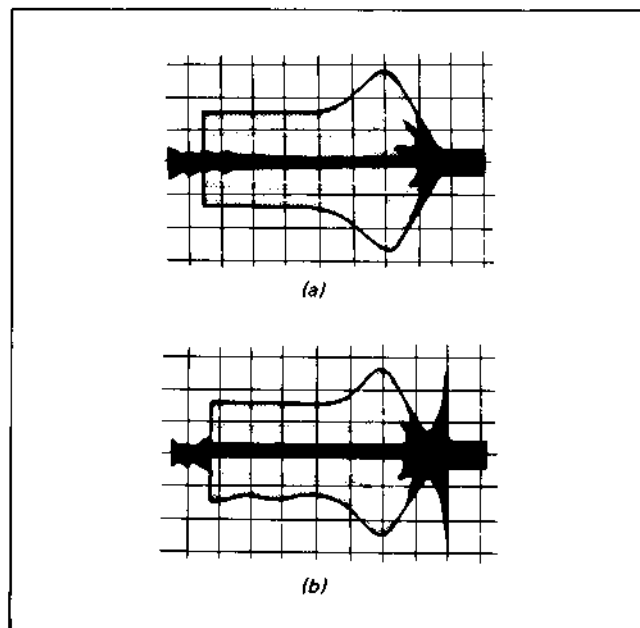


Fig. 4-7

- 3) Flatten the waveform with No. 7 guide, and match No. 8 guide to the tape. (Lower the guide to the point just before the waveform changes, and where there is no curl.) At this time, the exit side waveform may rise slightly, so lower No. 7 guide again to flatten it, and match No. 8 guide to the tape.
- 4) Confirm that there is no curl at No. 7, 8 guides in forward mode.
- 5) Confirm that curl and space do not appear at No. 8 guide in reverse mode. If curl or space appears, adjust with No. 9 guide.

4-2. ADJUSTMENT AFTER REPLACEMENT OF THE ACE ASSEMBLY

Perform the following adjustments after removing or replacing the ACE assembly.

4-2-1. Tracking Adjustment

- 1) Position the parallel plate (Fixture, SL-0657) at shown in Fig. 4-8, and turn audio head lateral adjustment screw ① to adjust the audio head vertically.

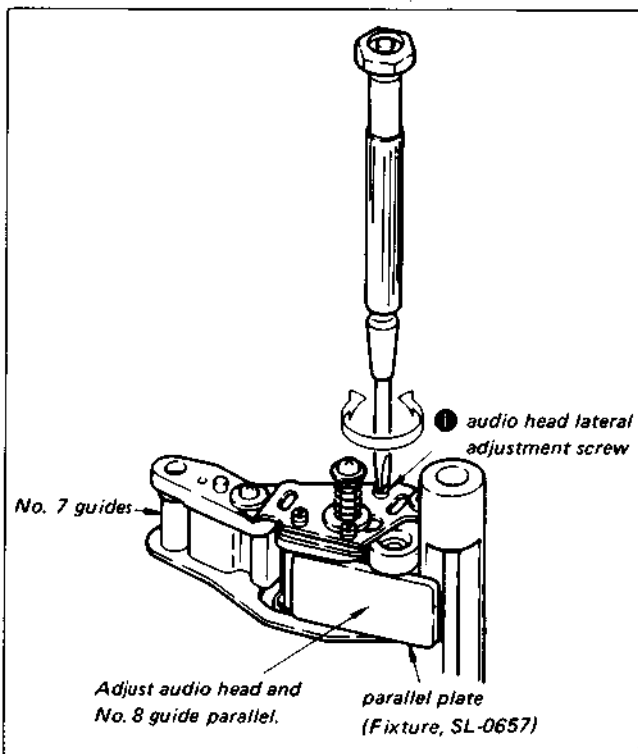


Fig. 4-8

- 2) Turn the tracking control knob counterclockwise to lower the RF output waveform to about 60% of the maximum.
- 3) Play back the tracking portion of the alignment tape raise No. 7, 8 guides about 0.3mm and check the exit free waveform of the RF output waveform.

Note:

Be sure that the tape does not touch the bottom flange of the ACE assembly.

- i) If the waveform is within the range illustrated in Fig. 4-7(a), (b), proceed with the adjustment.
- ii) If the exit free waveform appears as shown in Fig. 4-9, turn the ACE lateral adjustment screw clockwise until the waveform is within the range illustrated in Fig. 4-7(a), (b).
- iii) If the exit free waveform appears as shown in Fig. 4-10, turn the ACE lateral adjustment screw counterclockwise to obtain the waveform shown in Fig. 4-9, then turn clockwise again until the waveform is within the range shown in Fig. 4-7.

- 4) Turn the No. 7 guide to flatten the waveform, and match the No. 8 guide to the tape. (Lower the guide until the point just before curl appears at No. 8 guide flange.)
- 5) If the RF output waveform is as shown in Fig. 4-9, where the exit side is not flat, lower No. 7, No. 8 guides again to flatten it.

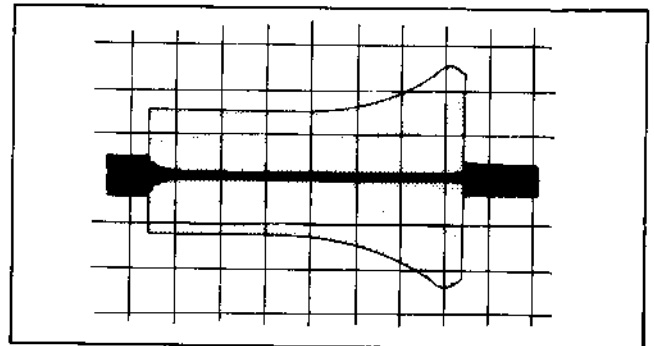


Fig. 4-9

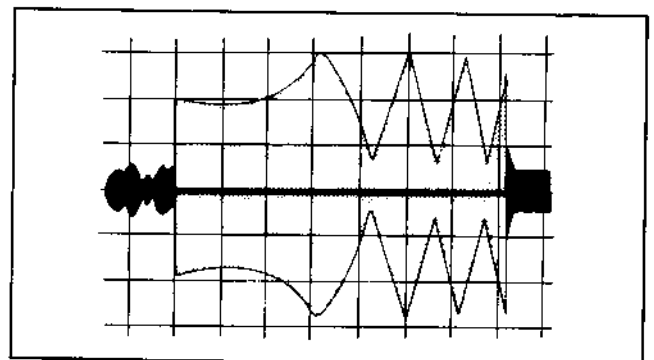


Fig. 4-10

4-2-2. Audio Head (ACE Assembly) Azimuth Adjustment

- 1) Connect the oscilloscope as follows:
CN501 1 pin (SA-9 board)
Play back the 5 kHz portion of the alignment tape.
- 2) Turn the azimuth adjustment screw (Fig. 4-11) so that the amplitude of the 5 kHz waveform is maximum.

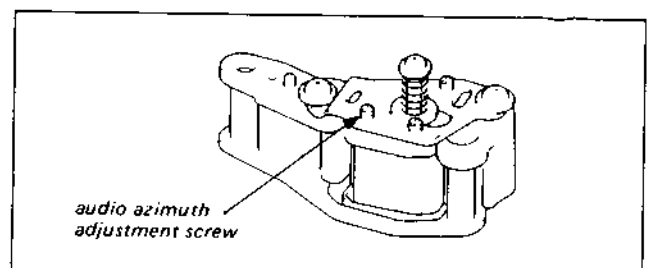


Fig. 4-11

4-2-3. CTL Head (ACE Assembly) Position Adjustment

This adjustment is both mechanical and electric: mechanically, it is the adjustment of the CTL head position, and electrically, it is the tracking control center adjustment. The procedure involves performing the electrical adjustment first, then the head position adjustment.

- 1) Connect the oscilloscope as follows:
 1ch: CN702 5 pin (RY-4 board)
 2ch: CN501 1 pin (SA-9 board)
 External trigger: CN702 3 pin (RY-4 board)
- 2) Play back the tracking portion of the alignment tape.
- 3) Turn the tracking control knob back and forth, and confirm that the output waveform level is maximum at the center click position, and that the 0 level of the audio signal is at the point where the RF output waveform Bch waveform appears, as shown in Fig. 4-12.
 If adjustment is necessary, proceed as follows.

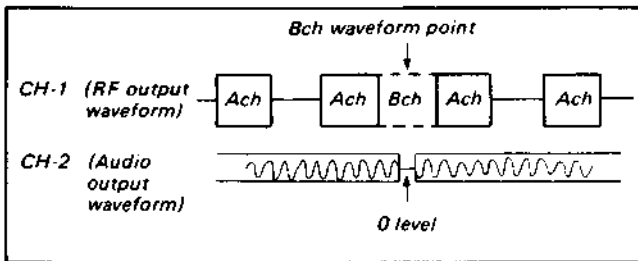


Fig. 4-12

- 4) Tracking Control Center Adjustment
- 5) CTL Head Position Adjustment
 Set the tracking control knob at the center detent position and loosen the two ACE assembly position adjustment screws ①. As shown in Fig. 4-13 slide the ACE assembly with a screwdriver until it is in the position shown in Fig. 4-12 and the RF output waveform is maximum. Tighten the screws ① when this position is obtained.
- 6) Replay the color bars of the alignment tape and check the picture quality.

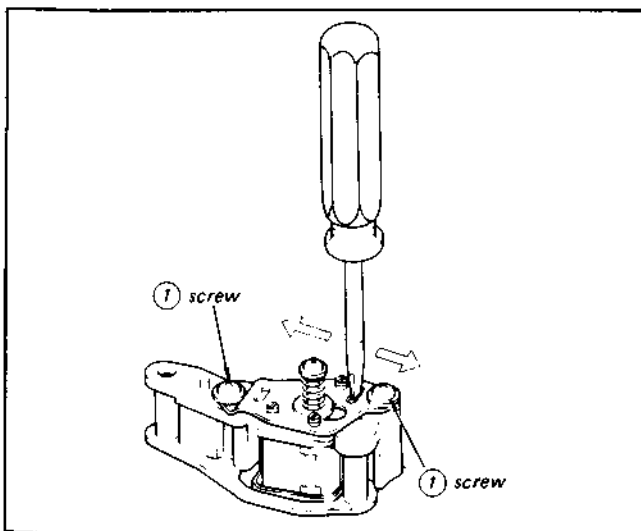


Fig. 4-13

4-2-4. Audio Head (ACE Assembly) Height Adjustment

Perform this adjustment only after completing the exit side tracking adjustment.

- 1) Oscilloscope connection:
 1ch: CN501 1 pin (SA-9 board)
 Replay the 5 kHz portion of the alignment tape.
- 2) Turn the audio head height adjustment screw ① and the lateral adjustment screw ② (Fig. 4-14) until the audio output waveform amplitude is maximum.

Note:

Both of these adjustment screws should be turned in the same direction at the same angle, less than 30°.

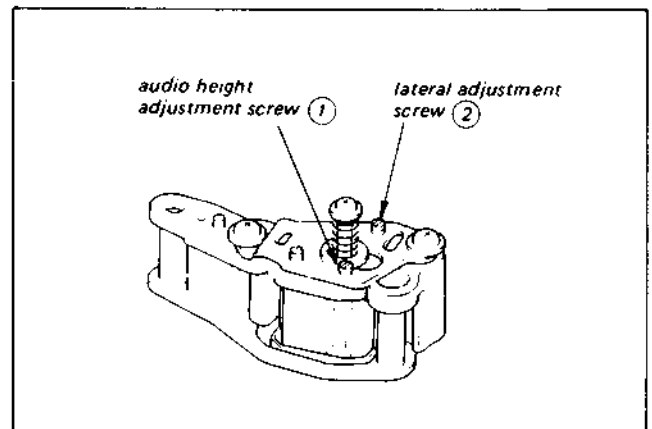


Fig. 4-14

4-3. ADJUSTMENT AFTER REPLACEMENT OF THE CAPSTAN MOTOR

- 1) Perform the vertical adjustment of the capstan shaft according to 3-6. Replacement and Adjustment of Capstan Motor.
- 2) Play back the tracking portion of the alignment tape. Connect the oscilloscope as follows:
1ch: CN702 5 pin (RY-4 board)
2ch: CN702 3 pin (RY-4 board)
- 3) Turn the tracking control knob clockwise to lower the RF output waveform to about 60% of the maximum.
- 4) Raise No. 7, 8 guides a little, and check the exit free waveform.
 - i) If the exit free waveform is within the range indicated in Fig. 4-15(a), (b), proceed from step 5).

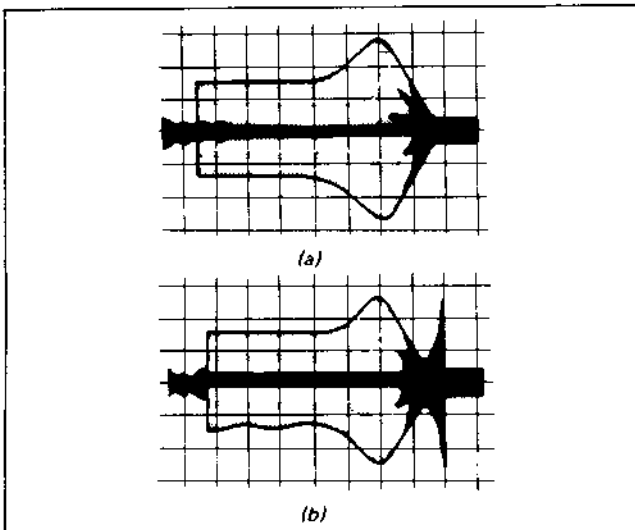


Fig. 4-15

- ii) If the peak of the exit free waveform is smaller than that illustrated in Fig. 4-15(a) (e.g. Fig. 4-16), loosen the lock screw, then turn the capstan adjustment screw until the waveform is within the specified range.

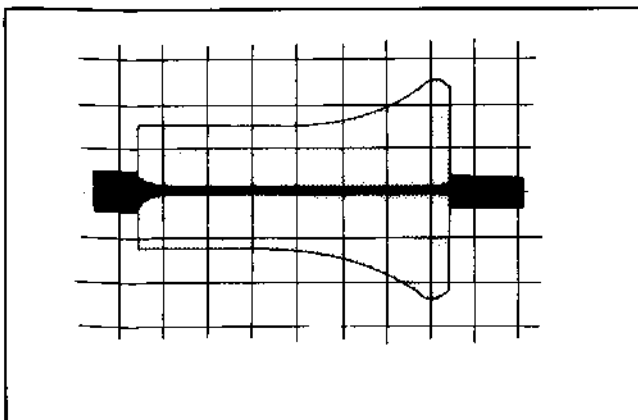


Fig. 4-16

- iii) If the peak shape of the exit free waveform differs from that shown in Fig. 4-15(b) (e.g. Fig. 4-17), loosen the lock screw, then turn the capstan adjustment screw clockwise until the waveform is within the specified range.

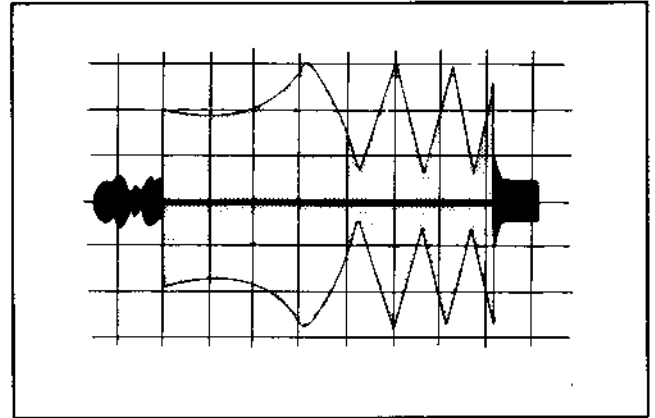


Fig. 4-17

Note:

After turning the capstan adjustment screw wait until the waveform stabilized (about 10 – 15 seconds) before continuing with the adjustment.

- 5) Lock the capstan lock screw. (Turn clockwise until it stops, then turn about 30° more. At this point, the exit free waveform will change slightly, and if it goes out of the range shown in Fig. 4-15(a), (b) return to step 4) and re-adjust.
- 6) Flatten the waveform with No. 7 guide, and match No. 8 guide to the tape. If the exit waveform rises, flatten it again with No. 7 guide and match No. 8 guide to the tape again.
- 7) Confirm and adjust according to 4-1-3, exit side adjustment procedure items 4), 5).

Note:

Check with L830 tape.

4.4. THIN TAPE MOVEMENT CHECK METHOD DURING TAPE PATH ADJUSTMENT

After confirming the tape path by using the procedures of section 4-1 through 4-3, check the thin tape movement by the procedure given below.

- 1) Prepare one reel of the commercial L-830. Remove the cassette lid with reference to Fig. 4-1.
- 2) Run L-830 prepared in the procedure 1 in the PLAY mode and check the following points;

i) Entrance Side

Check if the tape bends and is damaged on the No. 4 guide bottom flange, the No. 5 guide top flange and the No. 6 guide top flange. (The curl of the tape is allowed), but the bend of the tape is not allowed.) (Fig. 4-18)

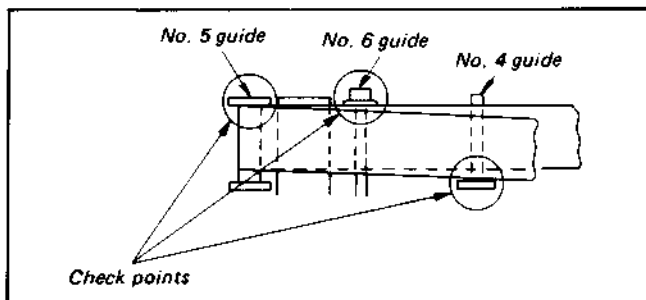


Fig. 4-18

ii) Exit side

Check if the tape bends and is damaged on the No. 7 guide top flange, the No. 8 guide top flange and the No. 10 guide top and bottom flanges. (The curl of the tape is allowed, but the bend of the tape is not allowed.) (Fig. 4-19)

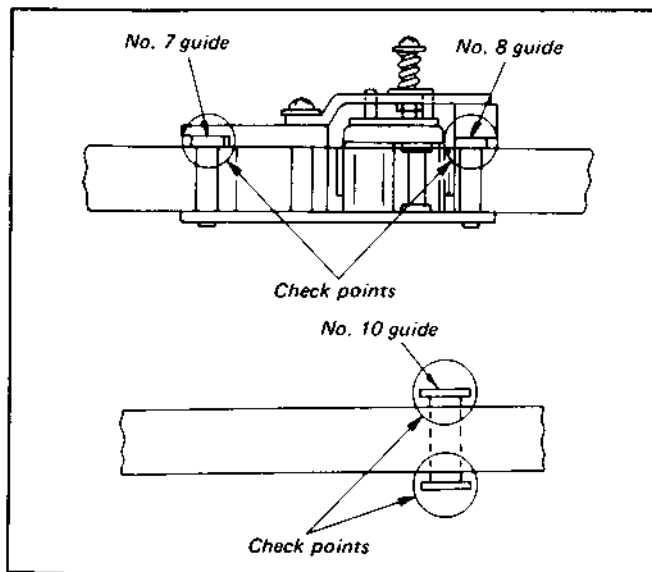


Fig. 4-19

- 3) If the tape did not run normally in step 2, readjust the tape path by using.
 - a) The tape did not run normally on the entrance side, refer to 4-1-2.
 - b) The tape did not run normally on the exit side, refer to 4-1-3.

4.5. BETA HI-FI RF OUTPUT WAVEFORM CHECK

- 1) Set the BETA HI-FI RECORD button inside the front door to the SOUND side.
- 2) Set both REC slide knobs L and R of the REC level meter to "0".
- 3) Record in a no-signal state.
- 4) Play back the recorded part and check that the RF output satisfies the conditions described in Fig. 4-20. (Operate this procedure for both Ach and Bch)

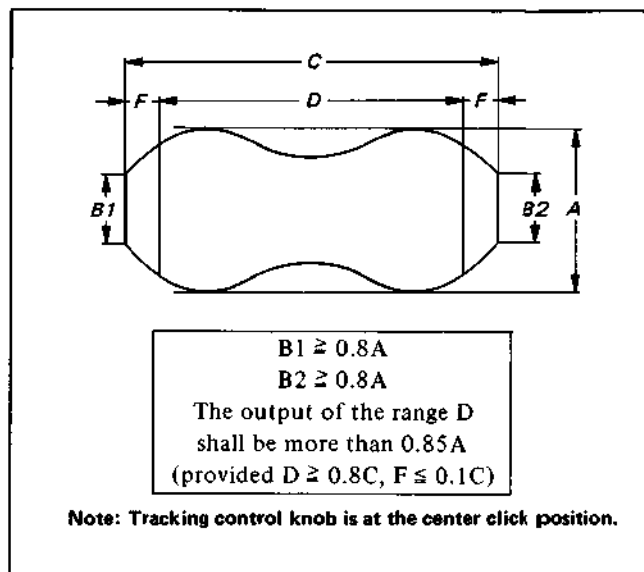


Fig. 4-20

	BOARD	CONNECTOR, TP & PIN No.
RF Output Waveform (Ach)	AF-7	CN008-1P
RF Output Waveform (Bch)	AF-7	CN008-2P
External Trigger	AF-7	CN008-4P

SECTION 5

ELECTRICAL ALIGNMENT

All the electrical alignment can be performed by using the equipment mentioned below, the alignment tape, and the PAL colour bar signal (100%).

[Equipment Required]

- (1) PAL Colour Monitor TV
- (2) Oscilloscope, Dual-trace, Bandwidth ... more than 10 MHz with delay mode
- (3) Frequency Counter
- (4) PAL Colour-Bar Generator
- (5) Digital voltmeter
- (6) VOM (20 k Ω /V)
- (7) Audio Signal Generator
- (8) Audio level meter (VTVM)
- (9) Attenuator
- (10) Spectrum analyzer
- (11) Alignment Tape, type: KR5-2H, Code No. 8-969-995-52
KR5-10C, Code No. 8-192-508-01
- (12) Alignment Tool (Adjusting screwdriver for semi-fixed resistors and coils)
Jig No. SL-0001, Code No. J-6080-001-A

[Setup for Alignment]

The antenna should be connected correctly to the antenna input terminal of the videocassette recorder.

It is important that the video output signal satisfies the specification because the telecast signal received by the incorporated tuner of the videocassette recorder is utilized as the adjustment signal of the machine. The incorporated tuner should be set to the channel with the best reception. The video signal should be checked with an oscilloscope connected to VIDEO OUT (BNC connector). Verify that the sync signal amplitude is approx. 0.3 Vp-p and the video signal amplitude is approx. 0.7 Vp-p at peak. Adjust the fine tuning while observing the signal and the TV screen so that the burst signal amplitude becomes approx. 0.3V \pm 0.1 Vp-p. Also confirm that there is not spikes observed at the sync signal portion. (See Fig. 5-1.)

The video (colour bar) signal for the alignment is shown in Fig. 5-1.

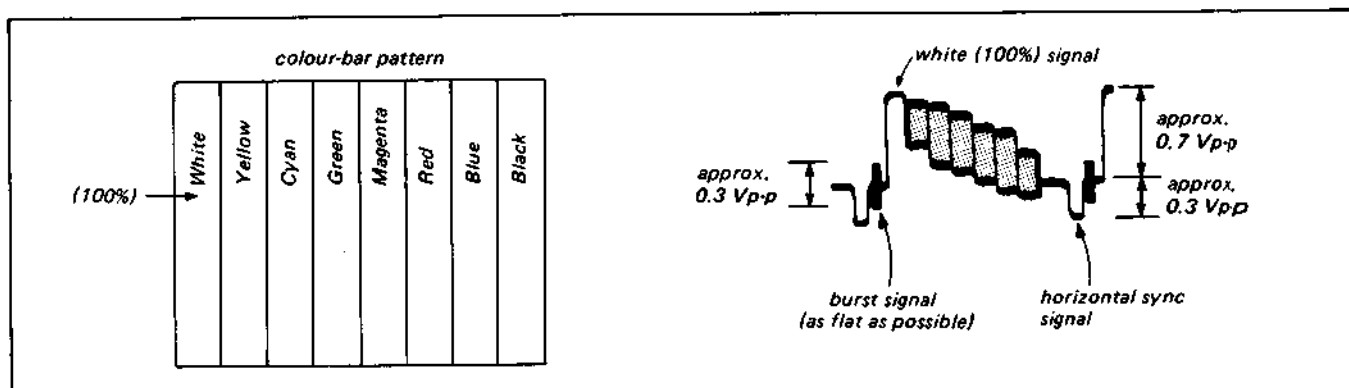


Fig. 5-1. Video (colour-bar) signal

[Alignment Tape]

KR5-2H

	Video signal	Audio signal	Playing time	Use for
1.	Colour-bars	3 kHz - 5 dB	5 min	General performance, tape speed checks, switching position adjustment.
2.	Monoscope	333 Hz - 25 dB	5 min	Video head dihedral, audio level adjustment.
3.	RF sweep	5 kHz - 25 dB	5 min	Video, audio frequency characteristics, audio azimuth adjustment. marker: 1, 2, 3.58, 4.5, 5.2 MHz
4.	Tracking 1 MHz (CH-B) *1 (Channel B is inserted in every 3 frames.)	1 kHz - 5 dB *2 (Signal is dropped out in the positions where channel B is inserted.)	5 min	Tracking, Audio height adjustments CTL Position check. (Check if *1 and *2 are the same position.)

KR5-10C (Beta hi-fi Audio)

	Video signal	Audio signal	Playing time	Use for
	Colour-bars	Beta hi-fi 400 Hz \pm 66.7 kHz DEV	30 min	Beta hi-fi Audio level, balance adjustment.

[Alignment Tool for Semi-fixed Variable Resistors and Coils]

Semi-fixed variable resistors and inductances should be adjusted with the alignment tool exclusively prepared for the adjustment of the components. A common screwdriver is too large for adjusting the components from the conductor side of a printed circuit board.

The metal blade of the alignment tool is used for variable resistors and trimmer capacitors and the plastic tip is used for variable inductances.

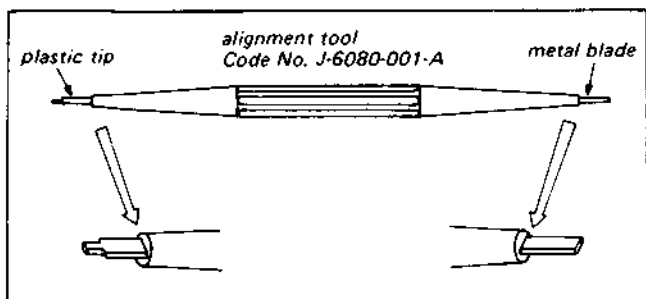


Fig. 5-2. Alignment tool

[Required levels and Impedances of Input and Output]

Video

Input VIDEO IN: BNC connector
 1.0 V \pm 1.0 V (p-p)
 75 ohms, unbalanced,
 sync negative

Output VIDEO OUT: BNC connector
 1.0 V (p-p) \pm 0.1 V (p-p)
 75 ohms, unbalanced,
 sync negative

Audio

Input AUDIO IN: phono jacks
 47 kilohms, -10 dBs
 (0 dBs = 0.775 V rms)

Outputs AUDIO OUT: phono jacks
 Load impedance less than
 10 kilohms
 -10 dBs with 47 kilohms load,
 unbalanced
 PHONES: stereo minijack
 -26 dBs, 8 ohms

[Colour-Bar Signal]

The 100% colour-bar signal recorded on the Alignment tape is shown in Fig. 5-3.

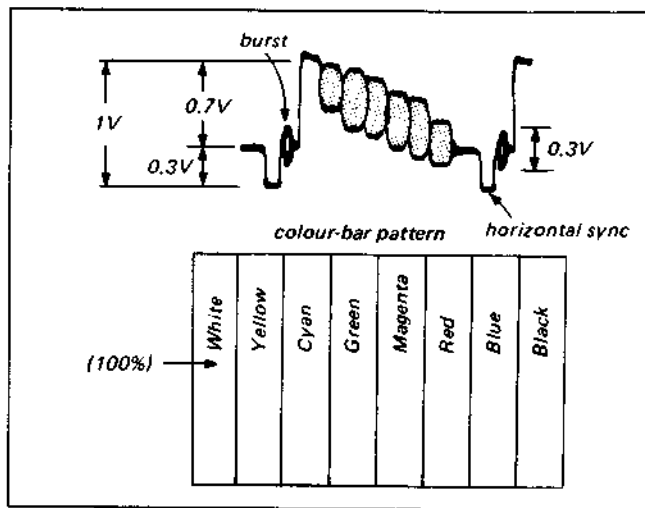


Fig. 5-3. Colour-bar signal recorded on the alignment tape

[75 Ω Terminating Method]

To terminate the video output terminal follow the steps shown in Fig. 5-4.


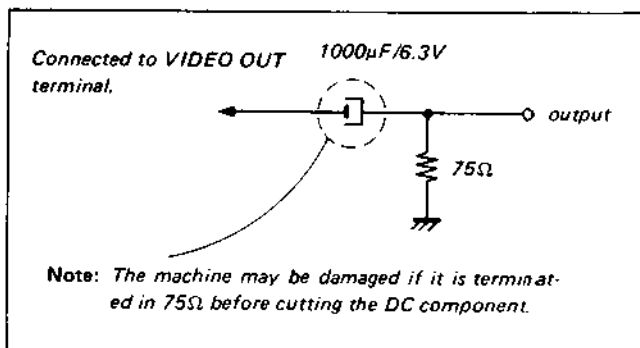


Fig. 5-4. 75 Ω terminating circuit

[Adjustment procedure]

Adjust in the order given below.

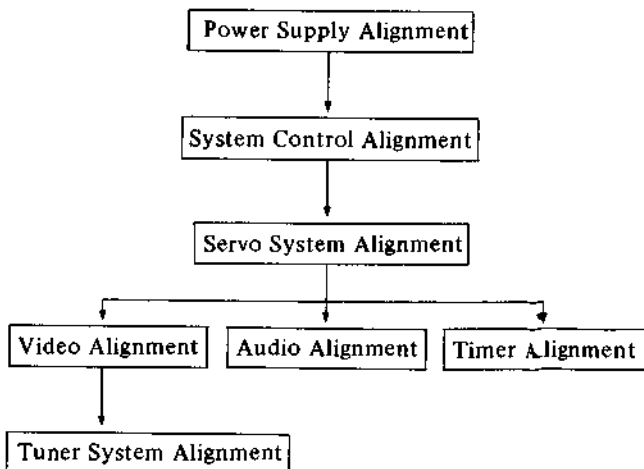

5-1. POWER SUPPLY CHECK (SA-9 Board)

Measure an E-E mode (power supply switch ON).

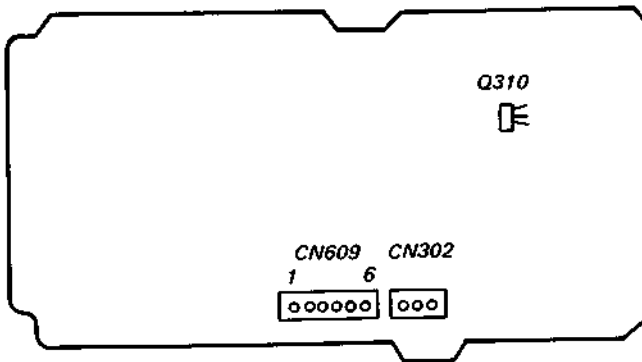


Fig. 5-5. Conductor layout

1. Switched 12 V Check
Pin ③ of CN609 shall be 12.0 ± 0.3 V.
2. Switched 9 V Check
Pin ⑤ of CN609 shall be 9.0 ± 0.1 V.
3. Unswitched 5 V Check
Pin ① of CN609 shall be 5 ± 0.1 V.
4. Unswitched 10 V Check
Pin ⑥ of CN609 shall be -10 ± 1 V.
5. Unswitched 5 V Check
Emitter of Q310 shall be 5 ± 0.2 V.

5-2. SYSTEM CONTROL CHECK (SA-9 Board)

1. Clock Frequency Check

Mode: E-E
Signal: None
Frequency counter: Pin ⑥② of IC601
Check: $f: 6.0 \text{ MHz} \pm 0.12 \text{ MHz}$

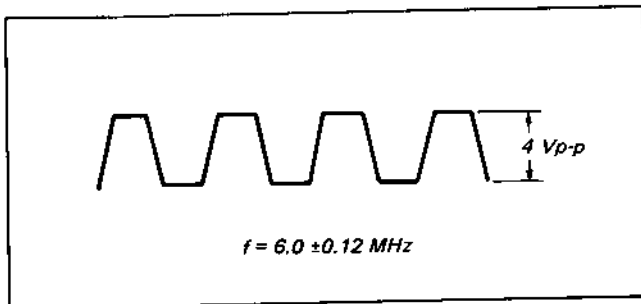


Fig. 5-6. Clock frequency check

5-3. SERVO SYSTEM ALIGNMENT

Alignment Sequence

1. Drum servo system alignment
2. Capstan servo system alignment

5-3-1. Drum Servo System Alignment

- 1) Drum DC Bias Adjustment (SA-9 Board)
Mode: REC
Oscilloscope: TP306 (Emitter of Q335)

[Alignment method]

Adjust to $1.8 \text{ V} \pm 0.1 \text{ V}$ with RV305. (See Fig. 5-7.)

- 2) LOCK Phase Adjustment (SA-9 Board)

Mode: REC

Oscilloscope: CH-1 TP303 (Pin ④⑧ of IC301)

CH-2 TP304 (Pin ③⑤ of IC301)

[Alignment method]

Adjust to $T=500 \pm 30 \mu\text{sec}$ with RV303. (See Fig. 5-7.)

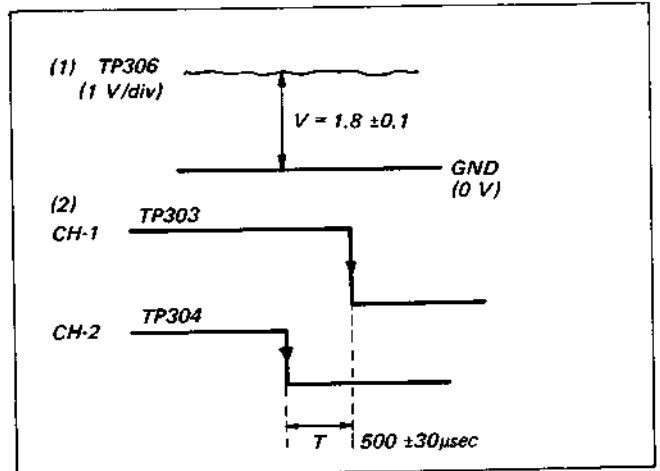


Fig. 5-7. Drum DC bias adjustment

- 3) RF Switching Position Adjustment (SA-9 Board)

Mode: Playback

Signal: Alignment tape colour-bar or monoscope

Oscilloscope: CH-1 TP304 (Pin ③④ of IC301)

CH-2 Pin ① of CN301

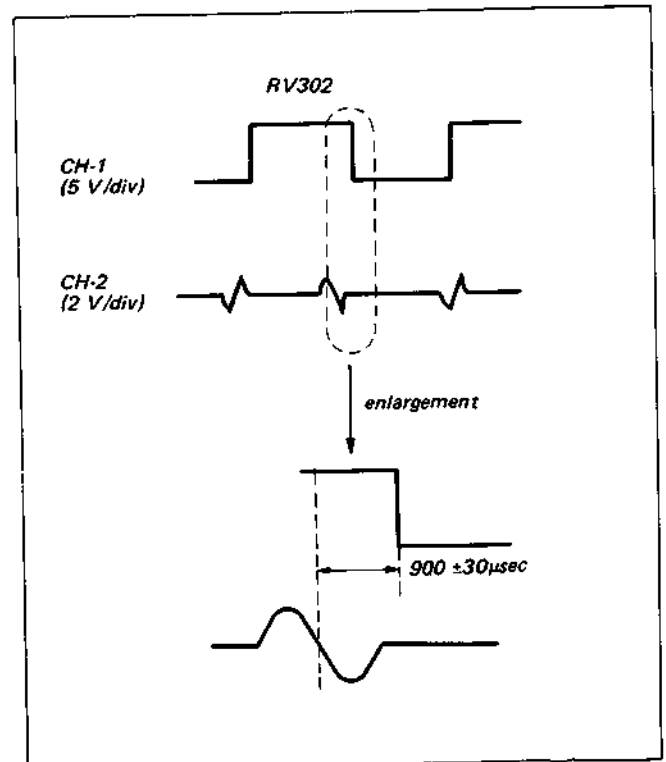


Fig. 5-8. RF switching position adjustment (1)

[Adjustment method]

- i) Adjust to $900 \mu\text{sec} \pm 30 \mu\text{sec}$ with RV302. (See Fig. 5-8.)
- ii) Adjust to $900 \mu\text{sec} \pm 30 \mu\text{sec}$ with RV301 at the rising edge. (See Fig. 5-9.)

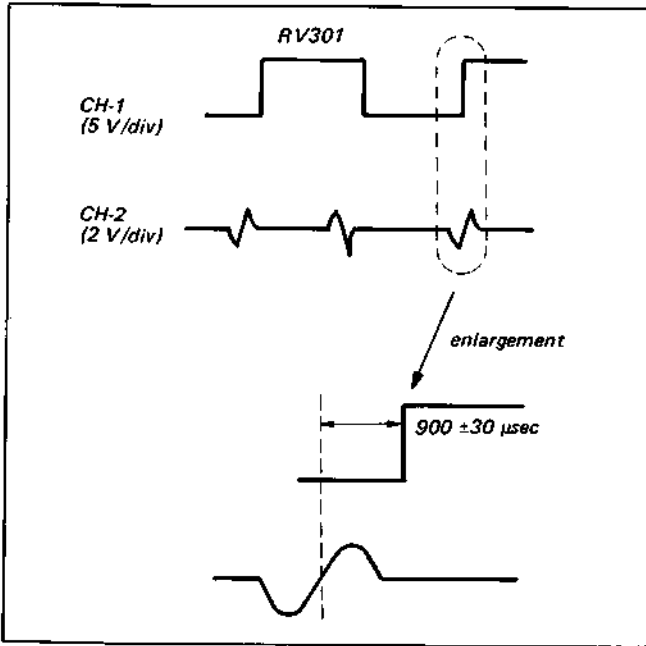


Fig. 5-9. RF switching position adjustment (2)

5-3-2. Capstan Servo System Alignment (SA-9 Board)

- 1) C/R f_H Correction Adjustment
 Mode: PICTURE SEARCH (FWD)
 Signal: Alignment tape colour-bar or monoscope
 Oscilloscope: TP301 (Pin ⑦ of CN308)

[Adjustment method]

Adjust to $64 \mu\text{sec} \pm 0.2 \mu\text{sec}$ with RV308.
 (See Fig. 5-10.)

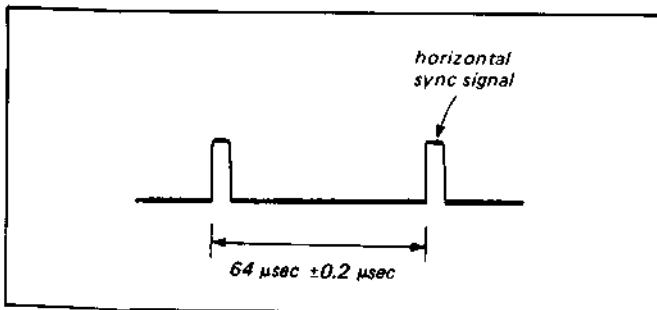


Fig. 5-10. PICTURE SEARCH, drum free speed adjustment

- 2) Capstan DC Bias Adjustment (SA-9 Board)
 Mode: REC
 Oscilloscope: TP305 (Pin ⑤ of IC301)

[Adjustment method]

Adjust to $1.8 \pm 0.1 \text{ V}$ with RV306. (See Fig. 5-11.)

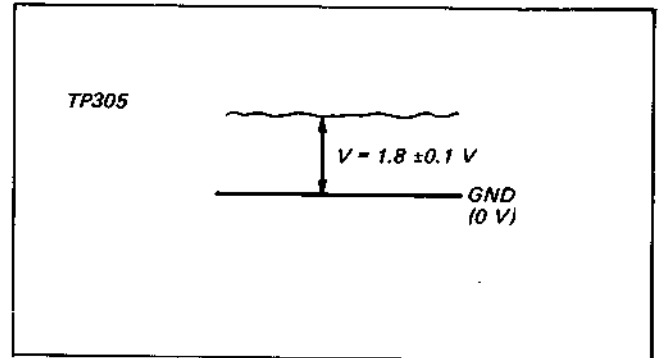


Fig. 5-11. Capstan DC bias adjustment

- 3) PICTURE SEARCH, Capstan DC Bias Adjustment (SA-9 Board)
 Mode: PICTURE SEARCH (FWD)
 Signal: Alignment tape colour-bar or monoscope
 Oscilloscope: TP305 (Pin ⑤ of IC301)

[Adjustment method]

Adjust to $1.8 \pm 0.1 \text{ V}$ with RV307. (See Fig. 5-12)

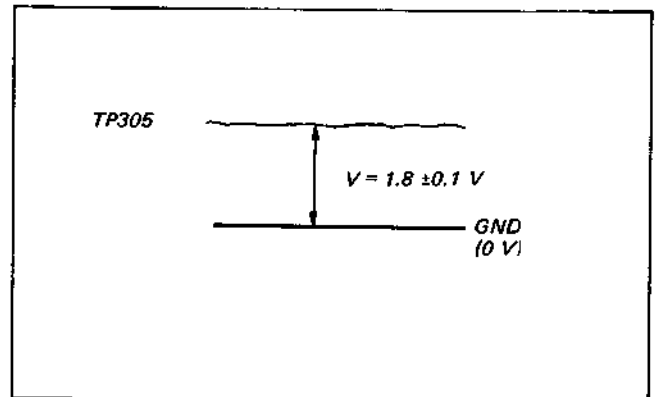


Fig. 5-12. PICTURE SEARCH, capstan DC bias adjustment

4) Tracking Center Adjustment (SA-9 Board)

Mode: E-E

Signal: Alignment tape colour-bar or monoscope

Oscilloscope: CH-1 TP303 (Pin 48 of IC301)

CH-2 TP309

[Adjustment method]

- i) Set the TRACKING knob to the center click position.
- ii) Adjust to $1.5 \text{ msec} \pm 0.05 \text{ msec}$ with RV304. (See Fig. 5-13.)

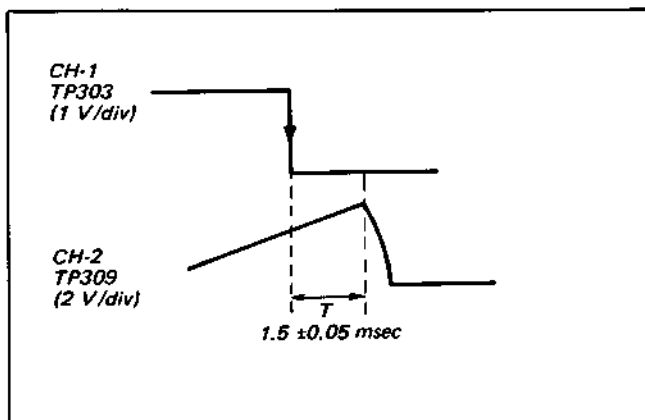


Fig. 5-13. Tracking center adjustment

5-4. PAL VIDEO SYSTEM ALIGNMENT

As a rule, first the playback system is aligned with an alignment tape to check that it operates normally, then the recording system is aligned.

The alignment sequence is shown below. The Y signal and chroma signal systems are aligned for both playback and recording systems.

Colour video signal supplied by the PAL colour-bar generator is used as video input signal for video system alignment in the record mode. Check that the sync and colour burst signals conform to the specifications designated in "Set-up for Alignment" in Fig. 5-1.

[Record System Alignment]

- 1) AGC adjustment
- 2) Carrier set adjustment
- 3) Deviation adjustment
- 4) Compress adjustment
- 5) White Clip adjustment
- 6) Y Record current adjustment
- 7) 4.43 MHz REF adjustment
- 8) AFC adjustment
- 9) AFC offset adjustment
- 10) Pilot burst signal level adjustment
- 11) Chroma record current adjustment

[Playback System Alignment]

- 1) Playback frequency characteristic adjustment
- 2) Expand adjustment
- 3) Playback video level adjustment
- 4) Y-comb adjustment
- 5) Dropout compensator adjustment
- 6) Carrier balance adjustment
- 7) Chroma comb filter adjustment
- 8) JOG PLL adjustment
- 9) JOG exchange chroma level adjustment
- 10) Shift adjustment

5-4-1. Record System Alignment

1) AGC Adjustment (RY-4 Board)

Mode: E-E
 Oscilloscope: VIDEO OUT (75 Ω terminated)
 Signal: GRAY SCALE

[Adjustment method]

Adjust to 1 Vp-p \pm 0.05 Vp-p with RV021.

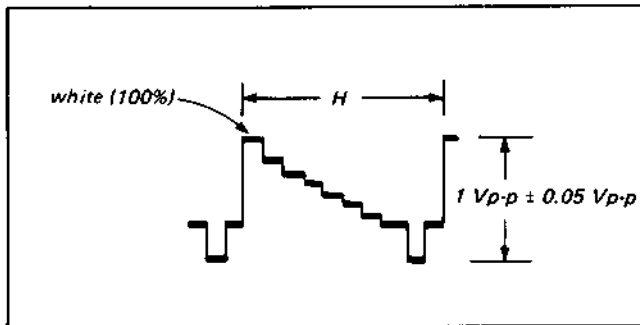


Fig. 5-14. Peak AGC adjustment

2) Carrier Set Adjustment (RY-4 Board)

Mode: E-E
 Signal: None
 Oscilloscope: Pin (25) of IC009

[Adjustment method]

Adjust to 3.8 MHz \pm 0.038 MHz with RV014.

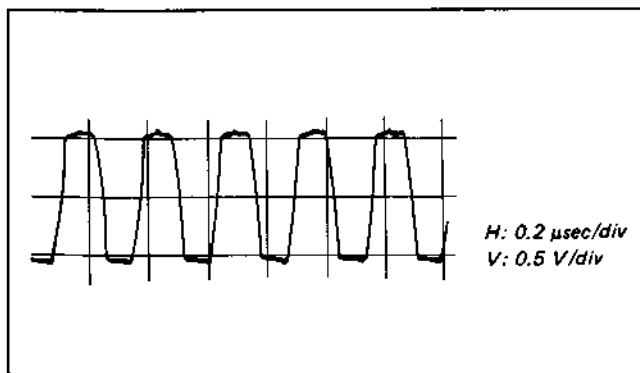


Fig. 5-15. Carrier set adjustment

3) Deviation Adjustment (RY-4 Board)

- The playback system adjustment and the carrier set adjustment in Paragraph 2) above must be completed before making this adjustment.

Mode: Self-recording and playback
 Signal: Colour-bar
 Oscilloscope: VIDEO OUT (75 Ω terminated)

[Adjustment method]

- Supply the colour-bar signal and set up E-E mode.
- Connect the oscilloscope to VIDEO OUT.
- Set up RECORD mode.
- Playback the recorded section of the tape.
- Check that the video signal level is 1.0 Vp-p \pm 0.05 Vp-p, if the level is outside of this range, repeat Steps iii) through iv) above adjusting with RV015 until the standard value is obtained.

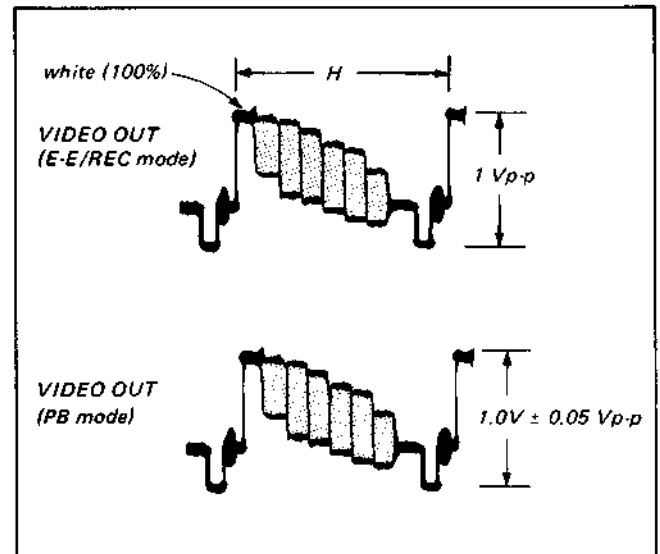


Fig. 5-16. Deviation adjustment

4) Compress Adjustment (RY-4 Board)

Mode: E-E
 Signal: None
 Digital voltmeter: See Fig. 5-17.

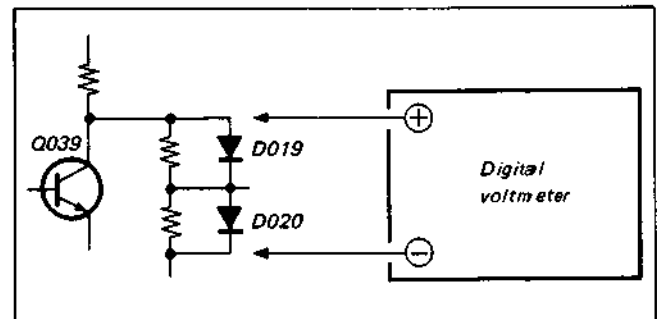


Fig. 5-17.

[Adjustment method]

- Rotate RV013 counterclockwise full seen from the pattern side.
- Adjust to 0.30 \pm 0.01 V dc using RV015.

Note:

Make this adjustment more than 30 sec after turning on the power switch. Make sure to adjust 5) WHITE CLIP adjustment.

5) White Clip Adjustment (RY-4 Board)

Mode: E-E
Signal: Colour-bar
Digital voltmeter: Base of Q037

[Adjustment method]

Adjust to $1.99 \text{ V} \pm 0.05 \text{ V}$ dc with RV013.

6) Y Record Current Adjustment (RY-4 Board)

Mode: Record
Signal: None
Oscilloscope: TP701

[Adjustment method]

Adjust to $4.0 \pm 0.05 \text{ V}_{p-p}$ with RV703. (See Fig. 5-18.)

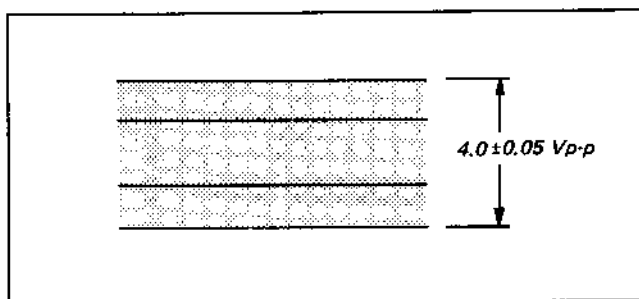


Fig. 5-18. Y record current adjustment

7) 4.43 MHz REF Adjustment (RY-4 Board)

Mode: PB
Signal: Alignment tape colour-bar
Frequency counter: Pin (14) of IC006

[Adjustment method]

Adjust to $4.433619 \text{ MHz} \pm 5 \text{ Hz}$ with CT001.

8) AFC Adjustment (RY-4 Board)

Mode: E-E
Signal: Colour-bar
Oscilloscope: Pin (26) of IC006

[Adjustment method]

- i) Rotate RV701 counterclockwise full seen from the pattern side.
- ii) Adjust to $4.5 \pm 0.1 \text{ V}$ dc using RV007. (See Fig. 5-19.)

Note:

Make sure to adjust SECAM ACK after completing this adjustment. (Refer to 2) on page 206.)

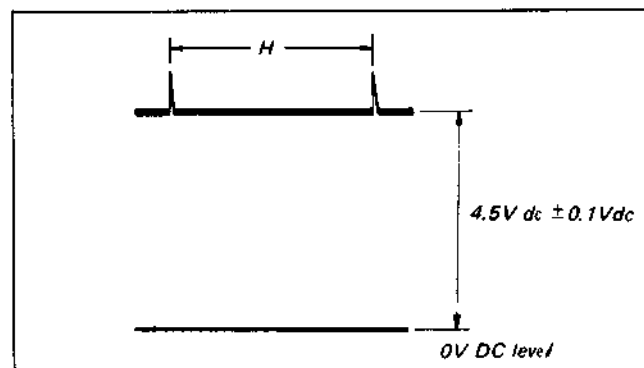


Fig. 5-19. AFC adjustment

9) AFC Offset Adjustment (RY-4 Board)

Mode: Record
Signal: Colour-bar
Oscilloscope: Pin ②⑥ of IC006

[Adjustment method]

Adjust RV006 so that the fluctuation of DC level is minimum. (See Fig. 5-20.)

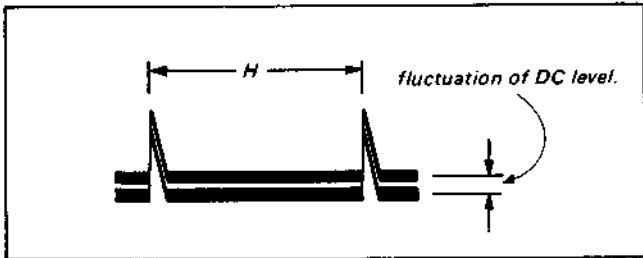


Fig. 5-20. AFC offset adjustment

10) Pilot Burst Signal Level Adjustment (RY-4 Board)

Mode: E-E
Signal: Colour-bar
Oscilloscope: Pin ① of IC006

[Adjustment method]

Align the pilot burst signal with the chroma signal level using RV009.

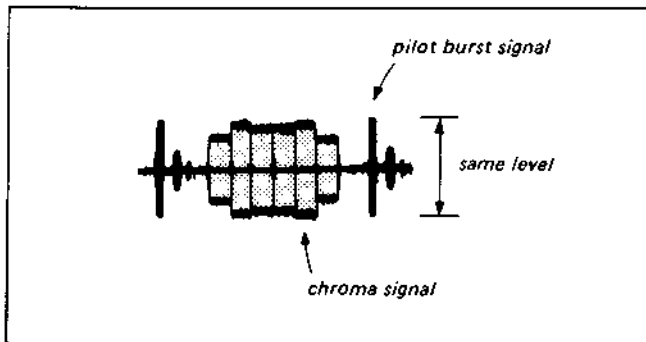


Fig. 5-21. Pilot burst signal level adjustment

11) Chroma Record Current Adjustment (RY-4 Board)

Mode: E-E
Signal: Colour-bar
Oscilloscope: Pin ④ of CN001

[Adjustment method]

Adjust to $200\text{mV}_{p-p} \pm 5\text{mV}_{p-p}$ with RV008. (See Fig. 5-22.)

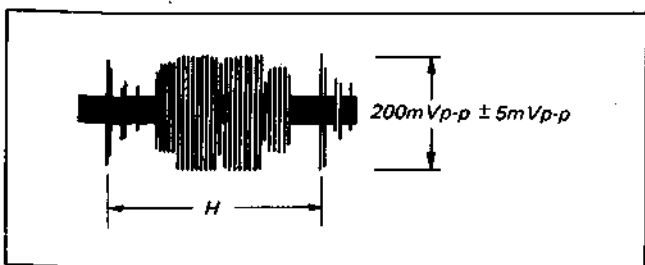


Fig. 5-22. Chroma record current adjustment

5-4-2. Playback System Alignment

1) Playback Frequency Characteristic Adjustment (RY-4 Board)

- Adjust both the A and B channels.
 - The B channel indicated by ().
- Mode: Playback
Signal: Alignment tape RF sweep
Oscilloscope: Pin ⑤ of CN702
External trigger: Pin ④ of CN702

[Adjustment method]

- i) Rotate the tracking knob to make 2 MHz to be maximum.
- ii) Rotate RV704 to adjust the 2 MHz level of B-ch to be less than $\pm 20\text{mV}$ to the 2 MHz level of A-ch.
- iii) Set the trigger slope to $- (+)$.
- iv) Adjust the 5.2 MHz amplitude to 62 – 76% of the 2 MHz amplitude with RV702 (RV701).

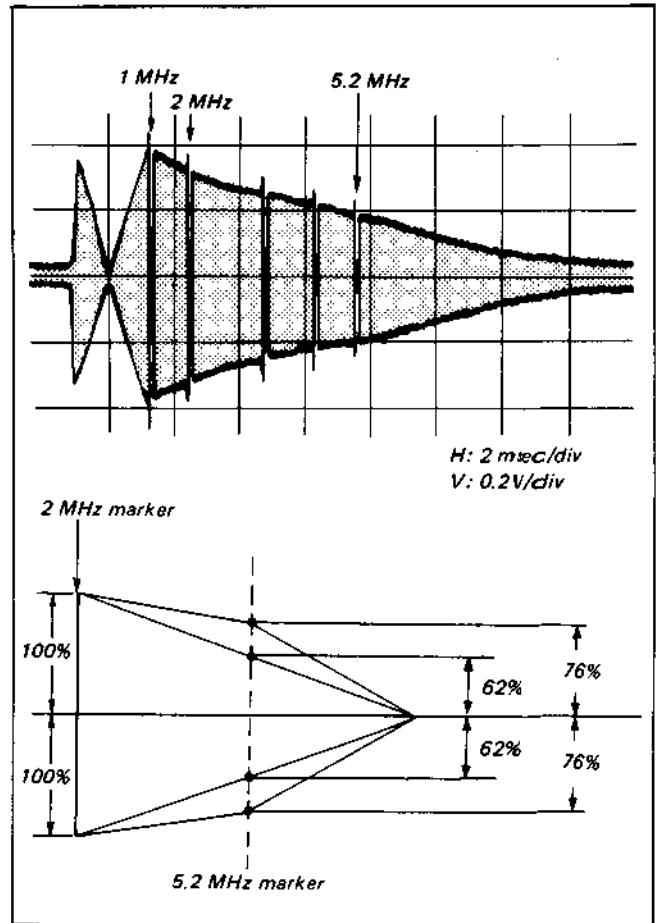


Fig. 5-23. Playback amplifier frequency characteristic adjustment

2) Expand Adjustment (RY-4 Board)

Mode: Playback
Signal: Colour-bar
Digital voltmeter: See Fig. 5-24.

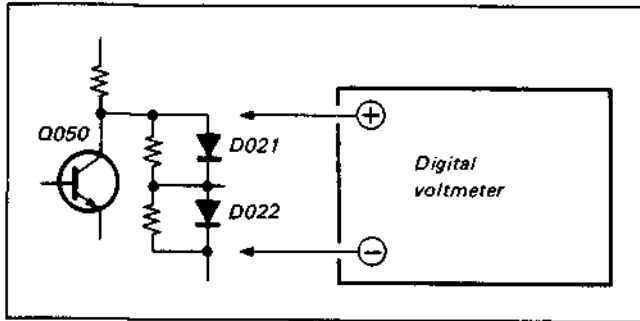


Fig. 5-24.

[Adjustment method]

Adjust to 0.5 ± 0.01 V dc using RV020.

Note:

Adjust more than 30 sec after turning on the power switch.

3) Playback Video Level Adjustment (RY-4 Board)

Mode: Playback

Signal: Alignment tape colour-bar

Oscilloscope: VIDEO OUT (75 Ω terminated)

[Adjustment method]

Adjust to 1.0 V ± 0.05 V_{p-p} with RV019.

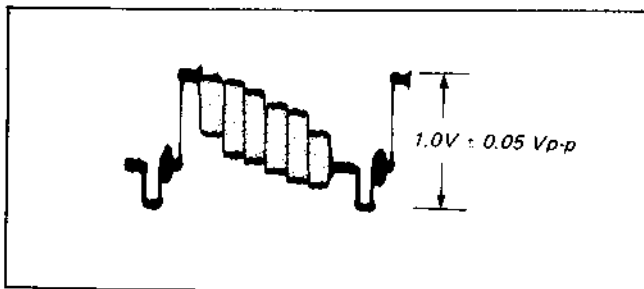


Fig. 5-25. Playback video level adjustment

4) Y-Comb Adjustment (RY-4 Board)

Mode: Playback

Signal: Colour-bar

Oscilloscope: Pin ⑧ of IC401

[Adjustment method]

Rotate RV401 to adjust so that the limiter works vertically symmetrically. (See Fig. 5-26.)

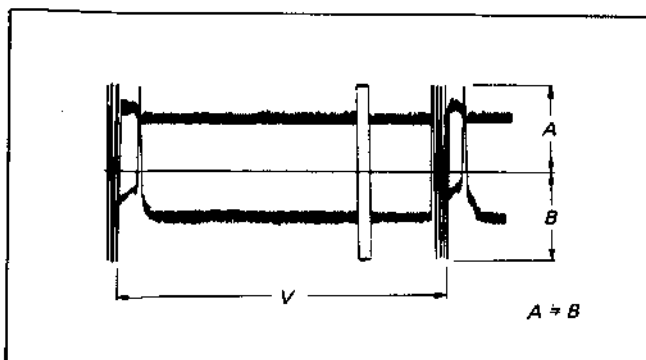


Fig. 5-26. Y-comb adjustment

5) Dropout Compensator Threshold Adjustment (RY-4 Board)

Mode: Playback

Signal: A recorded tape with dropouts

[Adjustment method]

- i) Turn RV010 fully clockwise (↻) as seen from the pattern side. In this state, dropouts appear on the monitor screen.
- ii) Slowly turn RV010 counterclockwise (↺) and set to make the dropouts disappear.
- iii) Rewind the tape and verify that the dropouts described in ii) above have disappeared.

6) Carrier Balance Adjustment (RY-4 Board)

Mode: Playback

Signal: Alignment tape colour-bar

Adjust while observing the monitor TV screen.

[Adjustment method]

Minimize beats with RV005.

7) Chroma Comb Filter Adjustment (RY-4 Board)

Mode: Playback

Signal: Alignment tape colour-bar

Adjust while observing the monitor TV screen.

[Adjustment method]

Minimize beats with RV501 and LV501.

8) JOG PLL Adjustment (RY-4 Board)

Mode: E-E

Signal: Colour-bar

Oscilloscope: Pin 10 of IC003

[Adjustment method]

Adjust to $20 \mu\text{sec} \pm 1 \mu\text{sec}$ with RV003.

(See Fig. 5-27.)

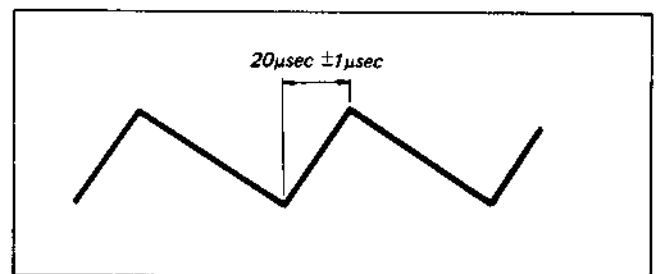


Fig. 5-27. JOG PLL adjustment

9) JOG Exchange Chroma Level Adjustment

(RY-4 Board)

Mode: PB-PAUSE (STILL)

Signal: Colour-bar

Oscilloscope: Pin ⑧ of IC003

[Adjustment method]

Adjust RV002 so that the fluctuation of level is minimum. (See Fig. 5-28.)

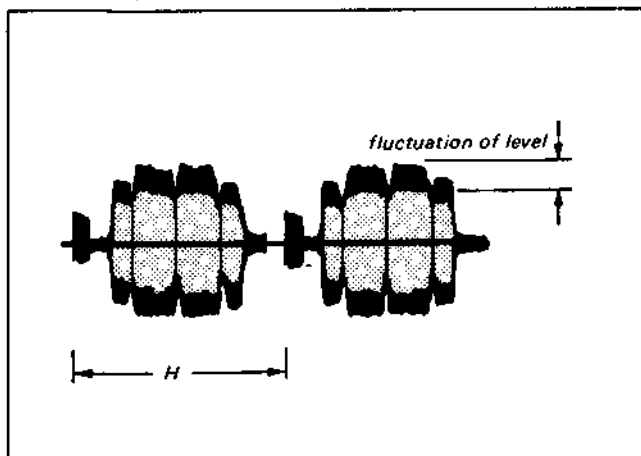


Fig. 5-28. JOG EXCH. C. level adjustment

10) Shift Adjustment (RY-4 Board)

Mode: PB-PAUSE (STILL)

Signal: Alignment tape colour-bar

Oscilloscope: Pin ⑳ and ㉑ of IC003

[Adjustment method]

Adjust to the signal level (per 1H) with RV004.

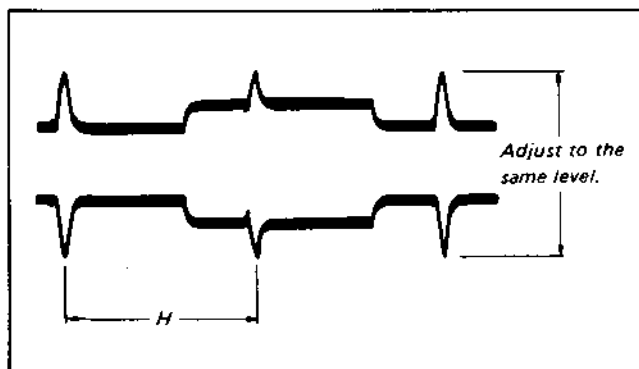


Fig. 5-29. Shift adjustment

**5-5. SECAM VIDEO SYSTEM ALIGNMENT
(EC MODEL)**

- Make this adjustment after aligning the PAL video system.
- For this adjustment, use the equipment listed below in conjunction with an alignment tape and SECAM colour-bar signals.

[Equipment Required]

- (1) SECAM Colour Monitor TV
- (2) Oscilloscope, Dual-trace, Bandwidth . . . more than 10 MHz with delay mode
- (3) SECAM Colour-Bar Generator
- (4) Alignment Tape, Type: KR5-1J, Code No. 8-969-996-03

[Setup for Alignment]

In this alignment, video signals obtained from the pattern generator will be used as alignment signals. Therefore, the video output signals should be within the specifications. Verify video signals by connecting an oscilloscope to VIDEO OUT connector (75 Ω terminated). Check that the video signals are flat when the amplitude of the horizontal sync signal is about 0.3 Vp-p, the amplitude of the video portion is about 0.7 Vp-p, and the amplitude of the burst signal is about 0.3 Vp-p.

The video signal (colour-bar signal) used in this alignment is shown in Fig. 5-30.

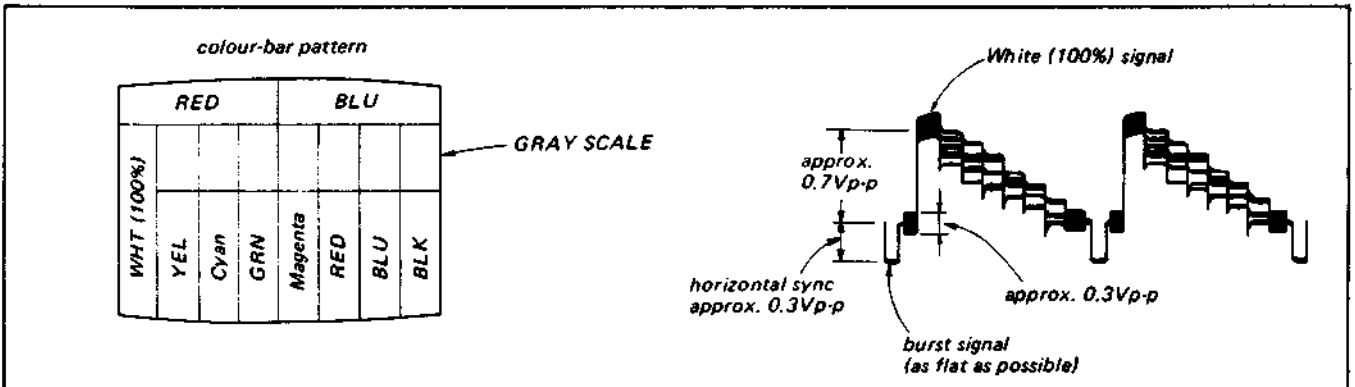


Fig. 5-30. SECAM video (colour-bar) signal

[Alignment Tape]

KR5-1J

	Video signal	Audio signal	Playing time	Use for
1.	Colour-bars	3 kHz – 5 dB	5 min	General performance, tape speed checks, switching position adjustment.
2.	Monoscope	333 Hz – 25 dB	5 min	Video head dihedral, audio level adjustment.
3.	RF sweep	5 kHz – 25 dB	5 min	Video, audio frequency characteristics, audio azimuth adjustment. marker: 1, 2, 3.58, 4.5, 5.2 MHz
4.	Tracking 1 MHz (CH-B) *1 (Channel B is inserted in every 3 frames.)	1 kHz – 5 dB *2 (Signal is dropped out in the positions where channel B is inserted.)	5 min	Tracking, Audio height adjustments CTL Position check. (Check if *1 and *2 are the same position.)

[Colour-Bar Signal]

The 100% colour-bar signal recorded on the Alignment tape is shown in Fig. 5-31.

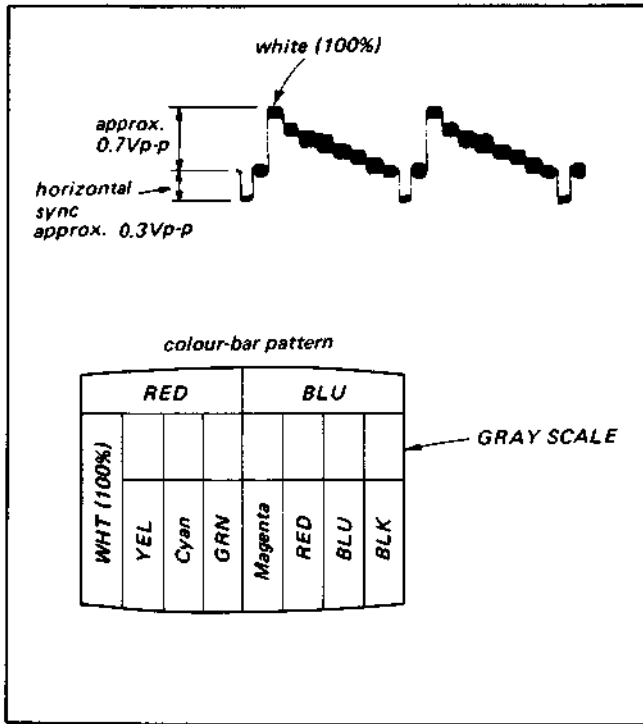


Fig. 5-31. Colour-bar signal recorded on the alignment tape

1) Bell Filter Adjustment (RY-4 Board)

Mode: E-E
Signal: SECAM colour-bar
Oscilloscope: Pin ⑥ of IC004

[Adjustment method]

Adjust LV003 until the waveform is flat.
(See Fig. 5-32.)

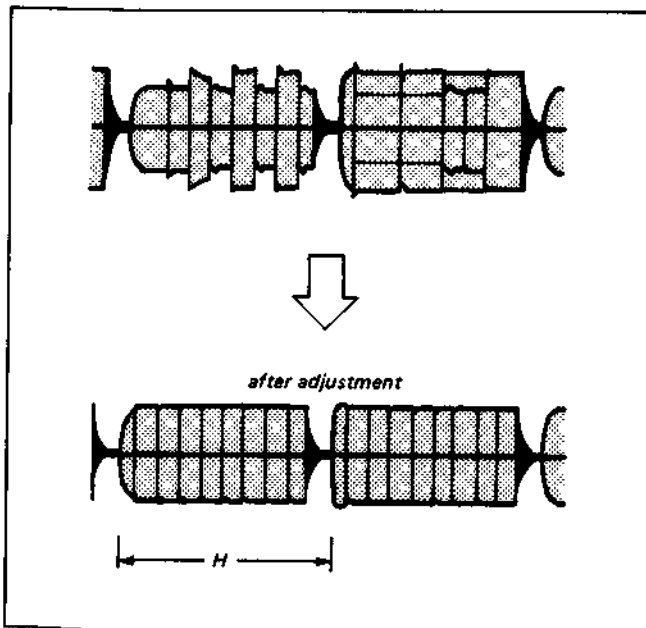


Fig. 5-32. Bell filter adjustment

2) SECAM ACK Adjustment (RY-4 Board)

Mode: E-E
Signal: SECAM colour-bar
Oscilloscope: Pin ⑨ of IC002

[Adjustment method]

- i) Rotate LV001 to make the waveform amplitude to be maximum.
- ii) Adjust RV001 to $4.8 \text{ V} \pm 0.2 \text{ Vp-p}$.

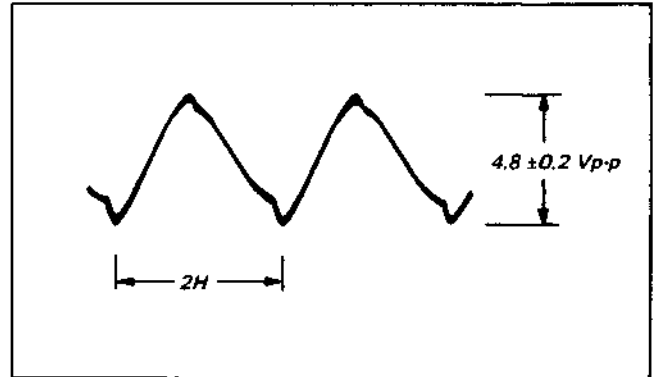


Fig. 5-33. SECAM ACK adjustment

3) Counter Bell Filter Adjustment (RY-4 Board)

Mode: Self-recording and playback
Signal: SECAM colour-bar
Adjust while observing the monitor TV screen.

[Adjustment method]

- i) Record SECAM colour-bar signals.
- ii) Playback the recorded signals.
- iii) While observing the monitor TV screen, adjust LV002 until the border between the red and blue areas is at its cleanest (minimum beats).


5-6. AUDIO SYSTEM ADJUSTMENT

Use a Dynamicron tape for adjustments.

[Connection of Related Equipment]

Note:

Set the INPUT SELECT switch to LINE.

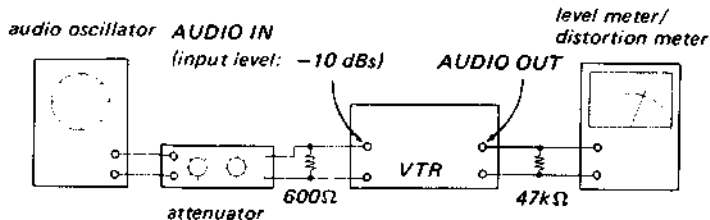

5-6-1. Normal Audio System Adjustment (SA-9 Board)

Note:

Set the BETA HI-FI switch to NORM.

[Adjustment method]

1. ACE head adjustment... See "Mechanical Adjustment"
2. Playback frequency characteristic check
3. Playback output level adjustment
4. Bias oscillator check
5. Record bias adjustment
6. Overall frequency characteristic check
7. Overall S/N check
8. Overall distortion check

1. ACE Head Adjustment

Refer to "Mechanical Adjustment"

2. Playback Frequency Characteristic Check

- (1) Connect TP502 and GND with a jumper wire so as to turn off the HI CUT operation.
- (2) Play back 333 Hz and 5 kHz from the alignment tape and check so that the level difference between 333 Hz and 5 kHz is within 0 dB \pm 1 dB.
- (3) Remove the jumper wire after making the adjustment.

3. Playback Output Level Adjustment

- (1) Play back 333 Hz from the alignment tape and adjust so that the output level is -30 dBs \pm 0.5 dB with RV501.

4. Bias Oscillator Check

- (1) Set the input signal level to zero and set up the RECORD mode.
- (2) Connect a frequency counter to Pin ② of CN502. The reading should be 65 kHz \pm 6.5 kHz. (See Fig. 5-34.)

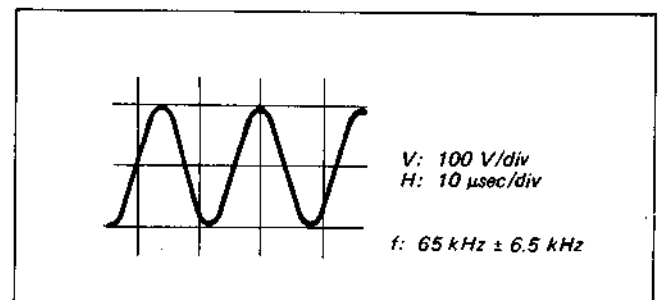


Fig. 5-34. Bias oscillator check

5. Record Bias Adjustment

Check that "Playback frequency characteristic adjustment" has been made.

- (1) Connect TP501 and GND with a jumper wire so as to turn off the AGC operation. Connect TP502 and GND with a jumper wire so as to turn off the HI CUT operation.
- (2) Supply a 333 Hz signal.
- (3) Set up the E-E mode and adjust the oscillator output level so that the level meter reading is -30 dBs.
- (4) Record signals.
- (5) Supply a frequency of 7 kHz and perform Steps (3) and (4) above.
- (6) Play back the recorded section of the tape and check that the output level at 7 kHz is \pm 1 dB relative to the output level at 333 Hz. If the level is outside this range, repeat Steps (2) through (5) adjusting with RV502 until the standard is met.
- (7) Remove the jumper wire after making the adjustment.

6. Overall Frequency Characteristic Check

- (1) Connect TP501 and GND with a jumper wire so as to turn off the AGC operation.
Connect TP502 and GND with a jumper wire so as to turn off the HI CUT operation.
- (2) Connect a 333 Hz signal.
- (3) Set up the E-E mode and adjust the oscillator output level so that the level meter reading is -30 dBs.
- (4) Record signals.
- (5) Change the frequency to 50 Hz, 100 Hz, 7 kHz and 10 kHz and repeat Steps (3) and (4).
- (6) Play back the recorded section of the tape and verify that the level is within the specification.
(See Fig. 5-35.)

Standard values: With reference to the 333 Hz playback output level.

50 Hz	+2.5 -10	dB
100 Hz	+2.5 -3	dB
7 kHz	+2.5 -2.5	dB
10 kHz	+2.5 -20	dB

- (7) If the specified values cannot be attained, perform 2 and 5 again. "Playback Frequency Characteristic Adjustment" and "Record Bias Adjustment".
- (8) Remove the jumper wire after making the adjustment.

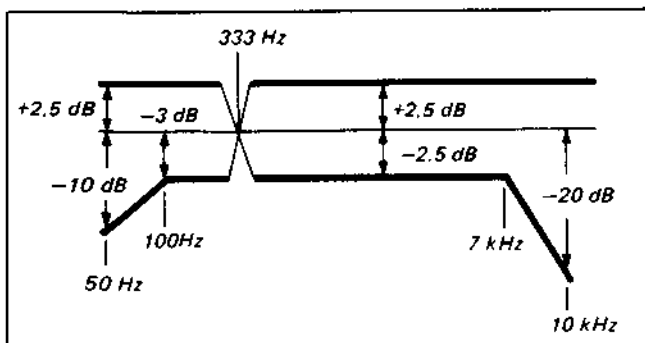


Fig. 5-35. Overall frequency characteristic

7. Overall S/N Check

- (1) Supply a 333 Hz signal at -10 dBs.
- (2) Record signals.
- (3) Set the input signal level to zero and record signals.
- (4) Play back the recorded section of the tape and check that the output level difference is greater than 38 dB.

8. Overall Distortion Check

- (1) Supply a 333 Hz signal at -10 dBs.
- (2) Record signals.
- (3) Play back the recorded section of the tape and verify that the distortion is below 4%.

5-6-2. BETA Hi-Fi Audio System Adjustment (AF-7, TM-79, TM-80 Boards)

Note:

Set the LPF switch to OFF.

Set the BETA hi-fi switch to AUTO.

() is R-CH.

[Adjustment method]

1. E-E input level adjustment
2. Dynamic emphasis adjustment
3. AFM carrier frequency adjustment
4. AFM deviation adjustment
5. AFM record current adjustment
6. Level meter adjustment
7. RF input level adjustment
8. Demodulator DC level adjustment
9. Level and level balance adjustment
10. Demodulator DC offset adjustment
11. Overall frequency characteristic check
12. Overall distortion check
13. Overall S/N check

1. E-E Input Level Adjustment

- (1) Input at 400 Hz and -10 dB signal to the audio line input to set up a RECORD state. (Adjust the REC level volume control to the center click.)
- (2) Adjust the level of Pin ④ (Pin ③) of IC004 on AF-7 board to be -26.5 ± 0.5 dB using RV502 (RV503) on TM-79 board.

2. Dynamic Emphasis Adjustment

- (1) Input a 400 Hz and -10 dB signal to the audio line input to set up a RECORD state. (Adjust the REC level volume control to the center click.)
- (2) Connect VTVM to the + side of C070 and adjust the level to -20.0 ± 0.1 dB using RV012.

3. AFM Carrier Frequency Adjustment

- (1) Connect a frequency counter to TP012 [Emitter of Q024] (TP011 [Emitter of Q025]) in a no-signal state (shorted between the audio line input and GND) to set up a RECORD state.
- (2) Adjust to 1.44 MHz ± 1 kHz (2.1 MHz ± 1 kHz) using RV006 (RV011).
- (3) Restore the shorting between the line input and GND after completing the adjustment.

4. AFM Deviation Adjustment

- (1) Input and record a 400 Hz and -10 dB signal to the audio line input and play back the recorded part. (Adjust the REC level volume control to the center click.)
- (2) Adjust RV007 (RV010) so that the output when played back will be the same as that of the audio line output in the E-E mode.

5. AFM Record Current Adjustment

- (1) Short between the audio line input and GND to set up a no-signal state.
- (2) Connect an oscilloscope to Pin ⑤ of CN008 (on AF-7 Board).
- (3) Adjust f_2 to 220 ± 5 mVp-p using RV008 and check that f_1 is inside 62 ± 5 mVp-p.
- (4) Restore the shorting between the line input and GND after completing the adjustment.

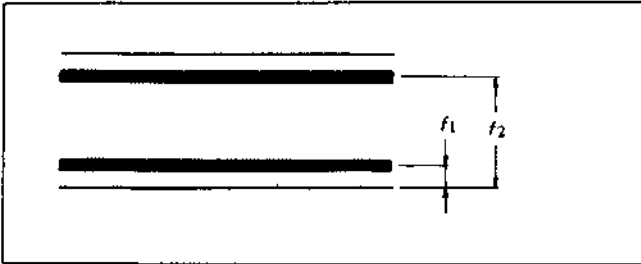


Fig. 5-36. AFM record current

6. Level Meter Adjustment (TM-80 Board)

- (1) Input a 400 Hz and -10 dB signal to the audio line input.
- (2) Short between Pin ③ of CN002 (-10 V) and GND. Measure the voltage at the mechanical center of RV302 using a digital voltmeter, and adjust to $0.915 \text{ V} \pm 0.02 \text{ V}$ with RV302.
- (3) Short between Pin ③ of CN002 (-10 V) and GND. Measure the voltage at the mechanical center of RV301 using a digital voltmeter, and adjust to $0.915 \text{ V} \pm 0.02 \text{ V}$ with RV301.

7. RF Input Level Adjustment

Note:

Make this adjustment after checking that the AFM record current has been adjusted. Rotate and adjust the tracking control knob so that the Pin ① of CN013 output waveform becomes maximum.

- (1) Connect the 4700Ω resistor between Pin ① and ② of CN013.
- (2) Play back the BETA Hi-Fi alignment tape (KR5-10C).
- (3) Connect an oscilloscope to Pin ① of CN013 and adjust to $1.9 \text{ Vp-p} \pm 0.1 \text{ Vp-p}$ with RV009.
- (4) After the adjustment, disconnect the 4700Ω resistor between Pin ① and ② of CN103.

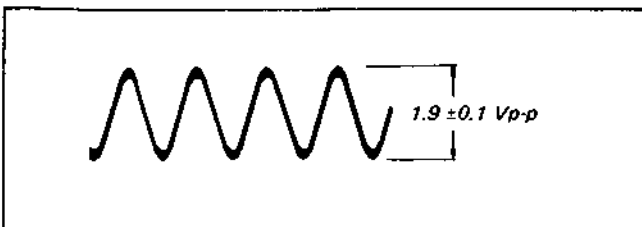


Fig. 5-37. RF input level adjustment

8. Demodulator DC Level Adjustment

- (1) Short between the audio line input and GND, and record.
- (2) Play back the recorded part.
Connect an digital voltmeter to TP016 (TP015) and adjust to $2.2 \text{ V} \pm 0.1 \text{ VDC}$ ($2.0 \text{ V} \pm 0.1 \text{ VDC}$) with RV003 (RV016).

9. Level and Level Balance Adjustment

- (1) Play back the BETA Hi-Fi alignment tape (KR5-10C).
- (2) Connect an oscilloscope to TP005 (TP006) and adjust to $-20 \text{ dB} \pm 0.1 \text{ dB}$ with RV001 and RV002 (RV014 and RV015), and to eliminate the level difference. (See Fig. 5-38.)
- (3) Restore the shorting between the audio line input and GND.

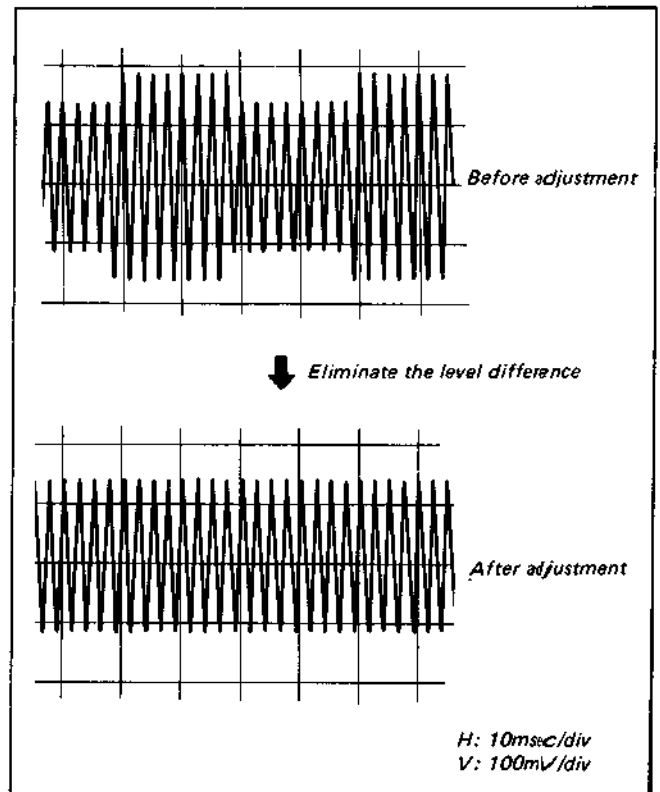


Fig. 5-38. Playback level balance adjustment

10. Demodulator DC Offset Adjustment

- (1) Input a 10 kHz and -10 dB signal to the audio line input.
- (2) Record the signal and play back the recorded part. Check the waveform from the audio line output, and adjust to make the DC difference in grade minimum with RV017 (L-CH) and RV018 (R-CH).

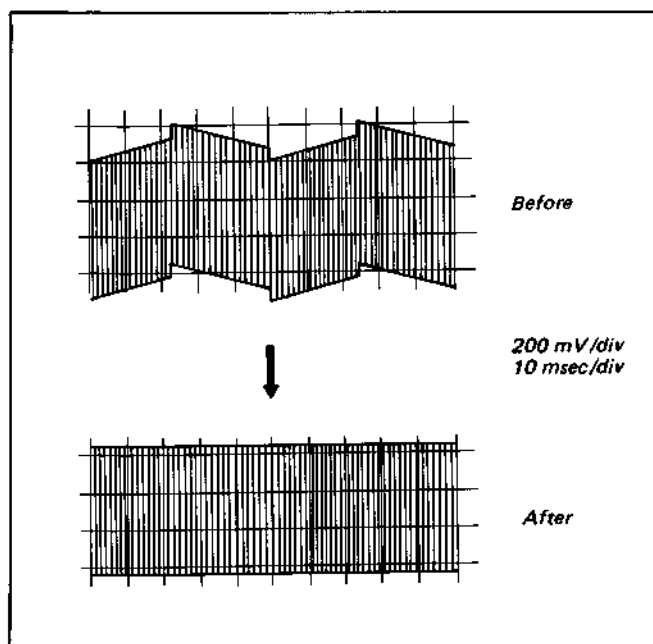


Fig. 5-39. Demodulator DC offset adjustment

11. Overall Frequency Characteristic Check

- (1) Feed a 400 Hz signal to the audio line input. Set up the E-E mode and adjust the attenuator so that the audio line output level becomes -10 dB.
- (2) Record the signal.
- (3) Change the frequency to 20, 100, and 400 Hz, as well as to 10 kHz and 20 kHz, then repeat Steps (1) and (2).
- (4) Play back the recorded part and check that the output levels are inside the standard.
(See Fig. 5-40.)

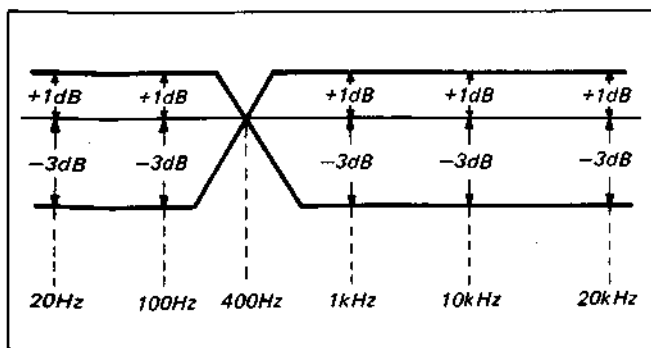


Fig. 5-40. Overall Frequency Characteristic Check

12. Overall Distortion Check

- (1) Supply a 400 Hz signal at -10 dB.
- (2) Record the signal.
- (3) Play back the recorded part of the tape and verify that the distortion is below 0.5%.

13. Overall S/N Check

- (1) Supply a 1 kHz signal at -10 dBs.
- (2) Record signals.
- (3) Set the input signal level to zero and record signals.
- (4) Playback the recorded section of the tape and check that the output level difference is greater than 63 dB. (Measure at IHF-A wating curve.)

5-7. TUNER SYSTEM ADJUSTMENT (TU-73 Board)


1. Tuner AGC Adjustment

- (1) Receive broadcast TV signals in the highest contrast.
- (2) Turn RV001 until snow (intensity-modulated display) noise appears on the TV screen.
- (3) Turn RV001 backward until the snow (intensity-modulated display) noise disappears.
- (4) Receive signals of all channels in turn, and ensure that there is no cross modulation beat, image deformation nor snow noise effect.


2. Stereo Separation Adjustment

- (1) L-CH and R-CH receive 400 Hz and 1 kHz stereo signals respectively from the signal generator.
- (2) Connect an oscilloscope to Pin ① of CN002 and adjust RV002 so that the shaking by 1 kHz of the 400 Hz waveform becomes smallest.


SA-9 board
(Component side)

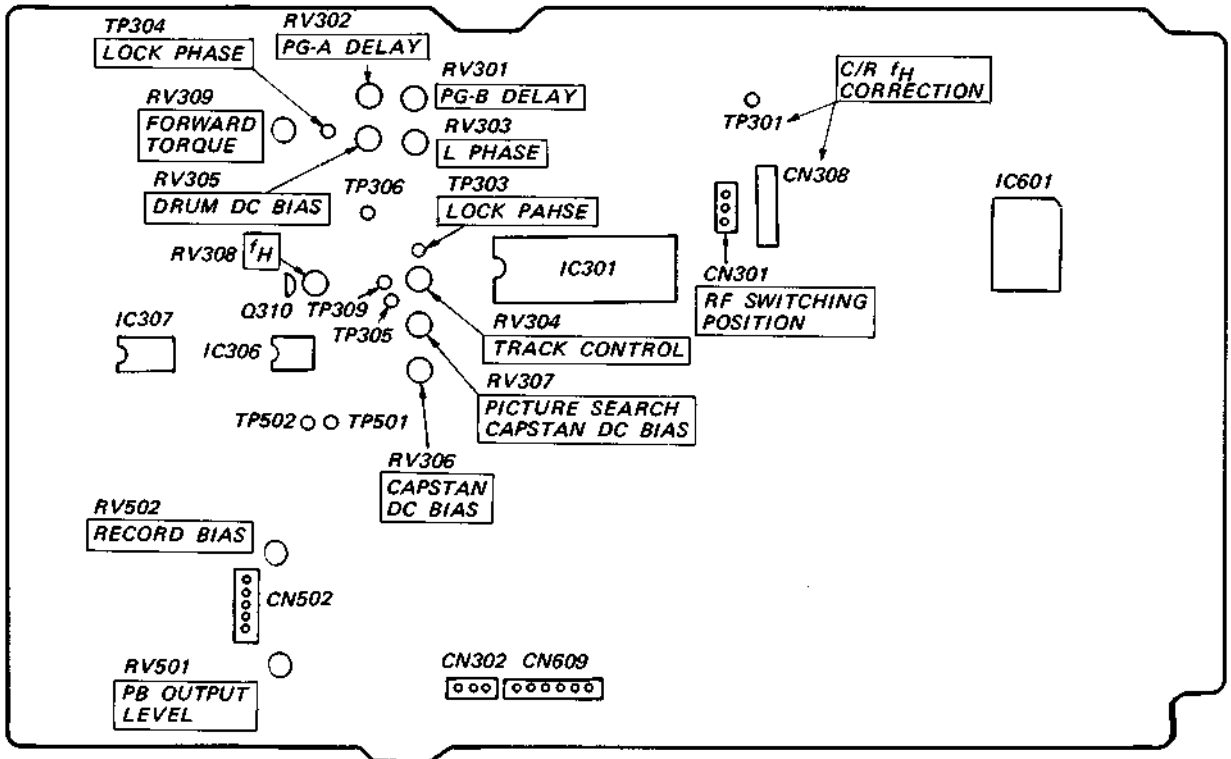


TU-73 board
(Component side)

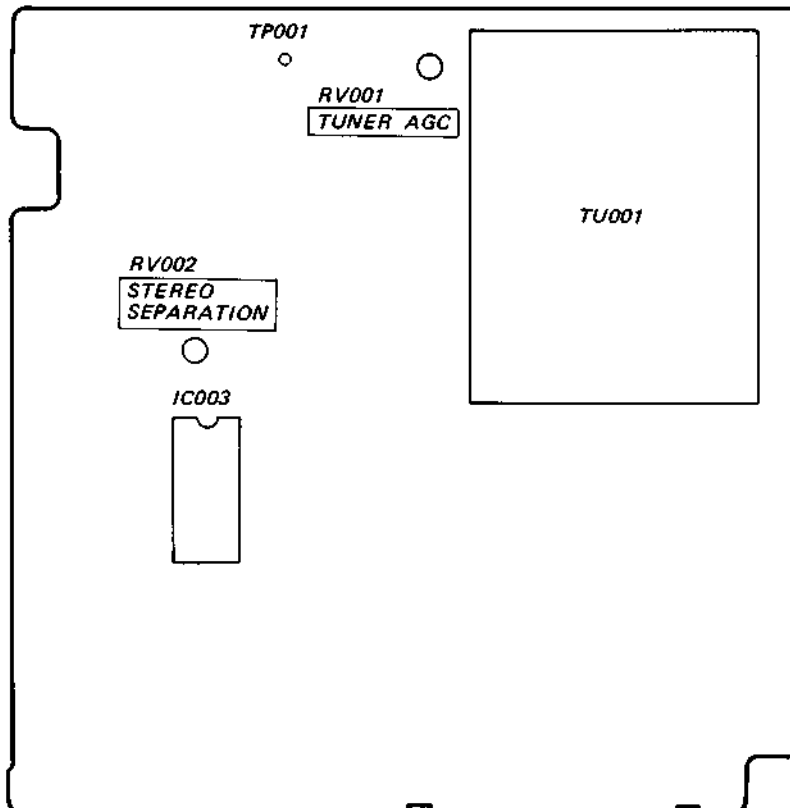

TM-79 board
(Component side)

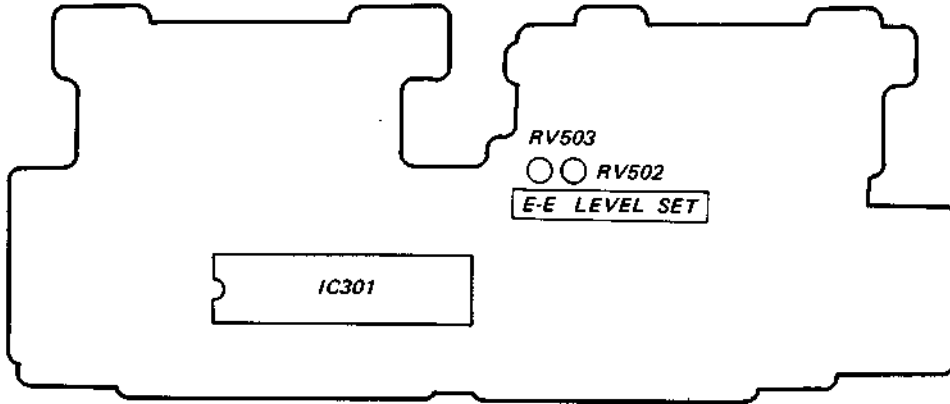

TM-80 board
(Component side)

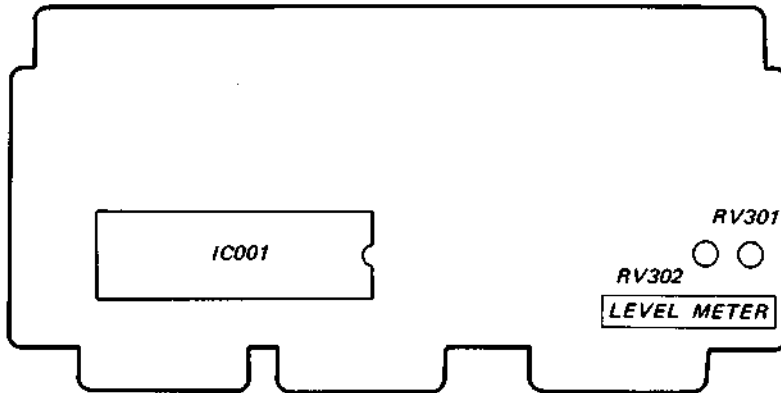

RMT-231


SERVICE MANUAL




SPECIFICATIONS

Remote Commander RMT-231	
Remote control system	Infrared control
Power requirements	3V dc, 2 IEC designation R6 batteries (size AA)
Dimensions	Approx. 45 × 20 × 175 mm (w/h/d) (1 3/4 × 3/4 × 7 inches)
Weight	incl. projecting parts and controls Approx. 105 g (3.7 oz) incl. batteries


Disassembly

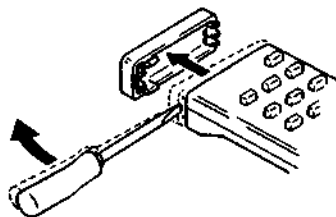

- ① Remove the front panel by prying up with a screwdriver.

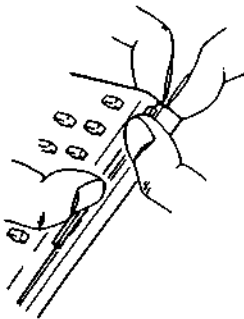

- ② While pulling the lower case outward, lift the upper case and free the claw.

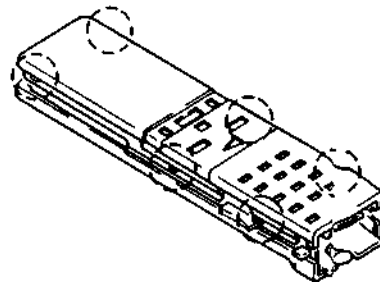

- ③ Free all 6 claws similarly.


REMOTE COMMANDER
SONY®

1. REMOTE CONTROL OPERATION


You can control almost all the functions of this video cassette recorder from your armchair using the supplied Remote Commander.

BATTERY INSERTION

- 1 Open the lid.

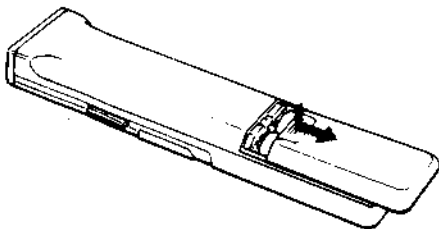

- 2 Insert two IEC designation R6 batteries with correct polarity.

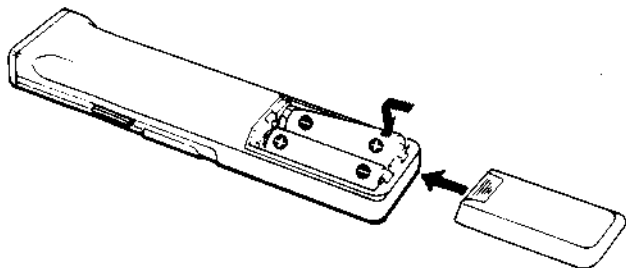

- 3 Close the lid firmly.

Battery life


In normal operation, batteries will last for about six months. If the range of the Remote Commander becomes noticeably short, replace the batteries with new ones. When the batteries are exhausted, the remote function indicator on the Commander will not light when the buttons on the Commander are pressed.

If the Commander is not to be used for a long period of time, remove the batteries to avoid possible damage from battery leakage.

Notes

- There should be no obstacles between the Commander and the REMOTE SENSOR of the recorder.
- The shorter the distance between the Commander and the recorder, the wider the angle within which the recorder can be controlled.

OPERATION

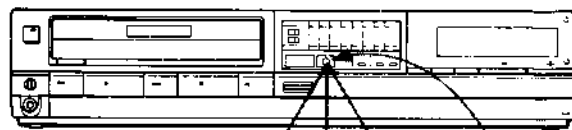

REMOTE SENSOR
Point the infrared transmitter here.

Approx. 7 m
(23 feet)

30°

30°

Indicator

Lights when any of the buttons on the Commander is pressed.

Programme select buttons

Select the programme position directly. See below.

COMMAND ON/OFF switch

Set to ON to turn the Commander on. Set to OFF when the Commander is not in use.

Infrared transmitter

ON button

PROGRAM scan button

Press the + side to advance or the - side to reverse the programme numbers.

Play button

▶▶ (fast-forward) button

◀◀ (rewind) button

Pause button

Stop button

● (record) button
To start recording, slide to the right.

How to press the programme select buttons

For programmes 1 through 9, press the corresponding single-digit button.


For 10 through 19, press "1-" for the tens-digit and then the corresponding single-digit button.

For 20 through 29, press "2-" and then the corresponding single-digit button.

For 30, press "0".

- If you do not press a single-digit button within several seconds after pressing "1-" or "2-", the previous programme position will be recalled.


2. PRINTED WIRING BOARDS
- Conductor Side -

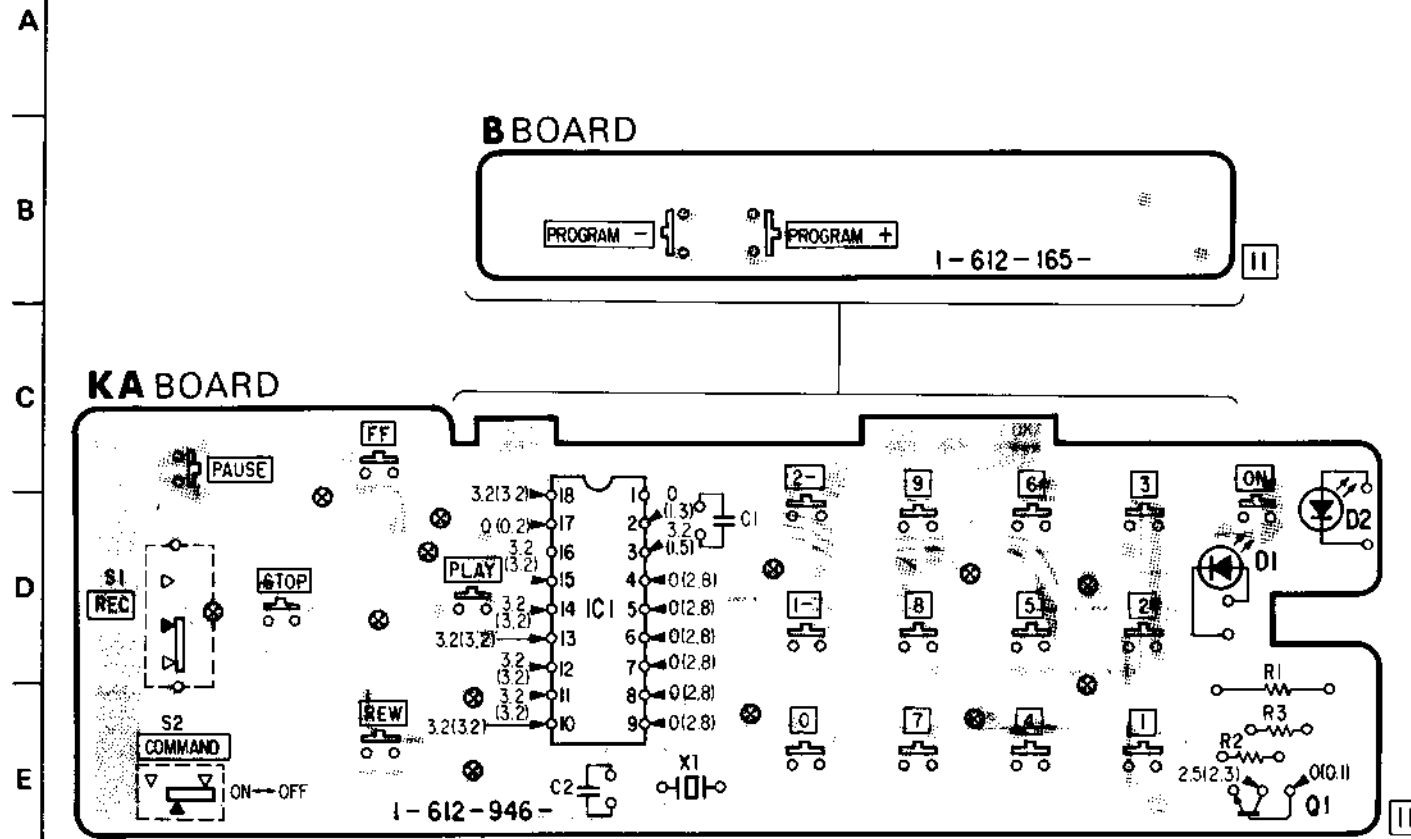

no mark : With no button pressed.
() : With the FF button pressed.

Note:

- — : indicates a lead wire mounted on the component side.
- — : indicates a lead wire mounted on the printed side.
- ⊗ : Through hole.
- : soldering side
- : B+ pattern
- : component side
- : Carbon pattern.

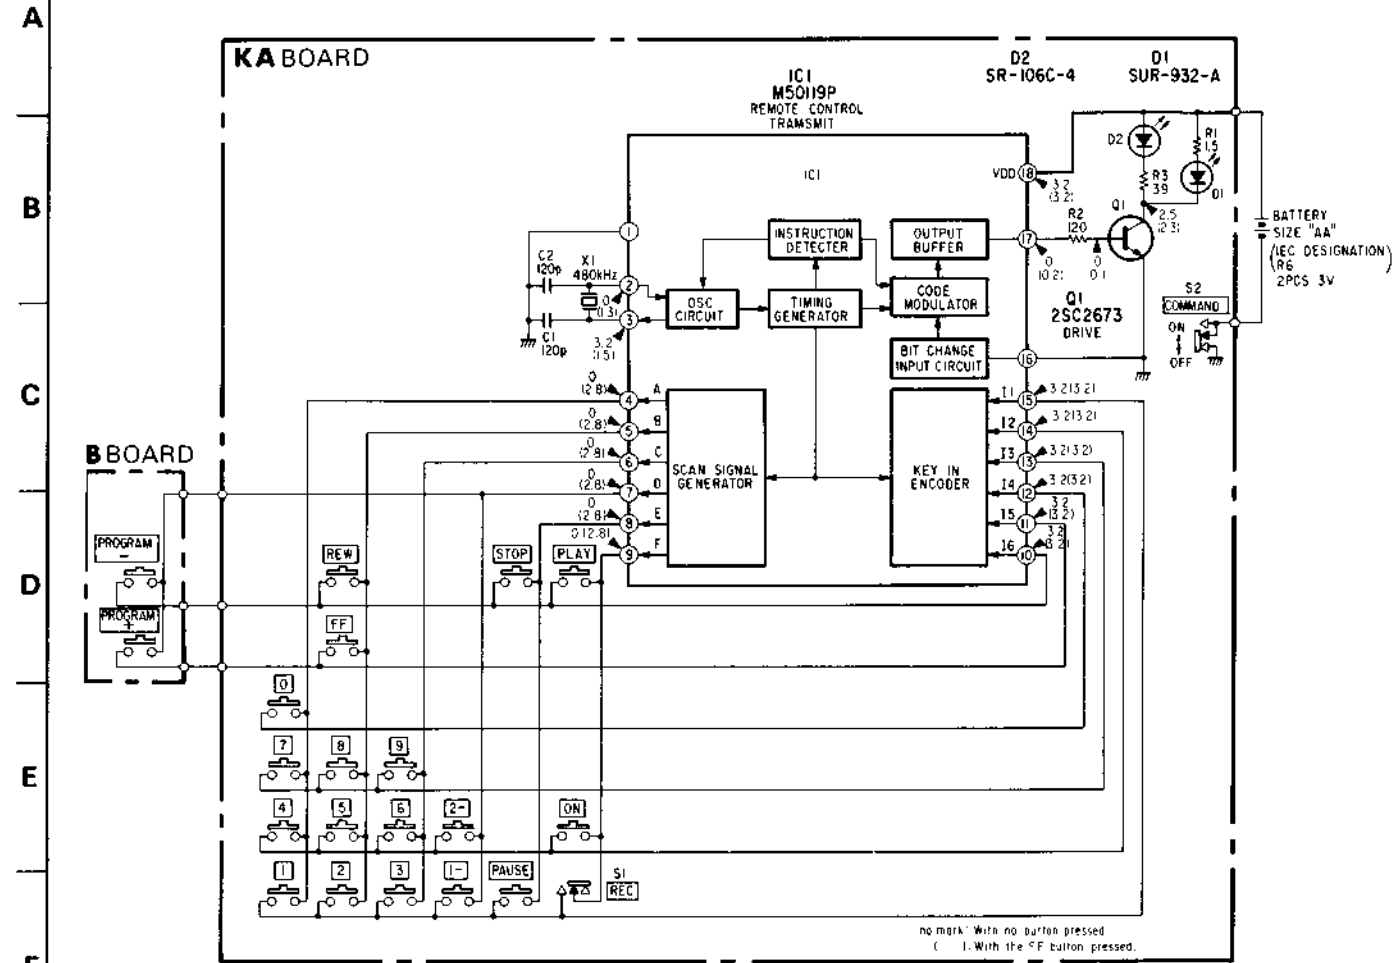

no mark : With no button pressed
() : With the FF button pressed.


Note:

- All resistors are in ohms, 1/6W unless otherwise noted.
- All capacitors are in μF (p:pF) unless otherwise noted.
- 50V or less are not indicated except for electrolytic capacitors.
- — : B+ bus.
- The voltage value is measured using a digital tester (10M Ω).


When indicating parts by reference number, please include the board name.

SEMICONDUCTORS

M50119P

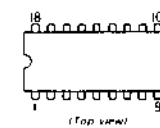

2SC2673



SLR932A




SR106C



4. EXPLODED VIEW

NOTE:

- Items with no part number and no description are not stocked because they are seldom required for routine service.
- The construction parts of an assembled part are indicated with a collation number in the remark column.
- Items marked "*" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- The mechanical parts with no reference number in the exploded views are not supplied.

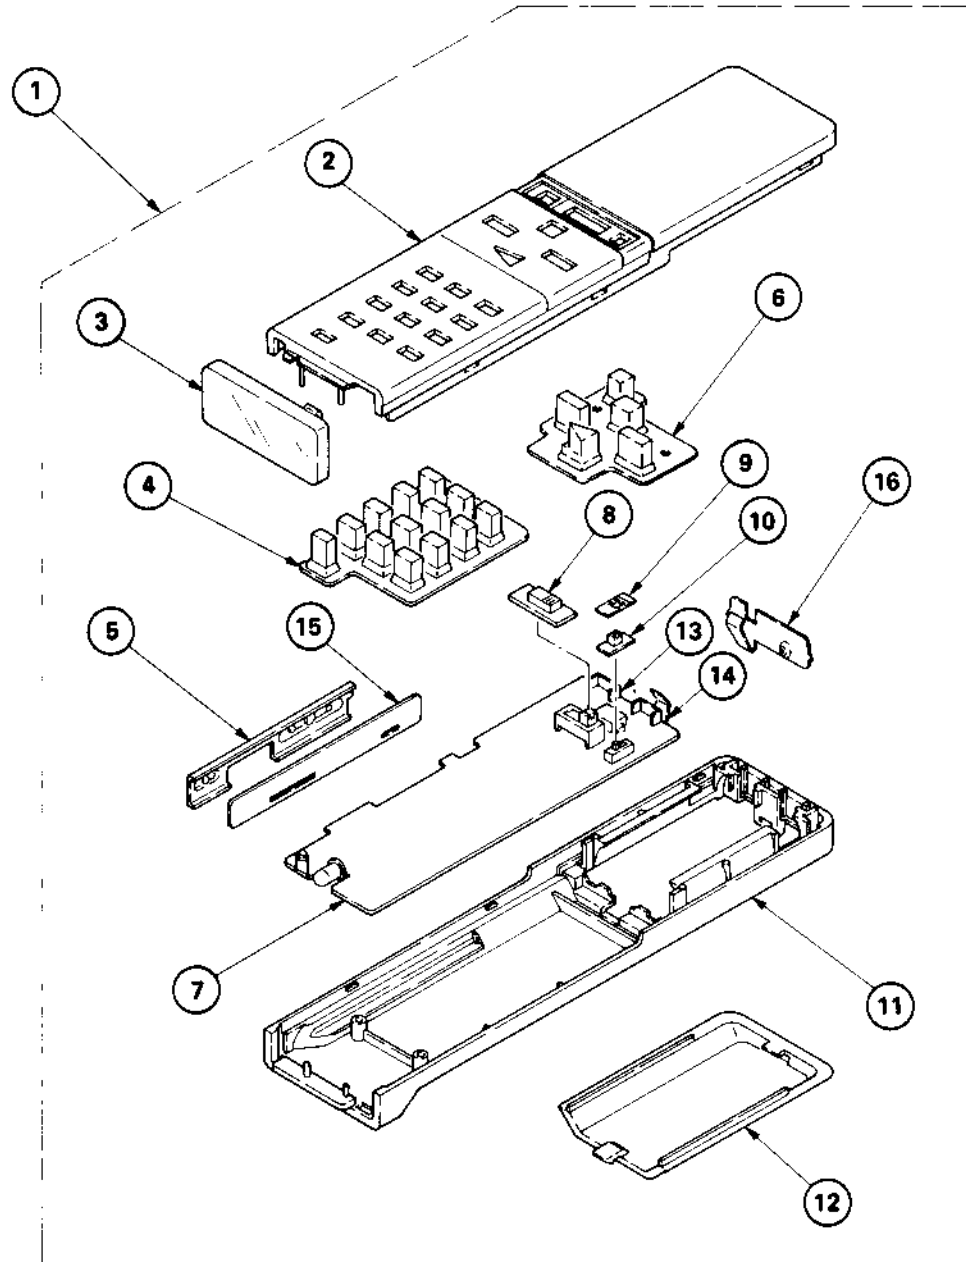

No.	Part No.	Description	Remark	No.	Part No.	Description	Remark
1	A-6765-713-A	COMMANDER ASSY RMT-231	2-16	8	2-387-101-01	BUTTON, RECORDING	
2	2-383-130-71	CASE (UPPER), COMMANDER RMT-231		9	2-387-113-11	PLATE, COLOR	
3	2-387-107-01	PANEL, COMMANDER (FRONT)		10	2-383-127-01	BUTTON, SLIDE	
4	2-383-128-01	RUBBER (A), CONTACT		11	2-387-123-11	CASE (LOWER), COMMANDER	
5	2-389-303-01	RUBBER (B), CONTACT		12	2-387-105-01	COVER, BATTERY	
6	2-383-129-01	RUBBER (C), CONTACT		13	2-387-104-01	TERMINAL (B), BATTERY	
7	*1-612-946-11	KA BOARD		14	2-387-103-01	TERMINAL (A), BATTERY	
				15	*1-612-165-11	B BOARD	
				16	4-350-925-00	TERMINAL (C), BATTERY	

5. ELECTRICAL PARTS LIST

NOTE:

The components identified by shading and mark Δ are critical for safety. Replace only with part number specified.

When indicating parts by reference number, please include the board name.

- Due to standardization, replacements in the parts list may be different from the parts specified in the diagrams or the components used on the set.
- Items marked "*" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.

All variable and adjustable resistors have characteristic curve B, unless otherwise noted.

- RESISTORS
- All resistors are in ohms
 - F : nonflammable

CAPACITORS

- MF : μ F, PF : μ PF

COILS

- MMH : mH, UH : μ H

Ref.No	Part No.	Description	Remark
	*1-612-946-11	KA BOARD *****	
	2-387-103-01	TERMINAL (A), BATTERY	
	2-387-104-01	TERMINAL (B), BATTERY	
		CAPACITOR	
C1	1-102-107-00	CERAMIC 120PF 10% 50V	
C2	1-102-107-00	CERAMIC 120PF 10% 50V	
		DIODE	
D1	8-719-912-39	DIODE SLR-932A	
D2	8-719-100-06	DIODE SR106C	
		IC	
IC1	8-759-600-07	IC M50119P	
		TRANSISTOR	
Q1	8-729-967-32	TRANSISTOR 2SC2673	
		RESISTOR	
R1	1-246-405-25	CARBON 1.5 5% 1/4W	
R2	1-246-772-00	CARBON 120 5% 1/8W	
R3	1-246-766-00	CARBON 39 5% 1/8W	
		SWITCH	
S1	1-554-364-00	SWITCH, SLIDE	
S2	1-553-977-00	SWITCH, SLIDE	
		CRYSTAL	
X1	1-527-476-00	OSCILLATOR, CERAMIC	

	*1-612-165-11	B BOARD *****	
