

4317

SLV-595HF / 696HF

RMT-V102D/V112A

SERVICE MANUAL

US Model
Canadian Model



Photo : SLV-595HF

Refer to the SERVICE MANUAL of VHS MECHANICAL ADJUSTMENT II for MECHANICAL ADJUSTMENTS. (9-972-816-11)

VHS Hi-Fi

SPECIFICATIONS

System

Format VHS NTSC standard
Video Recording System Rotary two-head helical scanning FM system.
Video Signal SP: 33.35 mm/s (1 3/8 inches/s)
Tape Speed EP: 11.11 mm/s (7/16 inches/s)
LP: 16.67 mm/s (11/16 inches/s)
Playback only

Maximum recording/playback time 9 h in EP mode (with T-180 tape)

Fast-forward and rewind time Approx. 4 min. 30 s (with T-120 tape)

High-speed rewind time Approx. 3 min. (with T-120 tape)

Tuner Section

Channel Coverage VHF channels 2 to 13
UHF channels 14 to 69
CATV channel
Antenna A-8 to A-1, A to W, W+1 to W+84
75-ohm antenna terminal for VHF/UHF

Inputs and Outputs

LINE IN 1 and 2 VIDEO IN (phono jack) (1 each)
Input signal: 1 Vp-p, 75 ohms, unbalanced, sync negative
AUDIO IN (phono jack) (2 each)
Input level: -7.5 dBs (0 dBs = 0.775 Vrms)
Input impedance: more than 47 kilohms

LINE OUT

VIDEO OUT (phono jack) (1)
Output signal: 1 Vp-p, 75 ohms, unbalanced, sync negative
AUDIO OUT (phono jack) (2)
Standard output: -7.5 dBs at load
impedance 47 kilohms
Output impedance: less than 10 kilohms
Mini jack (1)

CONTROLS IN

Timer Section

Clock Quartz locked
Time Indication 12-hour cycle
Timer Setting Only for recording
8 program in one month at max.
Power back-up Built-in self-charging capacitor
Back-up duration: Up to three hours at one time

General

Power requirements 120 V AC, 60 Hz
Power consumption 25 W (max.)
6 W (in standby condition)
Operating temperature 5°C to 40°C (41°F to 104°F)
Storage temperature -20°C to 60°C (-4°F to 140°F)
Dimensions 430 x 100 x 395 mm (w/h/d)
(17 x 4 x 15 3/4 inches)
Weight 6.0 kg (15 lb.)

- Continued on next page -

VIDEO CASSETTE RECORDER

SONY®



**Wireless Commander RMT-V102D (for SLV-595HF)/
V112A (for SLV-696HF)**

Remote control system	Infrared control
Command mode	VTR 1/2/3 switchable
Power requirements	3 V DC, 2 size AA batteries (IEC designation R6)

Accessories Supplied

Wireless Commander RMT-V102D (for SLV-595HF)/V112A (for SLV-696HF)	(1)
Size AA (R6) batteries	(2)
75-ohm coaxial cable with F-type connectors	(1)
External antenna connector	(1)
AC power cord	(1)
Audio/video connecting cable (3 phono to 3 phono)	(1)



Design and specifications are subject to change without notice.

SAFETY CHECK-OUT

After correcting the original service problem, perform the following safety checks before releasing the set to the customer:

1. Check the area of your repair for unsoldered or poorly-soldered connections. Check the entire board surface for solder splashes and bridges.
2. Check the interboard wiring to ensure that no wires are "pinched" or contact high-wattage resistors.
3. Look for unauthorized replacement parts, particularly transistors, that were installed during a previous repair. Point them out to the customer and recommend their replacement.
4. Look for parts which, though functioning, show obvious signs of deterioration. Point them out to the customer and recommend their replacement.
5. Check the B+ voltage to see it is at the values specified.

SAFETY-RELATED COMPONENT WARNING!!

COMPONENTS IDENTIFIED BY MARK  OR DOTTED LINE WITH MARK  ON THE SCHEMATIC DIAGRAMS AND IN THE PARTS LIST ARE CRITICAL TO SAFE OPERATION. REPLACE THESE COMPONENTS WITH SONY PARTS WHOSE PART NUMBERS APPEAR AS SHOWN IN THIS MANUAL OR IN SUPPLEMENTS PUBLISHED BY SONY.

ATTENTION AU COMPOSANT AYANT RAPPORT À LA SÉCURITÉ!


LES COMPOSANTS IDENTIFIÉS PAR UNE MARQUE  SUR LES DIAGRAMMES SCHÉMATIQUES ET LA LISTE DES PIÈCES SONT CRITIQUES POUR LA SÉCURITÉ DE FONCTIONNEMENT. NE REMPLACER CES COMPOSANTS QUE PAR DES PIÈCES SONY DONT LES NUMÉROS SONT DONNÉS DANS CE MANUEL OU DANS LES SUPPLÉMENTS PUBLIÉS PAR SONY.

TABLE OF CONTENTS

<u>Section</u>	<u>Title</u>	<u>Page</u>	<u>Section</u>	<u>Title</u>	<u>Page</u>
1.	GENERAL		3-7.	System Control	
	Hookups and Getting Started	7		— System Control Peripheral Circuit Interface	57
	Preparing the Remote Commander	12	3-8.	System Control — Audio Block Interface	58
	Setting the Time and Date	14	3-9.	System Control — Tuner Block Interface	59
	Presetting the Active Channels	15	3-10.	System Control and RF Modulator	
	Using The SET UP MENU	17		— Input Selection Block Interface	59
	Playback	18	3-11.	Servo/System Control — Microprocessor Pin	
	Recording TV Programs	20		Function (MA-106 Board IC502)	61
	Timer Recording	22	3-12.	Timer/Mode Control — Microprocessor Pin Function	
	Introducing VCR Plus +	25		(MF-140 Board IC901)	63
	Variable Speed Playback	27	3-13.	Servo/System Control Block Diagram	66
	Index Function	28	3-14.	Audio Block Diagram	69
	Quick-Timer Recording	30	3-15.	Tuner Block Diagram	74
	Editing	31	3-16.	Timer/Mode Control Block Diagram	77
	General Setup Information	34	3-17.	Power Block Diagram	79
	Identifying the Parts and Controls	35	4.	PRINTED WIRING BOARDS AND SCHEMATIC	
2.	DISASSEMBLY			DIAGRAMS	
2-1.	Removal of Upper Case, Bottom Plate and		4-1.	Frame Schematic Diagram	81
	Front Panel Assemblies	39	4-2.	Printed Wiring Boards and Schematic Diagrams	84
2-2.	Removal of Control SW Block Assembly	39		· RP-127 Board	85
2-3.	Removal of MF-140 Board	40		· YC-114, CG-14 Board	90
2-4.	Removal of Power Block (SR-370 Board)	40		· MA-106 Board	98
2-5.	Removal of FL Cassette Compartment Assembly	41		· MD-54, CA-41 Board	112
2-6.	Removal of RP-127 Board and Mechanism			· HF-24 Board	117
	Deck Block Assembly	42		· TU-132 Board	122
2-7.	Removal of HF-24, TU-132 and YC-114 Boards	43		· MF-140 Board	128
2-8.	Removal of MA-106 Board	43		· MF-143, MF-141 Board	134
2-9.	Internal Views	44		· SR-370 Board	139
3.	DIAGRAMS		4-3.	Semiconductor Lead Layout	143
3-1.	Circuit Boards Location	45	5.	EXPLODED VIEWS	
3-2.	Overall Block Diagram	46	5-1.	Front Panel and Cabinet Assemblies	145
3-3.	Video Block Diagram	49	5-2.	Mode control and Power Block Assemblies	146
3-4.	System Control — Video Block Interface	53	5-3.	Chassis Assembly	147
3-5.	System Control		5-4.	FL Cassette Compartment Assembly	148
	— Servo Peripheral Circuit Interface	54	5-5.	Mechanism Chassis Assembly (1)	149
3-6.	System Control		5-6.	Mechanism Chassis Assembly (2)	150
	—Mechanism Block Interface	55	5-7.	Mechanism Chassis Assembly (3)	151

TABLE OF CONTENTS

<u>Section</u>	<u>Title</u>	<u>Page</u>	<u>Section</u>	<u>Title</u>	<u>Page</u>
6.	ELECTRICAL PARTS LIST.....	152	7-7.	Tuner System Adjustment	
	HARDWARE LIST	168	7-7-1.	RF AGC Adjustment (TU-132 board)	178
7.	ELECTRICAL ADJUSTMENT.....	169	7-7-2.	Audio Multiple Recorder Adjustment	178
7-1.	Power Supply Check (SR-370 Board)	170	1.	Stereo filter and VCO adjustment (TU-132 board)	
7-2.	System Control/Tuner System Adjustment		1-1.	Stereo filter adjustment	179
1.	Clock adjustment	171	1-2.	VCO adjustment	179
7-3.	Servo System Adjustment		2.	Separation adjustment (TU-132 board)	179
1.	V switching position adjustment	171	2-1.	MPX input level rough adjustment	179
7-4.	Video System Adjustment		2-2.	Separation rough adjustment	179
1.	Crystal oscillation frequency check (YC-114 board)	172	2-3.	Separation fine adjustment	180
2.	Playback Y signal level adjustment (YC-114 board)	172	7-8.	Arrangement Diagram for Adjustment Parts	182
3.	Sync AGC adjustment (YC-114 board)	172			
4.	Sync tip carrier set and deviation adjustment (YC-114 board)	173			
5.	Recording chroma signal level adjustment (YC-114 board)	173			
7-5.	Data Screen Adjustment				
1.	4 fsc clock check (CG-14 board)	174			
2.	Character clock frequency check (CG-14 board)	174			
7-6.	Audio System Adjustment				
7-6-1.	Hi-Fi Audio System Adjustment	174			
1.	VCO fo adjustment (HF-24 board)	175			
2.	Band-pass filter fo adjustment (HF-24 board)	175			
3.	HF Switching position adjustment (MA-106 board)	176			
4.	Hi-Fi/normal discrimination adjustment (HF-24 board)	176			
5.	Deviation adjustment (HF-24 board)	176			
6.	E-E output level check (HF-24 board)	177			
7.	Overall level characteristic check	177			
7-6-2.	Normal Audio System Adjustment(MA-106 board)				
1.	ACE head adjustment	177			
2.	Playback output level check	177			
3.	Recording bias adjustment (MA-106 board)	178			
4.	Overall level characteristic check	178			

SERVICE NOTE

1. RETURNING PINCH ROLLER, GUIDE ROLLER AND ELEVATOR CAM TO STOP CONDITION

- 1) Remove the bottom panel.
- 2) Turn the worm gear **A** of the cam motor, located at lower of the MD, to the arrow direction **B** by finger.

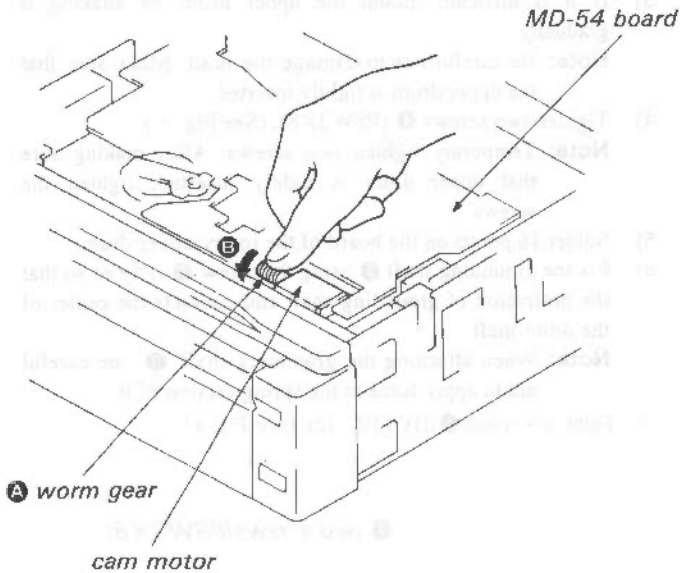


Fig. 1.

2. WINDING TAPE TO CASSETTE HALF

Turn the fly wheel **A** of the capstan motor to the arrow direction **B** by finger, then the cassette tape will be wound to the cassette half.

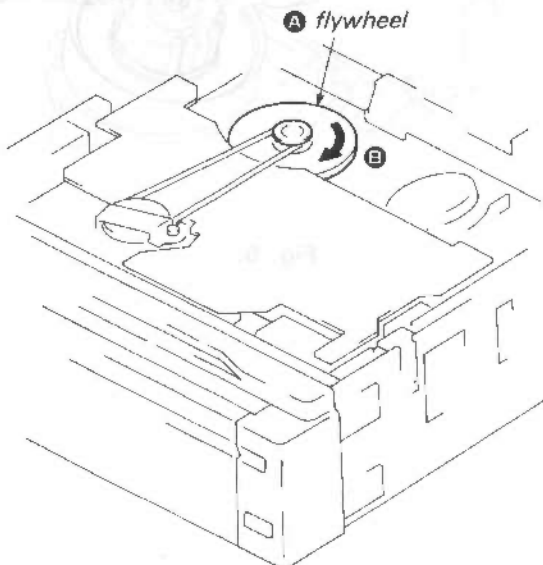


Fig. 2.

3. TAKING OUT CASSETTE WHEN UNIT IS DEFECTIVE WITH CASSETTE IN

- 1) Remove the upper case.
- 2) Turn the worm gear **A** of the FL cassette compartment motor to the arrow direction **B** by finger.

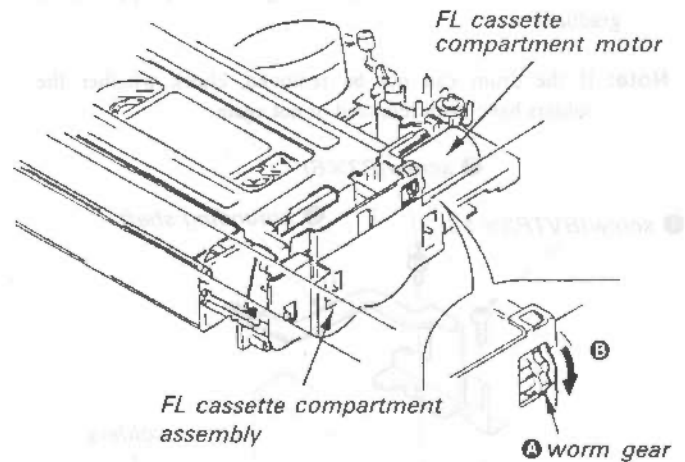


Fig. 3.

Note: When performing 1. to 3., be careful not to clog and damage the cassette tape.

4. UPPER DRUM REPLACEMENT

4-1. Removal of Upper Drum

- 1) Remove the screw ① (BVTP3×12). (See Fig. 4.)
- 2) Remove the screw ② (P3×6) and take out the grounding shaft ③. (See Fig. 4.)
- 3) Completely remove the rotary upper drum board and desolder the soldering indicated by the arrows (16 points).
- 4) Remove two screws ④ (PSW3×8) and take out the rotary upper drum in the arrow direction A. (See Fig. 5.)
If it is difficult, remove by shaking the rotary upper drum gradually.

Note: If the drum can not be removed, check whether the solders have been removed or not again.

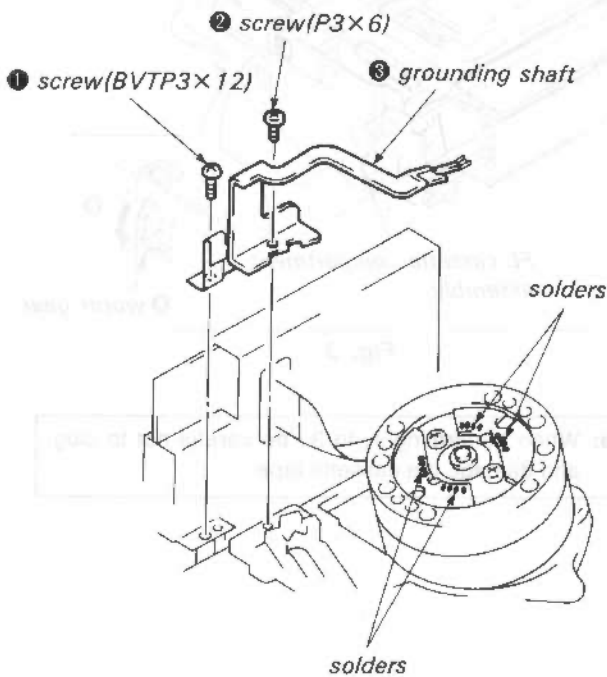


Fig. 4.

4-2. Mounting Upper Drum

- 1) When inserting the rotary drum into the lower drum, be careful not to blur the contacting surface with fingerprint or the like.
- 2) Mount the rotary upper drum by aligning red head side with marked S1 of rotary transformer board(lower drum) so that the screw holes of both upper and lower drums match. (See Fig.5.)
- 3) If it is difficult, mount the upper drum by shaking it gradually.

Note: Be careful not to damage the head. Make sure that the upper drum is tightly inserted.

- 4) Tighten two screws ④ (PSW3×8). (See Fig. 5.)
Note: Temporary tighten two screws. After making sure that upper drum is tightly inserted, tighten the screws.
- 5) Solder 16 points on the board of the rotary upper drum.
- 6) Fix the grounding shaft ③ using the screw ② (P3×6) so that the protrusion of grounding shaft end contacts the center of the drum shaft.

Note: When attaching the grounding shaft ③, be careful not to apply force to the spring section of it.

- 7) Tighten a screw ① (BVTP3×12). (See Fig. 4.)

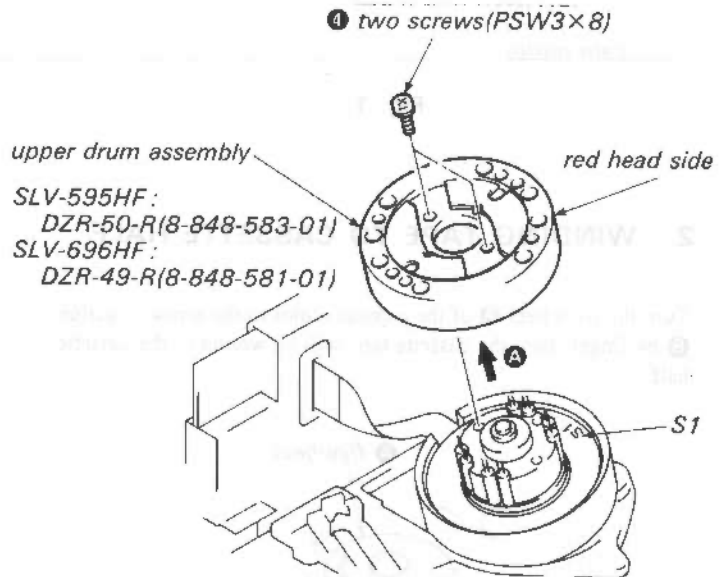


Fig. 5.

SECTION 1 GENERAL

This section is extracted from instruction manual.

Hookups and Getting Started

Before you can use your VCR for the first time, you need to connect it to your TV and set it up to receive programs for viewing and recording. This section explains how to hook up, set up, and operate your VCR so that you can start enjoying it right away. There are, however, many types of TVs available and many different ways in which your TV can be hooked up. As a result, this manual describes several ways your VCR can be connected.


To hook up your VCR so that it works best for you, first scan through this section to find the diagram that best illustrates the way your TV is currently connected (antenna or cable/cable box). Then use the accompanying diagrams and procedures to complete your VCR's connections.

After you've completed the connections, follow the instructions for setup, including VCR Plus+ setup. (During setup, if you need more details of the procedures described, page numbers are provided where you can find complete, step-by-step instructions.)

After you've completed the setup, you're ready to use your VCR. Follow the instructions provided in "To Watch the TV", "To Watch the VCR", and "To Record A Program" for your specific hookup. (Again, if you need step-by-step instructions, page numbers are provided where you can find this information.)

Before making the connections, check the following points:

- Turn off the power to the VCR and TV.
- Do not connect the AC power cords until all of the connections are completed.

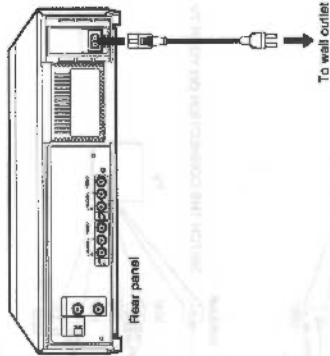

- Make connections firmly. Loose connections may cause picture distortion.
- If your TV doesn't match any of the examples provided, consult your nearest Sony dealer or qualified technician.

Caution

Connections between the VCR VHF/UHF OUT connector and the antenna terminals of a TV receiver should be made only as shown in the instructions. Failure to do so may result in operation that violates the regulations of the Federal Communications Commission regarding the use and operation of RF devices. Never connect the output of the recorder to an antenna or make simultaneous (parallel) antenna and recorder connections at the antenna terminals of your receiver.


Hookup 1

Audio/Video (A/V) Hookup


If your TV has audio/video (A/V) input jacks, you will get a better picture and sound if you hook up your VCR using these connections. In addition, for a true "home theater" experience, you should connect the audio outputs of your VCR or TV to your stereo system.

If your TV doesn't have A/V inputs, see the following pages for antenna or cable hookup.

1A Use hookup 1A if your TV is a stereo type.

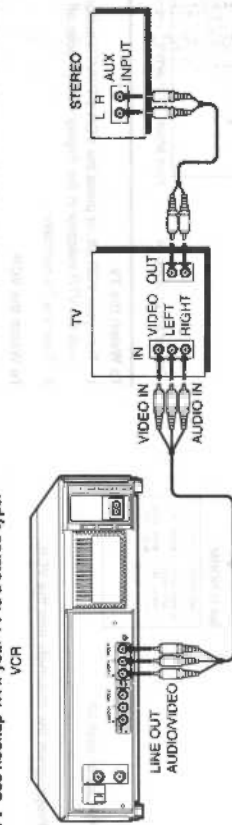


1B Use hookup 1B if your TV does not have stereo jacks.

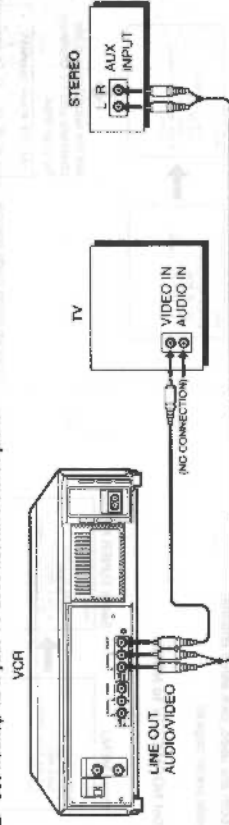

After you've hooked up your TV using the A/V connections, use the following procedure to set up and use the VCR with your TV.

A/V Setup & Operation

Set AUTO ANT SEL to OFF.

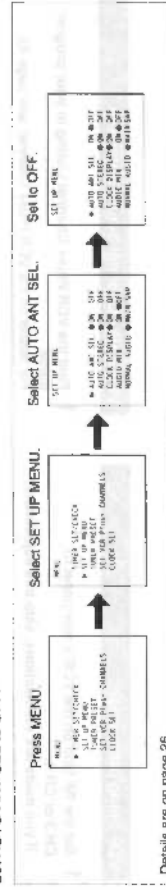


Details are on page 26

Hookups and Getting Started

Hookup 2

Antenna Hookup


Make the following connections if you're using an antenna (not a cable TV).

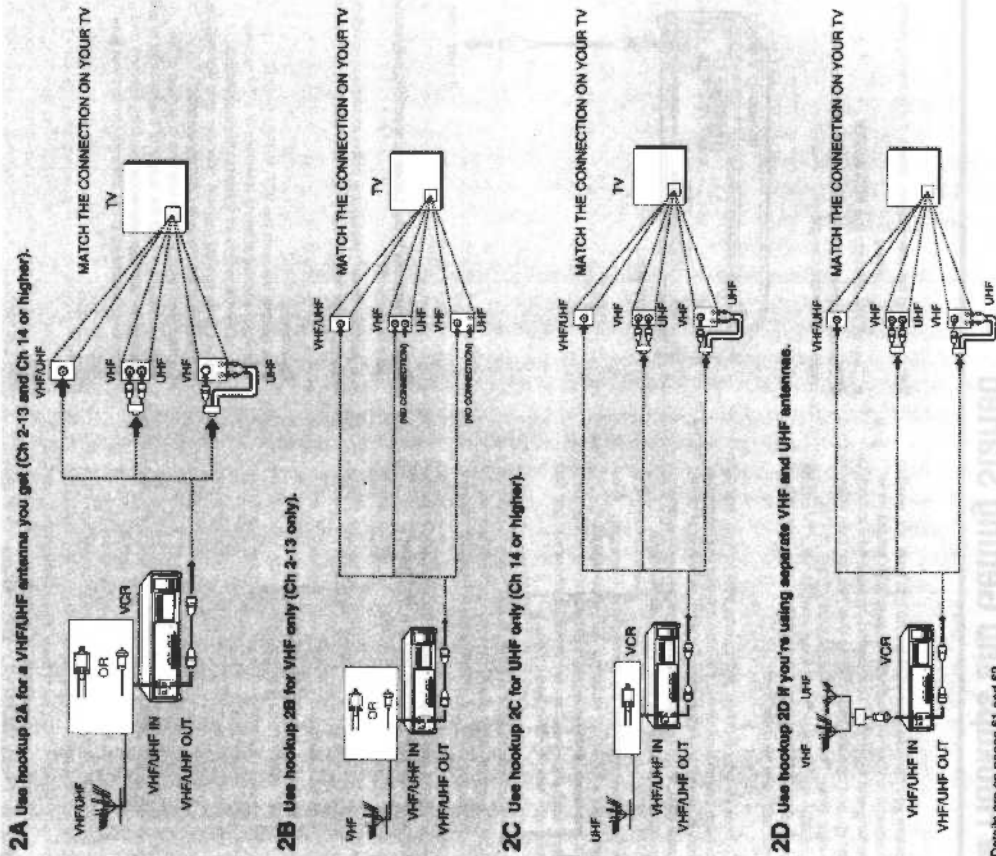

Details are on pages 61 and 62


VCR Setup (Antenna)

- 1 Set the RF Unit on the VCR's rear panel to CH 3 or CH 4. If you made AV connections, skip this adjustment.

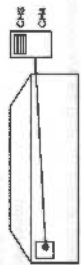


Set to whichever channel is not used in your area. If both are used, pick either channel. Details are on page 60.

- 2 Set NORM/CATV to NORM.

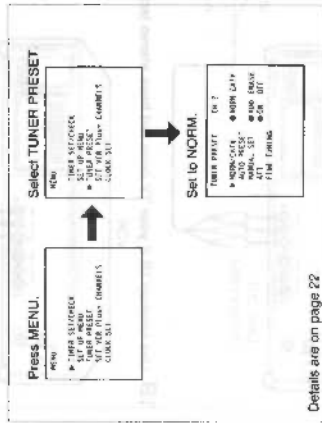

Details are on page 22


- 3 Preprogram the channels into the VCR.

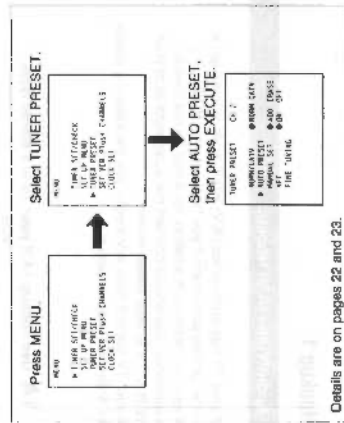

Details are on pages 22 and 23.

VCR Plus+ Channel Setup (Antenna)

- 1 Find the VCR Plus+ Channel Listing in your program guide. For details on the VCR Plus+ Channel, see page 43.
- 2 If the channels in the program guide are different from the channels that you actually use on your TV, set the channels that are different as follows:

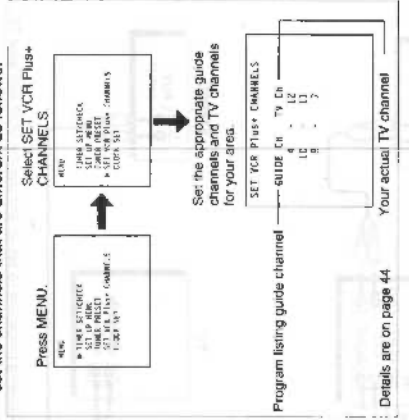

Details are on page 44

To Watch the TV

- 1 Turn your VCR off, or press the VCR's TV/VTR button until the VTR indicator in the display window goes off.
- 2 Tune the TV normally.

To Watch the VCR

- 1 Tune the TV to CH 3 or CH 4, whichever you set on the back of the VCR. (If you made the AV connections on page 7, set your TV to the AV input instead.)
- 2 Insert a cassette and press \rightarrow PLAY. If there's no picture on your TV, press the VCR's TV/VTR button until the VTR indicator comes on in the VCR's display window. Details are on page 28.

To Record A Program


- 1 Press VCR Plus+ on the Remote Commander.
- 2 Enter the program's PlusCode number.
- 3 Press ONCE, DAILY, or WEEKLY on the Remote Commander.
- 4 Insert a blank cassette.
- 5 Press TIMER REC on the Remote Commander. Details are on page 45.

Hookups and Getting Started

Hookup 3

Simple Cable Hookup

Recommended Use:
Since this is the simplest hookup, and allows the most effective use of your VCR's VCR Plus+ timer recording feature, we recommend that you try this hookup first. If you cannot record the channels you want, you'll need to change your hookup to one of the choices on the following pages, or contact your cable company for assistance.

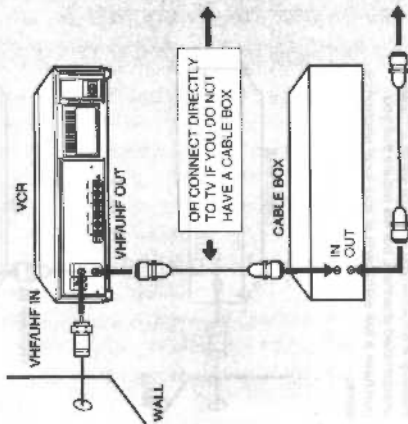


What You Can and Can't Do With This Hookup

- What You Can Do**
- Record any unscrambled channel directly, without using a cable box.

- What You Can't Do**
- Record scrambled channels that require a cable box.

Background

This VCR can record virtually any unscrambled cable channel. Some cable systems "scramble" specific channels. You will not be able to record scrambled channels with this hookup.

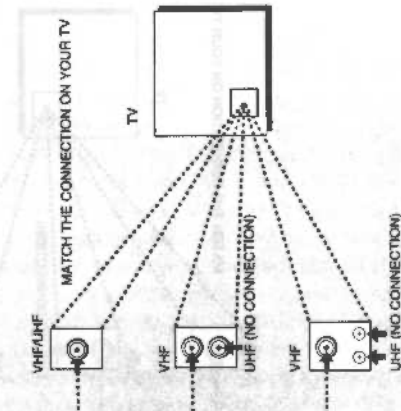

VCR Setup (Simple Cable)


- 1 Set the RF Unit on the VCR's rear panel to CH 3 or CH 4. If you made A/V connections, skip this adjustment.




Set to whichever channel is not used in your area. If both are used, pick either channel.

Details are on page 80.

- 2 Set NORM/CATV to CATV.

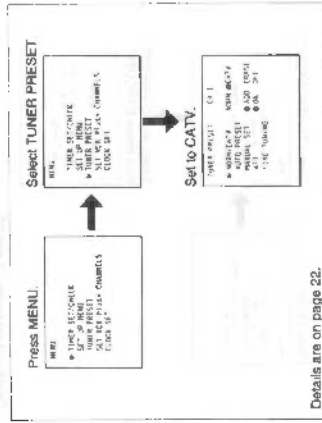


- 3 Preprogram the channels into the VCR.

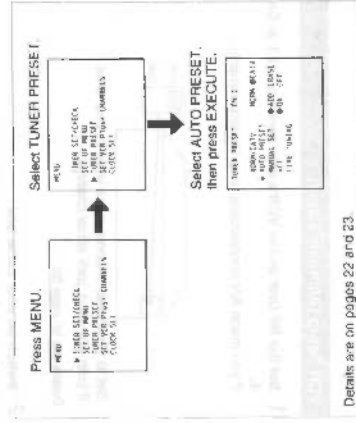

Hookups and Getting Started

VCR Plus+ Channel Setup (Simple Cable)

- 1 Find the VCR Plus+ Channel Listing in your program guide. For details, see page 43.
- 2 If the channels in the program guide are different from the channels that you actually use on your TV, set the channels that are different as follows:

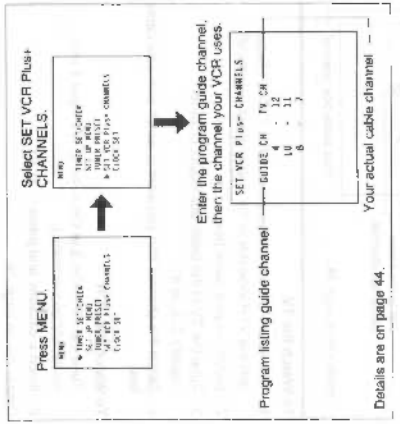

To Watch TV

- 1 Turn your VCR off, or press the VCR's TV/VTR button until the VTR indicator in the display window goes off.
- 2 Select the channel with your cable box (if you have one), or directly tune with your TV (if you don't).

To Watch the VCR

- 1a If you don't use the A/V input:
 - Turn ON the cable box.
 - Select CH 3 or CH 4 on the cable box (whichever you set on the back of the VCR).
 - Select the output channel of the cable box (usually 2,3 or 4) on your TV.
- 1b If you made the A/V connections on page 7:
 - Set your TV to the A/V input.

- 2 Insert a cassette and press **PLAY**.

Details are on page 28

To Record A Program

- 1 Press VCR Plus+ on the Remote Commander.
- 2 Enter the program's PlusCode number.
- 3 Press ONCE, DAILY, or WEEKLY on the Remote Commander.
- 4 Insert a blank cassette
- 5 Press TIMER REC on the Remote Commander


Details are on page 45.

Hookups and Getting Started

Hookup 4

Alternate Cable Hookup

Recommended Use: This hookup will allow you to record either scrambled or unscrambled channels, however, you will have to set the channel on the cable box for each program you want to record. If your cable system scrambles all or most channels, you must use this hookup. If your cable system only scrambles a few channels, you may prefer Hookup 3 or 5 (on pages 10 and 14, respectively). Please note that Hookup 3 will allow the easiest programming with VCR Plus+, but will not allow you to record scrambled channels. Hookup 5 will allow you to record either scrambled or unscrambled channels, but will require that you purchase a few extra parts at your local electronics store.

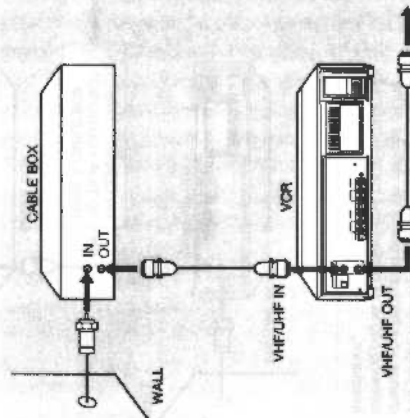


What You Can and Can't Do With This Hookup

- What You Can Do**
- Record any channel by selecting the channel on the cable box.

Background

This VCR can record virtually any unscrambled cable channel. Some cable systems "scramble" specific channels, usually premium or pay-per-view channels. Although this hookup will also allow you to record these scrambled channels, you must use the cable box rather than the VCR to select channels.

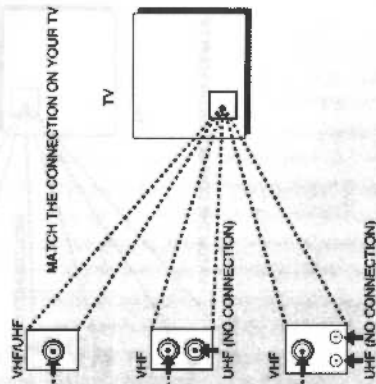

What You Can't Do

- Record with the cable box turned off.
- Record on selecting channels directly from the VCR.
- Record one channel while watching another channel.


VCR Setup (Alternate Cable)

- Set the RF Unit on the VCR's rear panel to CH 3 or CH 4. If you made A/V connections, skip this adjustment.



Set to whichever channel is not used in your area. If both are used, pick either channel. Details are on page 80.


- Switch on your cable box.
- Preprogram the channels into the VCR.

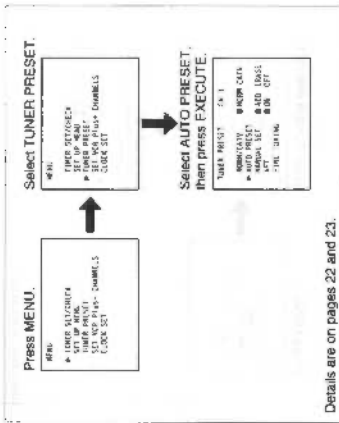

Details are on pages 22 and 23.

VCR Plus+ Channel Setup (Alternate Cable)

- Find the VCR Plus+ Channel Listing in your program guide. For details, see page 43.
- For all channels that you want to record, set each channel to the channel that your cable box uses for its output (usually 2, 3, or 4), as follows:

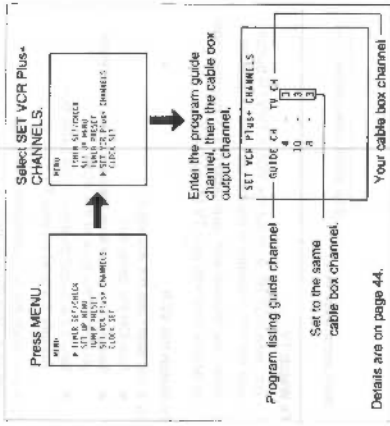

Details are on page 44.

To Watch the TV

- Turn your VCR off, or press the VCR's TV/VTR button until the VTR indicator in the display window goes off.
- Switch on your cable box.
- Tune the TV to the cable box output channel (usually 2, 3, or 4).
- Select the channel that you want to watch with your cable box.

To Watch the VCR

- Tune the TV to CH 3 or CH 4, (or to A/V input if you made A/V connections.)
- Insert a cassette and press **▶** PLAY. Details are on page 28.

To Record a Program

- Switch on the cable box.
- Select a channel you wish to record on the cable box.
- Press VCR Plus+ on the Remote Commander.
- Enter the program's PlusCode number.
- Press ONCE, DAILY, or WEEKLY on the Remote Commander.
- Insert a blank cassette.
- Press TIMER REC on the Remote Commander. Details are on page 45.

Hookups and Getting Started

Hookup 5


Advanced Cable Hookup

Recommended Use: By using the A/B switch, this hookup allows you to record most channels directly from the VCR (position "A"). You only use position "B" and the cable box if you want to record a "scrambled" channel. This gives you the most convenient operation of VCR Plus+ and the VCR's timer.

Background

This VCR can record virtually any unscrambled cable channel. Some cable systems "scramble" specific channels, usually premium or pay-per-view channels. This hookup will allow you to record unscrambled channels by selecting "A" on the A/B switch, and tuning the channel directly on your VCR. To record "scrambled" channels, select "B" on the A/B switch, and select the channel using the cable box. If your cable system scrambles all, or most channels, you must use the alternate cable hookup (Hookup 4) or page 12.

- Only one cable is supplied with your VCR. Prepare additional cables for connection.

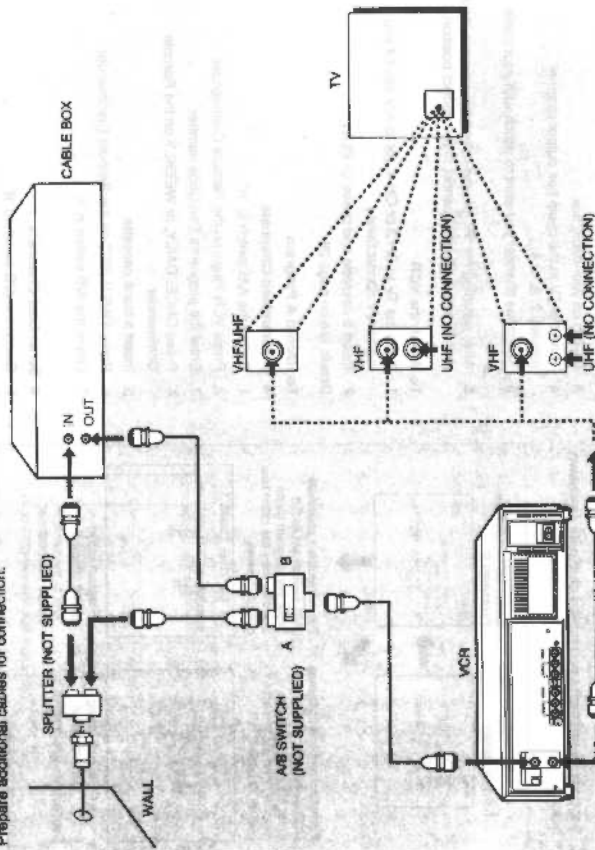

What You Can and Can't Do With This Hookup

- What You Can Do**
- Record unscrambled channels directly with the A/B switch in the "A" position.
 - Record scrambled channels through the cable box with the A/B switch in the "B" position.

What You Can't Do

- Record scrambled channels directly without the cable box.
- Watch a different channel while you are recording a scrambled channel.
- Record scrambled channels through the cable box with the A/B switch in the "A" position.


VCR Setup (Advanced Cable)

- Set the RF Unit on the VCR's rear panel to CH 3 or CH 4.




Set to whichever channel is not used in your area. If both are used, pick either channel. Details are on page 60.

- Set the A/B switch to "A".
- Set NORM/CATV to CATV.

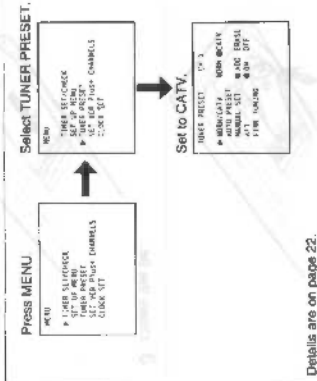


Details are on page 22.

- Reprogram the channels into the VCR.

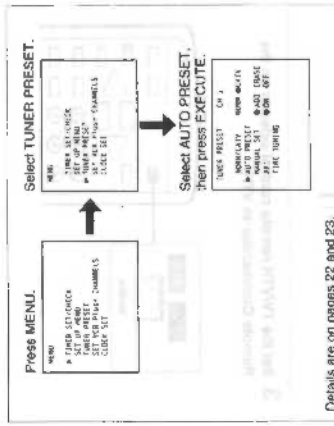

Details are on pages 22 and 23.

- Add the cable box output channel (usually 2, 3, or 4).

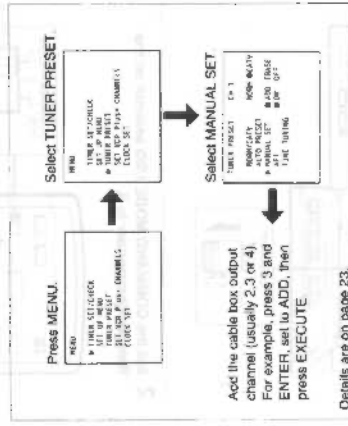

Details are on page 23.

Preparing the Remote Commander

Controlling Other Sony Video Equipment If Other Sony Video Equipment Has a COMMAND MODE Selector:

- 1 Set the Remote Commander COMMAND MODE selector to a position other than the one you selected for this VCR.
- 2 Set the COMMAND MODE selector of any other video equipment to the same position you selected in step 1.

If other Sony video equipment does not have a COMMAND MODE selector, you can control other Sony video equipment using the following COMMAND MODE settings:

Infrared remote controlled Sony Betamax VCR's: position 1

(Some of them may not be controlled in this mode.)

Sony 8 mm format VCR's: position 2

Sony VHS format VCR's: position 3

Manufacturers and their Code Numbers (SLV-698HF only)


Your Remote Commander is preprogrammed for use with a number of different TV sets. If your TV is listed in the table below, set the appropriate manufacturer's code prior to using the Remote Commander.

Manufacturer	Code Number	Manufacturer	Code Number
SONY	1	Parasonic	6
Akai	4	Philco	3, 4
AOC	4	Phillips	8
Centurion	12	Pioneer	15
Coronado	3	Portland	3
Curtis-Matthes	12	Quasar	6
Daytron	12	Radio Shack	5
Fisher	11	RCA	4, 10
General Electric	6, 10	Sampo	12
Hitachi	2, 3	Sanyo	11
J.C. Penney	4, 12	Scott	12
JVC	9	Sylvania	6, 12
KMC	3	Teknika	3, 8
Mananz	4, 13	Toshiba	7
MGA/Mitsubishi	4, 12, 13	Wards	3, 4, 12
NEC	4, 12	Yorx	12
		Zenith	14

Setting the Manufacturer's Code Number


The following steps show you how to use your Remote Commander to set the appropriate manufacturer's code number for a non-Sony TV.

- 1 Set the TV/VTR remote control selector to TV.

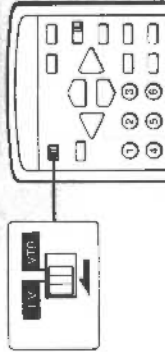

- 2 While pressing the EXECUTE button, press the manufacturer's code number and the ENTER button.

You can now use the POWER, VOL +/-, CHANNEL +/- and the TV/VTR buttons on your Remote Commander to operate the TV.

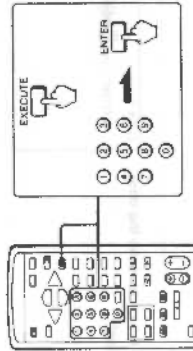

NOTES:

- The TV/VTR button may not function, depending on the manufacturer. If this problem occurs, use your TV's remote control unit.
- If more than one code number is listed, try entering them one at a time until you find the one that works with your TV.
- If you enter a new code number, the code number previously entered will be erased.
- If you release the EXECUTE button before pressing the ENTER button, the setting will be cancelled.
- Some manufacturers may use a different remote control system from the one programmed to work with your VCR. If this is the case, and you are unable to operate the TV with your Remote Commander, use the TV's remote control unit instead.
- When you replace the batteries in the Remote Commander, the code number automatically resets to 1 (SONY). Reset the appropriate code number, if necessary.


Setting the Time and Date

You can set the VCR time and date on the TV screen using the Remote Commander.

Example of Time and Date Setting

Example: To set to 3:32 pm, July 4, 1992

Use **4** and **9** to move the cursor.
Use **4** and **9** to select the items.

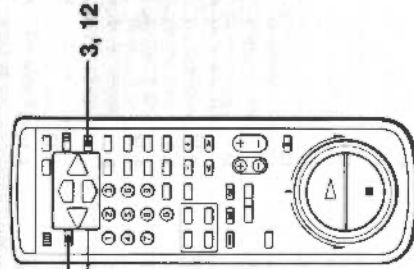

1 Press MENU.
The main MENU appears.




2 Press 4 or 9 to move the cursor (P) to CLOCK SET.




3 Press EXECUTE.


"1/1 1992 WED 12:00 AM" is displayed. The leftmost 1, in the "month" position, flashes.

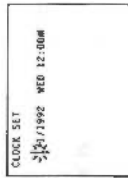

4 Press 4 or 9 until 7 appears in the month position.

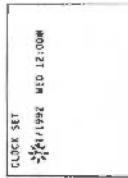


5 Press 4 or 9 until 4 appears in the "day" position flash.

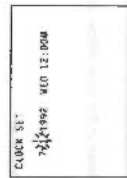


6 Press 4 or 9 until 4 appears in the day position.
The day of the week is set automatically.



7 Press 4 or 9 to make the year flash and press 4 to change the year.

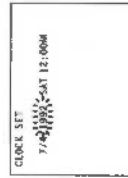

8 Press 4 or 9 to make the time flash.

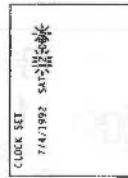

9 Press 4 or 9 until 3 PM appears.



10 Press 4 or 9 to make the minute flash.



11 Press 4 or 9 until 32 appears in the minute position.



12 Press EXECUTE at the same time that you hear the time signal.
Pressing EXECUTE will set the clock to 3:32 pm 00 seconds.

NOTES:

- Do not set the time and date during timer-activated recording, timer recording standby or quick-timer recording.
- When the time and date clock is displayed the clock keeps running as long as no changes are made. The seconds are not reset to 00 when you return to the original screen.


Presetting the Active Channels

This VCR is capable of receiving VHF channels 2 to 13, UHF channels 14 to 69 and CATV channels 1 to 125. These channels can be preset using the Remote Commander and the TUNER PRESET display. First, we recommend that you preset the active channels in your area using the automatic preset mode. Then, if there are any unwanted channels, disable them manually. If you have already decided which channels you wish to preset on the VCR, set them directly using the channel number buttons.


- Before presetting channels, check the following points:
- Turn ON the VCR and the TV.
 - If you have connected the TV and the VCR using the VHF/UHF OUT on the VCR only, make sure that the TV is set to the correct channel (CH 3 or CH 4) for the VCR.
 - Press TV/VTR to display the VTR indicator in the display window on the VCR.
 - Press INPUT SELECT so that the TUNER indicator and channel number appear in the display window on the VCR.

Presetting All Receivable Channels Automatically

Use **▲** and **▼** to move the cursor.
Use **4** and **▶** to select the items.

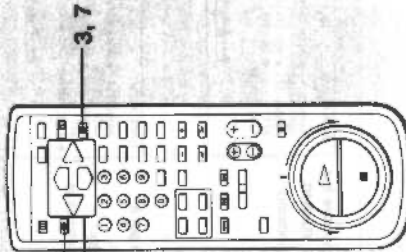


1 Press MENU.
The main MENU appears.

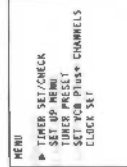

2 Press ▲ or ▼ to move the cursor (P) to TUNER PRESET.




3 Press EXECUTE.
The TUNER PRESET menu is displayed.

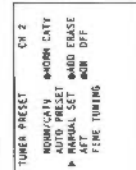


4 Press ▲ or ▼ to move the cursor to NORM/CATV.



5 Press 4 or ▶ to select NORM or CATV.
NORM presets the VHF and UHF channels; CATV presets your cable TV channels. The lowest channel number, 2 for NORM and 1 for CATV, will appear on the screen.

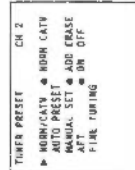

6 Press ▲ or ▼ to move the cursor to AUTO PRESET.

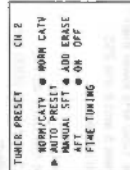

7 Press EXECUTE.


Receivable channels are preset in numerical sequence. When no more channels can be found, the presetting stops and the picture of the lowest numbered channel is displayed on the tape counter. "please wait" is flashing while presetting on the TV screen.

NOTE:
The VCR automatically exits from the TUNER PRESET menu if you don't proceed for more than one minute.

Presetting Desired Channels or Disabling Unwanted Channels

After automatic presetting, you can disable and/or add channels.

Use **▲** and **▼** to move the cursor.
Use **4** and **▶** to select the items.

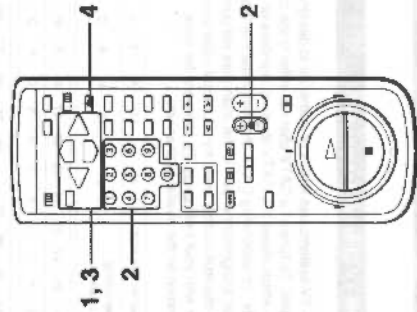

1 Follow steps 1 to 3 in "Presetting All Receivable Channels Automatically" on page 22.

**2 To disable channels, press CH +/- to select the channel.
To add channels, press channel number buttons (0 to 9) and ENTER key to select the channel.**

**3 To disable channels, press 4 or ▶ to select ERASE.
To add channels, press 4 or ▶ to select ADD.**

4 Press EXECUTE.

When you press CH +/-, the disabled channels are removed and the added channels are displayed.

Presetting the Active Channels

Fine-tuning

Normally, the Auto Fine Tuning (AFT) setting on the menu is set to ON, and the AFT function fine-tunes the picture. If the picture of a channel is not acceptable, fine-tune it manually.

- 1 Display the **TUNER PRESET** menu referring to steps 1 to 3 in "Presetting All Receivable Channels Automatically" (page 22).

- 2 Press **▲** or **▼** to move the cursor to **FINE TUNING**.
The fine tuning indicator is displayed.

- 3 Press **◀** or **▶** to get a clearer picture.
The AFT ON/OFF automatically switches to OFF.

- 4 Press **▲** to move the cursor to **AFT** and select **ON** if you cannot get a better picture. Then, press **EXECUTE**.

The FINE TUNING Indicator

The **FINE TUNING** indicator shows the operable fine-tuning range and stops at the optimal point of reception. When the VCR's tuner is receiving an optimal broadcast signal, the indicator stops at the center position or one space right or left of the center position. However, even when a broadcast is received in an optimal condition, the indicator may not be at the position described.

Cable TV Channel Assignment

Cable TV systems use letters or numerals to designate the channels. To tune-in a CATV channel, refer to the chart below which shows the CATV channel, numbers on this VCR and the corresponding CATV channel. Note that the channel number assignment shown in the chart may not correspond to the channel number used by your local cable company. Check with your local cable TV company for more information on the available channels.

Number on this VCR	1	2	...	13	14	15	16	17	18					
Corresponding CATV channel	A-8	2	...	13	A	B	C	D	E					
F	19	20	21	22	23	24	25	26	27	28	29	30	31	32
G	33	34	35	36	37	...	94	95	96	97	98	99		
H	T	U	V	W	W+1	...	W-58	A-5	A-4	A-3	A-2	A-1		
I	100	...	125											
J	W-50	...	W-64											

This VCR is designed to correspond to the standard cable system. However, the cable TV services may vary from area to area. Your local cable TV company may adopt either the HRC[®] or IRC[®] cable system. This VCR is capable of receiving either of these cable systems in the best condition.

- 1) **HRC (Harmonic Related Carriers)**
All channels except for 5 and 6 are 1250 kHz lower than the standard cable system. Channels 5 and 6 are 750 kHz higher than the standard cable system.
- 2) **IRC (Incremental Related Carriers)**
All channels except for 5 and 6 are the same as the standard cable system. Channels 5 and 6 are 2000 kHz higher than the standard cable system.

FINE TUNING indicator for receiving HRC or IRC cable systems

Even when the signals are received in optimal condition, the **FINE TUNING** indicator will not stay at the center position for channels higher or lower than the standard cable system due to the difference in the frequency.


NOTE:

Pay cable TV systems use scrambled or encoded signals and require special converters (decoders) in addition to the normal cable connection.

Using The SET UP MENU

Before using your VCR, make your preferred audio and video display choices from the SET UP MENU.

Use **▲** and **▼** to move the cursor.
Use **◀** and **▶** to select the items.

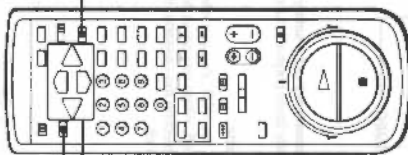

1 Press MENU.
The main MENU appears.

MENU
▶ TUNER SET/CHECK
▶ SET UP MENU
▶ TUNER PRESET
▶ SET FCB PLUS+ CHANNELS
▶ CLOCK SET

2 Press ▲ or ▼ to move the cursor (▶) to SET UP MENU.

MENU
▶ TUNER SET/CHECK
▶ SET UP MENU
▶ TUNER PRESET
▶ SET FCB PLUS+ CHANNELS
▶ CLOCK SET

3 Press EXECUTE.
The SET UP MENU appears.

SET UP MENU
▶ LANGUAGE #ENGLISH FRENCH
▶ AUTO ANT SEL ● ON OFF
▶ AUTO STEREO ● ON OFF
▶ CLOCK DISPLAY ● ON OFF
▶ VCR MIX ● ON OFF
▶ NORMAL AUDIO ● MAIN SAP

4 Press ▲ or ▼ to move the cursor to the desired menu choice. (For Menu Choices, see the next page.)
Next, press **◀** or **▶** to change the mode setting to ON or OFF.

SET UP MENU
▶ LANGUAGE #ENGLISH FRENCH
▶ AUTO ANT SEL ● ON OFF
▶ AUTO STEREO ● ON OFF
▶ CLOCK DISPLAY ● ON OFF
▶ VCR MIX ● ON OFF
▶ NORMAL AUDIO ● MAIN SAP

5 Press ◀ or ▶ to move the dot (●) to the desired setting.

6 Press EXECUTE to return to the original screen.
The settings are stored. The displayed page is stored unless the power plug is disconnected.

Menu Choices

LANGUAGE (Canadian versions only)

You can preset your VCR to display screen information in either English or French.

AUTO ANT SEL (Automatic Antenna Selector)

● If your TV is connected only to VHF/UHF OUT on the VCR, set to ON.

When playing back a cassette, the picture is automatically displayed on the screen simply by selecting the channel for the VCR on the TV. To watch TV programs selected on the TV, press TV/VTR to turn off the VTR indicator in the display window.

● If your TV is connected to both VHF/UHF OUT and LINE OUT on the VCR, set to OFF.

When playing back a cassette, select the input for the VCR on the TV.

To watch TV programs selected on the TV, select the tuner input.

AUTO STEREO

If a stereo program's reception is poor, set to OFF. The program is recorded in monaural but sound quality may improve. For details, see page 35.

CLOCK DISPLAY

To erase the current time and date from the on-screen display, set to OFF.

AUDIO MIX

To listen to sound recorded on both the hi-fi video track and the normal audio track of the audio tape, set to ON. For details, see page 32.

NORMAL AUDIO

When there is a SAP (Second Audio Program) broadcast, select SAP to record the SAP sound on the normal audio track. For details, see page 35.

NOTE:


The VCR automatically exits from the main MENU and SET UP MENU if you don't proceed for more than one minute.

Playback

This section shows you how to play back a video cassette.

Inserting a Video Cassette

- 1 Insert a video cassette as shown below.
- 2 Gently press the center of the front side of the cassette until the mechanism draws it into the compartment.
When the cassette has been loaded, the cassette indicator (C) lights in the display window and the VCR turns on automatically.

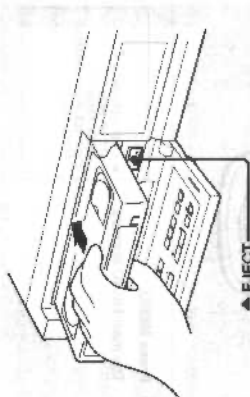

NOTE:

If you insert a cassette without a safety tab, playback starts automatically (auto playback function).

Ejecting the cassette

Press **EJECT** on the VCR. You can eject the cassette when the power is off. When you press **EJECT**, the power automatically shuts off.

Protecting your cassette against accidental erasure

Cassettes have a safety tab to protect against accidental recording. Break off the safety tab with a screwdriver or other tool. If the safety tab is removed, the cassette will be ejected when you try to record on it.



To record on a cassette with the safety tab broken off, simply cover the tab hole with adhesive tape.



Maximum recording time of a cassette

Recording in either the SP or EP mode is possible with this VCR. When recording, select the desired recording mode (SP or EP) using TAPE SPEED on the Remote Commander or the VCR. During playback, the VCR automatically detects the recording format, and then plays back the cassette in the appropriate mode. A cassette recorded in the EP mode runs three times as slowly as a cassette recorded in the SP mode. Refer to the chart below for the recording/playback times available.

Cassette tape	Recording / Playback time	
	SP mode	EP mode
T-180	3 hr.	9 hr.
T-160	2 hr. 40 min.	8 hr.
T-120	2 hr.	6 hr.
T-60	1 hr.	3 hr.
T-30	30 min.	1 hr. 30 min.

Cassettes recorded in LP mode

Playback of cassettes recorded in LP mode is also possible with this VCR. However, playback in modes other than normal forward speed is not guaranteed. This VCR is not designed to record in the LP mode.

Playback

- 1 Insert a cassette.
- 2 Turn on the TV.
- 3 If your TV is connected to both VHF/UHF OUT and LINE OUT on the VCR, select the input for the VCR. If your TV is connected only to the VHF/UHF OUT on the VCR, select the channel for the VCR (CH 3 or CH 4).
- 4 Press **PLAY**.

To stop playback:
Press **STOP**.

To stop playback for a moment:
Press **II PAUSE**

Press **II PAUSE** again or **▶ PLAY** to resume playback.

To fast-forward the cassette at high speed during stop mode:
Turn the DUAL MODE SHUTTLE ring to the right (**▶▶▶**).

To rewind the cassette during stop mode:
Turn the DUAL MODE SHUTTLE ring to the left (**◀◀◀**).

To rewind the cassette at high speed:
Press **◀◀◀ HI-SPEED REWIND**.



To rewind the cassette to its beginning and to playback automatically (auto playback function):
Press **▶ PLAY** while decreasing **◀◀◀ HI-SPEED REWIND** or by using the DUAL MODE SHUTTLE ring.
You cannot use the Remote Commander for the auto playback function.

To get a sharper picture:
Turn the SHARPNESS control to SHARP.

To get a softer picture:
Turn the SHARPNESS control to SOFT.

When the cassette reaches its end:


The cassette automatically rewinds to the beginning (auto rewind), and power remains on.

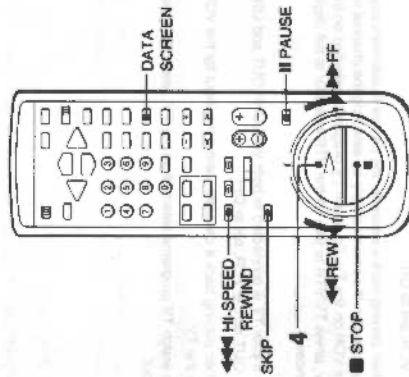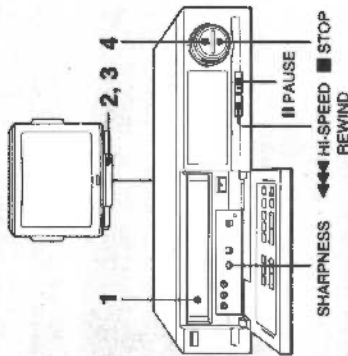

Playback

The Data Screen

To delete or call up the data screen on the TV screen, press DATA SCREEN on the Remote Commander.

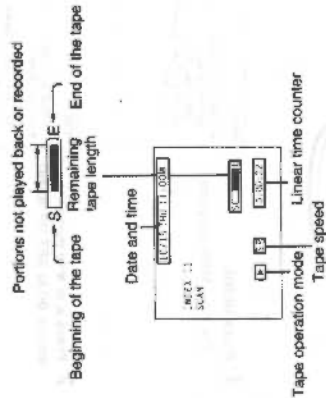


NOTES:

- The remaining tape length displayed is approximate. Therefore, use it only as an approximate reference.
- When you insert a cassette with a short tape length such as T-20, T-30 or a non-standard commercially available cassette, this indicator may not function correctly.
- The data screen display cannot be displayed on the screen during still mode, slow motion playback or high-speed playback.

Indexing Tape Contents

Before recording or playback, press COUNTER RESET on the VCR to reset the counter to zero. By noting the setting, you can find that point later by referring to the counter. Use the label on the cassette to list the programs and their counter readings.

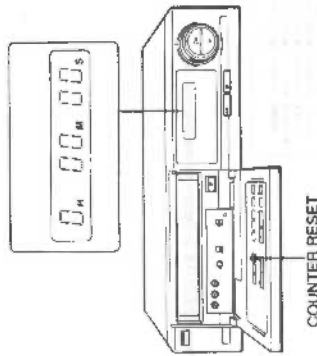


NOTES ON COUNTER READING:

- After a cassette is ejected, the counter reading is retained. When a cassette is reinserted the counter returns to "00000000".
- The counter does not work properly on the portions on which no recording has been made.

Playing Back Externally-Recorded Tapes

When playing back a cassette recorded on another VCR, the tracking condition is automatically adjusted. You can also adjust the tracking condition and the sharpness manually according to the following instructions.

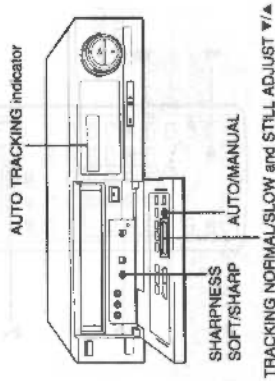

Manual tracking adjustment

When the playback picture has streaks or snow during normal playback, adjust the picture manually with TRACKING NORMAL/SLOW and STILL ADJUST. Press either \blacktriangle or \blacktriangledown for the best possible picture. The tracking meter will appear on the TV screen and the AUTO TRACKING indicator will turn off.

When the manual adjustment proves unsatisfactory, press both TRACKING NORMAL/SLOW and STILL ADJUST. The tracking condition will return to the center position.



Automatic tracking adjustment

The tracking condition is automatically adjusted on this VCR. The AUTO TRACKING indicator flashes while the VCR is searching for the optimum tracking condition and lights when optimum playback picture is obtained. The automatic tracking control is activated in the following conditions:

- When the cassette is inserted for the first time
- When the recording mode on the playback cassette is switched from SP to EP and back again
- When the picture is distorted by scratches on the cassette
- When the AUTO TRACKING indicator is turned on by pressing TRACKING AUTO/MANUAL after the picture is adjusted manually

Adjusting the sharpness

Turn the SHARPNESS SOFT/SHARP control toward SHARP for a sharper picture. Turn it toward SOFT for a softer picture.

NOTES:

- Auto tracking adjustment is not possible for cassettes recorded in LP mode.
- Auto tracking adjustment may be impossible and the tracking indicator may not appear on the TV screen when the recording condition of the cassette is poor.
- During auto tracking adjustment, streaks or noise may occur.
- The tracking indicator will only appear on the TV screen if the DATA SCREEN is in the ON position.

Selecting the Monitor Sound

You can play back cassettes on which stereo sound or bilingual programs are recorded. Press AUDIO MONITOR to select the desired sound mode. Each press of the button changes the display on the VCR.

NOTE:

When you play back a cassette recorded in monaural, the sound is heard in monaural regardless of the setting of the AUDIO MONITOR.

Sound Mode

Display	Stereo tape	Sound to be heard
STEREO	Stereo	Bilingual tape
MAIN/L	Left channel	Left and right channels
	Right channel	Left channel
SUB/R	Right channel	Right channel
None	Monaural on normal audio track	Sound on normal audio track (SAP)

Listening to Mixed Hi-Fi and Normal Track Sound

You can hear sound recorded on the hi-fi video track and the normal audio track simultaneously. This allows you to listen to an audio-inserted cassette.

1 Press **MENU**.
The main MENU appears

2 Press **▲** or **▼** to move the cursor (**▶**) to **SET UP MENU**.

3 Press **EXECUTE**.
The SET UP MENU appears.

4 Press **▲** or **▼** to move the cursor to **AUDIO MIX**.

5 Press **▲** or **▶** to move the dot (●) to ON.

6 Press **EXECUTE** to return to the original screen.

1 Press **MENU**.
The main MENU appears

2 Press **▲** or **▼** to move the cursor (**▶**) to **SET UP MENU**.

3 Press **EXECUTE**.
The SET UP MENU appears.

4 Press **▲** or **▼** to move the cursor to **AUDIO MIX**.

5 Press **▲** or **▶** to move the dot (●) to ON.

6 Press **EXECUTE** to return to the original screen.

1 Press **MENU**.
The main MENU appears

2 Press **▲** or **▼** to move the cursor (**▶**) to **SET UP MENU**.

3 Press **EXECUTE**.
The SET UP MENU appears.

4 Press **▲** or **▼** to move the cursor to **AUDIO MIX**.

5 Press **▲** or **▶** to move the dot (●) to ON.

6 Press **EXECUTE** to return to the original screen.

NOTES:


- When you set **AUDIO MIX** to **ON**, the **AUDIO MONITOR** button does not function.
- Reset to **OFF** after listening to the sound in audio mix mode.

Recording TV Programs

Before you begin, check the following points:

- Make sure that the connections have been made correctly (see pages 6 to 14)
- Check the input mode indicator in the display window of the VCR.
Press **INPUT SELECT** to light the **TUNER** indicator in the display window.

Recording TV Programs

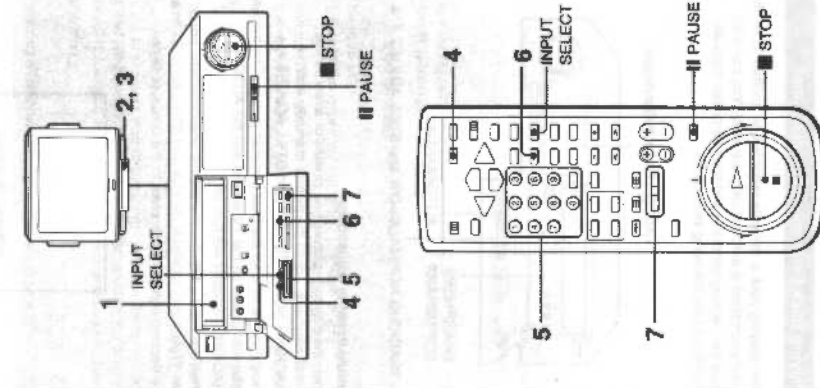

- 1** Insert a cassette.
The VCR turns on automatically (auto power on).
- 2** Turn on the TV.
- 3** If your TV is connected to both **VHF/UHF OUT** and **LINE OUT** on the VCR, select the input for the VCR.
- 4** If your TV is connected only to **VHF/UHF OUT**, set the TV to the correct channel (CH 3 or CH 4), then press **TV/VTR** so that the **VTR** indicator lights up. Skip this step if your VCR is connected to both the **VHF/UHF OUT** and **LINE OUT**.
- 5** Select the channel to be recorded with **CHANNEL +/-** or channel number buttons and **ENTER**.
- 6** Select **SP** or **EP** with **TAPE SPEED (SPEP)**.
To select the best recording tape speed, see "Maximum Recording Time of a Cassette" on page 28.
- 7** Press the two **REC** buttons on the Remote Commander at the same time, or the **REC** button on the VCR.

To stop recording:
Press **■ STOP**.


To pause the cassette:
Press **|| PAUSE**. To resume recording, press **|| PAUSE**. When the recording pause mode lasts for approximately 5 minutes, the VCR enters the stop mode.

When the cassette reaches its end:
The cassette rewinds to the beginning and the power remains on.

CAUTION:

Television programs, films, video cassettes and other materials may be copyrighted. Unauthorized recording of such material may be contrary to the provisions of the copyright laws. Also, use of this recorder with cable television transmission may require authorization for the cable television transmission and/or program owner.

Pausing

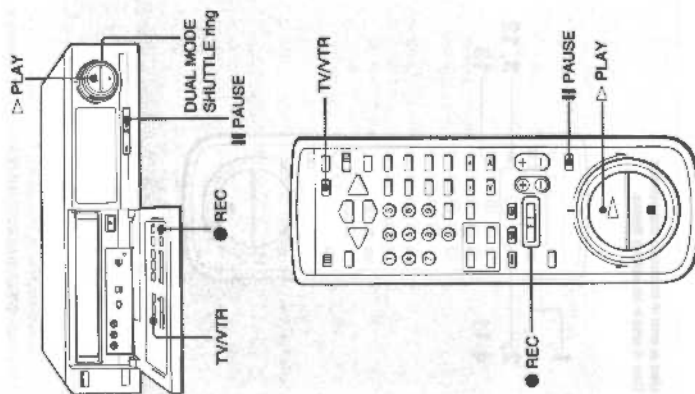

- Technique 1**
You can stop recording an unwanted scene and resume recording smoothly.
- 1 Press II PAUSE when an unwanted scene appears.**
Recording will stop and the VCR enters the recording pause mode.
 - 2 Press II PAUSE at the desired point to release the pause mode.**
Recording resumes from the point set in step 1.
- Technique 2**
When an unwanted scene has already started recording, you can return the cassette to the desired point, have the VCR standby in the recording pause mode, and resume recording at the desired scene.
- 1 Press II PAUSE to set the VCR to the recording pause mode.**
 - 2 Turn the DUAL MODE SHUTTLE ring to the left to search for the point from which you wish to continue recording.**
 - 3 Release the DUAL MODE SHUTTLE ring at the desired point.**
After an instant in still mode, the VCR automatically enters the recording pause mode.
 - 4 Press II PAUSE.**
Recording resumes.

Recording with the TV Off

Turn off the power of the TV or color monitor. There will be no interference with the recording.


Watching One TV Program While Recording Another

- 1 Press TV/VTR so that the VTR indicator goes off.**
- 2 Select the channel you want to watch on the TV.**


VTR Indicator	Picture on the TV Screen
Li	Channel selected by the VCR or the playback picture of the VCR
Unit	Channel selected by the TV

Recording Multi-channel TV Sound (MTS) Broadcasts

To record a stereo broadcast:
When a stereo broadcast program is received, the STEREO indicator appears in the display window of the VCR. The stereo program is automatically recorded in stereo. If a stereo program's reception is poor, set AUTO STEREO to OFF in the SET UP MENU (See page 27). The sound is heard in monaural but the noise is reduced.

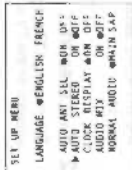

To record SAP (Second Audio Program) broadcast:
Normally, set NORMAL AUDIO to MAIN in the SET UP MENU. The main sound is recorded on the normal track. To record the SAP sound on the normal audio track, set NORMAL AUDIO to SAP in the SET UP MENU.
To monitor the SAP sound during recording, press AUDIO MONITOR to light the SAP indicator in the display window.

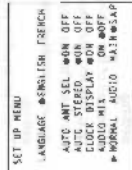

NOTES:

- When not recording an SAP broadcast, select MAIN. If you select SAP, no sound is recorded on the normal audio track.
- When the TV is connected only to the VHF/UHF OUT on the VCR, you cannot hear the program in stereo.

Timer Recording

Daily/Weekly Recording

You can preset your VCR for daily or weekly recording. Daily recording records the same program every day of the week while weekly recording records the same program on the same day, every week. Follow steps 1 to 4 in "Setting the Timer" (page 36).

Each time you press \blacktriangleleft the indicator under the "DATE" column changes to one of these choices:

- SUN—SAT (Every day of the week)
- MON—SAT (Every day except Sunday)
- MON—FRI (Every day except Saturday and Sunday)
- EVERY SAT
- EVERY TUE
- EVERY MON
- EVERY SUN

When you set and transmit your programs to the VCR, the corresponding indicator lights up in the display window.

The Timer: Recording Standby Mode

When you return the VCR to the timer recording standby mode, you can record any previously preset programs. The VCR turns on automatically to record the first preset program. When it finishes recording, the power automatically shuts off.

To stop timer recording, press **TIMER REC (ON/OFF)**.

Buttons Operable During Timer Recording

TIMER REC (ON/OFF)	To stop timer recording. (See "Indexing Tape Contents," page 30.)
COUNTER RESET	(See "Indexing Tape Contents," page 30.)
TWTR	(See "Watching One TV Program While Recording Another," page 35.)
DATA SCREEN	(See "The Data Screen," page 30.)
MENU	For checking the programs only. (See "Checking the Timer Settings," page 40.)

NOTE:

If a power interruption occurs during timer recording, recording will stop and your VCR will turn off. If power is restored within three hours, and it's before the recording end time, recording will start again from that point. If the interruption lasts for more than three hours, any presettings will be erased and you'll need to reset the time and date for your programs. Note that the tape counter will return to "0H00M00S".

Overlapping Timer Recordings

Case 1
If you preset two programs to record at the same time . . .

The program listed first on the **TIMER SET/CHECK** display has priority over the other programs. The timer settings for lower priority programs will be deleted from the **TIMER SET/CHECK** display when recording begins for the first program.



Case 2
If you set program 2 to record at the same time you set program 1 to finish recording . . .

The last 20 seconds of program 1 will not be recorded.




Case 3
If you set program 2 to record before program 1 has finished recording . . .

Program 2 will begin recording before program 1 has finished.



Checking the Timer Settings

Here's how to display your timer settings to confirm the programs you wish to record.

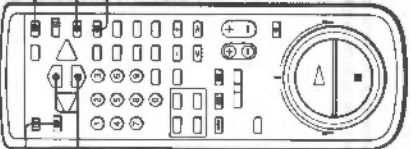


<p>1 Press TIMER REC (ON/OFF). The TIMER REC (recording) indicator in the display window turns off.</p>	<p>3 Press MENU. The main MENU appears.</p> <p>4 Press \blacktriangle or \blacktriangledown to move the cursor (\blacktriangleright) to TIMER SET/CHECK.</p>
<p>2 Press POWER.</p>	<p>5 Press EXECUTE. The TIMER SET/CHECK display appears.</p>
<p>6 Press EXECUTE to return to the original screen.</p>	<p>7 Press TIMER REC (ON/OFF). The VCR returns to the timer recording standby mode.</p>

NOTES:

- If you set a program to record only one time, that setting is erased from the TIMER SET/CHECK display when the recording has finished.
- To check the timer settings during timer recording, follow steps 3 to 6 above.

Changing or Cancelling the Timer Settings

Here's how to change or cancel any timer settings from the TIMER SET/CHECK display:

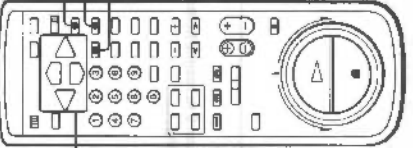

<p>1 Display the TIMER SET/CHECK menu on the TV screen by following the procedures outlined in "Checking the Timer Settings" on page 40.</p>	<p>2 Press \blacktriangle or \blacktriangledown to move the cursor (\blacktriangleright) to the program you wish to change or cancel.</p> <p>3 To change a program, select the item to be changed by pressing \blacktriangle or \blacktriangleright, then make changes by pressing \blacktriangle or \blacktriangledown. To cancel it, press TIMER CLEAR. Repeat this step to change or cancel other settings.</p> <p>4 Press EXECUTE. This stores the changes and returns you to the original screen.</p> <p>5 Press TIMER REC (ON/OFF). This returns you to the timer recording standby mode.</p>
---	--

Using the VCR Before Timer Recording Starts

If you want to use your VCR while it's in the timer recording standby mode, you must first turn off the **TIMER REC** (recording) indicator in the display window. Here's how:

- 1 Press TIMER REC (ON/OFF).**
The **TIMER REC** (recording) indicator in the display window turns off and the **VCR** leaves the timer recording standby mode.
- 2 Press POWER.**
The **VCR** is ready to use.
- 3 After using the VCR, press TIMER REC (ON/OFF).**
The **VCR** returns to the timer recording standby mode and the **TIMER REC** (recording) indicator lights up.

Introducing VCR Plus+

VCR Plus+ is a new feature used in Sony VCRs that simplifies the task of programming your VCR to make unattended recordings. Here's how it works:

Whenever you want to record a TV program, all you need to do is to look up the program's "PlusCode", a number assigned to each program that's published in the TV section of most newspapers, cable TV listings, and even *TV Guide* magazine.

PlusCode

5:30 **MOVIE** — Musical (2hrs.) | 330344
SPORTS — Golf (1hr. 25min.) | 42060
NEWS — NEWS 9974
 6:30 **DRAMA** — Comedy (2hrs.) | 17390
SCIENCE AND TECHNOLOGY
 (1hr., 15min.) | 73457

Timer Recording / Introducing VCR Plus+

Then, just enter the number of the program you want—using the Remote Commander, if you wish—and the VCR is automatically programmed to record that show. It's that simple. With VCR Plus+, you no longer have to go through a lengthy and often repetitive procedure when you set start and stop times, channel numbers, and dates. All this information is automatically sent to your VCR when you enter the program's PlusCode!

Of course, there's some setup you'll need to do before you use VCR Plus+ for the first time. But after this initial setup, just think of how much easier it'll be to record your favorite TV programs, cable movies, and sporting events—all with the touch of a few buttons. VCR Plus+ makes programming your VCR easier than ever!

NOTE:
If PlusCodes aren't yet available in your area, they'll probably be introduced soon. Check with your local newspaper or cable TV company for details.

VCR Plus+ Setup Instructions

Setting up your VCR to use VCR Plus+ involves coordinating the TV channel number (the number you turn to on your TV or VCR to watch a program) with the guide channel (the number that's assigned to that channel in your program guide).

If you don't have cable TV (i.e., if your TV receives its signal from an antenna only), the TV channel number and the guide channel number will probably be the same, in which case you'll only have to check that the two numbers match. For numbers that don't match, you must first perform the procedures that follow to get these channel numbers synchronized with each other.

To get the guide channel numbers, find the Channel Line-up Chart in the program guide for your area that features VCR PlusCodes. It usually looks like the example to the right.

If you have cable TV, you should then get the TV channel numbers for each channel from your cable company. (You may already know them.) Then for channels that are different, enter the program guide channels (from the Program Guide), on the left, and the actual TV channels (from your cable system), on the right, as shown on page 44.

Example of "Channel Line-up Chart" for Cable TV

CABLE TV	Guide channel number	
A&E	Arts & Entertainment Network	39
A&C	American Movie Classics	35
B&B	Bravo (program grids only)	54
C&N	Cable News Network	42
C&SP	C-SPAN	28
DIS	The Disney Channel	53
DSC	The Discovery Channel	37
ESN	ESPN	34
FAM	The Family Channel	47
HBO	Home Box Office	33
LIF	Lifetime	46
MAX	Cinemax	45
MSG	Madison Square Garden Network	19
MTV	Music Television	49
NIK	Nickelodeon	38
SC	Sports Channel	59
SCA	Sports Channel America	70
SHO	Showtime	41
TBS	TBS SuperStation	43
TMC	The Movie Channel	56
TNN	The Nashville Network	49
TNT	Turner Network Television	52
USA	USA Network	44

SET VCR Plus+ CHANNELS

Program listing guide channel: — GUIDE CH — TV CH —

10 : 11

8 : 7

Your actual TV channel

For each channel your VCR receives, use the Channel Line-Up Chart to check that the channel numbers match. For example, if HBO is listed in the Channel Line-Up Chart on channel 33, and your VCR receives HBO on channel 15, you need to coordinate these numbers using the following procedures. For channels in which the numbers are the same (for example, if your VCR receives HBO on channel 33, and the guide channel number is 33), you can skip these procedures.

Use **▲** and **▼** to move the cursor.
Use **▶** and **◀** to select items.

1 Press MENU.
The main MENU appears.

MENU
▶ TIMER SET/CHECK
▶ TV CH PRESET
▶ SET VCR PLUS+ CHANNELS
▶ CLOCK SET

2 Press ▼ or ▲ to move the cursor (▶) to SET VCR PLUS+ CHANNELS.

MENU
TIMER SET/CHECK
SET UP MENU
▶ SET VCR PLUS+ CHANNELS
▶ CLOCK SET

Example:

Guide Channel (from "Channel Line-Up Chart")	TV Channel
33 (Home Box Office)	15

3 Press EXECUTE.
The SET VCR PLUS+ CHANNELS menu appears.
The "GUIDE CH" field blinks.

SET VCR PLUS+ CHANNELS
GUIDE CH TV CH
33 15

4 In the "GUIDE CH" field, enter 33 (the number assigned to this channel in the Channel Line-Up Chart) and press ENTER.
The "TV CH" field starts to blink.

SET VCR PLUS+ CHANNELS
GUIDE CH TV CH
33 15

5 In the "TV CH" field, enter 15 (the number to which you tune your VCR to watch this channel) and press ENTER.

SET VCR PLUS+ CHANNELS
GUIDE CH TV CH
33 15

NOTE:
The TV Channel setting will be different whether you use cable TV or not. Please refer to "Preparation" on page 6.

6 For each channel in which the TV channel differs from the guide number, repeat steps 4 and 5, using the menus that are displayed.
To check your channel settings, press EXECUTE.

VCR PLUS+ CHANNEL LIST
Page 1
GUIDE TV GUIDE TV
33-33 15-24
34-34 15-24
35-35 15-24
36-36 15-24
37-37 15-24
38-38 15-24
39-39 15-24
40-40 15-24
41-41 15-24
42-42 15-24
43-43 15-24
44-44 15-24
45-45 15-24

7 When you've finished, press MENU to exit.

Recording Programs Using VCR Plus+

To use VCR Plus+ to record programs, all you need is the program's PlusCode, which you'll find in the program listings in your local newspaper, cable TV guide, or TV Guide magazine.
For example, to record the following program, just use the PlusCode

EXAMPLE: [] MOVIE—Comedy (2hrs.) 53292

1 Press VCR Plus+.
The VCR Plus+ TIMER SET menu appears.

VCR Plus+
PlusCode (53292...)
TAPE SPEED (SP)

2 Enter 53292 (the program's PlusCode) in the PlusCode field.
If you make a mistake, press TIMER CLEAR and enter the PlusCode again.

VCR Plus+
PlusCode (53292...)
TAPE SPEED (SP)

3 To select the cassette's recording speed (SP or EP), press TAPE SPEED.
Unless you change the cassette speed, SP is used. See "Maximum recording time of a cassette" on page 28 for information about cassette speeds.

VCR Plus+
PlusCode (53292...)
TAPE SPEED (SP)

4 Press ONCE, DAILY, or WEEKLY on the Remote Commander.
See the following chart for details of these options.

ONCE: Records scheduled programs one time only.
WEEKLY: Records every week at the same scheduled time.
DAILY M-F: Records Monday to Friday at the same scheduled time.

The VCR Plus+ menu displays the recording information: date, program start and stop times, channel number, and tape speed.

VCR Plus+
PlusCode (53292...)
RECORDING TIME (2h)
DATE (MON 8:00P 11:00P 13 9)

5 If you want to set another program, repeat steps 2 to 5.

6 Insert a cassette into your VCR.

7 Press TIMER REC (ON/OFF) to set the VCR's recording timer.
The VCR enters the timer recording standby mode. Your VCR is now set up to record the programs you've selected. The VCR will turn on automatically, record the program, and then turn off until the next programmed show is ready for broadcast.
For checking, changing, cancelling the settings, see pages 40 and 41.

Introducing VCR Plus+

NOTES:


- You can't set the timer using PlusCodes in the following cases:
 - When the VCR is turned off
 - While the VCR is timer-recording or quick-timer recording mode
 - When the VCR is in the timer-recording standby mode
- The timer doesn't work properly in the following cases:
 - When you select DAILY for a Saturday and Sunday program
 - When you select WEEKLY or DAILY for a program more than seven days ahead. (The WEEKLY and DAILY settings only work for the current week.)
 - When you enter a program's PlusCode that has already ended

Variable Speed Playback

The following section explains the advanced playback functions you can do with your VCR.

Variable Speed Playback

Using the DUAL MODE SHUTTLE ring on your VCR or Remote Commander, you can play cassettes at a variety of forward and reverse speeds. You can also freeze a picture using the pause function.

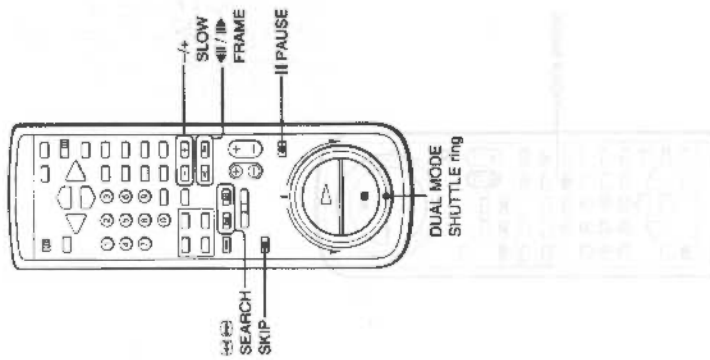

Introducing VCR Plus+ / Variable Speed Playback

Still Picture

When playing back a cassette, press **II PAUSE** to hold the picture in one place. To resume normal playback, press either **▶ PLAY** or **II PAUSE**. If you leave your VCR in the pause mode, normal playback resumes after approximately 5 minutes.

Picture Search

By turning the DUAL MODE SHUTTLE ring either clockwise for forward viewing or counterclockwise for viewing in reverse, you can control the cassette playback speed.

- Picture Search During Playback or Pause Modes**

While playing or pausing a cassette, turn the DUAL MODE SHUTTLE ring until the double arrows **◀▶** appear in the display window. A high-speed picture without sound displays on the screen until you release the ring.

When you release the DUAL MODE SHUTTLE ring, it returns to its original position. If you release the ring while in the pause mode, the picture returns to pause. If you release it during playback, the picture returns to playback.

NOTE:

If you quick search a cassette recorded in the LP cassette speed, your picture may change to black and white, depending on the TV you're using.

- Picture Search While Fast-Forwarding or Rewinding a Cassette**

When fast-forwarding or rewinding a cassette, turn the DUAL MODE SHUTTLE ring to preview a high-speed picture (clockwise for forward viewing or counterclockwise for reverse viewing).

When you release the ring, it returns to its original position and the VCR continues fast-forwarding or rewinding.

Variable Speed Playback

Locked Picture Search

This feature lets you lock in and view a high-speed picture while playing or pausing a cassette. In the play or pause mode, press **SEARCH** (reverse) or **SEARCH** (forward) on the Remote Commander. To resume normal playback, press **PLAY**.

Skip Playback

While playing a cassette, press **SKIP** on the Remote Commander.

This feature lets you view your cassette at high speed for about 30 seconds before resuming normal playback.

Slow Motion Playback

During playback or playback pause mode, press **SLOW +** or **-** on the Remote Commander. Change the slow motion speed with the **+** or **-** buttons. Press **+** to increase the playback speed, and **-** to decrease the playback speed.

Frame-by-Frame Picture

During the playback pause mode, press **FRAME** (right) to advance the picture one frame or **FRAME** (left) to reverse the picture one frame. Each time you press the button, the picture moves one frame. To resume normal playback, press **PLAY**.

Picture Adjustment During Variable Speed Playback

If a picture played in slow motion displays streaks or has poor sound quality, adjust the picture with the **TRACKING**, **NORMAL/SLOW** and **STILL ADJUST** buttons inside the front panel. You can adjust the picture more easily by changing the speed closer to normal playback by pressing **SLOW +**.

If the picture appears to shake in the still mode, adjust it using the **STILL ADJUST** buttons inside the front panel until the picture stabilizes. When pausing a cassette, you may notice a band at the top or bottom of the screen. Adjust the picture by playing back the cassette in slow motion and using the **TRACKING**, **NORMAL/SLOW** and **STILL ADJUST** buttons located inside the VCR's front panel.

NOTE:


Some snow or streaks are unavoidable when playing back a cassette in the reverse or reverse slow modes.

Index Function

You can find specific locations on a cassette using your VCR's index function.

Marking Index Signals

Whenever you mark an index, an index signal flashes in the VCR's display window and the **INDEX MARK** indicator appears on your TV screen.

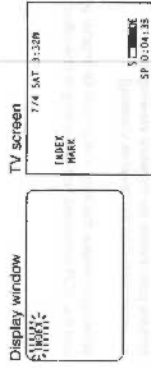

Automatic Index Mark

An index signal automatically marks the beginning of a program when you start recording it.

Manual Index Mark

When recording or playing a cassette, you can manually mark an index signal by pressing **INDEX MARK** on the Remote Commander.


NOTES:

- When marking index signals, leave an interval of at least 2 minutes between them so that the VCR can detect the signals correctly.
- When you mark an index signal during playback, the recorded sound, though not erased, is inaudible.
- You cannot mark an index signal in the following cases:
 - On a cassette without a safety tab.
 - On an unrecorded portion of a cassette.
 - Immediately before a point on the cassette where the cassette speed (EP or SP) changes.
 - When playing a cassette recorded in LP mode.

Index Function


Playing Back from the Index Point — Index Scan

Here's how to find and play a program you've marked with an index signal:

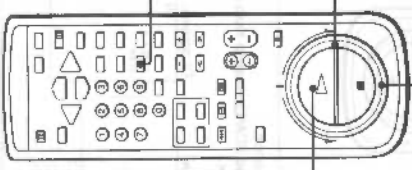 <p>DUAL MODE SHUTTLE ring</p>	<p>3 Turn the DUAL MODE SHUTTLE ring clockwise to find the previous program, or counterclockwise to find the next program. The INDEX SCAN indicator flashes continuously while scanning. The index scan locates the next marked index signal and plays about 10 seconds of tape prior to the signal. The VCR then rewinds or advances to the next index signal. Every time the VCR finds an index signal, playback begins and the displayed index number increases.</p> <div data-bbox="638 1134 798 1512"> <p>Display window</p> <p>7/4 SAT 3:32M</p> <p>INDEX 1 SCAN</p> <p>TV screen</p> <p>7/4 SAT 3:32M</p> <p>INDEX 1 SCAN</p> <p>SP 0:00:00</p> </div>
<p>1 Insert an indexed cassette into your VCR.</p>	<p>4 When you find the program you want, press ▶ PLAY. Playback starts from that point.</p>

Locating an Index — Index Search

Locate an index by indicating how many index signals ahead or behind that program is from the cassette's current position. Here's how:

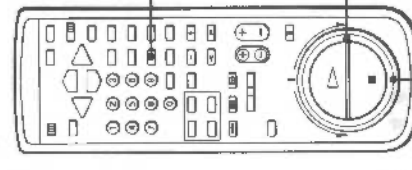 <p>DUAL MODE SHUTTLE ring</p>	<p>3 Turn the DUAL MODE SHUTTLE ring clockwise to locate an upcoming index signal or counterclockwise for a prior index signal. The cassette rewinds or advances to the next index. Each time an index signal is detected, the index number decreases. When the number reaches 0, your VCR will begin to play.</p> <div data-bbox="558 147 718 525"> <p>Display window</p> <p>INDEX</p> <p>7/4 SAT 3:32M</p> <p>INDEX 3 SEARCH</p> <p>TV screen</p> <p>7/4 SAT 3:32M</p> <p>INDEX 3 SEARCH</p> <p>SP 0:08:36</p> </div>
<p>1 Insert an indexed cassette into your VCR.</p> <p>2 Press INDEX until the index number for the desired program appears in the display window or on your TV screen. The VCR exits from the index mode, if you pass index number '19'.</p> <div data-bbox="1117 588 1276 966"> <p>Display window</p> <p>INDEX</p> <p>8</p> <p>TV screen</p> <p>7/4 SAT 3:32M</p> <p>INDEX 8 SEARCH</p> <p>SP 0:03:52</p> </div>	<p>3 Press INDEX once. The INDEX and SCAN indicators flash alternately in the display window.</p> <div data-bbox="1149 1575 1308 1953"> <p>Display window</p> <p>INDEX</p> <p>▶ SCAN</p> <p>U</p> <p>TV screen</p> <p>7/4 SAT 3:32M</p> <p>INDEX 8 SCAN</p> <p>SP 0:00:00</p> </div>

Quick-Timer Recording

This function is convenient for recording programs without going through the entire timer setting procedure. Note, however, that it provides only an approximate setting for the program you wish to record.



NOTE:

Before you begin, make sure the clock has been set, then ensure that the timer recording function is turned off by checking the **TIMER REC** (recording) indicator. If the indicator is lit, press **TIMER REC ON/OFF** to turn it off.

If you're currently recording, skip to step 7.

- 1 Insert a cassette into your VCR.
- 2 Press **INPUT SELECT** to light the **TUNER** in the display window.
- 3 Select the desired recording speed (**SP** or **EP**) by pressing **TAPE SPEED** inside the front panel.
- 4 Press **QUICK TIMER** on the VCR. If you insert a cassette without its safety tab, your VCR will eject the cassette.
- 5 Select the channel you wish to record using the **CHANNEL +/-** or channel number buttons. Press **ENTER** while the channel display flashes.
- 6 Press **QUICK TIMER** again to start recording.
- 7 Select the recording duration by pressing **QUICK TIMER** to change the duration indicator in the display window. Each time you press **QUICK TIMER**, the recording duration increases by 30 minutes. Once recording has finished, your VCR will turn off automatically.

Quick-Timer Recording

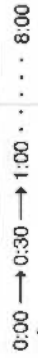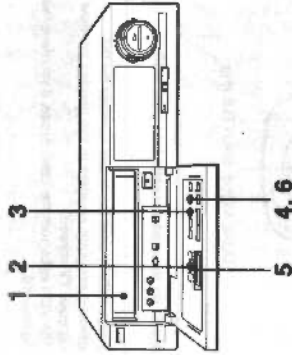

To stop quick-timer recording:

To stop quick-timer recording while a program is being recorded, press **TIMER REC ON/OFF**.

Index Function

Erasing Index Signals

To remove any unwanted index signals, follow these steps:

2 Turn the DUAL MODE SHUTTLE ring until the index you want to erase appears on your TV screen.
Each time an index is detected, the VCR plays back the indexed program for approximately 10 seconds. It then rewinds or advances to the next index signal. This 10 second preview lets you decide whether you've located the program you wish to erase.

1 Press INDEX once.
The **INDEX** and **SCAN** indicators flash alternately in the display window.

3 Press INDEX ERASE during 10 second preview.
The **INDEX** indicator flashes.

2 Turn the DUAL MODE SHUTTLE ring until the index you want to erase appears on your TV screen.
Each time an index is detected, the VCR plays back the indexed program for approximately 10 seconds. It then rewinds or advances to the next index signal. This 10 second preview lets you decide whether you've located the program you wish to erase.

3 Press INDEX ERASE during 10 second preview.
The **INDEX** indicator flashes.

NOTES:

- While the index signal is being erased, the sound is inaudible.
- Index signals marked just before or after a change to the **SP** or **EP** recording mode cannot be erased.
- Index signals marked on a cassette recorded in **LP** mode cannot be erased.
- Index signals marked on the beginning of the tape may not be erased.

Quick - Timer Recording

NOTES:

- If your cassette ends during quick-timer recording, recording stops and the VCR turns off. The cassette will not rewind automatically.
- If a power interruption occurs during quick-timer recording, recording will stop and your VCR will turn off. If the interruption lasts less than three hours and the power is restored before the recording end time, recording will start again from that point.

Buttons Operable During Quick-Timer Recording

TIMER REC (ON/OFF)	To stop quick-timer recording
QUICK-TIMER	To change recording duration
COUNTER RESET	To reset the counter to zero
INDEX MARK	To record an index signal
TV/VTR	To watch the picture broadcast on another channel (TV)
MENU	Only operable to check the timer recording settings. (See "Checking the Timer Settings," on page 40.)

Editing

Using an additional VCR, you can record programs from one VCR to the other. Here's how:


Editing from Another VCR

Here's how to edit from another VCR (such as an 8mm video camera recorder for playback) when using this VCR for recording.

- Before you start:
- Select LINE 1 or LINE 2 with INPUT SELECT, whichever the playback VCR is connected to
 - Select SP or EP with TAPE SPEED.
 - Select EDIT position to light the EDIT indicator in the display window.

NOTE:

If your playback VCR has an editing function, select it to reduce static and improve reception.

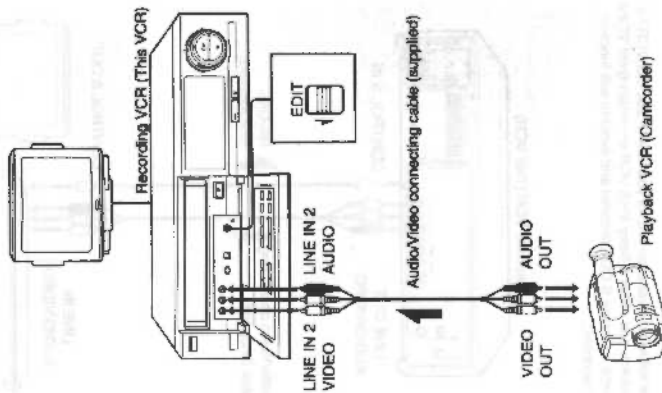

How to edit:


- 1 Insert a blank cassette into the recording VCR.
- 2 Turn on the playback VCR and insert a source cassette.
- 3 Locate the playback start point and select the playback pause mode on the playback VCR.
- 4 Locate the recording start point and select the recording pause mode on the recording VCR.
- 5 Press II PAUSE on both VCRs. For best results, press II PAUSE on the playback VCR just before pressing II PAUSE on the recording VCR. When you've finished editing, press ■ STOP on both VCRs.

NOTES:

- If your playback VCR is a stereo unit, make connections with the supplied audio/video connecting cable.
- If your playback VCR is a monaural unit, connect the white plug to LINE IN 2 AUDIO L on this VCR. This lets you record the sound of the playback VCR on both channels of this VCR. Do not connect the white plug to LINE IN 2 AUDIO R.
- When connecting the VCRs, do not connect both LINE IN and LINE OUT jacks on your VCRs simultaneously. Doing so may cause a humming noise.

Editing onto Another VCR

Here's how to use this VCR as the playback VCR and another VCR as the recording VCR.

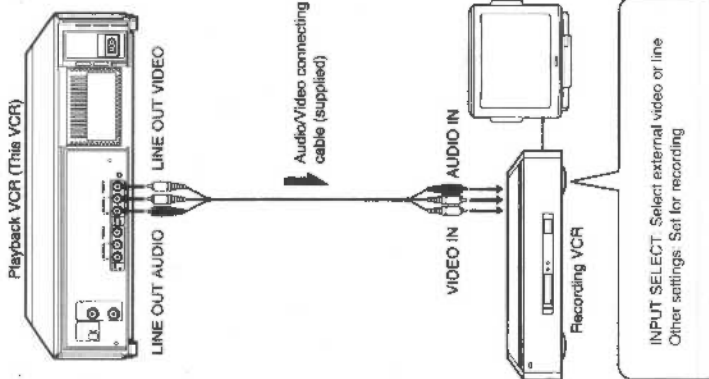

Before you start:

- Select **EDIT** position to light the **EDIT** indicator in the display window.
- If your recording VCR has an editing function, it should also be selected to improve reception.
- Press **DATA SCREEN** to delete the on-screen display.

How to edit:

- 1 Turn on the recording VCR and insert a blank cassette.
- 2 Insert a source cassette into the playback VCR.
- 3 Locate the playback start point and select the play back pause mode on the playback VCR.
- 4 Locate the recording start point and select the recording pause mode on the recording VCR.
- 5 Press **II PAUSE** on both VCRs.
For best results, press **II PAUSE** on the playback VCR just before pressing **II PAUSE** on the recording VCR. When you've finished editing, press **■ STOP** on both VCRs.


NOTES:

- If your recording VCR is a stereo unit, make connections with the supplied audio/video connecting cable.
- If your recording VCR is a monaural unit, make connections using the VMC-910MS/920MS cable (not supplied).
- When connecting the VCRs, do not connect both **LINE IN** and **LINE OUT** jacks on your VCRs simultaneously. Doing so may cause a humming noise.

Synchronized Editing onto Another VCR

Synchronized editing is the process of recording and editing a program from either a video camera recorder or a VCR to another VCR. Because this editing function involves one VCR controlling another VCR or video camera recorder, it is said to be "synchronized".

The following illustration shows you how to use this VCR for playback and either a Sony VHS VCR or certain 8mm VCRs having a Control S OUT terminal and synchro edit function for recording.

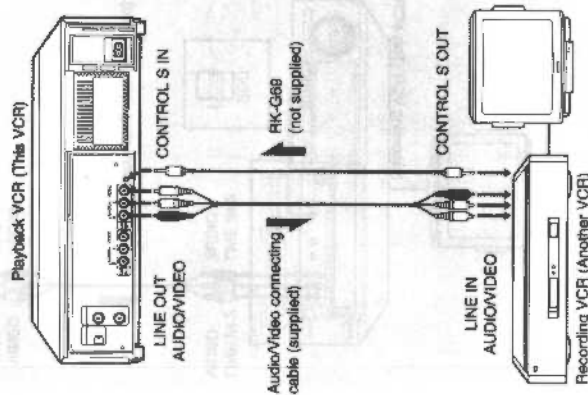

Before you start:

- Select external video or **LINE** on recording VCR.
- Make necessary settings for recording.

How to edit:

- 1 Turn on the recording VCR and insert a blank cassette.
- 2 Insert a source cassette into the playback VCR.
- 3 Select **EDIT** position to light the **EDIT** indicator in the display window.
If your recording VCR has an editing function, it should also be selected.
- 4 Locate the edit start point and select the recording pause mode on the recording VCR.
- 5 Locate the playback start point and select the playback pause mode on the playback VCR.
- 6 Press **SYNCHRO EDIT** on the recording VCR.
Both recording and playback will start.
- 7 At the desired edit end point, press **SYNCHRO EDIT** on the recording VCR.
The recording VCR enters the recording pause mode and the playback VCR enters the playback pause mode.
- 8 To edit the next scene, repeat steps 5, 6, and 7.
When you've finished editing, press **■ STOP** on both VCRs.


NOTES:

- If your recording VCR is a monaural unit, make connections using the VMC-910MS/920MS cable (not supplied).
- When connecting the VCRs, do not connect both **LINE IN** and **LINE OUT** jacks on your VCRs simultaneously. Doing so may cause a humming noise.

Insert Editing (for SLV-696H-F only)

When you want to replace one prerecorded scene (and its sound) with another, you can use your SLV-696H-F's insert editing function. This function lets you make either video inserts, audio inserts, or both video and audio inserts

How the Insert Editing Function Works

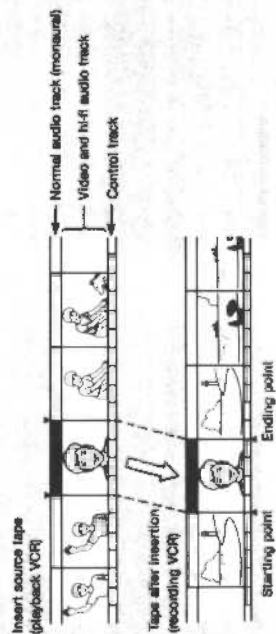


Video Insert

You can insert a new picture and hi-fi stereo sound from a video and hi-fi audio track onto a prerecorded cassette. Note that the original audio track is retained.




Video and Audio Insert

You can insert a new picture, hi-fi stereo sound, and a new monaural sound onto a prerecorded cassette.

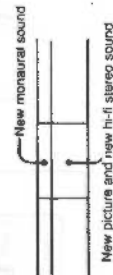



Audio Insert

You can insert a monaural soundtrack onto a prerecorded cassette. The picture and hi-fi stereo sound of the video and hi-fi audio track are retained.

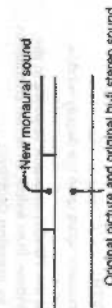

Insert Editing from another VCR

Example: From an 8mm video camera recorder to this VCR.

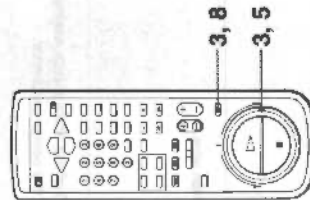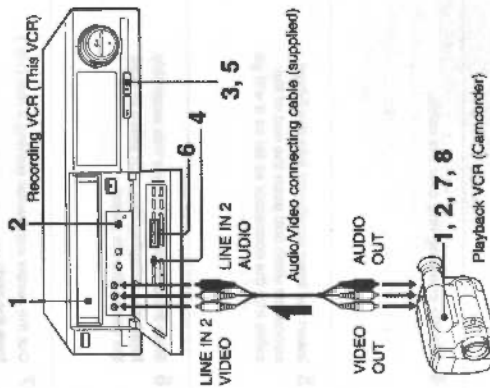

Before you start:

- For connection, see pages 55 through 56. (The CONTROL S connections are not needed.)
- Select the insert source from the equipment connected to LINE IN 1 or 2.
- Connect the VCR to an audio system for "audio insert."

How to edit:


- 1 Insert a source cassette into the playback VCR and a cassette for recording into this VCR.
- 2 Select EDIT position to light the EDIT indicator in the display window. If your playback VCR has an editing function, it should also be selected.
- 3 On the recording VCR locate the edit end point, then press II PAUSE on this VCR.
- 4 Press COUNTER RESET on the recording VCR.
- 5 On the recording VCR, rewind the cassette to locate the starting point and set the VCR to the playback pause mode. The DUAL MODE SHUTTLE ring is useful for locating a desired starting point.
- 6 Press VIDEO/AUDIO INSERT. For audio insert, press AUDIO. The "A INSERT" lights in the display window. For video insert, press VIDEO. The "V INSERT" lights in the display window. For audio and video insert, press the AUDIO and then VIDEO. The "AV INSERT" lights in the display window.
- 7 On the playback VCR, locate the starting point where you want to start the insertion and set the VCR to the playback pause mode.
- 8 Press II PAUSE on both VCRs to start the insertion. At the ending point (H00M00S), the insertion stops automatically. (To stop playback, press ■ STOP.) To stop the insertion temporarily: Press II PAUSE. To stop ongoing insertion: Press ■ STOP.

NOTES:

- The video/audio inserts cannot be made onto an unrecorded portion of a cassette.
- After the insertion, the previous picture and/or sound will be erased.

General Setup Information

Setting the RF Unit

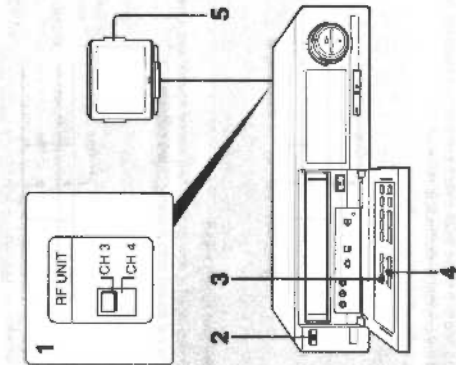

Why this setting is necessary:

You must set the RF UNIT selector at the rear of the VCR properly so that your TV can receive the correct signal from the VCR. Set the selector to CH 3 (Ch 3) or CH 4 (Ch 4), whichever is not active in your area. If you connect a TV or color monitor equipped with AV input jacks, skip this adjustment.

- 1 Set the RF UNIT at the rear of the VCR to CH 3 or CH 4, whichever is not active in your area.
- 2 Press POWER. The power indicator lights up in the display window.
- 3 Press TV/MTV. The VTR indicator lights up in the display window.
- 4 Check that the TUNER indicator appears in the display window, then select an active channel in your area by pressing CHANNEL +/-.
- 5 Turn on your TV and set it to the channel you selected in step 1.

Your TV is now tuned to the VCR. Whenever you use the VCR, set the TV to the preselected channel.


NOTE:

For details on adjusting TV channels, see your TV instruction manual.

Attaching the F-type Connector (not supplied)


- 1 Strip 17 mm (1 1/16") of the black polyethylene jacket.
- 2 Fold back the woven wire.
- 3 Strip 12 mm (1/2") of the white plastic casing, leaving 12 mm of the center conductor.
- 4 Slip the crimping ring over the cable.
- 5 Insert the inner conductor into the F-type connector shaft and push the end of the cable into the connector as far as it will go.
- 6 Slide the crimping ring over this assembly. Pinch the crimping ring with pliers to hold the connection in place.
- 7 Cut the center conductor leaving 3 mm (1/8") from the end.
- 8 Insert the F-type connector into VHF/UHF IN plug on the VCR.

Attaching the External Antenna Connector (supplied)

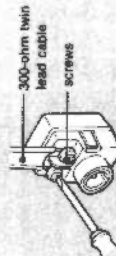

- 1 Loosen the screws on the antenna connector.
- 2 Fit the 300-ohm twin lead cable on the UHF antenna under the screws on the antenna connector.
- 3 Retighten the screws.

Attaching the EAC66 U/V Band Separator / Mixer (not supplied)

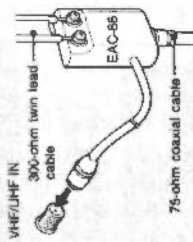


- 1 Loosen the screws on the UV band separator/mixer.
- 2 Fit the 300-ohm twin lead cable on the UHF antenna under the screws.
- 3 Connect the 75-ohm coaxial cable to the UV band separator/mixer.
- 4 Connect the UV band separator/mixer to the VHF/UHF IN plug on the VCR.


Identifying the Parts and Controls

Refer to the pages indicated for details.

Front Panel

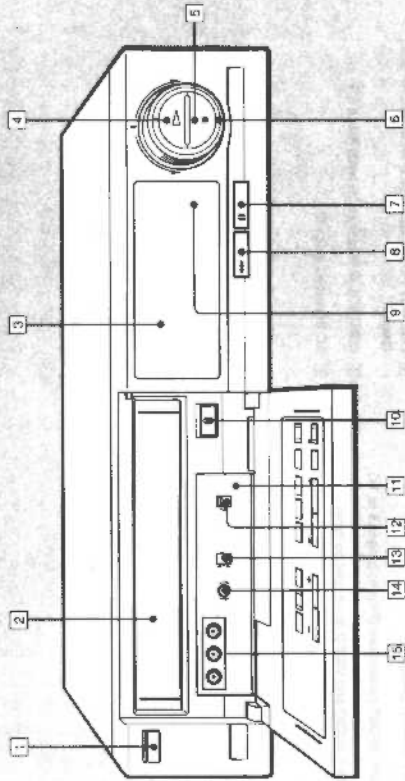


- | | |
|--|---|
| 1 POWER ON/OFF switch and indicator (page 60) | 9 HI-SPEED REWIND button (page 29) |
| 2 Cassette compartment | 10 Remote Sensor |
| 3 Display window and function mode display (page 66) | 11 EJECT button (page 28) |
| 4 PLAY button (page 29) | 12 CL (clear) button (page 70) |
| 5 STOP button (page 29) | 13 EDIT selector (page 55) |
| 6 DUAL MODE SHUTTLE ring | 14 COMMAND MODE VTR1/VTR2/VTR3 selector (page 17) |
| 7 PAUSE button (page 47) | 15 SHARPNESS SOFT/SHARP control (page 29) |
| | 16 LINE IN 2 VIDEO and AUDIO jacks (phono type) (page 55) |

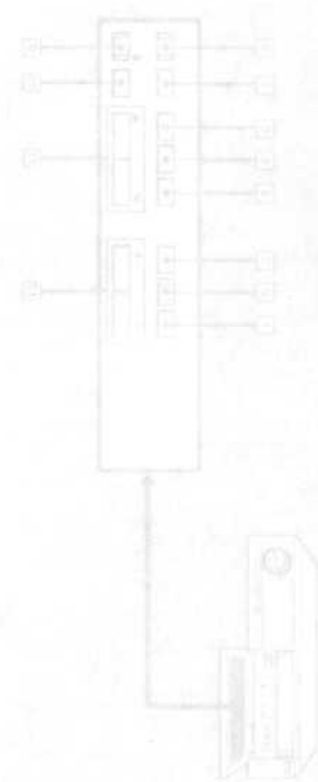

Identifying the Parts and Controls

Refer to the pages indicated for details.


Inside of Front Panel

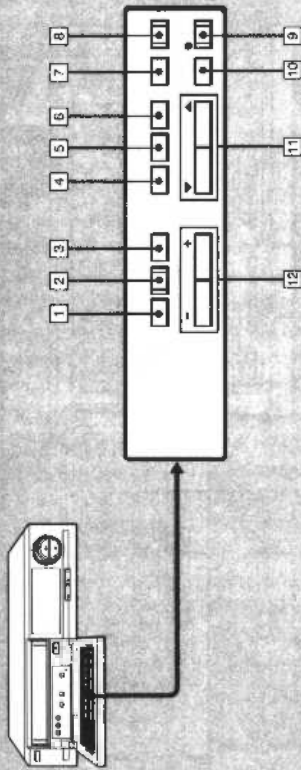

- 1 TV/TR button (page 60)
- 2 INPUT SELECT button (page 33)
- 3 COUNTER RESET button (page 30)
- 4 VIDEO INSERT button (SLV-696HF only) (pages 58, 59)
- 5 AUDIO INSERT button (SLV-696HF only) (pages 58, 59)
- 6 TAPE SPEED (S/PEP) button (page 33)
- 7 QUICK TIMER button (page 63)
- 8 TIMER REC ON/OFF button (page 38)
- 9 REC button (page 33)
- 10 TRACKING AUTOMANUAL button (page 31)
- 11 TRACKING NORMAL/SLOW and STILL ADJUST button (page 31)
- 12 CHANNEL +/- buttons (page 33)

Refer to the pages indicated for details.

Rear Panel

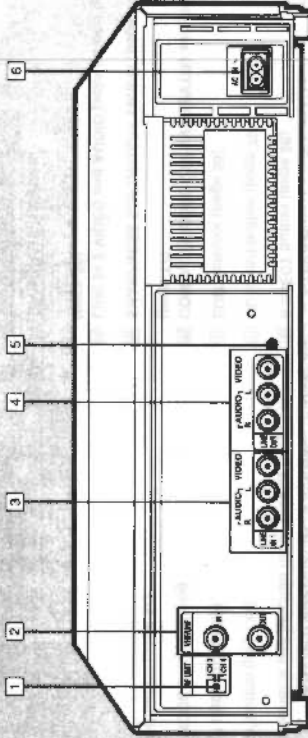


- 1 RF UNIT selector (page 60)
- 2 VHF/UHF INPUT connectors (F-type) (pages 8 to 14)
- 3 LINE IN 1 AUDIO and VIDEO jacks (phono type)
- 4 LINE OUT AUDIO and VIDEO jacks (phono type) (page 7)
- 5 CONTROL S IN jack (mini-type) (page 57)
- 6 AC IN socket (page 6)

Identifying the Parts and Controls

Refer to the pages indicated for details.


Display Window Indicators

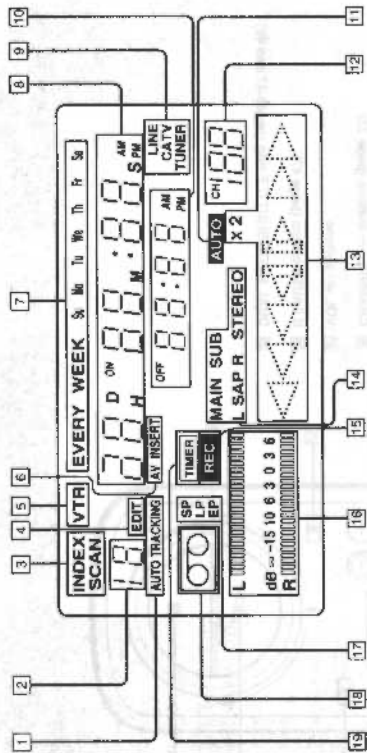

- 1 AUTO TRACKING indicator (page 31)
- 2 Index number and timer program number for VCR Plus+ indicator (page 50)
- 3 INDEX, INDEX SCAN indicator (pages 49, 50)
- 4 EDIT indicator (page 55)
- 5 VTR indicator (page 33)
- 6 AV INSERT indicator (SLV-696HF only) (page 59)
"A INSERT" lights for audio insert.
"V INSERT" lights for video insert.
"AV INSERT" lights for audio and video insert.
- 7 Day of the week indicator, EVERY WEEK indicator for timer-activated recording (page 38)
- 8 Linear time counter (page 30)
- 9 Input mode indicator
- 10 Quick-timer recording time/current time (page 55)
- 11 AUTO indicator (page 29)
- 12 Channel Number/Input Mode indicator
- 13 Tape Operation indicator (page 29)
- 14 Stereo Program/SAP indicator (page 35)
- 15 REC (recording) indicator
- 16 Peak Level Meter
- 17 Tape Speed indicator (LP is for playback only).
- 18 Cassette indicator (page 28)
- 19 TIMER indicator

Refer to the pages indicated for details.

Remote Commander

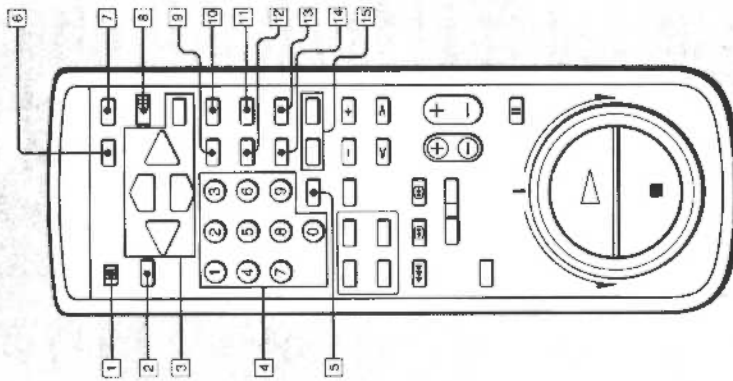


- 1 TV/VTR Remote Control selector (page 17)
- 2 MENU button
- 3 EXECUTE button and Cursor Shift ▲/▼/◀/▶ buttons
- 4 Channel Number buttons (page 33)
- 5 ENTER button
- 6 TV/VTR (Antenna TV/VTR) button (page 34)
- 7 POWER switch (page 60)
- 8 COMMAND MODE 1/2/3 selector (page 17)
- 9 TIMER CLEAR button (page 41)
- 10 TIMER REC ON/OFF button (page 38)
- 11 INPUT SELECT button (page 33)
- 12 TAPE SPEED button (page 33)
- 13 DATA SCREEN button (page 30)
- 14 INDEX button (page 50)
- 15 INDEX MARK/ERASE buttons (pages 49, 52)


Identifying the Parts and Controls

Refer to the pages indicated for details.

Remote Commander

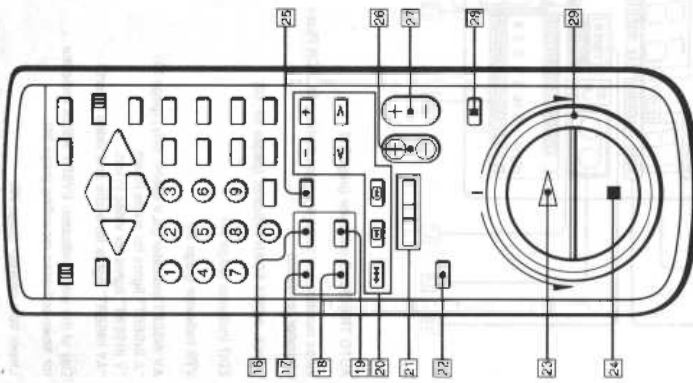


- 16 ONCE button (page 45)
- 17 VCR Plus+ button (page 45)
- 18 DAILY button (page 45)
- 19 WEEKLY button (page 45)
- 20 Tape Transport buttons (pages 29, 47 to 48)
SLOW
(pressing + increases the speed, - decreases the speed)
FRAME
(frame-by-frame picture and cassette direction for slow motion playback,
← reverse
→ forward
- 21 HI-SPEED REWIND
←←← SEARCH (reverse/forward)
- 22 REC buttons (Press the two buttons simultaneously) (page 33)
- 23 SKIP button (page 48)
- 24 PLAY button (page 29)
- 25 STOP button (page 29)
- 26 AUDIO MONITOR button (page 32)
- 27 CHANNEL +/- buttons (page 33)
- 28 VOL +/- buttons
- 29 PAUSE button (page 47)
- DUAL MODE SHUTTLE ring (pages 47 and 48)

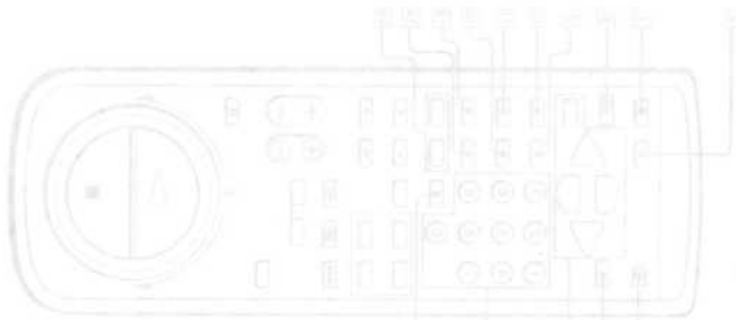


SECTION 2 DISASSEMBLY

NOTE: Follow the disassembly procedure in the numerical order given.

2-1. REMOVAL OF UPPER CASE, BOTTOM PLATE AND FRONT PANEL ASSEMBLIES

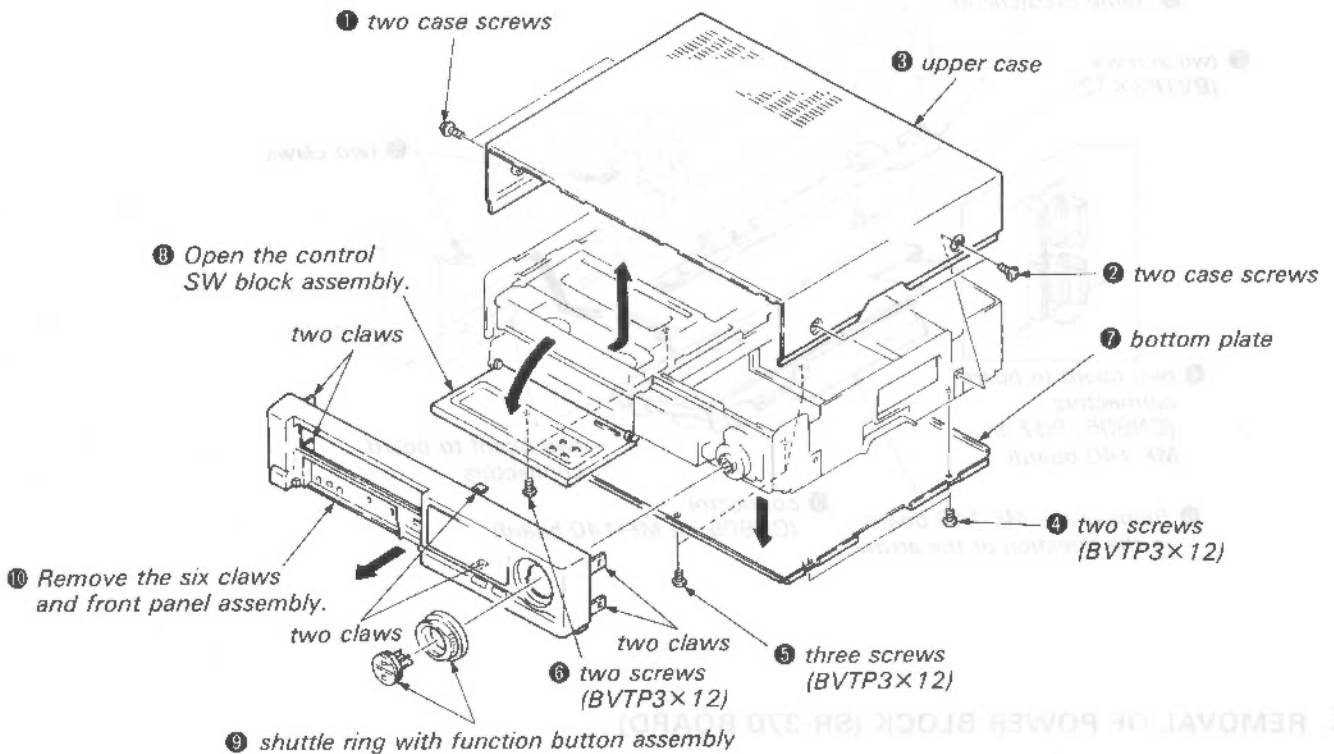


2-2. REMOVAL OF CONTROL SW BLOCK ASSEMBLY

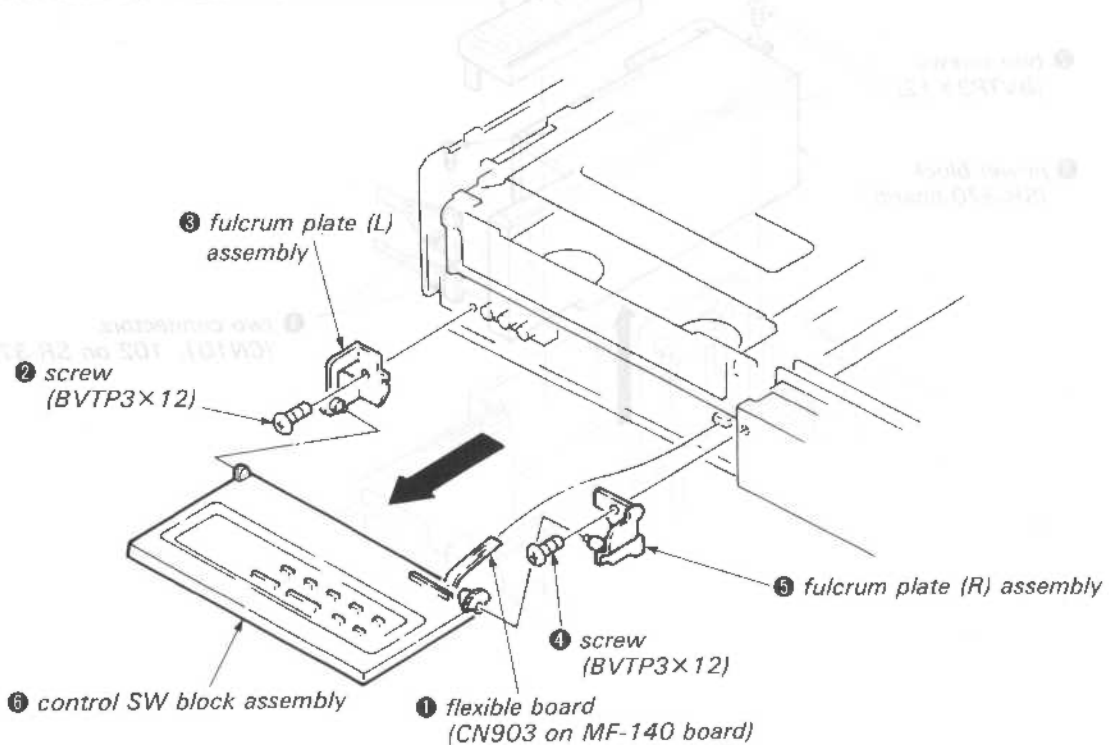


NOTE: Follow the disassembly procedure in the reverse order of assembly.


2-1. REMOVAL OF UPPER CABINET BOTTOM PLATE AND FRONT PANEL ASSEMBLIES

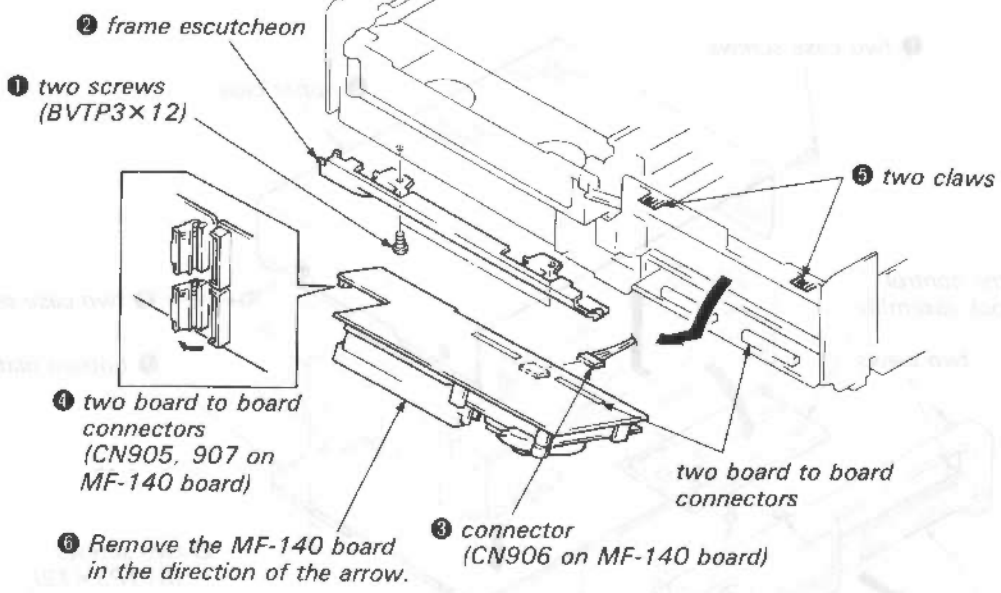

2-4. REMOVAL OF POWER BLOCK (SR-370 BOARD)

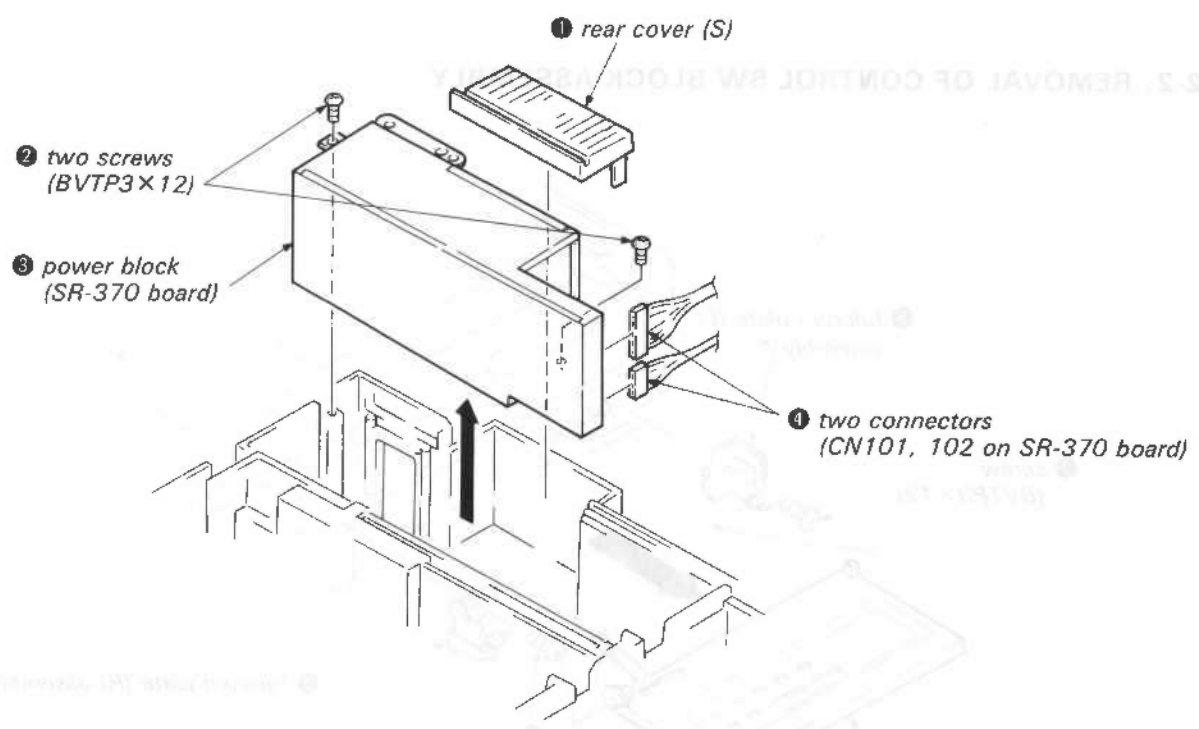


2-5. REMOVAL OF FL CASSETTE COMPARTMENT ASSEMBLY

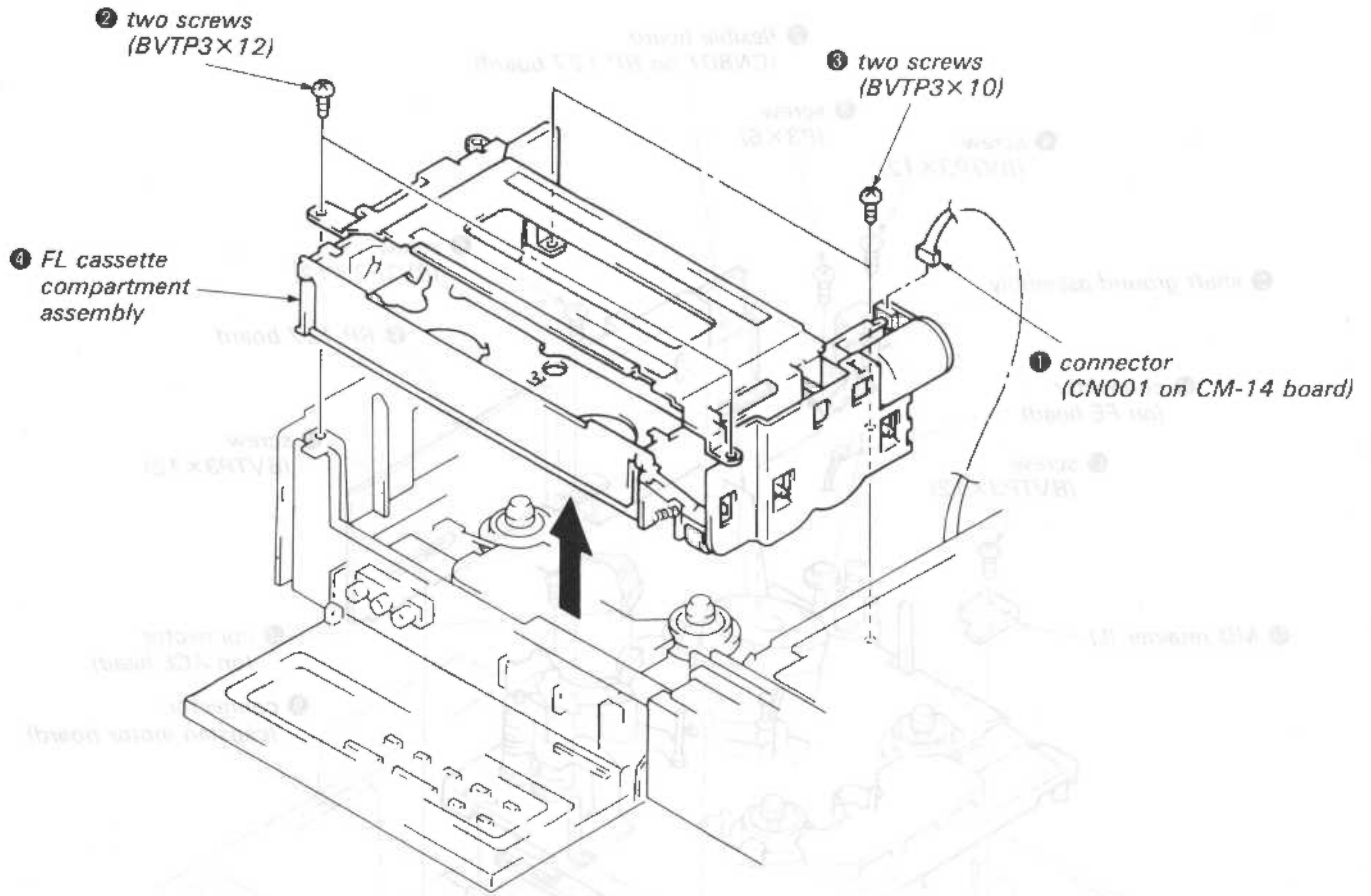


2-6. REMOVAL OF RP-127 BOARD AND MECHANISM DECK BLOCK ASSEMBLY

2-8 REMOVAL OF FL CASSETTE COMPARTMENT ASSEMBLY

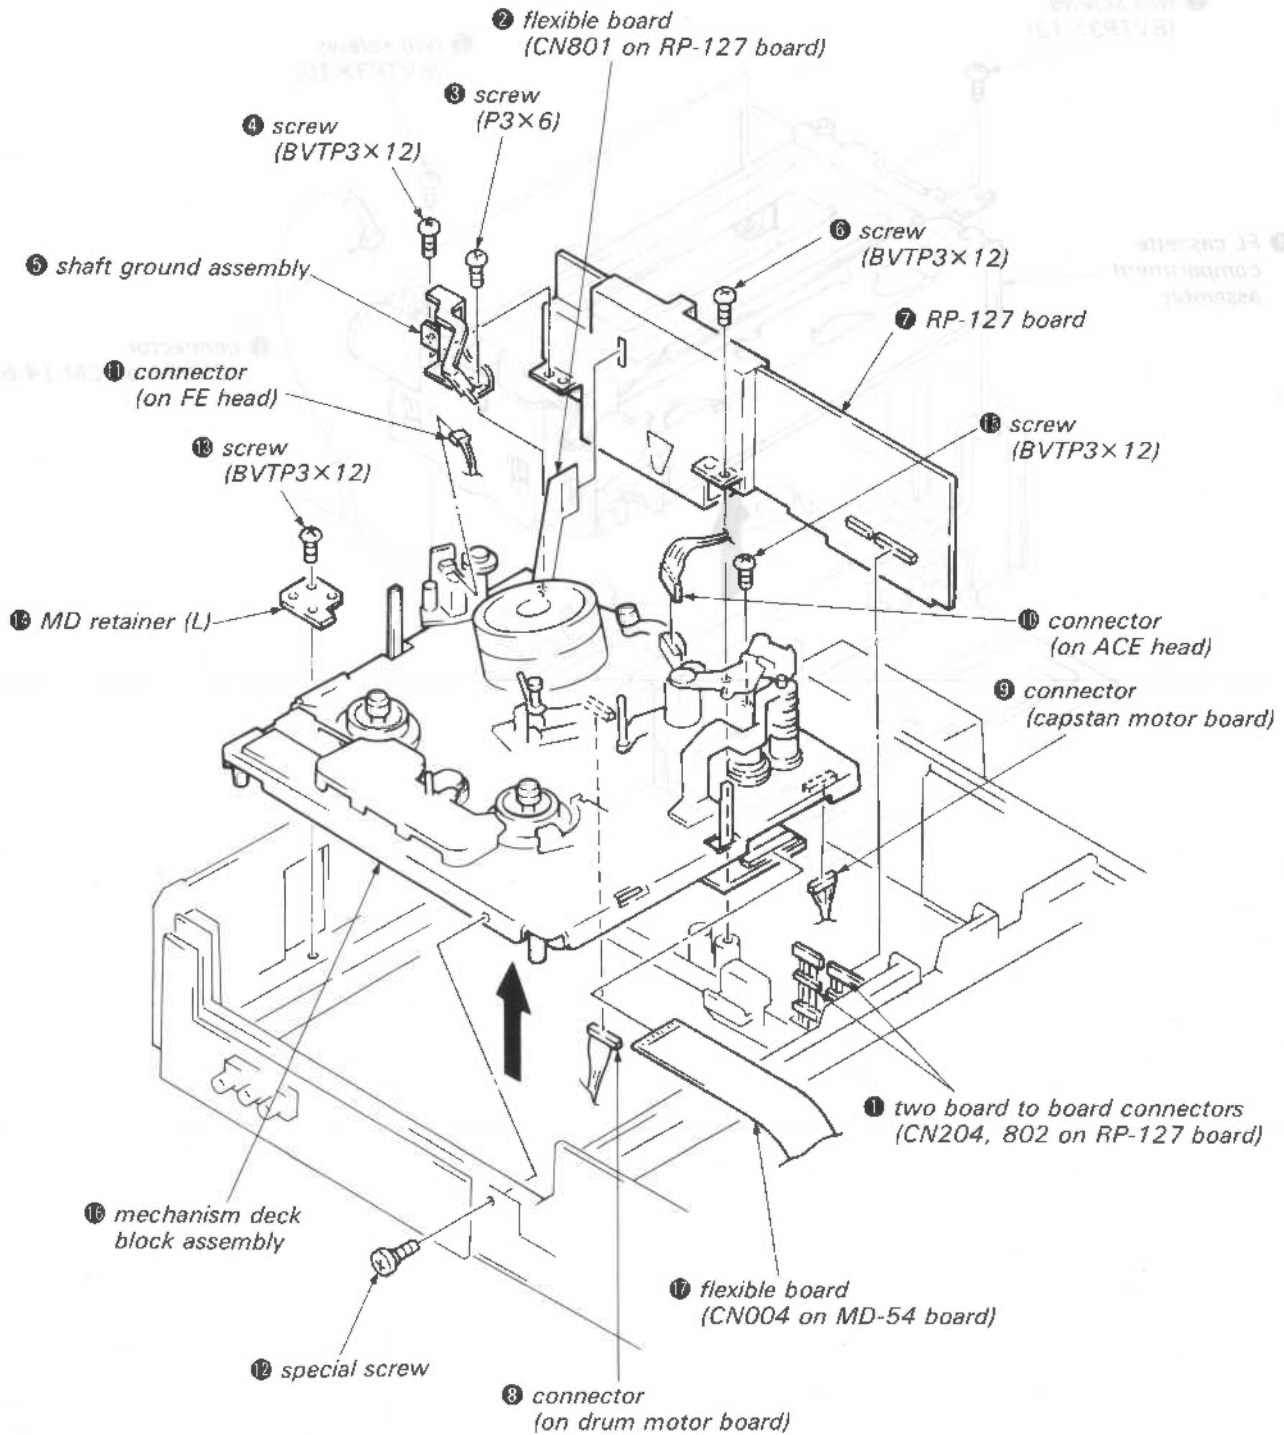


2-7. REMOVAL OF HF-24, TU-132 AND YC-114 BOARDS

2-9 INTERNAL VIEWS

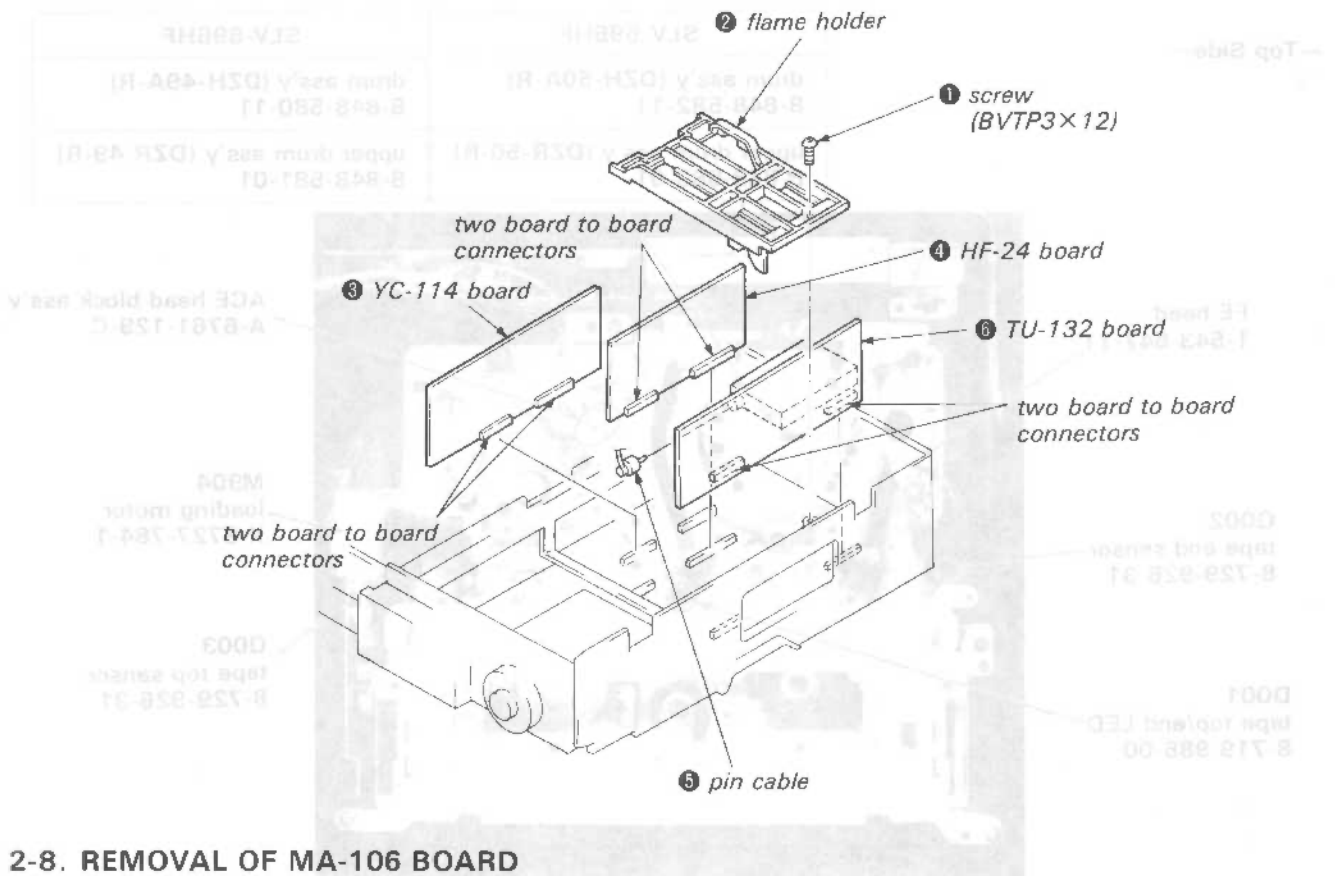

2-8. REMOVAL OF MA-106 BOARD

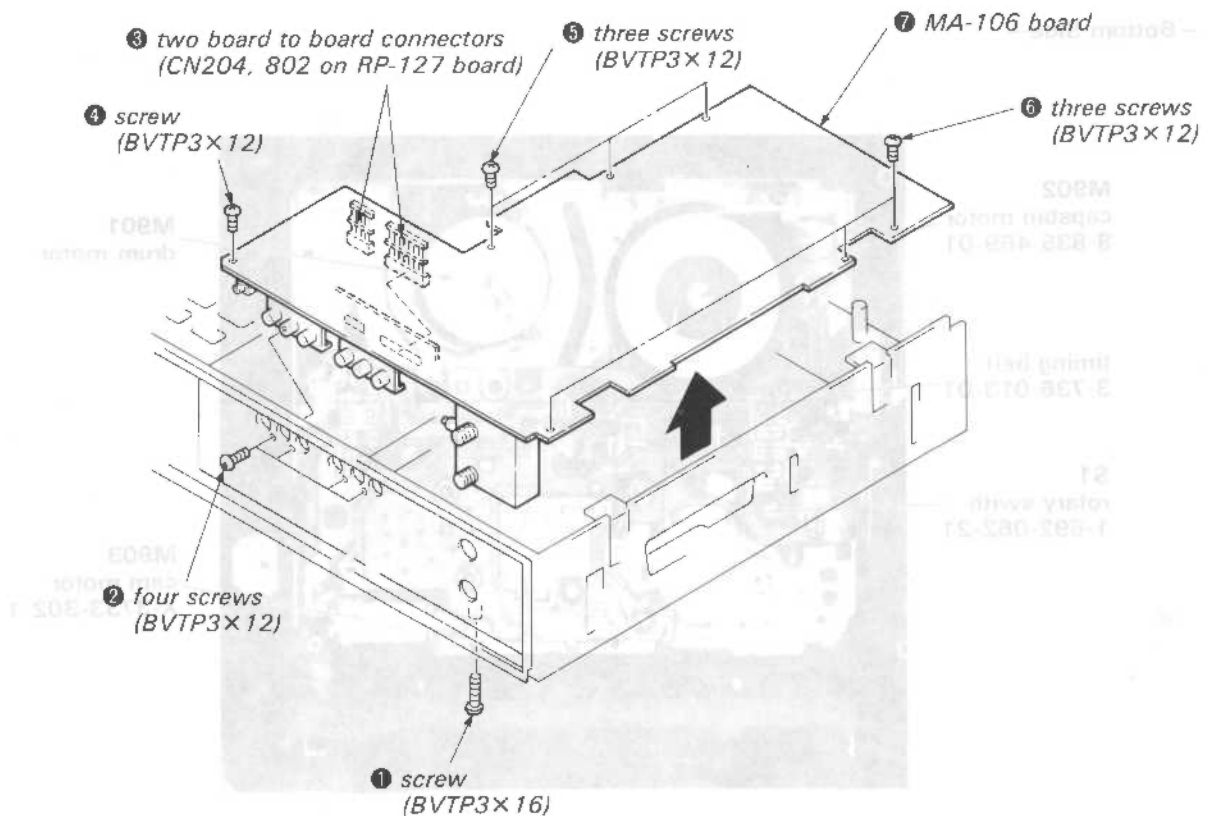

2-9. INTERNAL VIEWS

S.T. REMOVAL OF THE 24 IN. 133 AND YC THE BOARD

— Top Side —

SLV-595HF	SLV-696HF
drum ass'y (DZH-50A-R) 8-848-582-11	drum ass'y (DZH-49A-R) 8-848-580-11
upper drum ass'y (DZR-50-R) 8-848-583-01	upper drum ass'y (DZR-49-R) 8-848-581-01

FE head
1-543-647-11


ACE head block ass'y
A-6761-129-C

Q002
tape end sensor
8-729-926-31

M904
loading motor
X-3727-784-1

D001
tape top/end LED
8-719-985-00

Q003
tape top sensor
8-729-926-31

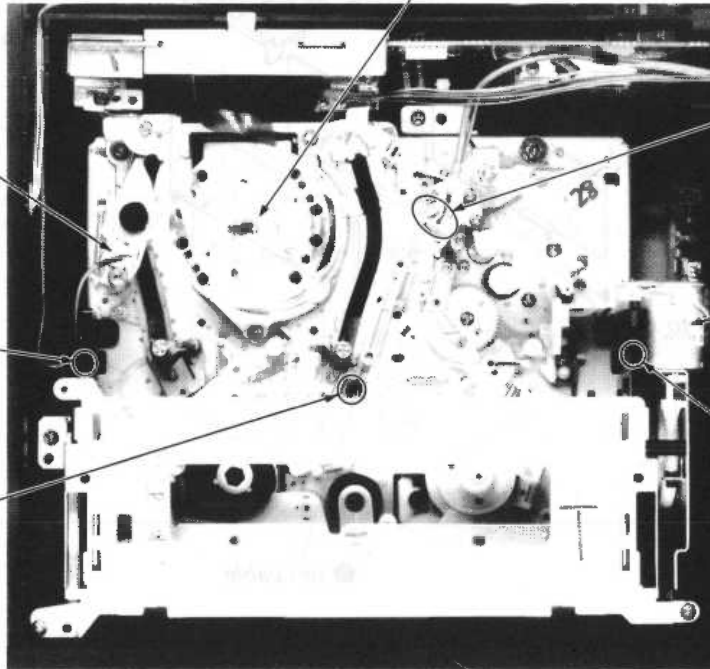

— Bottom Side —


M902
capstan motor
8-835-469-01

M901
drum motor

timing belt
3-736-013-01


S1
rotary swith
1-692-062-21

M903
cam motor
X-3733-302-1

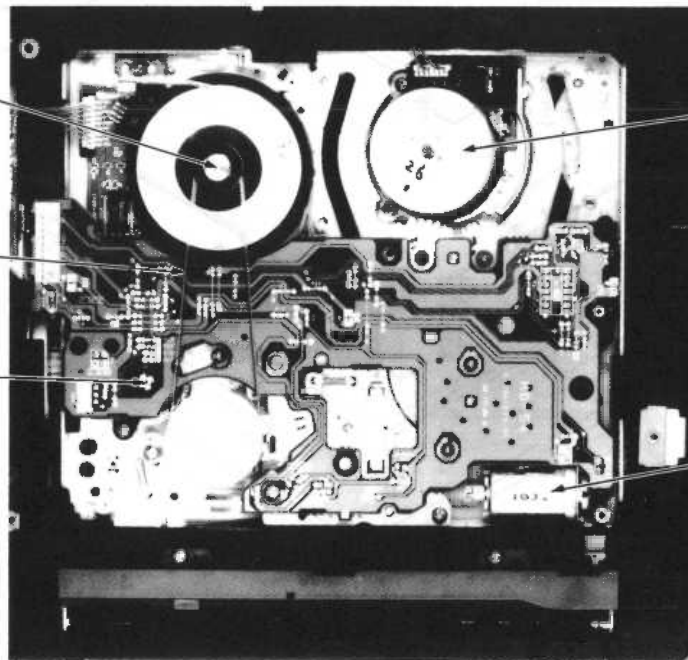


SECTION 3
DIAGRAMS


3.1 CIRCUIT BOARDS LOCATION

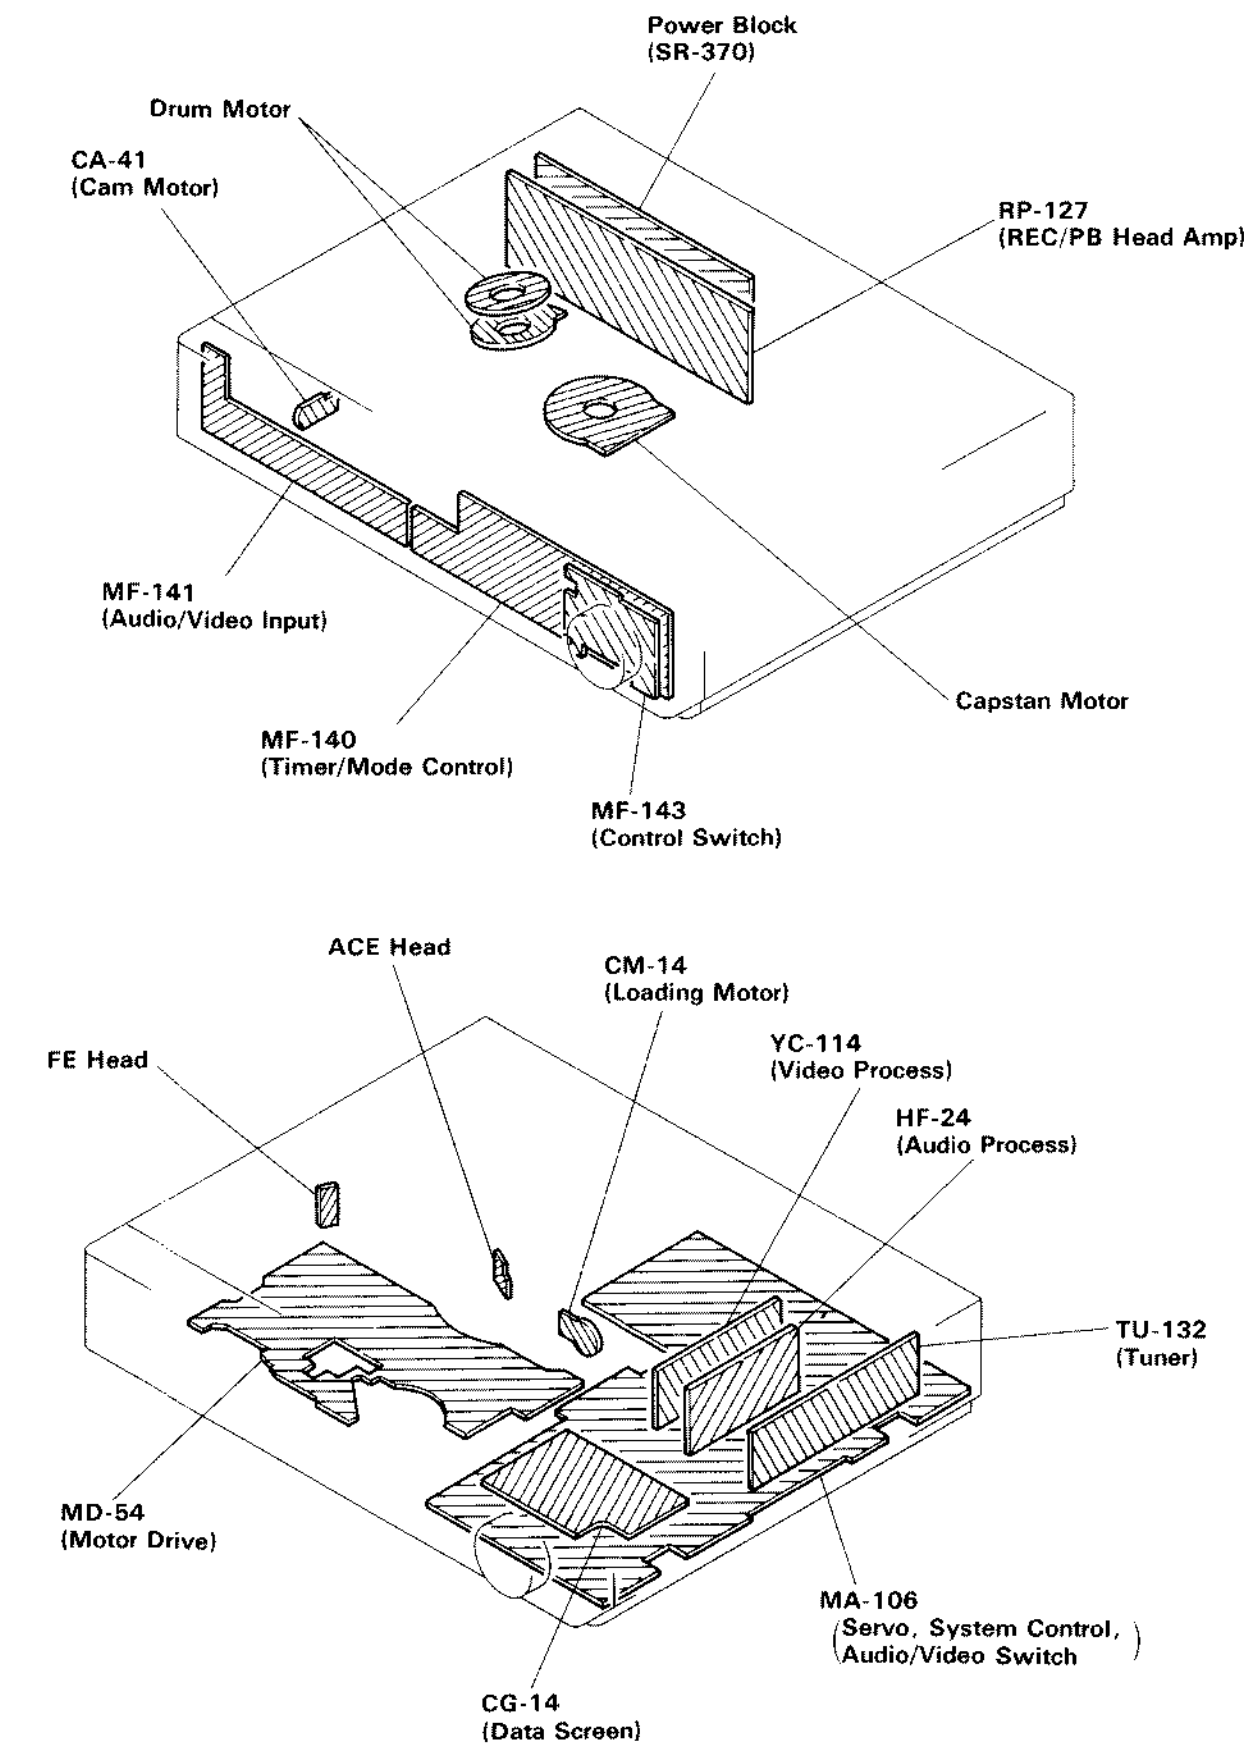

3-2. OVERALL BLOCK DIAGRAM

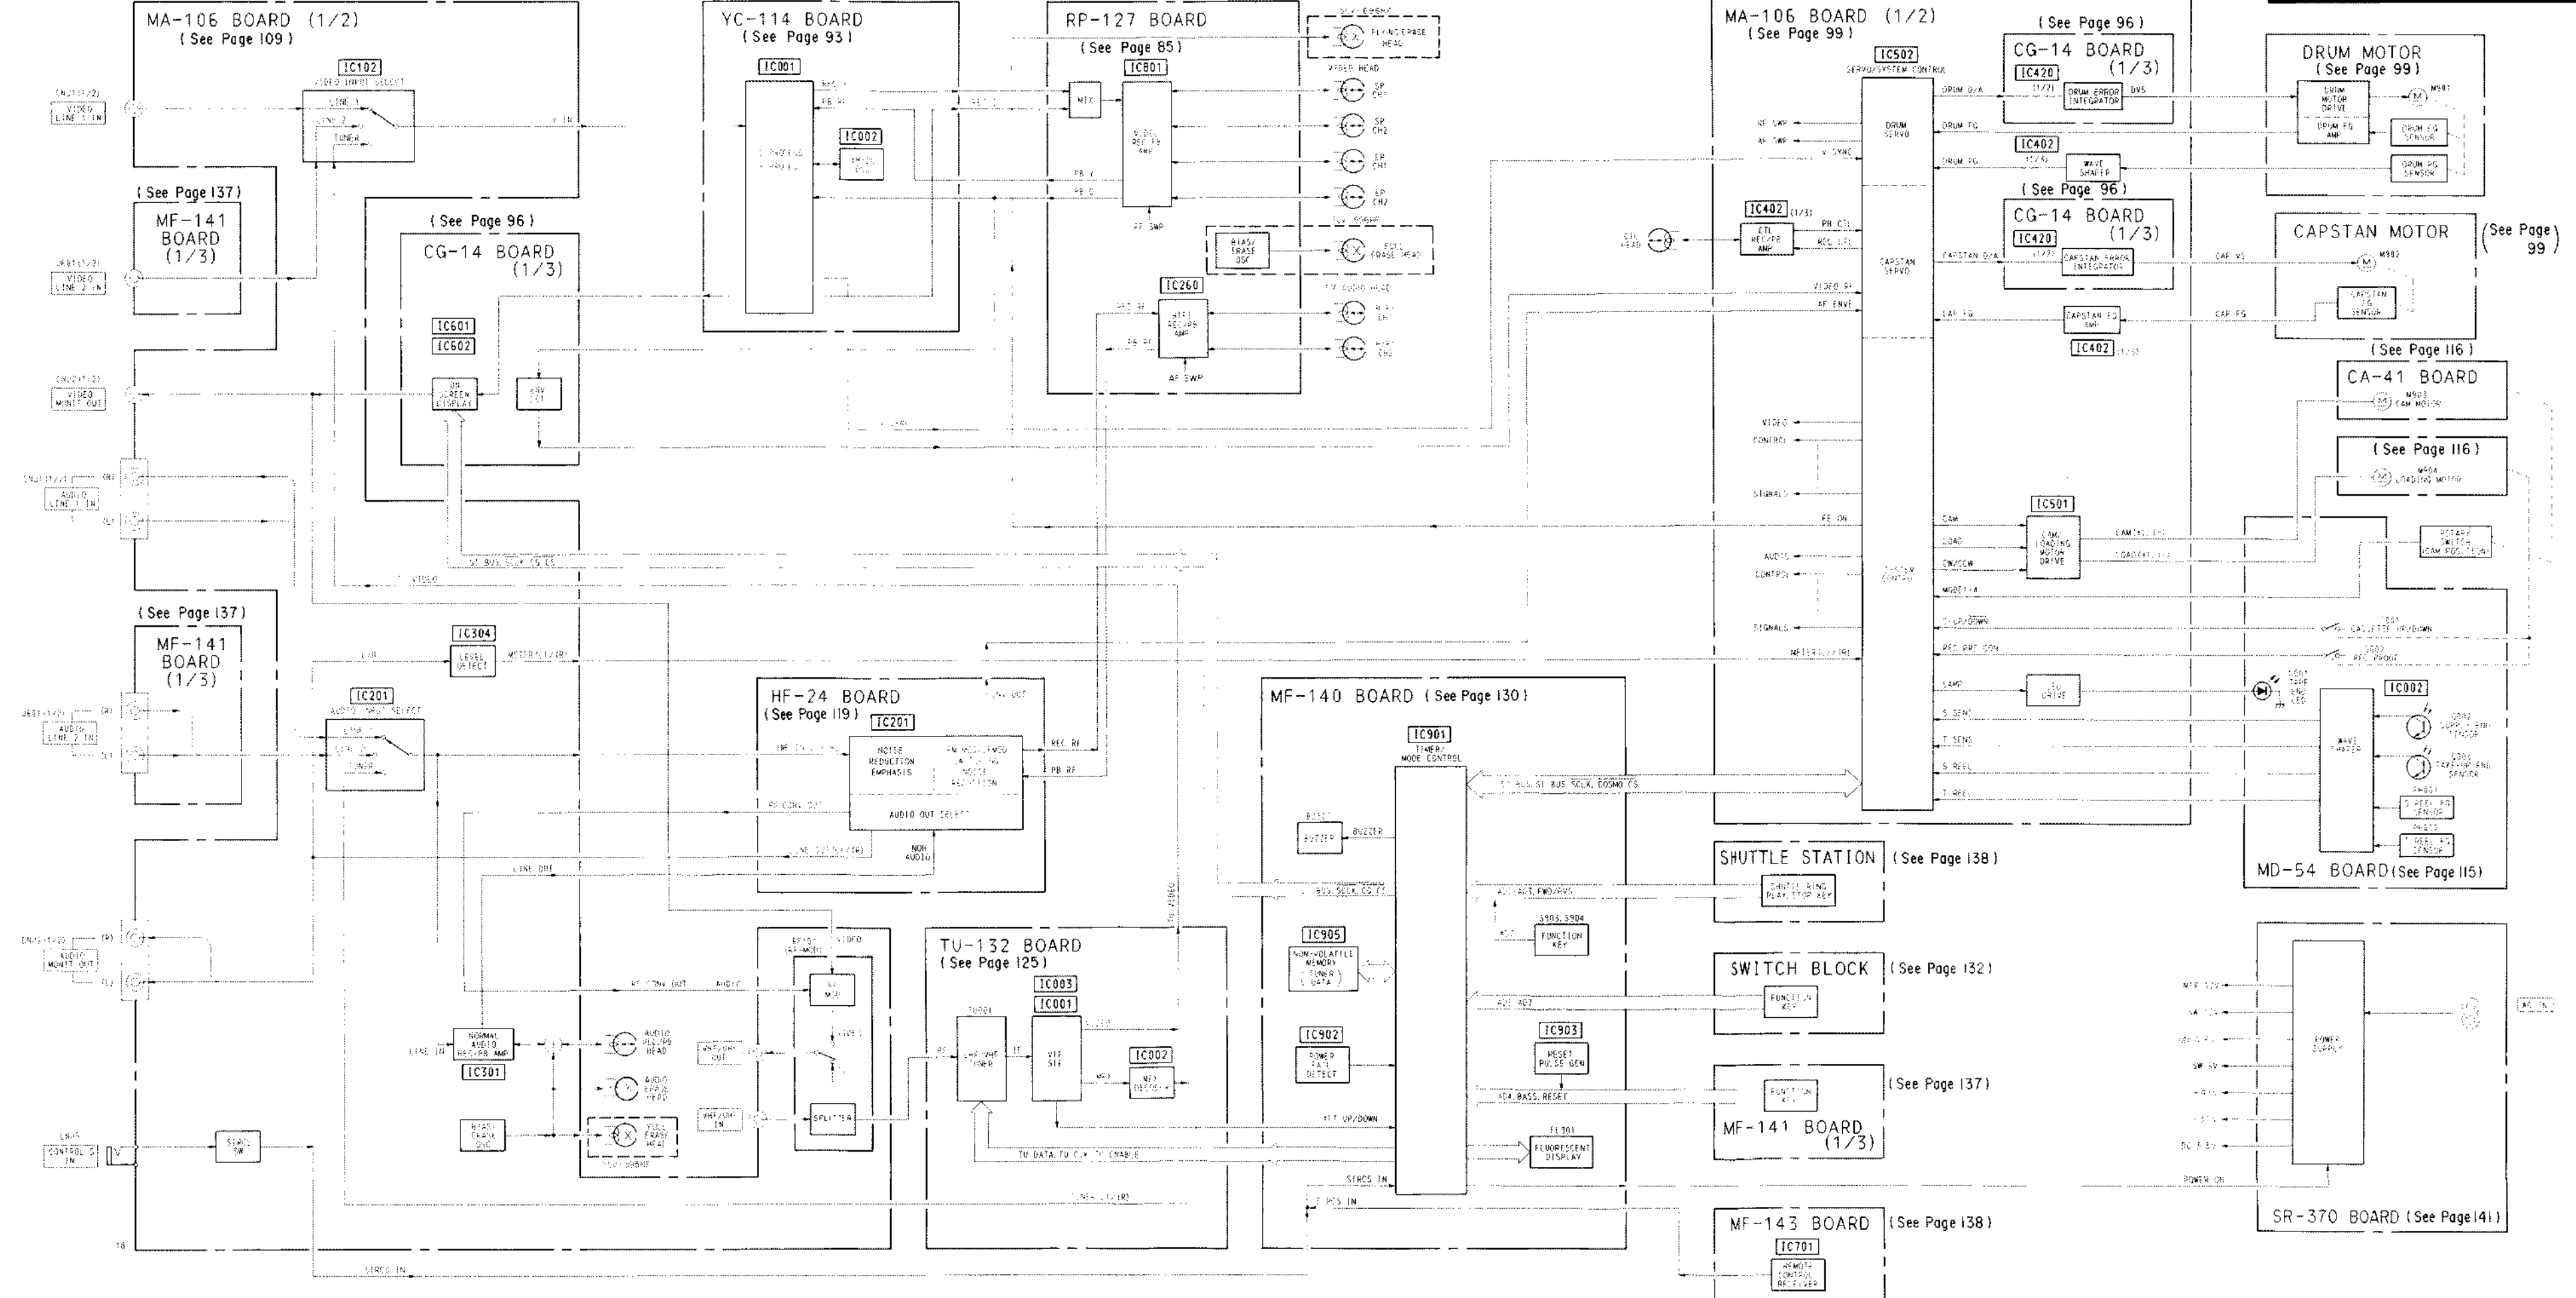

3-3. VIDEO BLOCK DIAGRAM

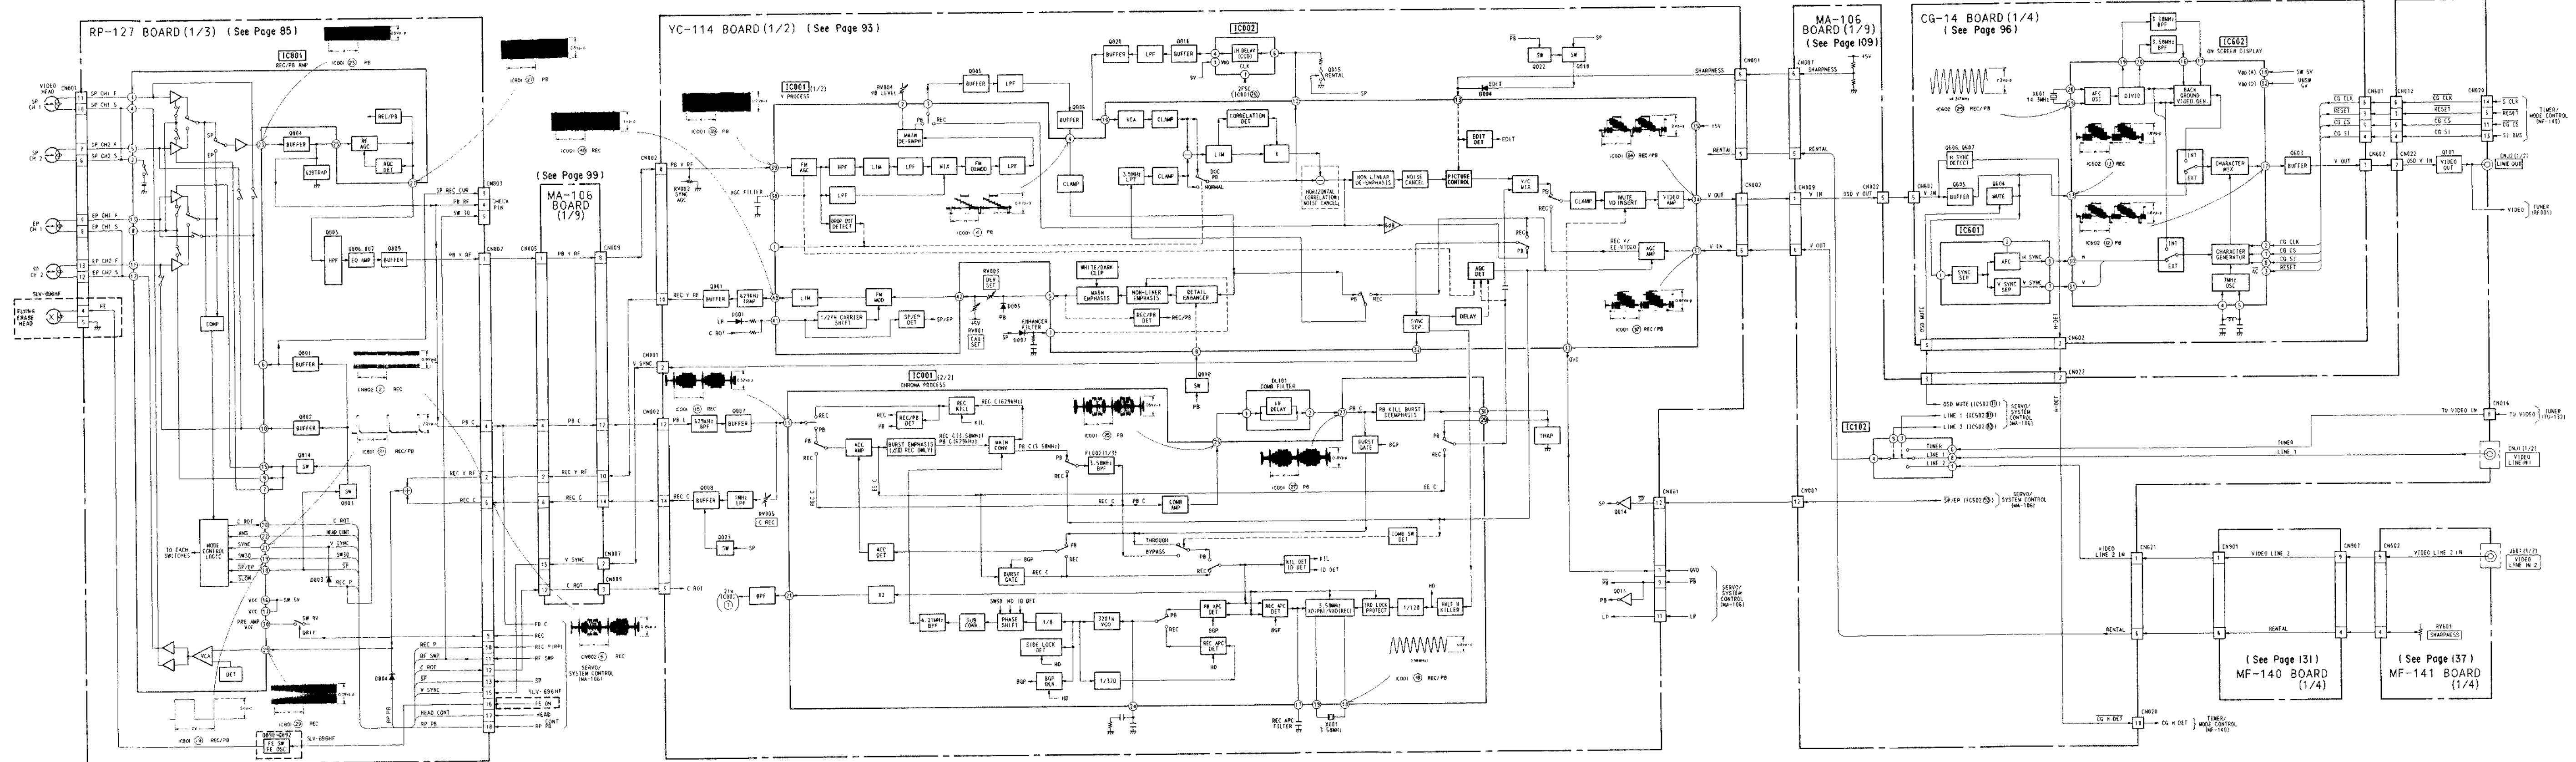

3-4. SYSTEM CONTROL—VIDEO BLOCK INTERFACE

Signal	Pin. No.	I/O	STOP/ FF/ REW	TAPE THREAD- ING	TAPE UNTHRE- ADING	PB	PB · PAUSE	SLOW	× 2	CUE	REVIEW	REC	REC · PAUSE
V · PB	MA106 Board IC502②	O	H	H	H	L	L	L	L	L	L	H	H
HEAD CONT	MA106 Board IC502②	O	L	L	L	L	HI-Z (2.5V)	*1	*10	*5	*5	L	L
RF SW P (SW30)	MA106 Board IC502①	O	*2	*2	*2	*2	*2	*2	*2	*2	*2	*2	*2
Q VD/V MUTE	MA106 Board IC502②	O	L	L	L	*3	*4	*4	*4	*4	*4	L	L
RP PB	MA106 Board IC502③	O	H	H	H	H	H	H	H	H	H	L	L
SP	MA106 Board IC502③	O	*6	*6	*6	*7	*7	*7	*7	*7	*7	*6	*6
EP	MA106 Board IC502③	O	*6	*6	*6	*7	*7	*7	*7	*7	*7	*6	*6
LP	MA106 Board IC502③	O	L	L	L	*7	*7	*7	*7	*7	*7	L	L
REC · P	MA106 Board IC502④	O	L	L	L	L	L	L	L	L	L	L	H
REC	MA106 Board IC502④	O	L	L	L	L	L	L	L	L	L	H	H
V SYNC	MA106 Board IC502④	I	*8	*8	*8	*8	*8	*8	*8	*8	*8	*8	*8
OSD MUTE	MA106 Board IC502⑤	O	*9	*9	*9	*9	*9	*9	*9	*9	*9	*9	*9
EDIT	MA106 Board IC502⑥	O	*11	*11	*11	*11	*11	*11	*11	*11	*11	*11	*11

- * 1. Forward slow mode: "HI-Z (2.5V)" in tape stop, "L" in tape running (approx. 40 msec).
Reverse slow mode: "HI-Z (2.5V)" in tape stop, "H" in tape running SP mode (approx. 40 msec).
"L" in tape running EP mode (approx. 40 msec).
- * 2. Synchronized with drum rotation. 30 Hz 50% duty pulse.
- * 3. Normally "L". "H" when CTL signal is not generated.
- * 4. V period "H" pulse.
- * 5. "H" in SP mode. "L" in EP mode.
- * 6. Selected by SP/EP. SP mode: "L", EP mode: "H".
- * 7. Selected by tape recording mode.

Signal	Mode		
	SP	LP	EP
SP①	L	H	H
EP②	L	L	H
LP③	L	H	L

- * 8. Composite sync signal (positive).
- * 9. "L" when menu screen or blue back screen.
- * 10. "HI-Z (2.5V)" in EP mode. "H" in SP mode.
- * 11. Normally "L". "H" in edit mode.

3-5. SYSTEM CONTROL—SERVO PERIPHERAL CIRCUIT INTERFACE

Signal	Pin. No.	I/O	STOP	FF	REW	TAPE THREAD- ING	TAPE UNTHRE- ADING	PB	PB · PAUSE	SLOW	× 2	CUE	REVIEW	REC	REC · PAUSE	PB INDEX WRT/ERS
REC CTL	MA106 Board IC502②	O	*1	*1	*1	*1	*1	*1	*1	*1	*1	*1	*1	*1	*1	
CAP STOP	MA106 Board IC502③	O (O.D)	L	HI-Z (O.D)	HI-Z (O.D)	HI-Z (O.D)	HI-Z (O.D)	HI-Z (O.D)	L	*3	HI-Z (O.D)	HI-Z (O.D)	HI-Z (O.D)	HI-Z (O.D)	HI-Z (O.D)	
STEP PLS	MA106 Board IC502③	O	L	L	L	L	L	L	L	*2	L	L	L	L	L	
CTC REC	MA106 Board IC502③	O	L	L	L	L	L	L	L	L	L	L	L	H	H	H
INDEX	MA106 Board IC502③	O	L	L	L	L	L	L	L	L	L	L	L	L	L	H
PB CTL	MA106 Board IC502④	I	H	*6	*6			*1	H/L	*2	*5	*6	*6	*1	H	
VD CTL	MA106 Board IC502④	I	H	*6	*6			*1	H/L	*2	*5	*6	*6	*1	H	
DRUM PG	MA106 Board IC502④	I	*4	*7	*7	*5	*5	*7	*7	*7	*7	*7	*7	*7	*7	
DRUM FG	MA106 Board IC502④	I	*4	*8	*8	*5	*5	*8	*8	*8	*8	*8	*8	*8	*8	
CAP FG	MA106 Board IC502⑤	I	H/L	*6	*6	*5	*5	*6	H/L	*9	*6	*6	*6	*6	H/L	
CAP RVS	MA106 Board IC502⑤	O	H/L	L	H	L	H	L	L	*2	L	L	H	L	L	
CAP DA	MA106 Board IC502⑤	O	*10	*10	*10	*10	*10	*11	*10	*10	*11	*11	*11	*11	*10	
DRUM DA	MA106 Board IC502⑤	O	*12	*12	*12	*12	*12	*12	*12	*12	*12	*12	*12	*12	*12	
CTL STEP	MA106 Board IC502⑤	O	L	L	L	L	L	L	L	*13	L	L	L	L	L	

- * 1. 30 Hz pulse.
- * 2. Pulse at tape running.
- * 3. Reverse logic pulse of STEP PLS.
- * 4. "L" when drum rotation stop.
- * 5. Unstable period pulse.
- * 6. Pulse of period in proportion to tape speed.
- * 7. 30 Hz "H" pulse.
- * 8. 360 Hz pulse.
- * 9. Pulse at tape running.
- * 10. Approx. 2 msec period "H" or "L" pulse.
- * 11. Approx. 1.5 msec period "H" or "L" pulse.
- * 12. Approx. 3 msec period "H" or "L" pulse.
- * 13. "H" when FWD direction and STEP drive.

3-6. SYSTEM CONTROL—MECHANISM BLOCK INTERFACE

Signal	Pin. No.	I/O	HI-SPEED REW	EJECTED	CASSETTE LOADING	CASSETTE UNLOAD- ING	TAPE THREAD- ING	TAPE UNTHRE- ADING	STOP	FF	REW	PB	PB · PAUSE	SLOW	× 2	CUE	REVIEW	REC	REC · PAUSE
CAM * 1	MA106 Board IC502②	O	L	L	L	L	H	H	L	L	L	L	L	L	L	L	L	L	L
LOAD	MA106 Board IC502②	O	L	L	H	H	L	L	L	L	L	L	L	L	L	L	L	L	L
CW/CCW	MA106 Board IC502③	O			H	L	H	L											
MODE 1	MA106 Board IC502③	I	H	L	L	L	H	H	L	H	H	H	L	L	H	H	H	H	L
MODE 2	MA106 Board IC502③	I	L	H	H	H	H	H	L	L	L	L	H	H	L	L	L	L	H
MODE 3	MA106 Board IC502③	I	H	H	H	H	L	L	L	L	L	H	H	H	H	H	L	H	H
MODE 4	MA106 Board IC502③	I	H	H	H	H	H	H	L	H	H	L	L	L	L	L	L	L	L
REC PRF	MA106 Board IC502④	I	*2	L	*2	*2	*2	*2	*2	*2	*2	*2	*2	*2	*2	*2	*2	*2	*2
C-UP/DOWN	MA106 Board IC502④	I	L	H	H→L	L→H	L	L	L	L	L	L	L	L	L	L	L	L	L
T REEL	MA106 Board IC502④	I	*3	H/L	H/L	H/L	H/L	H/L	H/L	*3	*3	*3	H/L	*3	*3	*3	*3	*3	H/L
S REEL	MA106 Board IC502④	I	*3	H/L	H/L	H/L	*3	*3	H/L	*3	*3	*3	H/L	*3	*3	*3	*3	*3	H/L
END LED	MA106 Board IC502⑤	O (O.D)	*4	*4	*4	*4	*4	*4	*4	*4	*4	*4	*4	*4	*4	*4	*4	*4	*4
CAP TRQ 1	MA106 Board IC502⑤	O (O.D)	*1																*6
CAP TRQ 2	MA106 Board IC502⑤	O (O.D)																	*1
CAP STOP	MA106 Board IC502⑥	O (O.D)	H	L	L	L	H	H	L	H	H	H	L	*5	H	H	H	H	L
CAP RVS	MA106 Board IC502⑥	O	H	H			L	H	H/L	L	H	L	L	L/*5	L	L	H	L	L
CAP DA * 8	MA106 Board IC502⑥	O																	
T SENS	MA106 Board IC502⑥	I	*7	*4	*4	*4	*7	*7	*7	*7	*7	*7	*7	*7	*7	*7	*7	*7	*7
S SENS	MA106 Board IC502⑥	I	*7	*4	*4	*4	*7	*7	*7	*7	*7	*7	*7	*7	*7	*7	*7	*7	*7

- * 1. "H" when mechanism mode transition.
- * 2. "L" when erasing protection tab is bent, "H" when not bent.
- * 3. Pulse of period in proportion to reel rotating speed.
- * 4. Approx. 2 msec period "H" pulse.
- * 5. Pulse at tape running.
- * 6. "L" when tape running and CAP RVS is "H".
- * 7. Normally "L". 2 msec period "H" pulse when tape top or tape end is detected.

3-7. SYSTEM CONTROL—SYSTEM CONTROL PERIPHERAL CIRCUIT INTERFACE

Signal	Pin. No.	I/O	I/O level
COSMO-RESET	MA106 Board IC502 ④	I	Normally "H". "L" when service interruption is detected or restored.
COSMO-CS	MA106 Board IC502 ④	I	Chip select signal from timer microprocessor. V period "L" pulse.
SI-BUS	MA106 Board IC502 ④	I	Serial communication data from timer microprocessor. V period "L" pulse.
SO-BUS	MA106 Board IC502 ④	O	Serial communication data to timer microprocessor. V period "L" pulse.
S-CLK	MA106 Board IC502 ④	I	Serial communication clock with timer microprocessor. V period "L" pulse.

3-8. SYSTEM CONTROL—AUDIO BLOCK INTERFACE

Signal	Pin. No.	I/O	STOP/FF/REW	TAPE LOADING	TAPE UNLOADING	PB	PB-PAUSE	SLOW	× 2	CUE	REVIEW	REC	REC-PAUSE
AF PB	MA106 Board IC502 ④	O	H	H	H	L	L	L	L	L	L	H	H
MONI (L)	MA106 Board IC502 ④	O	* 1	* 1	* 1	* 1	* 1	* 1	* 1	* 1	* 1	* 1	* 1
MONI (R)	MA106 Board IC502 ④	O	* 1	* 1	* 1	* 1	* 1	* 1	* 1	* 1	* 1	* 1	* 1
AF ENVELOP	MA106 Board IC502 ④	I	AF RF envelope signal input terminal for automatic tracking.										
NA PB	MA106 Board IC502 ④	O	L	L	L	H	H	H	H	H	H	L	L
A MUTE	MA106 Board IC502 ④	O (O.D.)	L	L	L	* 4	H	H	H	H	H	L	L
SP	MA106 Board IC502 ④	O	* 2	* 2	* 2	* 3	* 3	3	* 3	* 3	* 2	* 2	* 2
NA REC-P	MA106 Board IC502 ④	O	L	L	L	L	L	L	L	L	L	H	L
AF REC-P	MA106 Board IC502 ④	O	L	L	L	L	L	L	L	L	L	H	L
AF SWP	MA106 Board IC502 ④	O	* 5	* 5	* 5	* 5	* 5	* 5	* 5	* 5	* 5	* 5	* 5
AF SW POSITION	MA106 Board IC502 ④	I	Input terminal for AF switching position adjustment.										
BB MUTE	MA106 Board IC502 ④	O	* 7	* 7	* 7	* 8	H	H	H	H	H	* 7	* 7
AF MIX	MA106 Board IC502 ④	O (O.D.)	L	L	L	* 9	* 9	* 9	* 9	* 9	* 9	L	L
METER (L)	MA106 Board IC502 ④	I	Input terminal for the audio level meter (left) indication.										
METER (R)	MA106 Board IC502 ④	I	Input terminal for the audio level meter (right) indication.										
FULL ERS	MA106 Board IC502 ④	O (O.D.)	H	H	H	H	H	H	H	H	H	L	H
NOR A MUTE	MA106 Board IC502 ④	O	L	L	L	* 4	H	H	H	H	H	L	L
NOR CONT 1	MA106 Board IC502 ④	O	* 6. Normal audio control signal.										
NOR CONT 2	MA106 Board IC502 ④	O											

* 1. Selected by audio monitor.

Signal	Audio monitor			
	STEREO OR MAIN, SUB. L, R	MAIN L	SUB R	(NORMAL)
MONI (L) ④	H	H	L	L
MONI (R) ④	H	L	H	L

- * 2. Selected by SP/EP selector. SP mode: "L", EP mode: "H".
- * 3. Selected by tape recording mode. SP mode: "L", EP mode: "H".
- * 4. "H" when CTL signal is not played back.
- * 5. 30 Hz, 50% duty pulse approx. 5 msec delayed from RF SW P.

* 6.

Signal	SAP	
	Selected	Not selected
NOR CONT 1 ④	H	H
NOR CONT 2 ④	L	H

- * 7. "H" when power ON/OFF selected.
- * 8. "H" when CTL signal is not played back.
- * 9. "H" when hi-fi NORMAL MIX ON.

3-9. SYSTEM CONTROL—TUNER BLOCK INTERFACE

Signal	Pin. No.	I/O	I/O level
STEREO	MA106 Board IC502 ④	I	Tuner audio mode input terminal. "L" when stereo.
TAMUTE	MA106 Board IC502 ④	O	Tuner audio mute output. "H" when not used channel is selected.
F MONO	MA106 Board IC502 ④	O (O. D.)	"L" when tuner audio and auto stereo are turned OFF.

3-10. SYSTEM CONTROL AND RF MODULATOR—INPUT SELECTION BLOCK INTERFACE

Signal	Pin. No.	I/O	I/O level
TV/VTR	MA106 Board IC502 ④	O	"L" when RF modulator through.
LINE 1	MA106 Board IC502 ④	O	* 1. Input select control signal.
LINE 2	MA106 Board IC502 ④	O	

* 1.

Input Signal	Tuner	LINE 1	LINE 2
	LINE 1 ④	L	H
LINE 2 ④	L	L	H

3-11. SERVO/SYSTEM CONTROL—MICROPROCESSOR PIN FUNCTION (MA-106 BOARD IC502)

Pin. No.	Port	I/O	Signal	Function
1	PB5/PP013	O	RF SWP	Video switching pulse output
2	PB4/PP012	O	Q VD	False VD pulse output
3	PB3/PP011	O	Q HD ENBL	False HD voltage level control
4	PB2/PP010	O	AF REC \bar{P}	"H" output when hi-fi audio REC
5	PB1/PP09	O	REC \bar{P}	"H" output when video REC-PAUSE
6	PB0/PP08	O	FE ON	Flaying erase ON/OFF output.
7	PC7/RT07	O	REC CTL	REC CTL output
8	PC6/RT06	O	INT VD	Internal VD signal. Not used
9	PC5/RT05	O	RC CONT	Not used
10	PC4/RT04	O	NA RECP	"H" when normal audio REC
11	PC3/RT03	O	NA PB	"H" when normal audio playback
12	PC2/PP018	O	CAM	CAM motor select
13	PC1/PP017	O	CW	Clockwise/counterclockwise signal output
14	PC0/PP016	O	LOAD	Load motor select
15	PJ7	I	CIN/REC PRF	Erasing protection tab, cassette IN detection input
16	PJ6	I	C DOWN	Cassette up/down detection input
17	PJ5	I	T SENS	T end sensor input
18	PJ4	I	S SENS	S end sensor input
19	PJ3	O	AF MIX	hi-fi/normal audio MIX control
20	PJ2	O	ANT VTR	RF modulator ON/OFF control
21	PJ1	I	STEREO	Tuner audio mode input
22	PJ0	I	BILING	Not used
23	PD7	O	TA MUTE	Tuner audio MUTE signal
24	PD6	O	STEP PLS	"H" when capstan step drive
25	PD5	O	DESCRAMBLE	Not used
26	PD4	O	TUNER/BS	Not used
27	PD3	O	BS MONITOR	Not used
28	PD2	O	CTL REC	"H" when CTR writing
29	PD1	O	CTL STEP	STEP motion control of CTL amp
30	PD0	O	INDEX	Index control. "H" when playback index writing or erasing.
31	PH7	O	F MONO	Tuner forced monaural signal
32	PH6	O	END LED	END sensor lamp drive output
33	PH5	O	CAP TPQ2	Capstan current control. "L" when FF/REW→ stop
34	PH4	O	CAP TPQ1	Capstan current control. "L" when slow down
35	PH3	O	NOR A MUTE	"H" when normal audio MUTE
36	PH2	O	FULL ERS	"L" when full erase head operation
37	PH1	O	A MUTE	Audio MUTE output
38	PH0	O	CAP STOP	Capstan STOP signal output
39	MP	I	MP	Fixed at "L" level
40	RST	I	COSMO RST	System reset input
41	Vss			GND
42	XTAL		XTAL	System clock 12 MHz
43	EXTAL		EXTAL	
44	CS0	I	COSMO CS	Chip select signal
45	SIO	I	SIO	Signal for serial communication
46	S00	O	S00	
47	SCK0	I	SCK0	
48	PF7/AN11	I	METER (L)	Level meter (L) input
49	PF6/AN10	I	METER (R)	Level meter (R) input

Pin. No.	Port	I/O	Signal	Function
50	PF5/AN9	0		Not used
51	PF4/AN8	I	AF SW POSI	VR input for hi-fi switching pulse position adjustment
52	AVss		AVss	GND
53	AVREF		AVREF	AD port reference input. UNSW 5V
54	AVDD		AVDD	UNSW 5V
55	PF3/AF7	I	MODE4	Mechanism section CAM encoder input
56	PF2/AN6	I	MODE3	
57	PF1/AN5	I	MODE2	
58	PF0/AN4	I	MODE1	
59	AN3	I	DEW	Not used
60	AN2	I	RF ENV	Video RF envelope input
61	AN1	I	AF ENV	hi-fi audio RF envelope input
62	AN0	I	RF SW POSI	VR input for RF SWP adjustment
63	PG7/EXI1	I	S REEL	S reel sensor input
64	PG6/EXI0	I	T REEL	T reel sensor input
65	PG5/SYNC1	I		Not used
66	PG4/SYNC0	I	V SYNC	Composite sync input
67	PG3/PBCTL	I	PB CTL	Playback CTL input
68	PG2/DPG	I	DRM PG	Drum PG input
69	PG1/DFG	I	DRM FG	Drum FG input
70	PG0/CFG	I	CAP FG	Capstan FG input
71	PE7/DAB1	0	OSD MUTE	Video output mute signal
72	PE6/DAB0	0	CAP RVS	Capstan reverse signal output
73	PE5/DAA1	0	CAP D/A	Capstan error D/A output
74	PE4/DAA0	0	DRM D/A	Drum error D/A output
75	PE3/PWM1	0	BASS BOOST	Not used
76	PE2/PWM0	0	BB MUTE	"H" when audio MUTE
77	PE1/EC/INT	I	VD CTL	Playback CTL input
78	PE0/INT0	I		Not used
79	PI7/SIL	0	NORM CONT1	Normal audio select control signal
80	PI6/SOL	0	NORM CONT2	
81	PI5/SCKL	0	LINE1	Video/audio input select signal
82	PI4/INT1	0	LINE2	
83	PI3/TO	0	MONI R	Audio output control signal
84	PI2/PWM	0	MONI L	
85	PI1/PO	I/O	HEAD CONT	Head select control
86	TEX	I		Not used
87	TX	0		Not used
88	Vss			GND
89	VDD			UNSW 5V
90	N.C.			Connected to UNSW 5V
91	PA7/PP07	0	SP	"L" when SP mode
92	PA6/PP06	0	EP	"H" when EP mode
93	PA5/PP05	0	LP	"H" when LP mode
94	PA4/PP04	0	EDIT	"H" when EDIT
95	PA3/PP03	0	V PB	"L" when video playback
96	PA2/PP02	0	AF PB	"L" when hi-fi audio playback
97	PA1/PP01	0	RP PB	"H" when video signal playback. Inverse signal of REC
98	PA0/PP00	0	REC	Rise up signal of head amp recording power
99	PB7/PP015	0		Not used
100	PB6/PP014	0	AF SWP	hi-fi switching pulse output

3-12. TIMER/MODE CONTROL—MICROPROCESSOR PIN FUNCTION (MF-140 BOARD IC901)

Pin. No.	Port	I/O	Signal	Function
1	S4	O	S0	Display segment signal 0
2	S5	O	S1	Display segment signal 1
3	S6	O	S2	Display segment signal 2
4	S7	O	S3	Display segment signal 3
5	S8	O	S4	Display segment signal 4
6	S9	O	S5	Display segment signal 5
7	S10	O	S6	Display segment signal 6
8	S11	O	S7	Display segment signal 7
9	S12	O	S8	Display segment signal 8
10	S13	O	S9	Display segment signal 9
11	S14	O	S10	Display segment signal 10
12	S15	O	S11	Display segment signal 11
13	S16	O	S12	Display segment signal 12
14	S17	O	S13	Display segment signal 13
15	T13	O	S14	Display segment signal 14
16	T12	O	S15	Display segment signal 15
17	T11	O	T11	Display timing signal 11
18	T10	O	T10	Display timing signal 10
19	T9	O	T9	Display timing signal 9
20	T8	O	T8	Display timing signal 8
21	T7	O	T7	Display timing signal 7
22	T6	O	T6	Display timing signal 6
23	T5	O	T5	Display timing signal 5
24	T4	O	T4	Display timing signal 4
25	T3	O	T3	Display timing signal 3
26	T2	O	T2	Display timing signal 2
27	T1	O	T1	Display timing signal 1
28	T0	O	T0	Display timing signal 0
29	INT	I	INT	Not used
30	TX		TX	Clock for back-up 32.768 kHz
31	TEX		TEX	Clock for back-up 32.768 kHz
32	RST	I	RESET	Reset signal input
33	VDD			Connected to 5V power
34	VDD		VDD	5V power
35	AD0	I	AD0 (RING 2)	KEY input *1
36	AD1	I	AD1 (RING 1)	KEY input *1
37	AD2	I	AD2 (RING 0)	KEY input *1, 2
38	AD3	I	AD3	KEY input *2
39	AD4	I	AD4	KEY input *2
40	AD5	I	AD5	KEY input *2
41	AD6	I	AD6	KEY input *2
42	AD7	I	AD7	KEY input *2
43	EC	I	EC	Not used
44	SCLK	O	SERIAL CLK	Serial communication clock
45	SO	O	SERIAL OUT	Serial data output
46	SI	I	SERIAL IN	Serial data input
47	PA0	O	CG CS	CG microprocessor chip select signal
48	PA1	I	EDIT	"H" when EDIT mode
49	PA2	I	MEM DATA	Non-volatile memory data signal


Pin. No.	Port	I/O	Signal	Function
50	PA3	I	CG HDET	Video signal, existence judgment input. "L": video signal
51	PF0	O	COSMO CS	SS microprocessor chip select signal
52	PF1	O	TU DATA	Tuner control signal
53	PF2	O	TU ENABLE	Tuner control signal
54	PF3	O	TU CLK	Tuner control signal
55	PE0	I	AFT DOWN	Tuner control signal
56	PE1	I	AFT UP	Tuner control signal
57	PE2	I		Not used
58	PE3	I	FWD/RVS	Shuttle ring input *1
59	PY0	O	COSMO RST	SS microprocessor reset signal output
60	PY1	O	BUZZER	PWM output for buzzer
61	PY2	I	POWER FAIL	"L" when service interruption
62	PY3	I	SIRCS IN	Remote control input
63	PD0	O	TEST	For adjustment
64	PD1	O		Not used
65	PD2	O	U/C	USA/CND model select pin. "L": USA
66	PD3	O	SELECTABLE PIN	SLV-595HF/696HF select pin. "L": SLV-595HF
67	PC0	O	BS CS	BS microprocessor chip select signal
68	PC1	O	MEM CS	Non-volatile memory chip select signal
69	PC2	O	MEM CLOCK	Non-volatile memory clock signal
70	PC3	O	MEM WRITE	Non-volatile memory write data
71	VSS		VSS	GND
72	XTAL		XTAL	Clock 4.19 MHz
73	VDD		VDD	Connected to 5V power
74	EXTAL		EXTAL	Clock 4.19 MHz
75	VREF		VREF	A/D input reference power
76	VFDOP		VFDOP	Power for fluorescent indicator
77	PH3	O	POWER ON	"H" output when power ON
78	PH2	O	TM ON LINE	Not used
79	PH1	O	AUTO PRESET	Not used
80	PH0	O	BS LED	Not used

* 1. Shuttle ring position and terminal input level


Shuttle ring position	REW				STOP				FF	
	REVIEW	-x2	-x1	-1/5	PLAY/STILL	1/5	x1	x2	CUE	
AD0 (RING 0)	L	L	H	H	H	H	H	L	L	
AD1 (RING 1)	H	L	H	H	L	H	L	H	L	H
AD2 (RING 2)	H	L	L	L	L	H	H	L	L	L
FWD/RVS	L				H					

* 2. Pressed key and terminal input voltage


Input terminal	0V	1.1V	2.1V	3.1V	4.1V	5.5V
AD7	REC	Tracking AUTO/MANUAL	Tracking ▼	Channel +	ANTENNA (TV/VTR)	No key input
AD6	Quick timer	Counter Reset	INPUT SELECT	VIDEO INSERT	AUDIO INSERT	No Key input
AD5	EJECT	TIMER REC	Tracking ▲	Channel -	REC MODE (SP/EP)	No Key input
AD4	POWER		VTR mode 1	VTR mode 2		VTR mode 3
AD3	STOP	PLAY				No Key input
AD2	Shuttle ring RING 2	HIGH SPEED REWIND	PAUSE			No Key input

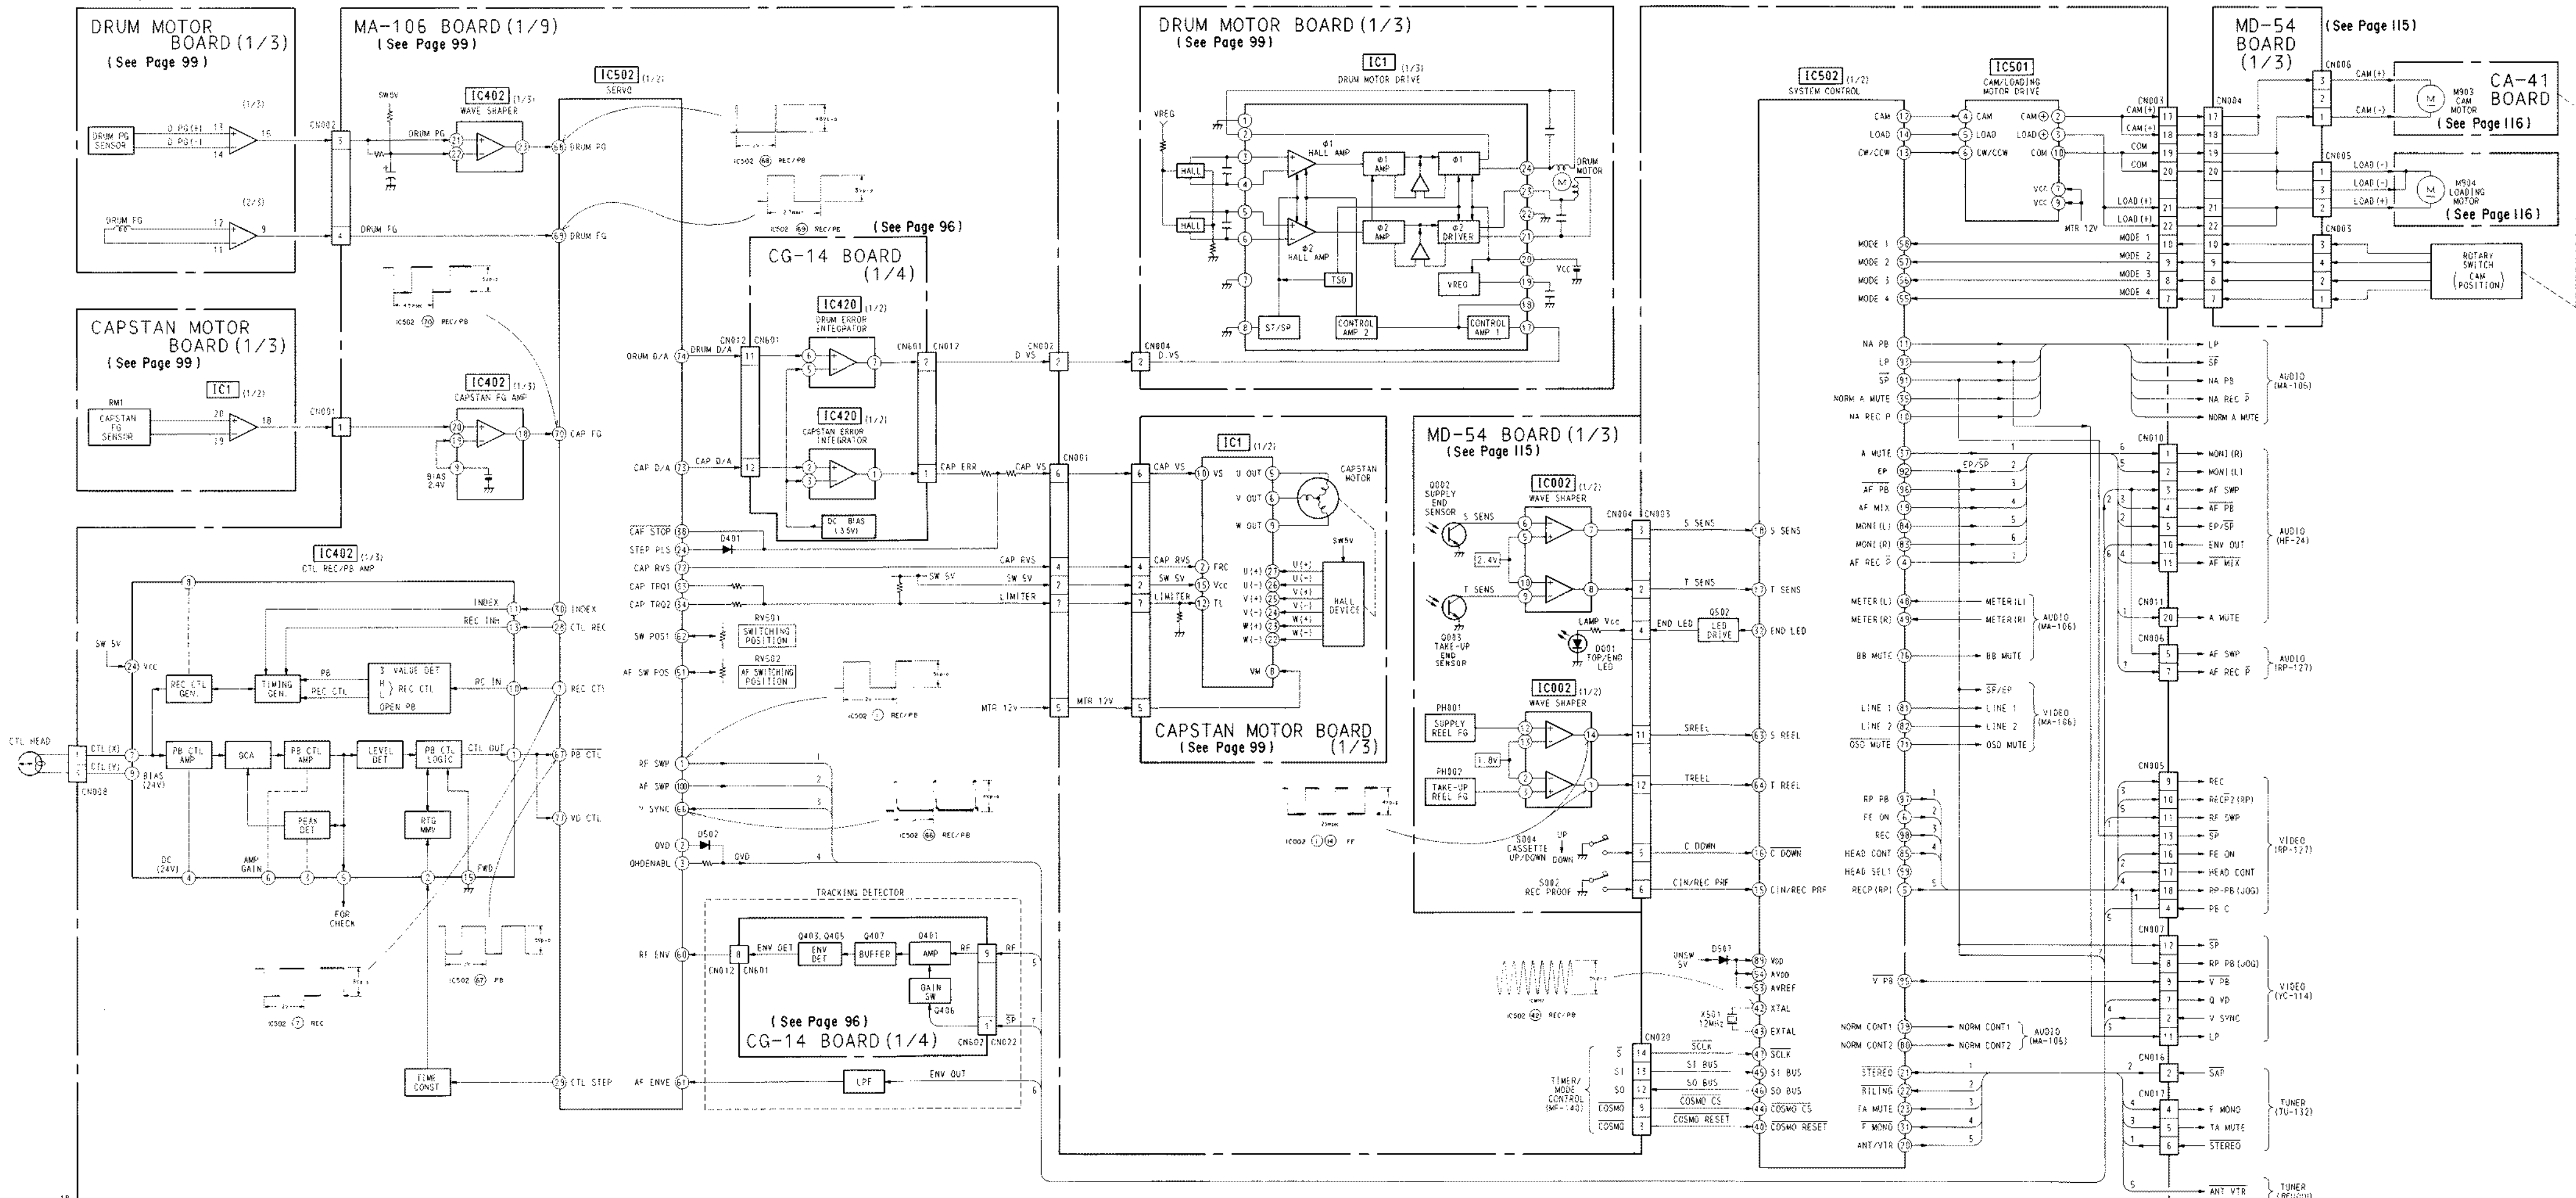


3-14. AUDIO BLOCK DIAGRAM

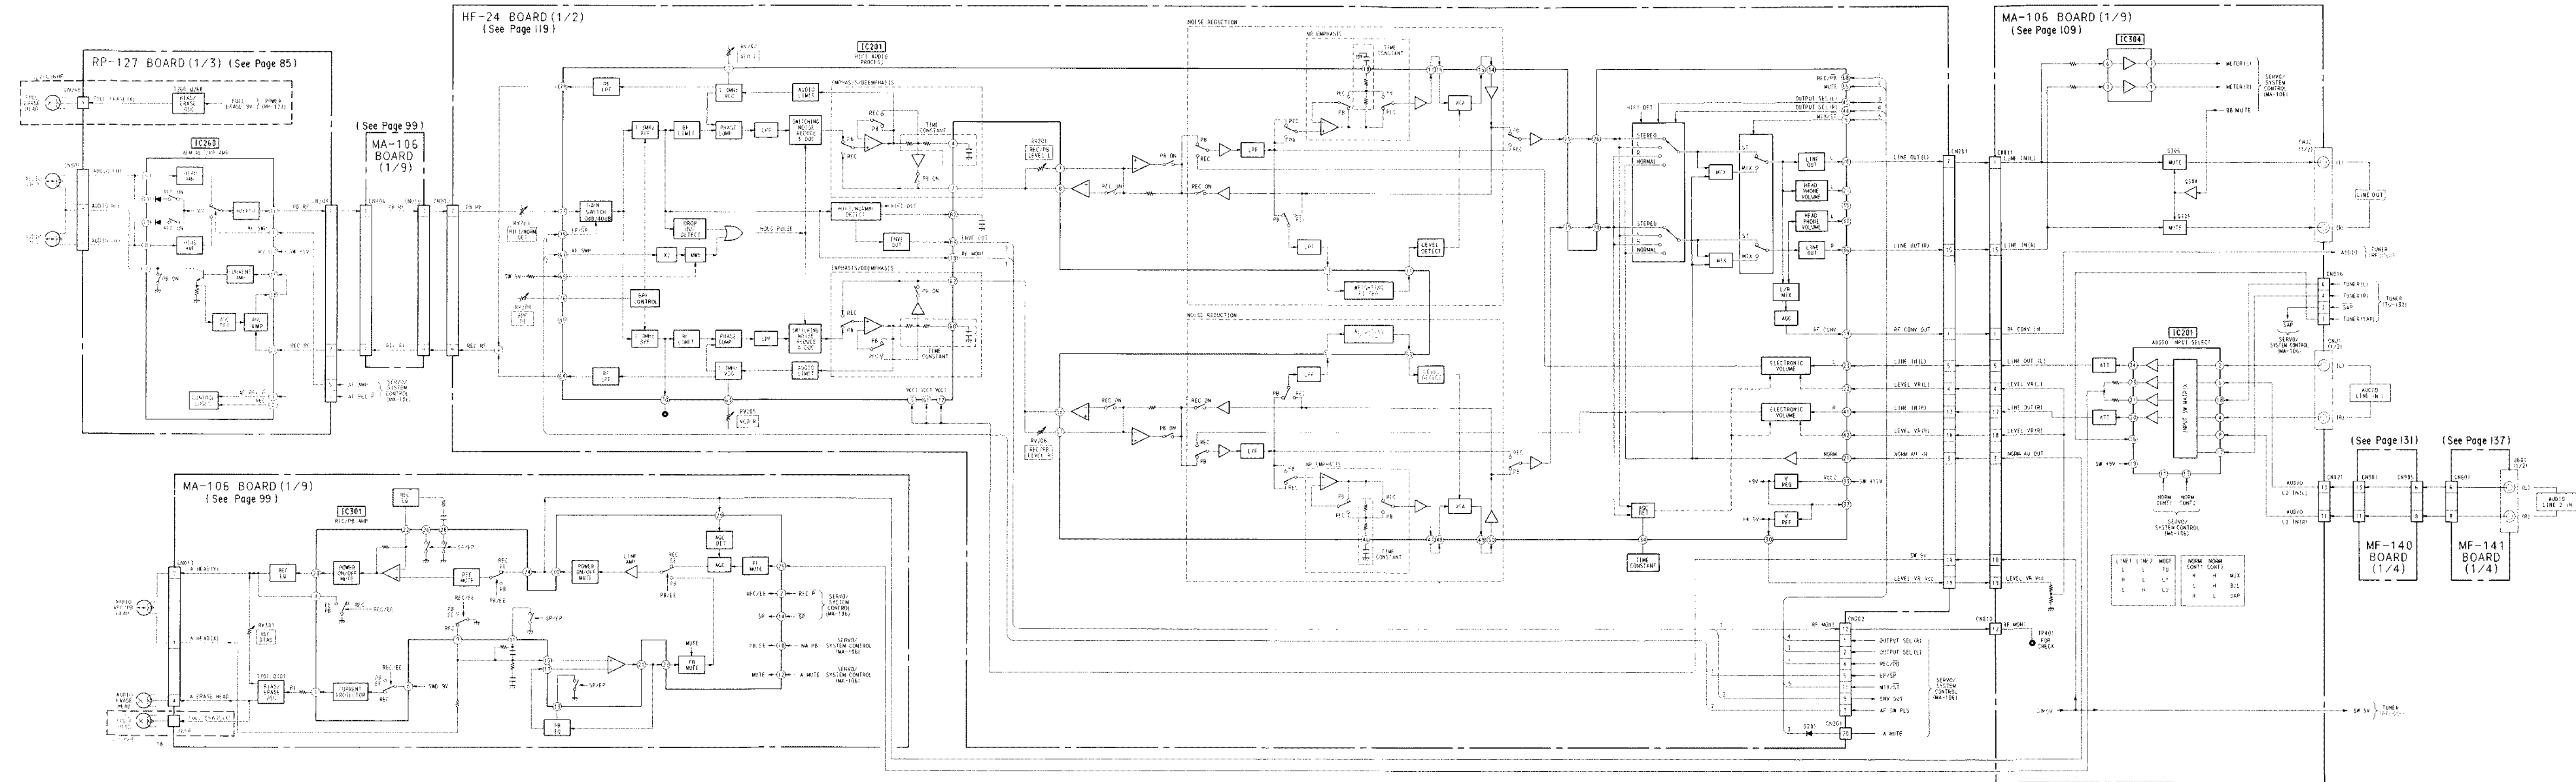


3-15. TUNER BLOCK DIAGRAM

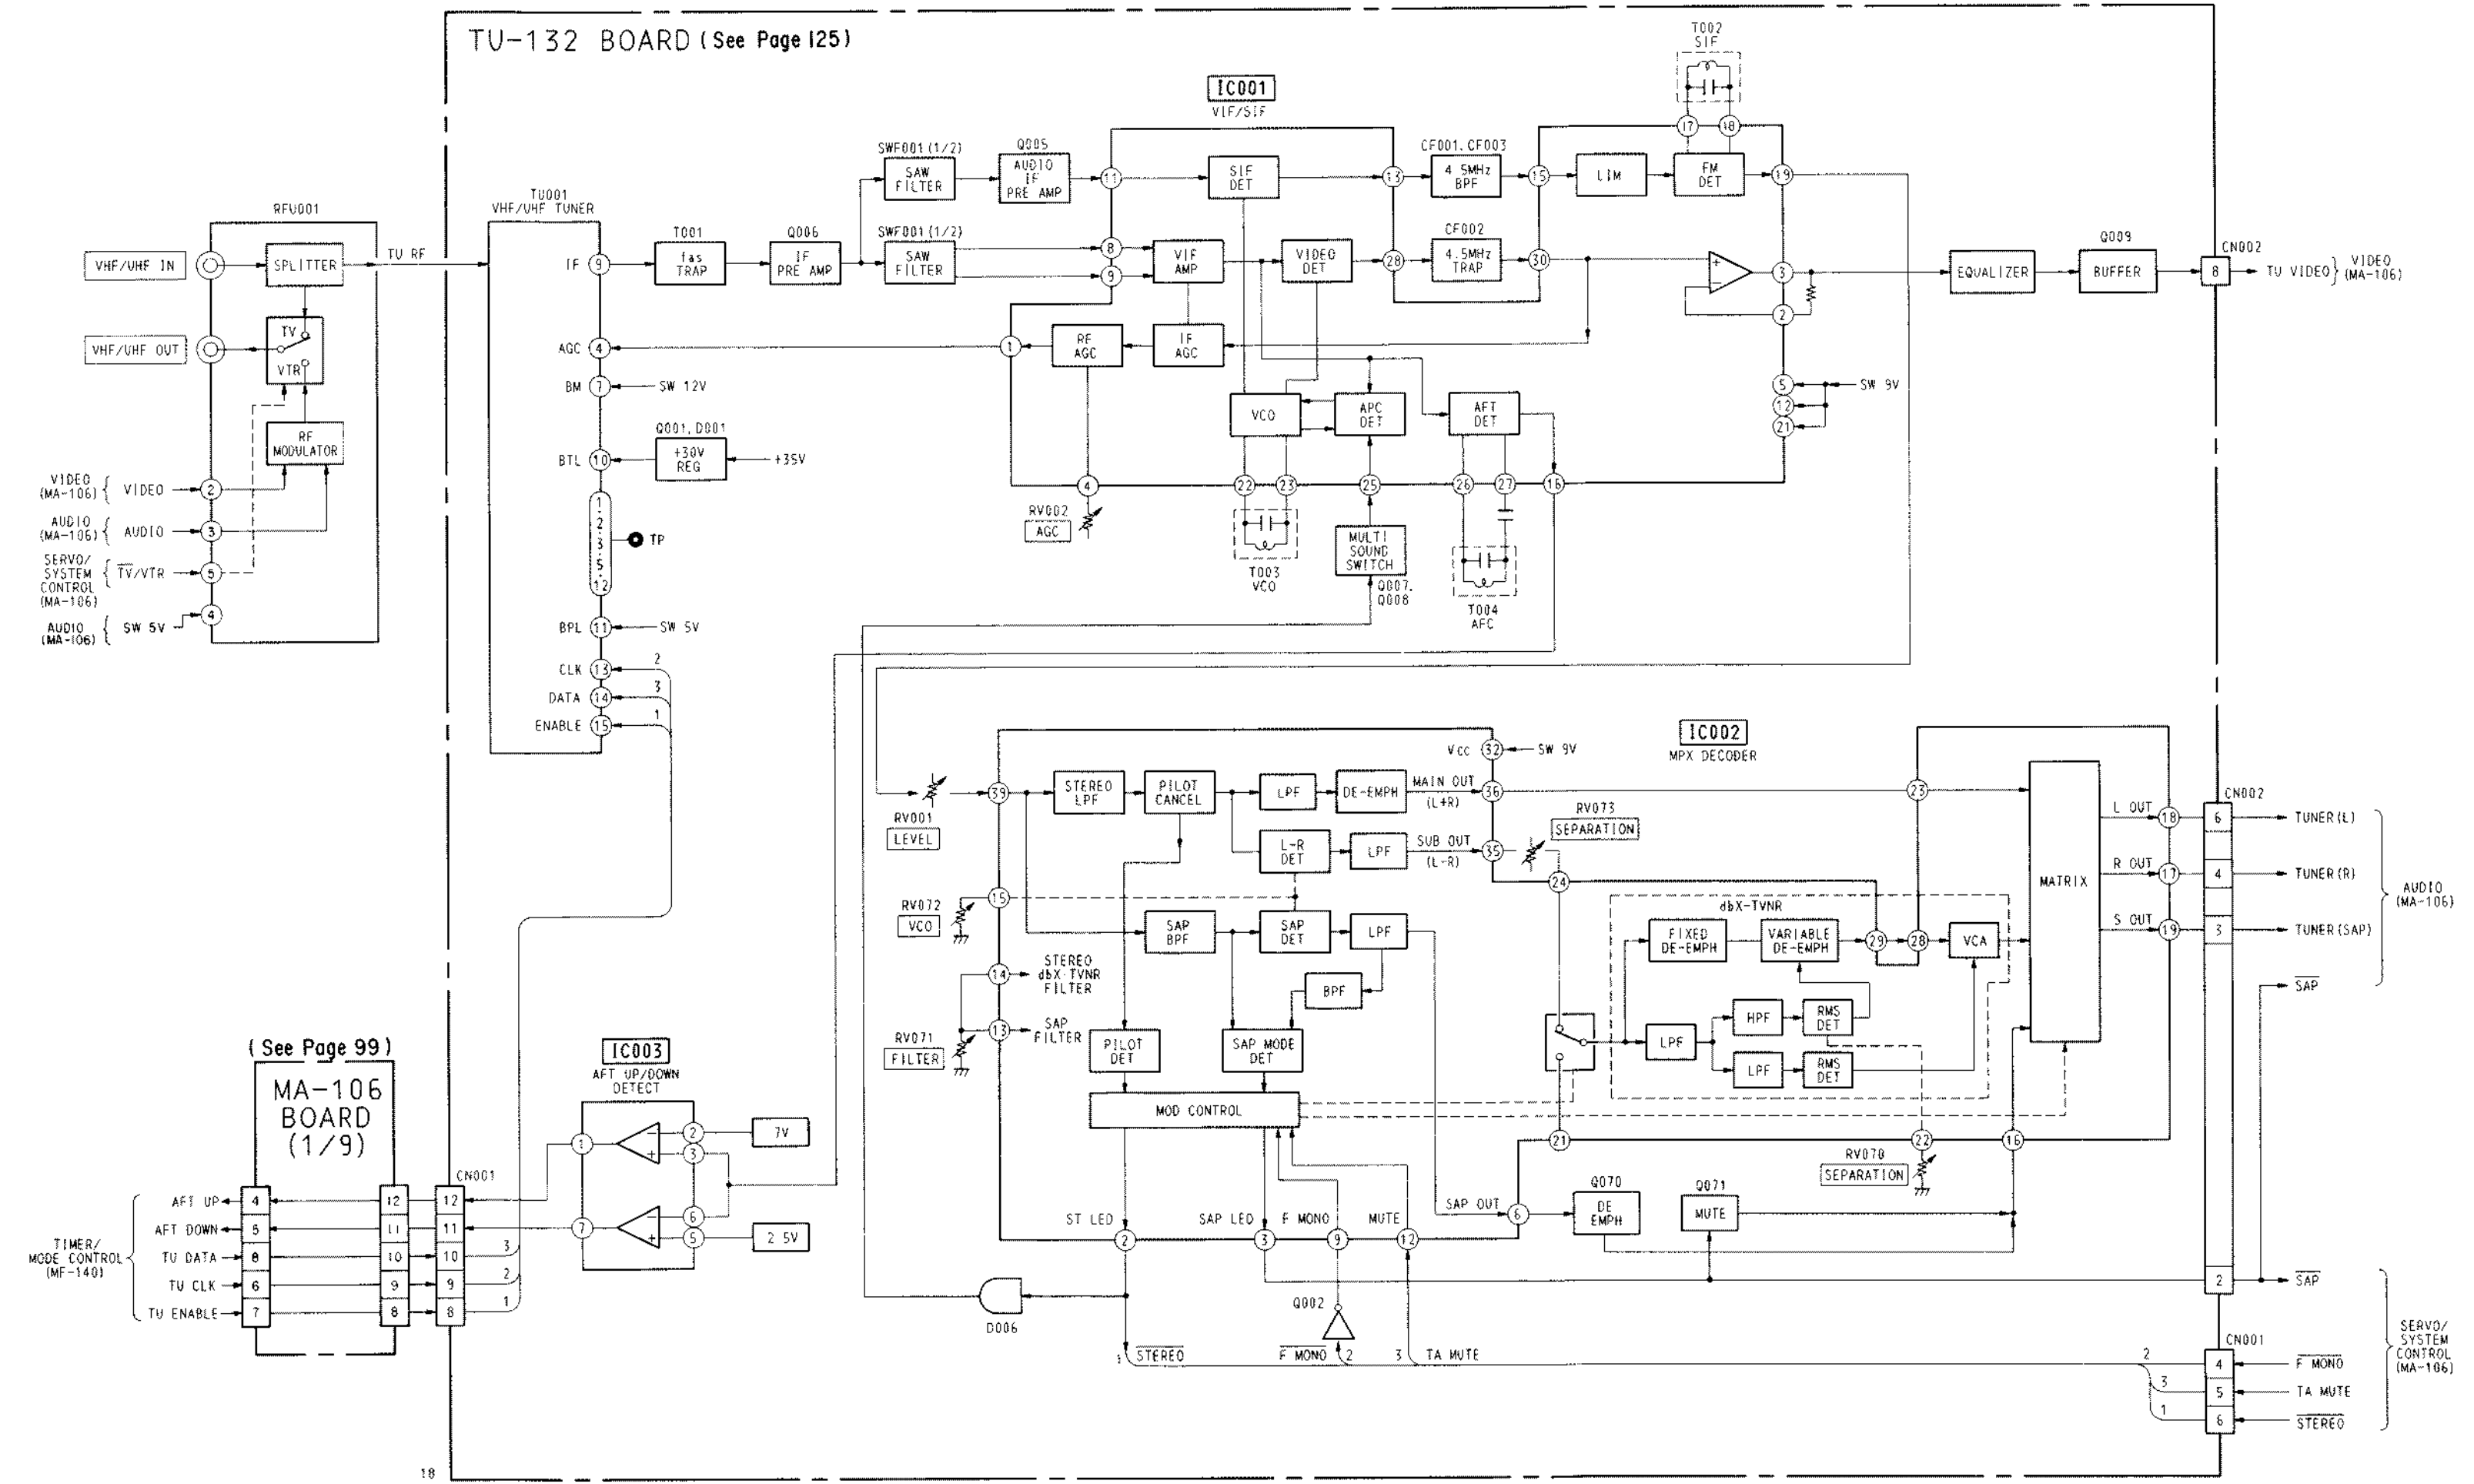

3-16. TIMER/MODE CONTROL BLOCK DIAGRAM

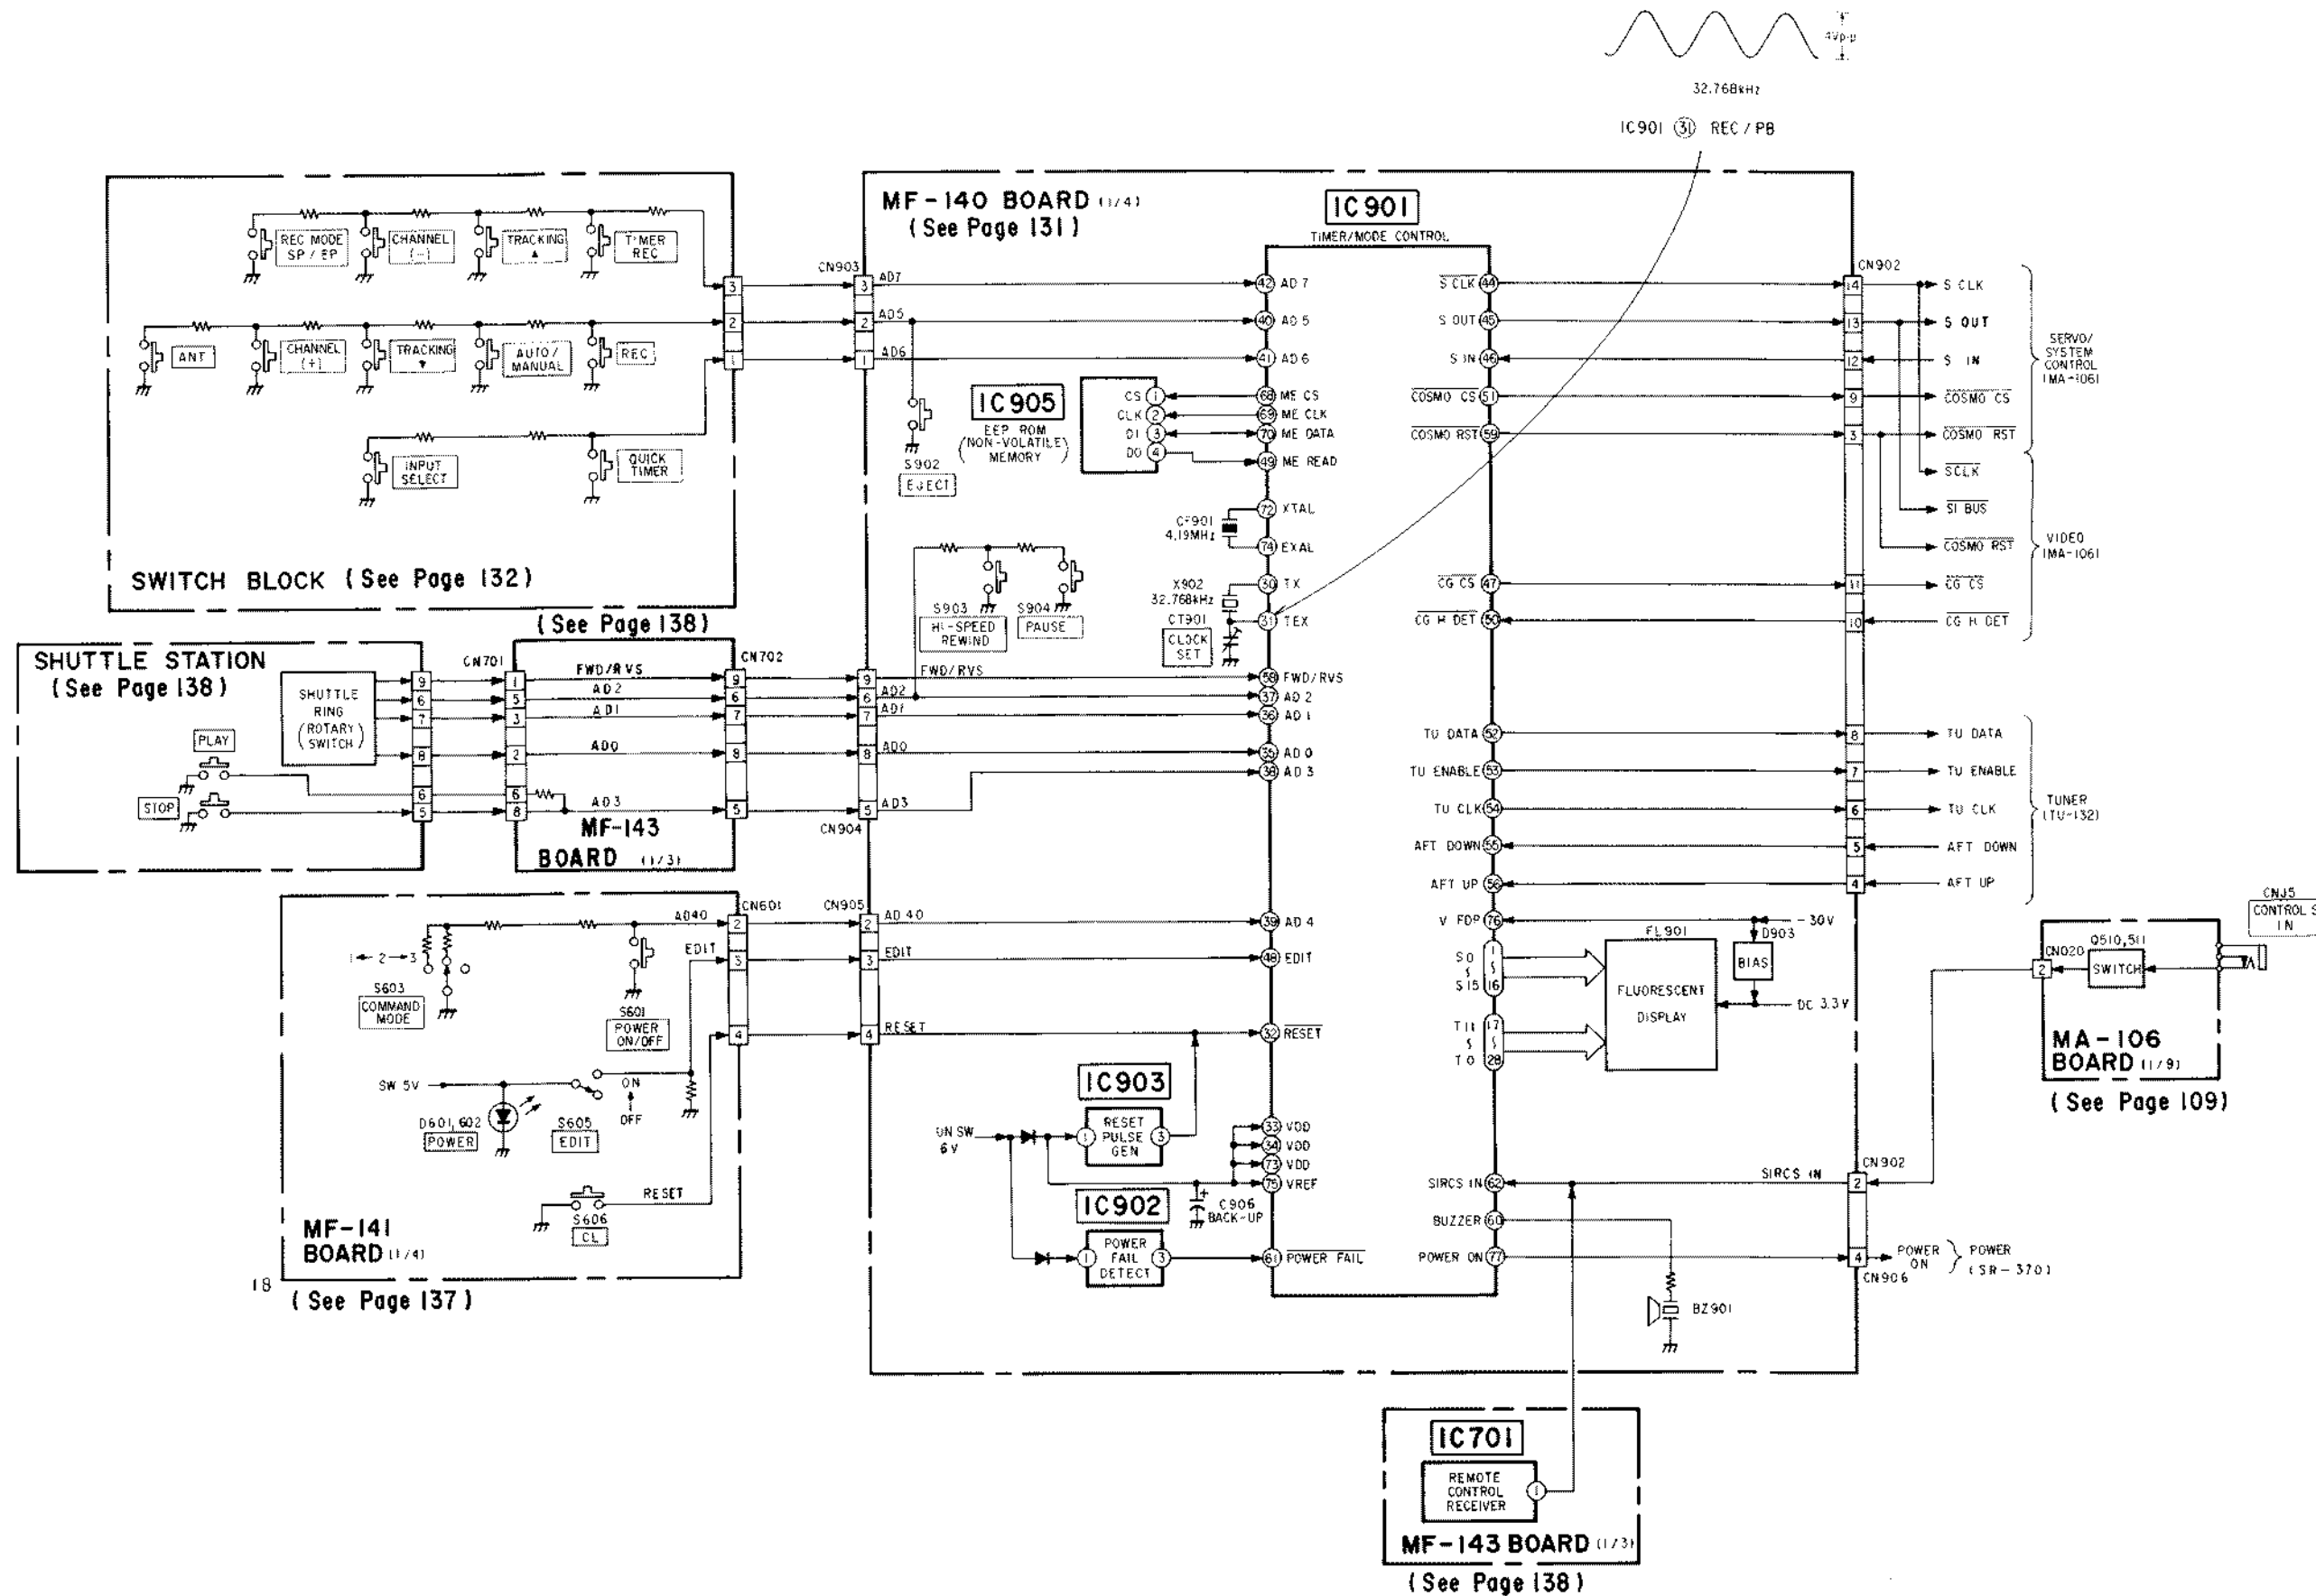


3-17. POWER BLOCK DIAGRAM

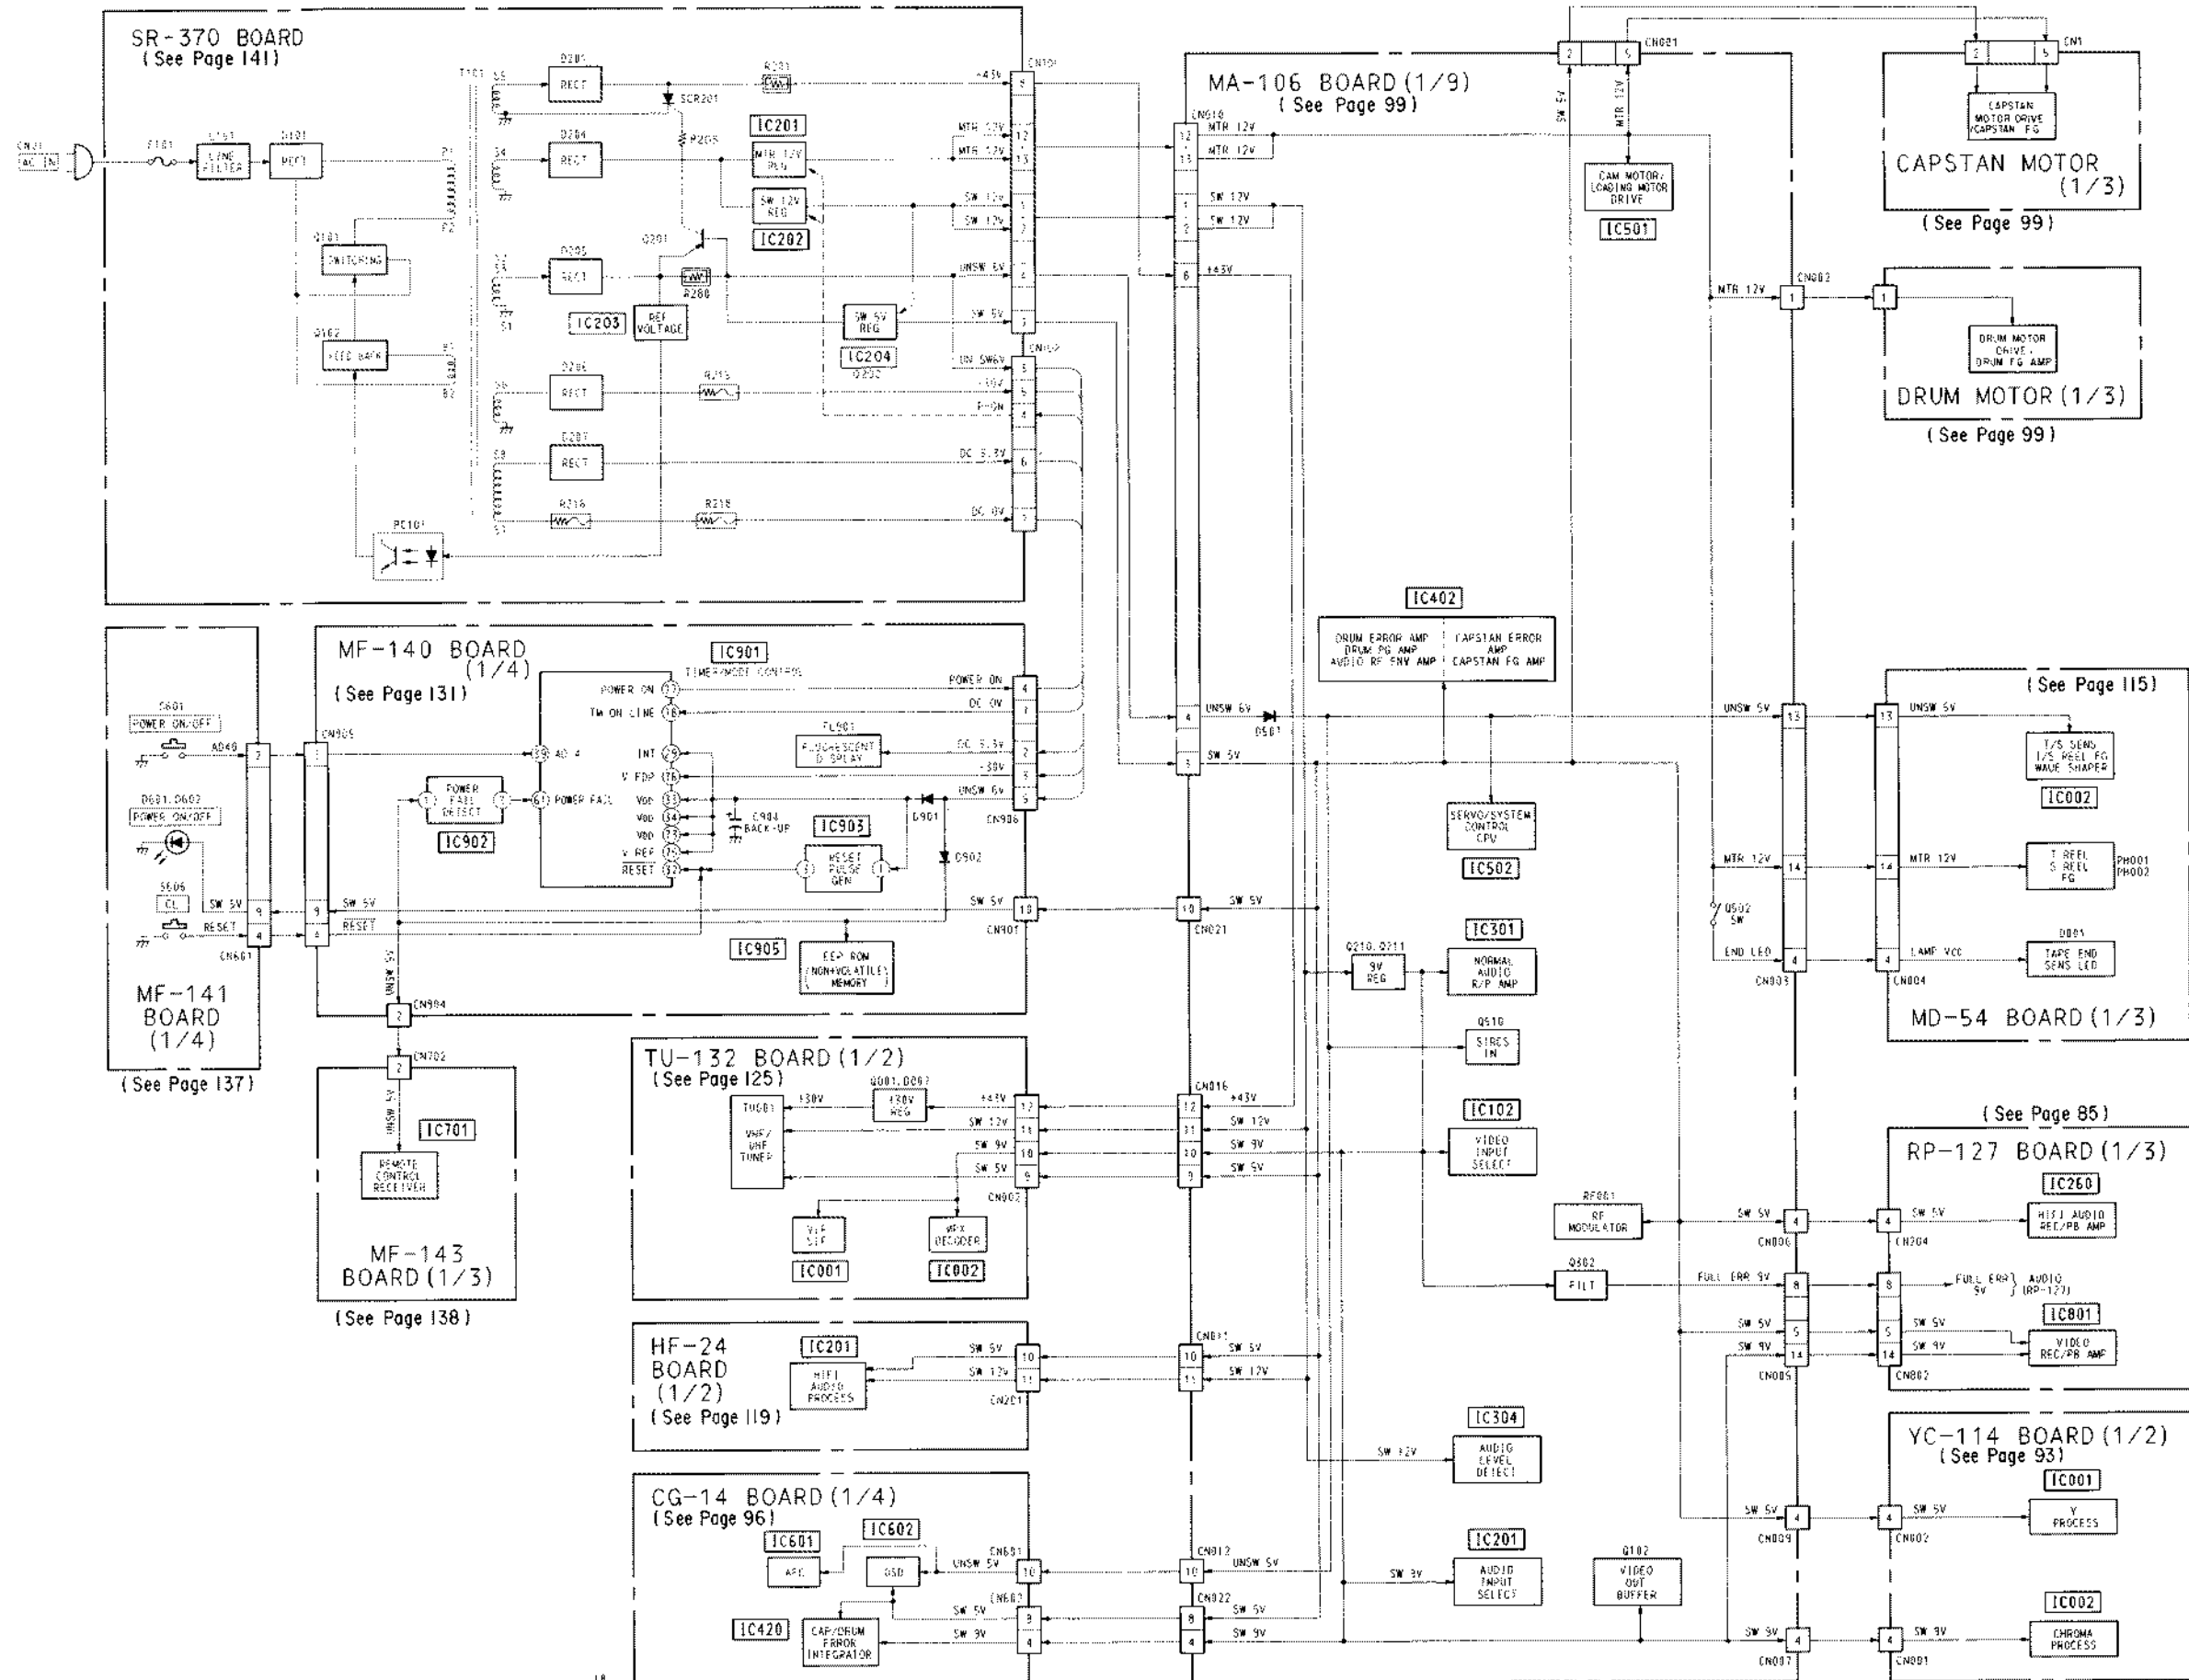

SECTION 4
PRINTED WIRING BOARDS AND SCHEMATIC DIAGRAMS

4-1. FRAME SCHEMATIC DIAGRAM

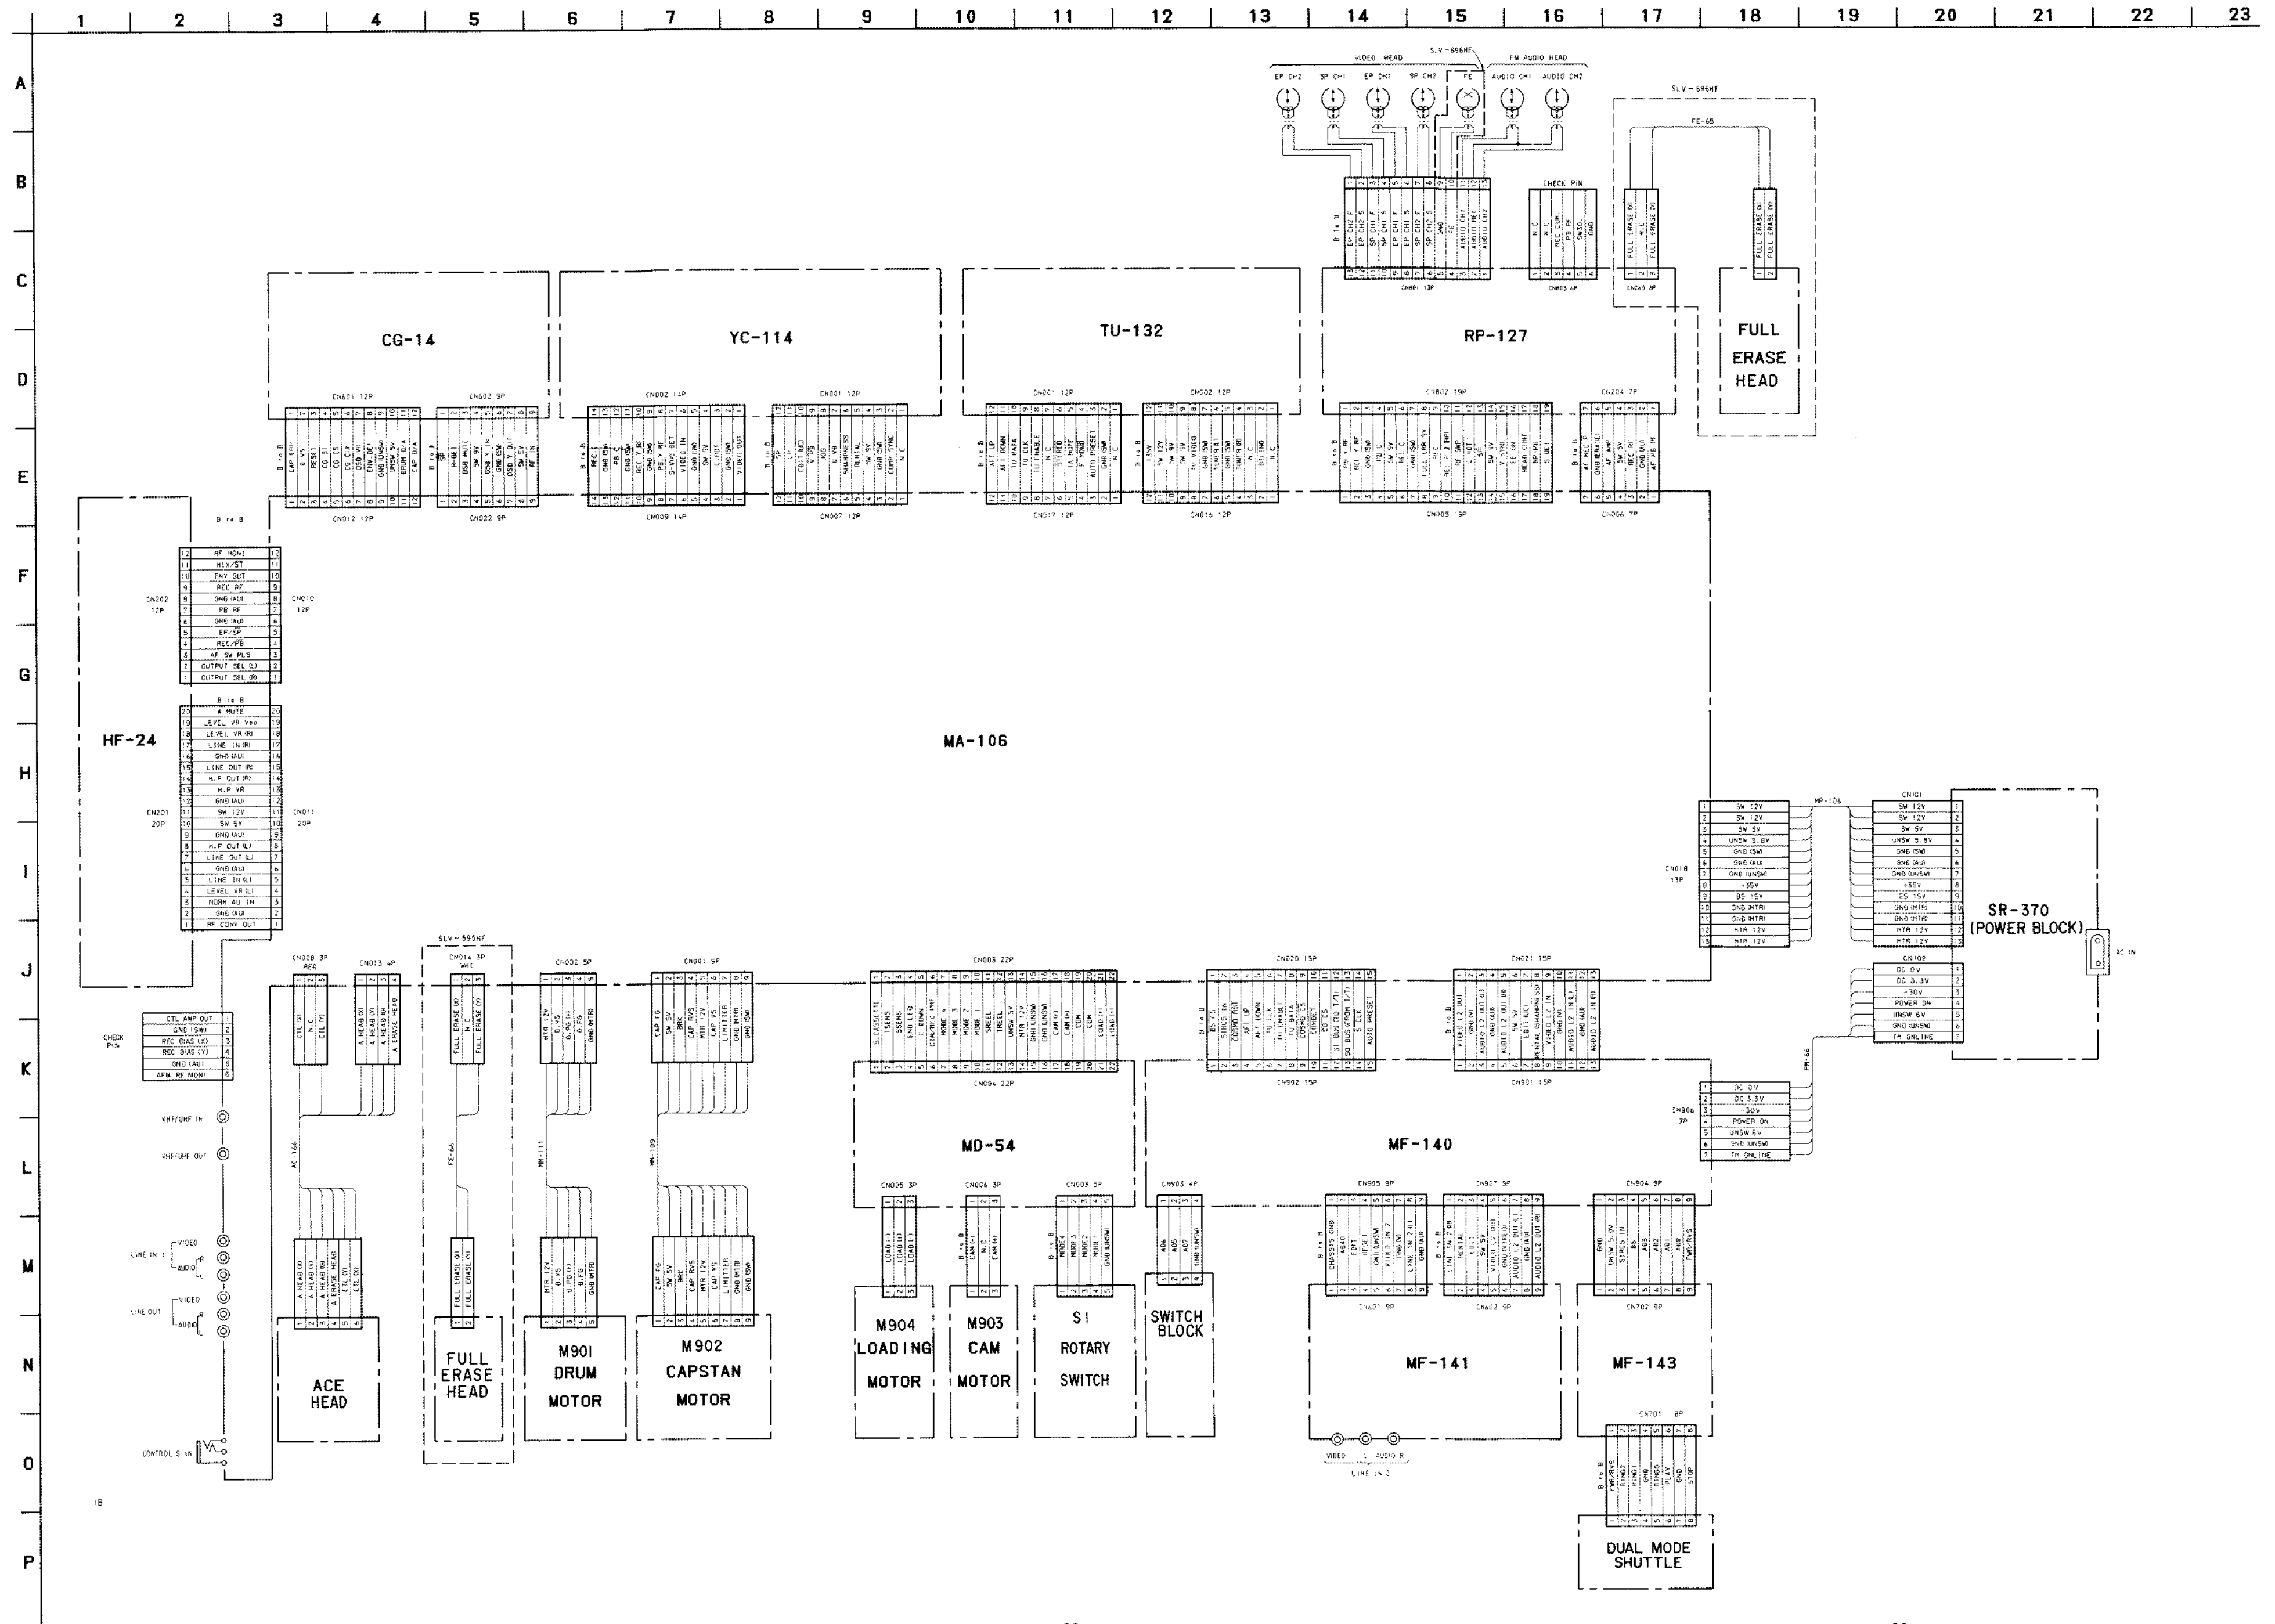

4-2. PRINTED WIRING BOARDS AND SCHEMATIC DIAGRAMS

THIS NOTE IS COMMON FOR PRINTED WIRING BOARDS AND SCHEMATIC DIAGRAMS.
(In addition to this, the necessary note is printed in each block.)

For printed wiring boards.

- : indicated a lead wire mounted on the component side.
- : indicated a lead wire mounted on the conductor side.
- : Through hole.
- : Parts mounted on the conductor side.
- : Pattern from the side which enables seeing.
- * : Pattern of the rear side
- Circled numbers refer to waveforms.

Caution:

Pattern face side: Parts on the pattern face side seen from (Conductor Side) the pattern face are indicated.
Parts face side: Parts on the parts face side seen from the (Component side) pattern face are indicated.


For schematic diagrams.

- Caution when replacing chip parts.
New parts must be attached after removal of chip.
Be careful not to heat the minus side of tantalum capacitor, because it is damaged by the heat.
- All resistors are in ohms, 1/4W unless otherwise noted.
Chip resistor are 1/10W unless otherwise noted.
kΩ : 1000Ω, MΩ : 1000kΩ.
- All capacitors are in μF unless otherwise noted. pF: μμF.
50V or less are not indicated except for electrolytics and tantalums.
- All variable and adjustable resistors have characteristic curve B, unless otherwise noted.
- : nonflammable resistor.
- : fusible resistor.
- : panel designation.
- △ : internal component.
- : adjustment for repair.
- : B+ Line.
- : B- Line.
- ⇨ : IN/OUT direction of (+, -) B LINE
- Circled numbers refer to waveforms
- Voltages are dc between ground and measurement points.
- Readings are taken with a color bar signal input
- Readings are taken with a digital multimeter (DC10MΩ).
- Voltages are taken with a VOM (input impedance 10MΩ).
- Voltage variations may be noted due to normal production tolerances.

Note:
The components identified by mark △ or dotted line with mark △ are critical for safety. Replace only with part number specified.


Note:
Les composants identifiés par une marque △ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

When indicating parts by reference number, please include the board name.

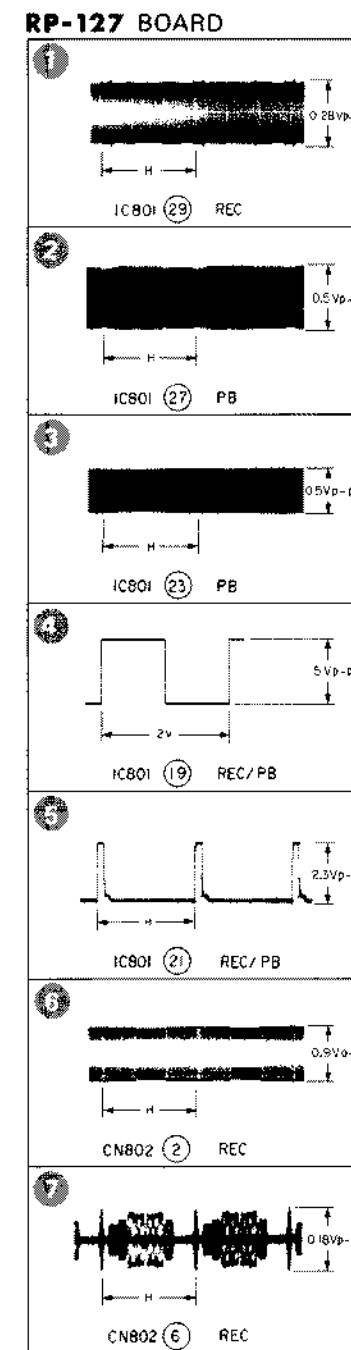

RP-127 (REC/PB HEAD AMP) SCHEMATIC DIAGRAM

-Ref. No. RP-127 BOARD: 1,000 series-

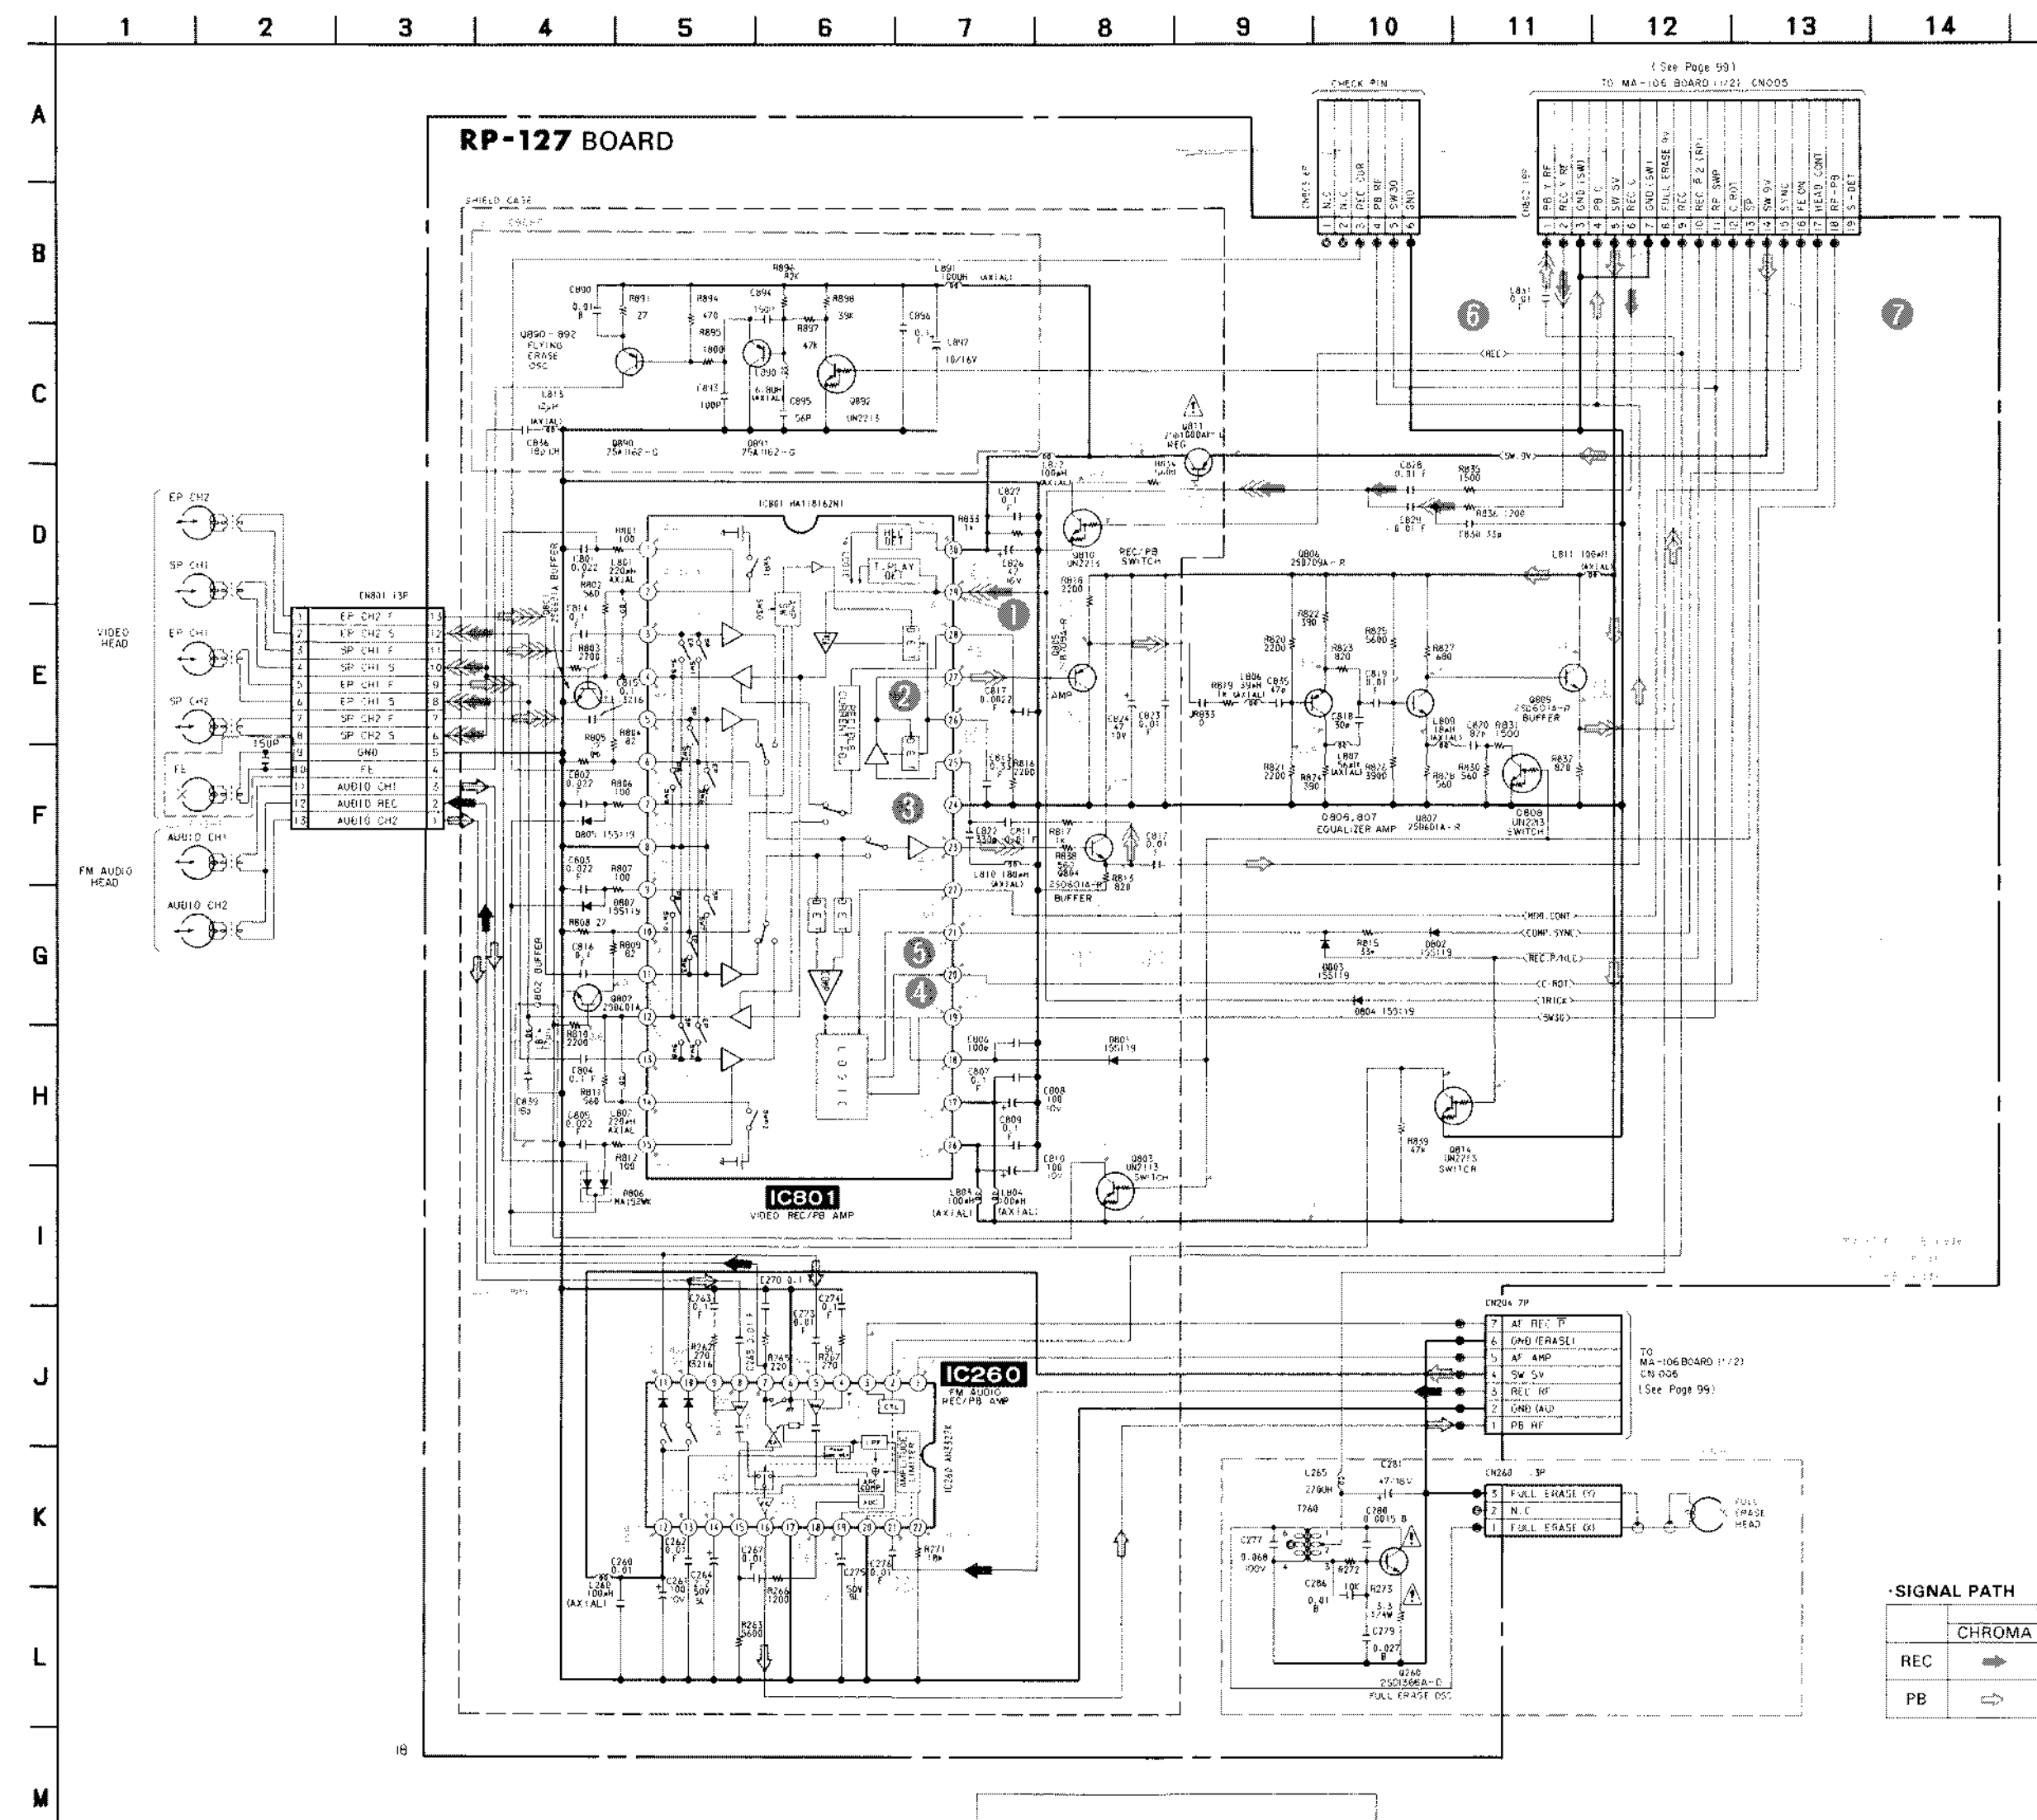

SIGNAL PATH

	CHROMA	VIDEO Signal	AUDIO Signal
REC	→	→	→
PB	→	→	→

RP-127 (REC/PB HEAD AMP) PRINTED WIRING BOARD

-Ref. No. RP-127 BOARD: 1,000 series-

RP-127 BOARD


- CN204 D-4
- CN260 A-14
- CN801 B-12
- CN802 D-3
- CN803 A-7

- D801 E-11
- D802 E-3
- D803 D-4
- D804 C-1
- D805 C-12
- D806 D-12
- D807 C-12

- IC260 B-13
- IC801 C-11

- Q260 A-14
- Q801 D-12
- Q802 D-12
- Q803 C-4
- Q804 C-10
- Q805 B-10
- Q806 B-7
- Q807 C-6
- Q808 C-6
- Q809 C-6
- Q810 A-10
- Q811 A-9
- Q814 E-4
- Q890 A-12
- Q891 A-11
- Q892 A-11

RP-127 BOARD

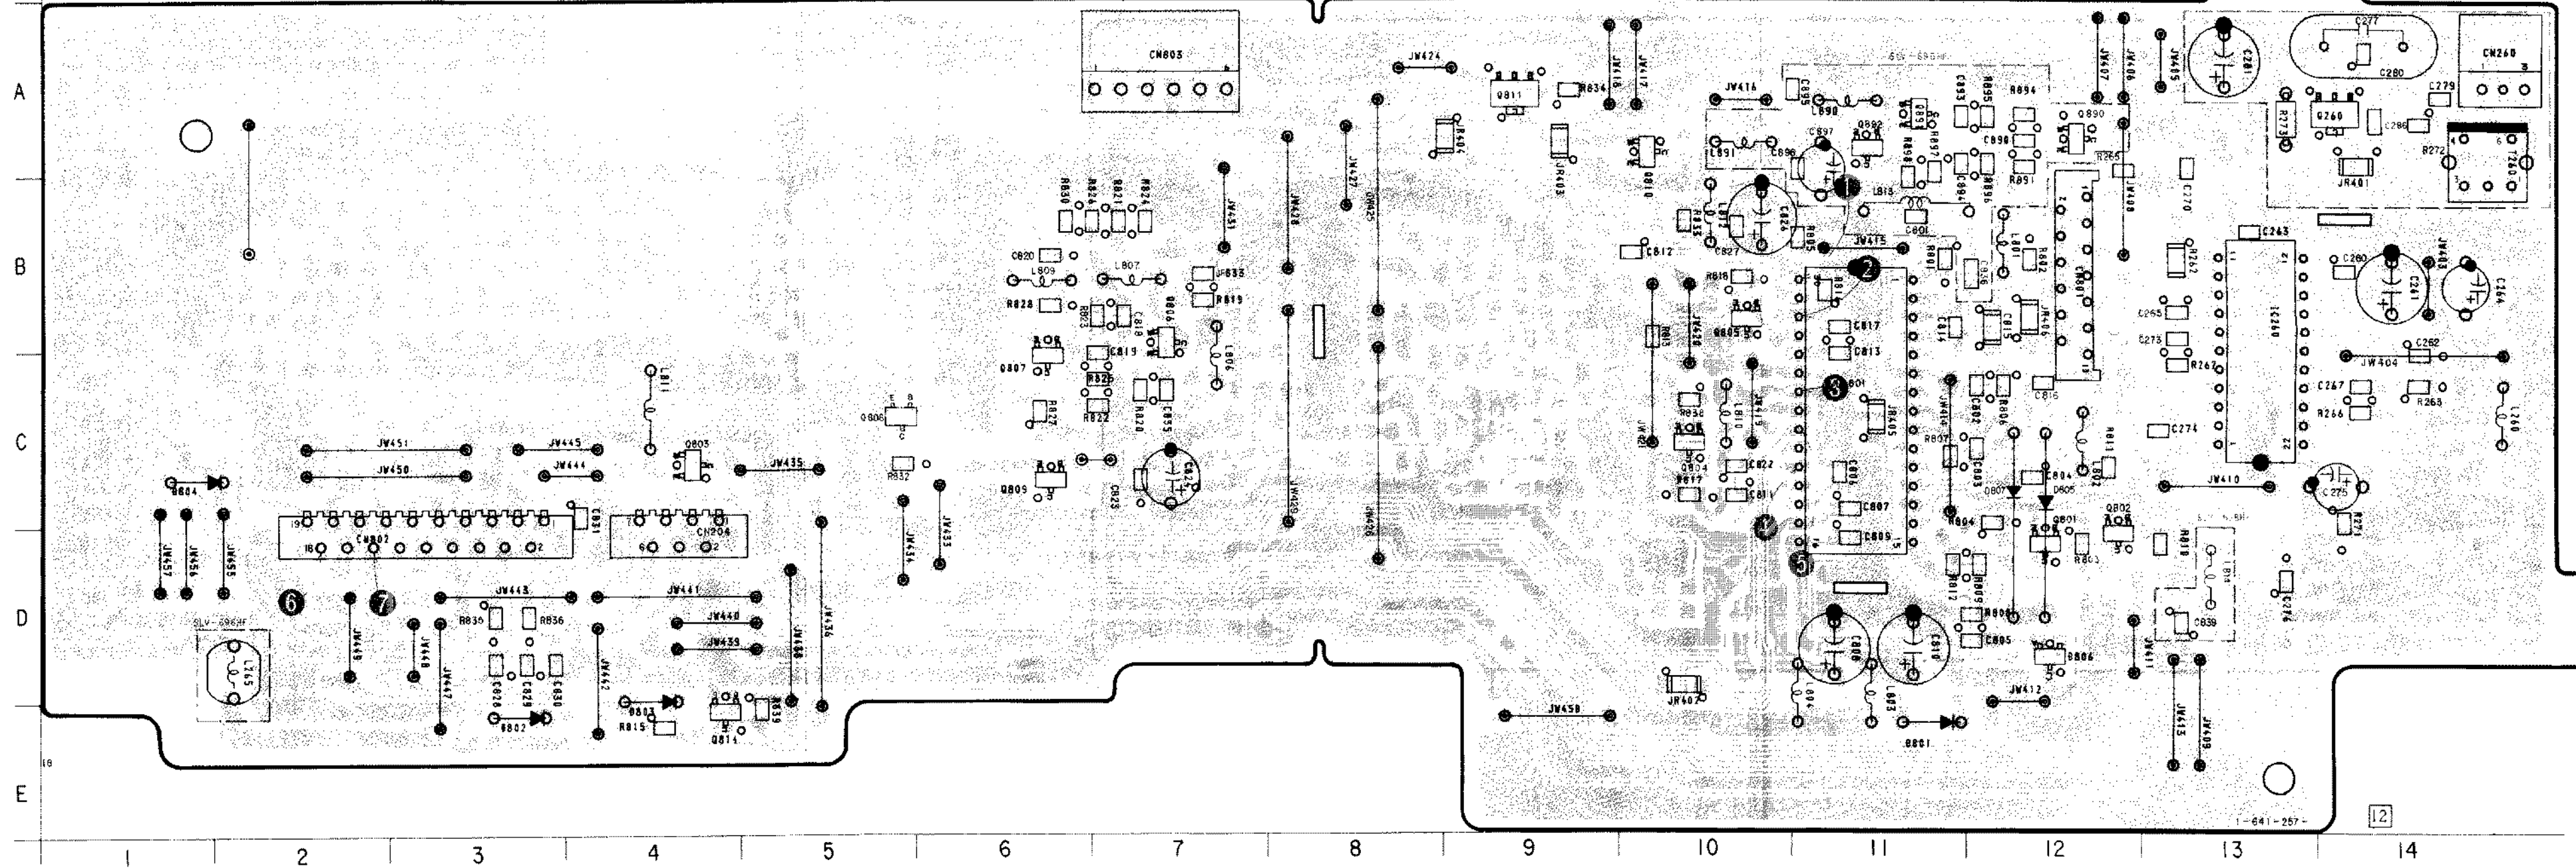

< DIODE >

D801	8-719-911-19	DIODE	1SS119
D802	8-719-911-19	DIODE	1SS119
D803	8-719-911-19	DIODE	1SS119
D804	8-719-911-19	DIODE	1SS119
D805	8-719-911-19	DIODE	1SS119
D806	8-719-400-18	DIODE	MA152WK
D807	8-719-911-19	DIODE	1SS119

< IC >

IC260	8-759-055-49	IC	AN3327X
IC801	8-759-046-75	IC	HA118152NT

< TRANSISTOR >


Q260	8-729-103-72	TRANSISTOR	2SD1005-BV	(SLV-696HF)
Q801	8-729-422-28	TRANSISTOR	2SD501A-R	
Q802	8-729-422-28	TRANSISTOR	2SD601A-R	
Q803	8-729-424-18	TRANSISTOR	UN2113	
Q804	8-729-422-28	TRANSISTOR	2SD601A-R	
Q805	8-729-422-37	TRANSISTOR	2SB709A-R	
Q806	8-729-422-37	TRANSISTOR	2SB709A-R	
Q807	8-729-422-28	TRANSISTOR	2SD601A-R	
Q808	8-729-421-19	TRANSISTOR	UN2213	
Q809	8-729-422-28	TRANSISTOR	2SD601A-R	

Q810	8-729-421-19	TRANSISTOR	UN2213	
Q811	8-729-301-98	TRANSISTOR	2SB1000A-L	
Q814	8-729-421-19	TRANSISTOR	UN2213	
Q890	8-729-216-22	TRANSISTOR	2SA1162-G	(SLV-696HF)
Q891	8-729-216-22	TRANSISTOR	2SA1162-G	(SLV-696HF)
Q892	8-729-421-19	TRANSISTOR	UN2213	(SLV-696HF)

YC-114 (VIDEO PROCESS) CG-14 (DATA SCREEN) PRINTED WIRING BOARDS

—Ref. No. YC-114 BOARD: 1,000 series, CG-14 BOARD: 3,000 series—

YC-114 BOARD

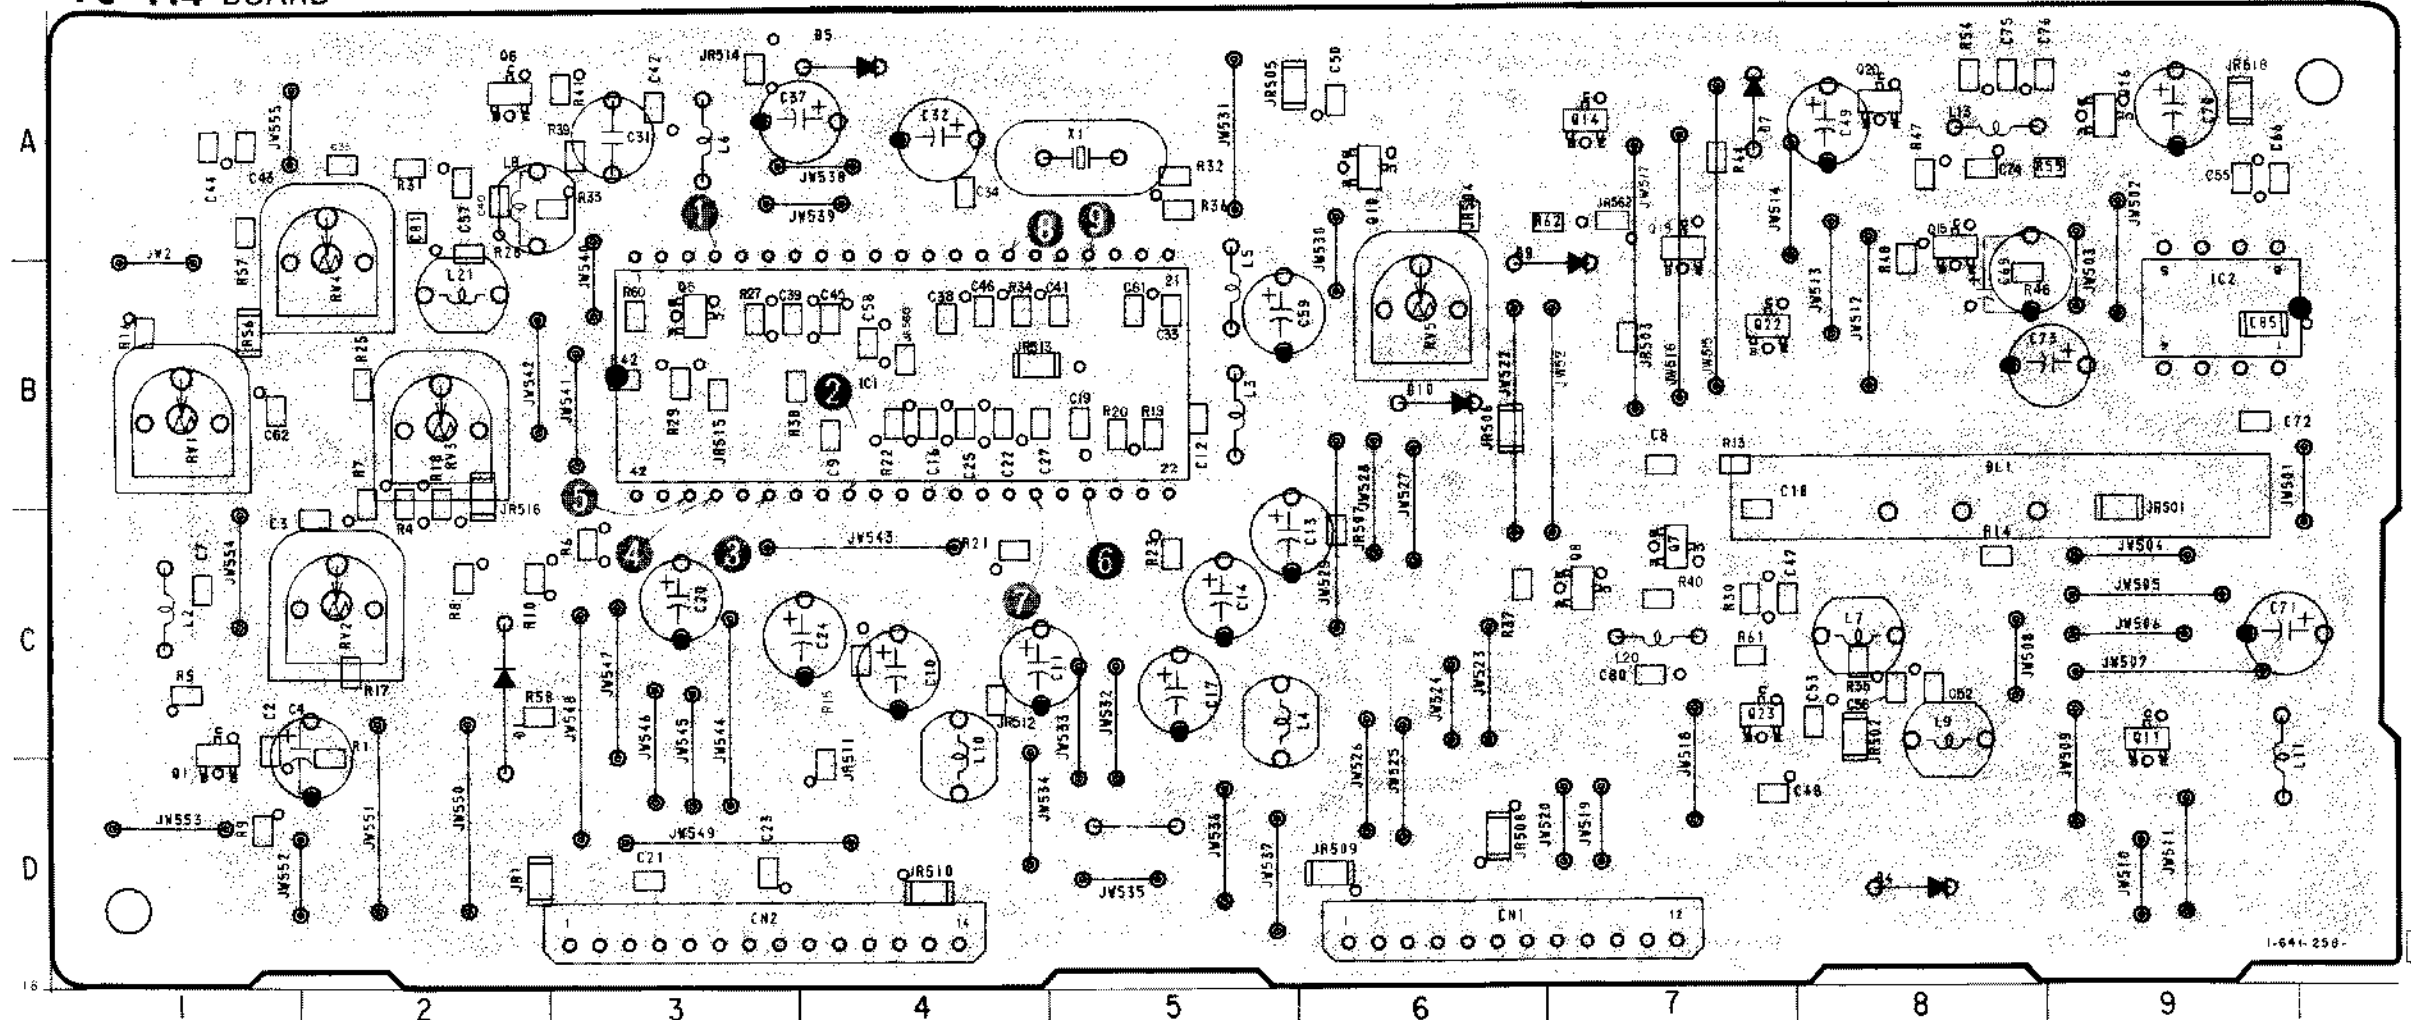

YC-114 BOARD

- CN001 D-6
- CN002 D-3
- D001 C-2
- D004 D-8
- D005 A-4
- D007 A-7
- D009 B-7
- D010 B-6
- IC001 B-4
- IC002 B-9

< DIODE >		< TRANSISTOR >	
D001	8-719-911-19 DIODE	1SS119	Q001 8-729-422-27 TRANSISTOR
D004	8-719-911-19 DIODE	1SS119	Q005 8-729-422-36 TRANSISTOR
D005	8-719-911-19 DIODE	1SS119	Q008 8-729-422-36 TRANSISTOR
D007	8-719-911-19 DIODE	1SS119	Q007 8-729-422-27 TRANSISTOR
D009	8-719-911-19 DIODE	1SS119	Q008 8-729-422-36 TRANSISTOR
D010	8-719-911-19 DIODE	1SS119	Q010 8-729-421-19 TRANSISTOR
			Q011 8-729-424-56 TRANSISTOR
			Q014 8-729-424-46 TRANSISTOR
			Q015 8-729-423-19 TRANSISTOR
			Q016 8-729-422-27 TRANSISTOR
			Q018 8-729-421-19 TRANSISTOR
			Q020 8-729-422-36 TRANSISTOR
			Q022 8-729-421-19 TRANSISTOR
			Q023 8-729-421-19 TRANSISTOR


CG-14 BOARD

- CN601 B-5
- CN602 D-5
- D420 B-4
- D490 B-3
- D491 A-2
- D603 E-5
- D604 D-3
- IC420 B-5
- IC601 B-1
- IC602 E-2
- Q401 A-3
- Q403 B-2
- Q405 A-2
- Q406 B-4
- Q407 B-3
- Q603 D-3
- Q604 D-3
- Q605 D-3
- Q606 D-4
- Q607 D-5

CG-14 BOARD

- Q001 D-1
- Q005 B-3
- Q006 A-2
- Q007 C-7
- Q008 C-7
- Q010 A-6
- Q011 C-9
- Q014 A-7
- Q015 A-8
- Q016 A-9
- Q018 A-7
- Q020 A-8
- Q022 B-7
- Q023 C-7
- RV001 B-1
- RV002 C-2
- RV003 B-2
- RV004 A-2
- RV005 B-6


CG-14 BOARD

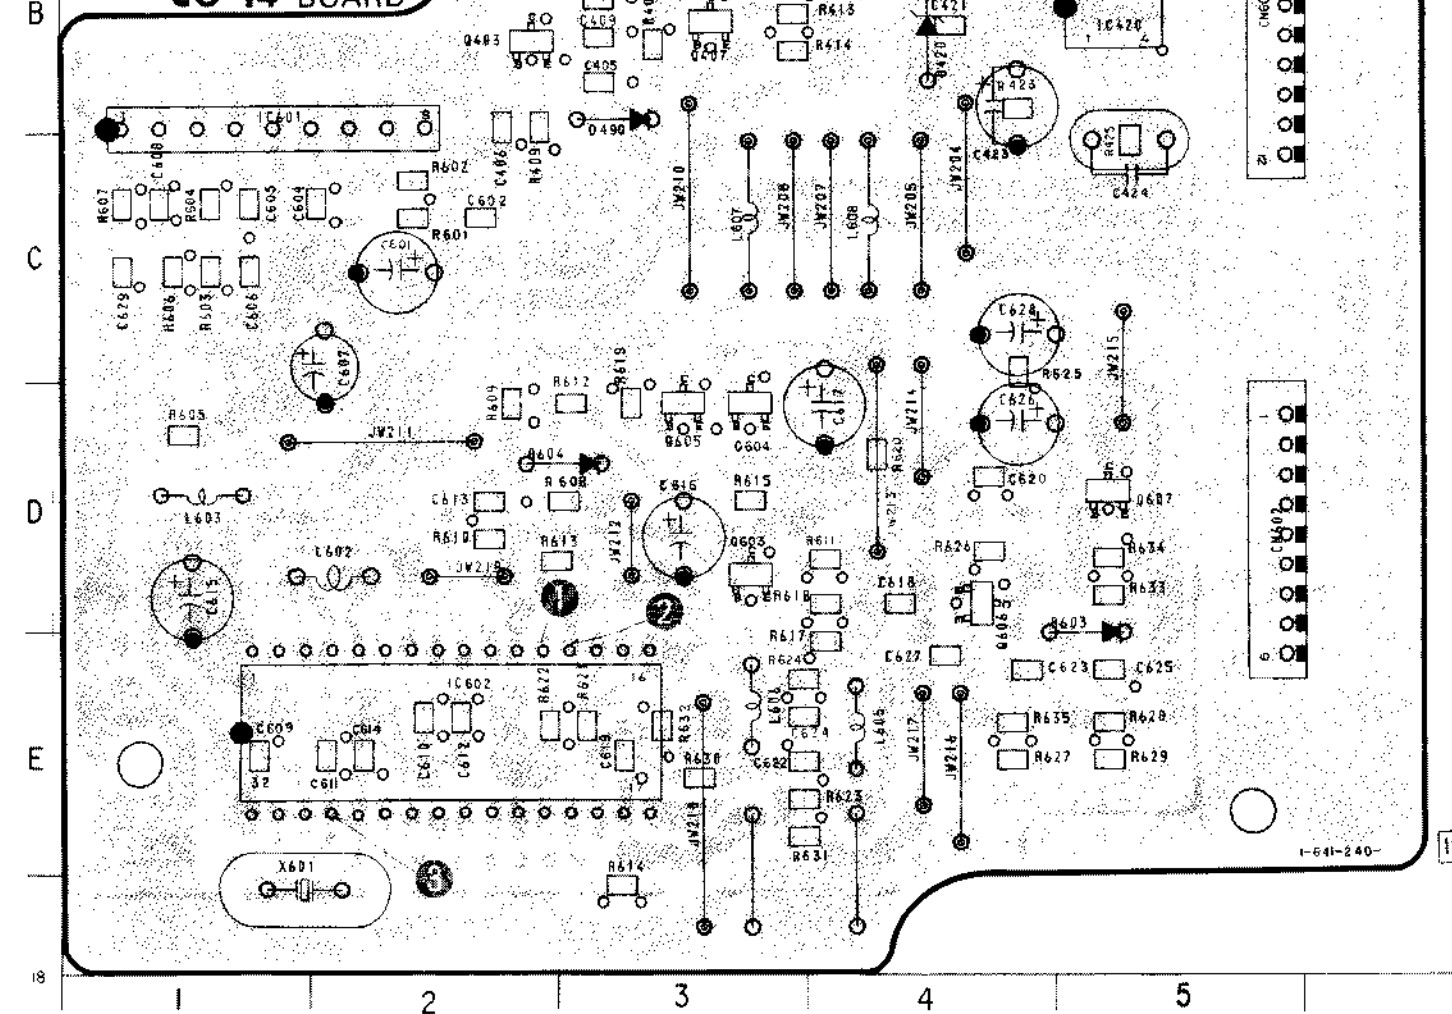


< DIODE >		< TRANSISTOR >	
D420	8-719-101-43 DIODE	RO4.3E-L2	Q401 8-729-422-28 TRANSISTOR
D490	8-719-911-19 DIODE	1SS119	Q403 8-729-422-28 TRANSISTOR
D491	8-719-911-19 DIODE	1SS119	Q405 8-729-422-37 TRANSISTOR
D603	8-719-911-19 DIODE	1SS119	Q406 8-729-421-19 TRANSISTOR
D604	8-719-911-19 DIODE	1SS119	Q407 8-729-422-28 TRANSISTOR
			Q603 8-729-422-37 TRANSISTOR
			Q604 8-729-424-18 TRANSISTOR
			Q605 8-729-422-28 TRANSISTOR
			Q606 8-729-422-37 TRANSISTOR
			Q607 8-729-422-28 TRANSISTOR

YC-114 (VIDEO PROCESS) CG-14 (DATA SCREEN) SCHEMATIC DIAGRAMS


— Ref. No. YC-114 BOARD: L000 series; CG-14 BOARD: 3,000 series —

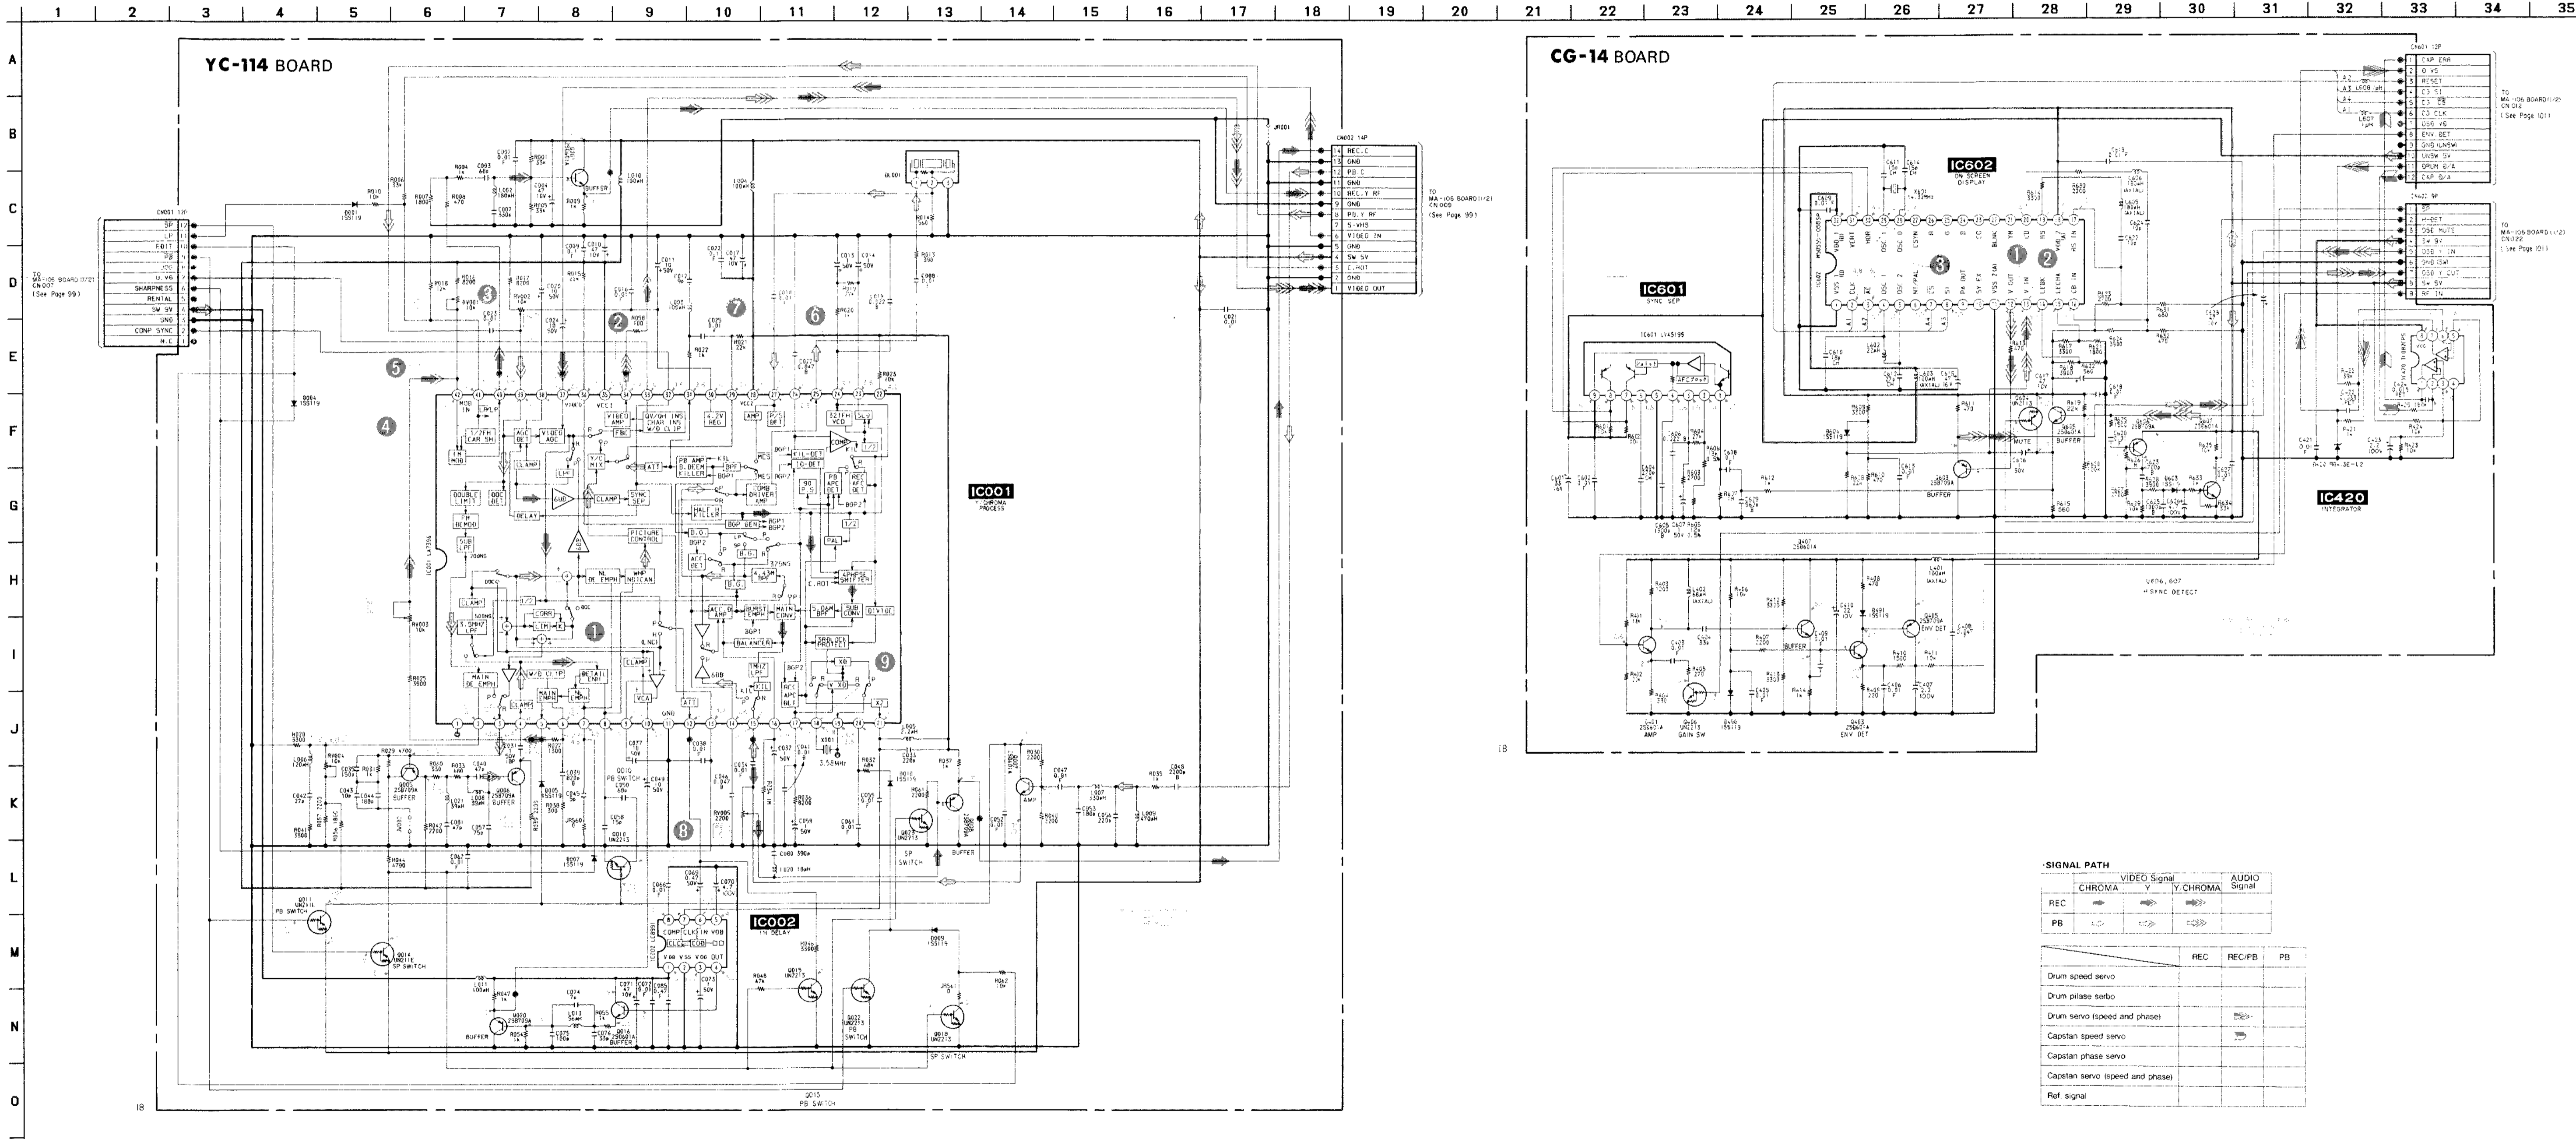

YC-114 BOARD


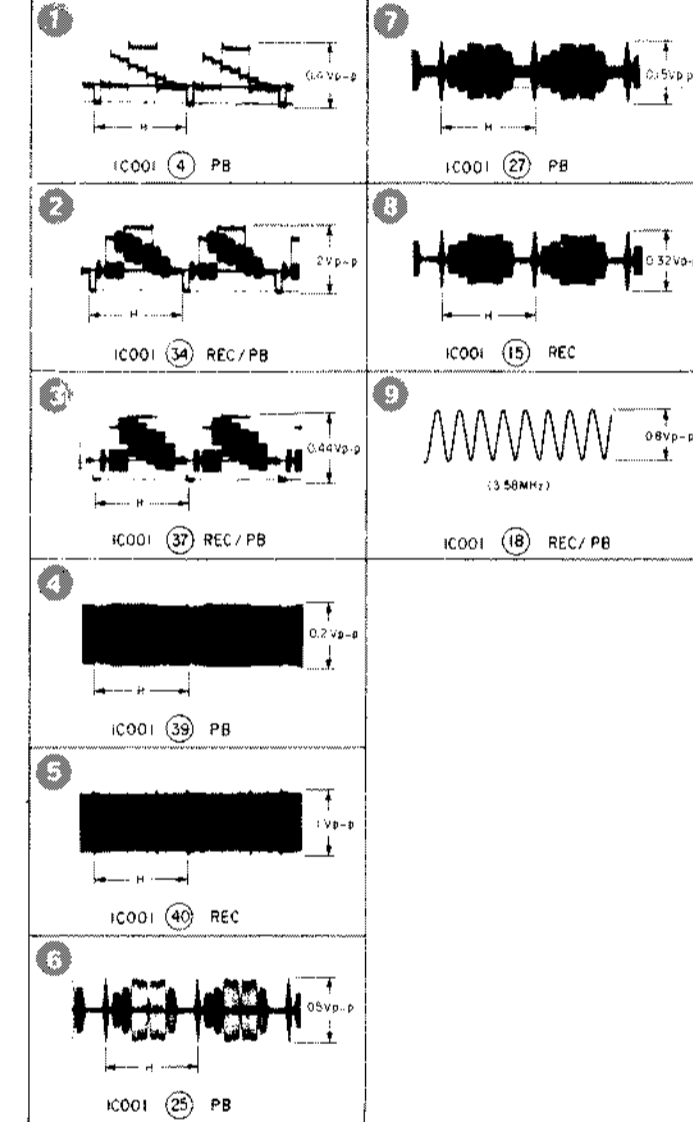


CG-14 BOARD

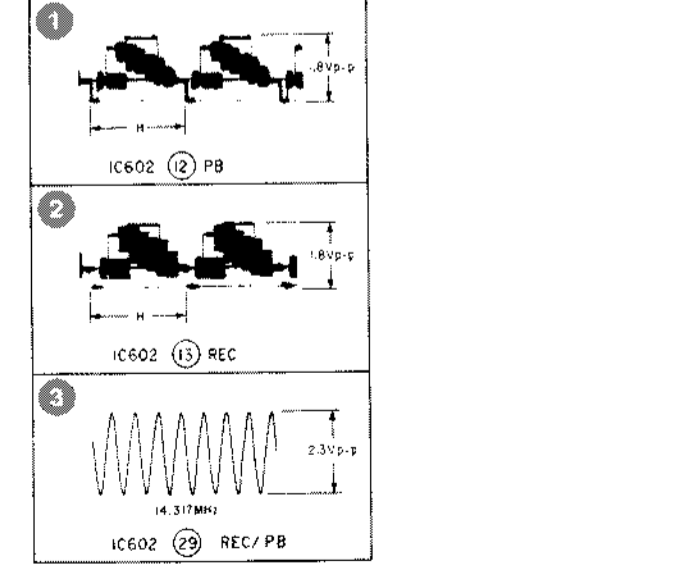

SIGNAL PATH

	CHROMA	VIDEO Signal	Y, CHROMA	AUDIO Signal
REC	→	→	→	→
PB	→	→	→	→
Drum speed servo				→
Drum phase servo				→
Drum servo (speed and phase)				→
Capstan speed servo				→
Capstan phase servo				→
Capstan servo (speed and phase)				→
Ref. signal				→

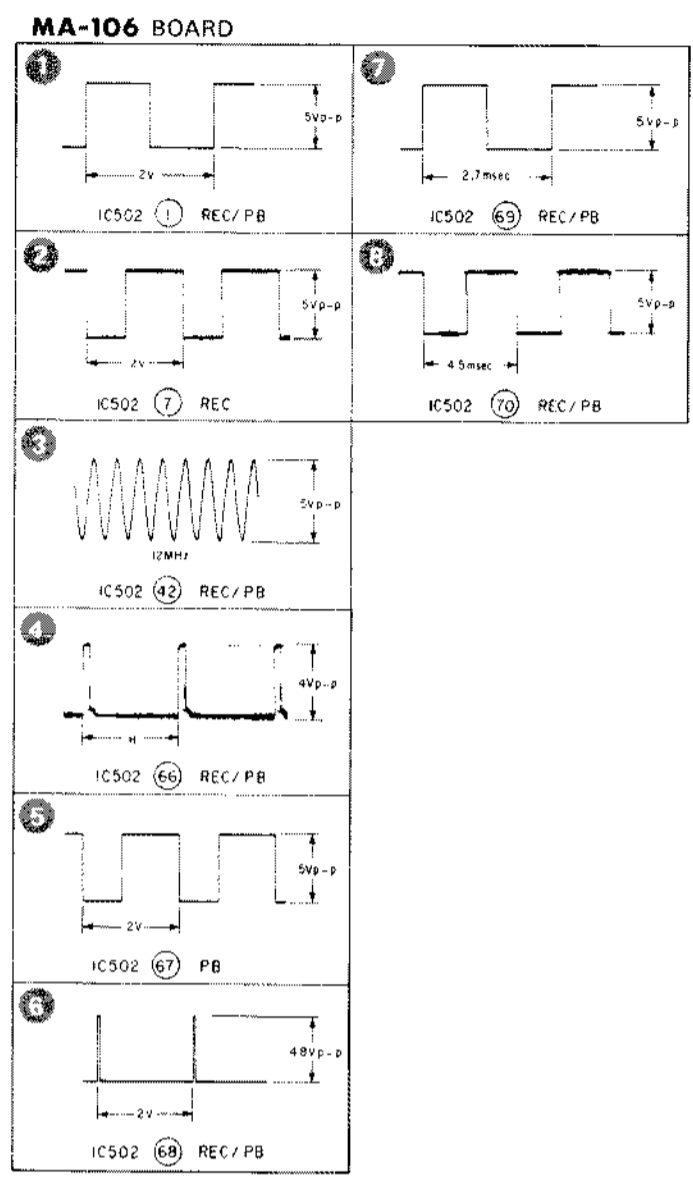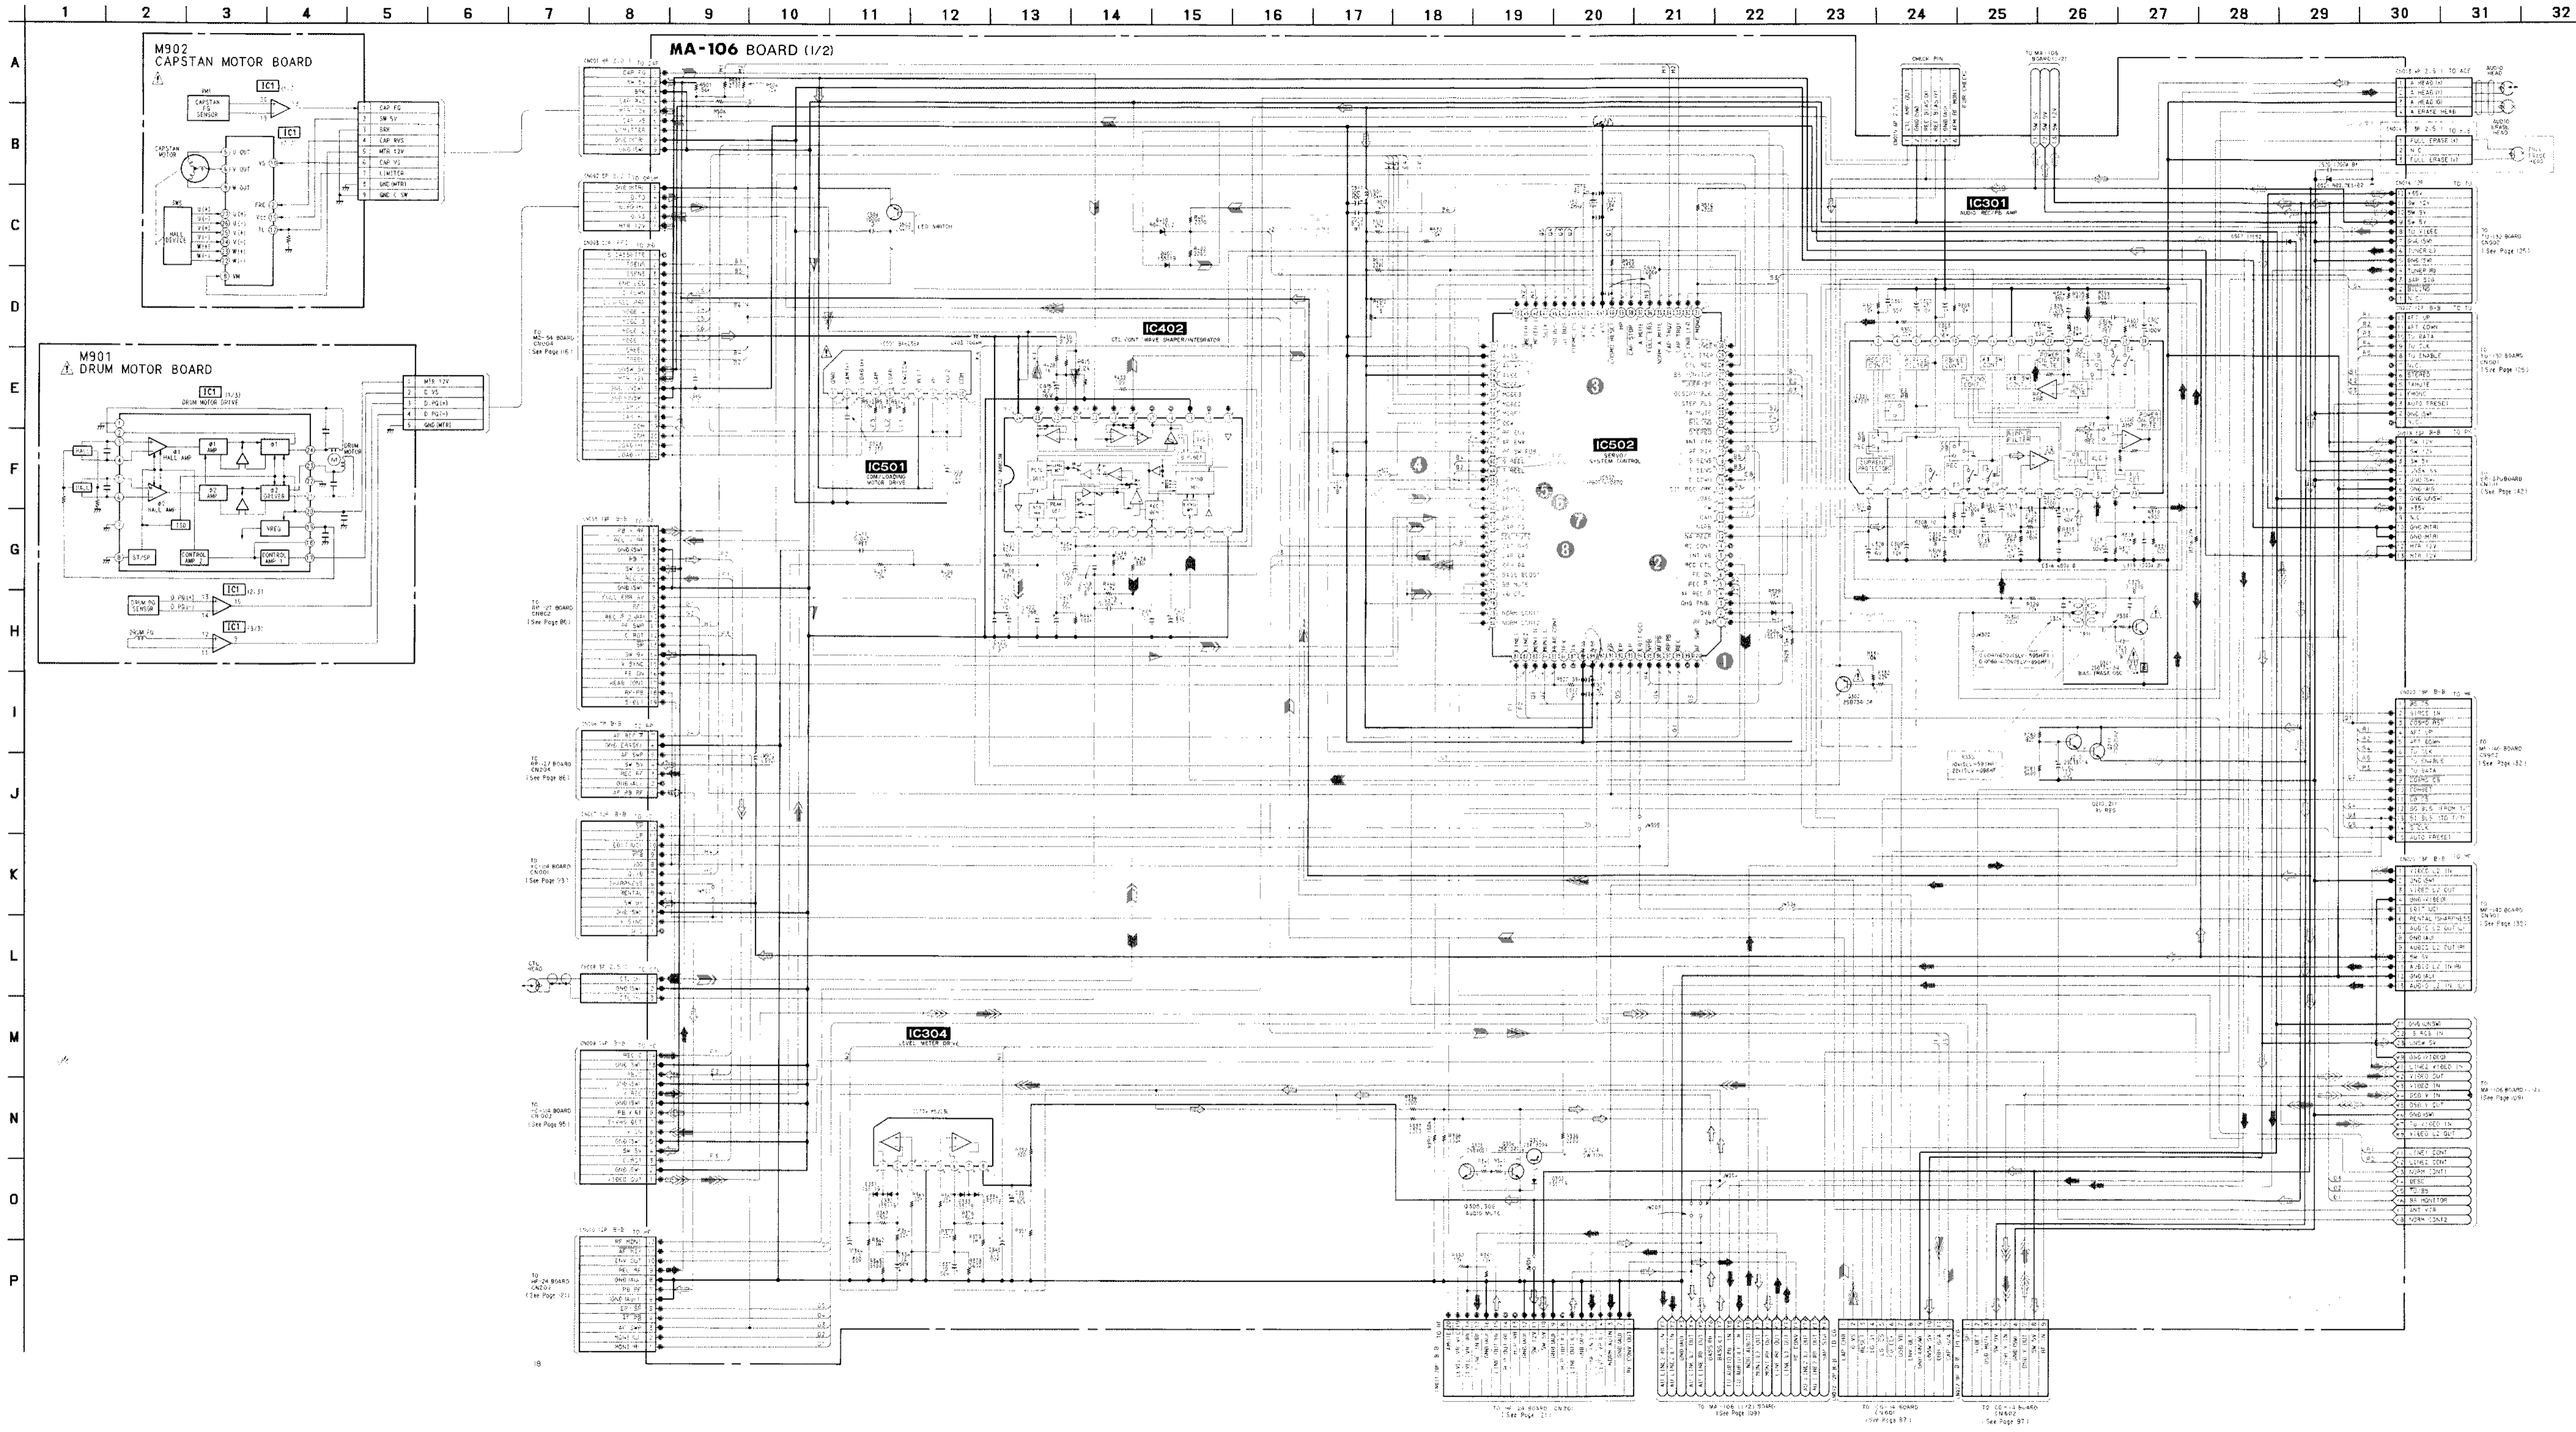

SIGNAL PATH

	CHROMA	VIDEO Signal	Y CHROMA	AUDIO Signal
REC		→	→	→
PB			→	→

	REC	REC/PB	PB
Drum speed servo	→	→	
Drum phase servo	→	→	
Drum servo (speed and phase)	→	→	
Capstan speed servo	→	→	
Capstan phase servo	→	→	
Capstan servo (speed and phase)	→	→	
Ref. signal	→		

MA-106 (SERVO/SYSTEM CONTROL) PRINTED WIRING BOARD

- Ref. No. MA-106 BOARD: 2,000 series -

MA-106 BOARD

MA-106 BOARD


- CN001 F-2
- CN002 E-1
- CN003 E-3
- CN005 H-10
- CN006 I-10
- CN007 E-8
- CN008 A-2
- CN009 E-10
- CN010 D-6
- CN011 D-9
- CN012 D-2
- CN013 C-7
- CN014 C-8
- CN015 C-7
- CN016 B-7
- CN017 B-12
- CN018 G-6
- CN020 B-1
- CN021 E-1
- CN022 D-4

- D202 G-13
- D203 H-13
- D302 D-9
- D331 B-12
- D332 B-11
- D333 B-10
- D334 B-10
- D401 D-1
- D410 D-1
- D501 J-13
- D502 J-13
- D505 F-13
- D506 B-4
- D507 E-6
- D521 A-12


- IC102 H-11
- IC201 E-12
- IC301 B-6
- IC302 C-9
- IC304 B-11
- IC402 B-2
- IC501 F-4
- IC502 C-3

- Q101 I-12
- Q210 G-8
- Q211 G-8
- Q501 B-7
- Q302 B-8
- Q304 D-8
- Q305 D-9
- Q306 C-9
- Q502 F-4
- Q510 I-12
- Q511 J-13

- RV301 B-8
- RV501 E-4
- RV502 E-5

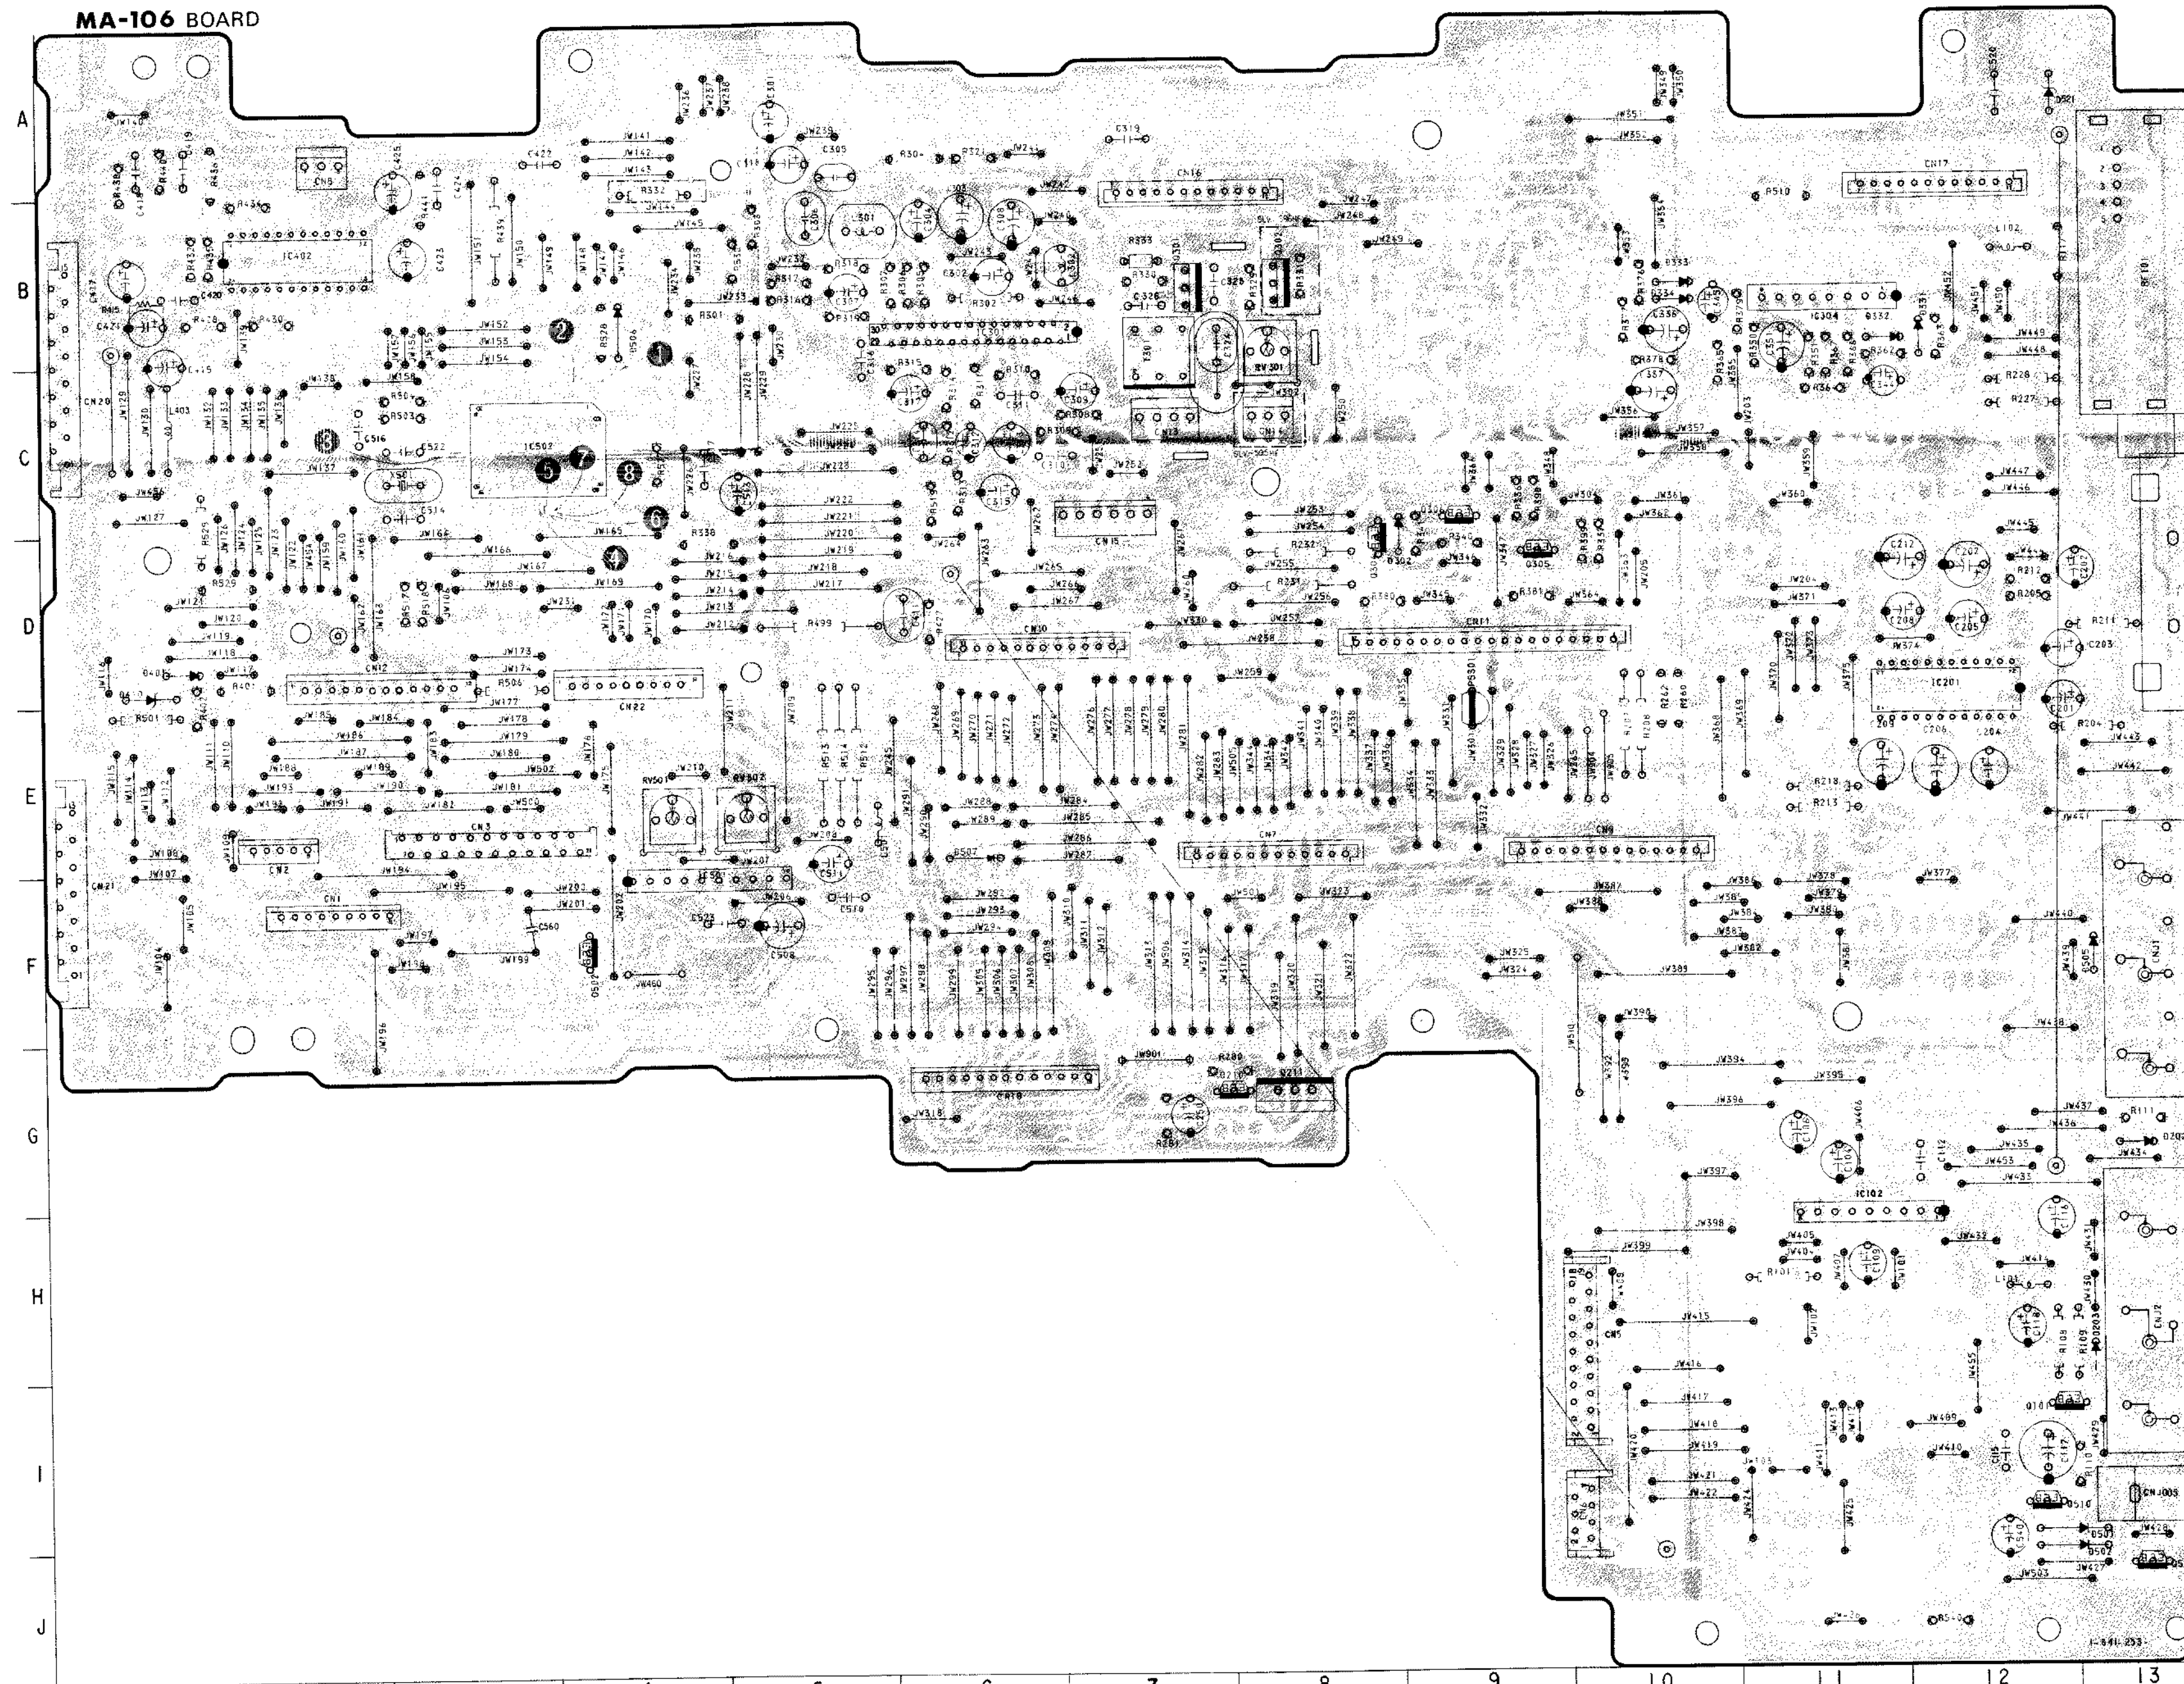

- < DIODE >
- D202 8-719-911-19 DIODE 1SS119
 - D203 8-719-911-19 DIODE 1SS119
 - D302 8-719-911-19 DIODE 1SS119
 - D331 8-719-911-19 DIODE 1SS119
 - D332 8-719-911-19 DIODE 1SS119
 - D333 8-719-911-19 DIODE 1SS119
 - D334 8-719-911-19 DIODE 1SS119
 - D401 8-719-911-19 DIODE 1SS119
 - D410 8-719-101-47 DIODE 604.7E-L2
 - D501 8-719-911-19 DIODE 1SS119
 - D502 8-719-911-19 DIODE 1SS119
 - D505 8-719-911-19 DIODE 1SS119
 - D506 8-719-911-19 DIODE 1SS119
 - D507 8-719-200-82 DIODE 11ES2
 - D521 8-719-109-60 DIODE R02.7ES-B2
- < IC >
- IC102 8-759-511-44 IC LV45225A
 - IC201 8-759-520-50 IC 8N7230S
 - IC301 8-759-805-20 IC LA7257
 - IC304 8-759-932-94 IC M5223L
 - IC402 8-759-246-14 IC TA8823M
 - IC501 8-759-983-45 IC BA6239A
 - IC502 8-152-825-23 IC CXP80124-0170
- < TRANSISTOR >
- Q101 8-729-423-42 TRANSISTOR 2SA1309A-R
 - Q210 8-729-423-35 TRANSISTOR 2SC0311A-R
 - Q211 8-729-209-15 TRANSISTOR 2SD0212
 - Q301 8-729-140-65 TRANSISTOR 2SD774-34
 - Q302 8-729-140-67 TRANSISTOR 2SD774-34 (S1V-696RF)
 - Q304 8-729-423-42 TRANSISTOR 2SA1309A-R
 - Q305 8-729-102-14 TRANSISTOR 2SD1021-F
 - Q502 8-729-422-71 TRANSISTOR UN411L
 - Q510 8-729-900-65 TRANSISTOR DTA144ES
 - Q511 8-729-900-88 TRANSISTOR DTC144ES

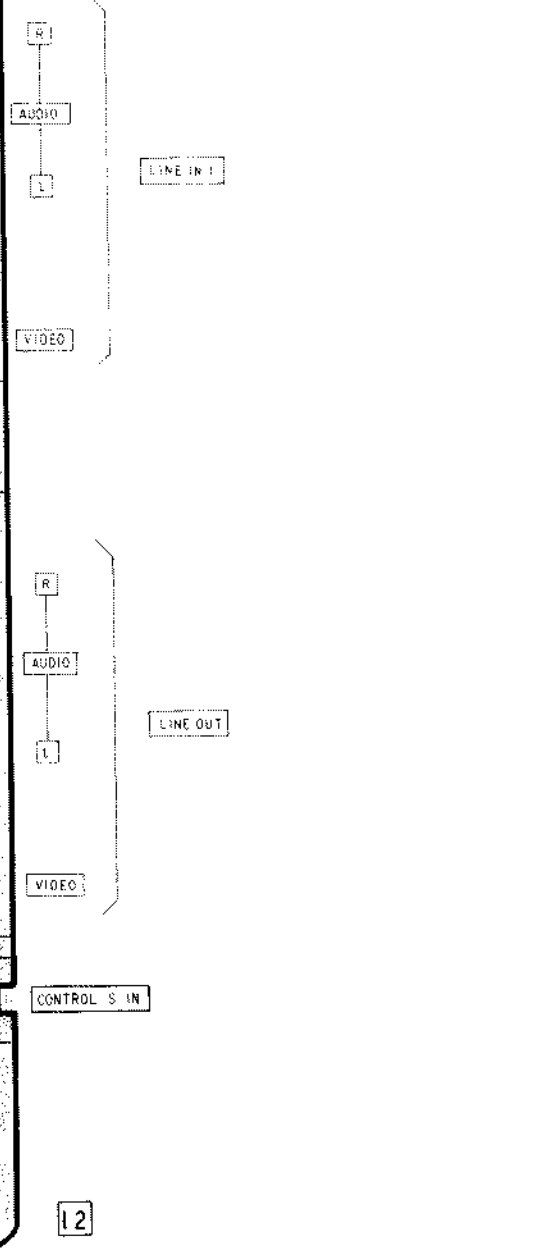

MA-106 (AUDIO/VIDEO SWITCH) PRINTED WIRING BOARD

-Ref. No. MA-106 BOARD: 2.000 series-

MA-106 BOARD

- CN001 F-2
- CN002 E-1
- CN003 E-3
- CN005 H-10
- CN006 I-10
- CN007 E-8
- CN008 A-2
- CN009 E-10
- CN010 D-6
- CN011 D-9
- CN012 D-2
- CN013 C-7
- CN014 C-8
- CN015 C-7
- CN016 B-7
- CN017 B-12
- CN018 G-6
- CN020 B-1
- CN021 E-1
- CN022 D-4

- D202 G-13
- D203 H-13
- D302 D-9
- D331 B-12
- D332 B-11
- D333 B-10
- D334 B-10
- D401 D-1
- D410 D-1
- D501 J-13
- D502 J-13
- D505 F-13
- D506 B-4
- D507 E-6
- D521 A-12

- IC102 H-11
- IC201 E-12
- IC301 B-6
- IC302 C-9
- IC304 B-11
- IC402 B-2
- IC501 F-4
- IC502 C-3

- Q101 I-12
- Q210 G-8
- Q211 G-8
- Q301 B-7
- Q302 B-8
- Q304 D-8
- Q305 D-9
- Q306 C-9
- Q502 F-4
- Q510 I-12
- Q511 J-13

- RV301 B-8
- RV501 E-4
- RV502 E-5

< DIODE >


- D202 8-719-911-19 DIODE 1SS119
- D203 8-719-911-18 DIODE 1SS119
- D302 8-719-911-19 DIODE 1SS119
- D331 8-719-911-19 DIODE 1SS119
- D332 8-719-911-18 DIODE 1SS119
- D333 8-719-911-19 DIODE 1SS119
- D334 8-719-911-19 DIODE 1SS119
- D401 8-719-911-19 DIODE 1SS119
- D410 8-719-101-47 DIODE RD4.7E-L2
- D501 8-719-911-19 DIODE 1SS119
- D502 8-719-911-19 DIODE 1SS119
- D505 8-719-911-19 DIODE 1SS119
- D506 8-719-911-19 DIODE 1SS119
- D507 8-719-200-87 DIODE 11ES2
- D521 8-719-109-60 DIODE RD2.7ES-B2

< IC >

- IC102 8-759-911-44 IC LVA5225A
- IC201 8-759-520-50 IC BH7733S
- IC301 8-759-805-20 IC LA7297
- IC304 8-759-632-94 IC MS223L
- IC402 8-759-246-14 IC TA8823N
- IC501 8-759-983-45 IC BA6238A
- IC502 8-752-835-23 IC CNP80724-0270

< TRANSISTOR >

- Q101 8-729-423-42 TRANSISTOR 2SA1309A-R
- Q210 8-729-423-35 TRANSISTOR 2SC3311A-R
- Q211 8-729-269-15 TRANSISTOR 2SD2012
- Q301 8-729-140-96 TRANSISTOR 2SD774-34
- Q302 8-729-140-97 TRANSISTOR 2SB734-34 (SLV-656HF)
- Q304 8-729-423-42 TRANSISTOR 2SA1309A-R
- Q305 8-729-102-14 TRANSISTOR 2SD1021-F
- Q306 8-729-102-14 TRANSISTOR 2SD1021-F
- Q502 8-729-422-71 TRANSISTOR UN411L
- Q510 8-729-900-65 TRANSISTOR DTA144ES
- Q511 8-729-900-89 TRANSISTOR DTC144ES

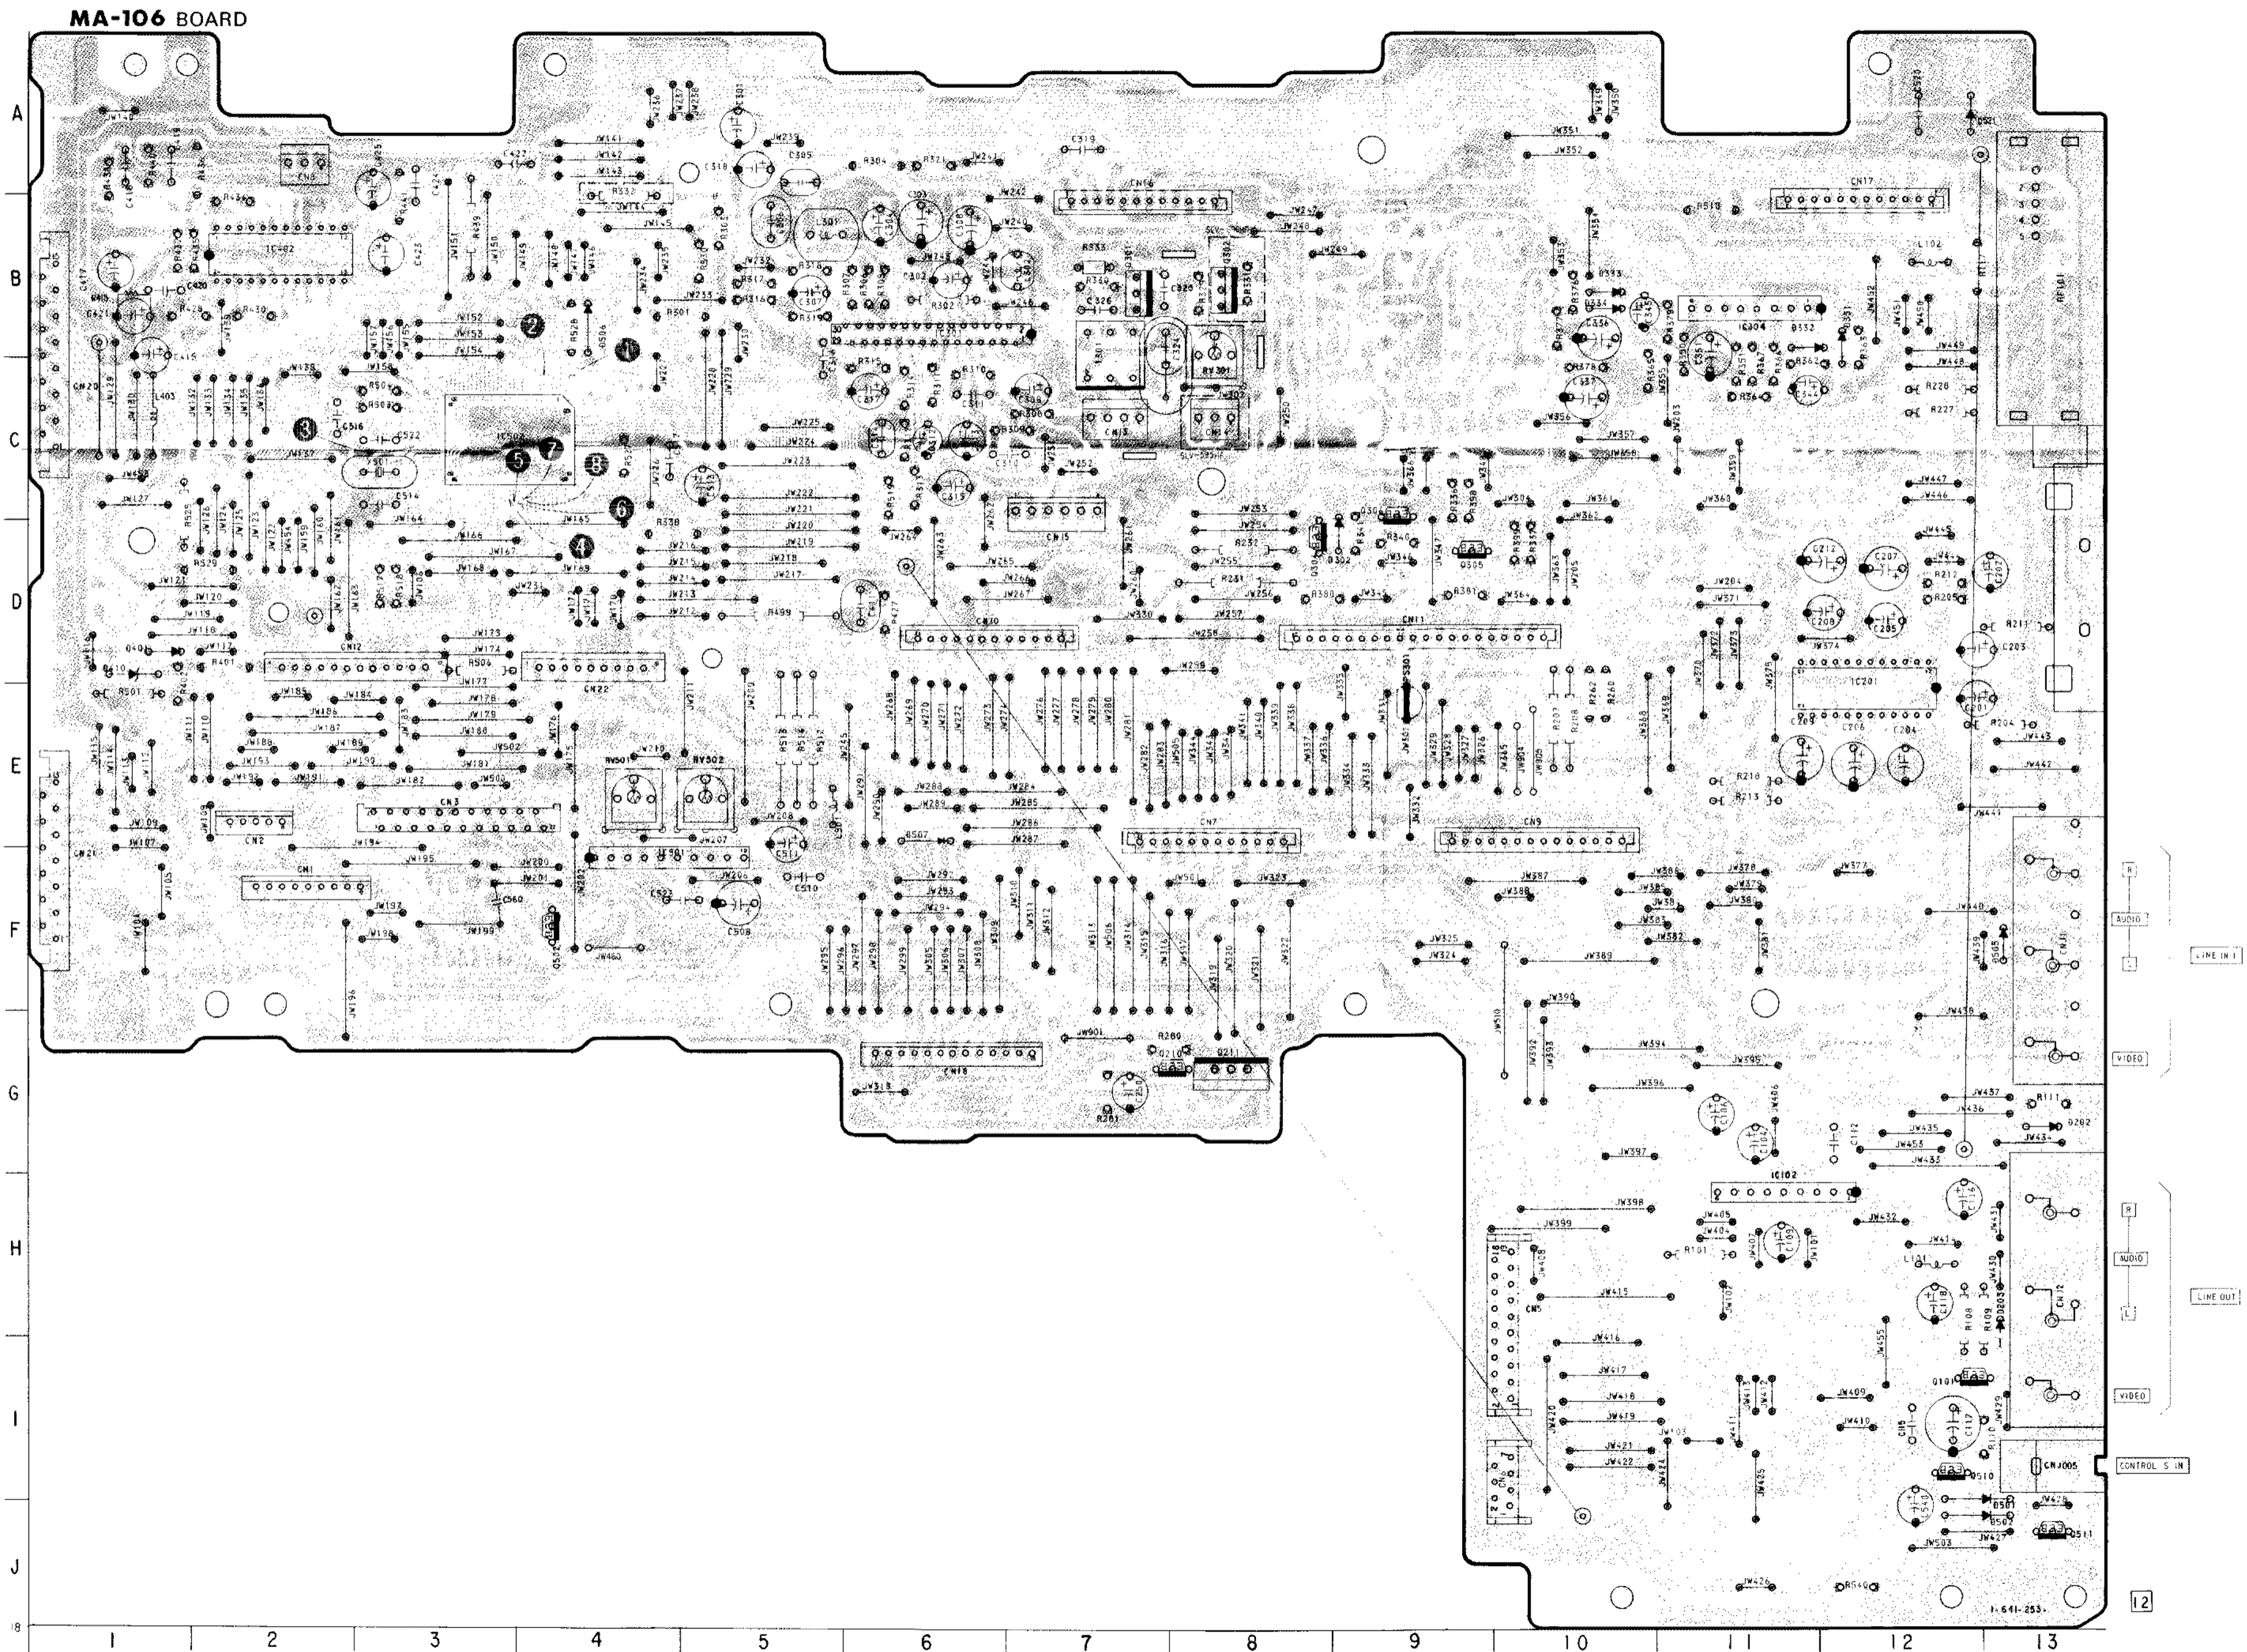


MD-54 (MOTOR DRIVE) CA-41 (CAM MOTOR) PRINTED WIRING BOARDS


-Ref. No. MD-54 BOARD:3,000 series, CA-41 BOARD:5,000 series-

MD-54 BOARD

- CN003 B-9
- CN004 E-9
- CN005 D-9
- CN006 A-1
- D001 C-5
- D005 C-1
- D006 A-4
- D007 A-5
- D008 C-8
- IC002 D-1
- Q002 D-1
- Q003 D-9

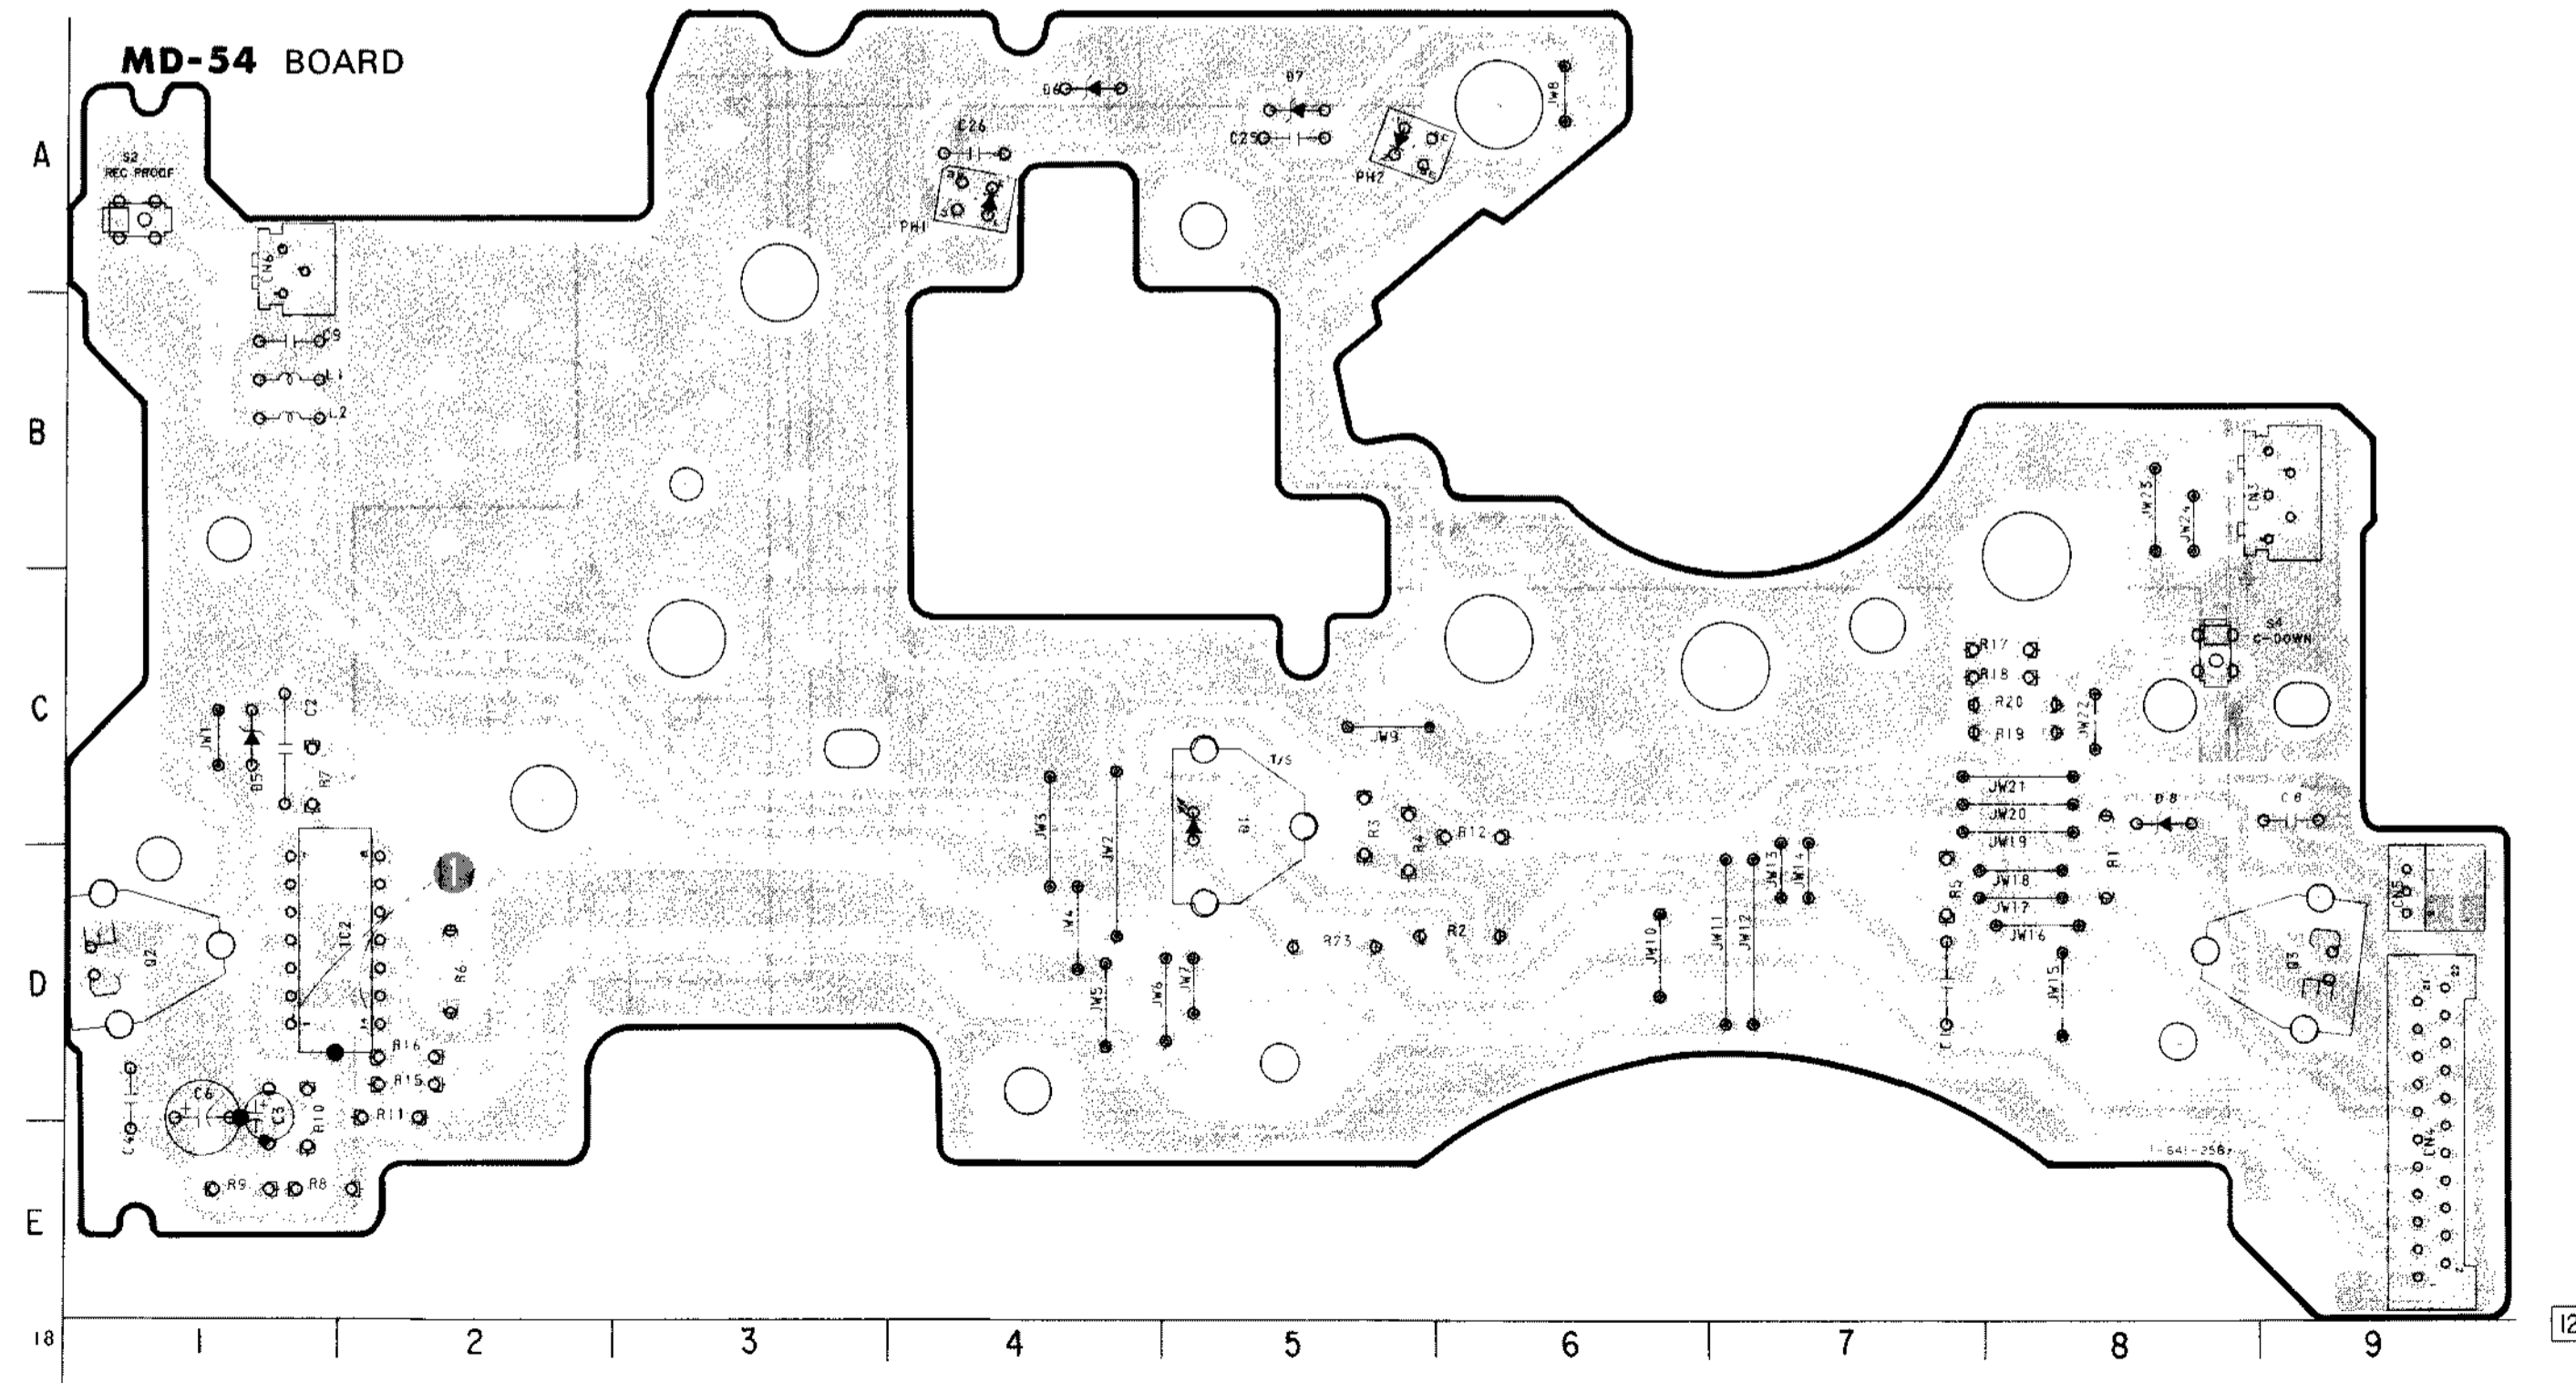

CA-41 BOARD

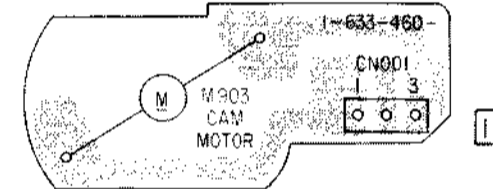


HF-24 (AUDIO PROCESS) PRINTED WIRING BOARD

- Ref. No. HF-24 BOARD 3,000 series -

HF-24 BOARD

- CN201 D-2
- CN202 D-6
- D201 D-4
- IC201 B-4
- RV201 A-3
- RV202 A-2
- RV203 B-7
- RV204 A-6
- RV205 B-6
- RV206 C-6

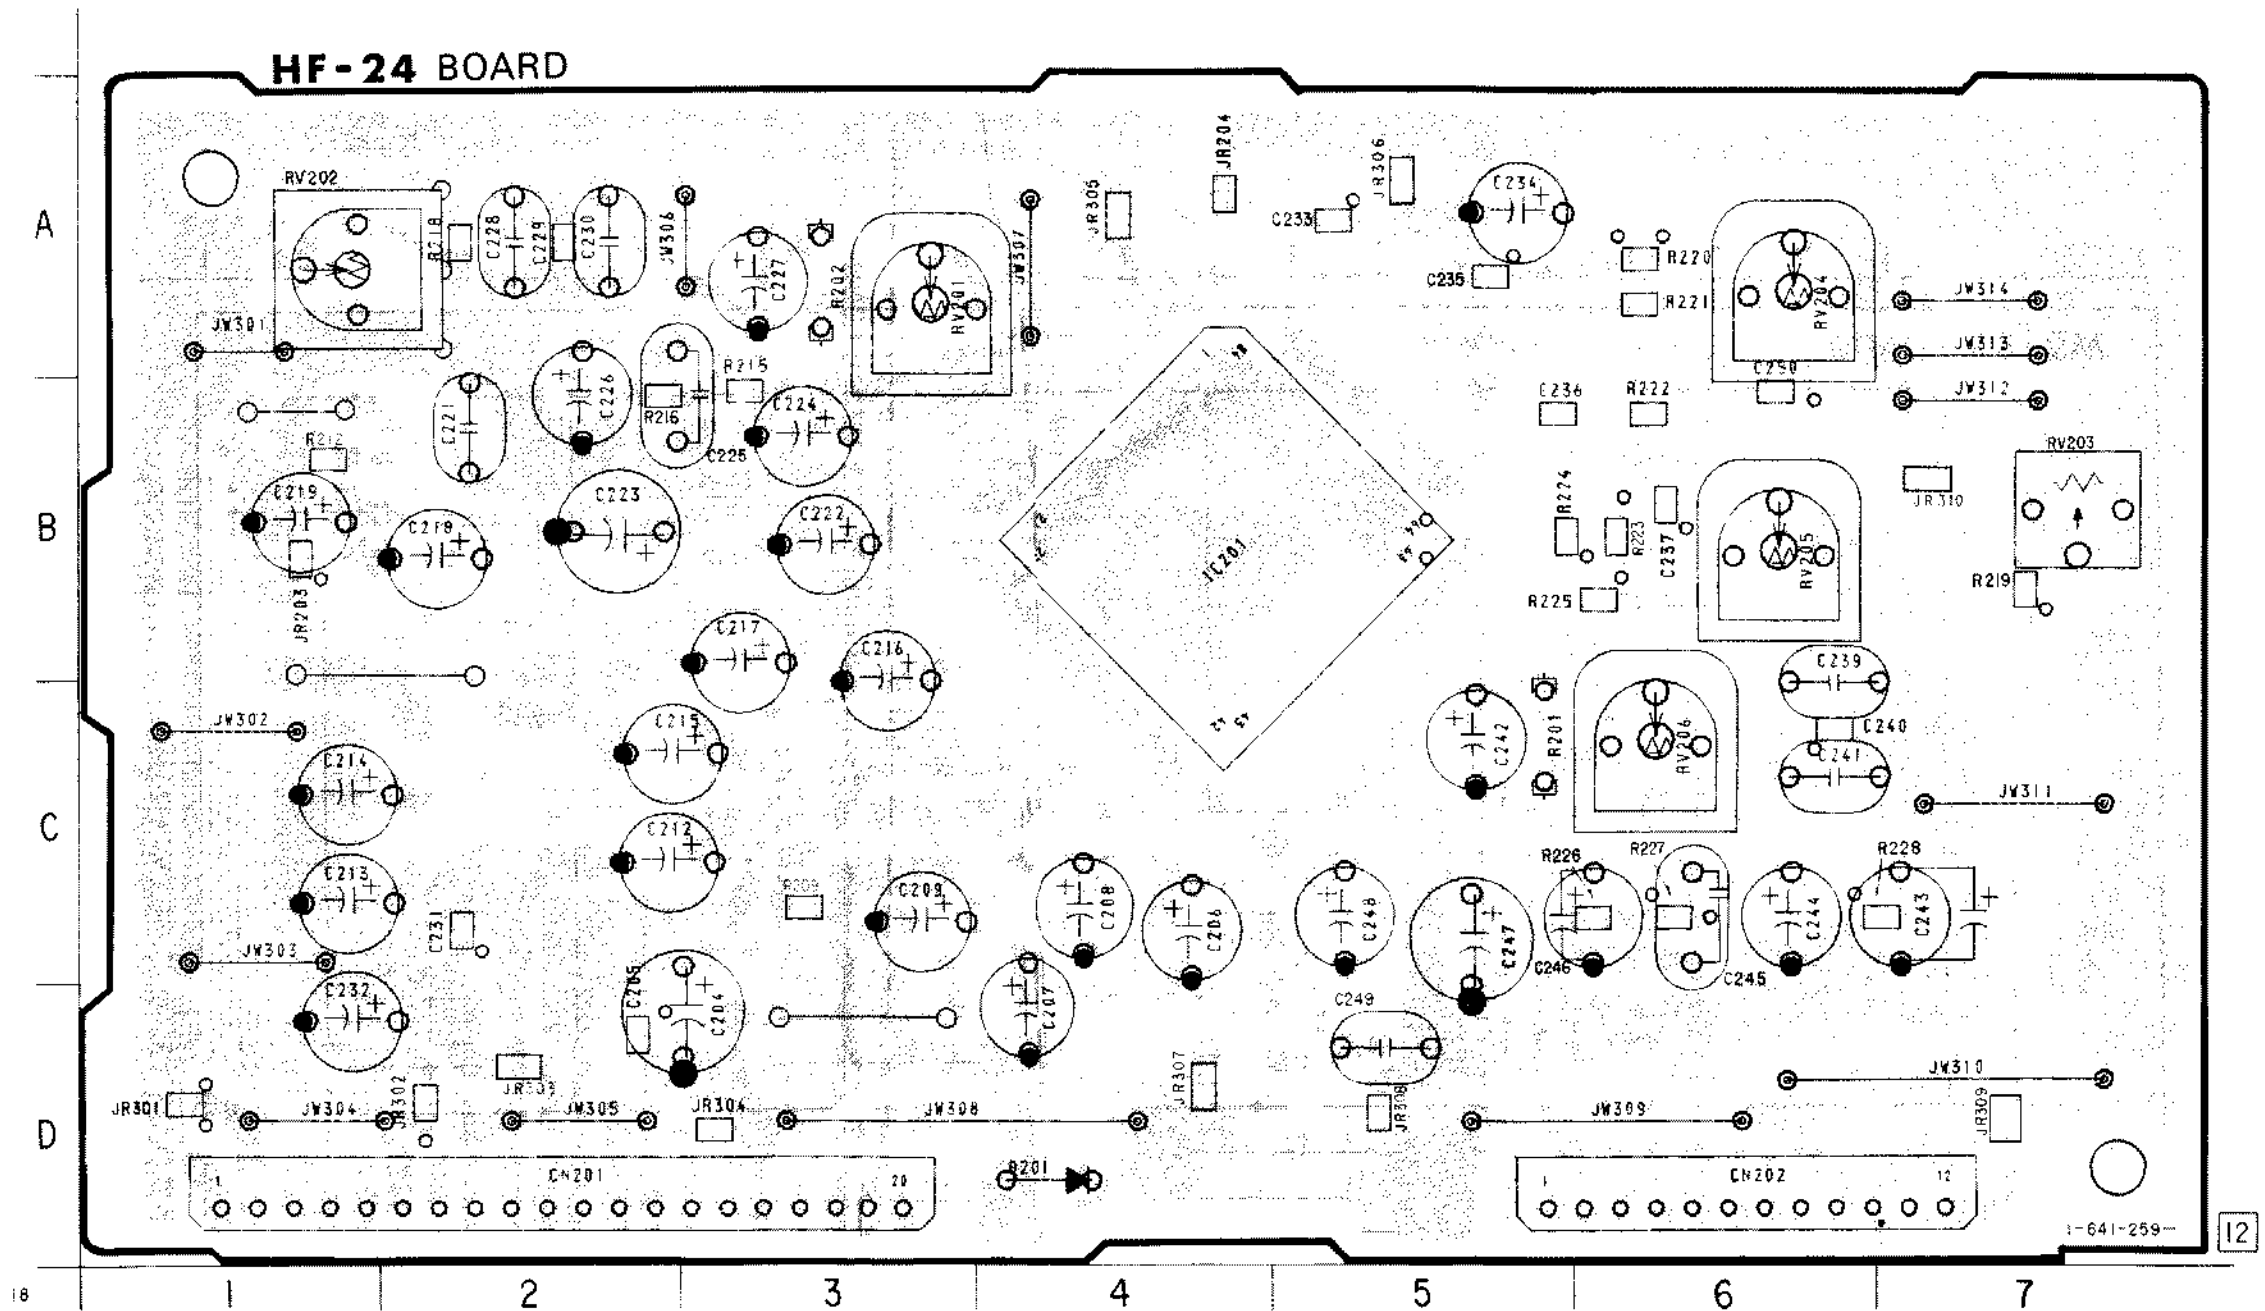

1-641-259-12

< DIODE >


D201 8-713-315-19 DIODE 1SS119

< IC >

IC201 8-759-057-63 IC AN3337NFBP

HF-24 (AUDIO PROCESS) SCHEMATIC DIAGRAM

Ref. No. HF-24 BOARD 3.000 series

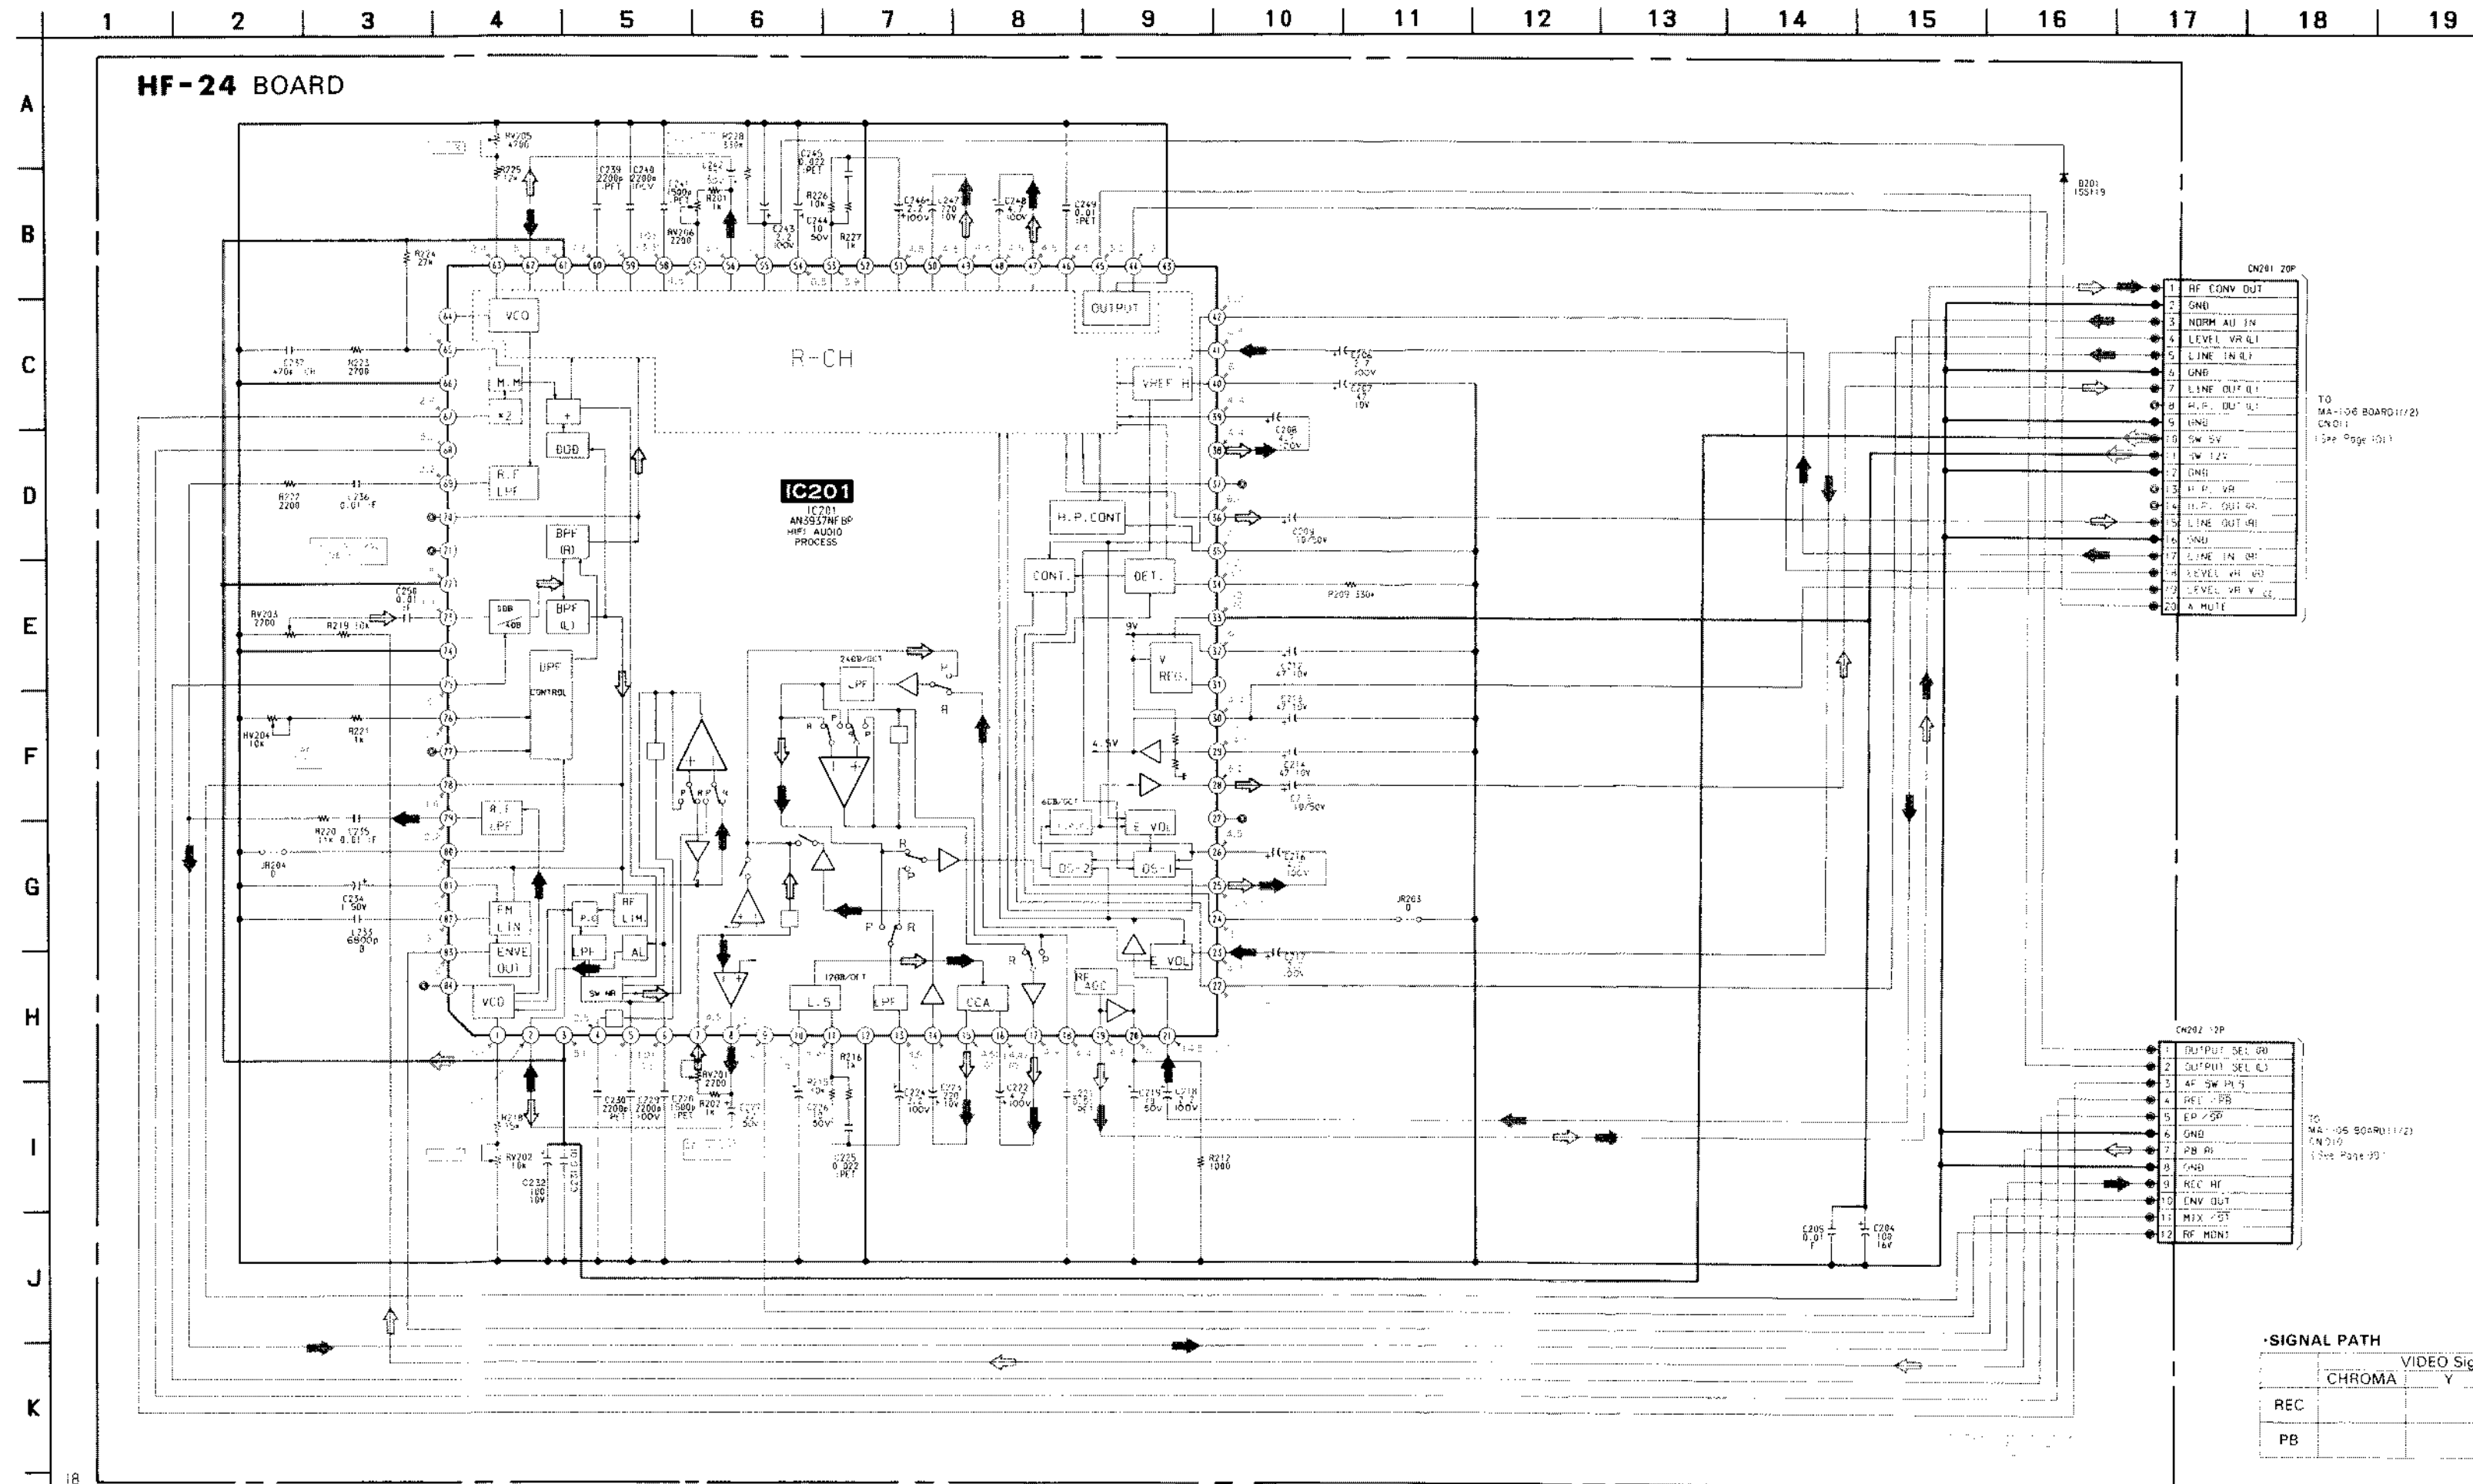

TO MA-106 BOARD(1/2)
CN011
(See Page 101)

TO MA-106 BOARD(1/2)
CN010
(See Page 99)

TU-132 (TUNER) PRINTED WIRING BOARD

-Ref. No. TU-132 BOARD: 4,000 series -

TU-132 BOARD

TU-132 BOARD

- CN001 D-10
- CN002 D-3
- D001 D-5
- D005 A-5
- D006 C-3
- D007 D-4
- IC001 B-8
- IC002 B-2
- IC003 C-5
- Q001 D-5
- Q002 D-9
- Q005 B-10
- Q006 B-10
- Q007 B-6
- Q008 A-6
- Q009 B-5
- Q070 C-1
- Q071 C-1
- RV001 A-4
- RV002 A-10
- RV070 A-2
- RV071 B-1
- RV072 B-1
- RV073 A-3

< DIODE >


- D001 8-719-929-71 DIODE HZS33NB1
- D005 8-719-104-34 DIODE 1S2836
- D006 8-719-104-34 DIODE 1S2836
- D007 8-719-860-76 DIODE 1SS226

< IC >

- IC001 8-759-630-93 IC M51362SP
- IC002 8-752-035-71 IC CXA1124AS
- IC003 8-759-981-64 IC LM2903D


< TRANSISTOR >

- Q001 8-729-173-38 TRANSISTOR 2SA703-K
- Q002 8-729-421-19 TRANSISTOR UM2715
- Q005 8-729-822-90 TRANSISTOR 2SC3779C
- Q006 8-729-822-90 TRANSISTOR 2SC3779C
- Q007 8-729-422-27 TRANSISTOR 2SD601A-ORS
- Q008 8-729-422-27 TRANSISTOR 2SD601A-ORS
- Q009 8-729-422-27 TRANSISTOR 2SD601A-ORS
- Q070 8-729-422-27 TRANSISTOR 2SD601A-ORS
- Q071 8-729-421-19 TRANSISTOR UM2713

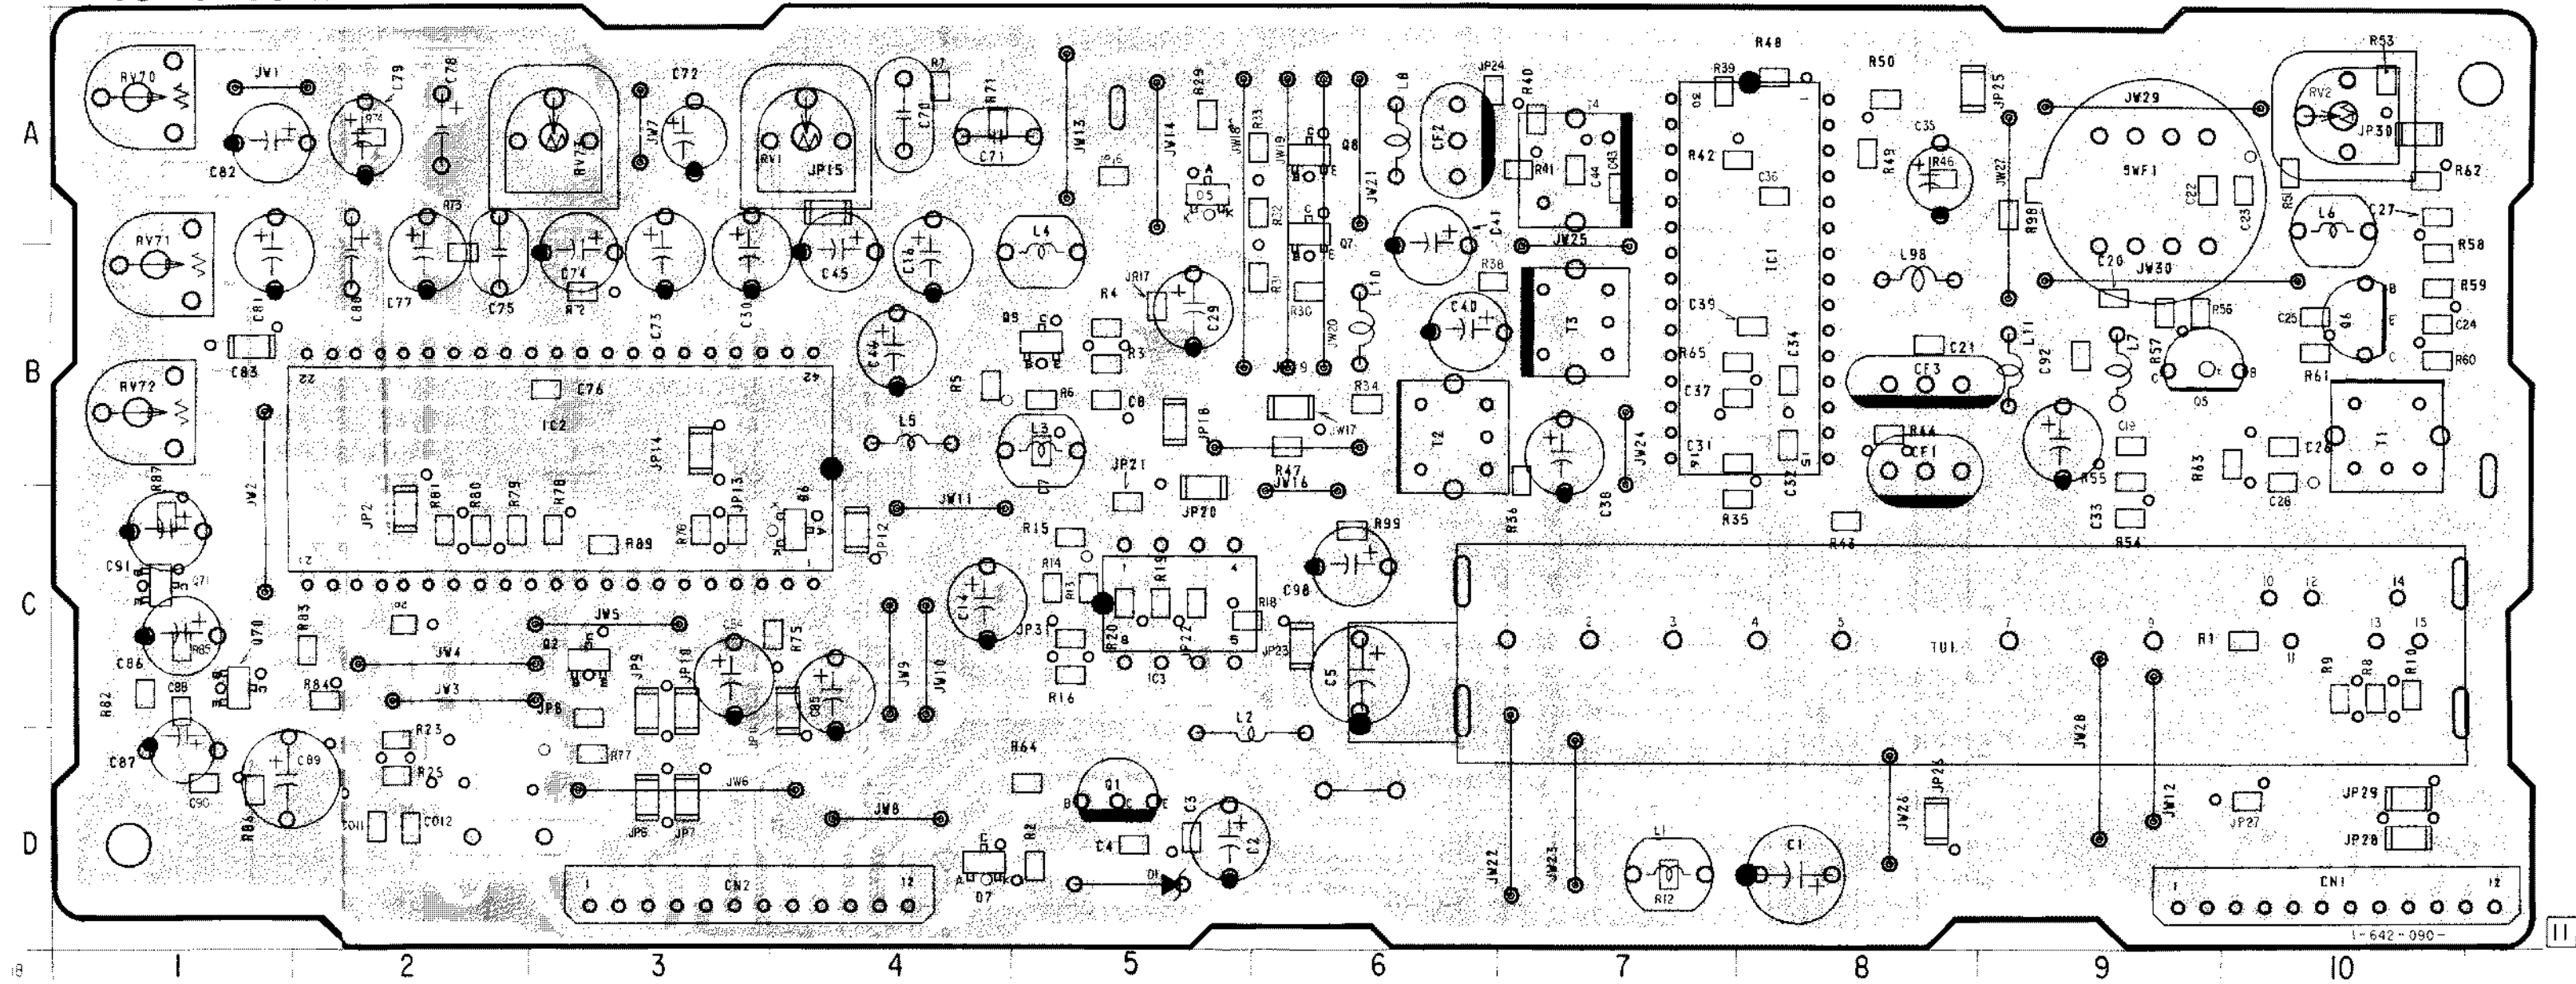

TU-132 (TUNER) SCHEMATIC DIAGRAM

Ref. No. TU-132 BOARD: 4,000 series -

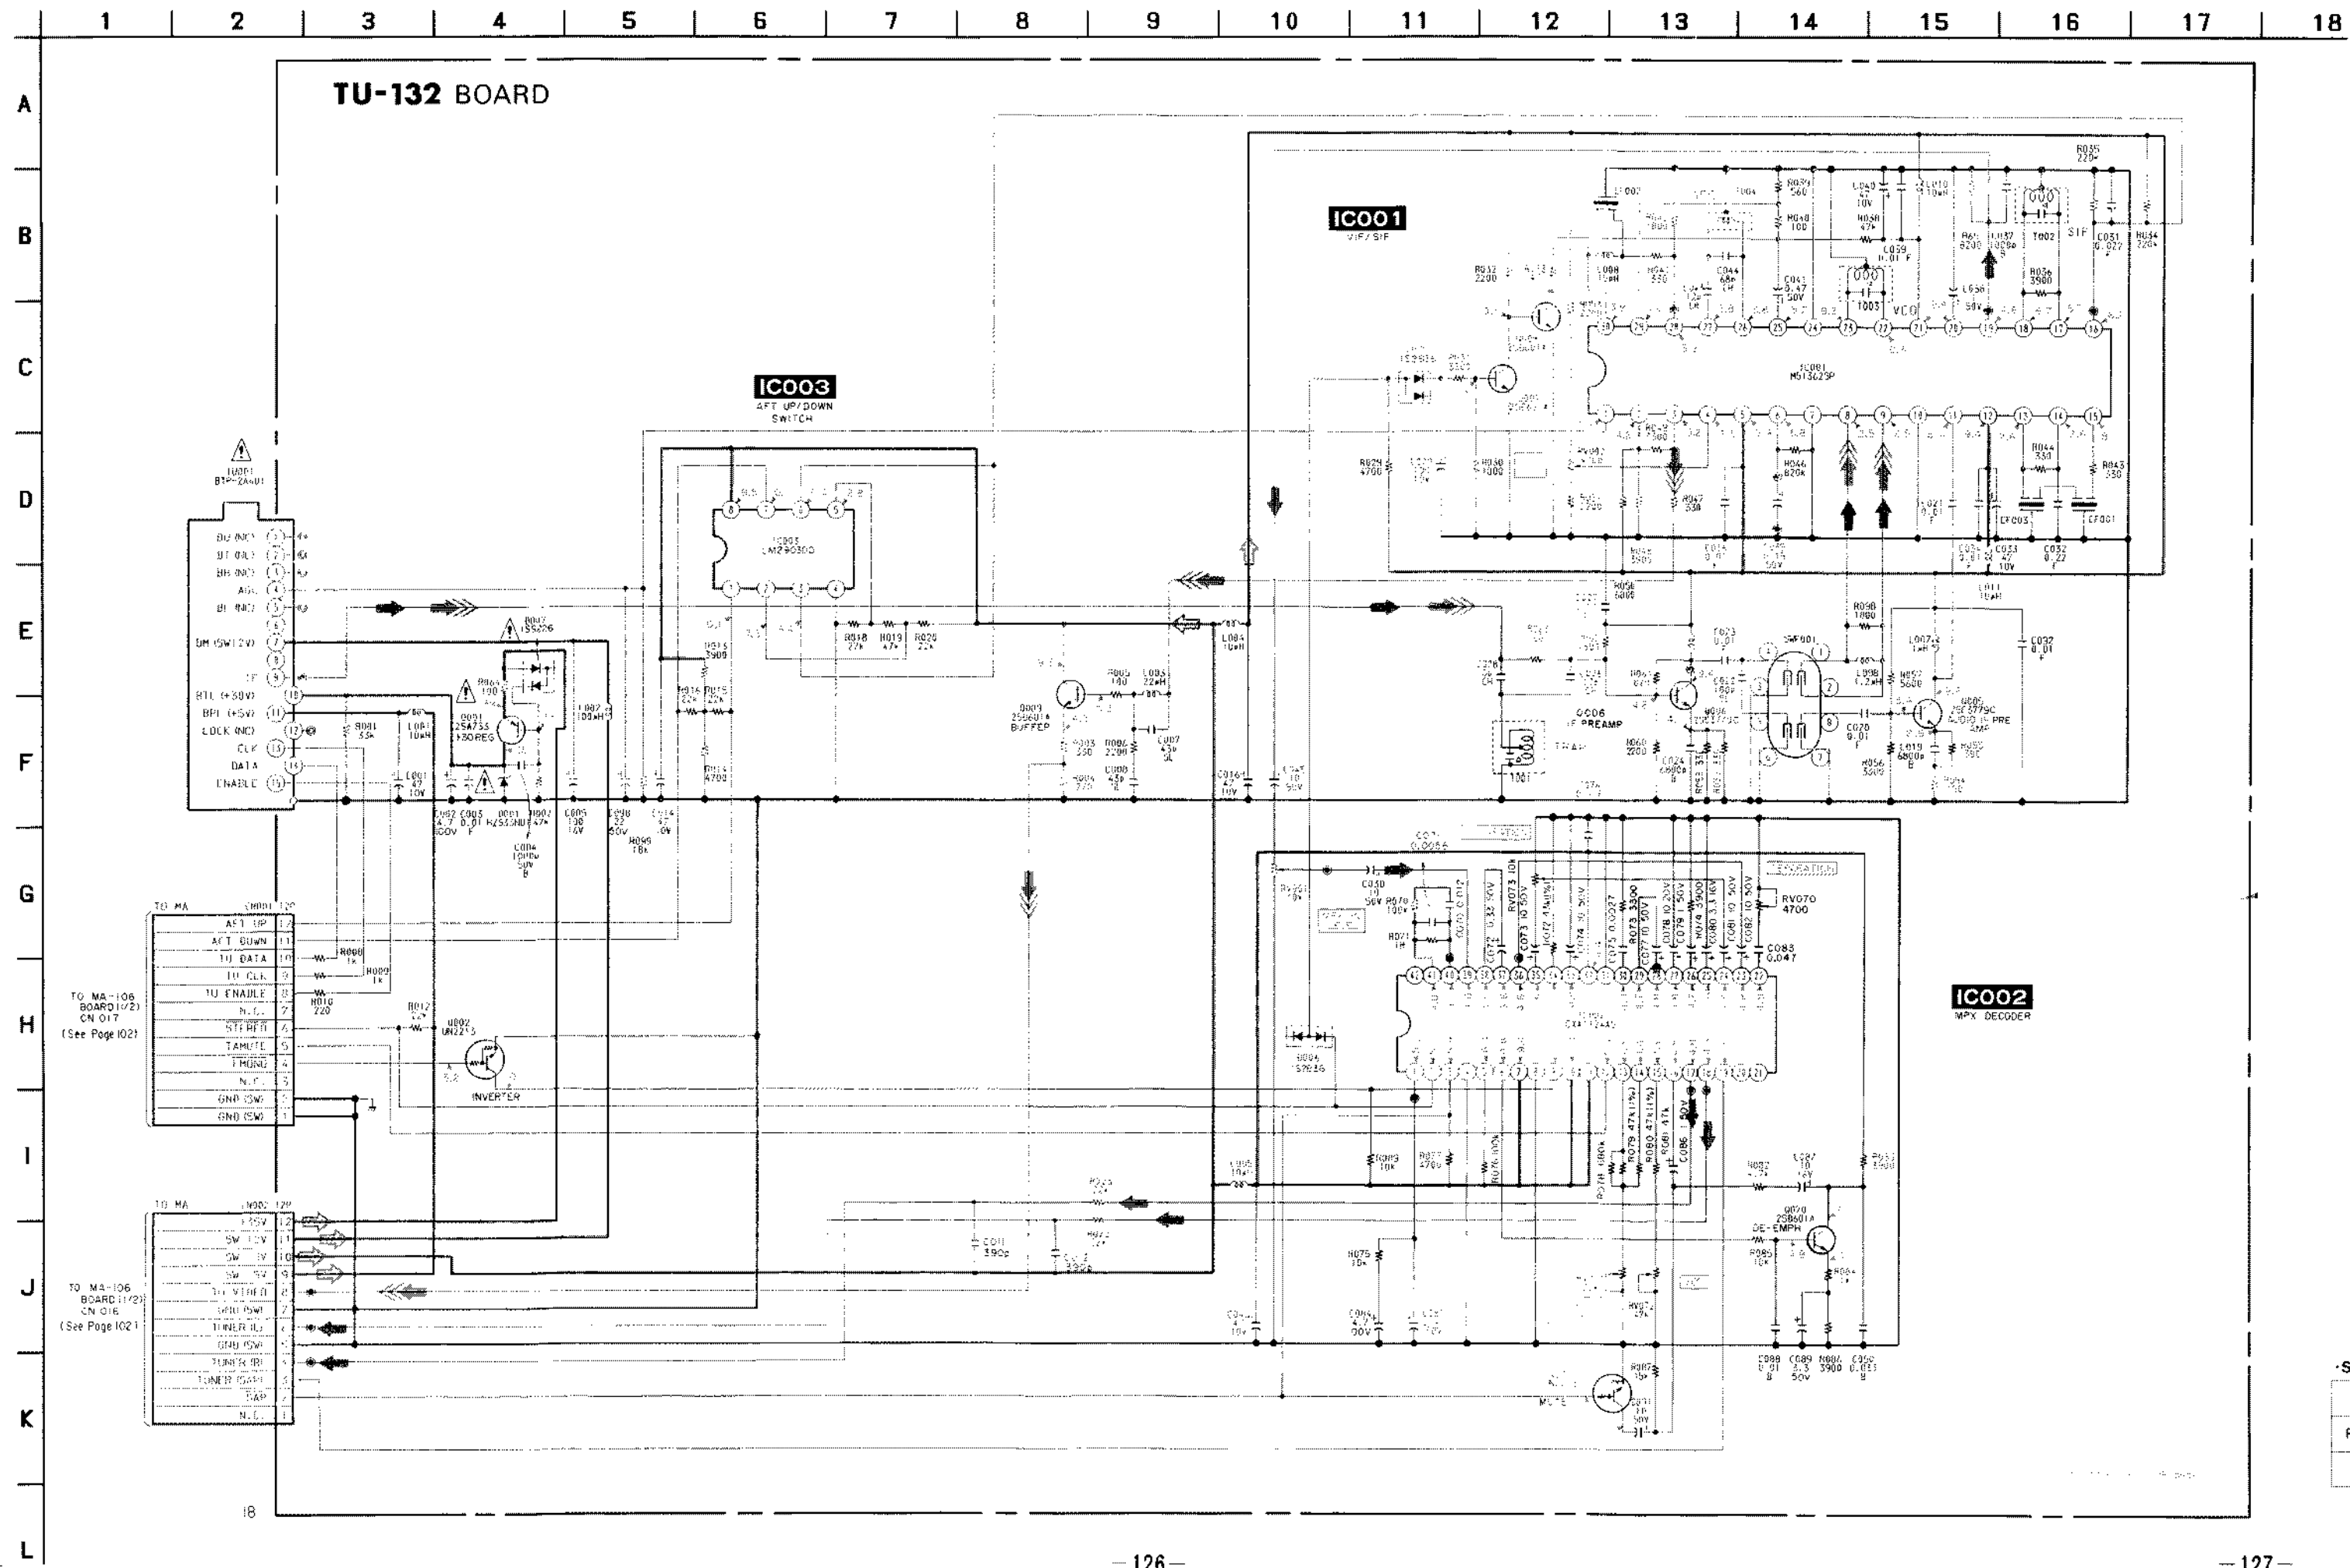

SIGNAL PATH

	VIDEO Signal			AUDIO Signal
	CHROMA	Y	Y-CHROMA	
REC			→	→
PB				

MF-140 (TIMER/MODE CONTROL) PRINTED WIRING BOARD

- Ref. No. MF-140 BOARD-1,000 series -



MF-140 BOARD

MF-140 BOARD

- CN901 A-6
- CN902 A-11
- CN903 B-2
- CN904 B-13
- CN905 B-1
- CN906 A-8
- CN907 A-1

- D901 D-12
- D902 B-12
- D903 A-8
- D907 B-4
- D908 B-2
- D909 B-4
- D914 C-5
- D915 D-5

- IC901 D-7
- IC902 C-6
- IC903 D-9
- IC905 C-4

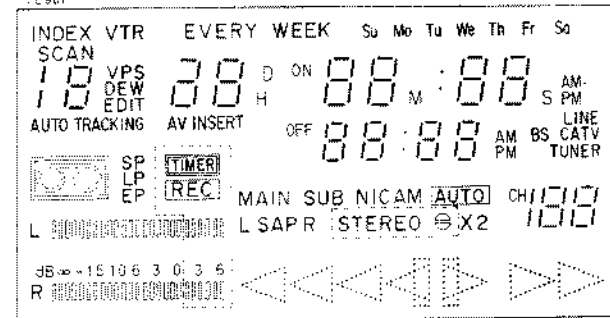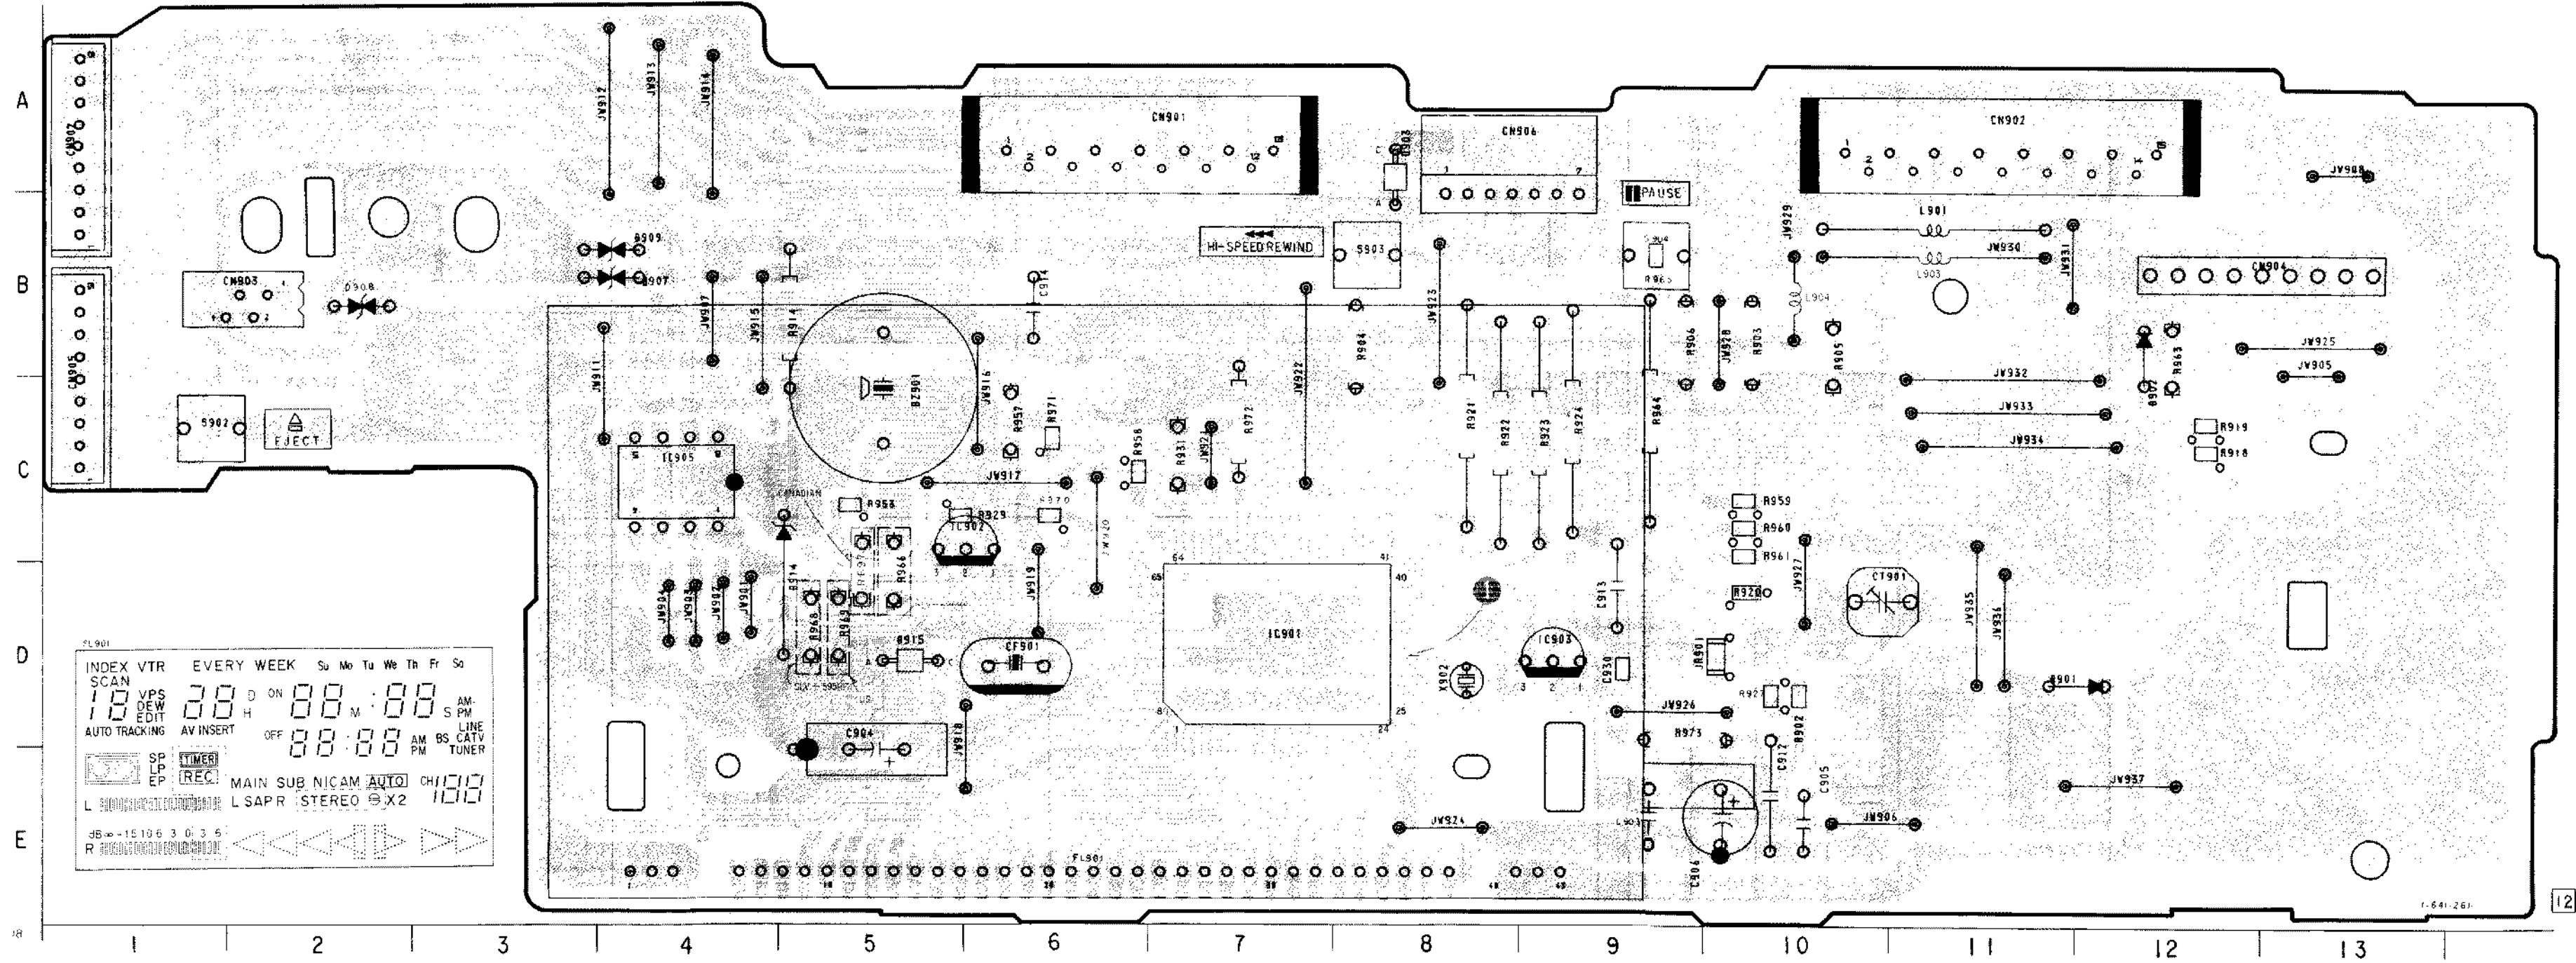

< DIODE >



- D901 8-719-911-19 DIODE 1SS119
- D902 8-719-911-19 DIODE 1SS119
- D903 8-719-110-08 DIODE RD6.2ES-B2
- D907 8-719-108-12 DIODE RD9.1E-W
- D908 8-719-108-12 DIODE RD9.1E-W

< IC >

- IC901 8-752-835-36 IC CXP50124-017Q
- IC902 8-759-510-43 IC PST672C
- IC903 8-759-515-58 IC PST572H
- IC905 8-759-996-59 IC CAT35C102P

MF-140 (TIMER/MODE CONTROL) SCHEMATIC DIAGRAM

Ref. No. MF-140 BOARD: 1,000 series

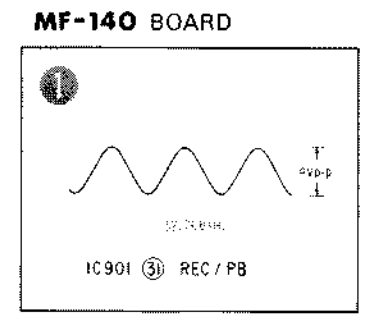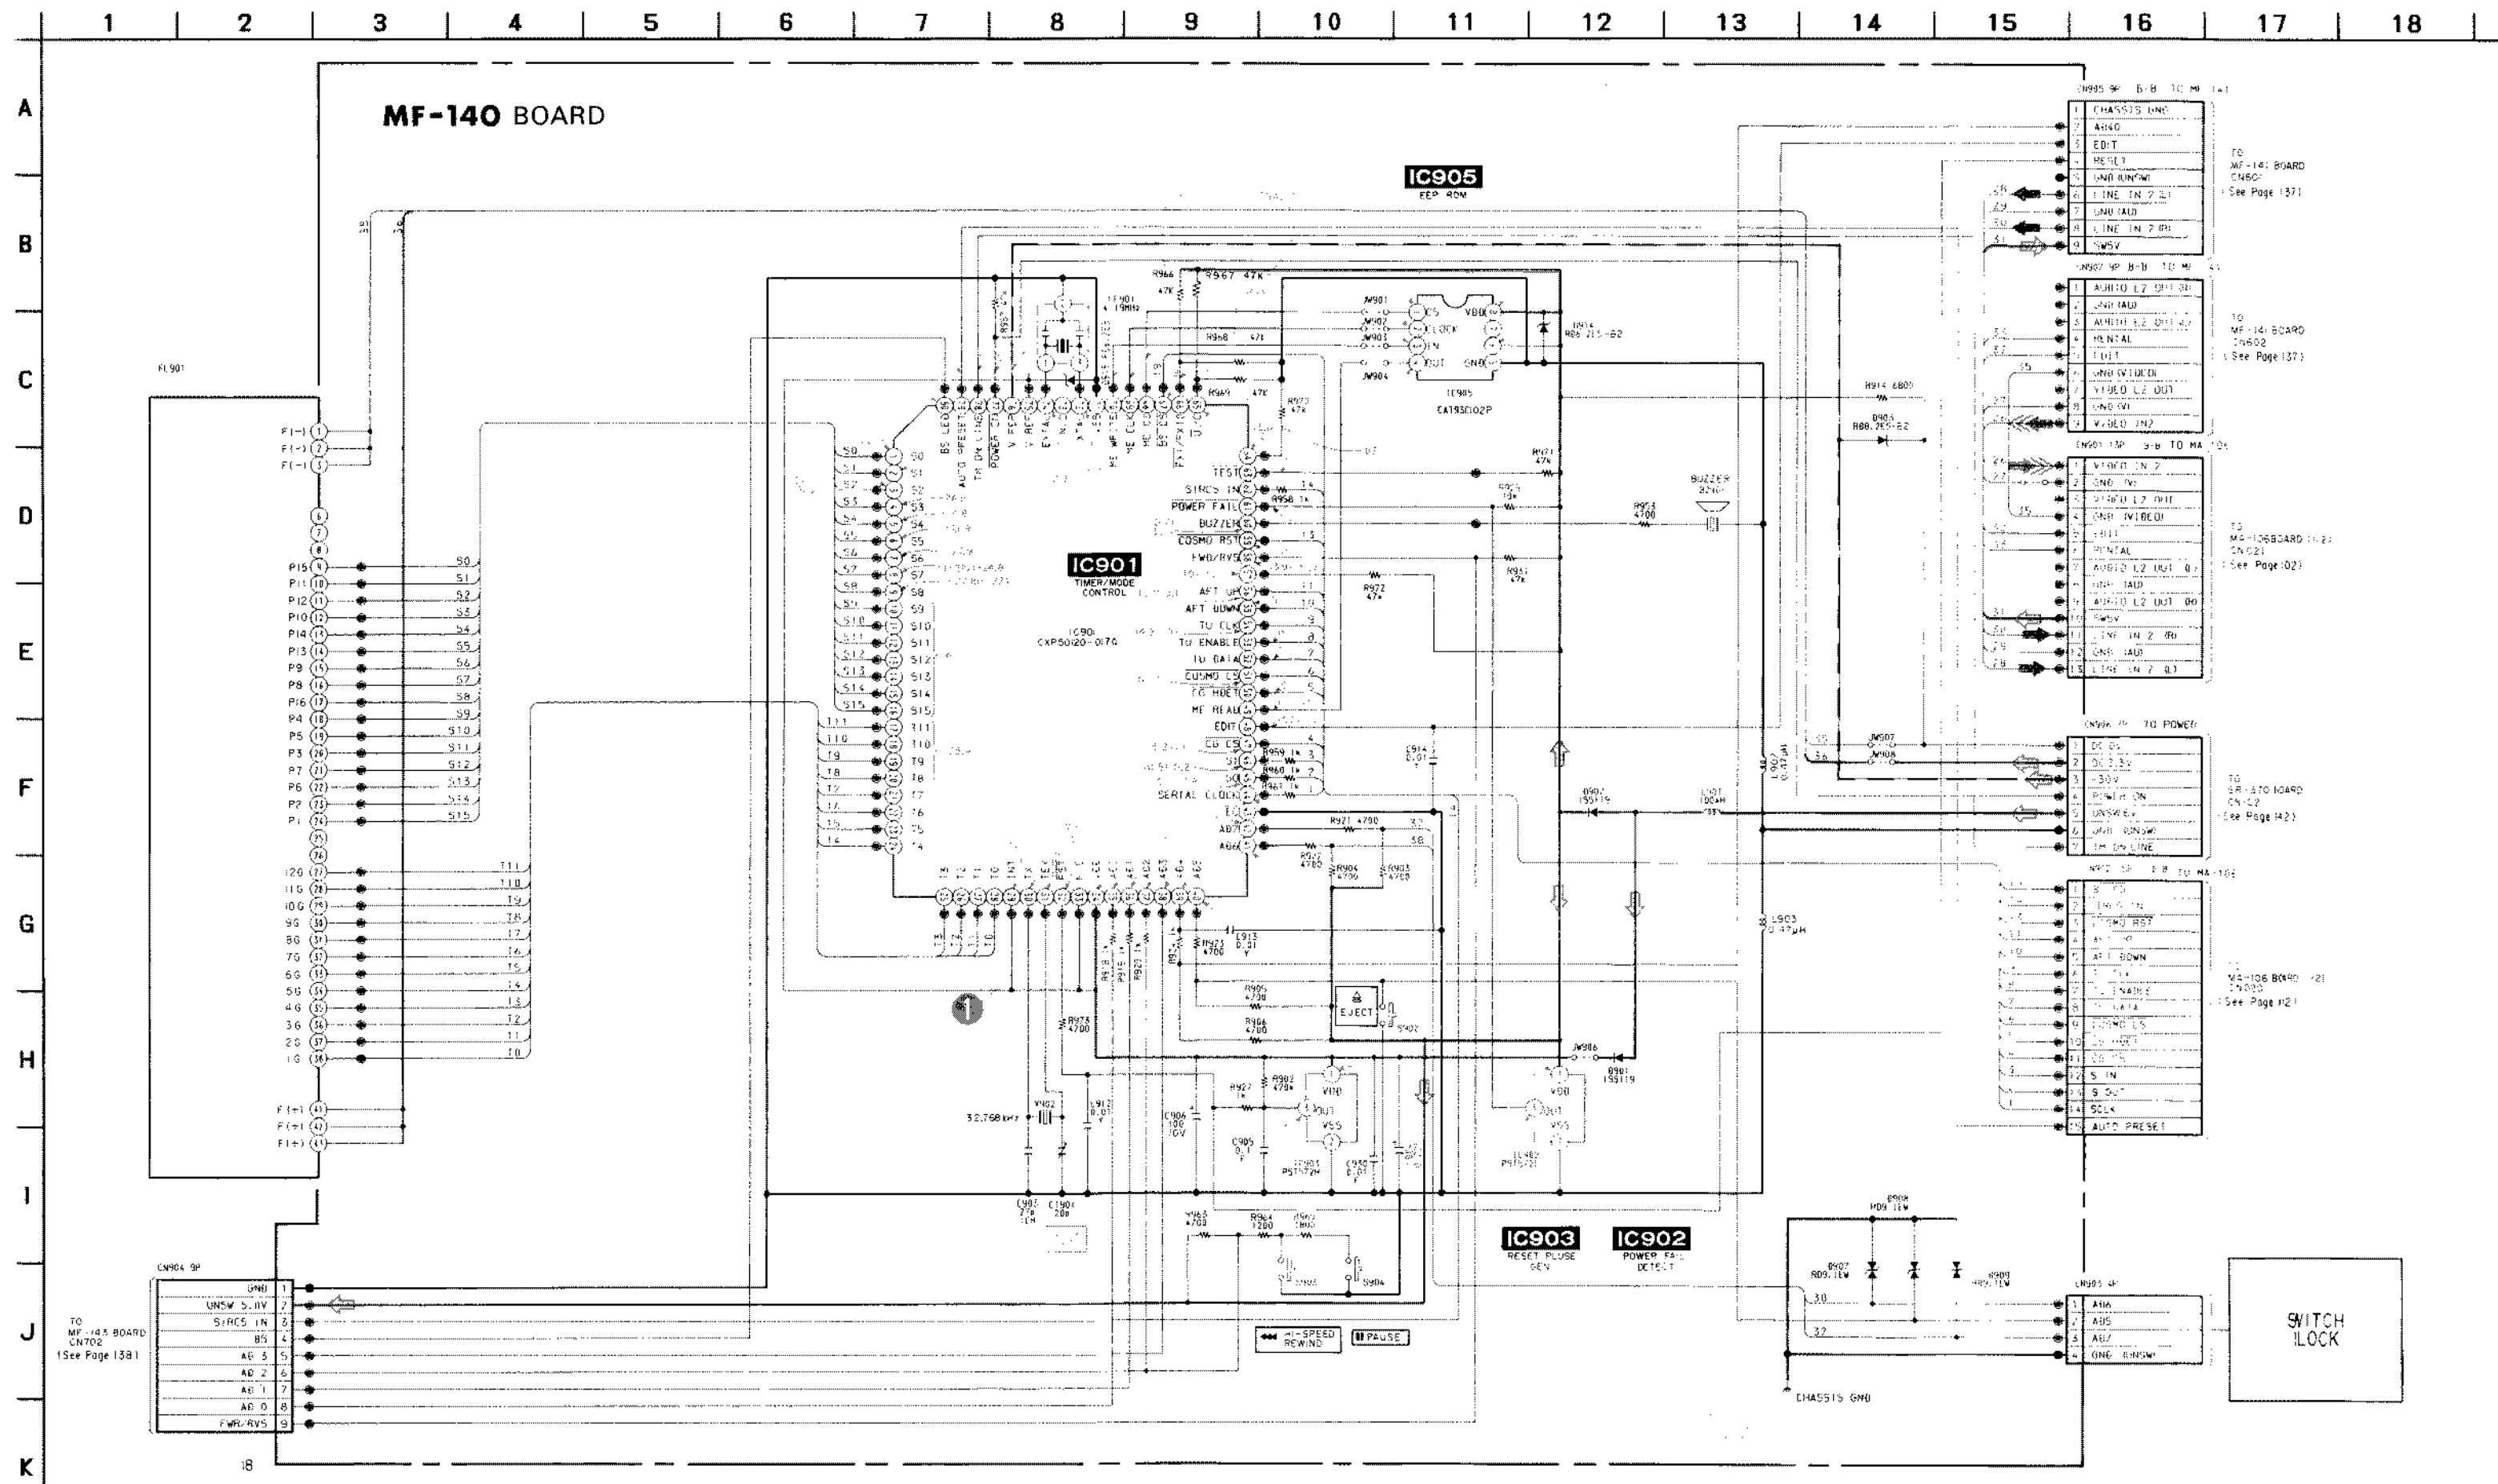

SIGNAL PATH


	CHROMA	VIDEO Signal	Y CHROMA	AUDIO Signal
REC		→	→	→
PB				

MF-141 (VIDEO/AUDIO IN) MF-143 (FUNCTION SWITCH) PRINTED WIRING BOARDS

—Ref. No. MF-141 BOARD: 3,000 series, MF-143 BOARD: 1,000 series—


MF-143 BOARD

- CN701 D-2
- CN702 A-4
- IC701 B-1

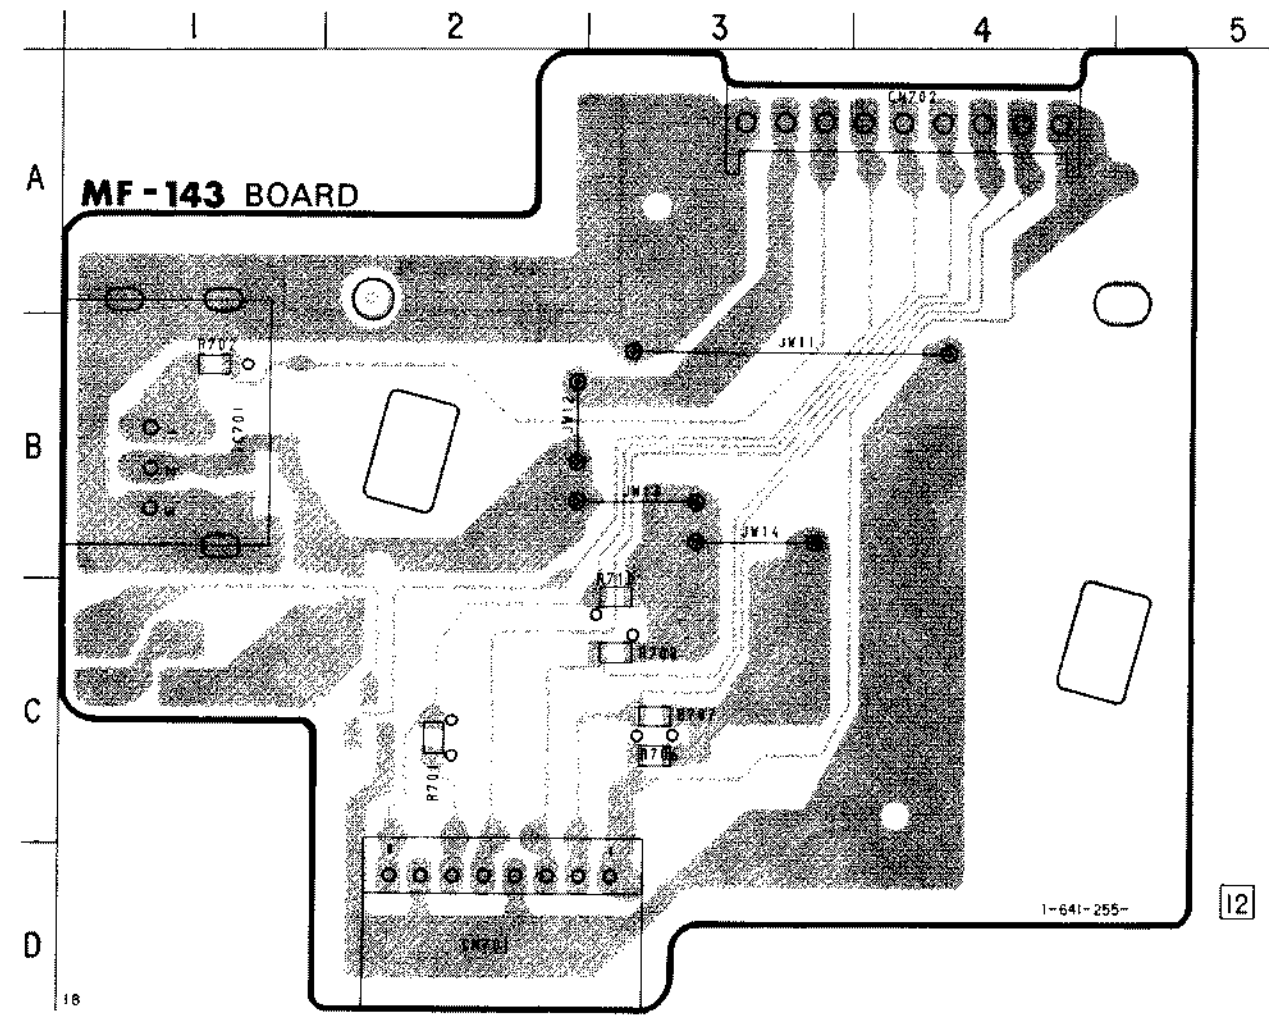

MF-141 BOARD

- CN601 B-1
- CN602 C-1
- D601 A-8
- D602 A-7
- D604 C-7

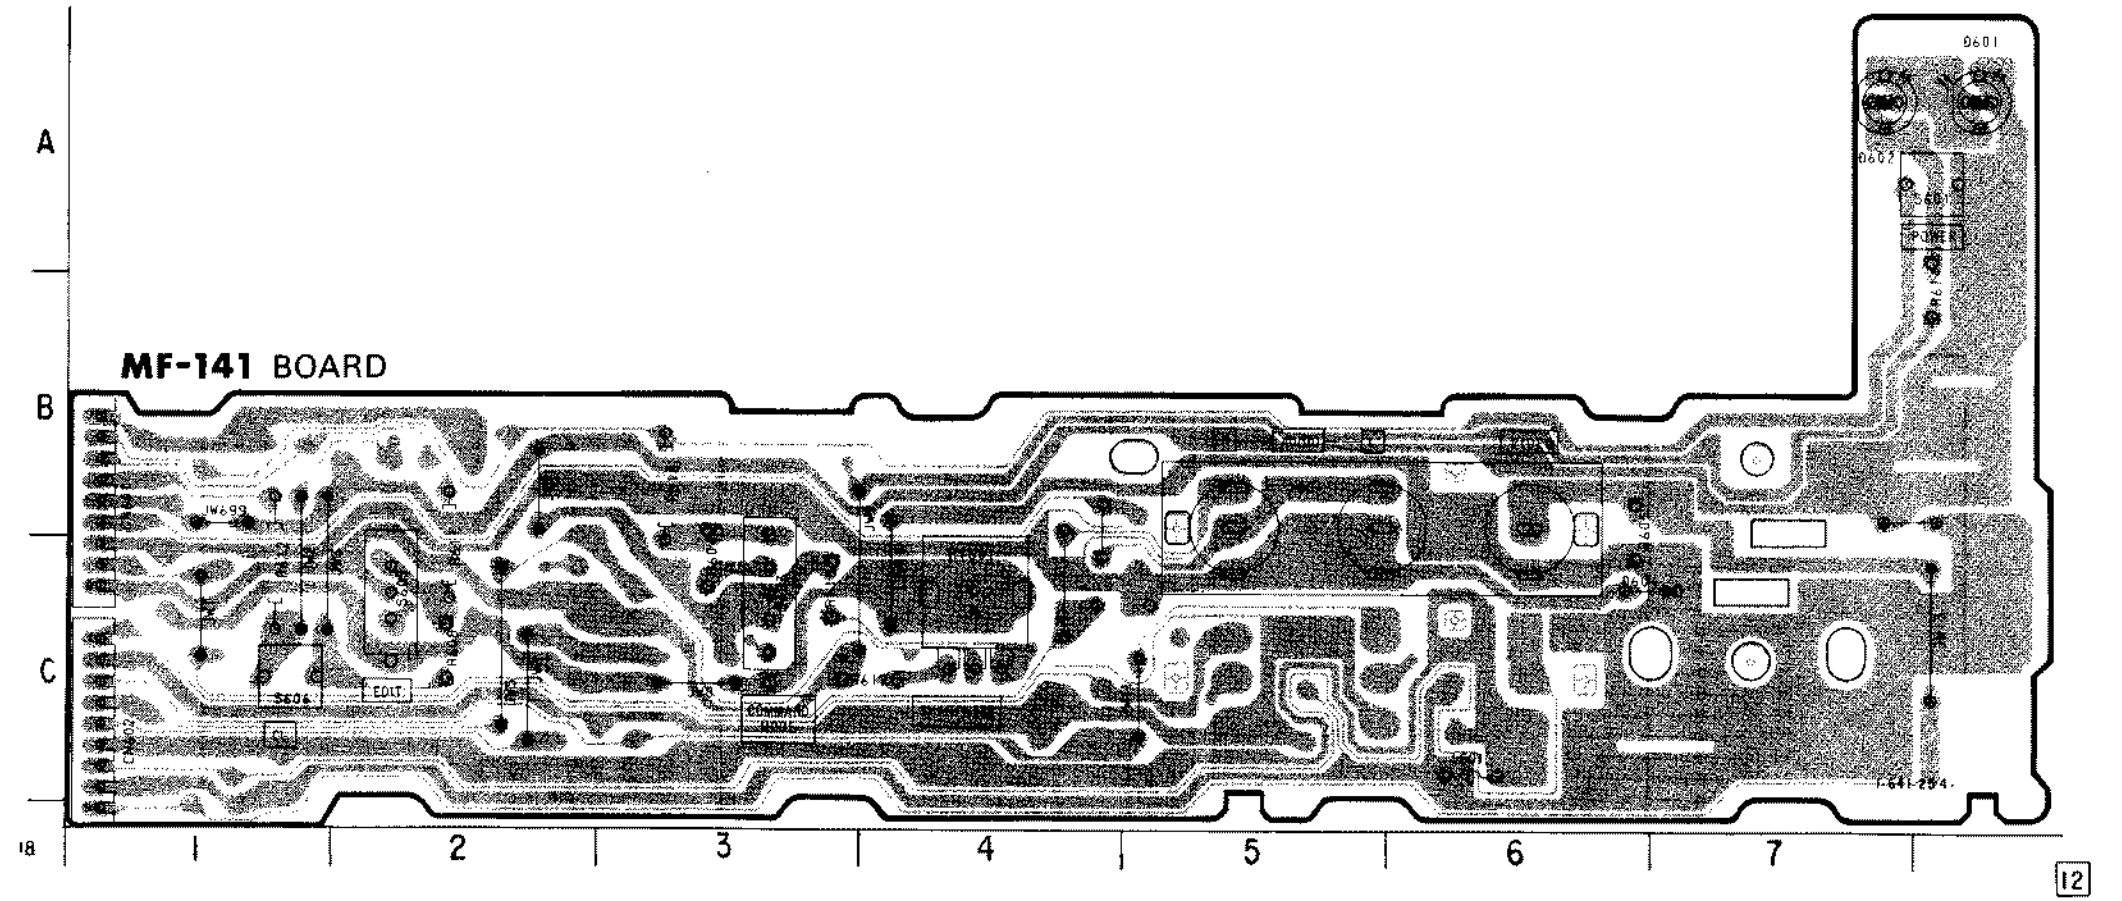

SR-370 (POWER) PRINTED WIRING BOARD

- Ref. No. SR-370 BOARD: 4,000 series -

JVC


SR-370 BOARD

CN101 A-10
CN102 C-10

D101 A-3
D102 A-4
D103 C-4
D104 C-4
D105 C-4
D106 C-4
D107 C-3
D108 C-4
D109 C-5
D110 A-3
D201 A-6
D202 A-6
D204 B-6
D205 B-6
D206 C-6
D207 C-6

IC201 C-8
IC202 B-8
IC203 C-6
IC204 A-9


Q101 B-4
Q102 C-3
Q201 A-7
Q202 A-9

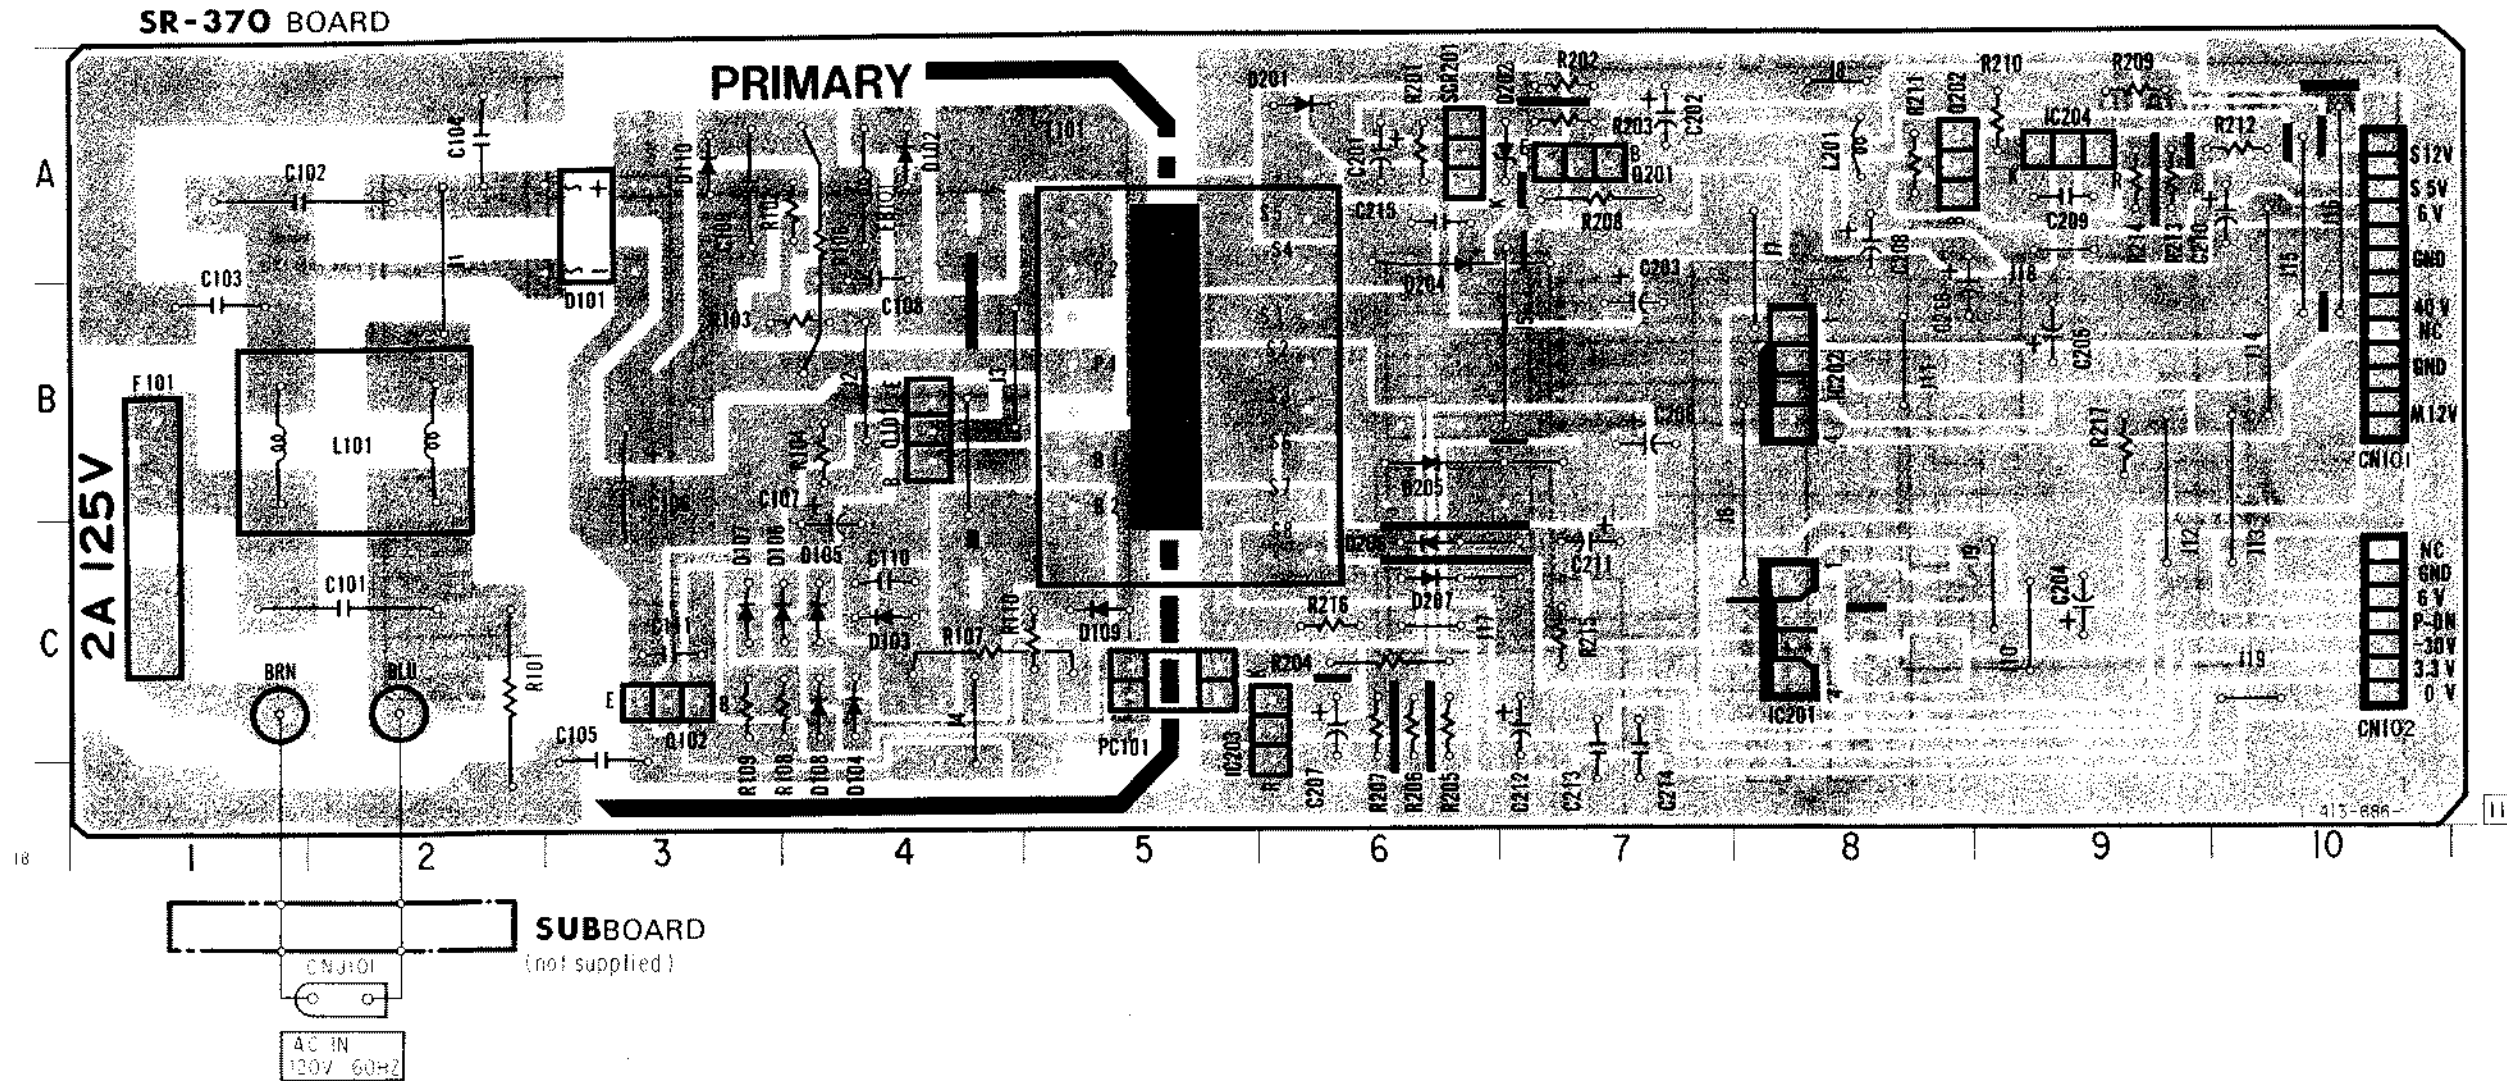

SR-370 (POWER) SCHEMATIC DIAGRAM

-Ref. No. SR-370 BOARD: 4,000 series

3-3 SEMICONDUCTOR LEAD LAYOUT

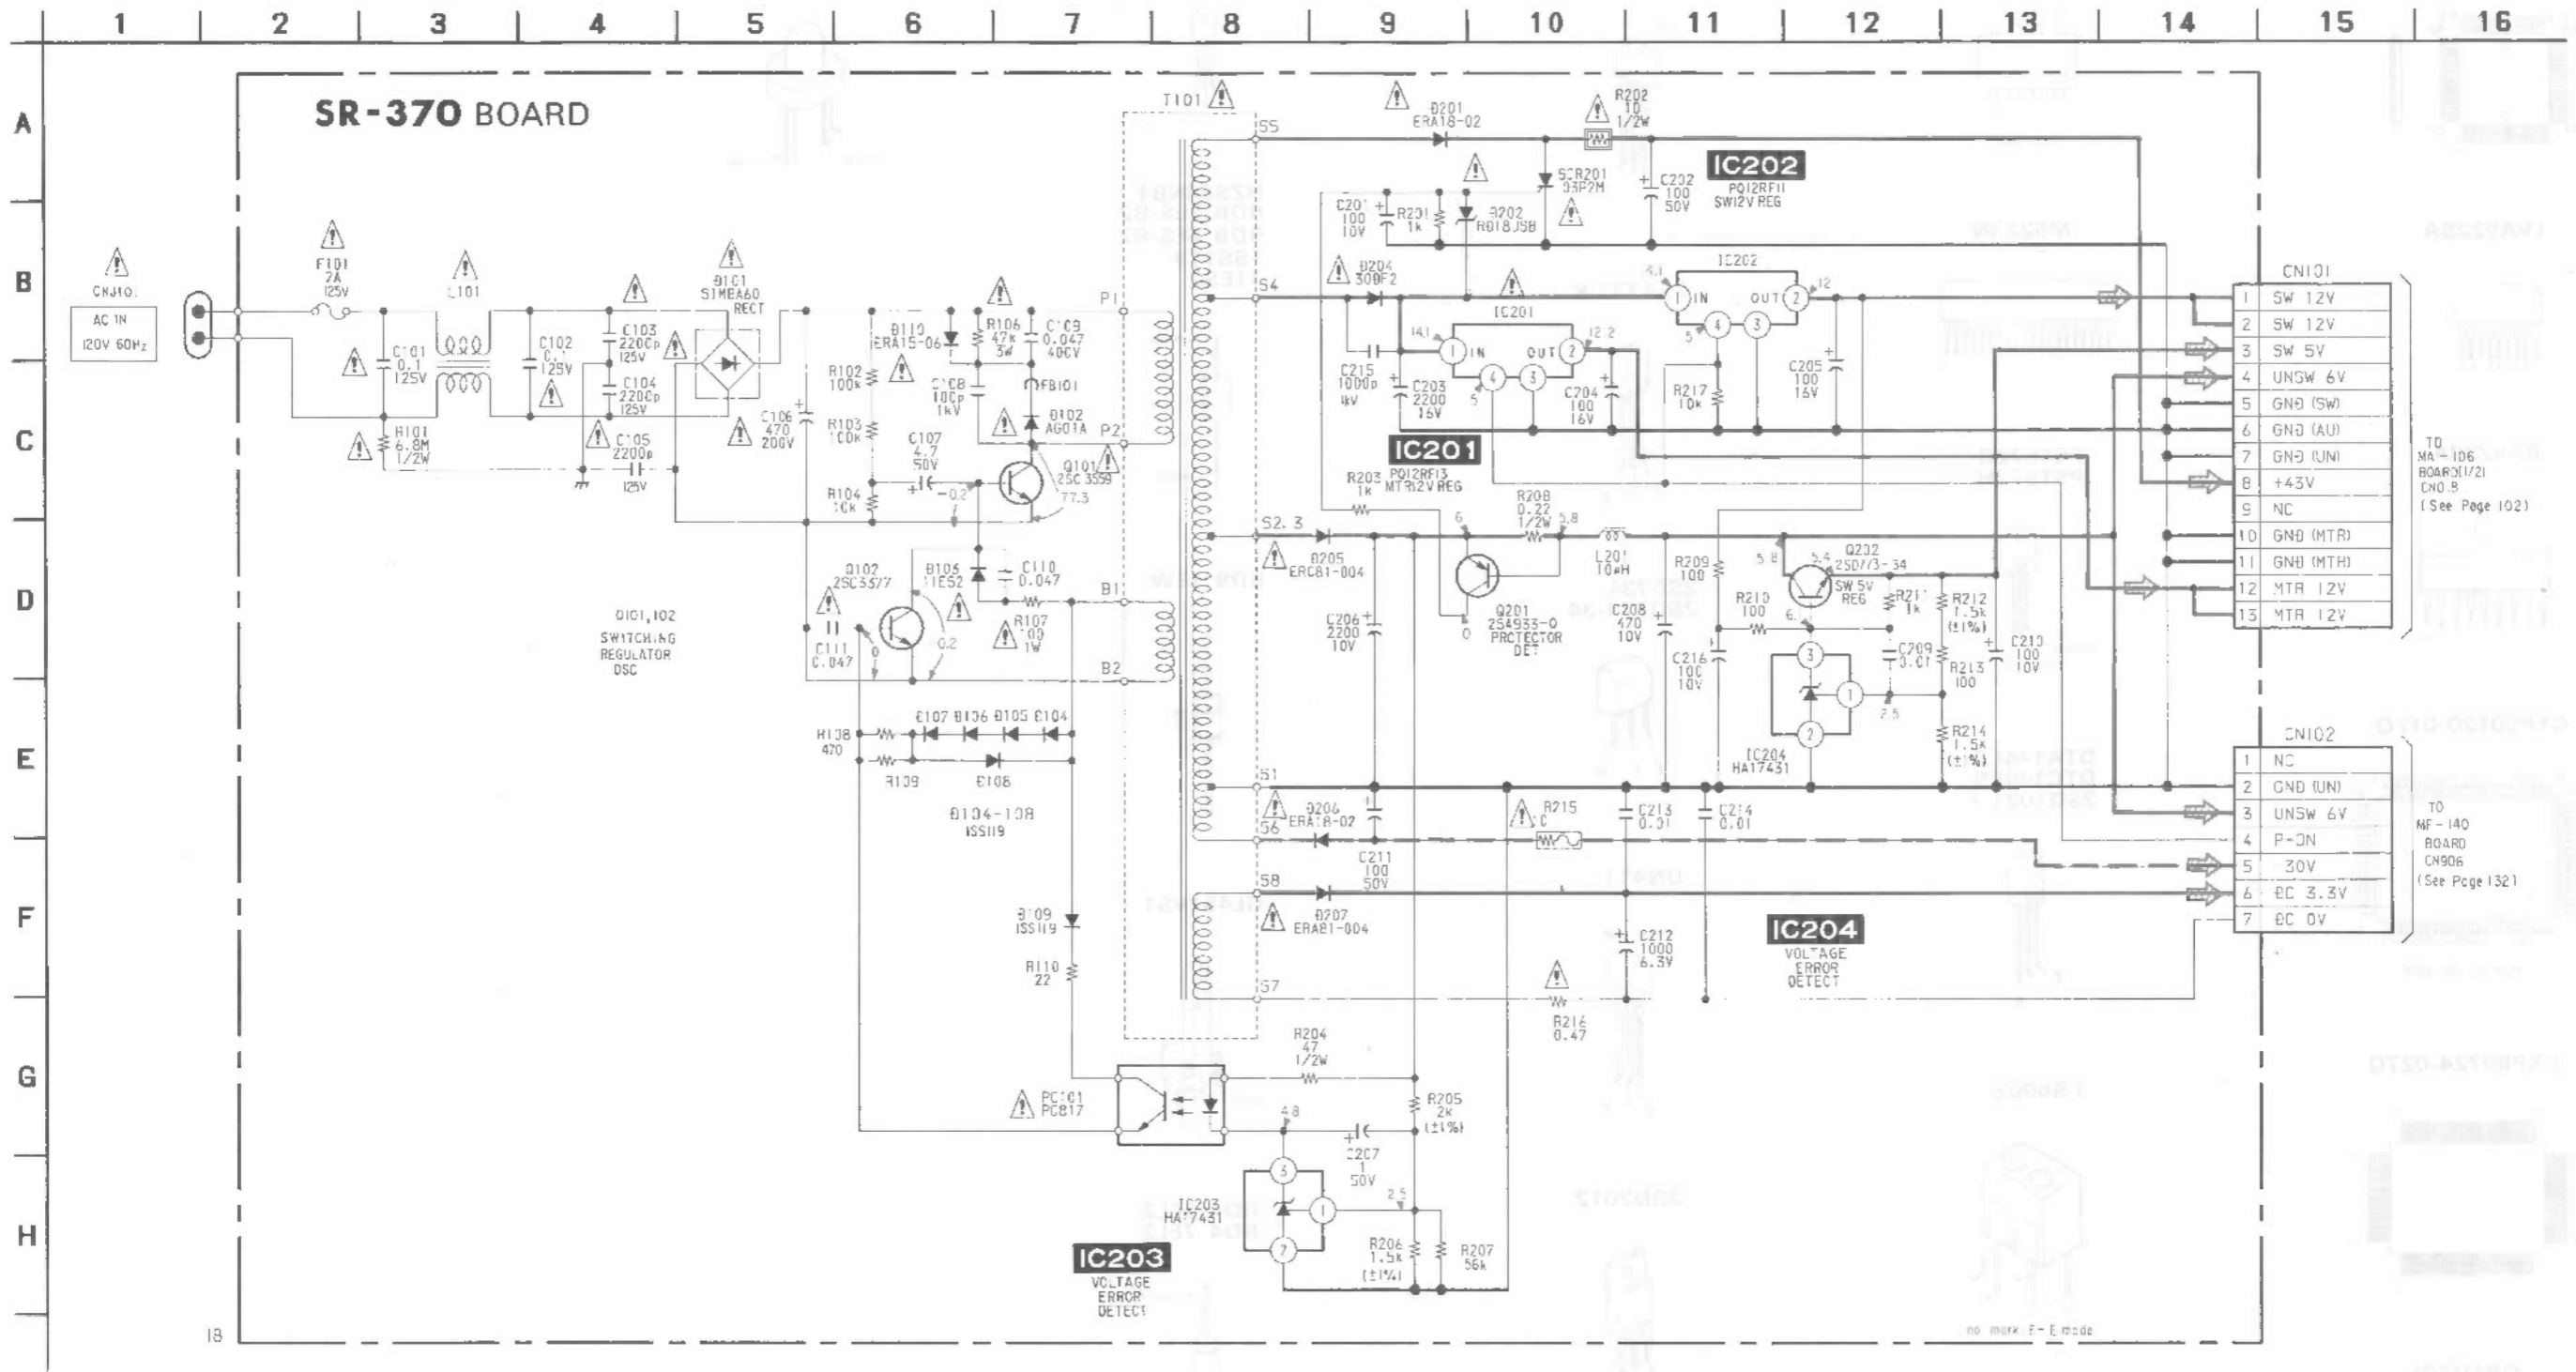

CN101	
1	SW 12V
2	SW 12V
3	SW 5V
4	UNSW 6V
5	GND (SW)
6	GND (AU)
7	GND (UN)
8	+43V
9	NC
10	GND (MTR)
11	GND (MTR)
12	MTR 12V
13	MTR 12V

TO MA-106 BOARD(1/2) CNO.8 (See Page 102)

CN102	
1	NC
2	GND (UN)
3	UNSW 6V
4	P-ON
5	30V
6	EC 3.3V
7	EC 0V


TO MF-140 BOARD CNO.6 (See Page 132)

NPN PNP


4-3. SEMICONDUCTOR LEAD LAYOUT

SR-370 BOARD SCHEMATIC DIAGRAM


AN3937NFBP

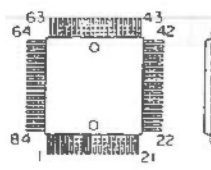


LC8991

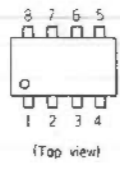


2SA1309A-R

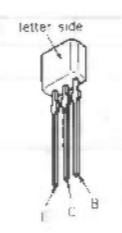

2SC3779C

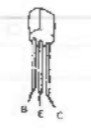


SLR-305MC3F

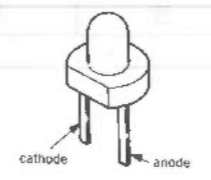


LVA522SA




M5223N

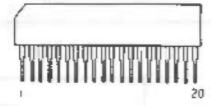


2SA733-K

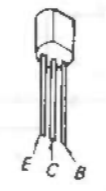


HZS33NB1
RD6.2ES-B2
RD8.2ES-B2
1SS119
11ES2

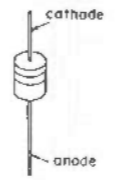


BA6238A

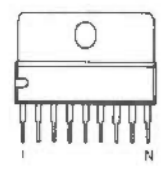


PST572C
PST572H

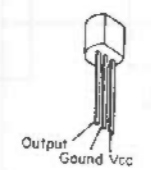


2SB734
2SD774-34

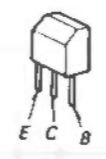


RD9.1EW

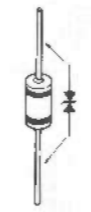

CXP50120-017Q

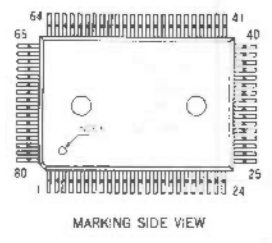


DTA144ES
DTC144ES
2SD1021-F

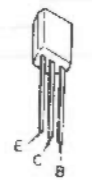


UN411L




GL451VS1

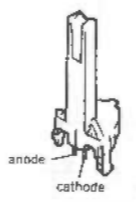


CXP80724-027Q

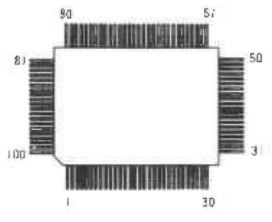


PS6002

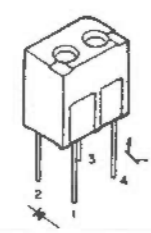


2SD2012

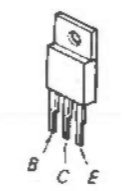


RD4.3EL2
RD4.7EL2

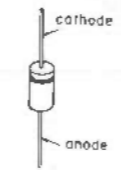

GP1U52X

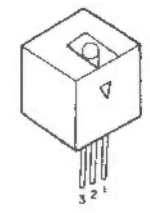

PT483FIS

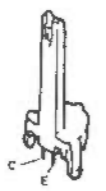



SECTION 5 EXPLODED VIEWS


NOTE:

- -XX, -X mean standardized parts, so they may have some differences from the original one.
- Color Indication of Appearance Parts
Example:
KNOB, BALANCE(WHITE)...(RED)


Parts color Cabinet's color

- Items marked " * " are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- The mechanical parts with no reference number in the exploded views are not supplied.
- hardware (#mark) list is given in the last of this parts list.

The components identified by mark  or dotted line with mark  are critical for safety. Replace only with part number specified.

Les composants identifiés par une marque  sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.


5-1. FRONT PANEL AND CABINET ASSEMBLIES

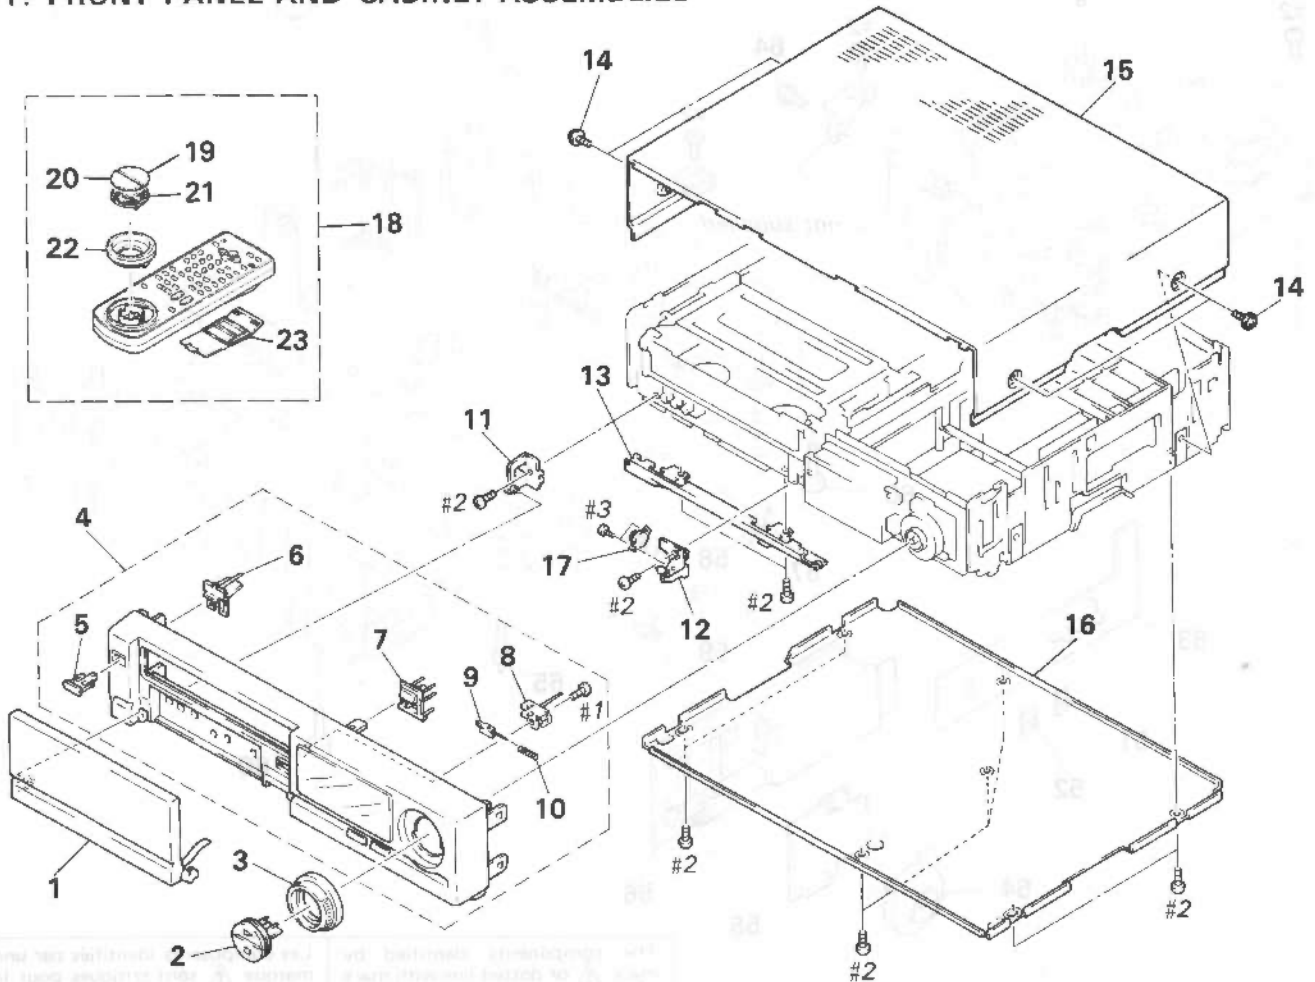




Ref. No.	Part No.	Description	Remark
1	1-466-627-21	SWITCH BLOCK, CONTROL (SLV-595HF)	
1	1-466-627-31	SWITCH BLOCK, CONTROL (SLV-696HF)	
2	X-3941-295-1	BUTTON ASSY, FUNCTION	
3	3-944-572-11	RING, SHUTTLE	
4	X-3941-015-1	PANEL ASSY, FRONT (SLV-595HF)	
4	X-3941-016-1	PANEL ASSY, FRONT (SLV-696HF)	
5	3-944-561-11	BUTTON, POWER	
6	3-944-562-01	CHIP, POWER BUTTON	
7	3-944-560-11	BUTTON, EJECT	
8	3-944-563-01	CASE, LOCK CLAW	
9	3-944-564-01	CLAW, LOCK	
10	3-944-565-01	SPRING, COMPRESSION	
11	X-3941-003-1	PLATE (L) ASSY, FULCRUM	

Ref. No.	Part No.	Description	Remark
12	X-3941-002-1	PLATE (R) ASSY, FULCRUM	
13	3-944-570-11	ESCUTCHEON, FRAME	
14	3-710-901-41	SCREW, TAPPING	
15	3-944-553-11	COVER, UPPER	
* 16	3-944-552-01	PLATE, BOTTOM	
17	3-712-786-31	DAMPER, OIL	
18	1-465-915-11	REMOTE COMMANDER (RMT-V102D) (SLV-595HF)	
18	1-465-916-11	REMOTE COMMANDER (RMT-V112A) (SLV-696HF)	
19	3-941-617-11	BUTTON, PLAYBACK	
20	3-941-618-11	BUTTON, STOP	
21	3-941-619-01	HOLDER, DIAL	
22	3-941-616-01	RING, SHUTTLE	
23	3-943-535-01	COVER, BATTERY	

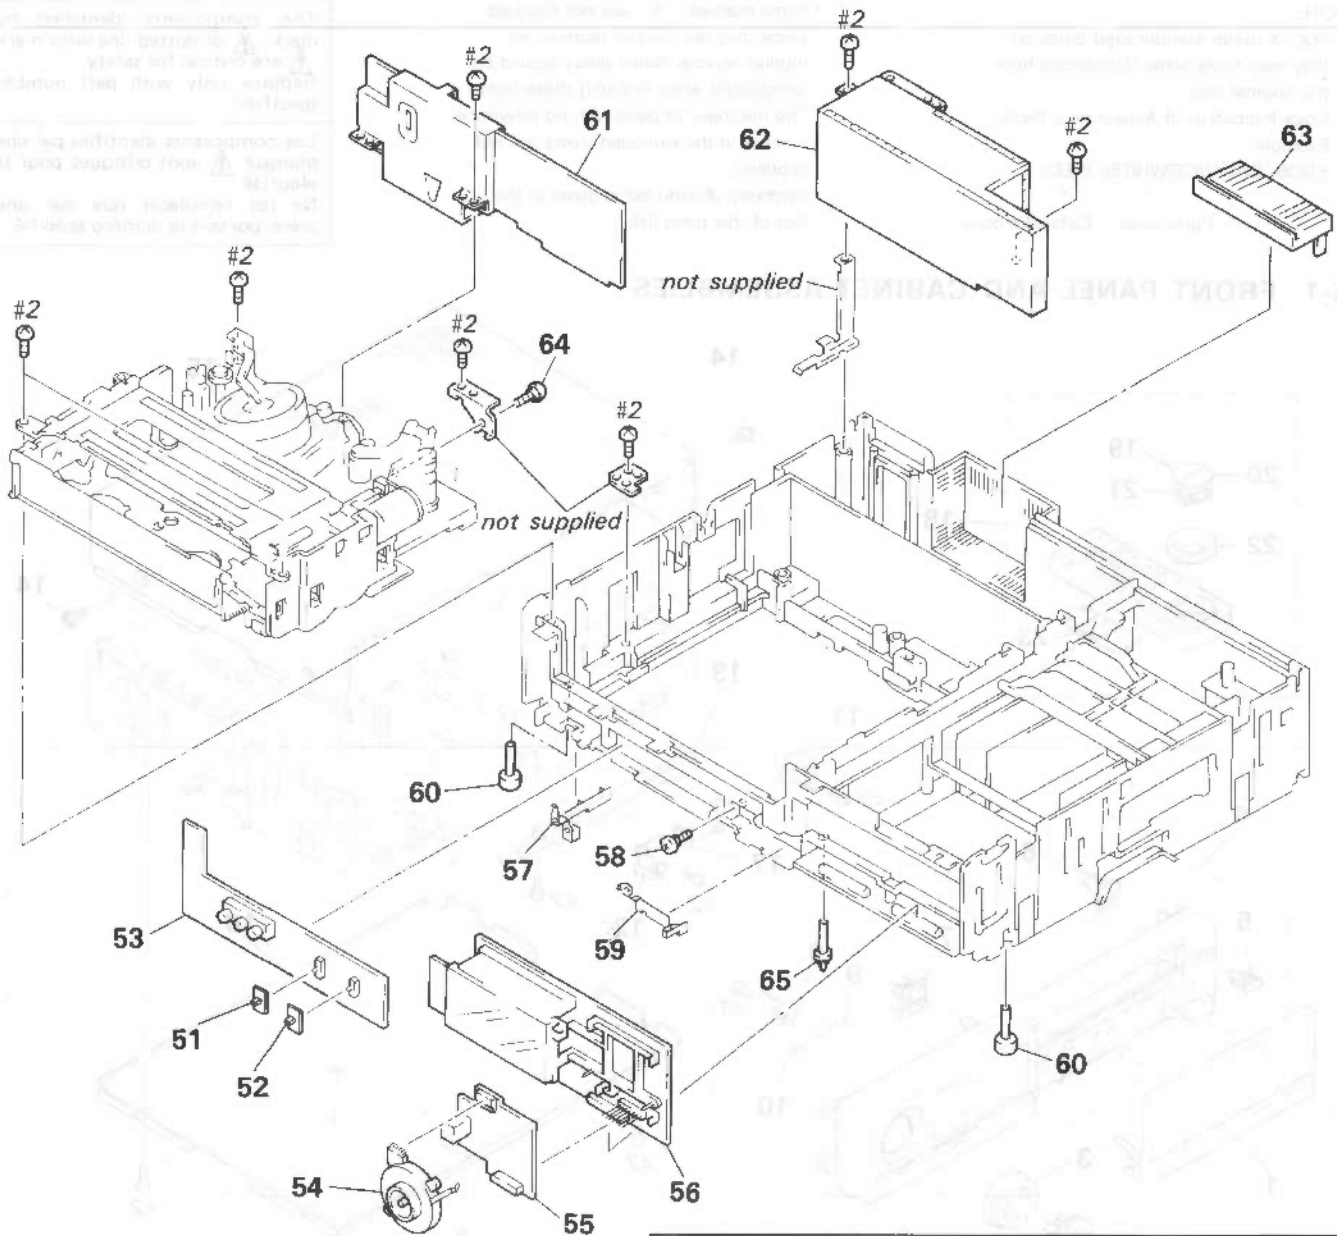
5-2. MODE CONTROL AND POWER BLOCK ASSEMBLIES




The components identified by mark  or dotted line with mark  are critical for safety. Replace only with part number specified.



Les composants identifiés par une marque  sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.


Ref. No.	Part No.	Description	Remark
51	3-946-831-01	KNOB, SELECTION (COMMAND MODE)	
52	3-744-217-01	KNOB, SELECTION (EDIT)	
* 53	A-6755-321-A	MF-141 BOARD, COMPLETE (SLV-595HF /SLV-696HF;Canadian)	
* 53	A-6755-324-A	MF-141 BOARD, COMPLETE (SLV-696HF;US)	
54	1-572-662-11	SWITCH, ROTARY	
* 55	A-6755-406-A	MF-143 BOARD, COMPLETE (SLV-696HF;US)	
* 55	A-6755-407-A	MF-143 BOARD, COMPLETE (SLV-595HF /SLV-696HF;Canadian)	
* 56	A-6721-440-A	MF-140 BOARD, COMPLETE (SLV-595HF)	
* 56	A-6721-442-A	MF-140 BOARD, COMPLETE (SLV-696HF)	

Ref. No.	Part No.	Description	Remark
* 57	3-944-613-01	PLATE, GROUND, MF	
58	3-741-948-01	SCREW (3), SPECIAL (+) TAPPING	
* 59	3-944-614-01	PLATE, GROUND, JK	
60	3-945-944-01	FOOT (1500)	
* 61	A-6727-393-A	RP-127 BOARD, COMPLETE (SLV-595HF)	
* 61	A-6727-394-A	RP-127 BOARD, COMPLETE (SLV-696HF)	
 62	1-413-686-21	POWER BLOCK (SR-370 BOARD) 16B	
* 63	3-946-136-01	COVER (S), REAR	
64	3-736-055-01	SCREW (3X8), TAPPING	
65	3-948-000-01	FOOT	

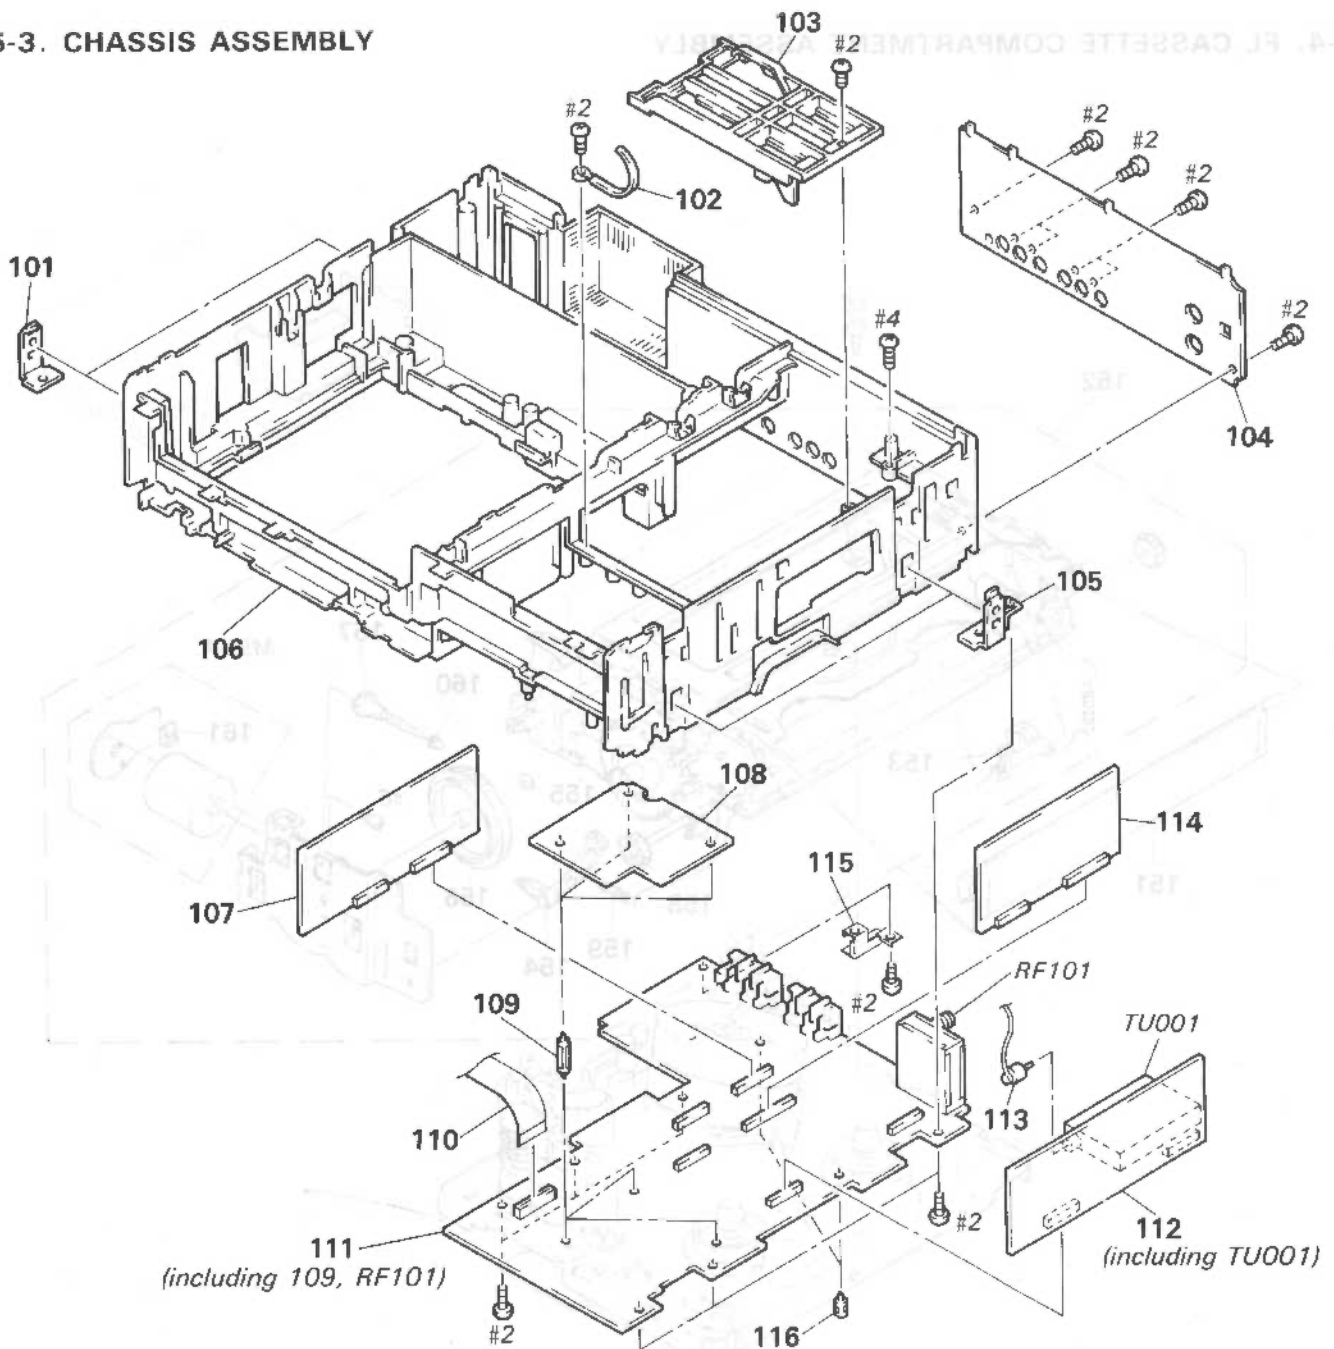

5-3. CHASSIS ASSEMBLY



The components identified by mark  or dotted line with mark  are critical for safety. Replace only with part number specified.


Les composants identifiés par une marque  sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

Ref. No.	Part No.	Description	Remark
* 101	3-741-992-01	STOPPER, UPPER CASE	
102	3-703-150-11	STOPPER, WIRING	
* 103	3-944-547-01	HOLDER (1500), FRAME	
104	3-944-546-21	PLATE, ORNAMENTAL, JACK (SLV-595HF)	
104	3-944-546-31	PLATE, ORNAMENTAL, JACK (SLV-696HF)	
* 105	3-944-544-01	STOPPER (S), UPPER COVER	
* 106	3-944-543-01	CHASSIS, MOLD	
* 107	A-6754-388-A	YC-114 BOARD, COMPLETE	
* 108	A-6754-389-A	CG-14 BOARD, COMPLETE	
109	3-945-945-01	SUPPORT (DIA. 3), PCB	

Ref. No.	Part No.	Description	Remark
110	1-690-347-11	WIRE, FLAT TYPE (22 CORE)	
* 111	A-6755-322-A	MA-106 BOARD, COMPLETE (SLV-595HF)	
* 111	A-6755-325-A	MA-106 BOARD, COMPLETE (SLV-696HF)	
* 112	A-6754-426-A	TU-132 BOARD, COMPLETE	
113	1-555-110-00	CABLE, PIN	
* 114	A-6754-427-A	HF-24 BOARD, COMPLETE	
* 115	3-741-962-01	PLATE, GROUND, JMP	
116	3-682-057-11	SPACER (SMALL)	
 RF101	1-466-150-11	MODULATOR, RF (RFU-1025)	
 TU001	1-465-239-21	TUNER, ET	

5-4. FL CASSETTE COMPARTMENT ASSEMBLY


FL CASSETTE COMPARTMENT ASSEMBLY

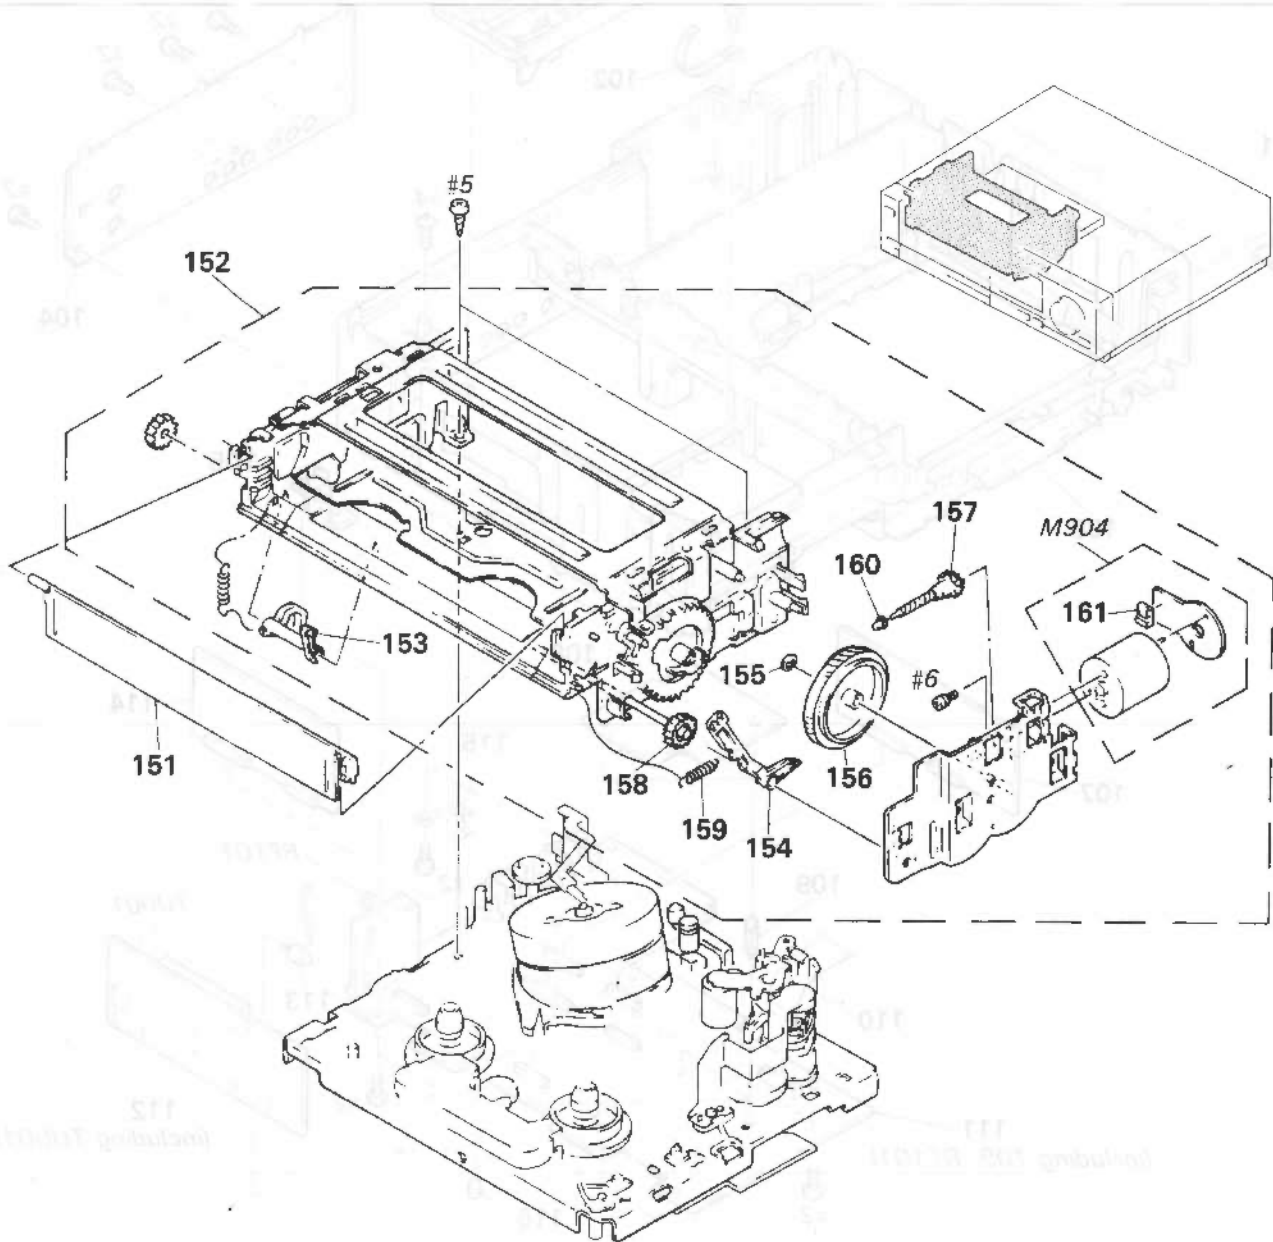

Ref. No.	Part No.	Description	Remark
151	3-945-199-11	DOOR, FL	
152	A-6751-453-A	FL BLOCK ASSY	
153	3-736-163-01	LEVER, ERASING PROTECTION	
154	3-736-167-01	ARM, DOOR SWITCHING	
155	3-696-510-01	WASHER (3), STOPPER	
156	3-736-164-01	WHEEL (FL), WORM	


Ref. No.	Part No.	Description	Remark
157	3-736-100-01	GEAR (FL), WORM	
158	X-3727-775-2	GEAR (RIGHT) ASSY, MIDWAY	
159	3-738-285-01	SPRING, TENSION	
160	3-716-144-02	RETAINER, WORM	
161	1-506-482-11	CONNECTOR 3P, MALE	
M904	X-3727-784-1	MOTOR ASSY (LOADING)	

5-5. MECHANISM CHASSIS ASSEMBLY (1)

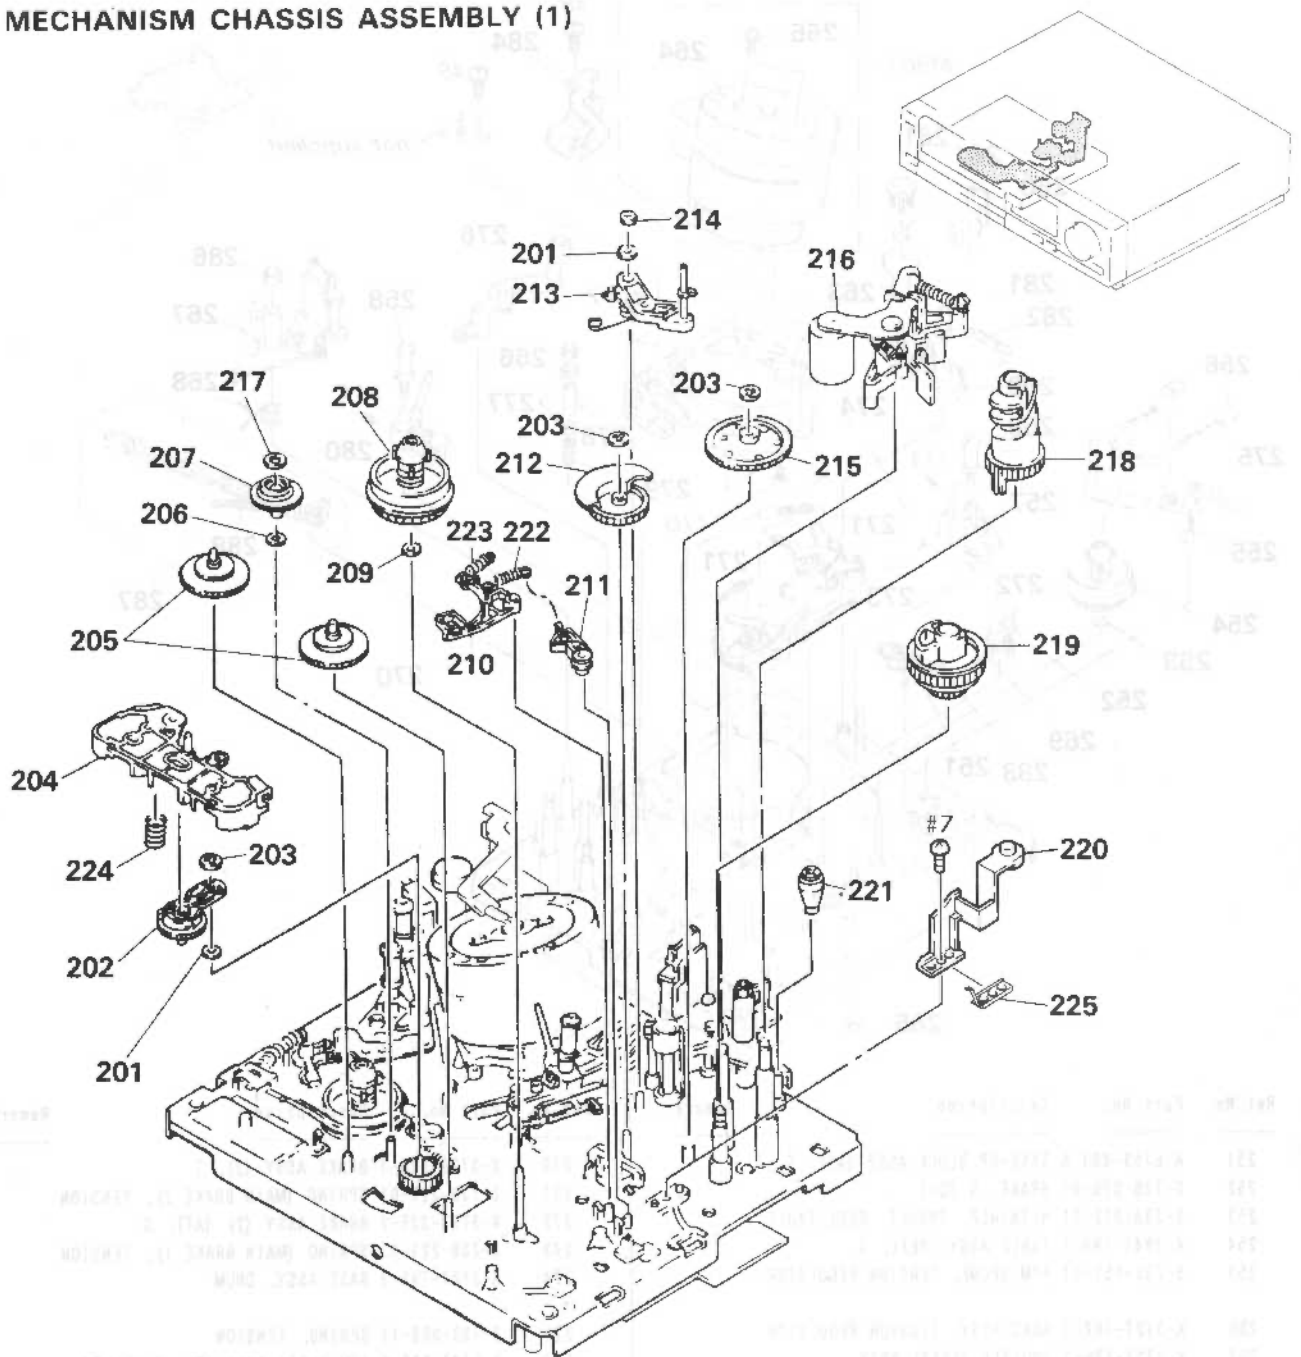


Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
201	3-701-438-11	WASHER, 2.5		214	3-736-740-01	NUT (M2X0.25), NYLON	
202	X-3727-776-1	ARM ASSY, PENDULUM		215	3-736-116-01	GEAR, COMMUNICATION	
203	3-669-595-00	WASHER (2), STOPPER		216	X-3727-770-1	PINCH ROLLER BLOCK ASSY	
204	3-736-172-02	RELEASE, LOCK, REEL		217	3-736-069-01	RETAINER, SPRING	
205	X-3727-795-1	GEAR ASSY, RELAY		218	3-736-136-01	CAM, ELEVATOR	
206	3-736-074-01	RETAINER (SMALL), THRUST		219	3-943-700-01	GEAR (LO), PRESS CAM	
207	3-736-037-01	GEAR, REW		220	3-942-828-01	OPENNER, LID	
208	X-3727-798-1	TABLE ASSY, REEL		221	3-738-250-01	SCREW, AC ADJUSTMENT	
209	3-738-212-21	RETAINER, THRUST, REEL TABLE		222	3-736-025-01	SPRING (REV BRAKE), TENSION	
210	X-3733-335-1	BRAKE ASSY (AT), T SOFT		223	3-736-024-01	SPRING, TENSION	
211	3-736-105-01	ARM, REV BRAKE		224	3-736-020-11	SPRING, COMPRESSION	
212	3-736-143-01	GEAR, RVS CAM		225	3-942-829-01	SPRING (2) (ATOM), GROUND, FL	
213	X-3729-911-1	ARM ASSY, RVS					

5-6. MECHANISM CHASSIS ASSEMBLY (2)

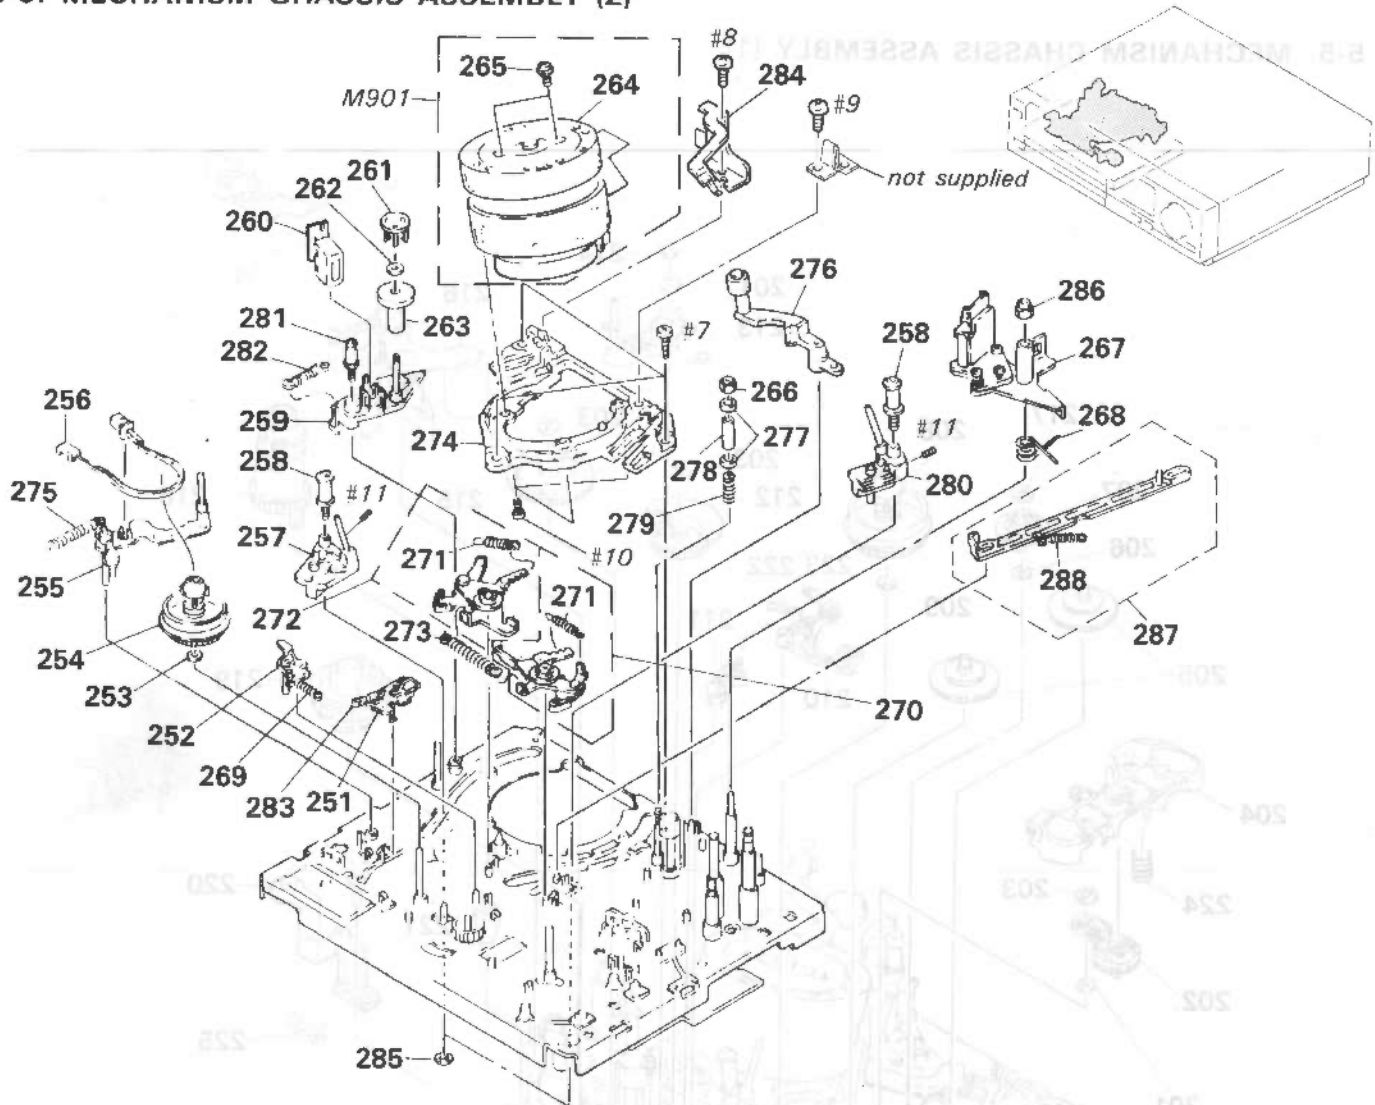

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
251	A-6759-483-A	TAKE-UP BLOCK ASSY (AT), S		270	X-3729-926-1	BRAKE ASSY (2), T	
252	3-736-075-01	BRAKE, S SOFT		271	3-738-220-01	SPRING (MAIN BRAKE 2), TENSION	
253	3-738-212-21	RETAINER, THRUST, REEL TABLE		272	X-3733-336-2	BRAKE ASSY (2) (AT), S	
254	X-3941-194-1	TABLE ASSY, REEL, S		273	3-738-221-01	SPRING (MAIN BRAKE 1), TENSION	
255	3-736-151-11	ARM (POM), TENSION REGULATOR		274	X-3727-791-2	BASE ASSY, DRUM	
256	X-3727-797-1	BAND ASSY, TENSION REGULATOR		275	3-733-389-11	SPRING, TENSION	
257	X-3727-786-1	SHUTTLE (LEFT) ASSY		276	A-6747-267-A	ARM BLOCK ASSY (S), C ROLLER	
258	X-3733-301-1	ROLLER ASSY, GUIDE		277	3-944-033-01	FLANGE, 7 GUIDE	
259	X-3727-787-1	BASE ASSY, STABILIZER		278	3-736-730-01	SLEEVE, #7 GUIDE	
260	1-543-647-11	HEAD, FE		279	3-749-099-01	SPRING (#7 GUIDE), COMPRESSION	
261	3-736-082-01	RETAINER, TS THRUST		280	X-3727-787-1	SHUTTLE (RIGHT) ASSY	
262	3-741-925-01	RING, RETAINING		281	X-3727-788-1	ROLLER ASSY, GUIDE, #2	
263	X-3727-771-1	STABILIZER ASSY, TAPE		282	3-736-745-01	SPRING	
264	8-848-581-01	DRUM ASSY, ROTARY UPPER (DZR-49-R) (SLV-696HF)		283	3-738-284-01	SPRING, TENSION	
264	8-848-583-01	DRUM ASSY, ROTARY UPPER (DZR-50-R) (SLV-595HF)		284	X-3733-304-1	GROUND ASSY, SHAFT	
265	2-643-205-01	SCREW (PSW) 3X8		285	3-736-073-01	SLIDER, POLYETHYLENE	
266	3-942-866-01	NUT (M3) (3X0.5), NYLON		286	3-942-867-01	NUT, AC HEIGHT ADJUSTMENT	
267	A-6761-129-C	HEAD BLOCK ASSY, ACE		287	X-3743-517-1	LEVER (S), RELEASE, C ROLLER	
268	3-944-833-01	SPRING, TORSION		288	3-736-735-03	SPRING, TENSION	
269	3-736-047-01	SPRING (S SOFT), TENSION		M901	8-848-580-11	DRUM ASSY (DZH-49A-R) (SLV-696HF)	
				M901	8-848-582-11	DRUM ASSY (DZH-50A-R) (SLV-595HF)	

5-7. MECHANISM CHASSIS ASSEMBLY (3)

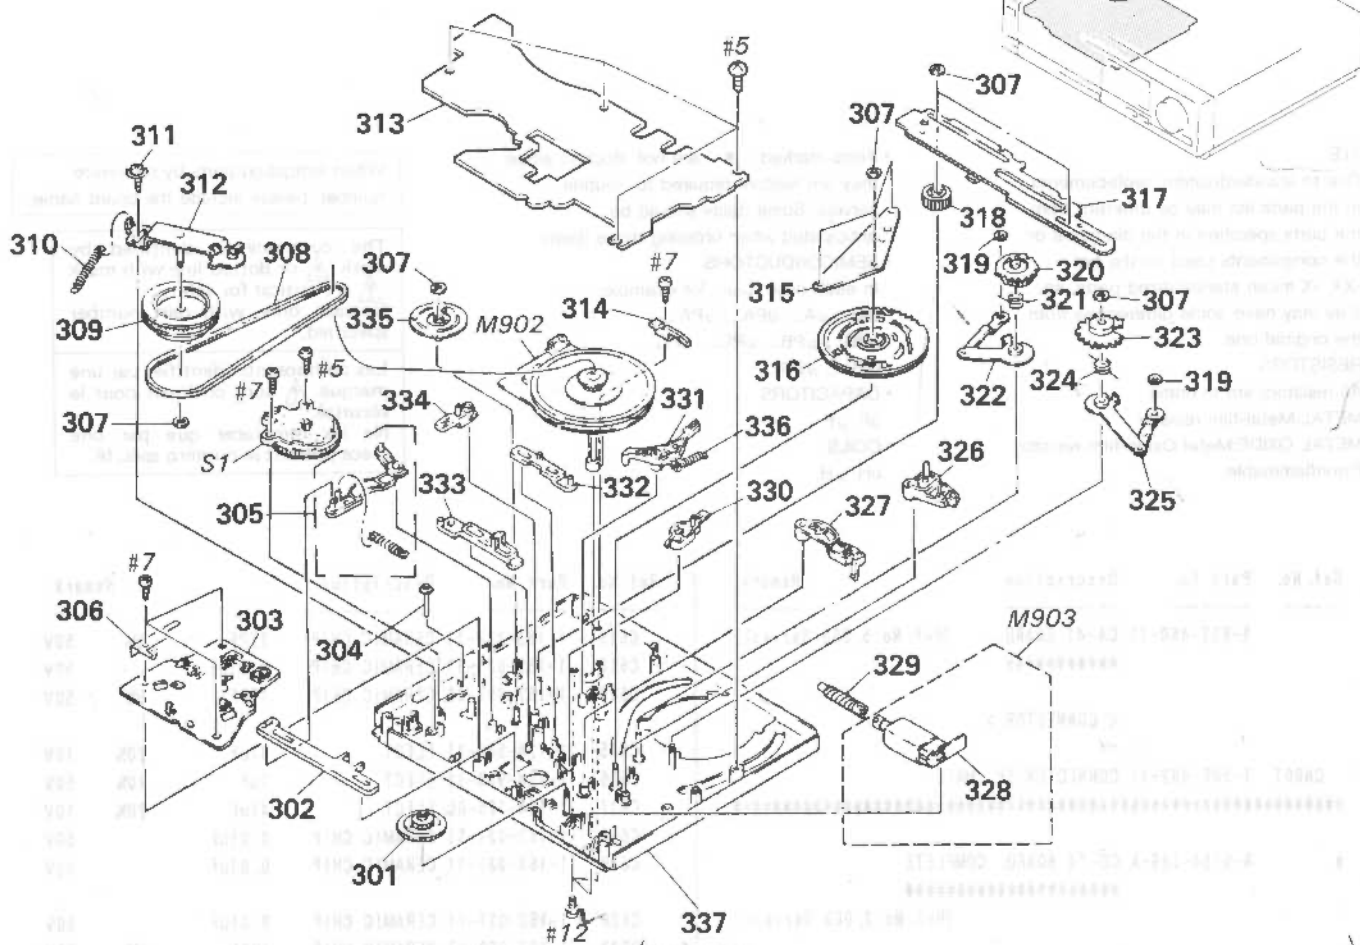

(including
 201-207, 209-221, 224, 225, 251-253, 255-258,
 266, 268, 275, 277-280, 283, 285, 286, 301, 302,
 304, 307-312, 315-327, 330-336, S1

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
301	3-736-015-01	WHEEL (CAM), WORM		321	3-736-092-01	SPRING (RIGHT), TORSION	
302	3-736-158-01	PLATE, SLIDE, PENDULUM		322	X-3727-777-1	ARM (RIGHT) ASSY, THREADING	
* 303	A-6739-096-A	CHASSIS BLOCK ASSY, SUB		323	3-736-147-01	GEAR (LEFT), THREADING	
304	3-736-091-01	PIN, SWITCH		324	3-736-040-01	SPRING (LEFT), TORSION	
305	X-3729-924-1	ARM, PENDULUM FUNCTION		325	X-3727-778-1	ARM (LEFT) ASSY, THREADING	
306	3-741-950-01	SPRING (AT), LEAF, SC GROUND		326	3-736-142-01	ARM, TENSION REGULATOR FUNCTION	
307	3-669-595-00	WASHER (2), STOPPER		327	3-736-140-01	ARM, S TAKE-UP	
308	3-736-013-01	BELT, TIMING		* 328	1-633-460-11	CA-41 BOARD	
309	X-3940-646-1	PULLEY ASSY		329	3-733-395-01	GEAR (CAM), WORM	
310	3-736-089-01	SPRING, TENSION		330	3-733-397-01	ARM, BRAKE FUNCTION	
311	3-733-386-01	SCREW (3X8), WASHER		331	X-3733-338-1	BRAKE ASSY (AT), CAP	
312	X-3940-645-1	ARM ASSY, ADJUSTMENT		332	3-733-398-01	PLATE, SLIDE, BRAKE	
* 313	A-6754-303-A	MD-54 BOARD, COMPLETE		333	3-736-103-01	PLATE, SLIDE, LIMITER	
314	3-736-744-01	RETAINER, ROTOR		334	3-736-016-01	ARM, LIMITER FUNCTION	
315	3-733-396-01	HOLDER, CAM GEAR		335	3-736-170-01	GEAR, RKB CAM	
316	3-736-176-01	GEAR, CAM		336	3-738-237-01	SPRING (CAP BRAKE), TENSION	
317	3-736-177-01	PLATE, SLIDE, MODE		* 337	A-6773-508-A	MD BLOCK ASSY	
318	3-733-394-01	GEAR, RVS RELAY		M902	8-835-469-01	MOTOR, DC U-26J (CAPSTAN)	
319	3-736-073-01	SLIDER, POLYETHYLENE		M903	X-3733-302-1	MOTOR ASSY, CAM	
320	3-736-148-01	GEAR (RIGHT), THREADING		S1	1-692-062-21	SWITCH, ROTARY	

CA-41

CG-14

SECTION 6 ELECTRICAL PARTS LIST

NOTE:

• Due to standardization, replacements in the parts list may be different from the parts specified in the diagrams or the components used on the set.

• -XX, -X mean standardized parts, so they may have some differences from the original one.

RESISTORS

All resistors are in ohms
 METAL: Metal-film resistor
 METAL OXIDE: Metal Oxide-film resistor
 F: Nonflammable

• Items marked " * " are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.

SEMICONDUCTORS

In each case, μ , μ , for example:

μ A...: μ A... μ PA...: μ PA...
 μ PB...: μ PB... μ PC...: μ PC...
 μ PD...: μ PD...

CAPACITORS

μ F: μ F

COILS

μ H: μ H

When indication parts by reference number, please include the board name.

The components identified by mark Δ or dotted line with mark Δ are critical for safety. Replace only with part number specified.

Les composants identifiés par une marque Δ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

Ref. No.	Part No.	Description	Remark
	1-633-460-11	CA-41 BOARD *****	(Ref. No 5,000 Series)
		< CONNECTOR >	
CN001	1-506-482-11	CONNECTOR 3P, MALE *****	
*	A-6754-389-A	CG-14 BOARD, COMPLETE *****	(Ref. No 3,000 Series)
		< CAPACITOR >	
C403	1-163-031-11	CERAMIC CHIP 0.01 μ F	50V
C404	1-163-105-00	CERAMIC CHIP 33PF	5% 50V
C405	1-163-031-11	CERAMIC CHIP 0.01 μ F	50V
C406	1-163-031-11	CERAMIC CHIP 0.01 μ F	50V
C407	1-124-925-11	ELECT 2.2 μ F	20% 100V
C408	1-163-035-00	CERAMIC CHIP 0.047 μ F	50V
C409	1-163-031-11	CERAMIC CHIP 0.01 μ F	50V
C410	1-124-638-11	ELECT 22 μ F	20% 10V
C421	1-163-031-11	CERAMIC CHIP 0.01 μ F	50V
C422	1-130-489-00	MYLAR 0.033 μ F	5% 50V
C423	1-124-925-11	ELECT 2.2 μ F	20% 100V
C424	1-130-485-00	MYLAR 0.015 μ F	5% 50V
C601	1-124-034-51	ELECT 33 μ F	20% 16V
C602	1-163-031-11	CERAMIC CHIP 0.01 μ F	50V
C604	1-163-127-00	CERAMIC CHIP 270PF	5% 50V
C605	1-163-011-11	CERAMIC CHIP 0.0015 μ F	10% 50V
C606	1-163-037-11	CERAMIC CHIP 0.022 μ F	10% 25V
C607	1-126-301-11	ELECT 1 μ F	20% 50V
C608	1-163-038-00	CERAMIC CHIP 0.1 μ F	25V
C609	1-163-031-11	CERAMIC CHIP 0.01 μ F	50V
C610	1-163-099-00	CERAMIC CHIP 18PF	5% 50V
C611	1-163-097-00	CERAMIC CHIP 15PF	5% 50V

Ref. No.	Part No.	Description	Remark
C612	1-163-237-11	CERAMIC CHIP 27PF	5% 50V
C613	1-163-031-11	CERAMIC CHIP 0.01 μ F	50V
C614	1-163-097-00	CERAMIC CHIP 15PF	5% 50V
C615	1-124-589-11	ELECT 47 μ F	20% 16V
C616	1-124-903-11	ELECT 1 μ F	20% 50V
C617	1-124-126-00	ELECT 47 μ F	20% 10V
C618	1-163-031-11	CERAMIC CHIP 0.01 μ F	50V
C619	1-163-031-11	CERAMIC CHIP 0.01 μ F	50V
C620	1-163-031-11	CERAMIC CHIP 0.01 μ F	50V
C622	1-163-093-00	CERAMIC CHIP 10PF	5% 50V
C623	1-163-017-00	CERAMIC CHIP 0.0047 μ F	5% 50V
C624	1-163-093-00	CERAMIC CHIP 10PF	5% 50V
C625	1-163-009-11	CERAMIC CHIP 0.001 μ F	10% 50V
C626	1-124-927-11	ELECT 4.7 μ F	20% 100V
C627	1-163-031-11	CERAMIC CHIP 0.01 μ F	50V
C628	1-124-126-00	ELECT 47 μ F	20% 10V
C629	1-163-006-11	CERAMIC CHIP 560PF	10% 50V
		< CONNECTOR >	
* CN601	1-563-312-11	CONNECTOR, BOARD TO BOARD 12P	
* CN602	1-563-529-11	CONNECTOR, BOARD TO BOARD 9P	
		< DIODE >	
D420	8-719-101-43	DIODE RD4, 3E-L2	
D490	8-719-911-19	DIODE 1SS119	
D491	8-719-911-19	DIODE 1SS119	
D603	8-719-911-19	DIODE 1SS119	
D604	8-719-911-19	DIODE 1SS119	
		< IC >	
IC420	8-759-908-17	IC T1022CPS	
IC601	8-759-996-03	IC LVAS19S	
IC602	8-759-056-22	IC M50555-058SP	

Ref. No.	Part No.	Description	Value	Tolerance	Power	Remark
< JUMPER RESISTOR >						
JR205	1-216-295-00	METAL CHIP	0	5%	1/10W	
< COIL >						
L401	1-410-521-11	INDUCTOR	100uH			
L402	1-410-519-11	INDUCTOR	68uH			
L602	1-412-470-21	INDUCTOR	22uH			
L603	1-410-521-11	INDUCTOR	100uH			
L605	1-410-524-41	INDUCTOR	180uH			
L606	1-410-524-41	INDUCTOR	180uH			
L607	1-410-316-11	INDUCTOR	1uH			
L608	1-410-316-11	INDUCTOR	1uH			
< TRANSISTOR >						
Q401	8-729-422-28	TRANSISTOR	2SD601A-R			
Q403	8-729-422-28	TRANSISTOR	2SD601A-R			
Q405	8-729-422-37	TRANSISTOR	2SB709A-R			
Q406	8-729-421-19	TRANSISTOR	UN2213			
Q407	8-729-422-28	TRANSISTOR	2SD601A-R			
Q603	8-729-422-37	TRANSISTOR	2SB709A-R			
Q604	8-729-424-18	TRANSISTOR	UN2113			
Q605	8-729-422-28	TRANSISTOR	2SD601A-R			
Q606	8-729-422-37	TRANSISTOR	2SB709A-R			
Q607	8-729-422-28	TRANSISTOR	2SD601A-R			
< RESISTOR >						
R401	1-249-421-11	CARBON	2.2K	5%	1/4W	
R402	1-249-421-11	CARBON	2.2K	5%	1/4W	
R403	1-216-051-00	METAL CHIP	1.2K	5%	1/10W	
R404	1-216-037-00	METAL CHIP	330	5%	1/10W	
R405	1-216-035-00	METAL CHIP	270	5%	1/10W	
R406	1-216-073-00	METAL CHIP	10K	5%	1/10W	
R407	1-216-057-00	METAL CHIP	2.2K	5%	1/10W	
R408	1-216-041-00	METAL CHIP	470	5%	1/10W	
R409	1-216-033-00	METAL CHIP	220	5%	1/10W	
R410	1-216-053-00	METAL CHIP	1.5K	5%	1/10W	
R411	1-216-073-00	METAL CHIP	10K	5%	1/10W	
R412	1-216-061-00	METAL CHIP	3.3K	5%	1/10W	
R413	1-216-061-00	METAL CHIP	3.3K	5%	1/10W	
R414	1-216-049-00	METAL CHIP	1K	5%	1/10W	
R421	1-216-049-00	METAL CHIP	1K	5%	1/10W	
R422	1-216-748-11	METAL CHIP	39K	1%	1/10W	
R423	1-216-073-00	METAL CHIP	10K	5%	1/10W	
R424	1-216-073-00	METAL CHIP	10K	5%	1/10W	
R425	1-216-103-00	METAL CHIP	180K	5%	1/10W	
R601	1-216-073-00	METAL CHIP	10K	5%	1/10W	
R602	1-216-073-00	METAL CHIP	10K	5%	1/10W	
R603	1-216-059-00	METAL CHIP	2.7K	5%	1/10W	

Ref. No.	Part No.	Description	Value	Tolerance	Power	Remark
R604	1-216-083-00	METAL CHIP	27K	5%	1/10W	
R605	1-216-677-11	METAL CHIP	12K	0.5%	1/10W	
R606	1-216-678-11	METAL CHIP	13K	0.5%	1/10W	
R607	1-216-121-00	METAL CHIP	1M	5%	1/10W	
R608	1-216-081-00	METAL CHIP	22K	5%	1/10W	
R609	1-216-061-00	METAL CHIP	3.3K	5%	1/10W	
R610	1-216-041-00	METAL CHIP	470	5%	1/10W	
R611	1-216-041-00	METAL CHIP	470	5%	1/10W	
R612	1-216-049-00	METAL CHIP	1K	5%	1/10W	
R613	1-216-041-00	METAL CHIP	470	5%	1/10W	
R614	1-216-061-00	METAL CHIP	3.3K	5%	1/10W	
R615	1-216-043-00	METAL CHIP	560	5%	1/10W	
R617	1-216-061-00	METAL CHIP	3.3K	5%	1/10W	
R618	1-216-063-00	METAL CHIP	3.9K	5%	1/10W	
R619	1-216-081-00	METAL CHIP	22K	5%	1/10W	
R620	1-216-097-00	METAL CHIP	100K	5%	1/10W	
R621	1-216-055-00	METAL CHIP	1.8K	5%	1/10W	
R622	1-216-043-00	METAL CHIP	560	5%	1/10W	
R623	1-216-059-00	METAL CHIP	2.7K	5%	1/10W	
R624	1-216-063-00	METAL CHIP	3.9K	5%	1/10W	
R625	1-216-053-00	METAL CHIP	1.5K	5%	1/10W	
R626	1-216-121-00	METAL CHIP	1M	5%	1/10W	
R627	1-216-059-00	METAL CHIP	2.7K	5%	1/10W	
R628	1-216-063-00	METAL CHIP	3.9K	5%	1/10W	
R629	1-216-073-00	METAL CHIP	10K	5%	1/10W	
R630	1-216-057-00	METAL CHIP	2.2K	5%	1/10W	
R631	1-216-045-00	METAL CHIP	680	5%	1/10W	
R632	1-216-041-00	METAL CHIP	470	5%	1/10W	
R633	1-216-049-00	METAL CHIP	1K	5%	1/10W	
R634	1-216-085-00	METAL CHIP	33K	5%	1/10W	
R635	1-216-073-00	METAL CHIP	10K	5%	1/10W	
< CRYSTAL >						
X601	1-577-381-11	VIBRATOR, CRYSTAL	(14.32MHz)			

A-6754-427-A HF-24 BOARD, COMPLETE						

(Ref. No 3,000 Series)						
< CAPACITOR >						
C204	1-126-101-11	ELECT	100uF	20%	16V	
C205	1-163-031-11	CERAMIC CHIP	0.01uF		50V	
C206	1-124-925-11	ELECT	2.2uF	20%	100V	
C207	1-124-126-00	ELECT	47uF	20%	10V	
C208	1-124-927-11	ELECT	4.7uF	20%	100V	
C209	1-124-907-11	ELECT	10uF	20%	50V	
C212	1-124-126-00	ELECT	47uF	20%	10V	
C213	1-124-126-00	ELECT	47uF	20%	10V	

HF-24

MA-106

Ref. No.	Part No.	Description	Remark
C214	1-124-126-00	ELECT	47uF 20% 10V
C215	1-124-907-11	ELECT	10uF 20% 50V
C216	1-124-927-11	ELECT	4.7uF 20% 100V
C217	1-124-925-11	ELECT	2.2uF 20% 100V
C218	1-124-925-11	ELECT	2.2uF 20% 100V
C219	1-124-907-11	ELECT	10uF 20% 50V
C221	1-137-370-11	FILM	0.01uF 5% 50V
C222	1-124-927-11	ELECT	4.7uF 20% 100V
C223	1-126-176-11	ELECT	220uF 20% 10V
C224	1-124-925-11	ELECT	2.2uF 20% 100V
C225	1-137-372-11	FILM	0.022uF 5% 50V
C226	1-124-907-11	ELECT	10uF 20% 50V
C227	1-126-233-11	ELECT	22uF 20% 50V
C228	1-137-365-11	FILM	0.0015uF 5% 50V
C229	1-164-161-11	CERAMIC CHIP	0.0022uF 10% 100V
C230	1-137-366-11	FILM	0.0022uF 5% 50V
C231	1-163-031-11	CERAMIC CHIP	0.01uF 50V
C232	1-124-443-00	ELECT	100uF 20% 10V
C233	1-163-019-00	CERAMIC CHIP	0.0068uF 10% 50V
C234	1-124-903-11	ELECT	1uF 20% 50V
C235	1-163-031-11	CERAMIC CHIP	0.01uF 50V
C236	1-163-031-11	CERAMIC CHIP	0.01uF 50V
C237	1-163-133-00	CERAMIC CHIP	470PF 5% 50V
C239	1-137-366-11	FILM	0.0022uF 5% 50V
C240	1-164-161-11	CERAMIC CHIP	0.0022uF 10% 100V
C241	1-137-365-11	FILM	0.0015uF 5% 50V
C242	1-126-233-11	ELECT	22uF 20% 50V
C243	1-124-925-11	ELECT	2.2uF 20% 100V
C244	1-124-907-11	ELECT	10uF 20% 50V
C245	1-137-372-11	FILM	0.022uF 5% 50V
C246	1-124-925-11	ELECT	2.2uF 20% 100V
C247	1-126-176-11	ELECT	220uF 20% 10V
C248	1-124-927-11	ELECT	4.7uF 20% 100V
C249	1-137-370-11	FILM	0.01uF 5% 50V
C250	1-163-031-11	CERAMIC CHIP	0.01uF 50V
< CONNECTOR >			
CN201	1-573-834-11	CONNECTOR, BOARD TO BOARD 20P	
CN202	1-573-826-11	CONNECTOR, BOARD TO BOARD 12P	
< DIODE >			
D201	8-719-911-19	DIODE 1SS119	
< IC >			
IC201	8-759-057-63	IC AN3937NFBP	
< JUMPER RESISTOR >			
JR203	1-216-295-00	METAL CHIP	0 5% 1/10W

Ref. No.	Part No.	Description	Remark
JR204	1-216-295-00	METAL CHIP	0 5% 1/10W
JR301	1-216-295-00	METAL CHIP	0 5% 1/10W
JR302	1-216-295-00	METAL CHIP	0 5% 1/10W
JR303	1-216-296-00	METAL CHIP	0 5% 1/8W
JR304	1-216-295-00	METAL CHIP	0 5% 1/10W
JR305	1-216-296-00	METAL CHIP	0 5% 1/8W
JR306	1-216-296-00	METAL CHIP	0 5% 1/8W
JR307	1-216-296-00	METAL CHIP	0 5% 1/8W
JR308	1-216-296-00	METAL CHIP	0 5% 1/8W
JR309	1-216-296-00	METAL CHIP	0 5% 1/8W
JR310	1-216-296-00	METAL CHIP	0 5% 1/8W
< RESISTOR >			
R201	1-249-417-11	CARBON	1K 5% 1/4W
R202	1-249-417-11	CARBON	1K 5% 1/4W
R209	1-216-109-00	METAL CHIP	330K 5% 1/10W
R212	1-216-049-00	METAL CHIP	1K 5% 1/10W
R215	1-216-073-00	METAL CHIP	10K 5% 1/10W
R216	1-216-049-00	METAL CHIP	1K 5% 1/10W
R218	1-216-679-11	METAL CHIP	15K 0.5% 1/10W
R219	1-216-073-00	METAL CHIP	10K 5% 1/10W
R220	1-216-074-00	METAL CHIP	11K 5% 1/10W
R221	1-216-049-00	METAL CHIP	1K 5% 1/10W
R222	1-216-057-00	METAL CHIP	2.2K 5% 1/10W
R223	1-216-059-00	METAL CHIP	2.7K 5% 1/10W
R224	1-216-083-00	METAL CHIP	27K 5% 1/10W
R225	1-216-677-11	METAL CHIP	12K 0.5% 1/10W
R226	1-216-073-00	METAL CHIP	10K 5% 1/10W
R227	1-216-049-00	METAL CHIP	1K 5% 1/10W
R228	1-216-109-00	METAL CHIP	330K 5% 1/10W
< VARIABLE RESISTOR >			
RV201	1-241-628-11	RES. ADJ. CARBON 2.2K	
RV202	1-230-523-11	RES. ADJ. METAL 10K	
RV203	1-241-120-11	RES. ADJ. CARBON 2.2K	
RV204	1-241-630-11	RES. ADJ. CARBON 10K	
RV205	1-230-522-11	RES. ADJ. METAL 4.7K	
RV206	1-241-628-11	RES. ADJ. CARBON 2.2K	

A-6714-461-A			
*	A-6755-322-A	MA-106 BOARD, COMPLETE (SLV-595HF)	

A-6759-322-B			
*	A-6755-322-A	MA-106 BOARD, COMPLETE (SLV-696HF)	

(Ref. No. 2,000 Series)			
3-831-441-XX SPACER, KNOB			
3-945-945-01 SUPPORT (DIA. 3), PCB			

Ref. No.	Part No.	Description	Remark
< CAPACITOR >			
C104	1-124-126-00	ELECT 47uF	20% 10V
C106	1-124-126-00	ELECT 47uF	20% 10V
C109	1-124-126-00	ELECT 47uF	20% 10V
C106	1-124-126-00	ELECT 47uF	20% 10V
C109	1-124-126-00	ELECT 47uF	20% 10V
C112	1-164-096-11	CERAMIC 0.01uF	50V
C115	1-164-096-11	CERAMIC 0.01uF	50V
C116	1-124-126-00	ELECT 47uF	20% 10V
C117	1-124-472-11	ELECT 470uF	20% 10V
C118	1-124-126-00	ELECT 47uF	20% 10V
C201	1-124-907-11	ELECT 10uF	20% 50V
C202	1-124-907-11	ELECT 10uF	20% 50V
C203	1-124-907-11	ELECT 10uF	20% 50V
C204	1-124-907-11	ELECT 10uF	20% 50V
C205	1-124-126-00	ELECT 47uF	20% 10V
C206	1-124-261-00	ELECT 10uF	20% 50V
C207	1-124-261-00	ELECT 10uF	20% 50V
C208	1-124-907-11	ELECT 10uF	20% 50V
C209	1-124-261-00	ELECT 10uF	20% 50V
C212	1-124-261-00	ELECT 10uF	20% 50V
C250	1-124-907-11	ELECT 10uF	20% 50V
C301	1-124-903-11	ELECT 1uF	20% 50V
C302	1-124-126-00	ELECT 47uF	20% 10V
C303	1-124-589-11	ELECT 47uF	20% 16V
C304	1-126-301-11	ELECT 1uF	20% 50V
C305	1-130-485-00	FILM 0.015uF	5% 50V
C306	1-130-491-00	MYLAR 0.047uF	5% 50V
C307	1-124-927-11	ELECT 4.7uF	20% 100V
C308	1-124-589-11	ELECT 47uF	20% 16V
C309	1-124-126-00	ELECT 47uF	20% 10V
C310	1-164-083-11	CERAMIC 680PF	10% 50V
C311	1-164-093-11	CERAMIC 0.0047uF	10% 25V
C312	1-124-252-00	ELECT 0.33uF	20% 50V
C313	1-124-903-11	ELECT 1uF	20% 50V
C314	1-130-483-00	FILM 0.01uF	5% 50V
C315	1-124-126-00	ELECT 47uF	20% 10V
C316	1-164-083-11	CERAMIC 680PF	10% 50V
C317	1-124-903-11	ELECT 1uF	20% 50V
C318	1-126-233-11	ELECT 22uF	20% 50V
C319	1-162-294-31	CERAMIC 0.001uF	10% 50V
C324	1-136-559-11	FILM 0.0047uF	10% 630V (SLV-595HF)
C324	1-136-561-11	FILM 0.0068uF	10% 400V (SLV-696HF)
C325	1-164-087-11	CERAMIC 0.0015uF	10% 50V
C326	1-164-095-11	CERAMIC 0.01uF	10% 16V

Ref. No.	Part No.	Description	Remark
C336	1-124-261-00	ELECT 10uF	20% 50V
C337	1-124-261-00	ELECT 10uF	20% 50V
C344	1-124-257-00	ELECT 2.2uF	20% 50V
C345	1-124-257-00	ELECT 2.2uF	20% 50V
C351	1-124-261-00	ELECT 10uF	20% 50V
C411	1-130-491-00	MYLAR 0.047uF	5% 50V
C415	1-124-489-11	ELECT 47uF	20% 16V
C417	1-124-443-00	ELECT 100uF	20% 10V
C418	1-164-085-11	CERAMIC 0.001uF	10% 50V
C419	1-161-047-00	CERAMIC 0.0047uF	10% 50V
C420	1-164-098-11	CERAMIC 0.047uF	12V
C421	1-124-126-00	ELECT 47uF	20% 10V
C422	1-162-849-11	CERAMIC 0.068uF	10% 16V
C423	1-124-248-00	ELECT 22uF	20% 35V
C424	1-162-851-11	CERAMIC 0.1uF	10% 16V
C425	1-124-257-00	ELECT 2.2uF	20% 50V
C508	1-126-101-11	ELECT 100uF	20% 16V
C510	1-164-096-11	CERAMIC 0.01uF	50V
C511	1-124-443-00	ELECT 100uF	20% 10V
C513	1-124-126-00	ELECT 47uF	20% 10V
C514	1-164-052-11	CERAMIC 18PF	5% 50V
C516	1-164-085-11	CERAMIC 0.001uF	10% 50V
C517	1-164-096-11	CERAMIC 0.01uF	50V
C520	1-162-294-31	CERAMIC 0.001uF	10% 50V
C522	1-164-052-11	CERAMIC 18PF	5% 50V
C523	1-161-057-00	CERAMIC 0.033uF	10% 50V
C540	1-124-925-11	ELECT 2.2uF	20% 100V
C560	1-164-159-11	CERAMIC 0.1uF	50V
< JACK >			
CNJ005	1-507-562-00	JACK (CONTROL S IN)	
< CONNECTOR >			
* CN001	1-568-786-11	PIN, CONNECTOR 9P	
CN002	1-506-470-11	CONNECTOR 5P, MALE	
CN003	1-563-599-11	CONNECTOR, FLEXIBLE 22P	
CN005	1-569-341-11	CONNECTOR, BOARD TO BOARD 19P	
CN006	1-569-339-11	CONNECTOR, BOARD TO BOARD 7P	
CN007	1-573-844-11	CONNECTOR, BOARD TO BOARD 12P	
* CN008	1-508-742-00	PIN, CONNECTOR 3P	
CN009	1-573-846-11	CONNECTOR, BOARD TO BOARD 14P	
CN010	1-573-844-11	CONNECTOR, BOARD TO BOARD 12P	
CN011	1-573-852-11	CONNECTOR, BOARD TO BOARD 20P	
* CN012	1-506-775-11	CONNECTOR, BOARD TO BOARD 12P	
* CN013	1-508-797-00	PIN, CONNECTOR 4P	
* CN014	1-508-742-00	PIN, CONNECTOR 3P (SLV-595HF)	
* CN015	1-560-894-00	PIN, CONNECTOR 6P	
CN016	1-573-844-11	CONNECTOR, BOARD TO BOARD 12P	

MA-106

Ref. No.	Part No.	Description	Remark
CN017	1-573-844-11	CONNECTOR, BOARD TO BOARD 12P	
* CN018	1-568-790-11	PIN, CONNECTOR 13P	
CN020	1-580-847-11	CONNECTOR, BOARD TO BOARD 15P	
CN021	1-691-276-11	CONNECTOR, BOARD TO BOARD 13P	
CN022	1-566-126-11	CONNECTOR, BOARD TO BOARD 9P	
CNJ001	1-565-351-41	JACK, PIN 3P (LINE IN)	
CNJ002	1-565-351-41	JACK, PIN 3P (LINE OUT)	

< DIODE >

D202	8-719-911-19	DIODE	1SS119
D203	8-719-911-19	DIODE	1SS119
D302	8-719-911-19	DIODE	1SS119
D331	8-719-911-19	DIODE	1SS119
D332	8-719-911-19	DIODE	1SS119
D333	8-719-911-19	DIODE	1SS119
D334	8-719-911-19	DIODE	1SS119
D401	8-719-911-19	DIODE	1SS119
D410	8-719-101-47	DIODE	RD4.7E-L2
D501	8-719-911-19	DIODE	1SS119
D502	8-719-911-19	DIODE	1SS119
D505	8-719-911-19	DIODE	1SS119
D506	8-719-911-19	DIODE	1SS119
D507	8-719-900-82	DIODE	1SS119 8-719-986-73 RB4419
D521	8-719-109-60	DIODE	RD2.7ES-B2

< IC >

IC102	8-759-511-44	IC	LVA522SA
IC201	8-759-520-50	IC	BH7733S
IC301	8-759-805-20	IC	LA7297
IC304	8-759-632-34	IC	M5223L
IC402	8-759-246-14	IC	TA8823W
△ IC501	8-759-983-45	IC	BA6238A
IC502	8-752-835-23	IC	CXP80724-0270

< COIL >

L101	1-410-521-11	INDUCTOR	100uH
L102	1-410-971-11	INDUCTOR	10uH
L301	1-410-089-11	INDUCTOR	15mH
L302	1-410-120-11	INDUCTOR	1.2mH
L403	1-410-521-11	INDUCTOR	100uH
L501	1-410-971-11	INDUCTOR	10uH
L607	1-410-316-11	INDUCTOR	1uH
L608	1-410-316-11	INDUCTOR	1uH

< TRANSISTOR >

Q101	8-729-423-42	TRANSISTOR	2SA1309A-R
Q210	8-729-423-35	TRANSISTOR	2SC3311A-R
Q211	8-729-209-35	TRANSISTOR	2SD2012
△ Q301	8-729-140-96	TRANSISTOR	2SD774-34

Ref. No.	Part No.	Description	Remark
△ Q302	8-729-140-97	TRANSISTOR	2SB734-34 (SLV-695HF)
Q304	8-729-423-42	TRANSISTOR	2SA1309A-R
Q305	8-729-102-14	TRANSISTOR	2SD1021-F
Q306	8-729-102-14	TRANSISTOR	2SD1021-F
Q502	8-729-422-71	TRANSISTOR	UN411L
Q510	8-729-900-65	TRANSISTOR	DTA144ES
Q511	8-729-900-89	TRANSISTOR	DTC144ES

< RESISTOR >

R101	1-249-401-11	CARBON	47	5%	1/4W
R108	1-249-406-11	CARBON	120	5%	1/4W
R109	1-249-405-11	CARBON	100	5%	1/4W
R110	1-249-403-11	CARBON	68	5%	1/4W
R111	1-247-804-11	CARBON	75	5%	1/4W
R117	1-249-417-11	CARBON	1K	5%	1/4W
R204	1-249-436-11	CARBON	39K	5%	1/4W
R205	1-249-437-11	CARBON	47K	5%	1/4W
R207	1-249-429-11	CARBON	10K	5%	1/4W
R208	1-249-429-11	CARBON	10K	5%	1/4W
R211	1-249-436-11	CARBON	39K	5%	1/4W
R212	1-249-437-11	CARBON	47K	5%	1/4W
R213	1-249-436-11	CARBON	39K	5%	1/4W
R218	1-249-436-11	CARBON	39K	5%	1/4W
R227	1-249-414-11	CARBON	560	5%	1/4W
R228	1-249-414-11	CARBON	560	5%	1/4W
R231	1-249-414-11	CARBON	560	5%	1/4W
R232	1-249-414-11	CARBON	560	5%	1/4W
R260	1-249-423-11	CARBON	3.3K	5%	1/4W
R262	1-249-424-11	CARBON	3.9K	5%	1/4W
R280	1-249-416-11	CARBON	820	5%	1/4W
R281	1-249-426-11	CARBON	5.6K	5%	1/4W
R301	1-249-429-11	CARBON	10K	5%	1/4W
R302	1-249-433-11	CARBON	22K	5%	1/4W
R303	1-249-429-11	CARBON	10K	5%	1/4W
R304	1-249-412-11	CARBON	390	5%	1/4W
R305	1-249-422-11	CARBON	2.7K	5%	1/4W
R306	1-249-428-11	CARBON	8.2K	5%	1/4W
R307	1-249-415-11	CARBON	680	5%	1/4W
R308	1-249-393-11	CARBON	10	5%	1/4W
R309	1-249-430-11	CARBON	12K	5%	1/4W
R310	1-249-437-11	CARBON	47K	5%	1/4W
R311	1-249-412-11	CARBON	390	5%	1/4W
R312	1-247-885-00	CARBON	180K	5%	1/4W
R313	1-249-411-11	CARBON	330	5%	1/4W
R314	1-247-854-11	CARBON	9.1K	5%	1/4W
R315	1-249-434-11	CARBON	27K	5%	1/4W
R316	1-249-434-11	CARBON	27K	5%	1/4W
R317	1-247-903-00	CARBON	1M	5%	1/4W
R318	1-249-432-11	CARBON	18K	5%	1/4W

The components identified by mark \triangle or dotted line with mark \triangle are critical for safety. Replace only with part number specified.

Les composants identifiés par une marque \triangle sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

Ref. No.	Part No.	Description	Remark
R319	1-249-427-11	CARBON	6.8K 5% 1/4W
R321	1-249-416-11	CARBON	820 5% 1/4W
R329	1-249-429-11	CARBON	10K 5% 1/4W
R330	1-249-429-11	CARBON	10K 5% 1/4W (SLV-595HF)
R330	1-249-433-11	CARBON	22K 5% 1/4W (SLV-696HF)
R331	1-249-429-11	CARBON	10K 5% 1/4W (SLV-696HF)
R332	1-249-433-11	CARBON	22K 5% 1/4W (SLV-696HF)
▲ R333	1-249-387-11	CARBON	3.3 5% 1/4W
R336	1-249-421-11	CARBON	2.2K 5% 1/4W
R337	1-249-421-11	CARBON	2.2K 5% 1/4W
R338	1-249-421-11	CARBON	2.2K 5% 1/4W
R340	1-249-417-11	CARBON	1K 5% 1/4W
R341	1-249-417-11	CARBON	1K 5% 1/4W
R350	1-249-416-11	CARBON	820 5% 1/4W
R351	1-249-417-11	CARBON	1K 5% 1/4W
R362	1-247-903-00	CARBON	1M 5% 1/4W
R363	1-247-883-00	CARBON	150K 5% 1/4W
R364	1-249-433-11	CARBON	22K 5% 1/4W
R365	1-249-426-11	CARBON	5.6K 5% 1/4W
R366	1-249-433-11	CARBON	22K 5% 1/4W
R367	1-249-433-11	CARBON	22K 5% 1/4W
R376	1-247-883-00	CARBON	150K 5% 1/4W
R377	1-249-433-11	CARBON	22K 5% 1/4W
R378	1-249-426-11	CARBON	5.6K 5% 1/4W
R379	1-247-903-00	CARBON	1M 5% 1/4W
R380	1-249-429-11	CARBON	10K 5% 1/4W
R381	1-249-429-11	CARBON	10K 5% 1/4W
R398	1-249-441-11	CARBON	100K 5% 1/4W
R399	1-249-441-11	CARBON	100K 5% 1/4W
R401	1-216-079-00	METAL CHIP	18K 5% 1/10W
R402	1-216-081-00	METAL CHIP	22K 5% 1/10W
R427	1-249-429-11	CARBON	10K 5% 1/4W
R428	1-215-421-00	METAL FILM	1K 1% 1/4W
R430	1-215-429-00	METAL FILM	2.2K 1% 1/4W
R432	1-249-405-11	CARBON	100 5% 1/4W
R434	1-249-441-11	CARBON	100K 5% 1/4W
R435	1-247-901-11	CARBON	820K 5% 1/4W
R436	1-249-411-11	CARBON	330 5% 1/4W
R438	1-249-435-11	CARBON	33K 5% 1/4W
R439	1-249-439-11	CARBON	68K 5% 1/4W
R440	1-249-425-11	CARBON	4.7K 5% 1/4W
R441	1-249-441-11	CARBON	100K 5% 1/4W
R499	1-249-429-11	CARBON	10K 5% 1/4W
R501	1-215-463-00	METAL	56K 1% 1/6W
R503	1-215-431-00	METAL	2.7K 1% 1/6W
R504	1-249-430-11	CARBON	12K 5% 1/4W
R506	1-249-417-11	CARBON	1K 5% 1/4W
R510	1-249-425-11	CARBON	4.7K 5% 1/4W
R512	1-249-429-11	CARBON	10K 5% 1/4W

Ref. No.	Part No.	Description	Remark
R513	1-249-429-11	CARBON	10K 5% 1/4W
R514	1-249-429-11	CARBON	10K 5% 1/4W
R517	1-249-437-11	CARBON	47K 5% 1/4W
R518	1-249-437-11	CARBON	47K 5% 1/4W
R519	1-249-421-11	CARBON	2.2K 5% 1/4W
R525	1-249-422-11	CARBON	2.7K 5% 1/4W
R527	1-249-436-11	CARBON	39K 5% 1/4W
R528	1-249-431-11	CARBON	15K 5% 1/4W
R529	1-249-431-11	CARBON	15K 5% 1/4W
R530	1-249-429-11	CARBON	10K 5% 1/4W
R540	1-249-421-11	CARBON	2.2K 5% 1/4W
< RF MODULATOR >			
▲ RF101	1-466-150-11	MODULATOR, RF (RFU-1025)	
< VARIABLE RESISTOR >			
RV301	1-238-021-11	RES, ADJ. CARBON 220K	
RV501	1-241-632-11	RES, ADJ. CARBON 47K	
RV502	1-241-632-11	RES, ADJ. CARBON 47K	
< TRANSFORMER >			
T301	1-433-330-11	TRANSFORMER, BIAS OSCILLATION (SLV-595HF)	
T301	1-433-352-11	TRANSFORMER, BIAS OSCILLATION (SLV-696HF)	
< CRYSTAL >			
X501	1-578-774-11	VIBRATOR, CRYSTAL (12MHz)	

*	A-6754-303-A	MD-54 BOARD, COMPLETE	

(Ref. No 3,000 Series)			
< CAPACITOR >			
C001	1-161-494-00	CERAMIC	0.022uF 25V
C002	1-161-494-00	CERAMIC	0.022uF 25V
C003	1-126-157-11	ELECT	10uF 20% 16V
C004	1-161-379-00	CERAMIC	0.01uF 20% 25V
C006	1-124-589-11	ELECT	47uF 20% 16V
C008	1-164-159-11	CERAMIC	0.1uF 50V
C009	1-164-159-11	CERAMIC	0.1uF 50V
C025	1-162-294-31	CERAMIC	0.001uF 10% 50V
C026	1-162-294-31	CERAMIC	0.001uF 10% 50V
< CONNECTOR >			
CN003	1-591-643-11	CONNECTOR, BOARD TO BOARD	
CN004	1-563-625-11	CONNECTOR, FLEXIBLE 22P	
CN005	1-506-482-11	CONNECTOR 3P, MALE	
CN006	1-569-333-11	CONNECTOR, BOARD TO BOARD 3P	

The components identified by mark ▲ or dotted line with mark ▲ are critical for safety. Replace only with part number specified.

Les composants identifiés par une marque ▲ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

MD-54

MF-140

Ref. No.	Part No.	Description	Remark
< DIODE >			
D001	8-719-985-00	DIODE GL451VS1	
D005	8-719-109-93	DIODE RD6.2ES-B2	
D006	8-719-109-93	DIODE RD6.2ES-B2	
D007	8-719-109-93	DIODE RD6.2ES-B2	
D008	8-719-109-93	DIODE RD6.2ES-B2	
< IC >			
IC002	8-759-912-77	IC LM324N	
< COIL >			
L001	1-410-316-11	INDUCTOR 1uH	
L002	1-410-316-11	INDUCTOR 1uH	
< PHOTO INTERRUPTER >			
PH001	8-759-144-33	IC PS6002	
PH002	8-759-144-33	IC PS6002	
< TRANSISTOR >			
Q002	8-729-926-31	TRANSISTOR PT483F1S	
Q003	8-729-926-31	TRANSISTOR PT483F1S	
< RESISTOR >			
R001	1-249-423-11	CARBON 3.3K 5% 1/4W	
R002	1-249-423-11	CARBON 3.3K 5% 1/4W	
R003	1-249-426-11	CARBON 5.6K 5% 1/4W	
R004	1-249-426-11	CARBON 5.6K 5% 1/4W	
R005	1-249-417-11	CARBON 1K 5% 1/4W	
R006	1-249-441-11	CARBON 100K 5% 1/4W	
R007	1-249-441-11	CARBON 100K 5% 1/4W	
R008	1-249-425-11	CARBON 4.7K 5% 1/4W	
R009	1-249-408-11	CARBON 180 5% 1/4W	
R010	1-249-422-11	CARBON 2.7K 5% 1/4W	
R011	1-249-437-11	CARBON 47K 5% 1/4W	
R012	1-249-421-11	CARBON 2.2K 5% 1/4W	
R015	1-249-437-11	CARBON 47K 5% 1/4W	
R016	1-249-421-11	CARBON 2.2K 5% 1/4W	
R017	1-249-429-11	CARBON 10K 5% 1/4W	
R018	1-249-429-11	CARBON 10K 5% 1/4W	
R019	1-249-429-11	CARBON 10K 5% 1/4W	
R020	1-249-429-11	CARBON 10K 5% 1/4W	
R023	1-249-414-11	CARBON 560 5% 1/4W	
< SWITCH >			
S002	1-570-953-11	SWITCH, PUSH (1 KEY) (REC PROOF)	
S004	1-570-953-11	SWITCH, PUSH (1 KEY) (C-DOWN)	

Ref. No.	Part No.	Description	Remark
A-6756-638-A			
*	A-6721-440-A	MF-140 BOARD, COMPLETE (SLV-595HF)	*****
*	A-6721-442-A	MF-140 BOARD, COMPLETE (SLV-696HF)	*****
	A-6721-442-A	(Ref. No 1,000 Series)	
	A-6721-442-A		
*	3-944-574-01	HOLDER, FL	
< BUZZER >			
BZ901	1-529-080-11	BUZZER, PIEZOELECTRIC	
< CAPACITOR >			
C903	1-164-056-11	CERAMIC 27PF 5% 50V	
C904	1-125-705-11	CAP, DOUBLE LAYERS 0.22F	
C905	1-164-159-11	CERAMIC 0.1uF 50V	
C906	1-126-177-11	ELECT 100uF 20% 10V	
C912	1-162-306-11	CERAMIC 0.01uF 20% 16V	
C913	1-162-306-11	CERAMIC 0.01uF 20% 16V	
C914	1-162-306-11	CERAMIC 0.01uF 20% 16V	
C930	1-163-031-11	CERAMIC CHIP 0.01uF 50V	
< CERAMIC VIBRATOR >			
CF901	1-577-101-11	VIBRATOR, CERAMIC (4.19MHZ)	
< CONNECTOR >			
CN901	1-691-277-11	CONNECTOR, BOARD TO BOARD 13P	
CN902	1-580-846-11	CONNECTOR, BOARD TO BOARD 15P	
CN903	1-562-631-11	SOCKET, CONNECTOR	
CN904	1-691-247-11	CONNECTOR, BOARD TO BOARD 9P	
CN905	1-568-670-11	CONNECTOR, BOARD TO BOARD 9P	
CN906	1-506-486-11	PIN, CONNECTOR 7P	
CN907	1-568-670-11	CONNECTOR, BOARD TO BOARD 9P	
< TRIMMER >			
CT901	1-141-227-00	CAP, TRIMMER 20PF	
< DIODE >			
D901	8-719-911-10 DIODE ^{1S3119} 8-719-986-73		
D902	8-719-911-10 DIODE ^{1S3119} 8-719-986-73		
D903	8-719-110-08	DIODE RD8.2ES-B2	
D907	8-719-108-12	DIODE RD9.1E-W	
D908	8-719-108-12	DIODE RD9.1E-W	
D909	8-719-108-12	DIODE RD9.1E-W	
D914	8-719-109-93	DIODE RD6.2ES-B2	
D915	8-719-109-93	DIODE RD6.2ES-B2	
< FILTER >			
FL901	1-519-706-11	INDICATOR TUBE, FLUORESCENT	

Ref. No.	Part No.	Description	Remark
		< IC >	
IC901	8-752-835-36	IC CXP50124-D17Q	4415 7373
IC902	8-759-510-43	IC PST572C	
IC903	8-759-515-58	IC PST572H	
IC905	8-759-996-59	IC CAT35C102P	
		< JUMPER RESISTOR >	
JR901	1-216-296-00	METAL CHIP 0 5% 1/8W	
		< COIL >	
L901	1-410-521-11	INDUCTOR 100uH	
L902	1-410-314-11	INDUCTOR 0.47uH	
L903	1-410-314-11	INDUCTOR 0.47uH	
		< RESISTOR >	
R902	1-216-113-00	METAL CHIP 470K 5% 1/10W	
R903	1-249-425-11	CARBON 4.7K 5% 1/4W	
R904	1-249-425-11	CARBON 4.7K 5% 1/4W	
R905	1-249-425-11	CARBON 4.7K 5% 1/4W	
R906	1-249-425-11	CARBON 4.7K 5% 1/4W	
R914	1-249-427-11	CARBON 6.8K 5% 1/4W	
R918	1-216-049-00	METAL CHIP 1K 5% 1/10W	
R919	1-216-049-00	METAL CHIP 1K 5% 1/10W	
R920	1-216-049-00	METAL CHIP 1K 5% 1/10W	
R921	1-249-425-11	CARBON 4.7K 5% 1/4W	
R922	1-249-425-11	CARBON 4.7K 5% 1/4W	
R923	1-249-425-11	CARBON 4.7K 5% 1/4W	
R924	1-249-417-11	CARBON 1K 5% 1/4W	
R927	1-216-049-00	METAL CHIP 1K 5% 1/10W	
R929	1-216-073-00	METAL CHIP 10K 5% 1/10W	
R931	1-249-437-11	CARBON 47K 5% 1/4W	
R953	1-216-065-00	METAL CHIP 4.7K 5% 1/10W	
R957	1-249-437-11	CARBON 47K 5% 1/4W	
R958	1-216-049-00	METAL CHIP 1K 5% 1/10W	
R959	1-216-049-00	METAL CHIP 1K 5% 1/10W	
R960	1-216-049-00	METAL CHIP 1K 5% 1/10W	
R961	1-216-049-00	METAL CHIP 1K 5% 1/10W	
R963	1-249-425-11	CARBON 4.7K 5% 1/4W	
R964	1-249-418-11	CARBON 1.2K 5% 1/4W	
R965	1-216-055-00	METAL CHIP 1.8K 5% 1/10W	
R966	1-249-437-11	CARBON 47K 5% 1/4W (SLV-696HF)	
R967	1-249-437-11	CARBON 47K 5% 1/4W (Canadian)	
R968	1-249-437-11	CARBON 47K 5% 1/4W (SLV-595HF)	
R969	1-249-437-11	CARBON 47K 5% 1/4W (US)	
R970	1-216-089-00	METAL CHIP 47K 5% 1/10W	
R971	1-216-089-00	METAL CHIP 47K 5% 1/10W	
R972	1-249-437-11	CARBON 47K 5% 1/4W	
R973	1-249-425-11	CARBON 4.7K 5% 1/4W	

Ref. No.	Part No.	Description	Remark
		< SWITCH >	
S902	1-572-946-11	SWITCH, TACTIL (EJECT)	
S903	1-572-946-11	SWITCH, TACTIL (HI-SPEED REWIND)	
S904	1-572-946-11	SWITCH, TACTIL (PAUSE)	
		< CRYSTAL >	
X902	1-567-098-00	OSCILLATOR, CRYSTAL (32.768kHz)	

*	A-6755-321-A	MF-141 BOARD, COMPLETE (SLV-595HF/SLV-696HF; Canadian)	

*	A-6755-324-A	MF-141 BOARD, COMPLETE (SLV-696HF; US)	
***** (Ref. No 3,000 Series)			
		< JACK >	
CJ601	1-580-845-11	JACK, PIN 3P (LINE IN2)	
		< CONNECTOR >	
CN601	1-568-664-11	CONNECTOR, BOARD TO BOARD 9P	
CN602	1-568-664-11	CONNECTOR, BOARD TO BOARD 9P	
		< DIODE >	
D601	8-719-992-30	DIODE SLR-305MC3F	
D602	8-719-992-30	DIODE SLR-305MC3F	
D604	8-719-911-19	DIODE 1SS119	
		< COIL >	
L601	1-410-336-11	INDUCTOR 220uH	
		< RESISTOR >	
R604	1-249-423-11	CARBON 3.3K 5% 1/4W	
R605	1-249-403-11	CARBON 68 5% 1/4W	
R608	1-249-427-11	CARBON 6.8K 5% 1/4W	
R611	1-249-417-11	CARBON 1K 5% 1/4W	
R612	1-249-417-11	CARBON 1K 5% 1/4W	
R614	1-249-401-11	CARBON 47 5% 1/4W	
R616	1-249-423-11	CARBON 3.3K 5% 1/4W	
R617	1-249-425-11	CARBON 4.7K 5% 1/4W	
R618	1-249-425-11	CARBON 4.7K 5% 1/4W	
		< VARIABLE RESISTOR >	
RV601	1-230-819-11	RES. VAR, CARBON 2K (SHARPNESS)	
		< SWITCH >	
S601	1-571-977-11	SWITCH, TACTIL (POWER)	

MF141

MF-143

RP-127

Ref. No.	Part No.	Description	Remark
S603	1-572-907-11	SWITCH, SLIDE (COMMAND MODE)	
S605	1-572-908-11	SWITCH, SLIDE (EDIT)	
S606	1-571-977-11	SWITCH, TACTIL (CL)	

*	A-6755-406-A	MF-143 BOARD, COMPLETE (SLV-696HF;US)	

*	A-6755-407-A	MF-143 BOARD, COMPLETE (SLV-595HF/SLV-696HF;Canadian)	

(Ref. No 1,000 Series)			
< CONNECTOR >			
CN701	1-580-850-11	CONNECTOR (DMS) 8P	
CN702	1-562-088-00	SOCKET, CONNECTOR 9P	
< IC >			
IC701	1-466-131-21	IC 6P1U52X	
< RESISTOR >			
R701	1-216-051-00	METAL CHIP 1.2K 5% 1/10W	
R702	1-216-089-00	METAL CHIP 47K 5% 1/10W	
R706	1-216-065-00	METAL CHIP 4.7K 5% 1/10W	
R707	1-216-065-00	METAL CHIP 4.7K 5% 1/10W	
R708	1-216-065-00	METAL CHIP 4.7K 5% 1/10W	
R710	1-216-065-00	METAL CHIP 4.7K 5% 1/10W	

*	A-6727-393-A	RP-127 BOARD, COMPLETE (SLV-595HF)	

*	A-6727-394-A	RP-127 BOARD, COMPLETE (SLV-696HF)	

(Ref. No 1,000 Series)			
< CAPACITOR >			
C260	1-163-031-11	CERAMIC CHIP 0.01uF 50V	
C261	1-124-584-00	ELECT 100uF 20% 10V	
C262	1-163-031-11	CERAMIC CHIP 0.01uF 50V	
C263	1-163-038-00	CERAMIC CHIP 0.1uF 25V	
C264	1-124-257-00	ELECT 2.2uF 20% 50V	
C265	1-163-031-11	CERAMIC CHIP 0.01uF 50V	
C267	1-163-031-11	CERAMIC CHIP 0.01uF 50V	
C270	1-163-038-00	CERAMIC CHIP 0.1uF 25V	
C273	1-163-031-11	CERAMIC CHIP 0.01uF 50V	
C274	1-163-038-00	CERAMIC CHIP 0.1uF 25V	
C275	1-126-160-11	ELECT 1uF 20% 50V	
C276	1-163-031-11	CERAMIC CHIP 0.01uF 50V	
C277	1-137-075-11	FILM 0.068uF 5% 100V (SLV-696HF)	
C279	1-163-986-00	CERAMIC CHIP 0.027uF 10% 25V (SLV-696HF)	
C280	1-163-011-11	CERAMIC CHIP 0.0015uF 10% 50V (SLV-696HF)	

Ref. No.	Part No.	Description	Remark
C281	1-124-589-11	ELECT 47uF 20% 16V (SLV-696HF)	
C286	1-164-232-11	CERAMIC CHIP 0.01uF 50V (SLV-696HF)	
C801	1-163-033-00	CERAMIC CHIP 0.022uF 50V	
C802	1-163-033-00	CERAMIC CHIP 0.022uF 50V	
C803	1-163-033-00	CERAMIC CHIP 0.022uF 50V	
C804	1-163-038-00	CERAMIC CHIP 0.1uF 25V	
C805	1-163-033-00	CERAMIC CHIP 0.022uF 50V	
C806	1-163-117-00	CERAMIC CHIP 100PF 5% 50V	
C807	1-163-038-00	CERAMIC CHIP 0.1uF 25V	
C808	1-124-584-00	ELECT 100uF 20% 10V	
C809	1-163-038-00	CERAMIC CHIP 0.1uF 25V	
C810	1-124-584-00	ELECT 100uF 20% 10V	
C811	1-163-031-11	CERAMIC CHIP 0.01uF 50V	
C812	1-163-031-11	CERAMIC CHIP 0.01uF 50V	
C813	1-164-336-11	CERAMIC CHIP 0.33uF 25V	
C814	1-163-038-00	CERAMIC CHIP 0.1uF 25V	
C815	1-163-077-00	CERAMIC CHIP 0.1uF 10% 25V	
C816	1-163-038-00	CERAMIC CHIP 0.1uF 25V	
C817	1-164-161-11	CERAMIC CHIP 0.0022uF 10% 100V	
C818	1-163-104-00	CERAMIC CHIP 30PF 5% 50V	
C819	1-163-031-11	CERAMIC CHIP 0.01uF 50V	
C820	1-163-115-00	CERAMIC CHIP 82PF 5% 50V	
C822	1-163-129-00	CERAMIC CHIP 330PF 5% 50V	
C823	1-163-031-11	CERAMIC CHIP 0.01uF 50V	
C824	1-124-126-00	ELECT 47uF 20% 10V	
C826	1-124-589-11	ELECT 47uF 20% 16V	
C827	1-163-038-00	CERAMIC CHIP 0.1uF 25V	
C828	1-163-031-11	CERAMIC CHIP 0.01uF 50V	
C829	1-163-031-11	CERAMIC CHIP 0.01uF 50V	
C830	1-163-105-00	CERAMIC CHIP 33PF 5% 50V	
C831	1-163-031-11	CERAMIC CHIP 0.01uF 50V	
C835	1-163-109-00	CERAMIC CHIP 47PF 5% 50V	
C836	1-163-090-00	CERAMIC CHIP 18PF 50V (SLV-696HF)	
C839	1-163-090-00	CERAMIC CHIP 18PF 50V (SLV-696HF)	
C890	1-164-232-11	CERAMIC CHIP 0.01uF 50V (SLV-696HF)	
C893	1-163-117-00	CERAMIC CHIP 100PF 5% 50V (SLV-696HF)	
C894	1-163-121-00	CERAMIC CHIP 150PF 5% 50V (SLV-696HF)	
C895	1-163-111-00	CERAMIC CHIP 56PF 5% 50V (SLV-696HF)	
C896	1-163-038-00	CERAMIC CHIP 0.1uF 25V (SLV-696HF)	
C897	1-126-157-11	ELECT 10uF 20% 16V (SLV-696HF)	
< CONNECTOR >			
CN204	1-569-336-11	CONNECTOR, BOARD TO BOARD 7P	
CN260	1-506-482-11	CONNECTOR 3P, MALE (SLV-696HF)	
CN801	1-563-590-11	CONNECTOR, FLEXIBLE 13P	
CN802	1-569-338-11	CONNECTOR, BOARD TO BOARD 19P	
* CN803	1-564-031-00	PIN, CONNECTOR 6P	

Ref. No.	Part No.	Description	Remark
< DIODE >			
D801	8-719-911-19	DIODE 1SS119	
D802	8-719-911-19	DIODE 1SS119	
D803	8-719-911-19	DIODE 1SS119	
D804	8-719-911-19	DIODE 1SS119	
D805	8-719-911-19	DIODE 1SS119	
D806	8-719-400-18	DIODE MA152WK	
D807	8-719-911-19	DIODE 1SS119	
< IC >			
IC260	8-759-055-49	IC AN3327K	
IC801	8-759-046-75	IC HA118162NT	
< JUMPER RESISTOR >			
JR401	1-216-296-00	METAL CHIP 0 5% 1/8W (SLV-696HF)	
JR402	1-216-296-00	METAL CHIP 0 5% 1/8W	
JR403	1-216-296-00	METAL CHIP 0 5% 1/8W	
JR404	1-216-296-00	METAL CHIP 0 5% 1/8W	
JR405	1-216-296-00	METAL CHIP 0 5% 1/8W	
JR406	1-216-296-00	METAL CHIP 0 5% 1/8W	
JR833	1-216-295-00	METAL CHIP 0 5% 1/10W	
< COIL >			
L260	1-410-521-11	INDUCTOR 100uH	
L265	1-408-426-00	INDUCTOR 270uH (SLV-696HF)	
L801	1-410-525-11	INDUCTOR 220uH	
L802	1-410-525-11	INDUCTOR 220uH	
L803	1-410-521-11	INDUCTOR 100uH	
L804	1-410-521-11	INDUCTOR 100uH	
L806	1-410-516-11	INDUCTOR 39uH	
L807	1-410-518-21	INDUCTOR 56uH	
L809	1-410-512-11	INDUCTOR 18uH	
L810	1-410-524-41	INDUCTOR 180uH	
L811	1-410-521-11	INDUCTOR 100uH	
L812	1-410-521-11	INDUCTOR 100uH	
L813	1-410-510-11	INDUCTOR 12uH (SLV-696HF)	
L814	1-410-510-11	INDUCTOR 12uH (SLV-696HF)	
L890	1-410-507-11	INDUCTOR 6.8uH (SLV-696HF)	
L891	1-410-521-11	INDUCTOR 100uH (SLV-696HF)	
< TRANSISTOR >			
△ Q260	8-729-103-72	TRANSISTOR 2SD1005-BV (SLV-696HF)	
Q801	8-729-422-28	TRANSISTOR 2SD601A-R	
Q802	8-729-422-28	TRANSISTOR 2SD601A-R	
Q803	8-729-424-18	TRANSISTOR UN2113	
Q804	8-729-422-28	TRANSISTOR 2SD601A-R	
Q805	8-729-422-37	TRANSISTOR 2SB709A-R	

Ref. No.	Part No.	Description	Remark
Q806	8-729-422-37	TRANSISTOR 2SB709A-R	
Q807	8-729-422-28	TRANSISTOR 2SD601A-R	
Q808	8-729-421-19	TRANSISTOR UN2213	
Q809	8-729-422-28	TRANSISTOR 2SD601A-R	
Q810	8-729-421-19	TRANSISTOR UN2213	
Q811	8-729-301-98	TRANSISTOR 2SB1000A-L	
Q814	8-729-421-19	TRANSISTOR UN2213	
Q890	8-729-216-22	TRANSISTOR 2SA1162-G (SLV-696HF)	
Q891	8-729-216-22	TRANSISTOR 2SA1162-G (SLV-696HF)	
Q892	8-729-421-19	TRANSISTOR UN2213 (SLV-696HF)	
< RESISTOR >			
R262	1-216-184-00	METAL GLAZE 270 5% 1/8W	
R263	1-216-067-00	METAL CHIP 5.6K 5% 1/10W	
R265	1-216-033-00	METAL CHIP 220 5% 1/10W	
R266	1-216-051-00	METAL CHIP 1.2K 5% 1/10W	
R267	1-216-035-00	METAL CHIP 270 5% 1/10W	
R271	1-216-079-00	METAL CHIP 18K 5% 1/10W	
R272	1-216-073-00	METAL CHIP 10K 5% 1/10W (SLV-696HF)	
△ R273	1-249-367-11	CARBON 3.3 5% 1/4W (SLV-696HF)	
R801	1-216-025-00	METAL CHIP 100 5% 1/10W	
R802	1-216-043-00	METAL CHIP 560 5% 1/10W	
R803	1-216-057-00	METAL CHIP 2.2K 5% 1/10W	
R804	1-216-023-00	METAL CHIP 82 5% 1/10W	
R805	1-216-613-11	METAL CHIP 27 0.5% 1/10W	
R806	1-216-025-00	METAL CHIP 100 5% 1/10W	
R807	1-216-025-00	METAL CHIP 100 5% 1/10W	
R808	1-216-613-11	METAL CHIP 27 0.5% 1/10W	
R809	1-216-023-00	METAL CHIP 82 5% 1/10W	
R810	1-216-057-00	METAL CHIP 2.2K 5% 1/10W	
R811	1-216-043-00	METAL CHIP 560 5% 1/10W	
R812	1-216-025-00	METAL CHIP 100 5% 1/10W	
R813	1-216-047-00	METAL CHIP 820 5% 1/10W	
R815	1-216-085-00	METAL CHIP 33K 5% 1/10W	
R816	1-216-057-00	METAL CHIP 2.2K 5% 1/10W	
R817	1-216-049-00	METAL CHIP 1K 5% 1/10W	
R818	1-216-057-00	METAL CHIP 2.2K 5% 1/10W	
R819	1-216-049-00	METAL CHIP 1K 5% 1/10W	
R820	1-216-057-00	METAL CHIP 2.2K 5% 1/10W	
R821	1-216-057-00	METAL CHIP 2.2K 5% 1/10W	
R822	1-216-039-00	METAL CHIP 390 5% 1/10W	
R823	1-216-047-00	METAL CHIP 820 5% 1/10W	
R824	1-216-039-00	METAL CHIP 390 5% 1/10W	
R825	1-216-067-00	METAL CHIP 5.6K 5% 1/10W	
R826	1-216-063-00	METAL CHIP 3.9K 5% 1/10W	
R827	1-216-045-00	METAL CHIP 680 5% 1/10W	
R828	1-216-043-00	METAL CHIP 560 5% 1/10W	
R830	1-216-043-00	METAL CHIP 560 5% 1/10W	
R831	1-216-053-00	METAL CHIP 1.5K 5% 1/10W	

The components identified by mark **△** or dotted line with mark **△** are critical for safety. Replace only with part number specified.

Les composants identifiés par une marque **△** sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

Ref. No.	Part No.	Description	Remark		
R832	1-216-047-00	METAL CHIP	820	5%	1/10W
R833	1-216-049-00	METAL CHIP	1K	5%	1/10W
R834	1-216-067-00	METAL CHIP	5.6K	5%	1/10W
R835	1-216-053-00	METAL CHIP	1.5K	5%	1/10W
R836	1-216-051-00	METAL CHIP	1.2K	5%	1/10W
R838	1-216-043-00	METAL CHIP	560	5%	1/10W
R839	1-216-089-00	METAL CHIP	47K	5%	1/10W
R891	1-216-011-00	METAL CHIP	27	5%	1/10W (SLV-696HF)
R894	1-216-041-00	METAL CHIP	470	5%	1/10W (SLV-696HF)
R895	1-216-055-00	METAL CHIP	1.8K	5%	1/10W (SLV-696HF)
R896	1-216-095-00	METAL CHIP	82K	5%	1/10W (SLV-696HF)
R897	1-216-089-00	METAL CHIP	47K	5%	1/10W (SLV-696HF)
R898	1-216-748-11	METAL CHIP	39K	1%	1/10W (SLV-696HF)
< TRANSFORMER >					
T260	1-406-349-11	TRANSFORMER, OSCILLATION (SLV-696HF)			

	1-413-686-11	SR-370 BOARD (POWER BLOCK)			
		***** (Ref. No 4,000 Series)			
< CAPACITOR >					
△C101	9-900-521-01	FILM	0.1uF		125V
△C102	9-900-521-01	FILM	0.1uF		125V
△C103	9-900-522-01	CERAMIC	2200PF		125V
△C104	9-900-522-01	CERAMIC	2200PF		125V
△C105	9-900-522-01	CERAMIC	2200PF		125V
△C106	9-902-054-01	ELECT	470uF		200V
C107	1-124-927-11	ELECT	4.7uF	20%	50V
C108	9-902-055-01	CERAMIC	100PF		1KV
C109	9-900-525-01	FILM	0.047uF		400V
C110	1-130-491-00	MYLAR	0.047uF	5%	50V
C111	1-130-491-00	MYLAR	0.047uF	5%	50V
C201	1-124-443-00	ELECT	100uF	20%	10V
C202	1-124-122-11	ELECT	100uF	20%	50V
C203	9-900-540-01	ELECT	2200uF		16V
C204	1-126-101-11	ELECT	100uF	20%	16V
C205	1-126-101-11	ELECT	100uF	20%	16V
C206	9-900-541-01	ELECT	2200uF		10V
C207	9-902-067-01	ELECT	1uF		50V
C208	9-900-542-01	ELECT	470uF		10V
C209	1-130-483-00	MYLAR	0.01uF	5%	50V
C210	1-124-443-00	ELECT	100uF	20%	10V
C211	1-124-122-11	ELECT	100uF	20%	50V
C212	1-124-471-00	ELECT	1000uF	20%	6.3V
C213	1-130-483-00	MYLAR	0.01uF	5%	50V
C214	1-130-483-00	MYLAR	0.01uF	5%	50V
C215	9-902-197-01	CERAMIC	1000pF		1KV
C216	1-124-443-00	ELECT	100uF	20%	10V

Ref. No.	Part No.	Description	Remark
< CONNECTOR >			
CN101	9-902-075-01	CONNECTOR 13P	
CN102	9-902-076-01	CONNECTOR 7P	
△CNJ101	9-902-079-01	INLET AC (AC 1N)	
< DIODE >			
△D101	8-719-510-06	DIODE	S1WB60
△D102	9-900-512-01	DIODE	AG01A
△D103	8-719-200-82	DIODE	11ES2
D104	8-719-911-19	DIODE	1SS119
D105	8-719-911-19	DIODE	1SS119
D106	8-719-911-19	DIODE	1SS119
D107	8-719-911-19	DIODE	1SS119
D108	8-719-911-19	DIODE	1SS119
D109	8-719-911-19	DIODE	1SS119
△D110	9-902-050-01	DIODE	ERA15-06
△D201	9-900-534-01	DIODE	ERA18-02
△D202	8-719-114-87	DIODE	RD18JSB2
△D204	8-719-230-02	DIODE	30DF2
△D205	8-719-981-00	DIODE	ERC81-004
△D206	9-900-534-01	DIODE	ERA18-02
△D207	8-719-981-01	DIODE	ERA81-004
< FUSE >			
△F101	1-532-743-11	FUSE, GLASS TUBE 2A 125V	
< BEAD CORE >			
FB101	9-902-053-01	CORE, BEAD	
< IC >			
△IC201	9-902-065-01	IC	PQ12RF13
△IC202	9-902-066-01	IC	PQ12RF11
IC203	9-900-533-01	IC	HA17431
IC204	9-900-533-01	IC	HA17431
< COIL >			
△L101	9-900-520-01	FILTER, LINE ELF18D290A	
L201	9-900-539-01	COIL, CHOKE 10uH	
< PHOTO COUPLER >			
△PC101	8-719-902-56	PHOTO COUPLER PC817	
< TRANSISTOR >			
△Q101	8-729-204-94	TRANSISTOR	2SC3559
△Q102	9-900-517-01	TRANSISTOR	2SC3377
Q201	8-729-903-32	TRANSISTOR	2SA933-Q
△Q202	8-729-140-98	TRANSISTOR	2SD773-34

The components identified by mark △ or dotted line with mark △ are critical for safety. Replace only with part number specified.

Les composants identifiés par une marque △ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

Ref. No.	Part No.	Description	Remark		
< RESISTOR >					
△R101	9-902-056-01	SOLID	6.8M		1/2W
R102	1-249-441-11	CARBON	100K	5%	1/4W
R103	1-249-441-11	CARBON	100K	5%	1/4W
R104	1-249-429-11	CARBON	10K	5%	1/4W
△R106	9-902-057-01	METAL	47K		3W
△R107	9-902-058-01	METAL	100		1W
R108	1-249-413-11	ADJ	470	5%	1/4W
R109		ADJ			
R110	1-249-497-11	CARBON	22	5%	1/4W
R201	1-249-417-11	CARBON	1K	5%	1/4W
△R202	1-247-727-11	CARBON	10	5%	1/2W F
R203	1-249-417-11	CARBON	1K	5%	1/4W
R204	9-902-069-01	CARBON	47		1/2W
R205	1-215-428-00	CARBON	2K	1%	1/4W
R206	1-215-425-00	CARBON	1.5K	1%	1/4W
R207	9-902-070-01	ADJ	56K		1/4W
△R208	9-900-543-01	METAL	0.22		1/2W
R209	9-902-071-01	CARBON	100		1/4W
R210	9-902-071-01	CARBON	100		1/4W
R211	1-249-417-11	CARBON	1K	5%	1/4W
R212	1-215-425-00	METAL	1.5K	1%	1/4W
R213	9-902-072-01	ADJ	100		1/4W
R214	1-215-425-00	METAL	1.5K	1%	1/4W
△R215	9-902-073-01	FUSE	10		1/4W F
△R216	9-902-074-01	CARBON	0.47		1/4W
R217	1-249-429-11	CARBON	10K	5%	1/4W
< TYRISTOR >					
△SCR201	8-719-107-87	TYRISTOR 03P2M			
< TRANSFORMER >					
△T101	9-902-052-01	TRANSFORMER, SWITCHING ETS28K356V			

*	A-6754-426-A	TU-132 BOARD, COMPLETE			

(Ref. No 4,000 Series)					
	3-710-578-01	COVER, VOLUME. 6 MOLD			
< CAPACITOR >					
C001	1-124-126-00	ELECT	47uF	20%	10V
C002	1-124-927-11	ELECT	4.7uF	20%	100V
C003	1-163-031-11	CERAMIC CHIP	0.01uF		50V
C004	1-163-009-11	CERAMIC CHIP	0.001uF	10%	50V
C005	1-126-101-11	ELECT	100uF	20%	16V
C007	1-163-108-00	CERAMIC CHIP	43PF	5%	50V

Ref. No.	Part No.	Description	Remark		
C008	1-163-108-00	CERAMIC CHIP	43PF	5%	50V
C011	1-163-131-00	CERAMIC CHIP	390PF	5%	50V
C012	1-163-131-00	CERAMIC CHIP	390PF	5%	50V
C014	1-124-126-00	ELECT	47uF	20%	10V
C016	1-124-126-00	ELECT	47uF	20%	10V
C019	1-163-019-00	CERAMIC CHIP	0.0068uF	10%	50V
C020	1-163-031-11	CERAMIC CHIP	0.01uF		50V
C021	1-163-031-11	CERAMIC CHIP	0.01uF		50V
C022	1-163-117-00	CERAMIC CHIP	100PF	5%	50V
C023	1-163-031-11	CERAMIC CHIP	0.01uF		50V
C024	1-163-019-00	CERAMIC CHIP	0.0068uF	10%	50V
C025	1-163-031-11	CERAMIC CHIP	0.01uF		50V
C026	1-163-229-11	CERAMIC CHIP	12PF	5%	50V
C027	1-163-031-11	CERAMIC CHIP	0.01uF		50V
C028	1-163-091-00	CERAMIC CHIP	8PF		50V
C029	1-124-443-00	ELECT	100uF	20%	10V
C030	1-124-907-11	ELECT	10uF	20%	50V
C031	1-163-033-00	CERAMIC CHIP	0.022uF		50V
C032	1-164-222-11	CERAMIC CHIP	0.22uF		25V
C033	1-124-126-00	ELECT	47uF	20%	10V
C034	1-163-031-11	CERAMIC CHIP	0.01uF		50V
C035	1-124-250-00	ELECT	0.15uF	20%	50V
C036	1-163-031-11	CERAMIC CHIP	0.01uF		50V
C037	1-163-009-11	CERAMIC CHIP	0.001uF	10%	50V
C038	1-124-903-11	ELECT	1uF	20%	50V
C039	1-163-031-11	CERAMIC CHIP	0.01uF		50V
C040	1-124-126-00	ELECT	47uF	20%	10V
C041	1-124-902-00	ELECT	0.47uF	20%	50V
C043	1-163-229-11	CERAMIC CHIP	12PF	5%	50V
C044	1-163-113-00	CERAMIC CHIP	68PF	5%	50V
C045	1-124-907-11	ELECT	10uF	20%	50V
C046	1-124-126-00	ELECT	47uF	20%	10V
C070	1-130-484-00	MYLAR	0.012uF	5%	50V
C071	1-130-480-00	MYLAR	0.0056uF	5%	50V
C072	1-124-252-00	ELECT	0.33uF	20%	50V
C073	1-124-907-11	ELECT	10uF	20%	50V
C074	1-124-907-11	ELECT	10uF	20%	50V
C075	1-130-476-00	MYLAR	0.0027uF	5%	50V
C076	1-163-038-00	CERAMIC CHIP	0.1uF		25V
C077	1-124-907-11	ELECT	10uF	20%	50V
C078	1-131-365-00	TANTALUM	10uF	10%	20V
C079	1-124-903-11	ELECT	1uF	20%	50V
C080	1-131-368-00	TANTALUM	3.3uF	10%	16V
C081	1-124-907-11	ELECT	10uF	20%	50V
C082	1-124-907-11	ELECT	10uF	20%	50V
C083	1-163-075-00	CERAMIC CHIP	0.047uF		50V
C084	1-124-927-11	ELECT	4.7uF	20%	100V
C085	1-124-902-00	ELECT	0.47uF	20%	50V
C086	1-124-903-11	ELECT	1uF	20%	50V
C087	1-126-157-11	ELECT	10uF	20%	16V
C088	1-164-232-11	CERAMIC CHIP	0.01uF		50V

The components identified by mark **△** or dotted line with mark **△** are critical for safety. Replace only with part number specified.

Les composants identifiés par une marque **△** sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

Ref. No.	Part No.	Description	Remark
C089	1-126-162-11	ELECT 3.3uF	20% 50V
C090	1-163-989-11	CERAMIC CHIP 0.033uF	10% 25V
C091	1-124-907-11	ELECT 10uF	20% 50V
C092	1-163-031-11	CERAMIC CHIP 0.01uF	50V
C098	1-126-233-11	ELECT 22uF	20% 50V

< FILTER >

CF001	1-577-559-11	FILTER, CERAMIC
CF002	1-409-332-00	CERAMIC TRAP
CF003	1-527-943-00	FILTER, CERAMIC

< CONNECTOR >

CN001	1-573-826-11	CONNECTOR, BOARD TO BOARD 12P
CN002	1-573-826-11	CONNECTOR, BOARD TO BOARD 12P

< DIODE >

⚠ D001	8-719-929-71	DIODE HZS33NB1
D005	8-719-104-34	DIODE 1S2836
D006	8-719-104-34	DIODE 1S2836
⚠ D007	8-719-800-76	DIODE 1SS226

< IC >

IC001	8-759-630-93	IC M51362SP
IC002	8-752-035-71	IC CXA1124A
IC003	8-759-981-64	IC LM2903DD

< JUMPER RESISTOR >

JP002	1-216-296-00	METAL CHIP 0 5% 1/8W
JP004	1-216-295-00	METAL CHIP 0 5% 1/10W
JP006	1-216-296-00	METAL CHIP 0 5% 1/8W
JP007	1-216-296-00	METAL CHIP 0 5% 1/8W
JP008	1-216-295-00	METAL CHIP 0 5% 1/10W

JP009	1-216-296-00	METAL CHIP 0 5% 1/8W
JP010	1-216-296-00	METAL CHIP 0 5% 1/8W
JP011	1-216-296-00	METAL CHIP 0 5% 1/8W
JP012	1-216-296-00	METAL CHIP 0 5% 1/8W
JP013	1-216-295-00	METAL CHIP 0 5% 1/10W

JP014	1-216-296-00	METAL CHIP 0 5% 1/8W
JP015	1-216-296-00	METAL CHIP 0 5% 1/8W
JP016	1-216-295-00	METAL CHIP 0 5% 1/10W
JP017	1-216-295-00	METAL CHIP 0 5% 1/10W
JP018	1-216-296-00	METAL CHIP 0 5% 1/8W

JP019	1-216-296-00	METAL CHIP 0 5% 1/8W
JP020	1-216-296-00	METAL CHIP 0 5% 1/8W
JP021	1-216-295-00	METAL CHIP 0 5% 1/10W
JP022	1-216-295-00	METAL CHIP 0 5% 1/10W
JP023	1-216-296-00	METAL CHIP 0 5% 1/8W

JP024	1-216-295-00	METAL CHIP 0 5% 1/10W
JP025	1-216-296-00	METAL CHIP 0 5% 1/8W

Ref. No.	Part No.	Description	Remark
JP026	1-216-296-00	METAL CHIP 0 5% 1/8W	
JP027	1-216-295-00	METAL CHIP 0 5% 1/10W	
JP028	1-216-296-00	METAL CHIP 0 5% 1/8W	
JP029	1-216-296-00	METAL CHIP 0 5% 1/8W	
JP030	1-216-296-00	METAL CHIP 0 5% 1/8W	

JP031	1-216-295-00	METAL CHIP 0 5% 1/10W
-------	--------------	-----------------------

< COIL >

L001	1-408-409-00	INDUCTOR 10uH
L002	1-410-977-11	INDUCTOR 100uH
L003	1-408-413-00	INDUCTOR 22uH
L004	1-408-409-00	INDUCTOR 10uH
L005	1-410-971-11	INDUCTOR 10uH

L006	1-410-787-31	INDUCTOR 0.33uH
L007	1-410-316-11	INDUCTOR 1uH
L008	1-410-972-11	INDUCTOR 15uH
L010	1-410-971-11	INDUCTOR 10uH
L011	1-410-971-11	INDUCTOR 10uH

L098	1-412-292-11	INDUCTOR 1.2uH
------	--------------	----------------

< TRANSISTOR >

⚠ Q001	8-729-173-38	TRANSISTOR 2SA733-K
Q002	8-729-421-19	TRANSISTOR UN2213
Q005	8-729-822-90	TRANSISTOR 2SC3779C
Q006	8-729-822-90	TRANSISTOR 2SC3779C
Q007	8-729-422-27	TRANSISTOR 2SD601A-QRS

Q008	8-729-422-27	TRANSISTOR 2SD601A-QRS
Q009	8-729-422-27	TRANSISTOR 2SD601A-QRS
Q070	8-729-422-27	TRANSISTOR 2SD601A-QRS
Q071	8-729-421-19	TRANSISTOR UN2213



< RESISTOR >


R001	1-216-085-00	METAL CHIP 33K 5% 1/10W
R002	1-216-089-00	METAL CHIP 47K 5% 1/10W
R003	1-216-037-00	METAL CHIP 330 5% 1/10W
R004	1-216-035-00	METAL CHIP 270 5% 1/10W
R005	1-216-025-00	METAL CHIP 100 5% 1/10W

R006	1-216-057-00	METAL CHIP 2.2K 5% 1/10W
R008	1-216-049-00	METAL CHIP 1K 5% 1/10W
R009	1-216-049-00	METAL CHIP 1K 5% 1/10W
R010	1-216-033-00	METAL CHIP 220 5% 1/10W
R012	1-216-081-00	METAL CHIP 22K 5% 1/10W

R013	1-216-063-00	METAL CHIP 3.9K 5% 1/10W
R014	1-216-065-00	METAL CHIP 4.7K 5% 1/10W
R015	1-216-081-00	METAL CHIP 22K 5% 1/10W
R016	1-216-081-00	METAL CHIP 22K 5% 1/10W
R018	1-216-083-00	METAL CHIP 27K 5% 1/10W

R019	1-216-089-00	METAL CHIP 47K 5% 1/10W
------	--------------	-------------------------

The components identified by mark  or dotted line with mark  are critical for safety. Replace only with part number specified.

Les composants identifiés par une marque  sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

Ref. No.	Part No.	Description	Remark		
R020	1-216-081-00	METAL CHIP	22K	5%	1/10W
R023	1-216-081-00	METAL CHIP	22K	5%	1/10W
R025	1-216-081-00	METAL CHIP	22K	5%	1/10W
R029	1-216-065-00	METAL CHIP	4.7K	5%	1/10W
R030	1-216-055-00	METAL CHIP	1.8K	5%	1/10W
R031	1-216-061-00	METAL CHIP	3.3K	5%	1/10W
R032	1-216-057-00	METAL CHIP	2.2K	5%	1/10W
R033	1-216-017-00	METAL CHIP	47	5%	1/10W
R034	1-216-105-00	METAL CHIP	220K	5%	1/10W
R035	1-216-105-00	METAL CHIP	220K	5%	1/10W
R036	1-216-063-00	METAL CHIP	3.9K	5%	1/10W
R038	1-216-089-00	METAL CHIP	47K	5%	1/10W
R039	1-216-043-00	METAL CHIP	560	5%	1/10W
R040	1-216-025-00	METAL CHIP	100	5%	1/10W
R041	1-216-037-00	METAL CHIP	330	5%	1/10W
R042	1-216-055-00	METAL CHIP	1.8K	5%	1/10W
R043	1-216-037-00	METAL CHIP	330	5%	1/10W
R044	1-216-037-00	METAL CHIP	330	5%	1/10W
R046	1-216-119-00	METAL CHIP	820K	5%	1/10W
R047	1-216-037-00	METAL CHIP	330	5%	1/10W
R048	1-216-063-00	METAL CHIP	3.9K	5%	1/10W
R049	1-216-061-00	METAL CHIP	3.3K	5%	1/10W
R050	1-216-069-00	METAL CHIP	6.8K	5%	1/10W
R051	1-216-057-00	METAL CHIP	2.2K	5%	1/10W
R053	1-216-057-00	METAL CHIP	2.2K	5%	1/10W
R054	1-216-029-00	METAL CHIP	150	5%	1/10W
R055	1-216-039-00	METAL CHIP	390	5%	1/10W
R056	1-216-061-00	METAL CHIP	3.3K	5%	1/10W
R057	1-216-067-00	METAL CHIP	5.6K	5%	1/10W
R058	1-216-037-00	METAL CHIP	330	5%	1/10W
R059	1-216-037-00	METAL CHIP	330	5%	1/10W
R060	1-216-057-00	METAL CHIP	2.2K	5%	1/10W
R061	1-216-047-00	METAL CHIP	820	5%	1/10W
R062	1-216-055-00	METAL CHIP	1.8K	5%	1/10W
R063	1-216-021-00	METAL CHIP	68	5%	1/10W
R064	1-216-025-00	METAL CHIP	100	5%	1/10W
R065	1-216-071-00	METAL CHIP	8.2K	5%	1/10W
R070	1-216-097-00	METAL CHIP	100K	5%	1/10W
R071	1-216-121-00	METAL CHIP	1M	5%	1/10W
R072	1-216-690-11	METAL CHIP	43K	0.5%	1/10W
R073	1-216-061-00	METAL CHIP	3.3K	5%	1/10W
R074	1-216-063-00	METAL CHIP	3.9K	5%	1/10W
R075	1-216-073-00	METAL CHIP	10K	5%	1/10W
R076	1-216-097-00	METAL CHIP	100K	5%	1/10W
R077	1-216-065-00	METAL CHIP	4.7K	5%	1/10W
R078	1-216-117-00	METAL CHIP	680K	5%	1/10W
R079	1-216-691-11	METAL CHIP	47K	0.5%	1/10W
R080	1-216-691-11	METAL CHIP	47K	0.5%	1/10W
R081	1-216-089-00	METAL CHIP	47K	5%	1/10W

Ref. No.	Part No.	Description	Remark		
R082	1-216-065-00	METAL CHIP	4.7K	5%	1/10W
R083	1-216-063-00	METAL CHIP	3.9K	5%	1/10W
R084	1-216-049-00	METAL CHIP	1K	5%	1/10W
R085	1-216-073-00	METAL CHIP	10K	5%	1/10W
R086	1-216-063-00	METAL CHIP	3.9K	5%	1/10W
R087	1-216-077-00	METAL CHIP	15K	5%	1/10W
R089	1-216-073-00	METAL CHIP	10K	5%	1/10W
R098	1-216-055-00	METAL CHIP	1.8K	5%	1/10W
R099	1-216-079-00	METAL CHIP	18K	5%	1/10W

< VARIABLE RESISTOR >

RV001	1-241-630-11	RES. ADJ. CARBON	10K		
RV002	1-241-079-11	RES. ADJ. CARBON	4.7K		
RV070	1-228-993-00	RES. ADJ. METAL	4.7K		
RV071	1-228-995-00	RES. ADJ. METAL	22K		
RV072	1-228-996-00	RES. ADJ. METAL	47K		

RV073	1-241-630-11	RES. ADJ. CARBON	10K		
-------	--------------	------------------	-----	--	--

< SWITCH >

SWF001	1-404-971-11	FILTER, SURFACE WAVE			
--------	--------------	----------------------	--	--	--

< COIL >

T001	1-404-749-11	COIL			
T002	1-404-802-11	COIL			
T003	1-404-752-11	COIL			
T004	1-404-744-11	COIL, IF			

< TUNER >

TU001	1-465-239-21	TUNER, ET			
-------	--------------	-----------	--	--	--

* A-6754-388-A YC-114 BOARD, COMPLETE

(Ref. No 1,000 Series)

< CAPACITOR >

C002	1-163-031-11	CERAMIC CHIP	0.01uF		50V
C003	1-163-113-00	CERAMIC CHIP	68PF	5%	50V
C004	1-124-126-00	ELECT	47uF	20%	10V
C007	1-163-129-00	CERAMIC CHIP	330PF	5%	50V
C008	1-163-031-11	CERAMIC CHIP	0.01uF		50V
C009	1-163-038-00	CERAMIC CHIP	0.1uF		25V
C010	1-124-126-00	ELECT	47uF	20%	10V
C011	1-124-907-11	ELECT	10uF	20%	50V
C012	1-163-092-00	CERAMIC CHIP	9PF		0.25PF 50V
C013	1-124-903-11	ELECT	1uF	20%	50V
C014	1-124-903-11	ELECT	1uF	20%	50V
C016	1-163-031-11	CERAMIC CHIP	0.01uF		50V
C017	1-124-126-00	ELECT	47uF	20%	10V

Ref. No.	Part No.	Description	Remark
C018	1-163-031-11	CERAMIC CHIP 0.01uF	50V
C019	1-163-037-11	CERAMIC CHIP 0.022uF	10% 25V
C020	1-124-907-11	ELECT 10uF	20% 50V
C021	1-163-031-11	CERAMIC CHIP 0.01uF	50V
C022	1-163-038-00	CERAMIC CHIP 0.1uF	25V
C023	1-163-031-11	CERAMIC CHIP 0.01uF	50V
C024	1-124-907-11	ELECT 10uF	20% 50V
C025	1-163-031-11	CERAMIC CHIP 0.01uF	50V
C027	1-163-809-11	CERAMIC CHIP 0.047uF	10% 25V
C031	1-124-499-11	ELECT, NONPOLAR 1uF	20% 50V
C032	1-124-903-11	ELECT 1uF	20% 50V
C033	1-163-125-00	CERAMIC CHIP 220PF	5% 50V
C034	1-163-031-11	CERAMIC CHIP 0.01uF	50V
C035	1-163-121-00	CERAMIC CHIP 150PF	5% 50V
C037	1-124-907-11	ELECT 10uF	20% 50V
C038	1-163-031-11	CERAMIC CHIP 0.01uF	50V
C039	1-163-139-00	CERAMIC CHIP 820PF	5% 50V
C040	1-163-109-00	CERAMIC CHIP 47PF	5% 50V
C041	1-164-232-11	CERAMIC CHIP 0.01uF	50V
C042	1-163-103-00	CERAMIC CHIP 27PF	5% 50V
C043	1-163-093-00	CERAMIC CHIP 10PF	5% 50V
C044	1-163-123-00	CERAMIC CHIP 180PF	5% 50V
C045	1-163-088-00	CERAMIC CHIP 5PF	50V
C046	1-163-809-11	CERAMIC CHIP 0.047uF	10% 25V
C047	1-163-031-11	CERAMIC CHIP 0.01uF	50V
C048	1-164-161-11	CERAMIC CHIP 0.0022uF	10% 100V
C049	1-124-907-11	ELECT 10uF	20% 50V
C050	1-163-113-00	CERAMIC CHIP 68PF	5% 50V
C052	1-163-031-11	CERAMIC CHIP 0.01uF	50V
C053	1-163-123-00	CERAMIC CHIP 180PF	5% 50V
C055	1-163-031-11	CERAMIC CHIP 0.01uF	50V
C056	1-163-125-00	CERAMIC CHIP 220PF	5% 50V
C057	1-163-114-00	CERAMIC CHIP 75PF	5% 50V
C058	1-163-097-00	CERAMIC CHIP 15PF	5% 50V
C059	1-124-903-11	ELECT 1uF	20% 50V
C061	1-163-031-11	CERAMIC CHIP 0.01uF	50V
C062	1-163-031-11	CERAMIC CHIP 0.01uF	50V
C066	1-163-031-11	CERAMIC CHIP 0.01uF	50V
C069	1-124-902-00	ELECT 0.47uF	20% 50V
C070	1-124-927-11	ELECT 4.7uF	20% 100V
C071	1-124-126-00	ELECT 47uF	20% 10V
C072	1-163-031-11	CERAMIC CHIP 0.01uF	50V
C073	1-124-903-11	ELECT 1uF	20% 50V
C074	1-163-090-00	CERAMIC CHIP 7PF	50V
C075	1-163-117-00	CERAMIC CHIP 100PF	5% 50V
C076	1-163-105-00	CERAMIC CHIP 33PF	5% 50V
C080	1-163-131-00	CERAMIC CHIP 390PF	5% 50V
C081	1-163-109-00	CERAMIC CHIP 47PF	5% 50V
C085	1-162-637-11	CERAMIC CHIP 0.47uF	16V

Ref. No.	Part No.	Description	Remark
< CONNECTOR >			
CND01	1-573-826-11	CONNECTOR, BOARD TO BOARD 12P	
CND02	1-573-828-11	CONNECTOR, BOARD TO BOARD 14P	
< DIODE >			
D001	8-719-911-19	DIODE 1SS119	
D004	8-719-911-19	DIODE 1SS119	
D005	8-719-911-19	DIODE 1SS119	
D007	8-719-911-19	DIODE 1SS119	
D009	8-719-911-19	DIODE 1SS119	
D010	8-719-911-19	DIODE 1SS119	
< DELAY LINE >			
DL001	1-415-668-31	DELAY LINE, ULTRASONIC	
< IC >			
IC001	8-759-046-76	IC LA7396	
IC002	8-759-821-50	IC LC8991	
< JUMPER RESISTOR >			
JR001	1-216-296-00	METAL CHIP 0 5% 1/8W	
JR501	1-216-296-00	METAL CHIP 0 5% 1/8W	
JR502	1-216-296-00	METAL CHIP 0 5% 1/8W	
JR503	1-216-295-00	METAL CHIP 0 5% 1/10W	
JR504	1-216-295-00	METAL CHIP 0 5% 1/10W	
JR505	1-216-296-00	METAL CHIP 0 5% 1/8W	
JR506	1-216-295-00	METAL CHIP 0 5% 1/10W	
JR507	1-216-296-00	METAL CHIP 0 5% 1/8W	
JR508	1-216-296-00	METAL CHIP 0 5% 1/8W	
JR509	1-216-296-00	METAL CHIP 0 5% 1/8W	
JR510	1-216-296-00	METAL CHIP 0 5% 1/8W	
JR511	1-216-295-00	METAL CHIP 0 5% 1/10W	
JR512	1-216-295-00	METAL CHIP 0 5% 1/10W	
JR513	1-216-296-00	METAL CHIP 0 5% 1/8W	
JR514	1-216-295-00	METAL CHIP 0 5% 1/10W	
JR515	1-216-295-00	METAL CHIP 0 5% 1/10W	
JR516	1-216-296-00	METAL CHIP 0 5% 1/8W	
JR518	1-216-296-00	METAL CHIP 0 5% 1/8W	
JR560	1-216-295-00	METAL CHIP 0 5% 1/10W	
JR561	1-216-295-00	METAL CHIP 0 5% 1/10W	
JR562	1-216-295-00	METAL CHIP 0 5% 1/10W	
< COIL >			
L002	1-410-524-41	INDUCTOR 180uH	
L003	1-410-521-11	INDUCTOR 100uH	
L004	1-408-421-00	INDUCTOR 100uH	
L005	1-410-501-11	INDUCTOR 2.2uH	

Ref. No.	Part No.	Description	Remark
L006	1-417-316-11	INDUCTOR 120uH	
L007	1-408-427-00	INDUCTOR 330uH	
L008	1-408-416-00	INDUCTOR 39uH	
L009	1-408-429-00	INDUCTOR 470uH	
L010	1-408-421-00	INDUCTOR 100uH	
L011	1-410-977-11	INDUCTOR 100uH	
L013	1-408-418-00	INDUCTOR 56uH	
L020	1-408-412-00	INDUCTOR 18uH	
L021	1-408-416-00	INDUCTOR 39uH	

< TRANSISTOR >

Q001	8-729-422-27	TRANSISTOR 2SD601A-Q	
Q005	8-729-422-36	TRANSISTOR 2SB709A-Q	
Q006	8-729-422-36	TRANSISTOR 2SB709A-Q	
Q007	8-729-422-27	TRANSISTOR 2SD601A-Q	
Q008	8-729-422-36	TRANSISTOR 2SB709A-Q	
Q010	8-729-421-19	TRANSISTOR UN2213	
Q011	8-729-424-56	TRANSISTOR UN211L	
Q014	8-729-424-46	TRANSISTOR UN211E	
Q015	8-729-421-19	TRANSISTOR UN2213	
Q016	8-729-422-27	TRANSISTOR 2SD601A-Q	
Q018	8-729-421-19	TRANSISTOR UN2213	
Q020	8-729-422-36	TRANSISTOR 2SB709A-Q	
Q022	8-729-421-19	TRANSISTOR UN2213	
Q023	8-729-421-19	TRANSISTOR UN2213	

< RESISTOR >

R001	1-216-085-00	METAL CHIP 33K 5%	1/10W
R004	1-216-049-00	METAL CHIP 1K 5%	1/10W
R005	1-216-085-00	METAL CHIP 33K 5%	1/10W
R006	1-216-085-00	METAL CHIP 33K 5%	1/10W
R007	1-216-055-00	METAL CHIP 1.8K 5%	1/10W
R008	1-216-041-00	METAL CHIP 470 5%	1/10W
R009	1-216-049-00	METAL CHIP 1K 5%	1/10W
R010	1-216-073-00	METAL CHIP 10K 5%	1/10W
R013	1-216-039-00	METAL CHIP 390 5%	1/10W
R014	1-216-043-00	METAL CHIP 560 5%	1/10W
R015	1-216-081-00	METAL CHIP 22K 5%	1/10W
R016	1-216-071-00	METAL CHIP 8.2K 5%	1/10W
R017	1-216-071-00	METAL CHIP 8.2K 5%	1/10W
R018	1-216-075-00	METAL CHIP 12K 5%	1/10W
R019	1-216-081-00	METAL CHIP 22K 5%	1/10W
R020	1-216-049-00	METAL CHIP 1K 5%	1/10W
R021	1-216-081-00	METAL CHIP 22K 5%	1/10W
R022	1-216-049-00	METAL CHIP 1K 5%	1/10W
R023	1-216-073-00	METAL CHIP 10K 5%	1/10W
R025	1-216-063-00	METAL CHIP 3.9K 5%	1/10W
R027	1-216-052-00	METAL CHIP 1.3K 5%	1/10W
R028	1-216-061-00	METAL CHIP 3.3K 5%	1/10W

Ref. No.	Part No.	Description	Remark
R029	1-216-065-00	METAL CHIP 4.7K 5%	1/10W
R030	1-216-057-00	METAL CHIP 2.2K 5%	1/10W
R031	1-216-049-00	METAL CHIP 1K 5%	1/10W
R032	1-216-093-00	METAL CHIP 68K 5%	1/10W
R033	1-216-045-00	METAL CHIP 680 5%	1/10W
R034	1-216-121-00	METAL CHIP 1M 5%	1/10W
R035	1-216-049-00	METAL CHIP 1K 5%	1/10W
R036	1-216-071-00	METAL CHIP 8.2K 5%	1/10W
R037	1-216-049-00	METAL CHIP 1K 5%	1/10W
R038	1-216-036-00	METAL CHIP 300 5%	1/10W
R039	1-216-057-00	METAL CHIP 2.2K 5%	1/10W
R040	1-216-057-00	METAL CHIP 2.2K 5%	1/10W
R041	1-216-061-00	METAL CHIP 3.3K 5%	1/10W
R042	1-216-057-00	METAL CHIP 2.2K 5%	1/10W
R044	1-216-065-00	METAL CHIP 4.7K 5%	1/10W
R046	1-216-061-00	METAL CHIP 3.3K 5%	1/10W
R047	1-216-049-00	METAL CHIP 1K 5%	1/10W
R048	1-216-089-00	METAL CHIP 47K 5%	1/10W
R054	1-216-049-00	METAL CHIP 1K 5%	1/10W
R055	1-216-049-00	METAL CHIP 1K 5%	1/10W
R056	1-216-204-00	METAL GLAZE 1.8K 5%	1/8W
R057	1-216-057-00	METAL CHIP 2.2K 5%	1/10W
R058	1-216-025-00	METAL CHIP 100 5%	1/10W
R060	1-216-037-00	METAL CHIP 330 5%	1/10W
R061	1-216-057-00	METAL CHIP 2.2K 5%	1/10W
R062	1-216-073-00	METAL CHIP 10K 5%	1/10W

< VARIABLE RESISTOR >

RV001	1-241-630-11	RES. ADJ. CARBON 10K	
RV002	1-241-630-11	RES. ADJ. CARBON 10K	
RV003	1-241-630-11	RES. ADJ. CARBON 10K	
RV004	1-241-630-11	RES. ADJ. CARBON 10K	
RV005	1-241-628-11	RES. ADJ. CARBON 2.2K	

< CRYSTAL >

X001	1-577-380-11	VIBRATOR, CRYSTAL (3.58MHz)	
------	--------------	-----------------------------	--

477-07

Ref. No. Part No. Description Remark

MISCELLANEOUS

1	1-466-627-21	SWITCH BLOCK, CONTROL (SLV-595HF)	
1	1-466-627-31	SWITCH BLOCK, CONTROL (SLV-696HF)	
54	1-572-662-11	SWITCH, ROTARY	
△ 62	1-413-686-11	POWER BLOCK (SR-370 BOARD)	
110	1-690-347-11	WIRE, FLAT TYPE (22 CORE)	
113	1-555-110-00	CABLE, PIN	
161	1-506-482-11	CONNECTOR 3P, MALE	
260	1-543-647-11	HEAD, FE	
264	8-848-581-01	DRUM ASSY, ROTARY UPPER (DZR-49-R) (SLV-696HF)	
264	8-848-583-01	DRUM ASSY, ROTARY UPPER (DZR-50-R) (SLV-595HF)	
267	A-6761-129-C	HEAD BLOCK ASSY, ACE	
M901	8-848-580-11	DRUM ASSY (DZH-49A-R) (SLV-696HF)	
M901	8-848-582-11	DRUM ASSY (DZH-50A-R) (SLV-595HF)	
M902	8-835-469-01	MOTOR, DC U-26J (CAPSTAN)	
M903	X-3733-302-1	MOTOR ASSY, CAM	
M904	X-3727-784-1	MOTOR ASSY (LOADING)	
S1	1-692-062-21	SWITCH, ROTARY	

ACCESSORIES & PACKING MATERIALS

△	1-590-135-31	CORD, POWER	
	3-753-884-21	MANUAL, INSTRUCTION (ENGLISH)	
	3-753-884-31	MANUAL, INSTRUCTION (FRENCH) (Canadian)	
*	3-795-581-21	SAFEGUARD (SONY), IMPORTANT (US)	
	1-417-139-11	MATCHING TRANSFORMER, ANTENNA	
	1-465-915-11	REMOTE COMMANDER (RMT-V102D) (SLV-595HF)	
	1-465-916-11	REMOTE COMMANDER (RMT-V112A) (SLV-696HF)	
	1-558-076-41	CORD, CONNECTION (RF)	
	1-575-334-11	CORD, CONNECTION (AUDIO/VIDEO 3P-3P)	
*	3-944-619-01	INDIVIDUAL CARTON (SLV-595HF)	
*	3-944-619-11	INDIVIDUAL CARTON (SLV-696HF)	
*	3-944-620-01	CUSHION (UPPER)	
*	3-944-621-01	CUSHION (LOWER)	

Ref. No. Part No. Description Remark

HARDWARE LIST

#1	7-685-133-19	SCREW +BTP 2.6X6 TYPE2 M-S	
#2	7-685-648-79	SCREW +BVTP 3X12 TYPE2 IT-3	
#3	7-621-255-25	SCREW +PTT 2X4 (S)	
#4	7-685-650-79	SCREW +BVTP 3X16 TYPE2 IT-3	
#5	7-685-647-79	SCREW +BVTP 3X10 TYPE2 IT-3	
#6	7-682-645-01	SCREW +PS 3X4	
#7	7-685-646-79	SCREW +BVTP 3X8 TYPE2 IT-3	
#8	7-682-547-04	SCREW +P 3X6	
#9	7-682-546-04	SCREW +P 3X5	
#10	7-682-548-04	SCREW +P 3X8	
#11	7-621-732-08	SET-SCT, HEX. 2X3 FLAT POINT	
#12	7-628-254-00	SCREW +PS 2.5X5	

<p>The components identified by mark △ or dotted line with mark △ are critical for safety. Replace only with part number specified.</p>	<p>Les composants identifiés par une marque △ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.</p>
---	---

SECTION 7 ELECTRICAL ADJUSTMENTS

During the adjustment, see the parts arrangement diagram relevant to the adjustment on page 182.

Necessary items and indications for total adjustment of electric circuit of this unit will be described in this chapter.

[Instruments to be Used]

- 1) Color TV
- 2) Single or dual trace type oscilloscope, band more than 30 MHz, delay mode, as provided.
- 3) Frequency counter (4 digits or more)
- 4) NTSC pattern generator
- 5) Digital voltmeter
- 6) Audio level meter
- 7) Audio generator
- 8) Attenuator
- 9) Distortion factor gauge
- 10) Audio multiple signal generator
- 11) Alignment tape
Part code: H7099046H (MH-1)
- 12) Hi-Fi alignment tape
Part code: H7099153H (Hi-Fi 400 Hz)

[Connection]

Unless otherwise specified, connect and adjust the measurement equipment as follows.

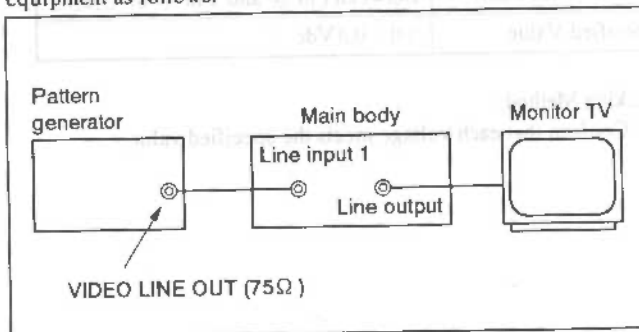


Fig. 7-1.

[Set-up for Adjustment]

The video signal from the pattern generator is used as adjustment signal for electrical adjustment. This video signal should meet the requirement. Connect the oscilloscope to the video input terminal on the MA-106 board and make sure that the amplitudes of sync signal of video signal, video portion and burst signal are flat at approximately 0.3, 0.7 and 0.3V, respectively, and that the level ratio of the burst signal and "red signal" are 0.30 : 0.66. Fig. 7-2. shows video signals (color bars) used in adjusting the electrical adjustment.

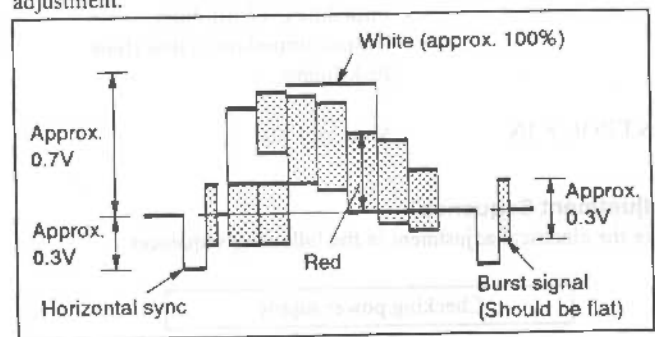


Fig. 7-2. Color bar signal of pattern generator

[Alignment Tape (MH-1)]

	Mode	Time	video signal	Audio signal
1	SP	Ten minutes	Stair-step	7 kHz
2		Five minutes	—	3 kHz
3		Ten minutes	Color bar	1 kHz
4		Three minutes	RF sweep	

[Hi-Fi Alignment Tape]

	Mode	Time	video signal	Audio signal
1	SP	Six minutes	Monaural scope	Normal: no signal HIFI: 400 Hz

(Specified Input/Output Level Impedance)

Input/output terminal

LINE IN 1 and 2 VIDEO IN (phono jack) (1 each)
Input signal: 1 V_{p-p}, 75 ohms, unbalanced, sync negative
AUDIO IN (phono jack) (2 each)
Input level: -7.5 dBs (0 dBs=0.775 V_{rms})
Input impedance: more than 47 kilohms

LINE OUT


VIDEO OUT (phono jack) (1)
Output signal: 1 V_{p-p}, 75 ohms, unbalanced, sync negative
AUDIO OUT (phono jack) (2)
standard output: -7.5 dBs at load
impedance 47 kilohms
Output impedance: less than 10 kilohms

CONTROL S IN

Mini jack (1)

(Adjustment Sequence)

Make the electrical adjustment in the following sequences.

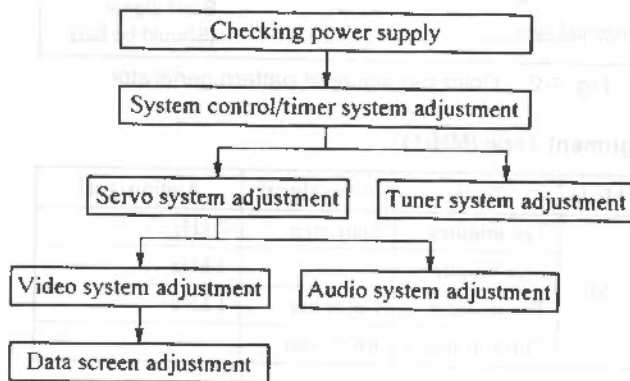

7-1. POWER SUPPLY CHECK (SR-370 BOARD)

Mode	E-E
Measurement Equipment	Digital voltmeter
UNSW 6V check	
Measurement Point	Pin ④ of CN101
Specified Value	5.9 ± 0.25 Vdc
MTR 12V check	
Measurement Point	Pin ⑫ of CN101
Specified Value	12.3 ± 0.3 Vdc
SW 12V check	
Measurement Point	Pin ① of CN101
Specified Value	12.0 ± 0.3 Vdc
SW 5V check	
Measurement Point	Pin ③ of CN101
Specified Value	5.1 ± 0.2 Vdc
+35V check	
Measurement Point	Pin ⑧ of CN101
Specified Value	35.0 ± 0.3 Vdc
-30V check	
Measurement Point	Pin ⑤ of CN102
Specified Value	-28.5 ± 2.5 Vdc
DC 3.2V check	
Measurement Point	Between Pin ⑥ and Pin ⑦ of CN102
Specified Value	3.0 ± 0.3 Vdc

Checking Method:

- 1) Confirm that each voltage meets the specified value.

7-2. SYSTEM CONTROL/TIMER SYSTEM ADJUSTMENT

1. Clock adjustment (MF-140 board)

Measurement Point	Pin ⑥ of IC901
Measurement Equipment	Frequency counter (Interval counter mode)
Adjustment Element	CT901
Specified Value	0.1249995 ± 0.0000005 sec

Note: Do not adjust CT901 except when replacing IC901.

Adjustment Method:

- 1) Connect IC901 ⑥ to ground. (This puts the set into adjustment mode)
- 2) Connect the frequency counter as shown below.
- 3) Set oscillation frequency to the specified value using CT901.

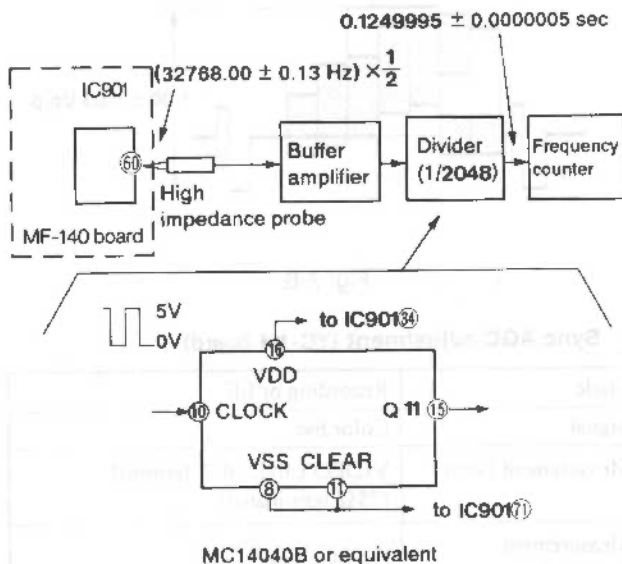


Fig. 7-3.

7-3. SERVO SYSTEM ADJUSTMENT

1. V switching position adjustment (MA-106 board)

Mode	Playback
Signal	Alignment tape, Stair step
Measurement Point	CH1: VIDEO LINE OUT terminal CH2: Pin ① of CN005 (RF SWP)
Measurement Equipment	Oscilloscope
Adjustment Element	RV501
Specified Value	$413 \pm 32 \mu\text{sec}$ ($6.5 \pm 0.5\text{H}$)

Adjustment Method:

- 1) Press the tracking buttons \blacktriangledown and \blacktriangle at a time.
- 2) Adjust for $413 \pm 32 \mu\text{sec}$ (6.5 ± 0.5) using RV501.

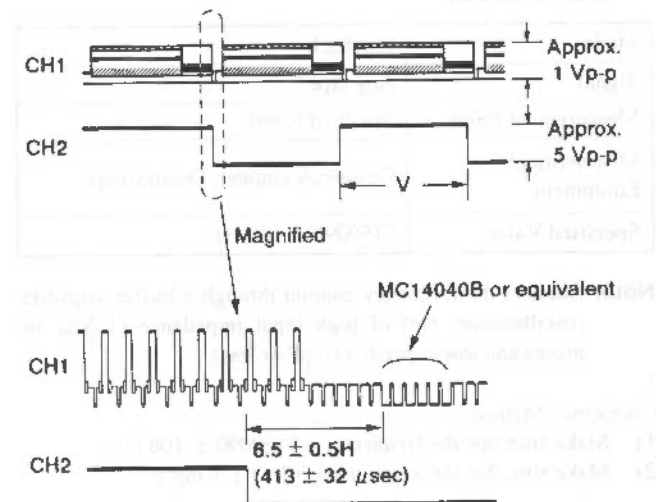


Fig. 7-4. Switching position adjustment

7-4. VIDEO SYSTEM ADJUSTMENT

Adjust the video system in the following sequences as a rule. The color video signal supplied from the pattern generator is used as a video input signal for video system adjustment in the recording mode. Make sure that sync and color burst signals meet requirements specified at set up of adjustment shown in Fig. 7-2.

[Adjustment Sequences]

- 1) Crystal oscillation frequency check
- 2) Playback Y signal level adjustment
- 3) Sync AGC adjustment
- 4) Sync tip carrier set and deviation adjustment
- 5) Recording chroma signal level adjustment

1. Crystal oscillation frequency check (YC-114 board)

Mode	Playback
Signal	Any tape
Measurement Point	Pin ② of IC001
Measurement Equipment	Frequency counter, Oscilloscope
Specified Value	7159090 ± 108 Hz

Note: Connect the frequency counter through a buffer amplifier (oscilloscope, etc) of high input impedance (1 MΩ or more) and low capacity (10 pF or less).

Checking Method:

- 1) Make sure that the frequency is 7159090 ± 108 Hz.
- 2) Make sure that the amplitude is 610 ± 130 mp-p.

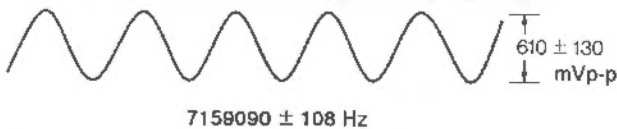


Fig. 7-5.

2. Playback Y signal level adjustment (YC-114 board)

Mode	Playback
Signal	Alignment tape, color bar
Measurement Point	VIDEO LINE OUT terminal (75Ω terminated)
Measurement Equipment	Oscilloscope
Adjustment Element	RV004
Specified Value	1.00 ± 0.05 Vp-p

Note 1: VIDEO LINE OUT should be terminated at 75Ω .

Note 2: Make this adjustment EDIT OFF condition.

Adjustment Method:

- 1) Adjust for 1.00 ± 0.05 Vp-p using RV004.

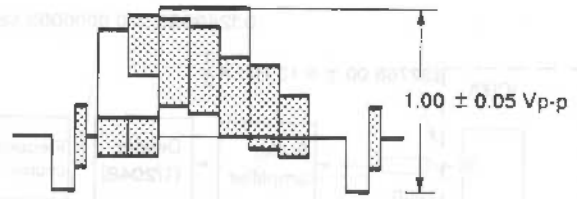


Fig. 7-6.

3. Sync AGC adjustment (YC-114 board)

Mode	Recording or EE
Signal	Color bar
Measurement Point	VIDEO LINE OUT terminal (75Ω terminated)
Measurement Equipment	Oscilloscope
Adjustment Element	RV002
Specified Value	1.00 ± 0.05 Vp-p

Note: VIDEO LINE OUT should be terminated at 75Ω .

Adjustment Method:

- 1) Adjust for 1.00 ± 0.05 Vp-p using RV002.

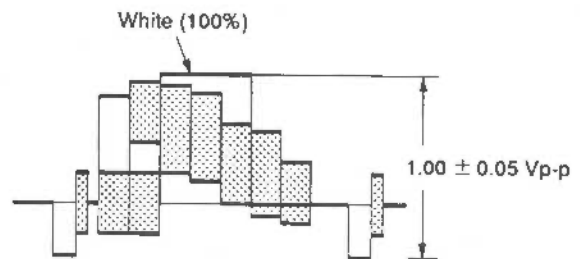


Fig. 7-7.

4. Sync tip carrier set and deviation adjustment (YC-114 board)

Before starting this adjustment, be sure to check that "2. recording Y signal level adjustment" has been completed.

Sync tip carrier set	
Mode	E-E
Signal	No signal
Measurement Point	Pin ⑩ of CN002
Measurement Equipment	Frequency counter
Adjustment Element	RV001
Specified Value	3.45 ± 0.05 MHz
Deviation adjustment	
Mode	Recording and playback
Signal	Color bar
Measurement Point	VIDEO LINE OUT terminal (75Ω terminated)
Measurement Equipment	Oscilloscope
Adjustment Element	RV003
Specified Value	1.00 ± 0.05 Vp-p

Note 1: Make this adjustment EDIT OFF condition.

Note 2: VIDEO LINE OUT should be terminated at 75Ω.

Adjustment Method:

- 1) Make no signal state and select the E-E mode.
- 2) Connect the frequency counter to the Pin ⑩ of CN002 and adjust for 3.45 ± 0.05 MHz using RV001.
- 3) Input the color bar signal to make recording.
- 4) Playback the recorded tape portion and check the play back Y signal level of VIDEO LINE OUT terminal (75Ω terminated).
Specification: Should be 1.00 ± 0.05 Vp-p.
- 5) If does not meet the specification, repeat 1) to 4) after adjusting RV003.

Playback Y signal level

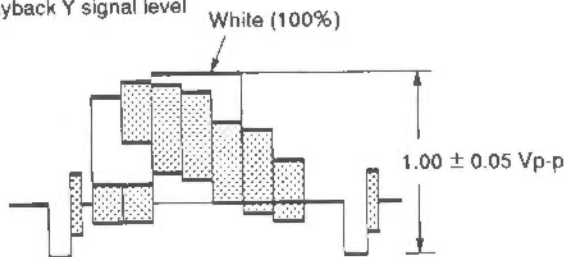


Fig. 7-8.

5. Recording chroma signal level adjustment (YC-114 board)

Mode	E-E
Signal	Color bar
Measurement Point	Pin ⑭ of CN002
Measurement Equipment	Oscilloscope
Adjustment Element	RV005
Specified Value	200 ± 5 mVp-p

Adjustment Method:

- 1) Adjust the color bar "red" level to 200 ± 5 mVp-p using RV007.

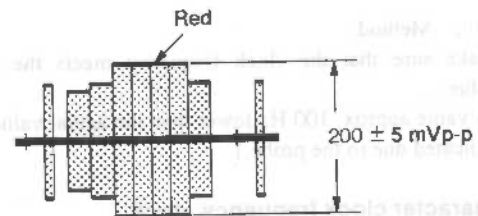


Fig. 7.9

7-5. DATA SCREEN ADJUSTMENT

1. 4 fsc clock check (CG-14 board)

Mode	E-E
Signal	No signal
Measurement Point	Pin ② of IC602 (Note 1)
Measurement Equipment	Frequency counter
Specified Value	14318180 ± 100 Hz

Note 1: Connect a probe of high input impedance (1 MΩ or more) and low capacity (10 pF or less) through 1 kΩ resistor. (1-249-417-11)

Checking Method:

- 1) Make sure that the clock frequency meets the specified value.
(A value approx. 100 Hz lower than the actual value may be indicated due to the probe.)

2. Character clock frequency check (CG-14 board)

Mode	Playback
Signal	Alignment tape, color bar or stair case
Measurement Point	Pin ⑤ of IC602 (Note 1)
Measurement Equipment	Frequency counter
Specified Value	7.3 ± 0.3 MHz

Note 1: Connect a probe of high input impedance (1 MΩ or more) and low capacity (10 pF or less) to the measurement point through 1 kΩ resistor. (1-249-417-11)

Checking Method:

- 1) Make sure that the clock frequency meets the specified value.
(A value approx. 0.1 to 0.2 MHz lower than the actual value may be indicated due to the probe.)
- 2) Make sure that tracking indication appears at the nearly center of the width when manual tracking ON.

7-6. AUDIO SYSTEM ADJUSTMENT

[Connection]

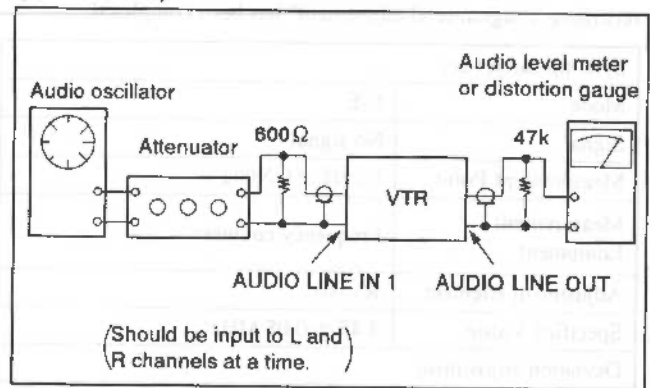


Fig. 7-10.

7-6-1. Hi-Fi Audio System Adjustment

Unless otherwise specified, set and adjust as follows.

Input selection Line 1
Audio monitor Stereo

[Adjustment Sequence]

- 1) VCO f₀ adjustment
- 2) Band pass filter f₀ adjustment
- 3) HF Switching position adjustment
- 4) Hi-Fi/normal discrimination adjustment
- 5) Deviation adjustment
- 6) E-E output level check
- 7) Overall level characteristic check

1. VCO fo adjustment (HF-24 board)

The measurement point of the right channel is indicated in [].

Mode	Recording
Signal	No signal
Measurement Equipment	Frequency counter
1.3 MHz adjustment	
Measurement Equipment	Pin ⑦ of IC201
Adjustment Element	RV202
Specified Value	1.299 ± 0.001 MHz
1.7 MHz adjustment	
Measurement Point	Pin ⑧ of IC201
Adjustment Element	RV205
Specified Value	1.700 ± 0.001 MHz

Note: Connect the frequency counter through a buffer amplifier (oscilloscope, etc.) of high input impedance ($1\text{ M}\Omega$ or more) and low capacity (10 pF or less).

Adjustment Method:

- 1) Connect the frequency counter to Pin ⑦ [⑧] of IC201.
- 2) Adjust for 1.299 ± 0.001 MHz [1.700 ± 0.001 MHz] using RV202 [RV205].

2. Band-pass filter to adjustment (HF-24 board)

Mode	Playback
Signal	Tape recorded in SP mode
Measurement Point	CH1: Pin ⑦ of IC201 CH2: Pin ⑧ of IC201
Measurement Equipment	Oscilloscope
Adjustment Element	RV204
Specified Value	A=B

Connection:

- 1) Remove CN006 on the MA-106 board and input 50 mVp-p , 1.72 MHz sine-wave from the signal generator to Pin ⑦ of CN010.

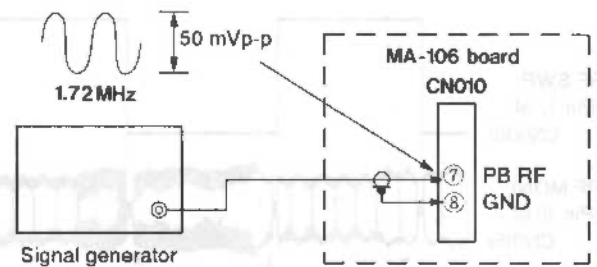


Fig. 7-11.

Adjustment Method:

- 1) Adjust so that the signal level of Pin ⑦ and ⑧ of IC201 are equal using RV204 (Signal level is approximately 300 mVp-p).

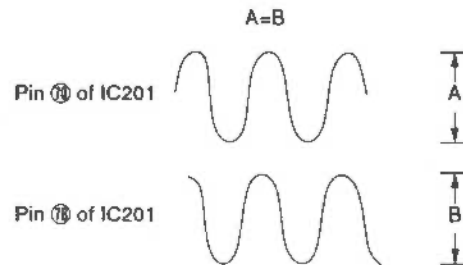


Fig. 7-12.

3. HF switching position adjustment (MA-106 board)

Mode	Playback
Signal	Hi-Fi alignment tape
Measurement Point	CH1: Pin ⑪ of CN005 (RF SWP) CH2: Pin ⑥ of CN015 (RF MONI)
Measurement Equipment	Oscilloscope
Adjustment Element	RV502
Specified Value	Be sure that there is no lacking portion.

Adjustment Method:

- 1) Press tracking buttons \blacktriangle and \blacktriangledown at a time.
- 2) Correct the lacking portion of RF signal using RV502.

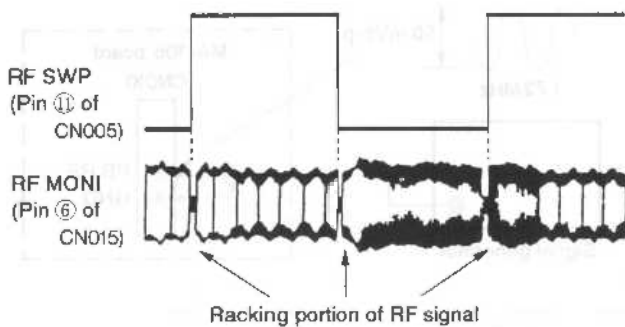


Fig. 7-13.

4. Hi-Fi/normal discrimination adjustment (HF-24 board)

Mode	Playback
Signal	Hi-Fi alignment tape
Measurement Point	CH1: Pin ⑪ of CN005 (RF SWP) (MA-106 board) CH2: Pin ⑫ of CN202 (RF MONI)
Measurement Equipment	Oscilloscope
Adjustment Element	RV203
Specified Value	300 ± 10 mVp-p

Adjustment Method:

- 1) Adjust the RF signal level to the maximum using the tracking buttons (\blacktriangle and \blacktriangledown).
- 2) Adjust the RF signal level to 300 ± 10 mVp-p using RV203.
- 3) Shift the tracking until playback picture goes out of order and check the followings.
 1. "STEREO" lit at the tracking center on the fluorescent display should be disappeared.
 2. 400 Hz audio output should be eliminated and no audio output is obtained.
(The playback noise of normal audio can be heard.)
 3. Abnormal noise should not be generated.

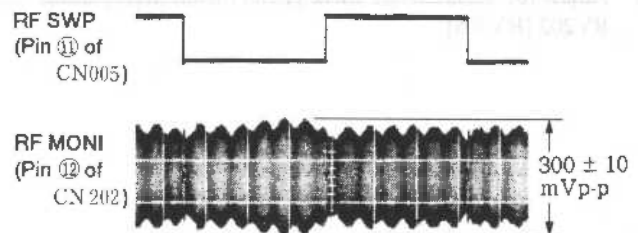


Fig. 7-14.

5. Deviation adjustment (HF-24 board)

The adjustment element of the right channel is indicated in [].

Mode	Playback
Signal	Hi-Fi alignment tape
Measurement Point	AUDIO LINE OUT left [right]
Measurement Equipment	Audio level meter
Adjustment Element	RV201 [RV206]
Specified Value	-7.5 ± 0.2 dBs

Adjustment Method:

- 1) Make sure that "STEREO" segment lights on the fluorescent display.
- 2) Adjust left [right] channel audio output level to -7.5 ± 0.2 dBs using RV201 [RV206].

6. E-E output level Check (HF-24 board)

The measurement point of the right channel is indicated in [].

Mode	E-E
Signal	400 Hz
Measurement Point	AUDIO LINE OUT terminal left [right]
Measurement Equipment	Audio level meter
Specified Value	-7.5 ± 2 dBs

Checking Method:

- 1) Connect the audio level meter to Pin ⑤ [⑰] of CN201.
- 2) Adjust audio generator output level so that 400 Hz signal level becomes -15.5 dBs.
- 3) Make sure that 400 Hz signal level of left [right] channel AUDIO LINE OUT terminal is -7.5 ± 0.2 dBs.
- 4) Make sure that REC level indication of left [right] channel on the front panel indicates 0 dB.

7. Overall level characteristic Check

The measurement point of the right channel is indicated in [].

Mode	Recording and playback
Signal	400 Hz
Measurement Point	AUDIO LINE OUT terminal: left [right]
Measurement Equipment	Audio level meter
Specified Value	-7.5 ± 2 dBs

Checking Method:

- 1) Adjust audio generator output level so that left [right] AUDIO LINE IN level is -7.5 ± 0.1 dBs.
- 2) Record signal.
- 3) Playback the recorded portion.
- 4) Make sure that left [right] channel AUDIO LINE OUT level is -7.5 ± 2 dBs.

7-6-2. Normal Audio System Adjustment (MA-106 board)

- Make adjustment in the SP mode.
 - Set the audio monitor in normal (*1).
- *1: A condition in which "STEREO", "MAIN L" and "SUB R" do not appear on the fluorescent display in playback.

(Adjustment Sequence)

- 1) ACE head adjustment...See mechanism block adjustment.
- 2) Playback output level check
- 3) Recording bias adjustment
- 4) Overall level characteristic check

1. ACE head adjustment

See "Mechanism Block Adjustment".

2. Playback output level check

Mode	Playback
Signal	Alignment tape, 1 kHz (color bar) portion
Measurement Point	AUDIO LINE OUT terminal
Measurement Equipment	Audio level meter
Specified Value	-1.5 ± 2 dBs

Checking Method:

- 1) Playback 1 kHz portion and make sure that AUDIO LINE OUT signal level is -1.5 ± 2 dBs.

3. Recording bias adjustment (MA-106 board)

Mode	Recording and playback (SP mode)
Signal	400 Hz, -30 dBs 7 kHz, -30 dBs
Measurement Point	AUDIO LINE OUT terminal
Measurement Equipment	Audio level meter
Adjustment Element	RV301
Specified Value	0 ± 2 dB

Note: Tape path adjustment should have been completed.

Adjustment Method:

- 1) Input signal of 400 Hz, -30 dBs simultaneously to both L and R channels of AUDIO LINE IN.
- 2) Make recording.
- 3) Set the AUDIO LINE IN signal to 7 kHz, -30 dBs and make recording.
- 4) Playback a recorded portion and measure output levels at 400 Hz and 7 kHz.
- 5) Confirm that the 7 kHz playback signal level is within a range of 0 ± 2 dB against the 400 Hz playback signal level. When beyond this range, adjust RV301 and repeat the steps (1) through (5).

4. Overall level characteristic check

Mode	Recording and playback (SP mode)
Signal	AUDIO LINE OUT terminal
Measurement Point	Audio level meter
Measurement Equipment	Playback level: -7.5 ± 2 dBs

Checking Method:

- 1) Input audio signal of 400 Hz, -7.5 dBs simultaneously to both L and R channels of AUDIO LINE IN.
- 2) Make recording.
- 3) Playback the recorded portion.
- 4) Make sure that playback level is -7.5 ± 2 dBs.

7-7. TUNER SYSTEM ADJUSTMENT

7-7-1. RF AGC Adjustment (TU-132 Board)

Signal	Broad cast TV signal
Adjustment Element	RV002

Adjustment Method:

- 1) Adjust the monitor TV to a maximum contrast.
- 2) Turn the RV002 to make snow noise visible.
- 3) Turn the RV002 in an opposite direction and set it to the point where the snow noise disappears.
- 4) Receive each channel and confirm that there are no beat picture or snow noise due to cross modulation.

7-7-2. Audio Multiple Recorder Adjustment

1. Stereo filter and VCO adjustment (TU-132 board) [Connection]

- 1) Connect the audio generator, frequency counter, $10 \mu\text{F}$ capacitor (1-124-261-00) and 600Ω resistor (1-249-410-11 2pcs) as follows.
- 2) Tuner should be received no signal.

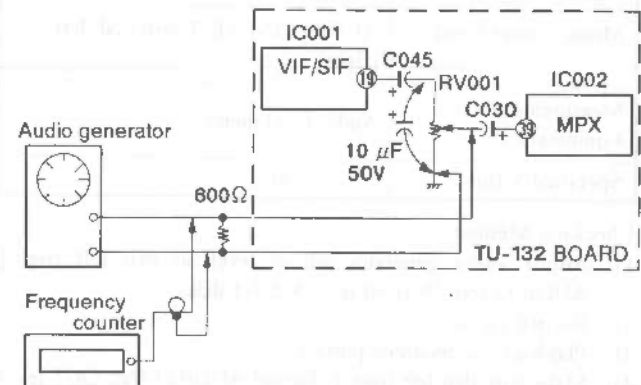


Fig. 7-15.

1-1. Stereo filter adjustment

Signal	22.9 kHz, 700 mVp-p
Measurement Point	Pin ⑤ of IC002
Measurement Equipment	Oscilloscope
Adjustment Element	RV071
Specified Value	4 mVp-p or less

Adjusting Method:

- 1) Connect the oscilloscope to Pin ⑤ of IC002
- 2) Adjust audio generator output level so that signal level of 22.9 kHz becomes 700 mVp-p.
- 3) Connect the oscilloscope to Pin ⑥ of IC002
- 4) Make signal level of 22.9 kHz minimum using RV071.

1-2. VCO adjustment

Signal	15.734 kHz, 140 mVp-p
Measurement Point	Pin ④ of IC002
Measurement Equipment	Oscilloscope (DC range)
Adjustment Element	RV072
Specified Value	The volt difference should be 0 ± 0.1 Vdc against when no signal input.

Adjustment Method:

- 1) Connect the oscilloscope to Pin ④ of IC002.
- 2) Adjust audio generator output level so that signal level of 15.734 kHz becomes 140 mVp-p.
- 3) Connect the oscilloscope to Pin ④ of IC002. (The oscilloscope is DC range.)
- 4) Turn the audio generator OFF and measure DC level. (DC level in no signal is approximately 4.5 Vdc.)
- 5) Turn the audio generator ON.
- 6) Make DC level equal to that in no signal using RV072.
- 7) Make sure that Pin ⑥ of CN001 (STEREO) is "L" level.

2. Separation adjustment (TU-132 board)

Make adjustment by connecting the audio multiple signal generator to VHF/UHF input terminal.

2-1. MPX Input level rough adjustment

Signal	Monaural RF signal (400 Hz, 100% MOD)
Measurement Point	Pin ③ of IC002
Measurement Equipment	Oscilloscope
Adjustment Element	RV001
Specified Value	245 ± 25 mVp-p (-10 ± 1 dBs)

Adjustment Method:

- 1) Set for 245 ± 25 mVp-p using RV001.

2-2. Separation rough adjustment

Signal	Stereo RF signal (L: 400 Hz, R: 2 kHz 30% MOD)
Measurement Point	R: Pin ④ of CN002 L: Pin ⑥ of CN002
Measurement Equipment	Oscilloscope
Adjustment Element	R: RV073 L: RV070
Specified Value	Cross talk component is minimum.

Adjustment Method:

- 1) Connect the oscilloscope to Pin ④ of CN002
- 2) Make cross talk component (400 Hz) mixed to 2 kHz signal minimum using RV073.
- 3) Connect the oscilloscope to Pin ⑥ of CN002
Make cross talk component (2 kHz), mixed to 400 Hz signal, minimum using RV070.
- 4) Repeat steps 1) through 3). (The procedure should be ended at 3).)

2-3. Separation fine adjustment

Signal	Stereo RF signal (L: 400 Hz, R: 2 kHz 30% MOD)
Measurement Point	R: Pin ④ of CN002 L: Pin ⑥ of CN002
Measurement Equipment	Oscilloscope
Adjustment Element	R: RV001 L: RV070
Specified Value	Cross talk component is minimum.


Adjustment Method:

- 1) Connect the oscilloscope to Pin ④ of CN002
- 2) Make cross talk component (400 Hz), mixed to 2 kHz signal, minimum using RV001.
- 3) Connect the oscilloscope to Pin ⑥ of CN002
- 4) Make cross talk component (2 kHz), mixed to 400 Hz signal, minimum using RV070.
- 5) Make sure that the cross talk component of Pin ④ and ⑥.


* If this adjustment can not be succeeded, repeat steps from "Separation rough adjustment". (The procedure should be stopped at "Separation fine adjustment" 5.)

7-8. ARRANGEMENT DIAGRAM FOR ADJUSTMENT PARTS


SR-370 BOARD (CONDUCTOR SIDE)

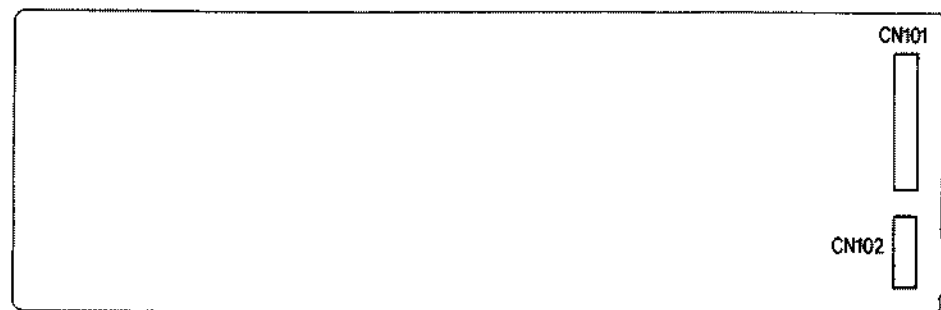


MF-140 BOARD (COMPONENT SIDE)

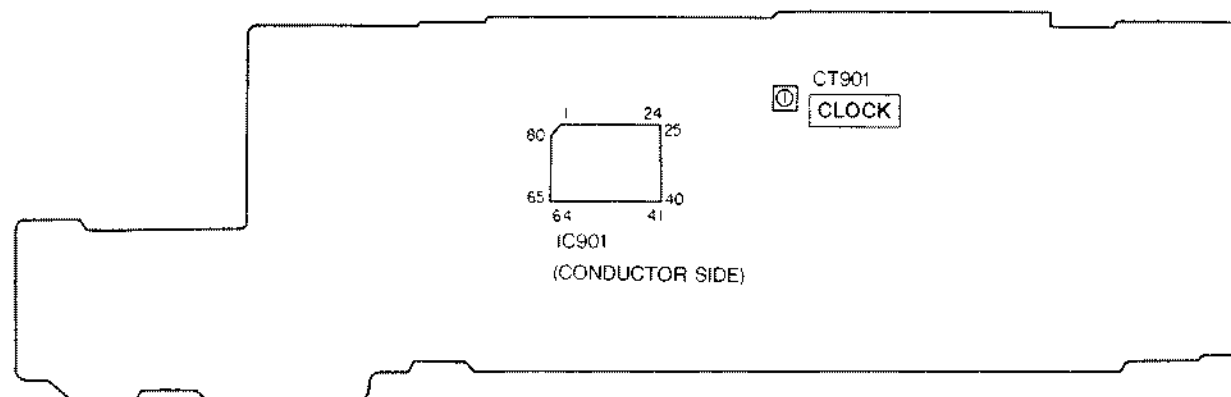


MA-106 BOARD (CONDUCTOR SIDE)

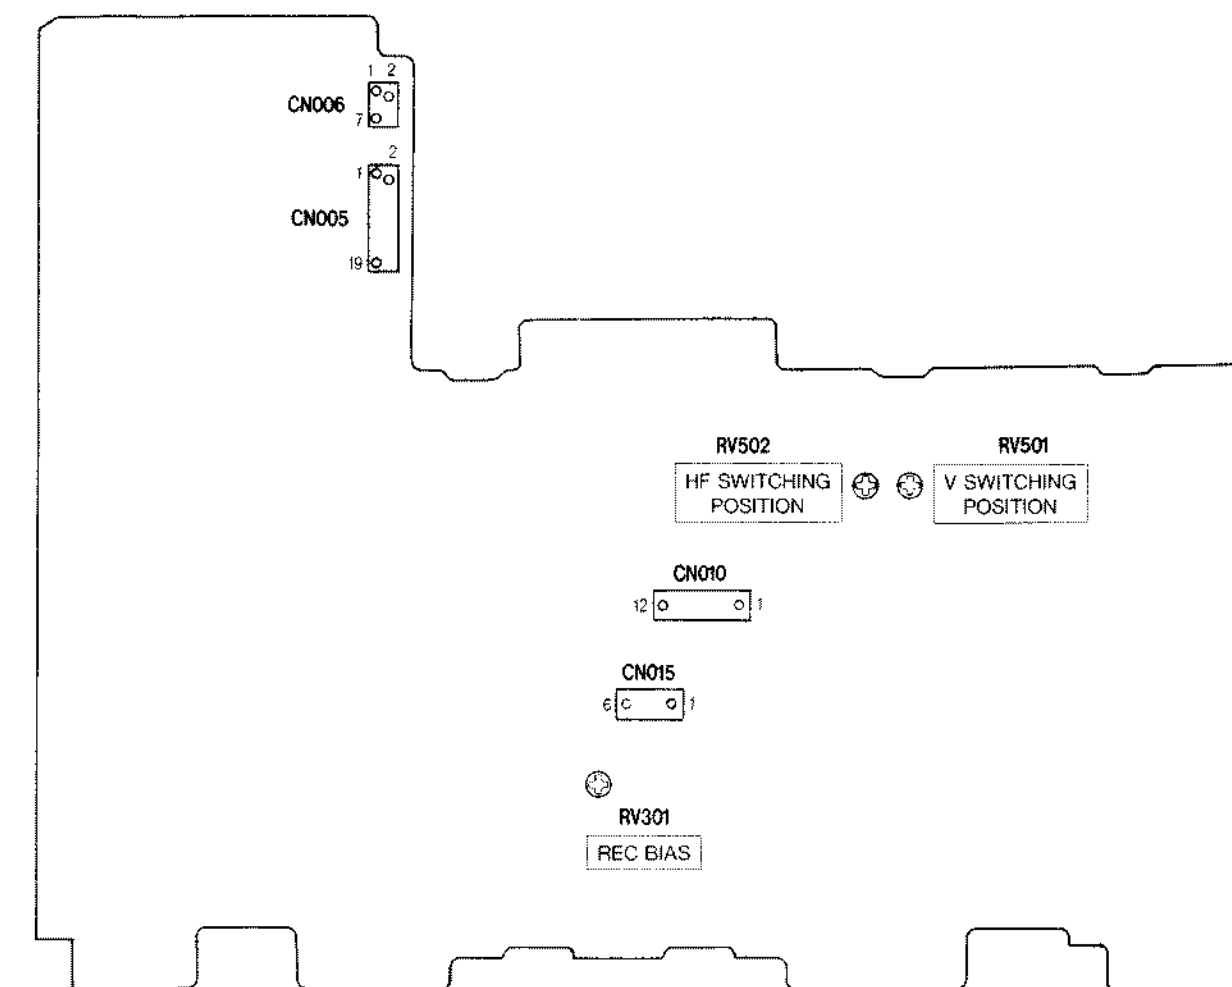


YC-114 BOARD (COMPONENT SIDE)

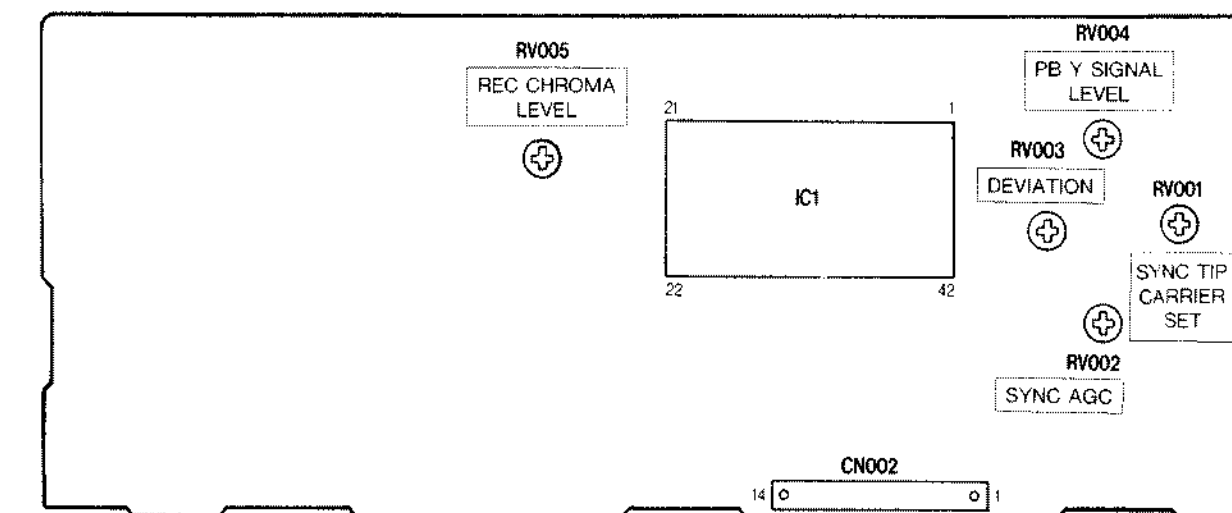


CG-14 BOARD (COMPONENT SIDE)

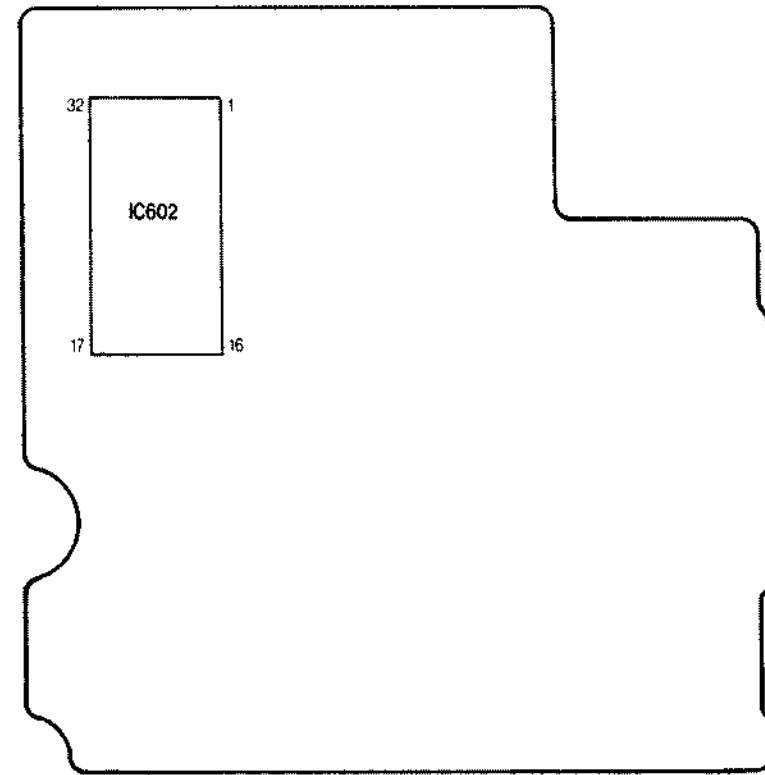

TU-132 BOARD (COMPONENT SIDE)

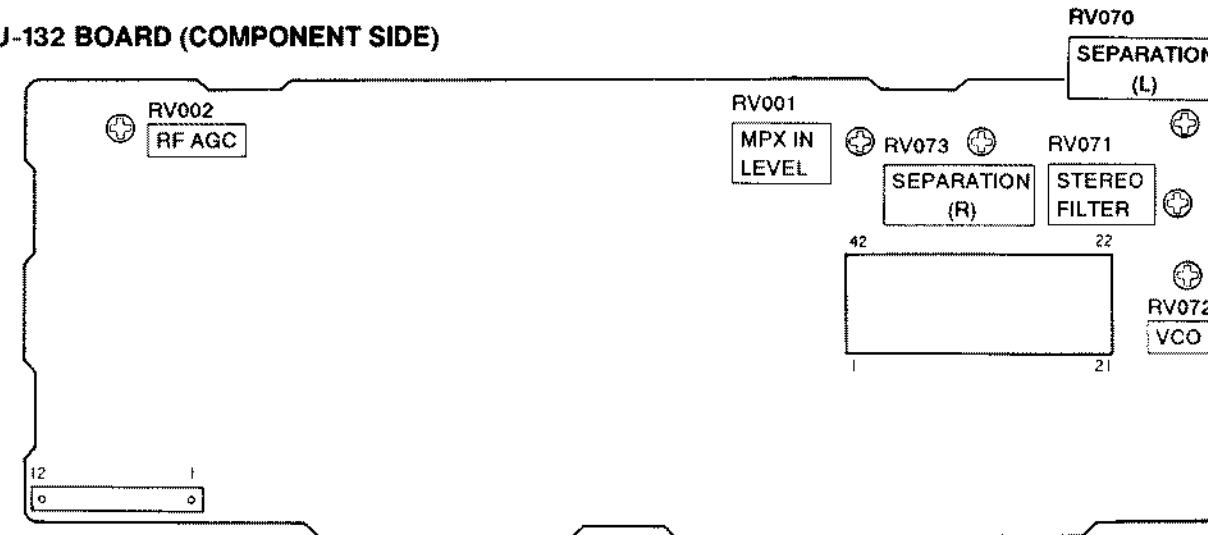

HF-24 BOARD (COMPONENT SIDE)

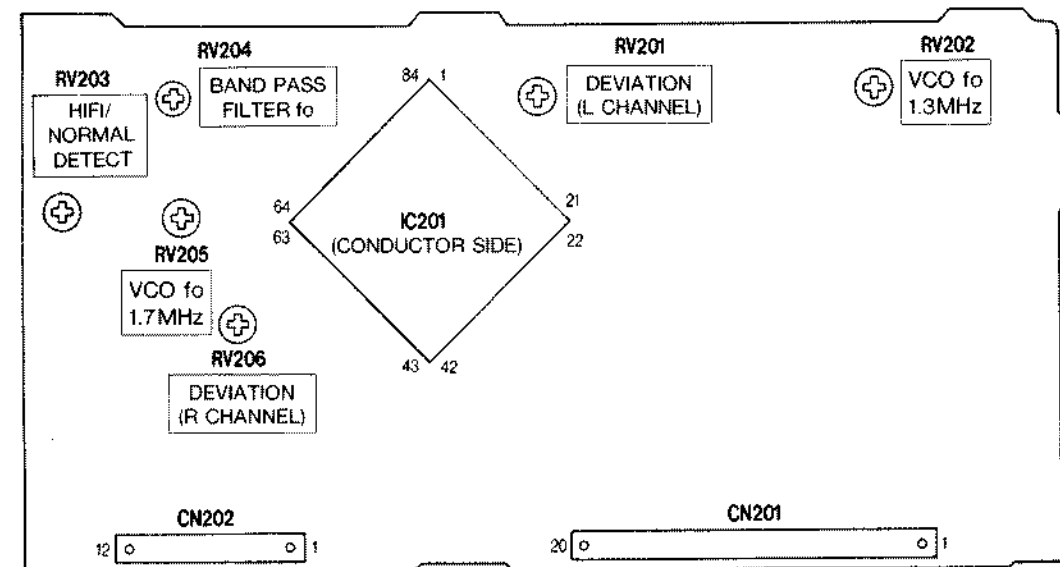

3



m