

SLV-775HF/775HFPX/776HF/795HF/975HF/ 975HFCS/975HFMX/975HFPX RMT-V201/V202/V202A

SERVICE MANUAL

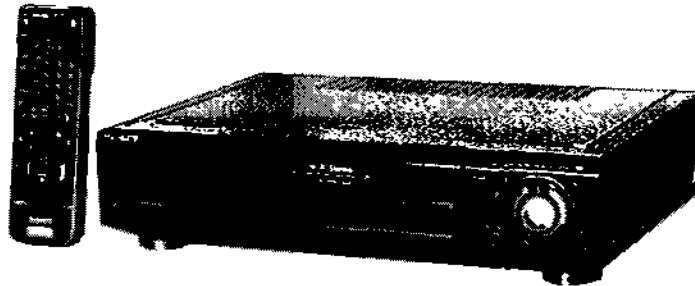


Photo: SLV-975HF

US Model

SLV-775HF/776HF/795HF/975HF

Canadian Model

SLV-775HF/795HF/975HF

Chielean Model

SLV-975HFCS

Mexican Model

SLV-975HFMX

PX Model

SLV-775HFPX/975HFPX

H MECHANISM

Hi-Fi

VCRplus+

- Refer to the **SERVICE MANUAL of VHS MECHANICAL ADJUSTMENTS IV for MECHANICAL ADJUSTMENTS.** (9-973-623-11)

* The abbreviations of 775HF, 776HF, 795HF and 975HF contained in this service manual are indicated when these models are common to all their corresponding models as given below.

Abbreviated model name	775HF	776HF	795HF	975HF
All model names SLV-	775HF (US) 775HF (Canadian) 775HFPX	776HF (US)	795HF (US) 795HF (Canadian)	975HF (US) 975HF (Canadian) 975HFCS 975HFMX 975HFPX

SPECIFICATIONS

System

Format
VHS NTSC standard

Video recording system
Rotary head helical scanning FM system

Video heads
Double azimuth four heads

Video signal
NTSC color, EIA standards

Tape Speed
SP 33.35 mm/s (1 3/8 inches/s)
EP 11.11 mm/s (7/16 inches/s)
LP 16.67 mm/s (11/16 inches/s),
playback only

Maximum recording/playback time
8 hrs. in EP mode (with T-160 tape)

Fast-forward and rewind time
Approx. 3 min (with T-120 tape)

Tuner section

Channel coverage
VHF 2 to 13
UHF 14 to 69
CATV A-8 to A-1, A to W, W+1 to W+84

Antenna
75-ohm antenna terminal for VHF/UHF

Inputs and outputs

LINE-1 IN and -2 IN
VIDEO IN, phono jack (1 each)
Input signal: 1 Vp-p, 75 ohms, unbalanced,
sync negative

AUDIO IN, phono jack (2 each)
Input level: 327 mVrms
Input Impedance: more than 47 kilohms

LINE OUT

VIDEO OUT, phono jack (1)
Output signal: 1 Vp-p, 75 ohms, unbalanced,
sync negative

AUDIO OUT, phonojack (2)
Standard output: 327 mVrms
Load impedance 47 kilohms
Output impedance: less than 10 kilohms

S-LINK (CONTROL S IN)
Mini jack (1)

CABLE BOX CONTROL (CONTROL S OUT)
stereo mini jack (plug in power) (1)

— Continued on next page —

VHS VIDEO CASSETTE RECORDER



992162512

SONY®

Timer section**Clock**

Quartz locked

Timer indication

12-hour cycle

Timer setting

8 programs per month (max.)

Power back-up

Built-in self-charging capacitor

Back-up duration, up to 1 hours at a time

General**Power requirements**

120 V AC, 60 Hz (SLV-775HF/776HF/

795HF/975HF (US)/

975HF (Canadian)/975HFMX)

110 V AC to 240 V AC, 50/60 Hz

(SLV-775HF/975HF/975HF/

975HF/975HF)

Power consumption24 W (max.) (SLV-775HF/776HF/795HF/
975HF (US)/975HF (Canadian))

20 W (max.) (SLV-775HF/975HF/975HF/

Operating temperature

5 °C to 40 °C (41 °F to 104 °F)

Storage temperature

-20 °C to -60 °C (-4 °F to 140 °F)

DimensionsApprox. 430x109x308 mm (w/h/d)
(SLV-775HF/776HF/795HF)Approx. 430x109x321 mm (w/h/d)
(SLV-975HF)Approx. (17x4³/₈x12³/₄ inches) including
projecting parts and controls**Mass**

Approx. 4.5 kg (8 lb 13 oz)

(SLV-775HF/776HF/795HF)

Approx. 4.7 kg (10 lb 6 oz) (SLV-975HF)

Supplied accessories

Remote commander (1)

Size AA (R6) batteries (2)

75-ohm coaxial cable with F-type connectors (1)

Audio/video cable (3 phono, 1 mini to 3 phono, 1
mini) (1)

Cable Mouse (cable box controller) (1)

Plug adaptor (1) (SLV-775HF/975HF/975HF/

Design and specifications are subject to change
without notice**• Feature Difference**

FEATURE	SLV-	775HF, 776HF	795HF	975HF
HEAD/CH		4HD/6CH	4HD/6CH	4HD/7CH
F.E.HEAD		X	X	O
X2		X	O FWD/RVS	O FWD/RVS
PSO (DSF)/APSO		X	DSF	DSF
INDEX SEARCH		X	O	O
SKIP		O (CM skip)	O (skip/scroll)	O (skip/scroll)
DIMMER		X	O (MENU)	O (MENU)
A/V INSERT		X/X	X/X	O/O
AUDIO-DUB		X/X	X	O
EDIT SWITCH		X	X	O
CLICK/JOG SHUTTLE (REMOTE COMMANDER)		X	X	O/O
VTR MODE (REMOTE COMMANDER)		3	3	1/2/3
OSD type		Blue/White	Intelligente	Intelligente
VTR MODE (TERMINALS)		3	3	OFF/1/2/3
FRONT DOOR		X	X	O (with switch)
FUNCTION SWITCH		Direct Function	New DMSw/Jog	New DMSw/Jog
V-Set (Auto Guide Channel Set)		X	O	O

SAFETY-RELATED COMPONENT WARNING!!

COMPONENTS IDENTIFIED BY MARK Δ OR DOTTED LINE WITH MARK Δ ON THE SCHEMATIC DIAGRAMS AND IN THE PARTS LIST ARE CRITICAL TO SAFE OPERATION. REPLACE THESE COMPONENTS WITH SONY PARTS WHOSE PART NUMBERS APPEAR AS SHOWN IN THIS MANUAL OR IN SUPPLEMENTS PUBLISHED BY SONY.

ATTENTION AU COMPOSANT AYANT RAPPORT À LA SÉCURITÉ!

LES COMPOSANTS IDENTIFIÉS PAR UNE MARQUE Δ SUR LES DIAGRAMMES SCHÉMATIQUES ET LA LISTE DES PIÈCES SONT CRITIQUES POUR LA SÉCURITÉ DE FONCTIONNEMENT. NE REMPLACER CES COMPOSANTS QUE PAR DES PIÈCES SONY DONT LES NUMÉROS SONT DONNÉS DANS CE MANUEL OU DANS LES SUPPLÉMENTS PUBLIÉS PAR SONY.

SAFETY CHECK-OUT

After correcting the original service problem, perform the following safety checks before releasing the set to the customer:

1. Check the area of your repair for unsoldered or poorly-soldered connections. Check the entire board surface for solder splashes and bridges.
2. Check the interboard wiring to ensure that no wires are "pinched" or contact high-wattage resistors.
3. Look for unauthorized replacement parts, particularly transistors, that were installed during a previous repair. Point them out to the customer and recommend their replacement.
4. Look for parts which, though functioning, show obvious signs of deterioration. Point them out to the customer and recommend their replacement.
5. Check the line cord for cracks and abrasion. Recommend the replacement of any such line cord to the customer.
6. Check the B+ voltage to see it is at the values specified.
7. Check the antenna terminals, metal trim, "metallized" knobs, screws, and all other exposed metal parts for AC leakage. Check leakage as described below.

LEAKAGE TEST

The AC leakage from any exposed metal part to earth ground and from all exposed metal parts to any exposed metal part having a return to chassis, must not exceed 0.5 mA (500 microamperes). Leakage current can be measured by any one of three methods.

1. A commercial leakage tester, such as the Simpson 229 or RCA WT-540A. Follow the manufacturers' instructions to use these instruments
2. A battery-operated AC milliammeter. The Data Precision 245 digital multimeter is suitable for this job
3. Measuring the voltage drop across a resistor by means of a VOM or battery-operated AC voltmeter. The "limit" indication is 0.75V, so analog meters must have an accurate low-voltage scale. The Simpson 250 and Sanwa SH-63Trd are examples of a passive VOM that is suitable. Nearly all battery operated digital multimeters that have a 2V AC range are suitable. (See Fig. A)

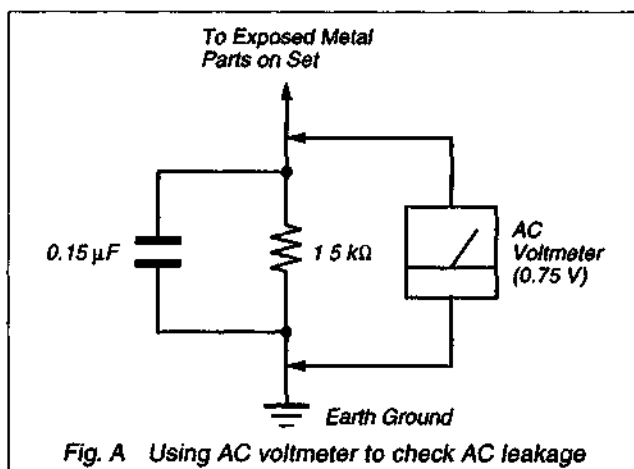


TABLE OF CONTENTS

<u>Section</u>	<u>Title</u>	<u>Page</u>	<u>Section</u>	<u>Title</u>	<u>Page</u>
Feature Difference		2	SR-800 Schematic Diagram		
Service Note		6	(EXCEPT SLV-775HF PX/975HF CS, PX)		4-53
			SR-800, SR-802 Printed Wiring Boards		4-55
			SR-802 Schematic Diagram		
			(SLV-775HF PX/975HF CS, PX)		4-57
1. GENERAL			5. INTERFACE, IC PIN FUNCTION DESCRIPTION		
Getting Started		1-1	5-1. System Control-Video Block Interface		
Basic Operations		1-13	(MA-290 Board)		5-1
Additional Operations		1-15	5-2. System Control-Servo Peripheral Circuit Interface		
Editing		1-18	(MA-290 board)		5-2
Additional Information		1-19	5-3. System Control-Mechanism Interface (MA-290 board)		5-3
			5-4. System Control-System control Peripheral circuit		
			Interface (MA-290 board)		5-4
			5-5. System Control-Audio Block Interface (MA-290 board)		5-4
			5-6. Servo System Control Microprocessor Pin Function		
			(MA-290 board)		5-5
			5-7. Tuner/Timer Mode Control Pin Function		
			(MA-290 board)		5-6
			5-8. System Control-Video Block Interface		
			(MA-292 board)		5-7
			5-9. System Control-Servo Peripheral Circuit Interface		
			(MA-292 Board)		5-7
			5-10. System Control-Mechanism Interface (MA-292 board)		5-8
			5-11. System Control-System Control Peripheral Circuit		
			Interface (MA-292 Board)		5-9
			5-12. System Control-Audio Block Interface		
			(MA-292 Board)		5-9
			5-13. Servo/System/Timer/Tuner Control Microprocessor		
			Pin Function (MA-292 Board)		5-10
2. DISASSEMBLY			6. ADJUSTMENTS		
2-1. Front Panel Assembly and Case Removal			6-1. Mechanical Adjustments		6-1
(775HF/776HF/795HF)		2-1	6-2. Electrical Adjustments		6-1
2-2. Front Panel Assembly and Case Removal (975HF)		2-1	2-1. Pre-Adjustment Preparations		6-1
2-3. Control switch Block Removal (975HF)		2-1	2-1-1. Instruments to be Used		6-1
2-4. SR-800/DM-63/DM-65 Board Removal		2-1	2-1-2. Connection		6-1
2-5. Cassette Compartment Assembly and			2-1-3. Set-up of Adjustment		6-1
HI-48/HI-50/MF-303 Board		2-2	2-1-4. Alignment Tape		6-1
2-6. RP-218/220 Board		2-2	2-1-5. Specified I/O Level and Impedance		6-2
2-7. Mechanism Chassis Assembly Removal		2-2	2-1-6. Adjusting Sequence		6-2
2-8. MA-290/292 Board Removal		2-2	2-2. Power Supply Adjustment		6-2
2-9. Internal Views		2-3	2-2-1. Power Supply Check		6-2
2-10. Circuit Boards Location		2-4	2-2-2. D6V Adjustment		6-2
			2-3. Servo System Adjustment		6-3
			2-3-1. Switching Position Adjustment		6-3
			2-4. Video System Adjustment		6-3
			2-4-1. Recording Y Signal Level Check		6-3
			2-4-2. White Clip, Dark Clip Check		6-4
			2-4-3. Playback Y signal Level Check		6-4
			2-4-4. Recording Chroma Level Check		6-4
			2-4-5. Sync AGC Check		6-4
			2-4-6. X'tal Oscillation Frequency Check		6-5
			2-5. Audio System Adjustment		6-5
			2-5-1. Hi-Fi Audio System Adjustment		6-5
			1. AF Switching Position Adjustment		6-5
			2-5-2. Normal Audio System Adjustment		6-6
			1. ACE Head Adjustment		6-6
			2. E-E Output Level Check		6-6
			3. Recording Bias Adjustment		6-6
			4. Overall Level Characteristic and Distortion		6-6
			Factor Check		6-6
			5. Overall S/N Check		6-6
			2-6. Tuner System Adjustment		6-7
			2-6-1. Separation Adjustment		6-7
			2-7. Parts Arrangement Diagram for Adjustments		6-8
3. BLOCK DIAGRAMS					
3-1. Overall Block Diagram		3-1			
3-2. Video Block Diagram		3-4			
3-3. Servo/System Control Block Diagram (795HF/975HF)		3-9			
3-4. Servo/System Control Block Diagram (775HF/776HF)		3-11			
3-5. Audio Block Diagram		3-13			
3-6. Tuner Block Diagram		3-15			
3-7. Mode Control Block Diagram (795HF/975HF)		3-19			
3-8. Mode Control Block Diagram (775HF/776HF)		3-21			
3-9. Power Block Diagram		3-24			
4. PRINTED WIRING BOARDS AND SCHEMATIC DIAGRAMS					
4-1. Frame Schematic Diagram		4-1			
4-2. Printed Wiring Boards and Schematic Diagrams		4-4			
RP-220 Schematic Diagram (775HF/776HF)		4-4			
RP-220 Printed Wiring Board (775HF/776HF)		4-7			
RP-218 Printed Wiring Board (795HF/975HF)		4-9			
RP-218 Schematic Diagram (795HF/975HF)		4-11			
MA-290 Printed Wiring Board (795HF/975HF)		4-14			
MA-290 (Video, Audio, IO) Schematic Diagram					
(795HF/975HF)		4-17			
MA-290 (Servo/System Control) Schematic Diagram					
(795HF/975HF)		4-22			
MA-290 (Tuner) Schematic Diagram (795HF/975HF)		4-27			
MA-292 (Tuner) Schematic Diagram (775HF/776HF)		4-29			
MA-292 (Video, Audio, IO) Schematic Diagram					
(775HF/776HF)		4-31			
MA-292 (Servo/System Control) Schematic Diagram					
(775HF/776HF)		4-35			
MA-292 Printed Wiring Board (775HF/776HF)		4-39			
DM-63, HI-48, MF-302 Printed Wiring Board					
(795HF/975HF)		4-43			
DM-63, HI-48, MF-302 Schematic Diagram					
(795HF/975HF)		4-45			
DM-65, HI-50, MF-303 Schematic Diagram					
(775HF/776HF)		4-48			
DM-65, HI-50, MF-303 Printed Wiring Boards					
(775HF/776HF)		4-51			

<u>Section</u>	<u>Title</u>	<u>Page</u>
7.	REPAIR PARTS LIST	
7-1.	Exploded Views	7-1
7-1-1.	Front Panel and Cabinet Assemblies (775HF/776HF/795HF)	7-1
7-1-2.	Front Panel and Cabinet Assemblies (975HF)	7-2
7-1-3.	Chassis Assembly	7-3
7-1-4.	Mechanism Chassis Assembly (1)	7-4
7-1-5.	Mechanism Chassis Assembly (2)	7-5
7-1-6.	Mechanism Chassis Assembly (3)	7-6
7-1-7.	Mechanism Chassis Assembly (4)	7-7
7-2.	Electrical Parts List	7-8

SERVICE NOTE

1. UPPER DRUM REPLACEMENT

1-1. Removal of Upper Drum

- 1) Remove the screw ① (BV3 × 8) and take out the ground shaft assembly ②. (See Fig. 1.)
- 2) Completely remove the rotary upper drum board and desolder the soldering indicated by the arrows.
- 3) Remove two screw ③ (PSW3 × 8) and take out the rotary upper drum in the arrow direction ④. (See Fig. 2.)
If it difficult, remove by shaking the rotary upper drum gradually.

Note: If the drum can not be removed, check whether the solders have been removed or not again.

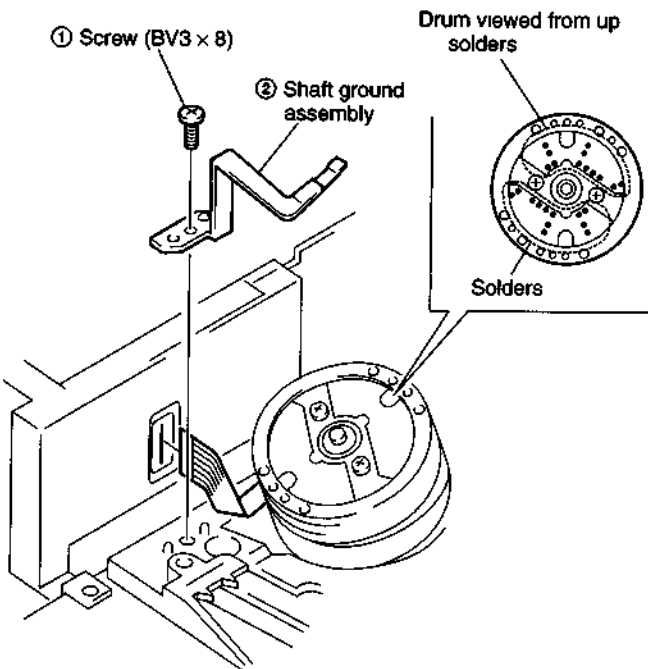


Fig. 1

1-2. Mounting Upper Drum

- 1) When inserting the rotary drum into the lower drum, be careful not to blur the contacting surface with fingerprint or the like.
- 2) Mount the rotary upper drum board so that the screw holes of both upper and lower drums match. (See Fig. 2.)
- 3) If it is difficult, mount the upper drum by shaking it gradually.
Note: Be careful not to damage the head. Make sure that the upper drum is tightly inserted.
- 4) Tighten two screws ③ (PSW3 × 8). (See Fig. 2.)
Note: Temporary tighten two screws. After making sure that upper drum is tightly inserted, tighten the screws.
- 5) Solder points on the board of the rotary upper drum.
- 6) Fix the ground shaft assembly ② using the screw ① (BV3 × 8) so that the protrusion of ground shaft assembly end contacts the center of the drum shaft.

Note: When attaching the ground shaft assembly 2, be careful not to apply force to the spring section of it.

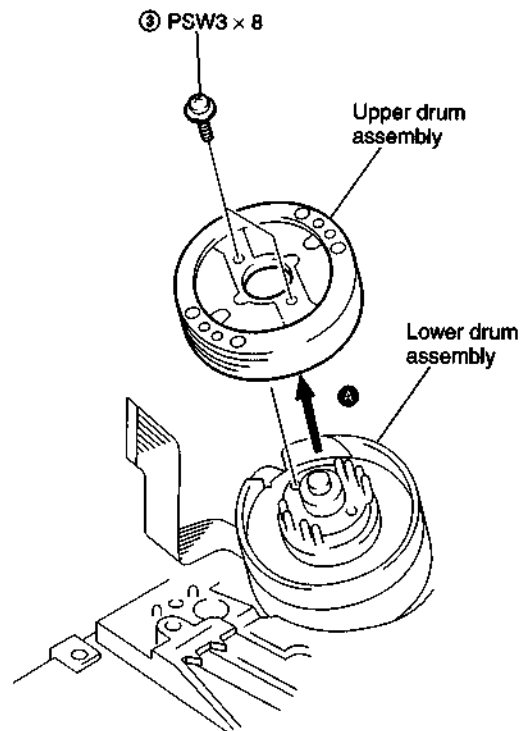


Fig. 2


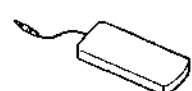

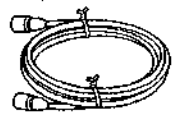


SECTION 1
GENERAL

This section is extracted from
SLV-975HF/975HFC/975HFMX
instruction manual.

Getting Started

Step 1
Unpacking


Check that you have received the following items with the VCR

- Remote commander 
- Cable Mouse (cable box controller) 
- Size AA (R6) batteries 
- 75-ohm coaxial cable with F-type connectors 
- Audio/video cable (3-phono, 1 mini to 3-phono, 1-mini) 
- Plug adaptor (SLV-775HF PX/975HF PX/975HF CS only) 

Step 2
Setting up the remote commander

Inserting the batteries


Insert two size AA (R6) batteries by matching the + and - on the batteries to the diagram inside the battery compartment

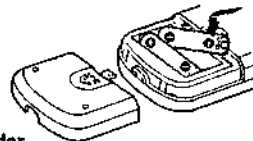

Using the remote commander

You can use this remote commander to operate this VCR and a Sony TV. The buttons on the remote commander marked with a dot (•) can be used to operate your Sony TV.

To operate the VCR: Set [TV/VTR] to [VTR] and point at the remote sensor on the VCR.
a Sony TV: [TV] and point at the remote sensor on the TV.

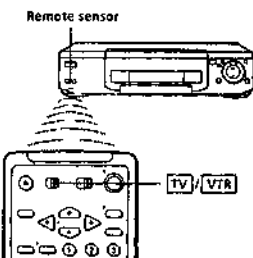


Notes

- With normal use, the batteries should last for approximately three to six months.
- If you do not use the remote commander for an extended period of time, remove the batteries to avoid possible damage from battery leakage.
- Do not use a new battery with an old one.
- Do not use different types of batteries.

Setting the COMMAND MODE switch

To remotely control the VCR with the commands, set COMMAND MODE on the remote commander to the same position as that on the VCR. Usually set to VTR 3. Change the position as shown below to control other Sony VCRs.
VTR 1: For Sony Betamax format VCRs
VTR 2: For Sony 8mm format VCRs
VTR 3: For Sony VHS format VCRs

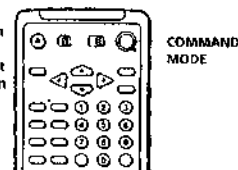

continued

4 Getting Started

Getting Started 5

Step 2: Setting up the remote commander (continued)

Controlling other TVs with the remote commander

The remote commander is preprogrammed to control non-Sony TVs. If your TV is listed in the table below, set the appropriate manufacturer's code number.

- 1 Set [TV/VTR] at the top of the remote commander to [TV].
- 2 Hold down POWER, and enter your TV's code number(s) using the number buttons. Then release POWER.

Now you can use the POWER, VOL +/-, CH +/-, and TV/VTR buttons to control your TV. You can also use the buttons marked with a dot (•) to control a Sony TV. To control the VCR, reset [TV/VTR] to [VTR].

Tip

- If you set your TV's code number correctly while the TV is turned on, the TV turns off automatically.

Code numbers of controllable TVs

If more than one code number is listed, try entering them one at a time until you find the one that works with your TV.

Manufacturer	Code number	Manufacturer	Code number	Manufacturer	Code number
Sony	01	JVC	09	RCA	04,10
Akai	04	KMC	03	Sampo	12
AOC	04	Magnavox	03,08,12	Sanyo	11
Centurion	12	Marantz	04,13	Scit	12
Coronado	03	MCA/Mitsubishi	04,12,13,17	Sears	07,10,11
Curis Maltes	12	NEC	06,12	Sharp	03,05,10
Daytron	12	Panasonic	06,19	Sylvania	08,12
Emerson	03, 04, 14	Philco	03,04	Teknika	03,06,14
Fisher	11	Philips	08	Toshiba	07
General Electric	06,10	Pioneer	16	Wards	03,04,12
Gold Star	03, 04, 17	Portland	03	Yox	12
Hitachi	02,03	Quasar	06,18	Zenith	15
J.C. Penney	04,12	Radio Shack	05,14		

Notes

- If the TV uses a different remote control system from the one programmed to work with the VCR, you cannot control your TV with the remote commander.
- If you enter a new code number, the code number previously entered will be erased.
- When you replace the batteries of the remote commander, the code number automatically resets to 01 (Sony). Reset the appropriate code number.

Step 3
Hookups

Selecting the best hookup option

There are many ways in which your VCR can be hooked up. To hook up your VCR so that it works best for you, first scan through the table below. Then use the accompanying diagrams and procedures on the following pages to set up your VCR.

If you have	Use	Refer to
TV that has audio/video inputs	Audio/video (A/V) hookup, then follow one of the hookups below	Pages 8 to 9
Cable box that is compatible with the VCR's cable box control feature	Hookup 1	Pages 10 to 12
No cable box or incompatible cable box with only a few scrambled channels	Hookup 2	Pages 13 to 15
Antenna only, no cable TV	Hookup 3	Pages 16 to 18
Incompatible cable box with many scrambled channels	Hookup 4	Pages 19 to 22
DSS* receiver	Hookup 5	Pages 23 to 25
Incompatible cable box with only a few scrambled channels, using an A/B switch	Hookup 6	Pages 26 to 30

After you've completed the connections, follow the instructions for setup. During setup, if you need more details on the procedure described, page numbers are provided where you can find complete, step-by-step instructions.

After you've completed the setup, you're ready to use your VCR. Procedures differ depending on the hookup you used. For an overview, refer to "Quick reference to using the VCR" on the back cover.

Before you get started

- Turn off the power to all equipment.
- Do not connect the AC power cords until all of the connections are completed.
- Be sure you make connections firmly. Loose connections may cause picture distortion.
- If your TV doesn't match any of the examples provided, see your nearest Sony dealer or qualified technician.

* DSS* is a registered trademark of DIRECTV, Inc., a unit of Hughes Electronics Corporation.

continued

6 Getting Started

Getting Started 7

Step 3: Hookups (continued)

Audio/video (A/V) hookup Pages 8 to 9


If your TV has audio/video (A/V) input jacks, you will get a better picture and sound if you hook up your VCR using these connections. In addition, for a true "home theater" experience, you should connect the audio outputs of your VCR or TV to your stereo system. If your TV doesn't have A/V inputs, see the following pages for antenna or cable hookups.

If your TV has the S-Link™ (A/V bus control) function, hook up your VCR using the connection shown on page 9. Your TV will automatically switch to the A/V inputs for your VCR when you play back or operate menu on the VCR.

If you're not planning to use your VCR to record programs, you're finished setting up the VCR after you've made the connections shown on pages 8 and 9. If you want to record off-air or off your cable TV system, complete these connections first, and then go to the following pages for antenna or cable hookups.

* S-Link™ is a trademark of Sony Corporation.


A Use this hookup if your TV has stereo jacks

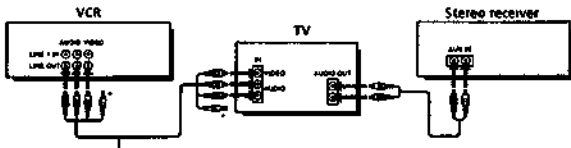

Audio/video cable (supplied)

* Do not connect the miniplugs for this hookup.


B Use this hookup if your TV doesn't have stereo jacks

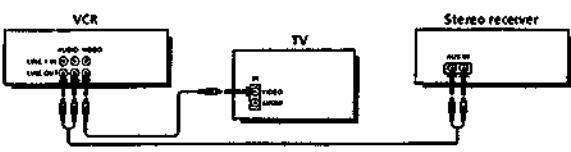

Note

* To play a tape in stereo, you must use the A/V connection.

C Use this hookup if your TV has the S-Link™ function

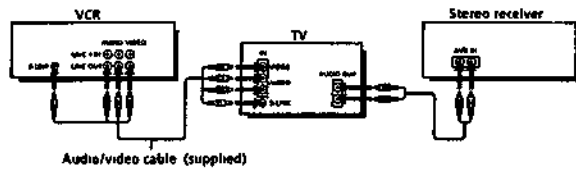

Audio/video cable (supplied)

A/V hookup: VCR setup

After you've connected your TV and completed antenna or cable hookup, use the following procedure to set up the VCR.

Press MENU and select ADVANCED OPTIONS



Set AUTO ANT SEL to OFF and press EXECUTE



For details, see page 72.

Caution

Connections between the VCR's VHF/UHF connector and the antenna terminals of the TV receiver should be made only as shown in the following instructions. Failure to do so may result in operation that violates the regulations of the Federal Communications Commission regarding the use and operation of RF devices. Never connect the output of the VCR to an antenna or make simultaneous (parallel) antenna and VCR connections at the antenna terminals of your receiver.

Note to CATV system installer (in USA)

This reminder is provided to call the CATV system installer's attention to Article 820-40 of the NEC that provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building, as close to the point of cable entry as practical.

continued

Step 3: Hookups (continued)

Hookup 1 Pages 10 to 12

Using cable box control

Recommended use


You should use this hookup if you have a cable box, especially if your cable system scrambles all or most channels. This hookup allows the VCR's cable box control feature to control the channel on the cable box, simplifying the recording process. A list of compatible cable boxes is on page 39.

What you can do with this hookup

- Record any channel using the VCR's cable box control feature to select channels on the cable box.


What you can't do

- Record with the cable box turned off.
- Record one channel while watching another channel.

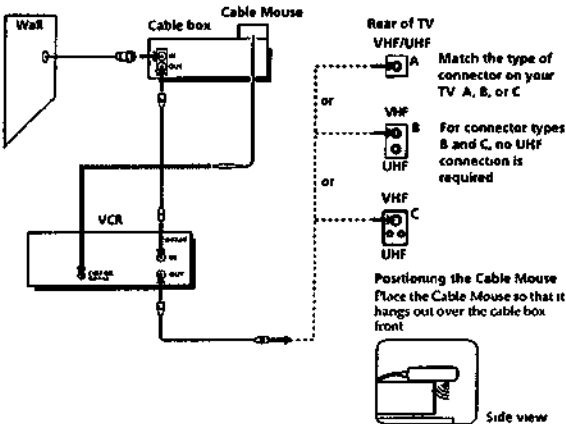

Hookup 1: VCR setup

- Set the RF UNIT switch to CH 3 or CH 4, whichever channel is not used in your area. If both are used, set the switch to either channel. For details, see page 78. If you made A/V connections (from page 8), you can skip this step.
- Turn on your cable box.
- Press EASY SET UP on the VCR.

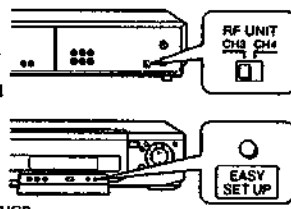

- The LANGUAGE menu appears. Change the on-screen display language to Spanish (ESPAÑOL) or French (FRANÇAIS) if desired, and press EXECUTE. For details, see page 31.



- The CLOCK SLT menu appears. Select AUTO and press EXECUTE. For details, see page 32.




- The SMART CH MAPPING menu appears. Press CURSOR \uparrow / \downarrow / \leftarrow / \rightarrow to enter the ZIP CODE in your area and press EXECUTE. (You can also use the number buttons to enter the ZIP CODE.)



- The CABLE BOX menu appears. Select ON. For details, see page 35.




- Enter your cable box code number and press CURSOR \downarrow .



continued

Step 3: Hookups (continued)

- Select your cable box output channel and press EXECUTE

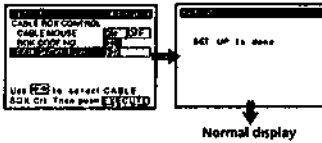

Hookup 1: VCR Plus+ channel setup

- Press MENU and select SET VCR Plus+ CHANNELS
- Press CURSOR ←/→ to select AUTO and press EXECUTE
- Press POWER to turn off the VCR.



The VCR receives the program information signal from 0:00 am to 5:00 am while the VCR is turned off, and set up the channel for VCR Plus+ recording. After channel setup is finished, you can record TV programs using VCR Plus+. For details, see page 48.

Notes

- To use auto VCR Plus+ channel setup feature, leave the cable box on.
- It takes about 1 hour to complete channel setup.
- The VCR can receive the program information signal only while the VCR is turned off and no timer recordings are set.
- If the channels in your area don't carry the program information signals, set the program guide channels manually. For details, see page 50.
- If the Choose your Cable CH MAP menu appears the first time you turn on the VCR after finishing channel setup, select the MAP number. For details, see page 49.

Automatic clock setting

Once you've set up the VCR, it automatically sets the clock the first time you turn off the VCR. After that, whenever you turn off the VCR, it checks the time and adjusts the clock, even for Daylight Saving Time. The VCR sets the clock by picking up a time signal provided by some TV channels.

If you want to use the timer to record right away, or if the channels in your area do not carry time signals, set the clock manually. For details, see pages 36 to 37.

Note

- To use the automatic clock setting feature, leave the cable box on.

Hookup 2

No cable box, or incompatible cable box with only a few scrambled channels

Recommended use


Use this hookup if you do not have a cable box. Also use this hookup if your cable company cannot supply a cable box that is compatible with the VCR's cable box control feature, and your cable system scrambles only a few channels.

What you can do with this hookup

- Record any unscrambled channel by selecting the channel on the VCR.

What you can't do

- Record scrambled channels that require a cable box.

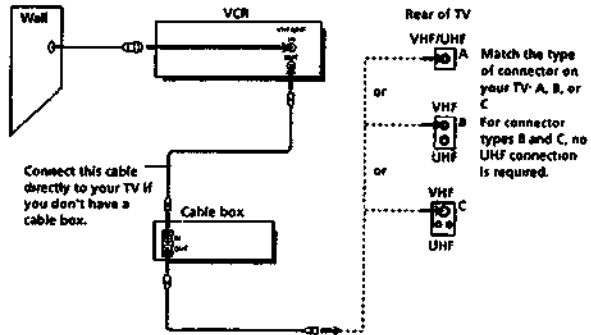


continued

Step 3: Hookups (continued)

Hookup 2: VCR setup

- Set the RF UNIT switch to CH 3 or CH 4, whichever channel is not used in your area. If both are used, set the switch to either channel. For details, see page 78. If you made A/V connections (from page 8), you can skip this step.
- Press EASY SET UP on the VCR.

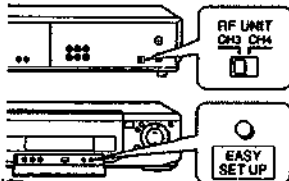

- The LANGUAGE menu appears. Change the on-screen display language to Spanish (ESPAÑOL) or French (FRANÇ, AIS) if desired, and press EXECUTE. For details, see page 31.



- The CLOCK SET menu appears. Select AUTO and press EXECUTE. For details, see page 32.



- The SMART CH MAPPING menu appears. Press CURSOR ←/→ to enter the ZIP CODE in your area and press EXECUTE. (You can also use the number buttons to enter the ZIP CODE.)




- The CABLE BOX menu appears. Select OFF and press EXECUTE. For details, see page 38.



- The TUNER PRESET menu appears. Set ANTENNA/CABLE to CABLE and press EXECUTE. For details, see page 43.




- The AUTO PRESET starts.

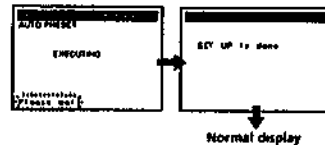

Hookup 2: VCR Plus+ channel setup

- Press MENU and select SET VCR Plus+ CHANNELS
- Press CURSOR ←/→ to select AUTO and press EXECUTE
- Press POWER to turn off the VCR

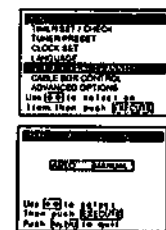

The VCR receives the program information signal from 0:00 am to 5:00 am while the VCR is turned off, and set up the channel for VCR Plus+ recording. After channel setup is finished, you can record TV programs using VCR Plus+. For details, see page 48.

Notes

- It takes about 1 hour to complete channel setup.
- The VCR can receive the program information signal only while the VCR is turned off and no timer recordings are set.
- If the channels in your area don't carry the program information signals, set the program guide channels manually. For details, see page 50.
- If the Choose your Cable CH MAP menu appears the first time you turn on the VCR after finishing channel setup, select the MAP number. For details, see page 49.

Automatic clock setting

Once you've set up the VCR, it automatically sets the clock the first time you turn off the VCR. After that, whenever you turn off the VCR, it checks the time and adjusts the clock, even for Daylight Saving Time. The VCR sets the clock by picking up a time signal provided by some TV channels.

If you want to use the timer to record right away, or if the channels in your area do not carry time signals, set the clock manually. For details, see pages 36 to 37.

continued

Hookup 3


Pages 16 to 18

Antenna hookup


Make the following connections if you're using an antenna (if you don't have cable TV)

Use this hookup if you're using:

- VHF/UHF antenna (you get channels 2-13 and channels 14 and higher)
- UHF-only antenna (you get channels 14 and higher)
- Separate VHF and UHF antennas

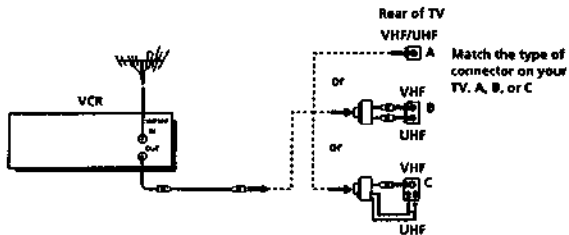


Use this hookup if you're using a VHF-only antenna (you get channels 2-13 only)

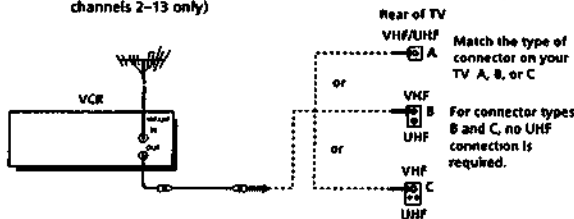


If you cannot connect your antenna cable to the VCR directly
If your antenna cable is a flat cable (300-ohm twin lead cable), attach an external antenna connector (not supplied) so you can connect the cable to the VHF/UHF IN connector. If you have separate cables for VHF and UHF antennas, you should use a U/V band mixer (not supplied). For details, see page 79

Hookup 3: VCR setup

- Set the RF UNIT switch to CH 3 or CH 4, whichever channel is not used in your area. If both are used, set the switch to either channel. For details, see page 78. If you made A/V connections (from page 8), you can skip this step.
- Press EASY SET UP on the VCR.

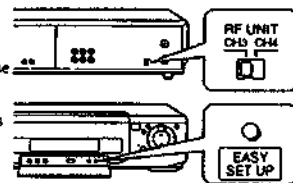

- The LANGUAGE menu appears. Change the on-screen display language to Spanish (ESPAÑOL) or French (FRANÇAIS) if desired, and press EXECUTE. For details, see page 31.
- The CLOCK SET menu appears. Select AUTO and press EXECUTE. For details, see page 32.
- The SMART CH MAPPING menu appears. Press CURSOR (left/right) to enter the ZIP CODE in your area and press EXECUTE. (You can also use the number buttons to enter the ZIP CODE.)
- The CABLE BOX menu appears. Select OFF and press EXECUTE. For details, see page 38.
- The TUNER PRESET menu appears. Set ANTENNA/CABLE to ANT and press EXECUTE. For details, see page 43.

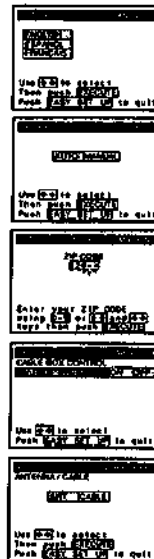


Getting Started

continued


Step 3: Hookups (continued)

- The AUTO PRESET starts.

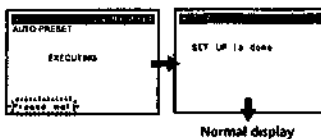

Hookup 3: VCR Plus+ channel setup

- Press MENU and select SET VCR Plus+ CHANNELS.
- Press CURSOR (left/right) to select AUTO and press EXECUTE.
- Press POWER to turn off the VCR.

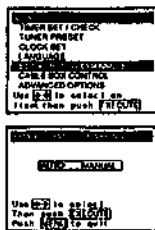

The VCR receives the program information signal from 0:00 am to 5:00 am while the VCR is turned off, and set up the channel for VCR Plus+ recording. After channel setup is finished, you can record TV programs using VCR Plus+ For details, see page 48.

Notes

- It takes about 1 hour to complete channel setup.
- The VCR can receive the program information signal only while the VCR is turned off and no timer recordings are set.
- If the channels in your area don't carry the program information signals, set the program guide channels manually. For details, see page 50.
- If the Choose your Cable CH MAP menu appears the first time you turn on the VCR after finishing channel setup, select the MAP number. For details, see page 49.

Automatic clock setting

Once you've set up the VCR, it automatically sets the clock the first time you turn off the VCR. After that, whenever you turn off the VCR, it checks the time and adjusts the clock, even for Daylight Saving Time. The VCR sets the clock by picking up a time signal provided by some TV channels.

If you want to use the timer to record right away, or if the channels in your area do not carry time signals, set the clock manually. For details, see pages 36 to 37.

Hookup 4

Pages 19 to 22

Incompatible cable box with many scrambled channels

Recommended use


Use this hookup if your cable company cannot supply a cable box that is compatible with the VCR's cable box control feature, and your cable system scrambles all or most channels.

What you can do with this hookup

- Record any channel by selecting the channel on the cable box.

What you can't do

- Record with the cable box turned off.
- Record one channel while watching another channel.
- Select channels directly on the VCR.

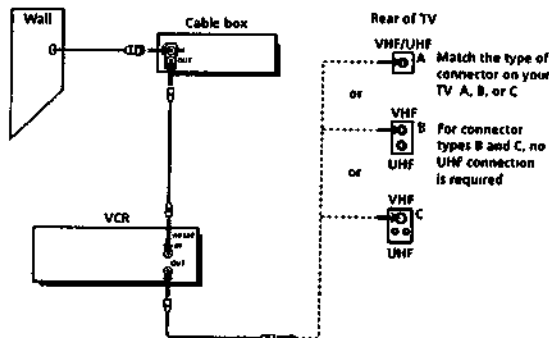


continued

Getting Started

Step 3: Hookups (continued)


Hookup 4: VCR setup

- Set the RF UNIT switch to CH3 or CH4, whichever channel is not used in your area. If both are used, set the switch to either channel. For details, see page 78. If you made A/V connections (from page 8), you can skip this step.
- Turn on your cable box.
- Press EASY SET UP on the VCR.
 - The LANGUAGE menu appears. Change the on-screen display language to Spanish (ESPAÑOL) or French (FRANÇAIS) if desired, and press EXECUTE. For details, see page 31.
 - The CLOCK SET menu appears. Select MANUAL and press EXECUTE. For details, see page 32.
 - The SMART CH MAPPING menu appears. Press CURSOR \leftarrow/\rightarrow to enter the ZIP CODE in your area and press EXECUTE. (You can also use the number buttons to enter the ZIP CODE.)
 - The CABLE BOX menu appears. Select OFF and press EXECUTE. For details, see page 38.
 - The TUNER PRESET menu appears. Set ANTENNA/CABLE to ANT and press EXECUTE. For details, see page 43.

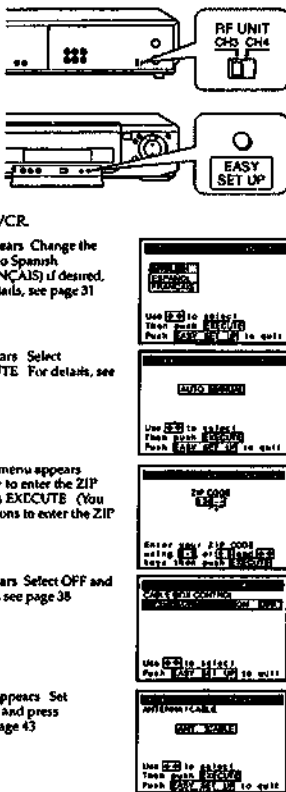

Hookup 4: VCR Plus+ channel setup

- Find the VCR Plus+ Channel Listing in your program guide. For details, see page 47.
- Enter all the channels you want to record and the cable box output channel (usually 2, 3, or 4). For details, see page 50.
 - Press MENU and select SET VCR Plus+ CHANNELS.
 - Press CURSOR \leftarrow/\rightarrow to select MANUAL.
 - Enter the program guide channel, then the cable box output channel.
 - Press EXECUTE.
 - Press MENU.

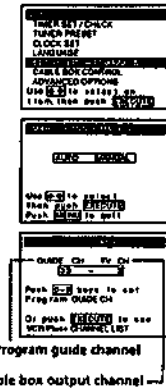

Getting Started

continued

Step 3: Hookups (continued)

Automatic clock setting

To use the Auto Clock Set feature with this hookup, you need to manually select a channel that carries a time signal.

- Tune the cable box to a channel that carries a time signal.
- Select AUTO in the CLOCK SET menu to turn on the Auto Clock Set feature.
- Turn off the VCR. It automatically sets the clock and adjusts for Daylight Saving Time by picking up the time signal.

If you want to use the tuner to record right away, or if the channels in your area do not carry time signals, set the clock manually. For details, see pages 36 to 37.

Note

- To use the automatic clock setting feature, leave the cable box on.

Hookup 5

Pages 23 to 25

DSS (Digital Satellite System) receiver

Recommended use

Use this hookup if you have a DSS receiver. It allows the VCR's cable box control feature to control the channel on the DSS receiver, simplifying the recording process. A list of compatible DSS receivers is on page 40.


DSS (Digital Satellite System) is a satellite broadcast that provides superior digital-quality video and crisp digital-quality audio. A variety of program packages are available through your program providers. It also has program guides that are sorted by program categories.

What you can do with this hookup

- Record any channels using the VCR's cable box control feature to select channels on the DSS receiver.

What you can't do

- Record with the DSS receiver turned off.
- Record any channels from cable or an antenna. (To record channels from cable or an antenna, turn off the cable box control feature.)
- Use a cable box.
- Record programs with VCR Plus+.

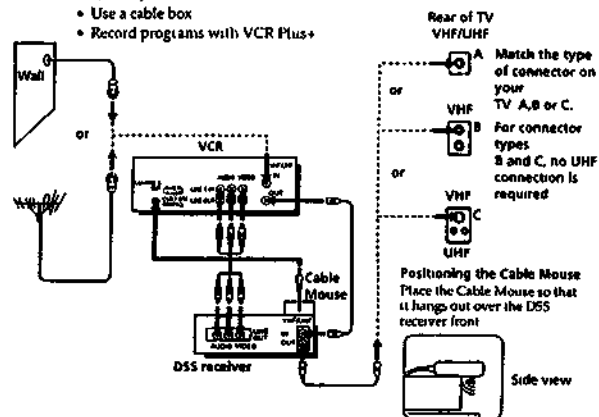


Getting Started

continued

Step 3: Hookups (continued)

Hookup 5: VCR setup

- 1 Set the RF UNIT switch to CH 3 or CH 4, whichever channel is not used in your area. If both are used, set the switch to either channel. For details, see page 78. If you made A/V connections (from page 8), you can skip this step.
- 2 Turn on your DSS receiver.
- 3 Press EASY SET UP on the VCR.

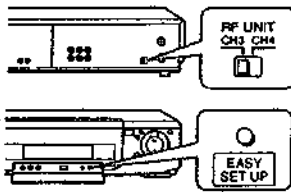


• The LANGUAGE menu appears. Change the on-screen display language to Spanish (ESPAÑOL) or French (FRANÇAIS) if desired, and press EXECUTE. For details, see page 31.

• The CLOCK SET menu appears. Select AUTO and press EXECUTE. For details, see page 32.


• The SMART CH MAPPING menu appears. Press CURSOR $\uparrow/\downarrow/\leftarrow/\rightarrow$ to enter the ZIP CODE in your area and press EXECUTE. (You can also use the number buttons to enter the ZIP CODE.)

• The CABLE BOX menu appears. Select ON. For details, see page 38.

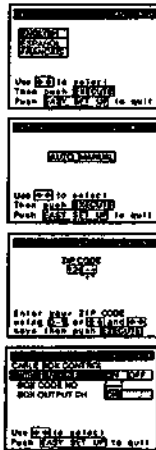

• Enter your DSS receiver code number and press CURSOR \downarrow . For details, see page 38.

• Set your DSS receiver output channel (BOX OUTPUT CH) to LINE and press EXECUTE.

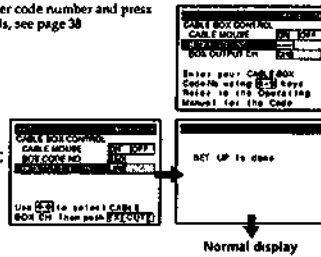

Getting Started

Automatic clock setting

Once you've set up the VCR, it automatically sets the clock the first time you turn off the VCR. After that, whenever you turn off the VCR, it checks the time and adjusts the clock, even for Daylight Saving Time. The VCR sets the clock by picking up a time signal provided by some TV channels.

If you want to use the timer to record right away, or if the channels in your area do not carry time signals, set the clock manually. For details, see pages 36 to 37.

Note

- To successfully record a program from the DSS receiver, proceed as follows:
 - Leave the DSS receiver on all the time.
 - Turn off the display (menu screen, channel number, etc.) of the DSS receiver.
 - To record or receive locked channels, unlock the channel before the VCR starts recording.
 - To set pay-per-view programs in the timer setting, order the pay-per-view program before the VCR starts recording.
 - Some programs are copy protected. You cannot record these programs.

continued

Step 3: Hookups (continued)

Hookup 6

Pages 26 to 30

Incompatible cable box with only a few scrambled channels, using an A/B switch

Recommended use


By using an A/B switch (not supplied), this hookup allows you to record both scrambled and unscrambled channels conveniently.

What you can do with this hookup

- Record any unscrambled channel by selecting the channel directly on the VCR (the A/B switch is set to A).
- Record any scrambled channel by selecting the channel on the cable box (the A/B switch is set to B).


What you can't do

- Record one scrambled channel while watching another channel (the A/B switch is set to B).

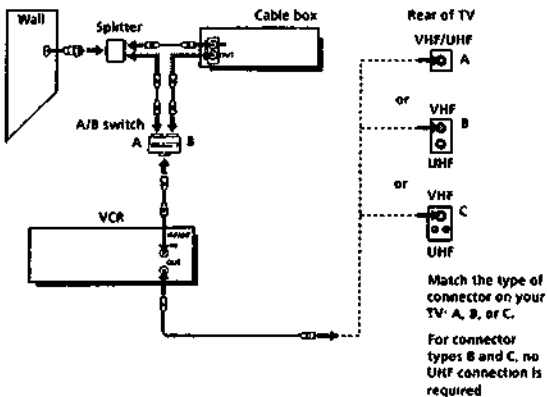

Hookup 6: VCR setup

- 1 Set the RF UNIT switch to CH 3 or CH 4, whichever channel is not used in your area. If both are used, set the switch to either channel. For details, see page 78. If you made A/V connections (from page 8), you can skip this step.
- 2 Set the A/B switch to "A".
- 3 Press EASY SET UP on the VCR.

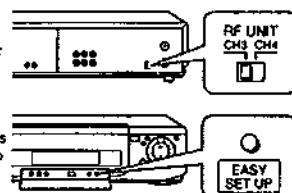


• The LANGUAGE menu appears. Change the on-screen display language to Spanish (ESPAÑOL) or French (FRANÇAIS) if desired, and press EXECUTE. For details, see page 31.

• The CLOCK SET menu appears. Select AUTO and press EXECUTE. For details, see page 32.

• The SMART CH MAPPING menu appears. Press CURSOR $\uparrow/\downarrow/\leftarrow/\rightarrow$ to enter the ZIP CODE in your area and press EXECUTE. (You can also use the number buttons to enter the ZIP CODE.)

• The CABLE BOX menu appears. Select OFF and press EXECUTE. For details, see page 38.

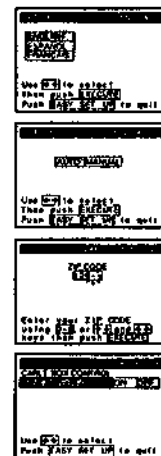

Getting Started

continued

Step 3: Hookups (continued)

1 The TUNER PRESET menu appears. Set ANTENNA/CABLE to CABLE and press EXECUTE. For details, see page 43

2 The AUTO PRESET starts


3 Preset the cable box output channel (usually 2, 3, or 4). For details, see page 38

4 Press MENU and select TUNER PRESET

5 Enter the cable box output channel. Set MANUAL SET to ADD and press EXECUTE

Hookup 6: VCR Plus+ channel setup

- 1 Press MENU and select SET VCR Plus+ CHANNELS
- 2 Press CURSOR \leftarrow/\rightarrow to select AUTO and press EXECUTE
- 3 Press POWER to turn off the VCR

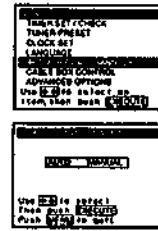

The VCR receives the program information signal from 0:00 am to 5:00 am while the VCR is turned off, and set up the channel for VCR Plus+ recording. After channel setup is finished, you can record TV programs using VCR Plus+. For details, see page 48

Notes

- To use the smart channel mapping feature, set the A/B switch to A
- It takes about 1 hour to complete channel setup
- The VCR can receive the program information signal only while the VCR is turned off and no timer recordings are set
- If the channels in your area don't carry the program information signals, set the program guide channels manually. For details, see page 50
- If the Choose your Cable CH MAP menu appears the first time you turn on the VCR after finishing channel setup, select the MAP number. For details, see page 49

VCR Plus+ channel setup for scrambled channels

To set the program guide channels for scrambled channels, enter all the scrambled channels you want to record and the cable box output channel (usually 2, 3, or 4) after finishing smart channel mapping. For details, see page 50

- 1 Find the VCR Plus+ Channel Listing in your program guide. For details, see page 47
- 2 Press MENU and select SET VCR Plus+ CHANNELS, then press EXECUTE



continued

Step 3: Hookups (continued)

1 Press CURSOR \leftarrow/\rightarrow to select MANUAL

2 Enter the program guide channel, then the cable box output channel

3 Press EXECUTE

4 Press MENU

Automatic clock setting

Once you've set up the VCR, it automatically sets the clock the first time you turn off the VCR. After that, whenever you turn off the VCR, it checks the time and adjusts the clock, even for Daylight Saving Time. The VCR sets the clock by picking up a time signal provided by some TV channels.


If you want to use the timer to record right away, or if the channels in your area do not carry time signals, set the clock manually. For details, see pages 36 to 37

Note

- To use the automatic clock setting feature, set the A/B switch to A

Selecting a language

You can change the on-screen display language

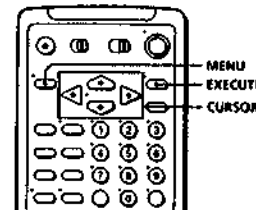

- 1 Press MENU, then press CURSOR \uparrow/\downarrow to move the cursor to LANGUAGE and press EXECUTE. When using the EASY SET UP procedure, skip this step
- 2 Press CURSOR \uparrow/\downarrow to select ENGLISH, ESPAÑOL, or FRANÇAIS, then press EXECUTE




Setting the clock

Using the Auto Clock Set feature

Some TV and cable channels transmit time signals with their broadcasts. Your VCR can pick up this time signal to automatically set the clock.

The Auto Clock Set feature works only if a channel in your area is broadcasting a time signal. If broadcasters in your area are not yet sending time signals, set the time manually (page 36).

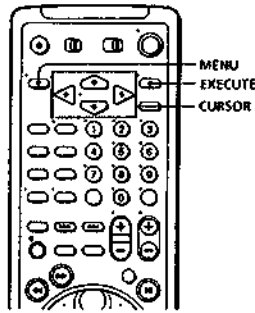

4

To activate the Auto Clock Set function, turn off the VCR. The VCR automatically sets the clock by searching for a channel that carries a time signal and sets your time zone and Daylight Saving Time (if applicable).

If your clock is set to the wrong time zone or Daylight Saving Time, you can adjust these settings without turning off the Auto Clock Set feature (page 34).

Notes

- The clock cannot be set automatically if you don't receive a channel that carries a time signal in your area. If so, set the clock manually.
- If there are only a few channels in your area that carry time signals, setting the clock automatically may take up to about 30 minutes. If nothing happens even after you wait about 30 minutes, set the clock manually.
- If you use Hookup 1 or Hookup 4, make sure you leave the cable box on.

Getting Started

continued

1 Press MENU, then press CURSOR \uparrow/\downarrow to move the cursor to CLOCK SET and press EXECUTE.


When using the EASY SET UP procedure, skip this step.

2 Press CURSOR \leftarrow/\rightarrow to select AUTO, then press EXECUTE.

3 Press CURSOR \leftarrow/\rightarrow to select YES, then press EXECUTE.

Setting the clock (continued)

If the clock is not activated

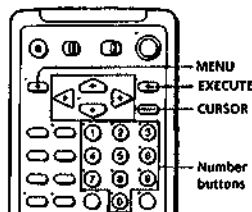

1 Follow steps 1 and 2 in "Using the Auto Clock Set feature." The AUTO CLOCK SET menu is displayed.

2 Press CURSOR \leftarrow/\rightarrow to select NO for FULL AUTO.

3

Press CURSOR \uparrow/\downarrow to highlight the item you want to set, then press CURSOR \leftarrow/\rightarrow to make the setting.

- For CLOCK SET CH**
Leave the setting to "--" to have the VCR automatically search for a channel that carries a time signal. Press the number buttons to select a channel that carries a time signal. Use this option if you know of a channel that carries a time signal. Most PBS member stations broadcast a time signal. For the fastest response, select your local PBS station.
- For TIME ZONE**
Select the time zone of your area, or select AUTO to have the VCR automatically set your time zone. The options are: AUTO \rightarrow ATLANTIC \rightarrow EASTERN \rightarrow CENTRAL \rightarrow MOUNTAIN \rightarrow PACIFIC \rightarrow ALASKA \rightarrow HAWAII \rightarrow AUTO.
- For DAYLIGHT SAVING**
Select ON or OFF (standard time), or AUTO to have the VCR automatically set the daylight saving time.

4 EXECUTE

Press EXECUTE.

5

To activate the Auto Clock Set function, turn off the VCR.


Note

- If you use both the cable box control feature and the Auto Clock Set feature, the VCR automatically changes channels on the cable box until a channel that carries a time signal is found, whenever you turn off the VCR. If you want to stop the search, change the channel on the cable box with the channel buttons either on the VCR or on the remote commander.

Getting Started


continued


Using Manual Clock Set

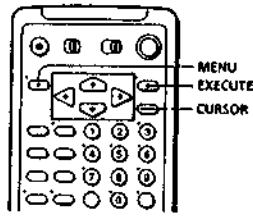



- 1** Press MENU, then press CURSOR \uparrow/\downarrow to move the cursor to CLOCK SET and press EXECUTE

When using the EASY SET UP procedure, skip this step


- 2** Press CURSOR \leftarrow/\rightarrow to select MANUAL, then press EXECUTE

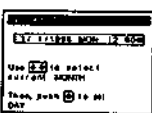
- 3** Press CURSOR \uparrow/\downarrow to set the month

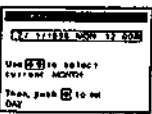
- 4** Press CURSOR \rightarrow to highlight the day and press CURSOR \uparrow/\downarrow to set the day. The day of the week is set automatically.




- 5** Set the year, hour and minutes in the same way as the day
- 6** Press EXECUTE to start the clock

Getting Started

Setting up cable box control


(Skip this section if you are using Hookup 2, 3, 4, or 6.)

Your VCR includes a cable box control feature that allows the VCR to control most brands of cable boxes/DSS receivers via the Cable Mouse. With cable box control, the VCR controls channels on the cable box/DSS receiver for timer recording. You can also use the VCR's remote commander to change channels on the cable box/DSS receiver whenever the cable box/DSS receiver is turned on even if the VCR is turned off. To use cable box control, you need to connect the Cable Mouse (pages 10 and 23) and set the code number and output channel.

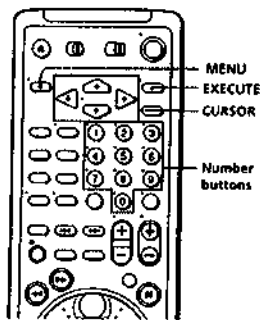

- 3** Press the number buttons to enter the cable box/DSS receiver code number, then press CURSOR \downarrow

Find your cable box/DSS receiver code number from the chart below


- 4** If you want to control a cable box, press CURSOR \leftarrow/\rightarrow to select the output channel for the cable box, then press EXECUTE

If you want to control a DSS receiver, select LINE, then press EXECUTE

Cable box and DSS receiver brand and the corresponding code numbers. If more than one code number is listed, try entering them one by one, until you come to the correct code for your equipment.

Cable box brand	Code numbers	Cable box brand	Code numbers
ABC	018, 022, 024, 028, 217	Eastem	013, 285
Antronax	216	Electronod	089
Archer	003, 050, 164, 218	Electus	055
DBT	278	Jimnet	454
Cable Star	067	Focus	411
Cabletenna	033	Garrard	164
Cable tune	172, 282, 388, 459	GC Electronics	027, 067, 341
Century	164	GE	243, 244
Cokuzen	164, 326, 327	GDC	097
Clyde Cablevision	097	German	026, 068, 081, 293
Colour Voice	036, 042	General Instrument	022, 287, 487
Comband	243, 244	Hamlin	020, 031, 045, 270, 284
Comtronics	051, 071	Hitachi	022
Darsat	434	Jasco	164, 326
Diamond	046	Jerrold	014, 022, 025, 026, 035, 037, 058, 109, 287, 487
Eagle Electronics	051		

Getting Started

continued

Setting up cable box control (continued)


Cable box brand	Code numbers
Linasy	451
Mazcom	044
Magnavox	008, 043, 060, 345
Meenotex	011
Movie Time	089, 167, 214
Northcoast	325
Non-plex	629
NSC	074, 081, 167, 214
Oak	018, 030, 259
Omni-view	382
Panasonic	032, 118
Paragon	011
Philips	036, 038, 039, 040, 041, 042, 071, 301, 345
Philips ECG	253
Pioneer	034, 155, 271, 544, 695
Popular Mechanics	411
Pulpar	011
RCA	032
Realistic	218
Reconon	431
Regal	031, 270, 284, 290
Regency	013
Rembrands	081
RK	315, 317, 490
Samsung	051, 155
Satbox	366
Scientific Atlanta	017, 019, 028, 288, 338
Seam	521
Sharp	324
Signal	082
Signature	022
SL Marx	061
Spectravision	069
Sprucer	032, 318
Standard Components	107, 166
Starcom	014, 026, 056, 109

Cable box brand	Code numbers
Sargate	026, 051
SIS	167
Sylvania	012
T Cable Teletext	116
Tandy	269
Talung	108
Teknca	157
Tele +1	454
TeleCaption	232
Teleservice	292
Tecscan	012, 107
TTC	521
Timeless	429
Tbcmn	023, 024, 070
Toshiba	011
Tudi	297
TV86	074
TV COM	018, 030, 259
Uniden	236
Unika	033, 164, 218
United Artists	018
United Cable	014
Universal	030, 050, 067, 088, 089, 104, 202, 218, 330
Vidaway	261
Vidtech	255
Viewstar	038, 071, 074, 122, 222, 269, 300
Westwater cable	116
Zenith	011, 065, 536
Zenith	411
Wave Master	576

DSS receiver brand	Code numbers
Sony	650
RCA	577

To ensure correct operation

- Place the Cable Mouse so that it hangs out over the cable box/DSS receiver front
- Do not place the cable box/DSS receiver on top of the VCR
- Position the cable box/DSS receiver away from the VCR
- Point the remote commander at the VCR, not at the cable box/DSS receiver

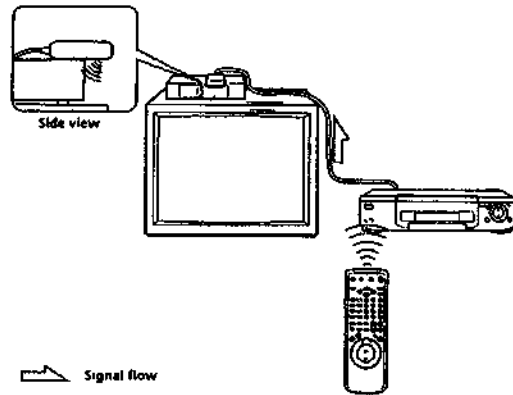

To check the cable box control setting

- 1 Press CH +/- on the remote commander. Does the channel indicator on the cable box/DSS receiver change? (Point the remote commander at the VCR, not at the cable box/DSS receiver)
 - 2 Press all 10 number buttons (0 to 9) on the remote commander. Does the channel indicator on the cable box/DSS receiver change?
- If the answer to both 1 and 2 is "yes," you have made the correct setting

continued

Setting up cable box control (continued)

If you cannot get your VCR to control the cable box/DSS receiver

- Check that the Cable Mouse is connected to the CABLE BOX CONTROL jack on the VCR.
- Check the position of the Cable Mouse
- Place the cable box/DSS receiver and VCR away from each other. Do not place the cable box/DSS receiver on top of the VCR
- Try the setup again making sure to use the correct control code. If the cable box still does not respond, try the other codes that are listed

If your cable box still does not operate with the Cable Mouse, contact your cable company to see if they can provide you with a compatible cable box

Note

- Make sure you turn off the VCR when you plug in or unplug the Cable Mouse. If you unplug the Cable Mouse and plug it in again, turn on the VCR before you use the cable box/DSS receiver control feature

Presetting channels

(Skip this section if you are using cable box/DSS receiver control.)


This VCR is capable of receiving VHF channels 2 to 13, UHF channels 14 to 69 and unscrambled CATV channels 1 to 125. First, we recommend that you preset the receivable channels in your area using automatic presetting. Then, if there are any unwanted channels, disable them manually. If you have decided which channels you wish to preset, set them directly using manual presetting.

Before you start...

- Turn on the VCR and the TV
- Set the TV to the VCR channel (channel 3 or 4). If your TV is connected to the VCR using A/V connections, set the TV to video input
- Press TV/VTR to display the VTR indicator in the VCR's display window
- Press INPUT SELECT so that a channel number appears in the VCR's display window

Presetting all receivable channels automatically

- 1 Press MENU, then press CURSOR \uparrow/\downarrow to move the cursor to TUNER PRESET and press EXECUTE. When using the EASY SET UP procedure, skip this step.



continued

Presetting channels (continued)

2

- To preset cable TV channels
Press CURSOR \leftarrow/\rightarrow to set ANTENNA/CABLE to CABLE
- To preset VHF and UHF channels
Press CURSOR \leftarrow/\rightarrow to set ANTENNA/CABLE to ANT

3

Press CURSOR \uparrow/\downarrow to select AUTO PRESET then press EXECUTE

All receivable channels are preset in numerical sequence. When no more receivable channels can be found, presetting stops and the picture from the lowest numbered channel is displayed on the TV screen

Tip


- When receiving a VHF, UHF or CATV channel, the display changes as follows each time you press DISPLAY

Channel number, program name, and station's call letters (if the broadcaster sends those services)

Remaining tape length, and time counter

No display

Presetting/disabling channels manually

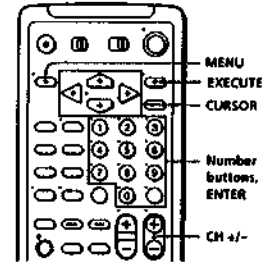

1

- MENU: Press MENU and select TUNER PRESET, then press EXECUTE
- EXECUTE

2

- To preset a channel
 - Press the number buttons to enter the channel number, then press ENTER
 - Press CURSOR \leftarrow/\rightarrow to set MANUAL SET to ADD
- To disable a channel
 - Press CH +/- to select the channel number
 - Press CURSOR \leftarrow/\rightarrow to set MANUAL SET to ERASE

3


- EXECUTE: Repeat step 2 to preset or disable channels as required, then press EXECUTE

Getting Started

Presetting channels (continued)

If the picture is not clear

Normally, the Auto Fine Tuning (AFT) function automatically tunes in channels clearly. If, however, the picture of a channel is not clear, you can also use the manual tuning function.

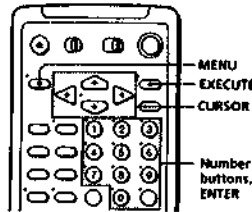

1

- MENU: Press MENU and select TUNER PRESET, then press EXECUTE
- EXECUTE

2

- ENTER: Press the number buttons to select the channel you want to fine-tune, then press ENTER

3

- CURSOR: Press CURSOR \uparrow/\downarrow to select FINE TUNING. The fine tuning meter appears

4

- CURSOR: Press CURSOR \leftarrow/\rightarrow to adjust to a clearer picture. Note that the AFT setting switches to OFF

Setting up VCR Plus+

How VCR Plus+ works

Whenever you want to record a TV program, all you need to do is look up the program's "PlusCode," a number assigned to each program published in the TV section of most newspapers, cable TV listings, and even TV GUIDE magazine. Then, just enter the PlusCode of the program you want and the VCR is automatically programmed to record that show. It's that simple.

Example of "PlusCode"

Time	Program	PlusCode
5:30	MOVIE - Mashed (2hrs)	4302
	SPORT - Golf (1hr 25min)	4300
	NEWS - 5:30-6	8974
6:30	DRAMA - Comedy (2hrs)	17380
	SCIENCE AND TECHNOLOGY (1hr 15min)	73457

How to set up your VCR

Setting up your VCR involves coordinating the TV channel number (the number you turn to on your TV or VCR to watch a program) with the guide channel (the number that's assigned to that channel in your program guide).

The VCR can set the guide channels automatically (see page 48), but you may have to set the guide channels manually depending on your area or the way you hooked up your VCR (see page 50).

To find the guide channel numbers, look at the "Channel Line-up Chart" in the program guide for your area that features VCR PlusCodes. It usually looks like the example to the right.

Example of "Channel Line-up Chart"

CABLE CH	CABLE TV	VCR PlusCode CH
16	American Movie Classics	35
17	Bravo (Program grid only)	54
20	Cable News Network	42
21	C-SPAN	26
27	The Disney Channel	53
25	The Discovery Channel	37
34	ESPN	58
35	The Family Channel	47
5	Home Box Office	30
37	Lifetime	46
28	Comedy	45
26	Musical Television	48
31	Animation	38
29	Cartoon Channel	49
28	Sports Channel America	70
45	SHOWTIME	41
17	The SuperStation	43
44	The Movie Channel	52
49	The Music Network	48
50	Turner Network Television	57
51	USA Network	44


Getting Started

continued

Setting up VCR Plus+ (continued)

Setting up VCR Plus+ automatically (Smart Channel Mapping)

The VCR can automatically set the guide channels in your area from ZIP CODE you entered in EASY SET UP. The VCR receives the program information signal and renews the data everyday after you complete the following procedure

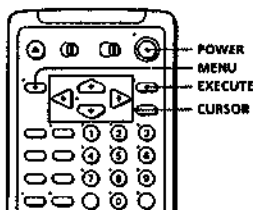


1 Set up the VCR using the EASY SET UP function


2 Press MENU, then press CURSOR \uparrow/\downarrow to move the cursor to SET VCR Plus+ CHANNELS and press EXECUTE. The SMART CHANNEL MAPPING menu appears



3 Press CURSOR \leftarrow/\rightarrow to select AUTO and press EXECUTE. The instruction shown on the right appears on the TV screen for few seconds, then the screen returns to the normal display



If the program information signal in your area has several channel map patterns, the Choose your Cable CH MAP menu appears, and you must select the channel map. See "To select the channel map" on the next page



4 Press POWER to turn off the VCR. The VCR sets the program guide channels from 0:00 am to 5:00 am while the VCR is turned off (It takes about 1 hour to complete channel mapping)

To select the channel map

If the program information signal in your area has several channel map patterns (up to 8), the Choose your Cable CH MAP menu appears



- the first time you turn on the VCR after completing channel mapping
- after selecting AUTO and pressing EXECUTE on the SMART CHANNEL MAPPING menu

In this case, you have to select the channel map on the Choose your Cable CH MAP menu

- 1 Find the VCR Plus+ Channel Listing in your program guide. For details, see page 47
- 2 Press CURSOR \leftarrow/\rightarrow to select the channel map number you want by checking the guide channel number in the program guide
- 3 Press EXECUTE

Notes

- It takes about 1 hour to complete channel mapping
- The VCR can receive the program information signal only while the VCR is turned off and no timer recordings are set
- The VCR cannot set the guide channels correctly unless you enter the ZIP CODE in your area
- When you move to a different area, you must set up the VCR again and enter your new ZIP CODE in the EASY SET UP procedure


Getting Started

continued

Setting up VCR Plus+ (continued)

Setting up VCR Plus+ manually


To set the guide channels manually, use the Channel Line-up Chart to check that the guide channel numbers match the TV channel your VCR receives. For example, if HBO is listed in the Channel Line-up Chart on channel 33, and your VCR receives HBO on channel 5, you need to coordinate these numbers using the following procedure. If the guide and TV channel numbers are the same, you can skip this procedure

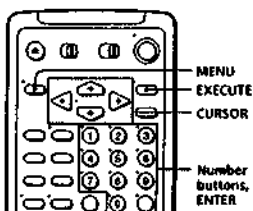


1 Press MENU, then press CURSOR \uparrow/\downarrow to move the cursor to SET VCR Plus+ CHANNELS and press EXECUTE





2 Press CURSOR \leftarrow/\rightarrow to select MANUAL and press EXECUTE



3 Enter the guide channel number assigned in the program guide and press ENTER




- 4
 - If you made Hookup 1, 2, or 3 Enter the actual number on your TV (and VCR) and press ENTER
 - If you made Hookup 4 Enter the cable output channel (usually 2, 3, or 4) and press ENTER
 - If you made Hookup 6 Enter the actual number on your TV (and VCR) for an unscrambled channel and press ENTER. For a scrambled channel, enter the cable box output channel (usually 2, 3, or 4) and press ENTER



5 Repeat steps 3 and 4 for each guide channel number that doesn't match


6 When you have set all channels, press EXECUTE to confirm your channel settings



7 After all settings are complete, press MENU to exit

Getting Started

Playing a tape

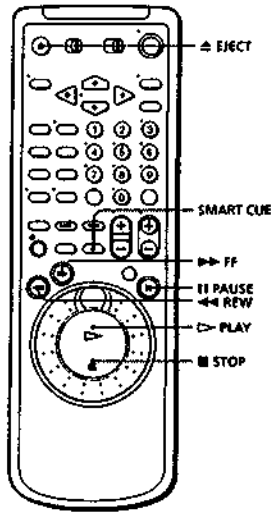

- 1 Turn on your TV and set it to the video channel
- 2 Open the drop down panel and insert a tape
The VCR turns on and starts playing automatically if you insert a tape with its safety tab removed
- 3 Press **▶ PLAY**
When the tape reaches the end, it will rewind automatically

Additional tasks

To	Press
Stop play	■ STOP
Pause play	⏸ PAUSE
Resume play after pause	⏸ PAUSE or ▶ PLAY
Search forward	▶▶ FF during playback
Search backward	◀◀ RLW during playback
Fast forward the tape	▶▶ FF during stop
Rewind the tape	◀◀ REW during stop
Eject the tape	▲ EJECT

To skip playback

You can skip a portion of playback you don't want to watch such as a commercial and restart playback by pressing a single button

- 1 Press **SMART CUE** during playback of the scene you want to skip. The VCR starts searching.
- 2 Press **SMART CUE** again when you find the scene you want to watch. The VCR stops searching, rewinds a few seconds, then resumes normal playback.


If you press and hold **SMART CUE** while the VCR is skip searching, the VCR will stop searching, and continue rewinding until you release **SMART CUE**.

Tip

- You can change the length of rewinding time on the **ADVANCED OPTION** menu. See page 72.

To use the time counter

At the point on the tape that you want to find later, press **COUNTER RESET**. The counter in the display window resets to "00:00:00". Search for the point afterwards by referring to the counter.




To display the counter on the TV screen, press **DISPLAY**.

Notes

- Tapes recorded in the LP mode on other VCRs can be played back on this VCR but the picture quality cannot be guaranteed.
- The counter resets to "00:00:00" whenever a tape is reinserted.
- The counter stops counting when it comes to a portion with no recording.

Recording TV programs

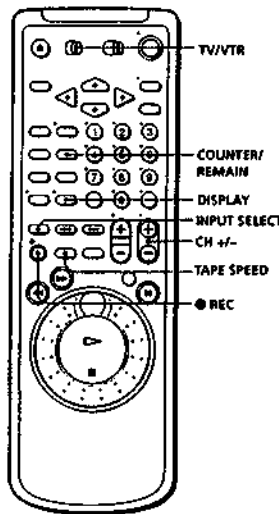

- 1 Turn on your TV and set it to the video channel. To record from a cable box, turn it on.
- 2 Insert a tape with its safety tab in place.
- 3 Press **INPUT SELECT** until a channel number appears in the display window.
- 4 Press **CH +/-** to select the channel you want to record.

- 5 Press **TAPE SPEED** to select the tape speed, SP or EP. EP provides recording time three times as long as SP, however, SP produces better picture quality.
- 6 Press **REC** to start recording.

To stop recording

Press **■ STOP**.

To check the remaining tape length

Press **DISPLAY**. The white bar indicates the approximate length of tape remaining. With the display on, press **COUNTER/REMAIN** to check the remaining time. Each time you press **COUNTER/REMAIN**, the time counter and the remaining time appear alternately. The remaining time also appears in the display window.




To check the remaining time of a tape more than two hours long, set **TAPE SELECT** in the **ADVANCED OPTIONS** menu to "160". (For details, see page 72.)

To watch another TV program while recording

- 1 Press **TV/VTR** to turn off the VTR indicator in the display window.
- 2 If the TV is connected to the VCR's **LINE OUT** jacks, set the TV to VTR input; if not, skip this step.
- 3 Select another channel on the TV.

To save a recording

To prevent accidental erasure, break off the safety tab as illustrated. To record on a tape again, cover the tab hole with adhesive tape.

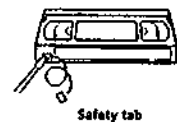

continued

Recording TV programs (continued)


Tips

- To select a channel, you can use the number buttons on the remote commander. Enter the channel number, then press ENTER.
- You can select a video source from the LINE-1 IN or LINE-2 IN jacks using INPUT SELECT.
- The display appears on the TV screen indicating information about the tape, but the information won't be recorded on the tape.
- If you don't want to watch TV while recording, you can turn off the TV. When using a cable box, make sure to leave it on.

Notes

- The remaining time may not be indicated accurately for short tapes such as T-20 or T-30 or tapes recorded in the LP mode.
- The display does not appear during still (pause) mode or slow-motion playback.
- It may take up to one minute for the VCR to calculate and display the remaining time after you press DISPLAY.

Locating a channel by station ID

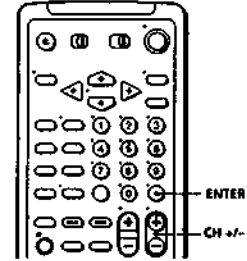


You can select the TV program from station ID

- 1 Turn on your TV and set it to the video channel. To record from a cable box, turn it on.
- 2 Press ENTER. The station ID appears on the TV screen.
- 3 Press CH +/- to select the station ID you want.
- 4 Press ENTER.

Note

- If the TV channel has no station ID, the channel number appears on the TV screen.

Recording TV programs using VCR Plus+

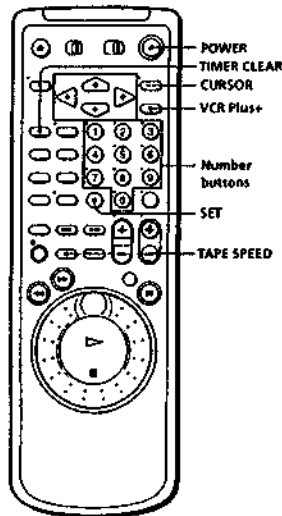

Just enter the program's PlusCode listed in the TV program guide. The date, times and channel number of that program are set automatically. You can preset up to eight programs at a time.

Before you start...

- Check that the VCR clock is set to the correct time.
- Turn on your TV and set it to the video channel. When using a cable box, turn it on.
- Insert a tape with its safety tab in place. Make sure the tape is longer than the total recording time.

- 3 Press TAPE SPEED to select SP or EP.
- 4 Select ONCE, DAILY, or WEEKLY by using CURSOR \leftarrow/\rightarrow , then press SET.

To record	Select
Only once	ONCE
Everyday Monday to Friday	DAILY
Once a week	WEEKLY
- 5 To enter another setting, repeat steps 1 to 4.
- 6 Press POWER to turn off the VCR. The TIMER indicator on the VCR lights up and the VCR stands by for recording. When using a cable box, leave it on.

To stop recording

To stop the VCR while recording, press \blacksquare STOP.

To use the VCR after setting the timer

To use the VCR before a timer recording begins, just press POWER. The "TIMER" indicator turns off and the VCR switches on. Remember to press POWER to reset the VCR in timer recording standby after using the VCR.

You can also do the following tasks while the VCR is recording:

- Reset the counter.
- Display tape information on the TV screen.
- Check the timer settings.
- Watch another TV program.

- 1 Press VCR Plus+.
- 2 Press the number buttons to enter the program's PlusCode. If you make a mistake, press TIMER CLEAR and re-enter the correct number.

continued

Recording TV programs using VCR Plus+ (continued)

To lock the VCR after setting the timer (Child Lock)

Hold down POWER on the VCR until the VCR beeps. The VCR turns off and the "LOC" appears in the display window. The VCR will not work except for timer recording.

To unlock the VCR, hold down POWER on the VCR until the VCR beeps.

Tips

- To cancel the procedure, press VCR Plus+ before pressing SET.
- When you are recording a program in the SP mode and the remaining tape becomes shorter than the recording time, the tape speed is automatically changed to the EP mode. Note that some noises will appear on the picture when the tape speed is changed. If you want to keep the tape speed, set AUTO TAPE SPEED to OFF in the ADVANCED OPTIONS menu (page 72).

Notes


- If the VCR beeps, this means that
 - the PlusCode is incorrect
 - ONCE, DAILY, or WEEKLY was selected incorrectly. You cannot select DAILY or WEEKLY for a program that airs more than seven days ahead.
- The VCR will be unlocked when
 - you stop timer recording by pressing STOP
 - you insert a tape
 - the AC power cord is disconnected or power supply stops

Setting the timer manually

If VCR Plus+ is not available in your area, follow the instructions below to set the timer to record programs.

Before you start ..

- Check that the VCR clock is set to the correct time.
- Turn on your TV and set it to the video channel. When using a cable box, turn it on.
- Insert a tape with its safety tab in place. Make sure the tape is longer than the total recording time.

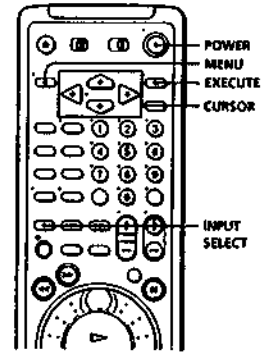

1 Press MENU and select TIMER SET/CHECK.

DATE	START	STOP	CH
1/1	19:00	20:00	1
1/2	19:00	20:00	1
1/3	19:00	20:00	1
1/4	19:00	20:00	1
1/5	19:00	20:00	1
1/6	19:00	20:00	1
1/7	19:00	20:00	1

2



Set the date, start and stop times, channel number and tape speed.

- Press CURSOR → to highlight each item in turn.
- Press CURSOR ↓/↑ to set each item. To correct a setting, press CURSOR ← to return to that setting and reset.

DATE	START	STOP	CH
1/1	19:00	20:00	1
1/2	19:00	20:00	1
1/3	19:00	20:00	1
1/4	19:00	20:00	1
1/5	19:00	20:00	1
1/6	19:00	20:00	1
1/7	19:00	20:00	1

To record the same program every day or the same day every week, press CURSOR ↓ while the date is highlighting. For details, see "Daily/weekly recording" on the next page.

To record from a source connected to the LINE -1 IN or LINE -2 IN jacks, press INPUT SELECT to display "L1" or "L2" in the "CH" position.



continued

Setting the timer manually (continued)



3 Press CURSOR → to confirm the setting. The cursor appears at the beginning of the line. To enter another setting, move the cursor to the next line and repeat step 2.



4 Press EXECUTE.



5 Press POWER to turn off the VCR. The TIMER indicator on the VCR lights up and the VCR stands by for recording. When using a cable box, leave it on.

Daily/weekly recording

In step 2 above, press CURSOR ↓ to select the recording pattern. Each time you press CURSOR ↓, the indication changes as shown below. Press CURSOR ↑ to change the indication in reverse order.

the current date → SUN-SAT → MON-SAT → MON-FRI → EVERY SAT
→ EVERY MON → EVERY SUN → 1 month later → (cycles backward) → the current date

Tips


- To set the channel, you can also use the CH +/- or number buttons.
- To set the tape speed, you can also use TAPE SPEED.
- When you are recording a program in the SP mode and the remaining tape becomes shorter than the recording time, the tape speed is automatically changed to the LP mode. Note that some noises will appear on the picture when the tape speed is changed. If you want to keep the tape speed, set AUTO TAPE SPEED to OFF in the ADVANCED OPTIONS menu (page 72).
- To lock the VCR after setting the timer, see page 60.

Note

- If you are using cable box control, you cannot select "L1" or "L2."

Additional Operations

Playing/searching at various speeds

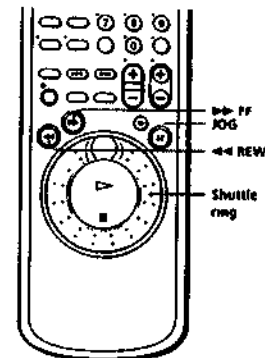

Using the remote commander

Playback options	Operation
Fast-forward/rewind	During stop, press ►► FF or ◄◄ REW
View the picture during fast-forward or rewind	During fast forward, hold ►► FF down. During rewind, hold ◄◄ REW down.
Rewind and start play	During stop, hold ◄◄ REW on the VCR, and press ►► PLAY on the VCR.


continued

Using the Shuttle ring

With the Shuttle ring, you can operate a variety of playback options. There are two ways for using the Shuttle ring, normal mode and jog mode.

To use the Shuttle ring in normal mode

During playback or pause, turn the Shuttle ring clockwise or counterclockwise. Each change in the Shuttle ring position changes the playback mode, and the corresponding mark appears on the TV screen for a few seconds in the following way if the on-screen display function is on.

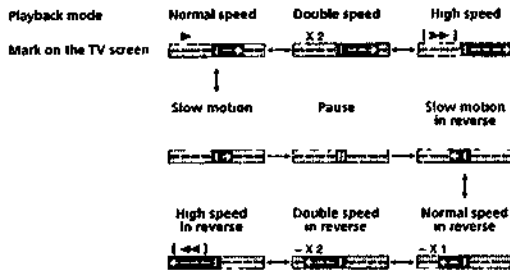

To use the Shuttle ring in jog mode

Use this mode for frame-by-frame playback.

Press JOG to enter the jog mode. The JOG button lights up. If you change to the jog mode during any playback mode, the playback pauses so you can see a still picture. Each change in the Shuttle ring position shifts the picture one frame. To shift frames in reverse, turn the Shuttle ring counterclockwise. The frame shift speed depends on the speed you turn the Shuttle ring. To resume normal playback, press JOG again. The JOG indicator goes off.

To resume normal playback

Press **C** > PLAY


Tip

- Adjust the picture using the TRACKING +/- buttons if
 - Streaks appear while playing in slow motion
 - Bands appear at the top or bottom while pausing
 - The picture shakes while pausing

Notes


- The sound is muted during these operations
- Tapes recorded in the LP mode on other VCRs can be played back on this VCR but the picture quality cannot be guaranteed
- If the playback mode mark doesn't appear on the TV screen, press DISPLAY

Recording TV programs using the quick timer




After starting recording in the normal way, you can have the VCR stop recording automatically after a specified duration.

- 1 While recording, press QUICK TIMER once



- 2 Press QUICK TIMER repeatedly to set the duration

Each press advances the time in increments of 30 minutes



The duration decreases minute by minute to 0:00, then the VCR stops recording and turns off automatically.

To check or extend the duration

Press QUICK TIMER once. The duration is displayed for 10 seconds. If you want to extend the time, press QUICK TIMER within 10 seconds to set to the new duration.


To stop while recording

Press **STOP**

Using the quick timer during stop mode

- 1 Press QUICK TIMER
- 2 Press CH +/- or INPUT SELECT to select the channel you want to record
- 3 Press QUICK TIMER repeatedly to set the recording duration. The recording starts.


Checking/ changing/ cancelling timer settings

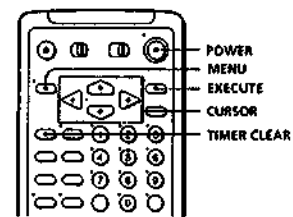

Before you start ...

- Turn on your TV and set it to the video channel

- 1 Press POWER to turn on the VCR.
- 2 Press MENU and select TIMER SET/CHECK
 - If you want to change a setting, go on to the next step
 - If you do not need to change the settings, press EXECUTE, then turn off the VCR to return to recording standby




- 3 Press CURSOR \uparrow/\downarrow to select the setting you want to change
 - To change the setting, press CURSOR \leftarrow/\rightarrow to highlight the item you want to change, and press CURSOR \uparrow/\downarrow to reset it. Then, press CURSOR \rightarrow repeatedly until the cursor appears at the beginning of the line
 - To cancel the setting, press TIMER CLEAR
- 4 Press EXECUTE

If any timer settings remain, turn off the VCR to return to recording standby.

When the timer settings overlap

The program that starts first has priority and the second program starts recording only after the first program has finished. If the programs start at the same time, the program listed first in the menu has priority.

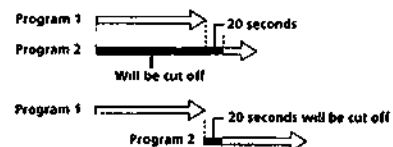

Recording stereo and bilingual programs

Recording stereo programs

This VCR automatically receives and records stereo programs. When a stereo program is received, the STEREO indicator lights up. If there is noise in the stereo program, set AUTO STEREO in the ADVANCED OPTIONS menu to OFF. The sound will be recorded in monaural (on both hi-fi and normal audio tracks) but with less noise. For details, see page 72.

Recording bilingual programs

Normally, this VCR records only the main sound. When a SAP (Second Audio Program) is received, the SAP indicator lights up. To record only SAP sound, set TUNER AUDIO in the ADVANCED OPTIONS menu to SAP. For details, see page 72.


Selecting the sound during playback

Press AUDIO MONITOR to select the sound you want.

To listen to	On-screen display	Display window
Stereo/main (left and right channels)	STEREO	STEREO
Left channel only	LEFT CH	STEREO
Right channel only	RIGHT CH	STEREO
Monaural	No indicator	No indicator

How sound is recorded on a video tape

The VCR records sound onto two separate tracks. Hi-fi audio is recorded onto the main track along with the picture. Monaural sound is recorded onto the normal audio track along the edge of the tape.

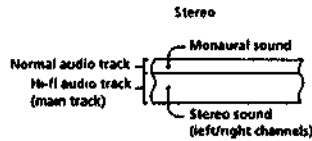


Notes

- To play a tape in stereo, you must use the A/V connections.
- When you play a tape recorded in monaural, the sound is heard in monaural regardless of the AUDIO MONITOR setting.
- If the AUDIO MONITOR button does not function, check that AUDIO MIX in the ADVANCED OPTIONS menu is set to OFF.

Searching using the index function

The VCR marks the tape with an index signal at the point where each recording begins. Use these signals as references to find a specific recording. The VCR can search up to 99 index signals ahead of or behind the current position.

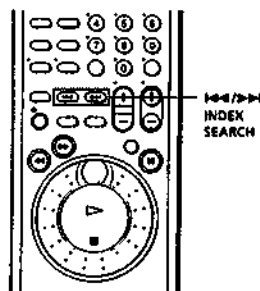

- 1 Insert an indexed tape into the VCR.
- 2 Press INDEX SEARCH repeatedly to specify how many index signals ahead or behind you want to search.
 - To search ahead, press INDEX SEARCH.
 - To search backwards, press INDEX SEARCH.

The VCR starts searching and the index number on the TV screen counts down to zero. Playback starts automatically from that point.


To stop searching
Press STOP.

Adjusting the picture

Adjusting the tracking

Although the VCR automatically adjusts the tracking when playing a tape (the tracking indicator flashes in the display window, then goes off), distortion may occur if the tape was recorded in poor condition. In this case, manually adjust the tracking.

Press the TRACKING +/- buttons to display the tracking meter. The distortion should disappear as you press one of the two buttons (the indicator lights up). To resume automatic tracking adjustment, eject the tape and reinsert it.

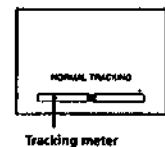

About Adaptive Picture Control (APC)

Adaptive Picture Control (APC) automatically improves recording and playback quality by adjusting the VCR to the condition of the video heads and tape. To maintain better picture quality, we recommend that you set APC to ON in the ADVANCED OPTIONS menu (with the APC indicator in the display window lit). For details, see page 72.

APC playback

The APC function automatically works on all types of tapes, including rental tapes and tapes that were not recorded with APC.

APC recording


Whenever you insert a tape and first start recording, the VCR adjusts to the tape using the APC function (the APC indicator flashes rapidly). This adjustment is retained until the tape is ejected.

Notes

- Auto tracking adjustment cannot be used on tapes recorded in the LP mode on other VCRs.
 - The APC function does not work if the tape speed is automatically changed from the SP to EP mode during a timer recording, unless the tape has been recorded in the LP mode with the APC function.
 - There is a delay of a few seconds before the VCR actually starts recording while the VCR analyzes the tape. To avoid the delay, first set the VCR to recording pause (the APC indicator flashes slowly) and press REC to have the VCR analyze the tape (the APC indicator flashes rapidly). After the APC indicator stops flashing, press PAUSE to start recording immediately.
- If you want to start recording quickly without using the APC function, first set the VCR to recording pause (the APC indicator flashes slowly) and press PAUSE to start recording.

Changing menu options

- 1 Press MENU and select ADVANCED OPTIONS
- 2 Press CURSOR \uparrow/\downarrow to select the option to change, then press CURSOR \leftarrow/\rightarrow to change the setting
The ADVANCED OPTION menu has 2 pages. To select page 2, press CURSOR \downarrow repeatedly until page 2 appears. To select page 1, press CURSOR \uparrow repeatedly until page 1 appears.
- 3 Press EXLCUTE to return to the original screen

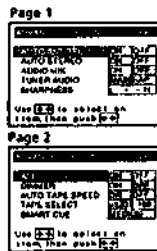

Menu choices

Initial settings are indicated in bold print

Menu option	Set this option to
AUTO ANT S/L	ON if your TV is connected only to VHF/UHF OUT on the VCR. To play a tape, set the TV to the VCR channel (channel 3 or 4). OFF if your TV is connected to both VHF/UHF OUT and L LINE OUT on the VCR. To play a tape, set the TV to the VCR input.
AUTO STEREO	ON to receive stereo programs, OFF to reduce noise. The sound changes to monaural.
AUDIO MIX	ON to listen to the sound recorded on hi-fi and normal audio tracks at the same time. The AUDIO MONITOR button will not function. OFF to listen to hi-fi and normal audio tracks separately. Select the sound using the AUDIO MONITOR button.
TUNER AUDIO	MAIN to record the main sound on both hi-fi and normal audio tracks. SAP to record the SAP (Second Audio Program) sound on both hi-fi and normal audio tracks.
SHARPNESS	L (Low) through H (High) to adjust the sharpness of the picture. L to turn off the sharpness control.
APC	ON to switch on the APC (Adaptive Picture Control) function and improve picture quality. OFF to switch off APC.
DIMMER	ON to make the display window dim, OFF to make it brighter.
AUTO TAPE SPEED	ON to change the timer recording tape speed automatically to the EP mode when the remaining tape becomes shorter than the recording time. OFF to keep the tape speed.
TAPE S/FLECT	"-120" or "-160" to select the tape length and display the remaining time correctly.
SMART CUE	MEDIUM to set the automatic rewinding time on skip playback to a medium length, SHORT to set to short, LONG to set to long.

72 Additional Operations


Editing

Editing methods

This section introduces you to various ways to edit tape recordings

Basic editing

You can make a copy of a tape

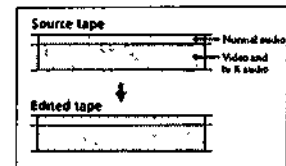


Insert editing

You can replace an existing scene with material from another recording. There are three kinds of insert editing.


Video insert

Replaces the original video and hi-fi audio. The monaural sound on the normal audio track is retained.

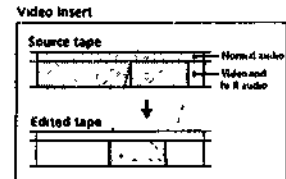

Audio insert

Replaces the original monaural sound on the normal audio track. The video and hi-fi sound are left intact. For example, you can use this feature to add commentary to a tape recorded on a camcorder.

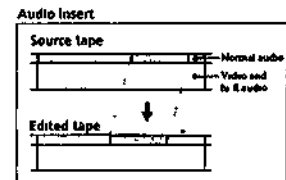


A/V insert

Replaces the original video and both hi-fi and monaural sound.

Editing 73

Hooking up to a VCR or stereo system

How to hook up to record on this VCR

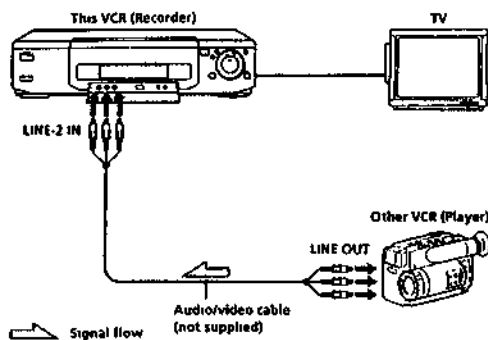

How to hook up to a stereo system

Connect LINE-2 IN AUDIO on this VCR to the audio output jacks on the stereo system, using the RK-C510KS audio cable (not supplied).

If the other VCR has a CONTROL S OUT jack for synchronized editing

Hook up to record on the other VCR, then connect the VCRs via the CONTROL S jacks. The CONTROL S connection lets you control (pause and release/pause) both VCRs from the recording VCR.


Notes

- Make sure you connect the plugs to jacks of the same color.
- If the other VCR is a monaural type, leave the red plugs unconnected.
- If you connected this VCR to both the LINE IN and LINE OUT jacks of the other VCR, select the input correctly to prevent a humming noise.
- If the CONTROL S IN jack is used for S-1 mk™ (A/V bus control) with a TV, the CONTROL S connection cannot be used for editing.

Basic editing (when recording on this VCR)

Before you start editing

- Turn on your TV and set it to the video channel.
- Press INPUT SELECT to display "L2" in the display window.
- Press TAPE SPEED on the remote commander to select the tape speed, SP or EP.
- On this VCR, press EDIT to display "EDIT" in the display window. If the other VCR has a similar button, press it to activate edit function.

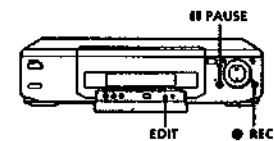

- 1 Insert a source tape with its safety tab removed into the other (playback) VCR. Search for the point to start playback and set it to playback pause.
- 2 Insert a tape into this (recording) VCR. Search for the point to start recording and press PAUSE.
- 3 Press REC on this VCR and set it to recording pause.
- 4 To start editing, press the PAUSE buttons on both VCRs at the same time.

To stop editing

Press the STOP buttons on both VCRs.

Tips

- To edit more precisely, press the PAUSE buttons on the VCRs to release pause.
- To cut out unwanted scenes while editing, press PAUSE on this VCR when an unwanted scene begins. When it ends, press PAUSE again to resume recording (Assemble Editing).

Note

- If you start recording following the procedure above, the VCR won't start recording with the APC function. To record a tape with the APC function, press REC again during recording pause in step 3 so that the VCR analyzes the tape. Then when you start recording in step 4, press PAUSE immediately after the APC indicator stops flashing. If you press PAUSE before the APC indicator stops flashing, the APC function is canceled.


74 Editing

Editing 75

Insert editing

Before you start editing

- Turn on your TV and set it to the video channel
- Press INPUT SELECT to display "L2" in the display window
- Press TAPE SPEED on the remote commander to select the tape speed, SP or EP
- On this VCR, press EDIT to display "EDIT" in the display window. If the other VCR has a similar switch, set it to ON as well

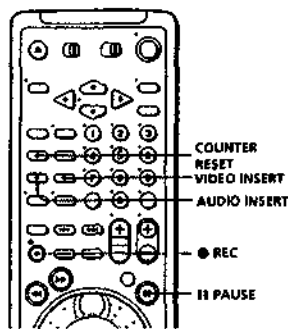

- 1 Insert a source tape into the playback VCR or the stereo system. Search for the point to start playback and set it to playback pause
- 2 Insert a prerecorded tape into this (recording) VCR. Search for the end of the scene to be replaced and press II PAUSE
- 3 Press COUNTER RESET on this VCR to reset the counter to "0H00M00S"
- 4 Rewind the prerecorded tape to the beginning of the scene to be replaced. The VCR pauses.
- 5 Press the INSERT buttons

To replace	Press
Picture and hi-fi sound	VIDEO INSERT "VID INS II" appears on the TV screen and "V INSERT" appears in the display window
Monaural sound only	AUDIO INSERT "A INSERT" appears in the display window
Picture, hi-fi and monaural sound	AUDIO INSERT, then VIDEO INSERT "A/V INS II" appears on the TV screen and "AV INSERT" appears in the display window

- 6 To start editing, press the II PAUSE buttons on this VCR and the other VCR (or stereo system) at the same time

To stop editing

Press the ■ STOP buttons on this VCR and the other VCR (or stereo system)

To listen to both the hi-fi and normal audio

Set AUDIO MIX to ON in the ADVANCED OPTIONS menu (page 72). Use this feature to listen to inserted audio together with the original hi-fi audio. When AUDIO MIX is set to ON, the AUDIO MONITOR button does not function. Remember to reset AUDIO MIX to OFF after playing the tape.

Note


- To use the INSERT function, this VCR must be set to playback pause, not recording pause

Additional information

General setup information

Setting the RF unit

When connecting the VCR to the TV using only the antenna cable, you must set the RF UNIT switch on the rear of the VCR so that the TV can receive the correct signal from the VCR.

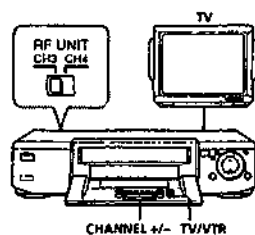


- 1 Set the RF UNIT switch on the rear of the VCR to CH3 or CH4, whichever channel is not used in your area. If both are used, set the switch to either channel.
- 2 Press POWER to turn on the VCR.
- 3 Press TV/VTR to turn on the VTR indicator in the VCR's display window.
- 4 Press CHANNEL +/- to display a channel number in the display window. Select an active channel number in your area.
- 5 Turn on your TV and set it to the channel you selected in step 1 (channel 3 or 4).

The selected TV channel broadcast appears on the TV screen. If the channels change when you press CHANNEL +/- on the VCR, you have made the correct setting.

Whenever you use the VCR, set the TV to the channel selected in step 1.

Attaching the external antenna connector


When using a 300-ohm twin lead cable for VHF/UHF antenna, use the EAC-32 antenna connector (not supplied) to connect the antenna to the VCR.

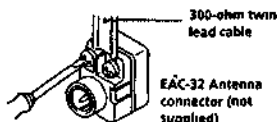

- 1 Loosen the screws on the antenna connector.
- 2 Wind the twin leads around the screws on the antenna connector.
- 3 Retighten the screws.

Attaching a UHF/VHF band mixer

When using both 75-ohm coaxial cable and 300-ohm twin lead cable for VHF/UHF antenna, use the EAC-66 UHF/VHF band separator/mixer (not supplied) to connect the antenna to the VCR.

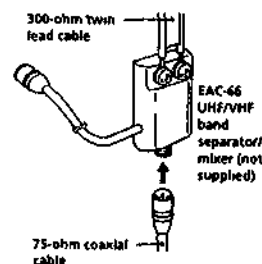


- 1 Loosen the screws on the mixer.
- 2 Wind the twin leads around the screws on the mixer.
- 3 Retighten the screws.
- 4 Connect the 75-ohm coaxial cable to the mixer.

Index to parts and controls


Refer to the pages indicated in parentheses () for details

Front panel

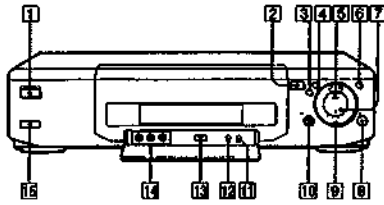


- | | |
|-----------------------------|--|
| 1 POWER switch/indicator | 9 Shuttle ring (63) |
| 2 EJECT button (53) | 10 PAUSE button (53) |
| 3 REW button (53) | 11 EASY SET UP button (11, 14, 17, 20, 24, 27) |
| 4 FF button (53) | 12 EDIT button (75) |
| 5 PLAY button (52) | 13 COMMAND MODE switch (5) |
| 6 JOG button/indicator (64) | 14 LINE-2 IN VIDEO/AUDIO L/R jacks (74) |
| 7 STOP button (53) | 15 Remote sensor |
| 8 REC button (55) | |

Front panel, with cover opened

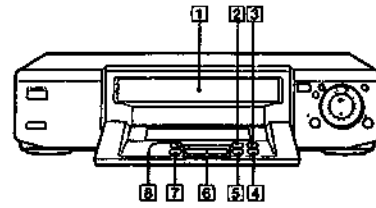

- | | |
|-----------------------------|---|
| 1 Tape compartment | 6 CHANNEL TRACKING +/- buttons (54, 71) |
| 2 AUDIO MONITOR button (68) | 7 COUNTER RESET button (53, 76) |
| 3 QUICK TIMER button (66) | 8 INPUT SELECT button (54, 75) |
| 4 TV/VTR button (55) | |
| 5 TAPE SPEED button (55) | |

Display window

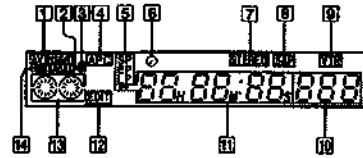


- | | |
|-----------------------------|------------------------------------|
| 1 AV INSERT indicator (76) | 8 SAP indicator (68) |
| 2 REC indicator | 9 VTR indicator (55) |
| 3 (tracking) indicator (71) | 10 Line/channel indicator (54, 75) |
| 4 APC indicator (71) | 11 Time counter/clock indicator |
| 5 TAPE SPEED indicator (55) | 12 EDIT indicator (75) |
| 6 Remaining time indicator | 13 Tape indicator |
| 7 STEREO indicator (68) | 14 TIMER indicator |

continued


Index to parts and controls (continued)

Rear panel

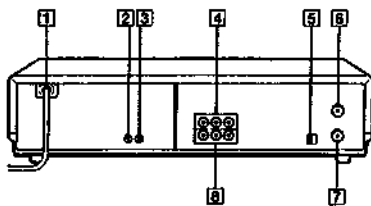

- | | |
|---|--|
| 1 AC Power cord | 5 RF UNIT switch (78) |
| 2 S-LINK (CONTROL S IN) jack (9, 74) | 6 VHF/UHF IN connector (10, 13, 16, 19, 23, 26) |
| 3 CABLE BOX CONTROL (CONTROL S OUT) jack (10, 73) | 7 VHF/UHF OUT connector (10, 13, 16, 19, 23, 26) |
| 4 LINE-1 IN AUDIO L/R/VIDEO jacks (74) | 8 LINE OUT AUDIO L/R/VIDEO jacks (8) |


Remote commander

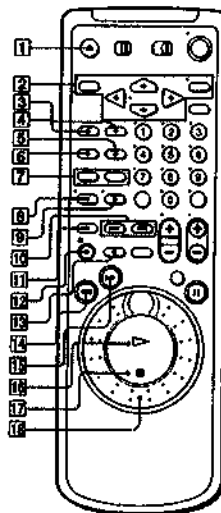

- | |
|---|
| 1 EJECT button (53) |
| 2 Menu operation buttons (31)
MENU button
CURSOR $\uparrow/\downarrow/\leftarrow/\rightarrow$ buttons
EXECUTE button |
| 3 AUDIO MONITOR button (68) |
| 4 TIMER CLEAR button (59) |
| 5 COUNTER/REMAIN button (55) |
| 6 COUNTER RESET button (53, 76) |
| 7 AUDIO/VIDEO INSERT buttons (76) |
| 8 TV/VTR button (55) |
| 9 DISPLAY button (55) |
| 10 \leftarrow/\rightarrow INDEX SEARCH buttons (70) |
| 11 INPUT SELECT button (54, 75) |
| 12 REC button (55) |
| 13 TAPE SPEED button (55) |
| 14 REW button (53) |
| 15 FF button (53) |
| 16 PLAY button (52) |
| 17 STOP button (53) |
| 18 Shuttle ring (63) |

continued

Index to parts and controls (continued)

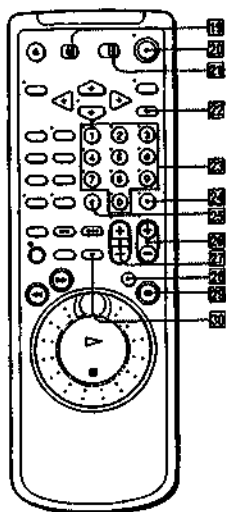


- 18 TV/VTR switch (5)
- 19 POWER button (59, 62)
- 20 COMMAND MODE switch (5)
- 21 VCR Plus+ button (58)
- 22 Number buttons (45, 50)
- 23 ENTER button (45, 50)
- 24 SET button (59)
- 25 CH +/- buttons (54)
- 26 VO⁺ +/- buttons (6)
- 27 JOG button/indicator (64)
- 28 II PAUSE button (53)
- 29 SMART CUE button (53)


SECTION 2 DISASSEMBLY

Note: Follow the disassembly procedure in the numerical order given


2-1. FRONT PANEL ASSEMBLY AND CASE REMOVAL (775HF/776HF/795HF)

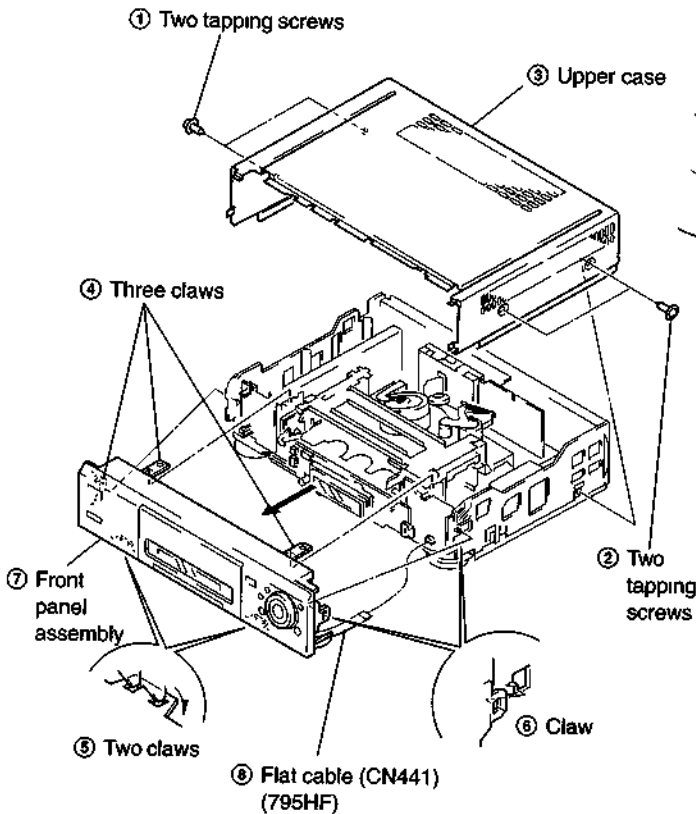


2-3. CONTROL SWITCH BLOCK REMOVAL (975HF)

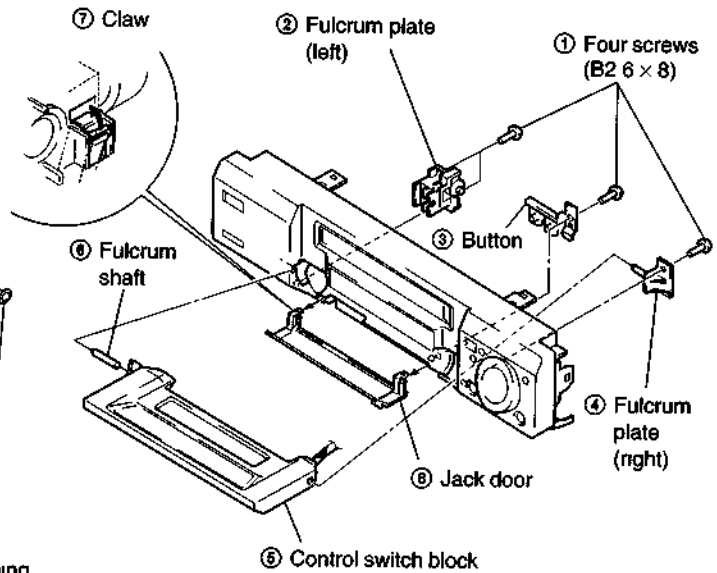


2-2. FRONT PANEL ASSEMBLY AND CASE REMOVAL (975HF)

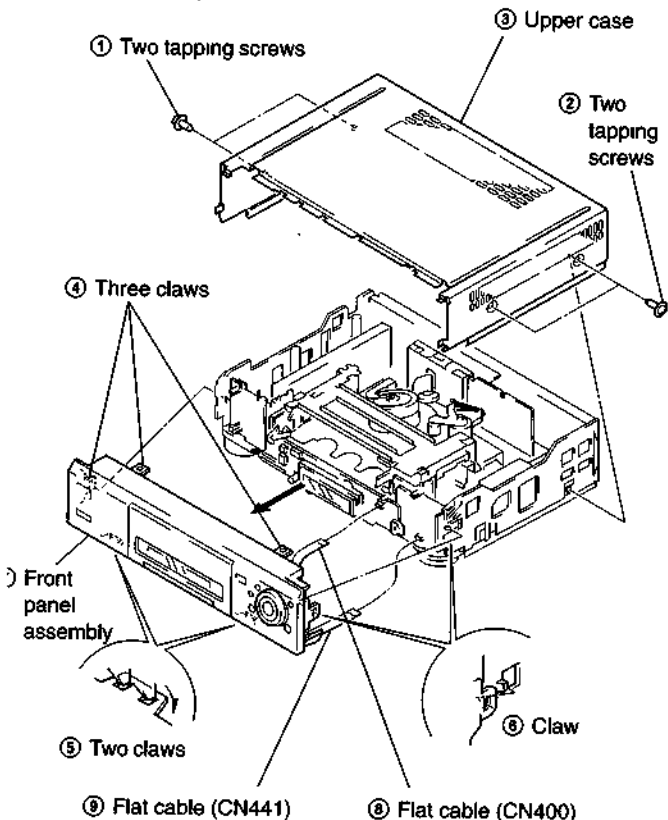


2-4. SR-800/SR-802 DM-63/DM-65 BOARD REMOVAL

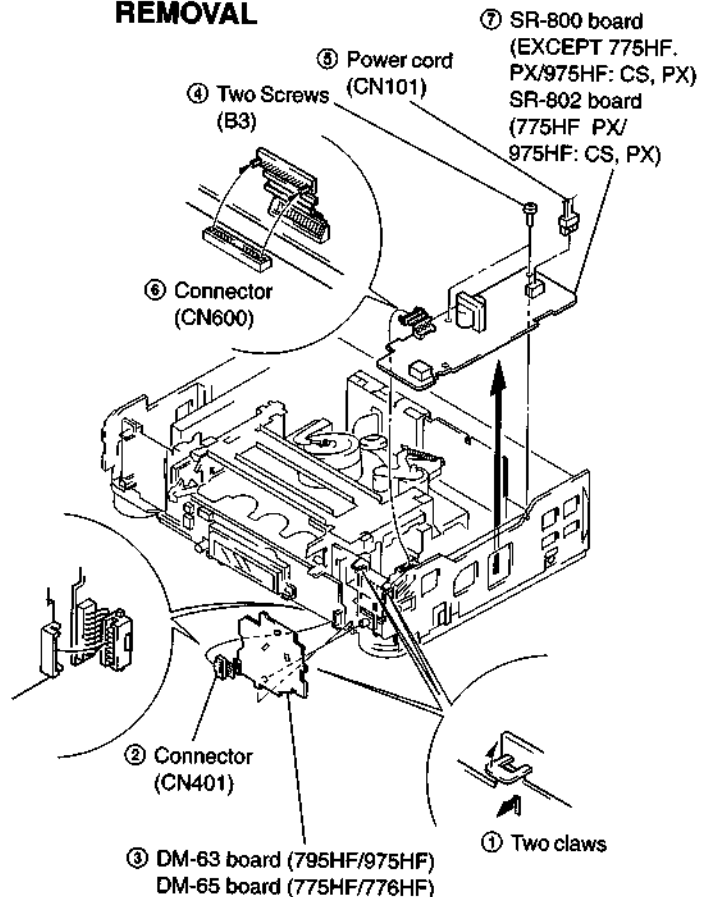


2-5. CASSETTE COMPARTMENT ASSEMBLY AND HI-48/HI-50/MF-302/MF-303 BOARD

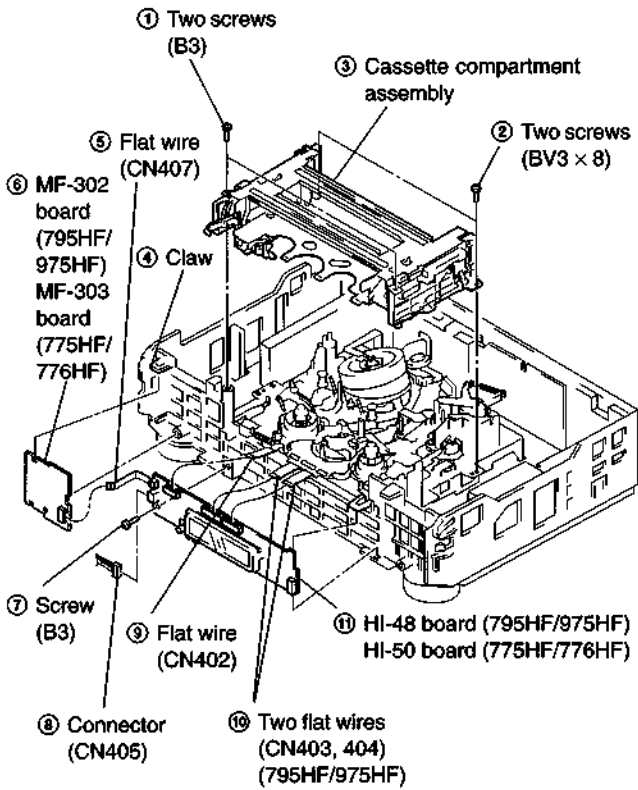


2-7. MECHANISM CHASSIS ASSEMBLY REMOVAL

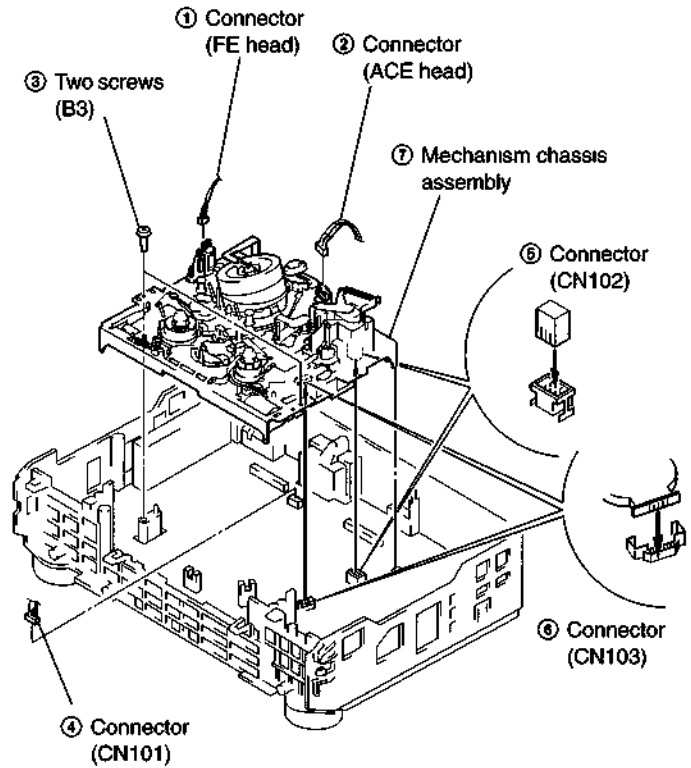



2-6. RP-218/RP-220 BOARD REMOVAL

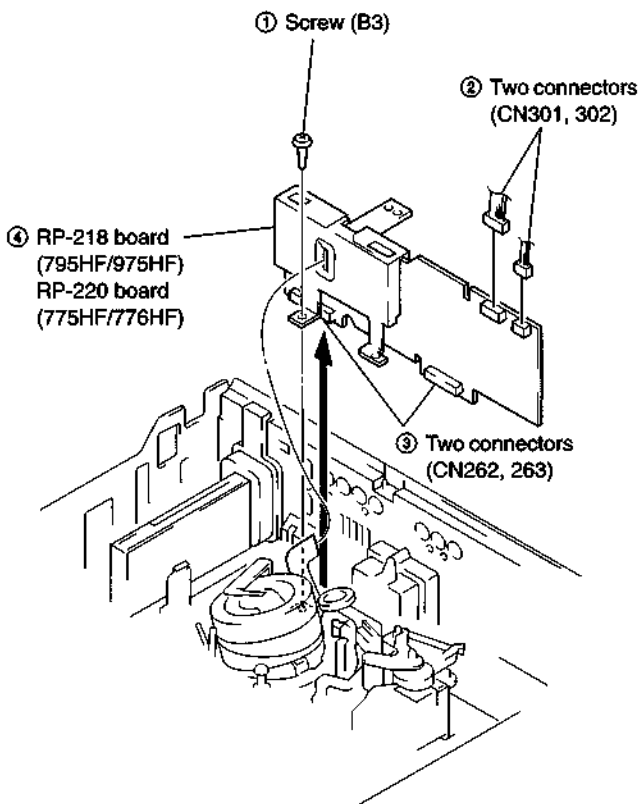


2-8. MA-290/MA-292 BOARD REMOVAL

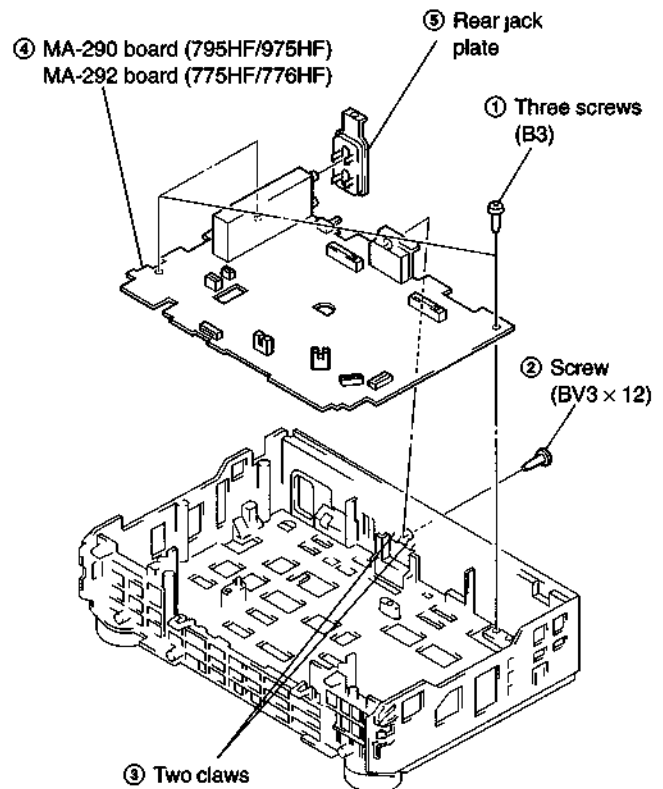

2-9. INTERNAL VIEWS

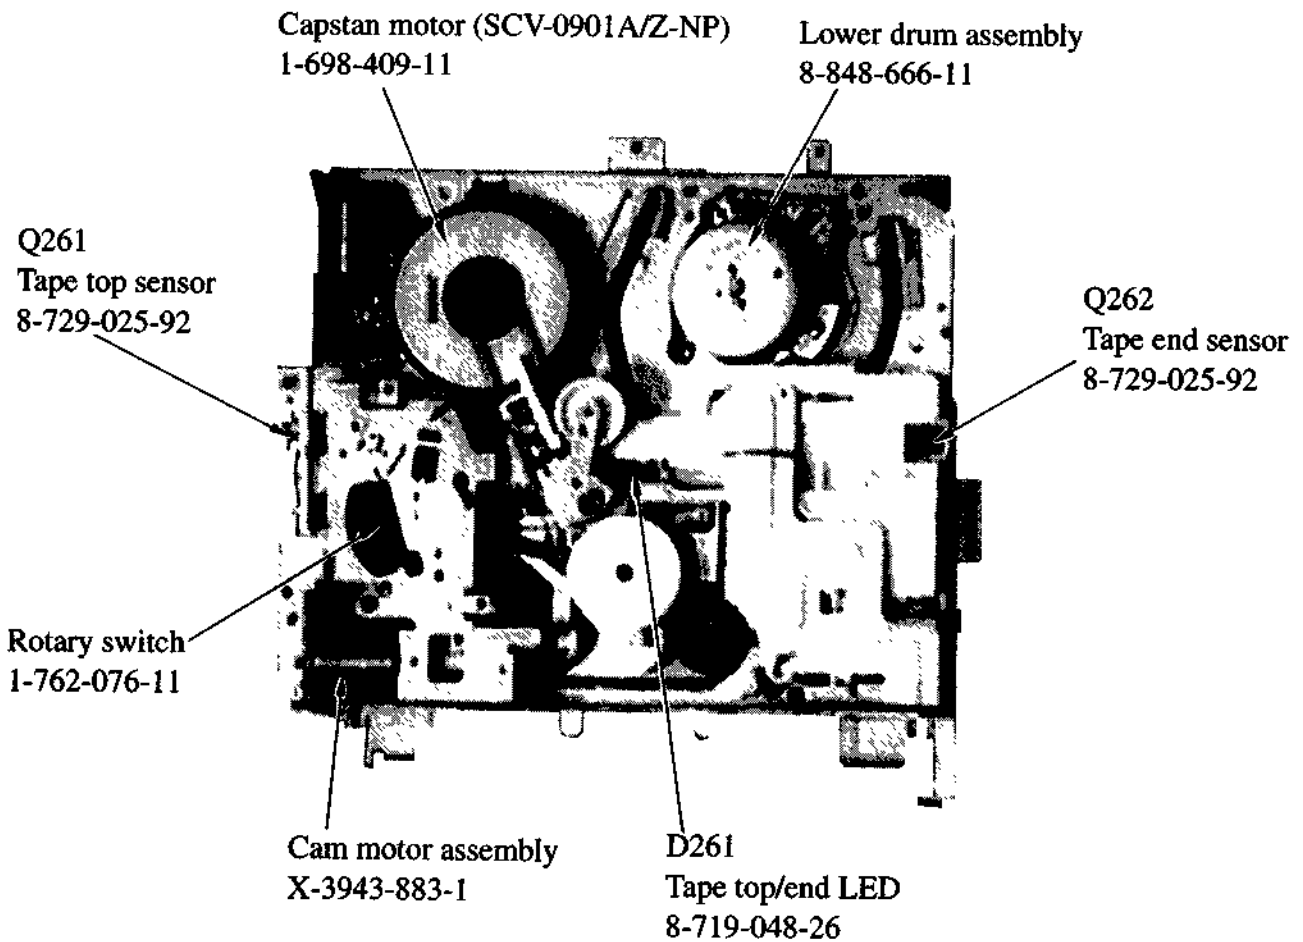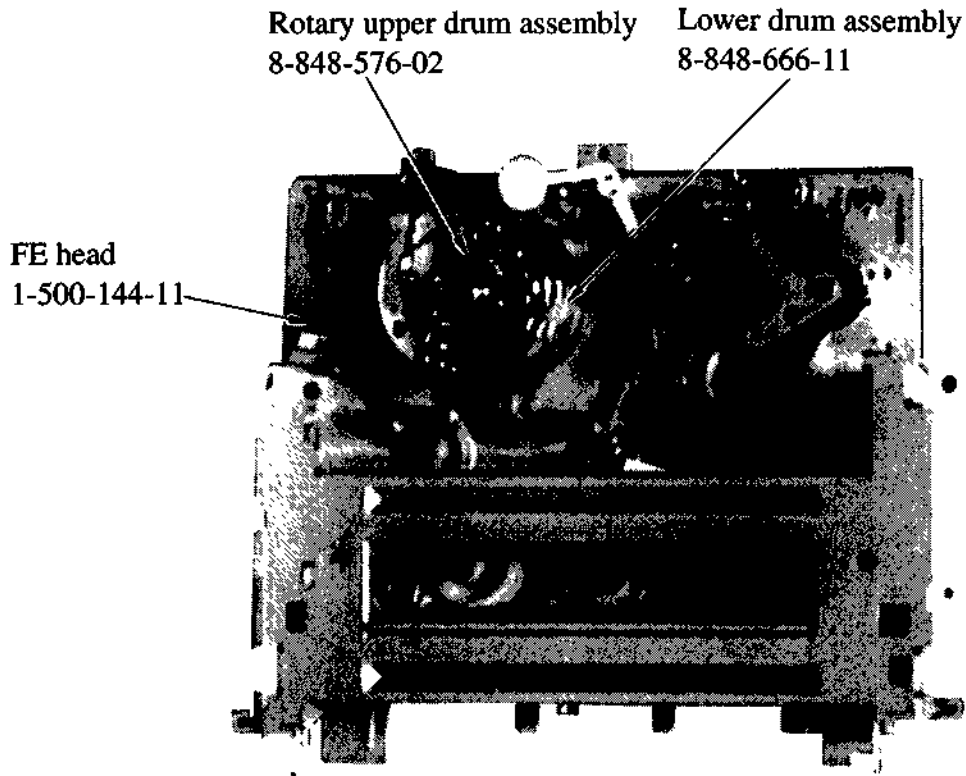


2-10. CIRCUIT BOARDS LOCATION

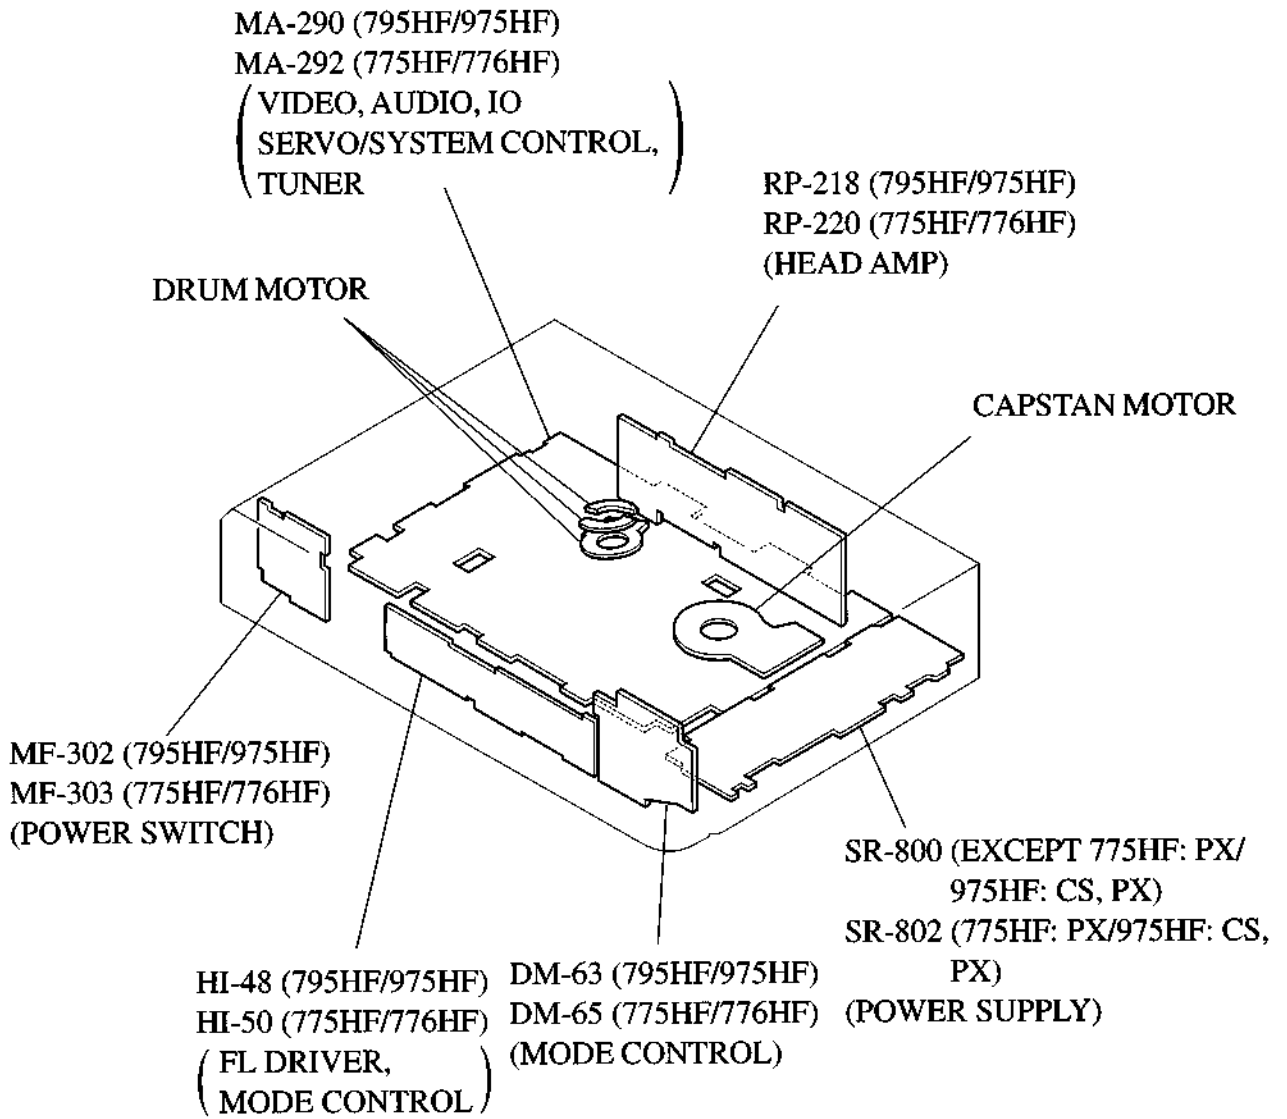


SECTION 3
BLOCK DIAGRAMS


3-1. OVERALL BLOCK DIAGRAM

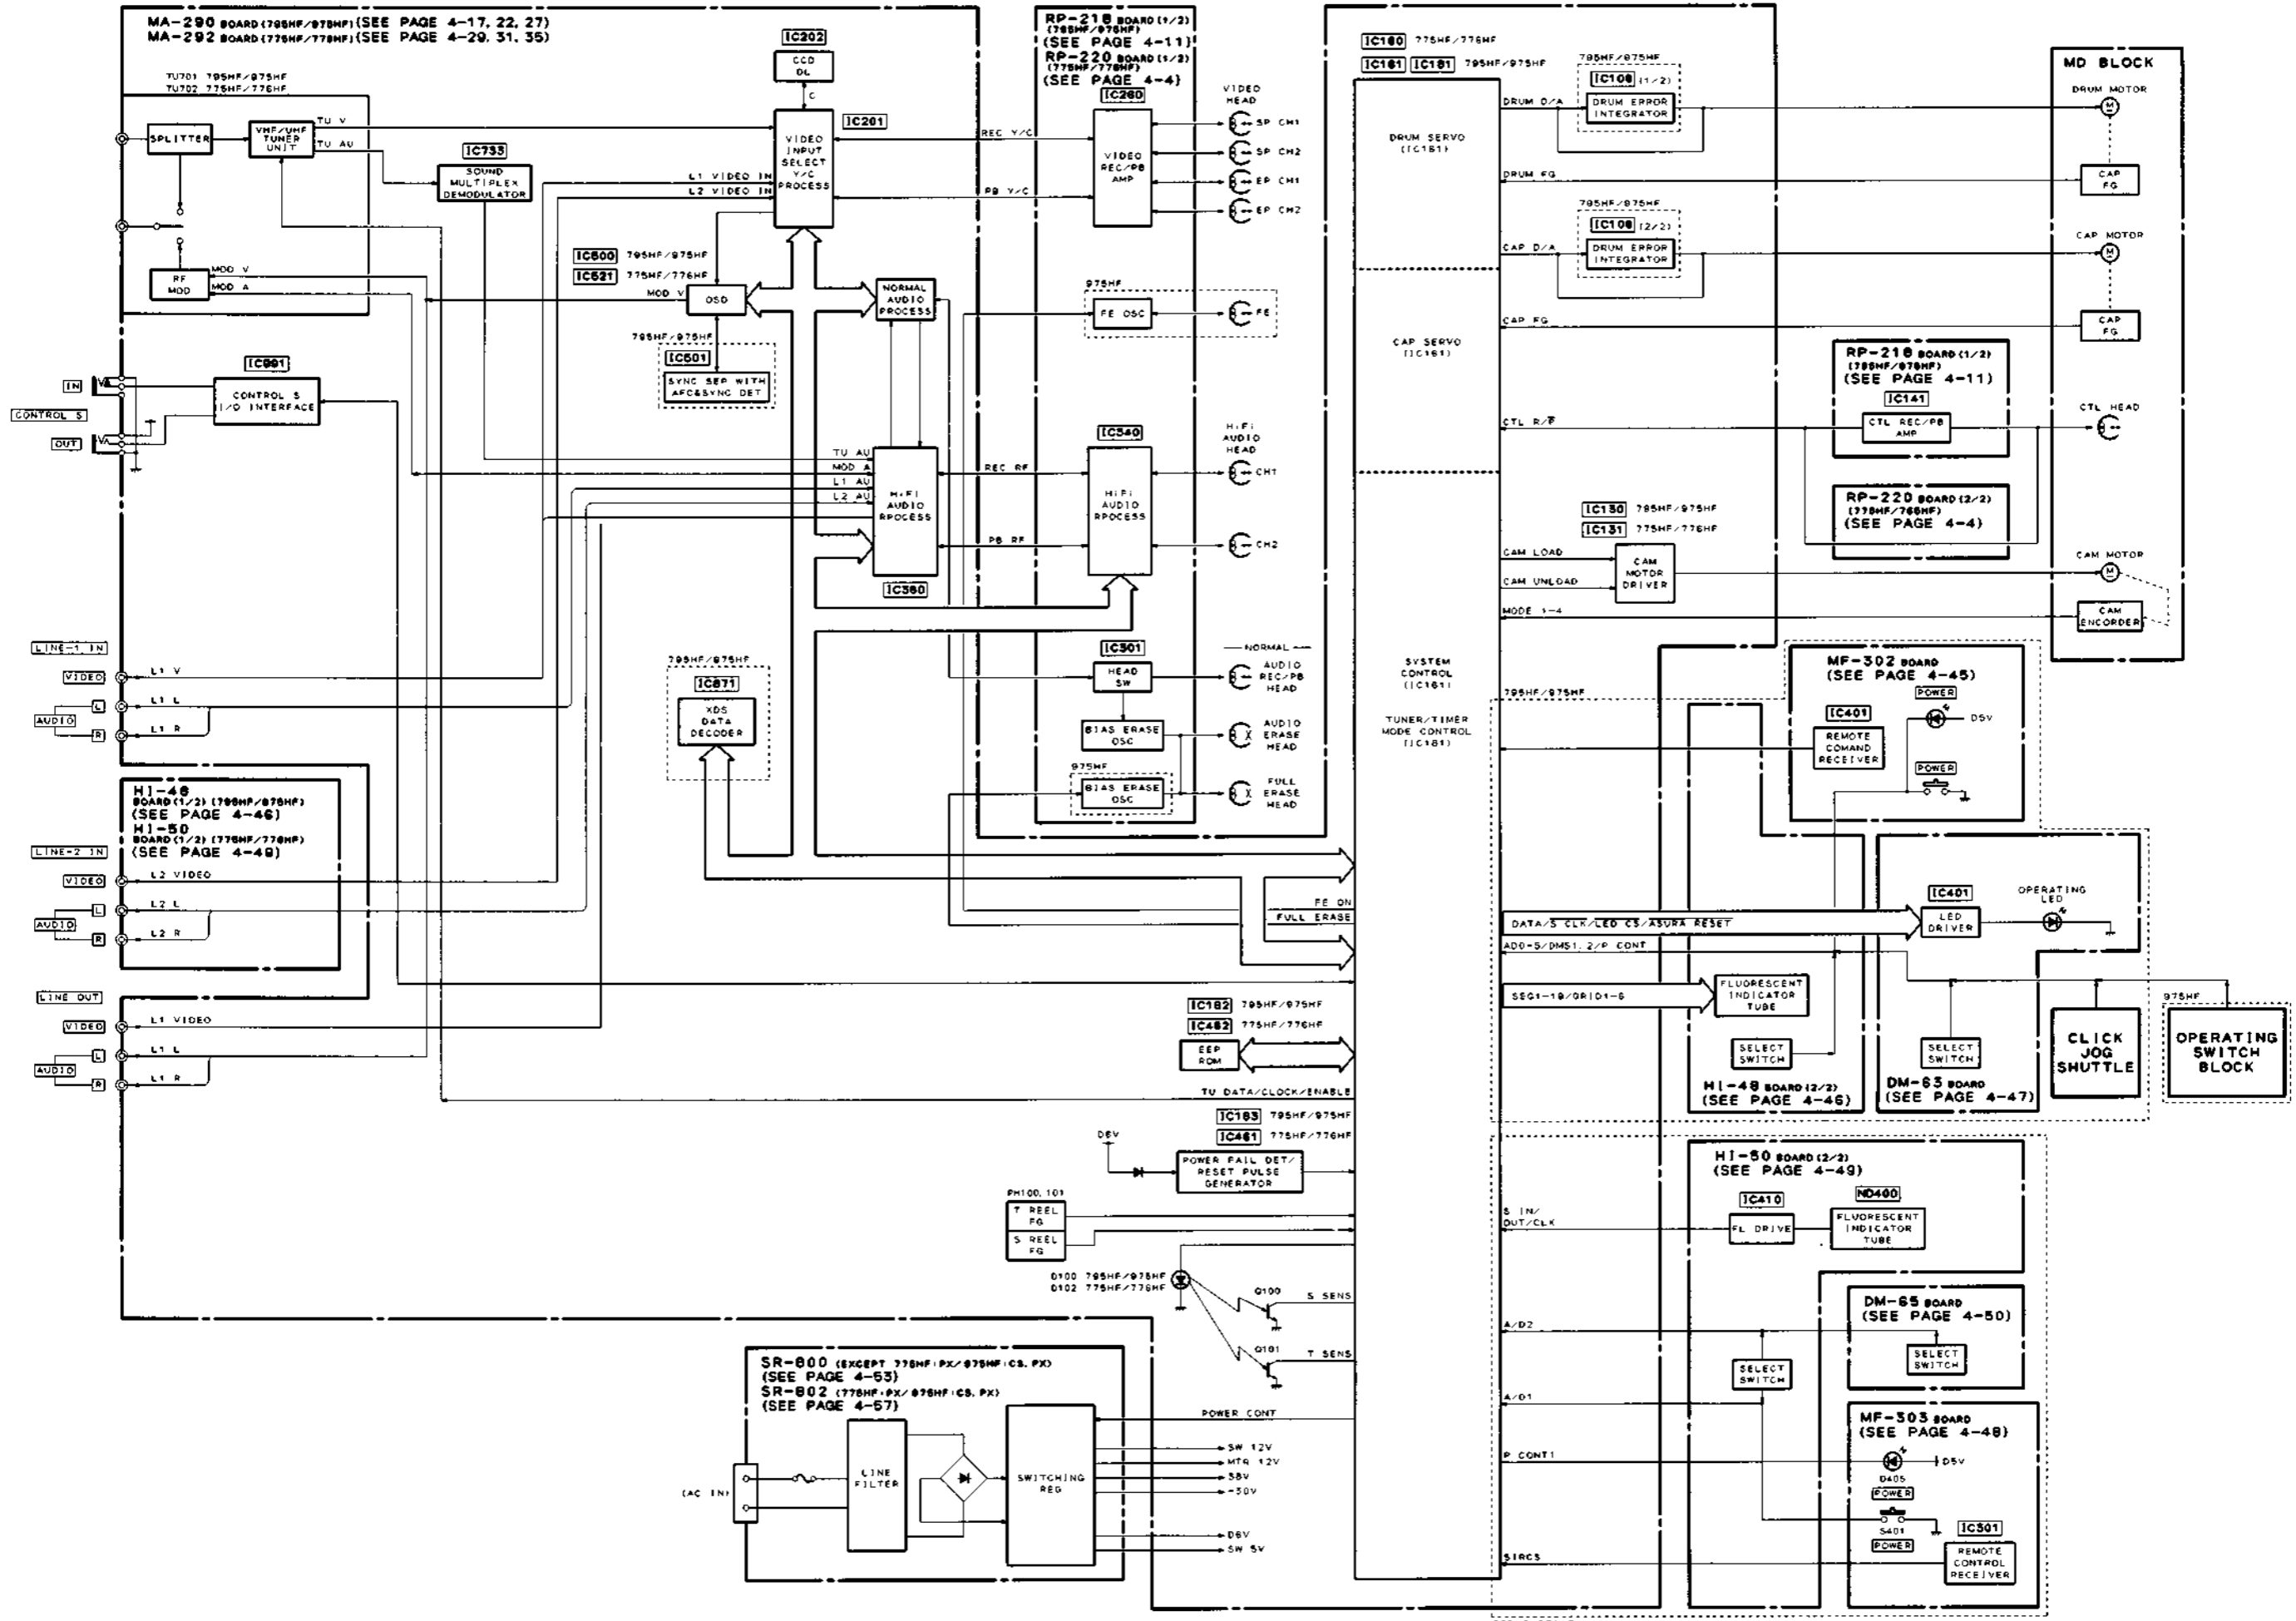


3-2. VIDEO BLOCK DIAGRAM

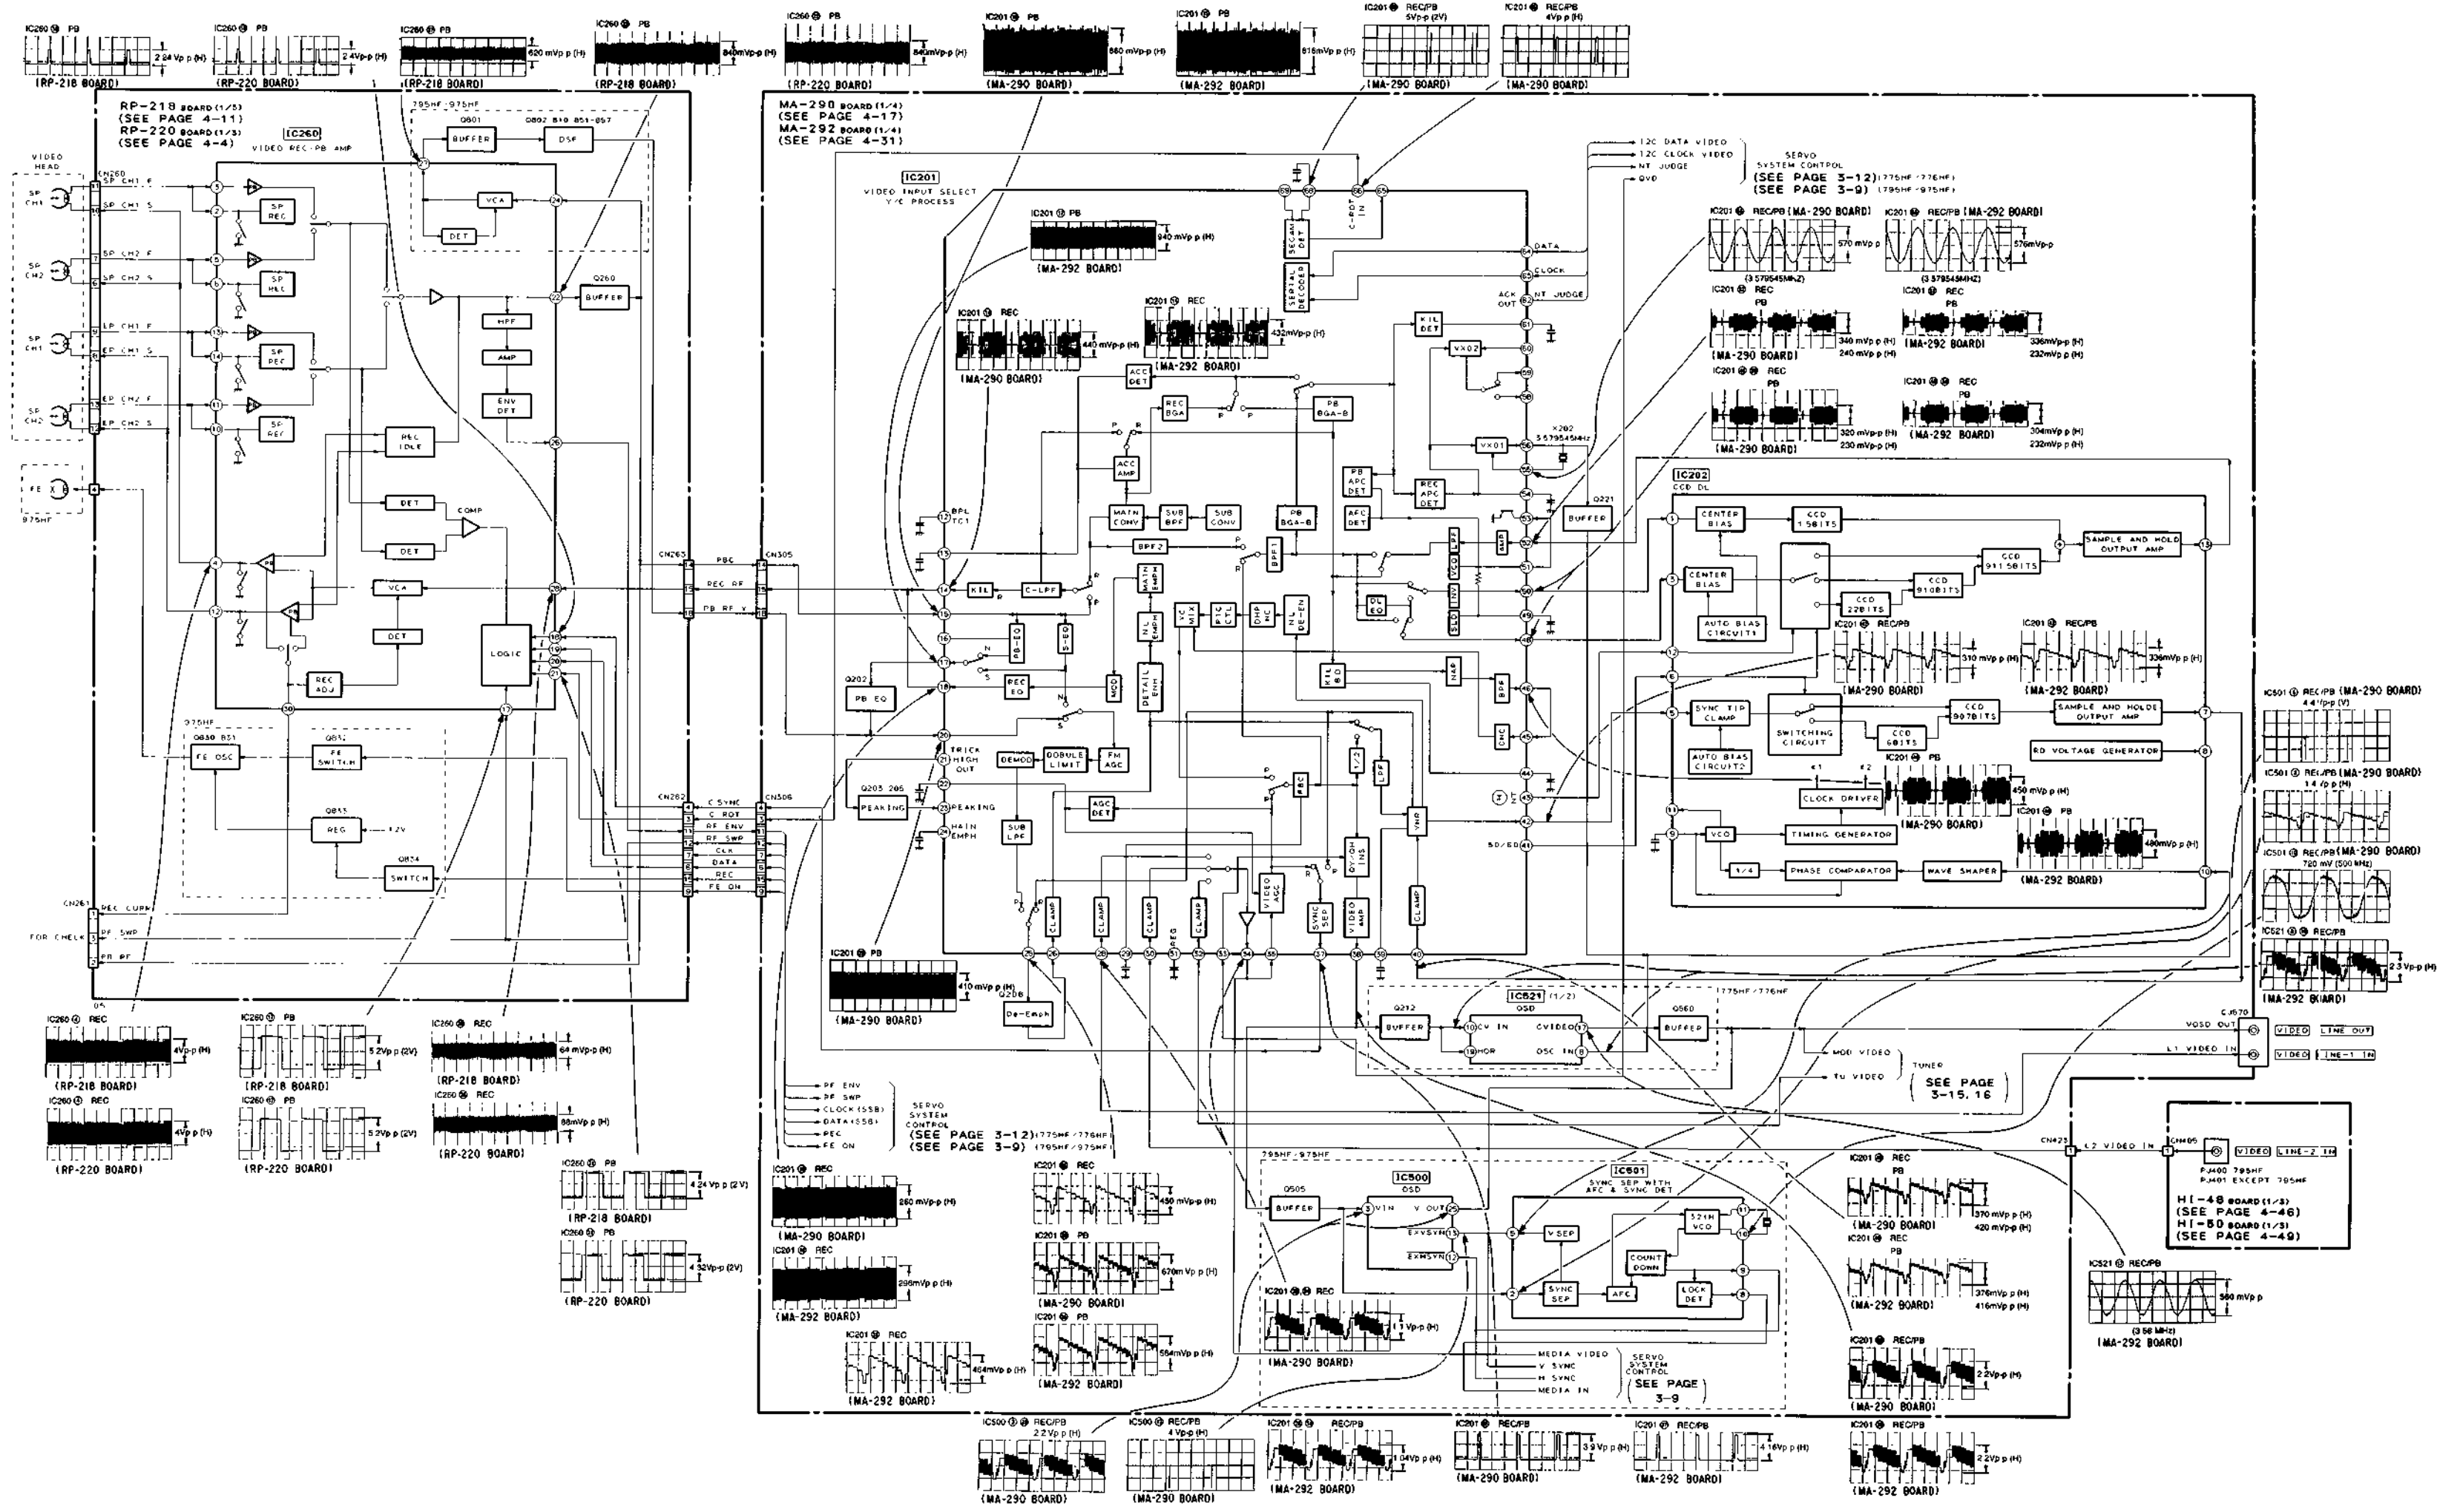


3-3. SERVO/SYSTEM CONTROL BLOCK DIAGRAM (795HF/975HF)

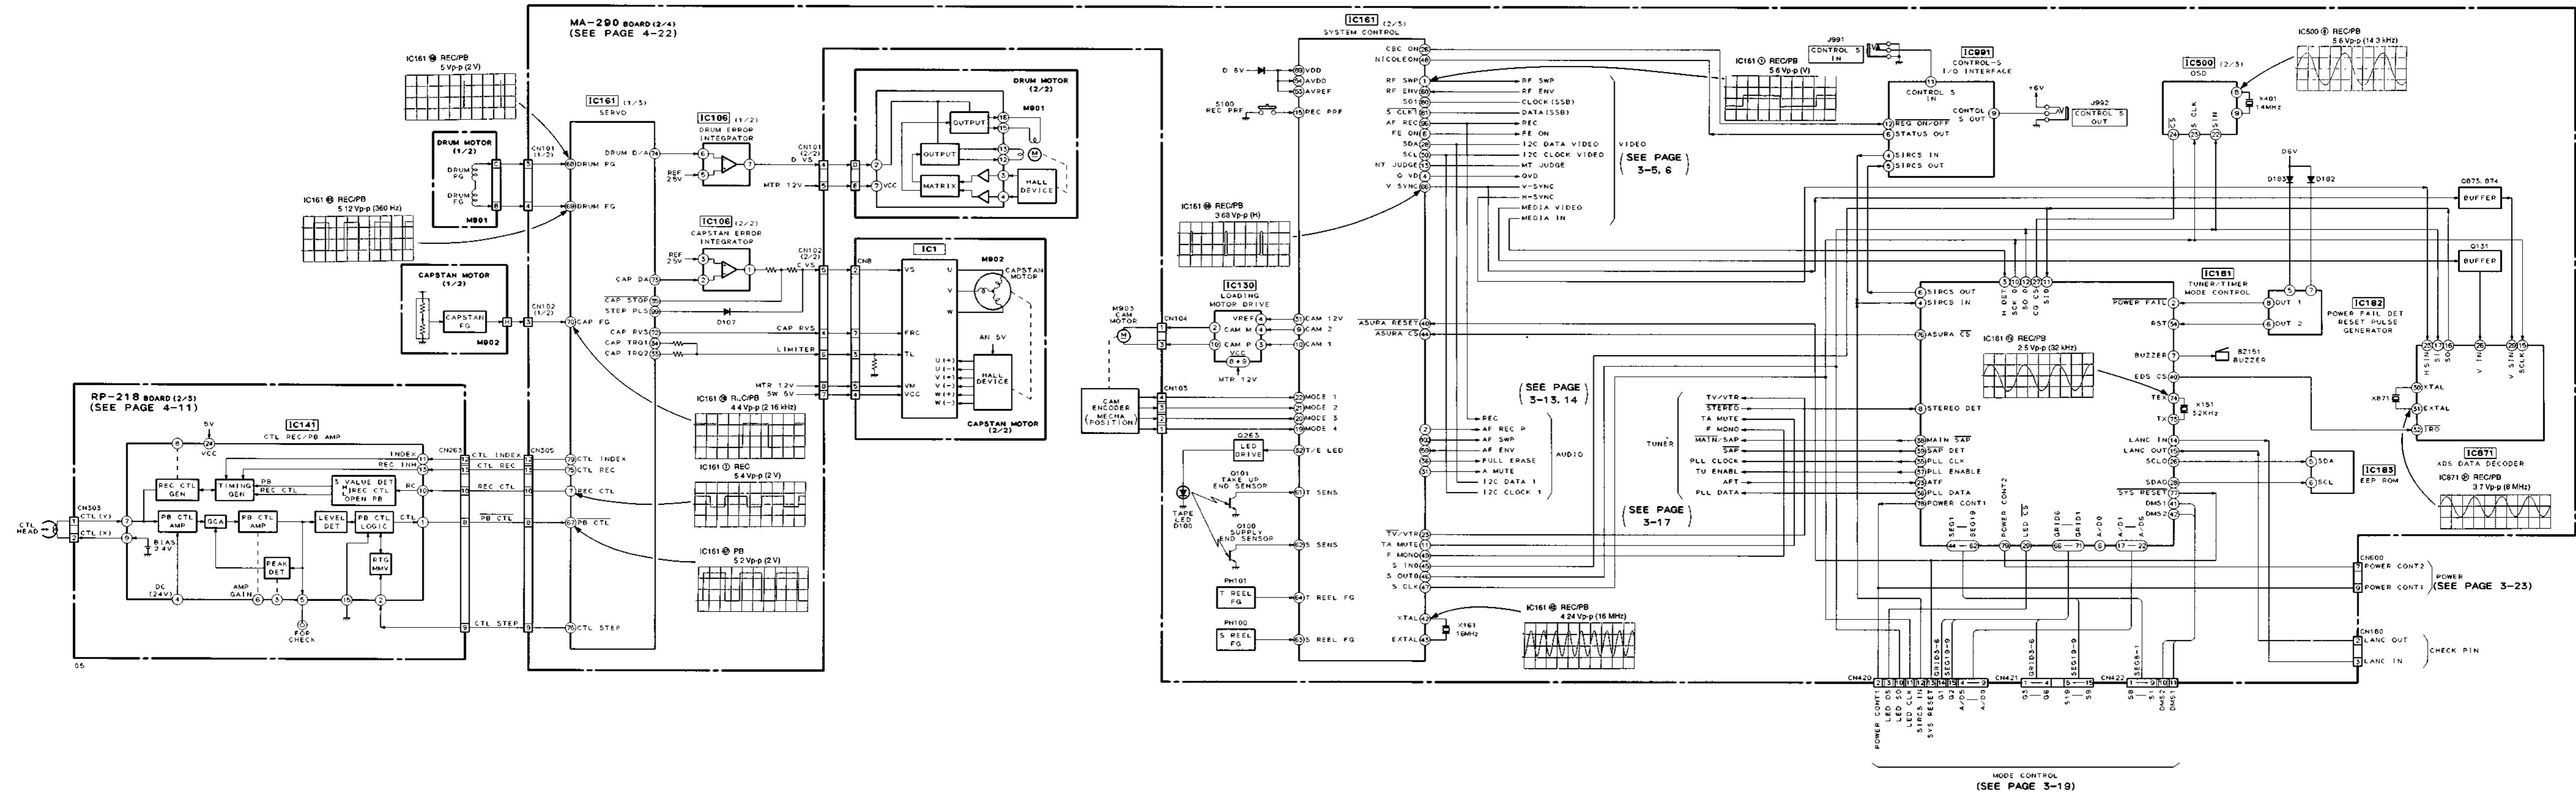


3-4. SERVO/SYSTEM CONTROL BLOCK DIAGRAM
(775HF/776HF)

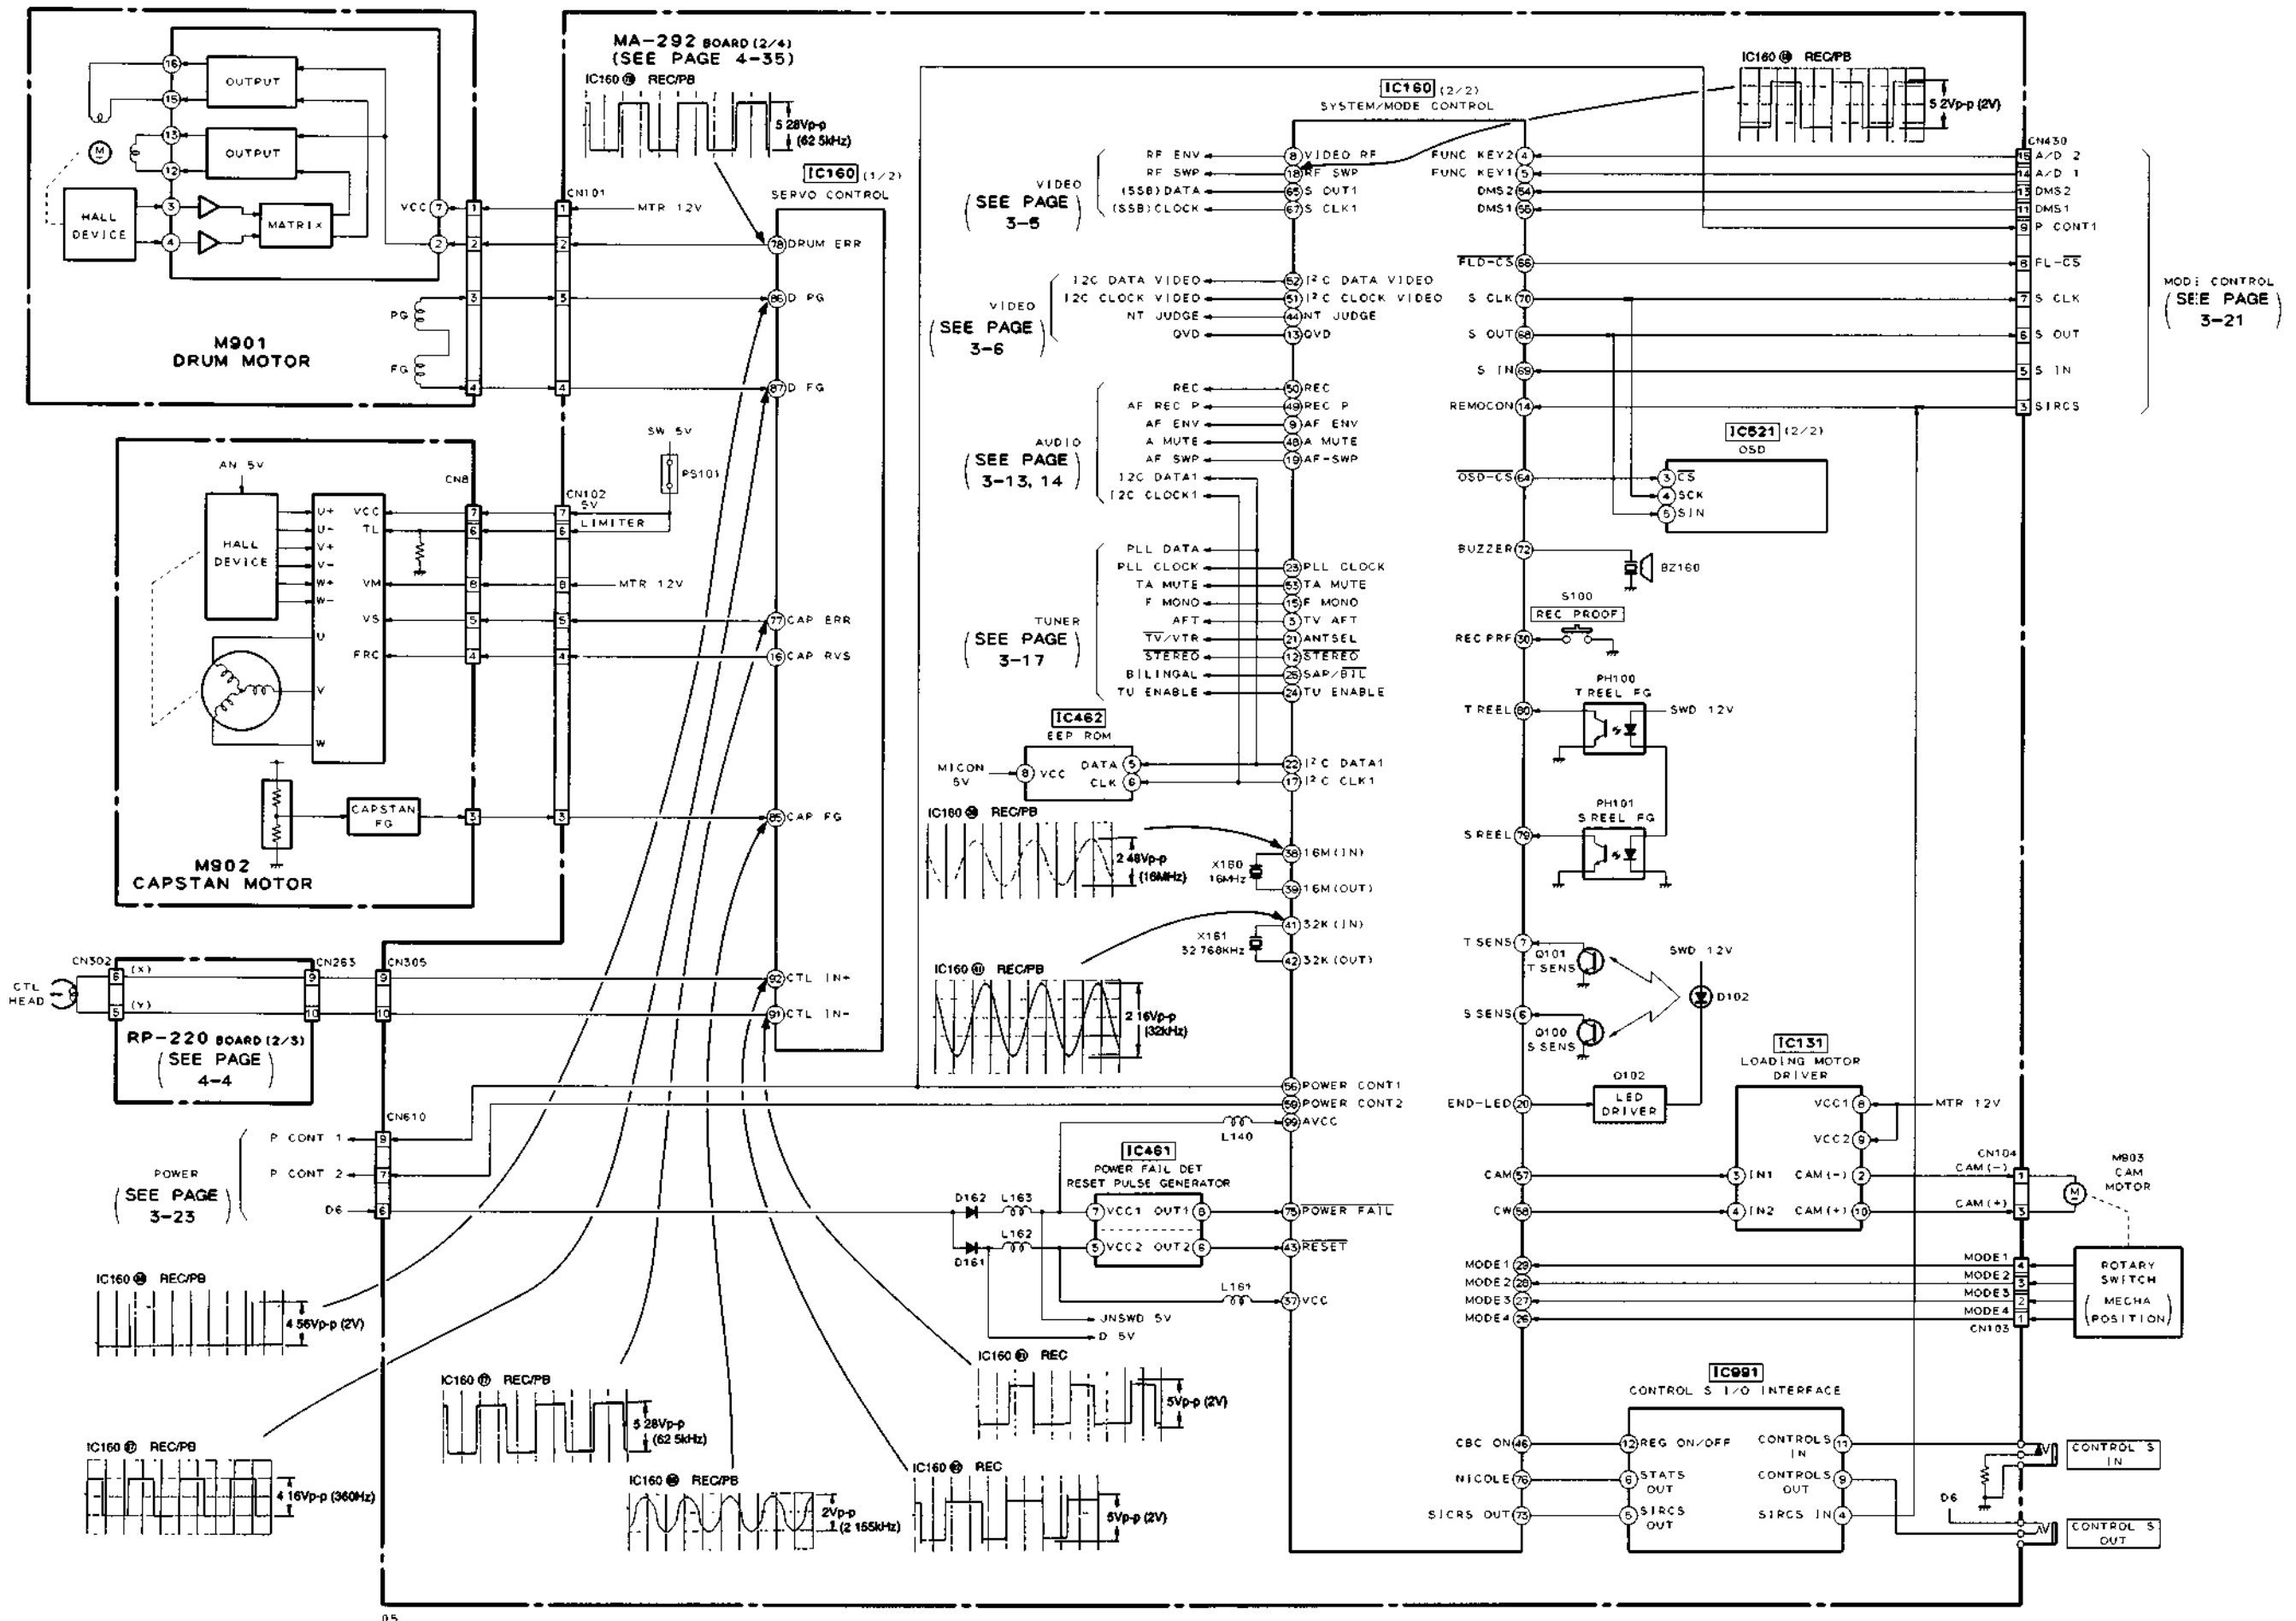

3-5. AUDIO BLOCK DIAGRAM

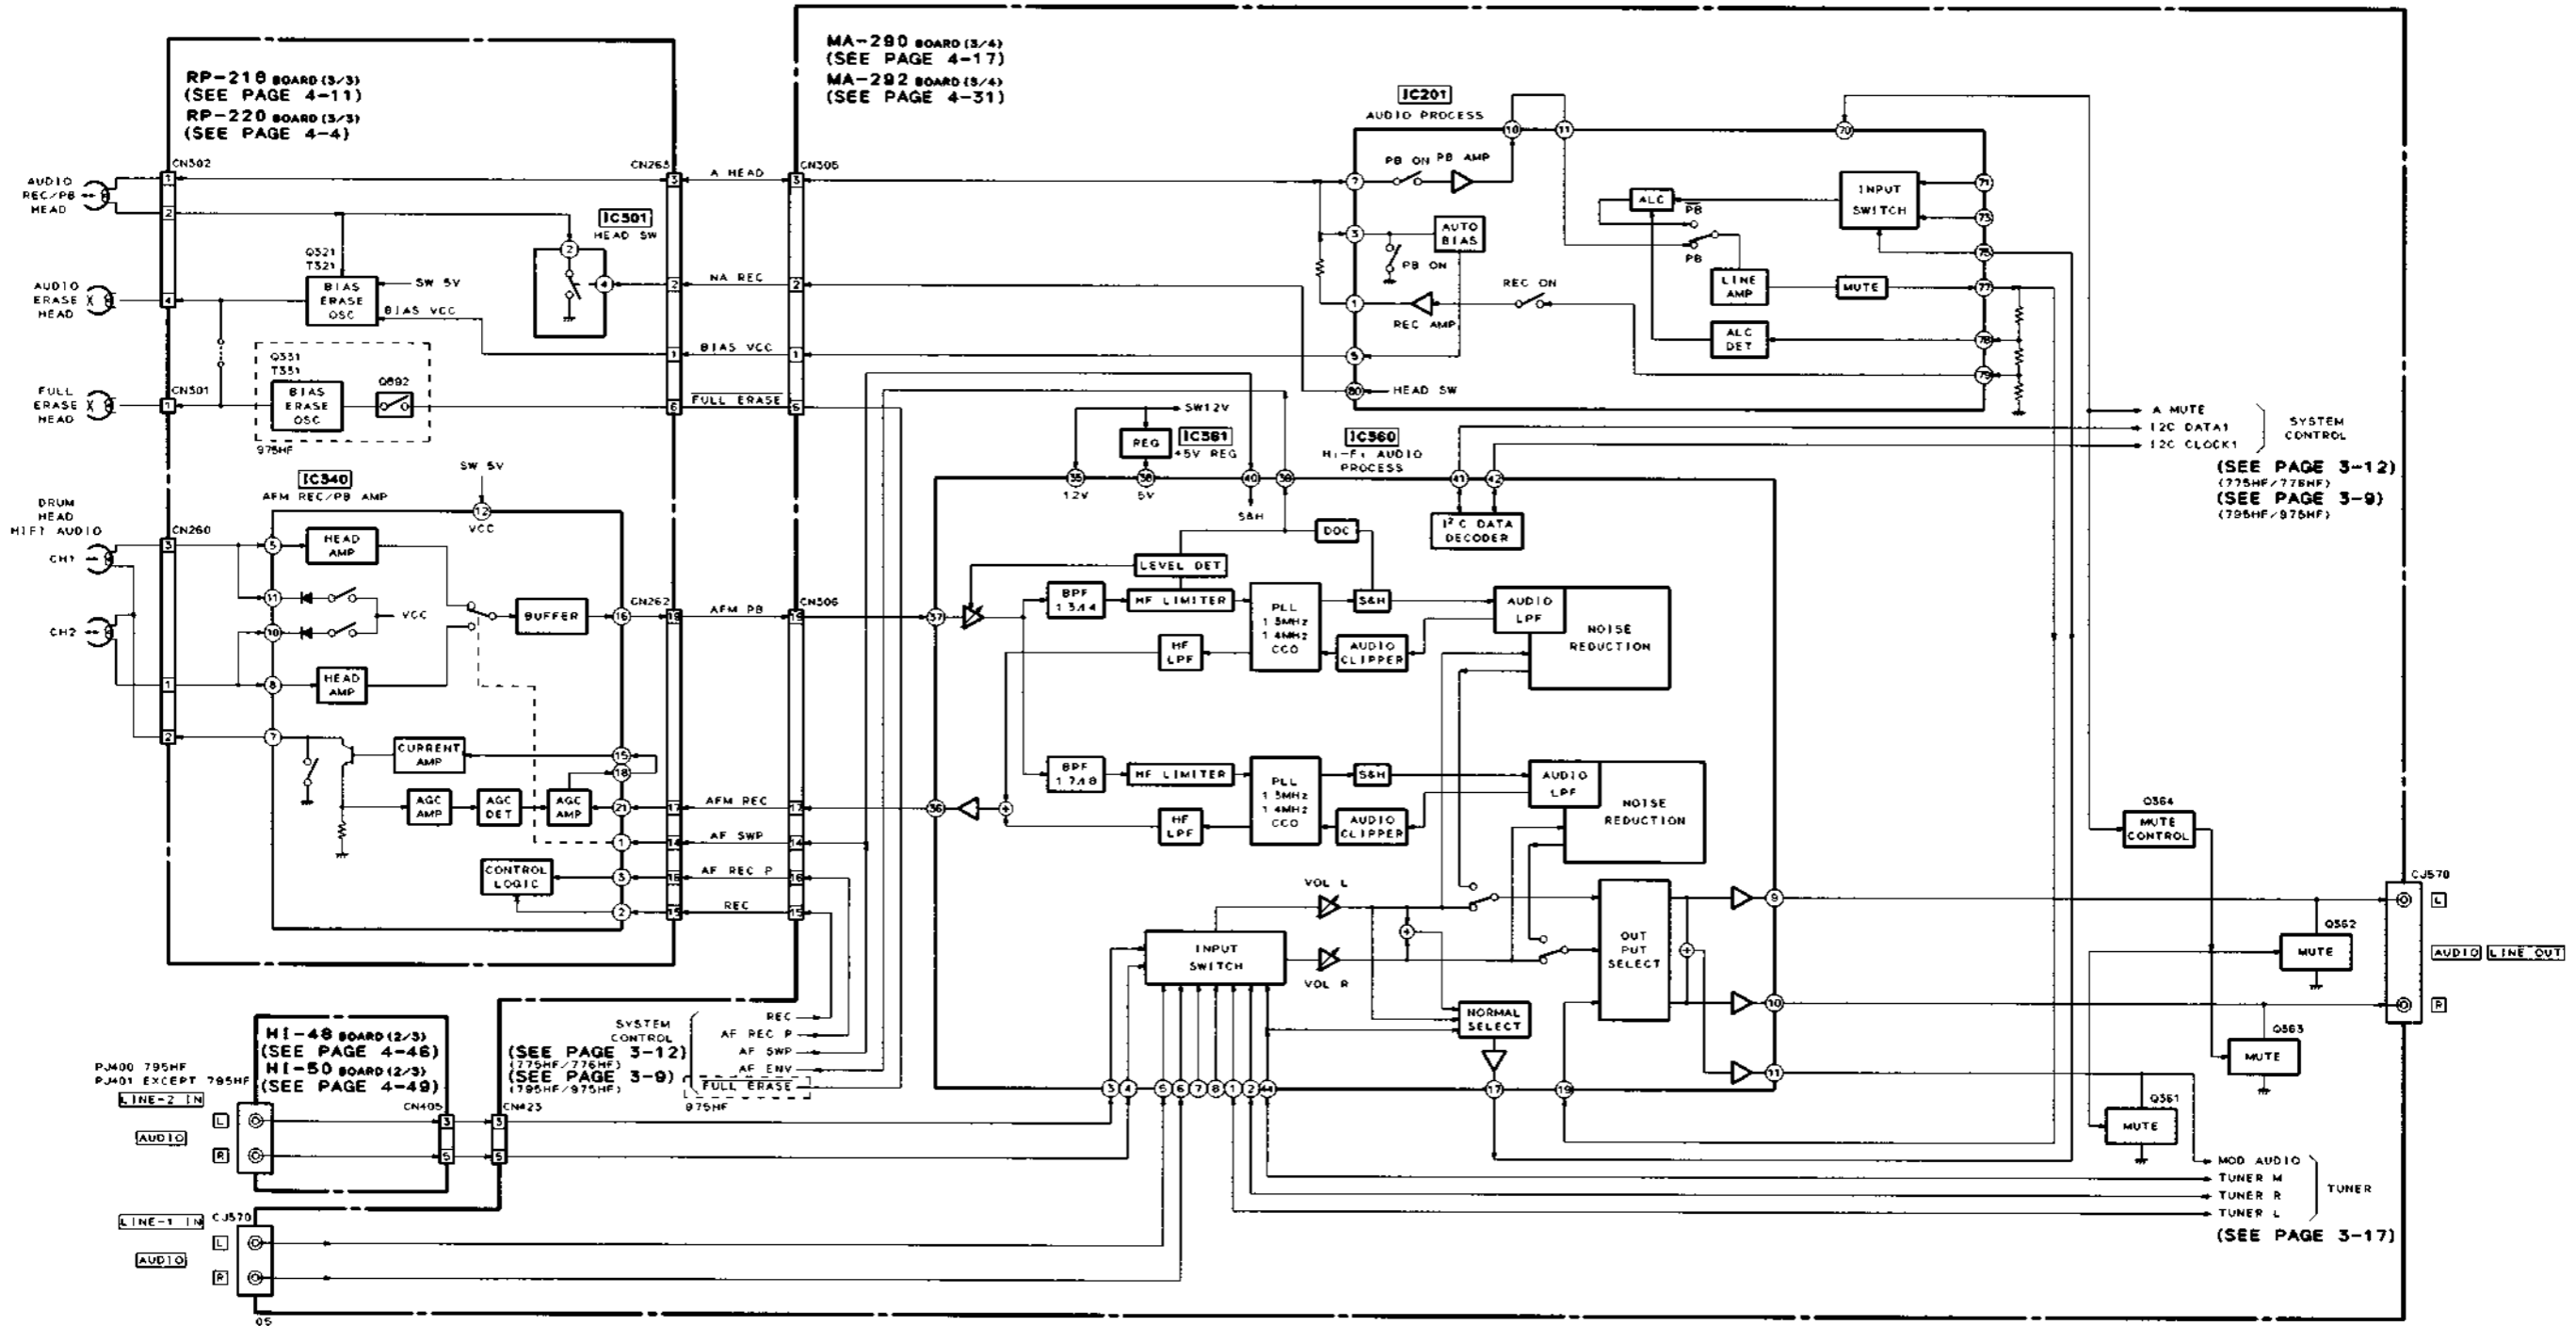


3-6. TUNER BLOCK DIAGRAM

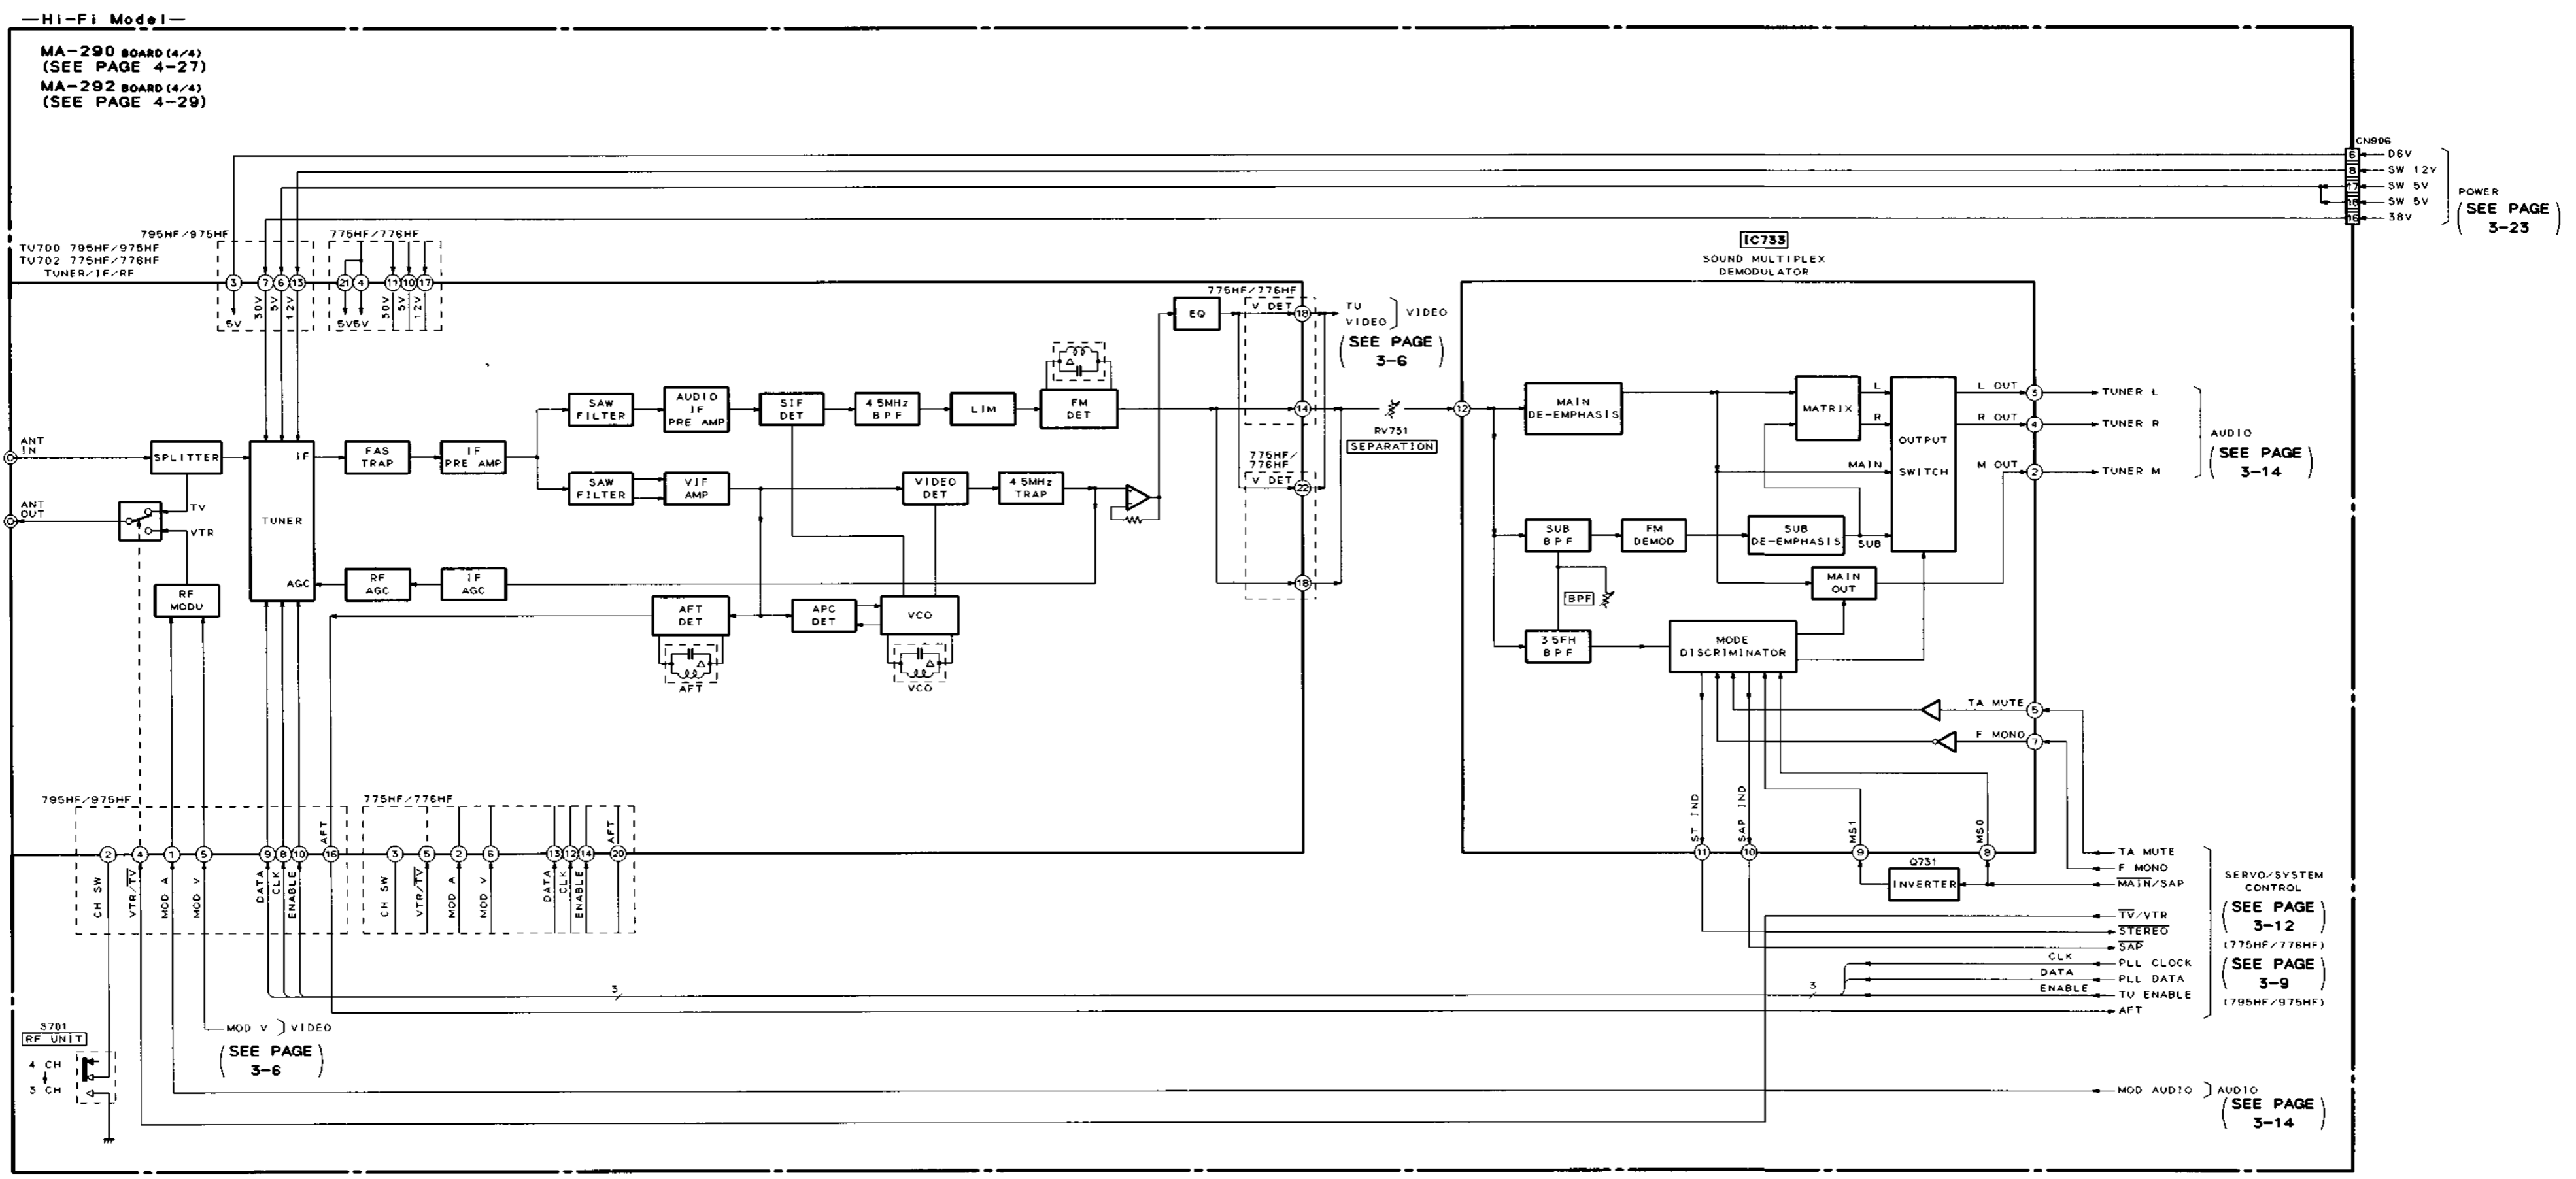

05


3-7. MODE CONTROL BLOCK DIAGRAM
(795HF/975HF)

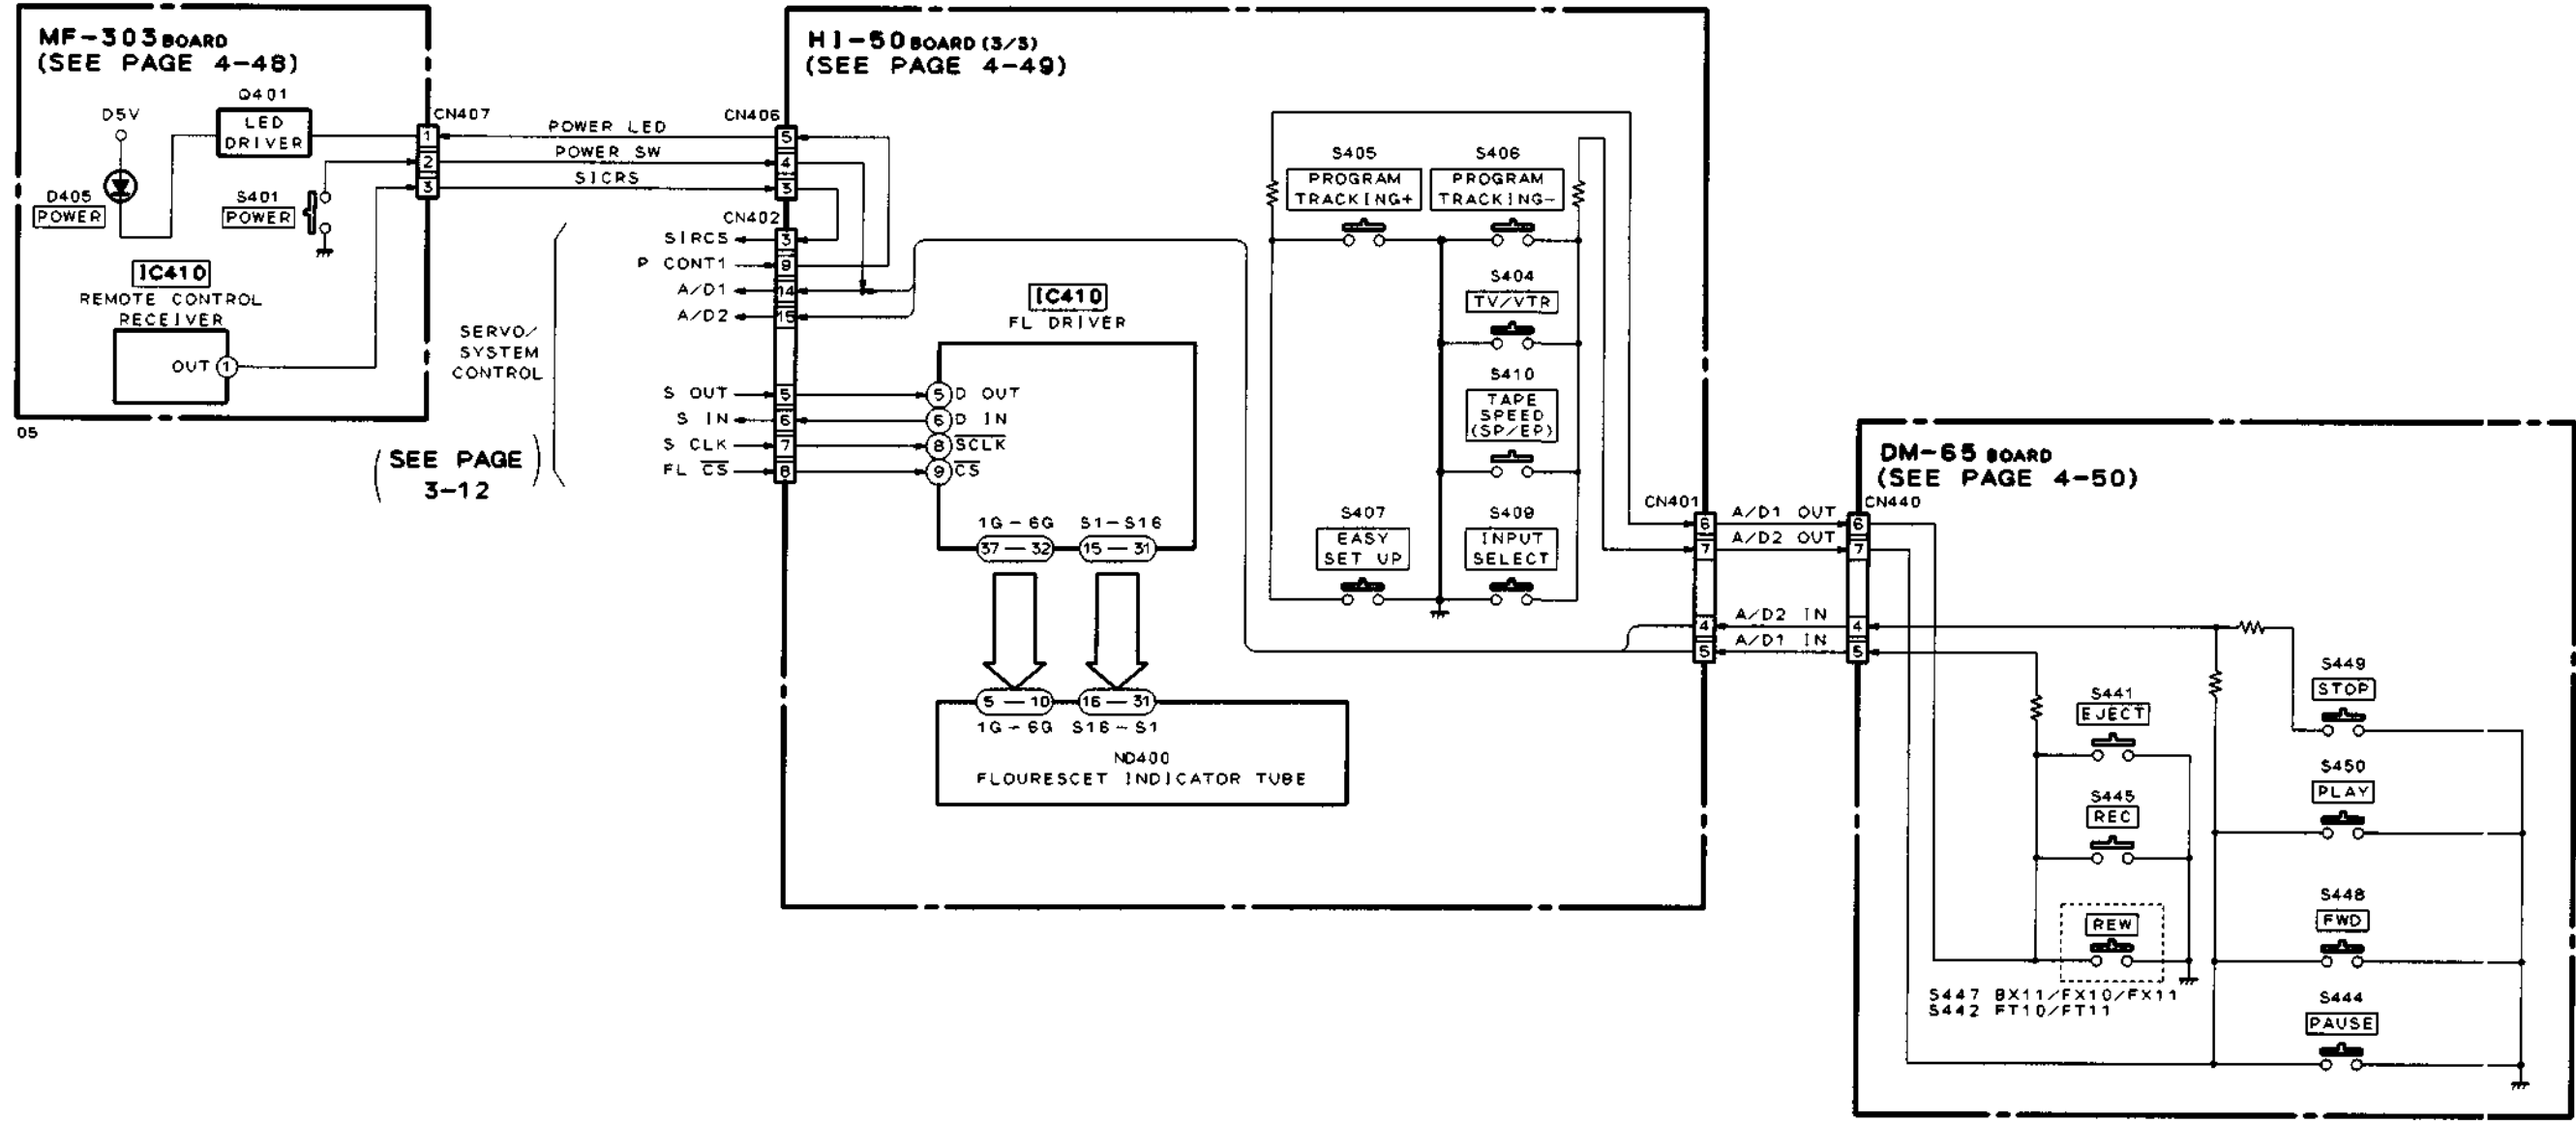


05

(SEE PAGE 3-12)

3-8. MODE CONTROL BLOCK DIAGRAM
(775HF/776HF)

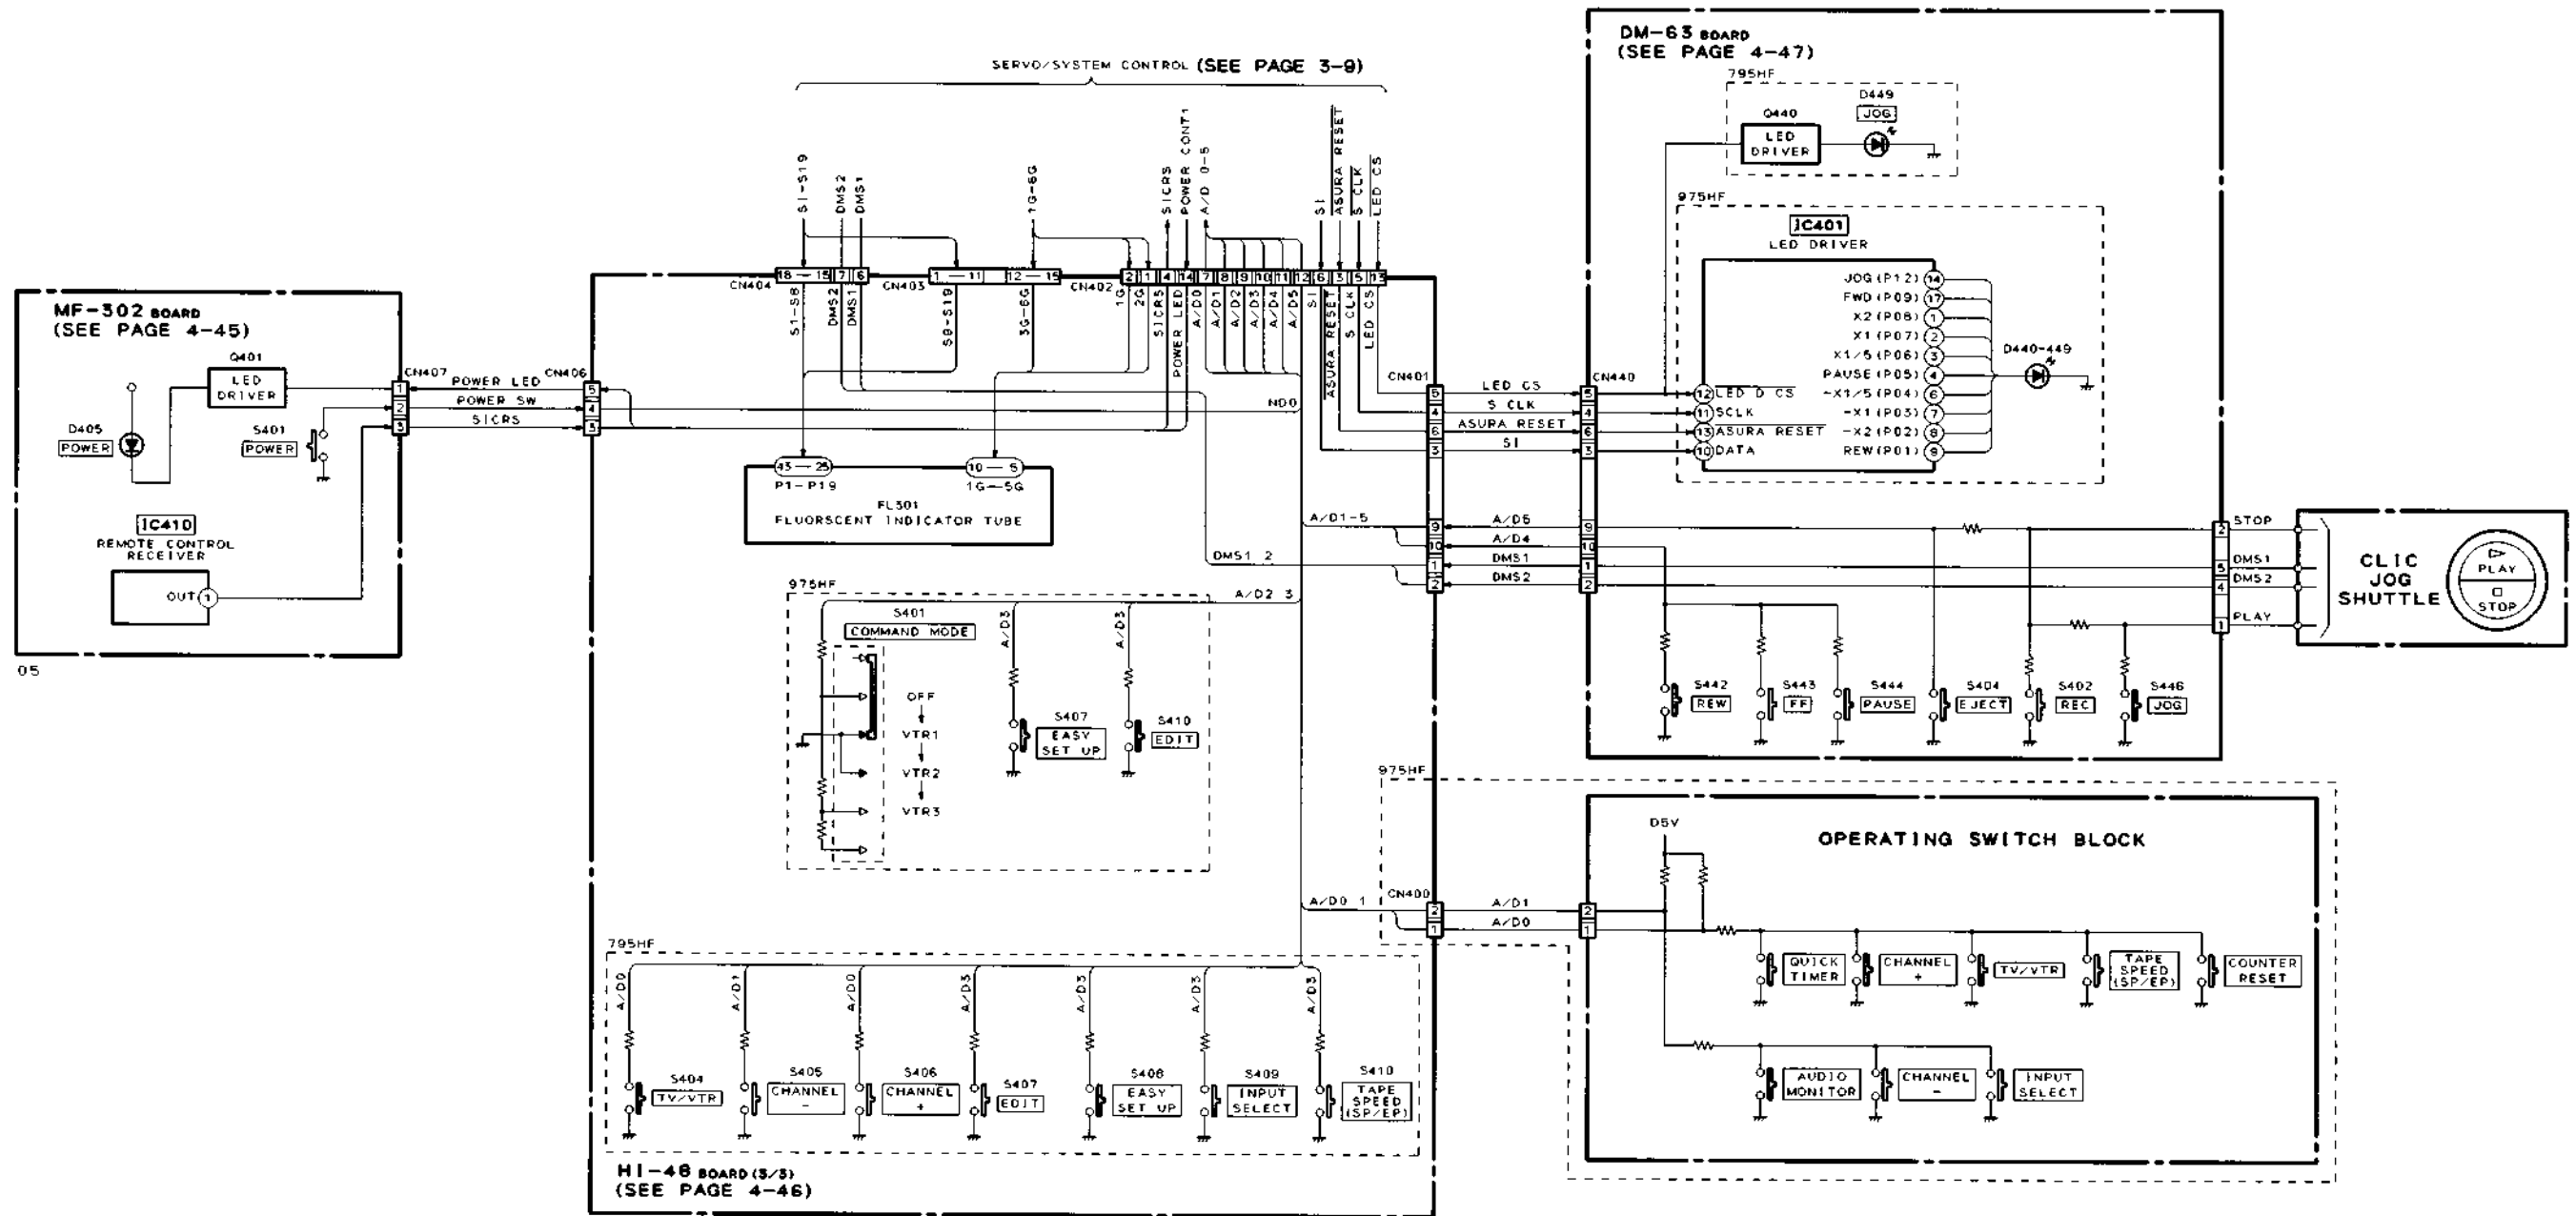

3-9. POWER SUPPLY BLOCK DIAGRAM

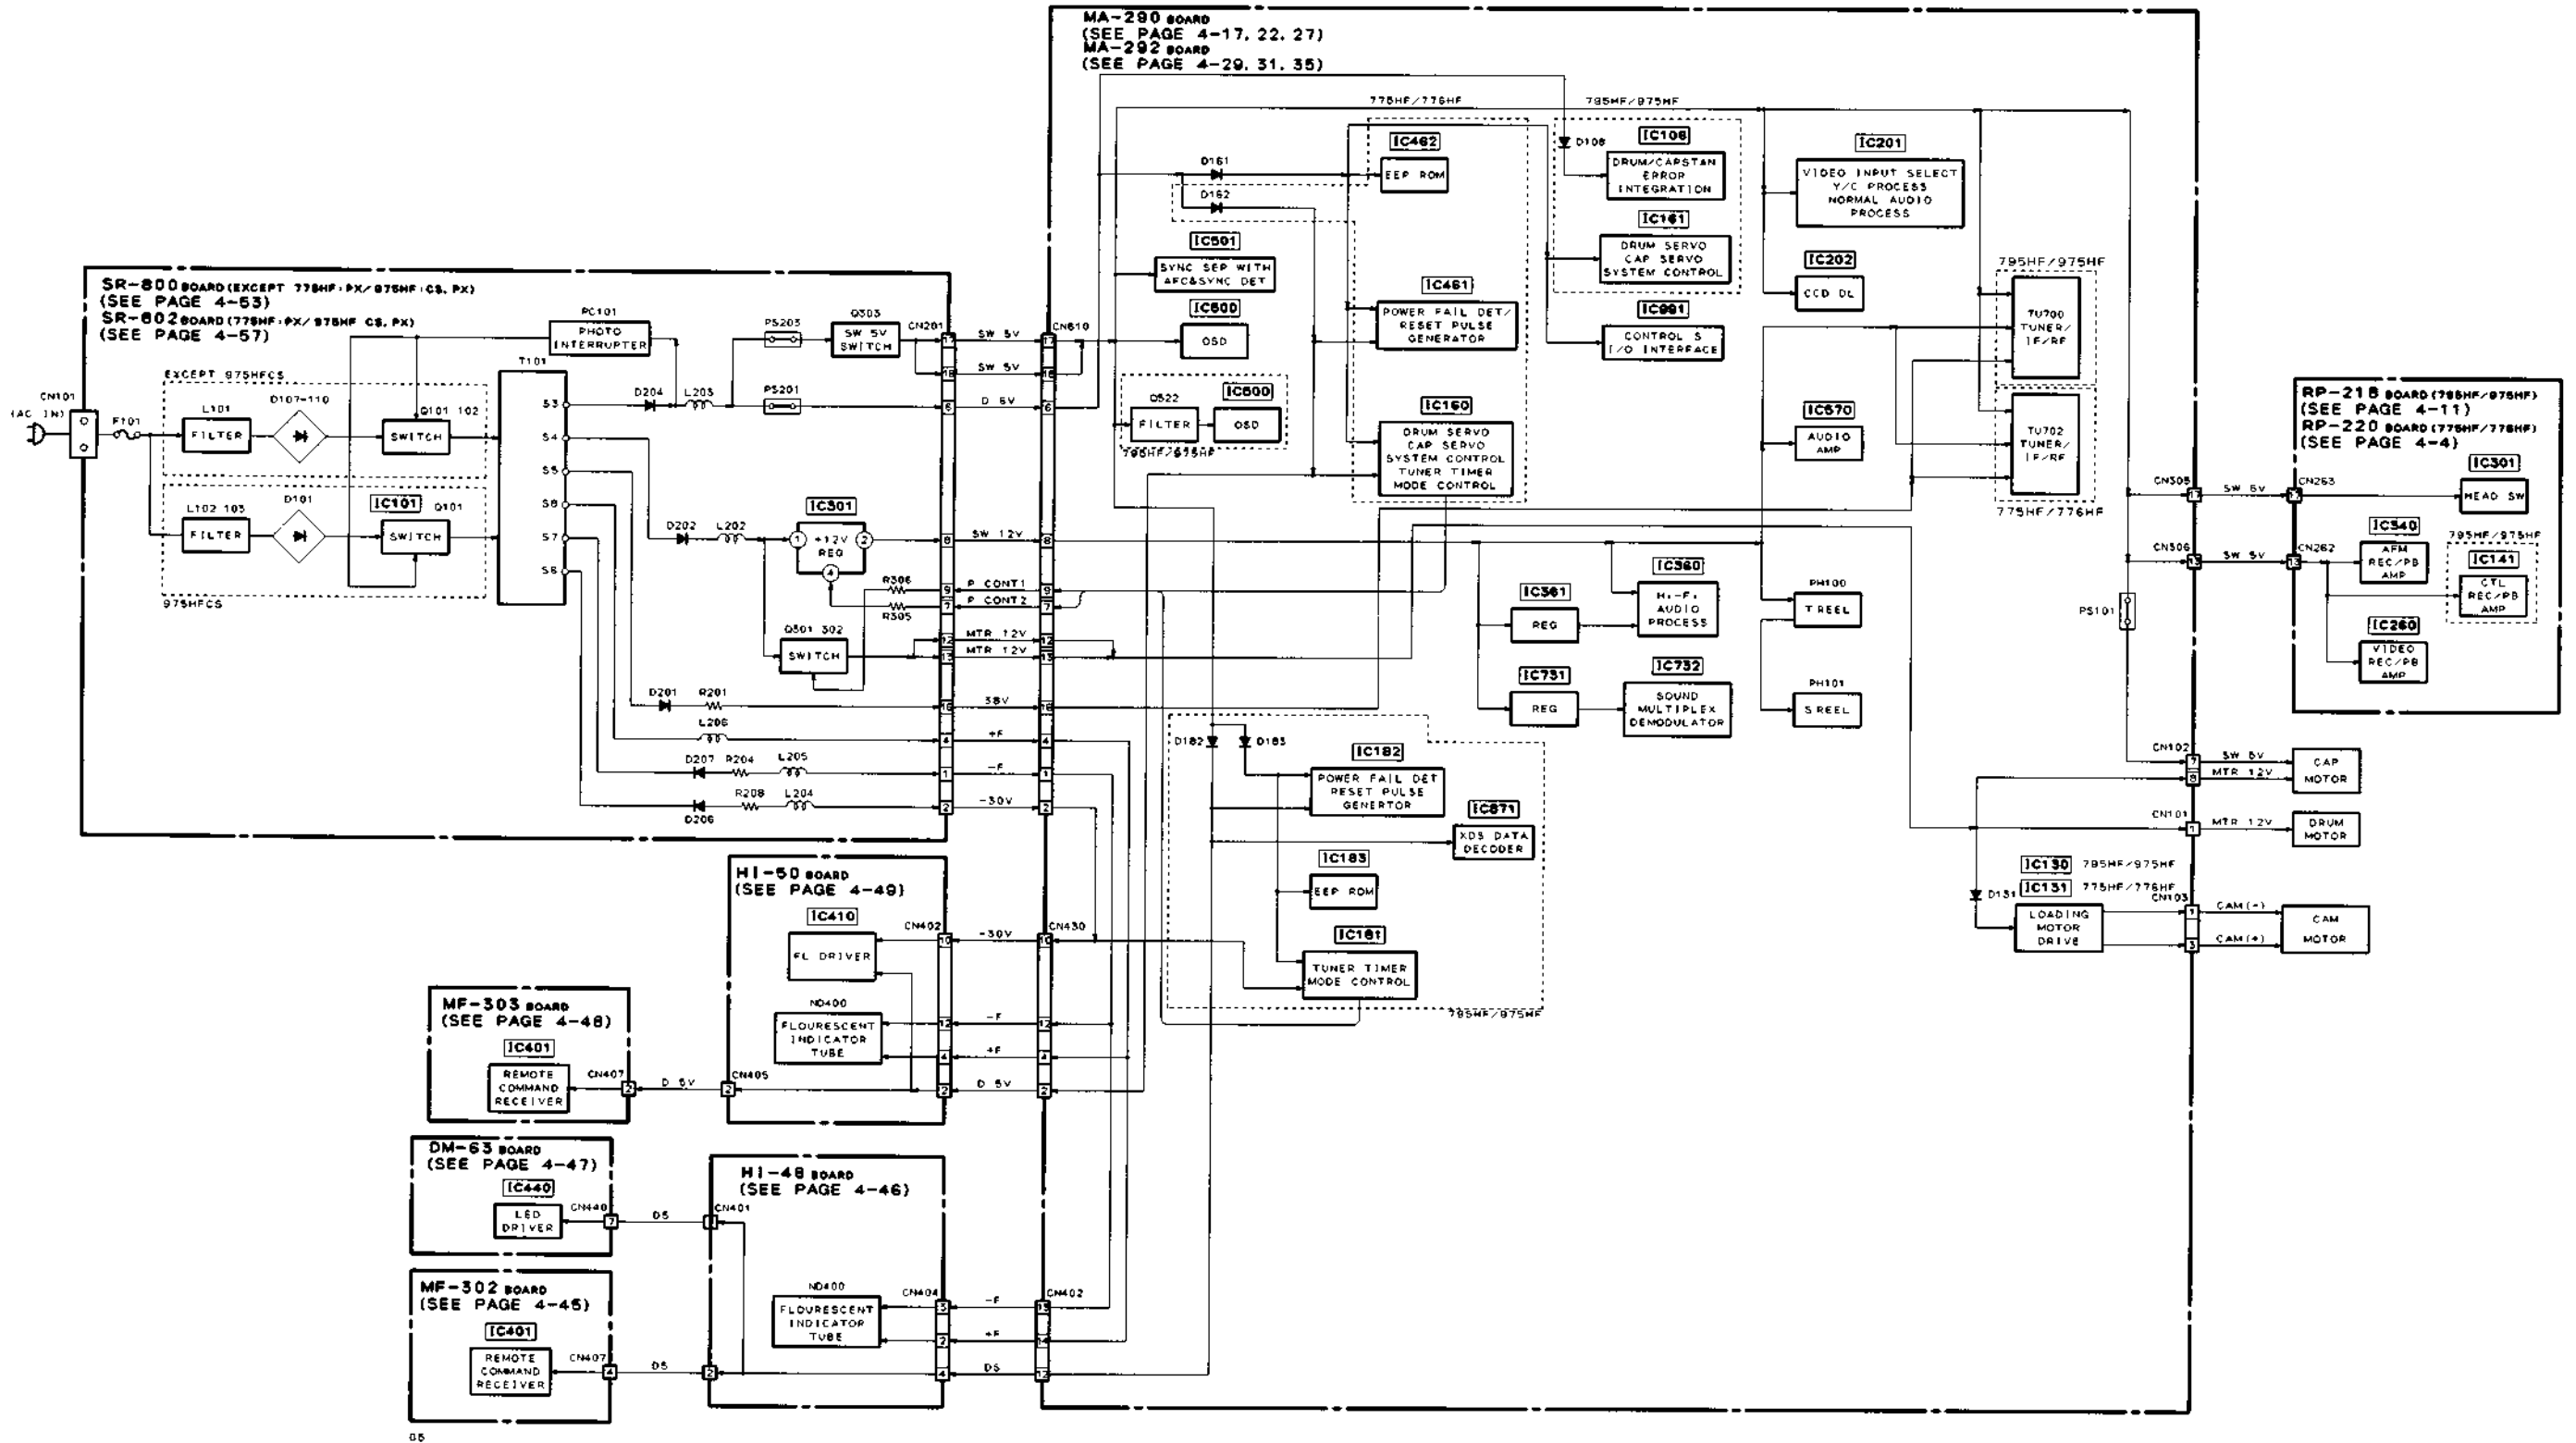

**SECTIONN 4
PRINTED WIRING BOARDS
AND
SCHEMATIC DIAGRAMS**

4-1. FRAME SCHEMATIC DIAGRAM

THIS NOTE IS COMMON FOR PRINTED WIRING BOARDS AND SCHEMATIC DIAGRAMS.
(In addition to this, the necessary note is printed in each block.)

- For printed wiring boards:**
- indicates a lead wire mounted on the component side.
 - indicates a lead wire mounted on the printed side.
 - Through hole
 - Parts mounted on the conductor side
 - Pattern from the side which enables seeing.
 - Pattern on the rear side.*
 - Circled numbers refer to waveforms.

Caution:
Pattern face side: Parts on the pattern face side seen from (Conductor Side) the pattern face are indicated.
Parts face side: Parts on the parts face side seen from (Component Side) the parts face are indicated.


- For schematic Diagram:**
- Caution when replacing chip parts.
New parts must be attached after removal of chip
Be careful not to heat the minus side of tantalum capacitor, because it is damaged by the heat
 - All resistors are in ohms, 1/4 W (Chip resistors : 1/10 W) unless otherwise specified.
kΩ, 1000Ω, MΩ, 1000kΩ
 - All capacitors are in μF unless otherwise noted pF μF 50V or less are not indicated except for electrolytics and tantalums
 - All variable and adjustable resistors have characteristic curve B, unless otherwise noted
 - ⚡ : nonflammable resistor
 - ⚡ : fusible resistor
 - : panel designation.
 - Δ : internal component
 - : adjustment for repair.*
 - B+ Line *
 - - - B- Line *
 - ⇒ : IN/OUT direction of B line (+, -).*
 - Circled numbers refer to waveforms *
 - Voltages are dc between measurement point.*
 - Readings are taken with a color-bar signal input.*
 - Readings are taken with a digital multimeter (DC 10MΩ).*
 - Voltage variations may be noted due to normal production tolerances *

Note:
The components identified by mark Δ or dotted line with mark Δ are critical for safety.
Remplace only with part number specified.








Note:
Les composants identifiés par une marque Δ sont critiques pour la sécurité.
Ne les remplacer que par une pièce portant le numéro spécifié.

When indicating parts by reference number, please include the board name.

* : indicated by the color red.

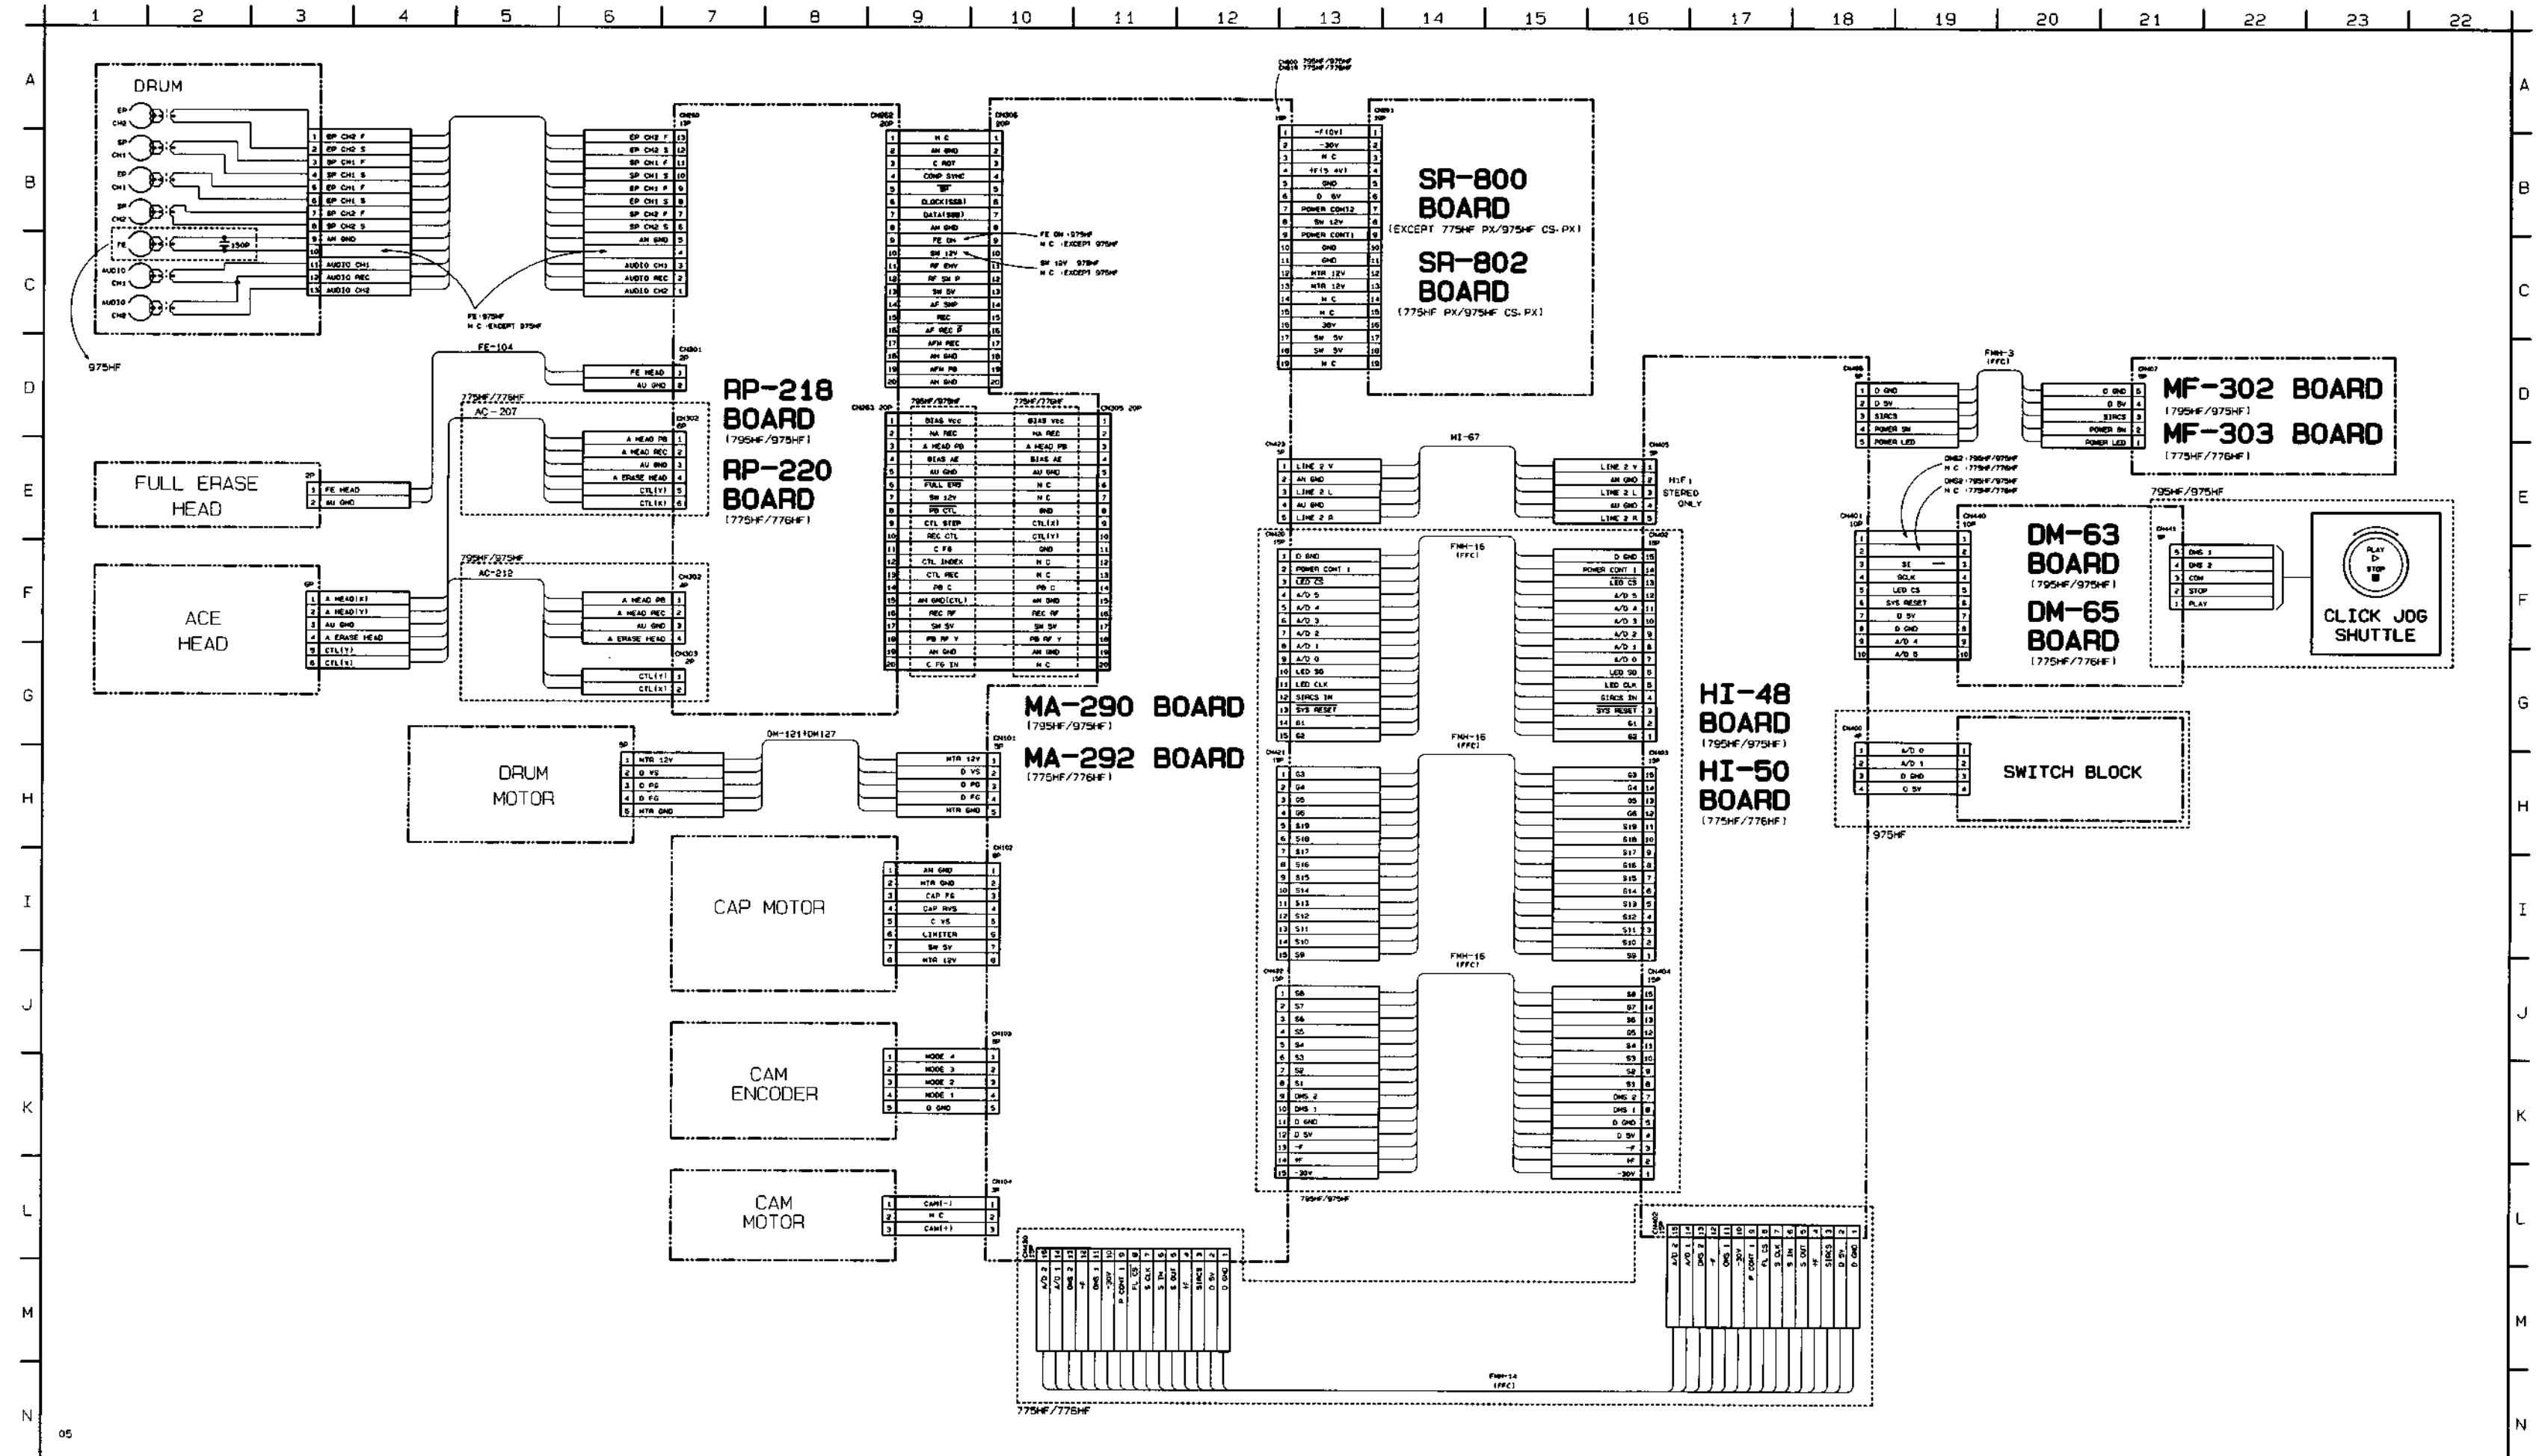

• Waveforms
 ① IC260 ② REC
 ③ IC260 ③ REC
 ④ IC260 ④ PB
 ⑤ IC260 ⑤ PB
 ⑥ IC260 ⑥ PB
 ⑦ IC260 ⑦ PB
 ⑧ IC260 ⑧ PB

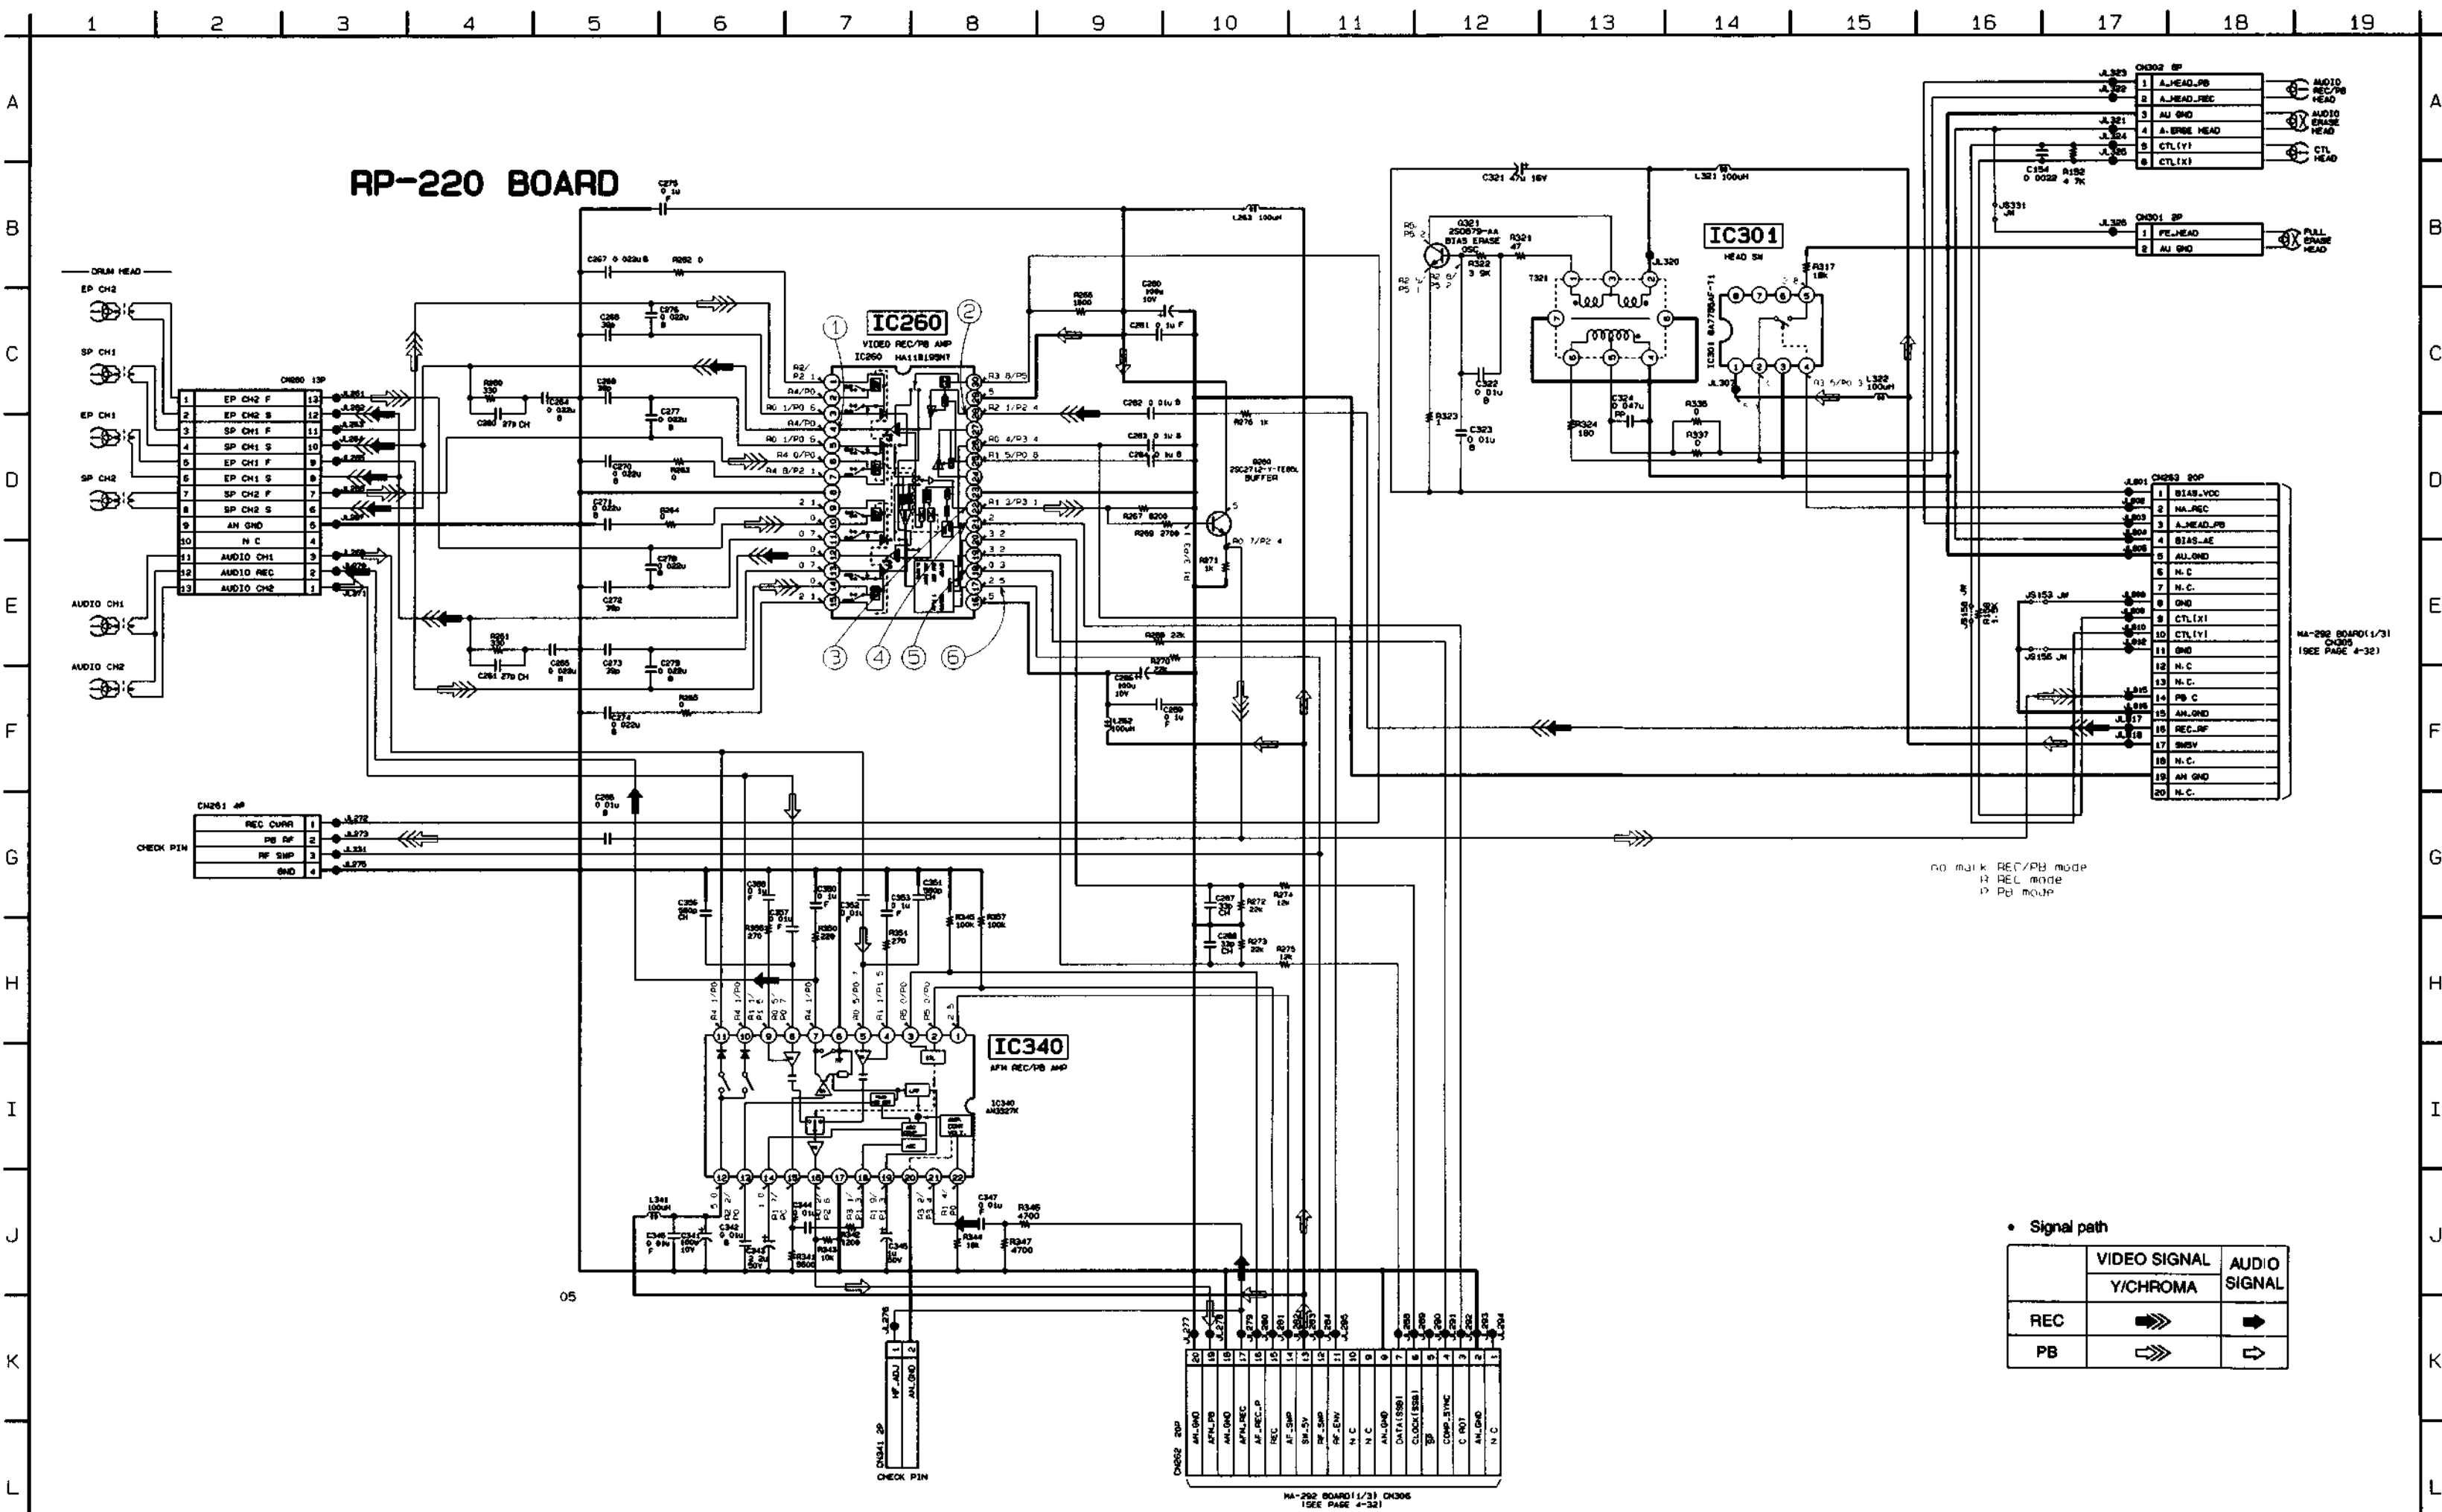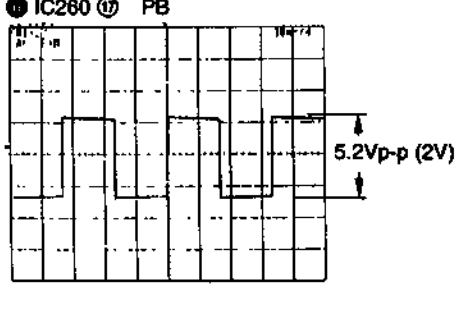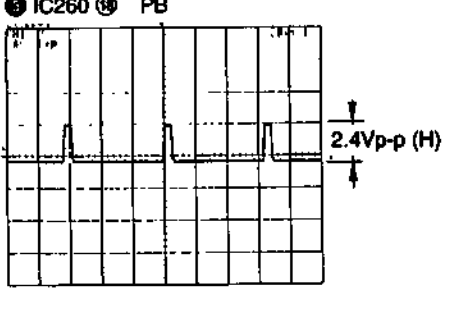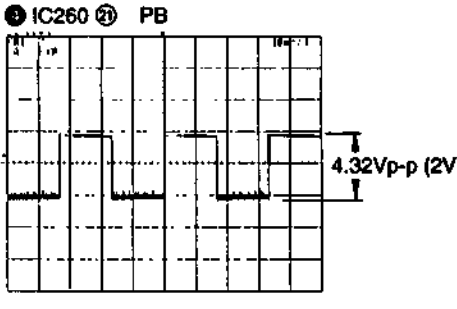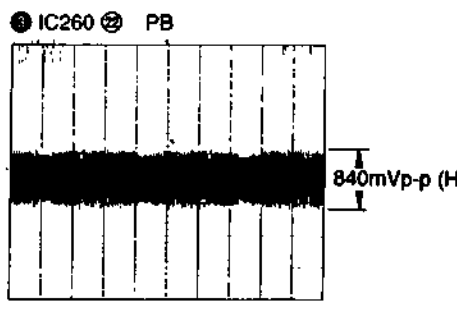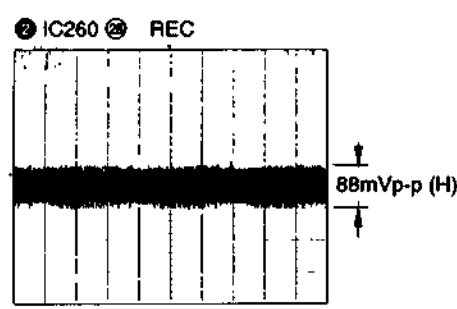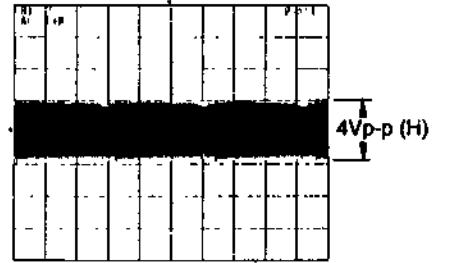

• Signal path


	VIDEO SIGNAL Y/CHROMA	AUDIO SIGNAL
REC	➡➡➡	➡
PB	➡➡➡	➡

RP-220 (HEAD AMP) PRINTED WIRING BOARD (SLV-775HF/776HF)

- Ref. No.: RP-220 board; 1,000 series -

There are few cases that the part isn't mounted in this model is printed on this diagram.

RP-220 BOARD

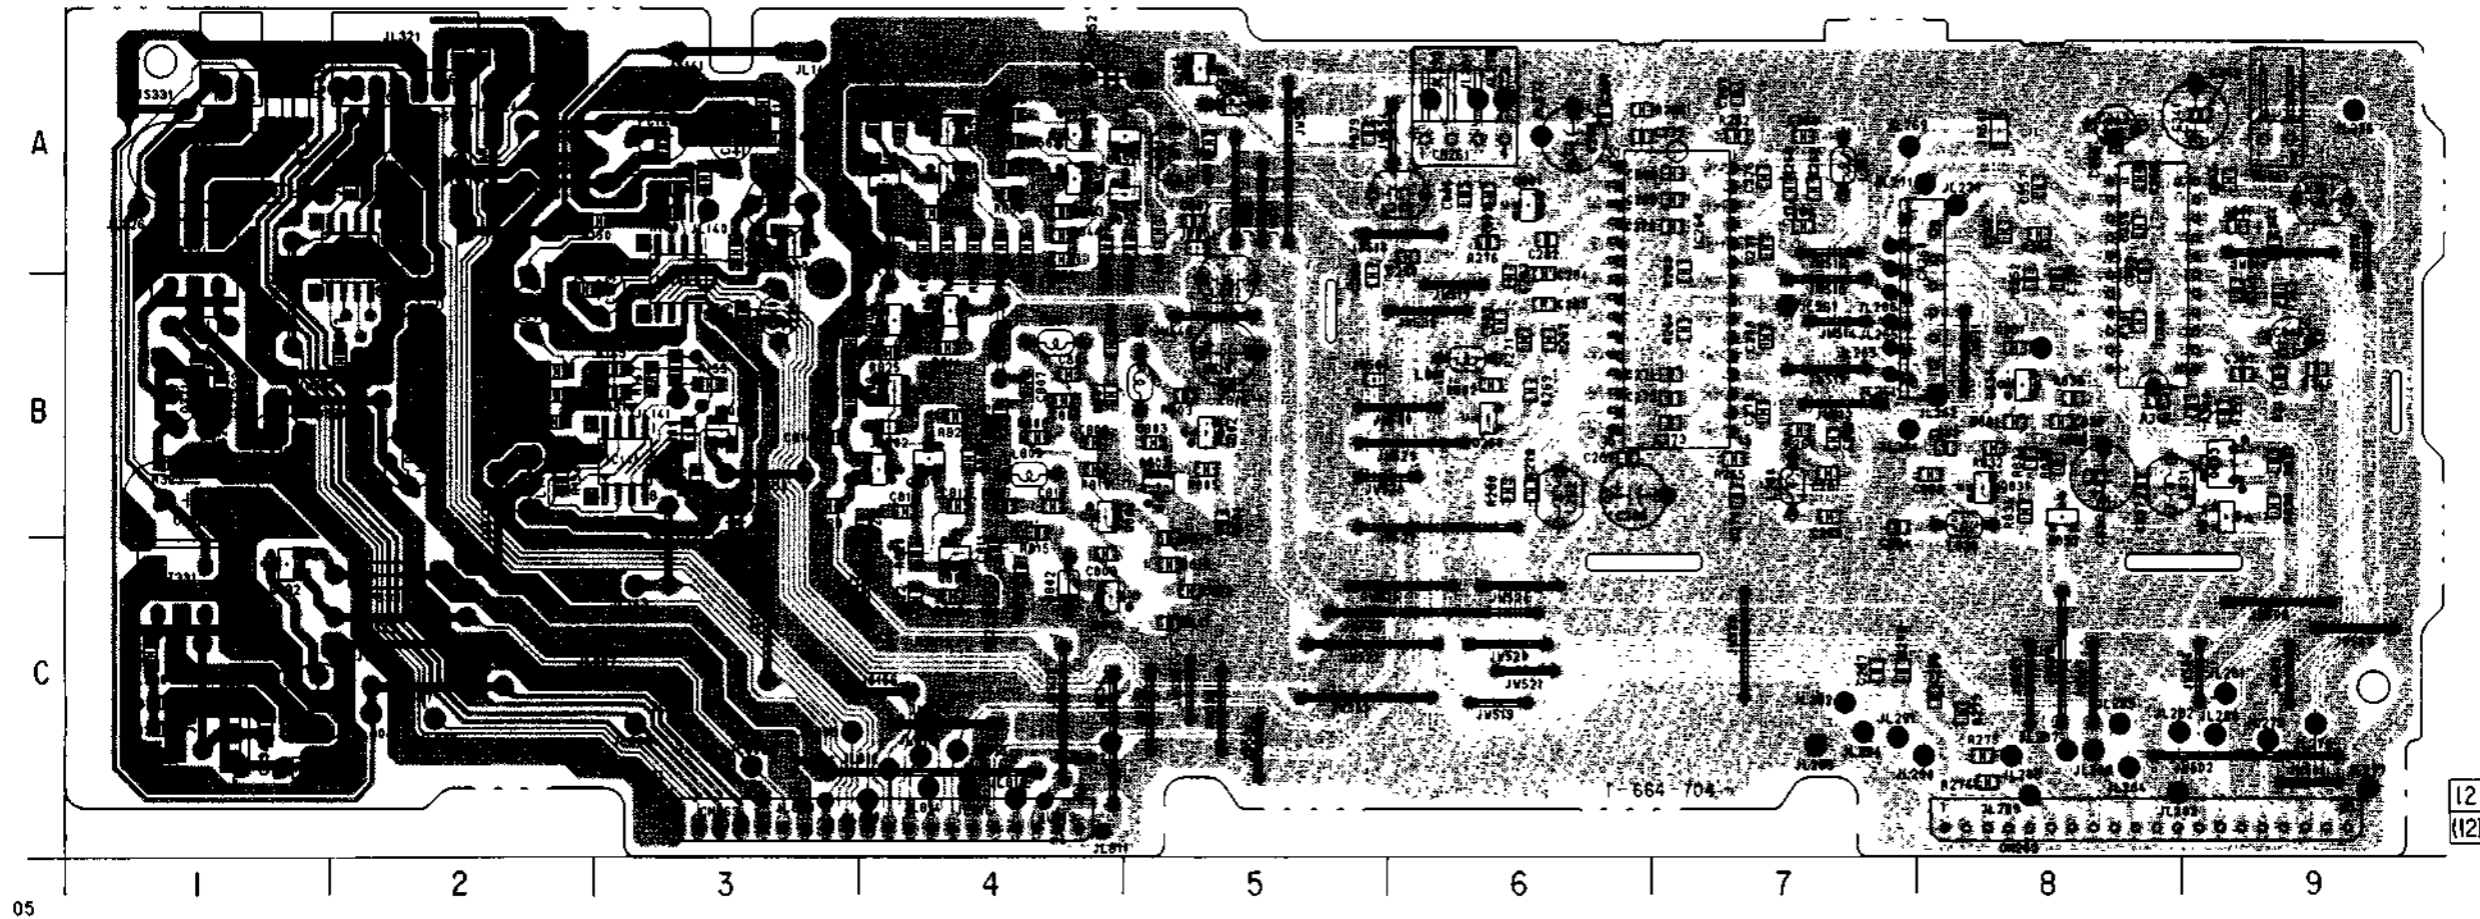


RP-220 BOARD

- CN260 B-8
- CN261 A-6
- CN262 C-8
- CN263 C-4
- CN301 A-1
- CN302 A-2
- CN341 A-9


- IC260 A-7
- IC301 A-2
- IC340 B-8

- Q260 B-6
- Q321 B-1

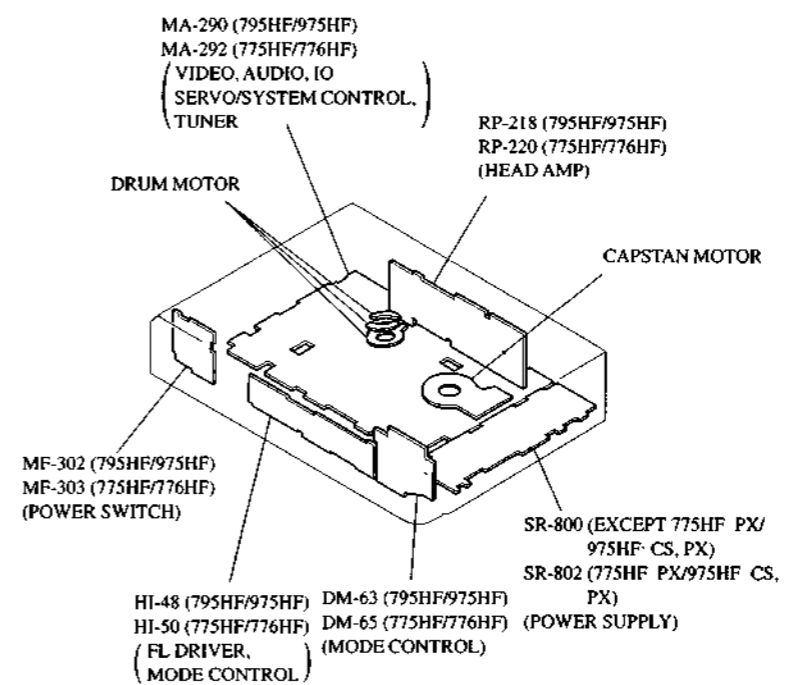

RP-218 (HEAD AMP) PRINTED WIRING BOARD (SLV-795HF/975HF)
 - Ref. No. RP-218 board; 3,000 series -

There are few cases that the part isn't mounted in this model is printed on this diagram.

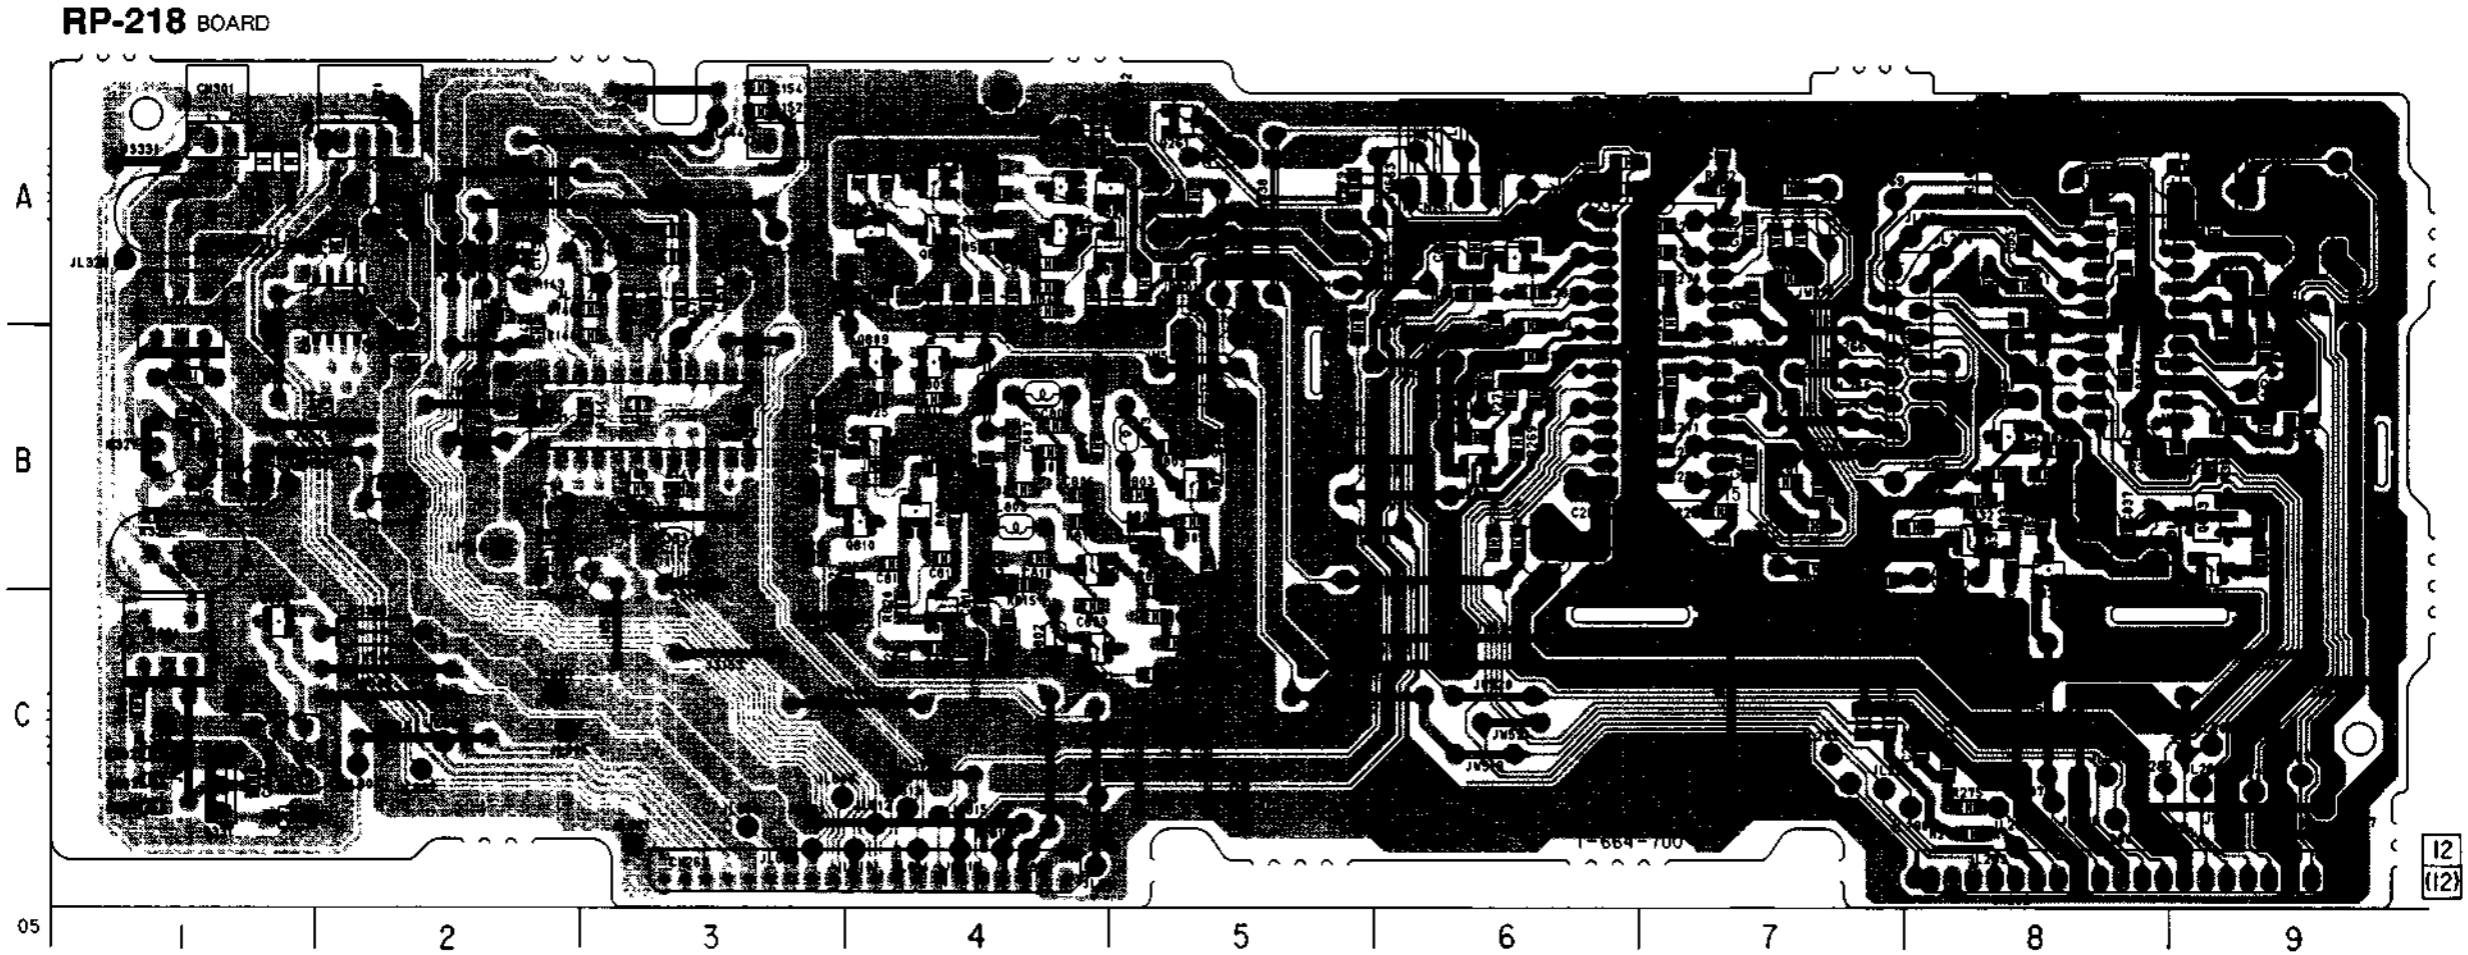


RP-218 BOARD

- CN260 B-7
- CN261 A-6
- CN262 C-8
- CN263 C-3
- CN301 A-1
- CN302 A-2
- CN303 A-3
- CN341 A-9










- D801 C-4
- D802 C-4

- IC141 B-3
- IC260 B-7
- IC301 A-2
- IC340 B-8

- Q260 B-6
- Q321 B-1
- Q331 C-1
- Q332 C-1
- Q801 A-6
- Q802 B-5
- Q803 B-5
- Q804 B-4
- Q805 B-4
- Q806 C-4
- Q807 B-4
- Q808 B-4
- Q809 B-4
- Q810 B-4
- Q830 B-8
- Q831 B-8
- Q832 B-8
- Q833 B-9
- Q834 B-9
- Q851 A-4
- Q852 A-4
- Q853 A-4
- Q854 A-4
- Q855 A-4
- Q856 A-4
- Q857 A-4

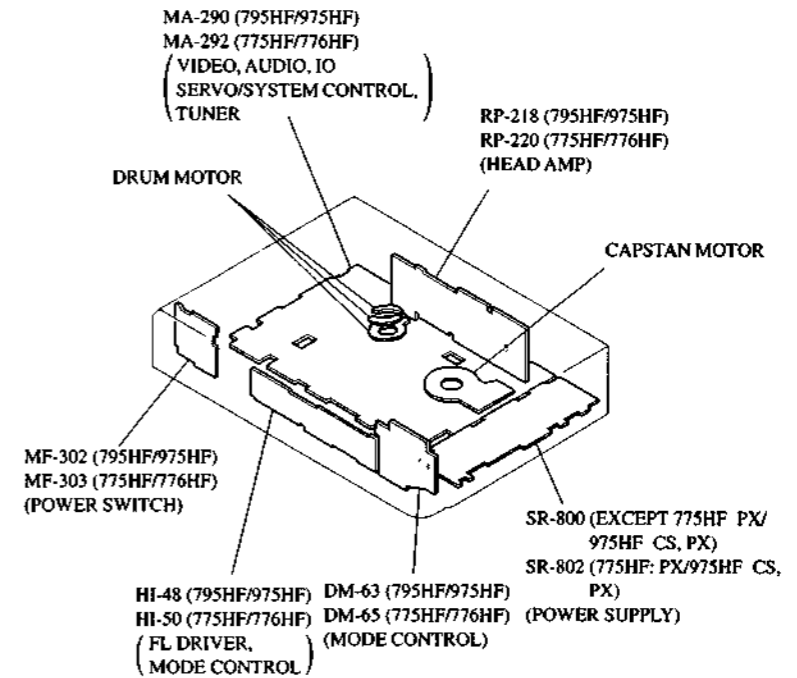

RP-218 (HEAD AMP) SCHEMATIC DIAGRAM (SLV-795HF/975HF)
 - Ref. No.: RP-218 board; 3,000 series -

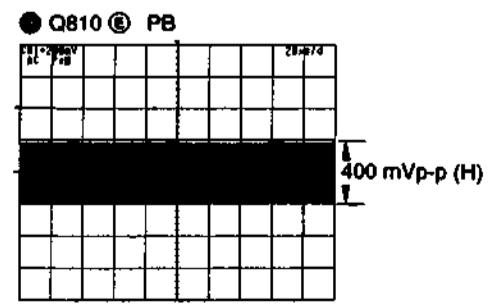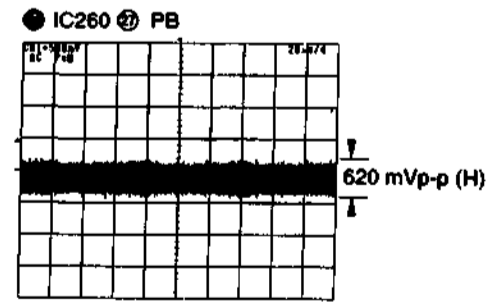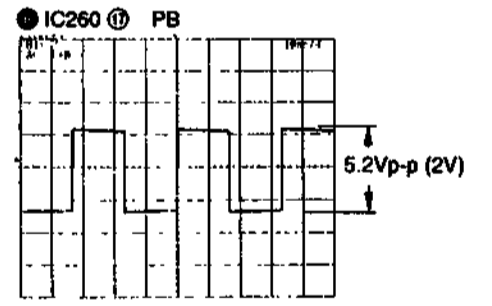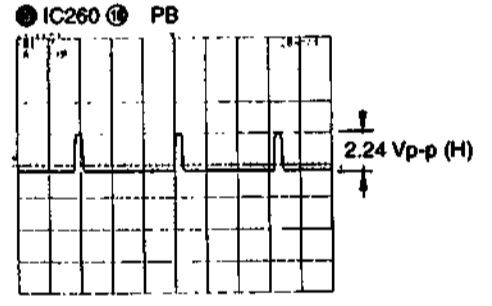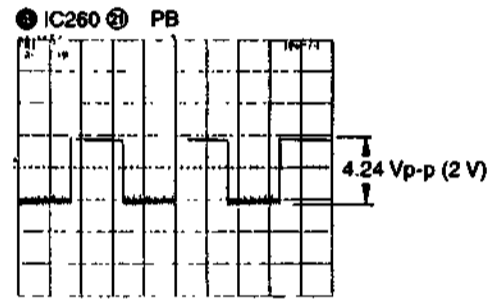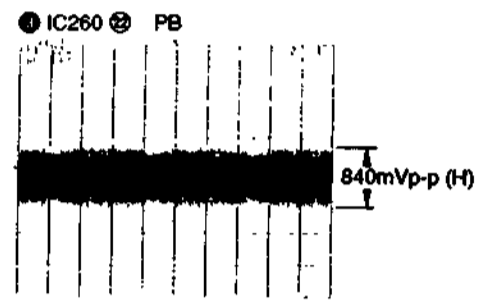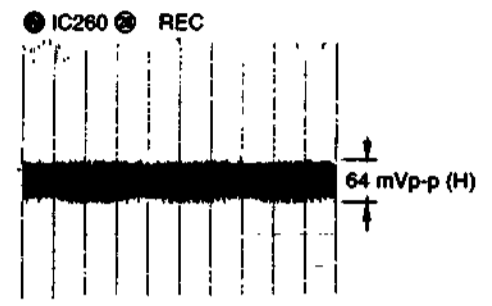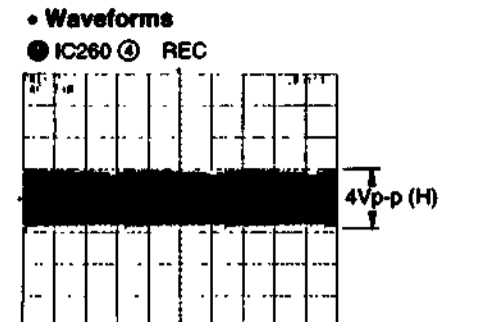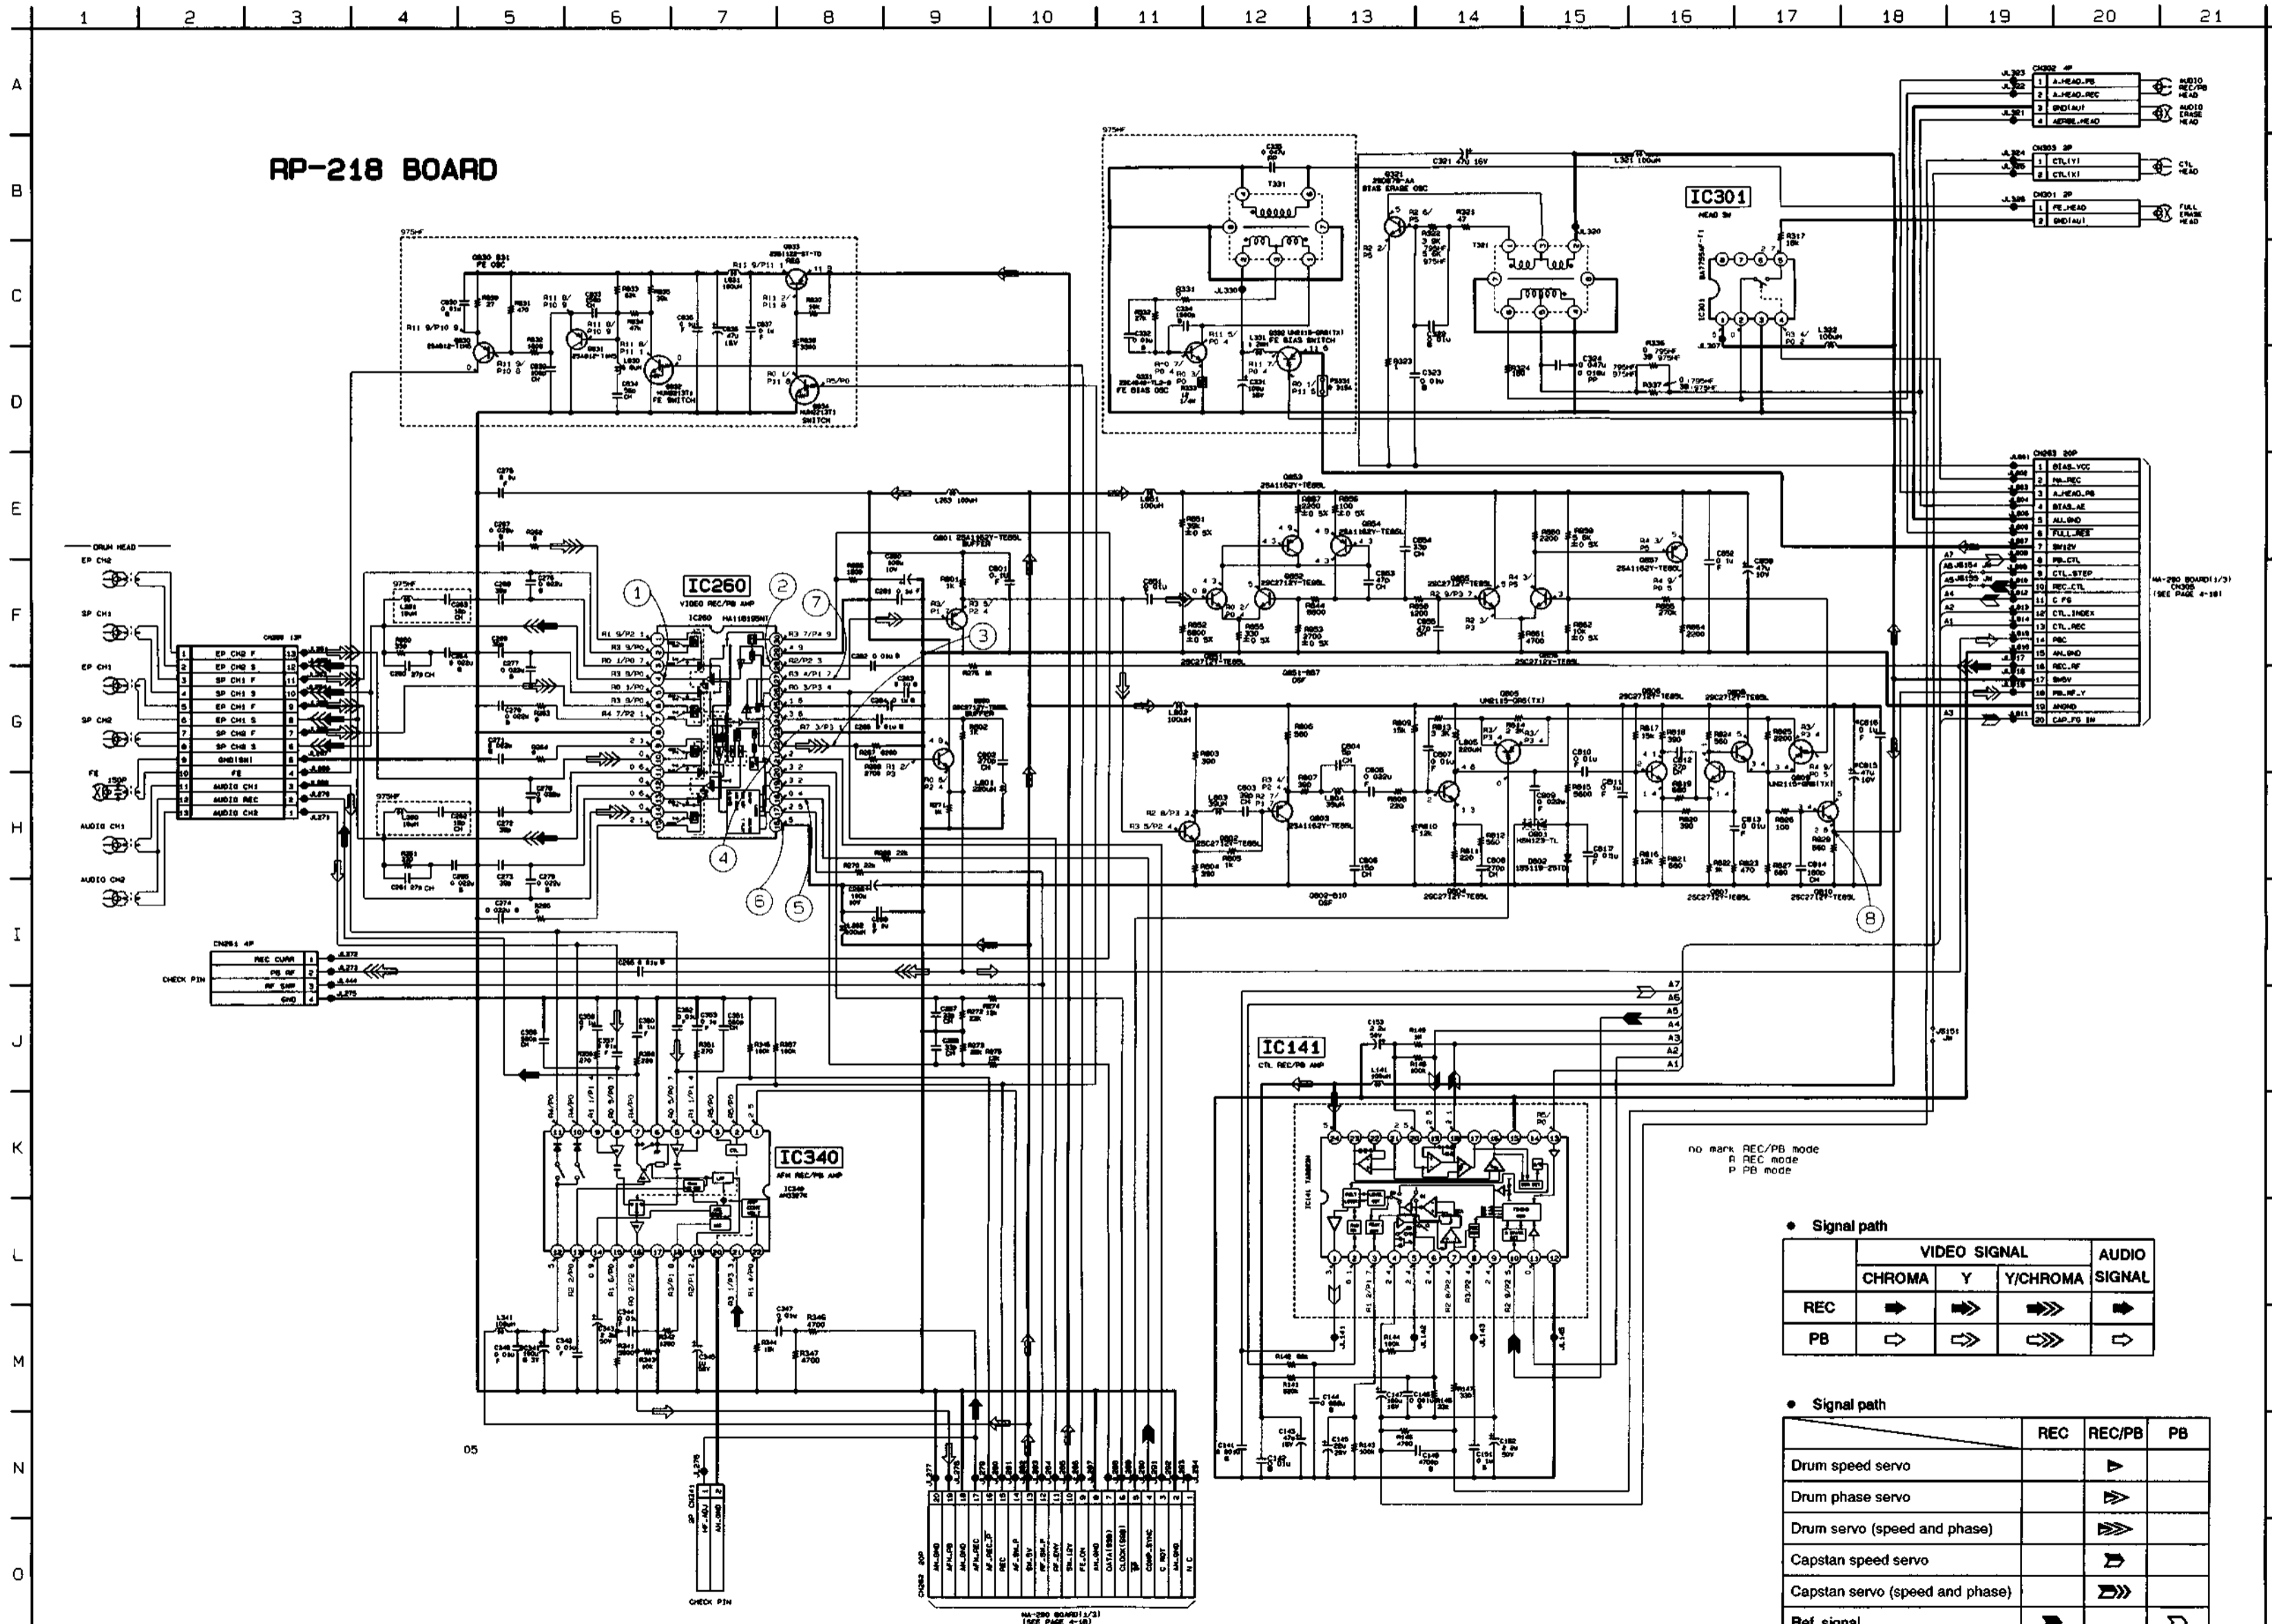

• Signal path

	VIDEO SIGNAL			AUDIO SIGNAL
	CHROMA	Y	Y/CHROMA	
REC	→	→	→	→
PB	→	→	→	→

• Signal path

	REC	REC/PB	PB
Drum speed servo		▶	
Drum phase servo		▶	
Drum servo (speed and phase)		▶	
Capstan speed servo		▶	
Capstan servo (speed and phase)		▶	
Ref. signal	▶		▶

MA-290 (SERVO/SYSTEM CONTROL, VIDEO, AUDIO, IO, TUNER) PRINTED WIRING BOARD (SLV-795HF/975HF)
 - Ref. No.: MA-290 board; 3,000 series -

There are few cases that the part isn't mounted in this model is printed on this diagram.



MA-290 BOARD

- CN101 B-7
- CN102 E-2
- CN103 H-2
- CN104 I-1
- CN180 I-12
- CN305 B-4
- CN306 B-9
- CN420 J-9
- CN421 J-7
- CN422 J-5
- CN423 F-12
- CN600 G-1


- D100 G-8
- D107 G-9
- D108 H-1
- D131 I-4
- D161 G-1
- D182 I-11
- D183 I-12
- D361 C-11
- D501 D-8
- D502 D-9
- D503 C-9
- D504 C-9
- D505 A-8
- D702 D-12
- D991 A-2
- D992 A-4
- D993 A-4
- D995 A-2

- IC106 G-9
- IC130 J-5
- IC161 G-7
- IC181 H-9
- IC182 J-9
- IC183 J-10
- IC201 D-3
- IC202 E-4
- IC360 D-11
- IC361 E-11
- IC500 C-9
- IC501 C-8
- IC670 A-4
- IC733 H-12
- IC871 J-2
- IC991 A-2


- Q100 F-10
- Q101 F-1
- Q102 H-4
- Q151 H-7
- Q201 B-3
- Q203 C-2
- Q205 C-1
- Q208 C-2
- Q209 E-4
- Q210 E-3
- Q211 E-4
- Q301 C-4
- Q361 C-11
- Q362 B-11
- Q363 C-11
- Q364 C-11
- Q502 B-9
- Q503 B-9
- Q504 D-8
- Q505 D-8
- Q560 A-9
- Q731 G-12
- Q871 I-3
- Q872 I-3
- Q873 I-2
- Q874 I-3
- Q875 I-3

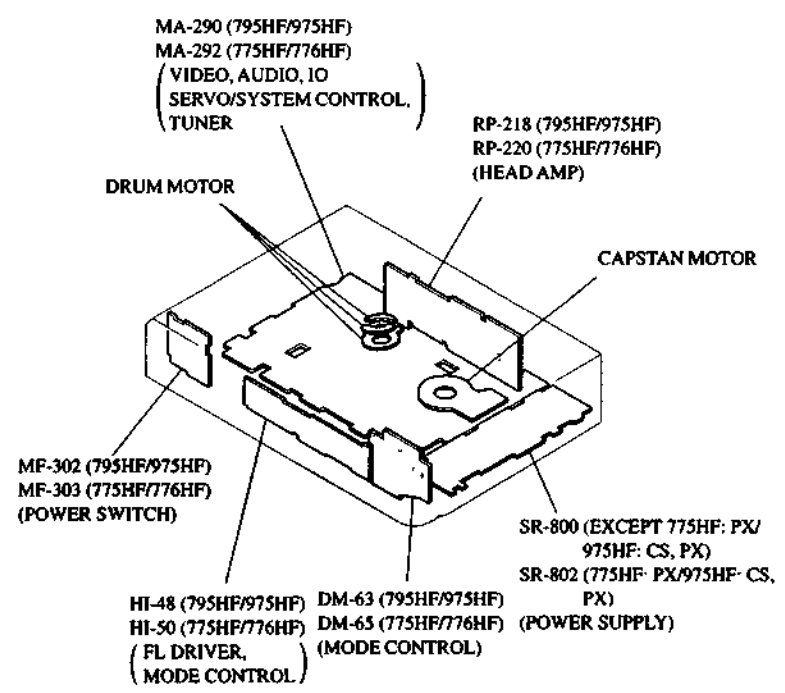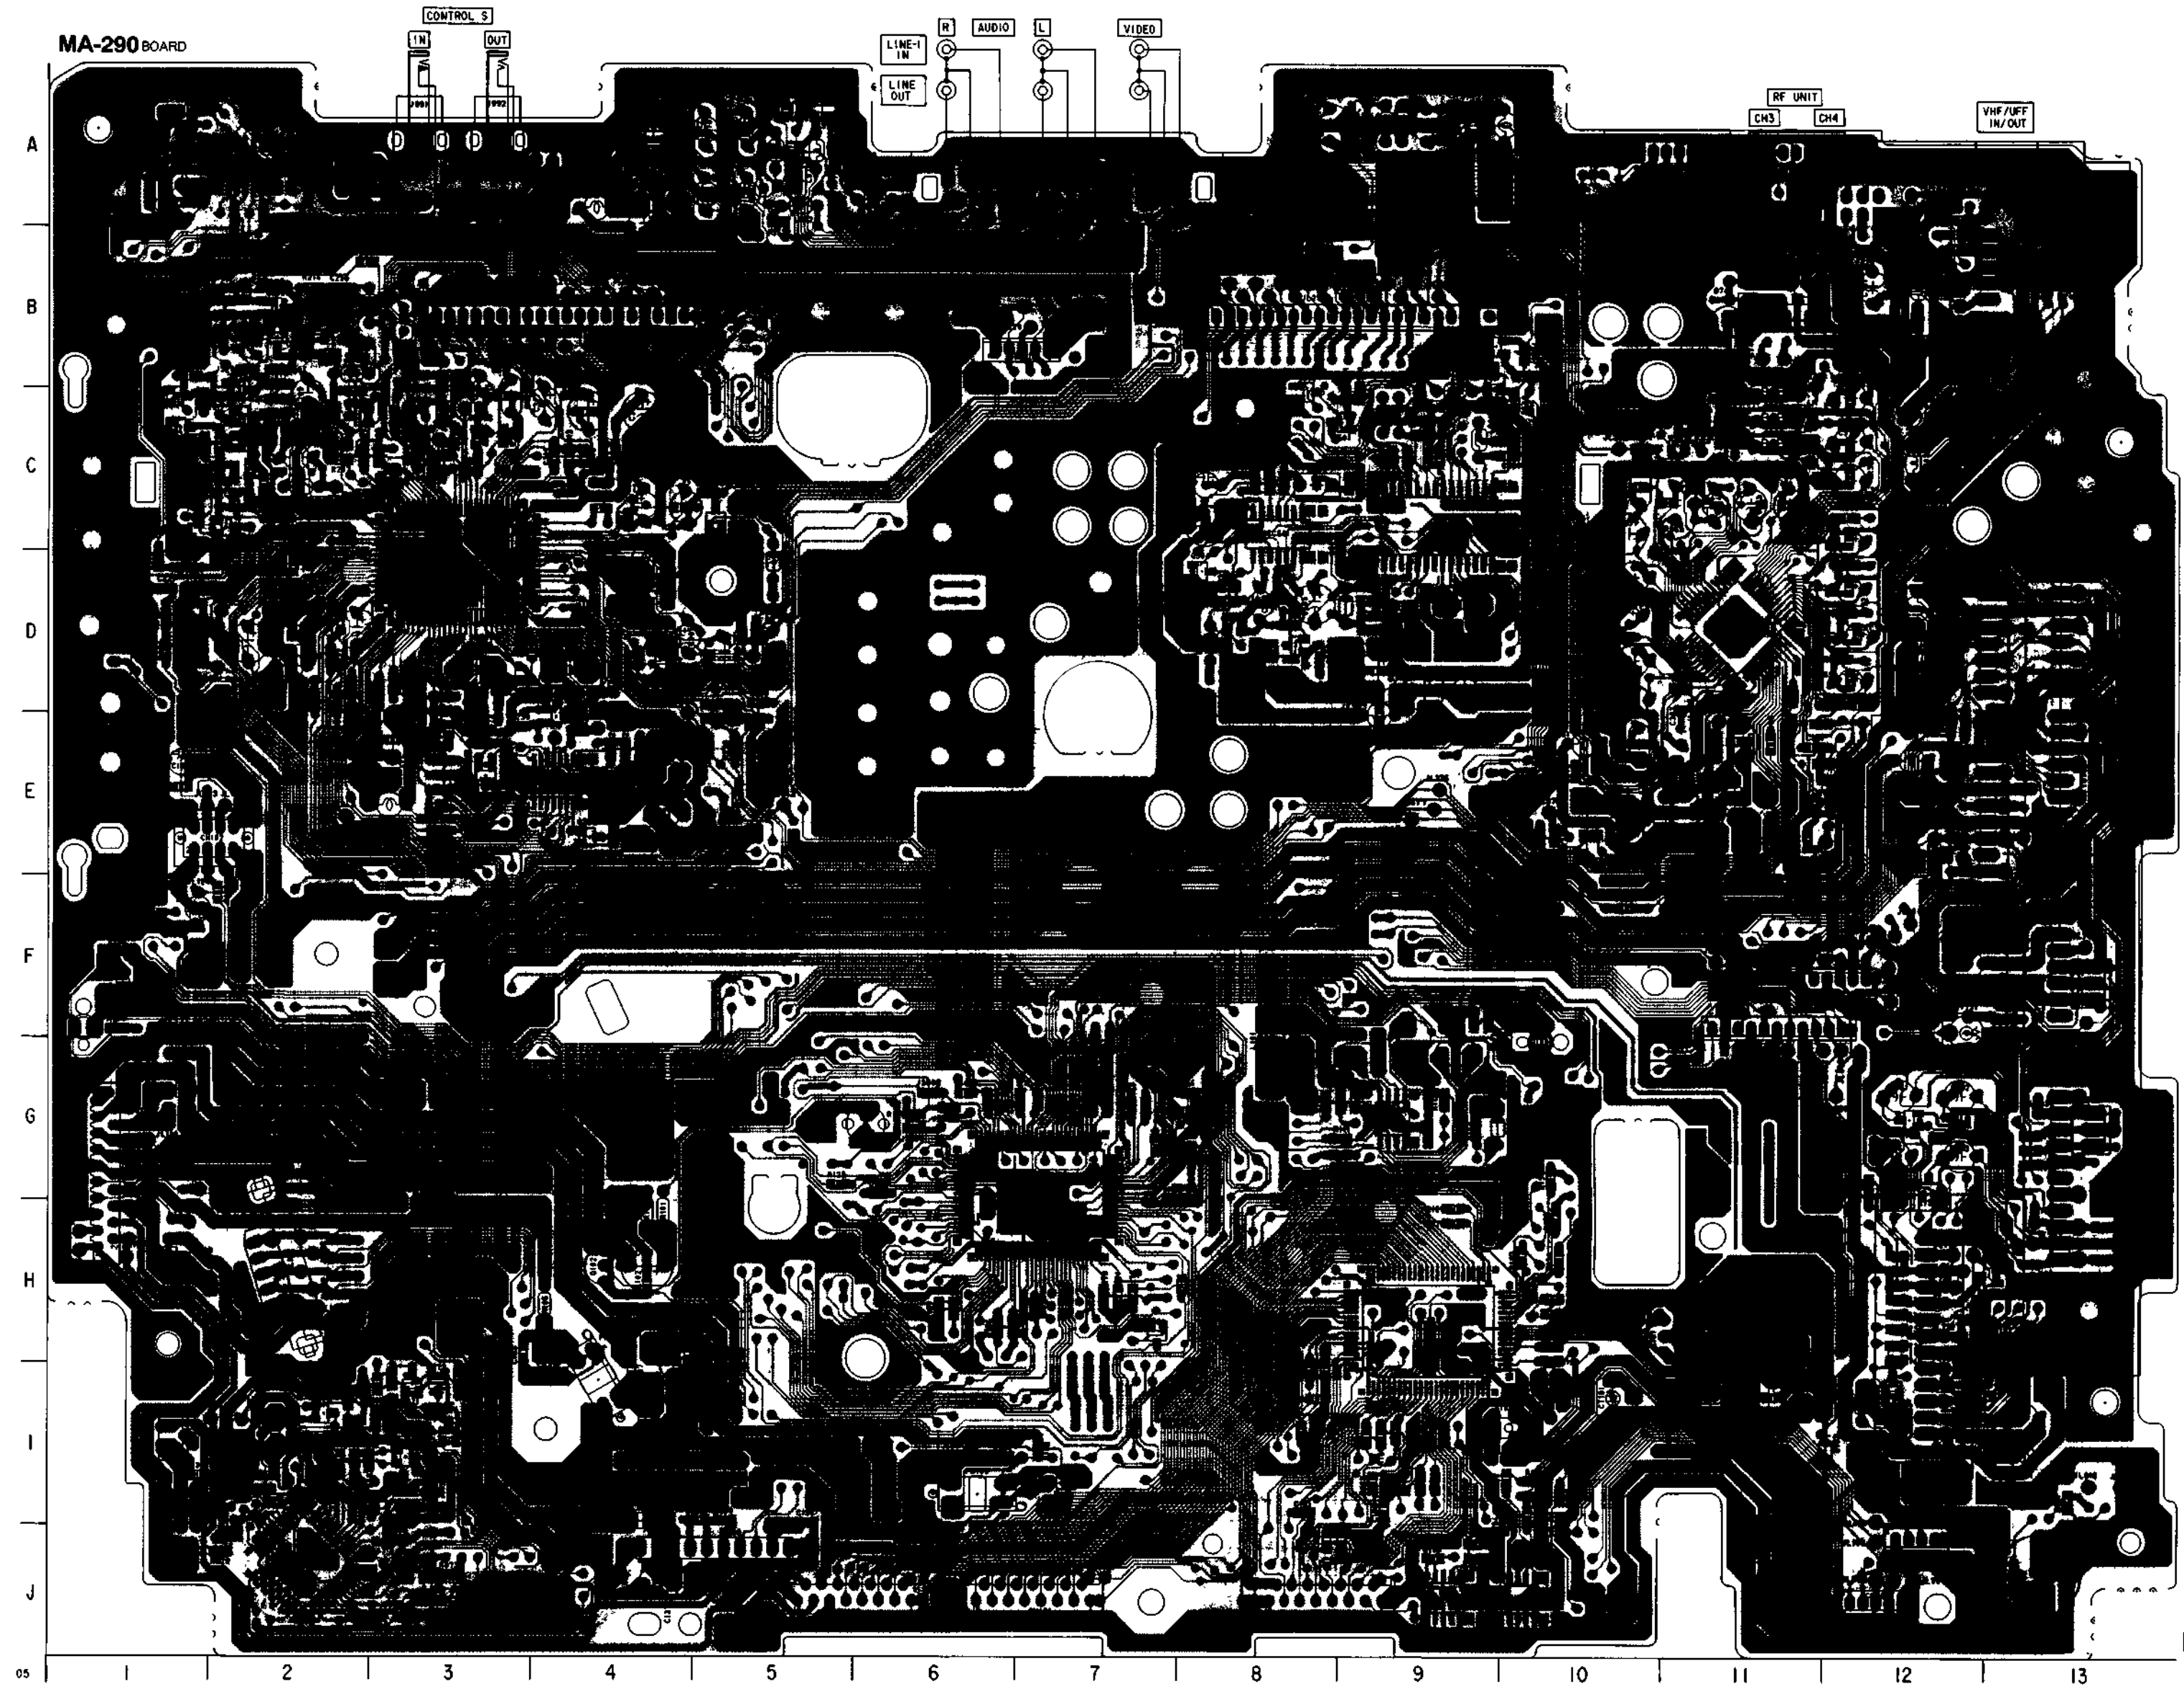

MA-290 (VIDEO, AUDIO, IO) SCHEMATIC DIAGRAM (SLV-795HF/975HF)
 - Ref. No.: MA-290 board; 3,000 series -

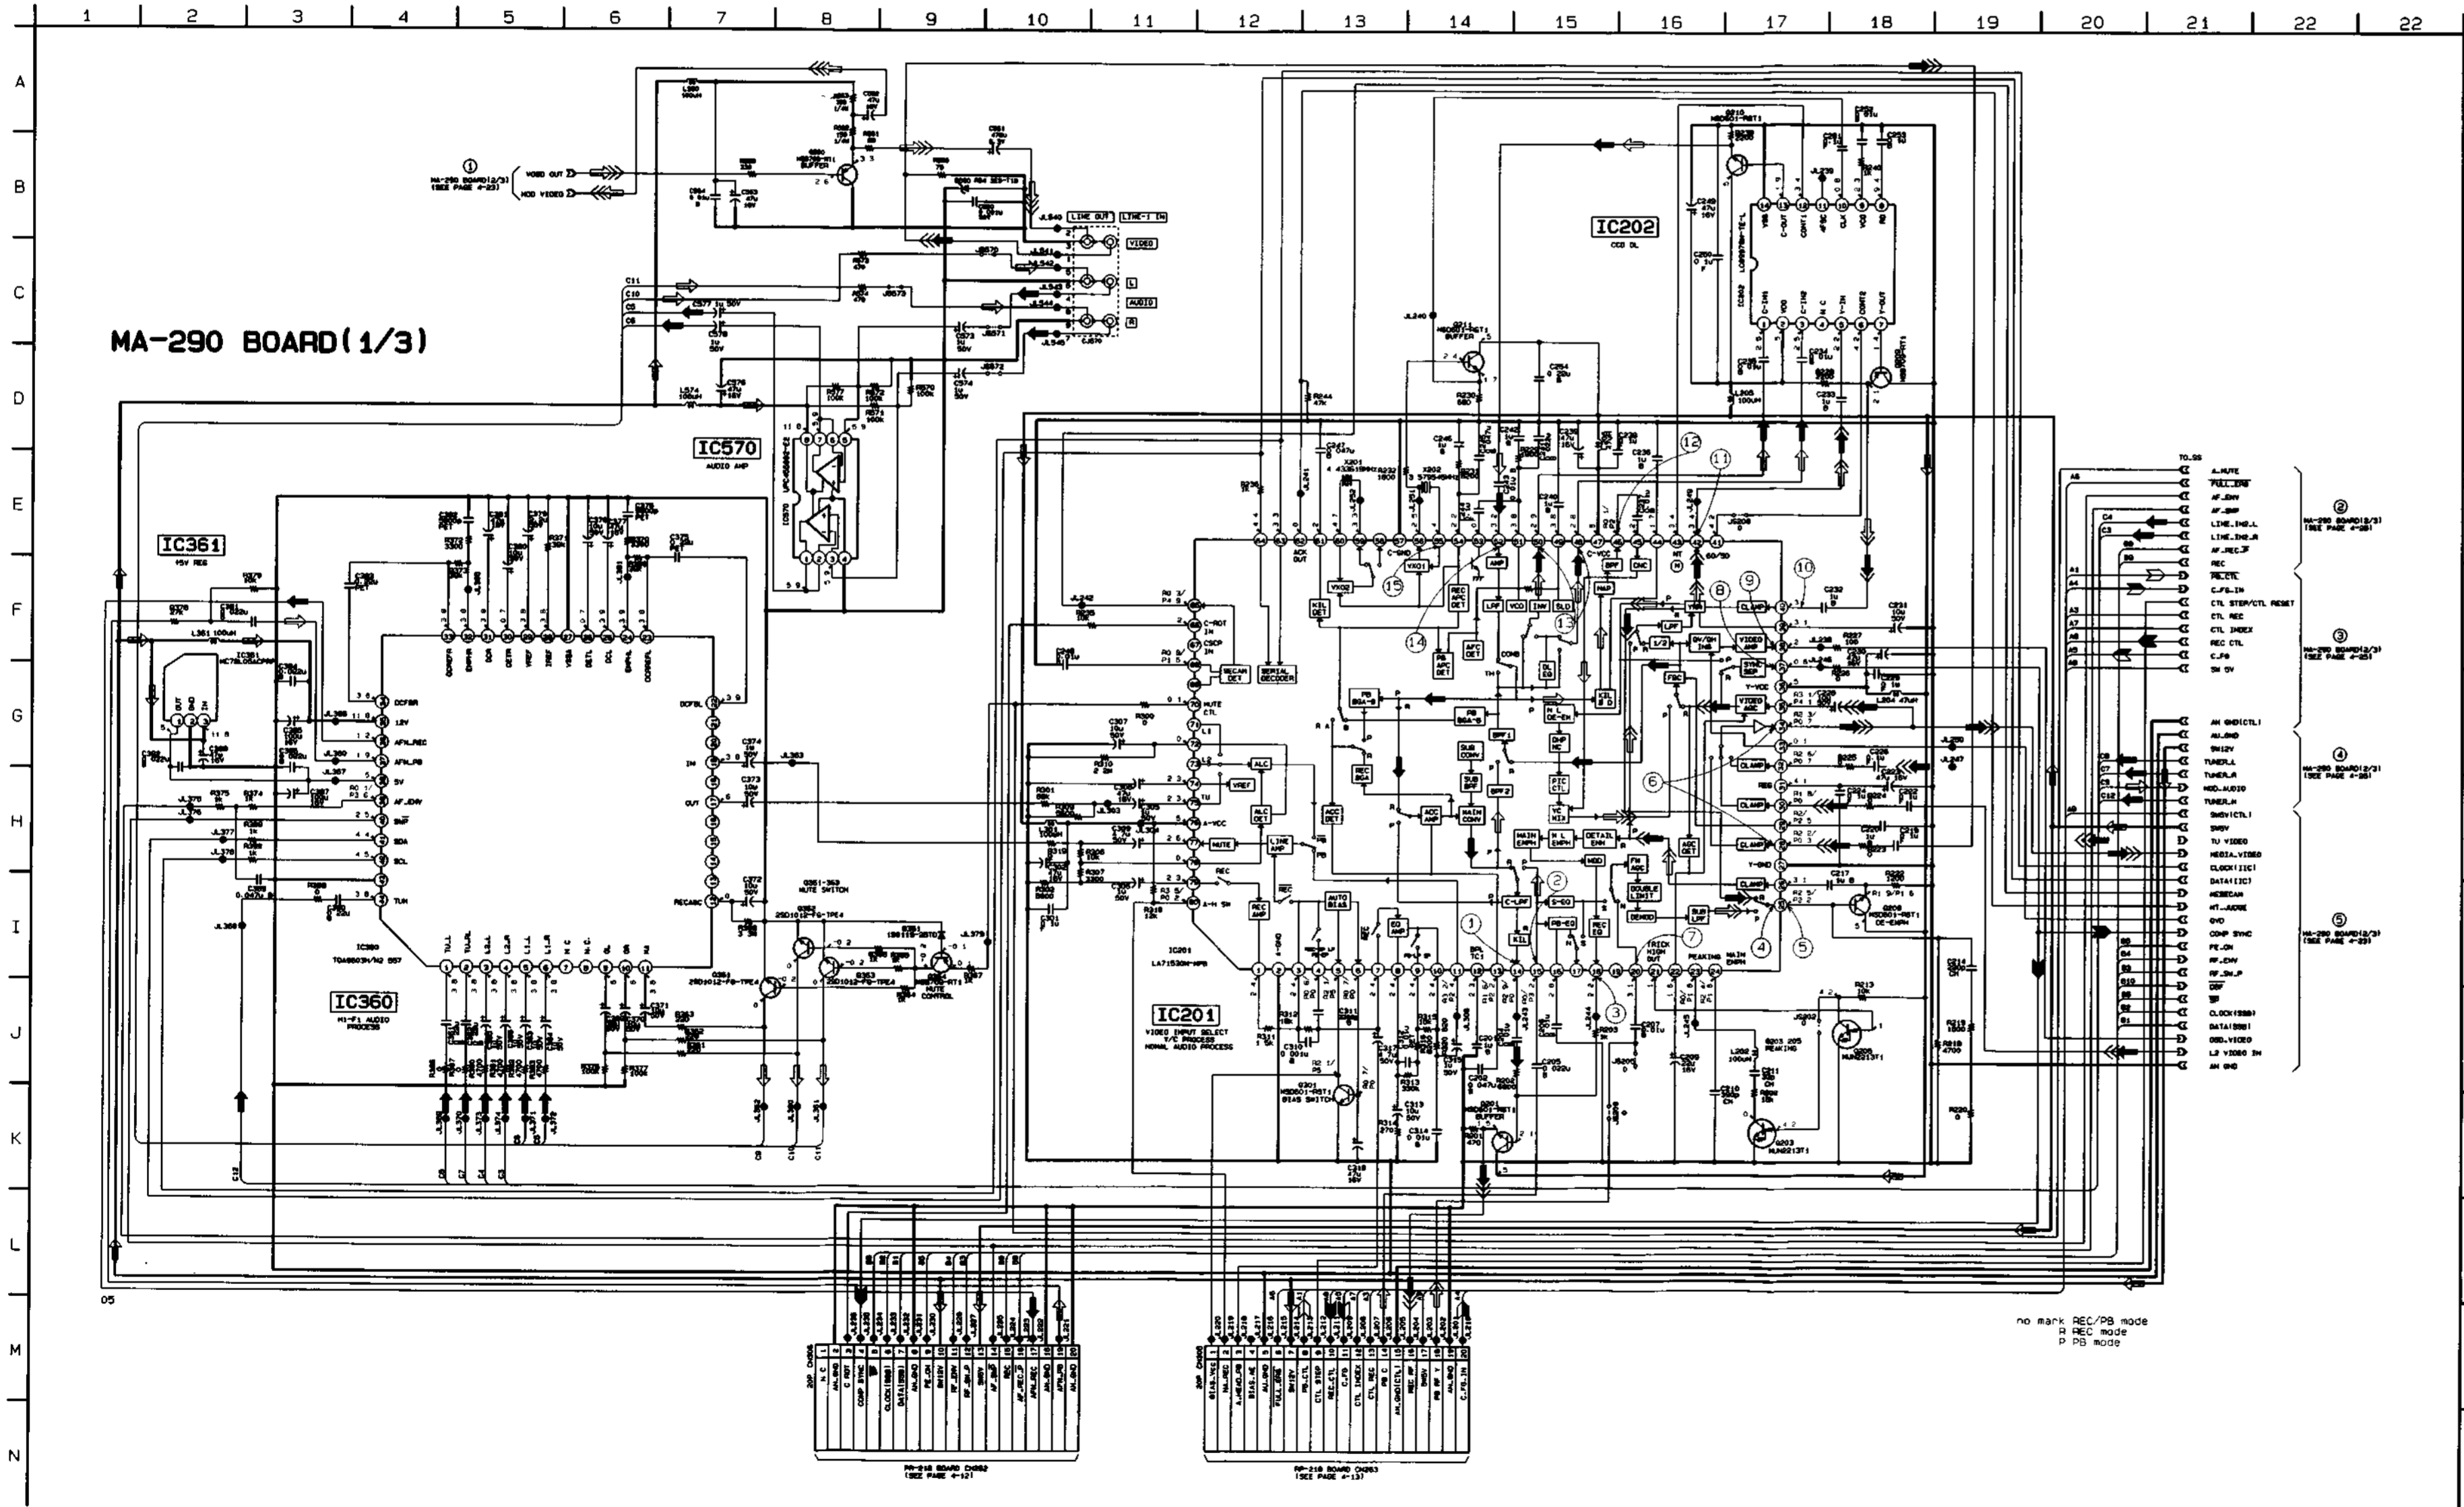



• Waveforms

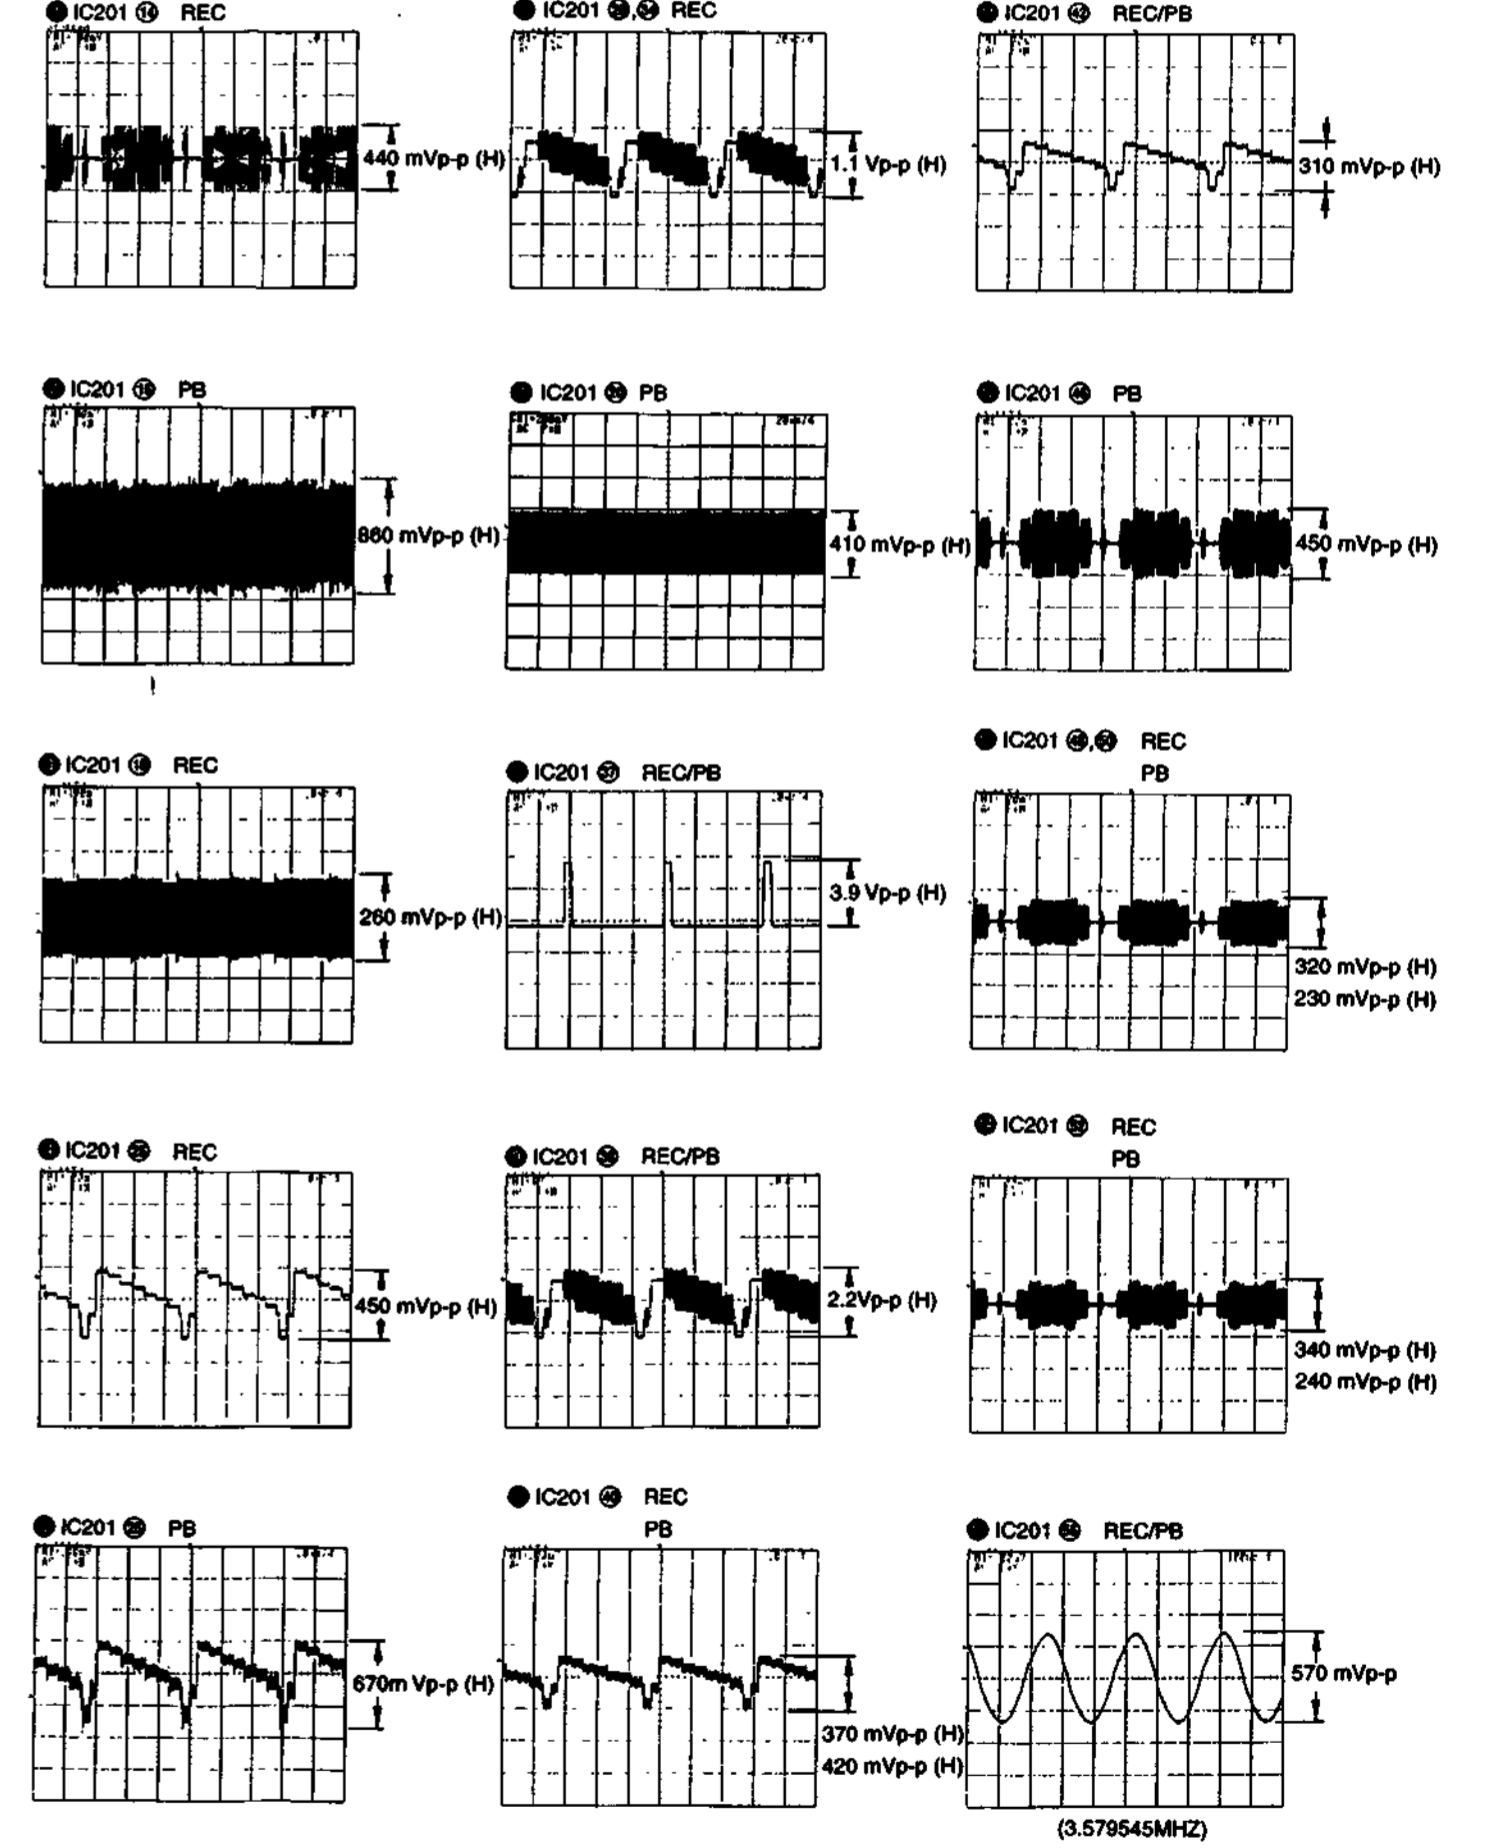

• Signal path

	VIDEO SIGNAL			AUDIO SIGNAL
	CHROMA	Y	Y/CHROMA	
REC	→	→	→	→
PB	→	→	→	→

MA-290 (SERVO/SYSTEM CONTROL) SCHEMATIC DIAGRAM (SLV-795HF/975HF) • See page 4-14 to 4-16 for printed wiring board.
 - Ref. No.: MA-290 board; 3,000 series -

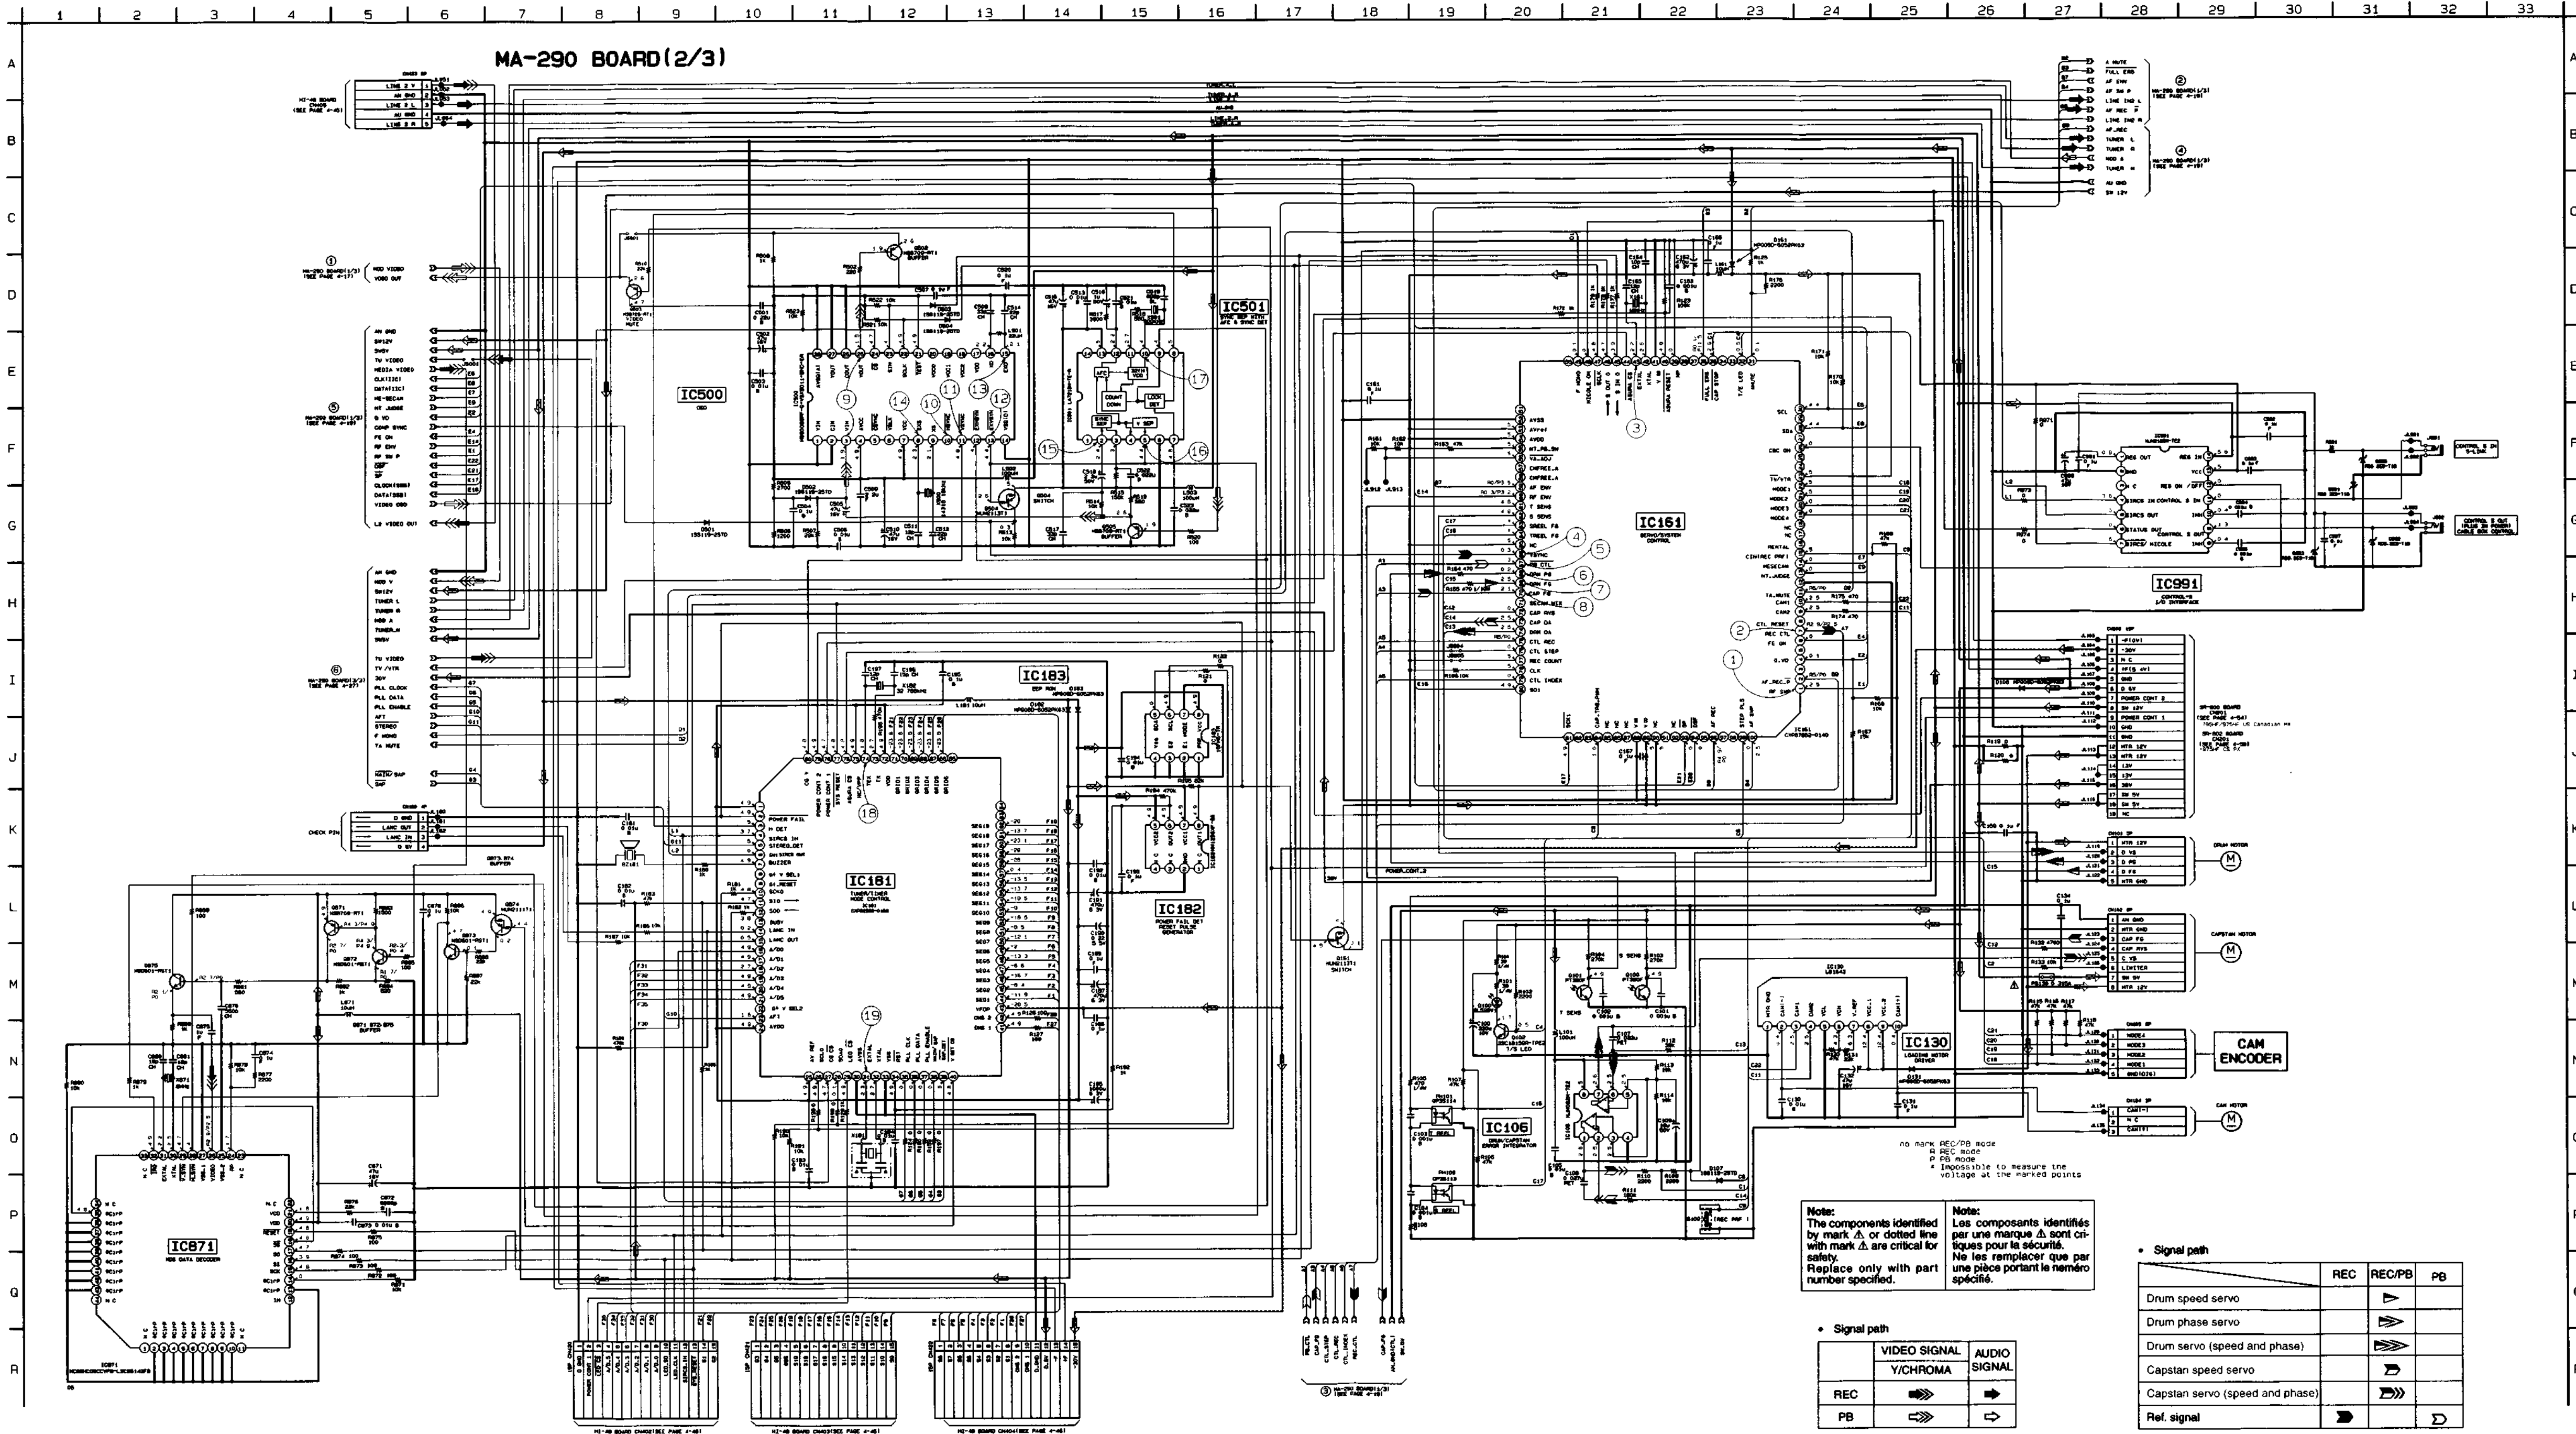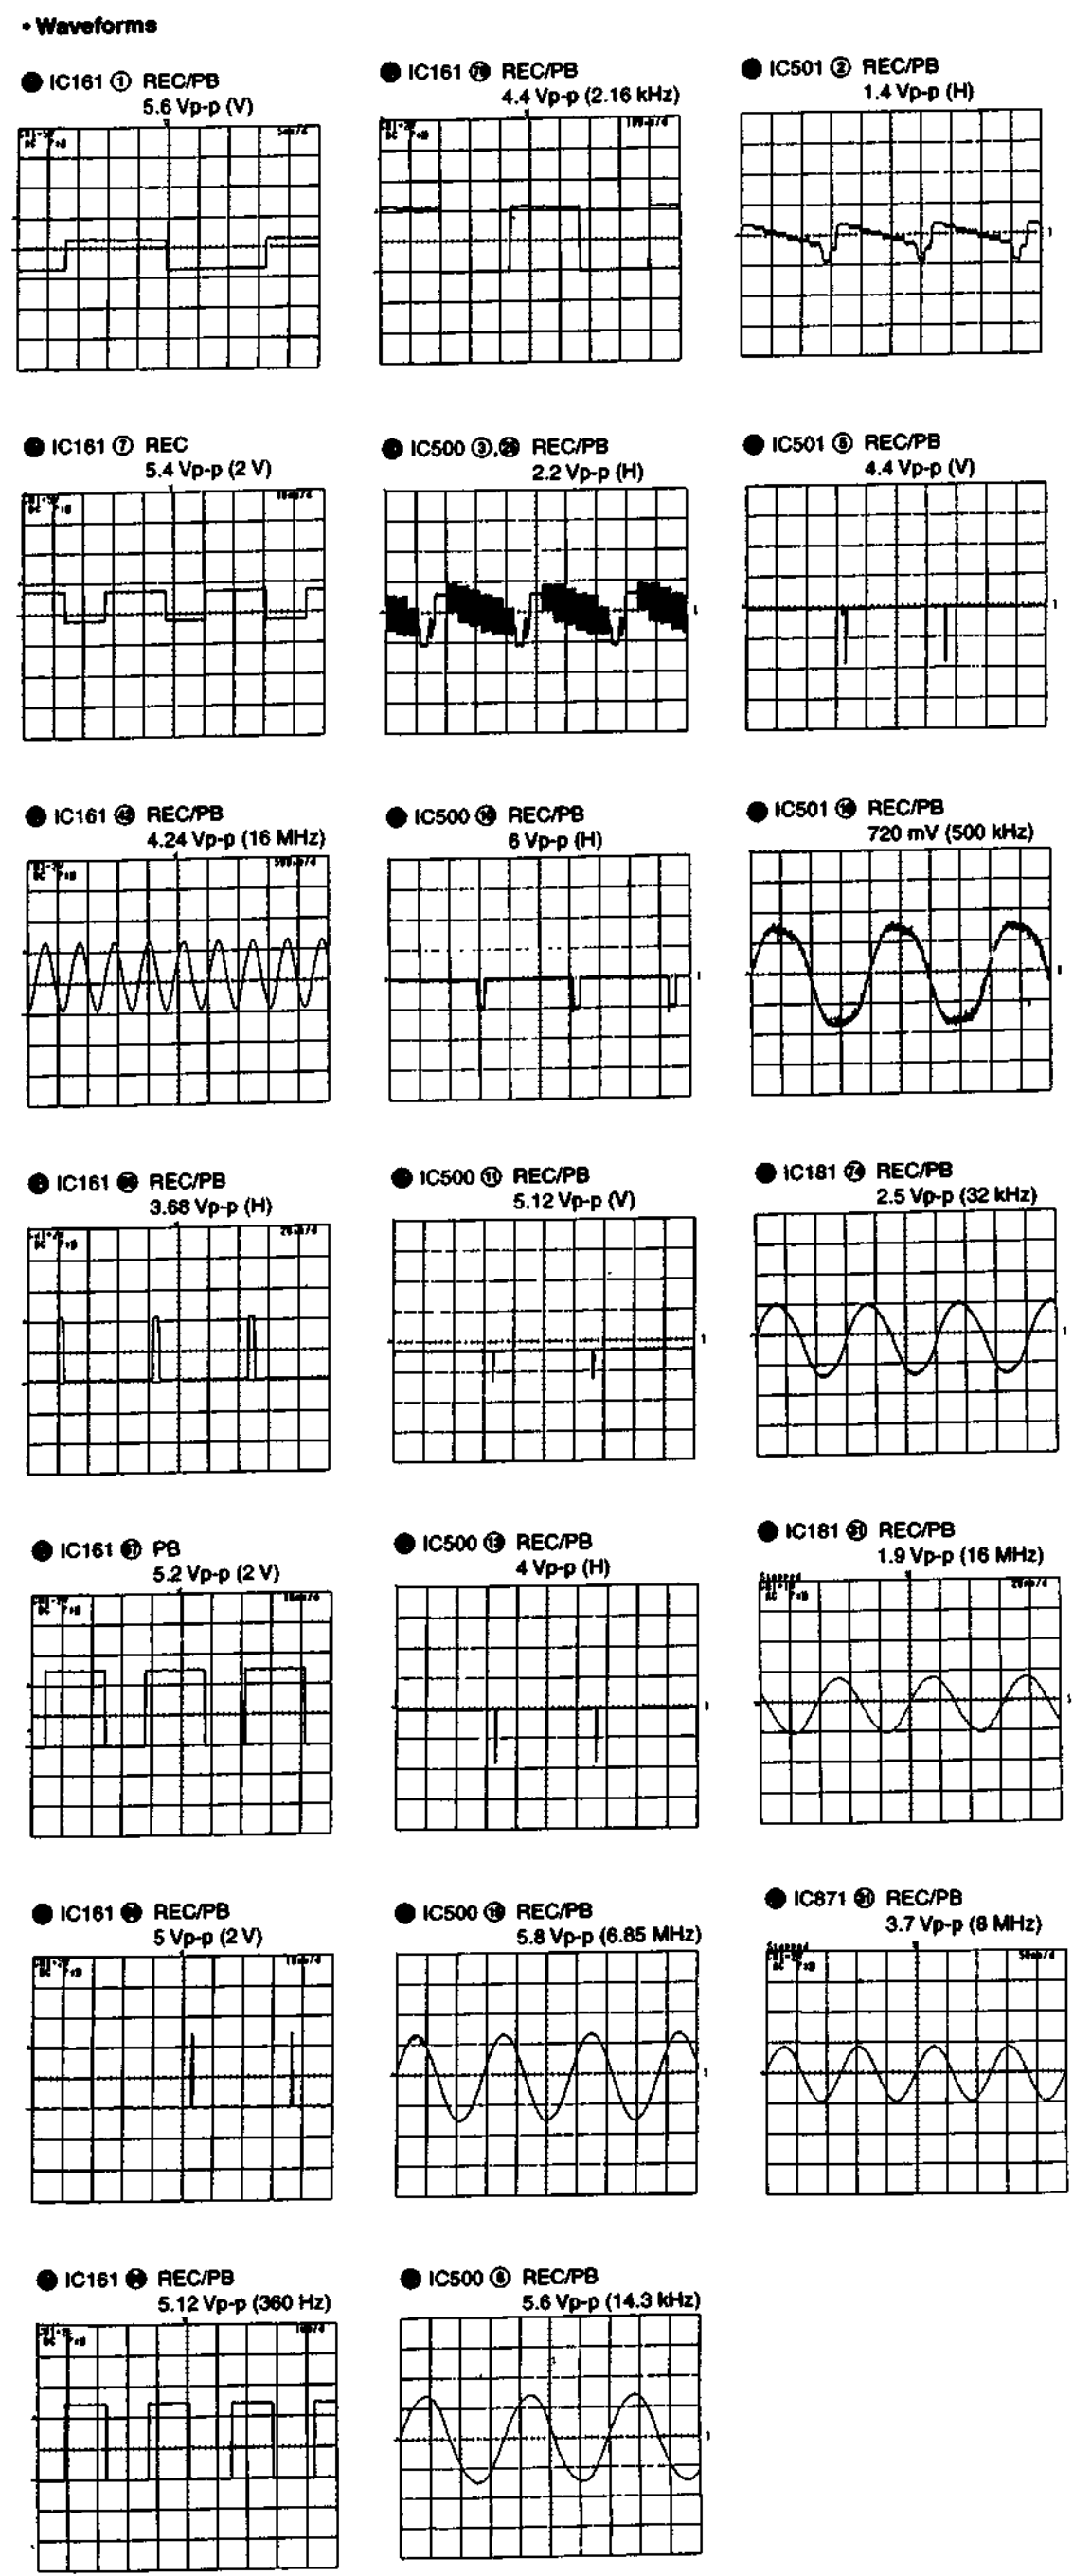

Note: The components identified by mark Δ or dotted line with mark Δ are critical for safety. Replace only with part number specified.

Note: Les composants identifiés par une marque Δ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

• Signal path


	VIDEO SIGNAL Y/CHROMA	AUDIO SIGNAL
REC	→	→
PB	→	→

• Signal path

	REC	REC/PB	PB
Drum speed servo	→	→	→
Drum phase servo	→	→	→
Drum servo (speed and phase)	→	→	→
Capstan speed servo	→	→	→
Capstan servo (speed and phase)	→	→	→
Ref. signal	→	→	→

MA-290 (TUNER) SCHEMATIC DIAGRAM (SLV-795HF/975HF) • See page 4-14 to 4-16 for printed wiring board.

- Ref. No.: MA-290 board; 3,000 series -

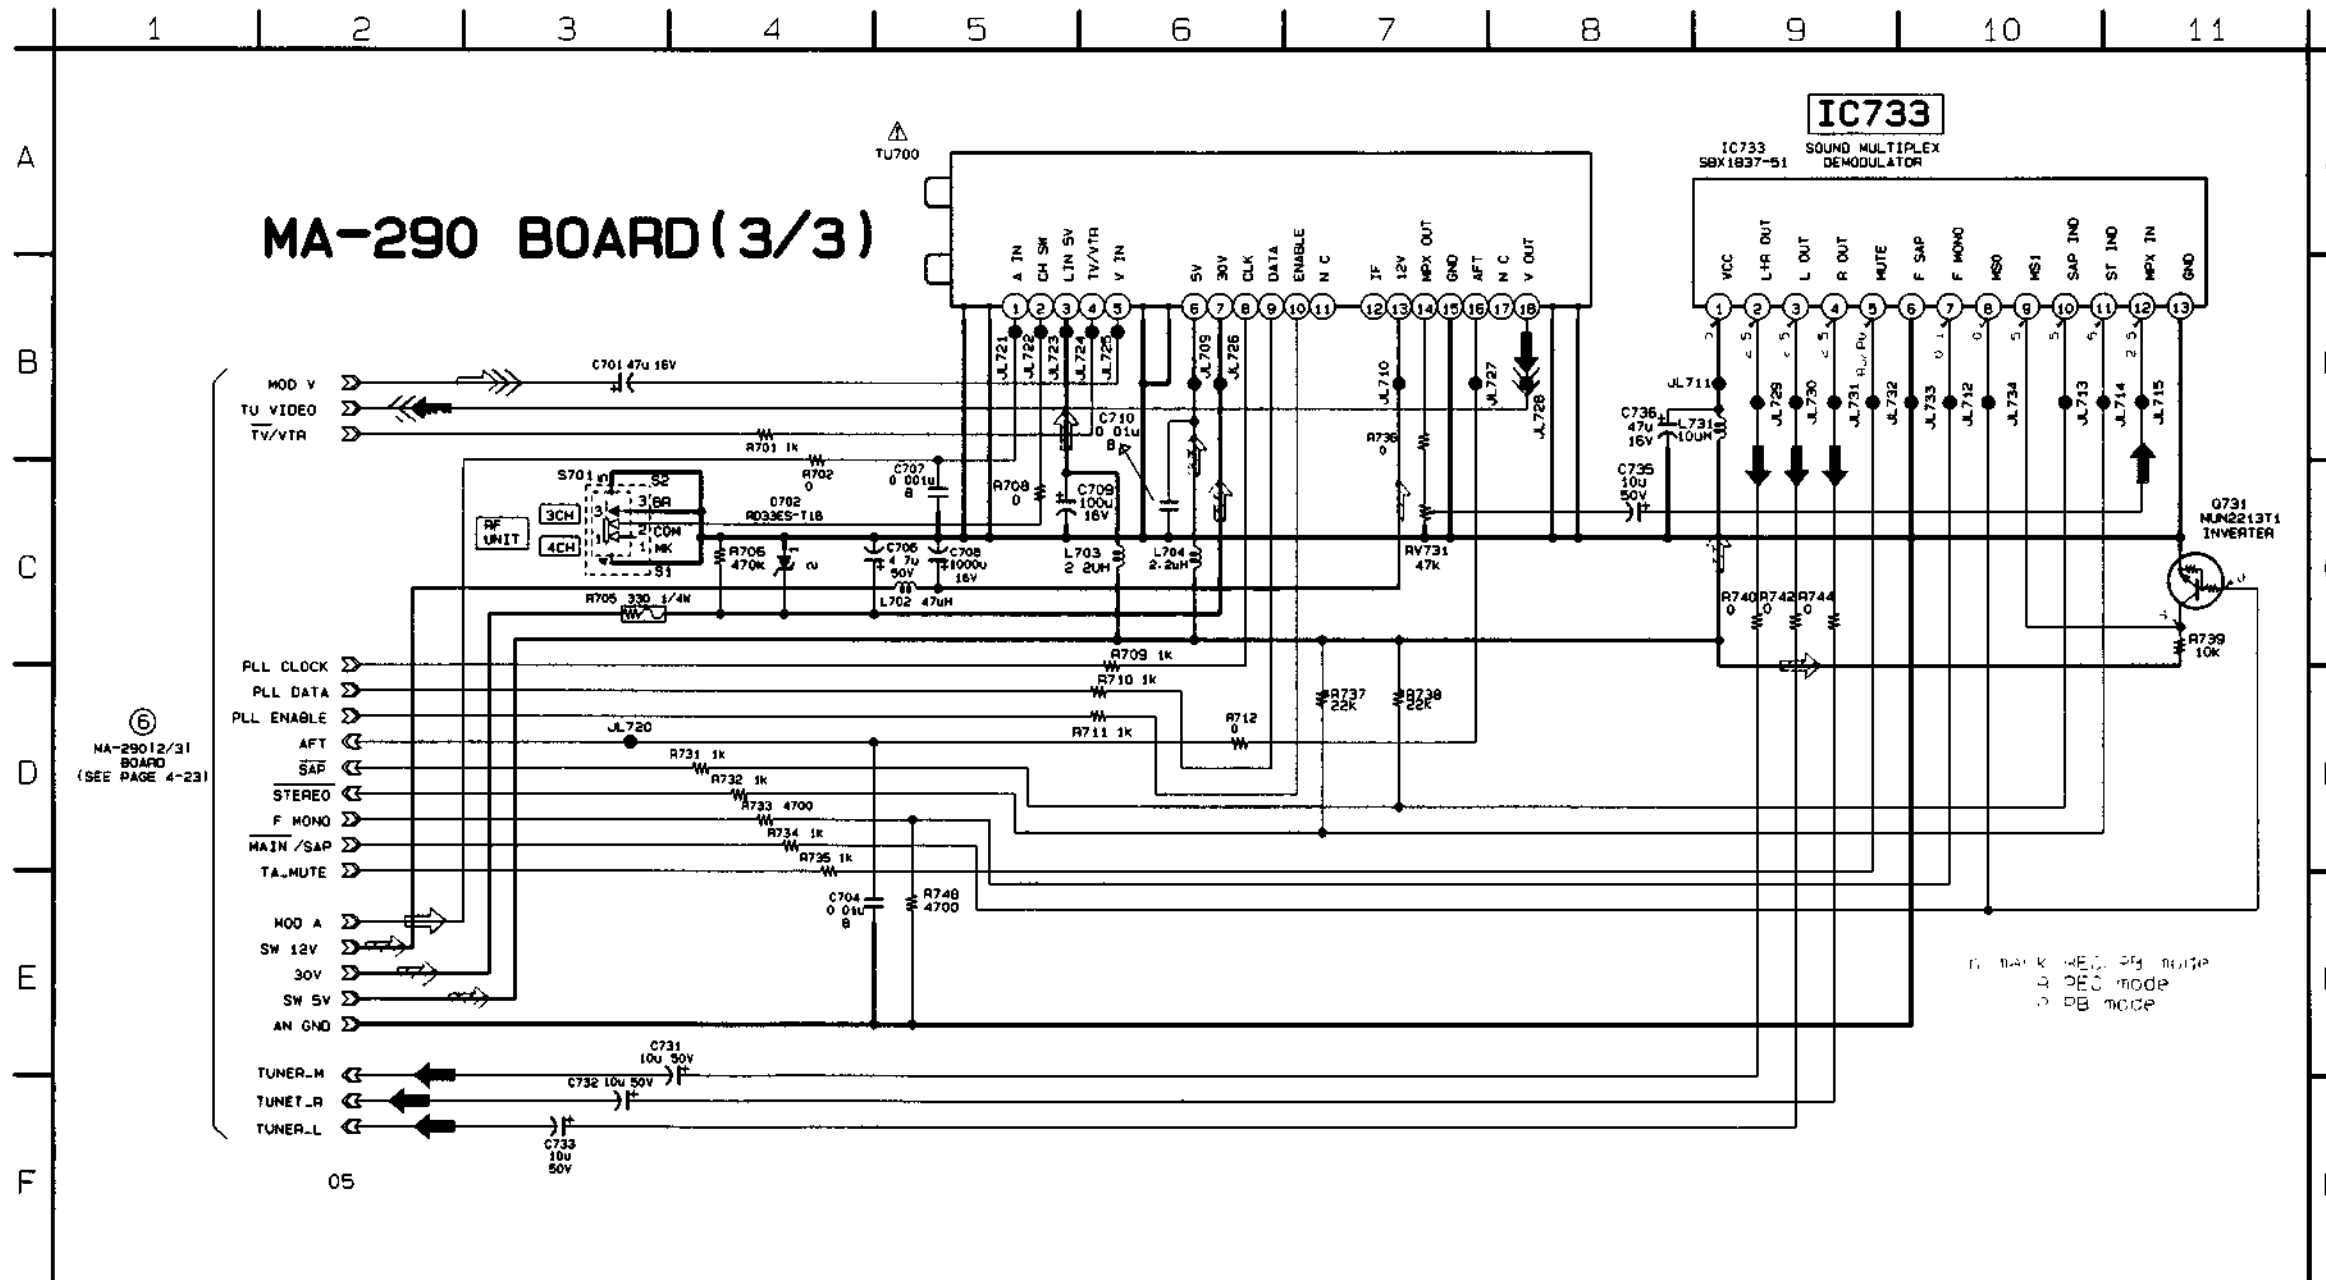


• Signal path

	VIDEO SIGNAL	AUDIO SIGNAL
	Y/CHROMA	
REC	▶▶▶▶▶	▶▶▶▶▶
PB	▶▶▶▶▶	▶▶▶▶▶

Note:
 The components identified by mark Δ or dotted line with mark Δ are critical for safety.
 Replace only with part number specified

Note:
 Les composants identifiés par une marque Δ sont critiques pour la sécurité.
 Ne les remplacer que par une pièce portant le numéro spécifié.

MA-292 (TUNER) SCHEMATIC DIAGRAM (SLV-775HF/776HF) • See page 4-39 to 4-41 for printed wiring board.
 - Ref. No.: MA-292 board; 2,000 series -

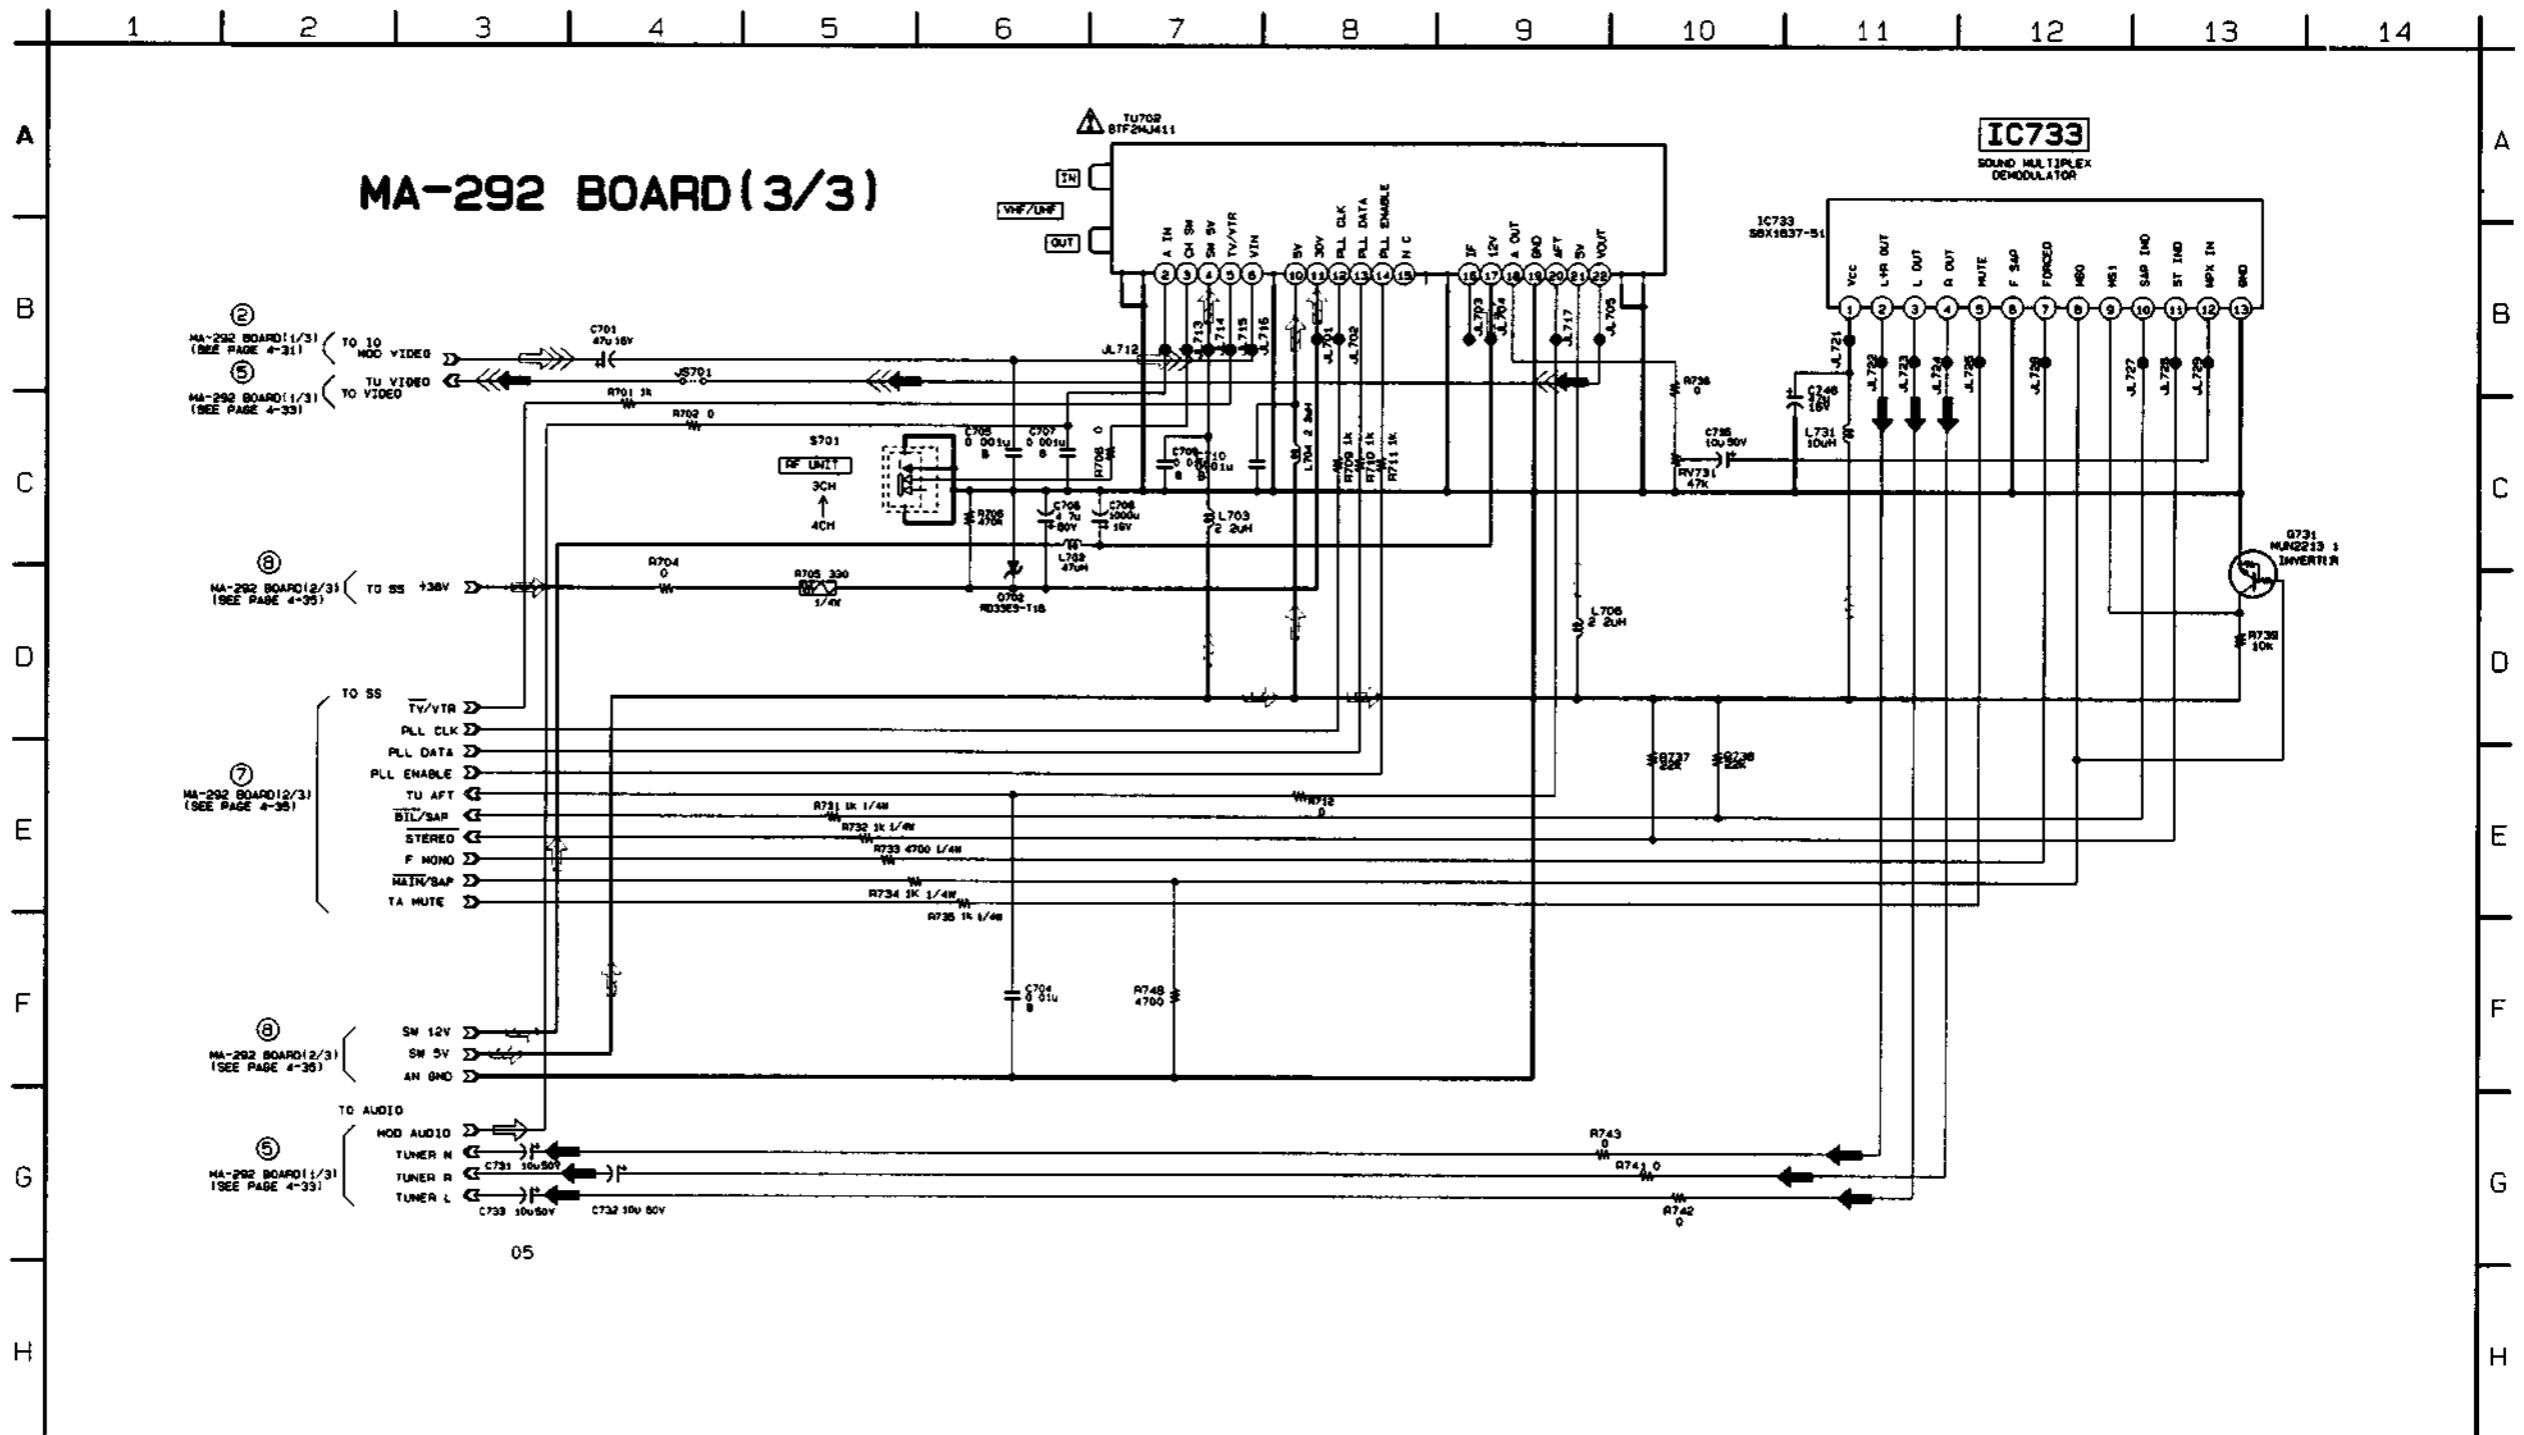



• Signal path

	VIDEO SIGNAL	AUDIO SIGNAL
	Y/CHROMA	
REC	➡➡➡	➡
PB	⋯➡	⇨

Note:
The components identified by mark Δ or dotted line with mark Δ are critical for safety. Replace only with part number specified.

Note:
Les composants identifiés par une marquée Δ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.



MA-292 (VIDEO, AUDIO, IO) SCHEMATIC DIAGRAM (SLV-775HF/776HF) • See page 4-39 to 4-41 for printed wiring board.
 - Ref. No.: MA-292 board; 2,000 series -

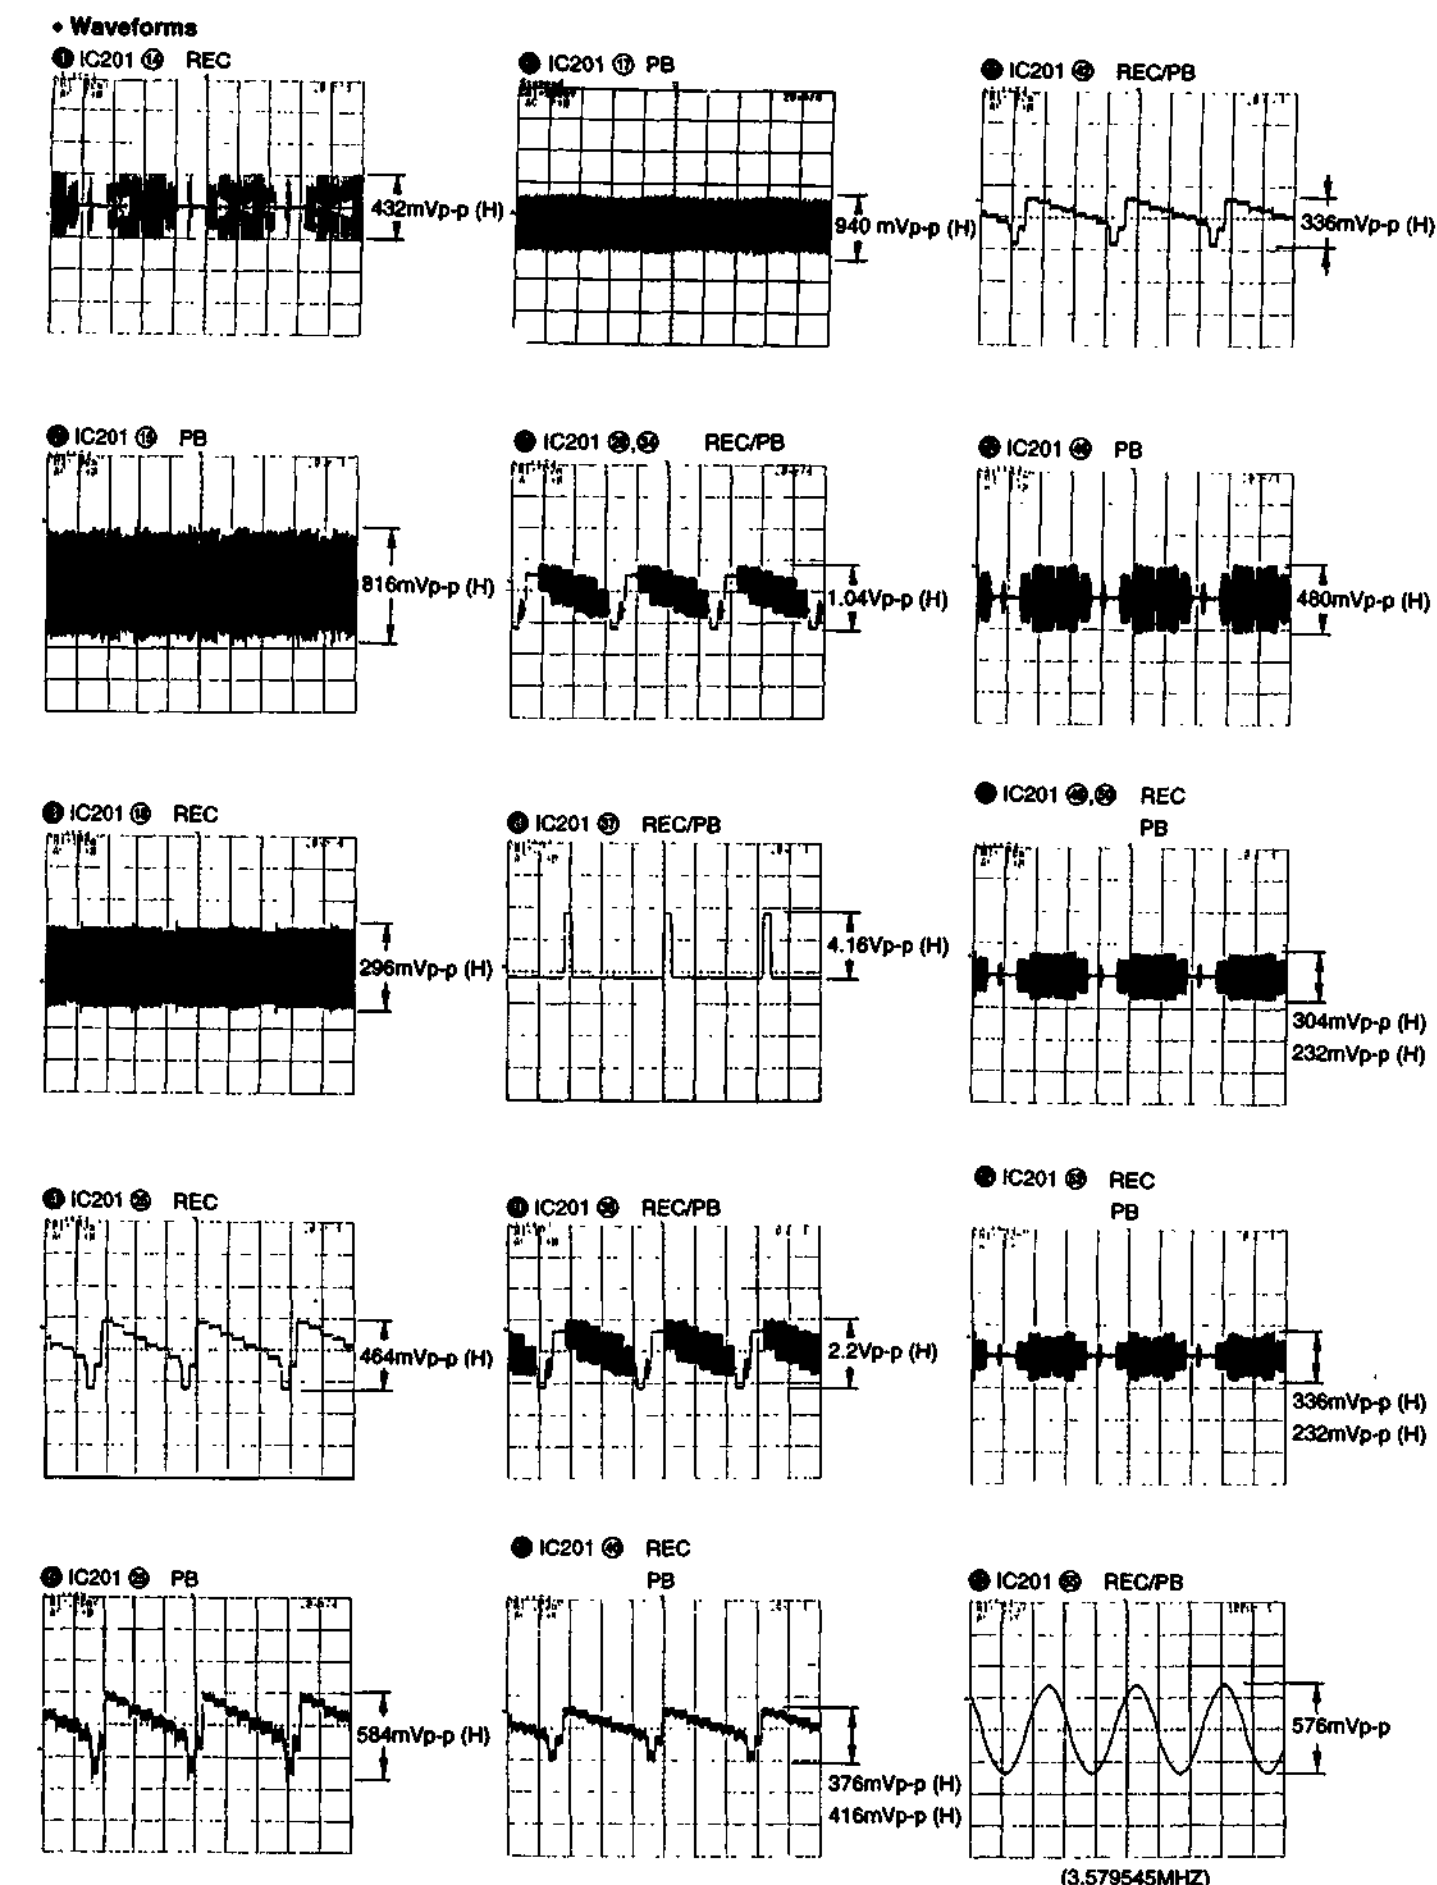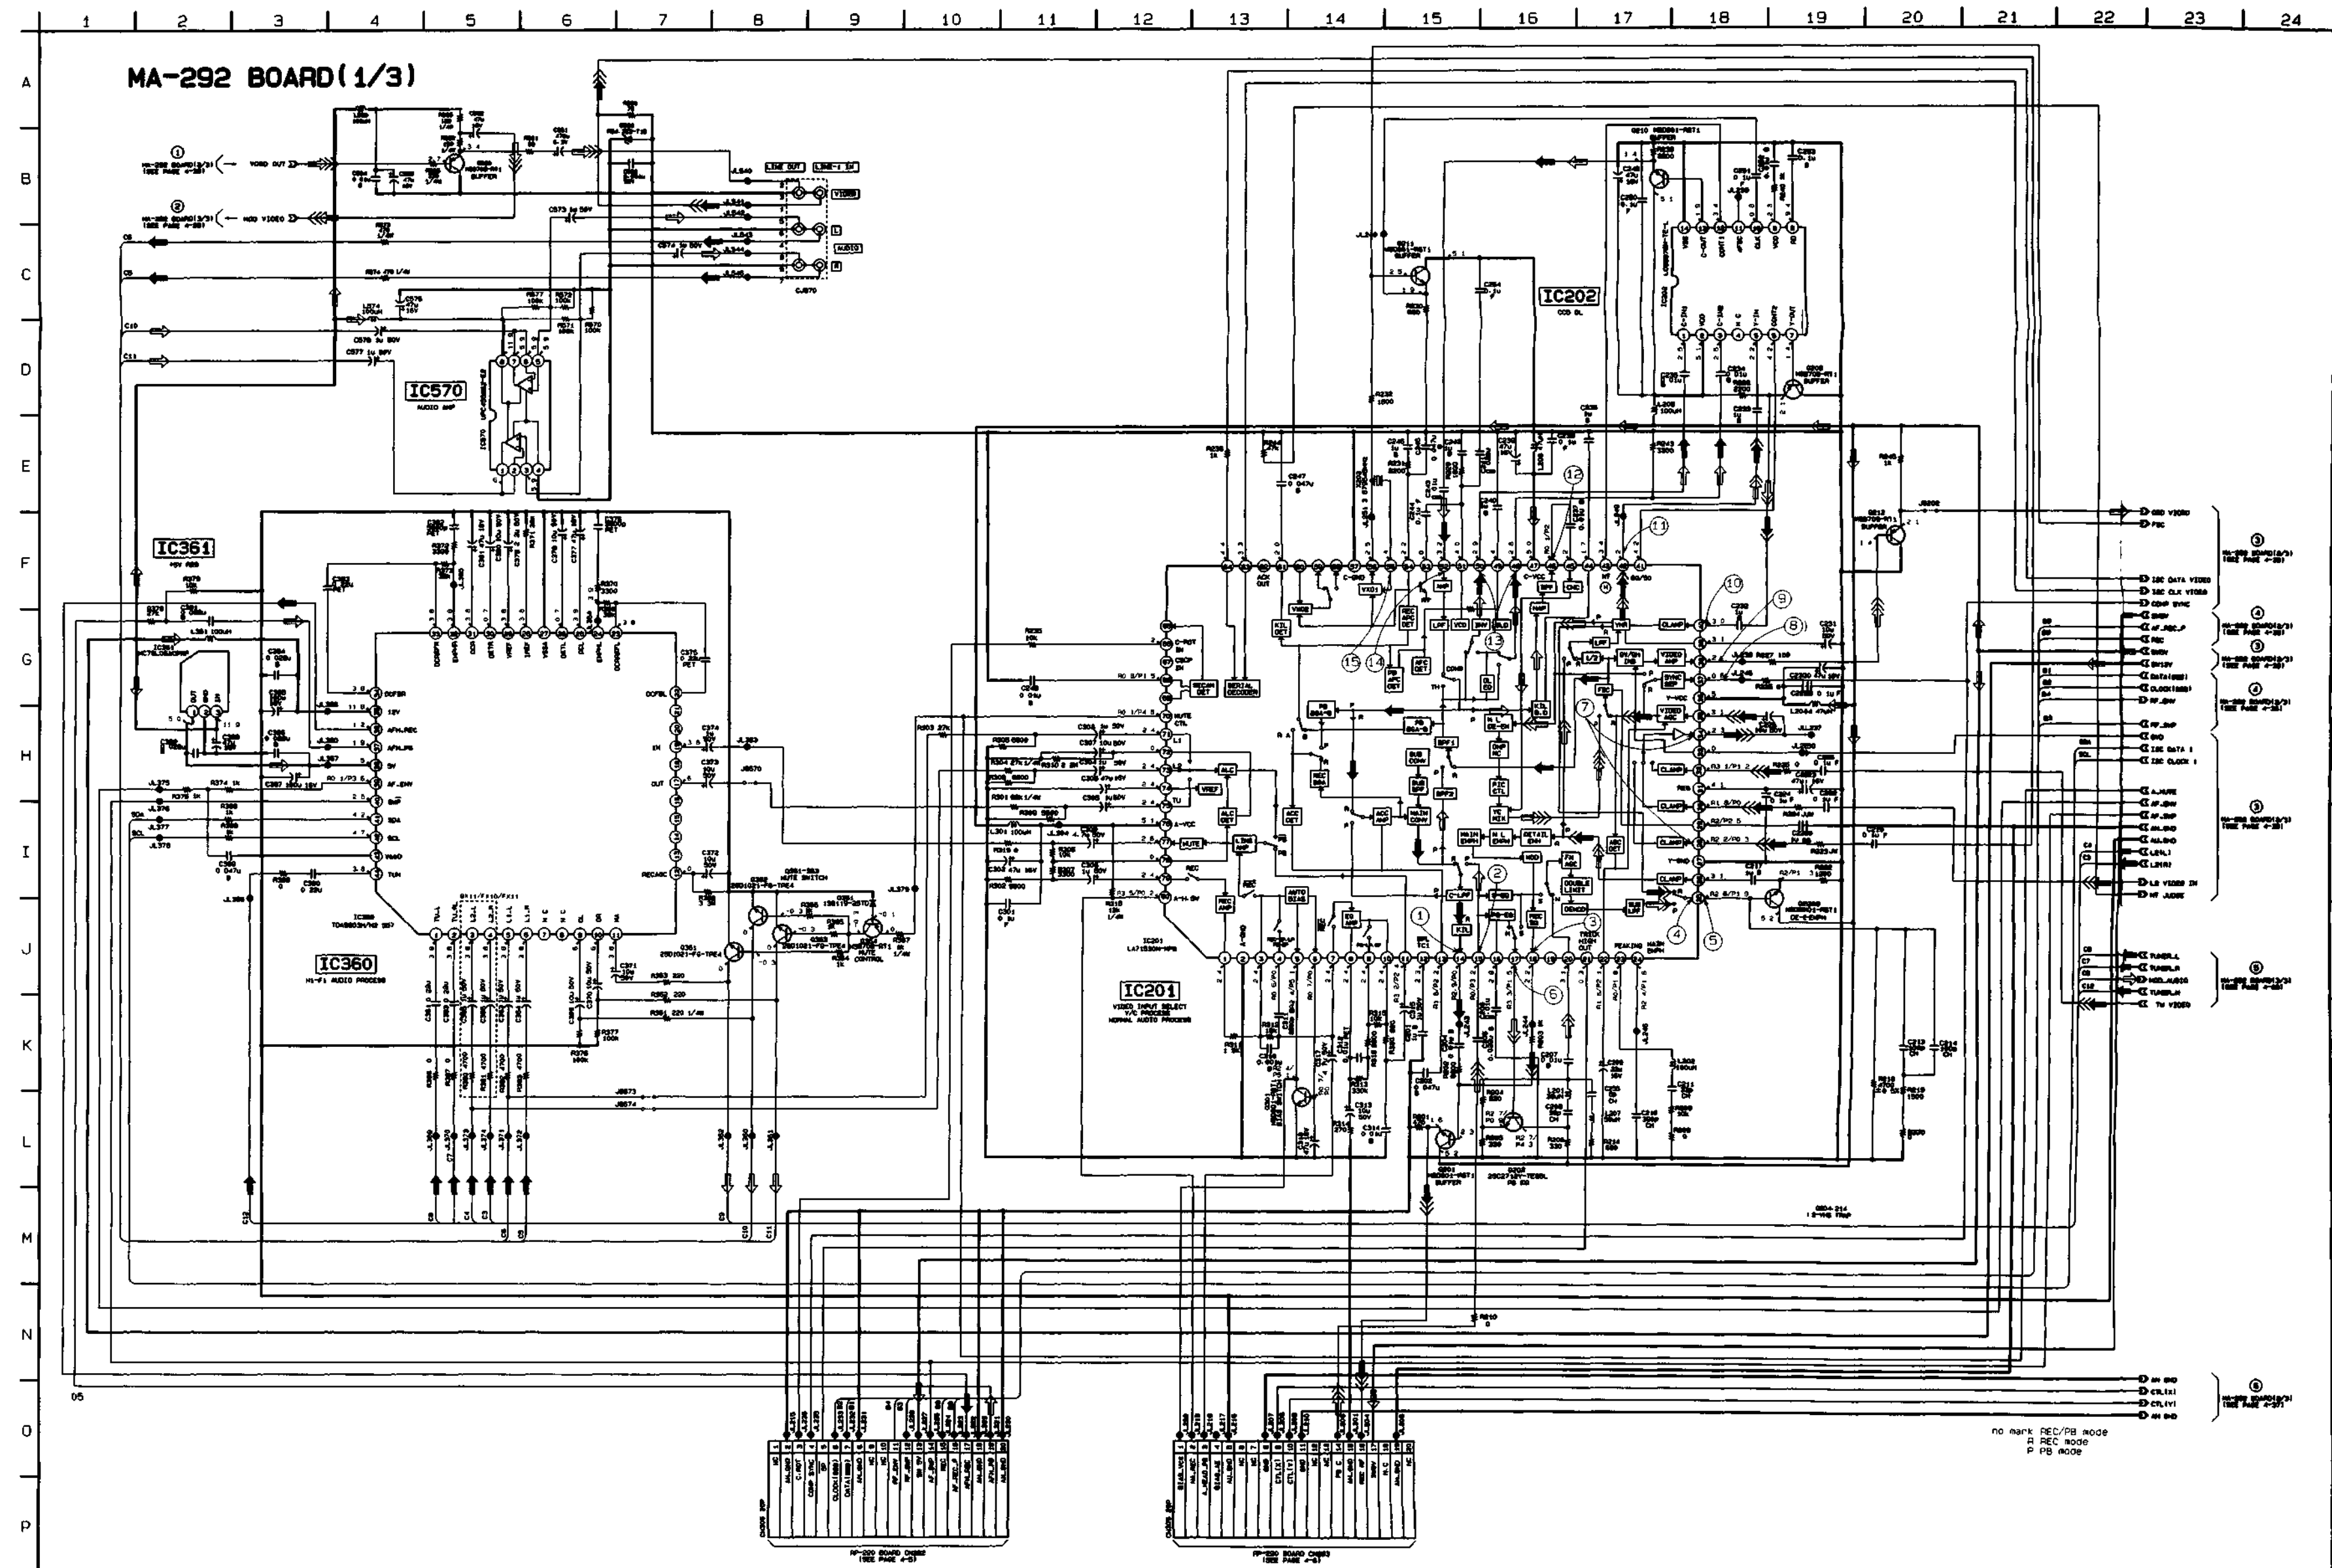

• Signal path

	VIDEO SIGNAL			AUDIO SIGNAL
	CHROMA	Y	Y/CHROMA	
REC	→	→	→	→
PB	→	→	→	→

MA-292 (SERVO/SYSTEM CONTROL) SCHEMATIC DIAGRAM (SLV-775HF/776HF)
 - Ref. No.: MA-292 board; 2,000 series -

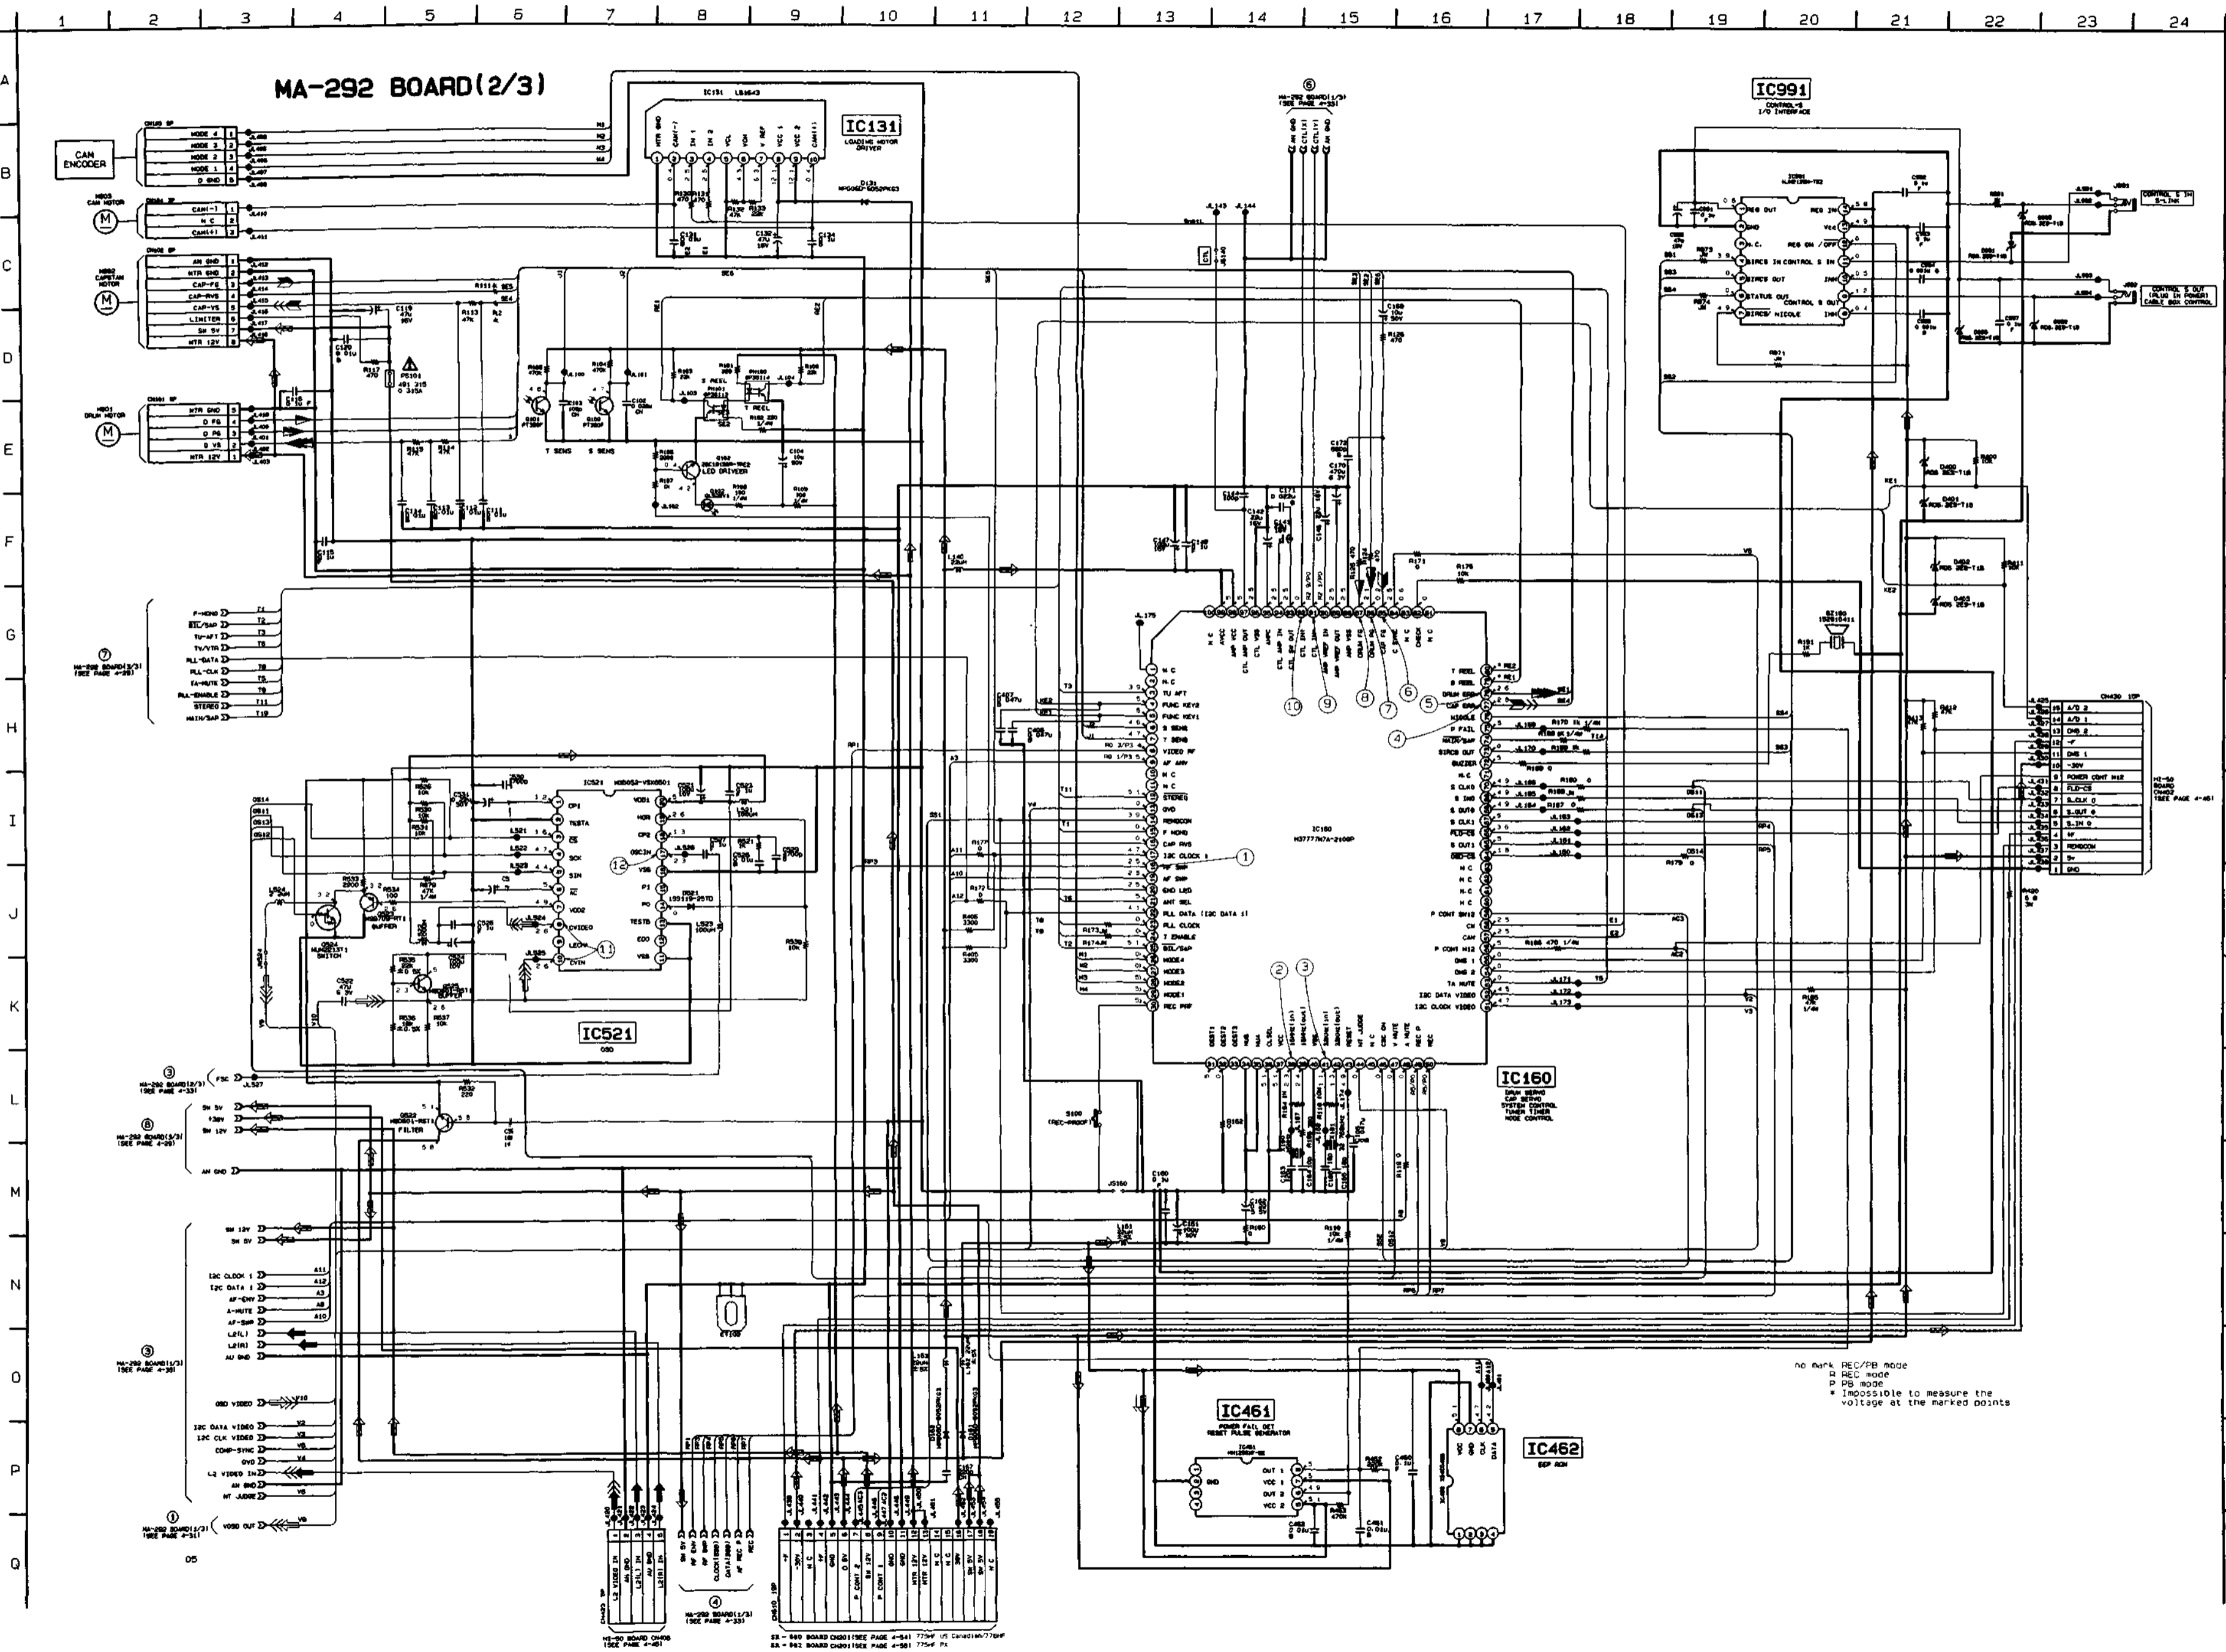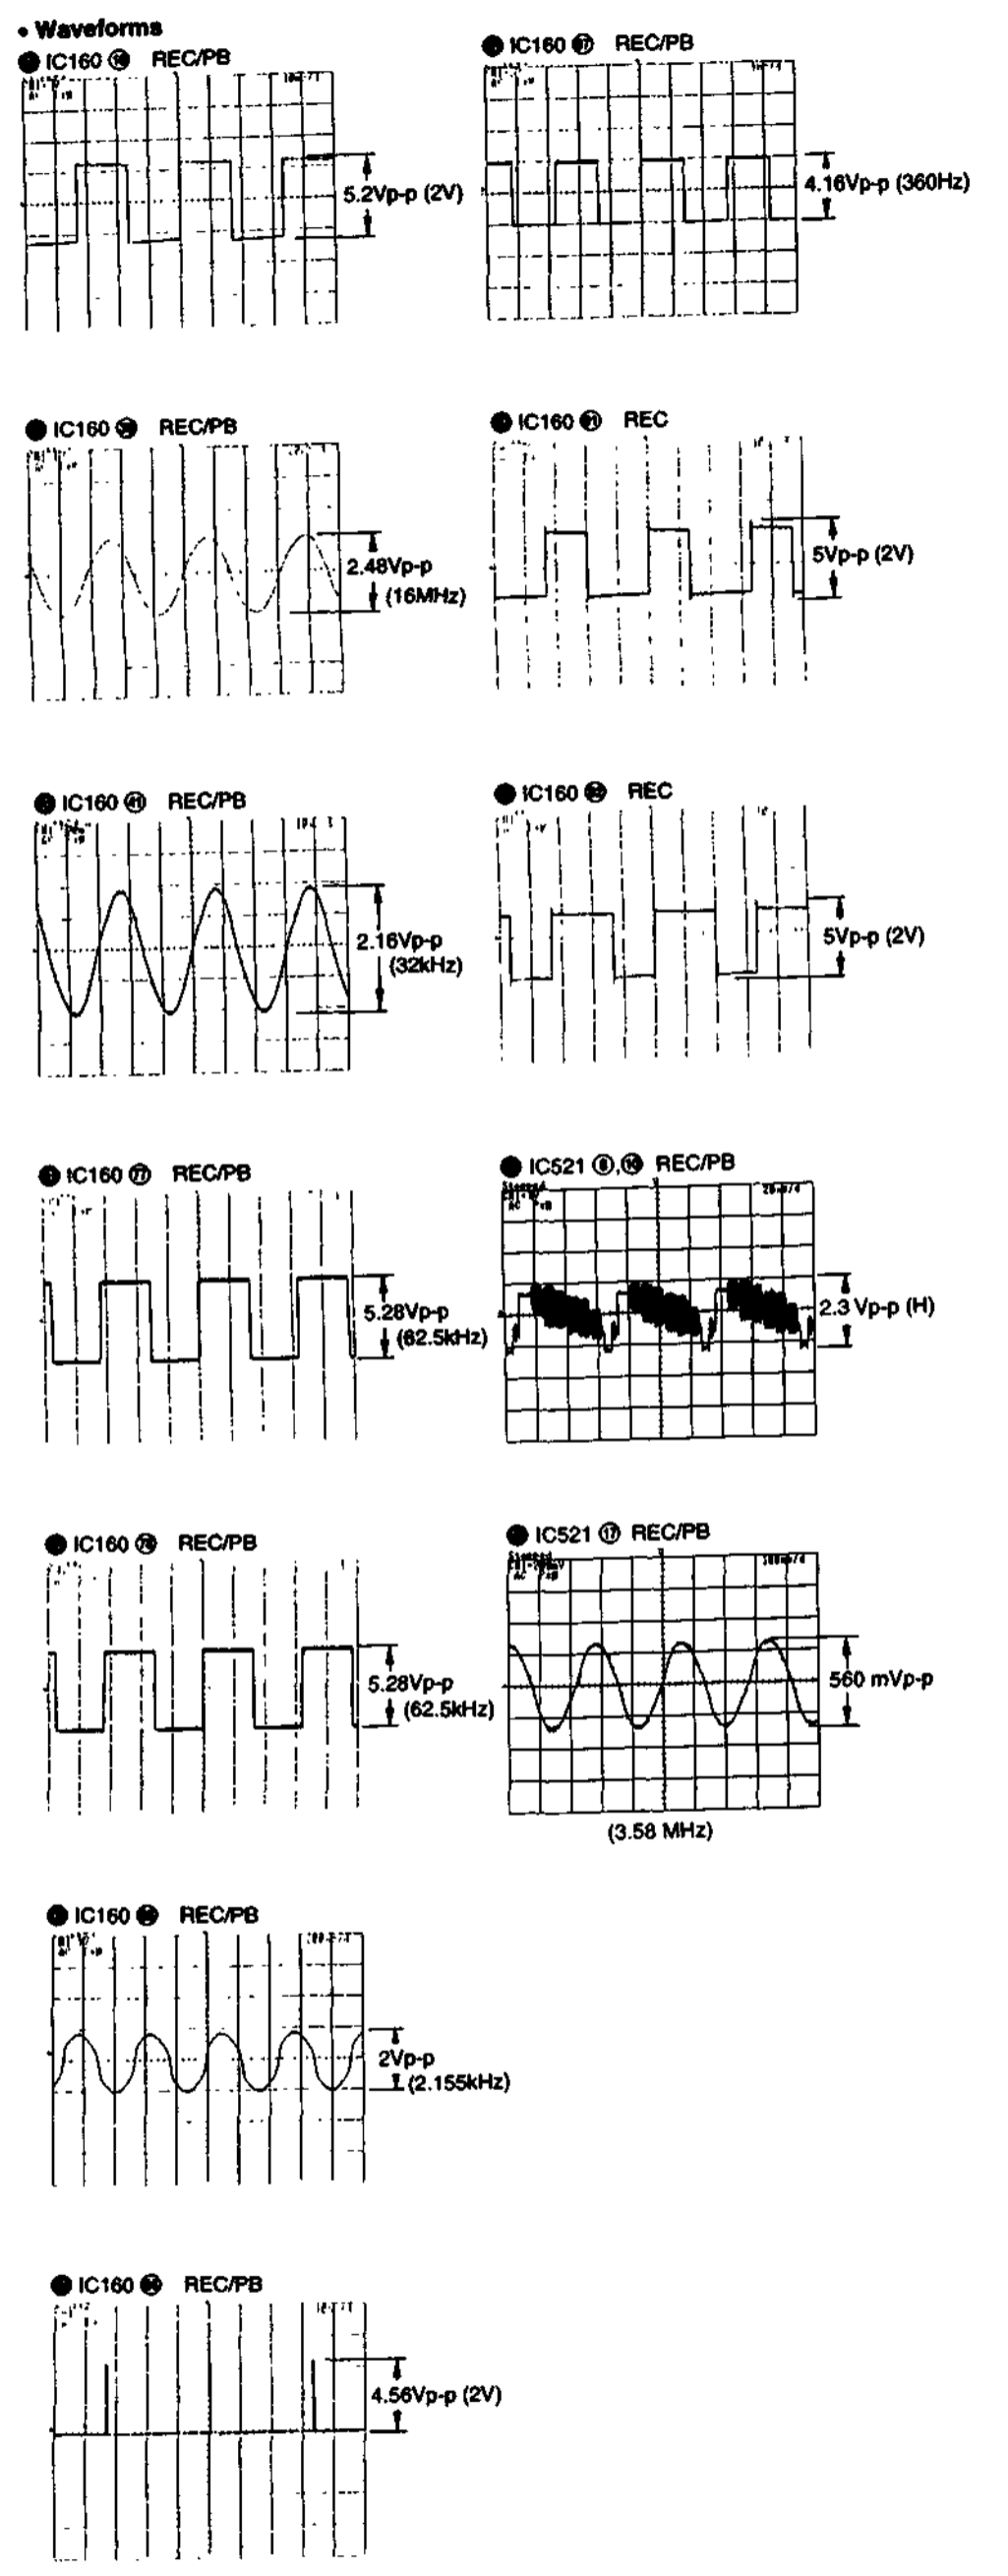

Note: The components identified by mark Δ or dotted line with mark Δ are critical for safety. Replace only with part number specified.

Note: Les composants identifiés par une marque Δ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

• Signal path


	VIDEO SIGNAL Y/CHROMA	AUDIO SIGNAL
REC	➡	➡
PB	➡	➡

• Signal path

	REC	REC/PB	PB
Drum speed servo		➡	
Drum phase servo		➡	
Drum servo (speed and phase)		➡	
Capstan speed servo		➡	
Capstan servo (speed and phase)		➡	
Ref. signal	➡		➡

MA-292 (SERVO/SYSTEM CONTROL, VIDEO, AUDIO, IO, TUNER) PRINTED WIRING BOARD (SLV-775HF/776HF)
 - Ref. No.: MA-292 board; 2,000 series -

There are few cases that the part isn't mounted in this model is printed on this diagram.

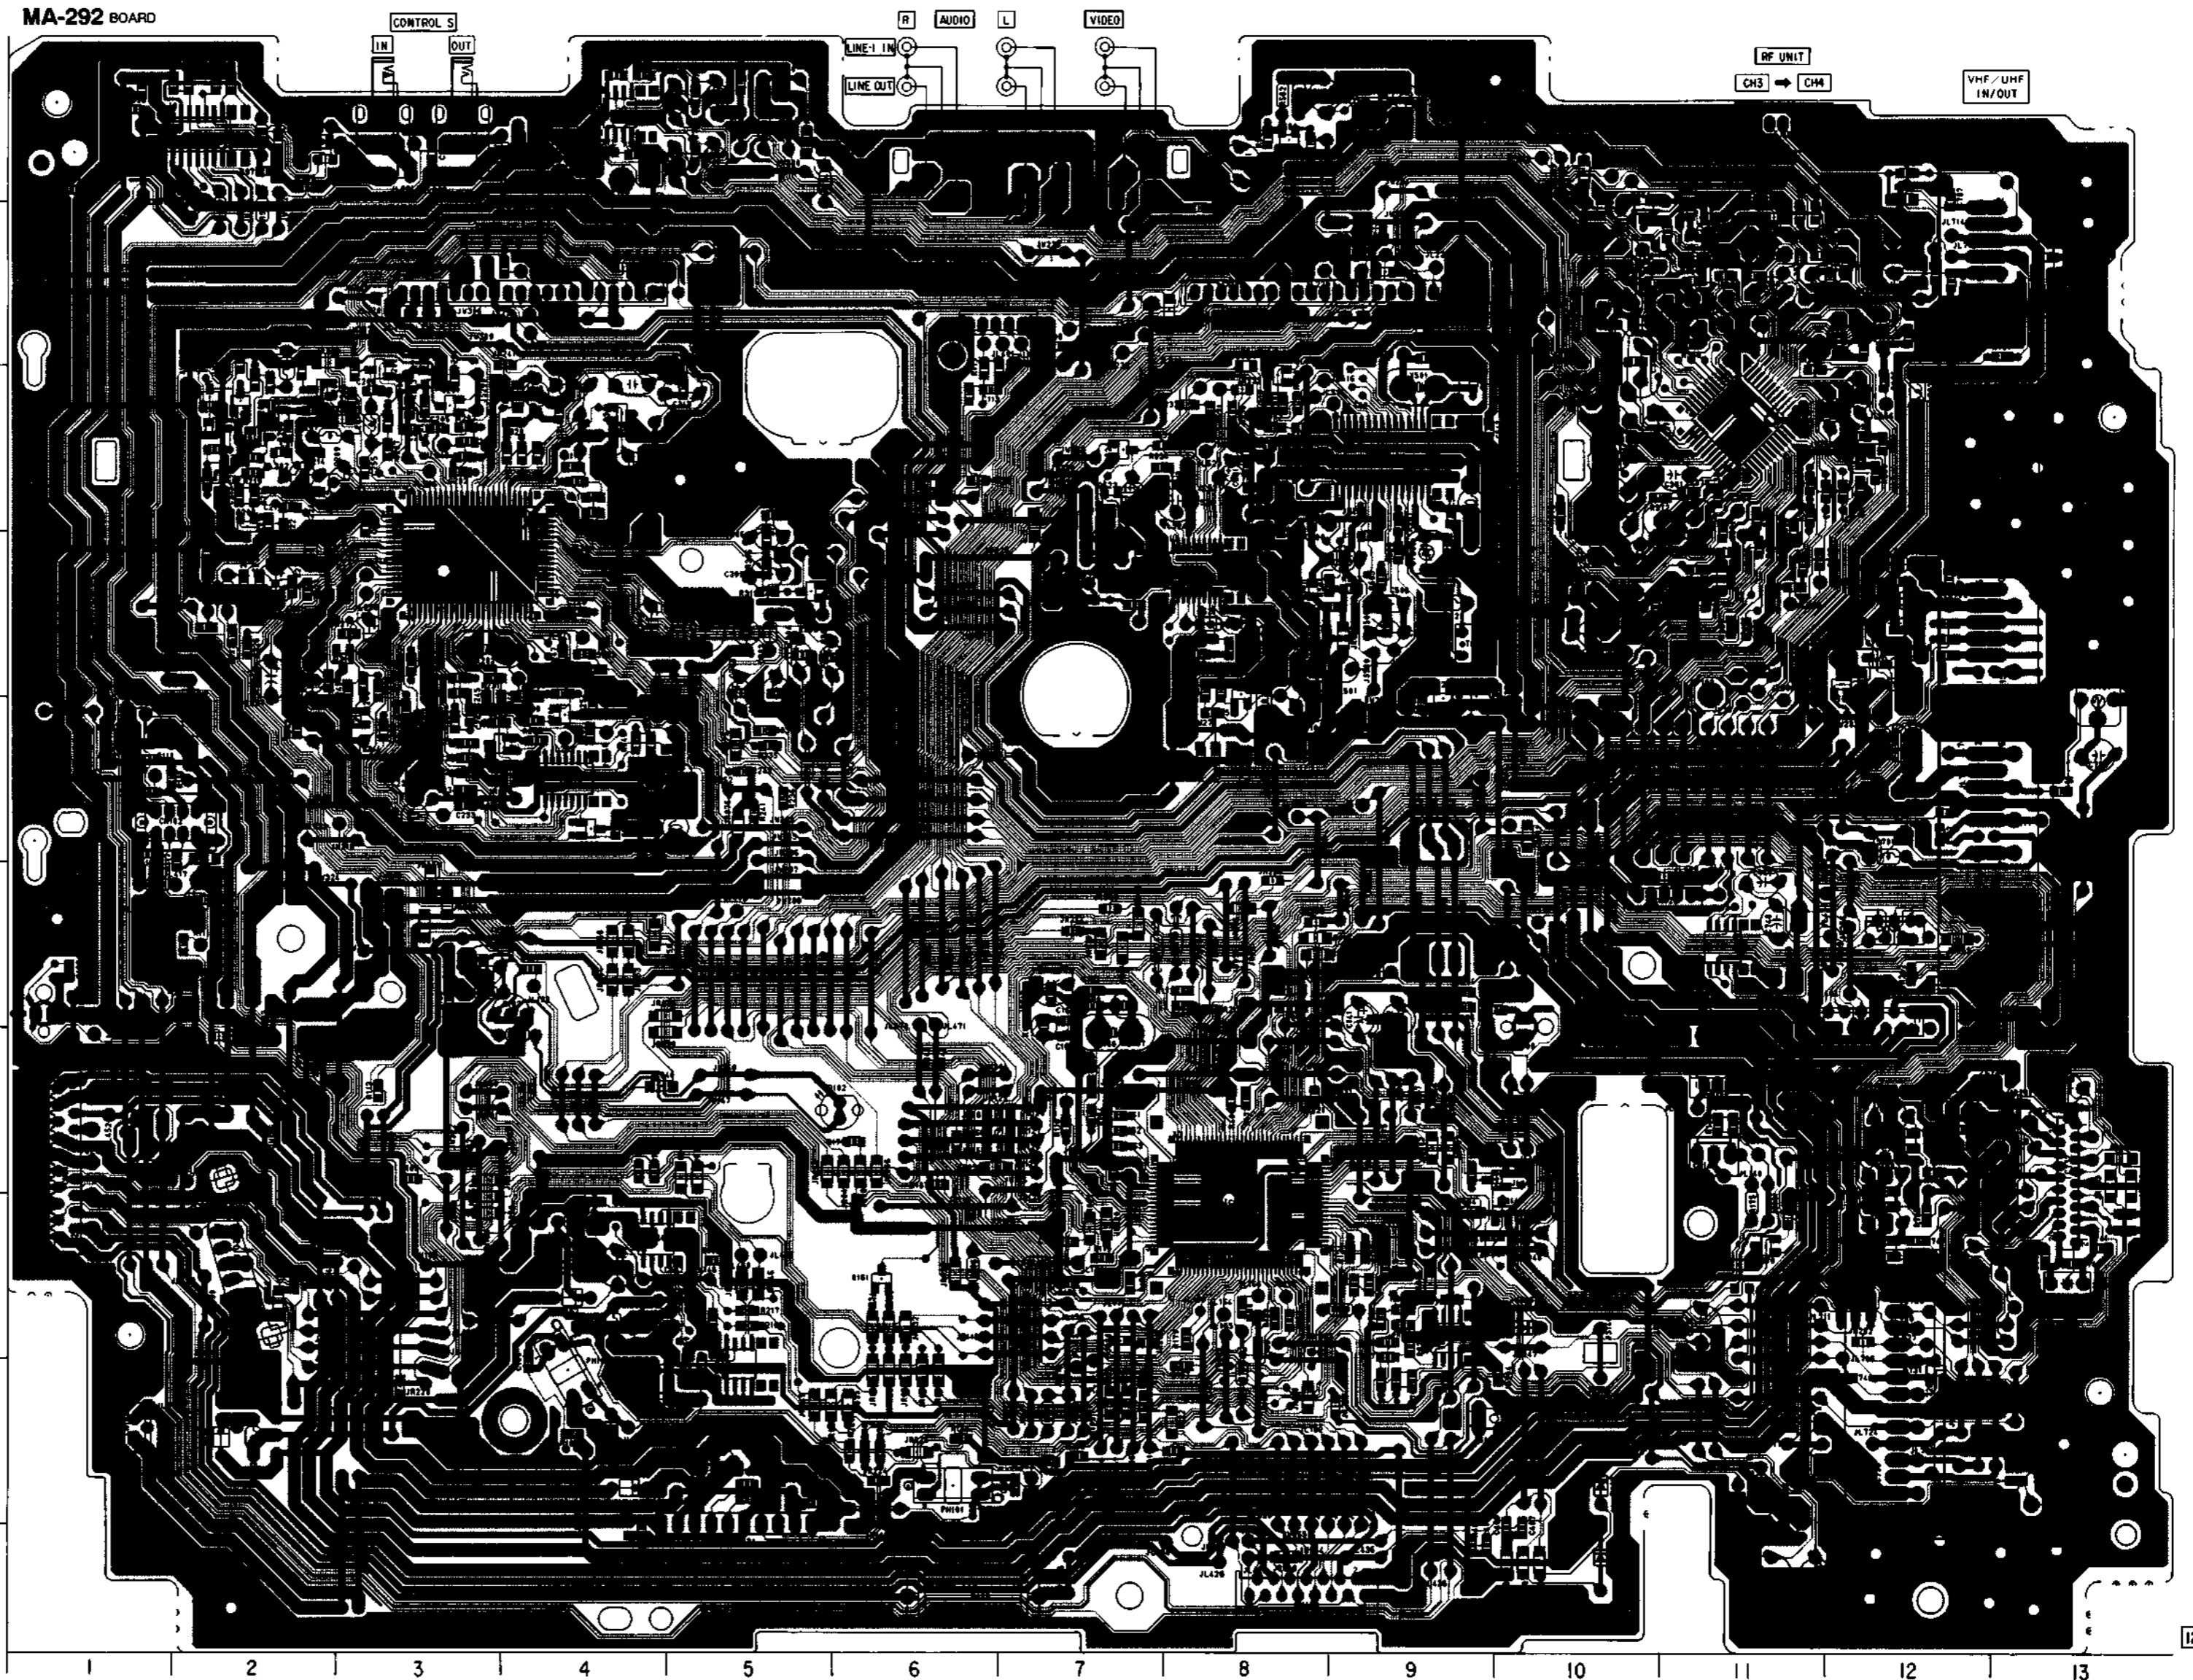


- MA-292 BOARD**
- CN101 B-7
 - CN102 E-2
 - CN103 H-2
 - CN104 I-1
 - CN305 B-4
 - CN306 B-8
 - CN423 F-11
 - CN430 J-8
 - CN610 G-1

 - D102 G-6
 - D131 I-4
 - D181 I-2
 - D182 H-4
 - D381 B-11
 - D400 I-10
 - D401 I-11
 - D402 J-10
 - D403 H-10
 - D521 D-8
 - D560 A-8
 - D702 D-12
 - D991 A-2
 - D992 A-3
 - D993 A-4
 - D995 A-2



 - IC131 J-5
 - IC180 H-8
 - IC201 D-3
 - IC202 E-4
 - IC380 C-11
 - IC381 D-10
 - IC481 H-4
 - IC482 I-5
 - IC521 D-8
 - IC570 A-4
 - IC733 I-12
 - IC991 A-2

 - Q100 F-10
 - Q101 F-1
 - Q102 F-4
 - Q201 C-3
 - Q202 C-3
 - Q206 C-2
 - Q208 E-4
 - Q210 E-4
 - Q211 E-4
 - Q212 D-3
 - Q301 C-4
 - Q381 B-11
 - Q382 B-11
 - Q383 B-11
 - Q384 B-10
 - Q522 D-9
 - Q523 C-7
 - Q524 C-7
 - Q525 D-8
 - Q580 A-8
 - Q731 G-12


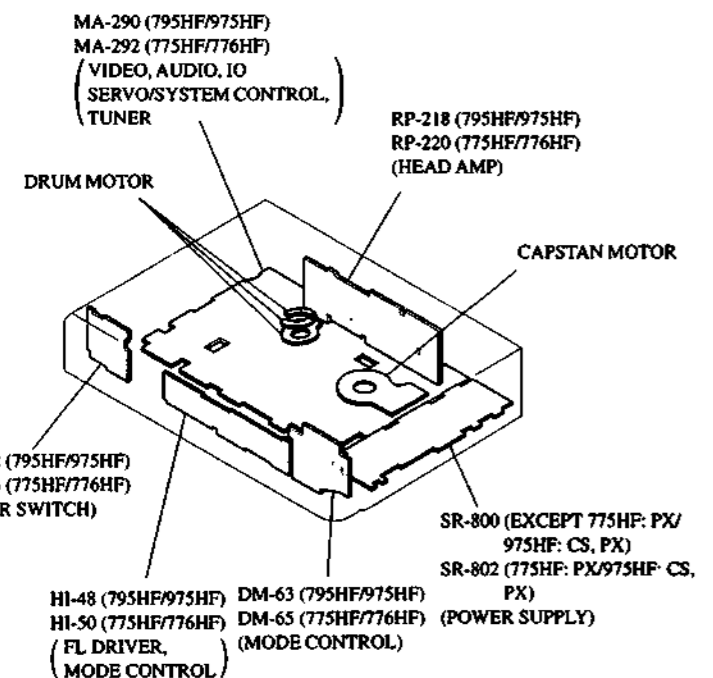


DM-63 (MODE CONTROL), HI-48 (FL DRIVER), MF-302 (POWER SWITCH) PRINTED WIRING BOARDS (SLV-795HF/975HF)
 - Ref. No.: DM-63 board, HI-48 board, MF-302 board; 3,000 series -

There are few cases that the part isn't mounted in this model is printed on this diagram.

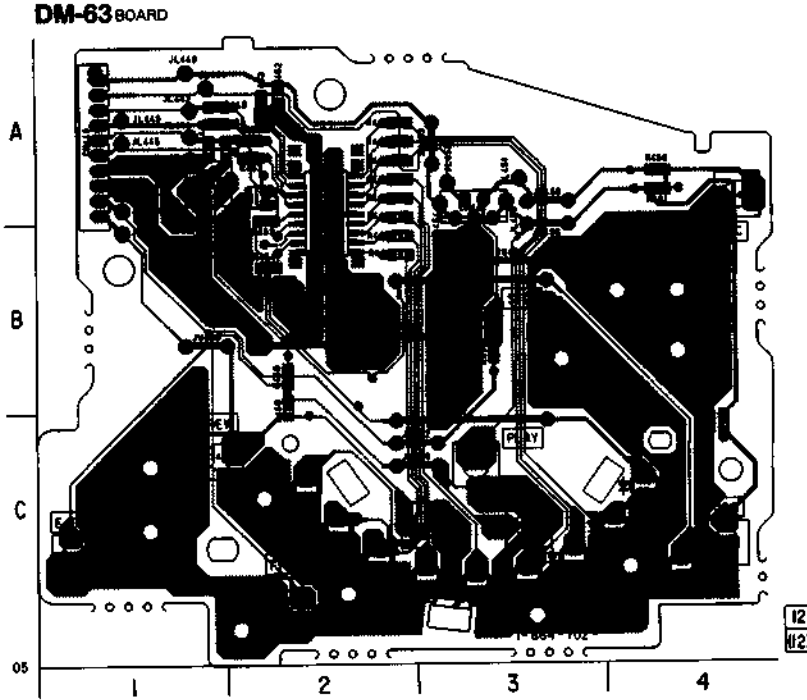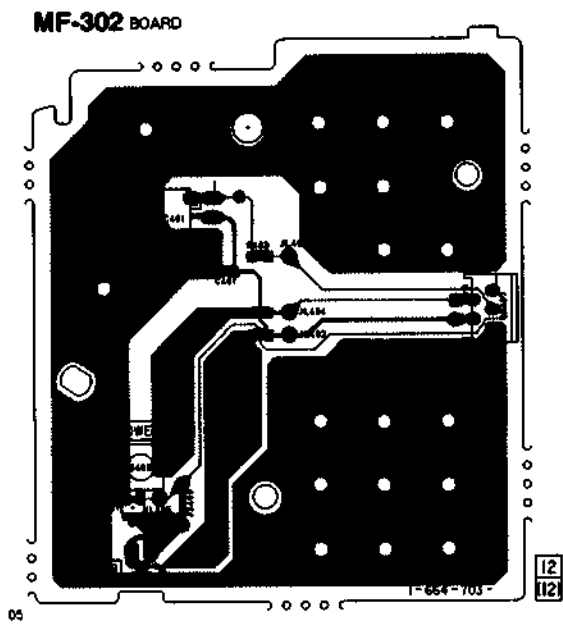


- DM-63 BOARD**
- CN440 A-1
 - CN441 A-3
 - D440 C-2
 - D441 C-2
 - D442 C-2
 - D443 C-3
 - D444 C-3
 - D445 C-3
 - D446 C-3
 - D447 C-4
 - D448 C-4
 - D449 C-4
 - IC440 A-2
 - Q440 A-2

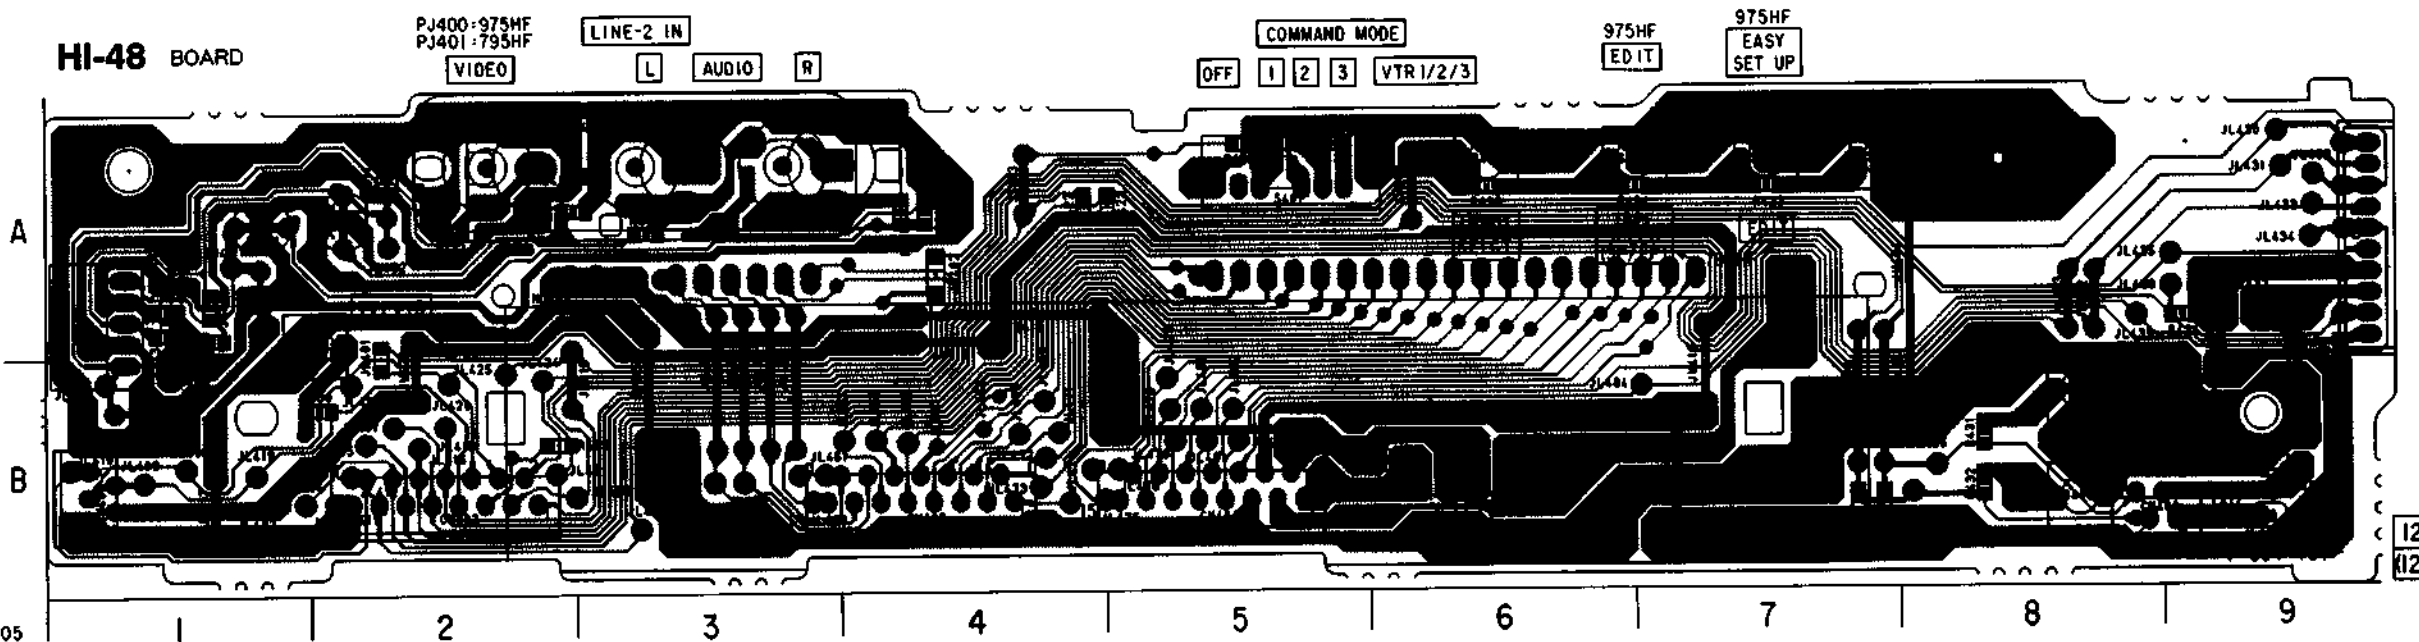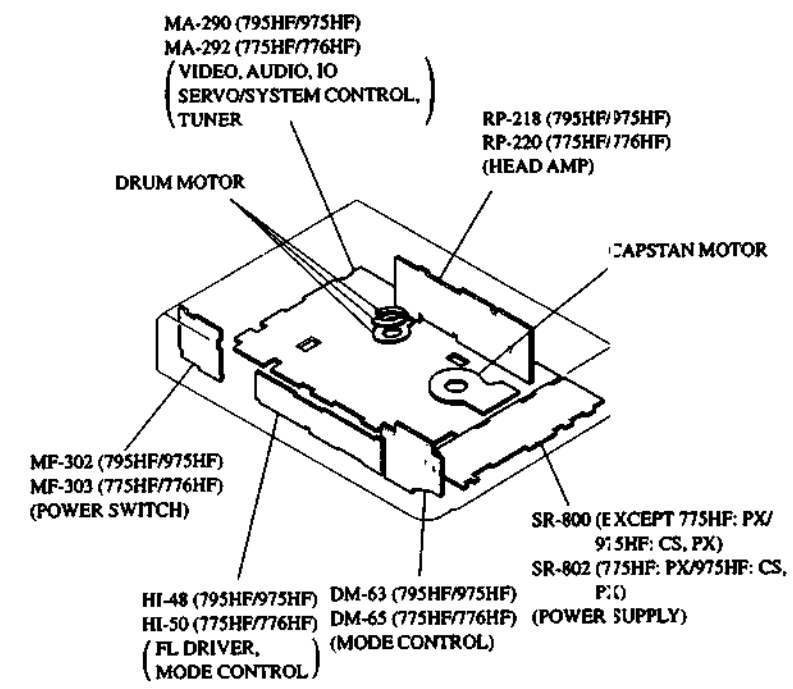


- HI-48 BOARD**
- CN400 B-6
 - CN401 A-9
 - CN402 B-2
 - CN403 B-4
 - CN404 B-5
 - CN405 A-1
 - CN406 B-1
 - D410 A-1
 - D411 A-2
 - D412 A-1
 - D413 B-1
 - D420 B-6

DM-63 (MODE CONTROL), HI-48 (FL DRIVER), MF-302 (POWER SWITCH) SCHEMATIC DIAGRAM (SLV-795HF/975HF)





- Ref. No.: DM-63 board, HI-48 board, MF-302 board; 3,000 series -

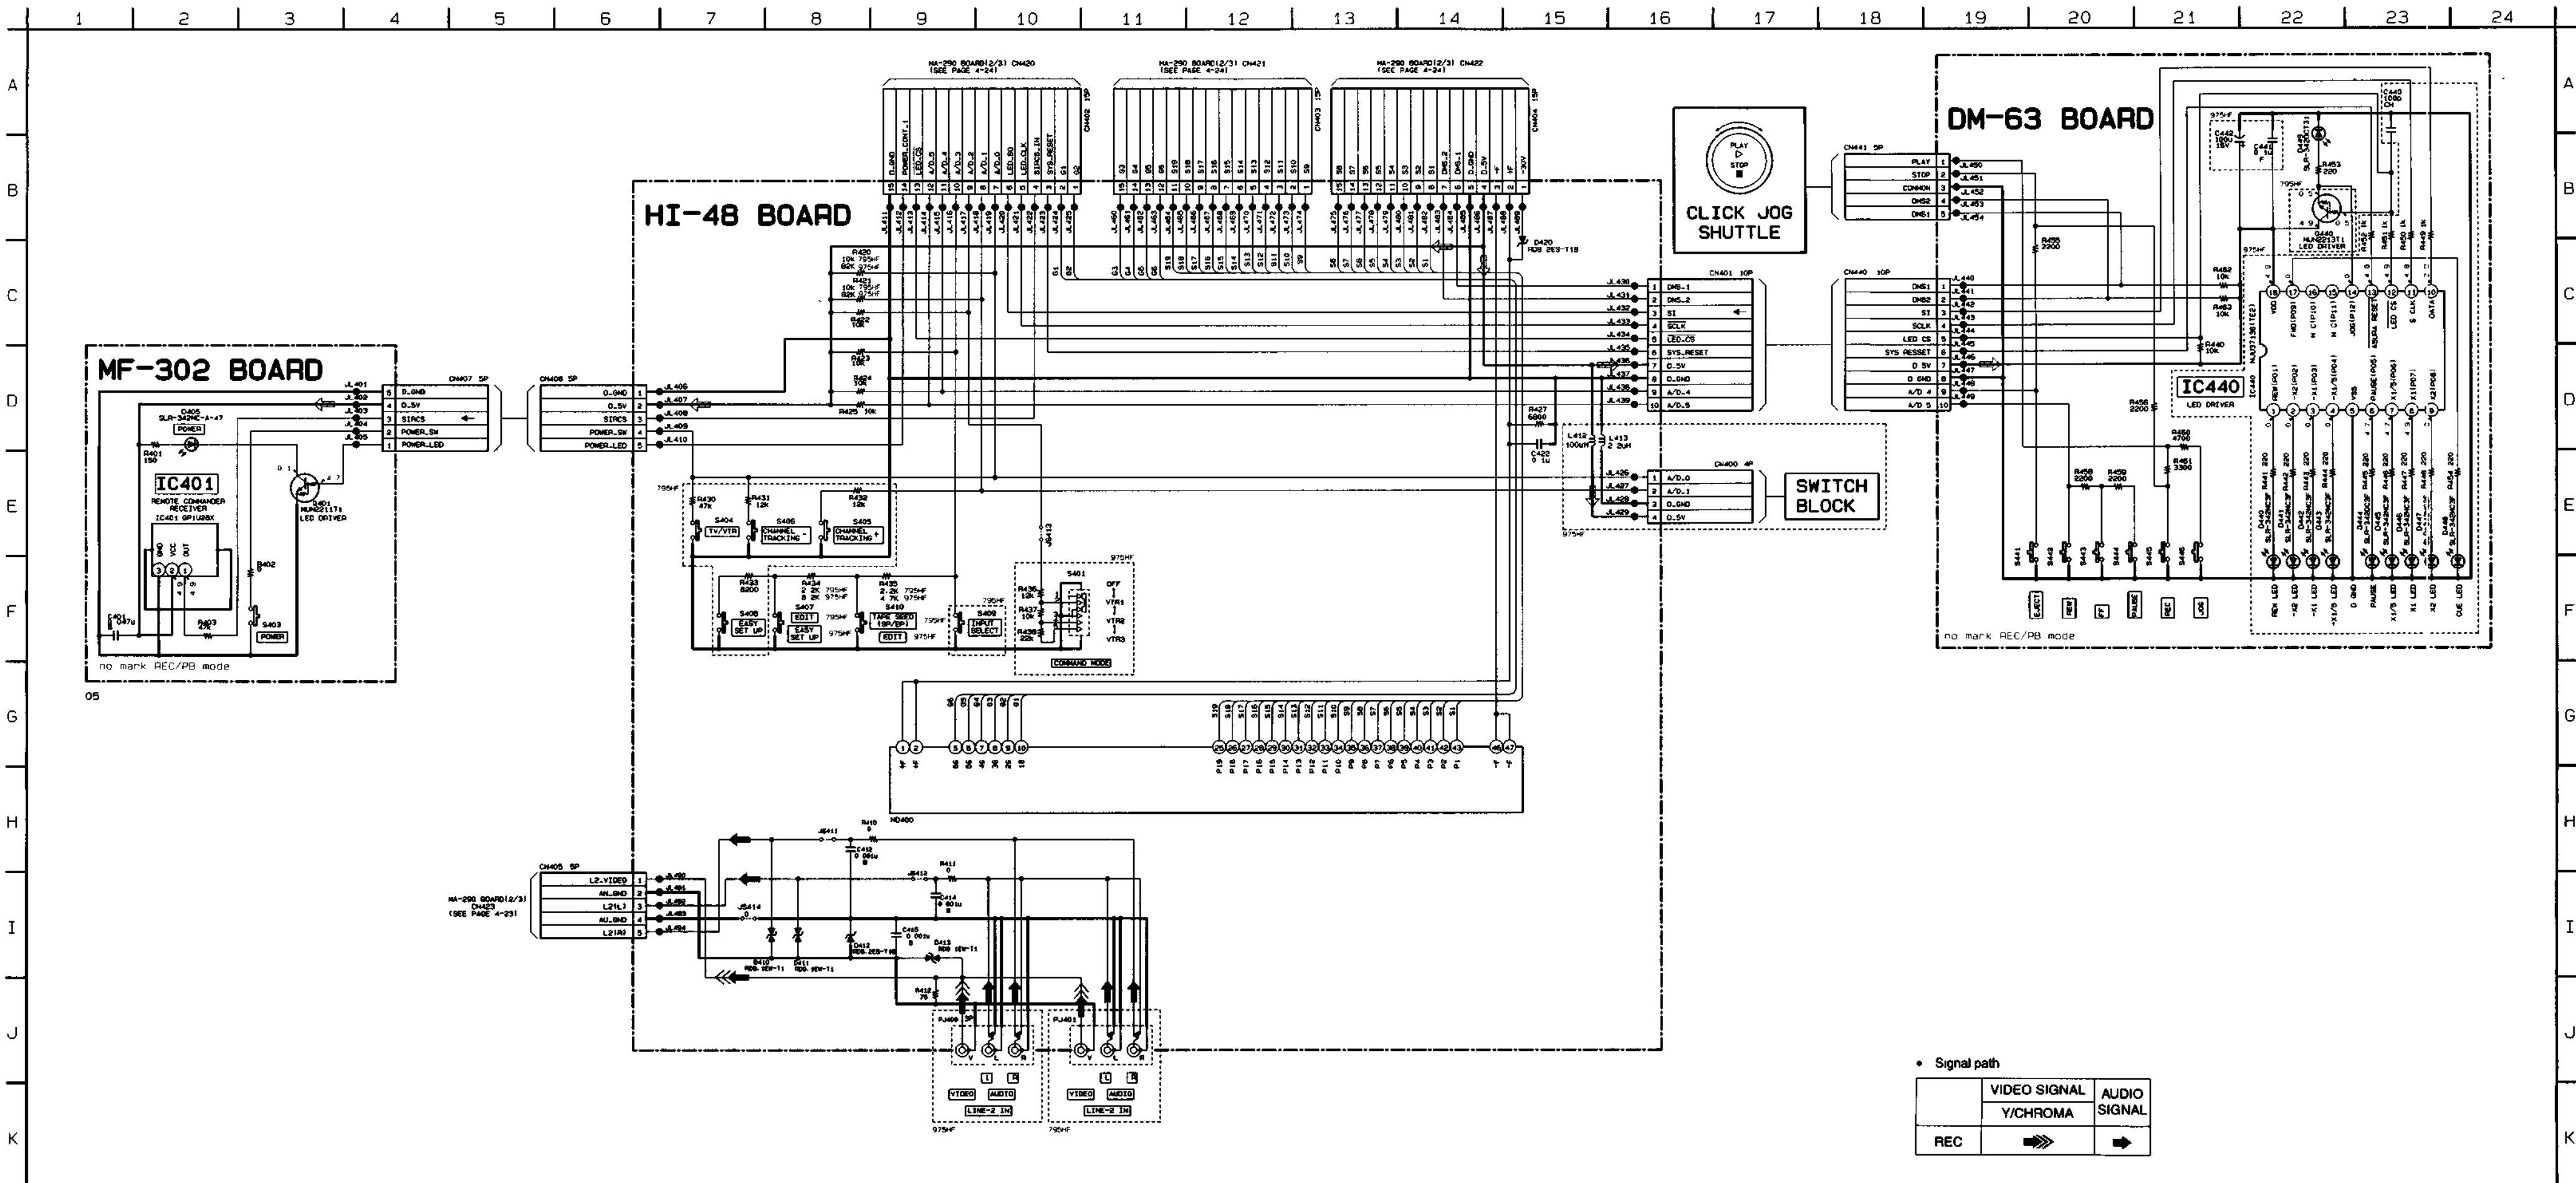

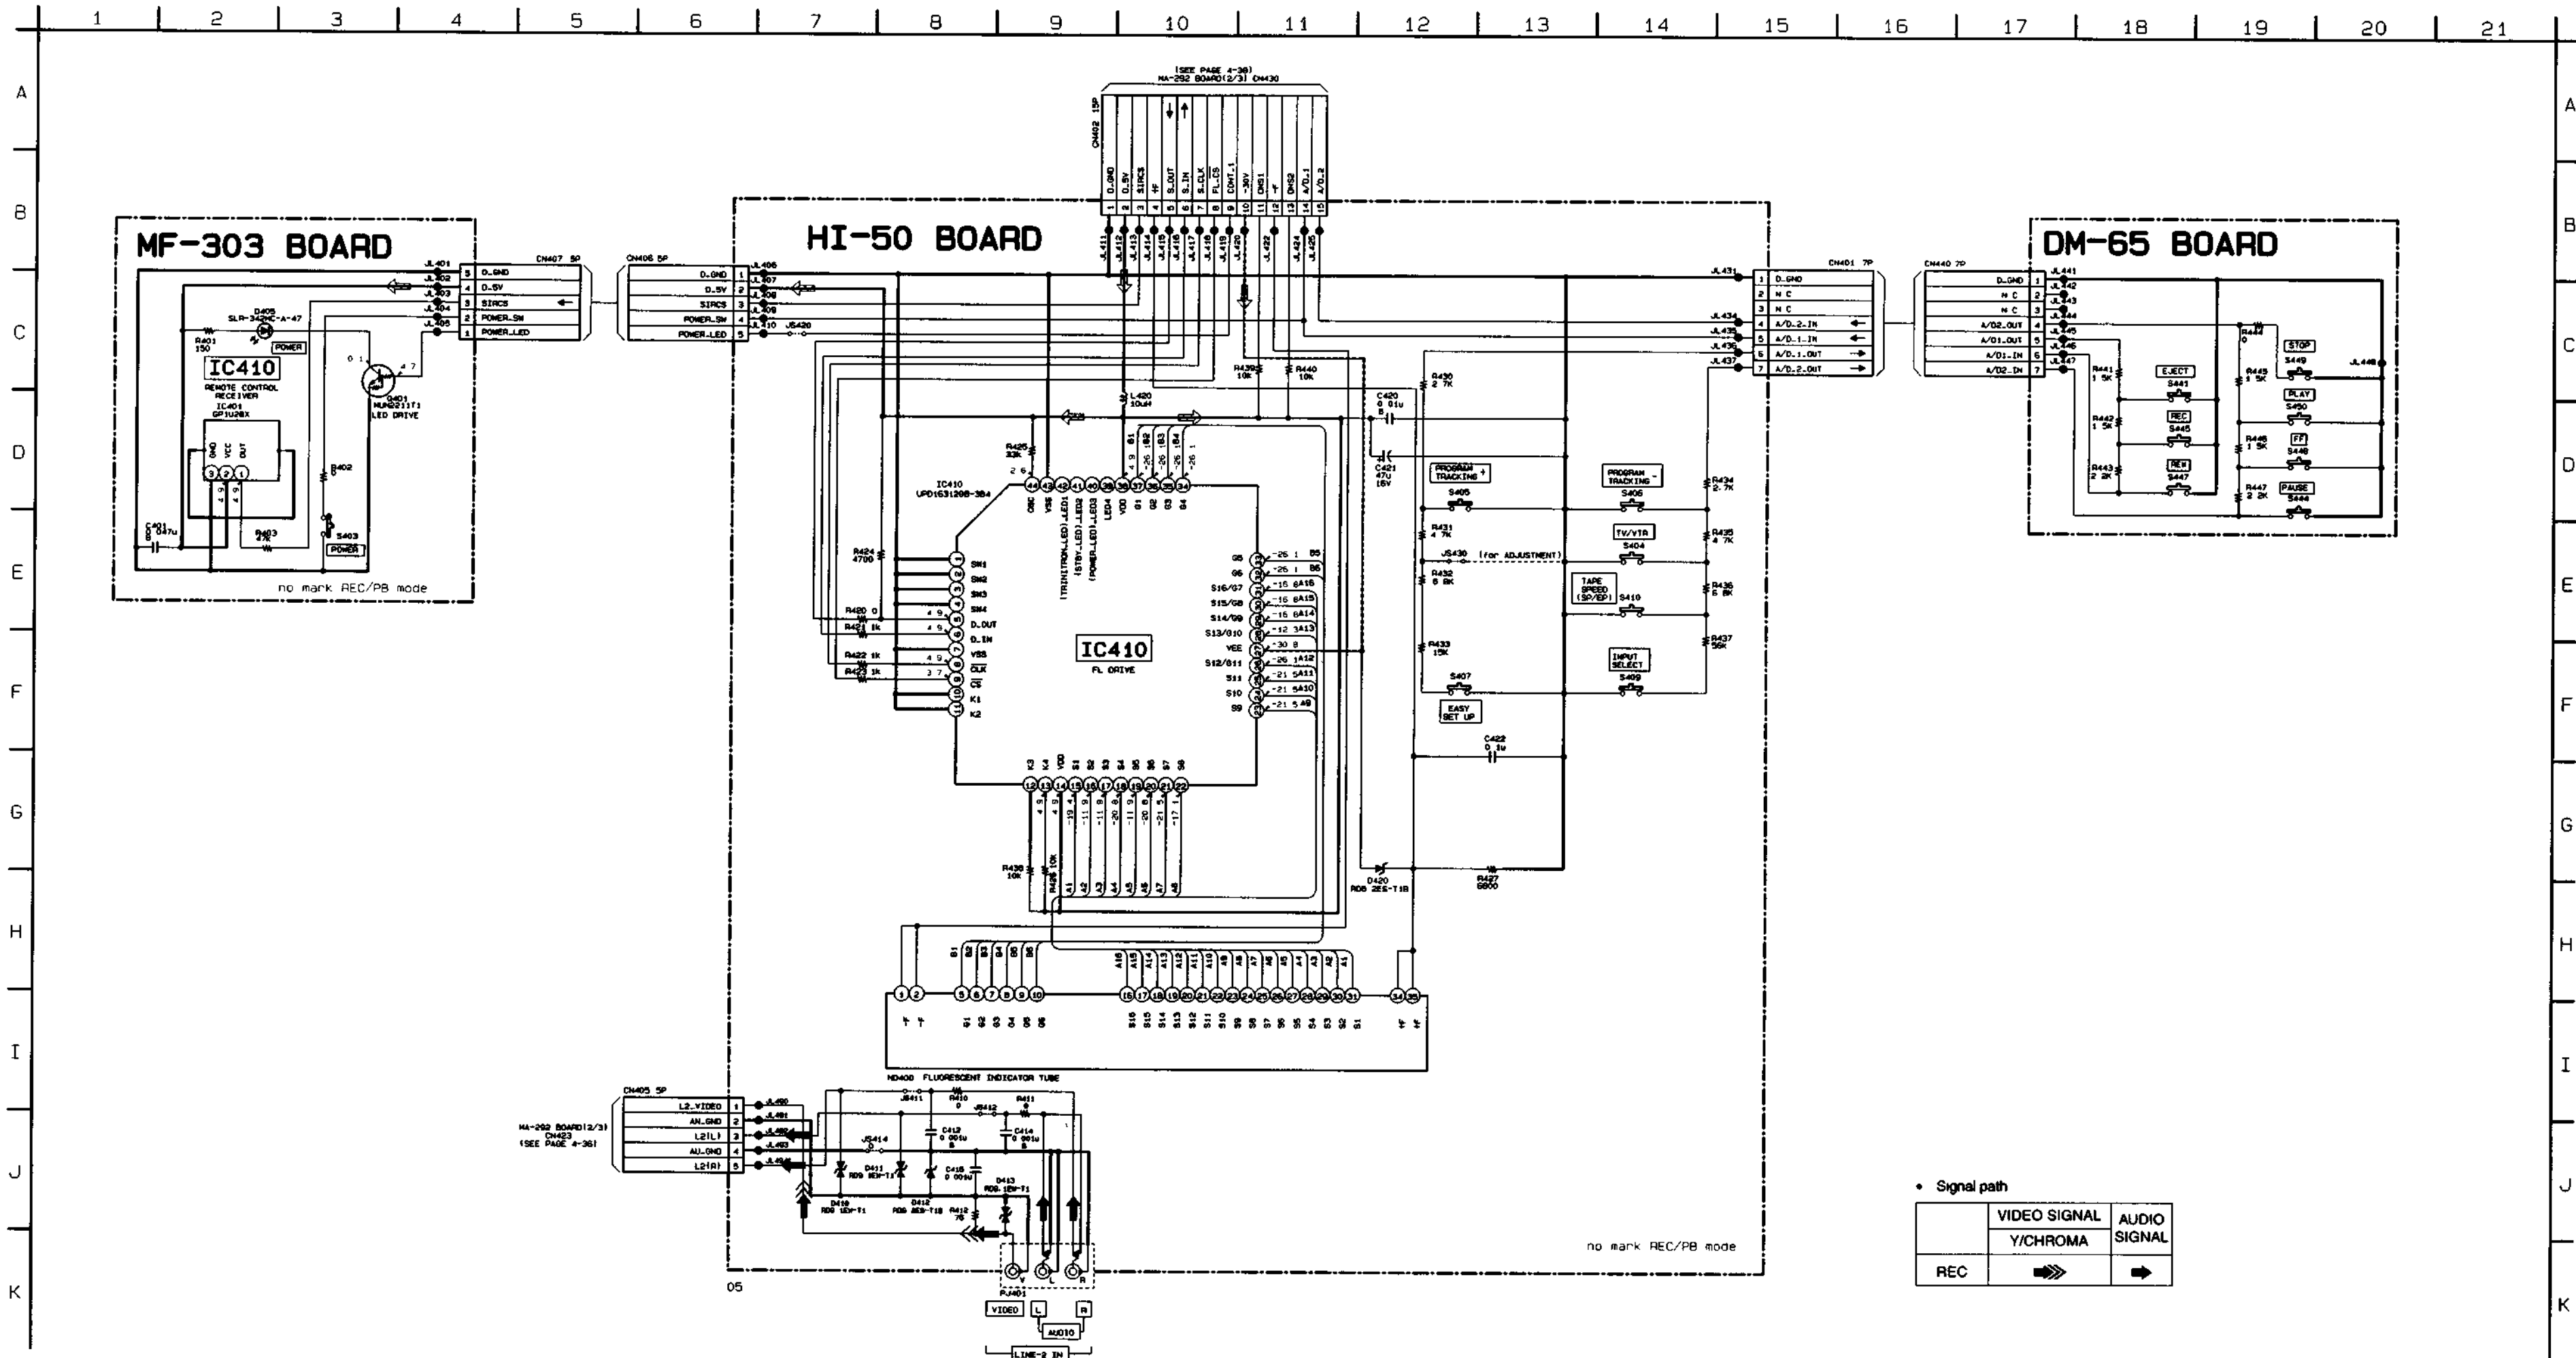

DM-65 (MODE CONTROL), HI-50 (FL DRIVER), MF-303 (POWER SWITCH) PRINTED WIRING BOARDS (SLV-775HF/776HF)
 - Ref. No.: DM-65 board, HI-50 board, MF-303 board; 1,000 series -

There are few cases that the part isn't mounted in this model is printed on this diagram.

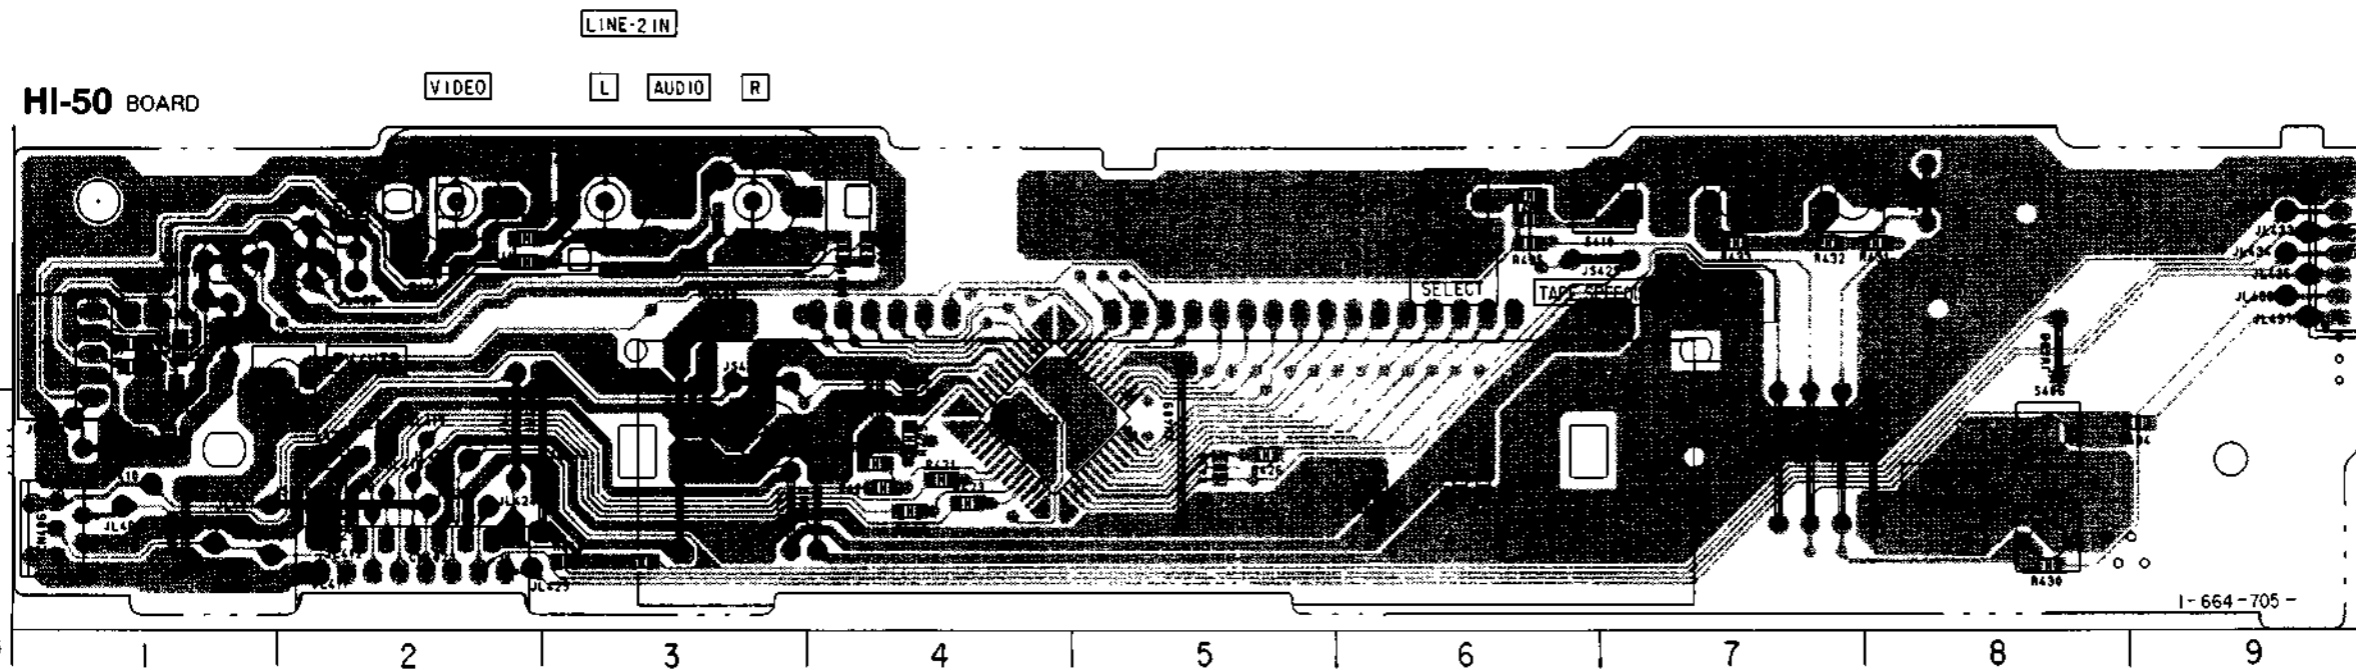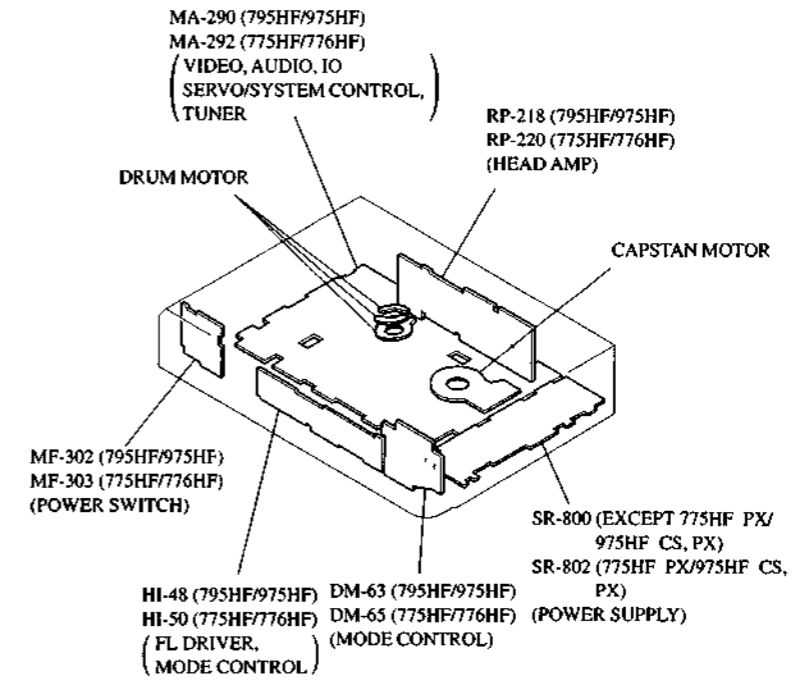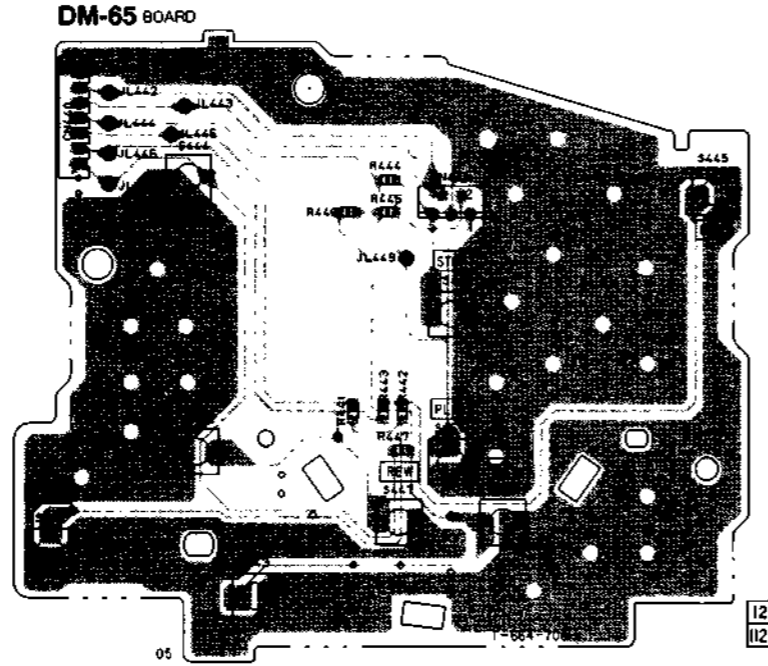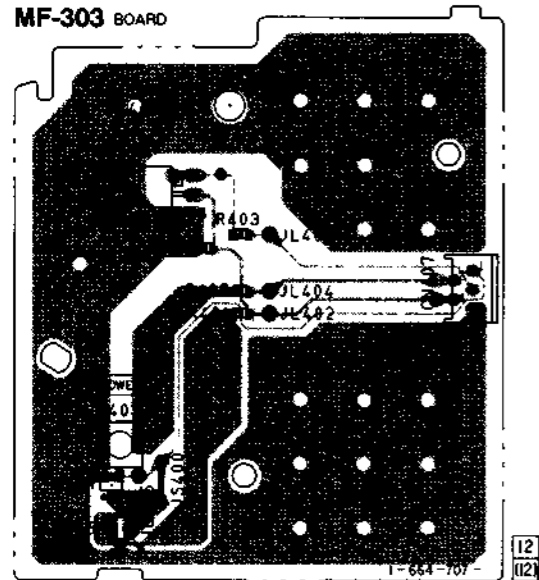


HI-50 BOARD

CN401	A-9
CN402	B-2
CN405	A-1
CN406	B-1
D410	A-1
D411	A-2
D412	A-1
D413	B-1
D420	B-6
IC410	B-4

SR-800 (POWER SUPPLY) SCHEMATIC DIAGRAM (EXCEPT SLV-775HF: PX/975HF: CS, PX)

- Ref. No.: SR-800 board; 4,000 series -

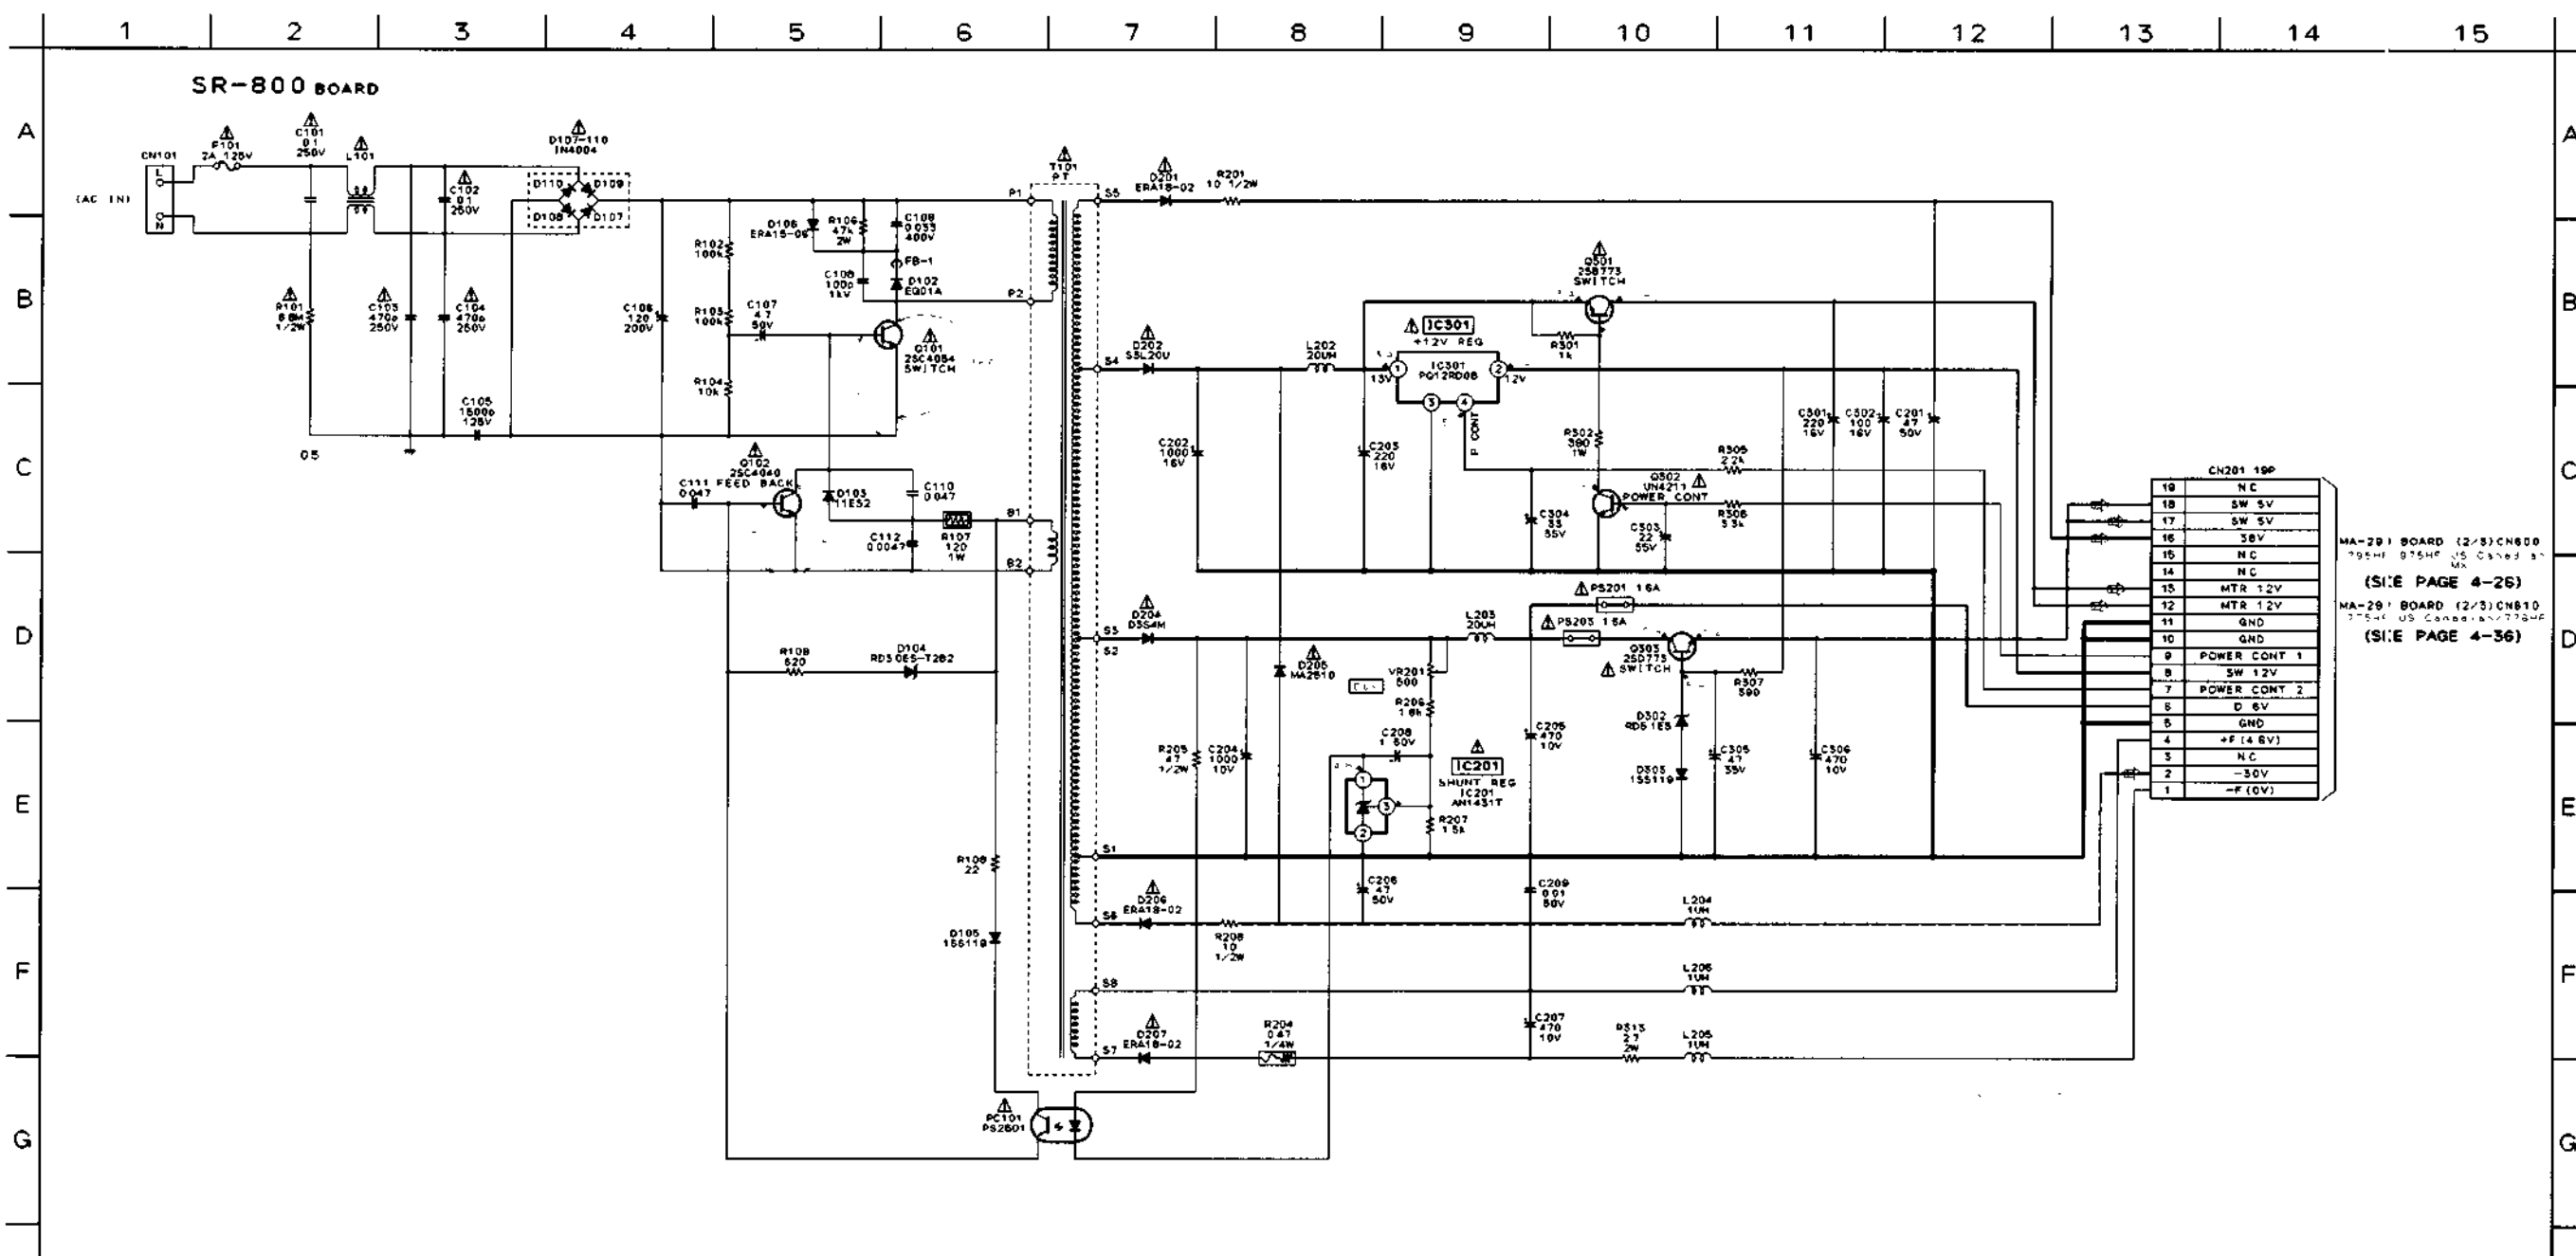

MA-291 BOARD (2/3)CN600
795HF 075HF 15 0385 51
MA
(S/E PAGE 4-26)

MA-291 BOARD (2/3)CN610
775HF US Canada/775HF
(S/E PAGE 4-36)

Note:
The components identified by mark Δ or dotted line with mark Δ are critical for safety. Replace only with part number specified.

Note:
Les composants identifiés par une marque Δ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.


SR-800 (POWER SUPPLY), SR-802 (POWER SUPPLY) PRINTED WIRING BOARDS

- Ref. No.: SR-800 board; 4,000 series, SR-802 board; 5,000 series -

There are few cases that the part isn't mounted in this model is printed on this diagram.

- EXCEPT SLV-775HF: PX/975HF: CS, PX -

SR-800 BOARD

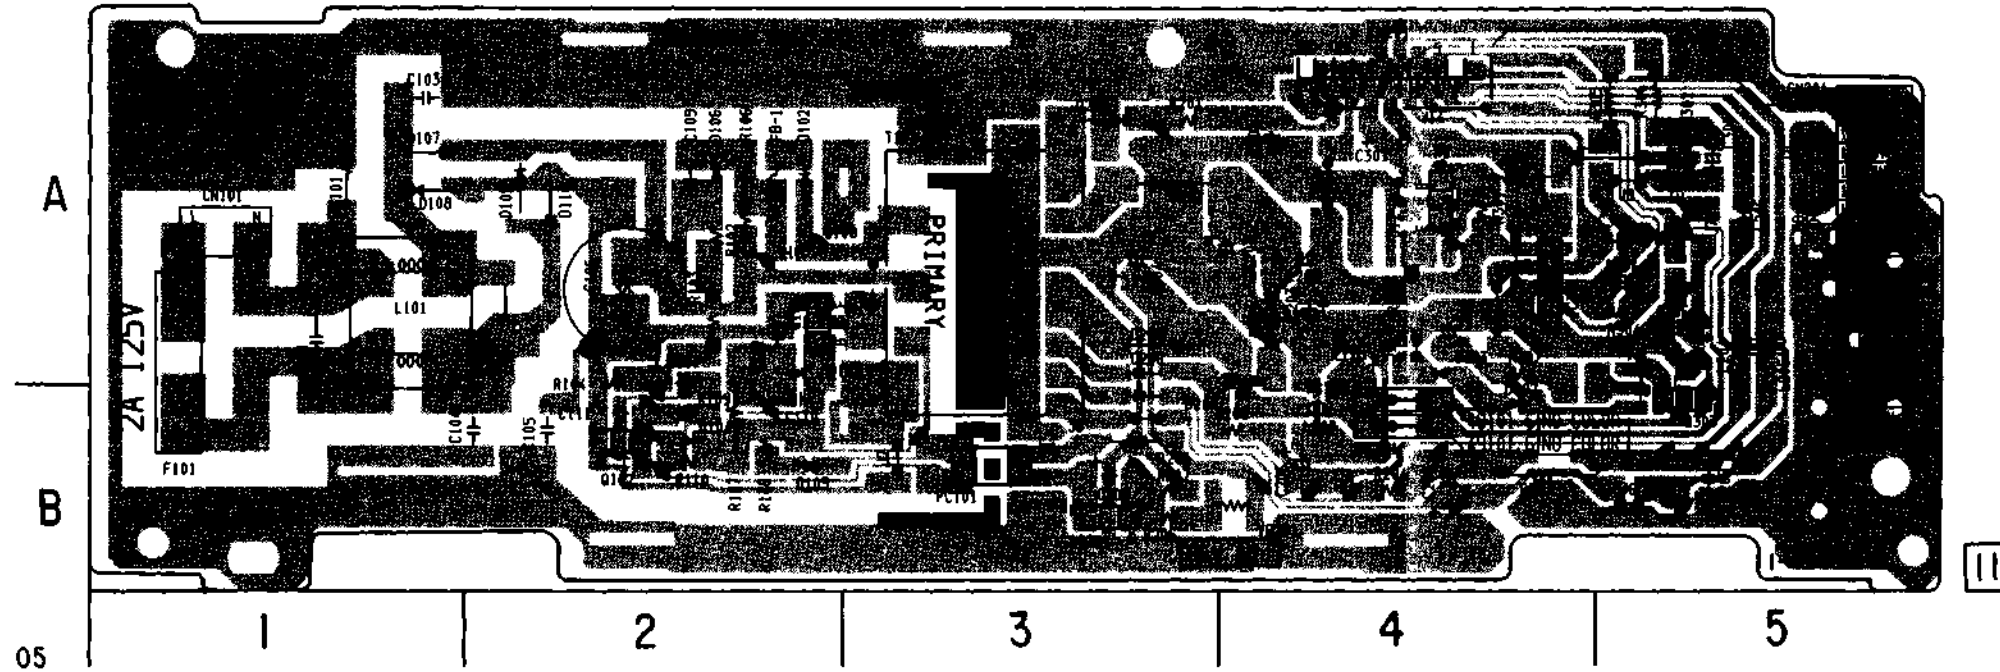


SR-800 BOARD

- CN101 A-1
- CN201 A-4
- D102 A-2
- D103 A-2
- D104 B-2
- D105 B-2
- D106 A-2
- D107 A-1
- D108 A-1
- D109 A-2
- D110 A-2
- D201 A-3
- D202 A-3
- D204 A-3
- D205 A-4
- D206 A-3
- D207 B-3
- D302 B-4
- D303 A-4
- IC201 B-3
- IC301 A-4
- Q101 A-2
- Q102 B-2
- Q301 A-4
- Q302 A-5
- Q303 B-5


MA-290 (795HF/975HF)
MA-292 (775HF/776HF)
(VIDEO, AUDIO, IO
SERVO/SYSTEM CONTROL,
TUNER)

RP-218 (795HF/975HF)
RP-220 (775HF/776HF)
(HEAD AMP)

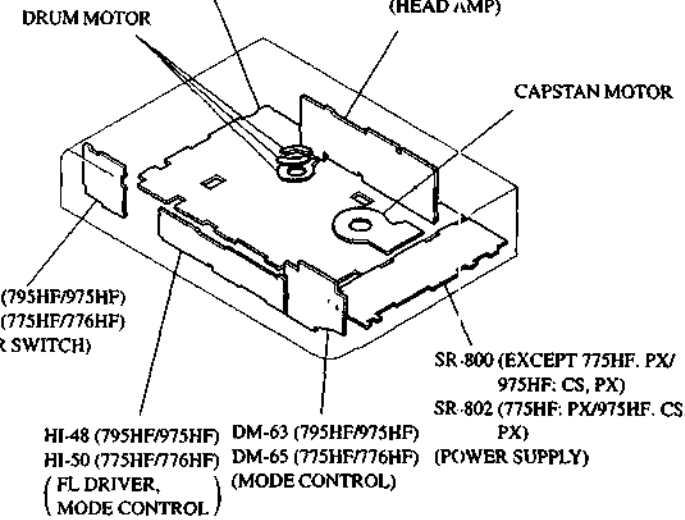

- SLV-775HF: PX/975HF: CS, PX -

SR-802 BOARD

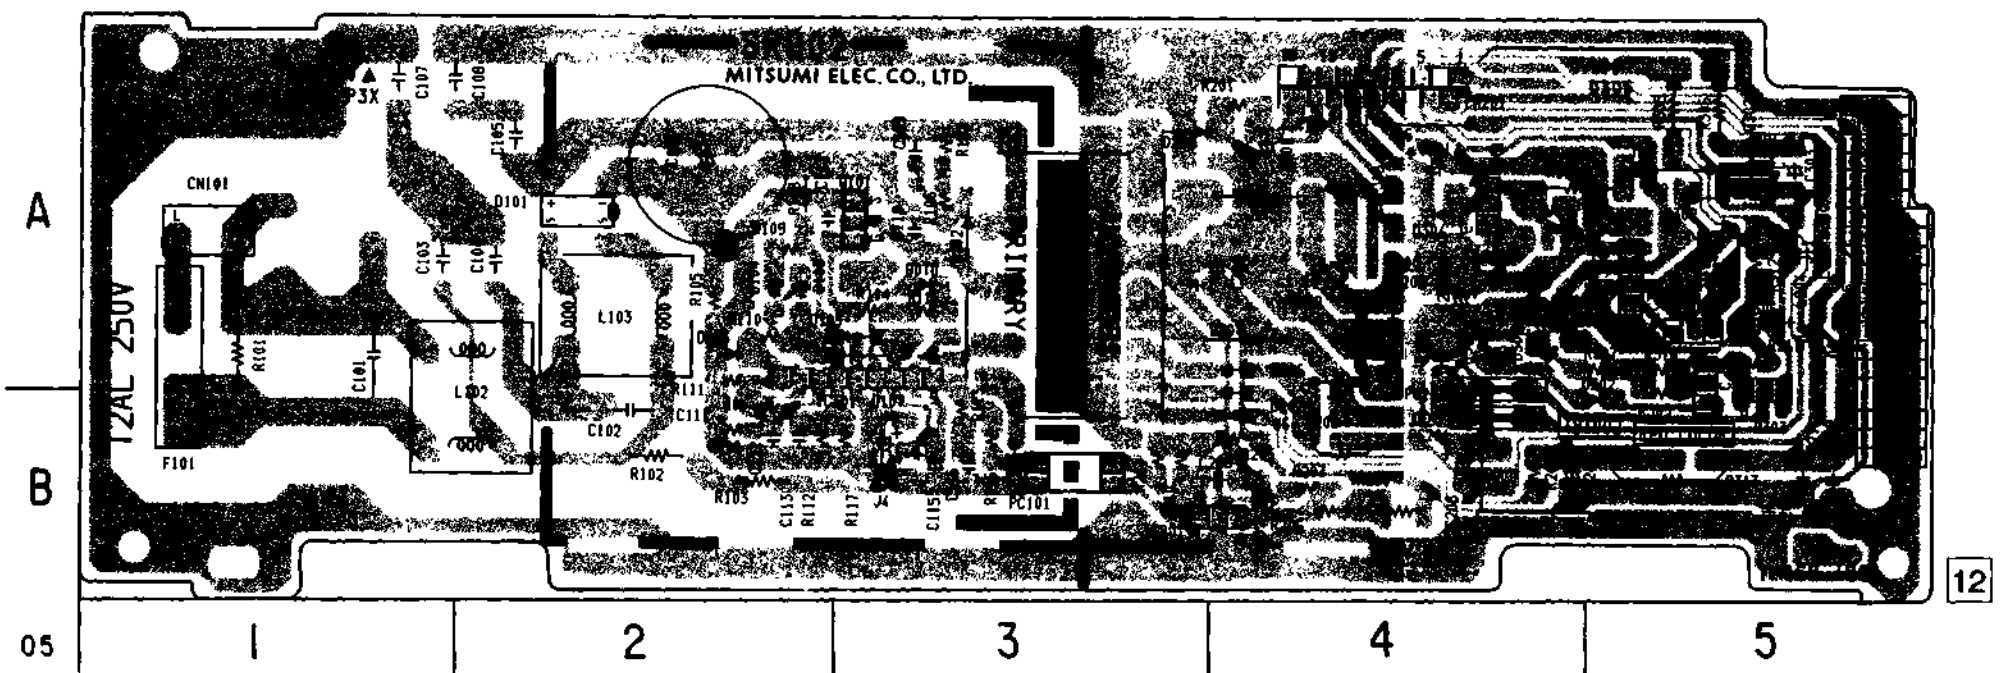


SR-802 BOARD

- CN101 A-1
- CN201 A-4
- D101 A-2
- D102 A-3
- D103 A-2
- D104 A-2
- D106 A-3
- D106 A-2
- D107 B-3
- D108 A-3
- D201 A-3
- D202 A-4
- D204 A-4
- D205 A-4
- D206 A-4
- D207 B-4
- D301 A-4
- D302 A-5
- D303 A-4
- D304 A-4
- D305 A-5
- IC101 A-3
- IC201 B-4
- IC301 A-5
- Q101 A-3
- Q301 A-4
- Q302 A-5
- Q303 A-5
- Q306 A-5

SR-802 (POWER SUPPLY) SCHEMATIC DIAGRAM (SLV-775HF: PX/975HF: CS, PX)

- Ref. No.: SR-802 board; 5,000 series -

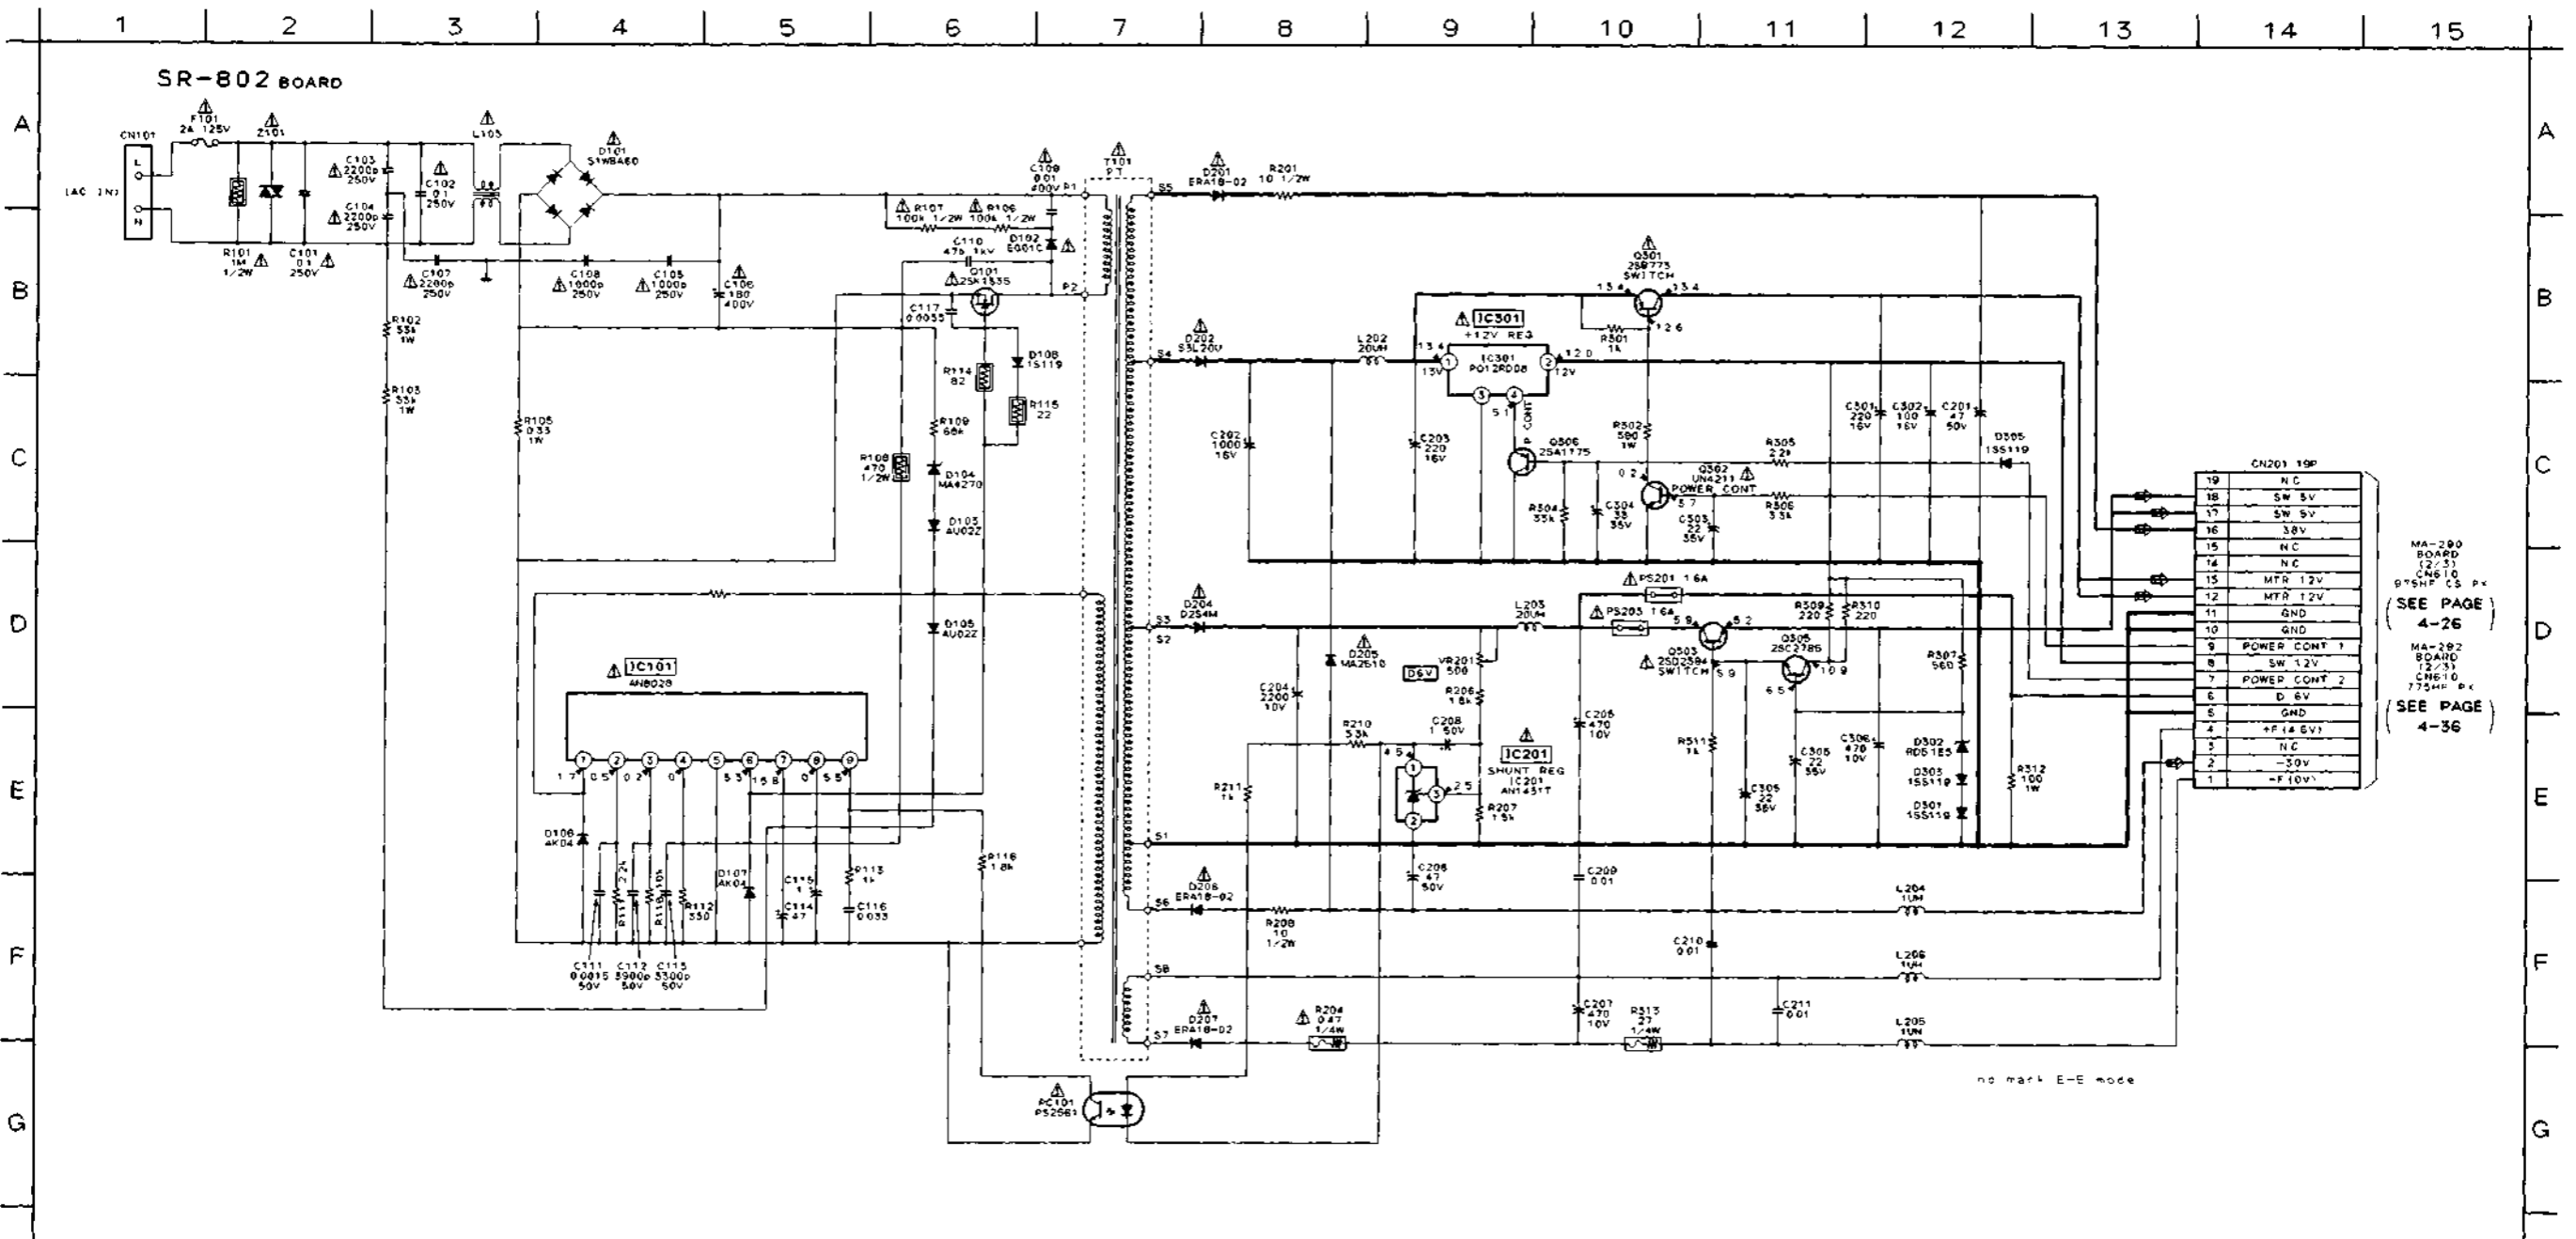

19	NC
18	SW 5V
17	SW 5V
16	3.0V
15	NC
14	NC
13	MTR 12V
12	MTR 12V
11	GND
10	GND
9	POWER CONT 1
8	SW 1.2V
7	POWER CONT 2
6	D 6V
5	GND
4	+P (4.5V)
3	NC
2	-50V
1	-F (10V)

MA-290 BOARD (2/3) CN610 975HF CS PX (SEE PAGE 4-26)
 MA-292 BOARD (2/3) CN610 775HF CS PX (SEE PAGE 4-36)

Note:
 The components identified by mark Δ or dotted line with mark Δ are critical for safety.
 Replace only with part number specified.

Note:
 Les composants identifiés par une marque Δ sont critiques pour la sécurité.
 Ne les remplacer que par une pièce portant le numéro spécifié.

SECTION 5 INTERFACE, IC PIN FUNCTION DESCRIPTION

5-1. SYSTEM CONTROL – VIDEO BLOCK INTERFACE (MA-290 BOARD IC161)

Signal	Pin No.	I/O	STOP FF/ REW	TAPE THREAD- ING	TAPE UNTHREAD- ING	PB	PB • PAUSE	SLOW	× 2	CUE	REVIEW	REC	REC • PAUSE
AF REC P	MA-290 IC161④	O	L	L	L	L	L	L	L	L	L	L	H
RF SWP (SW30)	MA-290 IC161①	O	*1	*1	*1	*1	*1	*1	*1	*1	*1	*1	*1
QVD	MA-290 IC161②	O	L	L	L	*2	*3	*3	*3	*3	*3	L	L
SP	MA-290 IC161⑤	O	*4	*4	*4	*5	*5	*5	*5	*5	*5	*4	*4
AF REC	MA-290 IC161⑥	O	L	L	L	L	L	L	L	L	L	H	H
V SYNC	MA-290 IC161③	I	*6	*6	*6	*6	*6	*6	*6	*6	*6	*6	*6
CTL REC	MA-290 IC161⑦	O	L	L	L	L	L	L	L	L	L	H	L

*1 Synchronized with drum rotation 30 Hz 50% duty pulse

*2 Normally "L" "H" when CTL signal is not generated

*3 V paired "H" pulse

*4 Selected by REC mode SP mode "L"

*5 Selected by tape recording mode

*6 Composite Sync signal (positive)

5-2. SYSTEM CONTROL - SERVO PERIPHERAL CIRCUIT INTERFACE (MA-290 BOARD IC161)

Signal	Pin No.	I/O	STOP	FF	REW	TAPE THREAD -ING	TAPE UNTHREAD -ING	PB	PB * PAUSE	SLOW	CUE	x 2	REVIEW	REC	REC * PAUSE	PB INDEX WRITERS
REC CTL	MA-290 IC161⑦	O	*1	*1	*1	*1	*1	*1	*1	*1	*1	*1	*1	*1	*1	
CAP STOP	MA-290 IC161⑧	O (O.D)	L	HI-Z (O.D)	HI-Z (O.D)	HI-Z (O.D)	HI-Z (O.D)	HI-Z (O.D)	L	*3	HI-Z (O.D)	HI-Z (O.D)	HI-Z (O.D)	HI-Z (O.D)	HI-Z (O.D)	
STEP PLS	MA-290 IC161⑨	O	L	L	L	L	L	L	L	*2	L	L	L	L	L	
CTL REC	MA-290 IC161⑩	O	L	L	L	L	L	L	L	L	L	L	L	H	L	H
CTL-INDEX	MA-290 IC161⑪	O	L	L	L	L	L	L	L	L	L	L	L	L	L	H
PB CTL	MA-290 IC161⑫	I	H	*6	*6			*1	H/L	*2	*6	*6	*6	*1	H	
DRM PG	MA-290 IC161⑬	I	*4	*7	*7	*5	*5	*7	*7	*7	*7	*7	*7	*7	*7	
DRM FG	MA-290 IC161⑭	I	*4	*8	*8	*5	*5	*8	*8	*8	*8	*8	*8	*8	*8	
CAP FG	MA-290 IC161⑮	I	H/L	*6	*6	*5	*5	*6	H/L	*9	*6	*6	*6	*6	H/L	
CAP DA	MA-290 IC161⑯	O	*10	*10	*10	*10	*10	*11	*10	*10	*11	*11	*11	*11	*10	
DRM DA	MA-290 IC161⑰	O	*12	*12	*12	*12	*12	*12	*12	*12	*12	*12	*12	*12	*12	
CTL STEP	MA-290 IC161⑱	O	L	L	L	L	L	L	L	*13	L	L	L	L	L	

*1 30 Hz pulse

*2 Pulse at tape running

*3 Reverse logic pulse of STEP PLS

*4 "L" when drum rotation stop

*5 Unstable period pulse

*6 Pulse of period in proportion to tape speed

*7 30 Hz pulse

*8 360 Hz pulse

*9 Pulse at tape running

*10 Approx 2 msec period "H" or "L" pulse

*11 Approx 1.5 msec period "H" or "L" pulse

*12 Approx 3 msec period "H" or "L" pulse

*13 "H" when FWD direction STEP drive

5-3. SYSTEM CONTROL - MECHANISM INTERFACE (MA-290 BOARD IC161)

Signal	Pin No.	I/O	EJECTED	CASSETTE LOADING	CASSETTE UNLOADING	TAPE THREADING	TAPE UNTHREADING	STOP	FF	REW	PB	PB * PAUSE	SLOW	x2	CUE	REVIEW	REC	REC * PAUSE
MODE 1	MA-290 IC161②	I	H	L	L	*1	*1	H	H	H	H	H	H	H	H	L	H	H
MODE 2	MA-290 IC161②	I	L	L	L	*1	*1	L	L	L	H	H	H	H	H	H	H	H
MODE 3	MA-290 IC161②	I	L	L	L	*1	*1	H	H	H	L	H	H	L	L	H	L	H
MODE 4	MA-290 IC161②	I	L	H	H	*1	*1	H	L	L	L	L	L	L	L	L	L	L
REC PRF	MA-290 IC161③	I	L	*2	*2	*2	*2	*2	*2	*2	*2	*2	*2	*2	*2	*2	*2	*2
TREEL FG	MA-290 IC161④	I	H/L	H/L	H/L	H/L	H/L	H/L	*3	*3	*3	H/L	*3	*3	*3	*3	*3	H/L
SREEL FG	MA-290 IC161④	I	H/L	H/L	H/L	*3	*3	H/L	*3	*3	*3	H/L	*3	*3	*3	*3	*3	H/L
T/E LED	MA-290 IC161⑤ (O.D)	O	*4	*4	*4	*4	*4	*4	*4	*4	*4	*4	*4	*4	*4	*4	*4	*4
CAP STOP	MA-290 IC161⑤ (O.D)	O	L	L	L	H	H	L	H	H	H	L	*5	H	H	H	H	L
CAP RVS	MA-290 IC161⑥	O	H			L	H	H/L	L	H	L	L	L/*5	L	L	H	L	L
CAP DA	MA-290 IC161⑥	O																
T SENS	MA-290 IC161⑦	I	*4	*4	*4	*6	*6	*6	*6	*6	*6	*6	*6	*6	*6	*6	*6	*6
S SENS	MA-290 IC161⑦	I	*4	*4	*4	*6	*6	*6	*6	*6	*6	*6	*6	*6	*6	*6	*6	*6

*1 Uncertainty

*2 "L" when erasing protection tab is bent, "H" when not bent

*3 Pause of period in proportion to reel rotating speed

*4 Approx 2 msec period "H" pulse

*5 Pulse at tape running

*6 Normally "L" 2 msec period "H" pulse when tape top or tape end is detected

5-4. SYSTEM CONTROL – SYSTEM CONTROL PERIPHERAL CIRCUIT INTERFACE (MA-290 BOARD IC161)

Signal	Pin No.	I/O	I/O level
ASURA RESET	MA-290 IC161④	I	Normally "H", "L" when service interruption is detected or restored
ASURA CS	MA-290 IC161④	I	Chip select signal from timer microprocessor V period "L" pulse
S IN 0	MA-290 IC161④	I	Serial communication data from timer microprocessor V period "L" pulse
S OUT 0	MA-290 IC161④	O	Serial communication data to timer microprocessor V period "L" pulse
S CLK	MA-290 IC161④	I	Serial communication clock with timer microprocessor V period "L" pulse

5-5. SYSTEM CONTROL – AUDIO BLOCK INTERFACE (MA-290 BOARD IC161)

Signal	Pin No.	I/O	STOP/FF/REW	TAPE LOADING	TAPE UNLOADING	PB	PB PAUSE	SLOW	× 2	CUE	REVIEW	REC	REC PAUSE
AF ENV	MA-290 IC161⑤	I	AF RF envelope signal input terminal for automatic tracking										
A MUTE	MA-290 IC161⑥	O (O.D)	L	L	L	*1	H	H	H	H	H	L	L
SP	MA-290 IC161⑥	O	*2	*2	*2	*3	*3	*3	*3	*3	*2	*2	*2
AF REC P	MA-290 IC161⑦	O	L	L	L	L	L	L	L	L	L	H	L
AF SWP	MA-290 IC161⑧	O	*1	*1	*1	*1	*1	*1	*1	*1	*1	*1	*1
FULLERS	MA-290 IC161⑨	O (O.D)	H	H	H	H	H	H	H	H	H	L	H

*1 30 Hz 50% duty pulse approx. 5 msec delayed from RF SW P

*2 Selected by REC mode selector SP mode "L"

*3 Selected by tape recording mode SP mode "L"

**5-6. SERVO/SYSTEM CONTROL MICROPROCESSOR PIN FUNCTION
(MA-290 BOARD IC161 CXP-87852-014Q)**

Pin No.	Pin name	I/O	Function
1	RF SWP	O	RF switching pulse output
2	AF REC P	O	Hi-Fi record pulse output
3	N/C	-	Not used
4	Q VD	O	Quasi VD pulse output
5	N/C	-	Not used
6	FE ON	O	Flying erase ON/OFF
7	REC CTL	O	REC CTL signal output
8	N/C	-	Not used
9	CAM1	O	CAM motor control 1
10	CAM2	O	CAM motor control 2
11	TA MUTE	O	Tuner audio mute output
12	N/C	-	Not used (Low)
13	NT JUDGE	I	NTSC judgement input
14	MESECAM	I	MESECAM judgement input
15	REC PRF	I	Erasing protection lab. cassette IN detection input
16	RENTAL	I/O	YNR control
17	N/C	O	Not used
18	N/C	-	Not used
19	MODE 4	I	Mechanism section CAM encoder input
20	MODE 3	I	Mechanism section CAM encoder input
21	MODE 2	I	Mechanism section CAM encoder input
22	MODE 1	I	Mechanism section CAM encoder input
23	TV/ATR	O	"L" when VTR mode "H" when TV mode
24	N/C	-	Not used
25	N/C	-	Not used
26	CBC ON	O	Cable box control on
27	N/C	I	Not used
28	SDA	I	IIC data line (VIDEO, Hi-Fi)
29	N/C	I	Not used
30	SCL	I	IIC clock line (VIDEO, Hi-Fi)
31	A MUTE	O	AUDIO mute output
32	T/E LED	O	T/E LED output
33	N/C	-	Not used
34	N/C	-	Not used
35	CAP STOP	O	Capstan STOP signal output
36	FULLERS	O	Full erase control
37	N/C	O	Not used
38	N/C	O	Not used
39	MP	I	Fixed to L
40	ASURA RESET	I	System reset input
41	VSS	-	GND
42	XTAL	-	System clock 16 MHz
43	EXTAL	-	System clock 16 MHz
44	ASURACS	I	S/S microcomputer chip select signal
45	S IN 0	I	Serial communication signal
46	S OUT 0	O	Serial communication signal
47	SCLK	O	Serial communication signal
48	NICOL ON	O	S-LINK on
49	F MONO	O	Tuner Audio Select
50	N/C	-	Not used

Pin No.	Pin name	I/O	Function
51	N/C	-	Not used
52	AVSS	-	UNSW GND
53	AVREF	-	AD port reference input UNSW 5V
54	AVDD	-	UNSW 5V
55	NTPB SW	I	NTSC PB switch input
56	VA ADJ	I	Hi-Fi/RF switching adjustment mode
57	N/C	I	Not used
58	N/C	I	Not used
59	AF ENV	I	Hi-Fi audio playback signal envelope
60	RF ENV	I	Video playback signal envelope
61	T SENS	I	Take up end sensor input
62	S SENS	I	Supply end sensor input
63	S REEL FG	I	S side reel FG input
64	T REEL FG	I	T side reel FG input
65	N/C	-	Not used
66	V SYNC	I	Composite sync input
67	PB CTL	I	Playback CTL input
68	DRM PG	I	Drum PG input
69	DRM FG	I	Drum FG input
70	CAP FG	I	Capstan FG input
71	N/C	-	Not used
72	CAP RVS	O	Capstan reverse control H when Reverse
73	CAP DA	O	Capstan error D/A output
74	DRUM DA	O	Drum PG input
75	CTL REC	O	"H" CTL write
76	CTL STEP	O	CTL amp. STEP operation control
77	REC COUNT	I	5V Record count input (Hi)
78	CLK	I	Clock (Hi)
79	CTL INDEX	O	CTL INDEX signal input
80	SO1	I/O	Signal for serial communication
81	SCLK1	I/O	Signal for serial communication
82	N/C	-	Not used
83	N/C	-	Not used
84	CAP TRQ PWM	O	Capstan TRQ PWM output
85	N/C	-	Not used
86	N/C	-	Not used
87	N/C	-	Not used
88	VSS	-	GND
89	VDD	-	5V
90	N/C	-	Not used
91	N/C	-	Not used
92	N/C	-	Not used
93	SP	O	Tape speed Select
94	DSF	O	Picture improvement control
95	N/C	-	Not used
96	AF REC	O	"H" output when hi-fi audio REC
97	N/C	-	Not used
98	N/C	-	Not used
99	STEP PLS	O	Step pulse H when Capstan step driving
100	AF SWP	O	AF switching pulse output

5-7. TUNER/TIMER MODE CONTROL PIN FUNCTION (MA-290 BOARD IC181 CXP82960-016Q)

Pin No.	Pin Name	IO	Function
1	N/C	-	Not used
2	POWERFAIL	1	Power failure detect signal input
3	H DET	1	Video signal detect signal input
4	SIRCS IN	1	SIRCS signal input
5	STEREO DET	1	STEREO detection
6	SIRCS OUT	0	SIRCS signal output
7	BUZZER	0	Buzzer output
8	N/C	-	Not used
9	N/C	-	Not used
10	SCK0	0	Clock for serial communication
11	SIO	1	Serial data input
12	SO0	0	Serial data output
13	N/C	-	Not used
14	LANC IN	1	LANC input
15	LANC OUT	0	LANC output
16	AD0	1	Key reading A/D input
17	AD1	1	Key reading A/D input
18	AD2	1	Key reading A/D input
19	AD3	1	Key reading A/D input
20	AD4	1	Key reading A/D input
21	AD5	1	Key reading A/D input
22	N/C	-	Not used
23	AFT	1	AFT input
24	AVDD	-	UNSW 5V
25	AV REF	-	AD port reference input UNSW 5V
26	SCL0	0	PC BUS (clock)
27	CG CS	0	Character generator chip select signal
28	SDA0	0	PC BUS (data)
29	LED CS	0	LED driver chip select signal
30	AVSS	-	UNSW GND
31	EXTAL	-	System clock Not used
32	XTAL	-	GND
33	VSS	-	Reset signal in
34	RST	1	Tuner clock signal
35	PLL CLK	0	Tuner data signal
36	PLL DATA	0	Tuner enable signal
37	PLL ENABLE	0	Normal audio MAIN/SAP select control
38	MAIN/SAP	0	MAIN/SAP judge input
39	SAP	1	XDS data decoder chip select
40	V SET CS	0	XDS data decoder chip select

Pin No.	Pin Name	IO	Function
41	DMS 1	1	DMS 1 input
42	DMS 2	1	DMS 2 input
43	VFD P	-	-30V
44-62	SEG 1-19	0	LCD segment output
63	N/C	-	Not used
64	N/C	-	Not used
65	N/C	-	Not used
66-71	GRID 6-1	0	LCD grid output
72	VDD	-	UNSW 5V
73	TX	-	Connected to oscillator for clock
74	TEX	-	Connected to +5V
75	NC/VPP	-	S/S microcomputer chip select
76	ASURA CS	0	System reset signal output
77	SYS RESET	0	Power supply control signal output
78	POWER CONT 1	0	Power supply control signal output for EDS
79	POWER CONT 2	0	Vertical sync signal input
80	CG V	1	Vertical sync signal input

5-8. SYSTEM CONTROL - VIDEO BLOCK INTERFACE (MA-292 BOARD IC160)

Signal	Pin No.	I/O	STOP/ FF/ REW	TAPE LOADING	TAPE UNLOADING	PB	REC	REC + PAUSE
RF SWP	MA-292 IC160①	O	*1	*1	*1	*1	*1	*1
QVD	MA-292 IC160③	O	L	L	*2	L	L	L
REC P	MA-292 IC160④	O	L	L	L	L	L	H
C SYNC	MA-292 IC160⑤	I	*3	*3	*3	*3	*3	*3

*1 Synchronized with drum rotation 30 Hz 50% duty pulse

*2 Normally "L" "H" when vidal signal is not generated

*3 Composite sync signal (positive)

5-9. SYSTEM CONTROL - SERVO PERIPHERAL CIRCUIT INTERFACE (MA-292 BOARD IC160)

Signal	Pin No.	I/O	STOP	FF	REW	TAPE LOADING	TAPE UNLOADING	PB	REC
CTL IN+	MA-292 IC160⑥	O	*8	*8	*8	*8	*8	*8	*1
CTL IN-	MA-292 IC160⑦	I	H	*2	*2	-	-	*1	*1
DRM PG	MA-292 IC160⑧	I	*3	*3	*3	*3	*3	*3	*3
DRM FG	MA-292 IC160⑨	I	*4	*4	*4	*4	*4	*4	*4
CAP FG	MA-292 IC160⑩	I	H/L	*5	*5	*6	*6	*5	*5
CAP RVS	MA-292 IC160⑪	O	H/L	L	H	L	H	L	L
CAP ERR	MA-292 IC160⑫	O	L	*7	*7	*7	*7	*7	*7
DRM ERR	MA-292 IC160⑬	O	*7	*7	*7	*7	*7	*7	*7

*1 30 Hz pulse

*2 Pulse of period in proportion to tape speed

*3 30 Hz "H" pulse

*4 360 Hz pulse

*5 Pulse of period in proportion to tape speed

*6 Unstable period pulse

*7 DC voltage 1-5V

*8 Hz-Z (2.5V)

5-10. SYSTEM CONTROL - MECHANISM BLOCK INTERFACE (MA-292 BOARD IC160)

Signal	Pin No.	IO	EJECTED	CASSETTE LOADING	CASSETTE UNLOADING	TAPE THREADING	TAPE UNTHREADING	STOP	FF	REW	PB	REC
CW	MA-292 IC160⑤	O	*5	H	L	H	L	*5	*5	*5	*5	*5
CAM	MA-292 IC160⑦	O	*5	*5	*5	*5	*5	*5	*5	*5	*5	*5
MODE 1	MA-292 IC160⑥	I	-	-	-	-	-	H	H	H	H	H
MODE 2	MA-292 IC160⑧	I	-	-	-	-	-	L	L	L	L	L
MODE 3	MA-292 IC160⑩	I	-	-	-	-	-	H	H	H	L	L
MODE 4	MA-292 IC160⑨	I	-	-	-	-	-	H	L	L	L	L
REC PRF	MA-292 IC160④	I	L	*1	*1	*1	*1	*1	*1	*1	*1	*1
T REEL	MA-292 IC160①	I	H/L	H/L	H/L	H/L	H/L	H/L	*2	*2	*2	*2
S REEL	MA-292 IC160②	I	H/L	H/L	H/L	*2	*2	H/L	*2	*2	*2	*2
END LED	MA-292 IC160③	O	L	*3	*3	*3	*3	*3	*3	*3	*3	*3
T SENS	MA-292 IC160⑦	I	*3	*3	*3	*4	*4	*4	*4	*4	*4	*4
S SENS	MA-292 IC160⑥	I	*3	*3	*3	*4	*4	*4	*4	*4	*4	*4

*1 "H" when erasing protection tab is bent "L" when not bent
 *2 Pulse of period in proportion to reel rotating speed
 *3 Approx. 2 msec period "H" pulse
 *4 Normally "L" 2 msec period "H" pulse when tape top or tape end is detected
 *5 Hz

5-11. SYSTEM CONTROL - SYSTEM CONTROL PERIPHERAL CIRCUIT INTERFACE (MA-292 BOARD IC160)

Signal	Pin No.	IO	IO level
RESET	MA-292 IC160	I	Normally "H", "L" when service interruption is detected or restored
I2C DATA VIDEO	MA-292 IC160	O	IIC communication data to video microprocessor
I2C CLOCK VIDEO	MA-292 IC160	O	IIC communication clock with video microprocessor.
I2C DATA	MA-292 IC160	O	IIC communication data to audio microprocessor
I2C CLOCK	MA-292 IC160	O	IIC communication clock with audio microprocessor.

5-12. SYSTEM CONTROL - AUDIO BLOCK INTERFACE (MA-292 BOARD IC160)

Signal	Pin No.	IO	STOP/ FF/ REW	TAPE LOADING	TAPE UNLOADING	PB	REC	REC + PAUSE
A MUTE	MA-292 IC160	O	L	L	L	L	L	L
REC P	MA-292 IC160	O	L	L	L	L	L	H

5-13. SERVO/SYSTEM/TIMER/TUNER CONTROL MICROPROCESSOR PIN FUNCTION (MA-292 BOARD IC160)

Pin No.	Pin name	I/O	Function
1	N/C	-	Not used
2	N/C	-	Not used
3	TU-AFT	I	Tuner analog auto fine tuning input
4	FUNK KEY 2	I	9 KEY input
5	FUNK KEY 1	I	9 KEY input
6	S SENS	I	Tape end sensor input
7	T SENS	I	Tape top sensor input
8	VIDEO RF	I	Video RF input
9	AF ANV	I	Hi-Fi envelope signal input
10	N/C	-	Not used
11	N/C	-	Not used
12	STEREO	I	Tuner stereo detection Stereo at "L"
13	QVD	O	Quasi VD pulse output
14	REMOCON	I	Remote control signal input
15	F MONO	O	Forced monaural signal output
16	CAP RVS	O	Capstan reverse signal output
17	PC-CLOCK	O	PC clock (EEPROM, Hi-Fi, PLL MOD)
18	RF SWP	O	RF switching pulse output
19	AF SWP	O	Hi-Fi switching pulse output
20	END LED	O	LED output to tape top and tape end sensor
21	ANT SEL	O	TV mode at "L", VTR mode at "H"
22	PLL DATA (PC DATA 1)	I/O	Tuner PLL data/PC data (EEPROM, Hi-Fi, PLL MOD)
23	PLL CLOCK	O	Tuner PLL clock output
24	T ENABLE	O	Tuner enable signal output
25	SAP	I	MAIN/SAP judge input
26	MODE 4	I	CAM encoder input 4
27	MODE 3	I	CAM encoder input 3
28	MODE 2	I	CAM encoder input 2
29	MODE 1	I	CAM encoder input 1
30	REC PRF	I	Cassette erasing protect tab detect switch input
31	DEST 1	I	Destination judgment 1
32	DEST 2	I	Destination judgment 2
33	DEST 3	I	Destination judgment 3
34	N1UB	I	Fixed to GND
35	N1UA	I	Fixed to GND
36	CLSEL	I	Fixed to 15V
37	VCC	-	5V
38	16MHz (in)	I	16MHz
39	16MHz (out)	O	16MHz
40	VSS	-	GND
41	32KHz (in)	I	32KHz
42	32KHz (out)	O	32KHz
43	RESET	I	RESET signal input
44	NT JUDGE	I	NTSC at "L"
45	N/C	-	Not used
46	CBC ON	O	Cable box control
47	V MUTE	O	Video mute signal
48	A MUTE	O	Audio mute signal
49	REC P	O	Hi-Fi audio recording control signal input
50	REC	O	Play Back mode when audio recording control signal output is "L"

Pin No.	Pin name	I/O	Function
51	PC CLOCK VIDEO	O	PC clock (VIDEO)
52	PC DATA VIDEO	O	PC data (VIDEO)
53	TA MUTE	O	Tuner audio mute signal output
54	DMS 2	I	Dual mode shuttle control signal input
55	DMS 1	I	Dual mode shuttle control signal input
56	P CONT M12	O	MTR12V control signal output
57	CAM CW	I/O	CAM motor control 1
58	CAM CW	I/O	CAM motor control 2
59	P CONT SW12	O	SW12V control signal output
60	N/C	O	Not used
61	N/C	O	Not used
62	N/C	O	Not used
63	N/C	O	Not used
64	OSD-CS	O	OSD chip select signal output
65	S OUT 1	O	Serial communication signal (RP)
66	FLD-CS	O	FL driver chip select signal output
67	S-CLK 1	O	Serial communication (RP)
68	S OUT 0	O	Serial communication signal output (FLD, OSD)
69	S IN 0	I	Serial communication signal input (FLD, OSD)
70	S CLK 0	O	Serial communication clock output (FLD, OSD)
71	N/C	-	Not used
72	BUZZER	O	Buzzer output
73	SIFCS OUT	O	SIFCS signal output
74	MAIN/SAP	O	Normal audio MAIN/SAP select input
75	P FAIL	I	Power failure detection input
76	NICOLE ON	O	S-LINK on
77	CAP ERR	O	Capstan error output
78	DURM ERR	O	Drum error output
79	S REEL	I	Supply reel sensor input
80	T REEL	I	Take-up reel sensor input
81	N/C	-	Not used
82	CHECK	I	Check signal input
83	N/C	-	Not used
84	C SYNC	I	Composite sync input
85	CAP FG	I	Capstan FG input
86	DURM FG	I	Drum FG input
87	DURM FG	I	Drum FG input
88	AMP VSS	-	CTL amplifier GND
89	AMP VREF OUT	O	CTL amplifier
90	AMP VREF IN	I	CTL amplifier
91	CTL IN-	I/O	CTL signal (-) input/output
92	CTL IN+	I/O	CTL signal (+) input/output
93	CTL SW OUT	O	CTL switch output
94	CTL AMP IN	I	CTL amplifier input
95	AMP C	I	CTL amplifier
96	CTL VSS	-	CTL amplifier GND
97	CTL AMP OUT	O	CTL amplifier output
98	AMP VCC	-	CTL amplifier 5V
99	A VCC	-	Analog 5V
100	N/C	-	Not used

SECTION 6 ADJUSTMENTS

During the adjustment, see the Parts Arrangement Diagram for Adjustment on page 6-8.

6-1. MECHANICAL ADJUSTMENTS

Refer to the SERVICE MANUAL of VHS MECHANICAL ADJUSTMENT IV.

6-2. ELECTRICAL ADJUSTMENTS

2-1. PRE-ADJUSTMENT PREPARATIONS

Necessary items and indications for total adjustment of electric circuit of this machine will be described in this chapter

2-1-1. Instruments to be Used.

- 1) Color TV
- 2) Oscilloscope 1 or 2 phenomena, band more than 30 MHz, delay mode, as provided.
- 3) Frequency counter (min 8 digits)
- 4) NTSC pattern generator
- 5) Digital voltmeter
- 6) Audio level meter
- 7) Audio generator
- 8) Modulation Analyzer
- 9) Distortion factor meter
- 10) Attenuator
- 11) Alignmeter tape
Part Code. 8-192-605-32 (KRV-51N2)
- 13) Extension cable (13P)
Part code J-6090-054-A
RP-218/220 (CN260) ↔ DRUM

2-1-2. Connection

Unless otherwise specified, connect and adjust the measuring instruments as shown in the following diagram.

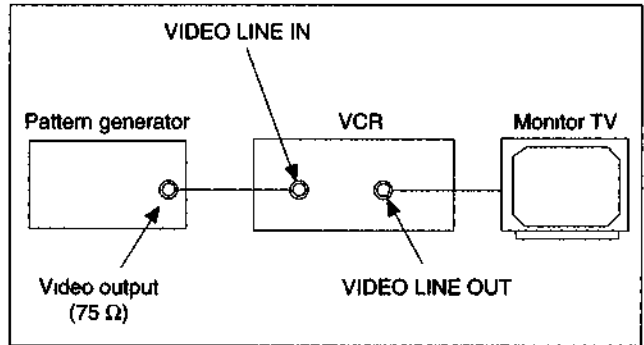


Fig. 6-2-1

2-1-3. Set-up of Adjustment

In this adjustment, NTSC pattern generator is connected with LINE input signal terminal. When check to tuner, connected AERIAL terminal. Check that the amplitudes of video signal NTSC signal, of picture portions, and of burst signals are flat at approximately 0.3, 0.7 and 0.3 V, respectively, and that the level ratio of the burst signal and "red" signal are 0.30: 0.66. Fig. 6-2-2. shows video signals (color bars) used in adjusting the video section.

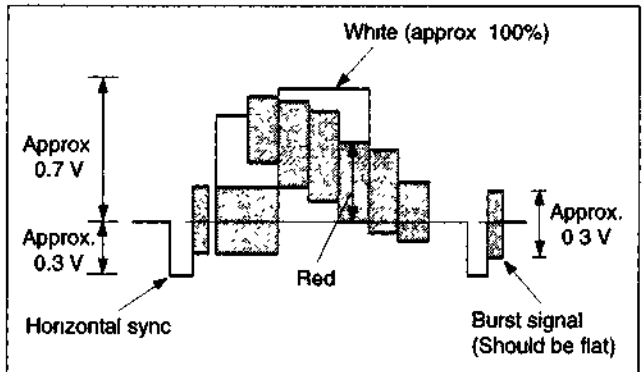


Fig. 6-2-2.

2-1-4. Alignment Tape [Alignment Tape (KRV-51N2)]

	Mode	Time	Video signal	Audio signal (HiFi/Normal)
1	SP	Seven minutes	Color bar	400 Hz
2		Three minutes	Monoscope	400 Hz
3	EP	Seven minutes	Color bar	400 Hz
4		Three minutes	Monoscope	—


2-1-5. Specified I/O Level and Impedance

Input/output terminal

Video inputs	LINE IN : phono jack 1 V _{p-p} , 75 Ω, unbalanced, sync negative
Audio inputs	LINE IN : phono jacks 47 kΩ, -7.5 dBs (0 dBs = 0.775 V _{rms}) More than 10 kΩ, ± 4 dBs
Video outputs	LINE OUT : phono jack 1 V _{p-p} , 75 Ω, unbalanced, sync negative
Audio outputs	LINE OUT : phono jacks -7.5 dBs at load impedance 47 kΩ Output impedance : less than 10 Ω

2-1-6. Adjusting Sequence

Make the electrical adjustment in the following sequence.

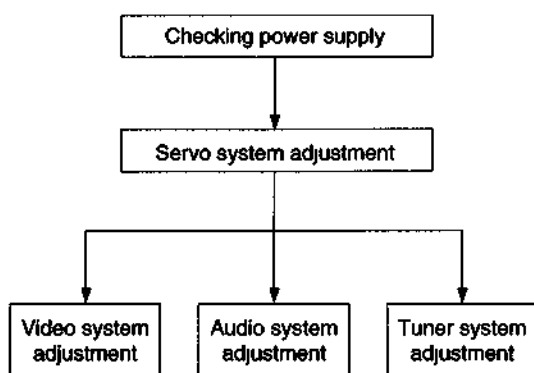

2-2. POWER SUPPLY ADJUSTMENT

2-2-1. Power Supply Check (SR-800/802 BOARD)

Mode	E-E
Measuring Instrument	Digital voltmeter
+F, -F check	
Measurement Point	Pin ④ (+), ① (-) of CN201
Specified Value	4.6 ± 1 Vdc
-30 V check	
Measurement Point	Pin ② of , CN201
Specified Value	-29 ± 3 Vdc
D6 V check	
Measurement Point	Pin ⑥ of CN201
Specified Value	5.9 ± 0.5 V
SW12 V	
Measurement Point	Pin ⑧ of CN201
Specified Value	12 ± 1 Vdc
MTR12 V check	
Measurement Point	Pin ⑫ of CN201
Specified Value	13.2 ± 1 Vdc
+38 V check	
Measurement Point	Pin ⑩ of CN201
Specified Value	38.0 ± 3 Vdc
SW5 V check	
Measurement Point	Pin ⑬ of CN201
Specified Value	5 ± 0.5 Vdc

Checking Method:

- 1) Confirm that each voltage meets its specified value.

2-2-2. D6V Adjustment (SR-800/802 BOARD)

Mode	REC or PB
Measuring Instrument	Digital voltmeter
Measurement Point	Pin ⑥ of CN201
Adjusting Element	RV201
Specified Value	5.9 ± 0.5 V

2-3. SERVO SYSTEM Adjustment

2-3-1. Switching Position Adjustment (MA-290/292, RP-218/220 Board)

Purpose:

Adjust the interval between A ch and B ch of tape playback output. Improve the interchangeability with other tapes and sets. When it is out of order, the interval appears on the screen, the screen is disturbed.

Mode	PB
Signal	Alignment tape SP mode color bar
Measurement Point	CH1: VIDEO LINE OUT CH2: Pin ③ of CN261 (RP-218/220 board) (RF SWP)
Measuring Instrument	Oscilloscope
Specified Value	$6.5 \pm 0.5 \text{ H}$ ($410 \pm 32 \mu\text{sec}$)

Adjusting Method:

- 1) Connect MA-290 board SWP ADJ TP to the GND for about 1 second to activate the RF switching position adjustment mode.: MA-290 Board
Connect HI-50 board JS430 to the GND for about 1 second to activate the RF switching position adjustment mode.. MA-292 Board
- 2) Check appear "Adj-rf" on FL display.: MA-290 Board
Check appear "A" on FL display.. MA-292 Board
- 3) Using the channel + and - buttons, adjust to $410 \pm 32 \mu\text{sec}$ ($6.5 \pm 0.5 \text{ H}$).

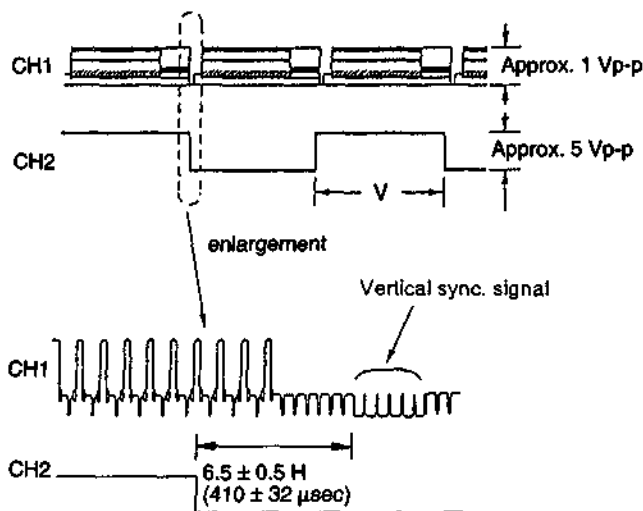


Fig. 6-2-3.

2-4. VIDEO SYSTEM ADJUSTMENT

Adjust the video system in the following sequence as a rule. The color video signal supplied from the pattern generator is used as a video input signal for video system adjustment in the recording mode.

Make sure that sync. and color burst signals meet requirements specified at set up of adjustment shown in Fig. 6-2-1.

[Adjustment Sequence]

- 2-4-1. Recording Y Signal Level Check
- 2-4-2. White Clip, Dark Clip Check
- 2-4-3. Playback Y Signal Level Check
- 2-4-4. Recording Chroma Level Check
- 2-4-5. Sync. AGC Check
- 2-4-6. X'tal Oscillation Frequency Check

2-4-1. Recording Y Signal Level Check (MA-290/292 Board)

Purpose:

Check the brightness signal level after passing through the V/C separating circuit.

Mode	E-E
Signal	Color bar
Measurement point	Pin ④ IC201
Measurement equipment	Oscilloscope
Specified value	$320 \pm 50 \text{ mVp-p}$

Confirmation Method:

- 1) Confirm that the record Y level is $320 \pm 50 \text{ mVp-p}$.

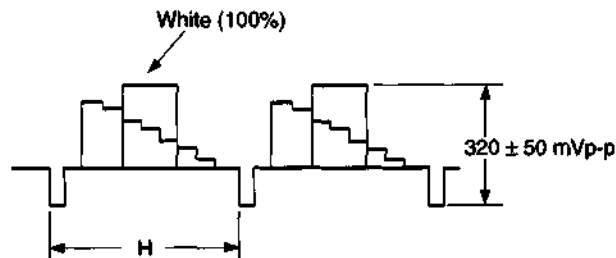


Fig. 6-2-4.

**2-4-2. White Clip, Dark Clip Check
(MA-290/292 Board)**

Purpose:

Confirm that no overshoot is generated by the pre-emphasis circuit. If shifted, the signals are overmodulated, thus causing a noise in the images.

Mode	E-E
Signal	Color bar
Measurement point	Pin ② of IC201
Measurement equipment	Oscilloscope
Specified value	White clip: $190 \pm 15\%$ Dark clip: $50 \pm 10\%$

Confirmation Method:

- 1) Confirm that the white clip is $190 \pm 15\%$, on condition that the level between white and sync. is 100%.
- 2) Confirm that the dark clip is $50 \pm 10\%$, on condition that the level between white and sync. is 100%



Fig. 6-2-5.

**2-4-3. Playback Y Signal Level Check
(MA-290/292 Board)**

Purpose:

Confirm that the playback Y signal level is correct.

Mode	PB
Signal	Alignment tape SP color bar
Measurement point	Pin ② IC201
Measurement equipment	Oscilloscope
Specified value	2.10 ± 0.18 Vp-p

Note: Make this adjustment with the EDIT switch turned off. (MA-290 Board)

Confirmation Method:

- 1) Confirm that the play Y level is 2.10 ± 0.18 Vp-p.

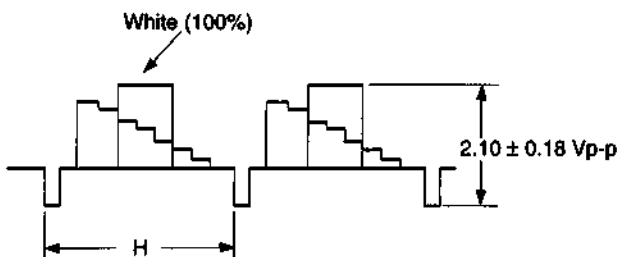


Fig. 6-2-6.

**2-4-4. Recording Chroma Level Check
(MA-290/292 Board)**

Purpose:

Check the chroma signal level after passing through the Y/C separating circuit.

If shifted, the image is roughened and another color may appear on the edges.

Mode	E-E
Signal	Color bar
Measurement point	Pin ④ of IC201
Measurement equipment	Oscilloscope
Specified value	380 ± 40 mVp-p

Confirmation Method:

- 1) Confirm that the record chroma level is 380 ± 40 mVp-p.

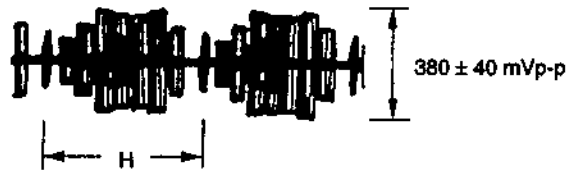


Fig. 6-2-7.

**2-4-5. Sync. AGC Check
(MA-290/292 Board)**

Purpose:

Confirm that the video level is correct.

Mode	E-E
Signal	Color bar
Measurement point	Pin ② IC201
Measurement equipment	Oscilloscope
Specified value	2.10 ± 0.14 Vp-p

Note: Video output terminal must be terminated at 75 Ω.

Confirmation Method:

- 1) Confirm that the sync. AGC level is 2.10 ± 0.14 Vp-p.

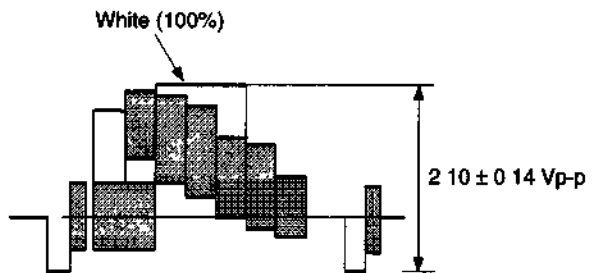


Fig. 6-2-8.

2-4-6. X'tal Oscillation Frequency Check (MA-290/292)

Purpose:

Confirm that the fsc is correct.

Mode	PB
Signal	Alignment tape SP color bar
Measurement point	Pin ⑥ of IC201
Measurement equipment	Frequency counter, Oscilloscope
Specified value	3,579,545 ± 70 Hz

Note: connect the frequency counter through a probe of high input impedance (about 10 MΩ) and low capacity (10 pF or less).

Confirmation Method:

- 1) Confirm that the frequency is 3,579,545 ± 70 Hz
- 2) Confirm that the amplitude is 500 ± 200 mVp-p.

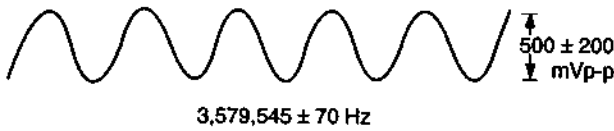


Fig. 6-2-9.

2-5. AUDIO SYSTEM ADJUSTMENTS

- Adjust both Lch and Rch.

[Connection]

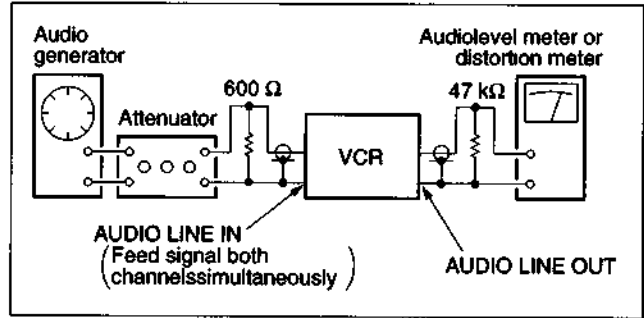


Fig. 6-2-10.

2-5-1. Hi-Fi Audio System Adjustment

- Set switches and knobs to the following positions to make adjustment unless otherwise specified
 INPUT SELECT switch LINE
 AUDIO MONITOR STEREO

1. AF Switching Position Adjustment (MA-290/292 Board)

Purpose:

Adjust the interval between A CH and B CH of tape playback output. Improve the interchangeability with other tapes and sets. When it is out of order, noisy sound is increased and big noise is heard.

Mode	PB
Signal	Alignment tape SP mode color bar
Measurement point	CH1: Pin ③ of CN261 (RP-218/220 Board) CH2: Pin ① of CN341 (RP-218/220 Board)
Measuring Instrument	Oscilloscope
Specified Value	Fig 6-2-11

Adjusting Method:

- 1) Connect MA-290 board SWP ADJ TP to the GND for about 1 second to activate the RF switching position adjustment mode.
 MA-290 Board
 Connect HI-50 board JS430 to the GND for about 1 second to activate the RF switching position adjustment mode.: MA-292 Board
- 2) Press the record button to activate the AF switching position adjustment mode.
- 3) Check appear "Adj-HF" on FL display.: MA-290 Board
 Check appear "A" on FL display.: MA-292 Board
- 4) Using the channels + and - buttons, minimize a chapped portion. At this time, confirm that a noisy sound is not heard.

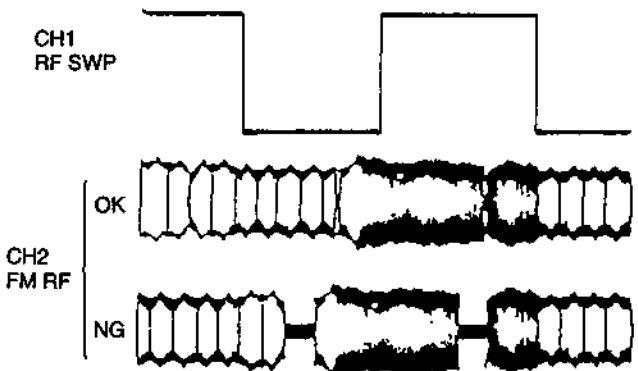


Fig. 6-2-11.

2-5-2. Normal Audio System Adjustment

- Make adjustment in the SP mode, unless otherwise specified. Use a normal VHS cassette for an adjustment tape.
- Set AUDIO MONITOR to normal.

[Adjustment Sequence]

1. ACE Head Adjustment
2. E-E Output Level Check
3. Recording Bias Adjustment
4. Overall Level Characteristic and Distortion Factor Check
5. Overall S/N Check

1. ACE Head Adjustment

Refer to the service manual of VHS MECHANICAL ADJUSTMENT IV.

2. E-E Output Level Check (MA-290/292 Board)

Purpose:

Confirm that the output level against the reference input is within the specification.

Mode	E-E
Signal	L, R: 400 Hz, -7.5 dBs
Measurement point	Audio output terminal
Measurement equipment	Audio level meter
Specified value	-7.5 ± 2 dBs

Confirmation Method:

- 1) Simultaneously input a signal of 400 Hz, -7.5 dBs to both L and R channels of Audio Line Input.
- 2) Confirm that the audio output level is -7.5 ± 2 dBs.

3. Recording Bias Check (MA-290/292 Board)

Purpose:

Confirm that the frequency characteristic is within the specification.

Mode	REC and PB (SP mode)
Signal	400 Hz, -27.5 dBs 7 kHz, -27.5 dBs
Measurement point	Audio output terminal
Measurement equipment	Audio level meter
Specified value	0 ± 3 dB

Note: Tape path adjustment must have been completed.

Confirmation Method:

- 1) Supply a signal of 400 Hz, -27.5 dBs to both L and R channels of Audio Line Input.
- 2) Connect the audio level meter to the Audio Line Output.
- 3) Adjust the attenuator so that the audio level meter will indicate -27.5 dBs.
- 4) Make recording in the SP mode.
- 5) Set an audio line input signal to 7 kHz and make recording.
- 6) Playback a recorded portion, and measure output levels at 400 Hz and 7 kHz.
- 7) Confirm that the 7 kHz playback output level within a range of the 400 Hz playback output level 0 ± 1 dB.

4. Overall Level Characteristic and Distortion Factor Check

Purpose:

Check the record level, play level, and distortion factor against the reference input.

Mode	REC and PB (SP mode)
Signal	400 Hz, -7.5 dBs
Measurement point	Audio output terminal
Measurement equipment	Audio level meter and distortion factor meter
Specified value	Playback level: -7.5 ± 3 dBs Distortion factor: 4% or less

Confirmation Method:

- 1) Supply an audio signal of 400 Hz, -7.5 dBs simultaneously to both L and R channels of Audio Line Input.
- 2) Make recording
- 3) Play back a recorded portion.
- 4) Confirm that a playback level is -7.5 ± 3 dBs.
- 5) Confirm that a distortion factor is within 4%.

5. Overall S/N Check

Purpose:

Confirm that the S/N is within the specification.

Mode	REC and PB (SP mode)
Signal	No signal
Measurement point	Audio output terminal
Measurement equipment	Audio level meter
Specified value	-46 dB or more

Confirmation Method:

- 1) Connect both L and R channels of audio line input to the GND.
- 2) Start recording.
- 3) Play the recorded part to confirm that the noise is below -46 dB.

2-6. TUNER SYSTEM ADJUSTMENTS

[Connection]

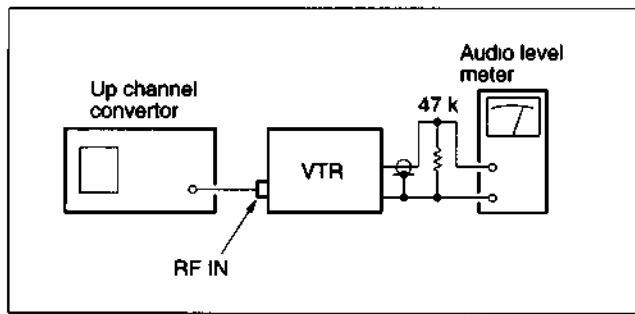


Fig. 6-2-12.

2-6-1. Separation Adjustment


Purpose:

Mixed audio signal separate Lch and Rch


Mode	E-E
Signal	VIDEO color bar (87.5% modulation) AUDIO. L 1 kHz 100% modulation R no signal ELECTRIC FIELD 60-80 dBs/75 Ω Tem
Measurement point	Pin ⑫ of IC733
Measurement equipment	Audio level meter
Adjusting Element	RV731
Specified value	-9.9 ± 0.2 dBm (700 ± 14 mVp-p)

2-7. PARTS ARRANGEMENT DIAGRAM FOR ADJUSTMENTS


MA-290/292 BOARD (Side B)

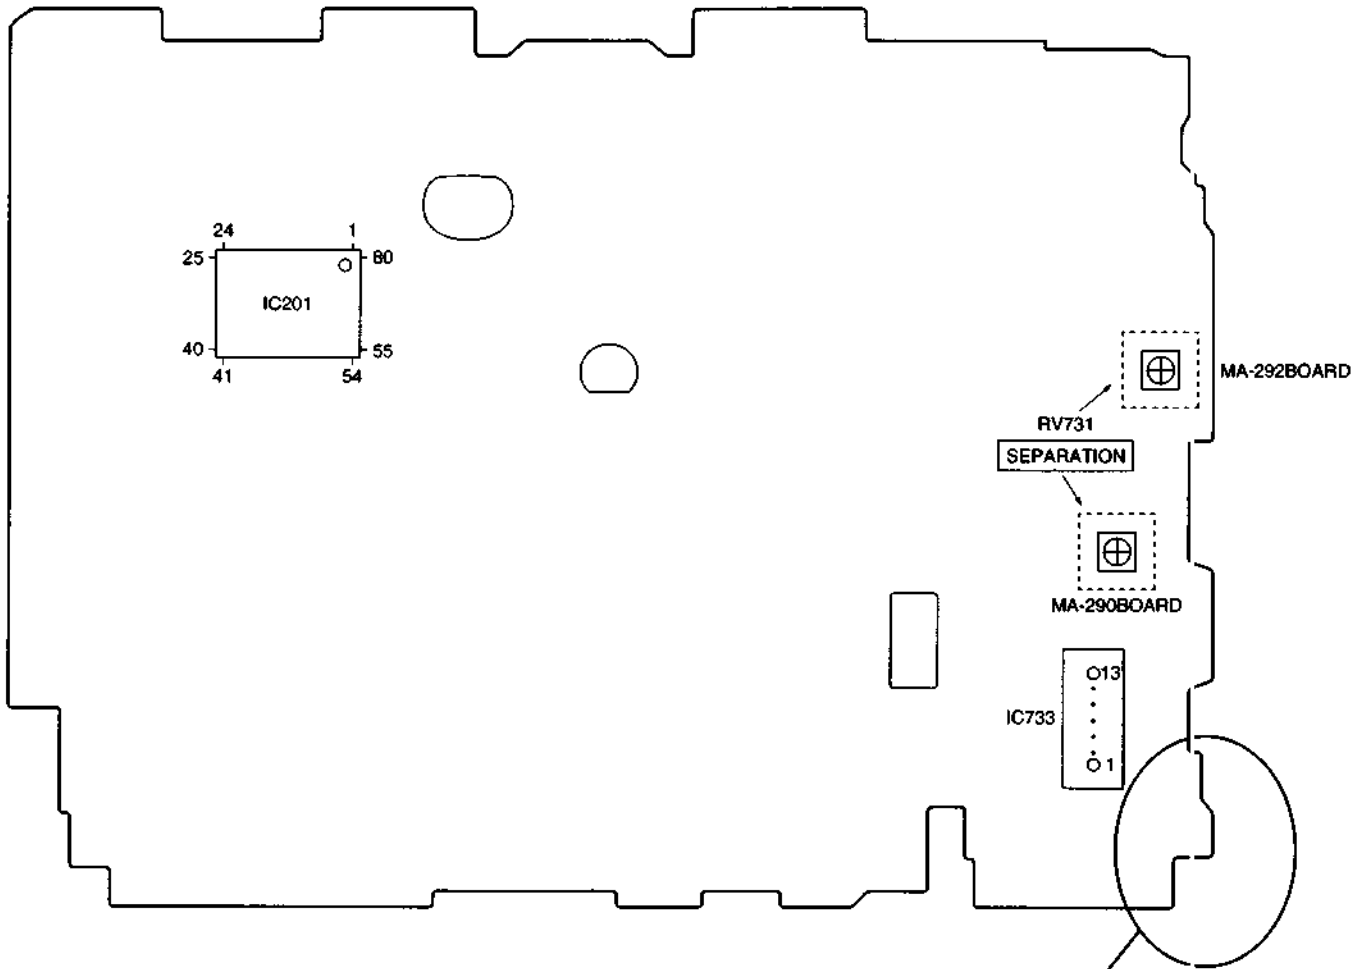


MA-290 BOARD (Side A)

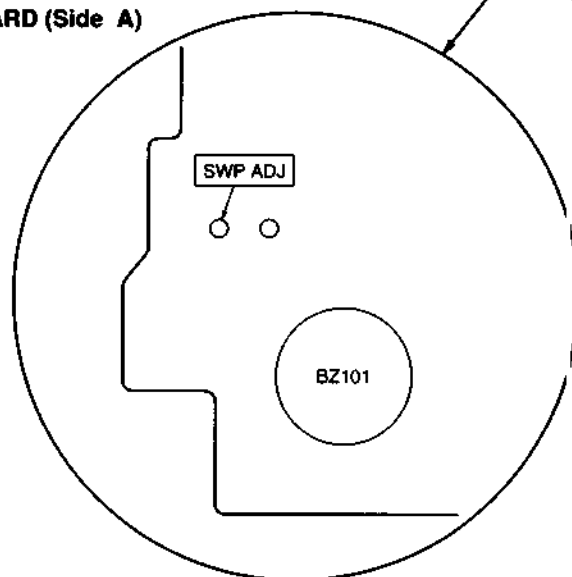


HI-50 BOARD (Side A)

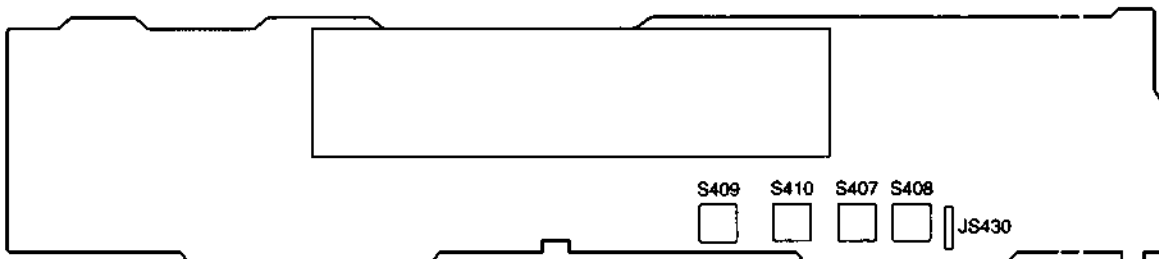


RP-218/220 BOARD (Side A)

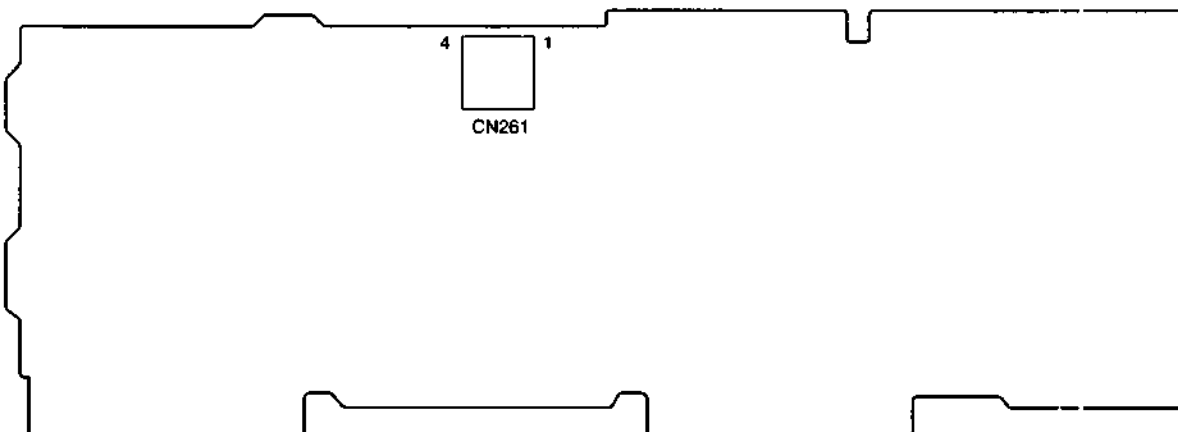

SR-800/802 BOARD (Side A)

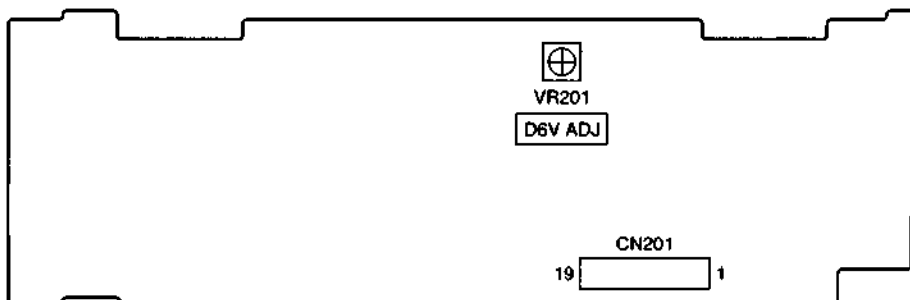


**7-1-2. FRONT PANEL AND CABINET ASSEMBLIES
(SLV-975HF)**

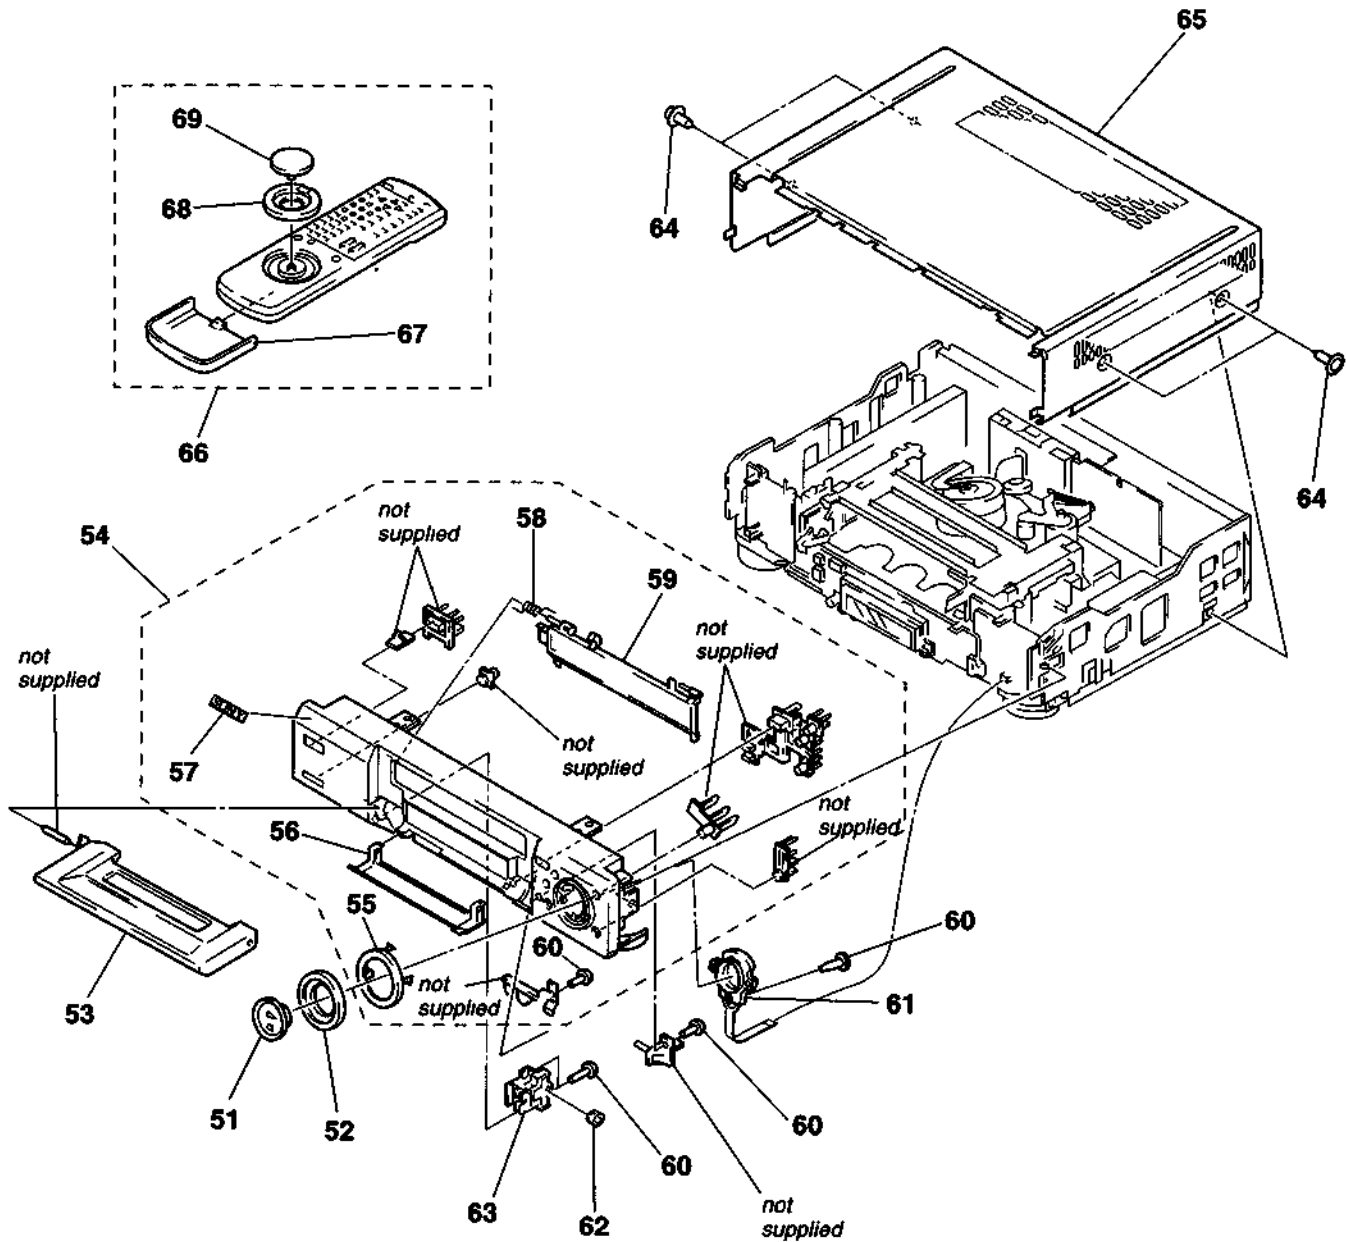

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
51	3-972-782-01	BUTTON, CENTER		61	1-762-844-31	SWITCH, ROTARY (CLICK SHUTTLE)	
52	3-972-783-01	RING, JOG		62	3-961-745-01	DAMPER, OIL	
53	1-475-008-11	SWITCH BLOCK, CONTROL		* 63	3-960-076-01	PLATE (LEFT), FULCRUM, DOOR	
54	X-3946-630-1	PANEL ASSY, FRONT		64	3-710-901-41	SCREW, TAPPING	
* 55	3-972-805-01	PLATE (LE), RING ORNAMENTAL		* 65	3-972-787-01	CASE (LS), UPPER	
56	3-966-244-51	DOOR (B), JACK		66	1-475-031-11	REMOTE COMMANDER (RMT-V201)	
57	3-943-995-01	EMBLEM (NO.5), SONY		67	3-709-126-01	COVER, BATTERY (for RMT-V201)	
58	3-953-432-01	SPRING (GE), FL		68	3-972-783-21	RING, JOG (for RMT-V201)	
59	3-965-769-21	DOOR, CASSETTE		69	3-972-850-01	BUTTON, FUNCTION (for RMT-V201)	
60	4-921-277-41	SCREW (B2.6X8), TAPPING, BIND					


7-1-3. CHASSIS ASSEMBLY

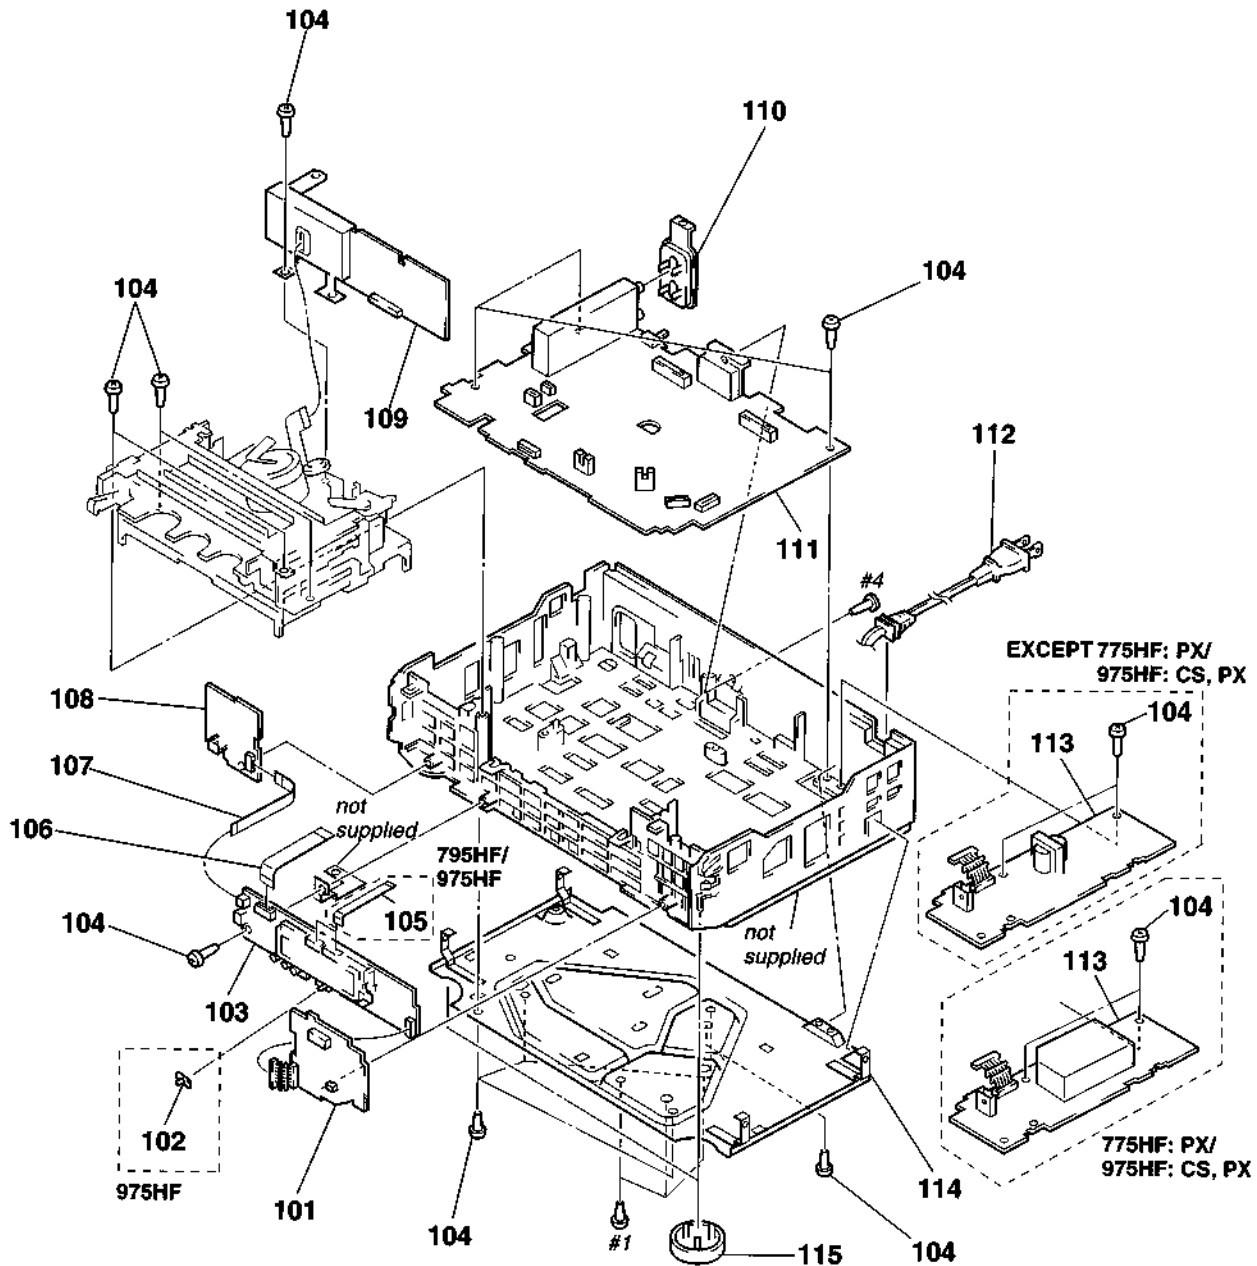

<p>The components identified by mark Δ or dotted line with mark Δ are critical for safety. Replace only with part number specified.</p>	<p>Les composants identifiés par une marque Δ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.</p>
---	---


Ref No	Part No	Description	Remark	Ref No	Part No	Description	Remark
* 101	1-664-702-11	DM-63 BOARD (795HF/975HF)		* 109	A-6791-142-A	RP-218 BOARD, COMPLETE (795HF)	
* 101	1-664-706-11	DM-65 BOARD (775HF/776HF)		* 109	A-6791-147-A	RP-220 BOARD, COMPLETE (775HF/776HF)	
102	3-966-256-01	KNOB (4P), SLIDE (975HF)		* 110	3-972-790-01	PLATE (TU), REAR JACK	
* 103	A-6791-138-A	HI-48 BOARD, COMPLETE (975HF)		* 111	A-6791-144-A	MA-290 BOARD, COMPLETE (795HF)	
* 103	A-6791-141-A	HI-48 BOARD, COMPLETE (795HF)		* 111	A-6791-149-A	MA-292 BOARD, COMPLETE (775HF/776HF)	
* 103	A-6791-146-A	HI-50 BOARD, COMPLETE (775HF/776HF)		* 111	A-6796-431-A	MA-290 BOARD, COMPLETE (975HF)	
104	3-970-608-21	SUMITITE (B3), +BV		Δ 112	1-777-851-41	CORD, POWER	
105	1-777-966-11	CABLE, FLAT (FMH-16) 31P (795HF/975HF)		113	1-468-184-11	SR-800 BOARD	
106	1-777-962-12	CABLE, FLAT (FMH-14) 15P (775HF/776HF)				(EXCEPT 775HF PX/975HF CS, PX)	
106	1-777-966-11	CABLE, FLAT (FMH-16) 31P (795HF/975HF)		113	1-468-186-11	SR-802 BOARD (775HF PX/975HF CS, PX)	
107	1-777-963-11	CABLE, FLAT (FHM-3) 5P		* 114	3-972-786-01	PLATE (LS), BOTTOM	
* 108	1-664-703-11	MF-302 BOARD (795HF/975HF)		115	3-966-229-01	INSULATOR (ST) (EXCEPT 776HF)	
* 108	1-664-707-11	MF-303 BOARD (775HF/776HF)		115	3-966-229-31	INSULATOR (ST) (776HF)	
* 109	A-6791-139-A	RP-218 BOARD, COMPLETE (975HF)					

7-1-4. MECHANISM CHASSIS ASSEMBLY (1)

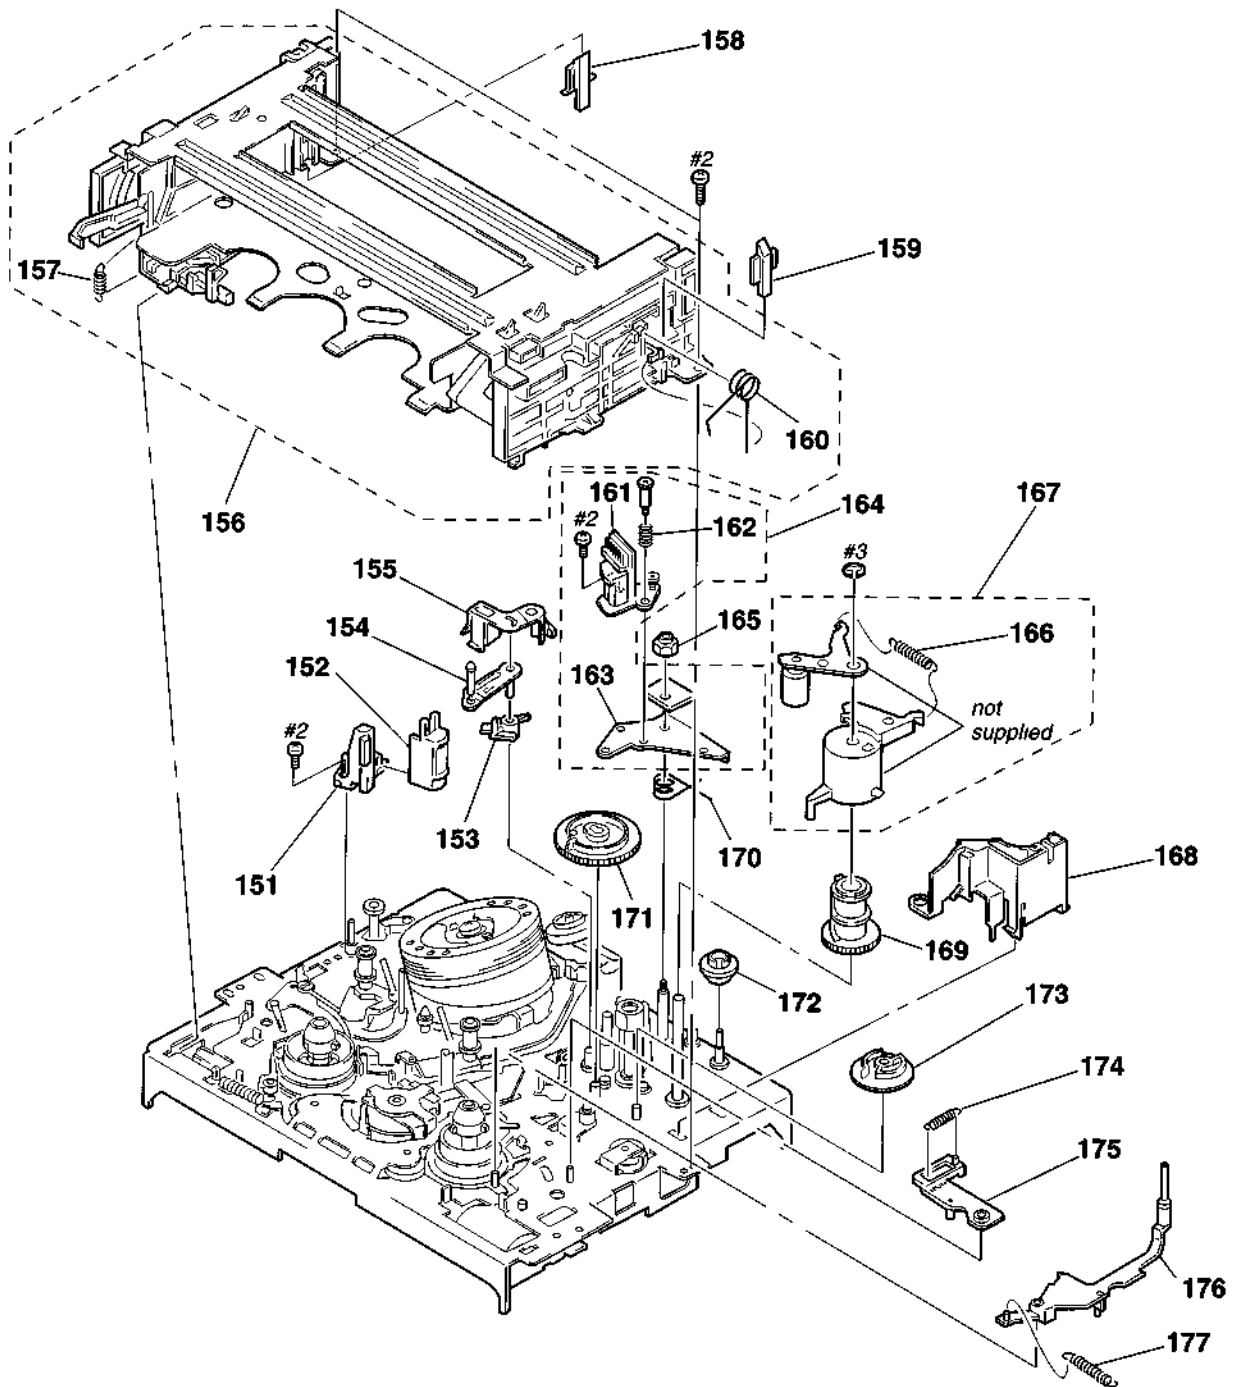


Ref No	Part No	Description	Remark	Ref No	Part No	Description	Remark
151	X-3945-348-2	FEH ASSY		165	3-942-867-01	NUT, AC HEIGHT ADJUSTMENT	
152	1-500-144-11	HEAD, FE		166	3-958-455-01	SPRING (PINCH), TENSION	
153	3-958-421-01	HOLDER, TG8		167	A-6746-072-A	PRESS BLOCK ASSY, PINCH	
154	X-3944-797-1	TG8 ASSY		168	3-958-454-01	OPNER, LID	
155	3-962-298-01	BRACKET, TG7 TAPE		169	3-958-151-01	GEAR, ELEVATOR	
156	A-6759-603-A	FL BLOCK ASSY		170	3-958-487-01	SPRING, (AEC) TORSION COIL	
157	3-958-467-01	SPRING, TENSION COIL		171	3-958-152-01	GEAR, TG8	
158	3-960-215-01	PLATE, LIGHT GUIDE, END SENSOR		172	3-958-501-01	SCREW, ACE ADJUSTMENT	
159	3-970-473-01	PLATE, LIGHT GUIDE, TOP SENSOR		173	3-958-153-01	GEAR, PRESS	
160	3-970-471-01	SPRING (DECK OPEN), TORSION		174	3-958-462-01	SPRING (RVS BRAKE), TENSION	
161	1-506-485-11	PIN, CONNECTOR 6P		175	X-3943-885-1	ARM ASSY, RVS BRAKE	
162	3-960-439-02	SPRING (ACE), COMPRESSION		176	X-3943-882-1	BRAKE (T) ASSY, SOFT	
163	3-958-491-01	BASE, ACE		177	3-958-505-01	SPRING (SOFT BRAKE T), TENSION	
164	A-6736-103-A	ACE BLOCK ASSY					

7-1-5. MECHANISM CHASSIS ASSEMBLY (2)

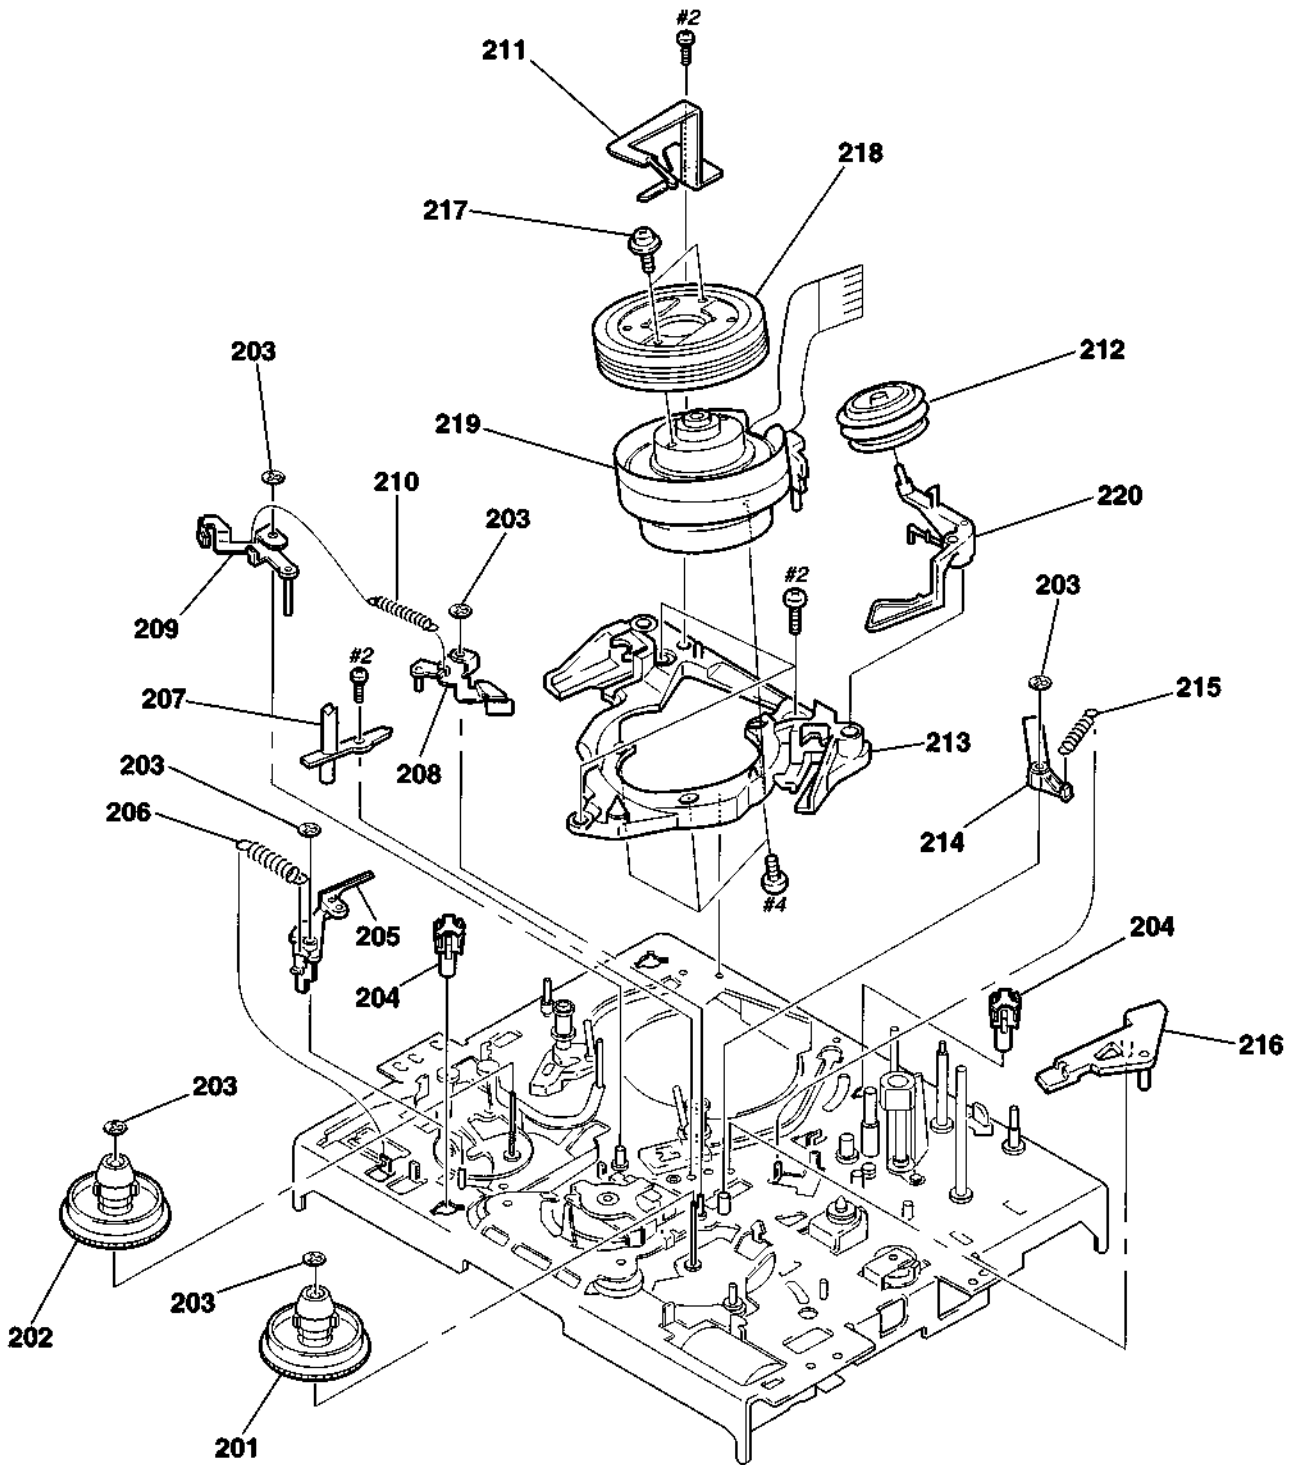


Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
201	X-3943-903-1	TABLE, REEL (T) ASSY		211	X-3943-899-8	GROUND ASSY, SHAFT	
202	X-3943-902-1	TABLE, REEL (S) ASSY		212	X-3947-255-1	ROLLER ASSY, HC	
203	3-669-595-00	WASHER (2), STOPPER		213	3-969-629-01	BASE, DRUM	
204	3-958-390-01	SHAFT, PC BOARD		214	3-960-139-01	ARM, NEUTRALITY	
205	3-958-450-01	BRAKE (S), SOFT		215	3-958-535-01	SPRING, TENSION	
206	3-958-443-01	SPRING, STRETCH COIL SPRING		216	3-960-138-01	ARM, PENDULUM COMPULSION	
207	3-958-391-01	PLATE, LIGHT GUIDE, LED		217	2-643-205-01	SCREW, +PW 3X8	
208	X-3945-444-1	BRAKE (T) ASSY, MAIN		218	8-848-576-02	DRUM ASSY, ROTARY UPPER (DZR-45-R)	
209	X-3945-443-1	BRAKE (S) ASSY, MAIN		219	8-848-666-11	DRUM ASSY, LOWER (DZL-51B/J-RP)	
210	3-958-517-01	SPRING, TENSION COIL		220	3-975-724-01	ARM, HC	

7-1-6. MECHANISM CHASSIS ASSEMBLY (3)

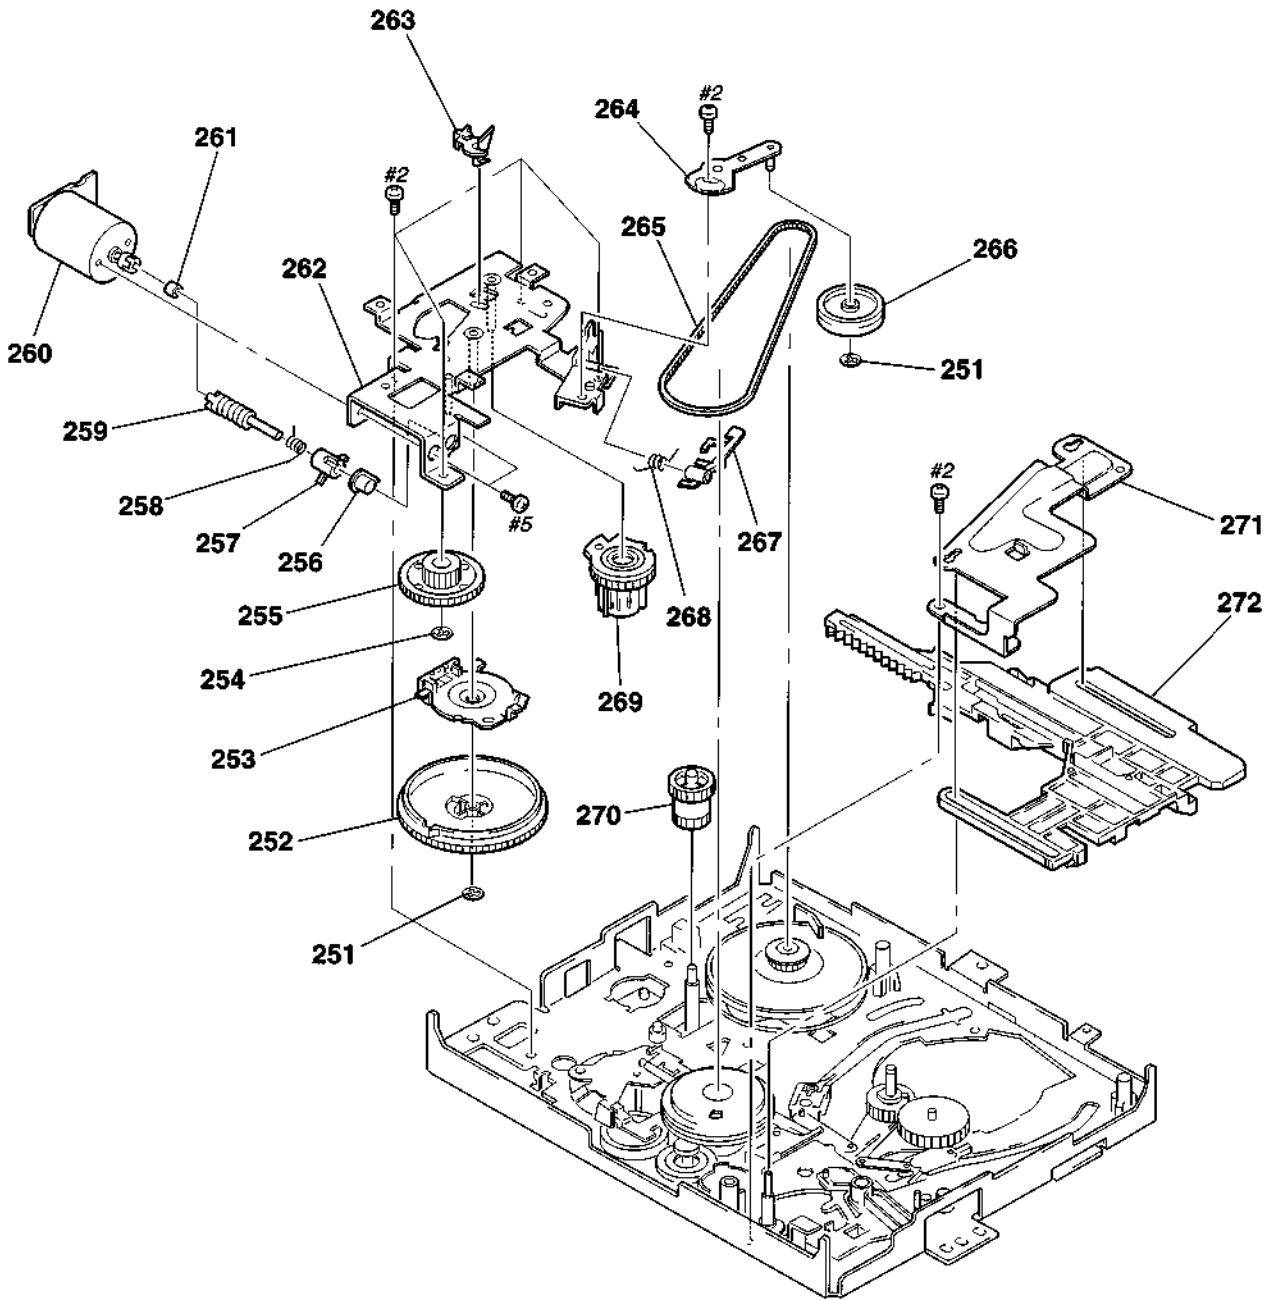

Ref No	Part No	Description	Remark	Ref No	Part No	Description	Remark
251	3-669-595-00	WASHER (2), STOPPER		* 262	X-3943-884-1	CHASSIS ASSY, CAM MOTOR	
252	3-958-161-07	GEAR, CAM		263	3-965-977-03	RETAINER, CAM GEAR	
253	1-762-076-11	SWITCH, ROTARY		264	X-3943-889-1	ARM ASSY, TENSION VEHICLE	
254	3-966-092-01	RING, RETAINING, SLIT WASHER		265	3-958-361-01	BELT, TIMING	
255	3-958-157-02	WHEEL, WORM		266	3-958-448-01	WHEEL, TENSION	
256	3-958-155-01	BEARING, CAM MOTOR		267	X-3943-888-1	BRAKE ASSY, CAP	
257	3-958-160-01	PROPELLOR		268	3-958-445-01	SPRING, TORSION COIL (CAP BRAKE)	
258	3-958-460-01	SPRING, ONE-WAY		269	3-958-156-03	GEAR, FL DRIVING	
259	3-958-159-01	WORM		270	3-958-162-02	GEAR, UPPER/LOWER COMMUNICATION	
260	X-3943-883-1	MOTOR ASSY, CAM		* 271	3-959-763-01	RETAINER	
261	3-959-840-11	RUBBER, JOINT		272	3-958-163-04	SLIDER, MAIN	

7-1-7. MECHANISM CHASSIS ASSEMBLY (4)

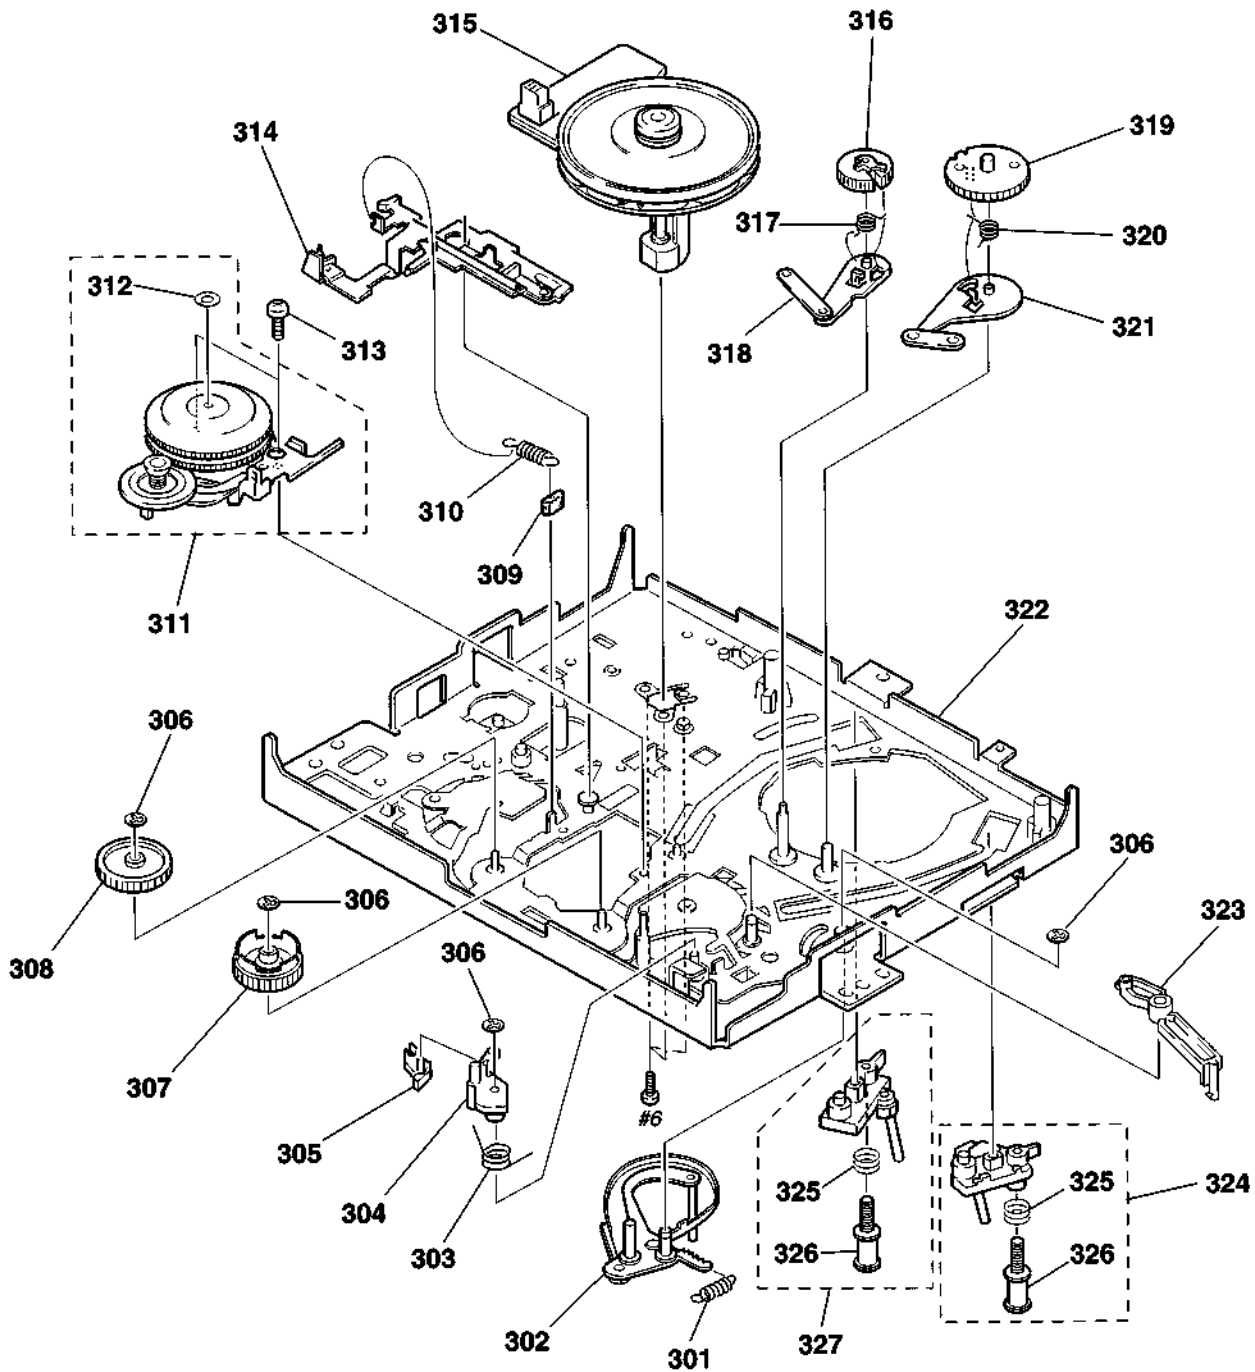

Ref No	Part No	Description	Remark	Ref No	Part No	Description	Remark
301	3-958-492-01	SPRING (TG1), TENSION COIL		315	1-698-409-11	MOTOR, DC SCV-0801A/Z-NP (CAPSTAN)	
302	X-3943-886-1	TG1 ASSY		316	3-958-485-02	GEAR (T), LOADING	
303	3-958-534-01	SPRING, TORSION		317	3-960-449-01	SPRING (T), TORSION COIL	
304	3-958-532-01	ARM, S WINDING		318	X-3943-891-3	LEVER (T) ASSY, LOADING	
305	3-958-533-01	CLAW, S WINDING		319	3-958-476-01	GEAR (S), LOADING	
306	3-669-595-00	WASHER (2), STOPPER		320	3-960-448-01	SPRING (S), TORSION COIL	
307	3-962-959-01	GEAR (S-K), IDLER		321	X-3943-890-2	LEVER (S) ASSY, LOADING	
308	3-962-960-01	GEAR (T-K), IDLER		322	X-3945-485-4	CHASSIS ASSY, MECHANICAL	
309	3-959-840-11	RUBBER, JOINT		323	3-958-504-01	ARM, FIXED RELEASE	
310	3-958-529-01	SPRING (MOMENT), TENSION		324	A-6750-324-A	SHUTTLE (S) BLOCK ASSY	
311	A-6739-102-A	RKB BLOCK ASSY		325	3-965-178-01	SPRING	
312	3-966-092-01	RING, RETAINING, SLIT WASHER		326	X-3944-378-1	ROLLER ASSY, GUIDE	
313	3-961-441-01	SCREW (3X8)		327	A-6750-325-A	T BLOCK ASSY, SHUTTLE	
314	X-3943-897-1	LEVER ASSY, TRIGGER					

7-2. ELECTRICAL PARTS LIST

NOTE:

- Due to standardization, replacements in the parts list may be different from the parts specified in the diagrams or the components used on the set.
- -XX and -X mean standardized parts, so they may have some difference from the original one.
- **RESISTORS**
All resistors are in ohms
METAL: Metal-film resistor
METAL OXIDE: Metal oxide-film resistor
F: nonflammable

- Items marked "*" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- **SEMICONDUCTORS**
In each case, u, μ , for example:
uA μ A uPA... μ PA
uPB... μ PB uPC : μ PC
uPD : μ PD
- **CAPACITORS**
uF: μ F
- **COILS**
uH: μ H

The components identified by mark Δ or dotted line with mark Δ are critical for safety. Replace only with part number specified.

Les composants identifiés par une marque Δ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

When indicating parts by reference number, please include the board.

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
		DM-63 BOARD (795HF/975HF)		R443	1-216-033-00	METAL CHIP 220 5%	1/10W (975HF)
		*****		R444	1-216-033-00	METAL CHIP 220 5%	1/10W (975HF)
		(Ref.No. 3,000 Series)		R445	1-216-033-00	METAL CHIP 220 5%	1/10W (975HF)
*	3-972-809-01	HOLDER, LED (975HF)		R446	1-216-033-00	METAL CHIP 220 5%	1/10W (975HF)
		< CAPACITOR >		R447	1-216-033-00	METAL CHIP 220 5%	1/10W (975HF)
C440	1-163-251-11	CERAMIC CHIP 100PF 5%	50V (975HF)	R448	1-216-033-00	METAL CHIP 220 5%	1/10W (975HF)
C441	1-163-038-00	CERAMIC CHIP 0 1uF	25V (975HF)	R449	1-216-049-00	METAL CHIP 1K 5%	1/10W (975HF)
C442	1-126-933-11	ELECT 100uF 20%	16V (975HF)	R450	1-216-049-00	METAL CHIP 1K 5%	1/10W (975HF)
		< CONNECTOR >		R451	1-216-049-00	METAL CHIP 1K 5%	1/10W (975HF)
CN440	1-695-947-11	CONNECTOR, BOARD TO BOARD 10P		R452	1-216-049-00	METAL CHIP 1K 5%	1/10W (975HF)
CN441	1-774-471-31	CONNECTOR, FFC/FPC 5P		R453	1-216-033-00	METAL CHIP 220 5%	1/10W (975HF)
		< DIODE >		R454	1-216-033-00	METAL CHIP 220 5%	1/10W (975HF)
D440	8-719-056-07	LED SLR-342MC3F (975HF)		R455	1-216-057-00	METAL CHIP 2 2K 5%	1/10W
D441	8-719-056-07	LED SLR-342MC3F (975HF)		R456	1-216-057-00	METAL CHIP 2 2K 5%	1/10W
D442	8-719-056-07	LED SLR-342MC3F (975HF)		R458	1-216-057-00	METAL CHIP 2.2K 5%	1/10W
D443	8-719-056-07	LED SLR-342MC3F (975HF)		R459	1-216-057-00	METAL CHIP 2.2K 5%	1/10W
D444	8-719-056-06	LED SLR-342DC3F (975HF)		R460	1-216-065-00	METAL CHIP 4 7K 5%	1/10W
D445	8-719-056-07	LED SLR-342MC3F (975HF)		R461	1-216-061-00	METAL CHIP 3 3K 5%	1/10W
D446	8-719-056-07	LED SLR-342MC3F (975HF)		R462	1-216-073-00	METAL CHIP 10K 5%	1/10W
D447	8-719-056-07	LED SLR-342MC3F (975HF)		R463	1-216-073-00	METAL CHIP 10K 5%	1/10W
D448	8-719-056-07	LED SLR-342MC3F (975HF)				< SWITCH >	
D449	8-719-056-06	LED SLR-342DCT31		S441	1-571-977-11	SWITCH, TACTIL (EJECT)	
		< IC >		S442	1-571-977-11	SWITCH, TACTIL (REW)	
IC440	8-759-366-45	IC NJU3713G(TE2) (975HF)		S443	1-571-977-11	SWITCH, TACTIL (FF)	
		< TRANSISTOR >		S444	1-571-977-11	SWITCH, TACTIL (PAUSE)	
Q440	8-729-421-19	TRANSISTOR UN2213 (795HF)		S445	1-571-977-11	SWITCH, TACTIL (REC)	
		< RESISTOR >		S446	1-571-977-11	SWITCH, TACTIL (JOG)	
R440	1-216-073-00	METAL CHIP 10K 5%	1/10W				
R441	1-216-033-00	METAL CHIP 220 5%	1/10W (975HF)				
R442	1-216-033-00	METAL CHIP 220 5%	1/10W (975HF)				

Ref. No	Part No	Description	Remark	Ref. No	Part No	Description	Remark
		DM-65 BOARD (775HF/776HF)				< JUMPER RESISTOR >	

		(Ref.No. 1,000 Series)					
		< CONNECTOR >				< COIL >	
CN440	1-770-031-11	CONNECTOR, BOARD TO BOARD 7P		JS414	1-216-295-00	METAL CHIP 0 5% 1/10W	
		< RESISTOR >		L412	1-410-521-11	INDUCTOR 100uH (975HF)	
R441	1-216-053-00	METAL CHIP 1 5K 5% 1/10W		L413	1-410-501-11	INDUCTOR 2.2uH (975HF)	
R442	1-216-053-00	METAL CHIP 1 5K 5% 1/10W				< FLUORECENT INDICATOR >	
R443	1-216-057-00	METAL CHIP 2.2K 5% 1/10W		ND400	1-517-594-21	TUBE, FLUORESCENT INDICATOR (795HF)	
R444	1-216-295-00	METAL CHIP 0 5% 1/10W		ND400	1-517-594-11	TUBE, FLUORESCENT INDICATOR (975HF)	
R445	1-216-053-00	METAL CHIP 1.5K 5% 1/10W				< JACK >	
R446	1-216-053-00	METAL CHIP 1.5K 5% 1/10W		PJ400	1-766-861-11	JACK, PIN (3P)(975HF)(LINE-2 IN)	
R447	1-216-057-00	METAL CHIP 2 2K 5% 1/10W		PJ401	1-774-509-11	JACK, PIN (3P)(795HF)(LINE-2 IN)	
		< SWITCH >				< RESISTOR >	
S441	1-571-977-11	SWITCH, TACTIL (EJECT)		R410	1-216-295-00	METAL CHIP 0 5% 1/10W	
S444	1-571-977-11	SWITCH, TACTIL (PAUSE)		R411	1-216-295-00	METAL CHIP 0 5% 1/10W	
S445	1-571-977-11	SWITCH, TACTIL (REC)		R412	1-216-022-00	METAL CHIP 75 5% 1/10W	
S447	1-571-977-11	SWITCH, TACTIL (REW)		R420	1-216-073-00	METAL CHIP 10K 5% 1/10W	
S448	1-571-977-11	SWITCH, TACTIL (FF)				(795HF)	
S449	1-571-977-11	SWITCH, TACTIL (STOP)		R420	1-216-095-00	METAL CHIP 82K 5% 1/10W	
S450	1-571-977-11	SWITCH, TACTIL (PLAY)				(975HF)	
				R421	1-216-073-00	METAL CHIP 10K 5% 1/10W	
						(795HF)	
*	A-6791-141-A	HI-48 BOARD, COMPLETE (795HF)		R421	1-216-095-00	METAL CHIP 82K 5% 1/10W	
*	A-6791-138-A	HI-48 BOARD, COMPLETE (975HF)				(975HF)	
		*****		R422	1-216-073-00	METAL CHIP 10K 5% 1/10W	
		(Ref.No. 3,000 Series)		R423	1-216-073-00	METAL CHIP 10K 5% 1/10W	
				R424	1-216-073-00	METAL CHIP 10K 5% 1/10W	
*	3-972-792-01	HOLDER (129), FL (795HF)		R425	1-216-073-00	METAL CHIP 10K 5% 1/10W	
		< CAPACITOR >		R427	1-216-069-00	METAL CHIP 6.8K 5% 1/10W	
C412	1-163-009-11	CERAMIC CHIP 0.001uF 10% 50V		R430	1-216-089-00	METAL CHIP 47K 5% 1/10W	
C414	1-163-009-11	CERAMIC CHIP 0.001uF 10% 50V				(795HF)	
C415	1-163-009-11	CERAMIC CHIP 0.001uF 10% 50V		R431	1-216-075-00	METAL CHIP 12K 5% 1/10W	
* C422	1-165-319-11	CERAMIC CHIP 0.1uF 50V				(795HF)	
		< CONNECTOR >		R432	1-216-075-00	METAL CHIP 12K 5% 1/10W	
						(795HF)	
CN400	1-691-036-21	PIN, CONNECTOR (PC BOARD) 4P (975HF)		R433	1-216-071-00	METAL CHIP 8.2K 5% 1/10W	
* CN401	1-691-407-11	CONNECTOR, BOARD TO BOARD 10P				(795HF)	
CN402	1-691-074-11	HOUSING, CONNECTOR 15P		R434	1-216-057-00	METAL CHIP 2 2K 5% 1/10W	
CN403	1-691-074-11	HOUSING, CONNECTOR 15P				(795HF)	
CN404	1-691-074-11	HOUSING, CONNECTOR 15P		R434	1-216-071-00	METAL CHIP 8.2K 5% 1/10W	
						(975HF)	
CN405	1-506-484-11	PIN, CONNECTOR 5P		R435	1-216-057-00	METAL CHIP 2.2K 5% 1/10W	
CN406	1-691-064-31	HOUSING, CONNECTOR 5P				(795HF)	
		< DIODE >		R435	1-216-065-00	METAL CHIP 4.7K 5% 1/10W	
						(975HF)	
D410	8-719-108-12	DIODE RD9.1E-W		R436	1-216-075-00	METAL CHIP 12K 5% 1/10W	
D411	8-719-108-12	DIODE RD9.1E-W				(975HF)	
D412	8-719-109-93	DIODE RD6.2ES-B2		R437	1-216-073-00	METAL CHIP 10K 5% 1/10W	
D413	8-719-108-12	DIODE RD9.1E-W				(975HF)	
D420	8-719-110-08	DIODE RD8.2ES-B2		R438	1-216-081-00	METAL CHIP 22K 5% 1/10W	
		< JUMPER RESISTOR >				(975HF)	
JR401	1-216-295-00	METAL CHIP 0 5% 1/10W				< SWITCH >	
JR402	1-216-296-00	METAL CHIP 0 5% 1/8W		S401	1-762-171-11	SWITCH, SLIDE (975HF)(COMMAND MODE)	
JR405	1-216-295-00	METAL CHIP 0 5% 1/10W		S404	1-571-977-11	SWITCH, TACTIL (795HF)(TV/VTR)	
				S405	1-571-977-11	SWITCH, TACTIL (795HF)	
						(CHANNEL, TRACKING +)	

HI-48

HI-50

MA-290

Ref. No.	Part No.	Description	Remark
S406	1-571-977-11	SWITCH, TACTIL (795HF) (CHANNEL, TRACKING -)	
S407	1-571-977-11	SWITCH, TACTIL (795HF)(EDIT)	
S407	1-571-977-11	SWITCH, TACTIL (975HF)(EASY SET UP)	
S408	1-571-977-11	SWITCH, TACTIL (795HF)(EASY SET UP)	
S409	1-571-977-11	SWITCH, TACTIL (795HF)(INPUT SELECT)	
S410	1-571-977-11	SWITCH, TACTIL(795HF)(TAPE SPEED(SP/EP))	
S410	1-571-977-11	SWITCH, TACTIL (975HF)(EDIT)	
<hr/>			
*	A-6791-146-A	HI-50 BOARD, COMPLETE (775HF/776HF) ***** (Ref.No. 1,000 Series)	
*	3-972-815-01	HOLDER (100), FL < CAPACITOR >	
C412	1-163-009-11	CERAMIC CHIP 0.001uF 10% 50V	
C414	1-163-009-11	CERAMIC CHIP 0.001uF 10% 50V	
C415	1-163-009-11	CERAMIC CHIP 0.001uF 10% 50V	
C420	1-164-232-11	CERAMIC CHIP 0.01uF 50V	
C421	1-124-589-11	ELECT 47uF 20% 16V	
* C422	1-165-319-11	CERAMIC CHIP 0.1uF 50V	
< CONNECTOR >			
* CN401	1-691-406-11	CONNECTOR, BOARD TO BOARD 7P	
CN402	1-691-648-11	SOCKET, CONNECTOR 15P	
CN405	1-506-484-11	PIN, CONNECTOR 5P	
CN406	1-691-064-31	HOUSING, CONNECTOR 5P	
< DIODE >			
D410	8-719-108-12	DIODE RD9.1E-W	
D411	8-719-108-12	DIODE RD9.1E-W	
D412	8-719-109-93	DIODE RD6.2ES-B2	
D413	8-719-108-12	DIODE RD9.1E-W	
D420	8-719-110-08	DIODE RD8.2ES-B2	
< IC >			
IC410	8-759-366-44	IC uPD16312GB-3B4	
< JUMPER RESISTOR >			
JS414	1-216-295-00	METAL CHIP 0 5% 1/10W	
< COIL >			
L420	1-410-509-11	INDUCTOR 10uH	
< FLUORESCENT INDICATOR >			
ND400	1-517-592-11	TUBE, FLUORESCENT INDICATOR	
< JACK >			
PJ401	1-774-509-11	JACK, PIN 3P (LINE-2 IN)	
< RESISTOR >			
R410	1-216-295-00	METAL CHIP 0 5% 1/10W	
R411	1-216-295-00	METAL CHIP 0 5% 1/10W	
R412	1-216-022-00	METAL CHIP 75 5% 1/10W	
R420	1-216-295-00	METAL CHIP 0 5% 1/10W	
R421	1-216-049-00	METAL CHIP 1K 5% 1/10W	

Ref. No.	Part No.	Description	Remark
R422	1-216-049-00	METAL CHIP 1K 5% 1/10W	
R423	1-216-049-00	METAL CHIP 1K 5% 1/10W	
R424	1-216-065-00	METAL CHIP 4.7K 5% 1/10W	
R425	1-216-085-00	METAL CHIP 33K 5% 1/10W	
R426	1-216-073-00	METAL CHIP 10K 5% 1/10W	
<hr/>			
R427	1-216-069-00	METAL CHIP 6.8K 5% 1/10W	
R430	1-216-059-00	METAL CHIP 2.7K 5% 1/10W	
R431	1-216-065-00	METAL CHIP 4.7K 5% 1/10W	
R432	1-216-069-00	METAL CHIP 6.8K 5% 1/10W	
R433	1-216-077-00	METAL CHIP 15K 5% 1/10W	
<hr/>			
R434	1-216-059-00	METAL CHIP 2.7K 5% 1/10W	
R435	1-216-065-00	METAL CHIP 4.7K 5% 1/10W	
R436	1-216-069-00	METAL CHIP 6.8K 5% 1/10W	
R437	1-216-091-00	METAL CHIP 56K 5% 1/10W	
R438	1-216-073-00	METAL CHIP 10K 5% 1/10W	
<hr/>			
R439	1-216-073-00	METAL CHIP 10K 5% 1/10W	
R440	1-216-073-00	METAL CHIP 10K 5% 1/10W	
< SWITCH >			
S404	1-571-977-11	SWITCH, TACTIL (TV/VTR)	
S405	1-571-977-11	SWITCH, TACTIL (PROGRAM, TRACKING +)	
S406	1-571-977-11	SWITCH, TACTIL (PROGRAM, TRACKING -)	
S407	1-571-977-11	SWITCH, TACTIL (EASY SET UP)	
S409	1-571-977-11	SWITCH, TACTIL (INPUT SELECT)	
<hr/>			
S410	1-571-977-11	SWITCH, TACTIL (TAPE SPEED(SP/EP))	
<hr/>			
*	A-6791-144-A	MA-290 BOARD, COMPLETE (795HF)	
*	A-6796-431-A	MA-290 BOARD, COMPLETE (975HF) ***** (Ref.No. 3,000 Series)	
*	3-960-273-01	SPACER, TOP END	
*	3-960-274-01	SPACER, LED	
< BUZZER >			
BZ181	1-529-104-11	BUZZER, PIEZOELECTRIC	
< CAPACITOR >			
C100	1-126-176-11	ELECT 220uF 20% 10V	
C101	1-163-009-11	CERAMIC CHIP 0.001uF 10% 50V	
C102	1-163-009-11	CERAMIC CHIP 0.001uF 10% 50V	
C103	1-163-009-11	CERAMIC CHIP 0.001uF 10% 50V	
C104	1-163-009-11	CERAMIC CHIP 0.001uF 10% 50V	
<hr/>			
C105	1-164-232-11	CERAMIC CHIP 0.01uF 50V	
C107	1-137-372-11	FILM 0.022uF 5% 50V	
C108	1-137-441-11	FILM 0.027uF 5% 50V	
C109	1-124-261-00	ELECT 10uF 20% 50V	
C130	1-164-232-11	CERAMIC CHIP 0.01uF 50V	
<hr/>			
C131	1-163-038-00	CERAMIC CHIP 0.1uF 25V	
C132	1-124-589-11	ELECT 47uF 20% 16V	
C134	1-163-038-00	CERAMIC CHIP 0.1uF 25V	
C161	1-163-038-00	CERAMIC CHIP 0.1uF 25V	
C162	1-126-935-11	ELECT 470uF 20% 6.3V	
<hr/>			
C163	1-163-009-11	CERAMIC CHIP 0.001uF 10% 50V	
C164	1-163-227-11	CERAMIC CHIP 10PF 0.5PF 50V	
C165	1-163-229-11	CERAMIC CHIP 12PF 5% 50V	
C169	1-163-038-00	CERAMIC CHIP 0.1uF 25V	
C181	1-164-232-11	CERAMIC CHIP 0.01uF 50V	

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
C182	1-164-232-11	CERAMIC CHIP 0.01uF	50V	C301	1-163-038-00	CERAMIC CHIP 0.1uF	25V
C183	1-164-232-11	CERAMIC CHIP 0.01uF	50V	C302	1-124-589-11	ELECT 47uF	20% 16V
C184	1-164-232-11	CERAMIC CHIP 0.01uF	50V	C305	1-126-160-11	ELECT 1uF	20% 50V
C185	1-126-916-11	ELECT 1000uF	20% 6.3V	C306	1-126-160-11	ELECT 1uF	20% 50V
C186	1-163-038-00	CERAMIC CHIP 0.1uF	25V	C307	1-124-261-00	ELECT 10uF	20% 50V
C187	1-126-935-11	ELECT 470uF	20% 6.3V	C308	1-124-589-11	ELECT 47uF	20% 16V
C189	1-163-038-00	CERAMIC CHIP 0.1uF	25V	C309	1-126-963-11	ELECT 4.7uF	20% 50V
C190	1-104-905-11	CAPACITOR 0.22F	5 5V	C310	1-163-009-11	CERAMIC CHIP 0.001uF	10% 50V
C191	1-126-935-11	ELECT 470uF	20% 6.3V	C311	1-164-161-11	CERAMIC CHIP 0.0022uF	10% 100V
C192	1-164-232-11	CERAMIC CHIP 0.01uF	50V	C312	1-137-370-11	FILM 0.01uF	5% 50V
C193	1-163-038-00	CERAMIC CHIP 0.1uF	25V	C313	1-124-261-00	ELECT 10uF	20% 50V
C194	1-164-232-11	CERAMIC CHIP 0.01uF	50V	C314	1-164-232-11	CERAMIC CHIP 0.01uF	50V
C195	1-164-004-11	CERAMIC CHIP 0.1uF	10% 25V	C315	1-126-160-11	ELECT 1uF	20% 50V
C196	1-163-231-11	CERAMIC CHIP 15PF	5% 50V	C317	1-126-183-11	ELECT 4.7uF	20% 50V
C197	1-163-229-11	CERAMIC CHIP 12PF	5% 50V	C318	1-124-589-11	ELECT 47uF	20% 16V
C201	1-109-982-11	CERAMIC CHIP 1uF	10% 10V	C361	1-164-489-11	CERAMIC CHIP 0.22uF	10% 16V
C202	1-163-809-11	CERAMIC CHIP 0.047uF	10% 25V	C362	1-164-489-11	CERAMIC CHIP 0.22uF	10% 16V
C204	1-164-232-11	CERAMIC CHIP 0.01uF	50V	C363	1-126-160-11	ELECT 1uF	20% 50V
C205	1-163-037-11	CERAMIC CHIP 0.022uF	10% 25V	C364	1-126-160-11	ELECT 1uF	20% 50V
C206	1-164-232-11	CERAMIC CHIP 0.01uF	50V	C365	1-126-160-11	ELECT 1uF	20% 50V
C207	1-164-232-11	CERAMIC CHIP 0.01uF	50V	C366	1-126-160-11	ELECT 1uF	20% 50V
C209	1-124-234-00	ELECT 22uF	20% 16V	C369	1-126-964-11	ELECT 10uF	20% 50V
C210	1-163-131-00	CERAMIC CHIP 390PF	5% 50V	C370	1-126-964-11	ELECT 10uF	20% 50V
C211	1-163-239-11	CERAMIC CHIP 33PF	5% 50V	C371	1-126-964-11	ELECT 10uF	20% 50V
C214	1-163-125-00	CERAMIC CHIP 220PF	5% 50V	C372	1-126-964-11	ELECT 10uF	20% 50V
C217	1-109-982-11	CERAMIC CHIP 1uF	10% 10V	C373	1-126-964-11	ELECT 10uF	20% 50V
C219	1-163-038-00	CERAMIC CHIP 0.1uF	25V	C374	1-126-160-11	ELECT 1uF	20% 50V
C220	1-109-982-11	CERAMIC CHIP 1uF	10% 10V	C375	1-137-378-11	FILM 0.22uF	5% 50V
C222	1-163-038-00	CERAMIC CHIP 0.1uF	25V	C376	1-137-437-11	FILM 0.0056uF	5% 50V
C223	1-124-589-11	ELECT 47uF	20% 16V	C377	1-124-589-11	ELECT 47uF	20% 16V
C224	1-163-038-00	CERAMIC CHIP 0.1uF	25V	C378	1-126-964-11	ELECT 10uF	20% 50V
C226	1-163-038-00	CERAMIC CHIP 0.1uF	25V	C379	1-124-257-00	ELECT 2.2uF	20% 50V
C228	1-124-261-00	ELECT 10uF	20% 50V	C380	1-126-964-11	ELECT 10uF	20% 50V
C229	1-163-038-00	CERAMIC CHIP 0.1uF	25V	C381	1-126-967-11	ELECT 47uF	20% 16V
C230	1-124-589-11	ELECT 47uF	20% 16V	C382	1-137-437-11	FILM 0.0056uF	5% 50V
C231	1-124-261-00	ELECT 10uF	20% 50V	C383	1-137-378-11	FILM 0.22uF	5% 50V
C232	1-109-982-11	CERAMIC CHIP 1uF	10% 10V	C384	1-163-037-11	CERAMIC CHIP 0.022uF	10% 25V
C233	1-109-982-11	CERAMIC CHIP 1uF	10% 10V	C385	1-126-933-11	ELECT 100uF	20% 16V
C234	1-164-232-11	CERAMIC CHIP 0.01uF	50V	C386	1-163-037-11	CERAMIC CHIP 0.022uF	10% 25V
C235	1-164-232-11	CERAMIC CHIP 0.01uF	50V	C387	1-126-933-11	ELECT 100uF	20% 16V
C236	1-109-982-11	CERAMIC CHIP 1uF	10% 10V	C388	1-126-967-11	ELECT 47uF	20% 16V
C237	1-164-232-11	CERAMIC CHIP 0.01uF	50V	C389	1-163-809-11	CERAMIC CHIP 0.047uF	10% 25V
C238	1-163-038-00	CERAMIC CHIP 0.1uF	25V	C390	1-164-489-11	CERAMIC CHIP 0.22uF	10% 16V
C239	1-124-589-11	ELECT 47uF	20% 16V	C391	1-163-037-11	CERAMIC CHIP 0.022uF	10% 25V
C240	1-109-982-11	CERAMIC CHIP 1uF	10% 10V	C392	1-163-037-11	CERAMIC CHIP 0.022uF	10% 25V
C241	1-163-037-11	CERAMIC CHIP 0.022uF	10% 25V	C501	1-164-489-11	CERAMIC CHIP 0.22uF	10% 16V
C242	1-109-982-11	CERAMIC CHIP 1uF	10% 10V	C502	1-124-589-11	ELECT 47uF	20% 16V
C243	1-164-232-11	CERAMIC CHIP 0.01uF	50V	C503	1-164-232-11	CERAMIC CHIP 0.01uF	50V
C244	1-163-038-00	CERAMIC CHIP 0.1uF	25V	C504	1-164-004-11	CERAMIC CHIP 0.1uF	10% 25V
C245	1-163-809-11	CERAMIC CHIP 0.047uF	10% 25V	C505	1-124-589-11	ELECT 47uF	20% 16V
C246	1-109-982-11	CERAMIC CHIP 1uF	10% 10V	C506	1-164-232-11	CERAMIC CHIP 0.01uF	50V
C247	1-163-809-11	CERAMIC CHIP 0.047uF	10% 25V	C507	1-163-038-00	CERAMIC CHIP 0.1uF	25V
C248	1-164-232-11	CERAMIC CHIP 0.01uF	50V	C508	1-163-239-11	CERAMIC CHIP 33PF	5% 50V
C249	1-124-589-11	ELECT 47uF	20% 16V	C509	1-164-505-11	CERAMIC CHIP 2.2uF	16V
C250	1-163-038-00	CERAMIC CHIP 0.1uF	25V	C510	1-124-589-11	ELECT 47uF	20% 16V
C251	1-163-038-00	CERAMIC CHIP 0.1uF	25V	C511	1-163-229-11	CERAMIC CHIP 12PF	5% 50V
C252	1-164-232-11	CERAMIC CHIP 0.01uF	50V	C512	1-163-235-11	CERAMIC CHIP 22PF	5% 50V
C253	1-164-004-11	CERAMIC CHIP 0.1uF	10% 25V	C513	1-164-232-11	CERAMIC CHIP 0.01uF	50V
C254	1-164-489-11	CERAMIC CHIP 0.22uF	10% 16V				

Ref. No.	Part No	Description	Remark	Ref. No	Part No.	Description	Remark
C514	1-163-235-11	CERAMIC CHIP 22PF	5% 50V	CN305	1-573-852-11	CONNECTOR, BOARD TO BOARD 20P	
C515	1-124-589-11	ELECT 47uF	20% 16V	CN306	1-573-852-11	CONNECTOR, BOARD TO BOARD 20P	
C516	1-126-160-11	ELECT 1uF	20% 50V	CN420	1-691-074-11	HOUSING, CONNECTOR 15P	
C517	1-163-239-11	CERAMIC CHIP 33PF	5% 50V	CN421	1-691-074-11	HOUSING, CONNECTOR 15P	
C518	1-124-257-00	ELECT 2.2uF	20% 50V	CN422	1-691-074-11	HOUSING, CONNECTOR 15P	
C519	1-163-139-00	CERAMIC CHIP 820PF	5% 50V	CN423	1-506-470-11	PIN, CONNECTOR 5P	
C520	1-163-038-00	CERAMIC CHIP 0 1uF	25V	CN600	1-569-338-11	CONNECTOR, BOARD TO BOARD 19P	
C521	1-164-232-11	CERAMIC CHIP 0.01uF	50V			< DIODE >	
C522	1-163-037-11	CERAMIC CHIP 0.022uF	10% 25V	D100	8-719-048-26	LED GL528V1	
C523	1-163-037-11	CERAMIC CHIP 0 022uF	10% 25V	D107	8-719-911-19	DIODE 1SS119	
C560	1-163-009-11	CERAMIC CHIP 0.001uF	10% 50V	D108	8-719-200-82	DIODE 11ES2	
C561	1-126-935-11	ELECT 470uF	20% 6 3V	D131	8-719-200-82	DIODE 11ES2	
C562	1-126-967-11	ELECT 47uF	20% 16V	D161	8-719-200-82	DIODE 11ES2	
C563	1-126-967-11	ELECT 47uF	20% 16V	D182	8-719-200-82	DIODE 11ES2	
C564	1-164-232-11	CERAMIC CHIP 0 01uF	50V	D183	8-719-200-82	DIODE 11ES2	
C573	1-126-160-11	ELECT 1uF	20% 50V	D361	8-719-911-19	DIODE 1SS119	
C574	1-126-160-11	ELECT 1uF	20% 50V	D501	8-719-911-19	DIODE 1SS119	
C576	1-126-967-11	ELECT 47uF	20% 16V	D502	8-719-911-19	DIODE 1SS119	
C577	1-126-160-11	ELECT 1uF	20% 50V	D503	8-719-911-19	DIODE 1SS119	
C578	1-126-160-11	ELECT 1uF	20% 50V	D504	8-719-911-19	DIODE 1SS119	
C701	1-126-967-11	ELECT 47uF	20% 16V	D560	8-719-109-74	DIODE RD4 3ES-B1	
C704	1-164-232-11	CERAMIC CHIP 0 01uF	50V	D702	8-719-110-78	DIODE RD33ES-B2	
C706	1-126-963-11	ELECT 4 7uF	20% 50V	D991	8-719-110-08	DIODE RD8 2ES-B2	
C707	1-163-009-11	CERAMIC CHIP 0 001uF	10% 50V	D992	8-719-110-08	DIODE RD8.2ES-B2	
C708	1-126-767-11	ELECT 1000uF	20% 16V	D993	8-719-110-08	DIODE RD8.2ES-B2	
C709	1-126-933-11	ELECT 100uF	20% 16V	D995	8-719-110-08	DIODE RD8 2ES-B2	
C710	1-164-232-11	CERAMIC CHIP 0 01uF	50V			< IC >	
C731	1-126-964-11	ELECT 10uF	20% 50V	IC106	8-759-702-02	IC NJM062M	
C732	1-126-964-11	ELECT 10uF	20% 50V	IC130	8-759-353-59	IC LB1643	
C733	1-126-964-11	ELECT 10uF	20% 50V	IC161	8-752-882-28	IC CXP87852-014Q	
C735	1-126-964-11	ELECT 10uF	20% 50V	IC181	8-752-876-52	IC CXP82960-016Q	
C736	1-126-967-11	ELECT 47uF	20% 16V	IC182	8-759-248-87	IC MM1256XF-BE	
C871	1-124-589-11	ELECT 47uF	20% 16V	IC183	8-759-378-26	IC ST24C16FM6-TR	
C872	1-163-019-00	CERAMIC CHIP 0 0068uF	10% 50V	IC201	8-759-439-49	IC LA71530M-MPB	
C873	1-164-232-11	CERAMIC CHIP 0 01uF	50V	IC202	8-759-439-51	IC LC89978M-TE-L	
C874	1-163-038-00	CERAMIC CHIP 0.1uF	25V	IC360	8-759-445-22	IC TDA9603H/N2.557	
C875	1-164-346-11	CERAMIC CHIP 1uF	16V	IC361	8-759-708-05	IC NJM78L05A	
C876	1-163-135-00	CERAMIC CHIP 560PF	5% 50V	IC500	8-759-443-82	IC MB90089PF-G-VSX9011-BND-ER	
C878	1-163-038-00	CERAMIC CHIP 0 1uF	25V	IC501	8-759-164-09	IC LA7218M-TE-R	
C880	1-163-099-00	CERAMIC CHIP 18PF	5% 50V	IC570	8-759-454-62	IC uPC4558G2-E2	
C881	1-163-099-00	CERAMIC CHIP 18PF	5% 50V	IC733	8-742-037-00	HY B IC SBX1837-51	
C991	1-163-038-00	CERAMIC CHIP 0.1uF	25V	IC871	8-759-430-84	IC MC68HC05CCVFB-VSX9011	
C992	1-163-038-00	CERAMIC CHIP 0 1uF	25V	IC991	8-759-356-27	IC NJM2129M-TE2	
C993	1-163-038-00	CERAMIC CHIP 0 1uF	25V			< JACK >	
C994	1-163-009-11	CERAMIC CHIP 0.001uF	10% 50V	J991	1-563-330-11	JACK (CONTROL S IN)	
C995	1-163-009-11	CERAMIC CHIP 0.001uF	10% 50V	J992	1-566-822-21	JACK (CONTROL S OUT)	
C996	1-126-967-11	ELECT 47uF	20% 16V			< JUMPER RESISTOR >	
C997	1-163-038-00	CERAMIC CHIP 0 1uF	25V	JS001	1-216-295-00	METAL CHIP 0 5% 1/10W	
		< JACK >		JS202	1-216-295-00	METAL CHIP 0 5% 1/10W	
CJ570	1-779-062-11	JACK, PIN 6P (LINE-1 IN)		JS205	1-216-295-00	METAL CHIP 0 5% 1/10W	
		< CONNECTOR >		JS208	1-216-295-00	METAL CHIP 0 5% 1/10W	
CN101	1-506-470-11	PIN, CONNECTOR 5P		JS209	1-216-295-00	METAL CHIP 0 5% 1/10W	
* CN102	1-766-538-11	CONNECTOR, BOARD TO BOARD 8P		JS501	1-216-295-00	METAL CHIP 0 5% 1/10W	
* CN103	1-766-537-11	CONNECTOR (HMD) 5P		JS570	1-216-295-00	METAL CHIP 0 5% 1/10W	
* CN104	1-766-716-11	CONNECTOR, BOARD TO BOARD 3P					
CN180	1-506-469-11	PIN, CONNECTOR 4P					

Ref. No.	Part No.	Description	Remark	Ref No	Part No.	Description	Remark
JS571	1-216-295-00	METAL CHIP	0 5% 1/10W	Q505	8-729-010-05	TRANSISTOR MSB709-RT1	
JS572	1-216-295-00	METAL CHIP	0 5% 1/10W	Q560	8-729-010-05	TRANSISTOR MSB709-RT1	
JS573	1-216-295-00	METAL CHIP	0 5% 1/10W	Q731	8-729-421-19	TRANSISTOR UN2213	
JS804	1-216-295-00	METAL CHIP	0 5% 1/10W	Q871	8-729-010-05	TRANSISTOR MSB709-RT1	
JS805	1-216-295-00	METAL CHIP	0 5% 1/10W	Q872	8-729-010-29	TRANSISTOR MSD601-RST1	
		< COIL >		Q873	8-729-010-29	TRANSISTOR MSD601-RST1	
L101	1-414-189-31	INDUCTOR	100uH	Q874	8-729-424-08	TRANSISTOR UN2111	
L161	1-410-509-11	INDUCTOR	10uH	Q875	8-729-010-29	TRANSISTOR MSD601-RST1	
L181	1-410-509-11	INDUCTOR	10uH			< RESISTOR >	
L202	1-414-189-31	INDUCTOR	100uH	R100	1-249-400-11	CARBON 39 5%	1/4W
L204	1-414-187-11	INDUCTOR	47uH	R101	1-249-400-11	CARBON 39 5%	1/4W
L205	1-414-189-31	INDUCTOR	100uH	R102	1-216-057-00	METAL CHIP 2.2K 5%	1/10W
L206	1-414-187-11	INDUCTOR	47uH	R103	1-216-107-00	METAL CHIP 270K 5%	1/10W
L301	1-414-189-31	INDUCTOR	100uH	R104	1-216-107-00	METAL CHIP 270K 5%	1/10W
L361	1-414-189-31	INDUCTOR	100uH	R105	1-249-413-11	CARBON 470 5%	1/4W
L501	1-410-513-11	INDUCTOR	22uH	R106	1-216-089-00	METAL CHIP 47K 5%	1/10W
L502	1-414-189-31	INDUCTOR	100uH	R107	1-216-089-00	METAL CHIP 47K 5%	1/10W
L503	1-414-189-31	INDUCTOR	100uH	R108	1-216-295-00	METAL CHIP 0 5%	1/10W
L560	1-414-189-31	INDUCTOR	100uH	R109	1-216-057-00	METAL CHIP 2 2K 5%	1/10W
L574	1-414-189-31	INDUCTOR	100uH	R110	1-216-057-00	METAL CHIP 2 2K 5%	1/10W
L702	1-414-187-11	INDUCTOR	47uH	R111	1-216-103-00	METAL CHIP 180K 5%	1/10W
L703	1-410-501-11	INDUCTOR	2 2uH	R112	1-216-689-11	METAL CHIP 39K 0 5%	1/10W
L704	1-414-179-21	INDUCTOR	2.2uH	R113	1-216-073-00	METAL CHIP 10K 5%	1/10W
L731	1-414-183-41	INDUCTOR	10uH	R114	1-216-073-00	METAL CHIP 10K 5%	1/10W
L871	1-410-509-11	INDUCTOR	10uH	R115	1-216-089-00	METAL CHIP 47K 5%	1/10W
		< PHOTO INTERRUPTER >		R116	1-216-089-00	METAL CHIP 47K 5%	1/10W
PH100	8-749-010-19	PHOTO INTERRUPTER GP3S113		R117	1-216-089-00	METAL CHIP 47K 5%	1/10W
PH101	8-749-010-20	PHOTO INTERRUPTER GP3S114		R118	1-216-089-00	METAL CHIP 47K 5%	1/10W
		< IC LINK >		R119	1-216-295-00	METAL CHIP 0 5%	1/10W
△ PS130	1-533-586-31	LINK, IC 491.315 (0.315A)		R120	1-216-295-00	METAL CHIP 0 5%	1/10W
		< TRANSISTOR >		R121	1-216-295-00	METAL CHIP 0 5%	1/10W
Q100	8-729-025-92	PHOTO TRANSISTOR PT380F		R122	1-216-295-00	METAL CHIP 0 5%	1/10W
Q101	8-729-025-92	PHOTO TRANSISTOR PT380F		R123	1-216-097-91	METAL GLAZE 100K 5%	1/10W
Q102	8-729-281-53	TRANSISTOR 2SC1815-GR		R124	1-216-295-00	METAL CHIP 0 5%	1/10W
Q161	8-729-901-06	TRANSISTOR DTA144EK		R125	1-216-049-00	METAL CHIP 1K 5%	1/10W
Q201	8-729-010-29	TRANSISTOR MSD601-RST1		R126	1-216-025-91	METAL GLAZE 100 5%	1/10W
Q203	8-729-421-19	TRANSISTOR UN2213		R127	1-216-025-91	METAL GLAZE 100 5%	1/10W
Q205	8-729-421-19	TRANSISTOR UN2213		R128	1-216-049-00	METAL CHIP 1K 5%	1/10W
Q208	8-729-010-29	TRANSISTOR MSD601-RST1		R130	1-216-089-00	METAL CHIP 47K 5%	1/10W
Q209	8-729-010-05	TRANSISTOR MSB709-RT1		R131	1-216-081-00	METAL CHIP 22K 5%	1/10W
Q210	8-729-010-29	TRANSISTOR MSD601-RST1		R132	1-216-065-00	METAL CHIP 4.7K 5%	1/10W
Q211	8-729-010-29	TRANSISTOR MSD601-RST1		R133	1-216-073-00	METAL CHIP 10K 5%	1/10W
Q301	8-729-010-29	TRANSISTOR MSD601-RST1		R159	1-216-295-00	METAL CHIP 0 5%	1/10W
Q361	8-729-821-31	TRANSISTOR 2SD1012-FG-TPE4		R160	1-216-295-00	METAL CHIP 0 5%	1/10W
Q362	8-729-821-31	TRANSISTOR 2SD1012-FG-TPE4		R161	1-216-073-00	METAL CHIP 10K 5%	1/10W
Q363	8-729-821-31	TRANSISTOR 2SD1012-FG-TPE4		R162	1-216-073-00	METAL CHIP 10K 5%	1/10W
Q364	8-729-010-05	TRANSISTOR MSB709-RT1		R163	1-216-089-00	METAL CHIP 47K 5%	1/10W
Q502	8-729-010-05	TRANSISTOR MSB709-RT1		R164	1-216-041-00	METAL CHIP 470 5%	1/10W
Q503	8-729-010-05	TRANSISTOR MSB709-RT1		R165	1-216-041-00	METAL CHIP 470 5%	1/10W
Q504	8-729-901-06	TRANSISTOR DTA144EK		R166	1-216-073-00	METAL CHIP 10K 5%	1/10W
				R167	1-216-077-00	METAL CHIP 15K 5%	1/10W
				R168	1-216-073-00	METAL CHIP 10K 5%	1/10W
				R169	1-216-089-00	METAL CHIP 47K 5%	1/10W

The components identified by mark △ or dotted line with mark △ are critical for safety. Replace only with part number specified.	Les composants identifiés par une marque △ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.
--	--

MA-290

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
R170	1-216-073-00	METAL CHIP 10K	5% 1/10W	R312	1-216-079-00	METAL CHIP 18K	5% 1/10W
R171	1-216-073-00	METAL CHIP 10K	5% 1/10W	R313	1-216-109-00	METAL CHIP 330K	5% 1/10W
R172	1-216-049-00	METAL CHIP 1K	5% 1/10W	R314	1-216-035-00	METAL CHIP 270	5% 1/10W
R174	1-216-041-00	METAL CHIP 470	5% 1/10W	R315	1-216-073-00	METAL CHIP 10K	5% 1/10W
R175	1-216-041-00	METAL CHIP 470	5% 1/10W	R316	1-216-071-00	METAL CHIP 8 2K	5% 1/10W
R176	1-216-057-00	METAL CHIP 2.2K	5% 1/10W	R318	1-216-075-00	METAL CHIP 12K	5% 1/10W
R177	1-216-049-00	METAL CHIP 1K	5% 1/10W	R319	1-216-295-00	METAL CHIP 0	5% 1/10W
R178	1-216-049-00	METAL CHIP 1K	5% 1/10W	R320	1-216-047-91	METAL GLAZE 820	5% 1/10W
R179	1-216-049-00	METAL CHIP 1K	5% 1/10W	R361	1-216-033-00	METAL CHIP 220	5% 1/10W
R180	1-216-049-00	METAL CHIP 1K	5% 1/10W	R362	1-216-033-00	METAL CHIP 220	5% 1/10W
R181	1-216-049-00	METAL CHIP 1K	5% 1/10W	R363	1-216-033-00	METAL CHIP 220	5% 1/10W
R182	1-216-049-00	METAL CHIP 1K	5% 1/10W	R364	1-216-049-00	METAL CHIP 1K	5% 1/10W
R183	1-216-089-00	METAL CHIP 47K	5% 1/10W	R365	1-216-049-00	METAL CHIP 1K	5% 1/10W
R185	1-216-049-00	METAL CHIP 1K	5% 1/10W	R366	1-216-049-00	METAL CHIP 1K	5% 1/10W
R186	1-216-073-00	METAL CHIP 10K	5% 1/10W	R367	1-216-049-00	METAL CHIP 1K	5% 1/10W
R187	1-216-073-00	METAL CHIP 10K	5% 1/10W	R368	1-216-133-00	METAL CHIP 3 3M	5% 1/10W
R189	1-216-113-00	METAL CHIP 470K	5% 1/10W	R369	1-216-689-11	METAL CHIP 39K	0 5% 1/10W
R190	1-216-073-00	METAL CHIP 10K	5% 1/10W	R370	1-216-061-00	METAL CHIP 3 3K	5% 1/10W
R191	1-216-073-00	METAL CHIP 10K	5% 1/10W	R371	1-208-820-11	METAL GLAZE 39K	0.50% 1/10W
R192	1-216-049-00	METAL CHIP 1K	5% 1/10W	R372	1-216-061-00	METAL CHIP 3 3K	5% 1/10W
R194	1-216-113-00	METAL CHIP 470K	5% 1/10W	R373	1-216-689-11	METAL CHIP 39K	0 5% 1/10W
R195	1-216-095-00	METAL CHIP 82K	5% 1/10W	R374	1-216-049-00	METAL CHIP 1K	5% 1/10W
R196	1-216-113-00	METAL CHIP 470K	5% 1/10W	R375	1-216-049-00	METAL CHIP 1K	5% 1/10W
R197	1-216-295-00	METAL CHIP 0	5% 1/10W	R376	1-216-097-91	METAL GLAZE 100K	5% 1/10W
R198	1-216-295-00	METAL CHIP 0	5% 1/10W	R377	1-216-097-91	METAL GLAZE 100K	5% 1/10W
R199	1-216-295-00	METAL CHIP 0	5% 1/10W	R378	1-216-083-00	METAL CHIP 27K	5% 1/10W
R201	1-216-041-00	METAL CHIP 470	5% 1/10W	R379	1-216-073-00	METAL CHIP 10K	5% 1/10W
R202	1-216-069-00	METAL CHIP 6 8K	5% 1/10W	R380	1-216-065-00	METAL CHIP 4.7K	5% 1/10W
R203	1-216-049-00	METAL CHIP 1K	5% 1/10W	R381	1-216-065-00	METAL CHIP 4.7K	5% 1/10W
R208	1-216-077-00	METAL CHIP 15K	5% 1/10W	R382	1-216-065-00	METAL CHIP 4 7K	5% 1/10W
R213	1-216-073-00	METAL CHIP 10K	5% 1/10W	R383	1-216-065-00	METAL CHIP 4 7K	5% 1/10W
R218	1-208-798-11	METAL GLAZE 4 7K	0 50% 1/10W	R386	1-216-295-00	METAL CHIP 0	5% 1/10W
R219	1-216-053-00	METAL CHIP 1.5K	5% 1/10W	R387	1-216-295-00	METAL CHIP 0	5% 1/10W
R220	1-216-295-00	METAL CHIP 0	5% 1/10W	R388	1-216-295-00	METAL CHIP 0	5% 1/10W
R222	1-216-051-00	METAL CHIP 1.2K	5% 1/10W	R389	1-216-049-00	METAL CHIP 1K	5% 1/10W
R223	1-216-295-00	METAL CHIP 0	5% 1/10W	R399	1-216-049-00	METAL CHIP 1K	5% 1/10W
R224	1-216-295-00	METAL CHIP 0	5% 1/10W	R502	1-216-033-00	METAL CHIP 220	5% 1/10W
R225	1-216-295-00	METAL CHIP 0	5% 1/10W	R505	1-216-059-00	METAL CHIP 2.7K	5% 1/10W
R226	1-216-295-00	METAL CHIP 0	5% 1/10W	R506	1-216-051-00	METAL CHIP 1.2K	5% 1/10W
R227	1-216-025-91	METAL GLAZE 100	5% 1/10W	R507	1-216-081-00	METAL CHIP 22K	5% 1/10W
R228	1-216-057-00	METAL CHIP 2.2K	5% 1/10W	R508	1-216-049-00	METAL CHIP 1K	5% 1/10W
R229	1-216-055-00	METAL CHIP 1 8K	5% 1/10W	R510	1-216-081-00	METAL CHIP 22K	5% 1/10W
R230	1-216-045-00	METAL CHIP 680	5% 1/10W	R513	1-216-073-00	METAL CHIP 10K	5% 1/10W
R231	1-216-071-00	METAL CHIP 8.2K	5% 1/10W	R514	1-216-073-00	METAL CHIP 10K	5% 1/10W
R232	1-216-055-00	METAL CHIP 1.8K	5% 1/10W	R515	1-216-101-00	METAL CHIP 150K	5% 1/10W
R235	1-216-073-00	METAL CHIP 10K	5% 1/10W	R517	1-216-063-91	METAL GLAZE 3 9K	5% 1/10W
R236	1-216-049-00	METAL CHIP 1K	5% 1/10W	R518	1-216-043-91	METAL GLAZE 560	5% 1/10W
R239	1-216-057-00	METAL CHIP 2.2K	5% 1/10W	R519	1-216-043-91	METAL GLAZE 560	5% 1/10W
R240	1-216-049-00	METAL CHIP 1K	5% 1/10W	R520	1-216-025-91	METAL GLAZE 100	5% 1/10W
R244	1-216-089-00	METAL CHIP 47K	5% 1/10W	R521	1-216-073-00	METAL CHIP 10K	5% 1/10W
R300	1-216-295-00	METAL CHIP 0	5% 1/10W	R522	1-216-073-00	METAL CHIP 10K	5% 1/10W
R301	1-216-093-00	METAL CHIP 68K	5% 1/10W	R523	1-216-073-00	METAL CHIP 10K	5% 1/10W
R302	1-216-067-00	METAL CHIP 5 6K	5% 1/10W	R560	1-216-022-00	METAL CHIP 75	5% 1/10W
R306	1-216-073-00	METAL CHIP 10K	5% 1/10W	R561	1-216-021-00	METAL CHIP 68	5% 1/10W
R307	1-216-061-00	METAL CHIP 3.3K	5% 1/10W	R562	1-249-407-11	CARBON 150	5% 1/4W
R309	1-216-067-00	METAL CHIP 5.6K	5% 1/10W	R563	1-249-408-11	CARBON 180	5% 1/4W
R310	1-216-129-00	METAL CHIP 2.2M	5% 1/10W	R565	1-216-037-00	METAL CHIP 330	5% 1/10W
R311	1-216-053-00	METAL CHIP 1 5K	5% 1/10W	R570	1-216-097-91	METAL GLAZE 100K	5% 1/10W

Ref No	Part No.	Description	Remark	Ref No.	Part No	Description	Remark
R571	1-216-097-91	METAL GLAZE 100K	5% 1/10W				
R572	1-216-097-91	METAL GLAZE 100K	5% 1/10W			< SWITCH >	
R573	1-216-041-00	METAL CHIP 470	5% 1/10W				
R574	1-216-041-00	METAL CHIP 470	5% 1/10W	S100	1-570-953-11	SWITCH, PUSH (1 KEY)(REC PRF)	
R577	1-216-097-91	METAL GLAZE 100K	5% 1/10W	S701	1-571-588-11	SWITCH, SLIDE (RF UNIT CH3/CH4)	
R701	1-216-049-00	METAL CHIP 1K	5% 1/10W			< TUNER >	
R702	1-216-295-00	METAL CHIP 0	5% 1/10W				
R705	1-212-893-00	FUSIBLE 330	5% 1/4W F	Δ TU700	1-693-370-11	TUNER, RF-IF	
R706	1-216-113-00	METAL CHIP 470K	5% 1/10W			< VIBRATOR >	
R708	1-216-295-00	METAL CHIP 0	5% 1/10W				
R709	1-216-049-00	METAL CHIP 1K	5% 1/10W	X161	1-760-494-11	VIBRATOR, CRYSTAL (16MHz)	
R710	1-216-049-00	METAL CHIP 1K	5% 1/10W	X182	1-579-463-11	VIBRATOR, CRYSTAL (32 768kHz)	
R711	1-216-049-00	METAL CHIP 1K	5% 1/10W	X202	1-577-380-11	VIBRATOR, CRYSTAL (3.579545MHz)	
R712	1-216-295-00	METAL CHIP 0	5% 1/10W	X500	1-577-381-11	VIBRATOR, CRYSTAL (14318 18kHz)	
R731	1-216-049-00	METAL CHIP 1K	5% 1/10W	X501	1-577-165-11	VIBLATOR, CERAMIC (500kHz)	
R732	1-216-049-00	METAL CHIP 1K	5% 1/10W	X871	1-577-133-21	VIBRATOR, CRYSTAL (8MHz)	
R733	1-216-065-00	METAL CHIP 4 7K	5% 1/10W				
R734	1-216-049-00	METAL CHIP 1K	5% 1/10W				
R735	1-216-049-00	METAL CHIP 1K	5% 1/10W	*	A-6791-149-A	MA-292 BOARD, COMPLETE (775HF/776HF)	
R736	1-216-295-00	METAL CHIP 0	5% 1/10W			*****	(Ref No 2,000 Series)
R737	1-216-081-00	METAL CHIP 22K	5% 1/10W				
R738	1-216-081-00	METAL CHIP 22K	5% 1/10W	*	3-960-273-01	SPACER, TOP END	
R739	1-216-073-00	METAL CHIP 10K	5% 1/10W	*	3-960-274-01	SPACER, LED	
R740	1-216-295-00	METAL CHIP 0	5% 1/10W			< BUZZER >	
R742	1-216-295-00	METAL CHIP 0	5% 1/10W				
R744	1-216-295-00	METAL CHIP 0	5% 1/10W	BZ160	1-529-104-11	BUZZER, PIEZOELECTRIC	
R748	1-216-065-00	METAL CHIP 4.7K	5% 1/10W			< CAPACITOR >	
R871	1-216-073-00	METAL CHIP 10K	5% 1/10W	C102	1-163-037-11	CERAMIC CHIP 0 022uF	10% 25V
R872	1-216-025-91	METAL GLAZE 100	5% 1/10W	C103	1-163-251-11	CERAMIC CHIP 100PF	5% 50V
R873	1-216-025-91	METAL GLAZE 100	5% 1/10W	C104	1-124-261-00	ELECT 10uF	20% 50V
R874	1-216-025-91	METAL GLAZE 100	5% 1/10W	C106	1-163-809-11	CERAMIC CHIP 0 047uF	10% 25V
R875	1-216-025-91	METAL GLAZE 100	5% 1/10W	C111	1-164-232-11	CERAMIC CHIP 0 01uF	50V
R876	1-216-081-00	METAL CHIP 22K	5% 1/10W	C112	1-164-232-11	CERAMIC CHIP 0.01uF	50V
R877	1-216-057-00	METAL CHIP 2 2K	5% 1/10W	C113	1-164-232-11	CERAMIC CHIP 0 01uF	50V
R878	1-216-073-00	METAL CHIP 10K	5% 1/10W	C114	1-164-232-11	CERAMIC CHIP 0 01uF	50V
R879	1-216-049-00	METAL CHIP 1K	5% 1/10W	C115	1-163-038-00	CERAMIC CHIP 0 1uF	25V
R880	1-216-073-00	METAL CHIP 10K	5% 1/10W	C116	1-163-038-00	CERAMIC CHIP 0 1uF	25V
R881	1-216-043-91	METAL GLAZE 560	5% 1/10W	C119	1-124-589-11	ELECT 47uF	20% 16V
R882	1-216-049-00	METAL CHIP 1K	5% 1/10W	C120	1-164-232-11	CERAMIC CHIP 0.01uF	50V
R883	1-216-053-00	METAL CHIP 1 5K	5% 1/10W	C131	1-164-232-11	CERAMIC CHIP 0.01uF	50V
R884	1-216-047-91	METAL GLAZE 820	5% 1/10W	C132	1-124-589-11	ELECT 47uF	20% 16V
R885	1-216-025-91	METAL GLAZE 100	5% 1/10W	C134	1-163-038-00	CERAMIC CHIP 0.1uF	25V
R886	1-216-073-00	METAL CHIP 10K	5% 1/10W	C141	1-124-234-00	ELECT 22uF	20% 16V
R887	1-216-081-00	METAL CHIP 22K	5% 1/10W	C142	1-124-234-00	ELECT 22uF	20% 16V
R888	1-216-081-00	METAL CHIP 22K	5% 1/10W	C144	1-163-251-11	CERAMIC CHIP 100PF	5% 50V
R889	1-216-025-91	METAL GLAZE 100	5% 1/10W	C146	1-124-234-00	ELECT 22uF	20% 16V
R890	1-216-049-00	METAL CHIP 1K	5% 1/10W	C147	1-126-933-11	ELECT 100uF	20% 16V
R971	1-216-295-00	METAL CHIP 0	5% 1/10W	C148	1-163-038-00	CERAMIC CHIP 0.1uF	25V
R973	1-216-295-00	METAL CHIP 0	5% 1/10W	C160	1-163-038-00	CERAMIC CHIP 0.1uF	25V
R974	1-216-295-00	METAL CHIP 0	5% 1/10W	C161	1-124-584-00	ELECT 100uF	20% 10V
R991	1-216-049-00	METAL CHIP 1K	5% 1/10W	C162	1-104-905-11	CAPACITOR 0 22F	5.5V
		< VARIABLE RESISTOR >		C163	1-163-229-11	CERAMIC CHIP 12PF	5% 50V
RV731	1-241-766-11	RES, ADJ, CERMET 47K		C164	1-163-227-11	CERAMIC CHIP 10PF	0.5PF 50V

The components identified by mark Δ or dotted line with mark Δ are critical for safety Replace only with part number specified	Les composants identifiés par une marque Δ sont critiques pour la sécurité Ne les remplacer que par une pièce portant le numéro spécifié
---	---

MA-292

Ref No	Part No	Description	Remark	Ref. No.	Part No.	Description	Remark
C165	1-163-099-00	CERAMIC CHIP 18PF	5%	50V	C306	1-126-160-11	ELECT 1uF 20% 50V
C166	1-163-099-00	CERAMIC CHIP 18PF	5%	50V	C307	1-124-261-00	ELECT 10uF 20% 50V
C167	1-163-125-00	CERAMIC CHIP 220PF	5%	50V	C308	1-124-589-11	ELECT 47uF 20% 16V
C168	1-124-261-00	ELECT 10uF	20%	50V	C309	1-126-963-11	ELECT 4 7uF 20% 50V
					C310	1-163-009-11	CERAMIC CHIP 0 001uF 10% 50V
C170	1-126-935-11	ELECT 470uF	20%	6.3V			
C171	1-163-037-11	CERAMIC CHIP 0 022uF	10%	25V	C311	1-164-161-11	CERAMIC CHIP 0.0022uF 10% 100V
C172	1-163-007-11	CERAMIC CHIP 680PF	10%	50V	C312	1-137-370-11	FILM 0 01uF 5% 50V
C201	1-109-982-11	CERAMIC CHIP 1uF	10%	10V	C313	1-124-261-00	ELECT 10uF 20% 50V
C202	1-163-809-11	CERAMIC CHIP 0 047uF	10%	25V	C314	1-164-232-11	CERAMIC CHIP 0.01uF 50V
					C315	1-126-160-11	ELECT 1uF 20% 50V
C204	1-164-232-11	CERAMIC CHIP 0 01uF		50V			
C205	1-163-037-11	CERAMIC CHIP 0.022uF	10%	25V	C317	1-126-163-11	ELECT 4 7uF 20% 50V
C206	1-164-232-11	CERAMIC CHIP 0.01uF		50V	C318	1-124-589-11	ELECT 47uF 20% 16V
C207	1-164-232-11	CERAMIC CHIP 0 01uF		50V	C361	1-164-489-11	CERAMIC CHIP 0 22uF 10% 16V
C208	1-163-241-11	CERAMIC CHIP 39PF	5%	50V	C363	1-126-160-11	ELECT 1uF 20% 50V
					C364	1-126-160-11	ELECT 1uF 20% 50V
C209	1-124-234-00	ELECT 22uF	20%	16V			
C210	1-163-131-00	CERAMIC CHIP 390PF	5%	50V	C365	1-126-160-11	ELECT 1uF 20% 50V
C211	1-163-239-11	CERAMIC CHIP 33PF	5%	50V	C366	1-126-160-11	ELECT 1uF 20% 50V
C213	1-163-251-11	CERAMIC CHIP 100PF	5%	50V	C369	1-126-964-11	ELECT 10uF 20% 50V
C214	1-163-251-11	CERAMIC CHIP 100PF	5%	50V	C370	1-126-964-11	ELECT 10uF 20% 50V
					C371	1-126-964-11	ELECT 10uF 20% 50V
C217	1-109-982-11	CERAMIC CHIP 1uF	10%	10V			
C219	1-163-038-00	CERAMIC CHIP 0.1uF		25V	C372	1-126-964-11	ELECT 10uF 20% 50V
C220	1-109-982-11	CERAMIC CHIP 1uF	10%	10V	C373	1-126-964-11	ELECT 10uF 20% 50V
C222	1-163-038-00	CERAMIC CHIP 0.1uF		25V	C374	1-126-160-11	ELECT 1uF 20% 50V
C223	1-124-589-11	ELECT 47uF	20%	16V	C375	1-137-378-11	FILM 0 22uF 5% 50V
					C376	1-137-437-11	FILM 0.0056uF 5% 50V
C224	1-164-159-21	CERAMIC 0.1uF		50V			
C226	1-163-038-00	CERAMIC CHIP 0.1uF		25V	C377	1-124-589-11	ELECT 47uF 20% 16V
C228	1-124-261-00	ELECT 10uF	20%	50V	C378	1-126-964-11	ELECT 10uF 20% 50V
C229	1-164-159-21	CERAMIC 0.1uF		50V	C379	1-124-257-00	ELECT 2.2uF 20% 50V
C230	1-124-589-11	ELECT 47uF	20%	16V	C380	1-124-261-00	ELECT 10uF 20% 50V
					C381	1-126-967-11	ELECT 47uF 20% 16V
C231	1-124-261-00	ELECT 10uF	20%	50V			
C232	1-109-982-11	CERAMIC CHIP 1uF	10%	10V	C382	1-137-437-11	FILM 0 0056uF 5% 50V
C233	1-109-982-11	CERAMIC CHIP 1uF	10%	10V	C383	1-137-378-11	FILM 0.22uF 5% 50V
C234	1-164-232-11	CERAMIC CHIP 0 01uF		50V	C384	1-163-037-11	CERAMIC CHIP 0.022uF 10% 25V
C235	1-164-232-11	CERAMIC CHIP 0 01uF		50V	C385	1-126-933-11	ELECT 100uF 20% 16V
					C386	1-163-037-11	CERAMIC CHIP 0 022uF 10% 25V
C236	1-109-982-11	CERAMIC CHIP 1uF	10%	10V			
C237	1-164-232-11	CERAMIC CHIP 0 01uF		50V	C387	1-126-933-11	ELECT 100uF 20% 16V
C238	1-163-038-00	CERAMIC CHIP 0 1uF		25V	C388	1-124-589-11	ELECT 47uF 20% 16V
C239	1-124-589-11	ELECT 47uF	20%	16V	C389	1-163-809-11	CERAMIC CHIP 0 047uF 10% 25V
C240	1-109-982-11	CERAMIC CHIP 1uF	10%	10V	C390	1-164-489-11	CERAMIC CHIP 0.22uF 10% 16V
					C391	1-163-037-11	CERAMIC CHIP 0.022uF 10% 25V
C241	1-163-037-11	CERAMIC CHIP 0 022uF	10%	25V			
C242	1-109-982-11	CERAMIC CHIP 1uF	10%	10V	C392	1-163-037-11	CERAMIC CHIP 0.022uF 10% 25V
C243	1-164-232-11	CERAMIC CHIP 0 01uF		50V	C393	1-164-489-11	CERAMIC CHIP 0.22uF 10% 16V
C244	1-163-038-00	CERAMIC CHIP 0.1uF		25V	C406	1-163-809-11	CERAMIC CHIP 0 047uF 10% 25V
C245	1-163-809-11	CERAMIC CHIP 0.047uF	10%	25V	C407	1-163-809-11	CERAMIC CHIP 0.047uF 10% 25V
					C460	1-163-038-00	CERAMIC CHIP 0 1uF 25V
C246	1-109-982-11	CERAMIC CHIP 1uF	10%	10V			
C247	1-163-809-11	CERAMIC CHIP 0 047uF	10%	25V	C461	1-164-232-11	CERAMIC CHIP 0.01uF 50V
C248	1-164-232-11	CERAMIC CHIP 0 01uF		50V	C462	1-164-232-11	CERAMIC CHIP 0.01uF 50V
C249	1-124-589-11	ELECT 47uF	20%	16V	C521	1-124-584-00	ELECT 100uF 20% 10V
C250	1-163-038-00	CERAMIC CHIP 0 1uF		25V	C522	1-128-172-11	ELECT 47uF 20% 6 3V
					C523	1-163-038-00	CERAMIC CHIP 0.1uF 25V
C251	1-163-038-00	CERAMIC CHIP 0.1uF		25V			
C252	1-164-232-11	CERAMIC CHIP 0.01uF		50V	C524	1-124-584-00	ELECT 100uF 20% 10V
C253	1-164-004-11	CERAMIC CHIP 0.1uF	10%	25V	C526	1-163-038-00	CERAMIC CHIP 0.1uF 25V
C254	1-163-038-00	CERAMIC CHIP 0 1uF		25V	C527	1-163-038-00	CERAMIC CHIP 0 1uF 25V
C255	1-163-091-00	CERAMIC CHIP 8PF		50V	C528	1-164-232-11	CERAMIC CHIP 0 01uF 50V
					C529	1-163-017-00	CERAMIC CHIP 0 0047uF 5% 50V
C301	1-164-159-21	CERAMIC 0 1uF		50V			
C302	1-124-589-11	ELECT 47uF	20%	16V	C530	1-163-017-00	CERAMIC CHIP 0.0047uF 5% 50V
C303	1-126-160-11	ELECT 1uF	20%	50V	C531	1-124-464-11	ELECT 0.22uF 20% 50V
C304	1-126-160-11	ELECT 1uF	20%	50V	C532	1-126-160-11	ELECT 1uF 20% 50V
C305	1-126-160-11	ELECT 1uF	20%	50V	C536	1-124-584-00	ELECT 100uF 20% 10V

Ref No	Part No	Description	Remark	Ref No	Part No	Description	Remark
C560	1-163-009-11	CERAMIC CHIP 0.001uF 10%	50V	D991	8-719-110-08	DIODE RD8.2ES-B2	
C561	1-126-935-11	ELECT 470uF 20%	6.3V	D992	8-719-110-08	DIODE RD8.2ES-B2	
C562	1-126-967-11	ELECT 47uF 20%	16V	D993	8-719-110-08	DIODE RD8.2ES-B2	
C563	1-126-967-11	ELECT 47uF 20%	16V	D995	8-719-110-08	DIODE RD8.2ES-B2	
C564	1-164-232-11	CERAMIC CHIP 0.01uF	50V			< TERMINAL BOARD >	
C573	1-126-160-11	ELECT 1uF 20%	50V	ET100	1-537-770-21	TERMINAL BOARD, GROUND	
C574	1-126-160-11	ELECT 1uF 20%	50V			< IC >	
C576	1-126-967-11	ELECT 47uF 20%	16V	IC131	8-759-353-59	IC LB1643	
C577	1-126-160-11	ELECT 1uF 20%	50V	IC160	8-759-462-97	IC M37777M7A210GP	
C578	1-126-160-11	ELECT 1uF 20%	50V	IC201	8-759-439-49	IC LA71530M-MPB	
C701	1-126-967-11	ELECT 47uF 20%	16V	IC202	8-759-439-51	IC LC89978M-TE-L	
C704	1-164-232-11	CERAMIC CHIP 0.01uF	50V	IC360	8-759-445-22	IC TDA9603H/N2,557	
C705	1-163-009-11	CERAMIC CHIP 0.001uF 10%	50V	IC361	8-759-708-05	IC NJM78L05A	
C706	1-126-963-11	ELECT 4.7uF 20%	50V	IC461	8-759-248-87	IC MM1256XF-BE	
C707	1-163-009-11	CERAMIC CHIP 0.001uF 10%	50V	IC462	8-759-518-23	IC X24C04S8	
C708	1-126-767-11	ELECT 1000uF 20%	16V	IC521	8-759-431-55	IC M35052-VSX8501	
C709	1-164-232-11	CERAMIC CHIP 0.01uF	50V	IC570	8-759-454-62	IC uPC4558G2-E2	
C710	1-164-232-11	CERAMIC CHIP 0.01uF	50V	IC733	8-742-037-00	HYB IC SBX1837-51	
C731	1-126-964-11	ELECT 10uF 20%	50V	IC991	8-759-356-27	IC NJM2129M-TE2	
C732	1-126-964-11	ELECT 10uF 20%	50V			< JACK >	
C733	1-126-964-11	ELECT 10uF 20%	50V	J991	1-563-330-11	JACK (CONTROL S IN)	
C735	1-126-964-11	ELECT 10uF 20%	50V	J992	1-566-822-21	JACK (CONTROL S OUT)	
C746	1-126-967-11	ELECT 47uF 20%	16V			< JUMPER RESISTOR >	
C991	1-163-038-00	CERAMIC CHIP 0.1uF	25V	JR001	1-216-296-00	METAL CHIP 0 5% 1/8W	
C992	1-163-038-00	CERAMIC CHIP 0.1uF	25V	JR002	1-216-296-00	METAL CHIP 0 5% 1/8W	
C993	1-163-038-00	CERAMIC CHIP 0.1uF	25V	JR003	1-216-296-00	METAL CHIP 0 5% 1/8W	
C994	1-163-009-11	CERAMIC CHIP 0.001uF 10%	50V	JR004	1-216-296-00	METAL CHIP 0 5% 1/8W	
C995	1-163-009-11	CERAMIC CHIP 0.001uF 10%	50V	JR005	1-216-296-00	METAL CHIP 0 5% 1/8W	
C996	1-126-967-11	ELECT 47uF 20%	16V	JR006	1-216-296-00	METAL CHIP 0 5% 1/8W	
C997	1-163-038-00	CERAMIC CHIP 0.1uF	25V	JR007	1-216-296-00	METAL CHIP 0 5% 1/8W	
		< JACK >		JR008	1-216-296-00	METAL CHIP 0 5% 1/8W	
CJ570	1-779-062-11	JACK, PIN 6P (LINE-1 IN)		JR009	1-216-296-00	METAL CHIP 0 5% 1/8W	
		< CONNECTOR >		JR010	1-216-296-00	METAL CHIP 0 5% 1/8W	
CN101	1-506-470-11	PIN, CONNECTOR 5P		JR011	1-216-296-00	METAL CHIP 0 5% 1/8W	
* CN102	1-766-538-11	CONNECTOR, BOARD TO BOARD 8P		JR012	1-216-296-00	METAL CHIP 0 5% 1/8W	
* CN103	1-766-537-11	CONNECTOR (HMD) 5P		JR013	1-216-296-00	METAL CHIP 0 5% 1/8W	
* CN104	1-766-716-11	CONNECTOR, BOARD TO BOARD 3P		JR014	1-216-296-00	METAL CHIP 0 5% 1/8W	
CN305	1-573-852-11	CONNECTOR, BOARD TO BOARD 20P		JR015	1-216-296-00	METAL CHIP 0 5% 1/8W	
CN306	1-573-852-11	CONNECTOR, BOARD TO BOARD 20P		JR016	1-216-296-00	METAL CHIP 0 5% 1/8W	
CN423	1-506-470-11	PIN, CONNECTOR 5P		JR017	1-216-296-00	METAL CHIP 0 5% 1/8W	
CN430	1-691-074-11	HOUSING, CONNECTOR 15P		JR018	1-216-296-00	METAL CHIP 0 5% 1/8W	
CN610	1-569-338-11	CONNECTOR, BOARD TO BOARD 19P		JR019	1-216-296-00	METAL CHIP 0 5% 1/8W	
		< DIODE >		JR020	1-216-296-00	METAL CHIP 0 5% 1/8W	
D102	8-719-048-26	LED GL528V1		JR021	1-216-296-00	METAL CHIP 0 5% 1/8W	
D131	8-719-200-82	DIODE 11ES2		JR022	1-216-296-00	METAL CHIP 0 5% 1/8W	
D161	8-719-200-82	DIODE 11ES2		JR023	1-216-296-00	METAL CHIP 0 5% 1/8W	
D162	8-719-200-82	DIODE 11ES2		JR024	1-216-296-00	METAL CHIP 0 5% 1/8W	
D361	8-719-911-19	DIODE 1SS119		JR025	1-216-296-00	METAL CHIP 0 5% 1/8W	
D400	8-719-109-93	DIODE RD6.2ES-B2		JR026	1-216-296-00	METAL CHIP 0 5% 1/8W	
D401	8-719-109-93	DIODE RD6.2ES-B2		JR027	1-216-296-00	METAL CHIP 0 5% 1/8W	
D402	8-719-109-93	DIODE RD6.2ES-B2		JR028	1-216-296-00	METAL CHIP 0 5% 1/8W	
D403	8-719-109-93	DIODE RD6.2ES-B2		JR029	1-216-296-00	METAL CHIP 0 5% 1/8W	
D521	8-719-911-19	DIODE 1SS119		JR030	1-216-296-00	METAL CHIP 0 5% 1/8W	
D560	8-719-109-74	DIODE RD4.3ES-B1					
D702	8-719-110-78	DIODE RD33ES-B2					

Ref No.	Part No.	Description	Remark	Ref No.	Part No.	Description	Remark
L523	1-410-521-11	INDUCTOR 100uH		R112	1-216-089-00	METAL CHIP 47K 5%	1/10W
L524	1-410-501-11	INDUCTOR 2.2uH		R113	1-216-089-00	METAL CHIP 47K 5%	1/10W
L560	1-414-189-31	INDUCTOR 100uH		R114	1-216-089-00	METAL CHIP 47K 5%	1/10W
L574	1-414-189-31	INDUCTOR 100uH		R115	1-216-089-00	METAL CHIP 47K 5%	1/10W
L702	1-414-187-11	INDUCTOR 47uH		R117	1-216-041-00	METAL CHIP 470 5%	1/10W
L703	1-410-501-11	INDUCTOR 2.2uH		R118	1-218-179-11	METAL GLAZE 10M 5%	1/10W
L704	1-410-501-11	INDUCTOR 2.2uH		R119	1-216-295-00	METAL CHIP 0 5%	1/10W
L706	1-410-501-11	INDUCTOR 2.2uH		R124	1-216-041-00	METAL CHIP 470 5%	1/10W
L731	1-414-183-41	INDUCTOR 10uH		R125	1-216-041-00	METAL CHIP 470 5%	1/10W
< PHOTO INTERRUPTER >				R126	1-216-041-00	METAL CHIP 470 5%	1/10W
PH100	8-749-010-20	PHOTO INTERRUPTER GP3S114		R130	1-216-041-00	METAL CHIP 470 5%	1/10W
PH101	8-749-010-19	PHOTO INTERRUPTER GP3S113		R131	1-216-041-00	METAL CHIP 470 5%	1/10W
< IC LINK >				R132	1-216-089-00	METAL CHIP 47K 5%	1/10W
△PS101	1-533-586-31	LINK, IC 491.315 (0 315A)		R133	1-216-081-00	METAL CHIP 22K 5%	1/10W
< TRANSISTOR >				R160	1-216-295-00	METAL CHIP 0 5%	1/10W
Q100	8-729-025-92	PHOTO TRANSISTOR PT380F		R162	1-216-295-00	METAL CHIP 0 5%	1/10W
Q101	8-729-025-92	PHOTO TRANSISTOR PT380F		R164	1-216-121-91	METAL GLAZE 1M 5%	1/10W
Q102	8-729-281-53	TRANSISTOR 2SC1815-GR		R165	1-216-039-00	METAL CHIP 390 5%	1/10W
Q201	8-729-010-29	TRANSISTOR MSD601-RST1		R166	1-249-413-11	CARBON 470 5%	1/4W
Q202	8-729-230-49	TRANSISTOR 2SC2712-G		R167	1-216-295-00	METAL CHIP 0 5%	1/10W
Q208	8-729-010-29	TRANSISTOR MSD601-RST1		R169	1-216-049-00	METAL CHIP 1K 5%	1/10W
Q209	8-729-010-05	TRANSISTOR MSB709-RT1		R170	1-249-417-11	CARBON 1K 5%	1/4W
Q210	8-729-010-29	TRANSISTOR MSD601-RST1		R171	1-216-295-00	METAL CHIP 0 5%	1/10W
Q211	8-729-010-29	TRANSISTOR MSD601-RST1		R172	1-216-295-00	METAL CHIP 0 5%	1/10W
Q212	8-729-010-05	TRANSISTOR MSB709-RT1		R176	1-216-073-00	METAL CHIP 10K 5%	1/10W
Q301	8-729-010-29	TRANSISTOR MSD601-RST1		R177	1-216-295-00	METAL CHIP 0 5%	1/10W
Q361	8-729-821-31	TRANSISTOR 2SD1012-FG-TPE4		R179	1-216-295-00	METAL CHIP 0 5%	1/10W
Q362	8-729-821-31	TRANSISTOR 2SD1012-FG-TPE4		R180	1-216-295-00	METAL CHIP 0 5%	1/10W
Q363	8-729-821-31	TRANSISTOR 2SD1012-FG-TPE4		R185	1-249-437-11	CARBON 47K 5%	1/4W
Q364	8-729-010-05	TRANSISTOR MSB709-RT1		R188	1-249-417-11	CARBON 1K 5%	1/4W
Q522	8-729-010-29	TRANSISTOR MSD601-RST1		R189	1-216-295-00	METAL CHIP 0 5%	1/10W
Q523	8-729-010-05	TRANSISTOR MSB709-RT1		R191	1-216-049-00	METAL CHIP 1K 5%	1/10W
Q524	8-729-421-19	TRANSISTOR UN2213		R201	1-216-041-00	METAL CHIP 470 5%	1/10W
Q525	8-729-010-29	TRANSISTOR MSD601-RST1		R202	1-216-069-00	METAL CHIP 6.8K 5%	1/10W
Q560	8-729-010-05	TRANSISTOR MSB709-RT1		R203	1-216-049-00	METAL CHIP 1K 5%	1/10W
Q731	8-729-421-19	TRANSISTOR UN2213		R204	1-216-047-91	METAL GLAZE 820 5%	1/10W
< RESISTOR >				R205	1-216-037-00	METAL CHIP 330 5%	1/10W
R100	1-216-081-00	METAL CHIP 22K 5%	1/10W	R206	1-216-037-00	METAL CHIP 330 5%	1/10W
R101	1-216-033-00	METAL CHIP 220 5%	1/10W	R208	1-216-073-00	METAL CHIP 10K 5%	1/10W
R102	1-247-815-91	CARBON 220 5%	1/4W	R209	1-216-295-00	METAL CHIP 0 5%	1/10W
R103	1-216-081-00	METAL CHIP 22K 5%	1/10W	R210	1-216-295-00	METAL CHIP 0 5%	1/10W
R104	1-216-113-00	METAL CHIP 470K 5%	1/10W	R214	1-216-045-00	METAL CHIP 680 5%	1/10W
R105	1-216-113-00	METAL CHIP 470K 5%	1/10W	R218	1-208-798-11	METAL GLAZE 4.7K 0.50%	1/10W
R106	1-216-057-00	METAL CHIP 2.2K 5%	1/10W	R219	1-216-053-00	METAL CHIP 1.5K 5%	1/10W
R107	1-216-049-00	METAL CHIP 1K 5%	1/10W	R220	1-216-295-00	METAL CHIP 0 5%	1/10W
R108	1-247-807-31	CARBON 100 5%	1/4W	R222	1-216-051-00	METAL CHIP 1.2K 5%	1/10W
R109	1-247-807-31	CARBON 100 5%	1/4W	R225	1-216-295-00	METAL CHIP 0 5%	1/10W
R110	1-249-429-11	CARBON 10K 5%	1/4W	R226	1-216-295-00	METAL CHIP 0 5%	1/10W
R111	1-216-089-00	METAL CHIP 47K 5%	1/10W	R227	1-216-025-91	METAL GLAZE 100 5%	1/10W
				R228	1-216-057-00	METAL CHIP 2.2K 5%	1/10W
				R229	1-216-055-00	METAL CHIP 1.8K 5%	1/10W
				R230	1-216-045-00	METAL CHIP 680 5%	1/10W
				R231	1-216-071-00	METAL CHIP 8.2K 5%	1/10W
				R232	1-216-055-00	METAL CHIP 1.8K 5%	1/10W

<p>The components identified by mark △ or dotted line with mark △ are critical for safety. Replace only with part number specified.</p>	<p>Les composants identifiés par une marque △ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.</p>
---	---

MA-292

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
R235	1-216-073-00	METAL CHIP	10K 5%	1/10W	R413	1-216-089-00	METAL CHIP 47K 5% 1/10W
R236	1-216-049-00	METAL CHIP	1K 5%	1/10W	R420	1-216-399-00	METAL OXIDE 6 8 5% 3W
R239	1-216-057-00	METAL CHIP	2.2K 5%	1/10W	R462	1-216-105-91	METAL GLAZE 220K 5% 1/10W
R240	1-216-049-00	METAL CHIP	1K 5%	1/10W	R463	1-216-113-00	METAL CHIP 470K 5% 1/10W
R243	1-216-061-00	METAL CHIP	3.3K 5%	1/10W	R521	1-216-049-00	METAL CHIP 1K 5% 1/10W
R244	1-216-089-00	METAL CHIP	47K 5%	1/10W	R522	1-216-053-00	METAL CHIP 1.5K 5% 1/10W
R245	1-216-049-00	METAL CHIP	1K 5%	1/10W	R526	1-216-073-00	METAL CHIP 10K 5% 1/10W
R301	1-249-439-11	CARBON	68K 5%	1/4W	R528	1-249-437-11	CARBON 47K 5% 1/4W
R302	1-216-067-00	METAL CHIP	5 6K 5%	1/10W	R530	1-216-073-00	METAL CHIP 10K 5% 1/10W
R303	1-216-083-00	METAL CHIP	27K 5%	1/10W	R531	1-216-073-00	METAL CHIP 10K 5% 1/10W
R304	1-249-434-11	CARBON	27K 5%	1/4W	R532	1-216-033-00	METAL CHIP 220 5% 1/10W
R305	1-216-069-00	METAL CHIP	6.8K 5%	1/10W	R533	1-216-057-00	METAL CHIP 2.2K 5% 1/10W
R306	1-216-073-00	METAL CHIP	10K 5%	1/10W	R534	1-216-025-91	METAL GLAZE 100 5% 1/10W
R307	1-216-061-00	METAL CHIP	3.3K 5%	1/10W	R535	1-208-814-11	METAL GLAZE 22K 0 50% 1/10W
R308	1-216-069-00	METAL CHIP	6 8K 5%	1/10W	R536	1-208-812-11	METAL GLAZE 18K 0.50% 1/10W
R309	1-216-067-00	METAL CHIP	5 6K 5%	1/10W	R537	1-216-073-00	METAL CHIP 10K 5% 1/10W
R310	1-216-129-00	METAL CHIP	2 2M 5%	1/10W	R539	1-216-073-00	METAL CHIP 10K 5% 1/10W
R311	1-216-053-00	METAL CHIP	1.5K 5%	1/10W	R560	1-216-022-00	METAL CHIP 75 5% 1/10W
R312	1-216-079-00	METAL CHIP	18K 5%	1/10W	R561	1-216-021-00	METAL CHIP 68 5% 1/10W
R313	1-216-109-00	METAL CHIP	330K 5%	1/10W	R562	1-249-407-11	CARBON 150 5% 1/4W
R314	1-216-035-00	METAL CHIP	270 5%	1/10W	R563	1-249-408-11	CARBON 180 5% 1/4W
R315	1-216-073-00	METAL CHIP	10K 5%	1/10W	R565	1-249-411-11	CARBON 330 5% 1/4W
R316	1-216-071-00	METAL CHIP	8.2K 5%	1/10W	R570	1-216-097-91	METAL GLAZE 100K 5% 1/10W
R318	1-249-430-11	CARBON	12K 5%	1/4W	R571	1-216-097-91	METAL GLAZE 100K 5% 1/10W
R319	1-216-295-00	METAL CHIP	0 5%	1/10W	R572	1-216-097-91	METAL GLAZE 100K 5% 1/10W
R320	1-216-047-91	METAL GLAZE	820 5%	1/10W	R573	1-249-413-11	CARBON 470 5% 1/4W
R361	1-247-815-91	CARBON	220 5%	1/4W	R574	1-249-413-11	CARBON 470 5% 1/4W
R362	1-216-033-00	METAL CHIP	220 5%	1/10W	R577	1-216-097-91	METAL GLAZE 100K 5% 1/10W
R363	1-216-033-00	METAL CHIP	220 5%	1/10W	R701	1-216-049-00	METAL CHIP 1K 5% 1/10W
R364	1-216-049-00	METAL CHIP	1K 5%	1/10W	R702	1-216-295-00	METAL CHIP 0 5% 1/10W
R365	1-216-049-00	METAL CHIP	1K 5%	1/10W	R704	1-216-295-00	METAL CHIP 0 5% 1/10W
R366	1-216-049-00	METAL CHIP	1K 5%	1/10W	R705	1-212-893-00	FUSIBLE 330 5% 1/4W F
R367	1-249-417-11	CARBON	1K 5%	1/4W	R706	1-216-113-00	METAL CHIP 470K 5% 1/10W
R368	1-216-133-00	METAL CHIP	3 3M 5%	1/10W	R708	1-216-295-00	METAL CHIP 0 5% 1/10W
R369	1-216-689-11	METAL CHIP	39K 0 5%	1/10W	R709	1-216-049-00	METAL CHIP 1K 5% 1/10W
R370	1-216-061-00	METAL CHIP	3 3K 5%	1/10W	R710	1-216-049-00	METAL CHIP 1K 5% 1/10W
R371	1-208-820-11	METAL GLAZE	39K 0 50%	1/10W	R711	1-216-049-00	METAL CHIP 1K 5% 1/10W
R372	1-216-061-00	METAL CHIP	3.3K 5%	1/10W	R712	1-216-295-00	METAL CHIP 0 5% 1/10W
R373	1-216-689-11	METAL CHIP	39K 0.5%	1/10W	R731	1-249-417-11	CARBON 1K 5% 1/4W
R374	1-216-049-00	METAL CHIP	1K 5%	1/10W	R732	1-249-417-11	CARBON 1K 5% 1/4W
R375	1-216-049-00	METAL CHIP	1K 5%	1/10W	R733	1-249-425-11	CARBON 4.7K 5% 1/4W
R376	1-216-097-91	METAL GLAZE	100K 5%	1/10W	R734	1-249-417-11	CARBON 1K 5% 1/4W
R377	1-216-097-91	METAL GLAZE	100K 5%	1/10W	R735	1-249-417-11	CARBON 1K 5% 1/4W
R378	1-216-083-00	METAL CHIP	27K 5%	1/10W	R736	1-216-295-00	METAL CHIP 0 5% 1/10W
R379	1-216-073-00	METAL CHIP	10K 5%	1/10W	R737	1-216-081-00	METAL CHIP 22K 5% 1/10W
R380	1-216-065-00	METAL CHIP	4.7K 5%	1/10W	R738	1-216-081-00	METAL CHIP 22K 5% 1/10W
R381	1-216-065-00	METAL CHIP	4.7K 5%	1/10W	R739	1-216-073-00	METAL CHIP 10K 5% 1/10W
R382	1-216-065-00	METAL CHIP	4 7K 5%	1/10W	R741	1-216-295-00	METAL CHIP 0 5% 1/10W
R383	1-216-065-00	METAL CHIP	4.7K 5%	1/10W	R742	1-216-295-00	METAL CHIP 0 5% 1/10W
R386	1-216-295-00	METAL CHIP	0 5%	1/10W	R743	1-216-295-00	METAL CHIP 0 5% 1/10W
R387	1-216-295-00	METAL CHIP	0 5%	1/10W	R748	1-216-065-00	METAL CHIP 4.7K 5% 1/10W
R388	1-216-295-00	METAL CHIP	0 5%	1/10W	R991	1-216-049-00	METAL CHIP 1K 5% 1/10W
R389	1-216-049-00	METAL CHIP	1K 5%	1/10W			< VARIABLE RESISTOR >
R399	1-216-049-00	METAL CHIP	1K 5%	1/10W			
R400	1-216-073-00	METAL CHIP	10K 5%	1/10W	RV731	1-241-766-11	RES, ADJ, CERMET 47K
R405	1-216-061-00	METAL CHIP	3.3K 5%	1/10W			< SWITCH >
R406	1-216-061-00	METAL CHIP	3.3K 5%	1/10W			
R411	1-216-073-00	METAL CHIP	10K 5%	1/10W			
R412	1-216-089-00	METAL CHIP	47K 5%	1/10W	S100	1-570-953-11	SWITCH, PUSH (1 KEY)(REC PRF)

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
S701	1-571-588-11	SWITCH, SLIDE (RF UNIT 3CH/4CH)				< IC >	
		< TUNER >		IC401	8-749-011-05	IC GP1U28X	
△ TU702	1-693-353-11	TUNER, (IF) SOLID TYPE				< TRANSISTOR >	
		< VIBRATOR >		Q401	8-729-421-22	TRANSISTOR UN2211	
X160	1-760-494-11	VIBRATOR, CRYSTAL (16MHz)				< RESISTOR >	
X161	1-579-463-11	VIBRATOR, CRYSTAL (32 768kHz)		R401	1-216-029-00	METAL CHIP 150 5%	1/10W
X202	1-577-380-11	VIBRATOR, CRYSTAL (3.579545MHz)		R402	1-216-295-00	METAL CHIP 0 5%	1/10W
				R403	1-216-089-00	METAL CHIP 47K 5%	1/10W
*	1-664-703-11	MF-302 BOARD (795HF/975HF)				< SWITCH >	
		*****	(Ref.No 3,000 Series)	S403	1-571-977-11	SWITCH, TACTIL (POWER)	
		< CAPACITOR >					
C401	1-163-809-11	CERAMIC CHIP 0.047uF 10% 25V					
		< CONNECTOR >		*	A-6791-142-A	PR-218 BOARD, COMPLETE (795HF)	
CN407	1-691-064-31	HOUSING, CONNECTOR 5P		*	A-6791-139-A	RP-218 BOARD, COMPLETE (975HF)	
		< DIODE >				*****	(Ref.No. 3,000 Series)
D405	8-719-056-07	LED SLR-342MC-A-47 (POWER)				< CAPACITOR >	
		< IC >		C141	1-163-009-11	CERAMIC CHIP 0 001uF 10%	50V
IC401	8-749-011-05	IC GP1U28X		C142	1-164-232-11	CERAMIC CHIP 0 01uF	50V
		< TRANSISTOR >		C143	1-126-967-11	ELECT 47uF 20%	16V
Q401	8-729-421-22	TRANSISTOR UN2211		C144	1-164-344-11	CERAMIC CHIP 0.068uF 10%	25V
		< RESISTOR >		C145	1-128-551-11	ELECT 22uF 20%	25V
R401	1-216-029-00	METAL CHIP 150 5% 1/10W		C147	1-126-933-11	ELECT 100uF 20%	16V
R402	1-216-295-00	METAL CHIP 0 5% 1/10W		C148	1-163-009-11	CERAMIC CHIP 0 001uF 10%	50V
R403	1-216-089-00	METAL CHIP 47K 5% 1/10W		C149	1-163-017-00	CERAMIC CHIP 0.0047uF 5%	50V
		< SWITCH >		C151	1-164-004-11	CERAMIC CHIP 0 1uF 10%	25V
S403	1-571-977-11	SWITCH, TACTIL (POWER)		C152	1-124-257-00	ELECT 2 2uF 20%	50V
				C153	1-124-257-00	ELECT 2.2uF 20%	50V
*	1-664-707-11	MF-303 BOARD (775HF/776HF)		C260	1-163-237-11	CERAMIC CHIP 27PF 5%	50V
		*****	(Ref.No. 1,000 Series)	C261	1-163-237-11	CERAMIC CHIP 27PF 5%	50V
		< CAPACITOR >		C262	1-163-099-00	CERAMIC CHIP 18PF 5%	50V (975HF)
C401	1-163-809-11	CERAMIC CHIP 0.047uF 10% 25V		C263	1-163-099-00	CERAMIC CHIP 18PF 5%	50V (975HF)
		< CONNECTOR >		C264	1-163-037-11	CERAMIC CHIP 0.022uF 10%	25V
CN407	1-691-064-31	HOUSING, CONNECTOR 5P		C265	1-163-037-11	CERAMIC CHIP 0 022uF 10%	25V
		< DIODE >		C266	1-164-232-11	CERAMIC CHIP 0 01uF	50V
D405	8-719-056-07	LED SLR-342MC-A-47 (POWER)		C267	1-163-037-11	CERAMIC CHIP 0.022uF 10%	25V
				C268	1-163-241-11	CERAMIC CHIP 39PF 5%	50V
				C269	1-163-241-11	CERAMIC CHIP 39PF 5%	50V
				C270	1-163-037-11	CERAMIC CHIP 0.022uF 10%	25V
				C271	1-163-037-11	CERAMIC CHIP 0.022uF 10%	25V
				C272	1-163-241-11	CERAMIC CHIP 39PF 5%	50V
				C273	1-163-241-11	CERAMIC CHIP 39PF 5%	50V
				C274	1-163-037-11	CERAMIC CHIP 0.022uF 10%	25V
				C275	1-163-038-00	CERAMIC CHIP 0 1uF	25V
				C276	1-163-037-11	CERAMIC CHIP 0 022uF 10%	25V
				C277	1-163-037-11	CERAMIC CHIP 0 022uF 10%	25V
				C278	1-163-037-11	CERAMIC CHIP 0.022uF 10%	25V
				C279	1-163-037-11	CERAMIC CHIP 0 022uF 10%	25V

The components identified by mark △ or dotted line with mark △ are critical for safety. Replace only with part number specified.	Les composants identifiés par une marque △ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.
--	--

Ref No.	Part No	Description	Remark	Ref No.	Part No	Description	Remark
C280	1-124-584-00	ELECT	100uF 20%	10V	C832	1-163-251-11	CERAMIC CHIP 100PF 5% 50V (975HF)
C281	1-163-038-00	CERAMIC CHIP	0.1uF	25V	C833	1-163-121-00	CERAMIC CHIP 150PF 5% 50V (975HF)
C282	1-164-232-11	CERAMIC CHIP	0.01uF	50V	C834	1-163-245-11	CERAMIC CHIP 56PF 5% 50V (975HF)
C283	1-164-004-11	CERAMIC CHIP	0.1uF 10%	25V	C835	1-163-038-00	CERAMIC CHIP 0.1uF 25V (975HF)
C284	1-164-004-11	CERAMIC CHIP	0.1uF 10%	25V	C836	1-124-589-11	ELECT 47uF 20% 16V (975HF)
C285	1-164-232-11	CERAMIC CHIP	0.01uF	50V	C837	1-163-038-00	CERAMIC CHIP 0.1uF 25V (975HF)
C286	1-124-584-00	ELECT	100uF 20%	10V	C851	1-164-232-11	CERAMIC CHIP 0.01uF 50V
C287	1-163-239-11	CERAMIC CHIP	33PF 5%	50V	C852	1-163-038-00	CERAMIC CHIP 0.1uF 25V
C288	1-163-239-11	CERAMIC CHIP	33PF 5%	50V	C853	1-163-243-11	CERAMIC CHIP 47PF 5% 50V
C289	1-163-038-00	CERAMIC CHIP	0.1uF	25V	C854	1-163-239-11	CERAMIC CHIP 33PF 5% 50V
C321	1-126-967-11	ELECT	47uF 20%	16V	C855	1-163-243-11	CERAMIC CHIP 47PF 5% 50V
C322	1-164-232-11	CERAMIC CHIP	0.01uF	50V	C859	1-124-589-11	ELECT 47uF 20% 16V
C323	1-164-232-11	CERAMIC CHIP	0.01uF	50V			< CONNECTOR >
C324	1-104-697-11	FILM	0.047uF 5%	100V (795HF)	CN260	1-766-986-11	CONNECTOR, FFC/FPC 13P
C324	1-137-462-11	FILM	0.018uF 5%	100V (975HF)	* CN261	1-564-029-00	PIN, CONNECTOR 4P
C331	1-126-933-11	ELECT	100uF 20%	16V (975HF)	CN262	1-573-834-11	CONNECTOR, BOARD TO BOARD 20P
C332	1-164-232-11	CERAMIC CHIP	0.01uF	50V (975HF)	CN263	1-573-834-11	CONNECTOR, BOARD TO BOARD 20P
C334	1-163-011-11	CERAMIC CHIP	0.0015uF 10%	50V (975HF)	CN301	1-573-729-11	PIN, CONNECTOR 2P
C335	1-104-697-11	FILM	0.047uF 5%	100V (975HF)	CN302	1-506-483-21	PIN, CONNECTOR 4P
C341	1-124-584-00	ELECT	100uF 20%	10V	CN303	1-573-729-31	PIN, CONNECTOR 2P
C342	1-164-232-11	CERAMIC CHIP	0.01uF	50V	* CN341	1-564-027-00	PIN, CONNECTOR 2P
C343	1-124-257-00	ELECT	2.2uF 20%	50V			< DIODE >
C344	1-164-232-11	CERAMIC CHIP	0.01uF	50V	D801	8-719-971-05	DIODE HSM123
C345	1-126-160-11	ELECT	1uF 20%	50V	D802	8-719-911-19	DIODE 1SS119
C346	1-164-232-11	CERAMIC CHIP	0.01uF	50V			< IC >
C347	1-164-232-11	CERAMIC CHIP	0.01uF	50V	IC141	8-759-246-14	IC TA8823N
C350	1-163-038-00	CERAMIC CHIP	0.1uF	25V	IC260	8-759-352-17	IC HA118195NT
C351	1-163-135-00	CERAMIC CHIP	560PF 5%	50V	IC301	8-759-089-84	IC BA7755AF-T1
C352	1-164-232-11	CERAMIC CHIP	0.01uF	50V	IC340	8-759-055-49	IC AN3327K
C353	1-163-038-00	CERAMIC CHIP	0.1uF	25V			< JUMPER RESISTOR >
C356	1-163-135-00	CERAMIC CHIP	560PF 5%	50V	JR501	1-216-296-00	METAL CHIP 0 5% 1/8W
C357	1-164-232-11	CERAMIC CHIP	0.01uF	50V	JR502	1-216-295-00	METAL CHIP 0 5% 1/10W
C358	1-163-038-00	CERAMIC CHIP	0.1uF	25V	JR503	1-216-295-00	METAL CHIP 0 5% 1/10W
C801	1-163-038-00	CERAMIC CHIP	0.1uF	25V	JR504	1-216-295-00	METAL CHIP 0 5% 1/10W
C802	1-163-127-00	CERAMIC CHIP	270PF 5%	50V			< COIL >
C803	1-163-241-11	CERAMIC CHIP	39PF 5%	50V	L141	1-414-189-31	INDUCTOR 100uH
C804	1-163-222-11	CERAMIC CHIP	5PF 0.25PF	50V	L260	1-410-509-11	INDUCTOR 10uH (975HF)
C805	1-163-037-11	CERAMIC CHIP	0.022uF 10%	25V	L261	1-410-509-11	INDUCTOR 10uH (975HF)
C806	1-163-231-11	CERAMIC CHIP	15PF 5%	50V	L262	1-414-189-31	INDUCTOR 100uH
C807	1-164-232-11	CERAMIC CHIP	0.01uF	50V	L263	1-414-189-31	INDUCTOR 100uH
C808	1-163-127-00	CERAMIC CHIP	270PF 5%	50V	L321	1-414-189-31	INDUCTOR 100uH
C809	1-163-037-11	CERAMIC CHIP	0.022uF 10%	25V	L322	1-414-189-31	INDUCTOR 100uH
C810	1-164-232-11	CERAMIC CHIP	0.01uF	50V	L331	1-410-687-11	INDUCTOR 1.2mH (975HF)
C811	1-163-038-00	CERAMIC CHIP	0.1uF	25V	L341	1-414-189-31	INDUCTOR 100uH
C812	1-163-237-11	CERAMIC CHIP	27PF 5%	50V	L801	1-410-525-11	INDUCTOR 220uH
C813	1-164-232-11	CERAMIC CHIP	0.01uF	50V	L802	1-414-189-31	INDUCTOR 100uH
C814	1-163-257-11	CERAMIC CHIP	180PF 5%	50V			
C815	1-124-589-11	ELECT	47uF 20%	16V			
C816	1-163-038-00	CERAMIC CHIP	0.1uF	25V			
C817	1-164-232-11	CERAMIC CHIP	0.01uF	50V			
C830	1-164-232-11	CERAMIC CHIP	0.01uF	50V (975HF)			

Ref No.	Part No	Description	Remark	Ref No.	Part No.	Description	Remark
L803	1-410-516-11	INDUCTOR 39uH		R266	1-216-053-00	METAL CHIP 1.5K 5%	1/10W
L804	1-410-516-11	INDUCTOR 39uH		R267	1-216-071-00	METAL CHIP 8.2K 5%	1/10W
L805	1-410-525-11	INDUCTOR 220uH		R268	1-216-081-00	METAL CHIP 22K 5%	1/10W
L830	1-410-507-11	INDUCTOR 6.8uH (975HF)		R269	1-216-059-00	METAL CHIP 2.7K 5%	1/10W
				R270	1-216-081-00	METAL CHIP 22K 5%	1/10W
L831	1-414-189-31	INDUCTOR 100uH (975HF)		R271	1-216-049-00	METAL CHIP 1K 5%	1/10W
L851	1-414-189-31	INDUCTOR 100uH		R272	1-216-081-00	METAL CHIP 22K 5%	1/10W
		< IC LINK >		R273	1-216-081-00	METAL CHIP 22K 5%	1/10W
△ PS331	1-533-586-31	LINK, IC 491 315 (0 315A)(975HF)		R274	1-216-075-00	METAL CHIP 12K 5%	1/10W
		< TRANSISTOR >		R275	1-216-075-00	METAL CHIP 12K 5%	1/10W
Q260	8-729-230-49	TRANSISTOR 2SC2712-G		R276	1-216-049-00	METAL CHIP 1K 5%	1/10W
Q321	8-729-802-91	TRANSISTOR 2SD879		R317	1-216-079-00	METAL CHIP 18K 5%	1/10W
Q331	8-729-012-31	TRANSISTOR 2SC4040-TL2-Q (975HF)		R321	1-249-401-11	CARBON 47 5%	1/4W
Q332	8-729-900-51	TRANSISTOR DTA114TK (975HF)		R322	1-216-063-91	METAL GLAZE 3.9K 5%	1/10W (975HF)
Q801	8-729-216-21	TRANSISTOR 2SA1162Y-TE85L		R322	1-216-067-00	METAL CHIP 5.6K 5%	1/10W (975HF)
Q802	8-729-230-49	TRANSISTOR 2SC2712-G		R323	1-217-671-11	METAL CHIP 1 5%	1/10W
Q803	8-729-216-21	TRANSISTOR 2SA1162Y-TE85L		R324	1-249-408-11	CARBON 180 5%	1/4W
Q804	8-729-230-49	TRANSISTOR 2SC2712-G		R331	1-216-295-00	METAL CHIP 0 5%	1/10W (975HF)
Q805	8-729-900-51	TRANSISTOR DTA114TK		R332	1-216-083-00	METAL CHIP 27K 5%	1/10W (975HF)
Q806	8-729-230-49	TRANSISTOR 2SC2712-G		R333	1-249-394-11	CARBON 12 5%	1/4W F (975HF)
Q807	8-729-230-49	TRANSISTOR 2SC2712-G		R336	1-216-296-00	METAL CHIP 0 5%	1/8W (975HF)
Q808	8-729-230-49	TRANSISTOR 2SC2712-G		R336	1-216-164-00	METAL GLAZE 39 5%	1/8W (975HF)
Q809	8-729-900-51	TRANSISTOR DTA114TK		R337	1-216-296-00	METAL CHIP 0 5%	1/8W (975HF)
Q810	8-729-230-49	TRANSISTOR 2SC2712-G		R337	1-216-164-00	METAL GLAZE 39 5%	1/8W (975HF)
Q830	8-729-216-22	TRANSISTOR 2SA1162 (975HF)		R341	1-216-067-00	METAL CHIP 5.6K 5%	1/10W
Q831	8-729-216-22	TRANSISTOR 2SA1162 (975HF)		R342	1-216-051-00	METAL CHIP 1.2K 5%	1/10W
Q832	8-729-421-19	TRANSISTOR UN2213 (975HF)		R343	1-216-073-00	METAL CHIP 10K 5%	1/10W
Q833	8-729-804-41	TRANSISTOR 2SB1122-S (975HF)		R344	1-216-079-00	METAL CHIP 18K 5%	1/10W
Q834	8-729-421-19	TRANSISTOR UN2213 (975HF)		R345	1-216-097-91	METAL GLAZE 100K 5%	1/10W
Q851	8-729-230-49	TRANSISTOR 2SC2712-G		R346	1-216-065-00	METAL CHIP 4.7K 5%	1/10W
Q852	8-729-230-49	TRANSISTOR 2SC2712-G		R347	1-216-065-00	METAL CHIP 4.7K 5%	1/10W
Q853	8-729-216-21	TRANSISTOR 2SA1162Y-TE85L		R350	1-216-033-00	METAL CHIP 220 5%	1/10W
Q854	8-729-216-21	TRANSISTOR 2SA1162Y-TE85L		R351	1-216-035-00	METAL CHIP 270 5%	1/10W
Q855	8-729-230-49	TRANSISTOR 2SC2712-G		R356	1-216-035-00	METAL CHIP 270 5%	1/10W
Q856	8-729-230-49	TRANSISTOR 2SC2712-G		R357	1-216-097-91	METAL GLAZE 100K 5%	1/10W
Q857	8-729-216-21	TRANSISTOR 2SA1162Y-TE85L		R801	1-216-049-00	METAL CHIP 1K 5%	1/10W
		< RESISTOR >		R802	1-216-049-00	METAL CHIP 1K 5%	1/10W
R141	1-216-119-00	METAL CHIP 820K 5%	1/10W	R803	1-216-039-00	METAL CHIP 390 5%	1/10W
R142	1-216-093-00	METAL CHIP 68K 5%	1/10W	R804	1-216-039-00	METAL CHIP 390 5%	1/10W
R143	1-216-097-91	METAL GLAZE 100K 5%	1/10W	R805	1-216-049-00	METAL CHIP 1K 5%	1/10W
R144	1-216-097-91	METAL GLAZE 100K 5%	1/10W	R806	1-216-043-91	METAL GLAZE 560 5%	1/10W
R145	1-216-085-00	METAL CHIP 33K 5%	1/10W	R807	1-216-039-00	METAL CHIP 390 5%	1/10W
R146	1-216-065-00	METAL CHIP 4.7K 5%	1/10W	R808	1-216-033-00	METAL CHIP 220 5%	1/10W
R147	1-216-037-00	METAL CHIP 330 5%	1/10W	R809	1-216-077-00	METAL CHIP 15K 5%	1/10W
R148	1-216-097-91	METAL GLAZE 100K 5%	1/10W	R810	1-216-075-00	METAL CHIP 12K 5%	1/10W
R149	1-216-121-91	METAL GLAZE 1M 5%	1/10W	R811	1-216-033-00	METAL CHIP 220 5%	1/10W
R260	1-216-037-00	METAL CHIP 330 5%	1/10W	R812	1-216-043-91	METAL GLAZE 560 5%	1/10W
R261	1-216-037-00	METAL CHIP 330 5%	1/10W				
R262	1-216-295-00	METAL CHIP 0 5%	1/10W				
R263	1-216-295-00	METAL CHIP 0 5%	1/10W				
R264	1-216-295-00	METAL CHIP 0 5%	1/10W				
R265	1-216-295-00	METAL CHIP 0 5%	1/10W				

The components identified by mark △ or dotted line with mark △ are critical for safety. Replace only with part number specified.	Les composants identifiés par une marque △ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.
--	--

Ref. No	Part No	Description	Remark
R813	1-247-843-11	CARBON 3 3K 5%	1/4W
R814	1-216-057-00	METAL CHIP 2.2K 5%	1/10W
R815	1-216-067-00	METAL CHIP 5.6K 5%	1/10W
R816	1-216-075-00	METAL CHIP 12K 5%	1/10W
R817	1-216-077-00	METAL CHIP 15K 5%	1/10W
R818	1-216-039-00	METAL CHIP 390 5%	1/10W
R819	1-216-045-00	METAL CHIP 680 5%	1/10W
R820	1-216-039-00	METAL CHIP 390 5%	1/10W
R821	1-216-045-00	METAL CHIP 680 5%	1/10W
R822	1-216-049-00	METAL CHIP 1K 5%	1/10W
R823	1-216-041-00	METAL CHIP 470 5%	1/10W
R824	1-216-043-91	METAL GLAZE 560 5%	1/10W
R825	1-216-057-00	METAL CHIP 2 2K 5%	1/10W
R826	1-216-025-91	METAL GLAZE 100 5%	1/10W
R827	1-216-045-00	METAL CHIP 680 5%	1/10W
R828	1-216-043-91	METAL GLAZE 560 5%	1/10W
R830	1-216-011-00	METAL CHIP 27 5%	1/10W
R831	1-216-041-00	METAL CHIP 470 5%	1/10W (975HF)
R832	1-208-787-11	METAL GLAZE 1.6K 0 50%	1/10W (975HF)
R833	1-216-095-00	METAL CHIP 82K 5%	1/10W (975HF)
R834	1-216-089-00	METAL CHIP 47K 5%	1/10W (975HF)
R835	1-216-689-11	METAL CHIP 39K 0 5%	1/10W (975HF)
R836	1-216-061-00	METAL CHIP 3.3K 5%	1/10W (975HF)
R837	1-216-073-00	METAL CHIP 10K 5%	1/10W (975HF)
R844	1-216-069-00	METAL CHIP 6 8K 5%	1/10W
R851	1-208-820-11	METAL GLAZE 39K 0.50%	1/10W
R852	1-208-802-11	METAL GLAZE 6 8K 0.50%	1/10W
R853	1-208-792-11	METAL GLAZE 2 7K 0.50%	1/10W
R855	1-208-770-11	METAL GLAZE 330 0.50%	1/10W
R856	1-208-758-11	METAL GLAZE 100 0 50%	1/10W
R857	1-208-790-11	METAL GLAZE 2 2K 0.50%	1/10W
R858	1-216-051-00	METAL CHIP 1 2K 5%	1/10W
R859	1-208-800-11	METAL GLAZE 5.6K 0 50%	1/10W
R860	1-216-057-00	METAL CHIP 2.2K 5%	1/10W
R861	1-216-065-00	METAL CHIP 4.7K 5%	1/10W
R862	1-208-806-11	METAL GLAZE 10K 0.50%	1/10W
R864	1-216-057-00	METAL CHIP 2 2K 5%	1/10W
R865	1-216-107-00	METAL CHIP 270K 5%	1/10W

< TRANSFORMER >

T321	1-431-097-11	TRANSFORMER, BIAS OSCILLATION (795HF)
T321	1-431-100-11	TRANSFORMER, BIAS OSCILLATION (975HF)
T331	1-423-415-11	TRANSFORMER, BIAS OSCILLATION (975HF)

* A-6791-147-A RP-220 BOARD, COMPLETE (775HF/776HF)

 (Ref.No. 1,000 Series)

< CAPACITOR >

C154	1-164-161-11	CERAMIC CHIP 0 0022uF 10%	100V
C260	1-163-237-11	CERAMIC CHIP 27PF 5%	50V
C261	1-163-237-11	CERAMIC CHIP 27PF 5%	50V

Ref. No.	Part No	Description	Remark
C264	1-163-037-11	CERAMIC CHIP 0.022uF 10%	25V
C265	1-163-037-11	CERAMIC CHIP 0.022uF 10%	25V
C266	1-164-232-11	CERAMIC CHIP 0.01uF	50V
C267	1-163-037-11	CERAMIC CHIP 0.022uF 10%	25V
C268	1-163-241-11	CERAMIC CHIP 39PF 5%	50V
C269	1-163-241-11	CERAMIC CHIP 39PF 5%	50V
C270	1-163-037-11	CERAMIC CHIP 0.022uF 10%	25V
C271	1-163-037-11	CERAMIC CHIP 0.022uF 10%	25V
C272	1-163-241-11	CERAMIC CHIP 39PF 5%	50V
C273	1-163-241-11	CERAMIC CHIP 39PF 5%	50V
C274	1-163-037-11	CERAMIC CHIP 0.022uF 10%	25V
C275	1-163-038-00	CERAMIC CHIP 0.1uF	25V
C276	1-163-037-11	CERAMIC CHIP 0.022uF 10%	25V
C277	1-163-037-11	CERAMIC CHIP 0.022uF 10%	25V
C278	1-163-037-11	CERAMIC CHIP 0.022uF 10%	25V
C279	1-163-037-11	CERAMIC CHIP 0.022uF 10%	25V
C280	1-124-584-00	ELECT 100uF 20%	10V
C281	1-163-038-00	CERAMIC CHIP 0.1uF	25V
C282	1-164-232-11	CERAMIC CHIP 0.01uF	50V
C283	1-164-004-11	CERAMIC CHIP 0.1uF 10%	25V
C284	1-164-004-11	CERAMIC CHIP 0.1uF 10%	25V
C285	1-164-232-11	CERAMIC CHIP 0.01uF	50V
C286	1-124-584-00	ELECT 100uF 20%	10V
C287	1-163-239-11	CERAMIC CHIP 33PF 5%	50V
C288	1-163-239-11	CERAMIC CHIP 33PF 5%	50V
C289	1-163-038-00	CERAMIC CHIP 0.1uF	25V
C321	1-126-967-11	ELECT 47uF 20%	16V
C322	1-164-232-11	CERAMIC CHIP 0.01uF	50V
C323	1-164-232-11	CERAMIC CHIP 0.01uF	50V
C324	1-104-697-11	FILM 0.047uF 5%	100V
C341	1-124-584-00	ELECT 100uF 20%	10V
C342	1-164-232-11	CERAMIC CHIP 0.01uF	50V
C343	1-124-257-00	ELECT 2.2uF 20%	50V
C344	1-164-232-11	CERAMIC CHIP 0.01uF	50V
C345	1-126-160-11	ELECT 1uF 20%	50V
C346	1-164-232-11	CERAMIC CHIP 0.01uF	50V
C347	1-164-232-11	CERAMIC CHIP 0.01uF	50V
C350	1-163-038-00	CERAMIC CHIP 0.1uF	25V
C351	1-163-135-00	CERAMIC CHIP 560PF 5%	50V
C352	1-164-232-11	CERAMIC CHIP 0.01uF	50V
C353	1-163-038-00	CERAMIC CHIP 0.1uF	25V
C356	1-163-135-00	CERAMIC CHIP 560PF 5%	50V
C357	1-164-232-11	CERAMIC CHIP 0.01uF	50V
C358	1-163-038-00	CERAMIC CHIP 0.1uF	25V

< CONNECTOR >

CN260	1-766-986-11	CONNECTOR, FFC/FPC 13P
* CN261	1-564-029-00	PIN, CONNECTOR 4P
CN262	1-573-834-11	CONNECTOR, BOARD TO BOARD 20P
CN263	1-573-834-11	CONNECTOR, BOARD TO BOARD 20P
CN301	1-573-729-11	PIN, CONNECTOR 2P
CN302	1-573-733-11	PIN, CONNECTOR 6P
* CN341	1-564-027-00	PIN, CONNECTOR 2P

< IC >

IC260	8-759-352-17	IC HA118195NT
IC301	8-759-089-84	IC BA7755AF-T1
IC340	8-759-055-49	IC AN3327K

Ref No	Part No	Description	Remark
< JUMPER RESISTOR >			
JR501	1-216-296-00	METAL CHIP 0 5%	1/8W
JR502	1-216-295-00	METAL CHIP 0 5%	1/10W
JR504	1-216-295-00	METAL CHIP 0 5%	1/10W
< COIL >			
L260	1-410-509-11	INDUCTOR 10uH	
L261	1-410-509-11	INDUCTOR 10uH	
L262	1-414-189-31	INDUCTOR 100uH	
L263	1-414-189-31	INDUCTOR 100uH	
L321	1-414-189-31	INDUCTOR 100uH	
L322	1-414-189-31	INDUCTOR 100uH	
L341	1-414-189-31	INDUCTOR 100uH	
< TRANSISTOR >			
Q260	8-729-230-49	TRANSISTOR 2SC2712-G	
Q321	8-729-802-91	TRANSISTOR 2SD879	
< RESISTOR >			
R152	1-216-065-00	METAL CHIP 4 7K 5%	1/10W
R158	1-249-419-11	CARBON 1.5K 5%	1/4W
R260	1-216-037-00	METAL CHIP 330 5%	1/10W
R261	1-216-037-00	METAL CHIP 330 5%	1/10W
R262	1-216-295-00	METAL CHIP 0 5%	1/10W
R263	1-216-295-00	METAL CHIP 0 5%	1/10W
R264	1-216-295-00	METAL CHIP 0 5%	1/10W
R265	1-216-295-00	METAL CHIP 0 5%	1/10W
R266	1-216-053-00	METAL CHIP 1 5K 5%	1/10W
R267	1-216-071-00	METAL CHIP 8 2K 5%	1/10W
R268	1-216-081-00	METAL CHIP 22K 5%	1/10W
R269	1-216-059-00	METAL CHIP 2 7K 5%	1/10W
R270	1-216-081-00	METAL CHIP 22K 5%	1/10W
R271	1-216-049-00	METAL CHIP 1K 5%	1/10W
R272	1-216-081-00	METAL CHIP 22K 5%	1/10W
R273	1-216-081-00	METAL CHIP 22K 5%	1/10W
R274	1-216-075-00	METAL CHIP 12K 5%	1/10W
R275	1-216-075-00	METAL CHIP 12K 5%	1/10W
R276	1-216-049-00	METAL CHIP 1K 5%	1/10W
R317	1-216-079-00	METAL CHIP 18K 5%	1/10W
R321	1-249-401-11	CARBON 47 5%	1/4W
R322	1-216-063-91	METAL GLAZE 3 9K 5%	1/10W
R323	1-217-671-11	METAL CHIP 1 5%	1/10W
R324	1-249-408-11	CARBON 180 5%	1/4W
R336	1-216-296-00	METAL CHIP 0 5%	1/8W
R337	1-216-296-00	METAL CHIP 0 5%	1/8W
R341	1-216-067-00	METAL CHIP 5 6K 5%	1/10W
R342	1-216-051-00	METAL CHIP 1 2K 5%	1/10W
R343	1-216-073-00	METAL CHIP 10K 5%	1/10W
R344	1-216-079-00	METAL CHIP 18K 5%	1/10W
R345	1-216-097-91	METAL GLAZE 100K 5%	1/10W
R346	1-216-065-00	METAL CHIP 4 7K 5%	1/10W
R347	1-216-065-00	METAL CHIP 4 7K 5%	1/10W
R350	1-216-033-00	METAL CHIP 220 5%	1/10W
R351	1-216-035-00	METAL CHIP 270 5%	1/10W

Ref No	Part No	Description	Remark
R356	1-216-035-00	METAL CHIP 270 5%	1/10W
R357	1-216-097-91	METAL GLAZE 100K 5%	1/10W
< TRANSFORMER >			
T321	1-431-097-11	TRANSFORMER, BIAS OSCILLATION	
	1-468-184-11	SR-800 BOARD, COMPLETE (EXCEPT 775HF PX/975HF CS, PX) ***** (Ref No 4,000 Series)	
< CAPACITOR >			
△C101	9-902-934-01	FILM 0 1uF	250V
△C102	9-902-934-01	FILM 0 1uF	250V
C106	9-980-075-01	ELECT 120uF	200V
C107	1-126-959-11	ELECT 4 7uF	50V
C110	1-130-491-51	FILM 0 047uF	50V
C111	1-130-491-51	FILM 0 047uF	50V
C201	1-126-967-11	ELECT 47uF	50V
C202	1-126-183-11	ELECT 1000uF	16V
C203	1-126-934-11	ELECT 220uF	16V
C204	1-126-797-11	ELECT 1000uF	10V
C205	1-126-925-11	ELECT 470uF	10V
C206	1-126-967-11	ELECT 47uF	50V
C207	1-126-925-11	ELECT 470uF	10V
C208	1-126-960-11	ELECT 1uF	50V
C301	1-126-934-11	ELECT 220uF	16V
C302	1-126-933-11	ELECT 100uF	16V
C303	1-104-667-11	ELECT 22uF	35V
C304	1-104-668-11	ELECT 33uF	35V
C305	1-126-947-11	ELECT 47uF	35V
C306	1-126-925-11	ELECT 470uF	10V
< DIODE >			
D102	8-719-058-91	DIODEAG01A	
D103	8-719-920-32	DIODEERA15-02	
D104	9-902-050-01	DIODEMA4030	
D105	9-900-514-01	DIODEMA165	
D106	8-719-054-32	DIODEERA15-06	
△D107	8-719-047-70	DIODE1A4	
△D108	8-719-047-70	DIODE1A4	
△D109	8-719-047-70	DIODE1A4	
△D110	8-719-047-70	DIODE1A4	
△D201	9-900-535-01	DIODEAU02Z	
△D202	8-719-510-73	DIODES3L20U	
△D204	8-719-027-20	DIODED3S4M-F	
△D205	8-719-058-08	DIODERD51F	
△D206	9-900-535-01	DIODEAU02Z	
△D207	9-900-535-01	DIODEAU02Z	
D302	8-719-109-85	DIODERD5 1ES	
D303	8-719-911-19	DIODE1SS119	
< FUSE >			
△F101	1-533-296-11	FUSE (2A/125V)	

The components identified by mark △ or dotted line with mark △ are critical for safety. Replace only with part number specified.	Les composants identifiés par une marque △ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.
--	--

Ref No	Part No	Description	Remark	Ref No	Part No	Description	Remark
		< FERRITE BEAD >					
FB-1	9-902-053-01	BEAD, CORE		D106	8-719-043-74	DIODE AK04	
		< PHOTO COUPIER >		D107	8-719-043-74	DIODE AK04	
△PC101	8-719-018-29	COUPLER, PHOTOON3131		D108	8-719-911-19	DIODE 1SS119	
		< IC LINK >		△D201	8-719-030-24	DIODE EG01C	
△PS201	1-533-592-21	LINK, IC 49101 6 (1 6A)		△D202	8-719-510-73	DIODE S3L20U	
△PS203	1-533-592-21	LINK, IC 49101 6 (1 6A)		△D204	8-719-027-20	DIODE D3S4M	
		< TRANSISTOR >		△D205	8-719-058-08	DIODE RD51FB	
△Q101	8-729-904-98	TRANSISTOR 2SC4054		△D206	8-719-030-24	DIODE EG01C	
△Q102	8-729-012-31	TRANSISTOR 2SC4040		△D207	9-900-535-01	DIODE AU02Z	
△Q301	8-729-113-32	TRANSISTOR 2SB733K4		D301	8-719-911-19	DIODE 1SS119	
Q302	8-729-422-72	TRANSISTOR UN4211		D302	8-719-109-85	DIODE RD5 1ES	
Q303	8-729-177-32	TRANSISTOR 2SD773K4		D303	8-719-911-19	DIODE 1SS119	
		< RESISTOR >		D304	8-719-108-83	DIODE D2S4M	
R109	1-247-826-11	CORBON 620	1/4W	D305	8-719-911-19	DIODE 1SS119	
R204	9-980-233-01	FUSIBLE 0 47	1/4W			< FUSE >	
				△F101	1-532-388-31	FUSE (2A/250V)	
						< IC >	
				△IC101	9-980-235-01	IC AN8028	
						< PHOTO COUPLER >	
	1-468-186-12	SR802 BOARD, COMPLETE		△PC101	8-749-924-80	COUPLER, PHOTO PS2561	
		(775HF PX/975HF CS, PX)				< IC LINK >	
		*****		△PS201	1-533-592-21	49101 6 (1 6A)	
		(Ref No 5,000 Series)		△PS203	1-533-593-21	491002 (2A)	
		< CAPACITOR >				< TRANSISTOR >	
△C101	9-902-934-01	FILM 0 1uF 250V		△Q101	9-980-231-01	TRANSISTOR 2SK1535	
△C102	9-902-934-01	FILM 0 1uF 250V		△Q301	8-729-113-32	TRANSISTOR 2SB733K4	
△C106	9-980-232-01	ELECT 180uF 400V		Q302	8-729-422-72	TRANSISTOR UN4211	
C114	1-126-967-11	ELECT 47uF 50V		Q303	8-729-019-01	TRANSISTOR 2SD2394	
C115	1-126-960-11	ELECT 1uF 50V		Q305	8-729-119-78	TRANSISTOR 2SC2785	
C201	1-126-967-11	ELECT 47uF 50V		Q306	8-729-117-55	TRANSISTOR 2SA1175	
C202	1-126-183-11	ELECT 1000uF 16V				< RESISTOR >	
C203	1-126-934-11	ELECT 220uF 16V		△R106	1-244-921-11	CORBON 100k 1/2W	
C204	1-126-927-11	ELECT 2200uF 10V		△R107	1-244-921-11	CORBON 100k 1/2W	
C205	1-126-925-11	ELECT 470uF 10V		R112	1-247-819-11	CORBON 330 1/4W	
C206	1-126-967-11	ELECT 47uF 50V		R116	1-247-837-11	CORBON 1 8k 1/4W	
C207	1-126-925 11	ELECT 470uF 10V		△R204	9-980-233-01	FUSIBLE 0 47 1/4W	
C208	1-126-960-11	ELECT 1uF 50V					
C301	1-126-934-11	ELECT 220uF 16V		R313	9-980-234-01	FUSIBLE 2 7 1/4W	
C302	1-126-933-11	ELECT 100uF 16V					
C303	1-104-667-11	ELECT 22uF 35V				MISCELLANEOUS	
C304	1-104-668-11	ELECT 33uF 35V				*****	
C305	1-104-667-11	ELECT 22uF 35V		11	1-762-844-21	SWITCH, ROTARY (CLICK SHUTTLE) (795HF)	
C306	1-126-925-11	ELECT 470uF 10V		53	1-475-008-11	SWITCH BLOCK, CONTROL (975HF)	
		< DIODE >		61	1-762-844-31	SWITCH, ROTARY (CLICK SHUTTLE) (975HF)	
△D101	9-900-511-01	DIODE S1WBA60		105	1-777-966-11	CABLE, FLAT (FMH-16) 31P (795HF/975HF)	
△D102	8-719-030-24	DIODE EG01C		106	1-777-962-12	CABLE, FLAT (FMH-14) 15P (775HF/776HF)	
D103	9-900-535-01	DIODE AU02Z					
D104	8-719-115-02	DIODE RD27JS					
D105	9-900-535-01	DIODE AU02Z					

The components identified by mark △ or dotted line with mark △ are critical for safety
Replace only with part number specified

Les composants identifiés par une marque △ sont critiques pour la sécurité
Ne les remplacer que par une pièce portant le numéro spécifié

Ref. No	Part No	Description	Remark
106	1-777-966-11	CABLE, FLAT (FMH-16) 31P (795HF/975HF)	
107	1-777-963-11	CABLE, FLAT (FHM-3) 5P	
△ 112	1-777-851-41	CORD, POWER	
152	1-500-144-11	HEAD, FE	
164	A-6736-103-A	ACE BLOCK ASSY	
218	8-848-576-02	DRUM ASSY, ROTARY UPPER (DZR-45-R)	
219	8-848-666-11	DRUM ASSY, LOWER (DZL-51B/J-RP)	
253	1-762-076-11	SWITCH, ROTARY	
260	X-3943-883-1	MOTOR ASSY, CAM	
315	1-698-409-11	MOTOR, DC SCV-0801A/Z-NP (CAPSTAN)	

ACCESSORIES & PACKING MATERIALS

	1-475-027-11	REMOTE COMMANDER (RMT-V202) (795HF)	
	1-475-027-21	REMOTE COMMANDER (RMT-V202A) (775HF/776HF)	
	1-475-031-11	REMOTE COMMANDER (RMT-V201) (975HF)	
△	1-569-008-11	ADAPTOR, CONVERSION 2P	
	1-696-592-11	CORD, CONNECTION (NTSC) (75-OHM COAXIAL COAXIAL CABLE) 1.5m	
	1-769-181-41	MOUSE, INTERIJEENT CABLE	
	1-776-258-11	CORD, AVC CONNECTION (AUDIO/VIDEO CABLE) 1 5m	
	3-709-126-01	COVER, BATTERY (for RMT-V201) (975HF)	
	3-709-129-01	COVER, BATTERY (for RMT-V202/V202A) (EXCEPT 975HF)	
	3-709-131-01	HEAD (ENGLISH), JOY STICK (for RMT-V202/V202A) (EXCEPT 975HF)	
	3-858-119-11	MANUAL, INSTRUCTION (ENGLISH) (795HF)	
	3-858-119-21	MANUAL, INSTRUCTION (FRENCH) (795HF Canadian)	
	3-858-120-11	MANUAL, INSTRUCTION (ENGLISH) (975HF: US, Canadian, PX)	
	3-858-120-21	MANUAL, INSTRUCTION (FRENCH) (975HF Canadian)	
	3-858-120-31	MANUAL, INSTRUCTION (SPANISH) (975HF: CS, MX)	
	3-858-121-11	MANUAL, INSTRUCTION (ENGLISH) (775HF/776HF)	
	3-858-121-21	MANUAL, INSTRUCTION (FRENCH) (775HF Canadian)	
	3-972-783-21	RING, JOG (for RMT-V201) (975HF)	
*	3-972-794-02	INDIVIDUAL CARTON (795HF)	
*	3-972-794-11	INDIVIDUAL CARTON (775HF)	
*	3-972-794-21	INDIVIDUAL CARTON (776HF)	
*	3-972-795-01	CUSHION (EXCEPT 975HF)	
*	3-972-811-01	INDIVIDUAL CARTON (975HF PX)	
*	3-972-811-02	INDIVIDUAL CARTON (975HF US, Canadian)	
*	3-972-811-23	INDIVIDUAL CARTON (975HF: CS, MX)	
*	3-972-812-01	CUSHION (975HF)	
*	3-972-850-01	BUTTON, FUNCTION (for RMT-V201) (975HF)	
*	3-973-908-01	SPACER	

Ref. No	Part No	Description	Remark

		HARDWARE LIST	

#1	7-682-547-04	SCREW +P 3X6	
#2	7-685-646-79	SCREW (3X8)	
#3	7-624-106-01	STOP RING 3.0, TYPE-E	
#4	7-685-648-79	SCREW +BV 3X12, TYPE2, IT-3	
#5	7-682-645-01	SCREW +PS 3X4	
#6	7-628-254-10	SCREW +PS 2 6X6	

The components identified by mark △ or dotted line with mark △ are critical for safety. Replace only with part number specified.	Les composants identifiés par une marque △ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.
--	--