

SLV-D350P/D550P

RMT-V501C/V501D

SERVICE MANUAL

US Model



Photo: SLV-D550P
RMT-V501D

TS-10 MECHANISM

Refer to the SERVICE MANUAL of VHS MECHANICAL ADJUSTMENT MANUAL VII for MECHANICAL ADJUSTMENTS. (9-921-790-11)

SPECIFICATIONS

System

Laser
Semiconductor laser

Format
VHS NTSC standard

Video recording system
Rotary head helical scanning FM system

Video heads
Double azimuth four heads

Video signal
NTSC color, EIA standards

Tape speed
SP: 33.35 mm/s (1 $\frac{3}{8}$ inches/s)
EP: 11.12 mm/s ($\frac{7}{16}$ inches/s)
LP: 16.67 mm/s ($\frac{11}{16}$ inches/s),
playback only

Maximum recording/playback time
8 hrs. in EP mode (with T-160 tape)

Rewind time
Approx. 1 min (with T-120 tape)

Tuner section

Channel coverage
VHF 2 to 13
UHF 14 to 69
CATV A-8 to A-1, A to W, W+1 to W+84

Antenna
75-ohm antenna terminal for VHF/UHF

Inputs and outputs

LINE IN 1 and LINE-2 IN
VIDEO IN, phono jack (1 each)
Input signal: 1 Vp-p, 75 ohms, unbalanced, sync negative

AUDIO IN, phono jacks (2 each)
Input level: 327 mVrms
Input impedance: more than 47 kilohms

LINE OUT
VIDEO OUT, phono jack (1)
Output signal: 1 Vp-p, 75 ohms, unbalanced, sync negative

AUDIO OUT, phono jacks (2)
Standard output: 327 mVrms
Load impedance: 47 kilohms
Output impedance: less than 10 kilohms

DIGITAL OUT

OPTICAL, Optical output jack
-18 dBm (wave length: 660 nm)
COAXIAL, phono jack
Output signal: 0.5 Vp-p, 75 ohms

COMPONENT VIDEO OUT (Y, Pb, Pr)
Phono jack
Y: 1.0 Vp-p/Pb, Pr: 0.7 Vp-p, 75 ohms

S-VIDEO OUT
4-pin, mini-DIN jack
Y: 1.0 Vp-p, unbalanced, sync negative
C: 0.286 Vp-p, load impedance 75 ohms

Timer section

Clock
Quartz locked

Timer indication
12-hour cycle

Timer setting
8 programs (max.)

General

Power requirements
120 V AC, 60 Hz

Power consumption
25 W

Power back-up
Back-up duration: 0 min

Operating temperature
0°C to 45°C (32°F to 113°F)

Storage temperature
-20°C to 60°C (-4°F to 140°F)

Operating humidity
25% to 80%

Dimensions including projecting parts and controls (w/h/d)
Approx. 430 × 85 × 287 mm
(Approx. 17 × 3.4 × 11.5 inches)

Mass
Approx. 3.6 kg (Approx. 7.9 lbs)

Supplied accessories

Remote commander (1)
Size AA (R6) batteries (2)
75-ohm coaxial cable with F-type connectors (1)
Audio/video cord (pinplug × 3 ↔ pinplug × 3) (1)

Design and specifications are subject to change without notice.

ENERGY STAR® is a U.S. registered mark. As an ENERGY STAR® Partner, Sony Corporation has determined that this product meets the ENERGY STAR® guidelines for energy efficiency.



DVD PLAYER/ VIDEO CASSETTE RECORDER

SONY®

SAFETY CHECK-OUT

After correcting the original service problem, perform the following safety checks before releasing the set to the customer:

1. Check the area of your repair for unsoldered or poorly-soldered connections. Check the entire board surface for solder splashes and bridges.
2. Check the interboard wiring to ensure that no wires are “pinched” or contact high-wattage resistors.
3. Look for unauthorized replacement parts, particularly transistors, that were installed during a previous repair. Point them out to the customer and recommend their replacement.
4. Look for parts which, though functioning, show obvious signs of deterioration. Point them out to the customer and recommend their replacement.
5. Check the line cord for cracks and abrasion. Recommend the replacement of any such line cord to the customer.
6. Check the B+ voltage to see it is at the values specified.
7. Check the antenna terminals, metal trim, “metallized” knobs, screws, and all other exposed metal parts for AC leakage. Check leakage as described below.

LEAKAGE TEST

The AC leakage from any exposed metal part to earth ground and from all exposed metal parts to any exposed metal part having a return to chassis, must not exceed 0.5 mA (500 microamperes). Leakage current can be measured by any one of three methods.

1. A commercial leakage tester, such as the Simpson 229 or RCA WT-540A. Follow the manufacturers' instructions to use these instruments.
2. A battery-operated AC milliammeter. The Data Precision 245 digital multimeter is suitable for this job.
3. Measuring the voltage drop across a resistor by means of a VOM or battery-operated AC voltmeter. The “limit” indication is 0.75V, so analog meters must have an accurate low-voltage scale. The Simpson 250 and Sanwa SH-63Trd are examples of a passive VOM that is suitable. Nearly all battery operated digital multimeters that have a 2V AC range are suitable. (See Fig. A)

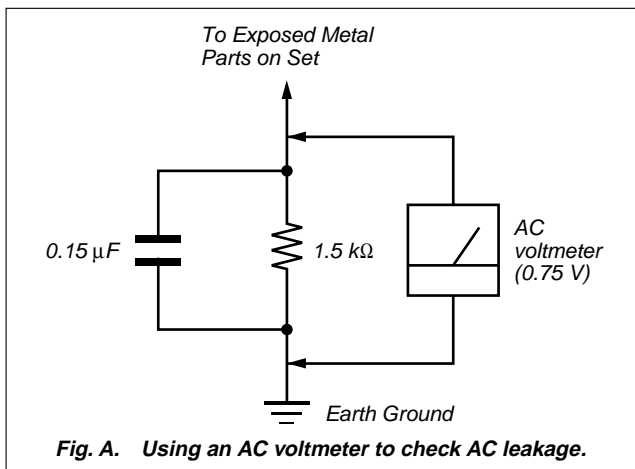


Fig. A. Using an AC voltmeter to check AC leakage.

WARNING!!

WHEN SERVICING, DO NOT APPROACH THE LASER EXIT WITH THE EYE TOO CLOSELY. IN CASE IT IS NECESSARY TO CONFIRM LASER BEAM EMISSION, BE SURE TO OBSERVE FROM A DISTANCE OF MORE THAN 25 cm FROM THE SURFACE OF THE OBJECTIVE LENS ON THE OPTICAL PICK-UP BLOCK.

SAFETY-RELATED COMPONENT WARNING!!

COMPONENTS IDENTIFIED BY MARK \triangle OR DOTTED LINE WITH MARK \triangle ON THE SCHEMATIC DIAGRAMS AND IN THE PARTS LIST ARE CRITICAL TO SAFE OPERATION. REPLACE THESE COMPONENTS WITH SONY PARTS WHOSE PART NUMBERS APPEAR AS SHOWN IN THIS MANUAL OR IN SUPPLEMENTS PUBLISHED BY SONY.

CAUTION:

The use of optical instrument with this product will increase eye hazard.

CAUTION

Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

TABLE OF CONTENTS

Precautions

1	Safety Precautions	4
2	Servicing Precautions	6
3	ESD Precautions	7
4	Handling the Optical Pick-up	8
5	Pick-up Disassembly and Reassembly	9

1. General

Getting Started	1-1
Basic Operations	1-7
Advanced Hookups	1-14
DVD Settings and Adjustments	1-15
DVD Additional Operations	1-17
VCR Additional Operations	1-23
Additional Information	1-25

2. Disassembly and Reassembly

2-1	Cabinet and PCB	
2-1-1	Cabinet Top Removal	2-1
2-1-2	Bottom Cover Removal	2-1
2-1-3	Ass'y Front Panel Removal	2-1
2-1-4	Function PCB Removal	2-1
2-1-5	Chassis Removal	2-2
2-1-6	VCR Main PCB Removal	2-2
2-2	Circuit Board Locations	2-3
2-3	VCR Deck Parts Locations	
2-3-1	Top View	2-4
2-3-2	Bottom View	2-6
2-4	VCR DECK	
2-4-1	Holder FL Cassette Ass'y Removal	2-7
2-4-2	Lever FL Arm Ass'y Removal	2-7
2-4-3	Lever FL Door Removal	2-8
2-4-4	Slider FL Drive, Gear FL Cam Removal	2-8
2-4-5	Gear Worm Wheel Removal	2-9
2-4-6	Cable Flat Removal	2-9
2-4-7	Motor Loading Ass'y Removal	2-10
2-4-8	Bracket Gear, Gear Joint 2, 1 Removal	2-10
2-4-9	Gear Loading Drive, Slider Cam, Lever Load S, T Ass'y Removal	2-11
2-4-10	Gear Loading Drive, Slider Cam, Lever Load S, T Ass'y Assembly	2-11
2-4-11	Lever Pinch Drive, Lever Tension Drive Removal	2-12
2-4-12	Lever Tension Ass'y, Band Brake Ass'y Removal	2-12
2-4-13	Lever Brake S, T Ass'y Removal	2-13
2-4-14	Gear Idle Ass'y Removal	2-13
2-4-15	Disk S, T Reel Removal	2-14
2-4-16	Holder Clutch Ass'y Removal	2-14
2-4-17	Lever Up Down Ass'y, Gear Center Ass'y Removal	2-15
2-4-18	Guide Cassette Door Removal	2-15
2-4-19	Lever Unit Pinch Ass'y, Plate Joint, Spring Pinch Drive Removal	2-16
2-4-20	Lever #9 Guide Ass'y Removal	2-16
2-4-21	FE Head Removal	2-17
2-4-22	ACE Head Removal	2-17
2-4-23	Slider S, T Ass'y Removal	2-18
2-4-24	Plate Ground Deck, Cylinder Ass'y Removal	2-18
2-4-25	Hook Capstan, Belt Pulley Removal	2-19
2-4-26	Motor Capstan Ass'y Removal	2-19
2-4-27	Post #8 Guide Ass'y Removal	2-20
2-4-28	Level Head Cleaner Ass'y Removal	2-20
2-4-29	How to Eject the Cassette Tape	2-20
2-5	The Table Of Cleaning, Lubrication and Replacement Time About Principal Parts	2-21

2-6	DVD Deck	
2-6-1	Holder Chuck Removal	2-22
2-6-2	Tray Disc Removal	2-23
2-6-3	Ass'y P/U Deck Removal	2-24
2-6-4	Ass'y Housing Removal	2-25
2-6-5	Ass'y Bracket Deck Removal	2-26

3. Block Diagram

4. PCB Diagrams

4-1	VCR Main/Function-Timer	4-3
4-2	DVD Main	4-7
4-3	Dial-Timer (SLV-D550P Only)	4-9

5. Schematic Diagrams

◆ Block Identification of Main PCB	5-3	
5-1	S.M.P.S.	5-5
5-2	Power Drive	5-7
5-3	Logic/Function-Timer	5-9
5-4	A/V	5-11
5-5	Hi-Fi/MTS	5-13
5-6	Input-Output	5-15
5-7	DVD	5-17

6. Alignment and Adjustments

6-1	VCR Adjustment	6-1
6-1-1	Reference	6-1
6-1-2	Head Switching Point Adjustment	6-3
6-2	VCR Mechanical Adjustment	6-4
6-2-1	Tape Transport System and Adjustment Locations	6-4
6-2-2	Tape Transport System Adjustment	6-5
6-2-3	Reel Torque	6-10

7. Troubleshooting

8. Repair Parts List

8-1	Exploded Views	8-2
8-1-1	Cabinet Assembly	8-2
8-1-2	VCR Mechanical Parts (Top Side)	8-3
8-1-3	VCR Mechanical Parts (Bottom Side)	8-4
8-1-4	DVD Mechanical Parts	8-5
8-2	Electrical Parts List	8-6

PRECAUTIONS

1 SAFETY PRECAUTIONS

1) Before returning an instrument to the customer, always make a safety check of the entire instrument, including, but not limited to, the following items:

(1) Be sure that no built-in protective devices are defective or have been defeated during servicing.

(1) Protective shields are provided to protect both the technician and the customer. Correctly replace all missing protective shields, including any removed for servicing convenience.

(2) When reinstalling the chassis and/or other assembly in the cabinet, be sure to put back in place all protective devices, including, but not limited to, nonmetallic control knobs, insulating fish papers, adjustment and compartment covers/shields, and isolation resistor/capacitor networks. Do not operate this instrument or permit it to be operated without all protective devices correctly installed and functioning.

(2) Be sure that there are no cabinet openings through which adults or children might be able to insert their fingers and contact a hazardous voltage. Such openings include, but are not limited to, excessively wide cabinet ventilation slots, and an improperly fitted and/or incorrectly secured cabinet back cover.

(3) Leakage Current Hot Check-With the instrument completely reassembled, plug the AC line cord directly into a 120V AC outlet. (Do not use an isolation transformer during this test.) Use a leakage current tester or a metering system that complies with American National Standards Institute (ANSI) C101.1 Leakage Current for Appliances and Underwriters Laboratories (UL) 1270 (40.7). With the instrument's AC switch first in the ON position and then in the OFF position, measure from a known earth ground (metal water pipe, conduit, etc.) to all exposed metal parts of the instrument (antennas, handle brackets, metal cabinets, screwheads, metallic overlays, control shafts, etc.), especially any exposed metal parts that offer an electrical return path to the chassis.

Any current measured must not exceed 0.5mA. Reverse the instrument power cord plug in the outlet and repeat the test. See Fig. 1.

Any measurements not within the limits specified herein indicate a potential shock hazard that must be eliminated before returning the instrument to the customer.

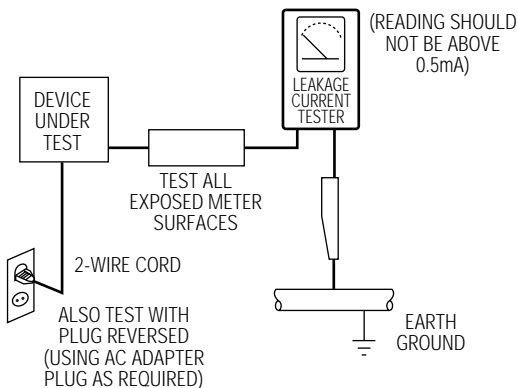


Fig. 1 AC Leakage Test

(4) Insulation Resistance Test Cold Check-(1) Unplug the power supply cord and connect a jumper wire between the two prongs of the plug. (2) Turn on the power switch of the instrument. (3) Measure the resistance with an ohmmeter between the jumpered AC plug and all exposed metallic cabinet parts on the instrument, such as screwheads, antenna, control shafts, handle brackets, etc. When an exposed metallic part has a return path to the chassis, the reading should be between 1 and 5.2 megohm. When there is no return path to the chassis, the reading must be infinite. If the reading is not within the limits specified, there is the possibility of a shock hazard, and the instrument must be repaired and rechecked before it is returned to the customer. See Fig. 2.

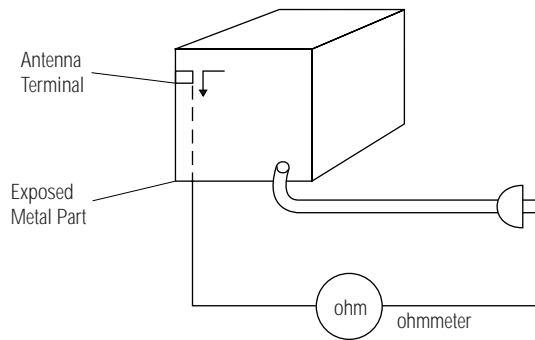


Fig. 2 Insulation Resistance Test

2) Read and comply with all caution and safety related notes on or inside the cabinet, or on the chassis.

3) Design Alteration Warning-Do not alter or add to the mechanical or electrical design of this instrument. Design alterations and additions, including but not limited to, circuit modifications and the addition of items such as auxiliary audio output connections, might alter the safety characteristics of this instrument and create a hazard to the user. Any design alterations or additions will make you, the servicer, responsible for personal injury or property damage resulting therefrom.

4) Observe original lead dress. Take extra care to assure correct lead dress in the following areas:

(1) near sharp edges, (2) near thermally hot parts (be sure that leads and components do not touch thermally hot parts), (3) the AC supply, (4) high voltage, and (5) antenna wiring. Always inspect in all areas for pinched, out-of-place, or frayed wiring. Do not change spacing between a component and the printed-circuit board. Check the AC power cord for damage.

5) Components, parts, and/or wiring that appear to have overheated or that are otherwise damaged should be replaced with components, parts and/or wiring that meet original specifications.

Additionally, determine the cause of overheating and/or damage and, if necessary, take corrective action to remove any potential safety hazard.

-
- 6) Product Safety Notice-Some electrical and mechanical parts have special safety-related characteristics which are often not evident from visual inspection, nor can the protection they give necessarily be obtained by replacing them with components rated for higher voltage, wattage, etc. Parts that have special safety characteristics are identified by shading, an (⚠) or a (⚠) on schematics and parts lists. Use of a substitute replacement that does not have the same safety characteristics as the recommended replacement part might create shock, fire and/or other hazards. Product safety is under review continuously and new instructions are issued whenever appropriate.

2 SERVICING PRECAUTIONS

CAUTION: Before servicing units covered by this service manual and its supplements, read and follow the Safety Precautions section of this manual.

Note: If unforeseen circumstance create conflict between the following servicing precautions and any of the safety precautions, always follow the safety precautions. Remember: Safety First.

2-1 General Servicing Precautions

- (1) a. Always unplug the instrument's AC power cord from the AC power source before (1) re-moving or reinstalling any component, circuit board, module or any other instrument assembly, (2) disconnecting any instrument electrical plug or other electrical connection, (3) connecting a test substitute in parallel with an electrolytic capacitor in the instrument.
- b. Do not defeat any plug/socket B+ voltage interlocks with which instruments covered by this service manual might be equipped.
- c. Do not apply AC power to this instrument and/or any of its electrical assemblies unless all solid-state device heat sinks are correctly installed.
- d. Always connect a test instrument's ground lead to the instrument chassis ground before connecting the test instrument positive lead. Always remove the test instrument ground lead last.

Note: Refer to the Safety Precautions section ground lead last.

- (2) The service precautions are indicated or printed on the cabinet, chassis or components. When servicing, follow the printed or indicated service precautions and service materials.
- (3) The components used in the unit have a specified flame resistance and dielectric strength.
When replacing components, use components which have the same ratings. Components identified by shading, by (\triangle) or by (∇) in the circuit diagram are important for safety or for the characteristics of the unit. Always replace them with the exact replacement components.
- (4) An insulation tube or tape is sometimes used and some components are raised above the printed wiring board for safety. The internal wiring is sometimes clamped to prevent contact with heating components. Install such elements as they were.
- (5) After servicing, always check that the removed screws, components, and wiring have been installed correctly and that the portion around the serviced part has not been damaged and so on. Further, check the insulation between the blades of the attachment plug and accessible conductive parts.

2-2 Insulation Checking Procedure

Disconnect the attachment plug from the AC outlet and turn the power ON. Connect the insulation resistance meter (500V) to the blades of the attachment plug. The insulation resistance between each blade of the attachment plug and accessible conductive parts (see note) should be more than 1 Megohm.

Note: Accessible conductive parts include metal panels, input terminals, earphone jacks, etc.

3 ESD PRECAUTIONS

Electrostatically Sensitive Devices (ESD)

Some semiconductor (solid state) devices can be damaged easily by static electricity.

Such components commonly are called Electrostatically Sensitive Devices (ESD). Examples of typical ESD devices are integrated circuits and some field-effect transistors and semiconductor chip components. The following techniques should be used to help reduce the incidence of component damage caused by static electricity.

- (1) Immediately before handling any semiconductor component or semiconductor-equipped assembly, drain off any electrostatic charge on your body by touching a known earth ground. Alternatively, obtain and wear a commercially available discharging wrist strap device, which should be removed for potential shock reasons prior to applying power to the unit under test.
- (2) After removing an electrical assembly equipped with ESD devices, place the assembly on a conductive surface such as aluminum foil, to prevent electrostatic charge buildup or exposure of the assembly.
- (3) Use only a grounded-tip soldering iron to solder or unsolder ESD devices.
- (4) Use only an anti-static solder removal devices. Some solder removal devices not classified as “anti-static” can generate electrical charges sufficient to damage ESD devices.
- (5) Do not use freon-propelled chemicals. These can generate electrical charges sufficient to damage ESD devices.
- (6) Do not remove a replacement ESD device from its protective package until immediately before your are ready to install it. (Most replacement ESD devices are packaged with leads electrically shorted together by conductive foam, aluminum foil or comparable conductive materials).
- (7) Immediately before removing the protective materials from the leads of a replacement ESD device, touch the protective material to the chassis or circuit assembly into which the device will be installed.

CAUTION: Be sure no power is applied to the chassis or circuit, and observe all other safety precautions.

- (8) Minimize bodily motions when handling unpackaged replacement ESD devices. (Otherwise harmless motion such as the brushing together of your clothes fabric or the lifting of your foot from a carpeted floor can generate static electricity sufficient to damage an ESD device).

4 HANDLING THE OPTICAL PICK-UP

The laser diode in the optical pick up may suffer electrostatic breakdown because of potential static electricity from clothing and your body.

The following method is recommended.

- (1) Place a conductive sheet on the work bench (The black sheet used for wrapping repair parts.)
 - (2) Place the set on the conductive sheet so that the chassis is grounded to the sheet.
 - (3) Place your hands on the conductive sheet (This gives them the same ground as the sheet.)
 - (4) Remove the optical pick up block
 - (5) Perform work on top of the conductive sheet. Be careful not to let your clothes or any other static sources to touch the unit.
- ◆ Be sure to put on a wrist strap grounded to the sheet.
 - ◆ Be sure to lay a conductive sheet made of copper etc. Which is grounded to the table.

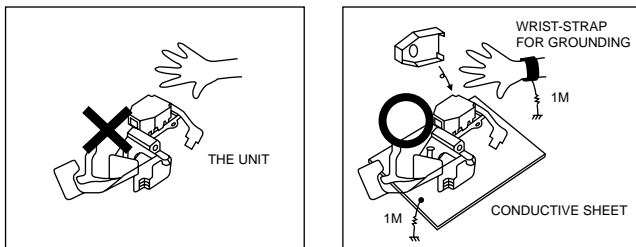


Fig.3

- (6) Short the short terminal on the PCB, which is inside the Pick-Up ASS'Y, before replacing the Pick-Up. (The short terminal is shorted when the Pick-Up Ass'y is being lifted or moved.)
- (7) After replacing the Pick-up, open the short terminal on the PCB.

5 PICK-UP DISASSEMBLY AND REASSEMBLY

5-1 Disassembly

- 1) Remove the power cord.
- 2) Disassemble the Deck-Assy.
- 3) Make solder land 2 points short on Pick-up.
(See Fig. 4)
- 4) Disassembly the Pick-up.

5-2 Assembly

- 1) Replace the Pick-up.
- 2) Remove the soldering 2 points on Pick-up.
- 3) Reassemble the Deck-Assy.

Note: If the assembly and disassembly are not done in correct sequence, the Pick-up may be damaged.

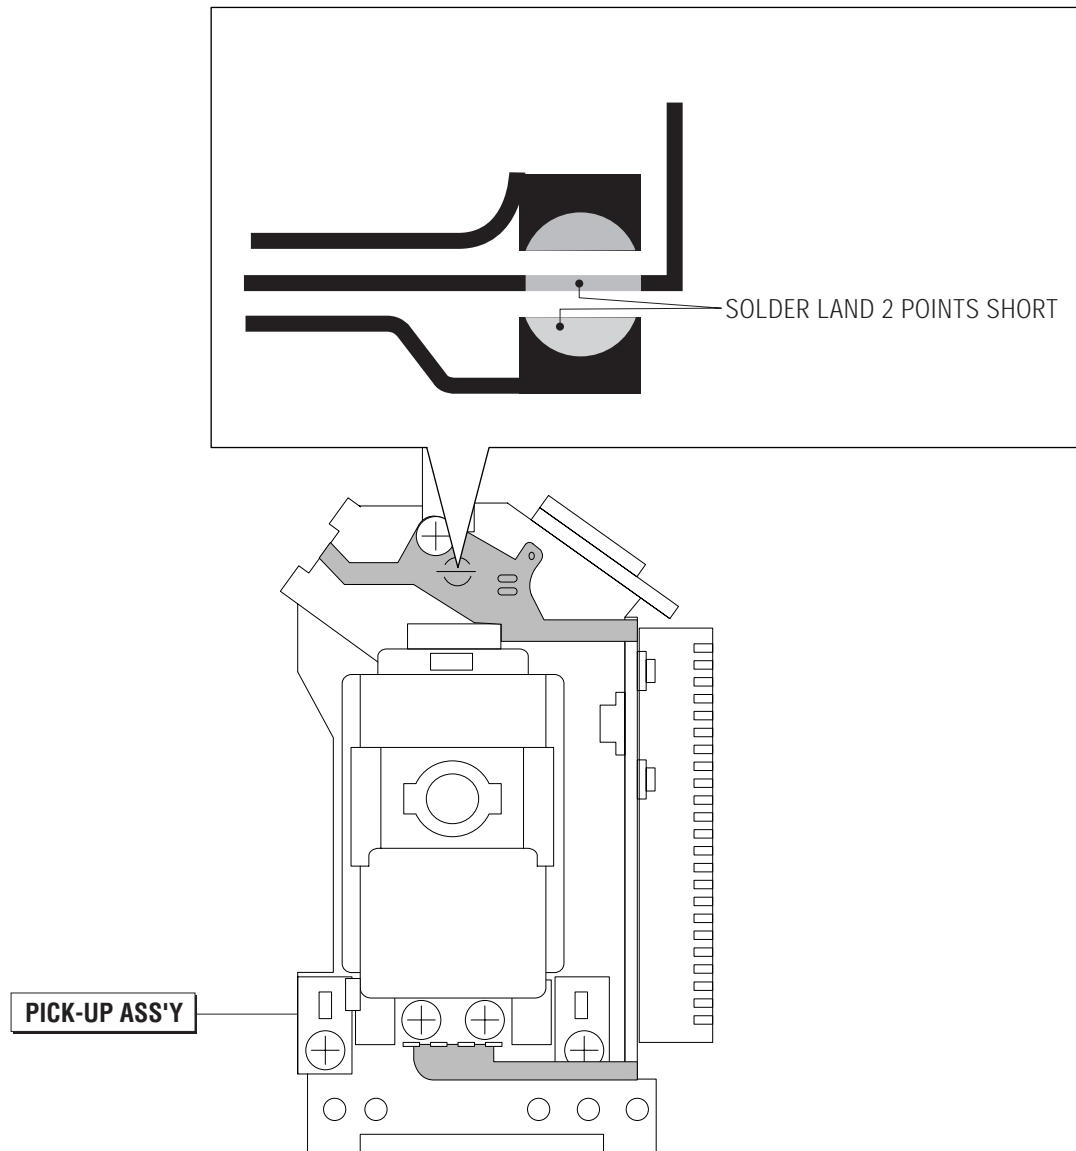


Fig. 4

MEMO

1. GENERAL


This section is extracted from instruction manual. (3-091-712-11)

Getting Started

Step 1 : Unpacking

Check that you have received the following items with the DVD-VCR:

- Remote commander
- 75-ohm coaxial cable with F-type connectors
- Size AA (R6) batteries
- Audio/video cord (pinplug x3 ↔ pinplug x3)

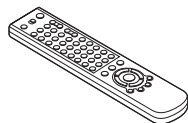

Getting Started


Note

- The supplied remote commander is for the exclusive use of this DVD-VCR.

Step 2 : Setting up the remote commander

Inserting the batteries

Insert two size AA (R6) batteries by matching the + and - on the batteries to the diagram inside the battery compartment.


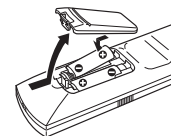


Insert the negative (-) end first, then push in and down until the positive (+) end clicks into position.

Using the remote commander

You can use this remote commander to operate this DVD-VCR and a Sony TV. Buttons on the remote commander marked with an orange dot (•) can be used to operate your Sony TV.

If the TV does not have the symbol near the remote sensor, this remote commander will not operate the TV.

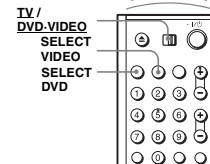

To operate	Set TV / DVD-VIDEO to
the DVD player	DVD-VIDEO, then press SELECT DVD and point at the remote sensor at the DVD-VCR
the VCR	DVD-VIDEO, then press SELECT VIDEO and point at the remote sensor at the DVD-VCR
your TV	TV and point at the remote sensor at your TV

Notes

- With normal use, the batteries should last about three to six months.
- If you do not use the remote commander for an extended period of time, remove the batteries to avoid possible damage from battery leakage.
- Do not use a new battery with an old one.
- Do not use different types of batteries.
- Do not leave the remote commander in an extremely hot or humid place.
- Do not drop any foreign object into the remote casing, particularly when replacing the batteries.
- Do not expose the remote sensor to direct light from the sun or lighting apparatus. Doing so may cause a malfunction.

Controlling other TVs with the remote commander

The remote commander is preprogrammed to control non-Sony TVs. If your TV is listed in the following table, set the appropriate manufacturer's code number.

- 1 Set TV / DVD-VIDEO at the top of the remote commander to TV.
- 2 Hold down I/⏪, and enter your TV's code number using the number buttons. Then release I/⏪.

Now you can use the I/⏪, VOL +/-, CH +/-, MUTING*, TV/VIDEO and ENTER* buttons to control your TV. You can also use the buttons marked with a dot (•) to control a Sony TV. To control the DVD-VCR, reset TV / DVD-VIDEO to DVD-VIDEO.

* for Sony TV only

Code numbers of controllable TVs

If more than one code number is listed, try entering them one at a time until you find the one that works with your TV.

TV brand	Code number	TV brand	Code number
Sony	01	Panasonic	06, 19
Akai	04	Philco	03, 04
AOC	04	Philips	08
Centurion	12	Pioneer	16
Coronado	03	Portland	03
Curtis-Mathes	12	Quasar	06, 18
Daewoo	22	Radio Shack	05, 14
Daytron	12	RCA	04, 10
Emerson	03, 04, 14	Sampo	12
Fisher	11	Sanyo	11
General Electric	06, 10	Scott	12
LG/Gold Star	03, 04, 17	Sears	07, 10, 11
Hitachi	02, 03	Sharp	03, 05, 18
J.C.Penney	04, 12	Sylvania	08, 12
JVC	09	Teknika	03, 08, 14
KMC	03	Toshiba	07
Magnavox	03, 08, 12	Wards	03, 04, 12
Marantz	04, 13	Yorx	12
MGA/Mitsubishi	04, 12, 13, 17	Zenith	15
NEC	04, 12		

continued

Notes

- If you enter a new code number, the code number previously entered will be erased.
- If the TV uses a different remote control system from the one programmed to work with the DVD-VCR, you cannot control your TV with the remote commander.
- When you replace the batteries of the remote commander, the code number may change. Set the appropriate code number every time you replace the batteries.

Step 3 : Basic hookups

Before you get started

- Be sure to disconnect the AC power cord of each component before connecting.
- Turn off the power to all equipment.
- Do not connect the AC power cords until all of the connections are completed. If you connect the AC power cord before the connections are completed, you may not be able to use the Plug and Play function.
- Be sure you make connections firmly. Loose connections may cause picture distortion.
- If your TV does not match any of the examples provided, see your nearest Sony dealer or qualified technician.

Selecting the best hookup option

There are many ways in which your DVD-VCR can be hooked up. To hook up your DVD-VCR so that it works best for you, first scan through the table below. Then use the accompanying diagrams and procedures on the following pages to set up your DVD-VCR.

If your TV has audio/video inputs, refer to page 14 for audio/video (A/V) hookup. Then follow one of the hookups below. If your TV does not have A/V inputs, go directly to one of the hookups below.

If you have	Use	Refer to
Antenna only, no cable TV	Hookup 1 (Plug and Play)	Pages 15 and 16
No cable box or cable box with only a few scrambled channels	Hookup 2 (Plug and Play)	Pages 17 and 18
Cable box with many scrambled channels	Hookup 3	Page 19

After you have completed the connections, follow the instructions for setup.

After you have completed the setup, you are ready to use your DVD-VCR. Procedures differ depending on the hookup you used.

Caution

Connections between the DVD-VCR's VHF/UHF connector and the antenna terminals of the TV receiver should be made only as shown in the following instructions. Failure to do so may result in operation that violates the regulations of the Federal Communications Commission regarding the use and operation of RF devices. Never connect the output of the DVD-VCR to an antenna or make simultaneous (parallel) antenna and DVD-VCR connections at the antenna terminals of your receiver.

Note to CATV system installer (in USA)

This reminder is provided to call the CATV system installer's attention to Article 820-40 of the NEC that provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building, as close to the point of cable entry as practical.

continued

Basic hookups | 13


Getting Started

Audio/video (A/V) hookup


If your TV has audio/video (A/V) input jacks, you will get better picture and sound if you hook up your DVD-VCR using these connections. If your TV does not have A/V inputs, see the following pages for antenna or cable hookups. Note that "Advanced Hookups" (page 61) explains additional hookup methods that will optimize the picture and sound for a true "hometheater" experience.

If you are not planning to use your DVD-VCR to record programs, you only need to make the connections shown on this page. If you want to record regular or cable TV programs, complete these connections first, and then go to the following pages for antenna or cable hookups.

A Use this hookup if your TV has stereo jacks

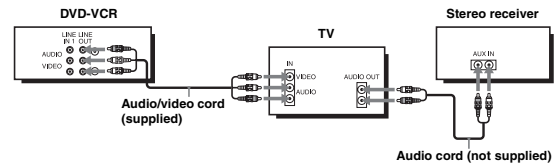

B Use this hookup if your TV does not have stereo jacks

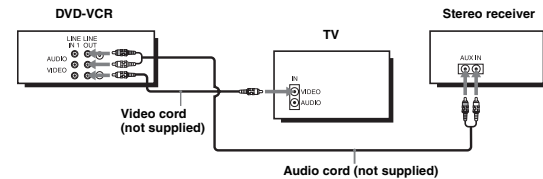

Notes

- To play a tape/disc in stereo, you must use the A/V connection.
- If you do not have a stereo receiver, connect the white LINE OUT/AUDIO L jack to the AUDIO IN jack on your TV.

14 | Basic hookups


Hookup 1 (Plug and Play)

Antenna hookup


Make the following connections if you are using an antenna (if you do not have cable TV).

A Use this hookup if you are using:

- VHF/UHF antenna (you get channels 2-13 and channels 14 and higher)
- UHF-only antenna (you get channels 14 and higher)
- Separate VHF and UHF antennas

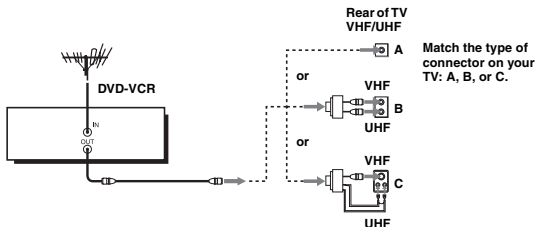

B Use this hookup if you are using a VHF-only antenna (you get channels 2-13 only)

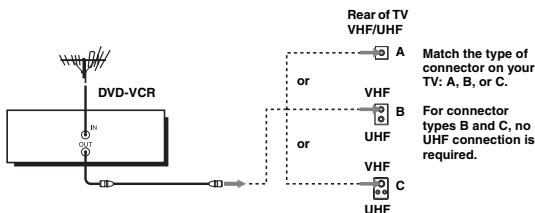

If you cannot connect your antenna cable to the DVD-VCR directly

If your antenna cable is a flat cable (300-ohm twin lead cable), attach an external antenna connector (not supplied) so you can connect the cable to the IN connector. If you have separate cables for VHF and UHF antennas, you should use a U/V band mixer (not supplied) (page 111).

continued


Basic hookups | 15

Getting Started

Hookup 1 : DVD-VCR setup

Plug the DVD-VCR into an AC outlet.


The DVD-VCR automatically presets the DVD-VCR's clock and TV channels when the DVD-VCR is plugged into the AC outlet.



The DVD-VCR starts presetting the clock and channels.



When Auto preset is completed, the current time appears in the display window.



You have now completed DVD-VCR setup.

To change the on-screen display language to French or Spanish, see "Step 4 : Selecting a language" on page 20.

The clock is set using a time signal provided by some TV channels. If the clock is incorrect, or "--:--" appears in the display window, see "Using Manual Clock Set" on page 24.

To add or disable channels manually, see "Presetting/disabling channels manually" on page 28.

Notes

- If you connect the AC power cord before the antenna connections are completed, the channels may be incorrectly set. If this happens, see "Step 6 : Presetting channels" on page 26.
- Do not press any buttons on the DVD-VCR or remote commander during Auto preset.
- Auto preset starts automatically only when you plug in the AC power cord for the first time after you purchase the DVD-VCR.
- Auto preset can be performed by pressing **■** on the unit continuously for 5 seconds or more with the DVD-VCR power turned off.

16 | Basic hookups

Hookup 2 (Plug and Play)

You have no cable box, or a cable box with only a few scrambled channels

Recommended use


Use this hookup if you do not have a cable box. Also use this hookup if your cable system scrambles only a few channels.

What you can do with this hookup

- Record any unscrambled channel by selecting the channel on the VCR

What you cannot do

- Record scrambled channels that require a cable box

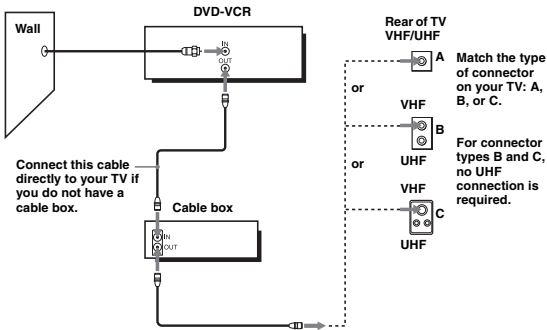

Getting Started


continued

Basic hookups | 17


Hookup 2 : DVD-VCR setup

Plug the DVD-VCR into an AC outlet.

The DVD-VCR automatically presets the DVD-VCR's clock and TV channels when the DVD-VCR is plugged into the AC outlet.

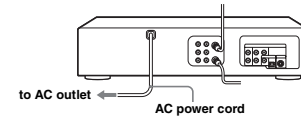

The DVD-VCR starts presetting the clock and channels.

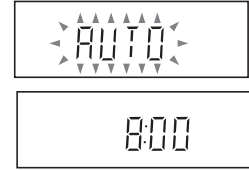

When Auto preset is completed, the current time appears in the display window.

You have now completed DVD-VCR setup.

To change the on-screen display language to French or Spanish, see "Step 4 : Selecting a language" on page 20.

The clock is set using a time signal provided by some TV channels. If the clock is incorrect, or "--:--" appears in the display window, see "Using Manual Clock Set" on page 24.

To add or disable channels manually, see "Presetting/disabling channels manually" on page 28.

Notes

- If you connect the AC power cord before the antenna connections are completed, the channels may be incorrectly set. If this happens, see "Step 6 : Presetting channels" on page 26.
- Do not press any buttons on the DVD-VCR or remote commander during Auto preset.
- Auto preset starts automatically only when you plug in the AC power cord for the first time after you purchase the DVD-VCR.
- Auto preset can be performed by pressing **■** on the unit continuously for 5 seconds or more with the DVD-VCR power turned off.

18 | Basic hookups

Hookup 3

Connecting a cable box with many scrambled channels

Recommended use


Use this hookup if your cable system scrambles all or most channels.

What you can do with this hookup

- Record any channel by selecting the channel on the cable box

What you cannot do


- Record with the cable box turned off
- Record one channel while watching another channel

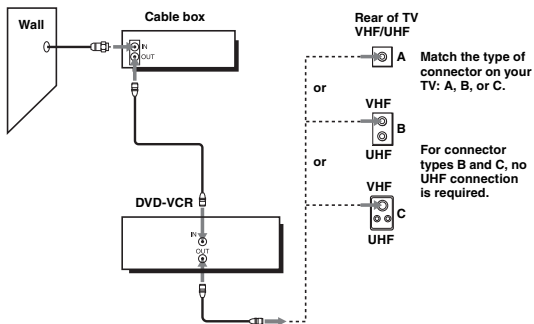

Getting Started

After you have completed hookup...

After you have completed hookup, plug the DVD-VCR into an AC outlet and see "Step 4 : Selecting a language" on page 20.




Basic hookups | 19

Step 4 : Selecting a language

You can change the on-screen display language.

Before you start...

- Turn on the DVD-VCR and your TV.
- To control the DVD-VCR, set **TV / DVD-VIDEO** to **DVD-VIDEO** on the remote (page 10).
- Set the "RF Output Channel" to "3CH" or "4CH" in "OPTION SETUP" menu (page 108). If your TV is connected to the DVD-VCR using A/V connections, set the TV to video input.
- If the DVD player is in play mode, you cannot display the setup menu. Stop the DVD playback.

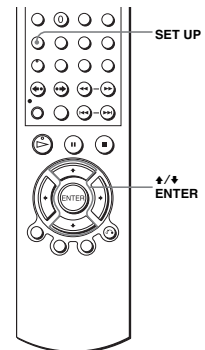

- 1** **SET UP** Press **SET UP**, then press **▲/▼** to select **OPTION** and press **ENTER**.
- 2** Press **▲/▼** to select "Language", then press **ENTER**. The "LANGUAGE/IDIOMA/LANGUE" menu appears.
- 3** Press **▲/▼** to select the desired language, English, Spanish or French, then press **ENTER**.

20 | Selecting a language

4 SET UP Press SET UP to exit the menu.



Getting Started

Step 5 : Setting the clock


Using the Auto Clock Set feature

Some TV and cable channels transmit time signals with their broadcasts. Your DVD-VCR can pick up this time signal to automatically set the clock.


The Auto Clock Set feature works only if a channel in your area is broadcasting a time signal. If broadcasters in your area are not yet sending time signals, set the time manually (page 24).

Before you start...


- Turn on the DVD-VCR and your TV. When using a cable box, turn it on.
- To control the DVD-VCR, set **TV / DVD-VIDEO** to **DVD-VIDEO** on the remote (page 10).
- Set the "RF Output Channel" to "3CH" or "4CH" in "OPTION SETUP" menu (page 108). If your TV is connected to the DVD-VCR using A/V connections, set the TV to video input.
- If the DVD player is in play mode, you cannot display the setup menu. Stop the DVD playback.

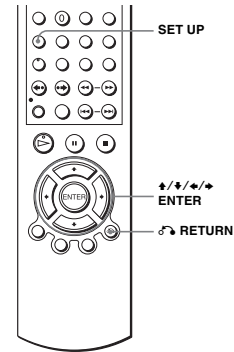

1 Press SET UP, then press **▲/◆** to select (OPTION) and press ENTER.




2 Press **▲/◆** to select "Clock Set/Adjust", then press ENTER.



Selecting a language 21

22 Setting the clock




3 Press **▲/◆** to select "Auto", then press ENTER.



4 Press **▲/◆** to select the item you want, then press **◀/▶** to make the setting.



- For "Clock data CH" Leave the setting to "Auto" to have the DVD-VCR automatically search for a channel that carries a time signal. Press **◀/▶** to select a channel that carries a time signal. Use this option if you know of a channel that carries a time signal. Most PBS member stations broadcast a time signal. For the fastest response, select your local PBS station.
- For "Time zone" Select the time zone of your area, or select "Auto" to have the DVD-VCR automatically set your time zone. The options are:
Auto ↔ Atl. (Atlantic) ↔ East (Eastern) ↔ Cen. (Central) ↔ Mtn. (Mountain) ↔ Pac. (Pacific) ↔ Alas (Alaska) ↔ Haw. (Hawaii) ↔ Auto
- For "Daylight saving" Select "Yes" or "No" (standard time), or "Auto" to have the DVD-VCR automatically set the daylight saving time.



5 Press **↵** RETURN, then press SET UP to exit the menu.



RETURN

SET UP



6 To activate the Auto Clock Set function, turn off the DVD-VCR.

Getting Started


Notes

- The clock cannot be set automatically if you do not receive a channel that carries a time signal in your area. If so, set the clock manually (page 24).
- If there are only a few channels in your area that carry time signals, setting the clock automatically may take up to about 20 minutes. If nothing happens even after you wait about 20 minutes, set the clock manually (page 24).
- If you made Hookup 3, make sure you leave the cable box on.
- To record TV programs using the timer, you must set the clock accurately.
- The clock display appears when VIDEO mode is selected with no tape inserted or when the DVD-VCR is turned off.


Using Manual Clock Set

Before you start...


- Turn on the DVD-VCR and your TV.
- To control the DVD-VCR, set **TV / DVD-VIDEO** to **DVD-VIDEO** on the remote (page 10).
- Set the "RF Output Channel" to "3CH" or "4CH" in "OPTION SETUP" menu (page 108). If your TV is connected to the DVD-VCR using A/V connections, set the TV to video input.
- If the DVD player is in play mode, you cannot display the setup menu. Stop the DVD playback.

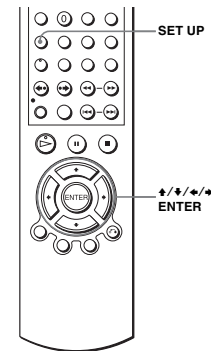

1 Press SET UP, then press **▲/◆** to select (OPTION) and press ENTER.



2 Press **▲/◆** to select "Clock Set/Adjust", then press ENTER.



continued

Setting the clock 23

24 Setting the clock

3 Press **▲/◆** to select "Manual", then press ENTER.

4 Press **▲/◆** to set the hour.

5 Press **▶** to select the minutes and set the minutes by pressing **▲/◆**.

6 Set the month, day, and year in sequence by pressing **▶** to select the item to be set, and press **▲/◆** to select the digits, then press **▶**. The day of the week is set automatically.

7 Press ENTER to confirm the setting.

8 SET UP Press SET UP to exit the menu.


Getting Started

Tip

- To change the digits while setting, press **▶** to return to the item to be changed, and select the digits by pressing **▲/◆**.

Notes

- To record TV programs using the timer, you must set the clock accurately.
- The clock display appears when VIDEO mode is selected with no tape inserted or when the DVD-VCR is turned off.

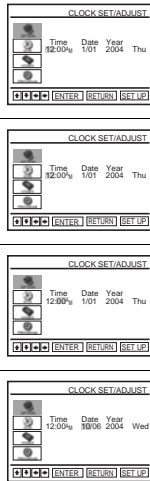

Setting the clock 25


Step 6 : Presetting channels

This DVD-VCR is capable of receiving VHF channels 2 to 13, UHF channels 14 to 69 and unscrambled CATV channels 1 to 125. First, we recommend that you preset the receivable channels in your area using automatic presetting methods. Then, if there are any unwanted channels, disable them manually. If you have already decided which channels you wish to preset, set them directly using manual presetting methods (page 28).

Presetting all receivable channels automatically

Before you start...

- Turn on the DVD-VCR and your TV. When using a cable box, turn it on.
- To control the DVD-VCR, set TV / DVD-VIDEO to DVD-VIDEO on the remote (page 10).
- Set the "RF Output Channel" to "3CH" or "4CH" in "OPTION SETUP" menu (page 108). If your TV is connected to the DVD-VCR using A/V connections, set the TV to video input.
- If the DVD player is in play mode, you cannot display the setup menu. Stop the DVD playback.

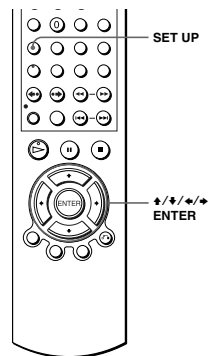

1 SET UP Press SET UP, then press **▲/◆** to select (OPTION) and press ENTER.

26 Presetting channels

2 Press **▲/◆** to select "Channel Setup", then press ENTER. The "CHANNEL SETUP" menu appears.


3 Press **▲/◆** to select "Ant/Cable."

4

- To preset cable TV channels: Press **▲/◆** to select "Cable TV."
- To preset VHF and UHF channels: Press **▲/◆** to select "Antenna."

5 Press **▲/◆** to select "Auto Channel Memory," then press ENTER. All receivable channels are preset in numerical sequence. When no more receivable channels can be found, presetting stops and the picture from the lowest numbered channel is displayed on the TV screen.

Getting Started

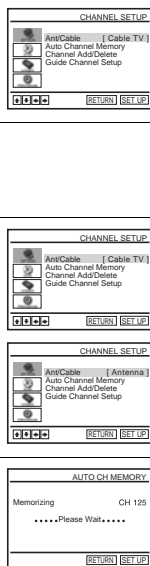


continued
Presetting channels 27

Presetting/disabling channels manually

Before you start...

- Turn on the DVD-VCR and your TV. When using a cable box, turn it on.
- To control the DVD-VCR, set TV / DVD-VIDEO to DVD-VIDEO on the remote (page 10).
- Set the "RF Output Channel" to "3CH" or "4CH" in "OPTION SETUP" menu (page 108). If your TV is connected to the DVD-VCR using A/V connections, set the TV to video input.
- If the DVD player is in play mode, you cannot display the setup menu. Stop the DVD playback.

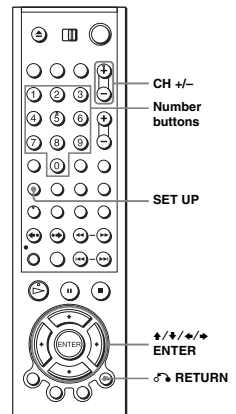

1 SET UP Press SET UP, then press **▲/◆** to select (OPTION) and press ENTER.

2 Press **▲/◆** to select "Channel Setup", then press ENTER. The "CHANNEL SETUP" menu appears.

3 Press **▲/◆** to select "Channel Add/Delete," then press ENTER.

28 Presetting channels

4 **+CH/ TRACKING** To preset/disable a channel:

- 1 Press CH +/- or number buttons to enter the channel number.
- 2 Press **+**/**+** to select "ADD" (in memory) or "DELETE" (deleted).
- 3 Press ENTER.

Channel to be preset

and press **+** to ADD
press **+** to DELETE

Getting Started

Channel to be disabled

and press **+** to ADD
press **+** to DELETE

5 Press **RETURN** to confirm the setting.

6 Press SET UP to exit the menu.

Note

- If you have not preset channels automatically, you cannot preset/disable channels manually.

Presetting channels | 29

Step 7 : Setting up the VCR Plus+® system (SLV-D550P only) VHS

How the VCR Plus+ system works

Whenever you want to record a TV program, all you need to do is look up the "PlusCode" number, a number assigned to each program published in the TV section of most newspapers, cable TV listings, and even TV GUIDE magazine. Then, just enter the PlusCode number of the program you want and the VCR is automatically programmed to record that show. It's that simple.

Example of "PlusCode"

Time	Program	PlusCode
5:30	MOVIE — Musical (2hrs.)	83041
	SPORT — Golf (1hr. 25min.)	42060
6:30	DRAMA — Comedy (2hrs.)	17390
	SCIENCE AND TECHNOLOGY (1hr. 15min.)	73457

How to set up your VCR

Setting up your VCR involves coordinating the TV channel number (the number you turn to on your TV or VCR to watch a program) with the guide channel (the number that is assigned to that channel in your program guide).


To find the guide channel numbers, look at the "Channel Line-up Chart" in the program guide for your area that features VCR PlusCode numbers. It usually looks like the example to the right.

To set the guide channels, use the Channel Line-up Chart to check that the guide channel numbers match the TV channel your VCR receives. For example, if HBO is listed in the Channel Line-up Chart as channel 33, and your VCR receives HBO on channel 5, you need to coordinate these numbers using the following procedure. If the guide and TV channel numbers are the same, you can skip this procedure.

Example of "Channel Line-up Chart"

CABLE CH	CABLE TV	VCR Plus+ GUIDE CH
16	AMC American Movie Classics	35
17	BRV Bravo (program grid only)	54
20	CNN Cable News Network	42
21	CSPN C-SPAN	28
22	DIS The Disney Channel	53
25	DISC The Discovery Channel	37
34	ESPN ESPN	34
35	FAM The Family Channel	47
5	HBO Home Box Office	33
27	LITF Lifetime	46
29	MAX Max	45
30	MTV MTV Television	48
31	MTV2 MTV2	38
38	SCS Sports Channel	59
39	SQA Sports Channel America	70
45	SHO Showtime	41
17	TBS TBS SuperStation	43
44	TMC The Movie Channel	58
49	TNN The Nashville Network	49
51	TNT Turner Network Television	52
	USA USA Network	44

30 | Setting up the VCR Plus+® system (SLV-D550P only)

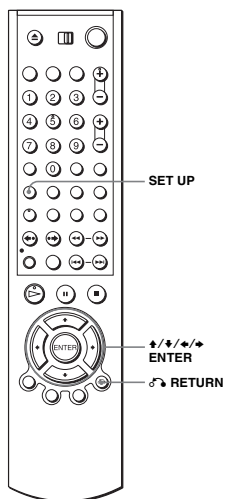

Getting Started

3 Press **+**/**+** to select "Guide Channel Setup," then press ENTER.

4 The upper row shows VCR Plus+ guide channels and the lower row shows TV channels or cable box out put channels. Press **+**/**+** to select the channel number that does not match the guide channel.

5

- If you made Hookup 1 (page 15) or 2 (page 17): Enter the actual number on your TV (and VCR), then press **+**/**+**.
- If you made Hookup 3 (page 19): Enter the cable box output channel (usually 2, 3, or 4), then press **+**/**+**.

6 Repeat steps 4 and 5 for each channel number that does not match.

7 Press **RETURN** to confirm the setting.

8 Press SET UP to exit the menu.

1 Press SET UP, then press **+**/**+** to select (OPTION) and press ENTER.

2 Press **+**/**+** to select "Channel Setup", then press ENTER. The "CHANNEL SETUP" menu appears.

continued

Setting up the VCR Plus+® system (SLV-D550P only) | 31


32 | Setting up the VCR Plus+® system (SLV-D550P only)

Playing discs DVD-V DVD-RW VCD CD DATA-CD

Depending on the disc, some operations may be different or restricted. Refer to the operating instructions supplied with your disc.

Before you start ...

- Turn on the DVD-VCR and your TV.
- Switch the input selector on your TV so that the signal from the player appears on the TV screen.
- Set TV / DVD-VIDEO to DVD-VIDEO, then press SELECT DVD to control the DVD player (page 10).

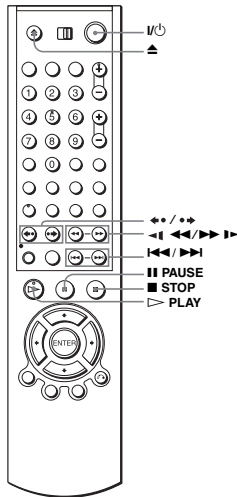

Basic Operations

- 1 Press to open the disc tray and place a disc on the disc tray.



continued

Playing discs 33

To Resume playback for the current disc (Resume Play)

The DVD player remembers the point where you stopped the disc even if the DVD player enters standby mode by pressing I/O.

- 1 While playing a disc, press STOP to stop playback.

- 2 Press PLAY.

The DVD player starts playback from the point where you stopped the disc in Step 1.

Tip

- To begin playback from the top of the disc, press STOP twice then press PLAY.

To locate a point quickly by playing a disc in fast forward or fast reverse in continuous play mode

Press or on the remote.

Each time you press the button, the playback speed changes as follows.

- DVD:
PLAY → FF1/FR1 → FF2/FR2 → FF3/FR3 → FF4/FR4 → FF5/FR5 → FF6/FR6
- CD, MP3 and VIDEO CD:
PLAY → FF1/FR1 → FF2/FR2 → FF3/FR3

When you find the point you want, press PLAY.

Note

- The fast reverse operation may not be possible for CD, MP3 and VIDEO CD depending on the recording method.

To locate a point quickly in continuous play mode (CD and MP3 only)

During playback, hold down or on the unit.

The playback speed changes as follows.

PLAY → FF1/FR1 → FF2/FR2 → FF3/FR3

Note

- The fast reverse operation may not be possible for CD, MP3 and VIDEO CD depending on the recording method.

To watch slow motion in continuous play mode (DVD and VIDEO CD only)

Press PAUSE, then press or . With each press, the playback speed changes cyclically as follows.

3 → 2 → 1

- You can not watch reverse slow motion with DVD-RW in VR mode. Reverse slow motion playback also may not be possible for some VIDEO CDs depending on the recording method.

To resume normal playback, press PLAY.

continued

Playing discs 35


2



Press PLAY.

The disc tray closes and the DVD player starts playback. The display window shows the playback time*. Depending on the disc, a menu may appear on the TV screen. For DVDs, see page 76. For VIDEO CDs, see page 97.

* "----" appears when no disc is loaded.



Additional tasks

To	Press
Stop play	STOP
Pause play*1	PAUSE
Resume play after pause	PLAY
Go to the next frame in pause mode	SKIP
Go to the next chapter, track, or scene in continuous play mode	NEXT on the remote or on the unit
Go back to the previous chapter, track, or scene in continuous play mode	PREV on the remote or on the unit
Replay the previous scene in continuous play mode*2	REPLAY
Briefly fast forward the current scene in continuous play mode*3	SKIP
Stop play and remove the disc	

*1 If you pause the DVD player for more than 5 minutes, the DVD player will automatically stop.

*2 For DVD VIDEOS and the DVD-RWs/DVD-Rs only

*3 For DVD VIDEOS and the DVD-RWs/DVD-Rs or DVD+RWs only

Tips

- The Instant Replay function is useful when you want to review a scene or dialog that you missed.
- The Instant Advance function is useful when you want to pass over a scene that you don't want to watch.

Notes

- You may not be able to use the Instant Replay or Instant Advance function with some scenes.
- Switching between original (ORG) and play list (PL) within a disc recorded in VR mode is possible only while the disc is stopped. Press TOP MENU to switch between ORG and PL.

Tip

- To make a video timer reservation during DVD playback, we recommend performing the operations under "Quick Timer Recording" (page 99).

Notes

- You can change the screen type using the "SCREEN SETUP" menu. (See "Screen Setup" on page 67)
- Do not perform VIDEO playback while playing back a disc.
- If you play a DVD or VIDEO CD that has scratches, the player may stop playback at the point of the scratch.
- Except for during normal play or FF1 play, no sound is output.
- Discs recorded in VR mode with Once Copy signal cannot be played because of copyright protection.

Notes on playing DTS* sound tracks on a CD

- When playing DTS-encoded CDs, excessive noise will be heard from the analog stereo jacks. To avoid possible damage to the audio system, the consumer should take proper precautions when the analog stereo jacks of the DVD player are connected to an amplification system. To enjoy DTS Digital Surround™ playback, an external 5.1-channel decoder system must be connected to the digital jack of the DVD player.
- Set the sound to "STEREO" using the AUDIO button when you play DTS sound tracks on a CD (page 86).
- Do not play DTS sound tracks without first connecting the DVD player to an audio component having a built-in DTS decoder. The DVD player outputs the DTS signal via the DIGITAL AUDIO OUT (COAXIAL or OPTICAL) jack even if "DTS" is set to "Off" in "AUDIO SETUP" menu (page 65), and may affect your ears or cause your speakers to be damaged.

Notes on playing DVDs with a DTS sound track

- DTS audio signals are output only through the DIGITAL AUDIO OUT (COAXIAL or OPTICAL) jack.
- When you play a DVD with DTS sound tracks, set "DTS" to "On" in "AUDIO SETUP" menu (page 65).
- If you connect the player to audio equipment without a DTS decoder, do not set "DTS" to "On" in "AUDIO SETUP" menu (page 65). A loud noise may come out from the speakers, affecting your ears or causing the speakers to be damaged.

* "DTS" and "DTS Digital Out" are trademarks of Digital Theater Systems, Inc.


34 | Playing discs

Basic Operations

Guide to the on-screen display


DVD-V DVD-RW VCD CD DATA-CD

You can check disc information during playback.
The displayed contents differ according to the type of disc being played.

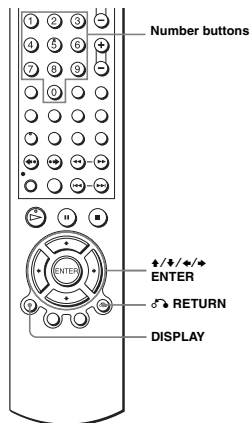

Basic Operations

Press DISPLAY during playback. The following information appears; type of disc, current title/track, chapter, counter position, voice language, subtitle language and Custom AV Mode setting. Refer to "DVD Audio/Subtitle Language" on page 125 for the abbreviation of the language.



Note
• You cannot select disc information items when the disc is stopped.

continued

Guide to the on-screen display | 37


Notes

- The display may not change as operated depending on the disc.
- The display window continue indicating the playing time even when the counter position information on the on-screen display is being changed.

To adjust the playback picture (Custom AV Mode)

You can adjust the video signal of the DVD or VIDEO CD (with PBC function off) from the player to obtain the picture quality you want. Choose the setting that best suits the programme you are watching.

- 1 Press $\blacktriangle/\blacktriangleright$ during playback to select the Custom AV Mode icon.



- 2 Press $\blacktriangle/\blacktriangleright$ to change the setting.

Setting	Video Setting	Audio Setting
Dynamic 1	Produces a bold dynamic picture by increasing the picture contrast and the color intensity.	Full (modulated) sound with clear treble and bass.
Dynamic 2	Produces a more dynamic picture than Dynamic 1 by further increasing the picture contrast and the color intensity.	Full (modulated) sound with even clearer treble and bass than Dynamic 1.
Standard	Off (Default setting) Displays a standard picture.	Standard sound.
Cinema 2	Enhances details in dark areas by increasing the black level.	Powerful sound with even stronger bass than Cinema 1.
Cinema 1	White colors become brighter and black colors become richer, and the color contrast is increased.	Powerful sound with strong bass.

Basic Operations

Tip


- When you watch a movie, "Cinema 1" or "Cinema 2" is recommended.

Guide to the on-screen display | 39

To playback the desired title/track or chapter

You can playback the desired title/track or chapter using this menu.

- 1 Press $\blacktriangle/\blacktriangleright$ during playback to select the desired item.
- 2 Press $\blacktriangle/\blacktriangleright$ to change the item.
- 3 Press ENTER to start playback.
- 4 Press DISPLAY or $\blacktriangle/\blacktriangleright$ RETURN to turn off the menu.




The title/track or chapter icon will appear on the DVD playback screen followed by the current title/track or chapter number and the counter position.

To playback from the desired title/track counter position

You can playback from the desired title/track counter position using this menu.

- 1 Press $\blacktriangle/\blacktriangleright$ during playback to select the counter position icon.
- 2 Enter the desired elapsed playing time of the current title/track using the number buttons.
- 3 Press ENTER to start playback.
- 4 Press DISPLAY or $\blacktriangle/\blacktriangleright$ RETURN to turn off the menu.



Tip

- You can change the counter position information (playing time or remaining time) using $\blacktriangle/\blacktriangleright$ (DVD and CD only).

DVD

Indication	Counter information
T * : * * : * *	Elapsed playing time of the current title
T- * : * * : * *	Remaining time of the current title
C * : * * : * *	Elapsed playing time of the current chapter
C- * : * * : * *	Remaining time of the current chapter

CD


Indication	Counter information
T * : * * : * *	Elapsed playing time of the current track
T- * : * * : * *	Remaining time of the current track
D * : * * : * *	Elapsed playing time of the disc
D- * : * * : * *	Remaining time of the disc

38 | Guide to the on-screen display

Locking the disc tray (Child Lock)

DVD-V DVD-RW VCD CD DATA-CD

You can lock the disc tray so that the disc tray is not opened by mistake.

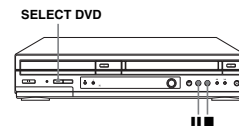

To lock the disc tray

When the DVD-VCR is turned on, press \blacksquare and SELECT DVD on the unit at the same time. "LOCK" appears in the display window. The disc tray is locked.

To unlock the disc tray

Press \blacksquare and SELECT DVD on the unit at the same time. The disc tray is unlocked.

Notes


- If you lock the disc tray while open, the disc tray will be locked after closing.
- You cannot lock the disc tray when the DVD-VCR is turned off. If the DVD-VCR is turned on, you can lock the disc tray either in play mode or stop mode.

40 | Locking the disc tray (Child Lock)

Playing a tape VHS

Before you start ...


- Turn on the DVD-VCR and your TV.
- Switch the input selector on your TV so that the signal from the player appears on the TV screen.
- Set TV / DVD-VIDEO to DVD-VIDEO, then press SELECT VIDEO to control the VCR (page 10).

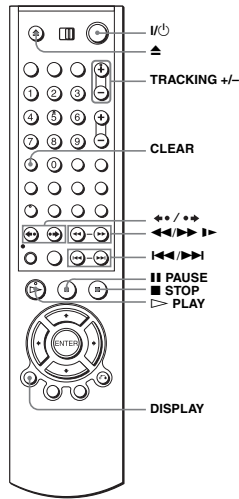

Basic Operations

1

Insert a tape.
The VCR starts playing automatically if you insert a tape with its safety tab removed.




continued

Playing a tape 41

2

- PLAY Press ▷ PLAY.
The display window shows the playback time.
When the tape reaches the end, it will rewind automatically.



Additional tasks

To	Press
Stop play	■ STOP
Pause play*	▬ PAUSE
Resume play after pause	▬ PAUSE or ▷ PLAY
Fast-forward the tape	▶▶ during stop
Rewind the tape	◀◀ during stop
Eject the tape	▲

* If you pause the VCR for more than 5 minutes, the VCR will automatically resume play.

To play a recently watched scene

You can immediately rewind and playback the scene you want to watch again.
During playback, press ◀◀ REPLAY. The VCR rewinds the tape about 10 seconds in the SP mode (about 15 seconds in the EP mode) on the counter for each press of the button, and restarts playback.

To skip playback

You can skip a scene that you do not want to watch (such as a commercial) and restart playback.

During playback, press ◀◀ SKIP. The VCR skips the tape 30 seconds on the counter each time the button is pressed (up to four times) and playback is resumed.

To turn off the power while rewinding (Rewind Shut Off)

Press I/O while the tape is rewinding. The power will turn off but the tape will keep rewinding until it reaches the end.

To play/search at various speeds

Playback options	Operation
View the picture during fast-forward or rewind	During fast-forward, hold down ▶▶. During rewind, hold down ◀◀.
Play at high speed	<ul style="list-style-type: none"> • During playback, briefly press ▶▶ or ◀◀. The tape continues to play at 5 times normal speed. • During playback, hold down ▶▶ or ◀◀. The tape continues to play at 5 times normal speed. When you release the button, normal playback resumes.

42 | Playing a tape

Playback options	Operation
Play in slow motion	During pause, press ▶▶.
Play frame by frame	During pause, press ◀◀ SKIP.
Play at various speeds (Shuttle play)	During playback, press ◀◀ or ▶▶. You can change the playback speed as follows. -x7 ◀◀ -x5 ◀◀ -x3 ◀◀ STILL ◀◀ SLOW ◀◀ PLAY ▶▶ x2 ▶▶ x3 ▶▶ x5 ▶▶ x7

To resume normal playback

Press ▷ PLAY.

To use the time counter

Press CLEAR at the point on the tape that you want to find later. The counter in the display window resets to "0:00:00." To search for the counter 0:00:00 point automatically, see "To search for the counter 0:00:00 point" on page 102.



To display the counter on the TV screen, press DISPLAY during normal playback.

Tip

- Adjust the picture using the TRACKING +/- buttons if:
 - Streaks appear while playing in slow motion.
 - The picture shakes during pause.

Notes

- Tapes recorded in the LP mode on other VCRs can be played back on this VCR but the picture quality cannot be guaranteed.
- The counter resets to "0:00:00" whenever a tape is reinserted.
- The counter stops counting when it comes to a portion with no recording.
- When 10 hours have passed, the counter in the display window returns to "0:00:00" and the count starts over again.
- The sound is muted during playback at various speeds.
- The picture may show noise when playing at high speed in reverse.
- While playing a tape, you can display the setup menu, but the remote commander's function switches to DVD automatically. Press ◀◀ RETURN repeatedly to exit the menu.
- When playback does not start even if you insert a tape with its safety tab removed, set "Auto Play" to "On" in the "VIDEO FUNCTION SETUP" menu (page 104).
- Stop disc playback while playing back a video.
- The VCR can also play S-VHS tapes. The VCR will automatically identify the type of tape inserted in the VCR (either VHS or S-VHS). When S-VHS tapes are played in the VCR, the enhanced resolution will not be visible on screen; there may also be picture distortion while playing the S-VHS tape in slow motion or while utilizing other special playback modes. The VCR will not record in S-VHS mode on an S-VHS tape.


Basic Operations

Playing a tape 43

Recording TV programs VHS

Before you start ...

- Turn on the DVD-VCR and your TV.
- Switch the input selector on your TV so that the signal from the player appears on the TV screen.
- Set TV / DVD-VIDEO to DVD-VIDEO, then press SELECT VIDEO to control the VCR (page 10).
- To record from a cable box, turn it on.
- Make sure the tape is longer than the total recording time.

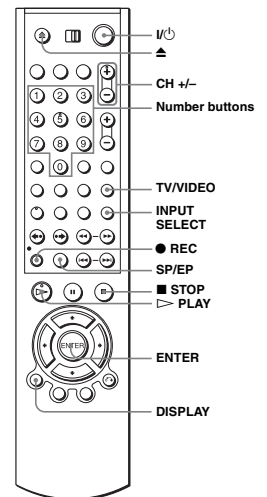


1

Insert a tape with its safety tab in place.





2


- CH/TRACKING Press CH +/- to select the channel or line input video source you want to record.



44 | Recording TV programs

- 3**  Press SP/EP to select the tape speed, SP or EP. EP (Extended Play) provides recording time three times as long as SP (Standard Play). However, SP produces better picture and audio quality.



- 4**  Press **REC** to start recording. "REC" appears in the display window.



To stop recording

Press **STOP**.

To check the remaining tape length

Press **DISPLAY** to display the time counter. With the display on, press **DISPLAY** again to check the remaining time. The white bar indicates the current location in relation to the entire tape length. The remaining time also appears. Press **DISPLAY** to turn off the indicators.



Time counter



Remaining tape length

To check the remaining tape length of a tape, set "Tape Length" in the "VIDEO FUNCTION SETUP" menu correctly (page 104).

Maximum Recording Time

Tape Length	SP	EP
T-120	2 hrs	6 hrs
T-160	2 hrs 40 mins	8 hrs
T-180	3 hrs	9 hrs

continued


Recording TV programs using the timer

VHS


You can preset up to eight programs at a time.

Before you start...


- Check that the DVD-VCR clock is set to the correct time.
- Turn on the DVD-VCR and your TV.
- Switch the input selector on your TV so that the signal from the player appears on the TV screen.
- Set **TV / DVD-VIDEO** to **DVD-VIDEO**, then press **SELECT VIDEO** to control the VCR (page 10).
- When using a cable box, turn it on.
- Insert a tape with its safety tab in place. Make sure the tape is longer than the total recording time.
- If the DVD player is in play mode, you cannot display the setup menu. Stop the DVD playback.

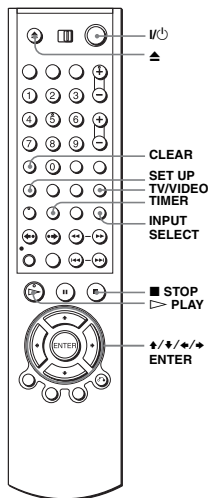

Basic Operations

- 1**  Press **SET UP**, then press **▲/▼** to select (PROGRAM) and press **ENTER**. You can also display the timer programming menu by pressing **TIMER**.

The timer programming menu appears.



SUBTITLE/TIMER

continued

To watch another TV program while recording

- 1** Press **TV/VIDEO** to display "TV" in the display window.



- 2** If your TV is connected to the VCR using A/V connections, set the TV to the TV's antenna input; if not, skip this step.
3 Select another channel on the TV.

To watch a DVD while recording

- 1** Press **SELECT DVD** to control the DVD player.

- 2** Press **▲** and place the disc on the disc tray.

- 3** Press **▶ PLAY**.

The disc tray closes and the DVD player starts playback. The TV screen will automatically change to the DVD playback screen.

To save a recording

To prevent accidental erasure, break off the safety tab as illustrated. To record on the tape again, cover the tab hole with adhesive tape.




Safety tab

Tips


- To select a channel, you can use the number buttons on the remote commander. Enter the channel number, then press **ENTER**.
- You can select a video source from the LINE IN 1 or LINE-2 IN jacks using the **INPUT SELECT** button.
- The display appears on the TV screen indicating information about the tape, but the information will not be recorded on the tape.
- If you do not want to watch TV while recording, you can turn off the TV. When using a cable box, make sure to leave it on.

Notes


- The remaining tape length may not be indicated accurately for short tapes such as T-20 or T-30, or tapes recorded in the LP mode.
- It may take up to one minute for the VCR to calculate and display the remaining tape length after you press **DISPLAY**.
- You cannot record a DVD to a VCR tape.
- To watch a TV program during video recording, stop disc playback.

- 2**  Set the channel number, start and stop times, date, and tape speed:


- 1** Press **▶** to select each item in turn.
2 Press **▲/▼** to set each item.
 To correct a setting, press **◀** to return to that setting and reset.





- To record from a source connected to the LINE IN 1 or LINE-2 IN jacks, press **INPUT SELECT** or **▲/▼** to display "L1" or "L2" in the "CH" position.
- To record the same program every day or the same day every week, press **▶** while the date is flashing. For details, see "Daily/weekly recording" on page 48.
- To use the Auto Tape Speed function, press **▶** to display "Auto" in the "SPEED" position. For details, see "To use the Auto Tape Speed function" on page 49.

- 3**  Press **ENTER** to confirm the setting. To enter another setting, press **▲/▼** to select the next row and repeat step 2. Press **CLEAR** repeatedly to cancel the setting.



- 4**  Press **ENTER** to confirm all settings.

- 5**  Press **I/O** to turn off the DVD-VCR. The  indicator appears in the display window and the VCR stands by for recording. To record from a decoder or other source, leave the connected equipment switched on.

To stop recording

To stop the DVD-VCR while recording, press **SELECT VIDEO** and then press **STOP**.

Daily/weekly recording

In step 2 above, press **▶** to select the recording pattern. Each time you press **▶**, the indication changes as shown below. Press **▶** to change the indication in reverse order.

Mo-Fr → Sun's → Mon's → → Sat's → 1 month later → (dates count down) → the current date

continued

To use the Auto Tape Speed function

When you are recording a program in the Auto mode and the remaining tape becomes shorter than the recording time, the tape speed is automatically changed to the EP mode. Note that some noise will appear on the picture when the tape speed is changed. If you want to keep the tape speed, select SP. To operate this function, set "Tape Length" in "VIDEO FUNCTION SETUP" menu correctly (page 104).

To watch another TV program after setting the timer

1 Press TV/VIDEO to display "TV" in the display window.



2 If your TV is connected to the VCR using A/V connections, set the TV to the TV's antenna input; if not, skip this step.

3 Select another channel on the TV.

To watch a DVD after setting the timer

1 Press SELECT DVD to control the DVD player.

2 Press \blacktriangle and place the disc on the disc tray.

3 Press \blacktriangleright PLAY.

The disc tray closes and the DVD player starts playback. The TV screen will automatically change to the DVD playback screen.


Tips

- If the \square indicator appears, the timer settings overlap. To check, change or cancel the program setting, repeat the steps of "Recording TV programs using the timer" on page 47.
- If the \circ indicator appears, this means that the VCR is currently recording this program.
- You can also do the following tasks while the VCR is recording:
 - Reset the counter (page 43).
 - Display tape information on the TV screen (page 45).

Basic Operations

Recording TV programs using the Dial Timer (SLV-D550P only) VHS

The Dial Timer function allows you to make timer recordings of programs without turning on your TV. Set the recording timer to record up to eight programs that will be broadcast within a month using the DIAL TIMER. The recording start time and recording stop time can be set at one minute intervals.

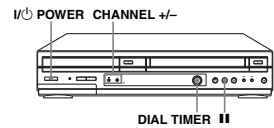


Before you start...

- Turn on the DVD-VCR.
- When using a cable box, turn it on.
- Insert a tape with its safety tab in place. Make sure the tape is longer than the total recording time.


1 Press DIAL TIMER. DATE indicator appears and the current date flashes in the display window. If the date and time are not set, MONTH indicator will appear. To set the date and time, see "To set the clock" on page 53.




2 Turn DIAL TIMER to set the recording date.





3 Press DIAL TIMER. "START" and the next quarter hour increment appear alternately in the display window.



4 Turn DIAL TIMER to set the recording start time. You can set the recording start time in 15 minute intervals or adjust the time in one minute intervals by pressing the CHANNEL +/- buttons on the unit.




5 Press DIAL TIMER. "STOP" and the next quarter hour increment appear alternately in the display window.




Basic Operations

6 Turn DIAL TIMER to set the recording stop time. You can set the recording stop time in 15 minute intervals or adjust the time in one minute intervals by pressing the CHANNEL +/- buttons on the unit.



7 Press DIAL TIMER. Current channel flashes in the display window.



8 Turn DIAL TIMER to set the channel number. To record from a source connected to the LINE IN 1 or LINE-2 IN jacks, turn DIAL TIMER or press INPUT SELECT to display "L1" or "L2."



9 Press DIAL TIMER. Current tape speed flashes in the display window.



10 Turn DIAL TIMER to set the tape speed.



11 Press DIAL TIMER to complete the setting. "OK" appears in the display window for about five seconds. The timer indicator appears in the display window and the VCR stands by for recording. When using a cable box, leave it on.



continued

To return to the previous step

To return to the previous step, press the CHANNEL + and - buttons on the unit at the same time during any of the Dial Timer settings.

To set the clock

- 1 Hold down DIAL TIMER so that MONTH indicator appears in the display window. However, if the clock has already been set, the current setting appears.
- 2 Turn DIAL TIMER to set the month.
- 3 Press DIAL TIMER. DAY indicator appears in the display window.
- 4 Turn and press DIAL TIMER to set the day and then the year. After you set the year, "AM" and "12:--" appear alternately in the display window.
- 5 Turn and press DIAL TIMER to set the hour and minute.
- 6 When you have finished setting the time, press DIAL TIMER to start the clock.

Tips

- To cancel a Dial Timer setting, press any button other than DIAL TIMER or CHANNEL +/- on the unit or any button on the remote while you are making the setting.
- To check, change, or cancel the program setting, see "Checking/changing/canceling timer settings" on page 58.

Notes

- If eight programs have already been set using the VCR Plus+ system or the manual timer setting, "FULL" appears in the display window for about five seconds.
- If you set the clock using the Auto Clock Set feature, the clock will adjust itself to the incoming time signal regardless of adjustments made with the Dial Timer. Be sure you have set Auto Clock Set correctly.
- If you are setting the clock for the first time or "0:--" appears in the display window, you cannot set the clock to February 29th using the Dial Timer. Please use the Auto Clock Set feature to set the VCR to this day.
- The timer indicator flashes in the display window when you complete the setting in step 9 on page 52 with no tape inserted.
- When the setting time is incorrect, "Error" appears in the display window in step 9. Set the timer again from step 1.

Basic Operations

continued

Recording TV programs using the Dial Timer (SLV-D550P only) 53

About the Demonstration Mode

The Dial Timer function has a Demonstration Mode that allows the user, such as a salesperson, to enter more than eight examples of timer settings when demonstrating the use of the Dial Timer. It cancels the FULL notice which appears if eight programs have already been set. Do not use the Demonstration Mode for making timer recordings. Doing so may cause the settings to be inaccurate.

To activate the Demonstration Mode

Press **II** on the unit while turning the DIAL TIMER. "DEMO" appears in the display window for a few seconds.

To cancel the Demonstration Mode


Turn the power off and unplug the AC power cord. Although the Demonstration Mode is canceled, the timer settings entered while using the Demonstration Mode will remain. Be sure to manually cancel the timer settings before you use the Dial Timer or any other timer method after reconnecting the AC power cord (page 58).

Recording TV programs using the VCR Plus+® system (SLV-D550P only) VHS

Just enter the PlusCode number listed in the TV program guide. The date, time and channel number of that program are set automatically. You can preset up to eight programs together with the DIAL TIMER and manual timer settings at one time.


Before you start...

- Check that the DVD-VCR clock is set to the correct time.
- Turn on the DVD-VCR and your TV.
- Switch the input selector on your TV so that the signal from the player appears on the TV screen.
- Set TV / DVD-VIDEO to DVD-VIDEO, then press SELECT VIDEO to control the VCR (page 10).
- When using a cable box, turn it on.
- Insert a tape with its safety tab in place. Make sure the tape is longer than the total recording time.
- If the DVD player is in play mode, you cannot display the setup menu. Stop the DVD playback.

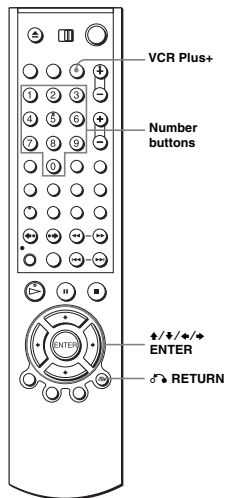

Basic Operations

1 VCR Plus+ Press VCR Plus+.



2 Press **▲/▼** to select "Enter code."




continued

Recording TV programs using the VCR Plus+® system (SLV-D550P only) 55

54 Recording TV programs using the Dial Timer (SLV-D550P only)

3 Press the number buttons to enter the PlusCode number. To correct a setting, press **◀** to return to that setting and reset.




4 Press **▲/▼** to select "Mode."




5 Press **▲/▼** to select Once, Mo-Fr, or Weekly:


To record	Select
Only once	Once
Everyday Monday to Friday	Mo-Fr
Once a week	Weekly



6 Press **▲/▼** to select "Speed."



7 Press **▲/▼** to select the tape speed, Auto, SP, or EP, then press ENTER.



8 To enter another setting, repeat steps 1 to 7.

9 Press **↵** RETURN to exit the menu.

The timer indicator appears in the display window and the VCR stands by for recording. When using a cable box, leave it on.



56 Recording TV programs using the VCR Plus+® system (SLV-D550P only)

To stop recording

To stop the VCR while recording, press ■ STOP.

To use the DVD-VCR after setting the timer

To use the DVD-VCR before a timer recording begins, just press I/⏪. The timer indicator disappears from the display window and the DVD-VCR switches on. Remember to press I/⏪ to reset the VCR to the timer recording standby mode after using the VCR.

You can also do the following tasks while the VCR is recording:

- Reset the counter (page 43).
- Display tape information on the TV screen (page 45).
- Check the timer settings (page 58).
- Watch another TV program (page 46).

Tip

- If the VCR does not accept the PlusCode number, see "Checking/changing/canceling timer settings" on page 58.


Notes

- If the VCR does not accept the PlusCode number, this means that:
 - The PlusCode number is incorrect.
 - Once, Mo-Fr, or Weekly was selected incorrectly. You cannot select MO-FR or Weekly for a program that airs more than seven days ahead.
 - Correctly set the PlusCode number again from step 2.
- When the PlusCode number is incorrect, "Invalid code" will appear in the display.

Checking/changing/canceling timer settings VHS

Before you start...

- Check that the DVD-VCR clock is set to the correct time.
- Turn on the DVD-VCR and your TV.
- Switch the input selector on your TV so that the signal from the player appears on the TV screen.
- Set TV / DVD-VIDEO to DVD-VIDEO, then press SELECT VIDEO to control the VCR (page 10).
- When using a decoder, turn it on.
- Insert a tape with its safety tab in place. Make sure the tape is longer than the total recording time.
- If the DVD player is in play mode, you cannot display the setup menu. Stop the DVD playback.

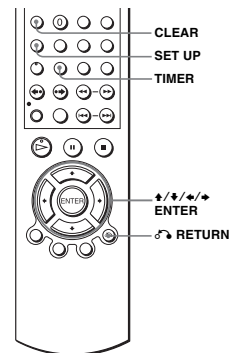

1 Press SET UP, then press ▲/▼ to select (PROGRAM) and press ENTER. You can also display the timer programming menu by pressing TIMER.

The timer programming menu appears.

CH	START	END	DATE	SPEED
01	05:31%	07:31%	1/20	SP
03	01:31%	03:32%	1/21	Auto
06	06:32%	08:32%	1/21	EP
---	---	---	---	---
---	---	---	---	---
---	---	---	---	---
---	---	---	---	---

2 Press ▲/▼ to select setting you want to change or cancel.


- To change the setting, press ▲/▼ to select the item you want to change, and press ▲/▼ to change it.
- To cancel the setting, press CLEAR.

CH	START	END	DATE	SPEED
01	05:31%	07:31%	1/20	SP
03	01:31%	03:32%	1/21	Auto
06	06:32%	08:32%	1/21	EP
---	---	---	---	---
---	---	---	---	---
---	---	---	---	---
---	---	---	---	---

- 3** Press ↵ RETURN to confirm the setting.
Press ↵ RETURN again to exit the menu.


When the timer settings overlap

The program that starts first has priority and the second program starts recording only after the first program has finished. If the programs start at the same time, the program listed first in the menu has priority.

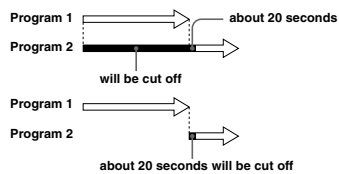

Locking the DVD-VCR (Child Lock) VHS

After you have set the timer, you can lock all of the buttons on the DVD-VCR so that the settings are not canceled by mistake.

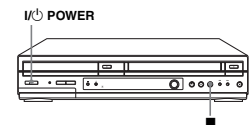

To lock the DVD-VCR

When the DVD-VCR is turned on, hold down I/⏪ POWER on the unit until "LOCK" appears in the display window. The DVD-VCR turns off and the Ⓞ indicator remains lit if there is a timer setting. The DVD-VCR will not work except for timer recordings.

To unlock the VCR

Hold down I/⏪ POWER on the unit until "LOCK" disappears from the display window. The DVD-VCR is unlocked and turns on.

To stop timer recording while the DVD-VCR is locked, press ■. The recording stops and the DVD-VCR is unlocked.

Note

- The DVD-VCR will be unlocked when:
 - You stop timer recording by pressing ■.
 - You insert a tape.
 - The AC power cord is disconnected or power supply stops.

A/V Receiver hookup


DVD-V DVD-RW VCD CD DATA-CD

VHS

A Use this hookup if your A/V receiver has a Dolby® Surround (Pro Logic) decoder and 3 to 6 speakers

You can enjoy the Dolby Surround effects only when playing Dolby Surround audio or multi-channel audio (Dolby Digital) discs.

* Manufactured under license from Dolby Laboratories. "Dolby," "Pro Logic," and the double-D symbol are trademarks of Dolby Laboratories.

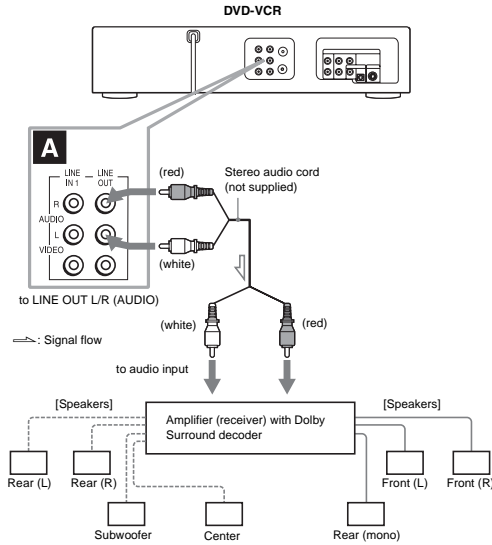


Note
 • When connecting 6 speakers, replace the monaural rear speaker with a center speaker, 2 rear speakers and a subwoofer.

continued

B Use this hookup if your A/V receiver has a Dolby Digital or DTS® decoder, a digital input jack and 6 speakers

This connection will allow you to use the Dolby Digital or DTS decoder function of your AV amplifier (receiver). You are not able to enjoy the surround sound effects of this player. You must make connections using B-1 and B-2.

* "DTS" and "DTS Digital Out" are trademarks of Digital Theater Systems, Inc.

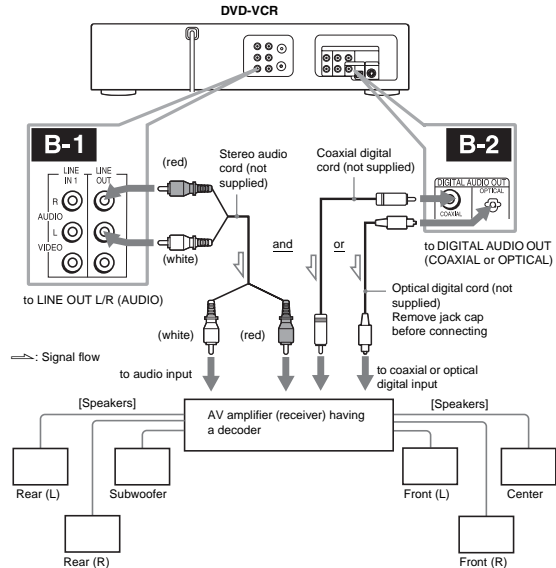

Note
 • After you have completed the connection, be sure to set "Dolby Digital" to "Dolby Digital" and "DTS" to "On" in "AUDIO SETUP" menu (page 65). Otherwise, no sound or a loud noise will come from the speakers.


S-Video/Component Video hookup

DVD-V DVD-RW VCD

Make audio connections using the LINE OUT AUDIO L/R jacks or DIGITAL AUDIO OUT (OPTICAL or COAXIAL) jacks on the right side of the DVD-VCR when you use S-VIDEO/Component Video hookup.

A Use this hookup if your TV has an S-VIDEO input jack

Connect an S-VIDEO cord (not supplied). You will enjoy high quality images.

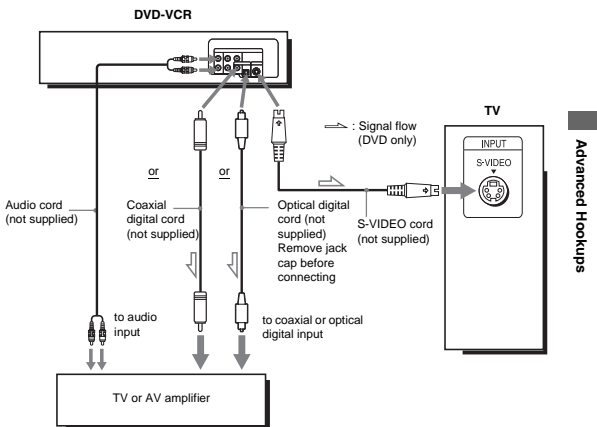


Notes
 • The connection using S-VIDEO OUT jack is only for the DVD player.
 • If you set "Progressive" to "On" in the "SCREEN SETUP" menu, S-Video playback may be distorted.


continued

B Use this hookup if your TV has component video input jacks

Connect your TV via the COMPONENT VIDEO OUT jacks using a component video cord (not supplied) or three video cords (not supplied) of the same kind and length. You will enjoy accurate color reproduction and high quality images. See page 61 for audio connections.

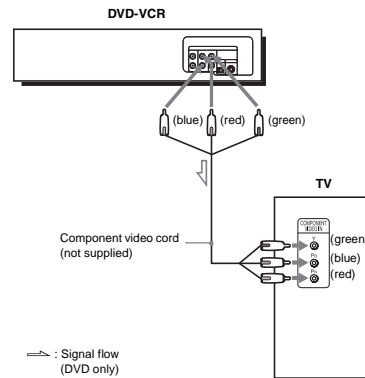


If your TV accepts progressive (480p) format signals, you must use this connection and then set "Progressive" to "On" in the "SCREEN SETUP" menu (page 67). The PROGRESSIVE indicator lights up in orange when the DVD player outputs progressive signals.



Notes
 • The connection using COMPONENT VIDEO OUT jack is only for the DVD player.
 • Consumers should note that not all high definition television sets are fully compatible with this product and may cause artifacts to be displayed in the picture. In case of 480 progressive scan picture problems, it is recommended that the user switch the connection to the "standard definition" output. If there are questions regarding our TV set compatibility with this model 480p DVD player, please contact our customer service center.

Audio Setup **DVD-V DVD-RW**

“Audio Setup” allows you to set the sound according to the playback and connection conditions.

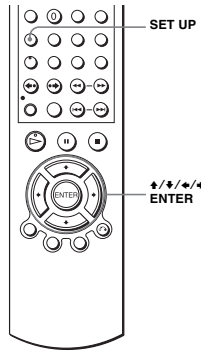

- Press SET UP when the DVD player is in stop mode, then press **ENTER** to select (DVD), then press ENTER.
- Press **ENTER** to select “Audio Setup,” then press ENTER.
- Press **ENTER** to select the setup item from the displayed list: “Dolby Digital,” “DTS” or “Audio DRC.”

DVD Settings and Adjustments

continued

- Press **ENTER** to select an item.

- Press SET UP to exit the menu.

Menu choices

- Dolby Digital**
 Selects the type of Dolby Digital signal. The default setting is indicated in bold print.

D-PCM	Select this when the player is connected to an audio component lacking a built-in Dolby Digital decoder.
Dolby Digital	Select this when the player is connected to an audio component with a built-in Dolby Digital decoder.

- DTS**
 Selects whether or not to output DTS signals. The default setting is indicated in bold print.

Off	Select this when the player is connected to an audio component lacking a built-in DTS decoder.
On	Select this when the player is connected to an audio component with a built-in DTS decoder.

- Audio DRC (Dynamic Range Control)**
 Makes the sound clear when the volume is turned down when playing a DVD that conforms to “Audio DRC.” This affects the output from the following jacks:
 - LINE OUT AUDIO L/R jacks
 - DIGITAL AUDIO OUT (OPTICAL or COAXIAL) jack only when “Dolby Digital” is set to “D-PCM.”
 The default setting is indicated in bold print.


Wide Range	Gives you the feeling of being at alive performance.
TV Mode	Makes the low sounds clear even if you turn the volume down.

Notes

- If you select the surround setting while playing a DVD, the player does not output Dolby Digital signals from the DIGITAL AUDIO OUT (OPTICAL or COAXIAL) jack (when you set “Dolby Digital” to “D-PCM” in “AUDIO SETUP” menu).
- If you connect a component that does not conform to the selected audio signal, a loud noise (or no sound) will come out from the speakers, affecting your ears or causing the speakers to be damaged.
- Noise may occur in the LinearPCM double-speed audio. This is not a malfunction.
- If you set “DTS” to “On,” you cannot select surround setting (page 87).

Screen Setup **DVD-V**

“Screen Setup” allows you to set the screen according to the playback and connection conditions.

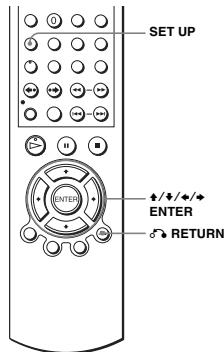

- Press SET UP when the DVD player is in stop mode, then press **ENTER** to select (DVD), then press ENTER.
- Press **ENTER** to select “Screen Setup,” then press ENTER.
- Press **ENTER** to select the setup item from the displayed list: “TV Type,” or “Black Level.” To set the “Progressive” setting, see page 69.

DVD Settings and Adjustments

continued


- Press **ENTER** to select an item.

- Press SET UP to exit the menu.

Menu choices

- TV Type**
 Selects the aspect ratio of the connected TV (4:3 standard or wide). The default setting is indicated in bold print.

4:3 Letter Box	Select this when you connect a 4:3 screen TV. Displays a wide picture with bands on the upper and lower portions of the screen.
4:3 Pan Scan	Select this when you connect a 4:3 screen TV. Automatically displays the wide picture on the entire screen and cuts off the portions that do not fit.
16:9	Select this when you connect a wide-screen TV or a TV with a wide mode function.



Black Level

You can enhance the black level by increasing the brightness and contrast when viewing DVDs with the PROGRESSIVE indicator turned off. The default setting is indicated in bold print.

Off	Stops the increase of the contrast.
On	Increases the contrast.

Notes

- Playback settings stored in the disc take priority over the “DVD SETUP” menu settings and not all the functions described may work.
- Depending on the DVD, “4:3 Letter Box” may be selected automatically instead of “4:3 Pan Scan” or vice versa.

To set the "Progressive" setting

If your TV accepts progressive (480p) format signals, you will enjoy accurate color reproduction and high quality image.

1 Follow step 1 and 2 on page 67, then press **↔/↔** to select "Progressive."

2 Press **↔/↔** to select "On," then press ENTER.

3 Follow the instructions appearing on the screen.






- 1** Ensure your TV is (480p) Progressive Scan capable.
- 2** Connect with Component Video Output jacks (red/green/blue connections). See "Use this hookup if your TV has component video input jacks" on page 64.
- 3** Press **↔/↔** to select [OK] to test your video signal.

4 If video signal appears OK, video connection is complete. Press ENTER.

The PROGRESSIVE indicator on the unit lights up in orange.

If picture is distorted, press **↔** RETURN. Check the connection (page 64).

5 Press SET UP to exit the menu.



DVD Settings and Adjustments

continued

Screen Setup | 69

Tip


- The "Progressive" setting can be canceled by pressing **||** on the unit continuously for 5 seconds or more, or selecting "Off" in step 2.

Note

- If you select progressive signal when you connect the DVD player to a TV that cannot accept the signal in progressive format, the image quality will deteriorate. In this case, set "Progressive" to "Off".

Setting the display or sound track language DVD-V

You can set various languages for the disc's menu, sound track or subtitle.

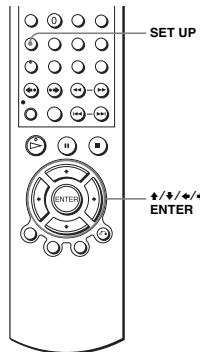


DVD Settings and Adjustments

1 Press SET UP when the DVD player is in stop mode, then press **↔/↔** to select (DVD) and press ENTER.



2 Press **↔/↔** to select "Language Setup," then press ENTER. The "LANGUAGE SET UP" menu appears.



continued

Setting the display or sound track language | 71

70 | Screen Setup

3 Press **↔/↔** to select the language setup item from the displayed list: "DVD Menu," "Audio," or "Subtitle." Then press ENTER.




4 Press **↔/↔** to select the desired language, then press ENTER.




- DVD MENU LANGUAGE**
You can select the desired language for the disc's menu.



- AUDIO LANGUAGE**
Switches the language of the sound track. When you select "Original," the language given priority in the disc is selected.



- SUBTITLE LANGUAGE**
Switches the language of the subtitle recorded on the DVD. When you select "Audio Follow," the language for the subtitle changes according to the language you selected for the sound track.



5 Press SET UP to exit the menu.



Tip

- If you select "Others" in step 4, an additional language menu appears. Press **↔/↔/↔/↔** to select the desired language, then press ENTER.



Notes


- When you select a language that is not recorded on the DVD in step 4, one of the recorded languages will be automatically selected.
- Playback settings stored in the disc take priority over the DVD SETUP settings and not all the functions described may work.







72 | Setting the display or sound track language

Parental Control (limiting playback by children)

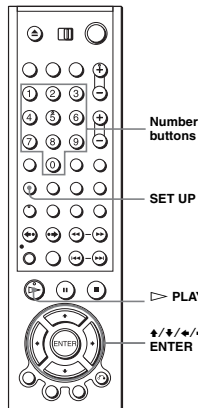DVD-V

Playback of some DVDs can be limited according to a predetermined level such as the age of the users. The "Parental Control" function allows you to set a playback limitation level.




-  Press SET UP when the DVD player is in stop mode, then press  to select (DVD) and press ENTER.
 
-  Press  to select "Parental Setup," then press ENTER.
 

DVD Settings and Adjustments

continued

Parental Control (limiting playback by children) 73

-  Press SET UP to exit the menu.


To change the password

- Select "Change Password" in step 4 on page 74. The display for entering a new password appears.
- Enter a new 4-digit password using the number buttons. The display for confirming the password appears.
- Re-enter the new password.



To turn off the Parental Control function

Set "Use Password" to "No" in step 3 on page 74.

To play a disc for which Parental Control is set

- Insert the disc, then press  PLAY. The display for entering your password appears.
- Enter your 4-digit password using the number buttons. The player starts playback.

If you forget your password



- Remove the disc and turn off the DVD-VCR.
- Turn on the DVD-VCR again with no disc in the unit.
- Hold down  and  on the front panel simultaneously for 5 seconds. "Reset OK" appears on the screen.
- Turn off the DVD-VCR. The password is cleared.
- To create a new password, follow step 3 on page 74.

Notes


- When you play DVDs which do not have the Parental Control function, playback cannot be limited on this player.
- All the ratings higher than the level you select will be blocked.
- Write your password down and keep it in a safe place in case you forget it.

DVD Settings and Adjustments

Parental Control (limiting playback by children) 75

-  Press  to set the parental control.



- If you have not entered a password
The display for registering a new password appears.
Enter a 4-digit password using the number buttons.






- The display for confirming the password appears.
Re-enter the password.





- When you have already registered a password
The display for entering the password appears.
Enter a 4-digit password using the number buttons.
After registering a password, if you set "Use Password" to "No," "PASSWORD CHECK" screen will not appear.




-  Press  to select "Rating Level," then press ENTER.



-  Press  to select the level you want, then press ENTER.

- The options are as follows.
Level 8 (Adult) ↔ Level 7 ↔ Level 6 ↔
Level 5 ↔ Level 4 ↔ Level 3 ↔ Level 2
↔ Level 1 (Kids Safe)



The lower the value, the stricter the limitation.


74 Parental Control (limiting playback by children)


DVD Additional Operations

Using the DVD's menu DVD-V



A DVD is divided into long sections of a picture or a music feature called "titles." When you play a DVD which contains several titles, you can select the title you want using the TOP MENU button.

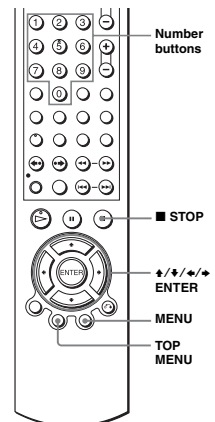When you play DVDs that allow you to select items such as the language for the subtitles and the language for the sound, select these items using the MENU button.



-  Press TOP MENU or MENU.
The disc's menu appears on the TV screen.
The contents of the menu vary from disc to disc.



-  Press  to select the item you want to play or change.
You can also use the number buttons to select the item. In this case, step 3 is skipped.

76 Using the DVD's menu

3  Press ENTER.

To turn off the DVD's menu
Press ■ STOP


Note





- Depending on the DVD, you may not be able to use the TOP MENU button or search a point by setting the time.

DVD Additional Operations

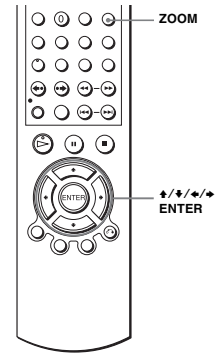Zooming into a scene DVD-V VCD DATA-CD

You can zoom into a scene during playback or still mode. To zoom into a JPEG image, see "Playing JPEG image files" on page 93.



-  Press ZOOM.
"■" appears. 
-  Press ▲/▼/◆/◆ to move "■" to the position where you want to zoom in.
-  Press ENTER repeatedly to change the magnification.
Each time you press the button, the magnification changes as shown below.
2× → 4× → 2× → normal magnification

Notes


- You cannot use 4× magnification when you play VIDEO CDs.
- The zoom function may not work depending on the DVD.




Using the DVD's menu 77

78 Zooming into a scene

Changing the angles DVD-V

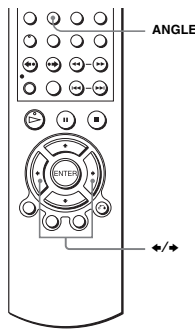If various angles (multi-angles) for a scene are recorded on the DVD, "ANGLE" appears in the display when you press ANGLE during playback. This means that you can change the viewing angle.



-  Press ANGLE during playback.
The angle number appears on the display.
The number after the slash indicates the total number of angles. 
-  Press ▲/▼ repeatedly to select the angle number.
The scene changes to the selected angle.


Note





- Check the user's manual of the purchased disc to determine whether it supports angle operation. However, note that angle operation may not be possible for some discs.

DVD Additional Operations

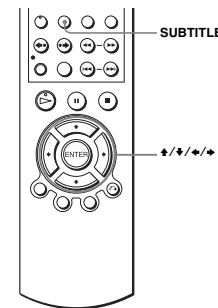Displaying the subtitle DVD-V DVD-RW

If subtitles are recorded on the disc, you can change the subtitles or turn them on and off whenever you want while playing a DVD.



-  Press SUBTITLE during playback. 
-  Press ▲/▼ repeatedly to select the language.
Depending on the DVD, the choice of language varies.
Refer to "DVD Audio/Subtitle Language" on page 125 for the abbreviation of the language.
-  Press ▲/▼ repeatedly to select "On."

To turn off the subtitles
Select "Off" in step 3.

Note

- Depending on the DVD, you may not be able to change the subtitles even if multilingual subtitles are recorded on it. You also may not be able to turn them off.

Changing the angles 79

80 Displaying the subtitle

Various play mode functions (Program play, Shuffle play, Repeat play) **DVD-V DVD-RW VCD CD DATA-CD**

You can set the following play modes:


- Program play (page 81)
- Shuffle play (page 83)
- Repeat play (page 84)

Note

- The play mode is canceled when:
 - you open the disc tray
 - the player enters standby mode by pressing I/⏻.

Creating your own program (Program play) **CD**

You can play the contents of a disc in the order you want by arranging the order of the tracks on the disc to create your own program. You can program up to 20 tracks.

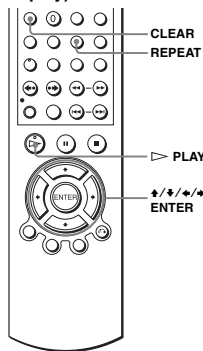

DVD Additional Operations


1 Press REPEAT when the DVD player is in stop mode.

PROGRAM SHUFFLE **CD** **CD**

continued

Playing in random order (Shuffle play) **CD**

You can shuffle the playback order of tracks. Subsequent "shuffling" may produce a different playing order.

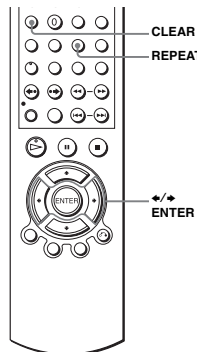

DVD Additional Operations

1 Press REPEAT when the DVD player is in stop mode.

PROGRAM SHUFFLE **CD** **CD**

2 Press **ENTER** to select "SHUFFLE", then press **ENTER**.

PROGRAM SHUFFLE **CD** **CD**

To return to normal play

Press CLEAR.

Tips

- Shuffle play will stop when all the tracks are played back.
- You cannot repeat play while in shuffle play.

continued

2



Press **ENTER** to select "PROGRAM", then press **ENTER**.

PROGRAM	
Track	Program Order
01	02 03 04
05	06 07 08
09	10 11 12
13	14 15 16
17	18 19 20*
Clear last track	
Clear all tracks	

3



Press **ENTER** to select the track number you want to program, then press **ENTER**.

PROGRAM	
Track	Program Order
01	02 03 04
05	06 07 08
09	10 11 12
13	14 15 16
17	18 19 20*
Clear last track	
Clear all tracks	

4

To program other tracks, repeat step 3.
The programmed track numbers are displayed in the selected order.

5



Press **PLAY** to start program play.
Program play starts.
When the program ends, you can restart the same program again by pressing **PLAY**.

To stop program play

Press CLEAR during playback.

To change or cancel a program

- Follow steps 1 and 2 of "Creating your own program (Program play)."
- Press **ENTER** repeatedly to select "Clear last track," then press **ENTER**. Each time you press the button, the last programmed number is canceled. You can also cancel the last programmed number by pressing CLEAR.
- Follow step 3 for new programming.

To cancel all the programmed numbers


- Follow steps 1 and 2 of "Creating your own program (Program play)."
- Press **ENTER** repeatedly to select "Clear last track," then press **ENTER** to select "Clear all tracks" and press **ENTER**.
All the programmed numbers are canceled.

Notes

- Up to 99 tracks can be displayed.
- Up to 20 tracks can be programmed at one time.

Playing repeatedly (Repeat play) **DVD-V DVD-RW VCD CD DATA-CD**

You can play all of the titles or tracks on a disc or a single title, chapter, or track repeatedly.

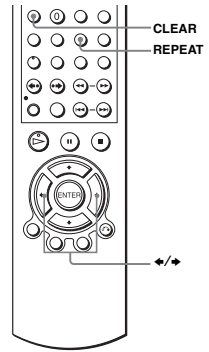

1 Press REPEAT during playback.

OH

2 Press REPEAT or **ENTER** repeatedly to select the item to be repeated.

When playing a DVD

- Chapter: repeats the current chapter.
- Title: repeats the current title on a disc.

When playing a VIDEO CD (with PBC function off) or CD

- Track: repeats the current track.
- Disc: repeats all of the tracks.

When playing a DATA CD (MP3 audio)

- FILE: repeats the current track (file).
- DIR: repeats the current album (directory).
- DISC: repeats the current disc.

To return to normal play

Select "Off" or press CLEAR in step 2.


Notes

- You cannot repeat play with DVD-RW in VR mode.
- You cannot repeat play VIDEO CDs with PBC function on. See "Playing VIDEO CDs with "PBC ON/OFF" Functions" on page 97.

Changing the sound DVD-V DVD-RW VCD CD

When playing a DVD recorded in multiple audio formats (PCM, Dolby Digital, or DTS), you can change the audio format. If the DVD is recorded with multilingual tracks, you can also select the language.

With CDs, DATA CDs, or VIDEO CDs, you can select the sound from the right or left channel and listen to the sound of the selected channel through both the right and left speakers. For example, when playing a Karaoke VIDEO CD containing a song with the vocals on the right channel and the instruments on the left channel, you can hear the instruments from both speakers by selecting the left channel.

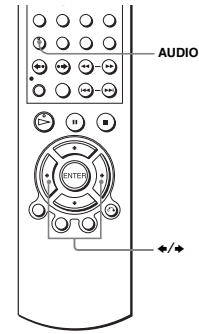

Disc type	Playback instruments only
Karaoke VIDEO CD	Yes
Karaoke DVD	No

To enjoy Dolby Digital or DTS effect from a LinearPCM format disc, you have to make the **5-2** connection as shown on page 62.

1 Press AUDIO during playback.


2 Press \leftarrow/\rightarrow repeatedly to select the desired language/audio setting.

- When playing a DVD
Depending on the DVD, the choice of language varies. Refer to "DVD Audio/Subtitle Language" on page 125 for the abbreviation of the language.
- When playing a VIDEO CD or CD
The default setting is indicated in bold print.

Stereo	The standard stereo sound
Left	The sound of the left channel (monaural)
Right	The sound of the right channel (monaural)

Virtual surround setting DVD-V

When you connect a stereo TV or 2 front speakers, SURROUND lets you enjoy surround sound effects by using sound imaging to create virtual rear speakers from the sound of the front speakers without using actual rear speakers.

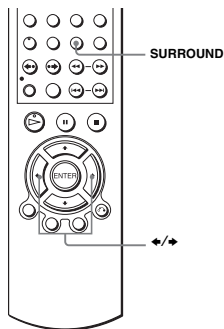

1 Press SURROUND during playback.

2 Press \leftarrow/\rightarrow repeatedly to select "Surround1," "Surround2," "Surround3." Surround effect increases as shown below.

Surround1

Surround2

Surround3

: Virtual speaker

continued

To cancel the setting


Select "Off" in step 2.

Notes

- When the playing signal does not contain a signal for the rear speakers, the surround effects will be difficult to hear.
- When you activate the surround effect, turn off the surround setting of the connected TV or amplifier (receiver).
- Make sure that your listening position is between and at an equal distance from your speakers, and that the speakers are located in similar surroundings.
- If you use the DIGITAL AUDIO OUT (OPTICAL or COAXIAL) jack and set "Dolby Digital" to "Dolby Digital" or "DTS" to "On" in "AUDIO SETUP" menu (page 65), sound will come from your speakers but it will not have the surround effect.
- If you activate the surround effect, the sampling frequency is converted to 48kHz/16bit.

Playing an MP3 audio track DATA-CD

You can play back DATA CDs (CD-ROMs/CD-Rs/CD-RWs) recorded in MP3 (MPEG1 Audio Layer 3) format.

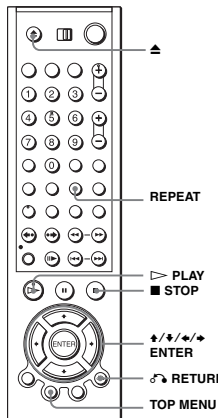

- Press **▲** and place a DATA CD on the disc tray, then press **▲** to close the tray.
 When you load a DATA CD which contains MP3 audio tracks and JPEG image files, "Select a Media Type" menu appears.
 If you load a DATA CD which contains only MP3 audio files, the MP3 display appears. Then you can skip step 2.



DVD Additional Operations

continued

- Press **▲/▼** to select "MP3", then press **ENTER**.
 The first track starts playing. Press **■ STOP** if necessary.

Repeat mode
 Elapsed playing time
- Press **↵ RETURN**, then press **▲/▼** to select the desired directory in the left column, then press **ENTER**.
- Press **▲/▼** to select the desired track in the right column, then press **ENTER**.
 The selected track starts playing.
 When a track or album is being played, the title is shown in a box. The playing track number appears on the display window.

To stop play

Press **■ STOP**.

To repeat play

Press **REPEAT** repeatedly during playback to change the repeat mode.

- FILE: repeats the current track (file).
- DIR: repeats the current album (directory).
- DISC: repeats the current disc.

To go to the next or previous page

Press **▶** or **◀**.

To return to the previous display

Press **↵ RETURN**.

To return to the "Select a Media Type" menu

Press **■ STOP** twice, then press **TOP MENU**.

To turn off the display

Press **■ STOP** twice, then press **↵ RETURN** repeatedly.

Notes

- Only the letters in the alphabet and numbers can be used for album or track names. Anything else is displayed as an asterisk.
- Up to 12 alphanumeric characters can be displayed for album or track names.
- ID3 tags cannot be displayed.

About MP3 audio tracks

You can play MP3 audio tracks on CD-ROMs, CD-Rs, or CD-RWs. However, the discs must be recorded according to ISO9660 level 1 or level 2 format for the player to recognize the tracks.

You can also play discs recorded in Multi Session.

See the instructions of the CD-R/RW device or recording software (not supplied) for details on the recording format.

To play a Multi Session CD

This player can play Multi Session CDs when an MP3 audio track is located in the first session. Any subsequent MP3 audio tracks, recorded in the later sessions, can also be played back. When audio tracks and images in music CD format or video CD format are recorded in the first session, only the first session will be played back.

Notes

- If you put the extension ".MP3" to data not in MP3 format, the player cannot recognize the data properly and will generate a loud noise which could damage your speaker system.
- The player cannot play audio tracks in MP3PRO format.
- This player supports MP3 audio tracks recorded with a bit rate of 128 kbps and a sampling frequency of 44.1 kHz. Attempting to play MP3 audio tracks recorded with different specifications may result in loud noise, sound skipping or speaker damage.
- Depending on the disc contents, playback may take some time to start.

DVD Additional Operations


continued

The Playback order of MP3 audio tracks

The playback order of albums and tracks recorded on a DATA CD is as follows.

- Structure of disc contents

Tree 1 Tree 2 Tree 3 Tree 4 Tree 5

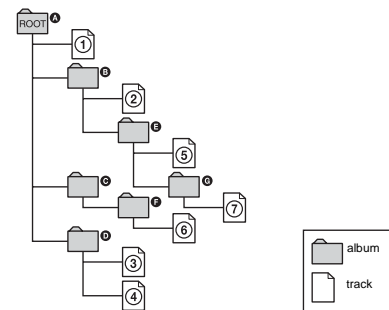

When you insert a DATA CD and press **▶ PLAY**, the numbered tracks are played sequentially, from ① through ⑦. Any sub-albums/tracks contained within a currently selected album does not take priority over the next album in the same tree. (Example: ⑤ contains ⑥ but ⑥ is played before ⑦.)

When you press **↵ RETURN** and the list of MP3 albums appears (page 90), the albums are arranged in the following order: ① → ② → ③ → ④ → ⑤ → ⑥. Albums that do not contain tracks (such as album ③) do not appear in the list.

Tips


- If you add numbers (01, 02, 03, etc.) to the front of the track file names, the tracks will be played in that order.
- A disc with many trees takes longer to start playback. Some discs with many trees cannot be played back.

Notes

- Depending on the software you use to create the DATA CD, the playback order may differ from the illustration above.
- The playback order above may not be applicable if there are more than a total of 1000 albums and tracks in the DATA CD.
- A total of up to 999 files can be recognized for discs that contain both MP3 and JPEG files. Files are recognized in the order that they were recorded. For example, if 990 JPEG files are recorded then 100 MP3 files are recorded, the 990 JPEG files recorded first and only the first 9 MP3 files can be recognized.
- Depending on the disc contents, playback may take some time to start.

Playing JPEG image files **DATA-CD**

You can play JPEG image files on DATA CDs (CD-ROMs/CD-Rs/CD-RWs).

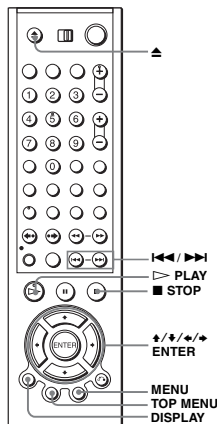


DVD Additional Operations

- Press **▲** and place a DATA CD on the disc tray, then press **▲** to close the tray.


When you load a DATA CD which contains MP3 audio tracks and JPEG image files, "Select a Media Type" menu appears.

If you load a DATA CD which contains only JPEG image files, the "Album" display appears. Then you can skip step 2.


- Press **▲/▼/◀/▶** to select "JPEG", then press ENTER.

The "Album" display will appear.

If you do not press ENTER after selecting a media type, the selected media will be automatically played.



continued

Playing JPEG image files | 93

To enjoy the Slide show

- Press **▲/▼/◀/▶** to select an image in the "Album" display, then press ENTER.
- Press **▲/▼** to select "Interval", then press ENTER. The "Interval" menu appears.
- Press **▲/▼** to select the desired play speed, then press ENTER. Slide show starts.



To turn on/off the menu in the single image display

Press CLEAR to turn off the menu. Press **◀** or **▶** to turn on the menu.

To return to the "Album" display

Press MENU to return to the "Album" display. Press **◀◀** repeatedly to return to the first "Album" page.

To return to the "Select a Media Type" menu

Press **■** STOP twice, then press TOP MENU.

Notes

- Slide show can play in only one direction.
- You cannot rotate or zoom in the image during Slide show.
- If you select "Interval" in the rotated image display, the images in the "Album" display will not be rotated. But if you start the slide show, the images will be rotated. Correct the rotation in the "Interval" menu.

About JPEG image files

You can play JPEG image files on CD-ROMs, CD-Rs, or CD-RWs. However, the discs must be recorded according to ISO9660 level 1 or level 2 for the player to recognize the files.

You can also play discs recorded in Multi Session.

See the instructions of the CD-R/RW device or recording software (not supplied) for details on the recording format.

Note

- A total of up to 999 files can be recognized for discs that contain both MP3 and JPEG files. Files are recognized in the order that they were recorded. For example, if 990 JPEG files are recorded then 100 MP3 files are recorded, the 990 JPEG files recorded first and only the first 9 MP3 files can be recognized.

continued

Playing JPEG image files | 95

- Press **◀◀/▶▶** to select the next/previous album page, then press **▲/▼/◀/▶** to select an image in the "Album" display.


To display the selected image

- Press ENTER. The selected image number appears in the display window.
- To display the next/previous image, press **◀◀/▶▶**.



To play the Slide show

- Press **▶** PLAY. You can also play the Slide show using the menu on the selected image. For details, see "To enjoy the Slide show" on page 95.
- Press **▲/▼** to select the desired playing speed on the "Interval" menu, then press ENTER. Slide show starts from the selected image.

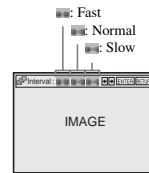

To rotate the selected image

- Press **▲/▼/◀/▶** to select an image in the "Album" display, then press ENTER.
- Press **▲/▼** to select "Interval", then press ENTER. Each time you press ENTER, the image turns clockwise by 90°.



To zoom in an image

- Press **▲/▼/◀/▶** to select an image in the "Album" display, then press ENTER.
- Press **▲/▼** to select "Interval", then press ENTER. "Interval" appears.
- Press **▲/▼/◀/▶** to move "Interval" to the position where you want to zoom in.
- Press ENTER repeatedly to change the magnification. Each time you press ENTER, the magnification changes as shown below. 2x → normal magnification



To play a Multi Session CD

This player can play Multi Session CDs when a JPEG image file is located in the first session. Any subsequent JPEG image files, recorded in the later sessions, can also be played back. When audio tracks and images in music CD format or video CD format are recorded in the first session, only the first session will be played back.

Notes

- The system can play the extension "JPG" or "JPEG."
- Some CD-Rs or CD-RWs cannot be played on this system depending on file format.
- If you add the extension "JPG" or "JPEG" to data not in JPEG format, "Can not Display" will appear.
- Depending on the disc or the size of image files, playback may take some time to start.
- Progressive and lossless compression JPEG image files are not supported.
- The image size that can be displayed is limited. You can display the following images: width 32 - 7680 pixels by height 32 - 8192 pixels.

Tip


- If you add numbers (01, 02, 03, etc.) to the front of the file names, the files will be played in that order.

DVD Additional Operations

94 | Playing JPEG image files

Playing VIDEO CDs with "PBC ON/OFF" Functions VCD

The PBC (Playback control) function allows you to search and perform other operations interactively. PBC playback follows a selection menu displayed on your TV screen.

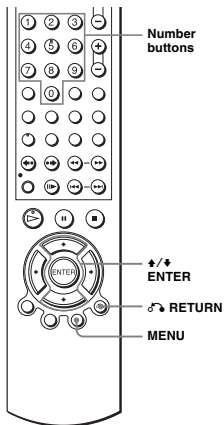

DVD Additional Operations

- 1 Press MENU to select "PBC ON." The menu for your selection appears.
- 2 Press $\blacktriangle/\blacktriangledown$ to select the item number you want. You can also use the number buttons to select the item number and track.


continued

Playing VIDEO CDs with "PBC ON/OFF" Functions | 97


VCR Additional Operations

Quick Timer Recording VHS

After you have started recording, you can have the VCR stop recording automatically after a specified duration.

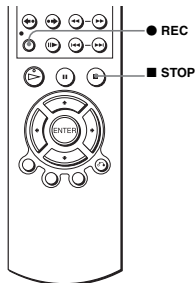

- 1 While recording, press \bullet REC.
- 2 Press \bullet REC repeatedly to set the duration time. Each press advances the time as follows.



The tape counter decreases minute by minute to 0:00, then the VCR stops recording.

To extend the duration

Press \bullet REC repeatedly to set a new duration time.

To cancel the duration

Press \bullet REC repeatedly until the \odot indicator disappears and the VCR returns to normal recording mode.

To stop while recording

Press \blacksquare STOP.

Note

- You cannot display the current tape time in the display window when setting the recording duration time.

VCR Additional Operations

Quick Timer Recording | 99

3



Press ENTER.

4

Follow the instructions in the menu for interactive operations. Refer to the instructions supplied with the disc, as the operating procedure may differ depending on the VIDEO CD.

To return to the menu

Press \curvearrowright RETURN.

To play using "PBC OFF"

Press MENU to select "PBC OFF."

When "PBC OFF" is selected, the DVD player starts continuous play. You cannot play still pictures such as a menu.

To return to "PBC ON," press MENU to select "PBC ON."

Note

- Depending on the VIDEO CD, "Press ENTER" in step 3 may appear as "Press SELECT" in the instructions supplied with the disc. In this case, press \triangleright PLAY.

98 | Playing VIDEO CDs with "PBC ON/OFF" Functions

Recording stereo and bilingual programs VHS

VHS

Recording stereo programs

When you receive a program broadcast in stereo, press AUDIO to display "Hi-Fi" on the TV screen. You can also select "Left," "Right," or "Mono." If there is noise in the stereo program, select "Mono." The sound will be recorded in monaural (on both hi-fi and normal audio tracks) but with less noise.

Recording bilingual programs

Press AUDIO to display "SAP" on the TV screen. When a SAP (Second Audio Program) is received, "SAP" appears on the TV screen. When "MAIN" is selected, the VCR records only the main sound.


Selecting the sound during playback

During playback, press AUDIO to select the sound you want.

To listen to	On-screen display	Display window
Stereo	Hi-Fi	STEREO indicator
Left channel	Left	STEREO indicator
Right channel	Right	STEREO indicator
Monaural sound on the normal audio track	Mono	No indicator

How sound is recorded on a video tape

The VCR records sound onto two separate tracks. Hi-fi audio is recorded onto the main track along with the picture. Monaural sound is recorded onto the normal audio track along the edge of the tape.

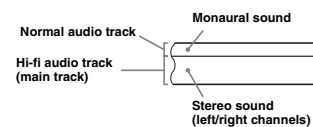


Notes

- To play a tape in stereo, you must use the A/V connections.
- When you play a tape recorded in monaural, the sound is heard in monaural regardless of the AUDIO setting.

100 | Recording stereo and bilingual programs

Searching using various functions **VHS**

The VCR automatically marks the tape with an index signal at the point where each recording begins. You can easily find a specific point using various search functions.

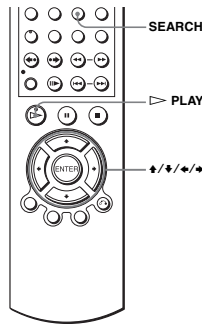


To search using the index function (Scan and Play)

The VCR automatically marks the tape with an index signal at the point where each recording begins. Use these signals as references to find a specific recording.

1 Insert an indexed tape into the VCR.

2 Press SEARCH.



3 Press \blacktriangleright to scan ahead, or \blacktriangleleft to scan backwards.

The VCR searches and then plays back for about five seconds.

4 Press \blacktriangleright PLAY to view that program.

If you do not press \blacktriangleright PLAY, the VCR automatically searches for the next index mark, or until it reaches the end of the tape.



VCR Additional Operations

continued

Searching using various functions | 101


To search for the counter 0:00:00 point

To mark a point on the tape that you want to find later, reset the tape counter to "0:00:00." The VCR automatically fast-forwards or rewinds to the 0:00:00 point on the tape counter.

1 Press SEARCH.

2 Press \blacktriangleleft .

The VCR starts searching and automatically stops at the 0:00:00 point.




To search for a blank portion of the tape

The VCR automatically searches for the beginning of a blank portion. You can easily find a point you can start recording from.

1 Press SEARCH.

2 Press \blacktriangleleft .

The VCR starts searching and automatically stops at the beginning of a blank space. If no blank space is found, the VCR reaches the end.



Note

- Once in recording mode, if the VCR is put in pause and then released to start the recording, no index mark will be inserted. An index mark will be inserted if the channel is changed while VCR is put in pause.

102 | Searching using various functions

Adjusting the picture (tracking) **VHS**

Although the VCR automatically adjusts the tracking when playing a tape, distortion may occur if the recording is in poor condition. In this case, manually adjust the tracking.

Press TRACKING +/- to display the tracking meter. The distortion should disappear as you press one of the two tracking buttons.

To resume automatic tracking adjustment, eject the tape and reinsert it.



Tracking meter

Note


- The auto tracking adjustment cannot be guaranteed to work with tapes recorded in the LP mode on other VCRs.

VCR Additional Operations


Adjusting the picture (tracking) | 103

Changing menu options **VHS**


You can change the tape length, auto play and auto repeat settings. Normally the default settings are used. Change these settings if necessary.

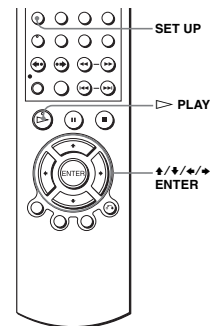


1 Press SET UP when the DVD player is in stop mode.




2 Press \blacktriangleleft / \blacktriangleright to select VIDEO and press ENTER.




3 Press \blacktriangleleft / \blacktriangleright to select the option to change.



104 | Changing menu options

- 4 Press $\blacktriangle/\blacktriangleright$ to change the setting.
- 

- 5 SET UP Press SET UP to exit the menu.
- 


Menu choices

The default settings are indicated in bold print.

Menu option	Set this option to
Tape Length	<ul style="list-style-type: none"> • T-120 when using a T-120 or shorter length tape. • T-160 when using a T-160 length tape. • T-180 when using a T-180 or longer length tape.
Auto Play	<ul style="list-style-type: none"> • On to start playback automatically, when you insert a tape with its safety tab removed. • Off to turn off Auto play. You need to press \blacktriangleright PLAY to start playback, even if you insert a tape with its safety tab removed.
Auto Repeat	<ul style="list-style-type: none"> • On to play back a tape repeatedly. The VCR rewinds a tape to the beginning and restarts playback automatically. • Off to turn off Auto repeat.

Editing with another VCR VHS

How to connect to record on this VCR

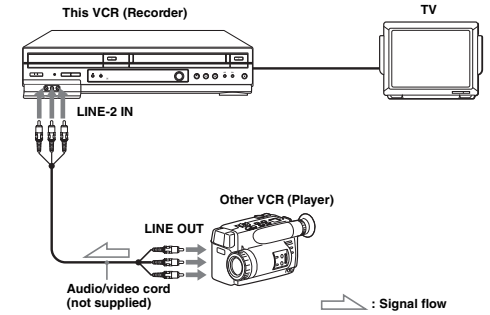


Notes

- Make sure you connect the plugs to jacks of the same color.
- If the other VCR is a monaural type and connected to this VCR's LINE-2 IN jacks, connect the audio plug to the AUDIO L (white) jack. The sound is recorded on both right and left channels. If you connect to the AUDIO R (red) jack, the sound is recorded only on the right channel.
- If you connected this VCR to both the LINE IN and LINE OUT jacks of the other VCR, select the input correctly to prevent a humming noise.
- You can use the LINE IN 1 jacks for editing. If the other VCR is a monaural type the sound is recorded only on the channel whose jack is connected to the audio plug. To record on both right and left channels, connect the audio plugs to the AUDIO L/R jacks using an audio/video cord (not supplied).

Operation (when recording on this VCR)

Before you start editing

- Turn on the VCR and the TV and set it to the video channel.
- Press INPUT SELECT to display "LINE 1" or "LINE 2" in the display window.
- Press SP/EP to select the tape speed, SP or EP.

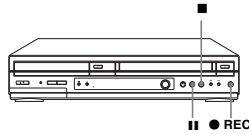

- 1 Insert a source tape with its safety tab removed into the other (playback) VCR. Search for the point to start playback and set it to playback pause.
- 2 Insert a tape into this (recording) VCR. Search for the point to start recording and press **II**.
- 3 Press **● REC** on this VCR to set it to recording pause.
- 4 To start editing, press the **II** (pause) buttons on both VCRs at the same time.

To stop editing


Press the **■** (stop) buttons on both VCRs.

Tip


- To cut out unwanted scenes while editing, press **II** on this VCR when an unwanted scene begins. When it ends, press **II** again to resume recording.

Additional Information


General setup information

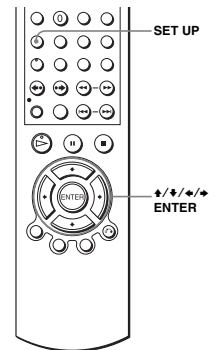

- 1 SET UP Press SET UP when the DVD player is in stop mode, then press $\blacktriangle/\blacktriangleright$ to select (OPTION), then press ENTER.



- 2 Press $\blacktriangle/\blacktriangleright$ to select the option to change.



- 3 Press $\blacktriangle/\blacktriangleright$ to change the setting. When changing the "RF Output Channel," confirmation messages will appear. Press ENTER to confirm the messages.



4 SET UP Press SET UP to exit the menu.



Menu choices

The default settings are indicated in bold print.

Menu option	Set this option to
Auto Power Off	<ul style="list-style-type: none"> • "Off" to deactivate the Auto Power Off function. • "1Hr"/"2Hr" to turn the DVD-VCR off automatically if no signal is received and you do not press any of the buttons during this time.
RF Output Channel	<ul style="list-style-type: none"> • "3CH" when using channel 3 to receive the VCR signal. • "4CH" when using channel 4 to receive the VCR signal. For details, see page 110.


Additional Information

continued

General setup information | 109

Setting the RF Output channel


When connecting the DVD-VCR to the TV using only the antenna cable, you must set the RF Output channel in the "OPTION SETUP" menu so that the TV can receive the correct signal from the DVD-VCR.

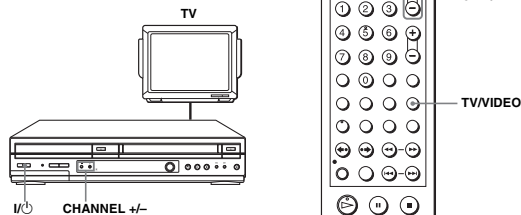

- 1 Set the RF Output channel to "3CH" or "4CH" (see page 108 to set the channel), whichever channel is not used in your area. If both are used, set the switch to either channel.
- 2 Press I/II to turn on the DVD-VCR.
- 3 Press TV/VIDEO to turn on "VIDEO" in the DVD-VCR's display window.
- 4 Press CH +/- to display a channel number in the display window. Select an active channel number in your area.
- 5 Turn on your TV and set it to the channel you selected in step 1 (3CH or 4CH). The channel you selected in step 4 appears on the TV screen. If the channels change when you press CH +/-, you have made the correct setting. Whenever you use the DVD-VCR, set the TV to the channel selected in step 1.

Attaching the external antenna connector


When using a 300-ohm twin lead cable for a VHF/UHF antenna, use an antenna connector (not supplied) to connect the antenna to the DVD-VCR.



- 1 Loosen the screws on the antenna connector.
- 2 Wind the twin leads around the screws on the antenna connector.
- 3 Retighten the screws.

Attaching a VHF/UHF band mixer

When using both a 75-ohm coaxial cable and a 300-ohm twin lead cable for a VHF/UHF antenna, use a VHF/UHF band separator/mixer (not supplied) to connect the antenna to the DVD-VCR.

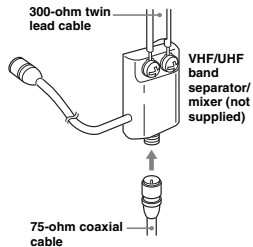

- 1 Loosen the screws on the mixer.
- 2 Wind the twin leads around the screws on the mixer.
- 3 Retighten the screws.
- 4 Connect the 75-ohm coaxial cable to the mixer.

Additional Information

General setup information | 111

110 | General setup information

Troubleshooting

If you have any questions or problems not covered below, please consult your nearest Sony dealer. (For customers in USA)

General Troubleshooting

	Symptom	Remedy
Power	The I/II switch does not function.	• Connect the AC power cord securely.
	The power is turned on but the DVD-VCR does not operate.	• Moisture condensation has occurred. Turn the power off, unplug the AC power cord and leave the DVD-VCR to dry for over three hours.
Clock	The clock has stopped and "--:--" appears in the display window.	• The clock stops if the DVD-VCR is disconnected from the wall outlet. Reset the clock (and timer).
Others	The remote commander does not function.	<ul style="list-style-type: none"> • Make sure you are pointing the remote commander at the remote sensor on the DVD-VCR. • Replace all the batteries in the remote commander with new ones if they are weak. • Make sure the TV / DVD-VIDEO switch is set correctly. • Select correctly VIDEO or DVD with the SELECT DVD/VIDEO button.
	The tracking meter does not appear on the screen.	• The recording condition of the tape is very poor and tracking cannot be adjusted.
	You cannot control other TVs.	• Set your TV's code number. The code number may change when you replace the batteries of the remote commander.

112 | Troubleshooting

DVD Troubleshooting

	Symptom	Remedy
Picture	There is no picture/picture noise appears.	<ul style="list-style-type: none"> Re-connect the connecting cord securely. The connecting cords are damaged. Check the connection to your TV (page 13) and switch the input selector on your TV so that the signal from the player appears on the TV screen. The disc is dirty or flawed. If the picture output from your player goes through your VCR to get to your TV or if you are connected to a combination TV/VIDEO player, the copy-protection signal applied to some DVD programs could affect picture quality. If you still experience problems even when you connect your player directly to your TV, please try connecting your player to your TV's S-VIDEO input (page 63). You have set the player to progressive format (the PROGRESSIVE indicator lights up in orange) even though your TV cannot accept the progressive signal. In this case, set "Progressive" to "Off" (page 69). Even if your TV is compatible with progressive format (480p) signals, the image may be affected when you set the player to progressive format. In this case, set "Progressive" to "Off" and the player is set to normal (interlace) format (page 67). COMPONENT VIDEO OUT jack is not used or "Progressive" of the "SCREEN SETUP" menu is not set correctly while the PROGRESSIVE indicator lights up in orange. Check the setting (page 67) and connection (page 64).
	Even though you set the aspect ratio in "TV Type" of the "SCREEN SETUP" menu the picture does not fill the screen.	<ul style="list-style-type: none"> The aspect ratio of the disc is fixed on your DVD.
	There is no picture from your VCR connected to the LINE IN jacks.	<ul style="list-style-type: none"> The DVD player must be in standby mode to view pictures from your VCR.
Sound	There is no sound.	<ul style="list-style-type: none"> Re-connect the connecting cord securely. The connecting cord is damaged. The player is connected to the wrong input jack on the amplifier (receiver) (page 14). The amplifier (receiver) input is not correctly set. The player is in pause mode or in Slow-motion Play mode. The player is in fast forward or fast reverse mode. If the audio signal does not come through the DIGITAL AUDIO OUT (OPTICAL or COAXIAL) jack, check the audio settings (page 65).
	Sound is noisy.	<ul style="list-style-type: none"> When playing a CD with DTS sound tracks, noise will come from the LINE OUT L/R (AUDIO) jacks (page 36) or DIGITAL AUDIO OUT (OPTICAL or COAXIAL) jack.
	The sound volume is low.	<ul style="list-style-type: none"> The sound volume is low on some DVDs. The sound volume may improve if you set "Audio DRC" to "TV Mode" (page 66).

Additional Information

continued

	Symptom	Remedy
Operation	The disc does not play.	<ul style="list-style-type: none"> The disc is turned over. Insert the disc with the playback side facing down on the disc tray. The disc is skewed. The player cannot play certain discs (page 6). The region code on the DVD does not match the player. Moisture has condensed inside the player (page 3). The player cannot play CD-Rs, CD-RWs, or DVD-Rs that are not finalized (page 7). Make sure the TV / DVD-VIDEO switch is set correctly. Select correctly VIDEO or DVD with SELECT DVD/VIDEO button.
	The MP3 audio track cannot be played (page 89).	<ul style="list-style-type: none"> The DATA CD is not recorded in the MP3 format that conforms to ISO9660 Level 1/Level 2. The MP3 audio track does not have the extension ".MP3." The data is not formatted in MP3 even though it has the extension ".MP3." The data is not MPEG1 Audio Layer 3 data. The player cannot play audio tracks in MP3PRO format.
	The JPEG image file cannot be played.	<ul style="list-style-type: none"> The DATA CD is not recorded in JPEG format that conforms to ISO9660 Level 1/Level 2. The JPEG image file does not have the extension ".JPG" or ".JPEG." The data is not formatted in JPEG even though it has the extension ".JPG" or ".JPEG." Length or width of the image is more than 4720 dots.
	The title of the MP3 audio album/track or JPEG image album/file is not correctly displayed.	<ul style="list-style-type: none"> The player can only display numbers and alphabet. Other characters are displayed as asterisks.
	The disc does not start playing from the beginning.	<ul style="list-style-type: none"> Program play, shuffle play, or repeat play, has been selected (pages 81, 83, 84). Resume play has taken effect (page 35).
	The player starts playing the disc automatically.	<ul style="list-style-type: none"> The disc features an auto playback function.
	Playback stops automatically.	<ul style="list-style-type: none"> While playing discs with an auto pause signal, the player stops playback at the auto pause signal.
	You cannot perform some functions such as stop, search, slow-motion play, repeat play, shuffle play, or program play.	<ul style="list-style-type: none"> Depending on the disc, you may not be able to do some operations. See the operating manual that comes with the disc.

	Symptom	Remedy
Operation	The language for the sound track cannot be changed.	<ul style="list-style-type: none"> Try using the DVD's menu instead of the direct selection button on the remote (page 76). Multilingual tracks are not recorded on the DVD being played. The DVD prohibits the changing of the language for the sound track.
	The subtitle language cannot be changed or turned off.	<ul style="list-style-type: none"> Try using the DVD's menu instead of the direct selection button on the remote (page 76). Multilingual subtitles are not recorded on the DVD being played. The DVD prohibits the changing of the subtitles.
	The angles cannot be changed.	<ul style="list-style-type: none"> Try using the DVD's menu instead of the direct selection button on the remote (page 76). Multi-angles are not recorded on the DVD being played. The DVD prohibits changing of the angles.
	The player does not operate properly.	<ul style="list-style-type: none"> When static electricity, etc., causes the player to operate abnormally, unplug the player.

VCR Troubleshooting





	Symptom	Remedy
Playback	The playback picture does not appear on the TV screen.	<ul style="list-style-type: none"> Make sure the TV is set to the channel for the VCR. If you are using a monitor, set it to video input.
	The picture is not clear.	<ul style="list-style-type: none"> Adjust the tracking with the TRACKING +/- buttons. The video heads are dirty (see the last page of "Troubleshooting"). Clean the video heads using a Sony video head cleaning cassette. If a Sony cleaning cassette is not available in your area, have the heads cleaned at your nearest Sony dealer (a standard service fee will be charged). Do not use a commercially available liquid type cleaning cassette, as it may damage the video heads. The video heads may have to be replaced. Consult your local Sony dealer for more information.
	The picture rolls vertically during picture search.	<ul style="list-style-type: none"> Adjust the vertical hold control on the TV or monitor.
	The picture has no sound.	<ul style="list-style-type: none"> The tape is defective. If you made A/V connections, check the audio cord connection.
Recording	A TV program does not appear on the TV screen.	<ul style="list-style-type: none"> Make sure the TV is set to the channel for the VCR. If you are using a monitor, set it to video input. Select the correct source with the INPUT SELECT or CH +/- buttons. Select a channel number when recording TV programs; select "L1" or "L2" when recording from other equipment.
	TV reception is poor.	<ul style="list-style-type: none"> Adjust the TV antenna.

Additional Information

continued

	Symptom	Remedy
Recording	The tape starts playing as soon as it is inserted.	<ul style="list-style-type: none"> The safety tab has been removed. To record on this tape, cover the tab hole.
	The tape is ejected when you press ● REC.	<ul style="list-style-type: none"> Check that the safety tab has not been removed.
	Nothing happens when you press ● REC.	<ul style="list-style-type: none"> Make sure the tape is not at its end.
Timer recording	The timer does not operate.	<ul style="list-style-type: none"> Check that the clock is set. Make sure a tape has been inserted. Check that the safety tab has not been removed. Make sure the tape is not at its end. Make sure a program has been set for timer recording. Make sure your timer settings are past the current time. Check that the cable box is turned on. The clock stops if the DVD-VCR is disconnected from the wall outlet for more than one minute. Reset the clock and timer. Turn the power off and unplug the AC power cord.
	A tape cannot be inserted.	<ul style="list-style-type: none"> Check that a tape is not already in the tape compartment.
Others	The VCR mechanism needs to be cleaned.	<ul style="list-style-type: none"> Clean the cabinet, panel and controls with a dry, soft cloth, or a soft cloth slightly moistened with a mild detergent solution. Do not use any type of solvent, such as alcohol or benzine.
	Control by AV mouse is not possible.	<ul style="list-style-type: none"> The unit is not compatible with satellite TV receiver AV mouse, etc.

Symptoms caused by contaminated video heads

• Normal picture	• Rough picture	• Unclear picture	• No picture (or black & white screen appears)
			
	initial contamination		terminal

Glossary

Chapter (page 37)

Sections of a picture or a music feature that are smaller than titles. A title is composed of several chapters. Depending on the disc, no chapters may be recorded.

Dolby Digital (pages 61 and 66)

Digital audio compression technology developed by Dolby Laboratories. This technology conforms to 5.1-channel surround sound. The rear channel is stereo and there is a discrete subwoofer channel in this format. Dolby Digital provides the same 5.1 discrete channels of high quality digital audio found in Dolby Digital cinema audio systems. Good channel separation is realized because all of the channel data are recorded discretely and little deterioration is realized because all channel data processing is digital.

Dolby Surround (Pro Logic) (page 61)

Audio signal processing technology that Dolby Laboratories developed for surround sound. When the input signal contains a surround component, the Pro Logic process outputs the front, center and rear signals. The rear channel is monaural.

DTS (page 66)

Digital audio compression technology that Digital Theater Systems, Inc. developed. This technology conforms to 5.1-channel surround sound. The rear channel is stereo and there is a discrete subwoofer channel in this format. DTS provides the same 5.1 discrete channels of high quality digital audio.

Good channel separation is realized because all of the channel data is recorded discretely and little deterioration is realized because all channel data processing is digital.

DVD (page 6)

A disc that contains up to 8 hours of moving pictures even though its diameter is the same as a CD.

The data capacity of a single-layer and single-sided DVD is 4.7 GB (Giga Byte), which is 7 times that of a CD. The data capacity of a double-layer and single-sided DVD is 8.5 GB, a single-layer and double-sided DVD is 9.4 GB, and double-layer and double-sided DVD is 17GB.

The picture data uses the MPEG 2 format, one of the worldwide standards of digital compression technology. The picture data is compressed to about 1/40 (average) of its original size. The DVD also uses a variable rate coding technology that changes the data to be allocated according to the status of the picture. Audio information is recorded in a multi-channel format, such as Dolby Digital, allowing you to enjoy a more real audio presence.

Furthermore, various advanced functions such as the multi-angle, multilingual, and Parental Control functions are provided with the DVD.

DVD-RW (page 6)

A DVD-RW is a recordable and rewritable disc that is the same size as a DVD VIDEO. The DVD-RW has two different modes: VR mode and Video mode. DVD-RWs created in Video mode have the same format as a DVD VIDEO, while discs created in VR (Video Recording) mode allow the contents to be programmed or edited.

DVD+RW (page 6)

A DVD+RW (plus RW) is a recordable and rewritable disc. DVD+RWs use a recording format that is comparable to the DVD VIDEO format.

Additional Information

continued

Glossary | 117

Interlace format

Interlace format shows every other line of an image as a single "field" and is the standard method for displaying images on television. The even number field shows the even numbered lines of an image, and the odd numbered field shows the odd numbered lines of an image.

Progressive format (pages 64 and 69)

Compared to the Interlace format that alternately shows every other line of an image (field) to create one frame, the Progressive format shows the entire image at once as a single frame. This means that while the Interlace format can show 30 frames/60 fields in one second, the Progressive format can show 60 frames in one second. The overall picture quality increases and still images, text, and horizontal lines appear sharper. This player is compatible with the 480 progressive format.

Title (page 37)

The longest section of a picture or music feature on a DVD, movie, etc., in video software, or the entire album in audio software.

Track (page 37)

Sections of a picture or a music feature on a CD or VIDEO CD (the length of a song).


118 | Glossary

Index to parts and controls


Refer to the pages indicated in parentheses () for details.

Front panel

SLV-D550P

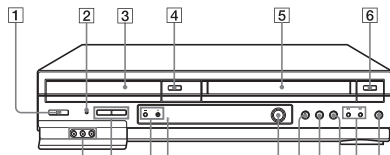

SLV-D350P

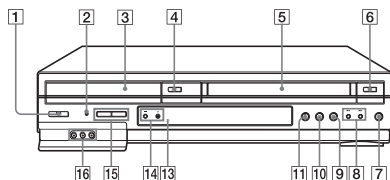


- 1 I/⏻ POWER (on/standby) switch (11) (35) (42)
- 2 PROGRESSIVE indicator (64) (69)
- 3 Disc tray (33)
- 4 ⏏ (open/close) button (33) (34)
- 5 Tape compartment (44)
- 6 ⏏ (eject) button (42)
- 7 ● REC (record) button (45)
- 8 ◀◀ (rewind)/▶▶ (fast-forward) button (35) (42)
- 9 ■ (stop) button (34) (42)
- 10 || (pause) button (34) (42)
- 11 ▷ (play) button*1 (34) (42)
- 12 DIAL TIMER*2 (50)
- 13 📡 Remote sensor (10)
- 14 CHANNEL/TRACKING +/- buttons*1 (44) (103)
- 15 SELECT DVD/VIDEO buttons (10)
- 16 LINE-2 IN VIDEO/AUDIO L/R jacks*3 (106)

*1 ▷ and CHANNEL + buttons have a tactile dot. Use the tactile dot as a reference.

*2 SLV-D550P only

*3 Covered

Display window

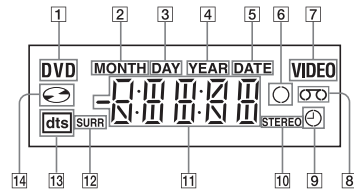


- 1 DVD indicator (34)
- 2 MONTH indicator* (50)
- 3 DAY indicator* (53)
- 4 YEAR indicator* (53)
- 5 DATE indicator* (50)
- 6 Record indicator (45)
- 7 VIDEO indicator (42)
- 8 Tape indicator (42)
- 9 Timer indicator (48)
- 10 STEREO indicator (100)
- 11 Playing time/clock/current status indicator (34) (42)
- 12 SURR (surround) indicator (87)
- 13 DTS indicator (66)
- 14 Disc indicator (34)

* SLV-D550P only

Additional Information

continued

Rear panel

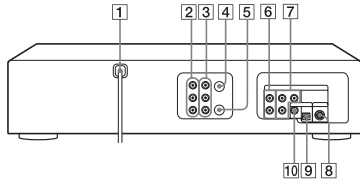


DVD player and VCR

- 1 AC power cord (13) (16)
- 2 LINE IN 1 VIDEO/AUDIO L/R jacks (106)
- 3 LINE OUT VIDEO/AUDIO L/R jacks (14)
- 4 IN (FROM ANT.) connector (15)
- 5 OUT (TO TV) connector (15)

DVD player only

- 6 LINE OUT AUDIO L/R jacks (63)
- 7 COMPONENT VIDEO OUT Pr/Pb/Y jacks (64)
- 8 S-VIDEO OUT jack (63)
- 9 DIGITAL AUDIO OUT/OPTICAL jack (62)
- 10 DIGITAL AUDIO OUT/COAXIAL jack (62)

Remote commander for DVD

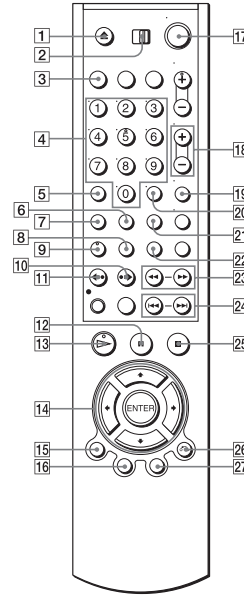


- 1 ▲ (open/close) button (33) (34)
- 2 TV / DVD-VIDEO switch (10)
- 3 SELECT DVD button (10)
- 4 Number buttons*1 (29)
- 5 CLEAR button (43) (48) (82)
- 6 ANGLE button (79)

- 7 SET UP button (20)
- 8 SUBTITLE button (80)
- 9 AUDIO button*1 (86) (100)
- 10 ⏭ SKIP button (34)
- 11 ⏮ REPLAY button (34)
- 12 ⏸ PAUSE button (34)
- 13 ▷ PLAY button*1 (34)
- 14 ⏪/⏩ buttons (20)
ENTER button*2 (20)
- 15 DISPLAY button (37)
- 16 TOP MENU button (76)
- 17 I/⏻ (on/standby) switch (11) (35)
- 18 VOL (volume) +/- buttons (11)
- 19 ZOOM button (78)
- 20 ENTER button*2 (20)
- 21 REPEAT button (81)
- 22 SURROUND button (87)
- 23 ⏮◀▶▶⏩ buttons (34)
- 24 ⏮◀◀◀/▶▶▶▶⏩ NEXT (next) button (34)
- 25 ■ STOP button (34)
- 26 ↶ RETURN button (23)
- 27 MENU button (76)

*1 Number 5, AUDIO and ▷ PLAY buttons have a tactile dot. Use the tactile dot as a reference.
*2 The ENTER buttons 14 and 20 can be used interchangeably.

Additional Information

Remote commander for VIDEO

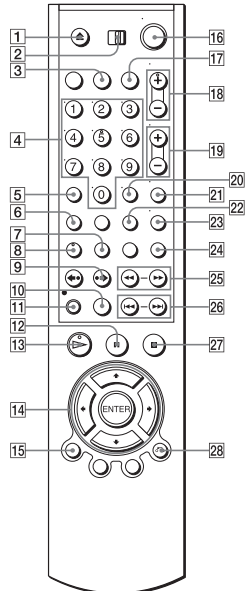

- 1 ▲ (eject) button (42)
- 2 TV / DVD-VIDEO switch (10)
- 3 SELECT VIDEO button (10)
- 4 Number buttons*1 (29)
- 5 CLEAR button (43)
- 6 SET UP button (20)

- 7 TIMER button (47)
- 8 AUDIO button*1 (100)
- 9 ⏭ SKIP button (43)
- 10 SP (Standard Play)/EP (Extended Play) button (45)
- 11 ● REC (record) button (45)
- 12 ⏸ PAUSE button (42)
- 13 ▷ PLAY button*1 (42)
- 14 ⏪/⏩ buttons (20)
ENTER button*2 (20)
- 15 DISPLAY button (43)
- 16 I/⏻ (on/standby) switch (11) (42)
- 17 VCR Plus+ button*3 (55)
- 18 CH (channel)/TRACKING +/- buttons*1 (44) (103)
- 19 VOL (volume) +/- buttons (11)
- 20 ENTER button*2 (20)
- 21 MUTING button (11)
- 22 SEARCH button (101)
- 23 TV/VIDEO button (46)
- 24 INPUT SELECT button (46)
- 25 ◀◀ (rewind)/▶▶ (fast-forward) ▶▶ (slow) buttons (42)
- 26 ⏮◀▶▶⏩ SHUTTLE button (42)
- 27 ■ STOP button (42)
- 28 ↶ RETURN button (56)

*1 Number 5, AUDIO, ▷ PLAY and CH/TRACKING + buttons have a tactile dot. Use the tactile dot as a reference.

*2 The ENTER buttons 14 and 20 can be used interchangeably.

*3 SLV-D550P only

DVD Audio/Subtitle Language

Abbreviation	Language
ARA	Arabic
CHI	Chinese
CRO	Croatian
CZK	Czech
DAN	Danish
DEU	German
ENG	English
ESP	Spanish
FIN	Finish
FRA	French
GRE	Greek
HUN	Hungarian
IDN	Indonesian
IND	Hindi
ISL	Icelandic
ITA	Italian
IWR	Hebrew
JPN	Japanese
KOR	Korean
MAL	Malay
NLD	Dutch
NOR	Norwegian
POL	Polish
POR	Portuguese
RUS	Russian
SVE	Swedish
THA	Thai
TUR	Turkish
VIE	Vietnamese
ZAF	Afrikaans

Additional Information

Index

Numerics

16:9 68
4:3 Letter Box 68
4:3 Pan Scan 68

A

Adjusting
 picture 103
 tracking 103
Angle 79
Antenna hookup 15
Audio track 100
Audio/video (A/V) hookup 14
Auto Clock Set 22

C

Cable hookup 13
Channel line-up chart 30
Cleaning the video heads 115
Clock setting 22
Commercial Skip 42
Connecting
 Cable TV 19
 external antenna connector 111
 VHF/UHF band mixer 111
Counter 43
Custom AV Mode 39

D

DATA CD 6, 89, 93
Demonstration Mode 54
Dial Timer 50
Disabling channels 28
DOLBY DIGITAL 61, 86
DTS 62, 86
Dubbing, *see* Editing
DVD 6

E

Editing 106
EP mode 45

H

Handling discs 8
Hi-fi audio track 100

J

JPEG 6, 93

L

Language selecting 20
LP mode 46

M

Monaural 100
Monitoring audio during playback 100
MP3 6, 89

N

Normal audio track 100

P

Parental Control 73
PBC (Playback control) 97
Picture adjustment 103
Playback
 at various speeds 35, 42
 frame by frame 43
 MP3 audio track 89
 program play 81
 repeat play 84
 selecting the sound 100
 shuffle play 83
 skip 42
 slow motion 35, 43
 VIDEO CDs 97
Presetting channels 26
Program play 81
Progressive 64, 118

R

Recording
 bilingual programs 100
 SAP broadcasts 100
 saving 46
 stereo broadcasts 100
 using the Dial Timer 50
 using the VCR Plus+ system 55
 while watching another program 46, 49
Repeat play 84
RF channel 110

S

Safety tab 46
SAP (Second Audio Program) 100
Searching
 at various speeds 35, 42
 for a blank portion 102
 for the counter 0 point 102
 Scan and Play 101
Shuffle play 83
SP mode 45
STEREO 86
Stereo 100
Subtitle 80

T

Timer setting
 daily/weekly recording 48
 using the Dial Timer 50
 using the VCR Plus+ system 55
Tracking adjustment. *see* Adjusting

U

Usable discs 6

V

VCR Plus+ system
 channel set up 30
 recording 55
VIDEO CD 6, 97

Z

Zoom 78

2. DISASSEMBLY AND REASSEMBLY

2-1 CABINET AND PCB

2-1-1 Cabinet Top Removal

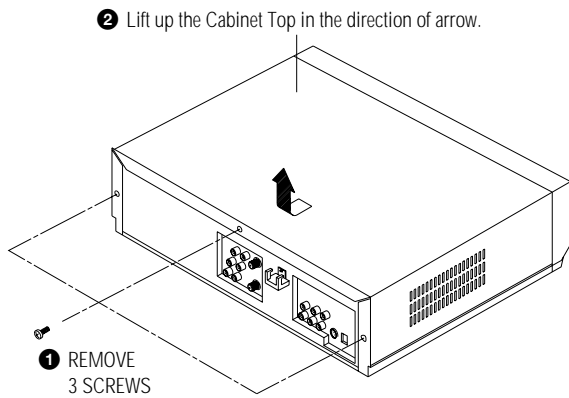


Fig. 2-1 Cabinet Top Removal

2-1-2 Bottom Cover Removal

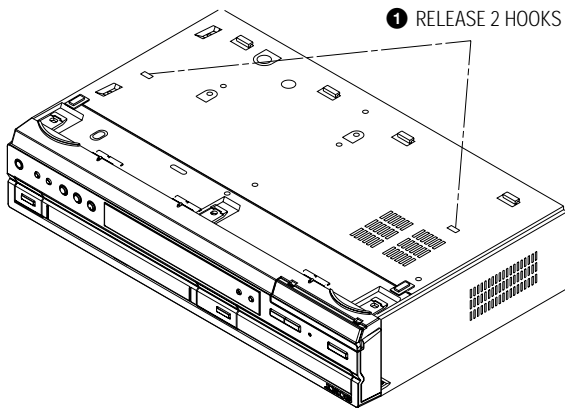


Fig. 2-2 Bottom Cover Removal

2-1-3 Ass'y Front Panel Removal

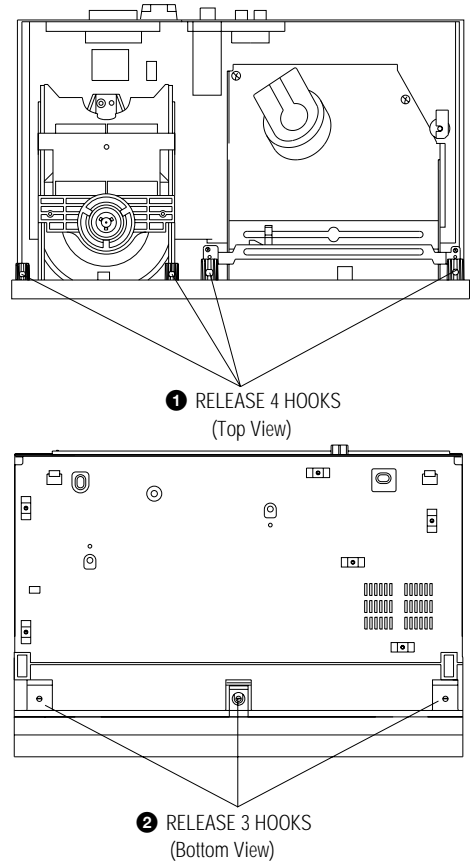


Fig. 2-3 Ass'y Front Panel Removal

2-1-4 Function PCB Removal

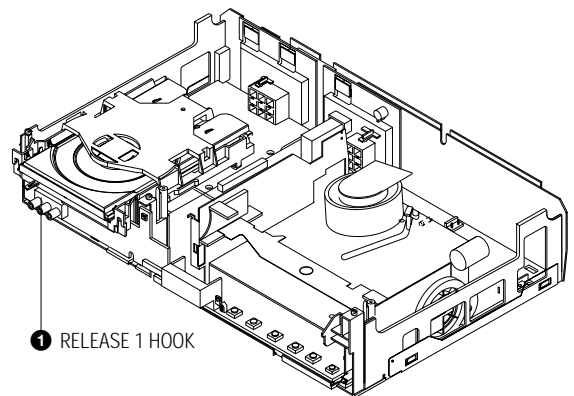


Fig. 2-4 Function PCB Removal

2-1-5 Chassis Removal

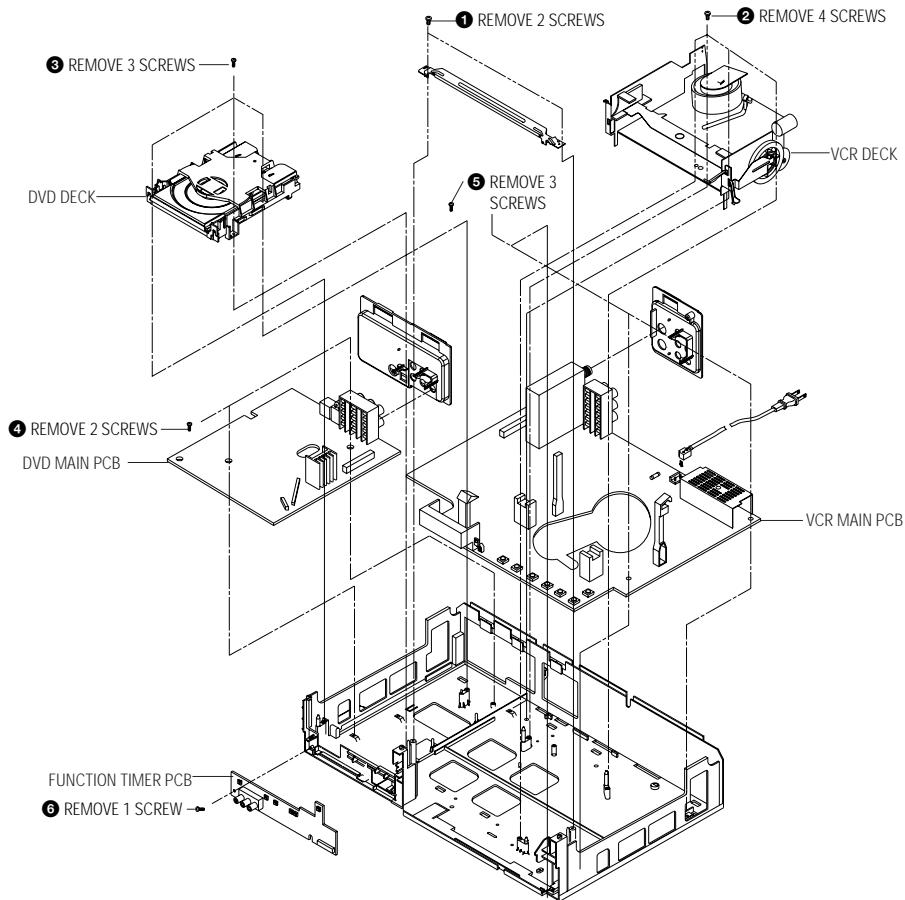


Fig. 2-5 Chassis Removal

2-1-6 VCR Main PCB Removal

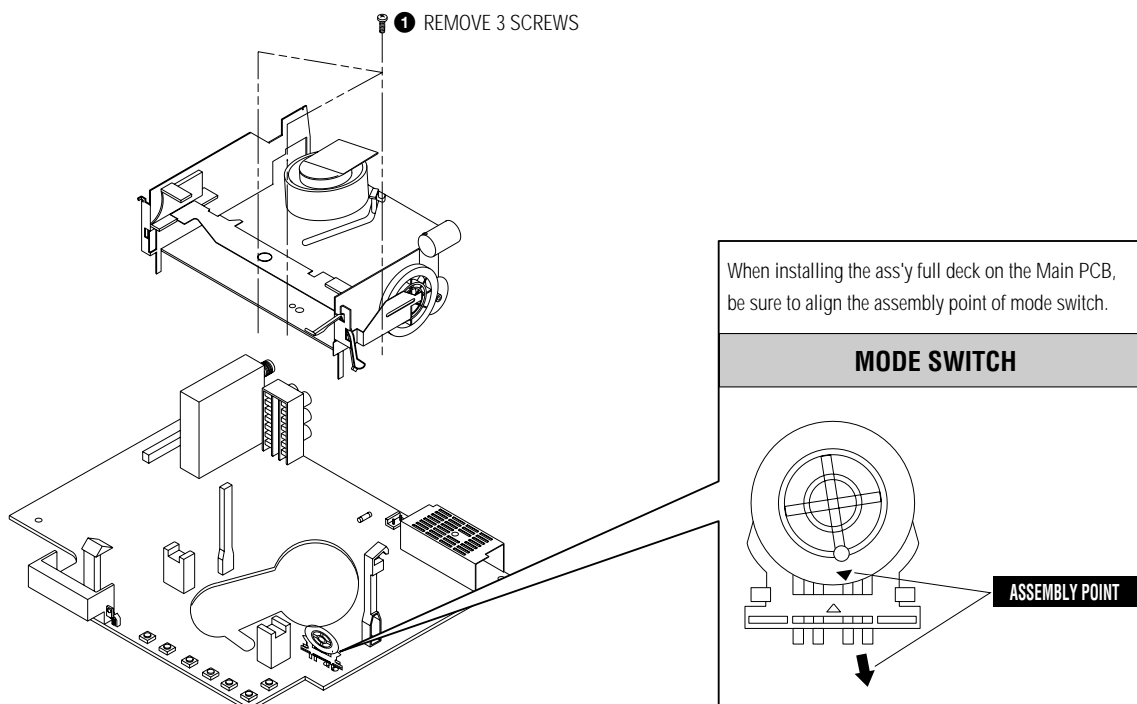


Fig. 2-6 VCR Main PCB Removal

2-2 CIRCUIT BOARD LOCATIONS

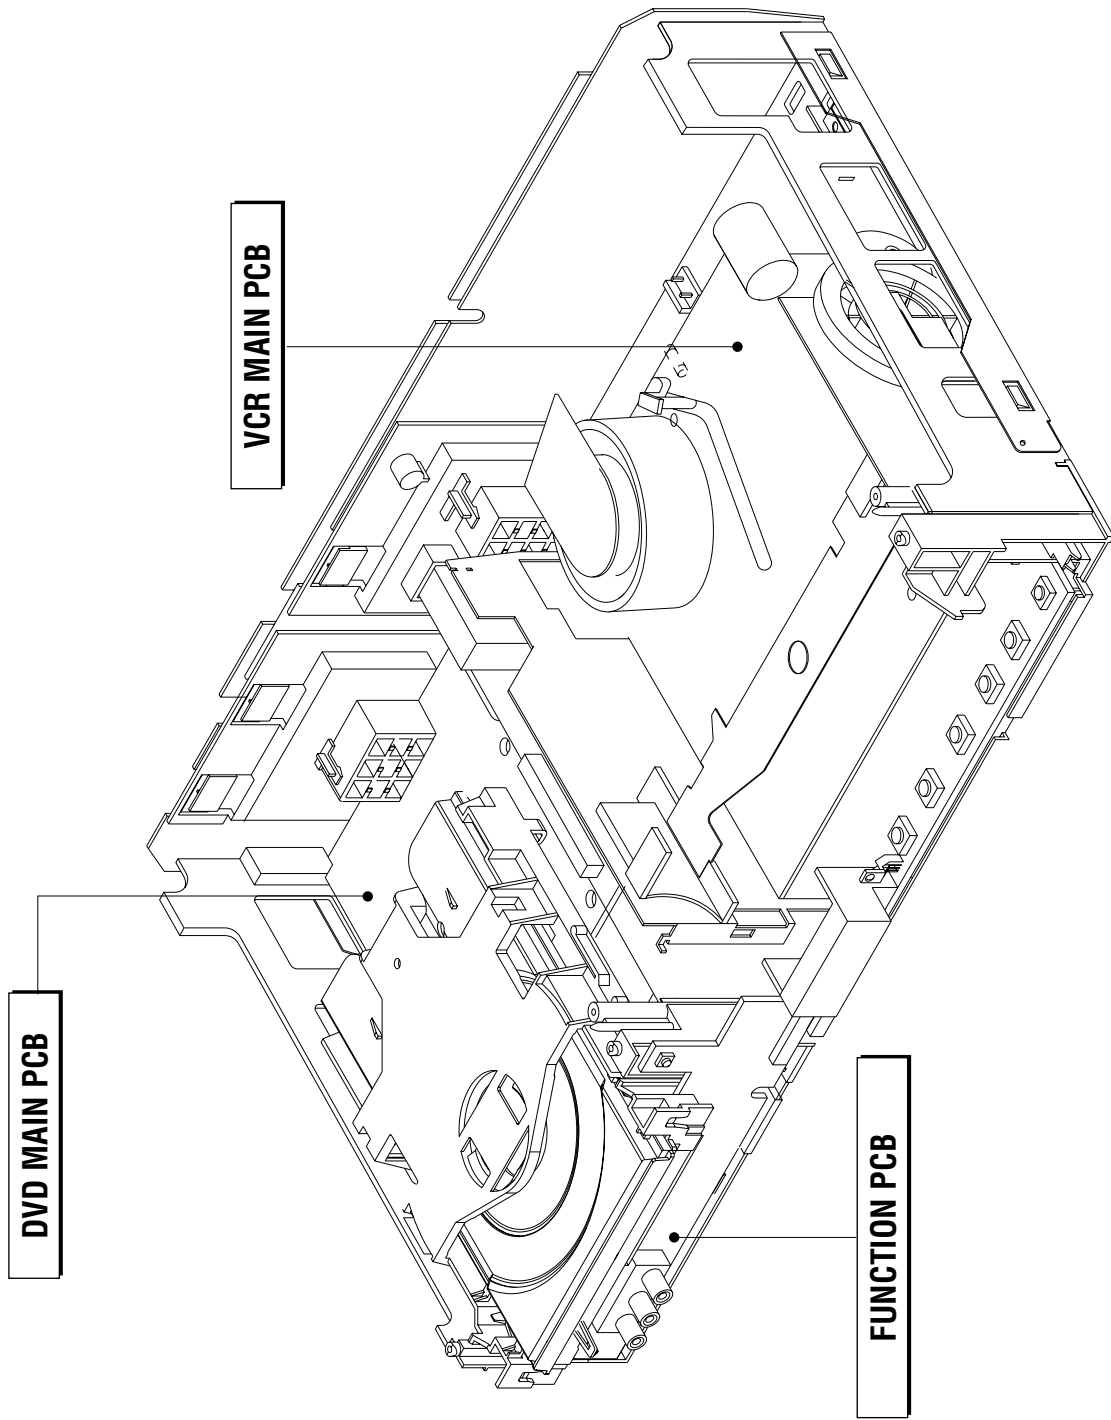


Fig. 2-7 Circuit Board Locations

2-3 VCR DECK PARTS LOCATIONS

2-3-1 Top View

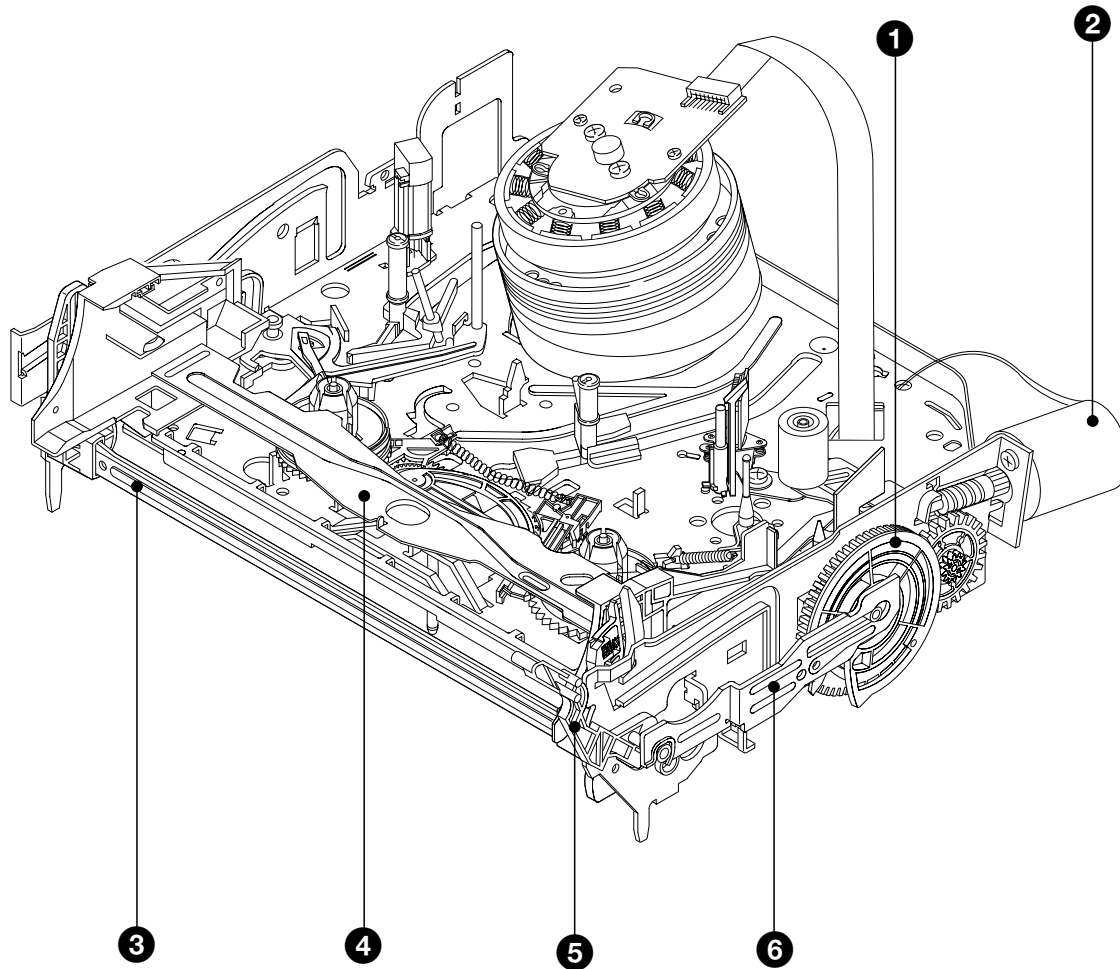


Fig. 2-8 Top parts Location-1

- ❶ GEAR FL CAM
- ❷ MOTOR LOADING ASS'Y
- ❸ LEVER FL ARM ASS'Y
- ❹ HOLDER FL CASSETTE ASS'Y
- ❺ LEVER FL DOOR
- ❻ SLIDER FL DRIVE

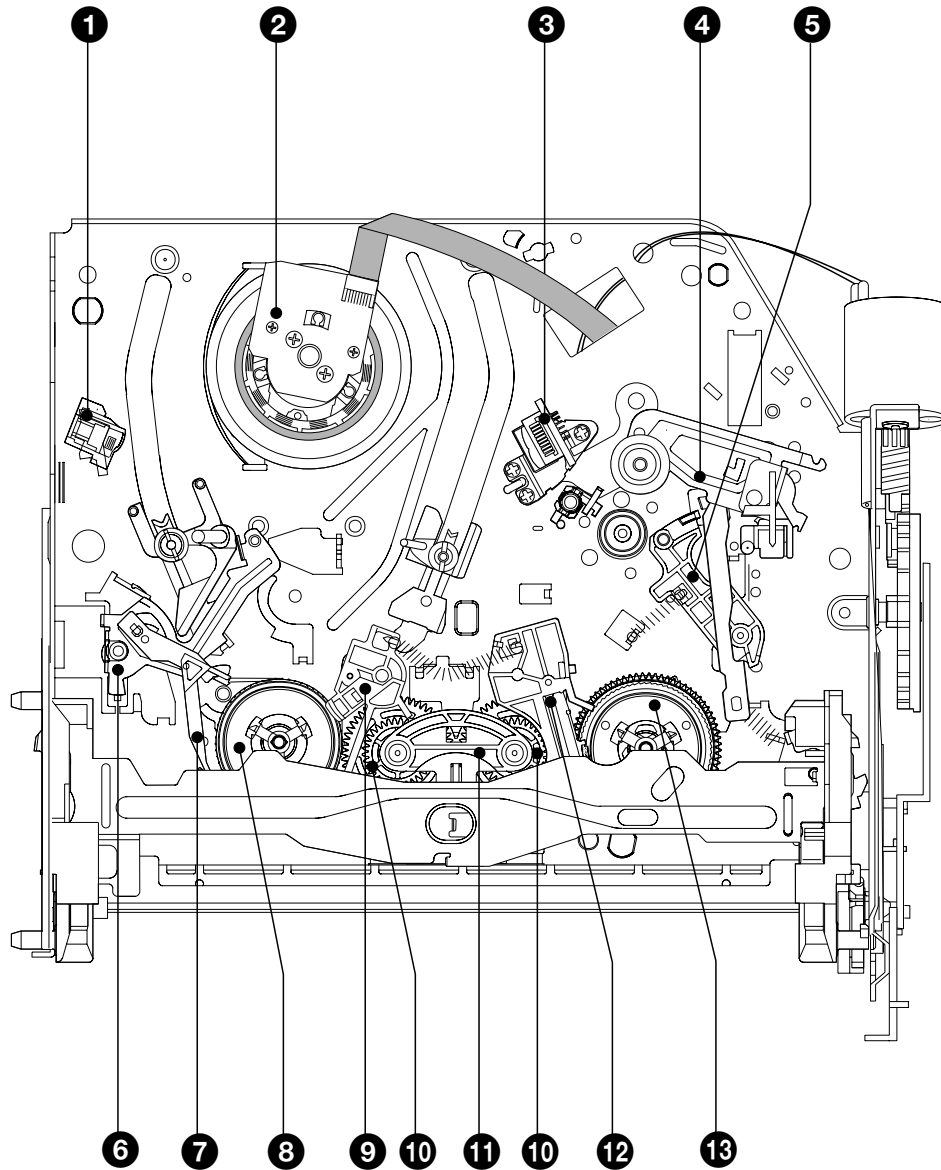


Fig. 2-9 Top Parts Location-2

- | | |
|--------------------------|------------------------|
| 1 FE HEAD | 8 DISK S REEL |
| 2 CYLINDER ASS'Y | 9 LEVER S BRAKE ASS'Y |
| 3 ACE HEAD ASS'Y | 10 GEAR IDLE |
| 4 LEVER UNIT PINCH ASS'Y | 11 LEVER IDLE |
| 5 LEVER #9 GUIDE ASS'Y | 12 LEVER T BRAKE ASS'Y |
| 6 LEVER TENSION ASS'Y | 13 DISK T REEL |
| 7 BAND BRAKE ASS'Y | |

2-3-2 Bottom View

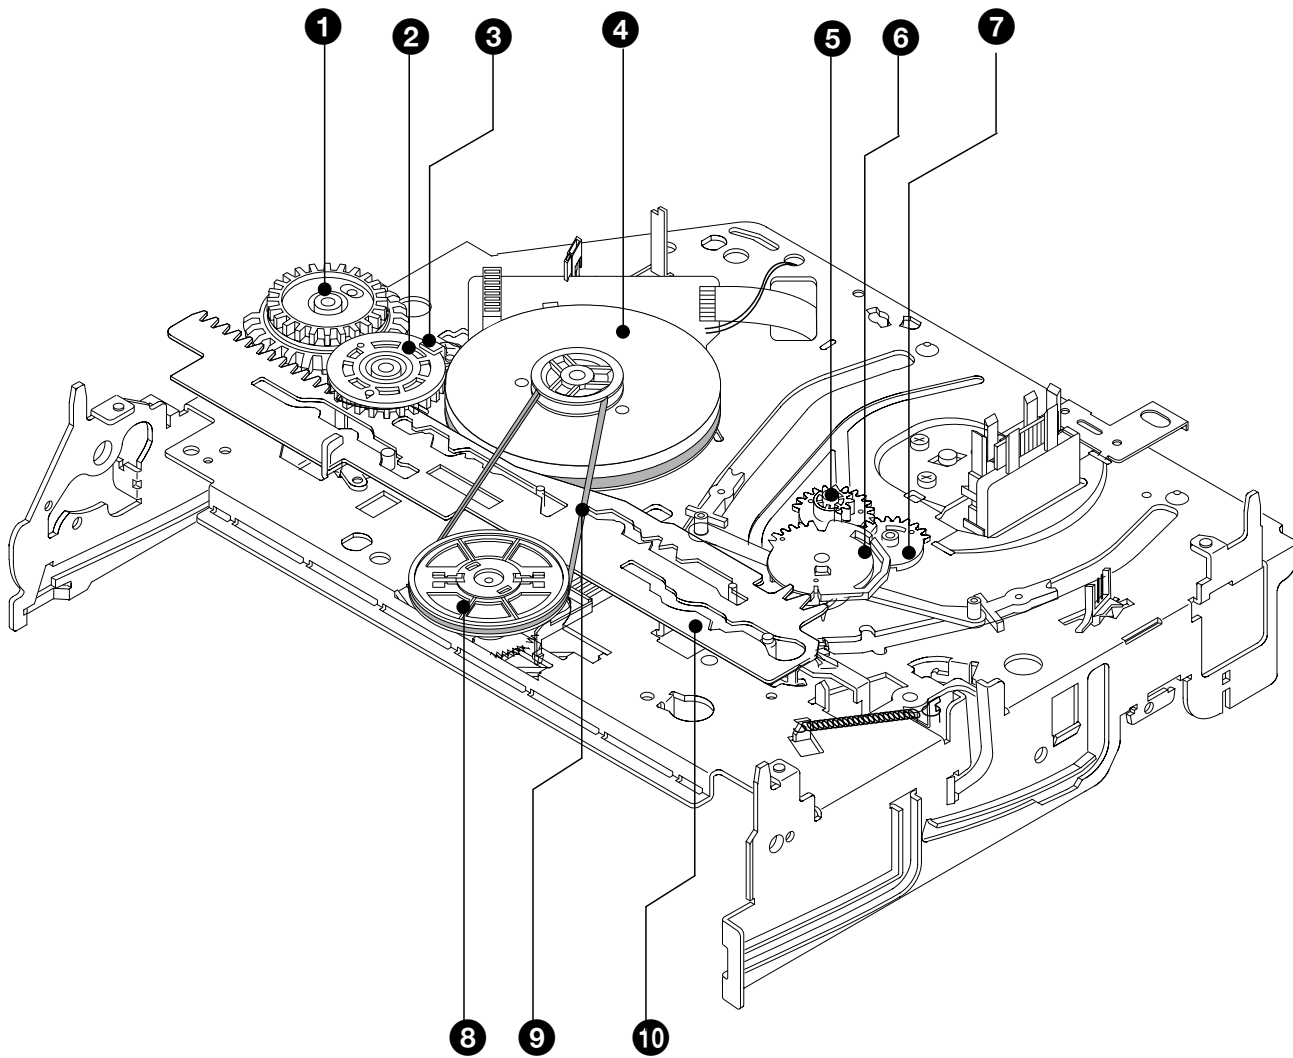


Fig. 2-10 Bottom Parts Location

- 1 GEAR JOINT 1
- 2 GEAR JOINT 2
- 3 BRACKET GEAR
- 4 MOTOR CAPSTAN ASS'Y
- 5 LEVER T LOAD ASS'Y
- 6 GEAR LOADING DRIVE
- 7 LEVER S LOAD ASS'Y
- 8 HOLDER CLUTCH ASS'Y
- 9 BELT PULLEY
- 10 SLIDER CAM

2-4 VCR DECK

2-4-1 Holder FL Cassette Ass'y Removal

- 1) Pull the Holder FL Cassette Ass'y ① to the eject position.
- 2) Pull the Holder FL Cassette Ass'y ① as grasping the Holder FL Cassette Ass'y ① and Lever FL Cassette-R ② in the same time to release hooking from Main Base until the Boss [A] of Holder FL Cassette Ass'y ① is taken out from the Rail [B].
- 3) Lift the Holder FL Cassette Ass'y ①, in this time, you have to grasp the Lever FL Cassette-R ② continuously until the Holder FL Cassette Ass'y ① is taken out completely.

Note: Be sure to insert Lever FL Cassette-R ② in the direction of "A" to prevent separation and breakage of the Lever FL Cassette-R ② at disassembling and reassembling.

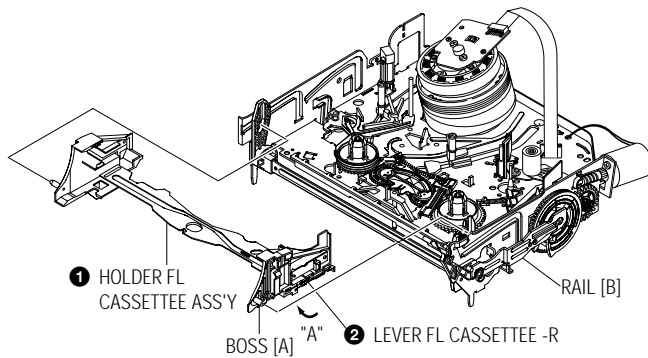


Fig. 2-11 Holder FL Cassette Ass'y Removal

2-4-2 Lever FL Arm Ass'y Removal

- 1) Push the hole "A" in the direction of arrow "B" use the pin.(about Dia. 2.5)
- 2) Pull out the Lever FL Arm Ass'y ① from the Boss of Main Base.
- 3) Remove the Lever FL Arm Ass'y ① in the direction of arrow "C".

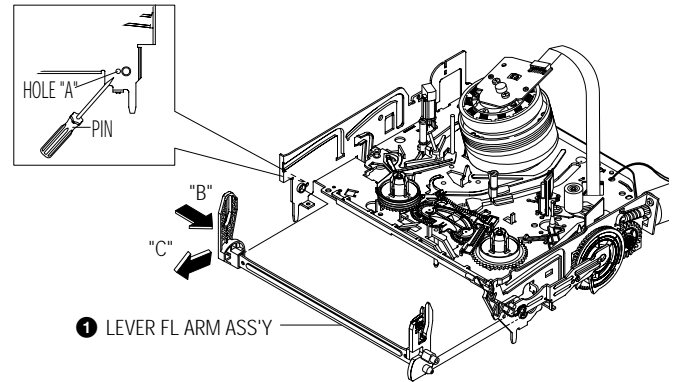


Fig. 2-12 Lever FL Arm Ass'y Removal

2-4-3 Lever FL Door Removal

- 1) Release the Hook **2** and Remove the Lever FL Door **1** in the direction of arrow "A".

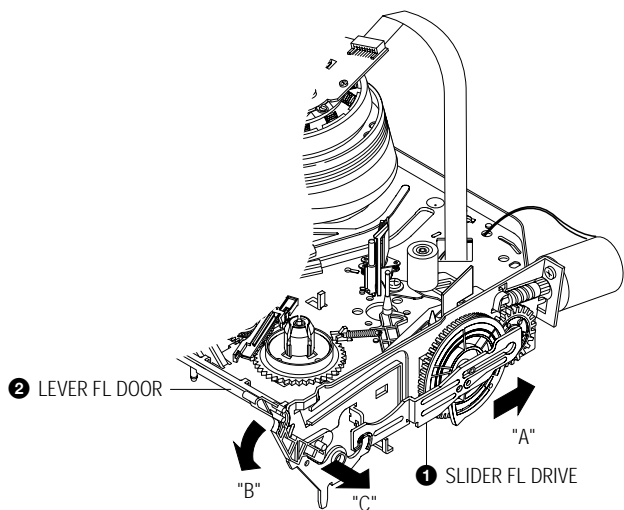


Fig. 2-13 Lever FL Door Removal

2-4-4 Slider FL Drive, Gear FL Cam Removal

- 1) Pull the Slider FL Drive **1** to the front direction.
- 2) Remove the Slider FL Drive **1** in the direction of arrow. (Refer to Fig. 2-14)
- 3) Remove the Gear FL cam **2**.

Note: When reinstalling be sure to reassemble Slider FL drive **1** after you insert the Boss of Lever FL ARM-R in Groove of Slider FL drive **1**.

Assembly: Align the Gear FL Cam **1** with the Gear worm wheel Post as shown drawing. (Refer to Timing point)

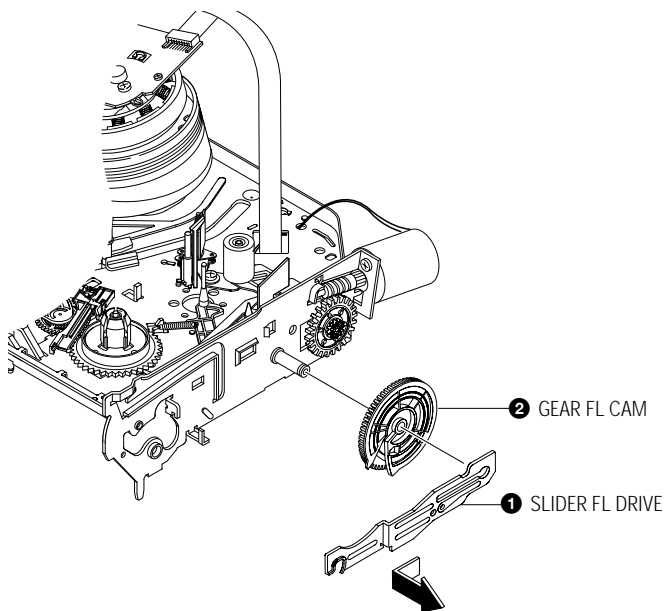


Fig. 2-14 Slider FL Drive Removal

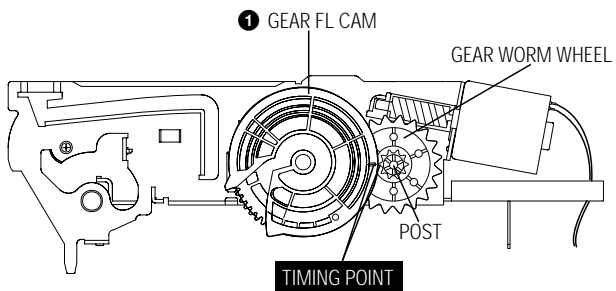


Fig. 2-15 Gear FL Cam, Gear Worm

2-4-5 Gear Worm Wheel Removal

- 1) Remove the Gear Worm wheel ❶.

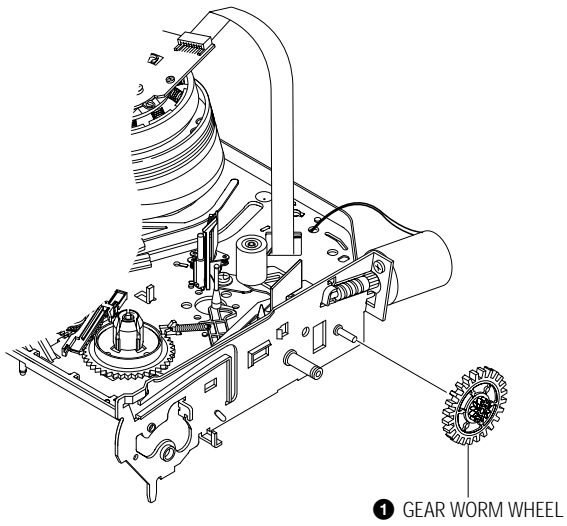


Fig. 2-16 Gear Worm Wheel Removal

2-4-6 Cable Flat Removal

- 1) Remove the Drum connecting part of Cable Flat ❶ from Connector Wafer ❷.

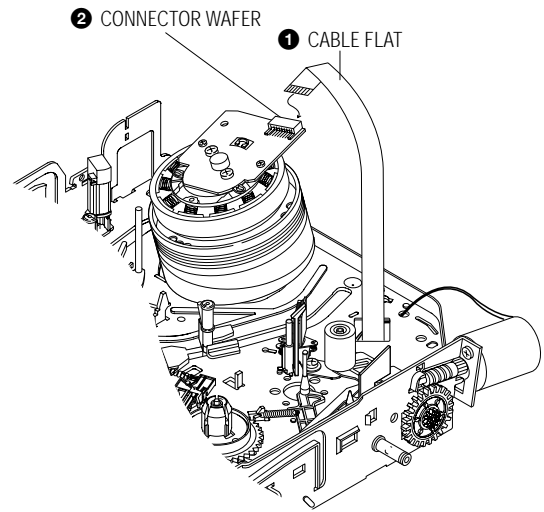


Fig. 2-17 Cable Flat Removal

2-4-7 Motor Loading Ass'y Removal

- 1) Remove the screw ❶.
- 2) Remove the Motor Loading Ass'y ❷.

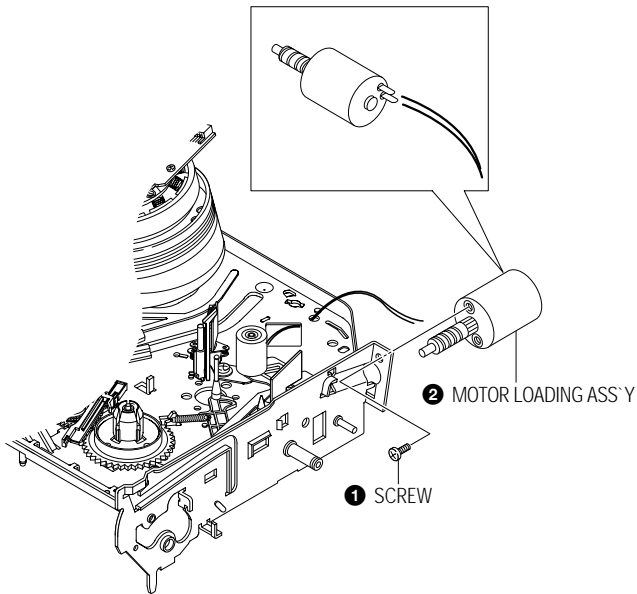


Fig.2-18 Motor Loading Ass'y Removal

2-4-8 Bracket Gear, Gear Joint 2, 1 Removal

- 1) Remove the SCREW ❶.
- 2) Remove the Bracket Gear ❷.
- 3) Remove the Gear Joint 2 ❸.
- 4) Remove the Gear Joint 1 ❹.

Assembly:

- 1) Be sure to align dot mark of Gear Joint 1 ❶ with dot mark of Gear Joint 2 ❷ as shown Fig 2-20.
(Refer to Timing point1)
- 2) Confirm the Timing Point 2 of the Gear Joint 2 ❷ and Slider Cam ❸.

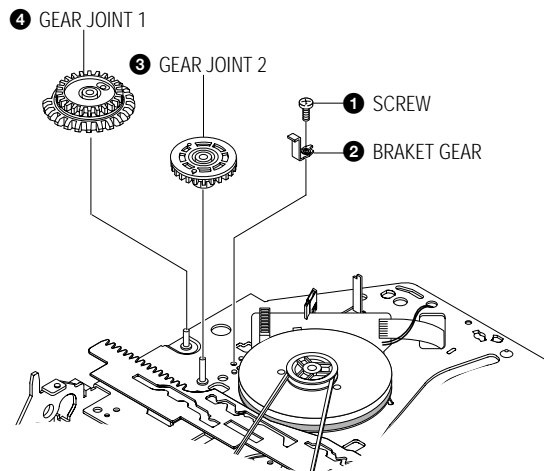


Fig. 2-19 Bracket Gear, Gear Joint 1,2 Removal

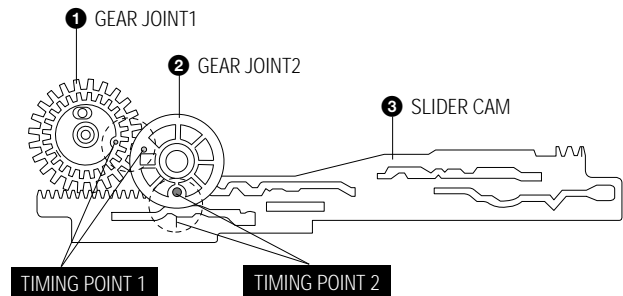


Fig. 2-20 Gear Joint 1,2 Assembly

2-4-9 Gear Loading Drive, Slider Cam, Lever Load S, T Ass'y Removal

- 1) Remove the Belt Pulley. (Refer to Fig. 2-38)
- 2) Remove the Gear Loading Drive **1** after releasing Hook [A] in the direction arrow as shown in detail drawing.
- 3) Remove the Slider Cam **2**.
- 4) Remove the Lever Load S Ass'y **3** & Lever Load T Ass'y **4**.

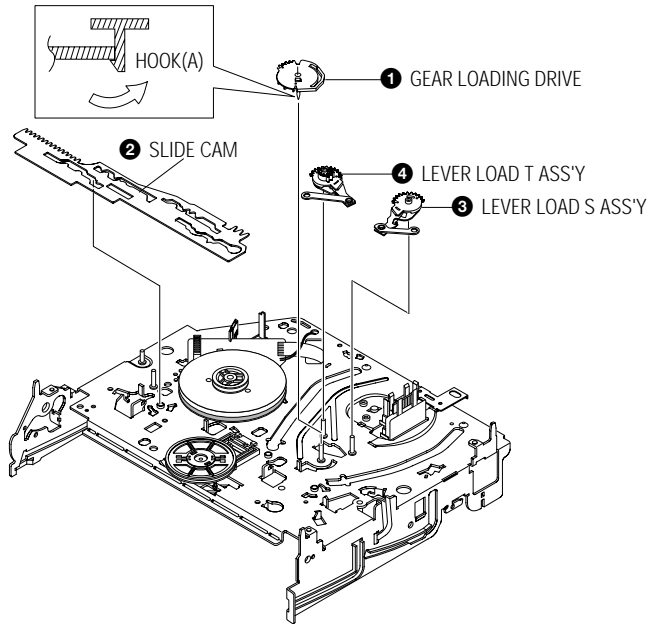


Fig. 2-21 Gear Loading Drive, Slider Cam, Lever T, S Load Ass'y Removal

2-4-10 Gear Loading Drive, Slider Cam, Lever Load S, T Ass'y Assembly

- 1) When reinstalling, be sure to align dot of Lever Load T Ass'y **1** with dot of Lever Load S Ass'y **2** as shown in drawing, (Refer to Timing Point 1).
- 2) Insert the Pin A,B,C,D into the Slider Cam **3** hole,
- 3) Be sure to align dot of Lever Load T **1** and dot of Gear Loading Drive **4**, (Refer to Timing Point 2).
- 4) Aline dot of Gear Loading drive **4** with mark of Slider Cam **3** as shown in drawing (Refer to Timing Point 3).

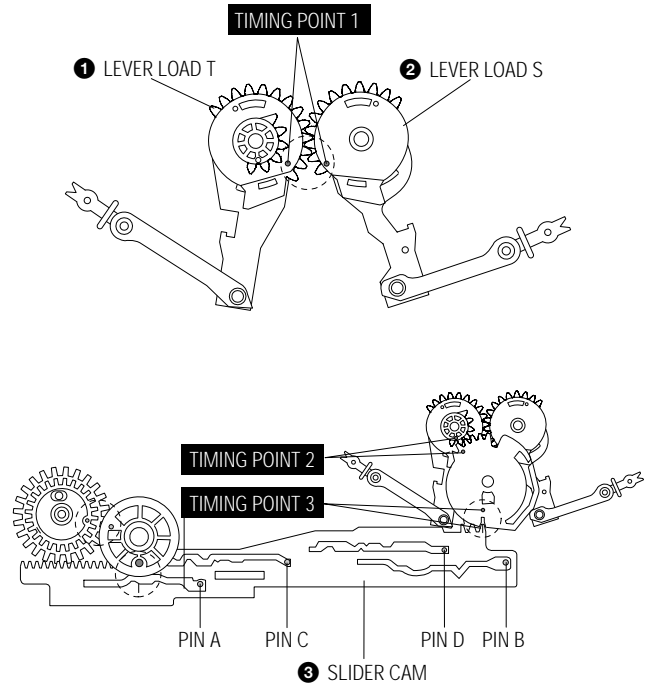


Fig. 2-22 Gear Loading Drive, Slider Cam, Lever Load S, T Ass'y Assembly

2-4-11 Lever Pinch Drive, Lever Tension Drive Removal

- 1) Remove the Lever Pinch Drive ❶, Lever Tension Drive ❷.

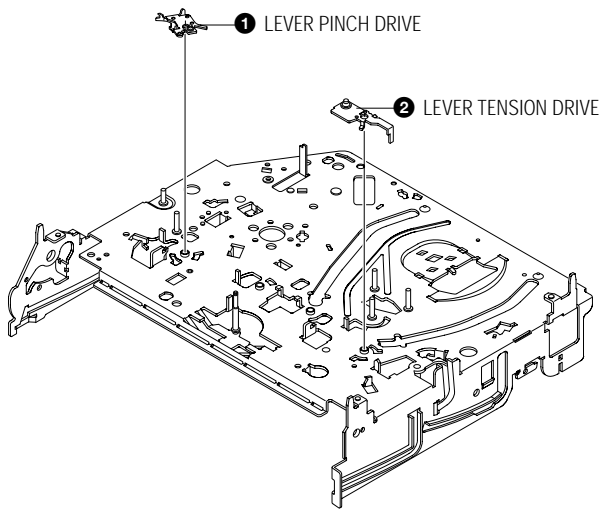


Fig. 2-23 Lever Pinch Drive,
Lever Tension Drive Removal

2-4-12 Lever Tension Ass'y, Band Brake Ass'y Removal

- 1) Remove the Lever Brake S Ass'y (Refer to Fig 2-25).
- 2) Remove the Spring Tension Lever ❶.
- 3) Rotate stopper of Main Base in the direction of arrow "A".
- 4) Lift the Lever Tension Ass'y ❷ & Band brake Ass'y ❸.

Note:

- 1) When replacing the Lever Tension Ass'y ❷, be sure to apply Grease on the post,
- 2) Take care not to touch stain on the felt side, and not to be folder and broken Band brake Ass'y
- 3) After Lever Tension Ass'y seated, Rotate stopper of Main Base to the Mark[B].

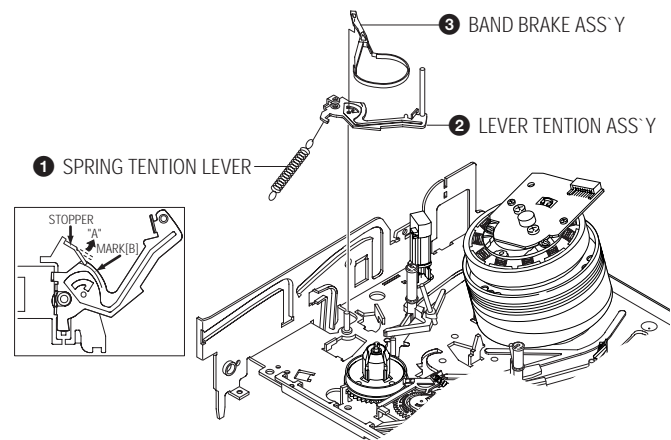


Fig. 2-24 Lever Tension Ass'y,
Band Brake Ass'y Removal

2-4-13 Lever Brake S, T Ass'y Removal

- 1) Release the Hook [A] and the Hook [B], [C] in the direction of arrow as shown in Fig 2-25.
- 2) Lift the Lever S, T Brake Ass'y ①, ② with spring brake ③.

Assembly:

- 1) Assembly the Lever S Brake Ass'y ① on the Main Base.
- 2) Assembly the Lever T Brake Ass'y ② with spring brake ③.

Note: Take extreme care not to be folded and transformed Spring Brake at removing or reinstalling.

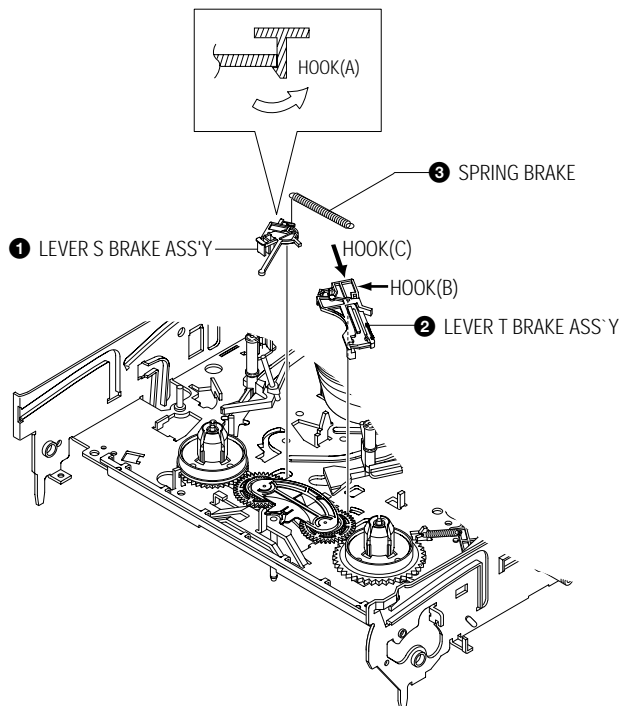


Fig. 2-25 Lever Brake S, T Ass'y Removal

2-4-14 Gear Idle Ass'y Removal

- 1) Push the Lever Idle ① in the direction of arrow "A", "B".
- 2) Lift the Lever Idle ①.

Assembly:

- 1) Apply oil in two Bosses of Lever Idle ①.
- 2) Assemble the Gear Idle ② with the Lever Idle ①.

Note: When replacing the Gear Idle ②, be sure to add oil in the boss of Lever Idle ①.

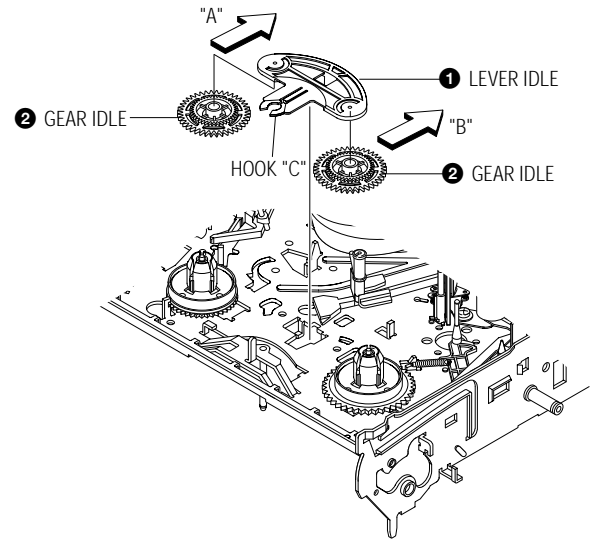


Fig. 2-26 Gear Idle Ass'y Removal

2-4-15 Disk S, T Reel Removal

- 1) Lift the Disk S, T Reel ❶, ❷.

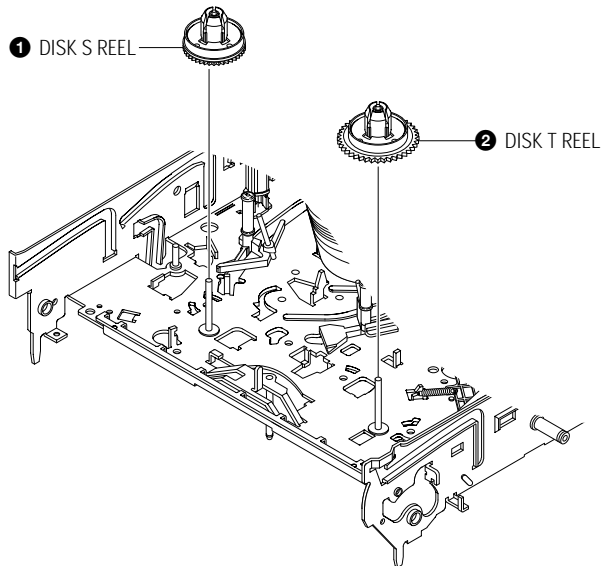


Fig. 2-27 Disk S, T Reel Removal

2-4-16 Holder Clutch Ass'y Removal

- 1) Remove the Washer Slit ❶.
- 2) Lift the Holder Clutch Ass'y ❷.

Note: When you reinstall Holder Clutch Ass'y

- 1) Check the condition of spring as shown in detail A.
- 2) Don't push Holder Clutch Ass'y down with excessive force Just insert Holder Clutch Ass'y into post center with dead force and Rotate it smoothly.

Be sure to confirm that spring is in the slit of Gear Center Ass'y as shown in detail B.

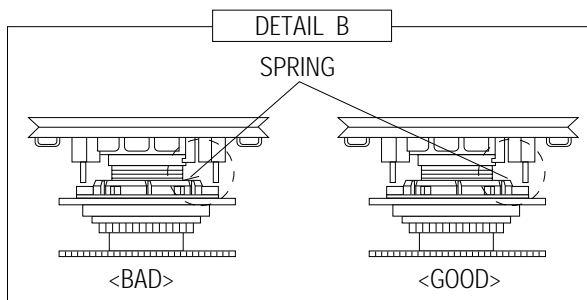
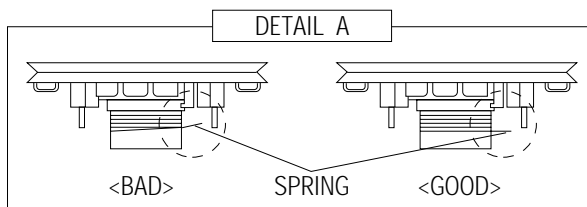
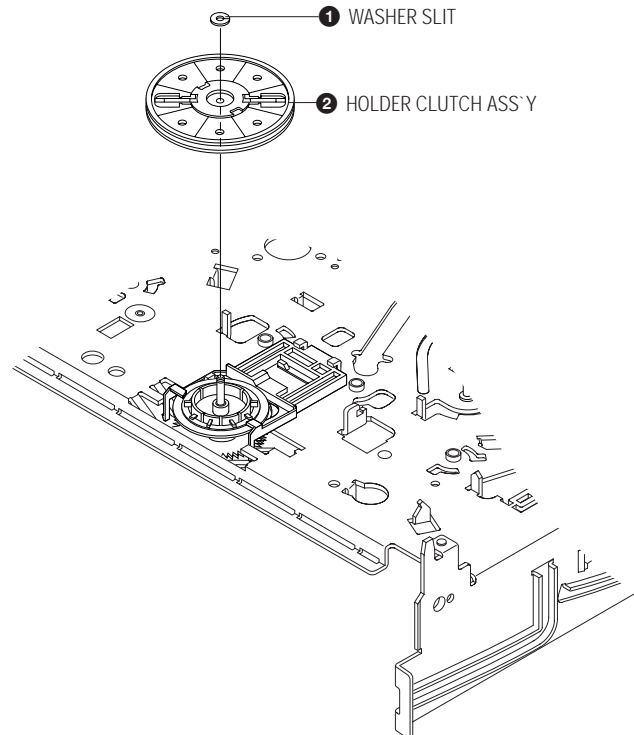


Fig. 2-28 Holder Clutch Ass'y Removal

2-4-17 Lever Up Down Ass'y, Gear Center Ass'y Removal

- 1) Remove the 2 hooks in the direction of arrow as shown Fig. 2-29 and lift the Lever Up Down Ass'y ❶.
- 2) Lift the Gear Center Ass'y ❷.

Assembly:

- 1) Insert the Lever Up Down Ass'y ❶ in the rectangular holes on Main Base as shown in Fig 2-30.
- 2) Lift the Lever Up Down Ass'y ❶ about 35°.
(Refer to Fig 2-30)
- 3) Insert Ring of the Gear Center Ass'y ❷ in the Guide of the Lever Up Down Ass'y ❶.
- 4) Insert the Gear Center Ass'y ❷ in the post on Main Base.
- 5) Push down the Lever Up Down Ass'y ❶ for locking of the Hook.

Note:

- 1) Take care not to separate and sentence does not mark sense.
- 2) Be sure to confirm that Ring of the Gear Center Ass'y ❷ is in the Guide of the Lever Up Down Ass'y ❶ after finishing assembly of Lever Up Down Ass'y ❶ and Gear Center Ass'y ❷.

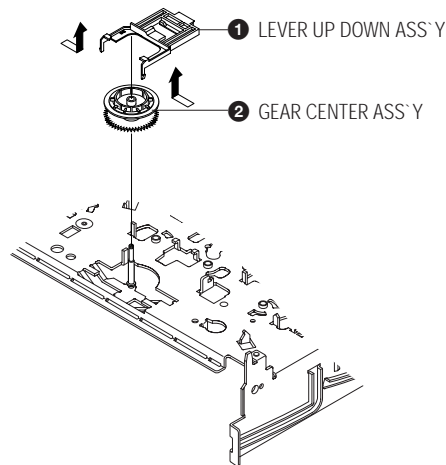


Fig. 2-29 Lever Up Down Ass'y Removal

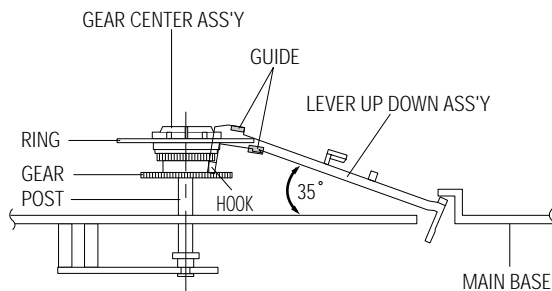


Fig. 2-30 Lever Up Down Ass'y Removal

2-4-18 Guide Cassette Door Removal

- 1) Lift the Hook [A].
- 2) Rotate the Guide Cassette Door ❶ in the direction of arrow.

Note: After reinstalling the Guide Cassette Door ❶ sure the Hook [A].

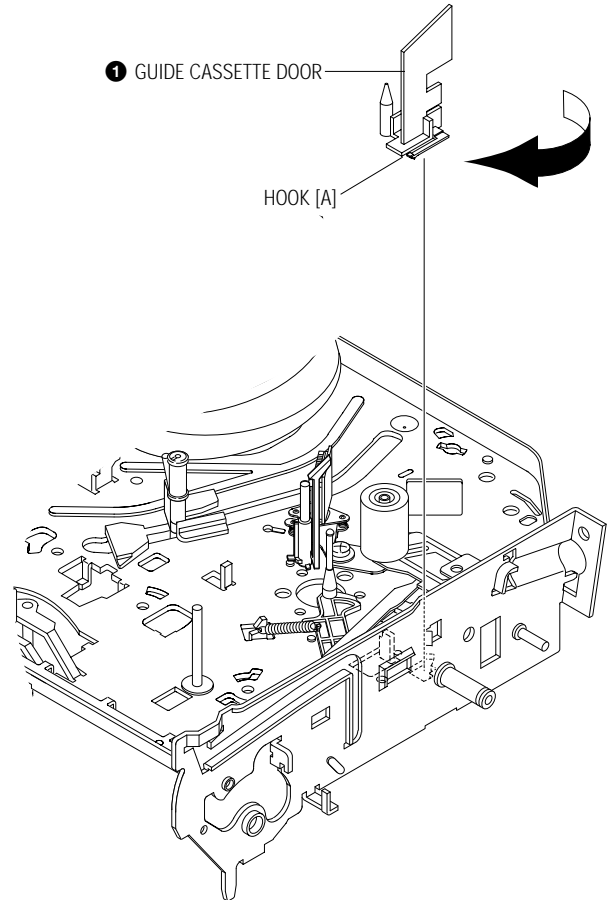


Fig. 2-31 Guide Cassette Door Removal

2-4-19 Lever Unit Pinch Ass'y, Plate Joint, Spring Pinch Drive Removal

- 1) Lift the Unit Pinch Ass'y **1**.
- 2) Remove the Plate Joint **2** from Lever Pinch Drive.
- 3) Remove the Spring Pinch Drive **3**.

Note:

- 1) Take extreme care not to touch the grease on the Roller Pinch.
- 2) When reinstalling, be sure to apply grease on the post pinch roller.

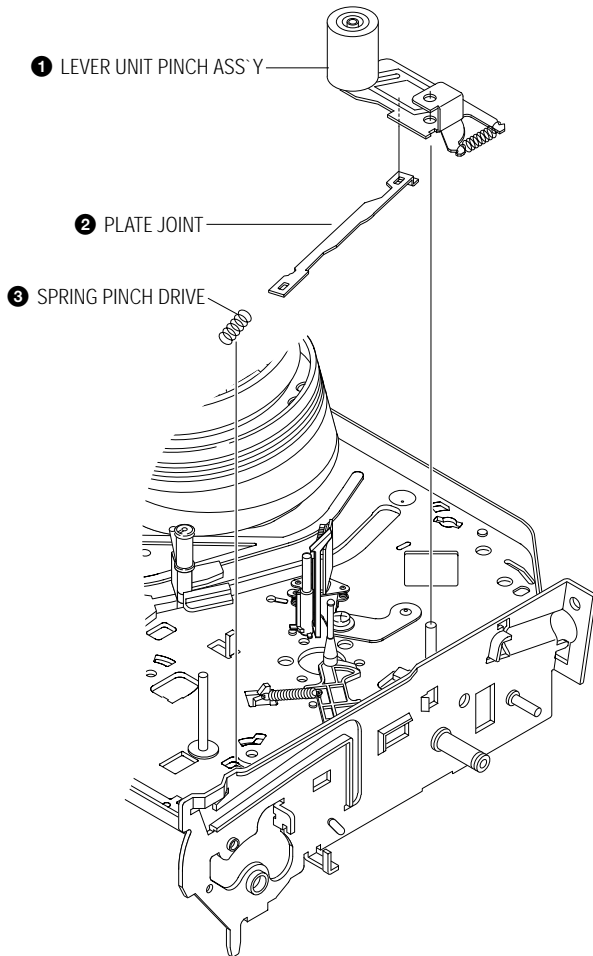


Fig. 2-32 Lever Unit Pinch Ass'y, Plate Joint, Spring Pinch Drive Removal

2-4-20 Lever #9 Guide Ass'y Removal

- 1) Remove the Spring #9 Guide **1**.
- 2) Lift the Spring #9 Guide Ass'y **2** in the direction of arrow "A".

Note:

- 1) Take extreme care not to get grease on the tape Guide Post.
- 2) After reinstalling, check the bottom side of the Post #9 Guide to the top side of Main Base.

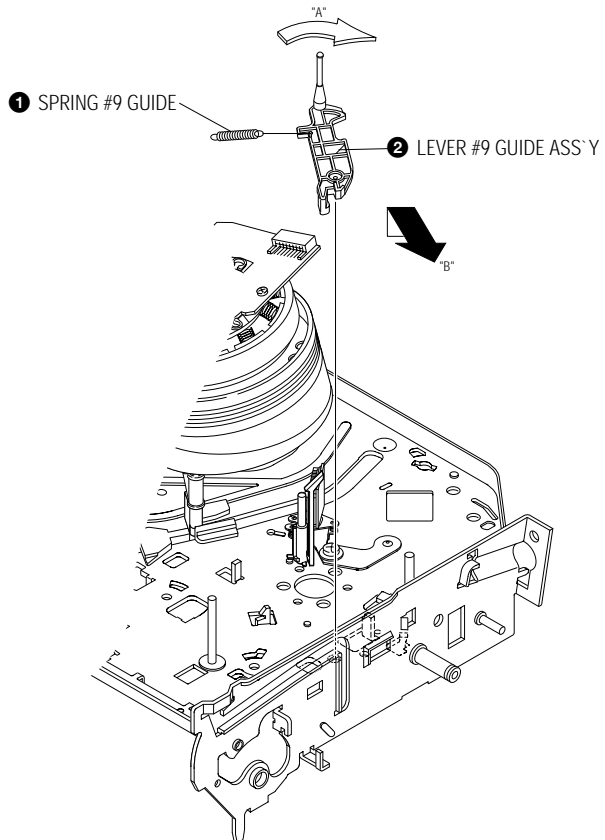


Fig. 2-33 Lever #9 Guide Ass'y Removal

2-4-21 FE Head Removal

- 1) Remove the screw ❶.
- 2) Lift the FE Head ❷.

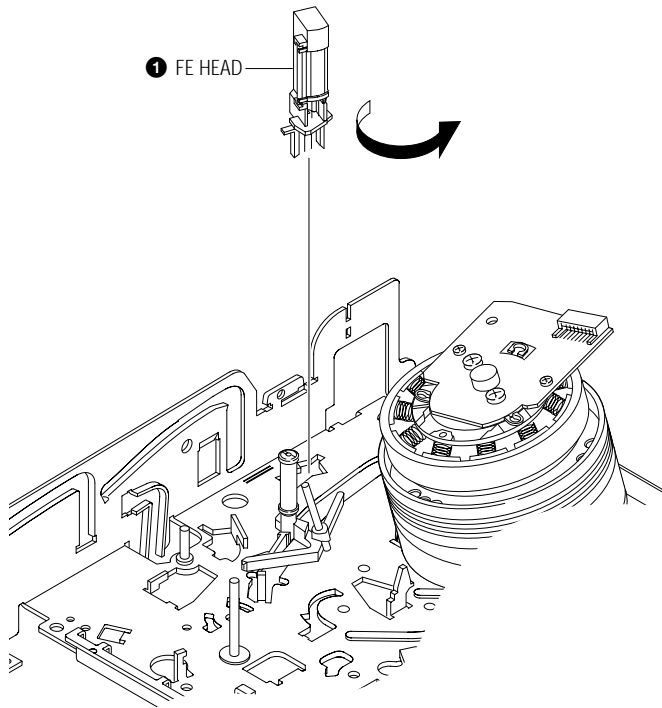


Fig. 2-34 FE Head Removal

2-4-22 ACE Head Removal

- 1) Pull out the FPC from connector of ACE Head Ass'y ❷.
- 2) Remove the screw ❶.
- 3) Lift the ACE Head Ass'y ❷.

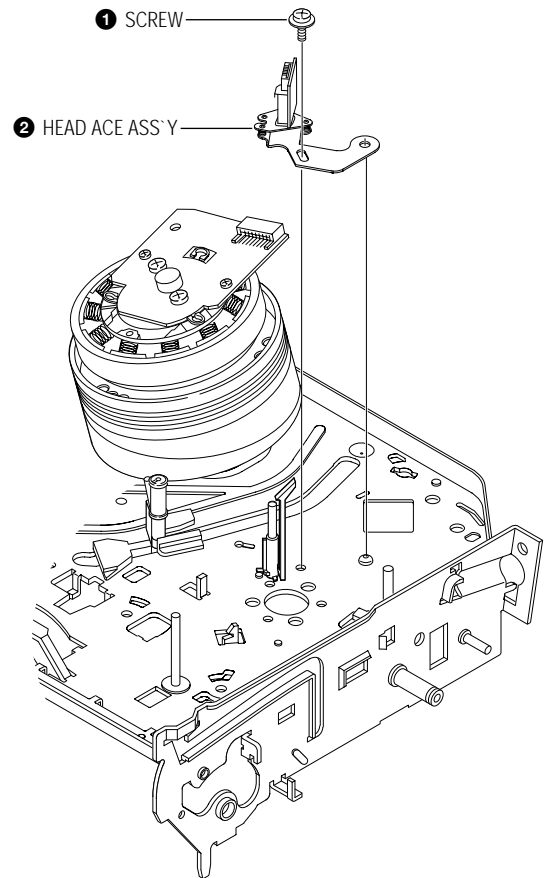


Fig. 2-35 ACE Head Removal

2-4-23 Slider S, T Ass'y Removal

- 1) Move the Slider S, T Ass'y ❶, ❷ to slot, and then lift it to remove.
(Refer to arrow)

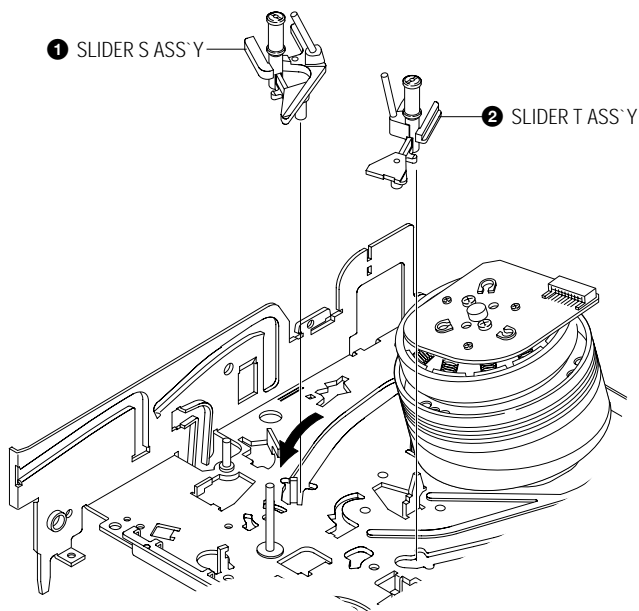


Fig. 2-36 Slider S, T Ass'y Removal

2-4-24 Plate Ground Deck, Cylinder Ass'y Removal

- 1) Remove the 3 Screws ❶.
- 2) Lift the Plate Ground Deck ❷.
- 3) Lift the Cylinder Ass'y ❸.

Assembly:

- 1) Match the 3 holes in the bottom of Cylinder Ass'y ❸ to the 3 holes of Main Base as attending not to drop or knock the Cylinder Ass'y ❸.
- 2) Tighten the 1 Screw ❶.
- 3) Match the Plate Ground Deck ❷ to the Hole of Base Main.
- 4) Tighten the other 2 Screws ❶.

Note:

- 1) Take care not to touch the Cylinder Ass'y ❸ and the tape guide post at reinstalling.
- 2) When reinstalling, Don't push down too much on Screw Driver.

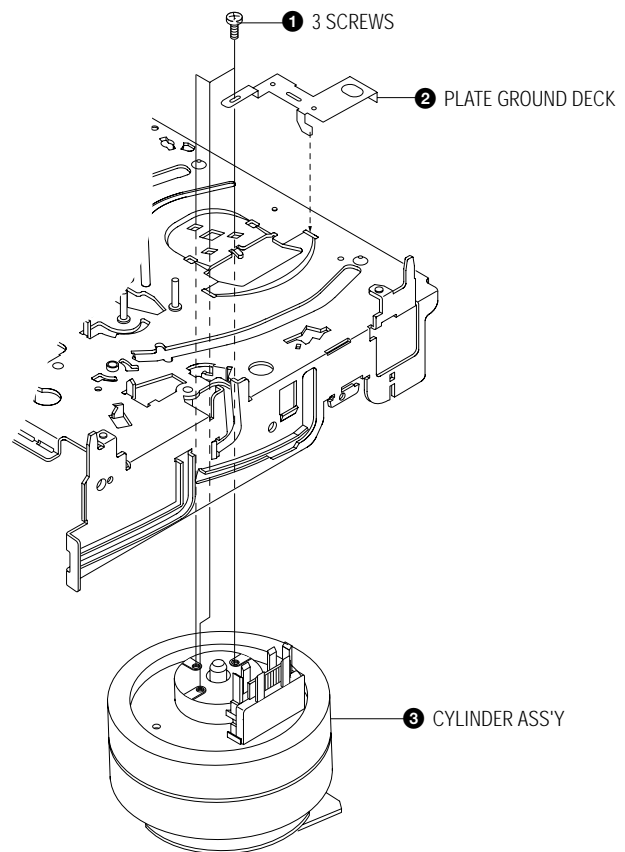


Fig. 2-37 Plate Ground Deck, Cylinder Ass'y Removal

2-4-25 Hook Capstan, Belt Pulley Removal

- 1) Remove the Hook Capstan ❶ after releasing Hook in the direction arrow as shown in detail drawing.
- 2) Remove the Belt Pulley ❷.

Note: Take extreme care not to get grease on Belt Pulley ❷ at assembling or reassembling.

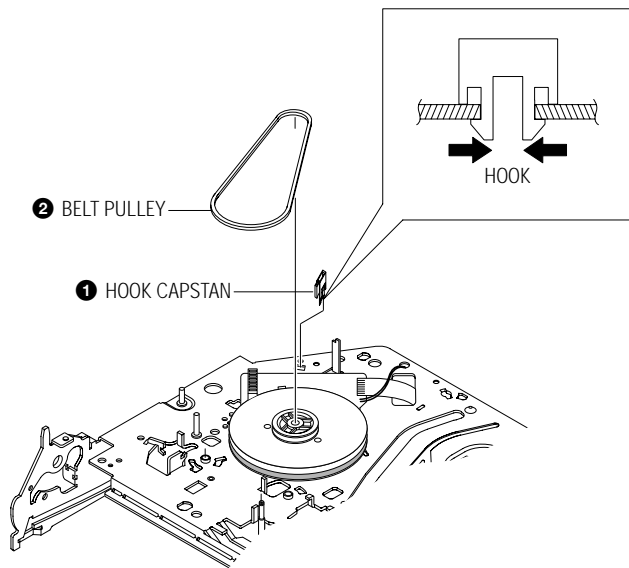


Fig. 2-38 Belt Pulley Removal

2-4-26 Motor Capstan Ass'y Removal

- 1) Remove the 3 Screws ❶.
- 2) Remove the Motor Capstan Ass'y ❷.

Assembly:

- 1) Match the 3 holes of Motor Capstan Ass'y ❷ to the 3 holes of Main Base. Be careful not to drop or knock the Motor Capstan Ass'y ❷.
- 2) Tighten the 3 Screws ❶ in the direction of arrow as shown detail drawing.

Note: After tightening screws, check if there is gap between the head of screws and the top side of Main Base. There should have no gap between the head of screws and the top side of Main Base. After reinstalling, adjusting the tape transport system again.

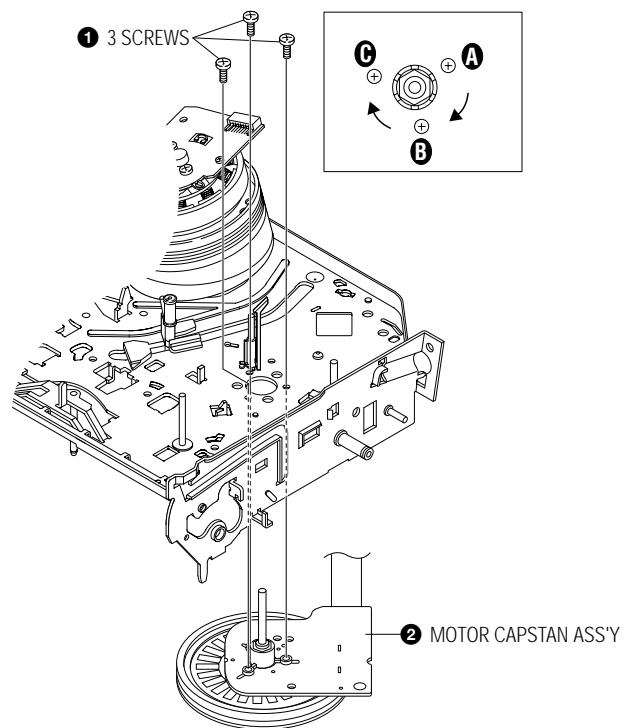


Fig. 2-39 Motor Capstan Ass'y Removal

2-4-27 Post #8 Guide Ass'y Removal

- 1) Rotate the Post #8 Guide Ass'y ❶ in the direction of arrow to lift up.

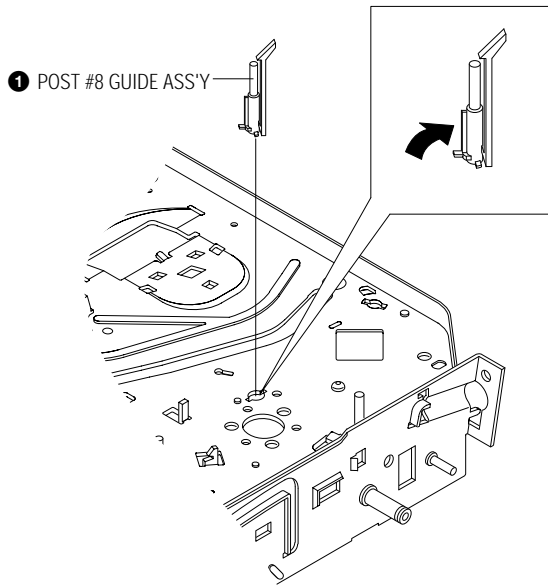


Fig. 2-40 Post #8 Guide Ass'y Removal

2-4-29 How to Eject the Cassette Tape (If the tape is stuck in the unit)

- 1) Turn the Gear worm ❶ clockwise with screw driver. (Refer to arrow)
(Other method: Remove the Screw of Motor Load Ass'y, Separate the Motor Load Ass'y)

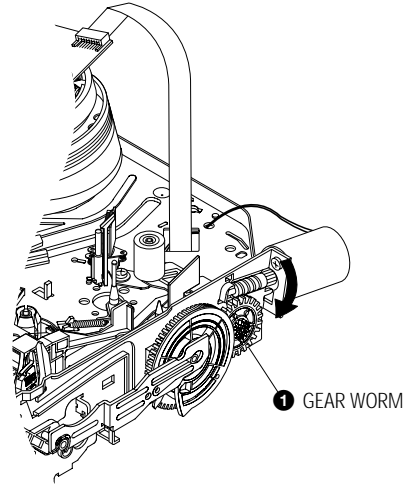


Fig. 2-42

2-4-28 Level Head Cleaner Ass'y Removal

- 1) Release the Hook ❶.
- 2) Lift the Lever Head Cleaner Ass'y ❷.

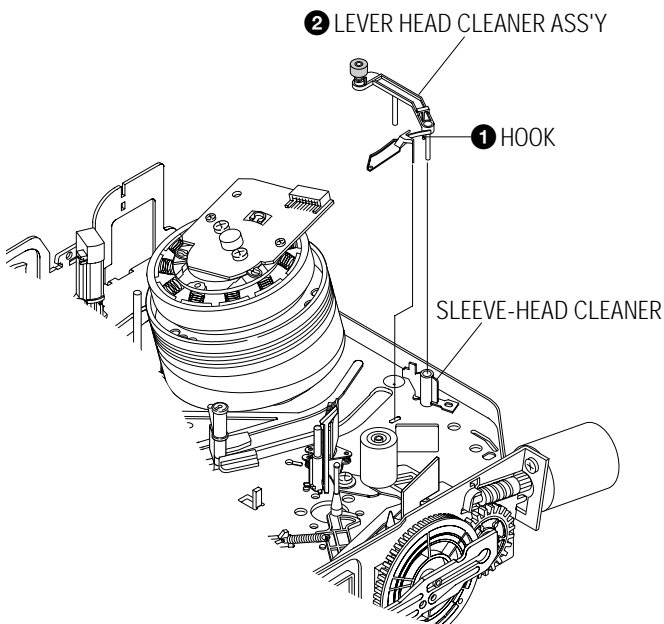


Fig. 2-41 Lever Head Cleaner Ass'y Removal

- 2) When Slider S,T are approached in the position of unloading, rotate holder Clutch counterclockwise after inserting screw driver in the hole of frame's bottom in order to wind the unwinded tape. (Refer to Fig.2-43)
(If you rotate Gear Worm ❶ continuously when tape is in state of unwinding, you may cause a tape contamination by grease and tape damage.
Be sure to wind the unwinded tape in the state of set horizontally.)
- 3) Rotate Gear Worm ❶ clockwise using screw driver again up to the state of eject mode and then pick out the tape. (Refer to Fig.2-42)

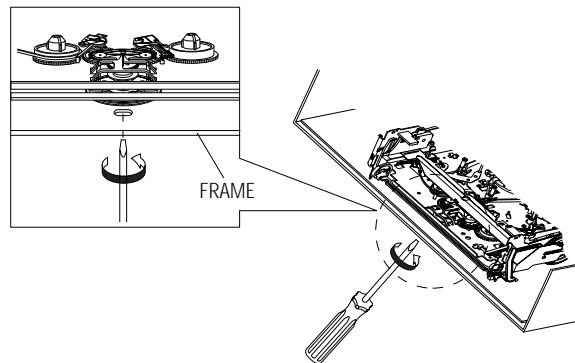


Fig. 2-43

2-5 THE TABLE OF CLEANING, LUBRICATION AND REPLACEMENT TIME ABOUT PRINCIPAL PARTS

- 1) The replacement time of parts is not life of parts.
- 2) The table 2-1 is that the VCR Set is in normal condition (normal temperature, normal humidity).
The checking period may be changed owing to the condition of use, runtime and environmental conditions.
- 3) Life of the Cylinder Ass'y is depend on the condition of use.
- 4) See exploded view for location of each parts.

<Table 2-1>

*	Parts Name	Checking Period										Remark
		500	1000	1500	2000	2500	3000	3500	4000	4500	5000	
T A P E P A T H S Y S T E M	POST TENSION	Δ	Δ	Δ	Δ	Δ	Δ	Δ	Δ	Δ	Δ	- To clean the parts, use patch and alcohol (solvent). - After cleaning, use the video tape after alcohol is gone away completely. - We recommend to use oil [EP-50] or solvent. - One or two drops of oil should be applied after cleaning with alcohol.
	SLANT POST S, T	Δ	Δ	Δ	Δ	Δ	Δ	Δ	Δ	Δ	Δ	
	#8 GUIDE SHAFT	Δ	Δ	Δ	Δ	Δ	Δ	Δ	Δ	Δ	Δ	
	CAPSTAN SHAFT	Δ	Δ	Δ	Δ	Δ	Δ	Δ	Δ	Δ	Δ	
	#9 GUIDE POST	Δ	Δ	Δ	Δ	Δ	Δ	Δ	Δ	Δ	Δ	
	#3 GUIDE POST	Δ	Δ	Δ	Δ	Δ	Δ	Δ	Δ	Δ	Δ	
	GUIDE ROLLER S, T	Δ	Δ	Δ	0	0	0	0	0	0	0	
	CYLINDER ASS'Y	Δ	0	0	0	0	0	0	0	0	0	
	FE HEAD	Δ	Δ	Δ	0	0	0	0	0	0	0	
	ACE HEAD	Δ	0	0	0	0	0	0	0	0	0	
	PINCH ROLLER	Δ	0	0	0	0	0	0	0	0	0	
	POST REEL S, T		◆		◆		◆		◆		◆	- Periodic time of applying oil (Apply oil after cleaning) - The excessive applying oil may be the cause of malfunction.
	SLEEVE TENSION		◆		◆		◆		◆		◆	
	POST CENTER		◆		◆		◆		◆		◆	
LEVER IDLE BOSS (2Point)		◆		◆		◆		◆		◆		
D R I V I N G	CAPSTAN MOTOR PULLEY	Δ	Δ	Δ	Δ	Δ	0	0	0	0	0	
	BELT PULLEY				0	0	0	0	0	0	0	
	HOLDER CLUTCH ASS'Y	Δ	0	0	0	0	0	0	0	0	0	
	GEAR CENTER ASS'Y		0	0	0	0	0	0	0	0	0	
	GEAR IDLE (2Point)		0	0	0	0	0	0	0	0	0	
	LOADING MOTOR		0	0	0	0	0	0	0	0	0	
B R A K E	BAND BRAKE ASS'Y		0	0	0	0	0	0	0	0	0	
	BRAKE T ASS'Y		0	0	0	0	0	0	0	0	0	

Δ : Cleaning 0 : Check and replacement in necessary ◆ : Add Oil

2-6 DVD DECK

2-6-1 Holder Chuck Removal

- 1) Push 4 Hooks ❶ in the direction of arrow "A" and lift up the Holder Chuck ❷.

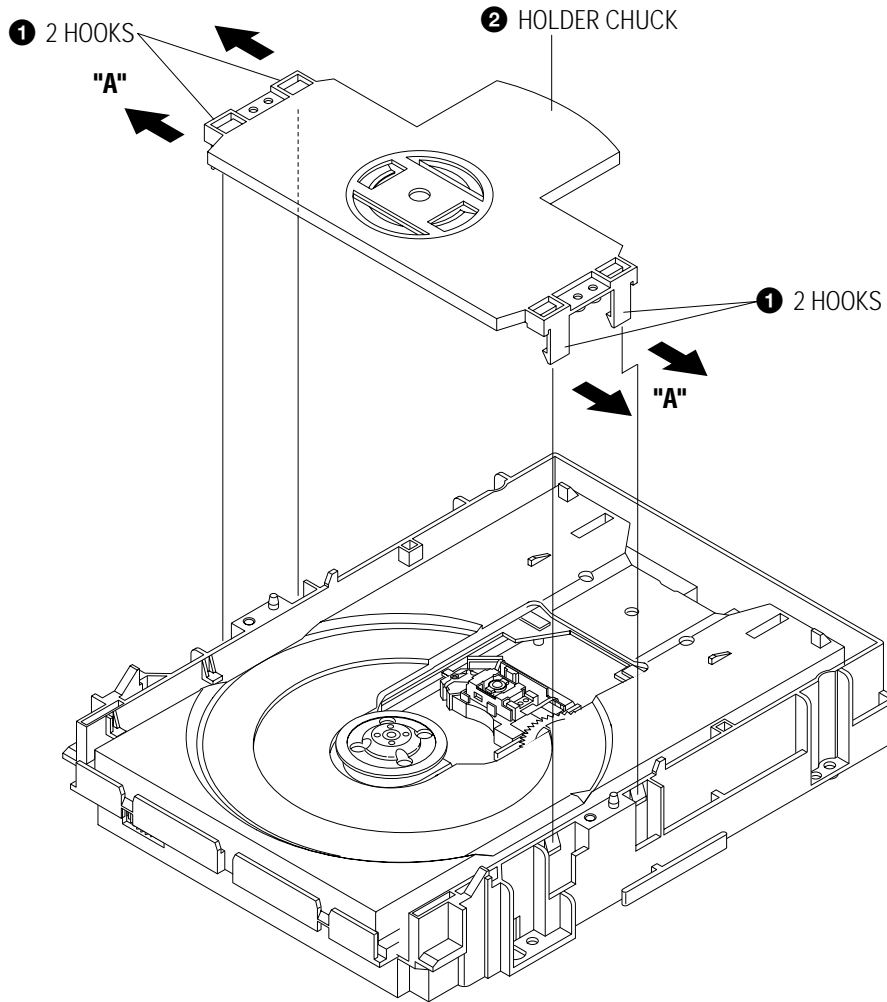


Fig. 2-44 Holder Chuck Removal

2-6-2 Tray Disc Removal

- 1) Insert a Screw Driver **1** into Emergency Hole **2** and push the Slider Housing **3** in the direction arrow "A".
- 2) When the Tray Disc **4** comes out a little, pull it in the direction arrow "B" by hand.

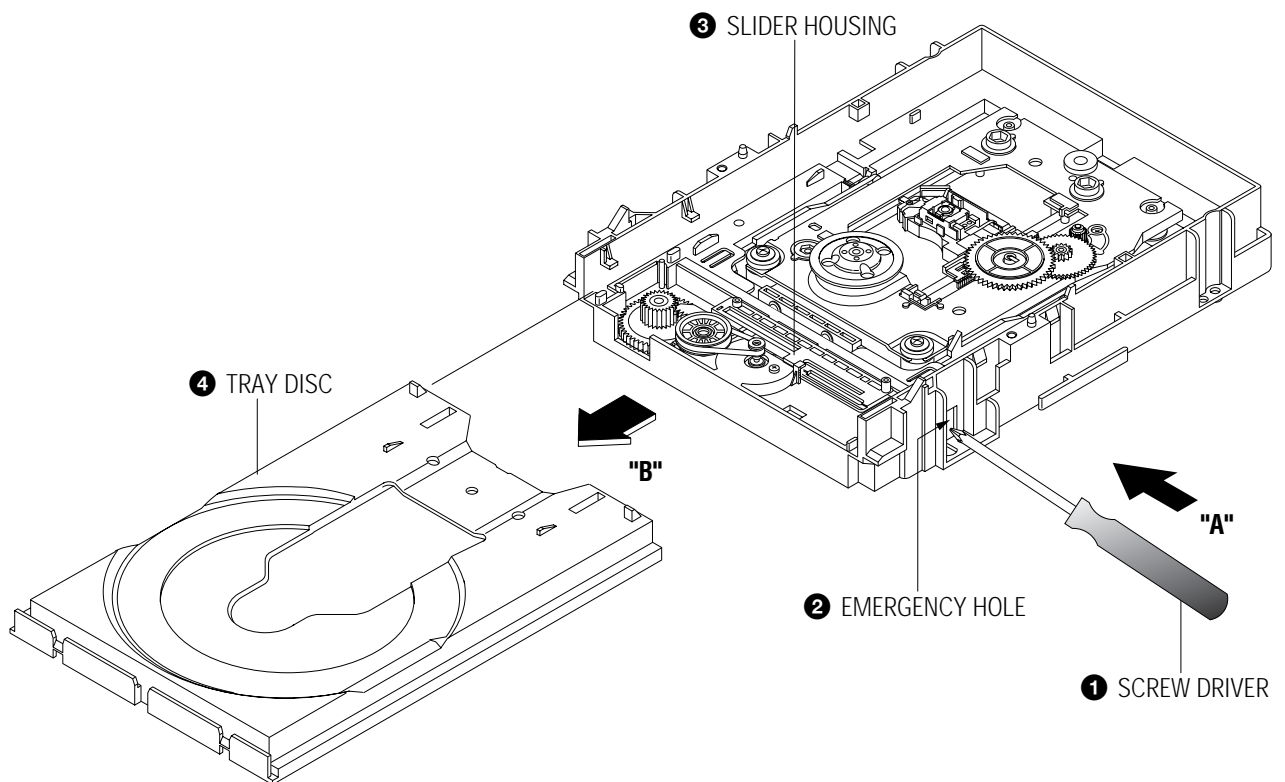


Fig. 2-45 Tray Disc Removal

2-6-3 Ass'y P/U Deck Removal

- 1) Remove the 4 Soldering ❶ (SL+, SL-, SP+, SP-).
- 2) Remove the 1 Screw ❷ and lift up the Ass'y P/U Deck ❸ in the direction arrow "A".
- 3) When the Ass'y P/U Deck ❸ lift up a little, push Chassis Sub in the direction of arrow "B" and lift up the Ass'y P/U Deck ❸.

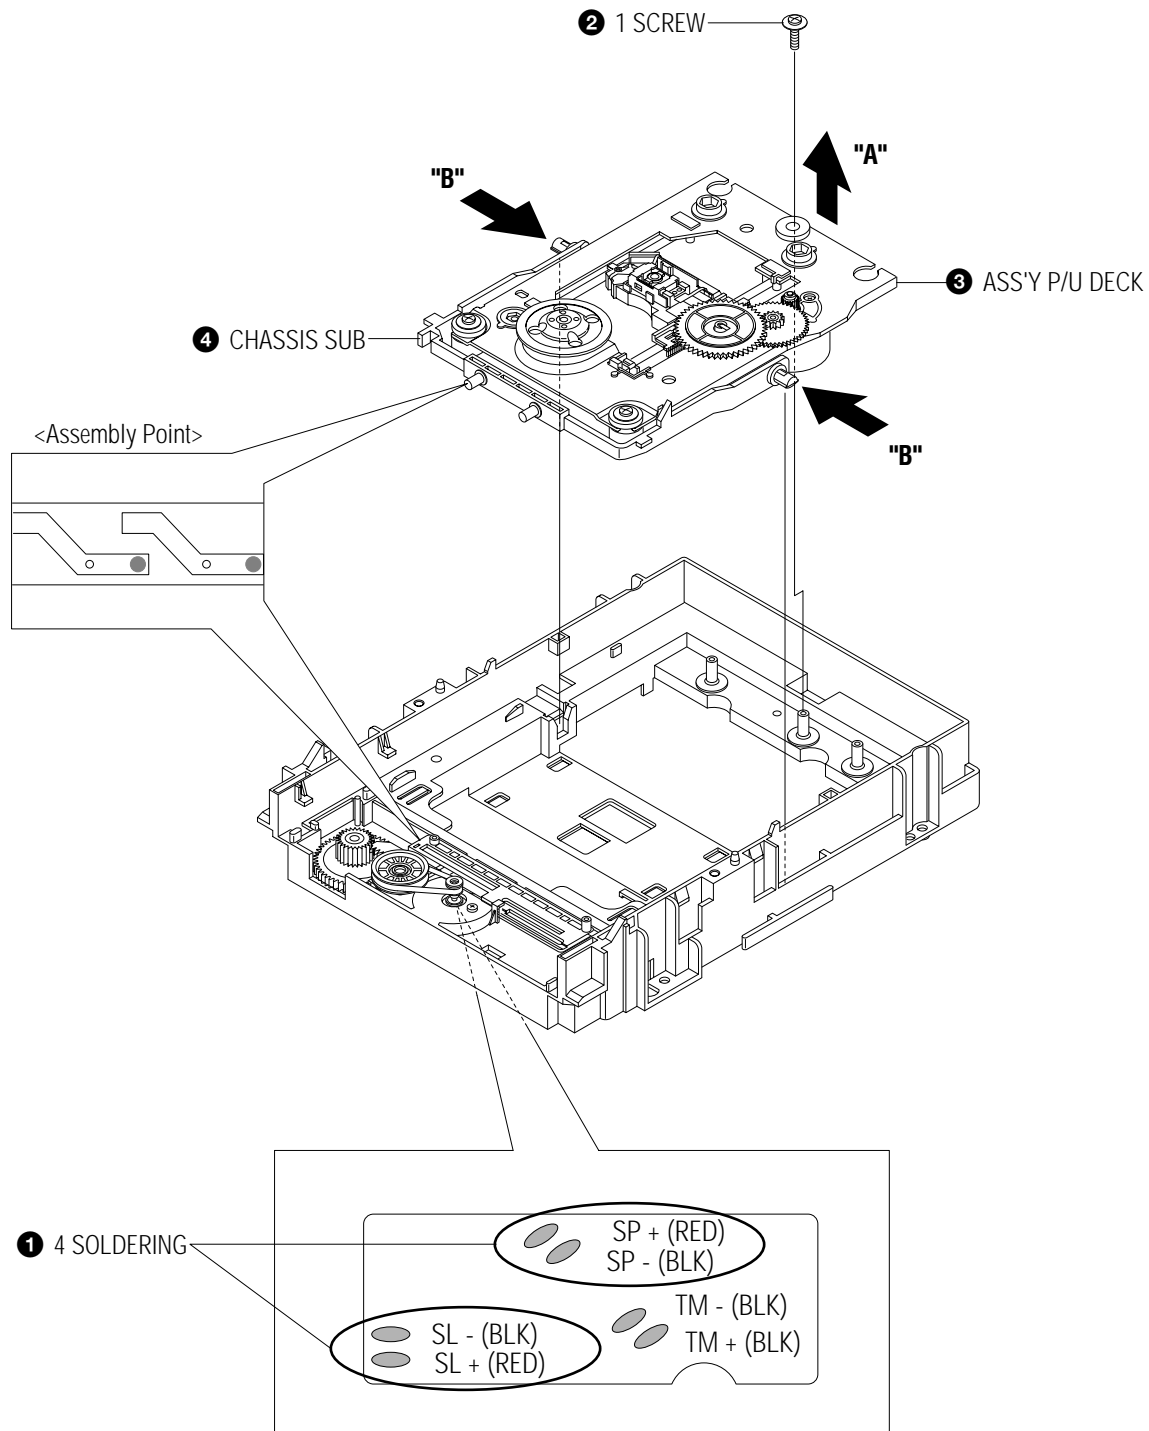


Fig. 2-46 Ass'y P/U Deck Removal

2-6-4 Ass'y Housing Removal

- 1) Remove the 2 Soldering ①. (TM+, TM-)
- 2) Push the 2 Hooks ② in the direction of arrow "A" and remove Ass'y PCB Deck ③.
- 3) Push the Slider Housing ④ in the direction arrow "B".
- 4) Push the 1 Hook ⑤ in the direction of arrow "C" and lift up the Slider Housing ④.
- 5) Remove the Belt Pulley ⑥ and 2 Screws ⑦, Ass'y Motor Load ⑧.
- 6) Push the 1 Hook ⑨ in the direction of arrow "D" and lift up the Gear Pulley ⑩, Gear Tray ⑪.

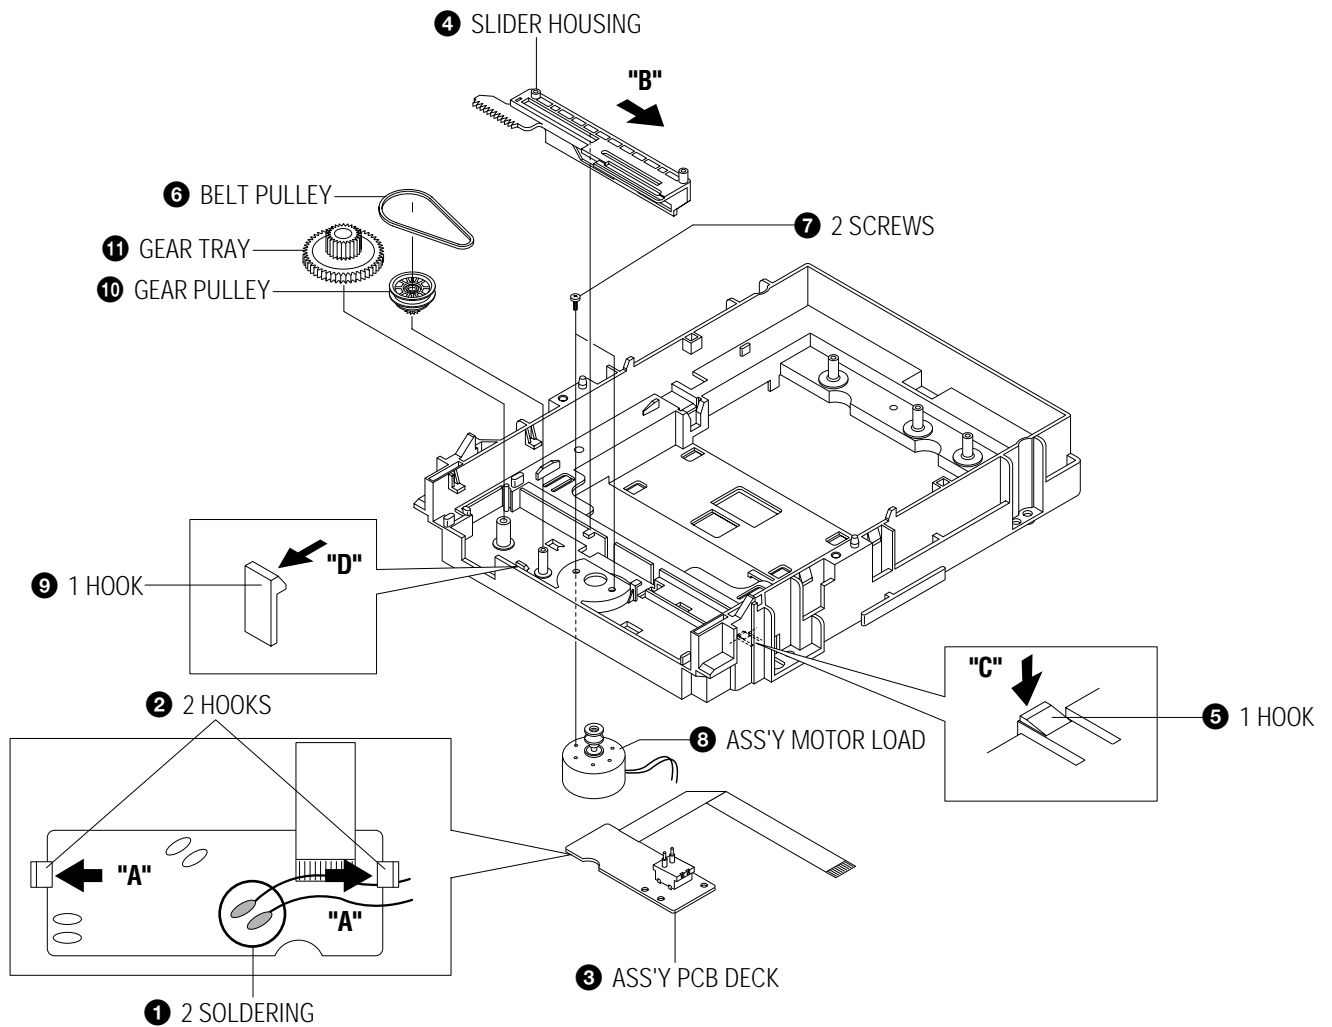


Fig. 2-47 Ass'y Housing Removal

2-6-5 Ass'y Bracket Deck Removal

- 1) Remove the 2 Screws **1** and lift down Chassis Sub **2**.
- 2) Push the Hook **3** in the direction of arrow "A" and lift up the Gear Feed B **4**, Gear Feed A **5**.
- 3) Remove the 2 Screws **6** and lift down Motor Feed Ass'y **7**.
- 4) Remove the 2 Screws **8** and lift down Motor Spindl Ass'y **9**.
- 5) Remove the 3 Screws **10** and remove 3 Holder Cam Skew **11**, Shaft Pick Up **12**, Ass'y Pick Up **13**.


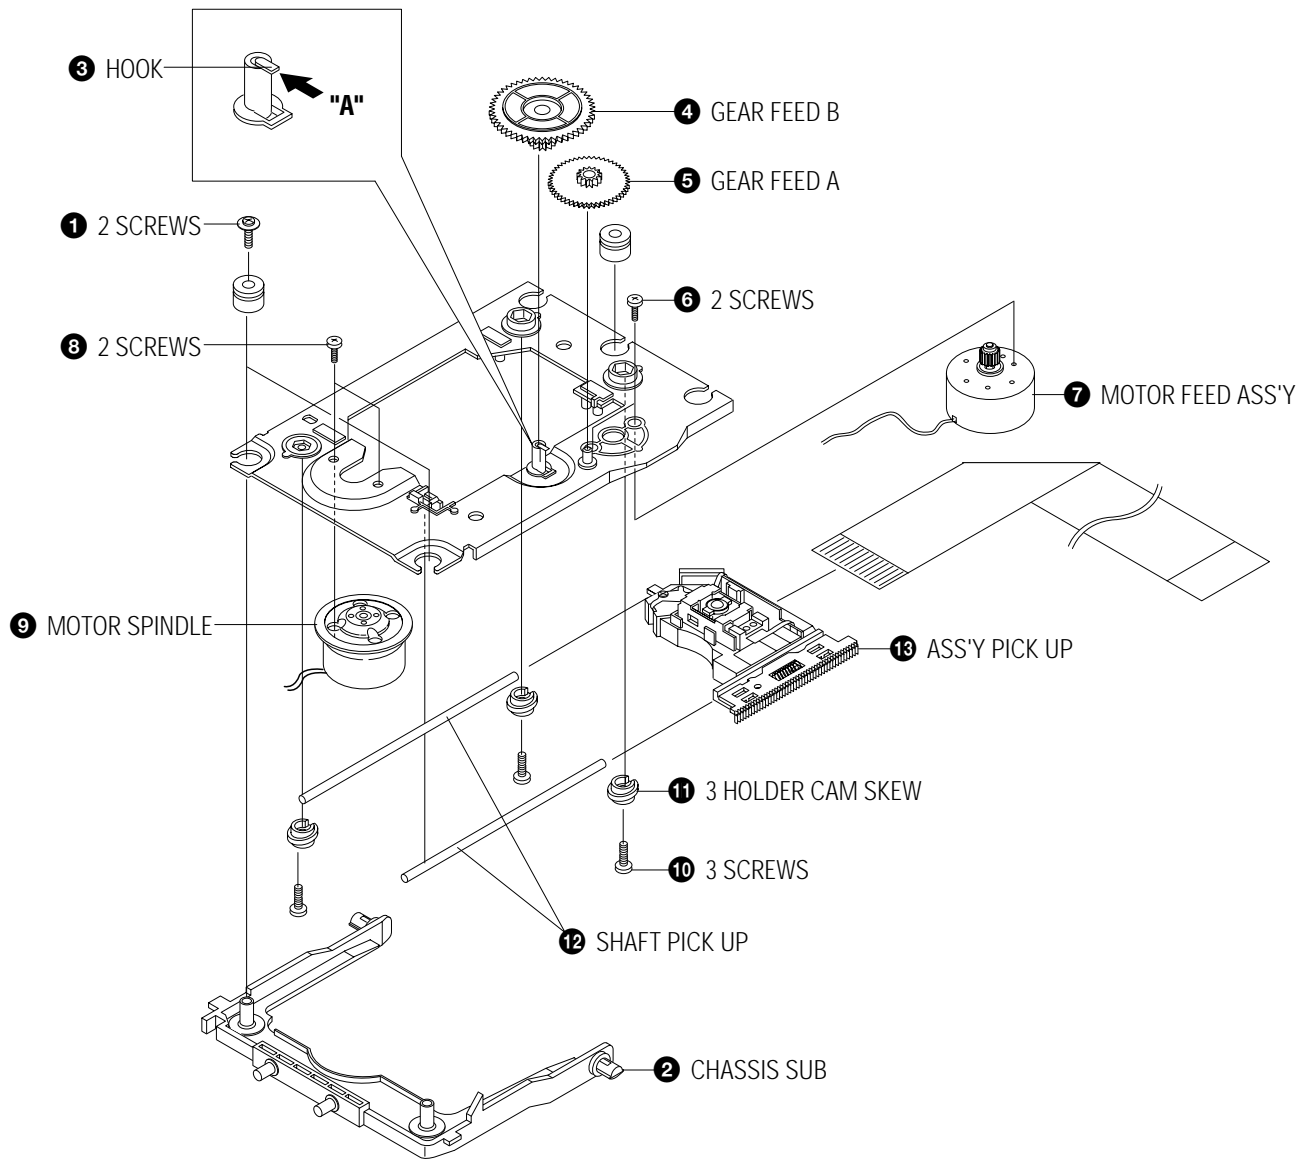


Fig. 2-48 Ass'y Bracket Deck Removal

3. BLOCK DIAGRAM

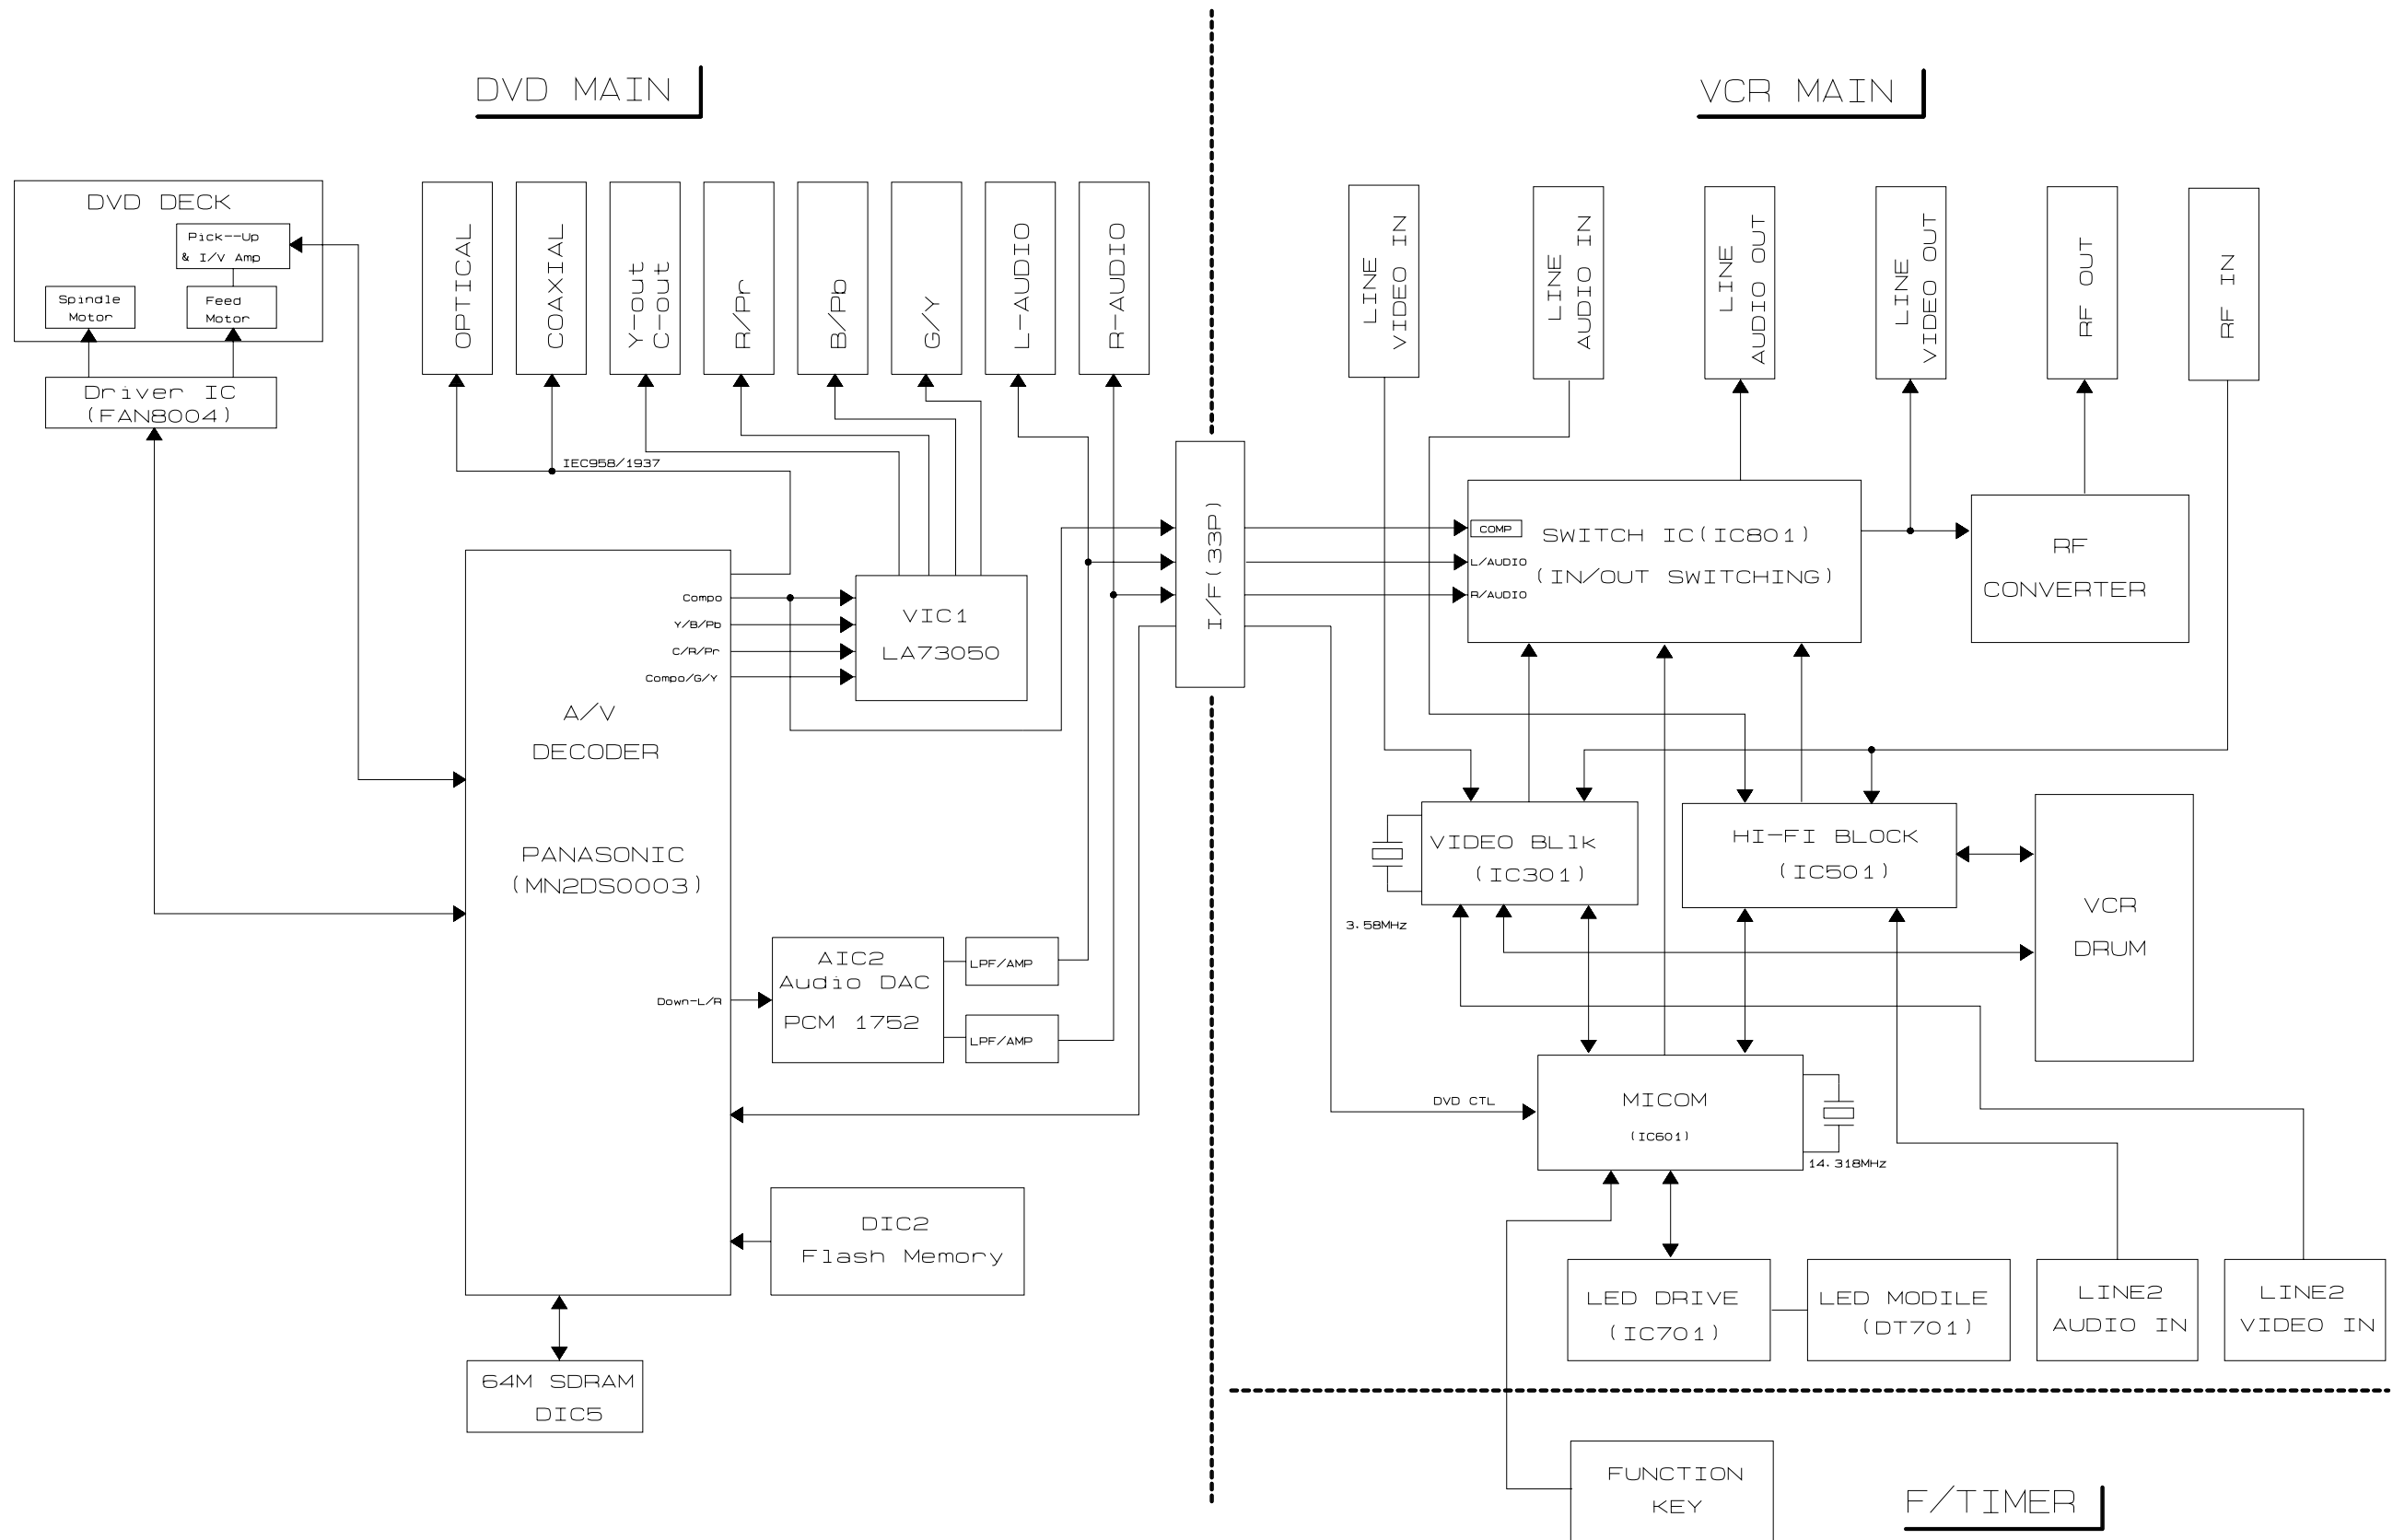

MEMO

4. PCB DIAGRAMS


4-1 VCR Main/Function-Timer 4-3

4-2 DVD Main 4-7


4-3 Dial-Timer (SLV-D550P Only) 4-9

4-1 VCR MAIN/FUNCTION-TIMER


COMPONENT SIDE

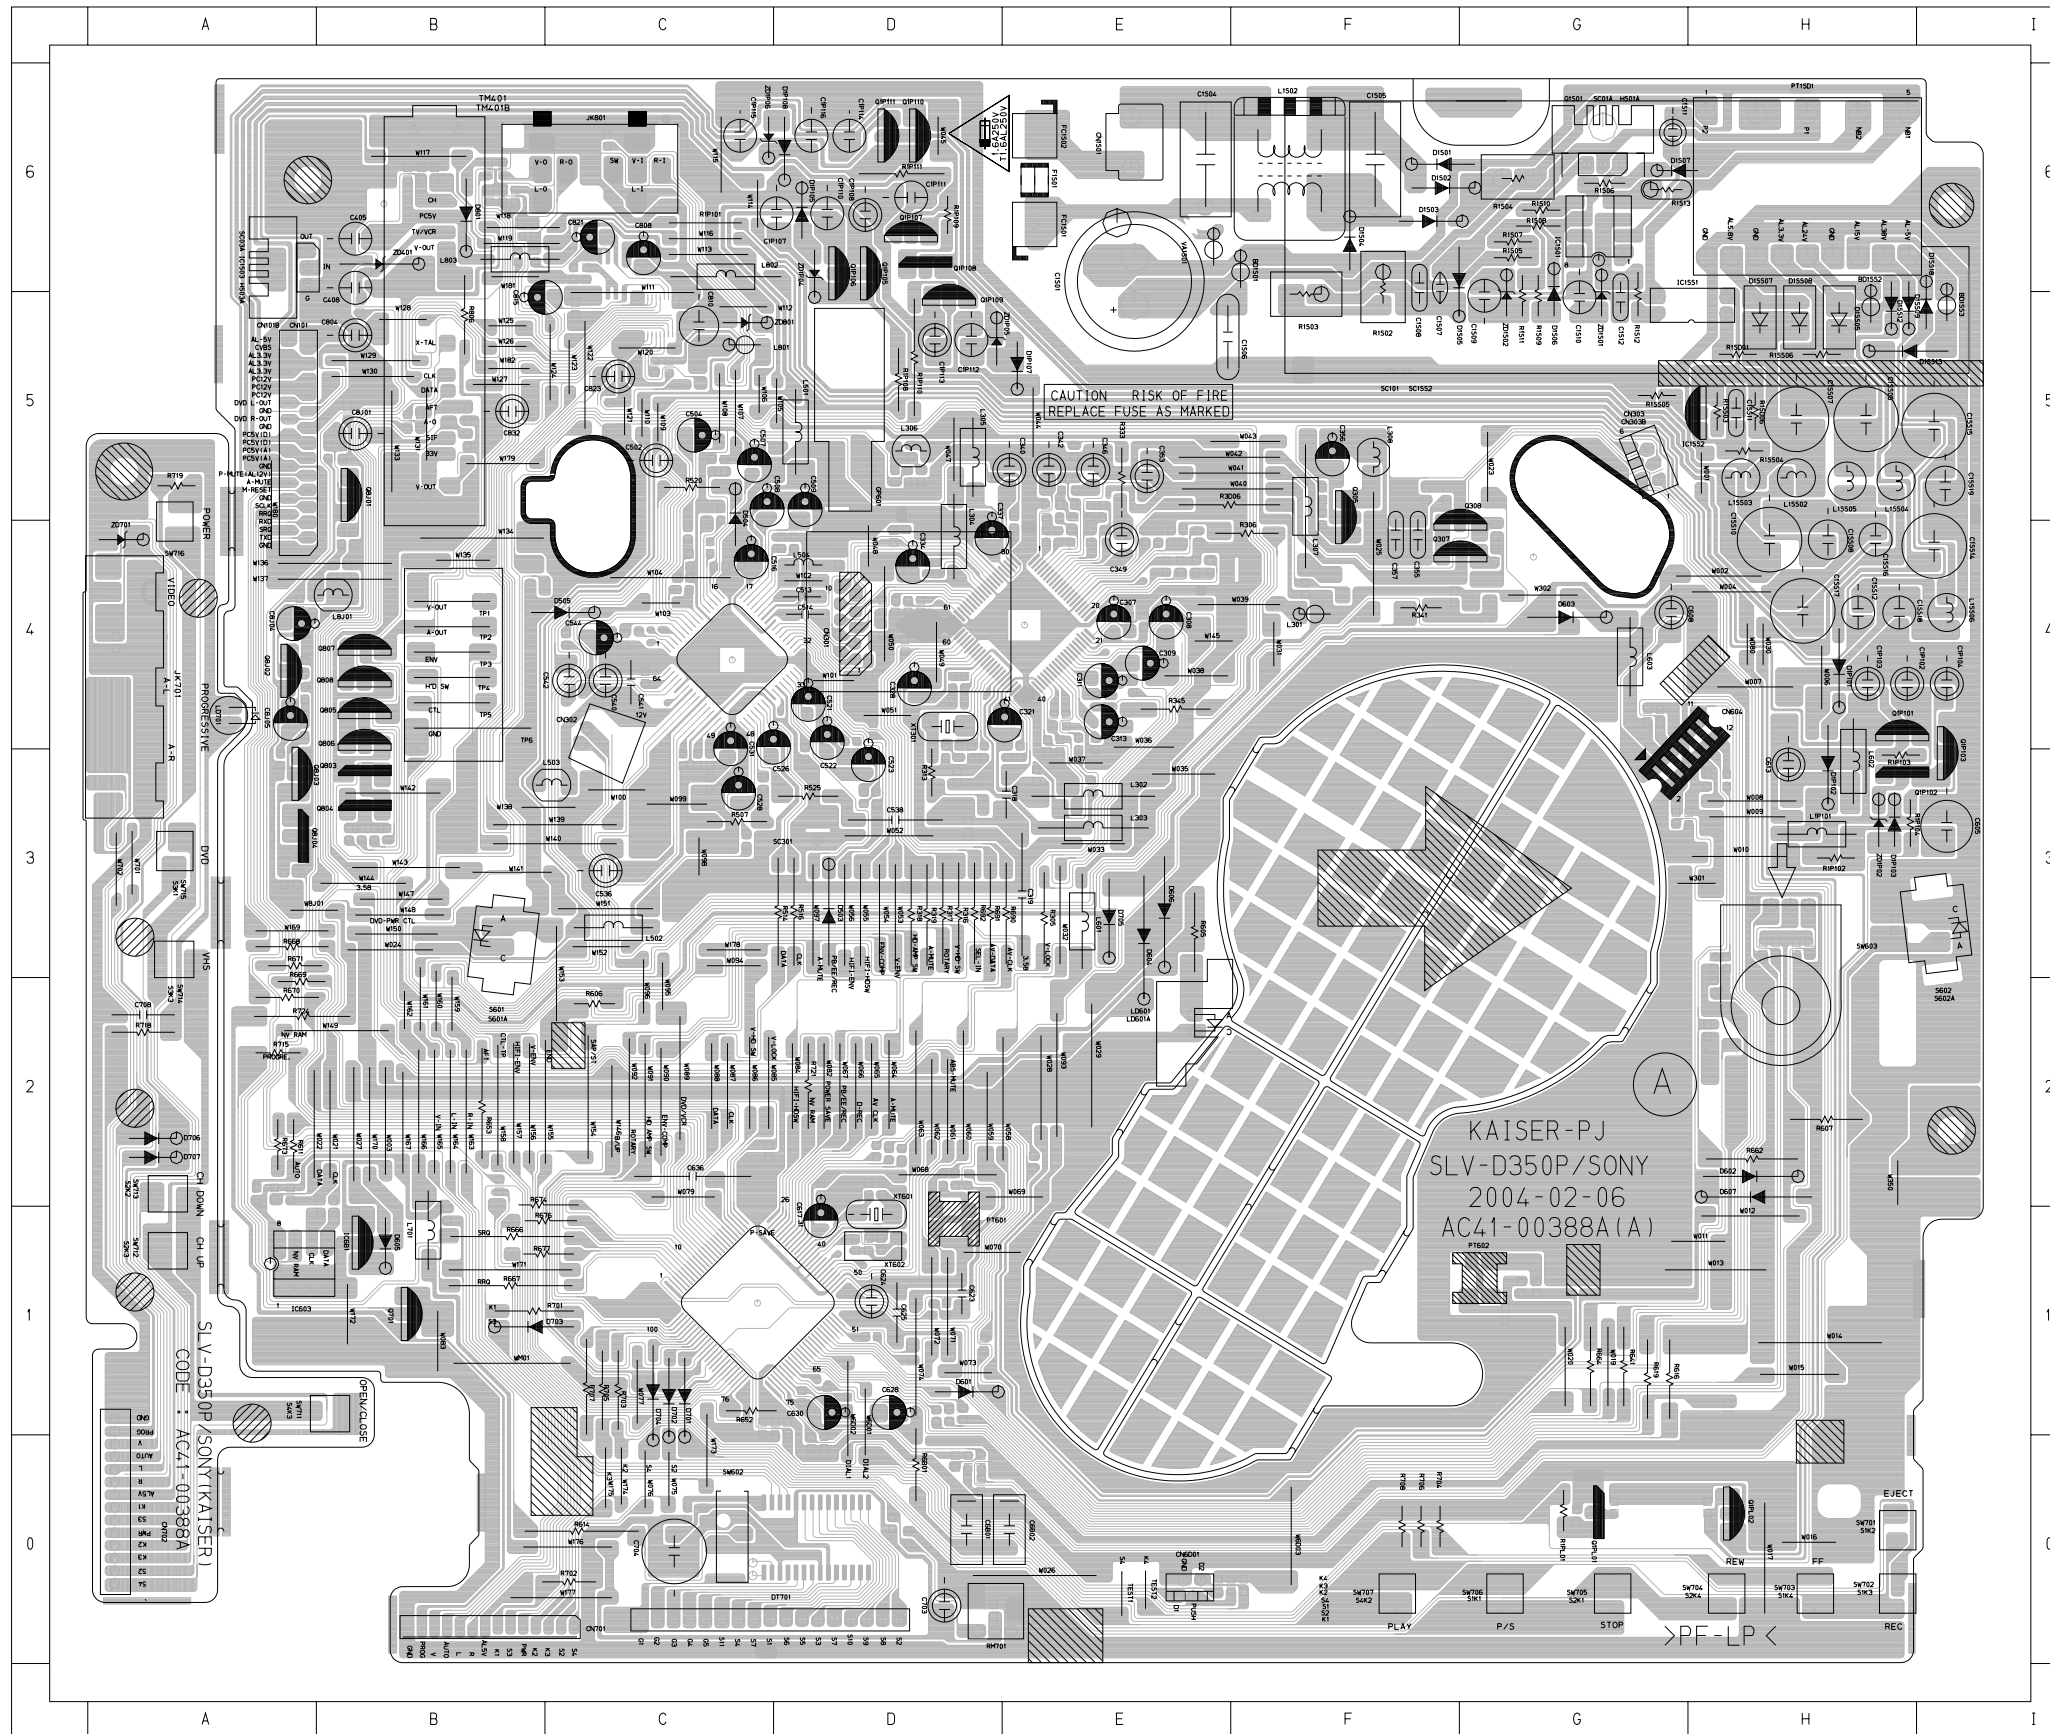


CONDUCTOR SIDE

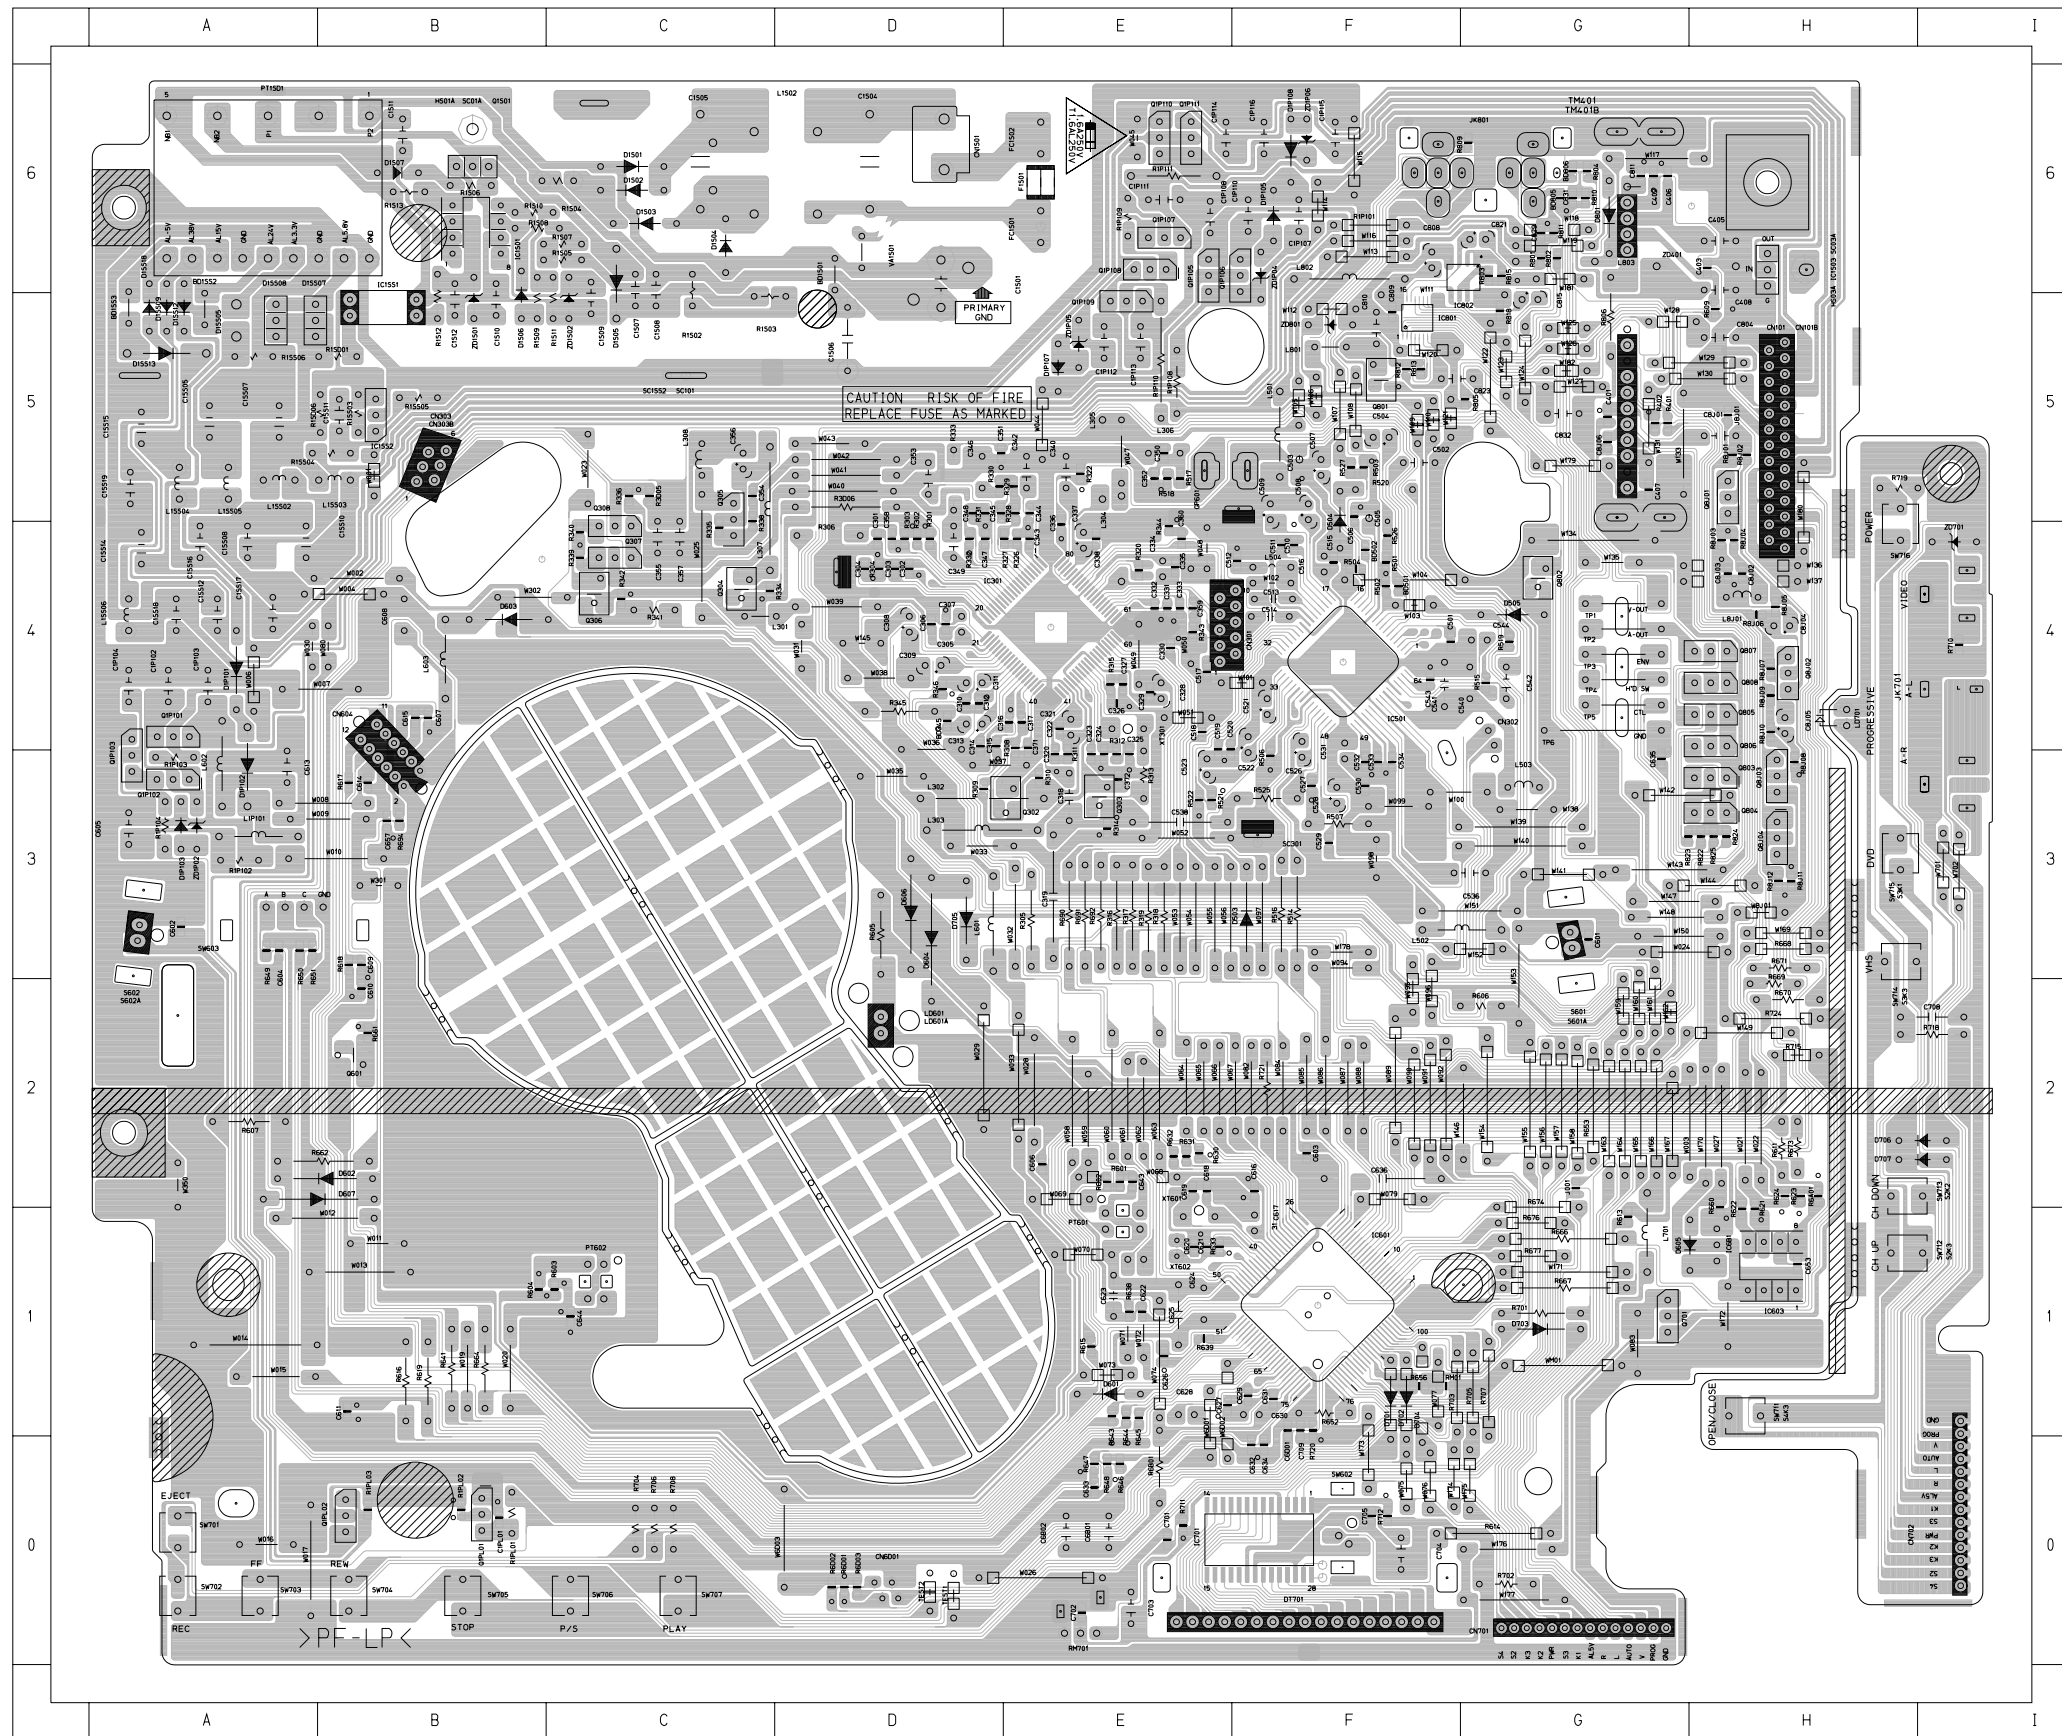

COMPONENT SIDE

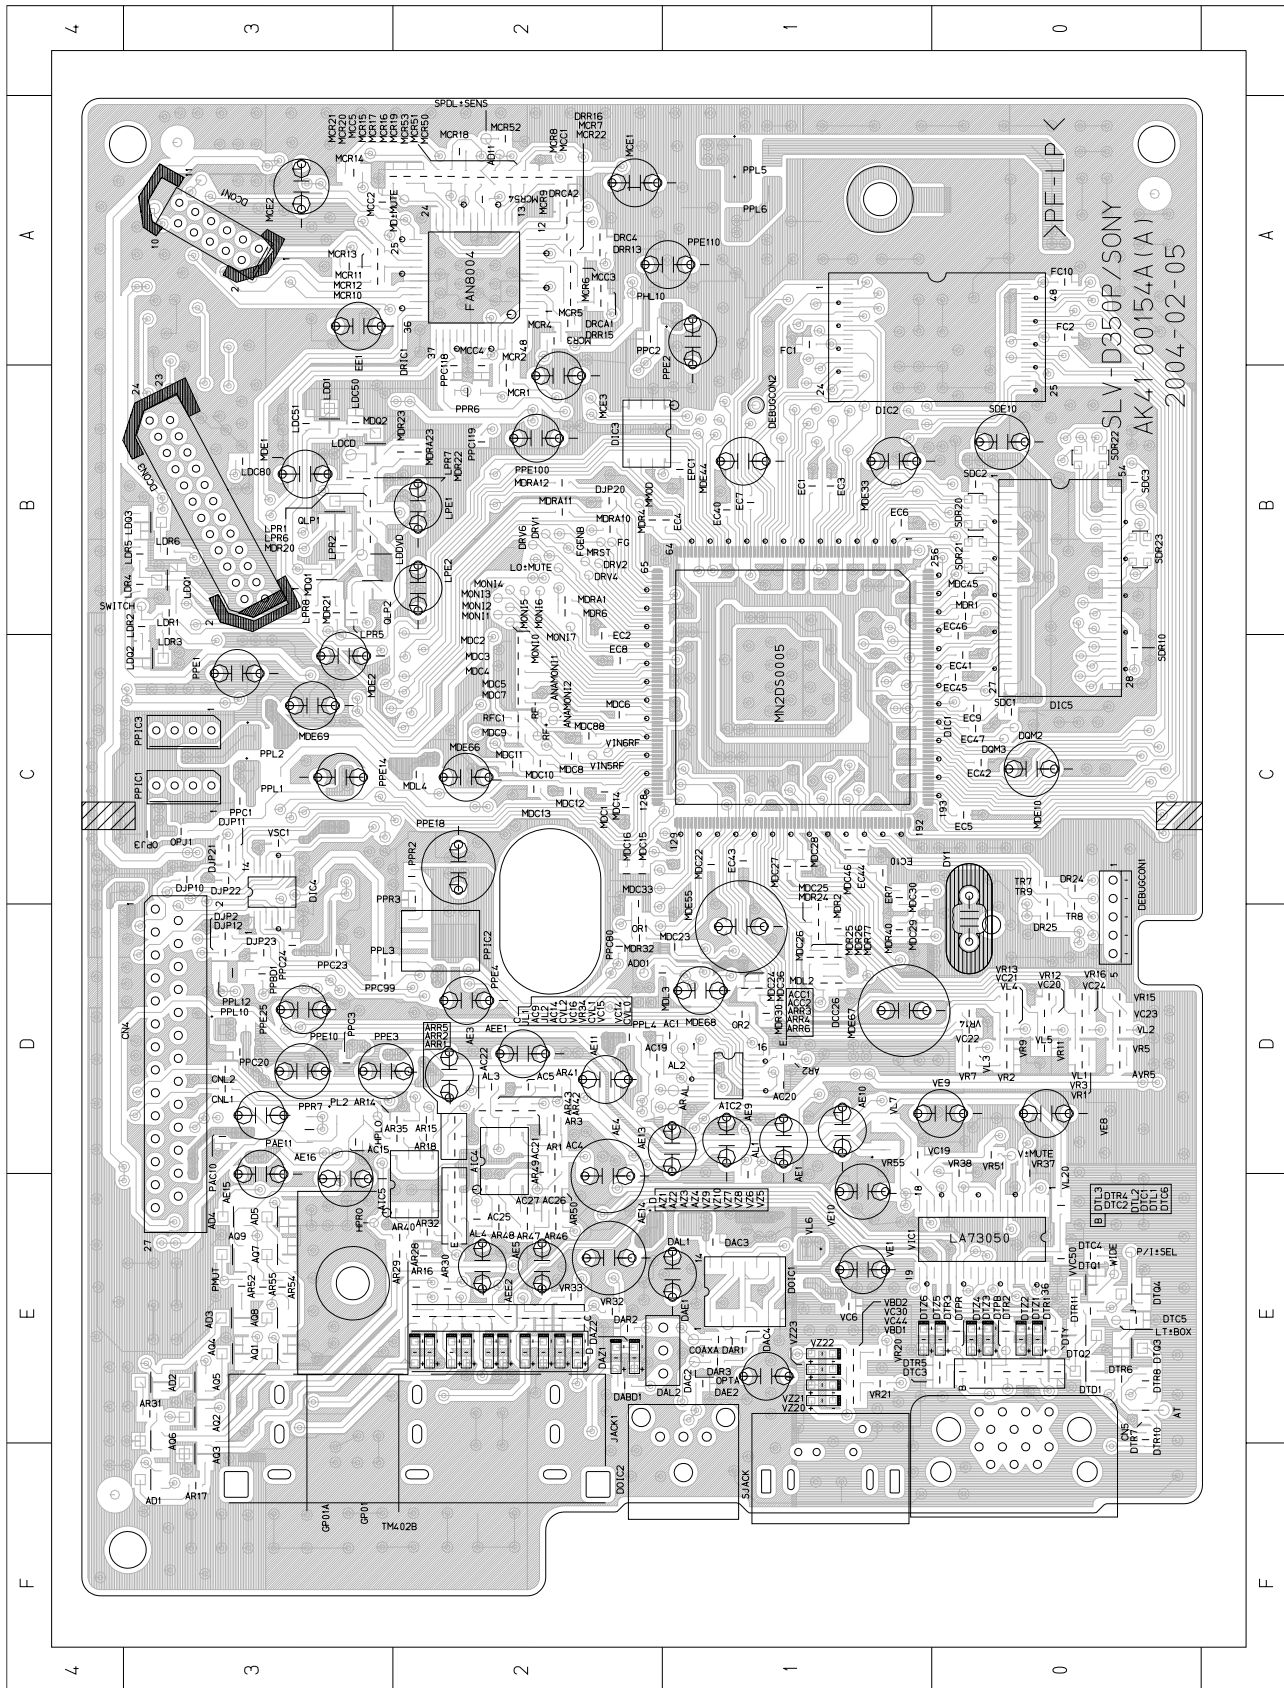


CONDUCTOR SIDE

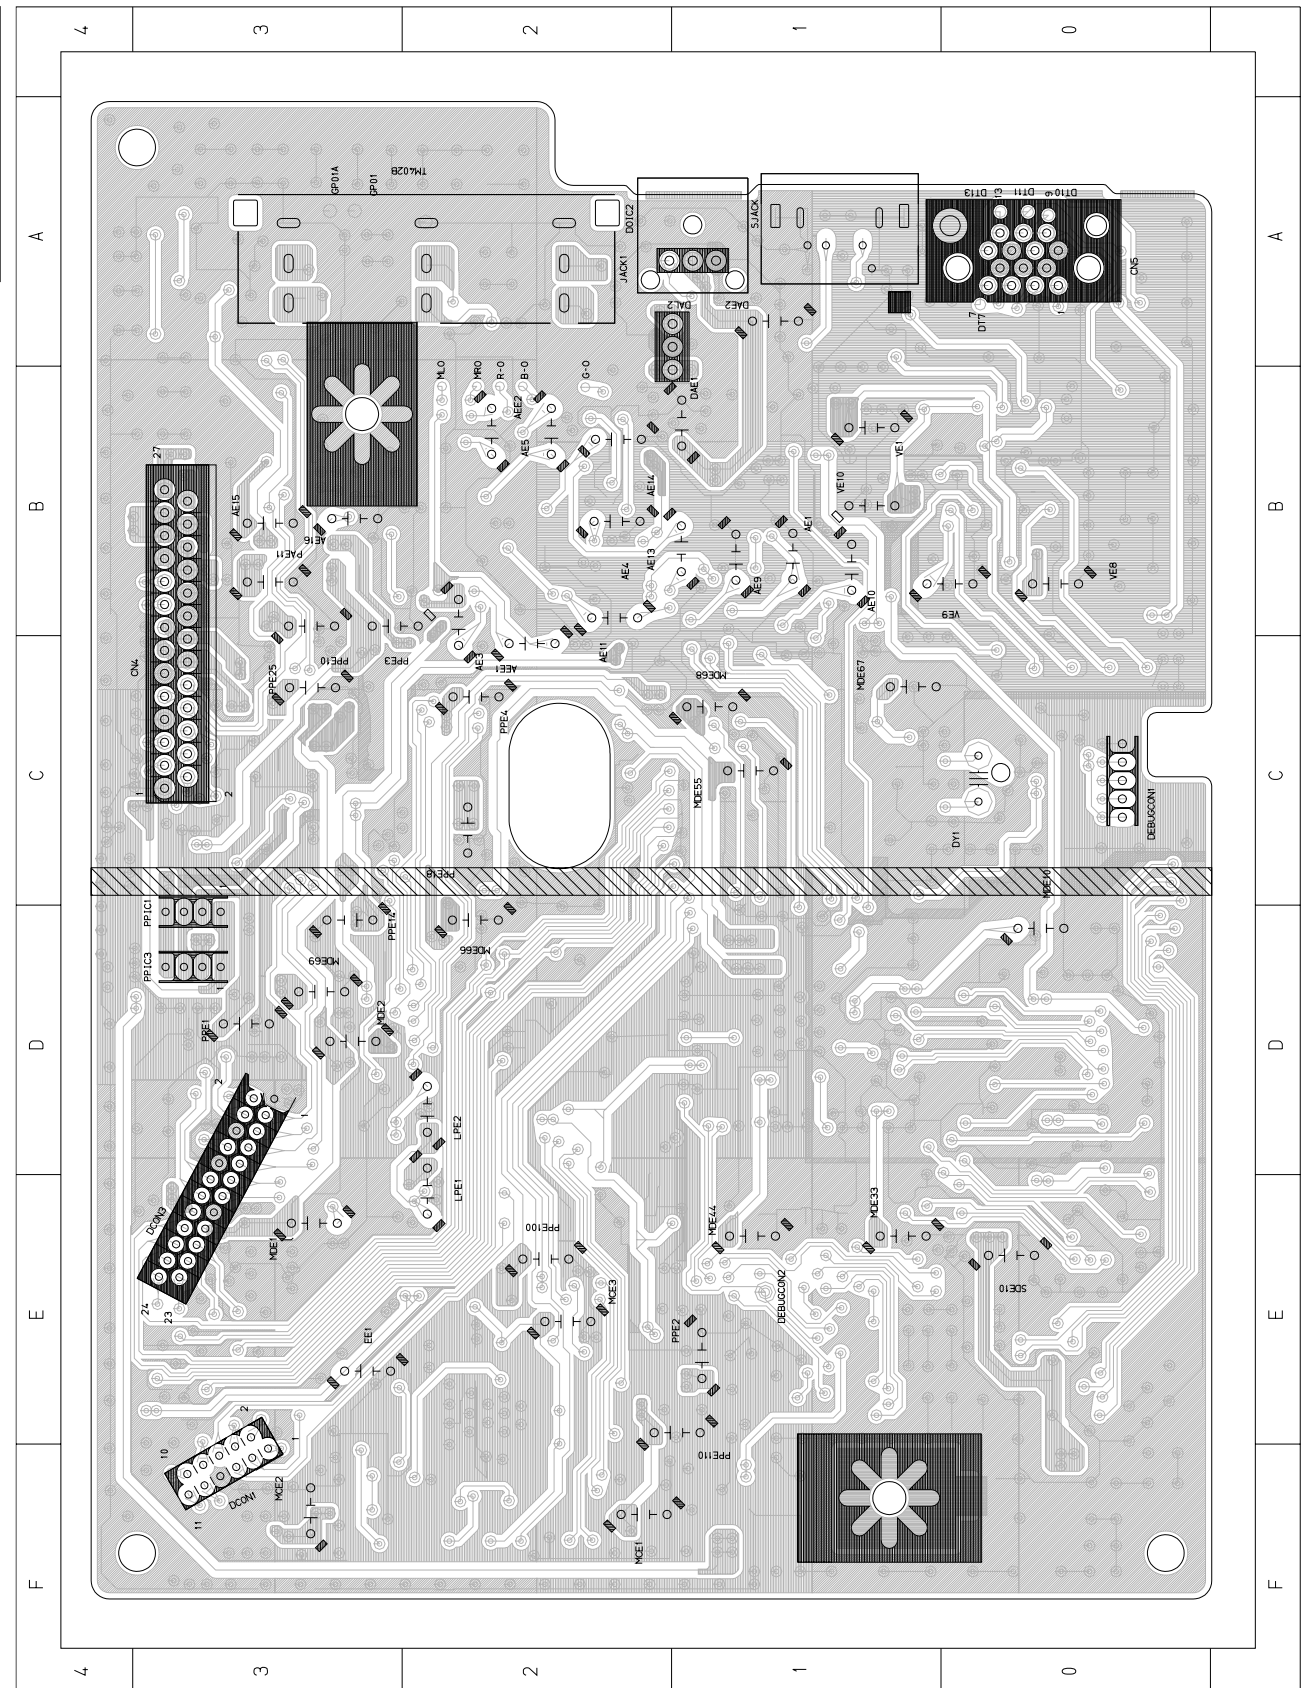


4-3 DIAL-TIMER (SLV-D550P Only)

COMPONENT SIDE

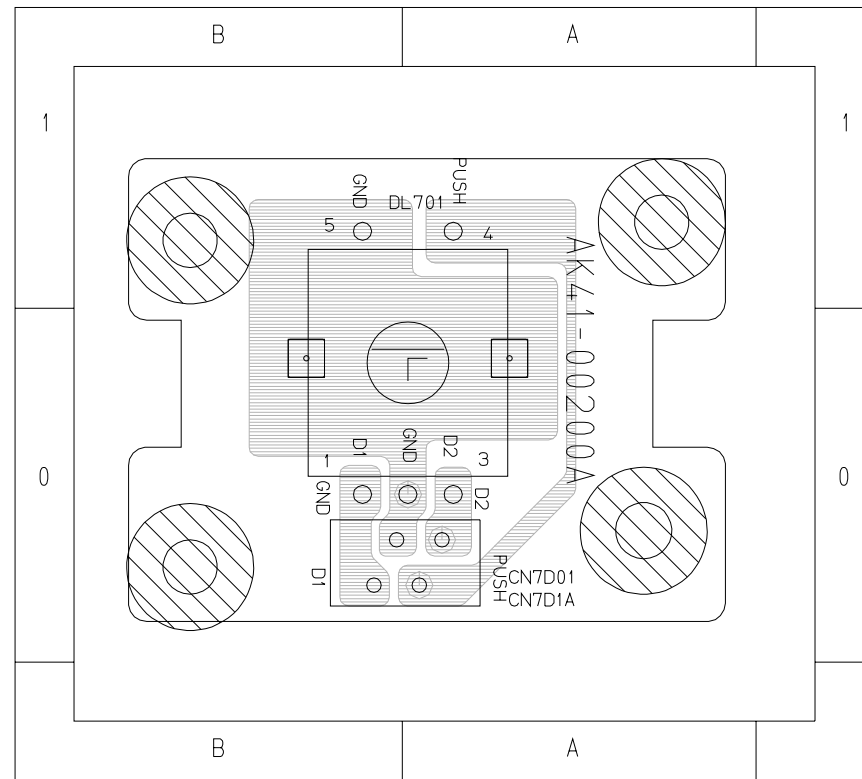

CONDUCTOR SIDE

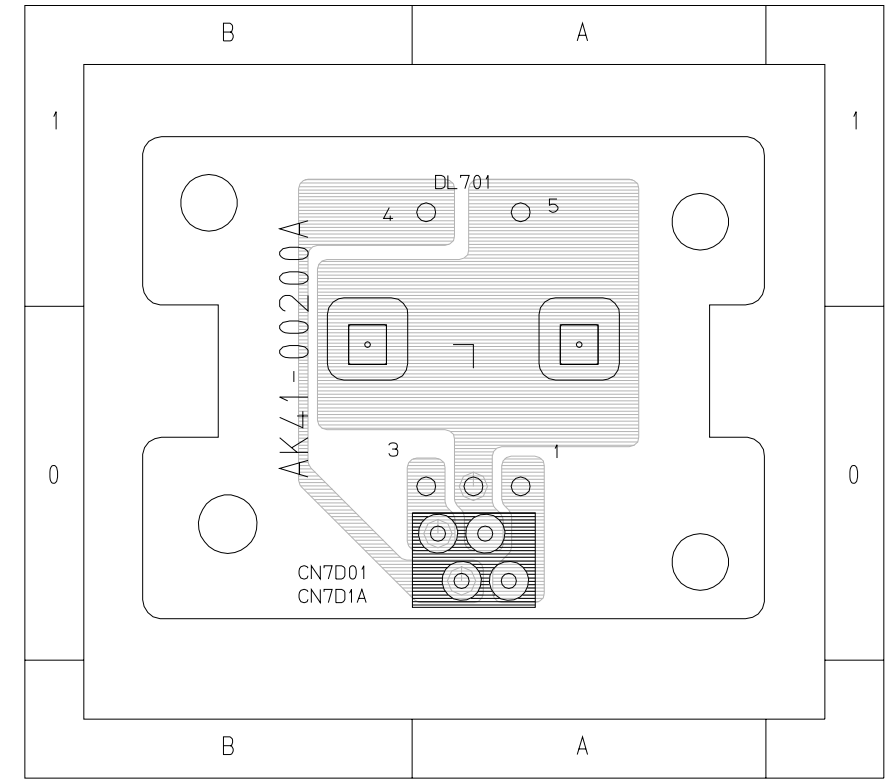

MEMO

5. SCHEMATIC DIAGRAMS

◆ **Block Identification of Main PCB** **5-3**

VCR Main PCB

5-1 S.M.P.S. **5-5**

5-2 Power Drive **5-7**

5-3 Logic/Function-Time **5-9**

5-4 A/V **5-11**

5-5 Hi-Fi/MTS **5-13**

5-6 Input-Output **5-15**

DVD Main PCB

5-7 DVD **5-17**



Note

For schematic Diagram
 - Resistors are in ohms, 1/8W unless otherwise noted.


Special note :
 Most semiconductor devices are electrostatically sensitive and therefore require the special handling techniques described under the "electrostatically sensitive (ES) devices" section of this service manual.

Important safety notices :
 Components identified with the mark \triangle have the special characteristics for safety. When replacing any of these components. Use only the same type.

◆ BLOCK IDENTIFICATION OF MAIN PCB

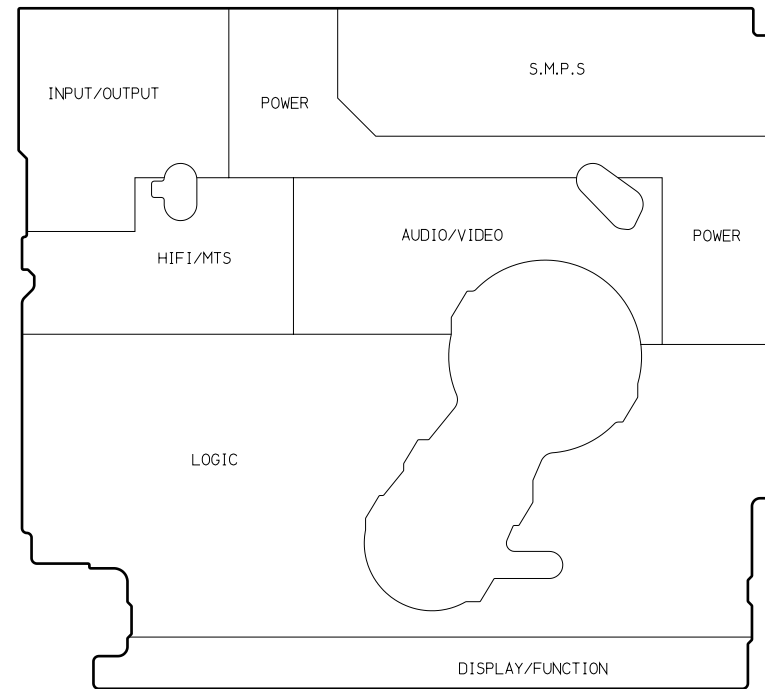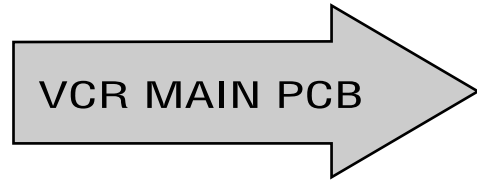


<Component Side>

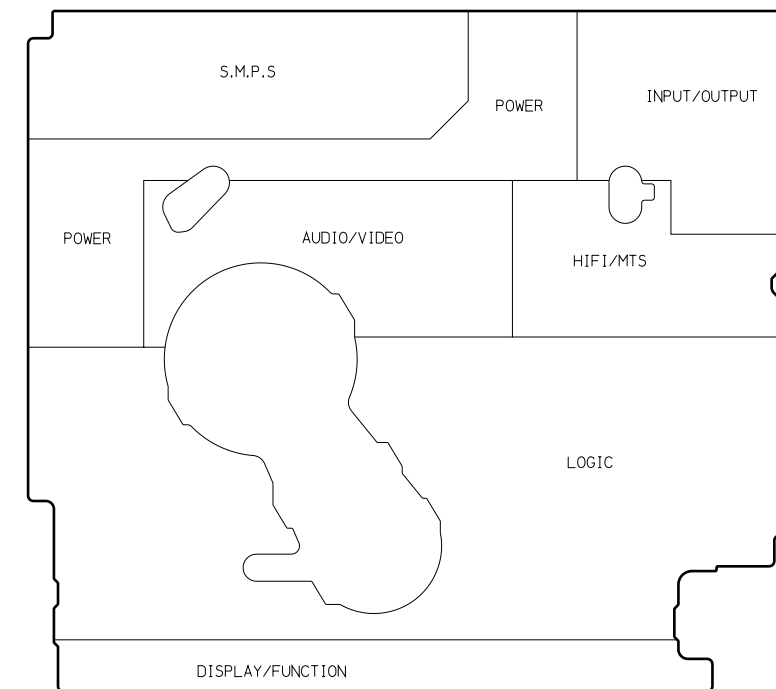



<Conductor Side>

5-2 POWER DRIVE

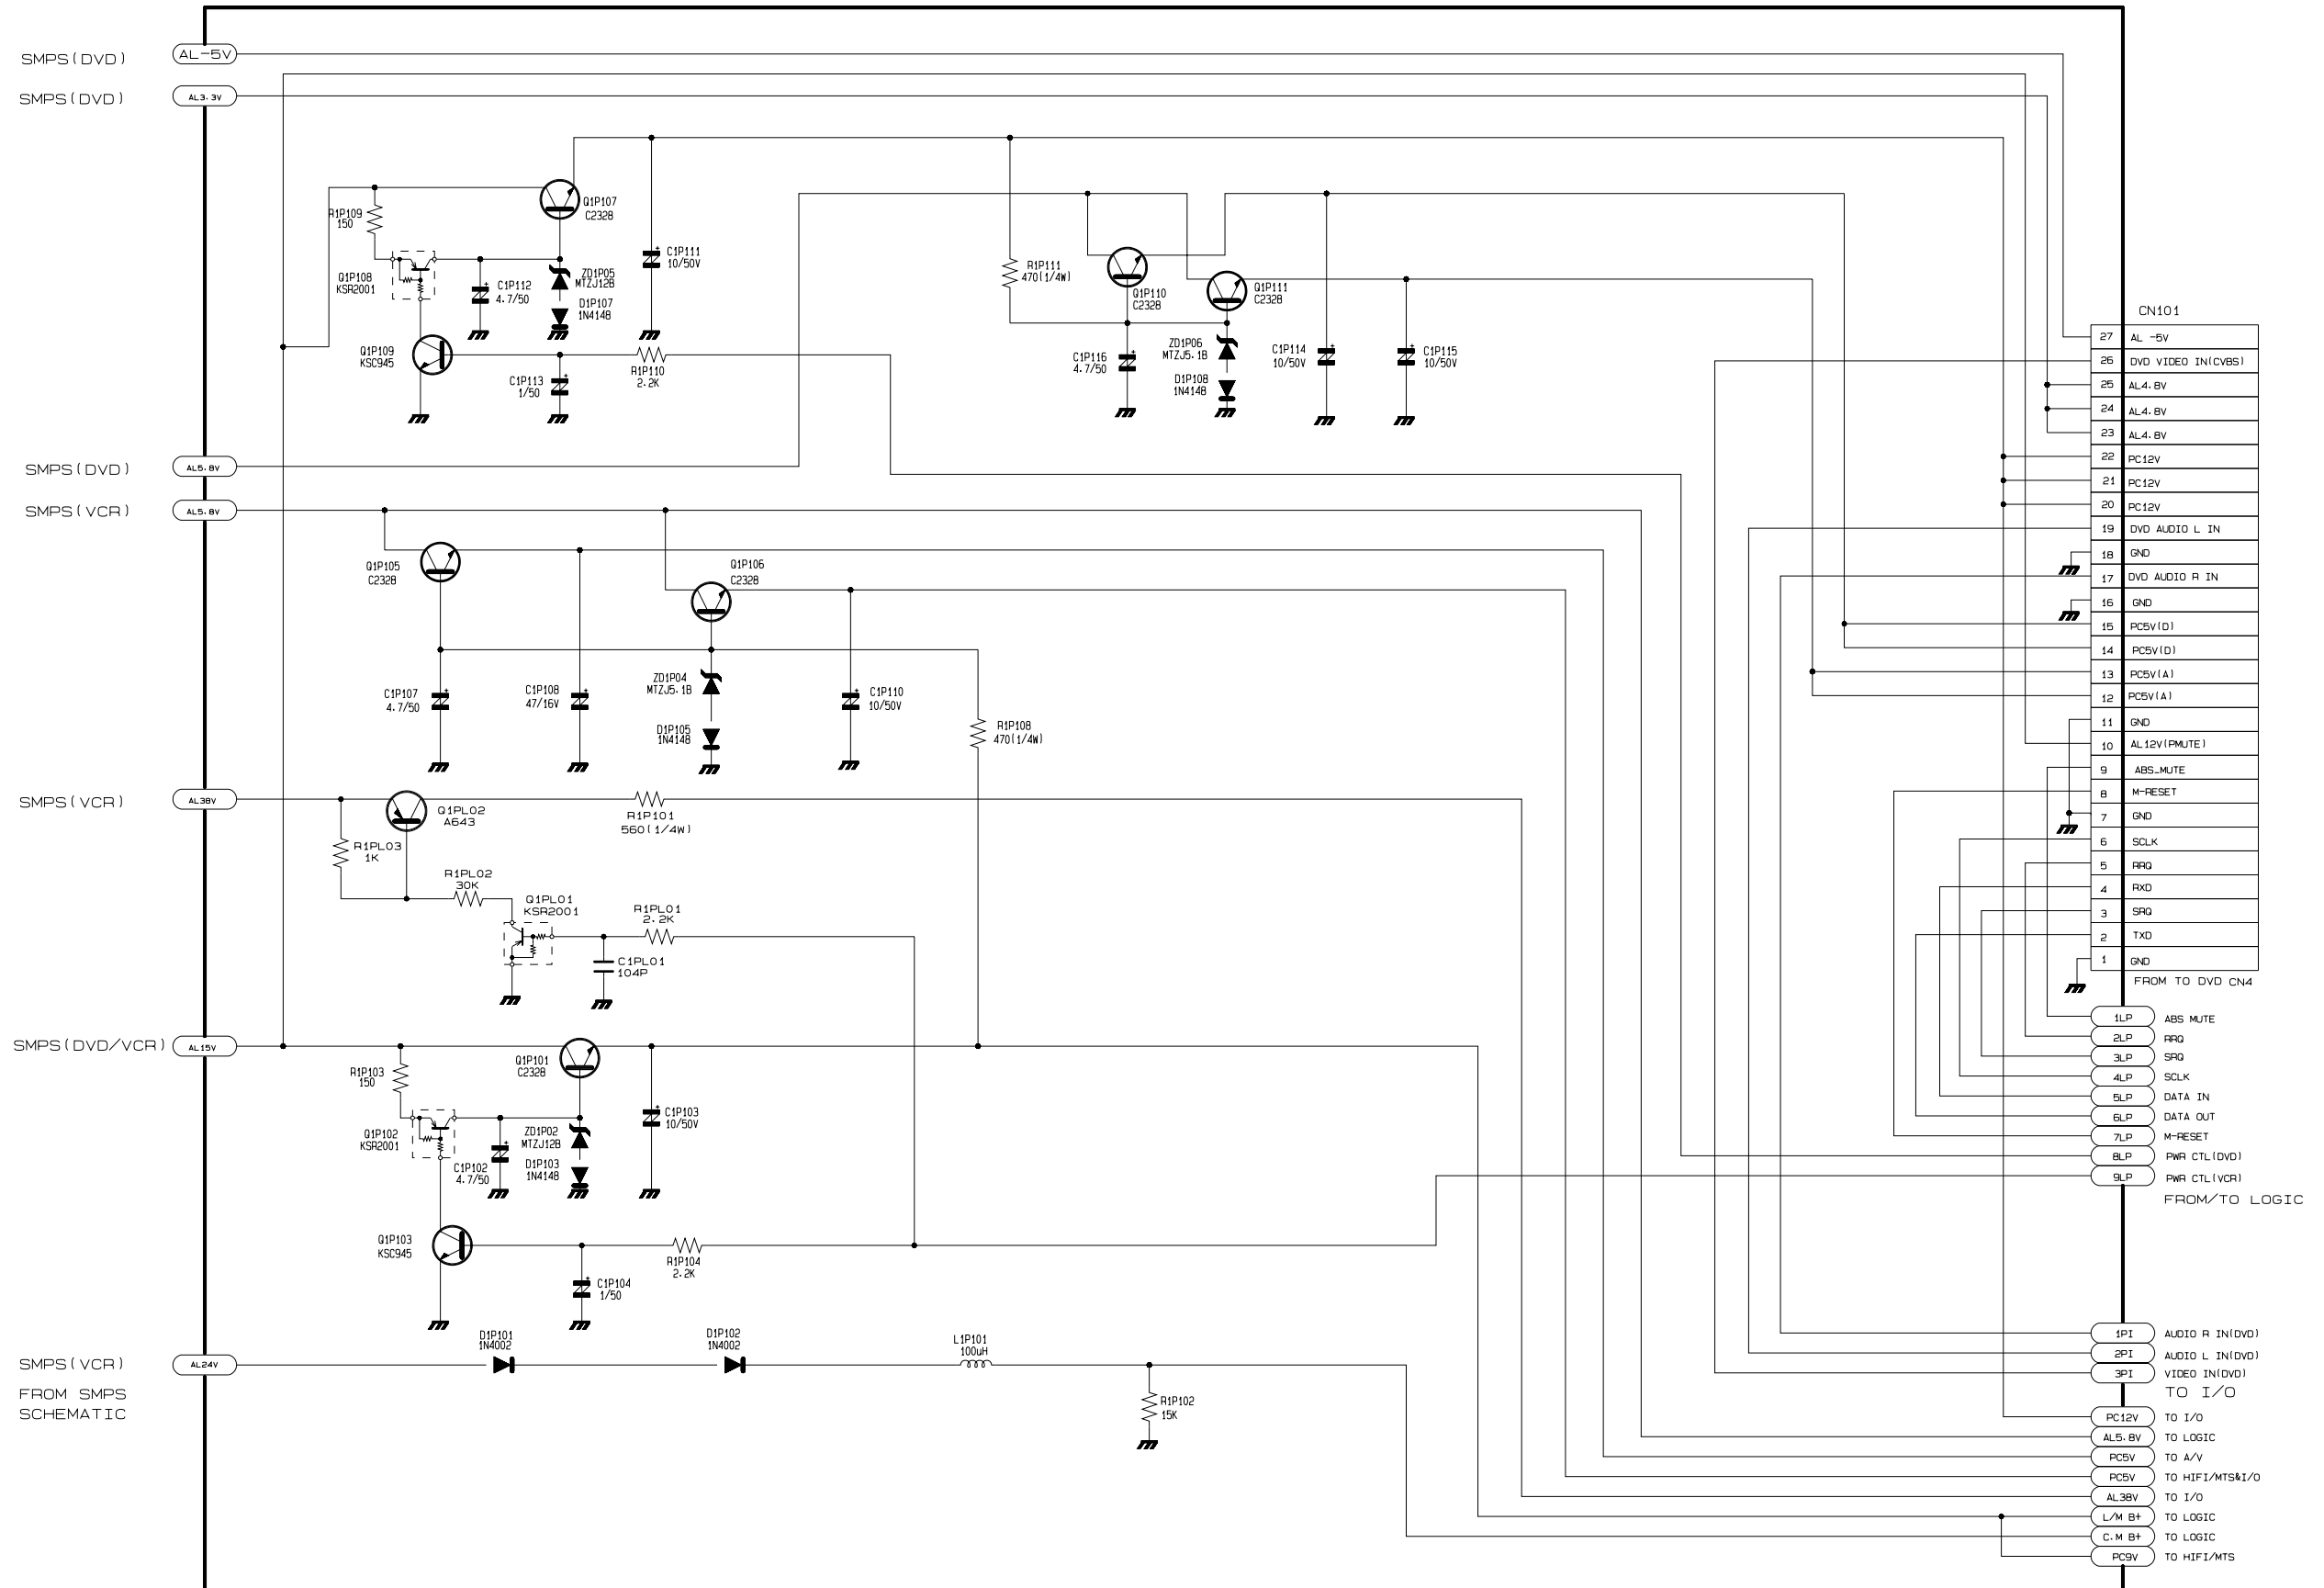



5-3 LOGIC/FUNCTION-TIMER

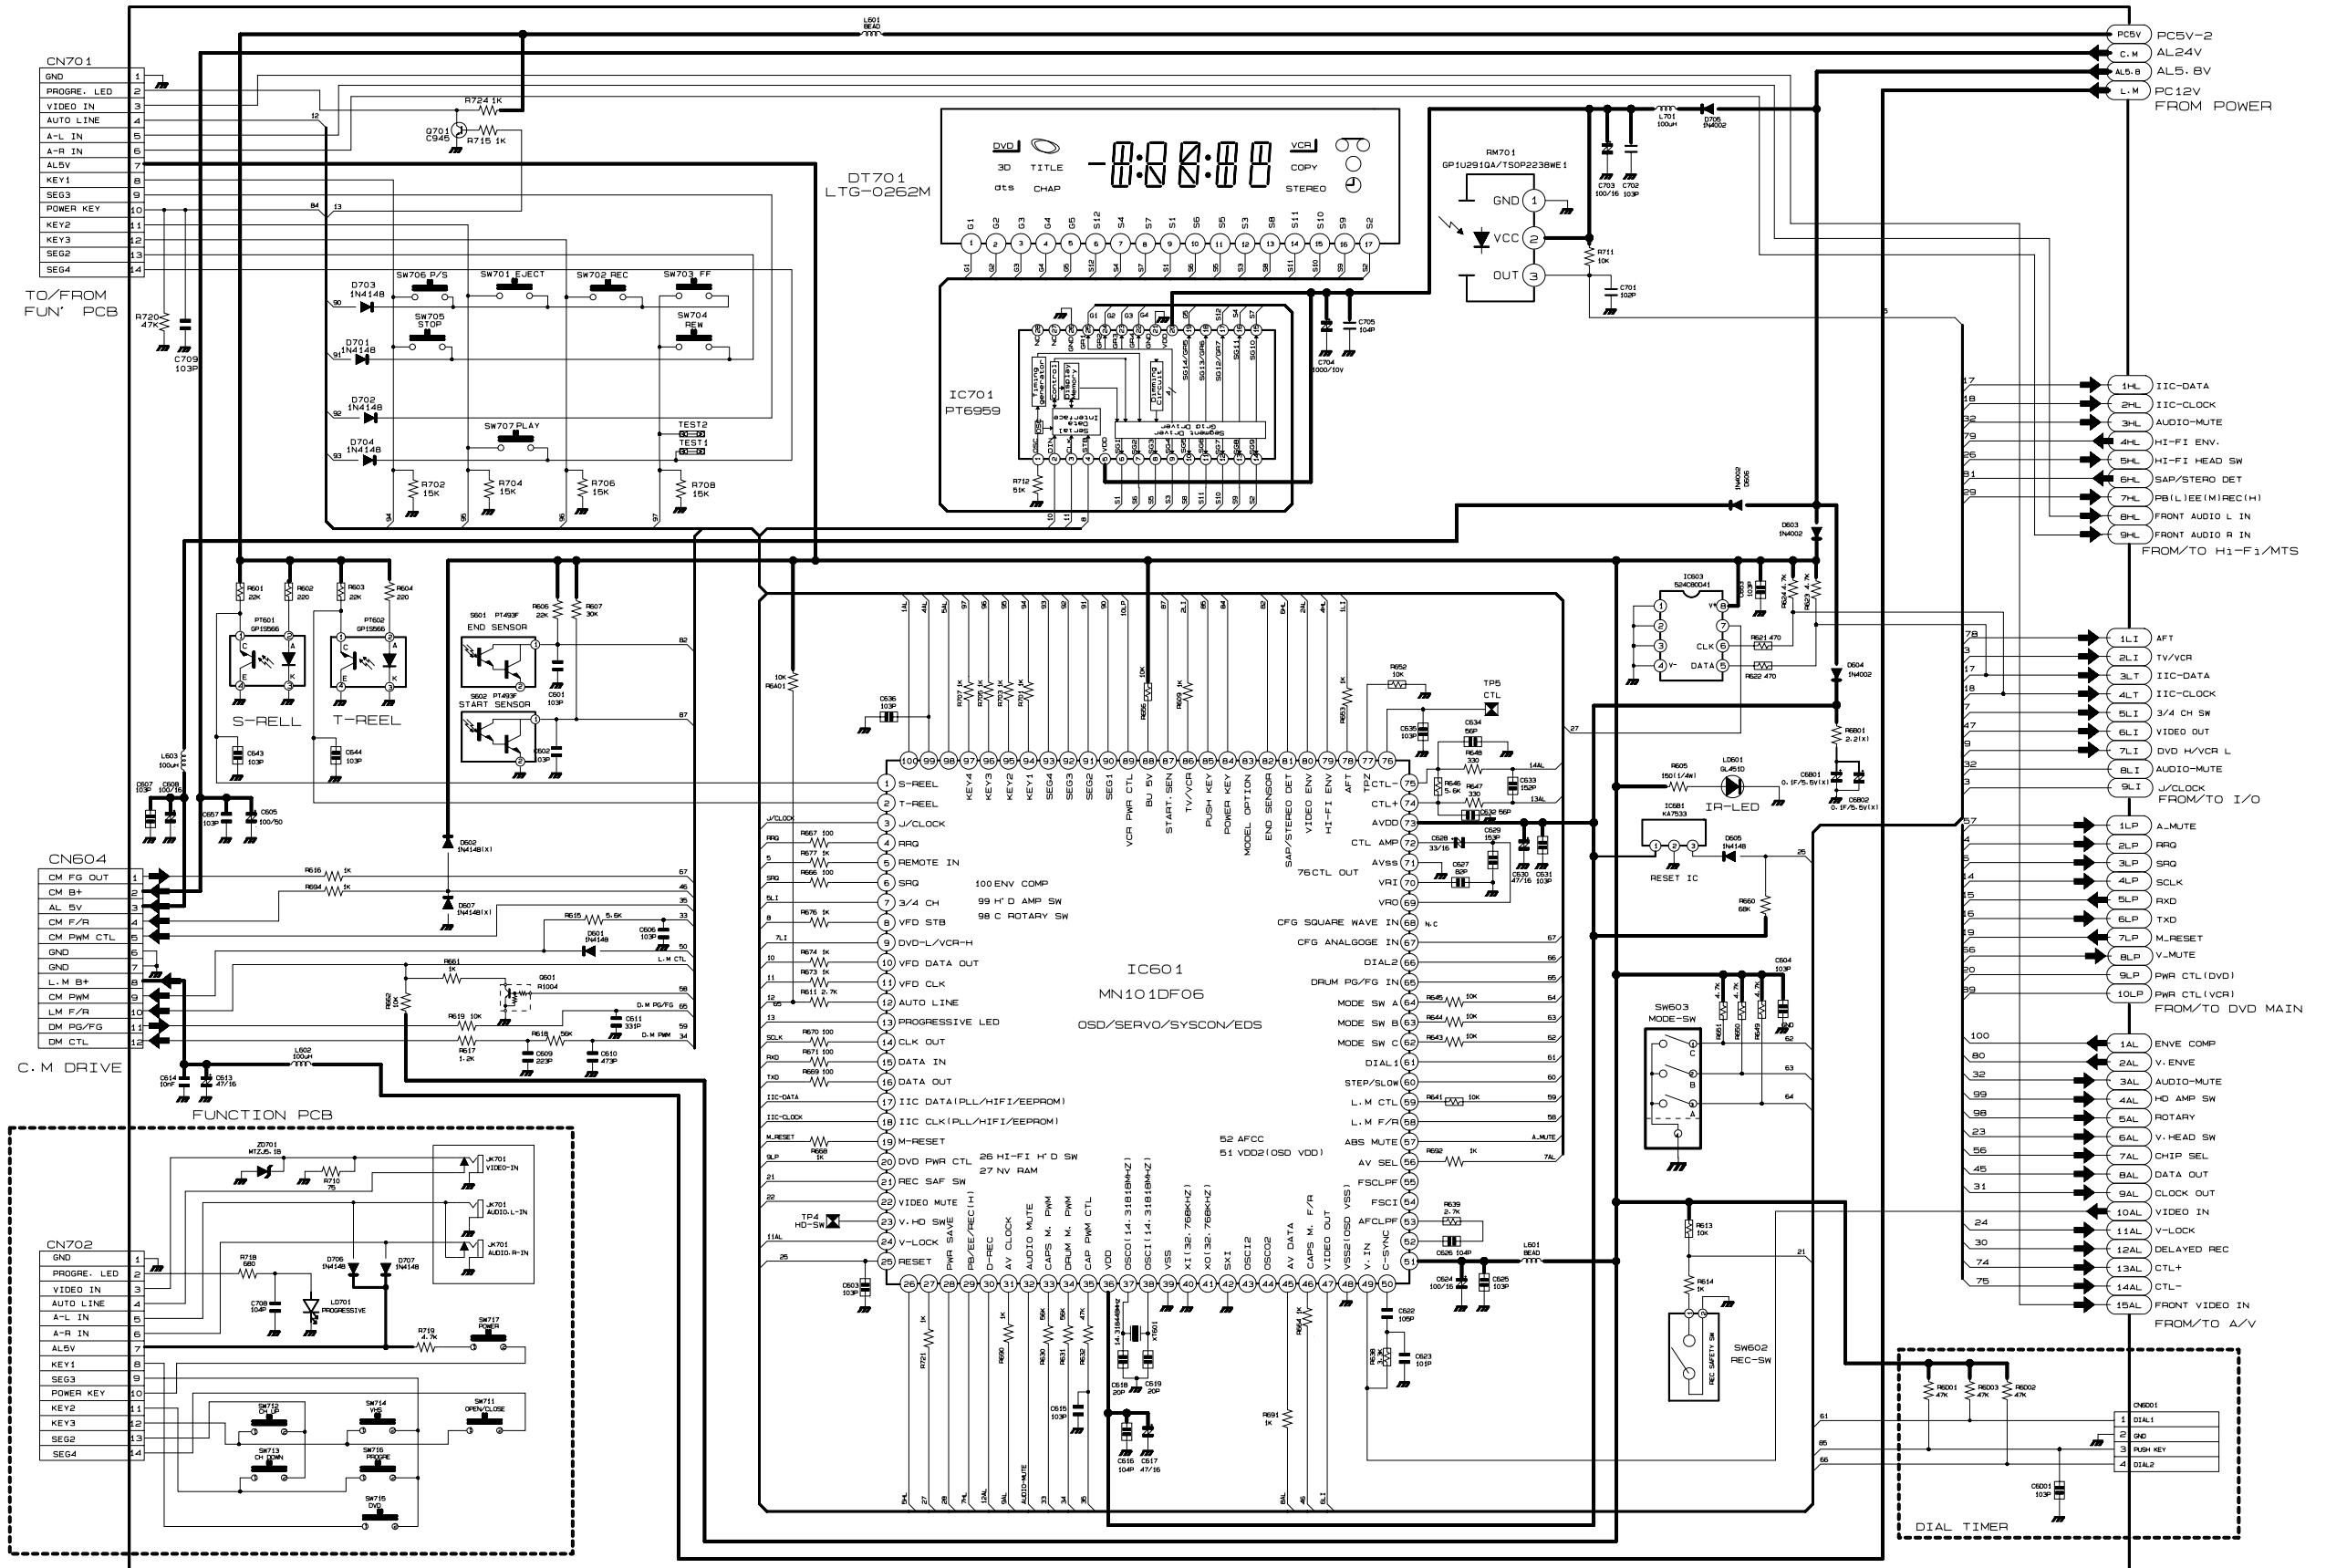

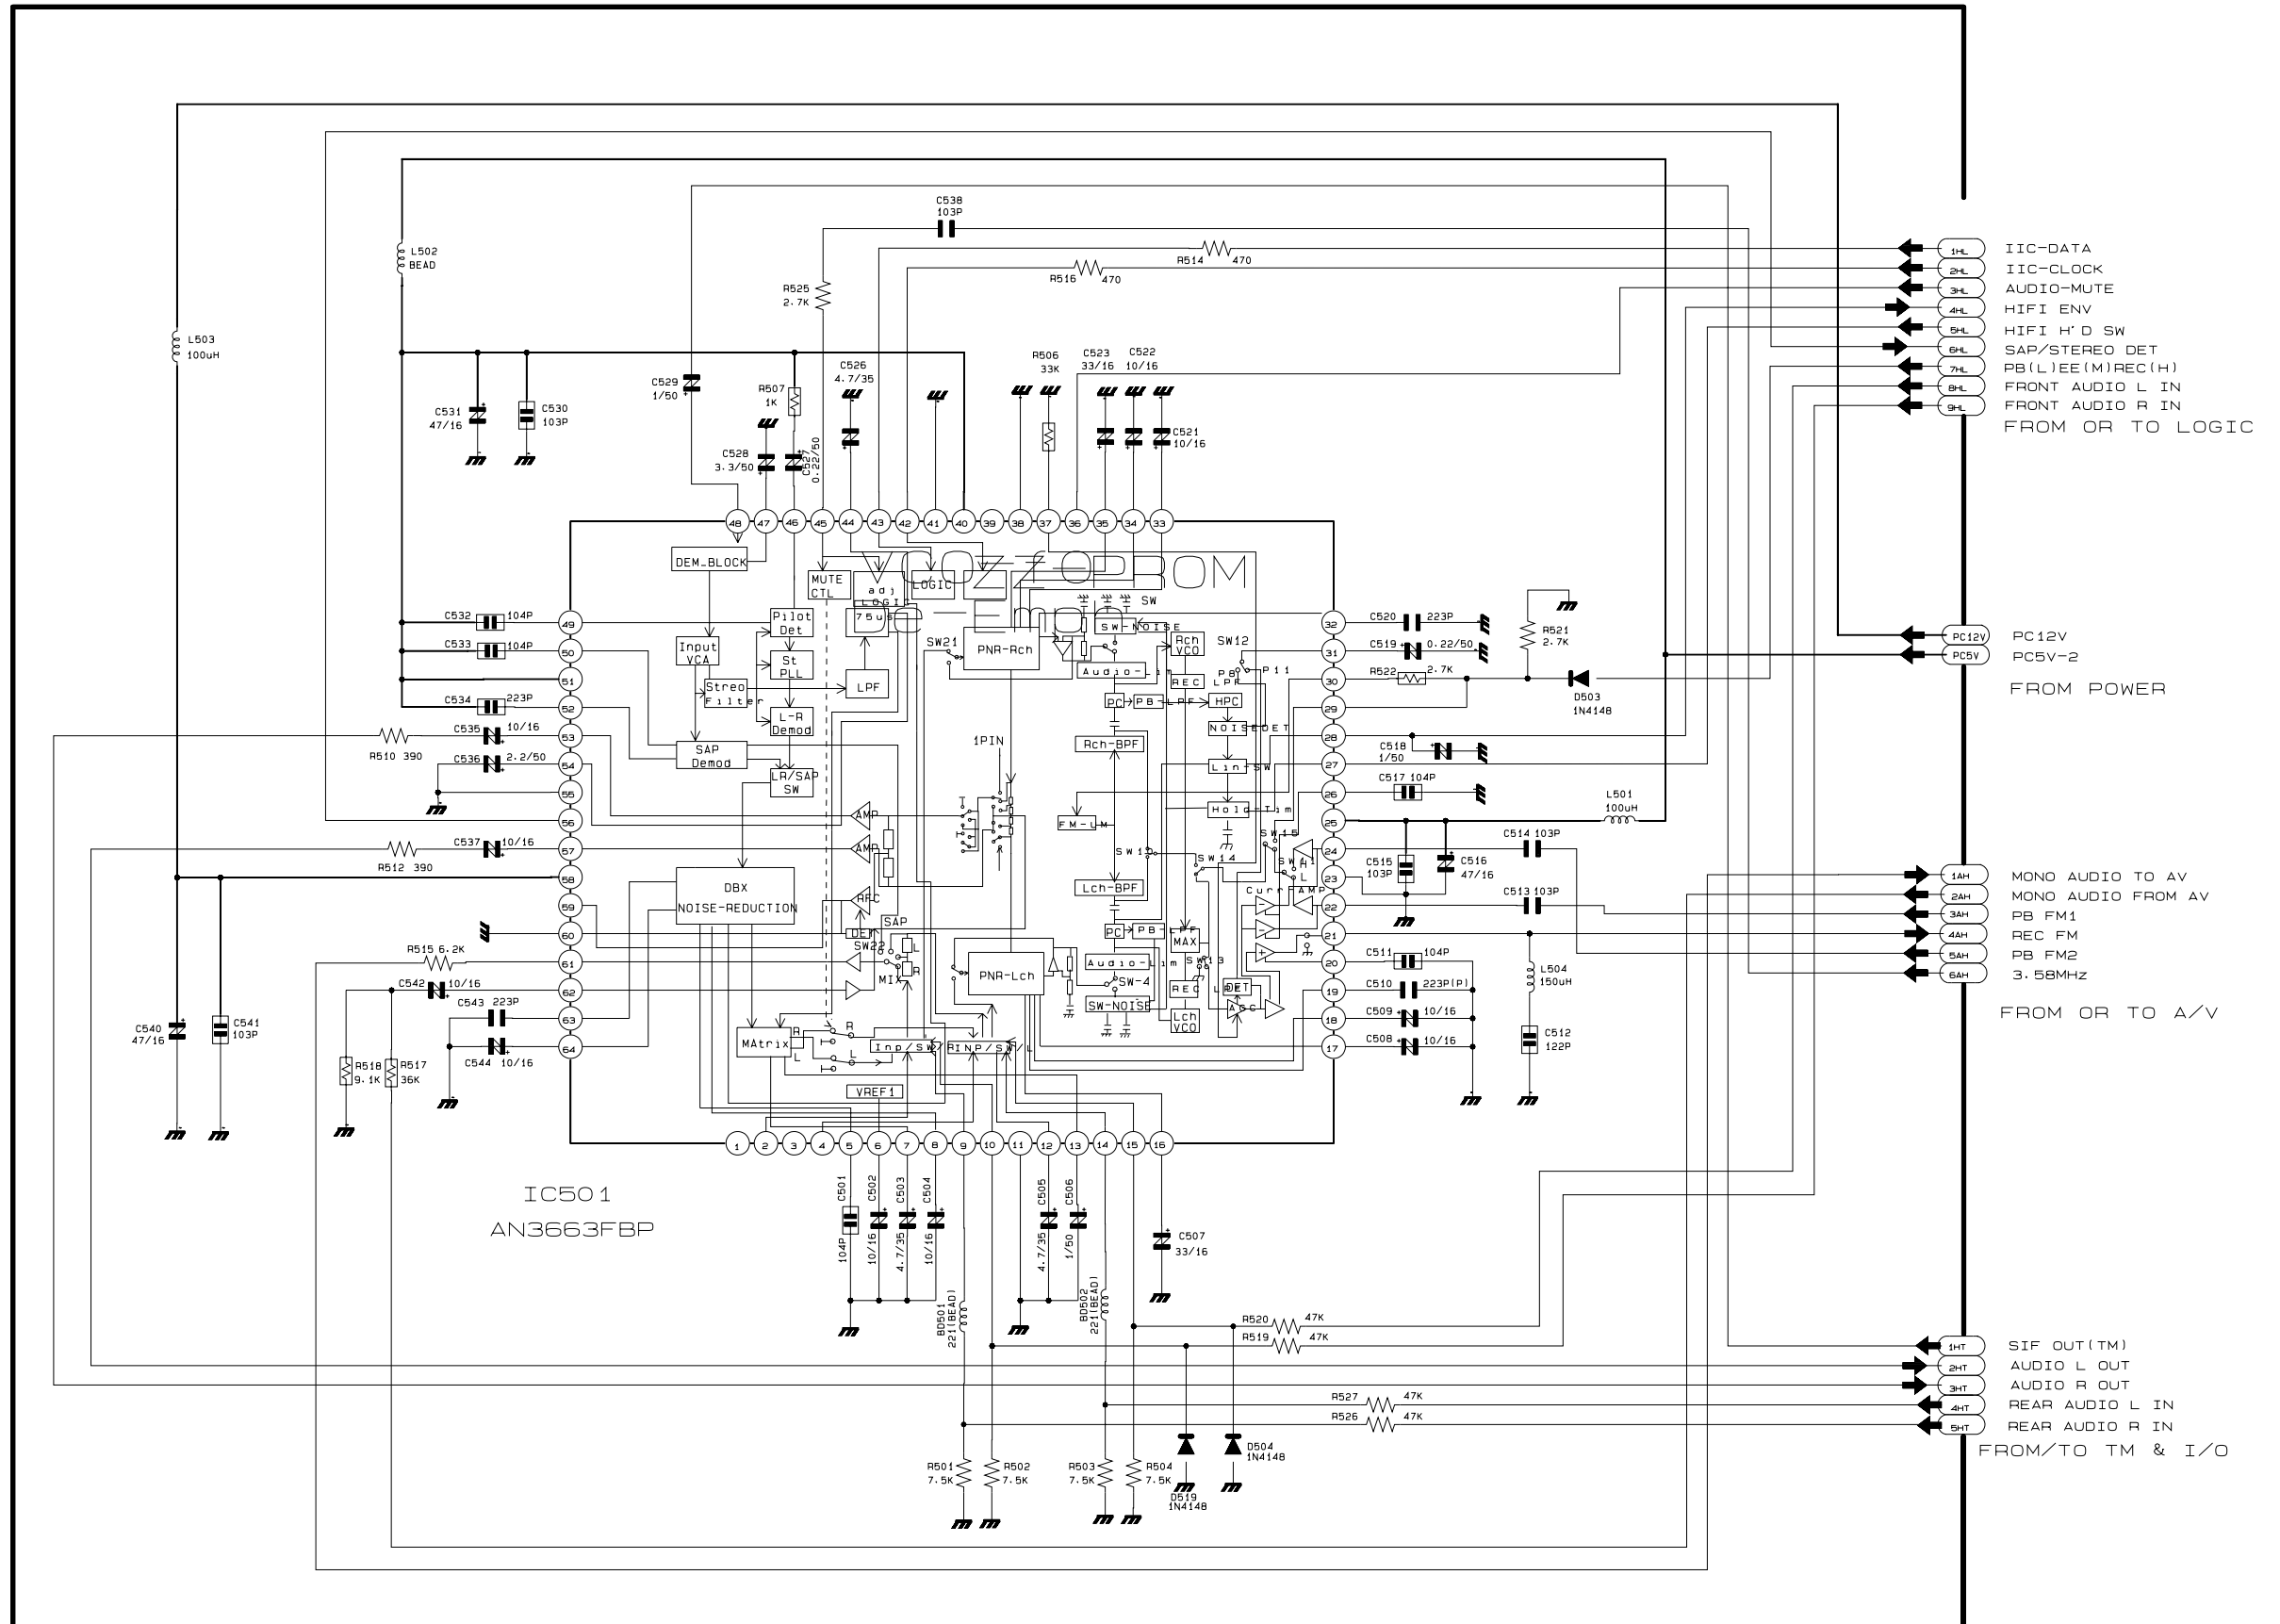

5-6 INPUT-OUTPUT

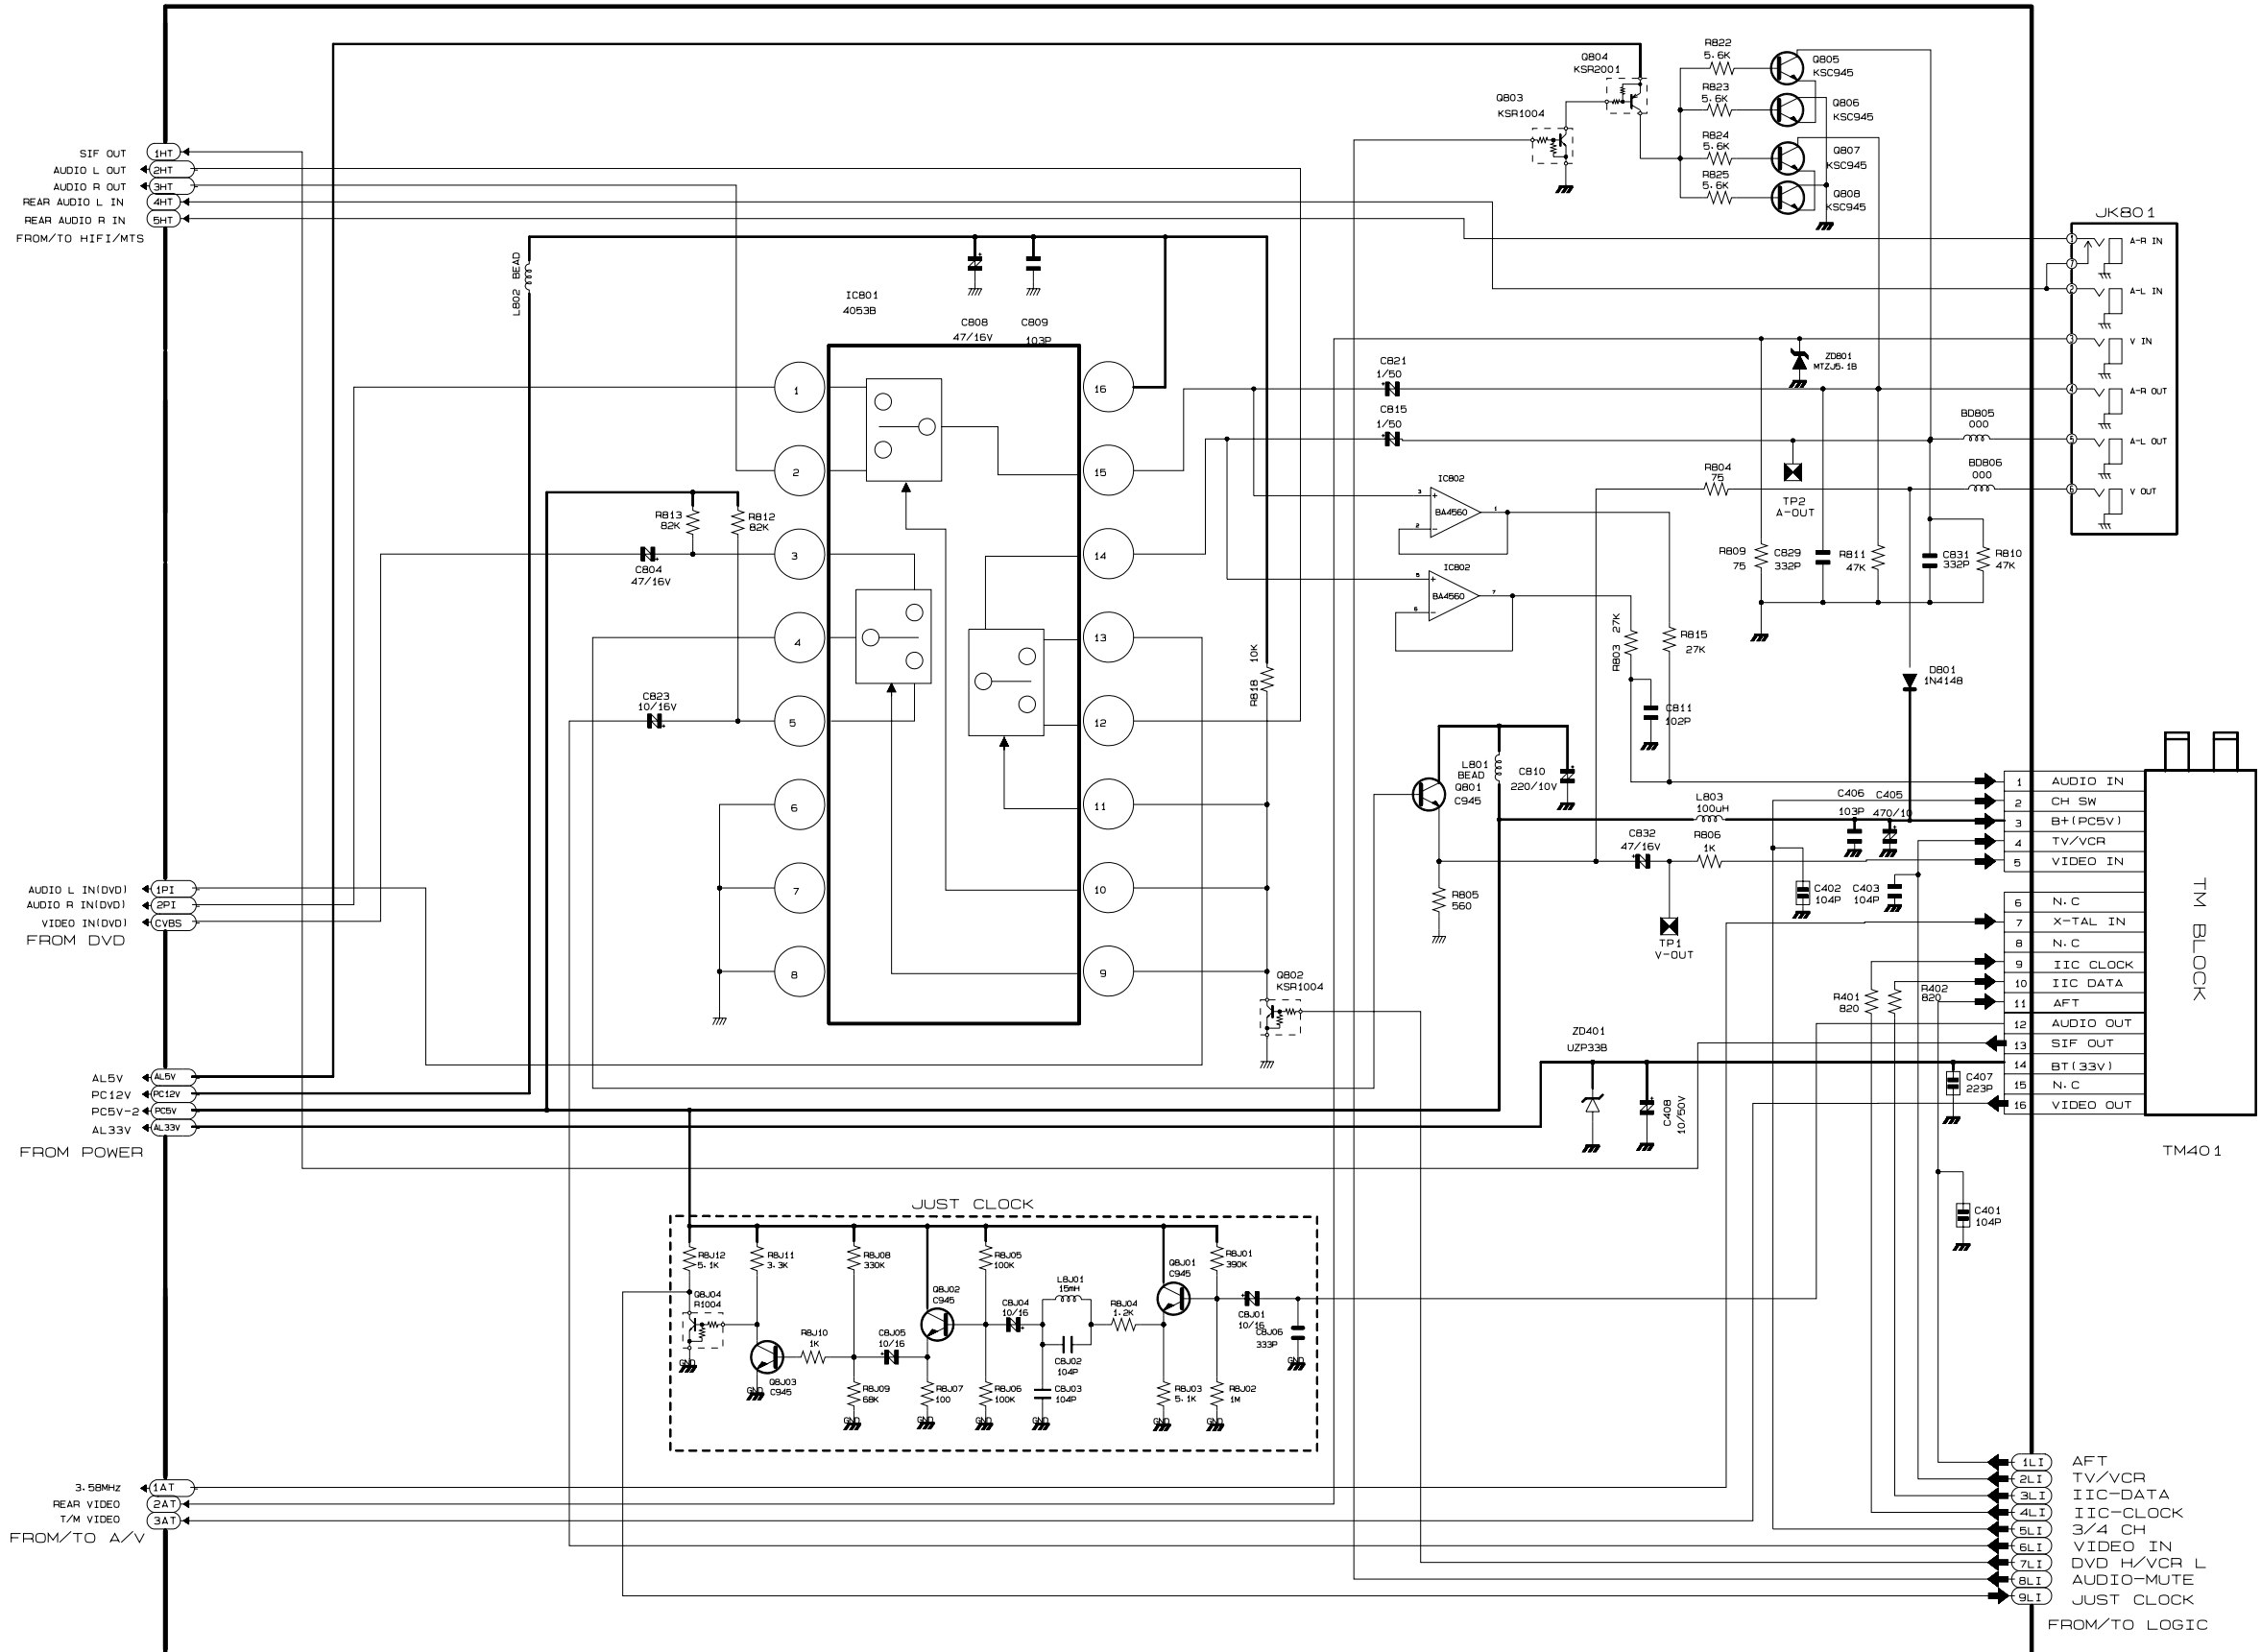

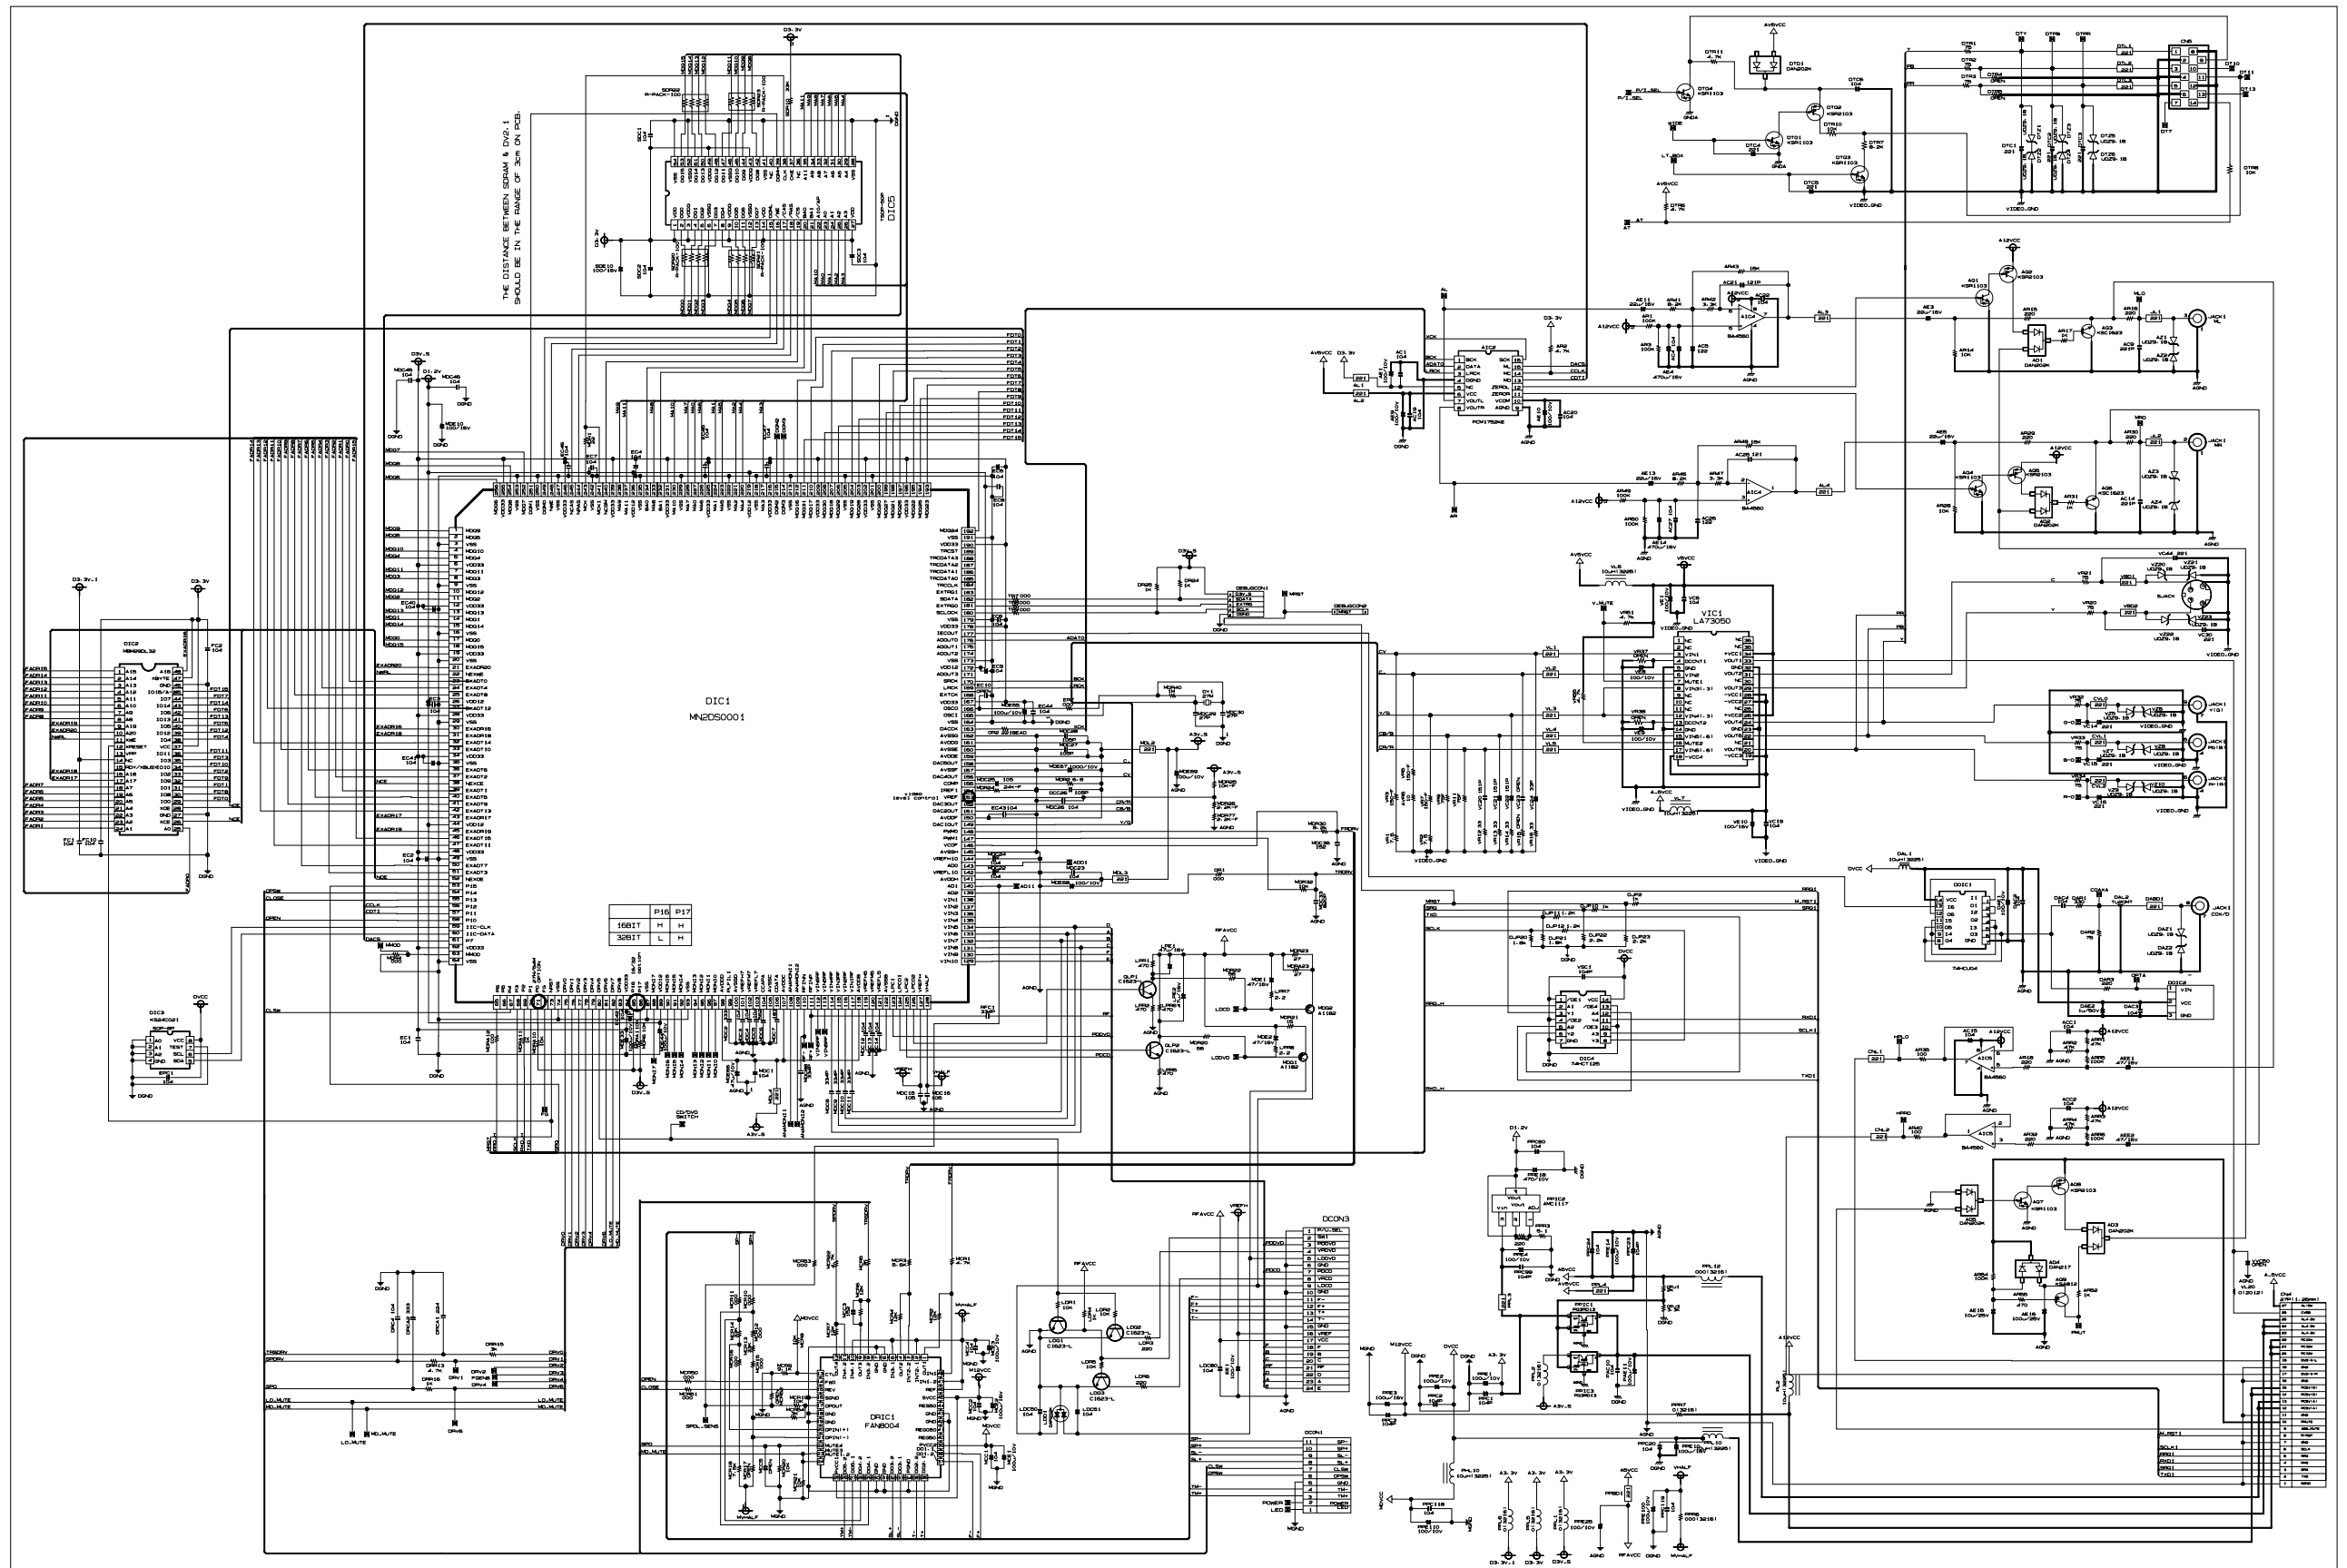

MEMO

6. ALIGNMENT AND ADJUSTMENTS

6-1 VCR ADJUSTMENT

6-1-1 Reference

- 1) X-Point (Tracking center) adjustment, "Head switching adjustment" and "NVRAM option setting" can be adjusted with remote control.
- 2) When replacing the Main PCB Micom (IC601) and NVRAM (IC603: EEPROM) be sure to adjust the "Head switching adjustment" and "NVRAM option setting".
- 3) When replacing the cylinder ass'y, be sure to adjust the "X-Point" and "Head switching adjustment".
- 4) How to adjustment.
 - Intermittently short-circuit the Test Point on Main PCB with pincers to the adjustment mode.
 - If the corresponding adjustment button is pressed, the adjustment is performed automatically.
 - When the adjustment is completed, be sure to turn the power off.

6-1-1(a) Location of adjustment button of remote control

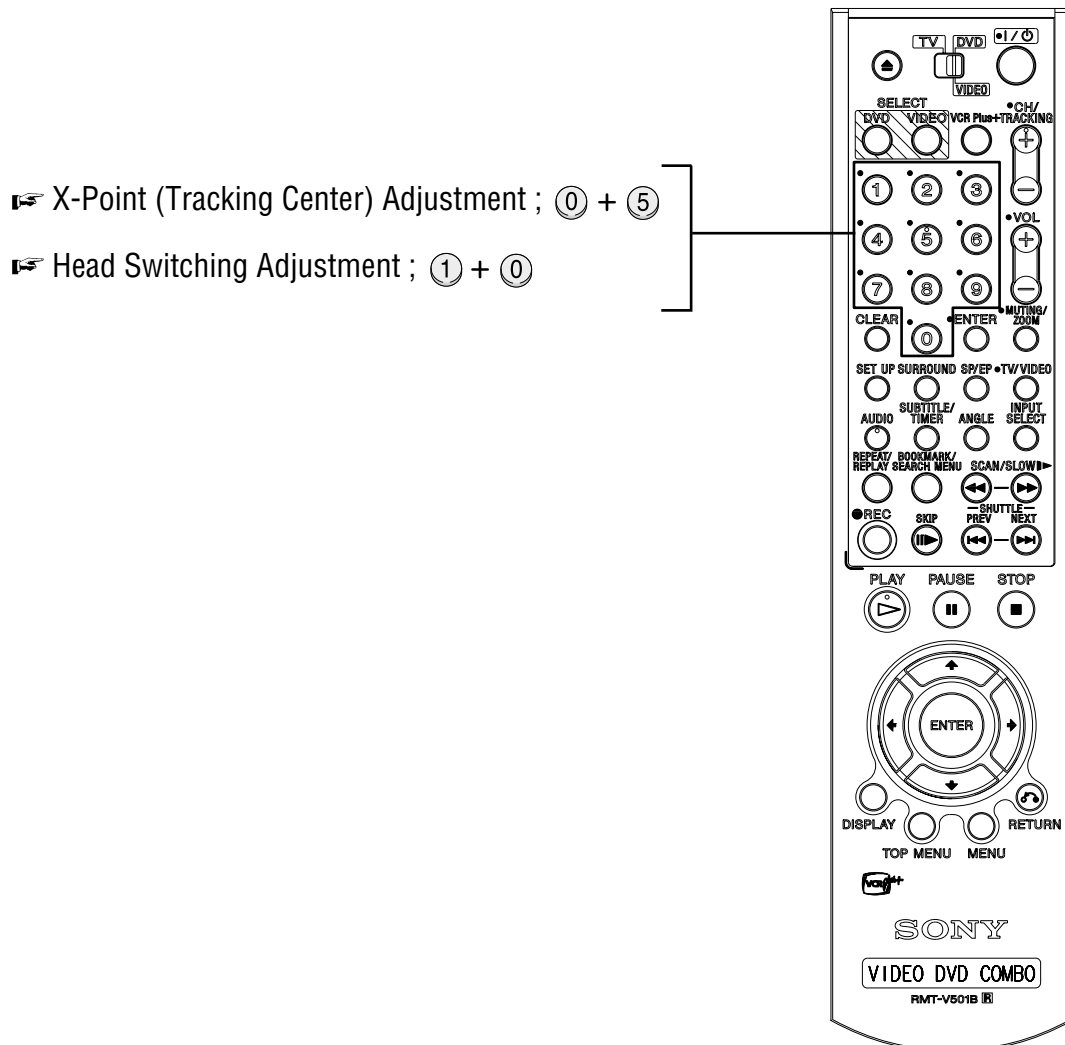


Fig. 6-1

6-1-1(b) TEST location for adjustment mode setting

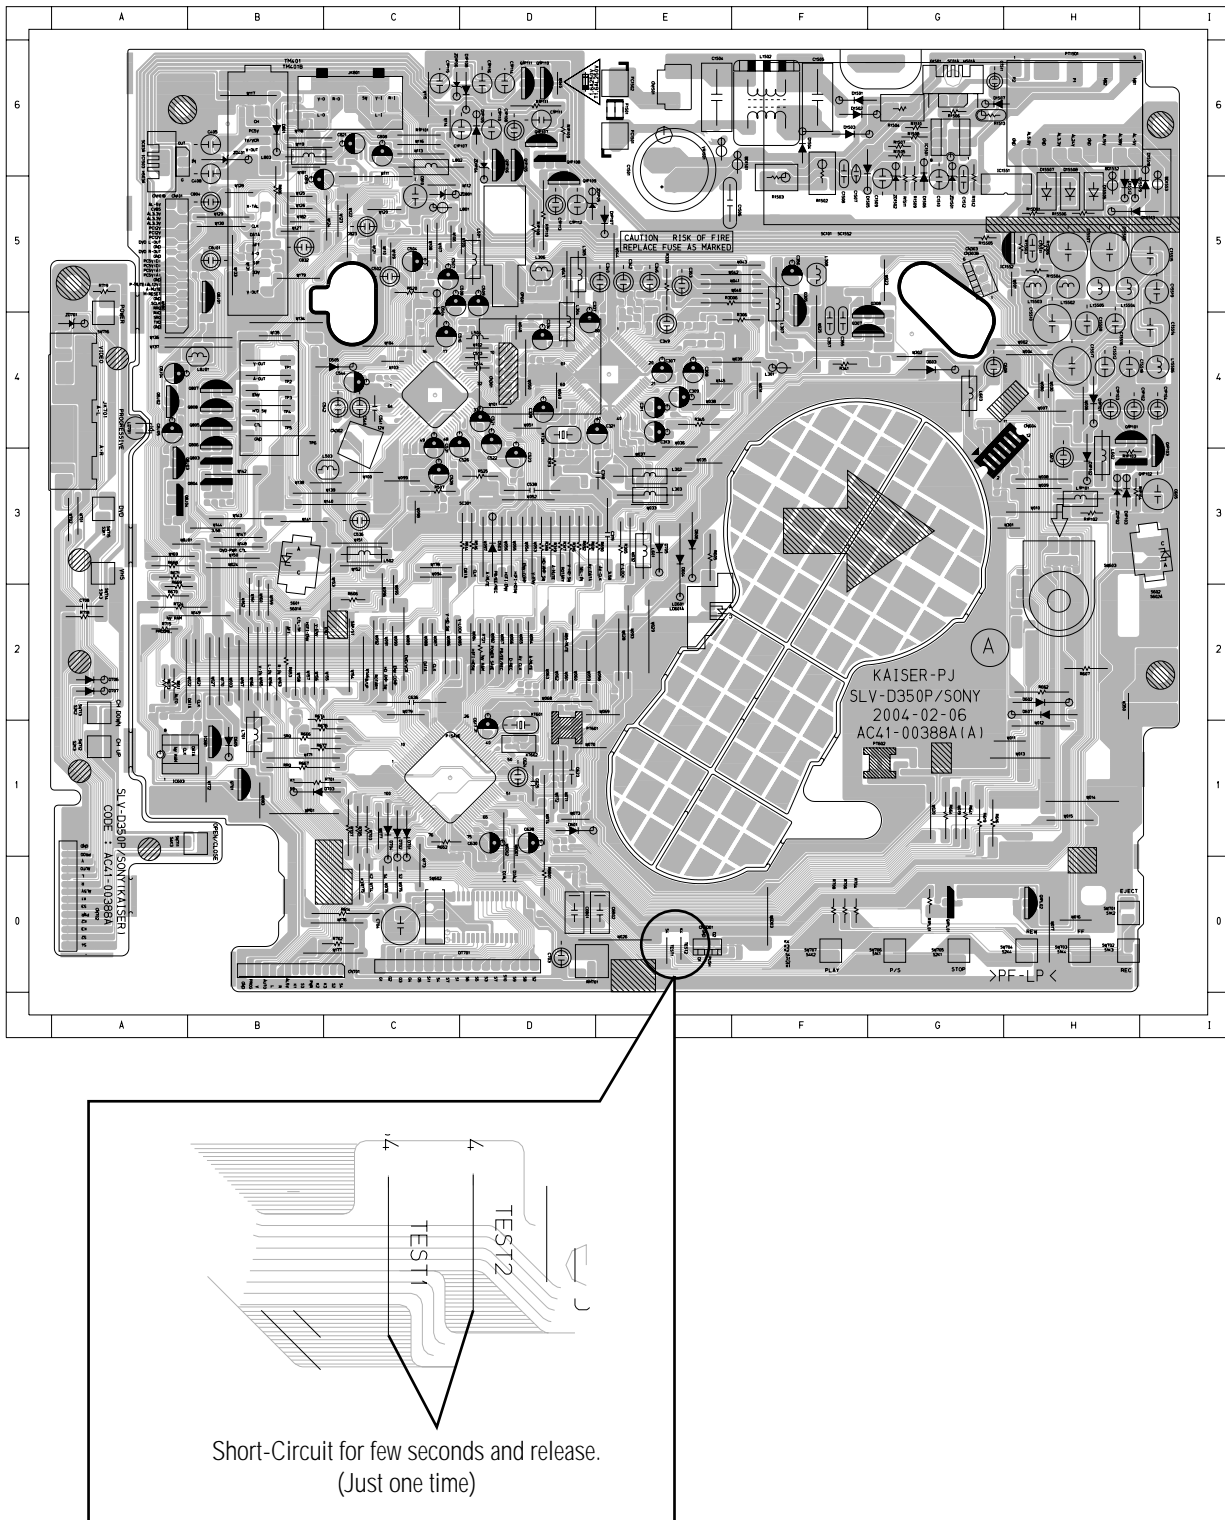


Fig. 6-2 VCR Main PCB (Top View)

6-1-2 Head Switching Point Adjustment

- 1) Playback the alignment tape.
- 2) Intermittently short-circuit the two Test Points on Main PCB. (See Fig. 6-2)
- 3) Press the “1, 0” buttons ; remote control adjustment operates automatically. (See Fig. 6-1)

6-2 VCR MECHANICAL ADJUSTMENT

6-2-1 Tape Transport System and Adjustment Locations

The tape transport system has been adjusted precisely in the factory. Alignment is not necessary except for the following :

- 1) Noise observed on the screen.
- 2) Tape damage.
- 3) Parts replacement in the tape transport system.

Lower flange height of tape guide is used as the reference for the transport adjustment.

To maintain the height of the tape guide and prevent damage, do not apply excessive force onto the main base.

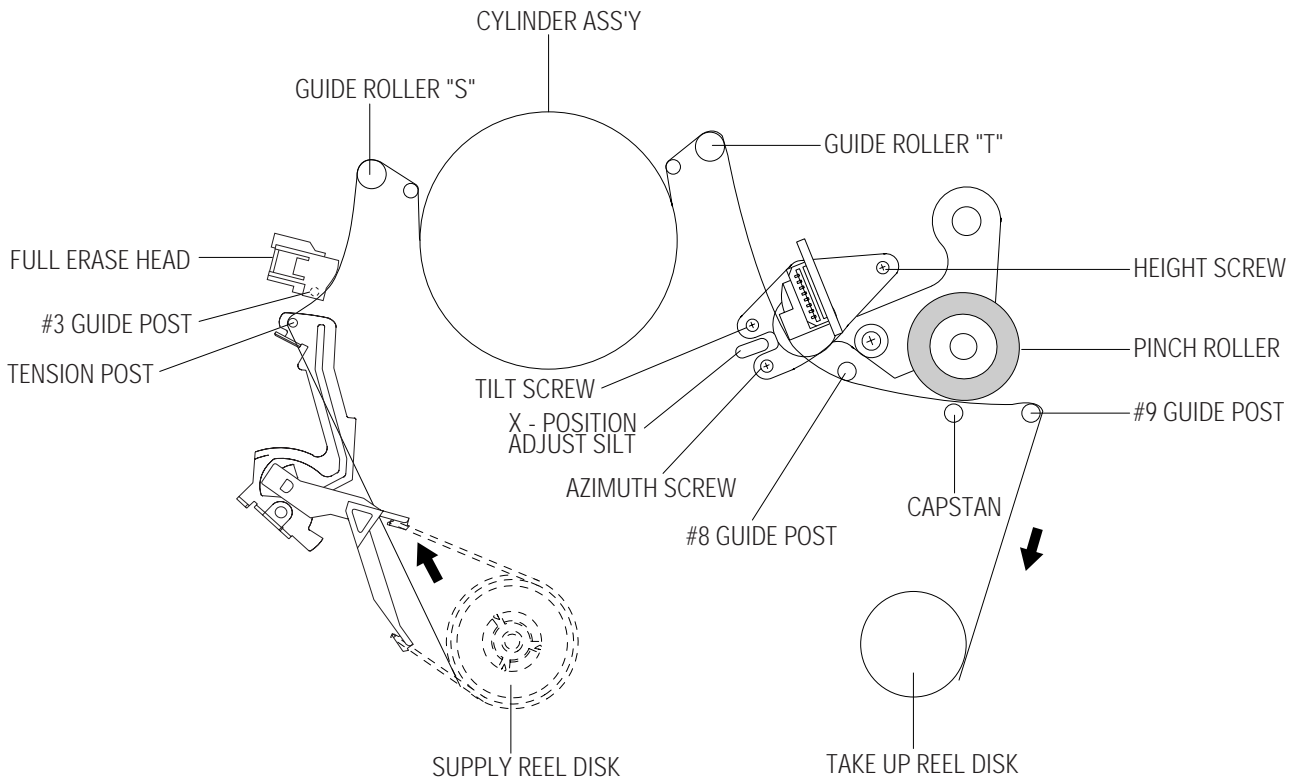


Fig. 6-3 Location of Tape Transport Adjustment

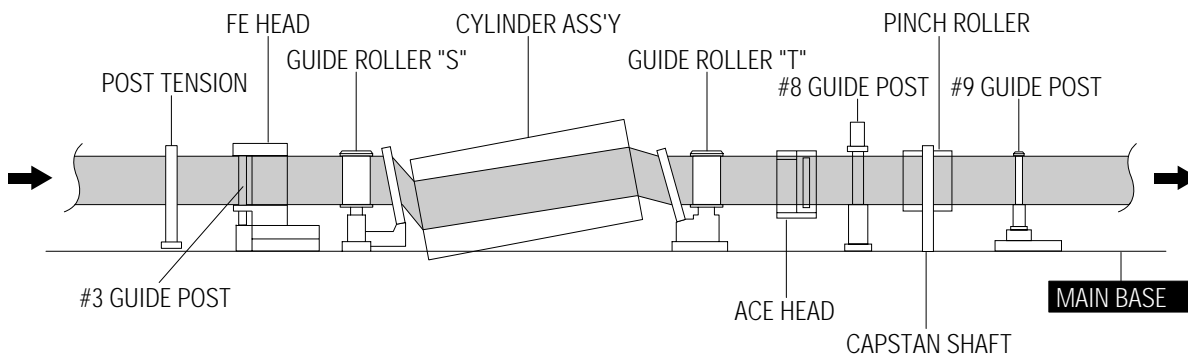


Fig. 6-4 Tape Travel Diagram

6-2-2 Tape Transport System Adjustment

When parts are replaced, perform the required adjustments by referring to procedures for the tape transport system. If there are any changes to the tape path, first run a T-120 tape and make sure excessive tape wrinkle does not occur at the tape guides.

- ◆ If tape wrinkle is observed at the guide roller S, T, turn the guide roller S, T until wrinkle disappears.
- ◆ If the tape wrinkle is still observed at the tape guide, perform the tilt adjustment of the ACE head.

(1) ACE Head Assembly Adjustment

a. ACE HEAD HEIGHT ADJUSTMENT

- 1) Run the alignment tape (Color bar) in the playback mode.
- 2) Observe surface of the audio head using a dental mirror.
- 3) Turn screw (C) clockwise or counterclockwise until the gap of lower tape edge and the lower edge of the control head is about 0.25mm. (Refer to Fig. 6-5 and 6-6)

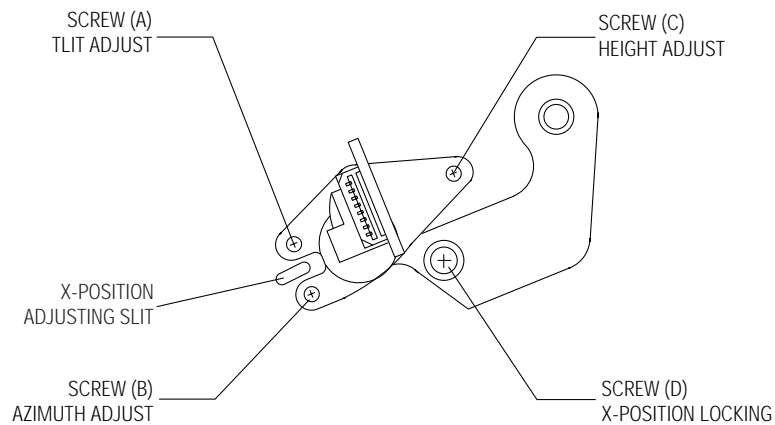


Fig. 6-5 Location of ACE Head Adjustment Screw

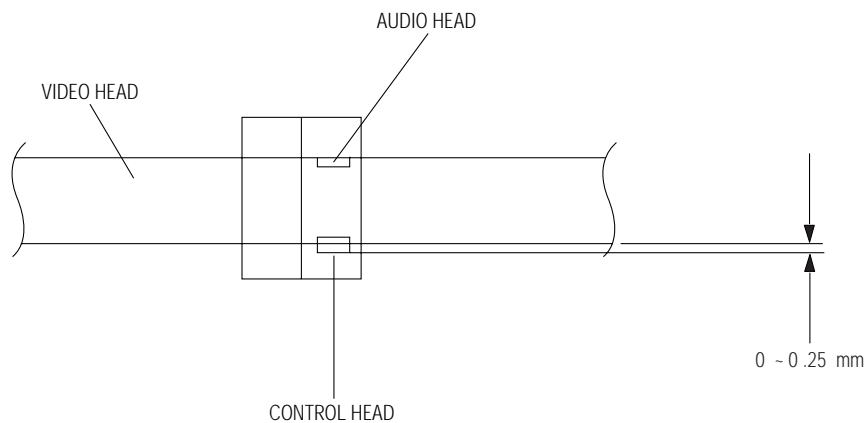


Fig. 6-6 ACE Head Height Adjustment

b. ACE HEAD TILT ADJUSTMENT

- 1) Playback a blank tape and observe the position of the tape at the lower flange of tape guide.
- 2) Confirm that there is no curl or wrinkle at the lower flange of tape guide as shown in Fig. 6-7 (B).
- 3) If a curl or wrinkle of the tape occurs, slightly turn the screw (A) tilt adjust on the ACE head ass'y.
- 4) Reconfirm the ACE head height.

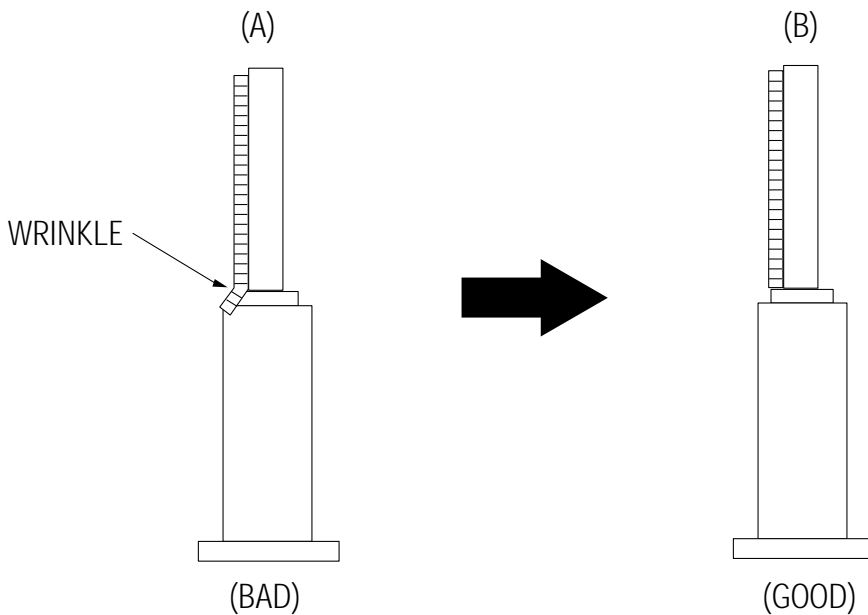


Fig. 6-7 Tape Guide Check

c. AUDIO AZIMUTH ADJUSTMENT

- 1) Load alignment tape (Mono scope) and playback the 7KHz signal.
- 2) Connect channel-1 scope probe to audio output.
- 3) Adjust screw (B) to achieve maximum audio level. (See Fig. 6-5)

d. ACE HEAD POSITION (X-POINT) ADJUSTMENT

- 1) Playback the alignment tape (Color bar)
- 2) Intermittently short-circuit the two Test Points on Main PCB . (See Fig. 6-2)
- 3) Press the “0, 5” remote control buttons, then adjustment is operates automatically. (See Fig. 6-1)
- 4) Connect the CH-1 probe to “Envelope” the CH-2 probe to “H'D switching pulse” and then trigger to CH-1.
- 5) Insert the (-) driver into the X-Point adjustment hole and adjust it so that envelope waveform is maximum.

Test point: W325 (Audio Output)
W324 (Envelope)
W323 (H'D S/W -Trigger)
W322 (Control Pulse)

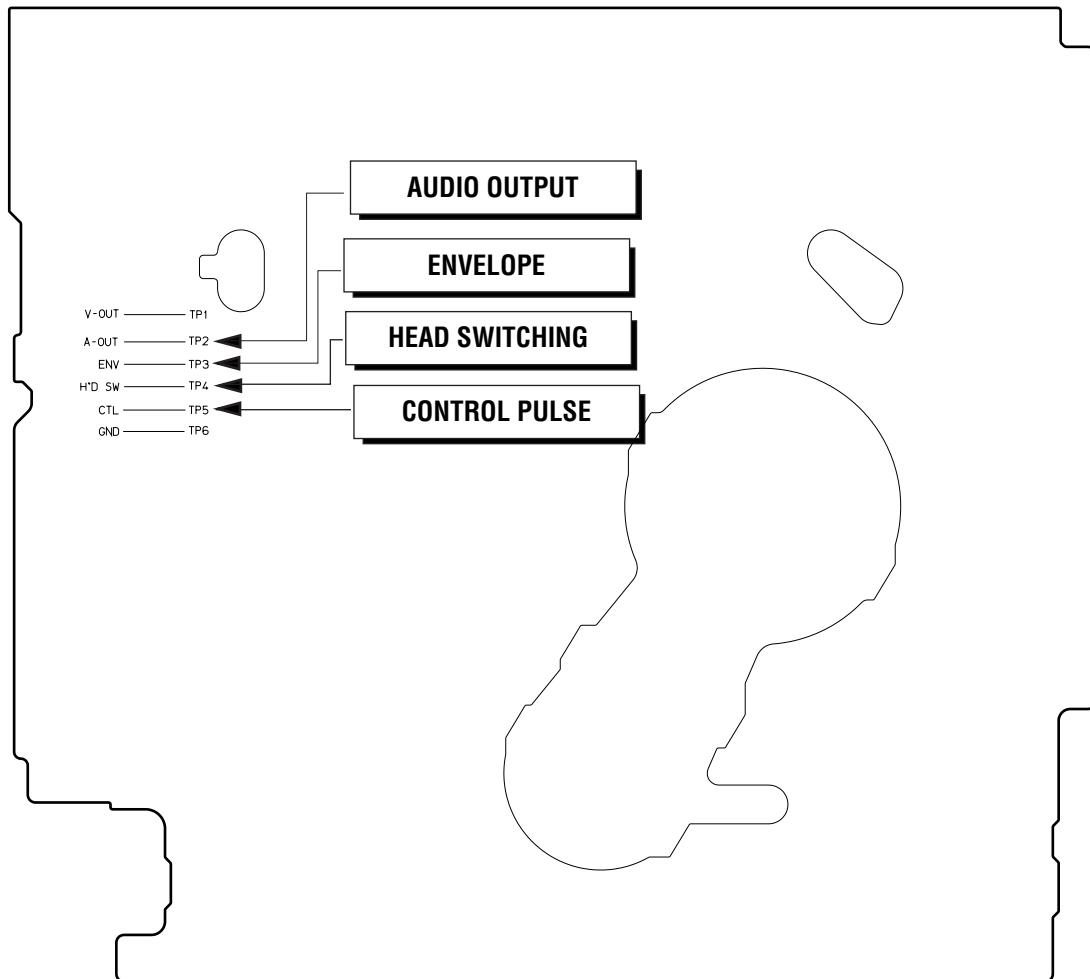


Fig. 6-8 Location of Test point (VCR Main PCB-Top View)

(2) Linearity adjustment (Guide roller S, T adjustment)

- 1) Playback the Mono Scope alignment tape (SP mode).
- 2) Observe the video envelope signal on an oscilloscope (triggered by the video switching pulse).
- 3) Make sure the video envelope waveform (at its minimum) meets the specification shown in Fig. 6-9.
If it does not, adjust as follows :

Note:

- a=Maximum output of the video RF envelope.
- b=Minimum output of the video RF envelope at the entrance side.
- c=Minimum output of the video RF envelope at the center point.
- d=Maximum output of the video RF envelope at the exit side.

- 4) If the section A in Fig. 6-10 does not meet the specification, adjust the guide roller S up or down.
- 5) If the section B in Fig. 6-10 does not meet the specification, adjust the guide roller T up or down.

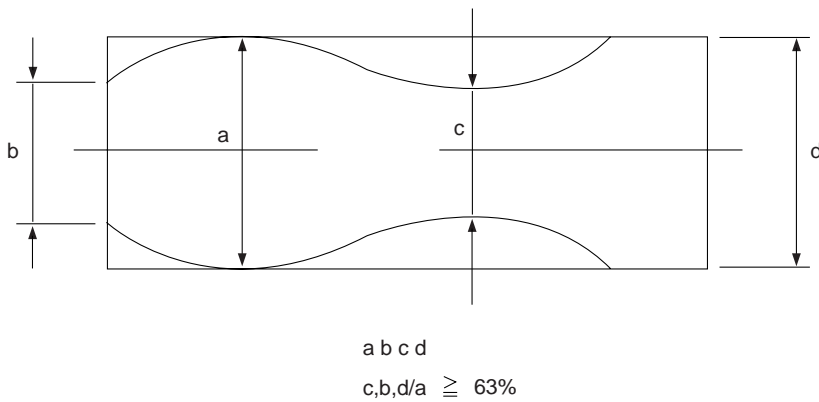


Fig. 6-9 Envelope Waveform Adjustment

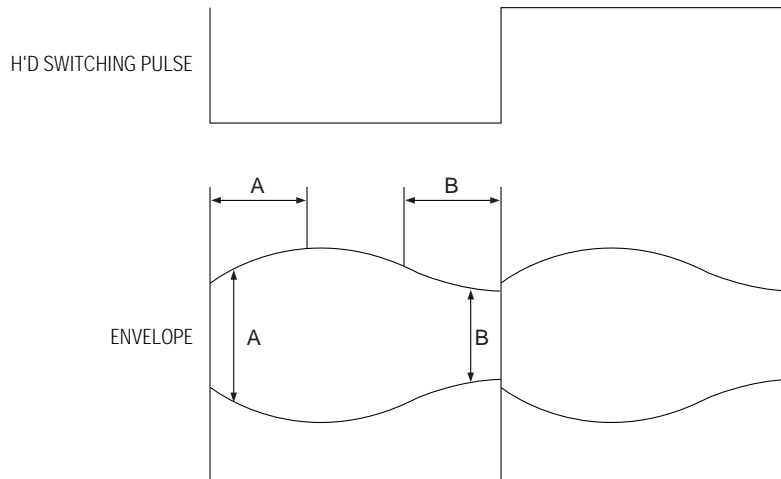


Fig. 6-10 Adjustment Points

- 6) Play back the Mono Scope alignment tape (SP mode).
- 7) Connect an oscilloscope CH-1 to the "Envelope" and CH-2 to the "H'D SW Pulse" for triggering.
- 8) Turn the guide roller heads with a flat head (🔩) driver to obtain a flat video RF envelope as shown in Fig. 6-11.

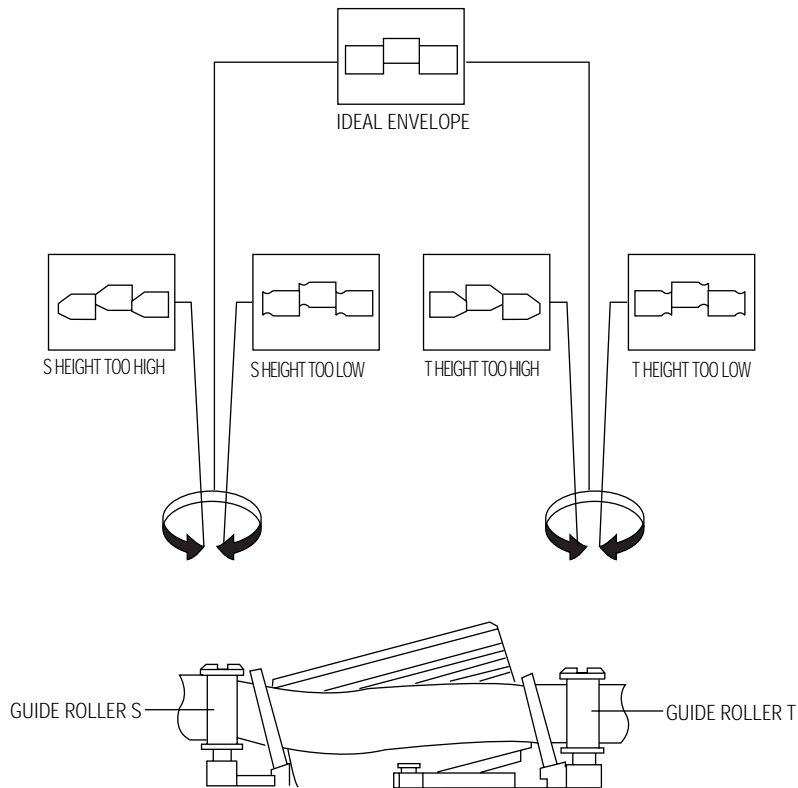


Fig. 6-11 Guide Roller S, T Height Adjustment

(3) Check Transitional Operation from RPS to Play

Check transition from RPS mode to play mode : Using a pre-recorded SP tape, make sure the entry side of envelope comes to an appropriate steady state within 3 seconds (as shown in Fig. 6-12).

If the envelope waveform does not reach specified peak-to-peak amplitude within 3 seconds, adjust as follows :

- 1) Make sure there is no gap between the supply roller lower flange and the tape.
If there is a gap, adjust the supply guide roller again.
- 2) Change operation mode from the RPS to the play mode (again) and make sure the entry side of envelope rises within 3 second.

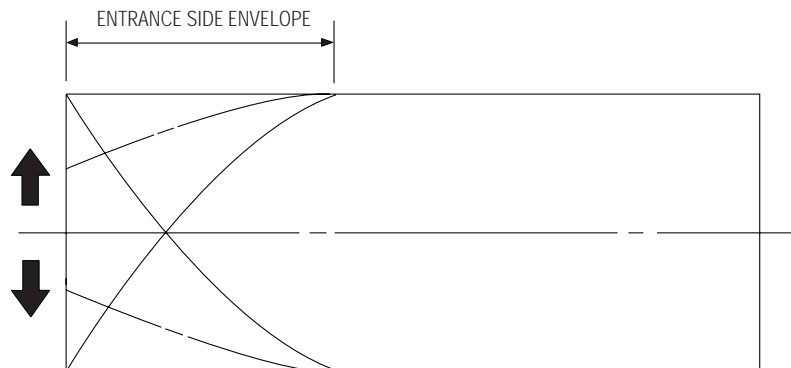


Fig. 6-12 Video Envelope Rising when Operation mode Changes from RPS to Play Mode

(4) Envelope Check

- 1) Make recordings on T-120 (E-120) and T-160 (E-180) tape.
Make sure the playback output envelope meets the specification as shown in Fig. 6-13.
- 2) Play back a self recorded tape (recording made on the unit using with T-120 (E-120)).
The video envelope should meet the specification as shown in Fig. 6-13.
In SP mode, (A) should equal (B).
If the head gap is wide, upper cylinder should be checked.

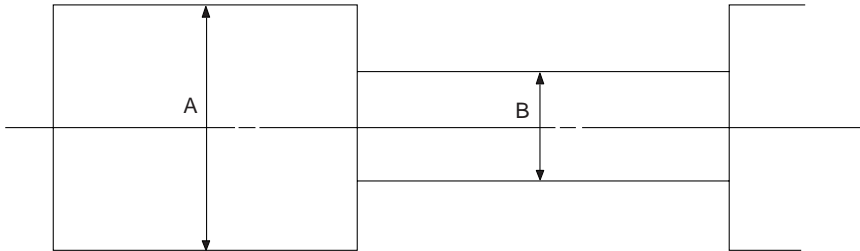


Fig. 6-13 Envelope Input and Output Level

(5) Tape Wrinkle Check

- 1) Run the T-160 (E-180) tape in the playback, FPS, RPS and Pause modes and observe tape wrinkle at each guide.
- 2) If excessive tape wrinkle is observed, perform the following adjustments in Playback mode :
 - ◆ Tape wrinkle at the guide roller S, T section : Linearity adjustment.
 - ◆ Tape wrinkle at tape guide flange : ACE head assembly coarse adjustment.

6-2-3 Reel Torque



- 1) The rotation of the capstan motor causes the holder clutch ass'y to rotate through the belt pulley.
- 2) The spring wrap PLAY/REV of holder clutch ass'y drives the disk reel S, T through gear idler by rotation of gear center ass'y.
- 3) Brake is operated by slider cam at FF/REW mode.
- 4) Transportation of accurate driving force is done by gears. (Gear Center Ass'y)



Note: If the spec. does not meet the followings specifications, replace the holder clutch ass'y and then recheck.



< Table 6-1 >



MODE	TORQUE g/cm	GAUGE
PB	42 ± 11	Cassette Torquemeter
RPS	145 ± 30	Cassette Torquemeter

7. TROUBLESHOOTING

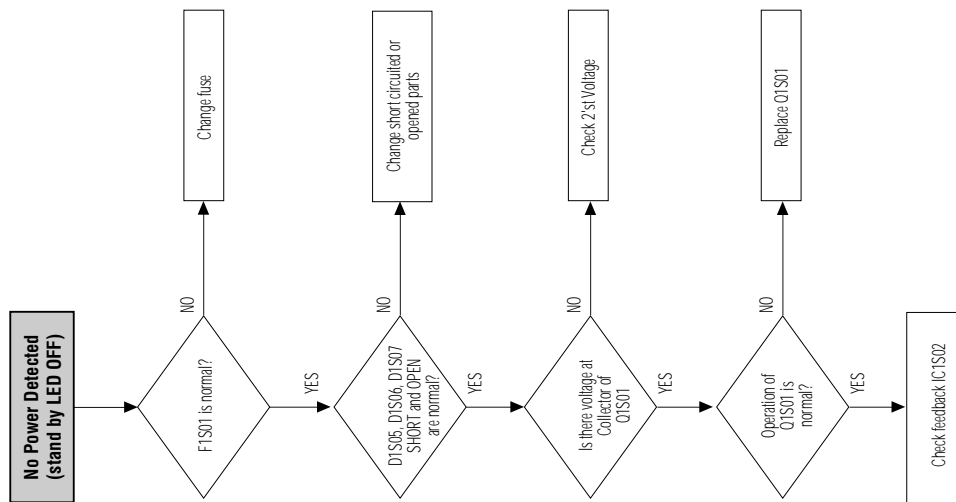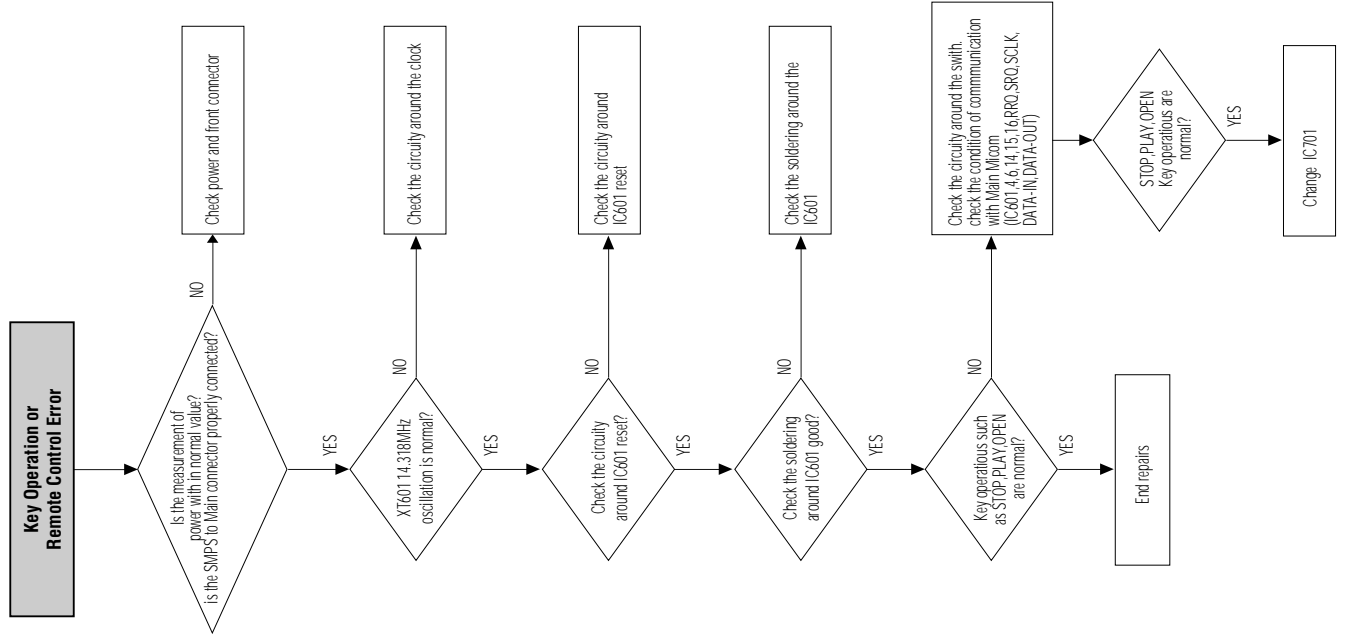

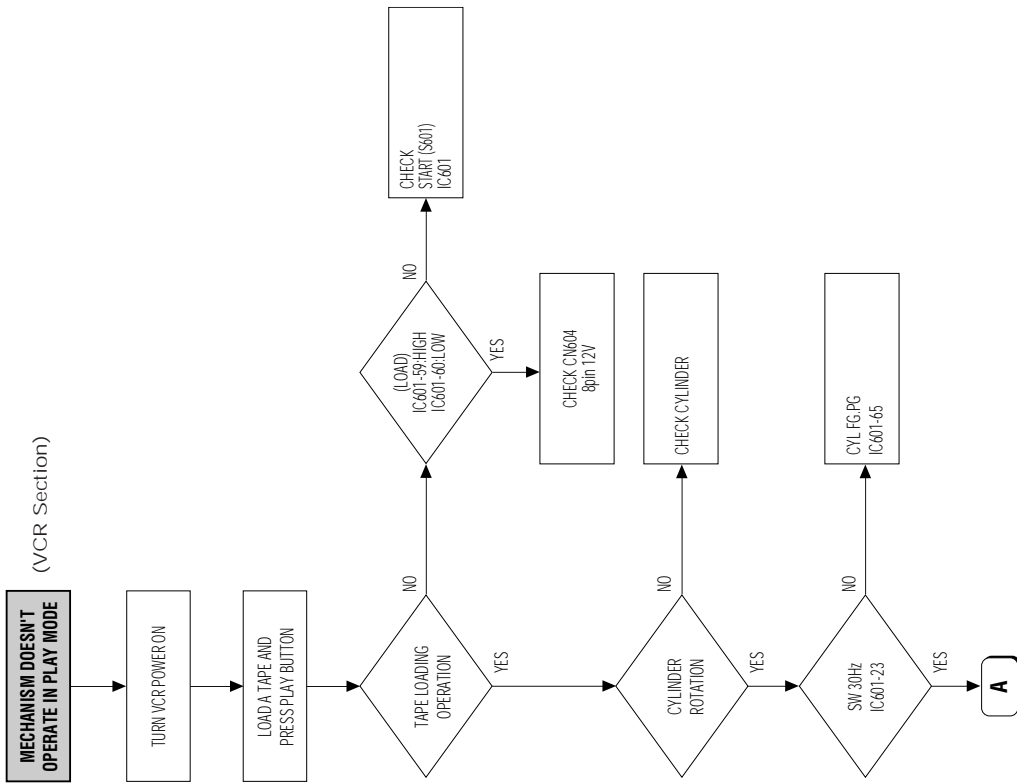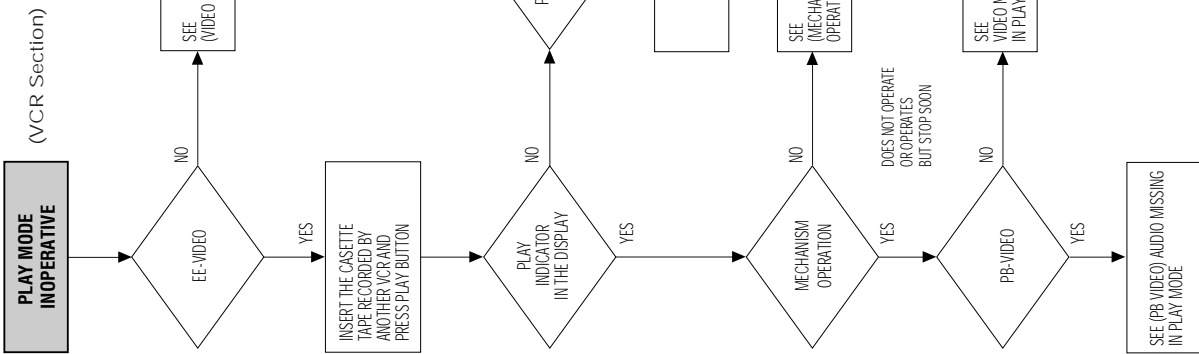


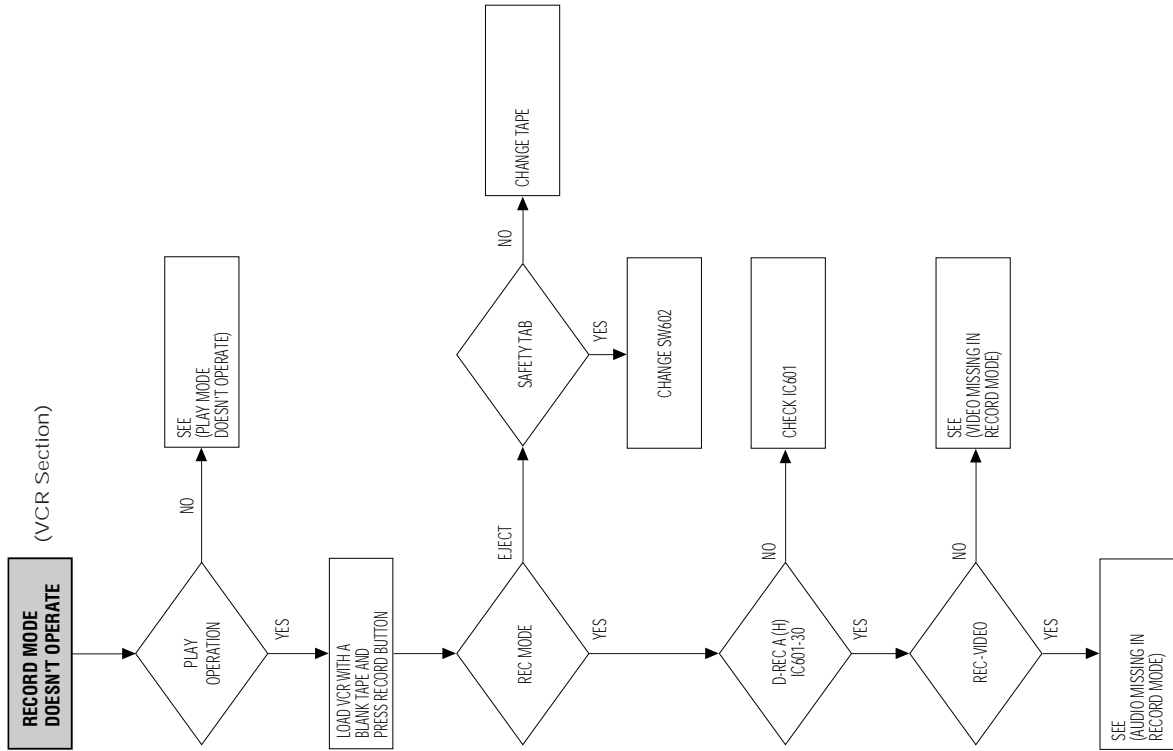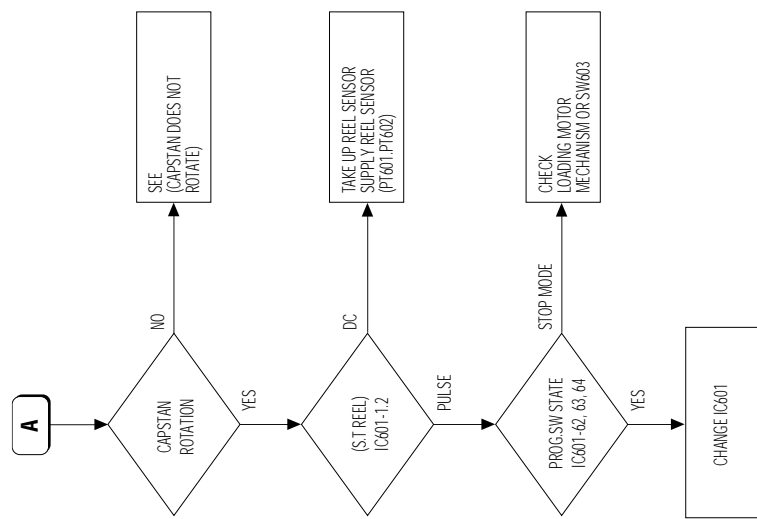

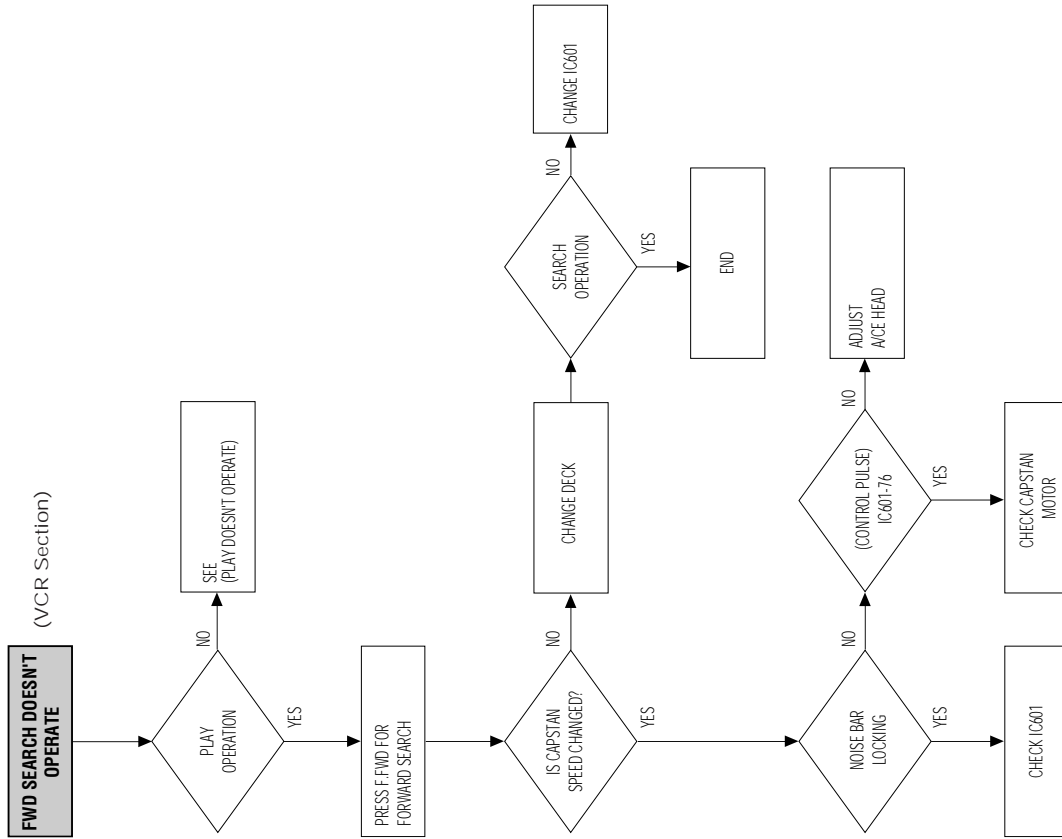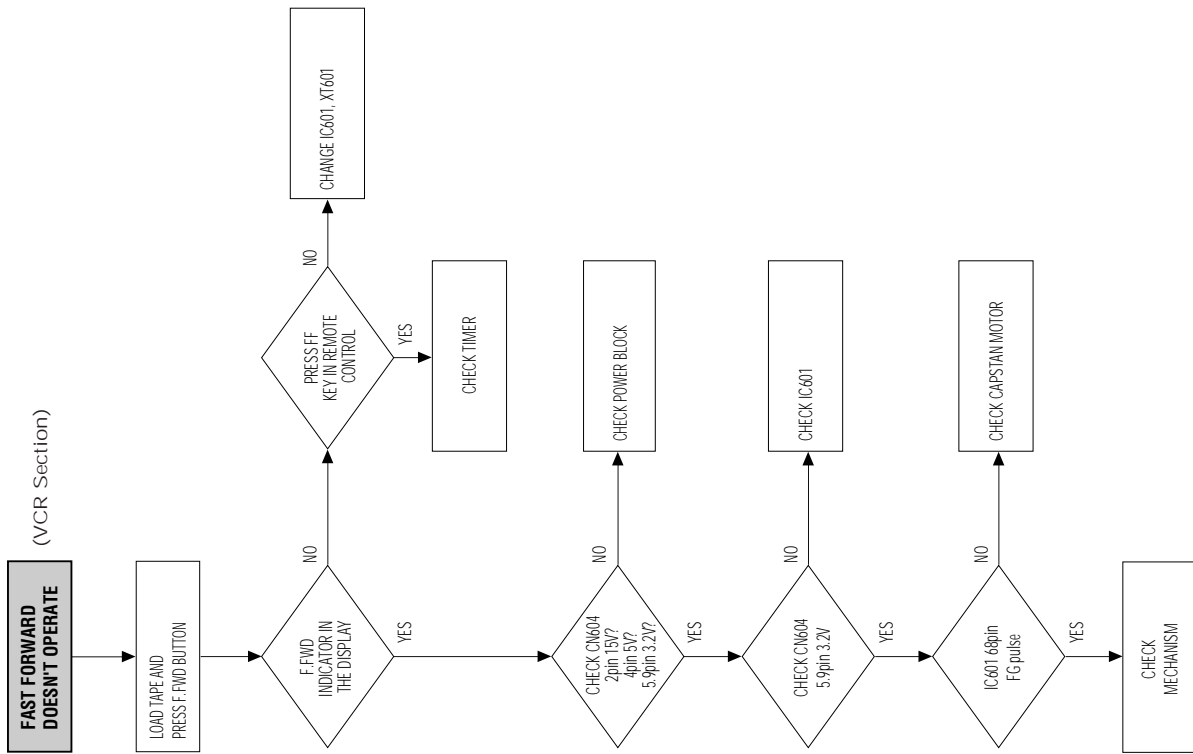


CASSETTE LOADING MECHANISM DOES NOT OPERATE



(VCR Section)


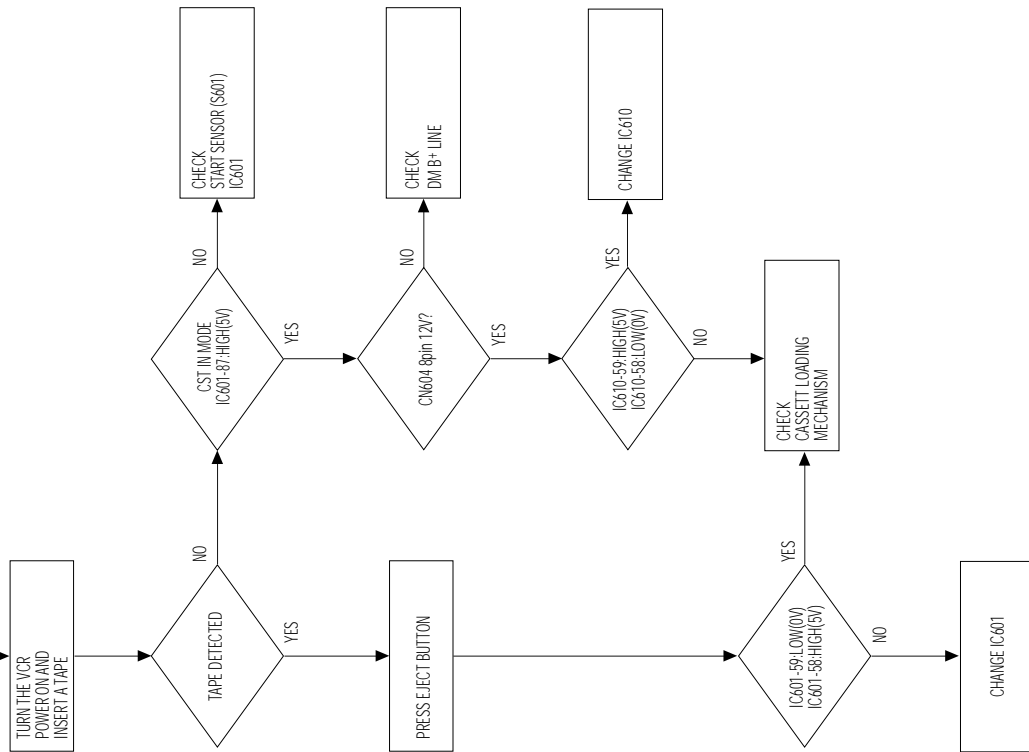




VIDEO MISSING IN EE MODE



(VCR Section)


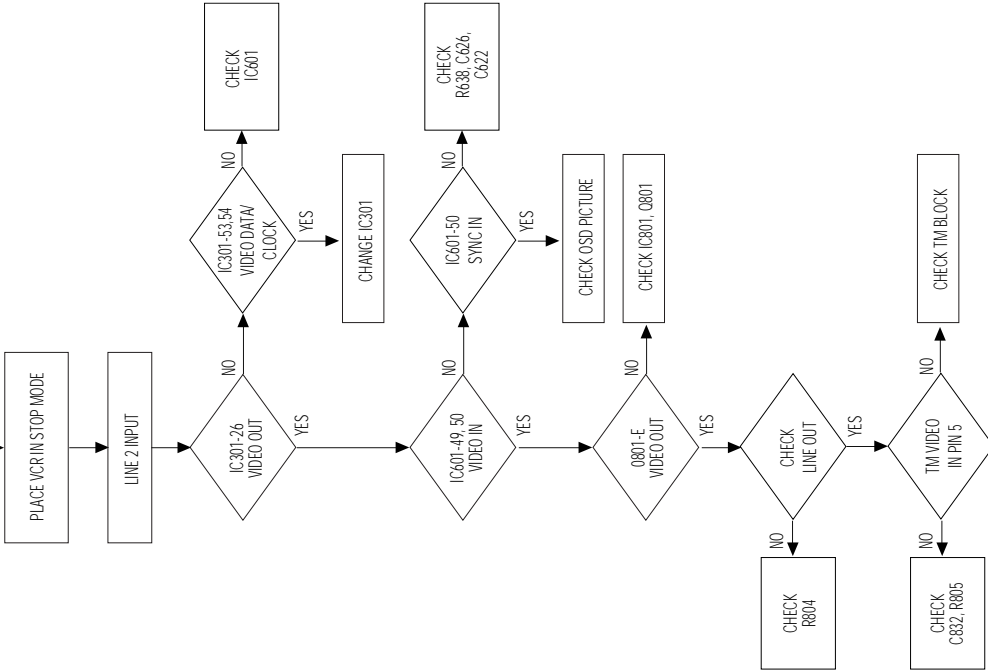


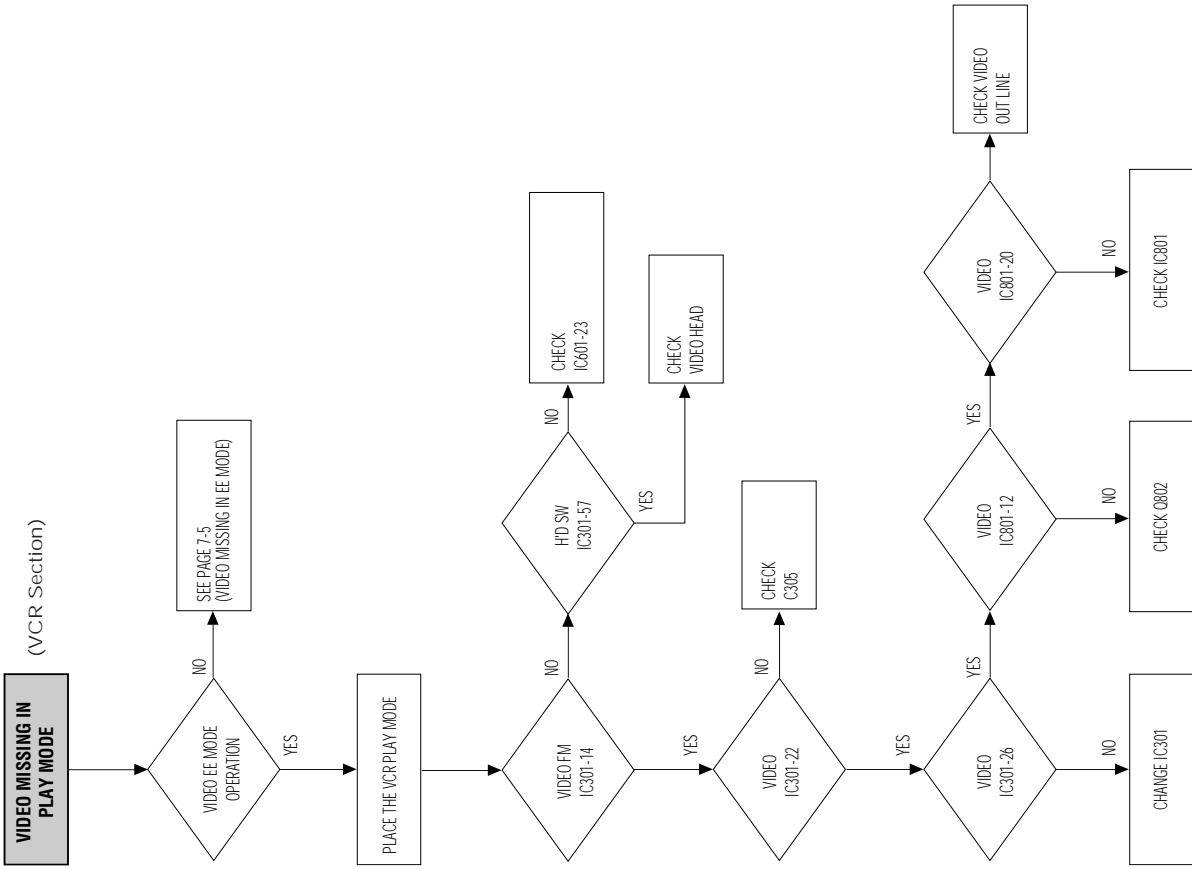
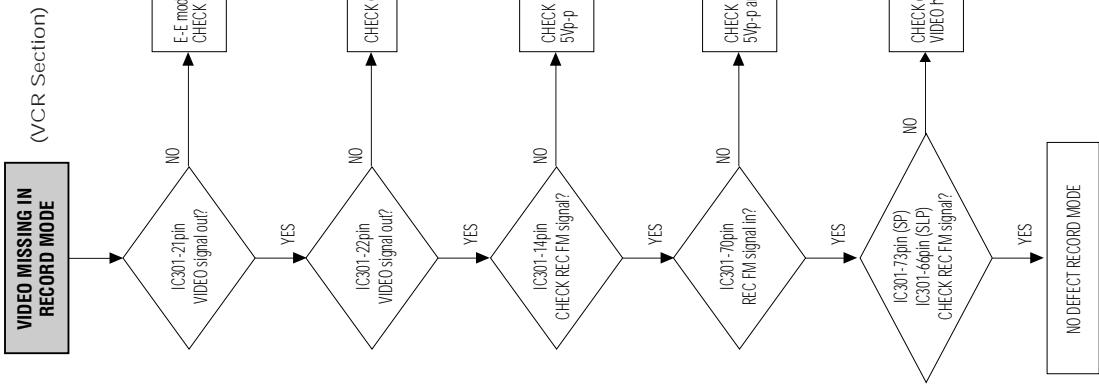


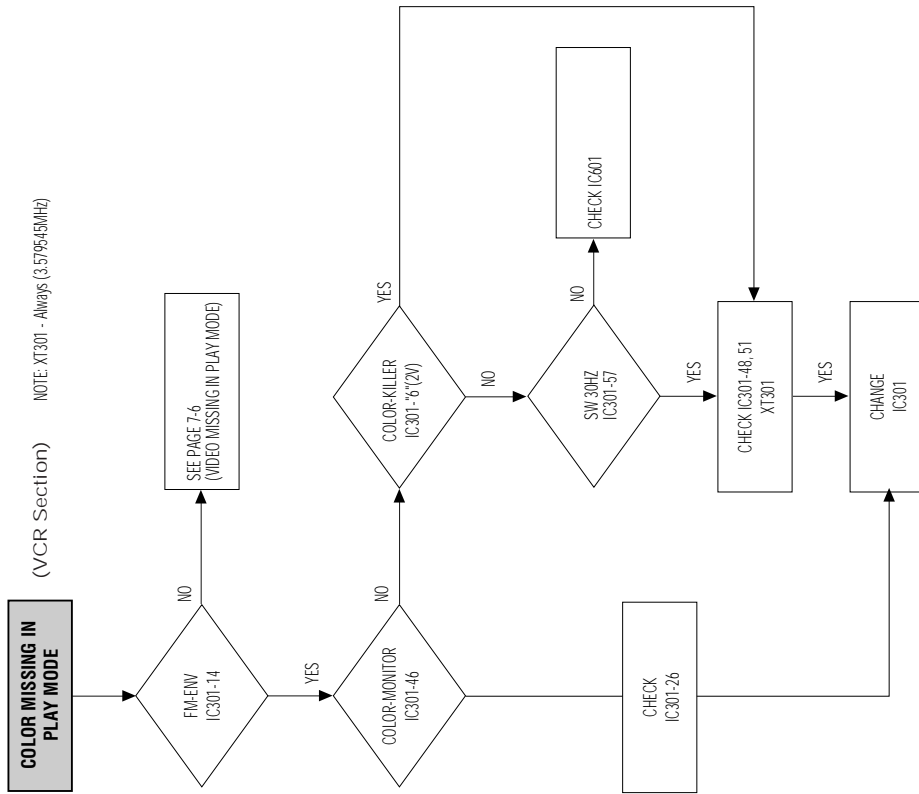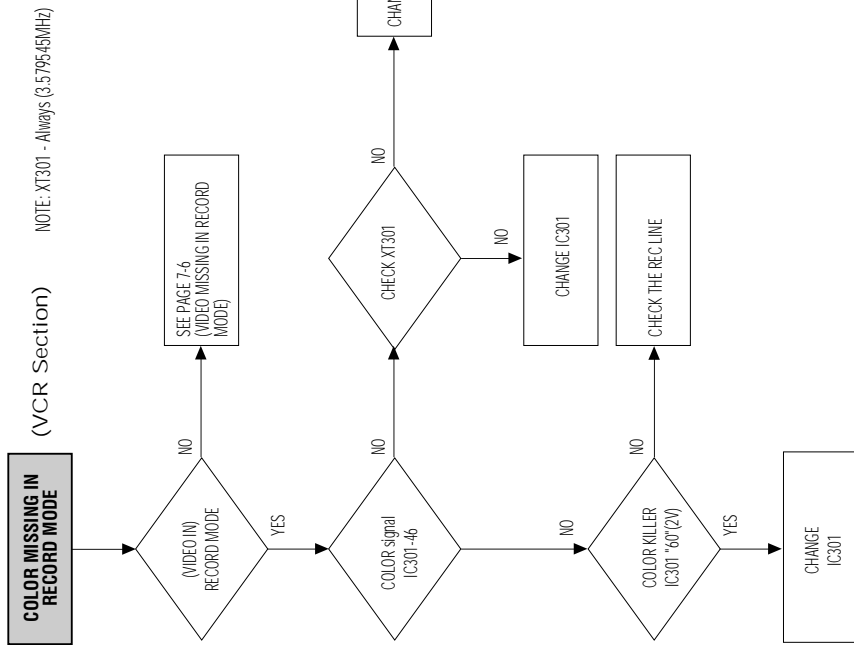


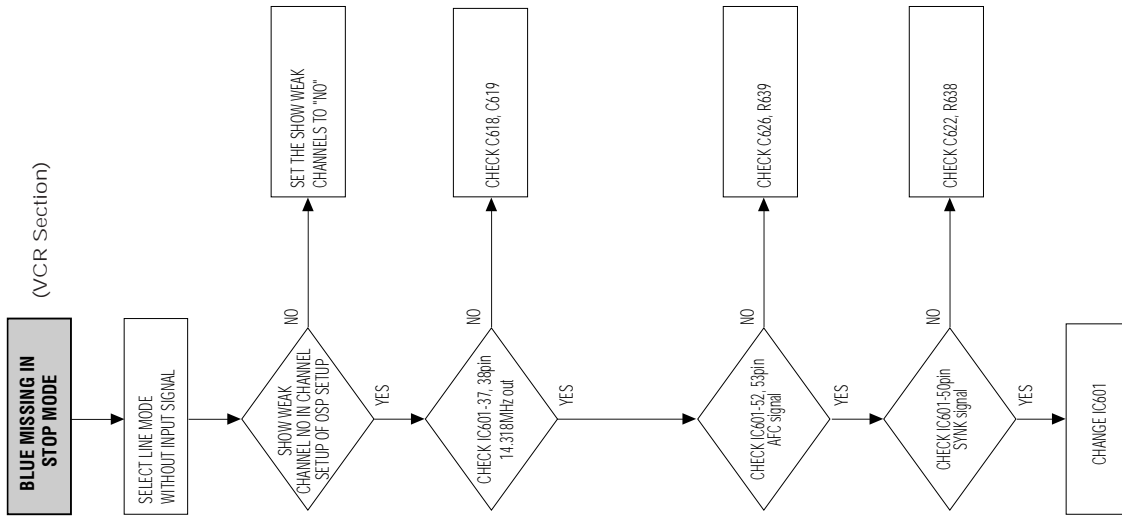
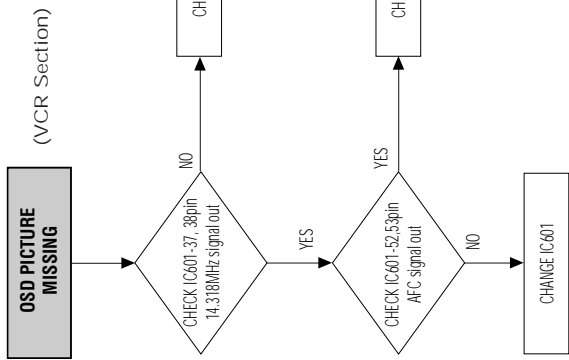


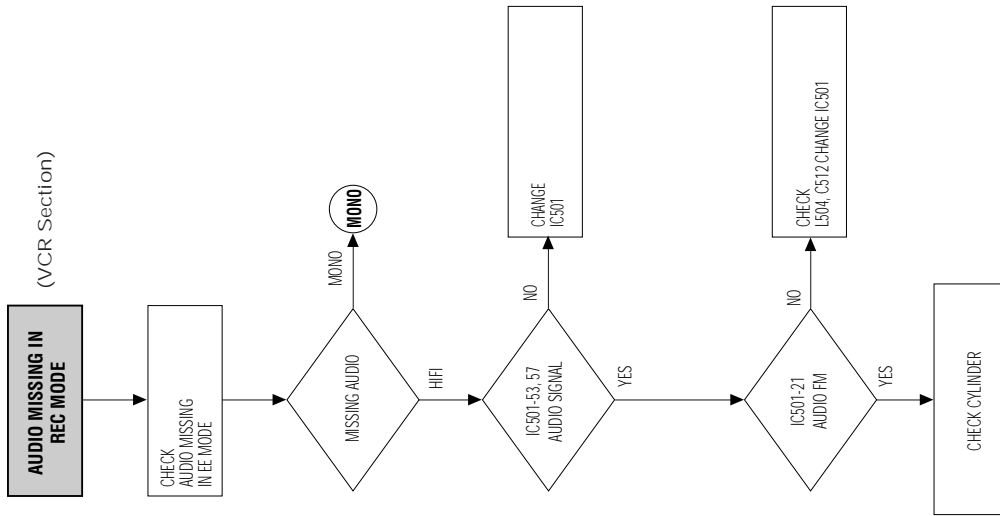
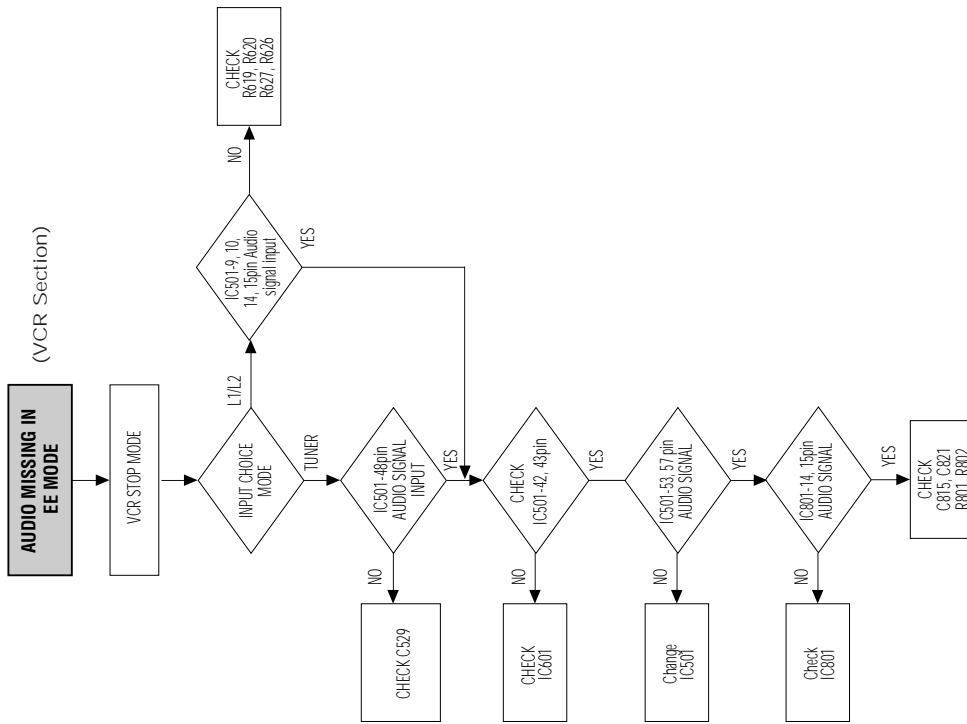


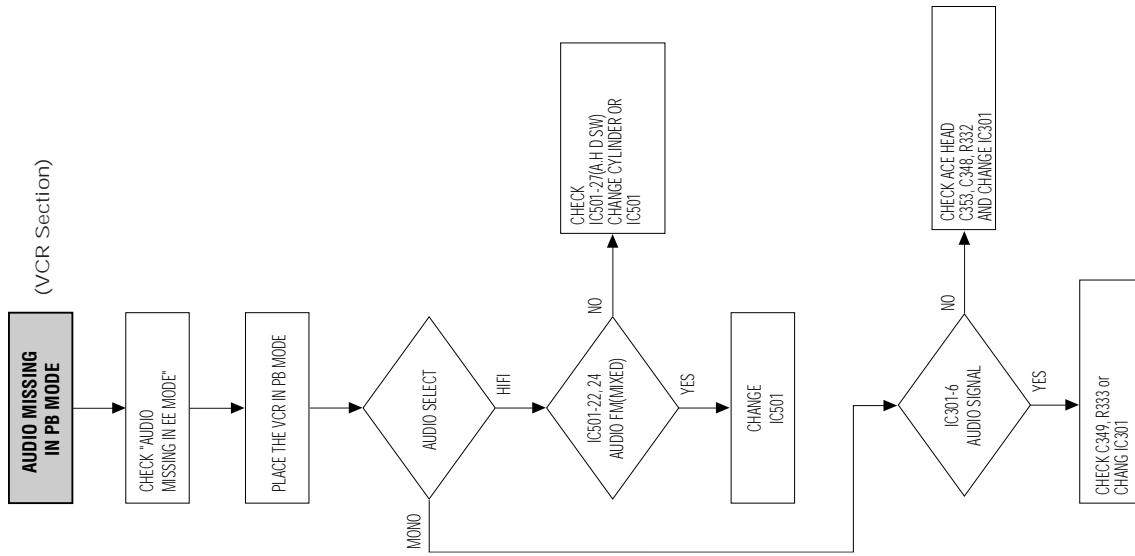
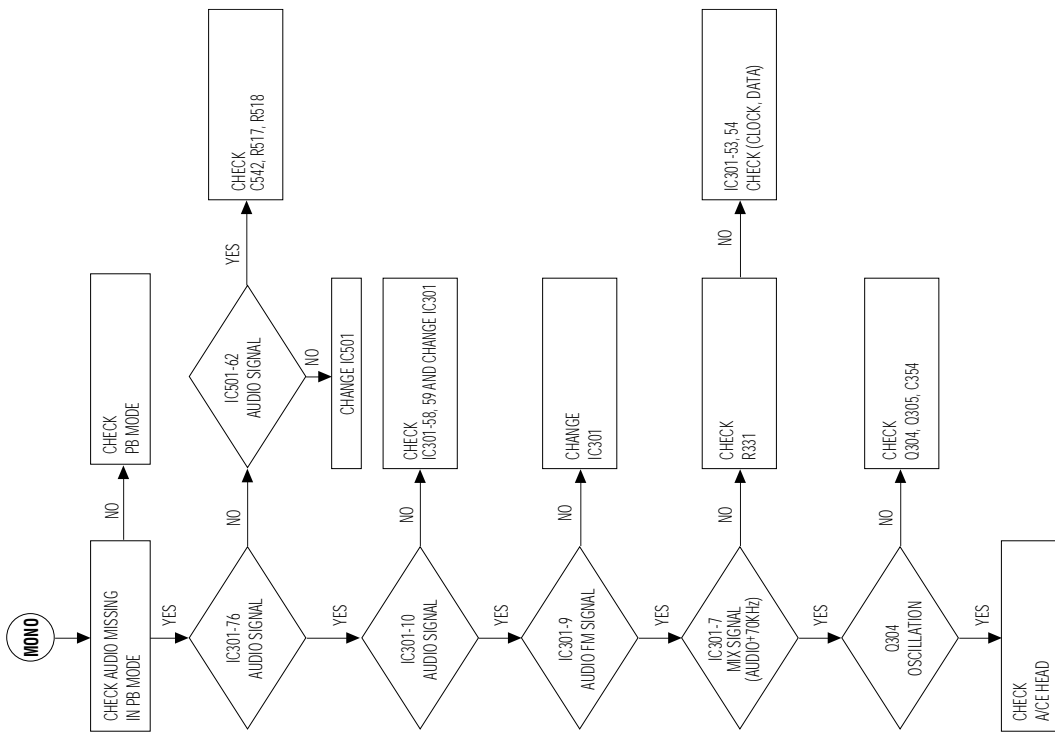


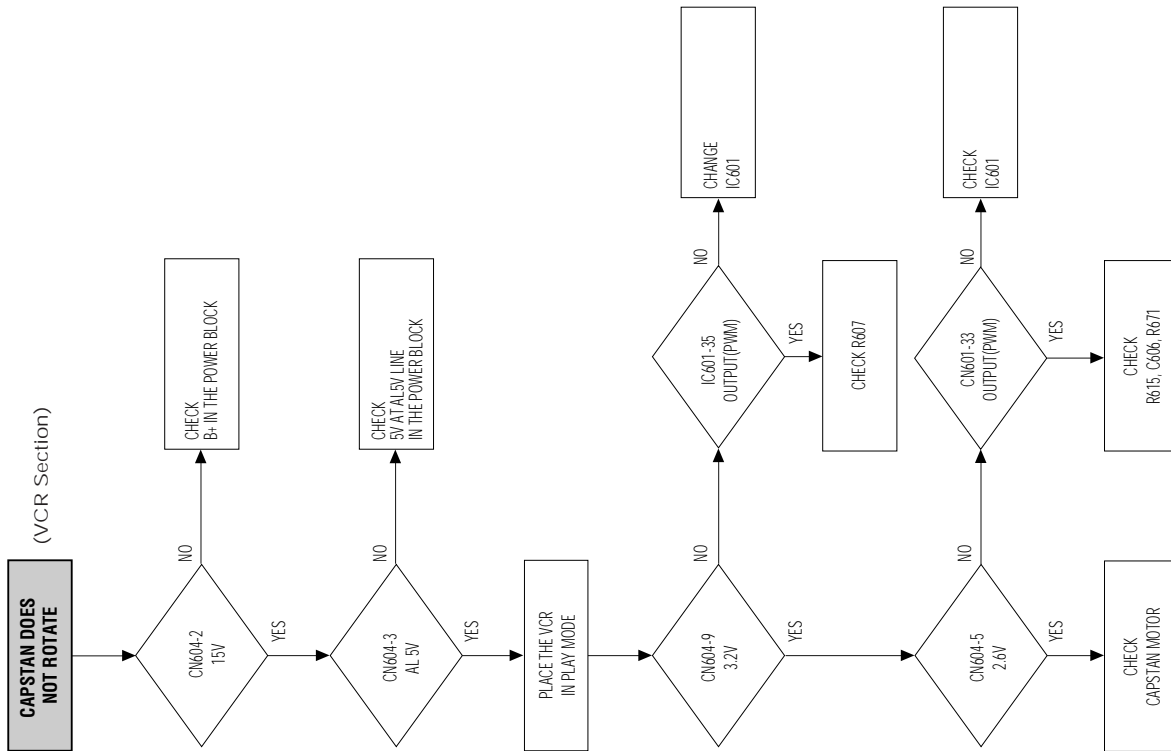
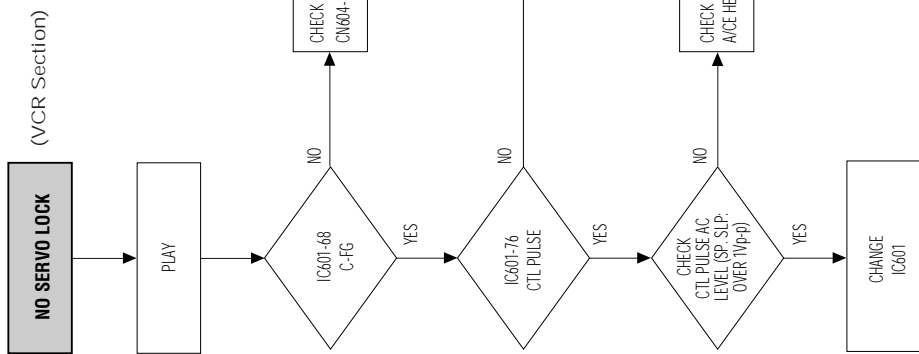


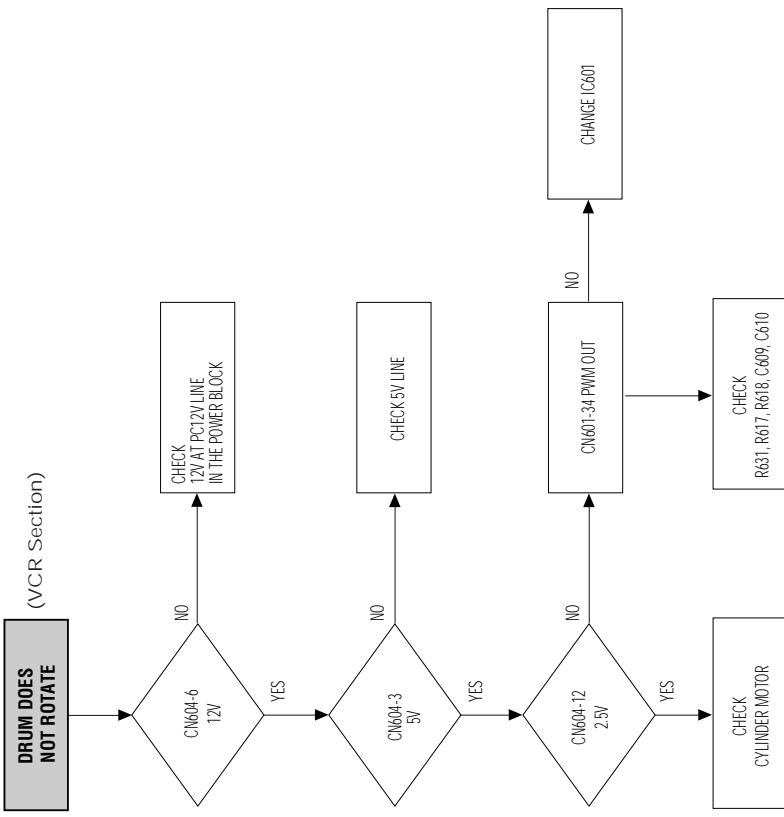


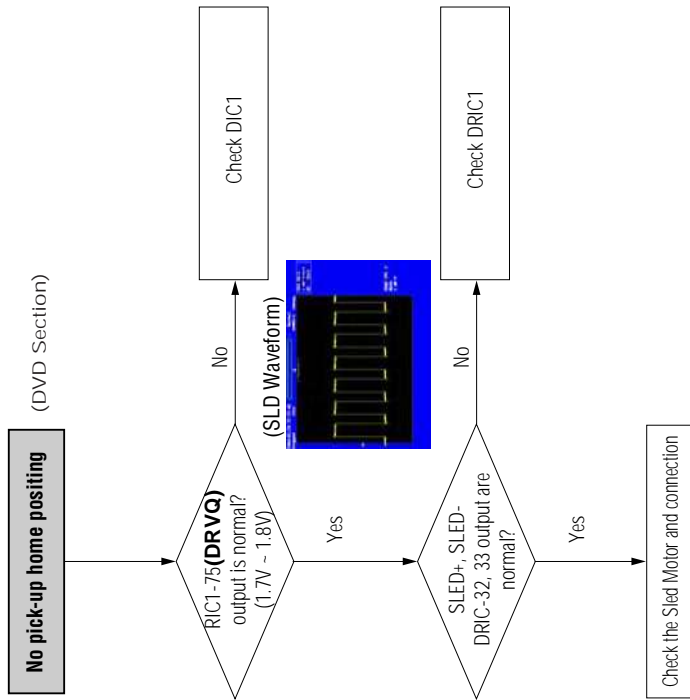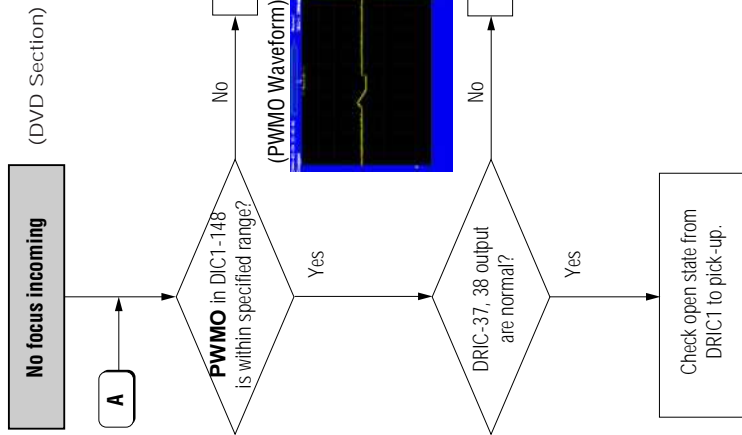

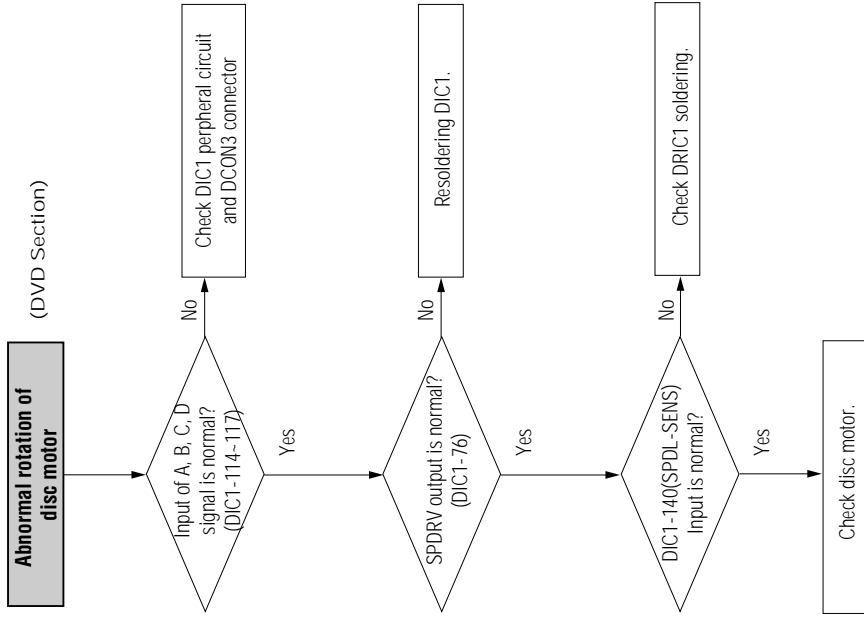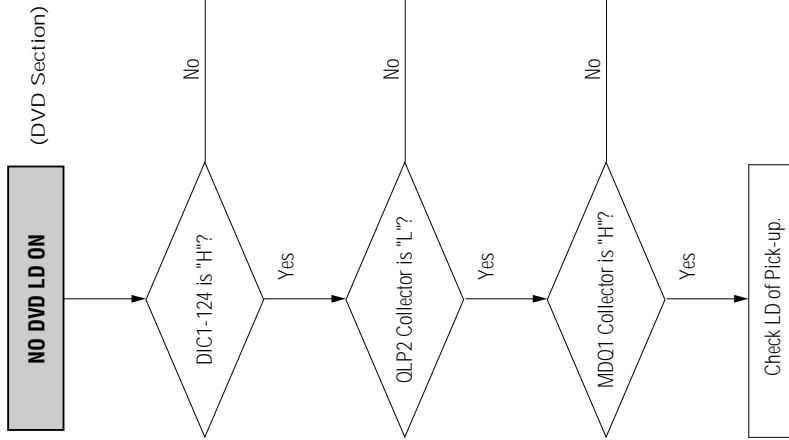

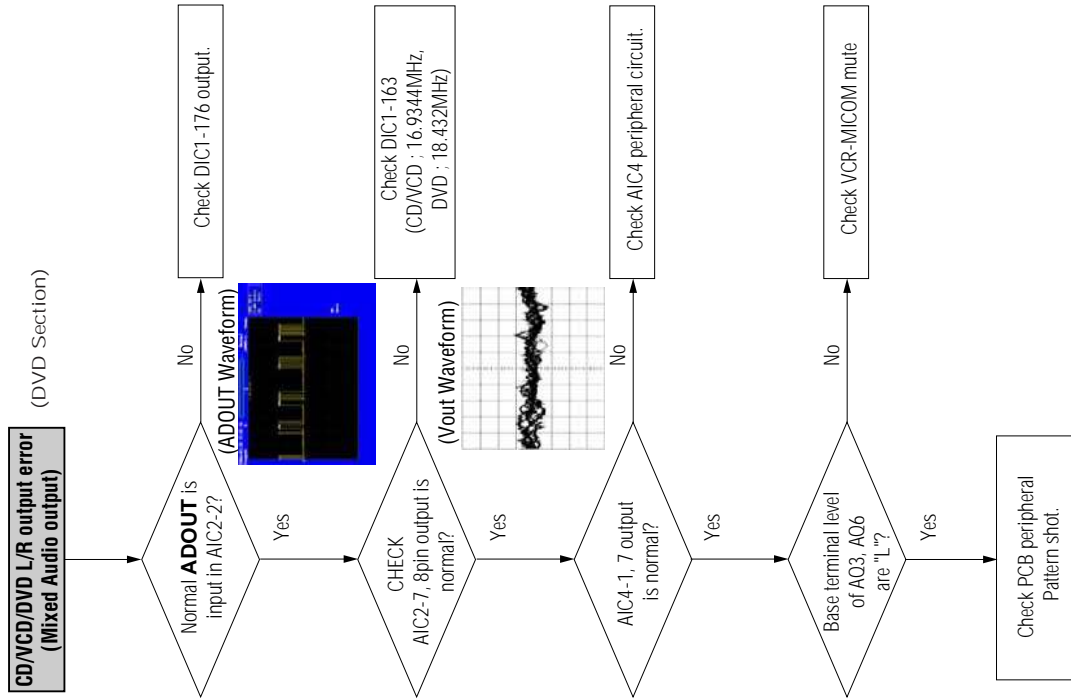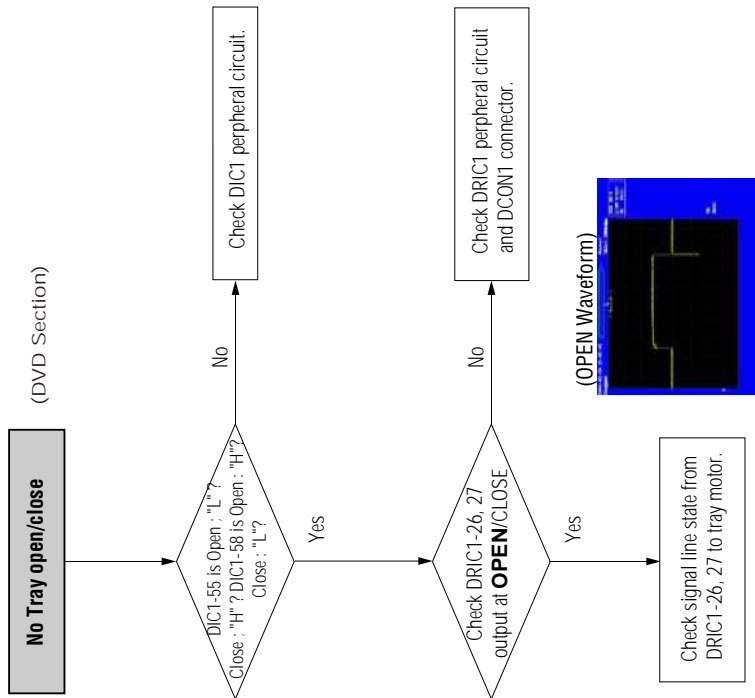

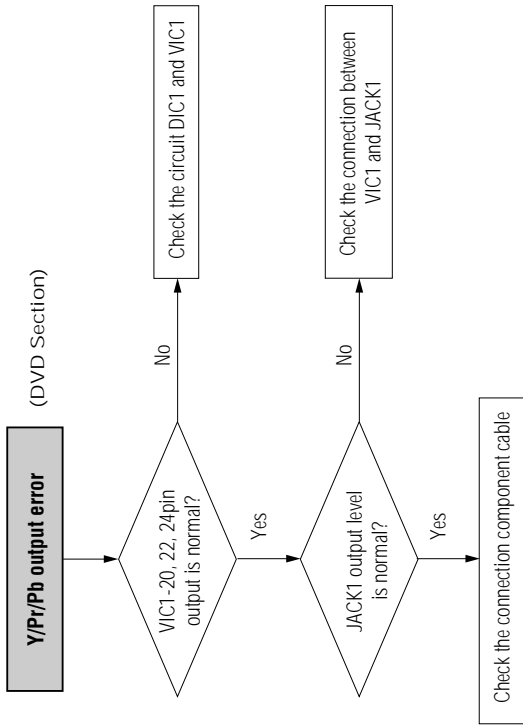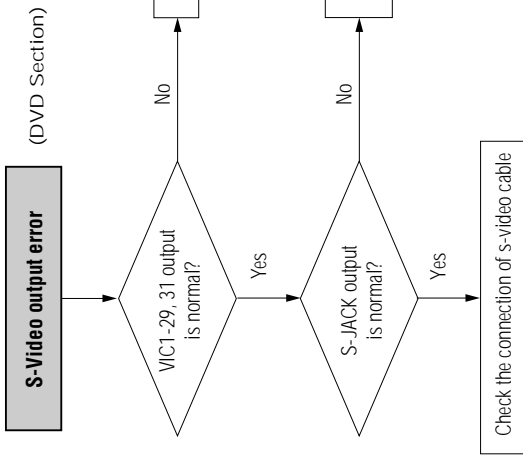

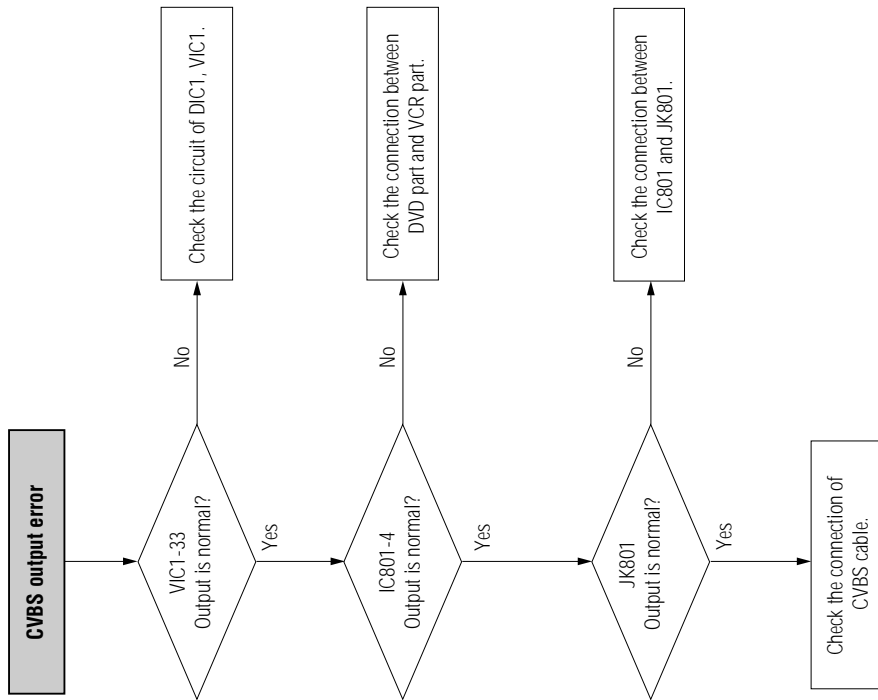

MEMO

8. REPAIR PARTS LIST

8-1 Exploded Views	8-2
8-1-1 Cabinet Assembly	8-2
8-1-2 VCR Mechanical Parts (Top Side)	8-3
8-1-3 VCR Mechanical Parts (Bottom Side)	8-4
8-1-4 DVD Mechanical Parts	8-5
8-2 Electrical Parts List	8-6


8-1 EXPLODED VIEWS

NOTE:

- -XX, -X mean standardized parts, so they may have some differences from the original one.
- Items marked “**” are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- The mechanical parts with no reference number in the exploded views are not supplied.

The components identified by mark \triangle or dotted line with mark \triangle are critical for safety. Replace only with part number specified.


8-1-1 Cabinet Assembly

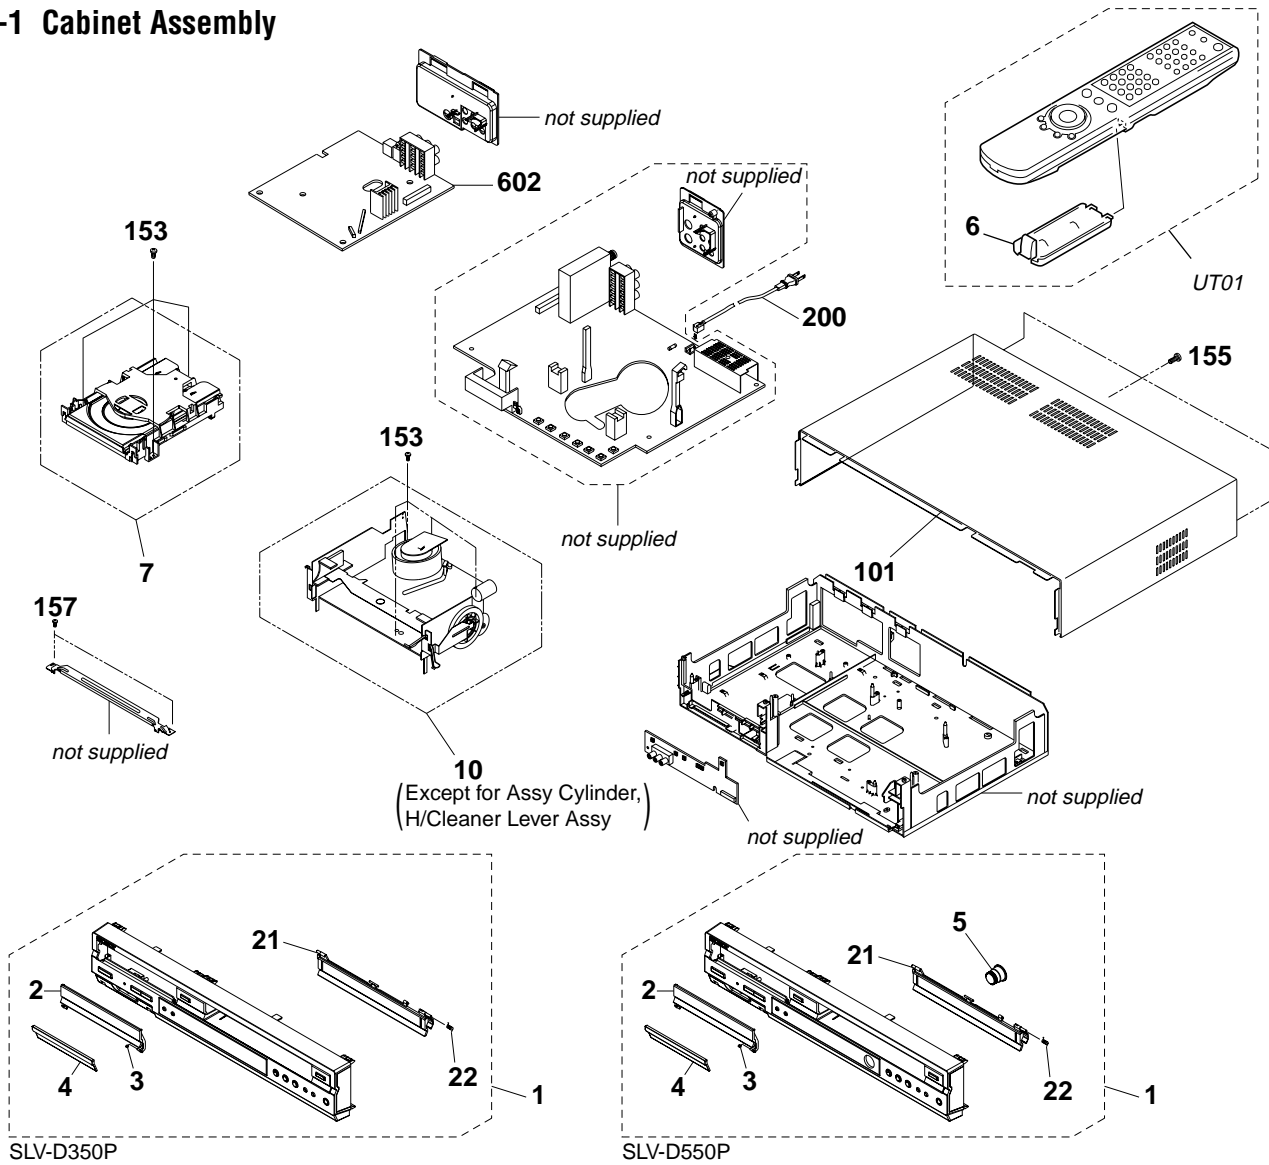

Ref. No.	Part No.	Description	Remarks
1	9-885-061-35	ASSY PANEL FRONT COMBO D350PUC (D350P)	
1	9-885-061-36	ASSY PANEL FRONT COMBO D550PUC (D550P)	
2	9-885-061-25	DOOR TRAY	
3	9-885-061-27	DOOR SPRING	
4	9-885-061-26	DOOR PANEL	
5	9-885-040-31	DIAL SHUTTLE VR (D550P)	
6	3-078-598-01	BATTERY COVER (for RMT-V501C/V501D)	
7	9-885-061-37	ASSY DVD DECK	
10	9-885-062-61	ASSY DECK	
21	9-885-061-24	DOOR CASSETTE	


Ref. No.	Part No.	Description	Remarks
22	9-885-037-13	SPRING ETC MASK	
101	9-885-061-23	CASE (COMBO UC), UPPER	
153	3-075-256-01	SCREW TAP 3X12	
155	3-078-566-01	SCREW TAP M3 L10 BLK	
157	3-075-262-01	SCREW BH 4X12	
\triangle 200	9-885-063-16	POWER CORD EP2	
602	9-885-061-31	DVD MAIN BOARD, COMPLETE (D350P)	
602	9-885-061-32	DVD MAIN BOARD, COMPLETE (D550P)	
UT01	9-885-061-20	COMMANDER (RMT-V501C), (TYPE) (D350P)	
UT01	9-885-061-21	COMMANDER (RMT-V501D), (TYPE) (D550P)	

8-1-2 VCR Mechanical Parts (Top Side)

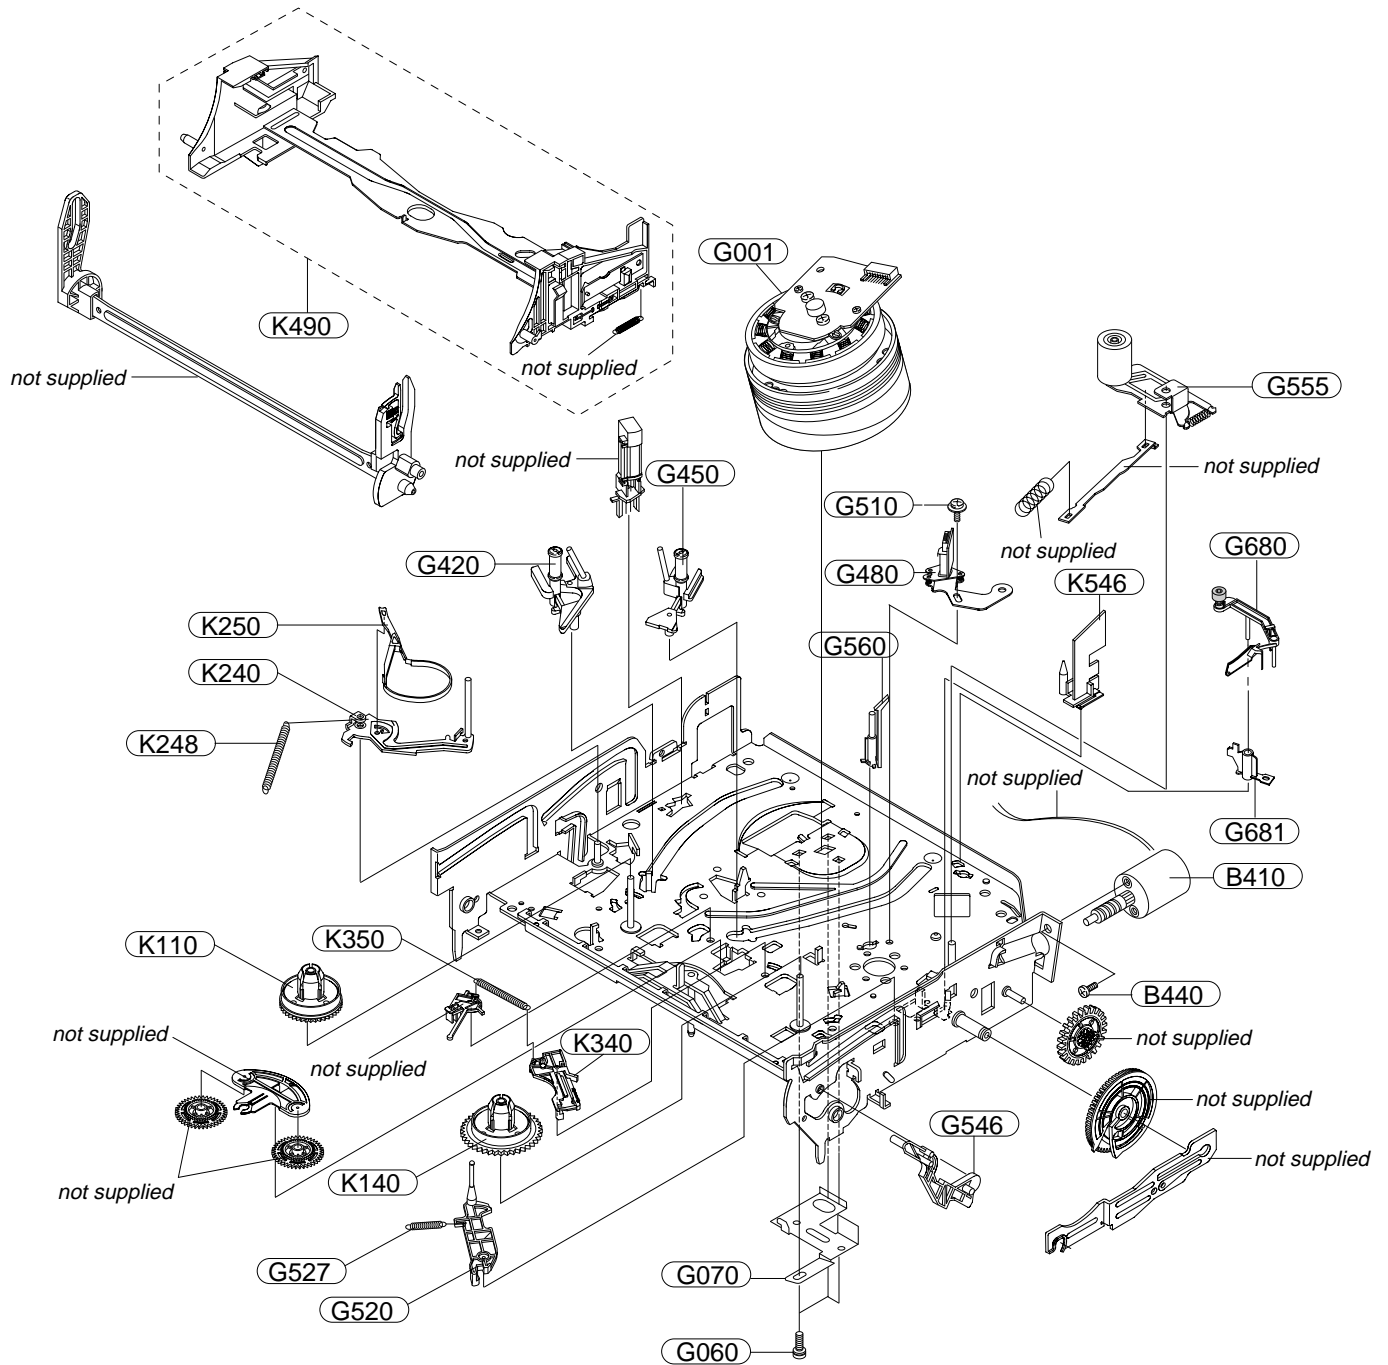


Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
B410	9-885-061-16	MOTOR LOADING ASSY		G560	9-885-061-14	POST-#8 GUIDE ASSY	
B440	9-885-061-04	SCREW TAP 2.6X5.6		G680	3-075-021-01	AUTO HEAD CLEANER (G680)	
G001	9-885-061-13	ASSY CYLINDER 6HD		G681	3-075-022-01	AUTO HEAD CLEANER (G681)	
G060	3-075-254-01	SCREW ASSY MAC 3X6		K110	3-075-047-01	DISK S REEL	
G070	9-885-061-12	PLATE-GROUND DECK		K140	3-075-046-01	DISK T REEL	
G420	3-079-347-01	SLIDER-SUPPLY ASSY		K240	3-067-781-01	LEVER-TENSION	
G450	3-079-346-01	SLIDER-TAKE UP ASSY		K248	3-067-782-01	SPRING-TENSION LEVER	
G480	3-075-241-01	ASSY ACE HEAD		K250	3-067-783-01	BAND-BREAK	
G510	9-885-056-92	SCREW TAP M2.6 L7		K340	3-067-785-01	LEVER-T. BRAKE	
G520	9-885-053-44	LEVER-#9 GUIDE		K350	3-067-786-01	SPRING-BRAKE	
G527	3-067-780-01	SPRING-#9 GUIDE		K490	9-885-061-15	HOLDER-FL CASSETTE	
G546	9-885-061-11	LEVER-FL DOOR		K546	3-067-789-01	GUIDE-CASS. DOOR	
G555	9-885-053-45	UNIT PINCH ASSY					

8-1-3 VCR Mechanical Parts (Bottom Side)

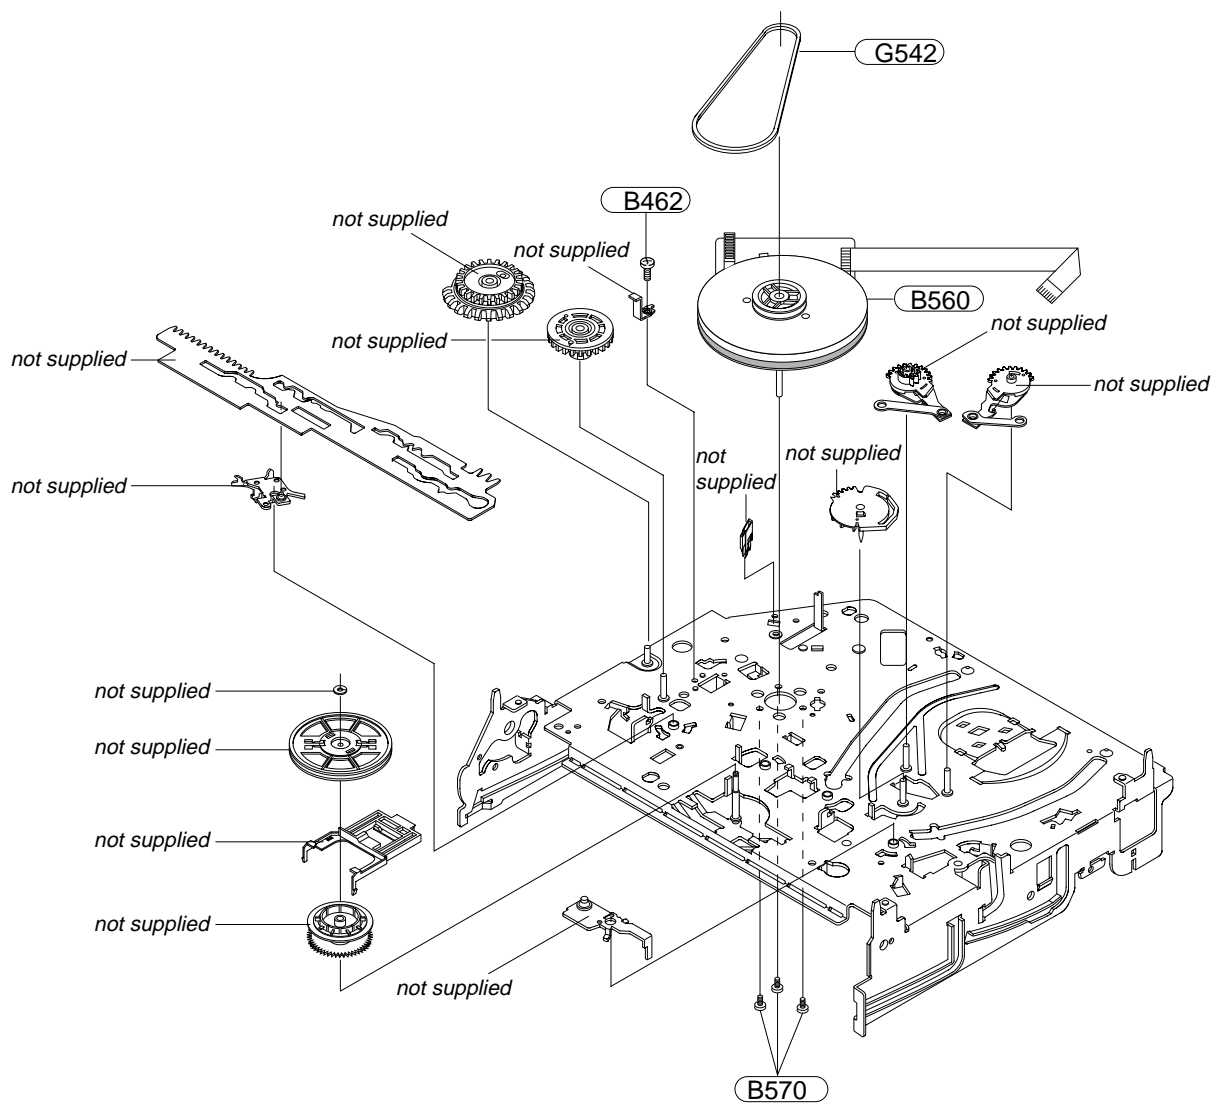

Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
B462	3-075-260-01	SCREW MAC 3X3		B570	9-885-061-03	SCREW CAP 2.6X6	
B560	9-885-060-94	MOTOR CAPSTAN		G542	3-078-583-01	BELT RECTANGULAR	

8-1-4 DVD Mechanical Parts

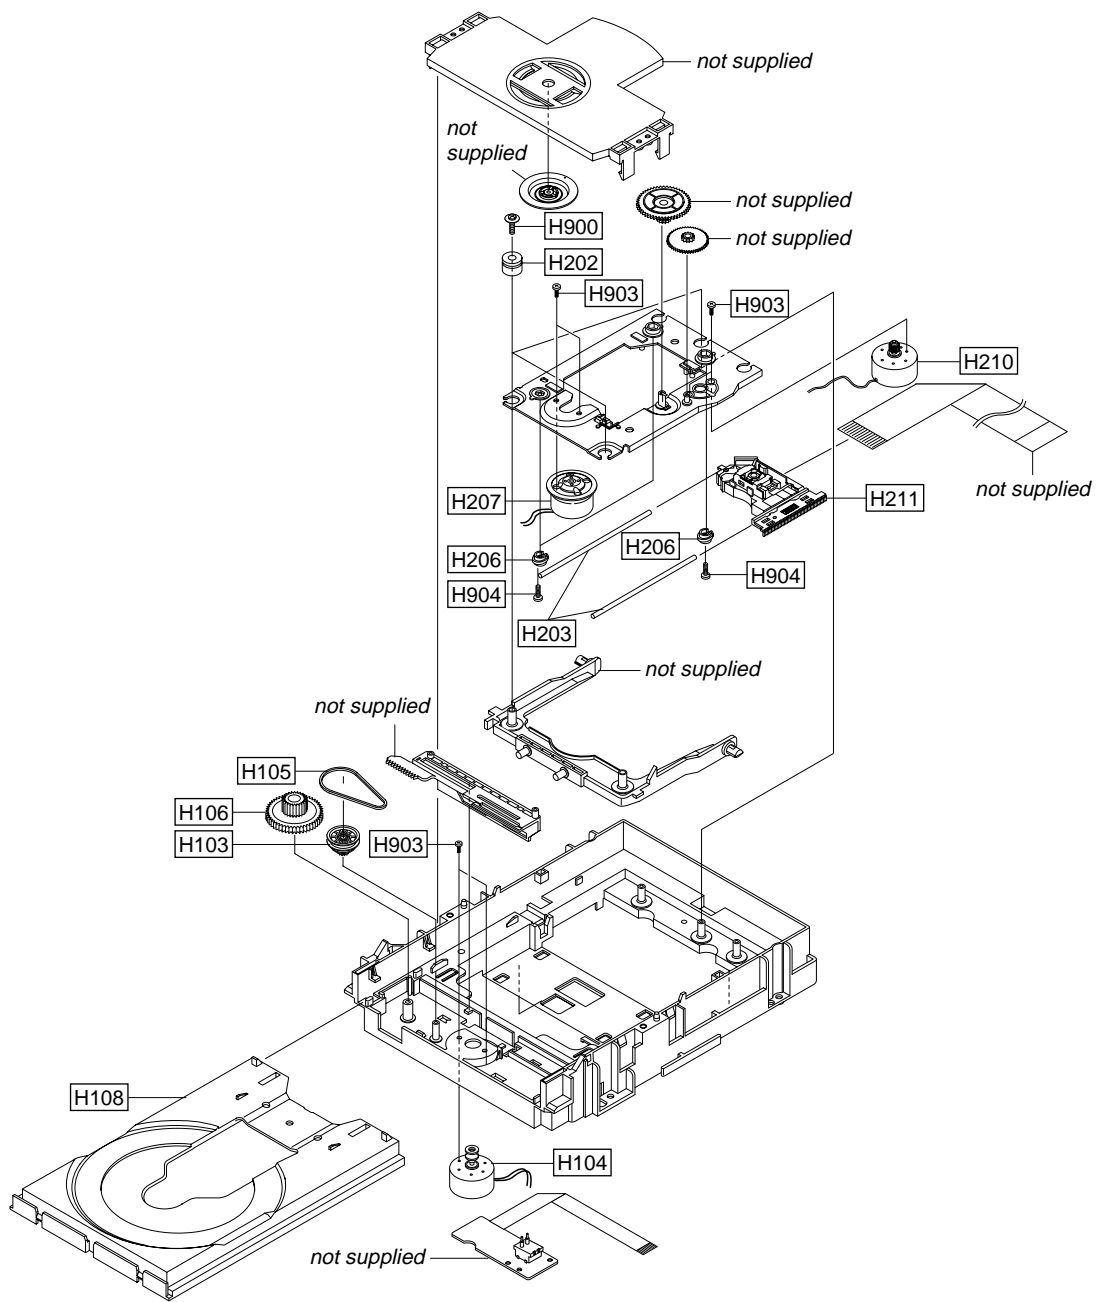

The components identified by mark \triangle or dotted line with mark \triangle are critical for safety. Replace only with part number specified.

Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
H103	9-885-061-29	PULLEY GEAR		H206	9-885-037-23	HOLDER-CAM SKEW	
H104	9-885-061-33	MOTOR LOADING ASSY		H207	9-885-061-19	MOTOR-SPINDLE	
H105	3-078-583-01	BELT RECTANGULAR		H210	9-885-037-22	MOTOR FEED ASSY	
H106	9-885-061-28	GEAR TRAY		\triangle H211	9-885-061-34	ASSY PICK UP	
H108	9-885-061-22	DISC TRAY		H900	3-078-592-01	SCREW TAP 2X6	
H202	9-885-061-30	RUBBER INSULATOR		H903	9-885-037-07	SCREW MAC 1.7X3	
H203	3-078-588-01	SHAFT PU		H904	9-885-037-08	SCREW TAP 1.7X5	

8-2 ELECTRICAL PARTS LIST

NOTE:

- Due to standardization, replacements in the parts list may be different from the parts specified in the diagrams or the components used on the set.
- -XX, and -X mean standardized parts, so they may have some difference from the original one.
- **RESISTORS**
All resistors are in ohms.
METAL: metal-film resistor
METAL OXIDE: Metal Oxide-film resistor
F: nonflammable
- Not all of the parts are listed.

- Items marked “**” are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- **SEMICONDUCTORS**
In each case, u: μ , for example:
uA...: μ A..., uPA..., μ PA...,
uPB..., μ PB..., uPC..., μ PC...,
uPD..., μ PD...
- **CAPACITORS:**
uF: μ F
- **COILS**
uH: μ H

When indicating parts by reference number, please include the board name.

The components identified by mark Δ or dotted line with mark Δ are critical for safety. Replace only with part number specified.

Ref. No.	Part No.	Description	Remarks
		DIAL TIMER BOARD (D550P) *****	
		< VARIABLE RESISTOR >	
DL701	1-786-352-11	SW-DIAL TIMER (DIAL TIMER)	
		DVD MAIN BOARD, COMPLETE *****	
		< DIODE >	
AD1	1-805-012-11	DIODE DAN202K	
AD2	1-805-012-11	DIODE DAN202K	
AD3	1-805-012-11	DIODE DAN202K	
AD4	1-805-009-11	DIODE SWITCHING DAN217	
AD5	1-805-012-11	DIODE DAN202K	
AZ1	1-805-011-11	DIODE UDZ9.1B	
AZ2	1-805-011-11	DIODE UDZ9.1B	
AZ3	1-805-011-11	DIODE UDZ9.1B	
AZ4	1-805-011-11	DIODE UDZ9.1B	
DAZ1	1-805-011-11	DIODE UDZ9.1B	
DAZ2	1-805-011-11	DIODE UDZ9.1B	
LDD1	1-805-013-11	DIODE DAP202K	
VZ5	1-805-011-11	DIODE UDZ9.1B	
VZ6	1-805-011-11	DIODE UDZ9.1B	
VZ7	1-805-011-11	DIODE UDZ9.1B	
VZ8	1-805-011-11	DIODE UDZ9.1B	
VZ9	1-805-011-11	DIODE UDZ9.1B	
VZ10	1-805-011-11	DIODE UDZ9.1B	
VZ20	1-805-011-11	DIODE UDZ9.1B	
VZ21	1-805-011-11	DIODE UDZ9.1B	
VZ22	1-805-011-11	DIODE UDZ9.1B	
VZ23	1-805-011-11	DIODE UDZ9.1B	
		< IC >	
AIC2	9-885-060-87	IC (D/A CONVERTER)	
AIC4	1-805-028-11	IC 4560 (OP AMP)	
AIC5	1-805-028-11	IC 4560 (OP AMP)	
DIC1	9-885-063-15	IC ZR36748 (DECODER)	
DIC3	1-805-027-11	IC 24C021 (EEPROM)	
DIC4	1-805-022-11	IC 74VHCT125A (CMOS LOGIC)	

Ref. No.	Part No.	Description	Remarks
DIC5	9-885-036-99	IC IS42S16400A-7T (DRAM)	
DOIC1	1-805-039-11	IC M74HCU04	
DRIC1	9-885-060-88	IC FAN8004 (MOTOR DRIVER)	
PPIC1	1-805-031-11	IC 3RD13 (V REGULATOR)	
PPIC2	9-885-060-90	IC (POS. ADJUST REG.)	
PPIC3	1-805-031-11	IC 3RD13 (V REGULATOR)	
VIC1	9-885-037-86	IC LA73054 (VIDEO PROCESS)	
		< TRANSISTOR >	
AQ1	1-805-017-11	TRANSISTOR	
AQ2	1-805-018-11	TRANSISTOR	KSR2103
AQ3	1-805-016-11	TRANSISTOR	KSC1623-L
AQ4	1-805-017-11	TRANSISTOR	
AQ5	1-805-018-11	TRANSISTOR	KSR2103
AQ6	1-805-016-11	TRANSISTOR	KSC1623-L
AQ7	1-805-017-11	TRANSISTOR	
AQ8	1-805-018-11	TRANSISTOR	KSR2103
AQ9	9-885-060-83	TRANSISTOR	KSC2328AY
LDQ1	1-805-016-11	TRANSISTOR	KSC1623-L
LDQ2	1-805-016-11	TRANSISTOR	KSC1623-L
LDQ3	1-805-016-11	TRANSISTOR	KSC1623-L
MDQ1	1-805-014-11	TRANSISTOR	KSA1182-Y
MDQ2	1-805-014-11	TRANSISTOR	KSA1182-Y
QLP1	1-805-016-11	TRANSISTOR	KSC1623-L
QLP2	1-805-016-11	TRANSISTOR	KSC1623-L
		< VIBRATOR >	
DY1	1-795-750-11	CRYSTAL UNIT (27MHz)	
		VCR MAIN BOARD ***** (Including the parts mounted on Function-Timer board)	
SC01A	3-075-255-01	SCREW TAP 3X8	
SC03A	3-075-255-01	SCREW TAP 3X8	
		< CAPACITOR >	
Δ C1S04	1-165-573-11	CONDENSER FILM	0.1uF
Δ C1S05	1-165-573-11	CONDENSER FILM	0.1uF

Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
		< CONNECTOR >		ZD1S02	9-885-036-94	DIODE ZENER MTZJ20B	
CN301	1-815-685-11	CONNECTOR FPC 10P				< DISPLAY >	
CN303	1-815-688-11	CONNECTOR FPC 6PSN		DT701	9-885-061-17	LED DISPLAY (D350P)	
CN1S01	1-815-692-11	CONNECTOR HEADER 2P		DT701	9-885-061-18	LED DISPLAY (D550P)	
		< CABLE FLAT >				< FUSE >	
CN303B	1-824-062-11	CABLE FLAT 6P		△F1S01	1-576-525-11	FUSE (1.6A/250V)	
		< DIODE >				< FUSE CLIP >	
D503	1-804-407-11	DIODE 1N4148		FC1S01	1-576-527-11	FUSE CLIP	
D504	1-804-407-11	DIODE 1N4148		FC1S02	1-576-527-11	FUSE CLIP	
D505	1-804-407-11	DIODE 1N4148				< IC >	
D601	1-804-407-11	DIODE 1N4148		IC301	1-805-296-11	IC LA71207 (VIDEO PROCESS)	
D603	1-804-409-11	DIODE 1N4002		IC501	1-804-434-11	IC AN3663FBP (SIGNAL PROCESSOR)	
D604	1-804-409-11	DIODE 1N4002		IC601	9-885-063-11	IC (MICOM)	
D605	1-804-407-11	DIODE 1N4148		IC603	1-805-042-11	IC 524C80D41 (EEPROM)	
D606	1-804-409-11	DIODE 1N4002		IC701	1-804-706-11	IC (LED DRIVER)	
D701	1-804-407-11	DIODE 1N4148		IC801	9-885-036-96	IC BU4053BCFV (CMOS LOGIC)	
D702	1-804-407-11	DIODE 1N4148		IC802	1-805-028-11	IC 4560 (OP AMP)	
D703	1-804-407-11	DIODE 1N4148		IC1S01	9-885-037-01	IC (PWM CONTROLLER)	
D704	1-804-407-11	DIODE 1N4148		IC1S03	9-885-063-10	IC (NEGA. FIXED REG.)	
D705	1-804-409-11	DIODE 1N4002		IC1SS1	1-804-440-11	PHOTO COUPLER	
D706	1-804-407-11	DIODE 1N4148		IC1SS2	1-804-445-11	IC KA4318	
D707	1-804-407-11	DIODE 1N4148		IC6B1	1-804-444-11	IC KA7533	
D801	1-804-407-11	DIODE 1N4148				< LINE FILTER >	
D1P101	1-804-409-11	DIODE 1N4002		△L1S02	1-456-179-11	COIL-LINE FILTER 25mH	
D1P102	1-804-409-11	DIODE 1N4002				< LED >	
D1P103	1-804-407-11	DIODE 1N4148		LD601	9-885-060-84	LED-IR (T/S LED)	
D1P105	1-804-407-11	DIODE 1N4148		LD701	1-805-289-11	LED (PROGRESSIVE)	
D1P107	1-804-407-11	DIODE 1N4148				< PHOTO INTERRUPTER >	
D1P108	1-804-407-11	DIODE 1N4148		PT601	9-885-060-86	PHOTO INTERRUPTER (S REEL)	
D1S01	1-804-413-11	DIODE 1T5		PT602	9-885-060-86	PHOTO INTERRUPTER (T REEL)	
D1S02	1-804-413-11	DIODE 1T5				< TRANSFORMER >	
D1S03	1-804-413-11	DIODE 1T5		△PT1SD1	9-885-061-05	TRANS SWITCHING EER3124	
D1S04	1-804-413-11	DIODE 1T5				< TRANSISTOR >	
D1S05	1-804-408-11	DIODE UF4007		Q302	9-885-060-82	TRANSISTOR KSA812	
D1S06	1-804-407-11	DIODE 1N4148		Q303	1-805-016-11	TRANSISTOR KSC1623-L	
D1S07	1-804-412-11	DIODE F1T4		Q304	9-885-060-82	TRANSISTOR KSA812	
D1SS05	9-885-060-81	DIODE SCHOTTKY SHK65		Q305	1-804-422-11	TRANSISTOR KTC3023	
D1SS07	1-805-041-11	DIODE SCHOTTKY SE55		Q306	9-885-060-82	TRANSISTOR KSA812	
D1SS08	1-805-041-11	DIODE SCHOTTKY SE55		Q307	1-804-422-11	TRANSISTOR KTC3023	
D1SS09	1-804-412-11	DIODE F1T4		Q308	1-804-422-11	TRANSISTOR KTC3023	
D1SS12	1-804-412-11	DIODE F1T4		Q601	9-885-043-26	TRANSISTOR KSR1104	
D1SS13	1-804-411-11	DIODE UG2D		Q701	1-804-421-11	TRANSISTOR KSC945	
D1SS18	1-804-412-11	DIODE F1T4					
ZD401	1-804-414-11	DIODE ZENER UZP33B					
ZD701	1-804-416-11	DIODE ZENER MTZJ5.1B					
ZD801	1-804-416-11	DIODE ZENER MTZJ5.1B					
ZD1P02	1-804-418-11	DIODE ZENER MTZJ12B					
ZD1P04	1-804-416-11	DIODE ZENER MTZJ5.1B					
ZD1P05	1-804-418-11	DIODE ZENER MTZJ12B					
ZD1P06	1-804-416-11	DIODE ZENER MTZJ5.1B					
ZD1S01	1-805-265-11	DIODE ZENER MTZJ4.3B					

Note :
 The components identified by mark △ or dotted line with mark △ are critical for safety.
 Replace only with part number specified.

VCR MAIN

Ref. No.	Part No.	Description	Remarks
Q801	1-805-016-11	TRANSISTOR	KSC1623-L
Q802	9-885-043-26	TRANSISTOR	KSR1104
Q803	1-804-428-11	TRANSISTOR	KSR1004
Q804	1-804-429-11	TRANSISTOR	KSR2001
Q805	1-804-421-11	TRANSISTOR	KSC945
Q806	1-804-421-11	TRANSISTOR	KSC945
Q807	1-804-421-11	TRANSISTOR	KSC945
Q808	1-804-421-11	TRANSISTOR	KSC945
Q1P101	9-885-060-83	TRANSISTOR	KSC2328AY
Q1P102	1-804-429-11	TRANSISTOR	KSR2001
Q1P103	1-804-421-11	TRANSISTOR	KSC945
Q1P105	9-885-060-83	TRANSISTOR	KSC2328AY
Q1P106	9-885-060-83	TRANSISTOR	KSC2328AY
Q1P107	9-885-060-83	TRANSISTOR	KSC2328AY
Q1P108	1-804-429-11	TRANSISTOR	KSR2001
Q1P109	1-804-421-11	TRANSISTOR	KSC945
Q1P110	9-885-060-83	TRANSISTOR	KSC2328AY
Q1P111	9-885-060-83	TRANSISTOR	KSC2328AY
Q1PL01	1-804-427-11	TRANSISTOR	KSR1001
Q1PL02	1-804-419-11	TRANSISTOR	KSA643Y
Q1S01	9-885-036-95	FET SILICON	
		< MODULE >	
RM701	1-477-308-11	REMOCON MOD (TSOP2238WE1)	
		< PHOTO TRANSISTOR >	
S601	9-885-060-85	PHOTO TRANSISTOR (END SENSOR)	
S602	9-885-060-85	PHOTO TRANSISTOR (START SENSOR)	
		< SWITCH >	
SW602	9-885-061-07	SWITCH REC (REC SWITCH)	
SW603	9-885-061-06	SWITCH MODE (MODE SWITCH)	
		< TUNER >	
TM401	9-885-063-12	TUNER NTSC VH015AP	
		< VARISTOR >	
VA1S01	1-804-437-11	VARISTOR	
		< VIBRATOR >	
XT301	1-795-603-11	VIBRATOR CRYSTAL (3.6MHz)	
XT601	1-795-996-11	CRYSTAL UNIT (14.318448MHz)	

Ref. No.	Part No.	Description	Remarks
		MISCELLANEOUS	

△ 200	9-885-063-16	POWER CORD EP2	
B410	9-885-061-16	MOTOR LOADING ASSY	
B560	9-885-060-94	MOTOR CAPSTAN	
G001	9-885-061-13	ASSY CLYNDER 6HD	
G480	3-075-241-01	ASSY ACE HEAD	
H104	9-885-061-33	MOTOR LOADING ASSY	
H207	9-885-061-19	MOTOR-SPINDLE	
H210	9-885-037-22	MOTOR FEED ASSY	
△ H211	9-885-061-34	ASSY PICK UP	

ACCESSORIES & PACKING MATERIALS

3-091-712-11	MANUAL, INSTRUCTION (ENGLISH)
9-885-061-20	COMMANDER (RMT-V501C), (TYPE) (D350P)
9-885-061-21	COMMANDER (RMT-V501D), (TYPE) (D550P)
3-078-598-01	BATTERY COVER (for RMT-V501C/V501D)

Note :
 The components identified by mark △ or dotted line with mark △ are critical for safety.
 Replace only with part number specified.

