

# SLV-662HF/679HF

RMT-V266

## SERVICE MANUAL

*US Model*  
*Canadian Model*  
SLV-662HF/679HF  
*PX Model*  
SLV-679HF



Hi-Fi

VHS

S MECHANISM

Photo: SLV-679HF  
RMT-V266

Refer to the SERVICE MANUAL of VHS  
MECHANICAL ADJUSTMENT VI for  
MECHANICAL ADJUSTMENTS. (9-921-647-11)

### SPECIFICATIONS

#### System

- Format  
VHS NTSC standard
- Video recording system  
Rotary head helical scanning FM system
- Video heads  
Double azimuth four heads
- Video signal  
NTSC color, EIA standards
- Tape speed  
SP: 33.35 mm/s (1 3/8 inches/s)  
EP: 11.11 mm/s (7/16 inches/s)  
LP: 16.67 mm/s (1 1/16 inches/s),  
playback only
- Maximum recording/playback time  
8 hrs. in EP mode (with T-160 tape)
- Fast-forward and rewind time  
Approx. 3 min. (with T-120 tape)

#### Tuner section

- Channel coverage  
VHF 2 to 13  
UHF 14 to 69  
CATV A-8 to A-1, A to W, W+1 to W+84
- Antenna  
75-ohm antenna terminal for VHF/UHF

#### Inputs and outputs

- LINE-1 IN  
VIDEO IN, phono jack (1)  
Input signal: 1 Vp-p, 75 ohms, unbalanced,  
sync negative  
AUDIO IN, phono jacks (2)  
Input level: 327 mVrms  
Input impedance: more than 47 kilohms
- LINE OUT  
VIDEO OUT, phono jack (1)  
Output signal: 1 Vp-p, 75 ohms, unbalanced,  
sync negative  
AUDIO OUT, phono jacks (2)  
Standard output: 327 mVrms  
Load impedance: 47 kilohms  
Output impedance: less than 10 kilohms

#### Timer section

- Clock  
Quartz locked
- Timer indication  
12-hour cycle
- Timer setting  
8 programs per month (max.)
- Power back-up  
Built-in self-charging capacitor  
Back-up duration: up to 1 hour at a time

#### General

- Power requirements  
120 V AC, 60 Hz (SLV-662HF/679HF)  
110 V AC to 240 V AC, 50/60 Hz (SLV-679HF  
PX)
- Power consumption  
24 W (SLV-662HF/679HF)  
19 W (SLV-679HF PX)
- Operating temperature  
5°C to 40°C (41°F to 104°F)
- Storage temperature  
-20°C to 60°C (-4°F to 140°F)
- Dimensions  
Approx. 355 x 96 x 285 mm (w/h/d)  
(Approx. 14 x 3 7/8 x 11 1/4 inches) including  
projecting parts and controls
- Mass  
Approx. 3.6 kg (7 lb 15 oz)
- Supplied accessories  
Remote commander (1)  
Size AA (R6) batteries (2)  
75-ohm coaxial cable with F-type connectors (1)  
Audio/video cable (3 phono to 3 phono) (1)  
Plug adaptor (1) (SLV-679HF PX only)

Design and specifications are subject to change  
without notice.

ENERGY STAR is a U.S. registered mark.  
As an ENERGY STAR Partner, Sony Corporation  
has determined that this product meets the  
ENERGY STAR guidelines for energy efficiency.  
(SLV-662HF/679HF only)

## VIDEO CASSETTE RECORDER



# SONY®

## SAFETY CHECK-OUT

After correcting the original service problem, perform the following safety checks before releasing the set to the customer.

1. Check the area of your repair for unsoldered or poorly-soldered connections. Check the entire board surface for solder splashes and bridges.
2. Check the interboard wiring to ensure that no wires are "pinched" or contact high-wattage resistors.
3. Look for unauthorized replacement parts, particularly transistors, that were installed during a previous repair. Point them out to the customer and recommend their replacement.
4. Look for parts which, though functioning, show obvious signs of deterioration. Point them out to the customer and recommend their replacement.
5. Check the line cord for cracks and abrasion. Recommend the replacement of any such line cord to the customer.
6. Check the B+ voltage to see it is at the values specified.
7. Check the antenna terminals, metal trim, "metallized" knobs, screws, and all other exposed metal parts for AC leakage. Check leakage as described below.

### LEAKAGE TEST

The AC leakage from any exposed metal part to earth ground and from all exposed metal parts to any exposed metal part having a return to chassis, must not exceed 0.5mA (500 microamperes). Leakage current can be measured by any one of three methods.

1. A commercial leakage tester, such as the Simpson 229 or RCA TW-540A. Follow the manufacturers' instructions to use these instruments.
2. A battery-operated AC milliammeter. The Data Precision 245 digital multimeter is suitable for this job.
3. Measuring the voltage drop across a resistor by means of a VOM or battery-operated AC voltmeter. The "limit" indication is 0.75V, so analog meters must have an accurate low voltage scale. The Simpson 250 and Sanwa SH-63Trd are examples of a passive VOM that is suitable. Nearly all battery operated digital multimeters that have a 2V AC range are suitable. (See Fig. A)

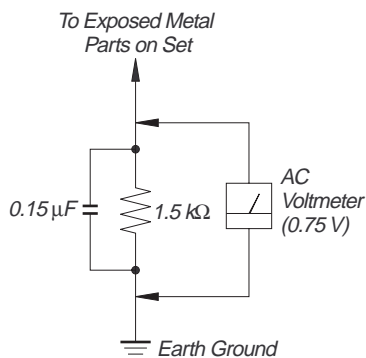


Fig. A. Using an AC voltmeter to check AC leakage.

### SAFETY-RELATED COMPONENT WARNING!!

COMPONENTS IDENTIFIED BY MARK  $\triangle$  OR DOTTED LINE WITH MARK  $\triangle$  ON THE SCHEMATIC DIAGRAMS AND IN THE PARTS LIST ARE CRITICAL TO SAFE OPERATION. REPLACE THESE COMPONENTS WITH SONY PARTS WHOSE PART NUMBERS APPEAR AS SHOWN IN THIS MANUAL OR IN SUPPLEMENTS PUBLISHED BY SONY.

### ATTENTION AU COMPOSANT AYANT RAPPORT À LA SÉCURITÉ!

LES COMPOSANTS IDENTIFIÉS PAR UNE MARQUE  $\triangle$  SUR LES DIAGRAMMES SCHÉMATIQUES ET LA LISTE DES PIÈCES SONT CRITIQUES POUR LA SÉCURITÉ DE FONCTIONNEMENT. NE REMPLACER CES COMPOSANTS QUE PAR DES PIÈCES SONY DONT LES NUMÉROS SONT DONNÉS DANS CE MANUEL OU DANS LES SUPPLÉMENTS PUBLIÉS PAR SONY.

## TABLE OF CONTENTS

### SERVICE NOTE

1. ERROR CODE INDICATION ..... 4

### 1. GENERAL

- Index to parts and controls ..... 1-1
- Step 1 Unpacking ..... 1-2
- Step 2 Setting up the remote commander ..... 1-2
- Step 3 Hookups ..... 1-3
- Selecting a language ..... 1-7
- Setting the clock ..... 1-7
- Presetting channels ..... 1-9
- Setting up the VCR Plus+ system ..... 1-11
- Playing a tape ..... 1-12
- Recording TV programs ..... 1-13
- Recording TV programs using the VCR Plus+ system ..... 1-13
- Setting the timer manually ..... 1-14
- Playing/searching at various speeds ..... 1-15
- Setting the recording duration time ..... 1-15
- Checking/changing/canceling timer settings ..... 1-16
- Recording stereo and bilingual programs ..... 1-16
- Adjusting the picture ..... 1-17
- Changing menu options ..... 1-17
- Editing with another VCR ..... 1-17
- General setup information ..... 1-18
- Troubleshooting ..... 1-18

### 2. DISASSEMBLY

- 2-1. UPPER CASE, PANEL BLOCK ASSEMBLY ..... 1
- 2-2. DS-84 BOARD ..... 1
- 2-3. REAR PANEL ..... 2
- 2-4. MA-341 BOARD ..... 2
- 2-5. MECHANISM DECK ..... 3
- 2-6. INTERNAL VIEWS ..... 4
- 2-7. CIRCUIT BOARDS LOCATION ..... 5

### 3. BLOCK DIAGRAMS

- 3-1. OVERALL BLOCK DIAGRAM ..... 3-1
- 3-2. VIDEO BLOCK DIAGRAM ..... 3-3
- 3-3. SERVO/SYSTEM CONTROL BLOCK DIAGRAM ..... 3-5
- 3-4. AUDIO/TUNER BLOCK DIAGRAM ..... 3-7
- 3-5. POWER BLOCK DIAGRAM ..... 3-9

### 4. PRINTED WIRING BOARDS AND SCHEMATIC DIAGRAMS

- 4-1. FRAME SCHEMATIC DIAGRAM ..... 4-3
- 4-2. PRINTED WIRING BOARDS AND SCHEMATIC DIAGRAMS ..... 4-5
  - MA-341(1/7) (VIDEO) SCHEMATIC DIAGRAMS ..... 4-5
  - MA-341(2/7) (AUDIO) SCHEMATIC DIAGRAMS ..... 4-7
  - MA-341(3/7) (SERVO/SYSTEM CONTROL) SCHEMATIC DIAGRAMS ..... 4-9
  - MA-341(4/7) (AUDIO PROCESS) SCHEMATIC DIAGRAMS ..... 4-11
  - MA-341(5/7) (TUNER) SCHEMATIC DIAGRAMS ..... 4-13
  - MA-341(6/7) (MODE CONTROL) SCHEMATIC DIAGRAMS ..... 4-15
  - MA-341(7/7) (POWER SUPPLY) SCHEMATIC DIAGRAMS ..... 4-17

- MA-341 (VIDEO, AUDIO, SERVO/SYSTEM CONTROL, TUNER, POWER SUPPLY) PRINTED WIRING BOARD ..... 4-19
- DS-84 (TAPE OPERATION) SCHEMATIC DIAGRAMS ..... 4-22
- DS-84 (TAPE OPERATION) PRINTED WIRING BOARD ..... 4-22

### 5. INTERFACE, IC PIN FUNCTION DESCRIPTION

- 5-1. SYSTEM CONTROL – MECHANISM BLOCK INTERFACE (MA-341 BOARD IC160) ..... 5-1
- 5-2. SYSTEM CONTROL – SERVO PERIPHERAL CIRCUIT INTERFACE (MA-341 BOARD IC160) ..... 5-1
- 5-3. SYSTEM CONTROL – SYSTEM CONTROL PERIPHERAL CIRCUIT INTERFACE (MA-341 BOARD IC160) ..... 5-2
- 5-4. SYSTEM CONTROL AND RF MODULATOR – INPUT SELECTION BLOCK INTERFACE (MA341 BOARD IC160) ..... 5-2
- 5-5. SYSTEM CONTROL – VIDEO/RP BLOCK INTERFACE (MA-341 BOARD IC160) ..... 5-2
- 5-6. SYSTEM CONTROL – AUDIO BLOCK INTERFACE (MA-341 BOARD IC160) ..... 5-2
- 5-7. SERVO/SYSTEM CONTROL MICROPROCESSOR PIN FUNCTIONS (MA-341 BOARD IC160) ..... 5-3

### 6. ADJUSTMENTS

- 6-1. MECHANICAL ADJUSTMENTS ..... 6-1
- 6-2. ELECTRICAL ADJUSTMENTS ..... 6-1
  - 1. PREPARATION BEFORE ADJUSTMENT ..... 6-1
    - 1-1. Equipment Required ..... 6-1
    - 1-2. Equipment Connection ..... 6-1
    - 1-3. Set-up of Adjustment ..... 6-1
    - 1-4. Alignment Tape ..... 6-1
    - 1-5. Input/Output Levels and Impedance ..... 6-2
    - 1-6. Adjustment Sequence ..... 6-2
  - 2. POWER SUPPLY CHECK ..... 6-2
    - 2-1. Output Voltage Check (MA-341 Board) ..... 6-2
    - 3. SERVO SYSTEM CHECK ..... 6-3
      - 3-1. RF Switching Position Adjustment (MA-341 Board) ..... 6-3
      - 4. AUDIO SYSTEM ADJUSTMENT ..... 6-3
        - 4-1. Hi-Fi Audio System Adjustment (Hi-Fi model only) ..... 6-3
        - 4-2. HiFi Switching Position Adjustment (MA-341 Board) ..... 6-4
        - 4-3. Normal Audio System Adjustment ..... 6-4
          - 4-3-1. ACE Head Adjustment ..... 6-4
          - 4-3-2. E-E Output Level Check ..... 6-4
          - 4-3-3. Frequency Response Check ..... 6-4
- 5. ADJUSTING PARTS LOCATION DIAGRAM ..... 6-6


### 7. REPAIR PARTS LIST

- 7-1. EXPLODED VIEWS ..... 7-1
  - 7-1-1. FRONT PANEL AND UPPER CASE SECTION ..... 7-1
  - 7-1-2. CHASSIS SECTION ..... 7-2
  - 7-1-3. MECHANISM DECK SECTION-1 ..... 7-3
  - 7-1-4. MECHANISM DECK SECTION-2 ..... 7-4
  - 7-1-5. MECHANISM DECK SECTION-3 ..... 7-5
  - 7-2. ELECTRICAL PARTS LIST ..... 7-6

# SERVICE NOTE

## 1. ERROR CODE INDICATION

- Error codes are indicated using the lower 5 digits in the fluorescent display tube.  
“At this time, Colon “:” between character is not indicated.”

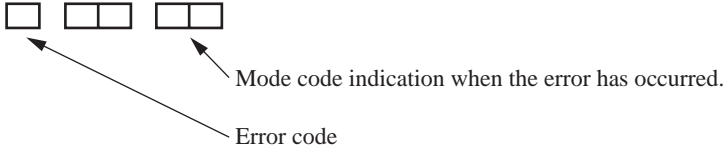

### ERROR CODE

0	No error
1	Cam encoder error Loading direction
2	Cam encoder error Unloading direction
3	T reel error
4	S reel error
5	Capstan error
6	Drum error
7	Error on initializing
8	Cassette loading error
9	Reserve

### MODE CODE


0	Power-on eject	10	FWD x1	20	REW play
1	Power-on initial	11	FWD x2	21	Cas. loading
2	Power-off eject	12	CUE	22	Tape loading
3	Power-off stop	13	PB-pause	23	Power-off loading
4	FF	14	RVS-pause	24	Mecha. error (Power on)
5	REW	15	RVS x1	25	Power-on eject initial
6	REC	16	RVS x2	26	Power-off eject initial
7	REC- pause	17	REV	27	APC REC
8	Power-on stop	18	Power-off initial	28	Cas. loading (No auto PB check)
9	PB	19	Mecha. error (Power off)		

This section is extracted from instruction manual.

## Index to parts and controls

Refer to the pages indicated in parentheses ( ) for details.

### Front panel

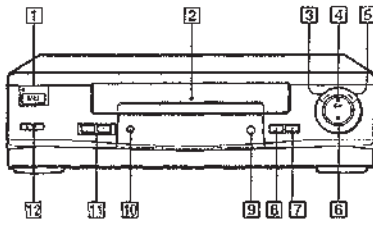


- |  |   |
|--|---|
| 1 <b>I/O</b> POWER switch/indicator (51)       | 7 <b>  </b> PAUSE button (45, 67)               |
| 2 Tape compartment                             | 8 <b>●</b> REC (record) button (48, 58, 67)     |
| 3 <b>◀◀</b> REW (rewind) button (45, 56)       | 9 Remote sensor (5)                             |
| 4 <b>▶▶</b> PLAY button (45, 56)               | 10 <b>EASY SET UP</b> button (11, 14, 18, 21)   |
| 5 <b>▶▶▶</b> FF (fast-forward) button (45, 56) | 11 <b>CHANNEL/TRACKING +/-</b> buttons (45, 63) |
| 6 <b>■</b> STOP button (45, 67)                | 12 <b>▲</b> EJECT button (45)                   |

continued

## Index to parts and controls (continued)

### Display window

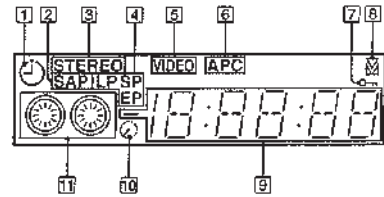


- |   |  |
|---|--|
| 1 Timer indicator (51, 54)                      | 7 Child Lock indicator (52)                              |
| 2 SAP (Second Audio Program) indicator (61)     | 8 Tracking Indicator (63)                                |
| 3 STEREO indicator (61)                         | 9 Time counter/clock/line/channel indicator (46, 48, 67) |
| 4 Tape speed indicator (48)                     | 10 Remaining time indicator (49)                         |
| 5 VIDEO indicator (49, 68)                      | 11 Tape/recording indicator (48)                         |
| 6 APC (Adaptive Picture Control) indicator (63) |  |

Additional information | 73

74 | Additional information

### Rear panel

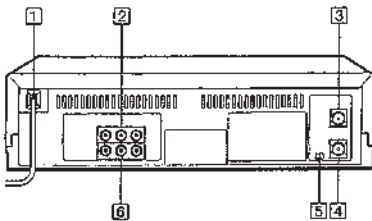


- |   |  |
|---|--|
| 1 AC power cord (7)                     | 4 VHF/UHF OUT connector (10, 13, 17, 20) |
| 2 LINE-1 IN AUDIO R/L/VIDEO jacks (66)  | 5 RF (Radio Frequency) UNIT switch (68)  |
| 3 VHF/UHF IN connector (10, 13, 17, 20) | 6 LINE OUT AUDIO R/L/VIDEO jacks (8)     |

continued

## Index to parts and controls (continued)

### Remote commander

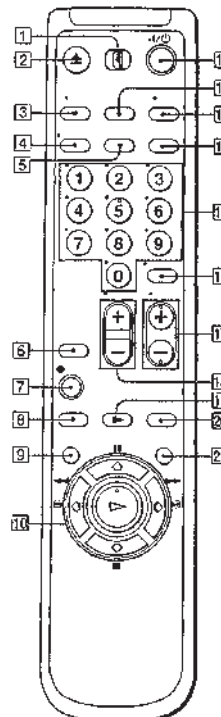

- |  |
|--|
| 1 <b>TV/VIDEO</b> switch (5)                                       |
| 2 <b>▲</b> EJECT button (45)                                       |
| 3 <b>TV/VIDEO</b> button (6, 49)                                   |
| 4 <b>DISPLAY</b> button (49)                                       |
| 5 <b>CLEAR</b> button (46, 51, 60)                                 |
| 6 <b>INPUT SELECT</b> button (48, 49, 67)                          |
| 7 <b>●</b> REC (record) button (48, 58)                            |
| 8 <b>SP</b> (Standard Play)/ <b>EP</b> (Extended Play) button (48) |
| 9 <b>MENU</b> button (25, 53, 59)                                  |
| 10 <b>  </b> PAUSE/ <b>↑</b> button (25, 45)                       |
| <b>■</b> STOP/ <b>↓</b> button (25, 45)                            |
| <b>◀◀</b> REW (rewind)/ <b>◀</b> button (45, 56)                   |
| <b>▶▶</b> FF (fast-forward)/ <b>▶</b> button (45, 56)              |
| <b>▶</b> PLAY/OK button (25, 45)                                   |




Additional information | 75

76 | Additional information

**Step 1****Unpacking**

Check that you have received the following items with the VCR:

- Remote commander
- 75-ohm coaxial cable with F-type connectors
- Size AA (R6) batteries
- Plug adaptor (SLV-679HF PX only)
- Audio/video cable (3-phono to 3-phono)

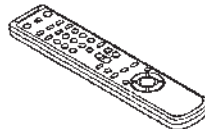

If the plug supplied with your VCR does not fit your power outlet, attach the supplied adaptor to the plug.

**Checking your model name**


The instructions in this manual are for the 3 models: SLV-662HF, 679HF and 679HF PX. Check your model number by looking at the rear panel of your VCR. The SLV-662HF is the model used for illustration purposes. Any difference in operation is clearly indicated in the text, for example, "SLV-679HF only."

Additional Information | 77


4 | Getting Started

**Step 2****Setting up the remote commander****Inserting the batteries**

Insert two size AA (R6) batteries by matching the + and - on the batteries to the diagram inside the battery compartment. Insert the negative (-) end first, then push in and down until the positive (+) end clicks into position.

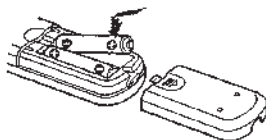**Using the remote commander**

You can use this remote commander to operate this VCR and a Sony TV. Buttons on the remote commander marked with a dot (•) can be used to operate your Sony TV.

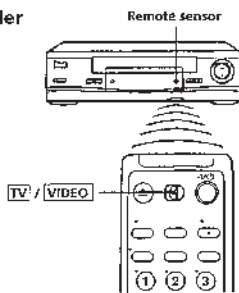

Getting Started

To operate the VCR	Set <b>TV/VIDEO</b> to <b>VIDEO</b> and point at the remote sensor on the VCR
a Sony TV	<b>TV</b> and point at the remote sensor on the TV

**Notes**

- With normal use, the batteries should last about three to six months.
- If you do not use the remote commander for an extended period of time, remove the batteries to avoid possible damage from battery leakage.
- Do not use a new battery with an old one.
- Do not use different types of batteries.

continued

**Step 2: Setting up the remote commander (continued)****Controlling other TVs with the remote commander**

The remote commander is preprogrammed to control non-Sony TVs. If your TV is listed in the table below, set the appropriate manufacturer's code number.

- 1 Set **TV/VIDEO** at the top of the remote commander to **TV**.
- 2 Hold down **I/O**, and enter your TV's code number(s) using the number buttons. Then release **I/O**.

Now you can use the **I/O**, **VOL +/-**, **CH +/-** and **TV/VIDEO** buttons to control your TV. You can also use the buttons marked with a dot (•) to control a Sony TV. To control the VCR, reset **TV/VIDEO** to **VIDEO**.

**Code numbers of controllable TVs**

If more than one code number is listed, try entering them one at a time until you find the one that works with your TV.

Manufacturer	Code number	Manufacturer	Code number	Manufacturer	Code number
Sony	01	JVC	09	RCA	04, 10
Akai	04	KMC	03	Sampo	12
AOC	04	Magnavox	03, 08, 12	Sonyo	11
Centurion	12	Marantz	04, 13	Scott	12
Coronado	03	MGA/Mitsubishi	04, 12, 13, 17	Sears	07, 10, 11
Curis-Mathes	12	NFC	04, 12	Sharp	05, 05, 18
Daytron	12	Panasonic	06, 19	Sylvania	08, 12
Emerson	03, 04, 14	Philco	03, 04	Teknika	03, 08, 14
Fisher	11	Philips	08	Toshiba	07
General Electric	06, 10	Pioneer	16	Wards	03, 04, 12
Gold Star	03, 04, 17	Forland	03	Yorx	12
Hitachi	02, 03	Quasar	06, 18	Zenith	15
J.C. Penny	04, 12	Radio Shack	05, 14		

**Notes**

- If the TV uses a different remote control system from the one programmed to work with the VCR, you cannot control your TV with the remote commander.
- If you enter a new code number, the code number previously entered will be erased.
- When you replace the batteries of the remote commander, the code number may change. Set the appropriate code number every time you replace the batteries.
- When you press the **AUDIO MONITOR** button, your TV's menu may appear on the TV screen. To exit the TV menu, press the **MENU** button on the TV remote commander or wait until the menu disappears automatically.

Getting Started | 5

6 | Getting Started

## Step 3

### Hookups

#### Selecting the best hookup option

There are many ways in which your VCR can be hooked up. To hook up your VCR so that it works best for you, first scan through the table below. Then use the accompanying diagrams and procedures on the following pages to set up your VCR.

If you have	Use	Refer to
TV that has audio/video input	Audio/video (A/V) hookup, then follow one of the hookups below.	Pages 8 and 9
Antenna only, no cable TV	Hookup 1	Pages 10 to 12
Cable box with many scrambled channels	Hookup 2	Pages 13 to 16
No cable box or cable box with only a few scrambled channels	Hookup 3	Pages 17 to 19
Cable box with only a few scrambled channels, using an A/B switch	Hookup 4	Pages 20 to 24

After you've completed the connections, follow the instructions for setup. During setup, if you need more details on the procedure described, page numbers are provided where you can find complete, step-by-step instructions.

After you've completed the setup, you're ready to use your VCR. Procedures differ depending on the hookup you used. For an overview, refer to "Quick reference to using the VCR" on the back cover.

#### Before you get started

- Turn off the power to all equipment.
- Do not connect the AC power cords until all of the connections are completed.
- Be sure you make connections firmly. Loose connections may cause picture distortion.
- If your TV doesn't match any of the examples provided, see your nearest Sony dealer or qualified technician.

continued

Getting Started

### Step 3: Hookups (continued)


#### Audio/video (A/V) hookup

Pages 8 and 9


If your TV has audio/video (A/V) input jacks, you will get a better picture and sound if you hook up your VCR using these connections. In addition, for a true "home theater" experience, you should connect the audio outputs of your VCR or TV to your stereo system. If your TV doesn't have A/V inputs, see the following pages for antenna or cable hookups.

If you're not planning to use your VCR to record programs, you're finished setting up the VCR after you've made the connections shown on this page. If you want to record off-air or off your cable TV system, complete these connections first, and then go to the following pages for antenna or cable hookups.

#### A Use this hookup if your TV has stereo jacks

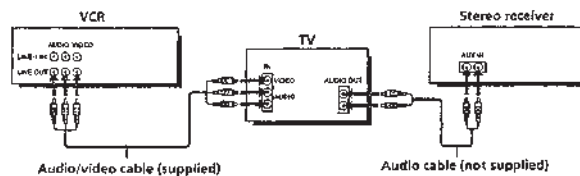

#### B Use this hookup if your TV doesn't have stereo jacks

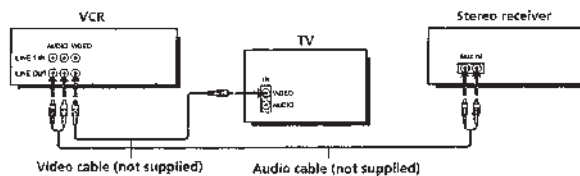

Note

- To play a tape in stereo, you must use the A/V connection.


Getting Started | 7

8 | Getting Started


#### A/V hookup: VCR setup

After you've connected your TV and completed antenna or cable hookup, use the following procedure to set up the VCR.

Press MENU and select ADVANCED OPTIONS.

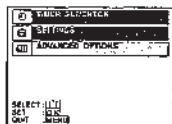

Set AUTO ANT SELECT to OFF and press OK.

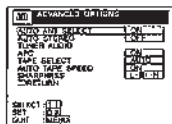

For details, see page 64.

#### Caution

Connections between the VCR's VHF/UHF connector and the antenna terminals of the TV receiver should be made only as shown in the following instructions. Failure to do so may result in operation that violates the regulations of the Federal Communications Commission regarding the use and operation of RF devices. Never connect the output of the VCR to an antenna or make simultaneous (parallel) antenna and VCR connections at the antenna terminals of your receiver.

#### Note to CATV system installer (in USA)

This reminder is provided to call the CATV system installer's attention to Article 820-40 of the NEC that provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building, as close to the point of cable entry as practical.

continued

Getting Started

### Step 3: Hookups (continued)

#### Hookup 1


Pages 10 to 12

#### Antenna hookup


Make the following connections if you're using an antenna (if you don't have cable TV).

#### A Use this hookup if you're using:

- VHF/UHF antenna (you get channels 2-13 and channels 14 and higher)
- UHF-only antenna (you get channels 14 and higher)
- Separate VHF and UHF antennas

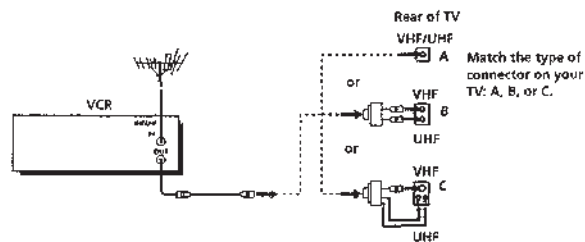

#### B Use this hookup if you're using a VHF-only antenna (you get channels 2-13 only)

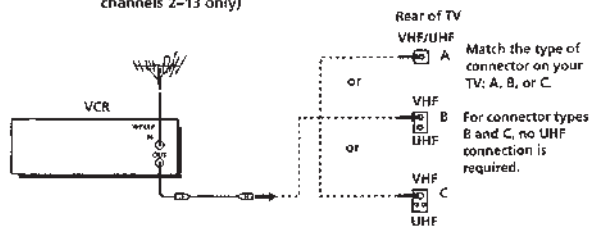

If you cannot connect your antenna cable to the VCR directly


If your antenna cable is a flat cable (300-ohm twin lead cable), attach an external antenna connector (not supplied) so you can connect the cable to the VHF/UHF IN connector. If you have separate cables for VHF and UHF antennas, you should use a U/V band mixer (not supplied). For details, see page 69.

Getting Started | 9

10 | Getting Started


### Hookup 1: VCR setup

- 1 Set the RF UNIT switch to CH3 or CH4, whichever channel is not used in your area. If both are used, set the switch to either channel. For details, see page 66. If you made A/V connections (page 8), you can skip this step.
- 2 Press EASY SET UP on the VCR.

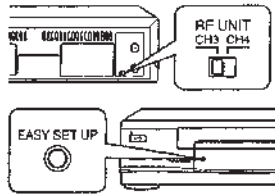

Getting Started


- 1 The LANGUAGE menu appears. Change the on-screen display language to Spanish (ESPAÑOL) or French (FRANÇAIS) if desired, and press OK. For details, see page 25.

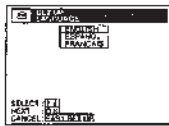


- 2 The CLOCK SET menu appears.
  - When the date setting menu appears, set the date and time, then press OK. For details, see page 27.
  - When the AUTO/MANUAL selection menu appears, select AUTO and press OK. For details, see page 30.



- 3 The TUNER PRESET menu appears. Set ANTENNA/CABLE to ANT and press OK. For details, see page 35.

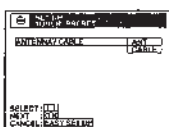

- 4 The AUTO PRESET starts.

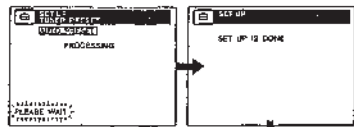

Normal display


continued

### Step 3: Hookups (continued)


#### Hookup 1: The VCR Plus+ system channel setup

- 1 Find the VCR Plus+ system Channel Listing in your program guide. For details, see page 40.
- 2 If the channels in the program guide are different from the channels that you actually use on your TV, set the channels that are different as follows. For details, see page 41.


- 1 Press MENU, then select SETTINGS and press OK.

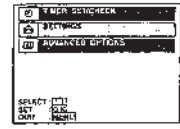

- 2 Select SET VCR Plus+ CHANNELS and press OK.

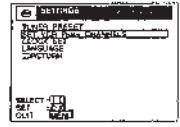

- 3 Enter the program guide channel, then the channel you use on your TV.

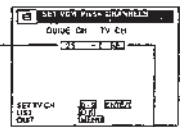

- 4 Press OK.

Program guide channel  
Your actual TV channel

- 5 Press MENU to exit the menu.

#### Automatic clock setting (SLV-679HF/679HF PX only)

Once you've set up the VCR, it automatically sets the clock the first time you turn off the VCR. After that, whenever you turn off the VCR, it checks the time and adjusts the clock, even for Daylight Saving Time. The VCR sets the clock by picking up a time signal provided by some TV channels.

If you want to use the timer to record right away, or if the channels in your area do not carry time signals, set the clock manually. For details, see page 26.

### Hookup 2

Pages 13 to 16

#### Cable box with many scrambled channels

##### Recommended use


Use this hookup if your cable system scrambles all or most channels.

##### What you can do with this hookup

- Record any channel by selecting the channel on the cable box

##### What you can't do

- Record with the cable box turned off
- Record one channel while watching another channel

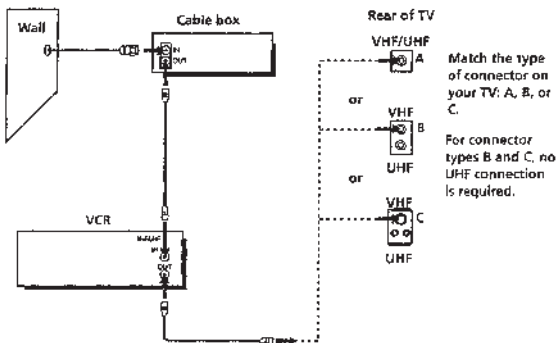


continued

Getting Started


### Step 3: Hookups (continued)

#### Hookup 2: VCR setup

- 1 Set the RF UNIT switch to CH3 or CH4, whichever channel is not used in your area. If both are used, set the switch to either channel. For details, see page 66. If you made A/V connections (page 8), you can skip this step.
- 2 Turn on your cable box.
- 3 Press EASY SET UP on the VCR.

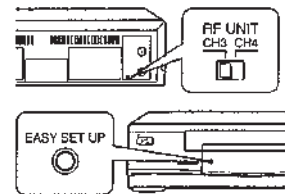


- 1 The LANGUAGE menu appears. Change the on-screen display language to Spanish (ESPAÑOL) or French (FRANÇAIS) if desired, and press OK. For details, see page 25.

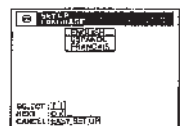


- 2 The CLOCK SET menu appears.
  - When the date setting menu appears, set the date and time, then press OK. For details, see page 27.
  - When the AUTO/MANUAL selection menu appears, select MANUAL and press OK. Then set the clock manually and press OK. For details, see page 27.

- 3 The TUNER PRESET menu appears. Set ANTENNA/CABLE to ANT and press OK. For details, see page 35.

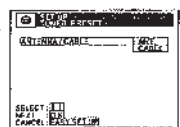



4 The AUTO PRESET starts.

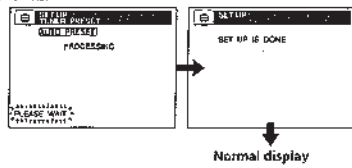


Getting Started

**Hookup 2: The VCR Plus+ system channel setup**

- 1 Find the VCR Plus+ system Channel Listing in your program guide. For details, see page 40.
- 2 Enter all the channels you want to record and the cable box output channel (usually 2, 3, or 4). For details, see page 41.


1 Press MENU, then select SETTINGS and press OK.

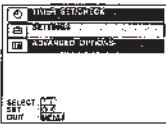

2 Select SET VCR Plus+ CHANNELS and press OK.



3 Enter the program guide channel, then the cable box output channel.

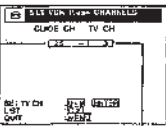

Program guide channel  
Cable box output channel

4 Press OK.

5 Press MENU to exit the menu.

continued

**Step 3: Hookups (continued)**

**Automatic clock setting (SLV-679HF/679HF PX only)**

To use the Auto Clock Set feature with this hookup, you need to manually select a channel that carries a time signal:

- 1 Tune the cable box to a channel that carries a time signal.
- 2 Select AUTO in the CLOCK SET menu to turn on the Auto Clock Set feature.
- 3 Turn off the VCR. It automatically sets the clock and adjusts for Daylight Saving Time by picking up the time signal.

If you want to use the timer to record right away, or if the channels in your area do not carry time signals, set the clock manually. For details, see page 26.

**Note**

- To use the Auto Clock Set feature, leave the cable box on.

**Hookup 3: Pages 17 to 19**

**No cable box, or cable box with only a few scrambled channels**

**Recommended use**

Use this hookup if you do not have a cable box. Also use this hookup if your cable system scrambles only a few channels.


**What you can do with this hookup**

- Record any unscrambled channel by selecting the channel on the VCR.

**What you can't do**

- Record scrambled channels that require a cable box

Getting Started

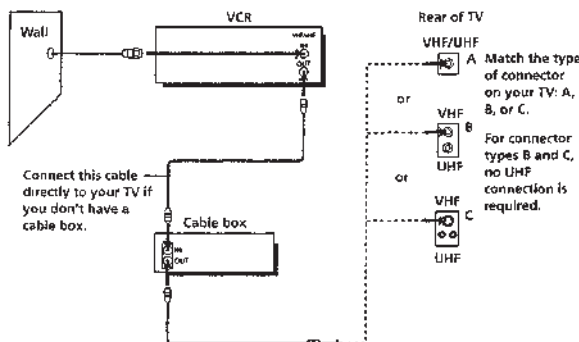


continued

**Step 3: Hookups (continued)**

**Hookup 3: VCR setup**

- 1 Set the RF UNIT switch to CH3 or CH4, whichever channel is not used in your area. If both are used, set the switch to either channel. For details, see page 68. If you made A/V connections (page 8), you can skip this step.




- 2 Press EASY SET UP on the VCR.

1 The LANGUAGE menu appears. Change the on-screen display language to Spanish (ESPAÑOL) or French (FRANÇAIS) if desired, and press OK. For details, see page 25.




- 2 The CLOCK SET menu appears.
  - When the date setting menu appears, set the date and time, then press OK. For details, see page 27.
  - When the AUTO/MANUAL selection menu appears, select AUTO and press OK. For details, see page 30.

3 The TUNER PRESET menu appears. Set ANTENNA/CABLE to CABLE and press OK. For details, see page 35.



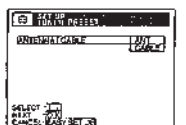


4 The AUTO PRESET starts.

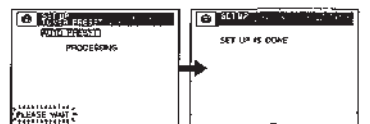

Normal display

### Hookup 3: The VCR Plus+ system channel setup

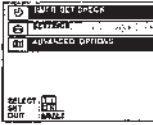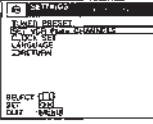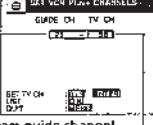- Find the VCR Plus+ system Channel Listing in your program guide. For details, see page 40.
- If the channels in the program guide are different from the channels that you actually use on your TV, set the channels that are different as follows. For details, see page 41.
  - Press MENU, then select SETTINGS and press OK.
 
  - Select SET VCR Plus+ CHANNELS and press OK.
 
  - Enter the program guide channel, then the channel you use on your TV.
 
  - Press OK.
  - Press MENU to exit the menu.

Program guide channel  
Your actual TV channel

#### Automatic clock setting (SLV-679HF/679HF PX only)

Once you've set up the VCR, it automatically sets the clock the first time you turn off the VCR. After that, whenever you turn off the VCR, it checks the time and adjusts the clock, even for Daylight Saving Time. The VCR sets the clock by picking up a time signal provided by some TV channels.

If you want to use the timer to record right away, or if the channels in your area do not carry time signals, set the clock manually. For details, see page 26.

continued

### Step 3: Hookups (continued)

#### Hookup 4

Pages 20 to 24

#### Cable box with only a few scrambled channels, using an A/B switch

##### Recommended use


By using an A/B switch (not supplied), this hookup allows you to record both scrambled and unscrambled channels conveniently.

##### What you can do with this hookup


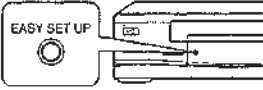
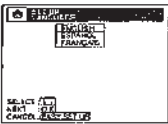
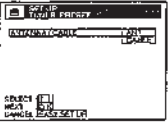
- Record any unscrambled channel by selecting the channel directly on the VCR (the A/B switch is set to A)
- Record any scrambled channel by selecting the channel on the cable box (the A/B switch is set to B)

##### What you can't do

- Record one scrambled channel while watching another channel (the A/B switch is set to B)

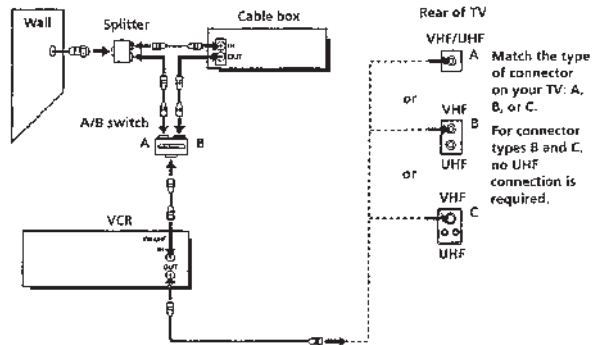
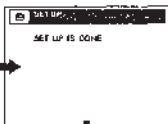


### Hookup 4: VCR setup

- Set the RF UNIT switch to CH3 or CH4, whichever channel is not used in your area. If both are used, set the switch to either channel. For details, see page 68. If you made A/V connections (page 8), you can skip this step.
 
- Set the A/B switch to "A."
- Press EASY SET UP on the VCR.
 
  - The LANGUAGE menu appears. Change the on-screen display language to Spanish (ESPAÑOL) or French (FRANÇAIS) if desired, and press OK. For details, see page 25.
 
  - The CLOCK SET menu appears.
    - When the date setting menu appears, set the date and time, then press OK. For details, see page 27.
    - When the AUTO/MANUAL selection menu appears, select AUTO and press OK. For details, see page 30.
  - The TUNER PRESET menu appears. Set ANTENNA/CABLE to CABLE and press OK. For details, see page 35.
 

continued

### Step 3: Hookups (continued)

- The AUTO-PRESET starts.
 


Normal display

- Preset the cable box output channel (usually 2, 3 or 4). For details, see page 36.
  - Press MENU, then select SETTINGS and press OK.
 
  - Select TUNER PRESET and press OK.
 
  - Enter the cable box output channel.
 
  - Set MANUAL SET to ADD and press OK.
 
  - Press MENU to exit the menu.

### Hookup 4: The VCR Plus+ system channel setup

- 1 Find the VCR Plus+ system Channel Listing in your program guide. For details, see page 40.
- 2 To set the program guide channels for unscrambled channels, if the channels in the program guide are different from the channels that you actually use on your TV, set the channels that are different as follows. For details, see page 41.


• Press MENU, then select SETTINGS and press OK.

• Select SET VCR Plus+ CHANNELS and press OK.

• Enter the program guide channel, then the channel you use on your TV.

• Press OK.

• Press MENU to exit the menu.

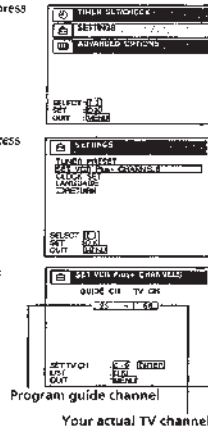

Program guide channel  
Your actual TV channel

Getting Started

continued

### Step 3: Hookups (continued)

- 3 To set the program guide channels for scrambled channels, enter all the scrambled channels you want to record and the cable box output channel (usually 2, 3, or 4). For details, see page 41.


• Press MENU, then select SETTINGS and press OK.

• Select SET VCR Plus+ CHANNELS and press OK.

• Enter the program guide channel, then the cable box output channel.

• Press OK.

• Press MENU to exit the menu.

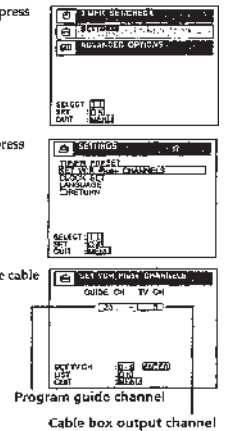

Program guide channel  
Cable box output channel

#### Automatic clock setting (SLV-679HF/679HF PX only)

Once you've set up the VCR, it automatically sets the clock the first time you turn off the VCR. After that, whenever you turn off the VCR, it checks the time and adjusts the clock, even for Daylight Saving Time. The VCR sets the clock by picking up a time signal provided by some TV channels.


If you want to use the timer to record right away, or if the channels in your area do not carry time signals, set the clock manually. For details, see page 26.

#### Note

- To use the Auto Clock Set feature, set the A/B switch to "A."

## Selecting a language

You can change the on-screen display language.

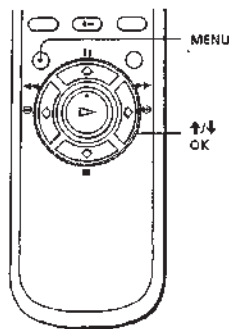

Getting Started

- 1 Press MENU, then press  $\uparrow/\downarrow$  to highlight SETTINGS and press OK. When using the EASY SET UP procedure, skip steps 1 and 2.
- 2 Press  $\uparrow/\downarrow$  to highlight LANGUAGE, then press OK.
- 3 Press  $\uparrow/\downarrow$  to highlight ENGLISH, ESPAÑOL, or FRANÇAIS, then press OK.
- 4 Press MENU to exit the menu.

#### Tip

- If you want to return to the previous menu, highlight RETURN and press OK.

## Setting the clock

Set the time and date to use the timer feature for recording programs.

#### SLV-679HF/679HF PX only


You can set the clock automatically (page 29).

#### Using Manual Clock Set


Set the time and date manually.

#### Before you start...

- Turn on the VCR and the TV.
- Set the TV to the VCR channel (channel 3 or 4). If your TV is connected to the VCR using A/V connections, set the TV to video input.
- Press TV/VIDEO to display the VIDEO indicator in the VCR's display window.

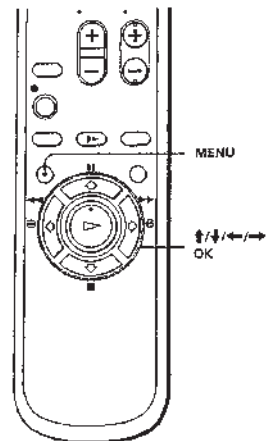


- 1 Press MENU, then press  $\uparrow/\downarrow$  to highlight SETTINGS and press OK. When using the EASY SET UP procedure, skip steps 1 and 2.

**2**  Press  $\uparrow/\downarrow$  to highlight **CLOCK SET**, then press **OK**.

**3** **SLV-662HF:**  
The date setting menu appears. Go to step 4.




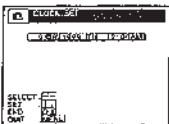
**SLV-679HF/679HF PX:**  
The **AUTO/MANUAL** selection menu appears. Press  $\uparrow/\downarrow$  to highlight **MANUAL**, then press **OK**.

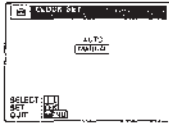

**4**  Press  $\uparrow/\downarrow$  to set the month.




**5**  Press  $\rightarrow$  to highlight the day and press  $\uparrow/\downarrow$  to set the day.  
The day of the week is set automatically.



continued

**Setting the clock (continued)**

**6** Set the year, hour, and minutes in the same way as the day.

**7**  Press **OK** to start the clock.

**Tip**  
• If you want to return to the previous menu, highlight **RETURN** and press **OK**.


**Using the Auto Clock Set feature (SLV-679HF/679HF PX only)**


Some TV and cable channels transmit time signals with their broadcasts. Your VCR can pick up this time signal to automatically set the clock.


The Auto Clock Set feature works only if a channel in your area is broadcasting a time signal. If broadcasters in your area are not yet sending time signals, set the time manually (page 26).


**Before you start...**

- Turn on the VCR and the TV.
- Set the TV to the VCR channel (channel 3 or 4). If your TV is connected to the VCR using A/V connections, set the TV to video input.
- Press **TV/VIDEO** to display the **VIDEO** indicator in the VCR's display window.
- Press **INPUT SELECT** so that a channel number appears in the VCR's display window.

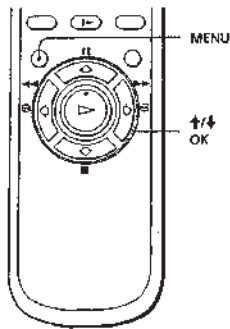

**1**  Press **MENU**, then press  $\uparrow/\downarrow$  to highlight **SETTINGS** and press **OK**.  
When using the **EASY SET UP** procedure, skip steps 1 and 2.

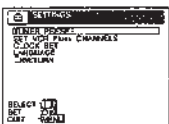


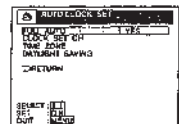
**2**  Press  $\uparrow/\downarrow$  to highlight **CLOCK SET**, then press **OK**.




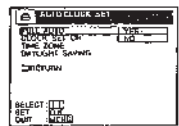
continued


**Setting the clock (continued)**


**3**  Press  $\uparrow/\downarrow$  to highlight **AUTO**, then press **OK**.



**4**  Press  $\uparrow/\downarrow$  to highlight **FULL AUTO**, then press **OK**.



**5**  Press  $\uparrow/\downarrow$  to highlight **YES**, then press **OK**.

**6**  Press **MENU** to exit the menu.


**7** To activate the Auto Clock Set function, turn off the VCR.  
The VCR automatically sets the clock by searching for a channel that carries a time signal in your area. If so, set the clock manually.  
If your clock is set to the wrong time zone or Daylight Saving Time, you can adjust these settings without turning off the Auto Clock Set feature (page 31).

**Tip**  
• If you want to return to the previous menu, highlight **RETURN** and press **OK**.

**Notes**


- The clock cannot be set automatically if you don't receive a channel that carries a time signal in your area. If so, set the clock manually.
- If there are only a few channels in your area that carry time signals, setting the clock automatically may take up to about 30 minutes. If nothing happens even after you wait about 30 minutes, set the clock manually.

If the clock is not activated  
(SLV-679HF/679HF PX only)

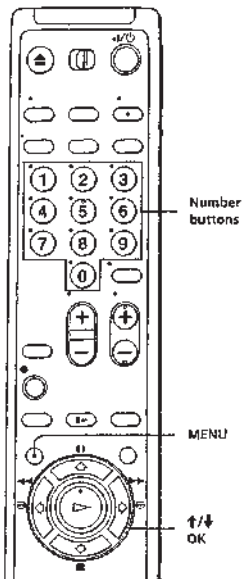

Getting Started


- 1 Follow steps 1 to 4 in "Using the Auto Clock Set feature."  
The AUTO CLOCK SET menu is displayed.

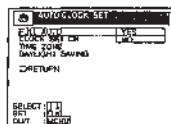

continued

Setting the clock (continued)


- 2 Press  $\uparrow/\downarrow$  to highlight NO for FULL AUTO and press OK.

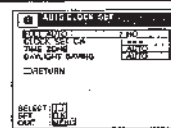


- 3 Press  $\uparrow/\downarrow$  to highlight the item you want to set and press OK. Then press  $\uparrow/\downarrow$  to make the setting and press OK.



- For **CLOCK SET CH**  
Leave the setting to "----" to have the VCR automatically search for a channel that carries a time signal.  
Press the number buttons to select a channel that carries a time signal. Use this option if you know of a channel that carries a time signal. Most PBS member stations broadcast a time signal. For the fastest response, select your local PBS station.

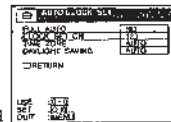

- For **TIME ZONE**  
Select the time zone of your area, or select AUTO to have the VCR automatically set your time zone.  
The options are:  
AUTO ↔ ATLANTIC ↔  
EASTERN ↔ CENTRAL ↔  
MOUNTAIN ↔ PACIFIC ↔  
ALASKA ↔ HAWAII ↔ AUTO

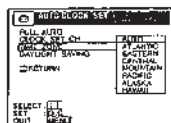

- For **DAYLIGHT SAVING**  
Select ON or OFF (standard time), or AUTO to have the VCR automatically set the daylight saving time.



- 4 Press MENU to exit the menu.


- 5 To activate the Auto Clock Set function, turn off the VCR.

Tip  
• If you want to return to the previous menu, highlight RETURN and press OK.

Getting Started

Presetting channels

This VCR is capable of receiving VHF channels 2 to 13, UHF channels 14 to 69 and unscrambled CATV channels 1 to 125. First, we recommend that you preset the receivable channels in your area using automatic presetting. Then, if there are any unwanted channels, disable them manually. If you have decided which channels you wish to preset, set them directly using manual presetting.

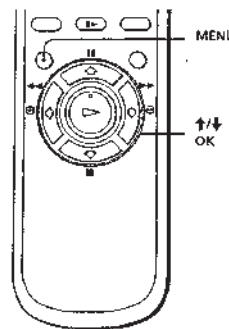

Before you start...


- Turn on the VCR and the TV.
- Set the TV to the VCR channel (channel 3 or 4). If your TV is connected to the VCR using A/V connections, set the TV to video input.
- Press TV/VIDFO to display the VIDEO indicator in the VCR's display window.

Presetting all receivable channels automatically

- 1 Press MENU, then press  $\uparrow/\downarrow$  to highlight SETTINGS and press OK.  
When using the EASY SET UP procedure, skip steps 1 and 2.




- 2 Press  $\uparrow/\downarrow$  to highlight TUNER PRESET, then press OK.

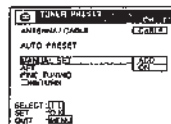


3 Press  $\uparrow/\downarrow$  to highlight ANTENNA/CABLE, then press OK.



4 • To preset cable TV channels:  
Press  $\uparrow/\downarrow$  to set ANTENNA/CABLE to CABLE, then press OK.

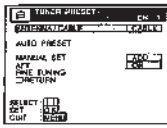


• To preset VHF and UHF channels:  
Press  $\uparrow/\downarrow$  to set ANTENNA/CABLE to ANT, then press OK.

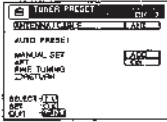

5 Press  $\uparrow/\downarrow$  to highlight AUTO PRESET, then press OK.




All receivable channels are preset in numerical sequence. When no more receivable channels can be found, presetting stops and the picture from the lowest numbered channel is displayed on the TV screen.

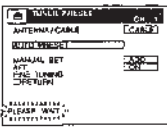

**Tips**

• When receiving a VHF, UHF, or CATV channel, the display changes as follows each time you press DISPLAY.

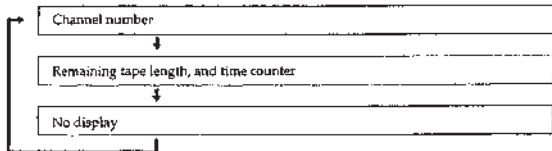


• If you want to return to the previous menu, highlight RETURN and press OK.


continued

**Presetting channels (continued)**


**Presetting/disabling channels manually**

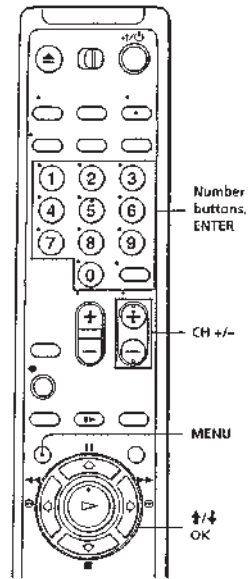


1 Press MENU, then press  $\uparrow/\downarrow$  to highlight SETTINGS and press OK.

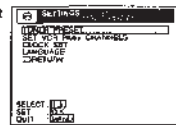


2 Press  $\uparrow/\downarrow$  to highlight TUNER PRESET, then press OK.

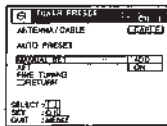

3 • To preset a channel:  
1 Press the number buttons to enter the channel number, then press ENTER.  
2 Press OK.  
3 Press  $\uparrow/\downarrow$  to set MANUAL SET to ADD, then press OK.

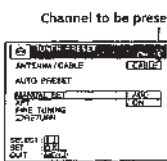

• To disable a channel:  
1 Press CH +/- to select the channel number.  
2 Press OK.  
3 Press  $\uparrow/\downarrow$  to set MANUAL SET to ERASE, then press OK.

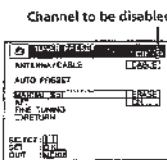

4 Repeat step 3 to preset or disable channels as required, then press MENU.

**Tip**


• If you want to return to the previous menu, highlight RETURN and press OK.

continued


**Presetting channels (continued)**

**If the picture is not clear**


Normally, the Auto Fine Tuning (AFT) function automatically tunes in channels clearly. If, however, the picture of a channel is not clear, you can also use the manual tuning function.

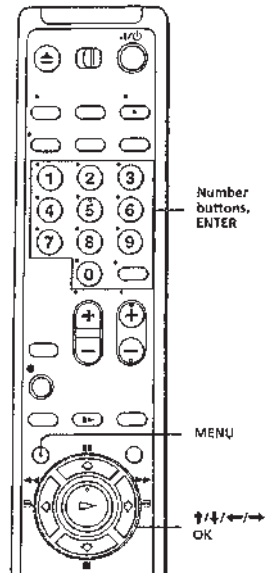


1 Press MENU, then press  $\uparrow/\downarrow$  to highlight SETTINGS and press OK.

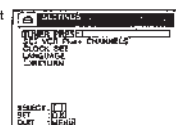


**2** Press  $\uparrow/\downarrow$  to highlight TUNER PRESET, then press OK.

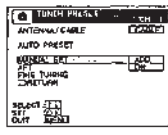


**3** Press the number buttons to select the channel you want to fine-tune, then press ENTER.

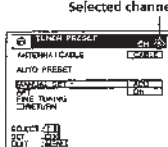


**4** Press  $\uparrow/\downarrow$  to highlight FINE TUNING, then press OK. The fine tuning meter appears.

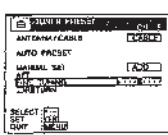

**5** Press  $\leftarrow/\rightarrow$  to adjust to a clearer picture, then press OK. Note that the AFT setting switches to OFF.

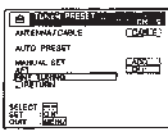

**6** Press MENU to exit the menu.



Getting Started


- Tips**
- To select the channel in step 3 above, you can also use the CH +/- buttons. In this case, you don't need to press ENTER.
  - If you want to return to the previous menu, highlight RETURN and press OK.
- Note**
- When adjusting FINE TUNING, the menu may become difficult to read due to interference from the picture being received.

## Setting up the VCR Plus+ system

**How the VCR Plus+ system works**

Whenever you want to record a TV program, all you need to do is look up the "PlusCode" number, a number assigned to each program published in the TV section of most newspapers, cable TV listings, and even TV GUIDE magazine. Then, just enter the PlusCode number of the program you want and the VCR is automatically programmed to record that show. It's that simple.

**Example of "PlusCode"**

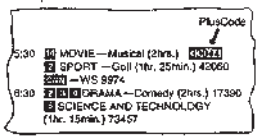

**How to set up your VCR**

Setting up your VCR involves coordinating the TV channel number (the number you turn on your TV or VCR to watch a program) with the guide channel (the number that's assigned to that channel in your program guide).

**Example of "Channel Line-up Chart"**


CABLE CH	CABLE TV	VCR Plus+ GUIDE CH
16	AT&T American Movie Classics	35
17	AT&T Bravo (program guide only)	54
20	AT&T Cable News Network	42
21	AT&T C-SPAN	28
22	AT&T The Disney Channel	33
25	AT&T The Discovery Channel	37
34	AT&T ESPN	34
5	AT&T The Family Channel	47
3	HBO Home Box Office	33
27	UPN Lifetime	46
29	UPN Discovery	45
30	UPN Home Television	48
31	UPN Nickelodeon	38
36	ESPN Sports Channel	59
39	ESPN Sports Channel America	70
45	ESPN Showtime	41
17	HBO TBS SuperStation	43
44	HBO The Movie Channel	58
49	HBO The Nashville Network	49
50	UPN Turner Network Television	52
51	ESPN USA Network	44

To find the guide channel numbers, look at the "Channel Line-up Chart" in the program guide for your area that features VCR PlusCodes. It usually looks like the example to the right.


To set the guide channels, use the Channel Line-up Chart to check that the guide channel numbers match the TV channel your VCR receives. For example, if HBO is listed in the Channel Line-up Chart on channel 33, and your VCR receives HBO on channel 5, you need to coordinate these numbers using the following procedure. If the guide and TV channel numbers are the same, you can skip this procedure.

## Setting up the VCR Plus+ system (continued)


**2** Press  $\uparrow/\downarrow$  to highlight SET VCR Plus+ CHANNELS, then press OK.

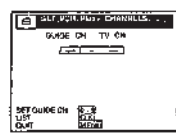


**3** Enter the guide channel number assigned in the program guide and press ENTER.

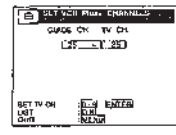


**4** Enter the actual number on your TV (and VCR) and press ENTER.

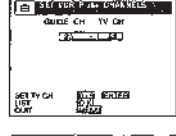


**5** Repeat steps 3 and 4 for each channel number that does not match.



- If you made Hookup 2: Enter the cable box output channel (usually 2, 3 or 4) and press ENTER.
- If you made Hookup 4: Enter the actual number on your TV (and VCR) for an unscrambled channel, and press ENTER. For a scrambled channel, enter the cable box output channel (usually 2, 3, or 4) and press ENTER.

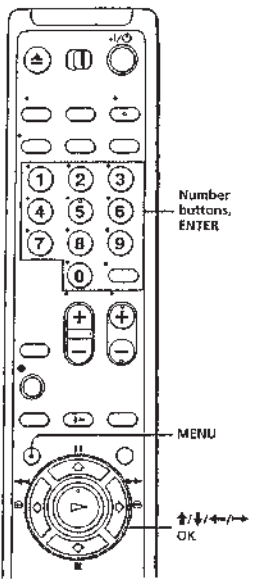


**1** Press MENU, then press  $\uparrow/\downarrow$  to highlight SETTINGS and press OK.

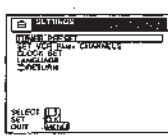

Getting Started

continued


## Playing a tape

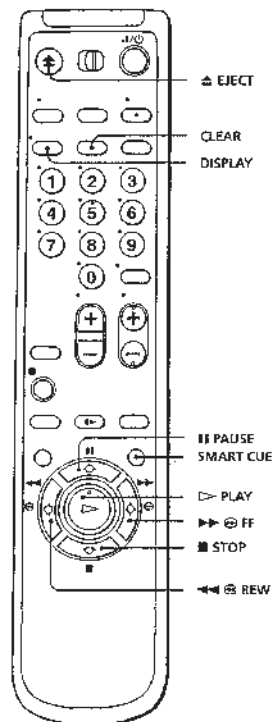

1 Turn on your TV and set it to the video channel.



6 When you have set all channels, press OK to confirm your channel settings. To return to the previous page, press ←. To go to the next page, press →.

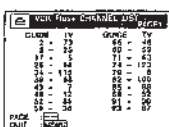

Getting Started




7 After all settings are complete, press MENU to exit the menu.

**Tip**

- If you want to return to the previous menu, highlight RETURN and press OK.



2 Insert a tape. The VCR turns on and starts playing automatically if you insert a tape with its safety tab removed.



3 Press ▷ PLAY. When the tape reaches the end, it will rewind automatically.

**Additional tasks**

To	Press
Stop play	■ STOP
Pause play	PAUSE
Resume play after pause	PAUSE or ▷ PLAY
Fast-forward the tape	▶▶ Ⓜ FF during stop
Rewind the tape	◀◀ Ⓜ REW during stop
Eject the tape	⏏ EJECT

**To skip playback**

You can skip a portion of playback you don't want to watch such as a commercial and restart playback by pressing a single button.

- 1 Press SMART CUE during playback of the scene you want to skip. The VCR starts searching.
- 2 Press SMART CUE again when you find the scene you want to watch. The VCR stops searching, rewinds a few seconds, then resumes normal playback.

If you press and hold SMART CUE while the VCR is skip searching, the VCR will stop searching, and continue rewinding until you release SMART CUE.

continued

### Playing a tape (continued)

**To use the time counter**

At the point on the tape that you want to find later, press CLEAR. The counter in the display window resets to "0:00:00." Search for the point afterwards by referring to the counter.




To display the counter on the TV screen, press DISPLAY.

**Notes**

- Tapes recorded in the LP mode on other VCRs can be played back on this VCR but the picture quality cannot be guaranteed.
- While setting the menu on the TV screen, you cannot use ▷ PLAY, || PAUSE, ▶▶ Ⓜ FF, ◀◀ Ⓜ REW, or ■ STOP buttons.
- The counter resets to "0:00:00" whenever a tape is reinserted.
- The counter stops counting when it comes to a portion with no recording.



## Recording TV programs

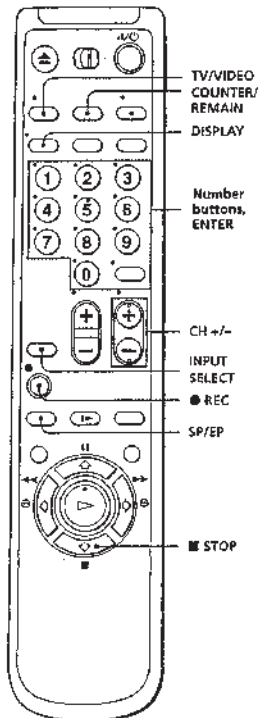





- 1 Turn on your TV and set it to the video channel.  
To record from a cable box, turn it on.
- 2 Insert a tape with its safety tab in place.

continued

Basic Operations 47

## Recording TV programs (continued)


- 3 **INPUT SELECT** Press **INPUT SELECT** until a channel number appears in the display window.
 
- 4 **CH +/-** Press **CH +/-** to select the channel you want to record.
 
- 5 **SP/EP** Press **SP/EP** to select the tape speed, SP or EP. EP (Extended Play) provides recording time three times as long as SP (Standard Play), however, SP produces better picture and audio quality.
 
- 6 **REC** Press **REC** to start recording. The recording indicator lights up red in the display window.
 

To stop recording  
Press **STOP**.

48 | Basic Operations

### To check the remaining tape length

Press **DISPLAY**. The remaining tape length and the time counter appear on the TV screen. Each time you press **COUNTER/REMAIN**, the time counter and remaining tape length with the  $\odot$  indicator appear alternately in the display window.

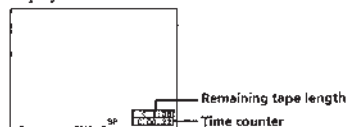

To check the remaining time of a T-140 or T-180 tape, set **TAPE SELECT** in the **ADVANCED OPTIONS** menu to 180. (For details, see page 65.)

### To watch another TV program while recording

- 1 Press **TV/VIDEO** to turn off the **VIDEO** indicator in the display window.
- 2 If the TV is connected to the VCR's **LINE OUT** jacks, set the TV to TV input; if not, skip this step.
- 3 Select another channel on the TV.

### To save a recording

To prevent accidental erasure, break off the safety tab as illustrated. To record on a tape again, cover the tab hole with adhesive tape.



#### Tips

- To select a channel, you can use the number buttons on the remote commander. Enter the channel number, then press **ENTER**.
- You can select a video source from the **LINE-1 IN** jacks using the **INPUT SELECT** button.
- The display appears on the TV screen indicating information about the tape, but the information won't be recorded on the tape.
- If you don't want to watch TV while recording, you can turn off the TV. When using a cable box, make sure to leave it on.

#### Notes

- The remaining tape length may not be indicated accurately for short tapes such as T-20 or T-30, or tapes recorded in the LP mode.
- The display does not appear during still (pause) mode or slow-motion playback.
- It may take up to one minute for the VCR to calculate and display the remaining tape length after you press **DISPLAY**.


Basic Operations 49

## Recording TV programs using the VCR Plus+ system

Just enter the PlusCode number listed in the TV program guide. The date, time and channel number of that program are set automatically. You can preset up to eight programs at a time.

### Before you start...


- Check that the VCR clock is set to the correct time.
- Turn on your TV and set it to the video channel. When using a cable box, turn it on.
- Insert a tape with its safety tab in place. Make sure the tape is longer than the total recording time.

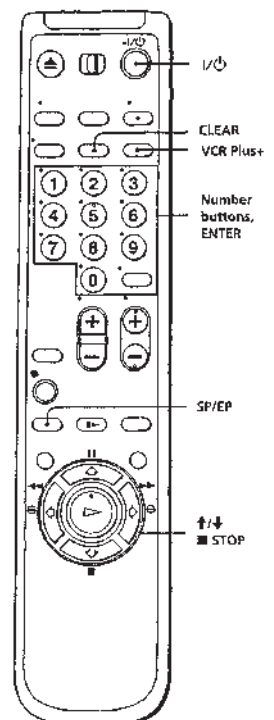

- 1 **VCR Plus+** Press **VCR Plus+**.






50 | Basic Operations

- 

Press the number buttons to enter the PlusCode number.

If you make a mistake, press CLEAR and re-enter the correct number.

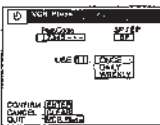

- Press SP/EP to select the tape speed, SP or EP.

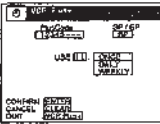
- 


Press  $\uparrow/\downarrow$  to highlight ONCE, DAILY, or WEEKLY, then press ENTER:

To record	Select
Only once	ONCE
Everyday Monday to Friday	DAILY
Once a week	WEEKLY

The date, start and stop time, channel number and tape speed appear on the TV screen. If the information is not correct, press CLEAR to cancel the setting.

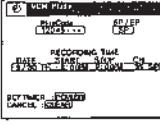
- To enter another setting, repeat steps 1 to 4.
- Press I/O to turn off the VCR.

The  $\odot$  indicator appears in the display window and the VCR stands by for recording. When using a cable box, leave it on.



**To stop recording**  
To stop the VCR while recording, press ■ STOP.

continued

Basic Operations

### Recording TV programs using the VCR Plus+ system (continued)

#### To use the VCR after setting the timer

To use the VCR before a timer recording begins, just press I/O. The  $\odot$  indicator disappears from the display window and the VCR switches on. Remember to press I/O to reset the VCR to the timer recording standby mode after using the VCR.

You can also do the following tasks while the VCR is recording:

- Reset the counter.
- Display tape information on the TV screen.
- Check the timer settings.
- Watch another TV program.

#### To lock the VCR after setting the timer (Child Lock)

While the VCR turns on, hold down I/O POWER on the VCR until the  $\odot$  indicator appears in the display window. The VCR turns off and the  $\odot$  indicator remains lit. The VCR will not work except for timer recording.

To unlock the VCR, hold down I/O POWER on the VCR until the  $\odot$  indicator disappears from the display window. The VCR is unlocked and turns on.

To stop timer recording while the VCR is locked, press ■ STOP. The recording stops and the VCR is unlocked.

#### Tips

- To cancel the VCR Plus+ system recording, press VCR Plus+ before pressing ENTER in step 4 above.
- When you are recording a program in the SP mode and the remaining tape becomes shorter than the recording time, the tape speed is automatically changed to the EP mode. Note that some noises will appear on the picture when the tape speed is changed. If you want to keep the tape speed, set AUTO TAPE SPEED to OFF in the ADVANCED OPTIONS menu (page 65).

#### Notes


- If the VCR does not accept the PlusCode number, this means that:
  - the PlusCode number is incorrect.
  - ONCE, DAILY, or WEEKLY was selected incorrectly. You cannot select DAILY or WEEKLY for a program that airs more than seven days ahead.
- The VCR will be unlocked when:
  - you stop timer recording by pressing ■ STOP
  - you insert a tape
  - the AC power cord is disconnected or power supply stops.

## Setting the timer manually


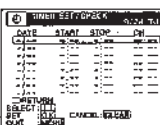
If the VCR Plus+ system is not available in your area, follow the instructions below to set the timer to record programs.

#### Before you start...

- Check that the VCR clock is set to the correct time.
- Turn on your TV and set it to the video channel. When using a cable box, turn it on.
- Insert a tape with its safety tab in place. Make sure the tape is longer than the total recording time.

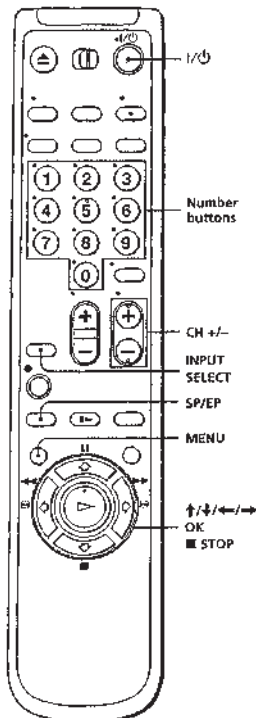


- Press MENU, then press  $\uparrow/\downarrow$  to highlight TIMER SET/CHECK and press OK.

continued

Basic Operations

### Setting the timer manually (continued)

- 



Press  $\uparrow/\downarrow$  to highlight the line that is to be set, then press OK.
- Set the date, start and stop time, channel number and tape speed:

  - 1 Press  $\uparrow/\downarrow$  to set each item.
  - 2 Press  $\rightarrow$  to highlight and set each item in turn.


To correct a setting, press  $\leftarrow$  to return to that setting and reset.

To record the same program every day or the same day every week, press  $\downarrow$  while the date is highlighting. For details, see "Daily/weekly recording" below.

To record from a source connected to the LINE-1 IN jacks, press INPUT SELECT to display "L1" in the "CH" position.

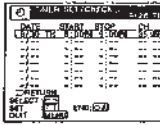

- 

Press OK to confirm the setting.

To enter another setting, highlight the next line and repeat step 3.
- 

Press MENU to exit the menu.
- Press I/O to turn off the VCR.

The  $\odot$  indicator appears in the display window and the VCR stands by for recording. When using a cable box, leave it on.



#### To stop recording

To stop the VCR while recording, press ■ STOP.

### Daily/weekly recording

In step 3 above, press  $\downarrow$  to select the recording pattern. Each time you press  $\downarrow$ , the indication changes as shown below. Press  $\uparrow$  to change the indication in reverse order.

the current date  $\rightarrow$  SU-SA  $\rightarrow$  MO-SA  $\rightarrow$  MO-FR  $\rightarrow$  EVERY SA  $\rightarrow$  .....  $\rightarrow$   
 EVERY MO  $\rightarrow$  EVERY SU  $\rightarrow$  1 month later  $\rightarrow$  (dates count down)  $\rightarrow$  the current date

### To use the VCR after setting the timer

To use the VCR before a timer recording begins, just press  $\text{I/O}$ . The  $\odot$  indicator disappears from the display window and the VCR switches on. Remember to press  $\text{I/O}$  to reset the VCR to the timer recording standby mode after using the VCR.

You can also do the following tasks while the VCR is recording:

- Reset the counter.
- Display tape information on the TV screen.
- Check the timer settings.
- Watch another TV program.

### To lock the VCR after setting the timer (Child Lock)

While the VCR turns on, hold down  $\text{I/O}$  POWER on the VCR until the  $\odot$  indicator appears in the display window. The VCR turns off and the  $\odot$  indicator remains lit. The VCR will not work except for timer recording.

To unlock the VCR, hold down  $\text{I/O}$  POWER on the VCR until the  $\odot$  indicator disappears from the display window. The VCR is unlocked and turns on.



To stop timer recording while the VCR is locked, press  $\blacksquare$  STOP. The recording stops and the VCR is unlocked.

### Tips

- To set the channel, you can also use the CH +/- or number buttons.
  - To set the tape speed, you can also use the SP/EP button.
  - When you are recording a program in the SP mode and the remaining tape becomes shorter than the recording time, the tape speed is automatically changed to the EP mode. Note that some noises will appear on the picture when the tape speed is changed. If you want to keep the tape speed, set AUTO TAPE SPEED to OFF in the ADVANCED OPTIONS menu (page 65).
  - If you want to return to the previous menu and continue with other operations after setting the timer, press  $\downarrow$  to highlight RETURN, then press OK. The display returns to the MENU screen.
- If you are finished using the VCR, turn off the power before the timer recording starts.

### Additional Operations

## Playing/searching at various speeds

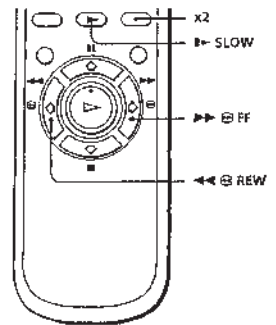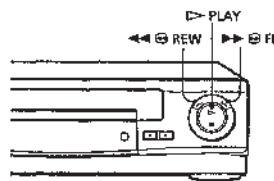

Playback options	Operation
View the picture during fast-forward or rewind	During fast-forward, hold down $\text{FF}$ . During rewind, hold down $\text{REW}$ .
Play at high speed	<ul style="list-style-type: none"> <li>• During playback, press <math>\text{FF}</math> or <math>\text{REW}</math> on the remote commander.</li> <li>• During playback, hold down <math>\text{FF}</math> or <math>\text{REW}</math>. When you release the button, normal playback resumes.</li> </ul>
Play at twice the normal speed	During playback, press x2.
Play in slow motion	During playback or pause, press $\text{SLOW}$ .
Play frame by frame	During pause, press $\text{FF}$ or $\text{REW}$ on the remote commander. Hold down the button to play one frame each second.
Rewind and start play	During stop, press $\text{PLAY}$ on the VCR while holding down $\text{REW}$ on the VCR.

To resume normal playback  
 Press  $\text{PLAY}$ .

### Tip


- Adjust the picture using the TRACKING +/- buttons if:
    - Streaks appear while playing in slow motion.
    - The picture shakes while pausing.
- To set tracking to the center position, press both buttons (+/-) at the same time.

### Notes


- The sound is muted during these operations.
- Tapes recorded in the LP mode on other VCRs can be played back on this VCR but the picture quality cannot be guaranteed.
- The picture may have snow when playing at high speed in reverse.

## Setting the recording duration time


After starting recording in the normal way, you can have the VCR stop recording automatically after a specified duration.

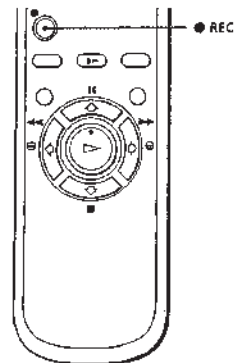

- 1 While recording, press  $\text{REC}$ . The  $\odot$  indicator appears in the display window.



- 2 Press  $\text{REC}$  repeatedly to set the duration. Each press advances the time in increments of 30 minutes.



The tape counter decreases minute by minute to 0:00, then the VCR stops recording and turns off automatically.

### To extend the duration

Press  $\text{REC}$  repeatedly to set a new duration.

### To cancel the duration

Press  $\text{REC}$  repeatedly until  $\odot$  indicator disappears and the VCR returns to normal recording mode.

### To stop while recording

Press  $\blacksquare$  STOP.


### Note

- You cannot display the current tape time in the display window when setting the recording duration.

## Checking/ changing/ canceling timer settings

### Before you start...

- Turn on your TV and set it to the video channel.

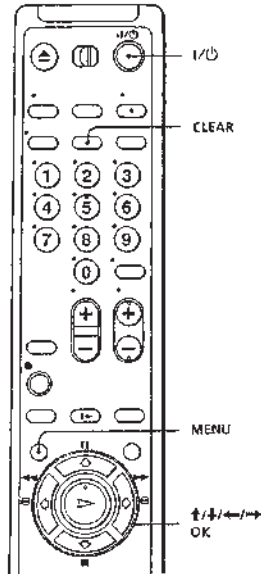


- 1 Press I/O to turn on the VCR.
- 2 Press MENU, then press ↑/↓ to highlight TIMER SET/CHECK and press OK.
  - If you want to change a setting, go on to the next step.
  - If you do not need to change the settings, press MENU, then turn off the VCR to return to recording standby.

continued

## Checking/changing/canceling timer settings (continued)


- 3 Press ↑/↓ to highlight the setting you want to change or cancel.
  - To change the setting, press OK and press ←/→ to highlight the item you want to change, then press ↑/↓ to reset it.
  - To cancel the setting, press CLEAR.
- 4 Press OK.
- 5 Press MENU to exit the menu.

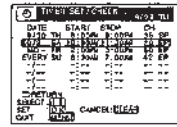

If any timer settings remain, turn off the VCR to return to recording standby.

### When the timer settings overlap

The program that starts first has priority and the second program starts recording only after the first program has finished. If the programs start at the same time, the program listed first in the menu has priority.



## Recording stereo and bilingual programs

### Recording stereo programs

This VCR automatically receives and records stereo programs. When a stereo program is received, the STEREO indicator lights up. If there is noise in the stereo program, set AUTO STEREO in the ADVANCED OPTIONS menu to OFF. The sound will be recorded in monaural (on both hi-fi and normal audio tracks) but with less noise. For details, see page 64.

### Recording bilingual programs

Normally, this VCR records only the main sound. When a SAP (Second Audio Program) is received, the SAP indicator lights up. To record only SAP sound, set TUNER AUDIO in the ADVANCED OPTIONS menu to SAP. For details, see page 64.

### Selecting the sound during playback

Press AUDIO MONITOR to select the sound you want. (The sound being recorded will not change.)


To listen to	On-screen display	Display window
Stereo	STEREO	STEREO
Left channel	L	STEREO
Right channel	R	STEREO
Monaural sound on the normal audio track	No indicator	No indicator

continued

## Recording stereo and bilingual programs (continued)

### How sound is recorded on a video tape

The VCR records sound onto two separate tracks. Hi-fi audio is recorded onto the main track along with the picture. Monaural sound is recorded onto the normal audio track along the edge of the tape.





### Notes

- To play a tape in stereo, you must use the A/V connections.
- When you play a tape recorded in monaural, the sound is heard in monaural regardless of the AUDIO MONITOR setting.

## Adjusting the picture

### Adjusting the tracking

Although the VCR automatically adjusts the tracking when playing a tape (the  indicator flashes in the display window, then goes off), distortion may occur if the tape was recorded in poor condition. In this case, manually adjust the tracking.

Press TRACKING +/- to display the tracking meter. The distortion should disappear as you press one of the two buttons (the  indicator lights up). To resume automatic tracking adjustment, eject the tape and reinsert it.



Tracking meter

### About the Adaptive Picture Control (APC) function

The Adaptive Picture Control (APC) function automatically improves recording and playback quality by adjusting the VCR to the condition of the video heads and tape. To maintain better picture quality, we recommend that you set APC to ON in the ADVANCED OPTIONS menu (with the APC indicator in the display window lit). For details, see page 64.




#### APC playback

The APC function automatically works on all types of tapes, including rental tapes and tapes that were not recorded with APC.

#### APC recording

Whenever you insert a tape and first start recording, the VCR adjusts to the tape using the APC function (the APC indicator flashes rapidly). This adjustment is retained until the tape is ejected.

#### Notes

- Auto tracking adjustment cannot be guaranteed to work with tapes recorded in LP mode on other VCRs.
- The APC function does not work if the tape speed is automatically changed from the SP to EP mode during a timer recording when AUTO TAPE SPEED is set to ON in the ADVANCED OPTIONS menu, unless the tape has been recorded in the EP mode with the APC function.
- There is a delay of about 1m seconds before the VCR actually starts recording while the VCR analyzes the tape. To avoid the delay, first set the VCR to recording pause (the APC indicator flashes slowly) and press  REC to have the VCR analyze the tape (the APC indicator flashes rapidly). After the APC indicator stops flashing, press  PAUSE to start recording immediately. If you want to start recording quickly without using the APC function, first set the VCR to recording pause (the APC indicator flashes slowly) and press  PAUSE to start recording.


Additional Operations | 63




Menu option	Set this option to
TAPE SELECT	<ul style="list-style-type: none"> <li>• AUTO when using a T-160 length tape or any tape shorter than a T-140 length tape.</li> <li>• 180 when using a T-140 or T-180 length tape.</li> </ul> For details, see page 49.
AUTO TAPE SPEED	<ul style="list-style-type: none"> <li>• ON to change the timer recording tape speed automatically to the EP mode when the remaining tape length becomes shorter than the recording time. To operate AUTO TAPE SPEED, set TAPE SELECT correctly.</li> <li>• OFF to keep the tape speed.</li> </ul>
SHARPNESS	L (Low) through H (High) to adjust the sharpness of the picture. L to turn off the sharpness control.

Additional Operations | 65

## Changing menu options

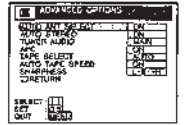- 1 Press MENU, then select ADVANCED OPTIONS and press OK.



- 2 Press  to highlight the option to change, then press OK.
- 3 Press  to change the setting, then press OK. To adjust the sharpness, press  and press OK.
- 4 Press MENU to return to the original screen.

### Menu choices


Initial settings are indicated in bold print.

Menu option	Set this option to
AUTO ANY SELECT	<ul style="list-style-type: none"> <li>• <b>ON</b> if your TV is connected only to VHF/UHF OUT on the VCR. To play a tape, set the TV to the VCR channel (channel 3 or 4).</li> <li>• <b>OFF</b> if your TV is connected to both VHF/UHF OUT and LINE OUT on the VCR. To play a tape, set the TV to the VCR Input.</li> </ul>
AUTO STEREO	<ul style="list-style-type: none"> <li>• <b>ON</b> to receive stereo programs.</li> <li>• <b>OFF</b> to reduce noise. The sound changes to monaural.</li> </ul>
TUNER AUDIO	<ul style="list-style-type: none"> <li>• <b>MAIN</b> to record the main sound on both hi-fi and normal audio tracks.</li> <li>• <b>SAP</b> to record the SAP (Second Audio Program) sound on both hi-fi and normal audio tracks.</li> </ul>
APC	<ul style="list-style-type: none"> <li>• <b>ON</b> to switch on the APC (Adaptive Picture Control) function and improve picture quality.</li> <li>• <b>OFF</b> to switch off APC.</li> </ul>

64 | Additional Operations

## Editing with another VCR

### How to hook up to record on this VCR

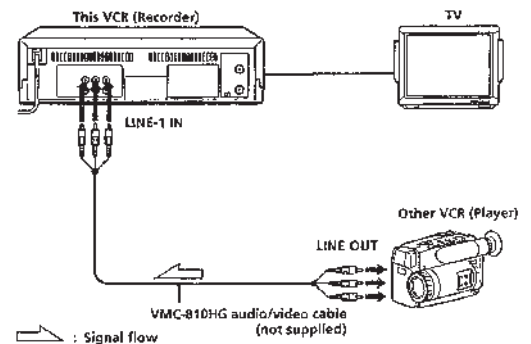

#### Notes


- Make sure you connect the plugs to jacks of the same color.
- If you connected this VCR to both the LINE IN and LINE OUT jacks of the other VCR, select the input correctly to prevent a humming noise.
- You can use the LINE-1 IN jacks for editing. If the other VCR is a monaural type, the sound is recorded only on the channel whose jack is connected to the audio plug. To record on both right and left channels, connect the audio plugs to the AUDIO R/L jacks using a VMC-910HG audio/video cable (not supplied).

66 | Additional Operations

## Operation (when recording on this VCR)

### Before you start editing

- Turn on your TV and set it to the video channel.
- Press INPUT SELECT to display "L1" in the display window.
- Press SP/EP to select the tape speed, SP or EP.

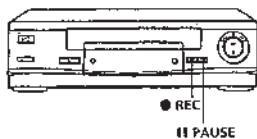

- 1 Insert a source tape with its safety tab removed into the other (playback) VCR. Search for the point to start playback and set it to playback pause.
- 2 Insert a tape into this (recording) VCR. Search for the point to start recording and press PAUSE.
- 3 Press REC on this VCR and set it to recording pause.
- 4 To start editing, press the PAUSE buttons on both VCRs at the same time.

### To stop editing

Press the STOP buttons on both VCRs.

### Tip

- To cut out unwanted scenes while editing, press PAUSE on this VCR when an unwanted scene begins. When it ends, press PAUSE again to resume recording.


### Note

- If you start recording following the procedure above, the VCR won't start recording with the APC function. To record a tape with the APC function, press REC again during recording pause in step 3 so that the VCR analyzes the tape. Then when you start recording in step 4, press PAUSE immediately after the APC indicator stops flashing. If you press PAUSE before the APC indicator stops flashing, the APC function is canceled.

Additional Operations | 67

## Attaching the external antenna connector


When using a 300-ohm twin lead cable for VHF/UHF antenna, use the EAC-32 antenna connector (not supplied) to connect the antenna to the VCR.

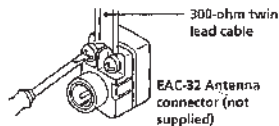

- 1 Loosen the screws on the antenna connector.
- 2 Wind the twin leads around the screws on the antenna connector.
- 3 Retighten the screws.

## Attaching a UHF/VHF band mixer

When using both 75-ohm coaxial cable and 300-ohm twin lead cable for VHF/UHF antenna, use the EAC-66 UHF/VHF band separator/mixer (not supplied) to connect the antenna to the VCR.

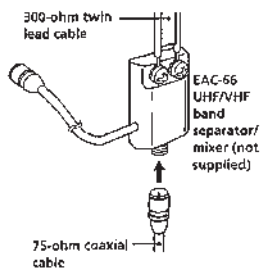

- 1 Loosen the screws on the mixer.
- 2 Wind the twin leads around the screws on the mixer.
- 3 Retighten the screws.
- 4 Connect the 75-ohm coaxial cable to the mixer.


Additional Information | 69

## Additional information

## General setup information

### Setting the RF unit

When connecting the VCR to the TV using only the antenna cable, you must set the RF UNIT switch on the rear of the VCR so that the TV can receive the correct signal from the VCR.

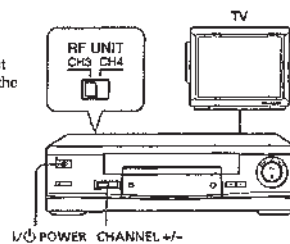

- 1 Set the RF UNIT switch on the rear of the VCR to CH3 or CH4, whichever channel is not used in your area. If both are used, set the switch to either channel.
- 2 Press POWER to turn on the VCR.
- 3 Press TV/VIDEO to turn on the VIDEO indicator in the VCR's display window.
- 4 Press CHANNEL +/- to display a channel number in the display window. Select an active channel number in your area.
- 5 Turn on your TV and set it to the channel you selected in step 1 (channel 3 or 4).

The channel you selected in step 4 appears on the TV screen. If the channels change when you press CHANNEL +/-, you have made the correct setting.

Whenever you use the VCR, set the TV to the channel selected in step 1.


68 | Additional Information

## Troubleshooting

If you have any questions or problems not covered below, please consult your nearest Sony dealer.

	Symptom	Remedy
Power	The I/O switch does not function.	<ul style="list-style-type: none"> <li>• Connect the AC power cord securely.</li> <li>• Make sure the VCR is not locked. To unlock, hold down I/O POWER on the VCR until the indicator disappears.</li> </ul>
	The power is turned on but the VCR does not operate.	<ul style="list-style-type: none"> <li>• Moisture condensation occurs. Turn the power off, unplug the AC power cord and leave the VCR to dry for over three hours.</li> </ul>
Clock	The clock has stopped and "--" lights in the display window.	<ul style="list-style-type: none"> <li>• The clock stops if the VCR is disconnected from the wall outlet for more than one hour. Reset the clock (and the timer).</li> </ul>
	The playback picture does not appear on the TV screen.	<ul style="list-style-type: none"> <li>• Make sure the TV is set to the channel for the VCR. If you are using a monitor, set it to video input.</li> </ul>
Playback	The picture is not clear.	<ul style="list-style-type: none"> <li>• Adjust the tracking with the TRACKING +/- buttons.</li> <li>• The video heads are dirty (see below). Clean the video heads using the Sony T-25CLD, T-25CLDR, or T-25CLW video head cleaning cassette. If these cleaning cassettes are not available in your area, have the heads cleaned at your nearest Sony service facility (a standard service fee will be charged). Do not use a commercially available liquid-type cleaning cassette to other than Sony's, as it may damage the video heads.</li> <li>• The video heads may have to be replaced. Consult your local Sony dealer for more information.</li> </ul>
	The picture rolls vertically during picture search.	<ul style="list-style-type: none"> <li>• Adjust the vertical hold control on the TV or monitor.</li> </ul>
	The picture has no sound.	<ul style="list-style-type: none"> <li>• The tape is defective.</li> <li>• If you made A/V connections, check the audio cable connection.</li> </ul>

### Symptoms caused by contaminated video heads

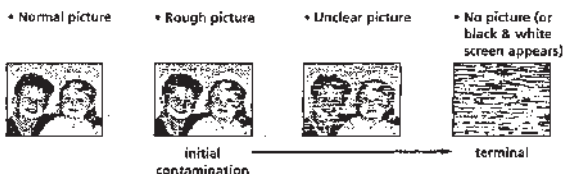


70 | Additional Information

	Symptom	Remedy
Recording	A TV program does not appear on the TV screen.	<ul style="list-style-type: none"> <li>• Make sure the TV is set to the channel for the VCR. If you are using a monitor, set it to video input.</li> <li>• Select the correct source with the INPUT SELECT button. Select a channel number when recording TV programs; select "L1" when recording from other equipment.</li> </ul>
	TV reception is poor.	<ul style="list-style-type: none"> <li>• Adjust the TV antenna.</li> </ul>
	The tape starts playing as soon as it is inserted.	<ul style="list-style-type: none"> <li>• The safety tab has been removed. To record on this tape, cover the tab hole.</li> </ul>
	The tape ejects when you press ● REC.	<ul style="list-style-type: none"> <li>• Check that the safety tab has not been removed.</li> </ul>
Timer recording	Nothing happens when you press ● REC.	<ul style="list-style-type: none"> <li>• Make sure the tape is not at its end.</li> </ul>
	The timer does not operate.	<ul style="list-style-type: none"> <li>• Check that the clock is set.</li> <li>• Make sure a tape has been inserted.</li> <li>• Check that the safety tab has not been removed.</li> <li>• Make sure the tape is not at its end.</li> <li>• Make sure a program has been set for timer recording.</li> <li>• Make sure your timer settings have not already passed the current time.</li> <li>• Check that the cable box is turned on.</li> <li>• The clock stops if the VCR is disconnected from the wall outlet for more than one hour. Reset the clock and timer.</li> </ul>
Others	A tape cannot be inserted.	<ul style="list-style-type: none"> <li>• Check that a tape isn't already in the tape compartment.</li> </ul>
	The remote commander does not function.	<ul style="list-style-type: none"> <li>• Make sure you are pointing the remote commander at the remote sensor on the VCR.</li> <li>• Replace all the batteries in the remote commander with new ones if they are weak.</li> <li>• Make sure the (TV) / (VIDEO) switch is set correctly.</li> </ul>
	The tracking meter does not appear on the screen.	<ul style="list-style-type: none"> <li>• The recording condition of the tape is very poor and tracking cannot be adjusted.</li> </ul>
	You cannot control other TVs.	<ul style="list-style-type: none"> <li>• Set your TV's code number. The code number may change when you replace the batteries of the remote commander.</li> </ul>
	The VCR needs to be cleaned.	<ul style="list-style-type: none"> <li>• Clean the cabinet, panel and controls with a dry, soft cloth, or a soft cloth slightly moistened with a mild detergent solution. Do not use any type of solvent such as alcohol or benzene.</li> </ul>


## SECTION 2 DISASSEMBLY

**NOTE:** Follow the disassembly procedure in the numerical order given.

### 2-1. UPPER CASE, PANEL BLOCK ASSEMBLY

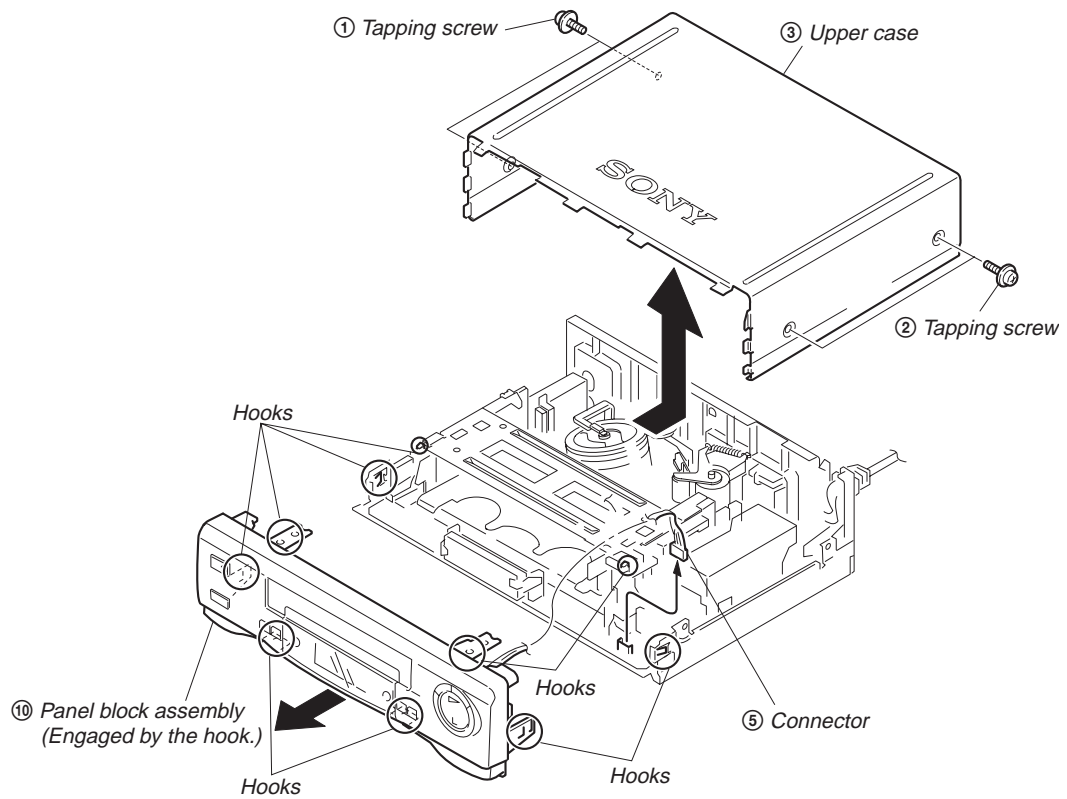


### 2-2. DS-84 BOARD

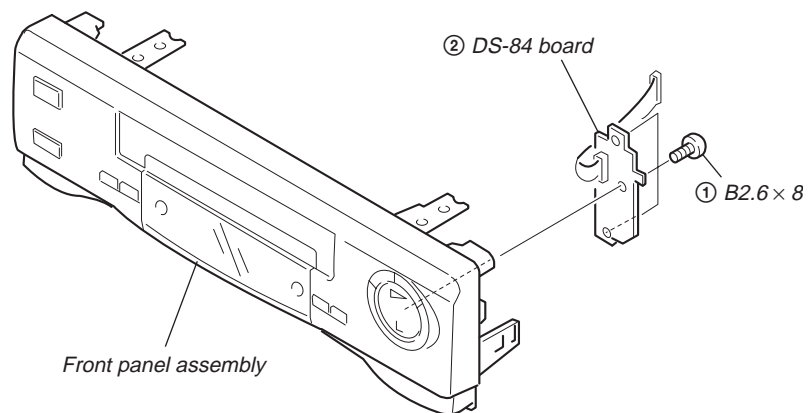





## 2-3. REAR PANEL

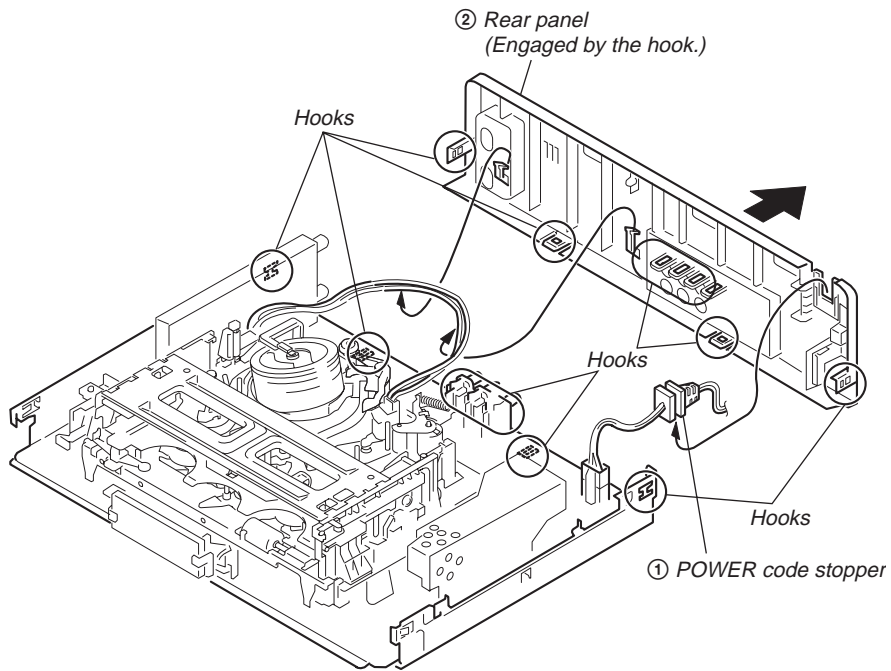

## 2-4. MA-341 BOARD

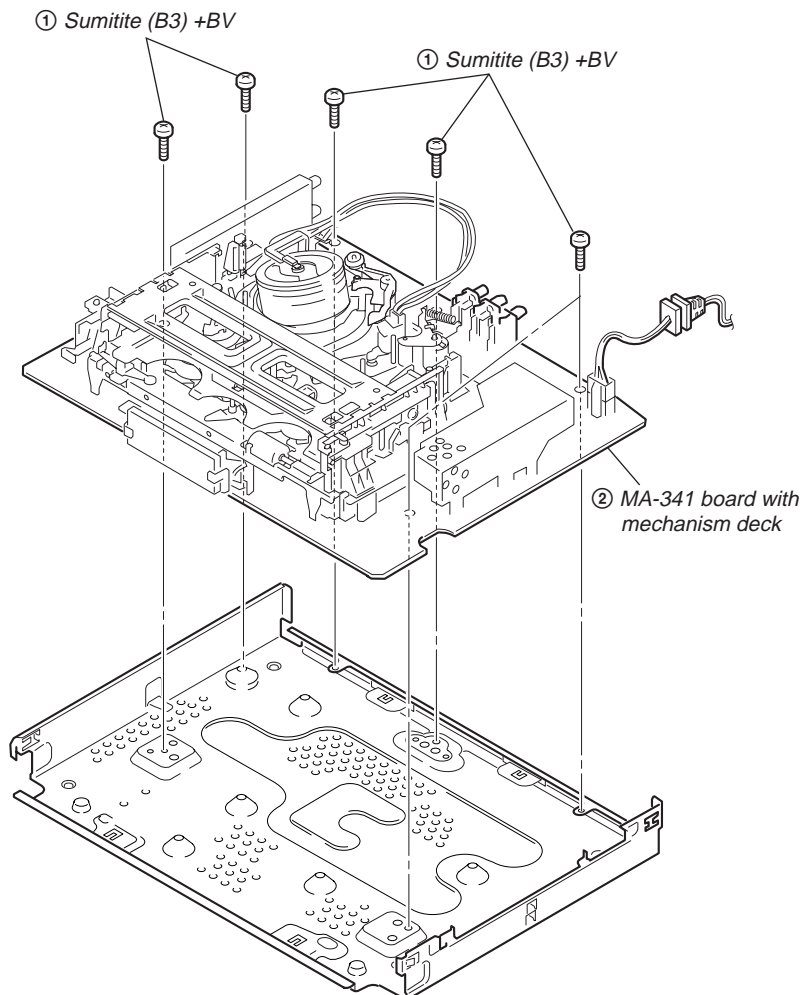


## 2-5. MECHANISM DECK

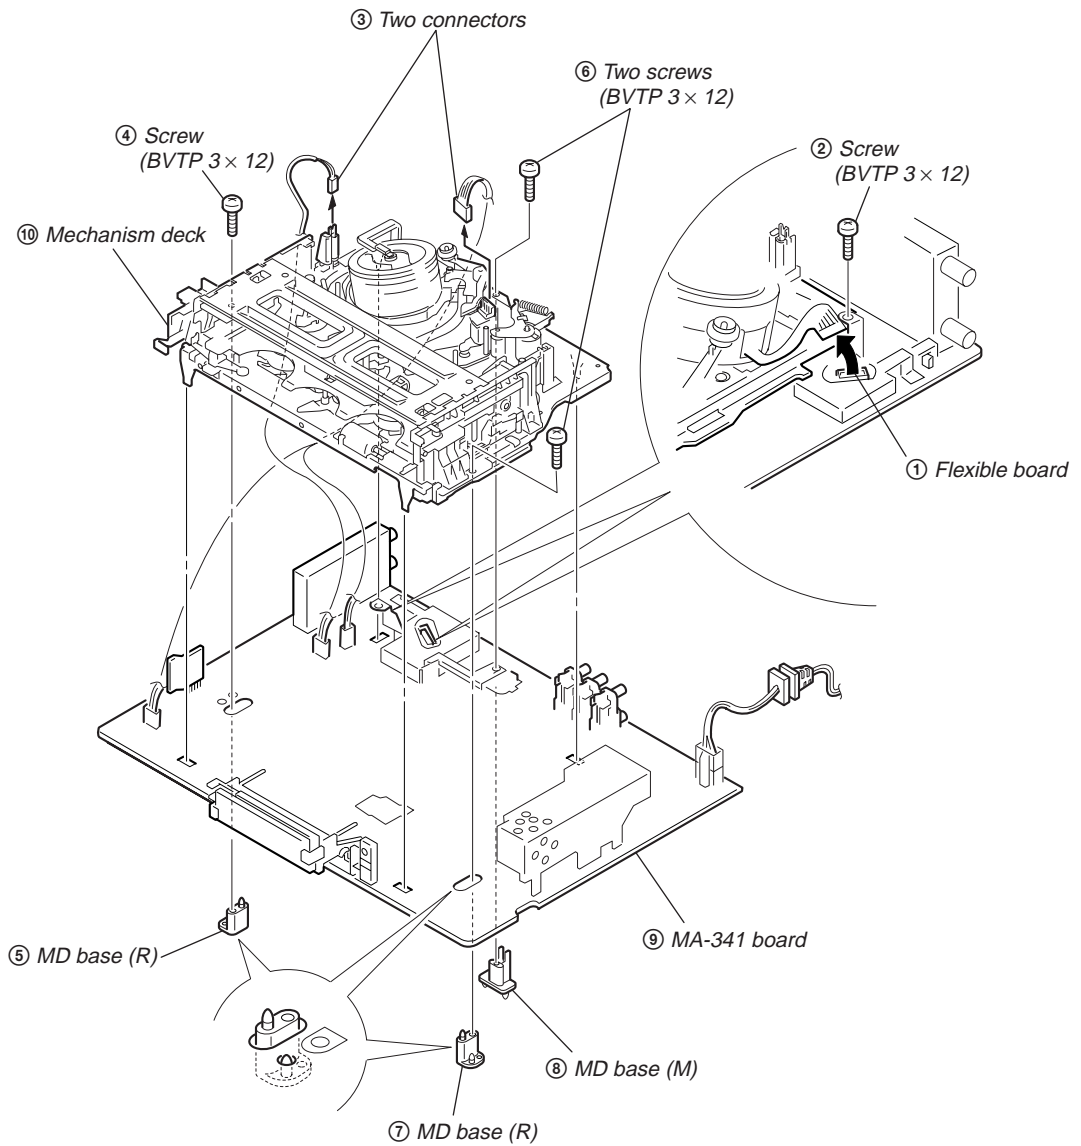


## 2-6. INTERNAL VIEWS


— Top View —

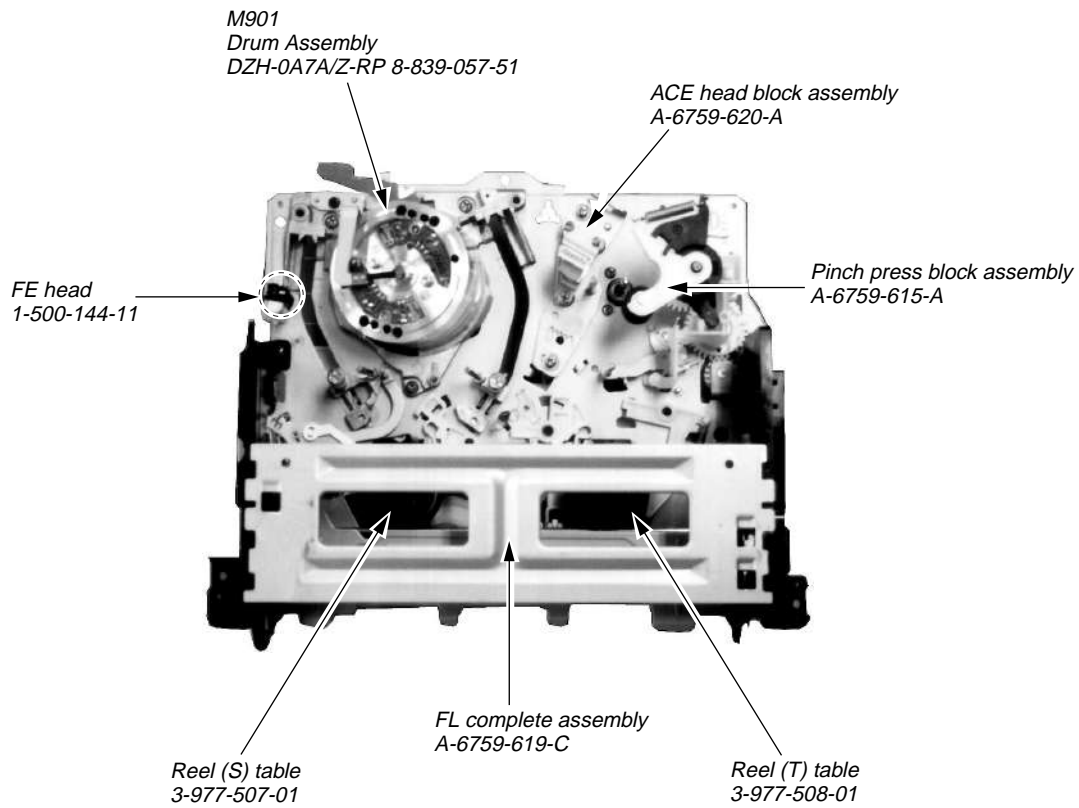

— Bottom View —

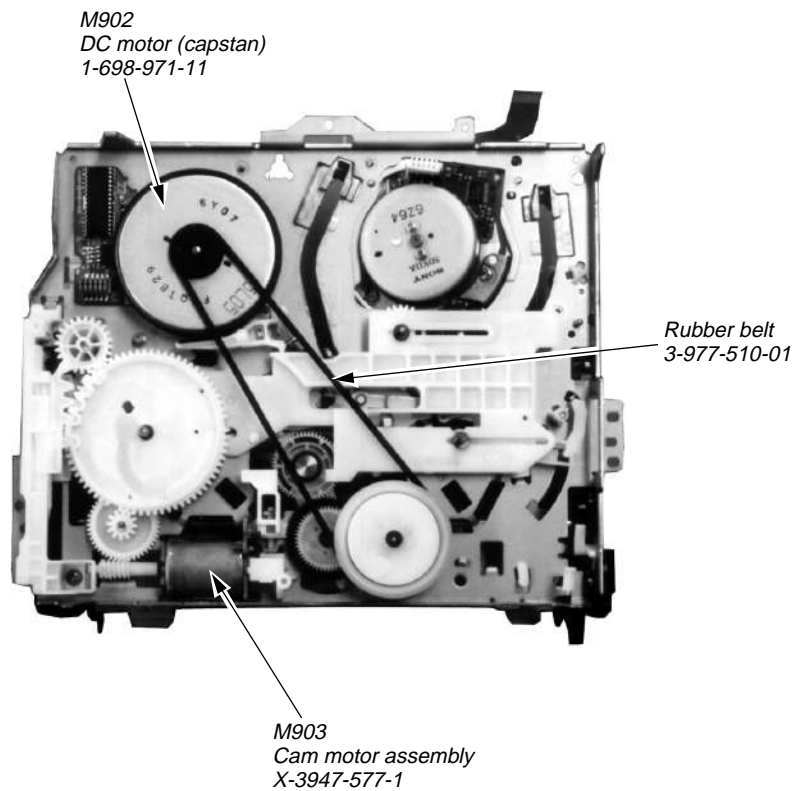


## 2-7. CIRCUIT BOARDS LOCATION

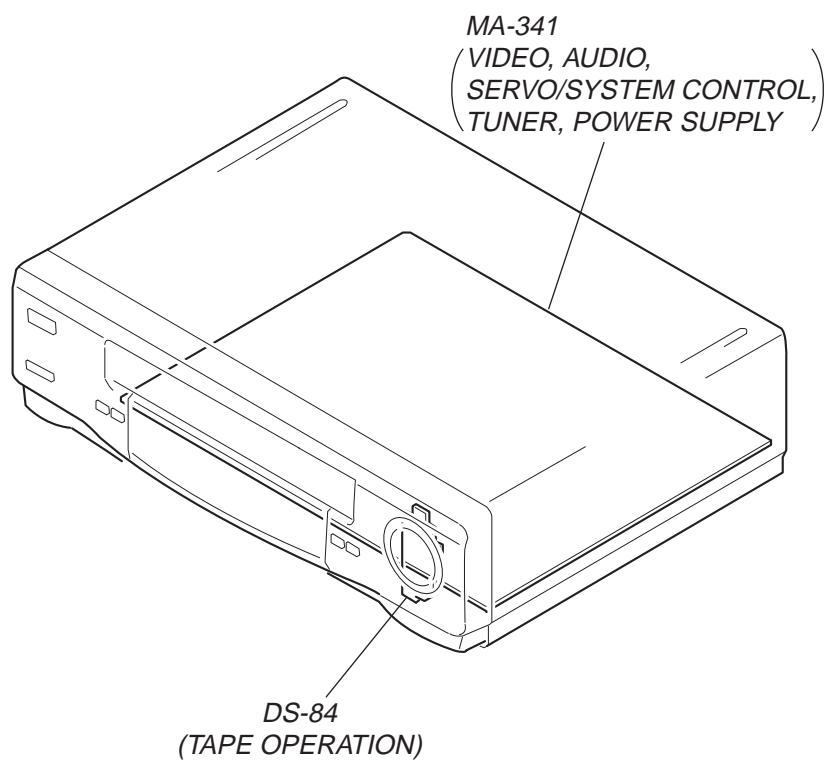


SECTION 3  
BLOCK DIAGRAMS

3-1. OVERALL BLOCK DIAGRAM

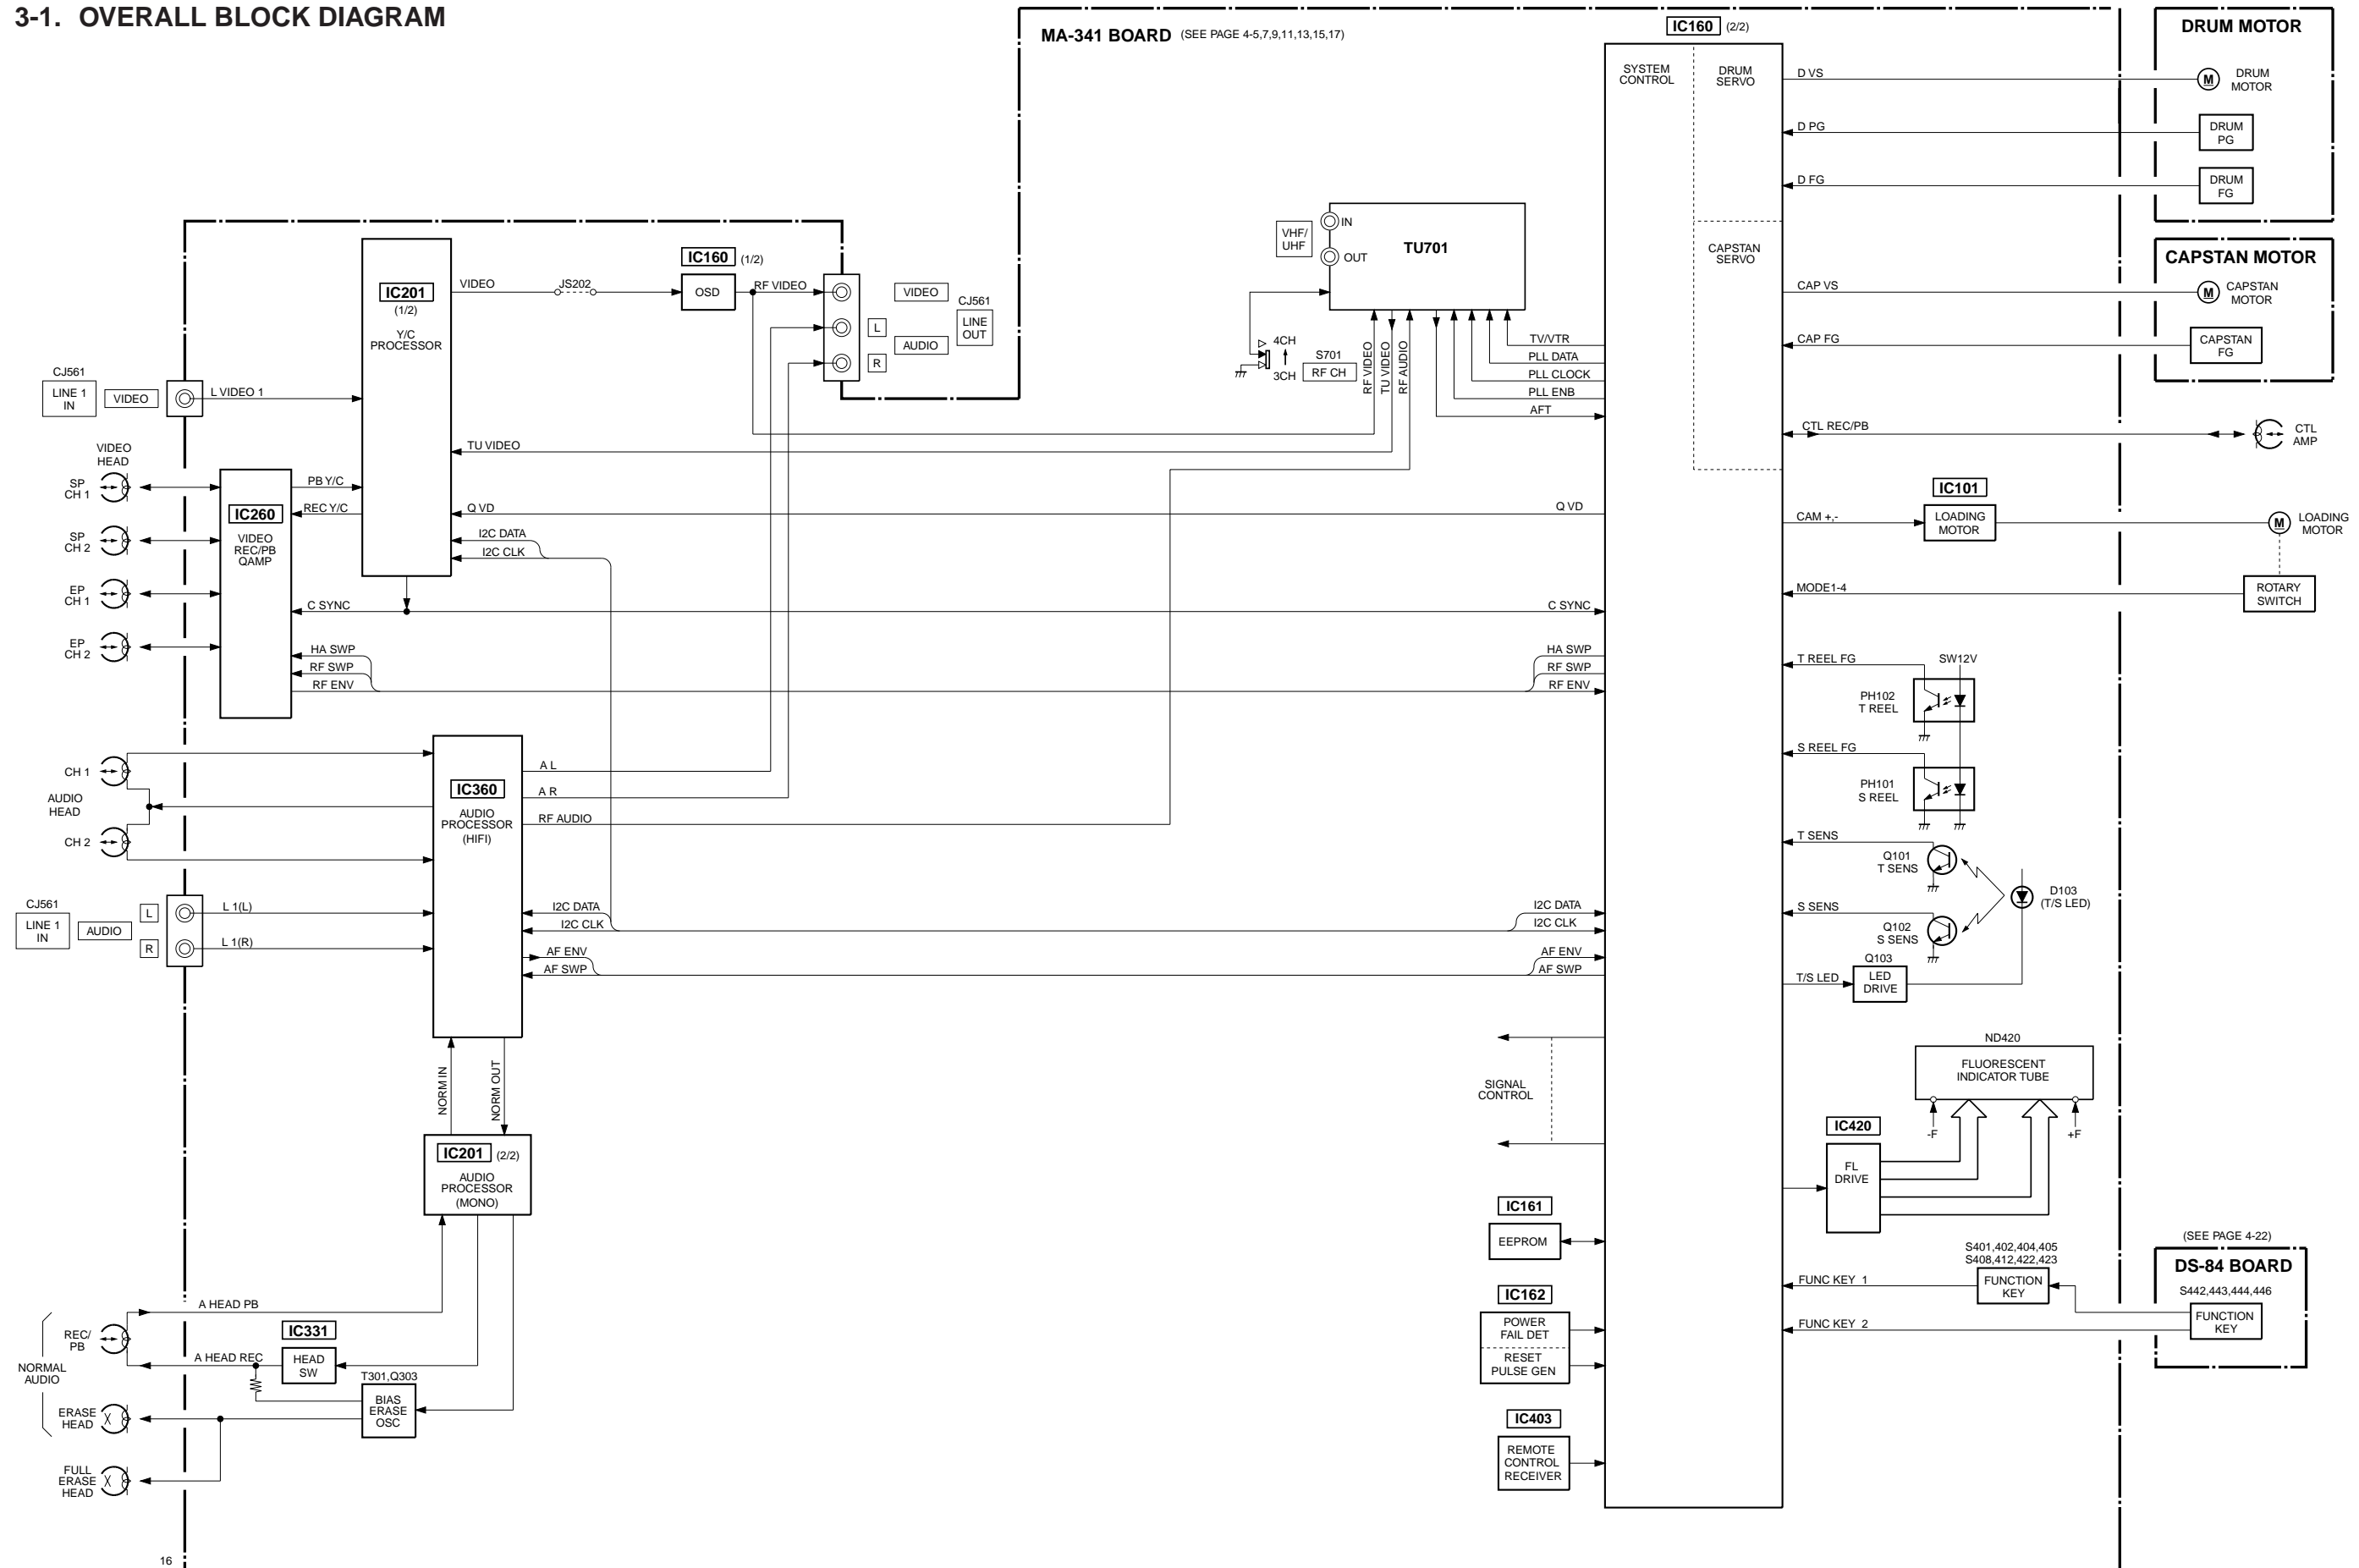


16


3-2. VIDEO BLOCK DIAGRAM

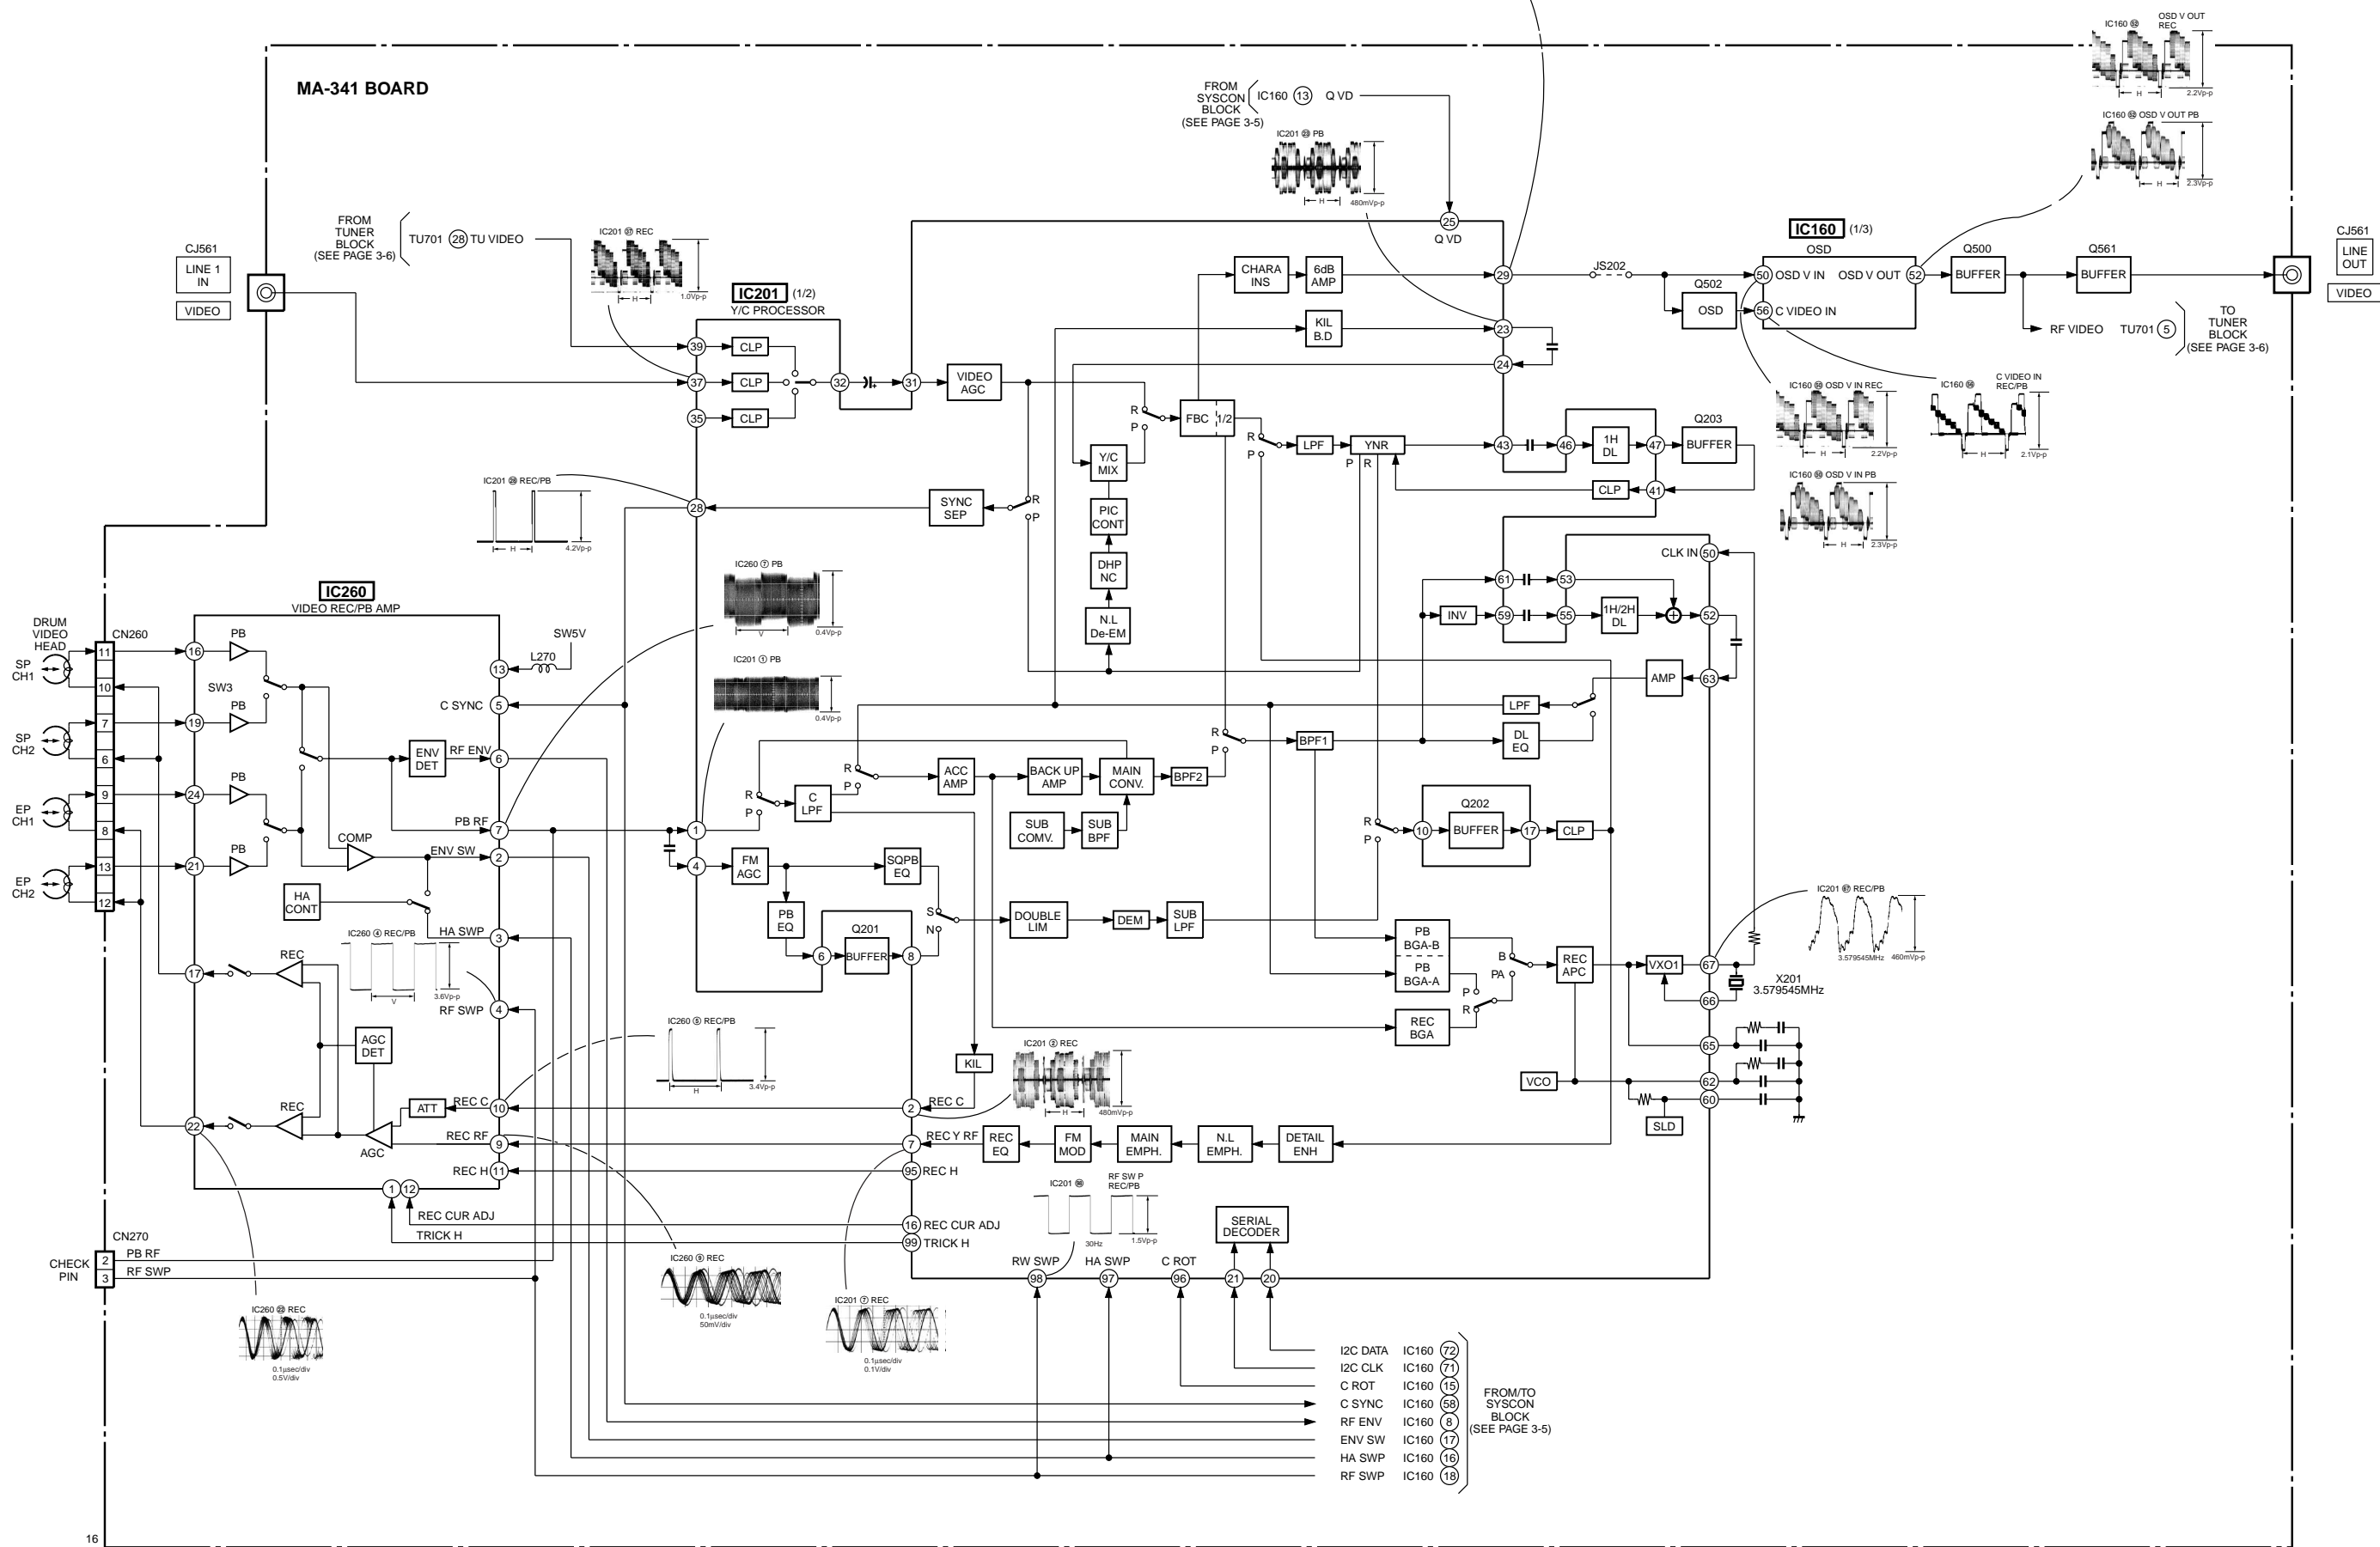

3-3. SERVO/SYSTEM CONTROL BLOCK DIAGRAM

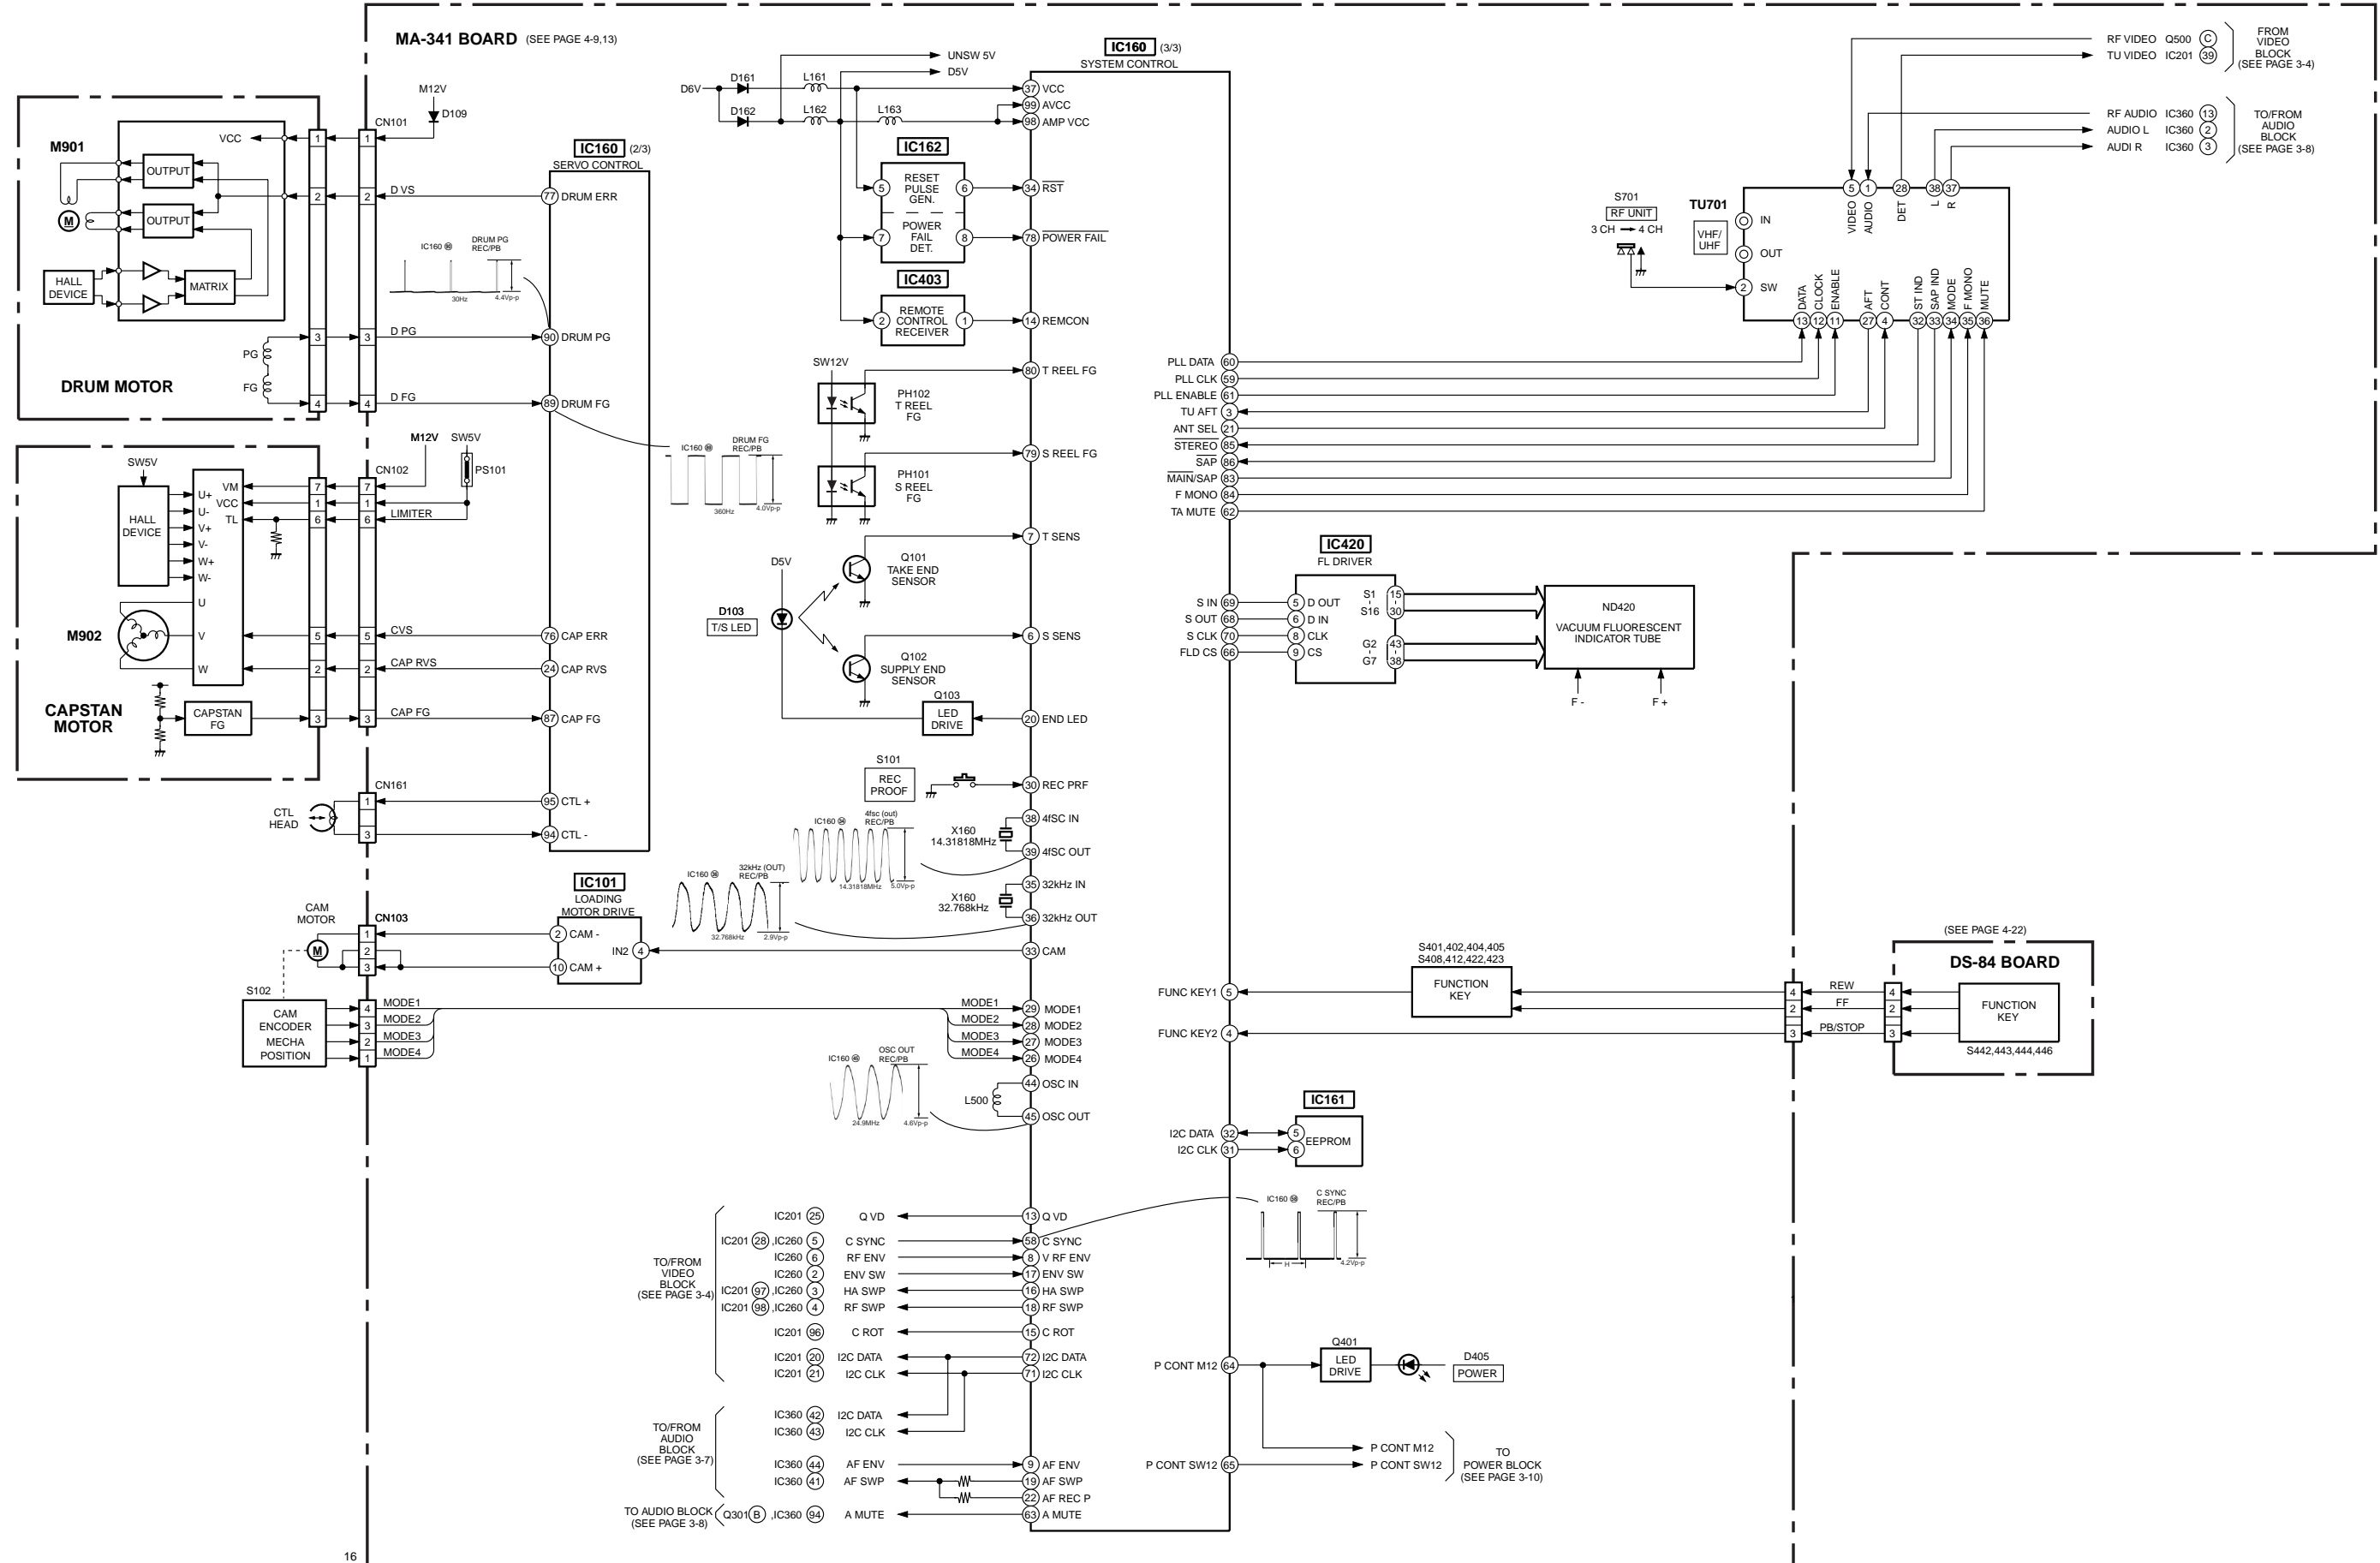


3-4. AUDIO/TUNER BLOCK DIAGRAM

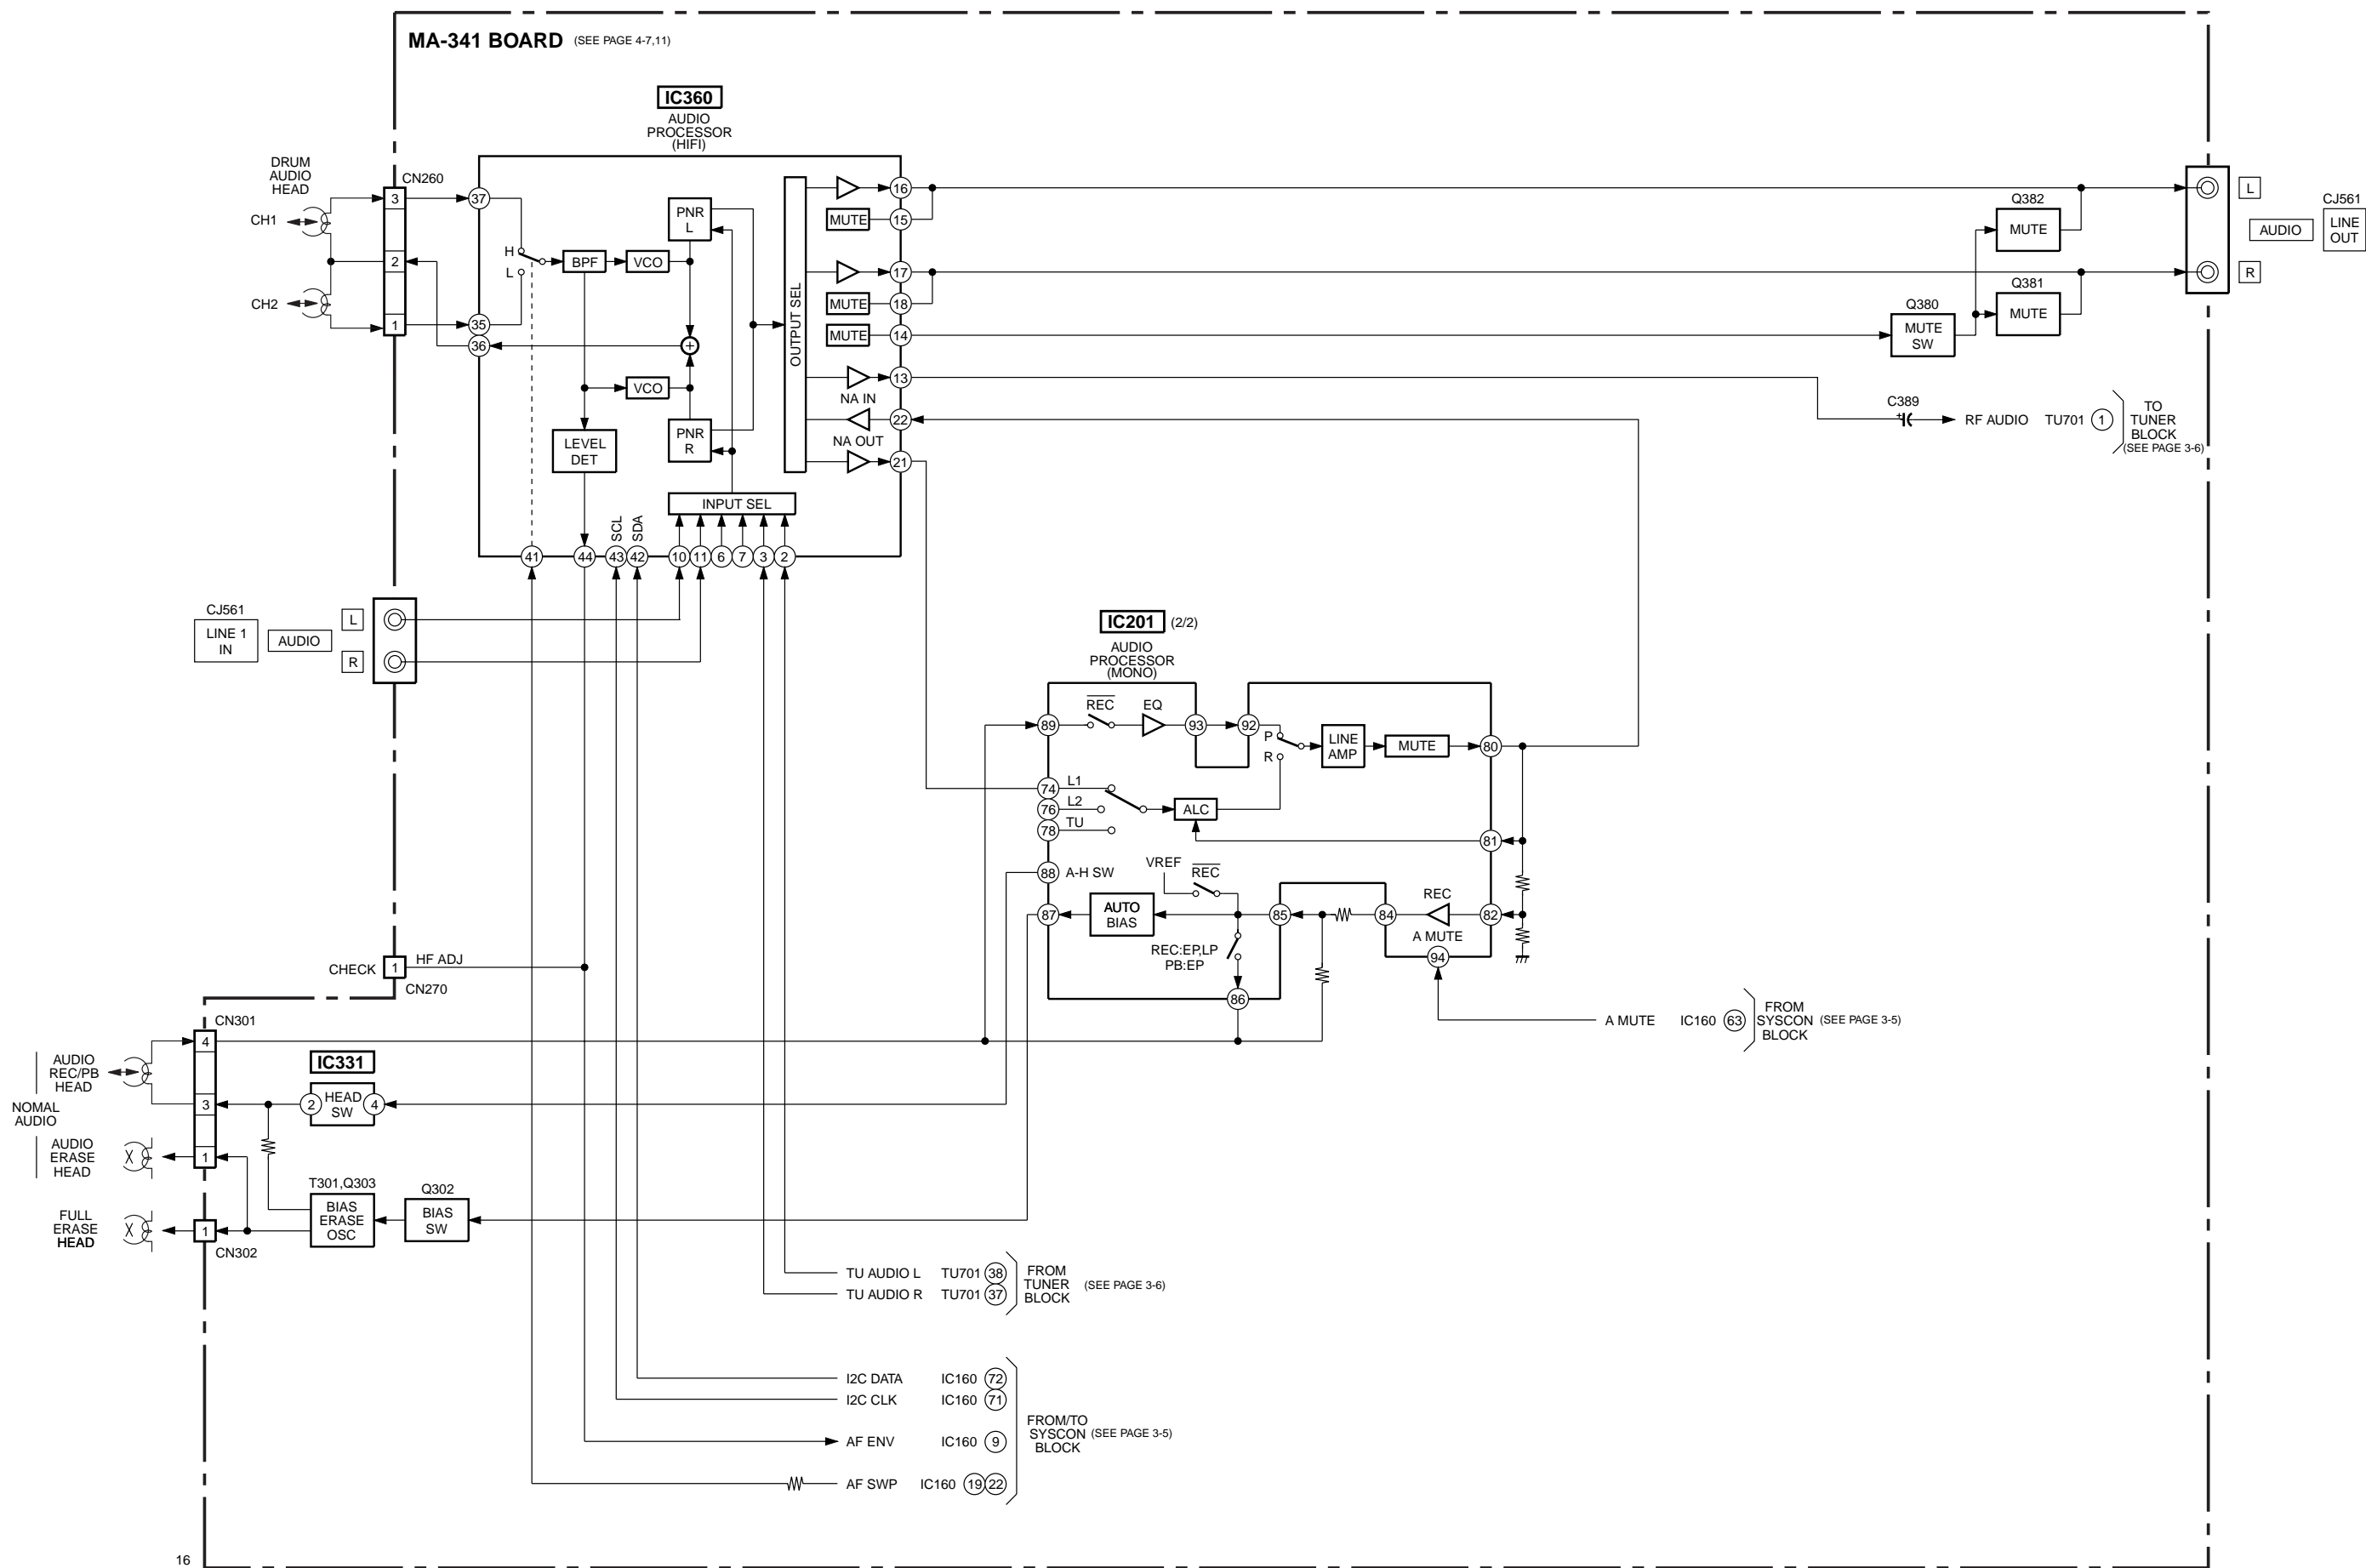





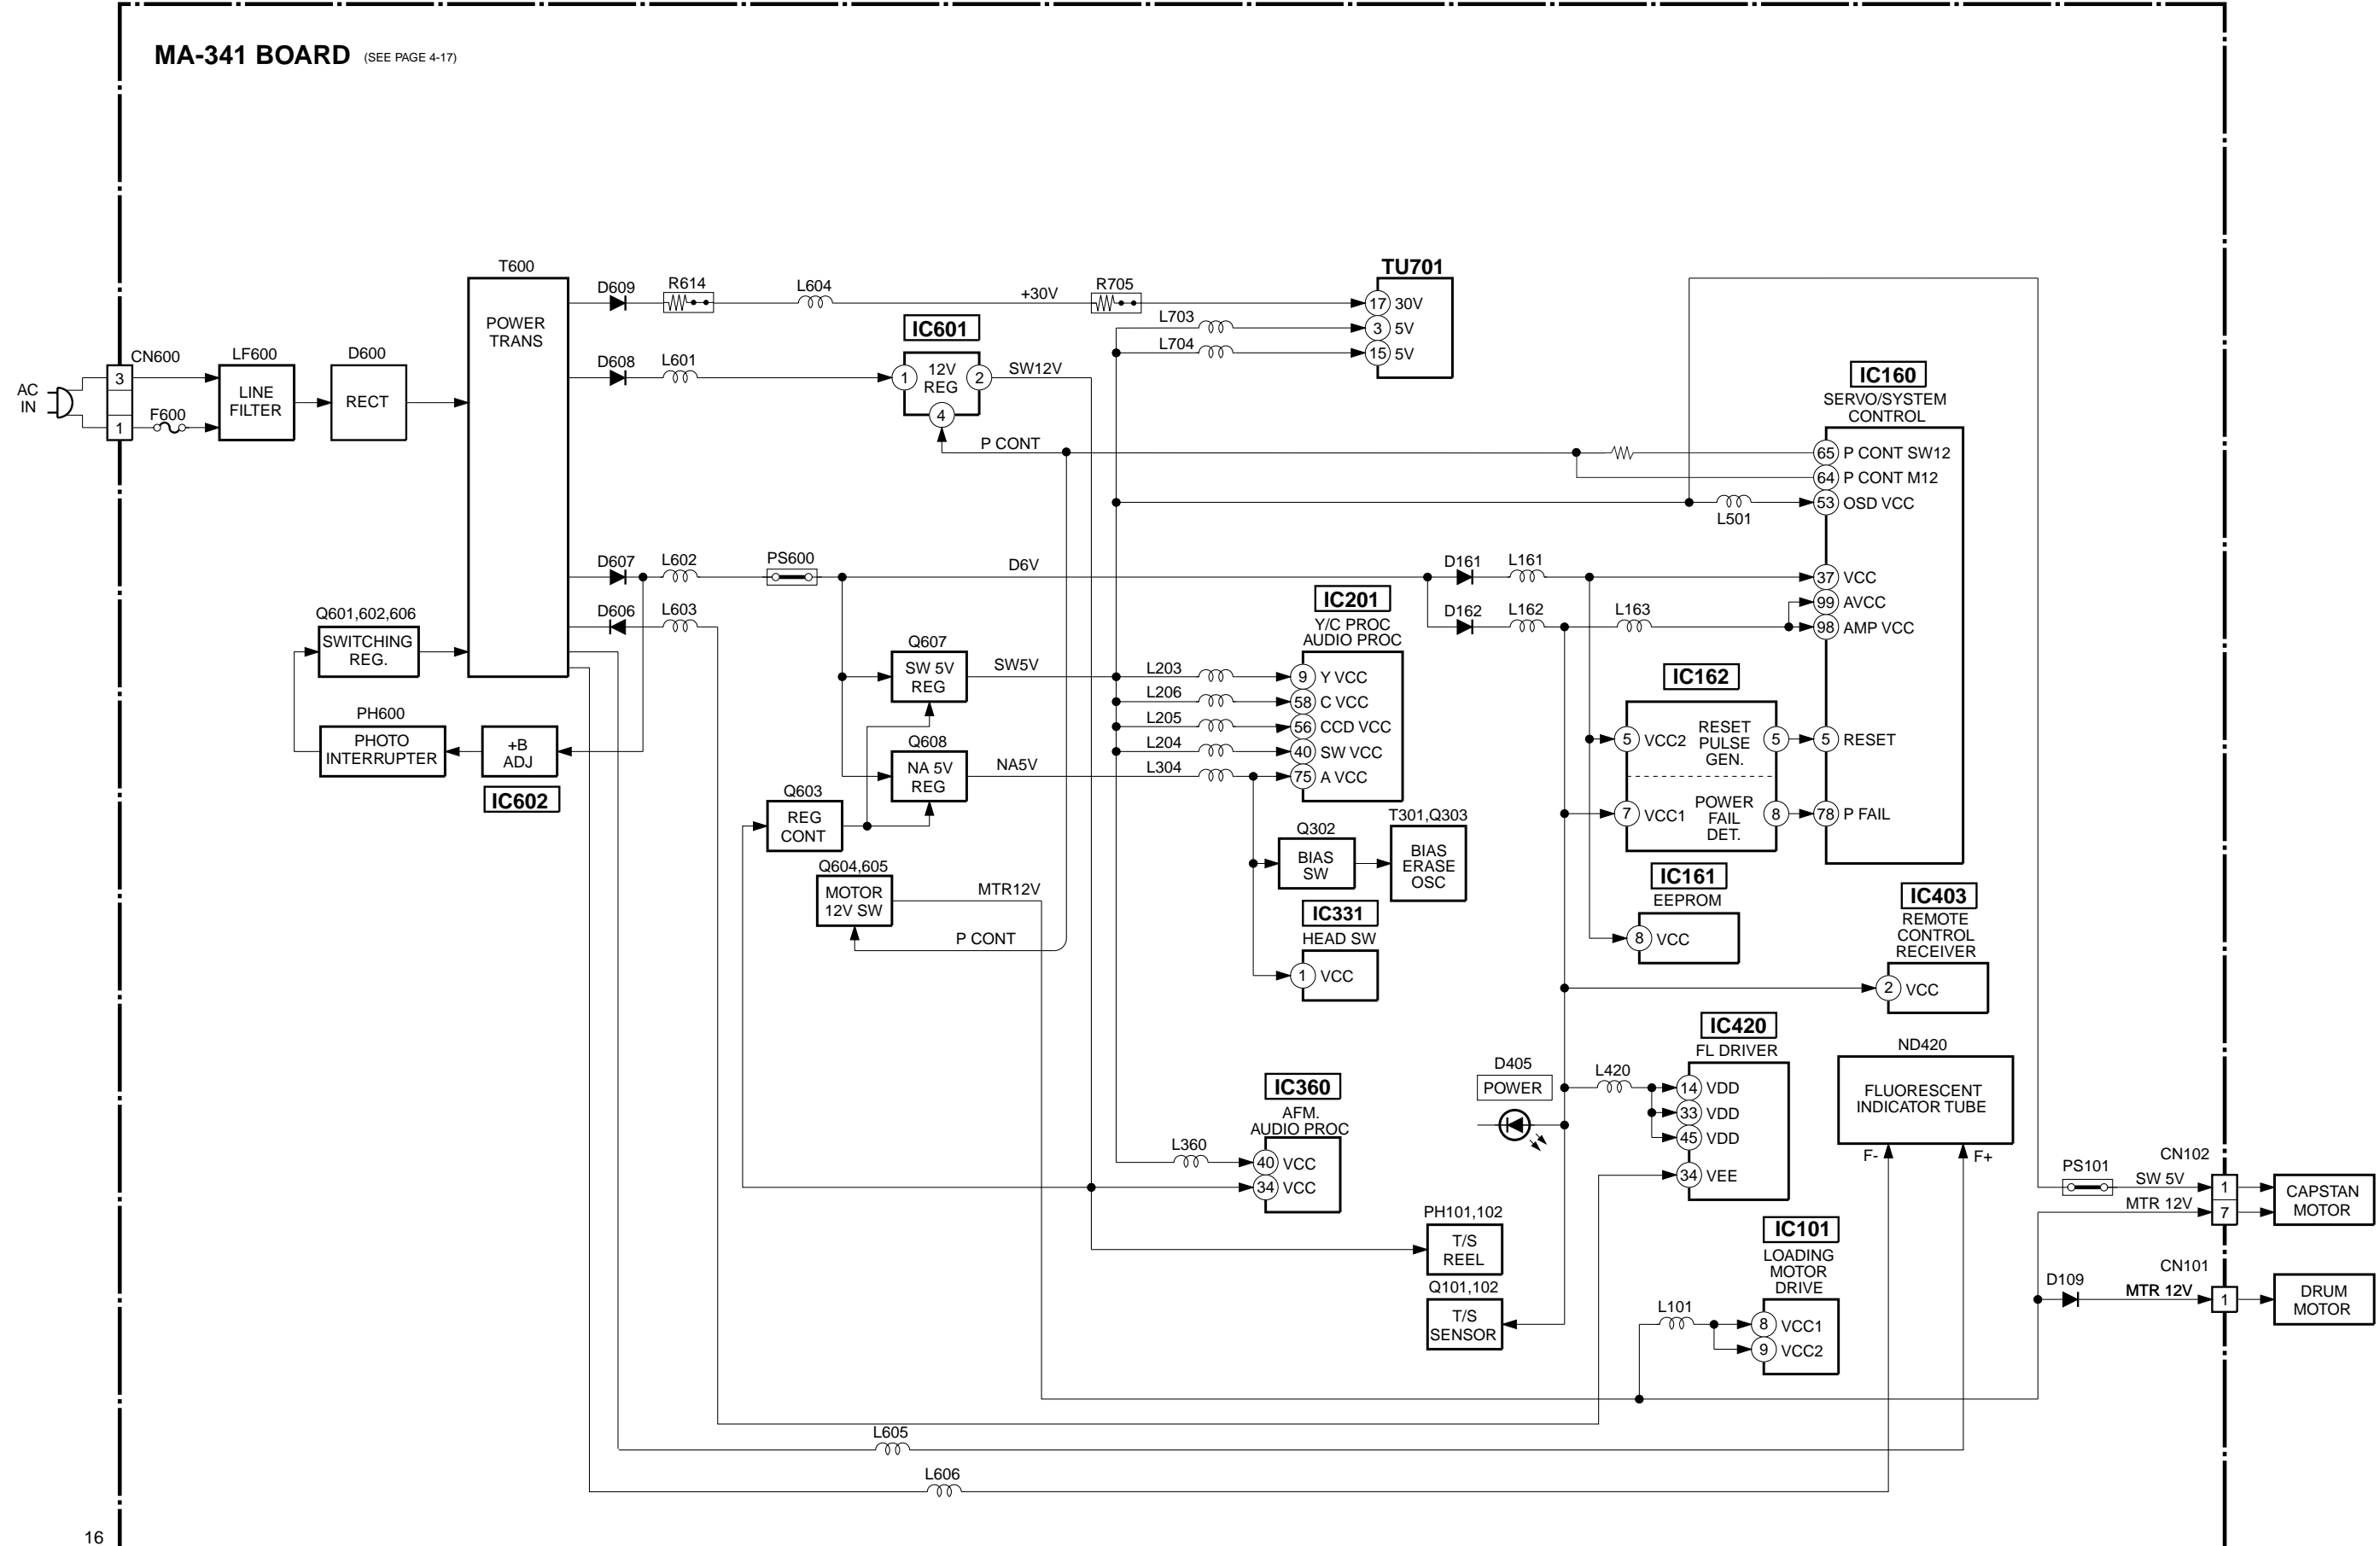


3-5. POWER BLOCK DIAGRAM



## SECTION 4 PRINTED WIRING BOARDS AND SCHEMATIC DIAGRAMS


**THIS NOTE IS COMMON FOR PRINTED WIRING BOARDS AND SCHEMATIC DIAGRAMS.**  
(In addition to this, the necessary note is printed in each block.)

- **For Printed Wiring Boards.**
- : Pattern from the side which enables seeing.
- **For Schematic Diagrams.**
- Caution when replacing chip parts.  
New parts must be attached after removal of chip.  
Be careful not to heat the minus side of tantalum capacitor, because it is damaged by the heat.
- All resistor are in ohms, 1/4 W unless otherwise noted.  
Chip resistor are 1/10 W unless otherwise noted.  
kΩ: 1000 Ω, M Ω, : 1000 kΩ.
- All capacitors are in μF unless otherwise noted. pF : μ μF. 50 V or less are not indicated except for electrolytics and tantalums.
- : panel designation.
- : internal component.
- : B+ Line.
- : B- Line.
- Circled numbers refer to waveforms.
- Readings are taken with a PAL color-bar signal input.
- Voltage are dc between ground and measurement points.
- Readings are taken with a digital multimeter (DC10MΩ).
- Voltage variations may be noted due to normal production tolerances.


When indicating parts by reference number, please include the board name.

- Abbreviation  
CND : Canadian


### MA-341 BOARD (VIDEO BLOCK (IC260))

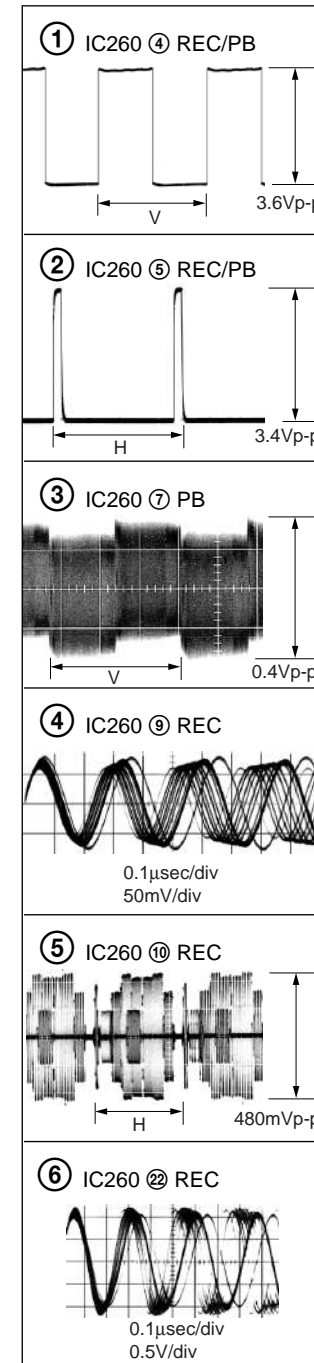

### MA-341 BOARD (VIDEO BLOCK (IC201))

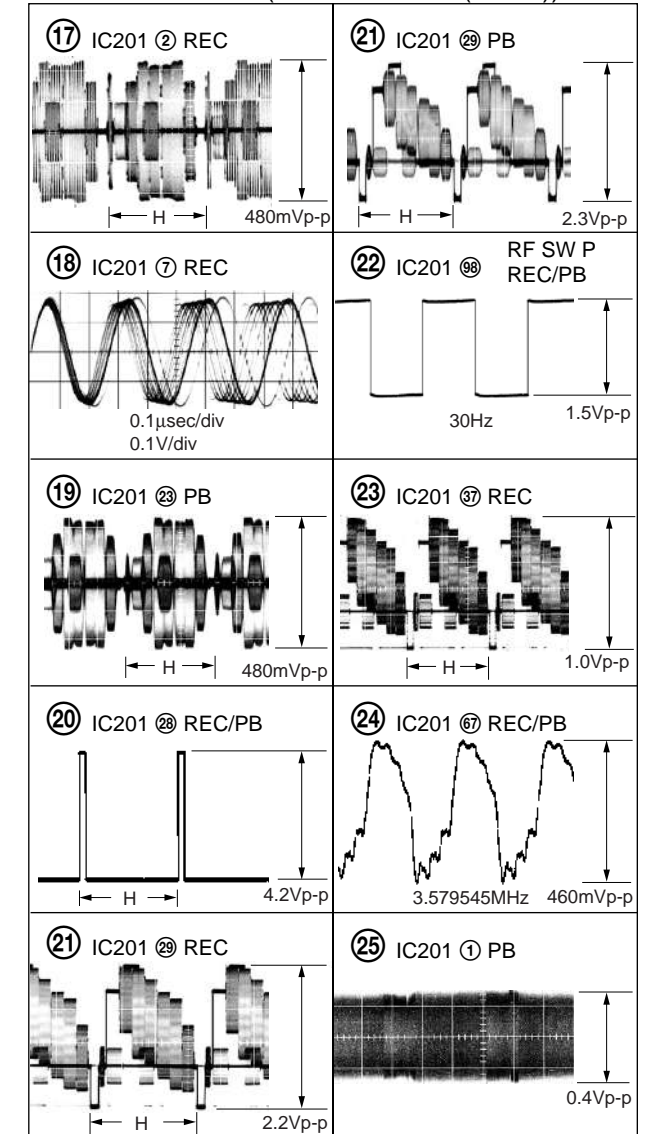

4-1. FRAME SCHEMATIC DIAGRAM

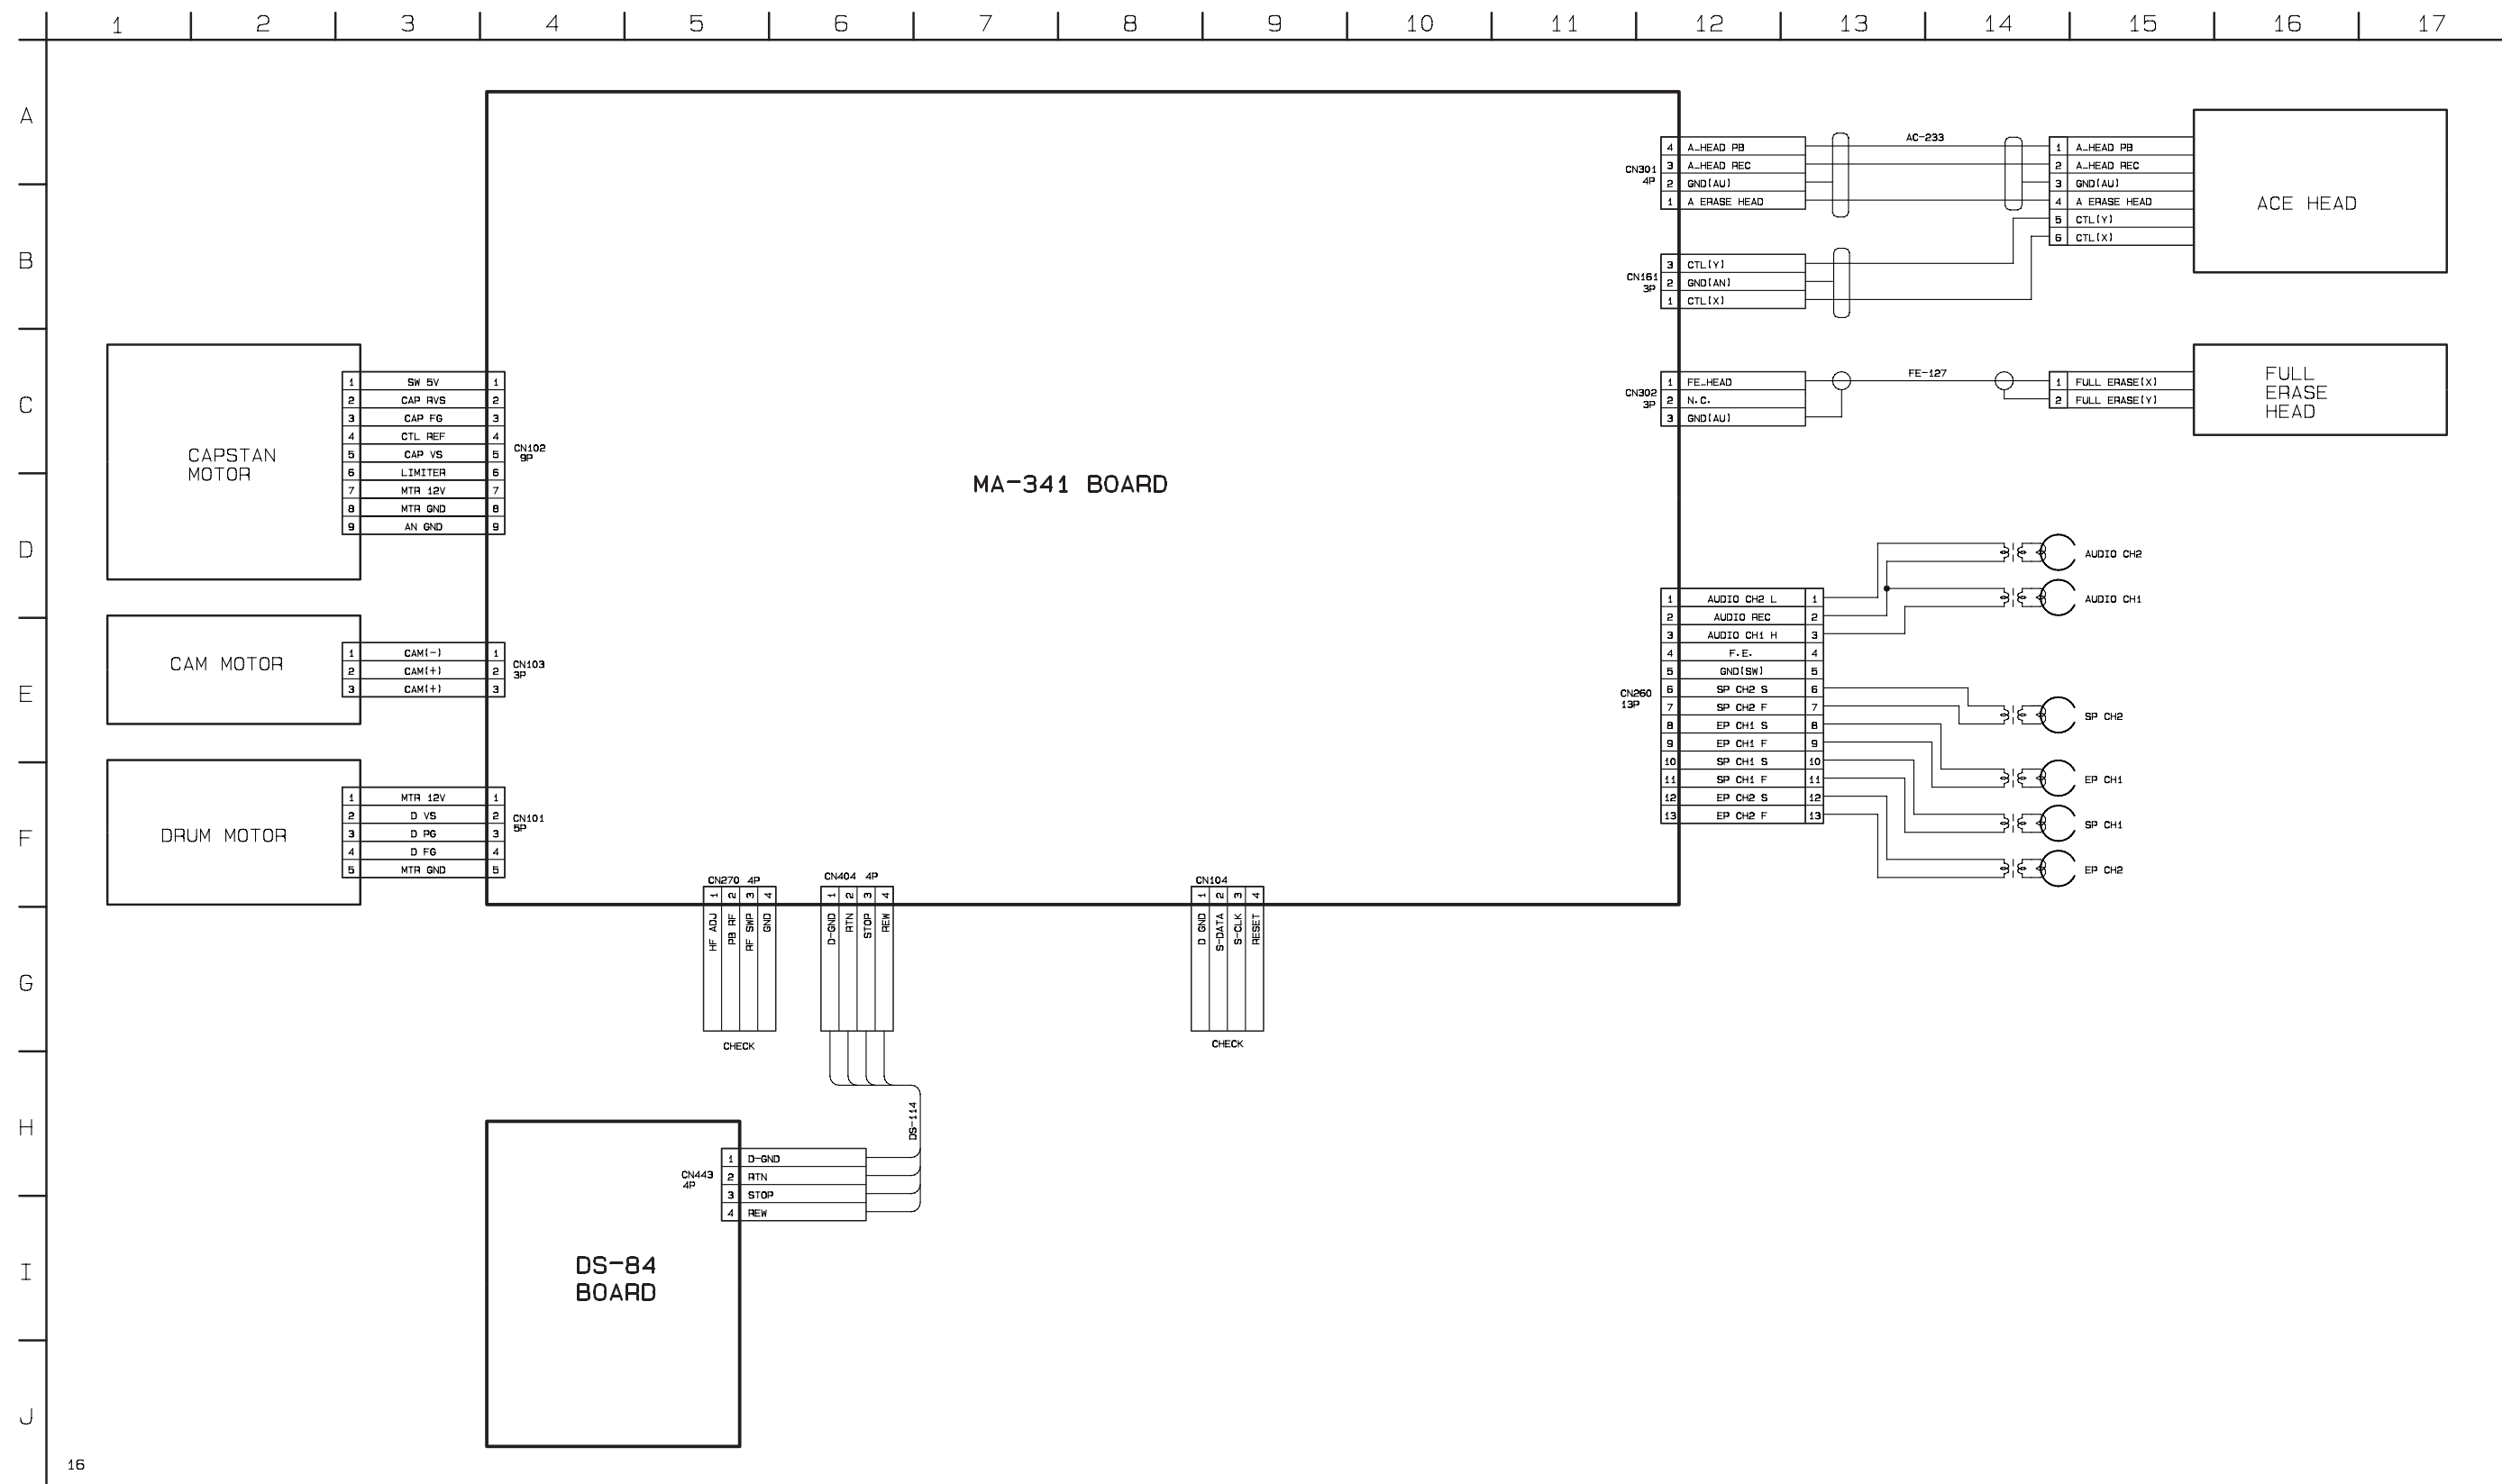


4-2. PRINTED WIRING BOARDS AND SCHEMATIC DIAGRAMS

MA-341(1/7) (VIDEO) SCHEMATIC DIAGRAMS

— Ref. No. MA-341 Board; 1,000 Series —

For schematic diagram

- Refer to page 4-19 for printed wiring board.
- Refer to page 4-2 for waveforms.

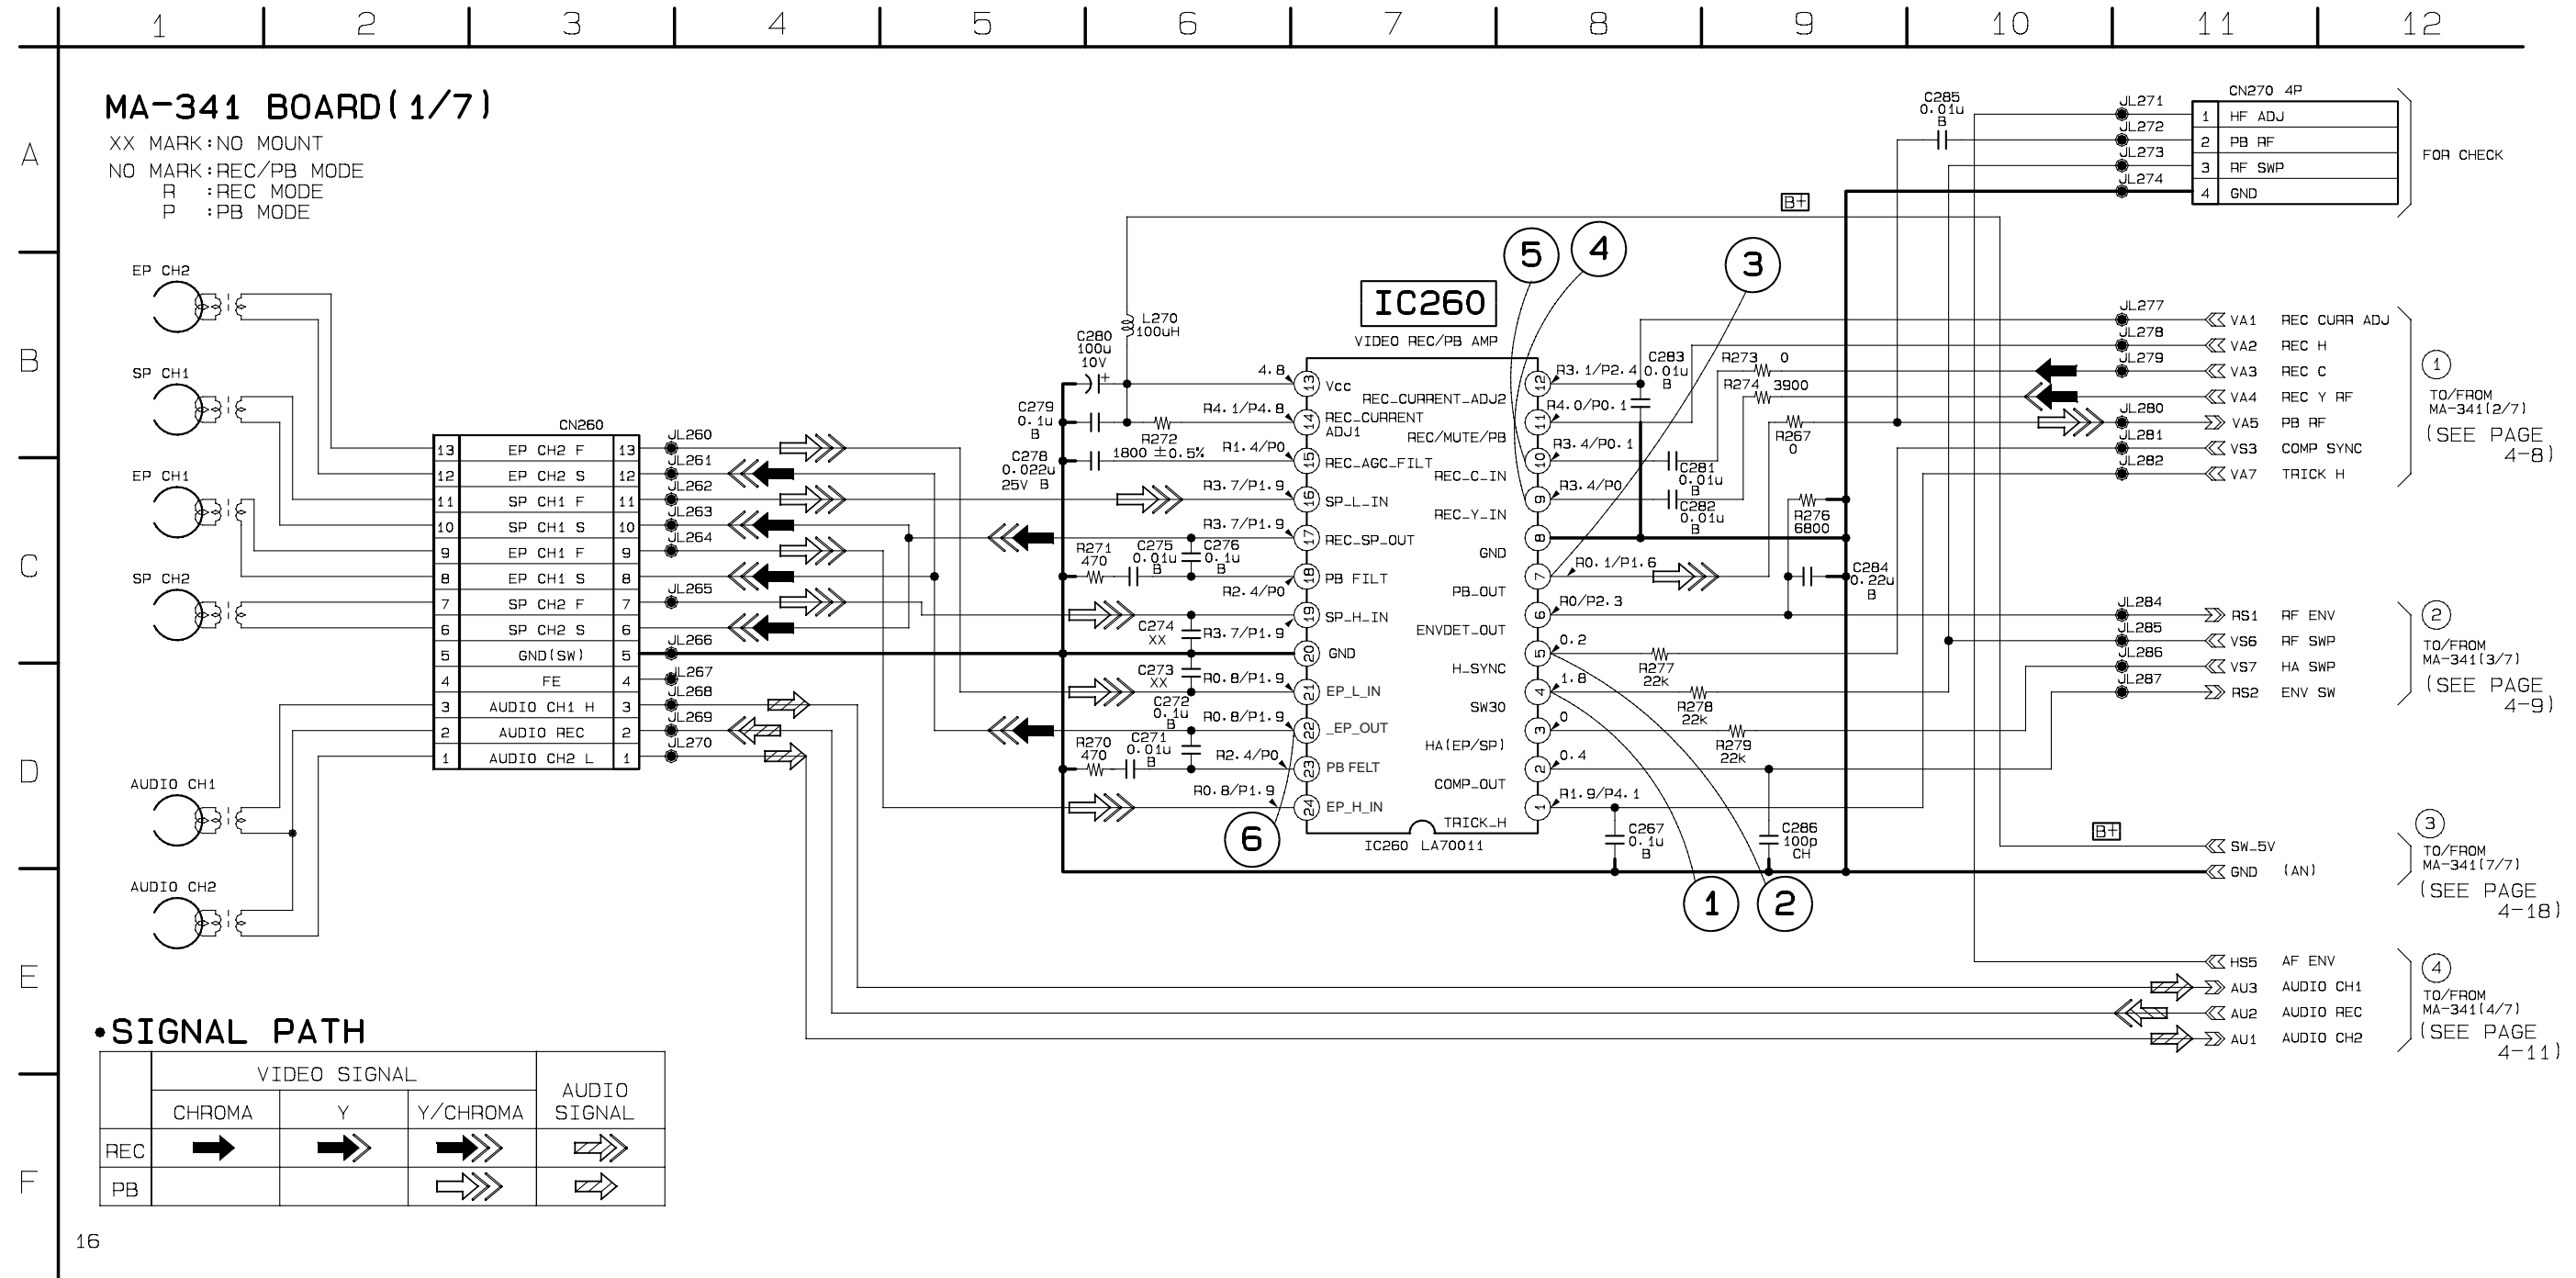


MA-341(2/7) (AUDIO) SCHEMATIC DIAGRAMS

— Ref. No. MA-341 Board; 1,000 Series —

For schematic diagram

- Refer to page 4-19 for printed wiring board.
- Refer to page 4-2 for waveforms.

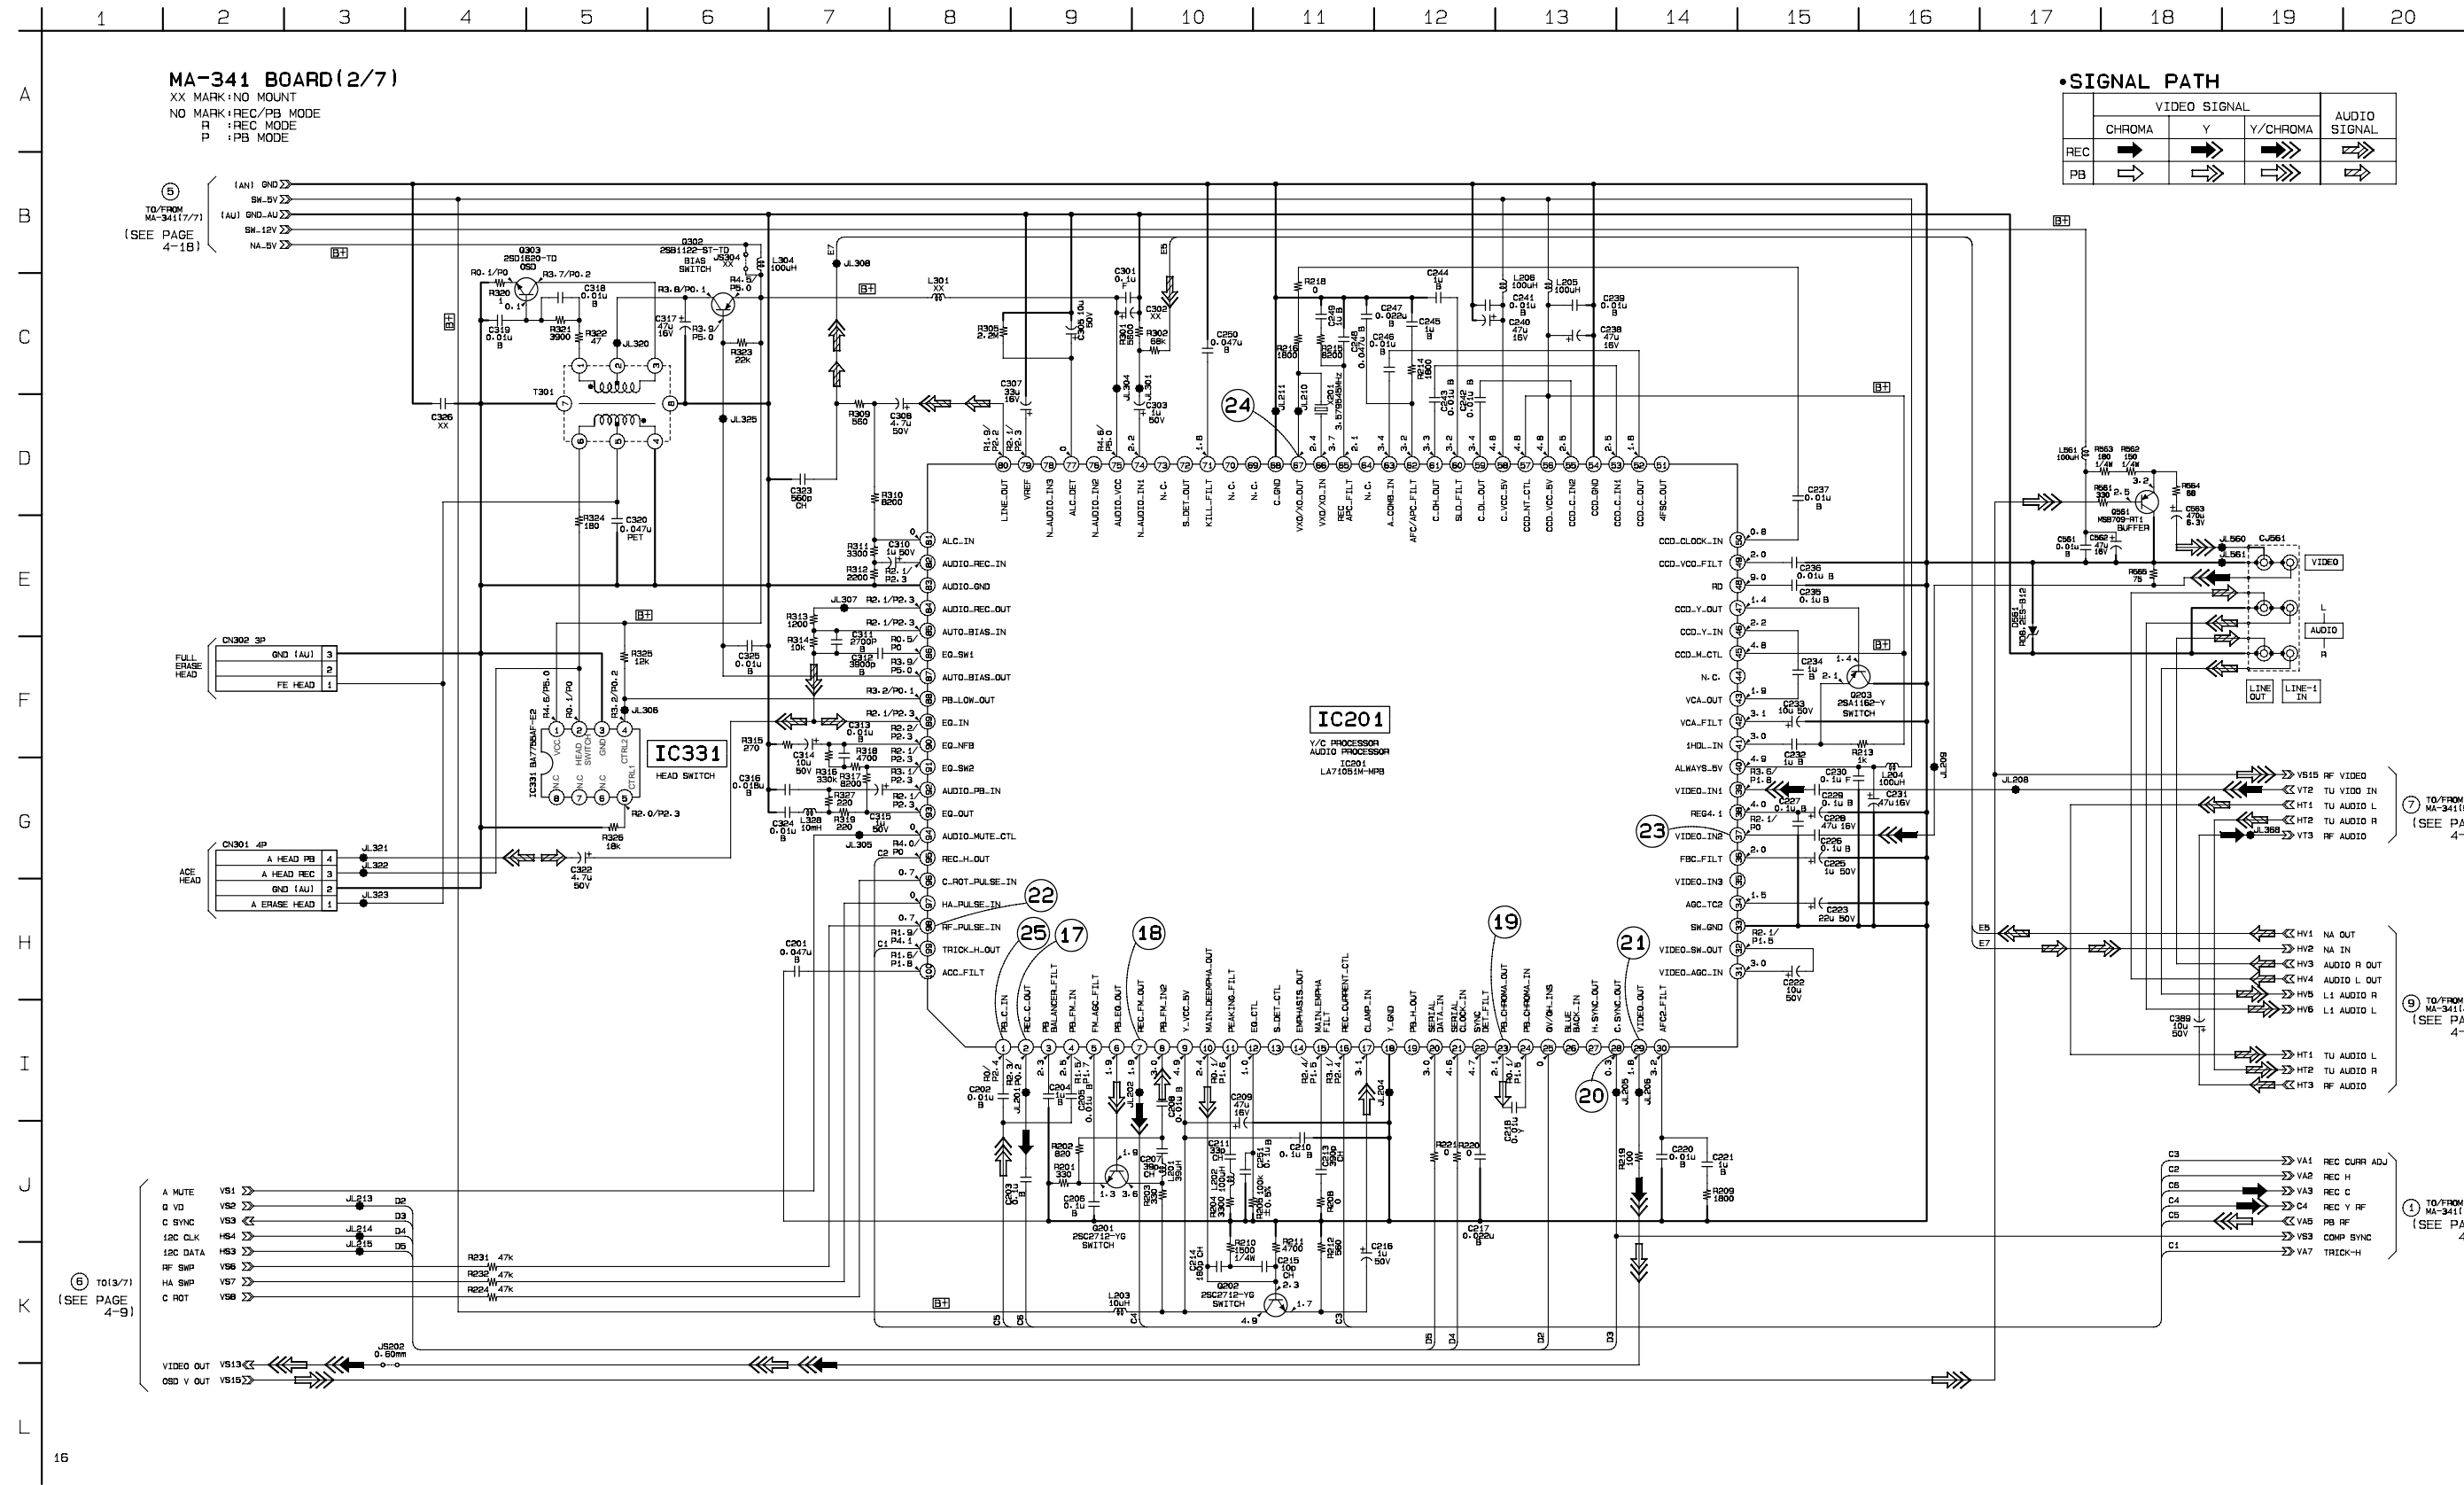

• SIGNAL PATH

	VIDEO SIGNAL			AUDIO SIGNAL
	CHROMA	Y	Y/CHROMA	
REC	→	→	→	→
PB	→	→	→	→

MA-341 BOARD (2/7)  
 XX MARK: NO MOUNT  
 NO MARK: REC/PB MODE  
 R : REC MODE  
 P : PB MODE

TO/FROM MA-341(1/7/7) (SEE PAGE 4-1B)

TO/FROM MA-341(1/7/7) (SEE PAGE 4-13)

TO/FROM MA-341(1/7/7) (SEE PAGE 4-12)


TO/FROM MA-341(1/7/7) (SEE PAGE 4-6)

MA-341(3/7) (SERVO/SYSTEM CONTROL) SCHEMATIC DIAGRAMS

— Ref. No. MA-341 Board; 1,000 Series —

For schematic diagram

- Refer to page 4-19 for printed wiring board.
- Refer to page 4-21 for waveforms.

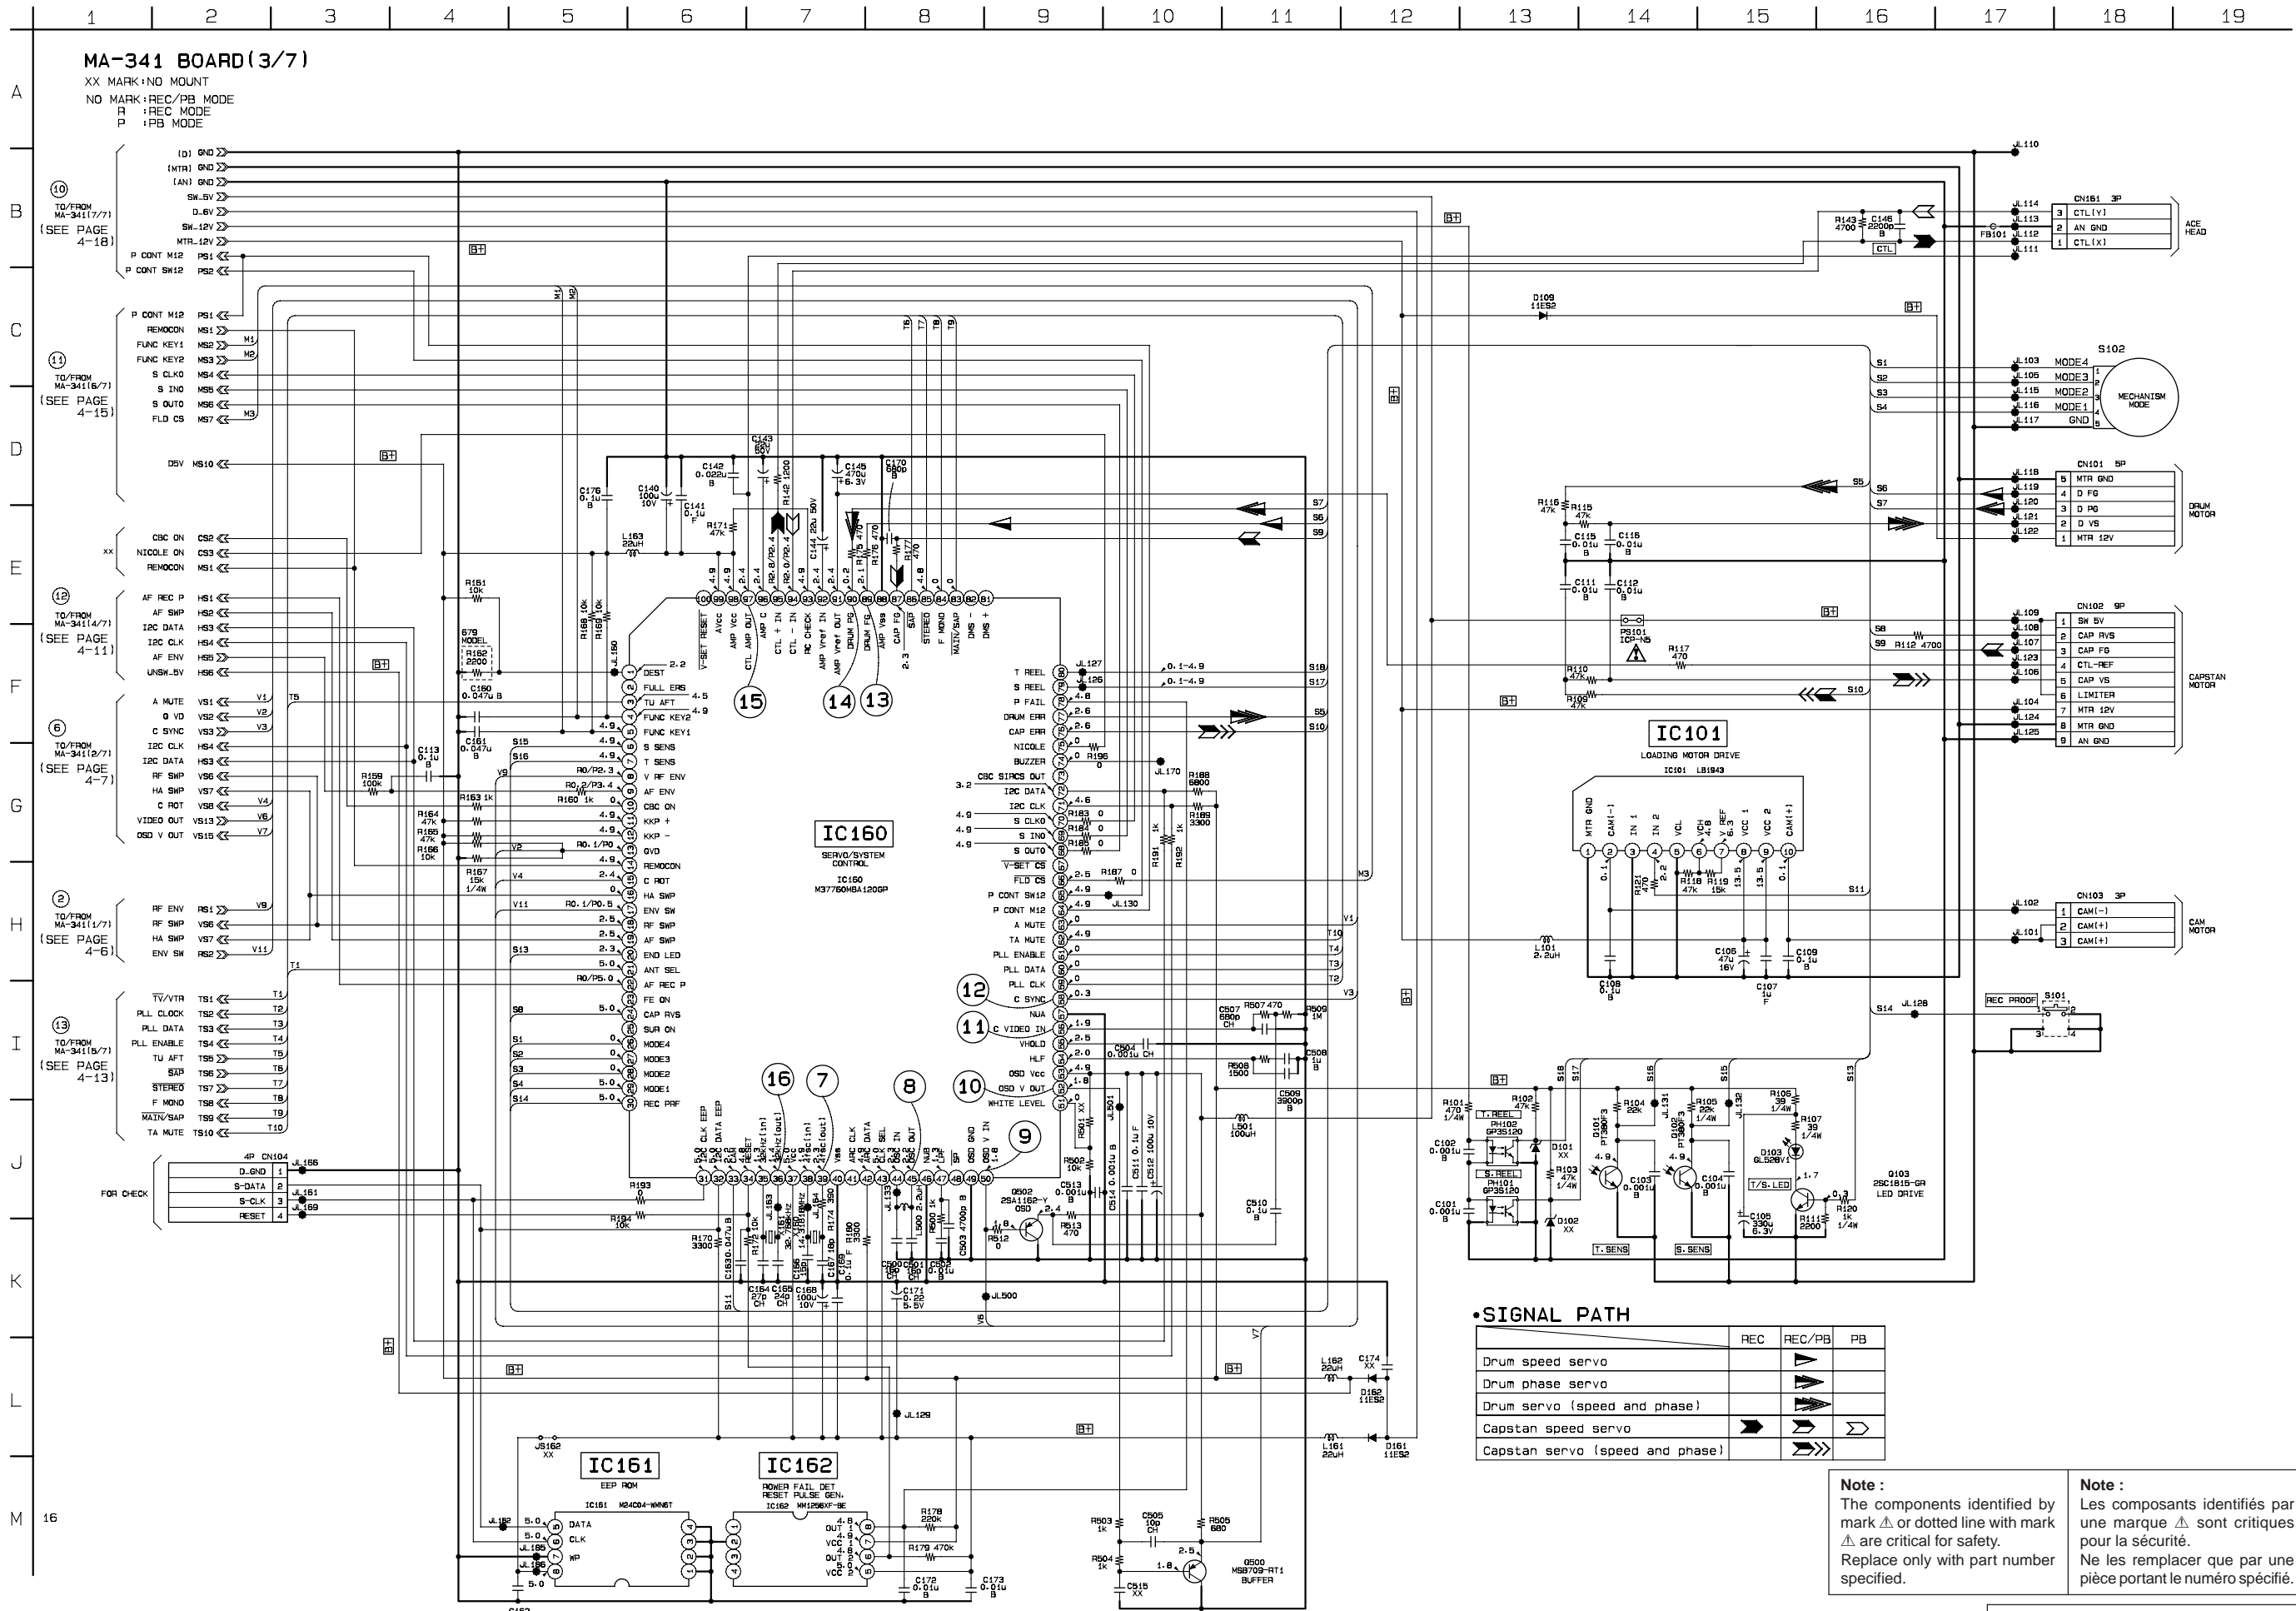

MA-341 BOARD (4/7)

XX MARK : NO MOUNT  
 NO MARK : REC/PB MODE  
 R : REC MODE  
 P : PB MODE

A

B

C

D

E

F

G

1 2 3 4 5 6 7 8 9 10 11 12 13

④ TO/FROM MA-341(1/7) (SEE PAGE 4-6)


⑫ TO/FROM MA-341(3/7) (SEE PAGE 4-9)

⑭ TO/FROM MA-341(7/7) (SEE PAGE 4-18)

⑨ TO/FROM MA-341(2/7) (SEE PAGE 4-8)


• SIGNAL PATH

	AUDIO SIGNAL
REC	➤➤➤
PB	➤➤➤

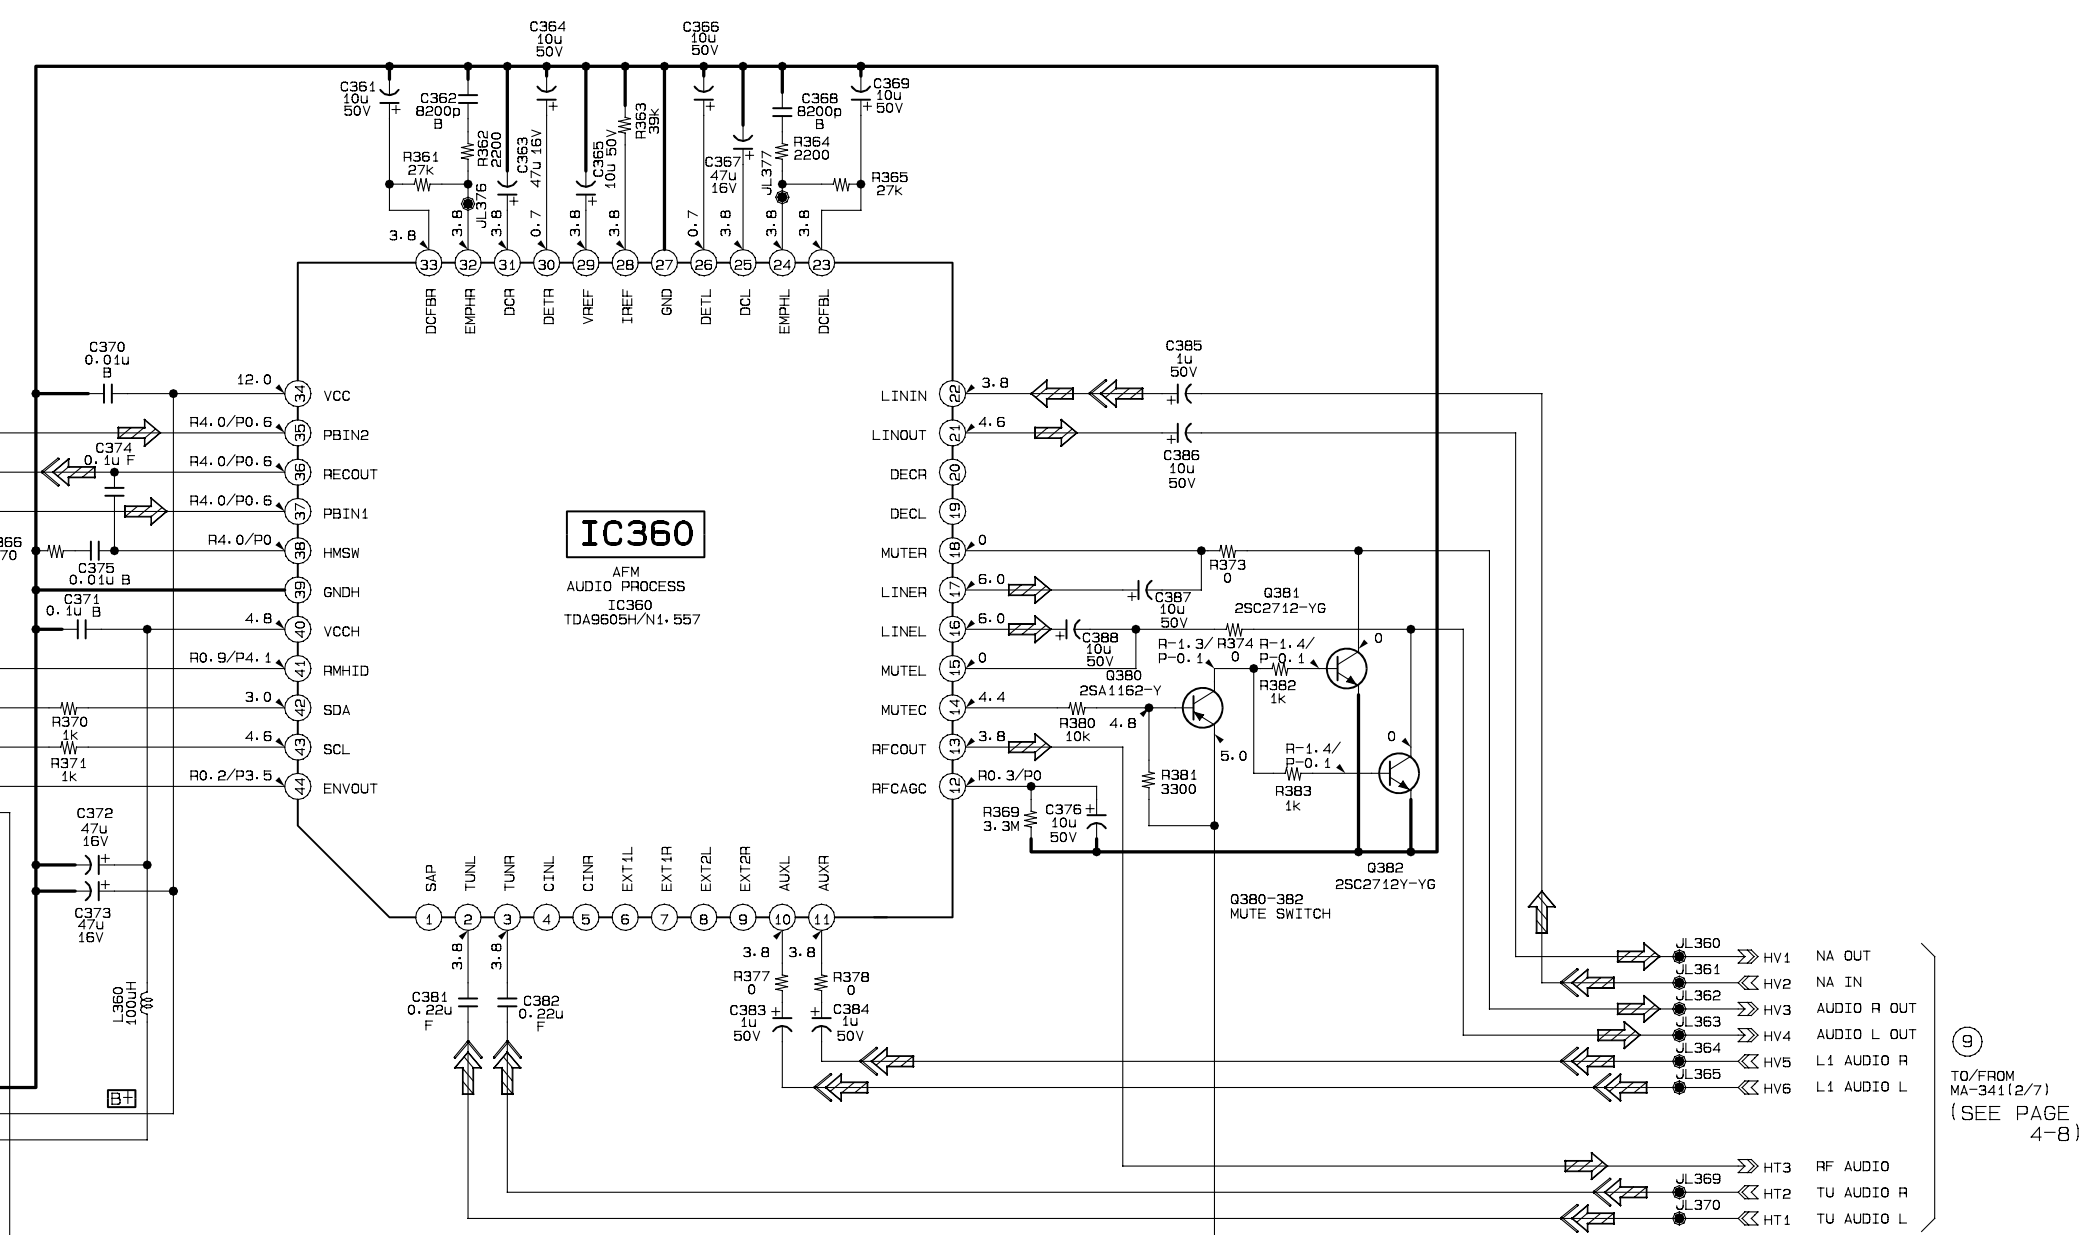

MA-341(5/7) (TUNER) SCHEMATIC DIAGRAMS  
 — Ref. No. MA-341 Board; 1,000 Series —

For schematic diagram  
 • Refer to page 4-19 for printed wiring board.

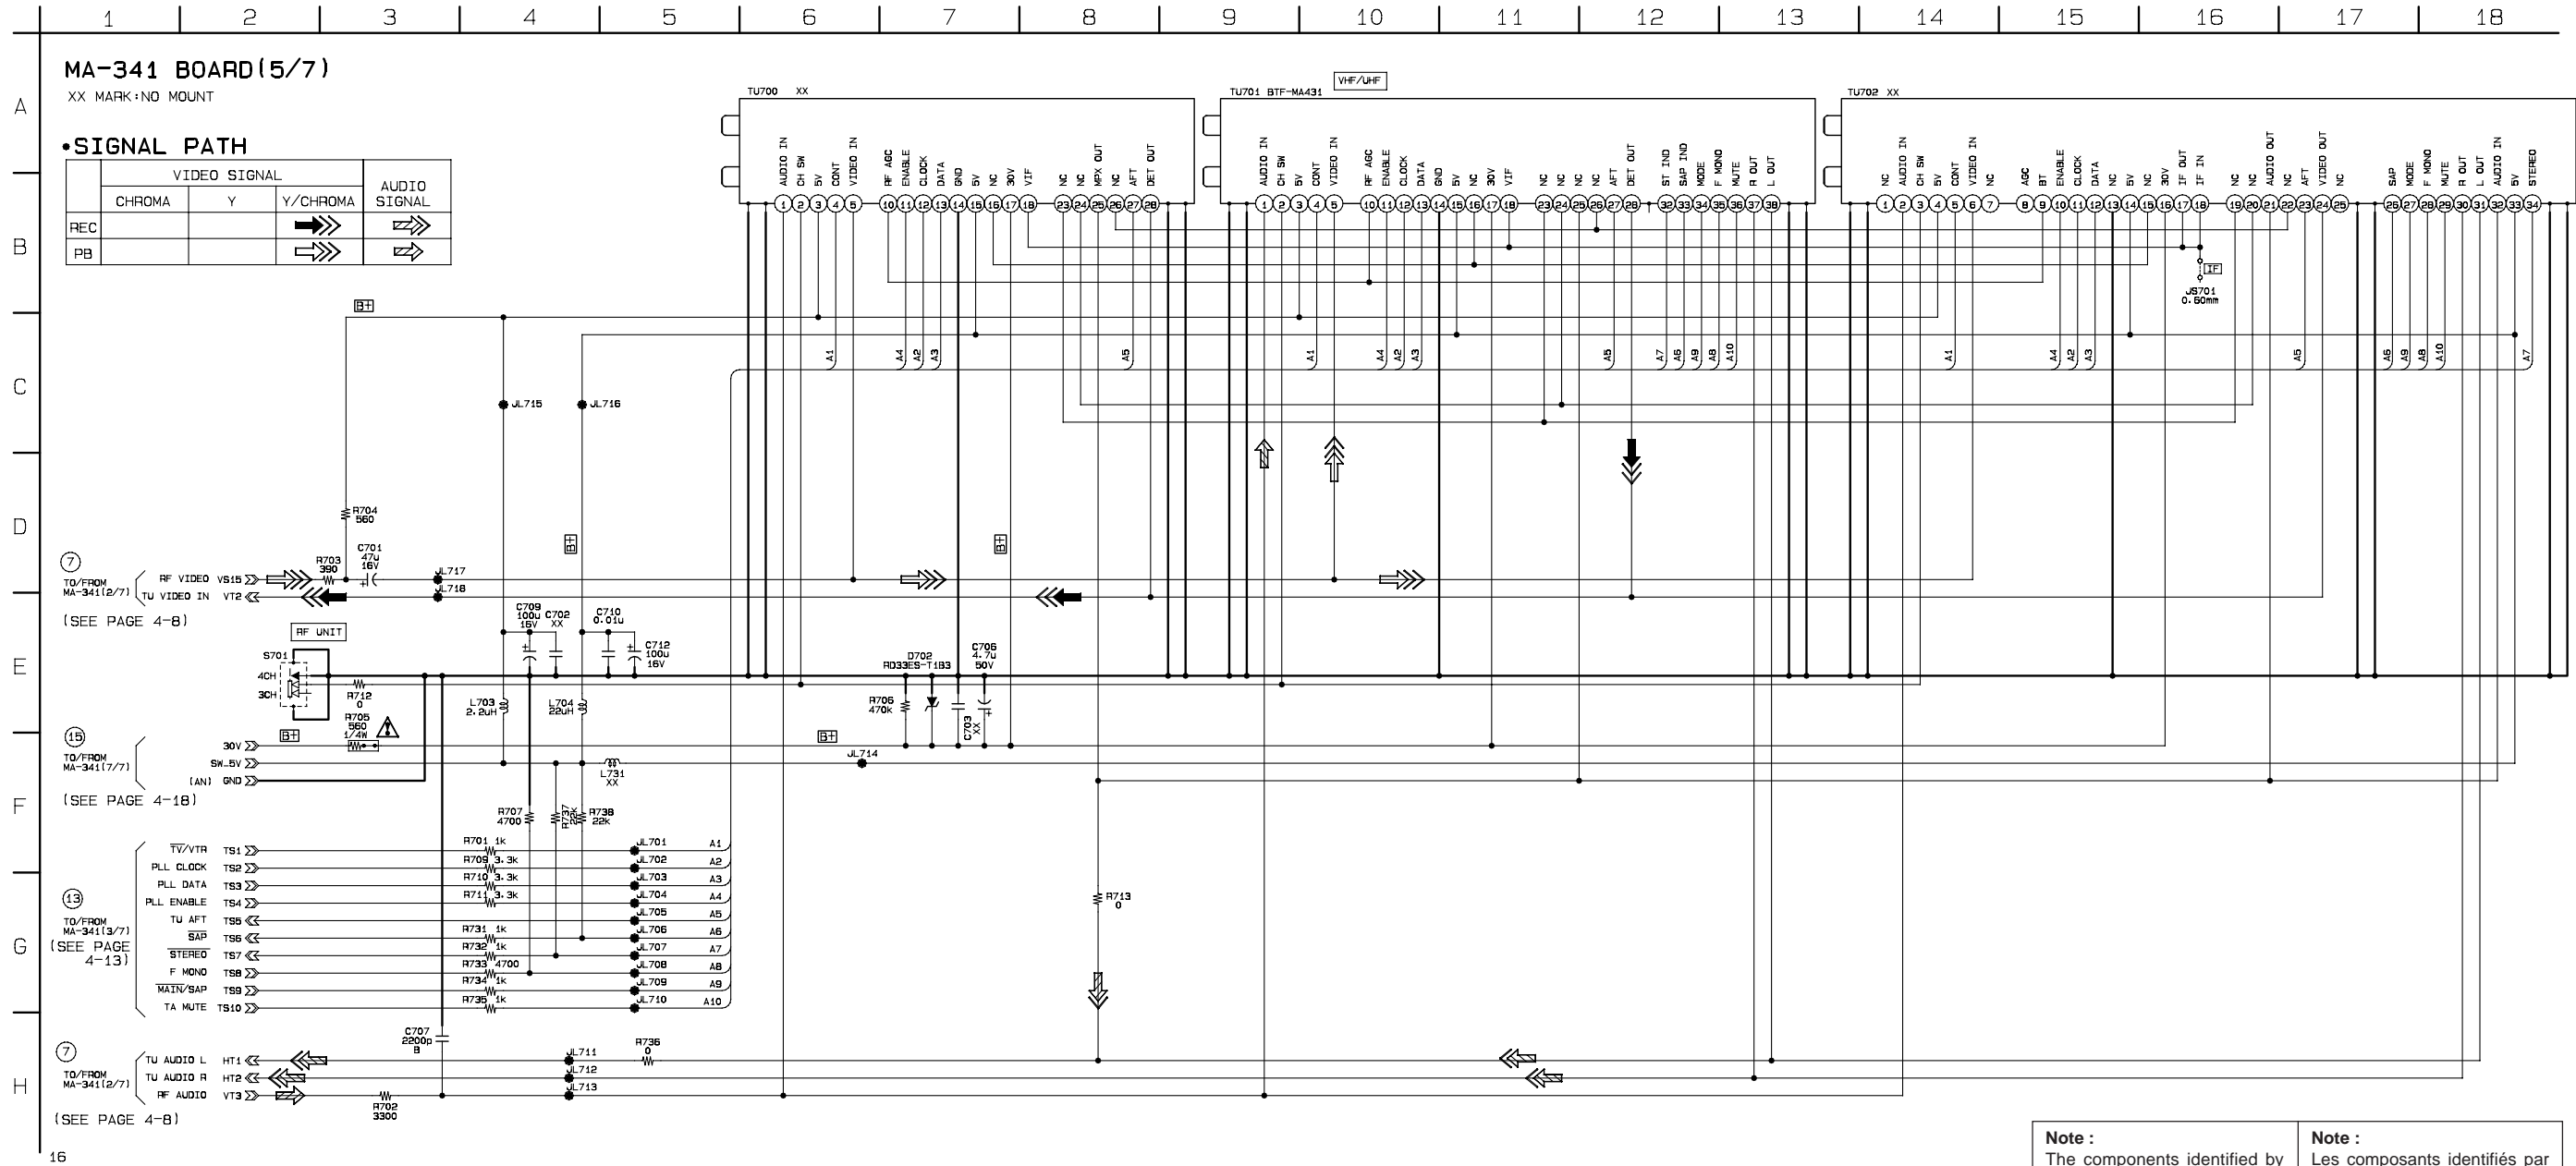

**Note :**  
 The components identified by mark  $\Delta$  or dotted line with mark  $\Delta$  are critical for safety. Replace only with part number specified.

**Note :**  
 Les composants identifiés par une marque  $\Delta$  sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.




1 2 3 4 5 6 7 8 9 10 11 12 13 14

A B C D E F G H I J

MA-341 BOARD (6/7)


XX MARK:NO MOUNT  
NO MARK:REC/PB MODE  
R : REC MODE  
P : PB MODE

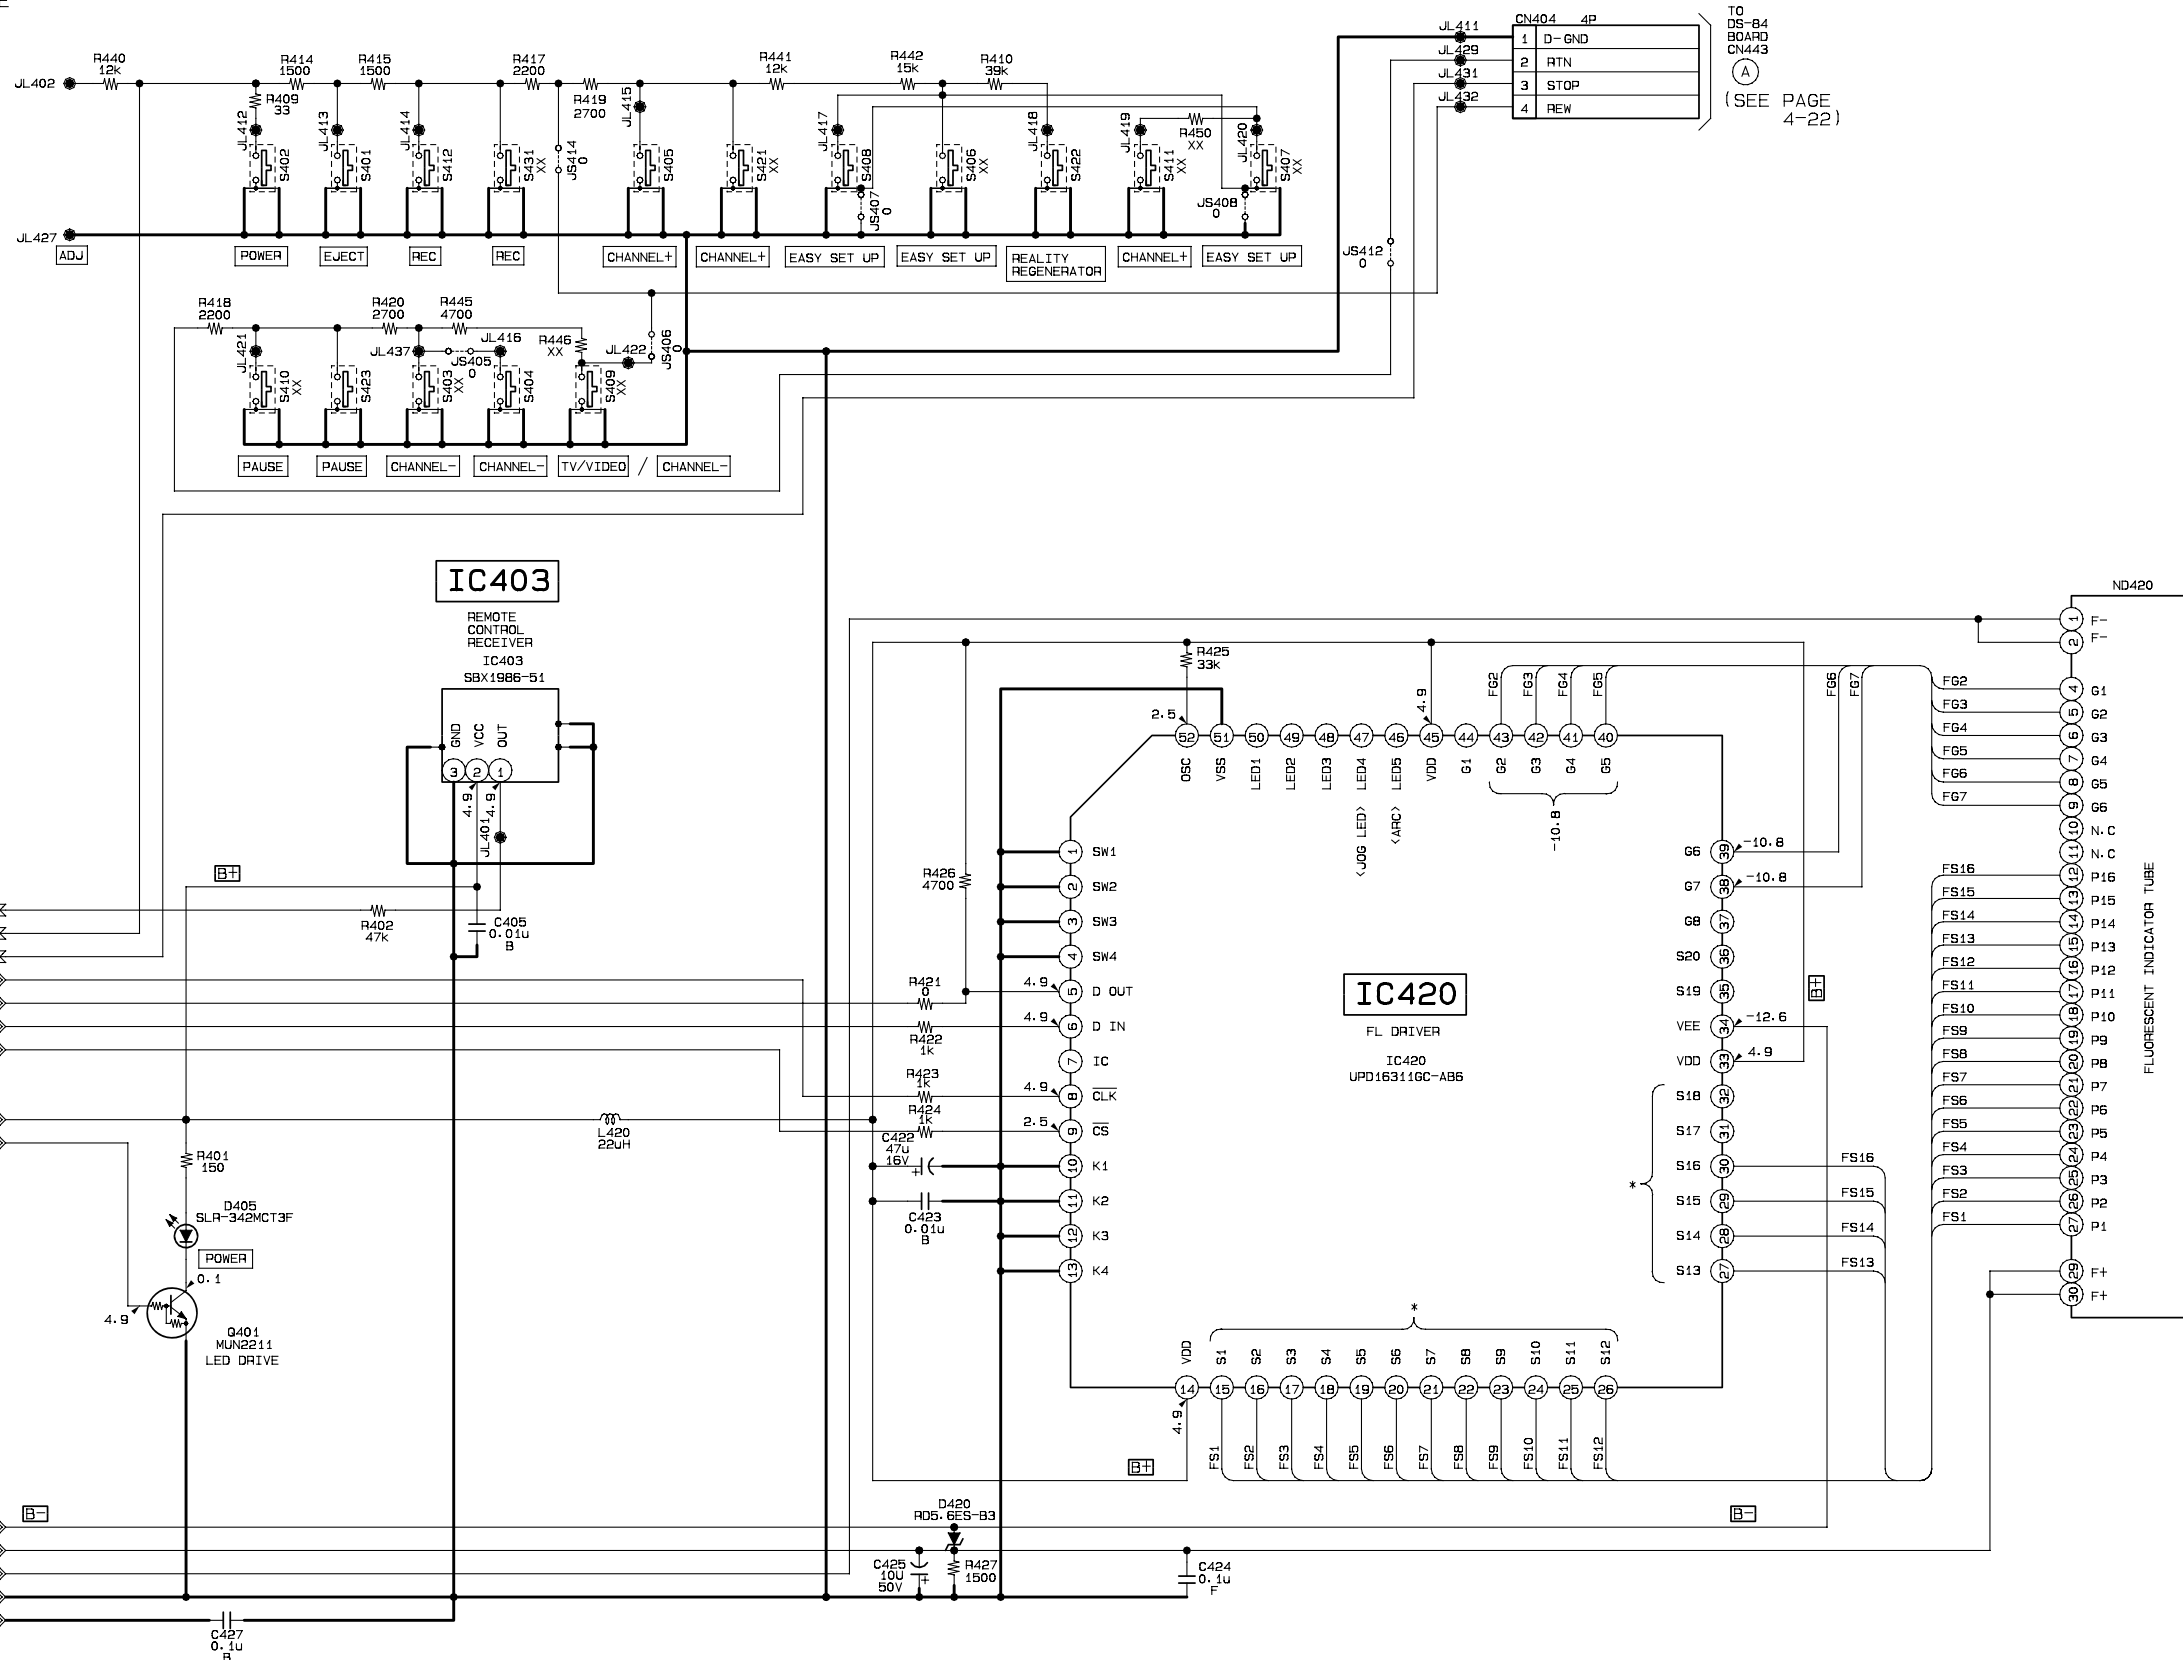

TO DS-84 BOARD CN443  
CN404 4P  
1 D-GND  
2 RTN  
3 STOP  
4 REW  
(SEE PAGE 4-22)

11 TO/FROM MA-341(3/7) (SEE PAGE 4-9)

16 TO/FROM MA-341(7/7) (SEE PAGE 4-18)

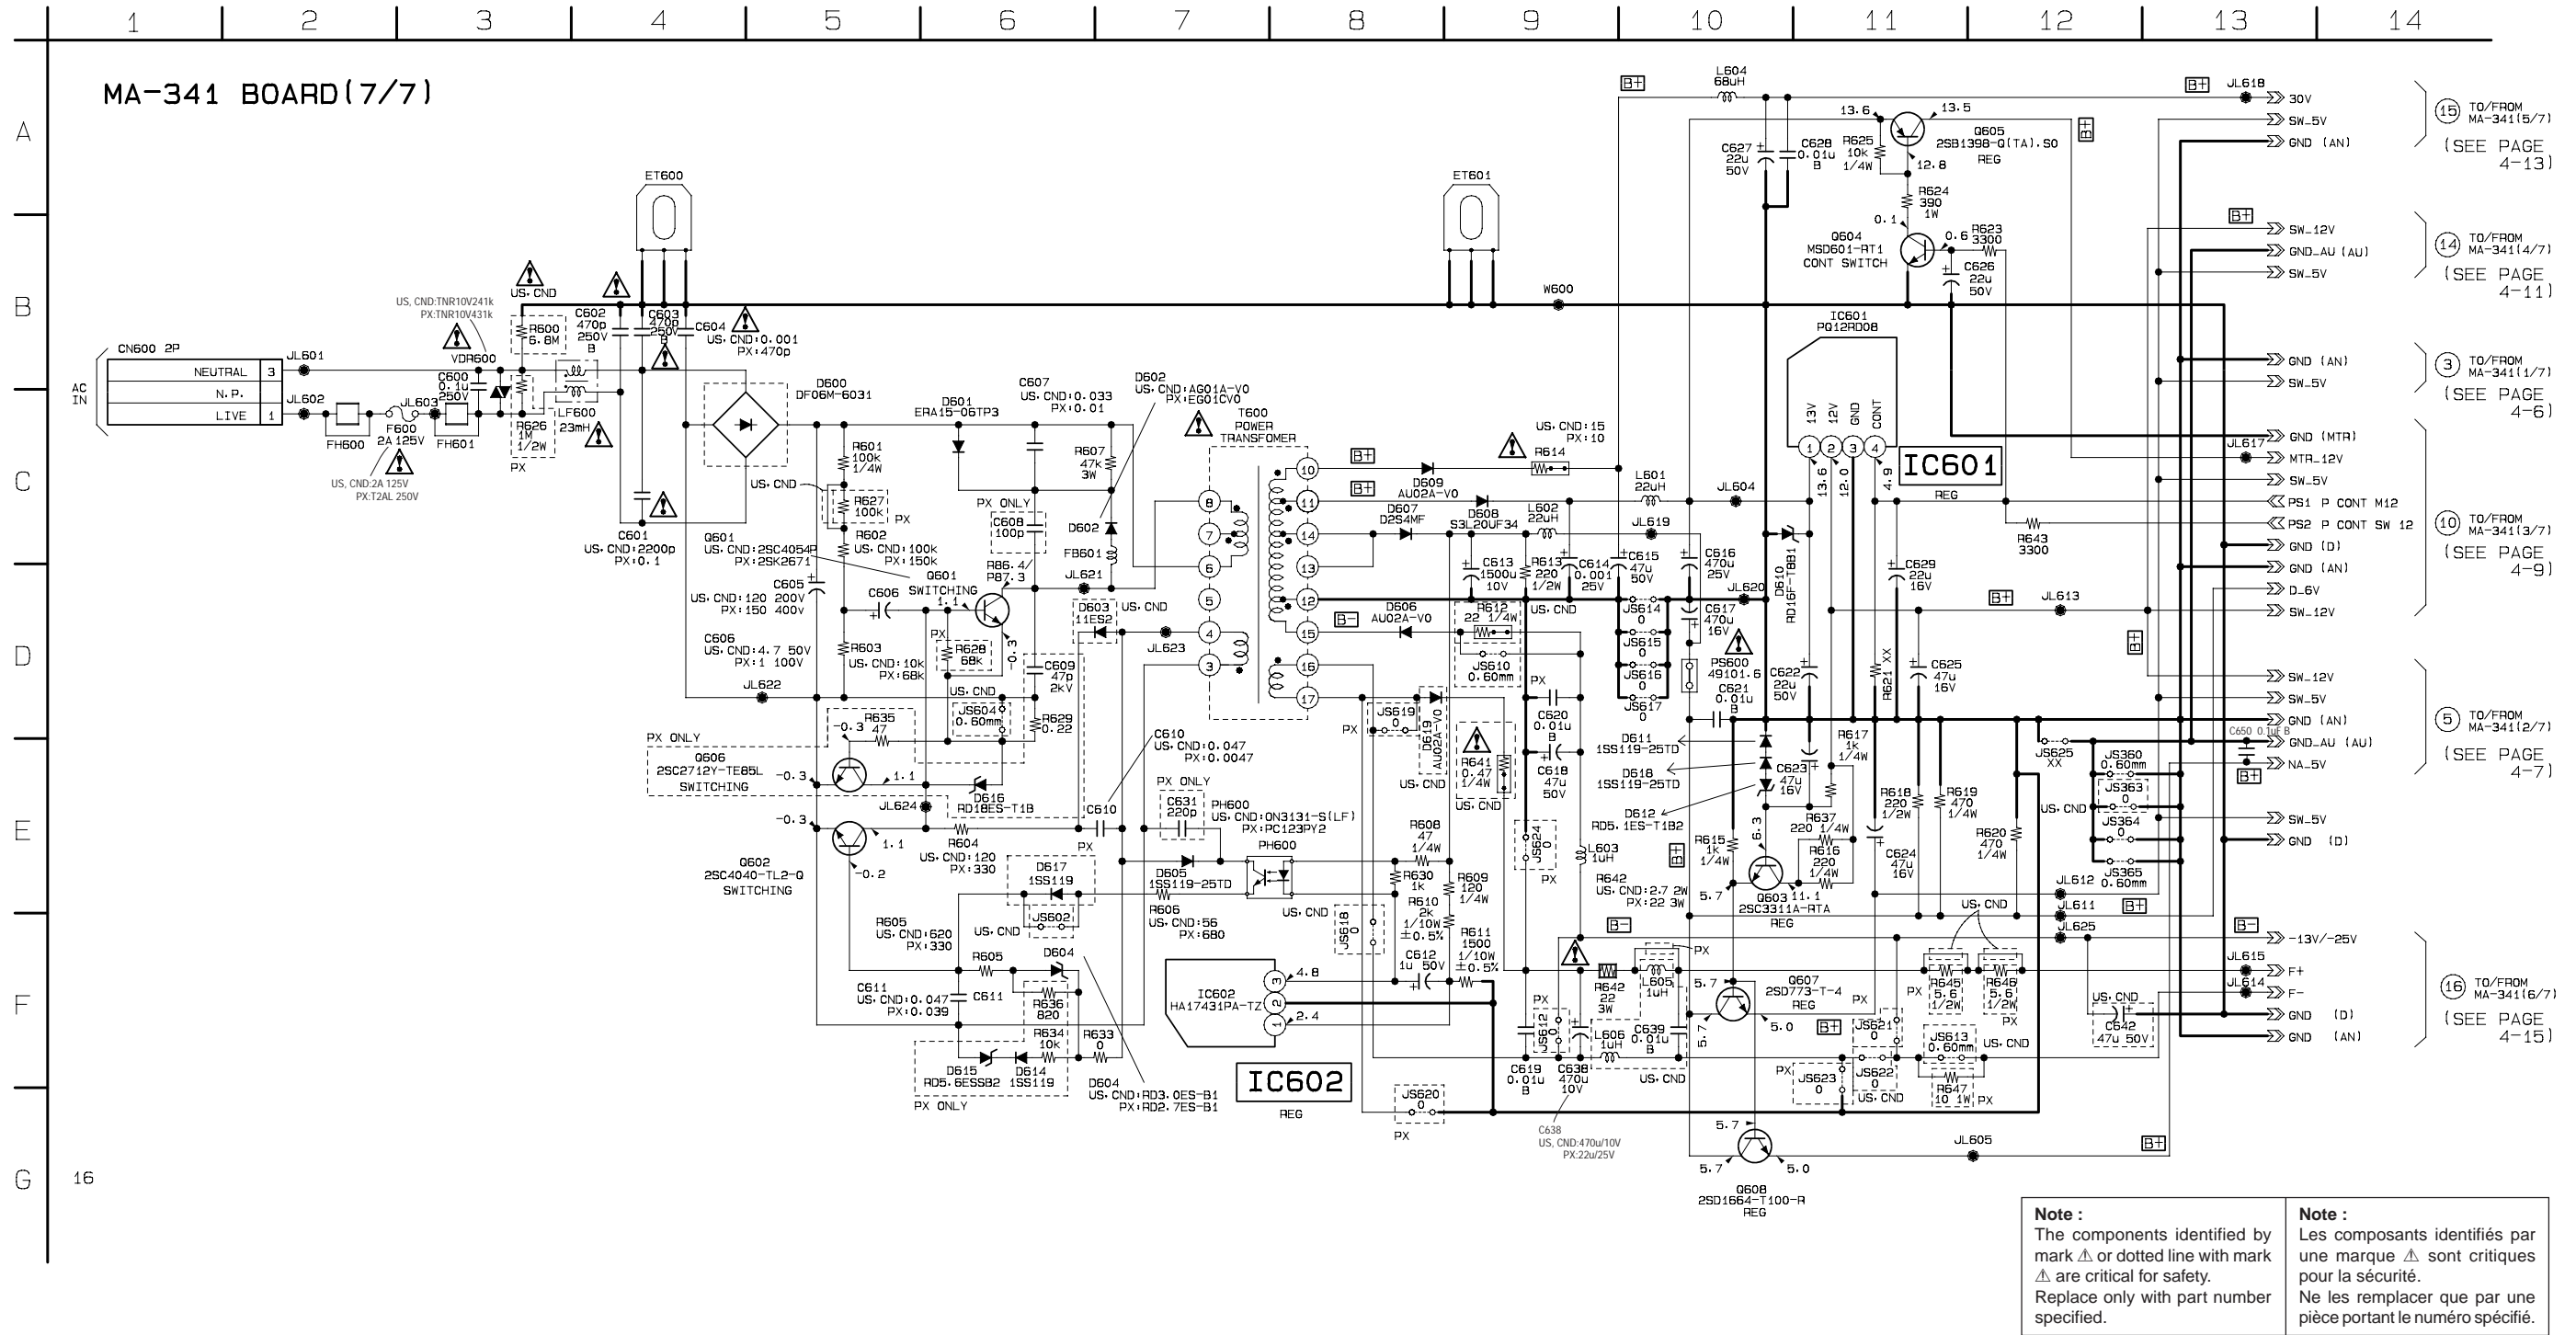

**Note :**  
 The components identified by mark  $\Delta$  or dotted line with mark  $\Delta$  are critical for safety. Replace only with part number specified.

**Note :**  
 Les composants identifiés par une marque  $\Delta$  sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.


SLV-662HF/679HF

MA-341 (VIDEO, AUDIO, SERVO/SYSTEM CONTROL, TUNER, POWER SUPPLY) PRINTED WIRING BOARD

— Ref. No. MA-341 Board; 1,000 Series —

MA-341 BOARD



There are few cases that the part printed on this diagram isn't mounted in this model.

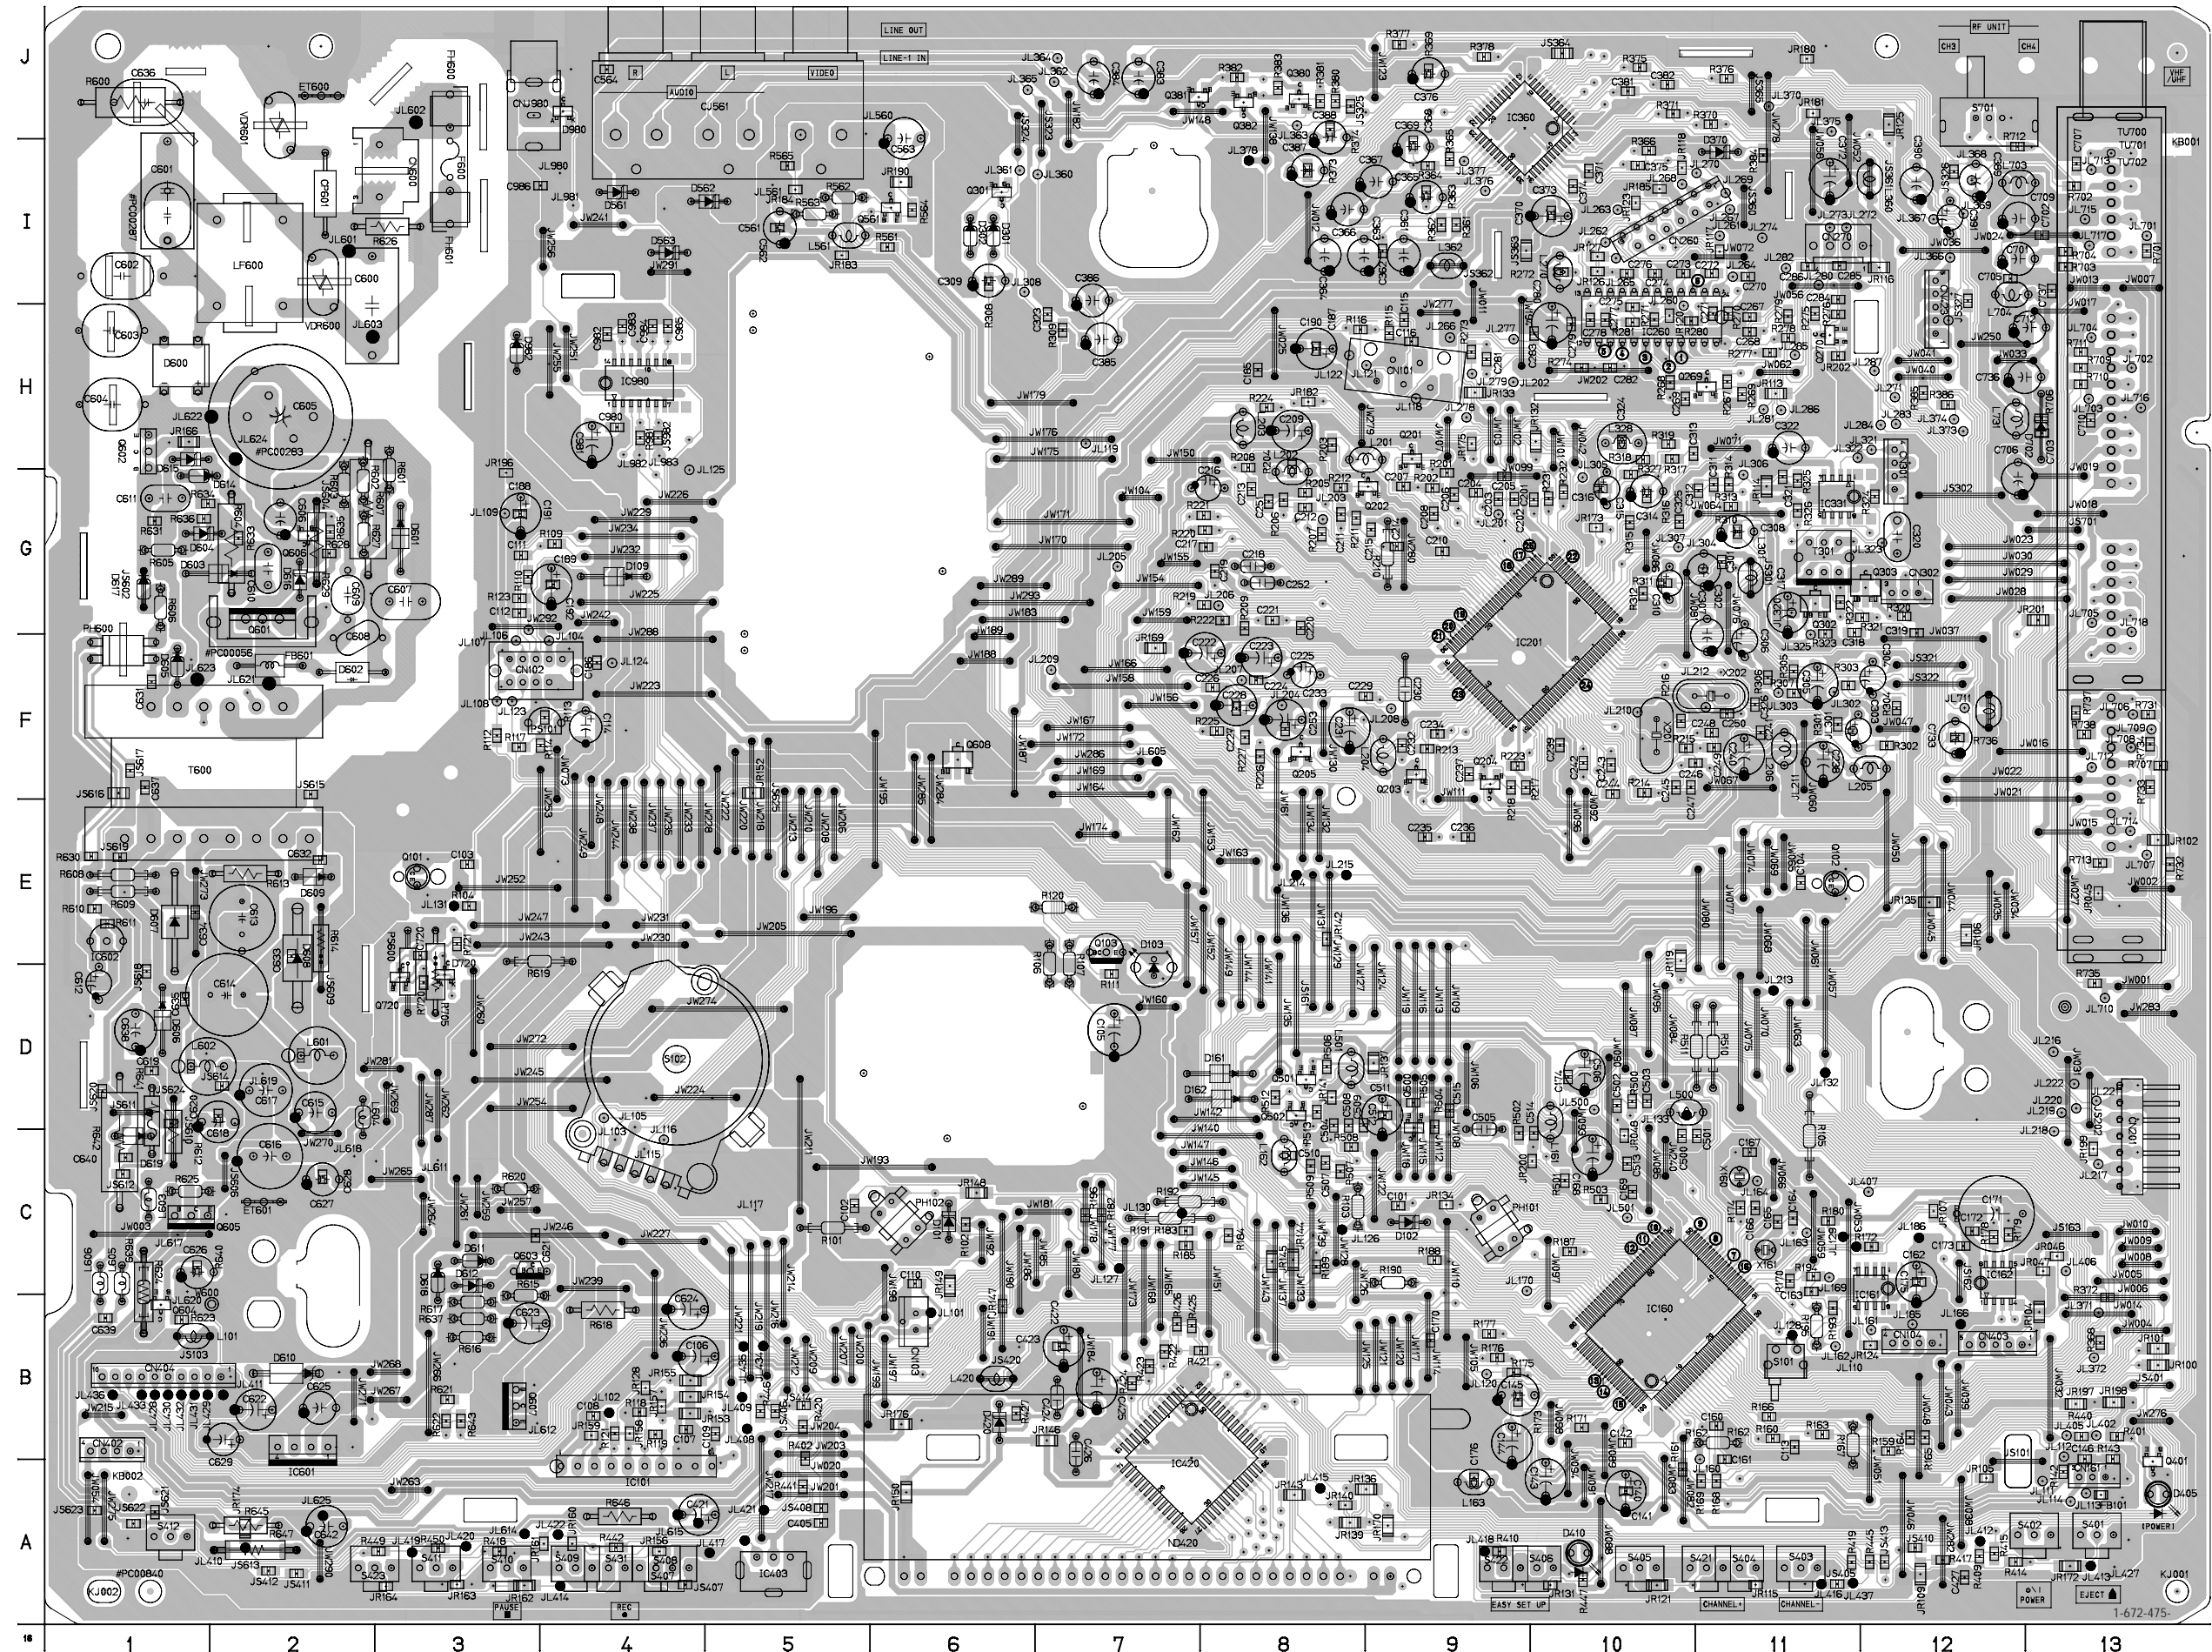

MA-341 BOARD

CN101	H-9	IC101	A-4
CN102	F-3	IC160	C-10
CN103	B-6	IC161	C-12
CN104	B-12	IC162	C-12
CN161	A-13	IC201	F-10
CN260	I-10	IC260	H-10
CN270	I-11	IC331	G-11
CN301	G-12	IC360	J-9
CN302	G-12	IC403	A-5
CN404	B-1	IC420	A-7
CN600	I-3	IC601	B-2
		IC602	E-1
D103	D-7	PH101	C-9
D109	G-4	PH102	C-6
D161	D-8	PH102	C-6
D162	D-8	PH600	F-1
D301	I-6		
D302	I-6	Q101	E-3
D405	A-13	Q102	E-11
D410	A-10	Q103	E-7
D561	I-4	Q201	H-9
D600	H-1	Q202	G-8
D601	G-3	Q203	F-9
D602	F-2	Q302	G-11
D603	G-1	Q303	G-12
D604	G-2	Q380	J-8
D605	F-1	Q381	J-7
D606	D-1	Q382	J-8
D607	E-1	Q401	A-13
D608	E-2	Q500	C-9
D609	E-2	Q502	C-8
D610	B-2	Q561	I-6
D611	C-3	Q601	G-2
D612	C-3	Q602	H-1
D614	G-2	Q603	C-3
D615	H-2	Q604	B-1
D616	G-2	Q605	C-1
D617	G-1	Q606	G-2
D618	C-3	Q607	B-3
D619	C-1	Q608	F-6
D702	H-13		

MA-341 BOARD (SERVO/SYSTEM CONTROL BLOCK)

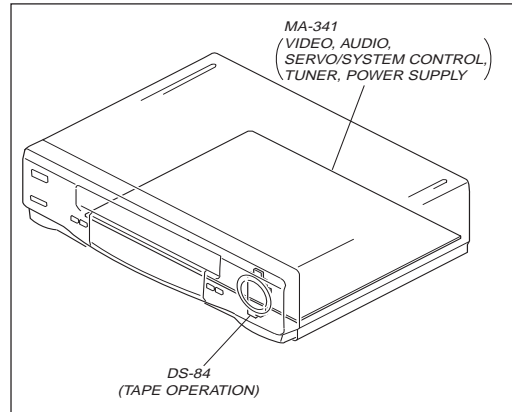
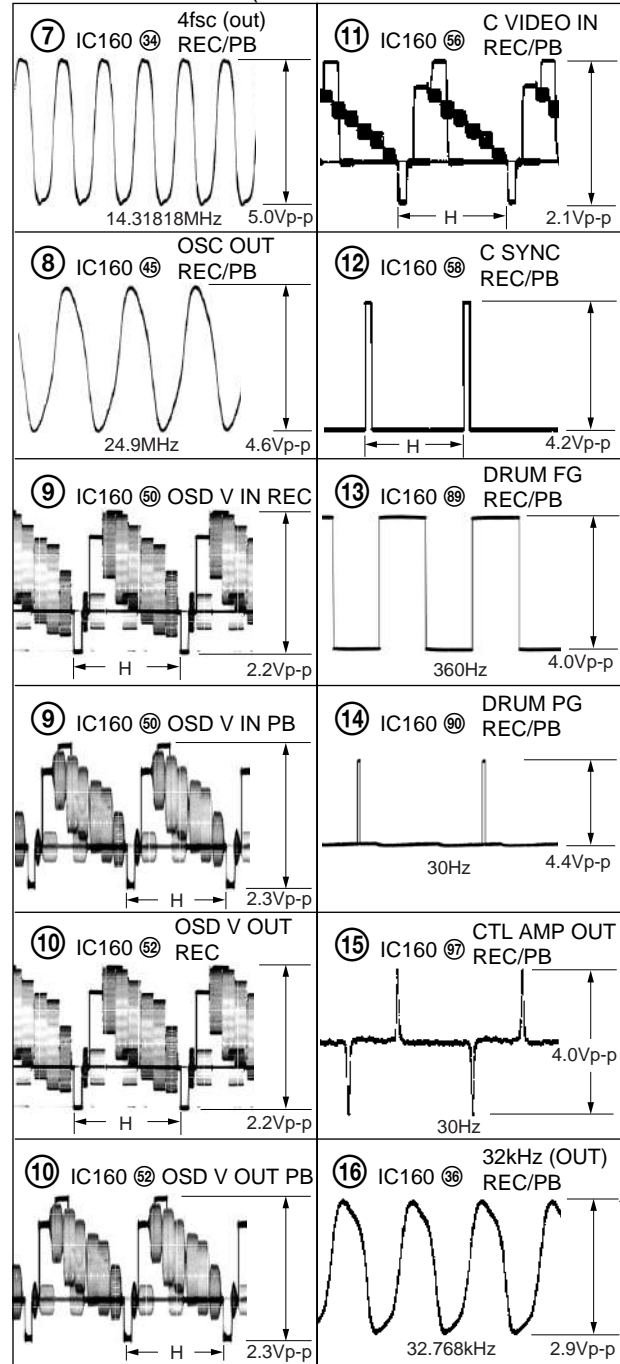


DS-84 (TAPE OPERATION) PRINTED WIRING BOARD

— Ref. No. DS-84 Board; 2000 Series —


There are few cases that the part printed on this diagram isn't mounted in this model.

DS-84 BOARD

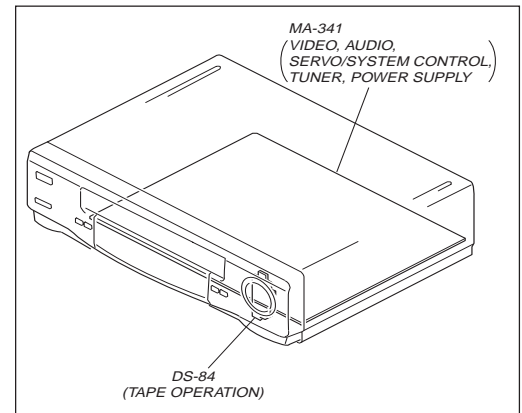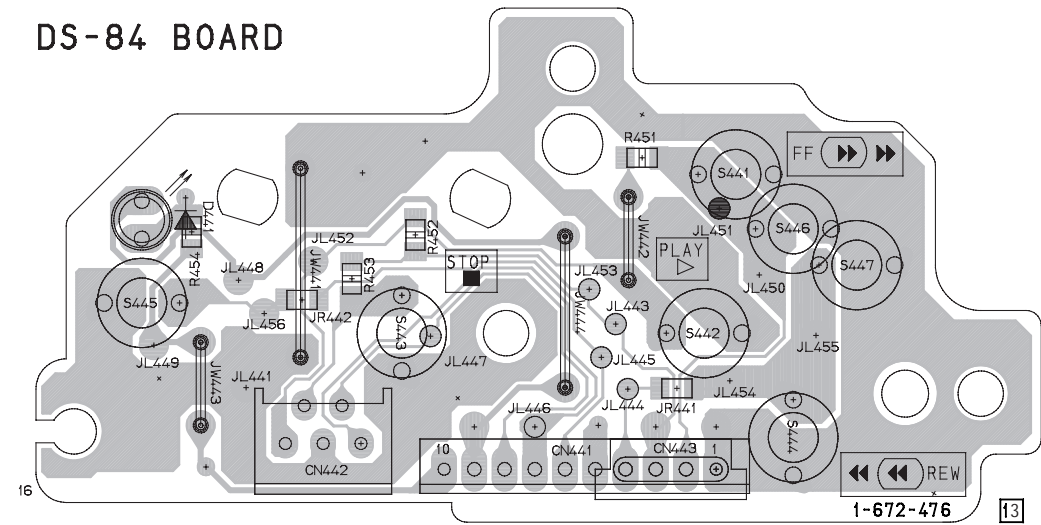

DS-84 (TAPE OPERATION) SCHEMATIC DIAGRAMS

— Ref. No. DS-84 Board ; 2000 Series —

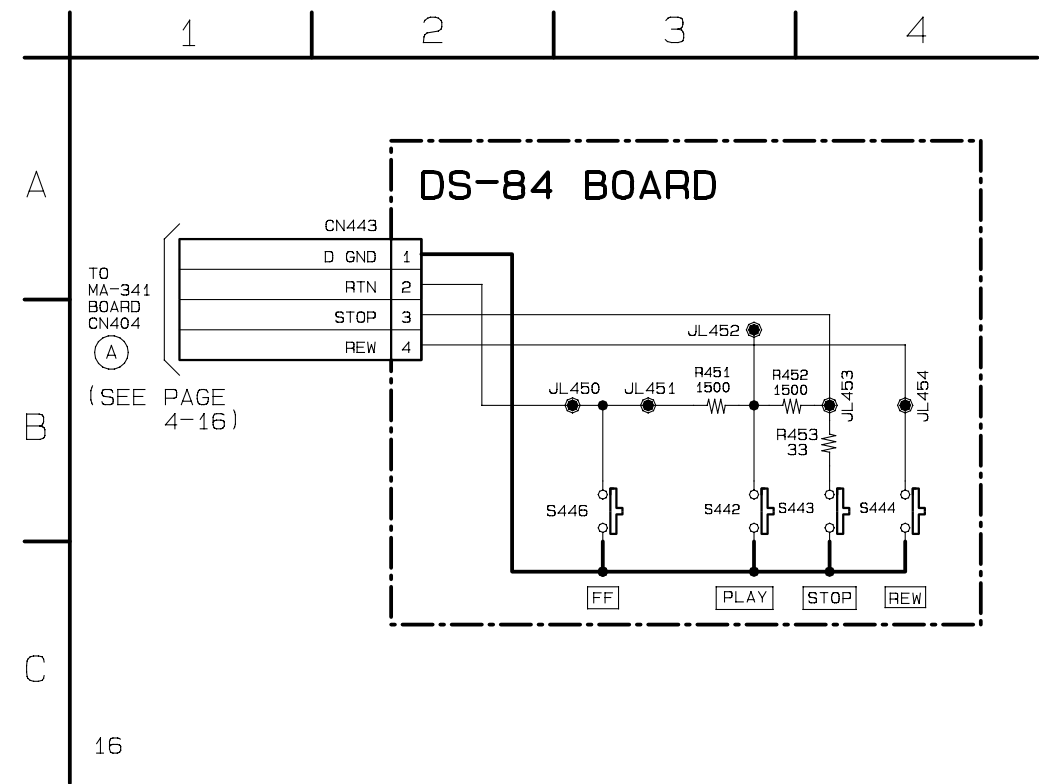

## SECTION 5 INTERFACE, IC PIN FUNCTION DESCRIPTION

### 5-1. SYSTEM CONTROL — MECHANISM BLOCK INTERFACE (MA-341 BOARD IC160)

Signal	Pin No.	I/O	EJECTED	CASSETTE LOADING	CASSETTE UNLOADING	TAPE THREADING	TAPE UNTEREADING	STOP	FF	REW	PB	REC
CAM	MA-341 Board IC160 <sup>33</sup>	O	*5	H	L	H	L	*5	*5	*5	*5	*5
MODE 1	MA-341 Board IC160 <sup>29</sup>	I	—	—	—	—	—	H	H	H	H	H
MODE 2	MA-341 Board IC160 <sup>28</sup>	I	—	—	—	—	—	L	L	L	H	H
MODE 3	MA-341 Board IC160 <sup>27</sup>	I	—	—	—	—	—	H	H	H	L	L
MODE 4	MA-341 Board IC160 <sup>26</sup>	I	—	—	—	—	—	H	L	L	L	L
REC PRF	MA-341 Board IC160 <sup>30</sup>	I	L	*1	*1	*1	*1	*1	*1	*1	*1	*1
T REEL	MA-341 Board IC160 <sup>60</sup>	I	H/L	H/L	H/L	H/L	H/L	H/L	*2	*2	*2	*2
S REEL	MA-341 Board IC160 <sup>79</sup>	I	H/L	H/L	H/L	*2	*2	H/L	*2	*2	*2	*2
END LED	MA-341 Board IC160 <sup>20</sup>	O	L	*3	*3	*3	*3	*3	*3	*3	*3	*3
T SENS	MA-341 Board IC160 <sup>7</sup>	I	*3	*3	*3	*4	*4	*4	*4	*4	*4	*4
S SENS	MA-341 Board IC160 <sup>6</sup>	I	*3	*3	*3	*4	*4	*4	*4	*4	*4	*4

- \*1 "L" When erasing protection tab is bent. "H" when not bent.  
 \*2 Pulse of period in proportion to reel rotating speed.  
 \*3 Approx. 2 msec period "H" pulse when tape top or end is detected.  
 \*4 Normally "L". 2 msec period "H" pulse when tape top or end is detected.  
 \*5 Hi-Z

### 5-2. SYSTEM CONTROL — SERVO PERIPHERAL CIRCUIT INTERFACE (MA-341 BOARD IC160)

Signal	Pin No.	I/O	STOP	FF	REW	TAPE THREADING	TAPE UNTEREADING	PB	REC
CTL IN+	MA-341 Board IC160 <sup>95</sup>	O	*7	*7	*7	*7	*7	*7	*1
DRUM PG	MA-341 Board IC160 <sup>90</sup>	I	*3	*3	*3	*3	*3	*3	*3
DRUM FG	MA-341 Board IC160 <sup>89</sup>	I	*4	*4	*4	*4	*4	*4	*4
CAP FG	MA-341 Board IC160 <sup>87</sup>	I	H/L	*2	*2	*5	*5	*2	*2
CAP RVS	MA-341 Board IC160 <sup>24</sup>	O	H/L	L	H	L	H	L	L
CAP ERR	MA-341 Board IC160 <sup>76</sup>	O	L	*6	*6	*6	*6	*6	*6
DRUM ERR	MA-341 Board IC160 <sup>77</sup>	O	*6	*6	*6	*6	*6	*6	*6

- \*1. 30Hz pulse.  
 \*2. Pulse of period in proportion to tape speed.  
 \*3. 30Hz "H" pulse.  
 \*4. 720 Hz pulse.  
 \*5. Unstable period pulse.  
 \*6. DC voltage 1 – 5V.  
 \*7. Hi-Z (2.5V)

### 5-3. SYSTEM CONTROL — SYSTEM CONTROL PERIPHERAL CIRCUIT INTERFACE (MA-341 BOARD IC160)

Signal	Pin No.	I/O	I/O level
RESET	MA-341 Board IC160 <sup>34</sup>	I	Normally "H", "L" when service interruption detected or restored.
I2C DATA 1	MA-341 Board IC160 <sup>32</sup>	I/O	Serial communication data to EEPROM I2C161.
I2C CLOCK 1	MA-341 Board IC160 <sup>31</sup>	O	Serial communication clock to EEPROM I2C161.
I2C DATA VIDEO	MA-341 Board IC160 <sup>72</sup>	I/O	Serial communication data to video and audio microprocessor.
I2C CLOCK VIDEO	MA-341 Board IC160 <sup>71</sup>	O	Serial communication clock to video and audio microprocessor.
(ARC) S OUT 1	MA-341 Board IC160 <sup>42</sup>	I/O	Serial communication data to ARC microprocessor.
(ARC) CLK 1	MA-341 Board IC160 <sup>41</sup>	O	Serial communication clock to ARC microprocessor.

### 5-4. SYSTEM CONTROL AND RF MODULATOR — INPUT SELECTION BLOCK INTERFACE (MA-341 BOARD IC160)

Signal	Pin No.	I/O	I/O level
ANT SEL	MA-341 Board IC160 <sup>21</sup>	O	"L" when RF modulator through.

### 5-5. SYSTEM CONTROL — VIDEO/RP BLOCK INTERFACE (MA-341 BOARD IC160)

Signal	Pin No.	I/O	STOP/FF /REW	TAPE LOADING	TAPE UNLOADING	PB	REC	REC PAUSE
RF SWP	MA-341 Board IC160 <sup>18</sup>	O	*1	*1	*1	*1	*1	*1
QVD	MA-341 Board IC160 <sup>13</sup>	O	L	L	L	*2	L	L
C SYNC	MA-341 Board IC160 <sup>33</sup>	I	*3	*3	*3	*3	*3	*3

\*1. Synchronized with drum rotation, 30Hz 50% duty pulse.

\*2. Normal "L", "H" when video signal is not regenerated.

\*3. Composite sync signal (positive).

### 5-6. SYSTEM CONTROL — AUDIO BLOCK INTERFACE (MA-341 BOARD IC160)

Signal	Pin No.	I/O	STOP/FF /REW	TAPE LOADING	TAPE UNLOADING	PB	REC	REC PAUSE
A MUTE	MA-341 Board IC160 <sup>36</sup>	O	L	L	L	L	L	H
AF REC P	MA-341 Board IC160 <sup>22</sup>	O	L	L	L	L	L	H

- Abbreviation  
CND: Canadian

## 5-7. SERVO/SYSTEM CONTROL MICROPROCESSOR PIN FUNCTIONS (MA-341 BOARD IC160)

Pin No.	Pin Name	I/O	Function
1	DEST	I	Destination control input
2	FULL ERS		NC
3	TU AFT	I	Tuner analog AFT input
4	FUNC KEY2	I	Key input
5	FUNC KEY1	I	Key input
6	S SENS	I	Tape end sensor input
7	T SENS	I	Tape top sensor input
8	V RF ENV	I	Video playback signal envelope input
9	AF ANV	I	Hi-Fi audio playback signal envelope input
10	CBC ON	O	Cable box control signal output
11	KKP+	I	ETR pulse signal input
12	KKP-	I	ETR pulse signal input
13	QVD	O	Quasi VD pulse output
14	REMOCON	I	Remote sires signal input
15	C ROT	O	Head AZ signal output
16	HA SWP	O	SP/EP changed head signal
17	ENV SW	I	SP/EP head output lebel ditaction signal
18	RF SWP	O	VIDEO RF switching pulse output.
19	AF SWP	O	AF switching pulse output.
20	END LED	O	END sensor LED output
21	ANT SEL	O	TV/VTR RF modulator control output
22	AF REC P	O	Hi-Fi record control pulse output.
23	FE ON		NC
24	CAP RVS	O	Capstan reverse control
25	SUR ON		NC
26	MODE4	I	Mechanism section CAM encoder input (data4)
27	MODE3	I	Mechanism section CAM encoder input (data3)
28	MODE2	I	Mechanism section CAM encoder input (data2)
29	MODE1	I	Mechanism section CAM encoder input (data1)
30	REC PRF	I	Erasing protection tab, cassette IN detection input
31	I2C CLK EEP	I/O	HC CLOCK line (EEPROM)
32	I2C DATA EEP	I/O	HC DATA line (EEPROM)
33	CAM	O	Cam motor control signal output
34	RESET	I	System reset input
35	32kHz (in)	I	Sub clock 32MHz
36	32kHz (out)	O	Sub clock 32MHz
37	Vcc	I	5V
38	4fsc (in)	I	Main clock input
39	4fsc (out)	O	Main clock output
40	Vss		Ground
41	ARC CLK	O	Rearityregenerator (ARC) control clock signal
42	ARC DATA	O	Rearityregenerator (ARC) control data signal
43	CLK SEL	I	CLOCK seale "L" Sub clock, "H" main and sub clock.
44	OSC IN	I	OSD clock input
45	OSC OUT	O	OSD clock output
46	NUB		Ground
47	LPF	I/O	fsc filter
48	SP	O	"L" output when SP mode.
49	OSD GND		Ground
50	OSD V IN	I	OSD Video signal input.

Pin No.	Pin Name	I/O	Function
51	WHITE LEVEL	I	White level signal input
52	OSD V OUT	O	OSD Video signal output
53	OSD Vcc		SW 5V (OSD block)
54	HLF	I/O	External low-pass filter for slicer/AFC is connected to this terminal
55	V HOLD	I/O	External capacitor for slicer is connected to this terminal
56	C VIDEO IN	I	Control video signal input (osd, tuner, sorvo)
57	NUA		D Ground
58	C SYNC	I	Composite sync input
59	PLL CLK	O	Tuner PLL clock output
60	PLL DATA	O	Tuner PLL data output
61	PLL ENABLE	O	Tuner enable output
62	TA MUTE	O	Tuner audio mute output
63	A MUTE	O	AUDIO mute output
64	P CONT M12	O	Motor 12V control output
65	P CONT SW12	O	SW 12V control output
66	FLD CS	O	FLD drive chip select signal output
67	V-SET CS	O	V-set micon chip select signal output
68	S OUT0	O	Serial communication signal (FLD, V-SET)
69	S IN 0	I	Serial communication signal (FLD, V-SET)
70	S CLK 0	O	Serial communication signal (FLD, V-SET)
71	I2C CLK	I/O	IIC clock signal (VIDEO, HiFi)
72	I2C DATA	I/O	IIC data signal (VIDEO, HiFi)
73	CBC SIRCS OUT	O	Cable mouse sircs signal output
74	BUZZER		NC
75	NICOLE	O	Timing signal output
76	CAP ERR	O	Capstan error D/A output
77	DRUM ERR	O	Drum error D/A output
78	P FAIL	I	Power fail detection input
79	S REEL	I	Supply reel sensor input
80	T REEL	I	Take up reel sensor input
81	DMS+	I	DMS control input
82	DMS-	I	DMS control input
83	MAIN/SAP	O	Tuner MAIN/SAP select signal
84	F MONO	O	Tuner audio normal select
85	STEREO	I	Tuner Stereo detection "L" when Stereo mode.
86	SAP	I	Tuner SAP detection "L" when SAP mode.
87	CAP FG	I	Capstan FG signal input
88	AMP Vss		Ground
89	DRUM FG	I	Drum FG input.
90	DRUM PG	I	Drum PG input.
91	AMP Vref OUT	O	Analog AMP reference Vcc output
92	AMP Vref IN	I	Analog AMP reference Vcc input
93	RC CHECK	I	Check input
94	CTL-IN	I/O	Control signal IN/OUT
95	CTL+IN	I/O	Control signal IN/OUT
96	AMP C		Control signal AC conect
97	CTL AMP OUT	O	Control signal AMP output
98	AMP Vcc		D-5V
99	A Vcc		D-5V
100	V-SET RESET	O	NC



## SECTION 6 ADJUSTMENTS

### 6-1 MECHANICAL ADJUSTMENTS

For the mechanical adjustments, please refer to the "VHS MECHANICAL ADJUSTMENT MANUAL V (S MECHANISM)" (9-921-647-11).

### 6-2. ELECTRICAL ADJUSTMENTS

See the adjusting part location diagram from on page 6-6 for the adjustment.

#### 1. PREPARATION BEFORE ADJUSTMENT

##### 1-1. Equipment Required

The measuring instruments used for this alignment include:

- 1) Monitor TV
- 2) Oscilloscope, dual-trace, bandwidth of 30 MHz or more, with delay mode (A probe 10:1 should be used unless otherwise specified.)
- 3) Frequency counter
- 4) NTSC Pattern generator
- 5) Remote commander
- 6) Digital voltmeter
- 7) Audio generator
- 8) Audio level meter
- 9) Audio attenuator
- 10) Alignment tapes  
KRV-51N2 (NTSC) Part No. : 8-192-605-32

##### 1-2. Equipment Connection

Unless otherwise specified, connect and adjust the measuring instruments as shown in the following diagram.

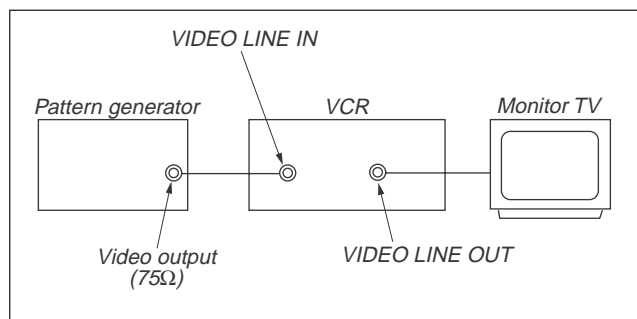


Fig. 6-2-1

##### 1-3. Set-up of Adjustment

In this adjustment, NTSC pattern generator is connected with LINE input terminal. When check to tuner, connected AERIAL terminal. Check that the synchronizing signal of the Y signal has an amplitude of approximately 0.7 V and that the burst signal has an amplitude of approximately 0.3 V and its waveform is flat. And check that the level ratio of burst signal to "red" signal is 0.30 : 0.66. The video signal (color bar) used for electrical aligning this unit is shown in Fig. 6-2-2.

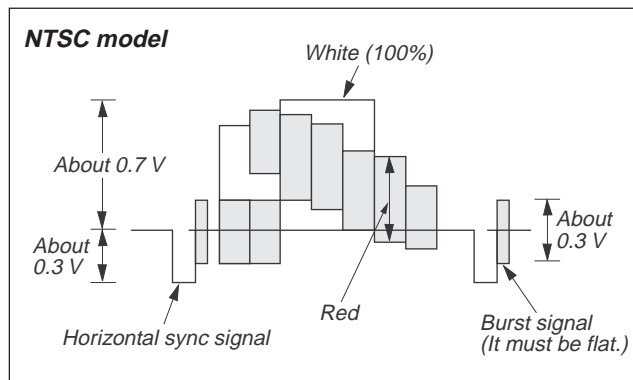


Fig. 6-2-2 Color Bar Signals of Pattern Generator

##### 1-4. Alignment Tape

• Contents of KRV-51N2

	Mode	Period	Video signal	Audio signal	
				Hi-Fi	Normal
1	SP	7 minutes	Color bar	400Hz (L/R)	400Hz
2		3 minutes	Monoscope		
3	LP	7 minutes	Color bar		
4		3 minutes	Monoscope		

### 1-5. Input/Output Levels and Impedance

Video input: LINE IN

Input signal: 1 V<sub>p-p</sub>, 75 ohms, unbalanced, sync negative

Video output: LINE OUT

Output signal: 1 V<sub>p-p</sub>, 75 ohms, unbalanced, sync negative

Audio input: LINE IN

Input level: -7.5 dBs  
(0 dBs= 0.775 V<sub>rms</sub>)

Input impedance: more than 47 kilohms


Audio output: LINE OUT

Standard level: -7.5 dBs at load impedance 47 kilohms

Output impedance: less than 10 kilohms

### 1-6. Adjustment Sequence

The adjustments should be performed in the following sequence.

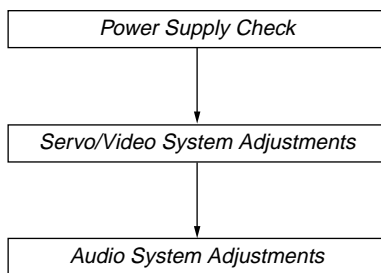

## 2. POWER SUPPLY CHECK

### 2-1. Output Voltage Check (MA-341 Board)

Mode	STANDBY
+30 V Check	
Measurement point	C627 ⊕
Specified value	31.0 – 39.0 V
-11 V Check	
Measurement point	C642 ⊖
Specified value	-12.5 – - 9.5 V

+6 V Check	
Measurement point	Corrector of Q607
Specified value	5.56 – 6.25 V
Mode	E-E
Measuring Instrument	Digital voltmeter
+12 V Check	
Measurement point	IC601 pin ②
Specified value	11.7 –12.3 V
+5 V Check	
Measurement point	Emitter of Q603
Specified value	4.8 –5.4 V
MTR12 V Check	
Measurement point	Corrector of Q605
Specified value	12.5 –14.5 V

#### [Check Method]

- 1) Each of these supply voltages must meet its specified value.

### 3. SERVO SYSTEM CHECK

#### 3-1. RF Switching Position Adjustment (MA-341 Board)

##### [Adjustment Purpose]

To adjust the link of the A-ch and B-ch of the tape playback outputs. To make the unit compatible with other tapes and units. If this specification is not satisfied, the link will appear on the screen and the screen will be disrupted, etc.

Mode	Playback
Signal	Alignment tape: SP color bar portion
Measurement point	CH1: CN270 pin ② (PB RF) CH2: CN270 pin ③ (RF SWP)
Measuring instrument	Oscilloscope
Adjusting element	REMOCON CH+/-
Specified value	A=minimize

##### [Adjustment Method]

- 1) Playback the alignment tape.
- 2) Short JS401 to Ground.
- 3) Check that "A P" is indicated on FL display.
- 4) Adjust so that part A becomes minimized at CH +/-.
- 5) Write data in EEPROM by pressing PAUSE button.

##### Monoral model:

- 6) The display "A P" disappears and then the Adjustment mode terminates.

##### Hi-Fi model:

- 6) The display changes to "A H" and the mode goes to the HiFi switching position Adjustment.

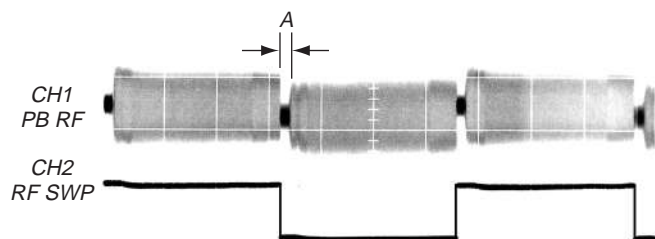


Fig. 6-2-3

### 4. AUDIO SYSTEM ADJUSTMENT

- Adjust both L ch and R ch.

##### [Connecting Instruments]

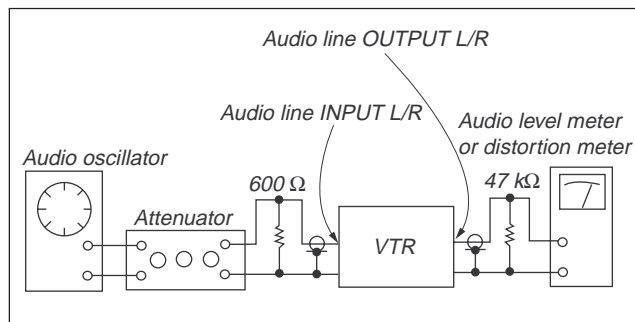


Fig. 6-2-4

#### 4-1. Hi-Fi Audio System Adjustment (Hi-Fi model only)

- Perform the adjustment setting the switch on the following positions.
- AUDIO MONITOR ..... STEREO

##### [Adjustment Method]

1. ACE head adjustment....Refer to the VHS mechanical adjustment manual VI (S MECHANISM)(9-921-647-11).
2. E-E output level check
3. "Recording Bias Adjustment"

## 4-2. HiFi Switching Position Adjustment (MA-341 Board)

### [Adjustment Purpose]

To adjust the link of the A-ch and B-ch of the tape playback outputs. To make the unit compatible with other tapes and units. If this specification is not satisfied, the link will appear on the screen and the screen will be disrupted, etc.

Mode	Playback
Signal	Alignment tape: SP color bar portion
Measurement point	CH1: Pin ① of CN270 (HF ADJ) CH2: Pin ③ of CN270 (RF SWP)
Measuring instrument	Oscilloscope
Adjusting element	REMOCON CH +/-
Specified value	B=minimize

### [Adjustment Method]

- 1) Check that "A H" is indicated on FL display.
- 2) Adjust so that part B becomes minimized at CH +/-.
- 3) Write data EEPROM by pressing PAUSE button.
- 4) Check that "A H" indicator turns off.
- 5) If "A H" indicator is still on, restart RF switching position Adjustment from the beginning.

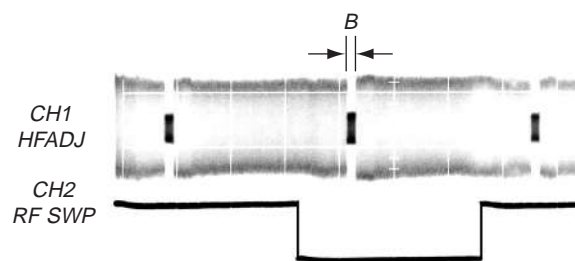


Fig. 6-2-5

## 4-3. Normal Audio System Adjustment

- Make adjustment in the SP mode unless otherwise specified. Use a normal VHS cassette for an adjustment tape.
- Set AUDIO MONITOR to normal.

### 4-3-1. ACE Head Adjustment

Refer to the VHS mechanical adjustment manual VI (S MECHANISM) (9-921-647-11).

### 4-3-2. E-E Output Level Check

#### [Adjustment purpose]

Confirm that the output level adjust the reference input is within the specification.

Mode	E-E
Signal	400 Hz, -7.5 dBs
Measurement point	CJ561 L/R
Measuring instrument	Audio level meter
Specified value	-7.5 ± 2 dBs

#### [Check Method]

- 1) Input signal of 400 Hz and -7.5 dBs to the CJ561 L/R.
- 2) Check that the audio output level is -7.5 ± 2 dBs.

### 4-3-3. Frequency Response Check

#### [Adjustment purpose]

Confirm that the frequency characteristic is within the specification.

Mode	REC and PB (SP mode)
Signal	400 Hz, -17.5 dBs 7 kHz, -17.5 dBs
Measurement point	Audio output terminal
Measuring instrument	Audio level meter
Specified value	0 ± 3 dB


**Note:** Tape path adjustment must have been completed.

#### [Confirmation Method]

- 1) Supply a signal of 400 Hz, -17.5 dBs to both L and R channels of Audio Line Input.
- 2) Connect the audio level meter to the Audio Line Output.
- 3) Adjust the attenuator so that the audio level meter will indicate -17.5 dBs.
- 4) Make recording in the SP mode.
- 5) Set an audio line input signal to 7 kHz and make recording.
- 6) Playback a recorded portion, and measure output levels at 400 Hz and 7 kHz.
- 7) Confirm that the 7 kHz playback output level within a range of the 400 Hz playback output level 0 ± 3 dB.

5. ADJUSTING PARTS LOCATION DIAGRAM

MA-341 BOARD  
(CONDUCTOR SIDE)

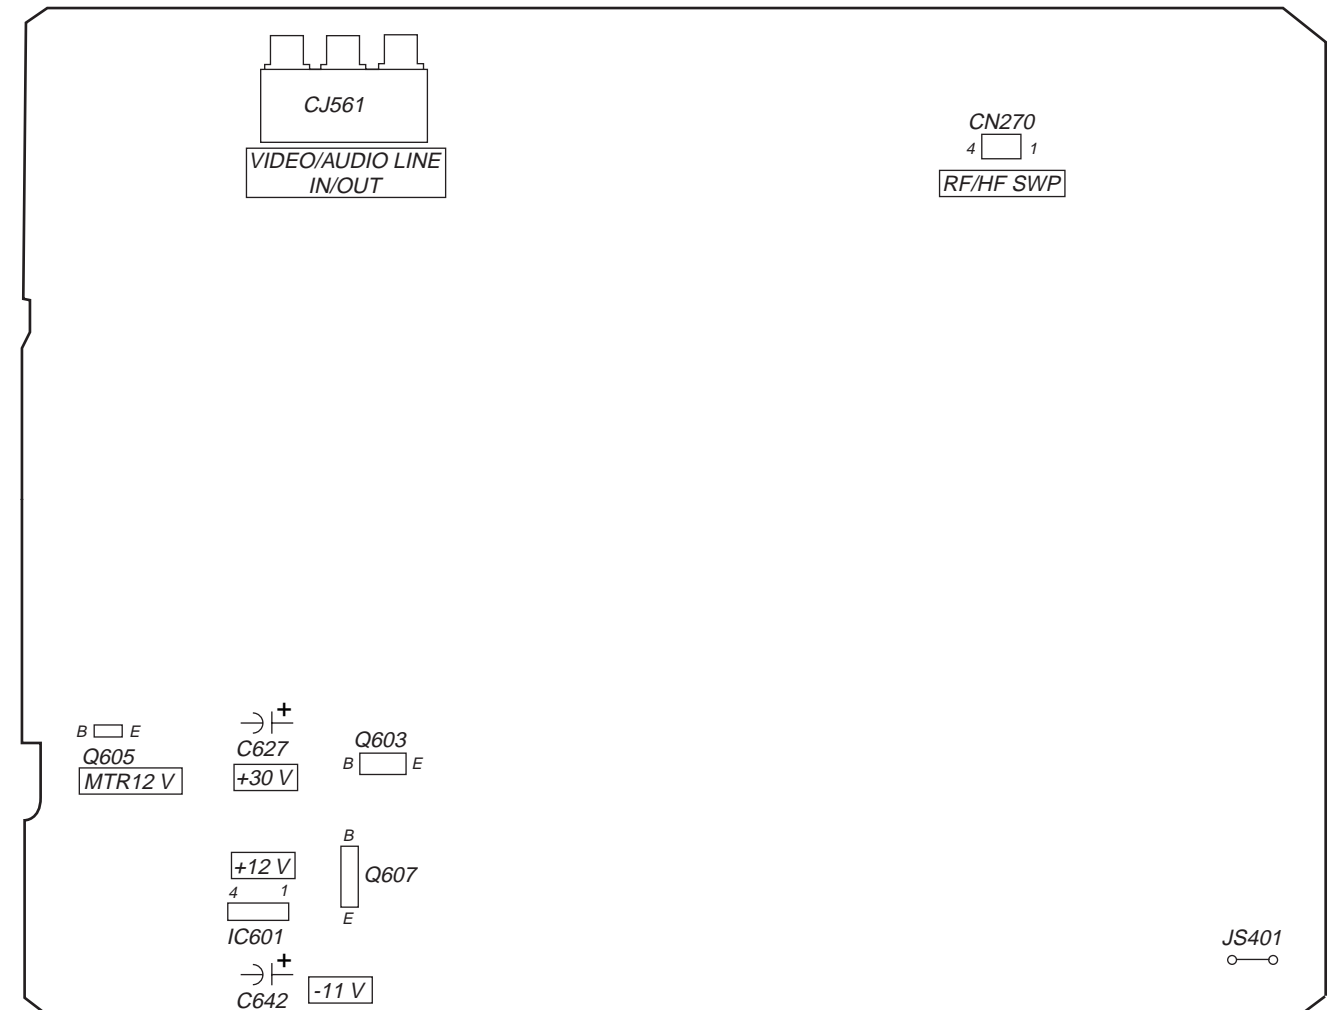

## SECTION 7 REPAIR PARTS LIST

### 7-1. EXPLODED VIEWS


**NOTE:**

- -XX, -X mean standardized parts, so they may have some differences from the original one.
- Items marked "\*" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- The mechanical parts with no reference number in the exploded views are not supplied.
- Abbreviation  
CND : Canadian

The components identified by mark  $\triangle$  or dotted line with mark  $\triangle$  are critical for safety. Replace only with part number specified.


Les composants identifiés par une marque  $\triangle$  sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

#### 7-1-1. FRONT PANEL AND UPPER CASE SECTION

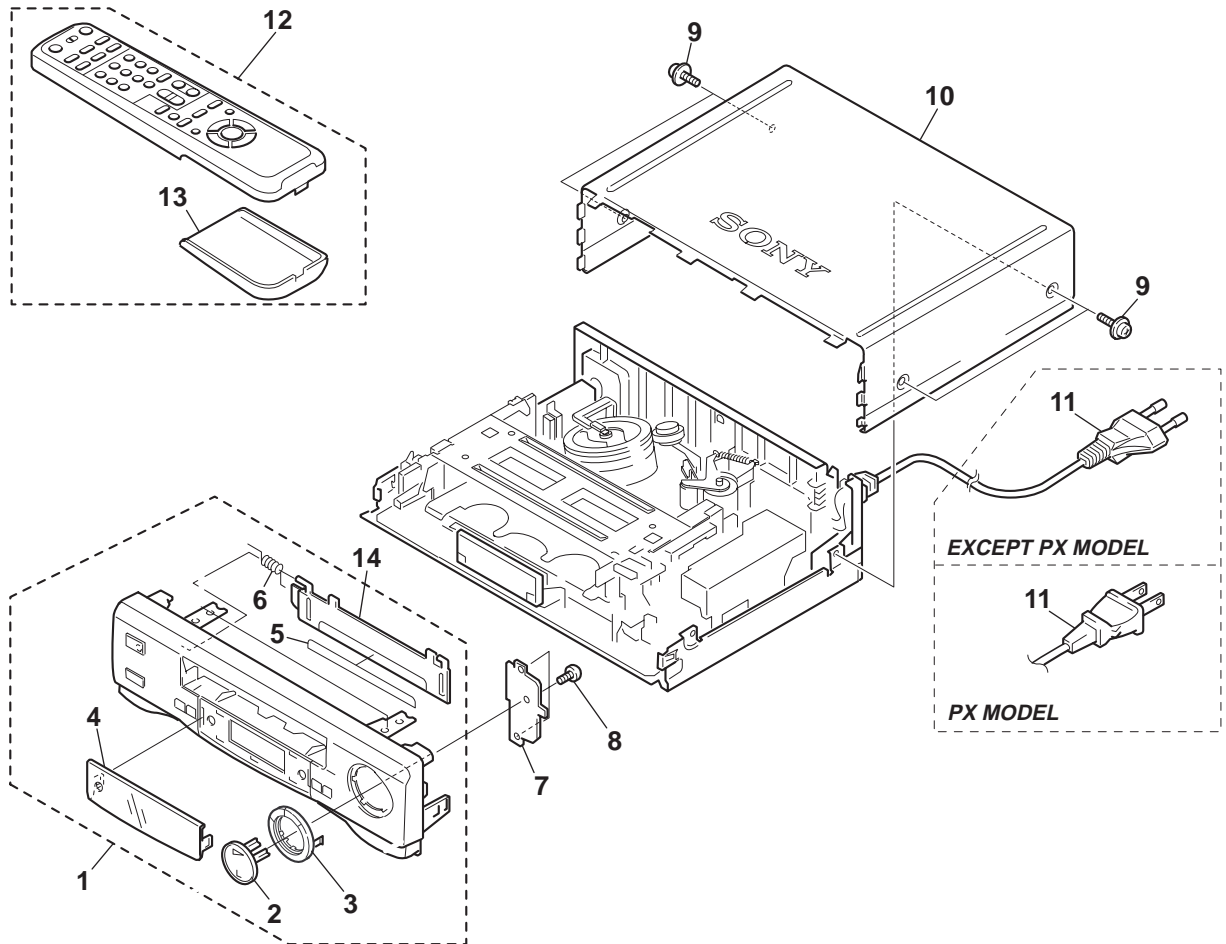


Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
1	X-3949-095-1	PANEL ASSY, FRONT (662)		9	3-710-901-11	SCREW, TAPPING	
1	X-3949-201-1	PANEL ASSY, FRONT (679)		9	3-710-901-41	SCREW, TAPPING	
2	3-052-785-01	BUTTON (S), CENTER (679)		10	3-054-142-01	CASE, UPPER (679)	
2	3-052-785-11	BUTTON (S), CENTER (662)		10	3-054-142-11	CASE, UPPER (662)	
3	3-052-786-01	RING (S), BUTTON (679)		$\triangle$ 11	1-782-000-13	CORD, POWER (679: PX)	
3	3-052-786-11	RING (S), BUTTON (662)		$\triangle$ 11	1-782-001-13	CORD, POWER (679: PX)	
4	3-052-779-01	PLATE (NA), FROSTED		$\triangle$ 11	1-790-293-21	CORD, POWER (EXCEPT PX)	
5	3-052-787-01	PLATE (NA), DOOR ORNAMENTAL		12	1-418-153-11	COMMANDER, STANDARD (RMT-V266)	
6	3-953-432-01	SPRING (GE), FL		13	3-709-432-01	COVER, REMOTE CONTROL BATTERY	
* 7	A-6791-732-A	DS-84 BOARD, COMPLETE		14	3-052-778-31	DOOR (NA), CASSETTE (679: US)	
8	4-921-277-41	SCREW (B2.6 x 8), TAPPING, BIND		14	3-052-778-41	DOOR (NA), CASSETTE (662: US)	

## 7-1-2. CHASSIS SECTION

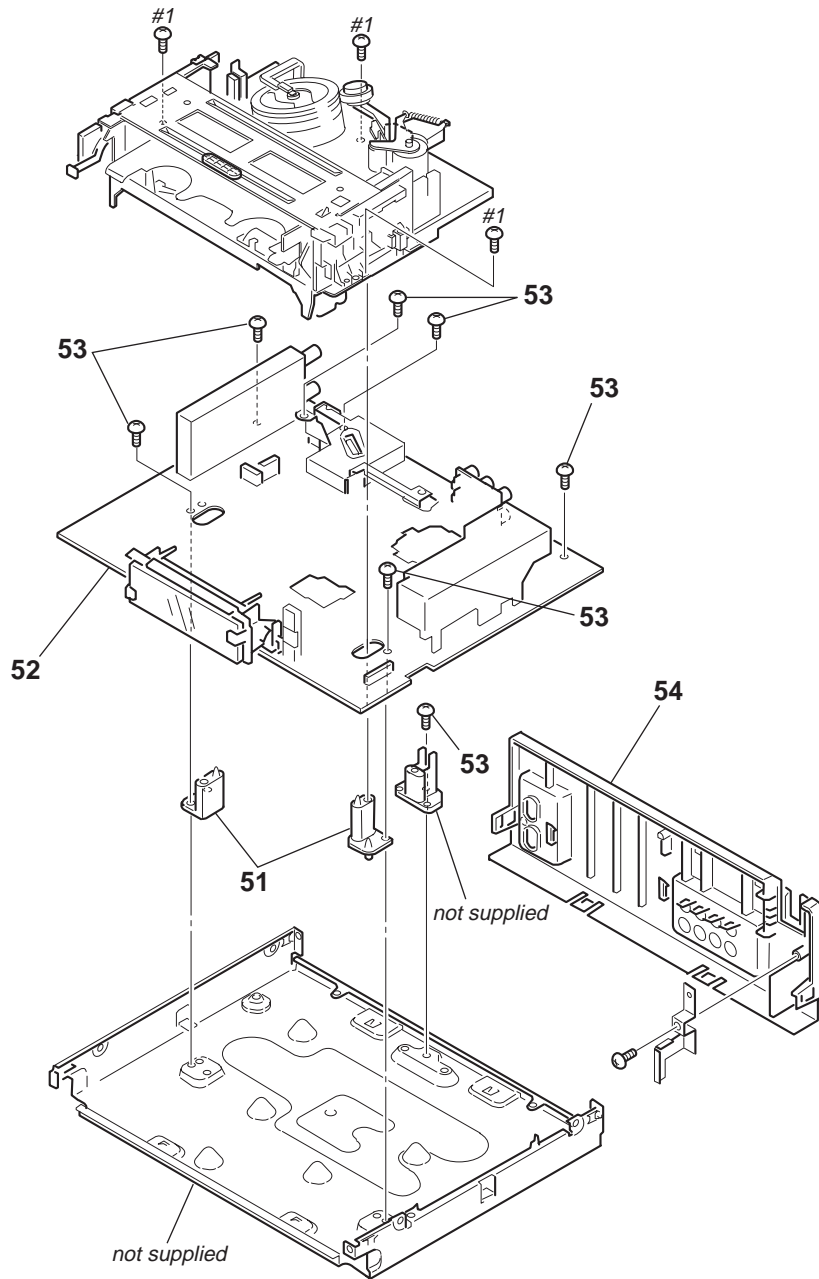

Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
* 51	3-959-383-01	BASE (R), MD		* 52	A-6791-778-A	MA-341 BOARD, COMPLETE (679: PX)	
* 52	A-6791-731-A	MA-341 BOARD, COMPLETE (662)		53	3-970-608-21	SUMITITE (B3), +BV	
* 52	A-6791-734-A	MA-341 BOARD, COMPLETE (679:US,CND)		* 54	3-979-652-11	PANEL (M), REAR	


### 7-1-3. MECHANISM DECK SECTION-1

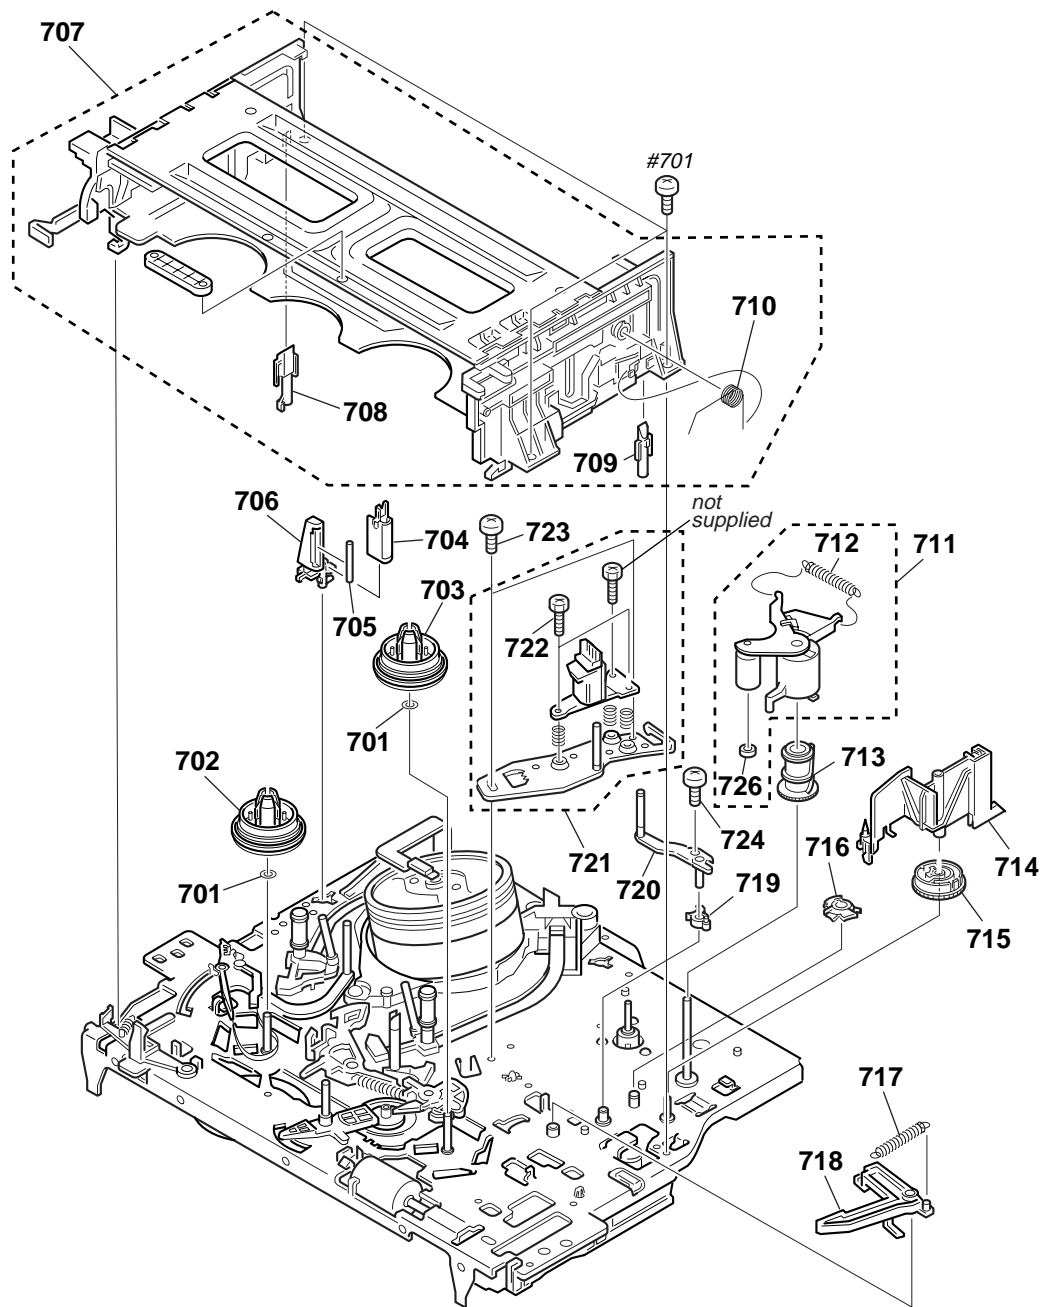

Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
701	3-977-509-01	WASHER, THRUST		714	3-977-514-01	OPENER, LID	
702	3-977-507-01	TABLE, REEL (S) (GRAY)		715	3-977-441-01	GEAR, PINCH PRESSING	
703	3-977-508-01	TABLE, REEL (T) (BLACK)		716	3-977-445-01	GEAR, TG8 ARM DRIVING	
704	1-500-144-11	HEAD, FE		717	3-977-465-01	SPRING, EXTENSION (RVS BRAKE)	
705	3-977-495-01	SHAFT TG2		718	X-3947-582-1	ARM ASSY, RVS BRAKE	
706	3-977-494-01	HOLDER, FEH		719	3-977-446-01	GEAR, TG8 ARM	
707	A-6759-619-C	FL COMPLETE ASSY BOARD, COMPLETE		720	X-3947-590-1	TG8 ASSY	
708	3-977-535-01	PLATE, LUMINOUS (END SENSOR)		721	A-6759-620-A	HEAD BLOCK ASSY, ACE (TDK)	
709	3-977-536-01	PLATE, LUMINOUS (TOP SENSOR)		722	3-974-556-01	+HEXA TT 2.6 × 9 (TAPER)	
710	3-970-471-01	SPRING (DECK OPEN), TORSION		723	3-979-508-01	SCREW +HEXA TP SW 3 × 8	
711	A-6759-615-A	PRESS BLOCK ASSY, PINCH		724	3-719-381-01	SCREW (M2 × 4)	
712	3-958-455-01	SPRING (PINCH), TENSION		726	3-736-045-01	BEARING (NO FLANG), BALL	
713	3-977-447-01	GEAR, ELEVATOR					




7-1-4. MECHANISM DECK SECTION-2

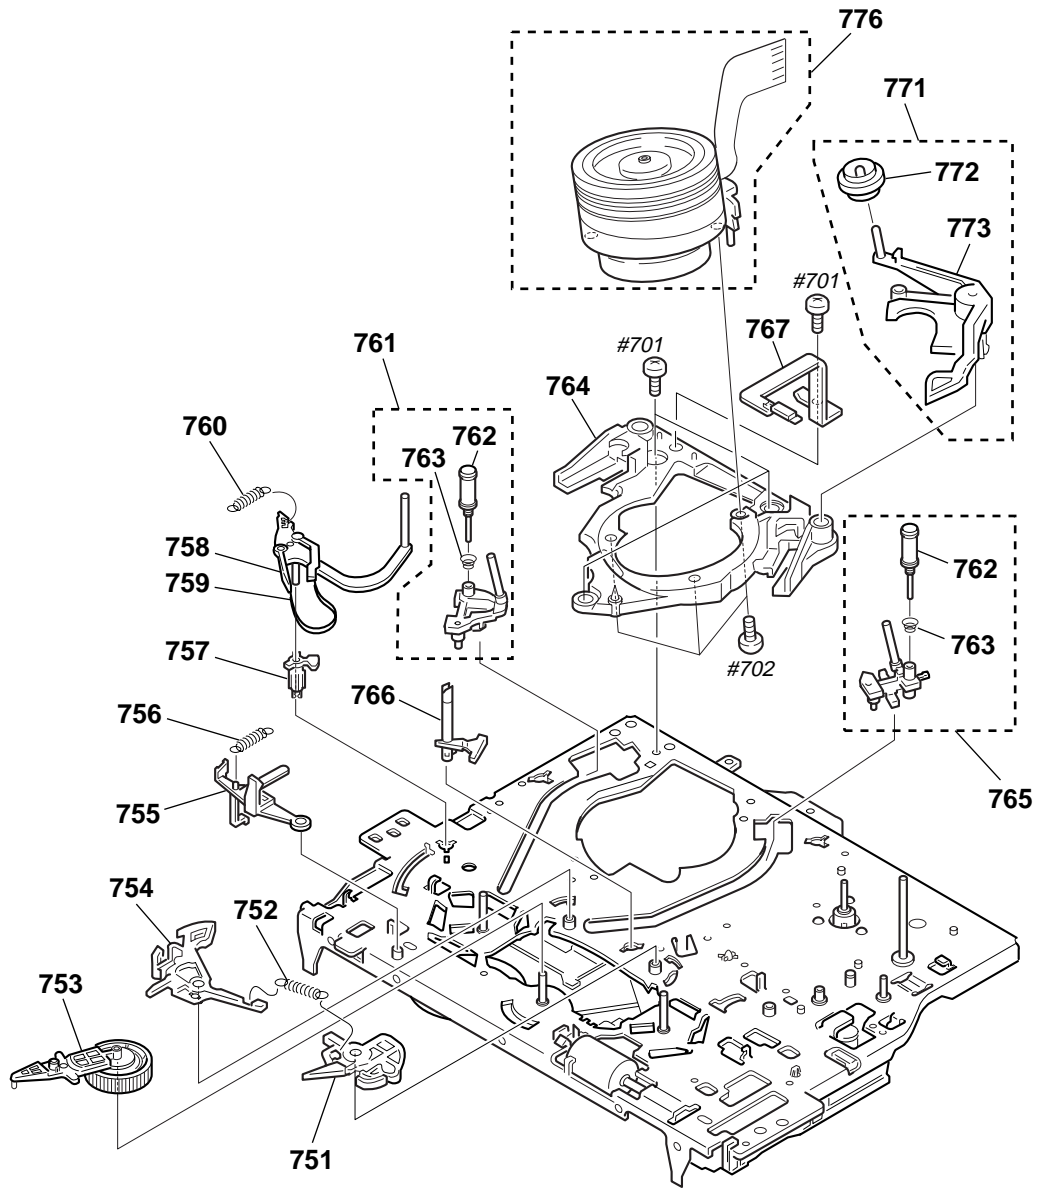

Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
751	X-3947-581-1	BRAKE ASSY,MAIN(T)		762	X-3944-378-1	ROLLER ASSY, GUIDE	
752	3-977-462-01	SPRING,EXTENTION. (MAIN BRAKE)		763	3-965-178-01	SPRING	
753	X-3947-573-1	ARM ASSY, PENDULUM		764	3-969-632-04	BASE, DRUM	
754	X-3947-580-2	BRAKE ASSY, MAIN(S)		765	A-6750-328-E	SHUTTLE (T) BLOCK ASSY	
755	3-977-513-02	LEVER, REC PROOF		766	3-977-501-01	PLATE, LUMINOUS	
756	3-976-767-01	SPRING, TENS. (REC. PROOF)		767	X-3943-899-8	GROUND ASSY, SHAFT	
757	3-977-487-01	BOSS, TG1 FULCRUM		771	A-6746-074-G	ROLLER BLOCK ASSY, HC	
758	X-3947-587-1	TG1 ASSY		772	X-3947-255-1	ROLLER ASSY, HC	
759	X-3947-589-1	BAND ASSY, TG1		773	3-975-724-07	ARM, HC	
760	3-977-488-01	SPRING (POWER TENSION)		776	8-839-057-51	DRUM ASSY DZH-0A7A/Z-RP	
761	A-6750-324-A	SHUTTLE (S) BLOCK ASSY					

7-1-5. MECHANISM DECK SECTION-3

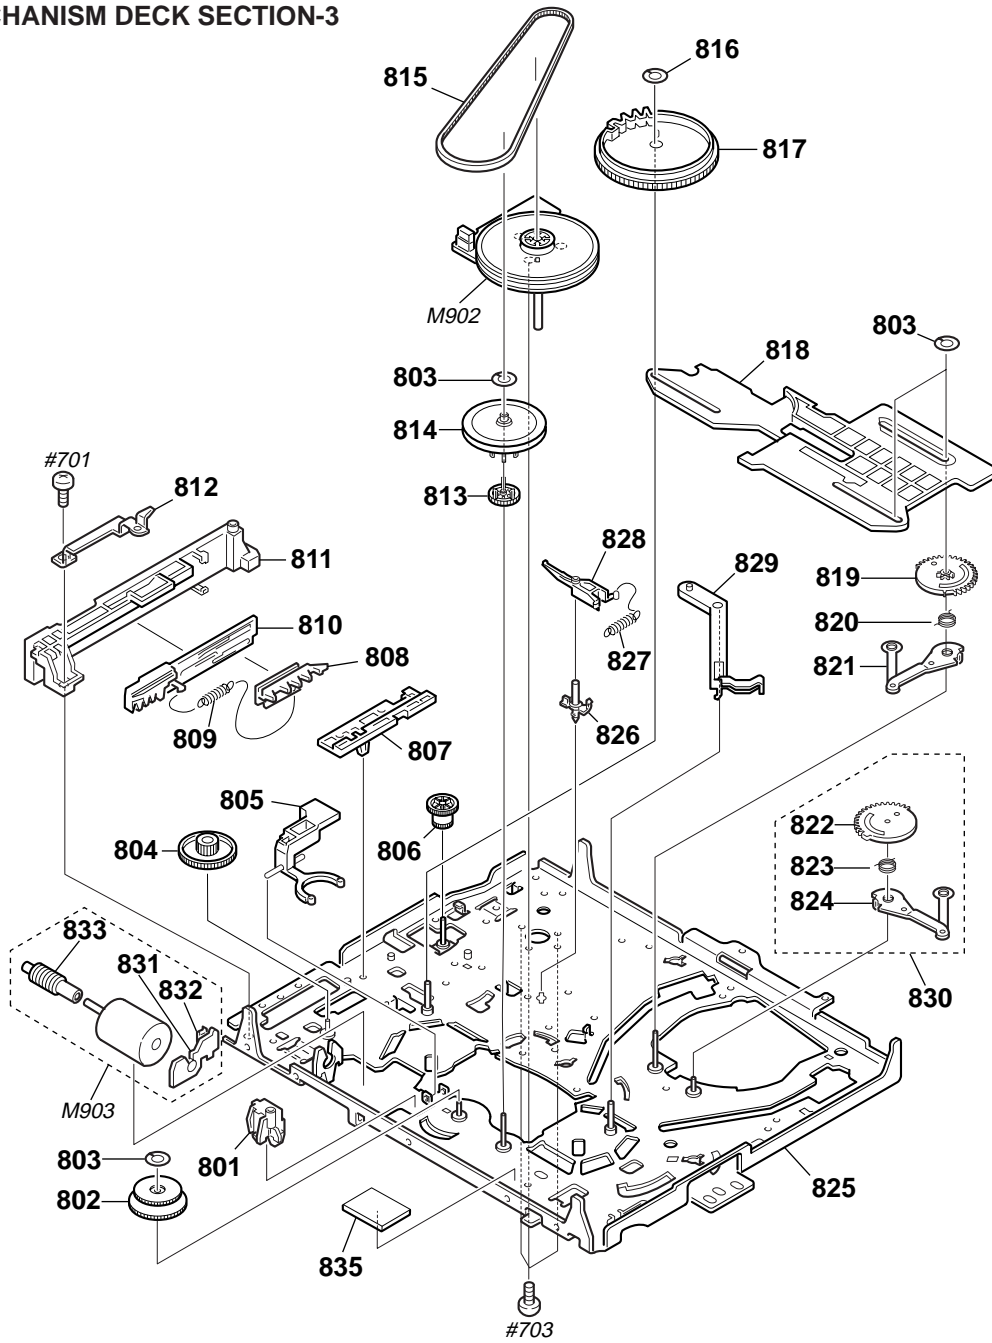

Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
801	3-977-437-01	RETAINER,CAM MOTOR		819	3-977-455-01	GEAR, LOADING(T)	
802	X-3947-584-1	ASSY, REEL DIRECT		820	3-977-456-03	SPRING, TORSION (LOAD T)	
803	3-977-443-01	WASHER, STOPPER		821	X-3947-579-1	LEVER ASSY, LOADING(T)	
804	3-977-438-01	WORM - WHEEL		822	3-977-451-01	GEAR, LOADING(S)	
805	3-977-506-01	ARM, LIMITTER SELECTION		823	3-977-452-01	SPRING, TORSION (LOAD S)	
806	3-977-444-01	GEAR, PINCH TRANSMISSION		824	X-3947-578-1	LEVER ASSY, LOADING (S)	
807	3-977-515-01	GUIDE, FL SLIDER		825	X-3947-576-2	CHASSIS ASSY, MECHANICAL	
808	3-977-517-01	PLATE, SLIDE, FL		826	3-977-468-01	SHAFT, CAPSTAN BRAKE	
809	3-977-519-01	SPRING, TENS. (LIMIT, FL)		827	3-977-467-02	SPRING, CAP BRAKE	
810	3-977-518-02	PLATE, LIMITTER, FL		828	X-3947-583-1	BRAKE ASSY, CAPSTAN	
811	3-977-516-01	HOLDER, FL SLIDER		829	3-977-489-01	ARM, TG1 DRIVING	
812	3-977-877-01	PLATE, RETAINER		830	A-6759-616-A	GEAR BLOCK ASSY, LOADING (S)	
813	3-977-504-01	GEAR, CLUTCH		831	1-666-524-11	CA-55 BOARD	
814	X-3947-585-1	GEAR ASSY, PULLEY		832	1-766-723-21	CONNECTOR, BOARD TO BOAR 3P	
815	3-977-510-01	BELT, RUBBER		833	3-977-436-01	WORM	
816	3-977-440-01	WASHER, STOPPER		835	3-989-917-01	SPACER (REC PROOF)	
817	3-977-439-01	GEAR, CAM		M902	1-698-971-11	MOTOR, DC	
818	3-977-442-01	SLIDER		M903	X-3947-577-1	MOTOR ASSY, CAM	

## 7-2. ELECTRICAL PARTS LIST

NOTE:

- Due to standardization, replacements in the parts list may be different from the parts specified in the diagrams or the components used on the set.
- -XX, -X mean standardized parts, so they may have some difference from the original one.
- Items marked “\*” are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- CAPACITORS:  
uF: μF
- RESISTORS  
All resistors are in ohms.  
METAL: metal-film resistor  
METAL OXIDE: Metal Oxide-film resistor  
F: nonflammable
- COILS  
uH: μH

- SEMICONDUCTORS  
In each case, u: μ, for example:  
uA...: μA... , uPA... , μPA... ,  
uPB... , μPB... , uPC... , μPC... ,  
uPD... , μPD...

The components identified by mark Δ or dotted line with mark Δ are critical for safety. Replace only with part number specified.

Les composants identifiés par une marque Δ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

When indicating parts by reference number, please include the board name.

Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
*	A-6791-732-A	DS-84 BOARD, COMPLETE ***** (Ref.No: 2,000 Series)		C112	1-164-232-11	CERAMIC CHIP 0.01uF	50V
		< JUMPER RESISTOR >		C113	1-164-004-11	CERAMIC CHIP 0.1uF	10% 25V
JR441	1-216-295-00	METAL CHIP 0 5% 1/10W		C115	1-164-232-11	CERAMIC CHIP 0.01uF	50V
JR442	1-216-295-00	METAL CHIP 0 5% 1/10W		C116	1-164-232-11	CERAMIC CHIP 0.01uF	50V
		< RESISTOR >		C140	1-124-584-00	ELECT 100uF	20% 10V
R451	1-216-053-00	METAL CHIP 1.5K 5% 1/10W		C141	1-163-038-00	CERAMIC CHIP 0.1uF	25V
R452	1-216-053-00	METAL CHIP 1.5K 5% 1/10W		C142	1-163-037-11	CERAMIC CHIP 0.022uF	10% 25V
R453	1-216-013-00	METAL CHIP 33 5% 1/10W		C143	1-128-131-11	ELECT 22uF	20% 50V
		< SWITCH >		C144	1-128-131-11	ELECT 22uF	20% 50V
S442	1-762-196-21	SWITCH, TACT (PLAY)		C145	1-126-935-11	ELECT 470uF	20% 6.3V
S443	1-762-196-21	SWITCH, TACT (STOP)		C146	1-164-161-11	CERAMIC CHIP 0.0022uF	10% 100V
S444	1-762-196-21	SWITCH, TACT (REW)		C160	1-163-809-11	CERAMIC CHIP 0.047uF	10% 25V
S446	1-762-196-21	SWITCH, TACT (FF)		C161	1-163-809-11	CERAMIC CHIP 0.047uF	10% 25V
*****				C162	1-163-038-00	CERAMIC CHIP 0.1uF	25V
*	A-6791-731-A	MA-341 BOARD, COMPLETE (662) *****		C163	1-163-809-11	CERAMIC CHIP 0.047uF	10% 25V
*	A-6791-734-A	MA-341 BOARD, COMPLETE (679: US, CND) *****		C164	1-163-237-11	CERAMIC CHIP 27PF	5% 50V
*	A-6791-778-A	MA-341 BOARD, COMPLETE (679: PX) ***** (Ref.No: 1,000 Series)		C165	1-163-102-00	CERAMIC CHIP 24PF	5% 50V
		< CAPACITOR >		C166	1-163-231-11	CERAMIC CHIP 15PF	5% 50V
				C167	1-163-233-11	CERAMIC CHIP 18PF	5% 50V
				C168	1-124-584-00	ELECT 100uF	20% 10V
				C169	1-163-038-00	CERAMIC CHIP 0.1uF	25V
				C170	1-163-007-11	CERAMIC CHIP 680PF	10% 50V
				C171	1-104-905-11	CAPACITOR 0.22F	5.5V
				C172	1-164-232-11	CERAMIC CHIP 0.01uF	50V
				C173	1-164-232-11	CERAMIC CHIP 0.01uF	50V
				C176	1-164-004-11	CERAMIC CHIP 0.1uF	10% 25V
				C201	1-104-760-11	CERAMIC CHIP 0.047uF	10% 50V
				C202	1-164-232-11	CERAMIC CHIP 0.01uF	50V
				C203	1-164-004-11	CERAMIC CHIP 0.1uF	10% 25V
				C204	1-109-982-11	CERAMIC CHIP 1uF	10% 10V
				C205	1-164-232-11	CERAMIC CHIP 0.01uF	50V
				C206	1-164-004-11	CERAMIC CHIP 0.1uF	10% 25V
				C207	1-163-241-11	CERAMIC CHIP 39PF	5% 50V
				C208	1-164-232-11	CERAMIC CHIP 0.01uF	50V
				C209	1-124-589-11	ELECT 47uF	20% 16V
				C210	1-164-004-11	CERAMIC CHIP 0.1uF	10% 25V
				C211	1-163-239-11	CERAMIC CHIP 33PF	5% 50V
				C213	1-163-131-00	CERAMIC CHIP 390PF	5% 50V
				C214	1-163-257-11	CERAMIC CHIP 180PF	5% 50V
				C215	1-163-227-11	CERAMIC CHIP 10PF	0.5PF 50V
				C216	1-126-160-11	ELECT 1uF	20% 50V
				C217	1-163-037-11	CERAMIC CHIP 0.022uF	10% 25V
				C218	1-162-306-11	CERAMIC 0.01uF	20% 16V
				C220	1-164-232-11	CERAMIC CHIP 0.01uF	50V
				C221	1-109-982-11	CERAMIC CHIP 1uF	10% 10V
C101	1-163-009-11	CERAMIC CHIP 0.001uF	10% 50V				
C102	1-163-009-11	CERAMIC CHIP 0.001uF	10% 50V				
C103	1-163-009-11	CERAMIC CHIP 0.001uF	10% 50V				
C104	1-163-009-11	CERAMIC CHIP 0.001uF	10% 50V				
C105	1-128-057-11	ELECT 330uF	20% 6.3V				
C106	1-124-589-11	ELECT 47uF	20% 16V				
C107	1-164-346-11	CERAMIC CHIP 1uF	16V				
C108	1-164-004-11	CERAMIC CHIP 0.1uF	10% 25V				
C109	1-164-004-11	CERAMIC CHIP 0.1uF	10% 25V				
C111	1-164-232-11	CERAMIC CHIP 0.01uF	50V				

Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
C222	1-124-261-00	ELECT	10uF 20% 50V	C323	1-163-135-00	CERAMIC CHIP	560PF 5% 50V
C223	1-128-131-11	ELECT	22uF 20% 50V	C324	1-164-232-11	CERAMIC CHIP	0.01uF 50V
C225	1-126-160-11	ELECT	1uF 20% 50V	C325	1-164-232-11	CERAMIC CHIP	0.01uF 50V
C226	1-164-004-11	CERAMIC CHIP	0.1uF 10% 25V	C361	1-126-964-11	ELECT	10uF 20% 50V
C227	1-164-004-11	CERAMIC CHIP	0.1uF 10% 25V	C362	1-163-020-00	CERAMIC CHIP	0.0082uF 10% 50V
C228	1-124-589-11	ELECT	47uF 20% 16V	C363	1-104-664-11	ELECT	47uF 20% 16V
C229	1-164-004-11	CERAMIC CHIP	0.1uF 10% 25V	C364	1-126-964-11	ELECT	10uF 20% 50V
C230	1-164-159-21	CERAMIC	0.1uF 50V	C365	1-126-964-11	ELECT	10uF 20% 50V
C231	1-124-589-11	ELECT	47uF 20% 16V	C366	1-126-964-11	ELECT	10uF 20% 50V
C232	1-109-982-11	CERAMIC CHIP	1uF 10% 10V	C367	1-104-664-11	ELECT	47uF 20% 16V
C233	1-124-261-00	ELECT	10uF 20% 50V	C368	1-163-020-00	CERAMIC CHIP	0.0082uF 10% 50V
C234	1-109-982-11	CERAMIC CHIP	1uF 10% 10V	C369	1-126-964-11	ELECT	10uF 20% 50V
C235	1-164-004-11	CERAMIC CHIP	0.1uF 10% 25V	C370	1-164-232-11	CERAMIC CHIP	0.01uF 50V
C236	1-164-232-11	CERAMIC CHIP	0.01uF 50V	C371	1-164-004-11	CERAMIC CHIP	0.1uF 10% 25V
C237	1-164-232-11	CERAMIC CHIP	0.01uF 50V	C372	1-124-589-11	ELECT	47uF 20% 16V
C238	1-124-589-11	ELECT	47uF 20% 16V	C373	1-124-589-11	ELECT	47uF 20% 16V
C239	1-164-232-11	CERAMIC CHIP	0.01uF 50V	C374	1-163-038-00	CERAMIC CHIP	0.1uF 25V
C240	1-124-589-11	ELECT	47uF 20% 16V	C375	1-164-232-11	CERAMIC CHIP	0.01uF 50V
C241	1-164-232-11	CERAMIC CHIP	0.01uF 50V	C376	1-126-964-11	ELECT	10uF 20% 50V
C242	1-164-232-11	CERAMIC CHIP	0.01uF 50V	C381	1-164-222-11	CERAMIC CHIP	0.22uF 25V
C243	1-164-232-11	CERAMIC CHIP	0.01uF 50V	C382	1-164-222-11	CERAMIC CHIP	0.22uF 25V
C244	1-109-982-11	CERAMIC CHIP	1uF 10% 10V	C383	1-126-960-11	ELECT	1uF 20% 50V
C245	1-109-982-11	CERAMIC CHIP	1uF 10% 10V	C384	1-126-960-11	ELECT	1uF 20% 50V
C246	1-164-232-11	CERAMIC CHIP	0.01uF 50V	C385	1-126-960-11	ELECT	1uF 20% 50V
C247	1-163-037-11	CERAMIC CHIP	0.022uF 10% 25V	C386	1-126-964-11	ELECT	10uF 20% 50V
C248	1-163-809-11	CERAMIC CHIP	0.047uF 10% 25V	C387	1-126-964-11	ELECT	10uF 20% 50V
C249	1-109-982-11	CERAMIC CHIP	1uF 10% 10V	C388	1-126-964-11	ELECT	10uF 20% 50V
C250	1-163-809-11	CERAMIC CHIP	0.047uF 10% 25V	C389	1-126-964-11	ELECT	10uF 20% 50V
C251	1-164-004-11	CERAMIC CHIP	0.1uF 10% 25V	C390	1-126-960-11	ELECT	1uF 20% 50V
C267	1-164-004-11	CERAMIC CHIP	0.1uF 10% 25V	C391	1-126-160-11	ELECT	1uF 20% 50V
C271	1-164-232-11	CERAMIC CHIP	0.01uF 50V	C405	1-164-232-11	CERAMIC CHIP	0.01uF 50V
C272	1-164-004-11	CERAMIC CHIP	0.1uF 10% 25V	C422	1-124-589-11	ELECT	47uF 20% 16V
C275	1-164-232-11	CERAMIC CHIP	0.01uF 50V	C423	1-164-232-11	CERAMIC CHIP	0.01uF 50V
C276	1-164-004-11	CERAMIC CHIP	0.1uF 10% 25V	C424	1-164-159-21	CERAMIC	0.1uF 50V
C278	1-163-037-11	CERAMIC CHIP	0.022uF 10% 25V	C425	1-124-261-00	ELECT	10uF 20% 50V
C279	1-164-004-11	CERAMIC CHIP	0.1uF 10% 25V	C427	1-164-004-11	CERAMIC CHIP	0.1uF 10% 25V
C280	1-124-584-00	ELECT	100uF 20% 10V	C500	1-163-098-00	CERAMIC CHIP	16PF 5% 50V
C281	1-164-232-11	CERAMIC CHIP	0.01uF 50V	C501	1-163-098-00	CERAMIC CHIP	16PF 5% 50V
C282	1-164-232-11	CERAMIC CHIP	0.01uF 50V	C502	1-164-232-11	CERAMIC CHIP	0.01uF 50V
C283	1-164-232-11	CERAMIC CHIP	0.01uF 50V	C503	1-163-017-00	CERAMIC CHIP	0.0047uF 5% 50V
C284	1-164-489-11	CERAMIC CHIP	0.22uF 10% 16V	C504	1-163-275-11	CERAMIC CHIP	0.001uF 5% 50V
C285	1-164-232-11	CERAMIC CHIP	0.01uF 50V	C505	1-162-199-31	CERAMIC	10PF 5% 50V
C286	1-163-251-11	CERAMIC CHIP	100PF 5% 50V	C507	1-163-137-00	CERAMIC CHIP	680PF 5% 50V
C301	1-163-038-00	CERAMIC CHIP	0.1uF 25V	C508	1-109-982-11	CERAMIC CHIP	1uF 10% 10V
C303	1-126-160-11	ELECT	1uF 20% 50V	C509	1-163-016-00	CERAMIC CHIP	0.0039uF 10% 50V
C305	1-124-261-00	ELECT	10uF 20% 50V	C510	1-164-004-11	CERAMIC CHIP	0.1uF 10% 25V
C307	1-126-966-11	ELECT	33uF 20% 16V	C511	1-163-038-00	CERAMIC CHIP	0.1uF 25V
C308	1-126-963-11	ELECT	4.7uF 20% 50V	C512	1-124-584-00	ELECT	100uF 20% 10V
C310	1-126-160-11	ELECT	1uF 20% 50V	C513	1-163-009-11	CERAMIC CHIP	0.001uF 10% 50V
C311	1-163-014-00	CERAMIC CHIP	0.0027uF 10% 50V	C514	1-163-009-11	CERAMIC CHIP	0.001uF 10% 50V
C312	1-163-016-00	CERAMIC CHIP	0.0039uF 10% 50V	C561	1-164-232-11	CERAMIC CHIP	0.01uF 50V
C313	1-164-232-11	CERAMIC CHIP	0.01uF 50V	C562	1-104-664-11	ELECT	47uF 20% 16V
C314	1-126-964-11	ELECT	10uF 20% 50V	C563	1-126-935-11	ELECT	470uF 20% 6.3V
C315	1-126-160-11	ELECT	1uF 20% 50V	C600	1-104-705-11	FILM	0.1uF 20% 250V
C316	1-163-024-00	CERAMIC CHIP	0.018uF 10% 50V	△C601	1-113-920-11	CERAMIC	0.0022uF 20% 250V
C317	1-124-589-11	ELECT	47uF 20% 16V				(EXCEPT PX)
C318	1-164-232-11	CERAMIC CHIP	0.01uF 50V				
C319	1-164-232-11	CERAMIC CHIP	0.01uF 50V				
C320	1-137-374-11	FILM	0.047uF 5% 50V				
C322	1-126-963-11	ELECT	4.7uF 20% 50V				

The components identified by mark △ or dotted line with mark △ are critical for safety. Replace only with part number specified.	Les composants identifiés par une marque △ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.
--	--

# MA-341

Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
△C601	1-104-705-11	FILM	0.1uF 20% 250V (PX)	C639	1-164-232-11	CERAMIC CHIP	0.01uF 50V (EXCEPT PX)
△C602	1-119-892-51	CERAMIC	470PF 10% 250V	C642	1-126-967-11	ELECT	47uF 20% 50V (EXCEPT PX)
△C603	1-113-900-11	CERAMIC	470PF 10% 250V (PX)	C701	1-104-664-11	ELECT	47uF 20% 16V
△C603	1-119-911-51	CERAMIC	470PF 10% 250V (EXCEPT PX)	C706	1-126-963-11	ELECT	4.7uF 20% 50V
△C604	1-113-900-11	CERAMIC	470PF 10% 250V (PX)	C707	1-164-161-11	CERAMIC CHIP	0.0022uF 10% 100V
△C604	1-119-912-51	CERAMIC	1000PF 20% 250V (EXCEPT PX)	C709	1-126-933-11	ELECT	100uF 20% 16V
C605	1-127-932-41	ELECT	150uF 20% 400V (PX)	C710	1-164-232-11	CERAMIC CHIP	0.01uF 50V
C605	1-119-882-51	ELECT(BLOCK)	120uF 20% 200V (EXCEPT PX)	C712	1-126-933-11	ELECT	100uF 20% 16V
C606	1-107-905-11	ELECT	4.7uF 20% 50V (EXCEPT PX)			< JACK >	
C606	1-107-925-11	ELECT	1uF 20% 100V (PX)	CJ561	1-779-011-11	JACK, PIN 6P (LINE OUT/LINE-1 IN)	
C607	1-113-681-11	FILM	0.033uF 10% 400V (EXCEPT PX)			< CONNECTOR >	
C607	1-136-203-11	FILM	0.01uF 10% 400V (PX)	CN101	1-779-724-11	CONNECTOR, BOARD TO BOARD 5P	
C608	1-162-558-11	CERAMIC	100PF 10% 2KV (EXCEPT PX)	CN102	1-779-723-11	CONNECTOR, BOARD TO BOARD 9P	
C609	1-107-974-11	CERAMIC	47PF 5% 2KV (PX)	* CN103	1-766-716-11	CONNECTOR, BOARD TO BOARD 3P	
C610	1-104-683-11	MYLAR	0.0047uF 5% 50V (PX)	CN104	1-506-469-11	PIN, CONNECTOR 4P	
C610	1-115-322-91	FILM	0.047uF 5% 50V (EXCEPT PX)	CN161	1-506-468-11	PIN, CONNECTOR 3P	
C611	1-115-322-91	FILM	0.047uF 5% 50V (EXCEPT PX)	CN260	1-766-986-11	CONNECTOR, FFC/FPC 13P	
C611	1-136-160-00	FILM	0.039uF 5% 50V (PX)	* CN270	1-560-892-00	PIN, CONNECTOR 4P	
C612	1-126-160-11	ELECT	1uF 20% 50V	CN301	1-506-469-11	PIN, CONNECTOR 4P	
C613	1-115-739-31	ELECT	0.0015F 20% 10V	CN302	1-506-468-11	PIN, CONNECTOR 3P	
C614	1-115-789-11	ELECT	0.001F 20% 25V	CN404	1-506-469-11	PIN, CONNECTOR 4P	
C615	1-126-967-11	ELECT	47uF 20% 50V	* CN600	1-580-230-11	PIN, CONNECTOR (PC BOARD) 2P	
C616	1-126-941-11	ELECT	470uF 20% 25V			< DIODE >	
C617	1-126-935-11	ELECT	470uF 20% 16V	D103	8-719-048-26	DIODE GL528V1	
C618	1-126-934-11	ELECT	220uF 20% 16V (PX)	D109	8-719-200-82	DIODE 11ES2	
C618	1-126-967-11	ELECT	47uF 20% 50V (EXCEPT PX)	D161	8-719-200-82	DIODE 11ES2	
C619	1-164-232-11	CERAMIC CHIP	0.01uF 50V	D162	8-719-200-82	DIODE 11ES2	
C620	1-164-232-11	CERAMIC CHIP	0.01uF 50V	D405	8-719-056-07	DIODE SLR-342MC3F (POWER)	
C621	1-164-232-11	CERAMIC CHIP	0.01uF 50V	D420	8-719-109-90	DIODE RD5.6ESB3	
C622	1-128-131-11	ELECT	22uF 20% 50V	D561	8-719-110-08	DIODE RD8.2ES-B2	
C623	1-124-589-11	ELECT	47uF 20% 16V	D600	8-719-051-93	DIODE DF06M-6031	
C624	1-124-589-11	ELECT	47uF 20% 16V	D601	8-719-054-32	DIODE ERA15-06TP3	
C625	1-104-664-11	ELECT	47uF 20% 16V	D602	8-719-058-91	DIODE AG01A-V0 (EXCEPT PX)	
C626	1-126-965-11	ELECT	22uF 20% 50V	D602	8-719-030-25	DIODE EG01C-V0 (PX)	
C627	1-126-965-11	ELECT	22uF 20% 50V	D603	8-719-200-82	DIODE 11ES2 (EXCEPT PX)	
C628	1-164-232-11	CERAMIC CHIP	0.01uF 50V	D604	8-719-109-59	DIODE RD2.7ES-B1 (PX)	
C629	1-124-234-00	ELECT	22uF 20% 16V	D604	8-719-109-62	DIODE RD3.0ES-B1 (EXCEPT PX)	
C631	1-163-259-91	CERAMIC CHIP	220PF 5% 50V (PX)	D605	8-719-911-19	DIODE 1SS119	
C638	1-128-551-11	ELECT	22uF 20% 25V (PX)	D606	8-719-313-17	DIODE AU02A-V0	
C638	1-126-925-11	ELECT	470uF 20% 10V (EXCEPT PX)	D607	8-719-022-97	DIODE D2S4MF	
				D608	8-719-073-18	DIODE S3L20UF34	
				D609	8-719-313-17	DIODE AU02A-V0	
				D610	8-719-160-64	DIODE RD16F-B1	
				D611	8-719-911-19	DIODE 1SS119	
				D612	8-719-109-85	DIODE RD5.1ES-B2	
				D614	8-719-911-19	DIODE 1SS119 (PX)	
				D615	8-719-109-89	DIODE RD5.6ESB2 (PX)	
				D616	8-719-110-47	DIODE RD18ES-T1B (PX)	
				D617	8-719-911-19	DIODE 1SS119 (PX)	
				D618	8-719-911-19	DIODE 1SS119	
				D619	8-719-313-17	DIODE AU02A-V0 (EXCEPT PX)	
				D702	8-719-150-92	DIODE RD33EB3T	

The components identified by mark △ or dotted line with mark △ are critical for safety. Replace only with part number specified.	Les composants identifiés par une marque △ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.
--	--

Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
		< EARTH >		JR128	1-216-295-00	METAL CHIP	0 5% 1/10W
ET600	1-537-770-21	TERMINAL BOARD, GROUND		JR131	1-216-295-00	METAL CHIP	0 5% 1/10W
ET601	1-537-770-21	TERMINAL BOARD, GROUND		JR132	1-216-296-00	METAL CHIP	0 5% 1/8W
		< FUSE >		JR133	1-216-296-00	METAL CHIP	0 5% 1/8W
△F600	1-532-388-31	FUSE (PX)		JR134	1-216-295-00	METAL CHIP	0 5% 1/10W
△F600	1-533-296-11	FUSE, GLASS CYLINDRICAL (DIA.5) (EXCEPT PX)		JR135	1-216-296-00	METAL CHIP	0 5% 1/8W
		< FERRITE BEAD >		JR136	1-216-296-00	METAL CHIP	0 5% 1/8W
FB101	1-414-235-22	INDUCTOR CHIP OUH		JR137	1-216-296-00	METAL CHIP	0 5% 1/8W
FB601	1-410-858-21	INDUCTOR OUH		JR139	1-216-296-00	METAL CHIP	0 5% 1/8W
		< FUSE HOLDER >		JR140	1-216-295-00	METAL CHIP	0 5% 1/10W
FH600	1-533-399-31	HOLDER, FUSE		JR141	1-216-295-00	METAL CHIP	0 5% 1/10W
FH601	1-533-399-31	HOLDER, FUSE		JR142	1-216-295-00	METAL CHIP	0 5% 1/10W
		< IC >		JR143	1-216-296-00	METAL CHIP	0 5% 1/8W
IC101	8-759-481-46	IC LB1943		JR144	1-216-296-00	METAL CHIP	0 5% 1/8W
IC160	8-759-580-37	IC M37760M8A120GP		JR145	1-216-296-00	METAL CHIP	0 5% 1/8W
IC161	8-759-518-23	IC X24C04S8		JR146	1-216-296-00	METAL CHIP	0 5% 1/8W
IC161	8-759-575-71	IC M24C04-WMN6T		JR147	1-216-295-00	METAL CHIP	0 5% 1/10W
IC162	8-759-248-87	IC MM1256XF-BE		JR148	1-216-296-00	METAL CHIP	0 5% 1/8W
IC201	8-759-564-37	IC LA71050M-MPB		JR149	1-216-296-00	METAL CHIP	0 5% 1/8W
IC260	8-759-564-36	IC LA70011		JR150	1-216-296-00	METAL CHIP	0 5% 1/8W
IC331	8-759-499-30	IC BA7755AF-E2		JR152	1-216-296-00	METAL CHIP	0 5% 1/8W
IC360	8-759-559-37	IC TDA9605H/N1,557		JR153	1-216-296-00	METAL CHIP	0 5% 1/8W
IC403	8-742-042-00	HY B IC SBX1986-51		JR154	1-216-296-00	METAL CHIP	0 5% 1/8W
IC420	8-759-438-82	IC uPD16311GC-AB6		JR155	1-216-296-00	METAL CHIP	0 5% 1/8W
IC601	8-759-438-18	IC PQ12RD08		JR156	1-216-295-00	METAL CHIP	0 5% 1/10W
IC602	8-759-321-95	IC HA17431PA-TZ		JR157	1-216-295-00	METAL CHIP	0 5% 1/10W
		< JUMPER RESISTOR >		JR158	1-216-295-00	METAL CHIP	0 5% 1/10W
JR045	1-216-295-00	METAL CHIP	0 5% 1/10W	JR159	1-216-295-00	METAL CHIP	0 5% 1/10W
JR046	1-216-295-00	METAL CHIP	0 5% 1/10W	JR160	1-216-295-00	METAL CHIP	0 5% 1/10W
JR047	1-216-295-00	METAL CHIP	0 5% 1/10W	JR161	1-216-295-00	METAL CHIP	0 5% 1/10W
JR048	1-216-295-00	METAL CHIP	0 5% 1/10W	JR162	1-216-296-00	METAL CHIP	0 5% 1/8W
JR100	1-216-296-00	METAL CHIP	0 5% 1/8W	JR163	1-216-295-00	METAL CHIP	0 5% 1/10W
JR101	1-216-296-00	METAL CHIP	0 5% 1/8W	JR164	1-216-295-00	METAL CHIP	0 5% 1/10W
JR102	1-216-296-00	METAL CHIP	0 5% 1/8W	JR166	1-216-296-00	METAL CHIP	0 5% 1/8W
JR104	1-216-296-00	METAL CHIP	0 5% 1/8W	JR169	1-216-296-00	METAL CHIP	0 5% 1/8W
JR105	1-216-295-00	METAL CHIP	0 5% 1/10W	JR170	1-216-296-00	METAL CHIP	0 5% 1/8W
JR107	1-216-295-00	METAL CHIP	0 5% 1/10W	JR172	1-216-296-00	METAL CHIP	0 5% 1/8W
JR109	1-216-296-00	METAL CHIP	0 5% 1/8W	JR173	1-216-295-00	METAL CHIP	0 5% 1/10W
JR113	1-216-296-00	METAL CHIP	0 5% 1/8W	JR174	1-216-296-00	METAL CHIP	0 5% 1/8W
JR114	1-216-296-00	METAL CHIP	0 5% 1/8W	JR175	1-216-295-00	METAL CHIP	0 5% 1/10W
JR115	1-216-295-00	METAL CHIP	0 5% 1/10W	JR176	1-216-296-00	METAL CHIP	0 5% 1/8W
JR116	1-216-296-00	METAL CHIP	0 5% 1/8W	JR180	1-216-295-00	METAL CHIP	0 5% 1/10W
JR117	1-216-295-00	METAL CHIP	0 5% 1/10W	JR181	1-216-295-00	METAL CHIP	0 5% 1/10W
JR118	1-216-295-00	METAL CHIP	0 5% 1/10W	JR182	1-216-295-00	METAL CHIP	0 5% 1/10W
JR119	1-216-296-00	METAL CHIP	0 5% 1/8W	JR183	1-216-295-00	METAL CHIP	0 5% 1/10W
JR120	1-216-295-00	METAL CHIP	0 5% 1/10W	JR184	1-216-295-00	METAL CHIP	0 5% 1/10W
JR121	1-216-296-00	METAL CHIP	0 5% 1/8W	JR190	1-216-296-00	METAL CHIP	0 5% 1/8W
JR123	1-216-295-00	METAL CHIP	0 5% 1/10W	JR197	1-216-296-00	METAL CHIP	0 5% 1/8W
JR124	1-216-295-00	METAL CHIP	0 5% 1/10W	JR198	1-216-296-00	METAL CHIP	0 5% 1/8W
JR125	1-216-296-00	METAL CHIP	0 5% 1/8W	JR199	1-216-295-00	METAL CHIP	0 5% 1/10W
JR126	1-216-295-00	METAL CHIP	0 5% 1/10W	JR200	1-216-295-00	METAL CHIP	0 5% 1/10W
JR127	1-216-295-00	METAL CHIP	0 5% 1/10W	JR201	1-216-296-00	METAL CHIP	0 5% 1/8W
				JR202	1-216-295-00	METAL CHIP	0 5% 1/10W

The components identified by mark △ or dotted line with mark △ are critical for safety. Replace only with part number specified.	Les composants identifiés par une marque △ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.
--	--



Ref. No.	Part No.	Description	Quantity	Unit	Material	Remarks	Ref. No.	Part No.	Description	Quantity	Unit	Material	Remarks
R112	1-216-065-00	METAL CHIP	4.7K		5%	1/10W	R224	1-216-089-00	METAL CHIP	47K		5%	1/10W
R115	1-216-089-00	METAL CHIP	47K		5%	1/10W	R225	1-216-295-00	METAL CHIP	0		5%	1/10W
R116	1-216-089-00	METAL CHIP	47K		5%	1/10W	R231	1-216-089-00	METAL CHIP	47K		5%	1/10W
R117	1-216-041-00	METAL CHIP	470		5%	1/10W	R232	1-216-089-00	METAL CHIP	47K		5%	1/10W
R118	1-216-089-00	METAL CHIP	47K		5%	1/10W	R267	1-216-295-00	METAL CHIP	0		5%	1/10W
R119	1-216-077-00	METAL CHIP	15K		5%	1/10W	R270	1-216-041-00	METAL CHIP	470		5%	1/10W
R120	1-249-417-11	CARBON	1K		5%	1/4W F	R271	1-216-041-00	METAL CHIP	470		5%	1/10W
R121	1-216-041-00	METAL CHIP	470		5%	1/10W	R272	1-208-788-11	RES,CHIP	1.8K		0.50%	1/10W
R142	1-216-051-00	METAL CHIP	1.2K		5%	1/10W	R273	1-216-295-00	METAL CHIP	0		5%	1/10W
R143	1-216-065-00	METAL CHIP	4.7K		5%	1/10W	R274	1-216-063-91	RES,CHIP	3.9K		5%	1/10W
R159	1-216-097-91	RES,CHIP	100K		5%	1/10W	R276	1-216-069-00	METAL CHIP	6.8K		5%	1/10W
R160	1-216-049-00	METAL CHIP	1K		5%	1/10W	R277	1-216-081-00	METAL CHIP	22K		5%	1/10W
R161	1-216-073-00	METAL CHIP	10K		5%	1/10W	R278	1-216-081-00	METAL CHIP	22K		5%	1/10W
R162	1-249-419-11	CARBON	1.5K		5%	1/4W F (679)	R279	1-216-081-00	METAL CHIP	22K		5%	1/10W
R163	1-216-049-00	METAL CHIP	1K		5%	1/10W	R301	1-216-067-00	METAL CHIP	5.6K		5%	1/10W
R164	1-216-089-00	METAL CHIP	47K		5%	1/10W	R302	1-216-093-91	RES,CHIP	68K		5%	1/10W
R165	1-216-089-00	METAL CHIP	47K		5%	1/10W	R305	1-216-129-00	METAL CHIP	2.2M		5%	1/10W
R166	1-216-073-00	METAL CHIP	10K		5%	1/10W	R309	1-216-043-91	RES,CHIP	560		5%	1/10W
R167	1-249-431-11	CARBON	15K		5%	1/4W	R310	1-216-071-00	METAL CHIP	8.2K		5%	1/10W
R168	1-216-073-00	METAL CHIP	10K		5%	1/10W	R311	1-216-061-00	METAL CHIP	3.3K		5%	1/10W
R169	1-216-073-00	METAL CHIP	10K		5%	1/10W	R312	1-216-057-00	METAL CHIP	2.2K		5%	1/10W
R170	1-216-061-00	METAL CHIP	3.3K		5%	1/10W	R313	1-216-051-00	METAL CHIP	1.2K		5%	1/10W
R171	1-216-089-00	METAL CHIP	47K		5%	1/10W	R314	1-216-073-00	METAL CHIP	10K		5%	1/10W
R172	1-216-073-00	METAL CHIP	10K		5%	1/10W	R315	1-216-035-00	METAL CHIP	270		5%	1/10W
R174	1-216-039-00	METAL CHIP	390		5%	1/10W	R316	1-216-109-00	METAL CHIP	330K		5%	1/10W
R175	1-216-041-00	METAL CHIP	470		5%	1/10W	R317	1-216-071-00	METAL CHIP	8.2K		5%	1/10W
R176	1-216-041-00	METAL CHIP	470		5%	1/10W	R318	1-216-065-00	METAL CHIP	4.7K		5%	1/10W
R177	1-216-041-00	METAL CHIP	470		5%	1/10W	R319	1-216-033-00	METAL CHIP	220		5%	1/10W
R178	1-216-105-91	RES,CHIP	220K		5%	1/10W	R320	1-217-671-11	METAL CHIP	1		5%	1/10W
R179	1-216-113-00	METAL CHIP	470K		5%	1/10W	R321	1-216-063-91	RES,CHIP	3.9K		5%	1/10W
R180	1-216-061-00	METAL CHIP	3.3K		5%	1/10W	R322	1-216-017-91	RES,CHIP	47		5%	1/10W
R183	1-216-295-00	METAL CHIP	0		5%	1/10W	R323	1-216-081-00	METAL CHIP	22K		5%	1/10W
R184	1-216-295-00	METAL CHIP	0		5%	1/10W	R324	1-216-031-00	METAL CHIP	180		5%	1/10W
R185	1-216-295-00	METAL CHIP	0		5%	1/10W	R325	1-216-075-00	METAL CHIP	12K		5%	1/10W
R187	1-216-295-00	METAL CHIP	0		5%	1/10W	R326	1-216-079-00	METAL CHIP	18K		5%	1/10W
R188	1-216-069-00	METAL CHIP	6.8K		5%	1/10W	R327	1-216-033-00	METAL CHIP	220		5%	1/10W
R189	1-216-061-00	METAL CHIP	3.3K		5%	1/10W	R361	1-216-083-00	METAL CHIP	27K		5%	1/10W
R191	1-249-417-11	CARBON	1K		5%	1/4W F	R362	1-216-057-00	METAL CHIP	2.2K		5%	1/10W
R192	1-249-417-11	CARBON	1K		5%	1/4W F	R363	1-208-820-11	RES,CHIP	39K		0.50%	1/10W
R193	1-216-295-00	METAL CHIP	0		5%	1/10W	R364	1-216-057-00	METAL CHIP	2.2K		5%	1/10W
R194	1-216-073-00	METAL CHIP	10K		5%	1/10W	R365	1-216-083-00	METAL CHIP	27K		5%	1/10W
R196	1-216-295-00	METAL CHIP	0		5%	1/10W	R366	1-216-041-00	METAL CHIP	470		5%	1/10W
R201	1-216-037-00	METAL CHIP	330		5%	1/10W	R368	1-216-079-00	METAL CHIP	18K		5%	1/10W
R202	1-216-047-91	RES,CHIP	820		5%	1/10W	R369	1-216-133-00	METAL CHIP	3.3M		5%	1/10W
R203	1-216-037-00	METAL CHIP	330		5%	1/10W	R370	1-216-049-00	METAL CHIP	1K		5%	1/10W
R204	1-216-061-00	METAL CHIP	3.3K		5%	1/10W	R371	1-216-049-00	METAL CHIP	1K		5%	1/10W
R205	1-208-830-11	RES,CHIP	100K		0.50%	1/10W	R372	1-216-073-00	METAL CHIP	10K		5%	1/10W
R208	1-216-295-00	METAL CHIP	0		5%	1/10W	R373	1-216-295-00	METAL CHIP	0		5%	1/10W
R209	1-216-055-00	METAL CHIP	1.8K		5%	1/10W	R374	1-216-295-00	METAL CHIP	0		5%	1/10W
R210	1-249-419-11	CARBON	1.5K		5%	1/4W F	R375	1-216-025-91	RES,CHIP	100		5%	1/10W
R211	1-216-065-00	METAL CHIP	4.7K		5%	1/10W	R376	1-216-025-91	RES,CHIP	100		5%	1/10W
R212	1-216-043-91	RES,CHIP	560		5%	1/10W	R377	1-216-295-00	METAL CHIP	0		5%	1/10W
R213	1-216-049-00	METAL CHIP	1K		5%	1/10W	R378	1-216-295-00	METAL CHIP	0		5%	1/10W
R214	1-216-055-00	METAL CHIP	1.8K		5%	1/10W	R380	1-216-073-00	METAL CHIP	10K		5%	1/10W
R215	1-216-071-00	METAL CHIP	8.2K		5%	1/10W	R381	1-216-061-00	METAL CHIP	3.3K		5%	1/10W
R216	1-216-055-00	METAL CHIP	1.8K		5%	1/10W	R382	1-216-049-00	METAL CHIP	1K		5%	1/10W
R218	1-216-295-00	METAL CHIP	0		5%	1/10W	R383	1-216-049-00	METAL CHIP	1K		5%	1/10W
R219	1-216-025-91	RES,CHIP	100		5%	1/10W	R385	1-216-295-00	METAL CHIP	0		5%	1/10W
R220	1-216-295-00	METAL CHIP	0		5%	1/10W	R386	1-216-295-00	METAL CHIP	0		5%	1/10W
R221	1-216-295-00	METAL CHIP	0		5%	1/10W	R401	1-216-029-00	METAL CHIP	150		5%	1/10W



# MA-341

Ref. No.	Part No.	Description	Quantity	Power	Notes	Remarks
R402	1-216-089-00	METAL CHIP	47K	5%	1/10W	
R409	1-216-013-00	METAL CHIP	33	5%	1/10W	
R414	1-216-053-00	METAL CHIP	1.5K	5%	1/10W	
R415	1-216-053-00	METAL CHIP	1.5K	5%	1/10W	
R417	1-216-057-00	METAL CHIP	2.2K	5%	1/10W	
R418	1-216-057-00	METAL CHIP	2.2K	5%	1/10W	
R419	1-216-059-00	METAL CHIP	2.7K	5%	1/10W	
R420	1-216-059-00	METAL CHIP	2.7K	5%	1/10W	
R421	1-216-295-00	METAL CHIP	0	5%	1/10W	
R422	1-216-049-00	METAL CHIP	1K	5%	1/10W	
R423	1-216-049-00	METAL CHIP	1K	5%	1/10W	
R424	1-216-049-00	METAL CHIP	1K	5%	1/10W	
R425	1-216-085-00	METAL CHIP	33K	5%	1/10W	
R426	1-216-065-00	METAL CHIP	4.7K	5%	1/10W	
R427	1-216-053-00	METAL CHIP	1.5K	5%	1/10W	
R440	1-216-075-00	METAL CHIP	12K	5%	1/10W	
R441	1-216-075-00	METAL CHIP	12K	5%	1/10W	
R442	1-216-077-00	METAL CHIP	15K	5%	1/10W	
R500	1-216-049-00	METAL CHIP	1K	5%	1/10W	
R502	1-216-073-00	METAL CHIP	10K	5%	1/10W	
R503	1-216-049-00	METAL CHIP	1K	5%	1/10W	
R504	1-216-049-00	METAL CHIP	1K	5%	1/10W	
R505	1-216-045-00	METAL CHIP	680	5%	1/10W	
R507	1-216-041-00	METAL CHIP	470	5%	1/10W	
R508	1-216-053-00	METAL CHIP	1.5K	5%	1/10W	
R509	1-216-121-91	RES,CHIP	1M	5%	1/10W	
R512	1-216-295-00	METAL CHIP	0	5%	1/10W	
R513	1-216-041-00	METAL CHIP	470	5%	1/10W	
R561	1-216-037-00	METAL CHIP	330	5%	1/10W	
R562	1-249-407-11	CARBON	150	5%	1/4W F	
R563	1-249-408-11	CARBON	180	5%	1/4W F	
R564	1-216-021-00	METAL CHIP	68	5%	1/10W	
R565	1-216-022-00	METAL CHIP	75	5%	1/10W	
△R600	1-219-779-51	CARBON	6.8M	10%	1/2W	(EXCEPT PX)
R601	1-249-441-11	CARBON	100K	5%	1/4W	
R602	1-249-441-11	CARBON	100K	5%	1/4W	(EXCEPT PX)
R602	1-247-883-00	CARBON	150K	5%	1/4W	(PX)
R606	1-249-415-11	CARBON	680	5%	1/4W F	(PX)
R603	1-249-439-11	CARBON	68K	5%	1/4W	(PX)
R603	1-249-429-11	CARBON	10K	5%	1/4W	(EXCEPT PX)
R604	1-215-889-00	METAL OXIDE	330	5%	2W F	(PX)
R604	1-216-451-11	METAL OXIDE	120	5%	2W F	(EXCEPT PX)
R605	1-215-416-00	METAL	620	1%	1/4W	(EXCEPT PX)
R605	1-249-411-11	CARBON	330	5%	1/4W	(PX)
R606	1-249-402-11	CARBON	56	5%	1/4W F	(EXCEPT PX)
R607	1-215-927-41	METAL OXIDE	47K	5%	3W	
R608	1-249-401-11	CARBON	47	5%	1/4W F	
R609	1-249-406-11	CARBON	120	5%	1/4W F	
R610	1-208-789-11	RES,CHIP	2K	0.50%	1/10W	
R611	1-216-655-11	METAL CHIP	1.5K	0.5%	1/10W	

Ref. No.	Part No.	Description	Quantity	Power	Notes	Remarks
R612	1-219-786-81	FUSIBLE	22	5%	1/4W	(EXCEPT PX)
R613	1-260-091-11	CARBON	220	5%	1/2W	
△R614	1-219-153-11	FUSIBLE	10	5%	1/4W F	(PX)
△R614	1-240-306-81	FUSIBLE	15	5%	1/4W	(EXCEPT PX)
R615	1-249-417-11	CARBON	1K	5%	1/4W F	
R616	1-247-815-91	CARBON	220	5%	1/4W	
R617	1-249-417-11	CARBON	1K	5%	1/4W F	
R618	1-260-091-11	CARBON	220	5%	1/2W	
R619	1-249-413-11	CARBON	470	5%	1/4W F	
R620	1-249-413-11	CARBON	470	5%	1/4W F	
R623	1-216-061-00	METAL CHIP	3.3K	5%	1/10W	
R624	1-216-430-11	METAL OXIDE	390	5%	1W F	
R625	1-249-429-11	CARBON	10K	5%	1/4W	
△R626	1-260-364-11	CARBON	1M	5%	1/2W	(PX)
R627	1-249-441-11	CARBON	100K	5%	1/4W	(PX)
R628	1-216-093-91	RES,CHIP	68K	5%	1/10W	(PX)
R629	1-216-341-11	METAL OXIDE	0.22	5%	1W F	(PX)
R630	1-216-049-00	METAL CHIP	1K	5%	1/10W	
R633	1-216-295-00	METAL CHIP	0	5%	1/10W	(EXCEPT PX)
R633	1-216-047-91	RES,CHIP	820	5%	1/10W	(PX)
R634	1-216-073-00	METAL CHIP	10K	5%	1/10W	(PX)
R635	1-216-017-91	RES,CHIP	47	5%	1/10W	(PX)
R636	1-216-047-91	RES,CHIP	820	5%	1/10W	(PX)
R637	1-247-815-91	CARBON	220	5%	1/4W	
△R641	1-219-123-11	FUSIBLE	0.47	5%	1/4W F	(EXCEPT PX)
△R642	1-216-374-41	METAL OXIDE	2.7	5%	2W	(EXCEPT PX)
△R642	1-215-907-11	METAL OXIDE	22	5%	3W F	(PX)
R643	1-216-061-00	METAL CHIP	3.3K	5%	1/10W	
R645	1-260-073-11	CARBON	5.6	5%	1/2W	(PX)
R646	1-260-073-11	CARBON	5.6	5%	1/2W	(PX)
R647	1-215-857-11	METAL OXIDE	10	5%	1W F	(PX)
R701	1-216-049-00	METAL CHIP	1K	5%	1/10W	
R702	1-216-061-00	METAL CHIP	3.3K	5%	1/10W	
R703	1-216-039-00	METAL CHIP	390	5%	1/10W	
R704	1-216-043-91	RES,CHIP	560	5%	1/10W	
△R705	1-240-307-81	FUSIBLE	560	5%	1/4W	
R706	1-216-113-00	METAL CHIP	470K	5%	1/10W	
R707	1-216-065-00	METAL CHIP	4.7K	5%	1/10W	
R709	1-216-061-00	METAL CHIP	3.3K	5%	1/10W	
R710	1-216-061-00	METAL CHIP	3.3K	5%	1/10W	

The components identified by mark △ or dotted line with mark △ are critical for safety. Replace only with part number specified.

Les composants identifiés par une marque △ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

Ref. No.	Part No.	Description	Remarks
R711	1-216-061-00	METAL CHIP	3.3K 5% 1/10W
R712	1-216-295-00	METAL CHIP	0 5% 1/10W
R713	1-216-295-00	METAL CHIP	0 5% 1/10W
R731	1-216-049-00	METAL CHIP	1K 5% 1/10W
R732	1-216-049-00	METAL CHIP	1K 5% 1/10W
R733	1-216-065-00	METAL CHIP	4.7K 5% 1/10W
R734	1-216-049-00	METAL CHIP	1K 5% 1/10W
R735	1-216-049-00	METAL CHIP	1K 5% 1/10W
R736	1-216-295-00	METAL CHIP	0 5% 1/10W
R737	1-216-081-00	METAL CHIP	22K 5% 1/10W
R738	1-216-081-00	METAL CHIP	22K 5% 1/10W
< SWITCH >			
S101	1-762-108-11	SWITCH, PUSH (1 KEY)	
S102	1-771-155-11	SWITCH, ROTARY	
S401	1-771-574-21	SWITCH, TACTILE (EJECT)	
S402	1-771-574-21	SWITCH, TACTILE (POWER)	
S403	1-771-574-21	SWITCH, TACTILE (CHANNEL-)	
S406	1-771-574-21	SWITCH, TACTILE (EASY SET UP)	
S410	1-771-574-21	SWITCH, TACTILE (PAUSE)	
S421	1-771-574-21	SWITCH, TACTILE (CHANNEL+)	
S431	1-771-574-21	SWITCH, TACTILE (REC)	
S701	1-571-588-11	SWITCH, SLIDE	
< TRANSFORMER >			
△T301	1-433-479-11	TRANSFORMER, BIAS OSCILLATION	
△T600	1-431-694-11	TRANSFORMER, CONVERTER (RCC)	
△T600	1-433-568-11	TRANSFORMER, CONVERTER (RCC)	(EXCEPT PX)
< TUNER >			
TU701	8-598-473-00	TUNER, FSS BTF-MA431 (VHF/UHF)	
< VARISTOR >			
△VDR600	1-801-267-31	VARISTOR TNR10V431K660 (PX)	
△VDR600	1-801-445-31	VARISTOR TNR10V241K660 (EXCEPT PX)	
< VIBRATOR >			
X160	1-767-857-11	VIBRATOR, CRYSTAL (14.31818MHz)	
X161	1-579-463-11	VIBRATOR, CRYSTAL (32.768kHz)	
X201	1-577-380-11	VIBRATOR, CRYSTAL (3.579545MHz)	

\*\*\*\*\*

Ref. No.	Part No.	Description	Remarks
		MISCELLANEOUS	
		*****	
	1-779-725-11	CONNECTOR, BOARD TO BOARD 5P	
△ 11	1-782-000-13	CORD, POWER (PX)	
△ 11	1-782-001-13	CORD, POWER (PX)	
△ 11	1-790-293-21	CORD, POWER (EXCEPT PX)	
12	1-418-153-11	COMMANDER,STANDARD (RMT-V266)	
704	1-500-144-11	HEAD, FE	
776	8-839-057-51	DRUM ASSY DZH-0A 7A/Z-RP	
832	1-766-723-21	CONNECTOR, BOARD TO BOAR 3P	
M902	1-698-971-11	MOTOR, DC	
M903	X-3947-577-1	MOTOR ASSY, CAM	
*****			
ACCESSORIES & PACKING MATERIALS			
*****			
*	3-961-581-01	SHEET, PROTECTION	
*	3-979-710-01	SPACER	
	1-575-334-11	CORD, CONNECTION	
	1-696-592-11	CORD, CONNECTION (NTSC)	
	3-865-038-11	MANUAL, INSTRUCTION (ENGLISH)	
	3-865-038-21	MANUAL, INSTRUCTION	(FRENCH/CHINESE)(CND)
*****			
*****			
HARDWARE LIST			
*****			
#1	7-685-648-79	SCREW +BVTP	3 × 12 TYPE2 IT-3
#701	7-685-646-79	SCREW +BVTP	3 × 8 TYPE2 IT-3
#702	7-682-147-01	SCREW +P	3 × 6
#703	7-685-133-19	SCREW (DIA. 2.6)	(IT3B)

The components identified by mark △ or dotted line with mark △ are critical for safety. Replace only with part number specified.	Les composants identifiés par une marque △ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.
--	--

