

XR-C210MK2/C212MK2/C213MK2

SERVICE MANUAL

AEP Model

UK Model

XR-C210MK2

German Model

XR-C212MK2

East European Model

XR-C213MK2



Photo: XR-C210MK2

| | |
|------------------------------------|--------------|
| Model Name Using Similar Mechanism | XR-C210/C212 |
| Tape Transport Mechanism Type | MG-50EX-39 |

SPECIFICATIONS

Cassette player section

| | |
|-----------------------|--------------------------|
| Tape track | 4-track 2-channel stereo |
| Wow and flutter | 0.06% (WRMS) |
| Frequency response | 30 - 18,000 Hz |
| Signal-to-noise ratio | |
| Cassette type | |
| TYPE II, IV | 61 dB |
| TYPE I | 58 dB |

Tuner section

| | |
|------------------------------|--|
| FM | |
| Tuning range | XR-C210MK2/C212MK2: 87.5 - 108.0 MHz XR-C213MK2: 65.0 - 74.0 MHz, 87.5 - 108.0 MHz |
| Antenna terminal | External antenna connector |
| Intermediate frequency | 10.7 MHz |
| Usable sensitivity | XR-C210MK2/C212MK2: 8 dBf XR-C213MK2: 10 dBf |
| Selectivity | 75 dB at 400 kHz |
| Signal-to-noise ratio | 65 dB (stereo), 70 dB (mono) |
| Harmonic distortion at 1 kHz | 0.5% (stereo), 0.3% (mono) |
| Separation | 35 dB at 1 kHz |
| Frequency response | 30 - 15,000 Hz |
| Capture ratio | 2 dB |

MW/LW (SW, for the XR-C212MK2)

| | |
|------------------------|---|
| Tuning range | MW: 531 - 1,602 kHz LW: 153 - 281 kHz SW: 5,950 - 6,205 kHz |
| Antenna terminal | External antenna connector |
| Intermediate frequency | 10.71 MHz/450 kHz |
| Sensitivity | MW: 30 μ V LW: 50 μ V SW: 50 μ V |

Power amplifier section

| | |
|----------------------|---|
| Outputs | Speaker outputs (sure seal connectors) |
| Speaker impedance | 4 - 8 ohms |
| Maximum power output | 22 W x 4 (at 4 ohms) |

General

| | |
|--------------------|--|
| Output lead | Power antenna relay control lead Power amplifier control lead |
| Tone controls | Bass \pm 8 dB at 100 Hz Treble \pm 8 dB at 10 kHz |
| Power requirements | 12 V DC car battery (negative ground) |
| Dimensions | Approx. 188 x 58 x 170 mm (w/h/d) not incl. projecting parts and controls |
| Mounting dimension | Approx. 182 x 53 x 153 mm (w/h/d) not incl. projecting parts and controls |

—continued on next page—

FM/MW/LW CASSETTE CAR STEREO
XR-C210MK2/C213MK2

FM/MW/SW CASSETTE CAR STEREO
XR-C212MK2

SONY®


| | |
|----------------------|---|
| Mass | Approx. 1.3 kg |
| Supplied accessories | S Commander RM-X1S (XR-C210MK2: AEP, C212MK2/ C213MK2) (1) Power connecting cord (1) Mounting hardware (1 set) Chassis ground cord (1) Front panel case (1) |

Design and specifications are subject to change without notice.

TABLE OF CONTENTS

| <u>Section</u> | <u>Title</u> | <u>Page</u> | <u>Section</u> | <u>Title</u> | <u>Page</u> |
|--------------------------------------|---|-------------|--|--------------|-------------|
| 1. GENERAL | | | 4. MECHANICAL ADJUSTMENTS | | 15 |
| | Button Locations | 3 | 5. ELECTRICAL ADJUSTMENTS | | |
| | Setting the Clock | 3 | Deck Section | | 15 |
| | Listening to Tape Playback | 3 | Tuner Section | | 16 |
| | Convenient Functions | 4 | 6. DIAGRAMS | | |
| | Tuning in a Station | 4 | 6-1. IC Pin Description | | 19 |
| | Memorizing Stations | 5 | 6-2. Block Diagram | | 21 |
| | Traffic Announcement Reception (XR-C212MK2) | 5 | 6-3. Circuit Boards Location | | 23 |
| | Other Functions | 5 | 6-4. Printed Wiring Boards—Main Section— | | 24 |
| | CD Changer Operation | 6 | 6-5. Schematic Diagram—Main Section— | | 27 |
| | Connections | 7 | 6-6. Printed Wiring Board—Panel Section— | | 32 |
| 2. DISASSEMBLY | | | 6-7. Schematic Diagram—Panel Section— | | 34 |
| 2-1. | Sub Panel | 9 | 7. EXPLODED VIEWS | | |
| 2-2. | Heat Sink | 9 | 7-1. Chassis Section | | 40 |
| 2-3. | Mechanism Deck Block | 10 | 7-2. Front Panel Section | | 41 |
| 2-4. | Main Board | 10 | 7-3. Mechanism Deck Section | | 42 |
| 2-5. | Front Back Panel | 10 | 8. ELECTRICAL PARTS LIST | | 43 |
| 3. ASSEMBLY OF MECHANISM DECK | | | | | |
| 3-1. | Installing the Loading Gears | 11 | | | |
| 3-2. | Installing the Reel Bracket | 11 | | | |
| 3-3. | Installing the Mode Lever and Pinch Levers | 12 | | | |
| 3-4. | Installing the Cassette Housing | 13 | | | |
| 3-5. | Installing the Loading Lever | 13 | | | |
| 3-6. | Positioning the Loading Levers | 14 | | | |
| 3-7. | Installing the Gear (Loading F) | 14 | | | |

Button Locations

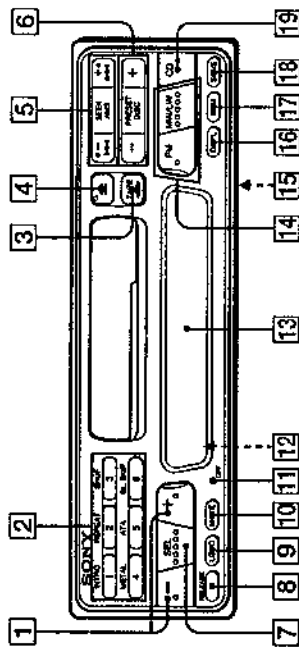

Refer to the pages in ● for details.

- 1 [VOLUME] (volume/bass/treble/balance/fader control) button ④
- 2 [Preset] (during radio reception: Preset number buttons ⑤)
- 3 [TAPE] (during tape/CD playback: INTRO button ⑥, REPEAT button ⑦, SHUF button ⑧, METAL button ⑨, ATA (Automatic Tuner Activation) button ⑩, BLSKIP button ⑪)
- 4 [EJECT] (TAPE/CD) button ⑫
- 5 [SEEK/AMS] button ⑬
- 6 [PRESET/DISC] button ⑭
- 7 [SEL] (control mode select) button ⑮
- 8 [RELEASE] (front panel release) button ⑯
- 9 [LOUD] (loudness) button ⑰
- 10 [MUTE] button ⑱
- 11 [OFF] button ①
- 12 [Reset] (located on the front side of the unit hidden by the front panel) ②
- 13 [Display window] ⑬
- 14 [XR-C210MK2/C213MK2: radio on/band select] button ②③
- 15 [XR-C212MK2: radio on/band select] button ④⑤
- 16 [POWER SELECT] (traffic announcement) button ⑥
- 17 [POWER SELECT] (located on the bottom of the unit) ⑦
- 18 [DSPL] (display mode change/time set) button ⑧
- 19 [BTM] (Best Tuning Memory) button ⑨
- 20 [SENS] (sensitivity adjust) button ⑩
- 21 [CD] (disc play/CD changer select) button ⑪

The illustration of the front panel in this manual is of the XR-C210MK2.


Setting the Clock

The clock has a 24-hour digital indication.

For example, setting it to 10:08


- 1 **Display the time.** (Press the OFF or the [POWER SELECT] button during the unit operation.)

- 2 **Press the [HOUR] button for more than two seconds.**




The hour digit blinks.

Set the hour digits.




(to go back) (to go forward)

- 3 **Press the [MINUTE] button momentarily.**




The minute digit blinks.

Set the minute digits.



(to go back) (to go forward)

- 4 **Press the [MINUTE] button momentarily.**



The clock activates.

Note
If the POWER SELECT switch on the bottom of the unit is set to the [OFF] position, the clock cannot be set unless the power is turned on. Set the clock after you have turned on the radio or started cassette playback.


Listening to Tape Playback

After inserting the cassette, playback will start automatically.




If a cassette is already inserted, press the [TAPE] button to start playback. If you press during playback, the tape transport direction will change.

Indication of Tape Transport Direction



The side facing up is being played.



The side facing down is being played.


To stop playback, effect the cassette by pressing the [OFF] button or press the OFF button.

Playback stops also when you select another source (radio, CD) by pressing the [RADIO] or [CD] button.

Ejecting the Cassette

Press the [EJECT] button.

Fast-winding the Tape



Rewind

Fast-forward

To start playback during rewinding or fast-forwarding, press the [TAPE] button.

SECTION 1 GENERAL


Cassette Player Operation

This section is extracted from instruction manual.

Tuning in by Adjusting the Frequency

- Manual Tuning
- 1 Select the desired band.
XR-C210MK2/ C213MK2: XR-C12MK2:

- 2 Press and hold either side of the PRESET/DISC button.
Release the button when the desired station is received.




PREVENTING ACCIDENTS!
When tuning in during driving, use the automatic tuning and the memory preset tuning instead of the manual tuning.

Tuning in a Station

- Searching for the Stations Automatically
- Automatic Tuning
- 1 Select the desired band.
XR-C210MK2/C213MK2:

- FM1 → FM2 → FM3 → FM1
- MW → LW
- XR-C12MK2:

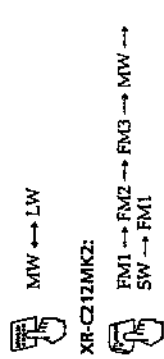

- 2 Press either side of the SEEK/AMS button to search for the station (automatic tuning).

The scanning stops when a station is received. Press either side of the button repeatedly until the desired station is received.

When an FM stereo program with a sufficient signal strength is tuned in, the "ST" indication will appear.

To avoid the automatic tuning from stopping on stations too frequently (local seek mode), press the "LCL" button momentarily to get the "LCL" indication.
Only the stations with relatively strong signals can be tuned in. The local seek mode functions only when the automatic tuning is in operation.

If FM Stereo Reception is Poor

- Monaural Mode
- Press the button momentarily. → "MONO" appears on the display. The sound will improve, but it will become monaural.

Playing Tracks Repeatedly

- Repeat Play Function
- Press the button during playback. → "REP" appears on the display. When the currently played track is over, it will be played again from the beginning. To cancel this mode, press the button again.

Radio Reception during Fast-forwarding or Rewinding of a Tape

- ATA (Automatic Tuner Activation) Function
- Press the button during playback. → "ATA" appears on the display. When fast-forwarding or rewinding with the button, the tuner will turn on automatically.

Skipping Blanks Automatically during Tape Playback

- Blank Skip Function
- Press the button during playback. → "BL.SKIP" appears on the display. Blanks longer than eight seconds will be automatically skipped during tape playback.


Playing a CrO2 or Metal Tape

- Press the button when you want to listen to a CrO₂ (TYPE II) or metal (TYPE IV) tape. → "MFL" will appear on the display. To cancel, press again.

Convenient Functions

Locating the Beginnings of the Tracks

- AMS (Automatic Music Sensor) Function
- During playback, press either side of the SEEK/AMS button the number of times you wish to skip the tracks.

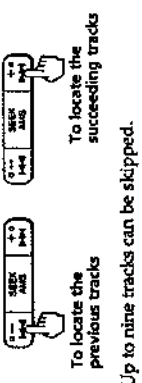

Up to nine tracks can be skipped. If the blanks between the tracks are shorter than four seconds, or if there are noises, the AMS function will not work. Also, the unit may read long sections of low volume music or quiet sections on a track as blanks between tracks.






Searching the Desired Track


- Intro Scan Function
- Press the button during playback. → "INTRO" appears on the display. The first 10 seconds of all the tracks are played. When you find the desired track, press the button once more. The unit returns to the normal playback mode.

Memorizing Stations

Memorizing Stations Automatically






— **BTM (Best Tuning Memory) Function**
This function selects from the currently received band the stations with the strongest signals and memorizes them in order of their frequency.

- 1 Select the desired band.
XR-C210MK2/
C213MK2:   
XR-C212MK2:  

- 2 Press the  button for more than two seconds.
 - When there is no preset number indicated on the display window, stations will be stored on all preset number buttons on the currently selected band.
 - When there is a preset number indicated on the display window, the unit will store stations on all preset number buttons from the one currently displayed.

For example, when you select FM2 and preset number 3 is displayed, the operation will start from preset number 3 on FM2, and will stop at preset number 6 on FM2.

Memorizing Only the Desired Stations

- 1 Select the desired band.
XR-C210MK2/
C213MK2:   
XR-C212MK2:  

- 2 Tune in the station which you wish to store on the preset number button.






- 3 Keep the desired preset number button ( to ) pressed for about two seconds until you hear a beep tone.

The number of the pressed preset number button appears on the display window.

Up to 6 stations on each band (FM1, FM2, FM3, MW, MW and LW(SW)) can be stored on the preset number buttons in order of your choice. Therefore, 18 stations can be memorized on FM.

If you try to store another station on the same preset number button, the previously stored station will be erased.

Receiving the Memorized Stations


- 1 Select the desired band.
XR-C210MK2/
C213MK2:   
XR-C212MK2:  

- 2 Press momentarily the preset number button on which the desired station is stored.

Note


If you press the preset number button for more than two seconds, the currently received station will be memorized again. To receive the previously memorized station, make sure that the preset number button is pressed only momentarily.

Press either side of the PRESET/DISC button momentarily to receive in order the stations stored in the memory (Preset Search Function).

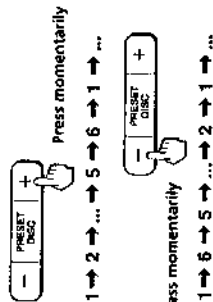


Traffic Announcement Reception (XR-C212MK2)

Receiving Traffic Announcements

Press the  button. → "SDK" appears on the display. The unit will search for a traffic information station. When the station is tuned in, the "SK" indication will also appear.



When a traffic announcement starts → the "SDK" indication will flash. The reception of the traffic announcement will override the current radio broadcast or tape or CD playback. When the announcement is over, the interrupted radio reception or tape or CD playback will be resumed.

To stop receiving the traffic announcements, press the  button again.





Notes

- While the station is broadcasting a traffic announcement (with the "SDK" indication flashing), the SEEK/AMS, PRESET/DISC, SENS and preset number buttons will not be operational.
- While the unit is receiving a traffic information station (with the "SDK" flashing), the BTM function (page 8) cannot be activated.
- During MW and SW reception, the SDK function does not work. If you press the SDK button, the unit will automatically switch to FM1.

Searching for another Traffic Information Station

Press the   button while the "SDK" indication is lit but not flashing.

Hearing a Traffic Announcement at the Preset Volume Level



- 1 Adjust the volume to the desired level with the  or  button.
- 2 Press the  button while pressing the  button. → A beep sound will be heard and the volume level will be memorized. When a traffic announcement starts, it is heard at the preset volume level.

Other Functions

Adjusting the Sound Characteristics

- 1 Select the item you want to adjust by pressing the  button repeatedly.

VOL (volume) → BAS (bass) → TRE (treble) → BAL (balance) → FAD (fader) → VOL (volume)

- 2 Adjust the selected item by pressing either the  or  button.

Adjust within three seconds after selecting. (After three seconds the button will again serve as volume control button.)


Enjoying Bass and Treble even at Low Volume

— Loudness Function



Press the  button. → "LOUD" will appear on the display. Bass and treble will be reinforced. To cancel, press again.

Muting the Sound Quickly



— Mute Function

Press the  button. → The "MUTE" indication flashes. The sound is muted at once. To restore the previous volume level, press again.

This function will be also canceled when:

- the  or OFF button is pressed.
- ejecting a cassette by pressing the  button during tape playback.

Muting the Beep Tone

Press the  button while pressing the  button.

To reobtain the beep tone, press these buttons again.

CD Changer Operation

(with the optional CD changer(s) connected)


Playing a CD

Press the **▶** button. CD playback starts.

Locating the Beginnings of the Tracks

— AMS (Automatic Music Sensor) Function

During playback, press either side of the SEEK/AMS button the number of times you wish to skip the tracks.



To locate the previous tracks

To locate the succeeding tracks

Locating the Desired Part of a Track

— Manual Search

During playback, press and hold either side of the PRESET/DISC button. Release the button when you have found the desired part.



To reverse

To forward

Changing CDs

During playback, press either side of the PRESET/DISC button momentarily.



To return to the previous CD

To advance to the next CD

Selecting CD Changers (with several CD changers connected)

Press the **◀** button during CD playback.

Each time you press, another CD changer will be selected.

Searching for the Desired Track — Intro Scan Function

Press the **INTRO** button during playback. → "INTRO" appears on the display.

The first 10 seconds of all the tracks on the currently selected disc are played in order. After the first disc is over, the next CD is played. When two or more CD changers are connected, after the last disc is played, CD playback moves on to the next CD changer.

When you find the desired track, press again. The unit returns to the normal CD playback mode.

Playing Repeatedly

— Repeat Play Functions
Playing the currently selected track repeatedly

— Track repeat

Press the **TRK REP** button during CD playback to get the "REP 1" indication.

Playing the currently selected disc repeatedly

— Disc repeat

Press the **DISC REP** button during CD playback to get the "REP 2" indication.

When the last track on the currently selected disc is over, CD playback is repeated from the beginning of that disc.


Playing the discs in the currently selected CD changer repeatedly

— CD changer repeat (when two or more CD changers are connected)

Press the **CHG REP** button during CD playback to get the "REP 3" indication.

When the last disc in the currently selected CD changer has been played, CD playback will be repeated from the first CD in this changer.

The function of the **▶** button changes cyclically as follows:

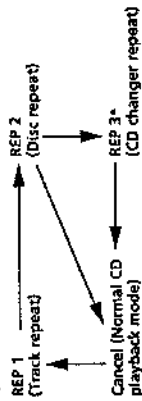

* CD changer repeat (REP 3) mode functions only when two or more CD changers are connected to the unit. When only one CD changer is connected, the "REP 3" indication will not be displayed. In case you press the **▶** button again while the "REP 2" indication is being displayed, the repeat mode will be cancelled.

Playing Tracks Randomly

— Shuffle Play Functions

Playing the tracks on the currently selected disc randomly

— Disc shuffle play

Press the **DISC SHUF** button during CD playback to get the "SHUF 1" indication.

All tracks on the currently selected CD are played in random order. After each track has been played once, shuffle play will continue with the next CD.

Playing each track on each CD in the currently selected CD changer randomly

— CD changer shuffle play

Press the **CHG SHUF** button during CD playback to get the "SHUF 2" indication.

All tracks on each CD in the currently selected CD changer are played in random order.


Playing each track on each CD in all connected CD changers randomly

— All shuffle play (when two or more CD changers are connected)

Press the **ALL SHUF** button during CD playback to get the "SHUF 3" indication.

All tracks on each CD in each CD changer connected are played in random order.

The function of the **▶** button changes cyclically as follows:

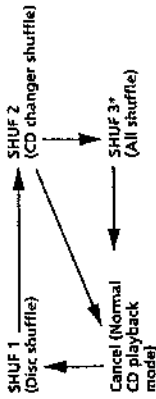

* The all-shuffle (SHUF 3) mode functions only when two or more CD changers are connected to the unit. When only one CD changer is connected, "SHUF 3" indication will not be displayed. In case you press the **▶** button again while "SHUF 2" is displayed, the shuffle play will be cancelled.

If you press the **▶** button during shuffle play, the first 10 seconds of all tracks will be played randomly.

Connections

Caution

- This unit is designed for negative ground 12 V DC operation only.
- Before making connections, disconnect the ground terminal of the car battery to avoid short circuits.
- Connect the yellow and red power input leads only after all other leads have been connected.
- Be sure to connect the red power input lead to the positive 12 V power terminal which is energized when the ignition key is in the accessory position.
- Run all ground wires to a common ground point.

If Your Car has No Accessory Position on the Ignition Key Switch — POWER SELECT Switch

The illumination on the front panel is factory-set to be turned on even when the unit is not being played. However, this setting may cause some car battery wear if your car has no accessory position on the ignition key switch. To avoid this battery wear, set the POWER SELECT switch located on the bottom of the unit to the ② position, then press the reset button. The illumination is reset to stay off while the unit is not being played.

Note
The caution alarm for the front panel is not activated when the POWER SELECT switch is set to the ② position.

Connexions

Précautions

- Cet appareil est conçu pour fonctionner sur courant continu de 12 V avec masse négative.
- Avant d'effectuer les connexions, débrancher la borne de terre de la batterie du véhicule pour éviter tout court-circuit.
- Brancher les fils d'entrée d'alimentation jaune et rouge seulement après avoir terminé tous les autres branchements.
- Veiller à ne pas raccorder le fil rouge d'entrée d'alimentation à la borne positive de 12 V qui est alimentée quand la clé de contact est en la position accessoire.
- Rassembler tous les fils de terre en un point de masse commun.

Si l'appareil est utilisé dans une voiture dont la clé de contact n'a pas de position accessoires — Interrupteur POWER SELECT

L'éclairage du panneau avant est réglé en usine de manière à s'allumer même quand l'appareil ne fonctionne pas. Cependant, ce réglage risque d'épuiser la batterie si l'appareil est utilisé dans une voiture dont la clé de contact ne possède pas de position accessoires. Pour éviter d'épuiser la batterie, régler l'interrupteur POWER sur le socle de l'appareil sur la position ②, puis appuyer sur le bouton de réinitialisation. L'éclairage est réglé pour rester éteint quand l'appareil n'est pas utilisé.

Remarque
Quand l'Interrupteur POWER SELECT est réglé sur la position ②, l'avertisseur du panneau avant ne fonctionne pas.

Anschluß

Vorsicht

- Dieses Gerät ist ausschließlich für eine negativ geerdete 12-V-Autobatterie bestimmt.
- Trennen Sie vor dem Anschließen des Geräts die Erdungsklemme der Batterie ab, um einen Kurzschluß zu vermeiden.
- Schließen Sie das gelbe und rote Stromversorgungskabel erst an, wenn alle anderen Kabel bereits angeschlossen sind.
- Leiten Sie das rote Stromversorgungskabel an einen positiven 12-V-Kontakt, an dem Spannung anliegt, wenn sich das Zündschloß in der Position I bzw. ACC (Position vor der Zündposition) befindet.
- Schließen Sie alle Erdungskabel an einen gemeinsamen Massepunkt an.

Wenn das Zündschloß Ihres Wagens keine Position I bzw. ACC besitzt — POWER SELECT-Schalter

Das Gerät ist werkseitig so voreingestellt, daß das Bedienfeld auch dann beleuchtet ist, wenn das Gerät nicht betrieben wird. Besitzt das Zündschloß Ihres Fahrzeugs keine Position I bzw. ACC, so ist die Beleuchtung ständig eingeschaltet und entzieht der Batterie Strom. Stellen Sie in einem solchen Fall den POWER SELECT-Schalter an der Unterseite des Geräts auf Position ②, und drücken Sie dann die Rücksetztaste. Bei ausgeschaltetem Gerät ist das Bedienfeld dann nicht mehr beleuchtet.

Hinweis
Der Warnton für die Frontplatte ertönt nicht, wenn der POWER SELECT-Schalter auf Position ② gestellt ist.

Collegamenti

Attenzione


- Questo apparecchio è stato progettato per l'uso solo a 12 V CC con massa negativa.
- Prima di eseguire i collegamenti, scollegare il terminale di massa della batteria dell'auto per evitare cortocircuiti.
- Collegare i cavi di collegamento alimentazione rosso e giallo solo dopo aver collegato tutti gli altri cavi.
- Assicurarsi di collegare il cavo rosso di collegamento alimentazione al terminale di alimentazione 12 V positivo che è sotto tensione quando la chiavetta di accensione è in posizione accessoria.
- Portare tutti i cavi di massa a un punto di massa comune.

Quando si usa l'apparecchio in un'auto priva di posizione accessoria per la chiavetta di accensione — Interruttore POWER SELECT

L'illuminazione del pannello anteriore è stata predisposta in fabbrica per l'attivazione anche quando non si usa l'apparecchio. Tuttavia questa regolazione può causare scaricamento della batteria dell'auto se si usa l'apparecchio in un'auto priva di posizione accessoria per la chiavetta di accensione. Per evitare ciò, regolare su ② l'interruttore POWER SELECT situato alla base dell'apparecchio e quindi premere il pulsante di azzeramento. L'illuminazione rimane così spenta finché l'apparecchio rimane spento.

Nota
La suoneria di avvertimento per il pannello anteriore non si attiva quando l'interruttore POWER SELECT è in posizione ②.

Change the position with a jeweler's screwdriver, etc.
Changer la position avec un tournevis de joailler ou un objet similaire.
Den Schalter mit einem kleinen Schraubenzieher o.ä. umstellen.
Cambiare la posizione con un tassavite da orologiaio.



Reset Button

When the installation and connections are over, be sure to press the reset button with a ball-point pen etc.

Bouton de réinitialisation


Quand l'installation et les connexions sont terminées, appuyer sur le bouton de réinitialisation avec un stylo bille ou un objet pointu.

Rücksetztaste

Nach der Installation und dem Anschluß muß die Rücksetztaste mit einem Kugelschreiber o.ä. gedrückt werden.

Pulsante di azzeramento

Dopo avere terminato l'installazione e i collegamenti, assicurarsi di premere il pulsante di azzeramento con la punta di una penna a sfera ecc.



Reset button
Bouton de réinitialisation
Rücksetztaste
Pulsante di azzeramento


Connection Diagram

Schémas de connexion


Anschlußdiagramm

Schema di collegamento

Example 1/Exemple 1/Beispiel 1/Esempio 1

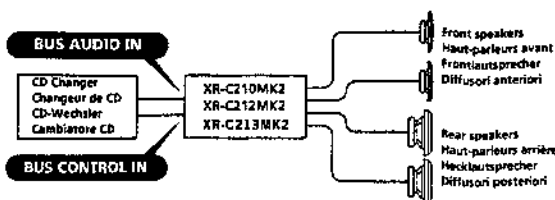

Example 2/Exemple 2/Beispiel 2/Esempio 2

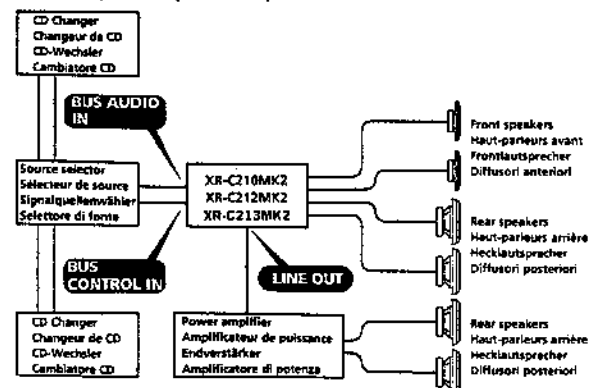


If you connect two or more CD changers, the source selector XA-U20 or XA-U40 is required.
Bei Anschluß von zwei oder mehr CD-Wechslern wird der Signalleistungssteller XA-U20 oder XA-U40 benötigt.
Se si collegano due o più cambiatori CD, è necessario il selettore di fonte XA-U20 o XA-U40.

Connections of Example

Connexions de l'exemple

Anschlußbeispiel

Esempio di collegamenti

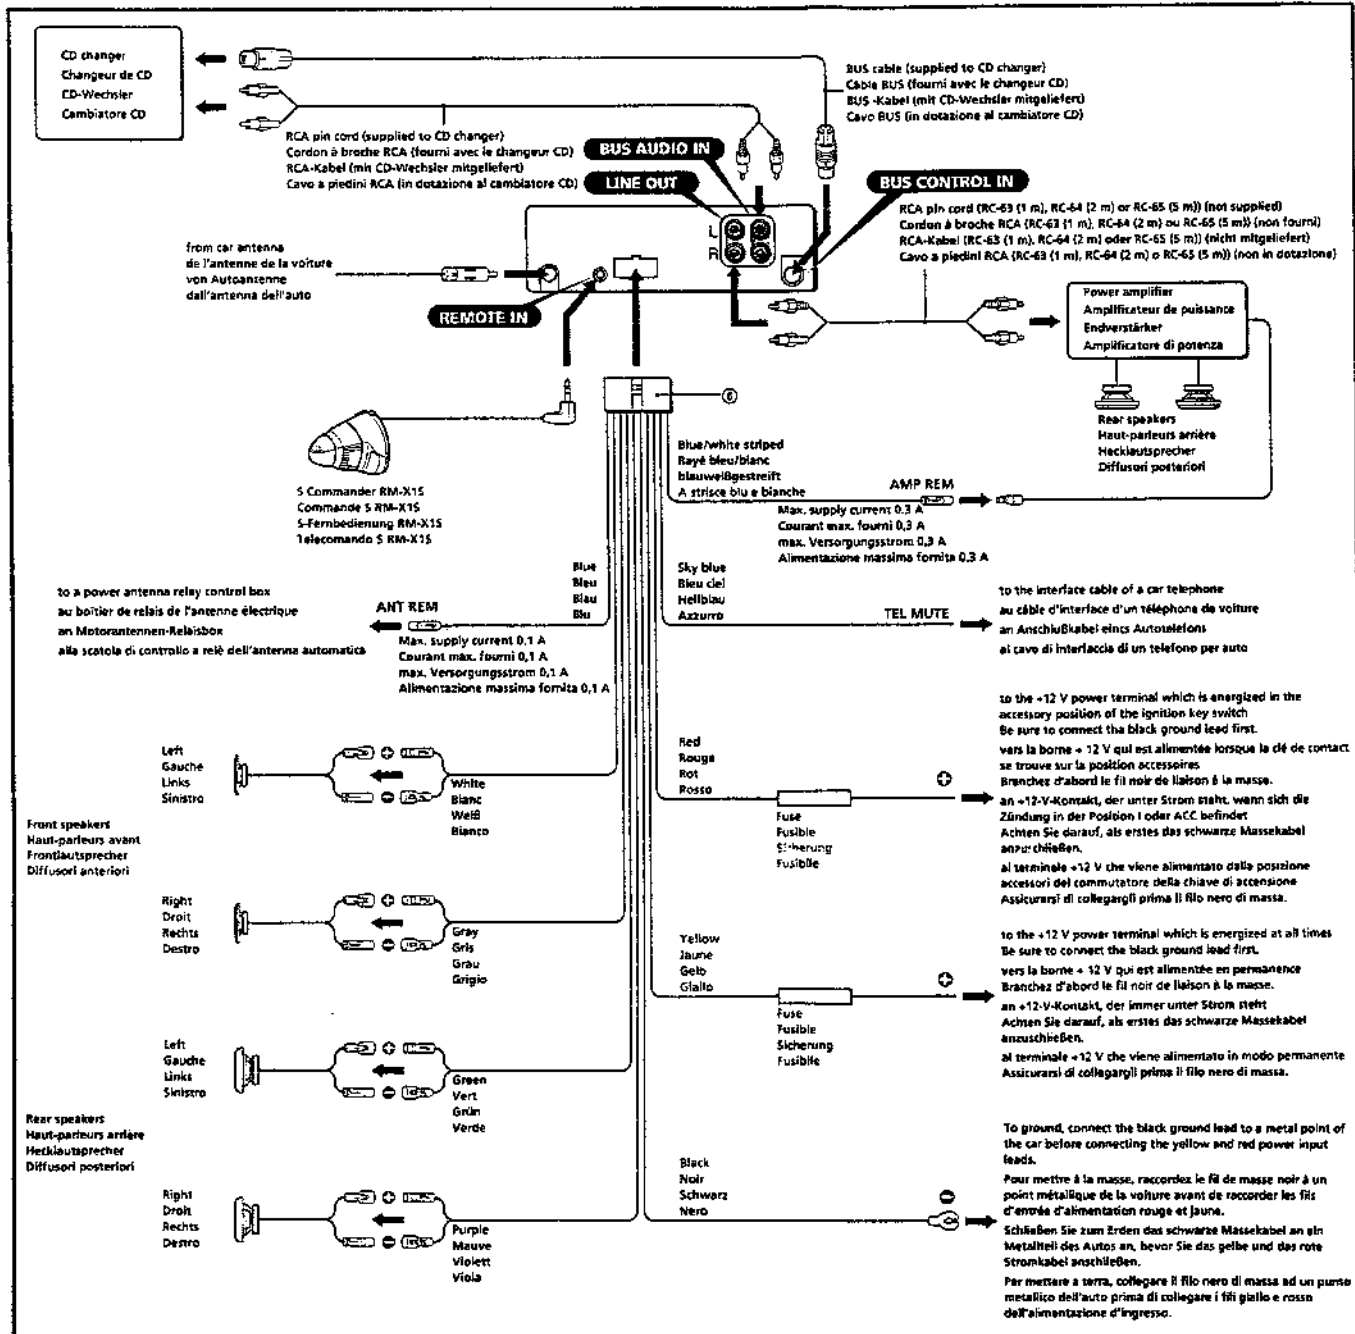

Notes on the control leads
 • The power antenna control lead (blue) supplies +12 V DC when you turn on the tuner or when you activate the ATA (Automatic Tuner Activation) function.
 • A power antenna (without) relay box cannot be used with this unit.

Memory hold connection
 When the yellow power input lead is connected, power will always be supplied to the memory circuit even when the ignition key is turned off.

Notes on speaker connection
 • Before connecting the speakers, turn the unit off.
 • Use speakers with an impedance of 4 to 8 ohms, and with adequate power handling capacities. Otherwise, the speakers may be damaged.
 • Do not connect the terminals of the speaker system to the right speaker with those of the left speaker.
 • Do not attempt to connect the speakers in parallel.
 • Do not connect any active speakers (with built-in amplifiers) to the speaker terminals of the unit. Doing so may damage the active speakers. Therefore, be sure to connect passive speakers to these terminals.

Remarques sur les fils de contrôle
 • Le fil de contrôle de l'antenne électrique (bleu) fournit du courant continu de +12 V quand le tuner est mis sous tension ou quand la fonction ATA (Automatic Tuner Activation) est activée.
 • Une antenne électrique sans boîtier de relais ne peut pas être utilisée avec cet appareil.

Connexion pour la conservation de la mémoire
 Lorsque le fil d'alimentation jaune est connecté, le circuit de la mémoire est alimenté en permanence même si la clé de contact est sur la position d'arrêt.

Remarques sur la connexion des haut-parleurs
 • Avant de rebrancher les haut-parleurs, éteignez l'appareil hors tension.
 • Utilisez des haut-parleurs possédant une impédance de 4 à 8 ohms et une capacité adéquate sous peine de les endommager.
 • Ne pas raccorder les bornes du système de haut-parleurs au circuit de la voiture et ne pas connecter les bornes du haut-parleur droit à celles du haut-parleur gauche.
 • Ne pas tenter de raccorder les haut-parleurs en parallèle.
 • Ne pas raccorder des haut-parleurs actifs (avec amplificateurs intégrés) aux bornes de haut-parleur de l'appareil sous peine de les endommager. Veillez à raccorder des haut-parleurs passifs à ces bornes.

Hinweise zu den Steuerleitungen
 • Die Motorenstrom-Steuerleitung (blau) gibt beim Einschalten des Tuners und beim Aktivieren der ATA-Funktion (Automatic Tuner Activation) +12 V Gleichspannung ab.
 • Eine Motorantenne ohne Relaisbox kann mit diesem Gerät nicht verwendet werden.

Zur Stromversorgung des Speichers
 Wenn das gelbe Stromversorgungs-kabel angeschlossen ist, wird der Speicher stets auch bei ausgeschalteter Zündung mit Strom versorgt.

Hinweise zum Lautsprecheranschluss
 • Schließen Sie das Gerät aus, bevor Sie die Lautsprecher anschließen.
 • Verwenden Sie Lautsprecher mit einer Impedanz zwischen 4 und 8 Ohm und ausreichender Belastbarkeit. Ansonsten können die Lautsprecher beschädigt werden.
 • Verbinden Sie die Lautsprecheranschlüsse nicht mit dem Massechassis, und verbinden Sie auch nicht die Anschlüsse des rechten mit denen des linken Lautspeakers.
 • Versuchen Sie nicht, Lautsprecher parallel anzuschließen.
 • An die Lautsprecheranschlüsse dieses Geräts dürfen nur Passivlautsprecher angeschlossen werden. Schließen Sie keine Aktivlautsprecher (Lautsprecher mit eingebauten Verstärkern) an, da diese sonst beschädigt werden können.

Nota sui cavi di collegamento
 • Il cavo di controllo dell'antenna automatica (blu) fornisce +12 V CC quando si accende il sintonizzatore o quando si attiva la funzione ATA (Automatic Tuner Activation).
 • Non è possibile usare un'antenna automatica senza la scatola a relè con questo apparecchio.


Collegamento per la conservazione della memoria
 Quando il cavo di ingresso alimentazione giallo è collegato, viene sempre fornita alimentazione al circuito di memoria anche quando la chiave di accensione è spenta.

Note sul collegamento dei diffusori
 • Prima di collegare i diffusori spegnere l'apparecchio.
 • Usare diffusori di impedenza compresa tra 4 e 8 ohm e con capacità di potenza adeguata, altrimenti i diffusori possono essere danneggiati.
 • Non collegare i terminali del sistema diffusori al relè dell'auto e non collegare i terminali del diffusore destro a quelli del diffusore sinistro.
 • Non collegare i diffusori in parallelo.
 • Non collegare alcun diffusore attivo (con amplificatore incorporato) ai terminali diffusori dell'apparecchio perché questo può danneggiare i diffusori attivi.
 • Assicurarsi di collegare diffusori passivi a questi terminali.


SECTION 2 DISASSEMBLY

Note : Follow the disassembly procedure in the numerical order given.


2-1. SUB PANEL

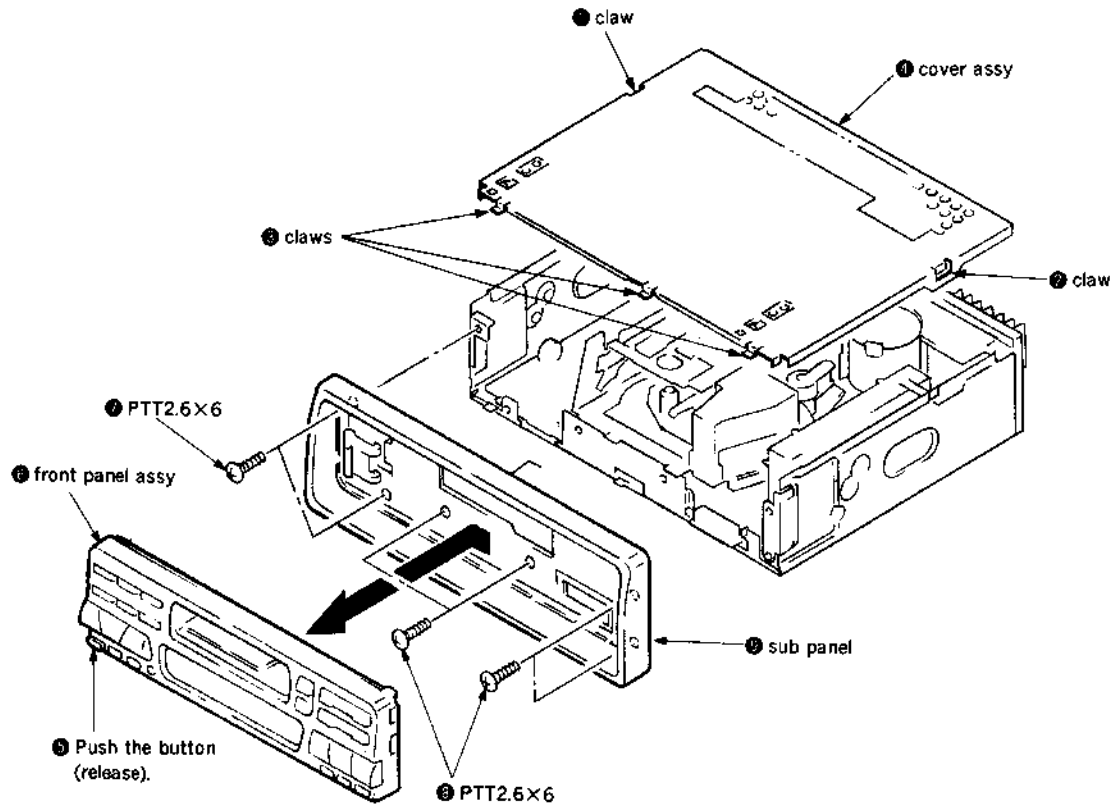


2-2. HEAT SINK

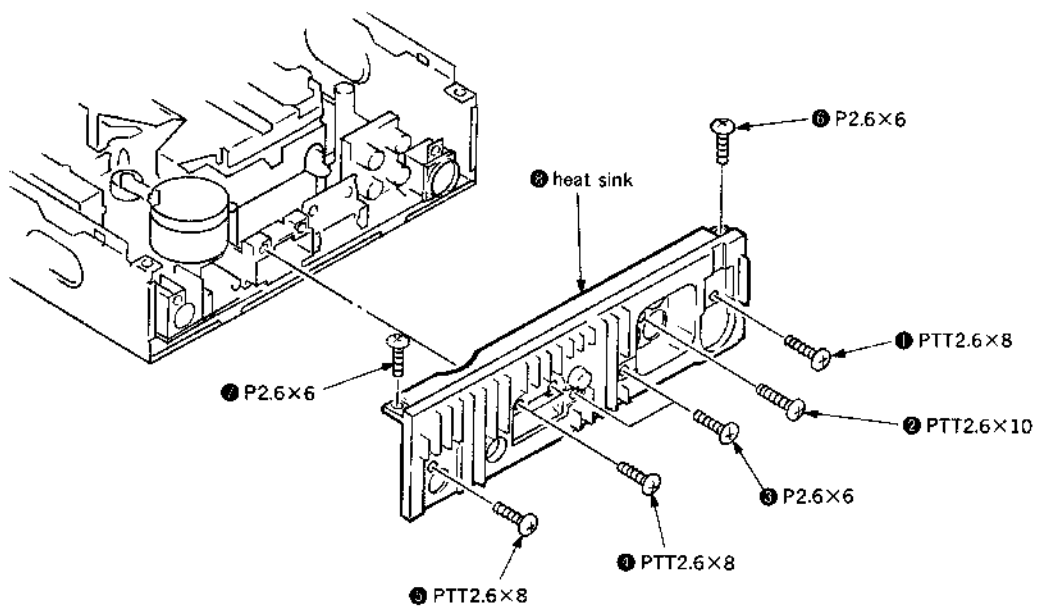


2-3. MECHANISM DECK BLOCK

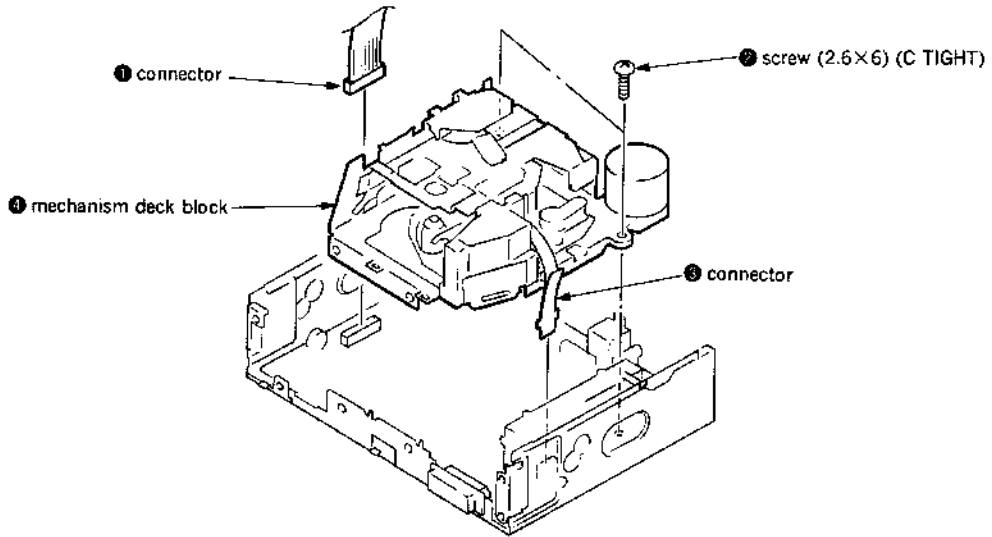

2-4. MAIN BOARD

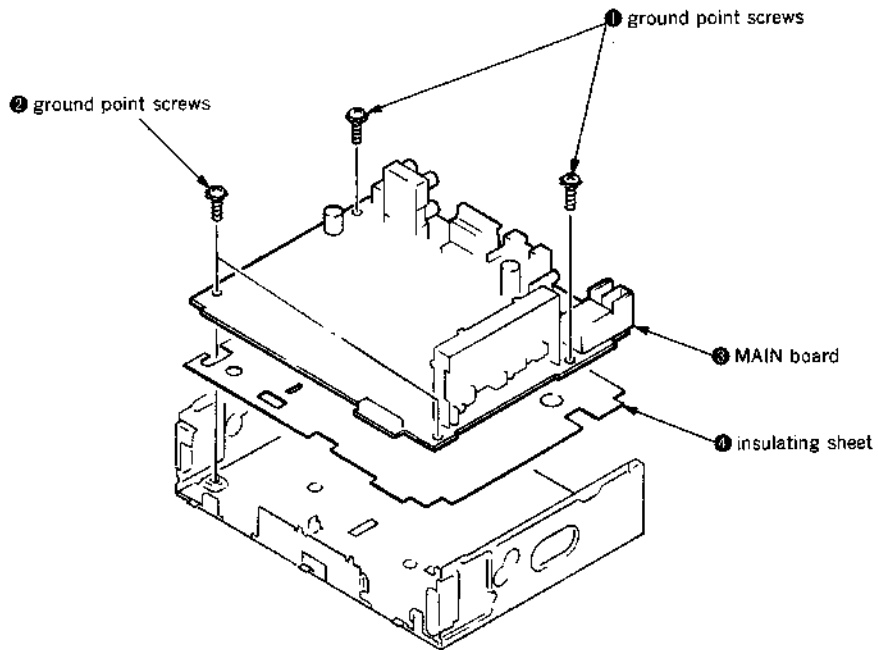


2-5. FRONT BACK PANEL

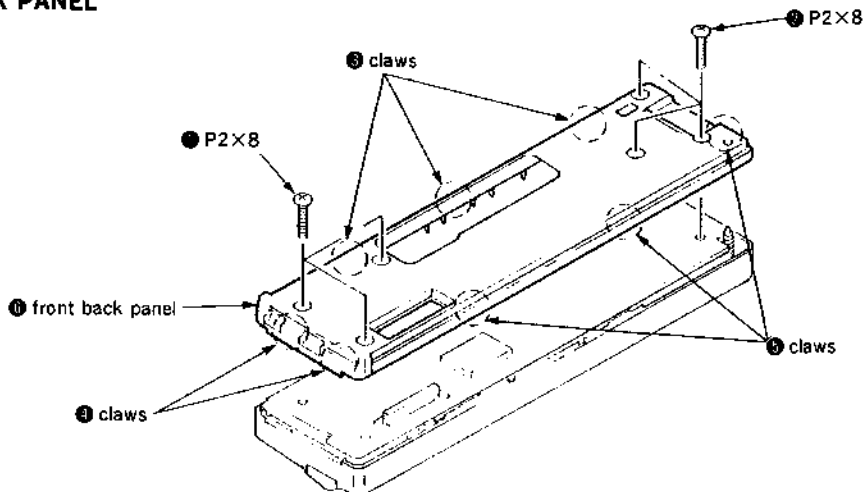


SECTION 3 ASSEMBLY OF MECHANISM DECK

Note : Follow the assembly procedure in the numerical order given.


3-1. INSTALLING THE LOADING GEARS

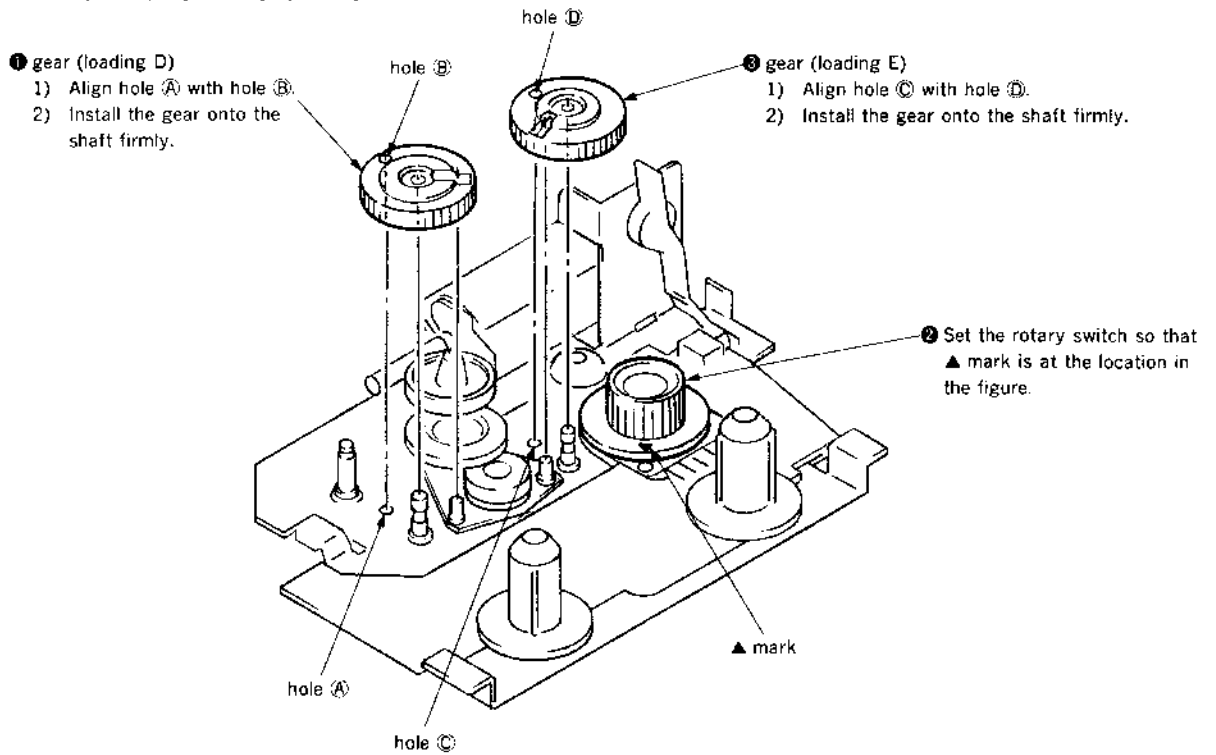

3-2. INSTALLING THE REEL BRACKET

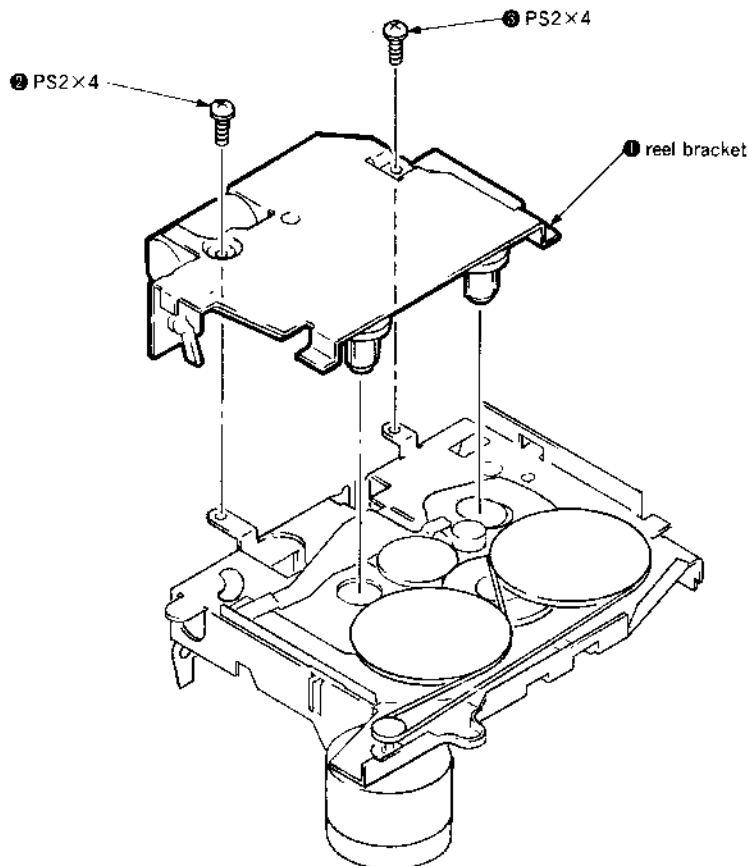

3-3. INSTALLING THE MODE LEVER AND PINCH LEVERS

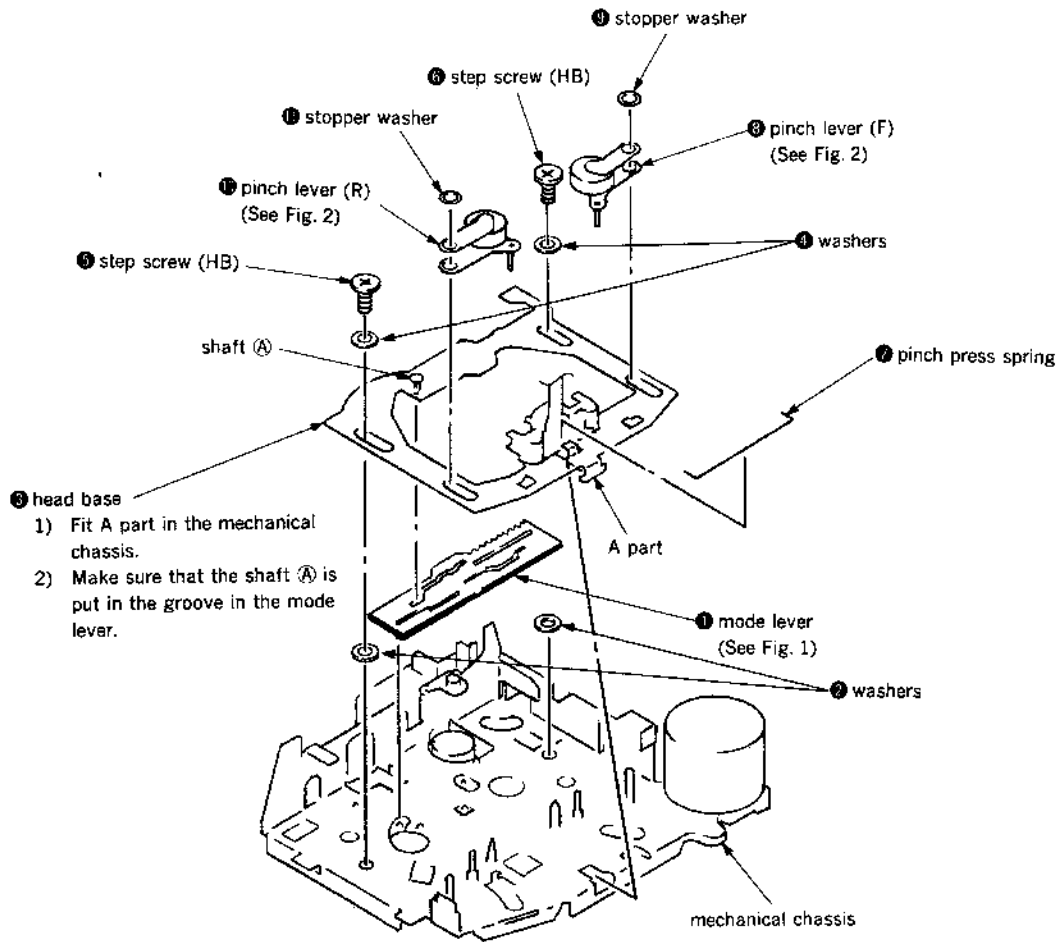

- 1) Align ● mark on the rotary switch with hole on the mode lever.
- 2) Make sure that the two shafts and three projections are located as shown below.

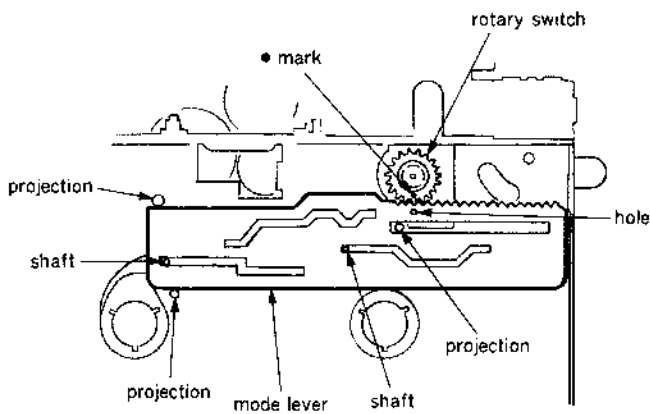


Fig. 1

- 1) Put the shafts of the pinch levers in the pinch press spring on its head side.


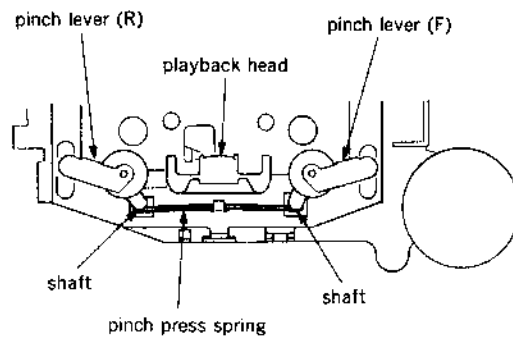


Fig. 2

3-4. INSTALLING THE CASSETTE HOUSING

① housing hanger

- 1) Fit three projections in holes on the mechanical chassis.
- 2) Bend C part in the direction of the arrow and fasten to prevent dislocation from the chassis.

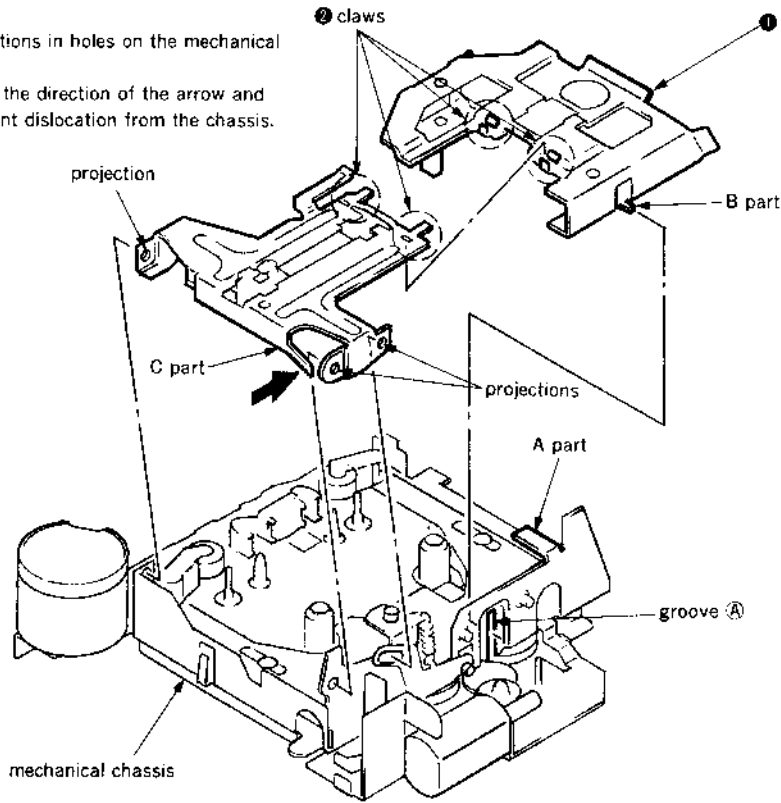


② cassette housing

- 1) Put the cassette housing under A part.
- 2) Fit B part in groove A.

3-5. INSTALLING THE LOADING LEVER

① suction arm

- 1) Align with axis A and install the arm onto the claw.
- 2) With the claw in the center, rotate the arm so as to be directed along axis B, then fit the arm on the projection.

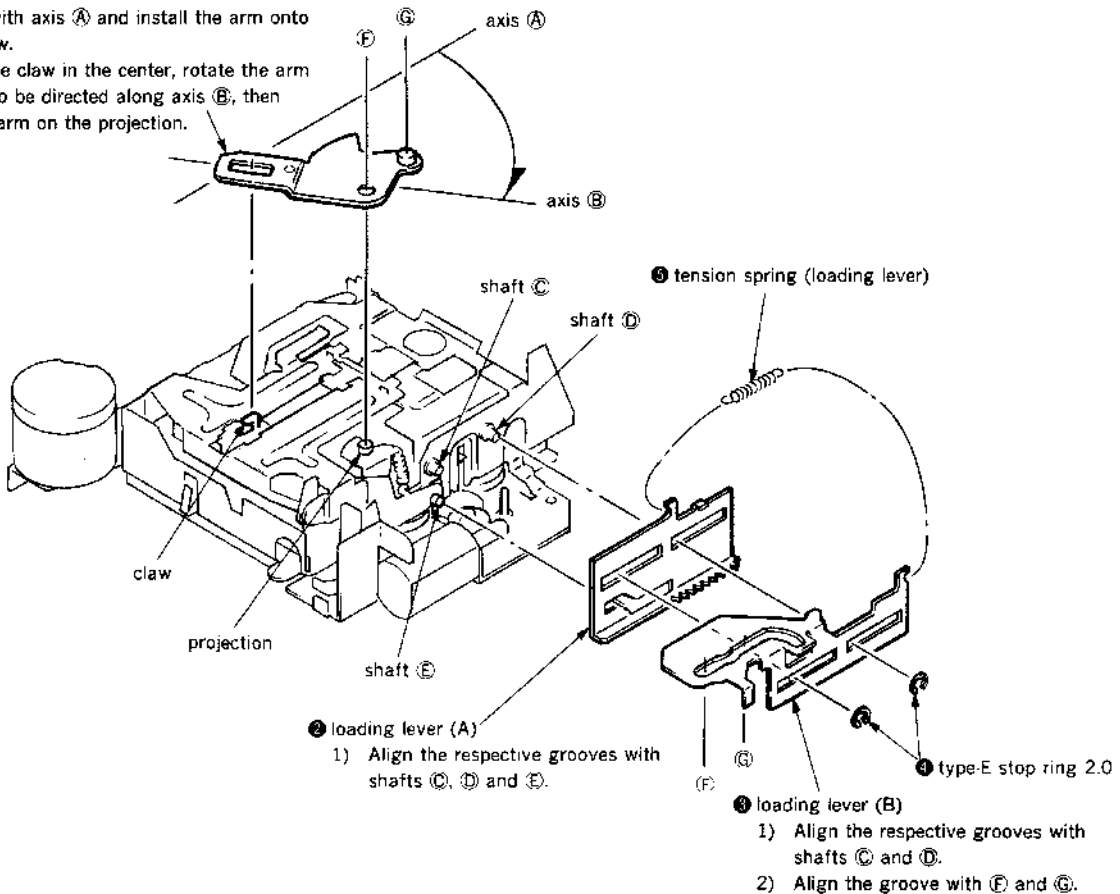


② loading lever (A)

- 1) Align the respective grooves with shafts C, D and E.


③ loading lever (B)

- 1) Align the respective grooves with shafts C and D.
- 2) Align the groove with E and G.

3-6. POSITIONING THE LOADING LEVERS

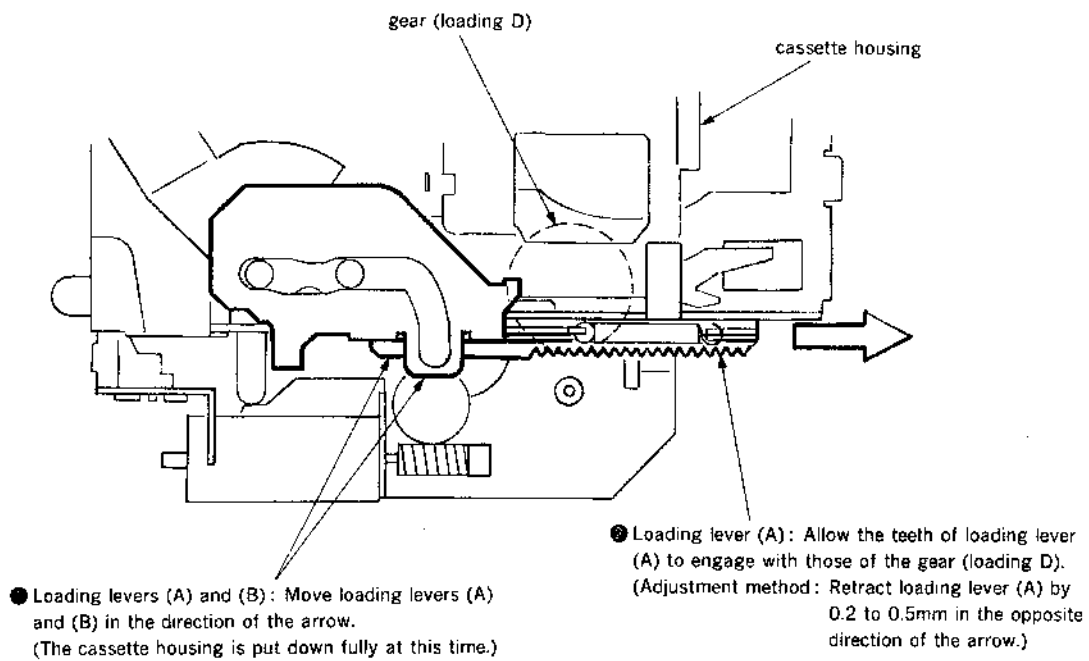

3-7. INSTALLING THE GEAR (LOADING F)

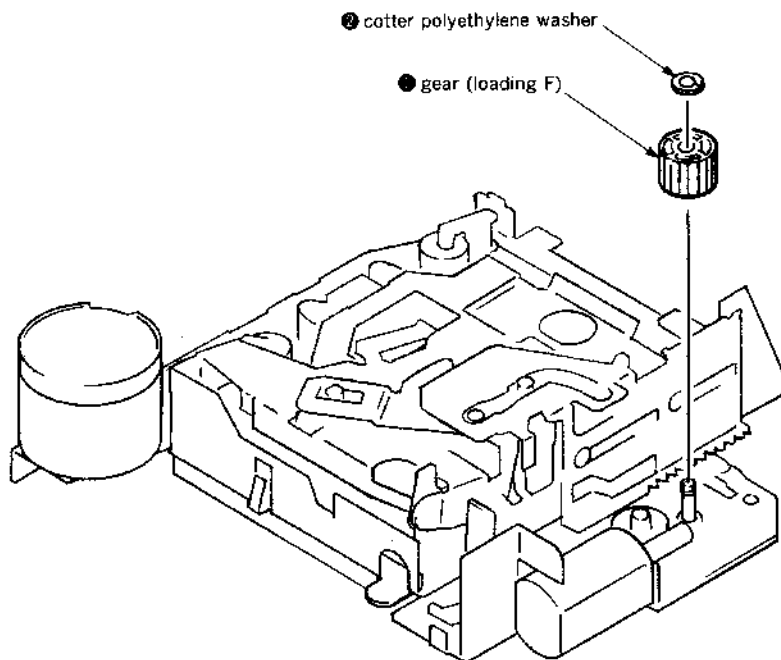

SECTION 4 MECHANICAL ADJUSTMENTS

PRECAUTION

1. Wipe the following components with an absorbent cotton cloth moistened with alcohol before adjustment :

| | |
|---------|--------------|
| PB head | Pinch roller |
| Idler | Rubber belt |
| Capstan | |
2. Demagnetize the PB head using a head demagnetizer.
3. Be careful not to use a magnetized screwdriver.
4. After the adjustment is completed, lock the adjustment parts using screws.
5. Unless otherwise specified, make adjustments at the specified voltage (14.4V).

Torque Measurement

| Mode | Torque Meter | Meter Reading |
|---------------------|--------------|------------------------------------|
| FWD | CQ-102C | 30-65g·cm (0.42-0.90 oz·inch) |
| FWD Back Tension | | 0.5-4.5g·cm (0.01-0.06 oz·inch) |
| REV | CQ-102RC | 30-65g·cm (0.42-0.90 oz·inch) |
| REV Back Tension | | 0.5-4.5g·cm (0.01-0.06 oz·inch) |
| FF, REW | CQ-201B | 60-200g·cm (0.83-2.78 oz·inch) |

Tape Tension Measurement

| Mode | Tension Meter | Meter Reading |
|------|---------------|---------------------|
| FWD | CQ-403A | more than 90g |
| REV | CQ-403R | (more than 3.18 oz) |

SECTION 5 ELECTRICAL ADJUSTMENTS

TEST MODE

This set have the test mode function. In the test mode, FM Auto Scan/Stop Level and MW Auto Scan/Stop Level adjustments can be performed easier than it in ordinaly procedure.

<Set the Test Mode>

1. Set the "OFF" mode.
2. Push the preset **[4]** button.
3. Push the preset **[5]** button.
4. Press the preset **[1]** button for two seconds.
5. Then the display indicates all lights, the test mode is set.

<Release the Test mode>

1. Push the "OFF" button.


See the adjustment location from on page 18 for the adjustment.

DECK SECTION **0dB=0.775V**

Tape Speed Adjustment

Procedure :

1. Put the set into the FWD PB mode.

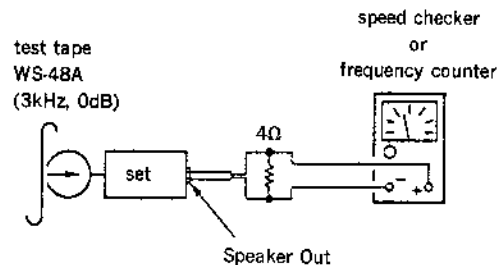

Specification : Constant speed

| Speed checker | Frequency counter |
|---------------|-------------------|
| -1.5 to +2.5% | 2,955 to 3,075Hz |


Adjustment Location : See page 18.

TUNER SECTION**0dB=1 μ V****Cautions during repair**

When the front end is defective, replace it by a new one because its internal block is difficult to repair.

FM Auto Scan/Stop Level Adjustment**Setting :**

FM button (C210MK2/C213MK2) : FM
 TUNER button (C212MK2) : FM

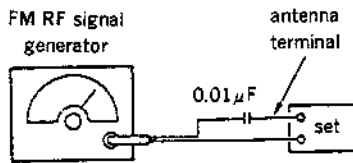


Carrier frequency: 98.0MHz
 Output level : 22dB (12.6 μ V)
 Mode : mono
 Modulation : 1kHz, 22.5kHz deviation

Procedure :


1. Set to the test mode. (See page 15.)
2. Push the **FM** button (C210MK2/C213MK2) or **TUNER** button (C212MK2) and set to FM.

Display

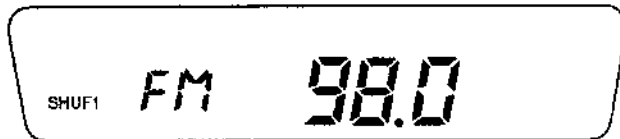


3. Push the preset **3** button.

Display

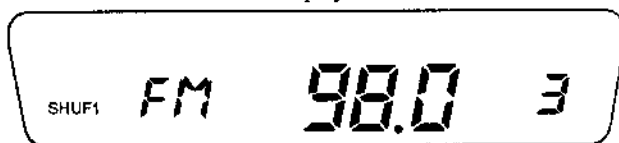

4. Adjust with the volume RV3 on TU1 so that put light "REP" indication on the display window.
 But, in case of already indicated "REP", turn the RV3 so that put out light "REP" indication and adjustment.


Display

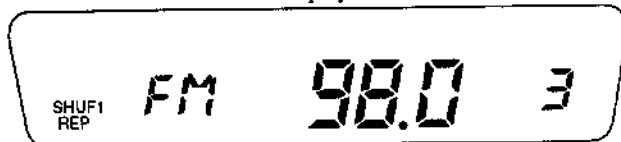

Adjustment Location : See page 18.

MW Auto Scan/Stop Level Adjustment**Setting :**

MW/LW button (C210MK2/C213MK2) : MW
 TUNER button (C212MK2) : MW

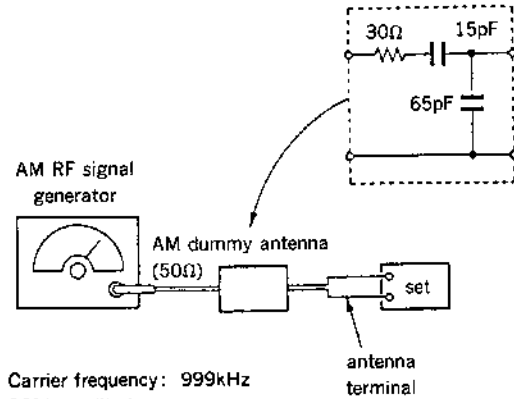


Carrier frequency: 999kHz
 30% amplitude
 modulation by
 400Hz signal
 Output level : 33dB (44.7 μ V)

Procedure :


1. Set to the test mode. (See page 15.)
2. Push the **MW/LW** button (C210MK2/C213MK2) or **TUNER** button (C212MK2) and set to MW.

Display

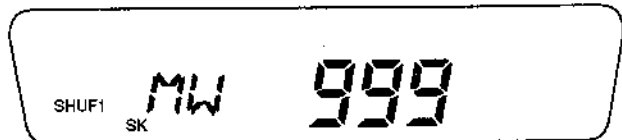


3. Push the preset **3** button.

Display

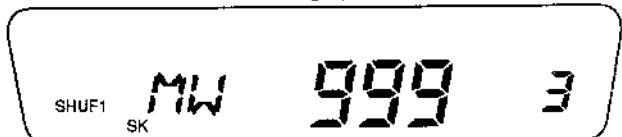

4. Adjust with the volume RV1 on TU1 so that put light "REP" indication on the display window.
 But, in case of already indicated "REP", turn the RV1 so that put out light "REP" indication and adjustment.

Display

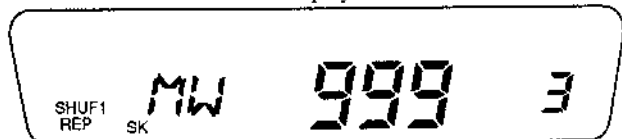


Adjustment Location : See page 18.

High Cut Control Effect Adjustment

Setting :

FM button (C210MK2/C213MK2) : FM
 TUNER button (C212MK2) : FM

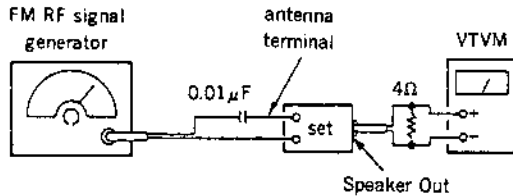

Carrier frequency: 98.0MHz
 Output level : 60dB (1mV)
 Mode : mono
 Modulation : 10kHz, 40kHz deviation

Procedure :


1. Tune the 98.0MHz.
2. The then output level is supposing that (A) dB.
3. Adjust with the volume RV2 on TU1 so that the output level is (A)–5dB then signal generator input set to 20dB.

Adjustment Location : See page 18.

FM Noise Focus Adjustment

Setting :

FM button (C210MK2/C213MK2) : FM
 TUNER button (C212MK2) : FM

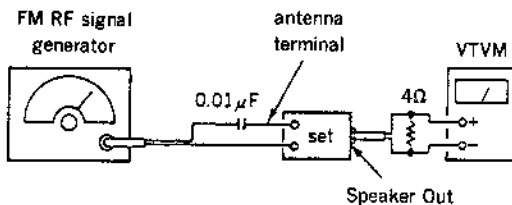

Carrier frequency: 98.0MHz
 Output level : 60dB (1mV)
 Mode : mono
 Modulation : 1kHz, 75kHz deviation

Procedure :


1. Tune the 98.0MHz.
2. The then output level is supposing that (B) dB.
3. Adjust with the volume RV5 on TU1 so that the output level is (B)–30dB then signal generator input set to –20dB.

Adjustment Location : See page 18.

FM Stereo Separation Adjustment

Setting :

FM button (C210MK2/C213MK2) : FM
 TUNER button (C212MK2) : FM

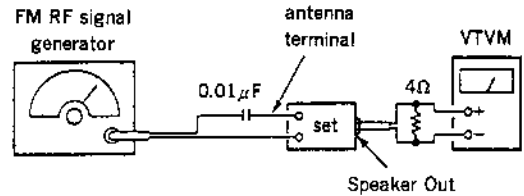

Carrier frequency: 98.0MHz
 Output level : 70dB (3.2mV)
 Mode : stereo
 Modulation : main: 1kHz, 20kHz deviation (53%)
 sub: 1kHz, 20kHz deviation (53%)
 19kHz pilot: 7.5kHz deviation (10%)

Procedure :

| FM stereo signal generator output channel | VTVM connection | VTVM reading (dB) |
|---|-----------------|--|
| L-CH | L-CH | Ⓐ |
| R-CH | L-CH | Ⓑ [Ⓟ] Adjust RV4 on TU1 for minimum reading. |
| R-CH | R-CH | Ⓒ |
| L-CH | R-CH | Ⓓ [Ⓟ] Adjust RV4 on TU1 for minimum reading. |

L-CH Stereo separation: Ⓐ–Ⓑ

R-CH Stereo separation: Ⓒ–Ⓓ

The separations of both channels should be equal.


Specification : Separation more than 30dB

Adjustment Location : See page 18.


SDK Adjustment (XR-C212MK2 only)

Setting :


SDK (Traffic Announcement) button : ON

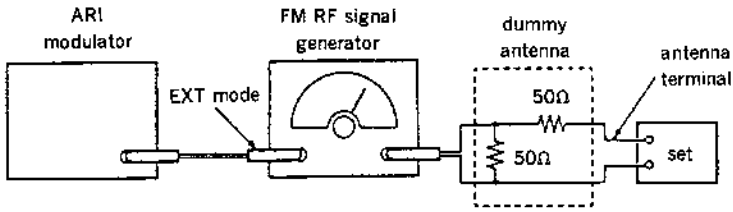

| | |
|----------------|-------------------------------------|
| ARI modulation | Carrier frequency : 98.0MHz |
| SK : 1.5% | Output level : 60dB (1mV) |
| DK : 30% | Mode : mono |
| BK : 60% | Modulation : 1kHz, 7.5kHz deviation |

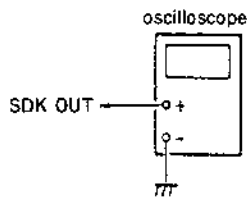

—SET LOWER VIEW—

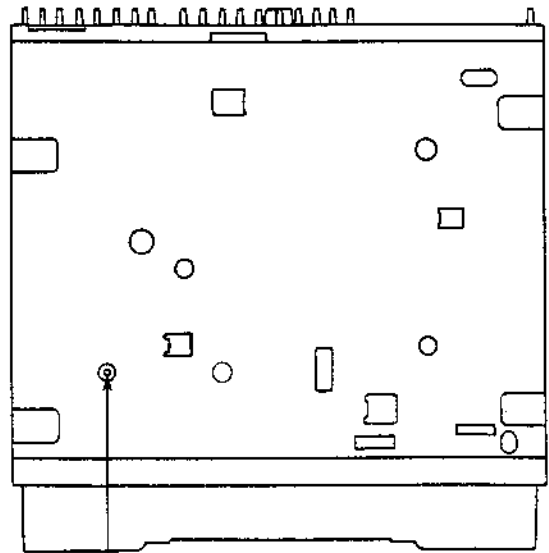


(SDK OUT)
SDK ADJ
(XR-C212MK2
only)

Procedure :

1. Adjust L600 and RV600 so that the output waveform become the maximum.

Adjustment Location :

—SET UPPER VIEW—

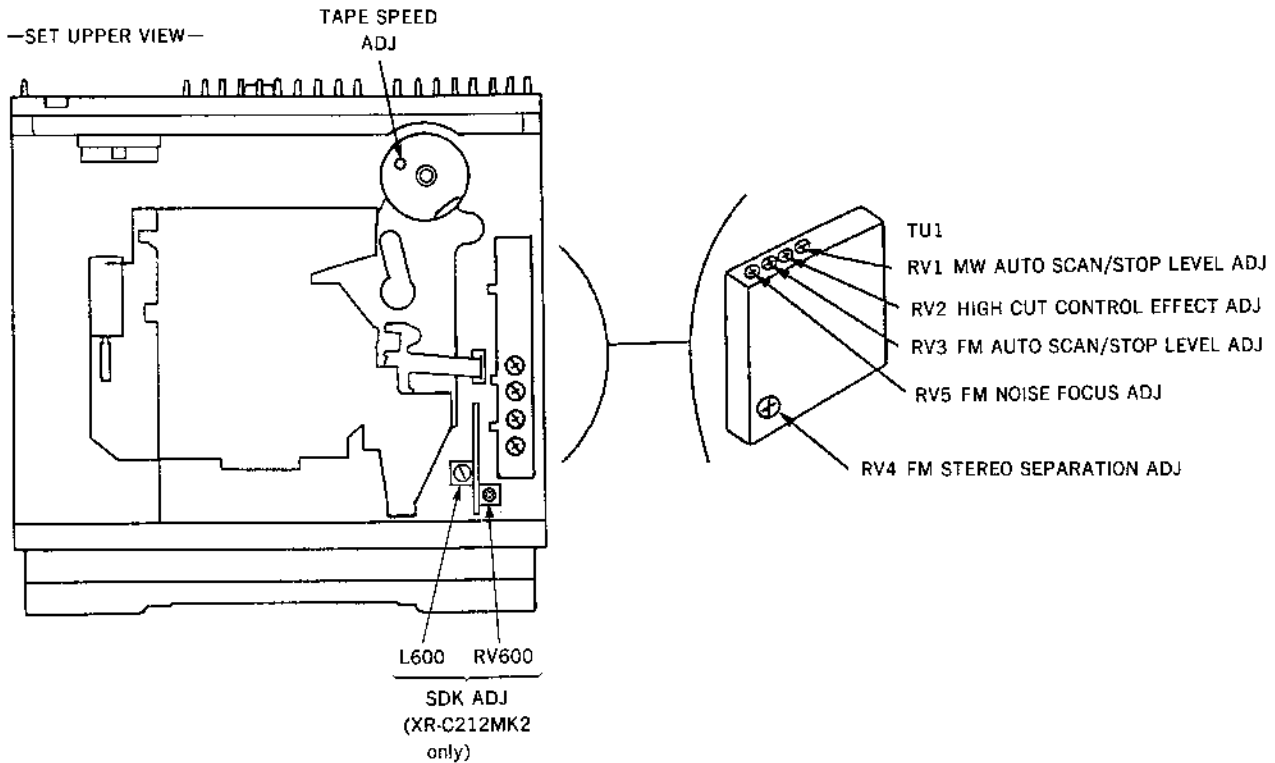

SECTION 6 DIAGRAMS


6-1. IC PIN DESCRIPTION

• IC301 μ PD75518GF-283-3B9 (System Control)


| Pin No. | Pin Name | I/O | Pin Description |
|---------|---------------|-----|---|
| 1 | KI0 | I | KEY input |
| 2 | VREF | I | A/D reference voltage input |
| 3, 4 | VDD | — | Power supply terminal |
| 5 | NC | — | No connection |
| 6 | P-ON | O | At P-ON : High output |
| 7 | ILL-ON | O | At ACC-ON : High output (P-SEL : ON) At P-ON : High output (P-SEL : OFF) |
| 8 | COLOR | — | No used. |
| 9 | MUTE | O | At MUTE : High output |
| 10 | AUX-MUTE | — | No used. |
| 11 | DOLBY-ON/OFF | — | Not used. |
| 12 | TUNER-MUTE | O | Except for TUNER : High output |
| 13 | TAPE-MUTE | O | Except for TAPE PLAYBACK : High output (At movement on FF, REW and AMS : Low output) |
| 14 | AMP-ON | O | Inner power amplifier control terminal. At AMP-ON : High output |
| 15 | C-MOTOR | O | Capstan motor control terminal. At MOTOR-ON : High output |
| 16 | LCD-INH | O | INHIBIT signal to LCD driver IC. At Low output : Light off |
| 17 | TEST MODE | I | At Low input : TEST MODE 1. Input available at timing only of RESET L to H and BU CHECK L to H. |
| 18 | LCD-DATA | O | DATA output terminal to LCD driver IC. |
| 19 | LCD-CLK | O | CLOCK output terminal to LCD driver IC. |
| 20 | LCD-CE | O | LATCH output terminal to LCD driver IC. |
| 21 | VOL-CE | O | LATCH output terminal to VOL IC. |
| 22 | PLL-CE | O | LATCH output terminal to PLL IC. |
| 23 | VOL. PLL-CLK | O | CLOCK output terminal to VOL and PLL IC. |
| 24 | VOL. PLL-DATA | O | DATA output terminal to VOL and PLL IC. |
| 25 | PLL DATA-IN | I | DATA input terminal from PLL IC. |
| 26 | NOR/MTL | I/O | At AUTO METAL : METAL input terminal. At METAL : Low input, at NORMAL : High input. At no AUTO METAL : METAL output terminal. At METAL : High output, at NORMAL : Low input. |
| 27 | EJECT | O | LOADING MOTOR control terminal. At moving in the direction of EJECT : High output. |
| 28 | LOAD | O | LOADING MOTOR control terminal. At moving in the direction of LOAD and PLAY. |
| 29—32 | POS4—POS1 | I | MD position detection terminal |
| 33 | GND | — | GND |
| 34 | REEL2 | I | MD reel table rotation detection terminal. FWD supply side |
| 35 | REEL1 | I | MD reel table rotation detection terminal. FWD take-up side |
| 36 | AUTO-MTL | — | Connect to GND. |
| 37 | AMS-IN | I | TAPE music with/without detection terminal. Low input : With music, High input : Without music |
| 38 | EEPROM-DATA | — | Connect to GND. |
| 39 | EEPROM-CLK | — | Not used. |
| 40 | N/R | O | NORMAL/REVERSE output terminal |
| 41 | TAPE-ON | O | OR output of LM•EJECT and LM•LOAD. At one side ACTIVE : High output, at REEL detection : High output |
| 42 | SYSTEM RESET | O | UNILINK SYSTEM RESET terminal. Low output : SYSTEM RESET |

| Pin No. | Pin Name | I/O | Pin Description |
|---------|------------|-----|---|
| 43 | BUS-IN | O | For BUS CONTROL terminal |
| 44 | CLK-OUT | O | For BUS CONTROL terminal |
| 45 | BEEP | O | For piezoelectric buzzer output terminal |
| 46 | ACC-CHECK | I | Accessory detection terminal, Low input : ACC ON |
| 47 | KEY-ACK | I | KEY ACKNOWLEDGE input terminal. For KEY insert input |
| 48 | C-ALARM | I | Caution alarm with/without initial setting terminal. Low input : With caution alarm |
| 49 | SIRCS-IN | I | SIRCS (REM DET) input terminal |
| 50 | DATA-IN | I | For BUS CONTROL terminal |
| 51 | DATA-OUT | O | For BUS CONTROL terminal |
| 52 | CLK-IN | I | For BUS CONTROL terminal |
| 53 | BU. CHECK | I | Back Up voltage detection terminal |
| 54 | VSS | - | GND |
| 55 | XT1 | - | Connect to GND. |
| 56 | XT2 | - | Not used. |
| 57 | IC | - | Connect to GND. |
| 58 | X1 | - | Connect to crystal. (4.19MHz) |
| 59 | X2 | - | Connect to crystal. (4.19MHz) |
| 60 | RESET | I | RESET input |
| 61, 62 | - | - | Connect to GND. |
| 63 | SK | I | High input : With SK |
| 64 | DK | I | High input : With DK |
| 65 | SD | I | High input : With SD |
| 66 | TEL-MUTE | I | Low input : 20dB audio mute |
| 67 | ST-IN | I | Low input : Stereo |
| 68 | N-SW | I | Low input : With front panel |
| 69 | AM-ON | O | At TUNER ON : High output |
| 70 | FM-ON | O | At FM (both playing and behind) : High output |
| 71 | KEY-ACT | O | Reverse pin ⑤ and Active output terminal |
| 72 | - | - | Not used. |
| 73 | A. GND | - | A/D GND |
| 74 | DOLBY. SEL | I | Connect to GND. |
| 75 | P-SEL | I | POWER SELECT switch input. High input : ON, Low input : OFF. (Low input : Setting without ACC position) |
| 76 | DEST1 | I | Destination setting terminal |
| 77 | DEST0 | I | Destination setting terminal |
| 78 | TPMODE | I | TP MODE input terminal |
| 79 | S-METER | I | FM S meter input terminal |
| 80 | KI1 | I | KEY input terminal |

6-2. BLOCK DIAGRAM

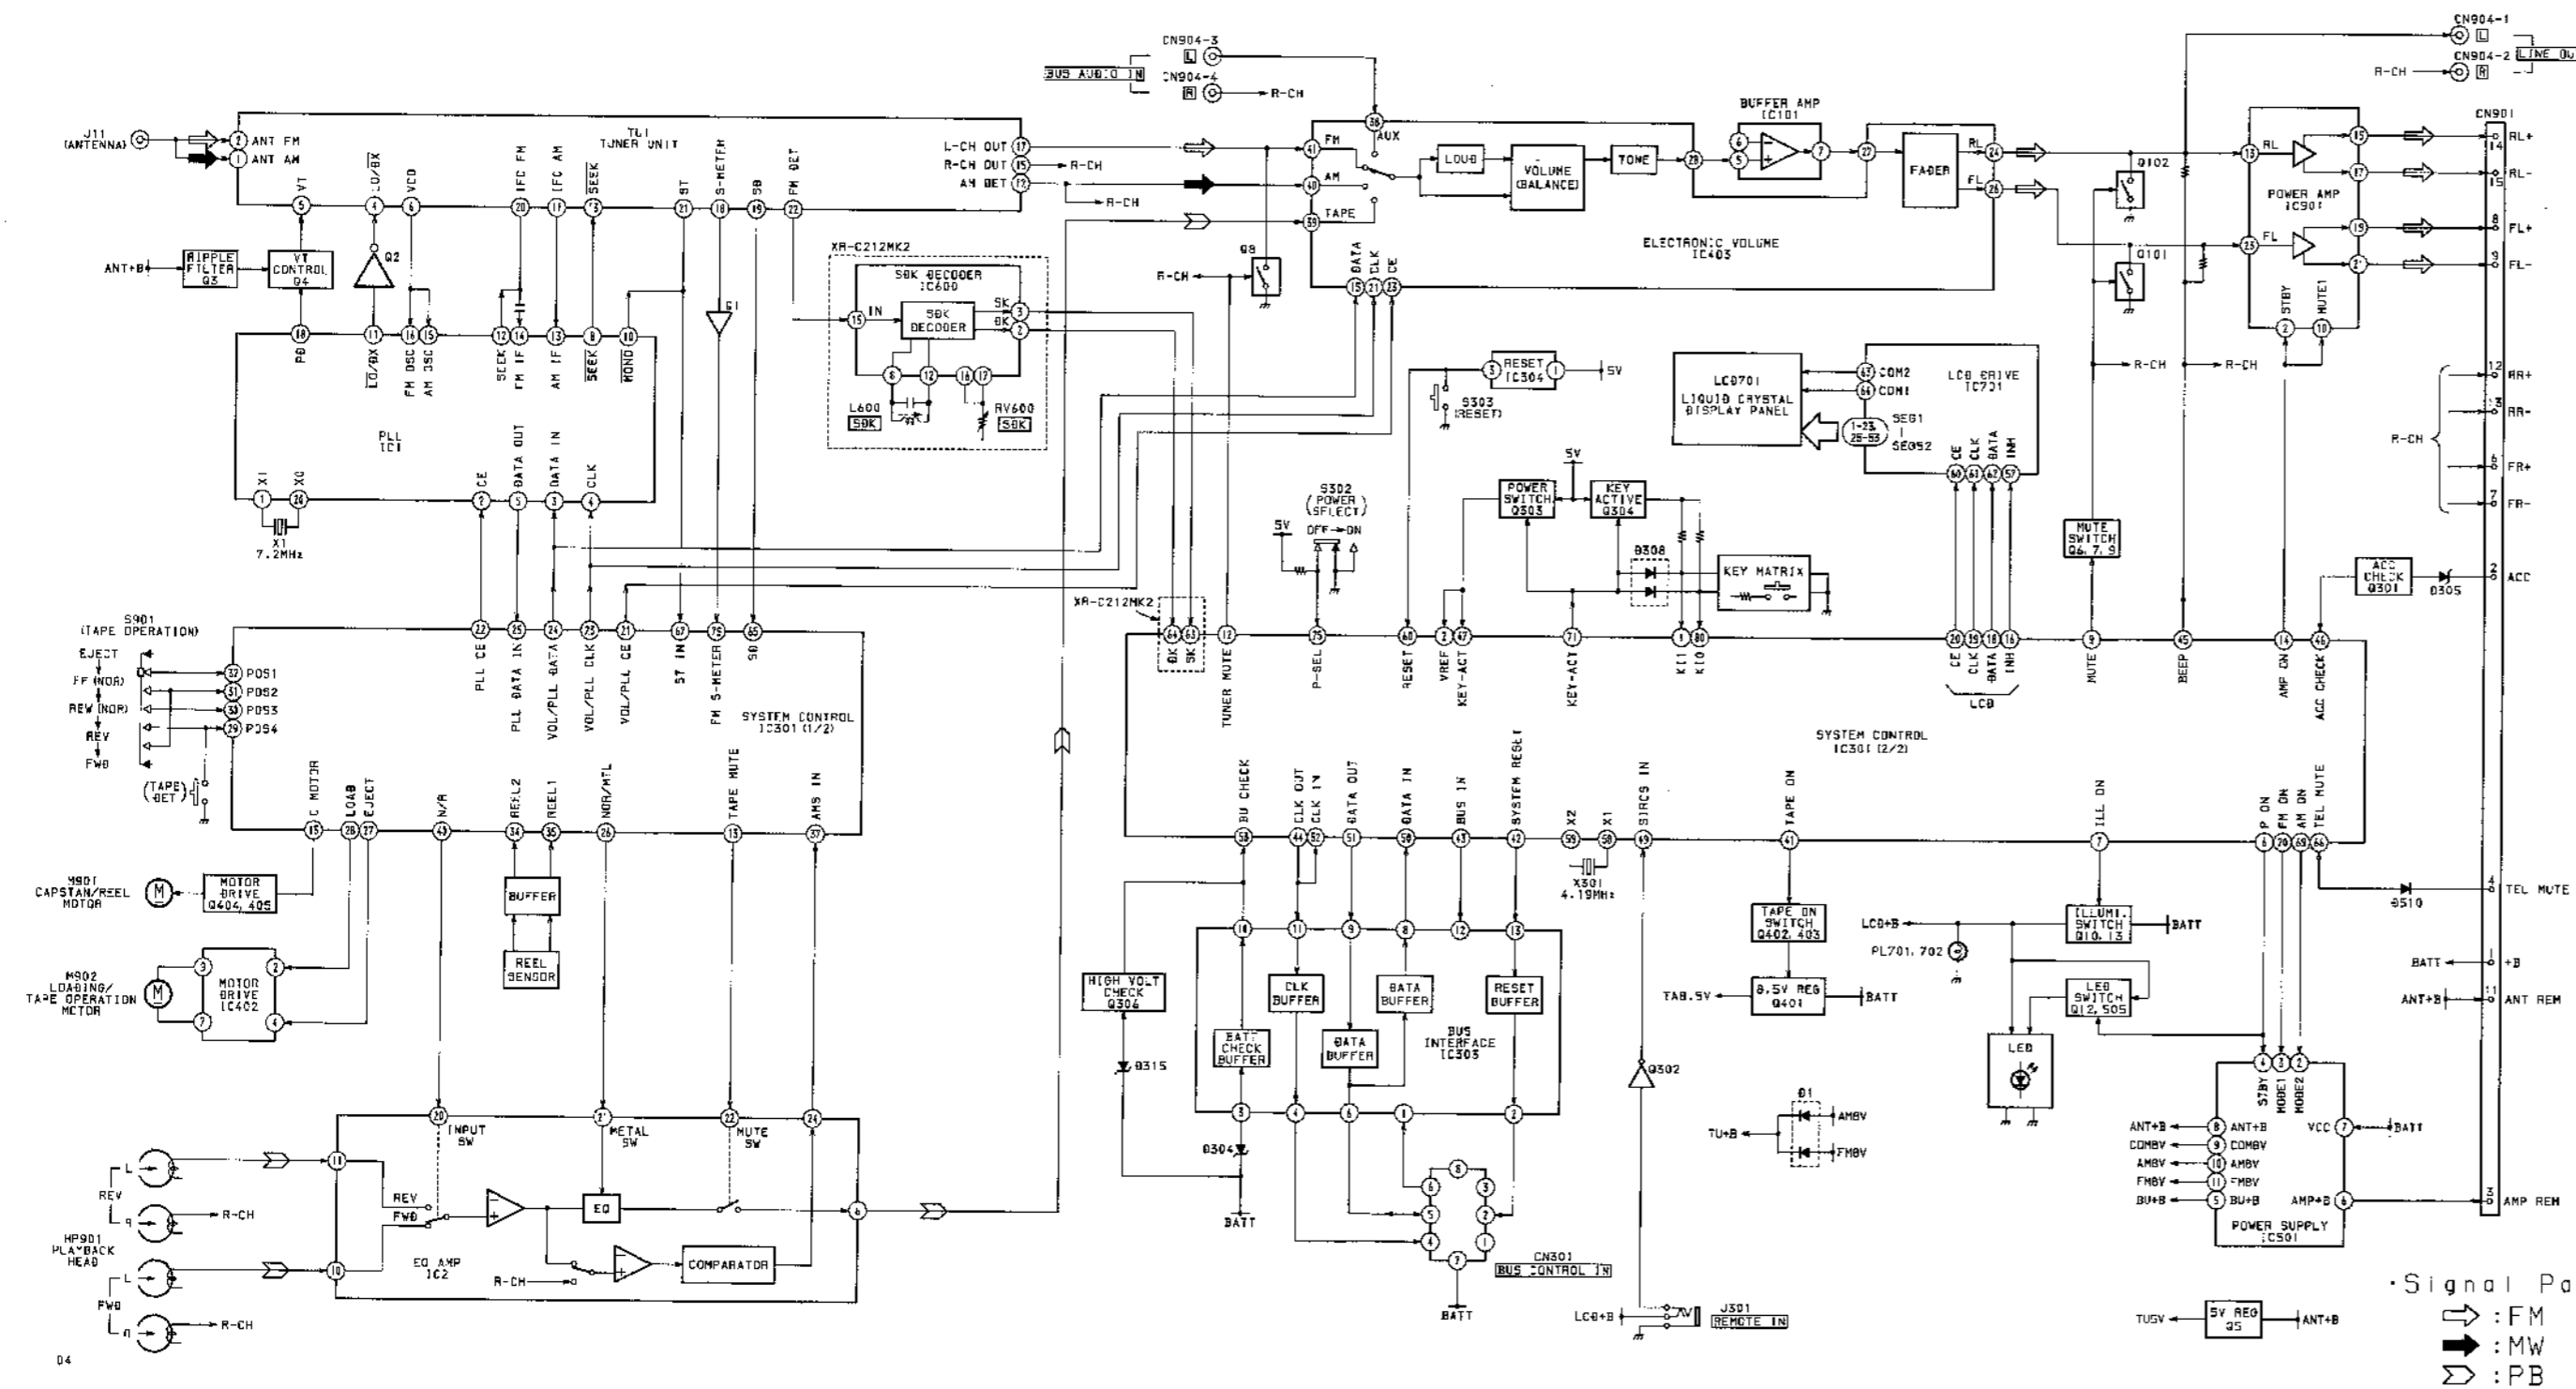

6-3. CIRCUIT BOARDS LOCATION

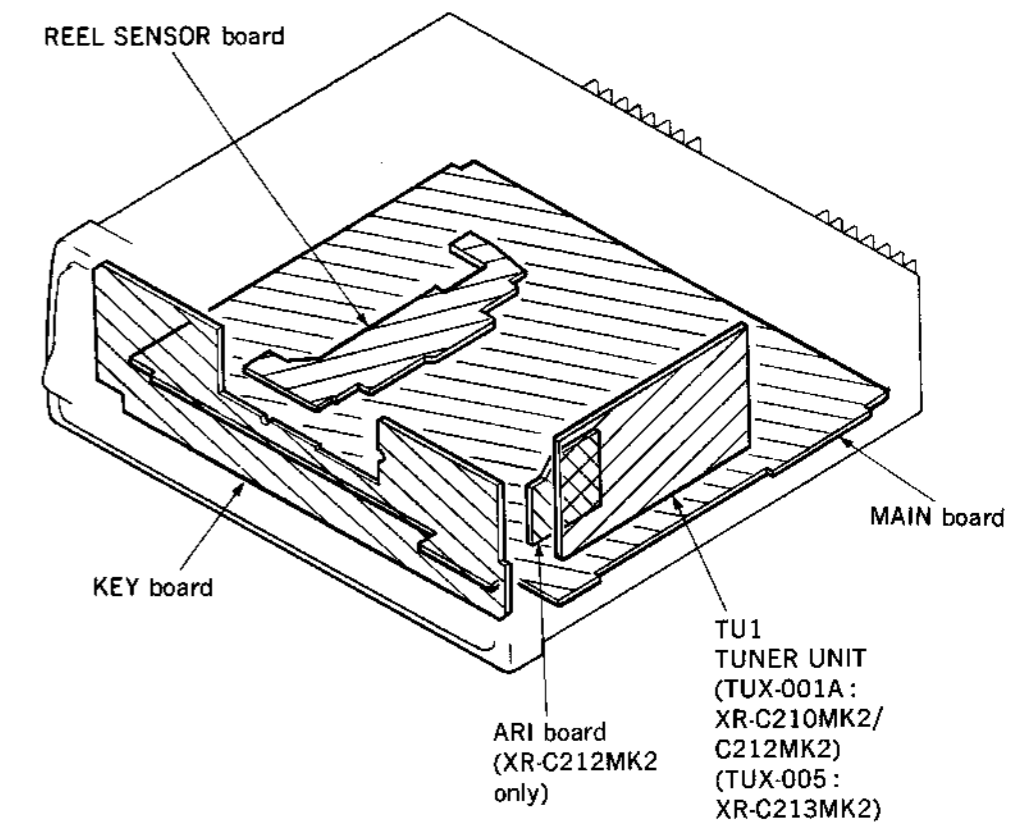

6-4. PRINTED WIRING BOARDS—MAIN SECTION—


• Semiconductor Location

| Ref. No. | Location | Ref. No. | Location |
|----------|----------|----------|----------|
| D1 | D-2 | IC301 | G-9 |
| D2 | B-2 | IC303 | C-11 |
| D3 | A-2 | IC304 | C-4 |
| D4 | G-8 | IC402 | E-10 |
| D5 | C-5 | IC403 | G-7 |
| D6 | C-8 | IC501 | D-7 |
| D301 | C-10 | (IC600) | H-13 |
| D302 | B-11 | IC901 | B-7 |
| D303 | B-10 | | |
| D304 | C-10 | Q1 | D-4 |
| D305 | C-5 | Q2 | E-1 |
| D306 | C-5 | Q3 | C-3 |
| D307 | C-3 | Q4 | C-3 |
| D308 | D-4 | Q5 | B-2 |
| D309 | C-3 | Q6 | D-5 |
| D311 | I-5 | Q7 | D-5 |
| D312 | I-4 | Q8 | H-2 |
| D313 | I-4 | Q9 | F-8 |
| D314 | I-9 | Q10 | H-4 |
| D315 | C-10 | Q11 | H-1 |
| D316 | I-5 | Q12 | G-3 |
| D317 | I-5 | Q13 | G-3 |
| D318 | I-5 | Q101 | C-9 |
| D319 | B-5 | Q102 | C-8 |
| D320 | B-3 | Q201 | C-9 |
| D402 | D-9 | Q202 | C-8 |
| D403 | D-11 | Q301 | C-4 |
| D404 | F-6 | Q302 | B-3 |
| D501 | I-4 | Q303 | D-4 |
| D510 | D-8 | Q304 | C-4 |
| (D600) | H-14 | Q306 | D-10 |
| D901 | A-3 | Q401 | D-9 |
| | | Q402 | E-9 |
| IC1 | D-3 | Q403 | D-8 |
| IC2 | F-4 | Q404 | D-10 |
| IC101 | F-7 | Q405 | D-10 |
| IC201 | H-5 | Q505 | H-4 |


(): XR-C212MK2 only

Note :

- : parts extracted from the component side.
- : Through hole.
- ▨ : Pattern on the side which is seen.
(The other layer's patterns are not indicated.)

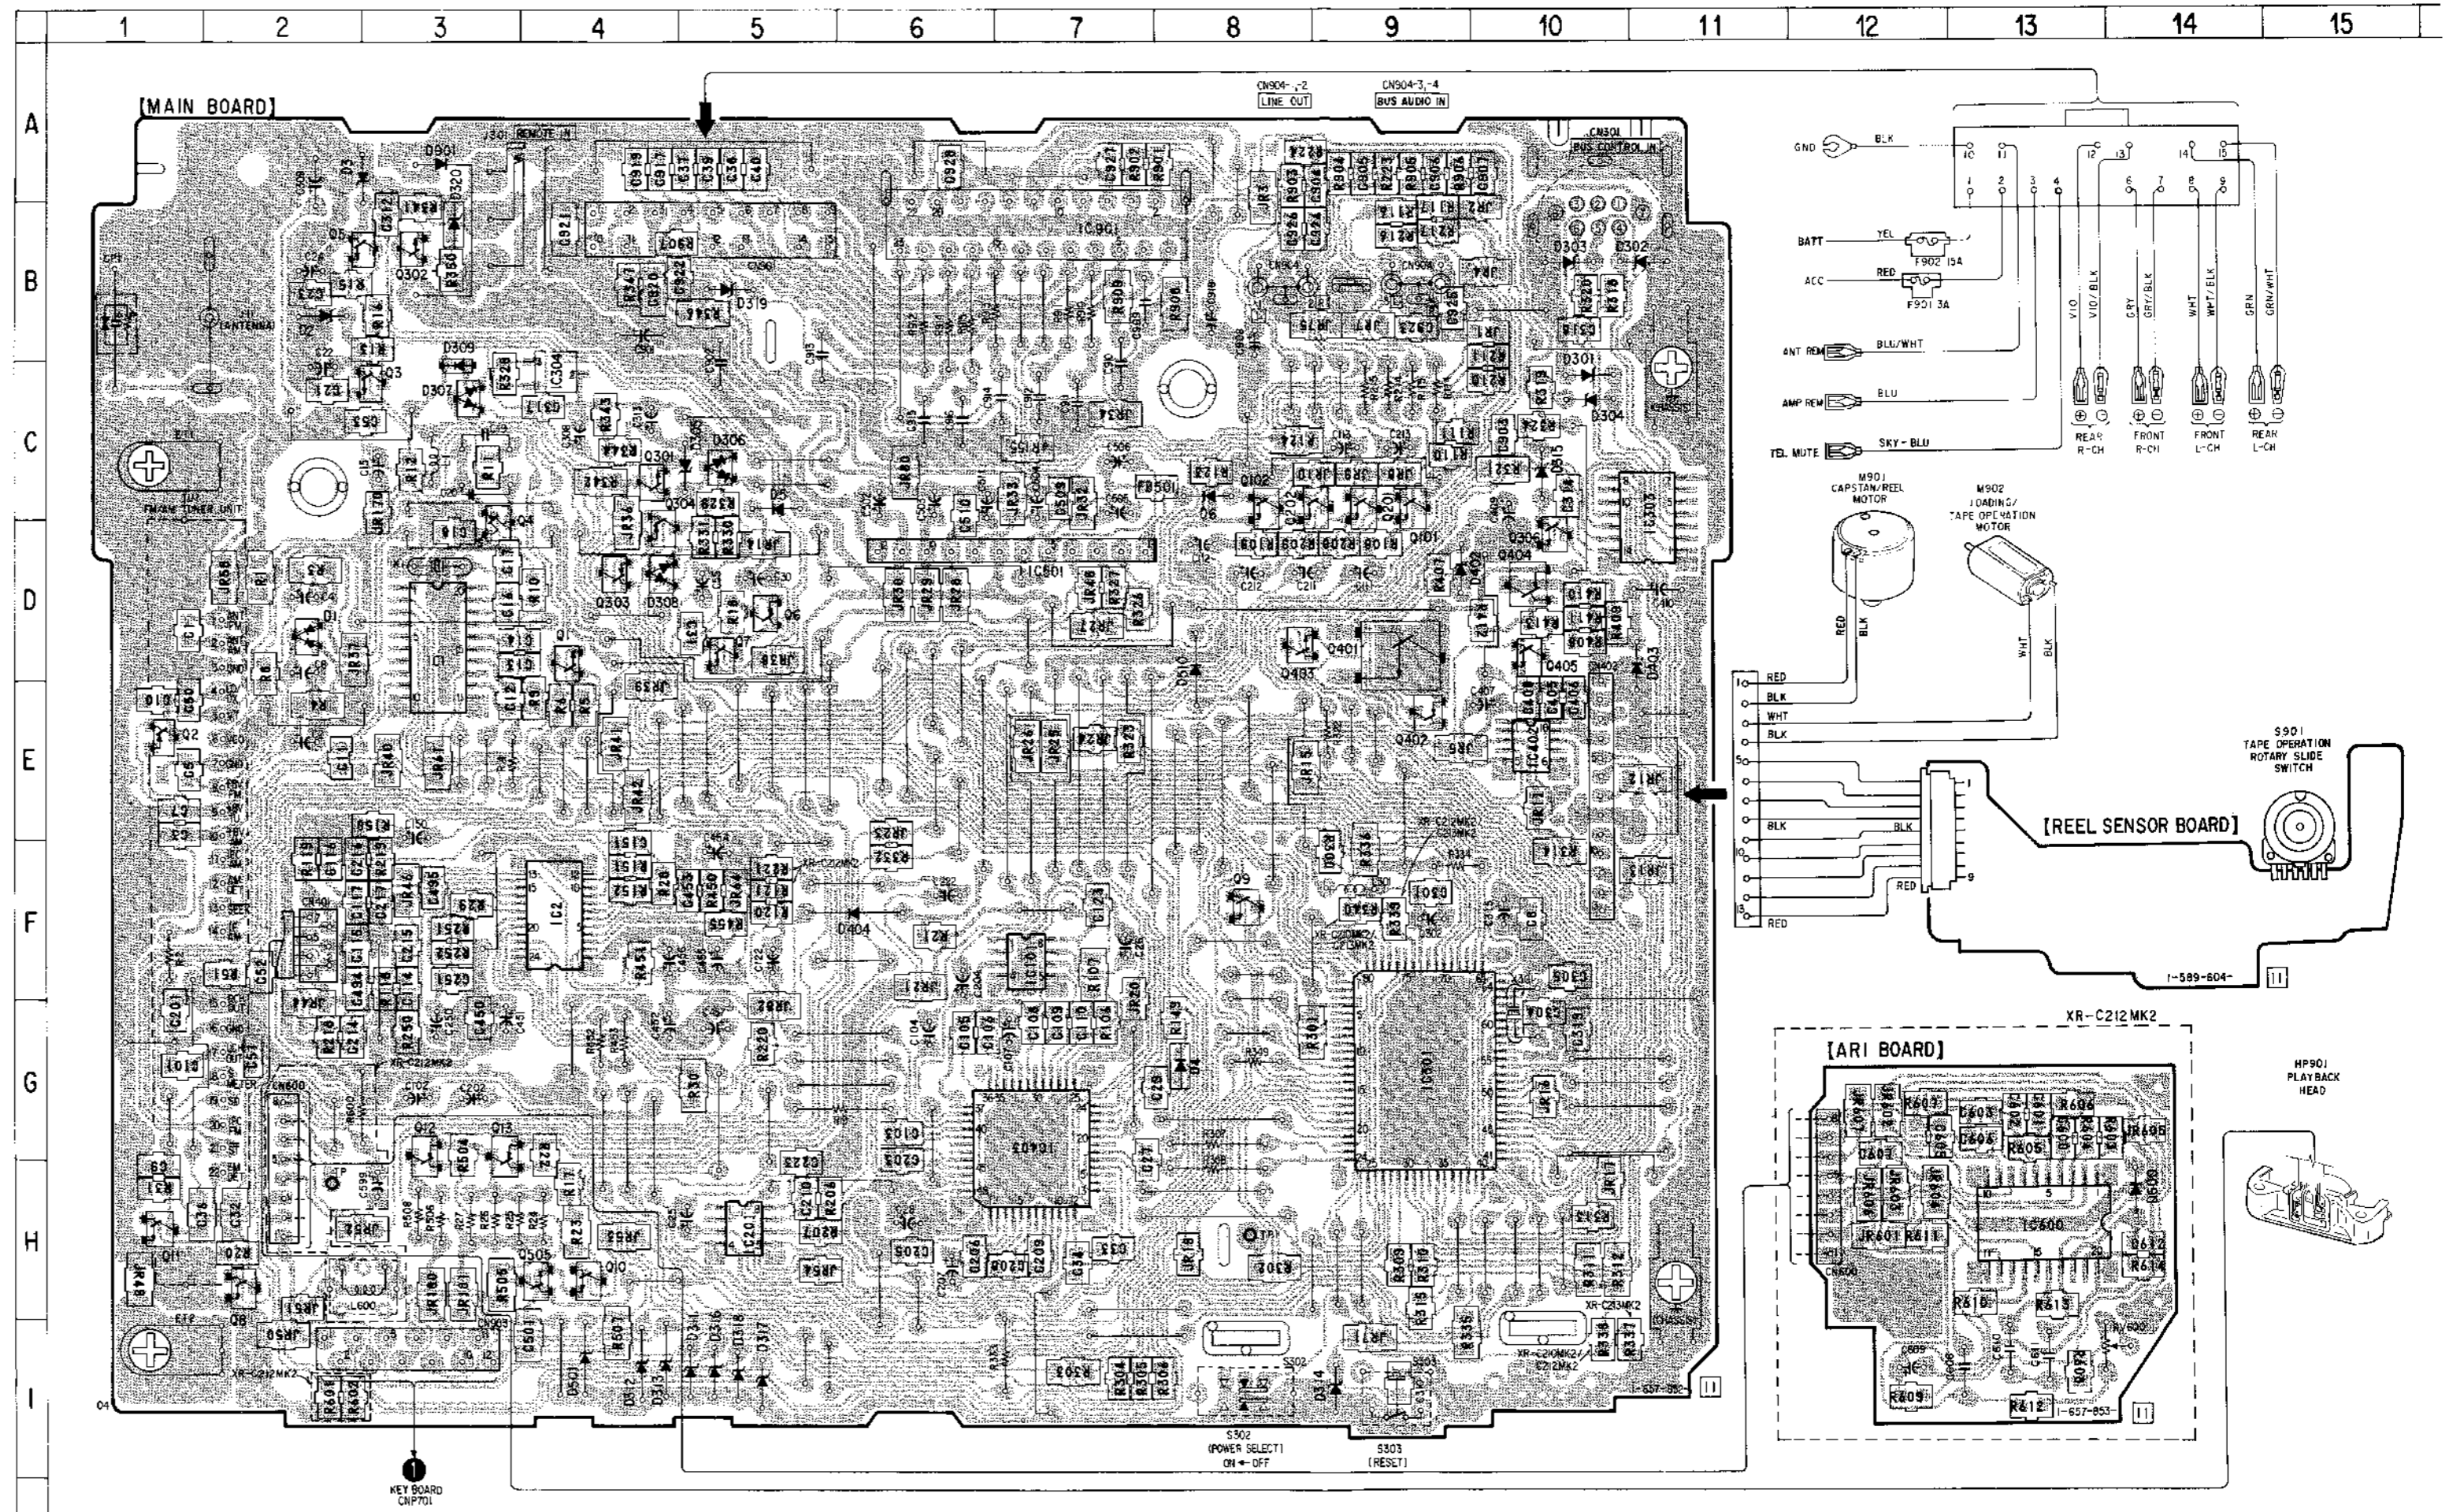


6-5. SCHEMATIC DIAGRAM—MAIN SECTION— Refer to page 37 for IC Block Diagrams.

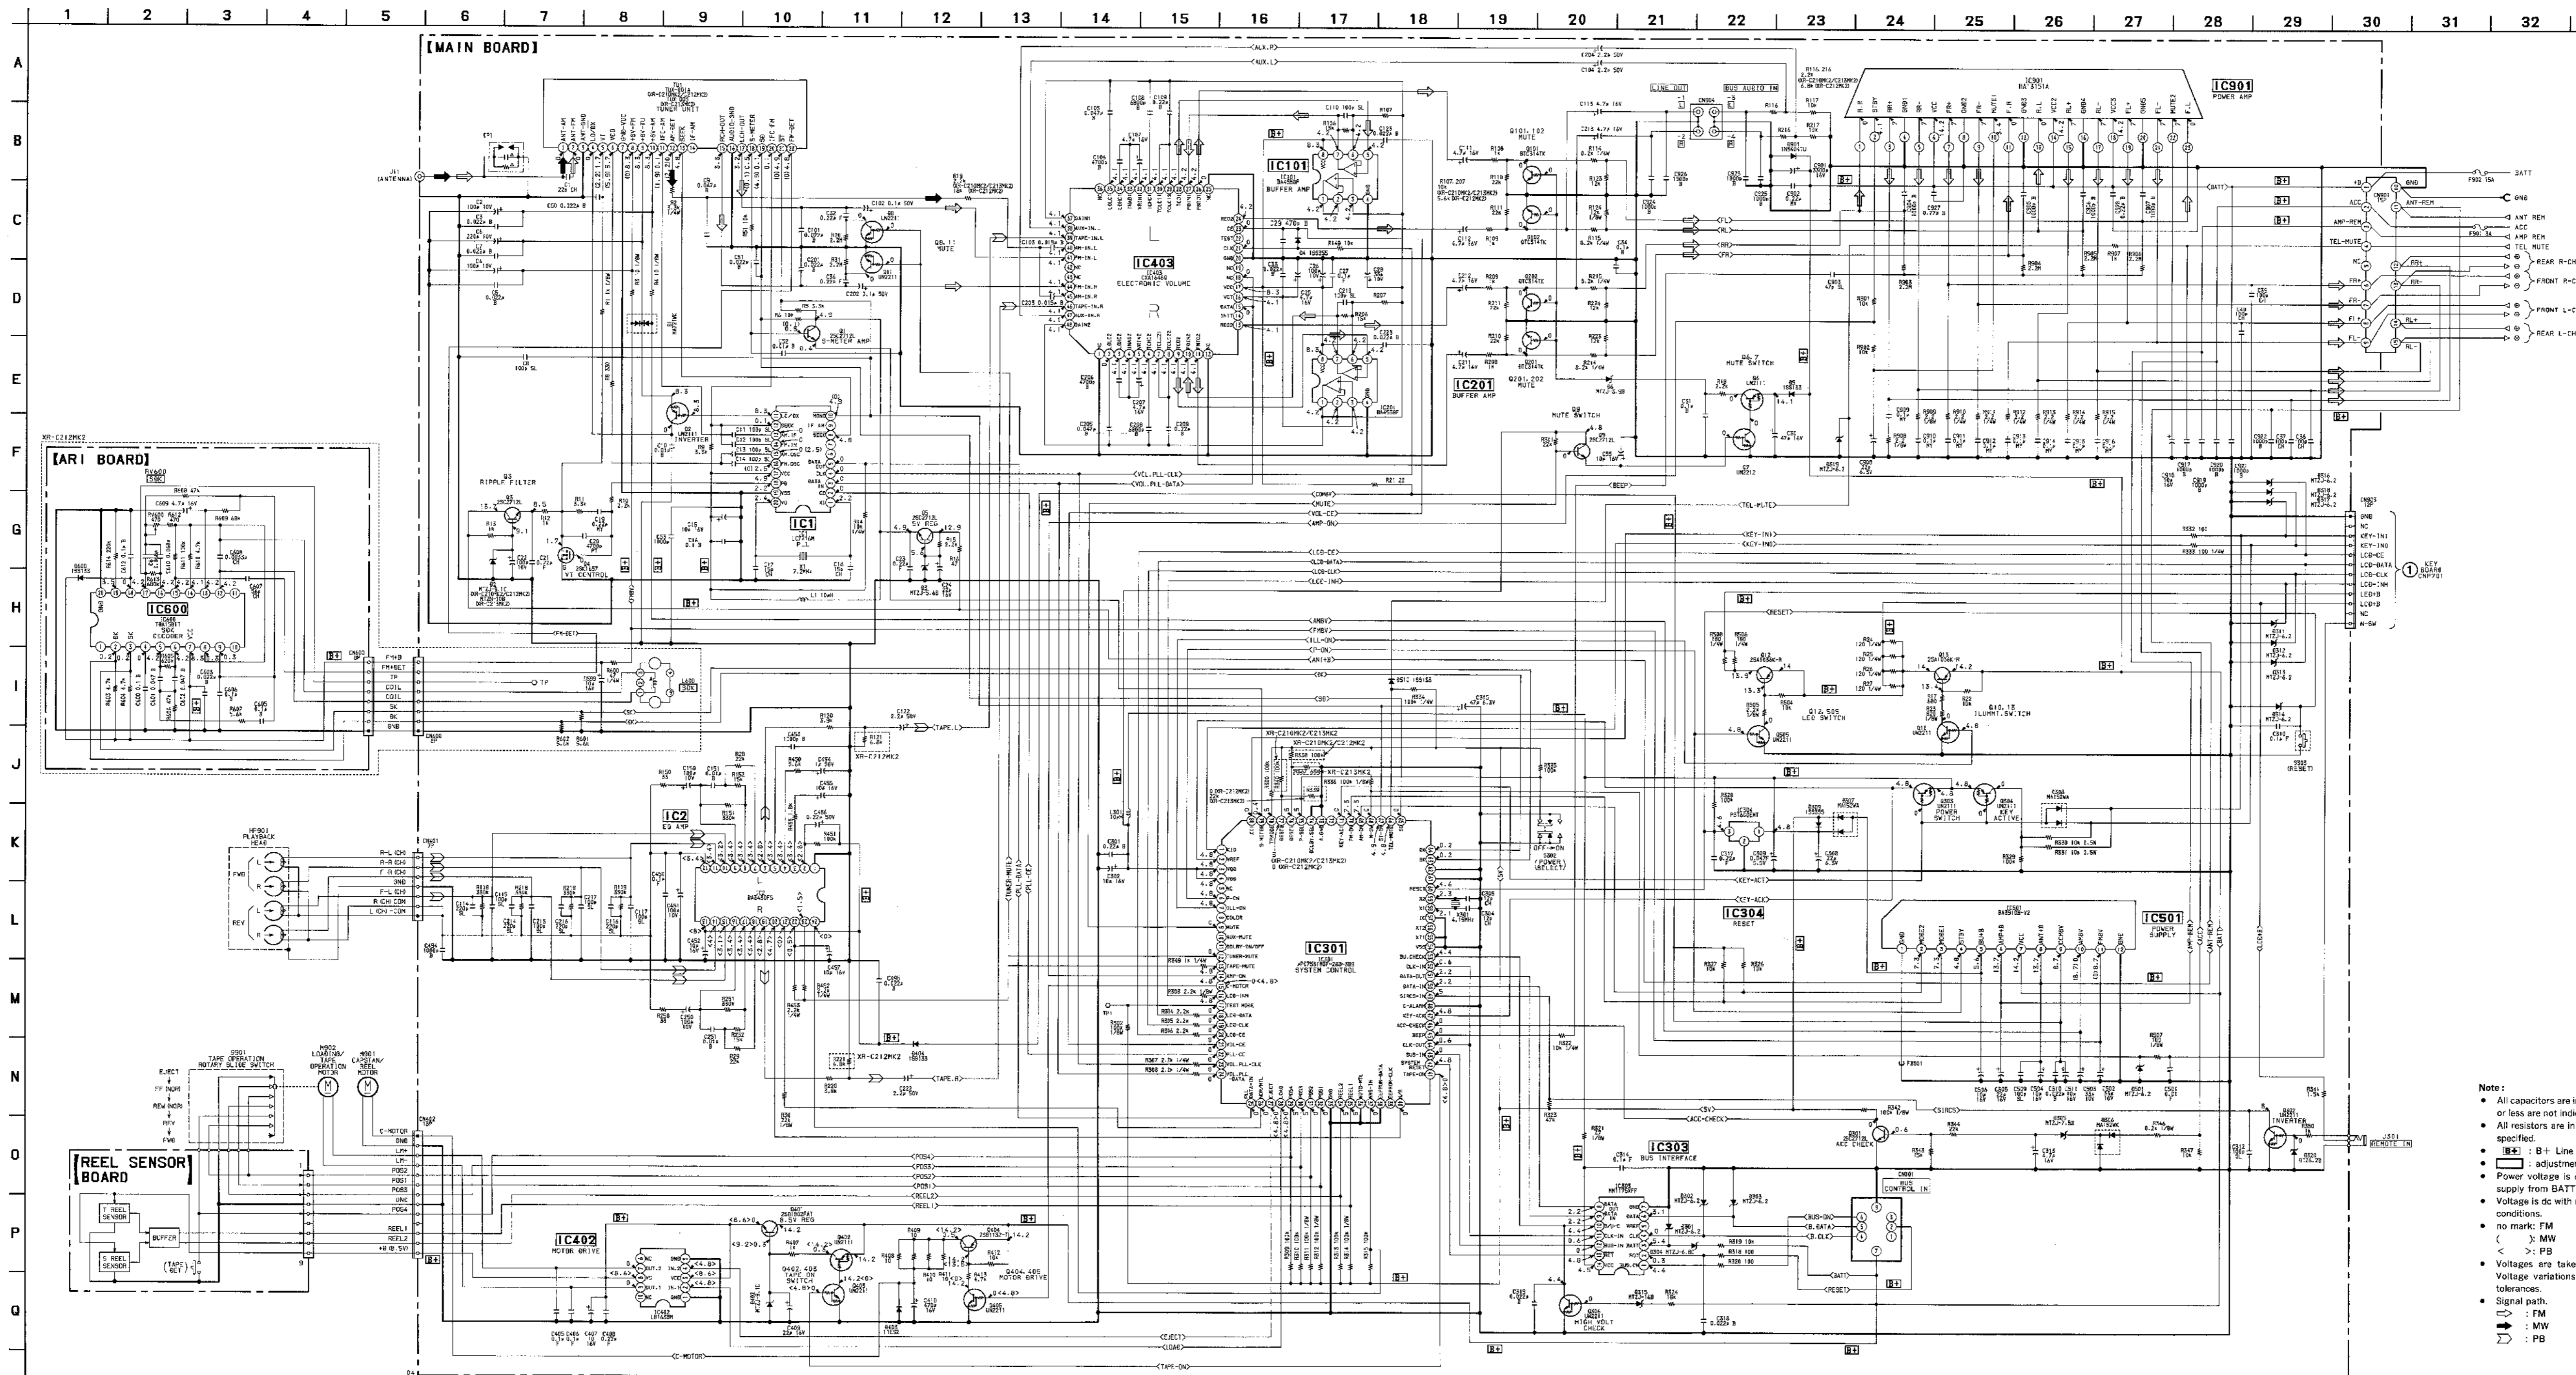


Note:

- All capacitors are in μF unless otherwise noted. pF : μF 50WV or less are not indicated except for electrolytics and tantalums.
- All resistors are in Ω and $1/4\text{W}$ or less unless otherwise specified.
- [B1]: B+ Line
- [B2]: adjustment for repair.
- Power voltage is dc 14.4V and fed with regulated dc power supply from BATT and ACC terminals.
- Voltage is dc with respect to ground under no-signal (detuned) conditions.
- no mark: FM
- < : MW
- > : PB
- Voltages are taken with a VOM (input impedance 10M Ω). Voltage variations may be noted due to normal production tolerances.
- Signal path:
 - FM
 - MW
 - PB

6-6. PRINTED WIRING BOARDS—PANEL SECTION—

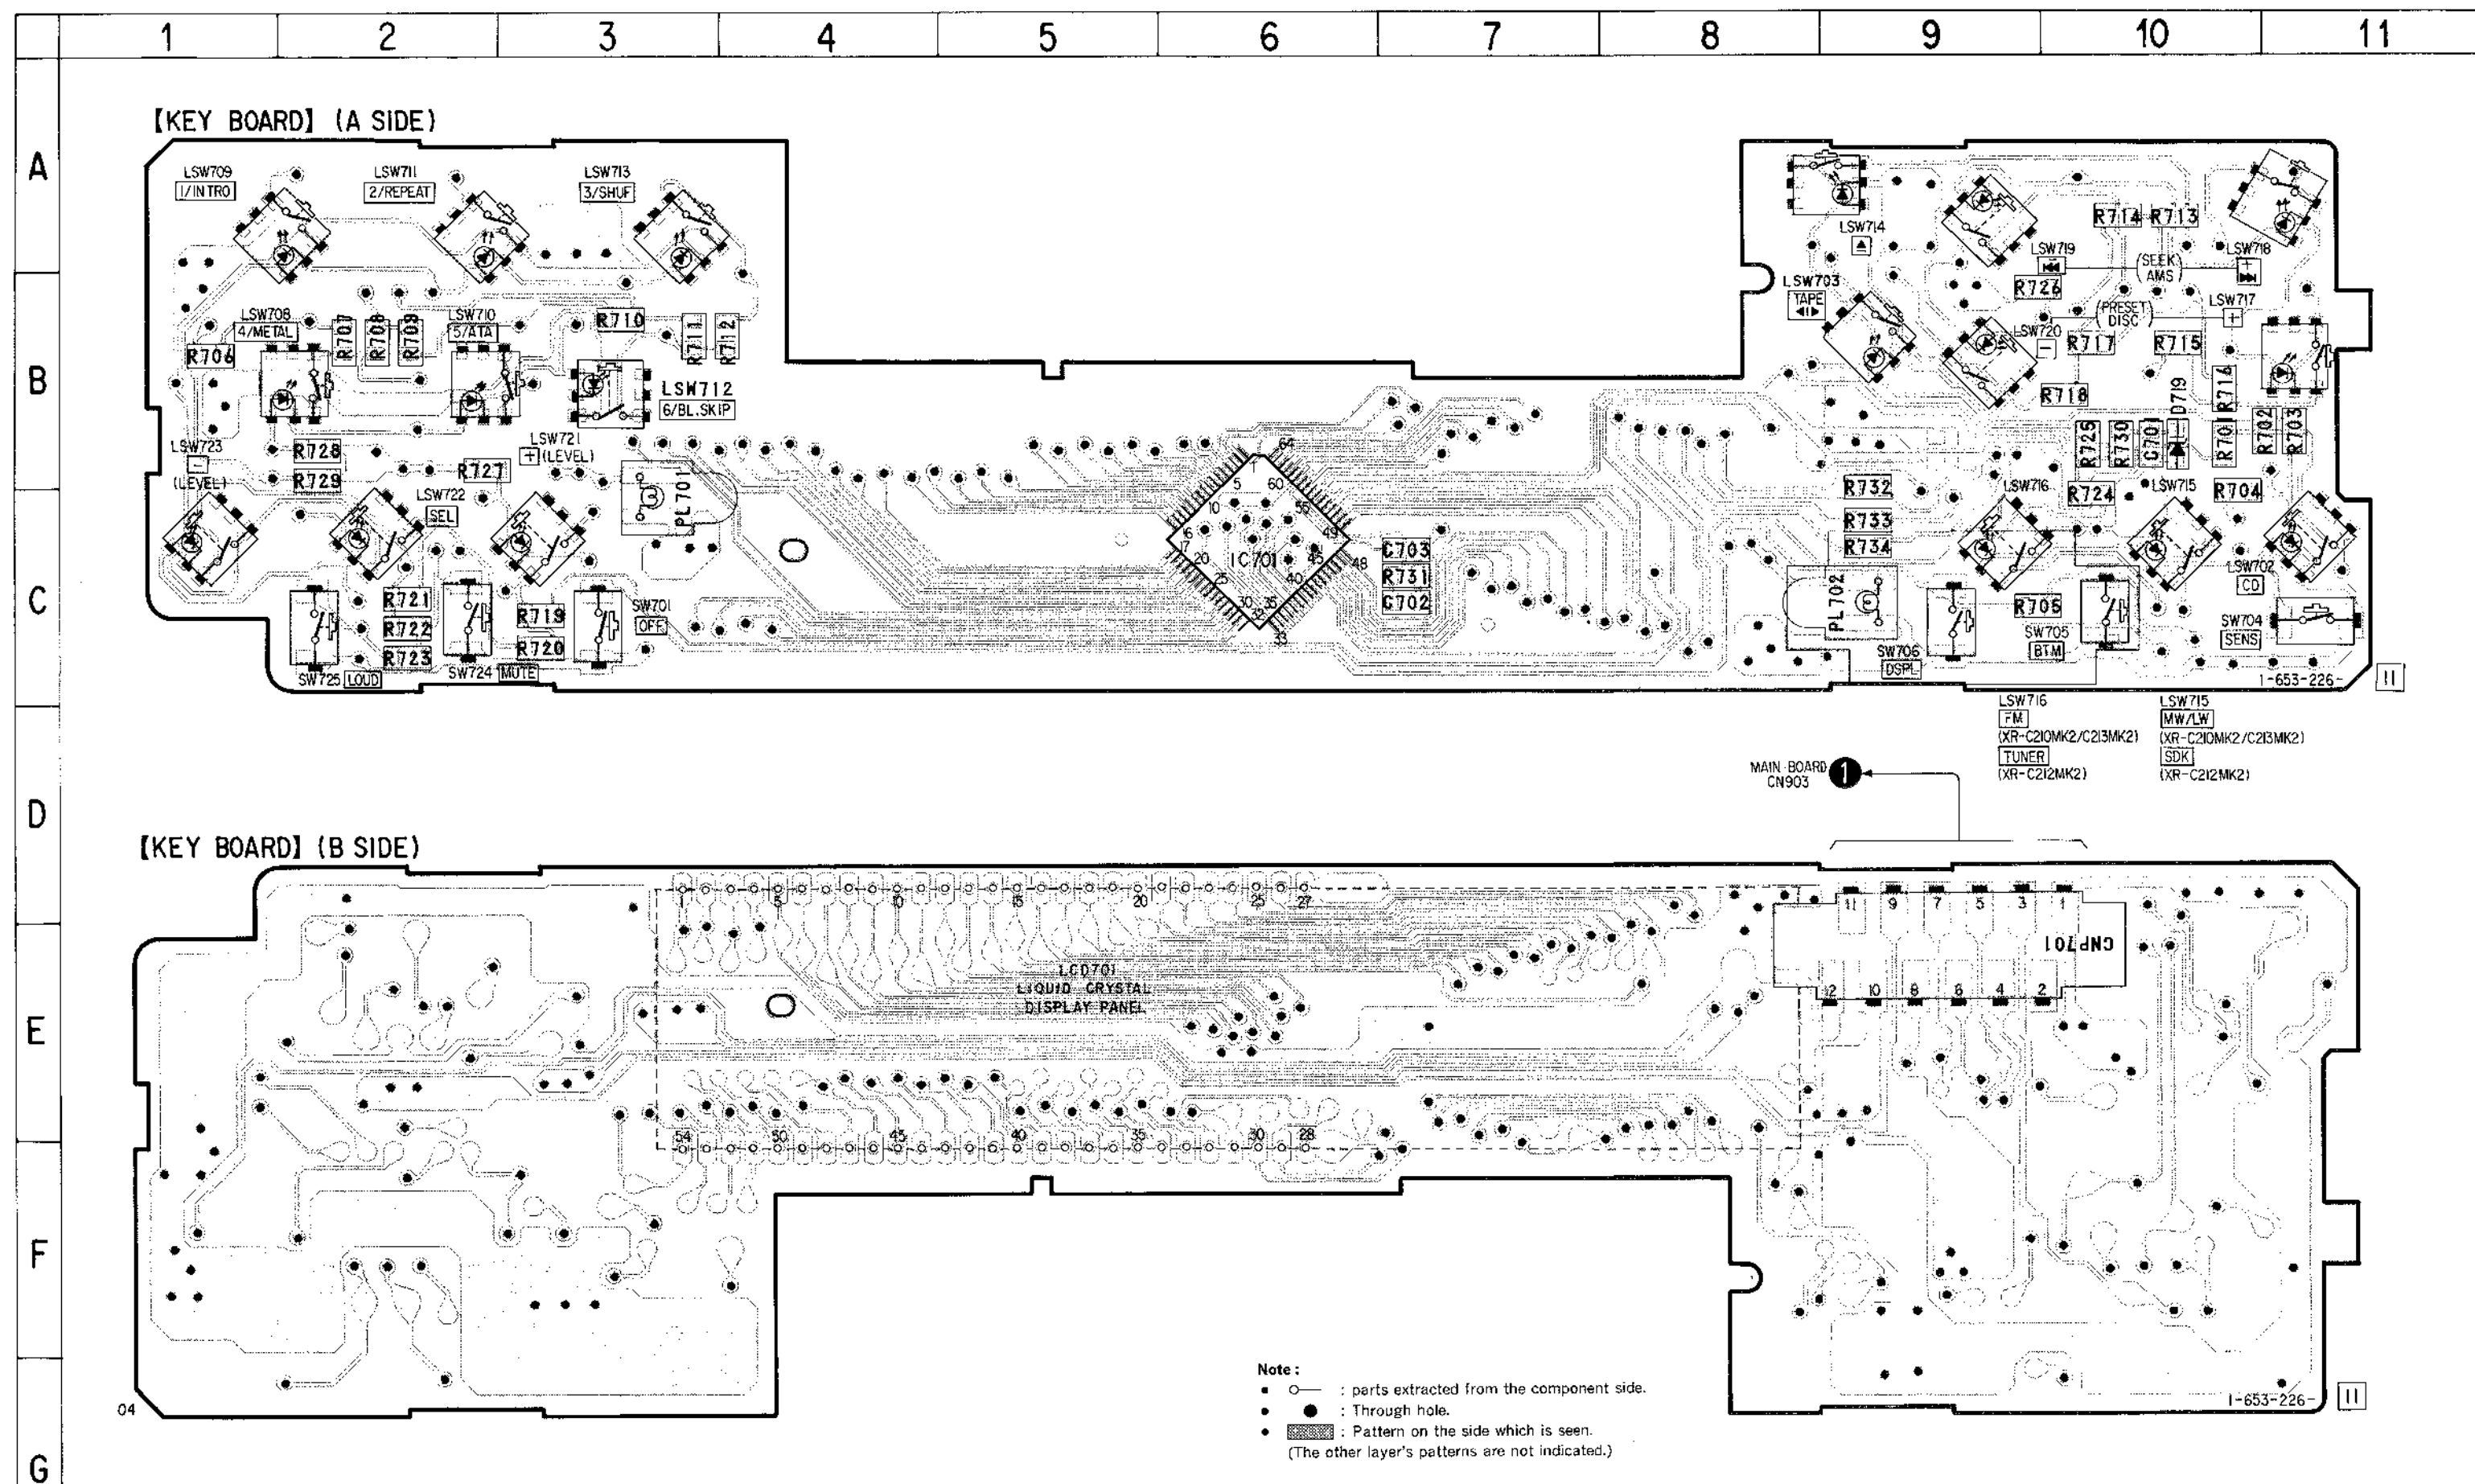

6-7. SCHEMATIC DIAGRAM—PANEL SECTION—

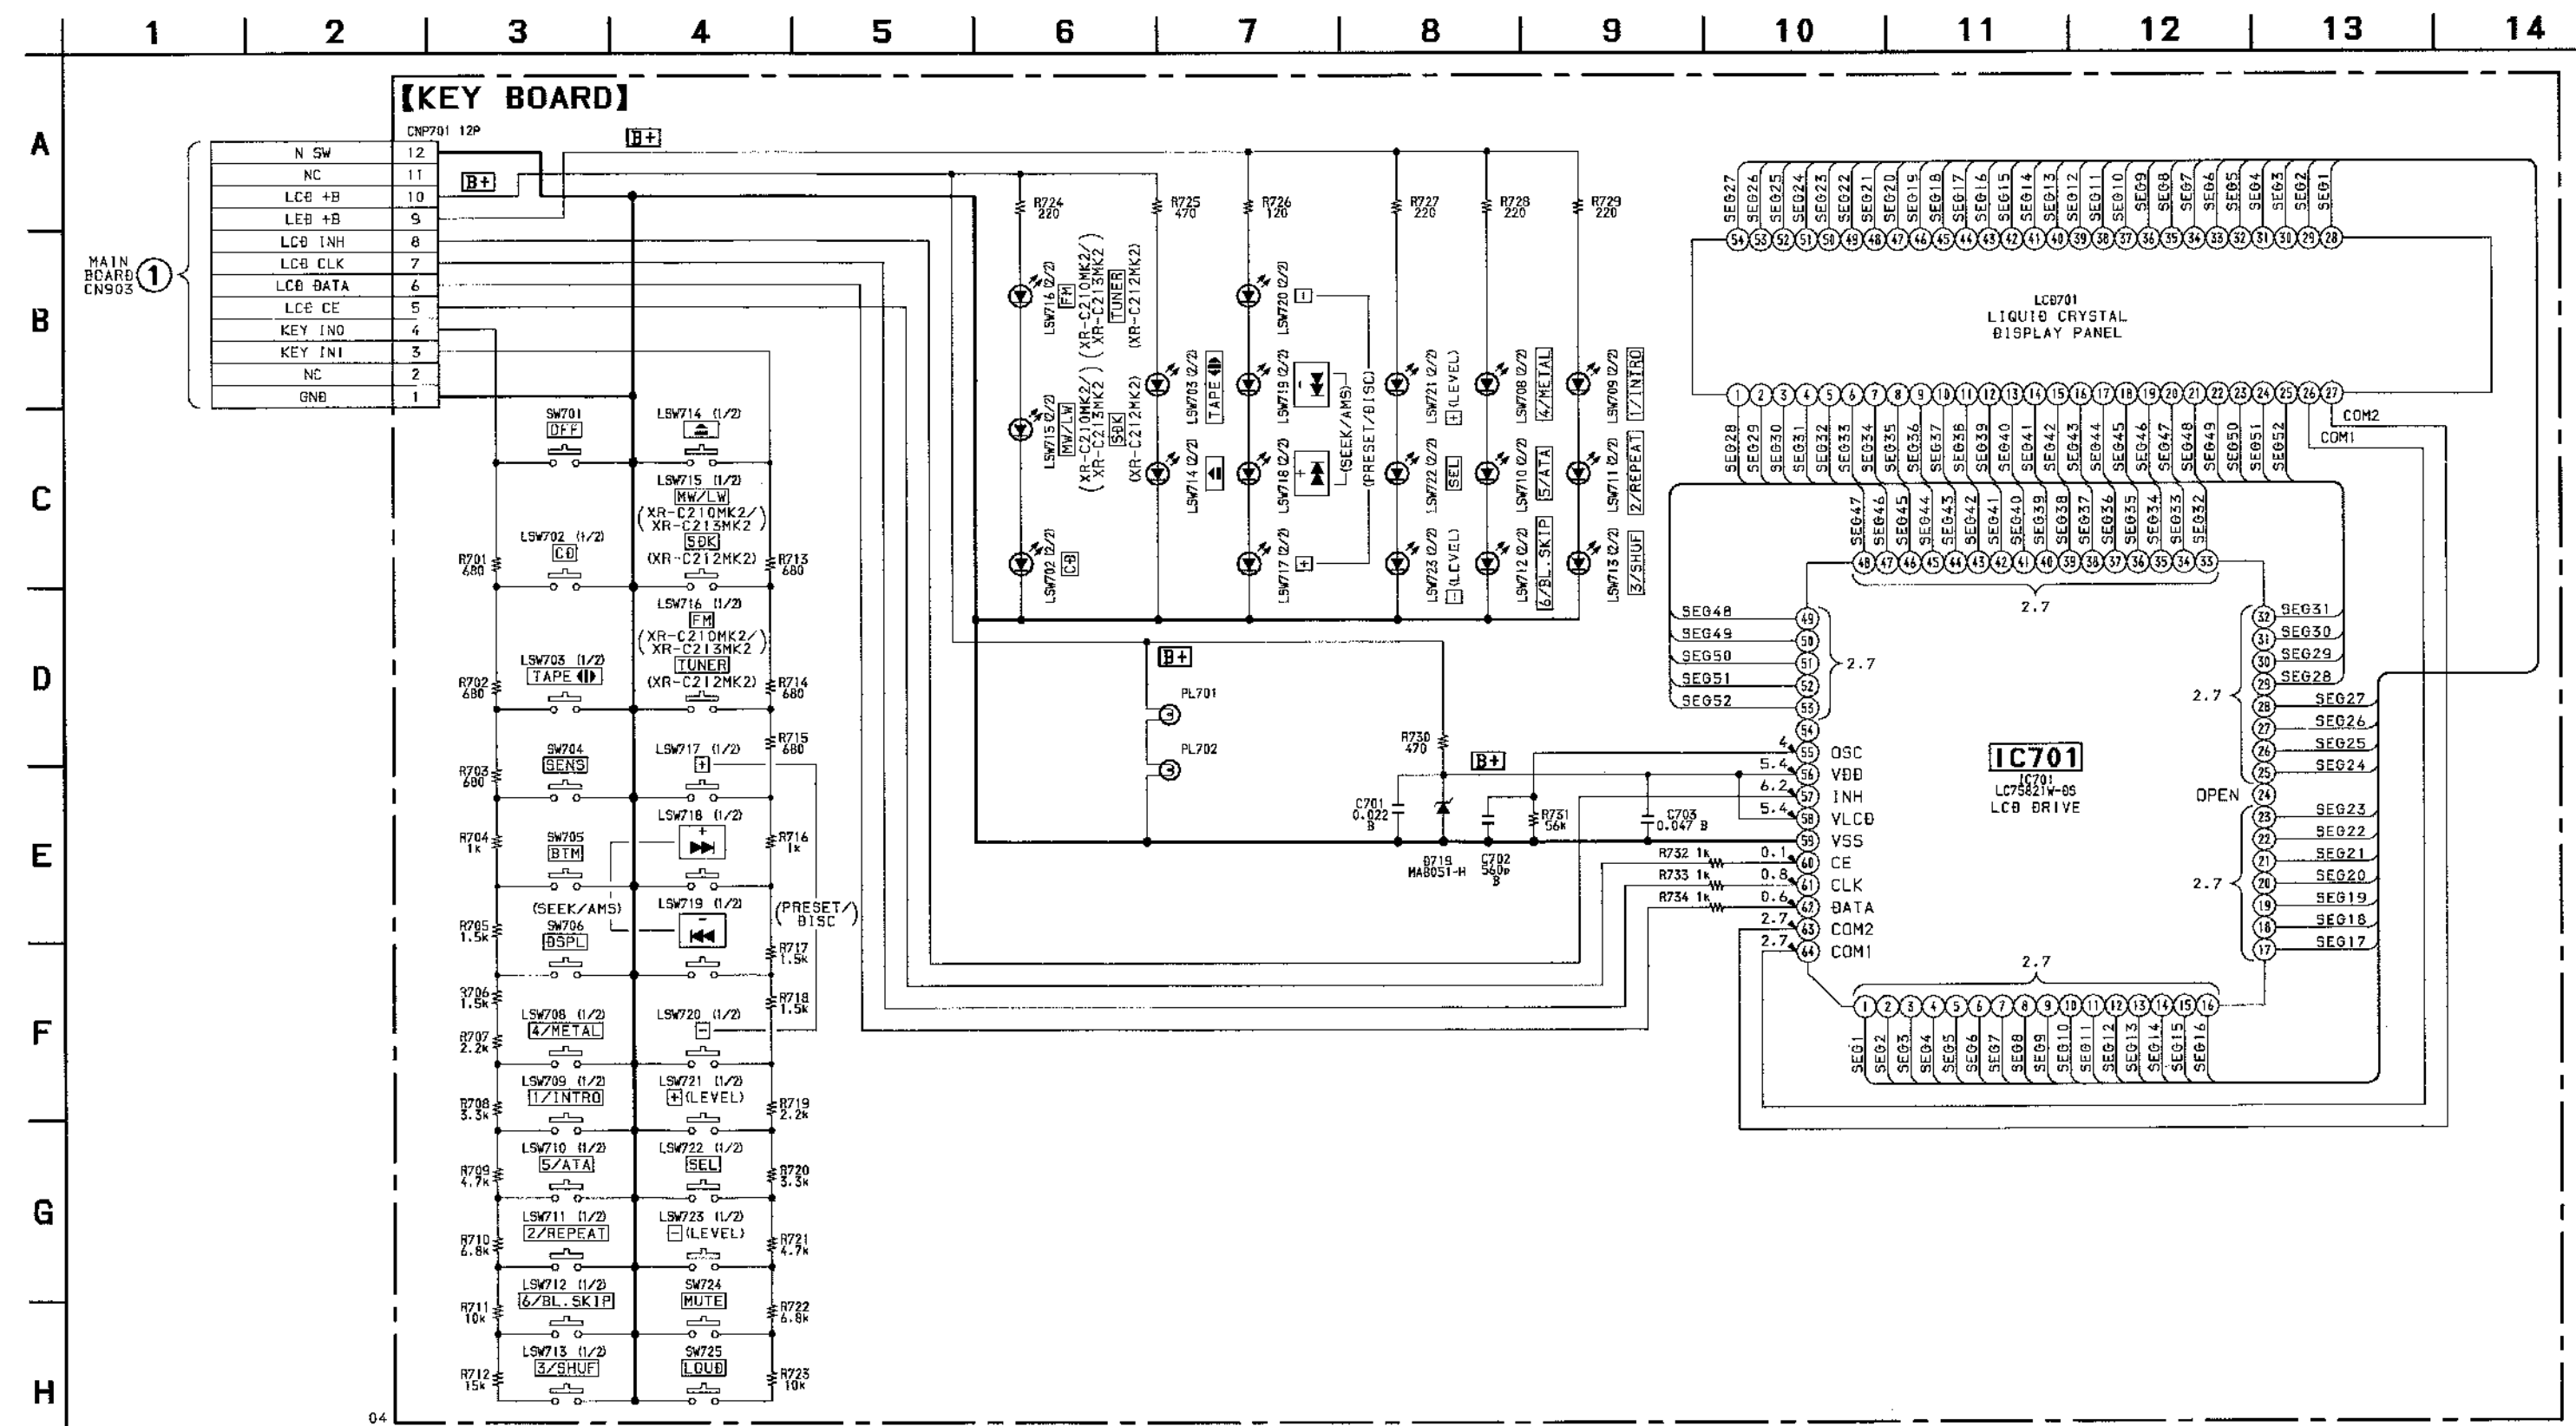


Note:

- All capacitors are in μF unless otherwise noted. pF: μF 50WV or less are not indicated except for electrolytics and tantalums.
- All resistors are in Ω and 1/4 W or less unless otherwise specified.
- Power voltage is dc 14.4V and fed with regulated dc power supply from BATT and ACC terminals.


- Voltage is dc with respect to ground under no-signal (detuned) conditions.
- no mark: FM
- Voltages are taken with a VOM (input impedance 10M Ω). Voltage variations may be noted due to normal production tolerances.

• IC Block Diagrams


IC1 LC7216M

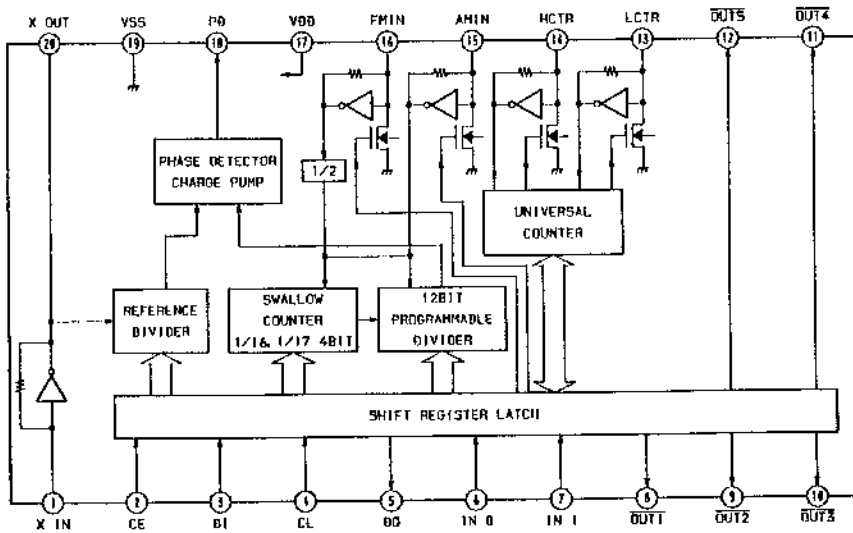


IC2 BA3430FS

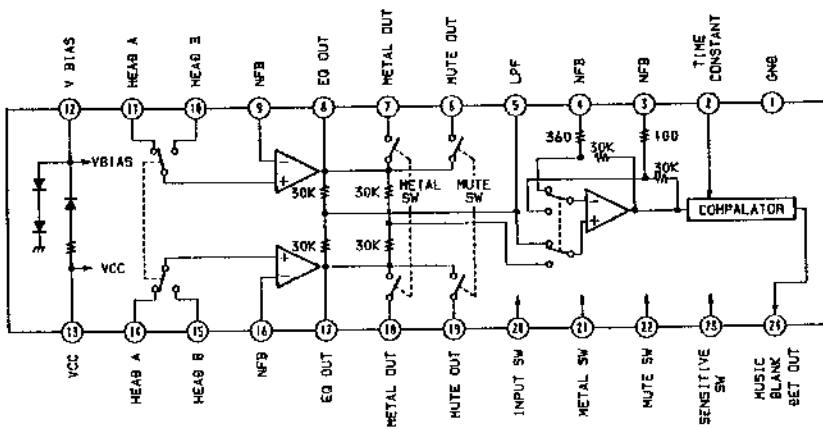


IC303 MM1175XFF

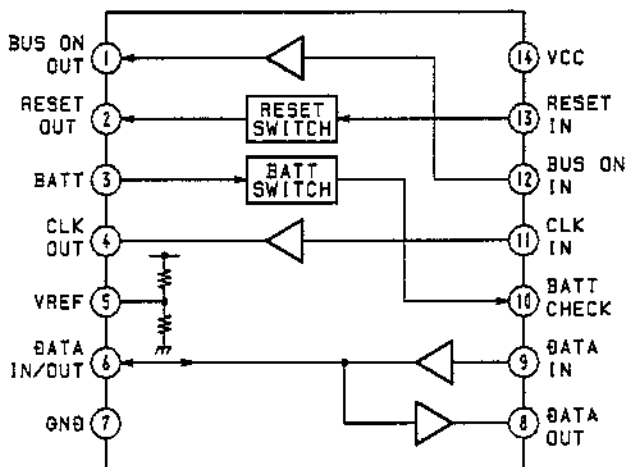


IC402 LB1638M

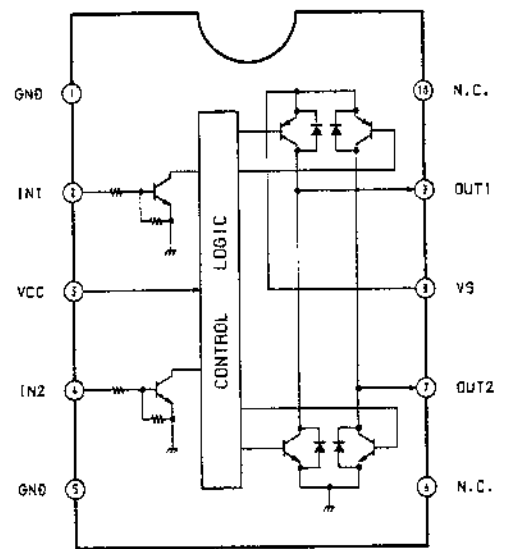


IC403 CXA1646Q

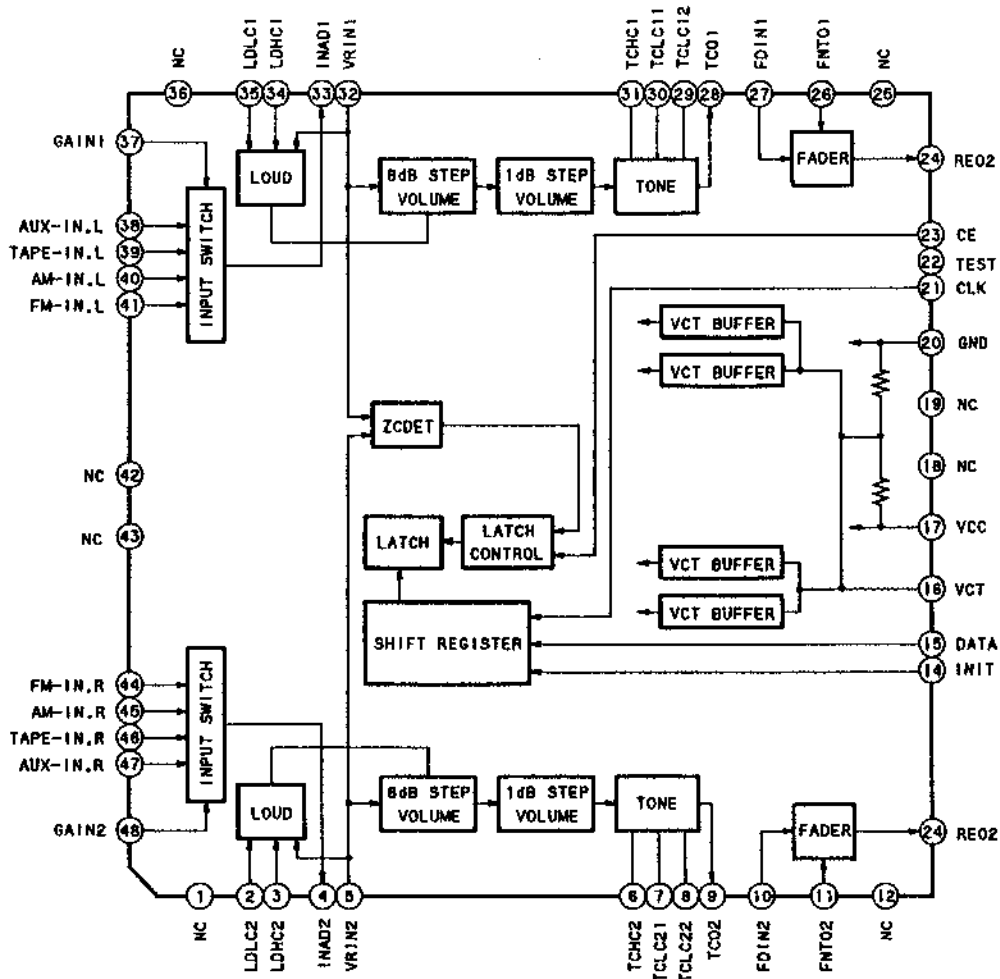


IC501 BA3910B-V2

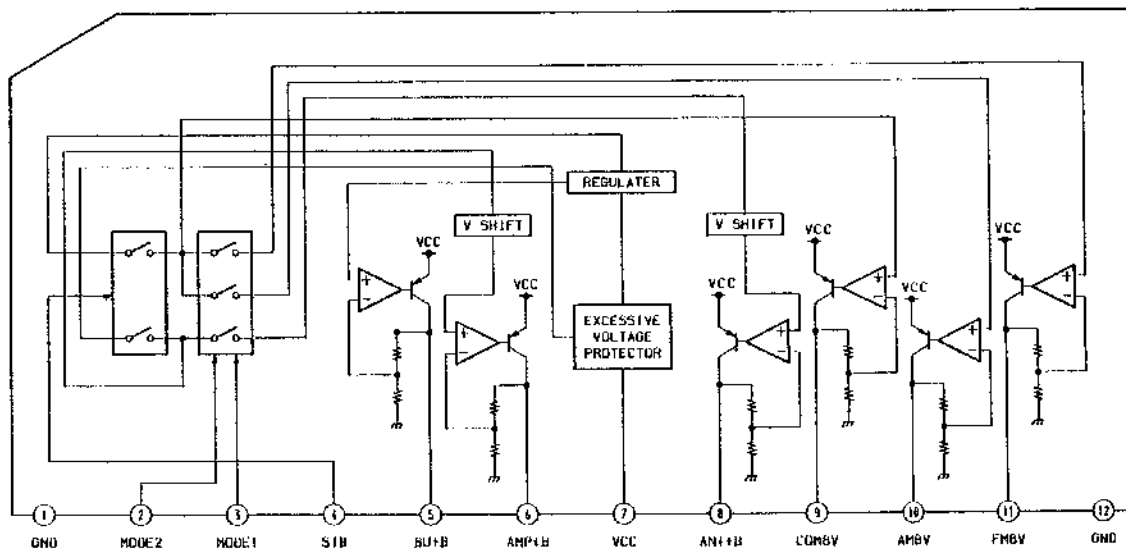

IC600 TDA1581T (XR-C212MK2 only)

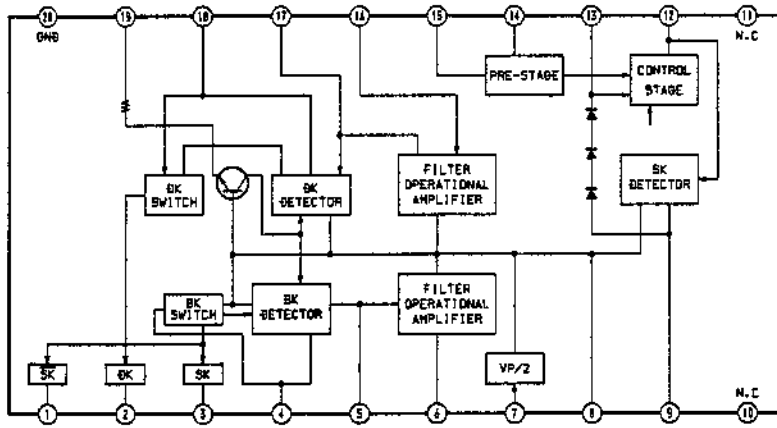

IC901 HA13151A

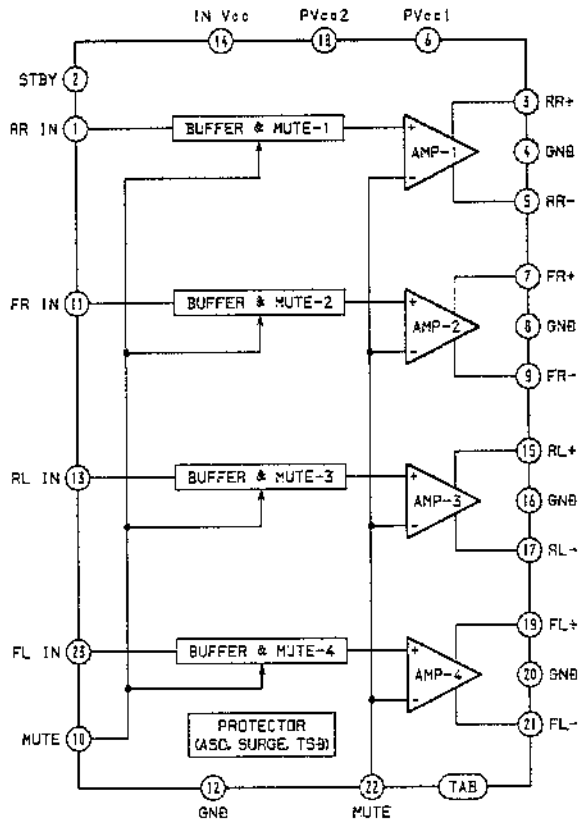

SECTION 7 EXPLODED VIEWS

NOTE:

- The mechanical parts with no reference number in the exploded views are not supplied.
- Items marked "*" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.


- -XX and -X mean standardized parts, so they may have some difference from the original one.
- Color Indication of Appearance Parts

Example :
KNOB, BALANCE (WHITE)... (RED)

Parts Color Cabinet's Color

- Hardware (# mark) list and accessories and packing materials are given in the last of this parts list.


7-1. CHASSIS SECTION

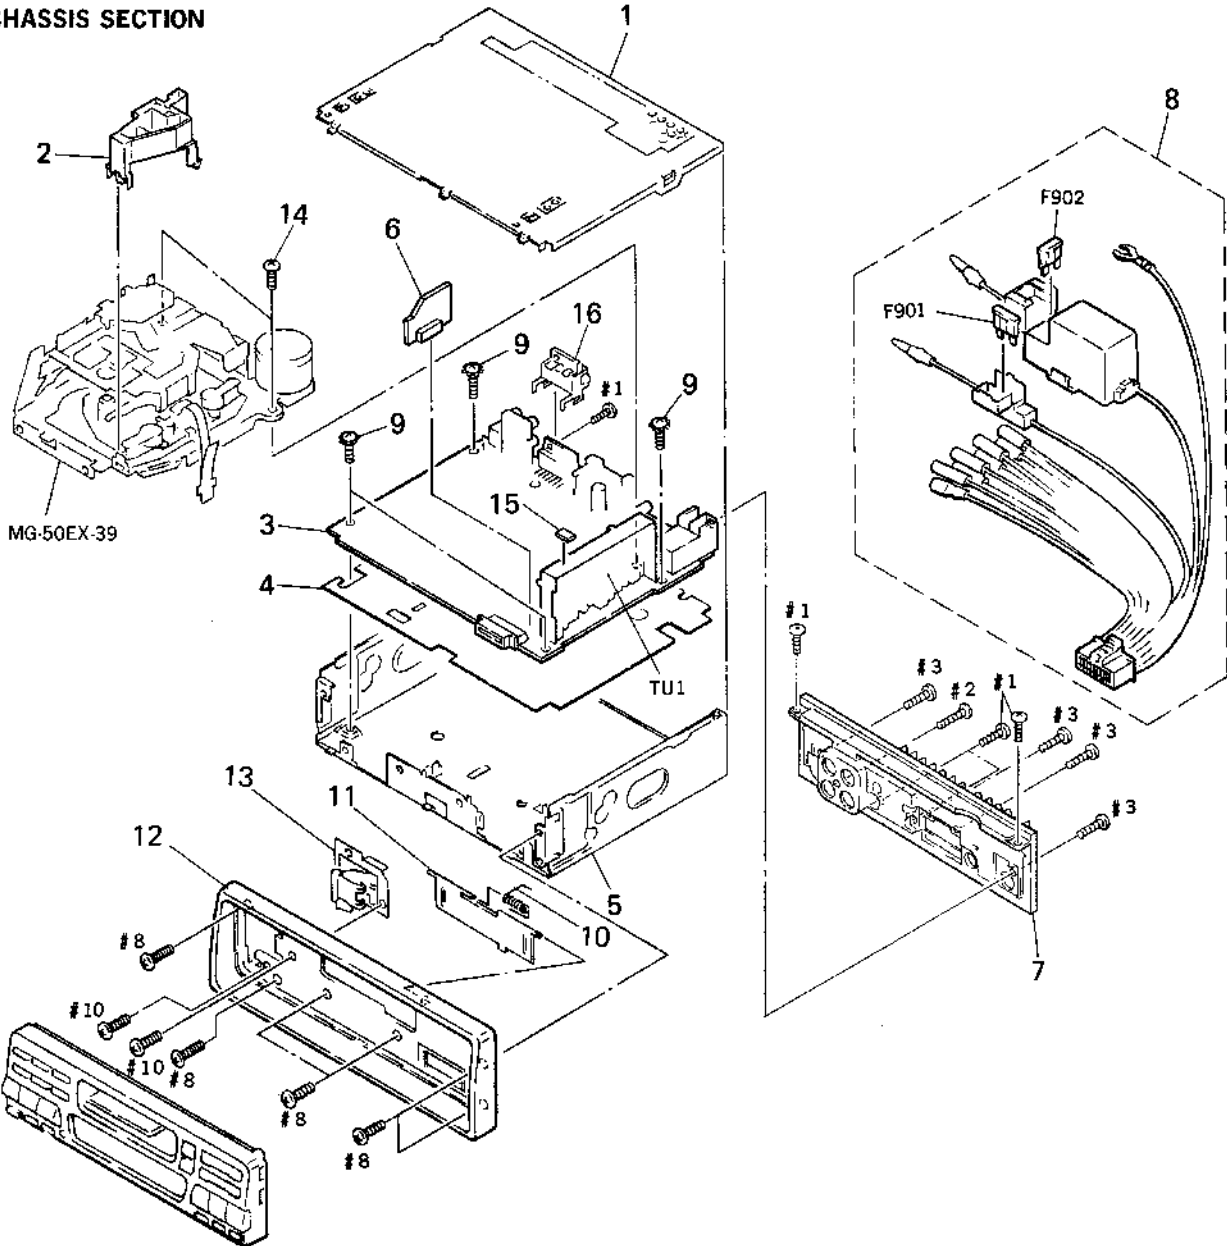

| Ref. No. | Part No. | Description | Remark |
|----------|--------------|--------------------------------|--------|
| * 1 | X 3368-833-1 | COVER ASSY | |
| 2 | 3-916-872-01 | GUIDE | |
| * 3 | A-3298-813-A | MAIN BOARD, COMPLETE (C213MK2) | |
| * 3 | A-3298-815-A | MAIN BOARD, COMPLETE (C212MK2) | |
| * 3 | A-3298-818-A | MAIN BOARD, COMPLETE (C210MK2) | |
| * 4 | 3-922-170-01 | SHEET, INSULATING | |
| * 5 | X-3368-832-1 | CHASSIS ASSY | |
| * 6 | A-3298-816-A | ARI BOARD, COMPLETE (C212MK2) | |
| * 7 | 3-921-319-01 | HEAT SINK | |
| 8 | 1-765-081-11 | CORD (WITH CONNECTOR) | |
| 9 | 3-915-923-01 | SCREW, GROUND POINT | |
| 10 | 3-913-076-01 | SPRING (C DOOR), TORSTON | |

| Ref. No. | Part No. | Description | Remark |
|----------|--------------|---|--------|
| 11 | 3-922-165-71 | DOOR, CASSETTE (C212MK2) | |
| 11 | 3-922-165-81 | DOOR, CASSETTE (C210MK2/C213MK2) | |
| 12 | 3-916-373-01 | PANEL, SUB | |
| 13 | X-3367-636-1 | LOCK ASSY | |
| 14 | 3-919-171-01 | SCREW (2.6X6) (C TIGHT) | |
| 15 | 9-911-840-XX | CUSHION (U) | |
| 16 | 3-921-320-04 | HOLDER (IC) | |
| F901 | 1-533-326-11 | FUSE (BLADE TYPE) (AUTO FUSE) (3A) | |
| F902 | 1-533-331-11 | FUSE (BLADE TYPE) (AUTO FUSE) (15A) | |
| TU1 | A-3282-003-A | TUNER UNIT (TUX-001A) (C210MK2/C212MK2) | |
| TU1 | A-3282-011-A | TUNER UNIT (TUX-005) (C213MK2) | |


7-2. FRONT PANEL SECTION

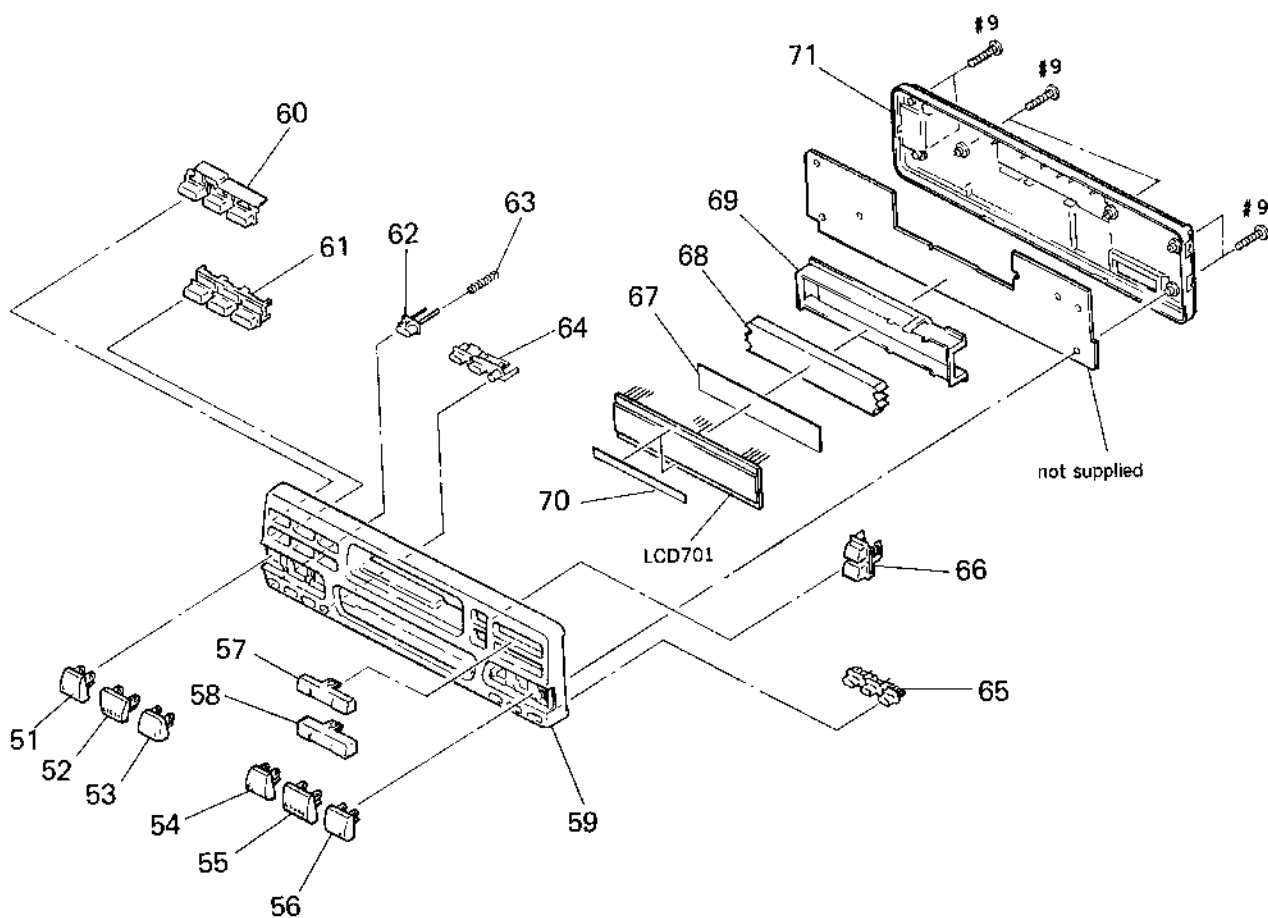

| Ref. No. | Part No. | Description | Remark |
|----------|--------------|------------------------------|--------|
| 51 | 3-909-316-01 | BUTTON (-) | |
| 52 | 3-909-317-01 | BUTTON (SEL.) | |
| 53 | 3-909-318-01 | BUTTON (+) | |
| 54 | 3-909-319-01 | BUTTON (C) (C212MK2) | |
| 54 | 3-909-319-21 | BUTTON (C) (C210MK2/C213MK2) | |
| 55 | 3-909-320-41 | BUTTON (D) (C212MK2) | |
| 55 | 3-909-320-51 | BUTTON (D) (C210MK2/C213MK2) | |
| 56 | 3-909-321-11 | BUTTON (E) | |
| 57 | 3-916-367-01 | BUTTON (S/A) | |
| 58 | 3-916-368-01 | BUTTON (P/D) | |
| 59 | 3-926-317-01 | PANEL, FRONT (C210MK2) | |
| 59 | 3-926-317-21 | PANEL, FRONT (C213MK2) | |
| 60 | 3-916-364-01 | BUTTON (1-3) | |

| Ref. No. | Part No. | Description | Remark |
|----------|--------------|-------------------------------|--------|
| 61 | 3-916-365-01 | BUTTON (4-6) | |
| 62 | 3-904-245-21 | BUTTON (RELEASE) | |
| 63 | 3-904-193-01 | SPRING (RELEASE) | |
| 64 | 3-916-369-01 | BUTTON (MUTE) | |
| 65 | 3-916-370-01 | BUTTON (BTM) | |
| 66 | 3-916-366-01 | BUTTON (EJECT) | |
| * 67 | 3-917-845-01 | REFLECTOR, SHEET | |
| * 68 | 3-389-673-01 | PLATE (M:LCD), LIGHT GUIDE | |
| * 69 | 3-913-756-01 | HOLDER (LCD) | |
| * 70 | 3-924-096-01 | SHEET (L), ELECTROSTATIC | |
| 71 | 3-916-363-01 | PANEL, FRONT BACK | |
| LCD701 | 1-810-570-11 | DISPLAY PANEL, LIQUID CRYSTAL | |

7-3. MECHANISM DECK SECTION
(MG-50EX-39)

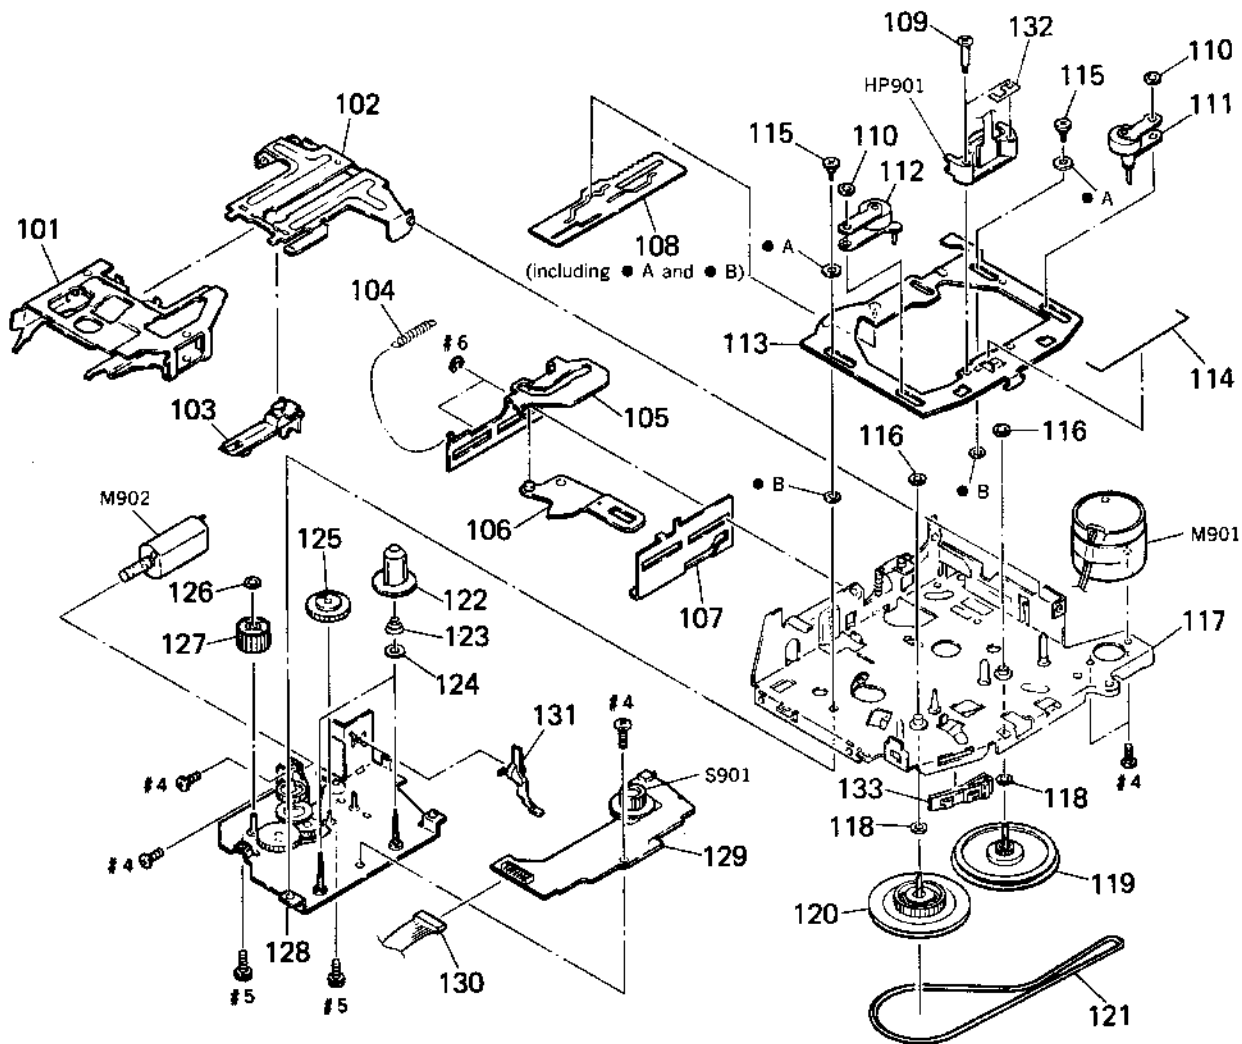

| Ref. No. | Part No. | Description | Remark |
|----------|----------|--|--------|
| | 101 | 3-912-881-01 HOUSING, CASSETTE | |
| * | 102 | 3-912-882-01 HANGER, HOUSING | |
| | 103 | 3-912-884-01 CATCHER | |
| | 104 | 3-912-885-01 SPRING (LOADING LEVER), TENSION | |
| * | 105 | 3-912-892-01 LEVER (B), LOADING | |
| * | 106 | 3-912-883-01 ARM, SUCTION | |
| * | 107 | 3-922-941-01 LEVER (A2), LOADING | |
| * | 108 | X-3370-516-1 LEVER (SV) ASSY, MODE | |
| | 109 | 3-912-893-01 SCREW, HEAD FITTING | |
| | 110 | 3-579-788-01 WASHER, STOPPER | |
| | 111 | X-3368-266-1 PINCH LEVER (F) ASSY | |
| | 112 | X-3368-267-1 PINCH LEVER (R) ASSY | |
| * | 113 | X-3368-268-1 BASE ASSY, HEAD | |
| | 114 | 3-912-879-01 SPRING, PINCH PRESS | |
| | 115 | 3-912-897-01 SCREW (HB), STEP | |
| | 116 | 3-364-151-01 WASHER | |
| | 117 | X-3368-841-1 CHASSIS (SV) ASSY (A), MECHANICAL | |
| | 118 | 3-701-437-21 WASHER | |
| | 119 | 3-913-825-01 FLYWHEEL (FZ) | |

| Ref. No. | Part No. | Description | Remark |
|----------|----------|---|--------|
| | 120 | X-3369-124-1 CLUTCH (S) ASSY, FR | |
| | 121 | 3-912-896-01 BELT | |
| | 122 | X-3368-843-1 GEAR ASSY, REEL | |
| | 123 | 3-917-222-01 SPRING (B-T), COIL | |
| | 124 | 3-917-324-01 WASHER (B-T) | |
| | 125 | 3-912-888-03 GEAR (LOADING E) | |
| | 126 | 3-321-813-01 WASHER, COTTER POLYETHYLENE | |
| | 127 | 3-912-889-01 GEAR (LOADING F) | |
| | 128 | X-3368-842-1 BRACKET (SV) ASSY, REEL | |
| | 129 | 1-589-604-11 REEL SENSOR BOARD | |
| | 130 | 1-765-460-12 CORD (WITH CONNECTOR) | |
| | 131 | 3-916-358-01 LEVER (TAPE IN 2) | |
| * | 132 | 3-917-258-01 PLATE, GROUND | |
| | 133 | 3-919-553-01 GUIDE (BELT) | |
| | HP901 | 1 500-196-11 HEAD, MAGNETIC (PLAYBACK) | |
| | M901 | X-3368-684-1 MOTOR ASSY, MAIN (CAPSTAN/REEL) | |
| | M902 | X-3368-685-1 MOTOR ASSY, SUB (LOADING/TAPE OPERATION) | |
| | S901 | 1-692-885-11 SWITCH, ROTARY SLIDE (TAPE OPERATION) | |

SECTION 8 ELECTRICAL PARTS LIST

ARI

NOTE:

- Due to standardization, replacements in the parts list may be different from the parts specified in the diagrams or the components used on the set.
- -XX and -X mean standardized parts, so they may have some difference from the original one.
- RESISTORS
All resistors are in ohms.
METAL: Metal-film resistor.
METAL OXIDE: Metal oxide-film resistor.
F: nonflammable

- Items marked "*" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- SEMICONDUCTORS
In each case, u: μ , for example:
uA.: μ A. uPA.: μ PA.
uPB.: μ PB. uPC.: μ PC. uPD.: μ PD.
- CAPACITORS
uF: μ F
- COILS
uH: μ H

When indicating parts by reference number, please include the board.

| Ref. No. | Part No. | Description | Remark | | Ref. No. | Part No. | Description | Remark |
|----------|--------------|-------------------------------|----------|----------------------|-----------|--------------|--------------------------------|----------------------------|
| * | A-3298-816-A | ARI BOARD, COMPLETE (C212MK2) | | | | | < JUMPER RESISTOR > | |
| | | ***** | | | | | | |
| | | < CAPACITOR > | | | | | | |
| C600 | 1-164-004-11 | CERAMIC CHIP | 0.1uF | 10% 25V (C212MK2) | JR601 | 1-216-295-00 | METAL CHIP | 0 5% 1/10W (C212MK2) |
| C601 | 1-163-809-11 | CERAMIC CHIP | 0.047uF | 10% 25V (C212MK2) | JR602-604 | | | |
| C602 | 1-163-809-11 | CERAMIC CHIP | 0.047uF | 10% 25V (C212MK2) | | 1-216-296-00 | CONDUCTOR, CHIP | (3216) (C212MK2) |
| C603 | 1-163-037-11 | CERAMIC CHIP | 0.022uF | 10% 25V (C212MK2) | JR605 | 1-216-295-00 | METAL CHIP | 0 5% 1/10W |
| C605 | 1-164-004-11 | CERAMIC CHIP | 0.1uF | 10% 25V (C212MK2) | JR606 | 1-216-296-00 | CONDUCTOR, CHIP | (3216) (C212MK2) |
| C606 | 1-164-004-11 | CERAMIC CHIP | 0.1uF | 10% 25V (C212MK2) | JR607 | 1-216-296-00 | CONDUCTOR, CHIP | (3216) (C212MK2) |
| C607 | 1-163-245-11 | CERAMIC CHIP | 56PF | 5% 50V (C212MK2) | | | < RESISTOR > | |
| C608 | 1-130-477-00 | MYLAR | 0.0033uF | 5% 50V (C212MK2) | R603 | 1-216-065-00 | METAL CHIP | 4.7K 5% 1/10W (C212MK2) |
| C609 | 1-126-288-11 | ELECT | 4.7uF | 20% 16V (C212MK2) | R604 | 1-216-065-00 | METAL CHIP | 4.7K 5% 1/10W (C212MK2) |
| C610 | 1-136-495-11 | FILM | 0.068uF | 5% 50V (C212MK2) | R605 | 1-208-849-11 | METAL GLAZE | 620K 5% 1/10W (C212MK2) |
| C611 | 1-136-495-11 | FILM | 0.068uF | 5% 50V (C212MK2) | R606 | 1-216-089-00 | METAL GLAZE | 47K 5% 1/10W (C212MK2) |
| C612 | 1-164-004-11 | CERAMIC CHIP | 0.1uF | 10% 25V (C212MK2) | R607 | 1-216-067-00 | METAL CHIP | 5.6K 5% 1/10W (C212MK2) |
| | | < CONNECTOR > | | | R608 | 1-216-089-00 | METAL GLAZE | 47K 5% 1/10W (C212MK2) |
| CN600 | 1-564-788-11 | PIN, CONNECTOR 8P (C212MK2) | | | R609 | 1-216-093-00 | METAL CHIP | 68K 5% 1/10W (C212MK2) |
| | | < DIODE > | | | R610 | 1-216-065-00 | METAL CHIP | 4.7K 5% 1/10W (C212MK2) |
| D600 | 8-719-050-86 | DIODE 1SS133T-91S (C212MK2) | | | R611 | 1-216-097-00 | METAL CHIP | 100K 5% 1/10W (C212MK2) |
| | | < IC > | | | R612 | 1-216-041-00 | METAL CHIP | 470 5% 1/10W (C212MK2) |
| IC600 | 8-759-998-24 | IC TDA1579T (C212MK2) | | | R613 | 1-216-117-00 | METAL CHIP | 680K 5% 1/10W (C212MK2) |
| | | | | | R614 | 1-216-105-00 | METAL CHIP | 220K 5% 1/10W (C212MK2) |
| | | | | | | | < VARIABLE RESISTOR > | |
| | | | | | RV600 | 1-241-035-11 | RES. ADJ, CARBON 470 (C212MK2) | |
| | | | | | | | ***** | |

KEY

| Ref. No. | Part No. | Description | Remark |
|----------|--------------|--|---------|
| | | KEY BOARD, COMPLETE ***** | |
| * | 3-389-673-01 | PLATE (M:LCD), LIGHT GUIDE | |
| * | 3-913-756-01 | HOLDER (LCD) | |
| * | 3-917-845-01 | REFLECTOR, SHEET | |
| * | 3-923-505-01 | SHEET, ELECTROSTATIC | |
| | | < CAPACITOR > | |
| C701 | 1-163-037-11 | CERAMIC CHIP 0.022uF | 10% 25V |
| C702 | 1-163-006-11 | CERAMIC CHIP 560PF | 10% 50V |
| C703 | 1-163-809-11 | CERAMIC CHIP 0.047uF | 10% 25V |
| | | < CONNECTOR > | |
| CNP701 | 1-764-423-11 | PIN, CONNECTOR 12P | |
| | | < DIODE > | |
| D719 | 8-719-422-43 | DIODE MA8051-H | |
| | | < IC > | |
| IC701 | 8-759-289-80 | IC LC75821W-DS | |
| | | < LIQUID CRYSTAL DISPLAY > | |
| LCD701 | 1-810-570-11 | DISPLAY PANEL, LIQUID CRYSTAL | |
| | | < SWITCH > | |
| LSW702 | 1-762-141-11 | SWITCH, KEY BOARD (WITH LED) (CD) (AMBER) | |
| LSW702 | 1-762-142-11 | SWITCH, KEY BOARD (WITH LED) (CD) (GREEN) | |
| LSW703 | 1-762-141-11 | SWITCH, KEY BOARD (WITH LED) (TAPE ◀▶) (AMBER) | |
| LSW703 | 1-762-142-11 | SWITCH, KEY BOARD (WITH LED) (TAPE ◀▶) (GREEN) | |
| LSW708 | 1-762-141-11 | SWITCH, KEY BOARD (WITH LED) (4/METAL) (AMBER) | |
| LSW708 | 1-762-142-11 | SWITCH, KEY BOARD (WITH LED) (4/METAL) (GREEN) | |
| LSW709 | 1-762-141-11 | SWITCH, KEY BOARD (WITH LED) (1/INTRO) (AMBER) | |
| LSW709 | 1-762-142-11 | SWITCH, KEY BOARD (WITH LED) (1/INTRO) (GREEN) | |
| LSW710 | 1-762-141-11 | SWITCH, KEY BOARD (WITH LED) (5/ATA) (AMBER) | |
| LSW710 | 1-762-142-11 | SWITCH, KEY BOARD (WITH LED) (5/ATA) (GREEN) | |
| LSW711 | 1-762-141-11 | SWITCH, KEY BOARD (WITH LED) (2/REPEAT) (AMBER) | |
| LSW711 | 1-762-142-11 | SWITCH, KEY BOARD (WITH LED) (2/REPEAT) (GREEN) | |
| LSW712 | 1-762-141-11 | SWITCH, KEY BOARD (WITH LED) (6/BL. SKIP) (AMBER) | |

| Ref. No. | Part No. | Description | Remark |
|----------|--------------|---|--------|
| LSW712 | 1-762-142-11 | SWITCH, KEY BOARD (WITH LED) (6/BL. SKIP) (GREEN) | |
| LSW713 | 1-762-141-11 | SWITCH, KEY BOARD (WITH LED) (3/SHUF) (AMBER) | |
| LSW713 | 1-762-142-11 | SWITCH, KEY BOARD (WITH LED) (3/SHUF) (GREEN) | |
| LSW714 | 1-762-141-11 | SWITCH, KEY BOARD (WITH LED) (▲) (AMBER) | |
| LSW714 | 1-762-142-11 | SWITCH, KEY BOARD (WITH LED) (▲) (GREEN) | |
| LSW715 | 1-762-141-11 | SWITCH, KEY BOARD (WITH LED) (MW/LW) (C210MK2/C213MK2:AMBER) | |
| LSW715 | 1-762-142-11 | SWITCH, KEY BOARD (WITH LED) (MW/LW) (C210MK2:GREEN) | |
| LSW715 | 1-762-141-11 | SWITCH, KEY BOARD (WITH LED) (SDK) (C212MK2:AMBER) | |
| LSW715 | 1-762-142-11 | SWITCH, KEY BOARD (WITH LED) (SDK) (C212MK2:GREEN) | |
| LSW716 | 1-762-141-11 | SWITCH, KEY BOARD (WITH LED) (FM) (C210MK2/C213MK2:AMBER) | |
| LSW716 | 1-762-142-11 | SWITCH, KEY BOARD (WITH LED) (FM) (C210MK2:GREEN) | |
| LSW716 | 1-762-141-11 | SWITCH, KEY BOARD (WITH LED) (TUNER) (C212MK2:AMBER) | |
| LSW716 | 1-762-142-11 | SWITCH, KEY BOARD (WITH LED) (TUNER) (C212MK2:GREEN) | |
| LSW717 | 1-762-141-11 | SWITCH, KEY BOARD (WITH LED) (- (PRESET DISC)) (AMBER) | |
| LSW717 | 1-762-142-11 | SWITCH, KEY BOARD (WITH LED) (- (PRESET DISC)) (GREEN) | |
| LSW718 | 1-762-141-11 | SWITCH, KEY BOARD (WITH LED) (- ▶ (SEEK AMS)) (AMBER) | |
| LSW718 | 1-762-142-11 | SWITCH, KEY BOARD (WITH LED) (+ ▶ (SEEK AMS)) (GREEN) | |
| LSW719 | 1-762-141-11 | SWITCH, KEY BOARD (WITH LED) (- ◀ (SEEK AMS)) (AMBER) | |
| LSW719 | 1-762-142-11 | SWITCH, KEY BOARD (WITH LED) (- ◀ (SEEK AMS)) (GREEN) | |
| LSW720 | 1-762-141-11 | SWITCH, KEY BOARD (WITH LED) (- (PRESET/DISC)) (AMBER) | |
| LSW720 | 1-762-142-11 | SWITCH, KEY BOARD (WITH LED) (- (PRESET/DISC)) (GREEN) | |
| LSW721 | 1-762-141-11 | SWITCH, KEY BOARD (WITH LED) (+) (AMBER) | |
| LSW721 | 1-762-142-11 | SWITCH, KEY BOARD (WITH LED) (+) (GREEN) | |
| LSW722 | 1-762-141-11 | SWITCH, KEY BOARD (WITH LED) (SEL) (AMBER) | |
| LSW722 | 1-762-142-11 | SWITCH, KEY BOARD (WITH LED) (SEL) (GREEN) | |
| LSW723 | 1-762-141-11 | SWITCH, KEY BOARD (WITH LED) (-) (AMBER) | |
| LSW723 | 1-762-142-11 | SWITCH, KEY BOARD (WITH LED) (-) (GREEN) | |
| | | < PILOT LAMP > | |
| PL701 | 1-517-165-21 | LAMP, PILOT (AMBER) | |
| PL701 | 1-517-166-21 | LAMP, PILOT (GREEN) | |

| Ref. No. | Part No. | Description | Remark |
|--------------|--------------|--------------------------|---------------|
| PL702 | 1-517-165-21 | LAMP, PILOT (AMBER) | |
| PL702 | 1-517-166-21 | LAMP, PILOT (GREEN) | |
| < RESISTOR > | | | |
| R701-703 | | | |
| | 1-216-045-00 | METAL CHIP | 680 5% 1/10W |
| R704 | 1-216-049-00 | METAL CHIP | 1K 5% 1/10W |
| R705 | 1-216-053-00 | METAL CHIP | 1.5K 5% 1/10W |
| R706 | 1-216-053-00 | METAL CHIP | 1.5K 5% 1/10W |
| R707 | 1-216-057-00 | METAL CHIP | 2.2K 5% 1/10W |
| R708 | | | |
| R708 | 1-216-061-00 | METAL CHIP | 3.3K 5% 1/10W |
| R709 | 1-216-065-00 | METAL CHIP | 4.7K 5% 1/10W |
| R710 | 1-216-069-00 | METAL CHIP | 6.8K 5% 1/10W |
| R711 | 1-216-073-00 | METAL CHIP | 10K 5% 1/10W |
| R712 | 1-216-077-00 | METAL CHIP | 15K 5% 1/10W |
| R713-715 | | | |
| | 1-216-045-00 | METAL CHIP | 680 5% 1/10W |
| R716 | 1-216-049-00 | METAL CHIP | 1K 5% 1/10W |
| R717 | 1-216-053-00 | METAL CHIP | 1.5K 5% 1/10W |
| R718 | 1-216-053-00 | METAL CHIP | 1.5K 5% 1/10W |
| R719 | 1-216-057-00 | METAL CHIP | 2.2K 5% 1/10W |
| R720 | | | |
| R720 | 1-216-061-00 | METAL CHIP | 3.3K 5% 1/10W |
| R721 | 1-216-065-00 | METAL CHIP | 4.7K 5% 1/10W |
| R722 | 1-216-069-00 | METAL CHIP | 6.8K 5% 1/10W |
| R723 | 1-216-073-00 | METAL CHIP | 10K 5% 1/10W |
| R724 | 1-216-033-00 | METAL CHIP | 220 5% 1/10W |
| R725 | | | |
| R725 | 1-216-037-00 | METAL CHIP | 330 5% 1/10W |
| R726 | 1-216-027-00 | METAL CHIP | 120 5% 1/10W |
| R727-729 | | | |
| | 1-216-033-00 | METAL CHIP | 220 5% 1/10W |
| R730 | 1-216-041-00 | METAL CHIP | 470 5% 1/10W |
| R731 | 1-216-091-00 | METAL CHIP | 56K 5% 1/10W |
| R732-734 | | | |
| | 1-216-049-00 | METAL CHIP | 1K 5% 1/10W |
| < SWITCH > | | | |
| SW701 | 1-692-037-31 | SWITCH, KEY BOARD (OFF) | |
| SW704 | 1-692-037-31 | SWITCH, KEY BOARD (SENS) | |
| SW705 | 1-692-037-31 | SWITCH, KEY BOARD (BTM) | |
| SW706 | 1-692-037-31 | SWITCH, KEY BOARD (DSPL) | |
| SW724 | 1-692-037-31 | SWITCH, KEY BOARD (MUTE) | |
| SW725 | 1-692-037-31 | SWITCH, KEY BOARD (LOUD) | |

| Ref. No. | Part No. | Description | Remark |
|--------------------------|--------------|--------------------------------|-----------------|
| * | A 3298-813-A | MAIN BOARD, COMPLETE (C213MK2) | |
| * | A-3298-815-A | MAIN BOARD, COMPLETE (C212MK2) | |
| * | A-3298-818-A | MAIN BOARD, COMPLETE (C210MK2) | |
| ***** | | | |
| 3-921-320-01 HOLDER (IC) | | | |
| | 7-621-773-95 | SCREW +PTT 2.6X6 (S) | |
| < CAPACITOR > | | | |
| C1 | 1-163-235-11 | CERAMIC CHIP | 22PF 5% 50V |
| C2 | 1-124-584-00 | ELECT | 100uF 20% 10V |
| C3 | 1-163-037-11 | CERAMIC CHIP | 0.022uF 10% 25V |
| C4 | 1-124-584-00 | ELECT | 100uF 20% 10V |
| C5 | 1-163-037-11 | CERAMIC CHIP | 0.022uF 10% 25V |
| C6 | | | |
| C6 | 1-126-923-11 | ELECT | 220uF 20% 10V |
| C7 | 1-163-037-11 | CERAMIC CHIP | 0.022uF 10% 25V |
| C8 | 1-163-117-00 | CERAMIC CHIP | 100PF 5% 50V |
| C9 | 1-163-809-11 | CERAMIC CHIP | 0.047uF 10% 25V |
| C10 | 1-164-232-11 | CERAMIC CHIP | 0.01uF 50V |
| C11-14 | | | |
| | 1-163-117-00 | CERAMIC CHIP | 100PF 5% 50V |
| C15 | 1-126-157-11 | ELECT | 10uF 20% 16V |
| C16 | 1-164-004-11 | CERAMIC CHIP | 0.1uF 10% 25V |
| C17 | 1-163-097-00 | CERAMIC CHIP | 15PF 5% 50V |
| C18 | 1-163-097-00 | CERAMIC CHIP | 15PF 5% 50V |
| C19 | | | |
| C19 | 1-136-169-00 | FILM | 0.22uF 5% 50V |
| C20 | 1-130-479-00 | MYLAR | 0.0047uF 5% 50V |
| C21 | 1-164-222-11 | CERAMIC CHIP | 0.22uF 25V |
| C22 | 1-124-584-00 | ELECT | 100uF 20% 10V |
| C23 | 1-164-222-11 | CERAMIC CHIP | 0.22uF 25V |
| C24 | | | |
| C24 | 1-124-234-00 | ELECT | 22uF 20% 16V |
| C25 | 1-126-288-11 | ELECT | 4.7uF 20% 16V |
| C26 | 1-124-584-00 | ELECT | 100uF 20% 10V |
| C27 | 1-163-038-00 | CERAMIC CHIP | 0.1uF 25V |
| C28 | 1-124-229-00 | ELECT | 33uF 20% 10V |
| C29 | | | |
| C29 | 1-163-005-11 | CERAMIC CHIP | 470PF 10% 50V |
| C30 | 1-124-589-11 | ELECT | 47uF 20% 16V |
| C31 | 1-164-004-11 | CERAMIC CHIP | 0.1uF 10% 25V |
| C32 | 1-163-081-00 | CERAMIC CHIP | 0.22uF 25V |
| C33 | 1-163-037-11 | CERAMIC CHIP | 0.022uF 10% 25V |
| C34 | | | |
| C34 | 1-164-004-11 | CERAMIC CHIP | 0.1uF 10% 25V |
| C36 | 1-163-081-00 | CERAMIC CHIP | 0.22uF 25V |
| C37-40 | | | |
| | 1-163-251-11 | CERAMIC CHIP | 100PF 5% 50V |
| C50 | 1-163-037-11 | CERAMIC CHIP | 0.022uF 10% 25V |
| C51 | 1-163-037-11 | CERAMIC CHIP | 0.022uF 10% 25V |
| C52 | | | |
| C52 | 1-164-232-11 | CERAMIC CHIP | 0.01uF 50V |
| C53 | 1-163-009-11 | CERAMIC CHIP | 0.001uF 10% 50V |
| C55 | 1-126-157-11 | ELECT | 10uF 20% 16V |
| C101 | 1-163-037-11 | CERAMIC CHIP | 0.022uF 10% 25V |

MAIN

| Ref. No. | Part No. | Description | Remark |
|----------|--------------|--------------|------------------|
| C102 | 1-124-463-00 | ELECT | 0.1uF 20% 50V |
| C103 | 1-163-023-00 | CERAMIC CHIP | 0.015uF 5% 50V |
| C104 | 1-124-257-00 | ELECT | 2.2uF 20% 50V |
| C105 | 1-163-809-11 | CERAMIC CHIP | 0.047uF 10% 25V |
| C106 | 1-163-017-00 | CERAMIC CHIP | 0.0047uF 5% 50V |
| C107 | 1-126-288-11 | ELECT | 4.7uF 20% 16V |
| C108 | 1-163-019-00 | CERAMIC CHIP | 0.0068uF 10% 50V |
| C109 | 1-164-489-11 | CERAMIC CHIP | 0.22uF 10% 16V |
| C110 | 1-163-117-00 | CERAMIC CHIP | 100PF 5% 50V |
| C111-113 | 1-126-288-11 | ELECT | 4.7uF 20% 16V |
| C114 | 1-163-125-00 | CERAMIC CHIP | 220PF 5% 50V |
| C115 | 1-163-117-00 | CERAMIC CHIP | 100PF 5% 50V |
| C116 | 1-163-125-00 | CERAMIC CHIP | 220PF 5% 50V |
| C117 | 1-163-117-00 | CERAMIC CHIP | 100PF 5% 50V |
| C122 | 1-124-257-00 | ELECT | 2.2uF 20% 50V |
| C123 | 1-163-037-11 | CERAMIC CHIP | 0.022uF 10% 25V |
| C150 | 1-124-584-00 | ELECT | 100uF 20% 10V |
| C151 | 1-164-232-11 | CERAMIC CHIP | 0.01uF 50V |
| C201 | 1-163-037-11 | CERAMIC CHIP | 0.022uF 10% 25V |
| C202 | 1-124-463-00 | ELECT | 0.1uF 20% 50V |
| C203 | 1-163-023-00 | CERAMIC CHIP | 0.015uF 5% 50V |
| C204 | 1-124-257-00 | ELECT | 2.2uF 20% 50V |
| C205 | 1-163-809-11 | CERAMIC CHIP | 0.047uF 10% 25V |
| C206 | 1-163-017-00 | CERAMIC CHIP | 0.0047uF 5% 50V |
| C207 | 1-126-288-11 | ELECT | 4.7uF 20% 16V |
| C208 | 1-163-019-00 | CERAMIC CHIP | 0.0068uF 10% 50V |
| C209 | 1-164-489-11 | CERAMIC CHIP | 0.22uF 10% 16V |
| C210 | 1-163-117-00 | CERAMIC CHIP | 100PF 5% 50V |
| C211-213 | 1-126-288-11 | ELECT | 4.7uF 20% 16V |
| C214 | 1-163-125-00 | CERAMIC CHIP | 220PF 5% 50V |
| C215 | 1-163-117-00 | CERAMIC CHIP | 100PF 5% 50V |
| C216 | 1-163-125-00 | CERAMIC CHIP | 220PF 5% 50V |
| C217 | 1-163-117-00 | CERAMIC CHIP | 100PF 5% 50V |
| C222 | 1-124-257-00 | ELECT | 2.2uF 20% 50V |
| C223 | 1-163-037-11 | CERAMIC CHIP | 0.022uF 10% 25V |
| C250 | 1-124-584-00 | ELECT | 100uF 20% 10V |
| C251 | 1-164-232-11 | CERAMIC CHIP | 0.01uF 50V |
| C301 | 1-164-489-11 | CERAMIC CHIP | 0.22uF 10% 16V |
| C302 | 1-126-157-11 | ELECT | 10uF 20% 16V |
| C304 | 1-163-229-11 | CERAMIC CHIP | 12PF 5% 50V |
| C305 | 1-163-229-11 | CERAMIC CHIP | 12PF 5% 50V |
| C308 | 1-126-153-11 | ELECT | 22uF 20% 6.3V |
| C309 | 1-125-701-11 | DOUBLE LAYER | 0.047F 5.5V |
| C310 | 1-163-038-00 | CERAMIC CHIP | 0.1uF 25V |
| C312 | 1-163-117-00 | CERAMIC CHIP | 100PF 5% 50V |
| C313 | 1-126-288-11 | ELECT | 4.7uF 20% 16V |
| C314 | 1-163-038-00 | CERAMIC CHIP | 0.1uF 25V |

| Ref. No. | Part No. | Description | Remark |
|----------|--------------|--------------|---------------------------|
| C315 | 1-126-154-11 | ELECT | 47uF 20% 6.3V |
| C317 | 1-164-222-11 | CERAMIC CHIP | 0.22uF 25V |
| C318 | 1-163-037-11 | CERAMIC CHIP | 0.022uF 10% 25V |
| C319 | 1-163-037-11 | CERAMIC CHIP | 0.022uF 10% 25V |
| C405 | 1-163-038-00 | CERAMIC CHIP | 0.1uF 25V |
| C406 | 1-163-038-00 | CERAMIC CHIP | 0.1uF 25V |
| C407 | 1-126-157-11 | ELECT | 10uF 20% 16V |
| C408 | 1-164-222-11 | CERAMIC CHIP | 0.22uF 25V |
| C409 | 1-124-234-00 | ELECT | 22uF 20% 16V |
| C410 | 1-126-941-11 | ELECT | 470uF 20% 25V |
| C450 | 1-163-038-00 | CERAMIC CHIP | 0.1uF 25V |
| C451 | 1-124-584-00 | ELECT | 100uF 20% 10V |
| C452 | 1-126-157-11 | ELECT | 10uF 20% 16V |
| C453 | 1-163-009-11 | CERAMIC CHIP | 0.001uF 10% 50V |
| C454 | 1-126-301-11 | ELECT | 1uF 20% 50V |
| C455 | 1-126-157-11 | ELECT | 10uF 20% 16V |
| C456 | 1-124-464-11 | ELECT | 0.22uF 20% 50V |
| C457 | 1-126-157-11 | ELECT | 10uF 20% 16V |
| C494 | 1-163-009-11 | CERAMIC CHIP | 0.001uF 10% 50V |
| C495 | 1-163-037-11 | CERAMIC CHIP | 0.022uF 10% 25V |
| C501 | 1-163-059-00 | CERAMIC CHIP | 0.01uF 10% 50V |
| C502 | 1-124-229-00 | ELECT | 33uF 20% 10V |
| C503 | 1-124-229-00 | ELECT | 33uF 20% 10V |
| C504 | 1-126-157-11 | ELECT | 10uF 20% 16V |
| C505 | 1-124-234-00 | ELECT | 22uF 20% 16V |
| C506 | 1-126-157-11 | ELECT | 10uF 20% 16V |
| C509 | 1-163-117-00 | CERAMIC CHIP | 100PF 5% 50V |
| C510 | 1-163-037-11 | CERAMIC CHIP | 0.022uF 10% 25V |
| C511 | 1-126-157-11 | ELECT | 10uF 20% 16V |
| C599 | 1-127-558-11 | ELECT | 10uF 20% 10V (C212MK2) |
| C901 | 1-126-936-11 | ELECT | 3300uF 20% 16V |
| C902 | 1-136-169-00 | FILM | 0.22uF 5% 50V |
| C903 | 1-163-109-00 | CERAMIC CHIP | 47PF 5% 50V |
| C904-907 | 1-163-009-11 | CERAMIC CHIP | 0.001uF 10% 50V |
| C908 | 1-126-153-11 | ELECT | 22uF 20% 6.3V |
| C909-916 | 1-136-165-00 | FILM | 0.1uF 5% 50V |
| C917 | 1-163-009-11 | CERAMIC CHIP | 0.001uF 10% 50V |
| C918 | 1-126-157-11 | ELECT | 10uF 20% 16V |
| C919 | 1-163-009-11 | CERAMIC CHIP | 0.001uF 10% 50V |
| C920 | 1-163-205-00 | CERAMIC CHIP | 0.001uF 5% 50V |
| C921 | 1-163-205-00 | CERAMIC CHIP | 0.001uF 5% 50V |
| C922 | 1-163-009-11 | CERAMIC CHIP | 0.001uF 10% 50V |
| C923 | 1-163-205-00 | CERAMIC CHIP | 0.001uF 5% 50V |
| C924-926 | 1-163-009-11 | CERAMIC CHIP | 0.001uF 10% 50V |
| C927 | 1-164-489-11 | CERAMIC CHIP | 0.22uF 10% 16V |

| Ref. No. | Part No. | Description | Remark |
|-------------------|--------------|---------------------------------------|---------|
| C928 | 1-164-489-11 | CERAMIC CHIP 0.22uF | 10% 16V |
| < CONNECTOR > | | | |
| CN301 | 1-580-907-31 | PLUG, CONNECTOR (BUS CONTROL IN) | |
| CN401 | 1-766-260-11 | CONNECTOR, FFG/FPC (ZIF) 7P | |
| * CN402 | 1-506-995-11 | PIN, CONNECTOR (PC BOARD) 13P | |
| CN901 | 1-764-426-11 | PLUG, CONNECTOR 15P | |
| CN903 | 1-764-422-11 | PLUG, CONNECTOR 12P | |
| CN904 | 1-764-697-11 | JACK, PIN 4P (LINE OUT, BUS AUDIO IN) | |
| < DISCHARGE GAP > | | | |
| CP1 | 1-519-504-11 | GAP, DISCHARGE | |
| < DIODE > | | | |
| D1 | 8-719-040-04 | DIODE MA721WK-(TX) | |
| D2 | 8-719-110-14 | DIODE RD9.1ES-B3 (C210MK2/C212MK2) | |
| D2 | 8-719-921-75 | DIODE MTZN-10B (C213MK2) | |
| D3 | 8-719-109-89 | DIODE RD5.6ESB2 | |
| D4 | 8-719-988-62 | DIODE 1SS355 | |
| D5 | 8-719-991-33 | DIODE 1SS133T-77 | |
| D6 | 8-719-109-72 | DIODE RD3.9ES-B2 | |
| D301 | 8-719-921-54 | DIODE MTZJ-6.2B | |
| D302 | 8-719-921-54 | DIODE MTZJ-6.2B | |
| D303 | 8-719-921-54 | DIODE MTZJ-6.2B | |
| D304 | 8-719-109-97 | DIODE RD6.8ES-B2 | |
| D305 | 8-719-921-63 | DIODE MTZJ-7.5B | |
| D306 | 8-719-801-78 | DIODE 1SS184 | |
| D307 | 8-719-400-20 | DIODE MA152WA | |
| D308 | 8-719-400-20 | DIODE MA152WA | |
| D309 | 8-719-988-62 | DIODE 1SS355 | |
| D311 | 8-719-921-54 | DIODE MTZJ-6.2B | |
| D312 | 8-719-921-54 | DIODE MTZJ-6.2B | |
| D313 | 8-719-921-54 | DIODE MTZJ-6.2B | |
| D314 | 8-719-921-54 | DIODE MTZJ-6.2B | |
| D315 | 8-719-923-92 | DIODE MTZJ-T-77-16B | |
| D316 | 8-719-921-54 | DIODE MTZJ-6.2B | |
| D317 | 8-719-921-54 | DIODE MTZJ-6.2B | |
| D318 | 8-719-921-54 | DIODE MTZJ-6.2B | |
| D319 | 8-719-921-54 | DIODE MTZJ-6.2B | |
| D320 | 8-719-105-99 | DIODE RD6.2M-B1 | |
| D402 | 8-719-110-14 | DIODE RD9.1ES-B3 | |
| D403 | 8-719-200-82 | DIODE 11ES2 | |
| D404 | 8-719-991-33 | DIODE 1SS133T-77 | |
| D501 | 8-719-921-54 | DIODE MTZJ-6.2B | |
| D510 | 8-719-991-33 | DIODE 1SS133T-77 | |
| D901 | 8-719-049-38 | DIODE 1N5404TU | |

| Ref. No. | Part No. | Description | Remark |
|---------------------|--------------|------------------------|------------|
| < TERMINAL EARTH > | | | |
| * ET1 | 1-537-738-21 | TERMINAL, EARTH | |
| * ET2 | 1-537-738-21 | TERMINAL, EARTH | |
| < FERRITE BEAD > | | | |
| FB501 | 1-414-233-21 | INDUCTOR, FERRITE BEAD | |
| < IC > | | | |
| IC1 | 8-759-823-81 | IC IC7216M | |
| IC2 | 8-759-988-33 | IC BA3430FS | |
| IC101 | 8-759-909-71 | IC BA4558F | |
| IC201 | 8-759-909-71 | IC BA4558F | |
| IC301 | 8-759-345-92 | IC uPD75518GF-283-389 | |
| IC303 | 8-759-096-16 | IC MM1175XFF | |
| IC304 | 8-759-167-83 | IC PST600EMT-T1 | |
| IC402 | 8-759-823-87 | IC LB1638M | |
| IC403 | 8-752-063-44 | IC CXA1646Q | |
| IC501 | 8-759-182-75 | IC BA3910B-V2 | |
| IC901 | 8-759-279-87 | IC HA13151A | |
| < JACK > | | | |
| J11 | 1-764-808-11 | JACK (ANTENNA) | |
| J301 | 1-566-822-41 | JACK (REMOTE IN) | |
| < JUMPER RESISTOR > | | | |
| JR1 | 1-216-295-00 | METAL CHIP | 0 5% 1/10W |
| JR2 | 1-216-295-00 | METAL CHIP | 0 5% 1/10W |
| JR3-5 | 1-216-296-00 | CONDUCTOR, CHIP | (3216) |
| JR7 | 1-216-296-00 | CONDUCTOR, CHIP | (3216) |
| JR8-11 | 1-216-295-00 | METAL CHIP | 0 5% 1/10W |
| JR12-15 | 1-216-296-00 | CONDUCTOR, CHIP | (3216) |
| JR16 | 1-216-295-00 | METAL CHIP | 0 5% 1/10W |
| JR17 | 1-216-295-00 | METAL CHIP | 0 5% 1/10W |
| JR19 | 1-216-295-00 | METAL CHIP | 0 5% 1/10W |
| JR20 | 1-216-295-00 | METAL CHIP | 0 5% 1/10W |
| JR21 | 1-216-296-00 | CONDUCTOR, CHIP | (3216) |
| JR23 | 1-216-295-00 | METAL CHIP | 0 5% 1/10W |
| JR24 | 1-216-295-00 | METAL CHIP | 0 5% 1/10W |
| JR25-30 | 1-216-296-00 | CONDUCTOR, CHIP | (3216) |
| JR32-34 | 1-216-296-00 | CONDUCTOR, CHIP | (3216) |
| JR36-42 | 1-216-296-00 | CONDUCTOR, CHIP | (3216) |
| JR44 | 1-216-296-00 | CONDUCTOR, CHIP | (3216) |

MAIN

| Ref. No. | Part No. | Description | Remark |
|----------------|--------------|-----------------|-------------|
| JR46 | 1-216-296-00 | CONDUCTOR, CHIP | (3216) |
| JR48 | 1-216-295-00 | METAL CHIP | 0 5% 1/10W |
| JR49 | 1-216-296-00 | CONDUCTOR, CHIP | (3216) |
| JR50 | 1-216-296-00 | CONDUCTOR, CHIP | (3216) |
| JR51 | 1-216-295-00 | METAL CHIP | 0 5% 1/10W |
| JR52 | 1-216-296-00 | CONDUCTOR, CHIP | (3216) |
| JR53 | 1-216-296-00 | CONDUCTOR, CHIP | (3216) |
| JR54 | 1-216-295-00 | METAL CHIP | 0 5% 1/10W |
| JR58 | 1-216-296-00 | CONDUCTOR, CHIP | (3216) |
| JR61 | 1-216-296-00 | CONDUCTOR, CHIP | (3216) |
| JR64 | 1-216-295-00 | METAL CHIP | 0 5% 1/10W |
| JR71 | 1-216-296-00 | CONDUCTOR, CHIP | (3216) |
| JR75 | 1-216-296-00 | CONDUCTOR, CHIP | (3216) |
| JR80 | 1-216-296-00 | CONDUCTOR, CHIP | (3216) |
| JR82 | 1-216-296-00 | CONDUCTOR, CHIP | (3216) |
| JR155 | 1-216-296-00 | CONDUCTOR, CHIP | (3216) |
| JR170 | 1-216-295-00 | METAL CHIP | 0 5% 1/10W |
| JR180 | 1-216-296-00 | CONDUCTOR, CHIP | (3216) |
| JR181 | 1-216-296-00 | CONDUCTOR, CHIP | (3216) |
| < COIL > | | | |
| L1 | 1-410-509-11 | INDUCTOR | 10uH |
| L301 | 1-410-509-11 | INDUCTOR | 10uH |
| L600 | 1-409-748-11 | COIL (FILTER) | (C212MK2) |
| < TRANSISTOR > | | | |
| Q1 | 8-729-230-49 | TRANSISTOR | 2SC2712-YG |
| Q2 | 8-729-424-08 | TRANSISTOR | UN2111 |
| Q3 | 8-729-230-49 | TRANSISTOR | 2SC2712-YG |
| Q4 | 8-729-021-94 | TRANSISTOR | 2SK1657-T1B |
| Q5 | 8-729-230-49 | TRANSISTOR | 2SC2712-YG |
| Q6 | 8-729-424-08 | TRANSISTOR | UN2111 |
| Q7 | 8-729-424-59 | TRANSISTOR | UN2212 |
| Q8 | 8-729-421-22 | TRANSISTOR | UN2211 |
| Q9 | 8-729-230-49 | TRANSISTOR | 2SC2712-YG |
| Q10 | 8-729-421-22 | TRANSISTOR | UN2211 |
| Q11 | 8-729-421-22 | TRANSISTOR | UN2211 |
| Q12 | 8-729-901-98 | TRANSISTOR | 2SA1036K-R |
| Q13 | 8-729-901-98 | TRANSISTOR | 2SA1036K-R |
| Q101 | 8-729-920-21 | TRANSISTOR | DTC314TKH04 |
| Q102 | 8-729-920-21 | TRANSISTOR | DTC314TKH04 |
| Q201 | 8-729-920-21 | TRANSISTOR | DTC314TKH04 |
| Q202 | 8-729-920-21 | TRANSISTOR | DTC314TKH04 |
| Q301 | 8-729-230-49 | TRANSISTOR | 2SC2712-YG |
| Q302 | 8-729-421-22 | TRANSISTOR | UN2211 |
| Q303 | 8-729-424-08 | TRANSISTOR | UN2111 |
| Q304 | 8-729-424-08 | TRANSISTOR | UN2111 |
| Q306 | 8-729-421-22 | TRANSISTOR | UN2211 |
| Q401 | 8-729-807-12 | TRANSISTOR | 2SD1802-S |

| Ref. No. | Part No. | Description | Remark |
|-------------------|--------------|-------------|---------------|
| Q402 | 8-729-424-08 | TRANSISTOR | UN2111 |
| Q403 | 8-729-421-22 | TRANSISTOR | UN2211 |
| Q404 | 8-729-106-60 | TRANSISTOR | 2SB1115A-YQ |
| Q405 | 8-729-421-22 | TRANSISTOR | UN2211 |
| Q505 | 8-729-421-22 | TRANSISTOR | UN2211 |
| < RESISTOR > | | | |
| R1 | 1-216-198-00 | METAL GLAZE | 1K 5% 1/8W |
| R2 | 1-249-423-11 | CARBON | 3.3K 5% 1/4W |
| R3 | 1-216-150-00 | METAL GLAZE | 10 5% 1/8W |
| R4 | 1-216-150-00 | METAL GLAZE | 10 5% 1/8W |
| R5 | 1-216-061-00 | METAL CHIP | 3.3K 5% 1/10W |
| R6 | 1-216-073-00 | METAL CHIP | 10K 5% 1/10W |
| R8 | 1-216-037-00 | METAL CHIP | 330 5% 1/10W |
| R9 | 1-216-061-00 | METAL CHIP | 3.3K 5% 1/10W |
| R10 | 1-216-057-00 | METAL CHIP | 2.2K 5% 1/10W |
| R11 | 1-216-061-00 | METAL CHIP | 3.3K 5% 1/10W |
| R12 | 1-216-049-00 | METAL CHIP | 1K 5% 1/10W |
| R13 | 1-216-049-00 | METAL CHIP | 1K 5% 1/10W |
| R14 | 1-249-429-11 | CARBON | 10K 5% 1/4W |
| R15 | 1-216-057-00 | METAL CHIP | 2.2K 5% 1/10W |
| R16 | 1-216-017-00 | METAL GLAZE | 47 5% 1/10W |
| R17 | 1-216-045-00 | METAL CHIP | 680 5% 1/10W |
| R18 | 1-216-057-00 | METAL CHIP | 2.2K 5% 1/10W |
| R19 | 1-249-422-11 | CARBON | 2.7K 5% 1/4W |
| R19 | 1-249-432-11 | CARBON | 18K 5% 1/4W |
| (C210MK2/C213MK2) | | | |
| R20 | 1-216-129-00 | METAL CHIP | 2.2M 5% 1/10W |
| R21 | 1-216-009-00 | METAL CHIP | 22 5% 1/10W |
| R22 | 1-216-073-00 | METAL CHIP | 10K 5% 1/10W |
| R23 | 1-216-196-00 | METAL GLAZE | 820 5% 1/8W |
| R24-27 | 1-249-406-11 | CARBON | 120 5% 1/4W |
| R28 | 1-216-081-00 | METAL CHIP | 22K 5% 1/10W |
| R29 | 1-216-081-00 | METAL CHIP | 22K 5% 1/10W |
| R30 | 1-216-230-00 | METAL GLAZE | 22K 5% 1/8W |
| R31 | 1-216-129-00 | METAL CHIP | 2.2M 5% 1/10W |
| R51 | 1-216-073-00 | METAL CHIP | 10K 5% 1/10W |
| R106 | 1-216-077-00 | METAL CHIP | 15K 5% 1/10W |
| R107 | 1-216-222-00 | METAL GLAZE | 10K 5% 1/8W |
| (C210MK2/C213MK2) | | | |
| R107 | 1-216-216-00 | METAL GLAZE | 5.6K 5% 1/8W |
| (C212MK2) | | | |
| R108 | 1-216-049-00 | METAL CHIP | 1K 5% 1/10W |
| R109 | 1-216-049-00 | METAL CHIP | 1K 5% 1/10W |
| R110 | 1-216-081-00 | METAL CHIP | 22K 5% 1/10W |
| R111 | 1-216-081-00 | METAL CHIP | 22K 5% 1/10W |
| R114 | 1-249-428-11 | CARBON | 8.2K 5% 1/4W |
| R115 | 1-249-428-11 | CARBON | 8.2K 5% 1/4W |

| Ref. No. | Part No. | Description | | | Remark | Ref. No. | Part No. | Description | | | Remark |
|----------|--------------|-------------|------|----|----------------------------|----------|--------------|-------------|------|-------|----------------------------|
| R116 | 1-216-057-00 | METAL CHIP | 2.2K | 5% | 1/10W (C210MK2/C213MK2) | R309 | 1-216-097-00 | METAL CHIP | 100K | 5% | 1/10W |
| R116 | 1-216-069-00 | METAL CHIP | 6.8K | 5% | 1/10W (C212MK2) | R310 | 1-216-097-00 | METAL CHIP | 100K | 5% | 1/10W |
| R117 | 1-216-073-00 | METAL CHIP | 10K | 5% | 1/10W | R311 | 1-216-246-00 | METAL GLAZE | 100K | 5% | 1/8W |
| R118 | 1-216-109-00 | METAL CHIP | 330K | 5% | 1/10W | R312 | 1-216-246-00 | METAL GLAZE | 100K | 5% | 1/8W |
| R119 | 1-216-109-00 | METAL CHIP | 330K | 5% | 1/10W | R313 | 1-216-097-00 | METAL CHIP | 100K | 5% | 1/10W |
| R120 | 1-216-063-00 | METAL GLAZE | 3.9K | 5% | 1/10W | R314 | 1-216-246-00 | METAL GLAZE | 100K | 5% | 1/8W |
| R121 | 1-216-069-00 | METAL CHIP | 6.8K | 5% | 1/10W (C212MK2) | R315 | 1-216-097-00 | METAL CHIP | 100K | 5% | 1/10W |
| R123 | 1-216-075-00 | METAL CHIP | 12K | 5% | 1/10W | R318 | 1-216-025-00 | METAL CHIP | 100 | 5% | 1/10W |
| R124 | 1-216-224-00 | METAL GLAZE | 12K | 5% | 1/8W | R319 | 1-216-073-00 | METAL CHIP | 10K | 5% | 1/10W |
| R149 | 1-216-073-00 | METAL CHIP | 10K | 5% | 1/10W | R320 | 1-216-025-00 | METAL CHIP | 100 | 5% | 1/10W |
| R150 | 1-216-013-00 | METAL CHIP | 33 | 5% | 1/10W | R321 | 1-216-166-00 | METAL GLAZE | 47 | 5% | 1/8W |
| R151 | 1-216-109-00 | METAL CHIP | 330K | 5% | 1/10W | R322 | 1-249-429-11 | CARBON | 10K | 5% | 1/4W |
| R152 | 1-216-077-00 | METAL CHIP | 15K | 5% | 1/10W | R323 | 1-216-089-00 | METAL GLAZE | 47K | 5% | 1/10W |
| R206 | 1-216-077-00 | METAL CHIP | 15K | 5% | 1/10W | R324 | 1-216-079-00 | METAL CHIP | 18K | 5% | 1/10W |
| R207 | 1-216-073-00 | METAL CHIP | 10K | 5% | 1/10W (C210MK2/C213MK2) | R326 | 1-216-073-00 | METAL CHIP | 10K | 5% | 1/10W |
| R207 | 1-216-067-00 | METAL CHIP | 5.6K | 5% | 1/10W (C212MK2) | R327 | 1-216-073-00 | METAL CHIP | 10K | 5% | 1/10W |
| R208 | 1-216-049-00 | METAL CHIP | 1K | 5% | 1/10W | R328 | 1-216-097-00 | METAL CHIP | 100K | 5% | 1/10W |
| R209 | 1-216-049-00 | METAL CHIP | 1K | 5% | 1/10W | R329 | 1-216-097-00 | METAL CHIP | 100K | 5% | 1/10W |
| R210 | 1-216-081-00 | METAL CHIP | 22K | 5% | 1/10W | R330 | 1-208-806-11 | METAL CHIP | 10K | 0.50% | 1/10W |
| R211 | 1-216-081-00 | METAL CHIP | 22K | 5% | 1/10W | R331 | 1-208-806-11 | METAL CHIP | 10K | 0.50% | 1/10W |
| R214 | 1-249-428-11 | CARBON | 8.2K | 5% | 1/4W | R332 | 1-216-025-00 | METAL CHIP | 100 | 5% | 1/10W |
| R215 | 1-249-428-11 | CARBON | 8.2K | 5% | 1/4W | R333 | 1-247-807-11 | CARBON | 100 | 5% | 1/4W |
| R216 | 1-216-057-00 | METAL CHIP | 2.2K | 5% | 1/10W (C210MK2/C213MK2) | R334 | 1-249-441-11 | CARBON | 100K | 5% | 1/4W |
| R216 | 1-216-069-00 | METAL CHIP | 6.8K | 5% | 1/10W (C212MK2) | R335 | 1-216-246-00 | METAL GLAZE | 100K | 5% | 1/8W |
| R217 | 1-216-073-00 | METAL CHIP | 10K | 5% | 1/10W | R336 | 1-216-246-00 | METAL GLAZE | 100K | 5% | 1/8W |
| R218 | 1-216-109-00 | METAL CHIP | 330K | 5% | 1/10W | R337 | 1-216-093-00 | METAL CHIP | 68K | 5% | 1/10W (C213MK2) |
| R219 | 1-216-109-00 | METAL CHIP | 330K | 5% | 1/10W | R338 | 1-216-097-00 | METAL CHIP | 100K | 5% | 1/10W (C210MK2/C212MK2) |
| R220 | 1-216-063-00 | METAL GLAZE | 3.9K | 5% | 1/10W | R339 | 1-216-081-00 | METAL CHIP | 22K | 5% | 1/10W (C213MK2) |
| R221 | 1-216-069-00 | METAL CHIP | 6.8K | 5% | 1/10W (C212MK2) | R339 | 1-216-295-00 | METAL CHIP | 0 | 5% | 1/10W (C212MK2) |
| R223 | 1-216-075-00 | METAL CHIP | 12K | 5% | 1/10W | R340 | 1-216-097-00 | METAL CHIP | 100K | 5% | 1/10W (C210MK2/C212MK2) |
| R224 | 1-216-075-00 | METAL CHIP | 12K | 5% | 1/10W | R341 | 1-216-053-00 | METAL CHIP | 1.5K | 5% | 1/10W |
| R250 | 1-216-013-00 | METAL CHIP | 33 | 5% | 1/10W | R342 | 1-216-246-00 | METAL GLAZE | 100K | 5% | 1/8W |
| R251 | 1-216-109-00 | METAL CHIP | 330K | 5% | 1/10W | R343 | 1-216-077-00 | METAL CHIP | 15K | 5% | 1/10W |
| R252 | 1-216-077-00 | METAL CHIP | 15K | 5% | 1/10W | R344 | 1-216-081-00 | METAL CHIP | 22K | 5% | 1/10W |
| R300 | 1-216-097-00 | METAL CHIP | 100K | 5% | 1/10W | R346 | 1-216-220-00 | METAL GLAZE | 8.2K | 5% | 1/8W |
| R301 | 1-216-230-00 | METAL GLAZE | 22K | 5% | 1/8W | R347 | 1-216-073-00 | METAL CHIP | 10K | 5% | 1/10W |
| R302 | 1-216-246-00 | METAL GLAZE | 100K | 5% | 1/8W | R349 | 1-249-417-11 | CARBON | 1K | 5% | 1/4W |
| R303 | 1-216-206-00 | METAL GLAZE | 2.2K | 5% | 1/8W | R350 | 1-216-049-00 | METAL CHIP | 1K | 5% | 1/10W |
| R304-306 | 1-216-057-00 | METAL CHIP | 2.2K | 5% | 1/10W | R407 | 1-216-049-00 | METAL CHIP | 1K | 5% | 1/10W |
| R307 | 1-249-421-11 | CARBON | 2.2K | 5% | 1/4W | R408-411 | 1-216-001-00 | METAL CHIP | 10 | 5% | 1/10W |
| R308 | 1-249-421-11 | CARBON | 2.2K | 5% | 1/4W | R412 | 1-216-073-00 | METAL CHIP | 10K | 5% | 1/10W |
| | | | | | | R413 | 1-216-065-00 | METAL CHIP | 4.7K | 5% | 1/10W |
| | | | | | | R450 | 1-216-067-00 | METAL CHIP | 5.6K | 5% | 1/10W |
| | | | | | | R451 | 1-216-097-00 | METAL CHIP | 100K | 5% | 1/10W |

MAIN

| Ref. No. | Part No. | Description | Remark |
|----------|--------------|--|---------------|
| R452 | 1-249-421-11 | CARBON | 2.2K 5% 1/4W |
| R453 | 1-249-421-11 | CARBON | 2.2K 5% 1/4W |
| R455 | 1-216-055-00 | METAL CHIP | 1.8K 5% 1/10W |
| R504 | 1-216-073-00 | METAL CHIP | 18K 5% 1/10W |
| R505 | 1-216-206-00 | METAL GLAZE | 2.2K 5% 1/8W |
| R506 | 1-249-408-11 | CARBON | 180 5% 1/4W |
| R507 | 1-216-174-00 | METAL GLAZE | 100 5% 1/8W |
| R508 | 1-249-408-11 | CARBON | 180 5% 1/4W |
| R600 | 1-249-401-11 | CARBON | 47 5% 1/4W |
| | | | (C212MK2) |
| R601 | 1-216-067-00 | METAL CHIP | 5.6K 5% 1/10W |
| | | | (C212MK2) |
| R602 | 1-216-067-00 | METAL CHIP | 5.6K 5% 1/10W |
| | | | (C212MK2) |
| R901 | 1-216-073-00 | METAL CHIP | 10K 5% 1/10W |
| R902 | 1-216-073-00 | METAL CHIP | 10K 5% 1/10W |
| R903-906 | | | |
| | 1-216-129-00 | METAL CHIP | 2.2M 5% 1/10W |
| R907 | 1-216-049-00 | METAL CHIP | 1K 5% 1/10W |
| R908 | 1-216-134-00 | METAL CHIP | 2.2 5% 1/8W |
| R909 | 1-216-134-00 | METAL CHIP | 2.2 5% 1/8W |
| R910-915 | | | |
| | 1-249-385-11 | CARBON | 2.2 5% 1/6W |
| | | < SWITCH > | |
| S302 | 1-571-478-11 | SWITCH, SLIDE (POWER SELECT) | |
| S303 | 1-692-431-21 | SWITCH, TACTILE (RESET) | |
| | | < TUNER > | |
| TU1 | A-3282-003-A | TUNER UNIT (TUX-001A) (C210MK2/C212MK2) | |
| TU1 | A-3282-011-A | TUNER UNIT (TUX-005) (C213MK2) | |
| | | < VIBRATOR > | |
| X1 | 1-567-848-11 | VIBRATOR, CRYSTAL (7.2MHz) | |
| X301 | 1-567-821-11 | VIBRATOR, CRYSTAL (4.19MHz) | |
| ***** | | | |
| | | MISCELLANEOUS | |
| | | ***** | |
| 130 | 1-765-460-12 | CORD (WITH CONNECTOR) | |
| F901 | 1-533-326-11 | FUSE (BLADE TYPE) (AUTO FUSE) (3A) | |
| F902 | 1-533-331-11 | FUSE (BLADE TYPE) (AUTO FUSE) (15A) | |
| HP901 | 1-500-196-11 | HEAD, MAGNETIC (PLAYBACK) | |
| M901 | X-3368-684-1 | MOTOR ASSY, MAIN (CAPSTAN/REEL) | |
| M902 | X-3368-685-1 | MOTOR ASSY, SUB (LOADING/TAPE OPERATION) | |
| S901 | 1-692-885-11 | SWITCH, ROTARY SLIDE (TAPE OPERATION) | |
| ***** | | | |

| Ref. No. | Part No. | Description | Remark |
|---------------------------------|--------------|--|--------|
| ***** | | | |
| HARDWARE LIST | | | |
| ***** | | | |
| #1 | 7-621-770-67 | SCREW +P 2.6X6 | |
| #2 | 7-621-773-87 | SCREW +PTT 2.6X10 (S) | |
| #3 | 7-621-770-XX | SCREW +PTT 2.6X6 (S) | |
| #4 | 7-627-553-17 | PRECISION SCREW +P 2X2 TYPE 3 | |
| #5 | 7-628-253-00 | SCREW +PS 2X4 | |
| #6 | 7-624-104-04 | STOP RING 2.0, TYPE -E | |
| #8 | 7-621-773-95 | SCREW +PTT 2.6X6 (S) | |
| #9 | 7-685-105-19 | SCREW +P 2X8 TYPE2 NON-SLIT | |
| #10 | 7-621-772-10 | SCREW +B 2X4 | |
| ***** | | | |
| ACCESSORIES & PACKING MATERIALS | | | |
| ***** | | | |
| | 1-467-623-11 | REMOTE COMMANDER (RX-X1S) (C210MK2:AEP, C212MK2/C213MK2) | |
| | 3-798-561-11 | MANUAL, INSTRUCTION (FOR REMOTE COMMANDER) (ENGLISH, POLISH, BULGARIAN, HUNGALIAN, RUSSIAN, SPANISH, CHINESE, ARABIC) (C210MK2:AEP, C212MK2/C213MK2) | |
| | 3-800-372-11 | MANUAL, INSTRUCTION (ENGLISH, FRENCH, GERMAN, ITALIAN) (C210MK2:AEP, C212MK2) | |
| | 3-800-372-41 | MANUAL, INSTRUCTION (SPANISH, PORTUGUESE, DUTCH, SWEDISH) (C210MK2) | |
| | 3-800-372-61 | MANUAL, INSTRUCTION (ENGLISH, POLISH, BULGARIAN, HUNGALIAN, RUSSIAN) (C213MK2) | |
| | 3-800-372-71 | MANUAL, INSTRUCTION (ENGLISH) (C210MK2:UK) | |
| | 3-800-373-11 | MANUAL, INSTRUCTION, INSTALL (ENGLISH, FRENCH, GERMAN, ITALIAN) (C210MK2/C212MK2) | |
| | 3-800-373-41 | MANUAL, INSTRUCTION, INSTALL (SPANISH, PORTUGUESE, DUTCH, SWEDISH) (C210MK2) | |
| | 3-800-373-61 | MANUAL, INSTRUCTION, INSTALL (ENGLISH, POLISH, BULGARIAN, HUNGALIAN, RUSSIAN) (C213MK2) | |
| * | 3-917-074-32 | SPACER (RING) | |
| | X-3367-795-1 | CASE ASSY | |
| | X-3368-170-1 | BRACKET ASSY (FOR RM-X1S) | |
| ***** | | | |

| Ref. No. | Part No. | Description | Remark |
|----------|--------------|----------------------------|--------|
| | | MOUNTING HARDWARE ***** | |
| * 151 | 3-916-161-01 | FRAME, FITTING | |
| 152 | X-3366-405-1 | SCREW ASSY (EXP), FITTING | |
| 153 | 3-386-828-01 | SCREW, FITTING | |
| 154 | 3-349-410-01 | BUSHING | |
| 155 | 3-388-078-01 | KEY | |
| 156 | 3-344-561-21 | SCREW (M4X4) | |
| 157 | 1-765-081-11 | CORD (WITH CONNECTOR) | |
| 158 | 1-575-616-21 | CORD (WITH TERMINAL) | |

