

XR-U881RDS/U882RDS

SERVICE MANUAL

AEP Model

UK Model

XR-U881RDS

Germany Model

XR-U882RDS

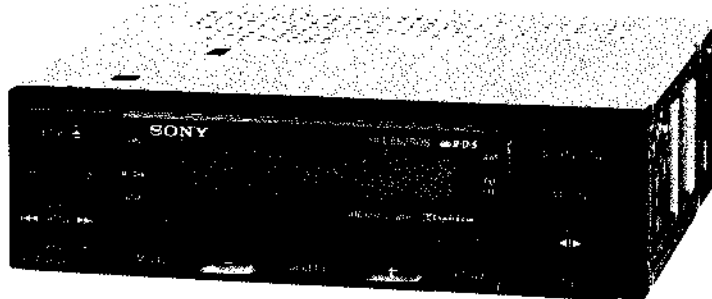


Photo : XR-U882RDS

Model Name Using Similar Mechanism	XR-7551
Tape Transport Mechanism Type	MG-55U-31

SPECIFICATIONS

Cassette player section

Tape track 4-track 2-channel stereo
Frequency response 30 - 20,000 Hz

Signal-to-noise ratio

Cassette type	Dolby B	Dolby C	Dolby NR off
TYPE II, IV	66 dB	76 dB	58 dB
TYPE I	63 dB	73 dB	55 dB

Wow and flutter 0.09% (WRMS) (XR-U881RDS)
0.1% (WRMS) (XR-U882RDS)

Tuner section

FM

Tuning range 87.5 - 108.0 MHz
Antenna terminal External antenna connector
Intermediate frequency 10.7 MHz
Usable sensitivity 8 dBf (75 ohms)
Selectivity 75 dB at 400 kHz
Signal-to-noise ratio 65 dB (stereo), 70 dB (mono)
Harmonic distortion at 1 kHz 0.5% (stereo), 0.3% (mono)
Separation 35 dB at 1 kHz
Frequency response 30 - 15,000 Hz
Capture ratio 2 dB

MW/LW (XR-U881RDS)

Tuning range MW: 531 - 1,602 kHz
LW: 153 - 281 kHz

MW/SW (XR-U882RDS)

Tuning range MW: 531 - 1,602 kHz
SW: 5,950 - 6,205 kHz

Antenna terminal External antenna connector
Intermediate frequency 450 kHz
Sensitivity MW: 30 μ V
LW: 50 μ V (XR-U881RDS)
SW: 50 μ V (XR-U882RDS)



General

Output lead Power antenna relay control lead
Power amplifier control lead
Tone controls Bass ± 10 dB at 100 Hz
Treble ± 10 dB at 10 kHz
Loudness +10 dB at 100 Hz
+6 dB at 10 kHz
Power requirements 12 V DC car battery
(negative ground)
Dimensions Approx. 178 x 50 x 160 mm
(w/h/d),
not incl. projecting parts and controls
Mounting dimensions Approx. 182 x 53 x 143 mm
(w/h/d),
not incl. projecting parts and controls
Weight Approx. 1.5 kg
Accessories supplied Mounting hardware (1 set)
UNILINK cable (1)
Power input lead (1)
Remote commander (1)
R6 (size AA) battery (2)
Carrying pouch (1) (XR-U882RDS)

Design and specifications subject to change without notice.

FM/MW/LW CASSETTE CAR STEREO
XR-U881RDS

FM/MW/SW CASSETTE CAR STEREO
XR-U882RDS

SONY®

Features

General


- Full-logic feather touch system for easy and smooth operation.
- Large-and-wide-sized LCD for displaying the operation modes clearly.
- Switchable two color illumination (amber and green). (page 7)
- Supplied with a wireless remote commander. (page 8)
- Provided with a digital 12-hour clock. (page 13)
- Telephone-mute function for decreasing the volume automatically with a telephone call.
- Detachable-front panel enables you to take the front panel away with you when you leave your car. (page 12)
- Caution alarm will be activated if you turn off the ignition key without removing the front panel from the unit.

Tuner section

- SSIR (Sony Super Interference Rejection) PLL synthesizer tuner.
- Provided with a FM diversity reception system for a better radio reception. (page 11)
- Up to 40 stations can be preset. 20 stations for FM, 10 stations each for MW and LW or SW. (page 27)
- BTM (Best Tuning Memory) function automatically selects and stores the stations with strong signals on the preset buttons in order of frequency. (page 25)
- The information services of FM RDS stations can be received. (page 29)

Cassette deck section

- Super-laminated head for clear treble sound.
- Auto-reverse function for listening to both sides of a cassette continuously.
- Auto-metal selection for detecting metal and CrO₂ tapes and automatically adjusting the deck to each tape type. (page 16)
- Dolby B and C NR* system reduces tape hiss noises during the tape playback. (page 16)
- AMS (Automatic Music Sensor) for automatically locating the beginning of a selection during the tape playback. (page 17)
- Intro scan function for playing the first 10 seconds of each track. (page 19)
- Repeat play function for listening to a currently playing track repeatedly. (page 19)
- Blank skip function for automatically skipping blank spaces during the tape playback. (page 20)
- ATA (Automatic Tuner Activation) for automatically turning on the tuner during the fast-forwarding or rewinding of a tape. (page 20)

*Dolby noise reduction manufactured under license from Dolby Laboratories Licensing Corporation. "Dolby" and the double-D symbol  are trademarks of Dolby Laboratories Licensing Corporation.

CD changer control section

(when the optional Sony CD changers are connected)

- Several CD changers can be connected and controlled by the use of the Sony source selector (sold separately) with the unit.
- Direct disc selection for selecting discs directly with the numerical keys. (page 38)
- Intro scan function for playing the first 10 seconds of each track of every disc. (page 42)
- Repeat play function for playing a track, a disc, or a changer repeatedly. (page 41)
- Shuffle play function for playing tracks in random order. (page 40)
- Manual search function for locating a desired point in a track. (page 39)
- Custom file function for displaying the title of each disc and setting a play/skip mode on each track. (page 43)

TABLE OF CONTENTS

<u>Section</u>	<u>Title</u>	<u>page</u>	<u>Section</u>	<u>Title</u>	<u>page</u>
1. GENERAL			2-3.	Mechanism Deck Block	19
	Location and Function of controls	3	2-4.	Power Board	19
	Connections	4	3. DIAGRAMS		
	Installation	6	3-1.	Pin Descriptions	20
	Detaching and Attaching the Front panel	7	3-2.	Circuit Boards Location	25
	Setting the Clock	7	3-3.	Printed Wiring Boards —ARI, RDS Section—	26
	Listening to the Tape Playback	7	3-4.	Printed Wiring Boards	
	Locating a Desired Track	8		—MAIN, DIVER, RST Section—	29
	Playing in Other Modes	8	3-5.	Schematic Diagram	
	Searching for the Stations Automatically	9		—MAIN (1/2), DIVER, ARI, RDS, RST	
	Tuning in by Adjusting the Frequency	10		Section—	33
	Memorizing the Stations Automatically	10	3-6.	Schematic Diagram —MAIN (1/2) Section—	37
	Memorizing Only Desired Stations	10	3-7.	Schematic Diagram —KEY Section—	39
	Receiving Stations Stored in Memory	11	3-8.	Printed Wiring Board —KEY Section—	41
	Overview of the RDS Function	11	3-9.	Printed Wiring Boards	
	Station Name Display	11		—MD, POWER Section—	43
	Automatic Re-tuning	12	3-10.	Schematic Diagram	
	Receiving Traffic Information	12		—MD, POWER Section—	45
	Listening to the CD Play	13	3-11.	Semiconductor Lead Layout	49
	Locating a Desired Disc, Track, or Part of a Track	13	4. EXPLODED VIEWS		
	Playing in Other Modes	14	4-1.	Chassis	53
	Overview of the Custom File Function	14	4-2.	Front Panel/Power Cord	54
	Displaying the Title of Each Disc	15	4-3.	Mechanism Deck Block (1)	55
	Playing Only Desired Tracks on a Disc	16	4-4.	Mechanism Deck Block (2)	56
	Editing a Custom File	16	4-5.	Mechanism Deck Block (3)	57
	Maintenance	17	5. ELECTRICAL PARTS LIST		58
2. DISASSEMBLY					
	2-1. Cover	18			
	2-2. Front Panel Assy	18			

Connections

Connexions

Conexiones

Aansluitingen

Caution

- This unit is designed for negative ground 12 V DC operation only.
- Before making connections, disconnect the ground terminal of the car battery to avoid short circuits.
- Connect the red power input lead only after all other leads are connected. And be sure to connect it to the positive 12 V power terminal which is energized when the ignition key is set to the accessory position.
- Run all ground wires to a common ground point.

When the Unit is Used In a Car with No Accessory Position on the Ignition Key — POWER SELECT switch

The illumination on the front panel is factory-set to be turned on even when the unit is not being played. However, this setting may cause some car battery wear if the unit is used in a car with no accessory position on the ignition key.

To avoid this battery wear when using the unit in such a car, set the POWER SELECT switch located at the bottom of the unit to the OFF position, then press the reset button. The illumination is reset to stay off while the unit is not being played.

Note

The caution label for the front panel is not activated when the POWER SELECT switch is set to the OFF position.

Précautions

- Cet appareil est conçu pour fonctionner exclusivement sur courant continu de 12 volts avec masse négative.
- Avant de procéder aux connexions, débrancher la borne de mise à la masse de la batterie du véhicule, pour éviter tout court-circuit.
- Brancher le fil d'entrée d'alimentation rouge uniquement après que tous les autres fils ont été connectés. En outre, veiller à le raccorder à la borne d'alimentation positive de 12 V qui est énergisée quand la clé de contact est commutée sur la position accessoire.
- Rassembler tous les fils de mise à la masse en un point de masse commun.

Quand l'appareil est utilisé dans une voiture dont la clé de contact ne possède pas de position accessoire — Interrupteur POWER SELECT

L'éclairage du panneau avant est réglé en usine de façon à s'allumer même quand l'appareil ne fonctionne pas.

Cependant, ce réglage risque d'épuiser la batterie si l'appareil est utilisé dans une voiture dont la clé de contact ne possède pas de position accessoire.

Pour éviter ce désagrément, commuter l'Interrupteur POWER SELECT situé sur le fond de l'appareil sur OFF, puis appuyer sur la touche de réinitialisation. L'éclairage est réinitialisé pour rester éteint quand l'appareil n'est pas utilisé.

Remarque

Quand l'Interrupteur POWER SELECT est commuté sur OFF, l'avertisseur du panneau avant ne fonctionne pas.

Precauciones

- Esta unidad ha sido diseñada para funcionar solamente con 12 V CC y negativo a masa.
- Antes de realizar las conexiones, desconecte el terminal de masa de la batería del automóvil a fin de evitar cortocircuitos.
- Conecte el conductor de entrada de alimentación rojo solamente después de haber conectado todos los demás.
- Cuidarse de conectar al terminal de alimentación de 12 V positivo. Este conductor deberá energizarse al poner la llave de encendido en la posición para accesorios.
- Conecte todos los terminales de puesta a masa a un punto común.

Cuando vaya a emplear la unidad en un automóvil con llave de encendido sin posición para accesorios — Selector POWER SELECT

La iluminación del panel frontal ha sido ajustada en la fábrica para que esté activada incluso aunque la unidad no se encuentre en reproducción. Sin embargo, este ajuste puede provocar cierta descarga de la batería del automóvil si emplea la unidad en un automóvil con llave de encendido sin posición para accesorios. Para evitar esta descarga de la batería en un automóvil de este tipo, ponga en OFF el selector POWER SELECT, situado en el panel inferior, y después presione el botón de reposición. La iluminación permanecerá desactivada mientras la unidad no se encuentre en reproducción.

Note

La alarma de aviso para el panel frontal no se activará cuando el selector POWER SELECT este en OFF.

Waarschuwing

- Dit apparaat is uitsluitend geschikt voor gebruik op gelijkstroom van een 12 volt auto-accu, negatief geaard.
- Alvorens te beginnen met het maken van aansluitingen, dient de aardklem van de auto-accu te worden losgemaakt. Dit om kortsluiting te voorkomen.
- Sluit de rode stroomdraad pas aan nadat alle andere aansluitingen zijn gemaakt. Zorg ervoor dat deze stroomdraad op de positieve 12 V accu-aansluiting wordt aangesloten. Omdat draad komt dan onder spanning te staan wanneer de contactsluitel in de "ACC" stand wordt gezet.
- Sluit alle aarddraden op een gemeenschappelijk aardpunt aan.

Als het contactslot van uw auto geen "ACC" stand heeft

— Gebruik van de stroomkeuzeschakelaar (POWER SELECT)

Het apparaat is in de fabriek zo ingesteld dat de verlichting van het voorpaneel altijd aan is, zelfs al is het apparaat zelf uitgeschakeld. Als het apparaat echter wordt gemonteerd in een auto waar het contactslot geen "ACC" stand heeft, kan dit leiden tot onnodige uitputting van de accu. Om dit te vermijden, zet u de stroomkeuzeschakelaar (POWER SELECT) aan de onderkant van het apparaat in de "OFF" stand, en vervolgens drukt u de terugstelsleutel in. Met de keuzeschakelaar in deze stand zal de verlichting van het voorpaneel gedoofd zijn, zolang het apparaat niet is ingeschakeld.

Opmerking

Zolang de stroomkeuzeschakelaar (POWER SELECT) in de "OFF" stand staat, werkt de waarschuwingslamp op het voorpaneel van het apparaat niet.



Use a ball point-pen or a similar object to select the position of the switch.
Utiliser un stylo à bille ou un objet similaire pour choisir la position de l'Interrupteur.
Emplear un bolígrafo u otro objeto similar a fin de cambiar la posición del selector.
Verstel de schakelaar met een balpen of een dergelijk voorwerp.

When a FM Diversity Antenna is Used — FM DIVERSITY switch

This unit can be connected with diversity antennas. If you use the unit with the diversity antennas, set the FM DIVERSITY switch located at the top of the unit to the ON position to activate the diversity system.

When you do not use the FM diversity antennas

If you wish to connect a conventional rod antenna, be sure to connect it to the antenna connector of the unit marked "MAIN", and set the FM DIVERSITY switch to the OFF position. Never connect the antenna to the connector marked "SUB", otherwise if the FM DIVERSITY switch is set to the ON position, the radio signals may not be received properly.

Notes

- The radio reception will be disturbed by noise if the connection of the antennas was not made properly or the FM DIVERSITY switch was not set correctly.
- For details about the diversity antenna, refer to its instructions manual.

Quand une antenne à rayonnement zénithal réduit est utilisée — Interrupteur FM DIVERSITY

Cet appareil accepte le branchement d'antennes à rayonnement zénithal réduit. Pour pouvoir utiliser l'appareil avec ce type d'antenne, commuter l'Interrupteur FM DIVERSITY situé sur le dessus de l'appareil sur ON, afin d'activer le système de diversité.

Quand on n'utilise pas d'antenne à rayonnement zénithal réduit

Pour brancher une antenne conventionnelle, veiller à raccorder celle-ci au connecteur d'antenne de l'appareil, marqué "MAIN", et commuter l'Interrupteur DIVERSITY sur OFF. Ne jamais raccorder l'antenne au connecteur marqué "SUB", sinon, si l'Interrupteur FM DIVERSITY est commuté sur ON, les signaux radiodiffusés seront mal reçus.

Remarques

- La réception radio risque d'être perturbée si le raccordement des antennes a été mal réalisé ou si l'Interrupteur FM DIVERSITY n'est pas correctement réglé.
- Pour les détails sur les antennes à rayonnement zénithal réduit, se reporter à leur mode d'emploi.

Cuando emplee antenas para recepción en diversidad — Selector FM DIVERSITY

Esta unidad podrá conectarse a antenas para recepción diversidad. Si va a emplear esta unidad con las antenas para recepción en diversidad, ponga el Interruptor FM DIVERSITY situado en la parte inferior de la unidad en la posición ON a fin de activar el sistema de recepción en diversidad.

Cuando no vaya a emplear antenas para recepción en diversidad de FM

Si desea conectar una antena telescópica convencional, cerciórese de conectarla a la toma de antena de la unidad marcada con "MAIN", y de poner el selector FM DIVERSITY en OFF. No conecte nunca esta antena a la toma marcada con "SUB", ya que si el selector FM DIVERSITY estuviese en ON, no se recibirían adecuadamente las señales de radiodifusión.

Notes

- La radiorecepción se verá perturbada por ruido si la conexión de las antenas no se ha realizado adecuadamente, o si el selector FM DIVERSITY no se encuentra en la posición correcta.
- Con respecto a los detalles sobre las antenas para recepción en diversidad, consulte su manual de instrucciones.

Bij aansluiten van een meervoudige FM-antenne — Gebruik van de FM DIVERSITY schakelaar

Dit apparaat is geschikt voor het meervoudig antennesysteem. Bij gebruik van een meervoudige antenne dient u de FM DIVERSITY schakelaar aan de bovenkant van het apparaat in de "ON" stand te zetten.



Bij aansluiten van een gewone antenne met slechts één aansluiting

Maakt u geen gebruik van het meervoudig FM-antennesysteem, maar een gewone sprietantenne met een enkele aansluiting, sluit deze dan aan op de "MAIN" ANT aansluiting, en zet de FM DIVERSITY schakelaar in de "OFF" stand.

Sluit een gewone sprietantenne niet aan op de "SUB" aansluiting, anders kan er geen sprake zijn van goede radio-ontvangst, als de FM DIVERSITY schakelaar in de "ON" stand staat.

Opmerkingen

- Er kan storing in de radio-ontvangst optreden als de antenne niet op de juiste wijze is aangesloten of wanneer de FM DIVERSITY schakelaar niet in de juiste stand staat.
- Zie voor nadere bijzonderheden de gebruiksaanwijzing van de meervoudige antenne.

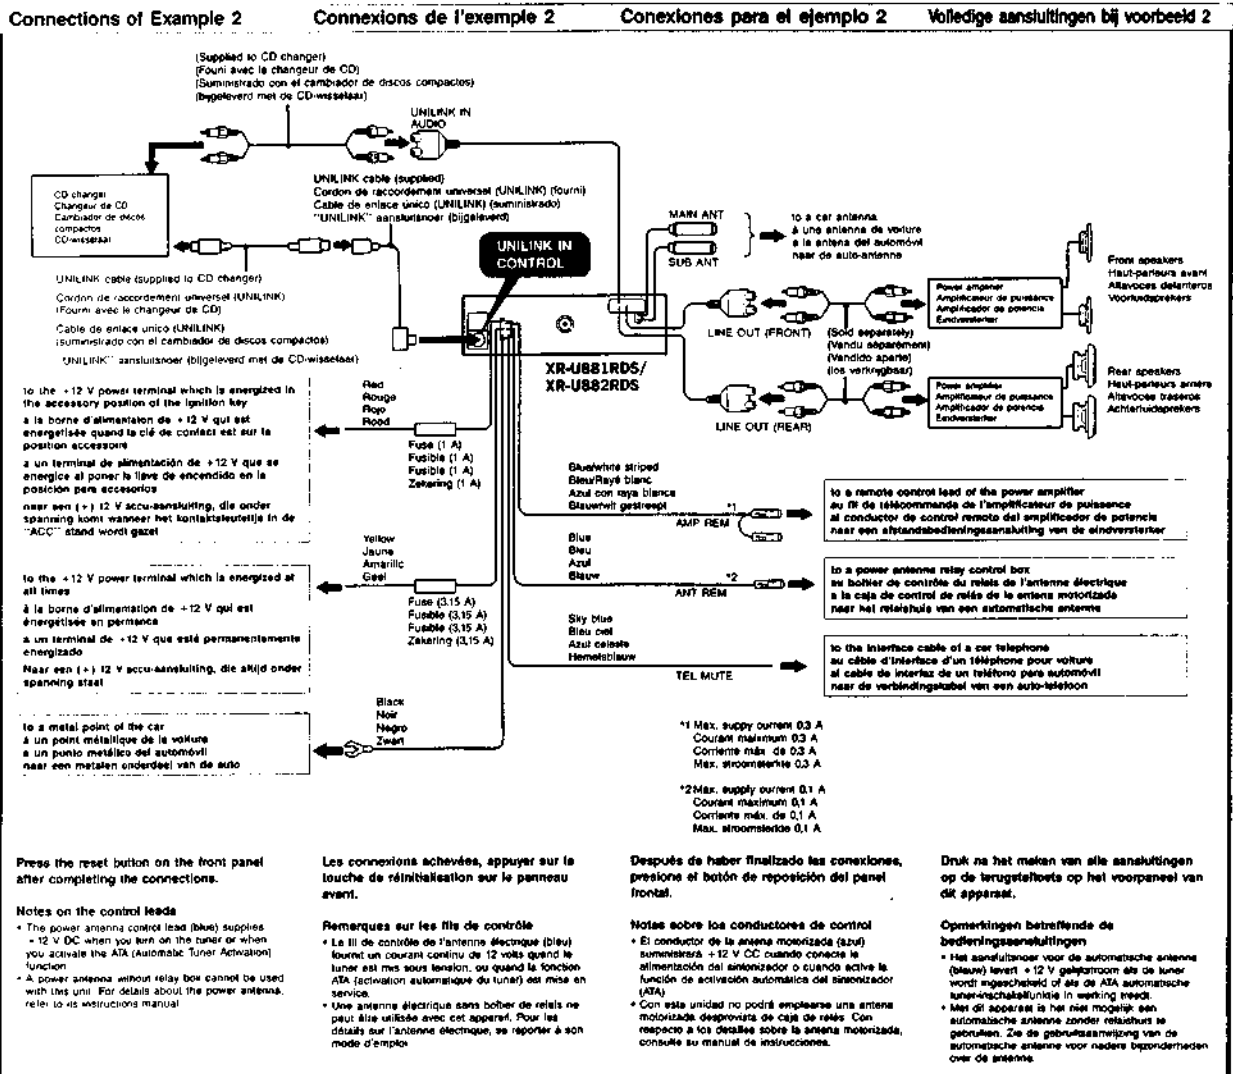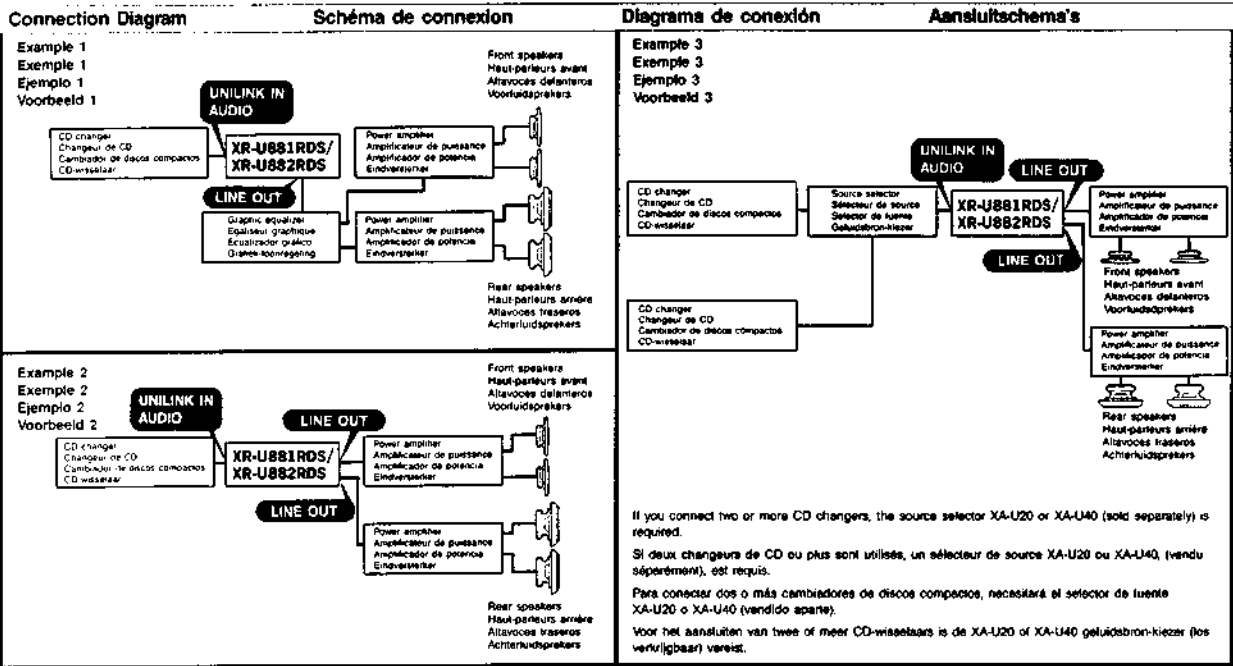

Installation

Precautions

- Choose the mounting location carefully so that the unit will not interfere with the normal driving functions of the driver.
- Avoid installing the unit where it would be subject to high temperatures, such as from direct sunlight or from hot air from the heater, or where it would be subject to dust, dirt, or excessive vibration.
- Use only the supplied mounting hardware for a safe and secure installation.

Mounting angle adjustment
Adjust the mounting angle to less than 20°.

Installation

Précautions

- Choisir soigneusement l'emplacement du montage, de manière que l'appareil ne gêne nullement les mouvements du conducteur.
- Éviter d'installer l'appareil là où il serait soumis à des températures élevées, comme en plein soleil ou à proximité d'une bouche d'air chaud, ni où il serait soumis à de la poussière, saleté ou vibrations violentes.
- Pour garantir un montage sûr, n'utiliser que le matériel fourni.

Réglage de l'angle de montage
Ajuster l'inclinaison à un angle inférieur à 20°.

Instalación

Precauciones

- Elija cuidadosamente el lugar de montaje de forma que la unidad no interfiera las funciones normales de conducción.
- Evite instalar la unidad donde pueda quedar sometida a altas temperaturas, como a la luz solar directa o al aire caliente de calefacción, o a polvo, suciedad, o vibraciones excesivas.
- Para realizar una instalación segura y firme, emplee solamente la ferretería de montaje suministrada.

Ajuste del ángulo de montaje
Ajuste el ángulo de montaje a menos de 20°.

Montage


Voorzorgsmaatregelen

- Kies de plaats voor inbouw zorgvuldig en houd er rekening mee dat het apparaat de bestuurder van de auto vooral niet in de weg mag zitten.
- Monteer het apparaat niet op plaatsen waar het blootgesteld wordt aan hoge temperaturen zoals van direct zonlicht of de warme luchtstroom van de auto-verwarming. Zorg dat het niet blootstaat aan sterke trillingen of in contact komt met veel stof of vuil.
- Gebruik voor het veilig en stevig monteren van het apparaat uitsluitend de bijgeleverde montage-onderdelen.

Inbouwhoek
Monteer het apparaat in een stand die niet meer dan 20° afwijkt van het horizontale vlak.


Mounting Example

Installation in the dashboard

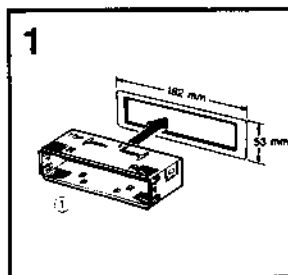


Exemple de montage

Encastrement dans le tableau de bord

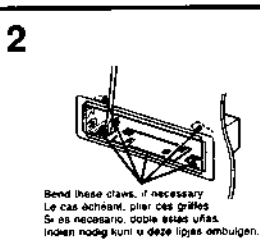


Ejemplo de montaje

Instalación en el salpicadero

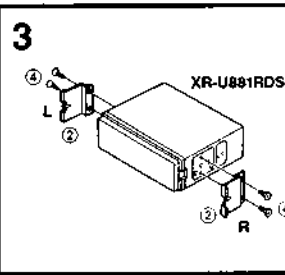

Montagevoorbeeld

Inbouw in het dashboard

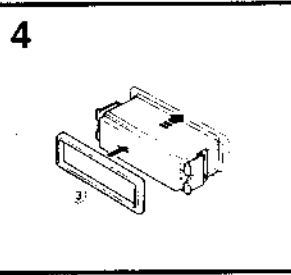

To Support the Unit

Pour installer l'appareil

Sujeción de la unidad



Ondersteunen van het apparaat

Choose the way **A** or **B**.

Choisir la méthode **A** ou **B**.


Elija la forma **A** o **B**.

Kies voor methode **A** of **B**.

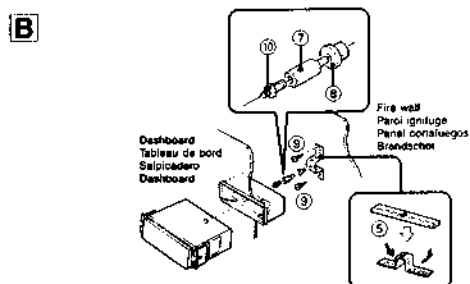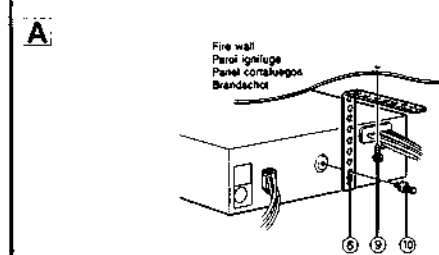


Supplied Mounting Hardware Matériel de montage fourni Ferretería de montaje suministrada Bijgeleverde montage-onderdelen

The letters in the list are keyed to those in the instructions.
Les lettres de la liste correspondent à celles mentionnées dans les procédures.
Las letras de la lista corresponden a las de las instrucciones.
De nummers in de afbeelding verwijzen naar die in de montage-aanwijzingen.

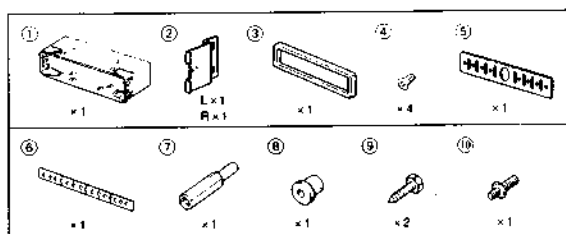

Detaching and Attaching the Front Panel

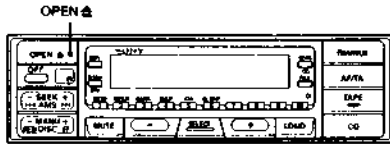


The front panel of this unit can be detached in order to prevent the unit from being stolen.


Detaching the Front Panel

1 Press the OPEN button and open up the front panel.

2 Pull out the panel while pressing the lock button located on the back side of the panel.




3 After detaching the front panel, close the inner lid. It automatically closes when you lift it lightly.

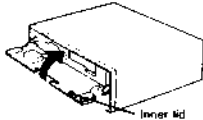

Be sure not to drop the front panel when detaching it from the unit.

Attaching the Front Panel

Push the front panel against the unit, with its inner lid closed, until it clicks.

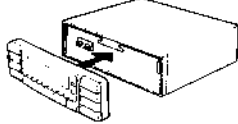


Caution alarm
If you turn your ignition key to the OFF position without removing the front panel, the caution alarm will be activated and a beep tone will be heard for a few seconds. (Only when the POWER SELECT switch is set to the ON position.)

Notes

- The front panel and the inner panel close automatically, after about 30 seconds if it is left open. When the front panel is opened, none of the function buttons except the OPEN button will function.
- Make sure that the front panel is right way up when attaching it to the unit as it cannot be attached upside down.
- Do not press the front panel hard against the unit when attaching it to the unit. It can be easily attached by pressing it lightly against the unit.
- When you carry the front panel with you, put it in the supplied carrying pouch.
- If you keep the OPEN button pressed for more than two seconds, the front panel will open without ejecting the cassette.

Setting the Clock

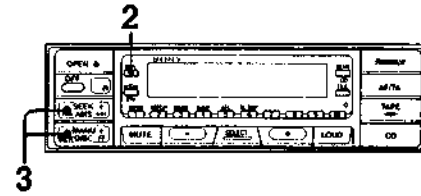

The clock has a 12-hour digital indication.

For example, set it to 10:08.

1 Turn the ignition key to the ON position.

2 Press the DSPL button if the clock indication does not come on.




3 Press the DSPL button for more than 2 seconds.




While holding down the DSPL button,


Press **MANU** to set the hour digits
(to go back) (to go forward)



Press **MANU** to set the minute digits
(to go back) (to go forward)



4 The clock starts activating when you take your finger off the DSPL button.



Notes


- You cannot set the clock with the remote commander.
- If the POWER SELECT switch of the unit is set to the OFF position, the clock cannot be set unless the power is turned on. Set the clock after you turn on the radio, start the CD play, or play back a tape.

12

13

Cassette Deck Operation

Listening to the Tape Playback

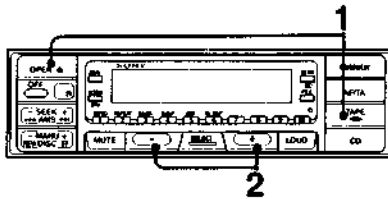

1 Insert a cassette into the cassette slot.



When a cassette is inserted, the front panel automatically closes and the playback starts.

If a cassette is already inserted




The **TAPE** indication appears on the display window if a cassette is inserted.


2 Adjust the volume with **+** or **-**.



Getting the clock indication during a tape playback



Press again to return to the previous indication.

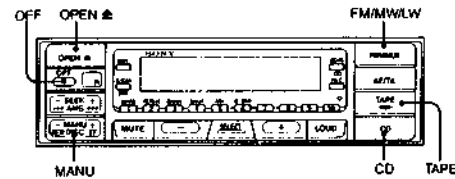


Other Operations

To fast-forward → **MANU**


To rewind → **MANU**

To listen to the reverse side of a cassette → **TAPE**

Tape transport direction indication



The side facing up is being played



The side facing down is being played

Stopping the Tape Playback

To stop the tape and listen to the radio → **FM/AM/WLW**

To stop the tape and listen to the CD → **CD**

To stop the tape and turn the unit off → **OFF**

To listen to the tape again → **TAPE**

To eject the tape → **OPEN**

Notes on the OPEN button

- If you leave a cassette in the cassette slot for more than 30 seconds after pressing the OPEN button, the unit will automatically take in the cassette and close the front panel.
- When the front panel is opened, none of the control buttons except the OPEN button will function. You cannot operate the remote commander either.
- If you wish to close the front panel without inserting a cassette to the unit, lift up the front panel gently with your finger and it will close automatically.

14

15

Locating a Desired Track — AMS Function




Auto-metal Selection Function

This unit has an auto-metal selection function in which the unit automatically detects normal, CrO₂ and metal tapes. The deck will be adjusted just by inserting a cassette into the slot. When you insert either metal or CrO₂ cassette, the "METAL" indication will come on the display window for a few seconds.

Listening to a Tape Recorded in the Dolby NR System

This unit adapts to the tapes recorded in the Dolby B and Dolby C NR system.



The Dolby noise reduction system reduces the hiss noises which occur during the tape playback in the treble and bass areas. This system emphasizes the treble area during the recording and returns it to the original level at the playback. Therefore, when you listen to the tapes which are recorded in the Dolby NR system, be sure to use the Dolby NR system during a playback as well.



AMS

The AMS (Automatic Music Sensor) enables you to locate the beginning of up to 9 tracks.

During playback, press the AMS button for the same number of times as the number of tracks you wish to skip

To locate the beginning of the tracks ahead



To locate the beginning of the previous tracks



Be sure to include the current track in the number of the tracks you wish to skip.

The AMS may not function properly and the track starting positions may not be located in the following cases:

- Tapes which contain noises between the tracks are used.
- Tapes which contain less than 4 second blank spaces in between the tracks are used
- When you press the AMS button immediately before or after the track which you wish to locate.

The unit may consider the following as the blank spaces between tracks and start playback:

- Long silent music sections on a track
- Quiet sections of a continuous low volume sound on a track
- Tracks which contain a gradual increase and decrease of the sound volume

Playing in Other Modes




AMS

Examples of Locating the Beginning of a Track



Cueing the track after skipping three tracks

Press three times.



Cueing the beginning of the current track

Press once.

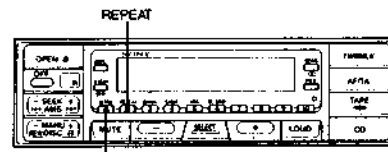

INTRO

Searching for a Desired Track by Listening to the First 10 Seconds of Each Track — Intro Scan Function

During playback

The first 10 seconds of all the tracks will be played in order from the next track. When you find the track of your choice, press the button again. The deck will go back to the normal mode.

Listening to the Currently Playing Track Repeatedly — Repeat Play Function




When the track is over, it will return to the beginning and will be repeated again. To cancel this mode, press the button again.

Note
The intro scan function will be canceled if you turn off the unit by pressing the OFF button or turning the ignition key to the OFF position and leaving it for more than 8 seconds. However, the blank skip and ATC function will not be canceled unless each button is pressed once again.

Tuning in by Adjusting the Frequency

—Manual Tuning

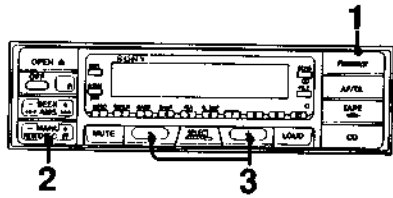

Use the Manual Tuning if you know the frequency of the desired station.

- 1** Select the desired band from FM1, FM2, MW and LW. The band changes in the following order: FM1 → FM2 → MW → LW.
- 2** Press the -MANU+ button.

To search the lower frequencies To search the higher frequencies

If you keep it pressed, the frequency changes rapidly.
- 3** Adjust the volume with or .


Note

You cannot use the Manual Tuning with the remote commander.

PREVENTING ACCIDENTS! While you are driving, the use of the Automatic Tuning and the BTM function is recommended in favor of the Manual Tuning.

Memorizing the Stations Automatically

—BTM (Best Tuning Memory) Function

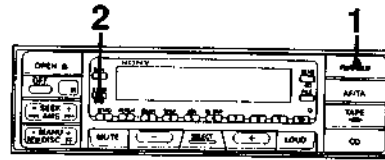

Best receiving stations are automatically searched and memorized on each band (FM1, FM2, MW and LW). Up to 10 stations on each band can be stored on the preset buttons 1 to 10 in the order of frequency.

- 1** Select the desired band from FM1, FM2, MW and LW. The band changes in the following order: FM1 → FM2 → MW → LW.
- 2** Keep the BTM button pressed for more than 2 seconds.

The receivable frequencies of FM1 and FM2 are the same. Therefore, 20 stations can be memorized on FM.

Checking in Order, All the Stations Stored in the Memory—Memory Scan Function

Press lightly


The tuner will receive in order, all the stations stored in the memory for 5 seconds each.

To cancel
Press the M-SCAN button lightly once more. The memory scan will be canceled and you will be able to listen to the station currently being received.

Note

There may be cases where even the stations which are stored in memory cannot be received due to weak signals in the vicinity of your car.

Memorizing Only Desired Stations

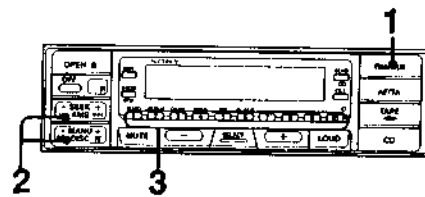

Up to 10 stations on each band (FM1, FM2, MW, and LW) can be stored in the memory in order of your choice (a total of 40 stations).

For example, store a station on the preset button 1

- 1** Select a desired band from FM1, FM2, MW and LW. The band changes in the following order: FM1 → FM2 → MW → LW.
- 2** Tune in the station which you wish to store in the memory. (page 21 or 24.)
- 3** Keep the preset button pressed for about 2 seconds until the "MEM" indication comes on the display window.

The number of the preset button of which you are pressing now comes on the display window. When the "MEM" indication comes on, the station is stored in the memory and the operation is now complete. The "MEM" indication goes off after a while.

Repeat the same procedure to store other stations.

Only one station per band (FM1, FM2, MW and LW) can be stored in the memory on each preset button. If you try to store another station on the same preset button, the previously stored station will be erased.

If the station to be memorized is a RDS station, if the unit is tuned to a FM band and a station to be memorized happens to be a RDS station transmitting the AF data, the unit will memorize the AF data as well. (See "Network Stations Memory" page 33.)

The BTM function — how this function operates

It starts searching stations from the lowest frequency of the currently tuned in band. When a station is located, it will be stored in the memory on the preset button whose number is indicated on the display window. If there is no preset number indicated, it will be stored in the memory on the preset button number 1 onward. It continues to store the stations in the memory until all the preset buttons are occupied.


For example, if the FM1 band was selected, it will continue until the preset button 10 on the FM2 band is occupied. When all the memory preset buttons are occupied with the memories before the highest receivable frequency is searched, the unit will start searching for higher frequencies from where it was left off. This is to check if there are any more stations with better reception than the ones already stored in the memory.

If a station with better reception is found, the unit will store it in the memory in place of a station with an inferior reception.

Lastly, it rearranges all the stations in the order of frequency from the lowest and stores them in the memory. The whole operation is now completed. The stations with better reception are stored in the memory on the preset buttons in the order of frequency.

Notes

- There may be a situation where there are not enough receivable stations due to the lack of stations in the vicinity or weak broadcasting signals. In such cases, the BTM operation may stop without all the buttons being stored with a memory.
- If you start the BTM operation from the FM1 band, it will continue to store stations in memory to the FM2 band. Care must be taken if you wish to keep the stored stations on the FM 2 band.
- If you start the BTM operation from the FM 2 band, it will stop when all the memories on the FM 2 band are occupied. It will not continue to the FM 1 band.

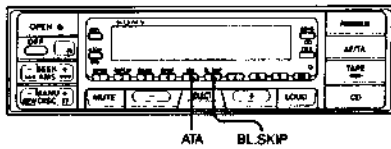

Turning on the Radio while the Tape is Being Fast-wound — ATA Function



If you press either FF or REW during the tape playback, the radio will come on automatically. When the tape playback starts, the radio will be turned off automatically. To cancel the mode, press the button again.


Skipping Blank Spaces of the Tape Automatically during Tape Playback — Blank Skip Function



If there is a blank space longer than 8 seconds on a tape, the unit automatically fast forwards the tape to the next track and the playback will start. To cancel the mode, press the button again.

Getting a radio frequency indication on the display window while the radio is turned on using the ATA function
Press the DSPL button several times. The frequency of the last radio program received or the name of the last station received will be indicated on the display window for a few seconds.


Radio Reception | Searching for the Stations Automatically — Automatic Tuning

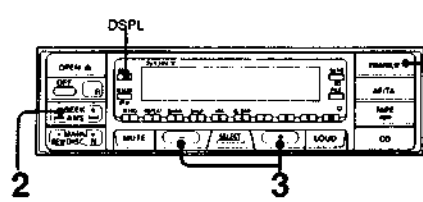

If you do not know the frequency of the station you wish to tune in, it is useful to use the Automatic Tuning function.


- 1 Select the desired band from FM1, FM2, MW and LW. Each time the button is pressed, it changes in the order of FM1 → FM2 → MW → LW.
- 2 Press - SEEK + button.
 To search for lower frequencies
 To search for higher frequencies
The scanning stops when a station is received. Press the button repeatedly until the desired station is received.
- 3 Adjust the volume with or .

While receiving FM broadcasting




The "ST" indication will appear when an FM stereo program with sufficient signal strength is tuned in. The program will be received in stereo.

Getting the clock indication while listening to the radio
Press the DSPL button. Each time you press the button, the display mode changes as follows.

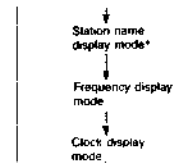


*Refer to page 31 for the station name display mode.

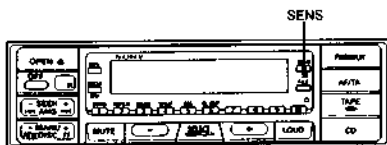

Avoiding the Automatic Tuning from Stopping on Stations Too Frequently — Local Seek Mode

Press to get the LCL indication.



The mode changes to that of the local seek mode where only the stations with relatively strong signals are tuned in. It functions only when the Automatic Tuning is in operation.




If FM Stereo Broadcasting is Difficult to Receive — Monaural Mode

Press to get the MONO indication.



The sound improves, but it will become monaural.

When you press the SENS button, the mode changes as follows:

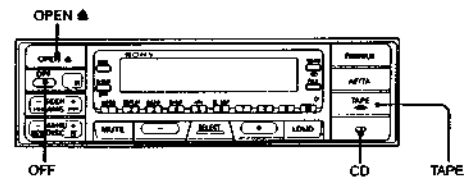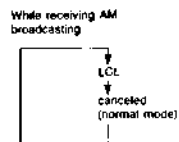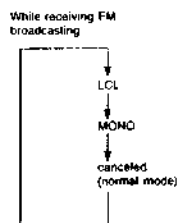


Other Operations

To stop the radio and listen to tape playback

If a cassette is loaded




If a cassette is not loaded




To stop the radio and listen to a CD



To turn off the radio and cut the power supply



Receiving Stations Stored in the Memory

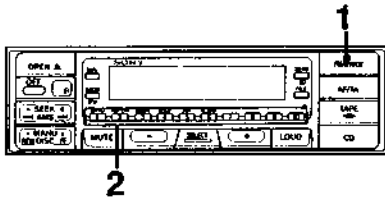

- 1** Select the desired band from FM1, FM2, MW and LW. The band changes in the following order: FM1 → FM2 → MW → LW.
- 2** Press the preset button lightly on which the desired station is stored.

Note
There may be cases where even the stations which are stored in the memory can not be received due to weak signals in the vicinity of your car.

Receiving in Order the Stations Stored in the Memory—Preset Search Function (Remote Commander Only)

The number will advance in the following order:

- PRESET + REW DISC FF


1 → 2 → 3 → ... → 8 → 9 → 10 → 1 → ...
(number of the preset buttons)

The number will reverse in the following order:

- PRESET + REW DISC FF

1 → 10 → 9 → ... → 4 → 3 → 2 → 1 → ...

If you keep the button pressed, it will go faster.

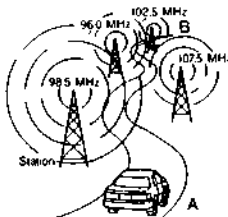

Automatic Re-tuning — AF Function (page 32)

This function automatically re-tunes in a station with a relatively stronger signal within the same broadcasting network using the PI and AF data.

The illustration above shows an example of a car passing through an area with four stations of the same broadcasting network between points A and B.

As the car moves on, the reception frequency of the station in the network changes from 985 MHz to 1075 MHz then to 960 MHz and to 102.5 MHz.

By using the AF function, the driver will be able to keep listening to a program in the same broadcasting network without tuning in the station manually every time he enters a different frequency zone between points A and B.

Traffic Information Reception — TA Function (page 34)

This function searches and stands by for a traffic information station using the TP and TA data. Using this function, the unit automatically searches the station and changes its mode to receive the traffic information when the broadcasting starts while you are listening to a tape or CD.

Overview of the RDS Function

What is RDS?

The RDS (Radio Data System) is a radio digital information system developed and introduced in 1987 by the EBU (European Broadcasting Union). Using the 57 kHz sub-carrier of FM broadcasting, the RDS let you receive a variety of information such as station names and traffic information. It also offers useful functions such as automatic re-tuning of the best available signal carrying the chosen program.


The RDS digital data includes the followings:

- PI Program Identification
- PS Program Service Name
- AF List of Alternative Frequencies
- TP Traffic Program
- TA Traffic Announcement
- PTY Program Type


The following functions are available with this unit using the RDS data. Refer to the marked pages for the operational instructions.

Station Service Name Display (page 31)

This function displays the name of the station which is currently tuned in on the display window.



Station Name Display

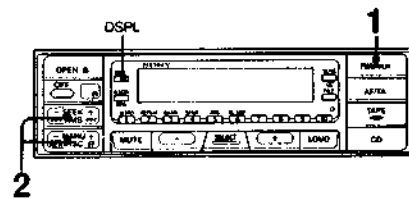

1 Press the FM/MW/LW button to select FM1 or FM2.



2 Tune in a desired station by using the Automatic Tuning or Manual Tuning (page 21 or 24).



If the unit is set in the station name display mode and a station transmitting the RDS data is received, the name of that station will be displayed on the display window.

When the "....." indication appears on the display window in the station name display mode. The received station is not a RDS station.


When the unit is in the frequency display mode and a RDS station is received.

The "R" display will come on to indicate that a RDS station is received. To find out the name of the station, press the DSPL button to change the display mode.


Notes

- RDS data can be received only on the FM band and not on the MW and LW bands.
- The RDS functions of this unit will not be activated if the FM station being received is not transmitting the RDS data. It may also not work properly in an area where the RDS transmissions are in the experimental stage.

You can change the display mode by pressing the DSPL button. Each time you press the button, the display mode changes as follows.

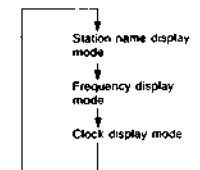

Automatic Re-tuning — AF Function

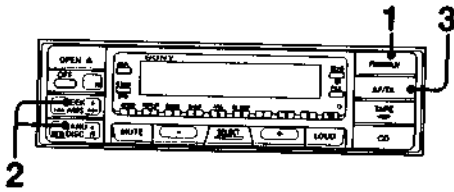


- 1** Press the FM/MW/LW button to select the FM1 or FM2.
- 2** Tune in a desired RDS station by using the Automatic Tuning or Manual Tuning. (page 21 or 24)
- 3** Press the AF/TA button to get the "AF" indication.

If the signal level of the tuned in RDS station falls below a certain point, the unit will begin to search for an alternative station with a stronger signal in the same network from the AF data (List of Alternative Frequencies). If a stronger signal station is found, the unit re-tunes in the station.

Notes

- When the "AF" indication is on the display window, only the RDS station can be tuned in by the Automatic Tuning.
- If the tuned in RDS station is not transmitting the AF data, this function will not work.
- If you press the AF button while the MW or LW band is tuned in, the FM1 band will be automatically selected.

The AF/TA button
Each pressing on the button changes the function cyclically as follows:



*See page 34 for the TA function


Network Stations Memory

When the unit stores the RDS station transmitting the AF data on the preset button, it stores not only its frequency but also its PI and the AF data. The AF data carries the information of the list of the frequencies of the stations within the same broadcasting network. The unit will store the data in its memory whether the AF function is activated or not.

Getting the Stored RDS Stations in Tune from the Broadcasting Networks

Be sure to press the preset buttons after pressing the AF/TA button to activate the AF function. The AF function will select a better signal station by re-tuning within the network stations. If you press the preset buttons without activating the AF function, you will not be able to use this function. In this case you will only get the individual stations which were tuned in on the previous occasion. The unit will not re-tune to the other stations in the network even if they are stored in the memory.

Receiving Traffic Information — TA Function

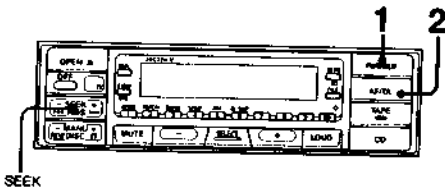

Receiving a Traffic Information Station

- 1** Press the FM/MW/LW button to select the FM1 or FM2.
- 2** Press the AF/TA button to get the "TA" indication.

The search for a traffic information station will start. When a RDS station transmitting the TP data is found, the search stops and the "TP" indication will come on to the display window.


The "TA" indication will flash while the traffic information broadcasting is on the air. It will stop flashing when the broadcasting is over.

To search for another RDS station transmitting traffic information
Press the SEEK button while the "TA" indication is still on the display window.

Notes

- Do not activate the TA function in an area where there is no traffic information broadcasting service available. If you do so, the unit will keep searching for it and other stations cannot be tuned in.
- If you activate the TA function while the MW or LW band is tuned in, the FM1 band will be automatically selected and start searching for a traffic information station.

"TP" indication
This indicates that the currently tuned in RDS station offers traffic information service.

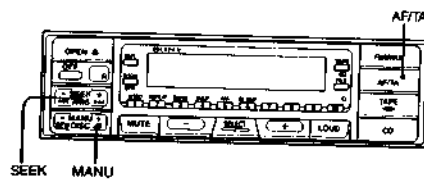

Standing by for Traffic Information while Listening to a Tape or CD

Press the AF/TA button to get the "TA" indication during a tape playback or CD play.

The playback continues while the unit searches for a traffic information station.

When a station is found:
The "TP" indication will come on the display window.

↓

When a traffic information broadcasting starts:
The "TA" indication will start flashing. The tape or CD play stops and the traffic information will be heard.

↓


When the broadcasting is over:
The tape playback or CD play resumes from where it was left off.

To cancel the stand-by mode
Press the AF/TA button to turn off the "TA" indication.

Changing the display to that of the frequency or station name during tape playback or CD play
Press the DSPL button low times. While the frequency or station name is being displayed, the SEEK, MANU buttons and preset buttons will function in the same way as they do in the radio reception.

Listening to the CD Play

—When Optional Sony CD Changers are Connected

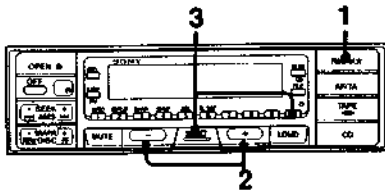


Traffic Information is Heard at the Preset Volume Level

When traffic information broadcasting starts, you can hear it at the preset volume level even if the volume control on the front panel has been turned down. (If you are listening to other sources with higher volume level, the level will not change.) The preset volume level can be set in the following manner.

- 1 Press the FM/MW/LW button to select FM1 or FM2.
 - 2 Adjust the volume to the desired level with - or + button.
 - 3 Press the preset number 10 button while pressing the SELECT button.
- A beep sound will be heard and the setting is completed.

PTY (alarm) Data Reception


In case of emergency, or in a situation where there may be danger from natural disaster in the area, the RDS stations will transmit the PTY data information to warn drivers that they are in danger. The data includes the character display and the interruption signal for automatically turning on the radio. This data can be received while the AF or TA function is being activated. If the unit receives the PTY data from a RDS station during tape playback or CD play, the "AF" indication on the display window will start flashing and tape playback or CD play stops. The radio will be automatically turned on to receive the emergency announcement from the station.

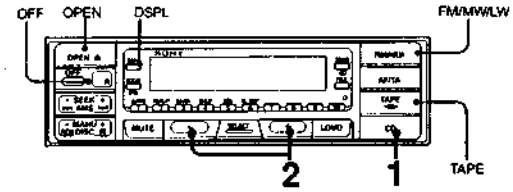

- 1 Press the CD button to start CD play.
- 2 Adjust the volume with - or + .

If it is set in the normal playing mode, after the end of a disc, the disc with the next number shown will be automatically played. If two or more CD changers are connected, after the end of the last disc, the first disc in the CD changer with the next number shown will be played. The order of the CD play can be rearranged by changing the playing modes. For details, see "Playing in Other Modes" (page 40)

Getting the clock display while listening to a CD
Press the DSPL button. Each time you press the DSPL button, the display mode will change cyclically as follows:

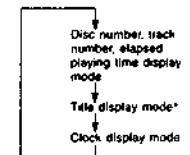

* See pages 43, 44 and 47 for the details about the tape display mode

Other Operations

To stop the CD play and listen to a tape


If a cassette is already loaded →

If a cassette is not loaded →

To stop CD play and listen to the radio →

To stop CD play and turn the unit off →

Locating a Desired Disc, Track, or Part of a Track

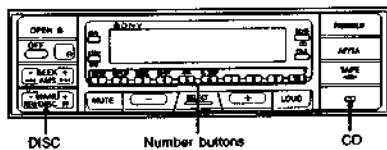

The useful functions of this unit enables you to quickly search a disc, track, or parts of track which you wish to listen to.

Locating a Disc of Your Choice Sequentially

Press the DISC button lightly during CD play.


To search previous disc numbers →

To search the disc numbers ahead →

You can search a disc by displaying the names of discs registered with the Custom File Function. For details, see page 43

Locating a Disc Directly

Press the corresponding disc number button for more than two seconds during CD play.




Listening to the Discs in Another CD Changer (when two or more changers are connected)

Press the CD button during CD play.



The CD changer number changes.

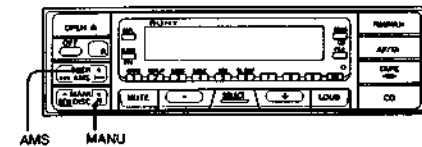

Locating the Beginning of a Track

—AMS Function

Press the AMS button during CD play.

To listen to the current track again from the beginning →

To search for previous tracks → (Keep on pressing)

To listen to the next track from the beginning →

To search for the beginning of the track ahead → (Keep on pressing)

Note
When you keep on pressing the AMS button and come to either the beginning or end of a disc, you will not be able to go any further.

Searching for a Desired Part of Track

—Manual Search

Keep on pressing the MANU button during CD play.

To go ahead → (Keep on pressing)

To go back → (Keep on pressing)

The elapsed playing time of the track comes on to the display window during the manual search

Note
You cannot use the Manual Search on the remote commander.

Playing in Other Modes



SHUF

Playing Discs Randomly—Shuffle Play Function

Playing the tracks on a disc randomly—Inter disc shuffle play

Press to get the "SHUF 1" indication.

When all the tracks on a disc have been played, it goes on to the next disc.


Playing the tracks on all discs in currently selected CD changer randomly—Inter changer shuffle play

Press to get the "SHUF 2" indication.


Playing the tracks on all discs in all CD changers connected randomly—All shuffle play (When two or more CD changers are connected)

Press to get the "SHUF 3" indication.

The function of the SHUF button changes cyclically as follows:

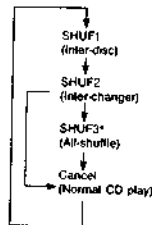

* All-shuffle play (SHUF3) mode functions only when two or more changers are connected to the unit. When only one changer is connected, the "SHUF3" indication will not come on. In this case, if you press the button once again when the SHUF2 indication comes on, the shuffle play will be canceled.

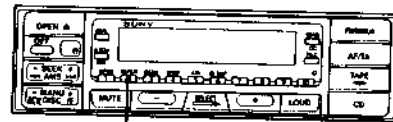

REPEAT

Playing a Disc Repeatedly—Repeat Play Function

Playing the current track repeatedly—Track repeat

Press to get the "REP1" indication.

When the current track is finished, it will go back to the beginning and start playing the same track again.

Playing the current disc repeatedly—Disc repeat

Press to get the "REP2" indication.


When the last track of the current disc is finished, it will go back to the beginning of the first track of the same disc and start playing again.

Playing the discs in currently selected CD changer repeatedly—CD changer repeat (When two or more CD changers are connected)

Press to get the "REP3" indication.

When the last disc of currently selected CD changer is finished, instead of moving to another changer, it goes back to the first disc of same changer and starts playing again.

The function of the REPEAT button changes cyclically as follows:

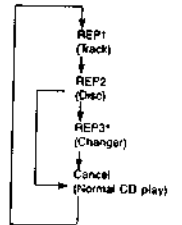

* CD changer repeat (REP3) mode functions only when two or more changers are connected to the unit. When only one changer is connected, the "REP3" indication will not come on. In this case, if you press the button once again when the REP2 indication comes on, the repeat play will be canceled.

Overview of the Custom File Function



INTRO

Searching for a Desired Track by Listening to the First 10 Seconds of Each Track—Intro Scan Function

Press while listening to a CD

The unit will play in order the first 10 seconds of each track on a disc.

When the first 10 seconds of last track on a disc is played, it will move on to the next disc.


When the first 10 seconds of last track which is on the last disc in a CD changer is played, it will move on to the next CD changer (only when two or more CD changers are connected).

When you find the desired track Press the INTRO button once more. The Intro scan function will be canceled and you can continue to listen to the track

CD Title Display Function

—Disc Memo Function (page 44)


You can put a title of your own choice to a CD (one title per CD). The title can be displayed on the display window while the CD is being loaded and played.



Music Play and Skip Function


—Delete Bank Function (page 48)

Each track can be set to be either played or skipped while the CD is playing, so that only desired tracks on the CD can be played.



Indications while the Delete Bank function is being set.

Displaying the Title of Each Disc

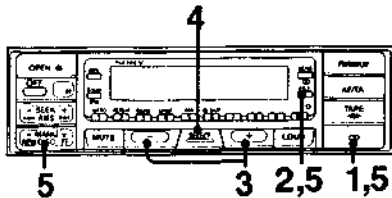

Putting Your Personalized Titles onto the Discs

- 1** Play the disc that you wish to title.
- 2** Press the FILE button for more than two seconds to enter the name edit mode.
- 3** Press either or to select the desired letter and number.

Each time you press the or button, characters will come on in the following order:

→ _ A - B - C → _ X - Y - Z - 0 - 1 - 2 - 3 -

→ _ . - (-) - \ - / - * - + - - 9 - ...
- 4** Press the SELECT button after locating the desired letter or number.

The blinking part will move to the next space on the right. Repeat steps 3 and 4 to enter the entire titles. Up to 8 characters can be used per disc.

44

Notes

- If you press the SELECT button when the eighth letter (farthest right letter) is blinking, the blinking part goes back to the first letter (farthest left letter).
- If you wish to put a blank space after a character, select the " ".

- 5** Register the title. Use one of the following methods (1) through (4).

 - (1) Press the FILE button for more than two seconds.

The unit will go back to the normal CD playing mode.
 - (2) Press the FILE button lightly.

(Press lightly)


The unit enters the PLAY/SKIP mode in which the play and skip modes can be set. (Continue to step 4 in "Setting of the Play and Skip Modes on the Discs" of page 48)
 - (3) Press the DISC button.

(Press lightly)

You can change the disc and continue to put the titles to the discs
 - (4) Press the CD button. (Only when two or more CD changers are connected.)

You can go to the next CD changer and the unit will go back to the normal playing mode.

45



DSPL

Displaying the Title

While the CD is playing, press the DSPL button to enter the title display mode.


If the title of a disc is not registered, "-----" will come on the display window.

While loading the discs
Whatever the display mode is, the indication automatically changes as follows:

Title of the disc (2 seconds) → Disc and track number (2 seconds) → Display mode currently selected

The registered titles of the discs may not come on the display immediately during loading. This occurs because the unit displays the title after identifying the disc by reading the TOC* (Table of Contents) information of the disc. Therefore, while the CD changer is loading the disc for the first time, the registered title of the disc cannot be displayed. Once the disc has been loaded and played, the TOC information would have been read and the title will be displayed even while the disc is being loaded.

Each time you press the DSPL button while the CD is playing. The indication on the display window will change cyclically as follows:

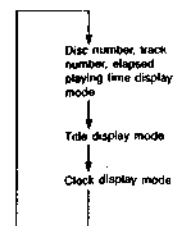


* The TOC information of the disc contains the total length of playing time and the codes to search the beginning and end of each track, and so on

Where are the contents of the custom file stored?
The information registered in the custom file will be stored in the memory of currently selected CD changer. Therefore, if you play a custom-titled CD in a CD changer which is not connected with a UNILINK cable to each other such as in another car, you will not be able to have its title displayed. The Delete Bank function will not be activated either. However, you will be able to have the CD titles displayed even if they are not loaded in their original CD changers provided that the CD changers are connected to each other by a UNILINK cable.

You can register the maximum of 110 discs on one CD changer
If you try to register more than 110 discs, the unit will display "FULL" on the display window and will not accept the command for custom-titling. In this case, you will have to erase the memory of the other discs before you enter the new ones. See page 52 for details on erasing the memory.

Playing Only Desired Tracks on a Disc

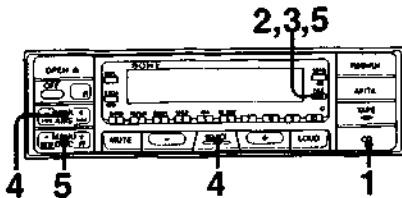

Setting the Play and Skip Modes on the Discs

- 1** Play the disc to which you wish to set these modes.
- 2** Press the FILE button for more than two seconds and put the titles onto the discs.

See page 44 for details about putting a title. If the title has already been registered, go to step 3.
- 3** Press the FILE button lightly to enter the PLAY/SKIP edit mode.

When the unit enters the PLAY/SKIP edit mode, the indication on the display window will look like the illustration below.

PLAY/SKIP edit mode
- 4** Press the AMS button to select the track number you wish to skip and press the SELECT button.

The indication changes from "PLAY" to "SKIP". If you wish to return to "PLAY", press the SELECT button again.

Repeat the operation in this step to enter either the "PLAY" or "SKIP" mode on all the tracks.

Notes

- When the title is not registered, you cannot enter the PLAY/SKIP edit mode even if you press the FILE button.
- You can only set the "SKIP" mode onto up to 24 tracks. If a disc has more than 24 tracks, you will not be able to set the SKIP mode on the tracks after the 24th track.
- You cannot set the SKIP mode onto all of the tracks on a disc.

- 5** To register the settings, use one of the following methods (1) through (4).

 - (1) Press the FILE button for more than two seconds.


The unit will go back to the normal CD playing mode.
 - (2) Press the FILE button lightly.

The unit re-enters the name edit mode. See page 44.
 - (3) Press the DISC button.

You can change the disc and continue to put the titles to the discs.
 - (4) Press the CD button. (Only when two or more CD changers are connected.)

You can go to the next CD changer and the unit will go back to the normal playing mode.

Editing a Custom File

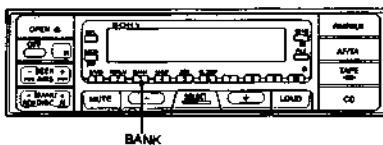

Playing with the Delete Bank Function


Press the BANK button to get the "BANK" indication.

The discs will be played according to the settings of the PLAY/SKIP edit mode.

To cancel, press the BANK button again.

Note

When you press the BANK button and the "BANK" indication does not come on the display window, the unit will not play the disc with the Delete Bank function even if the PLAY/SKIP edit mode was previously set to the disc.

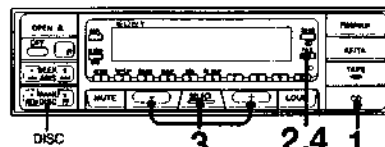

Changing the Title and the Delete Bank Settings

- 1** Play the disc you wish to edit.
- 2** Press the FILE button for more than two seconds to enter the name edit mode.
- 3** Press the SELECT button to make the part you wish to edit flashing. Select the letters and numbers using the (←) or (→) button.

If you wish to change the titles of other discs, repeat steps 1 through 3 on the discs after changing them with the DISC or CD button.
- 4** Press the FILE button for more than two seconds.

Now the new title is registered.

When you change the title, the PLAY/SKIP setting of the Delete Bank function will not be erased at the same time.

Note

If you wish to change the PLAY/SKIP settings of the Delete Bank function, press the FILE button lightly to enter the PLAY/SKIP mode while the unit is in the name edit mode in the step 2. While checking the disc and track numbers on the display window, change the setting by the AMS and SELECT buttons. Press the FILE button lightly again and the unit will enter the name edit mode again.

Maintenance

Fuse Replacement

If the fuse blows, check the power connection and replace the fuse. If the fuse blows again after replacement, there may be an internal malfunction. In this case, consult your nearest Sony dealer.








Warning
Use the specified ampere fuse.
Use of a higher amperage fuse may cause serious damage.



3,4,5, 2,6 1

When you erase the title, the PLAY/SKIP mode of the Delete Bank settings will be erased as well.

Erasing a Title

1	Select the CD changer and play any disc.
2	Press the FILE button for more than two seconds to enter the name edit mode. 
3	Press the number 9 button while pressing the SELECT button.   The titles stored in the CD changer currently selected will appear on the display window.
4	Press the  or  button to search for the title you wish to erase.
5	Press the SELECT button for more than two seconds after the title you wish to erase is displayed.  Repeat steps 4 and 5 on other titles, if necessary.
6	Press the FILE button for more than two seconds.  Now the title and the Delete Bank settings are erased. The unit goes back to the normal CD playing mode.

The alternative method to erase a title
You can erase a title by selecting eight "1" (underbars) as described in step 3 of "Changing the Title and the Delete Bank Settings" (Page 51)


Cleaning the Head and the Tape Path

Prolonged use may contaminate the tape head and the tape path. Contamination causes sound drop-outs in playback. Clean the tape head and the tape path every two weeks to enjoy optimum hi-fi stereo sound. Use a commercially available cleaning cassette.


SECTION 2 DISASSEMBLY

Note : Follow the disassembly procedure in the numerical order given.


2-1. COVER

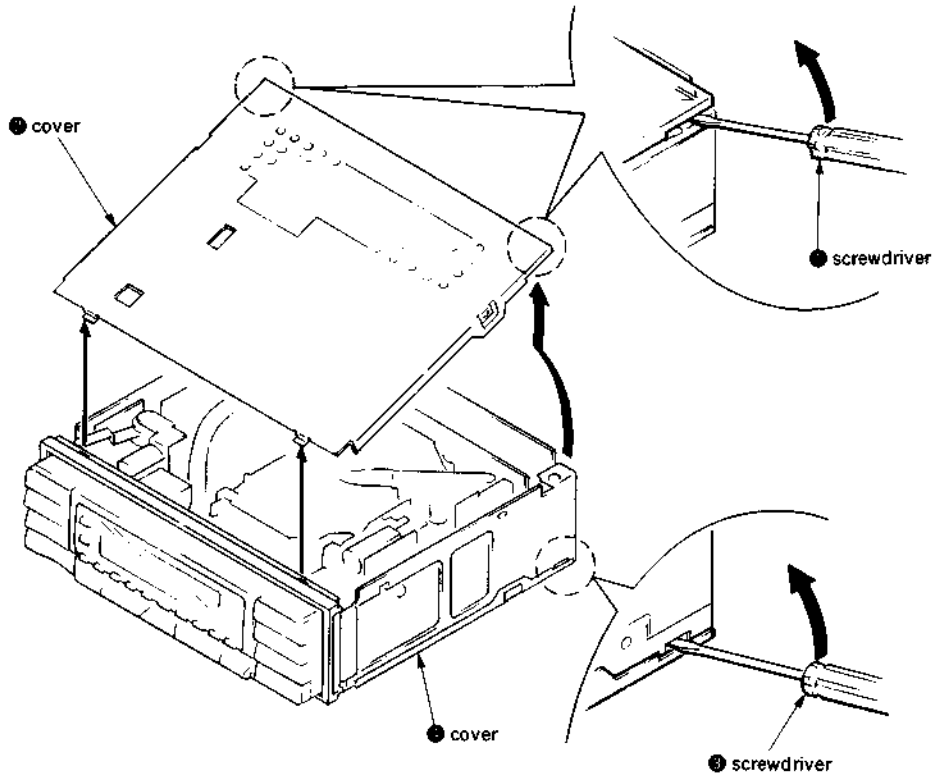


2-2. FRONT PANEL ASSY

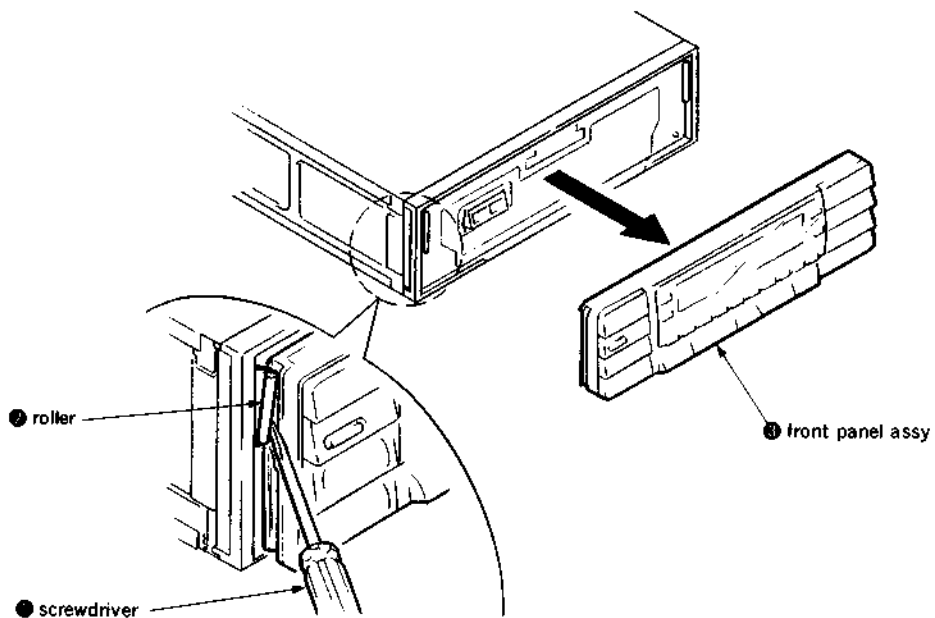

2-3. MECHANISM DECK BLOCK

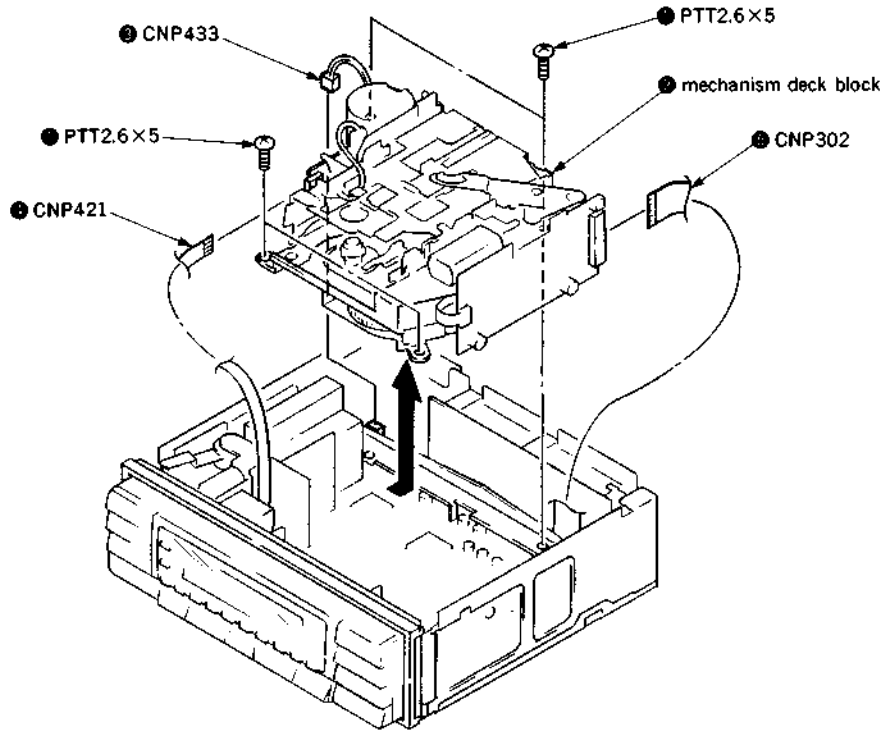

2-4. POWER BOARD

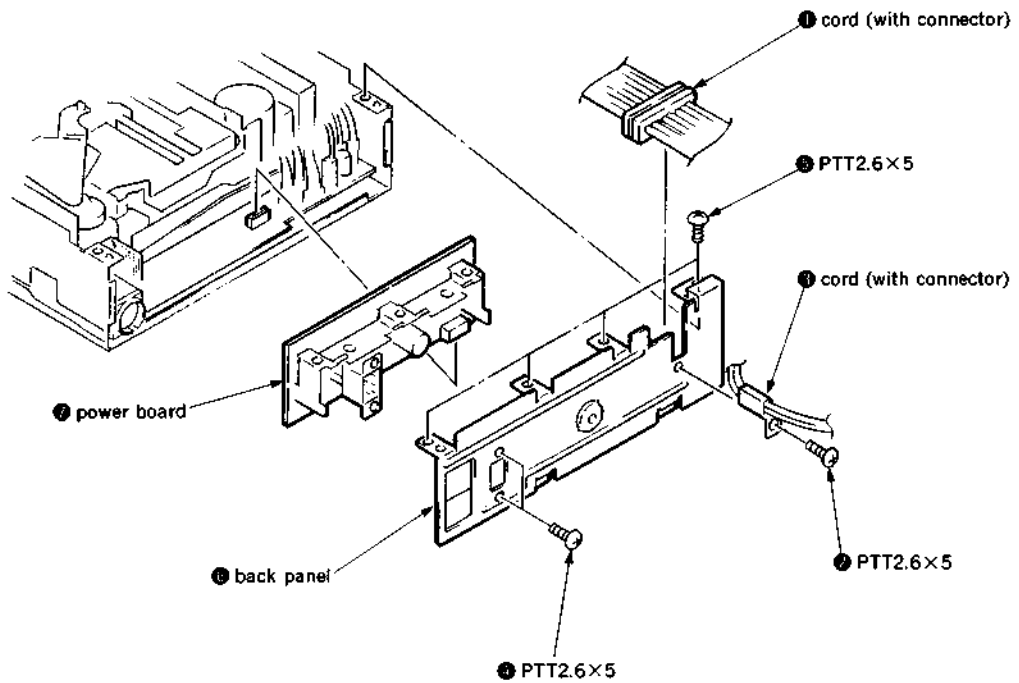


SECTION 3 DIAGRAMS

3-1. PIN DESCRIPTIONS

Master Microcomputer IC501 (μ PD75116GF-E47-3BE)

Pin No.	Name	I/O	Description																																													
63	POS 3	I	Mechanism Deck Position Detection pin. (See the table below.) *(With tape rotation in normal direction)																																													
64	POS 2	I																																														
1	POS 1	I																																														
2	POS 0	I																																														
			<table border="1" style="width: 100%; text-align: center;"> <thead> <tr> <th></th> <th>EJECT</th> <th>STOP</th> <th>↔</th> <th>FF</th> <th>↔</th> <th>REW</th> <th>↔</th> <th>PLAY</th> </tr> </thead> <tbody> <tr> <td>POS 0</td> <td>L</td> <td>L</td> <td>L</td> <td>H</td> <td>H</td> <td>H</td> <td>H</td> <td>H</td> </tr> <tr> <td>POS 1</td> <td>H</td> <td>H</td> <td>L</td> <td>L</td> <td>L</td> <td>H</td> <td>H</td> <td>H</td> </tr> <tr> <td>POS 2</td> <td>H</td> <td>H</td> <td>H</td> <td>H</td> <td>L</td> <td>L</td> <td>L</td> <td>H</td> </tr> <tr> <td>POS 3</td> <td>L</td> <td>H</td> <td>H</td> <td>H</td> <td>H</td> <td>H</td> <td>L</td> <td>L</td> </tr> </tbody> </table> <p>H : High input, L : Low input</p>		EJECT	STOP	↔	FF	↔	REW	↔	PLAY	POS 0	L	L	L	H	H	H	H	H	POS 1	H	H	L	L	L	H	H	H	POS 2	H	H	H	H	L	L	L	H	POS 3	L	H	H	H	H	H	L	L
	EJECT	STOP	↔	FF	↔	REW	↔	PLAY																																								
POS 0	L	L	L	H	H	H	H	H																																								
POS 1	H	H	L	L	L	H	H	H																																								
POS 2	H	H	H	H	L	L	L	H																																								
POS 3	L	H	H	H	H	H	L	L																																								
3	LINK OFF	O	Not used.																																													
4	AMP ON	O	Not used.																																													
5	POWER-ON	O	Power ON/OFF Output pin. Set this output "High" to turn power on. Set it "Low" to turn all power off.																																													
6	ACC-ON	O	Button Illumination Power ON/OFF Output pin. Set this output "High" to turn the power on.																																													
7	RESET	I	Reset pin.																																													
8	X2	—	Connection pin for System Clock Oscillation. 4.19MHz connection.																																													
9	X1	I																																														
10	DM CLOSE	O	Nose Open/Close Motor Control pin.																																													
11	DM OPEN	O																																														
			<table border="1" style="width: 100%; text-align: center;"> <tbody> <tr> <td style="width: 33%;"></td> <td style="width: 33%;">DM OPEN</td> <td style="width: 33%;">High</td> <td style="width: 33%;">Low</td> </tr> <tr> <td style="width: 33%;">DM CLOSE</td> <td style="width: 33%;"></td> <td style="width: 33%;">—</td> <td style="width: 33%;">Close</td> </tr> <tr> <td style="width: 33%;">High</td> <td style="width: 33%;"></td> <td style="width: 33%;">Open</td> <td style="width: 33%;">Stopped</td> </tr> <tr> <td style="width: 33%;">Low</td> <td style="width: 33%;"></td> <td style="width: 33%;"></td> <td style="width: 33%;"></td> </tr> </tbody> </table>		DM OPEN	High	Low	DM CLOSE		—	Close	High		Open	Stopped	Low																																
	DM OPEN	High	Low																																													
DM CLOSE		—	Close																																													
High		Open	Stopped																																													
Low																																																
12	SYSTEM RESET	O	Pin which resets all of slave microcomputers that are connected and are communicating on the UNILINK BUS. Switching this output from "Low" to "High" level causes resetting. Usually it is kept "High".																																													
13	SYNC	O	Pin which outputs the pulse for determining timing of communication to data line. (UNILINK BUS interface SYNC pin)																																													
14	MUTE	O	Output pin used to enable Audio Muting. This output is kept "High" during audio muting.																																													
15	CLK VOL	O	Pin for Clock Output to the electronics VOL IC (IC 321: LC7537AN).																																													
16	DATA VOL	O	Pin for Data Output to the electronics VOL IC.																																													
17	CE VOL	O	Pin for CE Output to the electronics VOL IC. This output is used as the latch signal to send data.																																													
18	NOSE	I	Initialization pin which determines whether the nose is removed or not. When this input is "High", there are no nose removal failure caution alarm, no cassette EJECT and no nose open function (by means of pressing OPEN button for two sec).																																													
19	B/C (INT)	I	Initialization pin which determines whether Dolby B NR only or Dolby B and C NR. When "Low", this input sets both B and C. When "High", it sets B only.																																													

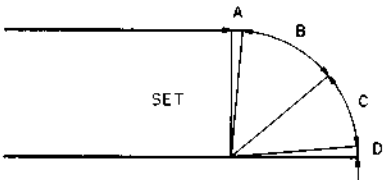Pin No.	Name	I/O	Description															
20	CLOCK	I	Initialization pin which determines whether the internal clock is present or not. When "Low", this input initializes the system with the clock present.															
21	POWER SELECT	I	Power Select switch (initialization). Set this input "Low" to select Power select OFF setting (to cope with cars without accessory position).															
22	PL	O	MD Plunger Control pin.															
23	CM	O	MD Capstan Motor Control pin.															
24	LM-	O	} MD Loading Motor Control pin															
25	LM+	O																
			<table border="1"> <tr> <td>LM- \ LM+</td> <td>High</td> <td>Low</td> </tr> <tr> <td>High</td> <td>Brake</td> <td>Loading Direction</td> </tr> <tr> <td>Low</td> <td>Eject Direction</td> <td>Stopped</td> </tr> </table>	LM- \ LM+	High	Low	High	Brake	Loading Direction	Low	Eject Direction	Stopped						
LM- \ LM+	High	Low																
High	Brake	Loading Direction																
Low	Eject Direction	Stopped																
26	Vss	—	Vss pin.															
27	DP 0	I	} Door (Nose) Position Detection pin.															
28	DP 1	I																
			 <table border="1" data-bbox="1010 1003 1489 1120"> <thead> <tr> <th>Position</th> <th>A</th> <th>B</th> <th>C</th> <th>D</th> </tr> </thead> <tbody> <tr> <td>DP0</td> <td>H</td> <td>H</td> <td>L</td> <td>L</td> </tr> <tr> <td>DP1</td> <td>H</td> <td>L</td> <td>L</td> <td>H</td> </tr> </tbody> </table>	Position	A	B	C	D	DP0	H	H	L	L	DP1	H	L	L	H
Position	A	B	C	D														
DP0	H	H	L	L														
DP1	H	L	L	H														
29	NSW	I	Nose Presence Detection pin. When "Low", this input indicates that the nose is removed.															
30	CSW	I	Cassette Tape Presence Detection pin. When "High", this input indicates that cassette tape is present.															
31	REEL 1	I	Cassette Tape Rotation Detection pin (this input indicates Take up side when tape is being rotated in normal direction).															
32	REEL 2	I	Cassette Tape Rotation Detection pin (this input indicates Supply side when tape is being rotated in normal direction).															
33	F/R	I	Cassette Tape Run Direction Detection pin. When "Low", this input indicates REVERSE.															
34	—	—	Not used. (Connected to GND.)															
35	—	—	Not used. (Connected to GND.)															
36	—	—	Not used. (Connected to GND.)															
37	CLK OUT	O	Serial Communication Clock Output pin. (UNILINK BUS Interface Clock Output pin)															
38	BUS ON	O	UNILINK BUS Interface Bus ON Output terminal. Set this output "Low" to enable communication on the bus.															
39	KEY RESET	O	Pin which resets the KEY DISPLAY microcomputer (IC 702).															
40	BEEP	O	BEEP Output pin.															
41	SI	I	Serves as both Serial Data Input pin and Detection pin for Communication Request from slave. (UNILINK BUS Interface Data Input pin)															

Pin No.	Name	I/O	Description
42	SO	O	Serial Data Output pin. (UNILINK BUS Interface Data Output pin)
43	CLK IN	I	Serial Communication Clock Input pin.
44	BU CHECK	I	Power Voltage Detection pin.
45	ACC CHECK	I	Accessory Voltage Detection pin. When "High", this input indicates ACC OFF.
46	TEL MUTE	I	Pins which detects a telephone call. This input becomes "Low" to mute -20dB audio signal. It becomes "High" to return the signal to its original VOL level.
47	—	—	Not used. (Connected to GND.)
48	TV/TV1,2	I	Intialization pin for the number of bands (preset count) for TV when the Hide-away TV tuner is connected. When "Low", this input sets 1 band (preset count to 10). When "High", it sets 2 bands for TV1,TV2 (preset count to 20).
49	KEY 5V	O	Power Control pin for the KEY DISPALY microcomputer. Set this output "Low" to turn the power on.
50	AUX ON	O	This output is "Low" when supplied as an external input of UNILINK IN AUDIO to CD, TV, etc. It supplies high impedance to other destinations.
51	D ON	O	This output is "Low" when sound is being produced from cassette tape. Ohterwise, it supplies high impedance.
52	—	—	Not used.
53	—	—	Not used.
54	ANT ON	O	This output supplies high impedance when the tuner or TV is on. It is "Low" when any other source is on.
55	—	—	Not used.
56	—	—	Not used.
57	NC	—	Connected to VDD.
58	V _{DD}	—	V _{DD} pin.
59	B/C	O	This output is "High" when Dolby B NR is on. It is "Low" output when C NR is on.
60	DNR ON	O	This output is "Low" when Dolby NR is on. It is "High" when Dolby NR is off.
61	AMS IN	I	Detection pin which determines whether tape sound is present or not. This input is "Low" when tape sound is present.
62	MTL	I	Tape NORMAL/METAL Detection pin. This input is "Low" when normal tape is used.


Key Display Microcomputer IC702 (μ PD75008GB-632-3B4)

Pin No.	Name	I/O	Description
44	KI7	I	KEY SCAN Input pin.
1	KI6	I	
2	KI5	I	
3	KI4	I	
4	KI3	I	
5	KI2	I	
6	KI1	I	
7	KI0	I	KEY SCAN Output pin.
8	KO3	O	
9	KO2	O	
10	KO1	O	
11	KO0	O	
12	NC	—	(Connected to VDD.)
13	—	—	Not used.
14	—	—	
15	—	—	
16	—	—	
17	V _{SS}	—	V _{SS} pin.
18	XT1	—	(Connected to GND.)
19	XT2	—	Not used.
20	RESET	I	Reset pin.
21	X1	I	Connection pin for System Clock oscillation. 4.19MHz connection.
22	X2	—	
23	LCD CLK	O	Pin for Clock Output to LCD DRIVER IC (IC 703: TC9240F)
24	LCD DATA	O	Pin for Data Output to LCD DRIVER IC.
25	LCD CE	O	Pin for CE Output to LCD DRIVER IC. This output is used as the latch signal to send data.
26	LCD INH	O	Pin for INH Output to LCD DRIVER IC.
27	LINK OFF	O	Not used.
28	REQ	O	UNILINK BUS Interface Request pin. This pin is "High" to request communication from the master microcomputer (IC 501).
29	DATA IN	I	Serves as both Serial Data Input pin and Detection pin for Communication Request from slave. (UNILINK BUS Interface Data Input pin)
30	DATA OUT	O	Serial Data Output pin. (UNILINK BUS Interface Data Output pin)
31	CLK IN	I	Serial Communication Clock Input pin. (UNILINK BUS Interface Clock Input pin)
32	BU CHECK	I	Power Voltage Detection pin.
33	—	—	(Connected to GND.)
34	NC	—	(Connected to VDD.)
35	TV CONT	I	Not used.
36	BUS ON	I	UNILINK BUS Interface Bus ON Terminal. When this output is "Low", communication on the bus is enabled.

Pin No.	Name	I/O	Description
37	SIRCS	I	Infrared Remote Control Input pin.
38	NC	—	(Connected to V _{DD} .)
39	V _{DD}	—	V _{DD} pin.
40	LCD ON	O	LCD Back Illumination and LCD DRIVER IC Power Control pin.
41	ACC-ON ILL	O	Button Illumination Output for function keys. This output is "High" when ACC is ON and it is "Low" when ACC is OFF (with Power Select switch selected ON).
42	P-ON ILL	O	Button Illumination Output pin for buttons other than function keys. This output is "High" when power is turned on and it is "Low" when power is turned off.
43	COLOR	O	Illumination Color Select Output pin. Set this output "High" to select Green. Set it "Low" to select Amber.

Pin No.	Name	I/O	Description
37	SIRCS	I	Infrared Remote Control Input pin.
38	NC	—	(Connected to V _{DD} .)
39	V _{DD}	—	V _{DD} pin.
40	LCD ON	O	LCD Back Illumination and LCD DRIVER IC Power Control pin.
41	ACC-ON ILL	O	Button Illumination Output for function keys. This output is "High" when ACC is ON and it is "Low" when ACC is OFF (with Power Select switch selected ON).
42	P-ON ILL	O	Button Illumination Output pin for buttons other than function keys. This output is "High" when power is turned on and it is "Low" when power is turned off.
43	COLOR	O	Illumination Color Select Output pin. Set this output "High" to select Green. Set it "Low" to select Amber.

3-2. CIRCUIT BOARDS LOCATION

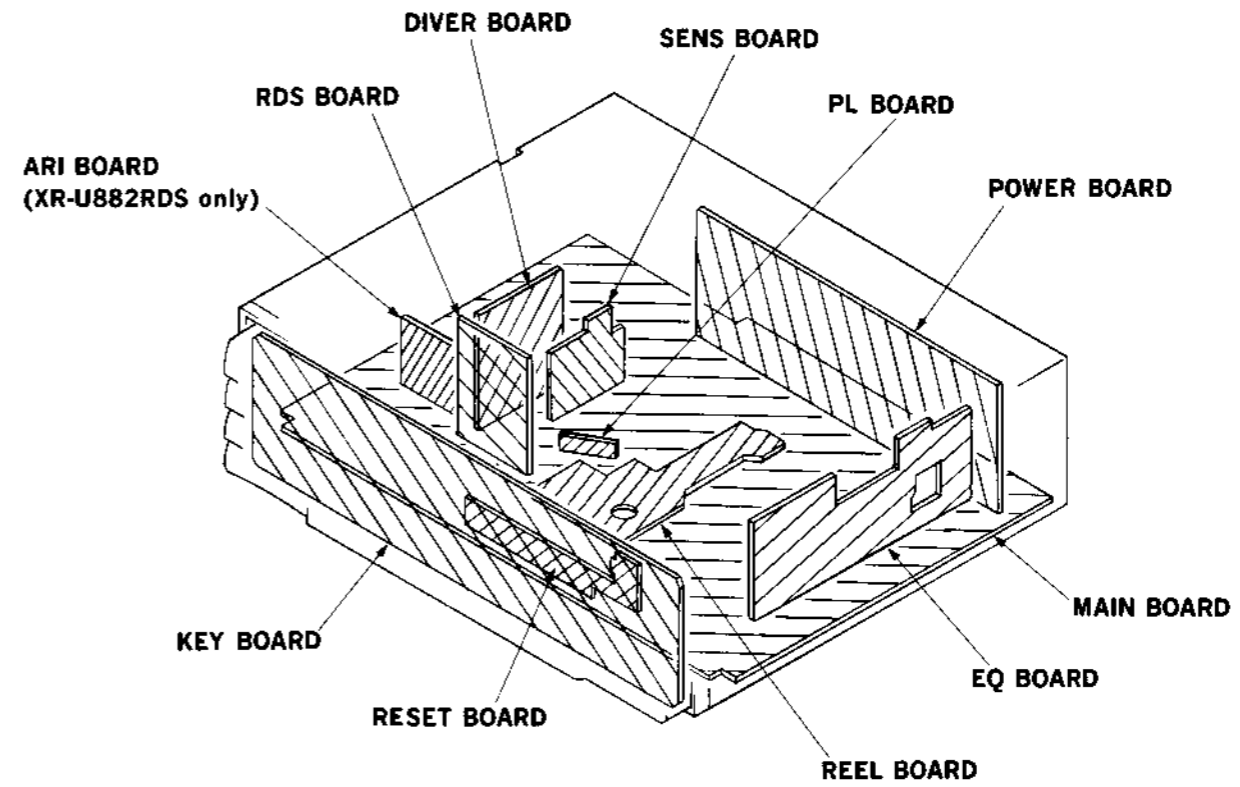

3-3. PRINT

A	
B	
C	
D	
E	
F	

TO M
BO
CN

(See pa



• Ser

Ref.
D50
IC40
IC41
IC50
IC51
Q40
Q41

MC-Service

3-3. PRINTED WIRING BOARDS —ARI, RDS SECTION—

• Refer to page49 for Semiconductor Lead Layouts.

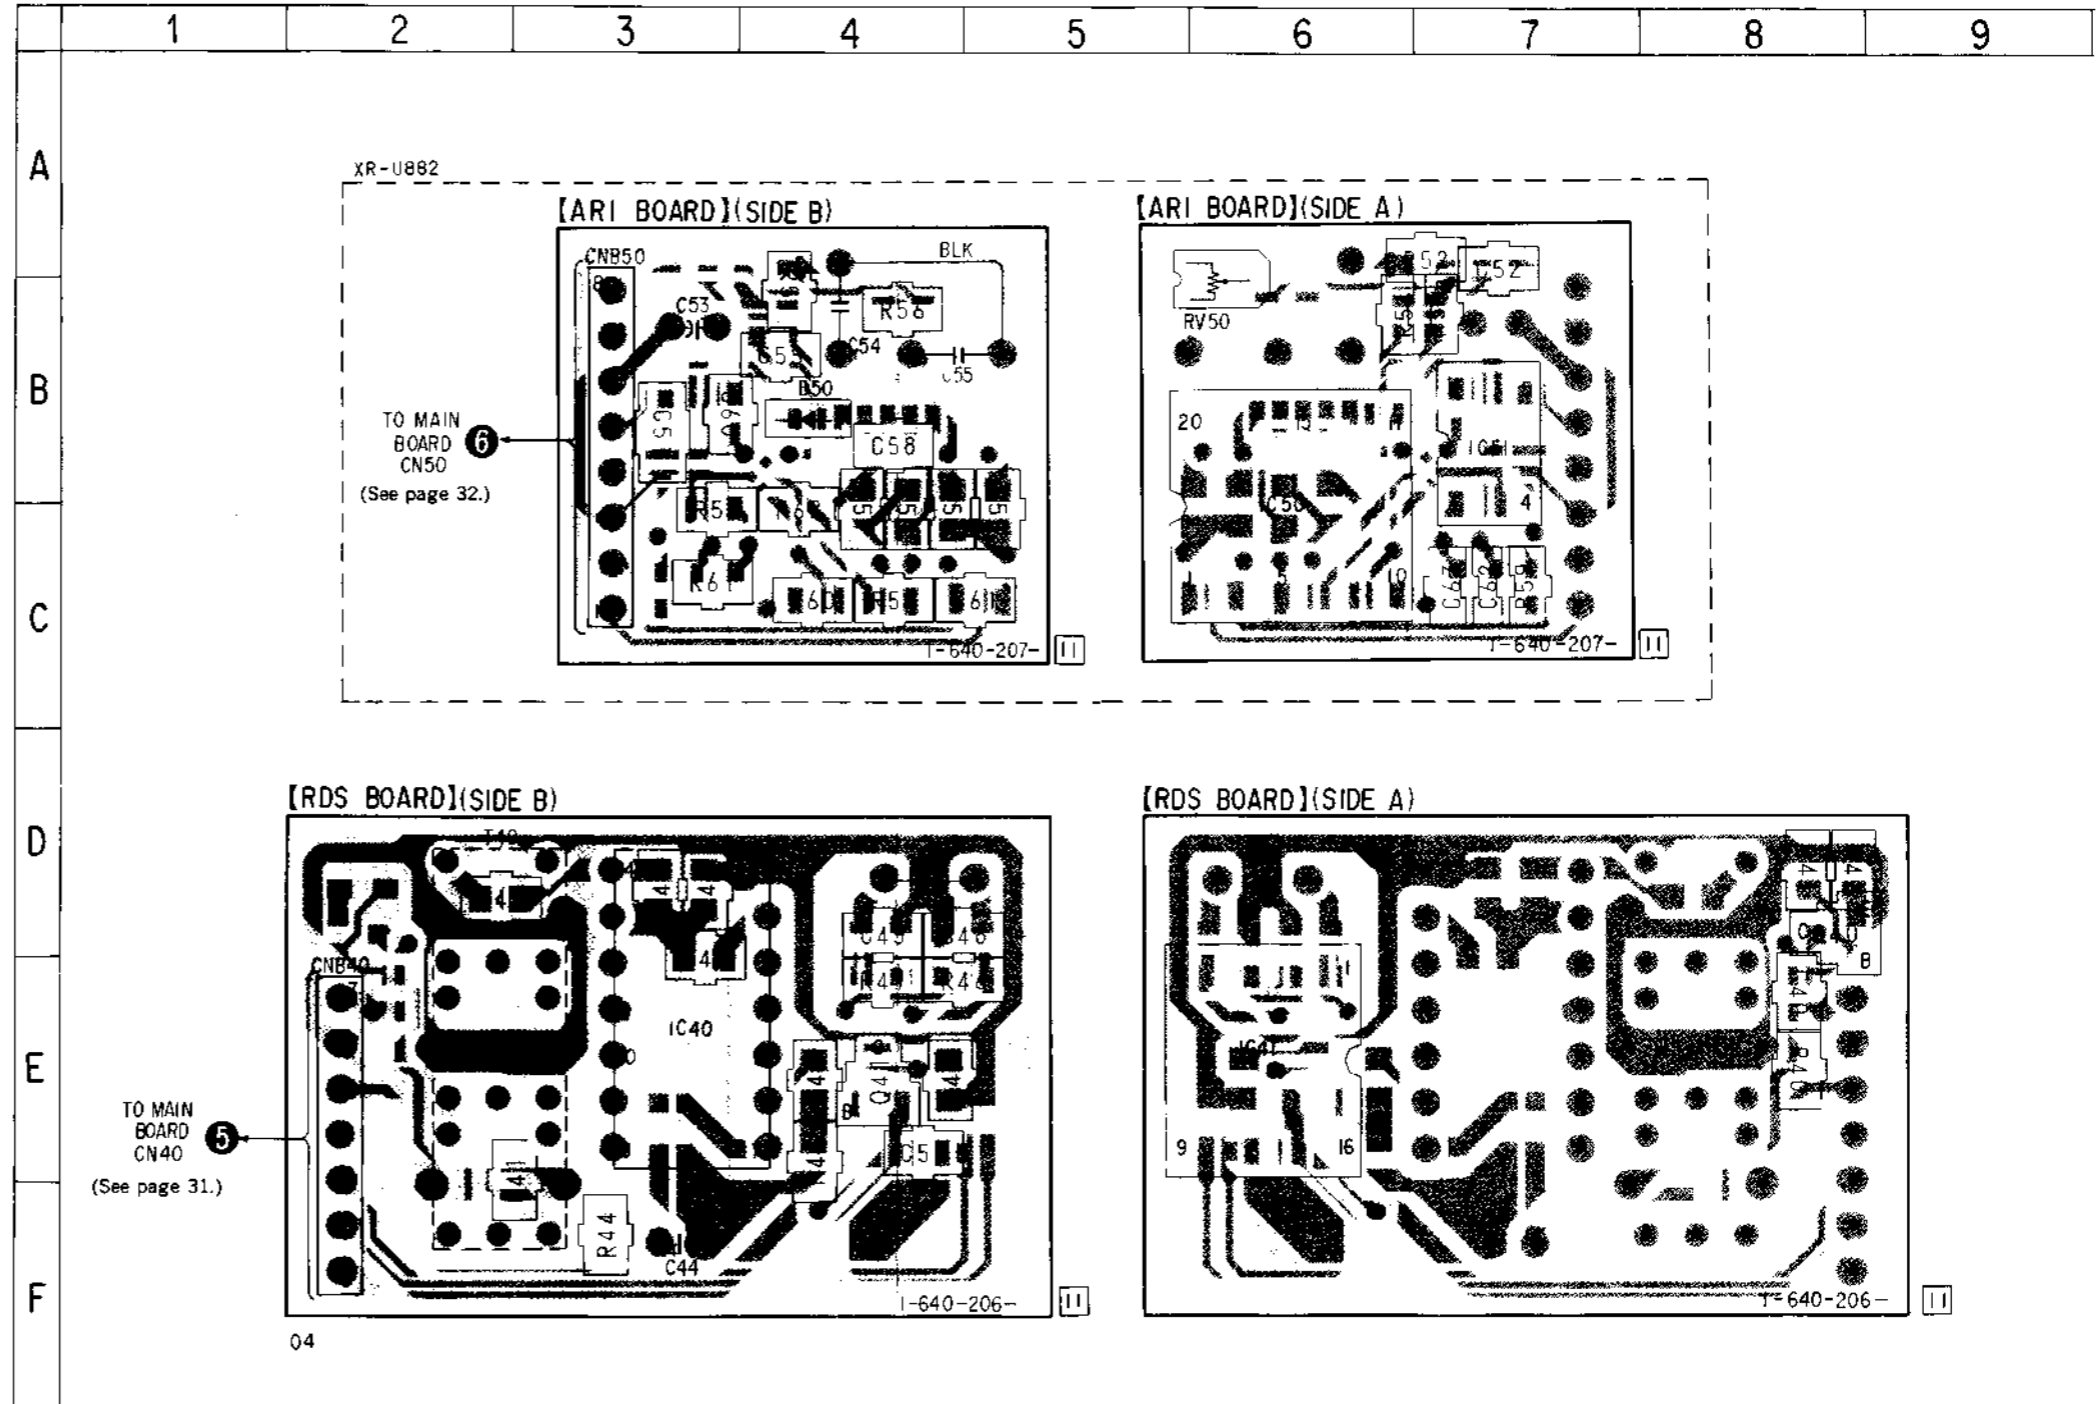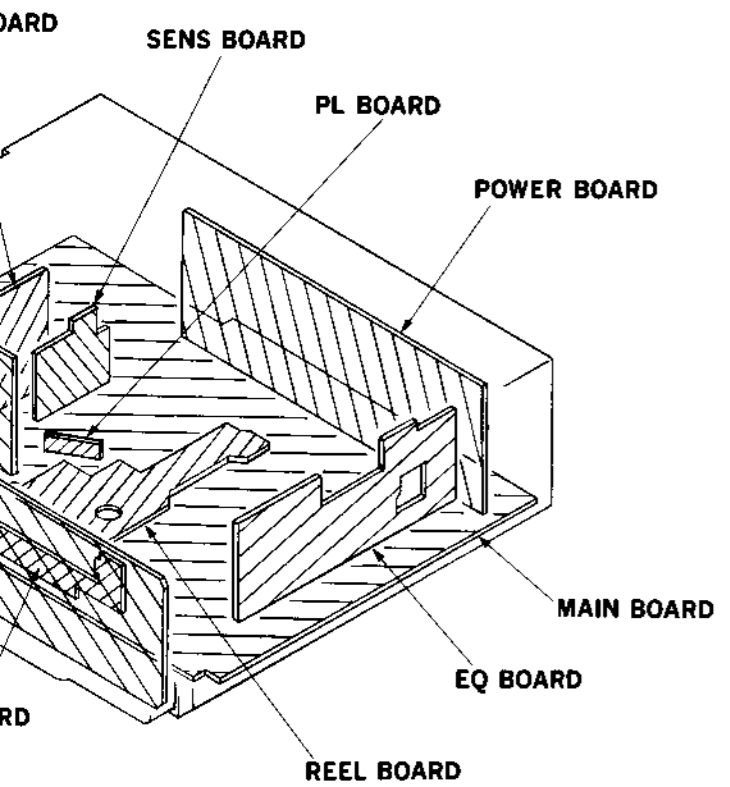

• Semiconductor Location

Ref. No.	Location
D50	B-4
IC40	E-3
IC41	E-6
IC50	B-6
IC51	B-7
Q40	D-8
Q41	E-4

Note:
 • : parts extracted from the conductor side.
 • • : Through hole.
 • : Pattern on the side which is seen.
 • : Pattern of the rear side.


MC-Service

• Semiconductor Location

Ref. No.	Location	Ref. No.	Location	Ref. No.	Location
D1	D-29	IC60	E-5	Q518	G-10
D2	J-28	IC61	H-5	Q519	G-11
D10	F-32	IC121	F-7	Q520	B-11
D11	F-31	IC122	E-7	Q521	H-8
D12	B-32	IC123	C-7	Q522	B-10
D20	E-32	IC221	F-10	Q523	B-10
D21	E-31	IC222	E-10	Q524	C-11
D22	C-32	IC223	C-10	Q525	G-9
D60	E-26	IC311	D-12	Q526	K-6
D61	C-27	IC321	E-9	Q527	K-8
D62	H-26	IC322	C-9	Q528	K-7
D63	C-25	IC431	E-14	Q529	K-7
D320	F-12	IC501	H-17	Q530	H-22
D321	C-27	IC502	J-19	Q531	K-4
D322	D-24	IC503	J-11	Q532	K-3
D431	B-27	IC504	G-19	Q533	B-12
D432	G-14	IC505	K-3	Q534	B-11
D433	E-14	IC506	I-13	Q535	I-6
D434	D-16				
D501	I-11	Q1	E-27		
D502	I-13	Q2	G-27		
D503	B-12	Q3	H-1		
D504	J-11	Q4	I-3		
D505	C-6	Q10	F-32		
D506	I-11	Q11	B-31		
D507	I-12	Q12	C-31		
D508	J-17	Q13	B-32		
D509	K-6	Q20	E-32		
D510	K-26	Q21	C-31		
D511	K-25	Q23	C-32		
D512	K-24	Q60	D-3		
D513	B-16	Q61	C-4		
D514	B-16	Q62	C-4		
D515	J-8	Q63	D-7		
D516	G-20	Q121	C-7		
D517	G-10	Q122	B-7		
D518	G-10	Q124	C-5		
D519	F-11	Q221	C-10		
D520	B-12	Q222	B-8		
D521	B-21	Q224	C-5		
D522	G-22	Q311	F-11		
D523	G-21	Q431	B-27		
D524	K-23	Q432	C-3		
D525	C-6	Q433	E-14		
D526	C-6	Q434	F-14		
D527	K-31	Q501	F-14		
D528	K-33	Q502	J-17		
D529	K-27	Q503	I-11		
D530	K-4	Q504	J-13		
D531	I-16	Q505	H-14		
D532	C-6	Q506	K-24		
D533	C-19	Q507	H-19		
D534	G-22	Q508	H-20		
D535	B-3	Q509	K-25		
D536	K-25	Q510	J-13		
D537	H-24	Q511	I-21		
		Q512	K-8		
IC1	J-3	Q513	B-12		
IC10	G-31	Q514	G-23		
IC11	B-31	Q515	H-23		
IC20	D-31	Q516	D-6		
IC42	J-9	Q517	J-11		

3-4. PRINTED WIRING BOARDS —MAIN, DIVER, RST SECTION—

• Refer to page49 for Semiconductor Lead Layouts.

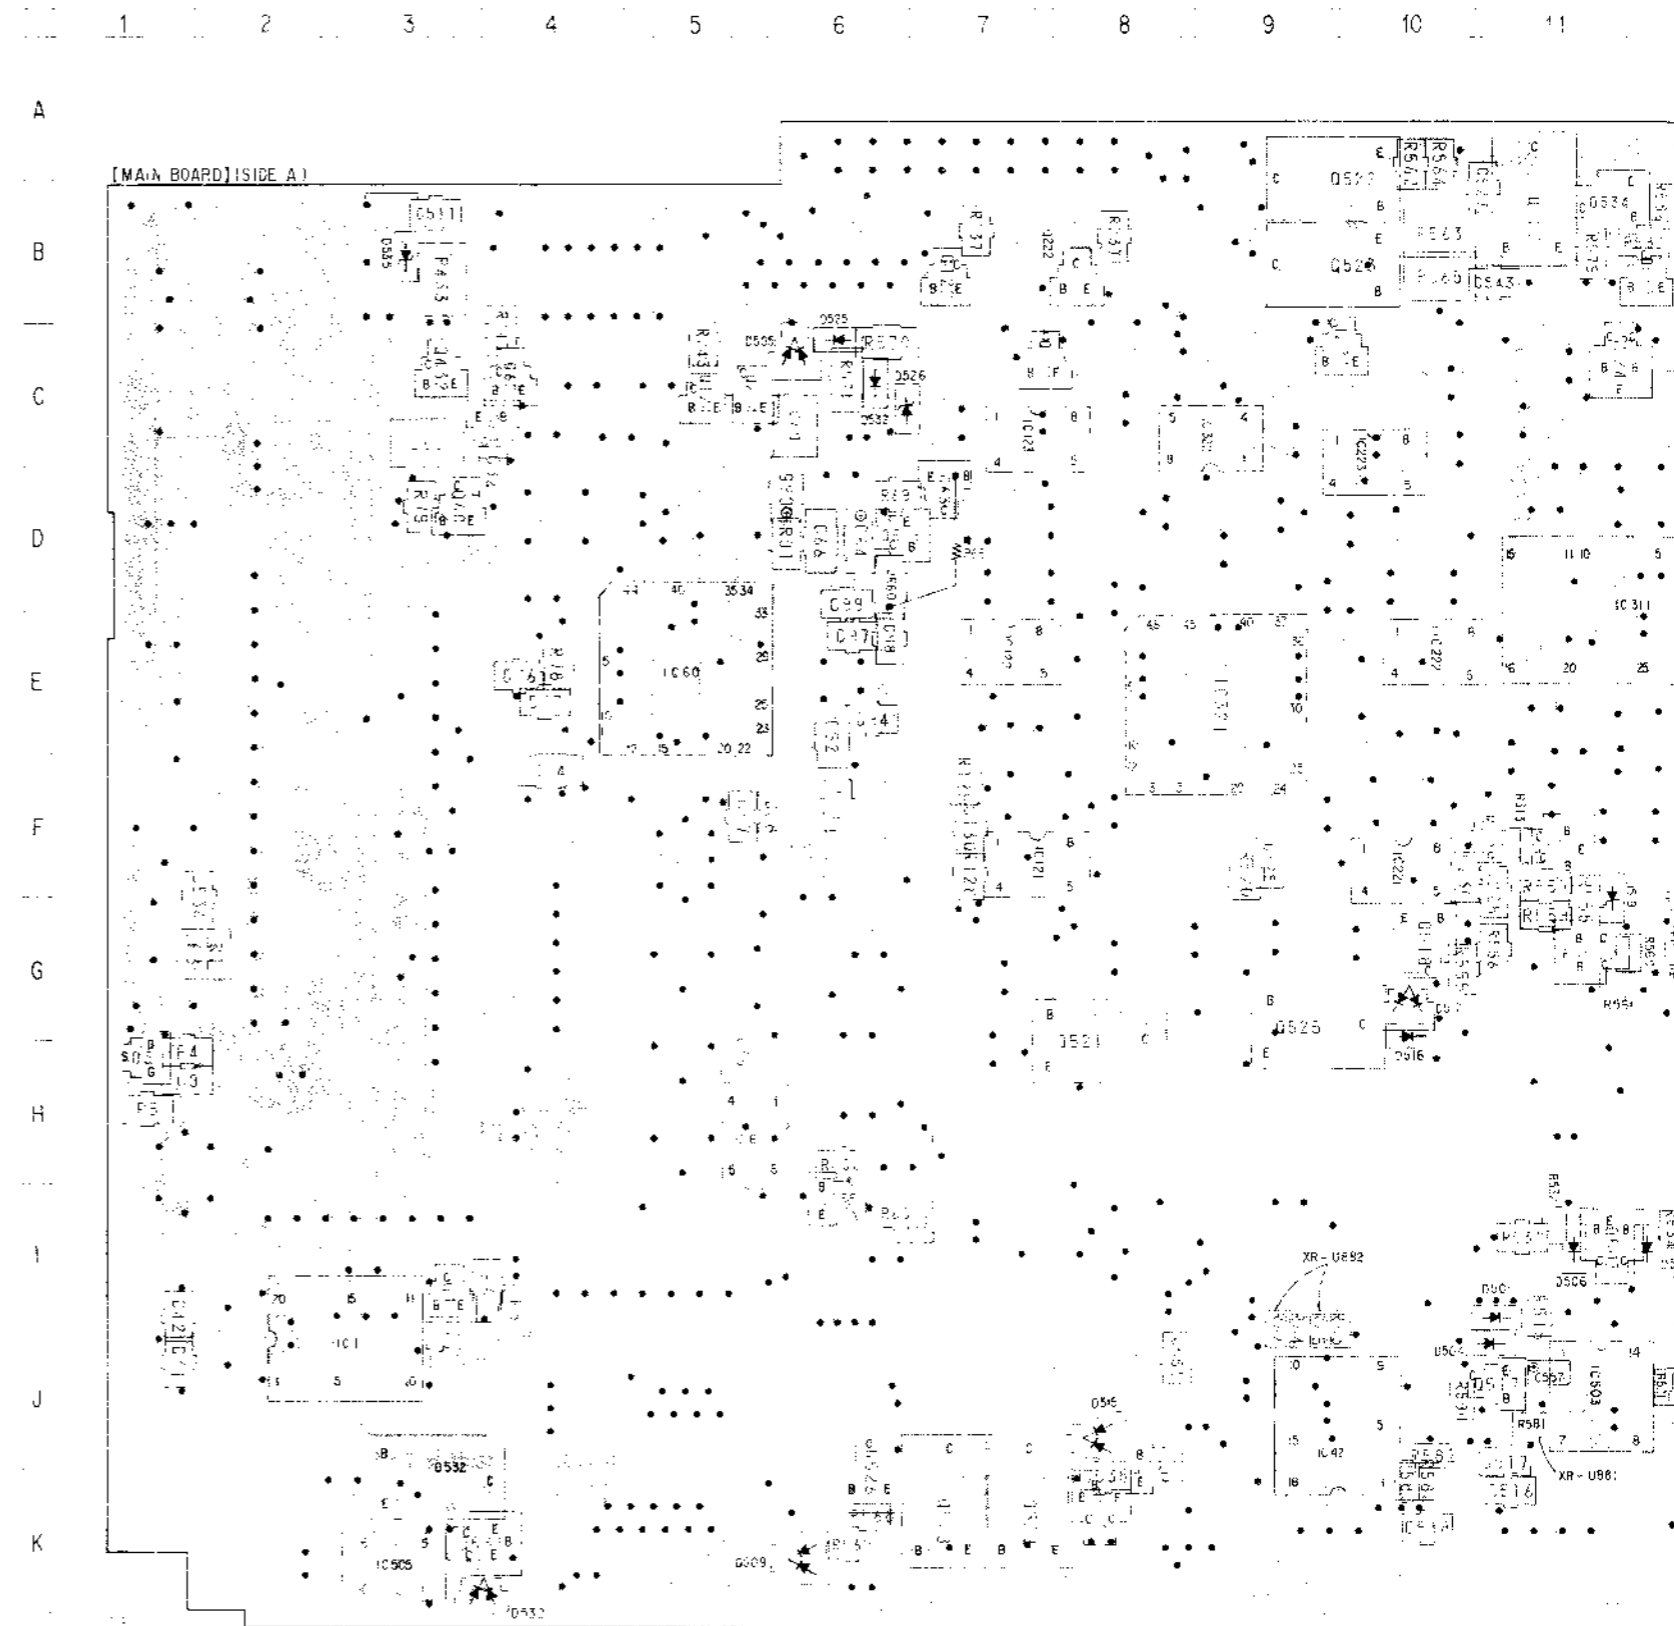

- Note:
- parts extracted from the component side
 - parts extracted from the conductor side
 - ■ parts mounted on the conductor side
 - Through hole.
 - Pattern on the side which is seen.


D WIRING BOARDS —MAIN, DIVER, RST SECTION—

• Refer to page49 for Semiconductor Lead Layouts.


2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23

(See page 44)

[SIDE A]

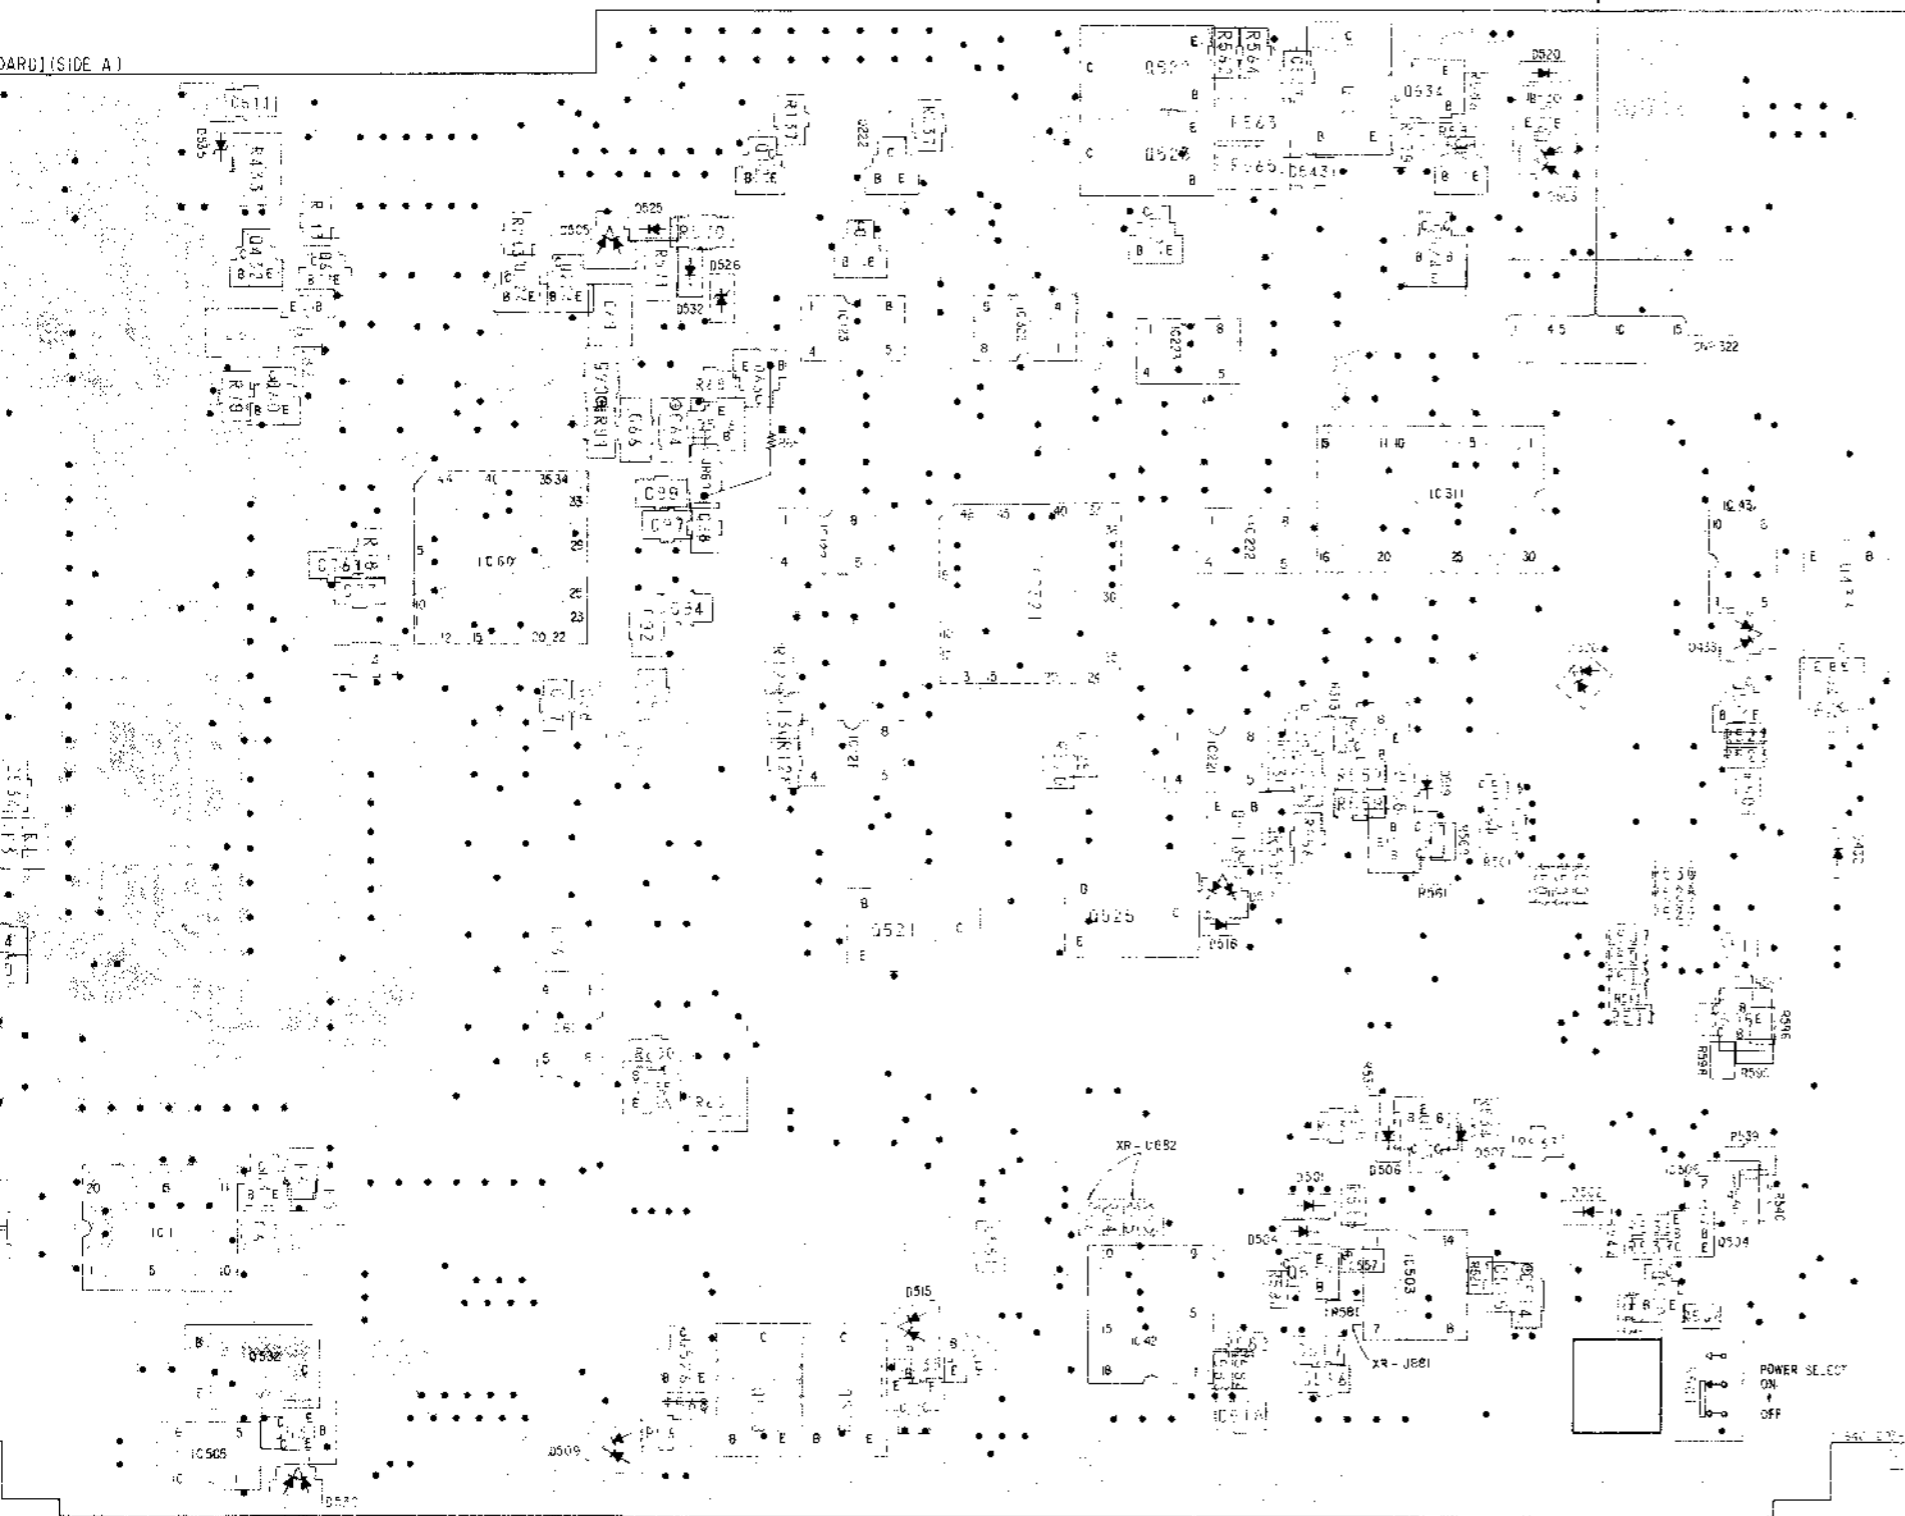

[MAIN BOARD] SIDE B:

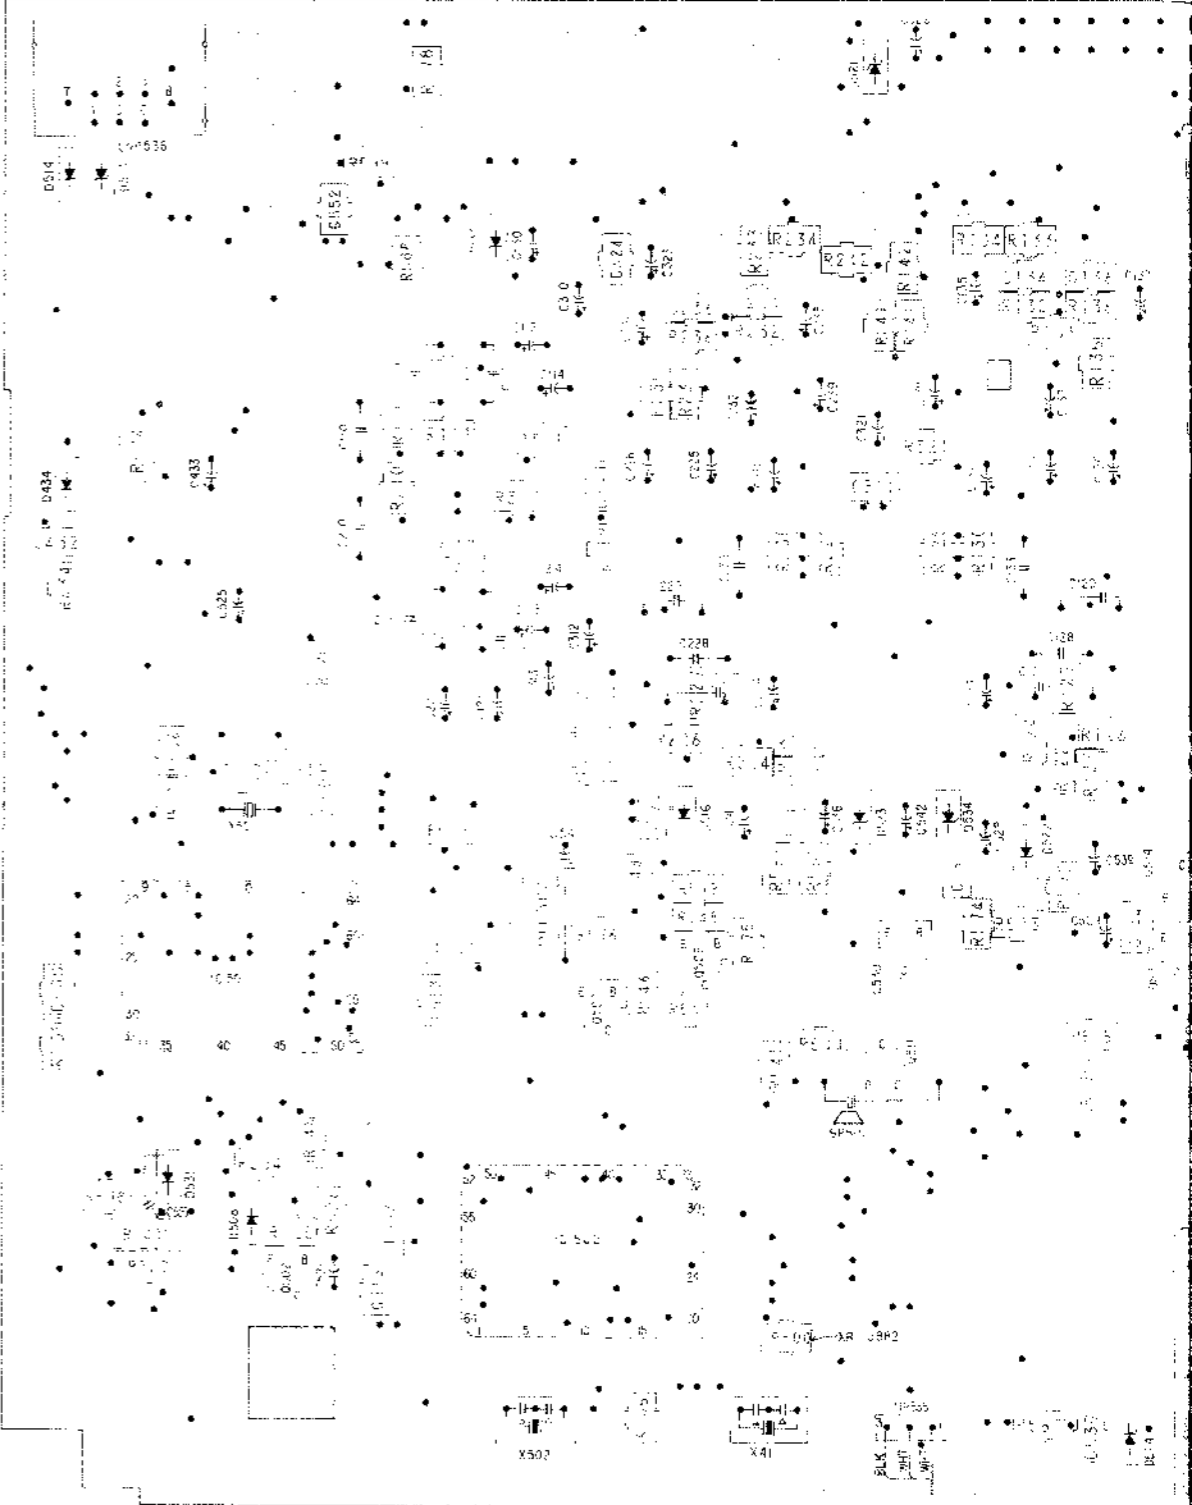


- Note:
- : parts extracted from the component side
 - - - : parts extracted from the conductor side
 - : parts mounted on the conductor side
 - : Through hole.
 - : Pattern on the side which is seen.

MC-Service



15 16 17 18 19 20 21 22 23 24 25 26 27 28 29 30 31 32 33 34 35 36

(See page 43)

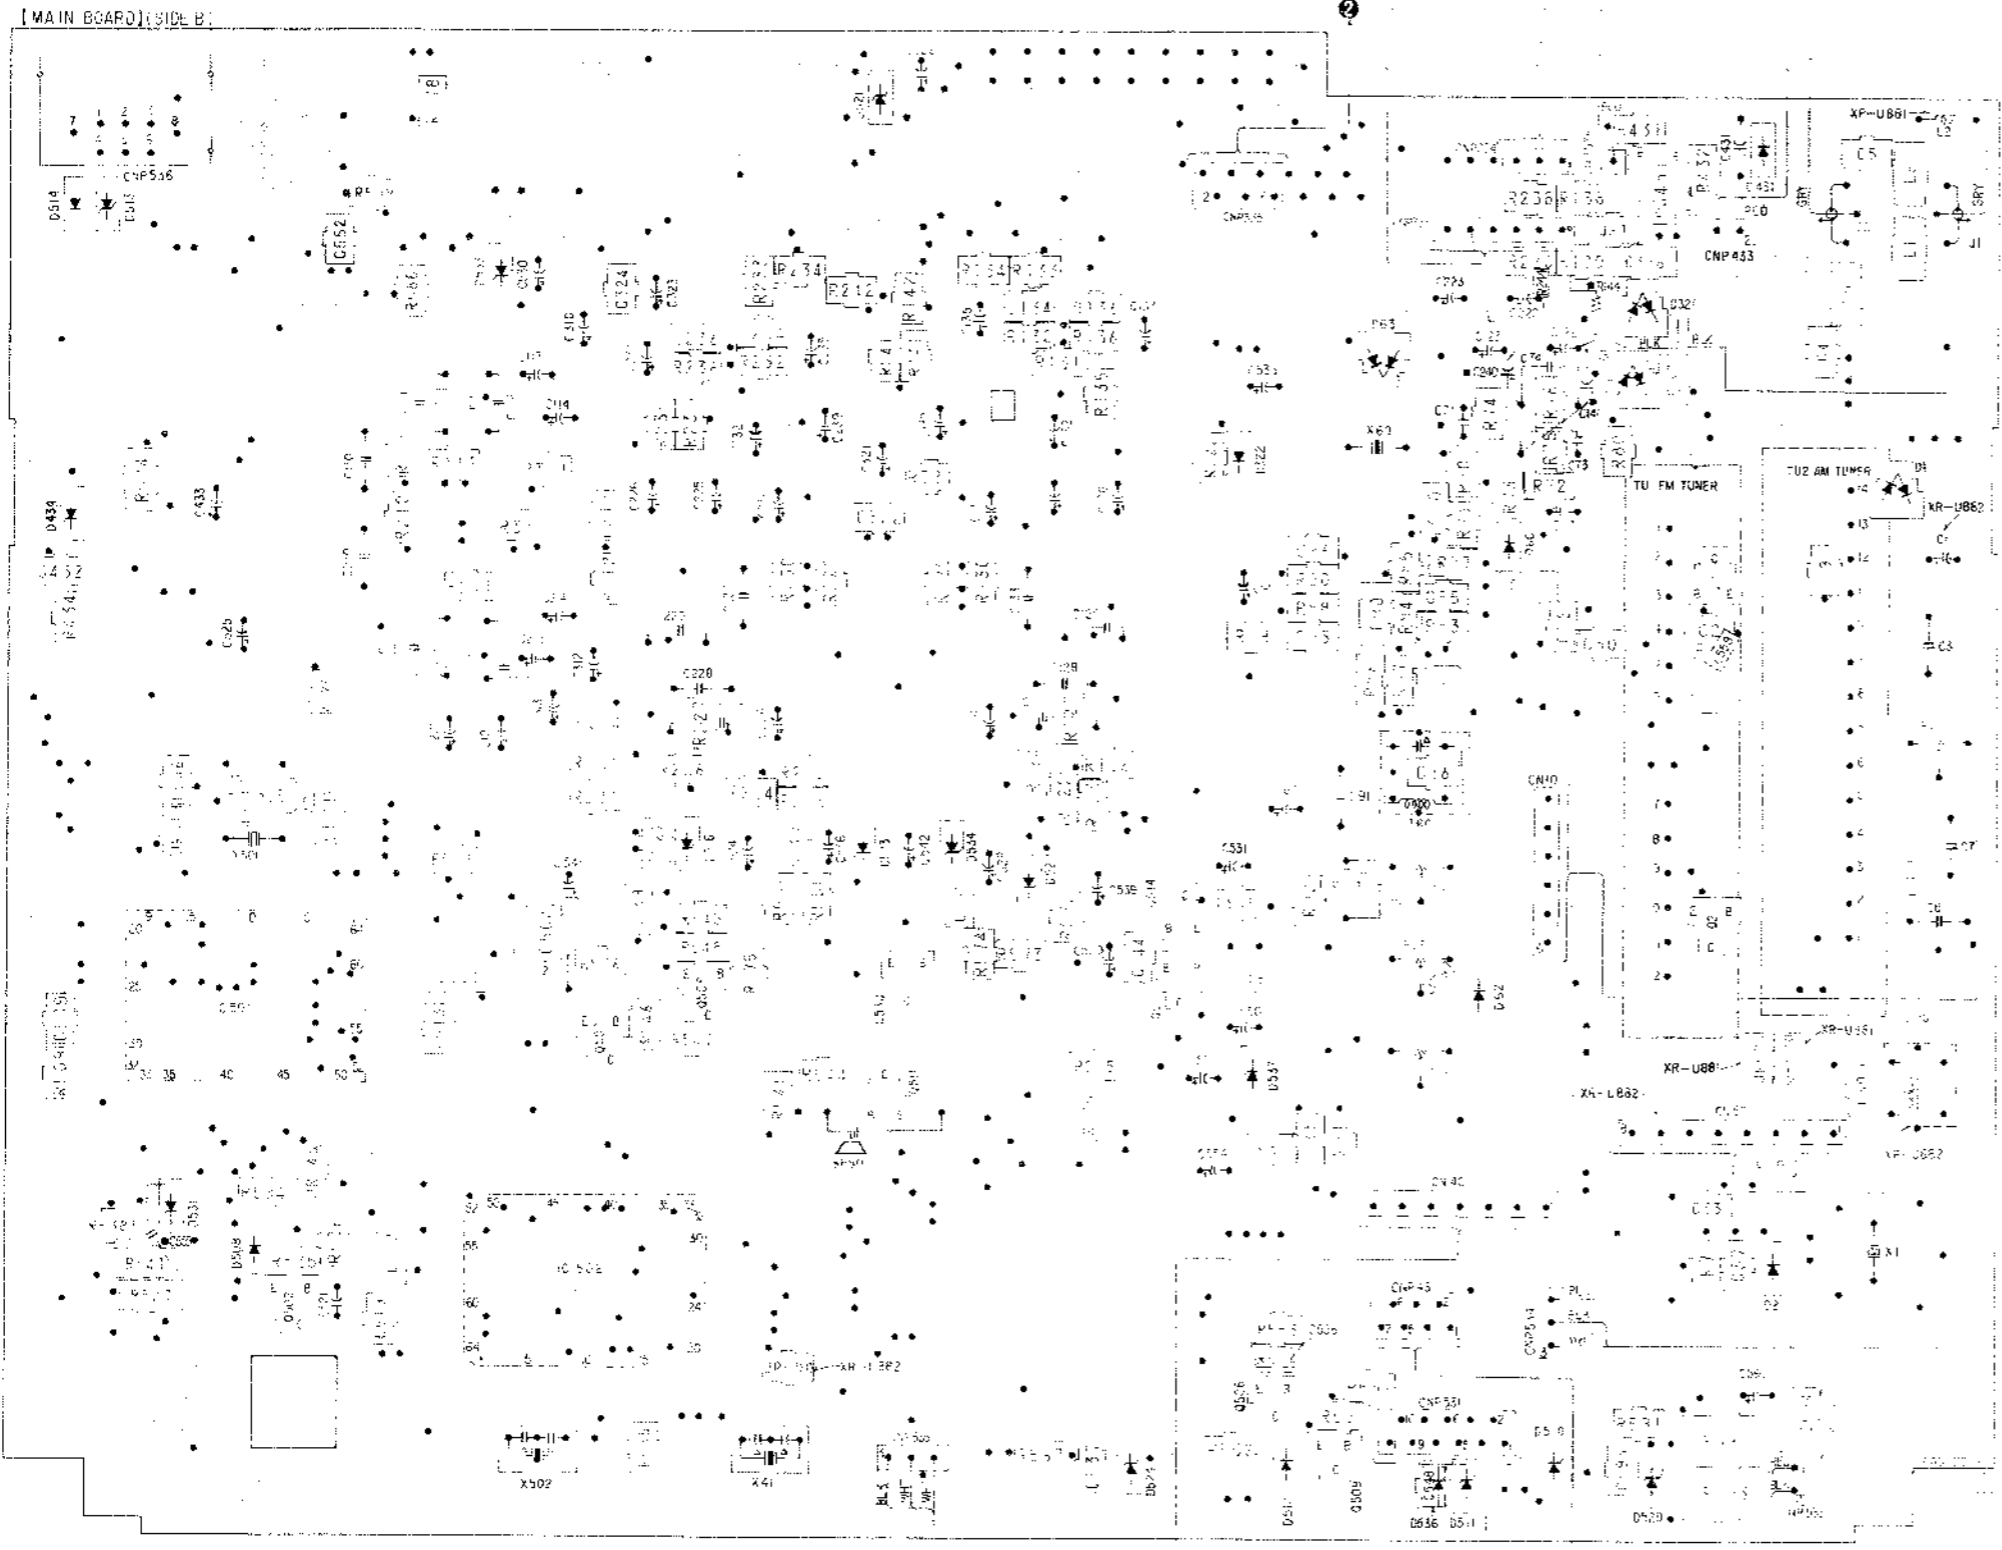



5
(See page 26.)

6
(See page 42.) (See page 44.)

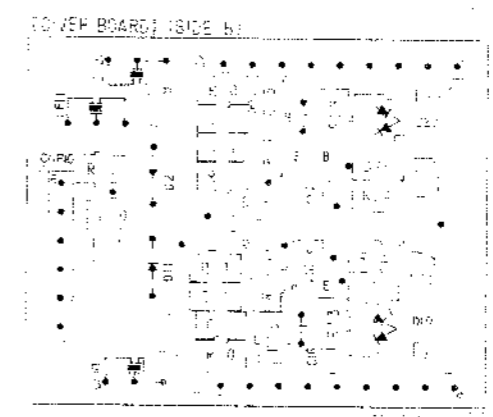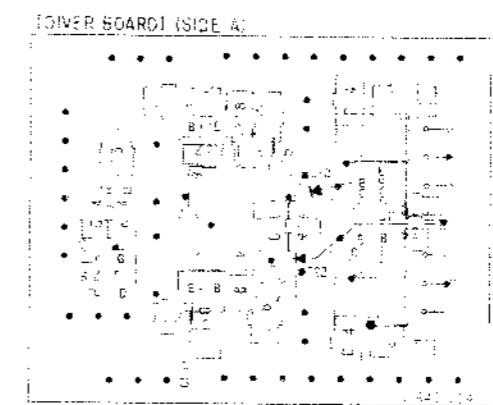

6
(See page 26.)

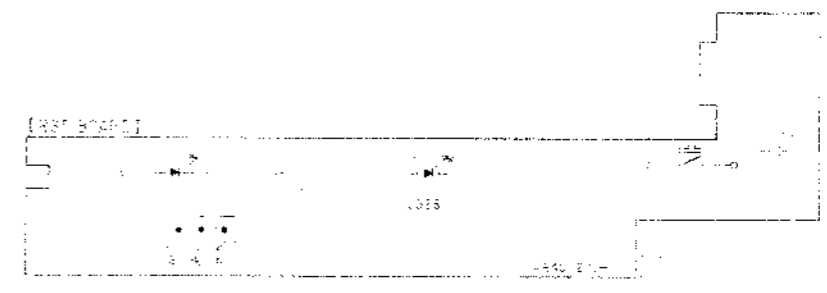

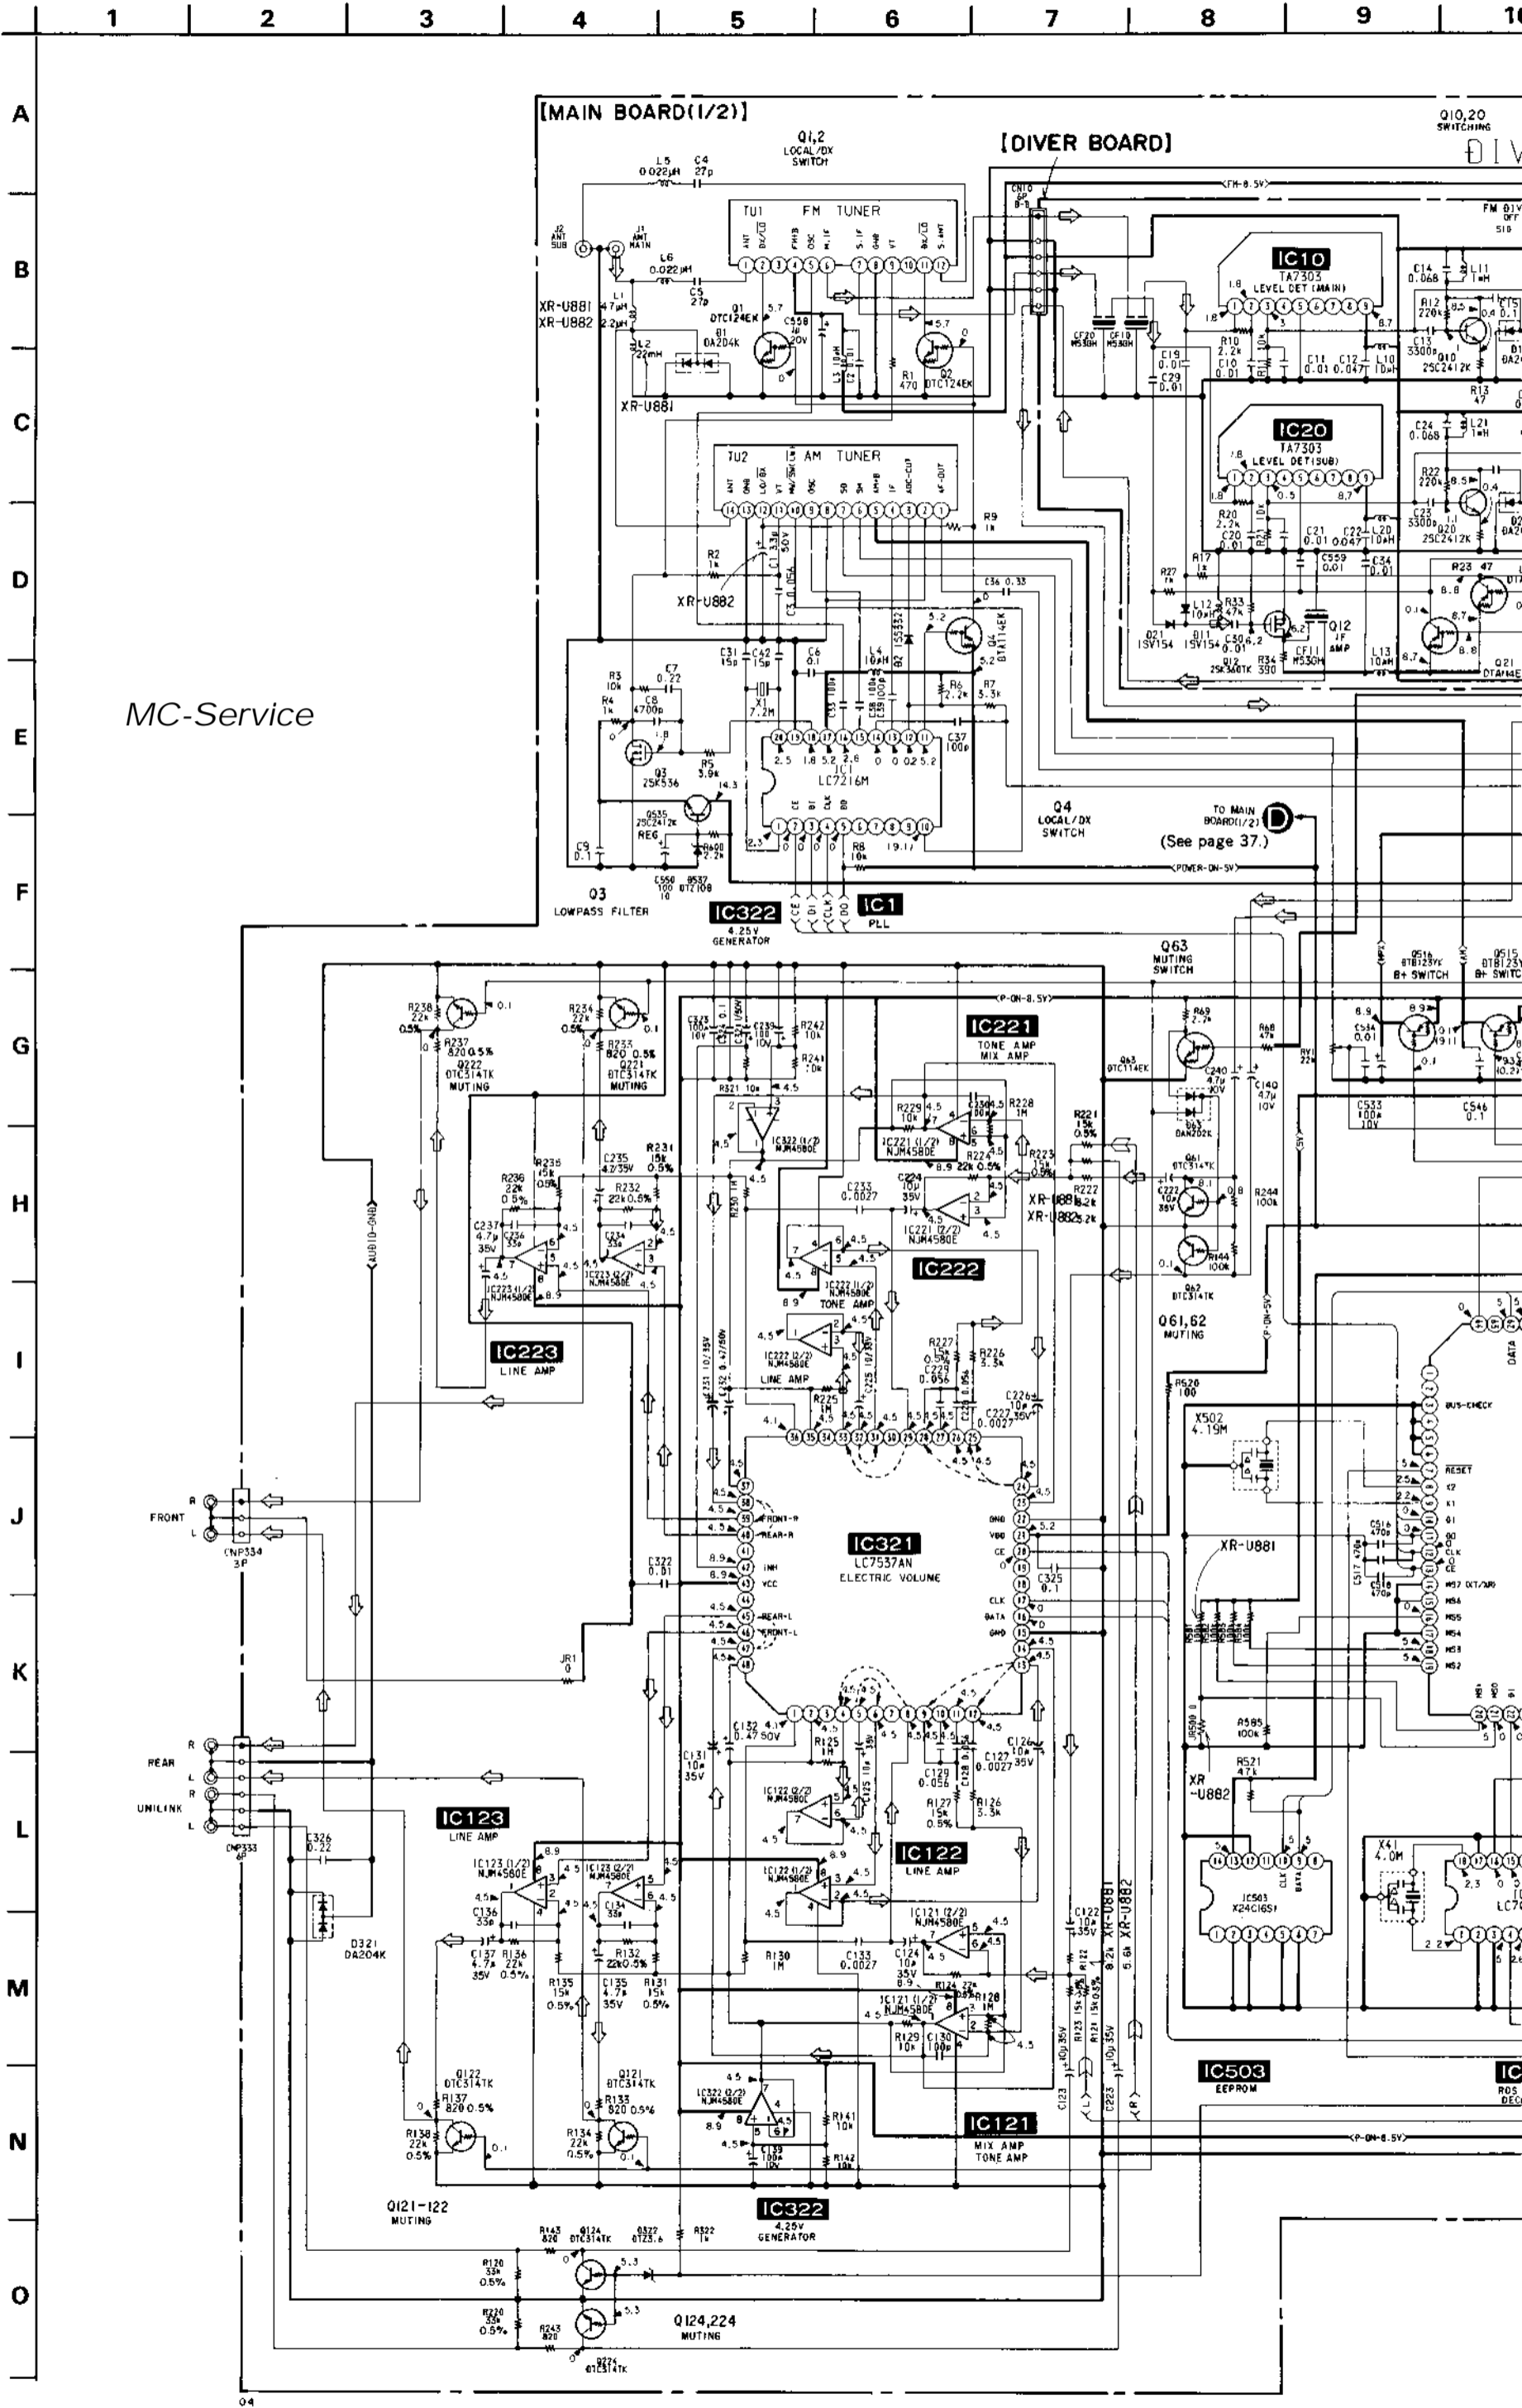


MC-Service

FRONT
L
R
UNLINK
L
R

Q121-122
MUTING


Q124,224
MUTING

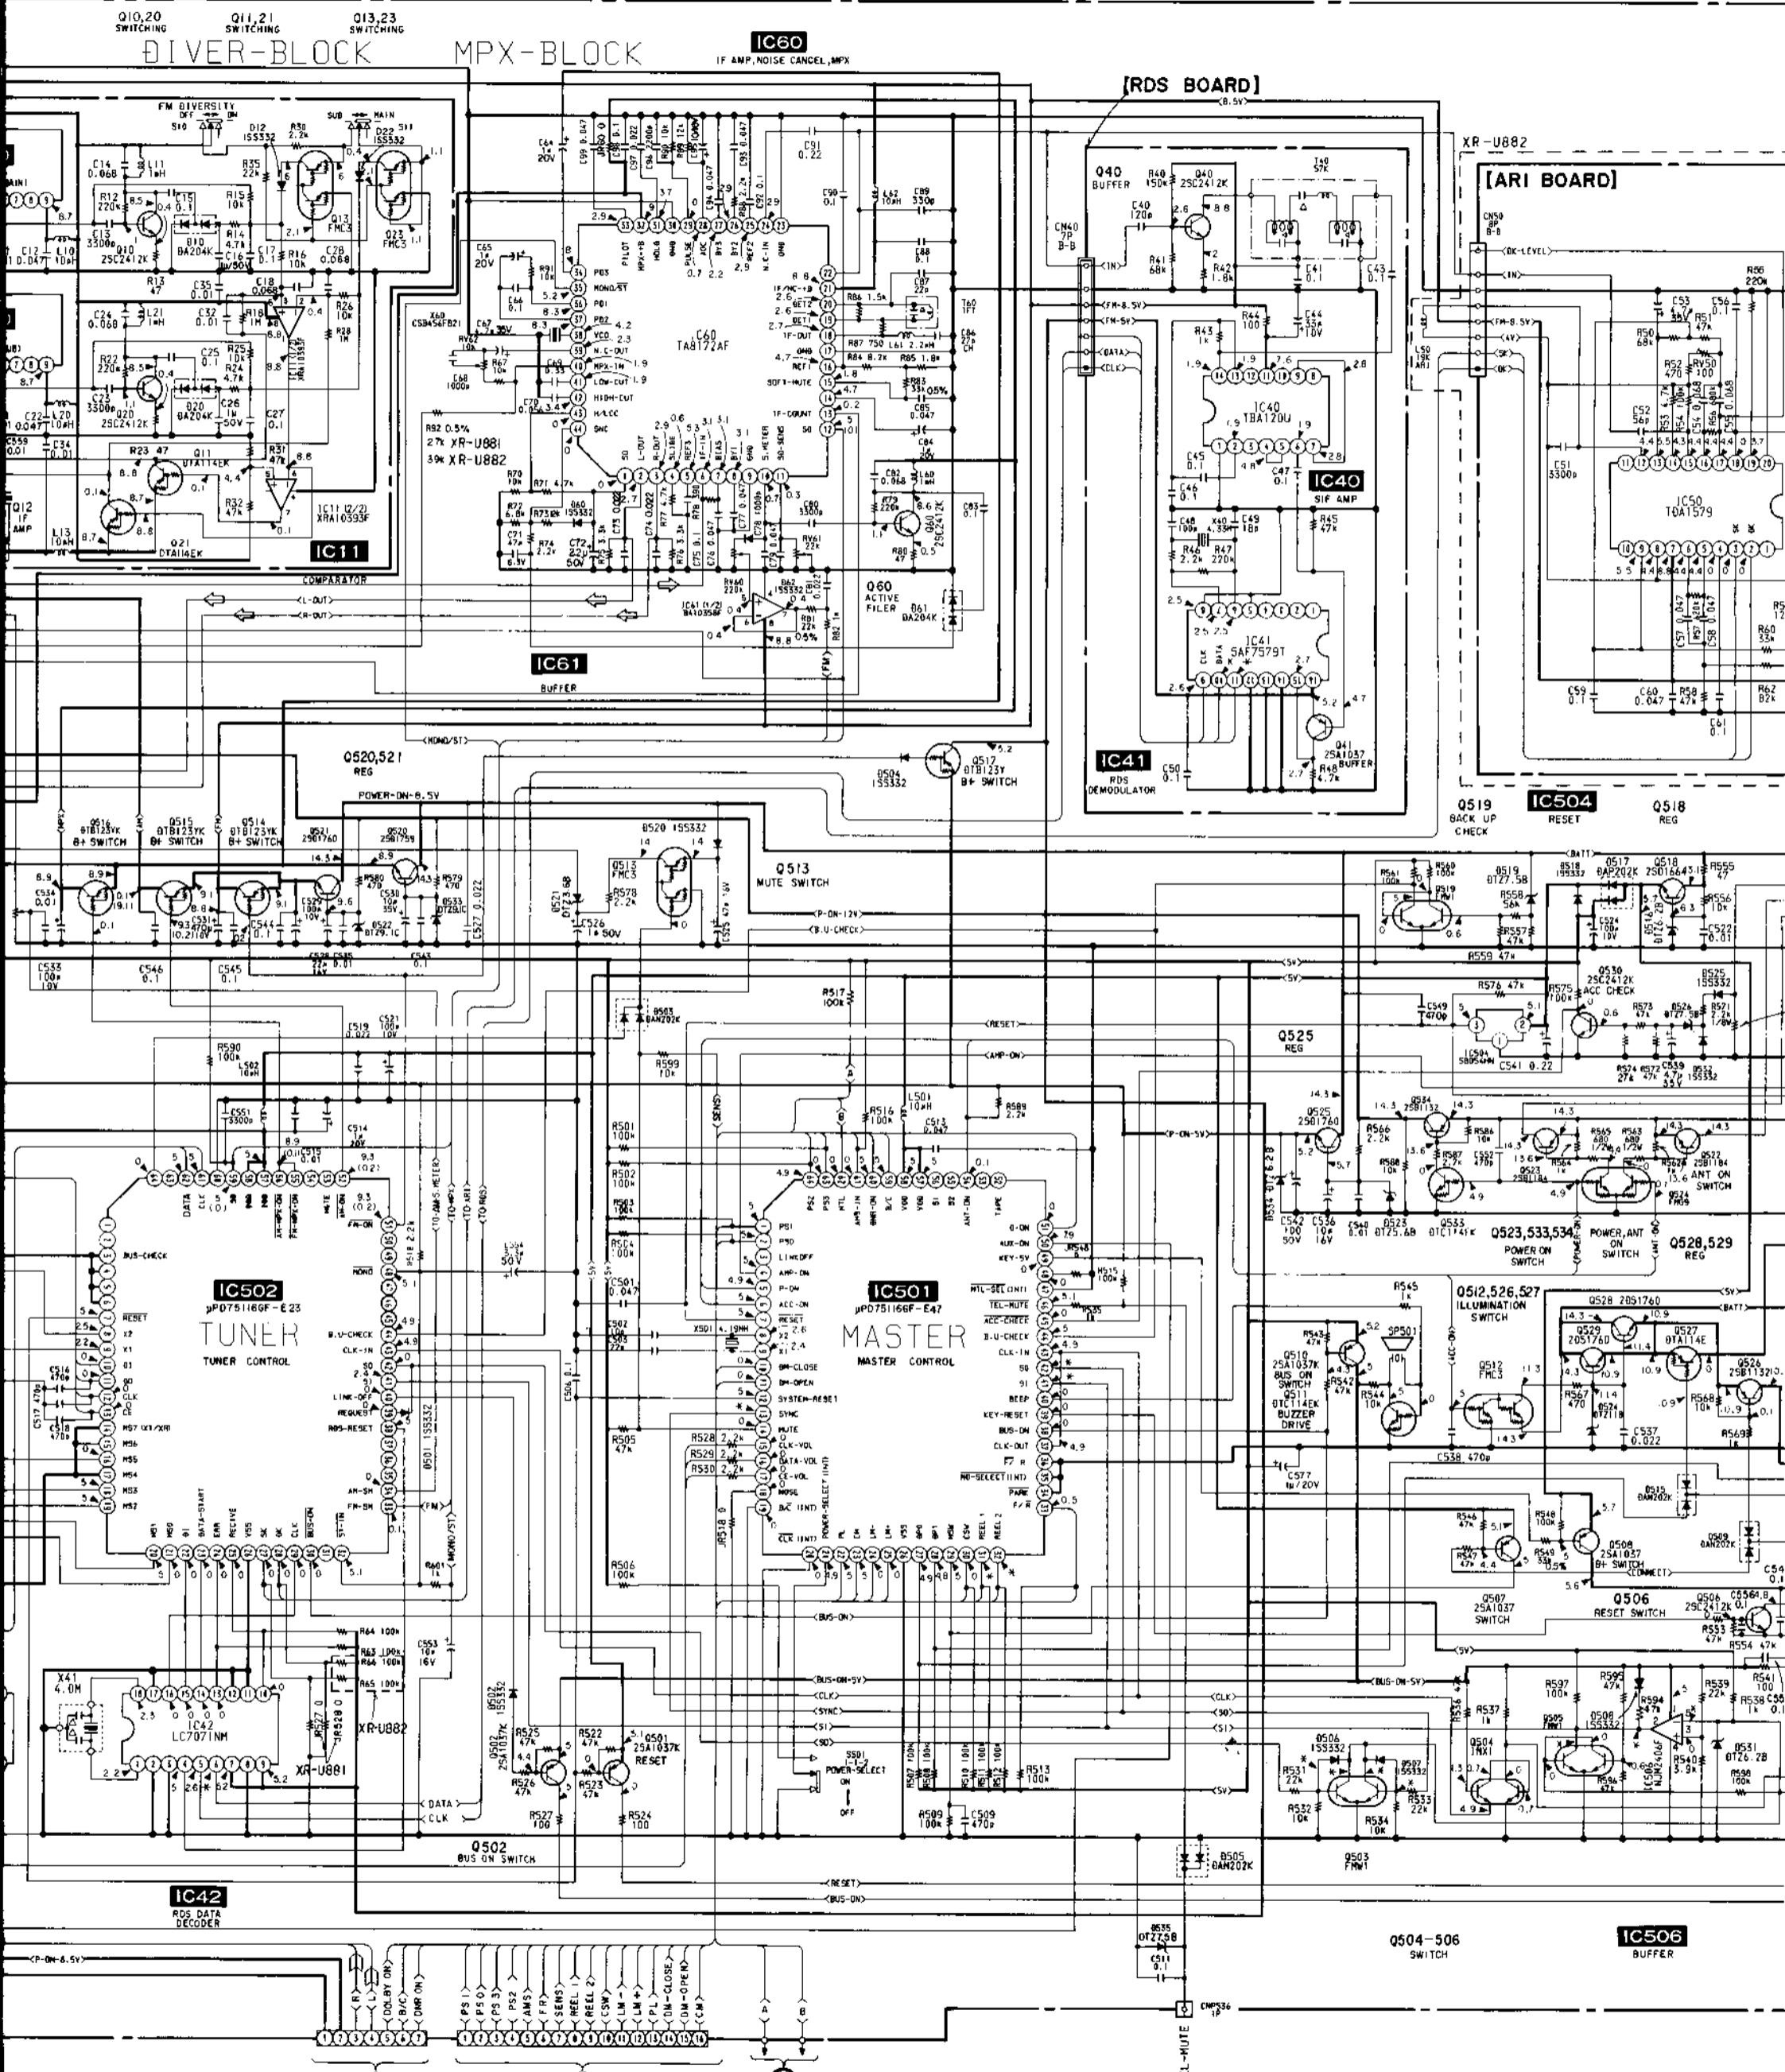

A TO MAIN BOARD (I/2) (See page 37.)

B TO MAIN BOARD (I/2) (See page 37.)


C TO MAIN BOARD (I/2) (See page 37.)

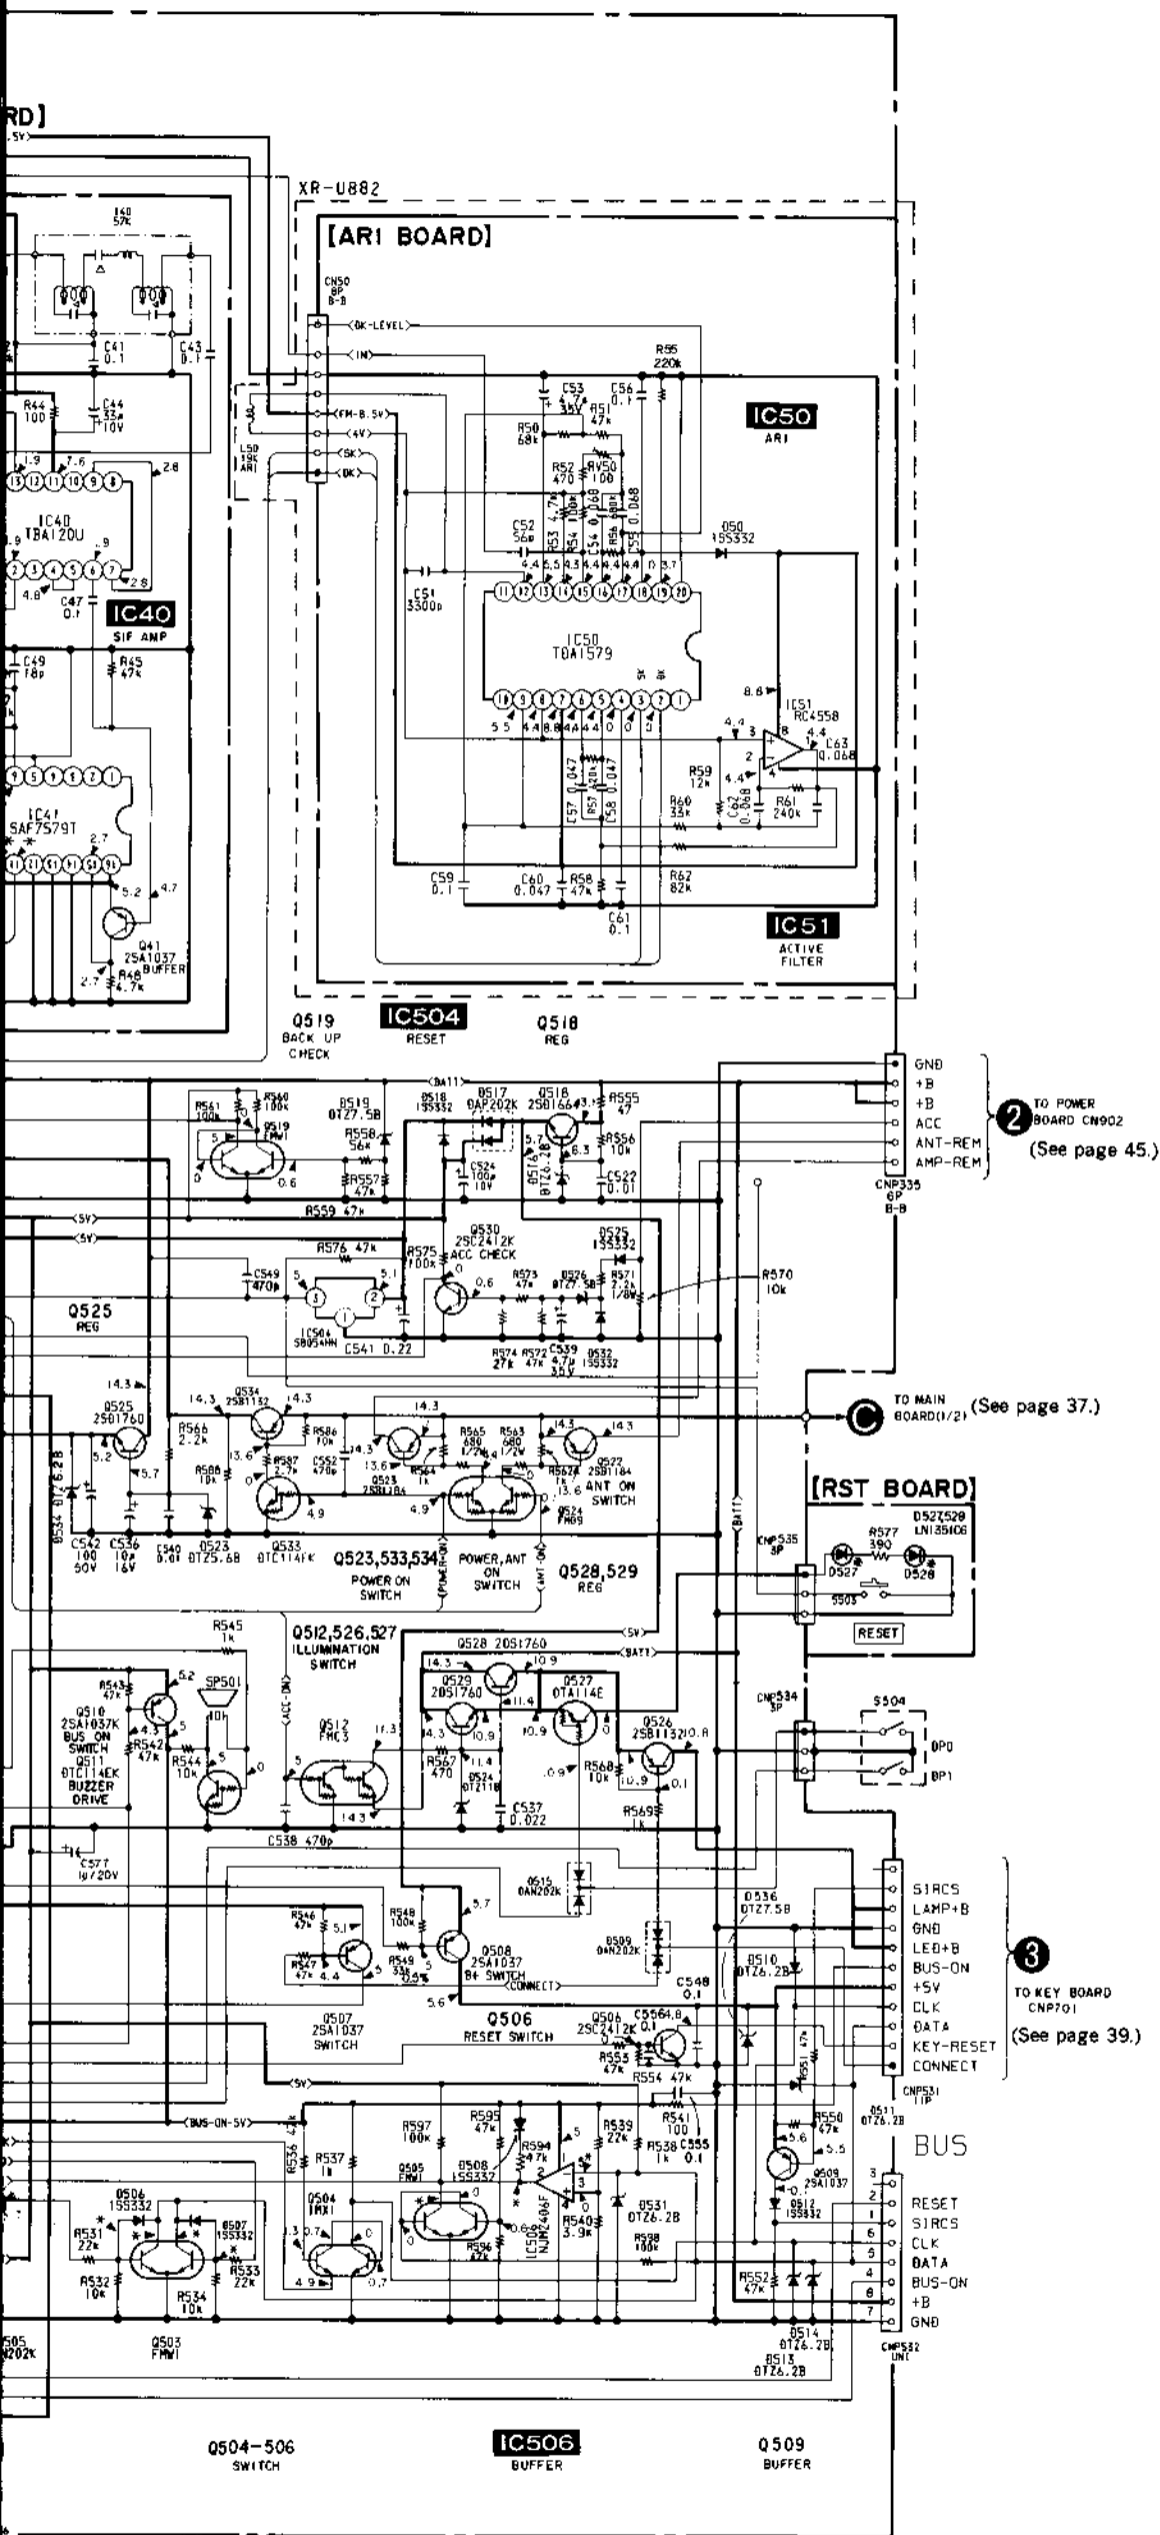

- Note:**
- All capacitors are in μF unless otherwise noted. pF : $\mu\mu\text{F}$
 - 50WV or less are not indicated except for electrolytics and tantalums.
 - All resistors are in Ω and $\frac{1}{4}\text{W}$ or less unless otherwise specified.
 - % : indicates tolerance.
 - Δ : internal component.
 - : B+ Line
 - : adjustment for repair.
 - Power voltage is dc 14.4V and fed with regulated dc power supply from BAT and ACC terminals.
 - Voltage and waveforms are dc with respect to ground under no-signal (detuned) conditions.
 - no mark: FM or PB
 - (): MW
 - * : Impossible to measure the voltage at the marked points.
 - Voltages are taken with a VOM (Input Impedance $10\text{M}\Omega$) Voltage variations may be noted due to normal production tolerances.
 - Signal path.
 - ◁ : FM ▷ : PB

3-6. SCHEMATIC DIAGRAM —MAIN (1/2) SECTION—

• Refer to page 50 for IC Block Diagrams.

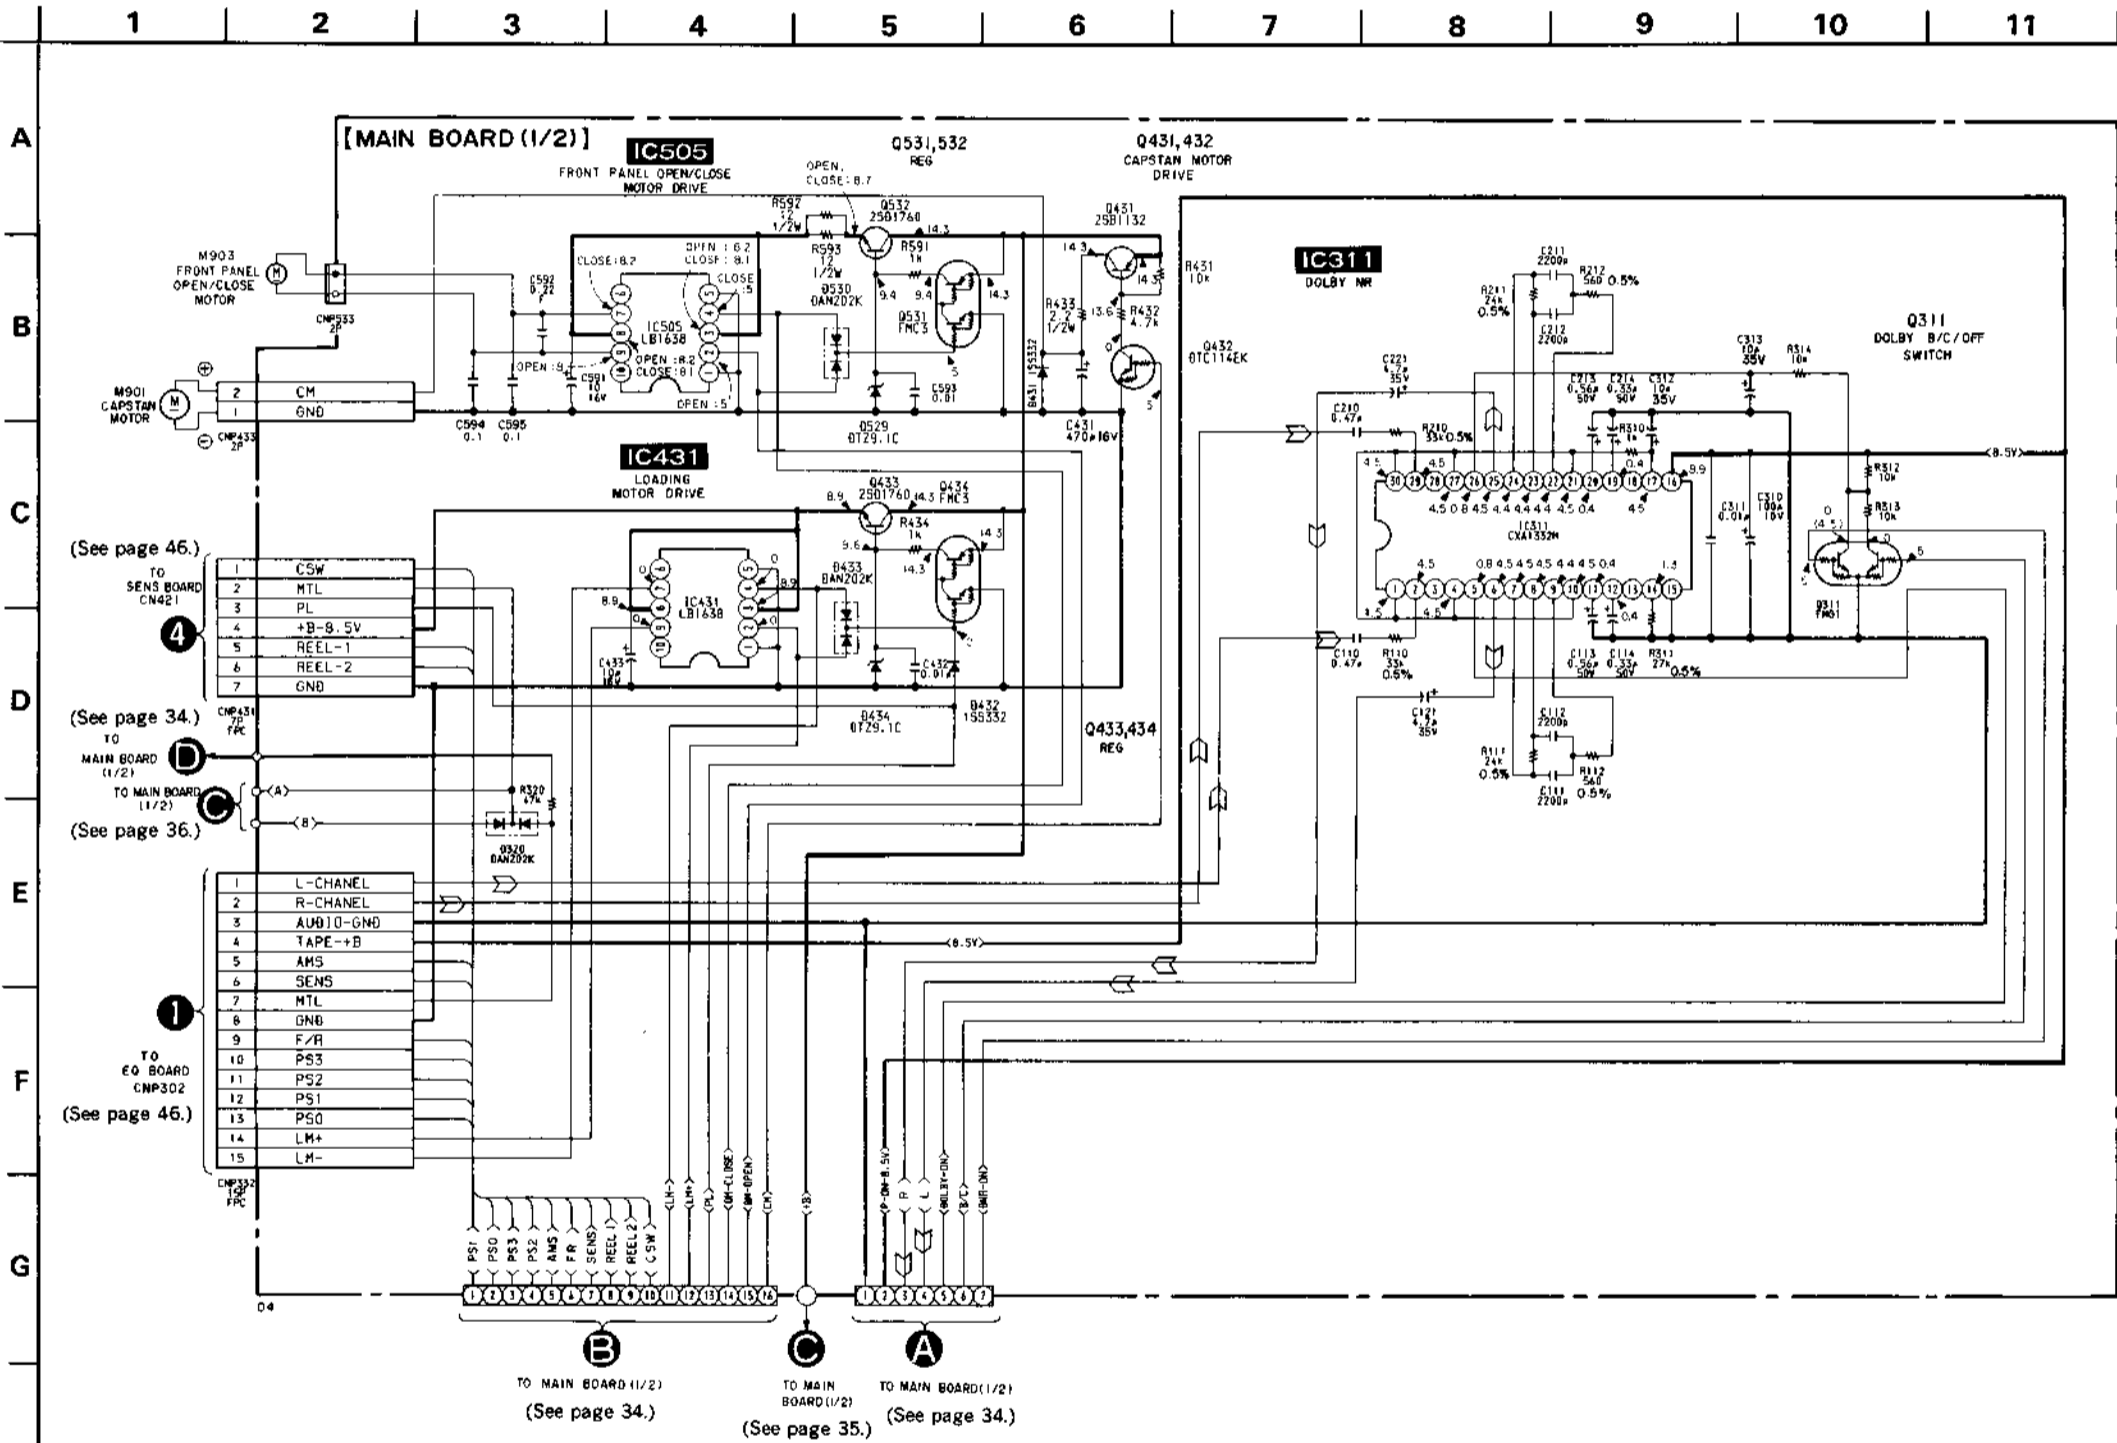


Note:

- All capacitors are in μF unless otherwise noted. pF: μF 50WV or less are not indicated except for electrolytics and tantalums.
- All resistors are in Ω and $\frac{1}{4}\text{W}$ or less unless otherwise specified.
- % : indicates tolerance.
- Δ : internal component.
- — : B+ Line
- Power voltage is dc 14.4V and fed with regulated dc power supply from BAT and ACC terminals.
- Voltage and waveforms are dc with respect to ground under no-signal (detuned) conditions.
- no mark: FM or PB
- * : Impossible to measure the voltage at the marked points.
- Voltages are taken with a VOM (Input Impedance $10\text{M}\Omega$). Voltage variations may be noted due to normal production tolerances.
- Signal path.
- Σ : PB

MC-Service

3-7. SCHEMATIC DIAGRAM —KEY SECTION—

• Refer to page 50 for IC Block Diagrams.

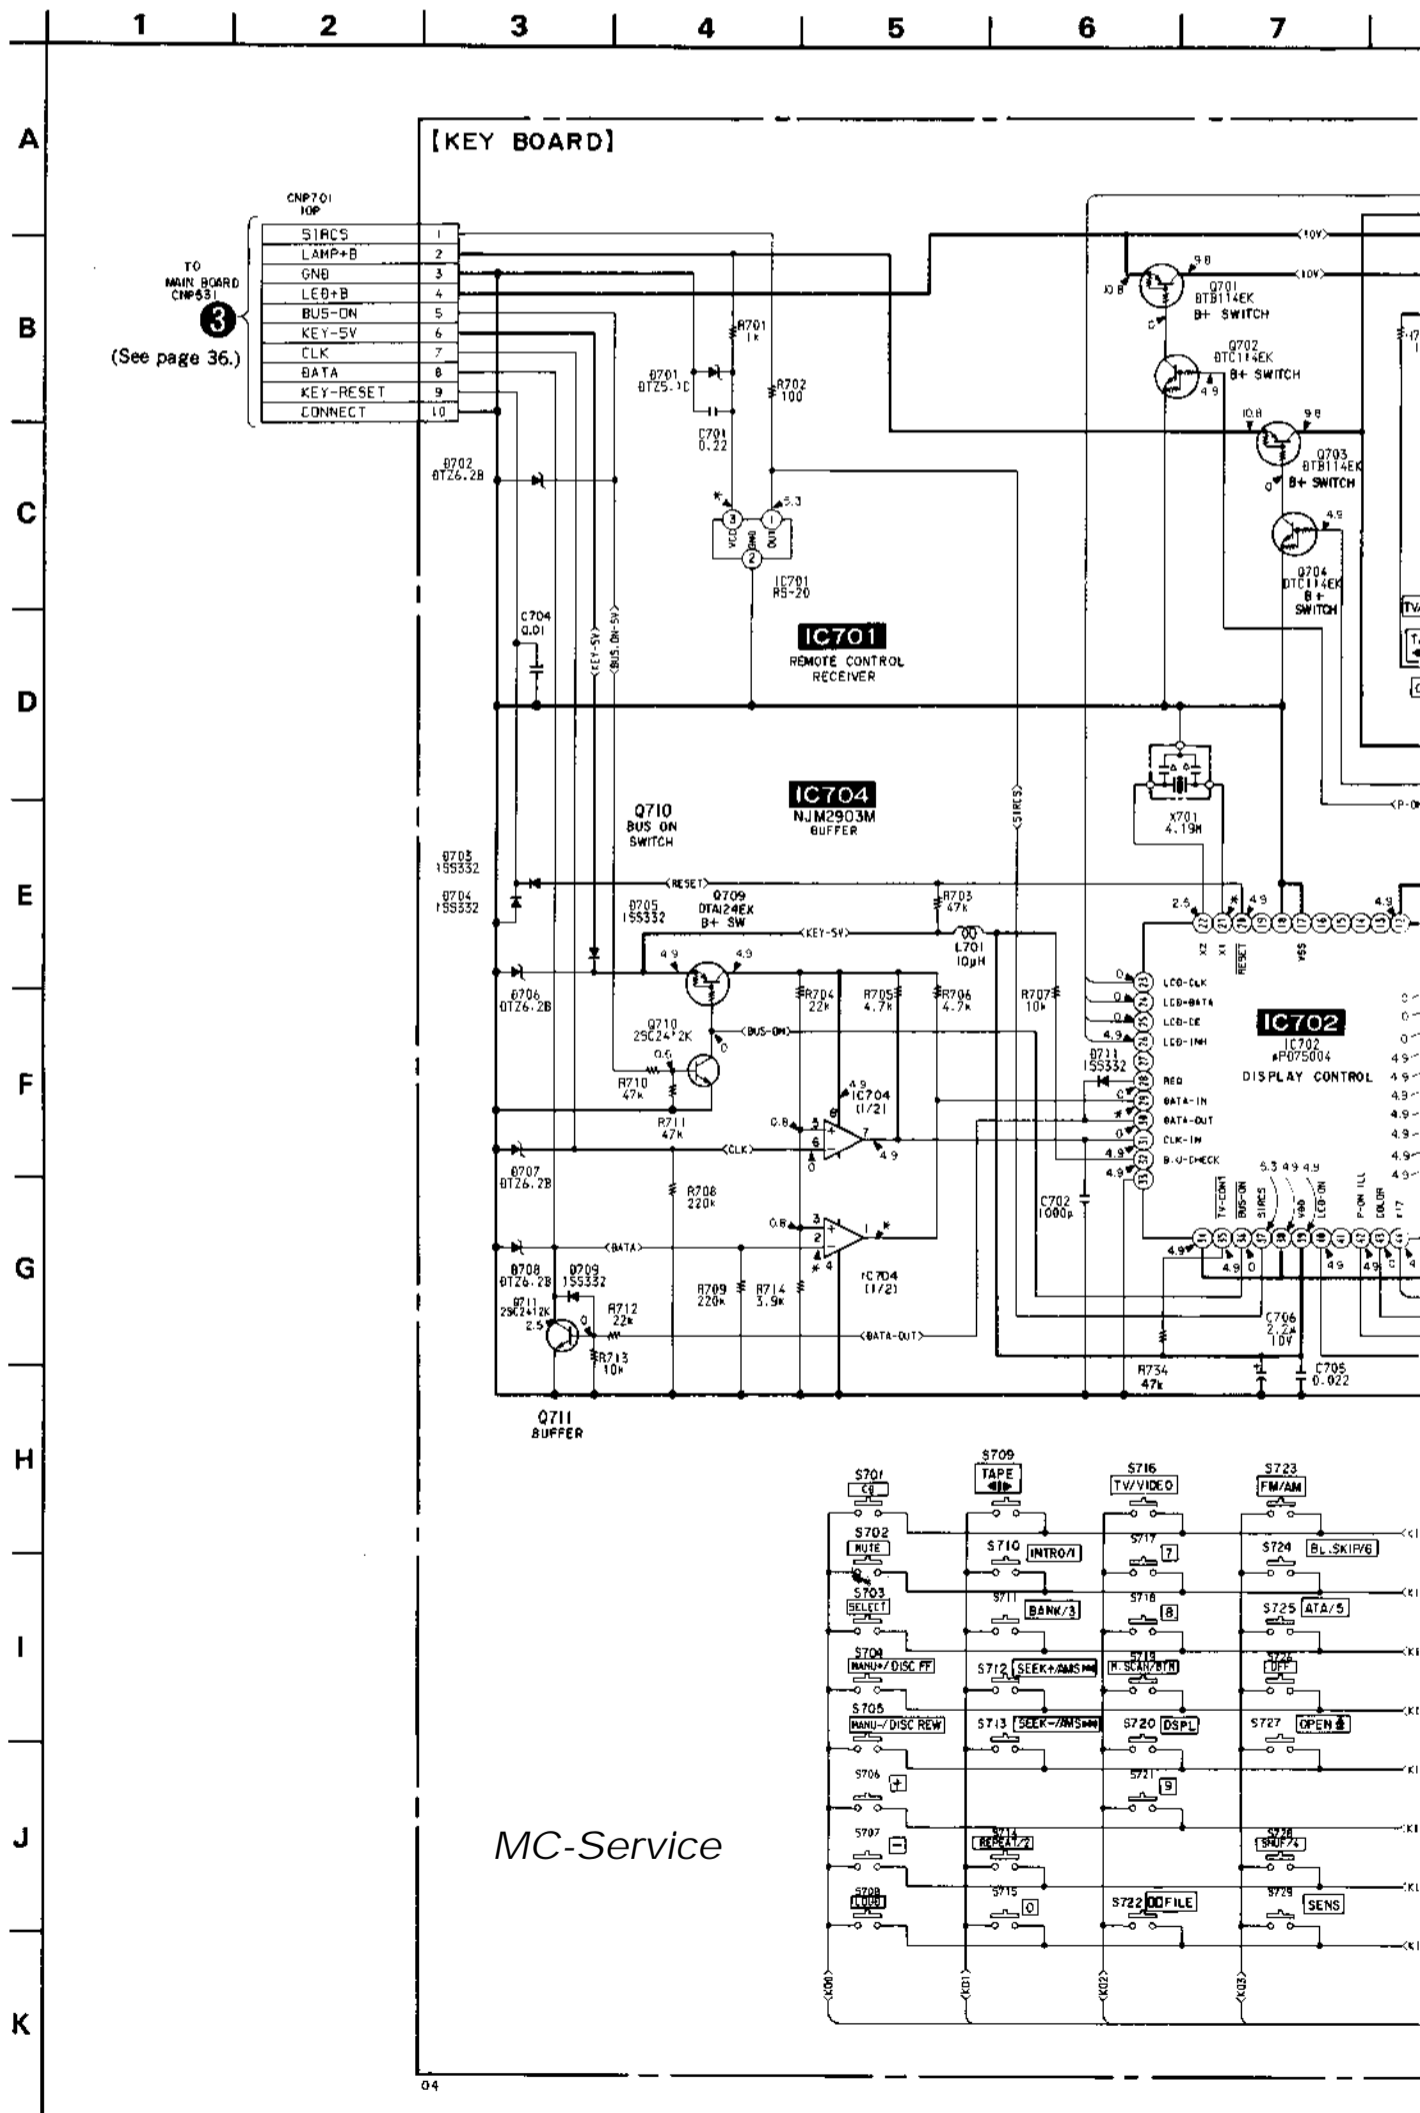


Note:

- All capacitors are in μF unless otherwise noted. pF: μF 50WV or less are not indicated except for electrolytics and tantalums.
- All resistors are in Ω and $\frac{1}{4}\text{W}$ or less unless otherwise specified.
- % : indicates tolerance.
- Δ : internal component.
- — : B+ Line
- Power voltage is dc 14.4V and fed with regulated dc power supply from BAT and ACC terminals.
- Voltage and waveforms are dc with respect to ground under no-signal (detuned) conditions.
no mark: FM or PB
- * : Impossible to measure the voltage at the marked points.
- Voltages are taken with a VOM (Input Impedance $10\text{M}\Omega$). Voltage variations may be noted due to normal production tolerances.

MC-Service

to page50 for IC Block Diagrams.

5 6 7 8 9 10 11 12 13 14 15

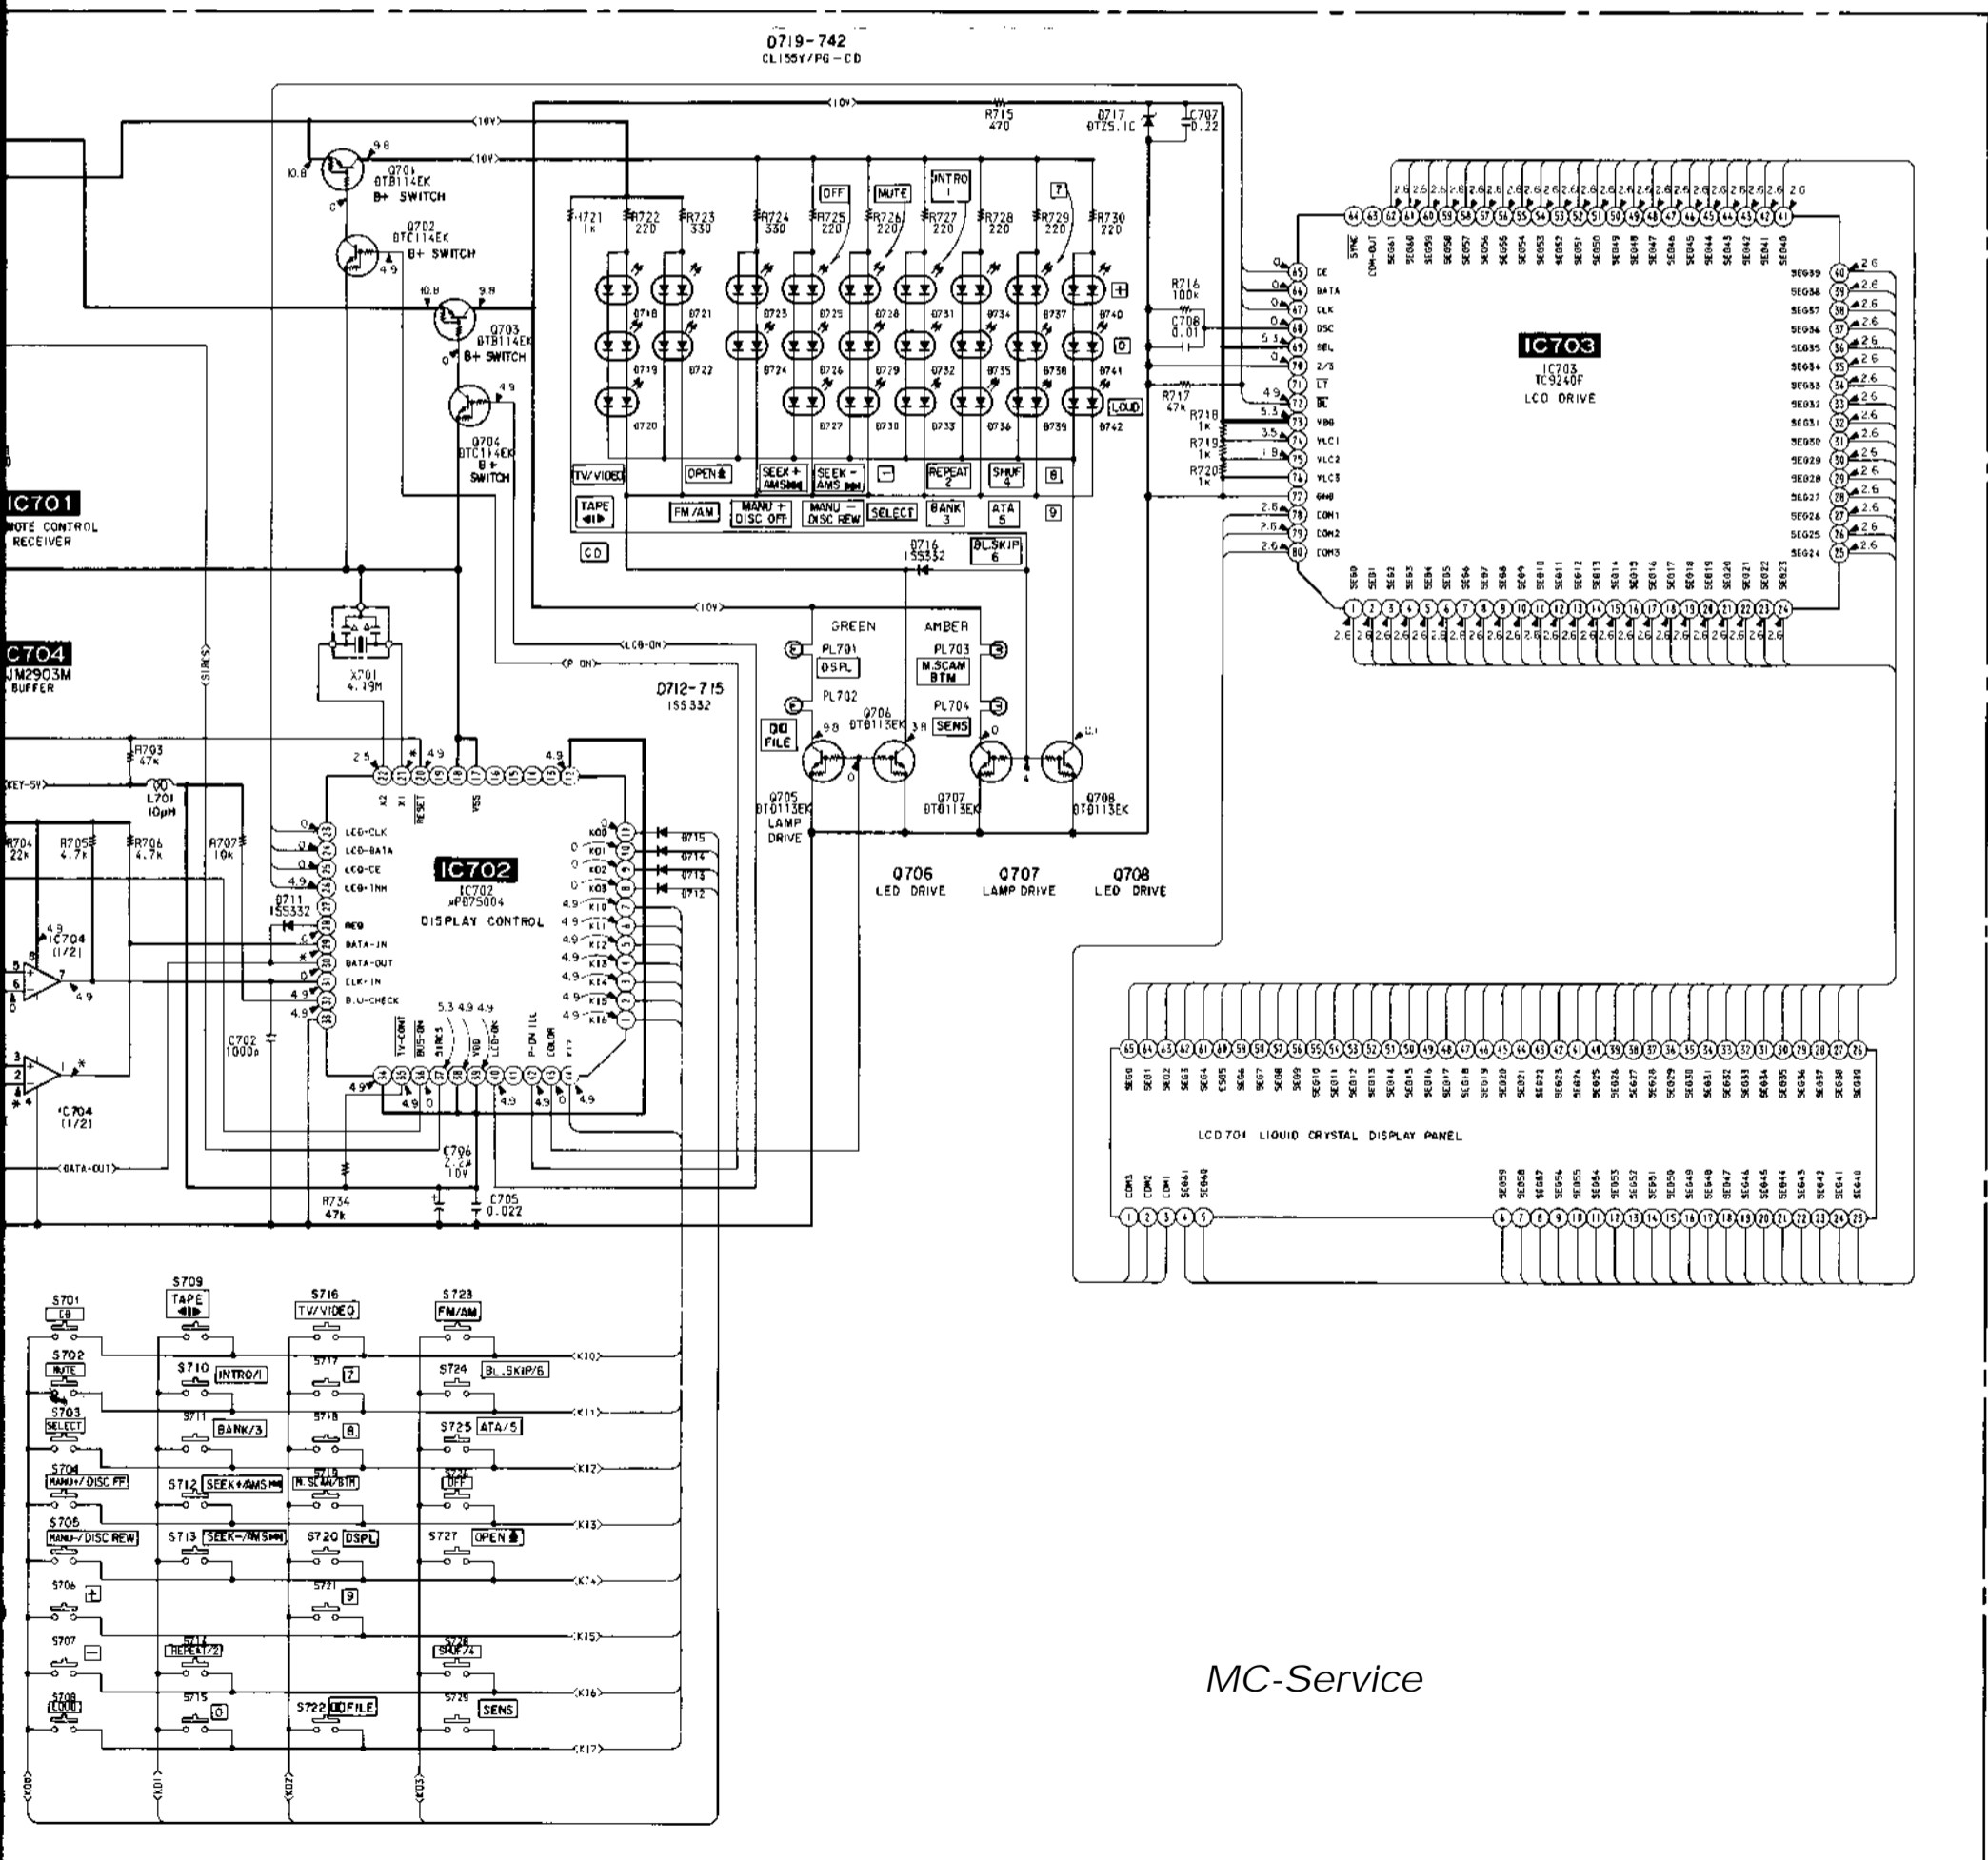


MC-Service

3-8. PRINTED WIRING BOARD —KEY SECTION—

• Refer to page 49 for Semiconductor Lead Layouts.

• Semiconductor Location

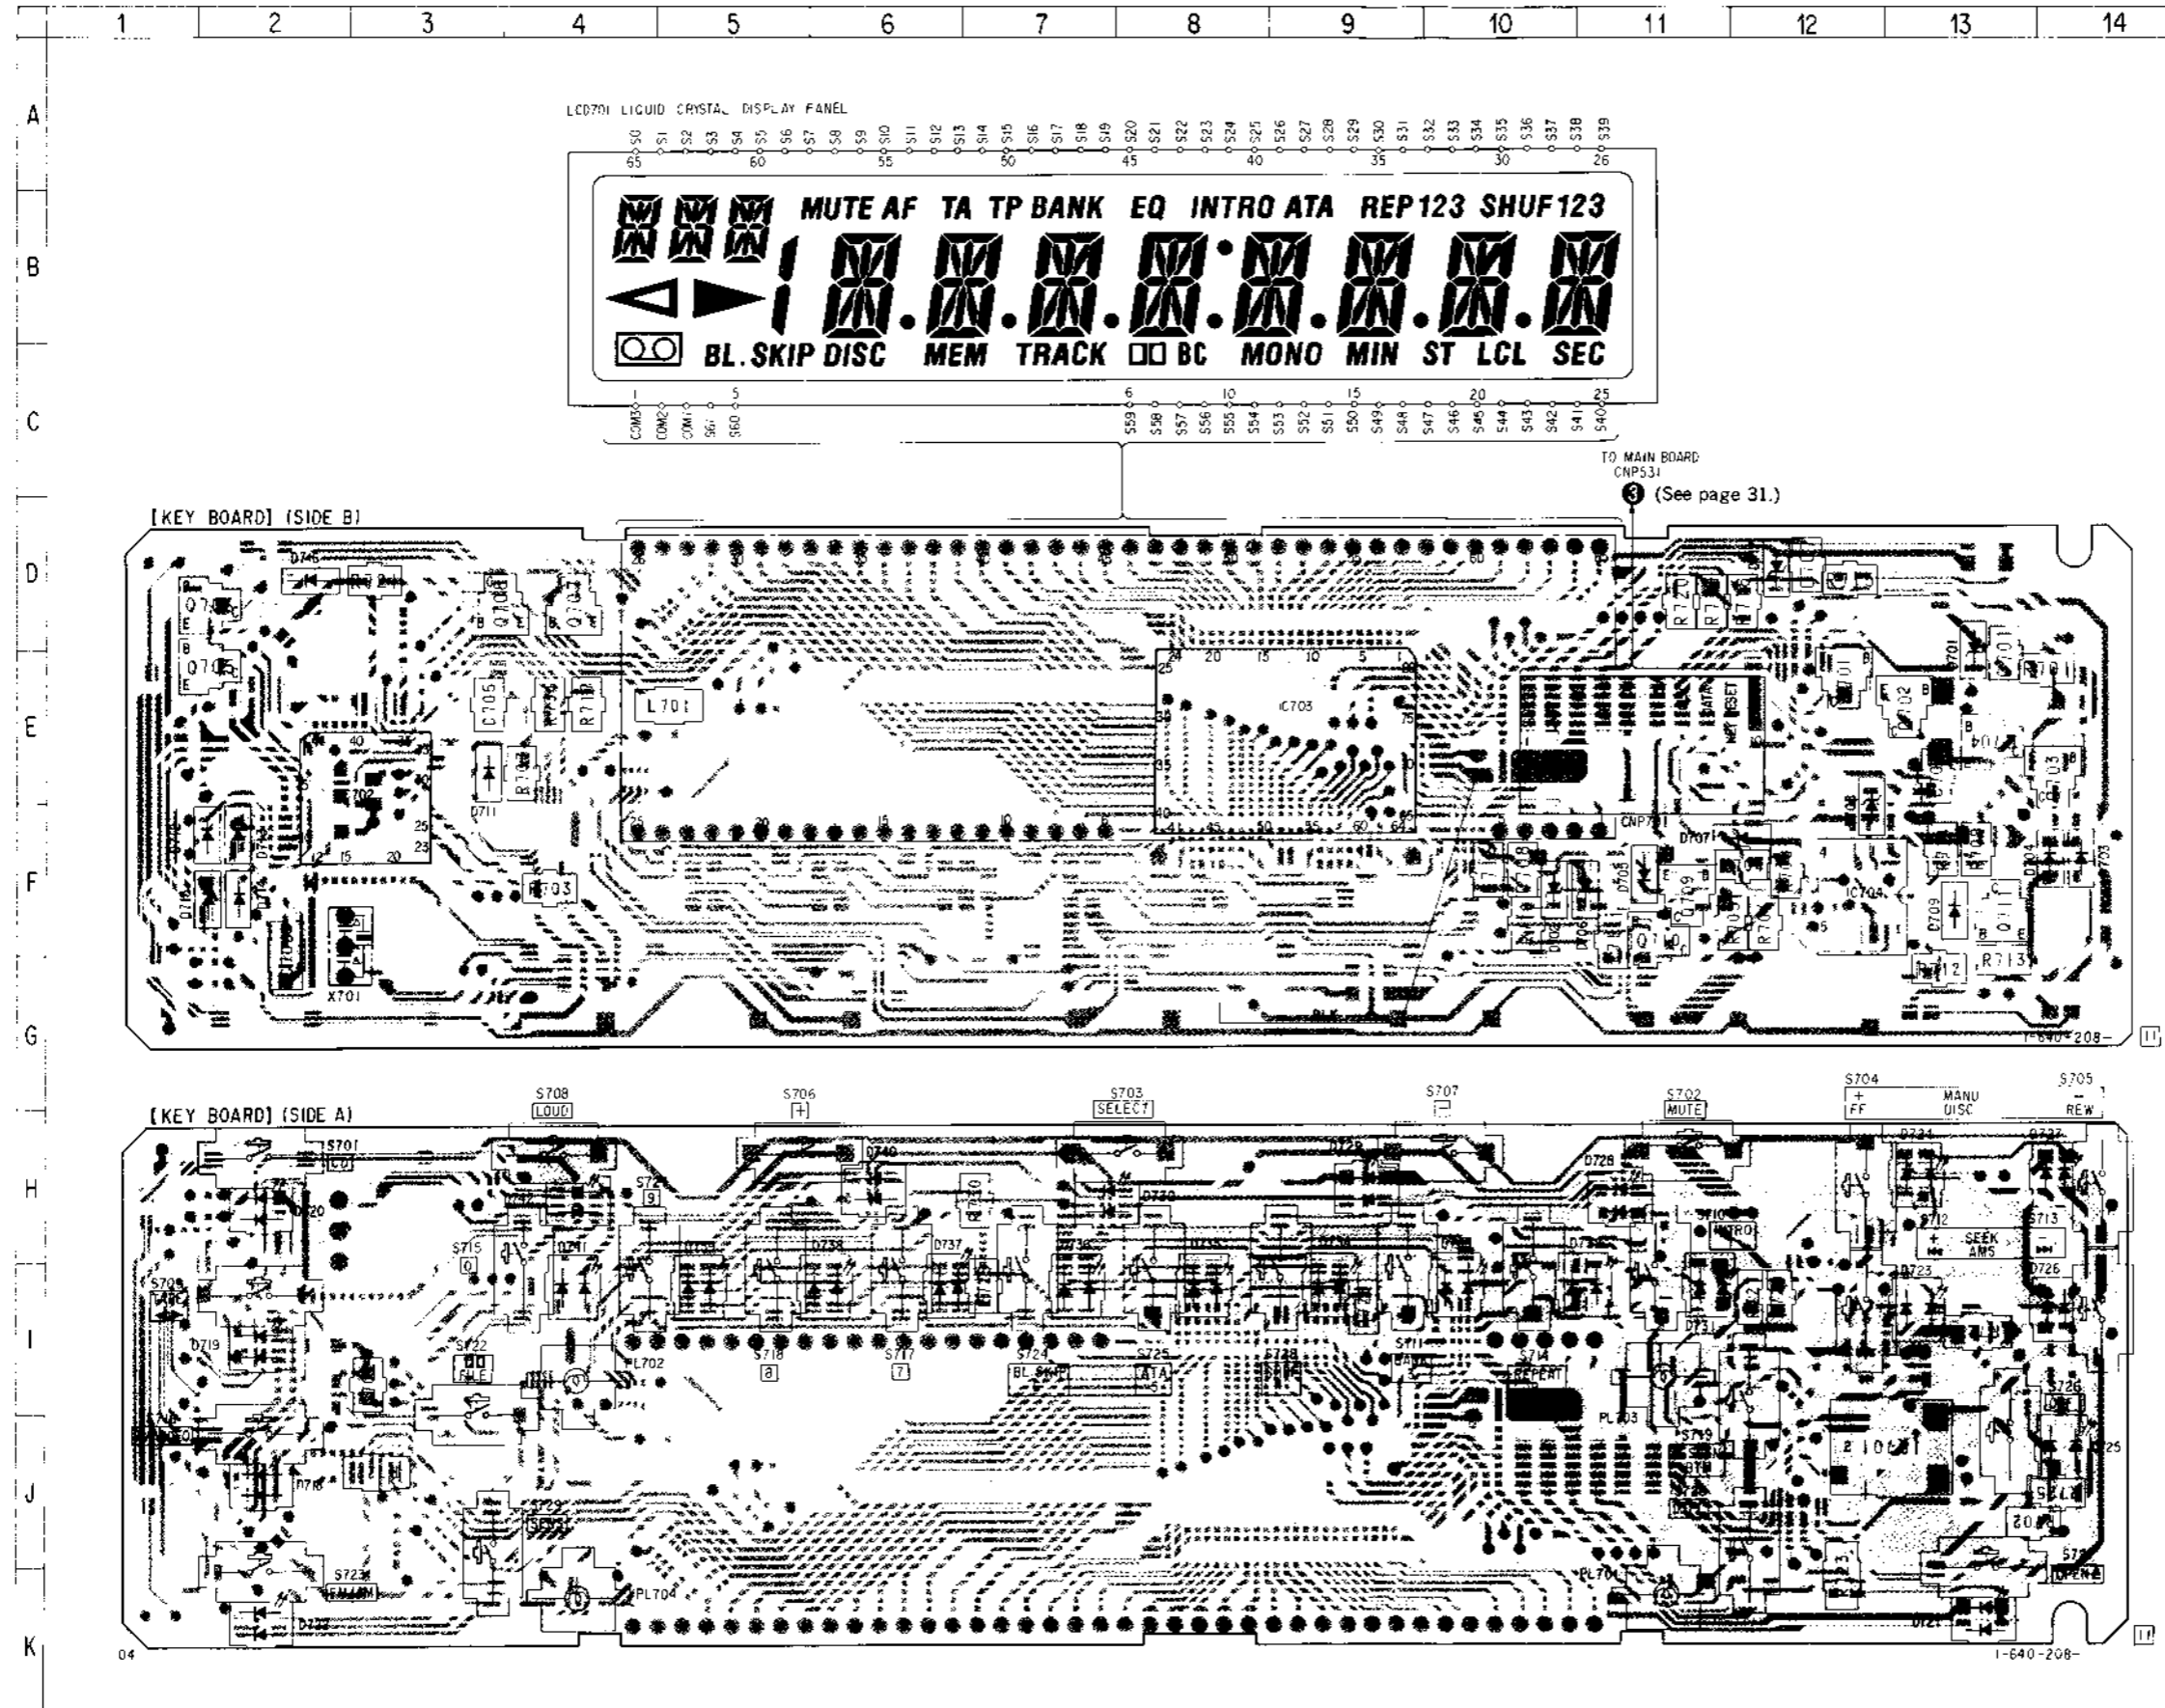


Ref. No.	Location
D701	E-13
D702	F-10
D703	F-14
D704	F-14
D705	F-11
D706	F-11
D707	F-11
D708	F-12
D709	F-13
D711	E-3
D712	F-2
D713	F-2
D714	F-2
D715	F-2
D716	D-2
D717	D-12
D718	J-2
D719	H-2
D720	H-2
D721	K-13
D722	K-2
D723	I-13
D724	H-13
D725	J-14
D726	I-14
D727	H-14
D728	H-11
D729	H-9
D730	H-7
D731	I-11
D732	I-11
D733	I-10
D734	I-8
D735	I-8
D736	I-7
D737	I-6
D738	I-6
D739	I-5
D740	H-6
D741	I-4
D742	H-4
IC701	K-12
IC702	E-3
IC703	E-9
IC704	F-12
Q701	E-12
Q702	E-13
Q703	E-14
Q704	E-13
Q705	E-2
Q706	D-2
Q707	D-4
Q708	D-3
Q709	F-11
Q710	F-11
Q711	F-13

Note:
 • — : parts extracted from the conductor side.
 • : Pattern on the side which is seen.
 • : Pattern of the rear side.

3-9. PRINTED WIRING BOARDS —MD, POWER SECTION—

• Refer to page 49 for Semiconductor Lead Layouts.



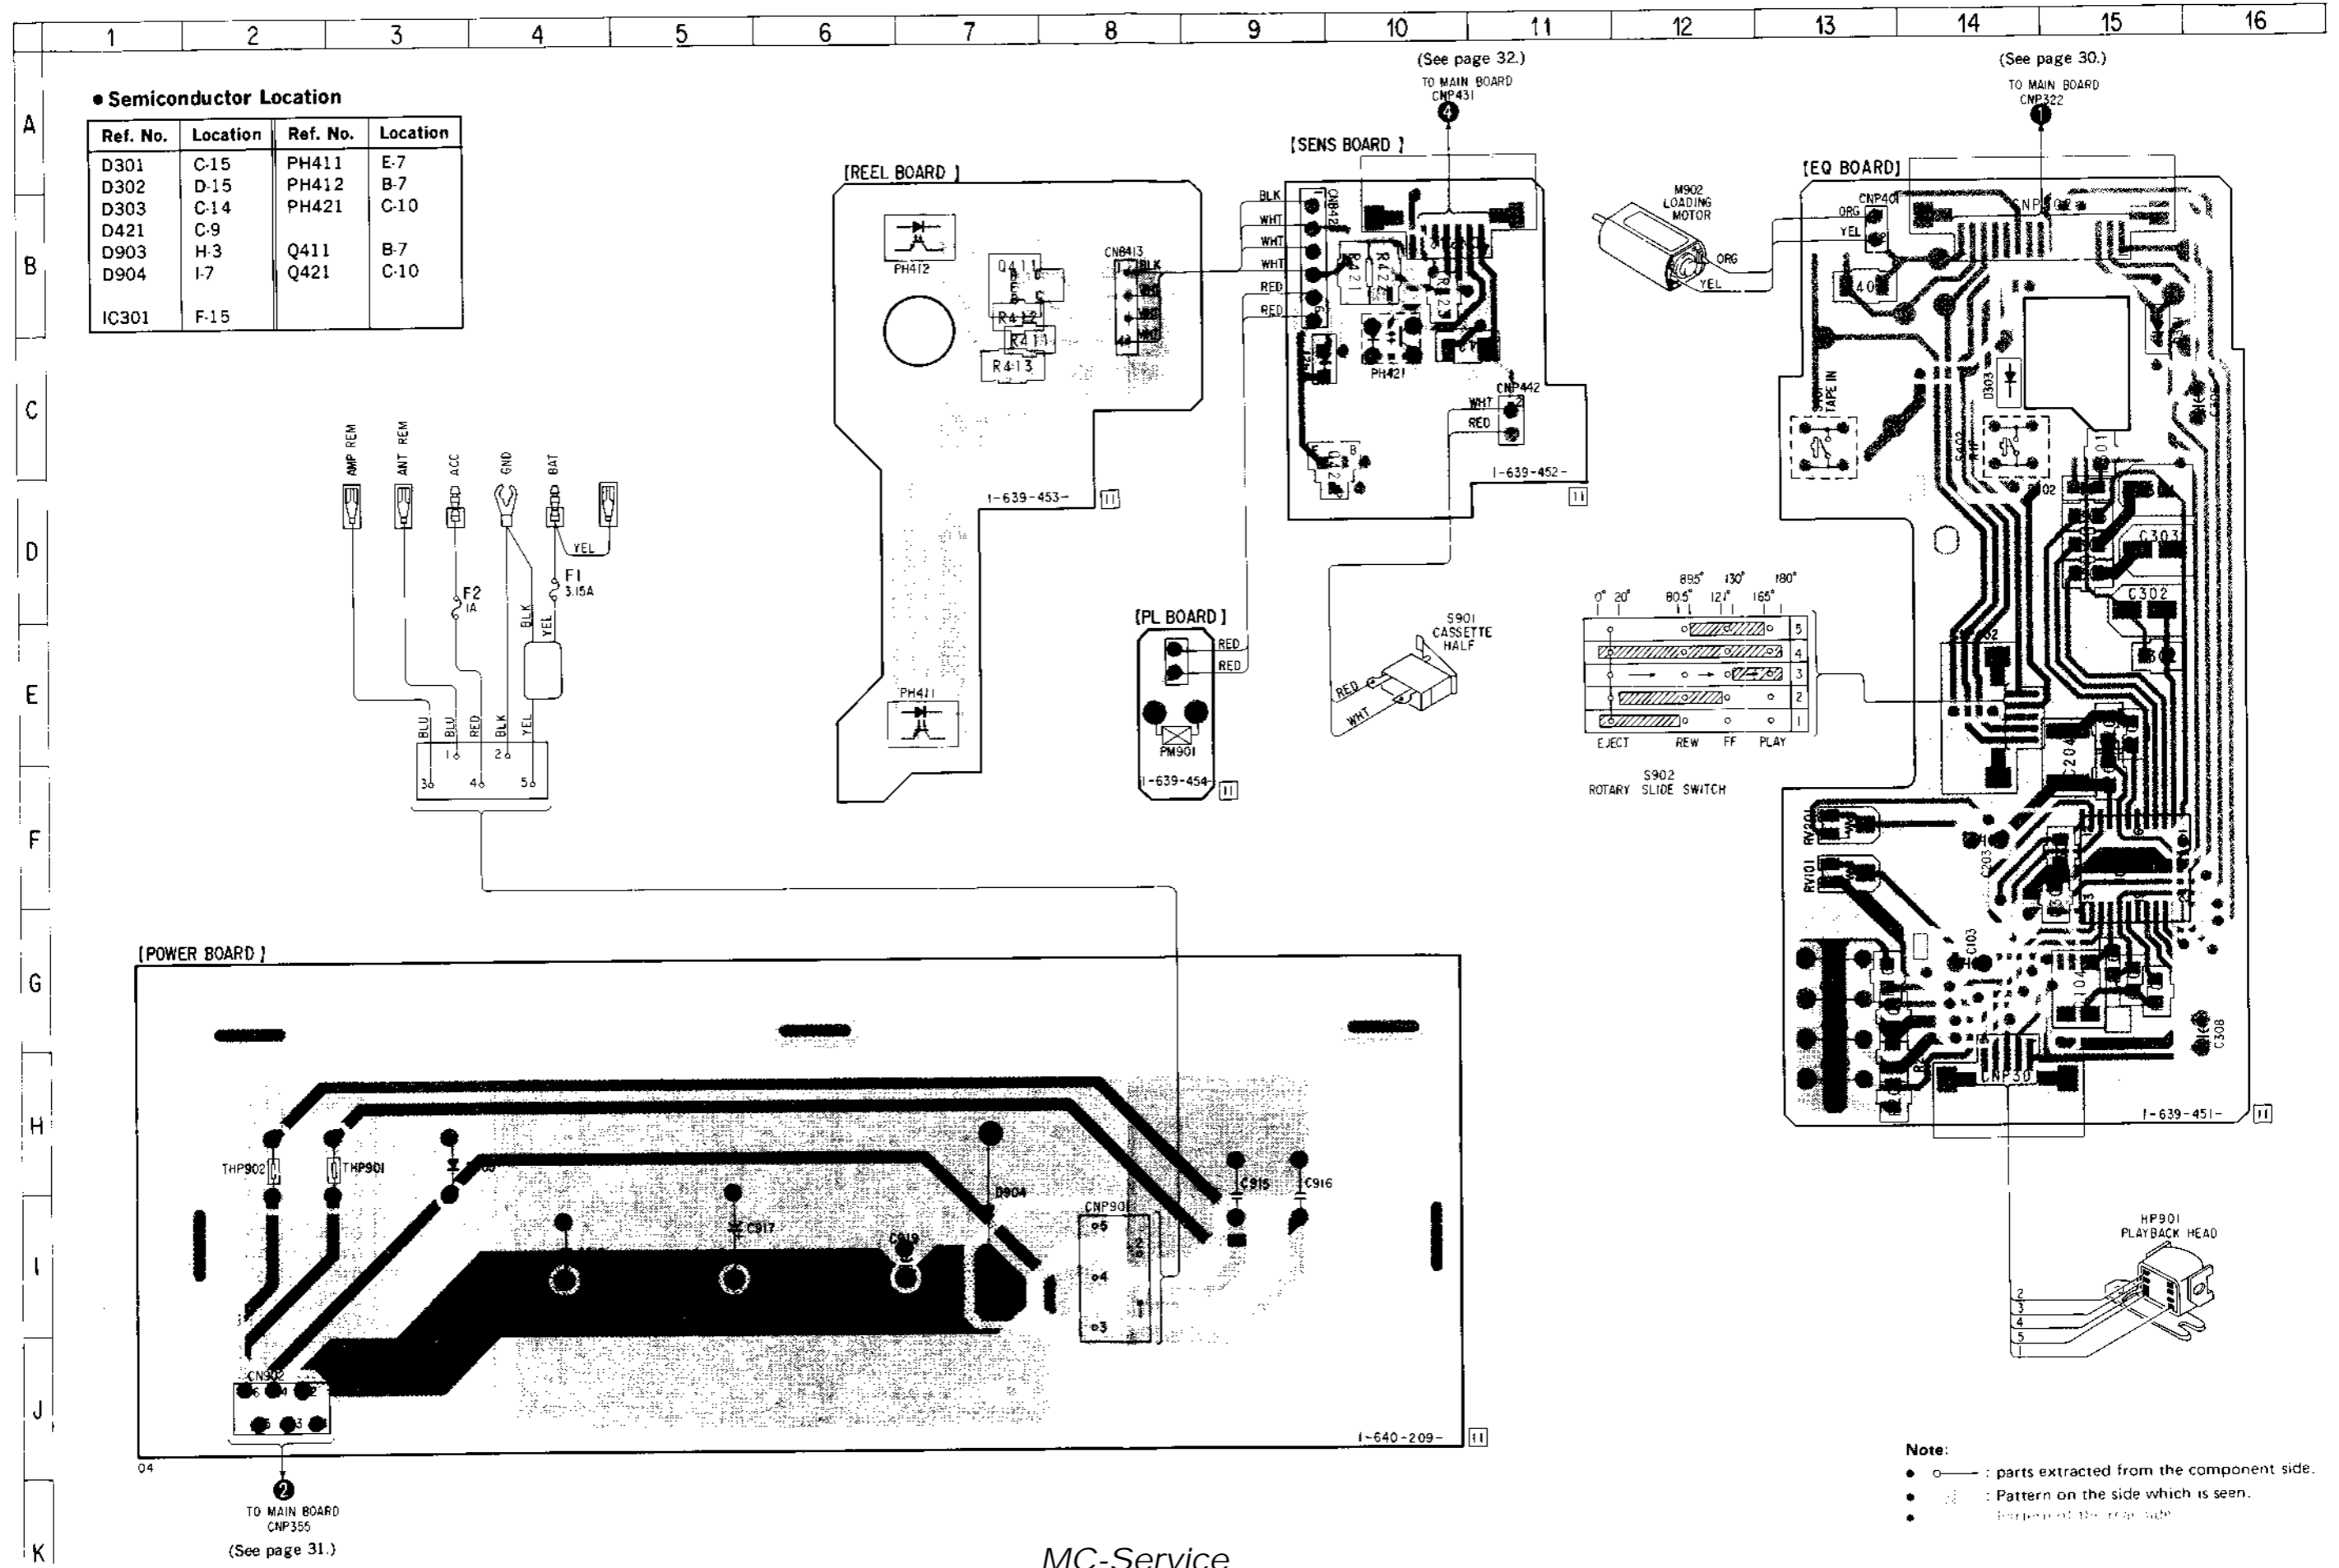


Note:
 • ○ : parts extracted from the component side.
 • □ : Pattern on the side which is seen.
 • ● : Component side of the board.

3-10. SCHEMATIC DIAGRAM — MD, POWER SECTION — • Refer to Page 50 for IC Block Diagrams.

1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16

A
B
C
D
E
F
G
H
I

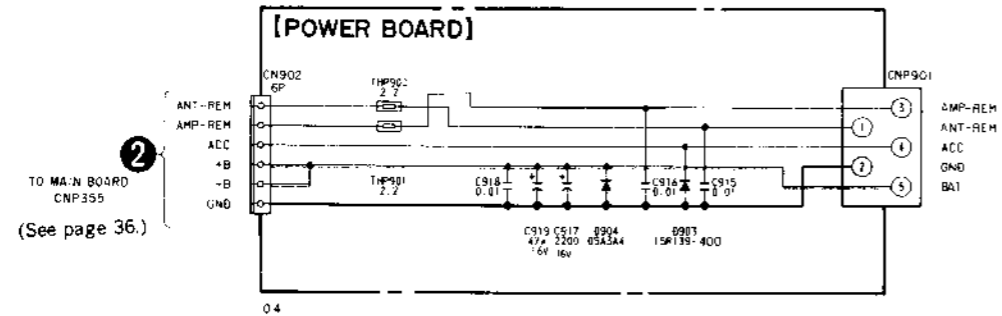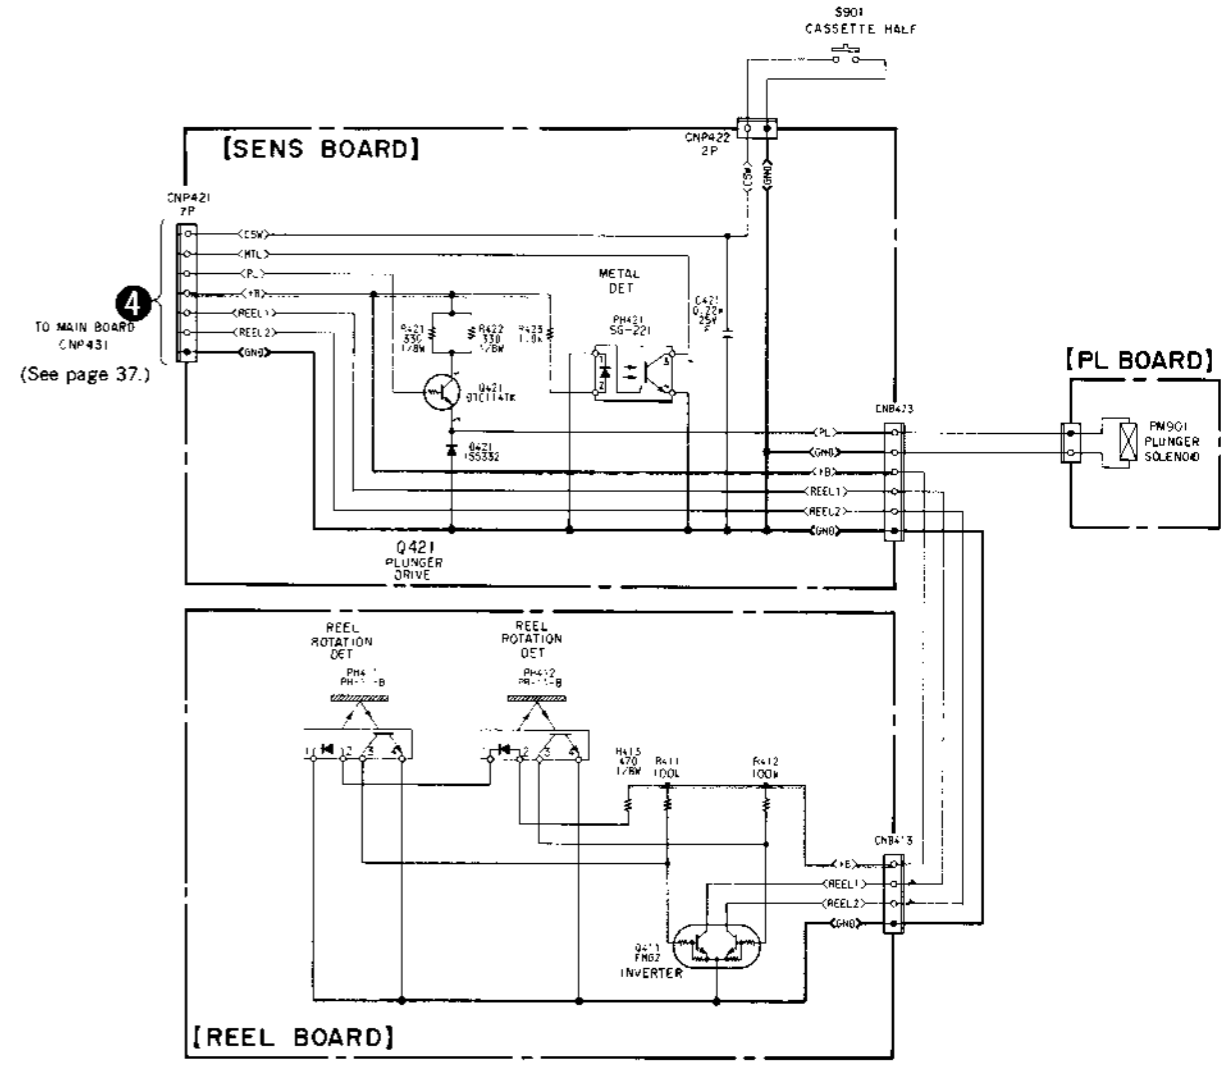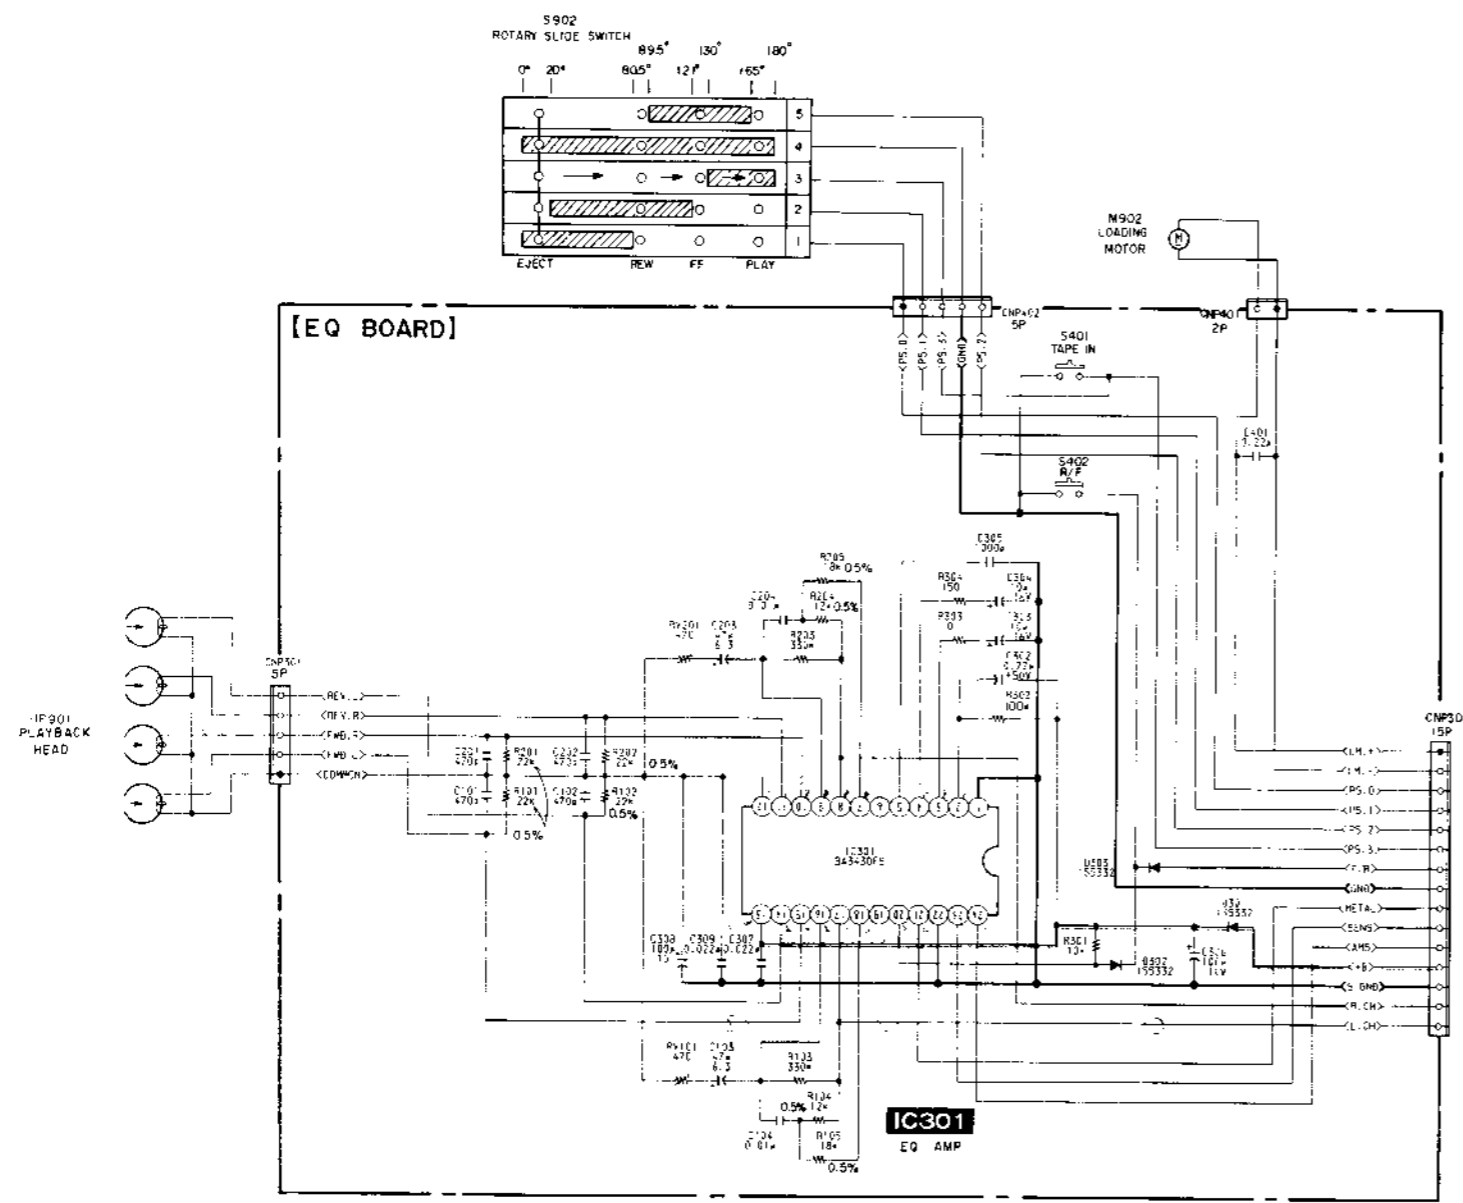


1 TO MAIN BOARD CNP322 (See page 37.)

4 TO MAIN BOARD CNP431 (See page 37.)


2 TO MAIN BOARD CNP355 (See page 36.)

MC-Service


IC41 SAF7579T

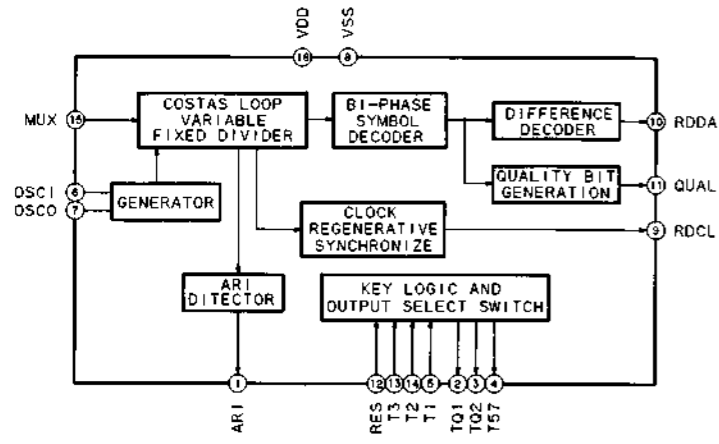


IC60 TA8172AF

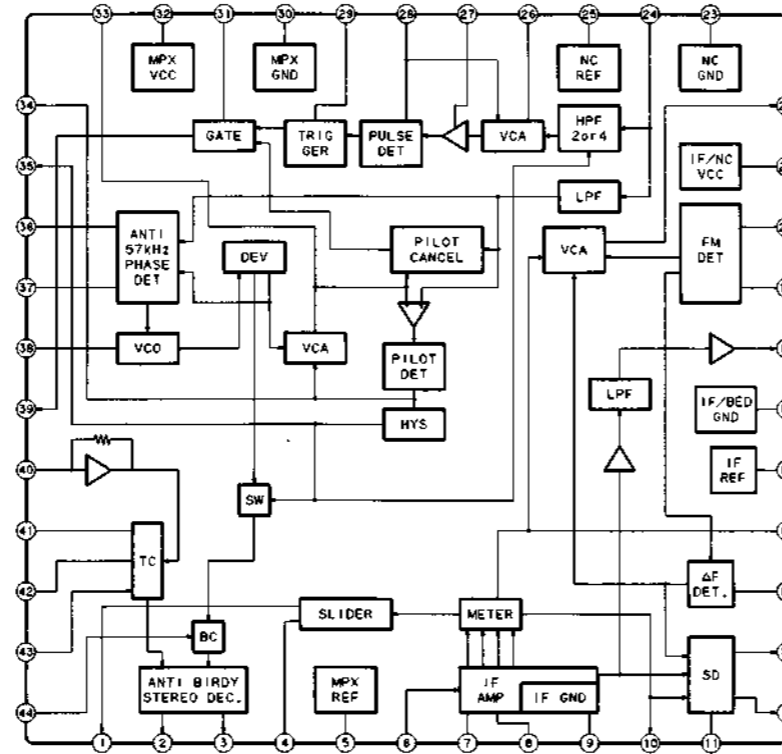


IC321 LC7537AN

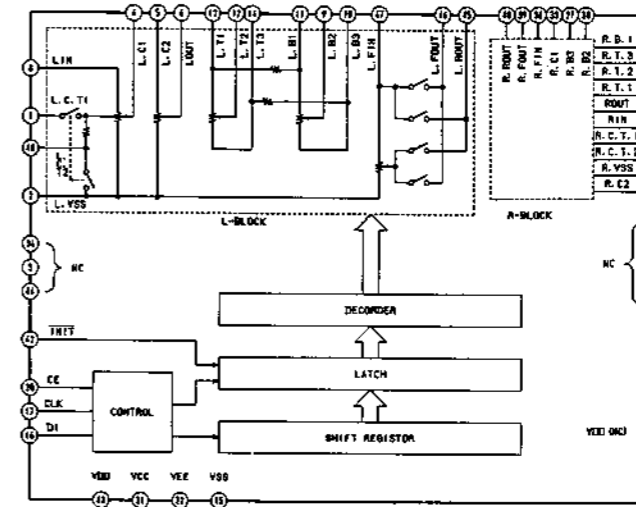


IC50 TDA1579

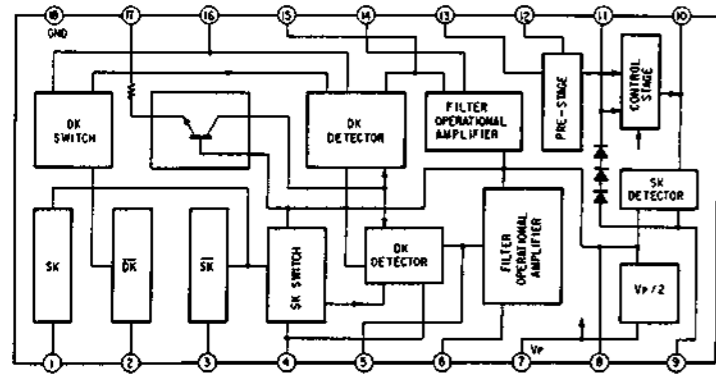


IC431, 505 LB1638

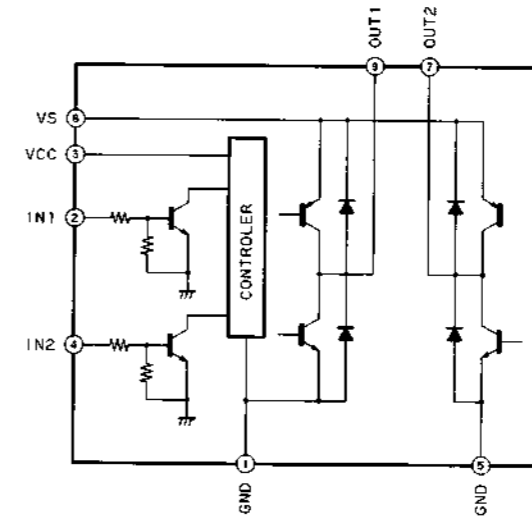


IC801, 901 TA8221H

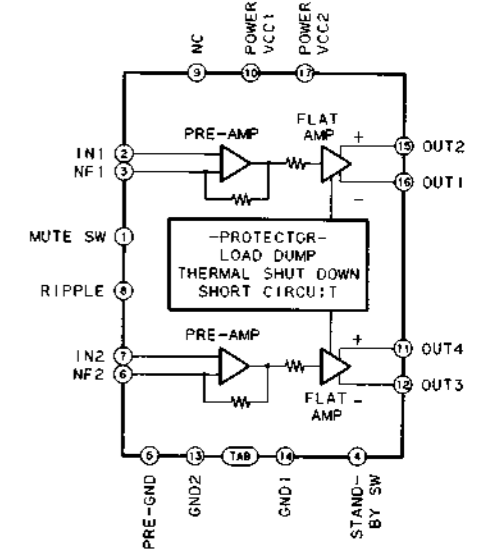

IC301 BA3430FS

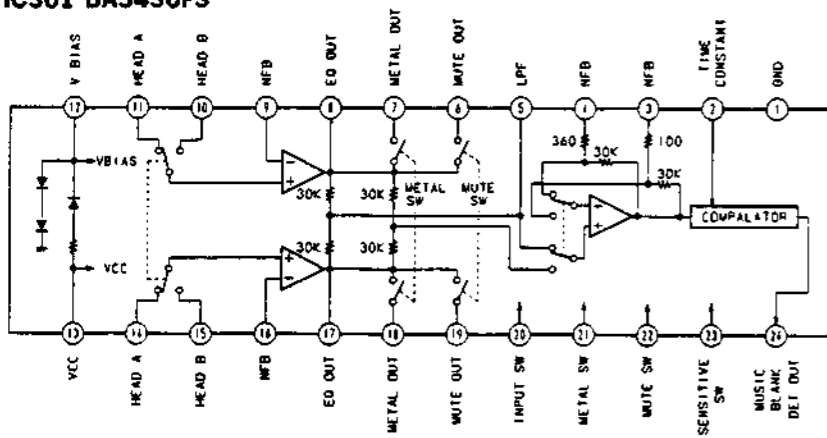

IC311 CXA1322M

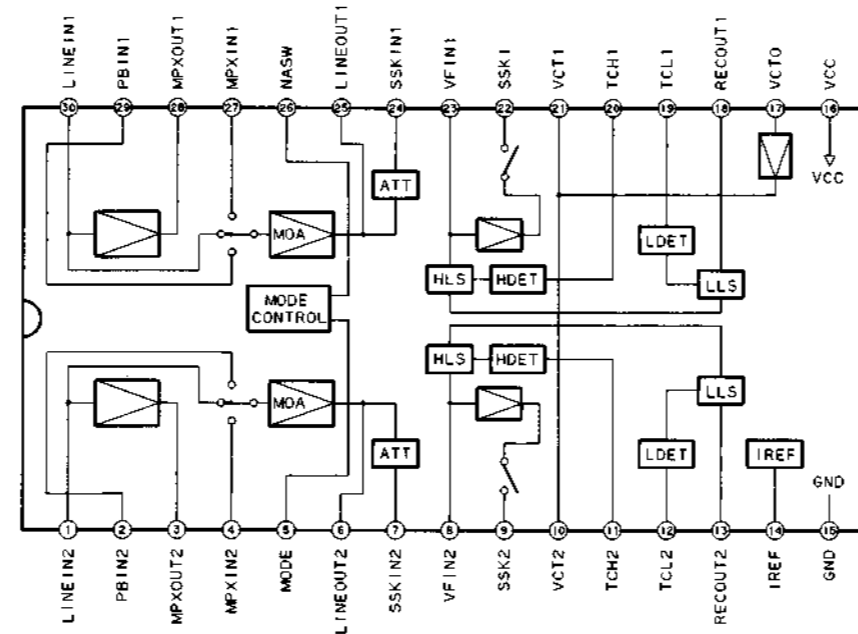

SECTION 4 EXPLODED VIEWS

NOTE:

- The mechanical parts with no reference number in the exploded views are not supplied.
- Items marked "*" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.

- -XX, -X mean standardized parts, so they may have some differences from the original one.


- Hardware(# mark) list is given in the last of this parts list.

- Color Indication of Appearance Parts
Example:

KNOB, BALANCE (WHITE)...(RED)


Parts Color Cabinet's Color

4-1. CHASSIS

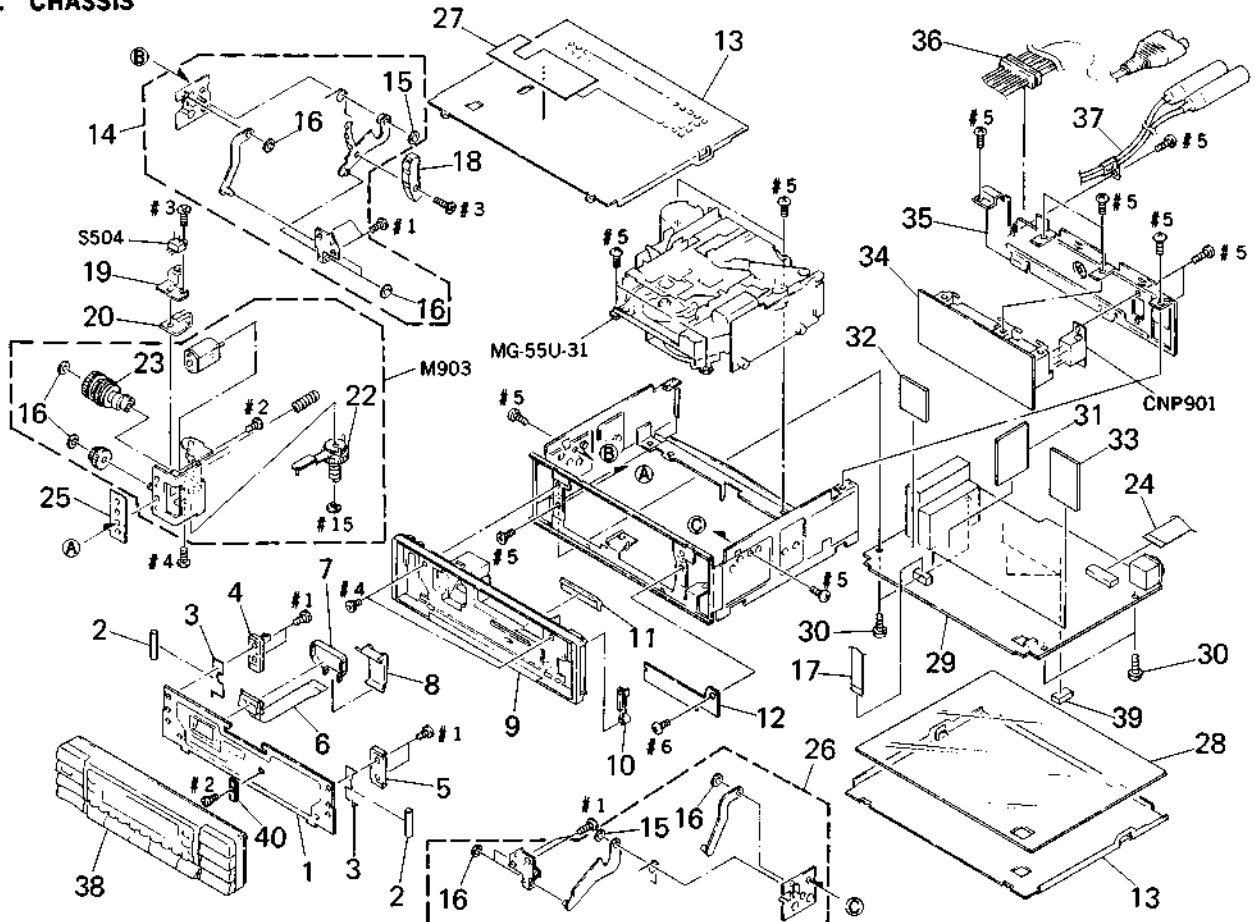


Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
1	* 3-367-517-01	BRACKET (F. P)		25	* 3-371-259-11	SPACER	
2	* 3-367-493-01	ROLLER		26	X-3362-831-1	LINK ASSY (R)	
3	* 3-367-492-01	SPRING (ROLLER)		27	3-369-238-01	LABEL, MODEL NUMBER (XR-U882)	
4	* 3-367-491-01	COVER (ROLLER L)		27	3-369-239-01	LABEL, MODEL NUMBER (XR-U881)	
5	* 3-367-475-01	COVER (ROLLER R)		28	* 3-367-588-01	INSULATOR	
6	1-573-539-11	CONNECTOR (WITH F. P. C)		29	* A-3222-251-A	MAIN BOARD, COMPLETE (XR-U881)	
7	3-367-489-01	COVER (FLEXIBLE)		29	* A-3222-296-A	MAIN BOARD, COMPLETE (XR-U882)	
8	3-367-488-01	COVER (CONNECTOR)		30	3-344-501-11	SCREW (# PTT 3X8), GROUND POINT	
9	* 3-367-523-01	PANEL, SUB		31	* A-3273-449-A	DIVER BOARD, COMPLETE	
10	3-367-494-01	BUTTON (RESET)		32	* A-3273-577-A	AIR BOARD, COMPLETE (XR-U882)	
11	* 3-367-495-01	PLATE (SUB PANEL), LIGHT GUIDE		33	* A-3273-451-A	RDS BOARD, COMPLETE	
12	* 1-640-205-11	RESET BOARD		34	* 1-640-209-11	POWER BOARD	
13	* 3-367-525-01	COVER		35	* 3-367-522-01	PANEL, BACK	
14	X-3362-827-1	LINK ASSY (L)		36	1-590-511-11	CORD (WITH CONNECTOR)	
15	L 3-321-813-01	WASHER, COTTER POLYETHYLENE		37	1-590-525-11	CORD (WITH CONNECTOR)	
16	3-325-290-21	WASHER, STOPPER		38	* A-3252-163-A	PANEL ASSY, FRONT (XR-U881)	
17	1-690-022-11	COARD, CONNECTION (7 CORE)		38	* A-3252-222-A	PANEL ASSY, FRONT (XR-U882)	
18	3-367-516-01	GEAR (3)		39	9-911-841-XX	CUSHION, CASSETTE LID	
19	* 3-367-501-01	BRACKET (SWITCH PC BOARD)		40	3-371-056-01	GUID	
20	* 3-367-513-01	COVER (SWITCH)		CNP901	* 1-573-384-11	CONNECTOR	
22	X-3363-338-1	GEAR (WORM 2) ASSY		M903	X-3362-835-1	MOTOR BLOCK ASSY	
23	X-3362-836-1	CLUTCH ASSY		S504	1-570-883-11	SWITCH, PUSH (2 KEY) (DPO/DPI)	
24	1-690-021-11	CORD, CONNECTION (15 CORE)					

4-2. FRONT PANEL/POWER CORD

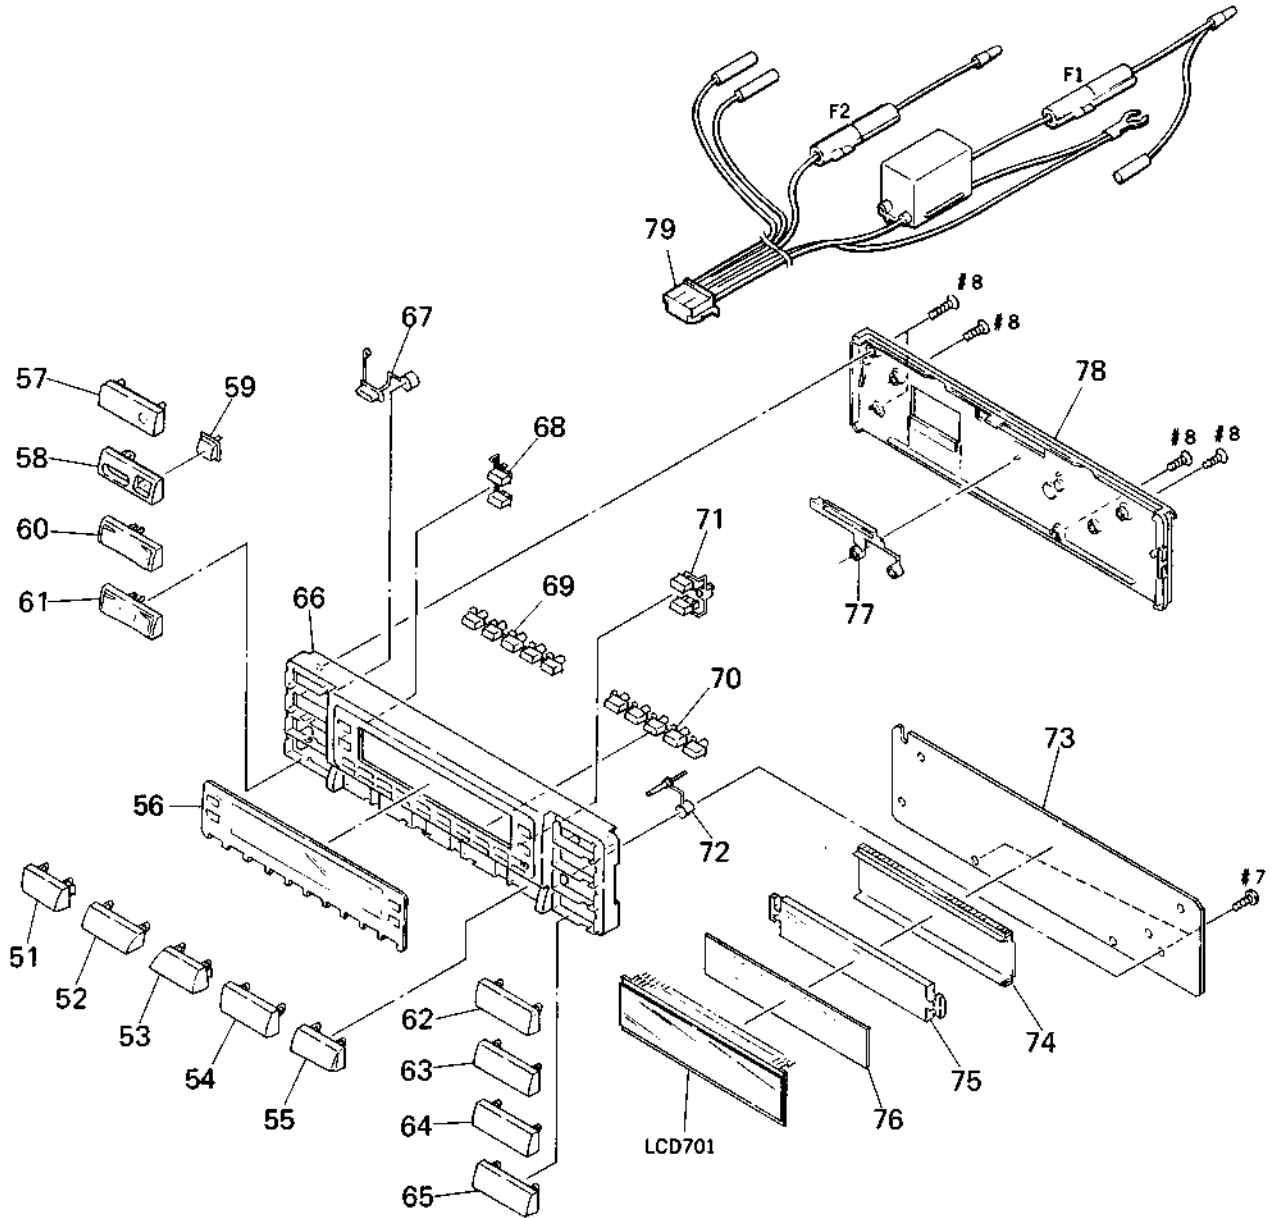

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
51	3-367-562-01	BUTTON (MUTE)		67	3-367-564-01	BUTTON (OFF)	
52	3-367-561-01	BUTTON (-)		68	3-367-566-01	BUTTON (2 GANG L)	
53	3-367-560-01	BUTTON (SELECT)		69	3-367-572-01	BUTTON (PRESET/5)	
54	3-367-559-01	BUTTON (+)		70	3-367-572-11	BUTTON (PRESET/5)	
55	3-367-558-01	BUTTON (LOUD)		71	3-367-569-01	BUTTON (2 GANG R)	
56	3-367-554-11	PLATE, INDICATION		72	3-367-574-01	BUTTON (RESET)	
57	3-367-563-01	BUTTON (LU)		73	* A-3222-252-A	KEY BOARD, COMPLETE	
58	3-367-570-01	COVER (RAY CATCHER)		74	* 3-367-571-01	HOLDER (LCD)	
59	3-367-567-01	FILTER (RAY CATCHER)		75	* 3-367-573-01	PLATE (LCD), LIGHT GUIDE	
60	3-367-565-01	BUTTON (SEEK)		76	* 3-368-252-01	SHEET (REFLECTOR)	
61	3-367-566-01	BUTTON (MANU)		77	* 3-367-474-01	BUTTON (LOCK)	
62	3-367-555-11	BUTTON (RU) (XR-U881)		78	3-367-526-01	PANEL, FRONT BACK	
63	3-367-555-21	BUTTON (RU) (XR-U882)		79	1-590-522-21	CORD (WITH CONNECTOR) 5P	
64	3-367-556-11	BUTTON (RM)		F1	1-532-457-XX	FUSE 3.15A	
65	3-367-556-21	BUTTON (RM)		F2	1-532-452-XX	FUSE 1A	
66	3-367-557-01	BUTTON (RD)		LCD701	1-809-286-11	DISPLAY PANEL, LIQUID CRYSTAL	
66	3-367-553-01	PANEL, FRONT					


4-3. MECHANISM DECK BLOCK (1)

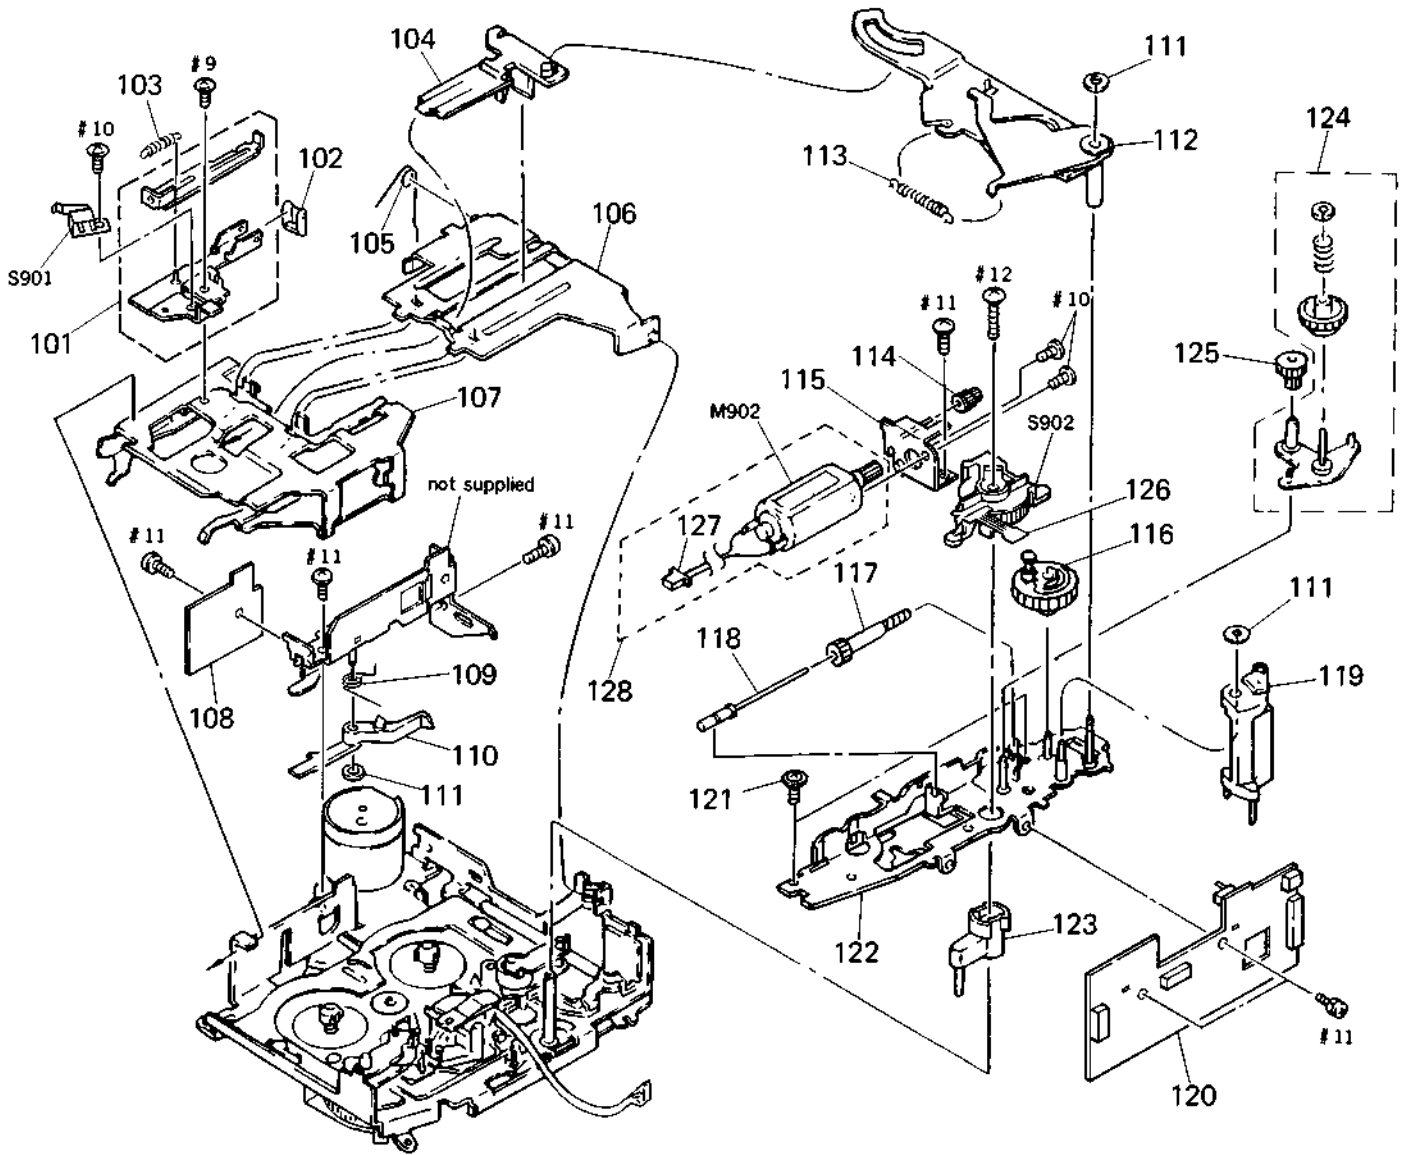

Ref.No.	Part No.	Description	Remark
101	X-3362-992-1	BRACKET ASSY. SWITCH	
102	3-368-235-01	LEVER, CASSETTE DETECTION	
103	3-542-475-00	SPRING, TENSION	
104	* 3-344-118-01	CATCHER	
105	3-344-113-03	SPRING	
106	* X-3362-262-1	HANGER (F) ASSY. HOUSING	
107	* 3-344-103-21	HOUSING, CASSETTE	
108	* 1-639-452-11	SENS BOARD	
109	3-344-285-01	SPRING (F), TS	
110	3-368-237-01	ARM (U), TS	
111	3-344-222-01	WASHER	
112	* X-3344-121-1	ARM ASSY. SUCTION	
113	3-344-216-01	SPRING (SUCTION ARM), TENSION	
114	3-344-281-01	GEAR (A), DRIVING	
115	* X-3344-142-2	BRACKET (F) ASSY. MOTOR	
116	X-3344-119-1	GEAR ASSY. LOADING CAM	

Ref.No.	Part No.	Description	Remark
117	3-344-156-01	GEAR (B), DRIVING	
118	* 3-344-157-01	SHAFT, DRIVING GEAR (B)	
119	* 3-344-260-01	ARM, REVERSE	
120	* A-3222-258-A	EQ BOARD, COMPLETE	
121	3-703-502-21	SCREW	
122	* X-3362-260-3	CHASSIS (F) ASSY. MCU	
123	X-3344-117-1	ARM ASSY. MODE	
124	A-3239-954-A	GEAR ASSY. DRIVING ARM	
125	3-344-108-01	GEAR (A), FRICTION	
126	1-635-519-12	PC BOARD, FLEXIBLE	
127	* 1-563-470-11	HOUSING, CONNECTOR 2P	
128	A-3252-174-A	MOTOR SUB ASSY (U), L	
M902	X-3362-826-1	GEAR ASSY. MOTOR	
S901	1-572-765-11	SWITCH, MICRO (CASSETTE HALF)	
S902	1-572-397-11	SWITCH, ROTARY SLIDE	


4-4. MECHANISM DECK BLOCK (2)

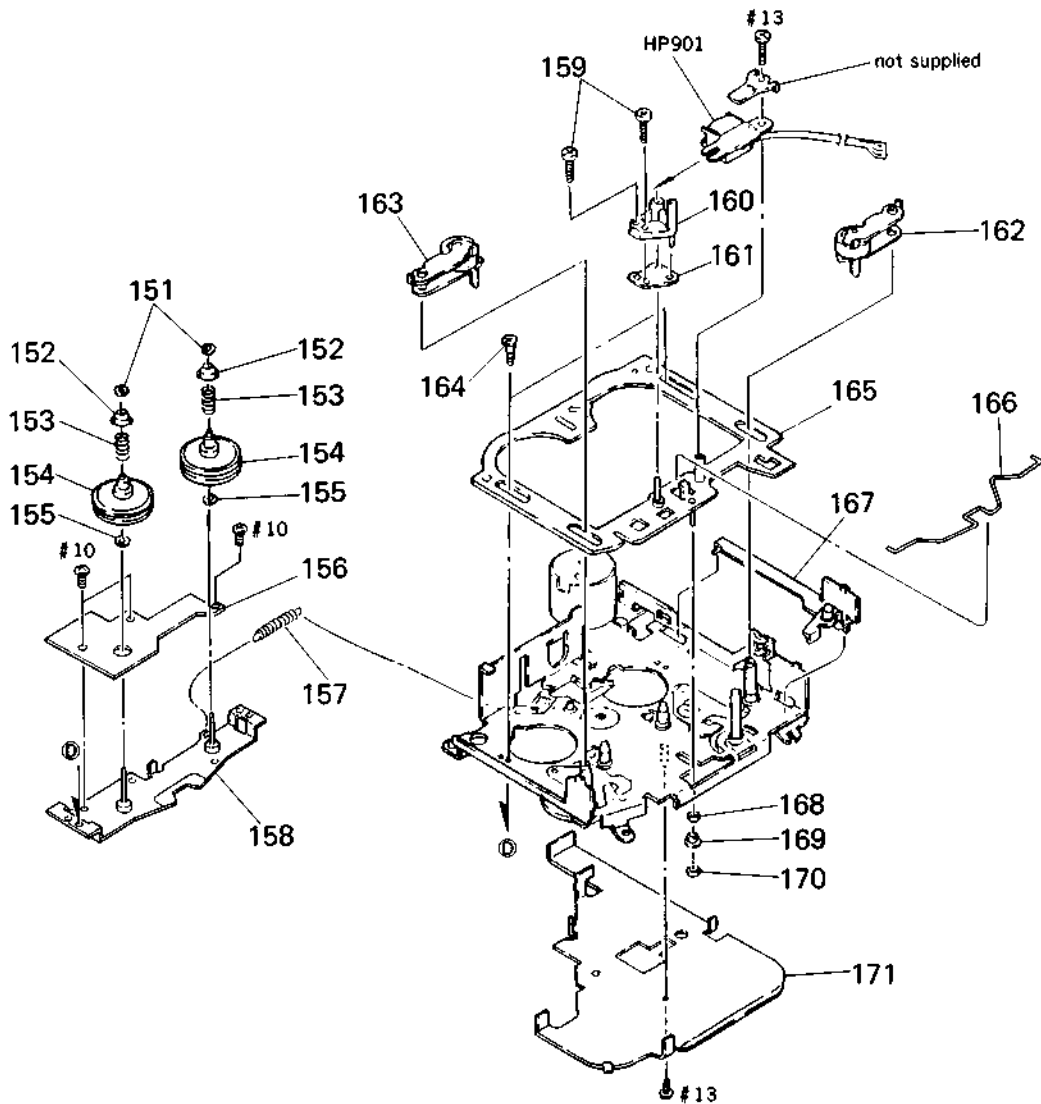

Ref. No.	Part No.	Description	Remark
151	3-364-151-01	WASHER	
152	3-365-725-01	CAP (F), REEL	
153	3-344-143-01	SPRING (BT), COMPRESSION	
154	X-3362-214-1	TABLE (F) ASSY, REEL	
155	3-701-437-01	POLY-SLIDER (A)	
156	* 1-639-453-11	REEL BOARD	
157	3-344-217-01	SPRING (CAM LOCK LEVER), TENTION	
158	* X-3344-144-2	BRACKET (F) ASSY, REEL TABLE	
159	3-364-122-01	SCREW (M1, 4X5.5), ADJ	
160	3-344-127-01	ARM, DAH	
161	3-344-128-01	SEAM, DAH	

Ref. No.	Part No.	Description	Remark
162	X-3344-116-1	ARM (F) ASSY, PINCH	
163	X-3344-115-1	ARM (R) ASSY, PINCH	
164	3-344-110-01	SCREW (HB), STEP	
165	X-3362-261-1	BASE ASSY (R), HEAD	
166	* 3-363-909-01	SPRING (R), PINCH PRESS	
167	* X-3344-118-1	LEVER ASSY, RVS CONVERSION	
168	3-344-117-01	ROLLER (B), H/B	
169	3-344-116-01	ROLLER (A), H/B	
170	3-344-222-01	WASHER	
171	* 3-344-220-01	COVER, MD	
HP901	1-543-800-21	HEAD, MAGNETIC (PLAYBACK)	

4-5. MECHANISM DECK BLOCK (3)

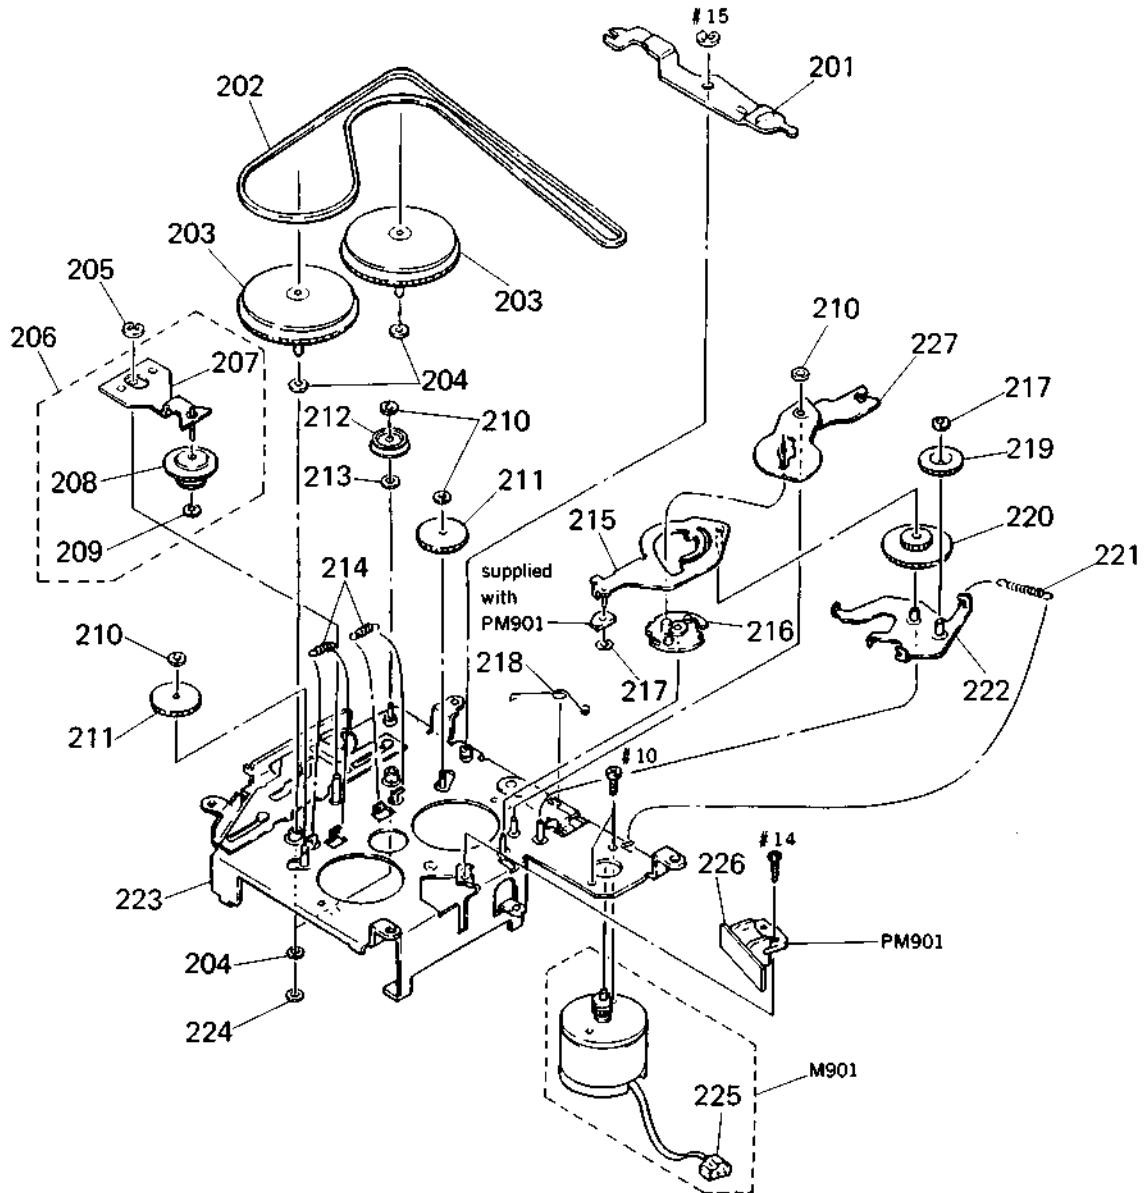

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
201	* X-3344-139-1	ARM ASSY. POWER		216	3-344-119-01	GEAR, RVS CAM	
202	3-344-115-01	BELT		217	3-344-223-01	WASHER	
203	3-344-261-01	FLYWHEEL (M)		218	3-344-279-01	SPRING, BUFFER	
204	3-701-437-01	POLY-SLIDER (A)		219	3-344-147-01	GEAR (A), RVS	
205	3-590-768-00	RING (A), E		220	3-344-146-01	GEAR (B), RVS	
206	A-3239-947-A	GEAR SUB ASSY. FR		221	3-344-215-01	SPRING, TENSION	
207	* X-3344-101-1	ARM ASSY. FR		222	* X-3344-106-1	LEVER ASSY. RVS GEAR (B)	
208	X-3344-102-1	GEAR ASSY. FR		223	* X-3362-215-2	CHASSIS (L) ASSY. MECHANICAL	
209	3-344-224-01	WASHER		224	3-364-151-01	WASHER	
210	3-344-222-01	WASHER		225	* 1-563-470-11	HOUSING, CONNECTOR 2P	
211	3-344-104-01	GEAR, PLAY		226	1-639-454-11	PL BOARD	
212	3-344-263-01	PULLEY (M), MIDWAY		227	* X-3344-114-1	LEVER ASSY. RVS	
213	3-701-436-01	WASHER, 1.6		M901	X-3344-136-3	CAPSTAN MOTOR SUB ASSY	
214	3-344-218-02	SPRING (PLAY ARM), TENSION		PM901	1-454-461-11	SOLENOID, PLUNGER	
215	X-3344-107-1	LEVER ASSY. CAM LOCK					

EQ

SECTION 5 ELECTRICAL PARTS LIST

NOTE:

- Due to standardization, replacements in the parts list may be different from the parts specified in the diagrams or the components used on the set.
- Items marked "*" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- -XX, -X mean standardized parts, so they may have some differences from the original one.
- CAPACITORS
uF: μ F

- RESISTORS
All resistors are in ohms
METAL: Metal-film resistor
METAL OXIDE: Metal Oxide-film resistor
- F: nonflammable
- COILS
uH: μ H
- SEMICONDUCTORS
In each case, u: μ , for example:
uA...: μ A..., uPA...: μ PA...,
uPB...: μ PB..., uPC...: μ PC...,
uPD...: μ PD...

When indicating parts by reference number, please include the board name.

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
* A-3222-258-A EO BOARD, COMPLETE *****				IC301	8-759-988-33	IC BA3430FS	
< CAPACITOR >				< RESISTOR >			
C101	1-130-467-00	MYLAR 470PF	5% 50V	R101	1-216-683-11	METAL CHIP 22K 0.5% 1/10W	
C102	1-130-467-00	MYLAR 470PF	5% 50V	R102	1-216-683-11	METAL CHIP 22K 0.5% 1/10W	
C103	1-126-285-11	ELECT 47uF	20% 6.3V	R103	1-216-109-00	METAL CHIP 330K 5% 1/10W	
C104	1-137-338-11	FILM CHIP 0.01uF	5% 250V	R104	1-216-677-11	METAL CHIP 12K 0.5% 1/10W	
C201	1-130-467-00	MYLAR 470PF	5% 50V	R105	1-216-681-11	METAL CHIP 18K 0.5% 1/10W	
C202	1-130-467-00	MYLAR 470PF	5% 50V	R201	1-216-683-11	METAL CHIP 22K 0.5% 1/10W	
C203	1-126-285-11	ELECT 47uF	20% 6.3V	R202	1-216-683-11	METAL CHIP 22K 0.5% 1/10W	
C204	1-137-338-11	FILM CHIP 0.01uF	5% 250V	R203	1-216-109-00	METAL CHIP 330K 5% 1/10W	
C302	1-126-189-11	ELECT 0.22uF	20% 50V	R204	1-216-677-11	METAL CHIP 12K 0.5% 1/10W	
C303	1-124-779-00	ELECT CHIP 10uF	20% 16v	R205	1-216-681-11	METAL CHIP 18K 0.5% 1/10W	
C304	1-124-779-00	ELECT CHIP 10uF	20% 16v	R301	1-216-073-00	METAL CHIP 10K 5% 1/10W	
C305	1-163-009-11	CERAMIC CHIP 0.001uF	10% 50V	R302	1-216-105-00	METAL CHIP 220K 5% 1/10W	
C306	1-126-277-11	ELECT 100uF	20% 10V	R303	1-216-295-00	METAL CHIP 0 5% 1/10W	
C307	1-163-037-11	CERAMIC CHIP 0.022uF	10% 25V	R304	1-216-029-00	METAL CHIP 150 5% 1/10W	
C308	1-126-277-11	ELECT 100uF	20% 10V	< VARIABLE RESISTOR >			
C309	1-163-037-11	CERAMIC CHIP 0.022uF	10% 25V	RV101	1-241-552-11	RES. ADJ CERMET 470	
C401	1-163-081-00	CERAMIC CHIP 0.22uF	25V	RV201	1-241-552-11	RES. ADJ CERMET 470	
< CONNECTOR >				< SWITCH >			
CNP301	1-569-806-21	CONNECTOR, FPC5P		S401	1-570-953-11	SWITCH, PUSH (1 KEY) (TAPE IN)	
CNP302	1-569-363-21	CONNECTOR, FPC 15P		S402	1-570-953-11	SWITCH, PUSH (1 KEY) (R/F)	
CNP401 *	1-506-998-11	PIN, CONNECTOR (PC BOARD) 2P		*****			
CNP402	1-569-806-21	CONNECTOR, FPC5P					
< DIODE >							
D301	8-719-976-31	DIODE 1SS332					
D302	8-719-976-31	DIODE 1SS332					
D303	8-719-976-31	DIODE 1SS332					

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
	* A-3222-252-A	KEY BOARD, COMPLETE *****		D731	8-719-987-45	TRANSISTOR CL-155Y/PG-CD	
	* 3-367-571-01	HOLDER (LCD)		D732	8-719-987-45	TRANSISTOR CL-155Y/PG-CD	
	* 3-367-573-01	PLATE (LCD), LIGHT GUIDE		D733	8-719-987-45	TRANSISTOR CL-155Y/PG-CD	
	* 3-368-252-01	SHEET (REFLECTOR)		D734	8-719-987-45	TRANSISTOR CL-155Y/PG-CD	
		< CAPACITOR >		D735	8-719-987-45	TRANSISTOR CL-155Y/PG-CD	
C701	1-164-222-11	CERAMIC CHIP 0.22uF	25V	D736	8-719-987-45	TRANSISTOR CL-155Y/PG-CD	
C702	1-163-141-00	CERAMIC CHIP 0.001uF	5% 50V	D737	8-719-987-45	TRANSISTOR CL-155Y/PG-CD	
C704	1-164-232-11	CERAMIC CHIP 0.01uF	50V	D738	8-719-987-45	TRANSISTOR CL-155Y/PG-CD	
C705	1-163-037-11	CERAMIC CHIP 0.022uF	10% 25V	D739	8-719-987-45	TRANSISTOR CL-155Y/PG-CD	
C706	1-135-149-21	TANTALUM CHIP 2.2uF	20% 10V	D740	8-719-987-45	TRANSISTOR CL-155Y/PG-CD	
C707	1-164-222-11	CERAMIC CHIP 0.22uF	25V	D741	8-719-987-45	TRANSISTOR CL-155Y/PG-CD	
C708	1-164-232-11	CERAMIC CHIP 0.01uF	50V	D742	8-719-987-45	TRANSISTOR CL-155Y/PG-CD	
		< CONNECTOR >				< IC >	
CNP701	1-580-806-11	CONNECTOR, PLUG 10P		IC701	8-759-515-60	IC RS-20	
		< DIODE >		IC702	8-759-154-94	IC UPD75008GB-632-3B4	
D701	8-719-977-00	DIODE DTZ5. 1C		IC703	8-759-246-16	IC TC9240F	
D702	8-719-977-07	DIODE DTZ6. 2B		IC704	8-759-981-65	IC LM2903M	
D703	8-719-976-31	DIODE 1SS332				< COIL >	
D704	8-719-976-31	DIODE 1SS332		L701	1-410-204-31	INDUCTOR CHIP 10uH	
D705	8-719-976-31	DIODE 1SS332				< LCD >	
D706	8-719-977-07	DIODE DTZ6. 2B		LCD701	1-809-286-11	DISPLAY PANEL, LIQUID CRYSTAL	
D707	8-719-977-07	DIODE DTZ6. 2B				< PILOT LAMP >	
D708	8-719-977-07	DIODE DTZ6. 2B		PL701	1-518-678-21	LAMP, PILOT	
D709	8-719-976-31	DIODE 1SS332		PL702	1-518-678-21	LAMP, PILOT	
D711	8-719-976-31	DIODE 1SS332		PL703	1-518-677-21	LAMP, PILOT	
D712	8-719-976-31	DIODE 1SS332		PL704	1-518-677-21	LAMP, PILOT	
D713	8-719-976-31	DIODE 1SS332				< TRANSISTOR >	
D714	8-719-976-31	DIODE 1SS332		Q701	8-729-904-57	TRANSISTOR DTB114EK	
D715	8-719-976-31	DIODE 1SS332		Q702	8-729-900-53	TRANSISTOR DTC114EK	
D716	8-719-976-31	DIODE 1SS332		Q703	8-729-904-57	TRANSISTOR DTB114EK	
D717	8-719-977-00	DIODE DTZ5. 1C		Q704	8-729-900-53	TRANSISTOR DTC114EK	
D718	8-719-987-45	TRANSISTOR CL-155Y/PG-CD		Q705	8-729-904-66	TRANSISTOR DTD113EK	
D719	8-719-987-45	TRANSISTOR CL-155Y/PG-CD		Q706	8-729-904-66	TRANSISTOR DTD113EK	
D720	8-719-987-45	TRANSISTOR CL-155Y/PG-CD		Q707	8-729-904-66	TRANSISTOR DTD113EK	
D721	8-719-987-45	TRANSISTOR CL-155Y/PG-CD		Q708	8-729-904-66	TRANSISTOR DTD113EK	
D722	8-719-987-45	TRANSISTOR CL-155Y/PG-CD		Q709	8-729-901-11	TRANSISTOR DTA124EK	
D723	8-719-987-45	TRANSISTOR CL-155Y/PG-CD		Q710	8-729-120-28	TRANSISTOR 2SC1623-L5L6	
D724	8-719-987-45	TRANSISTOR CL-155Y/PG-CD		Q711	8-729-120-28	TRANSISTOR 2SC1623-L5L6	
D725	8-719-987-45	TRANSISTOR CL-155Y/PG-CD				< RESISTOR >	
D726	8-719-987-45	TRANSISTOR CL-155Y/PG-CD		R701	1-216-049-00	METAL CHIP 1K 5% 1/10W	
D727	8-719-987-45	TRANSISTOR CL-155Y/PG-CD		R702	1-216-025-00	METAL CHIP 100 5% 1/10W	
D728	8-719-987-45	TRANSISTOR CL-155Y/PG-CD		R703	1-216-089-00	METAL CHIP 47K 5% 1/10W	
D729	8-719-987-45	TRANSISTOR CL-155Y/PG-CD					
D730	8-719-987-45	TRANSISTOR CL-155Y/PG-CD					

KEY MAIN DIVER RDS ARI

Ref. No.	Part No.	Description	Remark		
R704	1-216-081-00	METAL CHIP	22K	5%	1/10W
R705	1-216-065-00	METAL CHIP	4.7K	5%	1/10W
R706	1-216-065-00	METAL CHIP	4.7K	5%	1/10W
R707	1-216-073-00	METAL CHIP	10K	5%	1/10W
R708	1-216-105-00	METAL CHIP	220K	5%	1/10W
R709	1-216-105-00	METAL CHIP	220K	5%	1/10W
R710	1-216-089-00	METAL CHIP	47K	5%	1/10W
R711	1-216-089-00	METAL CHIP	47K	5%	1/10W
R712	1-216-081-00	METAL CHIP	22K	5%	1/10W
R713	1-216-073-00	METAL CHIP	10K	5%	1/10W
R714	1-216-063-00	METAL CHIP	3.9K	5%	1/10W
R715	1-216-041-00	METAL CHIP	470	5%	1/10W
R716	1-216-097-00	METAL CHIP	100K	5%	1/10W
R717	1-216-089-00	METAL CHIP	47K	5%	1/10W
R718	1-216-049-00	METAL CHIP	1K	5%	1/10W
R719	1-216-049-00	METAL CHIP	1K	5%	1/10W
R720	1-216-049-00	METAL CHIP	1K	5%	1/10W
R721	1-216-049-00	METAL CHIP	1K	5%	1/10W
R722	1-216-182-00	METAL GLAZE	220	5%	1/8W
R723	1-216-186-00	METAL GLAZE	330	5%	1/8W
R724	1-216-186-00	METAL GLAZE	330	5%	1/8W
R725	1-216-033-00	METAL CHIP	220	5%	1/10W
R726	1-216-033-00	METAL CHIP	220	5%	1/10W
R727	1-216-033-00	METAL CHIP	220	5%	1/10W
R728	1-216-033-00	METAL CHIP	220	5%	1/10W
R729	1-216-033-00	METAL CHIP	220	5%	1/10W
R730	1-216-033-00	METAL CHIP	220	5%	1/10W
R734	1-216-089-00	METAL CHIP	47K	5%	1/10W
< SWITCH >					
S701	1-572-768-11	SWITCH, KEY BOARD (CD)			
S702	1-572-768-11	SWITCH, KEY BOARD (MUTE)			
S703	1-572-768-11	SWITCH, KEY BOARD (SELECT)			
S704	1-572-768-11	SWITCH, KEY BOARD (MANU+/DISC FF)			
S705	1-572-768-11	SWITCH, KEY BOARD (MANU-/DISC REW)			
S706	1-572-768-11	SWITCH, KEY BOARD (+)			
S707	1-572-768-11	SWITCH, KEY BOARD (-)			
S708	1-572-768-11	SWITCH, KEY BOARD (LOUD)			
S709	1-572-768-11	SWITCH, KEY BOARD (TAPE ◀▶)			
S710	1-572-768-11	SWITCH, KEY BOARD (INTRO/1)			
S711	1-572-768-11	SWITCH, KEY BOARD (BANK/3)			
S712	1-572-768-11	SWITCH, KEY BOARD (SEEK+/AMS◀◀)			
S713	1-572-768-11	SWITCH, KEY BOARD (SEEK-/AMS▶▶)			
S714	1-572-768-11	SWITCH, KEY BOARD (REPEAT/2)			
S715	1-572-768-11	SWITCH, KEY BOARD (0)			
S716	1-572-768-11	SWITCH, KEY BOARD (TV/VIDEO)			
S717	1-572-768-11	SWITCH, KEY BOARD (7)			
S718	1-572-768-11	SWITCH, KEY BOARD (8)			
S719	1-572-768-11	SWITCH, KEY BOARD (M. SCAN/BTM)			

Ref. No.	Part No.	Description	Remark		
S720	1-572-768-11	SWITCH, KEY BOARD (DSPL)			
S721	1-572-768-11	SWITCH, KEY BOARD (9)			
S722	1-572-768-11	SWITCH, KEY BOARD (□□ FILE)			
S723	1-572-768-11	SWITCH, KEY BOARD (FM/AM)			
S724	1-572-768-11	SWITCH, KEY BOARD (BL. SKIP/6)			
S725	1-572-768-11	SWITCH, KEY BOARD (ATA/5)			
S726	1-572-768-11	SWITCH, KEY BOARD (OFF)			
S727	1-572-768-11	SWITCH, KEY BOARD (OPEN ☰)			
S728	1-572-768-11	SWITCH, KEY BOARD (SHUF/4)			
S729	1-572-768-11	SWITCH, KEY BOARD (SENS)			
< VIBRATOR >					
X701	1-567-775-11	VIBRATOR, CERAMIC (4.19MHZ)			

* A-3222-296-A MAIN BOARD, COMPLETE (XR-U882)					
* A-3222-215-A MAIN BOARD, COMPLETE (XR-U881)					

* A-3273-449-A DIVER BOARD, COMPLETE					

* A-3273-451-A RDS BOARD, COMPLETE					

* A-3273-557-A ARI BOARD, COMPLETE (XR-U882)					

1-690-021-11 CORD, CONNECTION (15 CORE)					
1-690-022-11 CORD, CONNECTION (7 CORE)					
< CAPACITOR >					
C1	1-126-162-11	ELECT	3.3uF	20%	50V
(XR-U882)					
C2	1-164-232-11	CERAMIC CHIP	0.01uF		50V
C3	1-136-162-00	FILM	0.056uF	5%	50V
C4	1-163-103-00	CERAMIC CHIP	27PF	5%	50V
C5	1-163-103-00	CERAMIC CHIP	27PF	5%	50V
C6	1-163-038-00	CERAMIC CHIP	0.1uF		25V
C7	1-136-169-00	FILM	0.22uF	5%	50V
C8	1-130-479-00	MYLAR	0.0047uF	5%	50V
C9	1-163-038-00	CERAMIC CHIP	0.1uF		25V
C10	1-164-232-11	CERAMIC CHIP	0.01uF		50V
C11	1-164-232-11	CERAMIC CHIP	0.01uF		50V
C12	1-163-809-11	CERAMIC CHIP	0.047uF	10%	25V
C13	1-164-182-11	CERAMIC CHIP	0.0033uF	10%	50V
C14	1-163-833-00	CERAMIC CHIP	0.068uF		25V
C15	1-163-038-00	CERAMIC CHIP	0.1uF		25V
C16	1-124-499-11	ELECT	1uF	20%	50V
C17	1-163-038-00	CERAMIC CHIP	0.1uF		25V
C18	1-163-833-11	CERAMIC CHIP	0.068uF	10%	25V
C19	1-164-232-11	CERAMIC CHIP	0.01uF		50V
C20	1-164-232-11	CERAMIC CHIP	0.01uF		50V

Ref. No.	Part No.	Description		Remark	Ref. No.	Part No.	Description		Remark
C21	1-164-232-11	CERAMIC CHIP	0.01uF	50V	C61	1-163-038-00	CERAMIC CHIP	0.1uF	25V
C22	1-163-809-11	CERAMIC CHIP	0.047uF	10% 25V			(XR-U882)		
C23	1-164-182-11	CERAMIC CHIP	0.0033uF	10% 50V	C62	1-163-833-00	CERAMIC CHIP	0.068uF	25V
C24	1-163-833-00	CERAMIC CHIP	0.068uF	25V			(XR-U882)		
C25	1-163-038-00	CERAMIC CHIP	0.1uF	25V	C63	1-163-833-00	CERAMIC CHIP	0.068uF	25V
							(XR-U882)		
C26	1-124-499-11	ELECT	1uF	20% 50V	C64	1-135-177-21	TANTALUM CHIP	1uF	20% 20V
C27	1-163-038-00	CERAMIC CHIP	0.1uF	25V	C65	1-135-177-21	TANTALUM CHIP	1uF	20% 20V
C28	1-163-833-11	CERAMIC CHIP	0.068uF	10% 25V	C66	1-163-077-00	CERAMIC CHIP	0.1uF	10% 25V
C29	1-164-232-11	CERAMIC CHIP	0.01uF	50V	C67	1-126-294-11	ELECT	4.7uF	20% 35V
C30	1-164-232-11	CERAMIC CHIP	0.01uF	50V	C68	1-110-351-11	MYLAR	0.001uF	5% 50V
					C69	1-164-006-11	CERAMIC CHIP	0.33uF	10% 16V
C31	1-163-097-00	CERAMIC CHIP	15PF	5% 50V	C70	1-164-343-11	CERAMIC CHIP	0.056uF	10% 25V
C32	1-164-232-11	CERAMIC CHIP	0.01uF	10% 50V					
C33	1-163-251-11	CERAMIC CHIP	100PF	5% 50V	C71	1-128-172-11	ELECT	47uF	20% 6.3V
C34	1-164-232-11	CERAMIC CHIP	0.01uF	50V	C72	1-124-257-00	ELECT	2.2uF	20% 50V
C35	1-164-232-11	CERAMIC CHIP	0.01uF	50V	C73	1-163-157-00	FILM	0.022uF	5% 50V
					C74	1-163-157-00	FILM	0.022uF	5% 50V
C36	1-164-006-11	CERAMIC CHIP	0.33uF	10% 16V	C75	1-163-077-00	CERAMIC CHIP	0.1uF	10% 25V
C37	1-163-251-11	CERAMIC CHIP	100PF	5% 50V					
C38	1-163-251-11	CERAMIC CHIP	100PF	5% 50V	C76	1-163-809-11	CERAMIC CHIP	0.047uF	10% 25V
C39	1-163-251-11	CERAMIC CHIP	100PF	5% 50V	C77	1-163-809-11	CERAMIC CHIP	0.047uF	10% 25V
C40	1-163-119-00	CERAMIC CHIP	120PF	5% 50V	C78	1-163-141-00	CERAMIC CHIP	0.001uF	5% 50V
					C79	1-163-809-11	CERAMIC CHIP	0.047uF	10% 25V
C41	1-163-038-00	CERAMIC CHIP	0.1uF	25V	C80	1-164-182-11	CERAMIC CHIP	0.0033uF	10% 50V
C42	1-163-097-00	CERAMIC CHIP	15PF	5% 50V					
C43	1-163-038-00	CERAMIC CHIP	0.1uF	25V	C81	1-163-037-11	CERAMIC CHIP	0.022uF	10% 25V
C44	1-124-229-00	ELECT	33uF	20% 10V	C82	1-163-833-00	CERAMIC CHIP	0.068uF	25V
C45	1-163-038-00	CERAMIC CHIP	0.1uF	25V	C83	1-163-038-00	CERAMIC CHIP	0.1uF	25V
					C84	1-135-177-21	TANTALUM CHIP	1uF	20% 20V
C46	1-163-038-00	CERAMIC CHIP	0.1uF	25V	C85	1-163-809-11	CERAMIC CHIP	0.047uF	10% 25V
C47	1-163-038-00	CERAMIC CHIP	0.1uF	25V					
C48	1-163-251-11	CERAMIC CHIP	100PF	5% 50V	C86	1-163-103-00	CERAMIC CHIP	27PF	5% 50V
C49	1-163-099-00	CERAMIC CHIP	18PF	5% 50V	C87	1-163-235-11	CERAMIC CHIP	22PF	5% 50V
C50	1-163-038-00	CERAMIC CHIP	0.1uF	25V	C88	1-163-038-00	CERAMIC CHIP	0.1uF	25V
					C89	1-163-263-11	CERAMIC CHIP	330PF	5% 50V
C51	1-164-704-91	CERAMIC CHIP	0.0033uF	5% 50V	C90	1-163-077-00	CERAMIC CHIP	0.1uF	10% 25V
C52	1-163-245-11	CERAMIC CHIP	56PF	5% 50V	C91	1-136-169-00	FILM	0.22uF	5% 50V
					C92	1-163-077-00	CERAMIC CHIP	0.1uF	10% 25V
C53	1-126-163-11	ELECT	4.7uF	20% 50V	C93	1-163-809-11	CERAMIC CHIP	0.047uF	10% 25V
					C94	1-163-809-11	CERAMIC CHIP	0.047uF	10% 25V
C54	1-136-163-00	FILM	0.068uF	5% 50V	C95	1-126-157-11	ELECT	10uF	20% 16V
C55	1-136-163-00	FILM	0.068uF	5% 50V	C96	1-164-695-11	CERAMIC CHIP	0.0022uF	5% 50V
					C97	1-163-037-11	CERAMIC CHIP	0.022uF	10% 25V
C56	1-163-038-00	CERAMIC CHIP	0.1uF	25V	C98	1-163-038-00	CERAMIC CHIP	0.1uF	25V
					C99	1-163-809-11	CERAMIC CHIP	0.047uF	10% 25V
C57	1-163-809-11	CERAMIC CHIP	0.047uF	10% 25V	C110	1-136-173-00	FILM	0.47uF	5% 50V
C58	1-163-809-11	CERAMIC CHIP	0.047uF	10% 25V	C111	1-130-475-00	MYLAR	0.0022uF	5% 50V
					C112	1-130-475-00	MYLAR	0.0022uF	5% 50V
C59	1-163-038-00	CERAMIC CHIP	0.1uF	25V	C113	1-128-341-11	ELECT	0.56uF	20% 50V
					C114	1-124-252-00	ELECT	0.33uF	20% 50V
C60	1-163-809-11	CERAMIC CHIP	0.047uF	10% 25V	C121	1-126-294-11	ELECT	4.7uF	20% 35V
					C122	1-126-295-11	ELECT	10uF	20% 35V

MAIN**DIVER****RDS****ARI**

Ref. No.	Part No.	Description		Remark	Ref. No.	Part No.	Description		Remark
C123	1-126-295-11	ELECT	10uF	20% 35V	C325	1-163-038-00	CERAMIC CHIP	0.1uF	25V
C124	1-126-295-11	ELECT	10uF	20% 35V	C326	1-163-081-00	CERAMIC CHIP	0.22uF	25V
C125	1-126-295-11	ELECT	10uF	20% 35V	C431	1-126-935-11	ELECT	470uF	20% 16V
C126	1-126-295-11	ELECT	10uF	20% 35V	C432	1-164-232-11	CERAMIC CHIP	0.01uF	50V
C127	1-130-476-00	MYLAR	0.0027uF	5% 50V	C433	1-126-157-11	ELECT	10uF	20% 16V
C128	1-136-162-00	FILM	0.056uF	5% 50V	C501	1-163-809-11	CERAMIC CHIP	0.047uF	10% 25V
C129	1-136-162-00	FILM	0.056uF	5% 50V	C502	1-163-227-11	CERAMIC CHIP	10PF	5% 50V
C130	1-163-117-00	CERAMIC CHIP	100PF	5% 50V	C503	1-163-235-11	CERAMIC CHIP	22PF	5% 50V
C131	1-126-295-11	ELECT	10uF	20% 35V	C506	1-163-038-00	CERAMIC CHIP	0.1uF	25V
C132	1-126-300-11	ELECT	0.47uF	20% 50V	C509	1-163-133-00	CERAMIC CHIP	470PF	5% 50V
C133	1-130-476-00	MYLAR	0.0027uF	5% 50V	C511	1-163-038-00	CERAMIC CHIP	0.1uF	25V
C134	1-163-105-00	CERAMIC CHIP	33PF	5% 50V	C513	1-163-809-11	CERAMIC CHIP	0.047uF	10% 25V
C135	1-126-294-11	ELECT	4.7uF	20% 35V	C514	1-135-177-21	TANTALUM CHIP	1uF	20% 20V
C136	1-163-105-00	CERAMIC CHIP	33PF	5% 50V	C515	1-164-232-11	CERAMIC CHIP	0.01uF	50V
C137	1-126-294-11	ELECT	4.7uF	20% 35V	C516	1-163-133-00	CERAMIC CHIP	470PF	5% 50V
C139	1-126-277-11	ELECT	100uF	20% 10V	C517	1-163-133-00	CERAMIC CHIP	470PF	5% 50V
C140	1-131-375-00	TANTALUM	4.7uF	20% 10V	C518	1-163-133-00	CERAMIC CHIP	470PF	5% 50V
C210	1-136-173-00	FILM	0.47uF	5% 50V	C519	1-163-037-11	CERAMIC CHIP	0.022uF	10% 25V
C211	1-130-475-00	MYLAR	0.0022uF	5% 50V	C521	1-126-277-11	ELECT	100uF	20% 10V
C212	1-130-475-00	MYLAR	0.0022uF	5% 50V	C522	1-164-232-11	CERAMIC CHIP	0.01uF	50V
C213	1-128-341-11	ELECT	0.56uF	20% 50V	C524	1-126-277-11	ELECT	100uF	20% 10V
C214	1-124-252-00	ELECT	0.33uF	20% 50V	C525	1-124-589-11	ELECT	47uF	20% 16V
C221	1-126-294-11	ELECT	4.7uF	20% 35V	C526	1-126-301-11	ELECT	1uF	20% 50V
C222	1-126-295-11	ELECT	10uF	20% 35V	C527	1-163-037-11	CERAMIC CHIP	0.022uF	10% 25V
C223	1-126-295-11	ELECT	10uF	20% 35V	C528	1-124-234-00	ELECT	22uF	20% 16V
C224	1-126-295-11	ELECT	10uF	20% 35V	C529	1-126-277-11	ELECT	100uF	20% 10V
C225	1-126-295-11	ELECT	10uF	20% 35V	C530	1-126-295-11	ELECT	10uF	20% 35V
C226	1-126-295-11	ELECT	10uF	20% 35V	C531	1-126-925-11	ELECT	470uF	20% 10V
C227	1-130-476-00	MYLAR	0.0027uF	5% 50V	C533	1-126-277-11	ELECT	100uF	20% 10V
C228	1-136-162-00	FILM	0.056uF	5% 50V	C534	1-164-232-11	CERAMIC CHIP	0.01uF	10% 50V
C229	1-136-162-00	FILM	0.056uF	5% 50V	C535	1-164-232-11	CERAMIC CHIP	0.01uF	50V
C230	1-163-117-00	CERAMIC CHIP	100PF	5% 50V	C536	1-126-157-11	ELECT	10uF	20% 16V
C231	1-126-295-11	ELECT	10uF	20% 35V	C537	1-163-037-11	CERAMIC CHIP	0.022uF	10% 25V
C232	1-126-300-11	ELECT	0.47uF	20% 50V	C538	1-163-133-00	CERAMIC CHIP	470PF	5% 50V
C233	1-130-476-00	MYLAR	0.0027uF	5% 50V	C539	1-126-294-11	ELECT	4.7uF	20% 35V
C234	1-163-105-00	CERAMIC CHIP	33PF	5% 50V	C540	1-164-232-11	CERAMIC CHIP	0.01uF	50V
C235	1-126-294-11	ELECT	4.7uF	20% 35V	C541	1-125-486-11	DUBLE LAYERS	0.22F	5.5V
C236	1-163-105-00	CERAMIC CHIP	33PF	5% 50V	C542	1-126-277-11	ELECT	100uF	20% 10V
C237	1-126-294-11	ELECT	4.7uF	20% 35V	C543	1-163-038-00	CERAMIC CHIP	0.1uF	25V
C239	1-126-277-11	ELECT	100uF	20% 10V	C544	1-163-038-00	CERAMIC CHIP	0.1uF	25V
C240	1-131-375-00	TANTALUM	4.7uF	20% 10V	C545	1-163-038-00	CERAMIC CHIP	0.1uF	25V
C310	1-126-277-11	ELECT	100uF	20% 10V	C546	1-163-038-00	CERAMIC CHIP	0.1uF	25V
C311	1-164-232-11	CERAMIC CHIP	0.01uF	50V	C548	1-163-038-00	CERAMIC CHIP	0.1uF	25V
C312	1-126-295-11	ELECT	10uF	20% 35V	C549	1-163-133-00	CERAMIC CHIP	470PF	5% 50V
C313	1-126-295-11	ELECT	10uF	20% 35V	C550	1-126-277-11	ELECT	100uF	20% 10V
C321	1-126-301-11	ELECT	1uF	20% 50V	C551	1-164-182-11	CERAMIC CHIP	0.0033uF	10% 50V
C322	1-164-232-11	CERAMIC CHIP	0.01uF	50V	C552	1-163-133-00	CERAMIC CHIP	470PF	5% 50V
C323	1-126-277-11	ELECT	100uF	20% 10V	C553	1-126-157-11	ELECT	10uF	20% 16V
C324	1-163-038-00	CERAMIC CHIP	0.1uF	25V	C554	1-126-162-11	ELECT	3.3uF	20% 50V

Ref. No.	Part No.	Description	Remark
C555	1-163-038-00	CERAMIC CHIP 0.1uF	25V
C556	1-163-038-00	CERAMIC CHIP 0.1uF	25V
C557	1-135-177-21	TANTAL CHIP 1uF	10% 20V
C558	1-135-177-21	TANTAL CHIP 1uF	10% 20V
C559	1-164-232-11	CERAMIC CHIP 0.01uF	10% 50V
C591	1-126-157-11	ELECT 10uF	20% 16V
C592	1-163-081-00	CERAMIC CHIP 0.22uF	25V
C593	1-164-232-11	CERAMIC CHIP 0.01uF	50V
C594	1-163-038-00	CERAMIC CHIP 0.1uF	25V
C595	1-163-038-00	CERAMIC CHIP 0.1uF	25V
< CERAMIC FILTER >			
CF10	1-567-415-11	FILTER, CERAMIC	
CF11	1-567-415-11	FILTER, CERAMIC	
CF20	1-567-415-11	FILTER, CERAMIC	
< CONNECTOR >			
CN10	* 1-573-607-11	CONNECTOR, L TYPE 6P	
CN40	* 1-573-608-11	CONNECTOR, L TYPE 7P	
CN50	* 1-566-454-11	CONNECTOR, L TYPE 8P (XR-U882)	
CNP332	1-569-363-21	CONNECTOR, FPC 15P	
CNP333	* 1-506-988-11	PIN, CONNECTOR (PC BOARD) 6P	
CNP334	* 1-506-985-11	PIN, CONNECTOR (PC BOARD) 3P	
CNP335	* 1-580-915-11	SOCKET, CONNECTOR 6P	
CNP431	* 1-580-920-11	HOUSING, CONNECTOR 7P	
CNP433	* 1-506-984-11	PIN, CONNECTOR (PC BOARD) 2P	
CNP531	* 1-580-911-11	HOUSING, CONNECTOR 11P	
CNP532	1-580-907-11	PLUG, CONNECTOR	
CNP533	* 1-506-984-11	PIN, CONNECTOR (PC BOARD) 2P	
CNP534	* 1-506-985-11	PIN, CONNECTOR (PC BOARD) 3P	
CNP535	* 1-506-985-11	PIN, CONNECTOR (PC BOARD) 3P	
CNP536	1-564-187-00	PIN, CONNECTOR	
< DIODE >			
D1	8-719-800-76	DIODE 1SS226	
D2	8-719-976-31	DIODE 1SS332	
D10	8-719-800-76	DIODE 1SS226	
D11	8-719-989-95	DIODE 1SV154	
D12	8-716-976-31	DIODE 1SS332	
D20	8-719-800-75	DIODE 1SS226	
D21	8-719-989-96	DIODE 1SV154	
D22	8-716-976-31	DIODE 1SS332	
D50	8-719-976-31	DIODE 1SS332 (XR-U882)	
D60	8-719-976-31	DIODE 1SS332	
D61	8-719-800-76	DIODE 1SS226	
D62	8-719-976-31	DIODE 1SS332	
D63	8-719-400-18	DIODE MA152WK	
D320	8-719-400-18	DIODE MA152WK	
D321	8-719-800-76	DIODE 1SS226	

Ref. No.	Part No.	Description	Remark
D322	8-719-976-83	DIODE DT23. 6	
D431	8-719-976-31	DIODE 1SS332	
D432	8-719-976-31	DIODE 1SS332	
D433	8-719-400-18	DIODE MA152WK	
D434	8-719-977-25	DIODE DT29. 1C	
D501	8-719-976-31	DIODE 1SS332	
D502	8-719-976-31	DIODE 1SS332	
D503	8-719-400-18	DIODE MA152WK	
D504	8-719-976-31	DIODE 1SS332	
D505	8-719-400-18	DIODE MA152WK	
D506	8-719-976-31	DIODE 1SS332	
D507	8-719-976-31	DIODE 1SS332	
D508	8-719-976-31	DIODE 1SS332	
D509	8-719-400-18	DIODE MA152WK	
D510	8-719-977-07	DIODE DT26. 2B	
D511	8-719-977-07	DIODE DT26. 2B	
D512	8-719-976-31	DIODE 1SS332	
D513	8-719-977-07	DIODE DT26. 2B	
D514	8-719-977-07	DIODE DT26. 2B	
D515	8-719-400-18	DIODE MA152WK	
D516	8-719-977-07	DIODE DT26. 2B	
D517	8-719-104-34	DIODE 1S2836	
D518	8-719-976-31	DIODE 1SS332	
D519	8-719-977-16	DIODE DT27. 5B	
D520	8-719-976-31	DIODE 1SS332	
D521	8-719-978-05	DIODE DT23. 6	
D522	8-719-977-25	DIODE DT29. 1C	
D523	8-719-977-03	DIODE DT25. 6B	
D524	8-719-977-32	DIODE DT211B	
D525	8-719-976-31	DIODE 1SS332	
D526	8-719-977-16	DIODE DT27. 5B	
D529	8-719-977-25	DIODE DT29. 1C	
D530	8-719-400-18	DIODE MA152WK	
D531	8-719-977-07	DIODE DT26. 2B	
D532	8-719-976-31	DIODE 1SS332	
D533	8-719-977-25	DIODE DT29. 1C	
D535	8-719-977-16	DIODE DT27. 5B	
D534	8-719-977-07	DIODE DT26. 2B	
D536	8-719-977-16	DIODE DT27. 5B	
D537	8-719-977-28	DIODE DT210B	
< IC >			
IC1	8-759-823-81	IC LC7216M	
IC10	8-759-201-36	IC TA7303P	
IC11	8-759-509-91	IC XRA10393F	
IC20	8-759-201-36	IC TA7303P	
IC40	8-759-514-80	IC TBA120U	
IC41	8-759-514-78	IC SAF7579T	
IC42	8-759-823-84	IC LC7071NM	

MAIN

DIVER

RDS

ARI

Ref. No.	Part No.	Description	Remark
IC50	8-759-998-24	IC TDA1579T (XR-U882)	
IC51	8-759-981-92	IC RC4558M (XR-U882)	
IC60	8-759-246-22	IC TA8172AF	
IC61	8-759-970-89	IC BA10358F	
IC121	8-759-711-85	IC NJM4580E-D	
IC122	8-759-711-85	IC NJM4580E-D	
IC123	8-759-711-85	IC NJM4580E-D	
IC221	8-759-711-85	IC NJM4580E-D	
IC222	8-759-711-85	IC NJM4580E-D	
IC223	8-759-711-85	IC NJM4580E-D	
IC311	8-752-055-10	IC CXA1332M	
IC321	8-759-820-15	IC LC7537AN	
IC322	8-759-711-85	IC NJM4580E-D	
IC431	8-759-823-87	IC LB1638M	
IC501	8-759-155-03	IC uPD75116GF-E47-3BE	
IC502	8-759-154-93	IC uPD75116GF-E23-3BE	
IC503	8-759-513-44	IC X24C16S1	
IC504	8-759-940-45	IC S-8054HN-CB	
IC505	8-759-823-87	IC LB1638M	
IC506	8-759-710-82	IC NJM2406F	
< CONNECTOR >			
J1	* 1-563-961-11	SOCKET, CONNECTOR	
J2	* 1-563-961-11	SOCKET, CONNECTOR	
< JUMPER >			
JR1	1-216-295-00	METAL CHIP 0 5% 1/10W (XR-U881)	
JR60	1-216-295-00	METAL GLAZE 0 5% 1/8W	
JR500	1-216-295-00	METAL CHIP 0 5% 1/10W (XR-U882)	
JR518	1-216-295-00	METAL CHIP 0 5% 1/10W (XR-U881)	
JR527	1-216-295-00	METAL CHIP 0 5% 1/10W (XR-U881)	
JR548	1-216-295-00	METAL CHIP 0 5% 1/10W (XR-U881)	
< COIL >			
L1	1-410-196-11	INDUCTOR CHIP 2.2mH (XR-U882)	
L1	1-410-200-31	INDUCTOR CHIP 4.7uH (XR-U881)	
L2	1-412-516-21	INDUCTOR 22mH (XR-U881)	
L3	1-410-204-31	INDUCTOR CHIP 10uH	
L4	1-410-204-31	INDUCTOR CHIP 10uH	
L5	1-410-184-51	INDUCTOR CHIP 0.22uH	
L6	1-410-184-51	INDUCTOR CHIP 0.22uH	
L10	1-410-204-31	INDUCTOR CHIP 10uH	
L11	1-408-798-00	INDUCTOR CHIP 1mH	
L12	1-410-204-31	INDUCTOR CHIP 10uH	
L13	1-410-204-31	INDUCTOR CHIP 10uH	
L20	1-410-204-31	INDUCTOR CHIP 10uH	
L21	1-408-798-00	INDUCTOR CHIP 1mH	
L50	1-424-036-11	COIL (FILTER) (XR-U882)	
L60	1-408-798-00	INDUCTOR CHIP 1mH	

Ref. No.	Part No.	Description	Remark
L61	1-410-196-11	INDUCTOR CHIP 2.2uH	
L62	1-410-204-31	INDUCTOR CHIP 10uH	
L501	1-410-204-31	INDUCTOR CHIP 10uH	
L502	1-410-204-31	INDUCTOR CHIP 10uH	
< TRANSISTOR >			
Q1	8-729-901-00	TRANSISTOR DTC124EK	
Q2	8-729-901-00	TRANSISTOR DTC124EK	
Q3	8-729-809-71	TRANSISTOR 2SK536	
Q4	8-729-901-04	TRANSISTOR DTA114EK	
Q10	8-729-120-28	TRANSISTOR 2SC1623-L5L6	
Q11	8-729-901-04	TRANSISTOR DTA114EK	
Q12	8-729-304-14	TRANSISTOR 2SK360E	
Q13	8-729-920-41	TRANSISTOR FMC3	
Q20	8-729-120-28	TRANSISTOR 2SC1623-L5L6	
Q21	8-729-901-04	TRANSISTOR DTA114EK	
Q23	8-729-920-41	TRANSISTOR FMC3	
Q40	8-729-120-28	TRANSISTOR 2SC1623-L5L6	
Q41	8-729-216-22	TRANSISTOR 2SA1162-G	
Q60	8-729-120-28	TRANSISTOR 2SC1623-L5L6	
Q61	8-729-920-21	TRANSISTOR DTC314TKH04	
Q62	8-729-920-21	TRANSISTOR DTC314TKH04	
Q63	8-729-900-53	TRANSISTOR DTC114EK	
Q121	8-729-920-21	TRANSISTOR DTC314TKH04	
Q122	8-729-920-21	TRANSISTOR DTC314TKH04	
Q124	8-729-920-21	TRANSISTOR DTC314TKH04	
Q221	8-729-920-21	TRANSISTOR DTC314TKH04	
Q222	8-729-920-21	TRANSISTOR DTC314TKH04	
Q224	8-729-920-21	TRANSISTOR DTC314TKH04	
Q311	8-729-920-56	TRANSISTOR FMG1	
Q431	8-729-106-60	TRANSISTOR 2SB1115A	
Q432	8-729-900-53	TRANSISTOR DTC114EK	
Q433	8-729-921-48	TRANSISTOR 2SD1760F5-0	
Q434	8-729-920-41	TRANSISTOR FMC3	
Q501	8-729-216-22	TRANSISTOR 2SA1162-G	
Q502	8-729-216-22	TRANSISTOR 2SA1162-G	
Q503	8-729-903-10	TRANSISTOR FMW1	
Q504	8-729-907-26	TRANSISTOR IMX1	
Q505	8-729-903-10	TRANSISTOR FMW1	
Q506	8-729-120-28	TRANSISTOR 2SC1623-L5L6	
Q507	8-729-216-22	TRANSISTOR 2SA1162-G	
Q508	8-729-216-22	TRANSISTOR 2SA1162-G	
Q509	8-729-216-22	TRANSISTOR 2SA1162-G	
Q510	8-729-216-22	TRANSISTOR 2SA1162-G	
Q511	8-729-900-53	TRANSISTOR DTC114EK	
Q512	8-729-920-41	TRANSISTOR FMC3	
Q513	8-729-920-41	TRANSISTOR FMC3	
Q514	8-729-904-63	TRANSISTOR DTB123YK	
Q515	8-729-904-63	TRANSISTOR DTB123YK	

MAIN

DIVER

RDS

ARI

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
Q516	8-729-904-63	TRANSISTOR DTB123YK		R30	1-216-057-00	METAL CHIP 2.2K 5%	1/10W
Q517	8-729-904-63	TRANSISTOR DTB123YK		R31	1-216-089-00	METAL CHIP 47K 5%	1/10W
Q518	8-729-106-68	TRANSISTOR 2SD1615A-GP		R32	1-216-089-00	METAL CHIP 47K 5%	1/10W
Q519	8-729-903-10	TRANSISTOR FMW1		R33	1-216-089-00	METAL CHIP 47K 5%	1/10W
Q520	8-729-931-07	TRANSISTOR 2SD1759F5		R34	1-216-039-00	METAL CHIP 390 5%	1/10W
Q521	8-729-921-48	TRANSISTOR 2SD1760F5-Q		R35	1-216-081-00	METAL CHIP 22K 5%	1/10W
Q522	8-729-105-29	TRANSISTOR 2SA1385		R40	1-216-101-00	METAL CHIP 150K 5%	1/10W
Q523	8-729-105-29	TRANSISTOR 2SA1385		R41	1-216-093-00	METAL CHIP 68K 5%	1/10W
Q524	8-729-920-28	TRANSISTOR FMG9		R42	1-216-055-00	METAL CHIP 1.8K 5%	1/10W
Q525	8-729-921-48	TRANSISTOR 2SD1760F5-Q		R43	1-216-049-00	METAL CHIP 1K 5%	1/10W
Q526	8-729-106-60	TRANSISTOR 2SB1115A		R44	1-216-025-00	METAL CHIP 100 5%	1/10W
Q527	8-729-901-04	TRANSISTOR DTA114EK		R45	1-216-089-00	METAL CHIP 47K 5%	1/10W
Q528	8-729-921-48	TRANSISTOR 2SD1760F5-Q		R46	1-216-057-00	METAL CHIP 2.2K 5%	1/10W
Q529	8-729-921-48	TRANSISTOR 2SD1760F5-Q		R47	1-216-105-00	METAL CHIP 220K 5%	1/10W
Q530	8-729-120-28	TRANSISTOR 2SC1623-L5L6		R48	1-216-065-00	METAL CHIP 4.7K 5%	1/10W
Q531	8-729-920-41	TRANSISTOR FMC3		R50	1-216-093-00	METAL CHIP 68K 5%	1/10W
Q532	8-729-921-48	TRANSISTOR 2SD1760F5-Q				(XR-U882)	
Q533	8-729-900-53	TRANSISTOR DTC114EK		R51	1-216-089-00	METAL CHIP 47K 5%	1/10W
Q534	8-729-106-60	TRANSISTOR 2SB1115A				(XR-U882)	
Q535	8-729-120-28	TRANSISTOR 2SC1623-L5L6		R52	1-216-041-00	METAL CHIP 470 5%	1/10W
		< RESISTOR >				(XR-U882)	
R1	1-216-041-00	METAL CHIP 470 5%	1/10W	R53	1-216-065-00	METAL CHIP 4.7K 5%	1/10W
R2	1-216-049-00	METAL CHIP 1K 5%	1/10W			(XR-U882)	
R3	1-216-073-00	METAL CHIP 10K 5%	1/10W	R54	1-216-097-00	METAL CHIP 100K 5%	1/10W
R4	1-216-049-00	METAL CHIP 1K 5%	1/10W			(XR-U882)	
R5	1-216-063-00	METAL CHIP 3.9K 5%	1/10W	R55	1-216-105-00	METAL CHIP 220K 5%	1/10W
R6	1-216-057-00	METAL CHIP 2.2K 5%	1/10W			(XR-U882)	
R7	1-216-061-00	METAL CHIP 3.3K 5%	1/10W	R56	1-216-117-00	METAL CHIP 680K 5%	1/10W
R8	1-216-073-00	METAL CHIP 10K 5%	1/10W			(XR-U882)	
R9	1-216-049-00	METAL CHIP 1K 5%	1/10W	R57	1-216-116-00	METAL GLAZE 620K 5%	1/10W
R10	1-216-057-00	METAL CHIP 2.2K 5%	1/10W			(XR-U882)	
R11	1-216-073-00	METAL CHIP 10K 5%	1/10W	R58	1-216-089-00	METAL CHIP 47K 5%	1/10W
R12	1-216-105-00	METAL CHIP 220K 5%	1/10W			(XR-U882)	
R13	1-216-017-00	METAL CHIP 47 5%	1/10W	R59	1-216-075-00	METAL CHIP 12K 5%	1/10W
R14	1-216-065-00	METAL CHIP 4.7K 5%	1/10W			(XR-U882)	
R15	1-216-073-00	METAL CHIP 10K 5%	1/10W	R60	1-216-085-00	METAL CHIP 33K 5%	1/10W
R16	1-216-073-00	METAL CHIP 10K 5%	1/10W			(XR-U882)	
R17	1-216-049-00	METAL CHIP 1K 5%	1/10W	R61	1-216-106-00	METAL CHIP 240K 5%	1/10W
R18	1-216-121-00	METAL CHIP 1M 5%	1/10W			(XR-U882)	
R20	1-216-057-00	METAL CHIP 2.2K 5%	1/10W	R62	1-216-095-00	METAL CHIP 82K 5%	1/10W
R21	1-216-073-00	METAL CHIP 10K 5%	1/10W			(XR-U882)	
R22	1-216-105-00	METAL CHIP 220K 5%	1/10W	R63	1-216-845-11	METAL CHIP 100K 5%	1/16W
R23	1-216-017-00	METAL CHIP 47 5%	1/10W	R64	1-216-845-11	METAL CHIP 100K 5%	1/16W
R24	1-216-065-00	METAL CHIP 4.7K 5%	1/10W			(XR-U882)	
R25	1-216-073-00	METAL CHIP 10K 5%	1/10W	R65	1-216-845-11	METAL CHIP 100K 5%	1/16W
R26	1-216-073-00	METAL CHIP 10K 5%	1/10W			(XR-U882)	
R27	1-216-049-00	METAL CHIP 1K 5%	1/10W	R66	1-216-845-11	METAL CHIP 100K 5%	1/16W
R28	1-216-121-00	METAL CHIP 1M 5%	1/10W	R67	1-216-073-00	METAL CHIP 10K 5%	1/10W
				R68	1-249-437-11	CARBON 47K 5%	1/4W
				R69	1-216-057-00	METAL GLAZE 2.2K 5%	1/10W
				R70	1-216-073-00	METAL CHIP 10K 5%	1/10W

MAIN**DIVER****RDS****ARI**

Ref. No.	Part No.	Description	Remark		
R71	1-216-065-00	METAL CHIP	4.7K	5%	1/10W
R72	1-216-069-00	METAL CHIP	6.8K	5%	1/10W
R73	1-216-075-00	METAL CHIP	12K	5%	1/10W
R74	1-216-057-00	METAL CHIP	2.2K	5%	1/10W
R75	1-216-061-00	METAL CHIP	3.3K	5%	1/10W
R76	1-216-061-00	METAL CHIP	3.3K	5%	1/10W
R77	1-216-065-00	METAL CHIP	4.7K	5%	1/10W
R78	1-216-039-00	METAL CHIP	390	5%	1/10W
R79	1-216-105-00	METAL CHIP	220K	5%	1/10W
R80	1-216-017-00	METAL CHIP	47	5%	1/10W
R81	1-216-683-11	METAL CHIP	22K	0.5%	1/10W
R82	1-216-049-00	METAL CHIP	1K	5%	1/10W
R83	1-216-687-11	METAL CHIP	33K	0.5%	1/10W
R84	1-216-071-00	METAL CHIP	8.2K	5%	1/10W
R85	1-216-055-00	METAL CHIP	1.8K	5%	1/10W
R86	1-216-053-00	METAL CHIP	1.5K	5%	1/10W
R87	1-216-046-00	METAL CHIP	750	5%	1/10W
R88	1-216-057-00	METAL CHIP	2.2K	5%	1/10W
R89	1-216-075-00	METAL CHIP	12K	5%	1/10W
R90	1-216-073-00	METAL CHIP	10K	5%	1/10W
R91	1-216-073-00	METAL CHIP	10K	5%	1/10W
R92	1-216-748-11	METAL CHIP (XR-U882)	39K	5%	1/10W
R92	1-216-685-11	METAL CHIP (XR-U881)	27K	0.5%	1/10W
R110	1-216-687-11	METAL CHIP	33K	0.5%	1/10W
R111	1-216-684-11	METAL CHIP	24K	0.5%	1/10W
R112	1-216-645-11	METAL CHIP (XR-U881)	560	0.5%	1/10W
R120	1-216-687-11	METAL CHIP	33K	0.5%	1/10W
R121	1-216-679-11	METAL CHIP	15K	0.5%	1/10W
R122	1-216-067-00	METAL CHIP (XR-U882)	5.6K	5%	1/10W
R122	1-216-071-00	METAL CHIP (XR-U881)	8.2K	5%	1/10W
R123	1-216-679-11	METAL CHIP	15K	0.5%	1/10W
R124	1-216-683-11	METAL CHIP	22K	0.5%	1/10W
R125	1-216-121-00	METAL CHIP	1M	5%	1/10W
R126	1-216-061-00	METAL CHIP	3.3K	5%	1/10W
R127	1-216-679-11	METAL CHIP	15K	0.5%	1/10W
R128	1-216-121-00	METAL CHIP	1M	5%	1/10W
R129	1-216-073-00	METAL CHIP	10K	5%	1/10W
R130	1-216-121-00	METAL CHIP	1M	5%	1/10W
R131	1-216-679-11	METAL CHIP	15K	0.5%	1/10W
R132	1-216-683-11	METAL CHIP	22K	0.5%	1/10W
R133	1-216-649-11	METAL CHIP	820	0.5%	1/10W
R134	1-216-683-11	METAL CHIP	22K	0.5%	1/10W
R135	1-216-679-11	METAL CHIP	15K	0.5%	1/10W
R136	1-216-683-11	METAL CHIP	22K	0.5%	1/10W
R137	1-216-649-11	METAL CHIP	820	0.5%	1/10W

Ref. No.	Part No.	Description	Remark		
R138	1-216-683-11	METAL CHIP	22K	0.5%	1/10W
R141	1-216-073-00	METAL CHIP	10K	5%	1/10W
R142	1-216-073-00	METAL CHIP	10K	5%	1/10W
R143	1-216-649-11	METAL GLAZE	820	0.5%	1/10W
R144	1-215-469-00	METAL FILM	100K	1%	1/4W
R210	1-216-687-11	METAL CHIP	33K	0.5%	1/10W
R211	1-216-684-11	METAL CHIP	24K	0.5%	1/10W
R212	1-216-645-11	METAL CHIP	560	0.5%	1/10W
R220	1-216-687-11	METAL CHIP	33K	0.5%	1/10W
R221	1-216-679-11	METAL CHIP	15K	0.5%	1/10W
R222	1-216-067-00	METAL CHIP (XR-U882)	5.6K	5%	1/10W
R222	1-216-071-00	METAL CHIP (XR-U881)	8.2K	5%	1/10W
R223	1-216-679-11	METAL CHIP	15K	0.5%	1/10W
R224	1-216-683-11	METAL CHIP	22K	0.5%	1/10W
R225	1-216-121-00	METAL CHIP	1M	5%	1/10W
R226	1-216-061-00	METAL CHIP	3.3K	5%	1/10W
R227	1-216-679-11	METAL CHIP	15K	0.5%	1/10W
R228	1-216-121-00	METAL CHIP	1M	5%	1/10W
R229	1-216-073-00	METAL CHIP	10K	5%	1/10W
R230	1-216-121-00	METAL CHIP	1M	5%	1/10W
R231	1-216-679-11	METAL CHIP	15K	0.5%	1/10W
R232	1-216-683-11	METAL CHIP	22K	0.5%	1/10W
R233	1-216-649-11	METAL CHIP	820	0.5%	1/10W
R234	1-216-683-11	METAL CHIP	22K	0.5%	1/10W
R235	1-216-679-11	METAL CHIP	15K	0.5%	1/10W
R236	1-216-683-11	METAL CHIP	22K	0.5%	1/10W
R237	1-216-649-11	METAL CHIP	820	0.5%	1/10W
R238	1-216-683-11	METAL CHIP	22K	0.5%	1/10W
R241	1-216-073-00	METAL CHIP	10K	5%	1/10W
R242	1-216-073-00	METAL CHIP	10K	5%	1/10W
R243	1-216-649-11	METAL GLAZE	820	0.5%	1/10W
R244	1-216-097-00	METAL GLAZE	100K	5%	1/10W
R310	1-216-049-00	METAL CHIP	1K	5%	1/10W
R311	1-216-685-11	METAL CHIP	27K	0.5%	1/10W
R312	1-216-073-00	METAL CHIP	10K	5%	1/10W
R313	1-216-833-11	METAL CHIP	10K	5%	1/16W
R314	1-216-073-00	METAL CHIP	10K	5%	1/10W
R320	1-216-089-00	METAL CHIP	47K	5%	1/10W
R321	1-216-073-00	METAL CHIP	10K	5%	1/10W
R322	1-216-049-00	METAL GLAZE	1K	5%	1/10W
R431	1-216-073-00	METAL CHIP	10K	5%	1/10W
R432	1-216-065-00	METAL CHIP	4.7K	5%	1/10W
R433	1-220-149-91	METAL GLAZE	2.2	10%	1/2W
R434	1-216-049-00	METAL CHIP	1K	5%	1/10W
R501	1-216-845-11	METAL CHIP	100K	5%	1/16W
R502	1-216-845-11	METAL CHIP	100K	5%	1/16W
R503	1-216-845-11	METAL CHIP	100K	5%	1/16W

MAIN**DIVER****RDS****ARI**

Ref. No.	Part No.	Description	Remark
R504	1-216-845-11	METAL CHIP	100K 5% 1/16W
R505	1-216-841-11	METAL CHIP	47K 5% 1/16W
R506	1-216-845-11	METAL CHIP	100K 5% 1/16W
R507	1-216-845-11	METAL CHIP	100K 5% 1/16W
R508	1-216-845-11	METAL CHIP	100K 5% 1/16W
R509	1-216-097-00	METAL CHIP	100K 5% 1/10W
R510	1-216-845-11	METAL CHIP	100K 5% 1/16W
R511	1-216-845-11	METAL CHIP	100K 5% 1/16W
R512	1-216-845-11	METAL CHIP	100K 5% 1/16W
R513	1-216-845-11	METAL CHIP	100K 5% 1/16W
R514	1-216-845-11	METAL CHIP	100K 5% 1/16W
R515	1-216-097-00	METAL CHIP	100K 5% 1/10W
R516	1-216-845-11	METAL CHIP	100K 5% 1/16W
R517	1-216-845-11	METAL CHIP	100K 5% 1/16W
R518	1-216-825-11	METAL CHIP	2. 2K 5% 1/16W
R520	1-216-025-00	METAL CHIP	100 5% 1/10W
R521	1-216-841-11	METAL CHIP	47K 5% 1/16W
R522	1-216-841-11	METAL CHIP	47K 5% 1/16W
R523	1-216-841-11	METAL CHIP	47K 5% 1/16W
R524	1-216-174-00	METAL GLAZE	100 5% 1/8W
R525	1-216-089-00	METAL CHIP	47K 5% 1/10W
R526	1-216-089-00	METAL CHIP	47K 5% 1/10W
R527	1-216-174-00	METAL GLAZE	100 5% 1/8W
R528	1-216-825-11	METAL CHIP	2. 2K 5% 1/16W
R529	1-216-825-11	METAL CHIP	2. 2K 5% 1/16W
R530	1-216-825-11	METAL CHIP	2. 2K 5% 1/16W
R531	1-216-081-00	METAL CHIP	22K 5% 1/10W
R532	1-216-833-11	METAL CHIP	10K 5% 1/16W
R533	1-216-081-00	METAL CHIP	22K 5% 1/10W
R534	1-216-833-11	METAL CHIP	10K 5% 1/16W
R535	1-216-825-11	METAL CHIP	2. 2K 5% 1/16W
R536	1-216-841-11	METAL CHIP	47K 5% 1/16W
R537	1-216-049-00	METAL CHIP	1K 5% 1/10W
R538	1-216-049-00	METAL CHIP	1K 5% 1/10W
R539	1-216-081-00	METAL CHIP	22K 5% 1/10W
R540	1-216-063-00	METAL CHIP	3. 9K 5% 1/10W
R541	1-216-174-00	METAL GLAZE	100 5% 1/8W
R542	1-216-841-11	METAL CHIP	47K 5% 1/16W
R543	1-216-841-11	METAL CHIP	47K 5% 1/16W
R544	1-216-073-00	METAL CHIP	10K 5% 1/10W
R545	1-216-049-00	METAL CHIP	1K 5% 1/10W
R546	1-216-089-00	METAL CHIP	47K 5% 1/10W
R547	1-216-089-00	METAL CHIP	47K 5% 1/10W
R548	1-216-097-00	METAL CHIP	100K 5% 1/10W
R549	1-216-687-11	METAL CHIP	33K 0. 5% 1/10W
R550	1-216-089-00	METAL CHIP	47K 5% 1/10W
R551	1-216-089-00	METAL CHIP	47K 5% 1/10W
R552	1-216-089-00	METAL CHIP	47K 5% 1/10W

Ref. No.	Part No.	Description	Remark
R553	1-216-089-00	METAL CHIP	47K 5% 1/10W
R554	1-216-089-00	METAL CHIP	47K 5% 1/10W
R555	1-216-017-00	METAL CHIP	47 5% 1/10W
R556	1-216-073-00	METAL CHIP	10K 5% 1/10W
R557	1-216-089-00	METAL CHIP	47K 5% 1/10W
R558	1-216-091-00	METAL CHIP	56K 5% 1/10W
R559	1-216-089-00	METAL CHIP	47K 5% 1/10W
R560	1-216-845-11	METAL CHIP	100K 5% 1/16W
R561	1-216-845-11	METAL CHIP	100K 5% 1/16W
R562	1-216-049-00	METAL CHIP	1K 5% 1/10W
R563	1-220-150-91	METAL GLAZE	680 10% 1/2W
R564	1-216-049-00	METAL CHIP	1K 5% 1/10W
R565	1-220-150-91	METAL GLAZE	680 10% 1/2W
R566	1-216-057-00	METAL CHIP	2. 2K 5% 1/10W
R567	1-216-041-00	METAL CHIP	470 5% 1/10W
R568	1-216-833-11	METAL CHIP	10K 5% 1/16W
R569	1-216-049-00	METAL CHIP	1K 5% 1/10W
R570	1-216-222-00	METAL GLAZE	10K 5% 1/8W
R571	1-216-206-00	METAL GLAZE	2. 2K 5% 1/8W
R572	1-216-089-00	METAL CHIP	47K 5% 1/10W
R573	1-216-089-00	METAL CHIP	47K 5% 1/10W
R574	1-216-083-00	METAL CHIP	27K 5% 1/10W
R575	1-216-097-00	METAL CHIP	100K 5% 1/10W
R576	1-216-089-00	METAL CHIP	47K 5% 1/10W
R578	1-216-057-00	METAL CHIP	2. 2K 5% 1/10W
R579	1-216-041-00	METAL CHIP	470 5% 1/10W
R580	1-216-041-00	METAL CHIP	470 5% 1/10W
R581	1-216-845-11	METAL CHIP	100K 5% 1/16W
R582	1-216-845-11	METAL CHIP	100K 5% 1/16W
R583	1-216-845-11	METAL CHIP	100K 5% 1/16W
R584	1-216-845-11	METAL CHIP	100K 5% 1/16W
R585	1-216-845-11	METAL CHIP	100K 5% 1/16W
R586	1-216-833-11	METAL CHIP	10K 5% 1/16W
R587	1-216-059-00	METAL CHIP	2. 7K 5% 1/10W
R588	1-216-073-00	METAL CHIP	10K 5% 1/10W
R589	1-216-057-00	METAL CHIP	2. 2K 5% 1/10W
R590	1-216-845-11	METAL CHIP	100K 5% 1/16W
R591	1-216-049-00	METAL CHIP	1K 5% 1/10W
R592	1-218-279-11	METAL GLAZE	12 5% 1/2W
R593	1-218-279-11	METAL GLAZE	12 5% 1/2W
R594	1-216-065-00	METAL CHIP	4. 7K 5% 1/10W
R595	1-216-841-11	METAL CHIP	47K 5% 1/16W
R596	1-216-841-11	METAL CHIP	47K 5% 1/16W
R597	1-216-845-11	METAL CHIP	100K 5% 1/16W
R598	1-216-845-11	METAL CHIP	100K 5% 1/16W
R599	1-216-073-00	METAL CHIP	10K 5% 1/10W
R600	1-216-057-00	METAL GLAZE	2. 2K 10% 1/10W
R601	1-216-049-00	METAL GLAZE	1K 10% 1/10W

MAIN DIVER RDS ARI REEL PL SENS

Ref. No.	Part No.	Description	Remark
< VARIABLE RESISTOR >			
RV1	1-238-601-11	RES. ADJ. CARBON 22K	
RV50	1-241-551-11	RES. ADJ. CERMET 100 (XR-U882)	
RV80	1-238-604-11	RES. ADJ. CARBON 220K	
RV61	1-238-601-11	RES. ADJ. CARBON 22K	
RV62	1-238-600-11	RES. ADJ. CARBON 10K	
< SWITCH >			
S10	1-572-272-11	SWITCH. SLIDE (FM DIVE RSITY)	
S11	1-572-272-11	SWITCH. SLIDE (MAIN/SUB)	
S501	1-572-272-11	SWITCH. SLIDE (POWER SELECT)	
< BUZZER >			
SP501	1-529-078-11	BUZZER. PIEZOELECTRIC	
< FILTER >			
T40	1-239-009-11	FILTER. BAND PASS	
< TRANSFORMER >			
T60	1-404-955-11	TRANSFORMER. IF	
< TUNER UNIT >			
TU1	1-465-687-11	FRONT END. FM	
TU2	1-465-690-11	TUNER UNIT (MW/SW) (XR-U882)	
TU2	1-465-689-11	TUNER UNIT (MW/LW) (XR-U881)	
< VIBRATOR >			
X1	1-567-848-11	VIBRATOR. CRYSTAL (7.2MHZ)	
X40	1-579-242-11	VIBRATOR. CRYSTAL (4.33MHZ)	
X41	1-567-819-11	VIBRATOR. CERAMIC (4MHZ)	
X60	1-579-279-11	VIBRATOR. CERAMIC (19KHz)	
X501	1-567-821-11	VIBRATOR. CRYSTAL (4.19MHZ)	
X502	1-567-775-11	VIBRATOR. CERAMIC (4.19MHZ)	

* 1-639-453-11 REEL BOARD			

< PHOTO REFLECTOR >			
PH411	8-719-988-14	PHOTO REFLECTOR PR-11-B-T	
PH412	8-719-988-14	PHOTO REFLECTOR PR-11-B-T	
< TRANSISTOR >			
Q411	8-729-904-07	TRANSISTOR FMG2	

Ref. No.	Part No.	Description	Remark
< RESISTOR >			
R411	1-216-105-00	METAL CHIP 220K 5%	1/10W
R412	1-216-105-00	METAL CHIP 220K 5%	1/10W
R413	1-216-190-00	METAL GLAZE 470 5%	1/8W

* 1-639-454-11 PL BOARD			

< PLUNGER SOLENOID >			
PM901	1-454-461-11	SOLENOID. PLUNGER	

* 1-639-452-11 SENS BOARD			

< CAPACITOR >			
C421	1-163-081-00	CERAMIC CHIP 0.22uF	25V
< CONNECTOR >			
CNP421	1-573-006-11	CONNECTOR. FPC (1.0MM) (21F) 7P	
CNP422	* 1-506-998-11	PIN. CONNECTOR (PC BOARD) 2P	
< DIODE >			
D421	8-719-976-31	DIODE 1SS332	
< PHOTO TRANSISTOR >			
PH421	8-719-987-53	PHOTO TRANSISTOR GP1S37	
< TRANSISTOR >			
Q421	8-729-902-99	TRANSISTOR DTC114TK	
< RESISTOR >			
R421	1-216-186-00	METAL GLAZE 330 5%	1/8W
R422	1-216-186-00	METAL GLAZE 330 5%	1/8W
R423	1-216-049-00	METAL CHIP 1K 5%	1/10W

Ref. No.	Part No.	Description	Remark
	* 1-640-209-11	POWER BOARD *****	
		< CAPACITOR >	
C915	1-130-483-00	MYLAR 0.01uF	5% 50V
C916	1-130-483-00	MYLAR 0.01uF	5% 50V
C917	1-124-343-00	ELECT 2200MF	20% 16V
C918	1-130-483-00	MYLAR 0.01uF	5% 50V
C919	1-124-589-11	ELECT 47uF	20% 16V
		< CONNECTOR >	
CN902	* 1-580-913-11	PLUG, CONNECTOR 6P	
		< DIODE >	
D903	8-719-970-02	DIODE ISR139-400	
D904	8-719-945-59	DIODE DSA3A4	
		< THERMISTOR >	
THP901	1-809-148-11	THERMISTOR, POSITIVE	
THP902	1-809-148-11	THERMISTOR, POSITIVE	
		< CONNECTOR >	
CNP901	* 1-573-384-11	CONNECTOR	

	* 1-640-205-11	RST BOARD *****	
		< DIODE >	
D527	8-719-987-41	DIODE CL-150Y-CD	
D528	8-719-987-41	DIODE CL-150Y-CD	
		< RESISTOR >	
R577	1-216-987-41	METAL CHIP 390 5%	1/10W
		< SWITCH >	
S503	1-572-474-11	SWITCH, TACTIL (RESRT)	

Ref. No.	Part No.	Description	Remark
		MISCELLANEOUS *****	
36	1-590-511-11	CORD (WITH CONNECTOR)	
37	1-590-525-11	CORD (WITH CONNECTOR)	
79	1-590-522-21	CORD (WITH CONNECTOR) 5P	
126	1-635-519-12	PC BOARD, FLEXIBLE	
127	* 1-563-470-11	HOUSING, CONNECTOR 2P	
225	* 1-563-470-11	HOUSING, CONNECTOR 2P	
CNP901	* 1-573-384-11	CONNECTOR	
F1	1-532-457-XX	FUSE 3.15A	
F2	1-532-452-XX	FUSE 1A	
HP901	1-543-800-21	HEAD, MAGNETIC (PLAYBACK)	
M901	X-3344-136-3	CAPSTAN MOTOR SUB ASSY	
M902	X-3362-826-1	GEAR ASSY, MOTOR	
M903	X-3362-835-1	MOTOR BLOCK ASSY	
S504	1-570-883-11	SWITCH, PUSH (2 KEY) (DPO/DPI)	
S902	1-572-397-11	SWITCH, ROTARY SLIDE	


		ACCESSORIES & PACKING MATERIALS *****	
	1-465-698-11	REMOTE COMMANDER (RM-X30) (XR-U881)	
	1-465-698-21	REMOTE COMMANDER (RM-X30) (XR-U882)	
	1-590-503-11	CORD (WITH CONNECTOR) (8P-8P, UNLINK)	
	1-590-522-21	CORD (WITH CONNECTOR) (5P)	
	3-336-617-01	BAG, PROTECTION	
	* 3-355-207-01	CARDBOARD (E)	
	3-367-590-01	COLLAR	
	3-753-331-11	MANUAL, INSTRUCTION (ENGLISH, FRENCH, SPANISH, DUTCH) (XR-U881)	
	3-753-331-41	MANUAL, INSTRUCTION (SWEDISH, ITALIAN, PORTUGUESE) (XR-U881)	
	3-753-331-51	MANUAL, INSTRUCTION (ENGLISH, FRENCH, GERMAN, ITALIAN) (XR-U882)	
	3-753-332-11	MANUAL, INSTRUCTION (ENGLISH, FRENCH, SPANISH, DUTCH) (XR-U881)	
	3-753-332-41	MANUAL, INSTRUCTION (SWEDISH, ITALIAN, PORTUGUESE) (XR-U881)	
	3-753-332-51	MANUAL, INSTRUCTION (ENGLISH, FRENCH, GERMAN, ITALIAN) (XR-U882)	

Ref. No.	Part No.	Description	Remark
----------	----------	-------------	--------

HARDWARE LIST

# 1	7-627-553-18	SCREW, PRECISION +P 2X2	
# 2	7-627-553-28	SCREW, PRECISION +P 2X2.5	
# 3	7-627-554-28	SCREW, PRECISION +P 2X5 TYPE1	
# 4	7-627-556-78	SCREW, PRECISION +P 2.6X6 TYPE1	
# 5	7-621-770-87	SCREW +PTT 2.6X5 (S)	
# 6	7-621-773-86	SCREW +PTT 2.6X4 (S)	
# 7	7-685-103-19	SCREW +P 2X5 TYPE2 NON-SLIT	
# 8	7-685-205-19	SCREW +KTP 2X8 TYPE2 NON-SLIT	
# 9	7-627-852-38	SCREW, PRECISION +P1.7X1.8 TYPE3	
#10	7-627-554-07	SCREW, PRECISION +P2X2.2	
#11	7-628-253-00	SCREW +PS 2X4	
#12	7-621-255-65	SCREW +P 2X10	
#13	7-627-850-18	SCREW, PRECISION +P 1.4X2.5	
#14	7-627-850-67	SCREW, PRECISION +P 1.4X4	
#15	7-624-104-04	STOP RING 2.0, TYPE -E	

MOUNTING HARDWARE

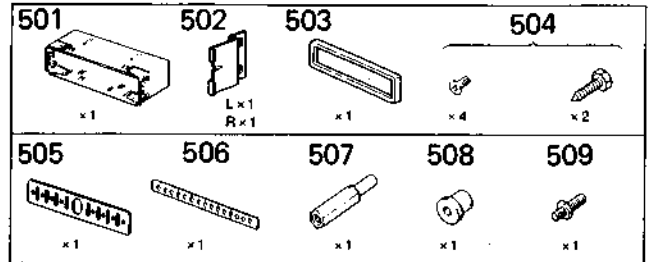

Ref. No.	Part No.	Description	Remark
501	3-323-219-01	FRAME, FITTING	
502	3-370-129-01	CASE	
503	3-367-591-01	SPRING, FITTING	
504	X-3320-524-1	SCREW ASSY (A)	
505	3-323-217-01	HOLDER, BUSHING	
506	3-310-655-01	SUPPORT (ND), FITTING	
507	3-323-210-01	ADJUSTOR, STUD BOLT	
508	3-349-410-01	BUSHING	
509	3-323-209-01	BOLT (4-5), STUD	

MC-Service