

# Service Service Service



# Service Manual

## Table of Contents



|                                          |     |
|------------------------------------------|-----|
| Technical Specification .....            | 1-1 |
| Location of Printed Circuit Boards ..... | 1-2 |
| Safety Instructions .....                | 2-1 |
| Instruction for use (excerpt) .....      | 3-1 |
| Mechanical Instructions .....            | 4-1 |
| Service Tools .....                      | 5-1 |
| Service Test Program .....               | 5-2 |
| Blockdiagram .....                       | 5-3 |
| Wiring Diagram .....                     | 6-1 |

### AF BOARD

|                                   |     |
|-----------------------------------|-----|
| Circuit Diagram Supply Part ..... | 7-1 |
| Component Layout .....            | 7-2 |
| Circuit Diagram DAC Part .....    | 7-3 |
| Component Layout .....            | 7-4 |

### FRONT BOARD

|                        |     |
|------------------------|-----|
| Circuit Diagram .....  | 7-5 |
| Component Layout ..... | 7-6 |

### HEADPHONE BOARD

|                        |     |
|------------------------|-----|
| Circuit Diagram .....  | 7-6 |
| Component Layout ..... | 7-6 |

### CD BOARD

|                             |     |
|-----------------------------|-----|
| Circuit Diagram .....       | 7-7 |
| Component Layout .....      | 7-8 |
| Fault Finding Tree CD ..... | 7-9 |

### EXPLODED VIEW

|                       |      |
|-----------------------|------|
| Set .....             | 10-1 |
| CD Short Loader ..... | 10-2 |

|                            |      |
|----------------------------|------|
| Electrical Partslist ..... | 10-3 |
|----------------------------|------|

Safety regulations require that the set be restored to its original condition and that parts which are identical with those specified be used.

© Copyright 1997 Philips Consumer Electronics B.V. Eindhoven, The Netherlands  
All rights reserved. No part of this publication may be reproduced, stored in a retrieval system or transmitted, in any form or by any means, electronic, mechanical, photocopying, or otherwise without the prior permission of Philips.

Published by HB 9823 Service Audio Printed in The Netherlands Subject to modification

GB 4822 725 26026

CS 53 132



# PHILIPS

**CLASS 1  
LASER PRODUCT**

## TECHNICAL SPECIFICATION

### General

Dimensions (WxHxD) : 435 x 86 x 265mm  
Weight : 2,9kg

### Accessories

Instruction for use : 4822 736 16255 for /00  
: 4822 736 16256 for /01  
: 4822 736 16257 for /14  
  
Remote control : 4822 219 10538

### Mains voltage

/00 : 220-230V(±10%) 50Hz  
/01 : 120/230V(±15%) 50/60Hz  
/14 : 220-230V(±10%) 50Hz

### Power consumption

stand by : ≤5W  
operating : approx. 8W

### Audio performance

Number of channels : 2  
Output voltage (Line out) : 2V<sub>RMS</sub> ±3dB  
Unbalance left-right : ≤1dB  
Frequency response : 20Hz-20kHz ≤0,4dB  
Signal to noise ratio : 108 dB typ.  
Dynamic range : 105dB typ. at 1kHz  
THD : ≤0,0063% at 1kHz  
Channel separation : 98dB typ. at 1kHz

### Headphone output


Output level (1kHz, 0dB) : ≥5V<sub>RMS</sub>  
Unbalance left-right : ≤1,2dB  
Output impedance : 120Ω  
Load impedance : 32Ω - 600Ω  
Output power : 25mW at 32Ω  
: 52mW at 120Ω  
: 29mW at 600Ω

### Laser

Output power : <5mW (3mW typ.)  
Wavelength : 780nm

### Measurement setup

Use Audio Signal disc SBC429 4822 397 30184

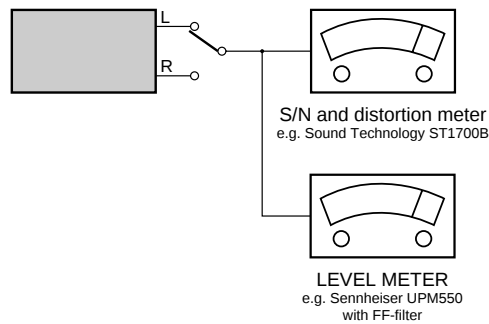


## RC 5 Commands

### System code = 20

| Command | Code | Command        | Code | Command     | Code |
|---------|------|----------------|------|-------------|------|
| KEY "0" | 0    | DISPLAY SCROLL | 15   | SHUFFLE     | 28   |
| KEY "1" | 1    | PLAY           | 53   | HIGHLIGHT   | 43   |
| KEY "2" | 2    | STOP           | 54   | REPEAT      | 29   |
| KEY "3" | 3    | PAUSE          | 48   | FADE        | 120  |
| KEY "4" | 4    | TIME           | 11   | VOLUME UP   | 16   |
| KEY "5" | 5    | PREVIOUS       | 33   | VOLUME DOWN | 17   |
| KEY "6" | 6    | REVIEW         | 50   | STAND BY    | 12   |
| KEY "7" | 7    | CUE            | 52   | CD TEXT     | 88   |
| KEY "8" | 8    | PROGRAM        | 36   | NEXT        | 32   |
| KEY "9" | 9    | REPEAT A/B     | 59   |             |      |

## LOCATION OF PRINTED CIRCUIT BOARDS

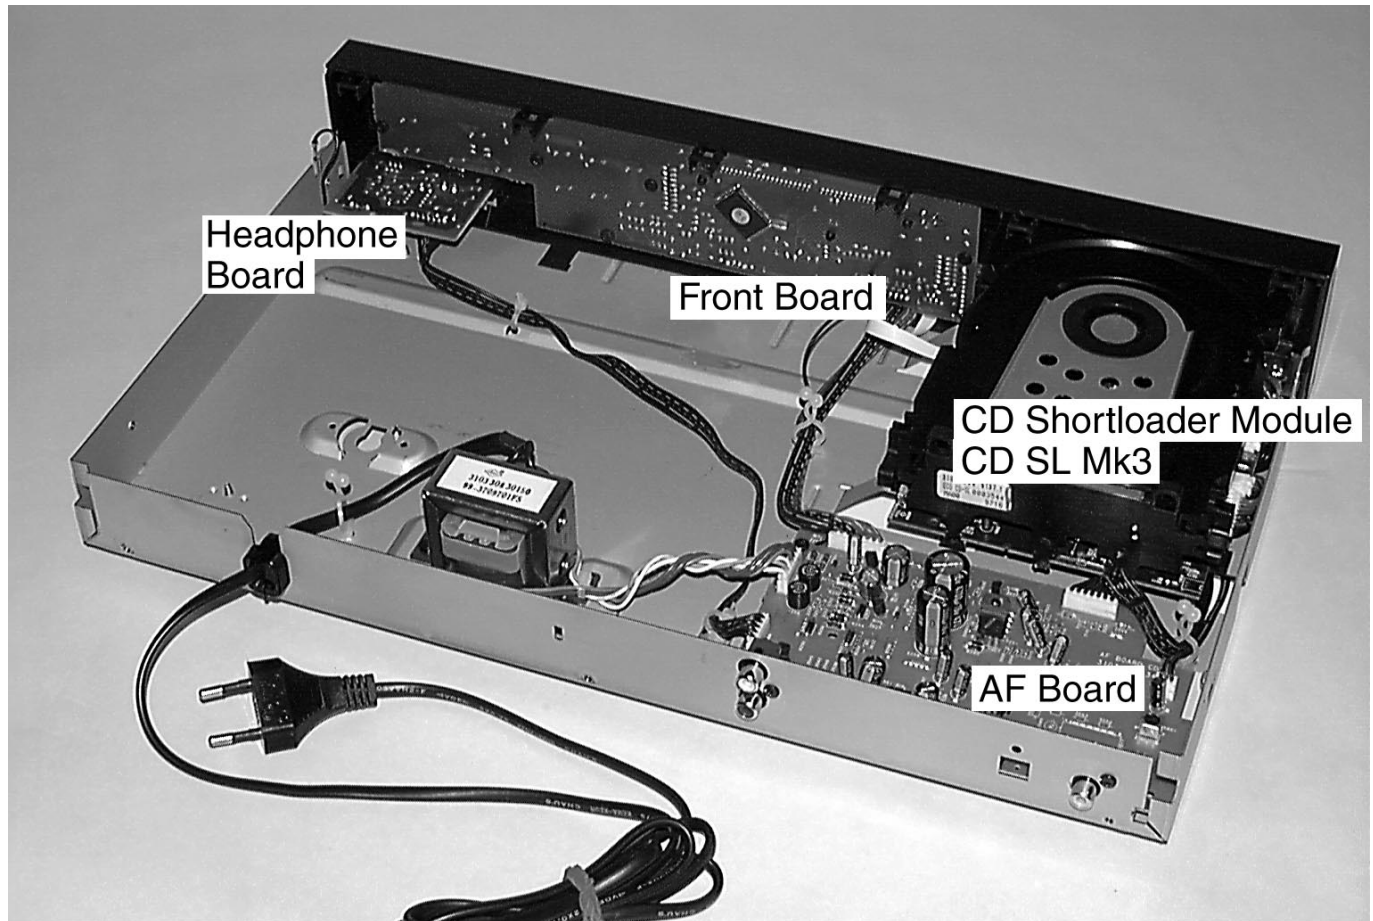

**(GB) WARNING**

All ICs and many other semiconductors are susceptible to electrostatic discharges (ESD). Careless handling during repair can reduce life drastically.

When repairing, make sure that you are connected with the same potential as the mass of the set via a wristband with resistance. Keep components and tools at this potential.

**(F) ATTENTION**

Tous les IC et beaucoup d'autres semi-conducteurs sont sensibles aux décharges statiques (ESD). Leur longévité pourrait être considérablement écourtée par le fait qu'aucune précaution n'est prise à leur manipulation.

Lors de réparations, s'assurer de bien être relié au même potentiel que la masse de l'appareil et enfiler le bracelet serti d'une résistance de sécurité.

Veiller à ce que les composants ainsi que les outils que l'on utilise soient également à ce potentiel.

**ESD****(D) WARNUNG**

Alle ICs und viele andere Halbleiter sind empfindlich gegenüber elektrostatischen Entladungen (ESD). Unsorgfältige Behandlung im Reparaturfall kann die Lebensdauer drastisch reduzieren.

Sorgen Sie dafür, daß sie im Reparaturfall über ein Puls-armband mit Widerstand mit dem Massepotential des Gerätes verbunden sind.

Halten Sie Bauteile und Hilfsmittel ebenfalls auf diesem Potential.

**(NL) WAARSCHUWING**

Alle IC's en vele andere halfgeleiders zijn gevoelig voor electrostatische ontladingen (ESD).

Onzorgvuldig behandelen tijdens reparatie kan de levensduur drastisch doen verminderen. Zorg ervoor dat u tijdens reparatie via een polsband met weerstand verbonden bent met hetzelfde potentiaal als de massa van het apparaat.

Houd componenten en hulpmiddelen ook op hetzelfde potentiaal.

**(I) AVVERTIMENTO**

Tutti IC e parecchi semi-conduttori sono sensibili alle scariche statiche (ESD).

La loro longevità potrebbe essere fortemente ridotta in caso di non osservazione della più grande cauzione alla loro manipolazione. Durante le riparazioni occorre quindi essere collegato allo stesso potenziale che quello della massa dell'apparecchio tramite un braccialetto a resistenza.

Assicurarsi che i componenti e anche gli utensili con quali si lavora siano anche a questo potenziale.

**(GB) AVAILABLE ESD PROTECTION EQUIPMENT :**

**anti-static table mat** large 1200x650x1.25mm  
small 600x650x1.25mm

**anti-static wristband**

**connection box** (3 press stud connections, 1MΩ)

**extendible cable** (2m, 2MΩ, to connect wristband to connection box)

**connecting cable** (3m, 2MΩ, to connect table mat to connection box)

**earth cable** (1MΩ, to connect any product to mat or to connection box)

**KIT ESD3** (combining all 6 prior products - small table mat)

**wristband tester**

4822 466 10953

4822 466 10958

4822 395 10223

4822 320 11307

4822 320 11305

4822 320 11306

4822 320 11308

4822 310 10671

4822 344 13999

**(GB)**

Safety regulations require that the set be restored to its original condition and that parts which are identical with those specified be used.

Safety components are marked by the symbol ▲

**(F)**

Les normes de sécurité exigent que l'appareil soit remis à l'état d'origine et que soient utilisées les pièces de rechange identiques à celles spécifiées.

Les composants de sécurité sont marqués ▲

**SAFETY****(D)**

Bei jeder Reparatur sind die geltenden Sicherheitsvorschriften zu beachten. Der Originalzustand des Gerätes darf nicht verändert werden. Für Reparaturen sind Originalersatzteile zu verwenden.

Sicherheitsbauteile sind durch das Symbol ▲ markiert.

**(NL)**

Veiligheidsbepalingen vereisen, dat het apparaat in zijn oorspronkelijke toestand wordt teruggebracht en dat onderdelen, identiek aan de gespecificeerde, worden toegepast. De Veiligheidsonderdelen zijn aangeduid met het symbool ▲

**(I)**

Le norme di sicurezza estigono che l'apparecchio venga rimesso nelle condizioni originali e che siano utilizzati i pezzi di ricambio identici a quelli specificati. Componenti di sicurezza sono marcati con ▲

**(GB)**

**DANGER:** Invisible laser radiation when open.  
AVOID DIRECT EXPOSURE TO BEAM.

**CLASS 1  
LASER PRODUCT**

**(S) Varning !**

Osynlig laserstrålning när apparaten är öppnad och spärren är urkopplad. Betrakta ej strålen.

**(DK) Advarsel !**

Usynlig laserstrålning ved åbning når sikkerhedsafbrydere er ude af funktion. Undgå udsættelse for strålning.

**(SF) Varoitus !**

Avatussa laitteessa ja suojalukituksen ohitettaessa olet alttiina näkymättömälle laserisäteilylle. Älä katso säteeseen !

**(GB)**

After servicing and before returning the set to customer perform a leakage current measurement test from all exposed metal parts to earth ground, to assure no shock hazard exists.


The leakage current must not exceed 0.5mA.

**(F)**

"Pour votre sécurité, ces documents doivent être utilisés par des spécialistes agréés, seuls habilités à réparer votre appareil en panne".

Table of contents

|                                           |    |
|-------------------------------------------|----|
| <b>GENERAL INFORMATION</b>                |    |
| Maintenance                               | 4  |
| Technical data                            | 4  |
| <b>CONTROLS AND CONNECTIONS</b>           |    |
| Controls on the front                     | 5  |
| Connections at the back                   | 5  |
| At the bottom                             | 5  |
| <b>INSTALLATION AND REMOTE CONTROL</b>    |    |
| Accessories                               | 6  |
| Connections                               | 6  |
| Usual connection, LINE OUT                | 6  |
| Digital connection, DIGITAL OUT           | 6  |
| Mains                                     | 6  |
| Remote control                            | 6  |
| Batteries                                 | 6  |
| <b>PLAYBACK</b>                           |    |
| CD Text                                   | 7  |
| Playing a CD                              | 7  |
| <b>ADDITIONAL FUNCTIONS</b>               |    |
| Selecting a track and searching           | 8  |
| Selecting a track during CD play          | 8  |
| Selecting a track when CD play is stopped | 8  |
| Searching for a passage during CD play    | 8  |
| Random order playing (SHUFFLE)            | 8  |
| Repeating a CD, a track or a program      | 8  |
| Repeating a part of the CD                | 8  |
| Programming track numbers                 | 9  |
| Clearing the program                      | 9  |
| Loudest passage searching                 | 9  |
| Time display                              | 9  |
| Fading out and in                         | 10 |
| Volume adjustment                         | 10 |
| Locking the volume                        | 10 |
| Headphone listening                       | 10 |
| Scanning the CD                           | 10 |
| Recording setup                           | 11 |
| Recording                                 | 11 |
| <b>ENVIRONMENTAL INFORMATION</b>          |    |
| Warning                                   | 12 |
| Troubleshooting                           | 12 |

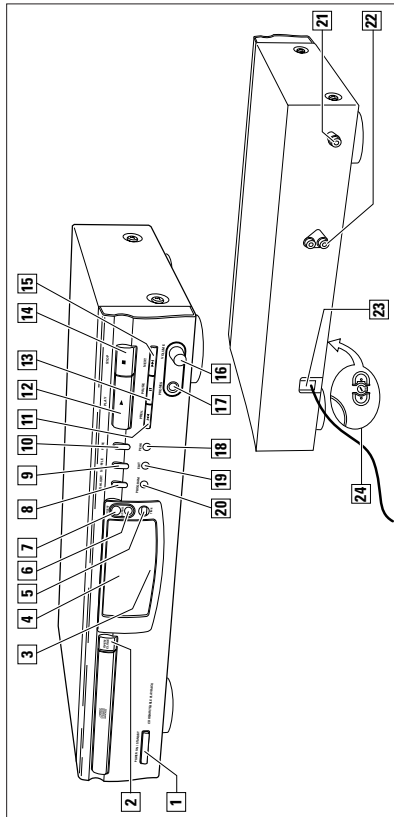

Controls on the front

- 1 POWER ON / STANDBY** switches the CD player on and to standby
- 2 OPEN-CLOSE** opens and closes the CD tray
- 3** Sensor for the infrared remote control
- 4** Display
- 5 TIME** switches through the different time information
- 6 SCROLL** scrolls CD-Text information
- 7 CD TEXT** switches through the different CD-Text information
- 8 HIGHLIGHT** plays the beginning of each track or – if a CD-Text disc contains highlights – the highlights of a CD
- 9 SHUFFLE** plays a CD or a program in random order
- 10 FADE** fades CD play out and in
- 11 PREV. <<** selects the beginning of the current or a previous track, and searches backward
- 12 PLAY >** starts CD play
- 13 PAUSE II** interrupts CD play
- 14 STOP ■** stops CD play and clears a program
- 15 NEXT >>** selects the beginning of a subsequent track, and searches forward

- 16 VOLUME** decreases or increases the volume level of the headphones
- 17 PHONES** 6.3mm headphone socket
- 18 PEAK** searches the loudest passage of a CD
- 19 EDIT** changes the settings for recording on tape or CD-Recordable
- 20 PROGRAM** programs track numbers
- Connections at the back**
- 21 DIGITAL OUT** to connect the digital input of a digital audio device
- 22 LINE OUT L R** to connect the audio input of an amplifier
- 23** Mains lead After all other connections have been made, connect this mains lead to the wall socket.
- At the bottom**
- 24 VOLTAGE SELECTOR** (Not on all versions.) Disconnect the mains lead first, if this selector must be reset.

Maintenance

Clean the CD player with a soft, slightly dampened lint-free cloth. Do not use any cleaning agents as they may have a corrosive effect.

Do not expose the CD player, batteries or CDs to humidity, rain, sand or excessive heat (caused by heating equipment or direct sunlight).

This CD player can play all kinds of Audio Discs such as CD-Recordables, CD-Rewriteables and CD-Text CDs. Do not try to play a CD-ROM, CD-I, CDV or computer CD.

If the CD player cannot read CDs correctly use a commonly available cleaning CD to clean the lens before taking the CD player to repair. Other cleaning methods may destroy the lens. Always keep the tray closed to avoid dust on the lens.

The lens may cloud over when the CD player is suddenly moved from cold to warm surroundings. Playing a CD is not possible then. Leave the CD player in a warm environment until the moisture evaporates.

To clean a CD, wipe it in a straight line from the center toward the edge using a soft, lint-free cloth. A cleaning agent may damage the disc! Never write on a CD or attach a sticker to it.

Technical data

Subject to modification without notice.

|                           |                                 |
|---------------------------|---------------------------------|
| Standby power consumption | < 5W                            |
| Frequency range           | 20–20,000Hz                     |
| Amplitude linearity       | < 0.5dB (1kHz–90dB)             |
| Dynamic range             | 100dB (1kHz)                    |
| Signal-to-noise ratio     | 106dB (1kHz, A-weighted)        |
| Channel separation        | 96dB (1kHz)                     |
| Total harmonic distortion | 0.004%, -86dB (1kHz)            |
| Audio output              | 2V RMS ±3dB, 1kΩ                |
| Digital coaxial output    | 75Ω acc. IEC 958                |
| Impedance headphones      | 30–600Ω (5V e. m. f. from 120Ω) |
| Dimensions                | 435 × 88 × 265mm                |
| Weight                    | 2.9kg                           |



Accessories

This CD player is supplied including:

- a remote control
- 2 batteries for the remote control
- a connection cable
- this instruction booklet

Connections

- Usual connection, LINE OUT**
- 1 Insert the red plug of the supplied connection cable into R and the other plug into L.
  - 2 Insert the other side of the cable into the corresponding sockets of the CD or AUX input of your amplifier.

Important!

You may also use the **TUNER or TAPE**, but **never** the **PHONO** input of your amplifier!

Digital connection, DIGITAL OUT

**Never** connect this socket to a non-digital input – such as AUX, CD, PHONO, TAPE – of an amplifier. This output supplies a digital signal and can therefore only be connected to a digital input.


- 1 Insert an optional coaxial cable into DIGITAL OUT.
- 2 Insert the other side of the cable into the digital input of your digital device (e.g. CD Recorder).

Mains

The type plate is located on the back of the CD player.

- 1 If your set is equipped with a VOLTAGE selector (at the bottom), set this selector to your local mains voltage if necessary. Position 120V includes 110V–127V. Position 230V includes 220V–240V.
- 2 Connect the mains cable to the wall socket. This switches on the mains supply.

Note: To disconnect the CD player from the mains completely, remove the mains plug from the wall socket.

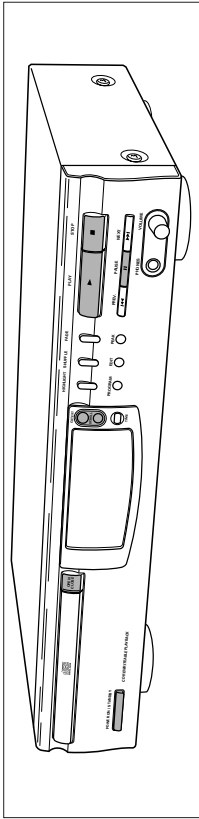

CD-Text

This CD player can show information which is stored on CD-Text discs. It will only reproduce the text which is recorded on the disc.


- 1 When inserting a disc with CD-Text the display shows **CD TEXT** and performing artist or group. In case there are various artists the album title is shown.
- 2 Press CD TEXT before playing a CD to switch between album title and performing artist(s) if available.
- 3 Press CD TEXT during CD play to switch between album title, performing artist(s) and track title if available.
- 4 At the beginning of a new track the track title is scrolled once. Then the first 12 digits of the track title are displayed.
- 5 CD-Text information is scrolled every 30 seconds. Press **SCROLL** to scroll the text through the display any time.

Playing a CD

- 1 Use **POWER ON / STANDBY** to switch on the CD player.
- 2 Press **OPEN CLOSE** to open the CD tray. **OPEN** appears on the display.
- 3 Insert an audio CD (printed side up) and press **OPEN CLOSE** to close the CD compartment. **READY** appears on the display. Then the number of tracks and the playing time is shown. If the disc contains CD-Text the display shows **CD TEXT** and CD-Text information (see "CD-Text").
- 4 Press **PLAY** to start CD play. The display shows **iii**, **TRACK**, **TIME**, and the number and time of the actual track. If the disc contains CD-Text the display shows CD-Text information.
- You can interrupt CD play by pressing **PAUSE II**. The display shows **iii** and the track number and time where playback was stopped.
- Continue CD play by pressing **PAUSE II** again.
- 5 Press **STOP** to stop CD play.

Note: Playback will also stop if the end of the CD is reached.

Remote control

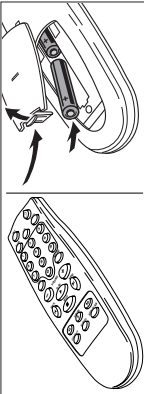

Batteries

- Open the battery compartment of the remote control and insert 2 alkaline batteries, type **AAA** (R03, UM-4).

Remove batteries if they are flat or the remote control is not going to be used for a long time.


**Batteries contain chemical substances, so they should be disposed of properly.**

- TIME** ..... switches through the different time informations
- ⏻** ..... switches the CD player to standby
- PROGRAM** ..... programs track numbers
- FADE** ..... fades CD play out and in
- SHUFFLE** ..... plays a CD or a program in random order
- Digits **1-0** ..... selects a track by number
- HIGHLIGHT** ..... plays the beginning of each track or – if a CD-Text disc contains highlights – the highlights of a CD
- REPEAT** ..... repeats a track, a program or the entire CD
- VOLUME -** ..... decreases the volume level
- VOLUME +** ..... increases the volume level
- PLAY** ..... starts CD play
- PREV. ⏮** ..... selects the beginning of the current or a previous track
- NEXT ⏭** ..... selects the beginning of a subsequent track
- STOP** ..... stops CD play and clears a program
- ⏮** ..... searches backward
- PAUSE II** ..... interrupts CD play
- ⏭** ..... searches forward
- CD TEXT** ..... switches through the different CD-Text information
- SCROLL** ..... scrolls CD-Text information
- REPEAT A/B** ..... repeats a selected part of the CD

## INSTRUCTION FOR USE

## ADDITIONAL FUNCTIONS

English

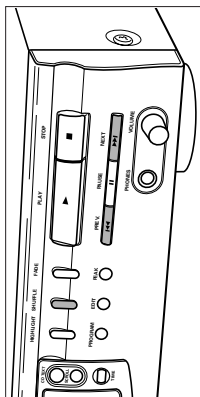

## Selecting a track and searching

- Selecting a track during CD play**
- Briefly press **PREV**, **◀** or **NEXT**, **▶** (or **PREV**, **◀** or **NEXT**, **▶** on the remote control) once or several times to skip to the beginning of the current, previous or subsequent track(s).
  - or
  - Use the digits **1-0** on the remote control to key in the number of a track.  
CD play continues with the selected track.

## Selecting a track when CD play is stopped

- 1** Briefly press **PREV**, **◀** or **NEXT**, **▶** (or **PREV**, **◀** or **NEXT**, **▶** on the remote control) once or several times.
- or
  - Use the digits **1-0** on the remote control to key in the number of a track.
- 2** Press **PLAY**, **▶** to start CD play.  
Playback starts with the selected track.

## Searching for a passage during CD play

- 1** Hold down **PREV**, **◀** or **NEXT**, **▶** (or **PREV**, **◀** or **NEXT**, **▶** on the remote control) to find a particular passage in a backward or forward direction.  
CD play continues at a low volume.
- 2** Release the button when you have reached the desired passage.

*Note: In the shuffle and repeat mode and when playing a program, searching is only possible within the particular track.*

## Random order playing (SHUFFLE)

- 1** Press **SHUFFLE** before or during CD play to start shuffle play.  
**SHUFFLE** is shown in the display. All the tracks of the CD (or program if available) will now be played in random order.
- 2** Press **SHUFFLE** again to return to normal CD play.

## Repeating the CD, a track or a program

- 1** Press repeatedly **REPEAT** on the remote control during CD play.  
The display shows the different repeating modes:  
**REPEAT 1**: the current track is played repeatedly.  
**REPEAT**: the entire CD or program (if available) is played repeatedly.
- 2** Press **REPEAT** until the display indication disappears to return to normal CD play.


*Note: It is possible to activate the different playing modes at the same time, e. g. you can repeatedly play the entire CD or program in random order (PROGRAM REPEAT SHUFFLE).*

## Repeating a part of the CD

- 1** Press **PLAY**, **▶** to start CD play.
- 2** Press **REPEAT** A/B on the remote control to mark the beginning of the passage to be repeated.  
**REPEAT** is shown and **A-** is flashing in the display.
- 3** Press **REPEAT** A/B on the remote control to mark the end of the passage to be repeated.  
**REPEAT A-B** is shown in the display. The part of the CD between the marked points is played repeatedly.
- 4** Press **PLAY**, **▶** to return to normal CD play.

## ADDITIONAL FUNCTIONS

English

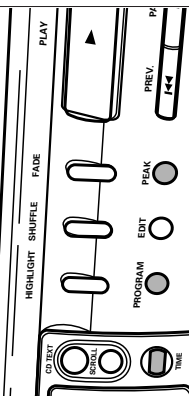

## Clearing the program

- 1** If necessary press **STOP**, **■** to stop program playing.
- 2** Press **STOP**, **■** to clear the program.  
**PROGRAM CLEAR** scrolls through the display, **PROGRAM** disappears and your program is cleared.

*Note: The program will also be cleared if you open the tray.*

## Loudest passage searching

You can search for the loudest passage of a CD or program. This will help you in adjusting your recording device if required.

- 1** If necessary press **STOP**, **■** to stop CD play.
- 2** Press **PEAK** to start searching.  
**PEAK** starts flashing. Searching may need a few minutes. Then 4 seconds of the loudest passage are played repeatedly.
- You can interrupt peak play by pressing **PAUSE**, **■**. Continue peak play by pressing **PAUSE**, **■** again.

- 3** Press **STOP**, **■** to stop playing.  
or
- Press **PLAY**, **▶** to start CD play.

## Time display

You can display time information which is stored on the CD.  
While playing a CD or a program the number and elapsed time of the actual track, and **TIME** are displayed. If the disc contains CD-Text the display shows CD-Text information (see "CD-Text").

- Press **TIME** several times to display:  
If the disc contains CD-Text, the number and elapsed time of the actual track, and **TIME** are displayed first. The number and remaining time of the actual track, and **REM TIME**.  
The number of the actual track, the total elapsed time of the CD, and **TOTAL TIME**.  
The number of the actual track, the total remaining time of the CD, and **TOTAL REM TIME**.

*Note: If you press TIME when the CD is not playing you may only display the total time of the CD.*

## Programming track numbers

You can select a number of tracks and store these in the memory in the desired sequence. You can store any track more than once. At most, 30 tracks can be stored in the memory.

- 1** Press **PROGRAM** to start programming.  
**PROGRAM** flashes.
- Note: If you press PROGRAM while playing a CD, the actual track will be added to the program.*

- 2** Press **PREV**, **◀** or **NEXT**, **▶** (or **PREV**, **◀** or **NEXT**, **▶** on the remote control) to select the desired track.  
or
- Key in the number of a track with the digits **1-0** on the remote control.

- 3** Press **PROGRAM** to store the track number.  
**TRACK**, **TOTAL TIME**, and the number of the programmed track is displayed. The number of programmed tracks is increased and the time of the track is added to the total time of the program.

- 4** Repeat steps 2 and 3 for all tracks to be programmed.

- 5** Press **STOP**, **■** to end programming.  
**PROGRAM** lights permanently.

- It is possible to review the program using the **PREV**, **◀** or **NEXT**, **▶** (or **PREV**, **◀** or **NEXT**, **▶** on the remote control). You can add more tracks by pressing **PROGRAM** like you have done before.

- 6** Press **PLAY**, **▶** to start program play.

*Note: If you try to store more than 30 tracks PROGRAM1 FULL scrolls through the display.*

## INSTRUCTION FOR USE

## ADDITIONAL FUNCTIONS

## English

5 Press **PREV**, **◀◀** or **NEXT**, **▶▶** (**PREV**, **◀** or **NEXT**, **▶** on the remote control) to switch through the different recording times and media.

**Note:**  $\square$  is for cassette,  $\square$   $\square$  is for CD-Recordable and CD-Rewriteable and therefore for single-sided recording only.


5 As soon as the desired recording time and media is displayed press EDIT.

**7** Start your recording and press **PLAY** ► to start CD play. If cassette (◻) was selected the CD player pauses after playing the calculated tracks for side A. If CD-Recordable (◻) was selected the CD player stops.

**3** If required switch tape sides.

**3** Press **PLAY**  $\blacktriangleright$  to start CD play again.

Note: It is possible to switch between  $\square$  and  $\boxplus$  by using  $\text{PREV.}\blacktriangleleft$  or  $\text{NEXT}\blacktriangleright$  ( $\text{PREV.}\blacktriangleleft$  or  $\text{NEXT}\blacktriangleright$  on the remote control).

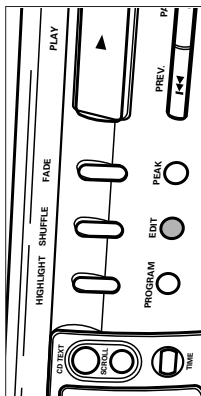

### Recording setup

it is possible to set up the CD player in a way that it will calculate which tracks will fit on your recording media. It is only possible to use the edit function if a disc has not more than 29 tracks.

If you use `MP3REAL`, the recording stops after the last track that fits on one side of your recording media. Notice that CD-Recordables are single-sided only! If you use `MP3TIFL`, some tracks will be skipped to minimise the unused space on your recording media. The sequence of the tracks stays as the original.

Insert a CD and, if desired, program track numbers.

2 Press EDIT to start the setup.

The display shows **EDIT** and **NORMAL**.

3 Press **PREV**, **◀◀** or **NEXT ▶▶** (**PREV**, **◀** or **NEXT ▶**) on the remote control) to switch through the different scan modes. **NORMAL**, **OPTIMAL**, **STOP ...** (**STOP** aborts the edit function).

As soon as the desired edit mode is displayed press EDIT.  
The display shows  $\square$  90  $\square$


## Environmental information

All redundant packing material has been omitted. We have done our utmost to make the packaging easily separable into three mono materials: cardboard (box), polystyrene foam (buffer) and polyethylen (bags, protective foam sheet).

*Your set consists of materials which can be recycled if disassembled by a specialized company. Please observe the local regulations regarding the disposal of packing materials, exhausted batteries and old equipment.*

## ADDITIONAL FUNCTIONS

## English

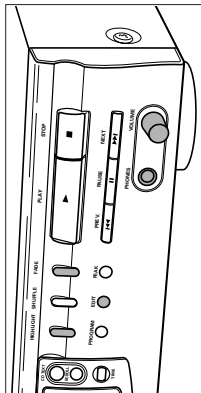

## Fading out and in

You can fade out and in CD play, e. g. to stop and start a recording softly.

Press FADE during CD play to fade out.  
The display shows in steps. The volume is lowered continuously until CD play is paused.

2. Press FADE again to fade in. The display shows  in steps. CD play starts and the volume is raised continuously to its previous level.

*Note: You may use FADE anytime when CD play is paused to fade in.*

### Volume adjustment

The volume of the CD player can be adjusted. This affects the DIGITAL OUT output as well.

- Press **VOLUME -** or **VOLUME +** on the remote control. The volume of the CD player is lowered or raised. The display shows the actual value between **VOLUME MIN** and **VOLUME MAX**.

**Important!**

VOLUME +/- is altering the signal of the output. Before recording set the volume to VOLUME MAX and do not change during recording.

### Locking the volume

it is possible to lock the output volume to its maximum. This affects the DIGITAL OUT output as well. Locking the volume can be usefull when recording from the CD-player.


- Keep EDIT pressed for more than 2 seconds.  
**If the volume was unlocked:**  
 The display shows  $\vee \overline{\text{OL}} \cup \text{rF} \in \text{F} \text{ T } \text{ r } \text{ E } \text{ J}$  and the volume is locked.
- **If the volume was locked:**  
 The display shows  $\vee \overline{\text{OL}} \cup \text{rF} \in \text{rF} \text{ T } \text{ r } \text{ E } \text{ J}$  and the volume is unlocked.

**Note:** If you press **VOLUME -/+** and the volume is locked the display shows **VOLUME FIXED**.


## MECHANICAL INSTRUCTIONS

### Dismantling Top Cover

- 1) Loosen 7x screw as shown in picture 1.

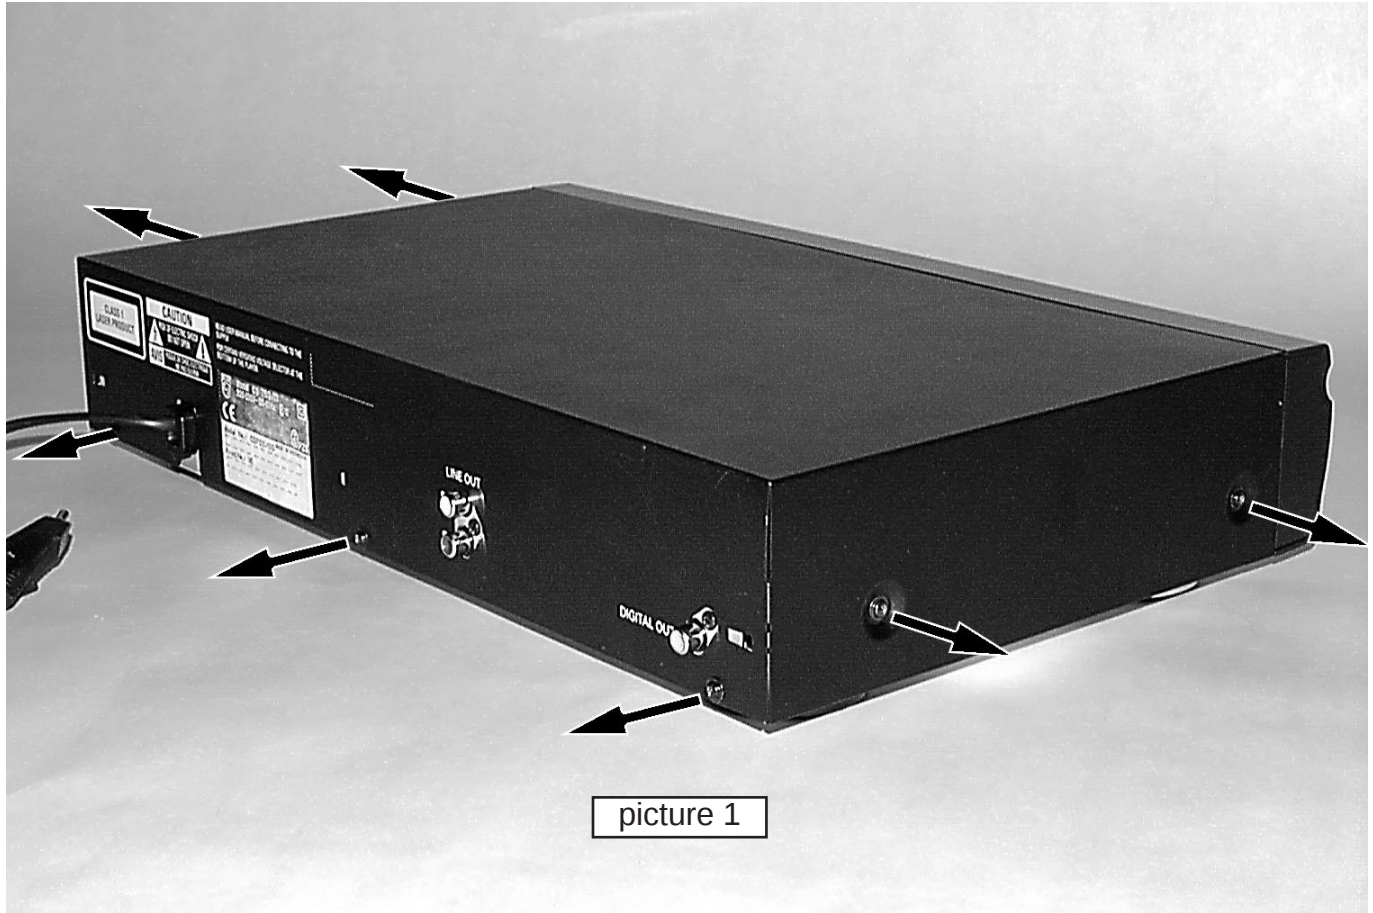


- 2) Lift top cover as shown in picture 2.
- 3) Remove top cover.

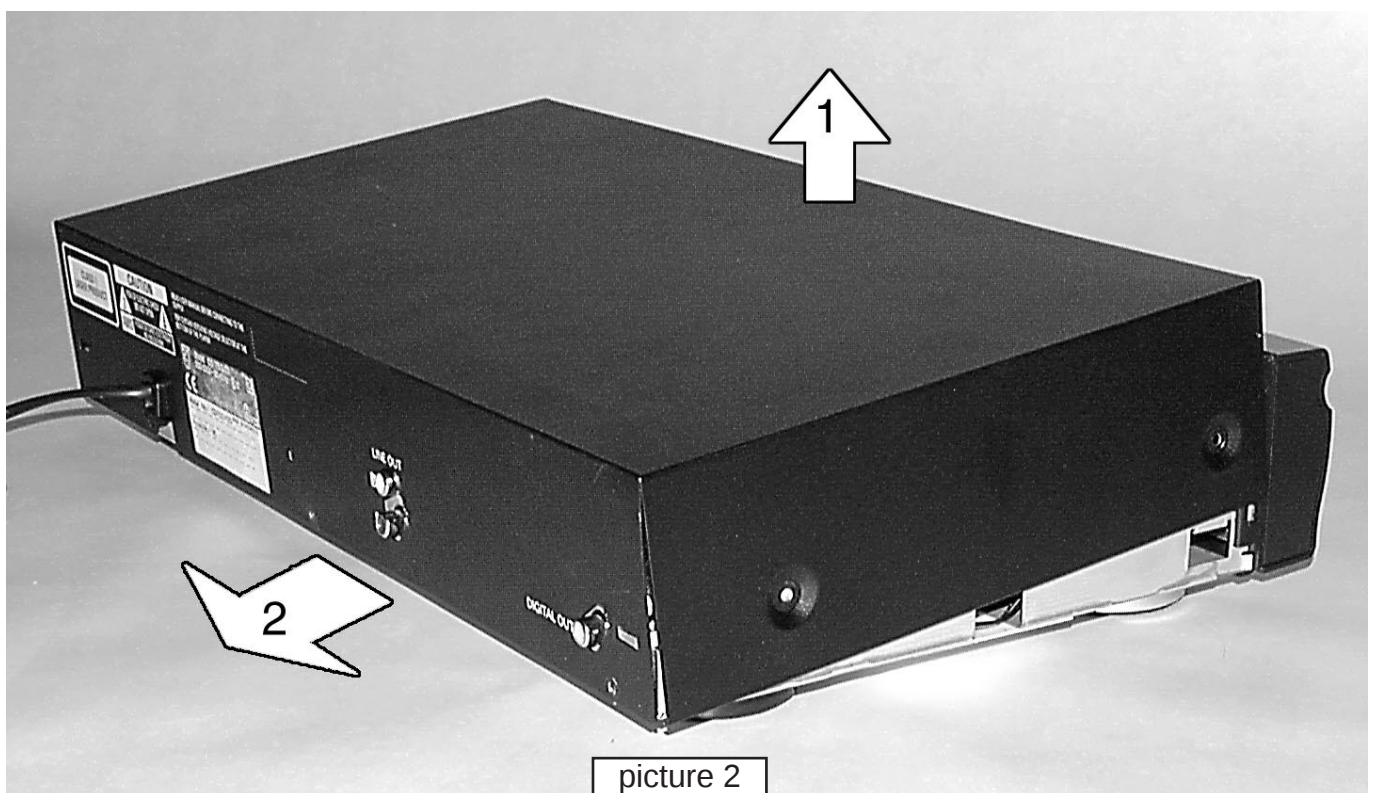


## MECHANICAL INSTRUCTIONS

### Dismantling Front

- 1) Loosen 2x screw as shown in picture 3.

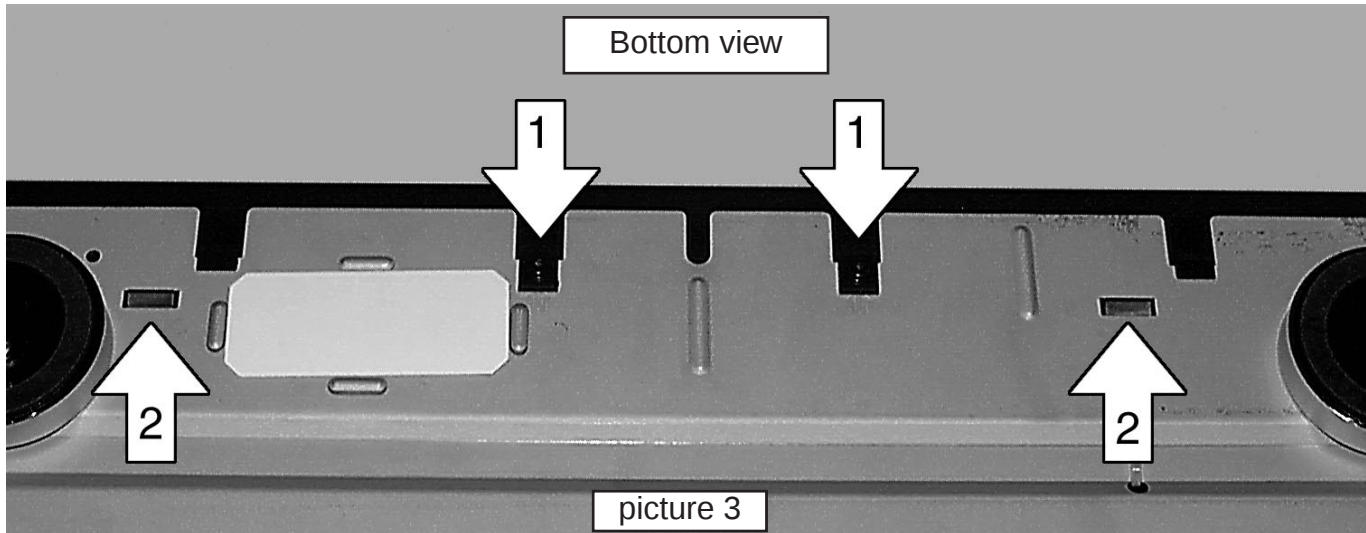

- 2) Release 2x snap on bottom (see picture 3).
- 3) Release 2x snap on side (see picture 4).
- 4) Remove front.

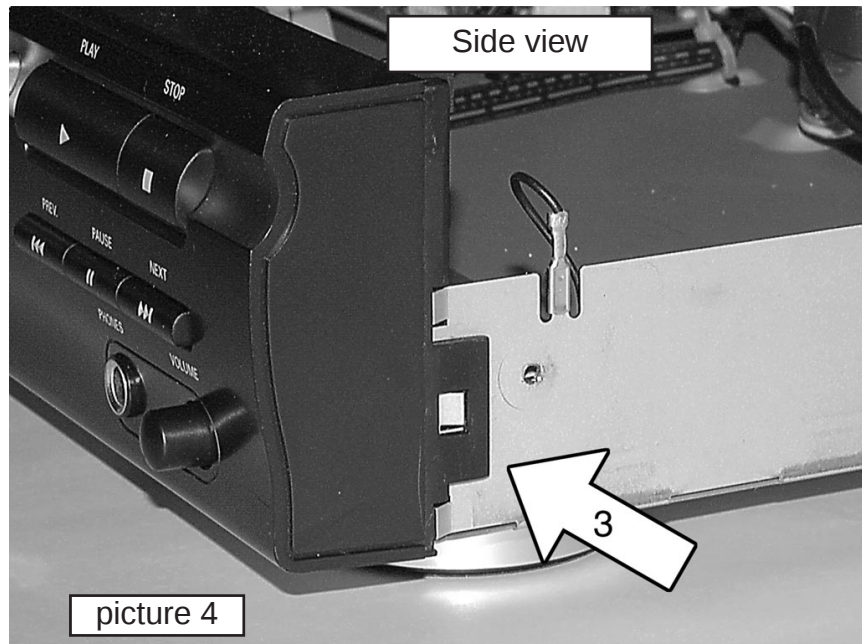

## ***Dismantling hints CD Short Loader***

### ***Dismantling the tray***

- a) Press open/close button to open the tray. If the tray doesn't work, use a small screwdriver as shown in Fig.1 step 1 to move the tray outside. After the first centimetre it is possible to pull the tray out by hand.
- b) Release two snaps and remove tray.

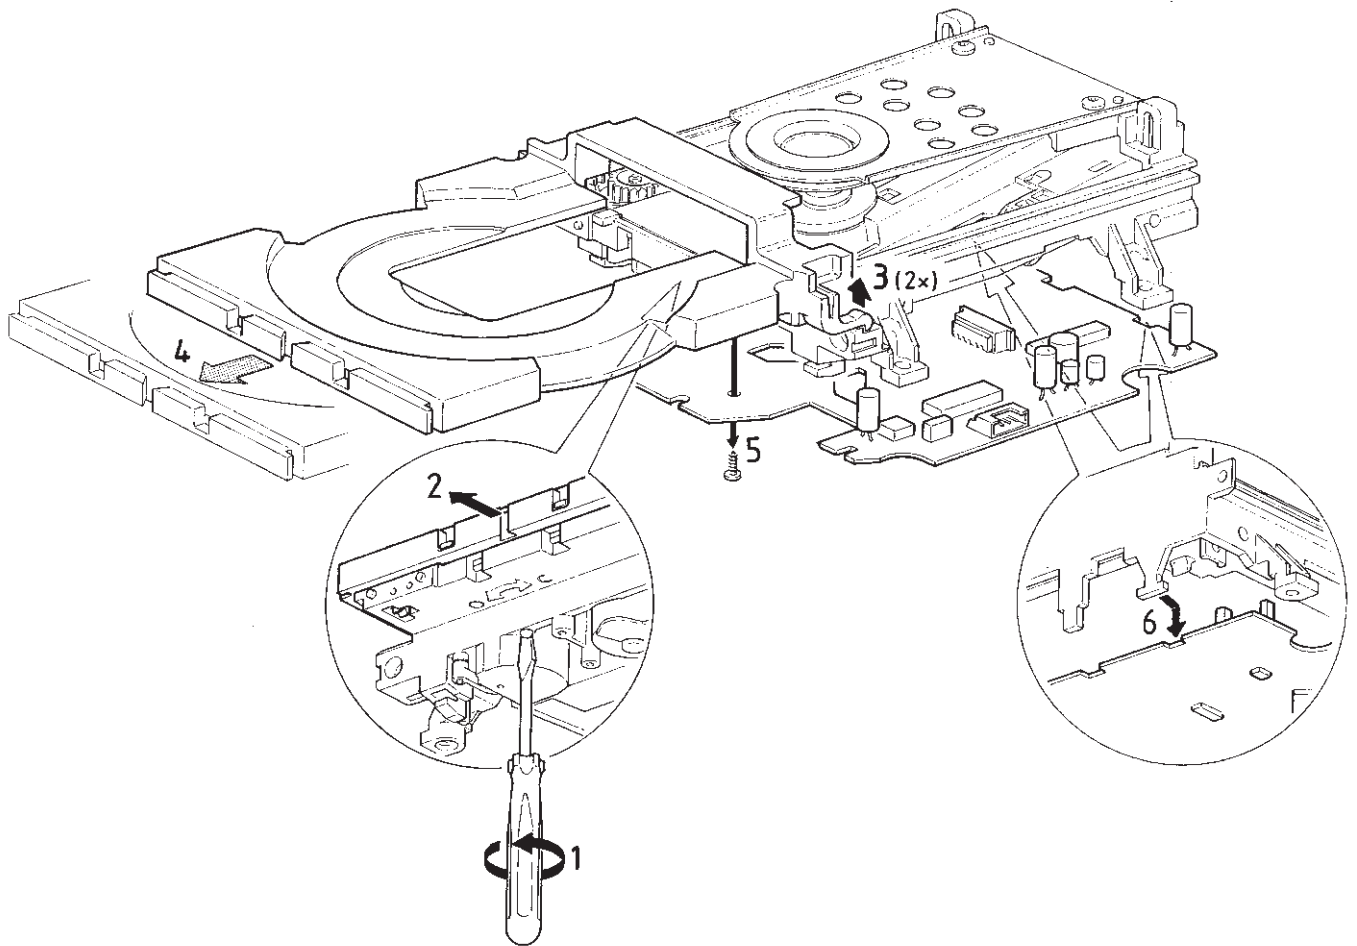


Fig. 1

### ***Assembly of gear***

- a) Use a pin (e.g. a paperclip) to align the cam wheel (a) with the gear wheel (b). See Fig. 2.
- b) Fix the wheels with the small plastic washers.

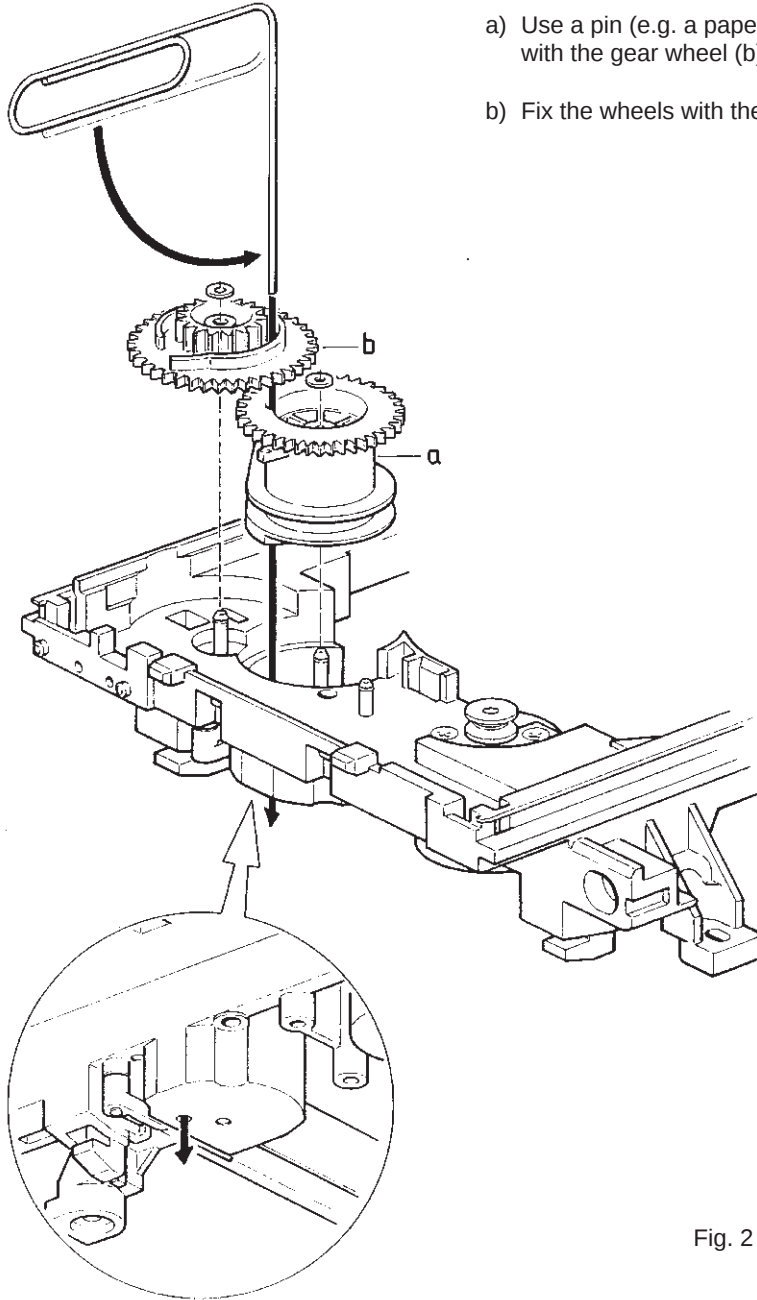


Fig. 2

- c) Mount idle wheel 2 (c) and idle wheel 1 (d) in any position. See Fig. 3.
- d) Fix the idle wheel 1 (d) with the small plastic washer.
- e) Mount the driving belt.

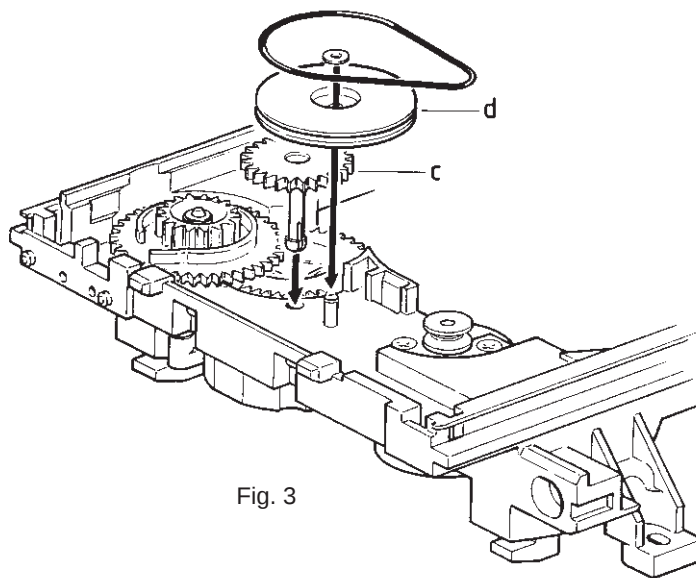


Fig. 3

- f) Mount the pinion guiding assy and the cover as shown in Fig. 4.
- g) Turn the gear wheel (b) counter clockwise to endposition.

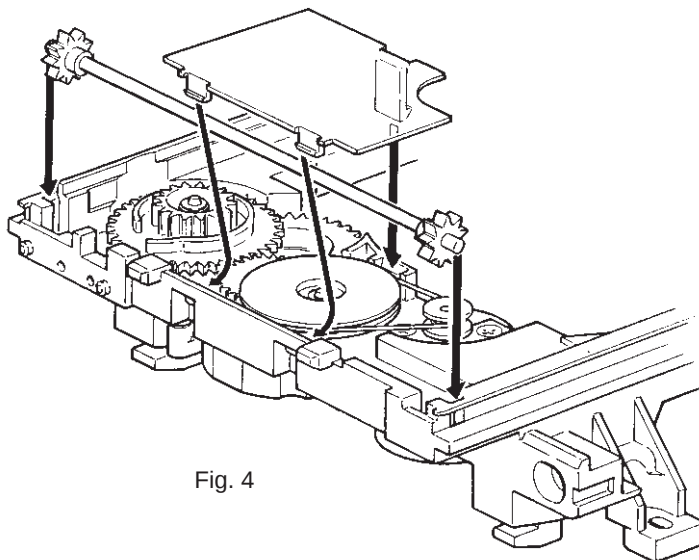


Fig. 4

- h) Mount the CD Mechanism as shown in Fig. 5.
- i) Mount the tray (Align the tray to the chassis and push it inside).

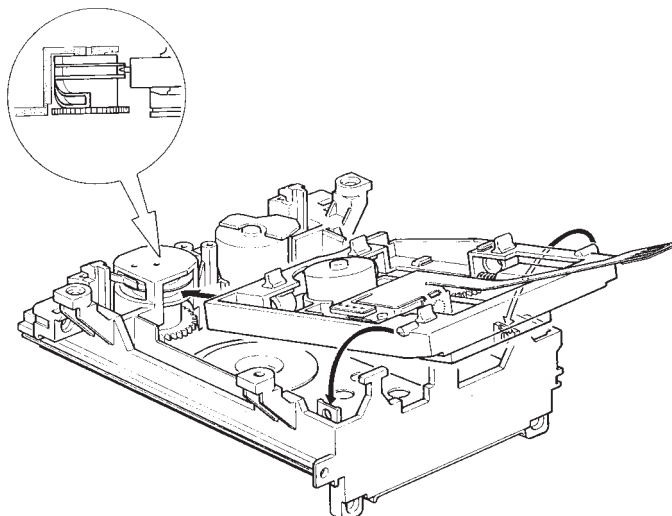


Fig. 5

### ***Check if tray mechanism works correctly!***


- 1) Turn the gear wheel (b) clockwise to its endposition (Use a small screwdriver as shown in Fig. 1 step 1).

The tray has to move to inner position first and then the CD mechanism has to move to its upper position.

- 2) Turn the gear wheel (b) counter clockwise to its endposition.

The CD Mechanism has to move to its lower position first and then the tray has to move outside.

## HANDLING CHIP COMPONENTS

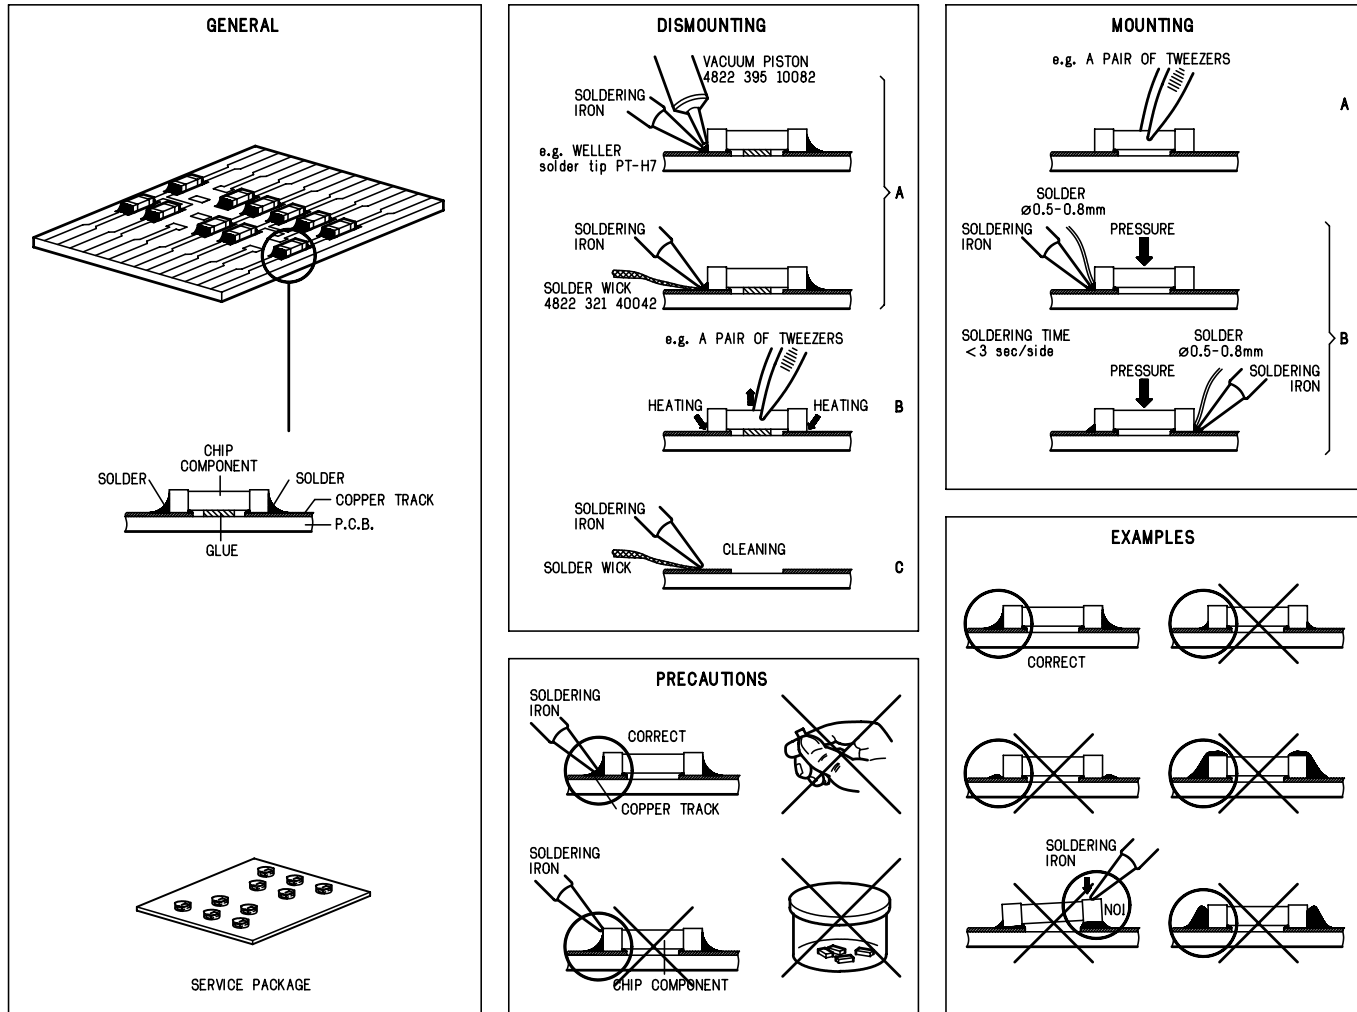

## SERVICE TOOLS

**TORX T10** screwdriver with shaftlength 150mm .....4822 395 50423

**TORX screwdriver set T6 - T20** SBC 163.....4822 395 50145

**Audio signal disc** SBC 429.....4822 397 30184

**Playability test disc** SBC444/444A.....4822 397 30245


**Test disc 444** (disc without errors) +

**Test disc 444A** (disc with dropout errors, black spots and fingerprints)

**Burn in test disc** SBC442 .....4822 397 30155

(65 min. 1kHz signal at -30dB level without "pause")

SERVICE TEST PROGRAM

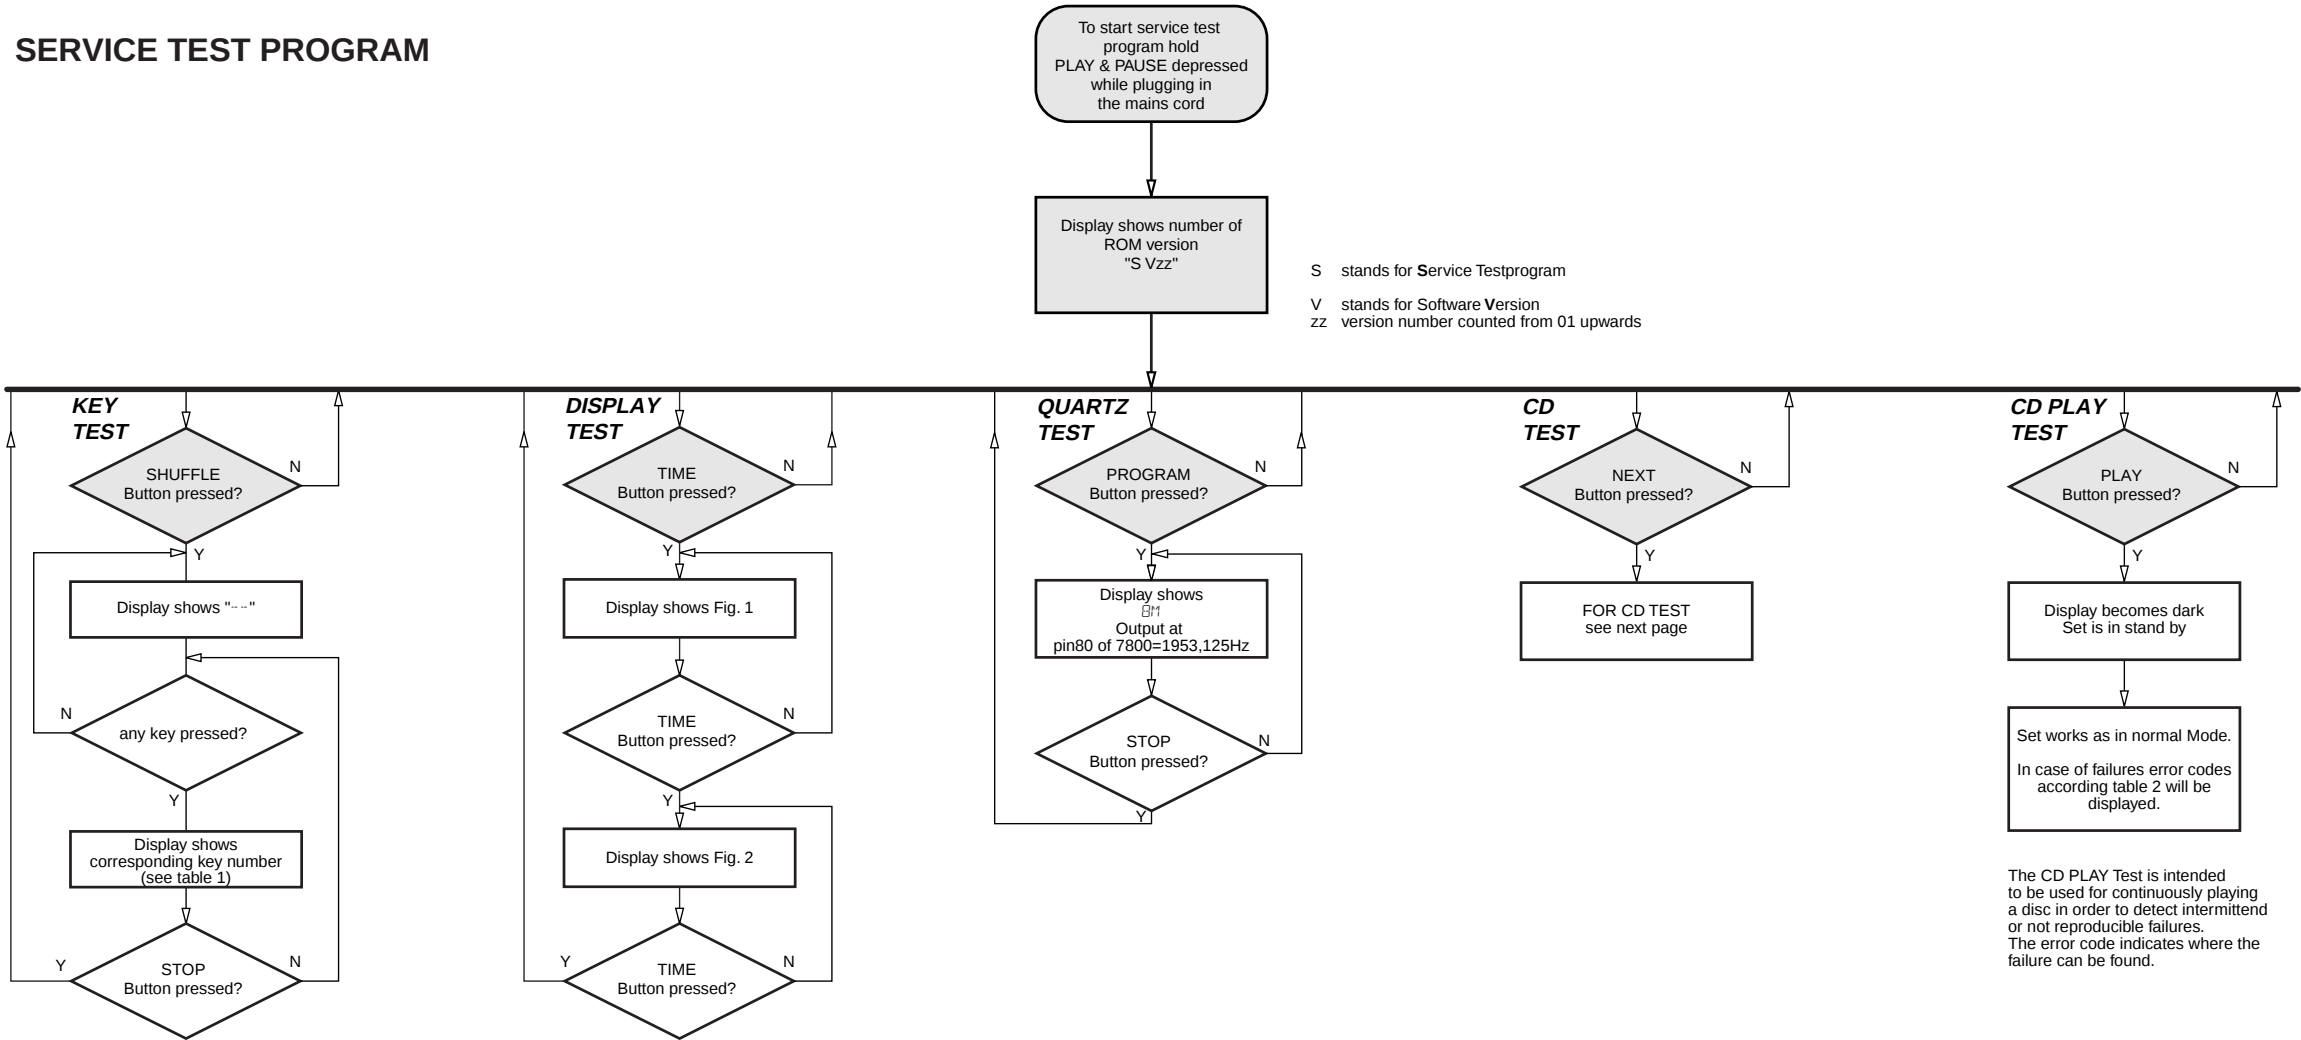

KEY TEST

| Key        | Number | Key         | Number | Key           | Number |
|------------|--------|-------------|--------|---------------|--------|
| Next       | 1      | Shuffle     | 7      | Fade          | 13     |
| Previous   | 2      | Scan        | 8      | Time          | 14     |
| Play       | 3      | Program     | 9      | CD-Text       | 15     |
| Stop       | EXIT   | Peak search | 10     | Scroll        | 16     |
| Open/Close | 5      | Repeat      | 11     | Stand by      | 17     |
| Edit       | 6      | Pause       | 12     | any RC button | RC     |

Table 1

DISPLAY TEST

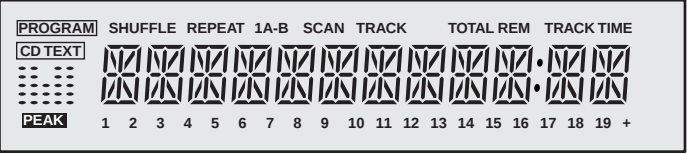


Fig. 1

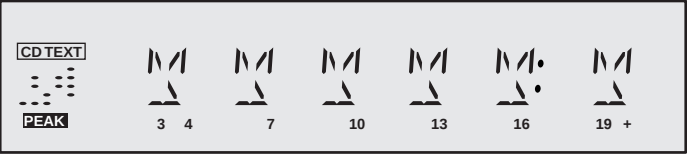



Fig. 2

CD PLAY TEST

| Error number | Type | Description                                                                                                                                                                         |
|--------------|------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1000         | W    | <b>Focus error</b><br>Triggered when the focus could not be found within a certain time when starting up the CD or when the focus is lost for a certain time during playing the CD. |
| 1001         | W    | <b>Radial error</b><br>Triggered when the radial servo is not on track for a certain time during playing the CD.                                                                    |
| 1002         | W    | <b>Slide in error</b><br>Generated when the slide did not reach its inner position (innerswitch is closed) before 6 seconds have passed by. Innerswitch or slide motor problem.     |
| 1003         | W    | <b>Slide out error</b><br>Generated when the slide did not come out of its inner position (innerswitch is open) before 250ms have passed by. Innerswitch or slide motor problem.    |
| 1005         | W    | <b>Jump error</b><br>Generated when the jump destination could not be found within a certain time.                                                                                  |
| 1006         | W    | <b>Subcode error</b><br>No valid subcode for a certain time.                                                                                                                        |
| 1007         | W    | <b>PLL error</b><br>The Phase -Lock-Loop could not lock within a certain time.                                                                                                      |
| 1008         | W    | <b>Turntable motor error</b><br>Generated when the CD could not reach 75% of speed during starting up within a certain time. Disc motor problem                                     |
| 1020         | F    | <b>Focus search error</b><br>Focus point has not been found within a certain time.                                                                                                  |

Table 2

W = Warning  
Error number remains on display till next warning/error  
F = Fatal error  
Set stops playing → Error number remains on display



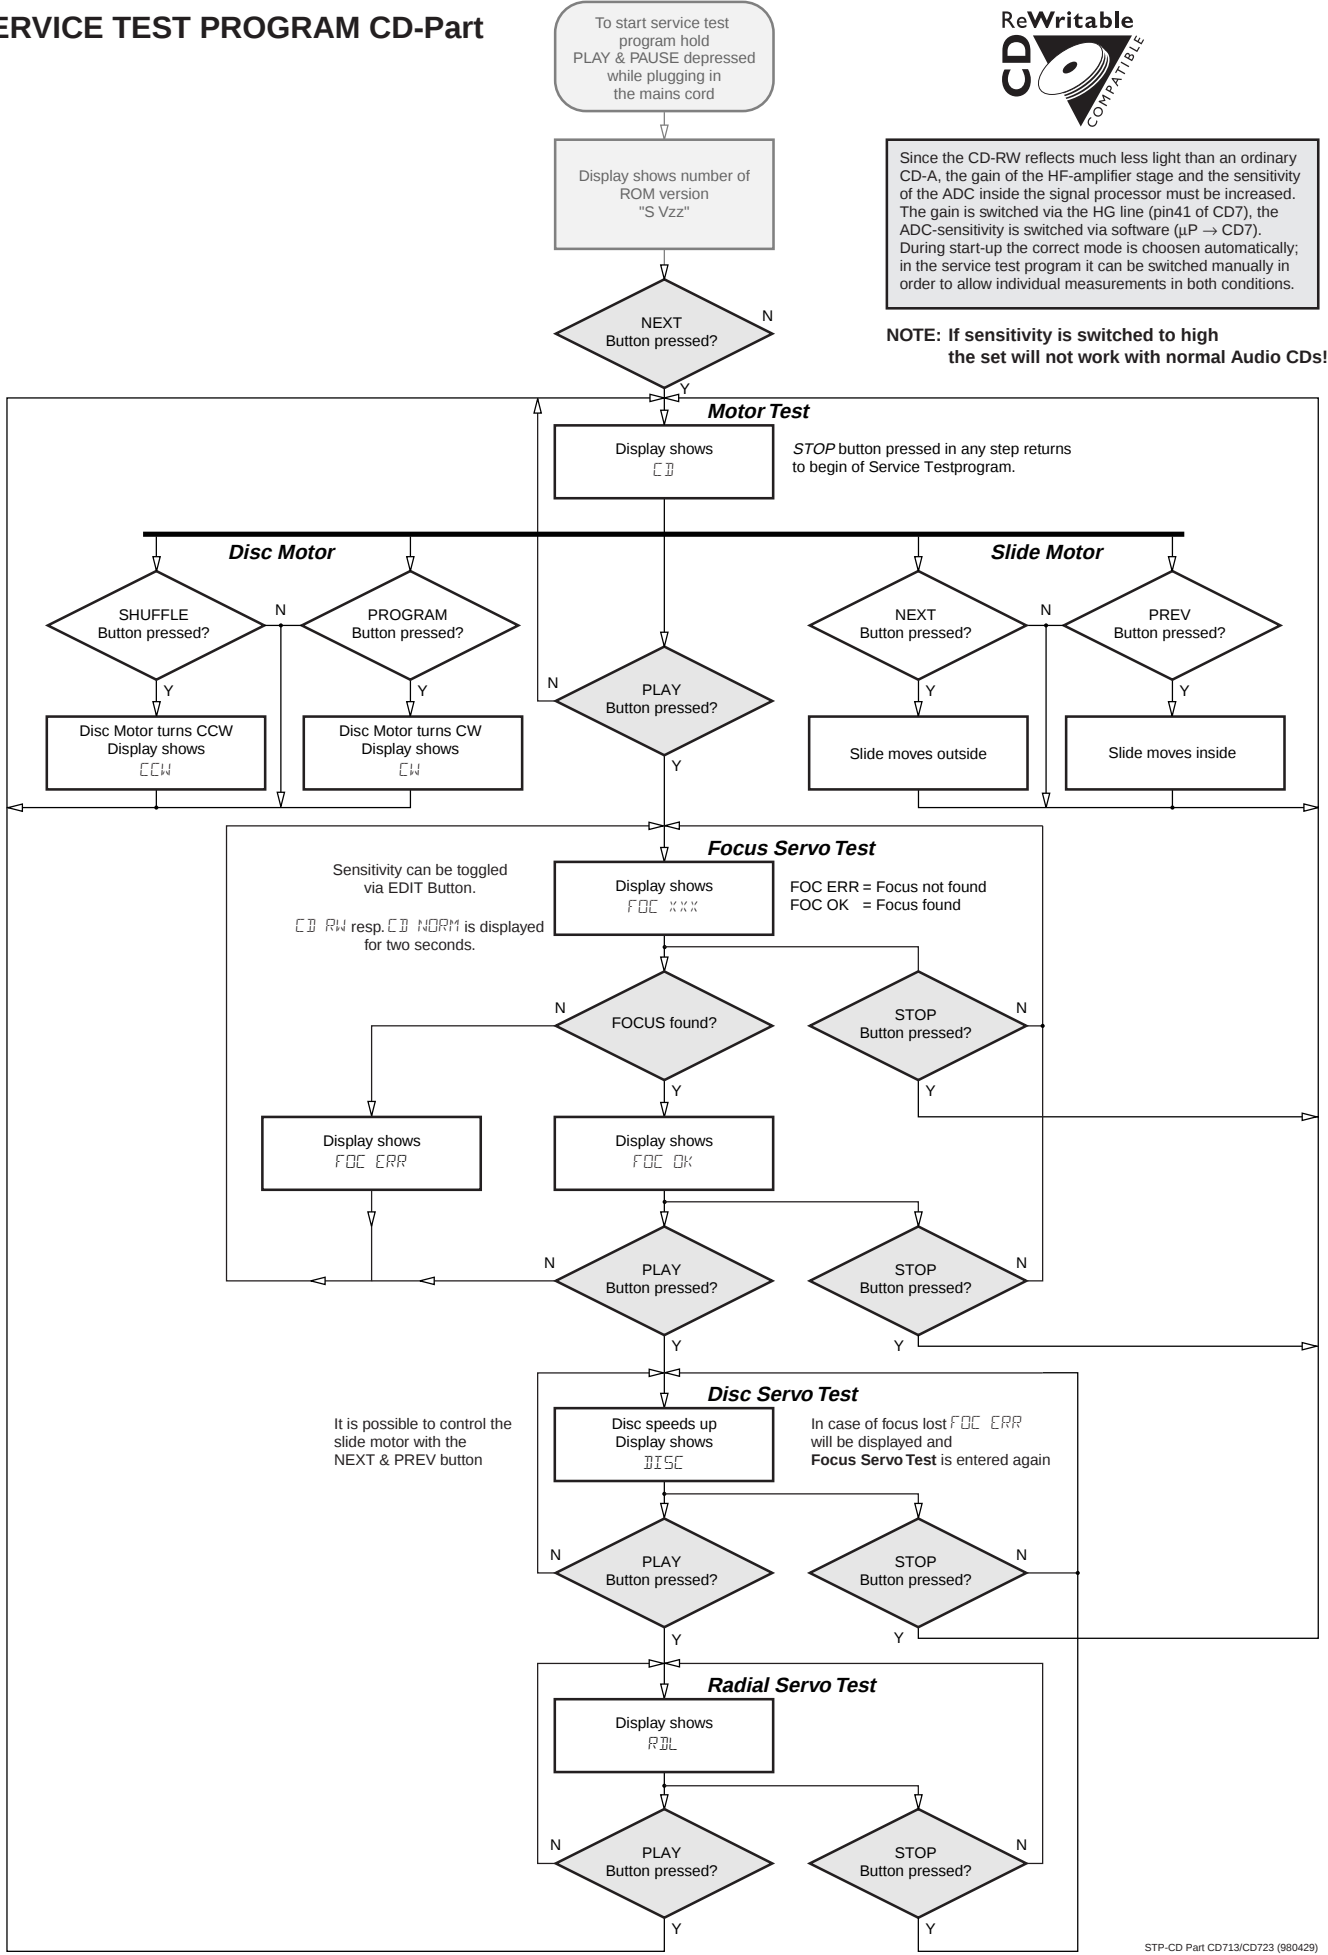


Abbreviations CD Part


SAAT372 – DECODER AND DIGITAL SERVO IC CD7

| Pin | Name   | Direction                        | Description                                                          |
|-----|--------|----------------------------------|----------------------------------------------------------------------|
| 1   | VSSA1  | GND                              | supply (analog) of CD7                                               |
| 2   | VDDA1  | +4V                              | supply (analog) of CD7                                               |
| 3   | D1     | HF-preamp $\rightarrow$ CD7      | unipolar current input (central diode signal input)                  |
| 4   | D2     | HF-preamp $\rightarrow$ CD7      | unipolar current input (central diode signal input)                  |
| 5   | D3     | HF-preamp $\rightarrow$ CD7      | unipolar current input (central diode signal input)                  |
| 6   | VRL    | GND                              | reference input for ADC                                              |
| 7   | D4     | HF-preamp $\rightarrow$ CD7      | unipolar current input (central diode signal input)                  |
| 8   | R1     | HF-preamp $\rightarrow$ CD7      | unipolar current input (satellite diode signal input)                |
| 9   | R2     | HF-preamp $\rightarrow$ CD7      | unipolar current input (satellite diode signal input)                |
| 10  | IREFT  | $\rightarrow$ CD7                | current reference for calibration ADC                                |
| 11  | VRH    | not connected                    | reference output from ADC                                            |
| 12  | VSSA2  | GND                              | supply (analog) of CD7                                               |
| 13  | SELPLL | +4V                              | selects whether internal clock multiplier PLL is used                |
| 14  | ISLICE | CD7 $\rightarrow$                | current feedback from data slicer                                    |
| 15  | HFIN   | $\rightarrow$ CD7                | comparator signal input                                              |
| 16  | VSSA3  | GND                              | supply (analog) of CD7                                               |
| 17  | HFREF  | $\rightarrow$ CD7                | comparator common mode input                                         |
| 18  | IREF   | $\rightarrow$ CD7                | reference current pin (nom. VDD/2)                                   |
| 19  | VDDA2  | +4V                              | supply (analog) of CD7                                               |
| 20  | TEST1  | GND                              | test control input                                                   |
| 21  | CRIN   | X-Tal $\rightarrow$ CD7          | crystal/resonator input                                              |
| 22  | CDOUT  | X-Tal $\rightarrow$ CD7          | crystal/resonator output                                             |
| 23  | TEST2  | GND                              | test control input                                                   |
| 24  | CL16   | not connected                    | 16.9344MHz system clock output                                       |
| 25  | CL11   | not connected                    | 11.2896MHz or 5.6448MHz clock output (3-state)                       |
| 26  | RA     | CD7 $\rightarrow$ servo driver   | radial actuator output                                               |
| 27  | FO     | CD7 $\rightarrow$ servo driver   | focus actuator output                                                |
| 28  | SL     | CD7 $\rightarrow$ servo driver   | slide actuator output                                                |
| 29  | TEST3  | GND                              | test control input                                                   |
| 30  | VDD1P  | +4V                              | supply (digital) of CD7                                              |
| 31  | DOBM   | CD7 $\rightarrow$ digital output | bi-phase mark output (3-state)                                       |
| 32  | VSS1   | GND                              | supply (digital) of CD7                                              |
| 33  | MOTO1  | CD7 $\rightarrow$ servo driver   | motor output1 of CD7; versatile (3-state)                            |
| 34  | MOTO2  | CD7 $\rightarrow$ servo driver   | motor output2 of CD7; versatile (3-state)                            |
| 35  | SBSY   | not connected                    | subcode block sync (3-state)                                         |
| 36  | SFSY   | not connected                    | subcode frame sync (3-state)                                         |
| 37  | RCK    | GND                              | subcode clock input                                                  |
| 38  | SUB    | not connected                    | P to W subcode bits (3-state)                                        |
| 39  | VSS2   | GND                              | supply (digital) of CD7                                              |
| 40  | V5     | not connected                    | versatile output pin of CD7                                          |
| 41  | V4     | not connected                    | versatile output pin of CD7                                          |
| 42  | V3     | not connected                    | versatile output pin of CD7 (open drain)                             |
| 43  | KILL   | CD7 $\rightarrow$                | kill output; programmable (open drain)                               |
| 44  | MISC   | not connected                    | C2 error flag; output only defined in CD-ROM modes (3-state)         |
| 45  | DATA   | CD7 $\rightarrow$ DAC            | serial data output (3-state)                                         |
| 46  | WCLK   | CD7 $\rightarrow$ DAC            | word clock output (3-state)                                          |
| 47  | VDD2P  | +4V                              | supply (digital) of CD7                                              |
| 48  | BCLK   | CD7 $\rightarrow$ DAC            | serial bit clock output (3-state)                                    |
| 49  | VSS3   | GND                              | supply (digital) of CD7                                              |
| 50  | CL4    | not connected                    | 4.2336MHz $\mu P$ clock output                                       |
| 51  | SDA    | $\mu P \rightarrow$ CD7          | $\mu P$ interface data I/O line (open drain output)                  |
| 52  | SCL    | $\mu P \rightarrow$ CD7          | $\mu P$ interface clock line                                         |
| 53  | RAB    | $\mu P \rightarrow$ CD7          | $\mu P$ interface R/W and load control line                          |
| 54  | SILD   | $\mu P \rightarrow$ CD7          | $\mu P$ interface R/W and load control line                          |
| 55  | NC     |                                  | no connection                                                        |
| 56  | VSS4   | GND                              | supply (digital) of CD7                                              |
| 57  | RESET  | $\mu P \rightarrow$ CD7          | power-on reset input (active low)                                    |
| 58  | STATUS | not connected                    | servo interrupt request line/CD7 status register output (open drain) |
| 59  | VDD3C  | +4V                              | supply core (digital)                                                |
| 60  | C2FAIL | not connected                    | indication of correction failure (open drain)                        |
| 61  | CFLG   | not connected                    | correction flag output (open drain)                                  |
| 62  | V1     | $\rightarrow$ CD7                | versatile input pin                                                  |
| 63  | V2     | $\rightarrow$ CD7                | versatile input pin                                                  |
| 64  | LDON   | CD7 $\rightarrow$ 7820           | laser drive on output (open drain)                                   |

## BLOCKDIAGRAM

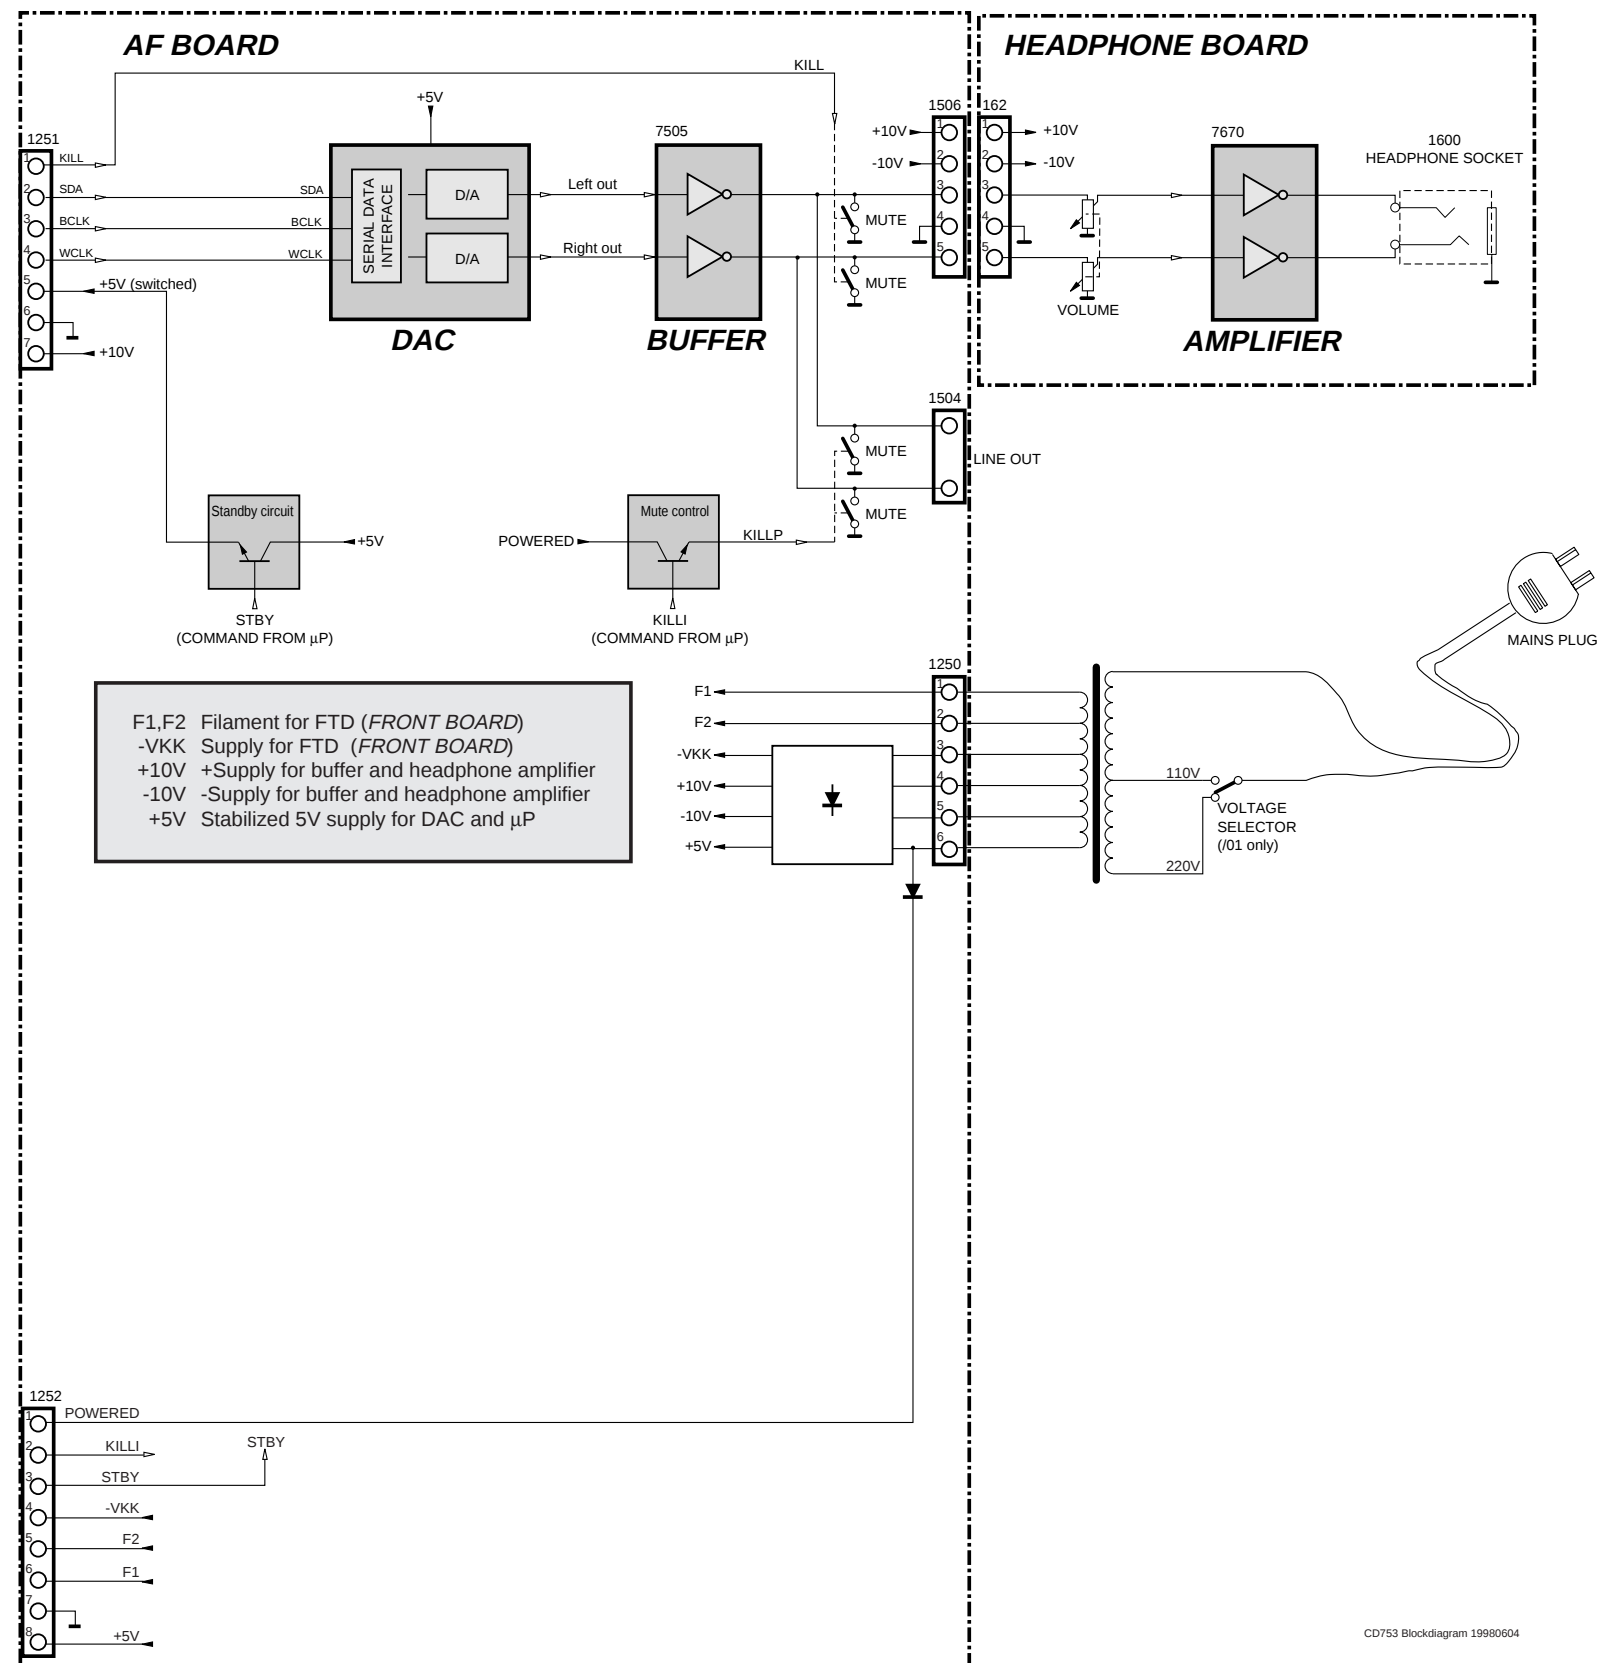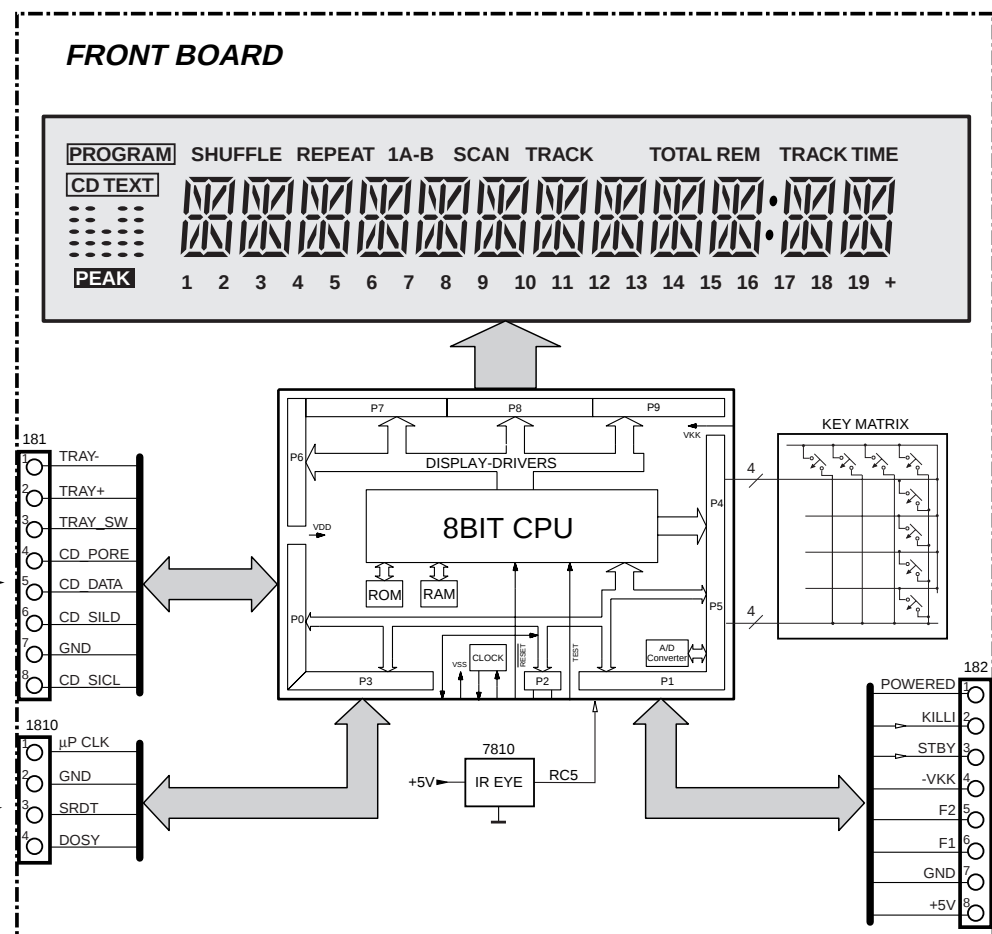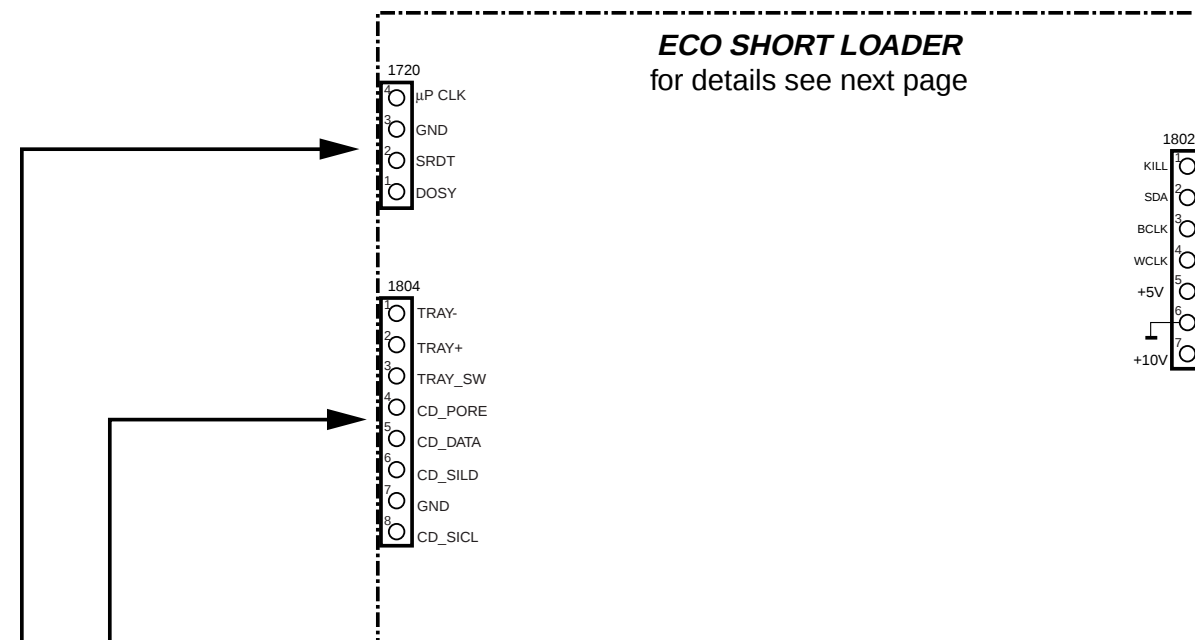


BLOCKDIAGRAM ECO SHORTLOADER Mk3

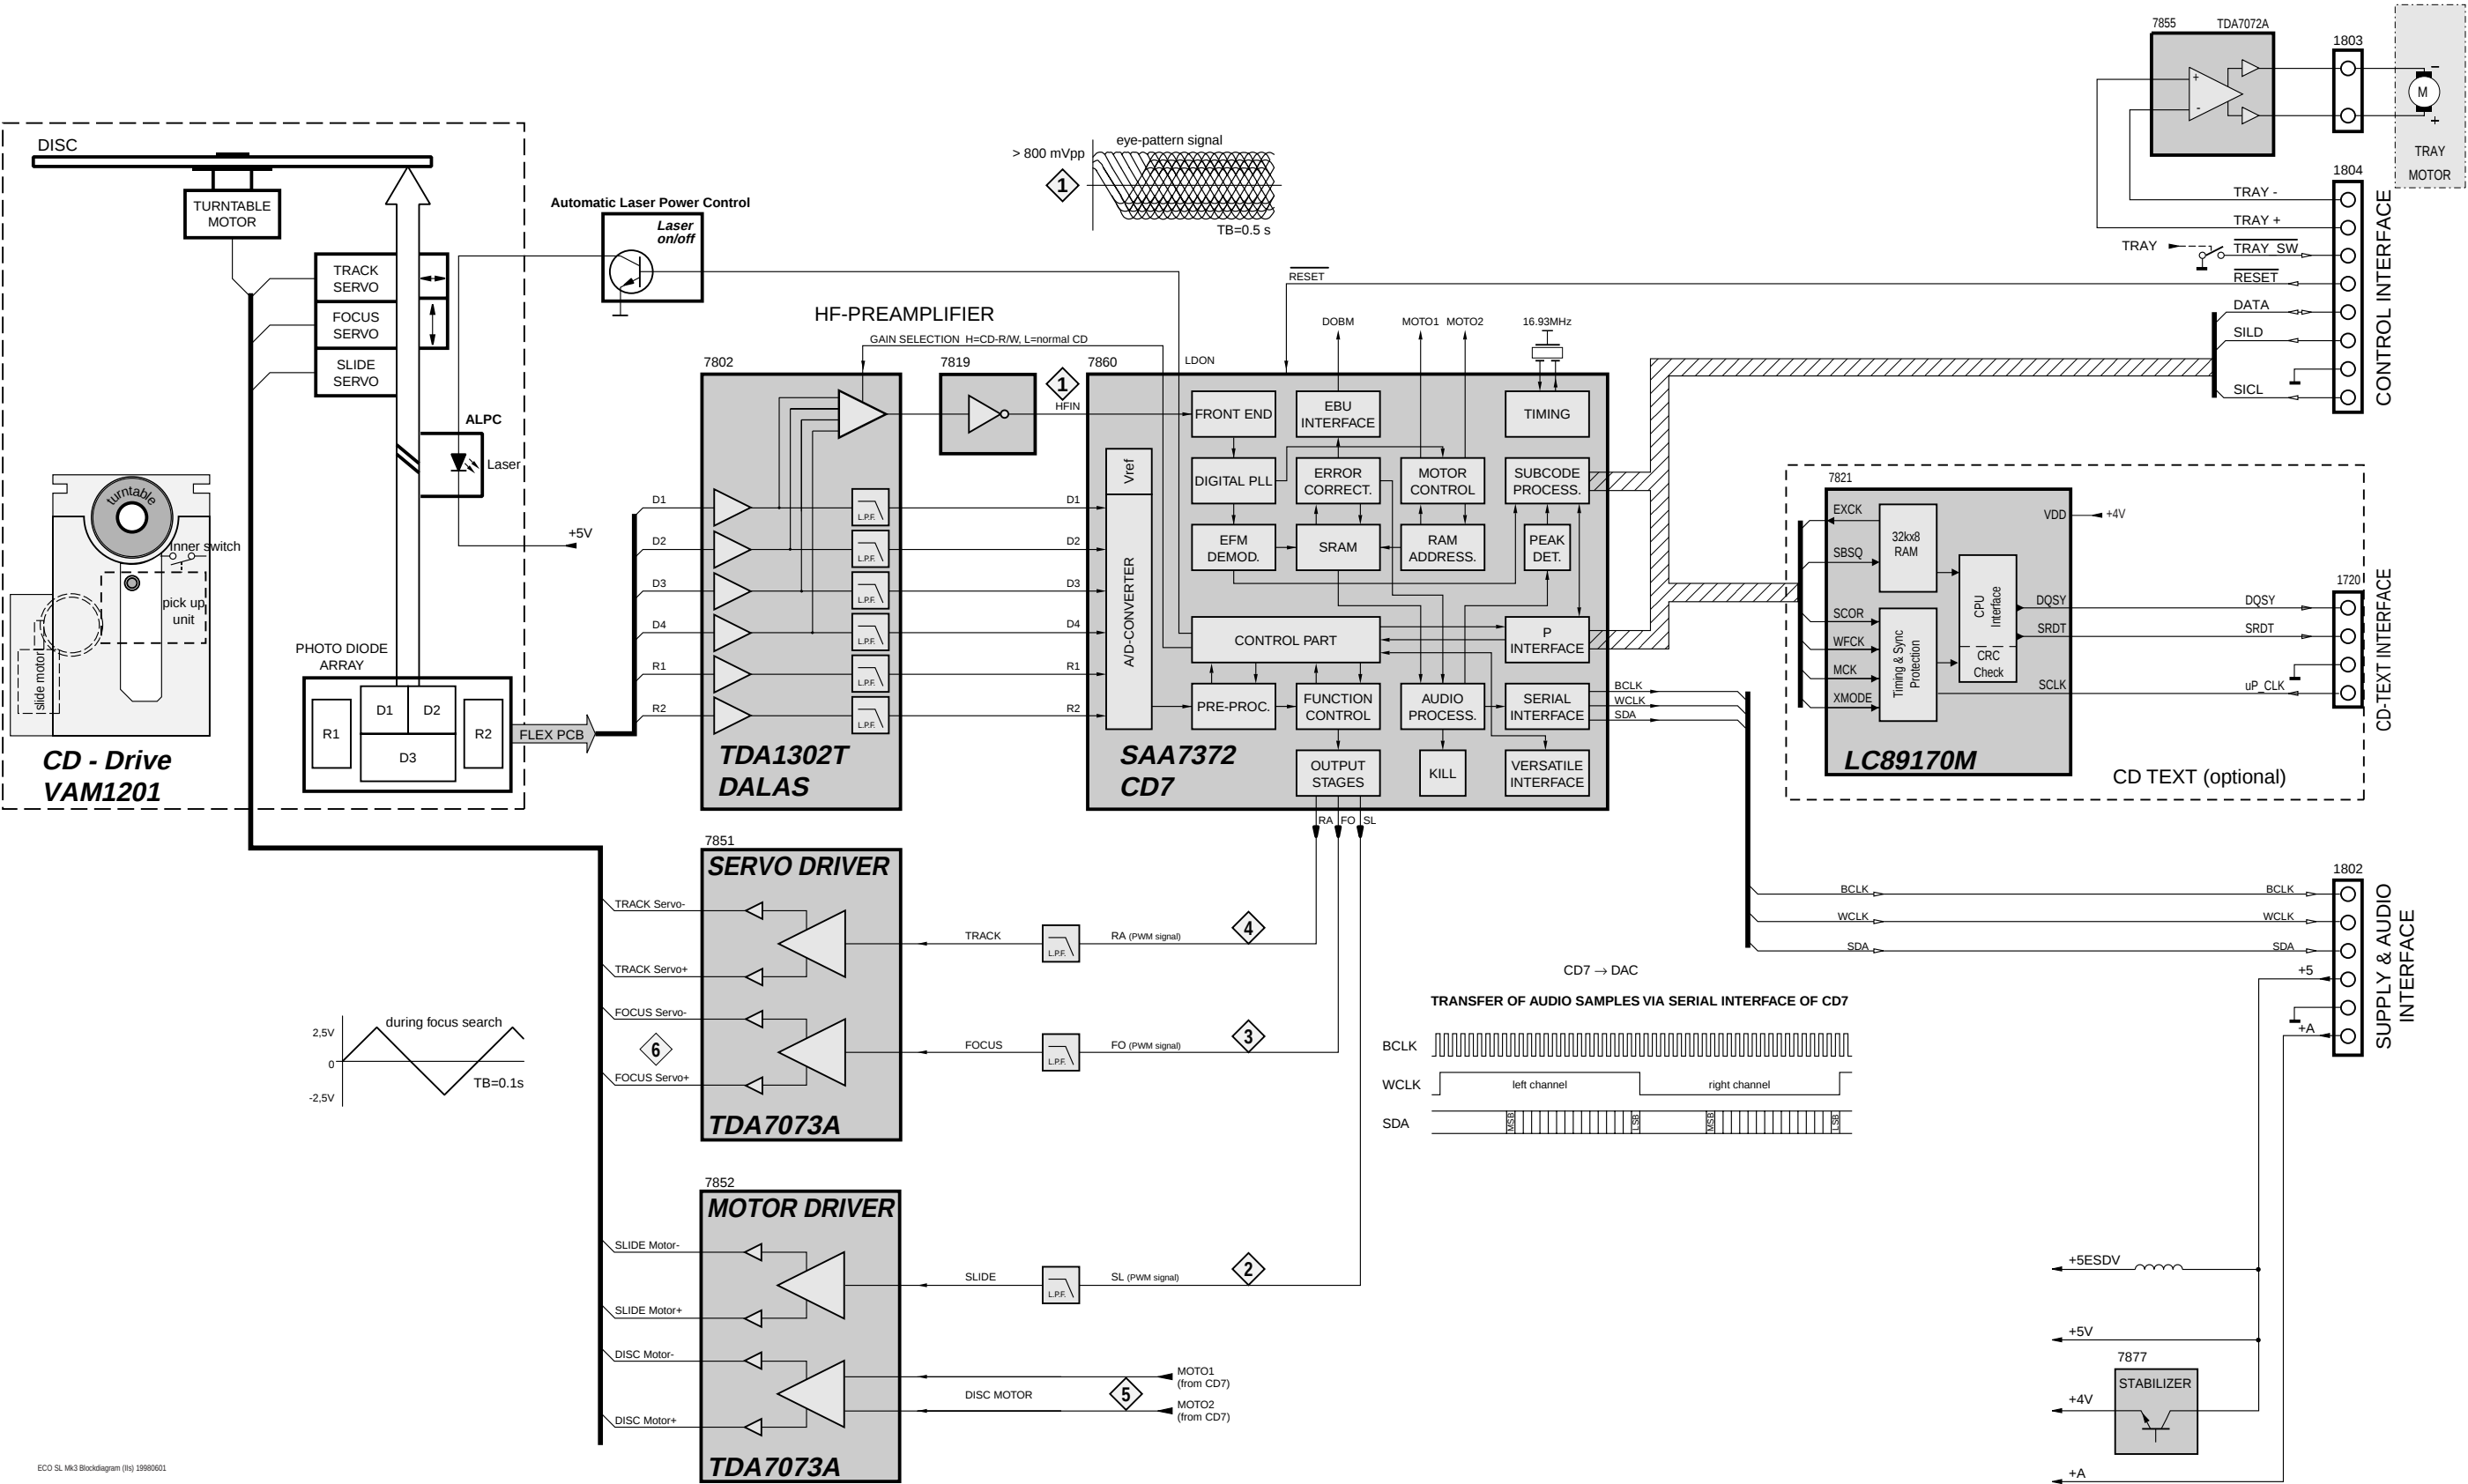

ECO SL Mk3 Blockdiagram (Rev) 19980501


## WIRING DIAGRAM

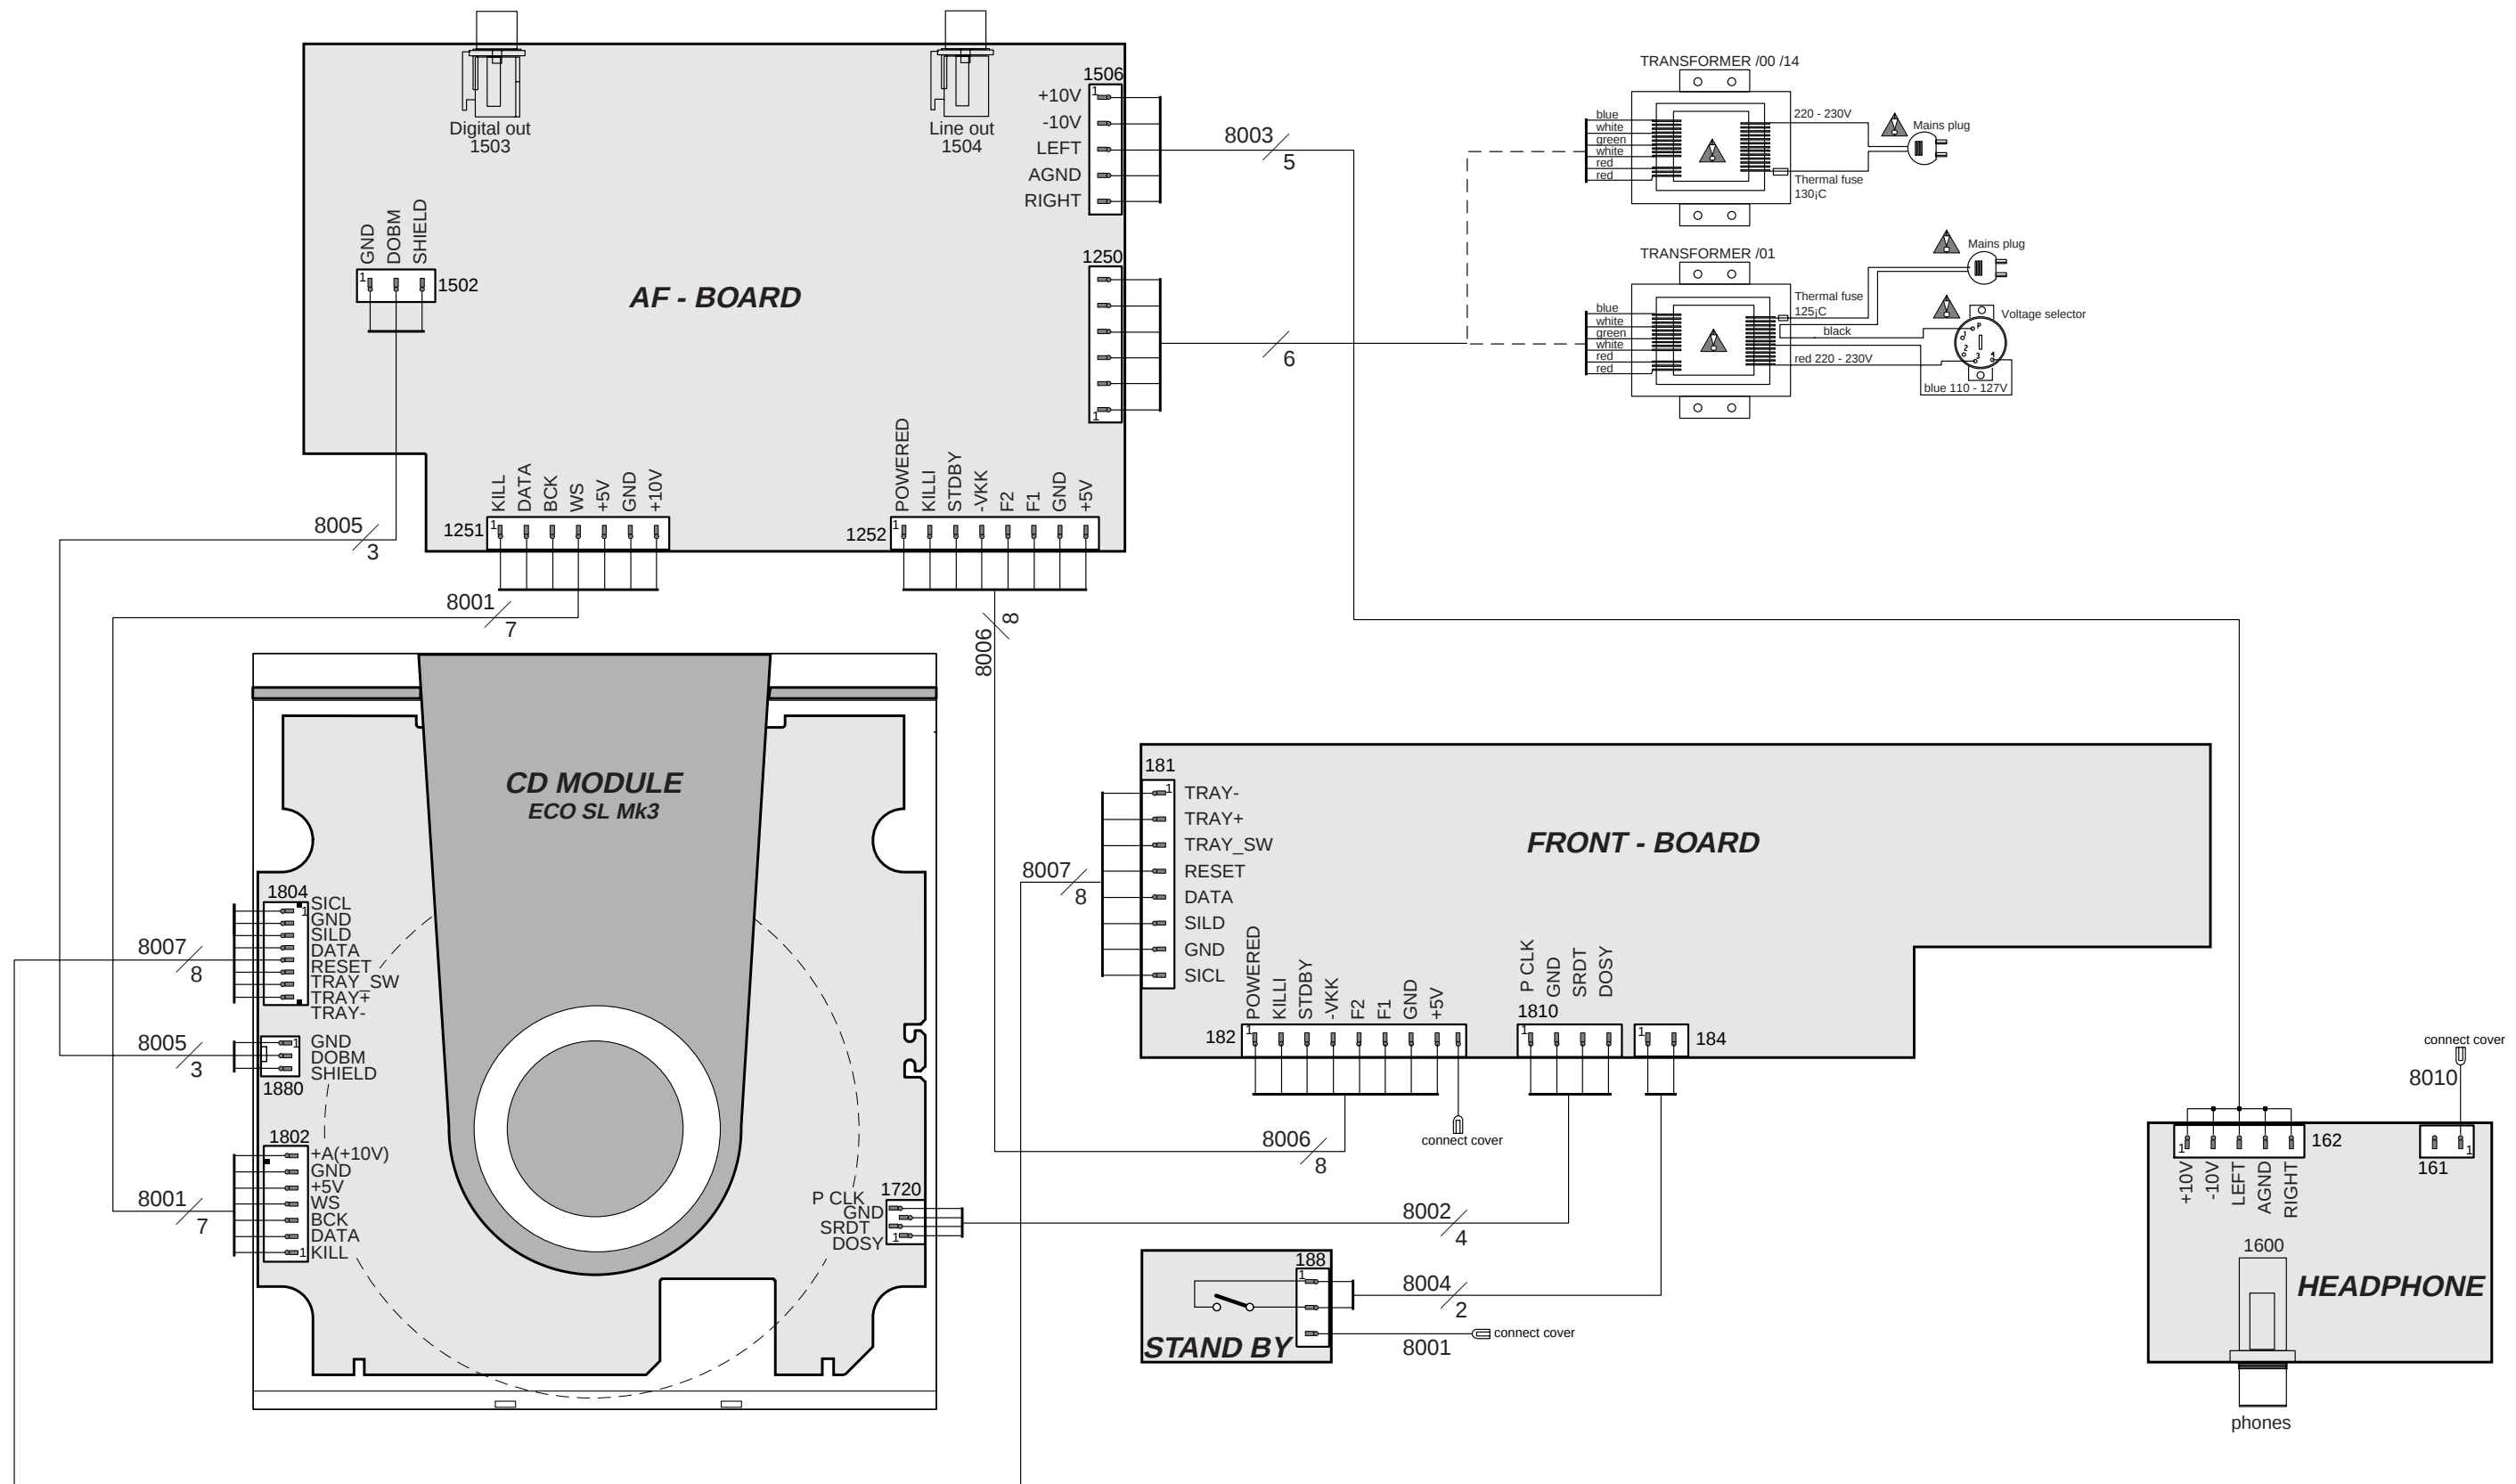




- 1250 B4  
1255 C5  
1256 D5  
2250 B6  
2251 B5  
2252 C6  
2253 C6  
2254 D7  
2255 D8  
2256 D6  
2257 D6  
2258 D7  
2259 E5  
3251 A5  
3252 A5  
3253 A5  
3254 B6  
3255 B6  
3256 E6  
3257 E7  
3258 E7  
3260 C7  
3557 B4  
6250 C6  
6251 A6  
6252 B5  
6253 C6  
6254 C6  
6255 D6  
6256 D6  
6257 D5  
6258 D5  
6259 E6  
6260 D8  
7250 A6  
7251 C8  
7252 E6  
F560 C4  
F561 C4  
F562 C4  
F563 C4  
F564 C4  
F565 C4  
F566 B5  
F567 E6  
F568 E6


|         |         |         |         |         |         |         |         |         |         |         |         |         |         |         |
|---------|---------|---------|---------|---------|---------|---------|---------|---------|---------|---------|---------|---------|---------|---------|
| 1250 A1 | 1506 B1 | 2258 A2 | 2508 B3 | 2523 A3 | 3252 A1 | 3501 A2 | 3510 B3 | 3534 A3 | 3544 B2 | 5801 B4 | 6257 A2 | 7501 A2 | 9254 A2 | 9267 B1 |
| 1251 A4 | 2250 A1 | 2259 A2 | 2511 B2 | 2524 A4 | 3253 A1 | 3502 A4 | 3511 B2 | 3535 A3 | 3545 B1 | 5803 B4 | 6258 A1 | 7504 A2 | 9256 A2 | 9269 A2 |
| 1252 A1 | 2251 A2 | 2501 A3 | 2512 B2 | 2527 B4 | 3254 A2 | 3503 A4 | 3512 B2 | 3537 B2 | 3547 B1 | 6250 A1 | 6259 A2 | 7505 B2 | 9257 A2 | 9270 A3 |
| 1255 A1 | 2252 A1 | 2502 A3 | 2513 B2 | 2540 B4 | 3255 A1 | 3504 A4 | 3513 B2 | 3538 B3 | 3548 A2 | 6251 A1 | 6260 A3 | 7507 B1 | 9258 A2 | 9272 A4 |
| 1256 A1 | 2253 A1 | 2503 A4 | 2514 B1 | 2541 A4 | 3256 A2 | 3505 A3 | 3514 B2 | 3539 B2 | 3550 A4 | 6252 A1 | 6500 A2 | 7508 B1 | 9262 A3 | 9274 B4 |
| 1502 A4 | 2254 A2 | 2504 A3 | 2515 A3 | 2543 B4 | 3257 A2 | 3506 A3 | 3515 A3 | 3540 B1 | 3552 A4 | 6253 A1 | 7250 A1 | 7509 B1 | 9263 A3 |         |
| 1503 B4 | 2255 A3 | 2505 A4 | 2516 A4 | 2544 A4 | 3258 A2 | 3507 B2 | 3527 A2 | 3541 B2 | 3553 A4 | 6254 A2 | 7251 A3 | 7510 B1 | 9264 A3 |         |
| 1504 B1 | 2256 A1 | 2506 A4 | 2521 B2 | 2545 B4 | 3260 A3 | 3508 B2 | 3532 A2 | 3542 B2 | 3556 B4 | 6255 A1 | 7252 A2 | 7511 B4 | 9265 A3 |         |
| 1505 B4 | 2257 A1 | 2507 A3 | 2522 B3 | 3251 A1 | 3500 A3 | 3509 B3 | 3533 B4 | 3543 B1 | 3557 A1 | 6256 A1 | 7500 A3 | 9253 A1 | 9266 B3 |         |

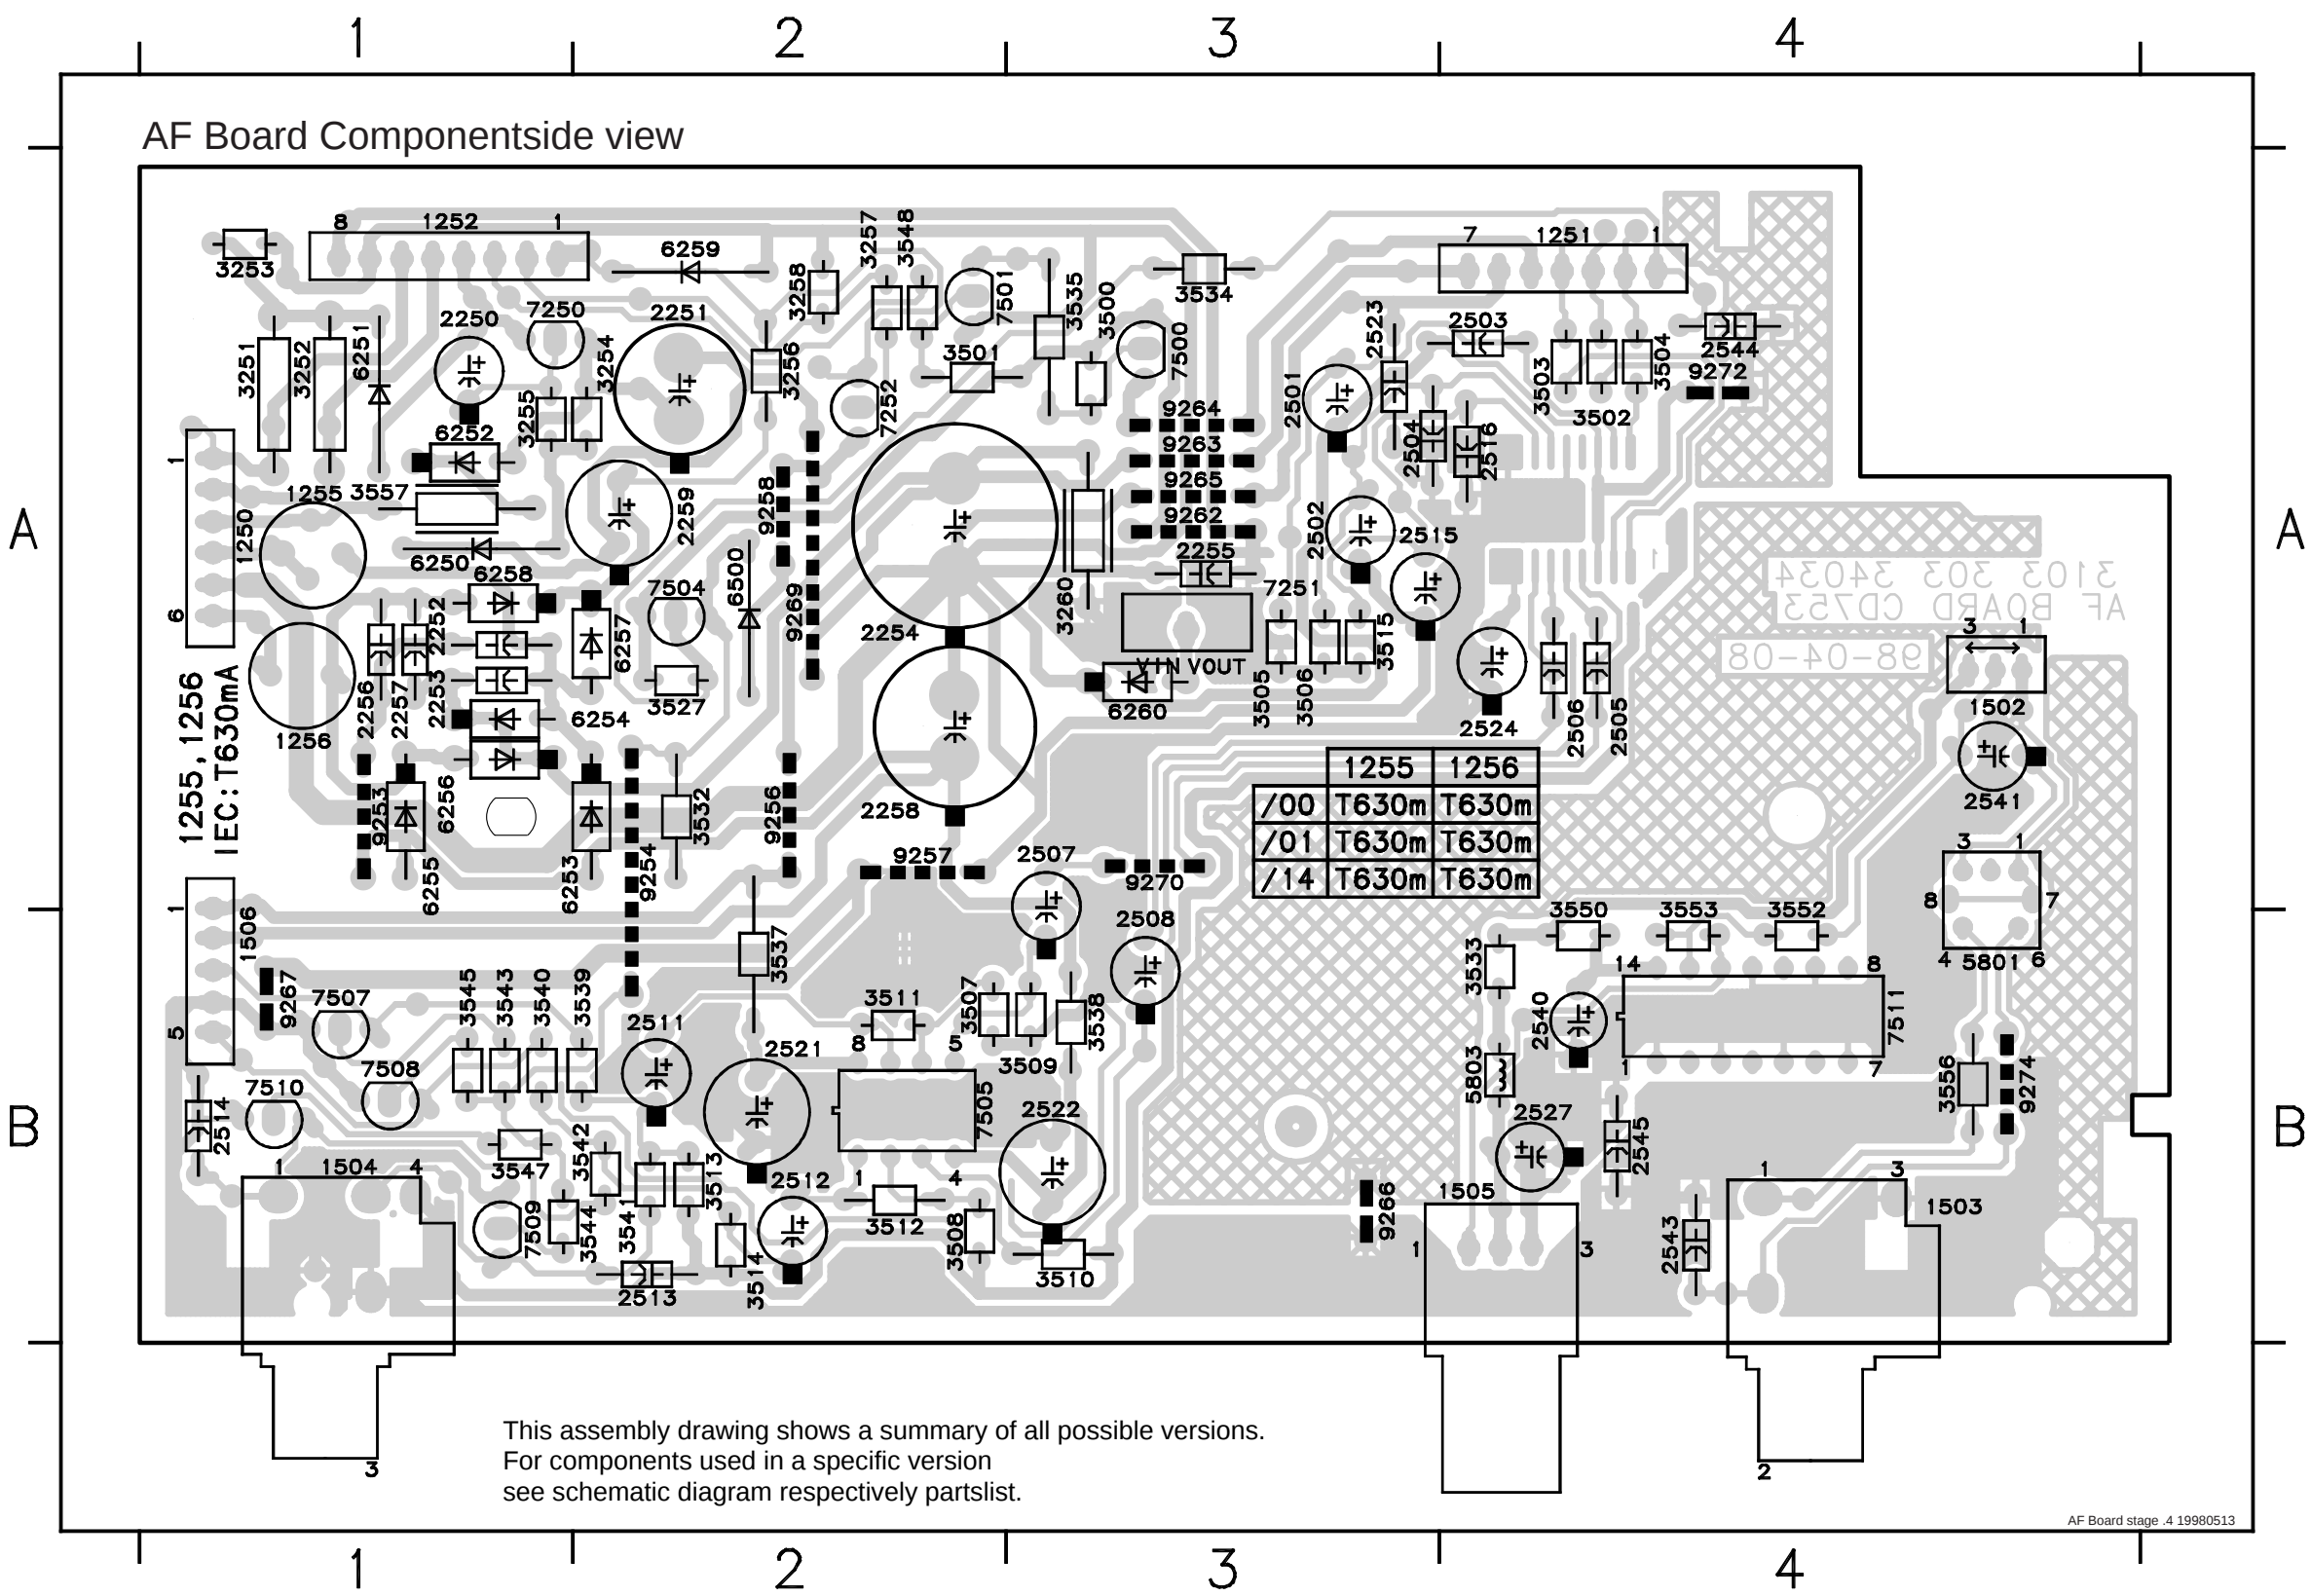

|          |          |         |          |         |         |         |         |          |          |          |          |          |          |           |           |           |         |         |          |          |         |          |          |
|----------|----------|---------|----------|---------|---------|---------|---------|----------|----------|----------|----------|----------|----------|-----------|-----------|-----------|---------|---------|----------|----------|---------|----------|----------|
| 1251 B1  | 1505 F7  | 2504 D4 | 2511 B10 | 2516 E4 | 2527 F6 | 2545 H3 | 3504 C3 | 3509 B8  | 3514 E10 | 3534 C10 | 3540 C12 | 3545 C12 | 3553 G4  | 7500 C2   | 7505-B B9 | 7511-F F4 | F514 C1 | F519 C5 | F524 E7  | F529 C14 | F541 G2 | F546 F7  | F554 G14 |
| 1252 F14 | 1506 B14 | 2505 D7 | 2512 E10 | 2521 A9 | 2540 F2 | 3500 D2 | 3505 C4 | 3510 E8  | 3515 D4  | 3535 D2  | 3541 D12 | 3547 E12 | 3556 G4  | 7501 E2   | 7507 B13  | F510 B1   | F515 C1 | F520 D5 | F525 B14 | F530 D14 | F542 G2 | F550 F14 | F555 G14 |
| 1502 G2  | 2501 C4  | 2506 D5 | 2513 D13 | 2522 F9 | 2541 G3 | 3501 D2 | 3506 D4 | 3511 C9  | 3527 C10 | 3537 A8  | 3542 E12 | 3548 E3  | 5801 G3  | 7502 C7   | 7508 C13  | F511 B1   | F516 C1 | F521 B8 | F526 B14 | F531 D14 | F543 G4 | F551 G14 | F556 G14 |
| 1503 G4  | 2502 D4  | 2507 B8 | 2514 E13 | 2523 C2 | 2543 H4 | 3502 B3 | 3507 B8 | 3512 D9  | 3532 D10 | 3538 F8  | 3543 B12 | 3550 F4  | 5803 F6  | 7504 C10  | 7509 D13  | F512 B1   | F517 D2 | F522 E7 | F527 C14 | F532 D14 | F544 G4 | F552 G14 | F557 G14 |
| 1504 D14 | 2503 C4  | 2508 E7 | 2515 E4  | 2524 D7 | 2544 B2 | 3503 B3 | 3508 E8 | 3513 B10 | 3533 F5  | 3539 B12 | 3544 D12 | 3552 F4  | 6500 F11 | 7505-A E9 | 7510 E13  | F513 B1   | F518 C4 | F523 B8 | F528 C14 | F540 G2  | F545 F7 | F553 G14 |          |

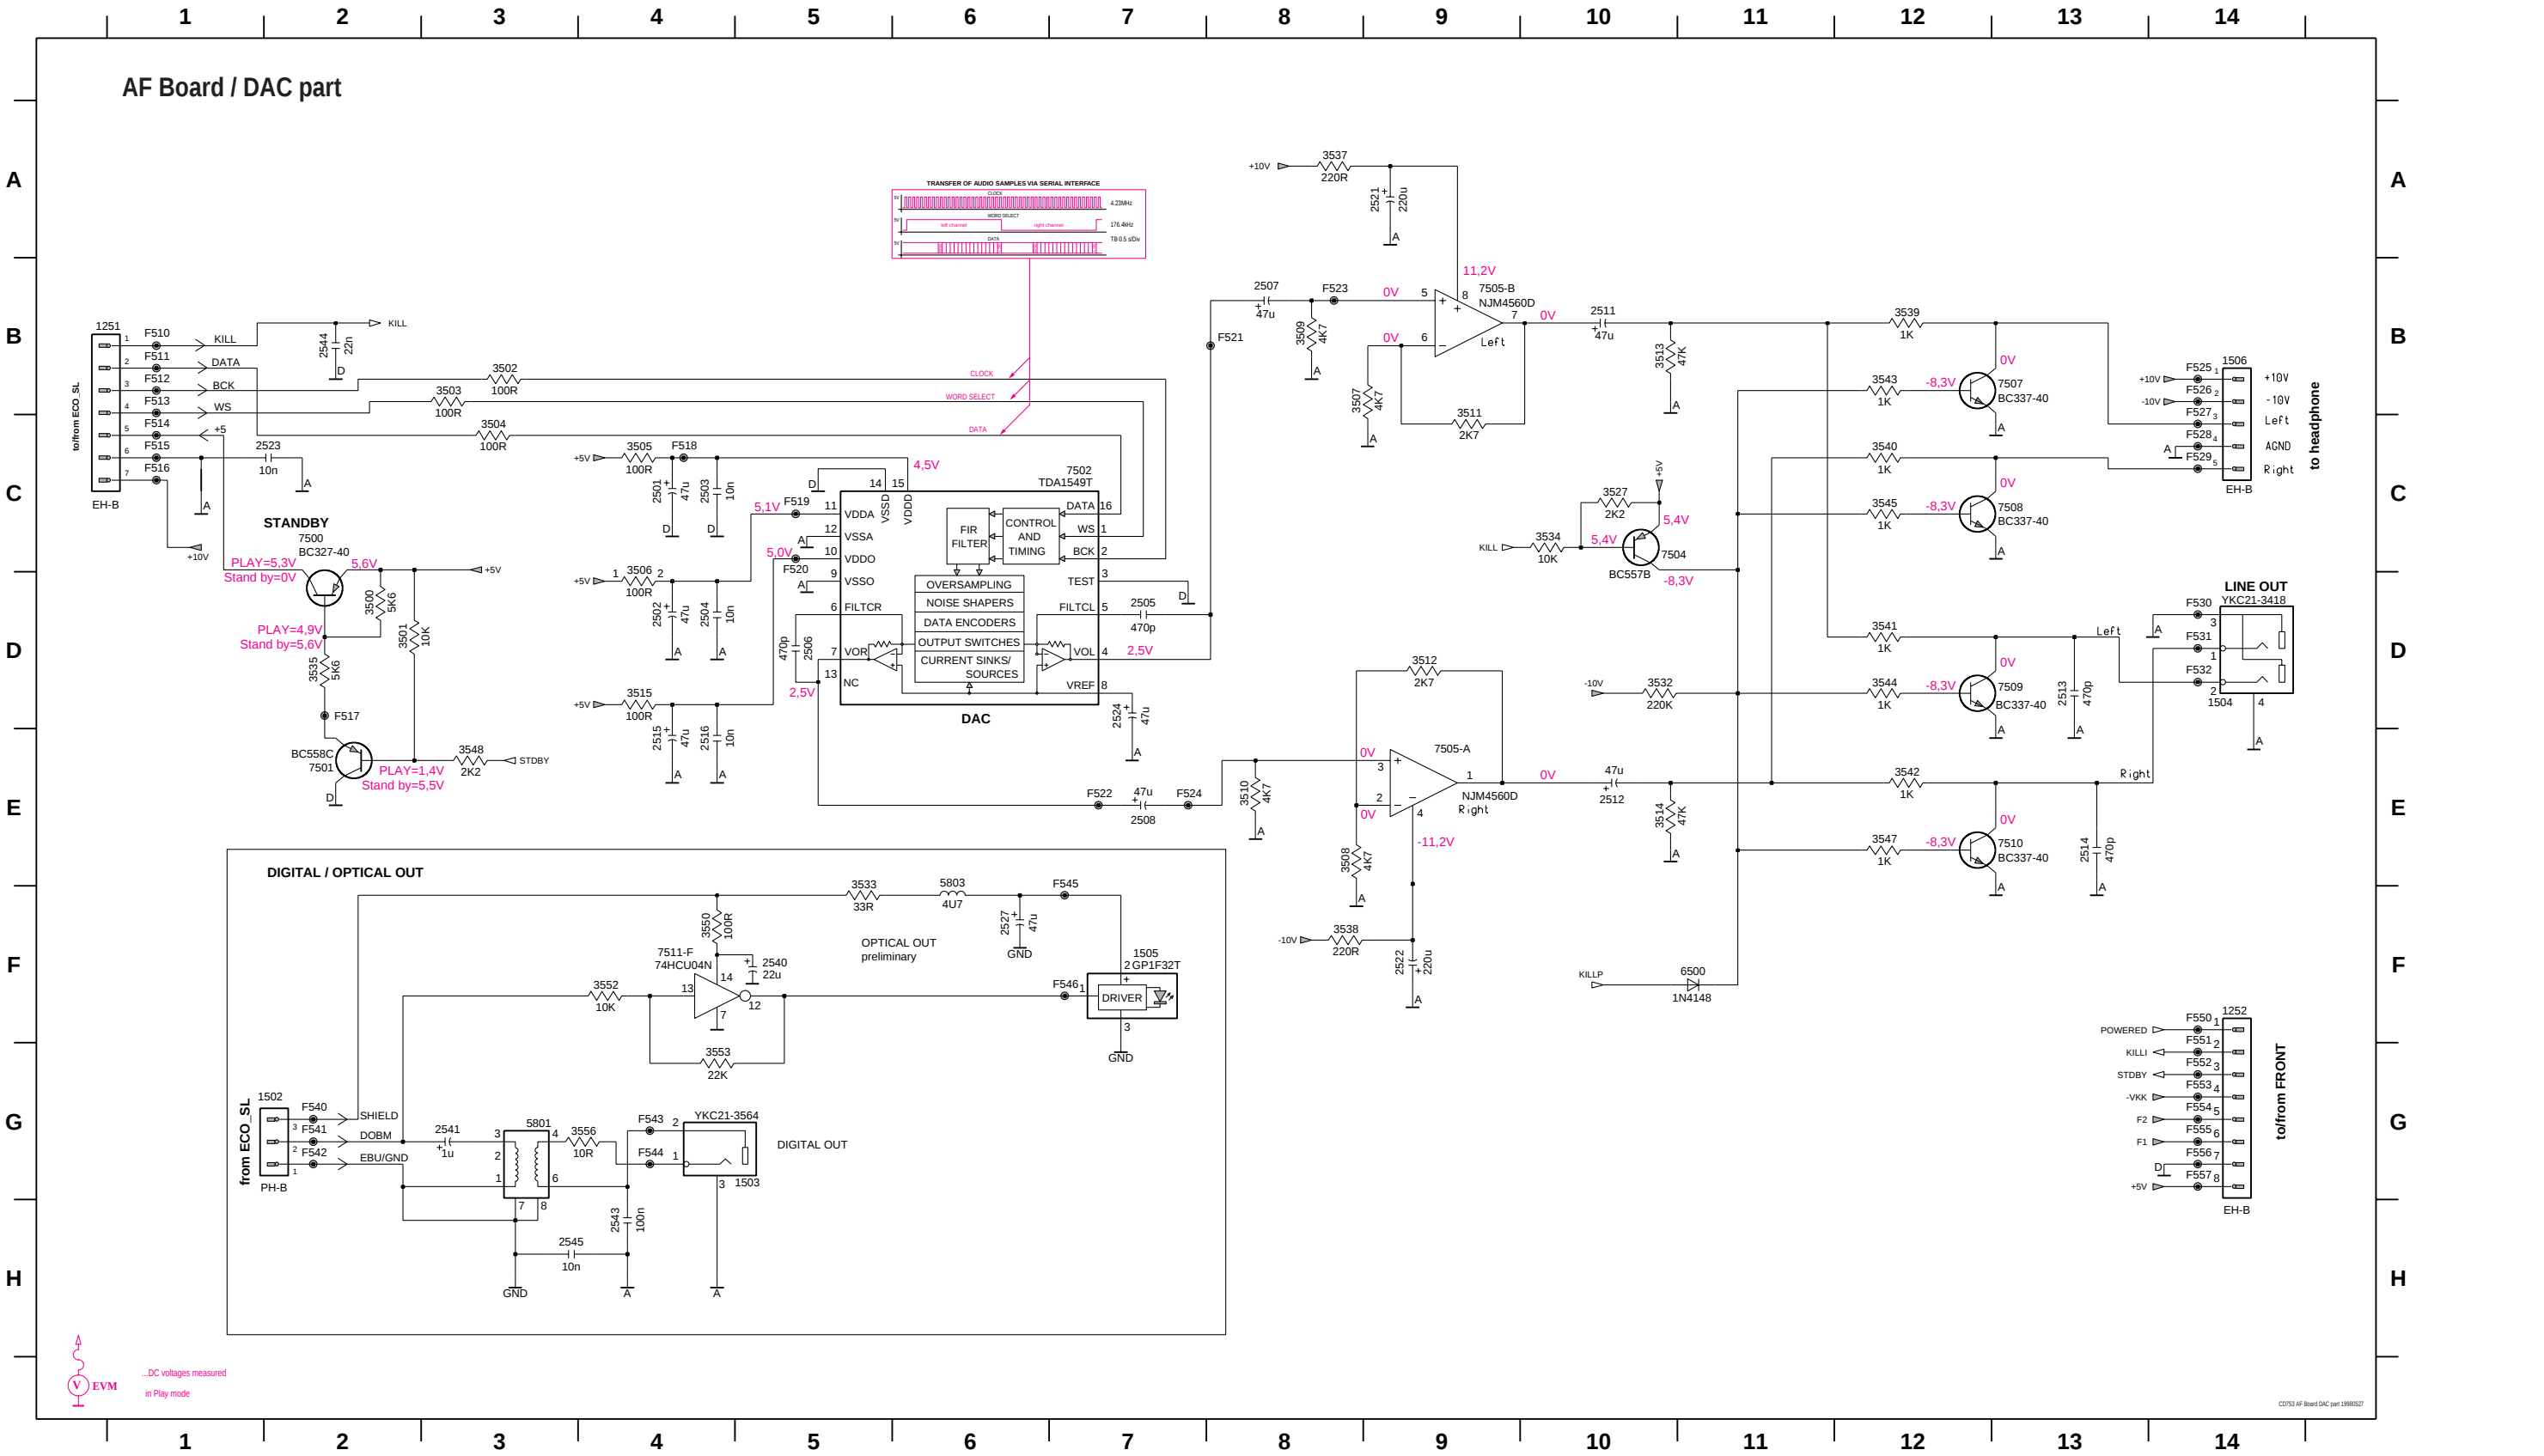





|         |         |         |         |         |         |         |         |         |         |         |         |         |         |         |
|---------|---------|---------|---------|---------|---------|---------|---------|---------|---------|---------|---------|---------|---------|---------|
| 1250 A1 | 1506 B1 | 2258 A2 | 2508 B3 | 2523 A3 | 3252 A1 | 3501 A2 | 3510 B3 | 3534 A3 | 3544 B2 | 5801 B4 | 6257 A2 | 7501 A2 | 9254 A2 | 9267 B1 |
| 1251 A4 | 2250 A1 | 2259 A2 | 2511 B2 | 2524 A4 | 3253 A1 | 3502 A4 | 3511 B2 | 3535 A3 | 3545 B1 | 5803 B4 | 6258 A1 | 7504 A2 | 9256 A2 | 9269 A2 |
| 1252 A1 | 2251 A2 | 2501 A3 | 2512 B2 | 2527 B4 | 3254 A2 | 3503 A4 | 3512 B2 | 3537 B2 | 3547 B1 | 6250 A1 | 6259 A2 | 7505 B2 | 9257 A2 | 9270 A3 |
| 1255 A1 | 2252 A1 | 2502 A3 | 2513 B2 | 2540 B4 | 3255 A1 | 3504 A4 | 3513 B2 | 3538 B3 | 3548 A2 | 6251 A1 | 6260 A3 | 7507 B1 | 9258 A2 | 9272 A4 |
| 1256 A1 | 2253 A1 | 2503 A4 | 2514 B1 | 2541 A4 | 3256 A2 | 3505 A3 | 3514 B2 | 3539 B2 | 3550 A4 | 6252 A1 | 6500 A2 | 7508 B1 | 9262 A3 | 9274 B4 |
| 1502 A4 | 2254 A2 | 2504 A3 | 2515 A3 | 2543 B4 | 3257 A2 | 3506 A3 | 3515 A3 | 3540 B1 | 3552 A4 | 6253 A1 | 7250 A1 | 7509 B1 | 9263 A3 |         |
| 1503 B4 | 2255 A3 | 2505 A4 | 2516 A4 | 2544 A4 | 3258 A2 | 3507 B2 | 3527 A2 | 3541 B2 | 3553 A4 | 6254 A2 | 7251 A3 | 7510 B1 | 9264 A3 |         |
| 1504 B1 | 2256 A1 | 2506 A4 | 2521 B2 | 2545 B4 | 3260 A3 | 3508 B2 | 3532 A2 | 3542 B2 | 3556 B4 | 6255 A1 | 7252 A2 | 7511 B4 | 9265 A3 |         |
| 1505 B4 | 2257 A1 | 2507 A3 | 2522 B3 | 3251 A1 | 3500 A3 | 3509 B3 | 3533 B4 | 3543 B1 | 3557 A1 | 6256 A1 | 7500 A3 | 9253 A1 | 9266 B3 |         |

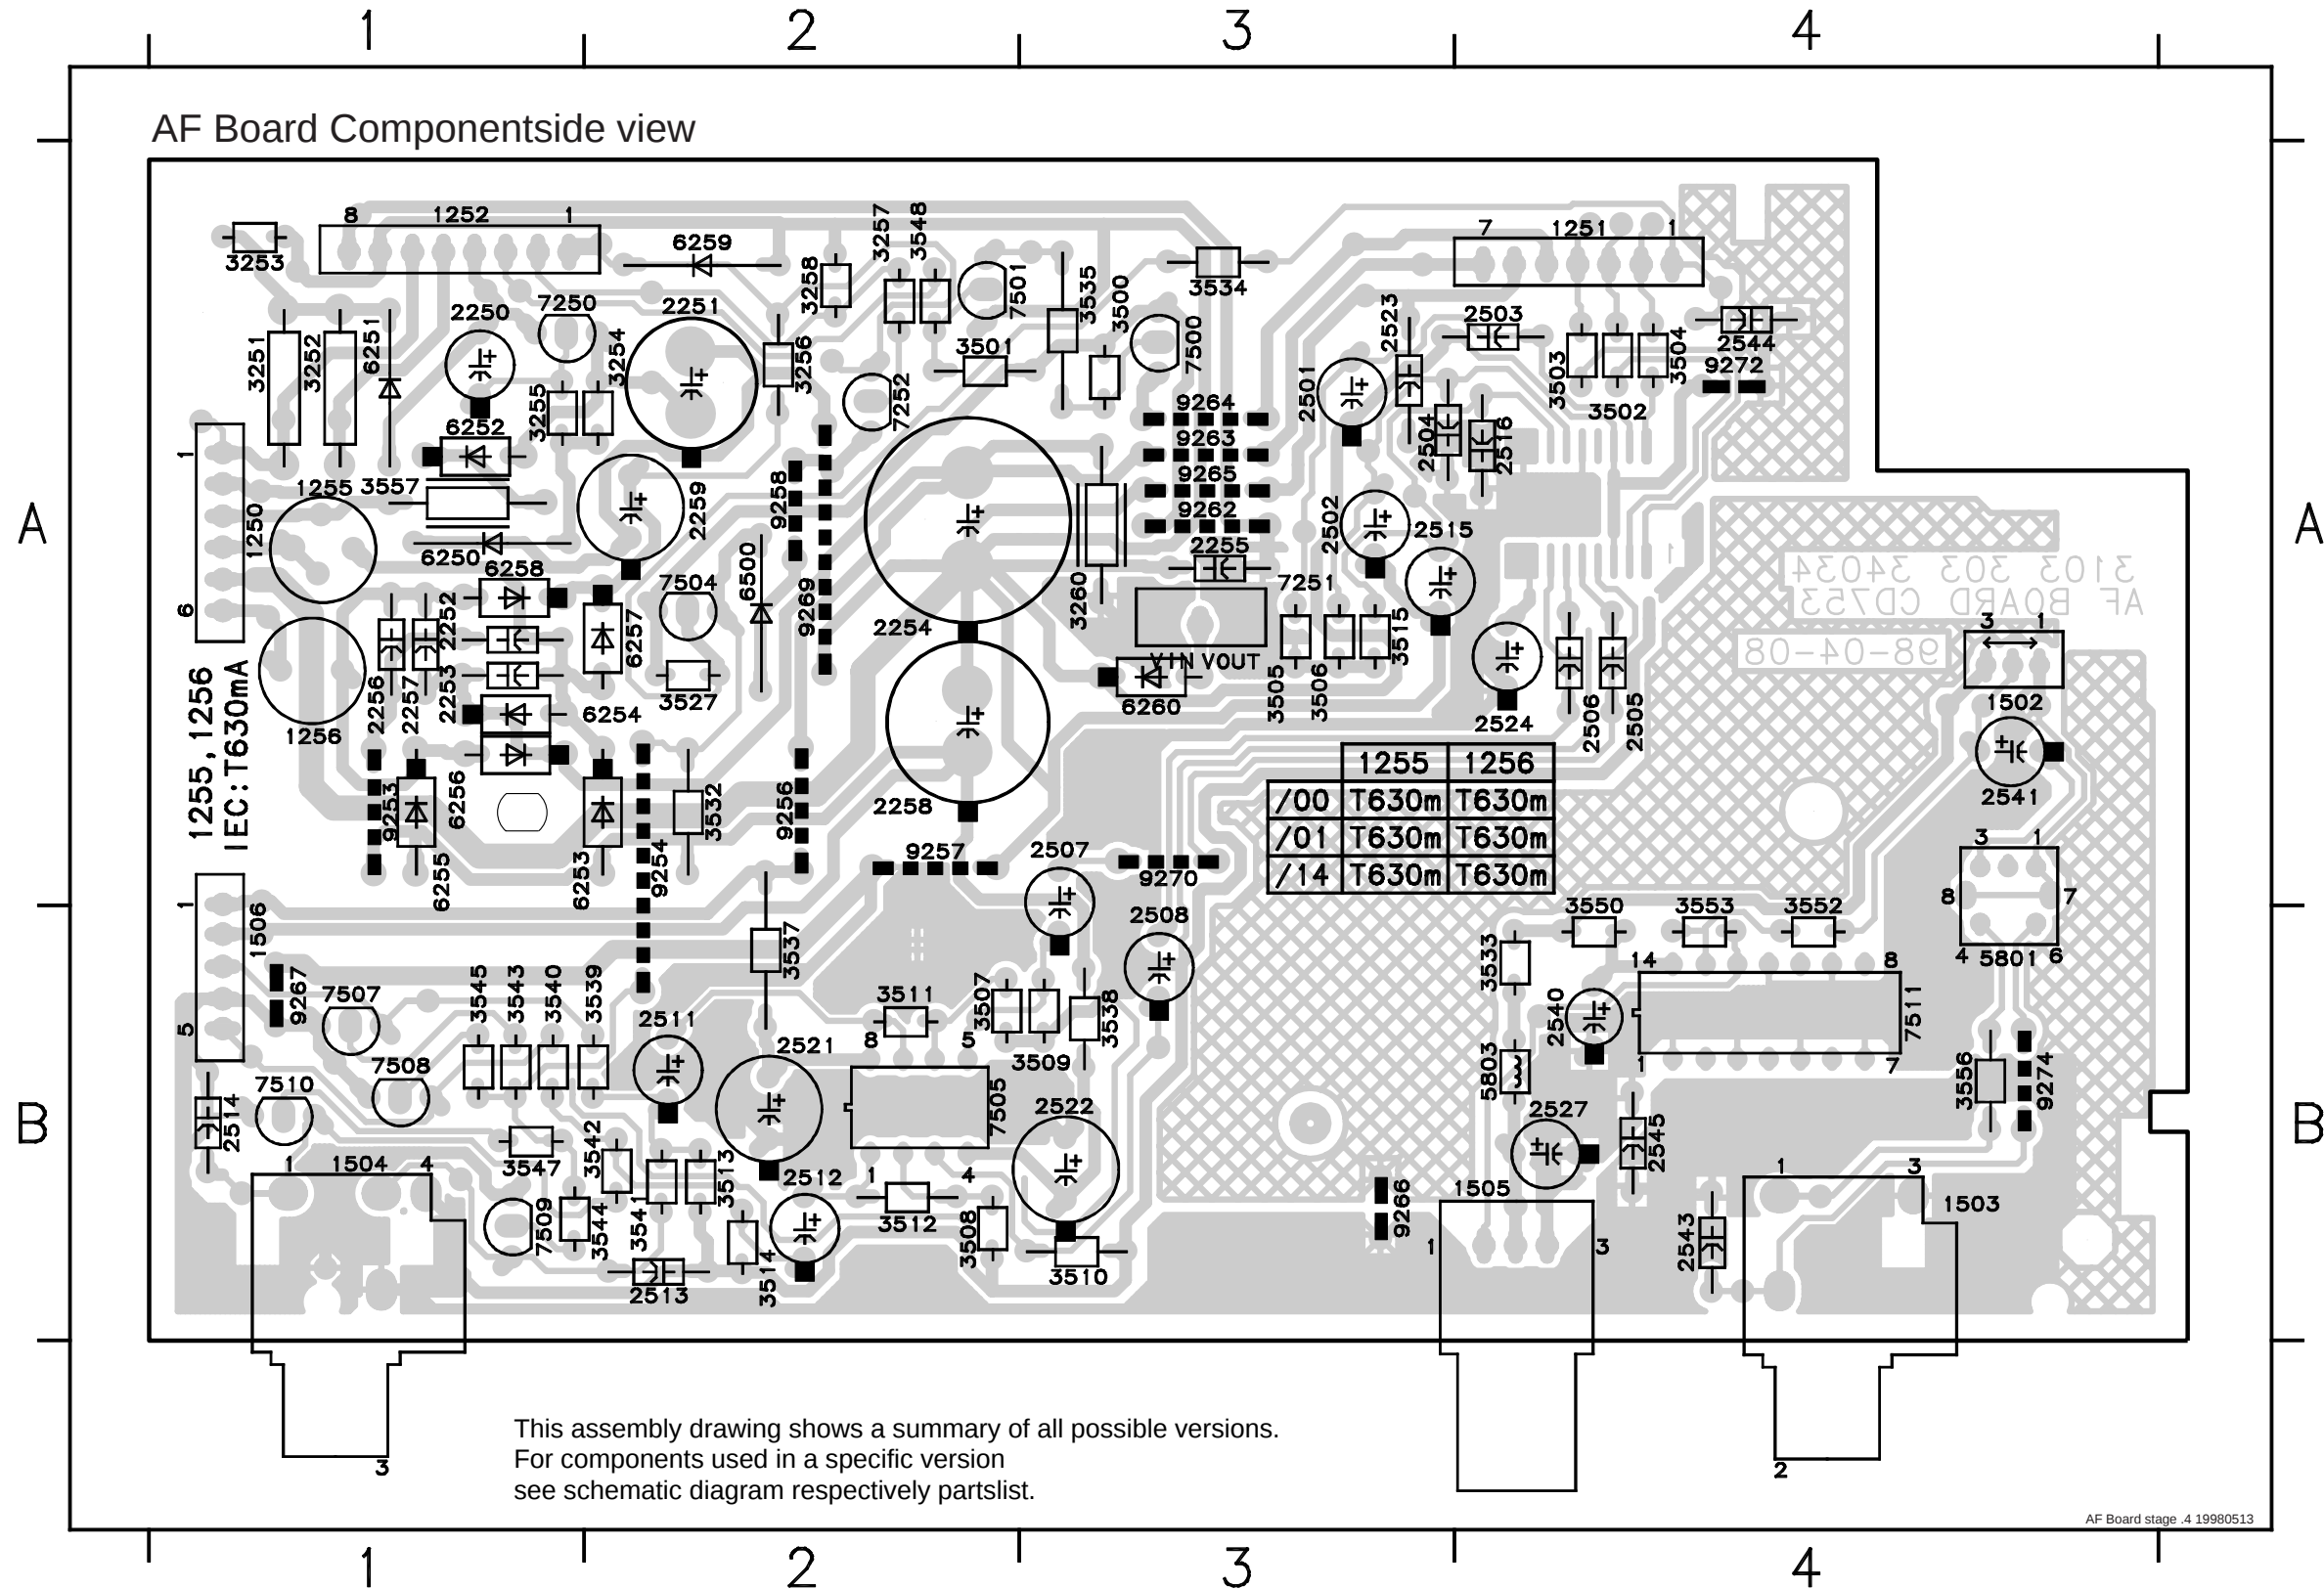




181 F1  
182 H1  
184 E1  
1800 C10  
1810 I6  
1820 F1  
1821 F11  
1822 F11  
1823 F12  
1824 F12  
1825 F12  
1826 F12  
1827 F13  
1828 G11  
1829 G12  
1830 F13  
1831 G12  
1832 G13  
1833 H11  
1834 H12  
1844 G7  
2800 B5  
2801 B11  
2803 I7  
2807 H8  
2808 G2  
2810 I8  
2811 G8  
2812 E3  
2813 H8  
2814 E3  
2815 D10  
3804 H7  
3805 H7  
3806 H6  
3807 H8  
3808 H8  
3809 I7  
3810 E10  
3811 E11  
3812 E10  
3813 F11  
3814 F10  
3815 F10  
3816 F10  
3817 F11  
3818 G11  
3819 G11  
3820 H11  
3821 G10  
3822 E5  
3823 F6  
3829 E2  
3830 E2  
3832 F3  
3833 F3  
3834 F3  
3835 F3  
3836 E2  
3837 G9  
3838 H2  
3841 H2  
3842 H2  
3844 G3  
3845 G3  
3846 G3  
3847 D10  
3848 B4  
3849 B11  
5802 E3  
6801 D5  
6802 D6  
6820 I2  
7800 D6  
7810 H9  
7811 H8  
9800 G10

|         |         |         |         |         |         |         |         |         |         |         |         |         |         |         |         |
|---------|---------|---------|---------|---------|---------|---------|---------|---------|---------|---------|---------|---------|---------|---------|---------|
| 7-6     |         |         |         | 7-6     |         |         |         | 7-6     |         |         |         | 7-6     |         |         |         |
| 181 B1  | 1821 A5 | 1827 A7 | 1833 A4 | 2807 B2 | 2814 B3 | 3808 B2 | 3814 B5 | 3820 B4 | 3832 B1 | 3838 B1 | 3847 B2 | 6820 B2 | 9803 A5 | 9809 A7 | 9815 B3 |
| 182 B2  | 1822 B5 | 1828 B7 | 1834 B4 | 2808 B1 | 2815 A3 | 3809 B5 | 3815 B5 | 3821 A4 | 3833 B1 | 3841 B1 | 3848 A1 | 7810 B3 | 9804 A4 | 9810 B2 | 9816 B4 |
| 184 B3  | 1823 A5 | 1829 B7 | 1844 B4 | 2810 B5 | 3804 B4 | 3810 A5 | 3816 B5 | 3822 B3 | 3834 B1 | 3842 B2 | 3849 A3 | 7811 B5 | 9805 A5 | 9811 B2 | 9817 B4 |
| 1800 A3 | 1824 B5 | 1830 A8 | 2800 A1 | 2811 B4 | 3805 B4 | 3811 A5 | 3817 B5 | 3823 B2 | 3835 B1 | 3844 B1 | 5802 B3 | 9800 B4 | 9806 A6 | 9812 B2 | 9818 B5 |
| 1810 B1 | 1825 A6 | 1831 B8 | 2801 A4 | 2812 B3 | 3806 B3 | 3812 A5 | 3818 B5 | 3829 B4 | 3836 B2 | 3845 B1 | 6801 A2 | 9801 A3 | 9807 A6 | 9813 B2 | 9819 B1 |
| 1820 A1 | 1826 B6 | 1832 A4 | 2803 B1 | 2813 B4 | 3807 B4 | 3813 B5 | 3819 B5 | 3830 B2 | 3837 B4 | 3846 B1 | 6802 A2 | 9802 A3 | 9808 A7 | 9814 B4 | 9820 A1 |
|         |         |         |         |         |         |         |         |         |         |         |         |         |         |         | 7800 B3 |

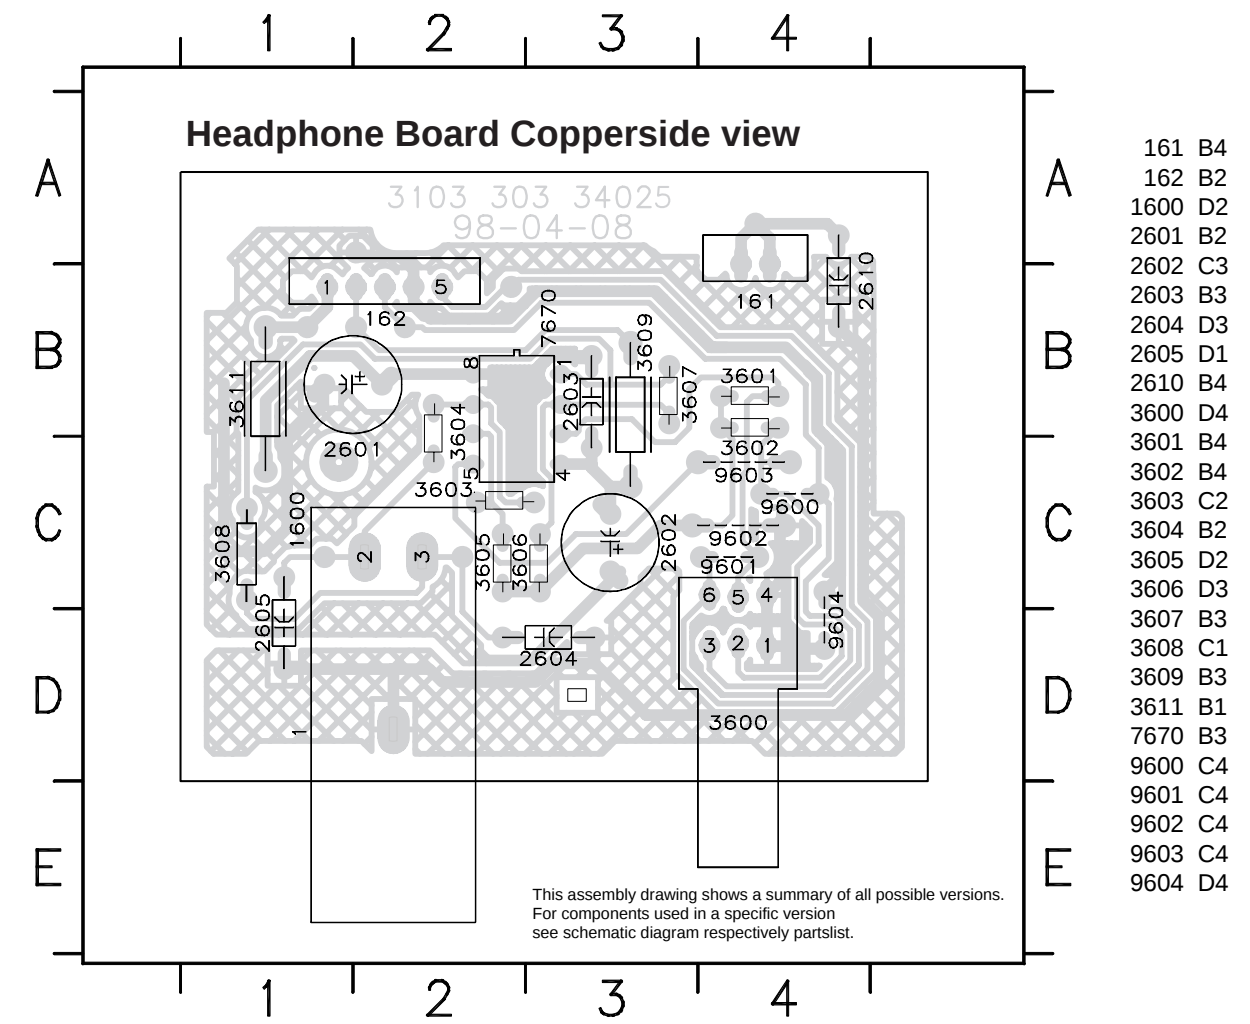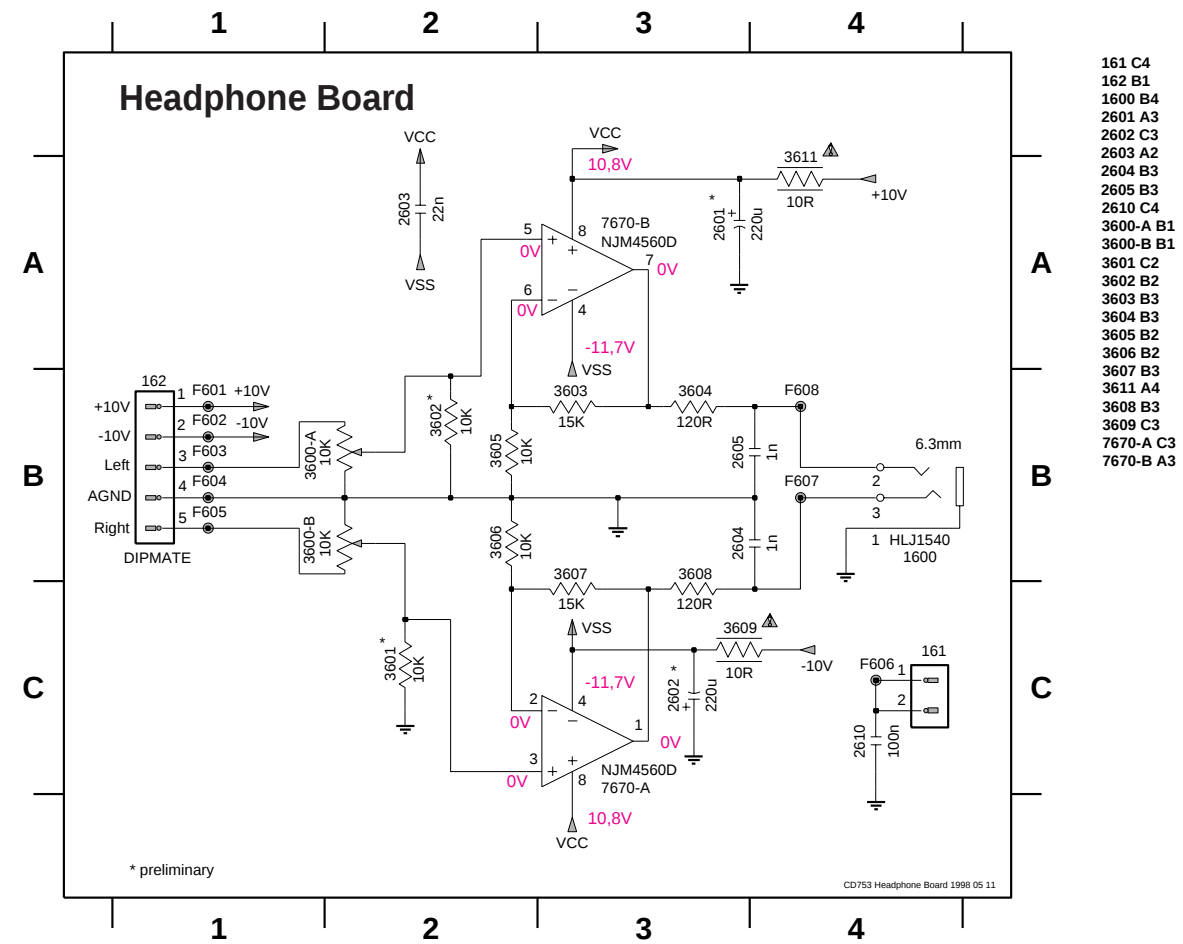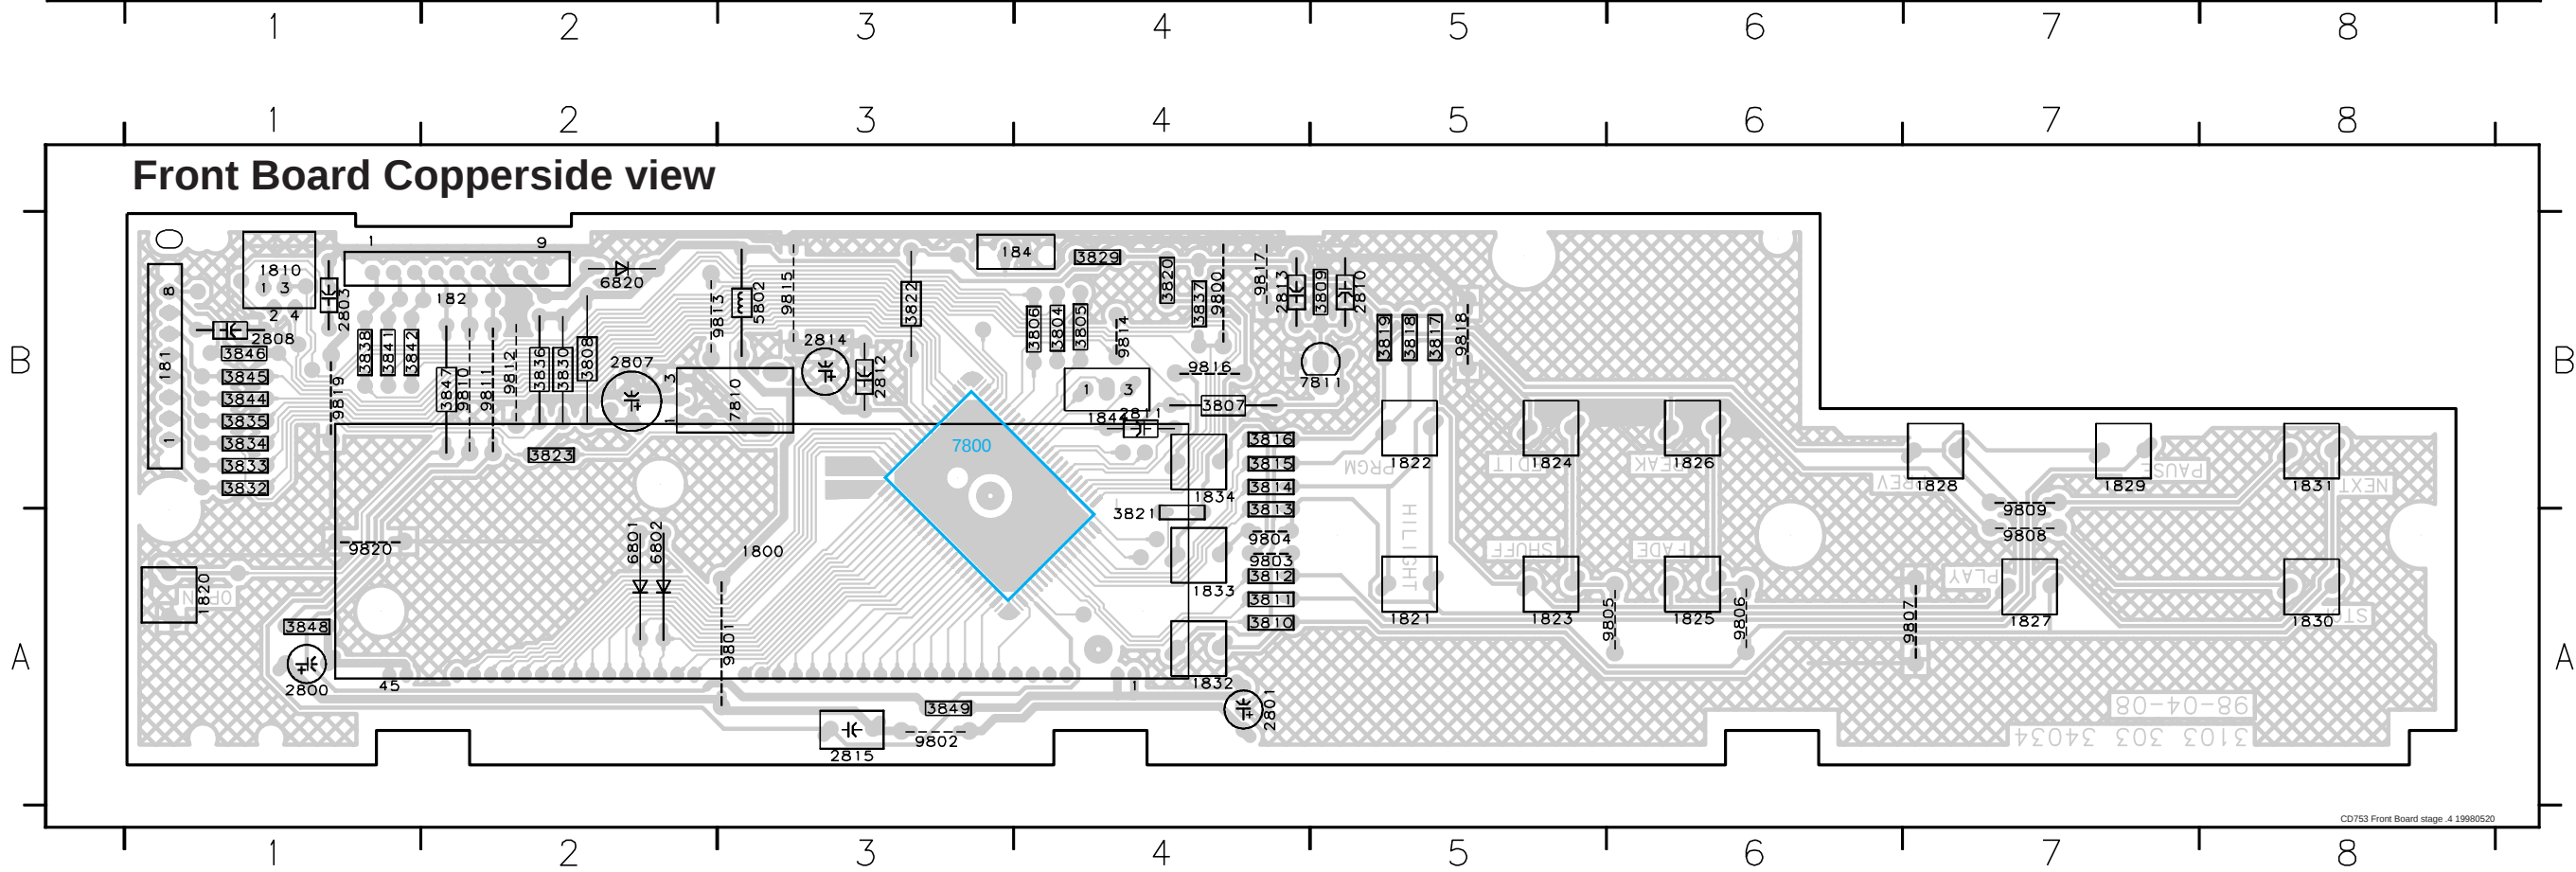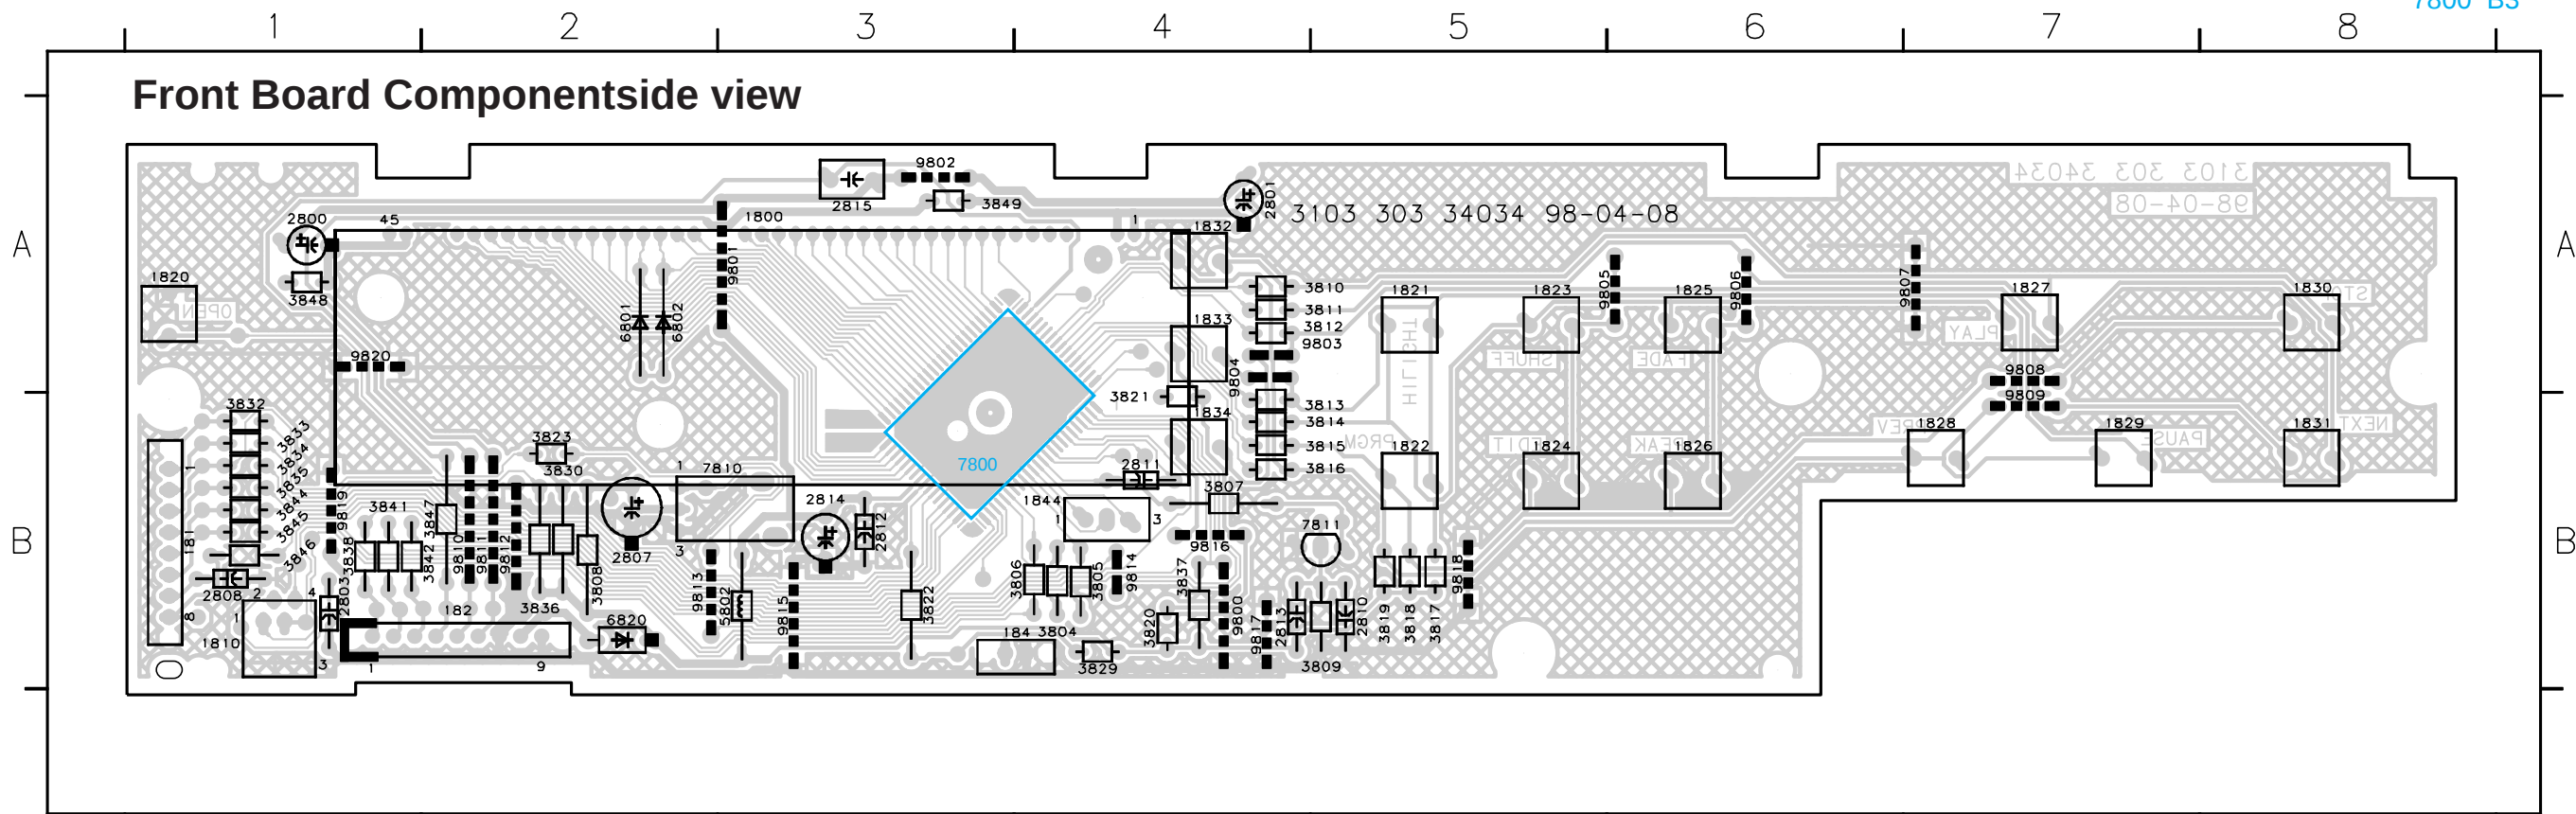


## CD-BOARD (ECO-SL Mk3)

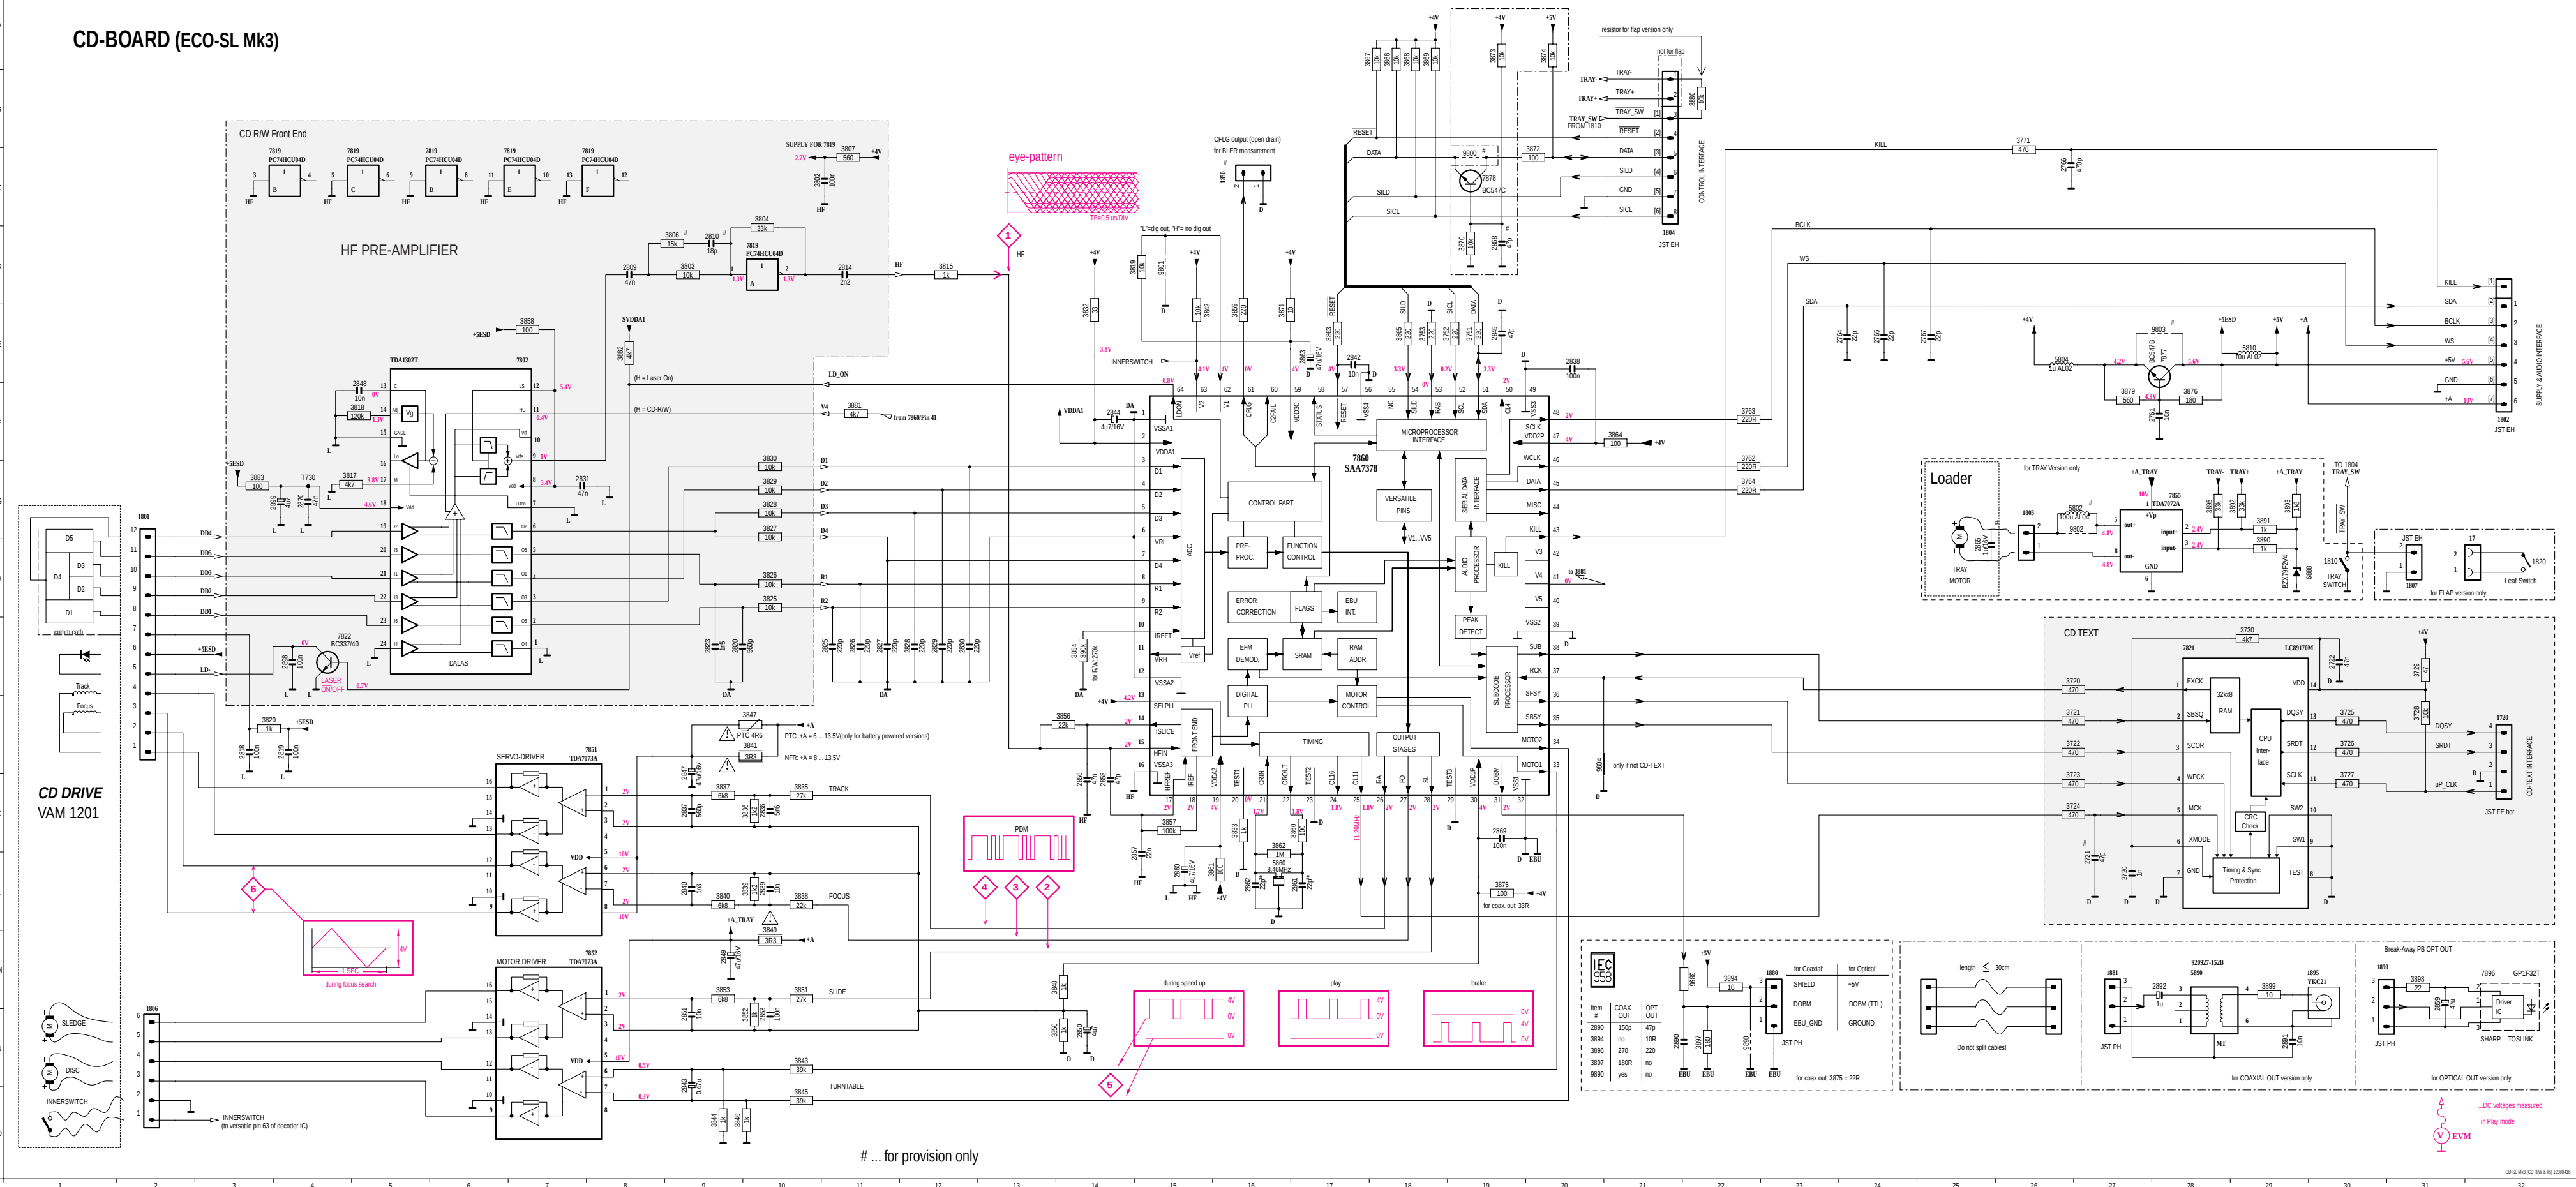


# ... for provision only

|          |          |
|----------|----------|
| 1720 J32 | 3836 K10 |
| 1801 G2  | 3837 K9  |
| 1802 F32 | 3838 L10 |
| 1803 G26 | 3839 L10 |
| 1804 D21 | 3840 L9  |
| 1806 M2  | 3841 J10 |
| 1807 H31 | 3842 E15 |
| 1810 H30 | 3843 N10 |
| 1820 H32 | 3844 O9  |
| 1850 C16 | 3845 O10 |
| 1880 M23 | 3846 O9  |
| 1881 M27 | 3847 J10 |
| 1890 M30 | 3848 M14 |
| 1895 M29 | 3849 M10 |
| 2720 L27 | 3850 N14 |
| 2721 L27 | 3851 M10 |
| 2722 I30 | 3852 N10 |
| 2761 F28 | 3853 M9  |
| 2764 E24 | 3854 I14 |
| 2765 E24 | 3856 J14 |
| 2766 C22 | 3857 K15 |
| 2767 E25 | 3858 E7  |
| 2802 C10 | 3859 E16 |
| 2809 D8  | 3860 K17 |
| 2810 D9  | 3861 L16 |
| 2814 D11 | 3862 K16 |
| 2818 J3  | 3863 E17 |
| 2819 J4  | 3864 F21 |
| 2820 I9  | 3865 E18 |
| 2823 I9  | 3866 A18 |
| 2825 I11 | 3867 A18 |
| 2826 I11 | 3868 A18 |
| 2827 I11 | 3869 A18 |
| 2828 I12 | 3870 D19 |
| 2829 I12 | 3871 E16 |
| 2830 I12 | 3872 C20 |
| 2831 G7  | 3873 A19 |
| 2836 K10 | 3874 A20 |
| 2837 K9  | 3875 L19 |
| 2838 E20 | 3876 F28 |
| 2839 L10 | 3879 F27 |
| 2840 L9  | 3880 B22 |
| 2842 E17 | 3881 F11 |
| 2843 N9  | 3882 E8  |
| 2844 F14 | 3883 C3  |
| 2845 E19 | 3890 H29 |
| 2847 J9  | 3891 G29 |
| 2848 F5  | 3892 G29 |
| 2849 M9  | 3893 G29 |
| 2850 N14 | 3894 M22 |
| 2851 N9  | 3895 G28 |
| 2853 N10 | 3896 M22 |
| 2856 K14 | 3897 N22 |
| 2857 L15 | 3898 M31 |
| 2858 K14 | 3899 M29 |
| 2859 M31 | 5902 G27 |
| 2860 L15 | 5904 E26 |
| 2861 L17 | 5810 E29 |
| 2862 L16 | 5860 L16 |
| 2863 E17 | 5890 M28 |
| 2865 H26 | 6888 H30 |
| 2868 D19 | 7802 E7  |
| 2869 K19 | 7819 C3  |
| 2870 G4  | 7819 C4  |
| 2890 N21 | 7819 C5  |
| 2891 N29 | 7819 C6  |
| 2892 M28 | 7819 C7  |
| 2898 I4  | 7819 D10 |
| 2899 G4  | 7821 I28 |
| 3720 I27 | 7822 I5  |
| 3721 J27 | 7851 J8  |
| 3722 J27 | 7852 M8  |
| 3723 K27 | 7855 G28 |
| 3724 K27 | 7860 F15 |
| 3725 J30 | 7877 E28 |
| 3726 J30 | 7878 C19 |
| 3727 K30 | 7896 M32 |
| 3728 J31 | 9800 C19 |
| 3729 J31 | 9801 D15 |
| 3730 I29 | 9802 G27 |
| 3751 E19 | 9803 E28 |
| 3752 E19 | 9804 J20 |
| 3753 E18 | 9890 N22 |
| 3762 F22 |          |
| 3763 F22 |          |
| 3771 C26 |          |
| 3803 D9  |          |
| 3804 C10 |          |
| 3806 D9  |          |
| 3807 C11 |          |
| 3815 D12 |          |
| 3817 G4  |          |
| 3818 F5  |          |
| 3819 D15 |          |
| 3820 J3  |          |
| 3825 H10 |          |
| 3826 H10 |          |
| 3827 G10 |          |
| 3828 G10 |          |
| 3829 G10 |          |
| 3830 G10 |          |
| 3832 E14 |          |
| 3833 K10 |          |
| 3835 K10 |          |

CS 53 MK3 (ECO-SL Mk3) (Rev. 1.0)

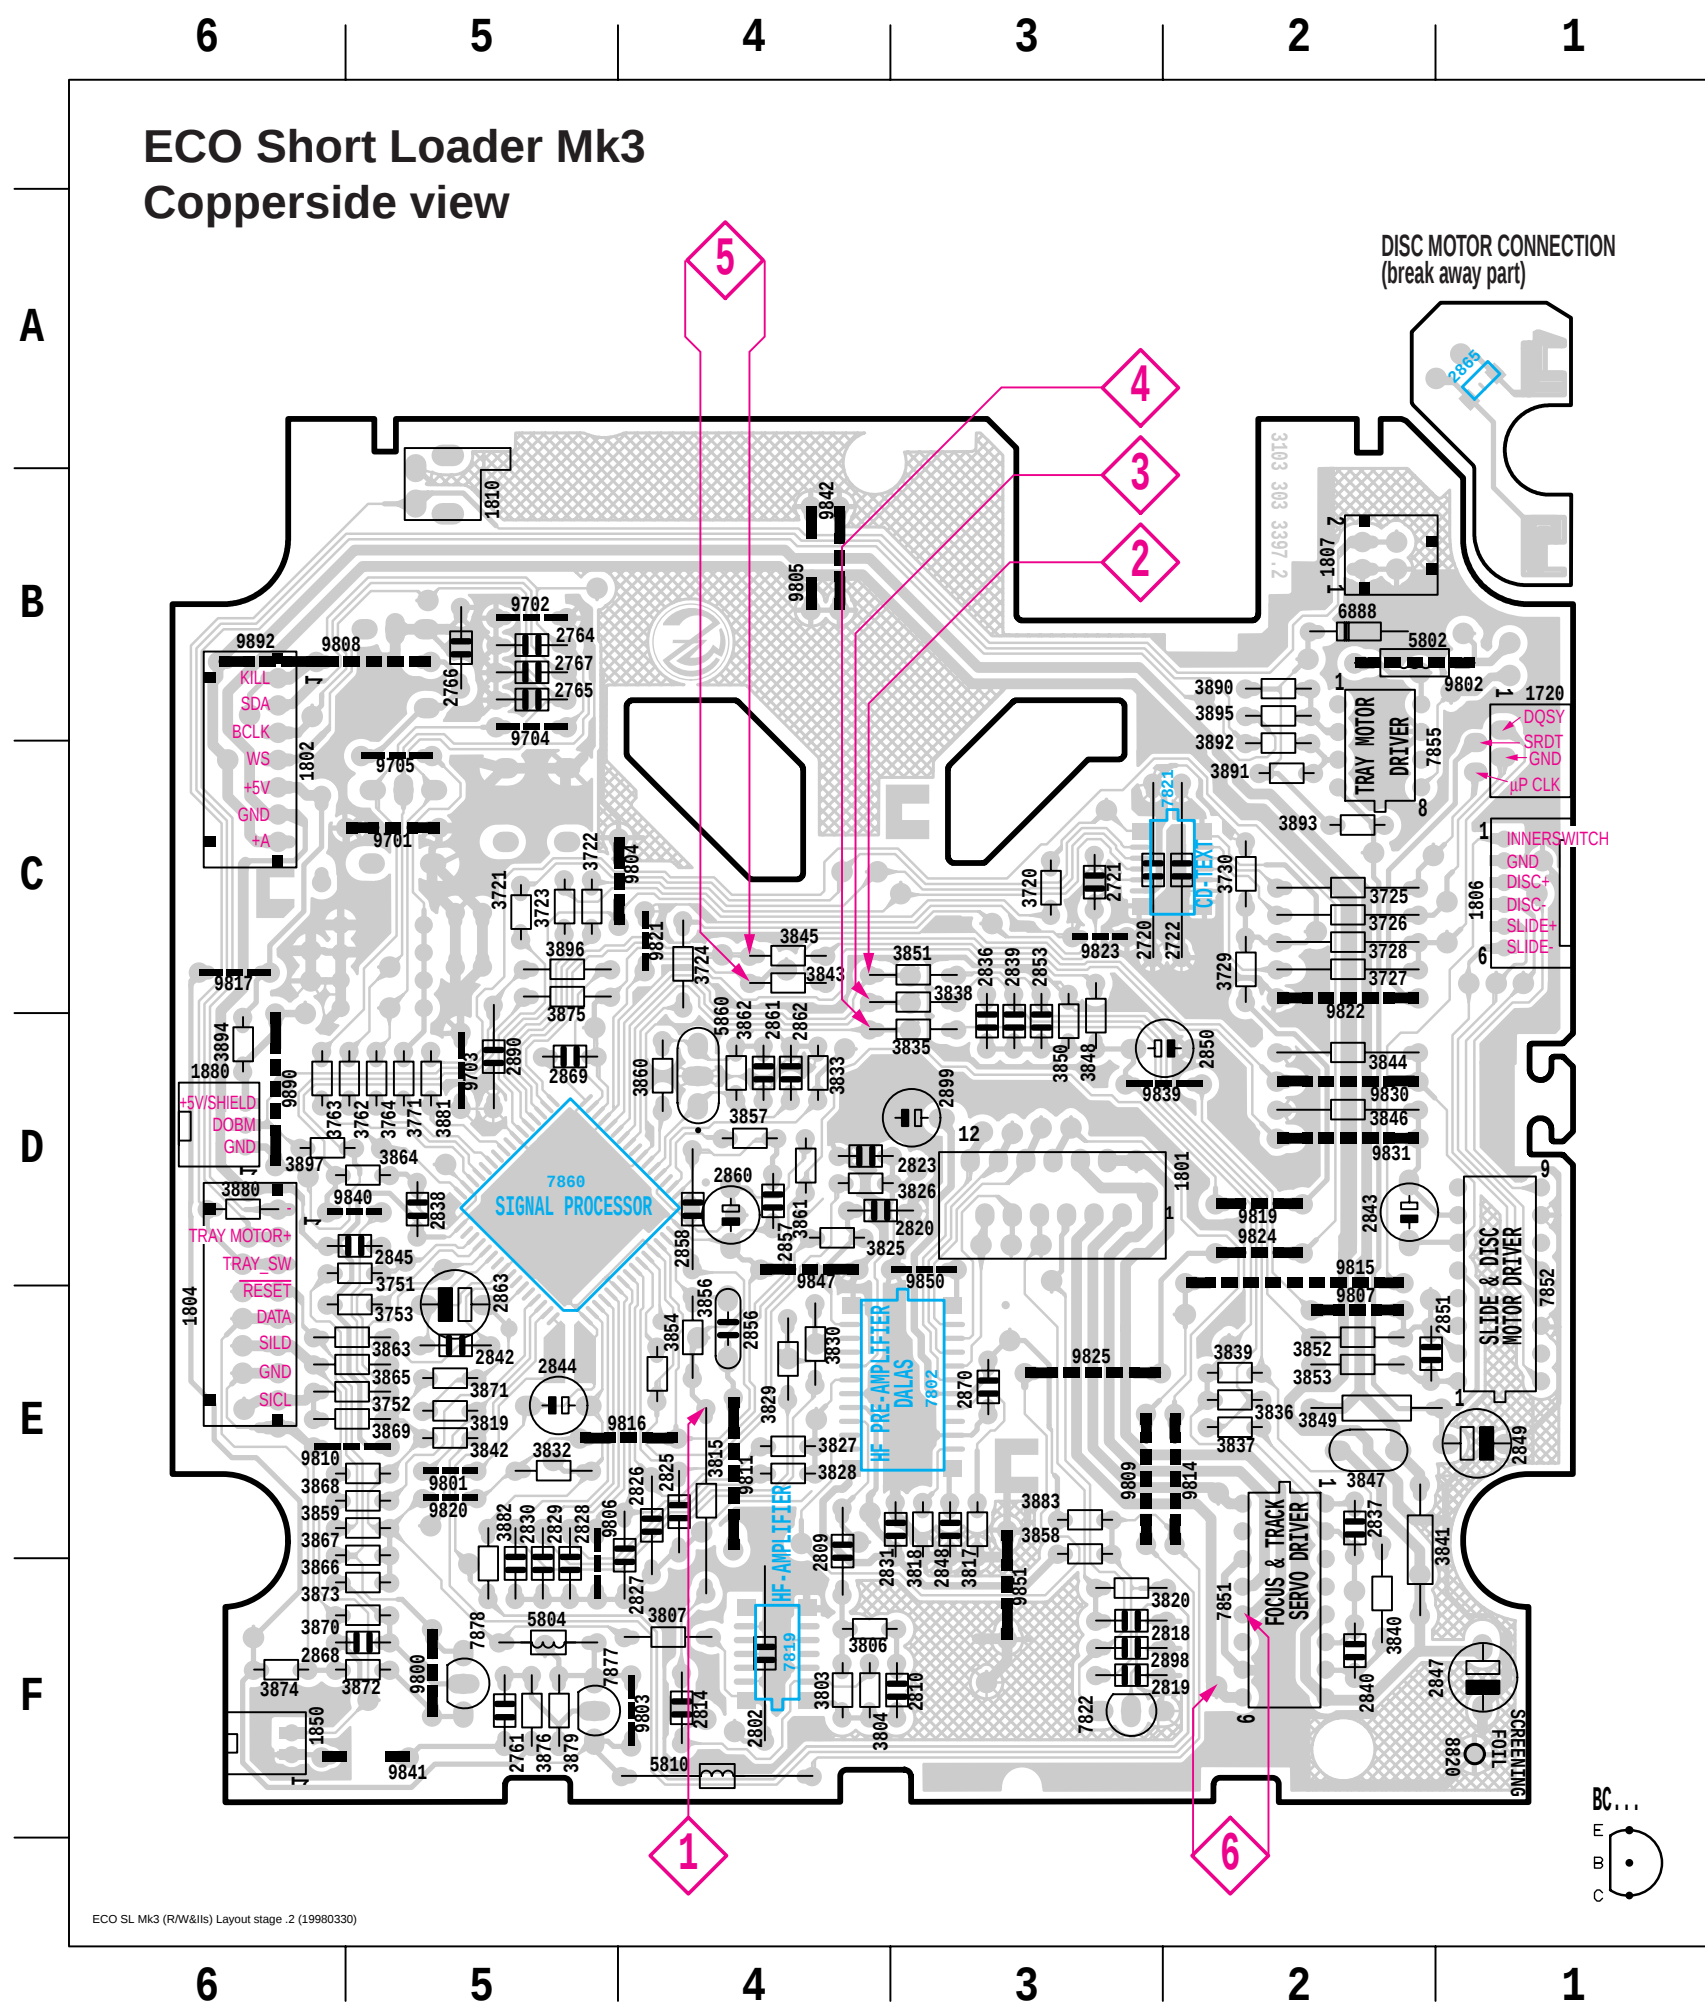


|      |      |      |      |
|------|------|------|------|
| 17   | opt. | 3844 | D2   |
| 1720 | C1   | 3845 | C4   |
| 1801 | D3   | 3846 | D2   |
| 1802 | C6   | 3847 | E2   |
| 1804 | E6   | 3848 | D3   |
| 1806 | C1   | 3849 | E2   |
| 1807 | B2   | 3850 | D3   |
| 1810 | B5   | 3851 | C3   |
| 1820 | B3   | 3852 | E2   |
| 1850 | F6   | 3853 | E2   |
| 1880 | D6   | 3854 | E4   |
| 1881 | opt. | 3856 | E4   |
| 1890 | opt. | 3857 | D4   |
| 1895 | opt. | 3858 | E3   |
| 2720 | C3   | 3859 | E5   |
| 2721 | C3   | 3860 | D4   |
| 2722 | C2   | 3861 | D4   |
| 2761 | F5   | 3862 | D4   |
| 2764 | B5   | 3863 | E5   |
| 2765 | B5   | 3864 | D5   |
| 2766 | B5   | 3865 | E5   |
| 2767 | B5   | 3866 | E5   |
| 2802 | F4   | 3867 | E5   |
| 2809 | E4   | 3868 | E5   |
| 2810 | F3   | 3869 | E5   |
| 2814 | F4   | 3870 | F5   |
| 2818 | F3   | 3871 | E5   |
| 2819 | F4   | 3872 | E5   |
| 2820 | D4   | 3873 | F5   |
| 2823 | D4   | 3874 | F6   |
| 2825 | E4   | 3875 | C5   |
| 2826 | E4   | 3876 | F5   |
| 2827 | E4   | 3879 | F5   |
| 2828 | F5   | 3880 | D6   |
| 2829 | F5   | 3881 | D5   |
| 2830 | F5   | 3882 | F5   |
| 2831 | E3   | 3883 | E3   |
| 2836 | D3   | 3890 | B2   |
| 2837 | E2   | 3891 | C2   |
| 2838 | D5   | 3892 | C2   |
| 2839 | D3   | 3893 | C2   |
| 2840 | F2   | 3894 | D5   |
| 2842 | E5   | 3895 | B5   |
| 2843 | D2   | 3896 | C5   |
| 2844 | E5   | 3897 | D6   |
| 2845 | D5   | 3898 | opt. |
| 2847 | F1   | 3899 | opt. |
| 2848 | E3   | 5802 | B2   |
| 2849 | E1   | 5804 | F5   |
| 2850 | D2   | 5810 | F4   |
| 2851 | E2   | 5860 | D4   |
| 2853 | D3   | 5890 | opt. |
| 2856 | E4   | 6888 | B2   |
| 2857 | D4   | 7802 | E4   |
| 2858 | D4   | 7819 | F4   |
| 2859 | opt. | 7822 | F3   |
| 2860 | D4   | 7851 | F3   |
| 2861 | D4   | 7852 | D1   |
| 2862 | D4   | 7855 | C2   |
| 2863 | E5   | 7860 | D5   |
| 2865 | A1   | 7877 | F5   |
| 2868 | F5   | 7878 | F5   |
| 2869 | D5   | 7896 | opt. |
| 2870 | E3   | 9701 | C5   |
| 2871 | D5   | 9705 | B5   |
| 2891 | opt. | 9703 | D5   |
| 2892 | opt. | 9704 | B5   |
| 2898 | F3   | 9705 | C5   |
| 2899 | D3   | 9800 | F5   |
| 2900 | E5   | 9801 | E5   |
| 2921 | C5   | 9802 | B2   |
| 2922 | C5   | 9803 | F4   |
| 2923 | C5   | 9804 | C4   |
| 2924 | C2   | 9805 | B4   |
| 2925 | C2   | 9806 | F5   |
| 2926 | C2   | 9807 | E2   |
| 2927 | C2   | 9808 | B5   |
| 2928 | C2   | 9809 | E3   |
| 2929 | C2   | 9810 | D5   |
| 2930 | C3   | 9811 | E4   |
| 2931 | D5   | 9812 | E2   |
| 2932 | D5   | 9815 | D2   |
| 2933 | D5   | 9816 | E4   |
| 2934 | D5   | 9817 | C6   |
| 2935 | D5   | 9819 | D2   |
| 2936 | D5   | 9820 | E5   |
| 2937 | D5   | 9821 | C4   |
| 2938 | D5   | 9822 | C2   |
| 2939 | D5   | 9823 | C3   |
| 2940 | D5   | 9824 | D2   |
| 2941 | D5   | 9825 | E3   |
| 2942 | D5   | 9830 | D2   |
| 2943 | D5   | 9831 | D2   |
| 2944 | D5   | 9839 | D2   |
| 2945 | D5   | 9840 | D5   |
| 2946 | D5   | 9841 | F5   |
| 2947 | D5   | 9842 | B4   |
| 2948 | D5   | 9847 | D4   |
| 2949 | D5   | 9850 | D3   |
| 2950 | D5   | 9851 | F3   |
| 2951 | D5   | 9859 | D6   |
| 2952 | D5   | 9892 | B6   |

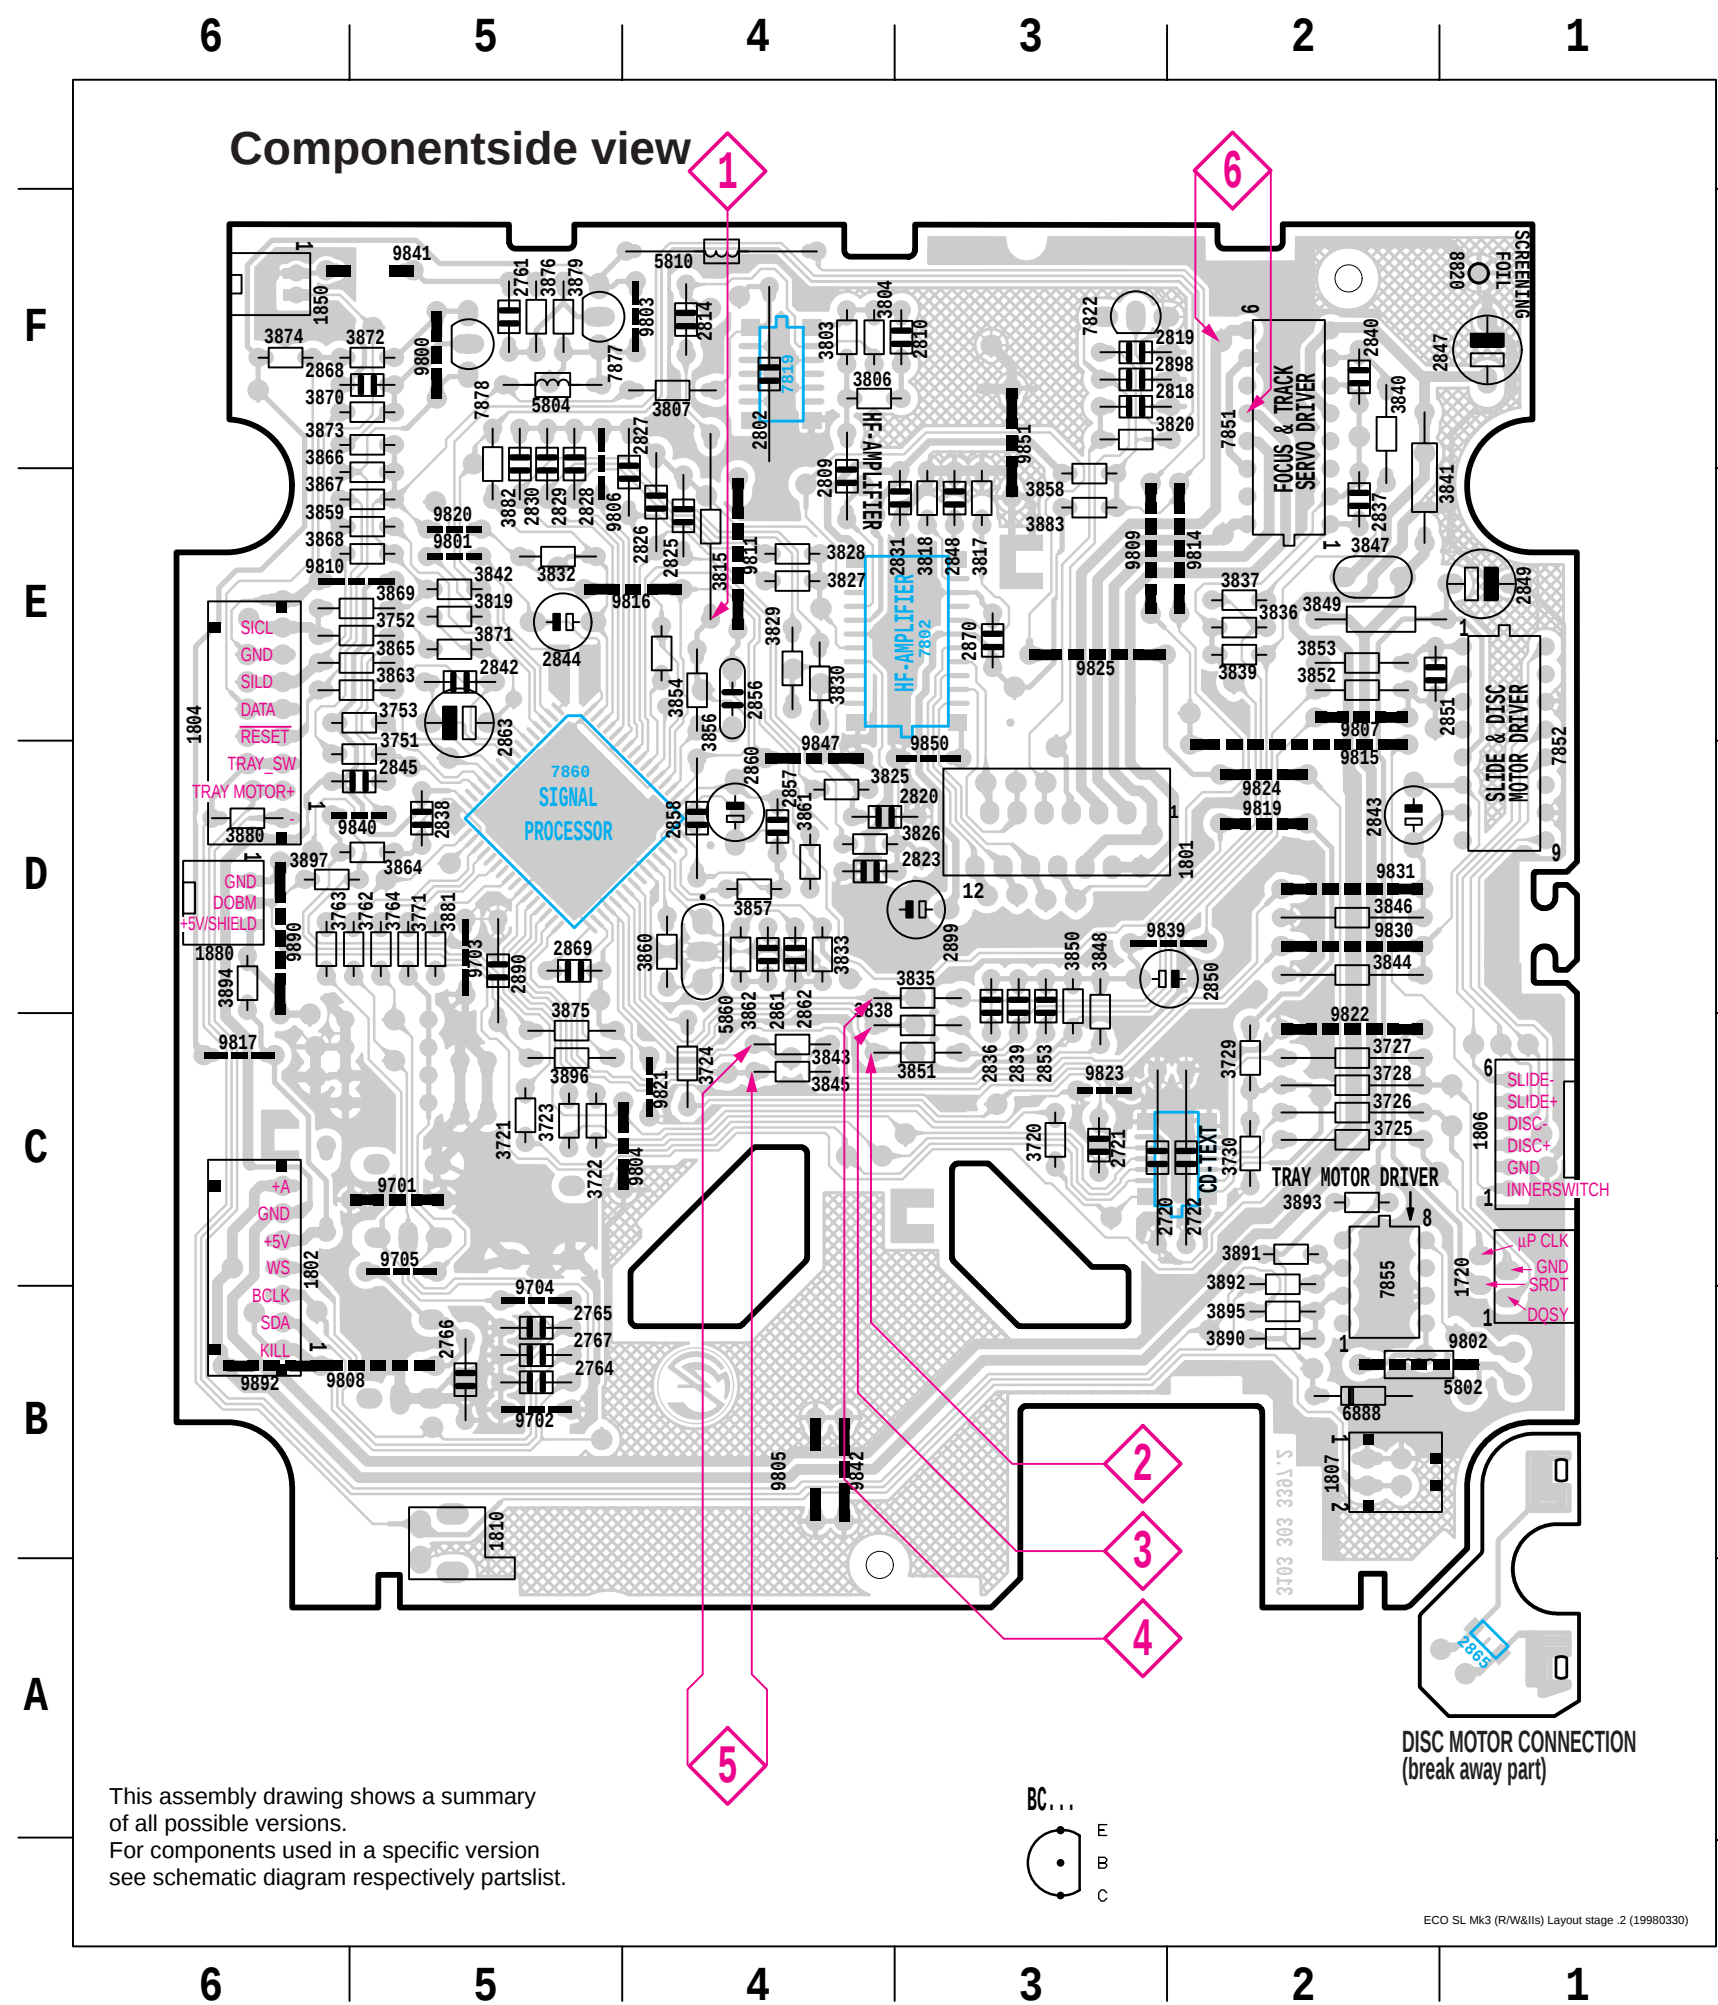


This assembly drawing shows a summary of all possible versions. For components used in a specific version see schematic diagram respectively partslist.


**OPTIONAL**  
FOR SETS WITH OPTICAL OUT  
Copperside view

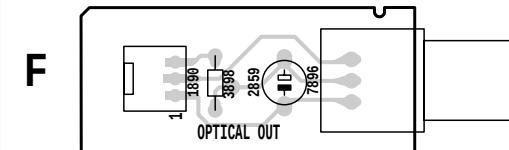


Componentside view

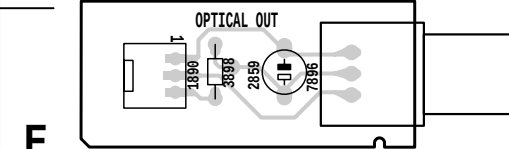


**OPTIONAL**  
FOR SETS WITH COAXIAL OUT  
Copperside view

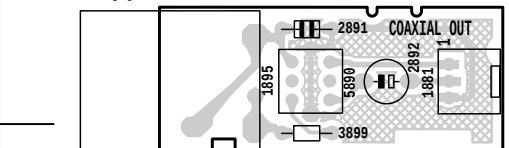


Componentside view

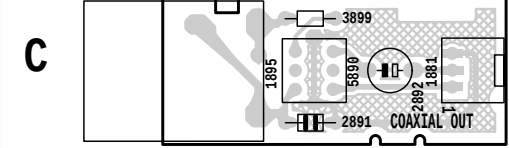

**OPTIONAL**  
FOR FLAP LOADERS  
Copperside view

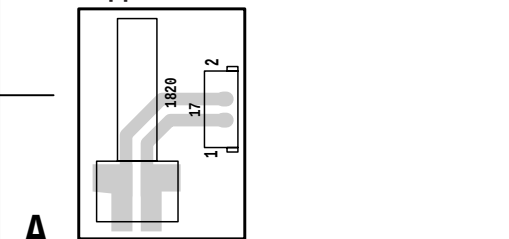

Componentside view

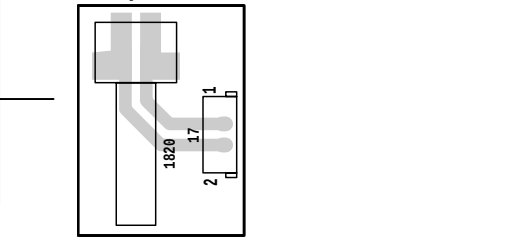

WARNING

**CHARGED CAPACITORS ON THE CD BOARD MAY DAMAGE THE CD-ELECTRONICS WHEN CONNECTING A NEW CD DRIVE. THAT'S WHY, BESIDES THE SAFETY MEASURES LIKE**

- **SWITCH OFF POWER SUPPLY**
- **ESD PROTECTION**

**ADDITIONAL ACTIONS MUST BE TAKEN BY THE REPAIR TECHNICIAN.**

The following steps have to be done when replacing the CDM mechanism:

1. Disconnect old CD drive flexfoil from printed board
2. Connect paperclip to CD drive flexfoil to short-circuit flexfoil (fig.1)
3. Short-circuit printed board with **brass-sheet (4822 321 11197)** plugged into the flexfoil connector (fig.2)
4. Remove old CD drive
5. Position new CD drive in its studs
6. Remove short-circuit from printed board connector
7. Remove short-circuit from flexfoil of new CD drive
8. Connect new flexfoil to print connector (fig.3)

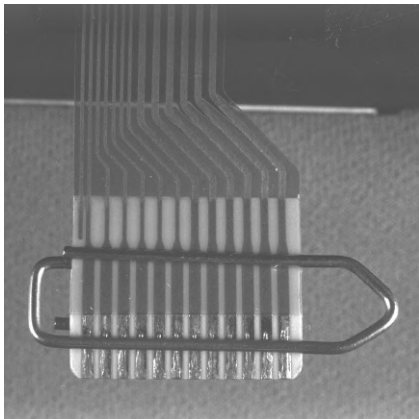


fig.1

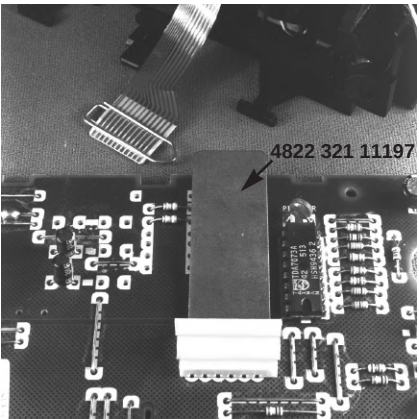


fig.2




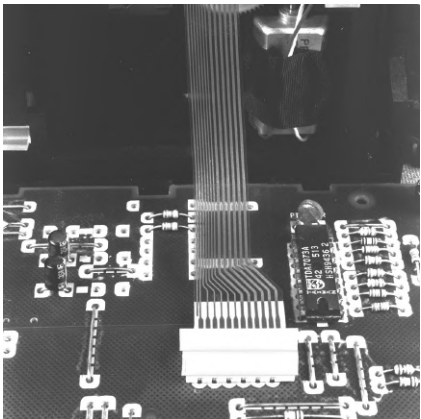


fig.3

Remarks

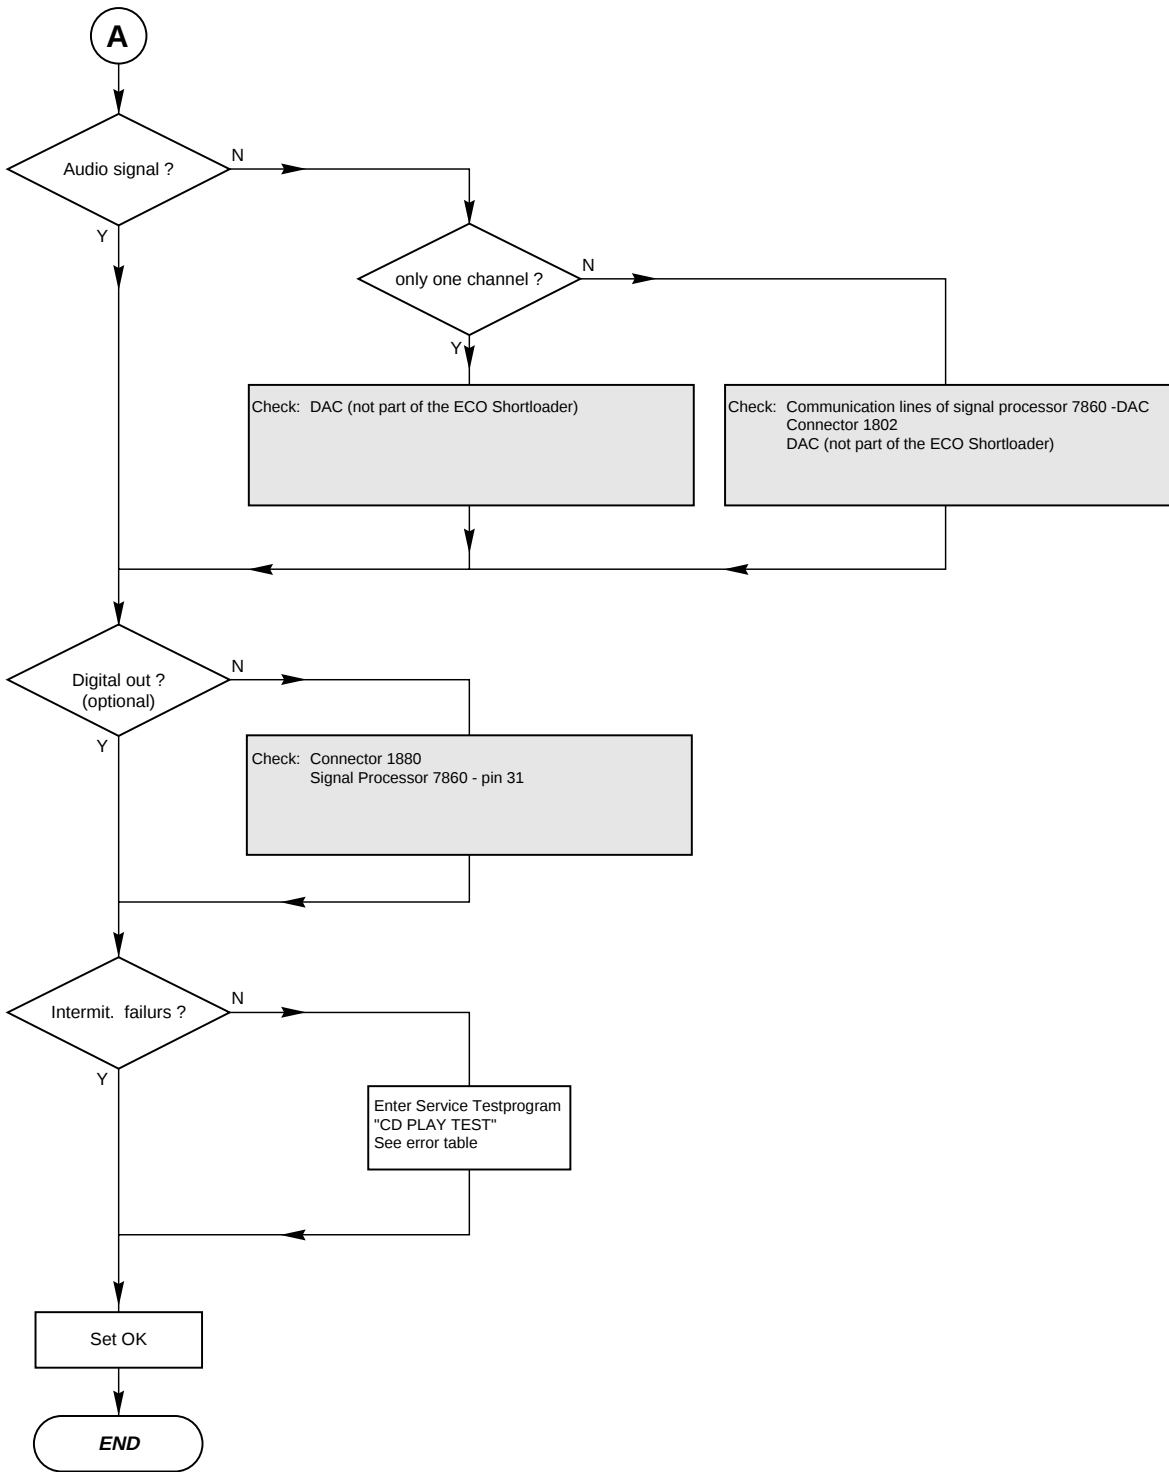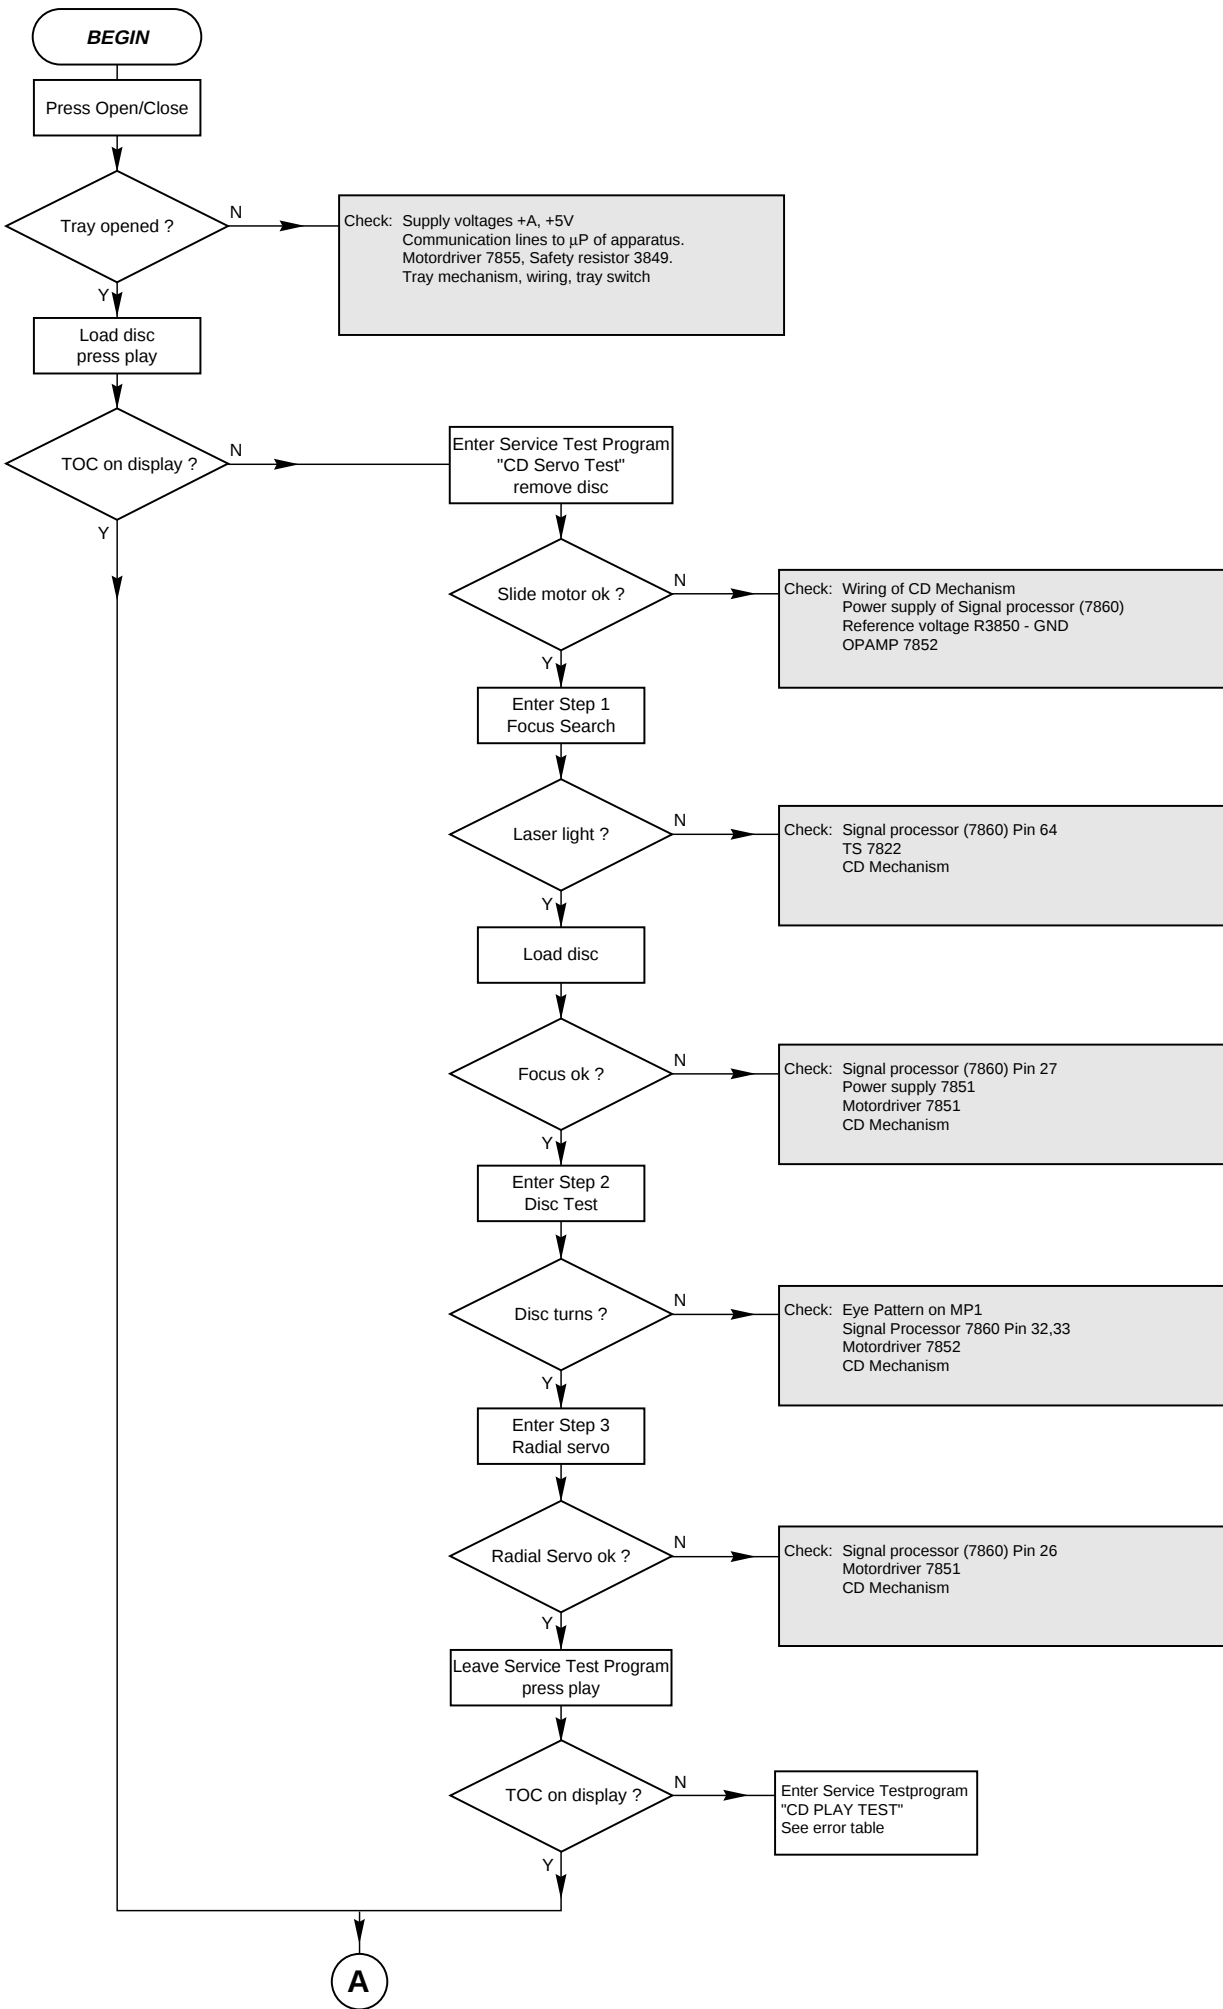


EXPLODED VIEW of SET

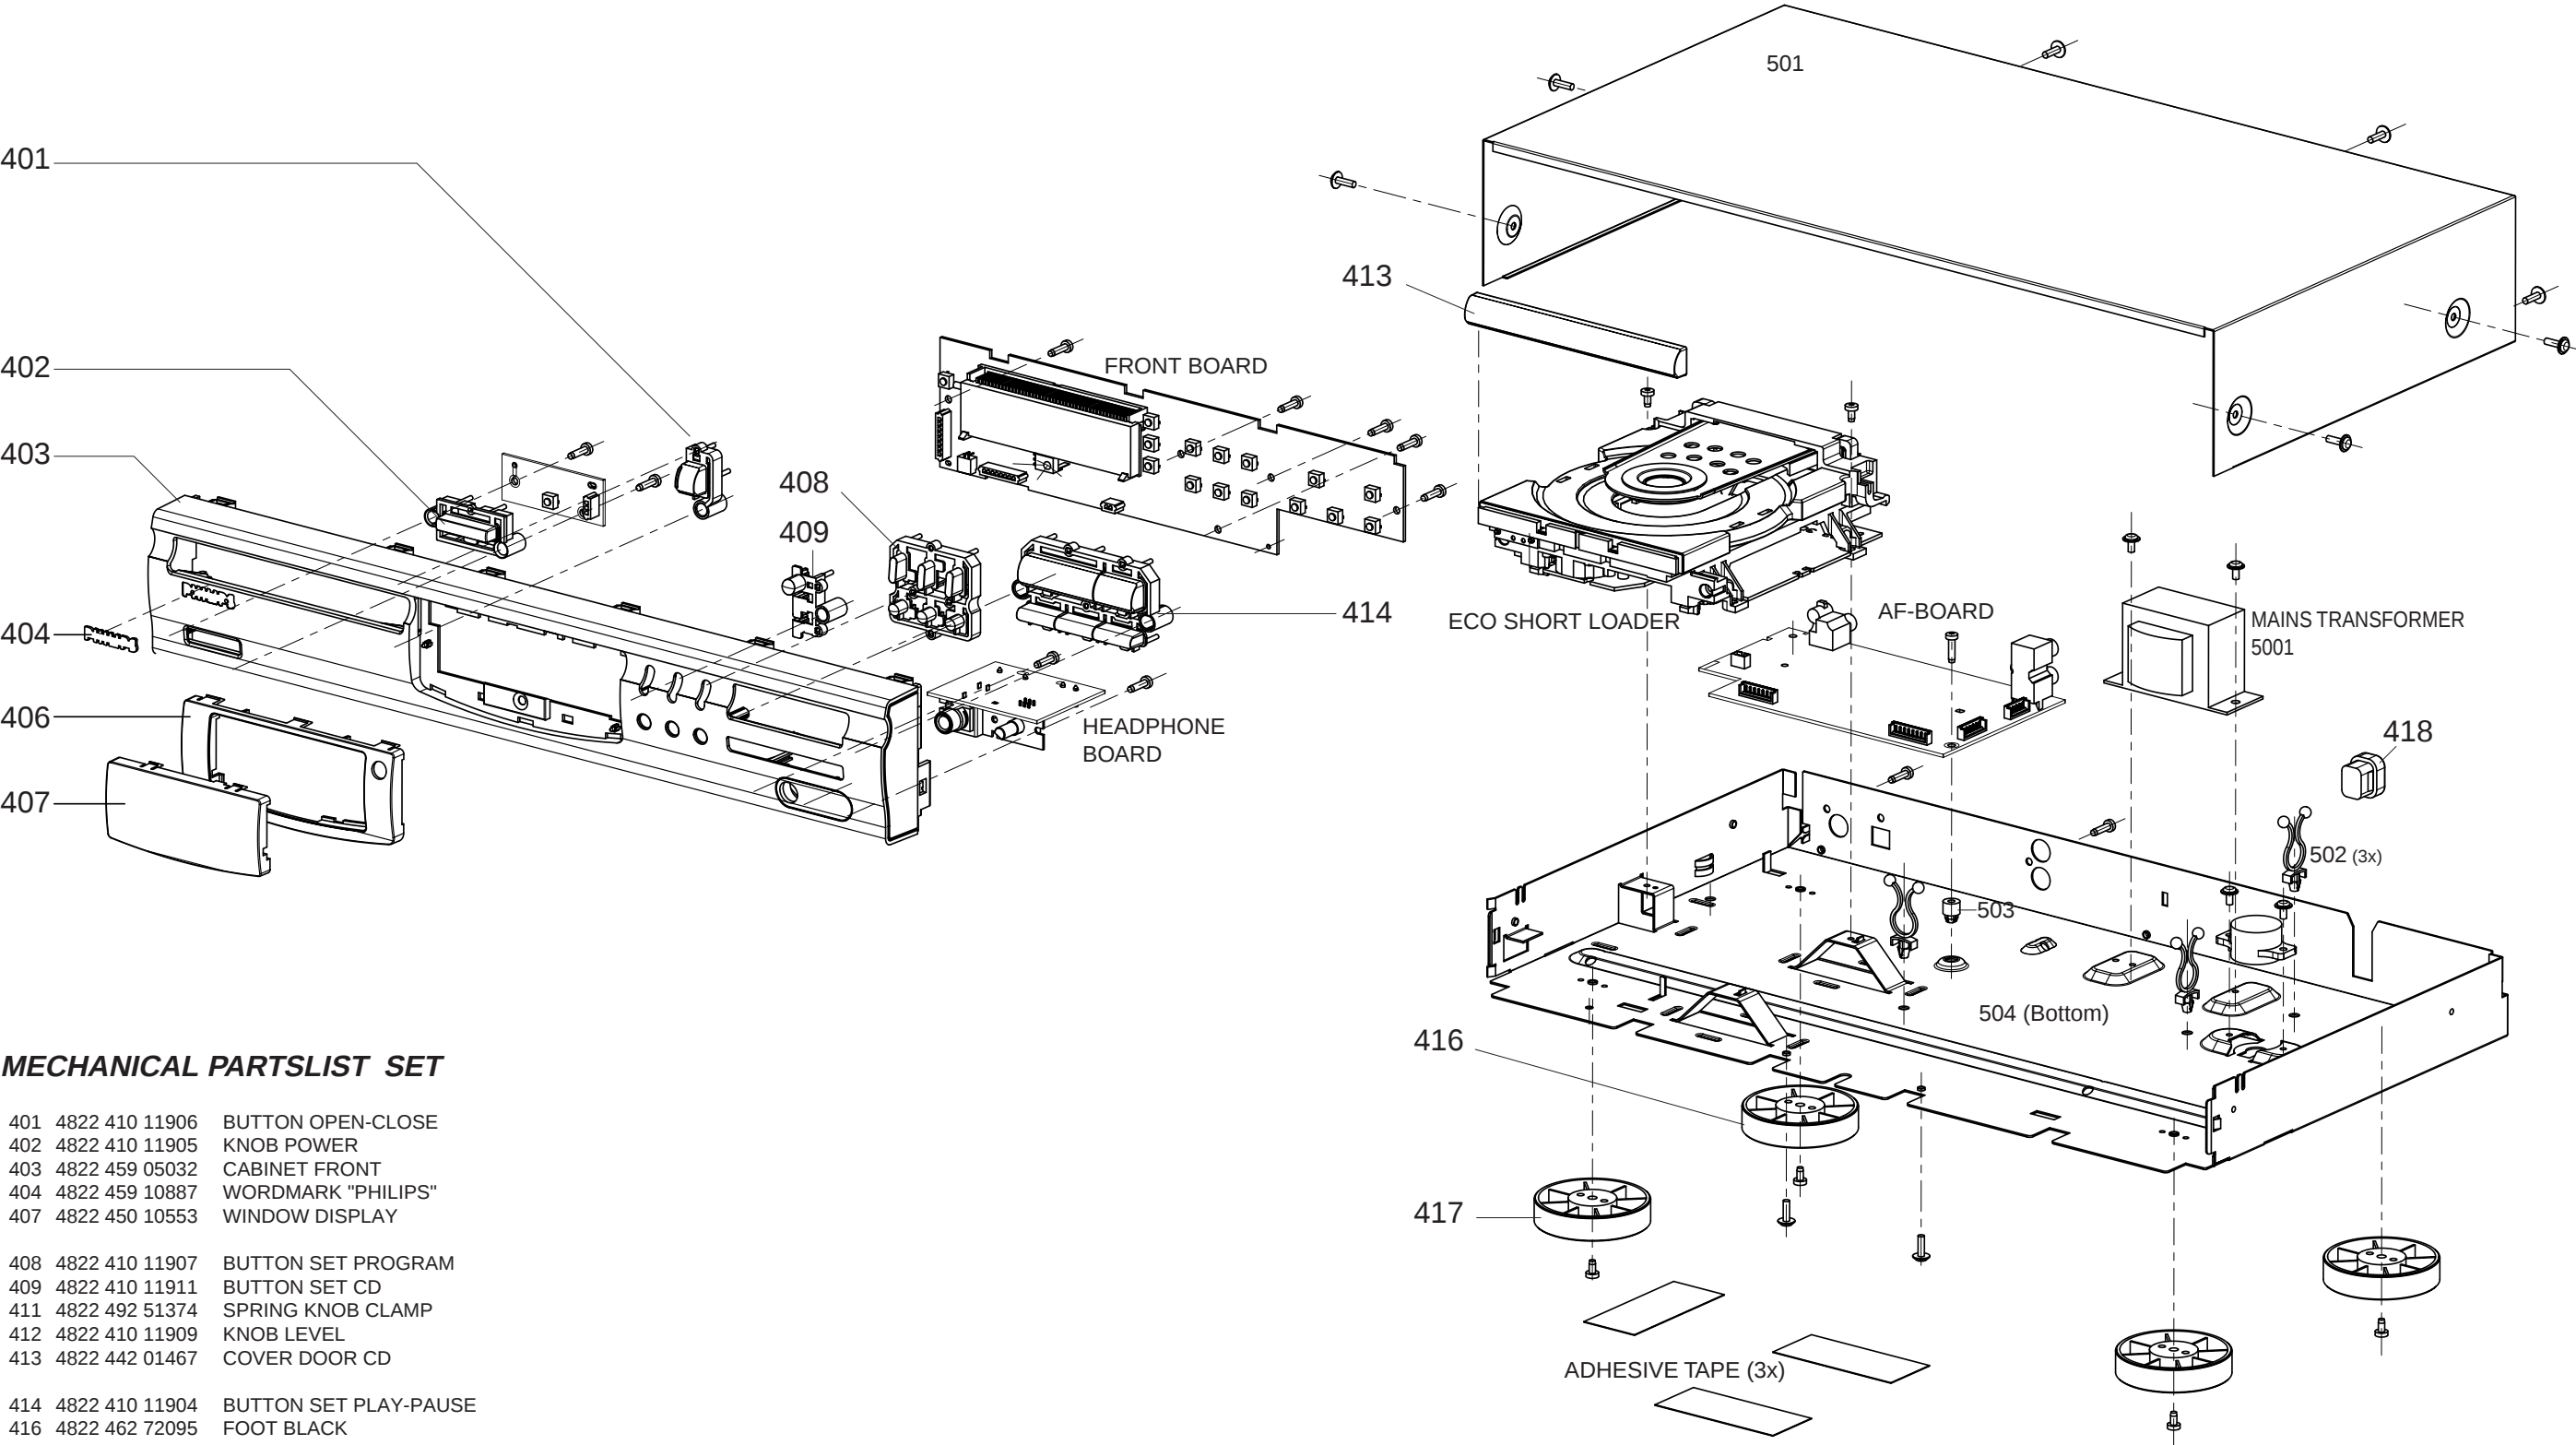

MECHANICAL PARTSLIST SET

|      |                |                                |
|------|----------------|--------------------------------|
| 401  | 4822 410 11906 | BUTTON OPEN-CLOSE              |
| 402  | 4822 410 11905 | KNOB POWER                     |
| 403  | 4822 459 05032 | CABINET FRONT                  |
| 404  | 4822 459 10887 | WORDMARK "PHILIPS"             |
| 407  | 4822 450 10553 | WINDOW DISPLAY                 |
| 408  | 4822 410 11907 | BUTTON SET PROGRAM             |
| 409  | 4822 410 11911 | BUTTON SET CD                  |
| 411  | 4822 492 51374 | SPRING KNOB CLAMP              |
| 412  | 4822 410 11909 | KNOB LEVEL                     |
| 413  | 4822 442 01467 | COVER DOOR CD                  |
| 414  | 4822 410 11904 | BUTTON SET PLAY-PAUSE          |
| 416  | 4822 462 72095 | FOOT BLACK                     |
| 417  | 4822 462 42159 | FOOT SILVER                    |
| 418  | 4822 532 60948 | CABLE BUSH                     |
| 5001 | 4822 146 11031 | TRANSFORMER MAINS not for /01  |
| 5001 | 4822 146 11032 | TRANSFORMER MAINS for /01 only |
|      | 4822 219 10538 | RC07105/01 (Remote Control)    |
|      | 4822 321 22832 | CINCH-CABLE                    |

Exploded view CD Short Loader

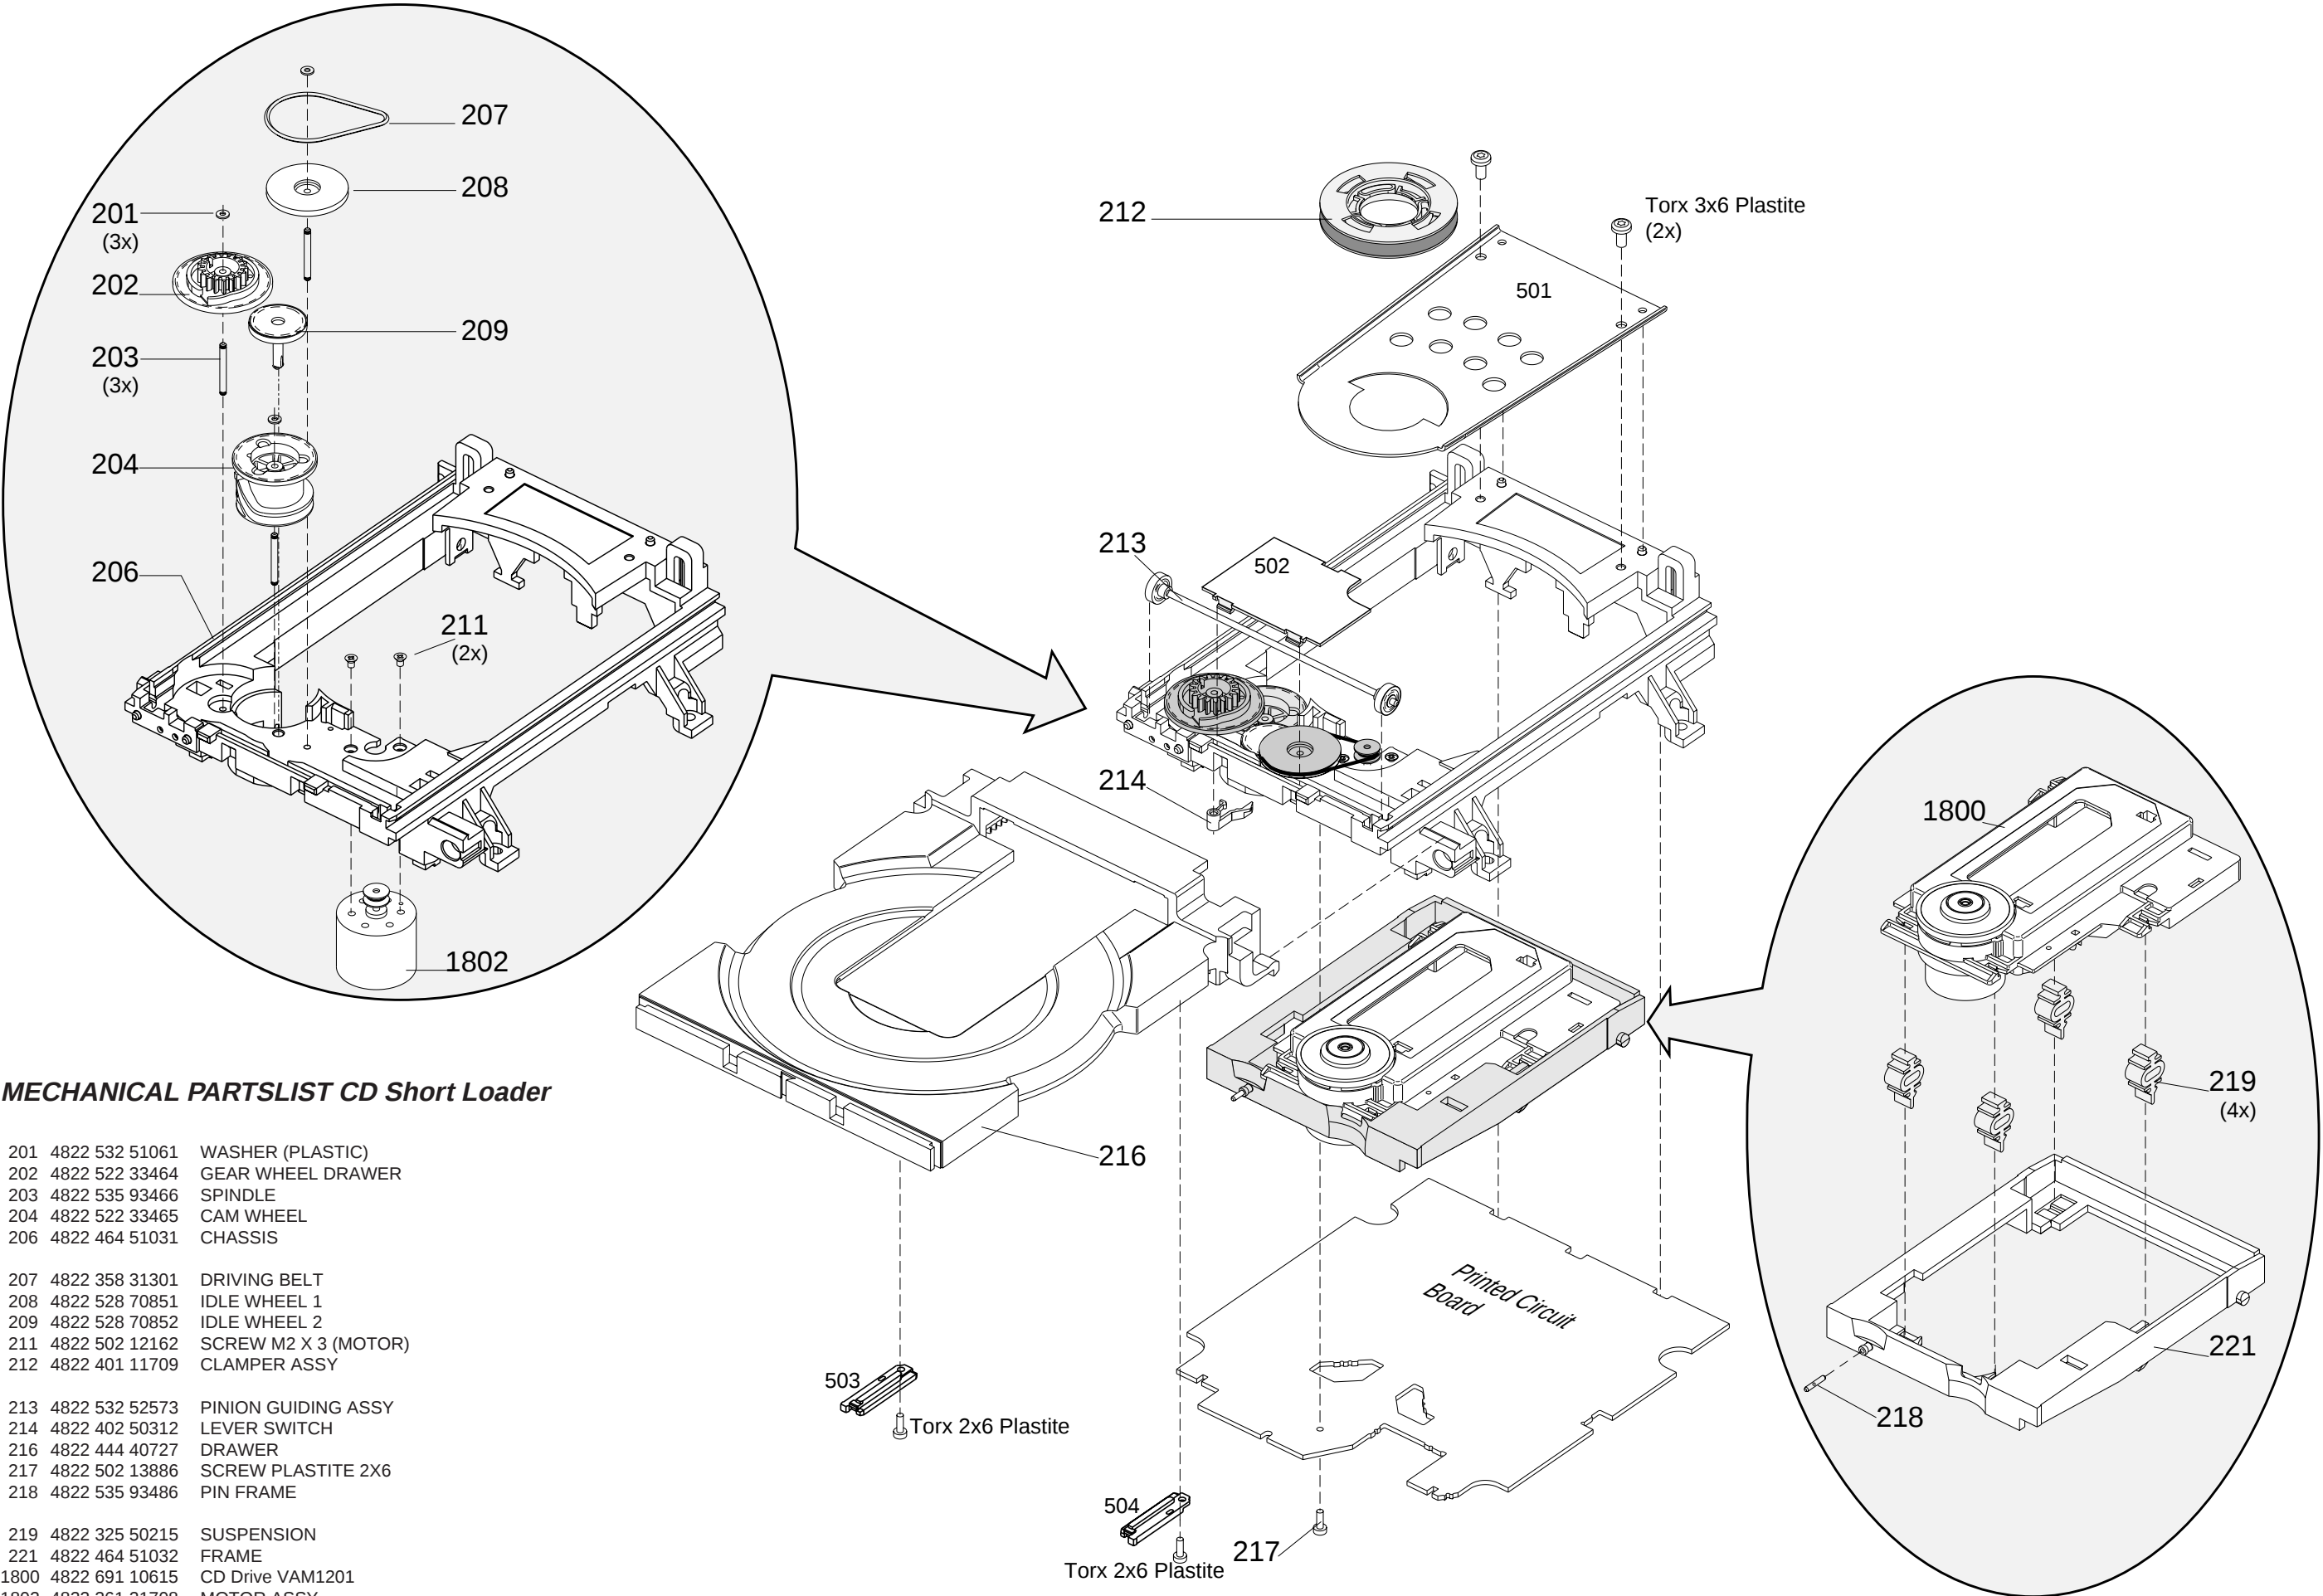

MECHANICAL PARTSLIST CD Short Loader

|      |                |                      |
|------|----------------|----------------------|
| 201  | 4822 532 51061 | WASHER (PLASTIC)     |
| 202  | 4822 522 33464 | GEAR WHEEL DRAWER    |
| 203  | 4822 535 93466 | SPINDLE              |
| 204  | 4822 522 33465 | CAM WHEEL            |
| 206  | 4822 464 51031 | CHASSIS              |
| 207  | 4822 358 31301 | DRIVING BELT         |
| 208  | 4822 528 70851 | IDLE WHEEL 1         |
| 209  | 4822 528 70852 | IDLE WHEEL 2         |
| 211  | 4822 502 12162 | SCREW M2 X 3 (MOTOR) |
| 212  | 4822 401 11709 | CLAMPER ASSY         |
| 213  | 4822 532 52573 | PINION GUIDING ASSY  |
| 214  | 4822 402 50312 | LEVER SWITCH         |
| 216  | 4822 444 40727 | DRAWER               |
| 217  | 4822 502 13886 | SCREW PLASTITE 2X6   |
| 218  | 4822 535 93486 | PIN FRAME            |
| 219  | 4822 325 50215 | SUSPENSION           |
| 221  | 4822 464 51032 | FRAME                |
| 1800 | 4822 691 10615 | CD Drive VAM1201     |
| 1802 | 4822 361 21708 | MOTOR ASSY           |
|      | 4822 502 30735 | SCREW 3 X 6 PLASTITE |

**ELECTRICAL PARTSLIST CD BOARD****MISCELLANEOUS**

|      |                |                                  |
|------|----------------|----------------------------------|
| 1720 | 4822 265 11183 | CON. FLEX FOIL 4 PIN SIDE ENTRY  |
| 1800 | 4822 691 10645 | CD DRIVE VAM1201                 |
| 1801 | 4822 267 51453 | CON. FLEX FOIL 12 PIN SIDE ENTRY |
| 1810 | 4822 276 13503 | TRAY SWITCH                      |
| 8002 | 4822 320 12385 | FLEX FOIL 4P 100mm (CD Text)     |

**CAPACITORS**

|      |                |        |     |     |
|------|----------------|--------|-----|-----|
| 2720 | 4822 122 33197 | 1nF    | 10% | 50V |
| 2722 | 4822 126 12785 | 47nF   | 10% | 50V |
| 2761 | 4822 121 51387 | 10nF   | 20% | 16V |
| 2764 | 4822 122 33191 | 22pF   | 5%  | 50V |
| 2765 | 4822 122 33191 | 22pF   | 5%  | 50V |
| 2766 | 4822 126 12878 | 1,5nF  | 10% | 16V |
| 2767 | 4822 122 33191 | 22pF   | 5%  | 50V |
| 2802 | 4822 126 12882 | 100nF  | 20% | 50V |
| 2809 | 4822 126 12785 | 47nF   | 10% | 50V |
| 2814 | 4822 126 12339 | 2,2nF  | 10% | 16V |
| 2818 | 4822 126 12882 | 100nF  | 20% | 50V |
| 2819 | 4822 126 12882 | 100nF  | 20% | 50V |
| 2820 | 4822 122 10459 | 560pF  | 10% | 50V |
| 2823 | 4822 126 12878 | 1,5nF  | 10% | 16V |
| 2825 | 4822 122 10466 | 220pF  | 10% | 50V |
| 2826 | 4822 122 10466 | 220pF  | 10% | 50V |
| 2827 | 4822 122 10466 | 220pF  | 10% | 50V |
| 2828 | 4822 122 10466 | 220pF  | 10% | 50V |
| 2829 | 4822 122 10466 | 220pF  | 10% | 50V |
| 2830 | 4822 122 10466 | 220pF  | 10% | 50V |
| 2831 | 4822 126 12785 | 47nF   | 10% | 50V |
| 2836 | 4822 126 13098 | 5,6nF  | 20% | 16V |
| 2837 | 4822 122 10459 | 560pF  | 10% | 50V |
| 2838 | 4822 126 12882 | 100nF  | 20% | 50V |
| 2839 | 4822 121 51387 | 10nF   | 20% | 16V |
| 2840 | 4822 122 10576 | 1,8nF  | 10% | 16V |
| 2842 | 4822 121 51387 | 10nF   | 20% | 16V |
| 2843 | 5322 124 41948 | 0,47μF | 20% | 50V |
| 2844 | 4822 124 22726 | 4,7μF  | 20% | 35V |
| 2845 | 4822 122 33848 | 47pF   | 5%  | 50V |
| 2847 | 4822 124 40433 | 47μF   | 20% | 25V |
| 2848 | 4822 121 51387 | 10nF   | 20% | 16V |
| 2849 | 4822 124 40433 | 47μF   | 20% | 25V |
| 2850 | 4822 124 22726 | 4,7μF  | 20% | 35V |
| 2851 | 4822 121 51387 | 10nF   | 20% | 16V |
| 2853 | 4822 126 12882 | 100nF  | 20% | 50V |
| 2856 | 4822 121 70619 | 22nF   | 10% | 50V |
| 2857 | 4822 126 11585 | 22nF   | 20% | 50V |
| 2858 | 4822 122 33848 | 47pF   | 5%  | 50V |
| 2860 | 4822 124 22726 | 4,7μF  | 20% | 35V |
| 2861 | 4822 122 33191 | 22pF   | 5%  | 50V |
| 2862 | 4822 122 33191 | 22pF   | 5%  | 50V |
| 2863 | 4822 124 81286 | 47μF   | 20% | 16V |
| 2869 | 4822 126 12882 | 100nF  | 20% | 50V |
| 2870 | 4822 126 12785 | 47nF   | 10% | 50V |
| 2890 | 4822 122 33849 | 150pF  | 10% | 50V |
| 2898 | 4822 126 12882 | 100nF  | 20% | 50V |
| 2899 | 4822 124 22726 | 4,7μF  | 20% | 35V |

**RESISTORS**

|       |                |       |    |       |
|-------|----------------|-------|----|-------|
| 3720  | 4822 116 83883 | 470Ω  | 5% | 0,16W |
| 3721  | 4822 116 83883 | 470Ω  | 5% | 0,16W |
| 3722  | 4822 116 83883 | 470Ω  | 5% | 0,16W |
| 3723  | 4822 116 83883 | 470Ω  | 5% | 0,16W |
| 3724  | 4822 116 83883 | 470Ω  | 5% | 0,16W |
| 3725  | 4822 116 83883 | 470Ω  | 5% | 0,16W |
| 3726  | 4822 116 83883 | 470Ω  | 5% | 0,16W |
| 3727  | 4822 116 83883 | 470Ω  | 5% | 0,16W |
| 3728  | 4822 116 83864 | 10kΩ  | 5% | 0,5W  |
| 3729  | 4822 116 52195 | 47Ω   | 5% | 0,5W  |
| 3730  | 4822 116 52283 | 4,7kΩ | 5% | 0,5W  |
| 3751  | 4822 116 83872 | 220Ω  | 5% | 0,5W  |
| 3752  | 4822 116 83872 | 220Ω  | 5% | 0,5W  |
| 3753  | 4822 116 83872 | 220Ω  | 5% | 0,5W  |
| 3762  | 4822 116 83872 | 220Ω  | 5% | 0,5W  |
| 3763  | 4822 116 83872 | 220Ω  | 5% | 0,5W  |
| 3764  | 4822 116 83872 | 220Ω  | 5% | 0,5W  |
| 3771  | 4822 116 83883 | 470Ω  | 5% | 0,16W |
| 3803  | 4822 116 83864 | 10kΩ  | 5% | 0,5W  |
| 3804  | 4822 116 52257 | 22kΩ  | 5% | 0,5W  |
| 3807  | 4822 116 52226 | 560Ω  | 5% | 0,5W  |
| 3815  | 4822 050 11002 | 1kΩ   | 5% | 0,2W  |
| 3817  | 4822 116 52283 | 4,7kΩ | 5% | 0,5W  |
| 3818  | 4822 116 52239 | 120kΩ | 5% | 0,5W  |
| 3820  | 4822 050 11002 | 1kΩ   | 5% | 0,2W  |
| 3825  | 4822 116 83864 | 10kΩ  | 5% | 0,5W  |
| 3826  | 4822 116 83864 | 10kΩ  | 5% | 0,5W  |
| 3827  | 4822 116 83864 | 10kΩ  | 5% | 0,5W  |
| 3828  | 4822 116 83864 | 10kΩ  | 5% | 0,5W  |
| 3829  | 4822 116 83864 | 10kΩ  | 5% | 0,5W  |
| 3830  | 4822 116 83864 | 10kΩ  | 5% | 0,5W  |
| 3832  | 4822 116 52191 | 33Ω   | 5% | 0,5W  |
| 3833  | 4822 050 11002 | 1kΩ   | 5% | 0,2W  |
| 3835  | 4822 116 52264 | 27kΩ  | 5% | 0,5W  |
| 3836  | 4822 116 52207 | 1,2kΩ | 5% | 0,5W  |
| 3837  | 4822 116 83961 | 6,8kΩ | 5% | 0,16W |
| 3838  | 4822 116 52257 | 22kΩ  | 5% | 0,5W  |
| 3839  | 4822 116 52207 | 1,2kΩ | 5% | 0,5W  |
| 3840  | 4822 116 83961 | 6,8kΩ | 5% | 0,16W |
| 3841▲ | 4822 052 10338 | 3,3Ω  |    | NFR25 |
| 3842  | 4822 116 83864 | 10kΩ  | 5% | 0,5W  |
| 3843  | 4822 116 83882 | 39kΩ  | 5% | 0,5W  |
| 3844  | 4822 050 11002 | 1kΩ   | 5% | 0,2W  |
| 3845  | 4822 116 83882 | 39kΩ  | 5% | 0,5W  |
| 3846  | 4822 050 11002 | 1kΩ   | 5% | 0,2W  |
| 3848  | 4822 050 11002 | 1kΩ   | 5% | 0,2W  |
| 3849▲ | 4822 052 10338 | 3,3Ω  |    | NFR25 |
| 3850  | 4822 050 11002 | 1kΩ   | 5% | 0,2W  |
| 3851  | 4822 116 52264 | 27kΩ  | 5% | 0,5W  |
| 3852  | 4822 050 11002 | 1kΩ   | 5% | 0,2W  |
| 3853  | 4822 116 83961 | 6,8kΩ | 5% | 0,16W |
| 3854  | 4822 116 83878 | 270kΩ | 5% | 0,5W  |
| 3856  | 4822 116 52257 | 22kΩ  | 5% | 0,5W  |
| 3857  | 4822 116 52234 | 100kΩ | 5% | 0,5W  |
| 3858  | 4822 116 52175 | 100Ω  | 5% | 0,5W  |
| 3859  | 4822 116 83872 | 220Ω  | 5% | 0,5W  |
| 3860  | 4822 116 52175 | 100Ω  | 5% | 0,5W  |
| 3861  | 4822 116 52175 | 100Ω  | 5% | 0,5W  |
| 3862  | 4822 116 52235 | 1MΩ   | 5% | 0,5W  |

***ELECTRICAL PARTSLIST CD BOARD*****RESISTORS**

|      |                |      |    |      |
|------|----------------|------|----|------|
| 3863 | 4822 116 83872 | 220Ω | 5% | 0,5W |
| 3864 | 4822 116 52175 | 100Ω | 5% | 0,5W |
| 3865 | 4822 116 83872 | 220Ω | 5% | 0,5W |
| 3866 | 4822 116 83864 | 10kΩ | 5% | 0,5W |
| 3867 | 4822 116 83864 | 10kΩ | 5% | 0,5W |

|      |                |      |    |      |
|------|----------------|------|----|------|
| 3868 | 4822 116 83864 | 10kΩ | 5% | 0,5W |
| 3869 | 4822 116 83864 | 10kΩ | 5% | 0,5W |
| 3870 | 4822 116 83864 | 10kΩ | 5% | 0,5W |
| 3871 | 4822 116 52176 | 10Ω  | 5% | 0,5W |
| 3872 | 4822 116 52175 | 100Ω | 5% | 0,5W |

|      |                |      |    |      |
|------|----------------|------|----|------|
| 3873 | 4822 116 83864 | 10kΩ | 5% | 0,5W |
| 3874 | 4822 116 83864 | 10kΩ | 5% | 0,5W |
| 3875 | 4822 116 52191 | 33Ω  | 5% | 0,5W |
| 3876 | 4822 116 52213 | 180Ω | 5% | 0,5W |

|      |                |       |    |      |
|------|----------------|-------|----|------|
| 3879 | 4822 116 52226 | 560Ω  | 5% | 0,5W |
| 3881 | 4822 116 52283 | 4,7kΩ | 5% | 0,5W |
| 3882 | 4822 116 52283 | 4,7kΩ | 5% | 0,5W |
| 3883 | 4822 116 52175 | 100Ω  | 5% | 0,5W |
| 3890 | 4822 050 11002 | 1kΩ   | 5% | 0,2W |

|      |                |       |    |       |
|------|----------------|-------|----|-------|
| 3891 | 4822 050 11002 | 1kΩ   | 5% | 0,2W  |
| 3892 | 4822 116 52271 | 33kΩ  | 5% | 0,16W |
| 3893 | 4822 116 52249 | 1,8kΩ | 5% | 0,16W |
| 3895 | 4822 116 52271 | 33kΩ  | 5% | 0,16W |
| 3896 | 4822 116 83876 | 270Ω  | 5% | 0,16W |

|      |                |      |    |      |
|------|----------------|------|----|------|
| 3897 | 4822 116 52213 | 180Ω | 5% | 0,5W |
|------|----------------|------|----|------|

**COILS**

|      |                |                   |
|------|----------------|-------------------|
| 5804 | 4822 157 53302 | 1μH               |
| 5810 | 4822 157 11517 | 10μH              |
| 5860 | 4822 242 10566 | CRYSTAL 8.4672MHz |

**DIODES**

|      |                |            |
|------|----------------|------------|
| 6888 | 4822 130 80655 | BZX79-F2V4 |
|------|----------------|------------|

**TRANSISTORS**

|      |                |          |
|------|----------------|----------|
| 7822 | 4822 130 41344 | BC337-40 |
| 7877 | 4822 130 40959 | BC547B   |
| 7878 | 4822 130 44503 | BC547C   |

**INTEGRATED CIRCUITS**

|        |                |             |                  |
|--------|----------------|-------------|------------------|
| 7802 © | 4822 209 12636 | TDA1302T/N1 | HF PRE AMPLIFIER |
| 7819 © | 5322 209 11517 | PC74HCU04T  | HF AMPLIFIER     |
| 7821   | 4822 209 16143 | LC89170M    | CD TEXT          |
| 7851   | 4822 209 32852 | TDA7073A/N2 | SERVO DRIVER     |
| 7852   | 4822 209 32852 | TDA7073A/N2 | MOTOR DRIVER     |

|        |                |           |                   |
|--------|----------------|-----------|-------------------|
| 7855 © | 4822 209 31519 | TDA7072A  | TRAY MOTOR DRIVER |
| 7860 © | 4822 209 12752 | SAA7378GP | SIGNAL PROCESSOR  |

***ELECTRICAL PARTSLIST HEADPHONE BOARD*****MISCELLANEOUS**

|      |                |                        |
|------|----------------|------------------------|
| 1600 | 4822 267 31453 | HEADPHONE SOCKET 6,3mm |
|------|----------------|------------------------|

**CAPACITORS**

|      |                |       |     |     |
|------|----------------|-------|-----|-----|
| 2603 | 4822 126 11585 | 22nF  | 20% | 50V |
| 2604 | 4822 122 33197 | 1nF   | 10% | 50V |
| 2605 | 4822 122 33197 | 1nF   | 10% | 50V |
| 2610 | 4822 126 12882 | 100nF | 20% | 50V |

**RESISTORS**

|      |                |                 |    |      |  |
|------|----------------|-----------------|----|------|--|
| 3600 | 4822 101 21199 | POTMETER 2x10KΩ |    |      |  |
| 3603 | 4822 116 52244 | 15kΩ            | 5% | 0,5W |  |
| 3604 | 4822 116 52206 | 120Ω            | 5% | 0,5W |  |

|        |                |      |    |      |
|--------|----------------|------|----|------|
| 3605   | 4822 116 83864 | 10kΩ | 5% | 0,5W |
| 3606   | 4822 116 83864 | 10kΩ | 5% | 0,5W |
| 3607   | 4822 116 52244 | 15kΩ | 5% | 0,5W |
| 3608   | 4822 116 52206 | 120Ω | 5% | 0,5W |
| 3609   | 4822 052 10109 | 10Ω  | 5% | NFR  |
| 3611 ▲ | 4822 052 10109 | 10Ω  | 5% | NFR  |

**INTEGRATED CIRCUITS**

|      |                |          |
|------|----------------|----------|
| 7670 | 4822 209 83274 | NJM4560D |
|------|----------------|----------|

***ELECTRICAL PARTSLIST SET*****MISCELLANEOUS**

|        |                |                                |
|--------|----------------|--------------------------------|
| 5001 ▲ | 4822 146 11031 | TRANSFORMER MAINS not for /01  |
| 5001 ▲ | 4822 146 11032 | TRANSFORMER MAINS for /01 only |
|        | 4822 219 10538 | RC07105/01 (Remote Control)    |
|        | 4822 321 22832 | CINCH-CABLE                    |

**ELECTRICAL PARTSLIST AF BOARD****MISCELLANEOUS**

|        |                |                          |
|--------|----------------|--------------------------|
| 1255 ▲ | 4822 071 56301 | FUSE T 630mA/250V        |
| 1256 ▲ | 4822 071 56301 | FUSE T 630mA/250V        |
| 1503   | 4822 267 31996 | CINCH SOCKET DIGITAL OUT |
| 1504   | 4822 265 20553 | CINCH SOCKET LINE OUT    |

**CAPACITORS**

|      |                |        |     |     |
|------|----------------|--------|-----|-----|
| 2250 | 4822 124 41407 | 0,47µF | 20% | 63V |
| 2251 | 4822 124 11769 | 220µF  | 20% | 50V |
| 2252 | 4822 126 11585 | 22nF   | 20% | 50V |
| 2253 | 4822 126 11585 | 22nF   | 20% | 50V |
| 2254 | 4822 124 11878 | 4700µF | 20% | 16V |
| 2255 | 4822 126 12882 | 100nF  | 20% | 50V |
| 2256 | 4822 126 11585 | 22nF   | 20% | 50V |
| 2257 | 4822 126 11585 | 22nF   | 20% | 50V |
| 2258 | 4822 124 40784 | 3300µF | 20% | 16V |
| 2259 | 4822 124 40849 | 330µF  | 20% | 16V |
| 2500 | 4822 126 11585 | 22nF   | 20% | 50V |
| 2501 | 4822 124 40433 | 47µF   | 20% | 25V |
| 2502 | 4822 124 40433 | 47µF   | 20% | 25V |
| 2503 | 4822 121 51387 | 10nF   | 20% | 16V |
| 2504 | 4822 121 51387 | 10nF   | 20% | 16V |
| 2505 | 4822 122 33519 | 470pF  | 10% | 50V |
| 2506 | 4822 122 33519 | 470pF  | 10% | 50V |
| 2507 | 4822 124 40433 | 47µF   | 20% | 25V |
| 2508 | 4822 124 40433 | 47µF   | 20% | 25V |
| 2511 | 4822 124 40433 | 47µF   | 20% | 25V |
| 2512 | 4822 124 40433 | 47µF   | 20% | 25V |
| 2513 | 4822 122 33519 | 470pF  | 10% | 50V |
| 2514 | 4822 122 33519 | 470pF  | 10% | 50V |
| 2515 | 4822 124 40433 | 47µF   | 20% | 25V |
| 2516 | 4822 121 51387 | 10nF   | 20% | 16V |
| 2521 | 4822 124 22263 | 220µF  | 20% | 25V |
| 2522 | 4822 124 22263 | 220µF  | 20% | 25V |
| 2523 | 4822 121 51387 | 10nF   | 20% | 16V |
| 2524 | 4822 124 40433 | 47µF   | 20% | 25V |
| 2541 | 4822 124 40242 | 1µF    | 20% | 63V |
| 2543 | 4822 126 12882 | 100nF  | 20% | 50V |
| 2544 | 4822 126 11585 | 22nF   | 20% | 50V |
| 2545 | 4822 121 51387 | 10nF   | 20% | 16V |

**RESISTORS**

|        |                |       |    |       |
|--------|----------------|-------|----|-------|
| 3251 ▲ | 4822 053 10471 | 470Ω  | 5% | 1W    |
| 3252 ▲ | 4822 053 10471 | 470Ω  | 5% | 1W    |
| 3253   | 4822 116 52257 | 22kΩ  | 5% | 0,5W  |
| 3254   | 4822 116 52283 | 4,7kΩ | 5% | 0,5W  |
| 3255   | 4822 116 52256 | 2,2kΩ | 5% | 0,16W |
| 3256   | 4822 050 11002 | 1kΩ   | 5% | 0,2W  |
| 3257 ▲ | 4822 116 52283 | 4,7kΩ | 5% | 0,5W  |
| 3258   | 4822 116 52283 | 4,7kΩ | 5% | 0,5W  |
| 3260 ▲ | 4822 052 10568 | 5,6Ω  | 5% | 0,33W |
| 3500   | 4822 116 52289 | 5,6kΩ | 5% | 0,16W |
| 3501   | 4822 116 83864 | 10kΩ  | 5% | 0,5W  |
| 3502   | 4822 116 52175 | 100Ω  | 5% | 0,5W  |
| 3503   | 4822 116 52175 | 100Ω  | 5% | 0,5W  |
| 3504   | 4822 116 52175 | 100Ω  | 5% | 0,5W  |
| 3505   | 4822 116 52175 | 100Ω  | 5% | 0,5W  |
| 3506   | 4822 116 52175 | 100Ω  | 5% | 0,5W  |
| 3507   | 4822 116 52283 | 4,7kΩ | 5% | 0,5W  |
| 3508   | 4822 116 52283 | 4,7kΩ | 5% | 0,5W  |
| 3509   | 4822 116 52283 | 4,7kΩ | 5% | 0,5W  |
| 3510   | 4822 116 52283 | 4,7kΩ | 5% | 0,5W  |

**RESISTORS**

|      |                |       |    |       |
|------|----------------|-------|----|-------|
| 3511 | 4822 116 52256 | 2,2kΩ | 5% | 0,16W |
| 3512 | 4822 116 52256 | 2,2kΩ | 5% | 0,16W |
| 3513 | 4822 116 83884 | 47kΩ  | 5% | 0,16W |
| 3514 | 4822 116 83884 | 47kΩ  | 5% | 0,16W |
| 3515 | 4822 116 52175 | 100Ω  | 5% | 0,5W  |
| 3527 | 4822 116 52256 | 2,2kΩ | 5% | 0,16W |
| 3532 | 4822 116 83874 | 220kΩ | 5% | 0,5W  |
| 3534 | 4822 116 83864 | 10kΩ  | 5% | 0,5W  |
| 3535 | 4822 116 52289 | 5,6kΩ | 5% | 0,16W |
| 3537 | 4822 116 83872 | 220Ω  | 5% | 0,5W  |
| 3538 | 4822 116 83872 | 220Ω  | 5% | 0,5W  |
| 3539 | 4822 050 11002 | 1kΩ   | 5% | 0,2W  |
| 3540 | 4822 050 11002 | 1kΩ   | 5% | 0,2W  |
| 3541 | 4822 050 11002 | 1kΩ   | 5% | 0,2W  |
| 3542 | 4822 050 11002 | 1kΩ   | 5% | 0,2W  |
| 3543 | 4822 050 11002 | 1kΩ   | 5% | 0,2W  |
| 3544 | 4822 050 11002 | 1kΩ   | 5% | 0,2W  |
| 3545 | 4822 050 11002 | 1kΩ   | 5% | 0,2W  |
| 3547 | 4822 050 11002 | 1kΩ   | 5% | 0,2W  |
| 3548 | 4822 116 52256 | 2,2kΩ | 5% | 0,16W |
| 3556 | 4822 116 52176 | 10Ω   | 5% | 0,5W  |
| 3557 | 4822 052 10688 | 6,8Ω  | 5% | 0,33W |
| 3557 | 4822 052 10688 | 6,8Ω  | 5% | 0,33W |

**DIODES**

|      |                |            |
|------|----------------|------------|
| 6250 | 4822 130 34379 | BZX79-C27  |
| 6251 | 4822 130 34174 | BZX79-B4V7 |
| 6252 | 4822 130 31878 | 1N4003G    |
| 6253 | 4822 130 31878 | 1N4003G    |
| 6254 | 4822 130 31878 | 1N4003G    |
| 6255 | 4822 130 31878 | 1N4003G    |
| 6256 | 4822 130 31878 | 1N4003G    |
| 6257 | 4822 130 31878 | 1N4003G    |
| 6258 | 4822 130 31878 | 1N4003G    |
| 6259 | 4822 130 31981 | BZX79-C3V9 |
| 6260 | 4822 130 31878 | 1N4003G    |
| 6500 | 4822 130 30621 | 1N4148     |

**TRANSISTORS**

|      |                |          |
|------|----------------|----------|
| 7250 | 4822 130 41327 | BC327-40 |
| 7252 | 5322 130 60068 | BC558C   |
| 7500 | 4822 130 41327 | BC327-40 |
| 7501 | 5322 130 60068 | BC558C   |
| 7504 | 4822 130 44568 | BC557B   |
| 7507 | 4822 130 41344 | BC337-40 |
| 7508 | 4822 130 41344 | BC337-40 |
| 7509 | 4822 130 41344 | BC337-40 |
| 7510 | 4822 130 41344 | BC337-40 |

**INTEGRATED CIRCUITS**

|        |                |             |              |
|--------|----------------|-------------|--------------|
| 7251 ▲ | 4822 209 80817 | L7805CV     | 5V REGULATOR |
| 7502   | 4822 209 33252 | TDA1549T/N1 | DAC          |
| 7505   | 4822 209 83274 | NJM4560D    | DUAL OP. AMP |

**ELECTRICAL PARTSLIST FRONT BOARD****MISCELLANEOUS**

|      |                |                                |
|------|----------------|--------------------------------|
| 1800 | 4822 135 00234 | DISPLAY                        |
| 1810 | 4822 265 11183 | CON. FLEX FOIL 4PIN SIDE ENTRY |
| 1820 | 4822 276 13114 | TACT SWITCH                    |
| 1821 | 4822 276 13114 | TACT SWITCH                    |
| 1822 | 4822 276 13114 | TACT SWITCH                    |

|      |                |             |
|------|----------------|-------------|
| 1823 | 4822 276 13114 | TACT SWITCH |
| 1824 | 4822 276 13114 | TACT SWITCH |
| 1825 | 4822 276 13114 | TACT SWITCH |
| 1826 | 4822 276 13114 | TACT SWITCH |
| 1827 | 4822 276 13114 | TACT SWITCH |

|      |                |             |
|------|----------------|-------------|
| 1828 | 4822 276 13114 | TACT SWITCH |
| 1829 | 4822 276 13114 | TACT SWITCH |
| 1830 | 4822 276 13114 | TACT SWITCH |
| 1831 | 4822 276 13114 | TACT SWITCH |
| 1832 | 4822 276 13114 | TACT SWITCH |

|      |                |                              |
|------|----------------|------------------------------|
| 1840 | 4822 276 13114 | TACT SWITCH                  |
| 7810 | 4822 130 10165 | GP1U28XP, IR EYE             |
| 8002 | 4822 320 12385 | FLEX FOIL 4P 100mm (CD Text) |

**CAPACITORS**

|      |                |       |     |     |
|------|----------------|-------|-----|-----|
| 2800 | 4822 124 22726 | 4,7μF | 20% | 35V |
| 2801 | 4822 124 22726 | 4,7μF | 20% | 35V |
| 2803 | 4822 126 11585 | 22nF  | 20% | 50V |
| 2807 | 4822 124 81029 | 100μF | 20% | 25V |
| 2808 | 4822 126 11585 | 22nF  | 20% | 50V |

|      |                |       |     |     |
|------|----------------|-------|-----|-----|
| 2810 | 4822 121 51387 | 10nF  | 20% | 16V |
| 2811 | 4822 121 51387 | 10nF  | 20% | 16V |
| 2812 | 4822 126 12882 | 100nF | 20% | 50V |
| 2813 | 4822 126 12882 | 100nF | 20% | 50V |
| 2814 | 4822 124 40433 | 47μF  | 20% | 25V |

|      |                |       |    |     |
|------|----------------|-------|----|-----|
| 2815 | 4822 121 42408 | 220nF | 5% | 63V |
|------|----------------|-------|----|-----|

**RESISTORS**

|      |                |     |    |      |
|------|----------------|-----|----|------|
| 3804 | 4822 050 11002 | 1kΩ | 5% | 0,2W |
| 3805 | 4822 050 11002 | 1kΩ | 5% | 0,2W |
| 3806 | 4822 050 11002 | 1kΩ | 5% | 0,2W |
| 3807 | 4822 050 11002 | 1kΩ | 5% | 0,2W |
| 3808 | 4822 116 52195 | 47Ω | 5% | 0,5W |

|      |                |       |    |      |
|------|----------------|-------|----|------|
| 3809 | 4822 116 52234 | 100kΩ | 5% | 0,5W |
| 3810 | 4822 050 11002 | 1kΩ   | 5% | 0,2W |
| 3811 | 4822 050 11002 | 1kΩ   | 5% | 0,2W |
| 3812 | 4822 050 11002 | 1kΩ   | 5% | 0,2W |
| 3813 | 4822 050 11002 | 1kΩ   | 5% | 0,2W |

|      |                |      |    |      |
|------|----------------|------|----|------|
| 3814 | 4822 050 11002 | 1kΩ  | 5% | 0,2W |
| 3815 | 4822 050 11002 | 1kΩ  | 5% | 0,2W |
| 3816 | 4822 050 11002 | 1kΩ  | 5% | 0,2W |
| 3817 | 4822 116 52257 | 22kΩ | 5% | 0,5W |
| 3818 | 4822 116 52257 | 22kΩ | 5% | 0,5W |

|      |                |      |    |      |
|------|----------------|------|----|------|
| 3819 | 4822 116 52257 | 22kΩ | 5% | 0,5W |
| 3820 | 4822 116 52257 | 22kΩ | 5% | 0,5W |
| 3821 | 4822 050 11002 | 1kΩ  | 5% | 0,2W |
| 3822 | 4822 050 11002 | 1kΩ  | 5% | 0,2W |
| 3823 | 4822 050 11002 | 1kΩ  | 5% | 0,2W |

|      |                |      |    |      |
|------|----------------|------|----|------|
| 3829 | 4822 116 52257 | 22kΩ | 5% | 0,5W |
| 3830 | 4822 116 52257 | 22kΩ | 5% | 0,5W |
| 3832 | 4822 050 11002 | 1kΩ  | 5% | 0,2W |
| 3833 | 4822 050 11002 | 1kΩ  | 5% | 0,2W |
| 3834 | 4822 050 11002 | 1kΩ  | 5% | 0,2W |

**RESISTORS**

|      |                |      |    |       |
|------|----------------|------|----|-------|
| 3835 | 4822 050 11002 | 1kΩ  | 5% | 0,2W  |
| 3836 | 4822 116 52257 | 22kΩ | 5% | 0,5W  |
| 3837 | 4822 116 83884 | 47kΩ | 5% | 0,16W |
| 3838 | 4822 050 11002 | 1kΩ  | 5% | 0,2W  |
| 3841 | 4822 050 11002 | 1kΩ  | 5% | 0,2W  |

|      |                |      |    |      |
|------|----------------|------|----|------|
| 3842 | 4822 050 11002 | 1kΩ  | 5% | 0,2W |
| 3844 | 4822 050 11002 | 1kΩ  | 5% | 0,2W |
| 3845 | 4822 050 11002 | 1kΩ  | 5% | 0,2W |
| 3846 | 4822 050 11002 | 1kΩ  | 5% | 0,2W |
| 3847 | 4822 116 52175 | 100Ω | 5% | 0,5W |

|      |                |      |    |      |
|------|----------------|------|----|------|
| 3848 | 4822 116 52176 | 10Ω  | 5% | 0,5W |
| 3849 | 4822 050 24708 | 4,7Ω | 1% | 0,6W |

**COILS**

|      |                |                       |
|------|----------------|-----------------------|
| 1844 | 4822 242 72066 | CERAMIC FILTER 8,0MHz |
| 5801 | 4822 156 31058 | FILTER DIGITAL OUT    |
| 5802 | 4822 156 21721 | 2,2μH                 |

**DIODES**

|      |                |         |
|------|----------------|---------|
| 6801 | 4822 130 30621 | 1N4148  |
| 6802 | 4822 130 30621 | 1N4148  |
| 6820 | 4822 130 31878 | 1N4003G |

**TRANSISTORS**

|      |                |        |
|------|----------------|--------|
| 7811 | 4822 130 40959 | BC547B |
|------|----------------|--------|

**INTEGRATED CIRCUITS**

|        |                |                                |
|--------|----------------|--------------------------------|
| 7800 © | 4822 209 16739 | TMP87CP71-83780 MICROPROCESSOR |
|--------|----------------|--------------------------------|