


JVC

SERVICE MANUAL

VIDEO CASSETTE RECORDER **VHS**

HR-D211EM

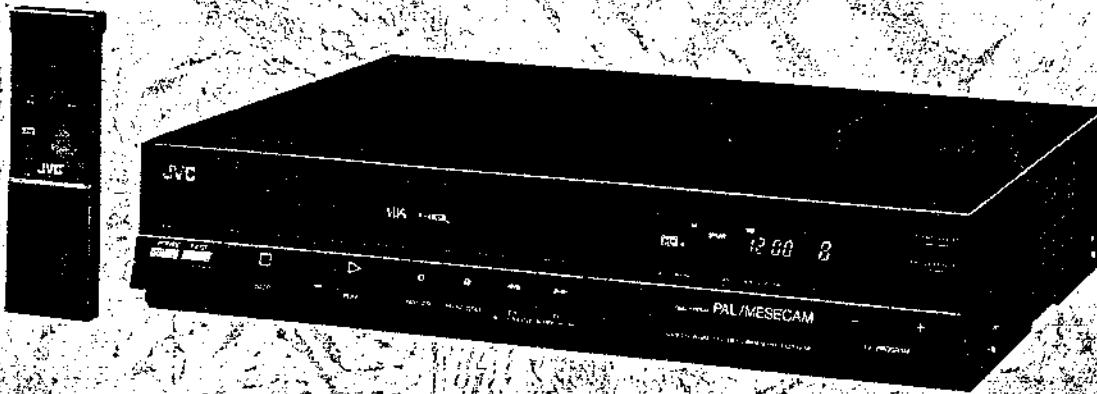

SPECIFICATIONS

Format	VHS PAL standard	Audio	
Recording system	Rotary, slant azimuth two-head helical scan system	Input	Line: -20 dBs, 50 k-ohms, unbalanced
Video signal system	PAL colour and CCIR monochrome signals, 625 lines	Output level	-6 dBs, high impedance load
Tape width	12.65 mm	Output impedance	Less than 1 k-ohm, unbalanced
Playing time	240 min. with E-240 video cassette	Signal-to-noise ratio	More than 40 dB
Temperature		Frequency range	70 Hz to 10,000 Hz
Operating	5°C to 40°C	Timer	14-day/4-programme timer
Storage	-20°C to 60°C	Dimensions	435 mm(W) x 95 mm(H) x 341 mm(D)
Channel coverage	VHF band I, channels 2 - 4 VHF band III, channels 5 - 12 UHF band IV/V, channels 21 - 69	Weight	6.5 kg
Aerial output	UHF channels 32 - 40 (adjustable)	Provided accessories	Aerial cable, Infrared remote control unit, "R6" battery x 2, Plug adapter.
Power consumption	28 watts		
Power requirement	110/127/220/240 V ~ 50/60 Hz		
Video			
Input	0.5 to 2.0 Vp-p, 75 ohms, unbalanced		
Output	1.0 Vp-p, 75 ohms, unbalanced		
Signal-to-noise ratio	43 dB (Rohde & Schwarz noise meter)		
Horizontal resolution	250 lines		

Design and specifications subject to change without notice.


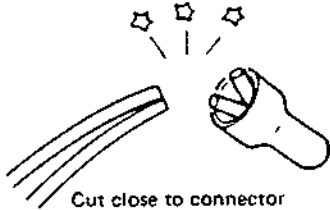
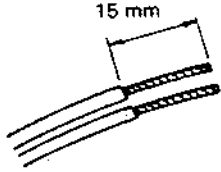
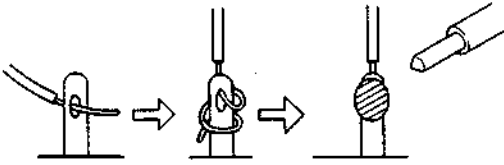
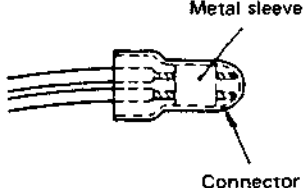
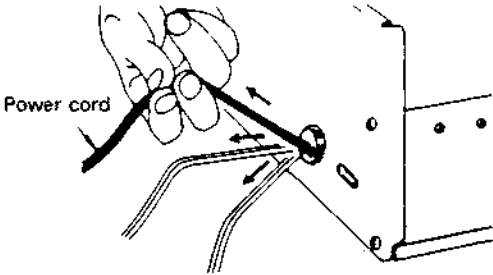
TABLE OF CONTENTS

Section	Title	Page	Section	Title	Page
	Important Safety Precautions				
	INSTRUCTIONS:				
1.	MECHANISM ADJUSTMENT		4.	EXPLODED VIEWS AND PARTS LIST	
1.1	GENERAL	1-1	4.1	STANDARD PART NUMBER CODING	4-1
1.2	MAIN ASSEMBLY REPLACEMENT	1-4	4.2	CABINET ASSEMBLY <M2>	4-2
1.3	ASSEMBLY PROCEDURE OF MECHANISM	1-5	4.3	CHASSIS ASSEMBLY <M3>	4-3
1.4	CONFIRMATION AND ADJUSTMENT	1-6	4.4	MECHANISM ASSEMBLY <M4>	4-4
1.5	TAPE TRANSPORT SYSTEM CONFIRMATION AND ADJUSTMENT	1-7	4.5	RACKING ASSEMBLY <M1>	4-6
1.6	INTERCHANGEABILITY CONFIRMATION AND ADJUSTMENT	1-8			
2.	ELECTRICAL ADJUSTMENTS		5.	ELECTRICAL PARTS LIST	
2.1	PREPARATION	2-5	5.1	STANDARD PARTS NUMBER CODING	5-2
2.2	SERVO CIRCUIT	2-3		POWER TRANSFORMER BOARD ASSEMBLY <01>	6-6
2.3	VIDEO CIRCUIT	2-3		MAIN BOARD ASSEMBLY <03> & <44>	5-6
2.4	AUDIO CIRCUIT	2-4		IF BOARD ASSEMBLY <07>	5-12
2.5	TUNER/IF CIRCUIT	2-5		TUNER CTL BOARD ASSEMBLY <08> <35>	5-13
				AUDIO/CONTROL HEAD BOARD <12>	5-13
				TIMER/DISPLAY BOARD ASSEMBLY <21>	5-14
				OPERATION BOARD ASSEMBLY <22>	5-14
				UPPER DRUM BOARD <41>	5-15
				PRE/REC BOARD ASSEMBLY <43>	5-15
				DECK TERMINAL BOARD ASSEMBLY <51>	5-15
				RELAY BOARD ASSEMBLY <52>	5-16
				REC SAFETY BOARD ASSEMBLY <53>	5-16
				END SENSOR BOARD ASSEMBLY <54>	5-16
				CASSETTE HOUSING BOARD ASSEMBLY <56>	5-16
3.	CHARTS AND DIAGRAMS				
3.1	CIRCUIT BOARD LOCATIONS	3-1			
3.2	GENERAL INFORMATIONS	3-2			
3.3	ABBREVIATIONS USED IN THE SCHEMATIC DIAGRAM	3-3			
3.4	MAIN TYPES OF ACTIVE AND PACKAGE CIRCUIT	3-5			
3.5	BOARD INTERCONNECTION DIAGRAM	3-6			
3.6	IF AND TUNER CTL BLOCK DIAGRAMS	3-7			
3.7	VIDEO BLOCK DIAGRAM	3-8			
3.8	SERVO BLOCK DIAGRAM	3-9			
3.9	AUDIO BLOCK DIAGRAM	3-10			
3.10	MECHANISM CONTROL AND TIMER/DISPLAY BLOCK DIAGRAMS	3-10			
3.11	POWER TRANSFORMER AND REGULATOR SCHEMATIC DIAGRAMS	3-12			
3.12	POWER TRANSFORMER CIRCUIT BOARD	3-13			
3.13	AUDIO SCHEMATIC DIAGRAM	3-14			
3.14	SERVO SCHEMATIC DIAGRAM	3-15			
3.15	MECHANISM CONTROL SCHEMATIC DIAGRAM	3-16			
3.16	DECK TERMINAL SCHEMATIC DIAGRAMS	3-17			
3.17	DECK TERMINAL CIRCUIT BOARDS	3-17			
3.18	VIDEO SCHEMATIC DIAGRAM	3-18			
3.19	MAIN AND VIDEO SUB CIRCUIT BOARDS	3-19			
3.20	PRE/REC SCHEMATIC DIAGRAM	3-20			
3.21	PRE/REC AND UPPER DRUM CIRCUIT BOARDS	3-21			
3.22	IF SCHEMATIC DIAGRAM	3-22			
3.23	IF CIRCUIT BOARD	3-23			
3.24	TUNER CTL SCHEMATIC DIAGRAM	3-24			
3.25	TUNER CTL CIRCUIT BOARD	3-25			
3.26	TIMER/DISPLAY AND MEMORY SCHEMATIC DIAGRAMS	3-26			
3.27	TIMER/DISPLAY OPERATION AND MEMORY CIRCUIT BOARDS	3-27			
3.28	OPERATION SCHEMATIC DIAGRAM	3-28			
3.29	RF CONVERTER AND MIX BOOSTER SCHEMATIC DIAGRAM	3-29			
3.30	REMOTE CONTROL SCHEMATIC DIAGRAM	3-30			

Important Safety Precautions

Prior to shipment from the factory, JVC products are strictly inspected to conform with the recognized product safety and electrical codes of the countries in which they are to be sold. However, in order to maintain such compliance, it is equally important to implement the following precautions when a set is being serviced.

● Precautions during Servicing

<p>1. Locations requiring special caution are denoted by labels and inscriptions on the cabinet, chassis and certain parts of the product. When performing service, be sure to read and comply with these and other cautionary notices appearing in the operation and service manuals.</p>	<p>10. Products using cathode ray tubes (CRTs) In regard to such products, the cathode ray tubes themselves, the high voltage circuits, and related circuits are specified for compliance with recognized codes pertaining to X-ray emission. Consequently, when servicing these products, replace the cathode ray tubes and other parts with only the specified parts. Under no circumstances attempt to modify these circuits. Unauthorized modification can increase the high voltage value and cause X-ray emission from the cathode ray tube.</p>
<p>2. Parts identified by the  symbol and shaded (▨) parts are critical for safety. Replace only with specified part numbers. Note: Parts in this category also include those specified to comply with X-ray emission standards for products using cathode ray tubes and those specified for compliance with various regulations regarding spurious radiation emission.</p>	<p>11. Crimp type wire connector In such cases as when replacing the power transformer in sets where the connections between the power cord and power transformer primary lead wires are performed using crimp type connectors, if replacing the connectors is unavoidable, in order to prevent safety hazards, perform carefully and precisely according to the following steps.</p> <ol style="list-style-type: none"> 1) Connector part number : E03830-001 2) Required tool : Connector crimping tool of the proper type which will not damage insulated parts. 3) Replacement procedure (1) Remove the old connector by cutting the wires at a point close to the connector. Important : Do not reuse a connector (discard it).
<p>3. Use specified internal wiring. Note especially: 1) Wires covered with PVC tubing 2) Double insulated wires 3) High voltage leads</p>	 <p>Cut close to connector</p> <p>Fig. 3</p> <p>(2) Strip about 15 mm of the insulation from the ends of the wires. If the wires are stranded, twist the strands to avoid frayed conductors.</p>
<p>4. Use specified insulating materials for hazardous live parts. Note especially: 1) Insulation Tape 2) PVC tubing 3) Spacers 4) Insulation sheets for transistors</p>	 <p>15 mm</p> <p>Fig. 4</p>
<p>5. When replacing AC primary side components (transformers, power cords, noise blocking capacitors, etc.) wrap ends of wires securely about the terminals before soldering.</p>  <p>Fig. 1</p>	<p>(3) Align the lengths of the wires to be connected. Insert the wires fully into the connector.</p>  <p>Metal sleeve</p> <p>Connector</p> <p>Fig. 5</p>
<p>6. Observe that wires do not contact heat producing parts (heat-sinks, oxide metal film resistors, fusible resistors, etc.)</p>	<p>9. Also check areas surrounding repaired locations.</p>
<p>7. Check that replaced wires do not contact sharp edged or pointed parts.</p> <p>8. When a power cord has been replaced, check that 10–15 kg of force in any direction will not loosen it.</p>  <p>Power cord</p> <p>Fig. 2</p>	<p>I</p>

(4) As shown in Fig. 6, use the crimping tool to crimp the metal sleeve at the center position. Be sure to crimp fully to the complete closure of the tool.

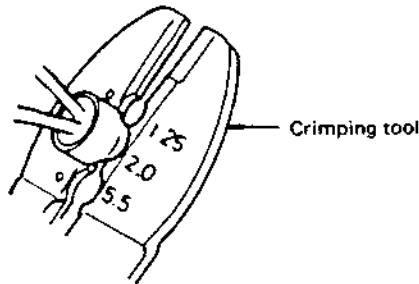


Fig. 6

(5) Check the four points noted in Fig. 7.

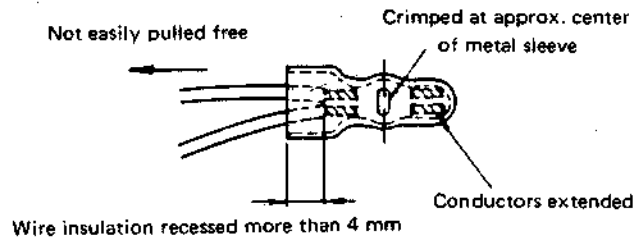


Fig. 7

● Safety Check after Servicing

Examine the area surrounding the repaired location for damage or deterioration. Observe that screws, parts and wires have been returned to original positions. Afterwards, perform the following tests and confirm the specified values in order to verify compliance with safety standards.

1. Insulation resistance test

Confirm the specified insulation resistance or greater between power cord plug prongs and externally exposed parts of the set (RF terminals, antenna terminals, video and audio input and output terminals, microphone jacks, earphone jacks, etc.). See table below.

2. Dielectric strength test

Confirm specified dielectric strength or greater between power cord plug prongs and exposed accessible parts of the set (RF terminals, antenna terminals, video and audio input and output terminals, microphone jacks, earphone jacks, etc.). See table below.

3. Clearance distance

When replacing primary circuit components, confirm specified clearance distance (d), (d') between soldered terminals, and between terminals and surrounding metallic parts. See table below.

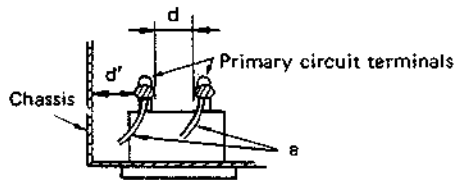


Fig. 8

4. Leakage current test

Confirm specified or lower leakage current between B (earth ground, power cord plug prongs) and externally exposed accessible parts (RF terminals, antenna terminals, video and audio input and output terminals, microphone jacks, earphone jacks, etc.).

Measuring Method: (Power ON)

Insert load Z between B (earth ground, power cord plug prongs) and exposed accessible parts. Use an AC voltmeter to measure across both terminals of load Z. See figure and following table.

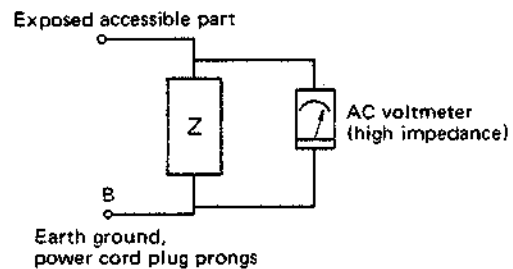


Fig. 9

AC Line Voltage	Region	Insulation Resistance	Dielectric Strength	Clearance Distance (d), (d')
100 V	Japan	$\geq 1 \text{ M}\Omega/500 \text{ V DC}$	1 kV 1 minute	$\geq 3 \text{ mm}$
110 to 130 V	USA & Canada	—	900 V 1 minute	$\geq 3.2 \text{ mm}$
*110 to 130 V 200 to 240 V	Europe Australia	$\geq 10 \text{ M}\Omega/500 \text{ V DC}$	4 kV 1 minute	$\geq 6 \text{ mm (d)}$ $\geq 8 \text{ mm (d')}$ (a: Power cord)

*Class II model only.

Table 1 Ratings for selected areas

AC Line Voltage	Region	Load Z	Leakage Current (i)	Earth Ground (b) to:
100 V	Japan		$i \leq 1 \text{ mA rms}$	Exposed accessible parts
110 to 130 V	USA & Canada		$i \leq 0.5 \text{ mA rms}$	Exposed accessible parts
110 to 130 V 220 to 240 V	Europe Australia		$i \leq 0.7 \text{ mA peak}$ $i \leq 2 \text{ mA dc}$	Antenna earth terminals
			$i \leq 0.7 \text{ mA peak}$ $i \leq 2 \text{ mA dc}$	Other terminals


Table 2 Leakage current ratings for selected areas

Note: This table is unofficial and for reference only. Be sure to confirm the precise values for your particular country and locality.

Thank you for purchasing the JVC HR-D211EM Video Cassette Recorder. Before use, read this instruction booklet carefully for obtaining the best results from your new unit.
Diagrams are on the reverse side of this page. Fold it out and keep it opened so that you can refer to the diagrams when you are reading this booklet.

CONTENTS

Safety precautions	1	Recording TV programmes	9
Features	2	Index search and counter search	10
Precautions	3	Elapsed recording time indicator	10
Controls, indicators and connectors	4	Next-function memory	10
Connections	5	Automatic timer recording	11
Video channel setting	5	Recording from an external source	12
Clock setting	6	In case of difficulty	13
Loading and unloading a cassette	6	Head cleaning	13
Operating the built-in tuner	7	Specifications	14
Playing back a video cassette	8		

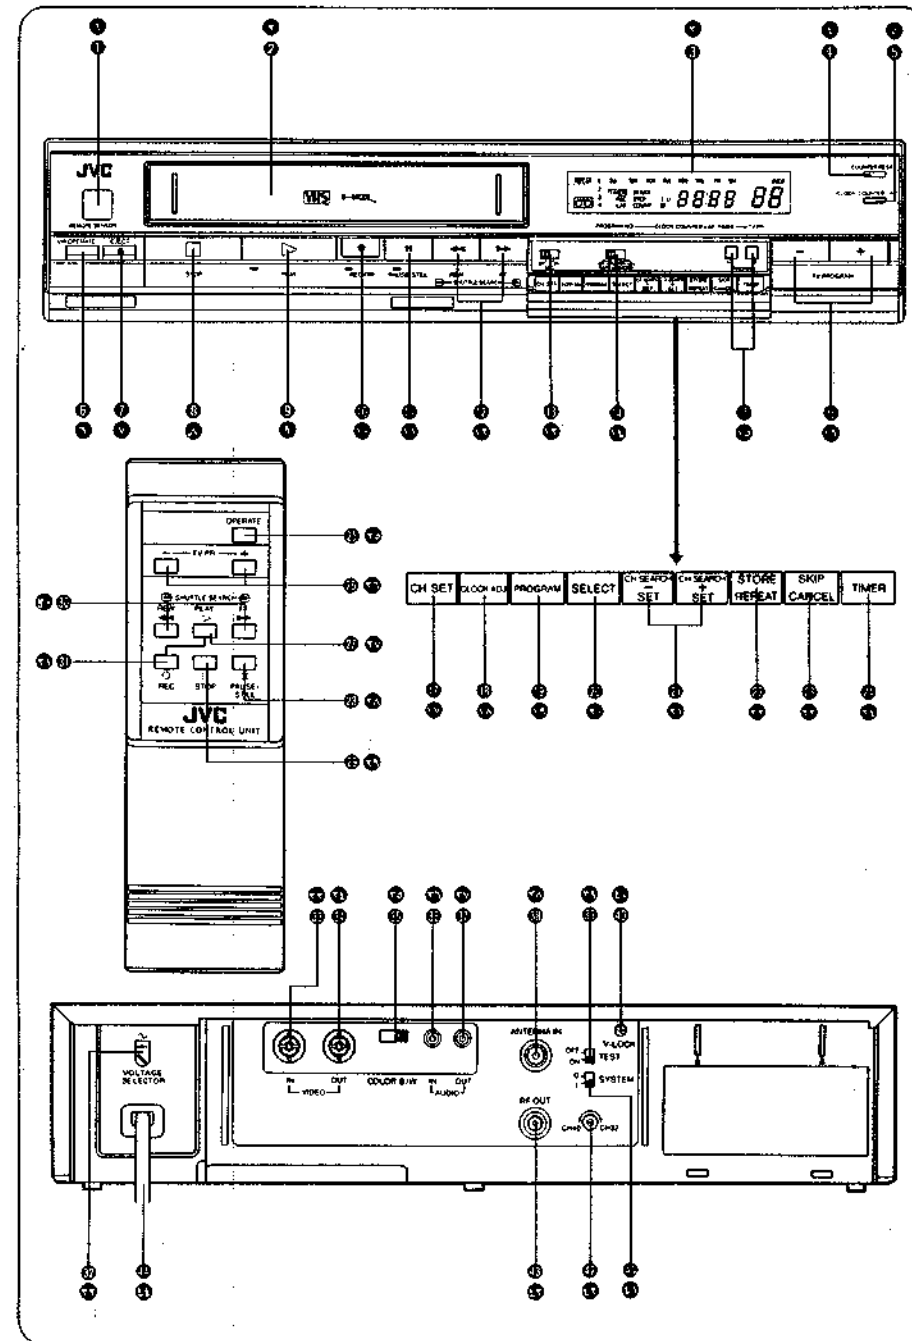

SAFETY PRECAUTIONS

The rating plate and the safety caution are on the rear of the unit.

WARNING – DANGEROUS VOLTAGE INSIDE
WARNING: TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS UNIT TO RAIN OR MOISTURE.

IMPORTANT (In the United Kingdom)
Mains Supply (240 V~, 50 Hz only)

IMPORTANT

Do not make any connection to the Larger Terminal coded E or Green. The wires in the mains lead are coloured in accordance with following code:



If these colours do not correspond with the terminal identifications of your plug, connect as follows:
Blue wire to terminal coded N (Neutral) or coloured Black.
Brown wire to terminal coded L (Live) or coloured Red.
If in doubt – consult a competent electrician.

Note

We recommend that you should disconnect the AC cord from the outlet.

CAUTION

- Disconnect the mains plug from the supply socket when not in use.
- When you are not using the HR-D211EM for a long period of time, it is recommended that you disconnect the power cord from the AC outlet.
- Dangerous voltage inside. Refer internal servicing to qualified service personnel. To prevent electric shock or fire hazard, remove the power cord from the AC outlet prior to connecting or disconnecting any signal lead or aerial.



- Only cassettes marked "VHS" can be used with this video cassette recorder.
- HQ VHS is compatible with existing VHS equipment.

FOR YOUR SAFETY (in Australia)
Install any external aerial to AS 1417.1

Omkopplaren OPERATE på denna apparat är sekundärt kopplad och skiljer inte apparaten från nätet i läge OPERATE OFF.

The OPERATE button does not completely shut off mains power from the unit, but switches operating current on and off.

BEMÆRK: I stilling OFF er apparatet stadig forbundet med lysnettet. Hvis det ønskes fuldstændig afbrudt skal netledningen trækkes ud.

This unit is produced to comply with Directive 82/499/EEC.

POWER SYSTEM

Connection to the mains supply

The operating voltage of this set is preset to 220 V~ at the factory.

Before connecting to mains, check that the voltage selector on the rear panel is set to the same voltage as your local mains supply.

Adapting to local power line

This set operates on 110, 127, 220 or 240 V~.

If the preset voltage is different from the power line voltage in your area, reset the voltage selector by inserting a screwdriver into the slot of the voltage selector and turning it until the correct voltage is displayed.

FEATURES

High-quality pictures

- HQ (High Quality) System technologies with a Detail Enhancer, and 20 % higher white clip level.

Advanced tape access features

- VHS Index Search System facilitates location of the beginning of each recording by automatically marking an index code on the control track of the tape; index codes can be detected in the Shuttle Search mode. This system is based on the newly standardised CTL coding system for VHS.
- Counter search for returning to a designated point on a tape.

Convenient automatic functions

- **Auto play function:** insert a cassette (with safety tab removed), and playback will start automatically.
- **Next-function memory** allows a command to be entered immediately after pressing REW (or FF), with the second command "remembered" and performed automatically after the tape rewinds to its beginning or fast-forwards to the counter reading of "0000".
 - Memory play: for automatic start of playback.
 - Memory eject: to eject the cassette after rewind, without waiting for completion of rewind.
 - Memory timer standby: to engage the timer recording standby mode after rewind.
 - Memory power-off: to turn the power off after rewind.
- Automatic backspace editing.
- Auto-power-on convenience.
- Power-off ejection.
- Automatic rewind at the end of tape.

Other value features

- PAL/MESECAM dual-system.
- Multi-voltage power source adaptable to 110/127/220/240 V~.
- Voltage synthesized tuner with 32-channel preset capacity; can receive VHF and UHF channels.
- 14-Day/4-event programmable timer.
- Overlapped programme warning: programme numbers on the FDP blink when the preset time spans of the programmes overlap.
- Timer programme review to show the preset programme contents in the order of execution.
- Infrared remote control.
- On-screen record-pause mode display with elapsed time indicated by shrinking white bar.
- Electronic tracking controls.
- Instant timer recording function using the REC/ITR button.
- Shuttle Search with latch function: with the Shuttle Search button locked or held depressed, offers high-speed playback at 9 times normal speed in either direction.
- Still and frame advance.
- Comprehensive fluorescent display.
- Elapsed recording time indicator.


PRECAUTIONS

Handling and storage

- Avoid using the recorder under the following conditions:
 - extremely hot, cold or humid places,
 - dusty places,
 - near appliances generating strong magnetic fields,
 - places subject to vibrations, and
 - poorly ventilated places.
- Be careful of moisture condensation. Avoid using the recorder immediately after moving from a cold place to a warm place. The water vapour in warm air will condense on the still-cold video head drum and tape guides and may cause damage to the tape and the recorder.
- Handle the recorder carefully.
 - Do not block the ventilation openings.
 - Do not place anything heavy on the recorder.
 - Do not place anything which might spill and cause trouble on the top cover of the recorder.
 - Use in horizontal (flat) position only.
- In case of transportation,
 - Avoid violent shocks to the recorder during packing and transportation.
 - Before packing, be sure to remove the cassette from the recorder.

Video cassettes

- This recorder employs VHS-type cassettes only. E-240 for 4 hours, E-180 for 3 hours, E-120 for 2 hours, E-90 for 1 hour and 30 minutes, E-60 for 1 hour and E-30 for 30 minutes of recording.
- Video cassettes are equipped with a safety tab to prevent accidental erasure. When the tab is removed, recording cannot be performed. If you wish to record on a cassette whose tab has already been removed, use adhesive tape to block the hole.

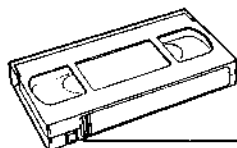

Safety tab

- Avoid exposing the cassettes to direct sunlight. Keep them away from heaters.
- Avoid extreme humidity, violent vibrations or shocks, strong magnetic fields (near a motor, transformer or magnet) and dusty places.
- Place the cassettes in cassette cases and position vertically.

Moisture condensation

- If you pour a cold liquid into a glass, water vapour in the air will condense on the surface of the glass. This is called moisture condensation.
- Moisture condensation on the head drum, one of the most crucial parts of the video recorder, will cause damage to the tape.
- Moisture condensation is apt to occur under the following conditions:
 - when the recorder is moved from a cold place to a warm place, and
 - under extremely humid conditions.
- In conditions where moisture condensation may occur, keep the power cord plugged in an AC outlet and the OPERATE switch set to ON; this would help prevent condensation from occurring. When condensation has occurred, it will not evaporate quickly once the power is switched on. Wait a few hours for the recorder to become dry.

Operation

- When a cassette is loaded, the power is switched on automatically.
- The cassette can be unloaded even when the power is off. Pressing the EJECT button turns the power on and, after ejection of the cassette, shuts it off automatically in this case.
- As long as the TIMER button is engaged with the TIMER indicator lit, the OPERATE and EJECT buttons have no effect and unloading of a cassette is not possible. If a cassette has not yet been inserted, simply insert a cassette; the power will be switched on to load the cassette properly and, after completion of automatic loading, the Timer Recording Standby mode will be engaged with power off.

Remote control unit

- Avoid violent shocks, especially take care not to drop the unit.
- Take care not to allow liquid to spill into the unit.
- Do not place heavy objects on the unit.
- Avoid leaving the unit in places subject to direct sunlight or extremely high temperatures.

WARNING


1. This PAL/MESECAM recorder can record SECAM broadcasts in the Middle East and play back those SECAM recordings made with this recorder.
2. SECAM tapes recorded with this recorder will present black-and-white pictures when they are played back on SECAM-VHS recorders.
3. Tapes recorded with SECAM-VHS recorders or pre-recorded SECAM tapes will present black-and-white pictures when they are played back with this recorder.

IMPORTANT: It is permissible to record television programmes only in the event that third party copyrights and other rights are not violated.

CONTROLS, INDICATORS AND CONNECTORS Refer to the diagrams on the front foldout page.

Front Panel

- 1 Infrared beam receiving window (REMOTE SENSOR)
- 2 Cassette loading slot
Insert a VHS cassette. The door will close and the "cassette loaded" indicator will appear on the FDP (fluorescent display panel).
- 3 Fluorescent display panel
Fully explained in relevant sections.

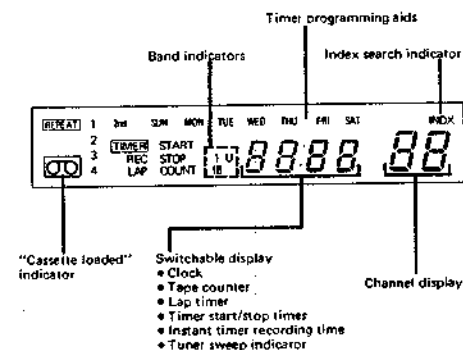

- 4 COUNTER RESET button
Press to reset the counter reading or lap time to "0000" or "0:00" respectively.
- 5 CLOCK/COUNTER/LAP button
Press to switch the display among clock, tape counter (COUNT) and lap time (LAP). Also used to change the display from the timer programming mode to the clock mode.
- 6 OPERATE button with LED indicator
Press to apply operating power to the recorder. The indicator will light. Loading a cassette also turns the power on.
- 7 Cassette EJECT button
- 8 STOP button
Press to stop the tape.
- 9 PLAY button with LED indicator
Press to play back the tape or cancel the Pause/Still and Search modes.
- 10 REC/ITR button with LED indicator
Press once to start recording. Pressing it again engages the instant Timer Recording mode. See page 9.
- 11 PAUSE/STILL button with LED indicator
Press to stop the tape temporarily to avoid recording of unwanted material or to view a still picture. The still picture can be advanced step by step or continuously.
- 12 REW and FF (SHUTTLE SEARCH) buttons
Press while in the Stop mode to rewind or fast-forward the tape; press while in the Play mode to view the speeded-up picture for programme search. See pages 8 and 10.
- 13 AFC switch
Normally set to ON.

- 14 TAPE MEMORY switch
COUNTER: The tape will stop automatically at the counter reading of about "0000" in the Rewind or Fast Forward mode. See page 10.
INDEX: The index code marked at the beginning of each recording will be detected in the Shuttle Search mode for automatic start of playback. See page 10.
OFF: Set to OFF if you are not going to use either of the two functions.
- 15 TRACKING +/- buttons
Press either button to minimise noise bars, if observed, during playback.
- 16 TV PROGRAM +/- buttons
Press either button to select a desired channel.
- 17 CH SET button
Press this button to engage or disengage the tuner preset mode (see page 7).
- 18 CLOCK ADJ button
Press to adjust the clock.
- 19 PROGRAM button
Press to programme the timer.
- 20 SELECT button
Press to select the band in tuner presetting; press to select the item to be set in clock setting or timer programming.
- 21 CH SEARCH/SET +/- buttons
Press to search for broadcast programmes in tuner presetting; press to set to the correct data in clock setting or timer programming.
- 22 STORE/REPEAT button
Press to store the tuned-in channel in tuner presetting; press to enter the repeat command in timer programming.
- 23 SKIP/CANCEL button
Press to skip unnecessary channels in tuner presetting; press to cancel the preset programme in timer programming.
- 24 TIMER button
Press to engage the timer recording standby mode.

Remote Control Unit

- 25 OPERATE button
Press to turn the recorder power on or off.
- 26 TV PR. +/- buttons
Press either button to select a desired channel.
- 27 PLAY button
- 28 PAUSE/STILL button
- 29 STOP button
- 30 REW and FF (SHUTTLE SEARCH) buttons
- 31 REC button
Press together with the PLAY button to start recording.

Operating distance for remote control unit

- The maximum operating distance is about 8 m.
- Installing the batteries
 - Insert two "RB"-size batteries (provided) into the battery compartment on the rear of the remote control unit, observing correct polarity.

Rear Panel

① VOLTAGE SELECTOR

The preset voltage is indicated in the window. If it differs from your local power line voltage, reset it. See "Power System" on page 1.

② VIDEO IN connector

Connect the video output of other video equipment such as another video tape recorder for recording video signals.

③ VIDEO OUT connector

Video signals being recorded or played back are available from this connector.

④ Video mode select switch

This applies to both recording and playback.

COLOR: Set to this position when the input or playback video signal is in colour.

B/W: Set to this position when the input or playback video signal is monochrome.

⑤ AUDIO IN connector

Connect an audio tape recorder or other audio sources for recording sound.

⑥ AUDIO OUT connector

Audio signals can be obtained from this connector.

⑦ Aerial input connector (ANTENNA IN)

Connect an aerial to this connector.

⑧ TEST signal switch

Set to ON when tuning your TV receiver for the VIDEO CHANNEL. A test signal in the form of two vertical white bars will be available.

⑨ V-LOCK adjustment screw

When operating in the Still mode, adjust this screw to eliminate any vertical vibration of the picture. (For any inquiry about this adjustment, contact a JVC dealer.)

⑩ SYSTEM select switch

Selects the system of the built-in RF converter.

Select G or I depending on the system of your television receiver.

This switch is preset to G prior to shipment.

⑪ RF converter frequency adjustment screw


See below.

⑫ RF OUT connector

Connect to the aerial connector of a TV receiver through the aerial cable (provided).

⑬ Power cord

CONNECTIONS

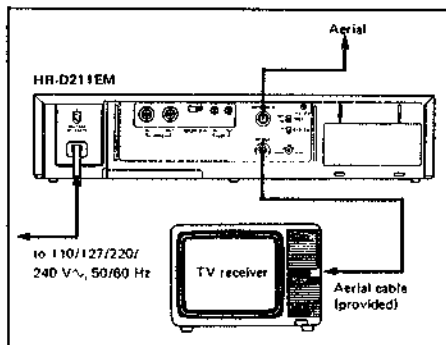

1. Remove the aerial cable from the TV receiver and reconnect it to the recorder's ANTENNA IN ⑦ connector. The recorder is then ready to record off-air programmes.

2. Connect the recorder's RF OUT connector ⑫ to the TV receiver's aerial terminal using the provided aerial cable. The TV receiver is then ready to receive broadcast programmes as well as accommodate video cassette playback.

• Use the plug adapter (provided) depending on the type of your AC wall outlet.



VIDEO CHANNEL SETTING

1 Press the OPERATE button ① to turn the power on. Turn on the TV receiver.

2 Set the TEST switch ⑧ to ON.

3 Adjust your TV receiver in the vicinity of UHF channel 36 until you bring in the two white signal bars on the screen as illustrated. This is your VIDEO CHANNEL.



4 Reset the TEST switch to OFF.

Notes:

• If some interference noise is seen on the screen because of broadcasts on neighbouring channels or if your preset broadcasts should be affected in picture quality, it is necessary to shift the RF converter output frequency from that of channel 36. Consult your JVC dealer for making this adjustment.


• Video channel setting is also possible using a prerecorded VHS video cassette. Play back the tape and tune the TV receiver to obtain clear pictures and sound while monitoring the playback picture on the TV screen.

• If your TV receiver is not provided with an AFC circuit, perform fine tuning of the TV receiver when you are actually viewing video cassettes.


• Set the SYSTEM select switch ⑩ to the appropriate position.

CLOCK SETTING

Plug the recorder into an AC outlet. The display shows a blinking SUN 0:00.

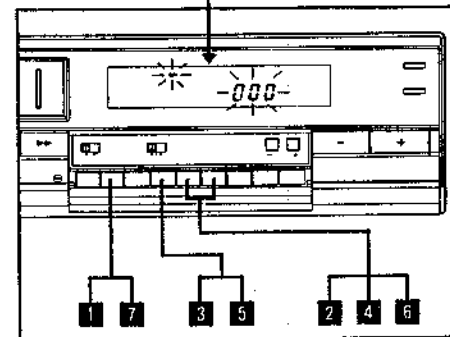

- 1 Press CLOCK ADJ ⑤. The indicated day will blink.
- 2 Press SET ② until the correct day indication appears.
- 3 Press SELECT ③. The indicated hour digits will blink.
- 4 Press SET until the correct hour indication appears.
- 5 Press SELECT. The indicated minute digits will blink.
- 6 Press SET until the correct minute indication appears.
- 7 Press CLOCK ADJ at the exact instant of the time signal and clock will be set accurately to the present time.



Power failure indicator

The blinking SUN 0:00 (initial condition of the display) is also a power failure indicator, showing that there has been a power failure exceeding 10 seconds. Re-adjusting the time restores the normal condition of the clock display.


Note:

- Clock setting is not possible in the timer recording standby mode. First check to see that the TIMER indicator on the FDP is not lit.

LOADING AND UNLOADING A CASSETTE

Loading

Insert a cassette as illustrated. Be sure to insert it firmly into the slot; otherwise, it will be automatically ejected.

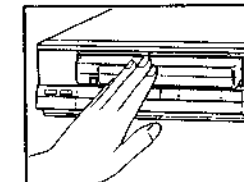

- The automatic loading mechanism will operate only when the cassette is inserted correctly.
- With a cassette inserted, the "cassette loaded" indicator will appear on the FDP.

Unloading

Press the EJECT button ⑦.

CAUTION

- If unloading of the cassette is not possible, check to see whether the TIMER indicator is lit. If so, press the TIMER button so the TIMER indicator extinguishes.
- Do not attempt to pull out the cassette once automatic loading has started.
- Do not insert fingers or any foreign object beyond the door of the cassette loading slot, as this could lead to injury or damage to the mechanism. Show special caution with children.

AUTO POWER-ON AND AUTO PLAY SYSTEM


- The cassette can be loaded even when the power has not been turned on. Inserting a cassette into the loading slot turns the power on automatically.
- Inserting a cassette, with its safety tab removed, turns the recorder on and playback of the cassette begins automatically.

POWER-OFF EJECT SYSTEM






- The cassette can be unloaded even after the power has been turned off. Pressing the EJECT button turns the power on automatically and, after ejection of the cassette, shuts it off automatically.

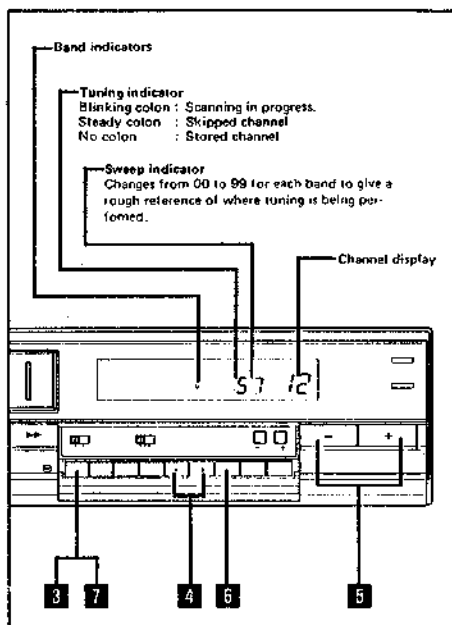OPERATING THE BUILT-IN TUNER


The HR-D211EM incorporates a voltage synthesized tuner with 32-channel preset capacity. Only channels stored can be called up with the TV PROGRAM buttons in modes other than Channel Set. In the Channel Set mode, all channel numbers including skipped ones are successively displayed so that they can be stored or skipped.



Storing channels

- 1 Turn on the TV receiver and adjust it to your video channel.
- 2 Turn on the recorder.
- 3 Press CH SET .
- 4 Press SELECT  until the correct band indication appears.
- 5 Press CH SEARCH  until the desired broadcast signal is detected; use either the "-" or "+" button depending on the direction of search.
 - The tuning indicator "colon" will blink and the sweep indicator will count down or up.
- 6 Press TV PROGRAM  to select the channel to be stored.
- 7 Press STORE . The "colon" will disappear.
 - Repeat steps 4 through 7 for all necessary channels.
- 8 Press CH SET to disengage the Channel Set mode.


Skipping channels



- 1 Press TV PROGRAM to select the channel to be skipped.
- 2 Press CH SET.
 - The band indicator and the sweep indicator corresponding to the broadcast stored in that channel will appear.
- 3 Press SKIP . The steady "colon" will appear.
- 4 Press CH SET to disengage the Channel Set mode.

Available channels in each band

Band indicator	Channels
I	VHF band I, channels 2 - 4
III	VHF band III, channels 5 - 12
U	UHF band tV/V, channels 21 - 69

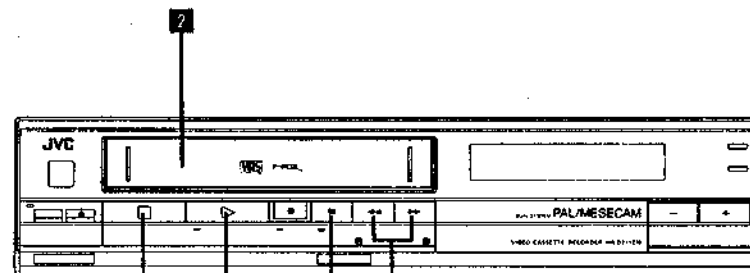
PLAYING BACK A VIDEO CASSETTE




- 1 Turn the TV receiver on and adjust it to your video channel.
- 2 Load a pre-recorded cassette.
 - Power will be switched on automatically.
 - When the cassette loaded has no safety tab, playback will start automatically.
- 3 Press PLAY .
- 4 Press STOP  at the end of the programme.
 - The tape will be rewound automatically when its end is reached and the recorder will enter the Stop mode.

SHUTTLE SEARCH


Shuttle Search allows high-speed playback at 9 times normal speed in either direction.

1. Press either REW or FF SHUTTLE SEARCH  during playback.
2. To cancel the Search mode, press PLAY.
 - For briefer scanning, keep the SHUTTLE SEARCH button pressed for more than 2 seconds; when you release the button, the Search mode will be cancelled.

STILL PICTURE


1. Press PAUSE/STILL  during playback.
 2. To advance the still picture, press PAUSE/STILL a number of times.
 - Keeping this button pressed continuously advances the picture to give a slow-motion effect.
 3. To cancel the Still mode, press PLAY.
- Notes:
- When the Still mode continues for longer than about 5 minutes, the Stop mode will be entered automatically.
 - With some televisions, the still picture may be unstable. This is not due to any defect of the unit.

Tracking Adjustment

Noise bars may appear on the screen if you play back a tape which was recorded using another recorder. For correction, press either TRACKING control . Tracking will be reset to the preset standard each time the cassette is ejected.

Note:
Only SP (Standard Play) recordings can be played back.

RECORDING TV PROGRAMMES

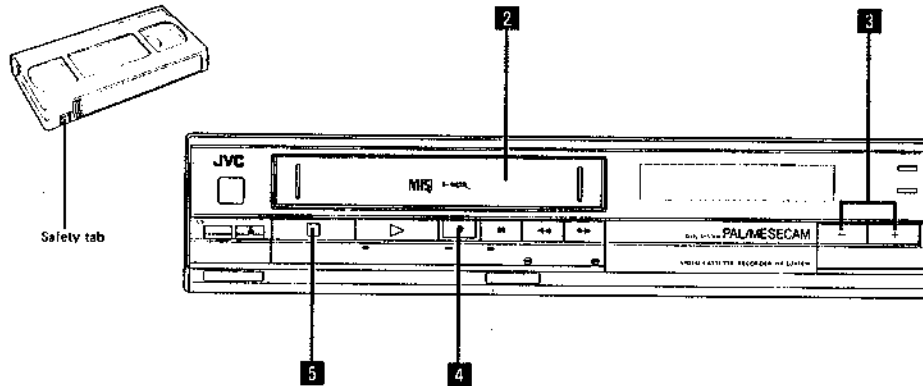

- 1 Turn the TV receiver on and adjust it to your video channel.
- 2 Load a cassette (with safety tab in place).
 - Power will be switched on automatically.
- 3 Press either TV PROGRAM ⑩ to select the channel you wish to record.
- 4 Press REC/TR ⑪ to start recording.
 - Be careful to press REC/TR only once, or Instant Timer Recording will begin.
 - Press REC and PLAY simultaneously when using the remote control unit.
 - If there is part of the programme you don't want to record, press PAUSE/STILL ⑫. A white horizontal bar will appear on the screen, which reduces in size in 4 steps as time elapses. When the last quarter starts blinking and disappears, the Stop mode will be entered automatically. The pause duration is possible for about 5 minutes.

Pause mode indicator



- To continue recording from the Pause mode, press PLAY ⑬ while the white bar is on-screen.
- 3 Press STOP ⑭ at the end of the programme.
 - When the end of the tape is reached during recording, the tape is automatically rewound and stops.


Notes:

- If you want to start recording from the Play mode, first engage the Record-Pause mode by pressing REC/TR and PAUSE/STILL simultaneously and then press PLAY.
- When recording is restarted from the Pause mode, a few frames recorded before are erased due to overlap of the new recording. This is not due to any defect of the unit.
- The selected channel cannot be altered during recording. If you wish to change the channel, first engage the Pause mode and then select a different channel.

INSTANT TIMER RECORDING

If you wish for recording to stop automatically after a certain period of time, use this Instant Timer Recording mode.

1. Press REC/TR during recording for twice if in the Stop mode.
 - The FDP shows "REC STOP 0:30", showing that recording will automatically stop and power will switch off after 30 minutes.
2. Adjust the switch-off time, if necessary.
 - Press REC/TR to increase it in 30-minute increments (possible up to 4 hours).
 - Use SELECT and SET to set to a more precise time when required (possible up to 4 hours 59 minutes). After setting the time, press SELECT so that all digits stop blinking.




RECORDING ONE PROGRAMME WHILE WATCHING ANOTHER

A programme not being viewed can be recorded while you enjoy another programme.

- Select the channel you wish to record with the recorder's TV PROGRAM buttons.
- Select the channel you wish to view with the TV receiver's channel selector.

INDEX SEARCH AND COUNTER SEARCH

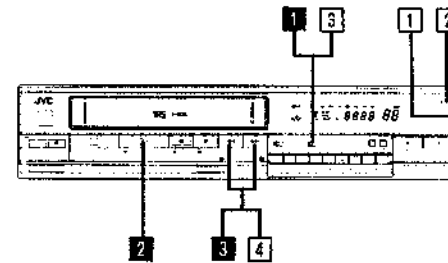

VHS Index Search System

When you start recording from the Stop or Timer Standby mode, an index code is marked on the tape. These index codes can be detected in the Shuttle Search mode.

- 1 Set TAPE MEMORY ① to INDEX.
- 2 Press PLAY ② to start playback.
- 3 Press REW or FF SHUTTLE SEARCH ③ depending on the direction of search.
 - While the tape is being scanned, "INDX" will be displayed on the FDP.
- 4 When the first index code is detected, normal playback resumes automatically. To search for the next index code, press the same button once again.

Counter Search

The counter reading of "0000" can be located automatically.

- 1 Press CLOCK/COUNTER/LAP ④ to obtain the Counter mode.
- 2 Press COUNTER RESET ⑤ during playback or recording at a point which you wish to locate later.
- 3 Set TAPE MEMORY to COUNTER.

- 4 Press REW or FF when you need to return to the designated point.
 - The tape will stop automatically at about "0000".
 - When used in conjunction with the Memory Play function, this offers more convenience. See below.

ELAPSED RECORDING TIME INDICATOR

The tape counter is switchable to the elapsed recording time indicator.

1. Press CLOCK/COUNTER/LAP to obtain the Lap mode.
 - The lap time is counted up to 9 hours 59 minutes.
2. To reset the lap time to "0:00", press COUNTER RESET.

Notes:

- Unless the COUNTER RESET button is pressed in the Lap mode, the count is maintained even after the power is switched off (as long as the unit remains plugged in to an AC outlet).
- When the Lap mode is engaged during playback, counting does not take place, even though the current count is displayed.

NEXT-FUNCTION MEMORY

Memory Play function

- If you want to watch the tape from its beginning after rewinding, press REW and then PLAY within 2 seconds. Playback will start automatically at the beginning of the tape. (The TAPE MEMORY switch must be in the OFF position.)
- If you want to watch the tape from the counter reading of "0000", set TAPE MEMORY to COUNTER, press REW (or FF) and then PLAY within 2 seconds.


Memory Eject/Power-Off/Timer Standby

- If you are going to eject the cassette, turn the power off or engage the Timer Standby mode after rewinding the tape, you do not have to wait for completion of rewind to press the corresponding button.
- To eject the cassette after rewind, press REW and then EJECT within 2 seconds.
 - To turn the power off after rewind, press REW and then OPERATE within 2 seconds.
 - To engage the Timer Standby mode after rewind, press REW and then TIMER within 2 seconds.

AUTOMATIC TIMER RECORDING



First of all, load a cassette (with safety tab in place); power will be switched on automatically.

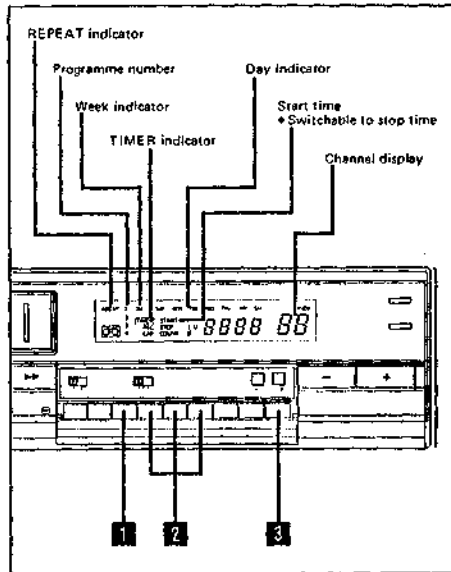


1 Press PROGRAM (P).

- The display will change to the Timer Set mode for programme number "1". To advance to programme number 2, 3 or 4, press PROGRAM.

2 Set the day, start time, channel and stop time in succession by using the SELECT and SET buttons (S) (T) alternately.

- Select the item to be set with the SELECT button; the selected item will blink.
- Set the desired data with the SET buttons.



Note:

- The 1st week refers to the seven-day period from the present day and the 2nd week, to the following seven-day

Setting the day

- With the SET "+" button, the day indication advances from "SUN" (first Sunday) to "SAT" (first Saturday), then "2nd SUN" (second Sunday) to "2nd SAT" (second Saturday) and then the all-days indication with "REPEAT" for daily serial recording.
- For weekly serial recording, press the REPEAT button any time in the Timer Set mode.
- The "REPEAT" entry can be cancelled by pressing the REPEAT button.

Setting the start and stop times

- It is not possible to set the start and stop times unless the clock has previously been set.
- Enter the data while the digits are blinking.
- The stop time can be set within 24 hours from the start time.


Cancelling the preset data

- The preset programmes can be cancelled. First engage the Timer Set mode for the programme number you wish to cancel and then press the CANCEL (C) button.

3 After making sure that the cassette is loaded, press TIMER (T).


- The Timer Recording Standby mode will be engaged with the TIMER indicator and the preset programme number(s) illuminated and the power turned off.
- With no cassette loaded, the TIMER and "cassette loaded" indicators will continue blinking.
- A cassette whose safety tab has been removed will be ejected automatically.
- If a preset programme contains errors, that programme number will not be illuminated. Recheck the programmed data.
- If illuminated programme numbers are blinking, the time spans of those programmes overlap. Recheck their programmed data.

period (not weeks on the calendar). These two weeks are counted from the time of setting.



Reviewing the programmed data

- Press the PROGRAM button in the Timer Standby mode; the programmed data of the earliest-to-start programme will be shown for 6 seconds (3 seconds for START and 3 seconds for STOP) and then those of subsequent programmes, if any, in the same manner.

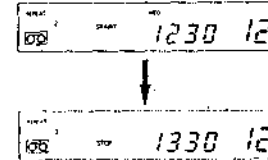

- If you wish to change the programmed data, engage the Timer Set mode (first press the TIMER button to disengage the Timer Standby mode and then press the PROGRAM button) and call up the corresponding programme number for reprogramming.

Timer recording operation

- When the preset start time is reached, recording starts.
- After timer recording, the power is switched off. If the tape end is reached during timer recording, the cassette is automatically ejected and the power is switched off.
- After all preset programmes have been executed, the Timer Standby mode is cancelled.

RECORDING FROM AN EXTERNAL SOURCE

By connecting an external video source (such as a VideoMovie camera-recorder, 2nd video recorder, video camera, etc.) to the VIDEO IN, AUDIO IN connectors, recording and/or editing are possible.

- For connection of these units, an appropriate cable is necessary.
- For connection of a video camera, a camera adapter is also necessary. Consult a JVC dealer.

- Turn the power on for all connected equipment.
- Adjust the TV receiver to your video channel.
- Load a cassette.
- Press either TV PROGRAM button (P) to obtain "AU" in the channel display.
- Operate the source equipment properly.
- Press REC/ITR (R).
- To stop recording temporarily, press PAUSE/STILL (S).
- To end recording, press STOP (S).

Note:

- For the operation of the source equipment, refer to the instruction manual of the relevant machine.

IN CASE OF DIFFICULTY

What may initially appear to be trouble is not always a real problem. Make sure first

Symptoms	Check points
No power is applied to the recorder.	<ul style="list-style-type: none"> • Is the power cord disconnected? Connect it.
Playback picture does not appear while the tape is running.	<ul style="list-style-type: none"> • Is the TV receiver's channel selector set to the correct video channel? Set to the RF converter channel.
Picture is normal but no sound.	<ul style="list-style-type: none"> • Is the SYSTEM select switch set to the appropriate position?
Tape does not run in the Record mode.	<ul style="list-style-type: none"> • Is the PAUSE/STILL button pressed? Press PLAY to release.
REC/TR button cannot be engaged.	<ul style="list-style-type: none"> • Is the cassette improperly loaded? Load it properly. • Is the safety tab broken? Reseal the slot.
Tape stops in the Rewind or Fast Forward mode.	<ul style="list-style-type: none"> • Is the TAPE MEMORY switch set to COUNTER? Set to OFF.
Tape will not rewind.	<ul style="list-style-type: none"> • Is the tape already rewound to the end?
Noisy playback picture.	<ul style="list-style-type: none"> • Adjust with the TRACKING controls.
Pressing PAUSE/STILL during playback brings a still picture (in a frame-by-frame manner) with noise bars.	<ul style="list-style-type: none"> • Noise bars can be eliminated by pressing the PAUSE/STILL button a few more times.

This recorder contains microcomputers. External electronic noise or interference could cause malfunctioning. In such cases, switch the power off and unplug the power cord. Then plug it in again and check the functions.

HEAD CLEANING

- Picture playback may become blurred or interrupted while the TV programme received is clear. This does not mean that the recorded programme has been erased.
- Dirt accumulated on the video heads after long periods of use causes such problems. In this case, head cleaning requiring highly technical care is necessary.

For head cleaning, consult the nearest JVC dealer.

SECTION 1 MECHANISM ADJUSTMENT

1.1 GENERAL

1.1.1 Precautions

IMPORTANT:

1. Disconnect unit from power before removing or soldering components.
2. When removing a fastener (screw, washer, etc.), be careful not to drop it into the mechanism. If a fastener should be dropped, be sure to retrieve it.
3. The tape transport mechanism has been precisely adjusted at the factory and ordinarily does not require readjustment.
4. When removing a part, be very careful not to damage or displace other parts. (Be especially careful with the tape guides and rotary video head drum.)
5. For service procedures that call for operation of the set when the cassette housing is separated from the main-deck, perform as below.
 - 1) Remove the cassette housing from the main-deck.
 - 2) Disable the photo transistor sensor (END SENSOR) on the main-deck by applying an opaque cover.
 - 3) The desired modes can be obtained by using the operation switches.

1.1.2 Required test equipment, fixtures and tools

For proper mechanical adjustment, the following test equipment, fixtures and tools are strongly recommended. Without them, a long trial-and-error period would be necessary resulting in possible damage. In addition, general-purpose tools are required.

1. Test equipment required:

Color television or monitor

Oscilloscope: Wide-band, dual trace, triggered, delayed sweep

Recording tape

Alignment tapes

Signal generator : PAL color bars, stairstep

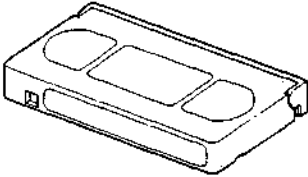
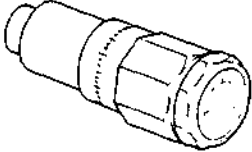
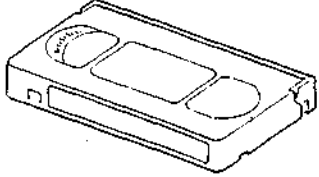
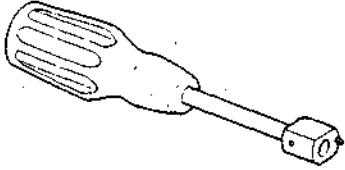
<p style="text-align: center;">JVC alignment tape MH-2</p> 	<p style="text-align: center;">Torque gauge assembly PUJ48075-2 (Torquemeter : 600ATG Torquemeterhead : PUJ48016-2)</p> 	<p style="text-align: center;">Back tension cassette gauge PUJ48076-2</p> 
<p style="text-align: center;">A/CTL head position tool PUJ47351-2</p> 		

Table 1-1-1 Fixtures and tools

1.1.3 Disassembly (external covers)

1. Top cover

- 1) Take out five screws from the right, left and rear sides of the set.
- 2) Tilt up the rear end of the top cover, then remove the top cover.

2. Bottom cover

- 1) Take out five screws from the bottom side of the set.
- 2) Set free the bottom cover from six claws of the chassis in order to remove the bottom cover.

3. Front panel assembly

- 1) Remove the top cover.
- 2) Bend three upper hooks of the front panel assembly upward in order to disengage them from their chassis retainers.

- 3) Disengage three lower hooks of the front panel assembly from their chassis retainers in order to remove the front panel assembly from the chassis.

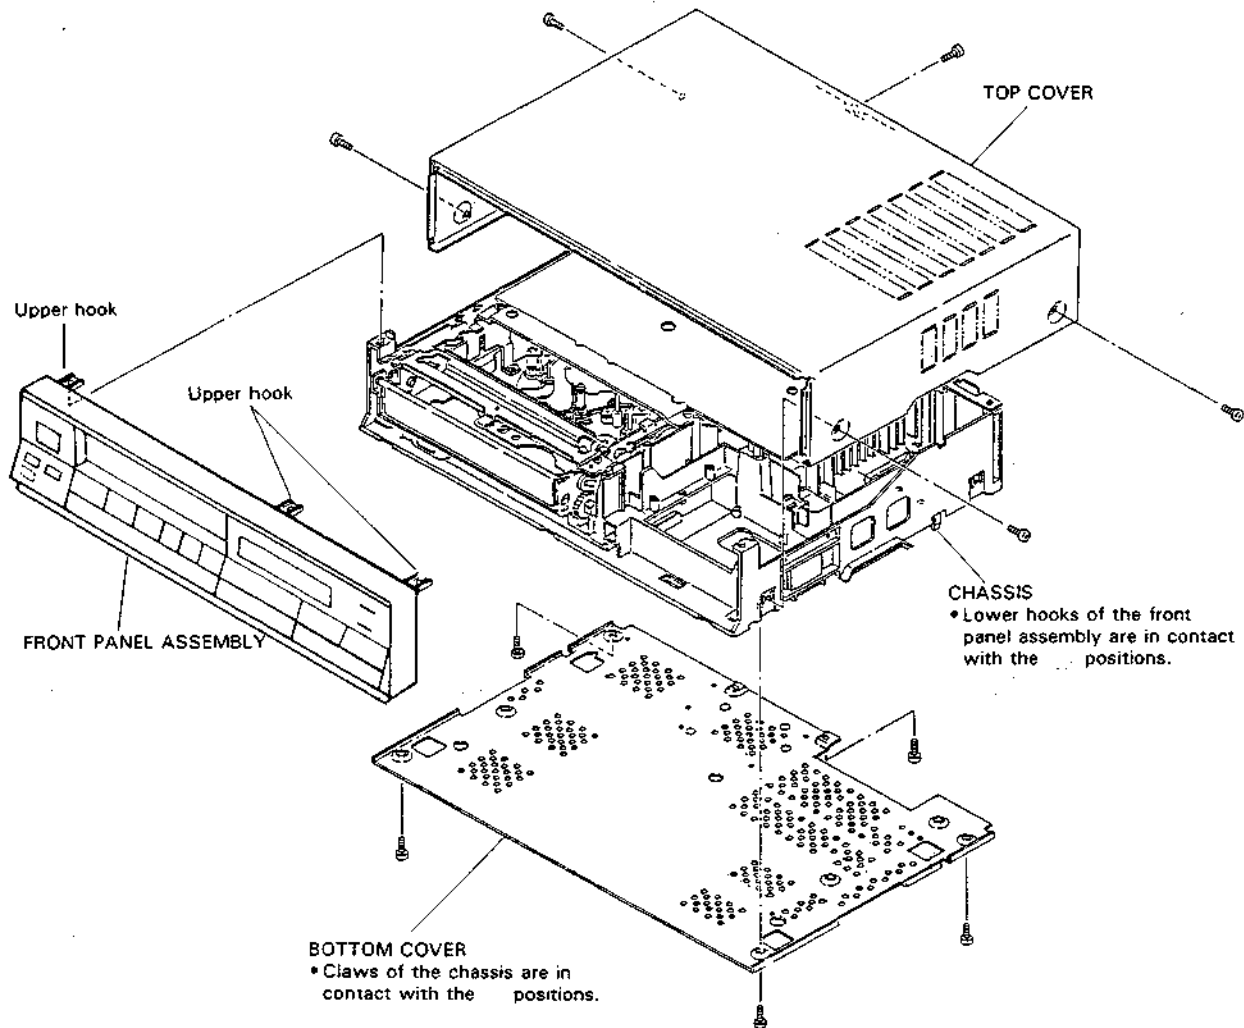


Fig. 1-1-1 Removal of external covers

1.1.4 Layout of main parts

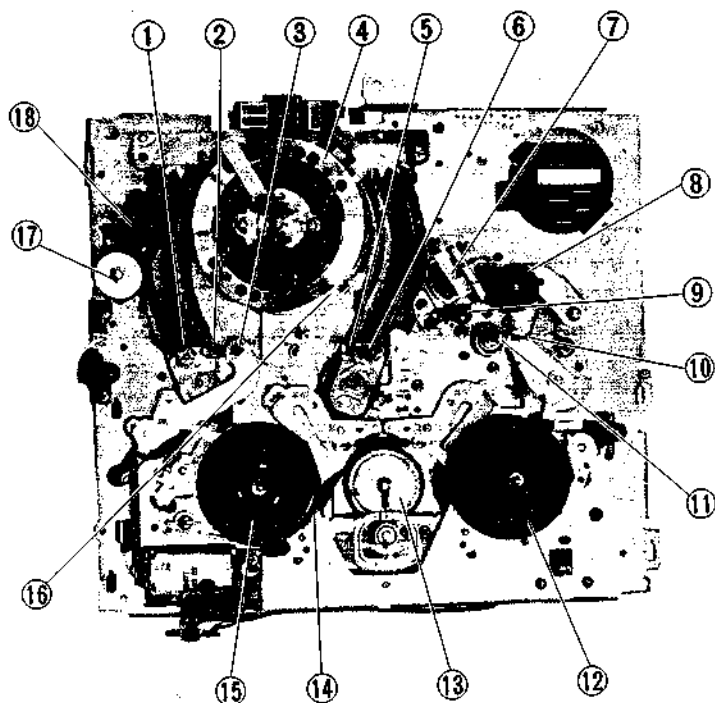


Fig. 1-1-2 Top view of main-deck

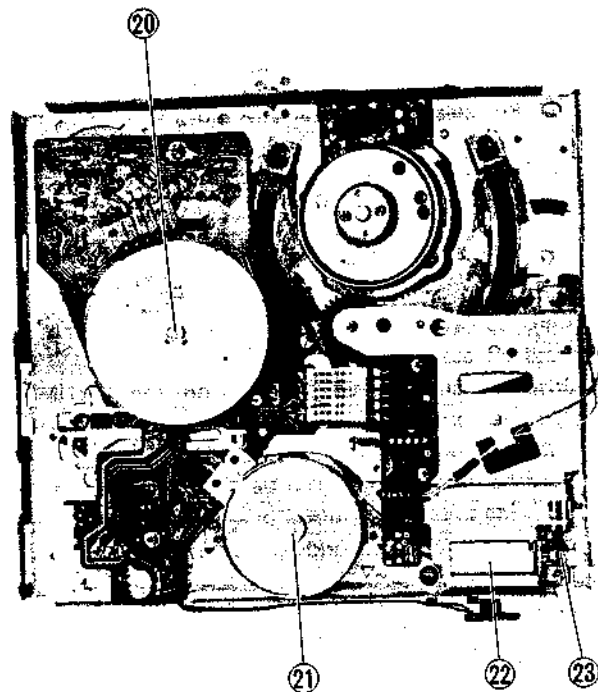


Fig. 1-1-3 Bottom view of main-deck

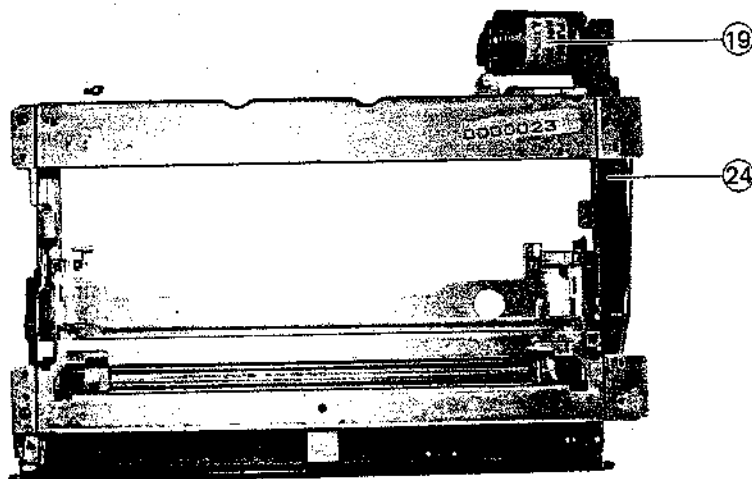


Fig. 1-1-4 Cassette housing

- 1. Supply guide roller
- 2. Supply slant pole
- 3. Tension pole
- 4. Upper drum
- 5. Take-up slant pole
- 6. Take-up guide roller
- 7. A/C head
- 8. Pinch roller

- 9. Take-up guide pole
- 10. Guide arm
- 11. Capstan
- 12. Take-up reel disk
- 13. Reel idler
- 14. Tension band
- 15. Supply reel disk
- 16. Lower drum

- 17. Impedance roller
- 18. Full erase head
- 19. Cassette motor
- 20. Capstan motor
- 21. Reel motor
- 22. Mode motor
- 23. Mode belt
- 24. Cassette belt

1.2 MAIN ASSEMBLY REPLACEMENT

1.2.1 Upper drum assembly

Notes: When handling and installing the upper drum assembly, avoid directly touching the head tips on the upper drum assembly.

For cleaning the head tips, push and hold a lint-free cloth or chamois dampened with alcohol to the upper drum assembly by the fingers, then turn the upper drum assembly clockwise. Do not clean the upper drum assembly with a vertical stroke.

1. Removal

- 1) Take out a screw and remove the brush assembly from the drum assembly.
- 2) Unsolder all soldered portions on the DRUM PWB. Remove excess solder, then remove the DRUM PWB from the upper drum assembly.
Note: Soldered portion can be easily removed by removing solder with sucker or wick.
- 3) Take out two screws and remove the upper drum assembly upwards.

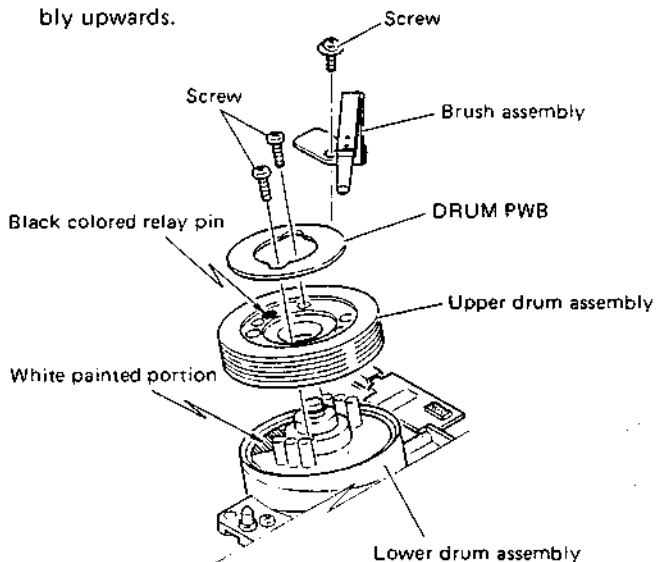


Fig. 1-2-1 Upper drum assembly

2. Installation

- 1) Install a new upper drum assembly so that the black-colored relay pin of the upper drum assembly overlies the white painted portion of the lower drum assembly, as shown in Fig. 1-2-1.
- 2) Tighten two screws in a balanced manner.
- 3) Set the DRUM PWB on the upper drum assembly, then resolder it.
- 4) Clean the drum unit (particularly clean the upper drum assembly).
- 5) Mount the brush assembly on the original position, then tighten a screw to fix the brush assembly.

3. Confirmation and adjustment

- 1) Perform the interchangeability confirmation. Refer to section 1.6.
- 2) Perform the PB switching point adjustment of the Servo (MAIN PWB) circuit. Refer to section 2.2.1.

1.2.2 A/C head (Audio/control head)

1. Removal

- 1) Disconnect connectors from the A/C HEAD PWB.
- 2) Take out two screws, then remove the A/C head and the head base together.
- 3) Unsolder and separate the A/C HEAD PWB from the A/C head.
- 4) Take out a screw and remove the shield cap from the A/C head.
- 5) Take out three screws and separate the A/C head from the head base. Use care regarding springs. Do not lose them.

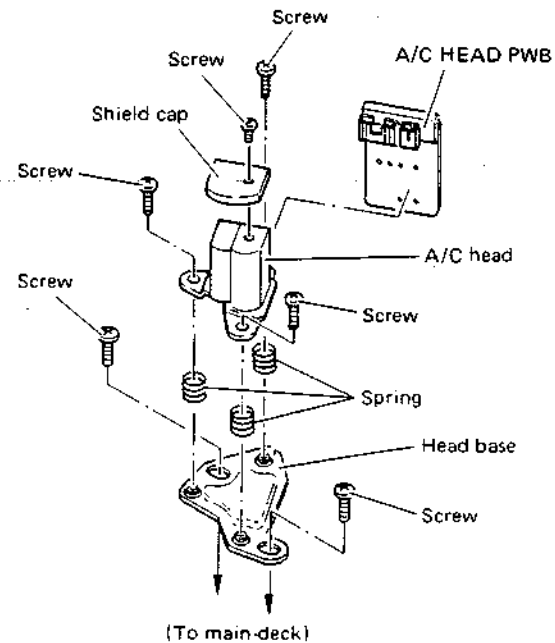


Fig. 1-2-2 A/C head

2. Installation

- 1) Mount a new A/C head and other peripheral parts on the main-deck by reversing the removal procedure.
- 2) Before installing the A/C head on the main-deck, perform rough-adjustment of A/C head height as shown in Fig. 1-2-3.

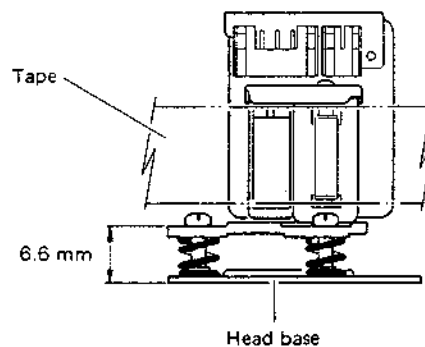


Fig. 1-2-3 A/C head height

3. Confirmation and adjustment

- 1) Use a recording tape and confirm correct tape transport operation, then perform interchangeability adjustment. Refer to sections 1.5 and 1.6.
- 2) Perform overall confirmation of the Audio circuit. Refer to section 2.4.

1.2.3 Tension band assembly

1. Removal

- 1) Take out a screw, then pry the A portion of the tension band assembly upwards to separate it from the tension arm assembly.

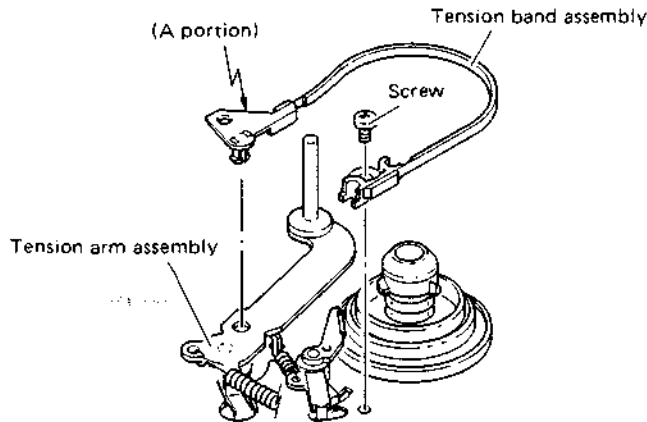


Fig. 1-2-4 Tension band assembly

2. Installation

- 1) Install a new tension band assembly by reversing the removal procedure.

3. Confirmation and adjustment

- 1) Perform tension pole position adjustment. Refer to section 1.4.1.

1.3 ASSEMBLY PROCEDURE OF MECHANISM

The mechanism of this model is mostly engaged to the mechanism control circuit, through the mode select switch. Therefore, the relation between the mode select switch and the control arm decides all mechanical movement of the mechanical parts such as levers, gears, rollers and so on. If these parts are not properly positioned, the unit will be unloaded or compulsorily stopped. This will result in damage of mechanical or electrical parts.

1.3.1 Loading arm assembly

Loading arm assembly consists of loading gear, torsion spring and loading arm.

1. Set up the loading arm assembly correctly as shown in Fig. 1-3-1.

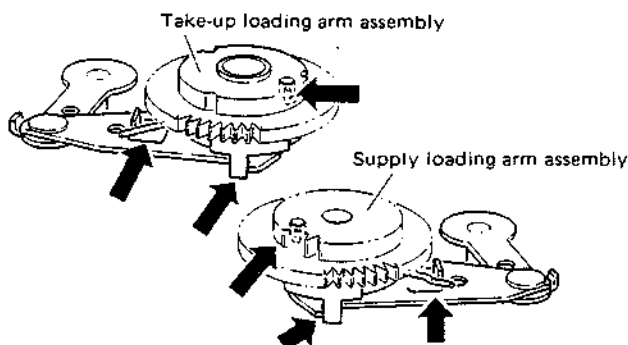


Fig. 1-3-1 Loading arm assembly (1)

2. Install the take-up loading arm assembly and the supply loading arm assembly so that the holes on the loading gears face each other, as shown in Fig. 1-3-2. Do not move the loading arm assemblies from this position for the next step.

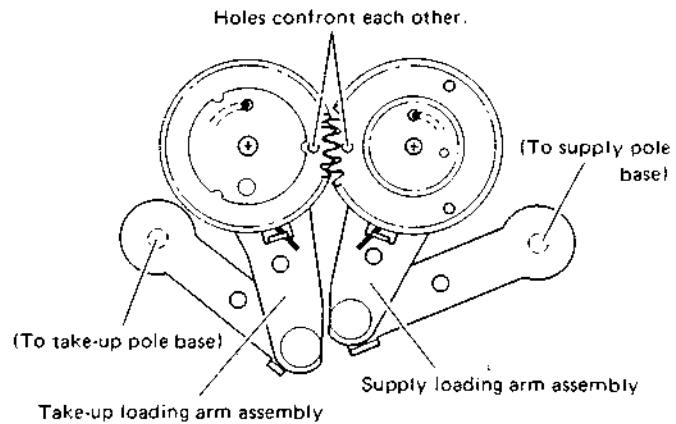


Fig. 1-3-2 Loading arm assembly (2)

1.3.2 Control cam

1. Set the arm gear assembly on the cam bracket assembly so that the hole of the arm gear assembly overlaps the hole of the cam bracket assembly.
2. Install the control cam on the cam bracket assembly so that the hole of the control cam overlaps the hole which is indicated in the step 1), as shown in Fig. 1-3-3. Do not turn the control cam from this position for the next step.

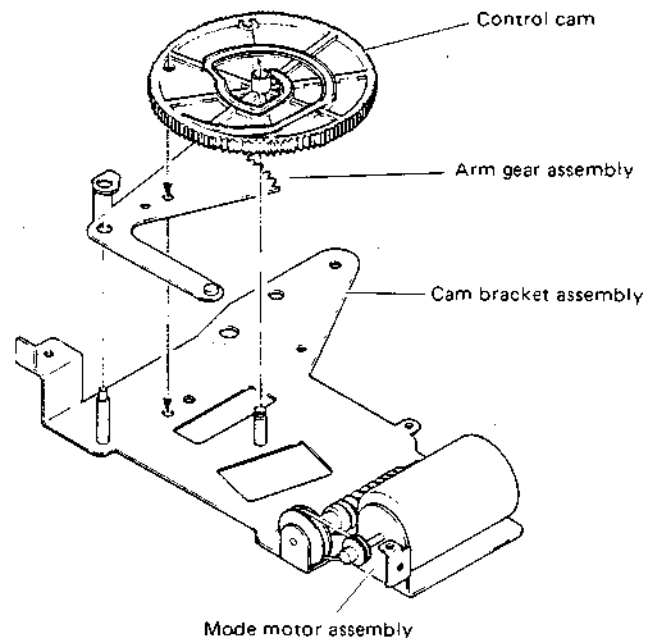


Fig. 1-3-3 Control cam

1.3.3 Cam bracket assembly

1. Push and hold the plate assembly so that the hole of the plate assembly overlaps the hole of the main-deck, as shown in Fig. 1-3-4.
2. Then mount the cam bracket assembly.

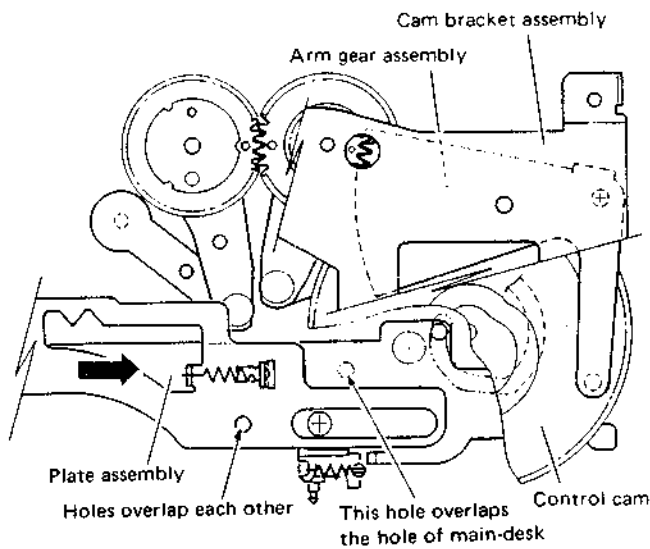


Fig. 1-3-4 Cam bracket assembly

Note: In order to overlap the holes turn the control cam fully counter clockwise by turning the mode motor with a finger.

1.3.4 Mode select switch

1. When the hole of the plate assembly overlaps the hole of main-deck, refer to Fig. 1-3-4, confirm that the V-cut of the slider section just overlaps the V-cut of the outer section of the mode select switch.
2. If a difference of more than 0.5 mm is noticed, adjust the mode select switch to the correct position, after unsoldering and loosening the screw.

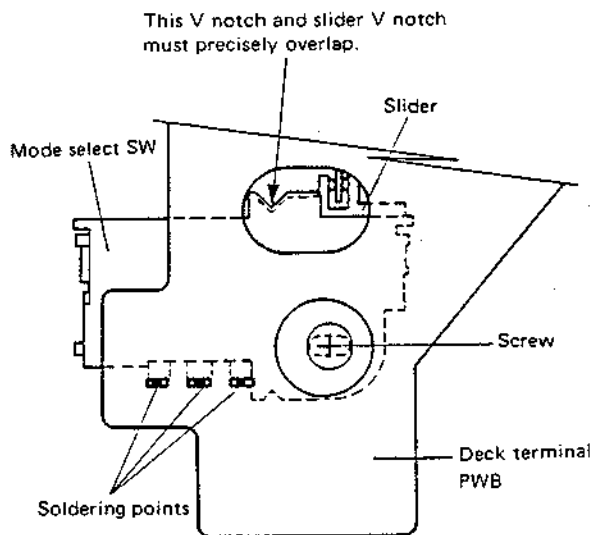


Fig. 1-3-5 Mode select switch

1.4 CONFIRMATION AND ADJUSTMENT

1.4.1 Tension pole position adjustment

1. Without loading a tape, set for the Play mode.
2. Loosen screw a little bit, then adjust the tension band holder so that the distance, shown in Fig. 1-4-1, becomes zero (0 mm).
3. Tighten screw to fix the tension band holder.

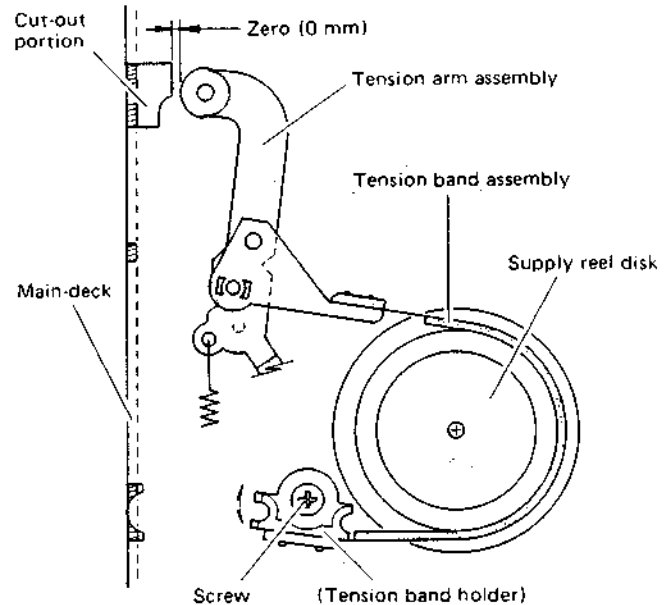


Fig. 1-4-1 Tension pole position

Note: By this adjustment, back tension is within normal specification, in spite of parts tolerances.

4. Use the back tension cassette gauge and set for the Play mode.
5. Confirm that the indication is between 25 – 75.

1.4.2 Take-up torque confirmation

1. Set the Play mode without the cassette housing assembly.
2. Set the torque gauge on the take-up reel disk.
3. The torque gauge consists of upper and lower sections connected by a spring mechanism. Relax the grip on the torque gauge so that the indicator needle and scale rotate at equal speed, then read the indication. The correct value is between 45 – 155.
4. If necessary, replace the take-up and supply clutches.

1.5 TAPE TRANSPORT SYSTEM CONFIRMATION AND ADJUSTMENT

Once adjusted to the complete condition, readjustment of the tape transport system is not necessary, except when the parts that compose the tape transport system are replaced due to troubles by long usage or unexpected accidents.

1.5.1 Tape transport system adjustment

1. Guide roller

To get the FM envelope into ideal shape for interchangeability, the height adjustment of the guide roller is needed.

Before turning the guide roller, slightly loosen the setscrew located under the guide roller. For loosening the setscrew, use the hex key (1.25 mm).

Note: Loosen the setscrew enough to allow the guide roller to be turned. If excessively loose, tape motion may turn the guide roller inadvertently.

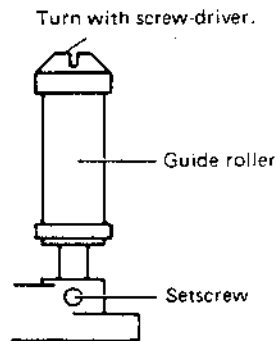


Fig. 1-5-1 Guide roller

2. Impedance roller

Normally, do not adjust the height of the impedance roller. Only when the defects of tape travel are noted at the impedance roller, after complete adjustment for interchangeability, adjust the height of impedance roller to obtain smooth tape travel. For adjustment of impedance roller height, use the nut-driver (5.5 mm).

Note: Do not lower the impedance roller excessively to avoid the defects of tape travel. Tape must be along the lower flange located under the impedance roller.

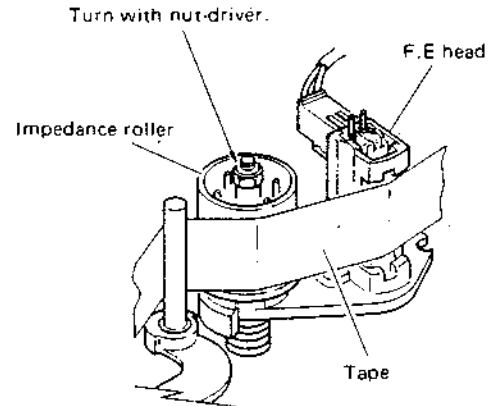


Fig. 1-5-2 Impedance roller

3. A/C head (audio/control head)

When defects of tape travel are noted at the take-up guide pole, adjust the inclination of A/C head to obtain smooth tape travel.

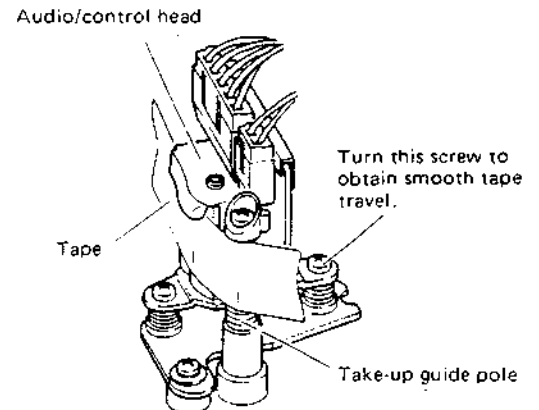


Fig. 1-5-3 A/C head

1.6 INTERCHANGEABILITY CONFIRMATION AND ADJUSTMENT

Before using an alignment tape, use a recording tape and confirm correct tape transport operation.

For the FM envelope output, connect an oscilloscope to TP106 of the MAIN PWB. For audio output, connect to the AUDIO OUT terminal, and trigger the oscilloscope externally with the signal from TP411 of the MAIN PWB. Use only the stairstep segment of the alignment tape, do not use another segment for interchangeability.

1.6.1 FM envelope confirmation and adjustment

1. Push the TRACKING +/- buttons to obtain the maximum FM envelope output corresponding to (a) level in Fig. 1-6-1. Observe the FM envelope, read the maximum level (a) and the minimum levels (b), (c) and (d). Confirm that:

$$\frac{b}{a} \geq 0.7, \frac{c}{a} \geq 0.5 \text{ and } \frac{d}{a} \geq 0.5$$

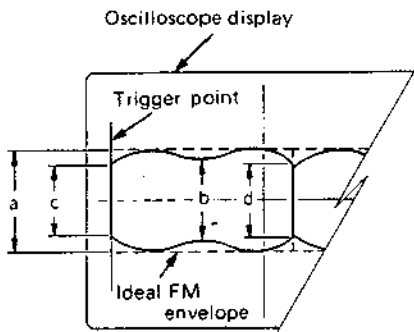


Fig. 1-6-1 FM envelope

2. If defects are noted, following adjustments are required.
 - 1) Observe the oscilloscope display and push the TRACKING +/- buttons to vary the FM output from maximum to minimum.
 - 2) If the variation is not parallel at the rising portion (drum entrance) of the FM envelope, turn the supply guide roller so that the rising portion of the envelope becomes nearly flat, as shown in Fig. 1-6-2.

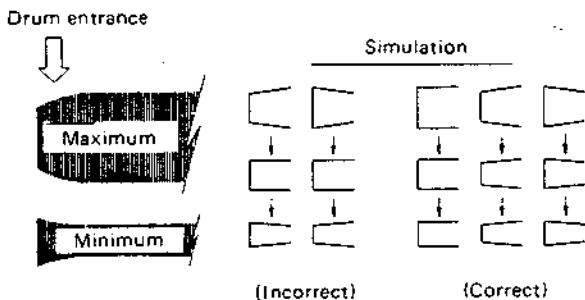


Fig. 1-6-2 Drum entrance

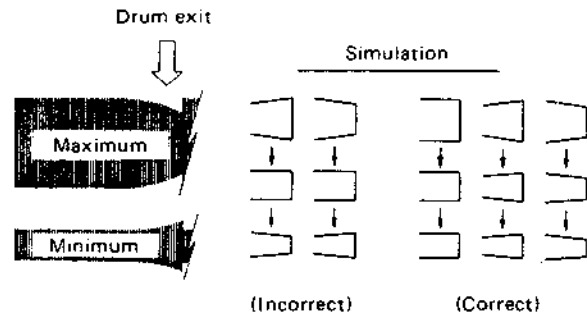


Fig. 1-6-3 Drum exit

- 3) In the same manner as for the rising portion, turn the take-up guide roller to adjust the falling portion (drum exit) of the FM envelope. See Fig. 1-6-3.
- 4) In addition to observing the envelope, confirm absence of tape curling or wrinkling at the impedance roller and take-up guide pole. If it occurs at the impedance roller, adjust the impedance roller height. If it occurs at the take-up guide pole, adjust the A/C head inclination.
- 5) Vary the FM envelope output level and perform fine adjustments of the guide rollers.

1.6.2 A/C head height and azimuth adjustments

Incorrect A/C head height can impair audio signal-to-noise ratio when playing back a pre-recorded tape.

1. For A/C head inclination, adjust screw (A) so that small tape wrinkles are not produced at the take-up guide pole. Turn screw (A) clockwise so that the tape wrinkles are apparent with the lower flange of the take-up guide pole, then turn screw (A) counter-clockwise so that the wrinkles smooth out.
2. Adjust azimuth with screw (B). Turn screw (B) to obtain maximum audio output.
3. For A/C head height, turn screws (A), (B) and (C) in succession by small and equal increments at a time and adjust for maximum audio output level.

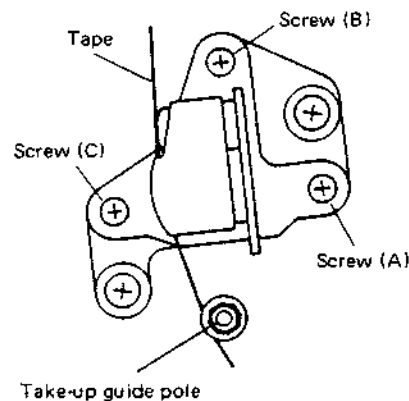


Fig. 1-6-4 A/C head

1.6.3 Control head phase adjustment

1. Set Tracking to Pre-Set Position by pushing both + button and - button at the same time.
2. Loosen screws (D) and (E) a little bit, then cover screw (D) with the A/CTL head position tool and set the pin of the tool into the hole next to screw (D).
3. Turn the tool counter-clockwise to shift the A/C head fully in the direction of the capstan, and then gradually turn the tool clockwise and observe the FM envelope output.
4. Set the A/C head at the point of the first output peak.

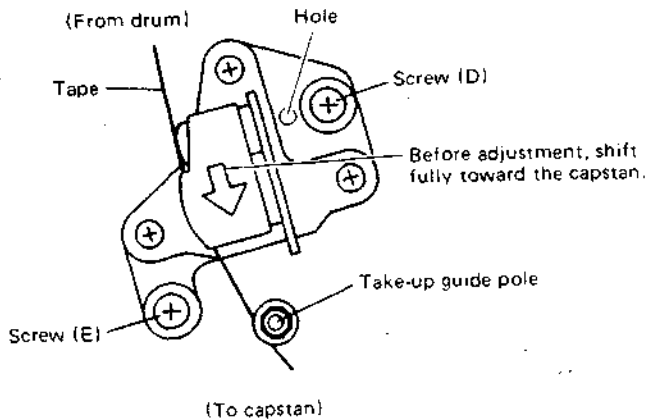


Fig. 1-6-5 Control head phase

1.6.4 Setscrew tightening

1. After confirming absence of tape wrinkling and other transport irregularities, tighten the setscrews located under the guide rollers while in the Stop mode.
Note: Since the guide rollers are easily moved, use care when tightening.
2. Again perform the FM envelope confirmation.

1.6.5 Final confirmation

1. Supply a video signal and perform recording, then play back.
Confirm that the FM envelope satisfies the specifications during playback of alignment tape MH-2.
2. Perform the PB switching point adjustment of the Servo circuit. Refer to section 2.2.1.
3. Perform the audio PB level adjustment of the Audio circuit. Refer to section 2.4.2.
4. Perform overall confirmation of the Video circuit. Refer to section 2.3.

SECTION 2 ELECTRICAL ADJUSTMENTS

2.1 PREPARATION

Electrical adjustments are required after replacing circuit components and certain mechanical parts.

It is important to perform these adjustments only after all repairs and replacements have been completed. Also, do not attempt these adjustments unless the proper equipment is available.

2.1.1 Required test equipment

1. Colour television or monitor
2. Oscilloscope: wide-band, dual-trace, triggered delayed sweep
3. Frequency counter
4. Audio oscillator
5. Audio voltmeter
6. Digital voltmeter
7. Signal generator: RF/IF sweep/marker
8. Signal generator: PAL colour bar, stairstep
9. Recording tape
10. Alignment tape: (MH-2)

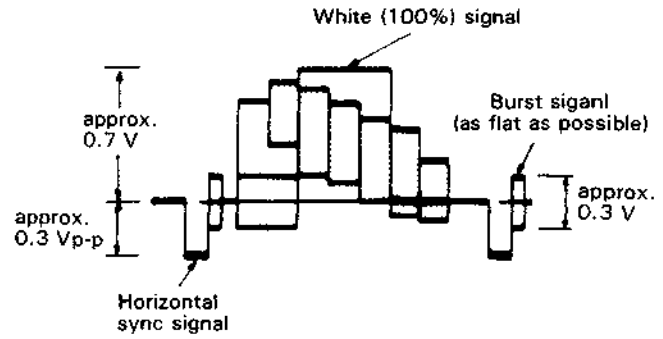


Fig. 2-1-1 Colour bar signal of pattern generator

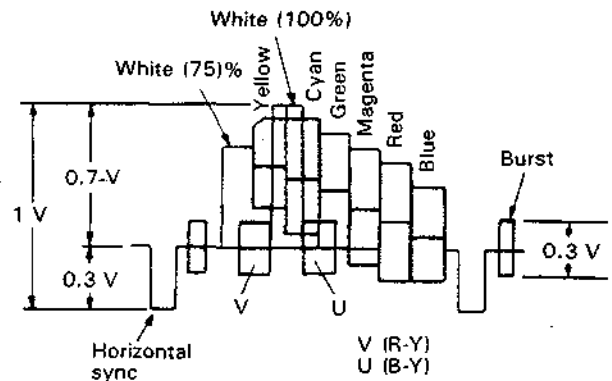


Fig. 2-1-2 Colour bar signal waveform

	White	Yellow	Cyan	Green	Magenta	Red	Blue
(75%) →							
	V	U	White 100%		Black		

Fig. 2-1-3 Colour bar pattern


2.1.2 Check and adjustment steps

The check and adjustment steps are provided in the following in the form of charts. For clarity, the nomenclature used in the charts is outlined below.

No.	Checks and adjustments are numbered in the recommended sequence in which they are to be performed.
Item	Name assigned to the particular check and adjustment step.
Check Point	Location to which measuring instrument (oscilloscope unless otherwise noted) is to be connected.
Adjustment Parts	Variable component (resistor, capacitor, etc.) to be adjusted in this step. Dash (—) indicates check only.
Signal & Mode	<ul style="list-style-type: none"> • Input signal required to perform adjustment. Dash (—) indicates that special signal is not required. • Equipment operating mode at time of check or adjustment.
• Colour bar	Colour bar signal as video input.
• Stairstep	Stairstep signal as video input.
• 1 kHz	Supply a 1 kHz sinewave as audio input signal.
• MH-2 Colour bar	Play colour bar segment of MH-2 alignment tape.
• MH-2 Stairstep	Play stairstep segment of MH-2 alignment tape.
• MH-2 1 kHz	Play 1 kHz audio signal segment of MH-2 alignment tape.
• MH-2 RF sweep	Play RF sweep segment of MH-2 alignment tape.
• E-E	Power on and machine in Stop mode.
• REC	Recording mode
• PB	Playback mode
• REC then (another mode)	Use blank tape, record, then play back in the mode specified.
• SEARCH	Search (FWDS and REVS) playback mode.
• SLOW	Slow motion playback mode.
• STILL	Play back then Pause.
• A DUB	Audio dubbing mode.
Description	This column provides an explanation of the step, notes, adjustment values.


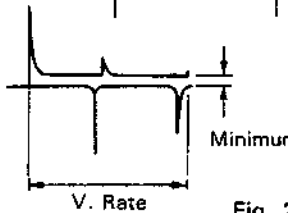
2.2 SERVO CIRCUIT


Note: Unless otherwise specified, all test points and adjustment parts are located on the MAIN board.

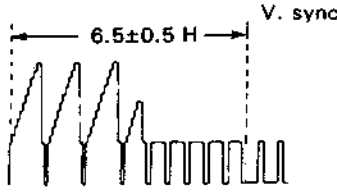No.	Item	Check Point	Adjustment Parts	Signal & Mode	Description
1	PB Switching Point	TP110 (VIDEO OUT)	R430 (PB SW POINT)	<ul style="list-style-type: none"> • PB • MH-2 Stairstep • Trigger slope (-) 	<ol style="list-style-type: none"> 1. Connect an oscilloscope to TP110. 2. Play back the stairstep segment of MH-2 alignment tape. 3. Trigger the oscilloscope externally (- slope) with the signal from TP411 (DRUM FF). 4. Adjust R430 to position the trigger point $6.5 \pm 0.5 H$ from V. sync.
 <p style="text-align: center;">Fig. 2-2-1</p>					
<p>Note: Before this adjustment "Control head phase adjustment" must be completed. Refer to Section 1.6.3.</p>					
2	V. Pulse Position	MONITOR	R434 (V-LOCK)	<ul style="list-style-type: none"> • REC then STILL • Colour bar 	<ol style="list-style-type: none"> 1. Record a colour bar signal, then play back. 2. In the Still mode, observe the monitor and adjust R434 (rear panel) for the minimum vertical jitter.

2.3 VIDEO CIRCUIT

Note: Unless otherwise specified, all test points and adjustment parts are located on the MAIN board.

No.	Item	Check Point	Adjustment Parts	Signal & Mode	Description
1	VXO	TP209 (VXO)	R207 (VXO)	<ul style="list-style-type: none"> • PB • MH-2 Colour bar 	<ol style="list-style-type: none"> 1. Connect a frequency counter to TP209. 2. Play back the colour bar segment of MH-2 alignment tape. 3. Adjust R207 for $4.433619 \text{ MHz} \pm 50 \text{ Hz}$.
2	REC Color Level	TP207 (PB COL)	R214 (REC COL LEV)	<ul style="list-style-type: none"> • Colour bar • REC then PB 	<ol style="list-style-type: none"> 1. Play back the colour bar signal of the MH-2 Alignment tape. 2. Connect an oscilloscope to TP207 and measure the colour play-back level. Make a note of this as level "a". 3. Use a spare tape to record and play back a colour bar signal. Make a note of this play-back level as level "b". 4. So that the ratio of b/a becomes 0.85 ± 0.05, adjust R214 during recording. 5. Confirm that the channel difference is within $\pm 3 \text{ dB}$.
 <p style="text-align: center;">Fig. 2-3-1</p>					
3	Noise cancel balance	TP121 (NC BAL)	R112 (YNR NC BAL)	<ul style="list-style-type: none"> • Colour bar • REC then PB 	<ol style="list-style-type: none"> 1. Record, then play back a colour bar signal and connect an oscilloscope to TP121. 2. As indicated in the figure, adjust R112 for minimum DC step difference.
 <p style="text-align: center;">Fig. 2-3-2</p>					

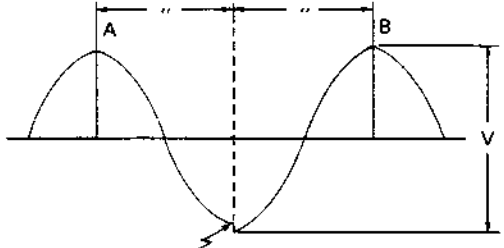No.	Item	Check Point	Adjustment Parts	Signal & Mode	Description
4	SECAM DET	TP251 (S DET ADJ)	L251 (1/2 fH TUNING)	<ul style="list-style-type: none"> • SECAM colour bar • E-E 	<ol style="list-style-type: none"> 1. Connect an oscilloscope to TP251. 2. Adjust L251 so that the transition step becomes centered between "A" and "B" as shown in Fig. 2-3-3.  <p>Set this point to center position between points "A" and "B".</p> <p>V = more than 5.5 Vp-p in REC V = 6.0 ± 0.5 Vp-p in PB</p> <p>Fig. 2-3-3</p>
		TP214 (SECAM DET)	R257 (SECAM DET. ADJ)	<ul style="list-style-type: none"> • SECAM colour bar • REC then PB 	<ol style="list-style-type: none"> 3. Connect an oscilloscope to TP214. 4. Record, then play back a SECAM colour bar signal. 5. Adjust R257 for 6.0 ± 0.5 Vp-p.
5	PB Frequency Response	MONITOR	R127 (PB FREQ RESPONSE)	<ul style="list-style-type: none"> • REC then PB • TV Broadcast 	<ol style="list-style-type: none"> 1. Record, then play back a colour broadcast that shows a good depiction of human facial contours. 2. Adjust R127 to obtain distinct facial features on the monitor.



2.4 AUDIO CIRCUIT

Note: Unless otherwise specified, all test points and adjustment parts are located on the MAIN board.

No.	Item	Check Point	Adjustment Parts	Signal & Mode	Description
1	Audio Bias Level	TP31, TP32 (BIAS LEVEL)	R41 (BIAS ADJ)	• REC	<ol style="list-style-type: none"> 1. Connect a digital voltmeter between TP31 and TP32. 2. Set for REC mode without a signal. 3. Adjust R41 for 3.5 mV ± 0.2 mVrms.
2	Audio PB Level	AUDIO OUT	R33 (PB LEVEL)	• REC then PB	<ol style="list-style-type: none"> 1. Connect an oscilloscope to AUDIO OUT. 2. Supply an audio signal (-8 dBs/1 kHz) to AUDIO IN and record together with a VIDEO signal, then play back. 3. Adjust R5 so that the audio output level during playback becomes -6 ± 1.0 dBs.

2.5 TUNER/IF CIRCUIT

Note: Unless otherwise specified, all test points and adjustment parts are located on the IF board.

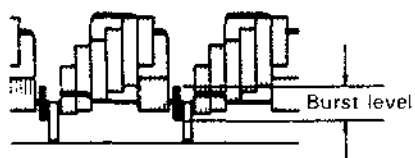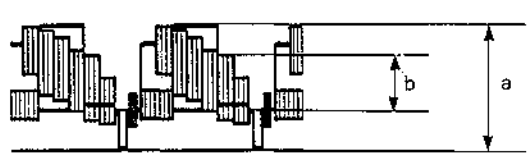
No.	Item	Check Point	Adjustment Parts	Signal & Mode	Description
1	VCO	MONITOR	T1 (LLD)	<ul style="list-style-type: none"> • TV broadcast • Tuner mode 	<ol style="list-style-type: none"> 1. Receive a colour broadcast. 2. Adjust T1 to obtain a fine picture on the monitor.
2	AFC	MAIN board TP110 (VIDEO OUT)	T2 (AFC)	<ul style="list-style-type: none"> • TV broadcast • Tuner mode 	<ol style="list-style-type: none"> 1. Receive a colour broadcast. 2. With AFC SW to OFF, perform fine tuning. Then, precisely read the burst level of IC1-18. Make a note of the burst level. 3. When AFC SW is ON, adjust T2 (AFC) so that the burst level of IC1-18 becomes equal to the noted level as shown in Fig. 2-5-1.  <p style="text-align: right;">Burst level</p> <p style="text-align: center;">Fig. 2-5-1</p>
3	Color Level	MAIN board TP110 (VIDEO OUT)	R43 (COL LEV)	<ul style="list-style-type: none"> • TV broadcast • Tuner mode 	<ol style="list-style-type: none"> 1. Supply a colour bar signal from a TV channel signal generator and select the channel corresponding to the generator. 2. With AFC SW ON, adjust R43 to produce signal waveform as shown in Fig. 2-5-2. <p>Alternate method</p> <ol style="list-style-type: none"> 1. Receive a colour broadcast. 2. With AFC SW ON, adjust R43 so that the burst level becomes 2/3 of the sync level.  <p>Y level = 1 Magenta level = 0.48 a : b = 1 : 0.48</p> <p style="text-align: center;">Fig. 2-5-2</p>
4	RF AGC	MONITOR	R18 (AGC)	<ul style="list-style-type: none"> • TV broadcast • Tuner mode 	<p>Note: Adjust R18 (RF AGC) to correct for excess noise in the picture or when streaky cross interference occurs due to strong electrical fields.</p> <ol style="list-style-type: none"> 1. Adjust R18 to minimize noise or streaks on the TV screen. 2. Check for absence of abnormality on all channels.



SECTION 3 CHARTS AND DIAGRAMS

3.1 CIRCUIT BOARD LOCATIONS

58	DRUM MOTOR
56	CASSETTE HOUSING
54	END SENSOR
53	REC SAFETY
52	RELAY
51	DECK TERMINAL
43	PRE-REC
42	CONNECT
41	UPPER DRUM
35	MEMORY
22	OPERATION
21	TIMER.DISPLAY
12	AUDIO CTL HEAD
08	TUNER CTL
07	IF
03	MAIN
01	POWER TRANS
NO.	PWB NAME

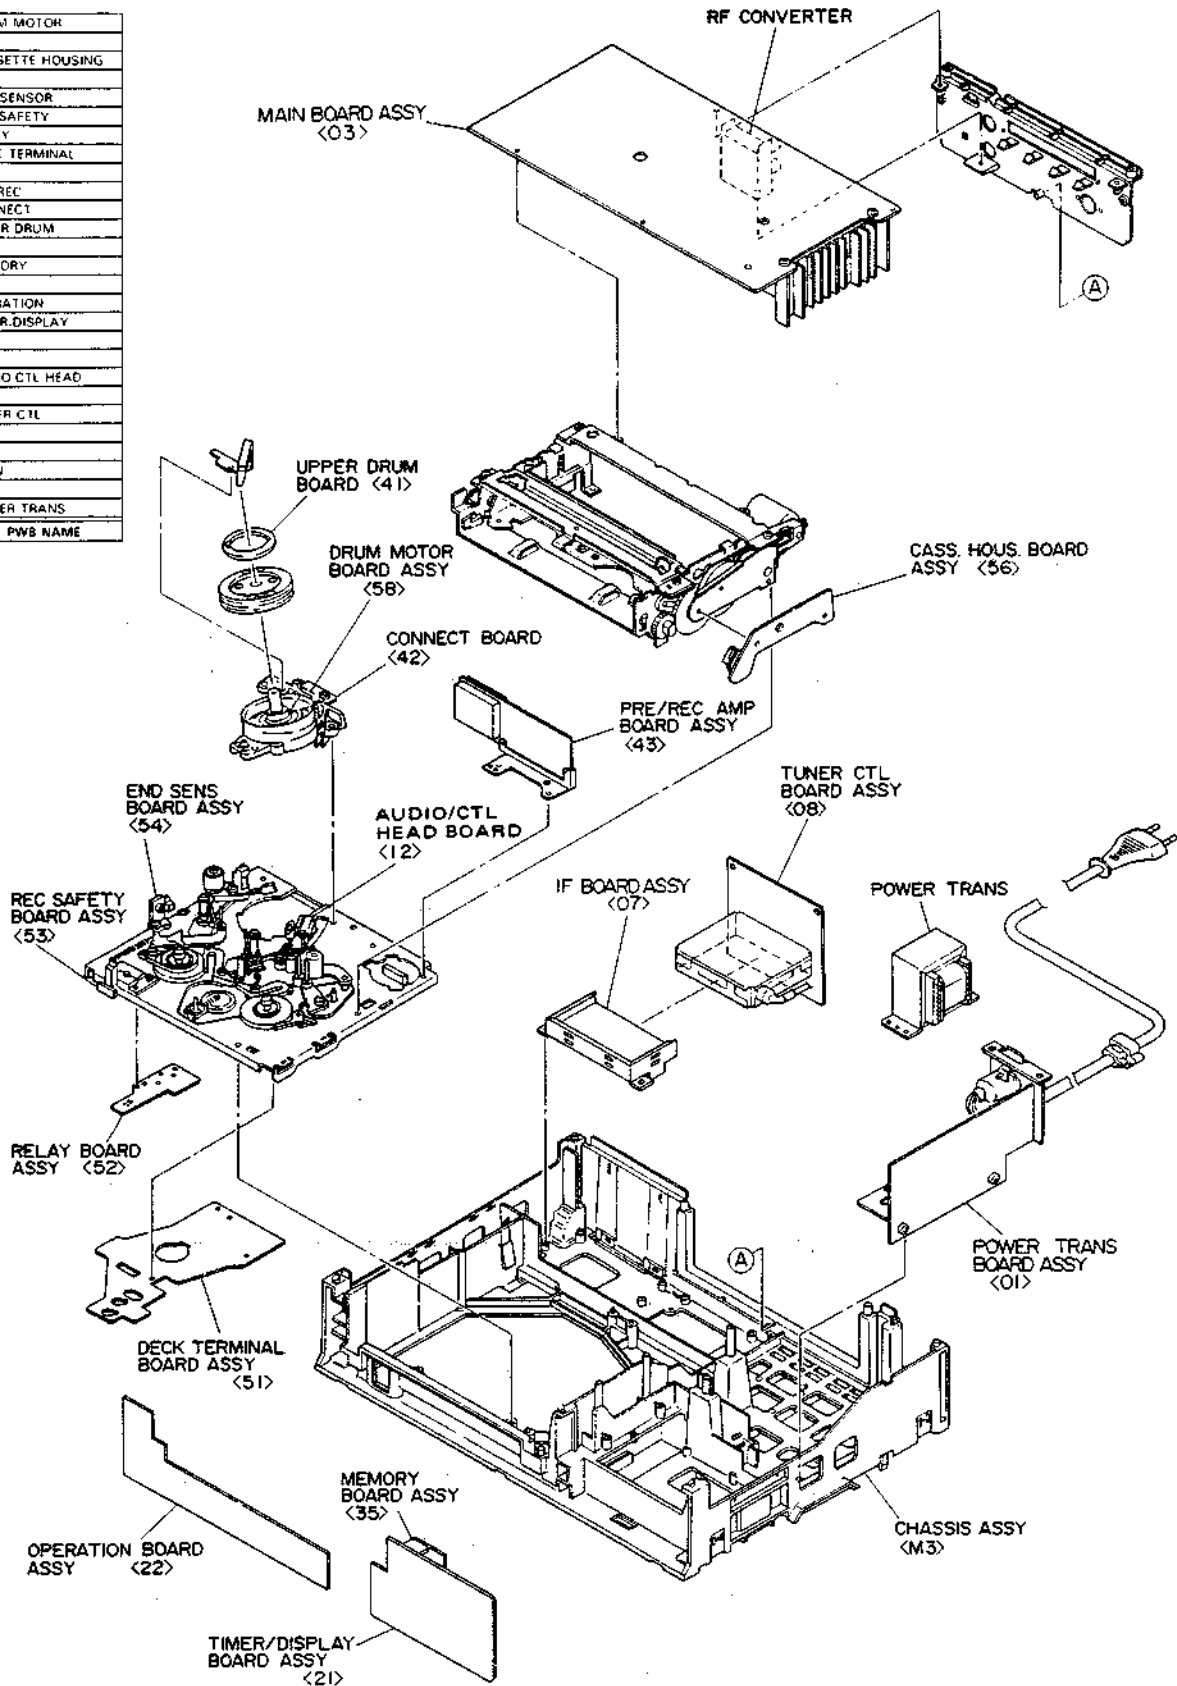


3.2 GENERAL INFORMATIONS

3.2.1 Connections

Note:

Unless otherwise specified, only signal input flow is indicated.


Connection arrows indicate only signal outputs.



: Connector



: Direct connection



: Board in connector



: Connected pattern in the board.



Abbreviations R : Regulator



V : Video M : Mechacon

S : Servo A : Audio

VS : Signal flow from video to servo.


3.2.2 Indications

AUX : Active only at high.


$\overline{\text{AUX}}$: Active only at low.

$\overline{\text{AUX}}$: Active only at middle.

$\overline{\text{AUX}}$: Active only at open.



: Active only at low for electronic switch.



: Active only at high for electronic switch.



: Low pass filter.



: High pass filter.



: Band pass filter.



: Limiter.



: Detector





: Amplifier.



: Mixer stage.

3.2.3 Digital transistor

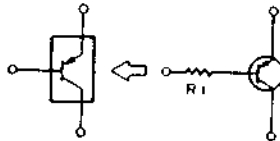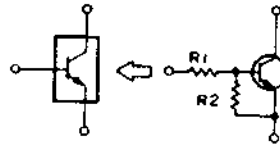

Note:

The digital transistor includes built in resistors.

It features small size and high reliability.

Both PNP and NPN types are available.

Uses:

Inverter, Interface, driver circuits.

3.2.4 Signal flow in the schematic



Recording signal path




Playback signal path



REC/PB signal path

3.2.5 Schematic diagram values

Unless otherwise specified.

- All resistance values are in ohms, 1/6 W, 1/8 W, (refer to parts list).
- All capacitance values are in μF , (P; PF).
- All inductance values are in μH , (m; mH).
- All diodes are 1SS133 or MA165, (refer to parts list).
- Voltages are DC-measured (reference to ground) with a digital voltmeter during recording (SP mode) and playback (SP mode) with alignment tape. Where voltages differ between recording and playback, the voltage during playback is shown in parentheses.
- Waveforms (VIDEO System) are measured (reference to ground) with a color bar during recording (SP mode) and playback (SP mode) with alignment tape.
- Waveforms (AUDIO System) are measured (reference to ground) with 1 kHz (-8 dBs) during recording and playback with alignment tape (1 kHz).
- Shaded () parts are critical for safety. Replace only with specified parts numbers.

3.3 ABBREVIATIONS USED IN THE SCHEMATIC DIAGRAM

<p>A</p> <p>AC : Alternating Current</p> <p>ACC : Automatic Color Control</p> <p>ACCEL : Acceleration</p> <p>A/CTL : Audio/Control</p> <p>ADC : Analog to Digital Converter</p> <p>ADD : Adder</p> <p>ADRS : Address</p> <p>ADJ : Adjustment</p> <p>A DUB : Audio Dubbing</p> <p>AE : Audio Erase</p> <p>AEF : Automatic Editing Function</p> <p>AFC : Automatic Frequency Control</p> <p>AFT : Automatic Fine Tuning</p> <p>AGC : Automatic Gain Control</p> <p>AH : Audio Head</p> <p>AL : After Loading</p> <p>ALC : Automatic Light Compensation</p> <p style="padding-left: 20px;">Automatic Level Control</p> <p>AM : Amplitude Modulation</p> <p>AMP : Amplifier</p> <p>ANT : Antenna</p> <p>APC : Automatic Pedestal Control</p> <p style="padding-left: 20px;">Automatic Phase Control</p> <p>APL : Average Picture Level</p> <p>A/S/M : Audio/Servo/Mechacon</p> <p>ASS'Y : Assembly</p> <p>ATT : Attenuator</p> <p>AUD : Audio</p> <p>AUTO : Automatic</p> <p>AUX : Auxiliary</p> <hr/> <p>B</p> <p>B : Base</p> <p>BAL : Balance</p> <p>BATT : Battery</p> <p>BFP : Burst Flag Pulse</p> <p>BIT : Binary Digit</p> <p>BLK : Black, Blanking</p> <p>BLU : Blue</p> <p>BILING : Bilingual</p> <p>BPF : Bandpass Filter</p> <p>BRK : Brake</p> <p>BRN : Brown</p> <p>BT : Band Tuning</p> <p>BUFF : Buffer</p> <p>BW or B/W : Black and White</p> <hr/> <p>C</p> <p>C : Capacitance, Collector, Color</p> <p>CAP : Capstan, Capacitor</p> <p>CAR : Carrier</p> <p>CARR : Carrier</p> <p>CASS : Cassette</p> <p>CCD : Charge Coupled Device</p> <p>CCT : Circuit</p> <p>CD : Count Down</p> <p>CE : Chip Enable</p> <p>CF : Ceramic Filter</p> <p>CH : Channel</p> <p>CHG : Charge</p> <p>CHROMA : Chrominance</p> <p>CLK : Clock</p> <p>CLR : Clear</p> <p>CMD : Command</p> <p>CNT : Count, Counter</p> <p>COL : Color</p> <p>COM : Common</p> <p>COMB : Combination</p> <p style="padding-left: 20px;">Comb Filter</p> <p>COMP : Comparator</p> <p style="padding-left: 20px;">Composite</p> <p style="padding-left: 20px;">Compensation</p> <p>CONN : Connector</p> <p>CONV : Converter</p> <p>CP : Circuit Protector</p> <p style="padding-left: 20px;">Clamp Pulse</p> <p>CPC : Capstan Phase Control</p> <p>CTL : Control</p> <hr/>	<p>D</p> <p>D : Drum, Digital, Diode, Drain</p> <p>DAC : Digital to Analog Converter</p> <p>dB : Decibel</p> <p>DC : Direct Current</p> <p>DEC : Decoder</p> <p>DEMOC : Demodulator</p> <p>DEMUX : Demultiplexer</p> <p>DET : Detector</p> <p>DEV : Deviation</p> <p>DIF : Differential</p> <p>DISCR : Discriminator</p> <p>DL : Delay Line</p> <p>DOC : Dropout Compensator</p> <p>DOD : Drop Out Detector</p> <p>DPC : Drum Phase Control</p> <hr/> <p>E</p> <p>E : Edit, Emitter</p> <p>E-E : Electric to Electric</p> <p>EF : Emitter-Follower</p> <p>EMP : Emphasis</p> <p>EN : Enable</p> <p>ENC : Encoder</p> <p>ENV : Envelope</p> <p>EP : Extended Play</p> <p>EQ : Equalizer</p> <p>ES : Electronic Switch</p> <p>ESNS : End Sensor</p> <p>EXP : Expander</p> <p>EXT : External</p> <hr/> <p>F</p> <p>F : Farad, Fuse</p> <p>F ADV : Frame Advance</p> <p>FDP : Fluorescent Display Panel</p> <p>FE : Full Erase</p> <p>FET : Field Effect Transistor</p> <p>FF : Fast Forward</p> <p style="padding-left: 20px;">Flipflop</p> <p>FG : Frequency Generator</p> <p>FM : Frequency Modulation</p> <p>FMA : FM Audio</p> <p>FR : Full Recording, Frame, Fusible Resistor</p> <p>FREQ : Frequency</p> <p>F-V CONV : Frequency to Voltage Converter</p> <p>FWD : Forward</p> <p>FWD S : Forward Search</p> <hr/> <p>G</p> <p>G : Green, Gate, Grid</p> <p>GEN : Generator</p> <p>GND : Ground</p> <p>GRN : Green</p> <p>GRY : Gray</p> <hr/> <p>H</p> <p>H : High, Henry, Hour</p> <p>HG : Hall Generator</p> <p>HPF : Highpass Filter</p> <p>Hz : Herz</p> <hr/> <p>I</p> <p>IC : Integrated Circuit</p> <p>ID : Identification (Pulse)</p> <p>IF : Intermediate Frequency</p> <p>IFR : Infrared</p> <p>IFT : Intermediate Frequency Transformer</p> <p>IND : Indicator</p> <p>INH : Inhibit</p> <p>INS : Insert</p> <p>INT : Internal, Interrupt</p> <p>INV : Inverter</p> <p>I/O : Input/Output</p> <p>IR : Infrared</p> <hr/> <p>L</p> <p>L : Low, Left</p> <p>LIM : Limiter</p> <p>LIN : Linearity</p> <p>LOAD : Loading (Cassette)</p> <p>LP : Long Play</p> <p>LPF : Lowpass Filter</p> <hr/>
---	--

M M : Motor, Mega
 MAX : Maximum
 MDA : Motor Drive Amplifier
 MECHACON : Mechanism Control
 MIC : Microphone
 MIN : Minimum
 MIX : Mixer, Mixing
 MMV : Monostable Multivibrator
 MOD : Modulation, Modulator
 MODEM : Modulator-Demodulator
 MON : Monitor
 MPX : Multiplexer, Multiplex
 MS : Mode Select

N NAND : Not-And
 NC : Not Connected, Normally Closed
 NFB : Negative Feedback
 NLN : Non-Linear
 NO : Normally Open
 NOR : Normal, Not-Or
 NR : Noise Reduction

O OP : Operation
 OPAMP : Operational Amplifier
 ORN : Orange
 OSC : Oscillator

P PB : Playback
 PC : Photocoupler, Pulse Counter
 PCM : Pulse Code Modulation
 PG : Pulse Generator
 PGM : Program
 PI : Photo Interrupter
 PIF : Picture Intermediate Frequency
 PLA : Programmable Logic Array
 PLL : Phase Locked Loop
 POS : Position
 p-p : Peak-to-Peak
 PREAMP : Preamplifier
 P/S : Pause/Still
 PSC : Pulse Swallowing Control
 PU : Pickup
 PUT : Programmable Unijunction Transistor
 PWM : Pulse Width Modulation
 PWR : Power

Q Q : Quality Factor

R R : Red, Right
 RA : Resistor Array
 RAE : Random Access Enable
 RAM : Random Access Memory
 REC : Recording
 REF : Reference
 REG : Regulated, Regulator
 REM : Remote
 REMOCON : Remote Control (Unit)
 REV : Reverse
 REV S : Reverse Search
 REW : Rewind
 R/P : Record/Playback
 RPT : Repeat
 RST : Reset
 RT : Rotary Transformer
 RUN : Running
 RY : Relay

S SAW : Sawtooth, Surface Acoustic Wave
 SC : Subcarrier, Simulcast
 SCH : Search
 SEL : Select, Selector
 SENS : Sensor
 SEP : Separator
 SF : Source Follower
 SFF : Short Fast Forward
 SIF : Sound Intermediate Frequency

SHARP : Sharpness
 SN : Signal to Noise Ratio
 SOL : Solenoid
 SP : Standard Play
 SREV : Search Reverse
 SREW : Short Rewind
 S/S : Slow/Still
 SSG : Sync Signal Generator
 SSNS : Start Sensor
 STD : Strobe Data, Standard
 SUP : Supply
 SW : Switch
 SWD : Switched
 SYNC : Synchronization

T TF : Thermal Fuse
 TIM : Timing
 TK : Tracking
 TNR : Tuner
 TP : Test Point
 TPZD : Trapezoid
 TR : Transistor, Trimmer
 TRANS : Transformer
 TU : Take-up

U UL : Unloading
 UNREG : Unregulated
 UNSW : Unswitched

V V : Vertical, Volt
 VCO : Voltage Controlled Oscillator
 VD : Vertical Drive
 VIF : Video Intermediate Frequency
 VLT : Violet
 VR : Variable Resistor
 VS : Video and Sync
 V/T : Video/Television
 V/U : VHF/UHF
 VXO : Variable Crystal Oscillator

W W : Watt
 W & D : White and Dark
 WHT : White







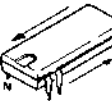

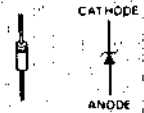
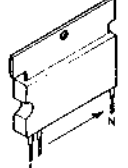














X XTAL : Crystal

Y Y : Luminance
 YEL : Yellow

3.4 MAIN TYPES OF ACTIVE AND PACKAGE CIRCUITS

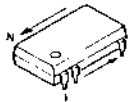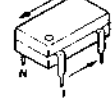INTEGRATED CIRCUIT			TRANSISTOR			DIODE		
	NAME	L		NAME	L		NAME	L
A	AN3380K	2A	D	DTA114ES DTA124ES DTC114YS DTC124ES DTC144ES DTC144WS DTC144YS	3C 3C 3C 3C 3C 3C 3C	H	HZS4.3EB2 HZS7.5EB2 HZT33-02 HZ30-2	2E 2E 2E 2E
B	BA10358 BA6222 BA6259N BA7007 BA7751ALS	2B 3A 5B 5B 5A	P	PN268R		L	LTZ-MR15	3E
G	GP1U501		2SA	2SA1309 2SA720 2SA933	3C 2C 3C	M	MA165 MA27TB MA27W(A) MTZ11B MTZ5.1	1E 7E 2E 2E
H	HD49712NT	1A	2SB	2SB810	3C	R	RD10ES-T1B2 RD9.1ESB2	2E 2E
I	IC-PST523H-2	7A	2SC	2SC1740 2SC2021 2SC2636 2SC3311 2SC3399 2SC3401 2SC536	3C 3C 3C 3C 3C	S	SLR-34MC3F SLR-34VC3F S4VB10-F2	4E 4E 5E
L	LA7910	7B	2SD	2SD1450	3C		1SS132 1SS292 1SS133 11E2	1E 1E 1E
M	MSM6967RS M50731-623SP M51496P M528L56 M54647L	8A 2B 2B 7A 3B						
P	PB20166C PU22046A	4B 4B						
S	STK5481	4A						
T	TA7374P	6A						
U	UPD75208CW-097	2A						

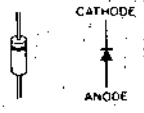Note: FOR INSTANCE, AN3380K →
2A: SEE COLUMN 2, LINE A

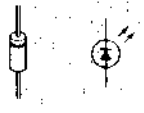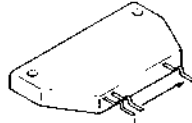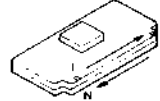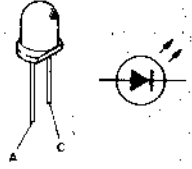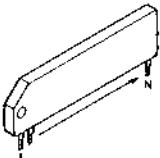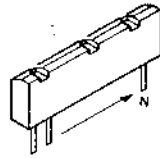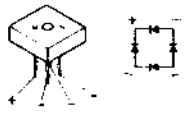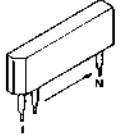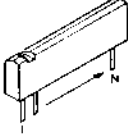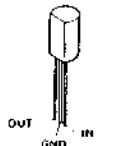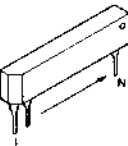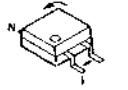	Integrated Circuit		Transistor		Diode
	A	B	C	D	E
1					
2					
3					
4					
5					
6					
7					
8					
9					

3.5 BOARD INTERCONNECTION DIAGRAM

5


4

3

2

1

58	DRUM MOTOR
57	CASSETTE HOUSING
56	CASSETTE HOUSING
55	END SENSOR
54	REC SAFETY
53	RELAY
52	DECK TERMINAL
51	DECK TERMINAL
44	PRE / REC
43	CONNECT
42	U. DRUM
41	U. DRUM
35	MEMORY
22	OPERATION
21	TIMER / DISPLAY
20	TU CTL
19	IF
18	IF
12	A/C HEAD
11	A/C HEAD
10	MAIN
09	MAIN
08	MAIN
07	MAIN
06	MAIN
05	MAIN
04	MAIN
03	MAIN
02	POWER TRANS
01	POWER TRANS
NO.	PWB NAME

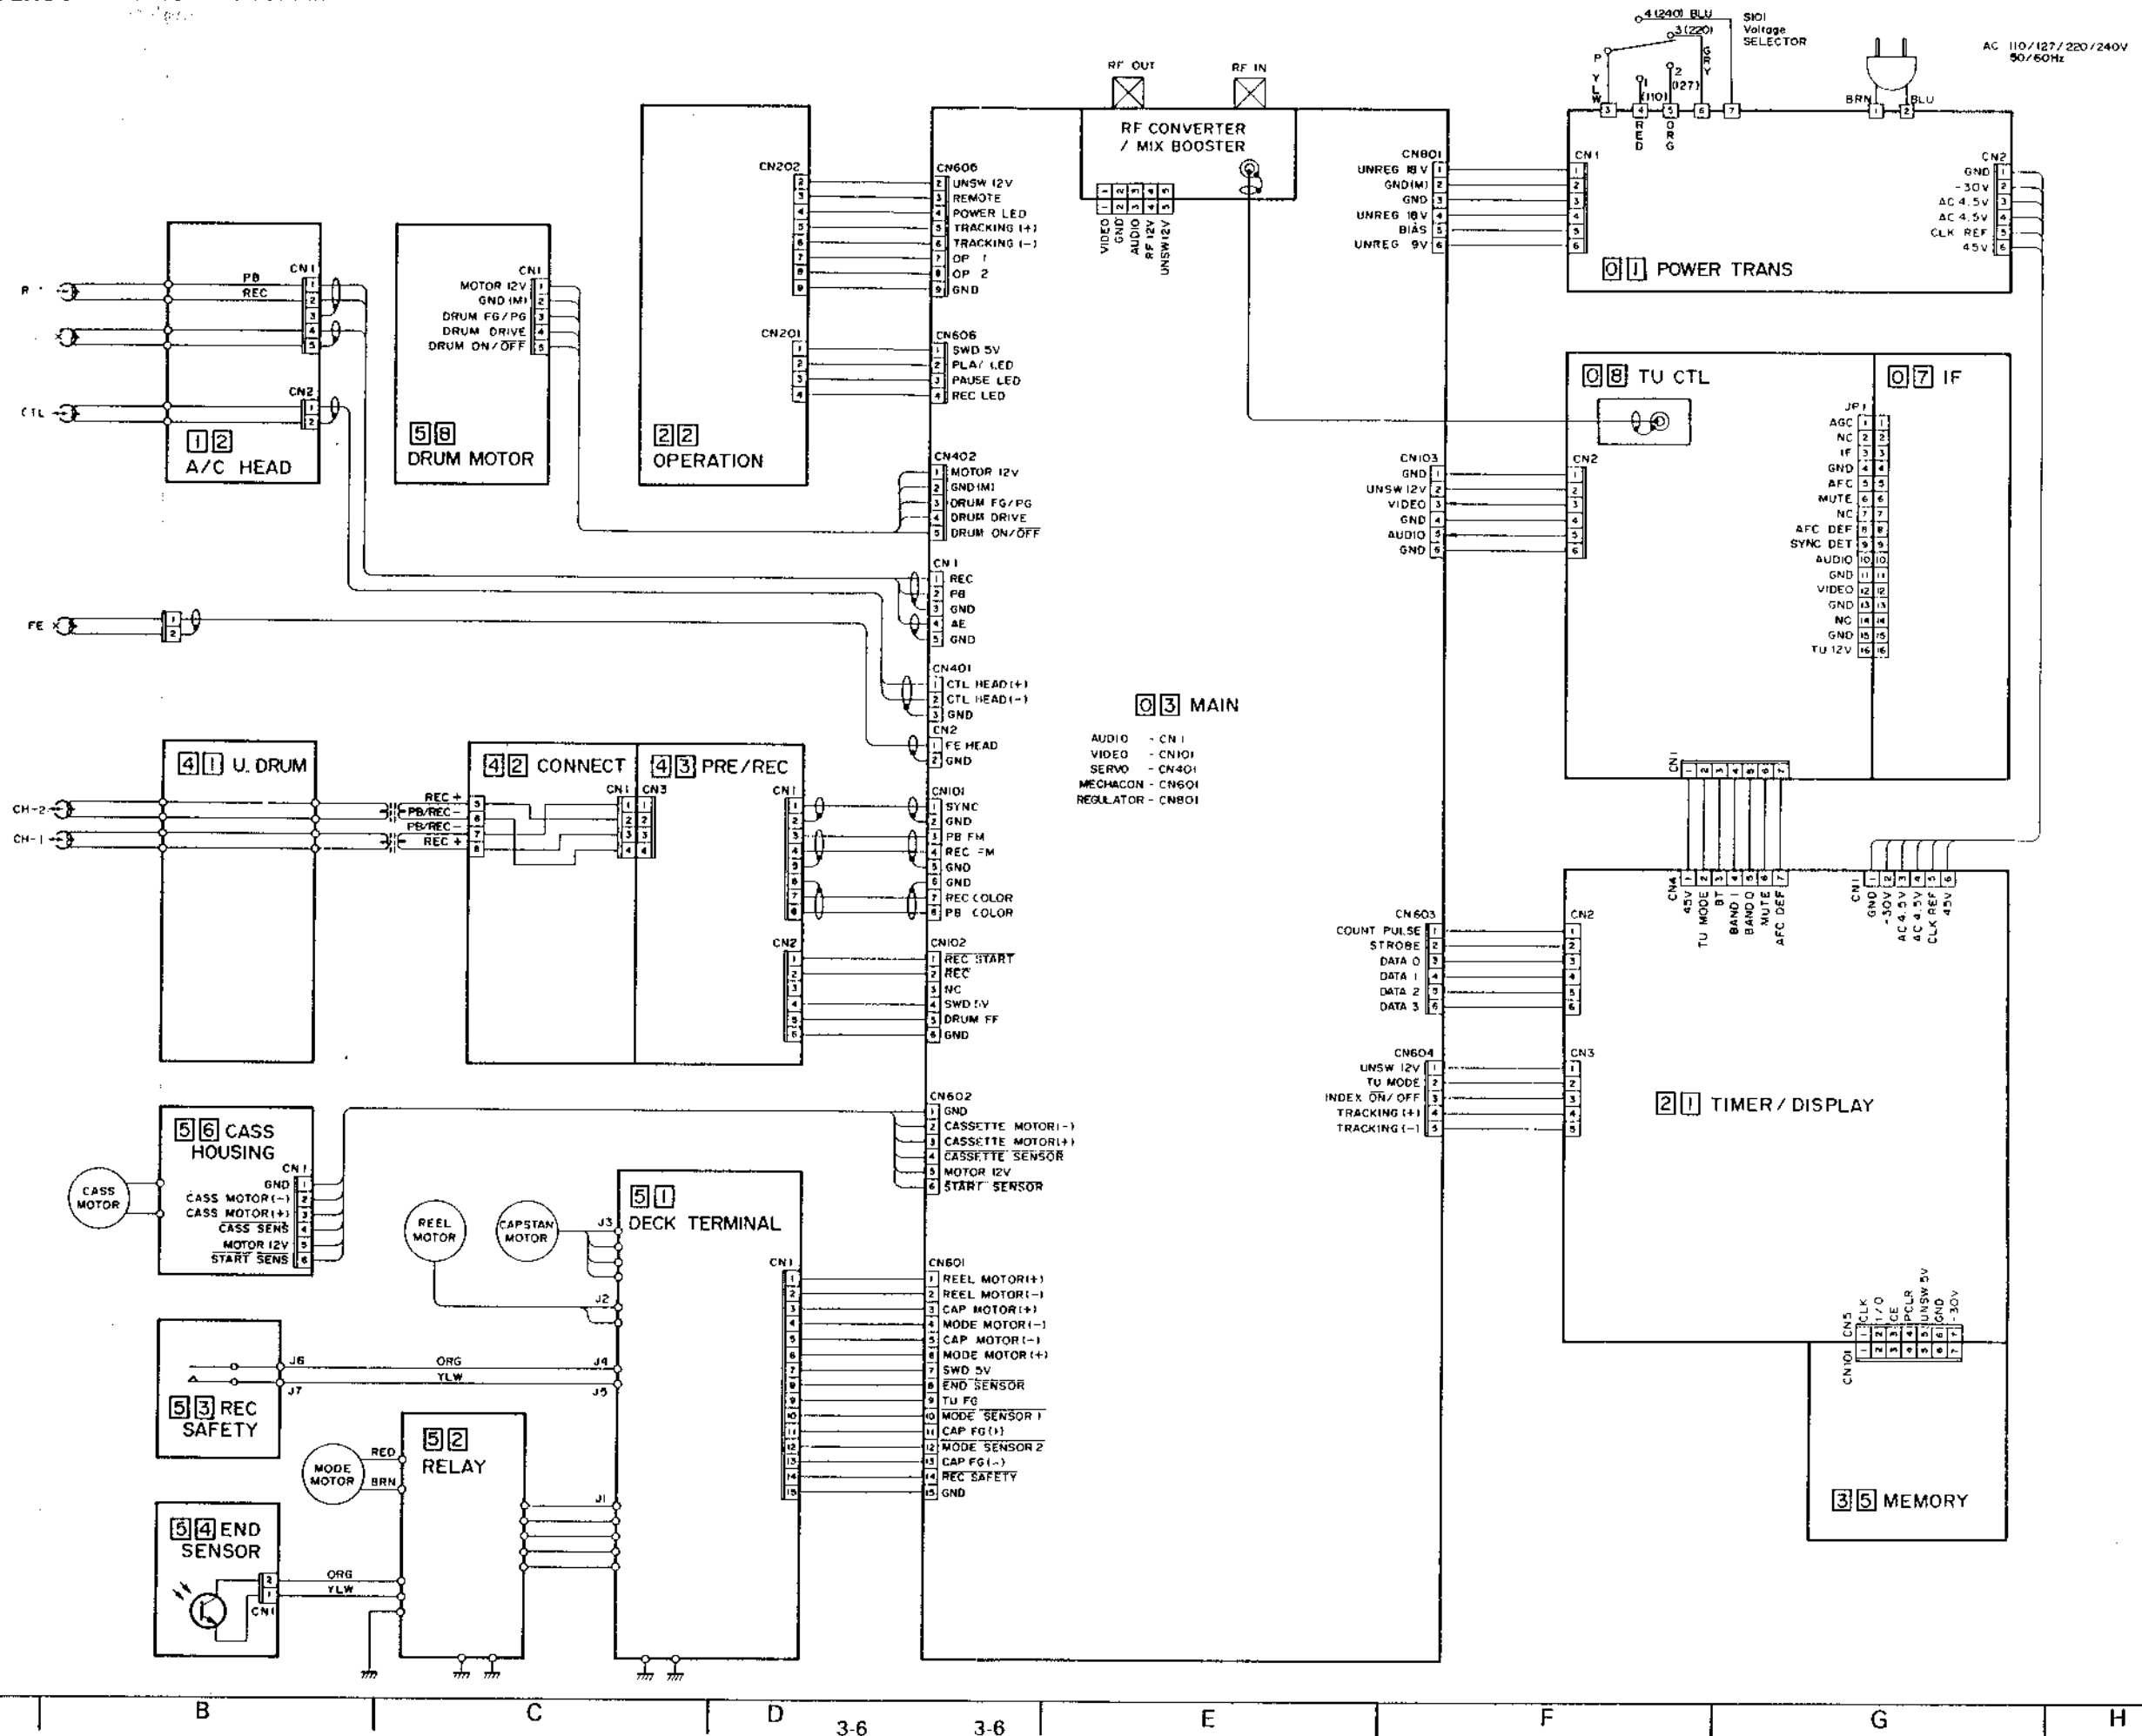

3-6

3-6


E

F


G

H


3.6 IF AND TUNER CTL BLOCK DIAGRAMS

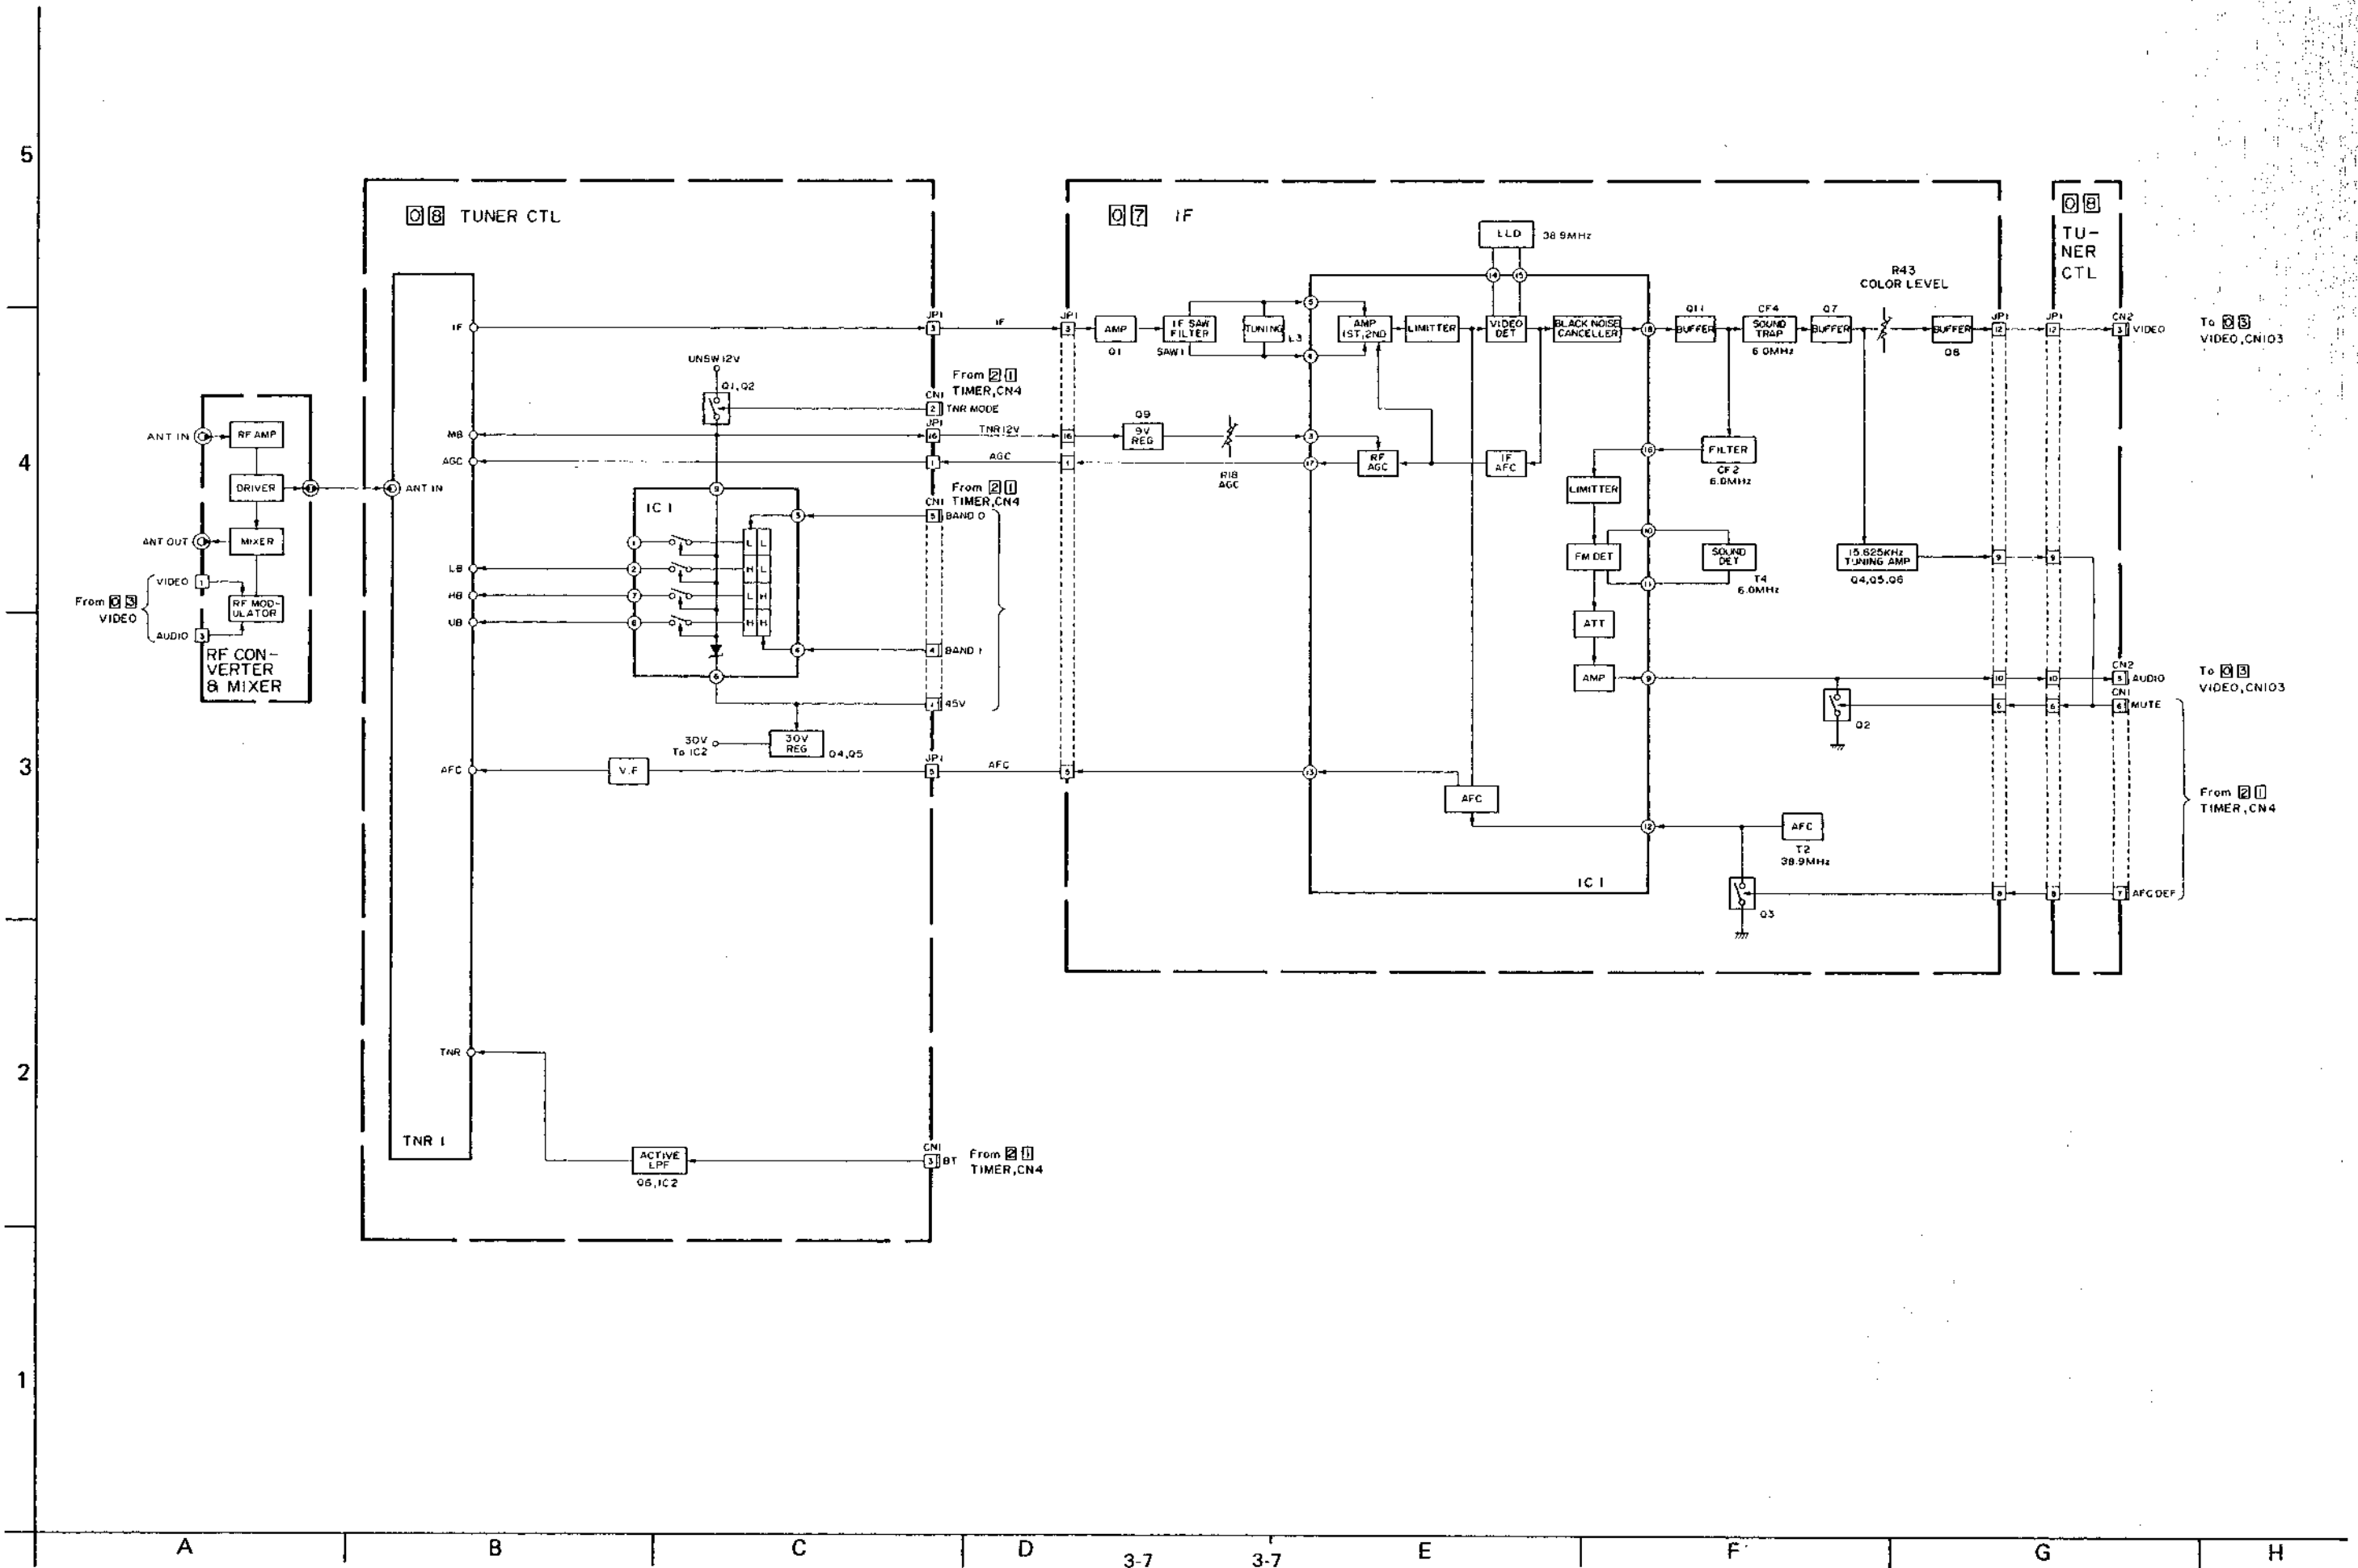


3.7 VIDEO BLOCK DIAGRAM

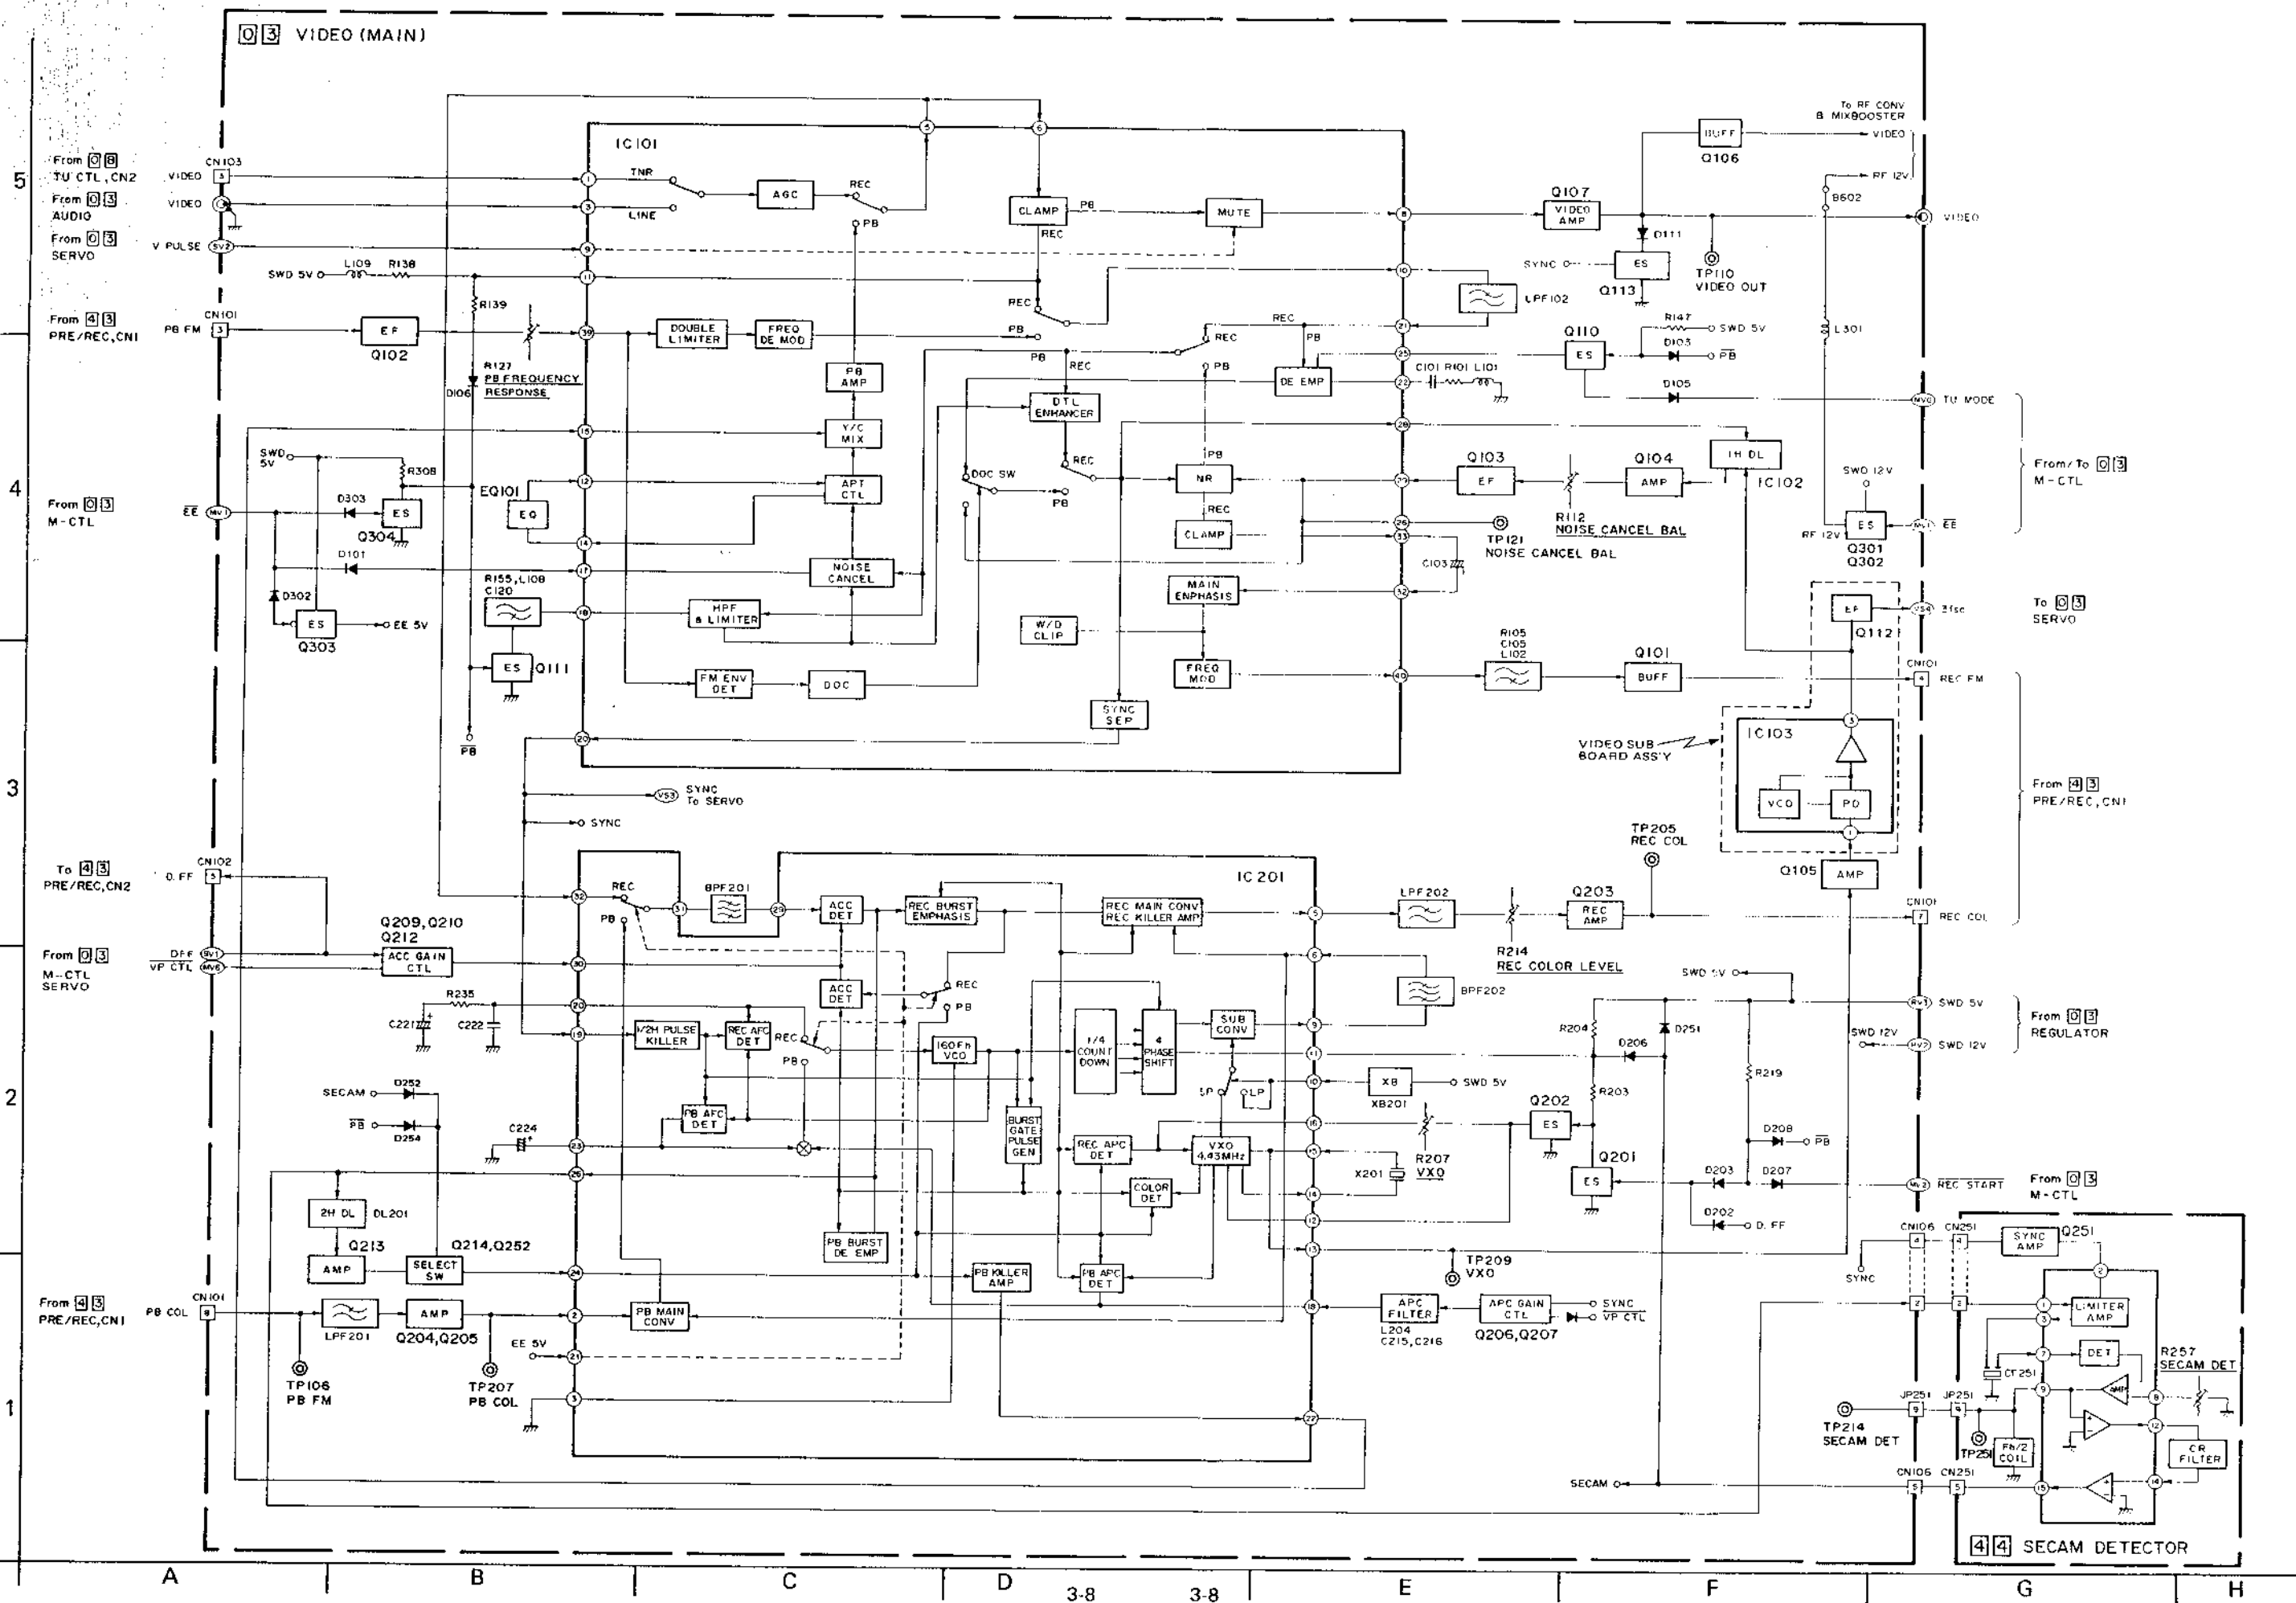


3.8 SERVO BLOCK DIAGRAM

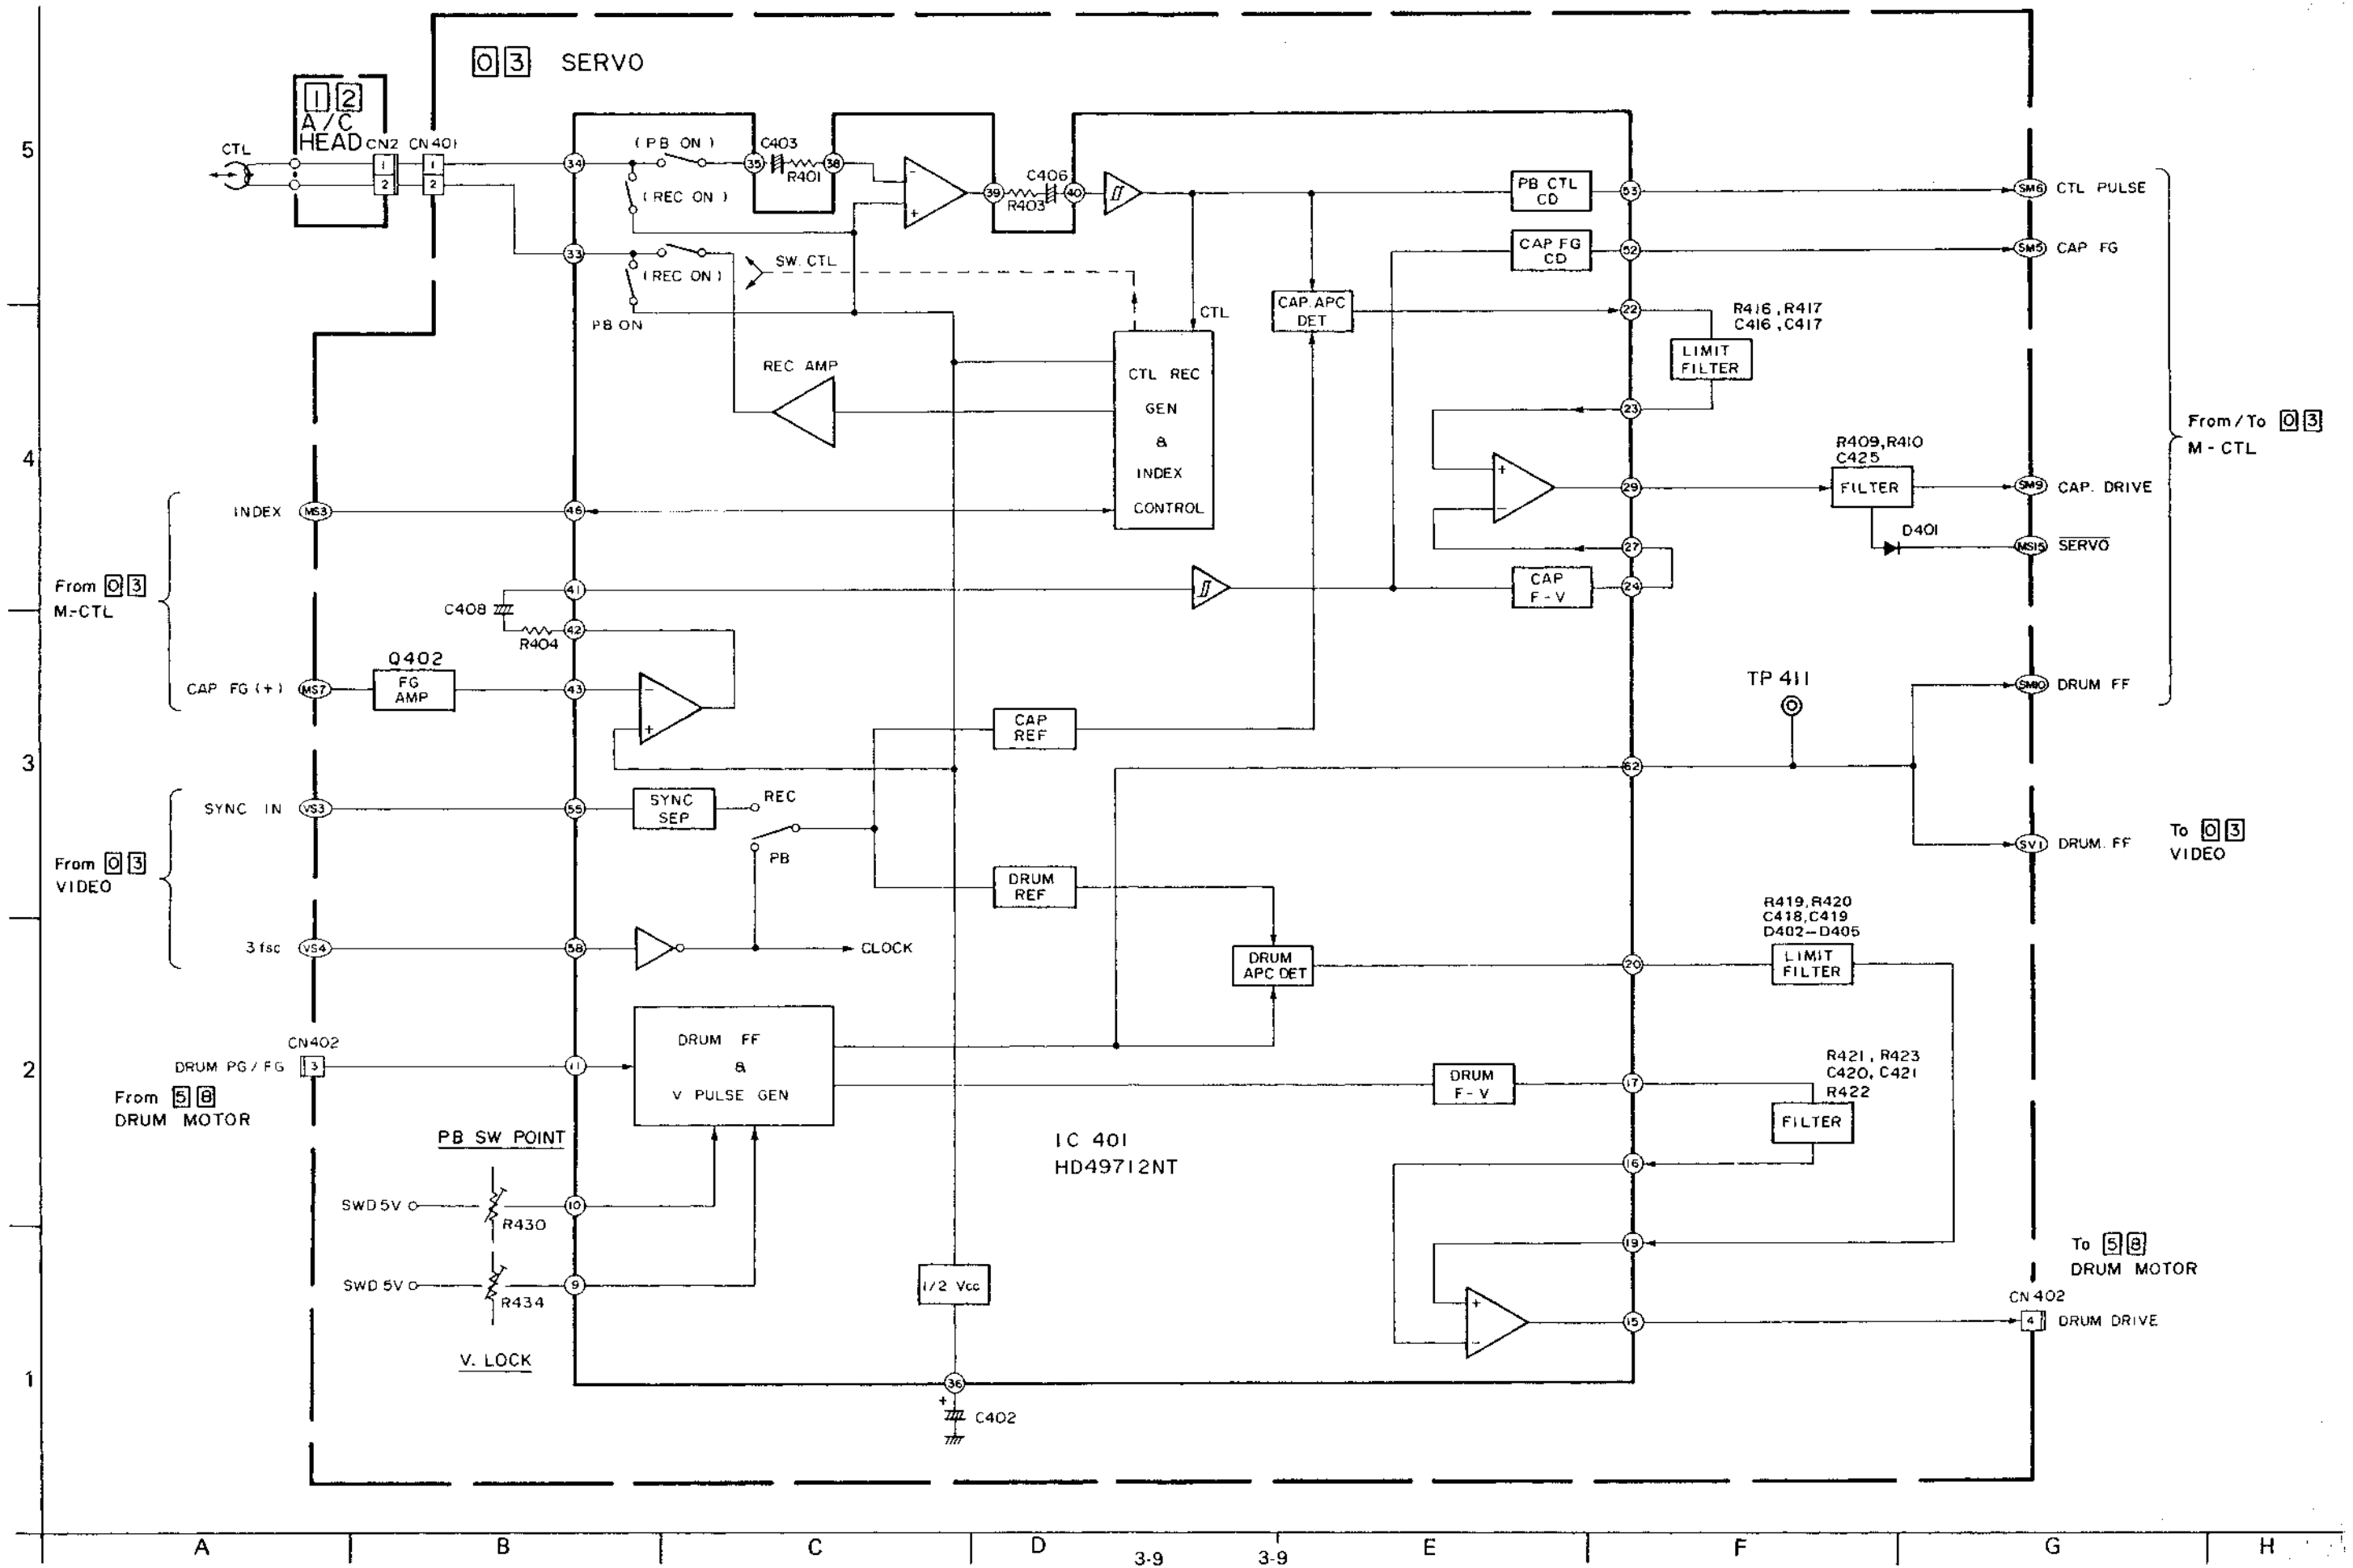


3.9 AUDIO BLOCK DIAGRAM

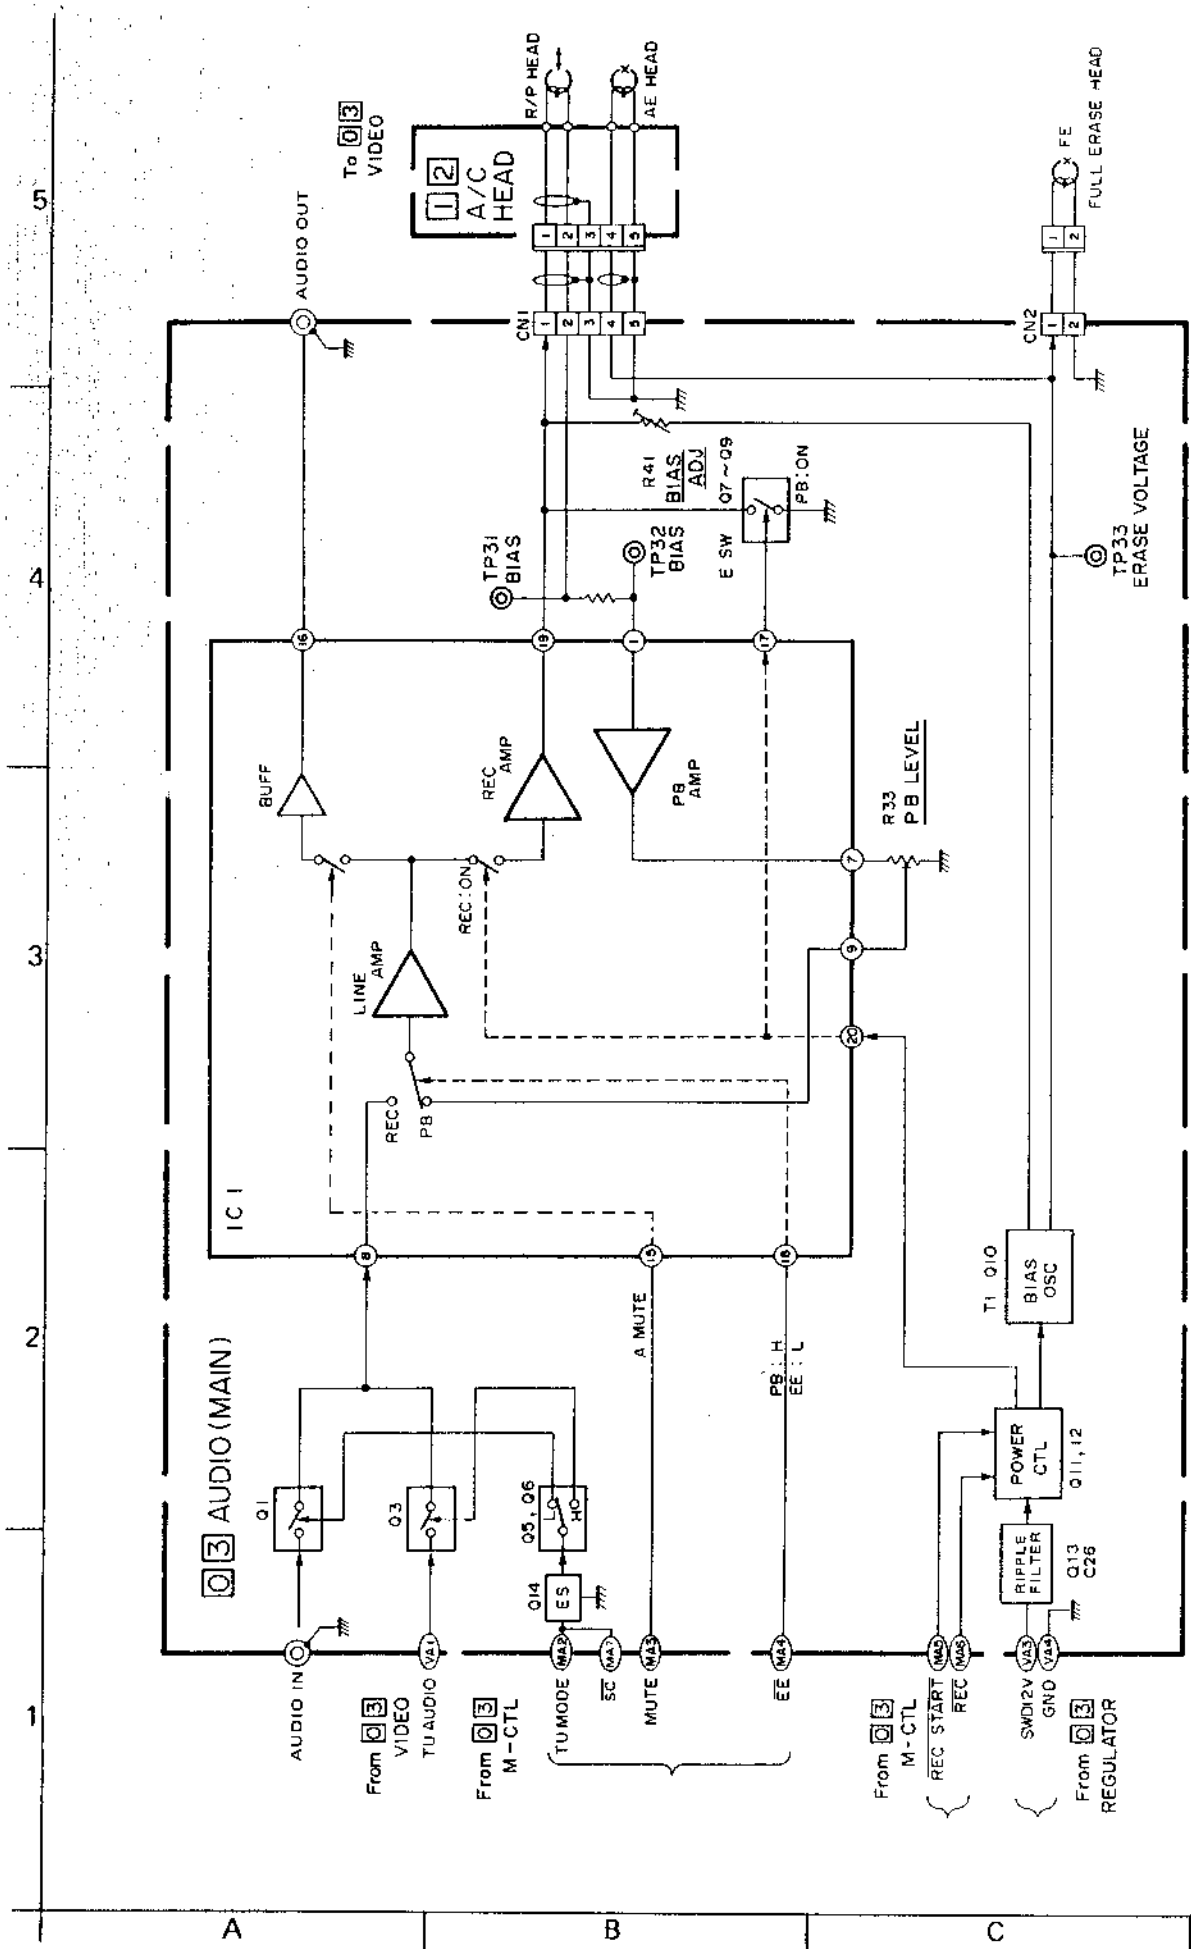

3.10 MECHANISM CONTROL AND TIMER/DISPLAY BLOCK DIAGRAMS

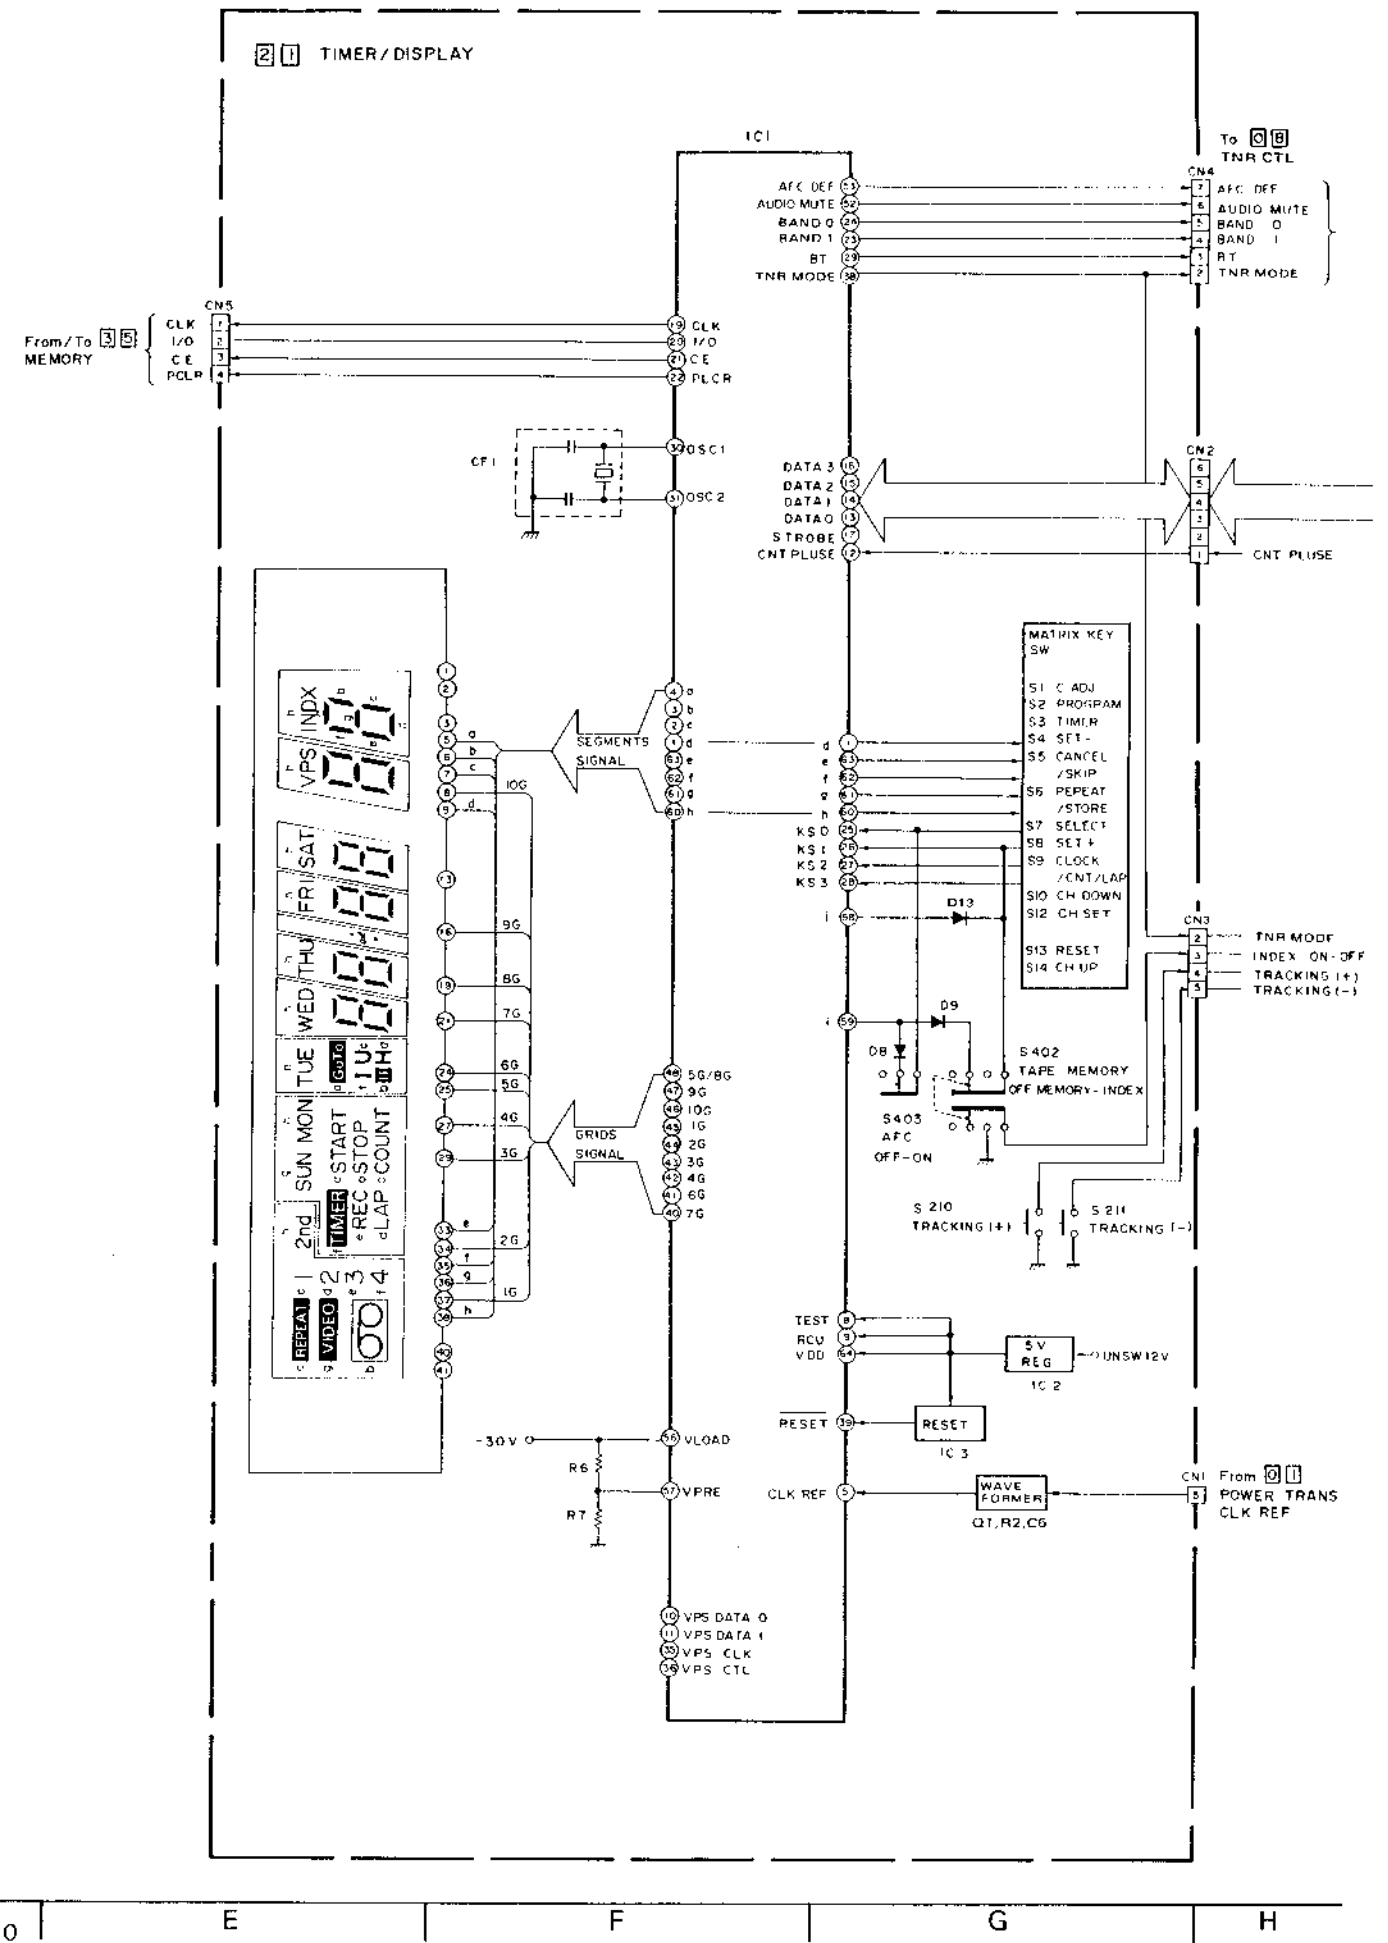

03 MECHACON (MAIN)

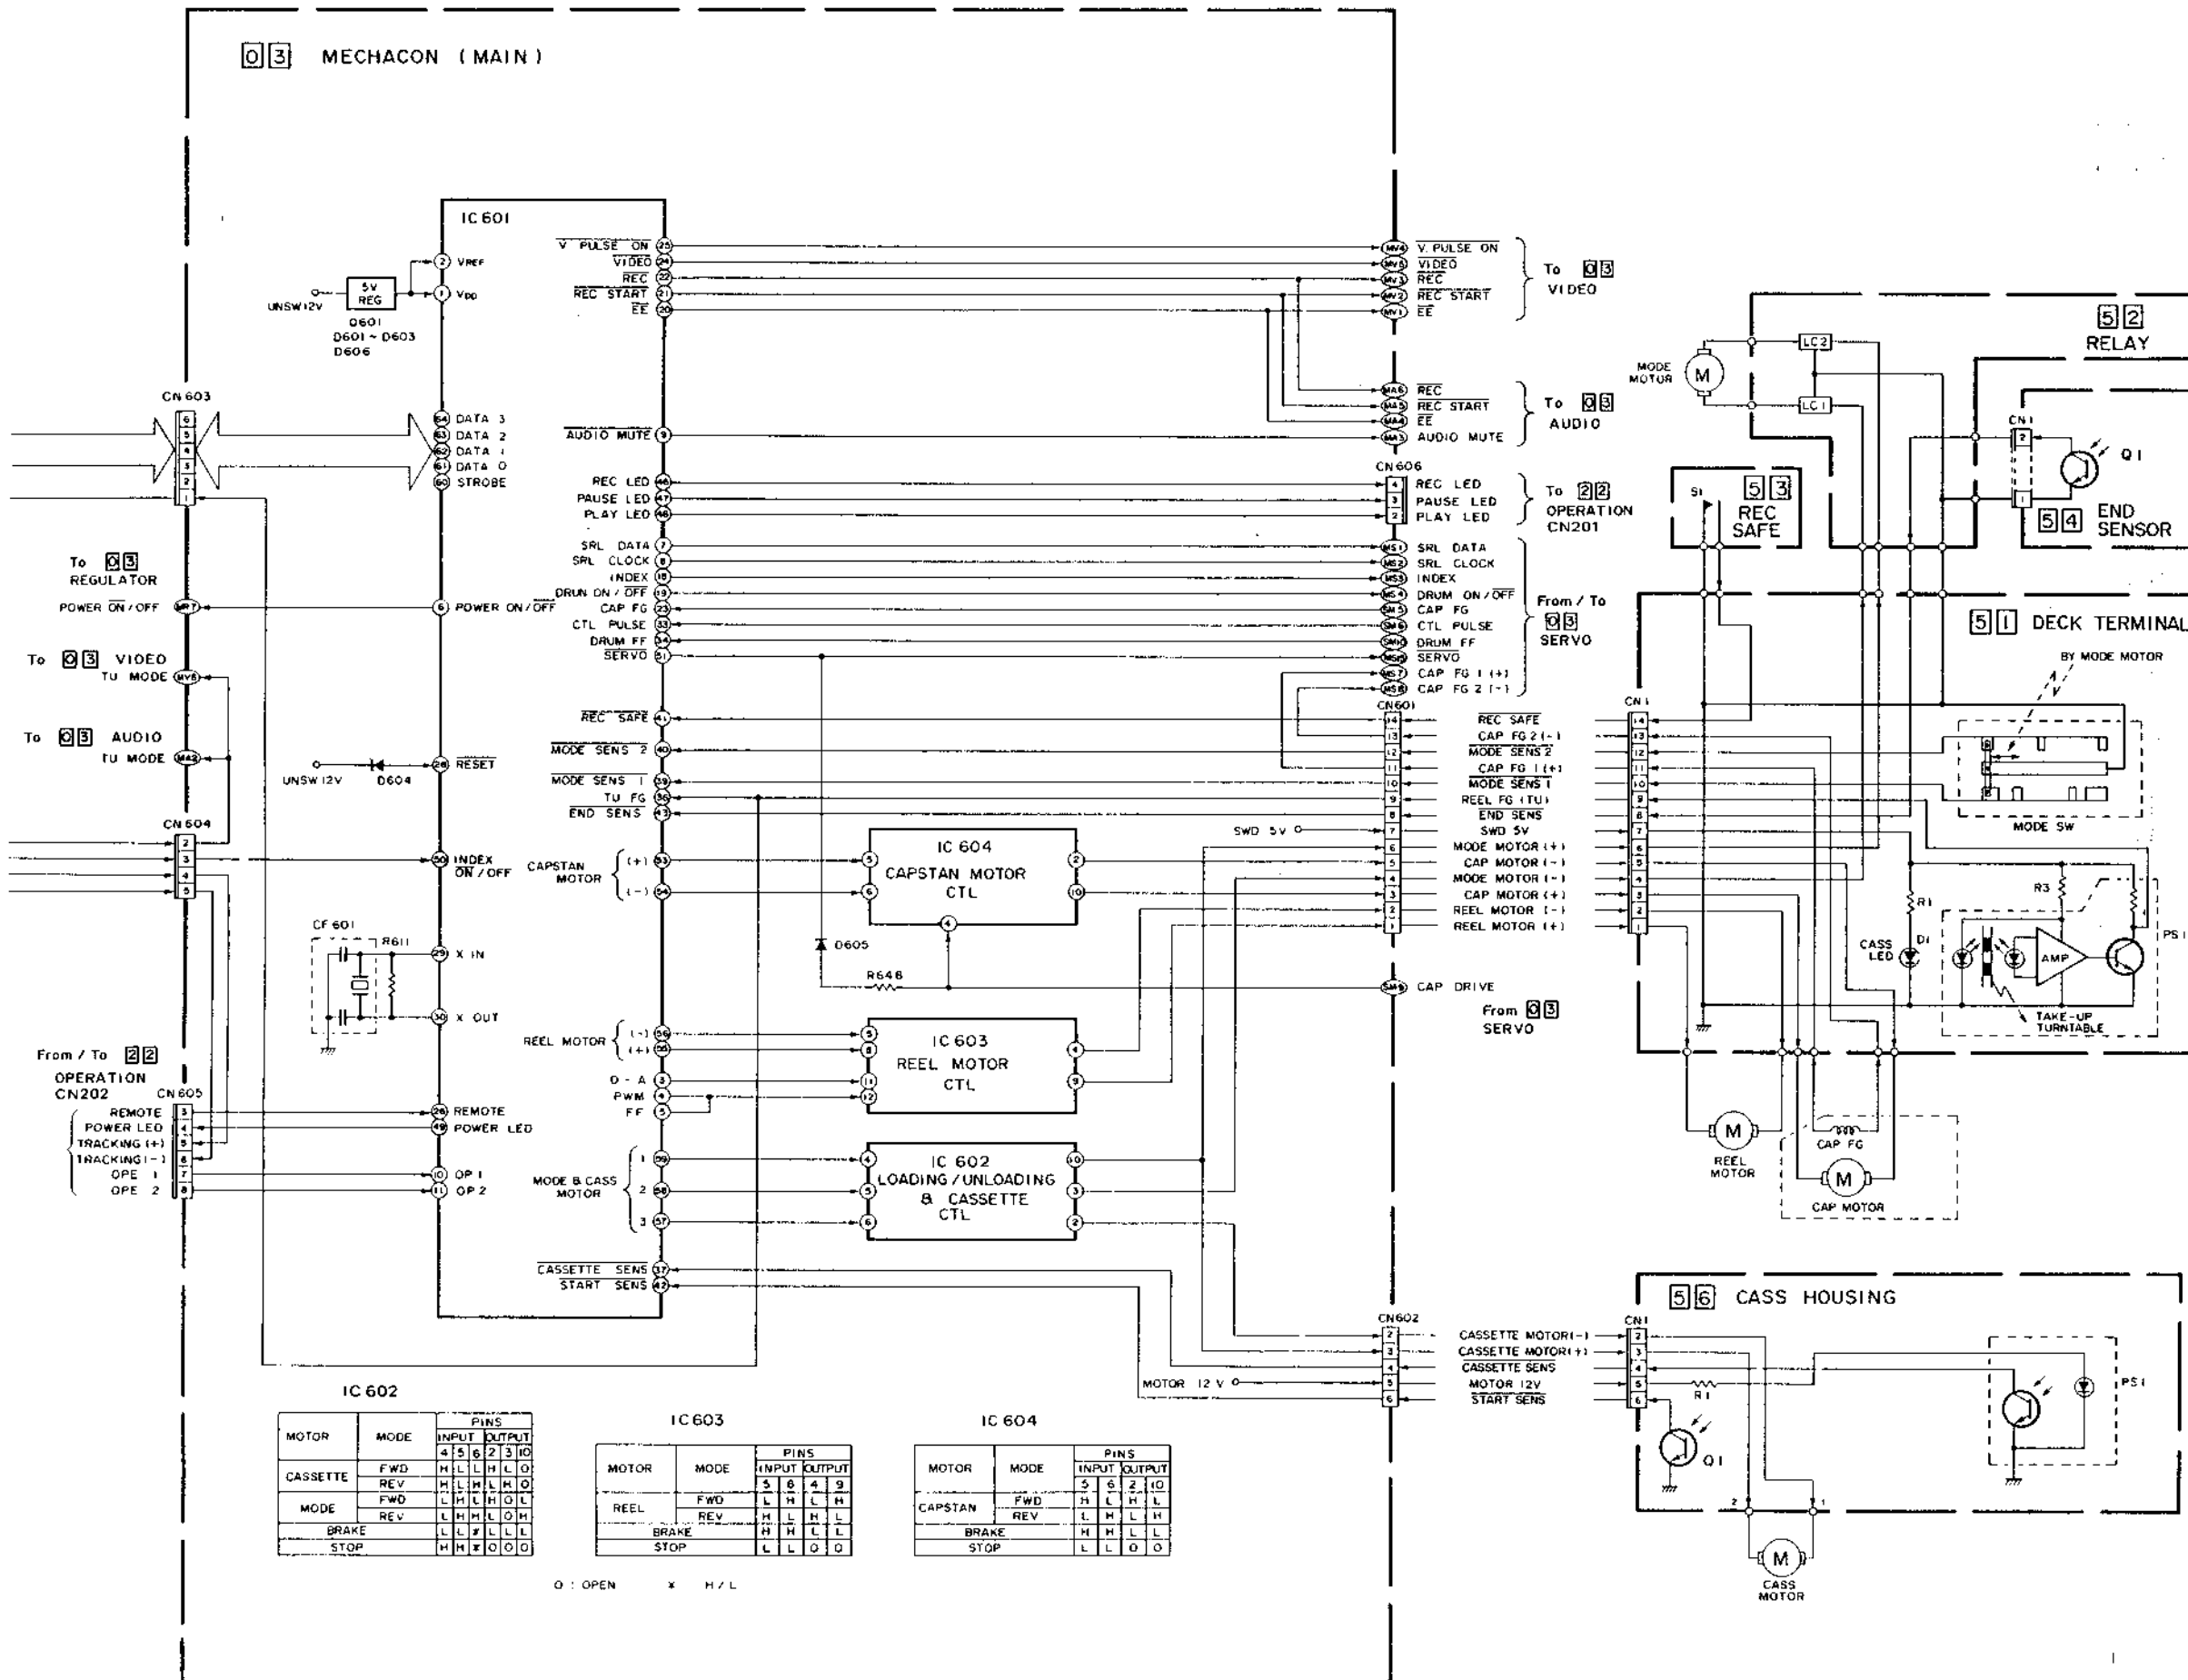

IC 602

MOTOR	MODE	PINS			
		INPUT	OUTPUT	INPUT	OUTPUT
CASSETTE	FWD	H	L	L	H
	REV	H	L	H	L
MODE	FWD	L	H	H	L
	REV	L	H	L	H
BRAKE		L	L	L	L
STOP		H	H	O	O


IC 603

MOTOR	MODE	PINS			
		INPUT	OUTPUT	INPUT	OUTPUT
REEL	FWD	L	H	L	H
	REV	H	L	H	L
BRAKE		H	H	L	L
STOP		L	L	O	O

IC 604



MOTOR	MODE	PINS			
		INPUT	OUTPUT	INPUT	OUTPUT
CAPSTAN	FWD	H	L	H	L
	REV	L	H	L	H
BRAKE		H	H	L	L
STOP		L	L	O	O

O : OPEN X H/L

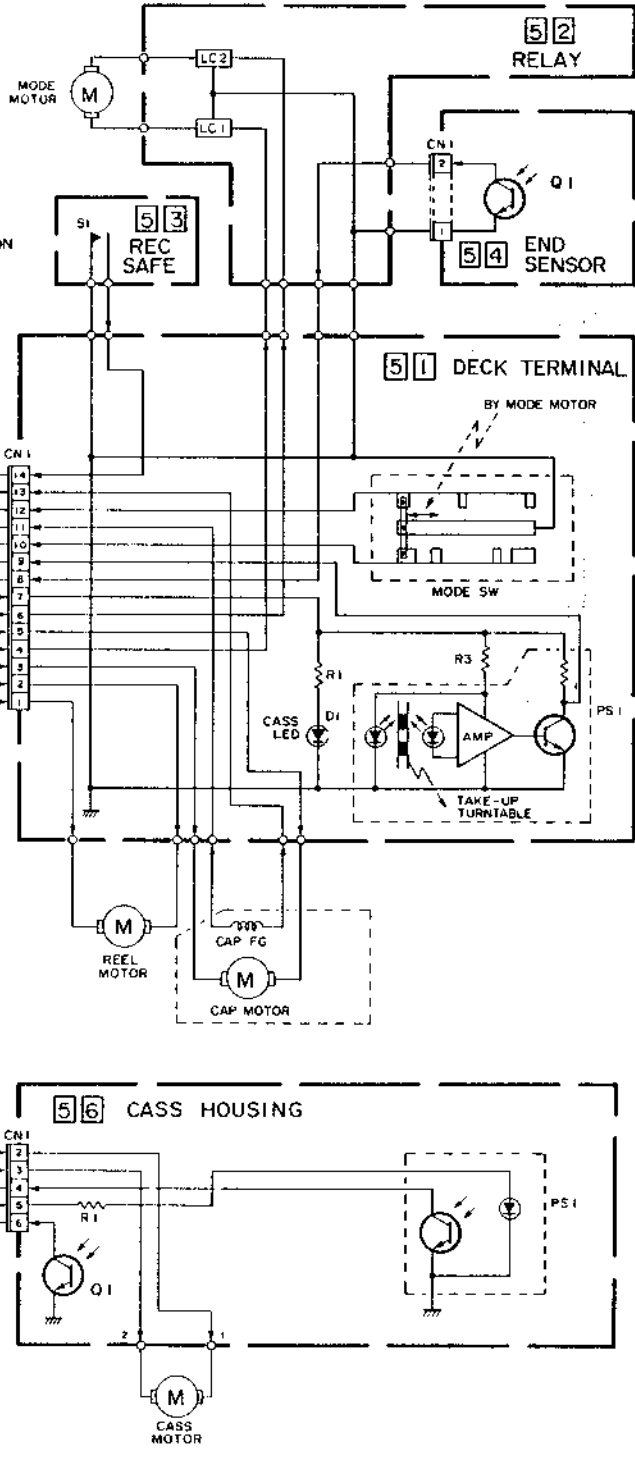

3.11 POWER TRANSFORMER AND REGULATOR SCHEMATIC DIAGRAMS

5
4
3
2
1

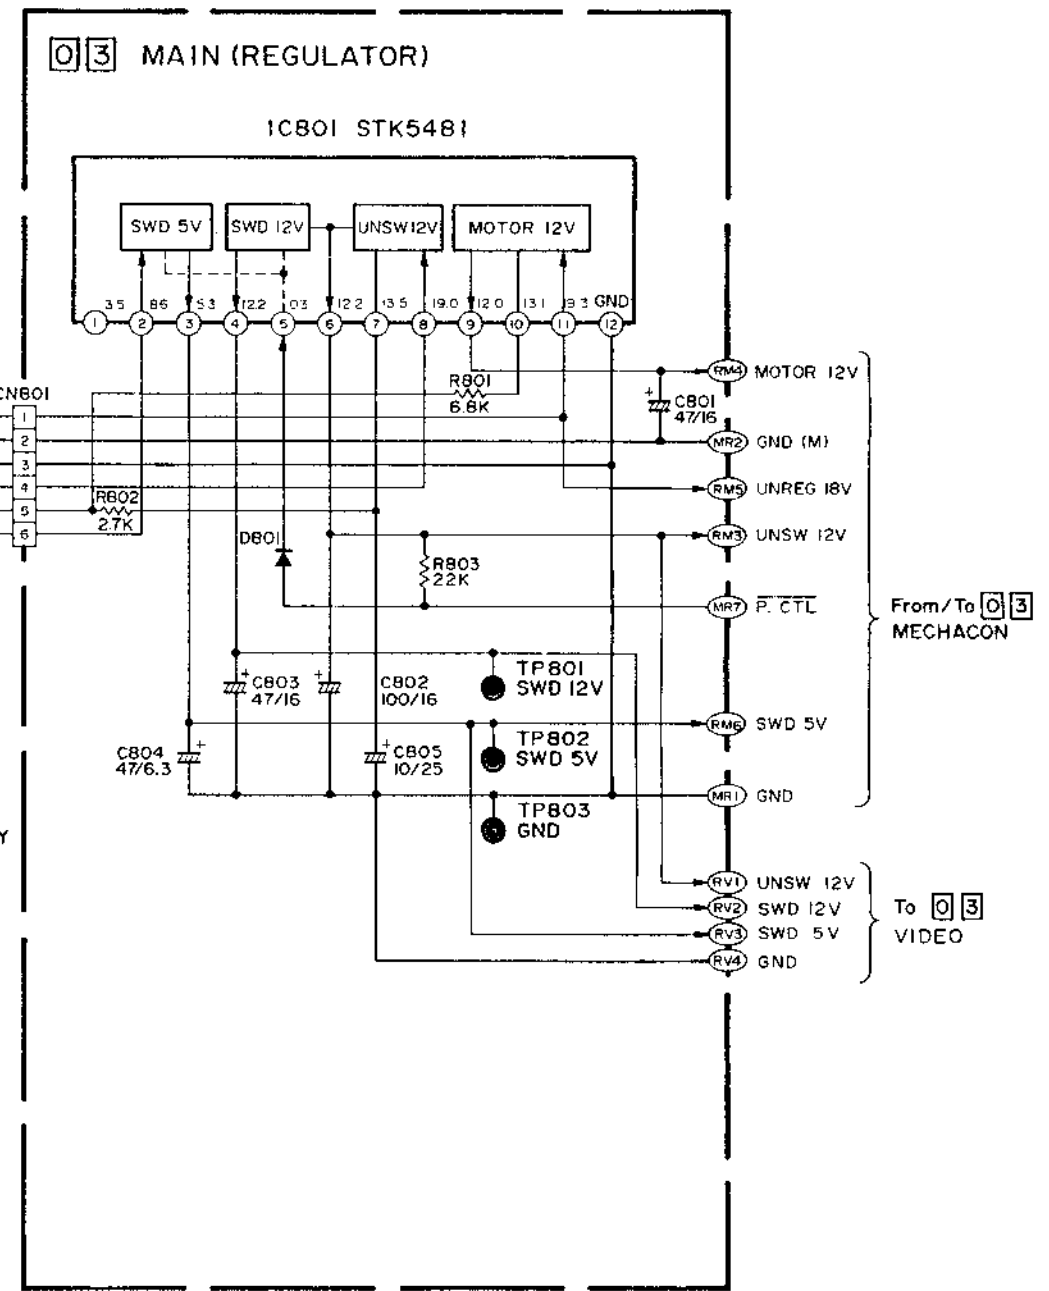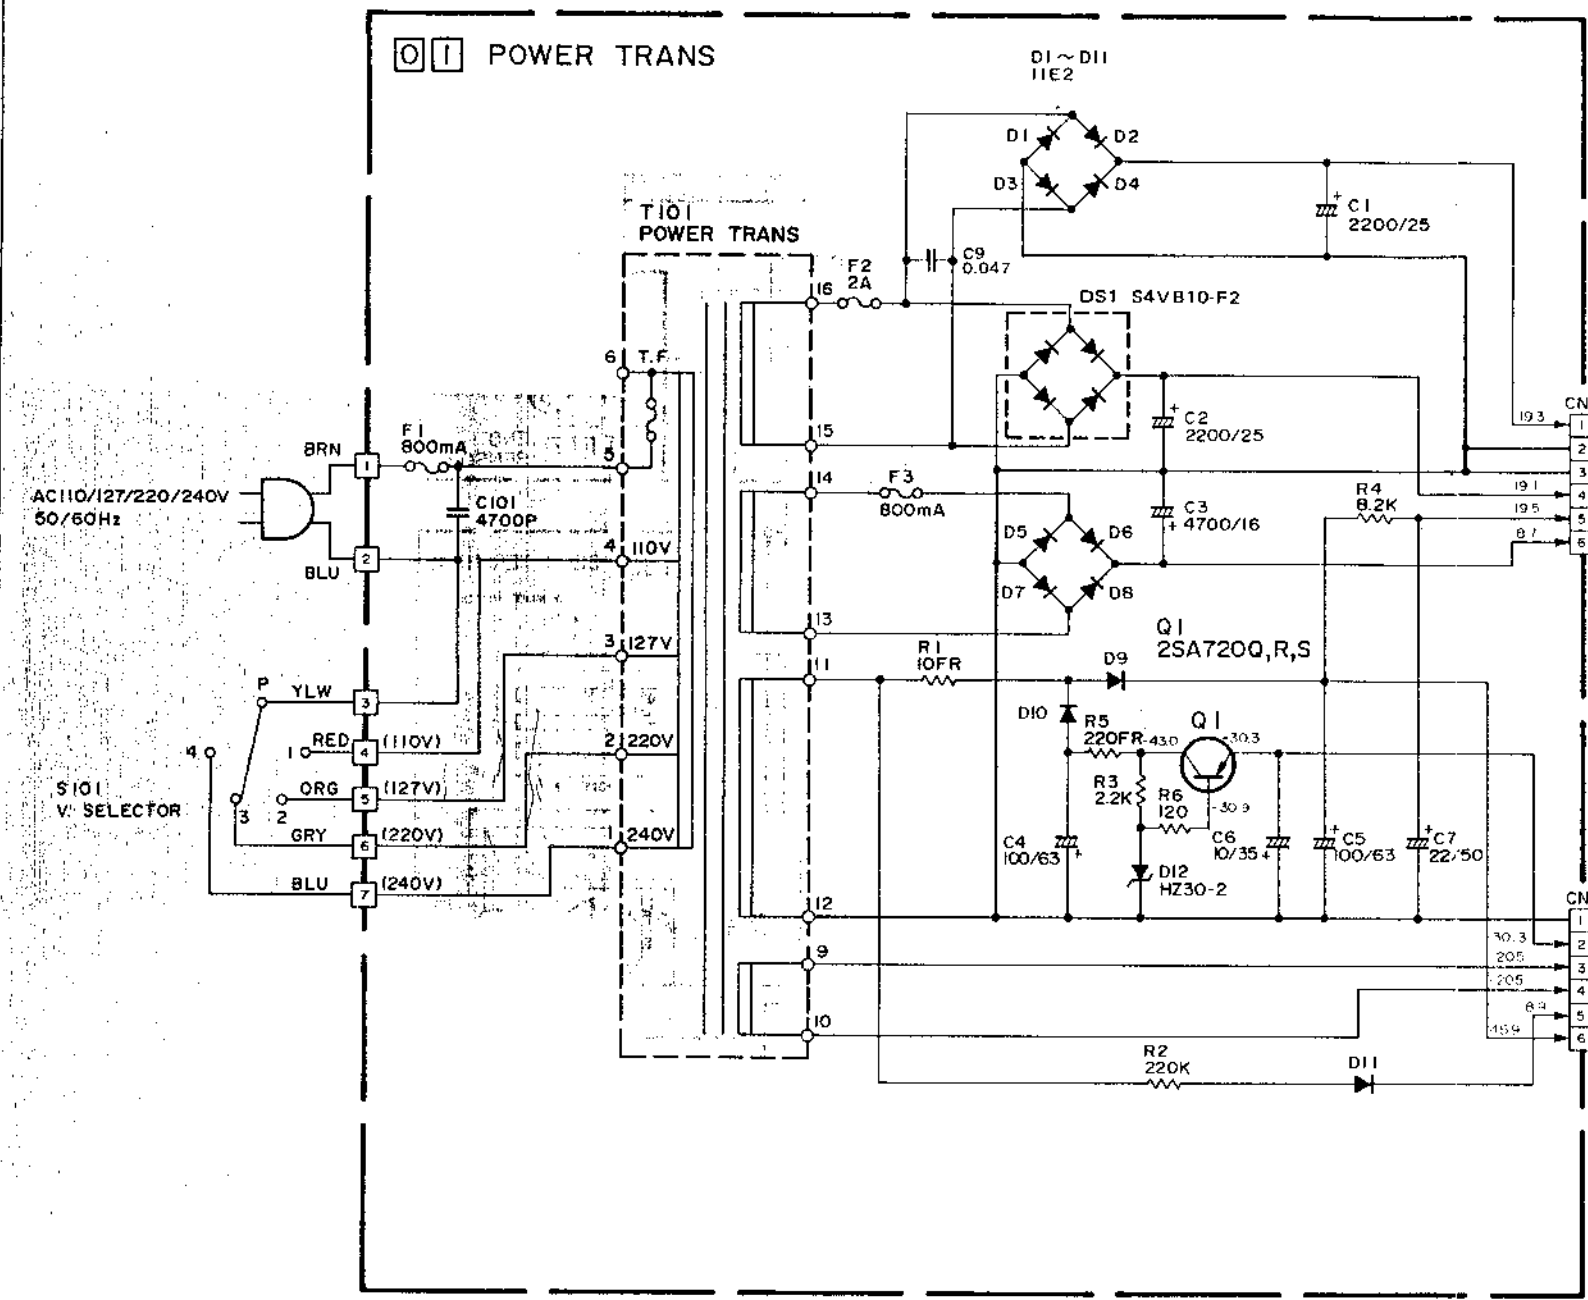


- NOTES:**
1. Shaded (▨) parts are critical for safety. Replace only with specified part numbers.
 2. Voltages are DC-measured with a digital voltmeter during stop mode.

A B C D 3-12 3-12 E F G H

3.12 POWER TRANSFORMER CIRCUIT BOARD


5
4
3
2
1

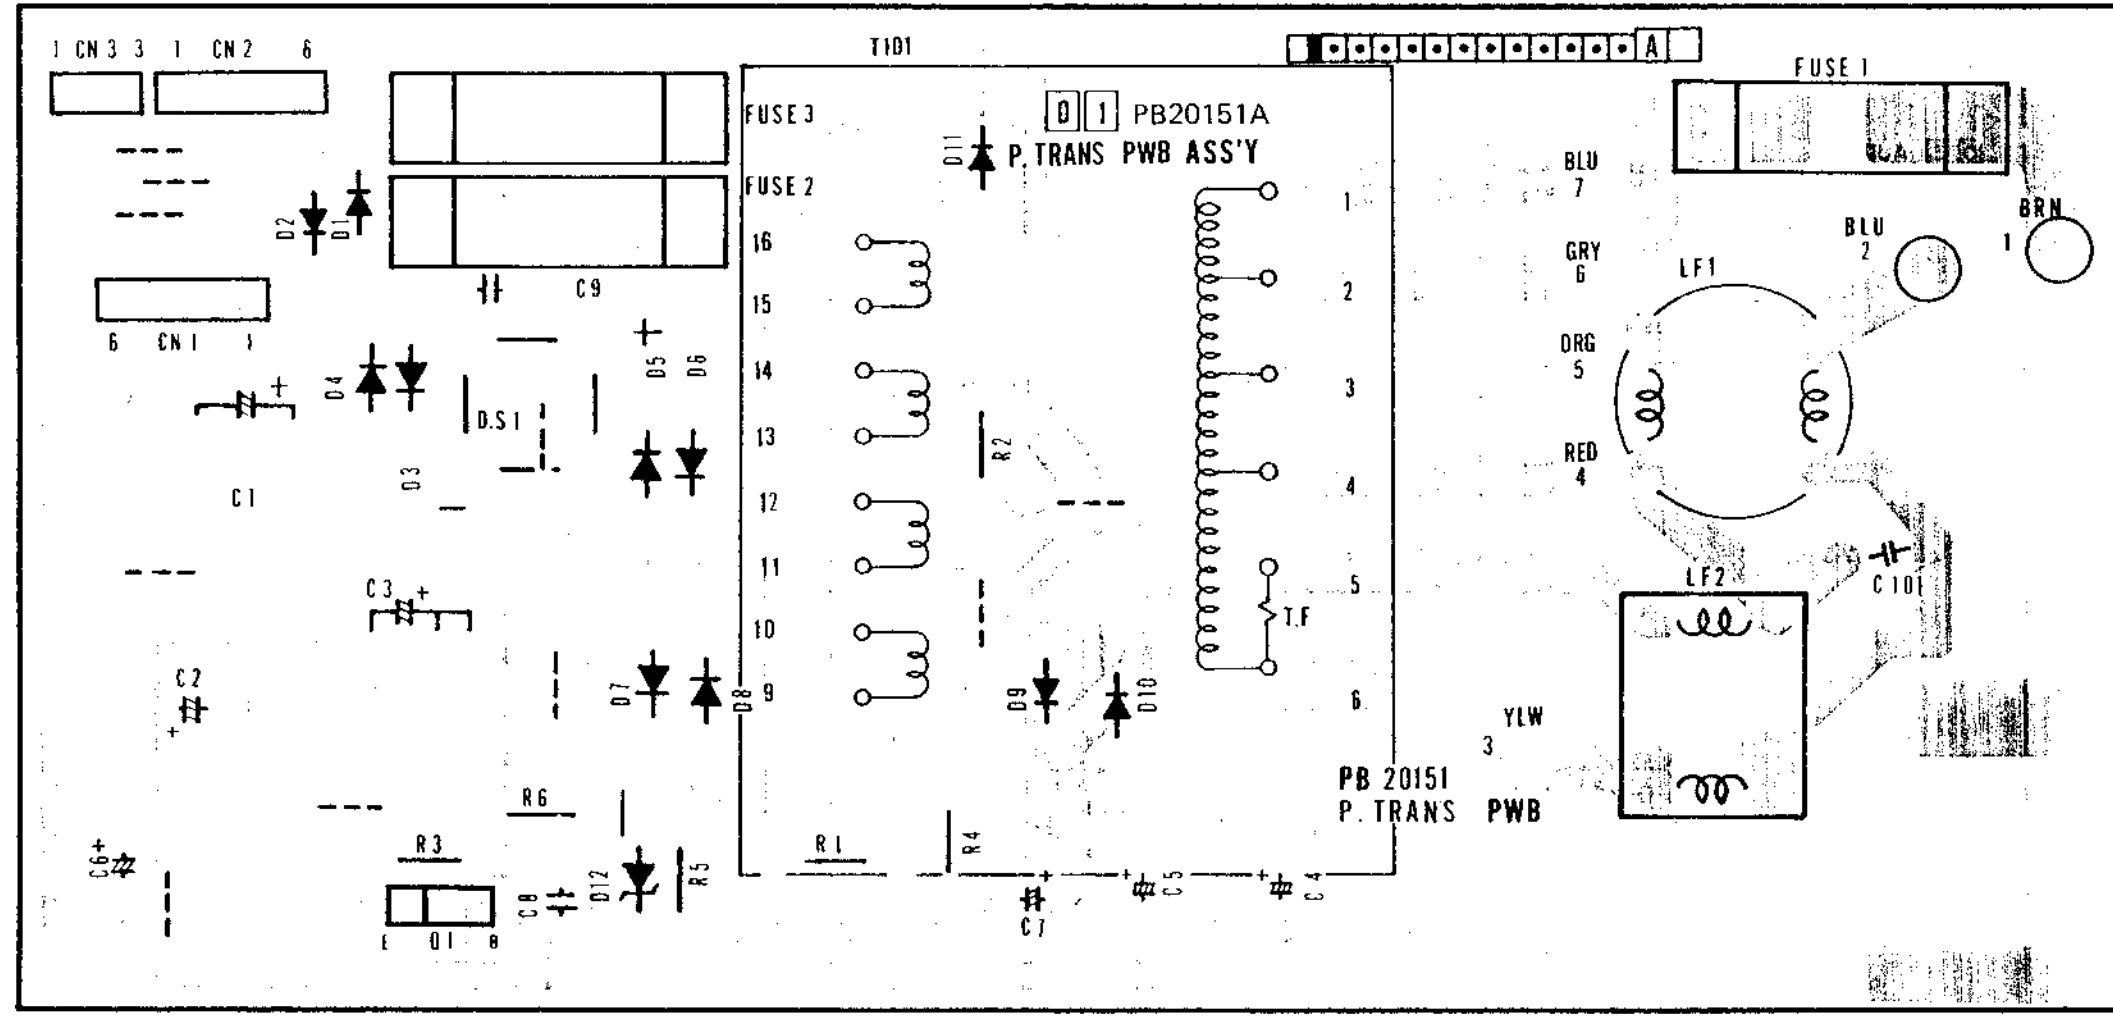

A B C D E F G H

3-13 3-13

3.13 AUDIO SCHEMATIC DIAGRAM

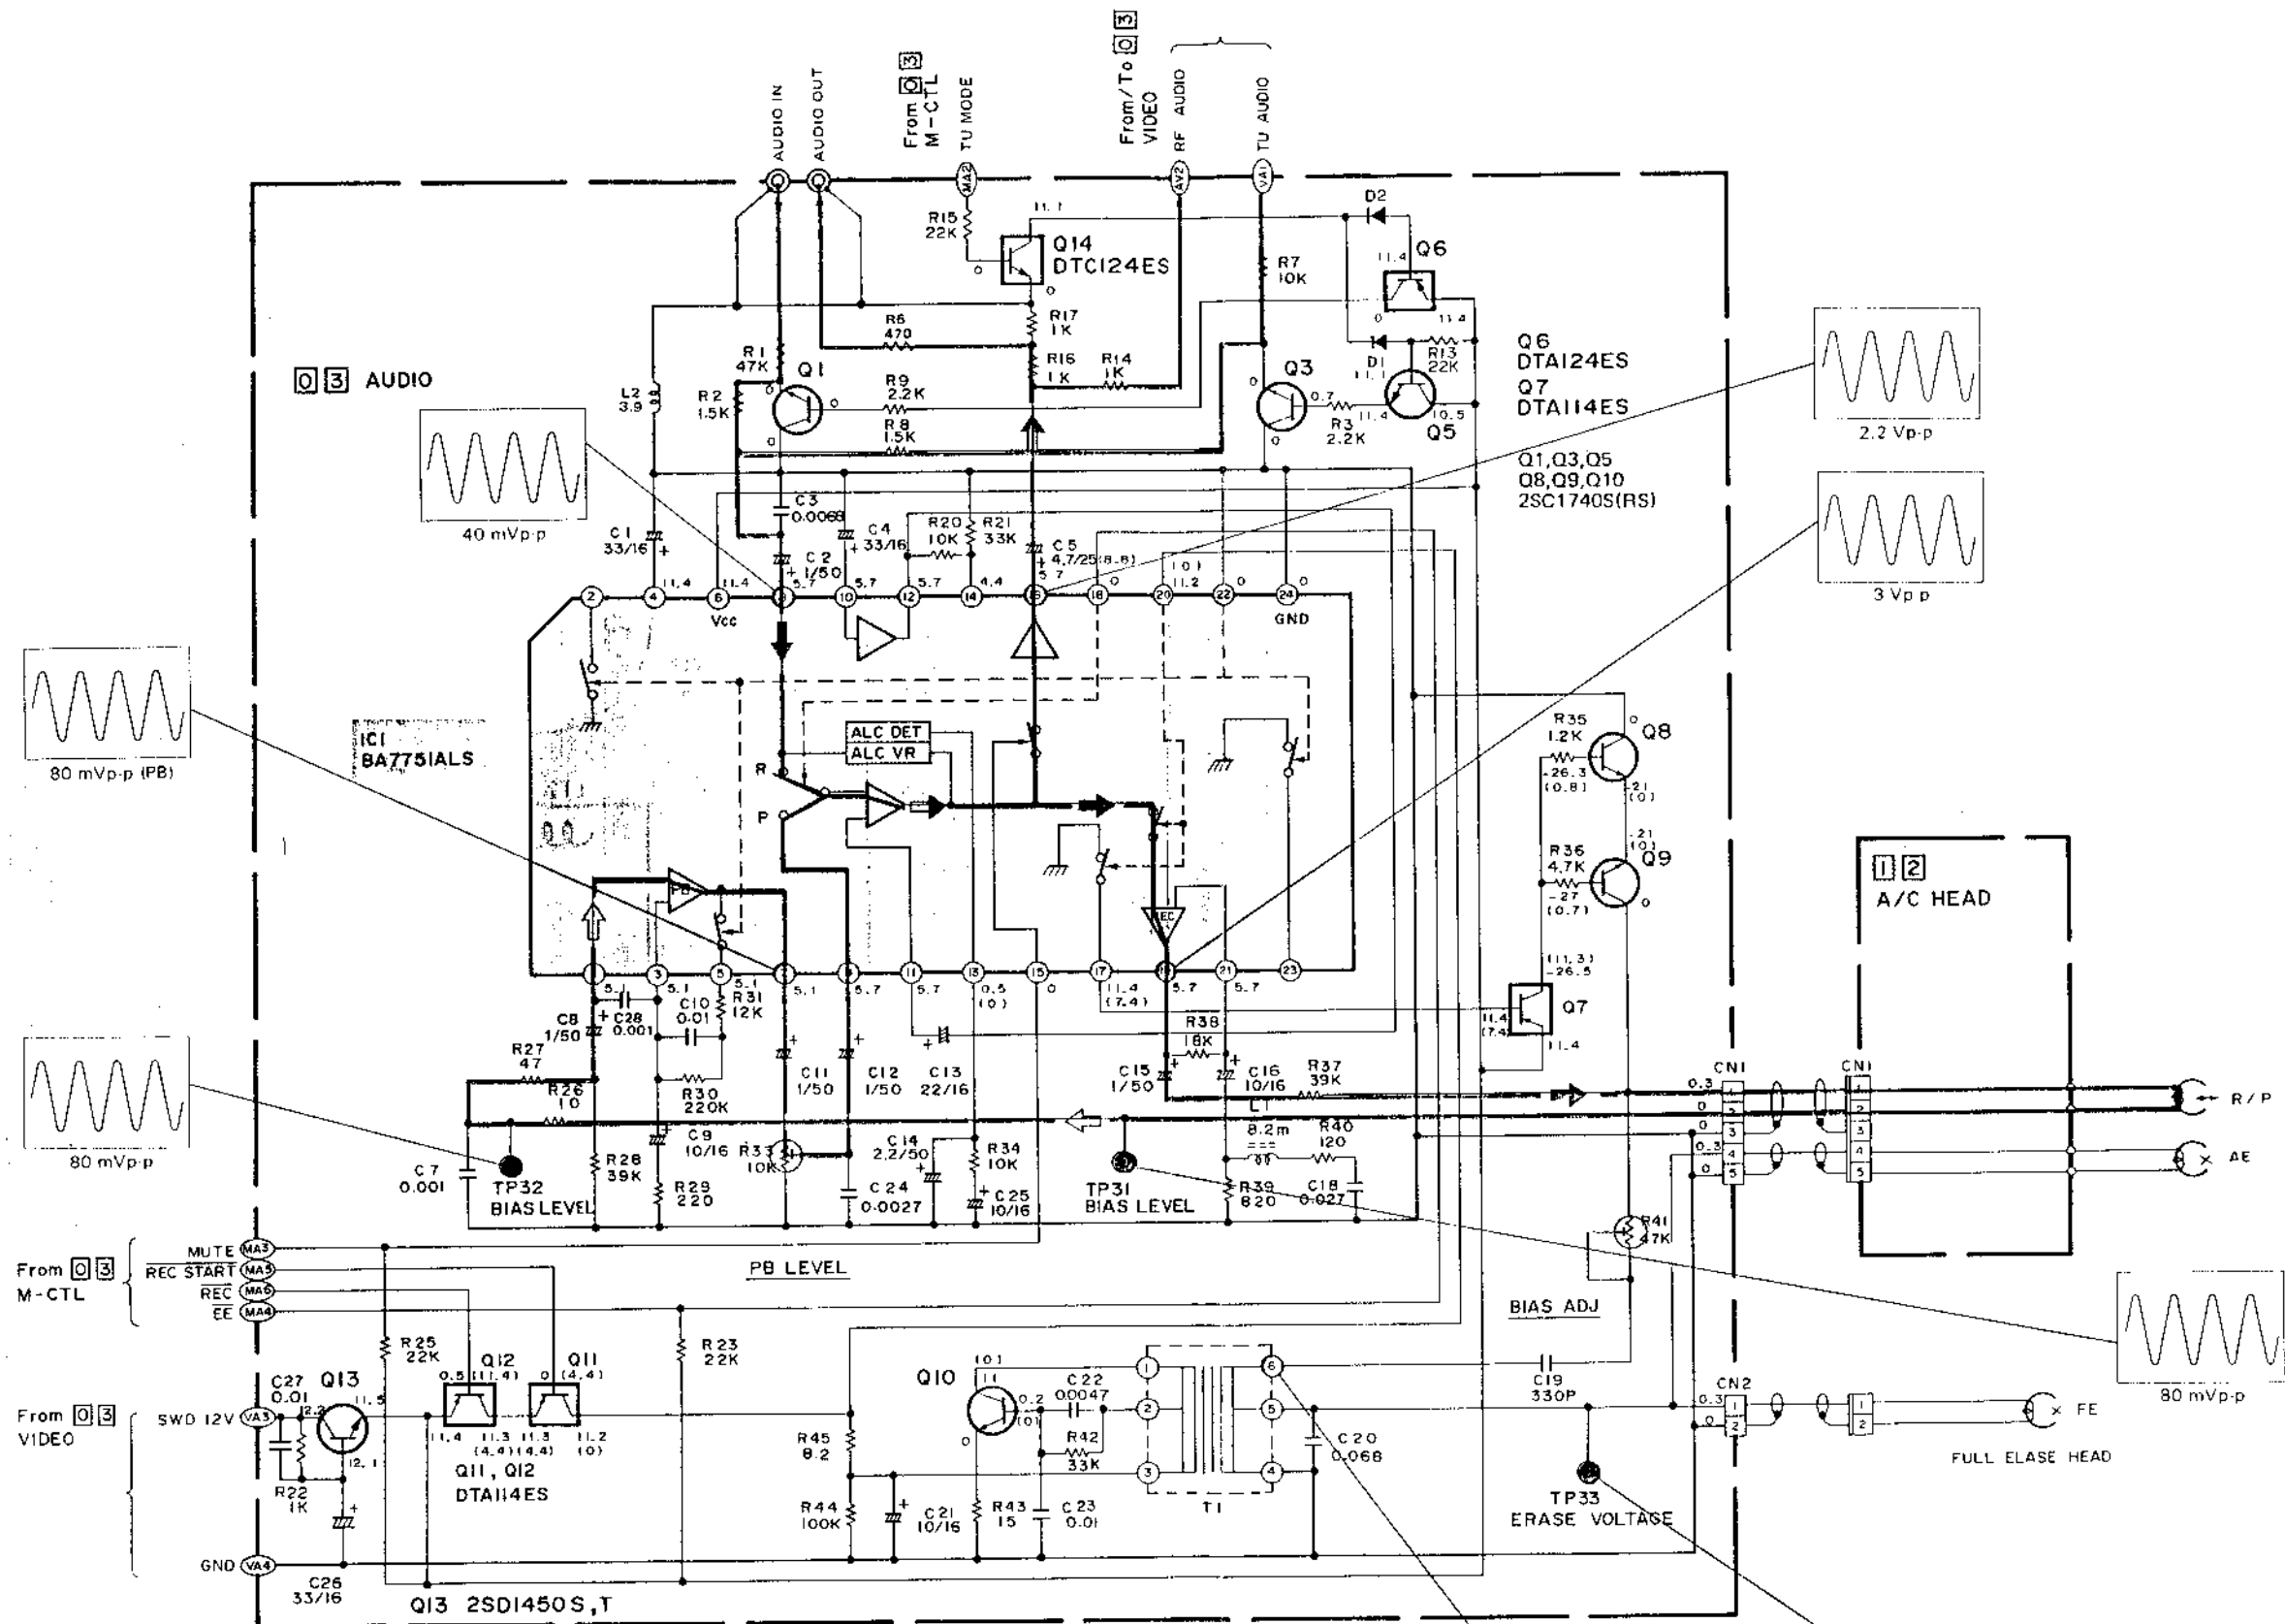


NOTE: Shaded () parts are critical for safety. Replace only with specified part numbers.


5
4
3
2
1

A B C D 3-14 3-14 E F G H

3.14 SERVO SCHEMATIC DIAGRAM

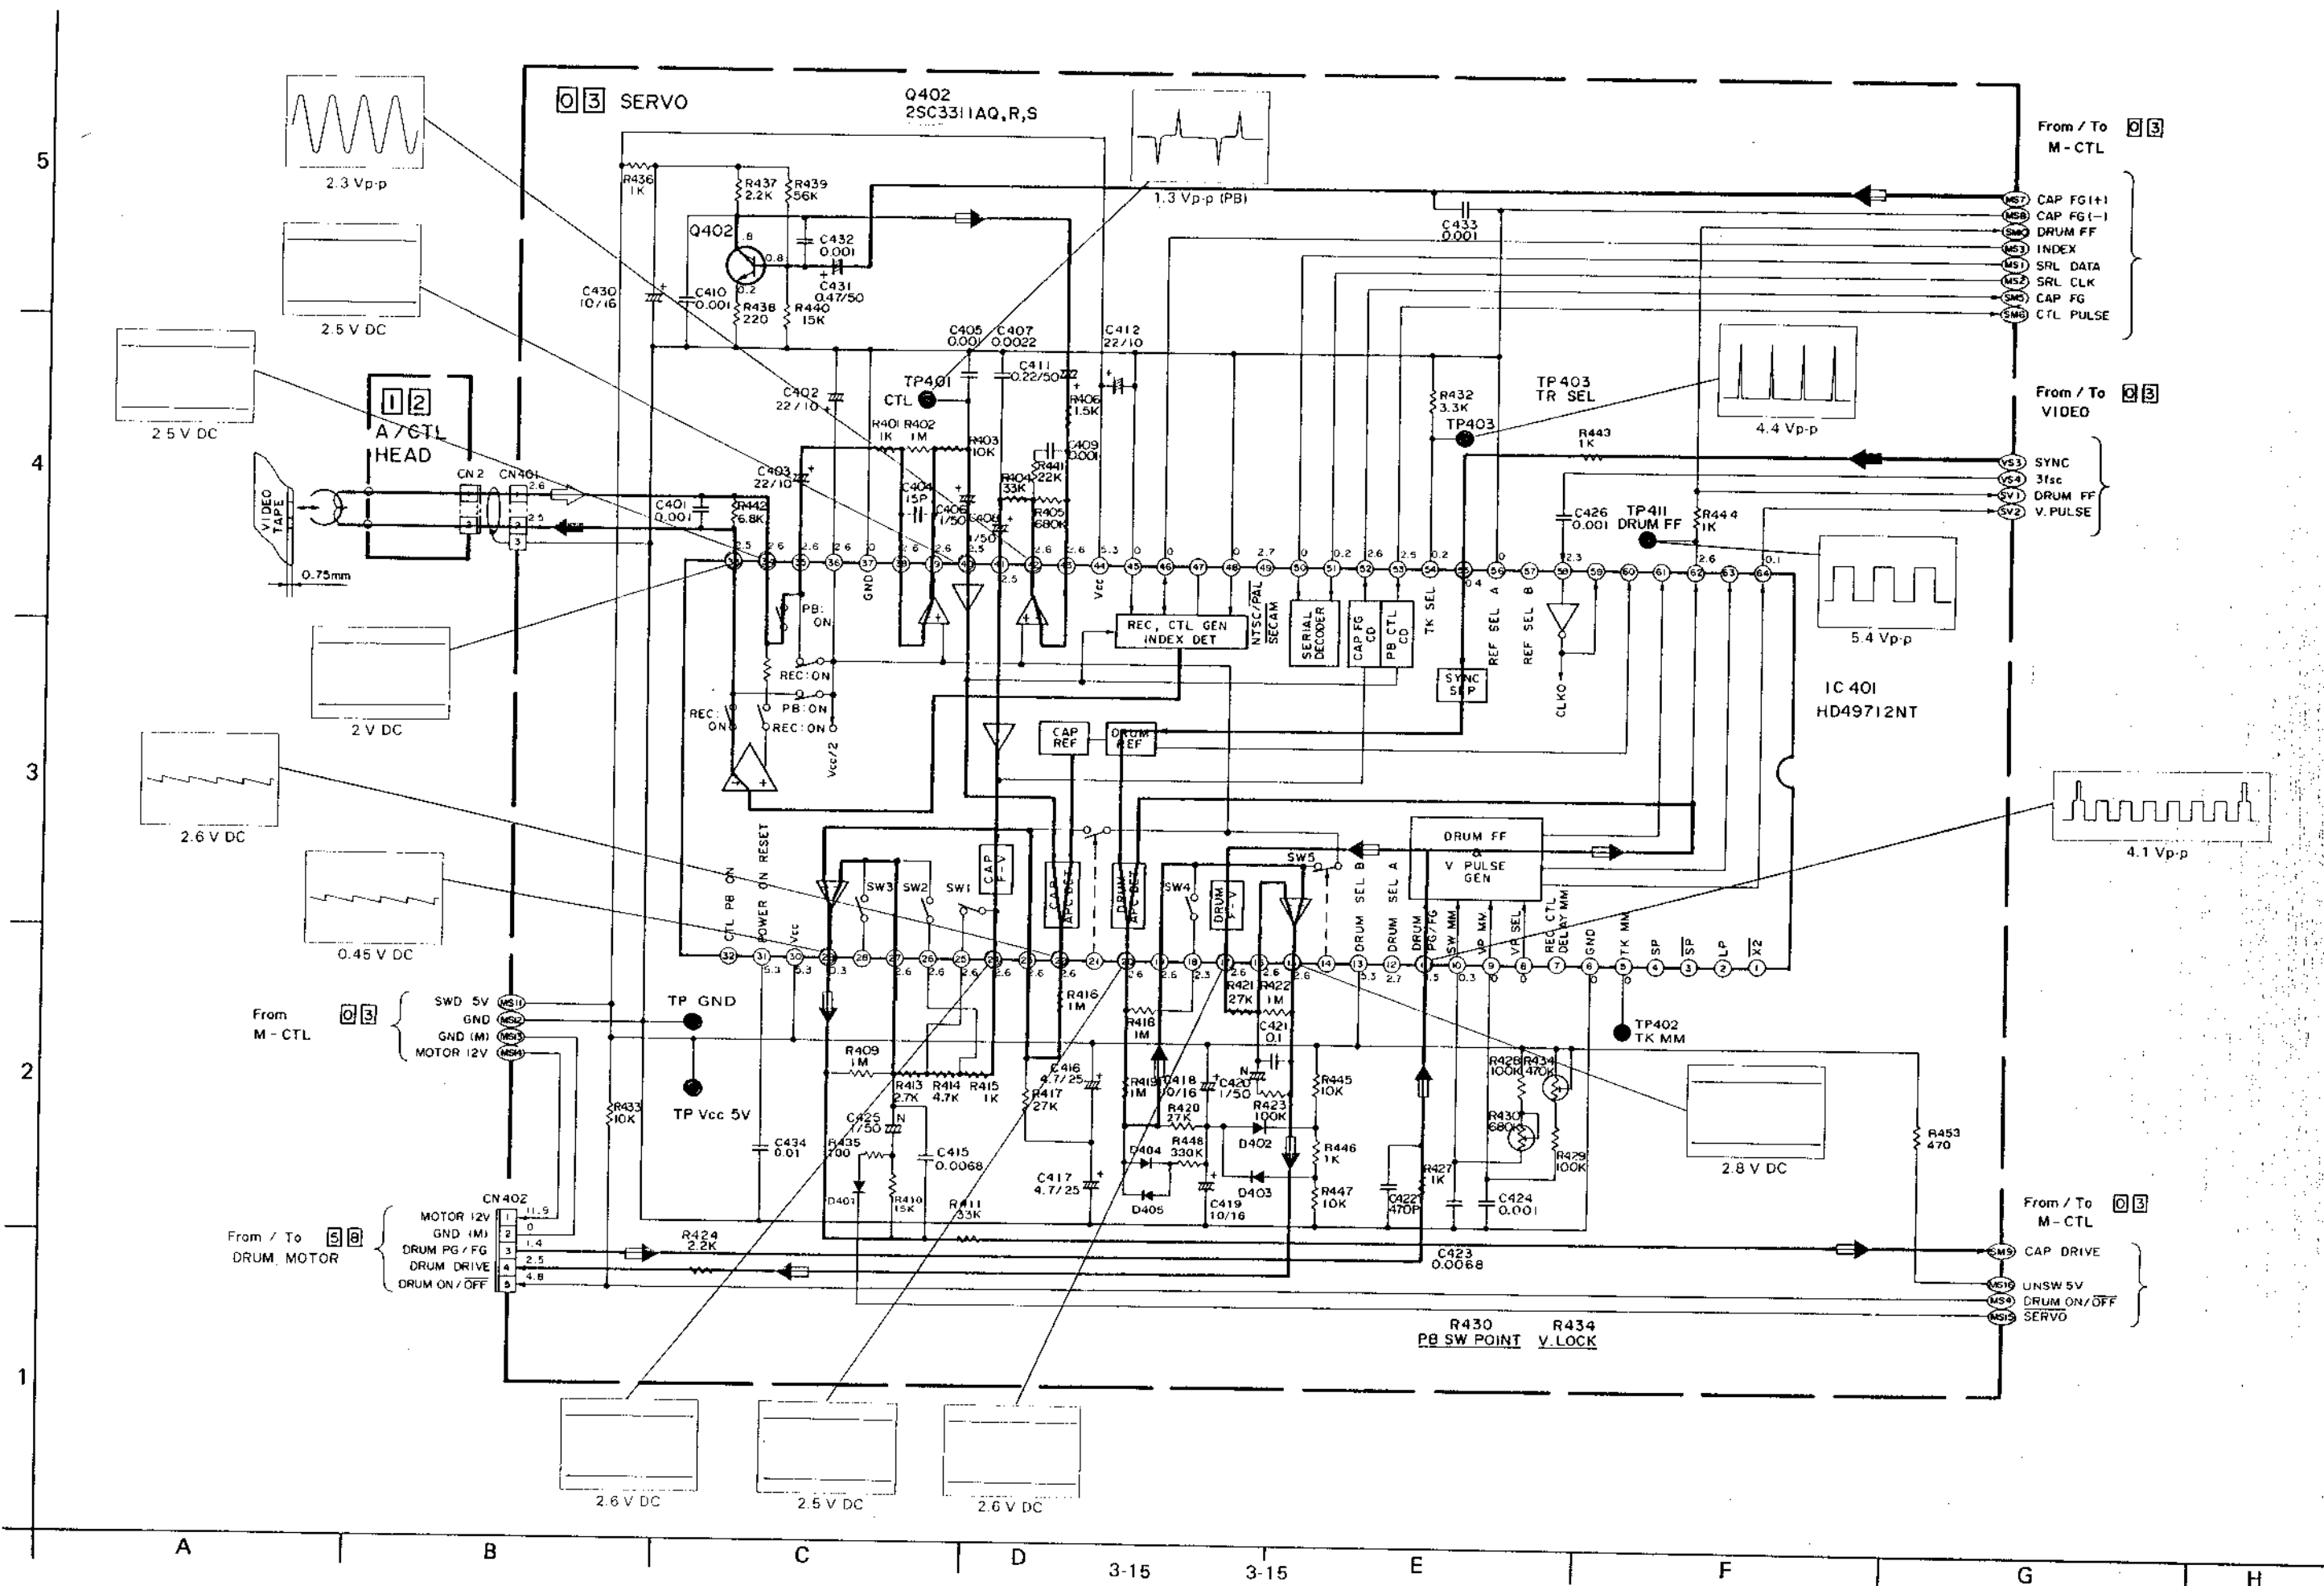


3.15 MECHANISM CONTROL SCHEMATIC DIAGRAM

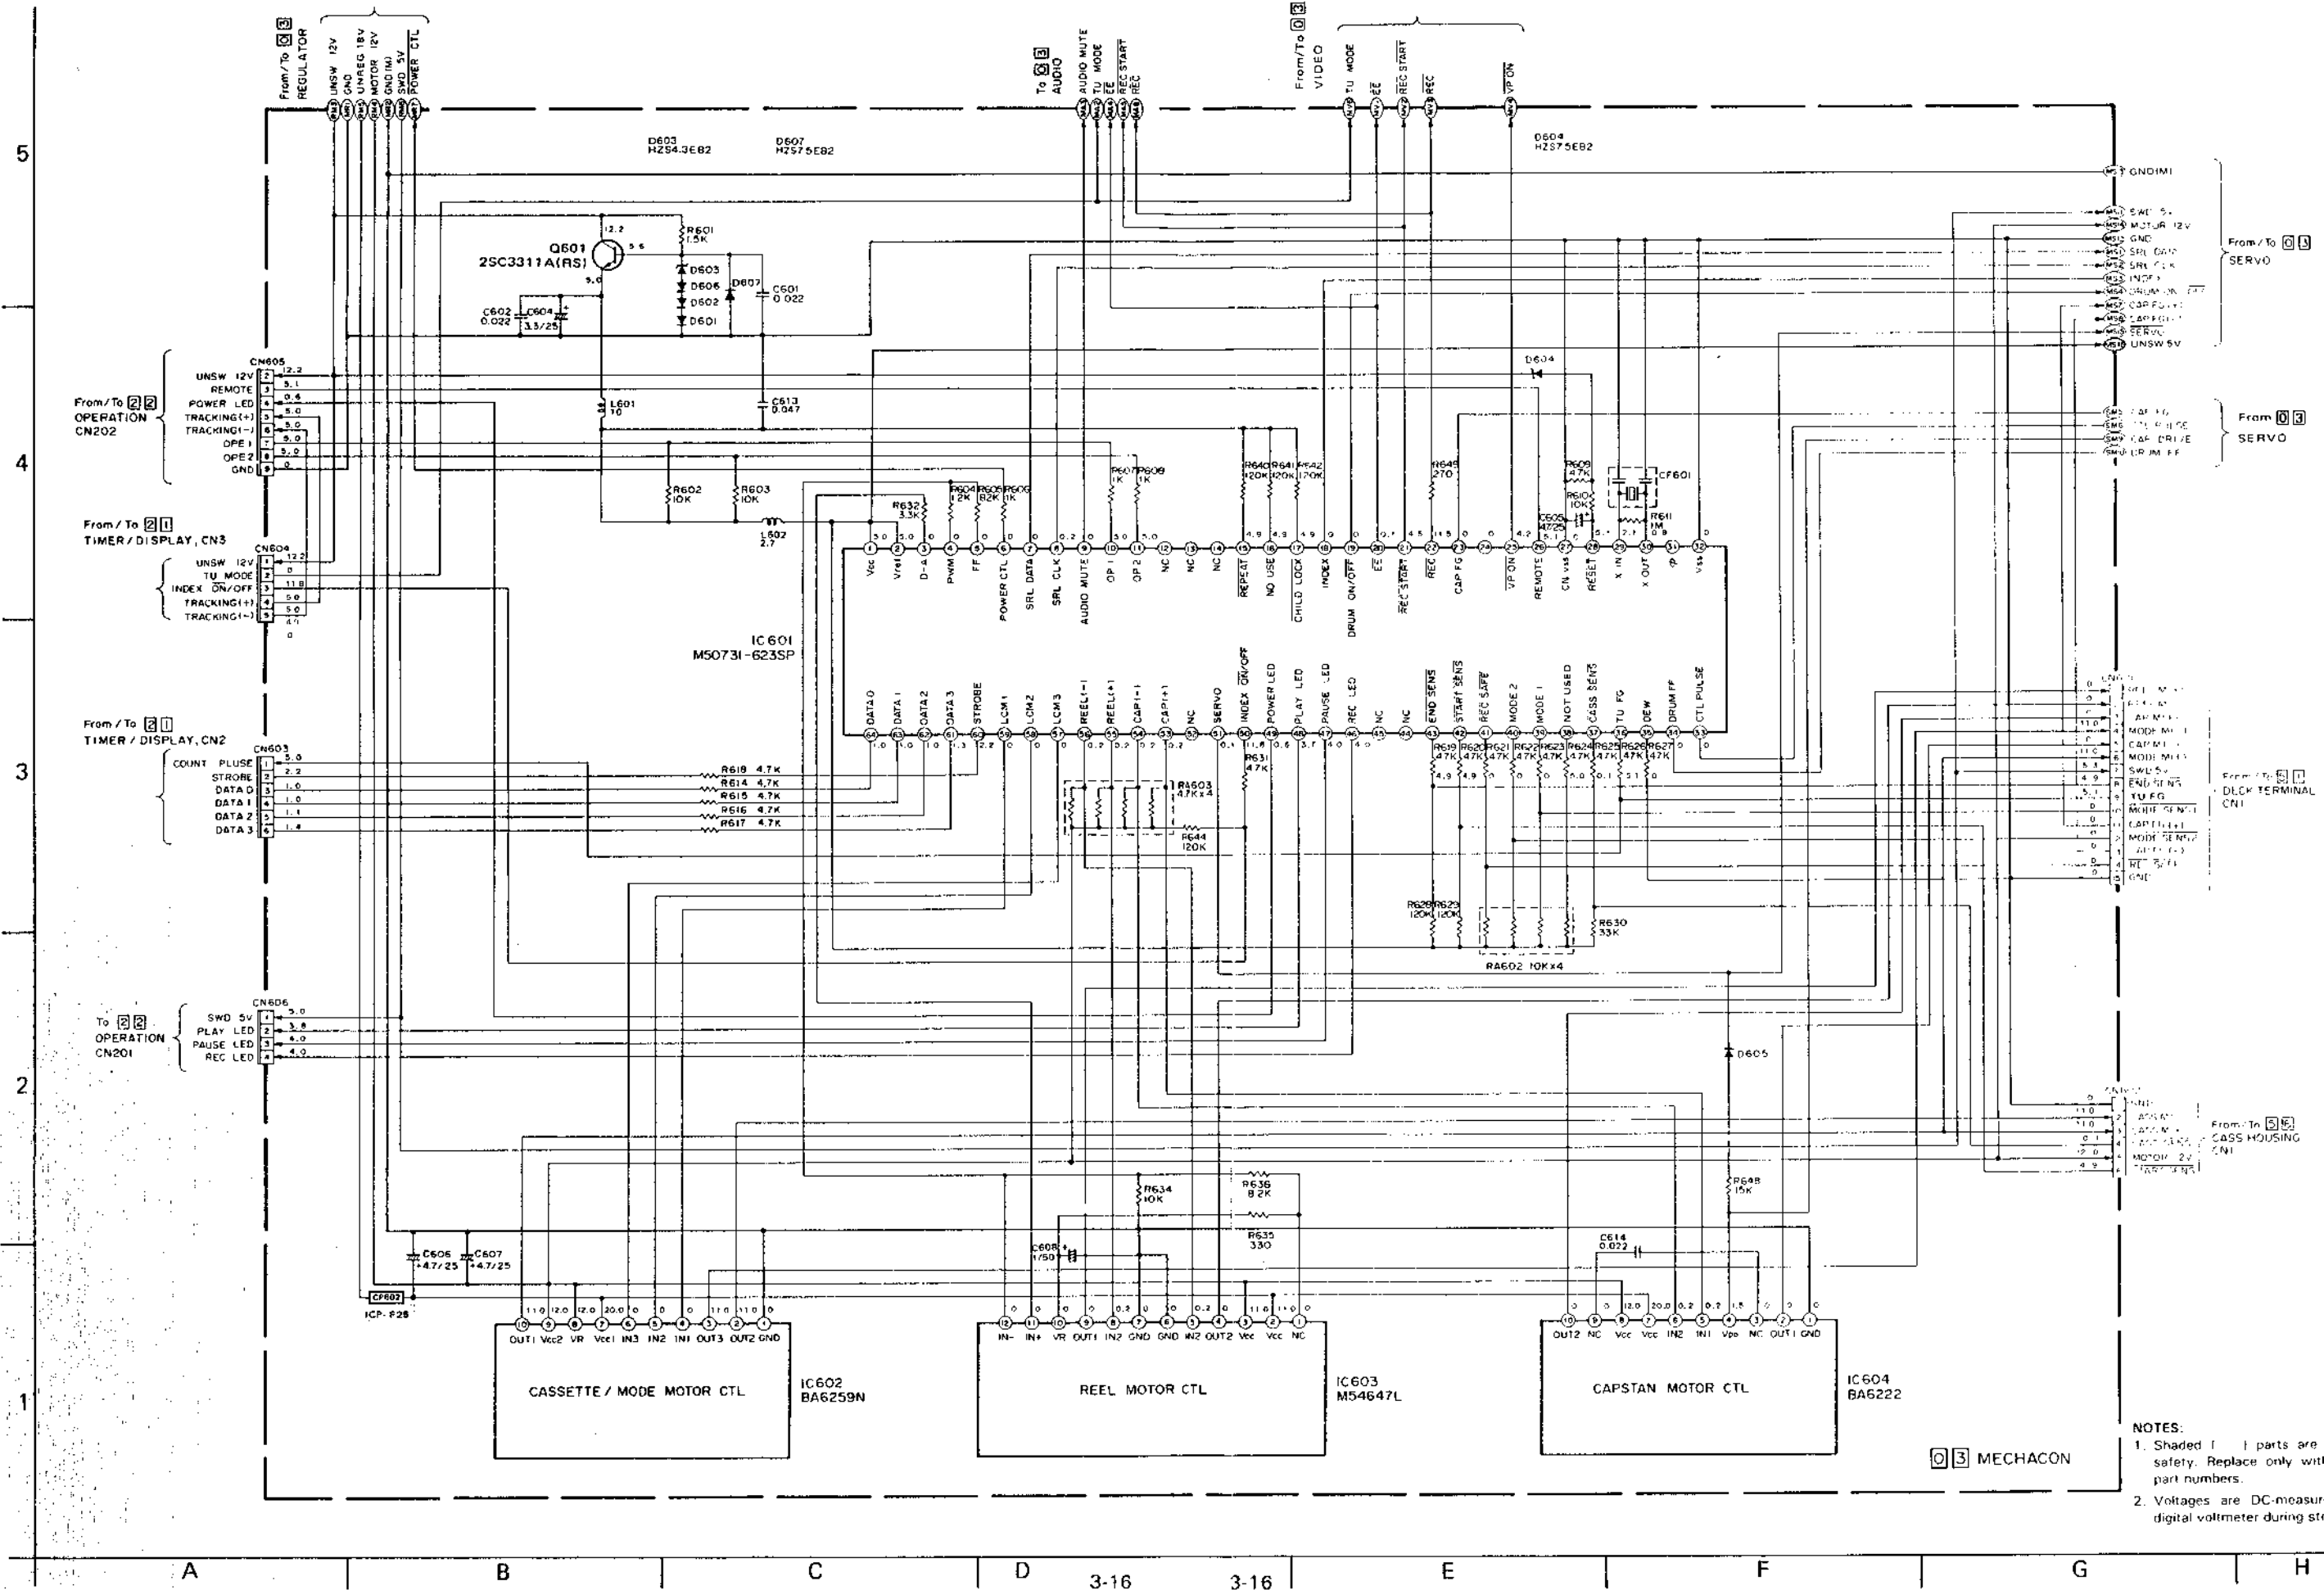


- NOTES:**
1. Shaded [] parts are critical for safety. Replace only with specified part numbers.
 2. Voltages are DC-measured with a digital voltmeter during stop mode.

MECHACON


3.16 DECK TERMINAL SCHEMATIC DIAGRAMS

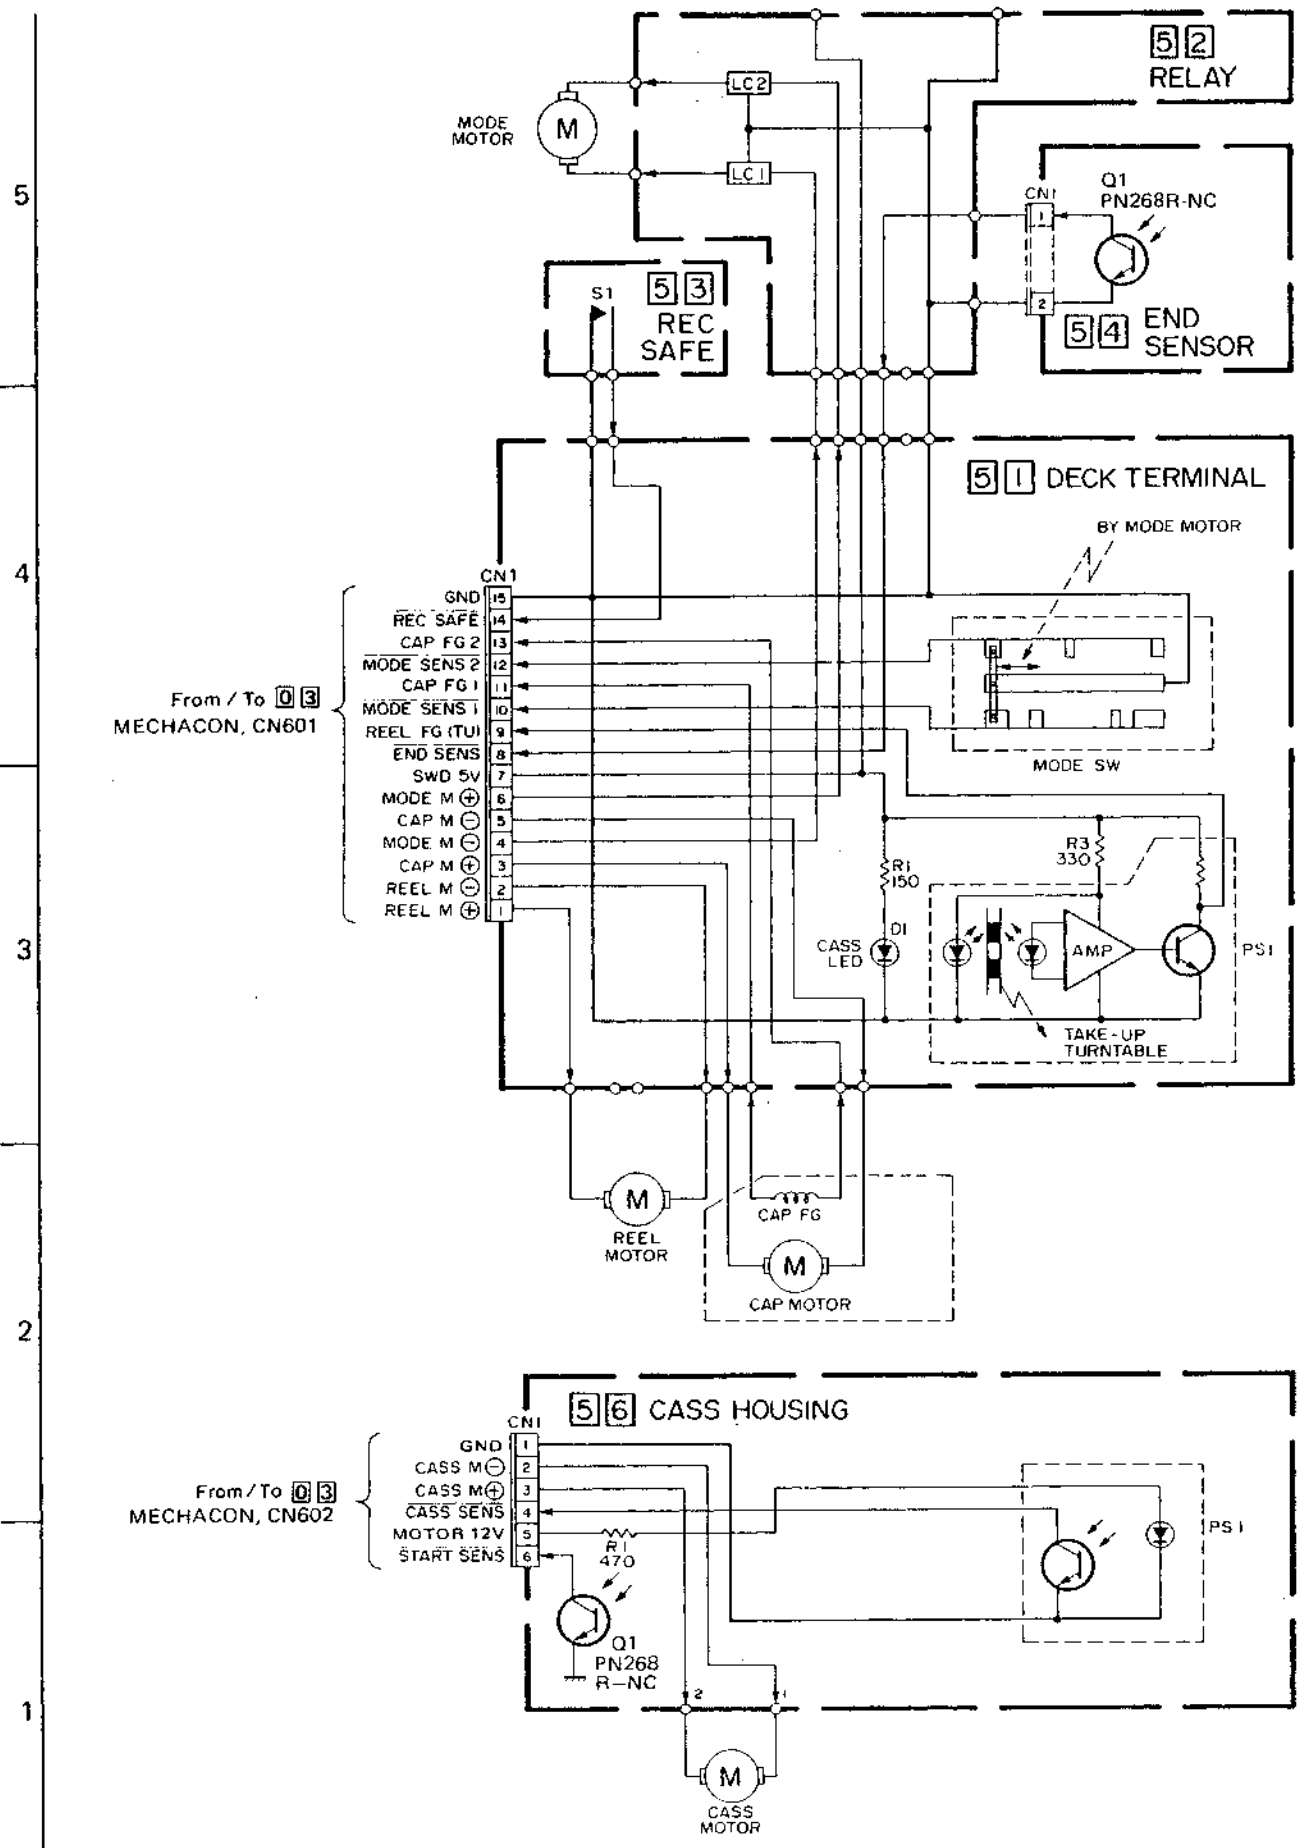

3.17 DECK TERMINAL CIRCUIT BOARDS

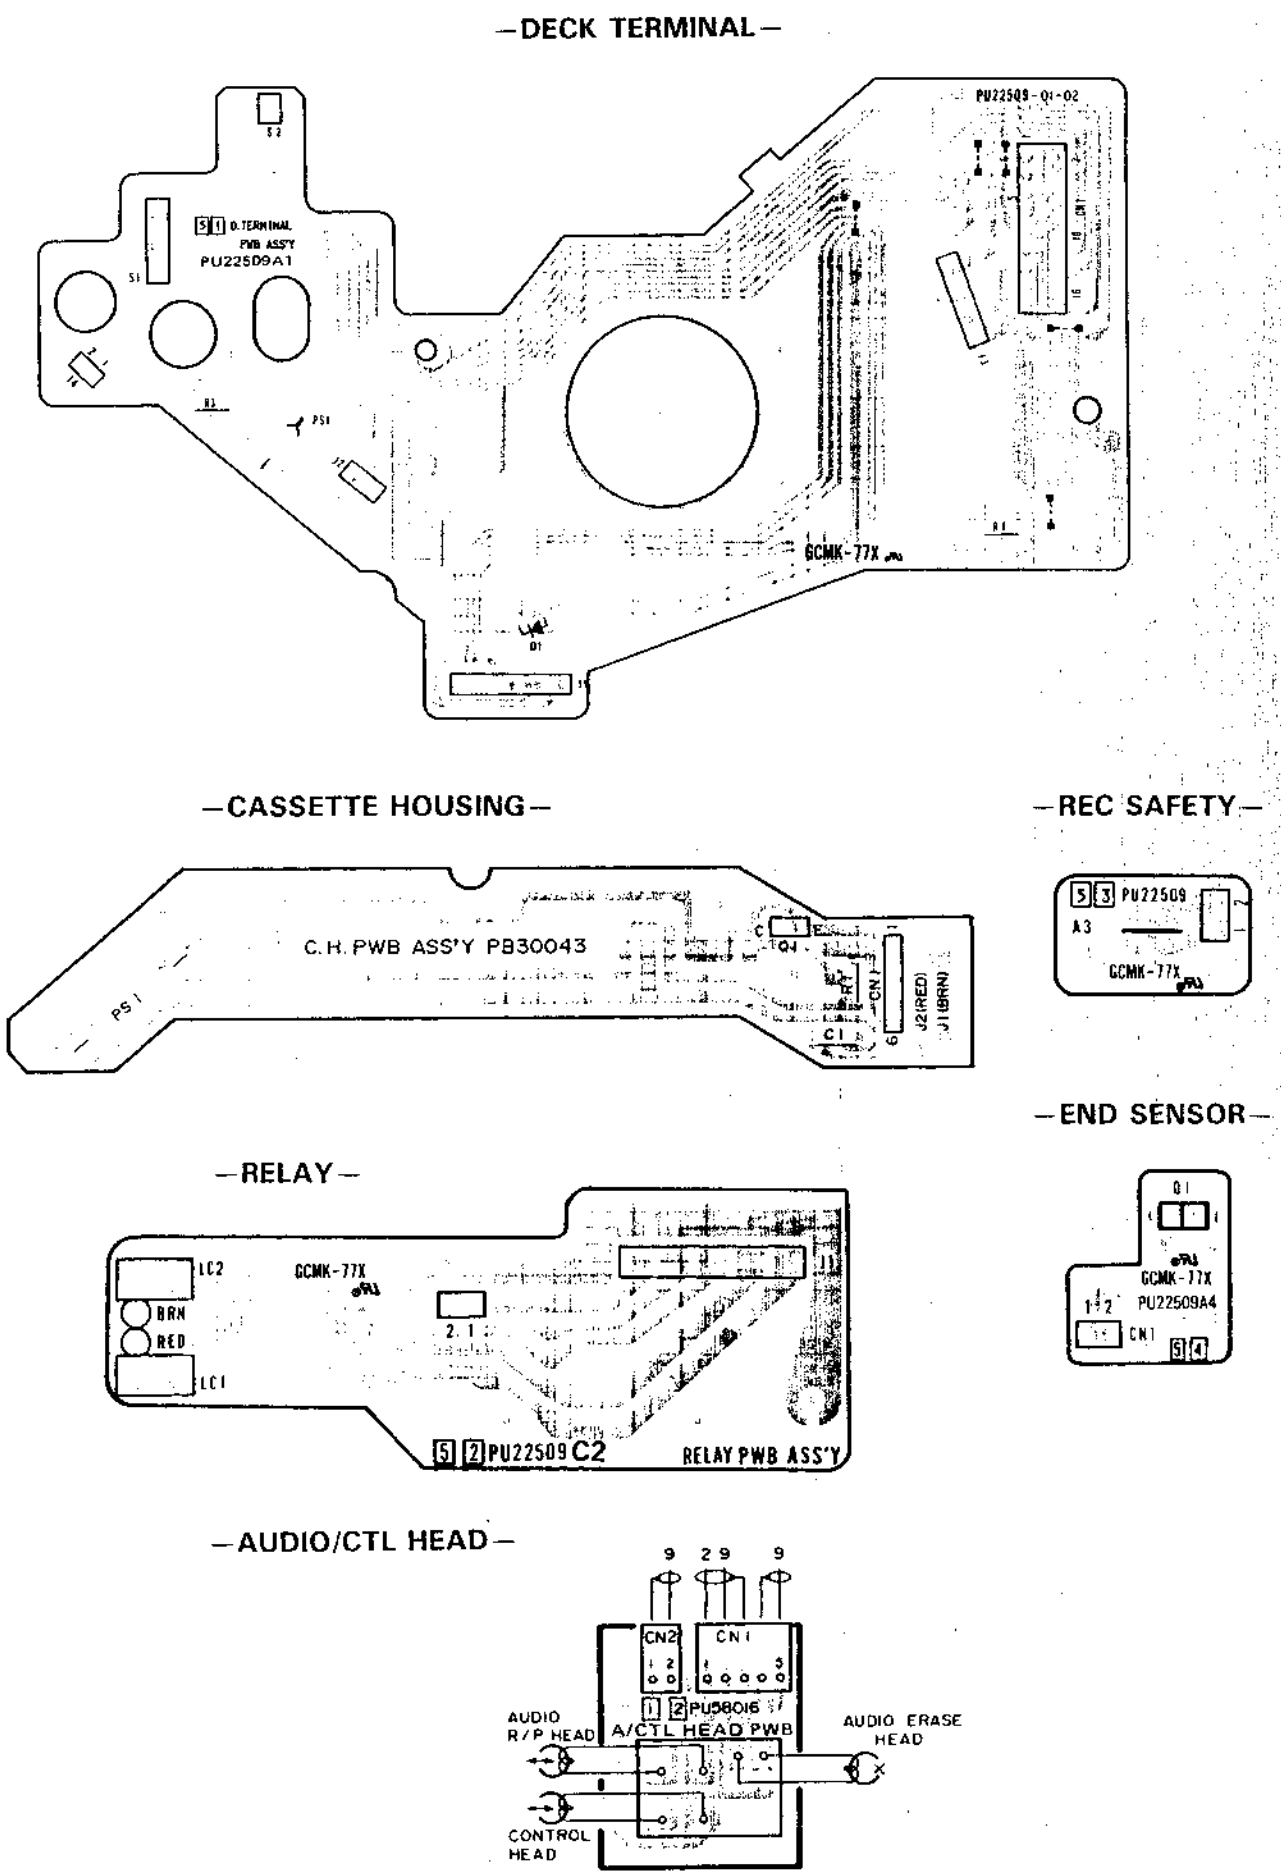


3.18 VIDEO SCHEMATIC DIAGRAM

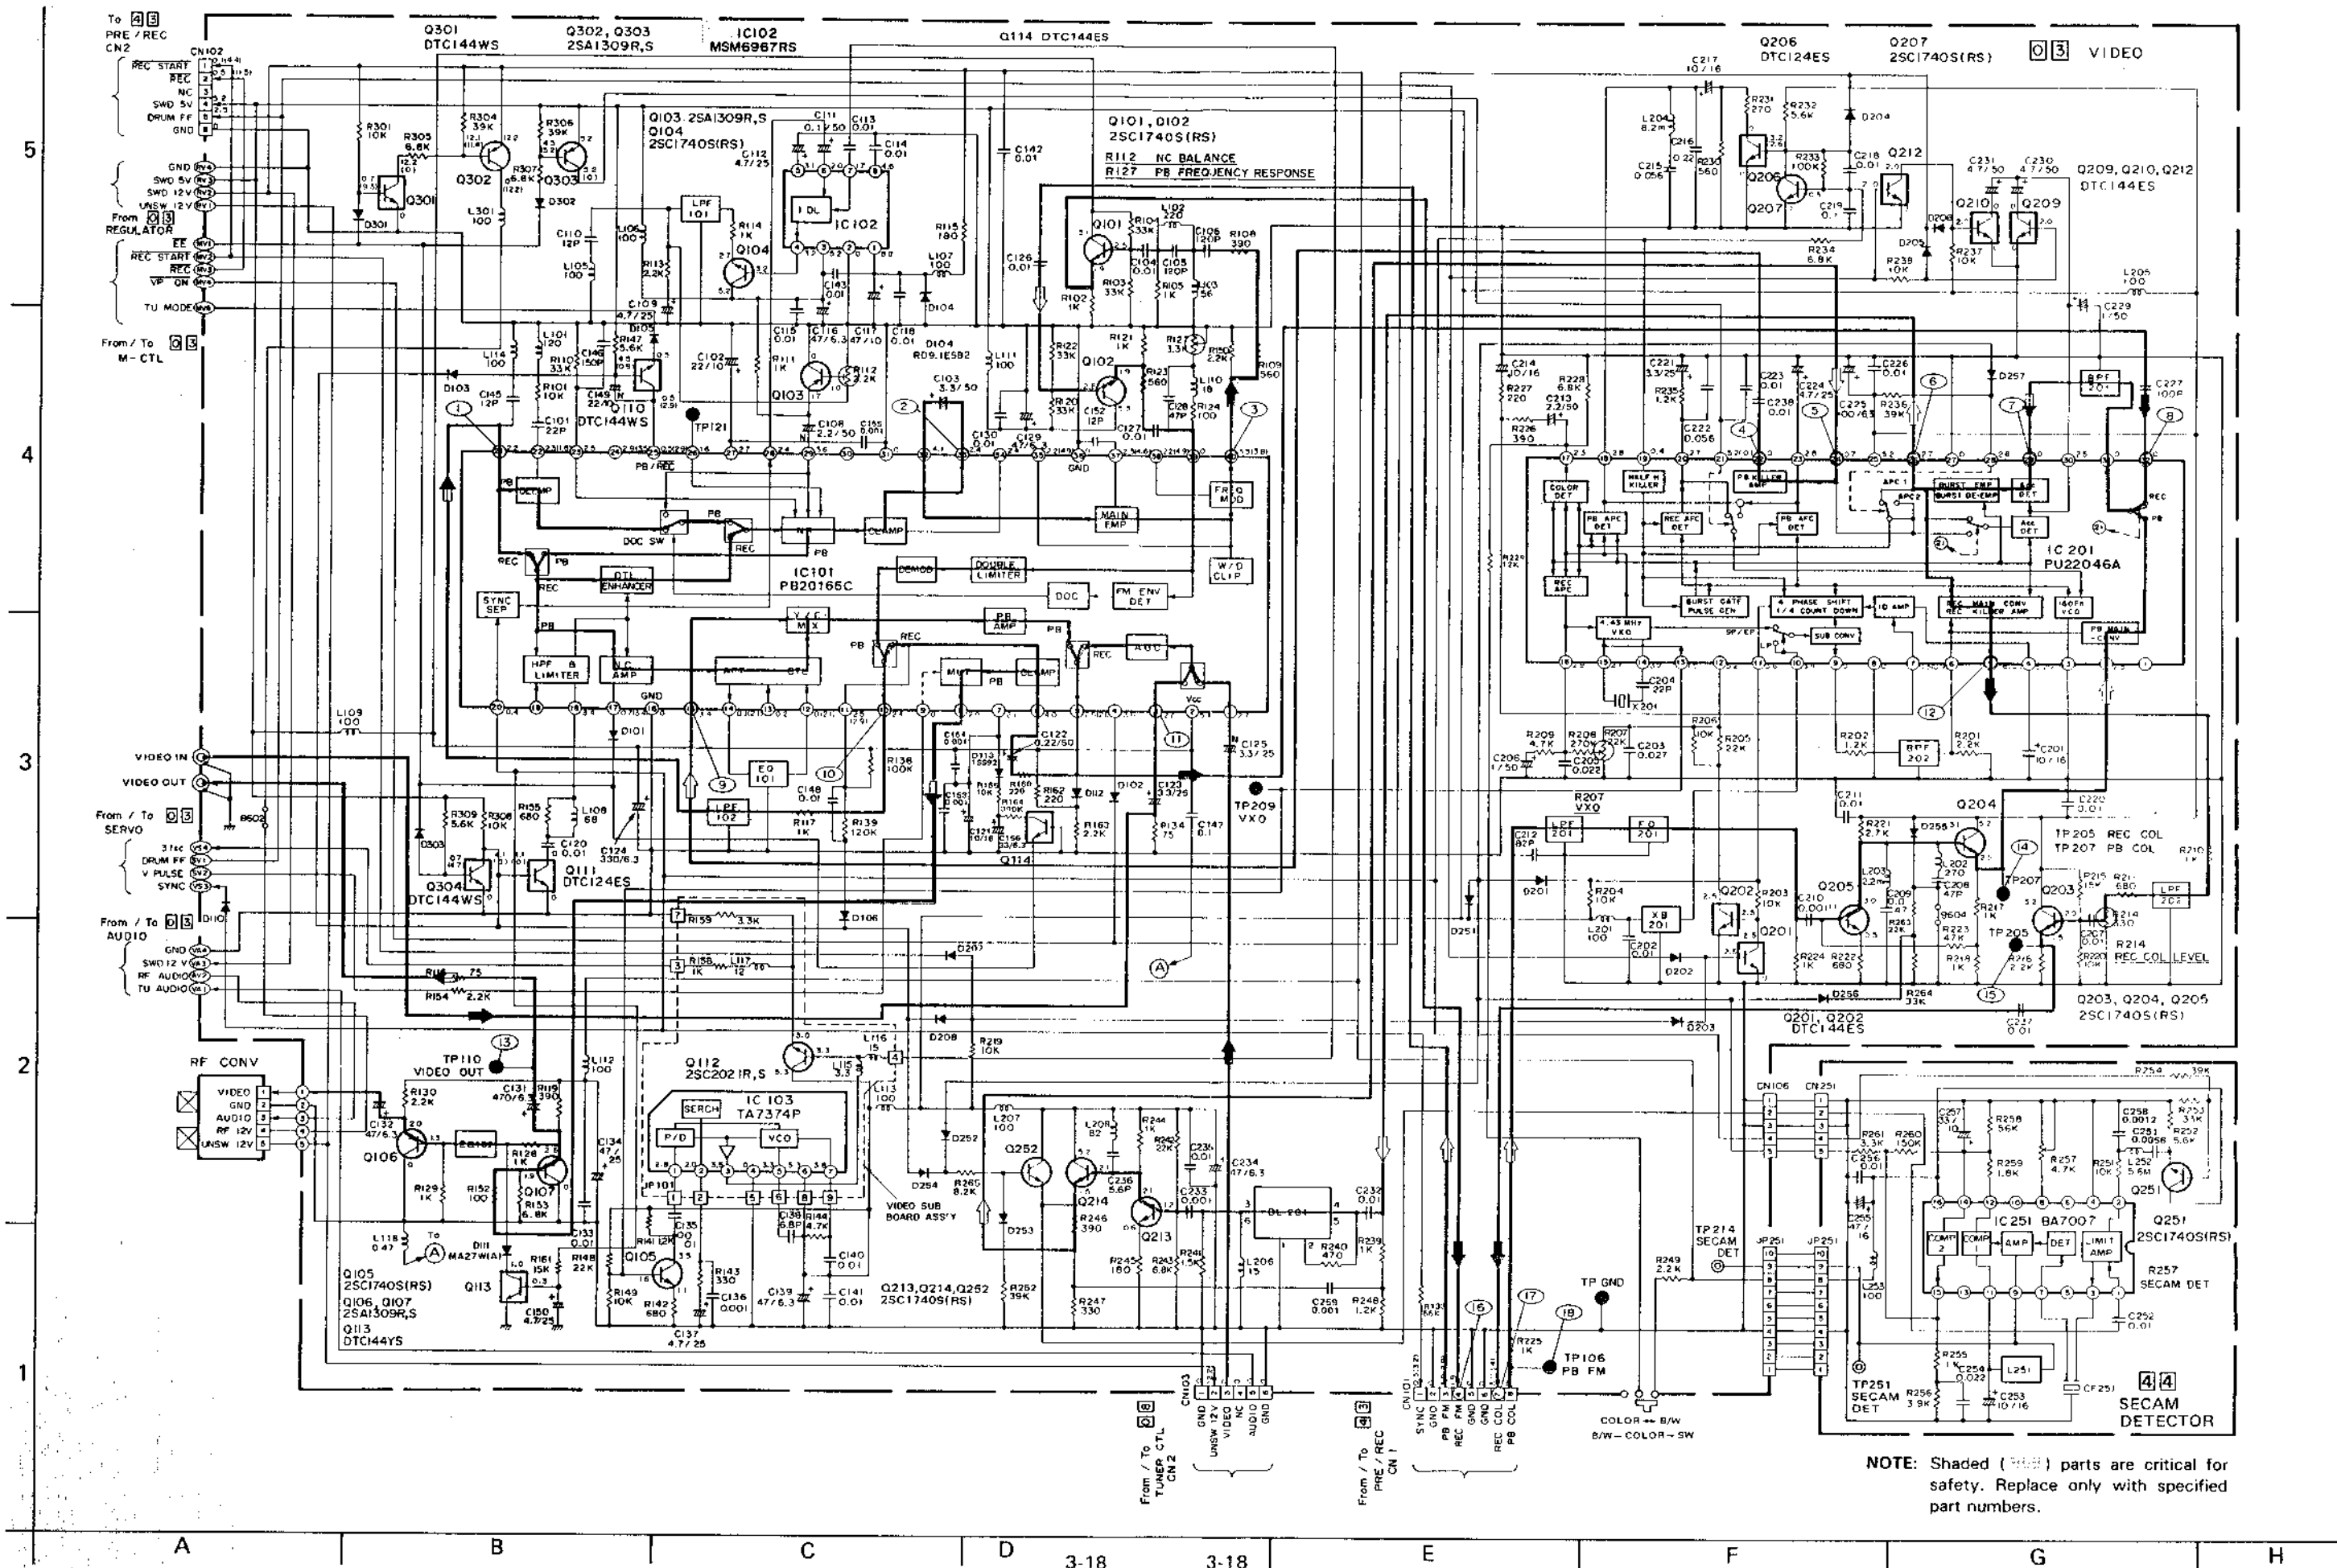

NOTE: Shaded () parts are critical for safety. Replace only with specified part numbers.

3.19 MAIN AND VIDEO SUB CIRCUIT BOARDS

-MAIN-

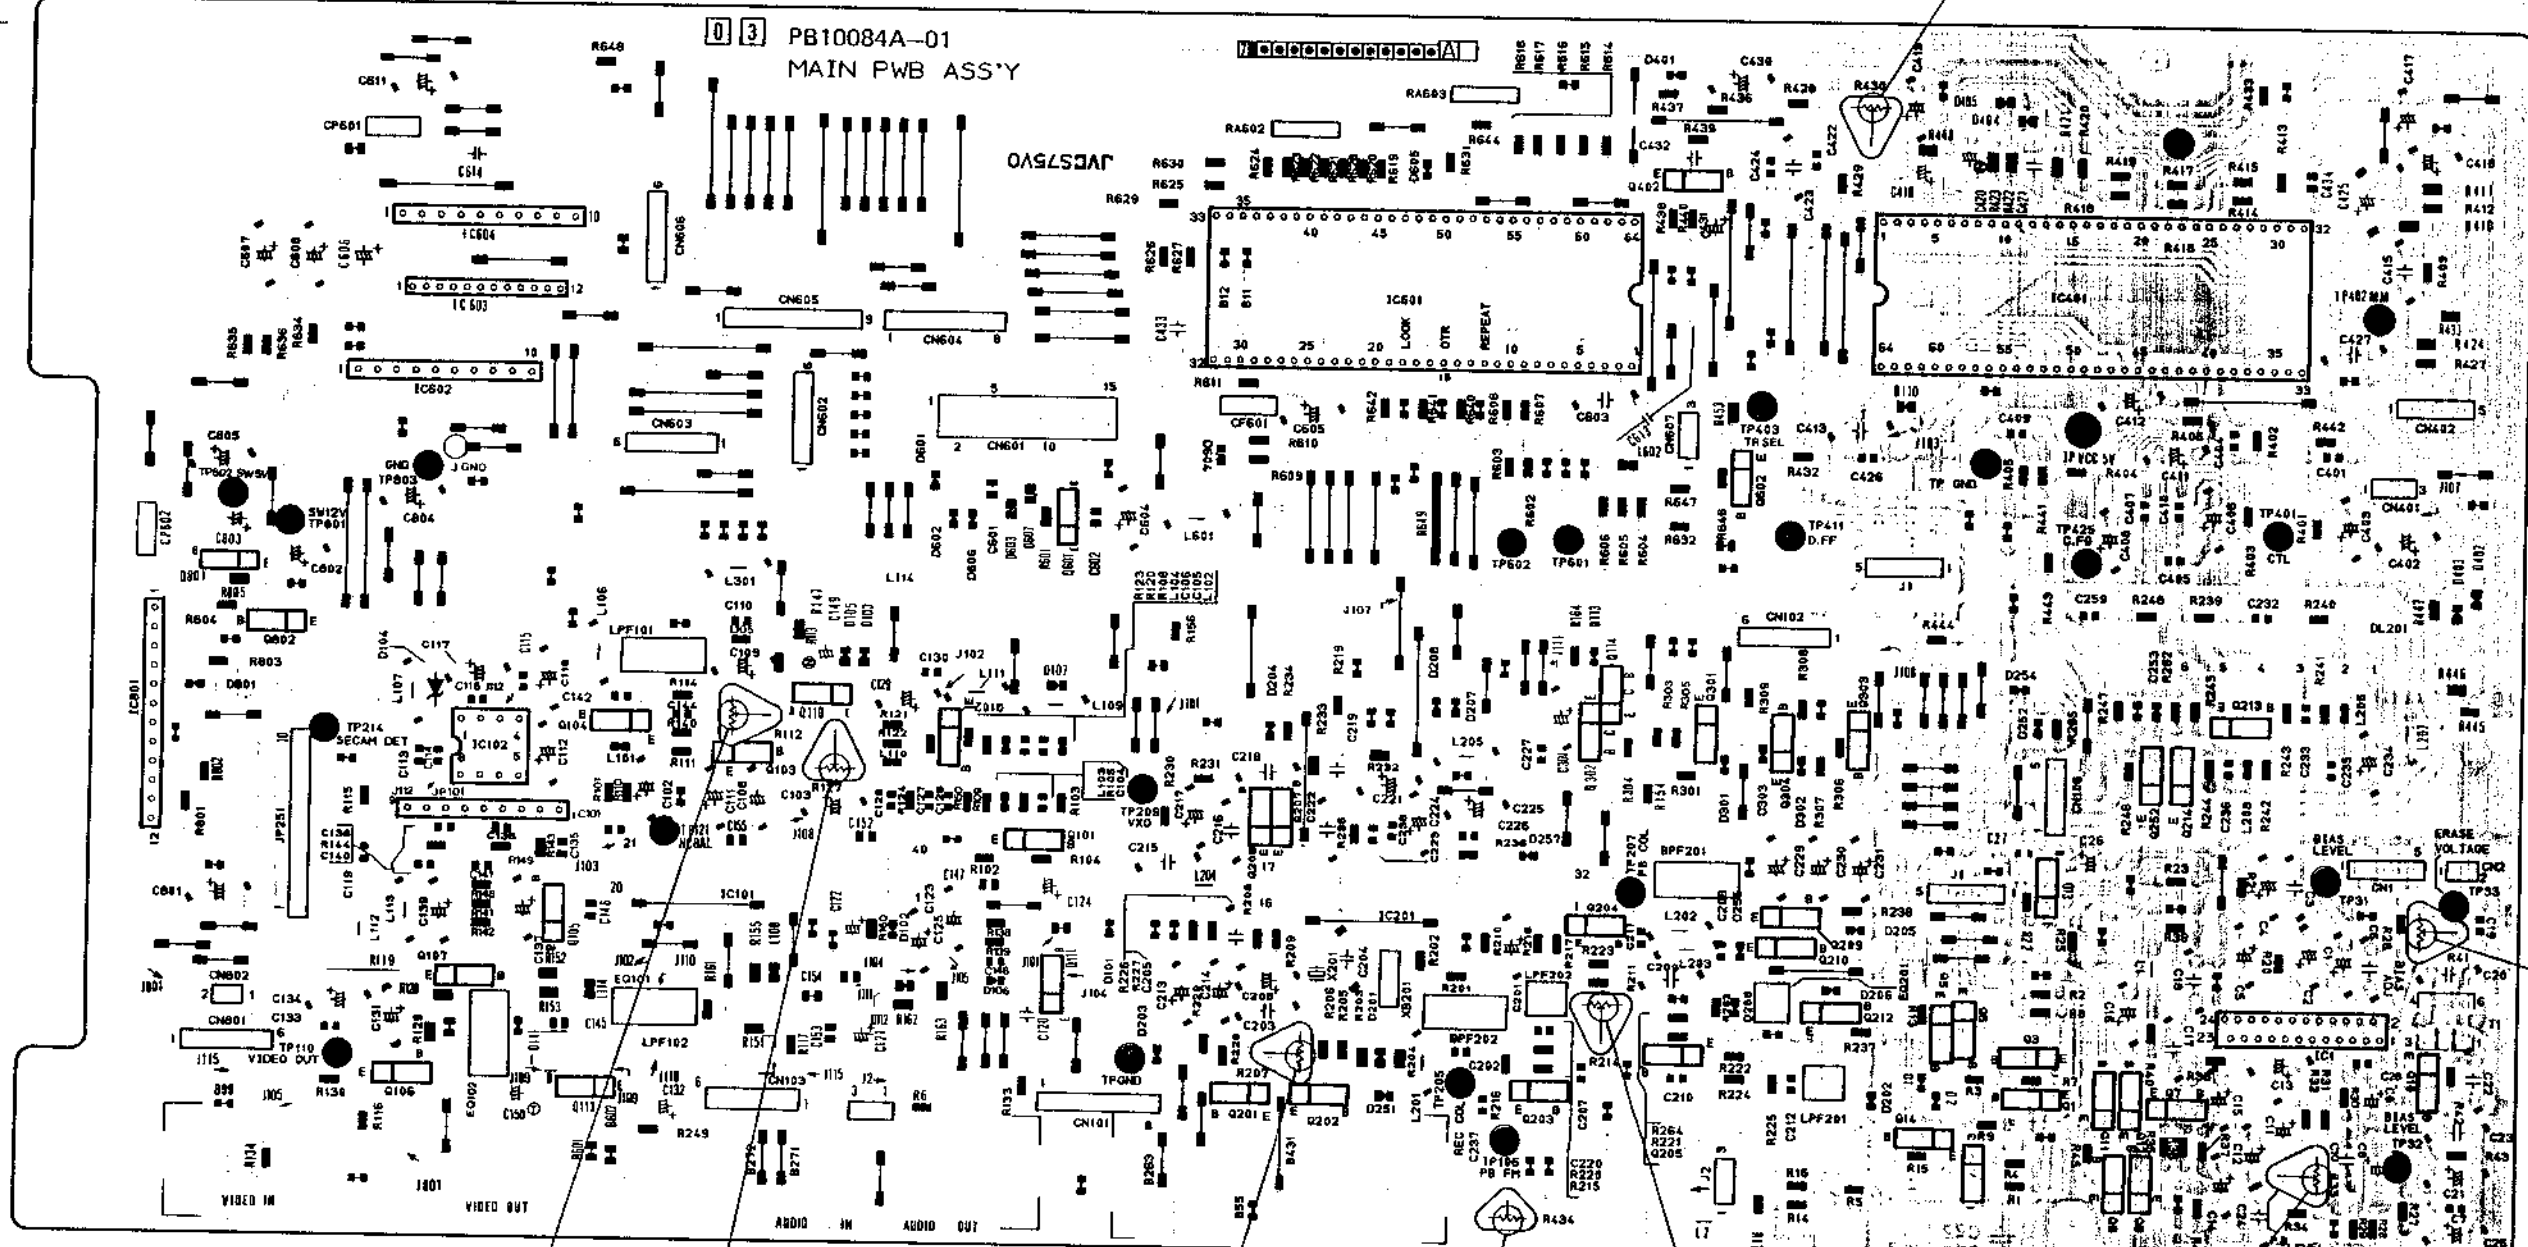

R112 NOISE CANCEL BALANCE
R127 PB FREQUENCY RESPONSE

R207 VXO


R434 V PULSE POSITION

R214 REC COLOR LEVEL


R33 AUDIO PB LEVEL

R41 AUDIO BIAS


-Waveforms of VIDEO circuit-

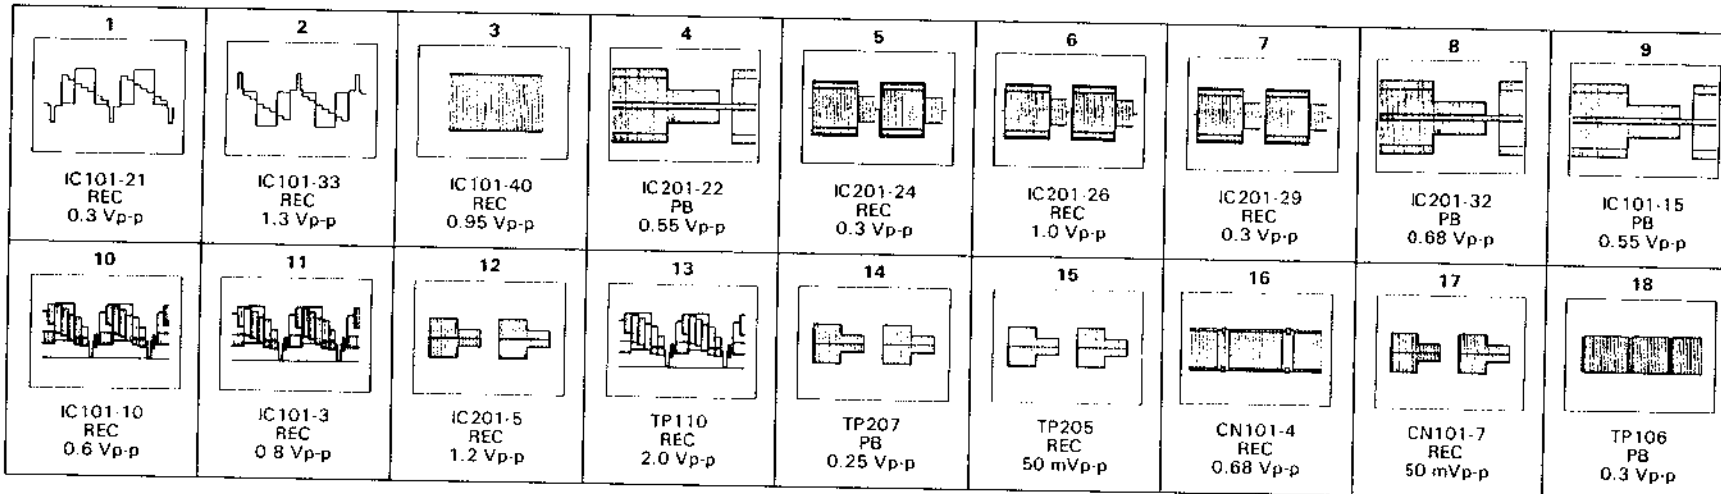

-VIDEO SUB-

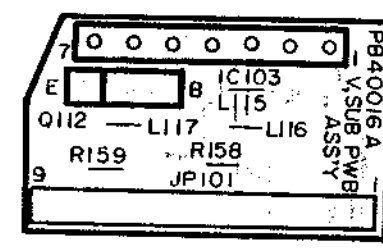

-SECAM DETECTOR-

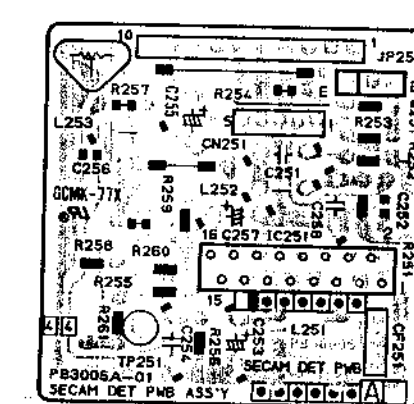


5
4
3
2

1

A B C D E F G H

3.20 PRE/REC SCHEMATIC DIAGRAM

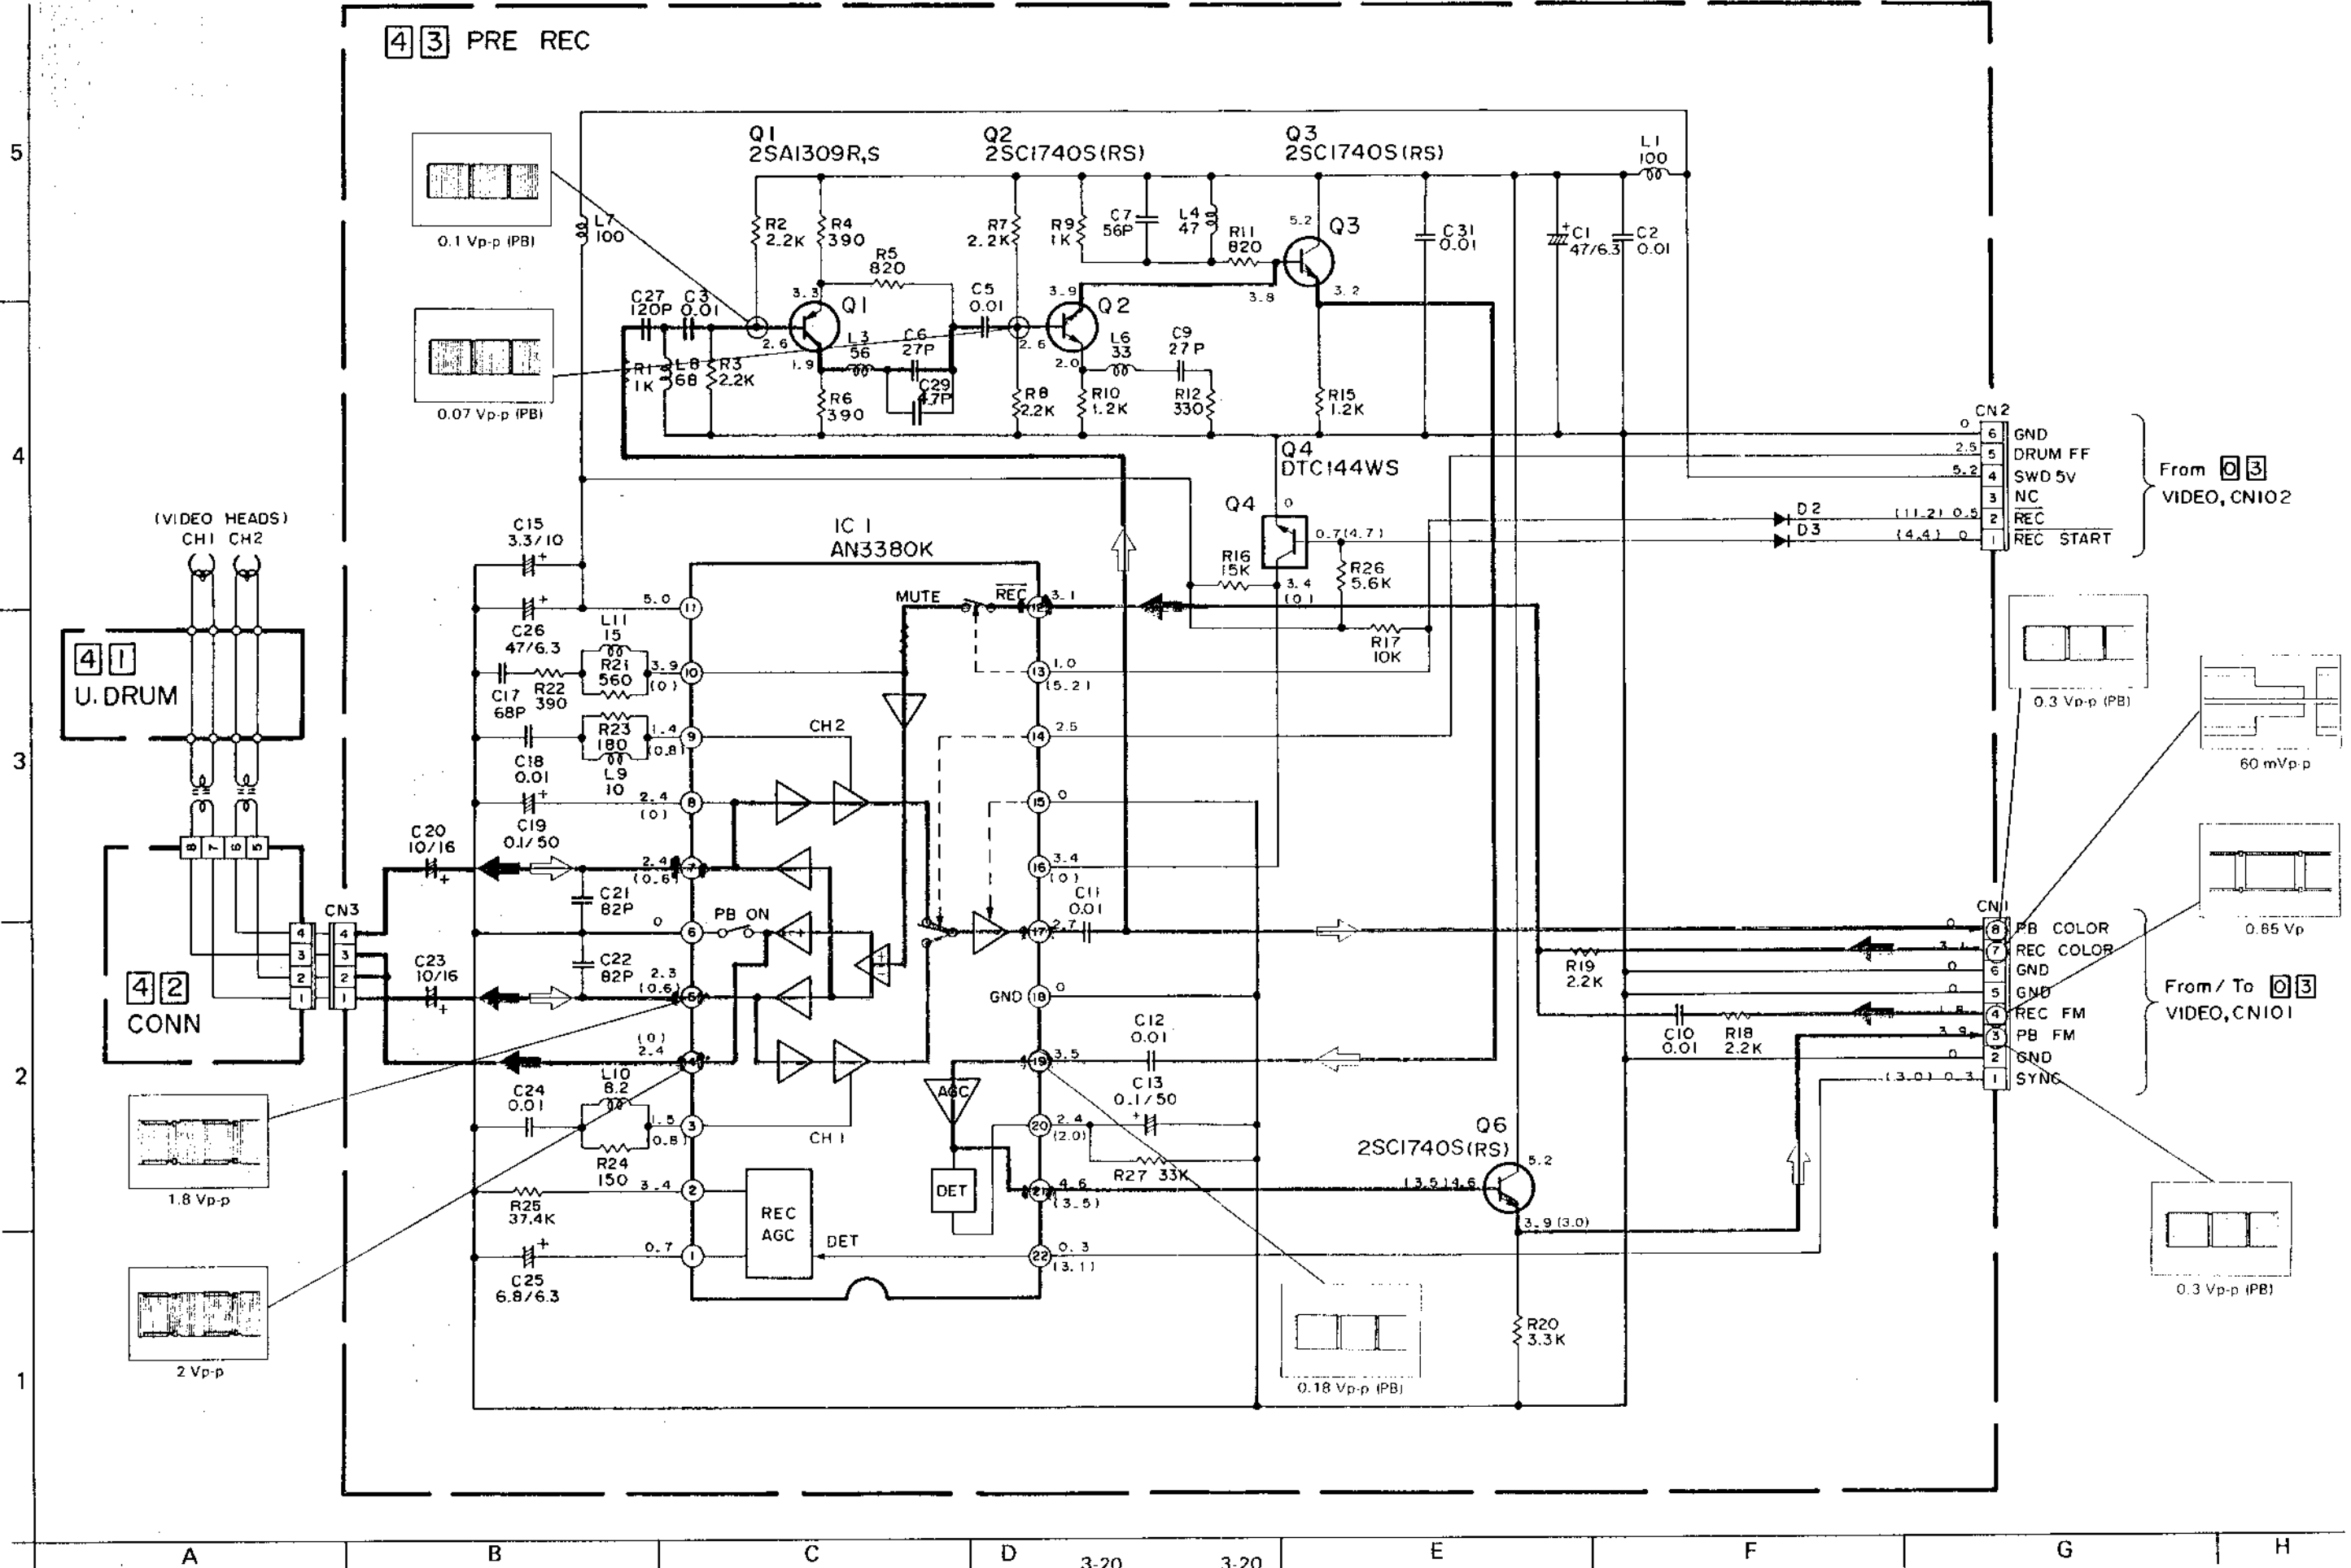

4 3 PRE REC

0.1 Vp-p (PBI)

0.07 Vp-p (PBI)

(VIDEO HEADS)
CH1 CH2

4 1
U.DRUM

4 2
CONN

1.8 Vp-p

2 Vp-p

From 0 3
VIDEO, CN102

0.3 Vp-p (PB)

60 mVp-p

0.65 Vp

From/ To 0 3
VIDEO, CN101

0.3 Vp-p (PB)

A B C D 3-20 E F G H

5

4


3

2


1

3.21 PRE/REC AND UPPER DRUM CIRCUIT BOARDS

—PRE/REC—

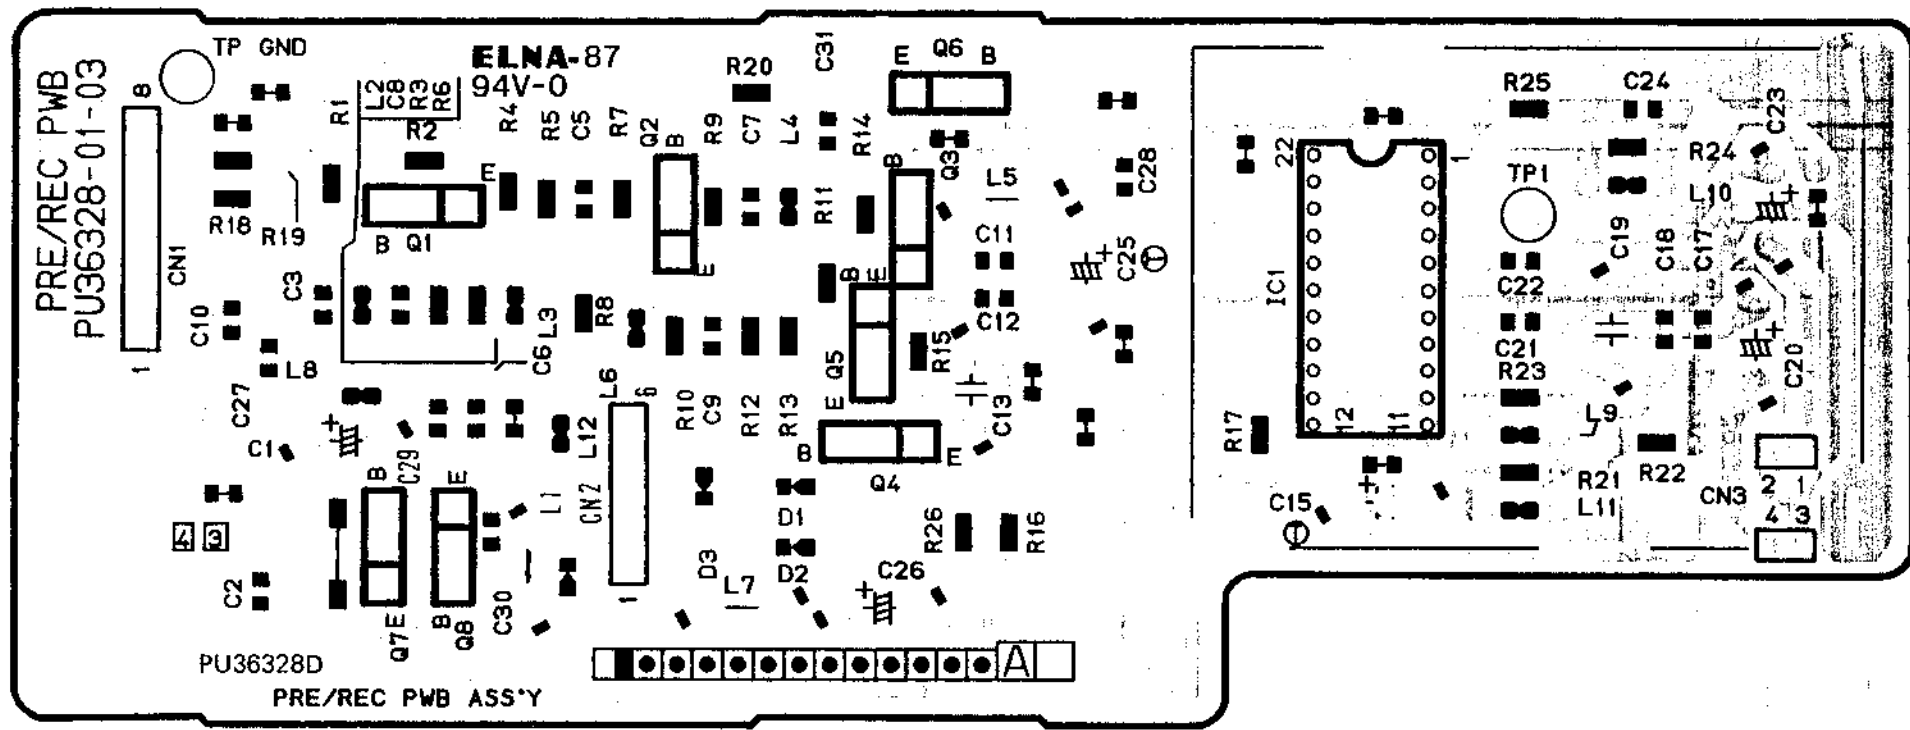

—UPPER DRUM—

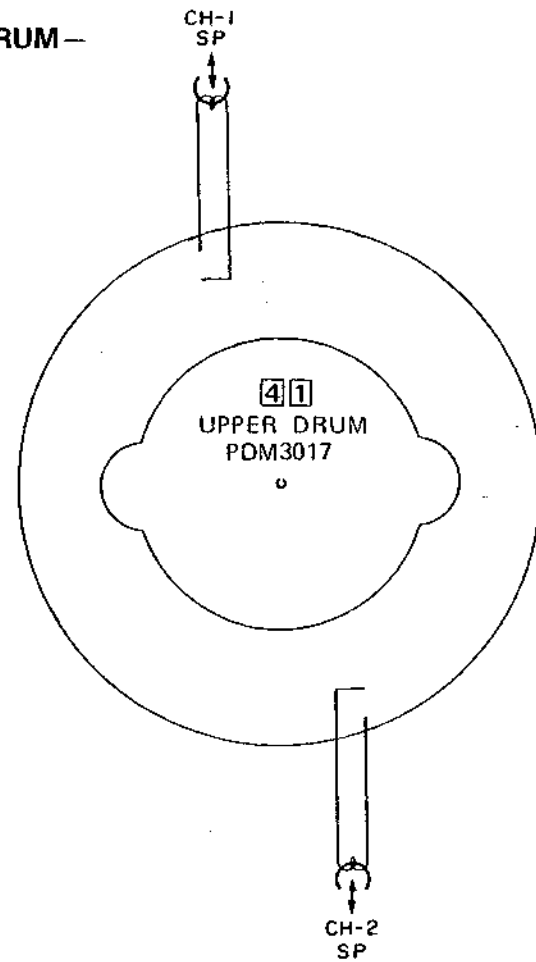

3-21 3-21

A B C D E F G H

5


4

3


2

1

3.22 IF SCHEMATIC DIAGRAM

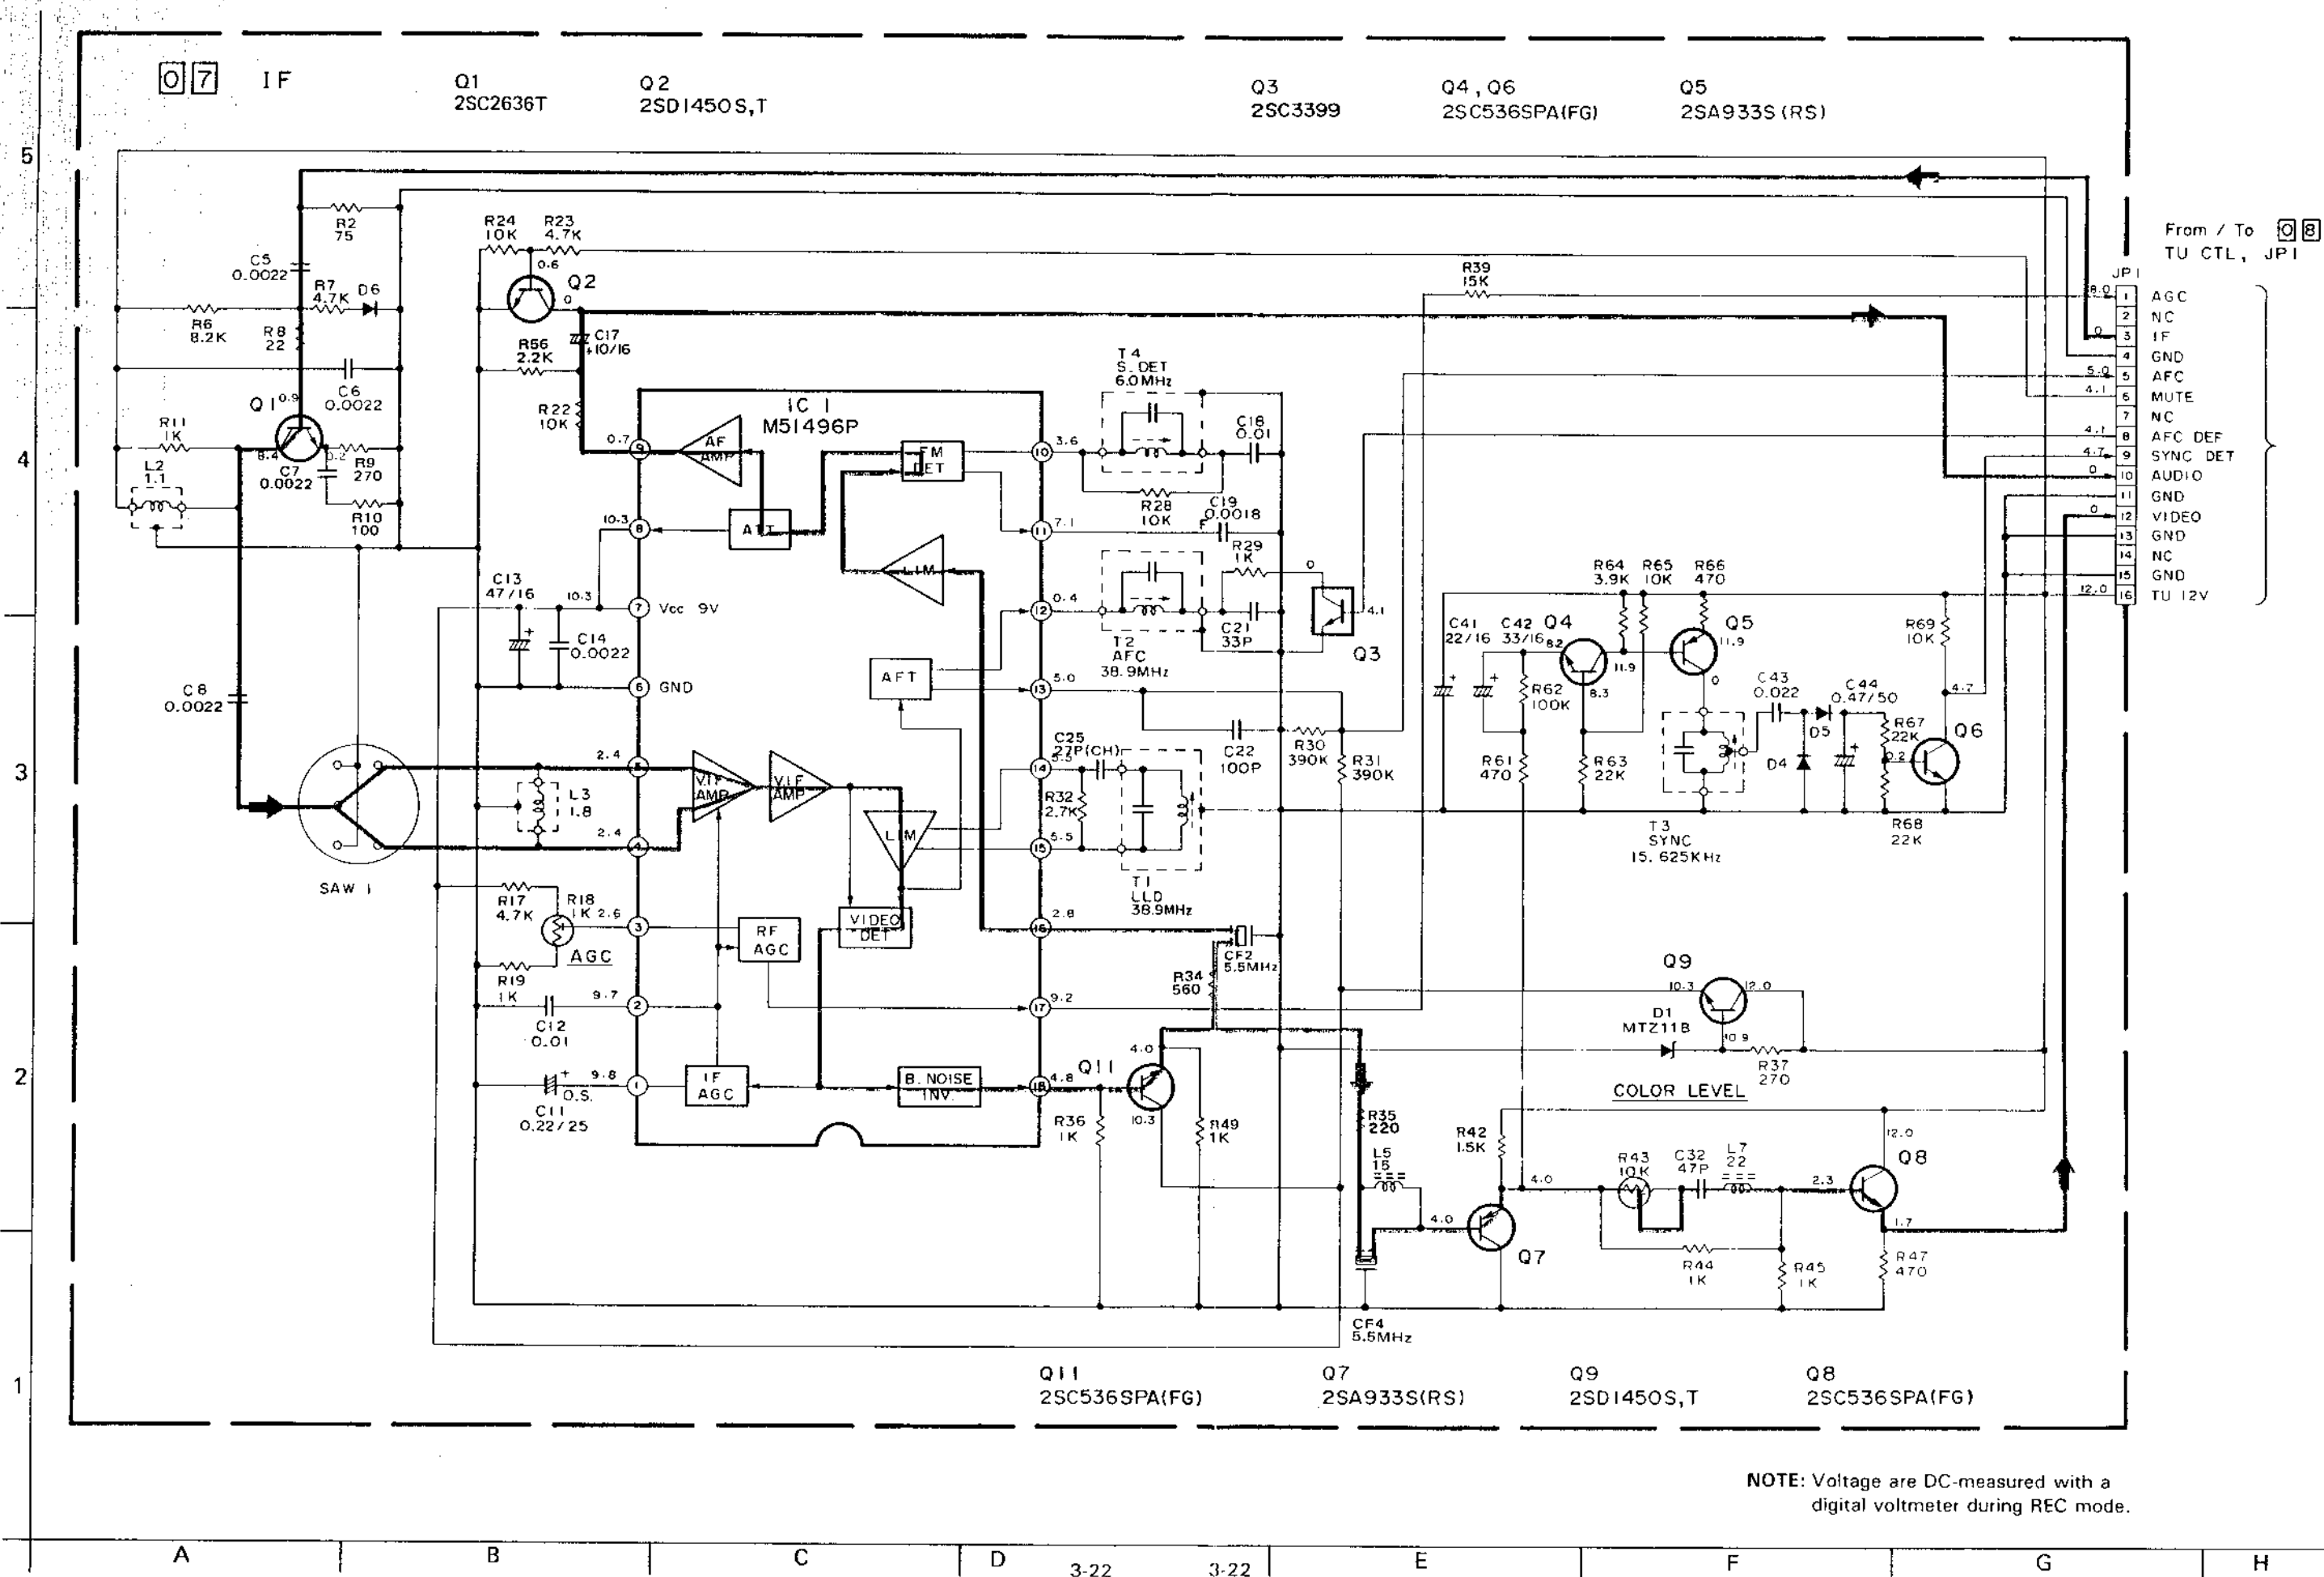

3.23 IF CIRCUIT BOARD

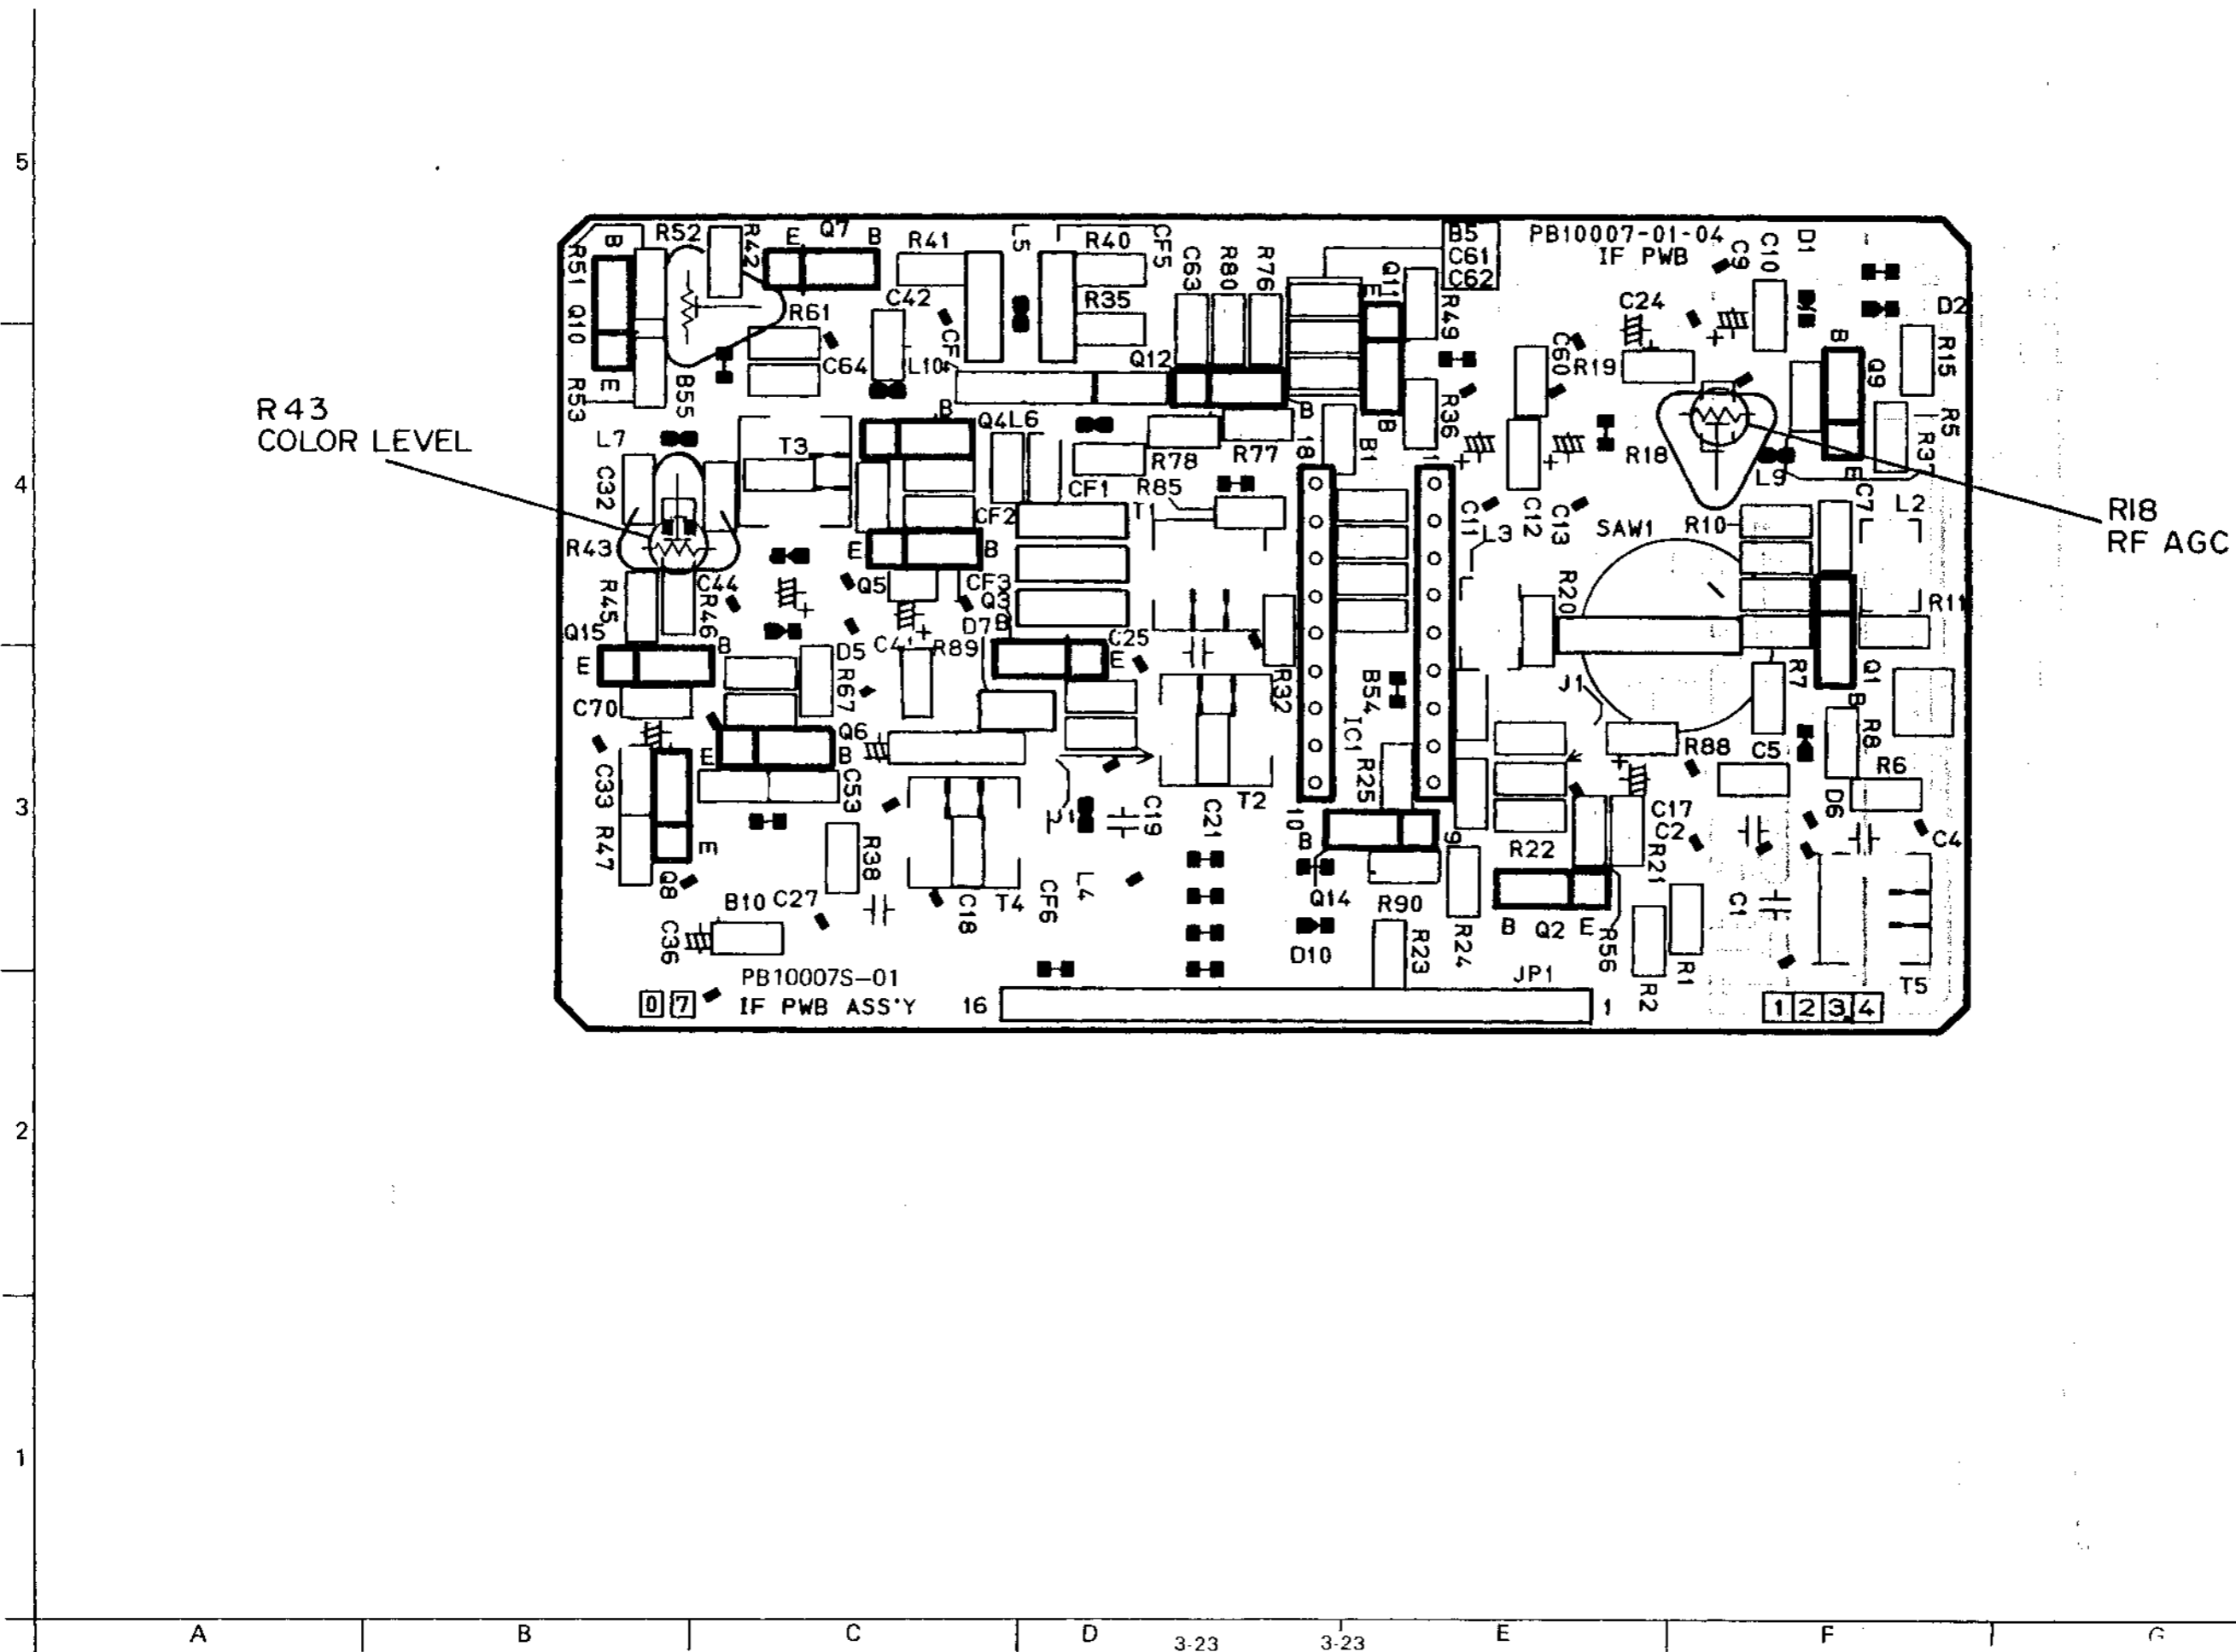

3.24 TUNER CTL SCHEMATIC DIAGRAM


5

4

3

2

1

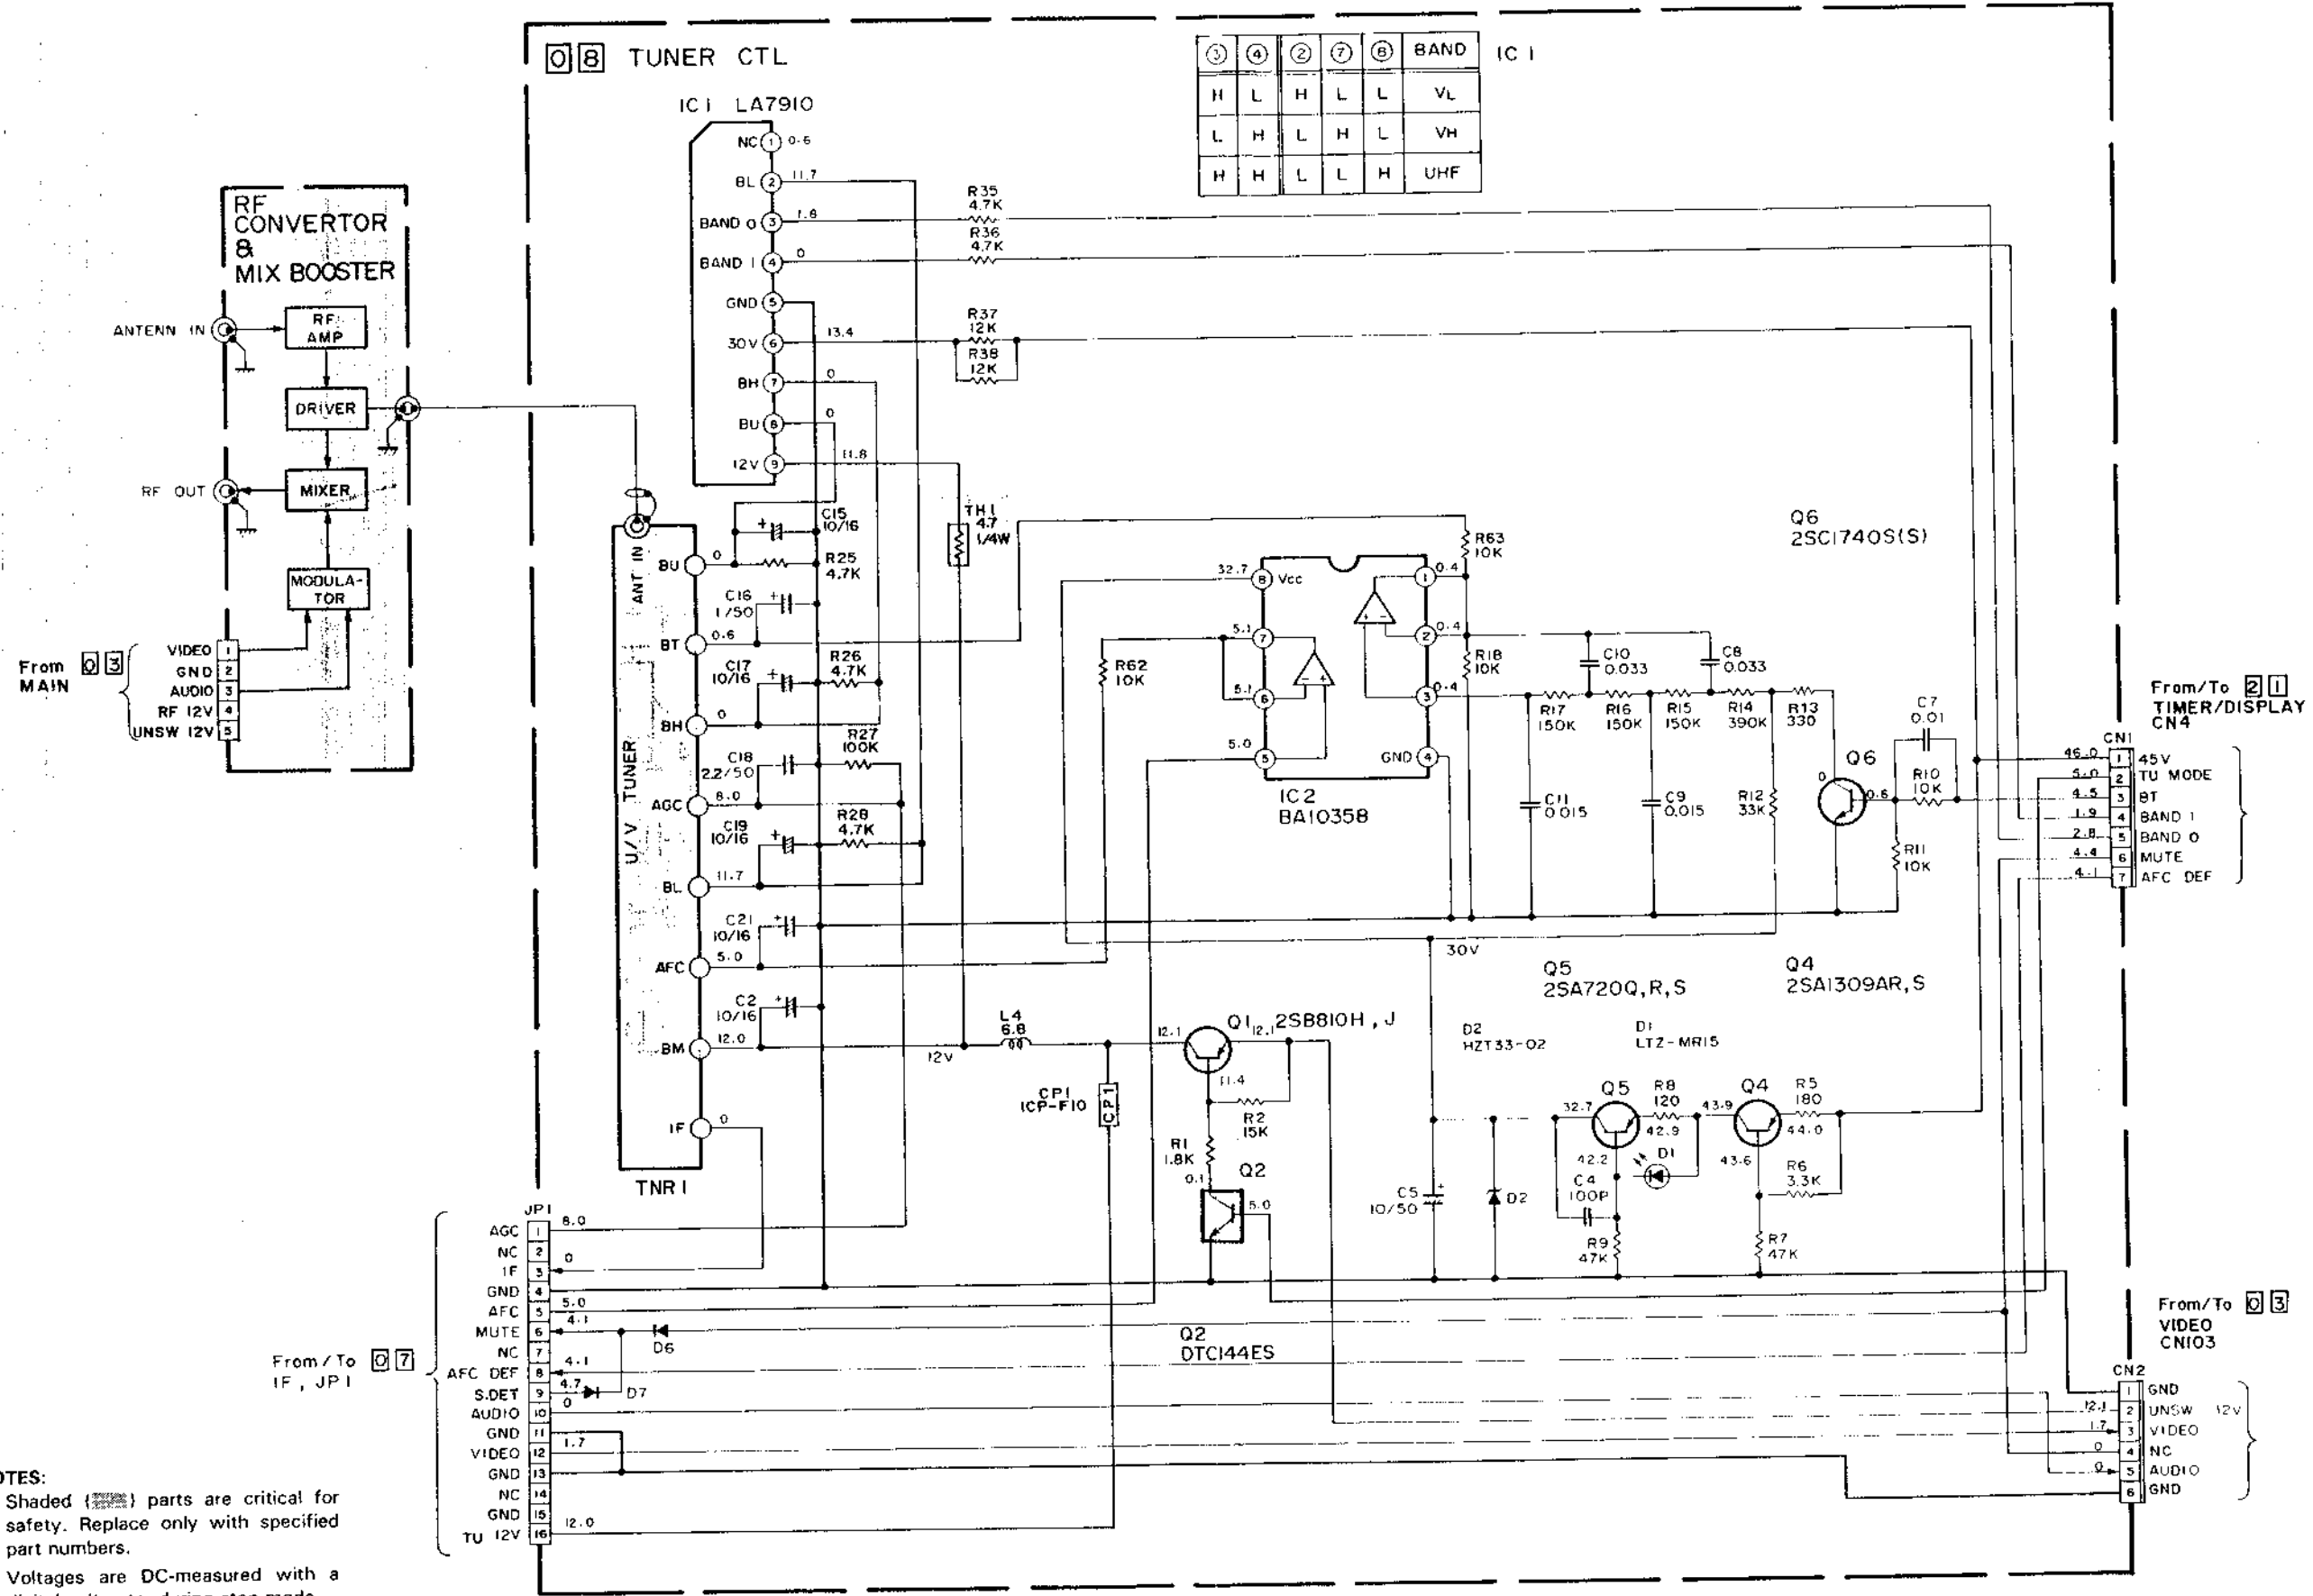

- NOTES:**
1. Shaded (▨) parts are critical for safety. Replace only with specified part numbers.
 2. Voltages are DC-measured with a digital voltmeter during stop mode.

A B C D 3-24 E F G H

3.25 TUNER CTL CIRCUIT BOARD


5

4

3

2

1

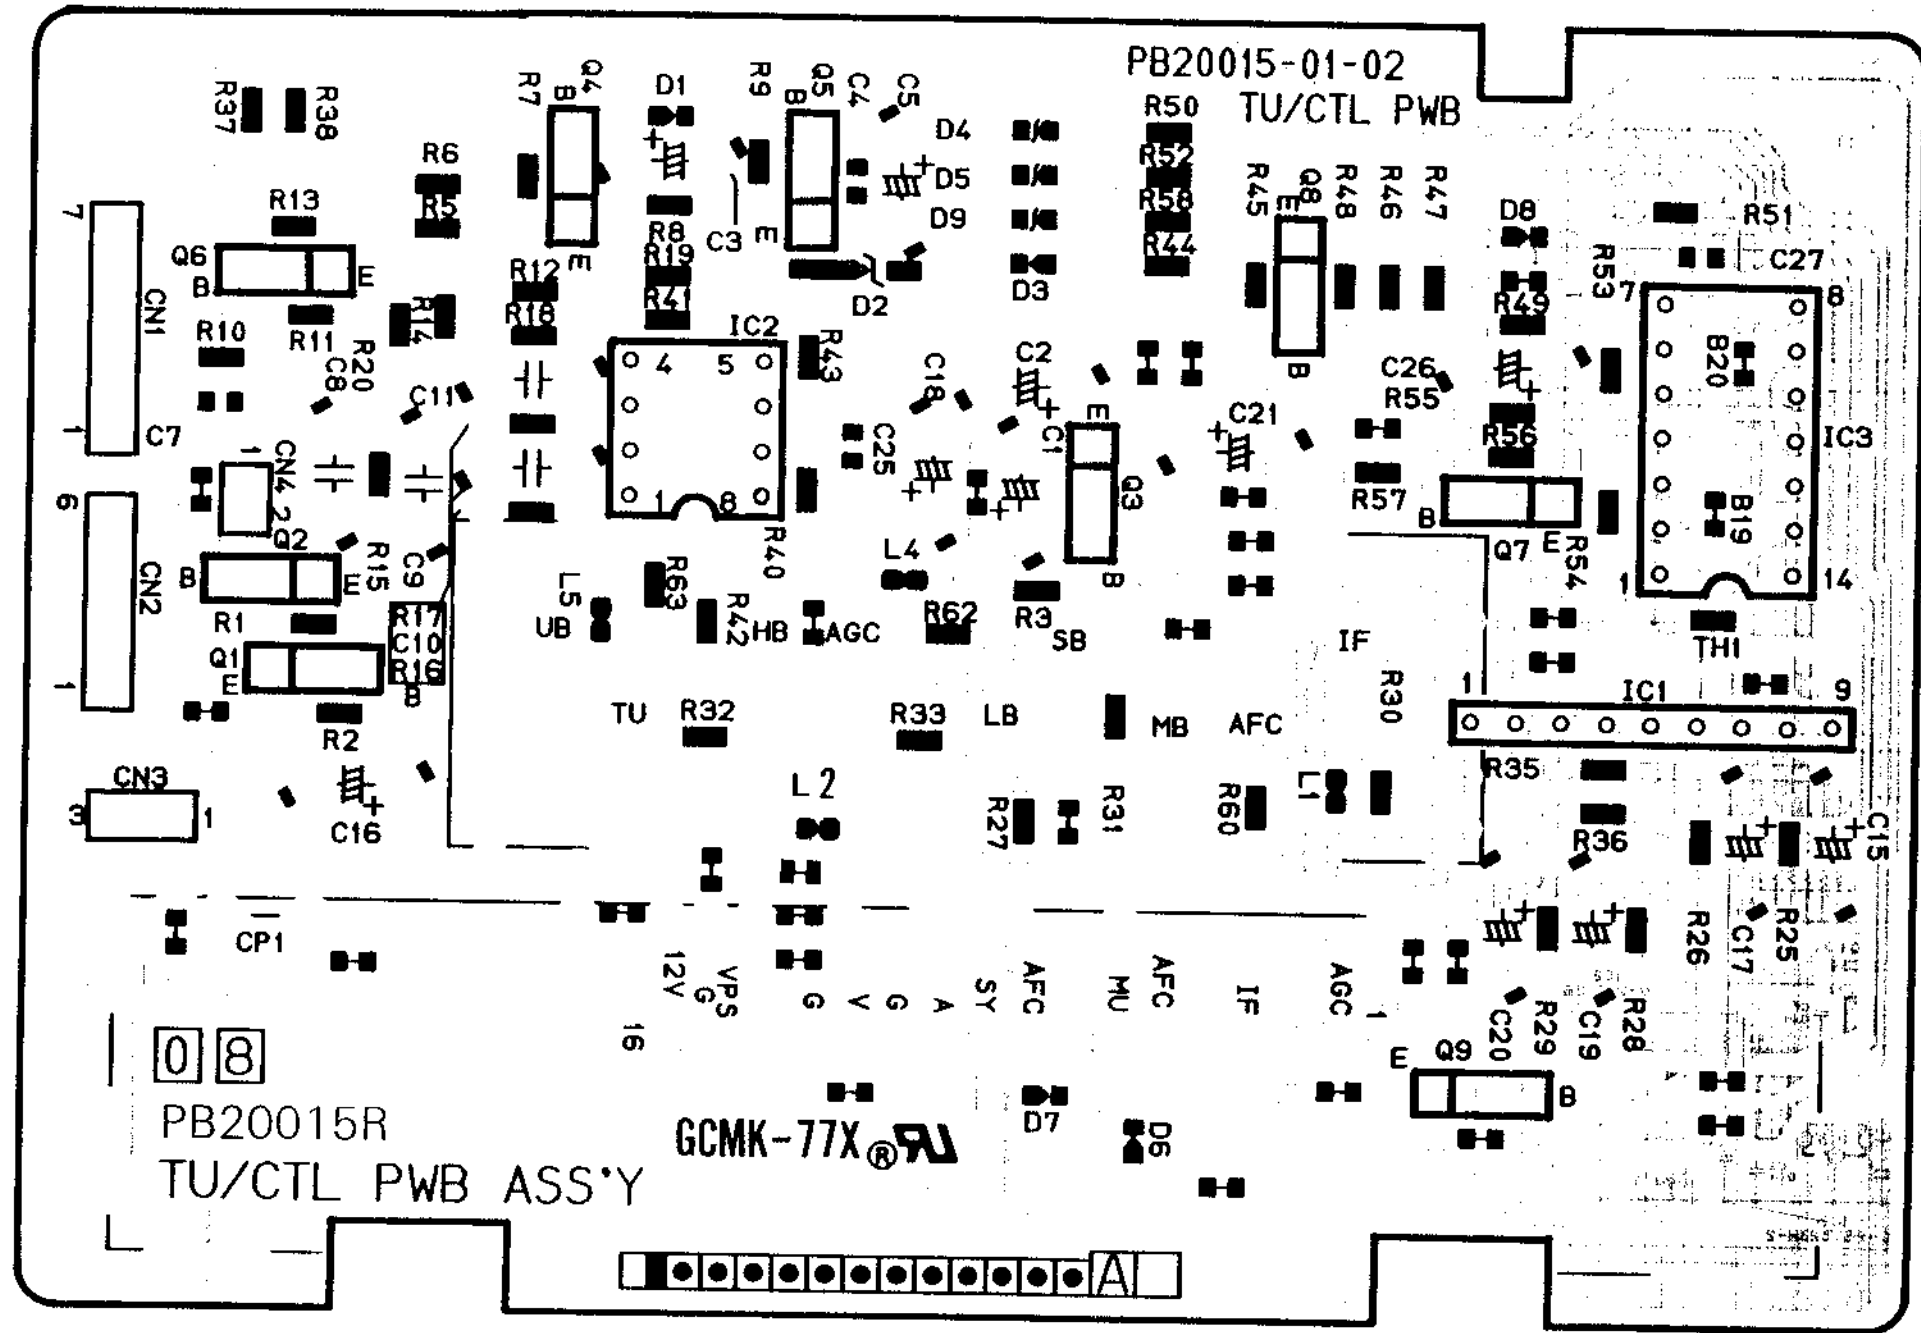

A

B

C

D

3-25

3-25


E

F

G

H


3.26 TIMER/DISPLAY AND MEMORY SCHEMATIC DIAGRAMS

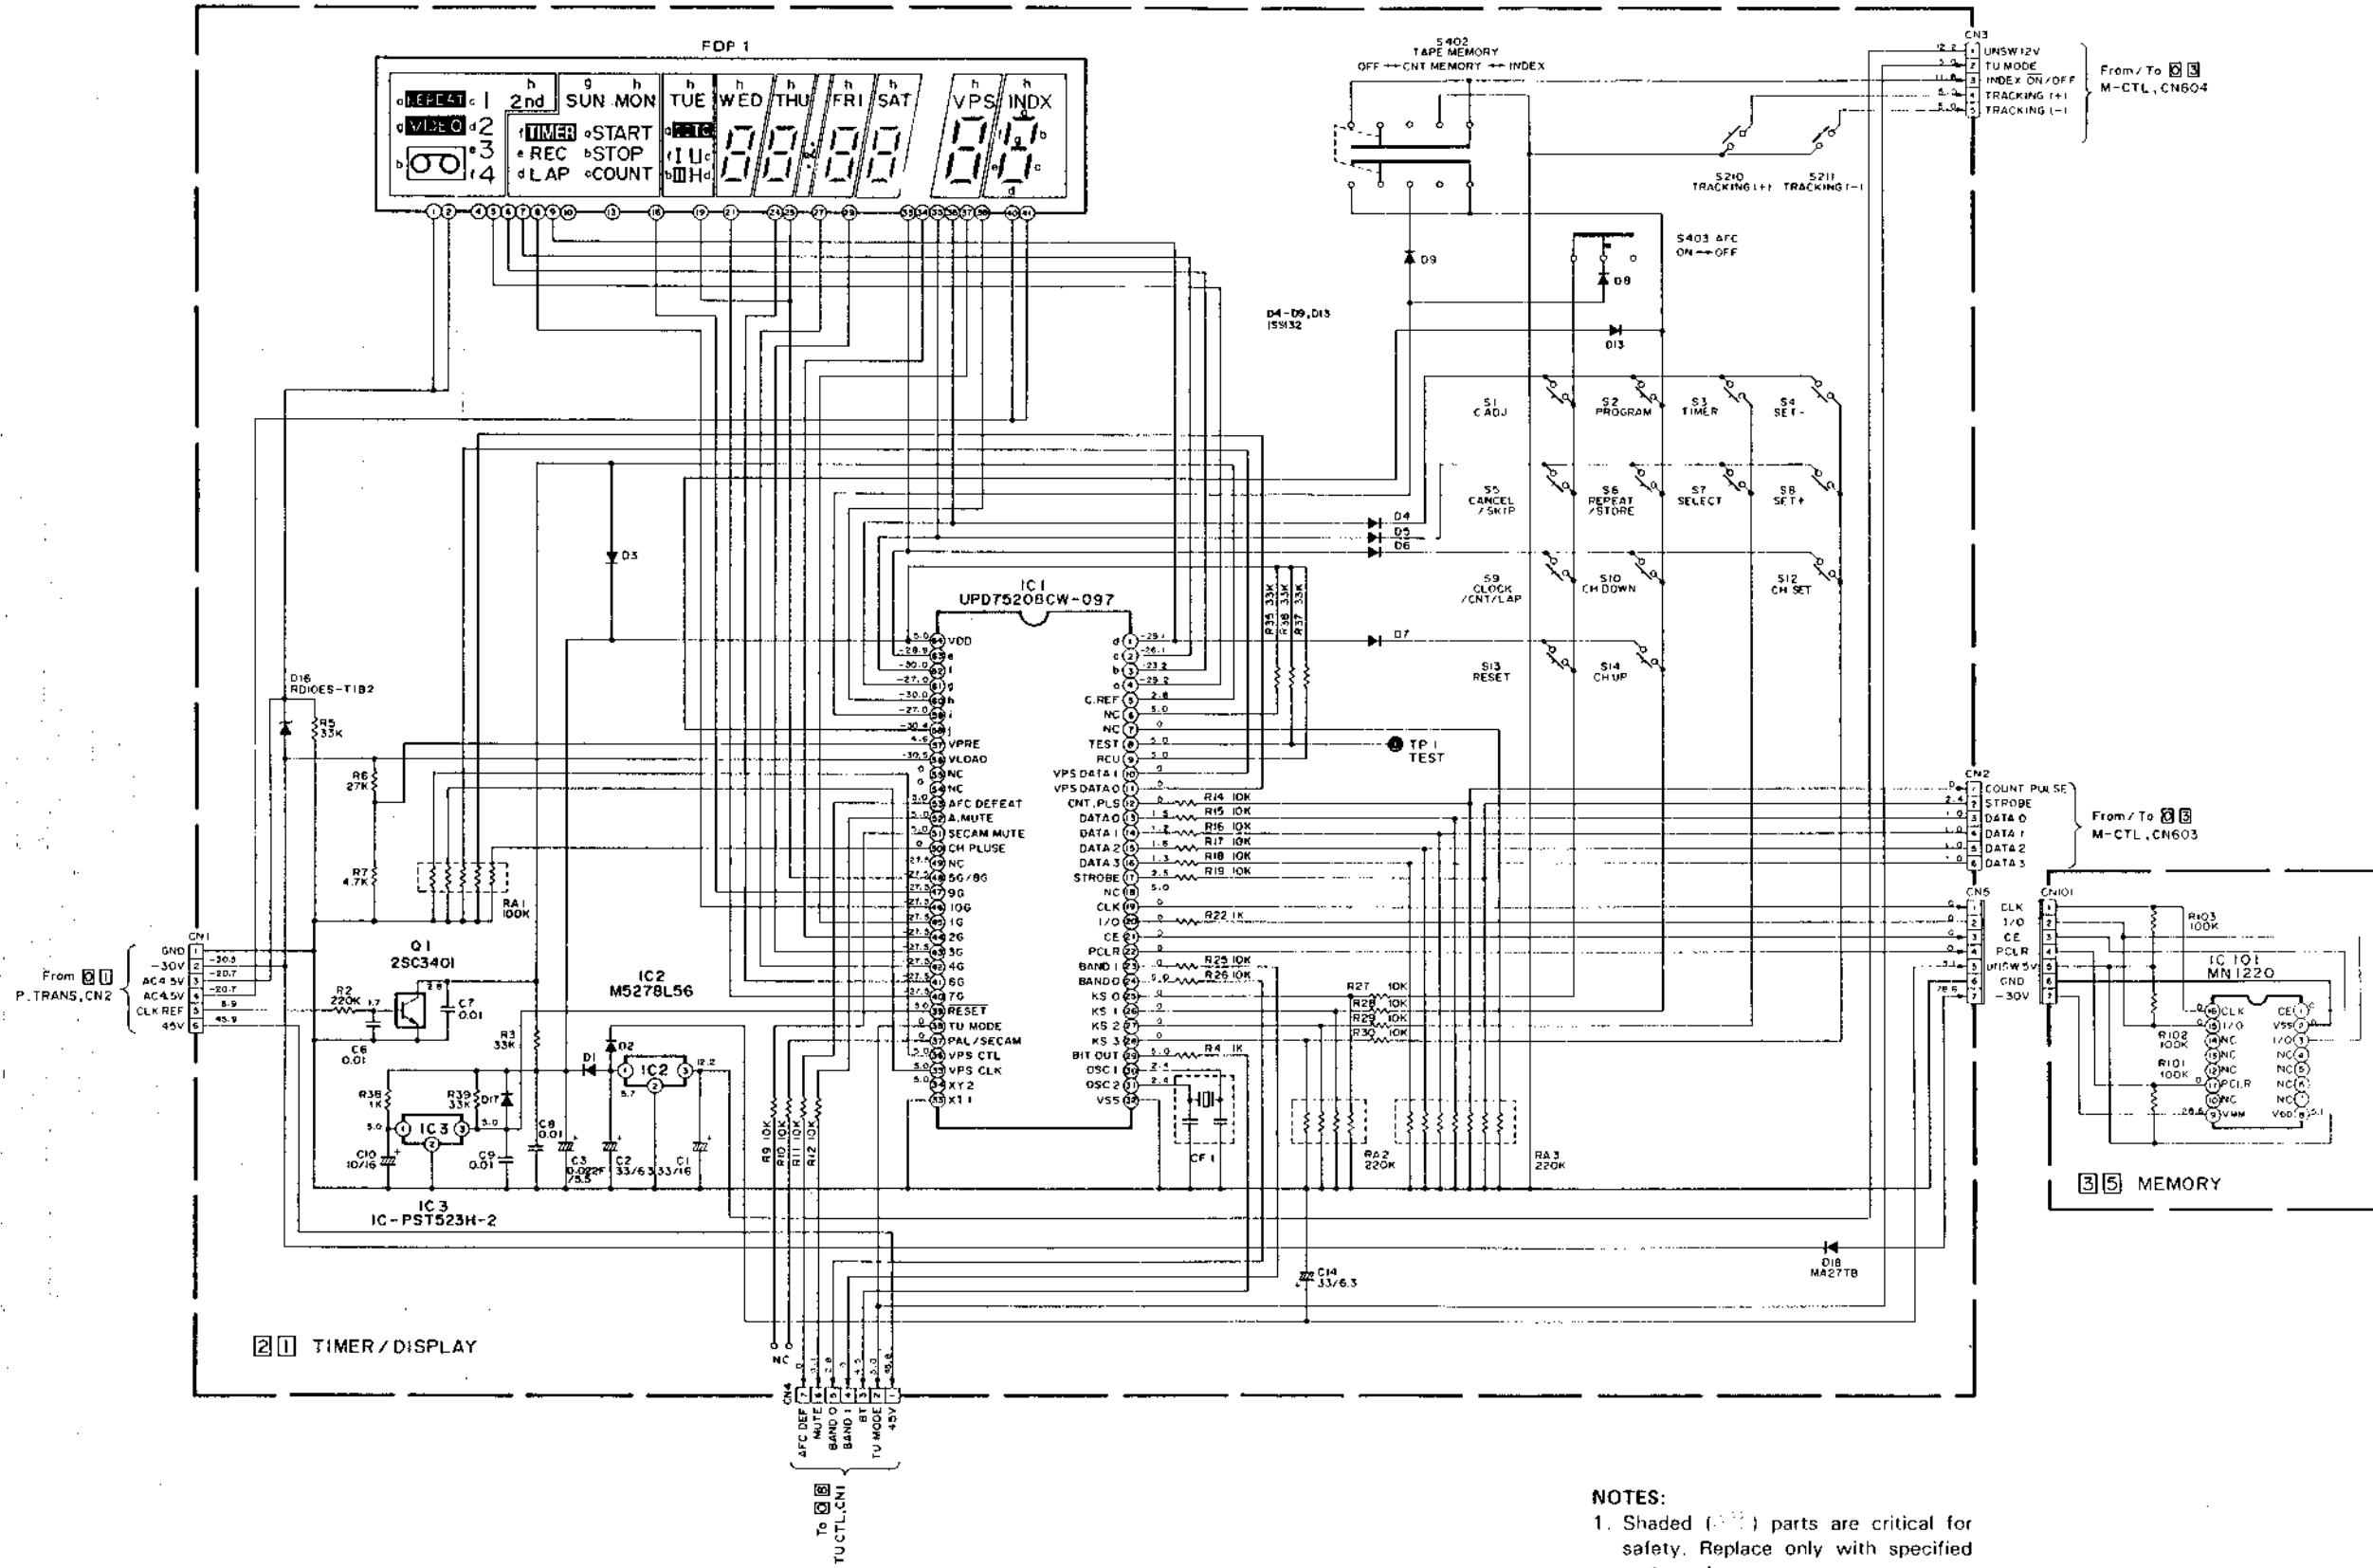


- NOTES:**
1. Shaded (■) parts are critical for safety. Replace only with specified part numbers.
 2. Voltages are DC-measured with a digital voltmeter during stop mode.

3.27 TIMER/DISPLAY, OPERATION AND MEMORY CIRCUIT BOARDS


- TIMER/DISPLAY -

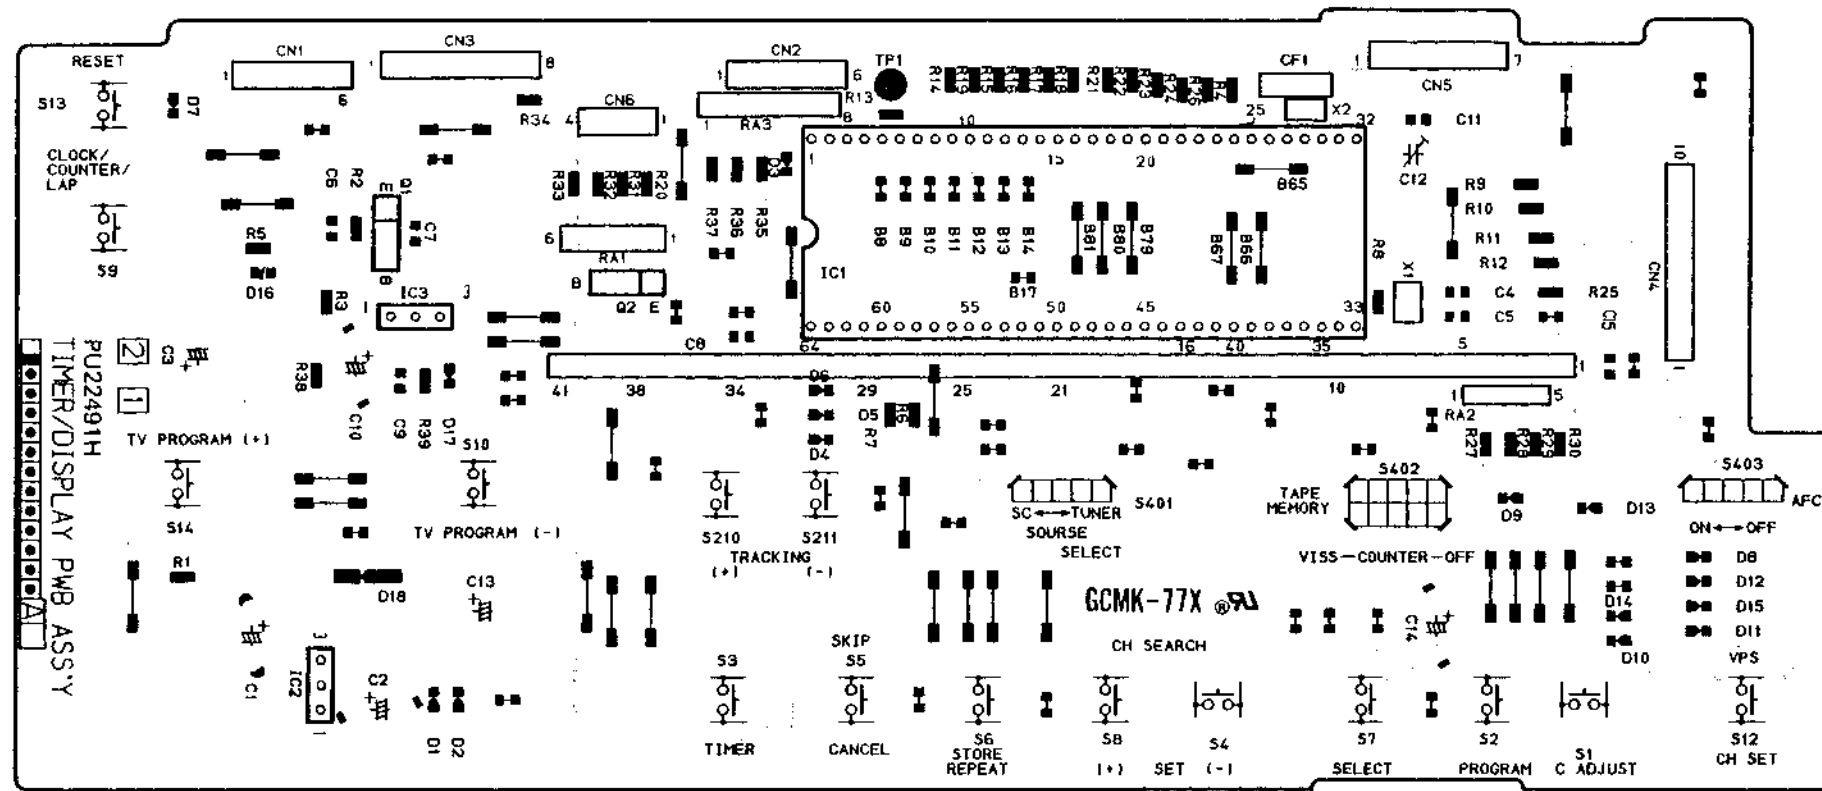

- MEMORY -

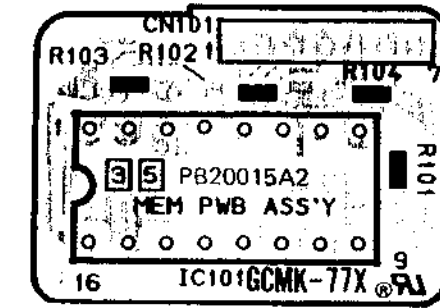

- OPERATION -

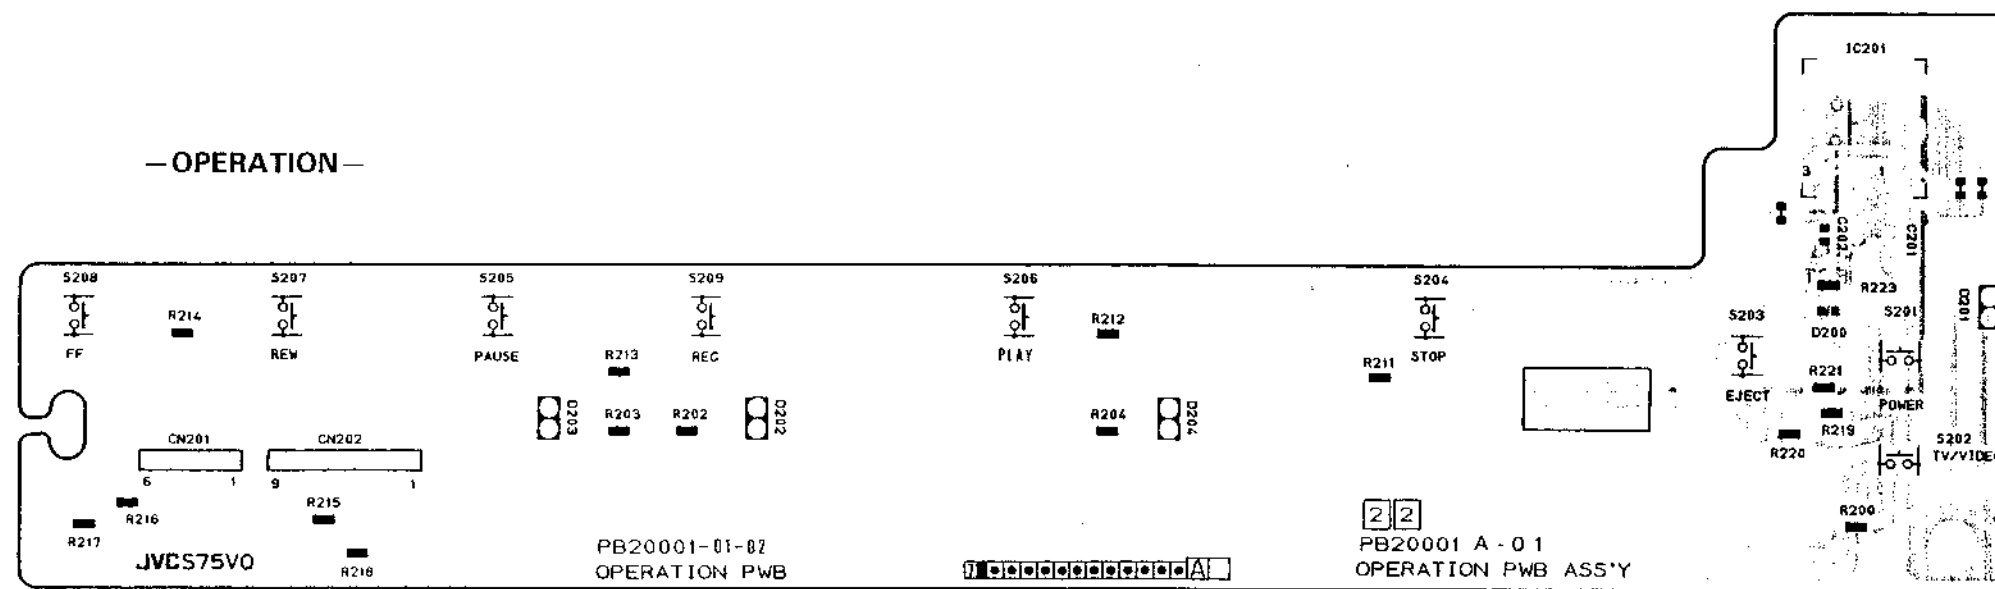

5

4

3

2

1

A

B

C

D

3-27

3-27

E

F

G

H

3.28 OPERATION SCHEMATIC DIAGRAM

5


4

3

2

1

2 2 OPERATION

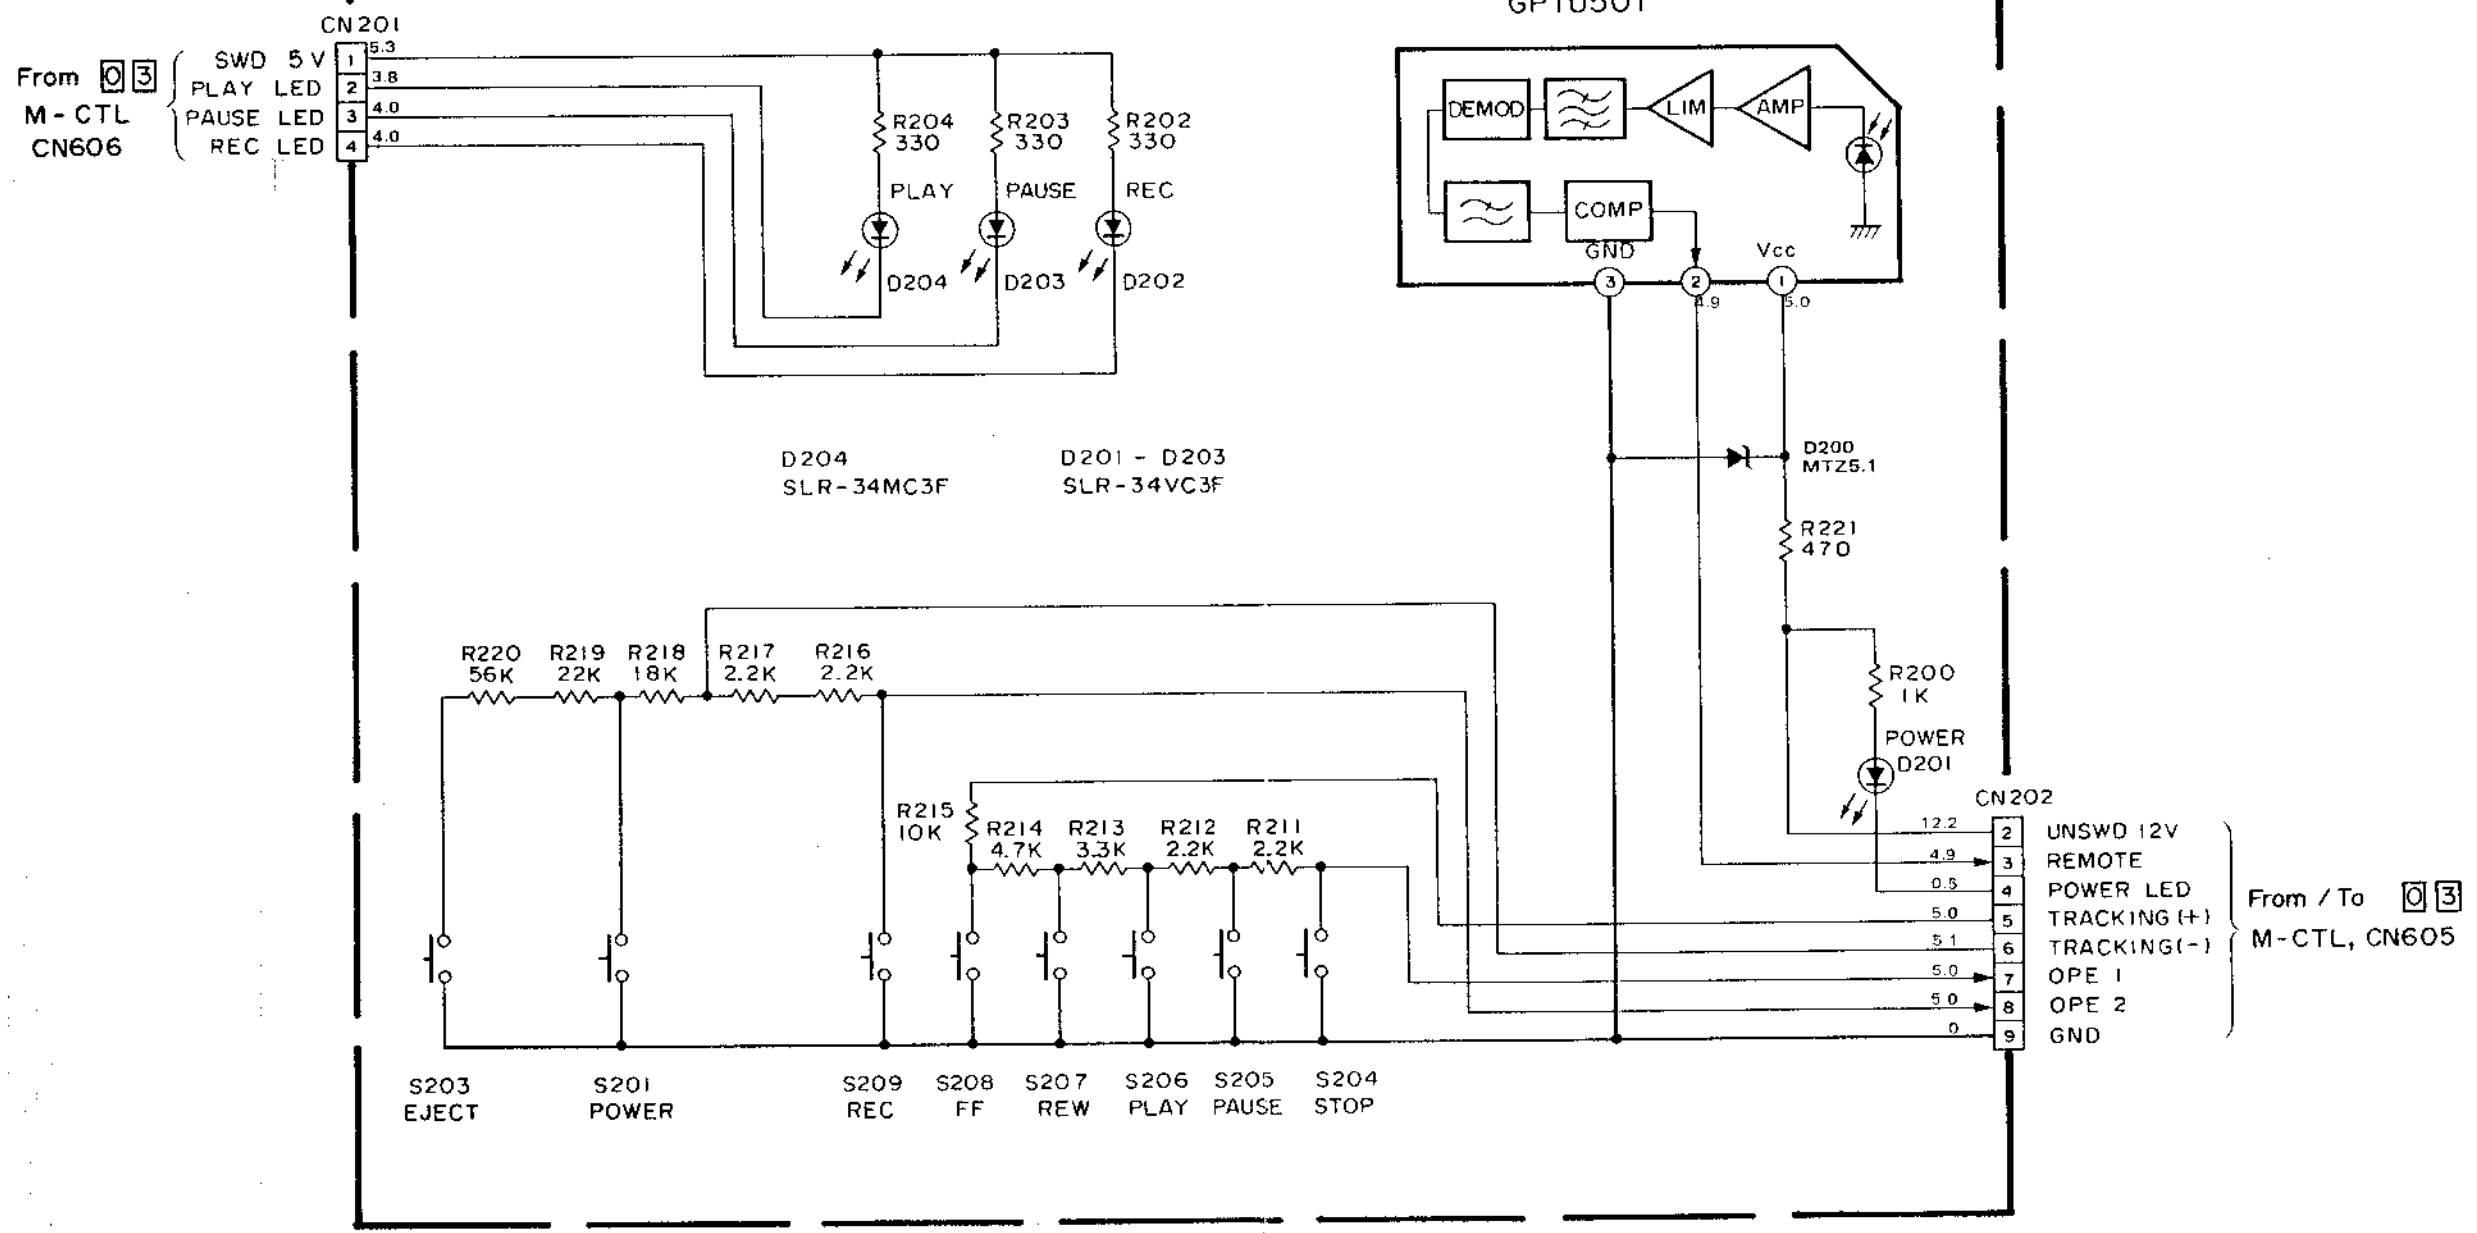

A

B

C

D 3-28

3-28


E

F

G


H

3.29 RF CONVERTER AND MIX BOOSTER SCHEMATIC DIAGRAM

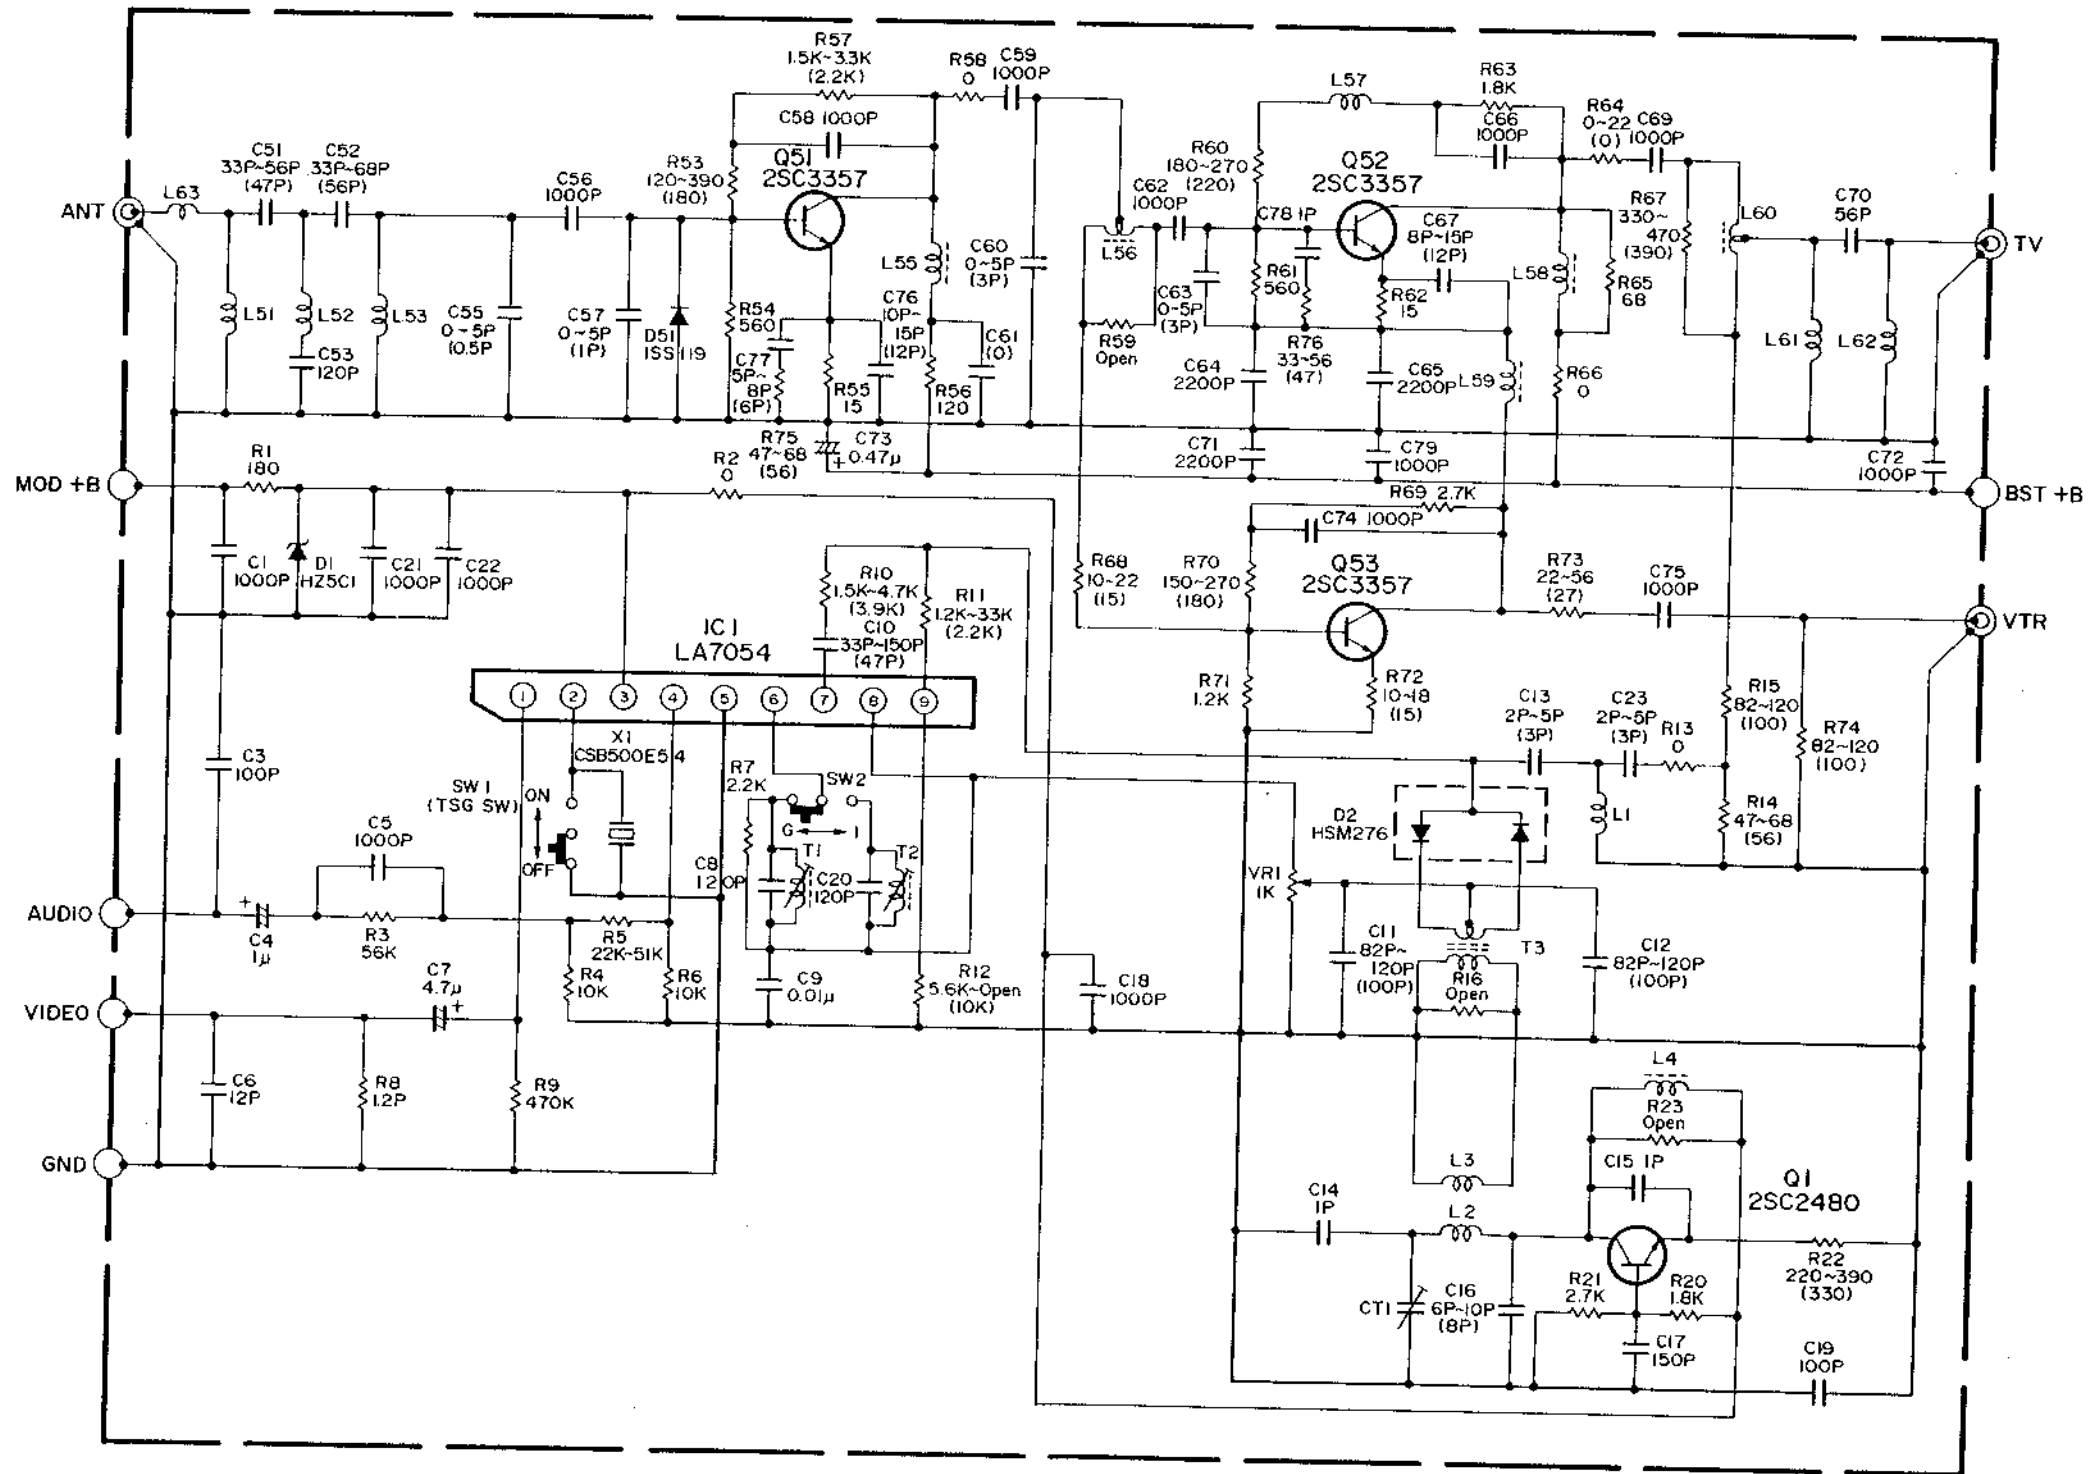

NOTE: This schematic parts are critical for safety.
Replace only with specified part numbers.

3.30 REMOTE CONTROL SCHEMATIC DIAGRAM

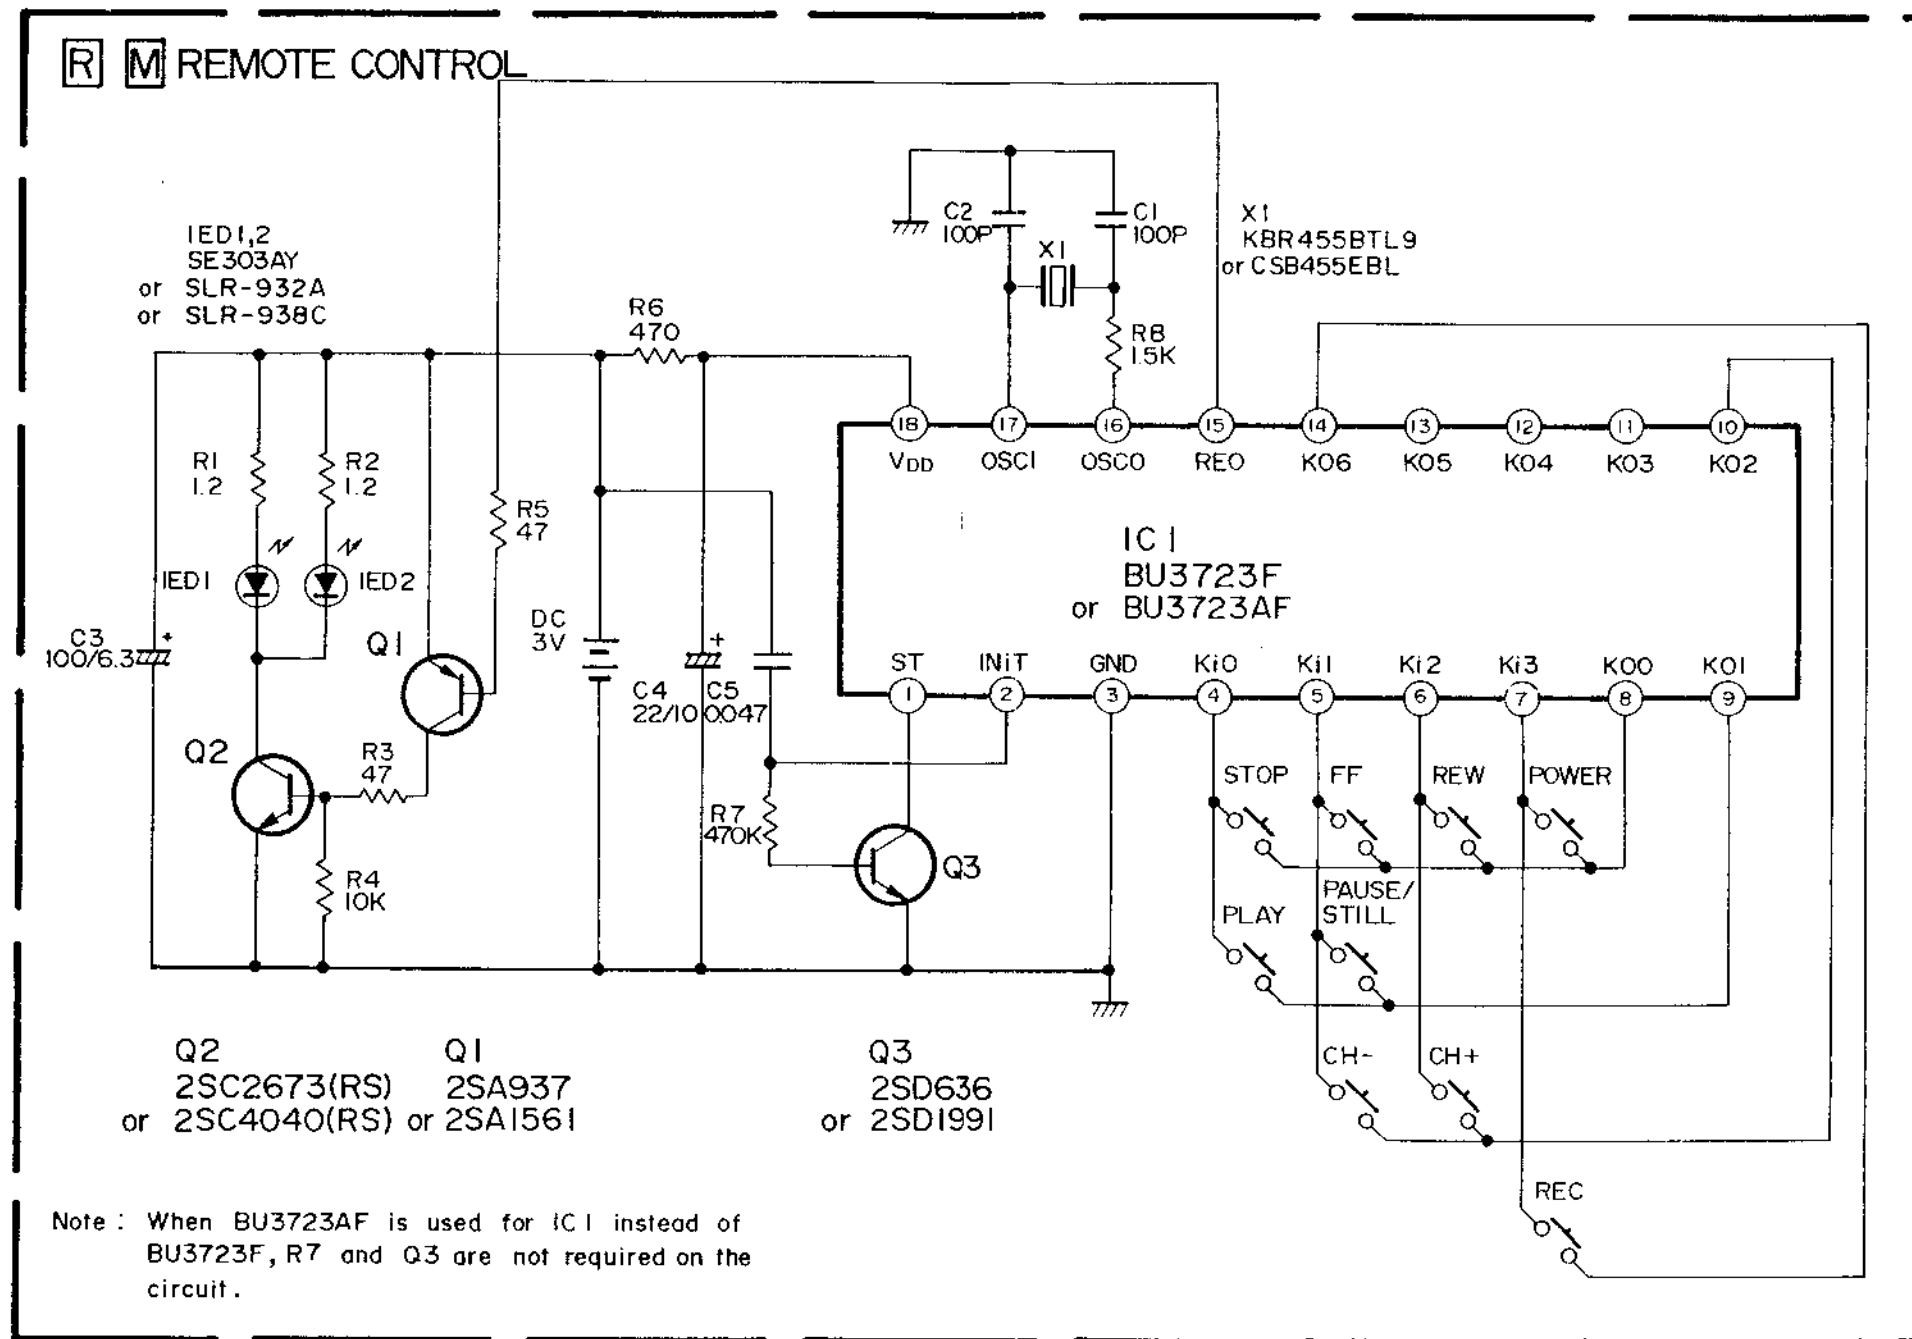

Note: When BU3723AF is used for IC1 instead of BU3723F, R7 and Q3 are not required on the circuit.


NOTE: This schematic parts are critical for safety. Replace only with specified part numbers.

SECTION 4 EXPLODED VIEWS AND PARTS LIST

4.1 STANDARD PART NUMBER CODING

4.1.1 Screw coding

Standard screw part numbers are as follows.


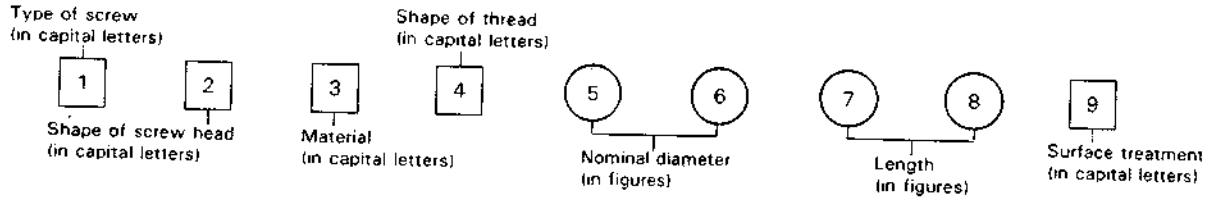


Type of screw (first digit)

- S Normal screws
- D Assembled machine screws (with plain and spring washers)
- L " (with spring washer)
- N " (with plain washer)
- F Feather screws
- G Washer head tapping screws
- M Wood screws

Shape of screw head (second digit)

- B Brazier head
- D Binding head
- H Oval countersunk head
- P Pan head
- R Round head
- S Flat head
- T Truss head
- W Washer head (machine screws)
- X Toothed head

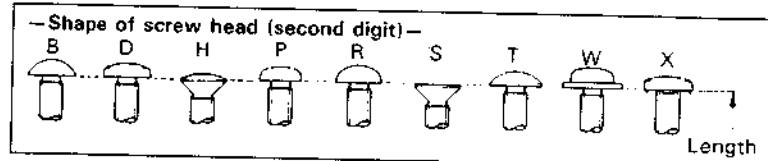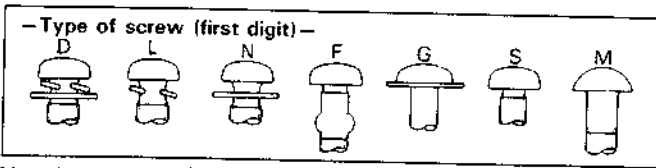


Material (third digit)

- | | |
|-------------------|-----------------|
| S Steel | N Nickel silver |
| E Stainless steel | Y Cast brass |
| C Cast iron | A Aluminum |
| U Copper | Z Zinc alloy |
| B Brass | K Polycarbonate |
| P Phosphor bronze | |

Shape of thread (fourth digit)

- P Cross recessed head screws
- (-) Slotted head machine screws
- X Slotted-cross recessed head machine screws
- K Cross recessed head machine screws for precision equipment (type 1 type 3)
- H " " " " " " " " " " " "
- A Cross recessed head tapping screws (type 1)
- B " " " " " " " " " " " "
- C " " " " " " " " " " " "
- E Cross recessed head special tapping screws (brand : evertight)
- F " " " " " " " " " " " "
- T " " " " " " " " " " " "
- G " " " " " " " " " " " "

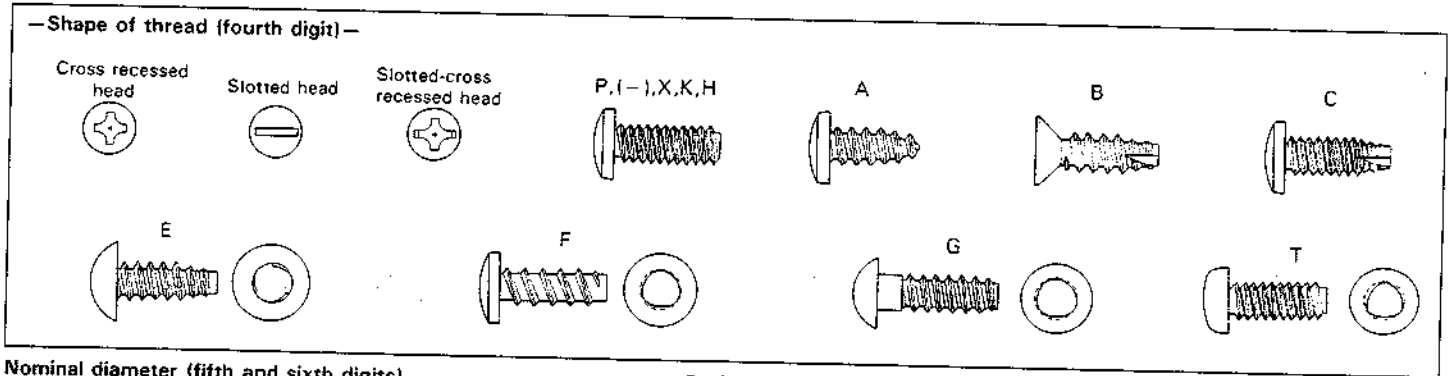

Nominal diameter (fifth and sixth digits)

The fifth and sixth digits indicate a nominal diameter or dimension. If the dimension exceeds 10 mm, three digits are used. The number indicates a nominal diameter or dimension, given in millimeters, multiplied by ten.


Surface treatment (ninth digit)

- Z Dichromate treatment after galvanizing (MFZn II-C)
- N Nickel plating (MFNiII, MFNiI)
- R Chromium plating (MBCrII, MBCrI)
- G Silver plating (SP4)
- B Black coating after plating
- F Blackening of iron (FB)
- M Blackening after galvanizing
- K Pickling of brass (PF2)
- P Phosphate treatment
- W Uni-chrome plating
- L Coated with transparent paint
- A Colored red after galvanizing (MFZnII-C)
- C Colored blue after galvanizing (MFZnII-C)
- T Colored green after galvanizing (MFZnII-C)
- V Colored purple after galvanizing (MFZnII-C)

Length (seventh and eighth digits)

The seventh and eighth digits indicate length in millimeters. The preceding figure is zero when the dimension is smaller than 10 mm. For machine screws used in precision equipment whose length is given in units of 0.1 mm, the number indicates ten times the size of their length.

4.2 CABINET ASSEMBLY <M2>

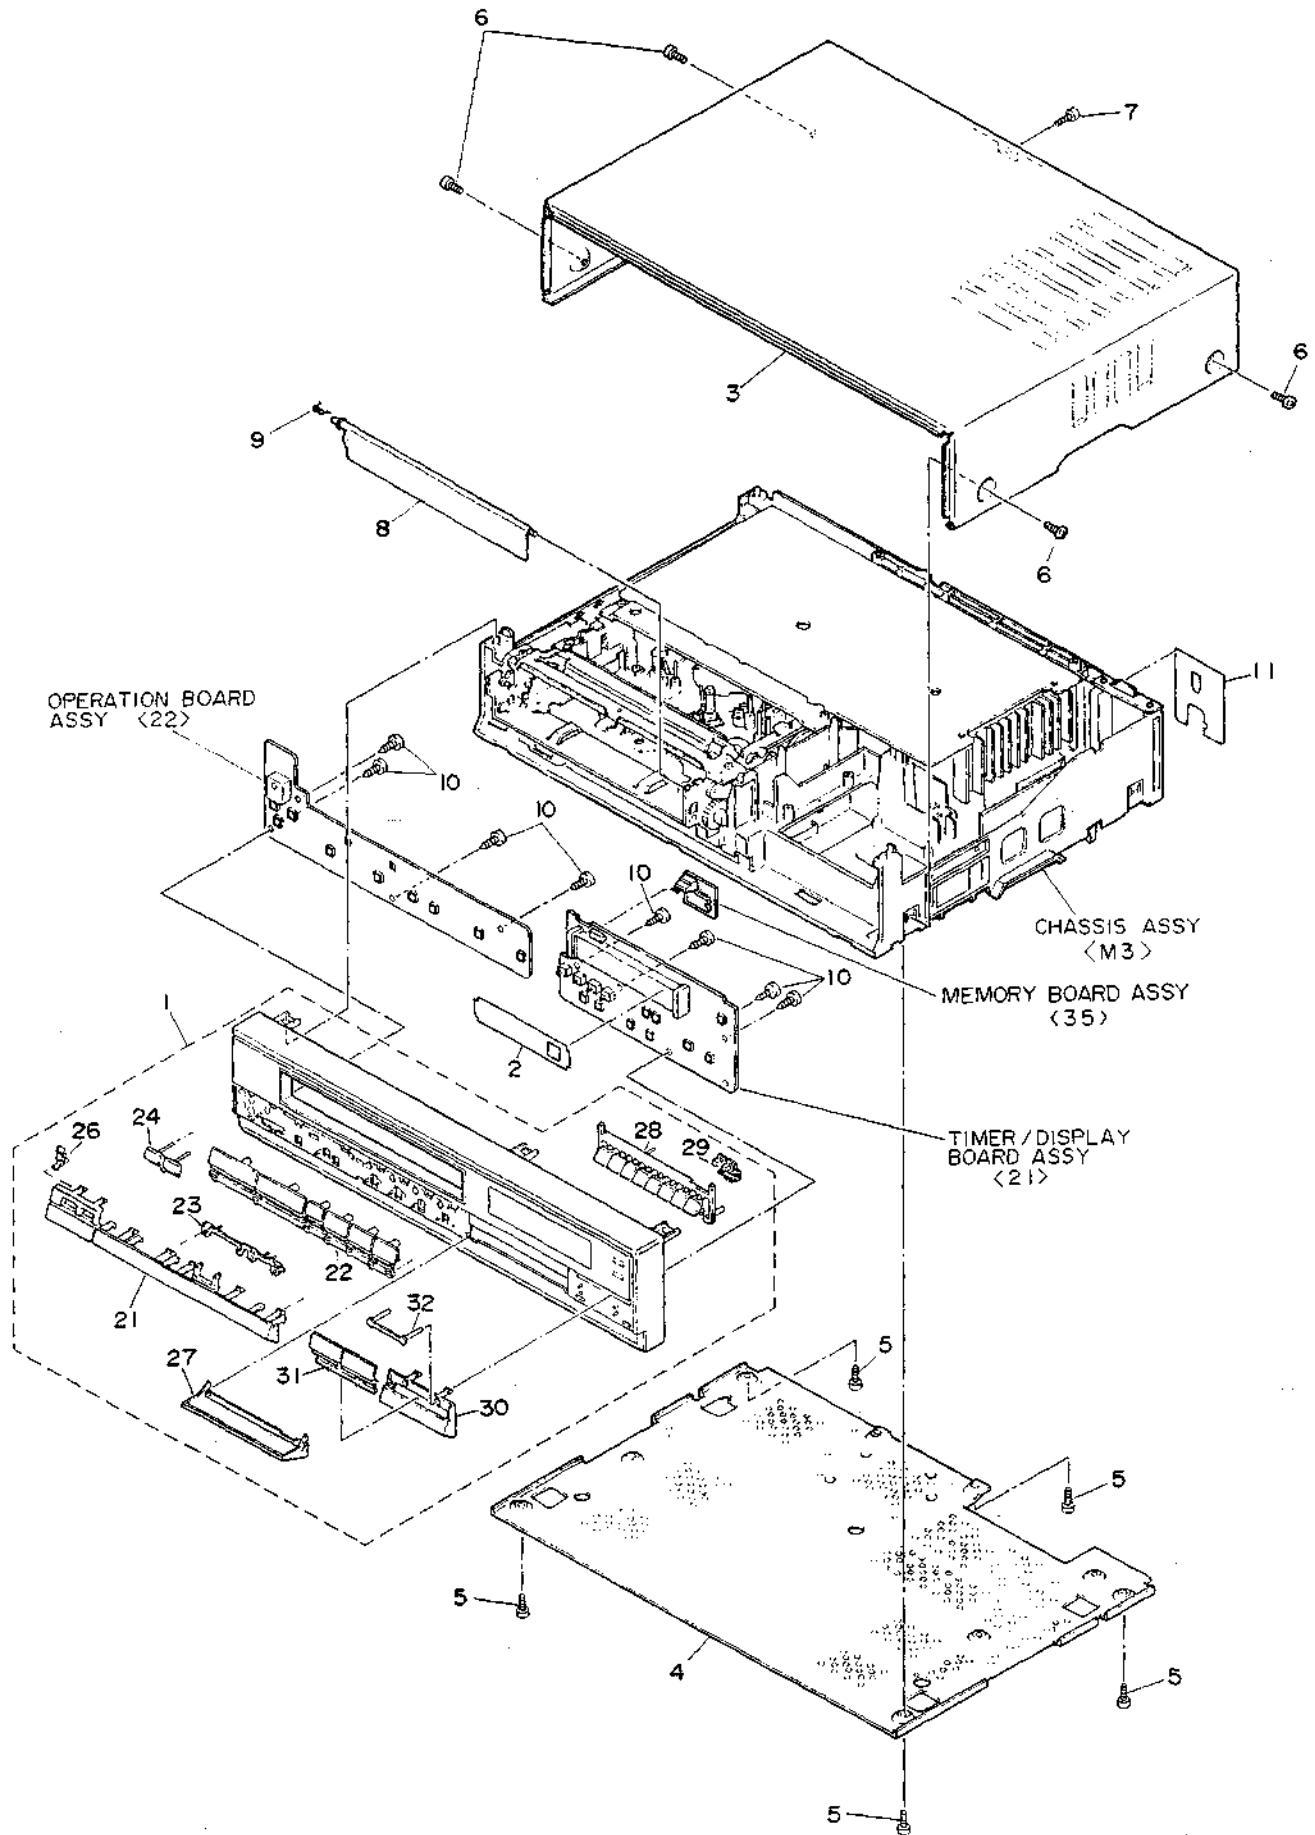

#△ REF NO. PART NO. PART NAME, DESCRIPTION

#△ REF NO. PART NO. PART NAME, DESCRIPTION


4.3 CHASSIS ASSEMBLY <M3>

* CABINET ASSEMBLY <M2> *



* CHASSIS ASSEMBLY <M3> *

1	PQ10479M	FRONT PANEL ASSY, INCL. 21-32
2	PQ42382-2	SHEET
△ 3	PQ10473-2-5	TOP COVER
△ 4	PQ10472-1-2	BOTTOM COVER
5	SDSF3008Z	TAPPING SCREW, X5
6	SDSA4014M	TAPPING SCREW, X4
7	SDSF3010M	TAPPING SCREW
8	PQ31267-84	CASSETTE HOUSING DOOR
9	PQ42410-1-1	TORSION SPRING
10	SDSF2608Z	TAPPING SCREW, X8
△ 11	PQ32058	BRACKET SHEET
21	PQ20436-4	OPERATION COVER
22	PQ20294-3	OPERATION BUTTON
23	PQ31227	OPERATION INDICATOR
24	PQ31204-3	POWER BUTTON
26	PQ42355	POWER INDICATOR
27	PQ31228AD	DOOR ASSY
28	PQ31384-4	PROGRAM BUTTON
29	PQ31206	COUNTER BUTTON
30	PQ31702-3	CHANNEL COVER
31	PQ31703	CHANNEL BUTTON
32	PQ43015	PIN

1	PQ43013	FOOT, X2
2	PQ43023	EARTH PLATE
4	SDSP2608Z	SCREW, X3
5	SDSA4014Z	TAPPING SCREW, X2
6	PQ41396	SPECIAL SCREW
7	PUS28277H	CASS. HOUSING ASSY, INCL. 41-46
8	SDST2605Z	TAPPING SCREW, X2
9	SDST2605Z	TAPPING SCREW, X2
10	SDSA4014Z	TAPPING SCREW, X4
11	SDST3006Z	TAPPING SCREW, X2
12	SDSF3008Z	TAPPING SCREW, X2
13	PQ43012	EARTH PLATE
14	SDST2605Z	TAPPING SCREW
15	SDSA2608Z	TAPPING SCREW, X2
16	GPSF2610Z	TAPPING SCREW, X3
17	GPST2608Z	TAPPING SCREW, X2
18	SDSF3010M	TAPPING SCREW
△ 19	PU60331	POWER TRANSFORMER, T101
△ 20	PQ20438-13	TERMINAL BOARD
21	PQ31171-2-7	D. SHIELD
22	SDST2605Z	TAPPING SCREW, X2
△ 23	SPSP3008Z	SCREW, X2
△ 24	QMP7340-200A	POWER CORD
△ 25	PQ31670-3	TRANS BRACKET
△ 26	QHS3771-108	STRAIN RELIEF
31	PDM2008C	UPPER DRUM ASSY
32	PDM4001A	DRUM SCREW ASSY, X2
33	PDM2053C-11	LOWER DRUM MOTOR ASSY
34	PDM4015A-4	BRUSH ASSY
35	DPSP2606Z	SCREW
△ 41	PQ42385A	CASSETTE MOTOR ASSY
△ DR	PQ42385B	CASSETTE MOTOR ASSY
42	SPSP2603Z	SCREW, X2
43	PQM30003-19	BELT
44	SPSP2604Z	SCREW
45	SPST2605Z	TAPPING SCREW, X2
46	DV710SR223M16	VARIATOR

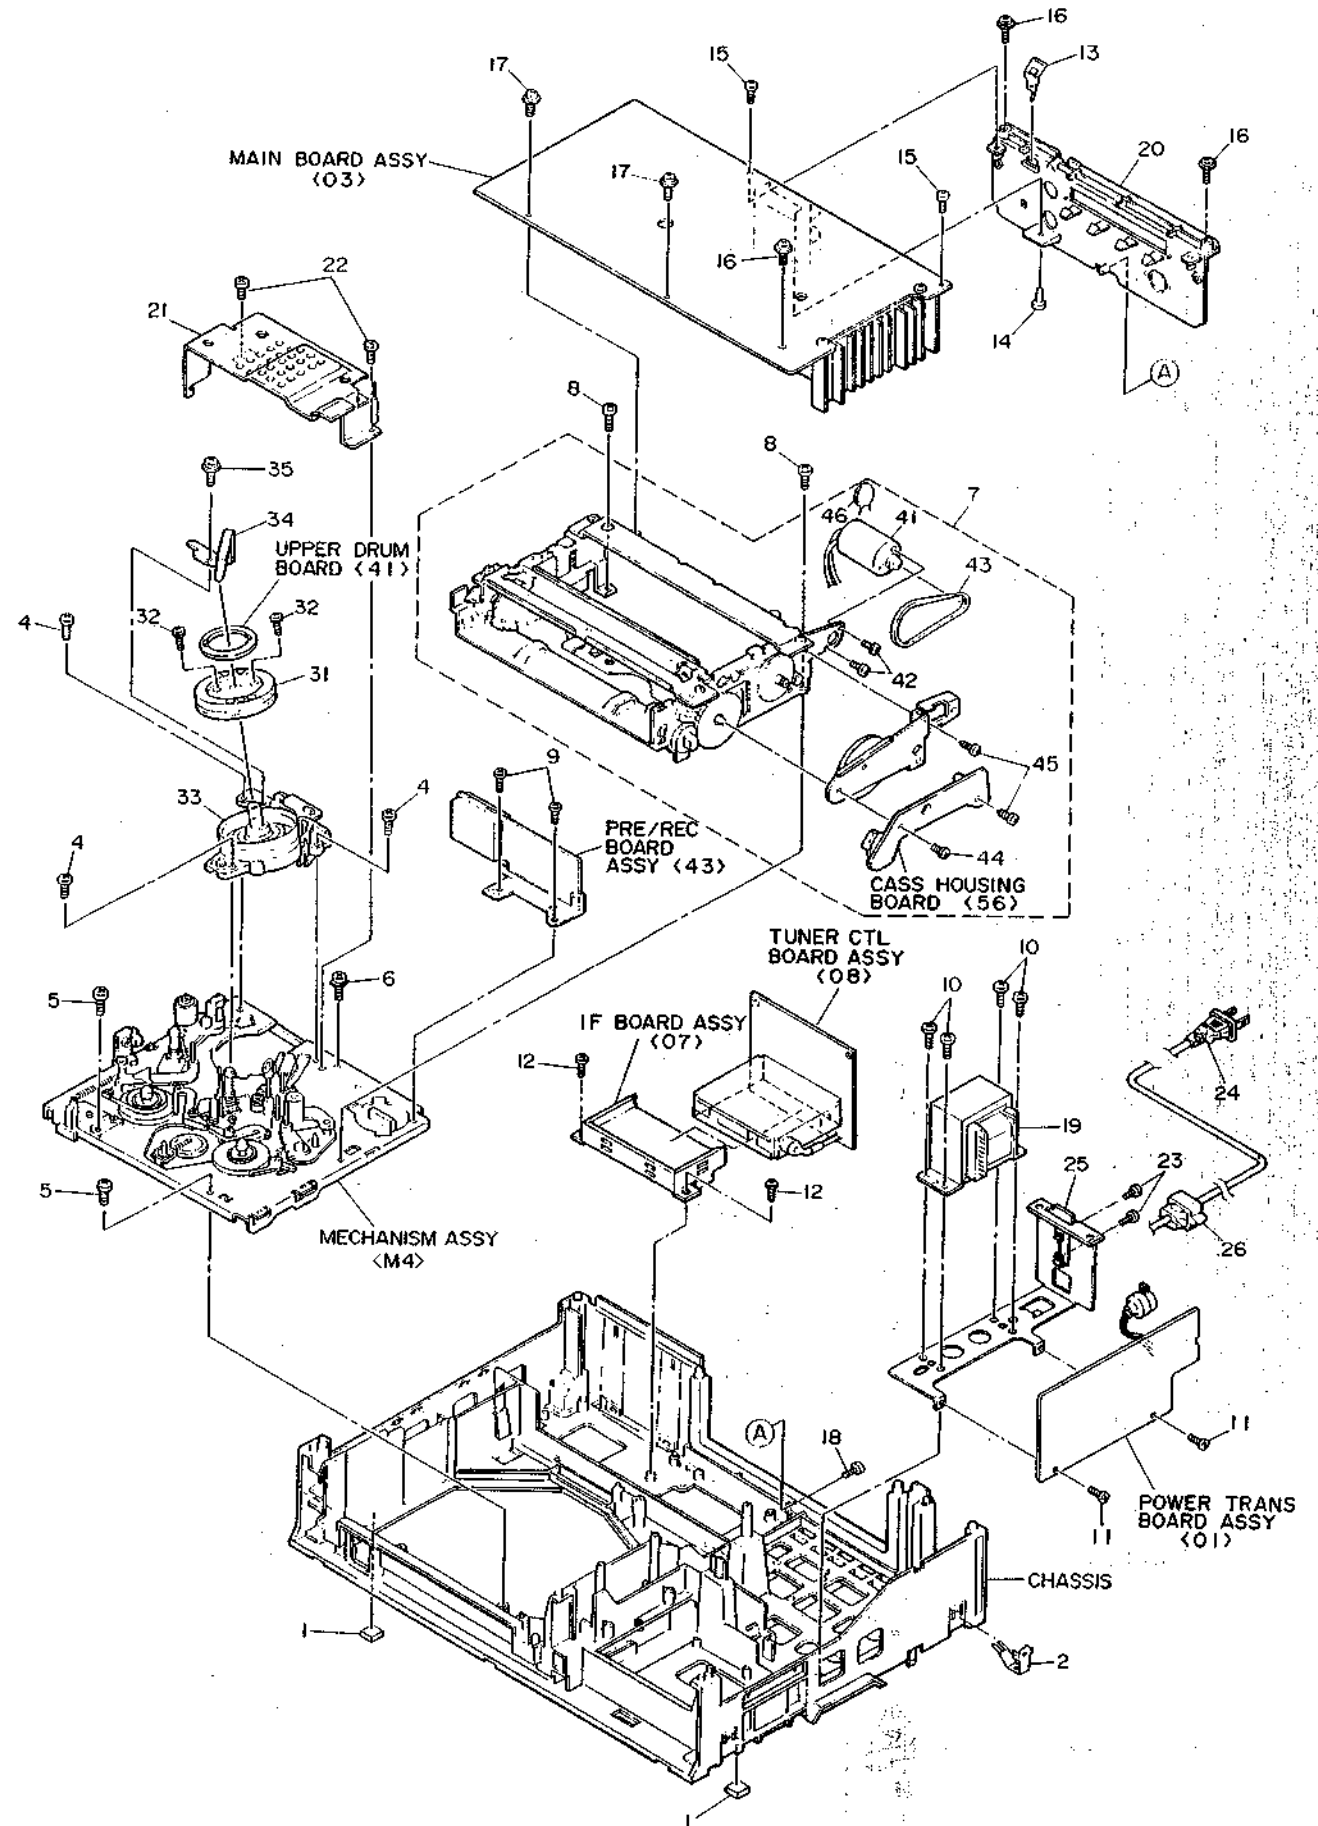

4.4 MECHANISM ASSEMBLY <M4>

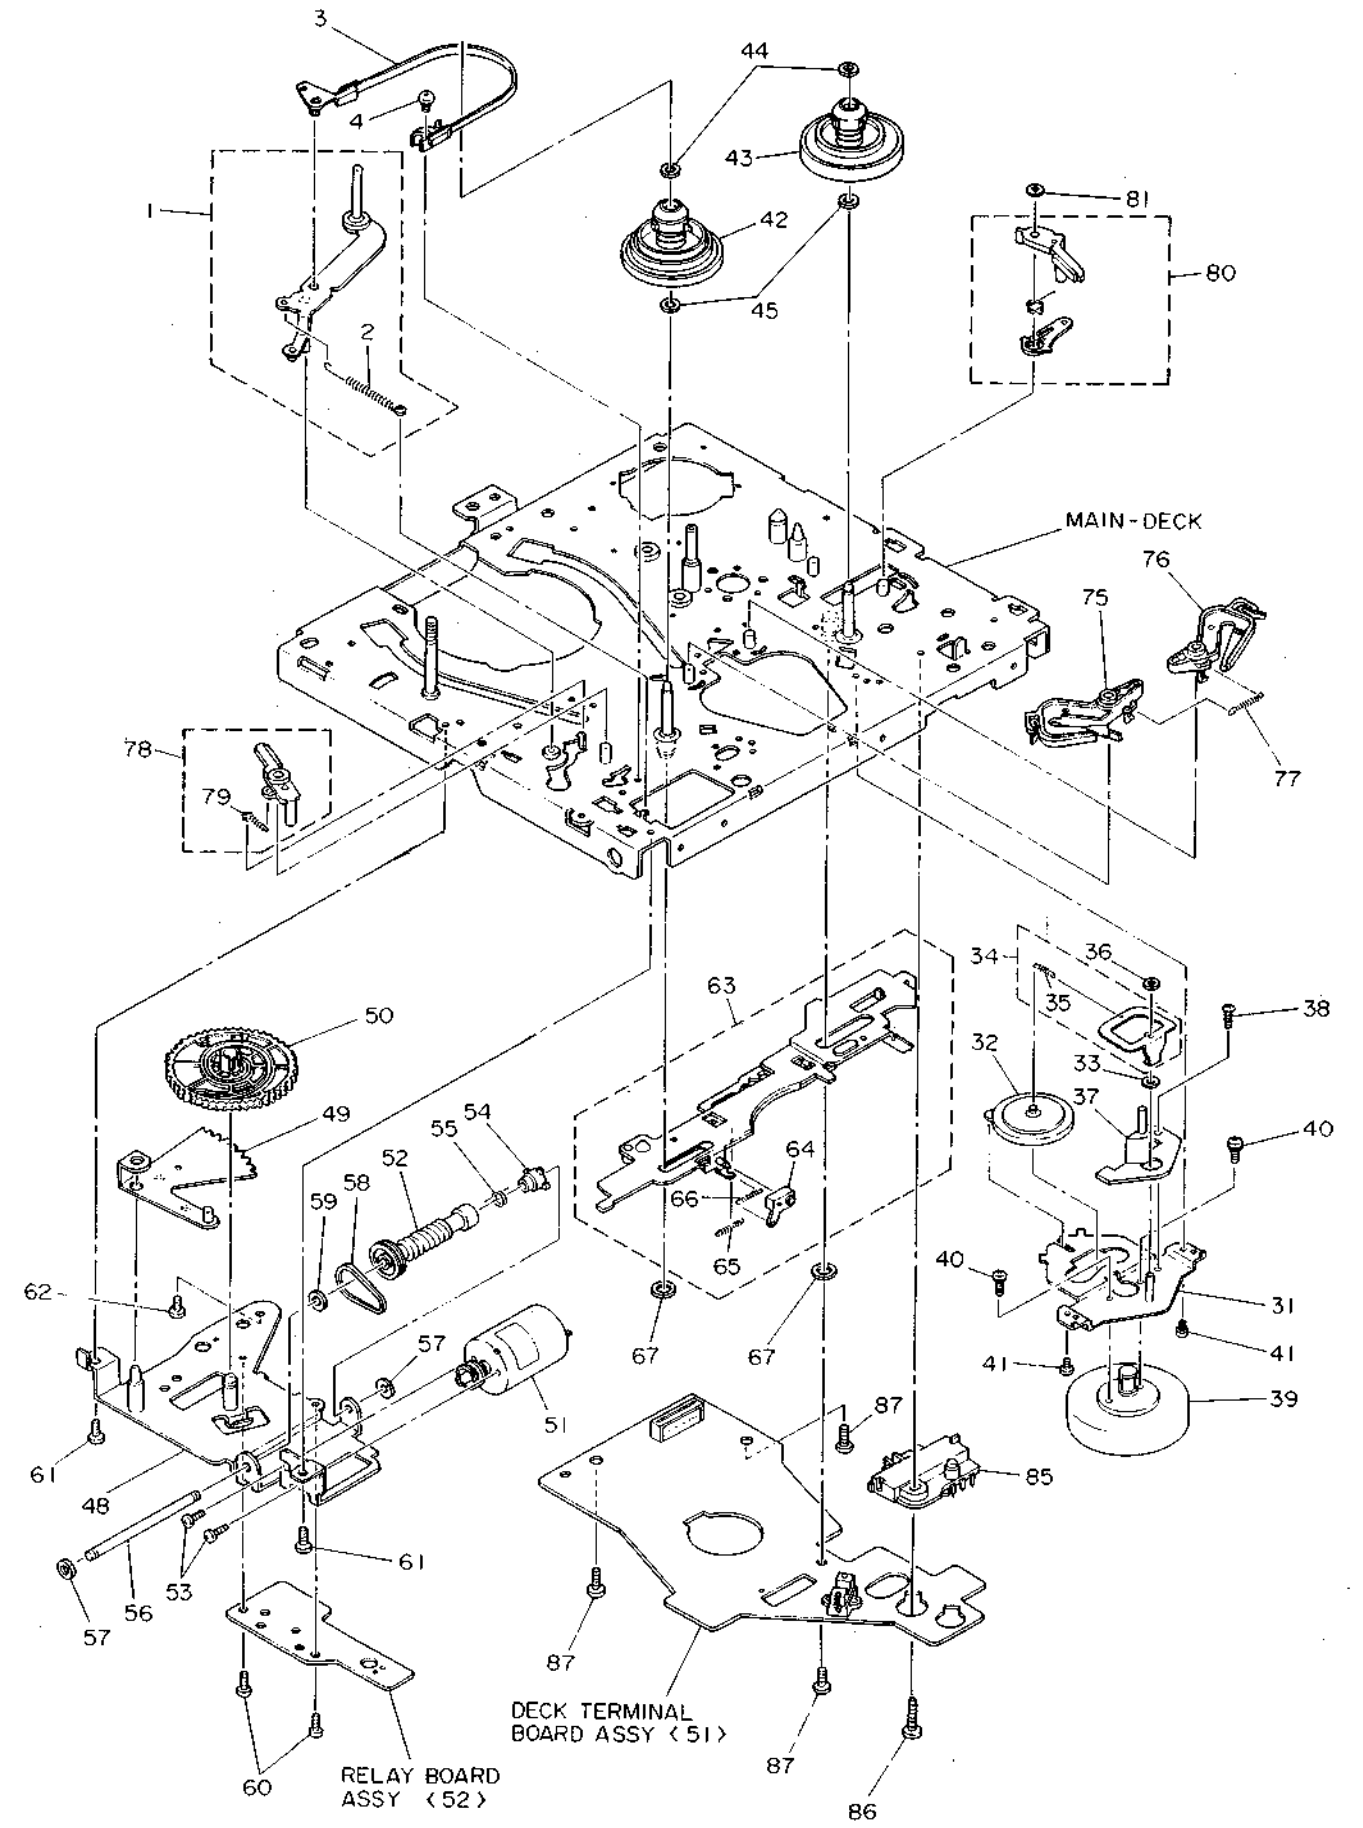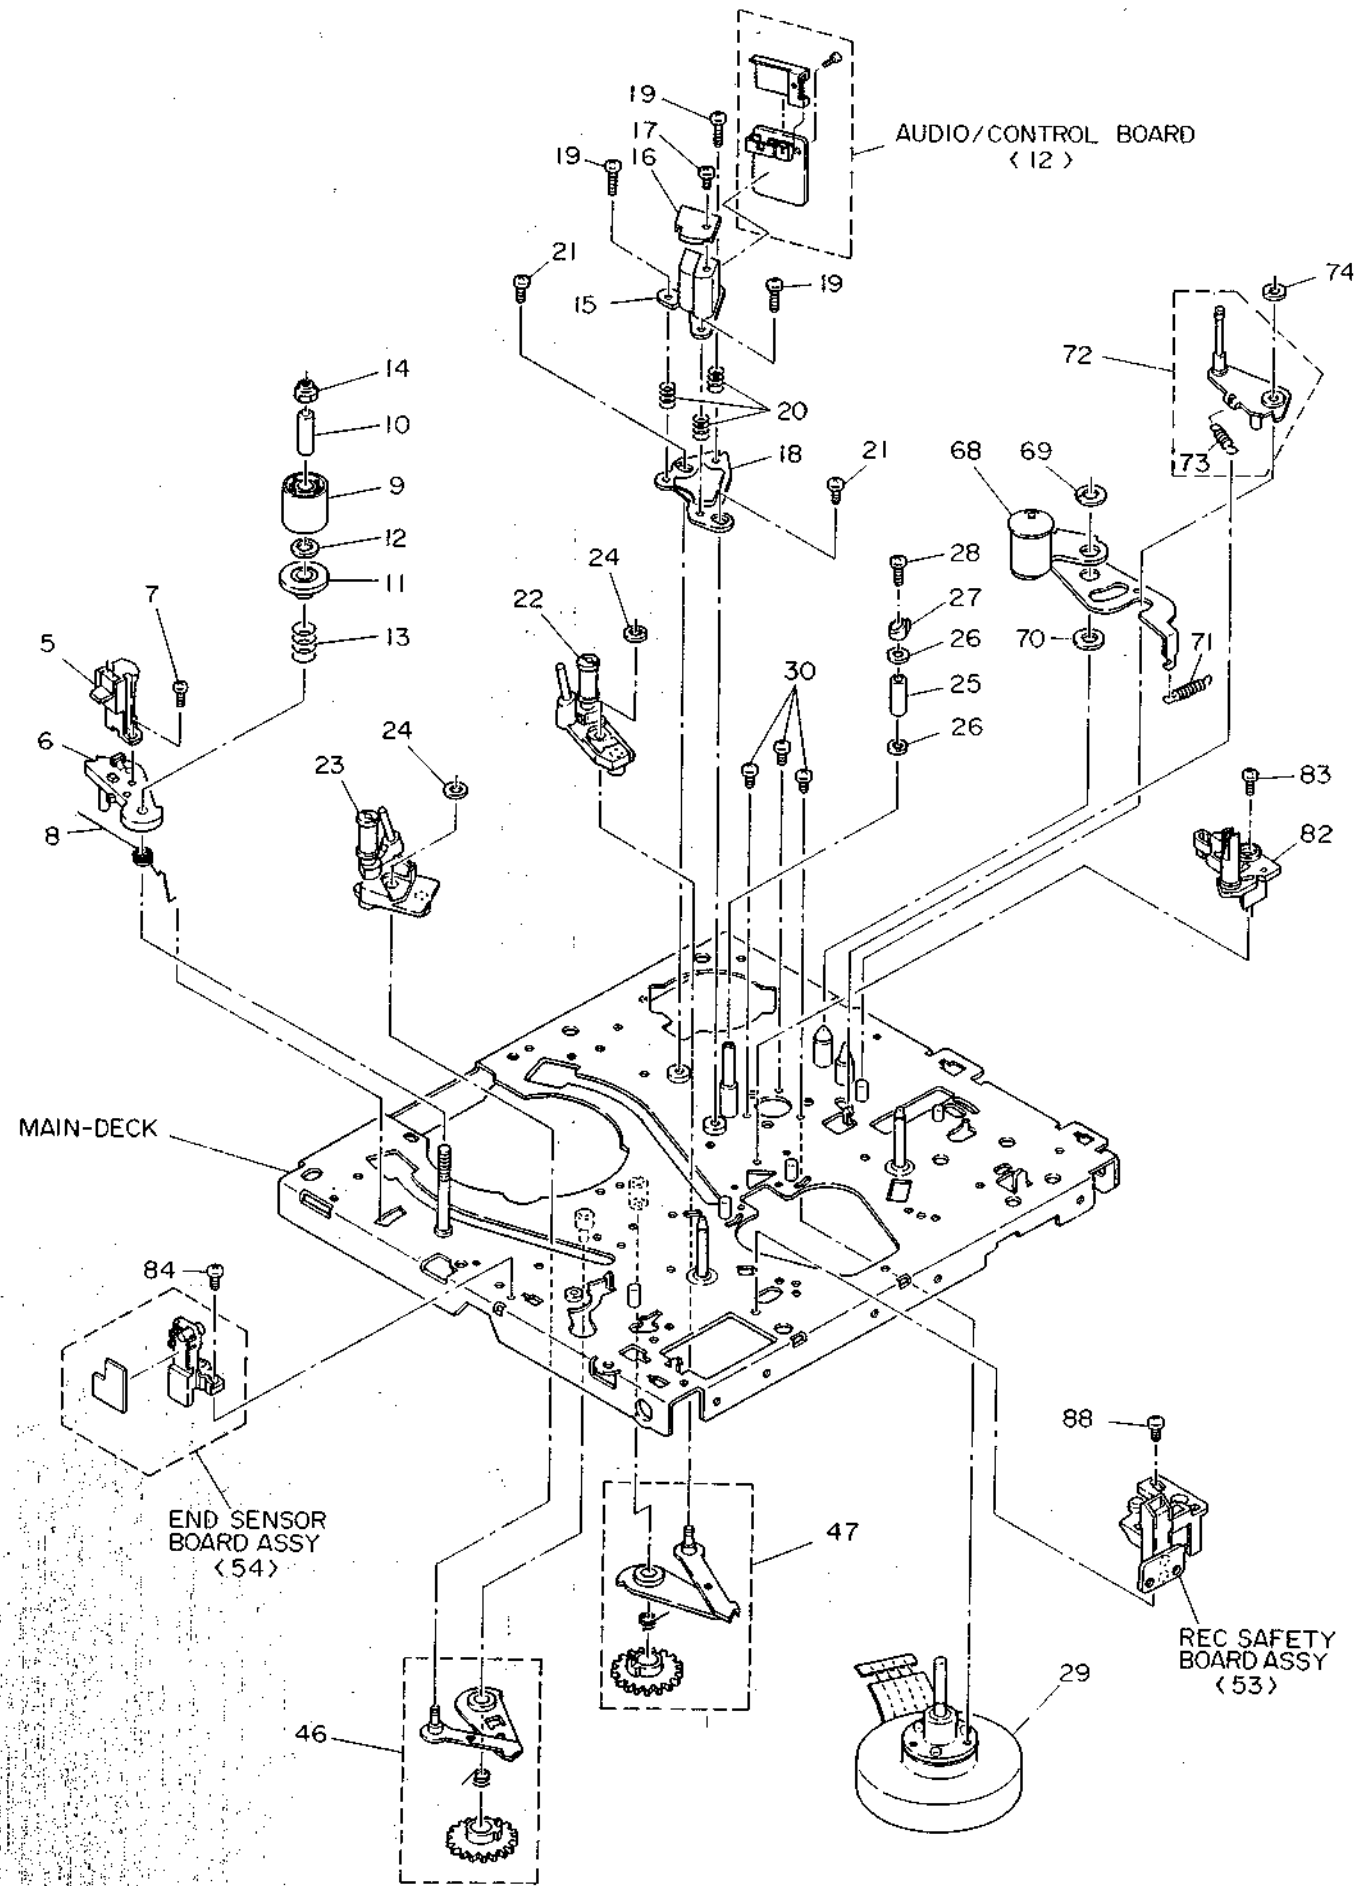


#	REF NO.	PART NO.	PART NAME, DESCRIPTION

* MECHANISM ASSEMBLY <M4> *			

1		PQ41944A-7	TENSION ARM ASSY, INCL. 2
2		PQ41952-3	SPRING
3		PQ41948A	TENSION BAND ASSY
4		SDST2606Z	TAPPING SCREW
5		PUS7641-2	FULL ERASE HEAD
6		PQ31036	FULL ERASE HEAD BASE
7		SPSG2606Z	TAPPING SCREW
8		PQ41954-1-1	TORSION SPRING
9		PQ41955	IMPEDANCE ROLLER
10		PQ41956	COLLAR
11		PQ41957	LOWER FLANGE
	OR	PQ42958	LOWER FLANGE
12		PQM30018-39	SPACER
	OR	PQM30018-50	SPACER
13		PQM30002-124	COMPRESSION SPRING
14		PQ40353	NYLON NUT
15		PUS9253	AUDIO/CONTROL HEAD
16		PUS5535	SHIELD CAP
17		HPSF2015N	SCREW
18		PQ42984-2	HEAD BASE
19		SPSP2608Z	SCREW, X3
20		PUS0080-49	SPRING, X3
21		SDSP2606Z	SCREW, X2
22		PQ41963A-2	POLE BASE ASSY (TU)
	OR	PUS9994	POLE BASE ASSY (TU)
	OR	PQ43148A	POLE BASE ASSY (TU)
23		PQ41969A-2	POLE BASE ASSY (SUP)
	OR	PUS9993	POLE BASE ASSY (SUP)
	OR	PQ43147A	POLE BASE ASSY (SUP)
24		PQM30017-5	SLIT WASHER, X2
25		PUS3629-2	TAPE GUIDE
26		PQ40268-2	GUIDE FLANGE, X2
27		PQ42999-2-1	GUIDE POLE CAP
28		SDSP2006Z	SCREW
△	29	PUS8635V	CAPSTAN MOTOR
	30	SPSP2605N	SCREW, X3
31		PQ41974A-3	REEL MOTOR BRACKET ASSY
32		PUS8645-1-4	IDLER ARM
33		Q03093-834	WASHER
34		PQ41976A-1	SPRING ARM ASSY, INCL. 35
35		PQ42212-1-4	SPRING
36		PQM30017-22	SLIT WASHER
37		PQ41978	HOLDER
38		SPST2606Z	TAPPING SCREW
△	39	PUS8636W	REEL MOTOR
△	OR	PUS8636M	REEL MOTOR
	40	LPSP2604Z	SCREW, X2
41		SPST2606Z	TAPPING SCREW, X2
42		PUS9250-1-2	REEL DISK (SUP)
43		PUS8638-1-2	REEL DISK (TU)
44		PQM30017-5	SLIT WASHER, X2
45		Q03093-828	WASHER, X2
46		PQ41979A-4	LOADING ARM ASSY (SUP)
47		PQ41985B	LOADING ARM ASSY (TU)
48		PQ41992A-1	CAM BRACKET SUB ASSY
49		PQ41994A-2	ARM GEAR ASSY
50		PQ20250-1-1	CONTROL CAM
△	51	PQ41996A	MODE MOTOR ASSY
	52	PQ41998A	WORM ASSY
	53	LPSP2604Z	SCREW, X2

#	REF NO.	PART NO.	PART NAME, DESCRIPTION
54		PQ42001	WINDMILL
55		PQ42002	CLUTCH SPRING
56		PQ42003	WORM SHAFT
57		PQM30017-5	SLIT WASHER, X2
58		PQM30003-20	BELT
59		PQM30018-22	SPACER
60		SPST2606Z	TAPPING SCREW, X2
61		SPST2606Z	TAPPING SCREW, X2
62		SPSP2603Z	SCREW
63		PQ42038A-3	PLATE ASSY, INCL. 64-66
64		PQ31044-1-2	LOCK LEVER
65		PQM30001-191	TENSION SPRING
66		PQM30001-211	TENSION SPRING
67		PQM30017-28	SLIT WASHER, X2
68		PQ42006B	PINCH ROLLER ARM ASSY
69		PQM30017-28	SLIT WASHER
70		Q03093-833	WASHER
71		PQM30001-193	TENSION SPRING
72		PQ42013B-4	GUIDE ARM ASSY, INCL. 73
73		PQ42029	SPRING
74		PQM30017-6	SLIT WASHER
75		PQ42019A-6	MAIN BRAKE ASSY (SUP)
76		PQ42020B	MAIN BRAKE ASSY (TU)
77		PQM30001-216	TENSION SPRING
78		PQ42021A-1	SUB BRAKE ASSY (SUP), INCL. 79
79		PQ42023-1-2	TENSION SPRING
80		PQ42037A-2	SUB BRAKE ASSY (TU)
81		PQM30017-6	SLIT WASHER
82		PUS9925-1-1	LED HOLDER, INCL. LED
83		SPST2606Z	TAPPING SCREW
84		SPST2606Z	TAPPING SCREW
85		PUS8642	SLIDE ENCODER
86		SDSP2610Z	SCREW
87		SDSP2606Z	SCREW, X3
88		SDST2606Z	TAPPING SCREW

4.5 PACKING ASSEMBLY <M1>

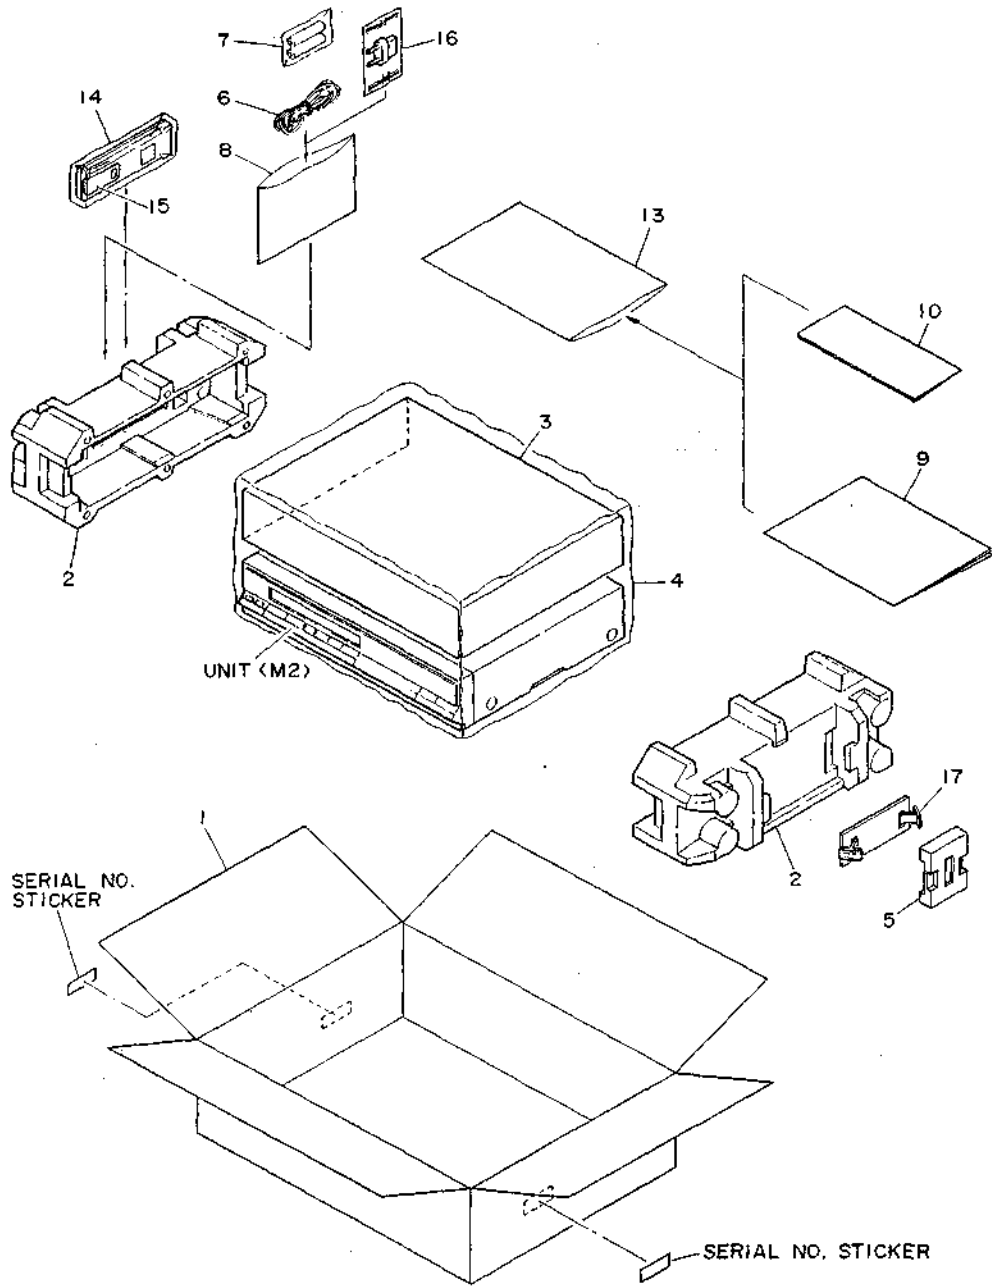

#	REF NO.	PART NO.	PART NAME, DESCRIPTION	#	REF NO.	PART NO.	PART NAME, DESCRIPTION

* PACKING ASSEMBLY <M1> *							

1		PQ32169	PACKING CASE	7		UM-3DJ2P	BATTERY, X2
2		PQ31706A-1	CUSHION ASSY	8		QPGA020-02003	POLY BAG
3		FQ41026-8	PROTECT SHEET	Δ 9		PU30425-948	INSTRUCTIONS
4		PQM30021-59-11	POLY BAG	10		TCN-3379	TAPE CATALOG
5		PQ32196	CUSHION	13		QPGA025-03505	POLY BAG
Δ 6		PU59168-3	CABLE ASSY	Δ 14		PQ10344AE	REMOTE CONTROLLER, INCL. 15
Δ	OR	PU59167-3	CABLE ASSY	15		PQ31323	BATTERY CAP
				Δ 16		QMC0271-001	CONVERSION PLUG
				17		PQ31424A	HANDLE ASSY

SECTION 5 ELECTRICAL PARTS LIST

SAFETY PRECAUTION

Parts identified by the \triangle symbol are critical for safety. Replace only with specified part numbers.

ABBREVIATIONS IN THIS LIST ARE AS FOLLOWS:

RESISTORS—All resistance values are in ohms (Ω), unless otherwise indicated.

k	: 1,000 (Kilo)
M	: 1,000,000 (Mega)
Chip R	: Chip Resistor
Chip VR	: Chip Variable Resistor
Comp. R	: Composition Resistor
CR	: Carbon Film Resistor
FR	: Fusible Resistor
MFR	: Metal Film Resistor
MPR	: Metal Plate Resistor
OMR	: Oxide Metal Film Resistor
PMR	: Precision Metal Film Resistor
UFR	: Unflammable Resistor
VR	: Variable Resistor (Potentiometer)
WR	: Wire Wound Resistor

CAPACITORS—All capacitance values are in μF , unless otherwise indicated.

pF	: $\mu\mu\text{F}$ (Pico farad)
C Cap	: Ceramic Capacitor
Chip Cap	: Chip Capacitor
Chip T Cap	: Chip Tantalum Capacitor
E Cap	: Electrolytic Capacitor
FM Cap	: Film Mica Capacitor
LL Cap	: Low Leak Current Electrolytic Capacitor
MM Cap	: Metalized Mylar Capacitor
MP Cap	: Metalized Paper Capacitor
MY Cap	: Mylar Capacitor
NP Cap	: Non-polar Capacitor
PC Cap	: Polycarbonate Capacitor
PP Cap	: Polypropylene Capacitor
PS Cap	: Polystyrol Capacitor
T Cap	: Tantalum Capacitor
TF Cap	: Thin Film Capacitor
TR Cap	: Trimmer Capacitor


NOTES:

- [M] indicates mechanical symbol number.
- [2 digits] indicates circuit board symbol number.
- "X " indicates quantity per set.

5.1 STANDARD PART NUMBER CODING

5.1.1 Fixed resistor coding

Fixed resistor part numbers are as follows.

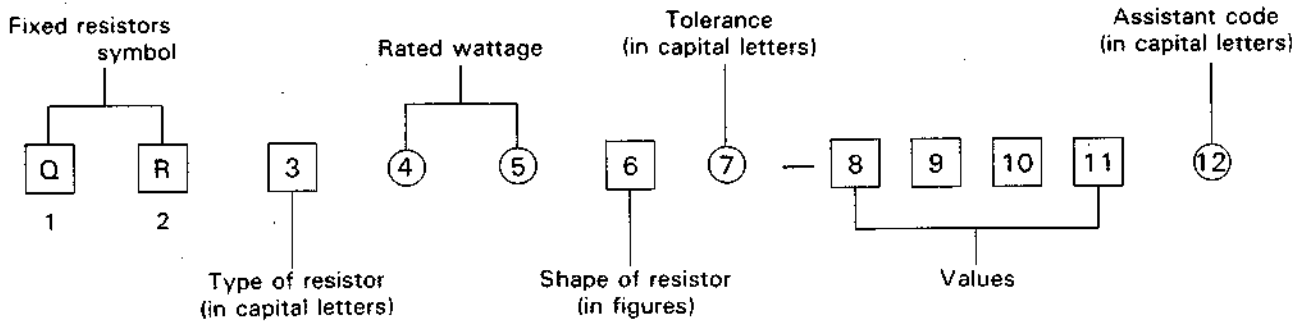

Type of resistor (third digit)	Rated wattage (fourth and fifth digits)	Tolerance (seventh digit)	Assistant code (twelfth digit)
C Composition resistors	A0 1/10 W	F ±1 %	A Small type
D Carbon film resistors	18 1/8 W	G ±2 %	B Small type
F Unflammable resistors	16 1/6 W	J ±5 %	S Small type
G Oxide metal film resistors	14 1/4 W	K ±10 %	Y Lead tapping
H Fusible resistors	12 1/2 W	M ±20 %	Z Lead tapping
M Metal plate resistors	01 1 W		
S Metal glazed resistors	02 2 W		
V Precision metal film resistors	03 3 W		
W Wire wound resistors	04 4 W		
X Metal film resistors	05 5 W		
Z Special resistors	06 6 W		
	07 7 W		
	75 7.5 W		
	08 8 W		
	10 10 W		
	15 15 W		
	A6 16 W		
	20 20 W		
	30 30 W		

Values (eighth – tenth or eleventh digits)	examples:
R47	0.47 Ω
4R7	4.7 Ω
470	47×10^0 47 Ω
471	47×10^1 470 Ω
472	47×10^2 4.7 kΩ
473	47×10^3 47 kΩ
474	47×10^4 470 kΩ
475	47×10^5 4.7 MΩ

QRV resistance shown by four digits:

4640	464×10^0	464 Ω
4641	464×10^1	4.64 kΩ
4642	464×10^2	46.4 kΩ


Shape of resistor (sixth digit)

Note: indicates flame retardant resistor.

Type of resistor Shape of resistor	C	D	F	G	H	M	S	V	W	X
1										
2										
3										
4										
5									(L) type	
6										
7			Lug (B) type							
8			Lug (A) type					Chip		
9			Lug (C) type							

5.1.2 Fixed capacitor coding

Fixed capacitor part numbers are as follows.

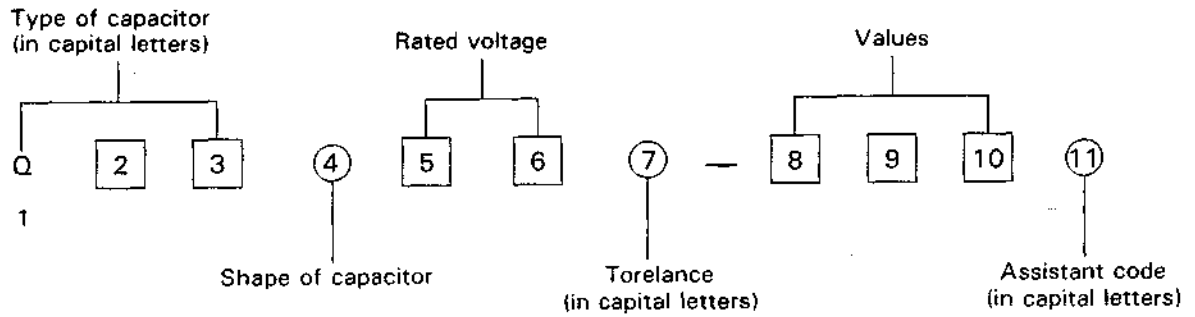

Ceramic capacitors

Type of capacitor (first – third digits)		Shape of capacitor (fourth digit)				
Symbol	Characteristics	Mono-direction	Kink lead	Axial lead	Axial forming lead	Chip
QCC	Ceramic	1		4	5	
QCD	High capacitance					A
QCF	High capacitance	1,4	3			8,A
QCS	Temperature compensation	1	3	4	5	8,A
QCT	Temperature compensation	Special coding				8,A
QCV	Ceramic			1	3	
QCX	Ceramic			1	3	
QCY	High capacitance	1,4	3	6	7	8,A
QCZ	Special type	Special coding				
QCB	Ceramic			B	C	

Electrolytic capacitors

Type of capacitor (first – third digits)		Shape of capacitor (fourth digit)				
Symbol	Characteristics	Tubular	Mono-direction	Anti-stress	Forming	Snap-in
QEB	Low leakage		4	5	6	
QEC	Low leakage		4,8,A	9,B	6,C	
QEE	Tantalum (normal)		4	5	6	
	Tantalum (small)		8			
QEF	Chip tantalum	8 (chip type)				
QEG	Low impedance		4			
QEK	Miniature type		4	5	6	
QEL	Small type		4	5	6	7
QEM	Small type		4,A	5	6	
QEN	Non-polar	2	4	5	6	
QEP	Non-polar (small)		4,A	5,B	6,C	
QER	Miniature type		4	5	6	
QET	Small type	2	4,A	5,B	6,C	7
QEU	Small type		4	5	6	
QEV	Small type		4		6	7
QEW	Normal	2	4	5	6	7

Paper film capacitors

Type of capacitor (first — third digits)		Shape of capacitor (fourth digit)					
		Tubular	Normal		Flame retardant		
Symbol	Characteristics		Mono-direction	Kink lead	Mono-direction	Kink lead	
QFA	Metalized polypropylene				7		
QFE	Metalized mylar				5		
QFF	Film mica		4				
QFG	Polypropylene film		4	8			
QFH	Metalized mylar	2	4	3	5,7	6	
QFJ	Mylar (special)		4				
QFK	Metalized mylar (small)				5		
QFM	Mylar	2	4	3,7	5	6	
QFN	Mylar (small)		4	3			
QFP	Polypropylene		4	3,8			
QFS	Polystyrene	2	4	3			
QFV	Thin film		4	8			
QFZ	Special type	Special coding					

Rated voltage (fifth and sixth digits)

Fifth digit \ Sixth digit	Sixth digit												
	A	B	C	D	E	F	G	H	J	K	V	W	X
0						3.15	4.0		6.3				
1	10		16	20	25		40	50	63	80	35		
2	100	125	160	200	250	315	400	500	630		350	450	600
3	1000	1250		2000				5000					

Tolerance (seventh digit)

A	+100 %	M	± 20 %
	-10 %	N	± 30 %
F	± 1 %	P	+100 %
G	± 2 %		-0 %
H	+50 %	R	+30 %
	-10 %		-10 %
J	± 5 %	X	+40 %
			-20 %
K	± 10 %	Z	+80 %
			-20 %

Values (eighth — tenth digits)

Example : Values are in picofarads


101	10×10^1 pF	100 pF
102	10×10^2 pF	1,000 pF (0.001 μ F)
103	10×10^3 pF	10,000 pF (0.01 μ F)
104	10×10^4 pF	100,000 pF (0.1 μ F)
105	10×10^5 pF	1 μ F
5R0	5.0 pF

Assistant code (eleventh digit)

G	Small size
Z	Lead tapping
Y	Lead tapping

5.1.3 Fuse coding

Standard fuse part numbers are as follows.

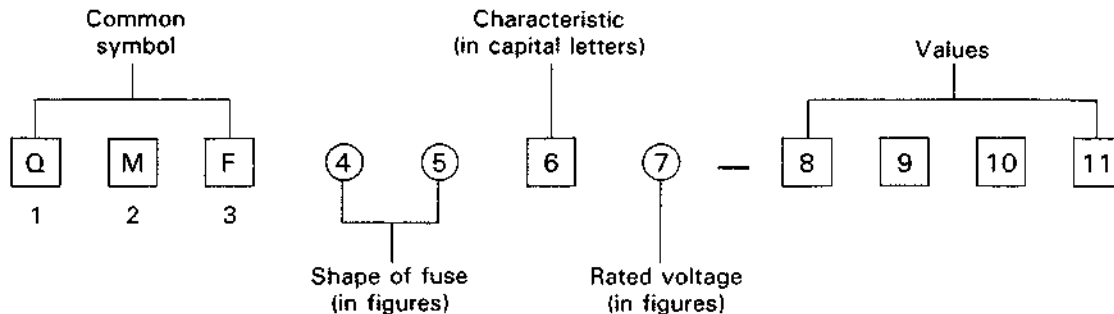

Shape of fuse

(fourth and fifth digits)

51	φ5.2 × 20 mm
60	φ6.4 × 30 mm
61	φ6.35 × 31.8 mm
63	φ6.4 × 30 mm with lead wires
66	φ6.35 × 31.8 mm with lead wires
00	Special type

Rated voltage

(seventh digit)

1	AC125 V
2	AC250 V
3	0.1–1 A : AC250 V 1.25–6.3 A : AC125 V

Values

(eighth-tenth or eleventh digits)

example:

R63	0.63 A
1R0	1.0 A
2R5	2.5 A
100	10 A
R315	0.315 A
1R25	1.25 A

Characteristics (sixth digit)

Symbol	Fusing Current	Fusing Time	Remarks
A	210 %	Within 2 min.	Anti-rush type (for Europe)
	275 %	0.6 – 10 sec.	
	400 %	0.15 – 3 sec.	
	1000 %	0.02 – 0.3 sec.	
B	210 %	Within 30 min.	Regular fusible type (for SEMKO, Europe)
	275 %	0.05 – 2 sec.	
	400 %	0.01 – 0.3 sec.	
C	135 %	Within 1 hr.	Regular fusible type (for UL, Japan)
	200 %	Within 2 min.	
E	210 %	Within 2 min.	Anti-rush type (for Europe)
	275 %	0.6 – 10 sec.	
	400 %	0.15 – 3 sec.	
	1000 %	0.02 – 0.3 sec.	
J	135 %	Within 1 hr.	Anti-rush type
	200 %	Within 2 min.	
M	135 %	Within 1 hr.	Regular fusible type (for UL)
	200 %	Within 2 min.	
R	160 %	Within 1 hr.	Regular fusible type
	200 %	Within 2 min.	
S	160 %	Within 1 hr.	Anti-rush type
	200 %	Within 2 min.	
	700 % – 2000 %	Within 0.01 sec.	
U	135 %	Within 1 hr.	Anti-rush type (for UL)
	200 %	Within 2 min.	
	800 % – 2000 %	Within 0.01 sec.	

#	REF NO.	PART NO.	PART NAME, DESCRIPTION

* POWER TRANSFORMER BOARD ASSEMBLY <01> *			

	PWBA	PB20151A	POWER TRANS BOARD ASSY
	Q1	2SA7200,R,S	TRANSISTOR
D1		11E2	DIODE
	OR	11ES2	DIODE
	OR	1SR35-200A	DIODE
	OR	S5688G	DIODE
	OR	ERA15-02	DIODE
D2		11E2	DIODE
	OR	11ES2	DIODE
	OR	1SR35-200A	DIODE
	OR	S5688G	DIODE
	OR	ERA15-02	DIODE
D3		11E2	DIODE
	OR	11ES2	DIODE
	OR	1SR35-200A	DIODE
	OR	S5688G	DIODE
	OR	ERA15-02	DIODE
D4		11E2	DIODE
	OR	11ES2	DIODE
	OR	1SR35-200A	DIODE
	OR	S5688G	DIODE
	OR	ERA15-02	DIODE
D5		11E2	DIODE
	OR	11ES2	DIODE
	OR	1SR35-200A	DIODE
	OR	S5688G	DIODE
	OR	ERA15-02	DIODE
D6		11E2	DIODE
	OR	11ES2	DIODE
	OR	1SR35-200A	DIODE
	OR	S5688G	DIODE
	OR	ERA15-02	DIODE
D7		11E2	DIODE
	OR	11ES2	DIODE
	OR	1SR35-200A	DIODE
	OR	S5688G	DIODE
	OR	ERA15-02	DIODE
D8		11E2	DIODE
	OR	11ES2	DIODE
	OR	1SR35-200A	DIODE
	OR	S5688G	DIODE
	OR	ERA15-02	DIODE
D9		11E2	DIODE
	OR	11ES2	DIODE
	OR	1SR35-200A	DIODE
	OR	S5688G	DIODE
	OR	ERA15-02	DIODE
D10		11E2	DIODE
	OR	11ES2	DIODE
	OR	1SR35-200A	DIODE
	OR	S5688G	DIODE
	OR	ERA15-02	DIODE
D11		11E2	DIODE
	OR	11ES2	DIODE
	OR	1SR35-200A	DIODE
	OR	S5688G	DIODE
	OR	ERA15-02	DIODE
D12		HZ30-2	ZENER DIODE
DS1		S4VB10-F2	BRIDGE DIODE
R1		QRZ0052-100	F RESISTOR
R2		QRD181J-224	RESISTOR

#	REF NO.	PART NO.	PART NAME, DESCRIPTION
	R3	QRD181J-222	RESISTOR
	R4	QRD181J-822	RESISTOR
	R5	QRZ0052-221	F RESISTOR
	R6	QRD181J-121	RESISTOR
	C1	QETB1EM-228	E CAPACITOR
	C2	QETB1EM-228	E CAPACITOR
	C3	QETB1CM-478	E CAPACITOR
	C4	QETB1JM-107	E CAPACITOR
	C5	QETB1JM-107	E CAPACITOR
	C6	QETC1VM-106	E CAPACITOR
	C7	QETC1HM-226	E CAPACITOR
	C9	QFK52AK-473	M CAPACITOR
	C101	QCZ9016-472P	CAPACITOR
	S101	QSR0074-016	VOLTAGE SELECTOR
	HD	PUS7505	FUSE CLIP, X6 (FOR F1-F3)
	A01	PQ40910	VOL.SEL.COVER
	TAB1	A74316	TAB,X2
	CN1	PUS9555-6	CAP HOUSING
	CN2	PUS9555-6	CAP HOUSING
	F1	QMF51E2-R80	FUSE, DOES NOT INCLUDE,
	F2	QMF51E2-2R0	FUSE, "
	F3	QMF51E2-R80	FUSE, "

* MAIN BOARD ASSEMBLY <03> & <44> *			

	PWBA	PB10084A-01	MAIN BOARD ASSY
	RF1	PU60416	RF CONV & MIXER
	RV1	PUS2105	PLASTIC RIVET,X2
	TB1	PU60415A	CONNECTOR BOARD
	WR1	PW30112-N0AF6AF	PARALLEL WIRE
	WR2	PW30401-AB22T	COAXIAL CORD, FOR RF CONV.
-AUDIO SECTION-			
	IC1	BA7751ALS	IC
	Q1	2SC1740S(RS)	TRANSISTOR
	Q3	2SC1740S(RS)	TRANSISTOR
	Q5	2SC1740S(RS)	TRANSISTOR
	Q6	DTA124ES	TRANSISTOR
	Q7	DTA114ES	TRANSISTOR
	Q8	2SC1740S(RS)	TRANSISTOR
	Q9	2SC1740S(RS)	TRANSISTOR
	Q10	2SC1740S(RS)	TRANSISTOR
	Q11	DTA114ES	TRANSISTOR
	Q12	DTA114ES	TRANSISTOR
	Q13	2SD1450S,T	TRANSISTOR
	Q14	DTC124ES	TRANSISTOR
	D1	1SS133	DIODE
	OR	MA165	DIODE
	D2	1SS133	DIODE
	OR	MA165	DIODE

#REF NO. PART NO. PART NAME, DESCRIPTION

R1	QRD161J-473	RESISTOR
R2	QRD161J-152	RESISTOR
R3	QRD161J-222	RESISTOR
R6	QRD161J-471	RESISTOR
R7	QRD161J-103	RESISTOR
R8	QRD161J-152	RESISTOR
R9	QRD161J-222	RESISTOR
R13	QRD161J-223	RESISTOR
R14	QRD161J-102	RESISTOR
R15	QRD161J-223	RESISTOR
R16	QRD161J-102	RESISTOR
R17	QRD161J-102	RESISTOR
R20	QRD161J-103	RESISTOR
R21	QRD161J-333	RESISTOR
R22	QRD161J-102	RESISTOR
R23	QRD161J-223	RESISTOR
R25	QRD161J-223	RESISTOR
R26	QRD161J-100	RESISTOR
R27	QRD161J-470	RESISTOR
R28	QRD161J-393	RESISTOR
R29	QRD161J-221	RESISTOR
R30	QRD161J-224	RESISTOR
R31	QRD161J-123	RESISTOR
R33	QVZ3518-103	V RESISTOR,PB LEVEL
R34	QRD161J-103	RESISTOR
R35	QRD161J-122	RESISTOR
R36	QRD161J-472	RESISTOR
R37	QRD161J-393	RESISTOR
R38	QRD161J-183	RESISTOR
R39	QRD161J-821	RESISTOR
R40	QRD161J-121	RESISTOR
R41	QVZ3518-473	V RESISTOR,BIAS ADJ
R42	QRD161J-333	RESISTOR
R43	QRD161J-150	RESISTOR
R44	QRD161J-104	RESISTOR
R45	QRD161J-8R2	RESISTOR
C1	QETB1CM-336	E CAPACITOR
C2	QETC1HM-105	E CAPACITOR
C3	QCC11EJ-682	CAPACITOR
C4	QETC1CM-336	E CAPACITOR
C5	QETC1EM-475	E CAPACITOR
C7	QCB81HJ-102	CAPACITOR
C8	QEB51HM-105	E CAPACITOR
C9	QETC1CM-106	E CAPACITOR
C10	QCC11EJ-103	CAPACITOR
C11	QETC1HM-105	E CAPACITOR
C12	QETC1HM-105	E CAPACITOR
C13	QETC1CM-226	E CAPACITOR
C14	QETC1HM-225	E CAPACITOR
C15	QETC1HM-105	E CAPACITOR
C16	QETC1CM-106	E CAPACITOR
C18	QFV71HJ-273	M CAPACITOR
C19	QCB81HJ-331	CAPACITOR
C20	QFV71HJ-683	M CAPACITOR
C21	QETC1CM-106	E CAPACITOR
C22	QCC11EJ-472	CAPACITOR
C23	QCC11EJ-103	CAPACITOR
C24	QCC11EK-272	CAPACITOR
C25	QETC1CM-106	E CAPACITOR
C26	QETC1CM-336	E CAPACITOR
C27	QCVB1CN-103	CAPACITOR
C28	QCB81HJ-102	CAPACITOR
L1	PU58308-822J	PEAKING COIL
L2	PU59152-3R9K	PEAKING COIL

#REF NO. PART NO. PART NAME, DESCRIPTION

T1	PU60017-2	OSC TRANS
TP	PU57545	TEST PIN,X3
-LUMINANCE SECTION-		
IC101	PB20166C	Y MODULE BOARD ASSY
IC102	MSM6967RS	IC
Q101	2SC1740S(RS)	TRANSISTOR
Q102	2SC1740S(RS)	TRANSISTOR
Q103	2SA1309R,S	TRANSISTOR
Q104	2SC1740S(RS)	TRANSISTOR
Q105	2SC1740S(RS)	TRANSISTOR
Q106	2SA1309R,S	TRANSISTOR
Q107	2SA1309R,S	TRANSISTOR
Q110	DTC144WS	TRANSISTOR
Q111	DTC124ES	TRANSISTOR
Q113	DTC114YS	TRANSISTOR
Q114	DTC144ES	TRANSISTOR
D101	1SS133	DIODE
	OR MA165	DIODE
D102	1SS133	DIODE
	OR MA165	DIODE
D103	1SS133	DIODE
	OR MA165	DIODE
D104	RD9.1ESB2	ZENER DIODE
D105	1SS133	DIODE
	OR MA165	DIODE
D106	1SS133	DIODE
	OR MA165	DIODE
D110	1SS133	DIODE
	OR MA165	DIODE
D111	MA27W(A)	DIODE
D112	1SS133	DIODE
	OR MA165	DIODE
D113	1SS292	DIODE
R101	QRD161J-103	RESISTOR
R102	QRD161J-102	RESISTOR
R103	QRD161J-333	RESISTOR
R104	QRD161J-333	RESISTOR
R105	QRD161J-102	RESISTOR
R108	QRD161J-391	RESISTOR
R109	QRD161J-561	RESISTOR
R110	QRD161J-333	RESISTOR
R111	QRD161J-102	RESISTOR
R112	QVZ3518-222	V RESISTOR,YNR NC BAL
R113	QRD161J-222	RESISTOR
R114	QRD161J-102	RESISTOR
R115	QRD161J-181	RESISTOR
R116	QRD161J-750	RESISTOR
R117	QRD161J-102	RESISTOR
R119	QRD121J-391	RESISTOR
R120	QRD161J-333	RESISTOR
R121	QRD161J-102	RESISTOR
R122	QRD161J-333	RESISTOR
R123	QRD161J-561	RESISTOR
R124	QRD161J-101	RESISTOR
R127	QVZ3518-332	V RESISTOR,PB FREQ RESPONSE
R128	QRD161J-102	RESISTOR
R129	QRD161J-102	RESISTOR
R130	QRD161J-222	RESISTOR
R133	QRD161J-563	RESISTOR
R134	QRD161J-750	RESISTOR
R138	QRD161J-104	RESISTOR
R139	QRD161J-124	RESISTOR

#△	REF NO.	PART NO.	PART NAME, DESCRIPTION
R141		QRD161J-122	RESISTOR
R142		QRD161J-681	RESISTOR
R143		QRD161J-331	RESISTOR
R144		QRD161J-472	RESISTOR
R147		QRD161J-562	RESISTOR
R148		QRD161J-223	RESISTOR
R149		QRD161J-103	RESISTOR
R150		QRD161J-222	RESISTOR
R152		QRD161J-101	RESISTOR
R153		QRD161J-682	RESISTOR
R154		QRD161J-222	RESISTOR
R155		QRD161J-681	RESISTOR
R160		QRD161J-221	RESISTOR
R161		QRD161J-153	RESISTOR
R162		QRD161J-221	RESISTOR
R163		QRD161J-222	RESISTOR
R164		QRD162J-394	RESISTOR
R165		QRD161J-103	RESISTOR
C101		QCSB1HJ-220	CAPACITOR
C102		QETC1AM-2262N	E CAPACITOR
	OR	QETC1AM-226	E CAPACITOR
C103		QETC1HM-335	E CAPACITOR
C104		QCVB1CN-103	CAPACITOR
C105		QCBB1HJ-121	CAPACITOR
C106		QCBB1HJ-121	CAPACITOR
C108		QEN61HM-225	NP E CAPACITOR
C109		QETC1EM-4752N	E CAPACITOR
	OR	QETC1EM-475	E CAPACITOR
C110		QCSB1HJ-120	CAPACITOR
C111		QETC1HM-1042N	E CAPACITOR
	OR	QETC1HM-104	E CAPACITOR
C112		QETC1EM-4752N	E CAPACITOR
	OR	QETC1EM-475	E CAPACITOR
C113		QCVB1CN-103	CAPACITOR
C114		QCVB1CN-103	CAPACITOR
C115		QCVB1CN-103	CAPACITOR
C116		QETCOJM-4762N	E CAPACITOR
	OR	QETCOJM-476	E CAPACITOR
C117		QETC1AM-4762N	E CAPACITOR
	OR	QETC1AM-476	E CAPACITOR
C118		QCVB1CN-103	CAPACITOR
C120		QCVB1CN-103	CAPACITOR
C121		QETB1CM-106	E CAPACITOR
C122		QETC1HM-224	E CAPACITOR
C123		QETC1EM-3352N	E CAPACITOR
	OR	QETC1EM-335	E CAPACITOR
C124		QETCOJM-337	E CAPACITOR
C125		QEN61EM-335	NP E CAPACITOR
C126		QCVB1CN-103	CAPACITOR
C127		QCVB1CN-103	CAPACITOR
C128		QCSB1HJ-470	CAPACITOR
C129		QETCOJM-4762N	E CAPACITOR
	OR	QETCOJM-476	E CAPACITOR
C130		QCVB1CN-103	CAPACITOR
C131		QETCOJM-4772N	E CAPACITOR
	OR	QETCOJM-477	E CAPACITOR
C132		QETCOJM-4762N	E CAPACITOR
	OR	QETCOJM-476	E CAPACITOR
C133		QCVB1CN-103	CAPACITOR
C134		QETC1EM-4762N	E CAPACITOR
	OR	QETC1EM-476	E CAPACITOR
C135		QCBB1HJ-102	CAPACITOR
C136		QCBB1HJ-102	CAPACITOR
C137		QETC1EM-4752N	E CAPACITOR
	OR	QETC1EM-475	E CAPACITOR
C138		QCSB1HK-6R8	CAPACITOR
C139		QETCOJM-4762N	E CAPACITOR
	OR	QETCOJM-476	E CAPACITOR

#△	REF NO.	PART NO.	PART NAME, DESCRIPTION
C140		QCVB1CN-103	CAPACITOR
C141		QCVB1CN-103	CAPACITOR
C142		QCVB1CN-103	CAPACITOR
C143		QCF11HP-103	CAPACITOR
C145		QCSB1HJ-120	CAPACITOR
C146		QCBB1HJ-151	CAPACITOR
C147		QCC11EK-104	CAPACITOR
C148		QCVB1CN-103	CAPACITOR
C149		QEN61AM-226	NP E CAPACITOR
C150		QETC1EM-475	E CAPACITOR
C152		QCSB1HJ-120	CAPACITOR
C153		QCBB1HJ-102	CAPACITOR
C154		QCBB1HJ-102	CAPACITOR
C155		QCBB1HJ-102	CAPACITOR
C156		QEN40JM-336	NP E CAPACITOR
L101		PU59152-121J	PEAKING COIL
L102		PU59152-221J	PEAKING COIL
L103		PU59152-560J	PEAKING COIL
L105		PU59152-101J	PEAKING COIL
L106		PU48530-101K	PEAKING COIL
L107		PU48530-101K	PEAKING COIL
L108		PU59152-680J	PEAKING COIL
L109		PU48530-101K	PEAKING COIL
L110		PU59152-180J	PEAKING COIL
L111		PU48530-101K	PEAKING COIL
L112		PU48530-101K	PEAKING COIL
L113		PU48530-101K	PEAKING COIL
L114		PU59152-101J	PEAKING COIL
L118		PU53618-R47D	PEAKING COIL
EQ101		PU60162	EQUALIZER
EQ102		PU54838	EQUALIZER
LPF101		PU60161	LOW PASS FILTER
LPF102		PU58021-2	LOW PASS FILTER
SLD101		PU60147	SHIELD CASE(1)
SLD102		PU60148	SHIELD CASE(2)
SLD103		PU60149	SHIELD CASE(3)
TP		PU57545	TEST PIN,X4
-VIDEO SUB BOARD SECTION-			
PWBA		PB40016A	VIDEO SUB BOARD ASSY
IC103		TA7374P	IC
Q112		2SC2021R,S	TRANSISTOR
R158		QRD162J-102	RESISTOR
R159		QRD162J-332	RESISTOR
L115		PU59152-3R3K	PEAKING COIL
L116		PU59152-150J	PEAKING COIL
L117		PU59152-120J	PEAKING COIL
TML1		PU59935-09	TERMINAL,JP101
-COLOR SECTION-			
△ IC201		PU22046A	C.MODULE BOARD ASSY
Q201		DTC144ES	TRANSISTOR
Q202		DTC144ES	TRANSISTOR
Q203		2SC1740S(RS)	TRANSISTOR
Q204		2SC1740S(RS)	TRANSISTOR
Q205		2SC1740S(RS)	TRANSISTOR
Q206		DTC124ES	TRANSISTOR
Q207		2SC1740S(RS)	TRANSISTOR

#	REF NO.	PART NO.	PART NAME, DESCRIPTION
	Q209	DTC144ES	TRANSISTOR
	Q210	DTC144ES	TRANSISTOR
	Q212	DTC144ES	TRANSISTOR
	Q213	2SC1740S(RS)	TRANSISTOR
	Q214	2SC1740S(RS)	TRANSISTOR
	Q252	2SC1740S(RS)	TRANSISTOR
	Q301	DTC144WS	TRANSISTOR
	Q302	2SA1309R,S	TRANSISTOR
	Q303	2SA1309R,S	TRANSISTOR
	Q304	DTC144WS	TRANSISTOR
	D201	1SS133	DIODE
	OR	MA165	DIODE
	D202	1SS133	DIODE
	OR	MA165	DIODE
	D203	1SS133	DIODE
	OR	MA165	DIODE
	D204	1SS133	DIODE
	OR	MA165	DIODE
	D205	1SS133	DIODE
	OR	MA165	DIODE
	D206	1SS133	DIODE
	OR	MA165	DIODE
	D207	1SS133	DIODE
	OR	MA165	DIODE
	D208	1SS133	DIODE
	OR	MA165	DIODE
	D251	1SS133	DIODE
	D252	1SS133	DIODE
	D253	1SS133	DIODE
	D254	1SS133	DIODE
	D255	1SS133	DIODE
	D256	1SS133	DIODE
	D257	1SS133	DIODE
	D301	1SS133	DIODE
	OR	MA165	DIODE
	D302	1SS133	DIODE
	D303	1SS133	DIODE
	R201	QRD161J-222	RESISTOR
	R202	QRD161J-122	RESISTOR
	R203	QRD161J-103	RESISTOR
	R204	QRD161J-103	RESISTOR
	R205	QRD161J-223	RESISTOR
	R206	QRD161J-103	RESISTOR
	R207	QVZ3518-223	V RESISTOR,VXO
	R208	QRD161J-274	RESISTOR
	R209	QRD161J-472	RESISTOR
	R210	QRD161J-102	RESISTOR
	R211	QRD161J-681	RESISTOR
	R214	QVZ3518-331	V RESISTOR,REC COLOR LEVEL
	R215	QRD161J-153	RESISTOR
	R216	QRD161J-222	RESISTOR
	R217	QRD161J-102	RESISTOR
	R218	QRD161J-102	RESISTOR
	R219	QRD161J-103	RESISTOR
	R220	QRD161J-103	RESISTOR
	R221	QRD161J-272	RESISTOR
	R222	QRD161J-681	RESISTOR
	R223	QRD161J-473	RESISTOR
	R224	QRD161J-102	RESISTOR
	R225	QRD161J-102	RESISTOR
	R226	QRD161J-391	RESISTOR
	R227	QRD161J-221	RESISTOR
	R228	QRD162J-682	RESISTOR
	R229	QRD162J-123	RESISTOR
	R230	QRD161J-561	RESISTOR

#	REF NO.	PART NO.	PART NAME, DESCRIPTION
	R231	QRD161J-271	RESISTOR
	R232	QRD162J-562	RESISTOR
	R233	QRD161J-104	RESISTOR
	R234	QRD161J-682	RESISTOR
	R235	QRD161J-122	RESISTOR
	R236	QRD161J-393	RESISTOR
	R237	QRD161J-103	RESISTOR
	R238	QRD161J-103	RESISTOR
	R239	QRD161J-102	RESISTOR
	R240	QRD161J-471	RESISTOR
	R241	QRD161J-152	RESISTOR
	R242	QRD161J-223	RESISTOR
	R243	QRD161J-682	RESISTOR
	R244	QRD161J-102	RESISTOR
	R245	QRD161J-181	RESISTOR
	R246	QRD161J-391	RESISTOR
	R247	QRD161J-331	RESISTOR
	R248	QRD161J-122	RESISTOR
	R249	QRD161J-222	RESISTOR
	R262	QRD161J-393	RESISTOR
	R263	QRD161J-223	RESISTOR
	R264	QRD161J-333	RESISTOR
	R265	QRD161J-822	RESISTOR
	R301	QRD161J-103	RESISTOR
	R304	QRD161J-393	RESISTOR
	R305	QRD161J-682	RESISTOR
	R306	QRD161J-393	RESISTOR
	R307	QRD161J-682	RESISTOR
	R308	QRD161J-103	RESISTOR
	R309	QRD161J-562	RESISTOR
	C201	QETC1CM-106ZN	E CAPACITOR
	OR	QETC1CM-106	E CAPACITOR
	C202	QCVB1CN-103	CAPACITOR
	C203	QFN31HJ-273	M CAPACITOR
	C204	QCT25CH-220	CAPACITOR
	C205	QFN31HJ-223	M CAPACITOR
	C206	QETC1HM-105ZN	E CAPACITOR
	OR	QETC1HM-105	E CAPACITOR
	C207	QCVB1CN-103	CAPACITOR
	C208	QCSB1HJ-470	CAPACITOR
	C209	QFN31HJ-473	M CAPACITOR
	C210	QCB81HJ-102	CAPACITOR
	C211	QCVB1CN-103	CAPACITOR
	C212	QCB81HJ-820	CAPACITOR
	C213	QETC1HM-225ZN	E CAPACITOR
	OR	QETC1HM-225	E CAPACITOR
	C214	QETC1CM-106ZN	E CAPACITOR
	OR	QETC1CM-106	E CAPACITOR
	C215	QFN31HJ-563	M CAPACITOR
	C216	QFN31HJ-224	M CAPACITOR
	C217	QETC1CM-106ZN	E CAPACITOR
	OR	QETC1CM-106	E CAPACITOR
	C218	QFN31HJ-103	M CAPACITOR
	C219	QFN31HJ-104	M CAPACITOR
	C220	QCVB1CN-103	CAPACITOR
	C221	QETC1EM-335ZN	E CAPACITOR
	OR	QETC1EM-335	E CAPACITOR
	C222	QFN31HJ-563	M CAPACITOR
	C223	QCVB1CN-103	CAPACITOR
	C224	QETC1EM-475ZN	E CAPACITOR
	OR	QETC1EM-475	E CAPACITOR
	C225	QETCOJM-107	E CAPACITOR
	C226	QCVB1CN-103	CAPACITOR
	C227	QCB81HJ-101	CAPACITOR
	C229	QETC1HM-105ZN	E CAPACITOR
	OR	QETC1HM-105	E CAPACITOR
	C230	QETC1EM-475ZN	E CAPACITOR

#	REF NO.	PART NO.	PART NAME, DESCRIPTION
		OR QETC1EM-475	E CAPACITOR
C231		QETC1EM-475ZM	E CAPACITOR
		OR QETC1EM-475	E CAPACITOR
C232		QCVB1CN-103	CAPACITOR
C233		QCBB1HJ-102	CAPACITOR
C234		QETCOJM-476ZM	E CAPACITOR
		OR QETCOJM-476	E CAPACITOR
C235		QCVB1CN-103	CAPACITOR
C236		QCSB1HK-5R6	CAPACITOR
C237		QCVB1CN-103	CAPACITOR
C238		QCVB1CN-103	CAPACITOR
C259		QCBB1HJ-102	CAPACITOR
L201		PU48530-101K	PEAKING COIL
L202		PU48530-271J	PEAKING COIL
L203		PU48530-222J	PEAKING COIL
L204		PU59153-822J	PEAKING COIL
L205		PU59153-101K	PEAKING COIL
L206		PU59152-150J	PEAKING COIL
L207		PU48530-101J	PEAKING COIL
L208		PU59152-820J	PEAKING COIL
L301		PU48530-101K	PEAKING COIL
EQ201		PU53501-6	EQUALIZER
LPF201		PU58705	LOW PASS FILTER
LPF202		PU54988	LOW PASS FILTER
BPF201		PU57072	BAND PASS FILTER
BPF202		PU54410-2	BAND PASS FILTER
DL201		PU58971-2	2H DELAY LINE
		OR PU59413	2H DELAY LINE
Δ XB201		PU58023	CRYSTAL BLOCK
Δ		OR PU58126	CRYSTAL BLOCK
X201		PU60307	CRYSTAL RESONATOR
		OR PU59335	CRYSTAL RESONATOR
		OR PU31449-4K	CRYSTAL RESONATOR
TP214		PU50766-2	TEST PIN
TP		PU57545	TEST PIN,X3
-SECAM DETECTOR BOARD ASSY <44>-			
PWBA		PB30005A-01	SECAM DETECTOR BOARD ASSY
IC251		BA7007	IC
Q251		2SC1740S(RS)	TRANSISTOR
R251		QRD161J-103	RESISTOR
R252		QRD161J-562	RESISTOR
R253		QRD161J-333	RESISTOR
R254		QRD161J-393	RESISTOR
R255		QRD161J-102	RESISTOR
R256		QRD161J-393	RESISTOR
R257		QVZ3521-472	V RESISTOR,SECAM DET
R258		QRD161J-563	RESISTOR
R259		QRD161J-182	RESISTOR
R260		QRD161J-154	RESISTOR
R261		QRD161J-332	RESISTOR
C251		QFN31HJ-562	M CAPACITOR
C252		QCVB1CN-103	CAPACITOR
C253		QETC1CM-106ZM	E CAPACITOR
		OR QETC1CM-106	E CAPACITOR
C254		QFN31HJ-223	M CAPACITOR

#	REF NO.	PART NO.	PART NAME, DESCRIPTION
C255		QER61CM-476	E CAPACITOR
C256		QCVB1CN-103	CAPACITOR
C257		QETCIAM-336ZM	E CAPACITOR
		OR QETCIAM-336	E CAPACITOR
C258		QFN31HJ-122	M CAPACITOR
L251		PU49057	LC BLOCK
L252		PU59153-562J	PEAKING COIL
L253		PU48530-101K	PEAKING COIL
CF251		PU56983	CERAMIC FILTER
TML2		PU60330-10	TERMINAL,JP251
TP251		PU57545	TEST PIN
-SERVO SECTION-			
IC401		HD49712NT	IC
		OR HD49712ANT	IC
Q402		2SC3311AQ,R,S	TRANSISTOR
D401		1SS133	DIODE
		OR MA165	DIODE
D402		1SS133	DIODE
		OR MA165	DIODE
D403		1SS133	DIODE
		OR MA165	DIODE
D404		1SS133	DIODE
		OR MA165	DIODE
D405		1SS133	DIODE
		OR MA165	DIODE
R401		QRD161J-102	RESISTOR
R402		QRD161J-105	RESISTOR
R403		QRD161J-103	RESISTOR
R404		QRD161J-333	RESISTOR
R405		QRD161J-684	RESISTOR
R406		QRD161J-152	RESISTOR
R409		QRD161J-105	RESISTOR
R410		QRD161J-153	RESISTOR
R411		QRD161J-333	RESISTOR
R413		QRD161J-272	RESISTOR
R414		QRD161J-472	RESISTOR
R415		QRD161J-102	RESISTOR
R416		QRD161J-105	RESISTOR
R417		QRD161J-273	RESISTOR
R418		QRD161J-105	RESISTOR
R419		QRD161J-105	RESISTOR
R420		QRD161J-273	RESISTOR
R421		QRD161J-273	RESISTOR
R422		QRD161J-105	RESISTOR
R423		QRD161J-104	RESISTOR
R424		QRD161J-222	RESISTOR
R427		QRD161J-102	RESISTOR
R428		QRD161J-104	RESISTOR
R429		QRD161J-104	RESISTOR
R430		QVZ3518-684	V RESISTOR,PB SW POINT
R432		QRD161J-332	RESISTOR
R433		QRD161J-103	RESISTOR
R434		QVZ3521-474	V RESISTOR,V PULSE POSITION
R435		QRD161J-101	RESISTOR
R436		QRD161J-102	RESISTOR
R437		QRD161J-222	RESISTOR
R438		QRD161J-221	RESISTOR
R439		QRD161J-563	RESISTOR
R440		QRD161J-153	RESISTOR
R441		QRD161J-223	RESISTOR
R442		QRD161J-682	RESISTOR

#	REF NO.	PART NO.	PART NAME, DESCRIPTION
	CN605	PUS9555-8	CAP HOUSING
	CN606	PUS8844-4	CAP HOUSING
△	CP602	ICP-F25	CIRCUIT PROTECTOR
			-REGULATOR SECTION-
	IC801	STK5481	IC
	D801	MA165	DIODE
		OR 1SS133	DIODE
	R801	QRD161J-682	RESISTOR
	R802	QRD161J-272	RESISTOR
	R803	QRD161J-223	RESISTOR
	C801	QETC1CM-476Z	E CAPACITOR
		OR QETC1CM-476	E CAPACITOR
	C802	QETC1CM-107Z	E CAPACITOR
		OR QETC1CM-107	E CAPACITOR
	C803	QETC1CM-476Z	E CAPACITOR
		OR QETC1CM-476	E CAPACITOR
	C804	QETC0JM-476Z	E CAPACITOR
		OR QETC0JM-476	E CAPACITOR
	C805	QETC1EM-106Z	E CAPACITOR
		OR QETC1EM-106	E CAPACITOR
△	HS2	PQ31691	HEAT SINK
	SCW1	SDSB3014Z	TAPPING SCREW,X2
	SCW2	SDSB3010Z	TAPPING SCREW,X2
	TP	PU57545	TEST PIN,X3

* IF BOARD ASSEMBLY <07> *			

	PWBA	PB10007S-01	IF BOARD ASSY
	IC1	M51496P	IC
	Q1	2SC2636T	TRANSISTOR
	Q2	2SD1450S,T	TRANSISTOR
		OR 2SD1468S(RSE)	TRANSISTOR
	Q3	2SC3399	TRANSISTOR
		OR UN4213	TRANSISTOR
		OR DTC144ES	TRANSISTOR
	Q4	2SC536SPA(FG)	TRANSISTOR
		OR 2SC3311AR,S	TRANSISTOR
		OR 2SC1740S(RS)	TRANSISTOR
	Q5	2SA933S(RS)	TRANSISTOR
		OR 2SA1309AR,S	TRANSISTOR
	Q6	2SC536SPA(FG)	TRANSISTOR
		OR 2SC3311AR,S	TRANSISTOR
		OR 2SC1740S(RS)	TRANSISTOR
	Q7	2SA933S(RS)	TRANSISTOR
		OR 2SA1309AR,S	TRANSISTOR
	Q8	2SC536SPA(FG)	TRANSISTOR
		OR 2SC3311AR,S	TRANSISTOR
		OR 2SC1740S(RS)	TRANSISTOR
	Q9	2SD1450S,T	TRANSISTOR
		OR 2SD1468S(RSE)	TRANSISTOR
	Q11	2SC536SPA(FG)	TRANSISTOR
		OR 2SC3311AR,S	TRANSISTOR
		OR 2SC1740S(RS)	TRANSISTOR
	D1	MTZ11B	ZENER DIODE
		OR UZ11BSB	ZENER DIODE

#	REF NO.	PART NO.	PART NAME, DESCRIPTION
		OR RD11E5-T102	ZENER DIODE
	D4	1SS133	DIODE
	D5	1SS133	DIODE
	R2	NRD718J-750NBU	RESISTOR
	R6	NRD718J-822NBU	RESISTOR
	R7	NRD718J-472NBU	RESISTOR
	R8	NRD718J-220NBU	RESISTOR
	R9	NRD718J-271NBU	RESISTOR
	R10	NRD718J-101NBU	RESISTOR
	R11	NRD718J-102NBU	RESISTOR
	R17	NRD718J-472NBU	RESISTOR
	R18	QVZ3518-102	V RESISTOR . AGC
	R19	NRD718J-102NBU	RESISTOR
	R22	NRD718J-103NBU	RESISTOR
	R23	NRD718J-472NBU	RESISTOR
	R24	NRD718J-103NBU	RESISTOR
	R28	NRD718J-103NBU	RESISTOR
	R29	NRD718J-102NBU	RESISTOR
	R30	NRD718J-394NBU	RESISTOR
	R31	NRD718J-394NBU	RESISTOR
	R32	NRD718J-272NBU	RESISTOR
	R34	NRD718J-561NBU	RESISTOR
	R35	NRD718J-221NBU	RESISTOR
	R36	NRD718J-102NBU	RESISTOR
	R37	NRD718J-271NBU	RESISTOR
	R39	NRD718J-153NBU	RESISTOR
	R42	NRD718J-152NBU	RESISTOR
	R43	QVZ3518-103	V RESISTOR . COLOR LEVEL
	R44	NRD718J-102NBU	RESISTOR
	R45	NRD718J-102NBU	RESISTOR
	R47	NRD718J-471NYU	RESISTOR
	R49	NRD718J-102NBU	RESISTOR
	R56	NRD718J-222NBU	RESISTOR
	R61	NRD718J-471NBU	RESISTOR
	R62	NRD718J-104NYU	RESISTOR
	R63	NRD718J-223NBU	RESISTOR
	R64	NRD718J-392NBU	RESISTOR
	R65	NRD718J-103NBU	RESISTOR
	R66	NRD718J-471NBU	RESISTOR
	R67	NRD718J-223NBU	RESISTOR
	R68	NRD718J-223NBU	RESISTOR
	R69	NRD718J-103NYU	RESISTOR
	C5	NCX71CM-222NBR	CAPACITOR
	C6	NCX71CM-222NBR	CAPACITOR
	C7	NCX71CM-222NBR	CAPACITOR
	C8	NCX71CM-222NBR	CAPACITOR
	C11	PU57601-224MEZ	E CAPACITOR
	C12	NCY71CM-103NBR	CAPACITOR
	C13	QEK61CM-476	E CAPACITOR
	C14	NCX71CM-222NBR	CAPACITOR
	C17	QEK61CM-106	E CAPACITOR
	C18	NCY71CM-103NBR	CAPACITOR
	C19	QFL31HJ-182	M CAPACITOR
	C21	NCS71HJ-330NBR	CAPACITOR
	C22	NCB71HK-101NBR	CAPACITOR
	C25	QCT25CH-270	CAPACITOR
	C32	NCS71HJ-470NBR	CAPACITOR
	C41	QEK61CM-226	E CAPACITOR
	C42	QEK61CM-336	E CAPACITOR
	C43	NCF71EZ-223NBR	CAPACITOR
	C44	QEK61HM-474	E CAPACITOR

*Δ REF NO.	PART NO.	PART NAME, DESCRIPTION
L2	PU60025-1R1	PEAKING COIL
L3	PU60025-1R8	PEAKING COIL
L5	PU59152-150J	PEAKING COIL
L7	PU59152-220J	PEAKING COIL
CF2	PU58558-2	CERAMIC FILTER
CF4	PU32990-2	CERAMIC FILTER
SAW1	PU35557-5	SAW FILTER
T1	PU59982-2	IF TRANSFORMER
T2	PU59983-2	IF TRANSFORMER
T3	PU60046	IF TRANSFORMER
T4	PU60176-2	IF TRANSFORMER
TML1	PU59935-16	TERMINAL, JPI

* TUNER CTL BOARD ASSEMBLY <08><35> *		

PWBA	PB20015R	TUNER CTL BOARD ASSY
		~TUNER CTL BOARD ASSY <08>-
PWBA1	PB20015R1	TU CTL BOARD ASSY
IC1	LA7910	IC
IC2	BA1035B	IC
	OR M5223P	IC
Q1	2SB810H,J	TRANSISTOR
Q2	DTC144ES	TRANSISTOR
	OR 2SC3399	TRANSISTOR
	OR UN4213	TRANSISTOR
Q4	2SA1309AR,S	TRANSISTOR
Q5	2SA720Q,R,S	TRANSISTOR
	OR 2SB1278(QR)	TRANSISTOR
Q6	2SC1740S(S)	TRANSISTOR
	OR 2SC3311AS	TRANSISTOR
D1	L TZ-MR15	ZENER DIODE
D2	HZT33-02	ZENER DIODE
D6	1SS133	DIODE
D7	1SS133	DIODE
R1	QRD161J-182	RESISTOR
R2	QRD161J-153	RESISTOR
R5	QRD161J-181	RESISTOR
R6	QRD161J-332	RESISTOR
R7	QRD161J-473	RESISTOR
R8	QRD161J-121	RESISTOR
R9	QRD161J-473	RESISTOR
R10	QRD161J-103	RESISTOR
R11	QRD161J-103	RESISTOR
R12	QRD161J-333	RESISTOR
R13	QRD161J-331	RESISTOR
R14	QRD161J-394	RESISTOR
R15	QRD161J-154	RESISTOR
R16	QRD161J-154	RESISTOR
R17	QRD161J-154	RESISTOR
R18	QRD161J-103	RESISTOR
R25	QRD161J-472	RESISTOR
R26	QRD161J-472	RESISTOR
R27	QRD161J-104	RESISTOR
R28	QRD161J-472	RESISTOR
R35	QRD161J-472	RESISTOR

*Δ REF NO.	PART NO.	PART NAME, DESCRIPTION
R36	QRD161J-472	RESISTOR
R37	QRD161J-123	RESISTOR
R38	QRD161J-123	RESISTOR
R62	QRD161J-103	RESISTOR
R63	QRD161J-103	RESISTOR
C2	QETC1CM-106	E CAPACITOR
C4	QCBBIHJ-101	CAPACITOR
C5	QETC1HM-106	E CAPACITOR
C7	QCVB1CM-103	CAPACITOR
C8	QFV71HJ-333	M CAPACITOR
C9	QFV71HJ-153	M CAPACITOR
C10	QFV71HJ-333	M CAPACITOR
C11	QFV71HJ-153	M CAPACITOR
C15	QETC1CM-106	E CAPACITOR
C16	QETC1HM-105	E CAPACITOR
C17	QETC1CM-106	E CAPACITOR
C18	QETC1HM-225	E CAPACITOR
C19	QETC1CM-106	E CAPACITOR
C21	QETC1CM-106	E CAPACITOR
L4	PU59152-6R8K	PEAKING COIL
Δ TH1	PU52108-4R7K	POSITIVE THERMISTOR
CN1	PU59555-7	CAP HOUSING
CN2	PU59555-6	CAP HOUSING
Δ CP1	ICP-F10	CIRCUIT PROTECTOR
Δ TNR1	PU60292	TUNER
HD1	PU36416	HOLDER
-MEMORY BOARD ASSY <35>-		
PWBA2	PB20015A2	MEMORY BOARD ASSY
IC101	MN1220	IC
R101	QRD161J-104	RESISTOR
R102	QRD161J-104	RESISTOR
R103	QRD161J-104	RESISTOR
CN101	PU60168-7	CAP HOUSING

* AUDIO/CONTROL HEAD BOARD <12> *		

PWB1	PU58016	A/C HEAD BOARD
BKT1	PQ43014	BRACKET
SCW1	SPSH1740	MINI SCREW
CN1	PU54537-5	CAP HOUSING
CN2	PU54537-2B	CAP HOUSING

#	REF NO.	PART NO.	PART NAME, DESCRIPTION

* TIMER/DISPLAY BOARD ASSEMBLY <21> *			

PWBA	PU22491H		TIMER/DISPLAY BOARD ASSY
IC1	UPD75208CW-097	IC	
	OR UPD75208CW-139	IC	
IC2	M5278L56	IC	
IC3	IC-PST523H-2	IC	
Q1	2SC3401	TRANSISTOR	
	OR DTC144WS	TRANSISTOR	
D1	1SS133	DIODE	
D2	1SS133	DIODE	
D3	1SS133	DIODE	
D4	1SS132	DIODE	
D5	1SS132	DIODE	
D6	1SS132	DIODE	
D7	1SS132	DIODE	
D8	1SS132	DIODE	
D9	1SS132	DIODE	
D13	1SS132	DIODE	
D16	RD10ES-T182	ZENER DIODE	
	OR UZ10BSB	ZENER DIODE	
D17	1SS133	DIODE	
D18	MA27TB	DIODE	
R2	QRD161J-224	RESISTOR	
R3	QRD161J-333	RESISTOR	
R4	QRD161J-102	RESISTOR	
R5	QRD161J-333	RESISTOR	
R6	QRD161J-273	RESISTOR	
R7	QRD161J-472	RESISTOR	
R9	QRD161J-103	RESISTOR	
R10	QRD161J-103	RESISTOR	
R11	QRD161J-103	RESISTOR	
R12	QRD161J-103	RESISTOR	
R14	QRD161J-103	RESISTOR	
R15	QRD161J-103	RESISTOR	
R16	QRD161J-103	RESISTOR	
R17	QRD161J-103	RESISTOR	
R18	QRD161J-103	RESISTOR	
R19	QRD161J-103	RESISTOR	
R22	QRD161J-102	RESISTOR	
R25	QRD161J-103	RESISTOR	
R26	QRD161J-103	RESISTOR	
R27	QRD161J-103	RESISTOR	
R28	QRD161J-103	RESISTOR	
R29	QRD161J-103	RESISTOR	
R30	QRD161J-103	RESISTOR	
R35	QRD161J-333	RESISTOR	
R36	QRD161J-333	RESISTOR	
R37	QRD161J-333	RESISTOR	
R38	QRD161J-102	RESISTOR	
R39	QRD161J-333	RESISTOR	
RA1	QRB057J-104	RESISTOR ARRAY	
RA2	QRB047J-224	RESISTOR ARRAY	
RA3	QRB077J-224	RESISTOR ARRAY	
C1	QER61CM-336	E CAPACITOR	
C2	QER60JM-336	E CAPACITOR	
C3	PU60177	E CAPACITOR, 0.022/5.5	
C6	QCVB1CN-103	CAPACITOR	
C7	QCVB1CN-103	CAPACITOR	

#	REF NO.	PART NO.	PART NAME, DESCRIPTION
C8	QCVB1CN-103	CAPACITOR	
C9	QCVB1CN-103	CAPACITOR	
C10	QER61CM-106	E CAPACITOR	
C14	QER60JM-336	E CAPACITOR	
Δ CF1	PU59545	RESONATOR	
S1	PU53598-2	TACT SWITCH,CLOCK ADJUST	
S2	PU53598-2	TACT SWITCH,PROGRAM	
S3	PU53598-2	TACT SWITCH,TIMER	
S4	PU53598-2	TACT SWITCH,SET(-)	
S5	PU53598-2	TACT SWITCH,CANCEL	
S6	PU53598-2	TACT SWITCH,REPEAT	
S7	PU53598-2	TACT SWITCH,SELECT	
S8	PU53598-2	TACT SWITCH,SET(+)	
S9	PU53598	TACT SWITCH,MODE	
S10	PU53598	TACT SWITCH,CHANNEL DOWN	
S12	PU53598-2	TACT SWITCH,CHANNEL SET	
S13	PU53598	TACT SWITCH,RESET	
S14	PU53598	TACT SWITCH,CHANNEL UP	
S210	PU53598-2	TACT SWITCH,TRACKING(+)	
S211	PU53598-2	TACT SWITCH,TRACKING(-)	
S402	PU58488-1-1	SLIDE SWITCH,COUNTER MEMORY	
S403	PU58486-1-1	SLIDE SWITCH,AFC	
FDP1	PU59951-2	FLUORESCENT DISPLAY PANEL	
HD1	PQ31215-1-4	FDP HOLDER(R)	
HD2	PQ31163-1-4	FDP HOLDER(L)	
TP1	PU56008	TEST PIN	
CN5	PU60169-7	HOUSING	

* OPERATION BOARD ASSEMBLY <22> *			

PWBA	PB20001A-01		OPERATION BOARD ASSY
IC201	GP1U501	IFR UNIT	
	OR SPS-403	IFR UNIT	
D200	MTZ5.1	ZENER DIODE	
D201	SLR-34VC3F	LE DIODE,POWER	
D202	SLR-34VC3F	LE DIODE,REC	
D203	SLR-34VC3F	LE DIODE,PAUSE	
D204	SLR-34MC3F	LE DIODE,PLAY	
R200	QRD161J-102	RESISTOR	
R202	QRD161J-331	RESISTOR	
R203	QRD161J-331	RESISTOR	
R204	QRD161J-331	RESISTOR	
R211	QRD161J-222	RESISTOR	
R212	QRD161J-222	RESISTOR	
R213	QRD161J-332	RESISTOR	
R214	QRD161J-472	RESISTOR	
R215	QRD161J-103	RESISTOR	
R216	QRD161J-222	RESISTOR	
R217	QRD161J-222	RESISTOR	
R218	QRD161J-183	RESISTOR	
R219	QRD161J-223	RESISTOR	

#	REF NO.	PART NO.	PART NAME, DESCRIPTION
R220		QRD161J-563	RESISTOR
R221		QRD161J-471	RESISTOR
S201		PU57550	TACT SWITCH,POWER
S203		PU57550	TACT SWITCH,EJECT
S204		PU57551	TACT SWITCH,STOP
S205		PU57551	TACT SWITCH,PAUSE
S206		PU57551	TACT SWITCH,PLAY
S207		PU57551	TACT SWITCH,REW
S208		PU57551	TACT SWITCH,FF
S209		PU57551	TACT SWITCH,REC
HD1		PQM30038	LED HOLDER,X4

* UPPER DRUM BOARD <41> *			

PWB1		FDM3017	UPPER DRUM BOARD

* PRE/REC BOARD ASSEMBLY <43> *			

PWBA		PU36328D	PRE/REC BOARD ASSY
IC1		AN3380K	IC
	DR	AN3380NK	IC
Q1		2SA1309R,S	TRANSISTOR
Q2		2SC1740S(RS)	TRANSISTOR
Q3		2SC1740S(RS)	TRANSISTOR
Q4		DTC144WS	TRANSISTOR
Q6		2SC1740S(RS)	TRANSISTOR
D2		1SS133	DIODE
	DR	MA165	DIODE
D3		1SS133	DIODE
	DR	MA165	DIODE
R1		QRD161J-102	RESISTOR
R2		QRD161J-222	RESISTOR
R3		QRD161J-222	RESISTOR
R4		QRD161J-391	RESISTOR
R5		QRD161J-821	RESISTOR
R6		QRD161J-391	RESISTOR
R7		QRD161J-222	RESISTOR
R8		QRD161J-222	RESISTOR
R9		QRD161J-102	RESISTOR
R10		QRD161J-122	RESISTOR
R11		QRD161J-821	RESISTOR
R12		QRD161J-331	RESISTOR
R15		QRD161J-122	RESISTOR
R16		QRD161J-153	RESISTOR
R17		QRD161J-103	RESISTOR
R18		QRD161J-222	RESISTOR
R19		QRD161J-222	RESISTOR
R20		QRD161J-332	RESISTOR
R21		QRD161J-561	RESISTOR
R22		QRD161J-391	RESISTOR
R23		QRD161J-181	RESISTOR
R24		QRD161J-151	RESISTOR
R25		QRV144F-3742AY	RESISTOR

#	REF NO.	PART NO.	PART NAME, DESCRIPTION
R26		QRD161J-562	RESISTOR
R27		QRD162J-333	RESISTOR
C1		QETCOJM-4762N	E CAPACITOR
	OR	QETCOJM-476	E CAPACITOR
C2		QCVB1CN-103	CAPACITOR
C3		QCVB1CN-103	CAPACITOR
C5		QCVB1CN-103	CAPACITOR
C6		QCSB1HJ-270	CAPACITOR
C7		QCSB1HJ-560	CAPACITOR
C9		QCSB1HJ-270	CAPACITOR
C10		QCVB1CN-103	CAPACITOR
C11		QCVB1CN-103	CAPACITOR
C12		QCVB1CN-103	CAPACITOR
C13		QFV41HJ-104	TF CAPACITOR
C15		QEE41AM-335	TANTAL CAPACITOR
C17		QCSB1HJ-680	CAPACITOR
C18		QCVB1CN-103	CAPACITOR
C19		QFV41HJ-104	TF CAPACITOR
C20		QER61CM-106	E CAPACITOR
C21		QCBB1HJ-820	CAPACITOR
C22		QCBB1HJ-820	CAPACITOR
C23		QER61CM-106	E CAPACITOR
C24		QCVB1CN-103	CAPACITOR
C25		QEE40JM-685	E CAPACITOR
C26		QETCOJM-4762N	E CAPACITOR
	OR	QETCOJM-476	E CAPACITOR
C27		QCBB1HJ-121	CAPACITOR
C29		QCSB1HK-4R7	CAPACITOR
C31		QCVB1CN-103	CAPACITOR
L1		PU48530-101K	PEAKING COIL
L3		PU59152-560J	PEAKING COIL
L4		PU59152-470J	PEAKING COIL
L6		PU59152-330J	PEAKING COIL
L7		PU48530-101K	PEAKING COIL
L8		PU59152-680J	PEAKING COIL
L9		PU59152-100J	PEAKING COIL
L10		PU59152-8R2J	PEAKING COIL
L11		PU59152-150J	PEAKING COIL
BKT1		PQ42955	PWB BRACKET
ETH1		PQ40433-2	EARTH LUG
SCW1		DPSP2606Z	SCREW,X3
SLD1		PQ42959	SHIELD CASE
SLD2		PQ42960	SHIELD PLATE
SLD3		PQ42961	SHIELD COVER
SPC1		WBS2600Z	WASHER
CN1		PU58844-8	CAP HOUSING
CN2		PU58844-6	CAP HOUSING
CN3		PU56258-4	CAP HOUSING

* DECK TERMINAL BOARD ASSEMBLY <51> *			

PWBA1		PU22509A1	DECK TERMINAL BOARD ASSY
R1		QRD181J-151	RESISTOR
R3		QRD181J-331	RESISTOR

#	REF NO.	PART NO.	PART NAME, DESCRIPTION
	PHS1	GP3A21	PHOTO INTERRUPTER
	WR1	PW30110-26DD885	PARALLEL WIRE,DOES NDT INCL.
	CN1	PU59933-15	WIRE TRAP

 * RELAY BOARD ASSEMBLY <52> *

PWBA2	PU22509C2	RELAY BOARD ASSY
LC1	PU59809-222T	N FILTER
LC2	PU59809-222T	N FILTER

 * REC SAFETY BOARD ASSEMBLY <53> *

PWBA3	PU22509A3	REC SAFETY BOARD ASSY
S1	PU58644-1-3	REC SAFETY SWITCH

 * END SENSOR BOARD ASSEMBLY <54> *

PWBA4	PU22509A4	END SENSOR BOARD ASSY
Q1	PN268R-NC	PHOTO TRANSISTOR
HD1	PQ31047	END SENSOR HOLDER
CN1	PU59945-102	WIRE SOCKET

 * CASSETTE HOUSING BOARD <56> *

PWBA	PB30043	CASSETTE HOUSING BOARD
Q1	PN268R-NC	PHOTO TRANSISTOR
R1	QRD161J-471	RESISTOR
PHS1	PU58879	PHOTO INTERRUPTER
CN1	PU58844-106	CAP HOUSING

#	REF NO.	PART NO.	PART NAME, DESCRIPTION
---	---------	----------	------------------------