




aiwa

XR-M98 XR-M99

SERVICE MANUAL

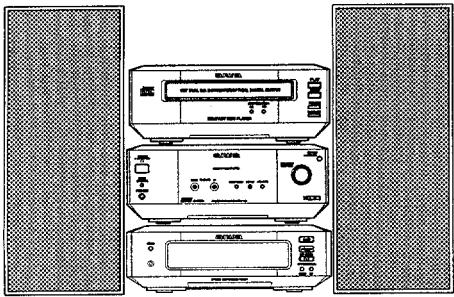

CD STEREO SYSTEM

- BASIC CD MECHANISM : 3ZG-3 E3NC
- TYPE: 98<K>, 99<EZ>

REVISION PUBLISHING

SYSTEM	AMPLIFIER	TUNER	CD PLAYER	MD RECORD	DECK	SPEAKERS	REMOTE CONTROL
XR-M98	MX-LM98	TX-LM98	DX-LM99	AM-LM99 (OPTIONAL)	FX-LM99 (OPTIONAL)	SX-LM99	RC-ZAT04
XR-M99	MX-LM99	TX-LM99					

- This Service Manual is the "Revision Publishing" and replaces "Simple Manual".
(S/M Code No. 09-999-415-0T1).
- If requiring information about AM-LM99, see Service Manual of AM-LM99(YU, Y)
(S/M Code No. 09-999-417-0R1).
- If requiring information about FX-LM99, see Service Manual of FX-LM99(YU, YLH, Y)
(S/M Code No. 09-999-416-9R1).

TABLE OF CONTENTS

SPECIFICATIONS	3
ACCESSORIES / PACKAGE LIST	4
PROTECTION OF EYES FROM LASER BEAM DURING SERVICING	5
PRECAUTION TO REPLACE OPTICAL BLOCK	5
MODEL NO. MX-LM98/99	
DISASSEMBLY INSTRUCTIONS	6
ELECTRICAL MAIN PARTS LIST	7 ~ 8
CHIP RESISTOR PART CODE	9
TRANSISTOR ILLUSTRATION	10
WIRING - 1 (SPK)	11 ~ 12
WIRING - 2 (PWR AMP/ FRONT/ HP/ LED)	13 ~ 14
SCHEMATIC DIAGRAM - 1 (PWR AMP/ FRONT/ SPK/ HP/ LED)	15 ~ 16
WIRING - 3 (PT)	17 ~ 18
SCHEMATIC DIAGRAM - 2 (PT)	19
MECHANICAL PARTS LIST 1 / 1	20
MECHANICAL EXPLODED VIEW 1 / 1	21 ~ 22
MODEL NO. TX-LM98/99	
DISASSEMBLY INSTRUCTIONS	23
ELECTRICAL MAIN PARTS LIST	24 ~ 27
CHIP RESISTOR PART CODE	27
TRANSISTOR ILLUSTRATION	28
WIRING - 1 (MAIN/ FRONT/ LED/ CONN/ JACK)	29 ~ 30
SCHEMATIC DIAGRAM - 1 (MAIN/ FRONT/ LED/ CONN/ JACK)	31 ~ 33
IC BLOCK DIAGRAM - 1	34 ~ 35
WIRING - 2 (TUNER)<K>	36
SCHEMATIC DIAGRAM - 2 (TUNER)<K>	37 ~ 38
SCHEMATIC DIAGRAM - 3 (TUNER)<EZ>	39 ~ 40
WIRING - 3 (TUNER)<EZ>	41
IC BLOCK DIAGRAM - 2	42 ~ 43
FL(13-ST-36GNK) GRID ASSIGNMENT/ ANODE CONNECTION/ PIN CONNECTION	44 ~ 45
IC DESCRIPTION	46 ~ 47
ADJUSTMENT - 1 (K)	48
ADJUSTMENT - 2 (EZ)	49
PRACTICAL SERVICE FIGURE	50
MECHANICAL EXPLODED VIEW 1 / 1	51 ~ 52
MECHANICAL PARTS LIST 1 / 1	53
MODEL NO. DX-LM99	
DISASSEMBLY INSTRUCTIONS	54
ELECTRICAL MAIN PARTS LIST	55 ~ 56
CHIP RESISTOR PART CODE	56
TRANSISTOR ILLUSTRATION	56
WIRING -1 (MAIN/ FRONT/ SUB/ REAR/ LED/ DRIVE/ LOAD)	57 ~ 58
SCHEMATIC DIAGRAM -1 (MAIN/ FRONT/ SUB/ REAR/ LED/ DRIVE/ LOAD)	59 ~ 61
IC DESCRIPTION	62 ~ 66
IC BLOCK DIAGRAM	67
ADJUSTMENT	68
TEST MODE	69
MECHANICAL PARTS LIST 1 / 1	70
MECHANICAL EXPLODED VIEW 1 / 1	71 ~ 72
CD MECHANISM EXPLODED VIEW 1 / 2	73
CD MECHANISM PARTS LIST 1 / 2	74
CD MECHANISM EXPLODED VIEW 2 / 2	75
CD MECHANISM PARTS LIST 2 / 2	75
SPEAKER DISASSEMBLY INSTRUCTIONS	76
SPEAKER PARTS LIST<SX-LM99>	77

SPECIFICATIONS

<STEREO TUNER TX-LM98/99>

<FM tuner section>

Tuning range	87.5 MHz to 108 MHz
Usable sensitivity (IHF)	13.2 dBf
Antenna terminals	75 ohms (unbalanced)

<MW tuner section>

Tuning range	531 kHz to 1602 kHz (9 kHz step) 530 kHz to 1710 kHz (10 kHz step)
Usable sensitivity	350 μ V/m
Antenna	Loop antenna

<LW tuner section>

Tuning range	144 kHz to 290 kHz
Usable sensitivity	1400 μ V/m
Antenna	Loop antenna

<Input>

AUX IN	500 mV
--------	--------

<General>

Dimensions (Wx H x D)	210 x 71 x 247 mm
Weight	0.9 kg

<STEREO INTEGRATED AMPLIFIER MX-LM98/99>

<Amplifier section>

Power output	Rated: 25 W + 25 W (6 ohms, T.H.D. 1%, 1 kHz/DIN 45500) Reference: 30 + 30 W (6 ohms, T.H.D. 10%, 1 kHz/DIN 45324) DIN MUSIC POWER 72 W + 72 W
--------------	---

Outputs

SUPER WOOFER	1.4 V
SPEAKERS	Accept speakers of 6 ohms or more
PHONES	Stereo mini jack: accepts headphones of 16 ohms or more

<General>

Power requirements	230 V AC, 50 Hz
Power consumption	87 W (MX-LM98) 81 W (MX-LM99)
Standby power consumption	3.0 W (power economizing mode set to ON)
Dimensions (Wx H x D)	210 x 81 x 282.5 mm
Weight	3.0 kg

<COMPACT DISC PLAYER DX-LM99>

<Compact disc player section>

Laser	Semiconductor laser ($\lambda = 780$ nm)
D-A converter	1 bit dual
Signal-to-noise ratio	90 dB (1 kHz, 0 dB)
Harmonic distortion	0.05 % (1 kHz, 0 dB)
Wow and flutter	Unmeasurable

<Output>

DIGITAL OUT	
-------------	--

<General>

Dimensions (Wx H x D)	210 x 81 x 244.5 mm
Weight	1.3 kg

<STEREO CASSETTE DECK FX-LM99>

<Cassette deck section>

Track format	4 tracks, 2 channels stereo
Frequency response	CrO_2 tape: 50 Hz to 16000 Hz Normal tape: 50 Hz to 15000 Hz
Signal-to-noise ratio	60 dB (CrO_2 tape peak level)
Recording system	AC bias
Heads	Recording/playback head x 1 Erase head x 2

<General>

Dimensions (W x H x D)	210 x 71 x 243 mm
Weight	1.3 kg

<MINI DISC RECORDER AM-LM99>

<MD recorder section>

Scanning method	Non-contact optical scanner (Semiconductor laser application)
Recording system	Magnetic polarity modulation overwrite system
Rotation speed	Approx. 400 to 900 rpm(CLV)
Sampling frequency	44.1 kHz
No. of channels	Stereo: 2 channels Monaural: 1 channel
A-D, D-A converter	1-bit
Frequency	20 to 20000 Hz +0.2 - -1.5dB
Wow and flutter	Unmeasurable

<Input>

AUX DIGITAL IN	Sampling frequency: 48 kHz/ 32 kHz Optical input level: more than -21 dBm
----------------	--

<General>

Dimensions (Wx H x D)	210 x 71 x 243 mm
Weight	1.3 kg

<SPEAKER SYSTEM SX-LM99>

Cabinet type	2 way, bass reflex (magnetic shielded type)
Speakers	Woofer: 100 mm cone type x 2 Tweeter: 22 mm dome type
Impedance	6 ohms
Output sound pressure level	87 dB/W/m
Dimensions (W x H x D)	152 x 301 x 202 mm
Weight	3.0 kg

• Design and specifications are subject to change without notice.

• The word "BBE" and the "BBE symbol" are trademarks of BBE Sound, Inc.

Under license from BBE Sound, Inc.

ACCESSORIES / PACKAGE LIST

If can't understand for Description please kindly refer to "REFERENCE NAME LIST".


REF. NO.	PART NO.	KANRI NO.	DESCRIPTION
1	8Z-CLP-906-010		IB, EZ(9L) I<EZ>
1	8Z-CLP-905-010		IB, K(E) I<K>
2	87-A90-030-010		ANT, LOOP AM-NC C
3	87-A90-118-010		ANT, WIRE FM (Z)
4	8Z-CK4-962-010		RC UNIT, RC-ZAT04 (VS)

PROTECTION OF EYES FROM LASER BEAM DURING SERVICING

This set employs laser. Therefore, be sure to follow carefully the instructions below when servicing.

WARNING!!

WHEN SERVICING, DO NOT APPROACH THE LASER EXIT WITH THE EYE TOO CLOSELY. IN CASE IT IS NECESSARY TO CONFIRM LASER BEAM EMISSION. BE SURE TO OBSERVE FROM A DISTANCE OF MORE THAN 30cm FROM THE SURFACE OF THE OBJECTIVE LENS ON THE OPTICAL PICK-UP BLOCK.

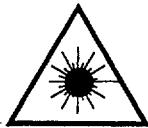

- Caution: Invisible laser radiation when open and interlocks defeated avoid exposure to beam.
- Advarsel: Usynlig laserstråling ved åbning, når sikkerhedsafbrydere er ude af funktion. Undgå utsættelse for stråling.

VAROITUS!

Laitteen Käyttäminen muulla kuin tässä käyttöohjeessa mainitulla tavalla saattaa altistaa käyt-täjän turvallisuusluokan 1 ylit-täälle näkymättömälle lasersäteilylle.

VARNING!

Om apparaten används på annat sätt än vad som specificeras i denna bruksanvisning, kan användaren utsättas för osynlig laserstrålning, som överskrider gränsen för laserklass 1.

CAUTION

Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

ATTENTION

L'utilisation de commandes, réglages ou procédures autres que ceux spécifiés peut entraîner une dangereuse exposition aux radiations.

ADVARSEL!

Usynlig laserstråling ved åbning, når sikkerhedsafbrydere er ude af funktion. Undgå utsættelse for stråling.

This Compact Disc player is classified as a CLASS 1 LASER product.

The CLASS 1 LASER PRODUCT label is located on the rear exterior.

CLASS 1	LASER PRODUCT
KLASSE 1	LASER PRODUKT
LUOKAN 1	LASER LAITE
KLASS 1	LASER APPARAT


Precaution to replace Optical block

(KSS - 213F)

Body or clothes electrostatic potential could ruin laser diode in the optical block. Be sure ground body and workbench, and use care the clothes do not touch the diode.

- 1) After the connection, remove solder shown in right figure.

PICK-UP Assy P.C.B

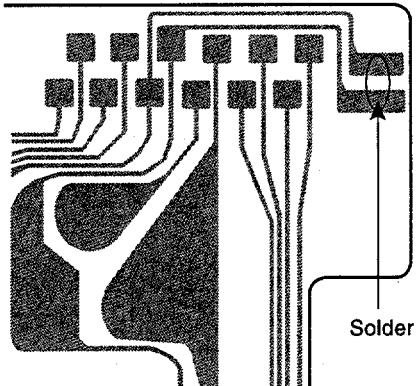

MODEL NO.

MX-LM98/99

DISASSEMBLY INSTRUCTIONS

1. Top Panel and Side Panels L/R Removal

- 1) Remove 3 screws **A** from the rear of unit. (See Fig-1)
- 2) Remove 2 screws **B** from side panels L/R. (See Fig-1)

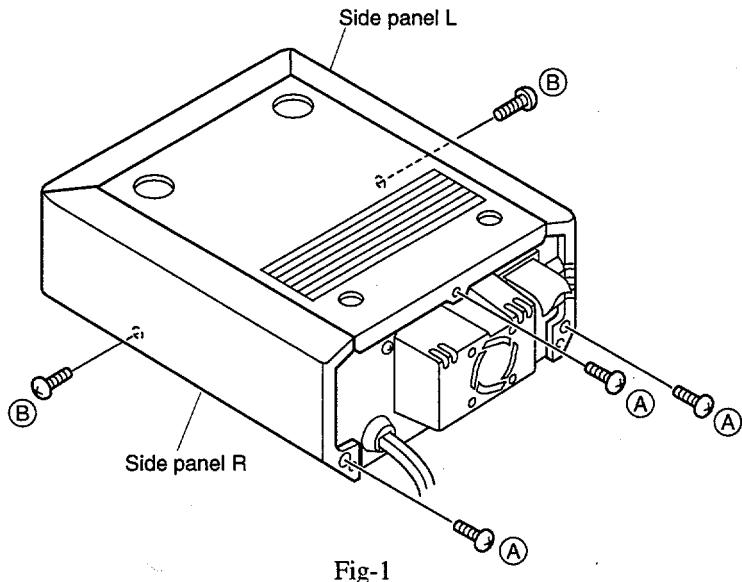


Fig-1

- 3) Remove side panels L/R in the directions of arrows **A** and **B**. (See Fig-2)
- 4) Remove the top panel in the direction of arrow **C**. (See Fig-2)

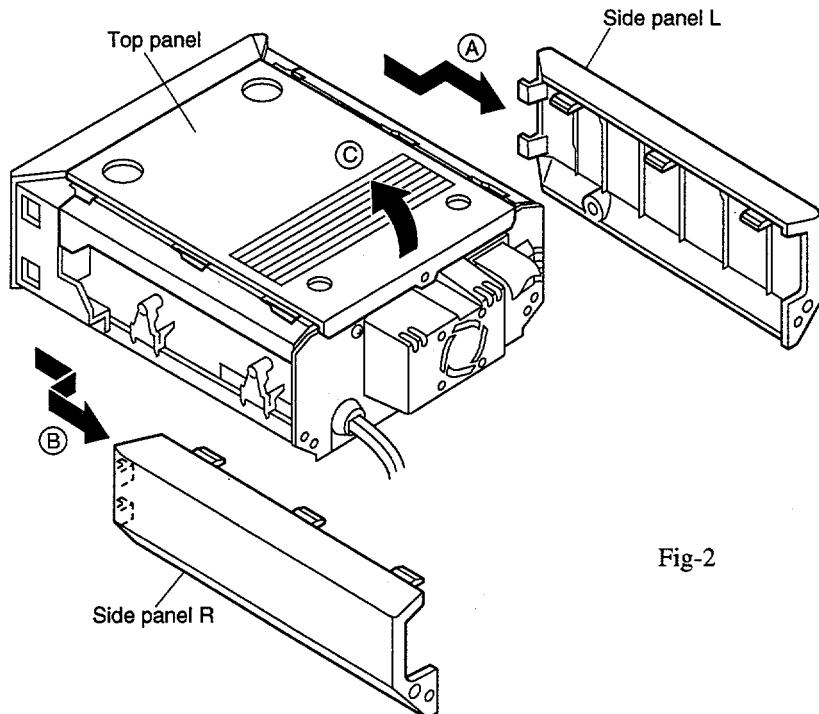


Fig-2

ELECTRICAL MAIN PARTS LIST (MX-LM98 / 99)

If can't understand for Description please kindly refer to "REFERENCE NAME LIST".


REF. NO.	PART NO.	KANRI NO.	DESCRIPTION	REF. NO.	PART NO.	KANRI NO.	DESCRIPTION
IC				C234	87-010-380-080	CAP, ELECT 47-16V	
	87-001-642-010	IC, NJM78M12FA		C235	87-A10-946-080	C-CAP, S 220P-100 J CH	
TRANSISTOR				C270	87-010-380-080	CAP, ELECT 47-16V	
	87-A30-076-080	C-TR, 2SC3052F		C271	87-010-112-080	CAP, ELECT 100-16V	
	87-A30-075-080	C-TR, 2SA1235F		CN101	87-A61-025-010	CONN, 4P TKC-M4P-B1	
	87-A30-268-040	C-TR, 2SA1514K(S)		CN102	87-099-186-010	CONN, 6P EH V WHT	
	87-A30-074-080	C-TR, RT1P 141C		CN201	8Z-CE3-610-010	CONN ASSY, 19P 52305-1911	
	87-026-609-080	TR, KTA1266GR		CN202	87-A60-109-010	CONN, 2P V S2M-2W	
	87-026-245-080	TR, DTC114ES		CN203	87-099-548-010	CONN, 20P TKC-M020P-B	
	87-A30-198-080	TR, KTC3199GR		J202	87-099-801-010	JACK, PIN 1P BLK	
	89-213-702-010	TR, 2SB1370 (1.8W)		JR101	87-005-564-080	C-COIL, 2125 2.2UH K MLF2012	
	87-A30-190-080	TR, CC5551		JW119	87-003-098-080	COIL, 2.2UH K LAL02	
	87-A30-215-010	TR, 2SD2025		L203	87-003-098-080	COIL, 2.2UH K LAL02	
	87-A30-214-010	TR, 2SB1344		L204	87-003-098-080	COIL, 2.2UH K LAL02	
	87-A30-106-070	C-TR, CMBT5551		L205	87-003-098-080	COIL, 2.2UH K LAL02	
	87-A30-196-080	TR, 2SC4115RS		R175	87-A90-247-080	PROTECTOR, 0.315A 60V 491	
	87-A30-105-080	C-TR, RT1P 441C		R239	87-A00-258-080	RES, M/F 0.22-1W J	
	87-A30-087-080	C-FET, 2SK2158		R240	87-A00-258-080	RES, M/F 0.22-1W J	
DIODE				R241	87-A00-258-080	RES, M/F 0.22-1W J	
	87-A40-270-080	C-DIODE, MC2838		R242	87-A00-258-080	RES, M/F 0.22-1W J	
	87-A40-269-080	C-DIODE, MC2836		R243	87-A00-258-080	RES, M/F 0.22-1W J	
	87-A40-004-080	ZENER, MTZJ16A		R244	87-A00-258-080	RES, M/F 0.22-1W J	
	87-070-178-090	DIODE, 1N5402-BD54		TH051	87-A91-042-080	C-THMS, 100K 55001	
	87-070-274-080	DIODE, 1N4003 SEM		TH052	87-A91-042-080	C-THMS, 100K 55001	
	87-017-083-080	ZENER, HZS4C2		WH201	87-A61-039-010	CONN, 19P V WHT 52328	
	87-A40-312-080	ZENER, DZ33M		FRONT C.B			
	87-A40-488-080	DIODE, 1SS244		C301	87-010-197-080	CAP, CHIP 0.01 DM	
	87-A40-291-080	DIODE, 1N4148 (CPT)		C302	87-010-197-080	CAP, CHIP 0.01 DM	
	87-A40-299-080	ZENER, DZ5.1M		C303	87-010-260-080	CAP, ELECT 47-25V	
PWR AMP C.B				CN301	88-805-020-790	CONN ASSY, 2P 70MM	
	C81	87-010-401-080	CAP, ELECT 1-50V	CN302	88-805-020-790	CONN ASSY, 2P 70MM	
	C82	87-010-263-080	CAP, ELECT 100-10V	CN304	87-A60-131-010	CONN, 6P V FE	
	C83	87-010-380-080	CAP, ELECT 47-16V	D302	87-A40-317-080	LED, SLR-342VCT31 RED	
	C84	87-010-378-040	CAP, E 10-16	D303	87-A40-640-010	LED, SELU1E10CXM BLUE-EF	
	C051	87-010-260-080	CAP, ELECT 47-25V	D304	87-A40-640-010	LED, SELU1E10CXM BLUE-EF	
	C052	87-010-403-080	CAP, ELECT 3.3-50V	FC304	88-906-121-110	FF-CABLE, 6P	
	C053	87-010-197-080	CAP, CHIP 0.01 DM	S301	87-A91-402-010	SW, RTRY RE0121PVB25FINA1-T2	
	C123	87-A10-520-090	CAP, E 3300-35 M SMG	S302	87-A90-696-080	SW, TACT TS2103-03-430	
	C124	87-010-917-090	CAP, E 3300-50 M SMG	S303	87-A90-696-080	SW, TACT TS2103-03-430	
	C171	87-010-260-080	CAP, ELECT 47-25V	S304	87-A90-696-080	SW, TACT TS2103-03-430	
	C172	87-010-260-080	CAP, ELECT 47-25V	S305	87-A90-696-080	SW, TACT TS2103-03-430	
	C173	87-010-260-080	CAP, ELECT 47-25V	S306	87-A90-696-080	SW, TACT TS2103-03-430	
	C174	87-010-260-080	CAP, ELECT 47-25V	S307	87-A90-696-080	SW, TACT TS2103-03-430	
	C175	87-010-247-080	CAP, ELECT 100-50V	S308	87-A90-696-080	SW, TACT TS2103-03-430	
	C176	87-010-247-080	CAP, ELECT 100-50V	S309	87-A90-696-080	SW, TACT TS2103-03-430	
	C181	87-010-384-080	CAP, ELECT 100-25V	SPK C.B			
	C182	87-010-384-080	CAP, ELECT 100-25V	C125	87-010-196-080	CHIP CAPACITOR, 0.1-25	
	C207	87-010-546-080	CAP, ELECT 0.33-50V	C126	87-010-196-080	CHIP CAPACITOR, 0.1-25	
	C208	87-010-546-080	CAP, ELECT 0.33-50V	C127	87-010-196-080	CHIP CAPACITOR, 0.1-25	
	C209	87-012-157-080	C-CAP, S 330P-50 J CH GRM	C128	87-010-196-080	CHIP CAPACITOR, 0.1-25	
	C210	87-012-157-080	C-CAP, S 330P-50 J CH GRM	C129	87-010-928-090	CAP, E 4700-25 SMG	
	C211	87-010-260-080	CAP, ELECT 47-25V	C130	87-010-384-080	CAP, ELECT 100-25V	
	C212	87-010-260-080	CAP, ELECT 47-25V	C131	87-010-384-080	CAP, ELECT 100-25V	
	C213	87-010-186-080	CAP, CHIP 4700P	C151	87-010-196-080	CHIP CAPACITOR, 0.1-25	
	C214	87-010-186-080	CAP, CHIP 4700P	C152	87-A11-233-090	CAP, E 4700-16 105 KMG	
	C215	87-010-405-080	CAP, ELECT 10-50V	C153	87-010-196-080	CHIP CAPACITOR, 0.1-25	
	C216	87-010-405-080	CAP, ELECT 10-50V	C154	87-A10-105-080	CAP, E 1000-6.3 REA	
	C217	87-A10-946-080	C-CAP, S 220P-100 J CH	C225	87-010-195-080	C-CAP, S 0.068-25 F	
	C218	87-A10-946-080	C-CAP, S 220P-100 J CH	C226	87-010-195-080	C-CAP, S 0.068-25 F	
	C221	87-010-186-080	CAP, CHIP 4700P	C227	87-010-544-080	CAP, ELECT 0.1-50V	
	C222	87-010-186-080	CAP, CHIP 4700P	C228	87-010-544-080	CAP, ELECT 0.1-50V	
	C223	87-012-368-080	C-CAP, S 0.1-50 F	C229	87-010-182-080	C-CAP, S 2200P-50 B	
	C224	87-012-368-080	C-CAP, S 0.1-50 F	C230	87-010-182-080	C-CAP, S 2200P-50 B	
	C231	87-010-189-080	C-CAP, S 8200P-50 K B	CN103	87-049-469-010	CONN, 4P V	
	C232	87-010-189-080	C-CAP, S 8200P-50 K B	CN204	87-A60-131-010	CONN, 6P V FE	
				CN205	87-009-802-010	CONN, 20P H BLK TKC-M	
				CN206	87-A60-624-010	CONN, 7P V 2MM JMT	

REF. NO.	PART NO.	KANRI NO.	DESCRIPTION	REF. NO.	PART NO.	KANRI NO.	DESCRIPTION
J203	87-A60-659-010		TERMINAL, SPKR 4P HSP-134V-05Z	HP C.B			
L201	87-003-383-010		COIL, 1UH-K	CN207	88-805-070-790		CONN ASSY, 7P
L202	87-003-383-010		COIL, 1UH-K	J201	87-A60-420-010		JACK, 3.5 ST (MSC)
▲ PR103	87-026-681-080		PROTECTOR, 5A 60V 491				
▲ PR104	87-026-681-080		PROTECTOR, 5A 60V 491				
▲ PR151	87-A90-093-080		PROTECTOR, 3A 491SERIES 60V	LED (R) C.B			
▲ PR152	87-A90-093-080		PROTECTOR, 3A 491SERIES 60V	CN306	87-A60-619-010		CONN, 2P V 2MM JMT
				D306	87-A40-640-010		LED, SELU1E10CXM BLUE-EF
PT C.B							
▲ C101	87-A10-479-080		CAP,CER 2200P-250 M E KH	LED (L) C.B			
C104	87-010-387-080		CAP,E 470-25 SME				
C105	87-010-403-080		CAP, ELECT 3.3-50V	CN305	87-A60-619-010		CONN, 2P V 2MM JMT
CN104	87-A61-024-010		CONN,4P H BLK TKC-M	D305	87-A40-640-010		LED, SELU1E10CXM BLUE-EF
▲ PT101	8Z-NF8-662-010		PT,SUB ZNF-8 (E)				
▲ PT102	8Z-CE3-613-010		PT,EZ				
▲ RY101	87-A90-976-010		RELAY,AC12V SDT-S-112LMR				
▲ TM101	87-A60-317-010		TERMINAL, 1P MSC				
▲ TM102	87-A60-317-010		TERMINAL, 1P MSC				

○チップ抵抗部品コード／CHIP RESISTOR PART CODE

チップ抵抗部品コードの成り立ち

Chip Resistor Part Coding

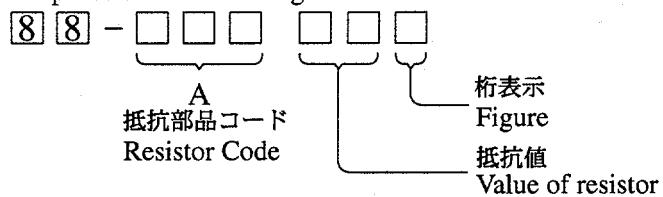


チップ抵抗
Chip resistor

容量 Wattage	種類 Type	許容誤差 Tolerance	記号 Symbol	寸法／Dimensions (mm)			抵抗コード Resistor Code : A	
				外形／Form	L	W		
1/16W	1005	± 5%	CJ		1.0	0.5	0.35	104
1/16W	1608	± 5%	CJ		1.6	0.8	0.45	108
1/10W	2125	± 5%	CJ		2	1.25	0.45	118
1/8W	3216	± 5%	CJ		3.2	1.6	0.55	128

TRANSISTOR ILLUSTRATION (MX-LM98 / 99)




KTA1266GR

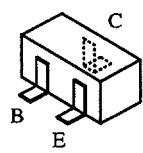


2SA1235F
CMBT5551
RT1P141C
2SC3052F
RT1P441C
2SA1514K



2SB1370
2SB1344
2SD2025



DTC114ES
KTC3199GR

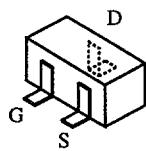


2SK2158




CC5551
2SC4115SRS


WIRING - 1 (SPK : MX-LM98 / 99)


WIRING - 1 (SPK : MX-LM98 / 99)

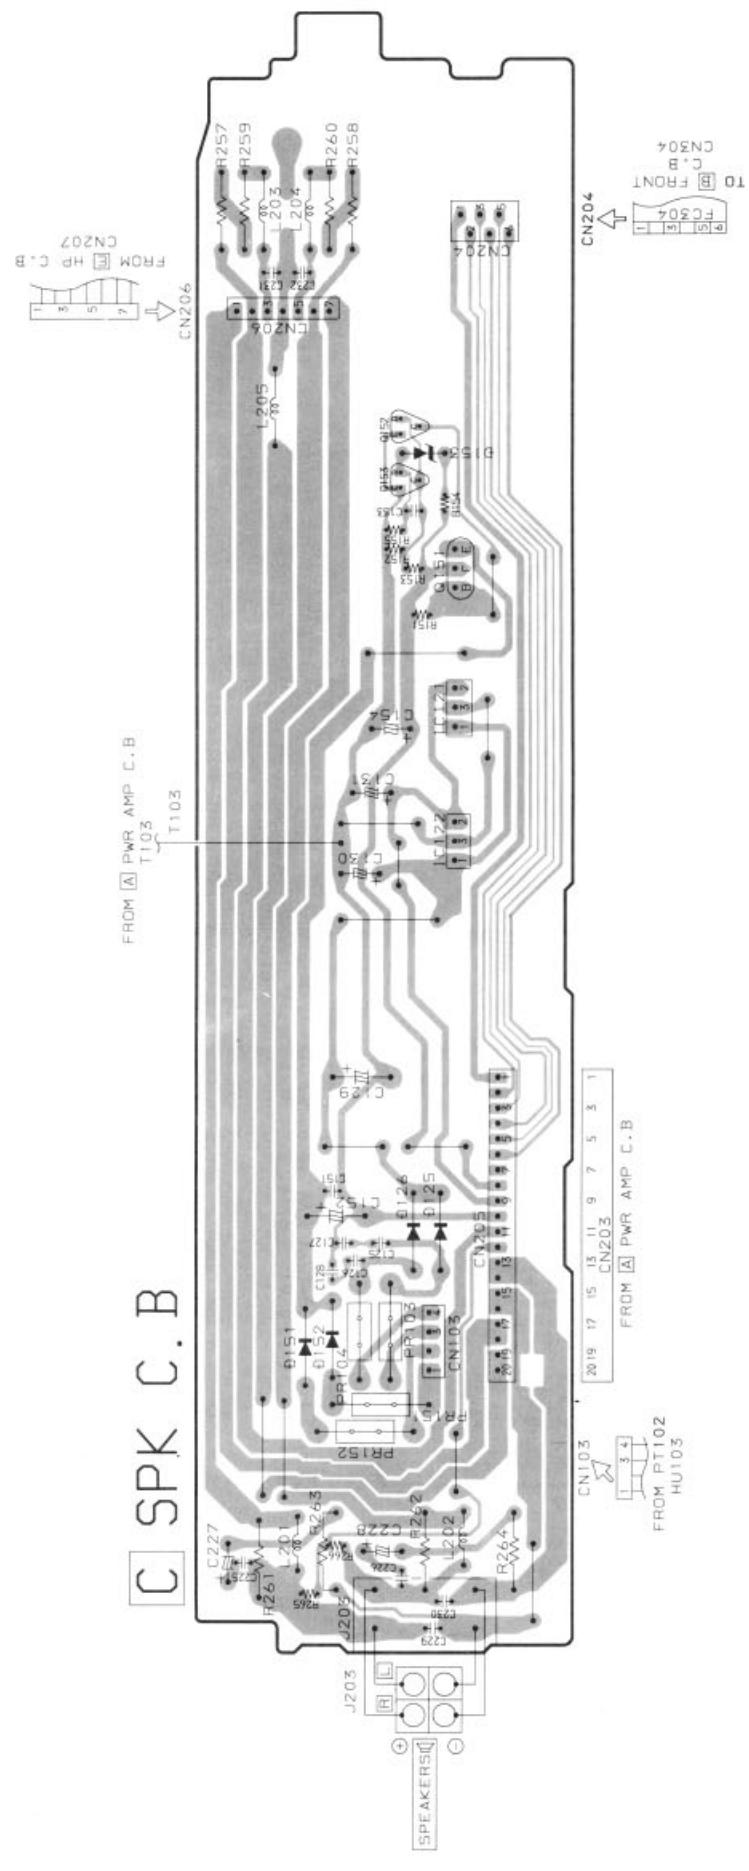


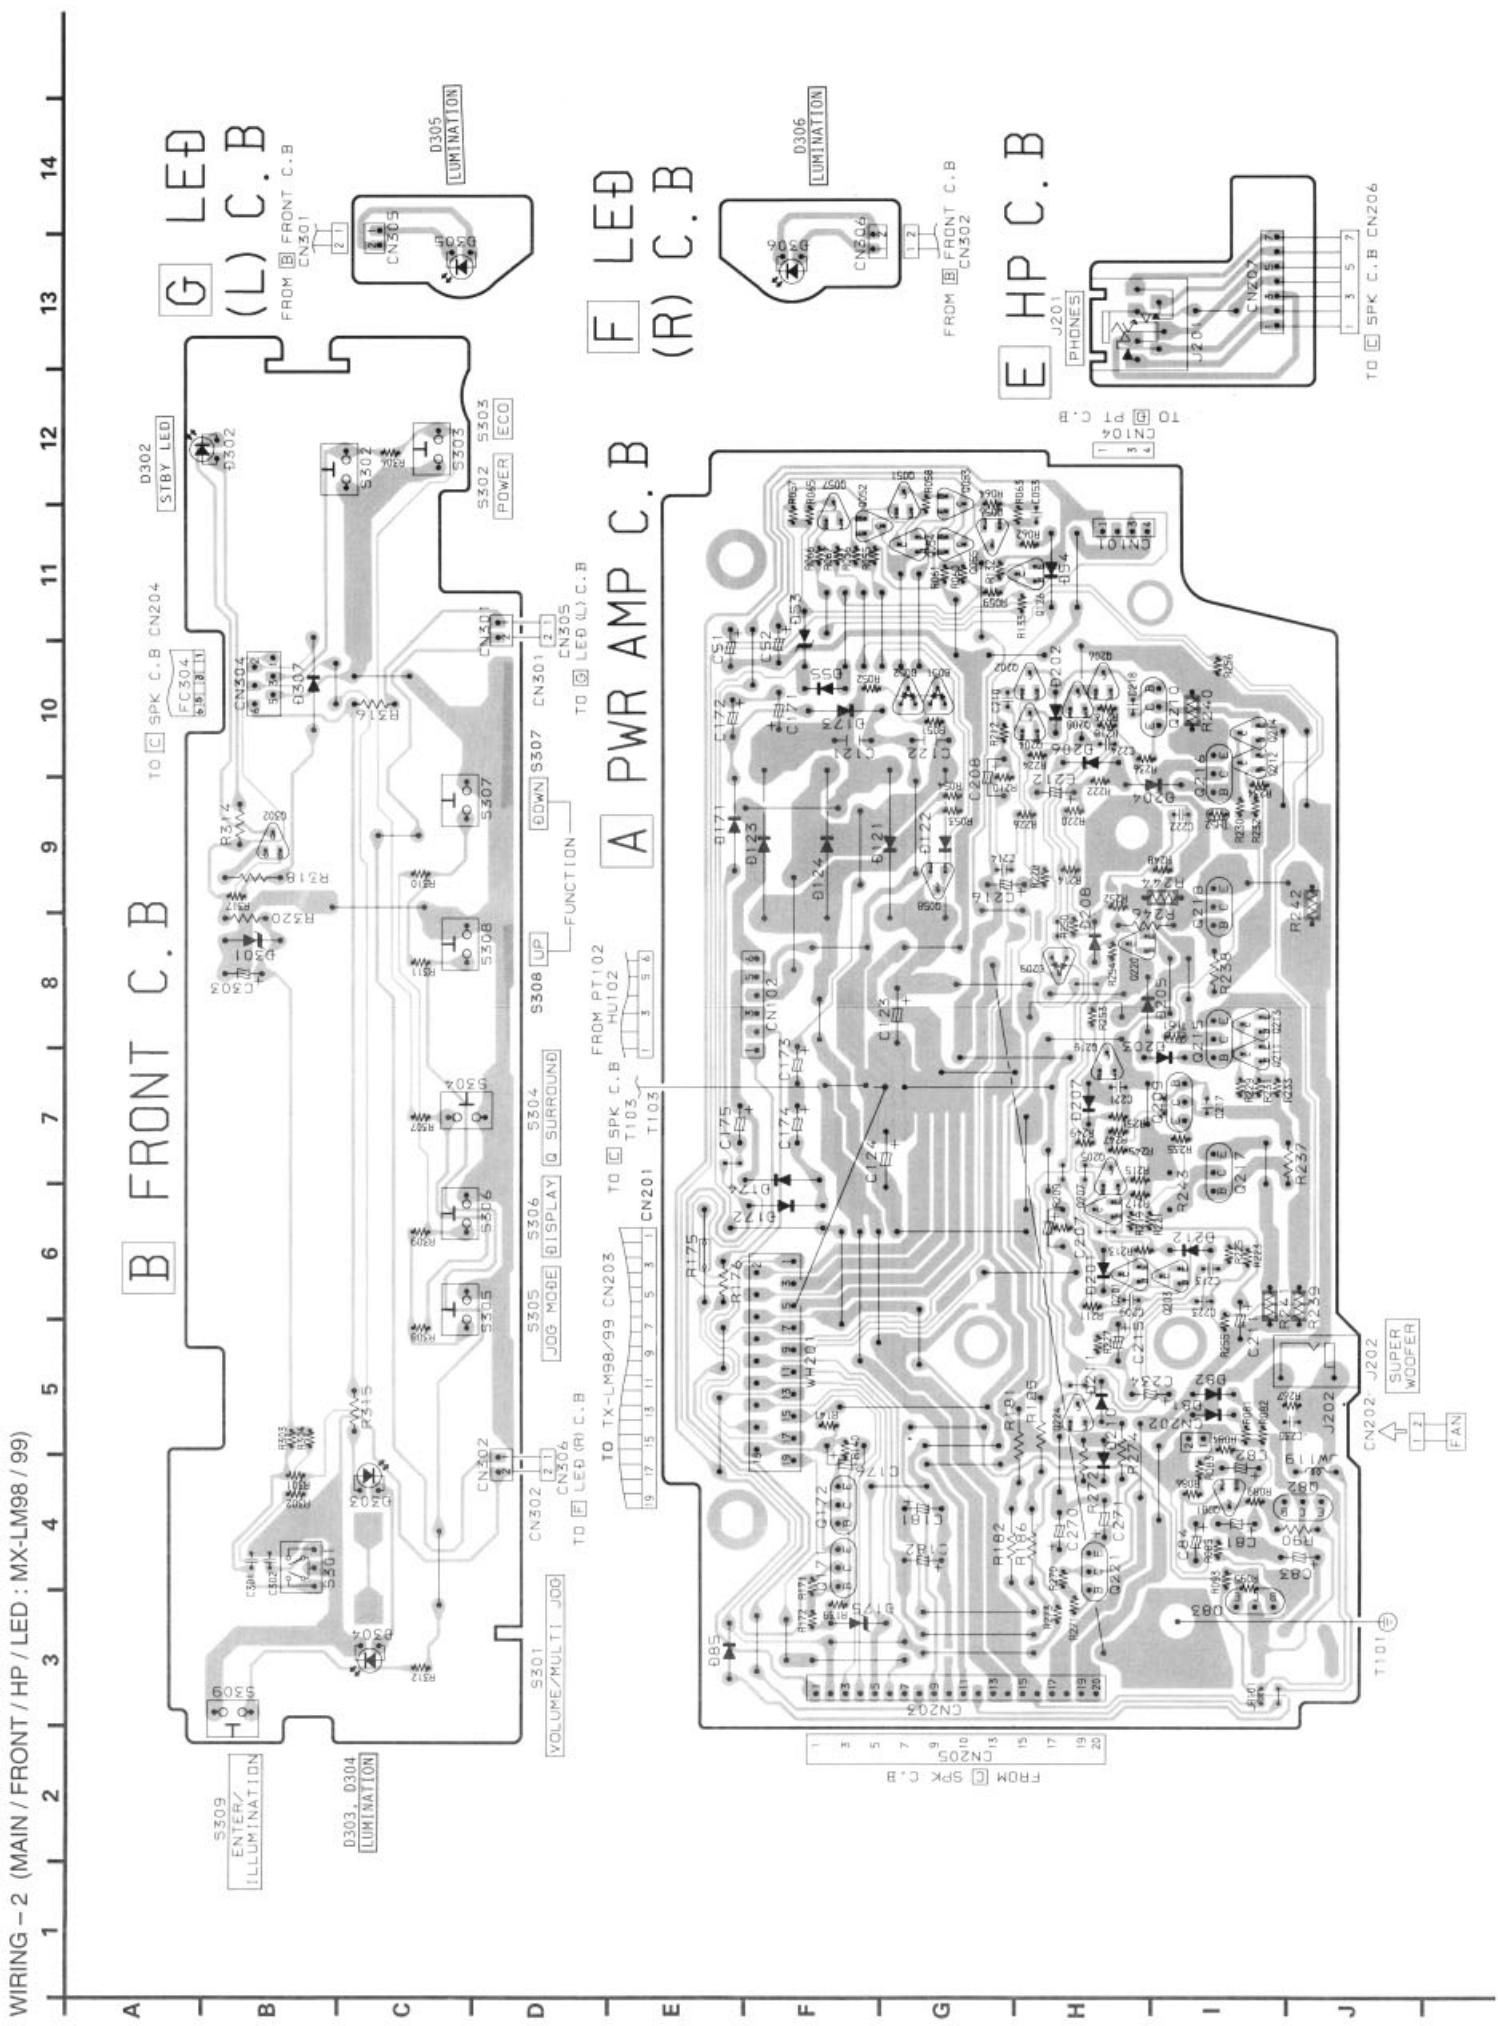

SCHEMATIC DIAGRAM - 1 (PWP AMP / FRONT / SPK / HP / LED : MX-LM98 / 99)

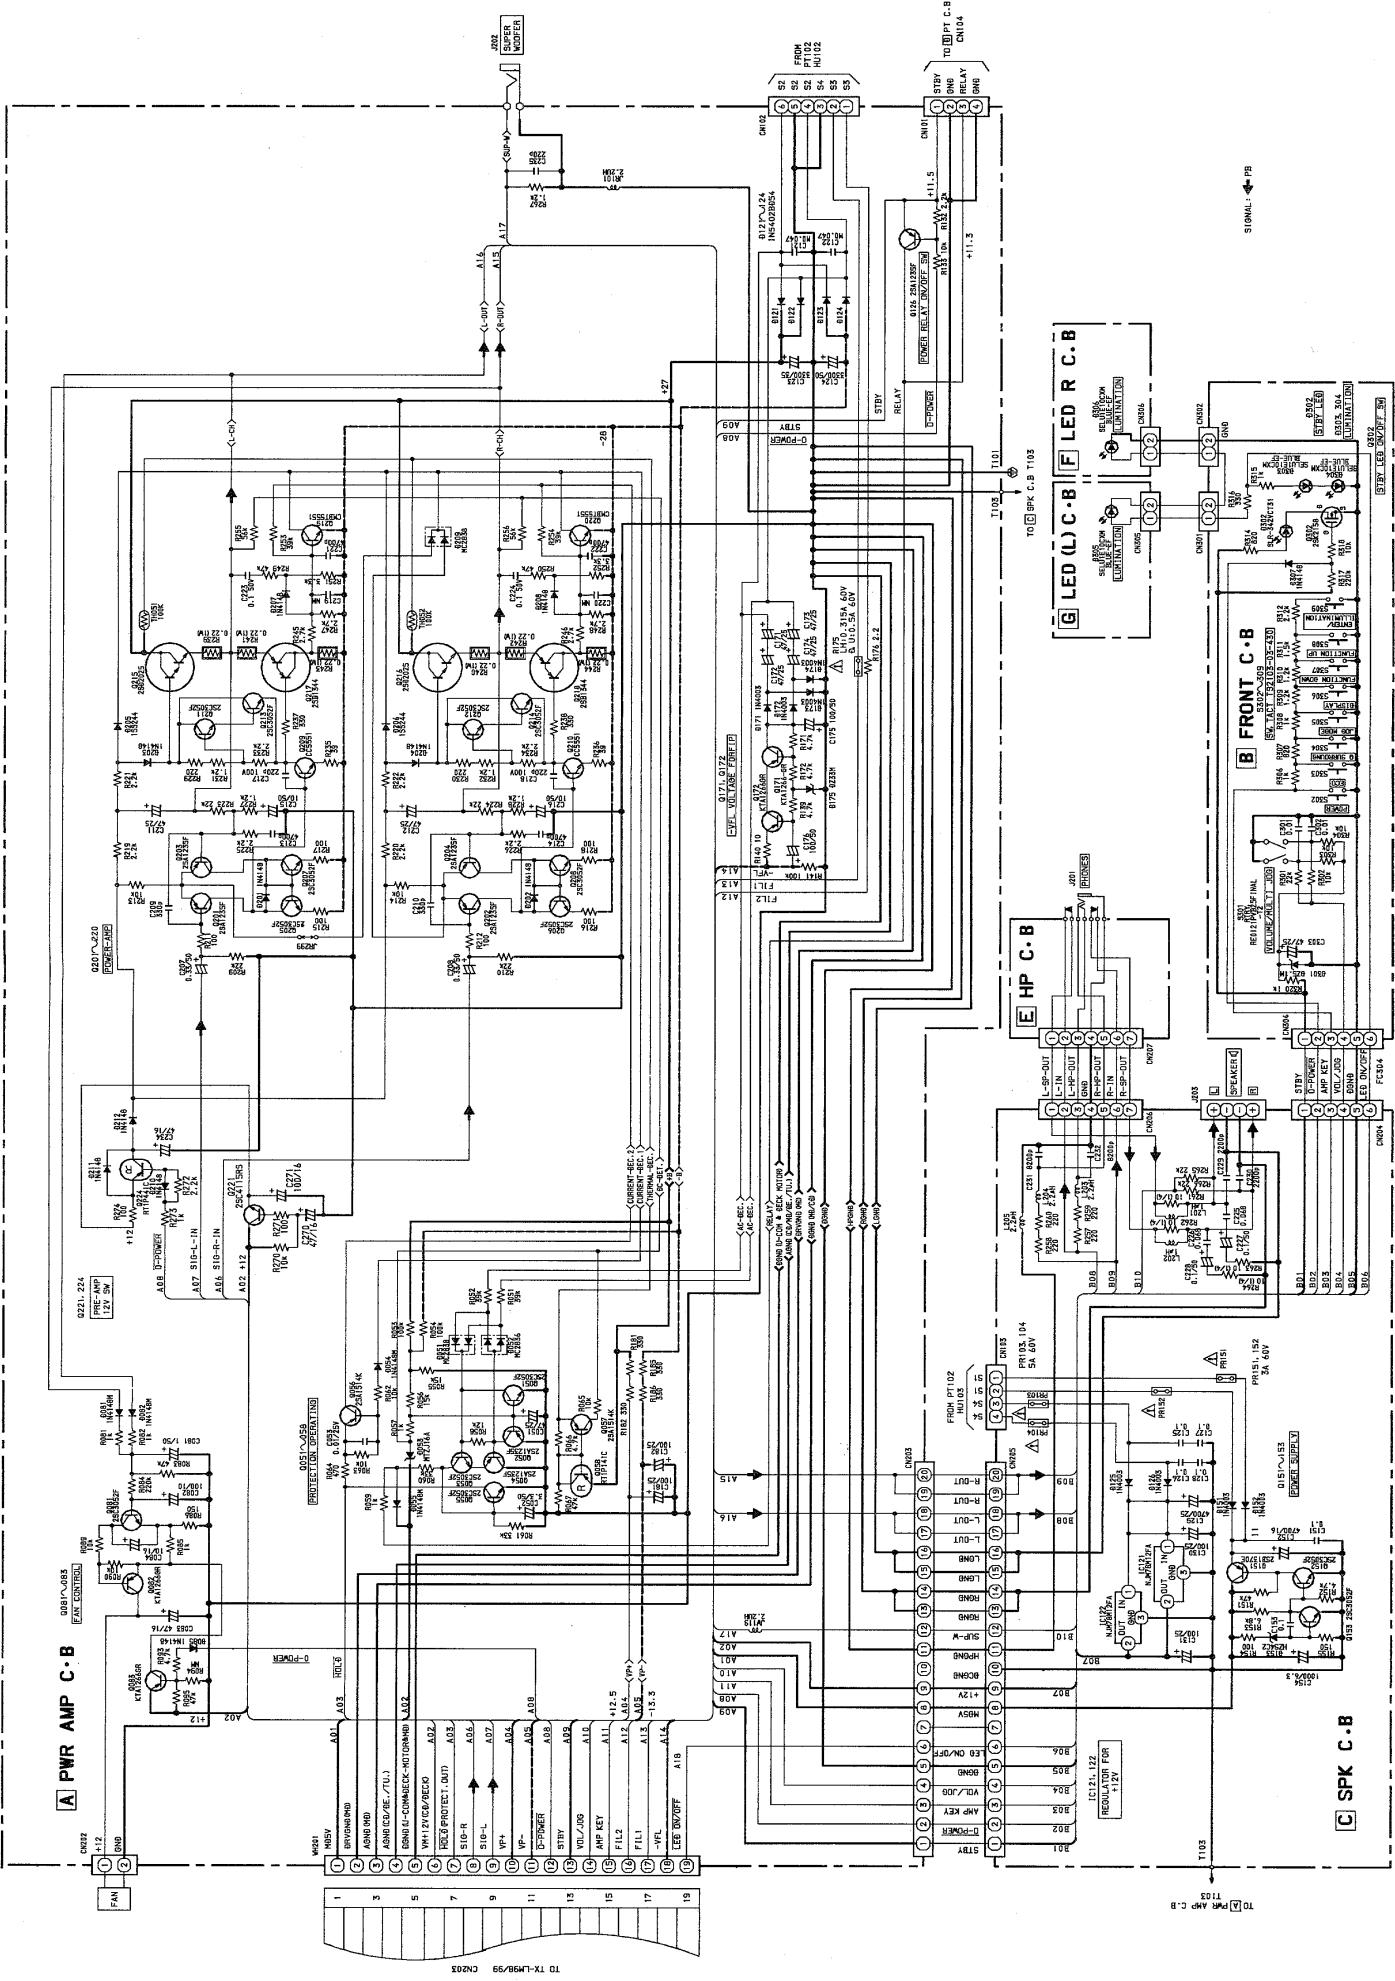

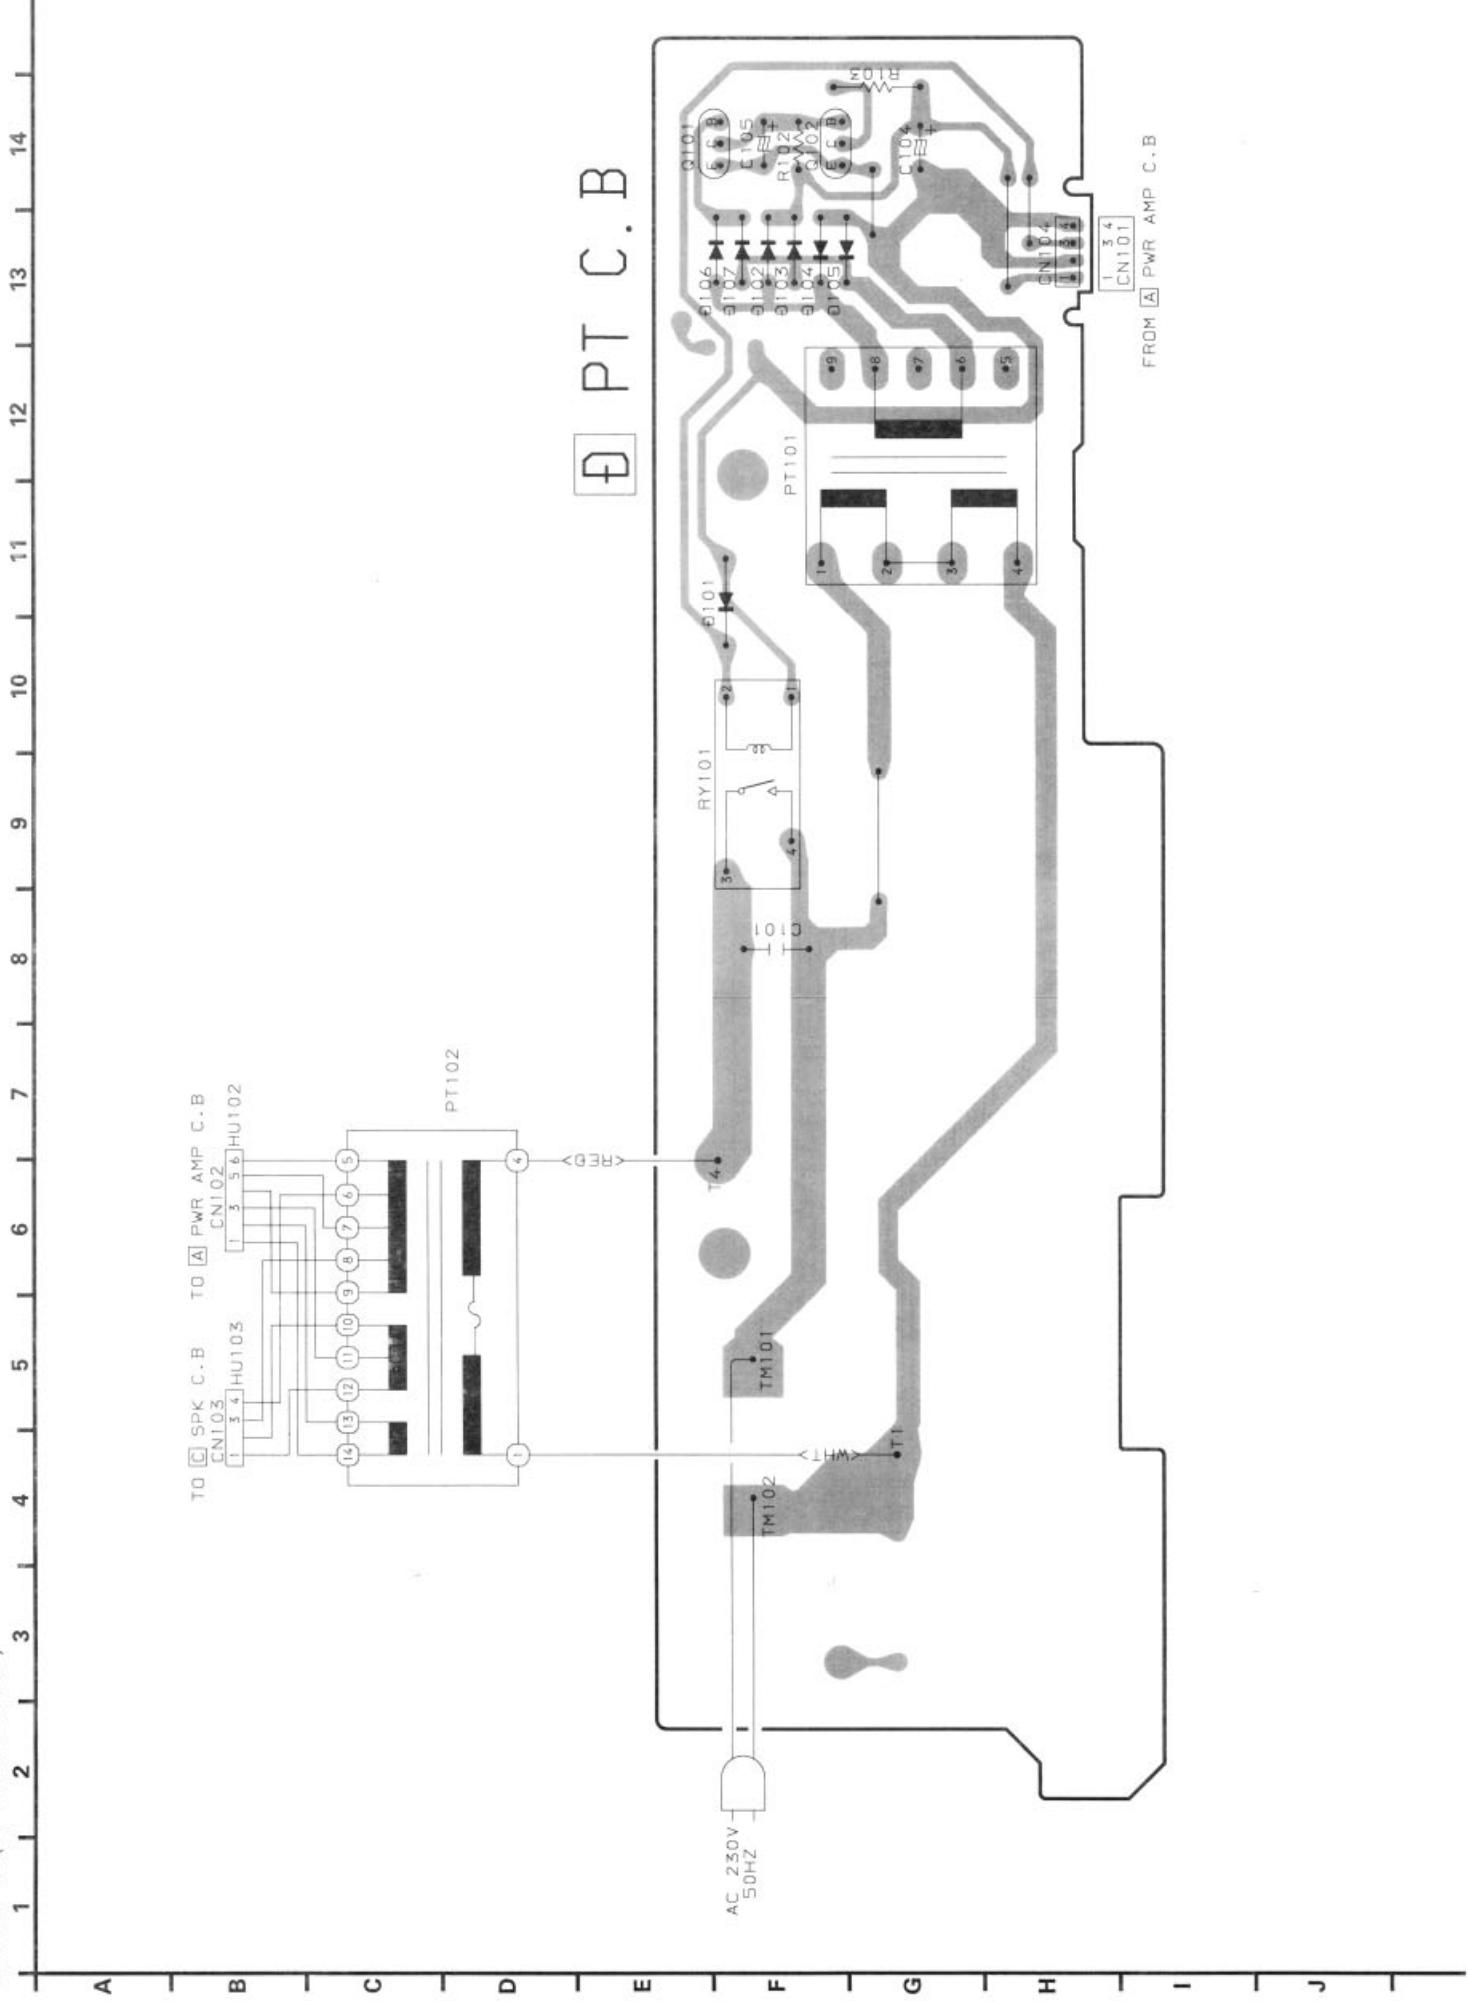

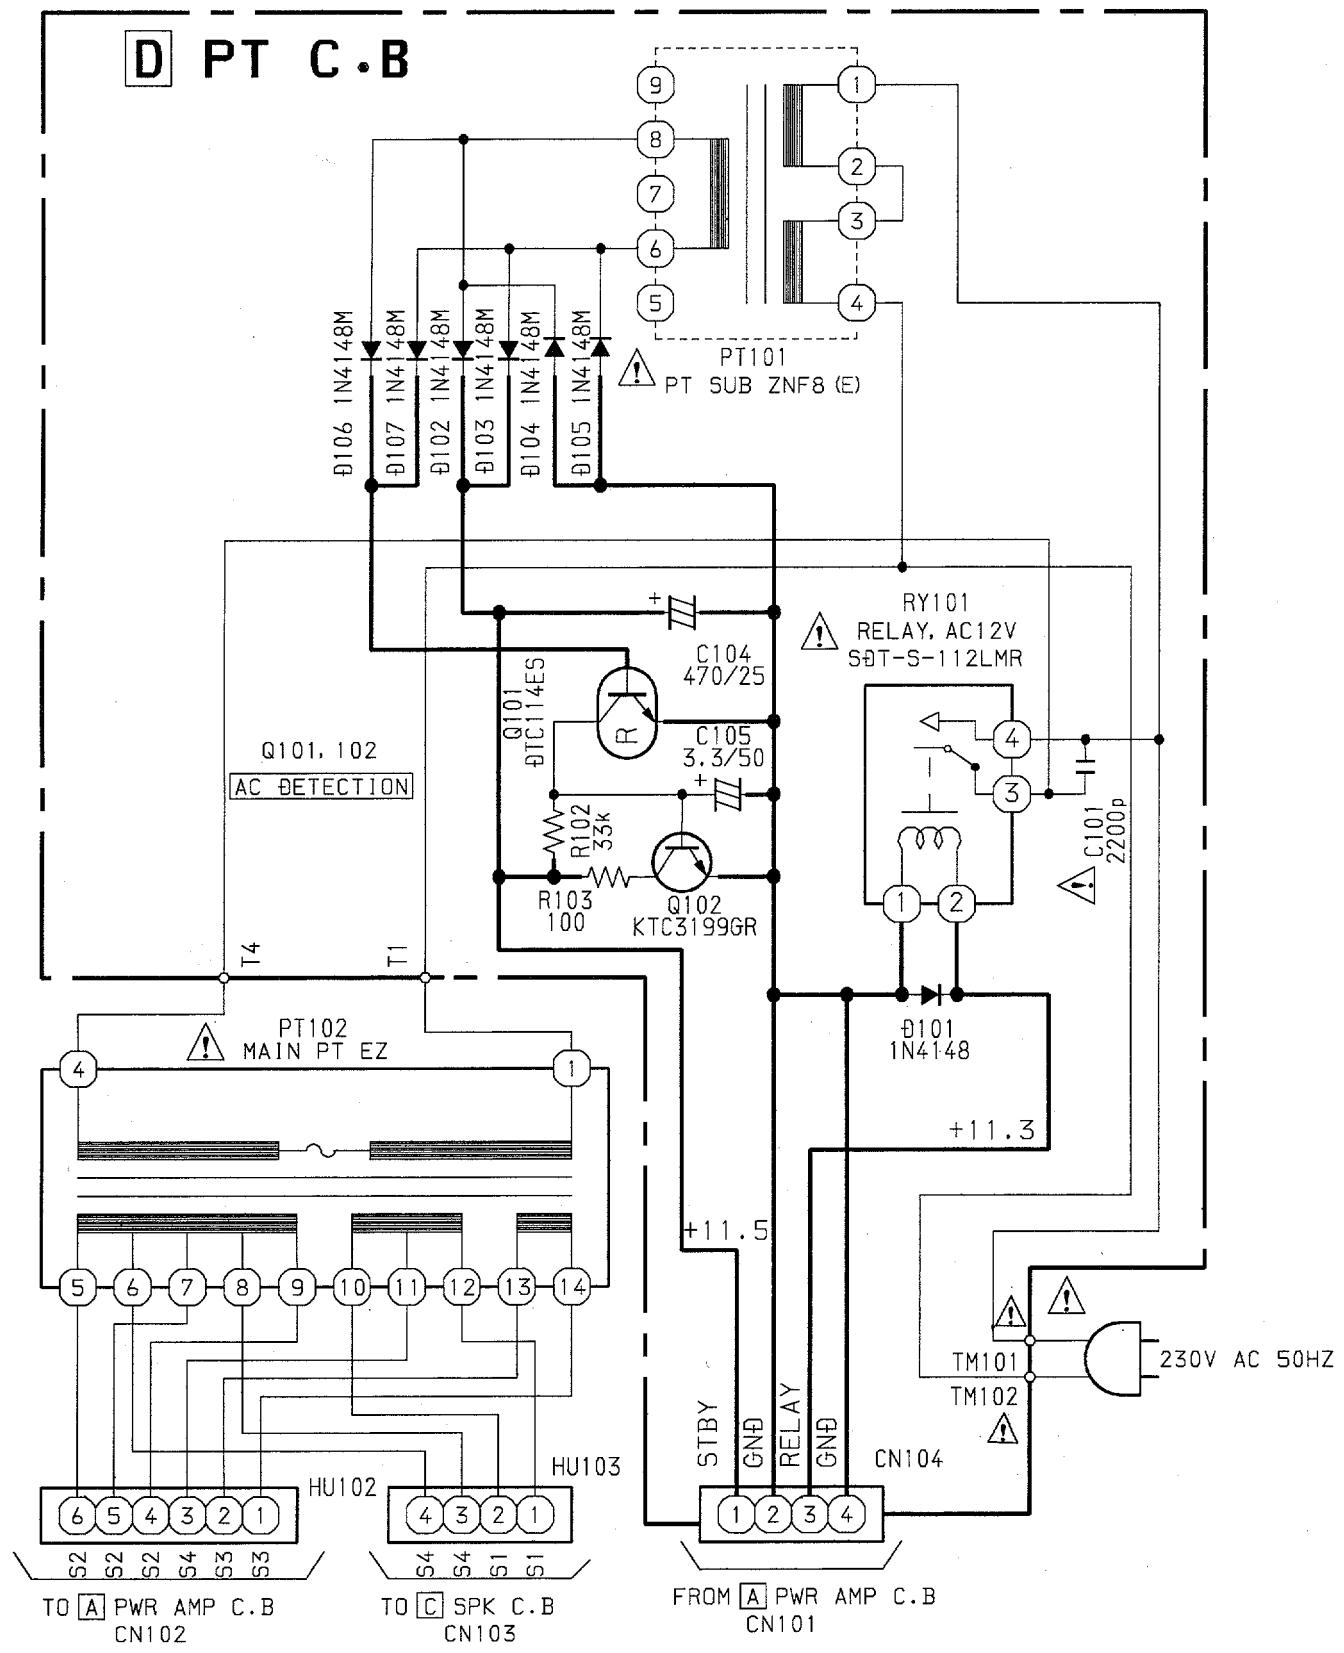


MECHANICAL PARTS LIST 1 / 1 (MX-LM98 / 99)

If can't understand for Description please kindly refer to "REFERENCE NAME LIST".

REF. NO.	PART NO.	KANRI NO.	DESCRIPTION	REF. NO.	PART NO.	KANRI NO.	DESCRIPTION
1	8Z-CE3-013-010		KNOB, RTRY JOG	▲	24	87-A80-092-010	AC CORD ASSY, E BLK SUN FAI<EZ>
2	8Z-CE3-207-010		PLATE, JOG	▲	24	87-A80-108-010	AC CORD ASSY, K BLK 3P<K>
3	8Z-CE3-008-010		REFLECTOR, JOG	25	87-085-185-010	BUSHING, AC CORD (E)	
4	8Z-CC3-007-010		BADGE, AIWA 27.5 ABS SIL	26	81-664-202-010	HOLDER, PCB	
5	8Z-CE3-022-010		CABI, FR AMP (EZ)<EZ>	27	8Z-CE3-006-010	FOOT, DIA40 H4	
5	8Z-CE3-023-010		CABI, FR AMP (K)<K>	28	8Z-CE3-003-010	PANEL, SIDE R HIGH	
6	8Z-CE3-012-010		KEY, ENTER	29	88-805-020-790	CONN ASSY, 2P 70MM	
7	8Z-CE3-011-010		KEY, FUN	A	87-591-095-410	TAPPING SCREW, QIT+3-8 (GLD)	
8	8Z-CE3-009-010		REFLECTOR, POWER	B	88-AR1-217-010	S-SCREW, BFT2+3-8	
9	8Z-CE3-010-010		KEY, POWER	C	87-078-060-010	BVIT3PB+3-10	
10	88-906-121-110		FF-CABLE, 6P	D	87-067-703-010	TAPPING SCREW, BVT2+3-10	
11	8Z-CE3-007-010		REFLECTOR, FR	E	87-067-761-010	BVT2+3-10 BLK	
12	8Z-CE3-204-010		GUIDE, LED R	F	87-067-586-010	TAPPING SCREW, BVT2+4-8	
13	8Z-CE3-202-010		GUIDE, LED CNT	G	87-067-660-010	BVT2+3-8 W/O SLOT BLK	
14	8Z-CE3-203-010		GUIDE, LED L	H	87-067-689-010	TAPPING SCREW, BVTT+3-8	
15	8Z-CE3-002-010		PANEL, SIDE L HIGH	I	87-067-581-010	TAPPING SCREW, BVT2+3-15	
16	8Z-CE3-208-010		PLATE, TOP AMP				
17	8Z-CE3-005-010		PANEL, TOP				
18	8Z-CL1-663-010		FAN, MF40D-12-200MM				
19	8Z-CE3-014-010		COVER, FAN				
20	87-A91-438-010		BUSHING, CABLE19P-1.5 SMK				
21	8Z-CE3-610-010		CONN ASSY, 19P 52305-1911				
22	8Z-CE3-020-010		PANEL, REAR AMP (EZ)<EZ>				
22	8Z-CE3-021-010		PANEL, REAR AMP (K)<K>				
23	8Z-CE3-205-010		HLDR, PWB ECO				

COLOR NAME TABLE

Basic color symbol	Color	Basic color symbol	Color	Basic color symbol	Color
B	Black	C	Cream	D	Orange
G	Green	H	Gray	L	Blue
LT	Transparent Blue	N	Gold	P	Pink
R	Red	S	Silver	ST	Titan Silver
T	Brown	V	Violet	W	White
WT	Transparent White	Y	Yellow	YT	Transparent Yellow
LM	Metallic Blue	LL	Light Blue	GT	Transparent Green
LD	Dark Blue	DT	Transparent Orange		

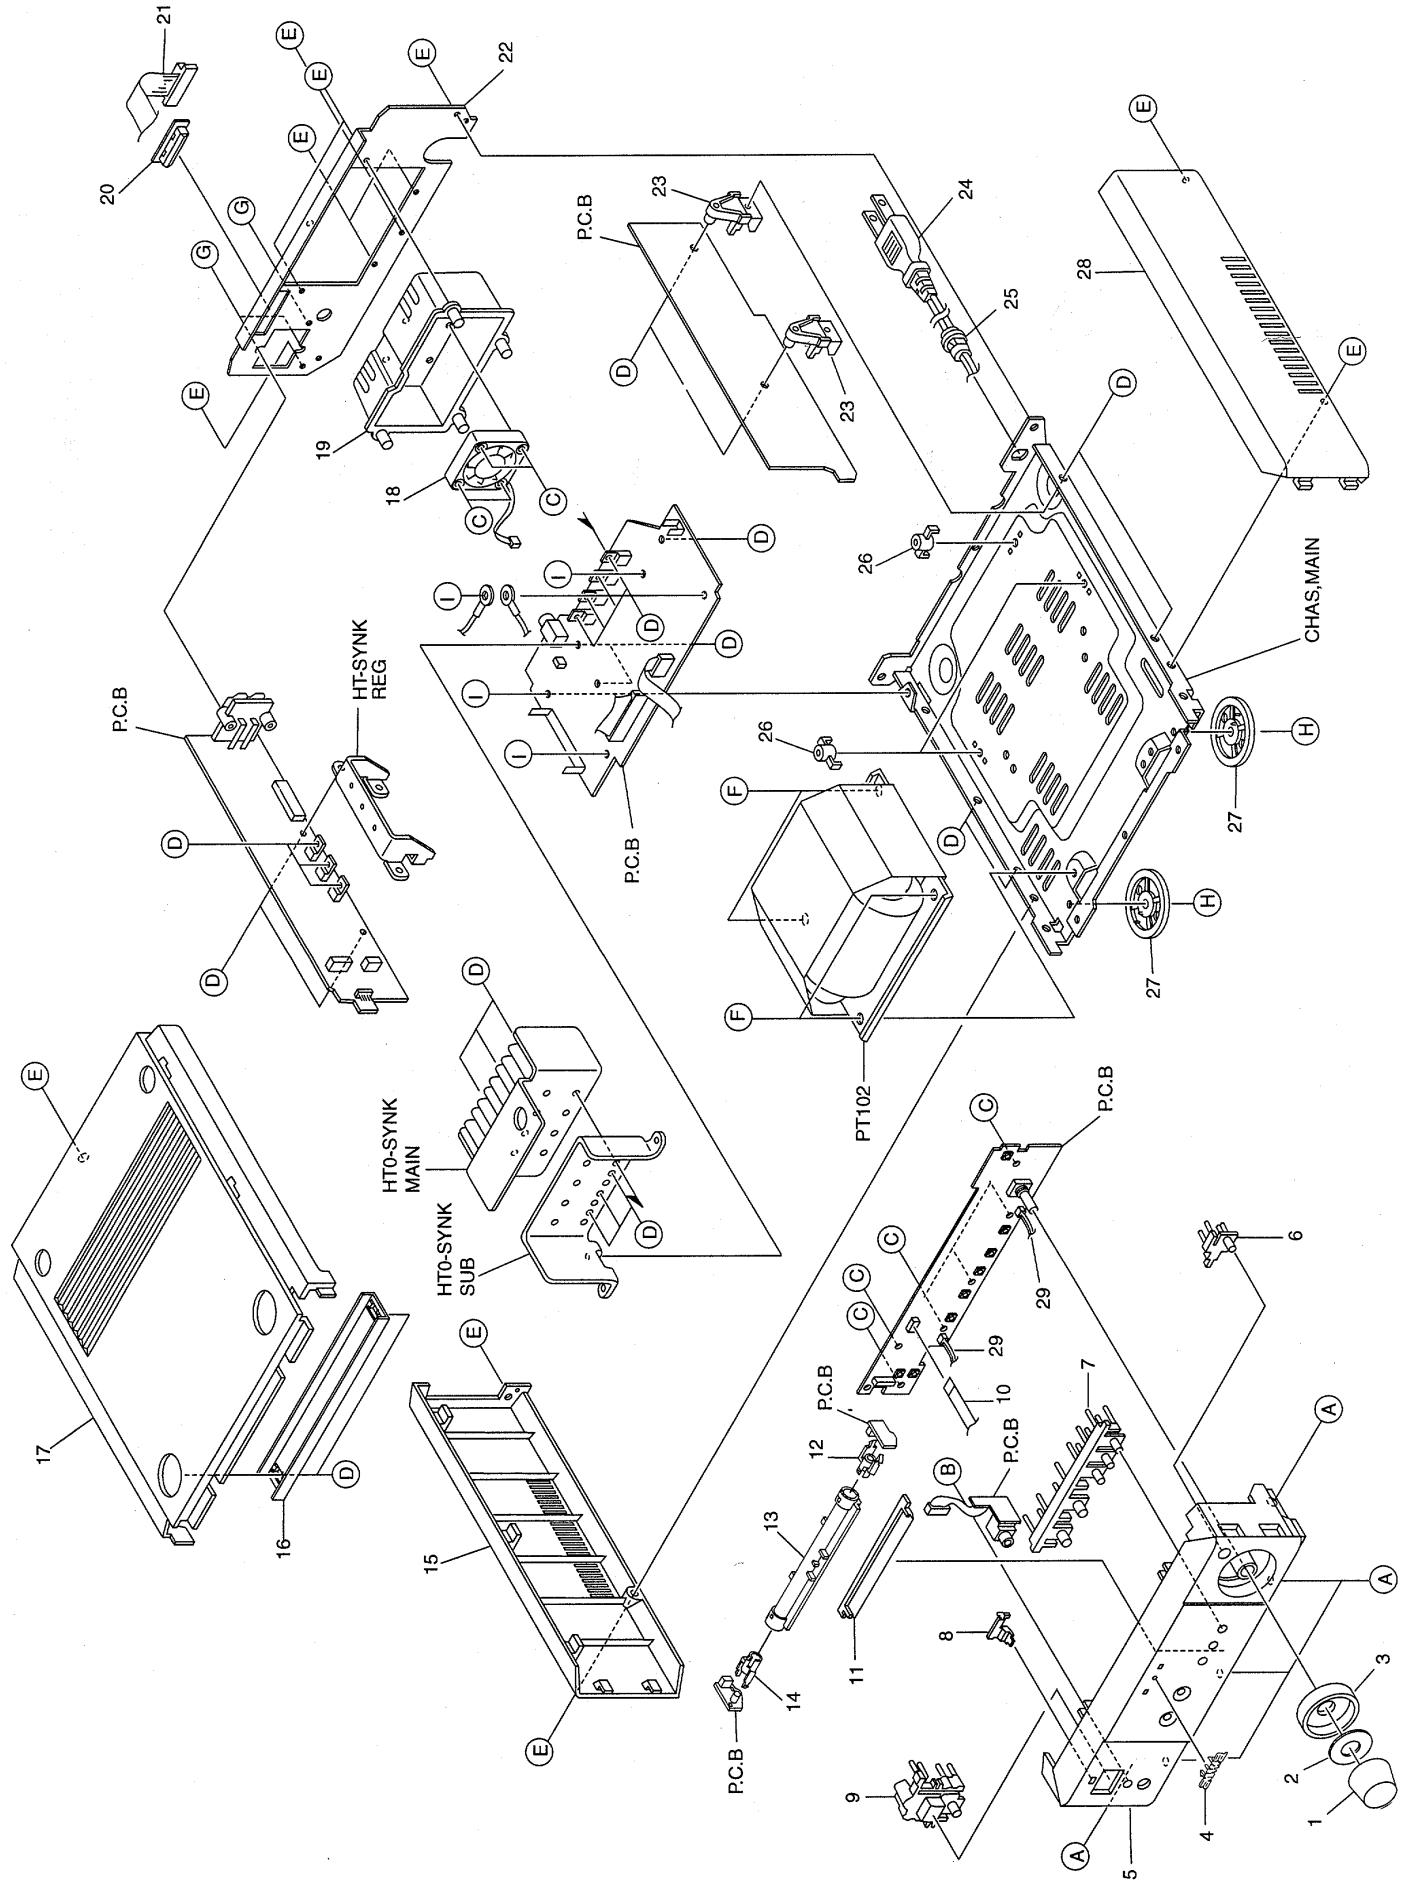

MODEL NO.

TX-LM98/99

DISASSEMBLY INSTRUCTIONS

1. Top Panel and Side Panels L/R Removal

- 1) Remove 3 screws **A** from the rear of unit. (See Fig-1)
- 2) Remove 2 screws **B** from side panels L/R. (See Fig-1)

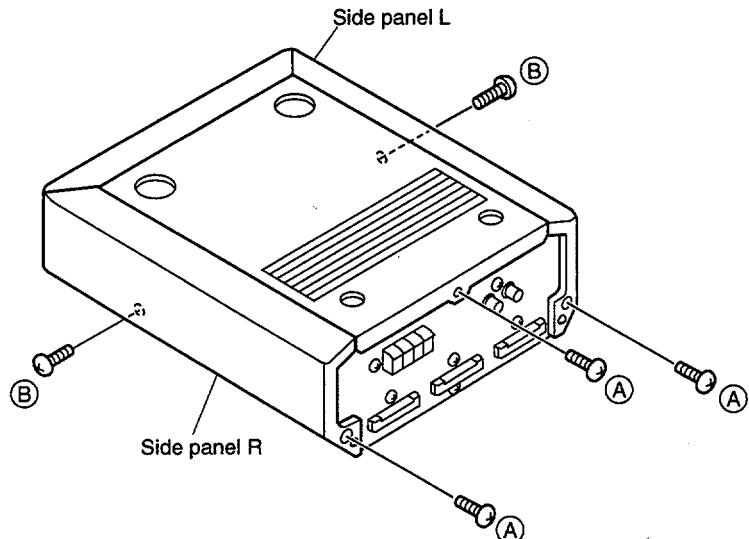


Fig-1

- 3) Remove side panels L/R in the directions of arrows **A** and **B**. (See Fig-2)
- 4) Remove the top panel in the direction of arrow **C**. (See Fig-2)

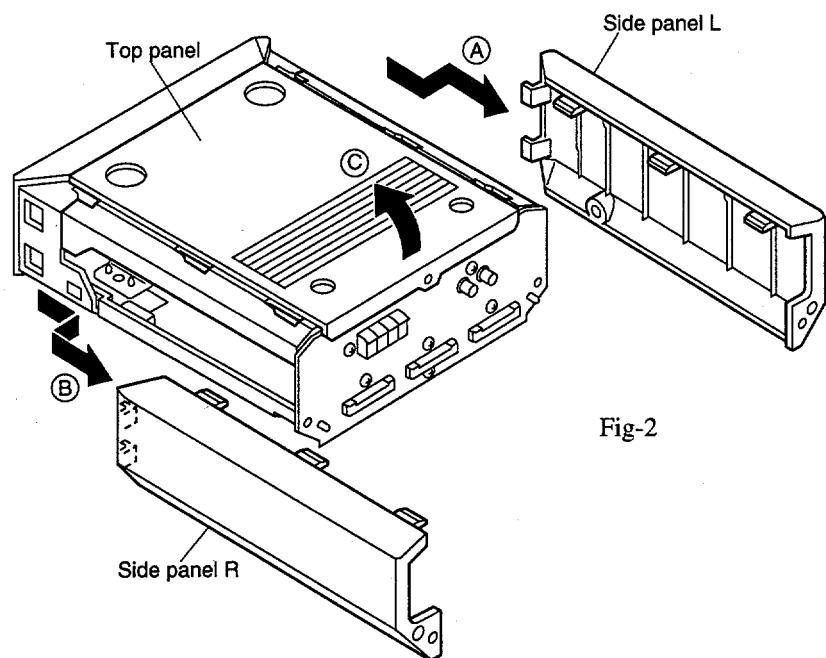


Fig-2

ELECTRICAL MAIN PARTS LIST (TX-LM98 / 99)

If can't understand for Description please kindly refer to "REFERENCE NAME LIST".

REF. NO.	PART NO.	KANRI NO.	DESCRIPTION	REF. NO.	PART NO.	KANRI NO.	DESCRIPTION
IC				C228	87-010-197-080	CAP, CHIP 0.01 DM	
	87-A21-022-040	C-IC, BA3880FS		C229	87-010-402-080	CAP, ELECT 2.2-50V	
	87-A21-103-040	C-IC, MM1454XFBE		C230	87-010-405-080	CAP, ELECT 10-50V	
	87-020-877-010	IC, LC4966		C231	87-010-405-080	CAP, ELECT 10-50V	
	87-A21-111-040	C-IC, M62495FP		C232	87-016-268-080	CAP, E 22-10 M BP SME	
	8Z-CF3-617-010	IC, LC876580W-5M70		C233	87-010-402-080	CAP, ELECT 2.2-50V	
	87-017-915-080	IC, BU4094BCF		C234	87-010-408-080	CAP, ELECT 47-50V	
	87-070-246-010	IC, GPU271X		C235	87-010-237-080	CAP, ELECT 1000-16V	
	87-002-849-080	IC, NJM78L06A		C236	87-010-322-080	CAP, CHIP 100P-50JCH	
	87-070-127-110	IC, LCT2131D		C237	87-010-197-080	CAP, CHIP 0.01 DM	
	87-A20-913-010	IC, LA1837NL		C238	87-010-197-080	CAP, CHIP 0.01 DM	
	87-A20-440-040	C-IC, BU1920FS<YEZ>		C239	87-010-322-080	CAP, CHIP 100P-50JCH	
				C240	87-010-322-080	CAP, CHIP 100P-50JCH	
				C241	87-010-322-080	CAP, CHIP 100P-50JCH	
				C242	87-010-322-080	CAP, CHIP 100P-50JCH	
TRANSISTOR				C243	87-010-322-080	CAP, CHIP 100P-50JCH	
	87-A30-196-080	TR, 2SC4115SRS		C244	87-010-322-080	CAP, CHIP 100P-50JCH	
	87-A30-073-080	C-TR, RT1N 141C		C245	87-010-197-080	CAP, CHIP 0.01 DM	
	87-A30-071-080	C-TR, RT1N 144C		C246	87-010-322-080	CAP, CHIP 100P-50JCH	
	87-A30-072-080	C-TR, RT1P 144C		C247	87-010-322-080	CAP, CHIP 100P-50JCH	
	87-A30-047-080	TR, CSD655E		C248	87-010-322-080	CAP, CHIP 100P-50JCH	
	87-026-297-080	TR, DTA144TK		C249	87-010-322-080	CAP, CHIP 100P-50JCH	
	87-026-609-080	TR, KTA1266GR		C250	87-010-197-080	CAP, CHIP 0.01 DM	
	87-A30-076-080	C-TR, 2SC3052F		C251	87-010-322-080	CAP, CHIP 100P-50JCH	
	87-A30-087-080	C-FET, 2SK2158		C252	87-010-322-080	CAP, CHIP 100P-50JCH	
	89-327-143-080	TR, 2SC2714 (0.1W)		C253	87-018-209-080	CAP, TC U 0.1-50ZF	
	87-026-610-080	TR, KTC3198GR		C254	87-018-209-080	CAP, TC U 0.1-50ZF	
	87-A30-086-070	C-TR, CSD1306E		C301	87-010-401-080	CAP, ELECT 1-50V	
	87-A30-074-080	C-TR, RT1P141C		C302	87-010-401-080	CAP, ELECT 1-50V	
	89-505-434-540	C-FET, 2SK543-TB(4/5)		C303	87-010-196-080	CHIP CAPACITOR, 0.1-25	
DIODE				C304	87-010-196-080	CHIP CAPACITOR, 0.1-25	
	87-A40-291-080	DIODE, 1N4148 (CPT)		C306	87-010-180-080	C-CAP 1500P-50KB	
	87-A40-293-080	ZENER, DZ2.7M		C307	87-010-180-080	CAP CHIP 1500P-50KB	
	87-001-731-080	ZENER, HZS6C2L		C310	87-010-182-080	C-CAP, S 2200P-50 B	
	87-A40-269-080	C-DIODE, MC2836		C311	87-010-182-080	C-CAP, S 2200P-50 B	
	87-A40-270-080	C-DIODE, MC2838		C312	87-010-213-080	C-CAP, S 0.015-50 B	
	87-070-274-080	DIODE, 1N4003 SEM		C313	87-010-213-080	C-CAP, S 0.015-50 B	
	87-020-465-080	DIODE, 1SS133		C314	87-010-400-080	CAP, ELECT 0.47-50V	
	87-017-149-080	ZENER, HZS6A2L		C315	87-010-400-080	CAP, ELECT 0.47-50V	
				C316	87-010-400-080	CAP, ELECT 0.47-50V	
MAIN C.B				C317	87-010-400-080	CAP, ELECT 0.47-50V	
	C201	87-010-381-080	CAP, ELECT 330-16V	C320	87-010-374-080	CAP, ELECT 47-10V	
	C202	87-010-235-080	CAP, E 470-16 SME	C321	87-010-374-080	CAP, ELECT 47-10V	
	C204	87-010-196-080	CHIP CAPACITOR, 0.1-25	C322	87-010-154-080	CAP CHIP 10P	
	C205	87-010-404-080	CAP, ELECT 4.7-50V	C340	87-012-157-080	CAP, CHIP S 330P-50JCH	
	C206	87-010-404-080	CAP, ELECT 4.7-50V	C350	87-010-407-080	CAP, ELECT 33-50V	
	C207	87-010-404-080	CAP, ELECT 4.7-50V	C351	87-010-407-080	CAP, ELECT 33-50V	
	C208	87-010-404-080	CAP, ELECT 4.7-50V	C352	87-010-404-080	CAP, ELECT 4.7-50V	
	C209	87-010-188-080	CAP, CHIP 6800P	C353	87-010-404-080	CAP, ELECT 4.7-50V	
	C210	87-010-188-080	CAP, CHIP 6800P	C354	87-010-188-080	CAP, CHIP 6800P	
	C211	87-012-140-080	CAP 470P	C355	87-010-188-080	CAP, CHIP 6800P	
	C212	87-012-140-080	CAP 470P	C356	87-010-545-080	CAP, ELECT 0.22-50V	
	C213	87-010-178-080	CHIP CAP 1000P	C357	87-010-545-080	CAP, ELECT 0.22-50V	
	C214	87-010-178-080	CHIP CAP 1000P	C358	87-010-197-080	CAP, CHIP 0.01 DM	
	C215	87-010-197-080	CAP, CHIP 0.01 DM	C359	87-012-157-080	CAP, CHIP S 330P-50JCH	
	C216	87-010-197-080	CAP, CHIP 0.01 DM	C401	87-010-196-080	CHIP CAPACITOR, 0.1-25	
	C217	87-010-195-080	C-CAP, S 0.068-25 F	C402	87-010-380-080	CAP, ELECT 47-16V	
	C218	87-010-195-080	C-CAP, S 0.068-25 F	C403	87-010-322-080	C-CAP, S 100P-50 CH	
	C219	87-010-545-080	CAP, ELECT 0.22-50V	C404	87-010-379-080	CAP, E 22-16 M 11L SME	
	C220	87-010-545-080	CAP, ELECT 0.22-50V	C501	87-010-408-080	CAP, ELECT 47-50V	
	C221	87-010-408-080	CAP, ELECT 47-50V	C502	87-010-196-080	CHIP CAPACITOR, 0.1-25	
	C222	87-010-545-080	CAP, ELECT 0.22-50V	C503	87-010-196-080	CHIP CAPACITOR, 0.1-25	
	C223	87-010-545-080	CAP, ELECT 0.22-50V	C504	87-010-196-080	CHIP CAPACITOR, 0.1-25	
	C224	87-010-384-080	CAP, ELECT 100-25V	C505	87-010-156-080	C-CAP, S 15P-50 SL	
	C225	87-010-196-080	CHIP CAPACITOR, 0.1-25	C506	87-010-198-080	CAP, CHIP 0.022	
	C226	87-010-408-080	CAP, ELECT 47-50V	C507	87-010-196-080	CHIP CAPACITOR, 0.1-25	
	C227	87-010-197-080	CAP, CHIP 0.01 DM	C508	87-012-145-080	CAP, CHIP S 270P CH	
				C513	87-010-375-080	CAP, E 330-10 SME	
				C514	87-010-400-040	CAP, E 0.47-50	
				C515	87-010-196-080	CHIP CAPACITOR, 0.1-25	


REF. NO.	PART NO.	KANRI NO.	DESCRIPTION	REF. NO.	PART NO.	KANRI NO.	DESCRIPTION
C516	87-A10-189-040	CAP, E 220-10		C702	87-010-404-080	CAP, ELECT 4.7-50V	
C517	87-010-196-080	CHIP CAPACITOR, 0.1-25		C703	87-012-286-080	CAP, U 0.01-25	
C518	87-010-196-080	CHIP CAPACITOR, 0.1-25		C704	87-012-286-080	CAP, U 0.01-25	
C519	87-010-196-080	CHIP CAPACITOR, 0.1-25		C709	87-012-195-080	C-CAP, U 100P-50CH	
C521	87-010-402-080	CAP, ELECT 2.2-50V		C711	87-010-260-080	CAP, ELECT 47-25V	
C522	87-010-400-080	CAP, ELECT 0.47-50V		C712	87-010-831-080	C-CAP, U, 0.1-16F	
C550	87-010-196-080	CHIP CAPACITOR, 0.1-25		C713	87-012-286-080	CAP, U 0.01-25	
C551	87-010-404-080	CAP, ELECT 4.7-50V		C714	87-012-286-080	CAP, U 0.01-25	
C553	87-010-404-080	CAP, ELECT 4.7-50V		C715	87-012-195-080	C-CAP, U 100P-50CH	
CN201	87-A61-043-010	CONN, 20P H BLK 52641-2011		C717	87-012-286-080	CAP, U 0.01-25	
CN202	87-A61-044-010	CONN, 19P H BLUE 52641-1914		C719	87-012-286-080	CAP, U 0.01-25	
CN203	87-A61-042-010	CONN, 19P H BLK 52641-1911		C720	87-012-195-080	C-CAP, U 100P-50CH	
CN204	87-A61-025-010	CONN, 4P TKC-M4P-B1		C721	87-012-176-080	CAP, 15P	
CN205	87-009-788-010	CONN, 14P VBLK TKC-M<YK>		C722	87-012-176-080	CAP, 15P	
CN205	87-099-546-010	CONN, 16P VBLK TKC-M<YEZ>		C723	87-012-274-080	CHIP CAP, U 1000P-50B	
CN206	87-A60-050-010	CONN, 20P V 9604S-20C		C725	87-018-131-080	CAP, TC U 1000P-50 KB	
CN207	87-A60-041-010	CONN, 30P V 9604S-30C		C727	87-010-196-080	CHIP CAPACITOR, 0.1-25	
CN208	87-A60-059-010	CONN, 08P V 9604S-08C		C728	87-010-248-080	CAP, ELECT 220-10V	
FC206	88-920-151-110	FF-CABLE, 20P 1.25		C729	87-012-274-080	CHIP CAP, U 1000P-50B	
FC207	88-930-151-110	FF-CABLE, 30P 1.25		C731	87-012-286-080	CAP, U 0.01-25	
FC208	88-908-151-110	FF-CABLE, 8P 1.25-150MM		C733	87-012-280-080	C-CAP, U 3300P-50 KB	
L501	87-A50-052-010	COIL, CLOCK 5.76MHZ T1		C734	87-012-280-080	C-CAP, U 3300P-50 KB	
FRONT C.B				C752	87-012-282-080	C-CAP, U 4700P-50 KB	
				C753	87-012-195-080	C-CAP, U 100P-50 J CH	
				C755	87-012-286-080	CAP, U 0.01-25	
C701	87-010-178-080	CHIP CAP 1000P		C756	87-012-286-080	CAP, U 0.01-25	
C702	87-010-405-080	CAP, ELECT 10-50V		C757	87-012-188-080	C-CAP, U 47P-50 CH	
CN701	87-A60-041-010	CONN, 30P V 9604S-30C		C758	87-012-167-080	C-CAP, U 5P-50 CH	
CN702	87-A60-050-010	CONN, 20P V 9604S-20C		C761	87-010-196-080	C-CAP, S 0.1-25 ZF	
CN706	88-805-021-590	CONN ASSY, 2P		C762	87-012-286-080	CAP, U 0.01-25	
CN707	88-805-020-790	CONN ASSY, 2P 70MM		C763	87-010-829-080	CAP, U 0.047-16	
CN710	87-A60-059-010	CONN, 08P V 9604S-08C		C765	87-012-286-080	CAP, U 0.01-25	
FL701	8Z-CL4-621-010	FL, 13-ST-36GNK		C766	87-010-197-080	C-CAP, S 0.01-25 KB	
S701	87-A90-696-080	SW, TACT TS2103-03-430		C768	87-012-286-080	CAP, U 0.01-25	
S702	87-A90-696-080	SW, TACT TS2103-03-430		C769	87-010-260-080	CAP, ELECT 47-25V	
S703	87-A90-696-080	SW, TACT TS2103-03-430		C770	87-010-829-080	CAP, U 0.047-16	
S704	87-A90-696-080	SW, TACT TS2103-03-430		C771	87-010-383-080	CAP, ELECT 33-25V	
S705	87-A90-696-080	SW, TACT TS2103-03-430		C772	87-010-829-080	CAP, U 0.047-16	
S706	87-A90-696-080	SW, TACT TS2103-03-430		C773	87-010-196-080	CHIP CAPACITOR, 0.1-25	
S707	87-A90-696-080	SW, TACT TS2103-03-430		C774	87-010-263-080	CAP, ELECT 100-10V	
LED R C.B				C775	87-010-404-080	CAP, ELECT 4.7-50V	
				C776	87-012-286-080	CAP, U 0.01-25	
CN709	87-A60-619-010	CONN, 2P V 2MM JMT		C777	87-010-493-080	CAP, E 0.47-50 M 5L SRE	
D711	87-A40-640-010	LED, SELU1E10CXM BLUE-EF		C778	87-010-401-080	CAP, ELECT 1-50V	
LED L C.B				C779	87-010-401-080	CAP, ELECT 1-50V	
CN708	87-A60-619-010	CONN, 2P V 2MM JMT		C780	87-010-196-080	CHIP CAPACITOR, 0.1-25	
D710	87-A40-640-010	LED, SELU1E10CXM BLUE-EF		C781	87-010-405-080	CAP, ELECT 10-50V	
CONN C.B				C782	87-010-405-080	CAP, ELECT 10-50V	
CN704	87-099-570-010	CONN, 13P VTUC-P13P-B1<YK>		C783	87-012-286-080	CAP, U 0.01-25	
CN704	87-A60-189-010	CONN, 16P VTUC-P16P-B1<YEZ>		C784	87-012-286-080	CAP, U 0.01-25	
CN705	87-009-799-010	CONN, 14P H BLK TKC-M<YK>		C785	87-010-401-080	CAP, ELECT 1-50V	
CN705	87-009-800-010	CONN, 16P H BLK TKC-M<YEZ>		C786	87-010-401-080	CAP, ELECT 1-50V	
JACK C.B				C787	87-012-275-080	C-CAP, U 1200P-50 B	
C703	87-012-157-080	C-CAP, S 330P-50 JCH GRM		C788	87-012-275-080	C-CAP, U 1200P-50 B	
C704	87-012-157-080	C-CAP, S 330P-50 JCH GRM		C789	87-012-275-080	C-CAP, U 1200P-50 B	
C706	87-010-322-080	CAP, CHIP 100P-50JCH		C790	87-012-275-080	C-CAP, U 1200P-50 B	
CN703	87-A61-024-010	CONN, 4P H BLK TKC-M		C791	87-010-405-080	CAP, ELECT 10-50V	
J701	80-MT3-631-010	JACK, PIN 2P EARTH		C793	87-012-273-080	C-CAP, U 820P-50 B	
R780	87-008-372-080	FILTER, EMI BL OIRNI<YEZ>		C794	87-010-406-080	CAP, ELECT 22-50	
R781	87-008-372-080	FILTER, EMI BL OIRNI<YEZ>		C795	87-010-596-080	CAP, S 0.047-16	
TUNER C.B<YK>				C796	87-010-403-080	CAP, ELECT 3.3-50V	
C701	87-010-381-080	CAP, ELECT 330-16V		C797	87-012-276-080	C-CAP, U 1500P-50 KB	
				C798	87-012-276-080	C-CAP, U 1500P-50 KB	
				C799	87-010-829-080	CAP, U 0.047-16	
				C812	87-012-286-080	CAP, U 0.01-25	
				C814	87-012-286-080	CAP, U 0.01-25	
				C820	87-010-260-080	CAP, ELECT 47-25V	
				C821	87-012-286-080	CAP, U 0.01-25	
				C822	87-012-286-080	CAP, U 0.01-25	
				C823	87-012-286-080	CAP, U 0.01-25	

REF. NO.	PART NO.	KANRI NO.	DESCRIPTION	REF. NO.	PART NO.	KANRI NO.	DESCRIPTION
C828	87-010-196-080		CHIP CAPACITOR, 0.1-25	C758	87-012-167-080		C-CAP, U 5P-50 CH
C829	87-010-196-080		CHIP CAPACITOR, 0.1-25	C761	87-010-196-080		C-CAP, S 0.1-25 ZF
C859	87-012-286-080		C-CAP, U 0.01-25 KB	C762	87-012-286-080		CAP, U 0.01-25
C861	87-012-199-080		C-CAP, U 220P-50 J CH	C763	87-010-829-080		CAP, U 0.047-16
C862	87-012-199-080		C-CAP, U 220P-50 J CH	C765	87-012-286-080		CAP, U 0.01-25
C863	87-012-270-080		C-CAP, U 470P-50 KB	C766	87-010-197-080		C-CAP, S 0.01-25 KB
C864	87-010-405-080		CAP, E 10-50 M 11L SME	C768	87-012-286-080		CAP, U 0.01-25
C865	87-010-196-080		C-CAP, S 0.01-25 ZF	C769	87-010-260-080		CAP, ELECT 47-25V
C866	87-010-405-080		CAP, E 10-50 M 11L SME	C770	87-010-829-080		CAP, U 0.047-16
C867	87-012-286-080		C-CAP, U 0.01-25 KB	C771	87-010-383-080		CAP, ELECT 33-25V
C868	87-012-184-080		C-CAP, U 33P-50 J CH	C772	87-010-829-080		CAP, U 0.047-16
C869	87-012-180-080		C-CAP, U 22P-50 J CH	C773	87-010-196-080		CHIP CAPACITOR, 0.1-25
C940	87-012-286-080		C-CAP, U 0.01-25 KB	C774	87-010-263-080		CAP, ELECT 100-10V
C942	87-012-172-080		C-CAP, U 10P-50 D CH	C775	87-010-404-080		CAP, ELECT 4.7-50V
C947	87-012-286-080		C-CAP, U 0.01-25 KB	C776	87-012-286-080		CAP, U 0.01-25
C949	87-A10-039-080		C-CAP, U 470P-50 J CH	C777	87-010-493-080		CAP, E 0.47-50 M 5L SRE
C952	87-012-286-080		C-CAP, U 0.01-25 KB	C778	87-010-401-080		CAP, ELECT 1-50V
C958	87-010-197-080		C-CAP, S 0.01-25 KB	C779	87-010-401-080		CAP, ELECT 1-50V
C959	87-010-831-080		C-CAP, U 0.1-16 ZF	C780	87-010-196-080		CHIP CAPACITOR, 0.1-25
C960	87-010-196-080		CHIP CAPACITOR, 0.1-25	C781	87-010-405-080		CAP, ELECT 10-50V
C962	87-010-401-080		CAP, E 1-50 M 11L SME	C782	87-010-405-080		CAP, ELECT 10-50V
CF801	87-008-423-010		FLTR, CF SFE10.7MS3G-A	C783	87-012-286-080		CAP, U 0.01-25
CF802	82-785-747-010		CF, MS2 GHY R	C784	87-012-286-080		CAP, U 0.01-25
CN701	87-A60-700-010		CONN, 13P H GRY TUC-P13X-C1	C785	87-010-401-080		CAP, ELECT 1-50V
FFE801	A8-6ZA-191-130		6ZA-1 FEENM	C786	87-010-401-080		CAP, ELECT 1-50V
J801	87-033-241-010		TERMINAL, ANT 2P AJ-2039	C787	87-012-275-080		C-CAP, U 1200P-50 B
L771	87-A50-266-010		COIL, FM DET-2N(TOK)	C788	87-012-275-080		C-CAP, U 1200P-50 B
L772	87-A90-733-010		FLTR, PCFAZH-450(TOK)	C789	87-012-275-080		C-CAP, U 1200P-50 B
L781	87-005-847-010		COIL, 2.2UH K CECS	C790	87-012-275-080		C-CAP, U 1200P-50 B
L791	87-A50-027-010		COIL, 1 POLE MPX(TOK)	C791	87-010-405-080		CAP, ELECT 10-50V
L792	87-A50-027-010		COIL, 1 POLE MPX(TOK)	C793	87-012-273-080		C-CAP, U 820P-50 B
L832	87-005-847-080		COIL, 2.2UH K CECS	C794	87-010-406-080		CAP, ELECT 22-50
L851	87-005-847-080		COIL, 2.2UH K CECS	C795	87-010-596-080		CAP, S 0.047-16
L941	87-A50-020-010		COIL, ANT LW(COI) 252KHZ	C796	87-010-403-080		CAP, ELECT 3.3-50V
L942	87-A50-019-010		COIL, OSC LW(COI) 856KHZ	C797	87-012-276-080		CAP, CHIP SS 1500 PBK
L981	87-NF4-651-110		COIL, AM PACK 2N(TOM)	C798	87-012-276-080		CAP, CHIP SS 1500 PBK
TC942	87-011-164-010		TRIMMER, CER 30P 4.5X3.9 VCT31	C799	87-010-829-080		CAP, U 0.047-16
X721	87-A70-061-010		VIB, XTAL 4.500MHZ CSA-309	C812	87-012-286-080		CAP, U 0.01-25
X851	87-A70-091-010		VIB, XTAL 4.332MHZ CSA-309	C814	87-012-286-080		CAP, U 0.01-25
				C820	87-010-260-080		CAP, ELECT 47-25V
TUNER C.B<YEZ>				C821	87-012-286-080		CAP, U 0.01-25
C701	87-010-381-080		CAP, ELECT 330-16V	C822	87-012-286-080		CAP, U 0.01-25
C702	87-010-404-080		CAP, ELECT 4.7-50V	C823	87-012-286-080		CAP, U 0.01-25
C703	87-012-286-080		CAP, U 0.01-25	C828	87-010-196-080		CHIP CAPACITOR, 0.1-25
C704	87-012-286-080		CAP, U 0.01-25	C829	87-010-196-080		CHIP CAPACITOR, 0.1-25
C709	87-012-195-080		C-CAP, U 100P-50CH	C859	87-012-286-080		C-CAP, U 0.01-25 KB
C711	87-010-260-080		CAP, ELECT 47-25V	C861	87-012-199-080		C-CAP, U 220P-50 J CH
C712	87-010-831-080		C-CAP, U 0.1-16F	C862	87-012-199-080		C-CAP, U 220P-50 J CH
C713	87-012-286-080		CAP, U 0.01-25	C863	87-012-270-080		C-CAP, U 470P-50 KB
C714	87-012-286-080		CAP, U 0.01-25	C864	87-010-405-080		CAP, E 10-50 M 11L SME
C715	87-012-195-080		C-CAP, U 100P-50CH	C865	87-010-196-080		C-CAP, S 0.1-25 ZF
C717	87-012-286-080		CAP, U 0.01-25	C866	87-010-405-080		CAP, E 10-50 M 11L SME
C719	87-012-286-080		CAP, U 0.01-25	C867	87-012-286-080		C-CAP, U 0.01-25 KB
C720	87-012-195-080		C-CAP, U 100P-50CH	C868	87-012-184-080		C-CAP, U 33P-50 J CH
C721	87-012-176-080		CAP, 15P	C869	87-012-180-080		C-CAP, U 22P-50 J CH
C722	87-012-176-080		CAP, 15P	C940	87-012-286-080		C-CAP, U 0.01-25 KB
C723	87-012-274-080		CHIP CAP, U 1000P-50B	C942	87-012-172-080		C-CAP, U 10P-50 D CH
C725	87-018-131-080		CAP, TC U 1000P-50 KB	C947	87-012-286-080		C-CAP, U 0.01-25 KB
C727	87-010-196-080		CHIP CAPACITOR, 0.1-25	C949	87-A10-039-080		C-CAP, U 470P-50 J CH
C728	87-010-248-080		CAP, ELECT 220-10V	C952	87-012-286-080		C-CAP, U 0.01-25 KB
C729	87-012-274-080		CHIP CAP, U 1000P-50B	C958	87-010-197-080		C-CAP, S 0.01-25 KB
C731	87-012-286-080		CAP, U 0.01-25	C959	87-010-831-080		C-CAP, U 0.1-16 ZF
C733	87-012-280-080		C-CAP, U 3300P-50 KB	C960	87-010-196-080		CHIP CAPACITOR, 0.1-25
C734	87-012-280-080		C-CAP, U 3300P-50 KB	CF801	87-008-423-010		FLTR, CF SFE10.7MS3G-A
C752	87-012-282-080		C-CAP, U 4700P-50 KB	CF802	82-785-747-010		CF, MS2 GHY R
C753	87-012-195-080		C-CAP, U 100P-50 J CH	CN701	87-A60-650-010		CONN, 16P H GRY TUC-P16X-C1
C755	87-012-286-080		CAP, U 0.01-25	FFE801	A8-6ZA-191-130		6ZA-1 FEENM
C756	87-012-286-080		CAP, U 0.01-25	J801	87-033-241-010		TERMINAL, ANT 2P AJ-2039
C757	87-012-188-080		C-CAP, U 47P-50 CH	L771	87-A50-266-010		COIL, FM DET-2N(TOK)

REF. NO.	PART NO.	KANRI NO.	DESCRIPTION
L772	87-A90-733-010		FLTR, PCFAZH-450(TOK)
L781	87-005-847-010		COIL, 2.2UH K CECS
L791	87-A50-027-010		COIL, 1 POLE MPX(TOK)
L792	87-A50-027-010		COIL, 1 POLE MPX(TOK)
L832	87-005-847-080		COIL, 2.2UH K CECS
L851	87-005-847-080		COIL, 2.2UH K CECS
L941	87-A50-020-010		COIL, ANT LW(COI) 252KHZ
L942	87-A50-019-010		COIL, OSC LW(COI) 856KHZ
L981	87-NF4-651-110		COIL, AM PACK 2N(TOM)
TC942	87-011-164-010		TRIMMER, CER 30P 4.5X3.9 VCT31
X721	87-A70-061-010		VIB, XTAL 4.500MHZ CSA-309
X851	87-A70-091-010		VIB, XTAL 4.332MHZ CSA-309

Oチップ抵抗部品コード／CHIP RESISTOR PART CODE


チップ抵抗部品コードの成り立ち
Chip Resistor Part Coding

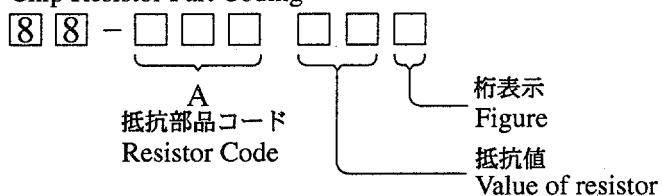

チップ抵抗 Chip resistor

容量 Wattage	種類 Type	許容誤差 Tolerance	記号 Symbol	寸法／Dimensions (mm)			抵抗コード Resistor Code : A	
				外形／Form	L	W		
1/16W	1005	± 5%	CJ		1.0	0.5	0.35	104
1/16W	1608	± 5%	CJ		1.6	0.8	0.45	108
1/10W	2125	± 5%	CJ		2	1.25	0.45	118
1/8W	3216	± 5%	CJ		3.2	1.6	0.55	128


TRANSISTOR ILLUSTRATION (TX-LM98 / 99)




KTA1266GR
KTC3198GR



CSD655E




2SC4115SRS

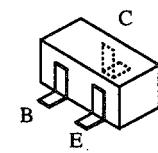


2SC2714
2SC3052
CSD1306
DTA144TK


RT1N141C
RT1N144C
RT1P141C
RT1P144C

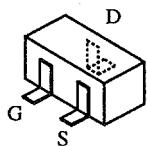



2SK2158

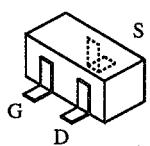

2SK543

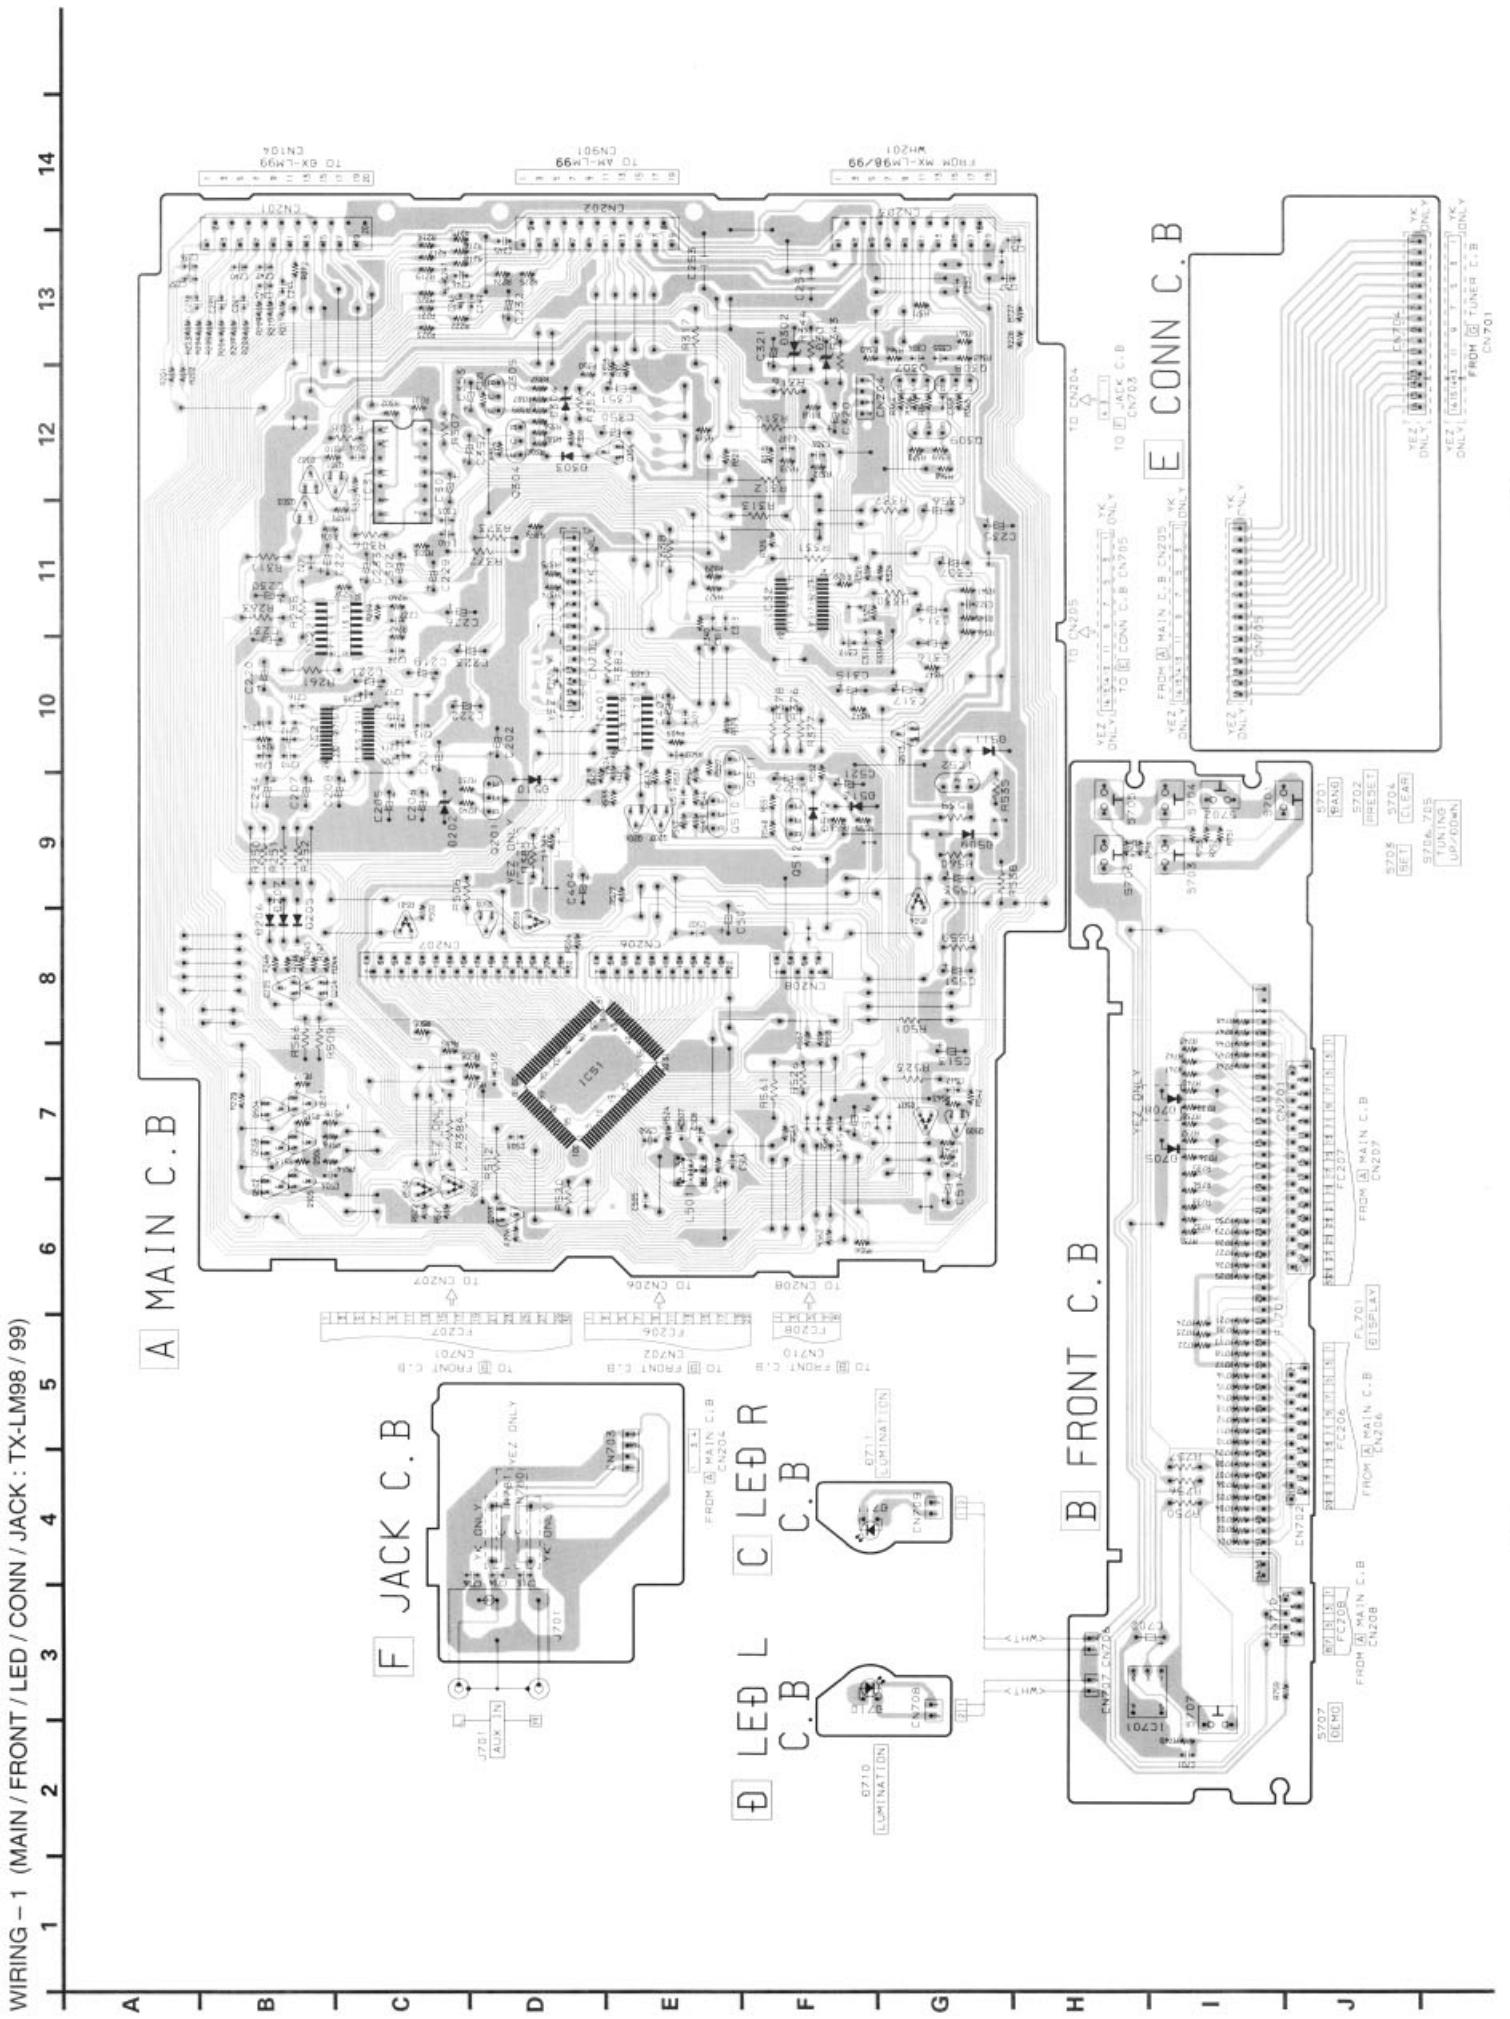


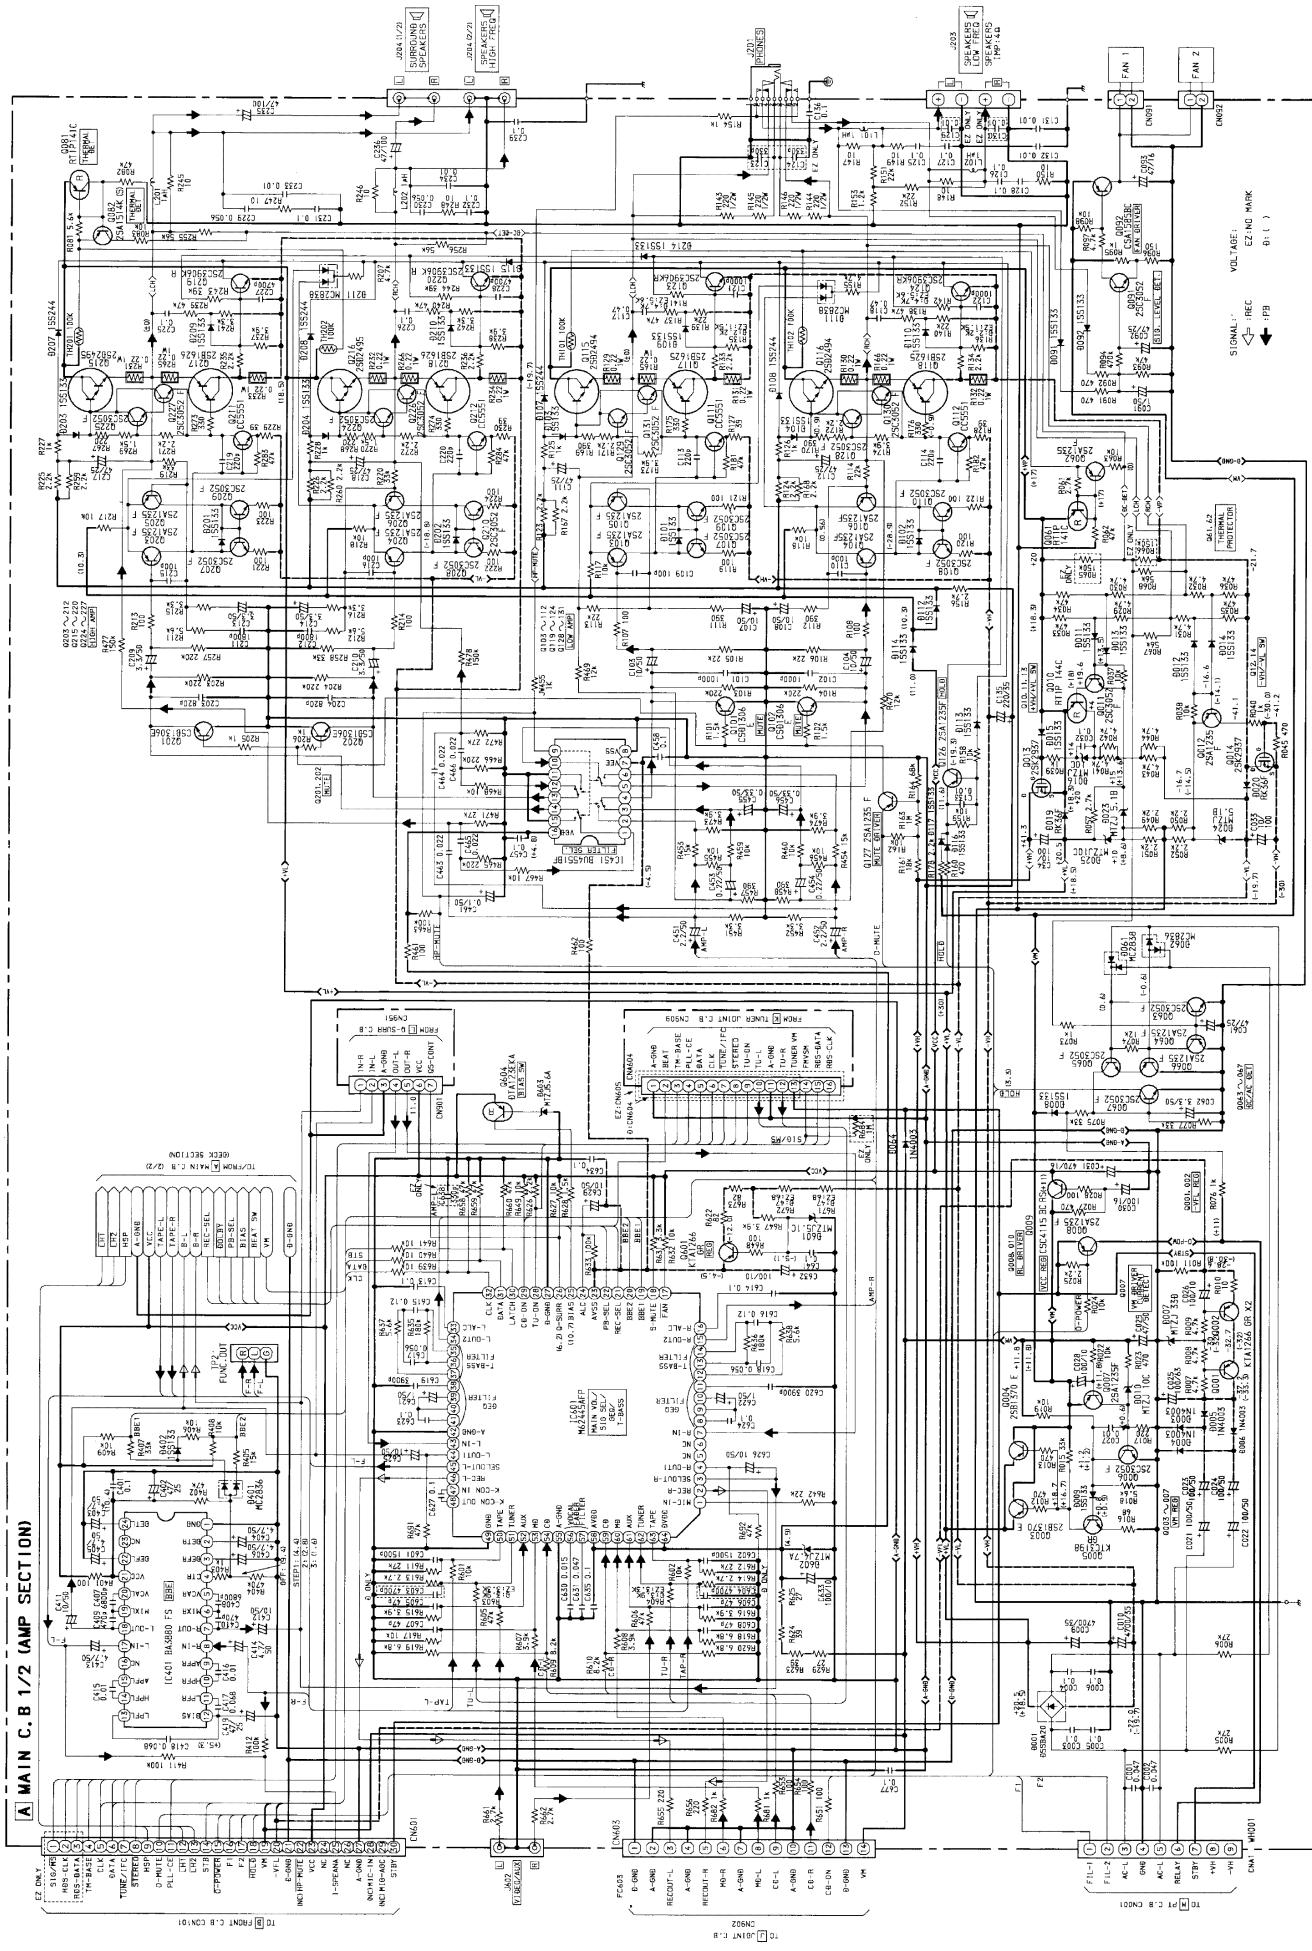A MAIN C. B 1/2 (AMP SECTION)

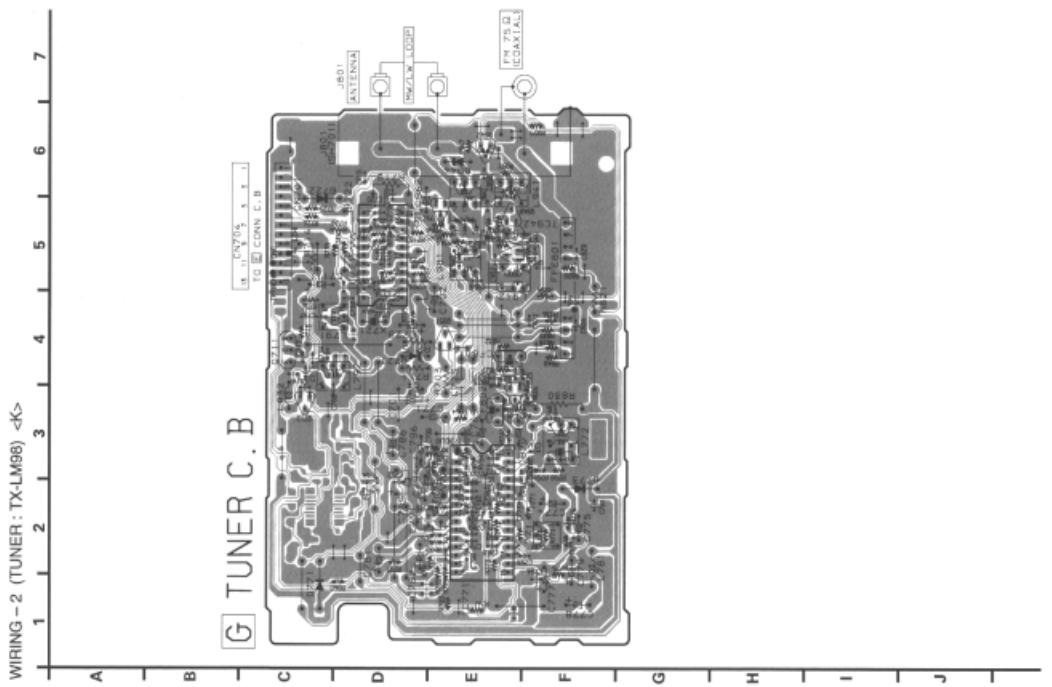


BLOCK DIAGRAM - 1 (TX-LM98 / 99)

IC₁ MM1454XFBE

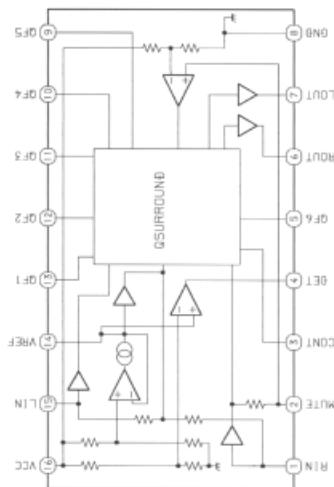


IC, BU4094BCF

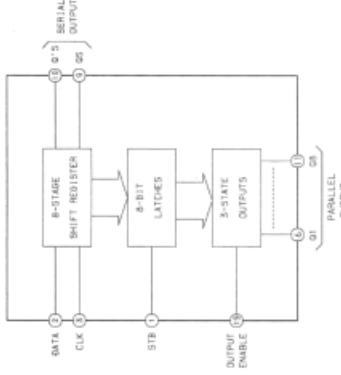


WIRING - 2 (TUNER : TX-LM98) <K>

NC, MM1454XFBE


IC₁, MM1454XFBE

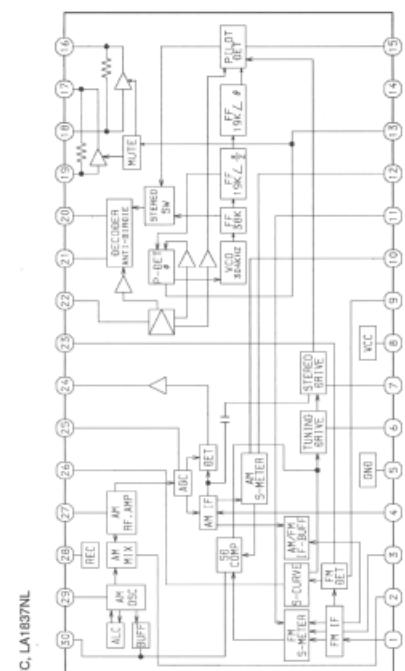


(C, BA36890FS)

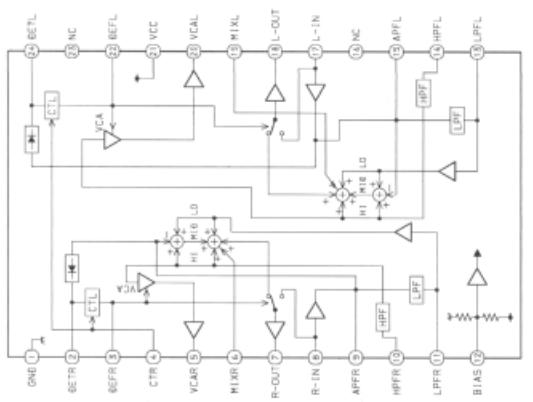

SCHEMATIC DIAGRAM - 2 (TUNER : TX-LM98) <K>

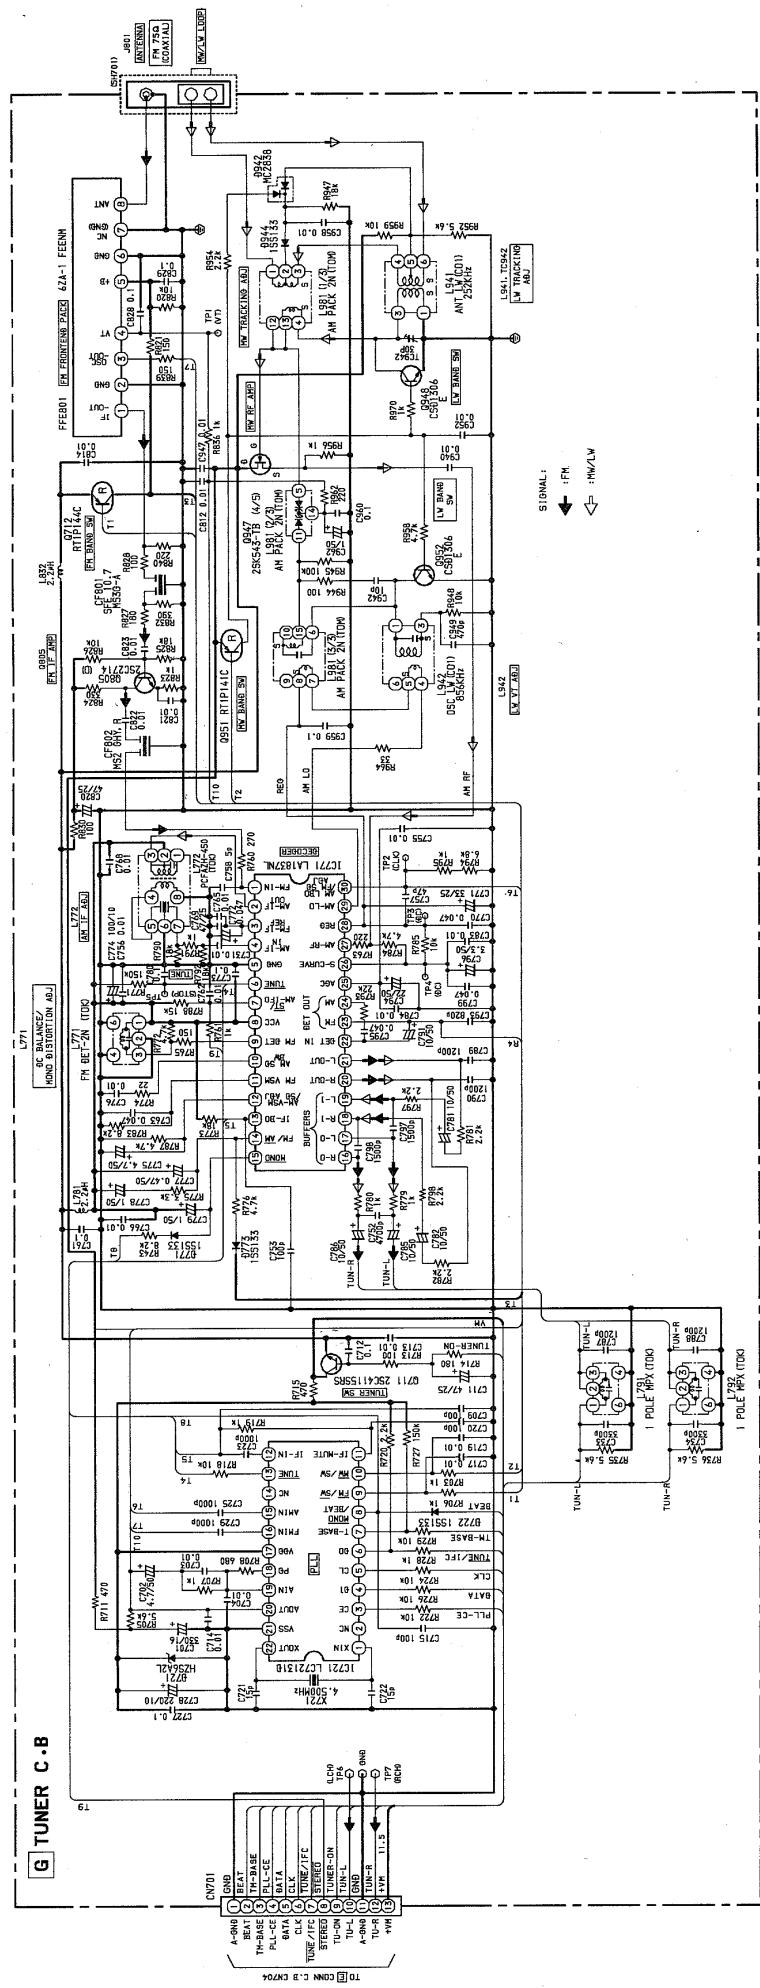

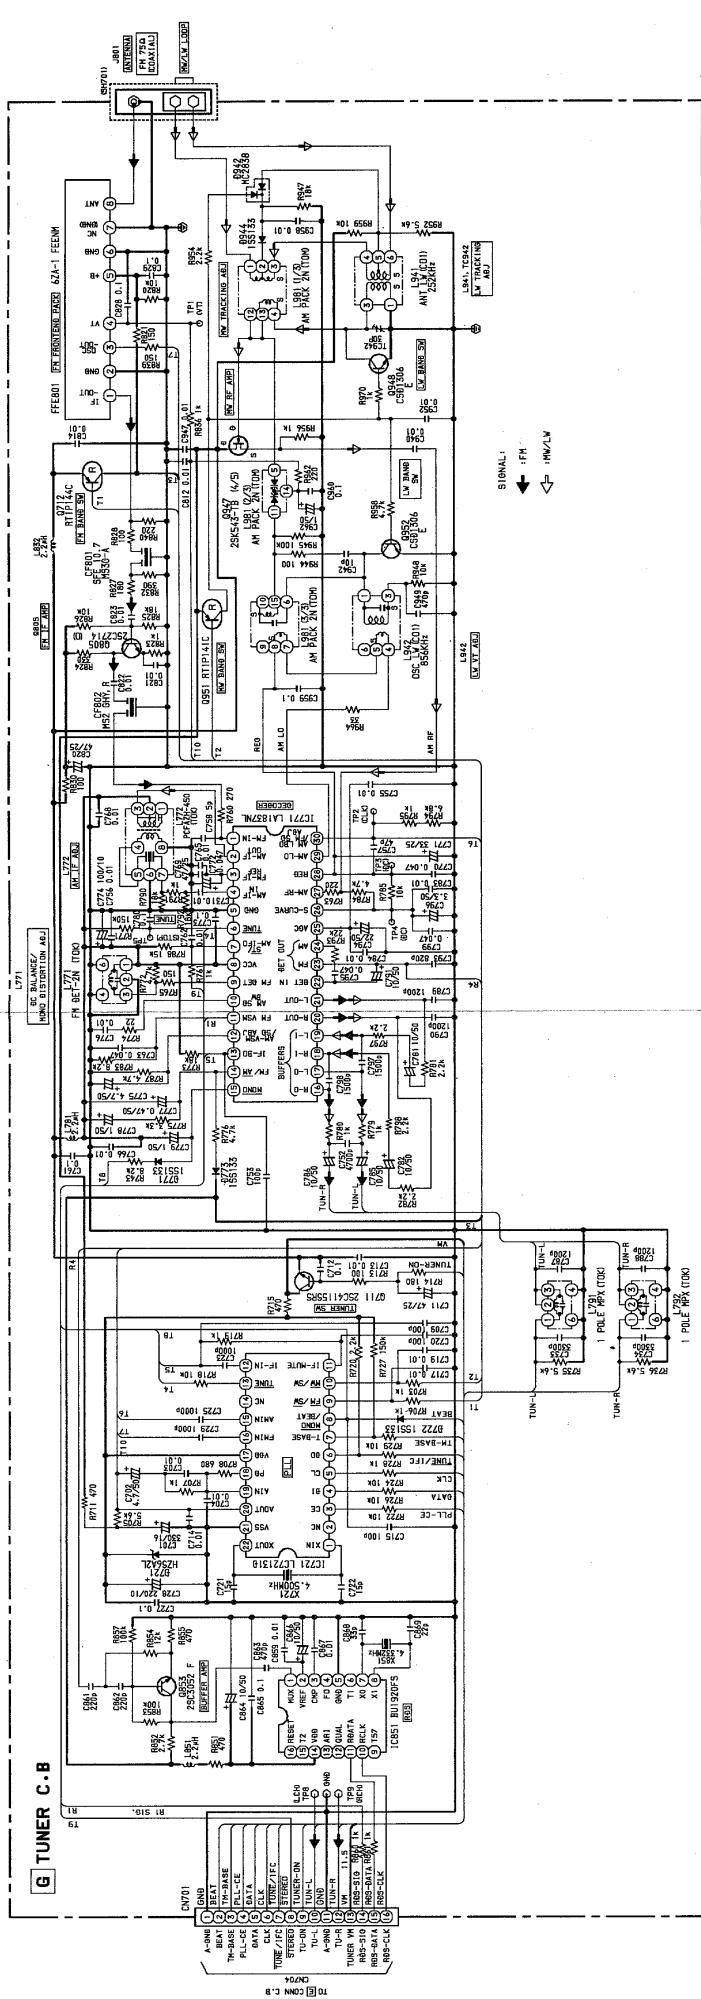

WIRING – 3 (TUNER : TX-LM99) <EZ>

1 | 2 | 3 | 4 | 5 | 6 | 7

A

B

C

G TUNER C. B

16	15	13	11	9	CN704	7	5	3	1
TO E CONN C,B									

D


1

E

6


4

J

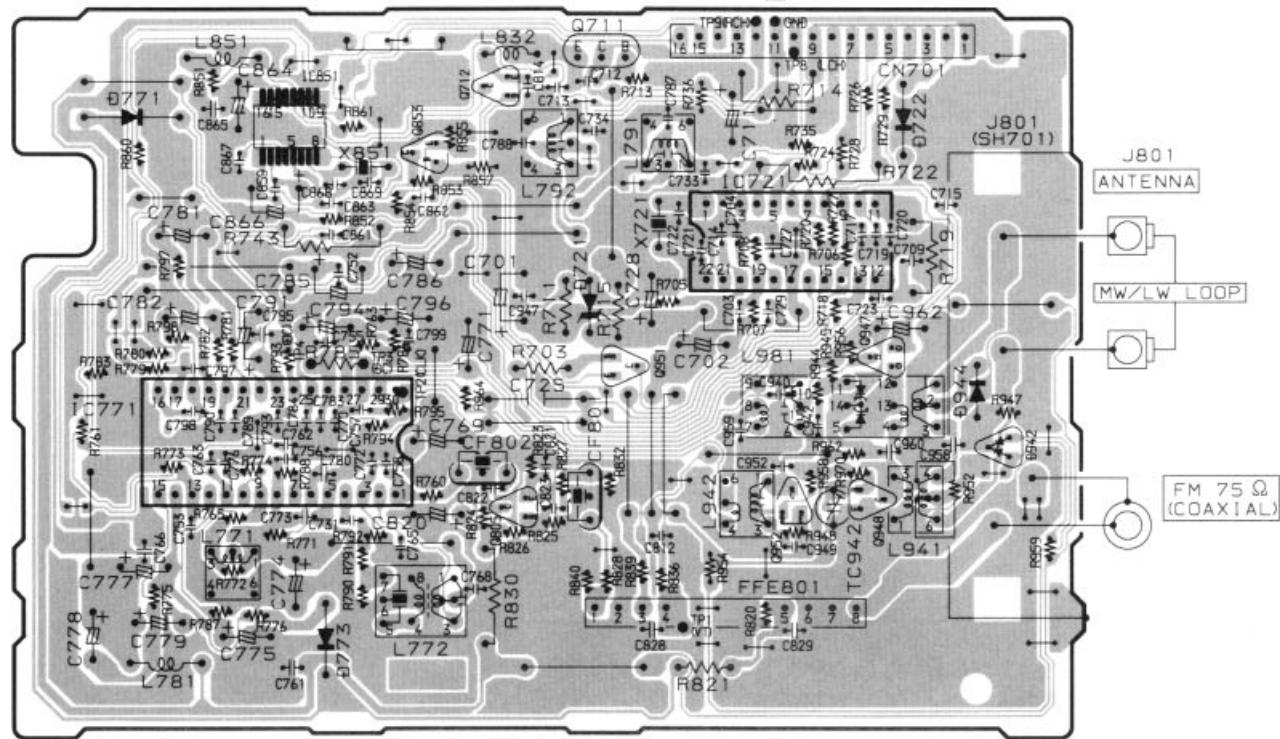


IC BLOCK DIAGRAM – 2 (TX-LM98 / 99)


IC, M62495FP

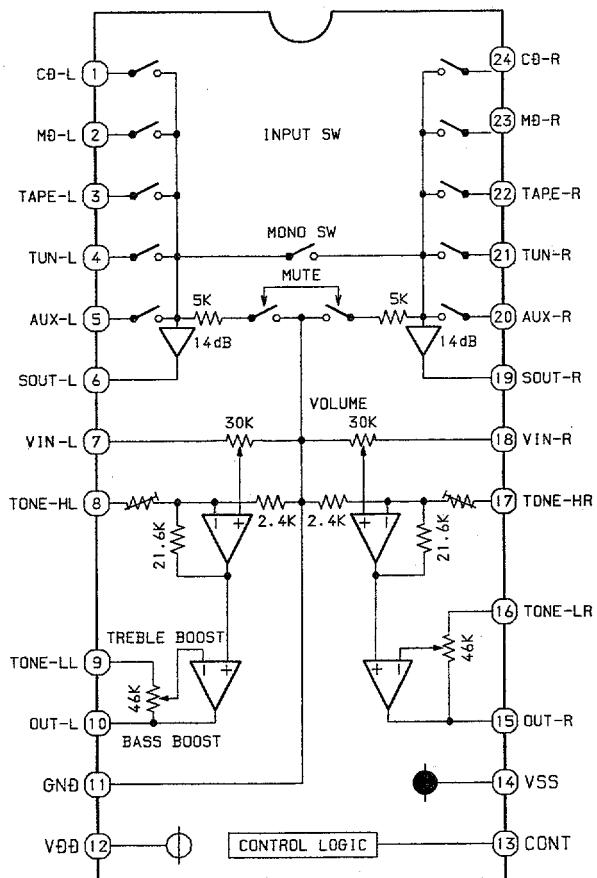

IC, BU1920FS <YEZ ONLY>

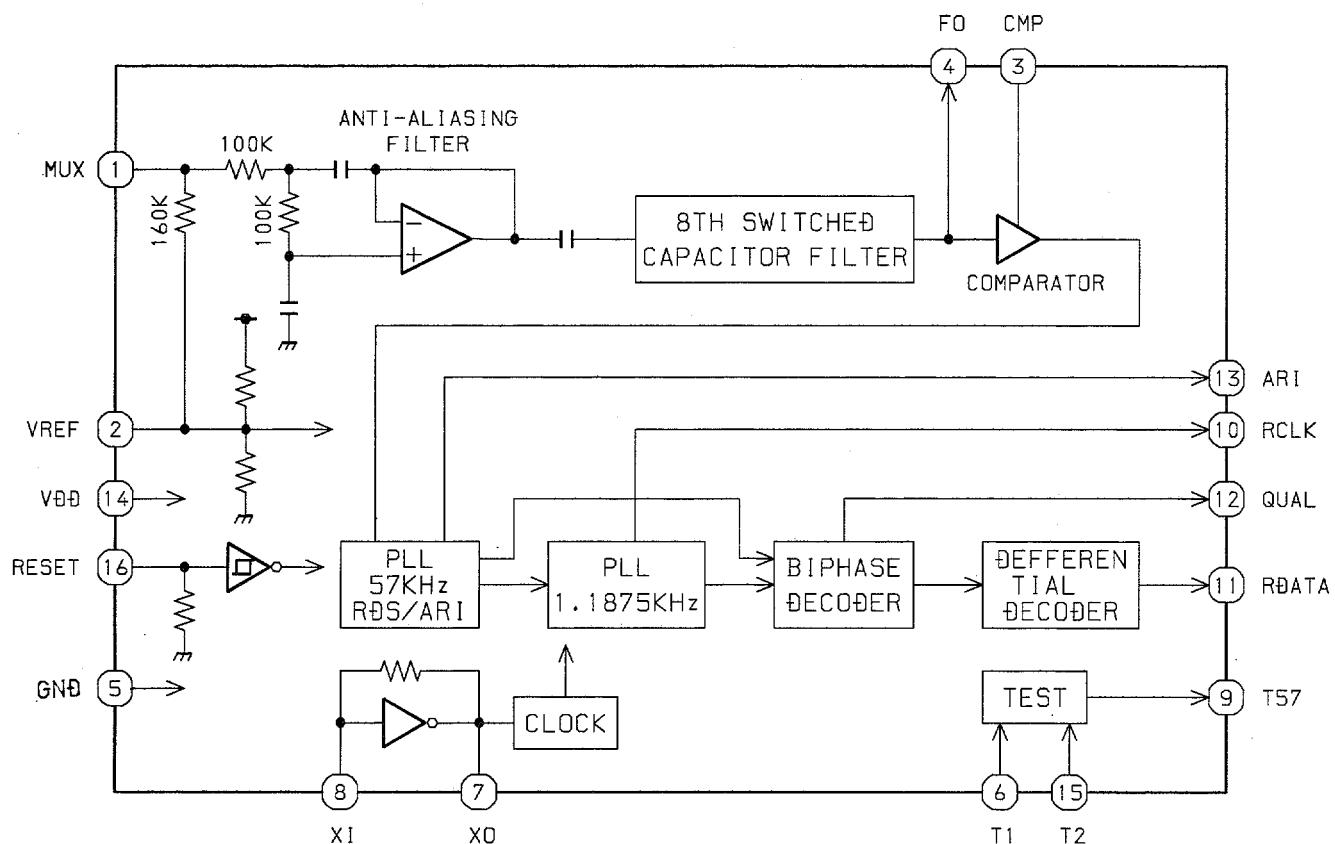


IC, LC72131D

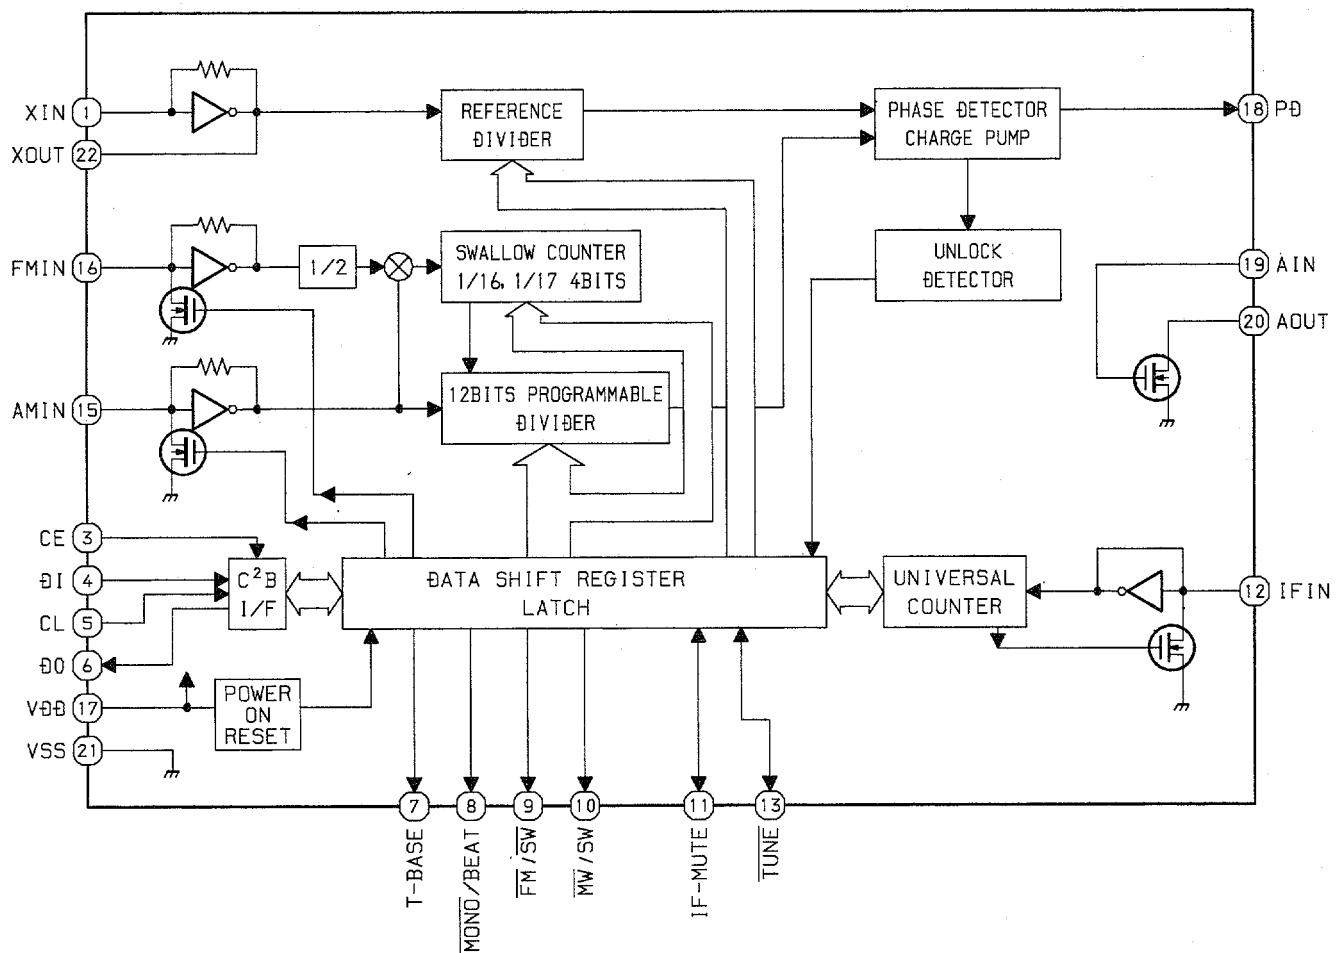

**FL (13-ST-36GNK) GRID ASSIGNMENT / ANODE CONNECTION / PIN CONNECTION
(TX-LM98 / 99)**

GRID ASSIGNMENT

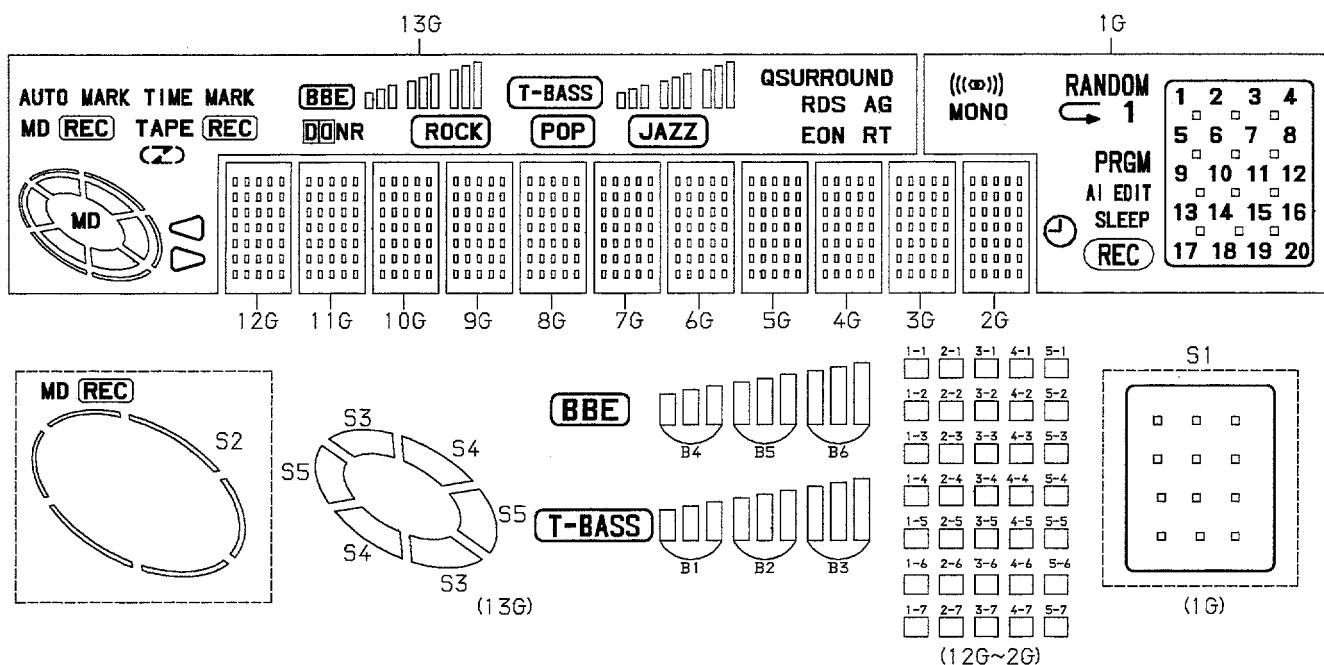

ANODE CONNECTION

	13G	12G~2G	1G		13G	12G~2G	1G
P1	JAZZ	1-1	1	P19)	4-4	8
P2	POP	2-1	➡	P20	Z	5-4	9
P3	ROCK	3-1	MONO	P21	C	1-5	10
P4	DO NR	4-1	RANDOM	P22	TAPEREC	2-5	11
P5	RT	5-1	(())	P23	S2	3-5	12
P6	EON	1-2	PRGM	P24	S3	4-5	13
P7	AG	2-2	AI	P25	S4	5-5	14
P8	RDS	3-2	EDIT	P26	S5	1-6	15
P9	B1	4-2	SLEEP	P27	MD	2-6	16
P10	B2	5-2	⌚	P28	TIME MARK	3-6	17
P11	B3	1-3	REC	P29	AUTO MARK	4-6	18
P12	T-BASS	2-3	1	P30	QSURROUND	5-6	19
P13	B4	3-3	2	P31	-	1-7	20
P14	B5	4-3	3	P32	-	2-7	S1
P15	B6	5-3	4	P33	-	3-7	-
P16	BBE	1-4	5	P34	-	4-7	-
P17	▶	2-4	6	P35	-	5-7	-
P18	◀	3-4	7				

PIN CONNECTION

PIN NO.	54	53	52	51	50	49	48	47	46	45	44	43	42	41	40	39
CONNECTION	F2	F2	NP	13G	12G	11G	10G	9G	8G	7G	6G	5G	4G	3G	2G	1G
PIN NO.	38	37	36	35	34	33	32	31	30	29	28	27	26	25	24	23
CONNECTION	P35	P34	P33	P32	P31	P30	P29	P28	P27	P26	P25	P24	P23	P22	P21	P20
PIN NO.	22	21	20	19	18	17	16	15	14	13	12	11	10	9	8	7
CONNECTION	P19	P18	P17	P16	P15	P14	P13	P12	P11	P10	P9	P8	P7	P6	P5	P4
PIN NO.	6	5	4	3	2	1										
CONNECTION	P3	P2	P1	NP	F1	F1										


IC DESCRIPTION (TX-LM98/99)

IC, LC876580W-5M70

Pin No.	Pin Name	I/O	Description
1	STEREO/CD DRF	I	Detection of tuner stereo/ Connection of LA9241ML 54 pin.
2	TUDO/CD SQOUT	I	Connection of TUNER PLL LC72131D 6pin DO.
			Connection of CD DSP LC78622ED 55pin SQOUT.
3	COIN/F-DATA	O	Connection of DSP LC78622ED 56pin COIN.
			Output of LA9241ML 52pin DATA rear shift register data in BU4094BCF.
4	NC	-	Not connected.
5	RDS DATA	I	Input of RDS DATA.
6	CLK	O	Connection of main shift register BU4094BCF 3pin.
			Connection of TUNER PLL LC72131D 5pin.
7	DATA	O	Connection of main shift register BU4094BCF 2pin
			Connection of TUNER PLL LC72131D 4pin.
8	VOL CTL	O	Connection of IC M62495FP 13pin.
9	TMBASE	I	Connection of PLL IC LC72131D 7pin : input of standard clock.
10	CKSFT	O	Output of clock shift : "L" state in case of shift.
11	RES	I	Micom reset.
12	ACOFF	I	Detection of HOLD state.
13	RDS-SIG	I	Input of RDS signal level A/D.
14	VSS1	-	GND.
15	CF1	-	Connection of 5.76MHz oscillator.
16	CF2	-	Connection of 5.76MHz oscillator.
17	VDD1	-	U-COM 5V.
18	TUNER KEY	I	Input of TUNER A/D key.
19	AMP KEY	I	Input of AMP A/D key.
20	CD/DECK KEY	I	Input of CD/DECK A/D key.
21	MD KEY	I	Input of MD A/D key.
22	CDTSW/ DECK REC SW	I	Input of CD TRAY SW/DECK REC SW A/D.
23	DK MODE	I	Input of DECK MODE 1/2/3 SW A/D.
24	VOL/JOG	I	Input of VOL/MULTI JOG ENCODER-A/B A/D.
25	LC72131 CE	O	Connection of tuner PLL IC LC72131D 3pin.
26	LEVEL (A/D)	I	Input of level meter.
27	SUB MOTOR	O	Output of deck sub motor CW&CCW.
28	RDS CLK/CD WRQ	I	Input of RDS CLK / CD DSP LC78622ED 53pin.
29	RMC	I	Input of remocon.
30 ~ 42	G13 ~ 01	O	Output of FL GRID.
43 ~ 45	P35 ~ 33	O	Output of FL segment.
46	VDD3	-	U-COM 5V.
47 ~ 50	P32 ~ 29	O	Output of FL segment.
51	-VFL	-	Minus source of FL.
52 ~ 63	P28 ~ 17	O	Output of FL segment.
64	P16/BBE	O/I	Output of FL segment P16 / Input of INT diode matrix BBE (Not used).
65	P15/DOLBY	O/I	Output of FL segment P15 / Input of INT diode matrix DOLBY (Not used).

Pin No.	Pin Name	I/O	Description
66	P14/AM10K	O/I	Output of FL segment P14 / Input of INT diode matrix AM10K (Not used).
67	P13/FMWIDE&AMST	O/I	Output of FL segment P13 / Input of INT diode matrix FMWIDE&AMST (Not used).
68	P12/LW	O/I	Output of FL segment P12 / Input of INT diode matrix LW.
69	P11/SW	O/I	Output of FL segment P11 / Input of INT diode matrix SW (Not used).
70	P10/OIRT	O/I	Output of FL segment P10 / Input of INT diode matrix OIRT (Not used).
71	P9/RDS	O/I	Output of FL segment P09 / Input of INT diode matrix RDS.
72	VDD4	-	U-COM 5V.
73 ~ 79	P08 ~ 02	O	Output of FL segment .
80	P1/DK AUTO	O	Output of FL segment P1/ Input of DECK MECHA auto stop pulse state.
81	QSURR	O	Output of Q-SURROUND IC control ON/OFF.
82	SWSCAN	O	KEY SCAN DETECTION TIMING SW.
83	NC	-	Not connected.
84	F-STD	O	Connection of rear shift register BU4094BCF 1pin.
85	BBe A	O	BBe control A.
86	BBe B	O	BBe control B.
87	PWR ON	O	SET SOURCE.
88	MD RST	O	Signal output of MD unit reset.
89	VSS2	-	GND.
90	VDD2	-	U-COM 5V.
91	CD RWC	O	Connection of CD DSP LC78622ED 54pin RWC & LA9241ML 53pin.
92	CQCK/F-CLK	O	Connection of CD DSP LC78622ED 57pin CQCK & LA9241ML 51pin.
			Output of rear shift register clock in BU4094BCF 3pin.
93	MUTE	O	Output of main mute.
94	M-STB	O	Connection of main shift register BU4094BCF 1pin.
95	MD SIN	O	Output of MD unit control serial data.
96	MD-SOUT	I	Input of MD unit control serial data.
97	MD-ACLK	I	Input of MD unit control serial colck.
98	MD-ARDY	O	Output of MD unit control serial data trans-receiver standard.
99	MD-SREQ	O	Require of MD unit control serial data forward.
100	MD-MREQ	I	Require of MD unit control serial data forward.

ADJUSTMENT – 1 <TUNER : TX-LM98> <K>

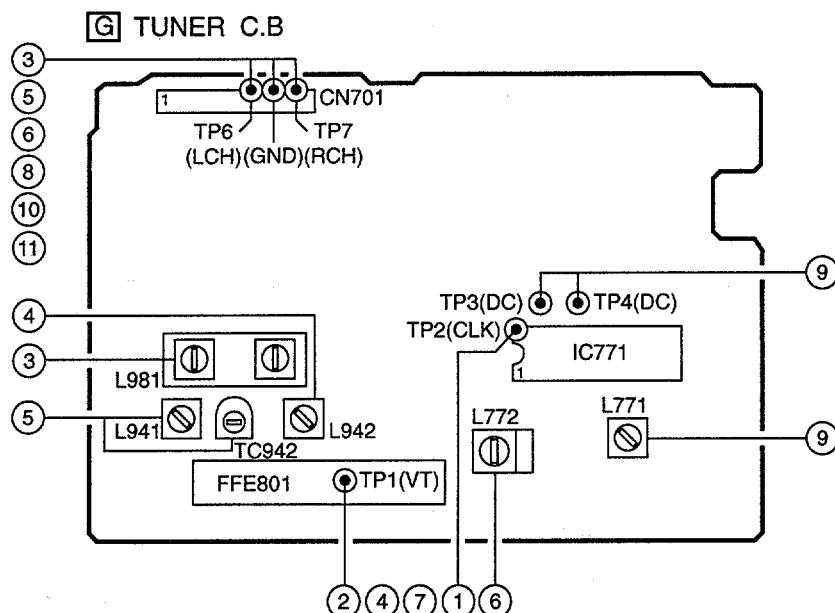

< TUNER SECTION >

1. Clock Frequency Check

Settings : • Test point : TP2 (CLK)
Method : Set to MW 1602kHz and check that the test point is $2052\text{kHz} \pm 45\text{Hz}$.

2. MW VT Check

Settings : • Test point : TP1 (VT)
Method : Set to MW 1602kHz and check that the test point is less than 8.0V. Then set to MW 531kHz and check that the test point is more than 0.6V.

3. MW Tracking Adjustment

Settings : • Test point : TP6 (Lch), TP7 (Rch)
• Adjustment location : L981 (1/3)
Method : Set to MW 999kHz and adjust L981 (1/3) so that the test point becomes maximum.

4. LW VT Adjustment

Settings : • Test point : TP1 (VT)
• Adjustment location : L942
Method : Set to LW 144kHz and adjust L942 so that the test point becomes $1.3\text{V} \pm 0.05\text{V}$. Then set to LW 290kHz and check that the test point is less than 8.0V.

5. LW Tracking Adjustment

Settings : • Test point : TP6 (Lch), TP7 (Rch)
• Adjustment location :
L941 144kHz
TC942 290kHz
Method : Set up TC942 to center before adjustment. The level at 144kHz is adjusted to MAX by L941. Then the level at 290kHz is adjusted to MAX by TC942.

6. AM IF Adjustment

Settings : • Test point : TP6 (Lch), TP7 (Rch)
• Adjustment location :
L772 450kHz

7. FM VT Check

Settings : • Test point : TP1 (VT)
Method : Set to FM 108.0MHz and check that the test point is less than 8.0V. Then set to FM 87.5MHz and check that the test point is more than 0.5V.

8. FM Tracking Check

Settings : • Test point : TP6 (Lch), TP7 (Rch)
Method : Set to FM 98.0MHz and check that the test point is less than $13\text{dB}\mu\text{V}$.

9. DC Balance / Mono Distortion Adjustment

Settings : • Test point : TP3,TP4 (DC balance)
• Adjustment location : L771
• Input level : $60\text{dB}\mu\text{V}$
Method : Set to FM 98.0MHz and adjust L771 so that the voltage between TP3 and TP4 becomes $0\text{V} \pm 0.04\text{V}$. Next, check that the distortion is less than 1.3%.

10. Output Level Check

<MW>
Settings : • Test point : TP6 (Lch), TP7 (Rch)
• Input level : $74\text{dB}\mu\text{V}$
Method : Set to MW 999kHz and check that the test point is $130\text{mV} \pm 3\text{dB}$.


<FM>

Settings : • Test point : TP6 (Lch), TP7 (Rch)
• Input level : $60\text{dB}\mu\text{V}$
Method : Set to FM 98.0MHz and check that the test point is $520\text{mV} \pm 3\text{dB}$.

11. FM Separation Check

Settings : • Test point : TP6 (Lch), TP7 (Rch)
• Input level : $60\text{dB}\mu\text{V}$
Method : Set to FM 98.0MHz and check that the test point is more than 25dB.

ADJUSTMENT – 2 <TUNER: TX-LM99> <EZ>

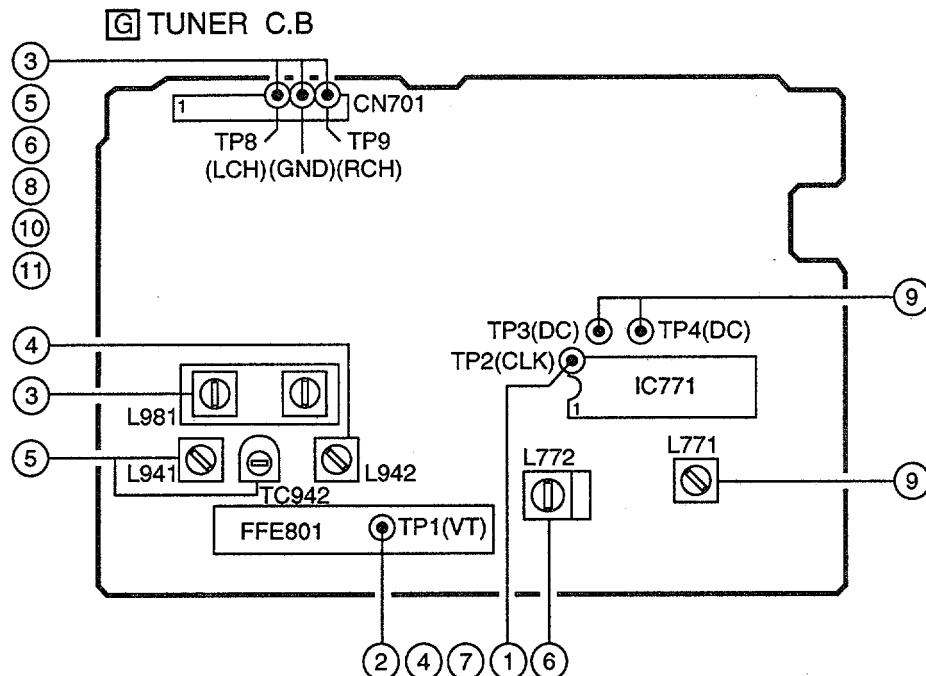

< TUNER SECTION >

1. Clock Frequency Check
Settings : • Test point : TP2 (CLK)
Method : Set to MW 1602kHz and check that the test point is $2052\text{kHz} \pm 45\text{Hz}$.
2. MW VT Check
Settings : • Test point : TP1 (VT)
Method : Set to MW 1602kHz and check that the test point is less than 8.0V. Then set to MW 531kHz and check that the test point is more than 0.6V.
3. MW Tracking Adjustment
Settings : • Test point : TP8 (Lch), TP9 (Rch)
• Adjustment location : L981 (1/3)
Method : Set to MW 999kHz and adjust L981 (1/3) so that the test point becomes maximum.
4. LW VT Adjustment
Settings : • Test point : TP1 (VT)
• Adjustment location : L942
Method : Set to LW 144kHz and adjust L942 so that the test point becomes $1.3\text{V} \pm 0.05\text{V}$. Then set to LW 290kHz and check that the test point is less than 8.0V.
5. LW Tracking Adjustment
Settings : • Test point : TP8 (Lch), TP9 (Rch)
• Adjustment location :
L941 144kHz
TC942 290kHz
Method : Set up TC942 to center before adjustment. The level at 144kHz is adjusted to MAX by L941. Then the level at 290kHz is adjusted to MAX by TC942.
6. AM IF Adjustment
Settings : • Test point : TP8 (Lch), TP9 (Rch)
• Adjustment location : L772..... 450kHz
7. FM VT Check
Settings : • Test point : TP1 (VT)
Method : Set to FM 108.0MHz and check that the test point is less than 8.0V. Then set to FM 87.5MHz and check that the test point is more than 0.5V.
8. FM Tracking Check
Settings : • Test point : TP8 (Lch), TP9 (Rch)
Method : Set to FM 98.0MHz and check that the test point is less than $13\text{dB}\mu\text{V}$.
9. DC Balance / Mono Distortion Adjustment
Settings : • Test point : TP3, TP4 (DC balance)
• Adjustment location : L771
• Input level : $60\text{dB}\mu\text{V}$
Method : Set to FM 98.0MHz and adjust L771 so that the voltage between TP3 and TP4 becomes $0\text{V} \pm 0.04\text{V}$. Next, check that the distortion is less than 1.3%.
10. Output Level Check
<MW>
Settings : • Test point : TP8 (Lch), TP9 (Rch)
• Input level : $74\text{dB}\mu\text{V}$
Method : Set to MW 999kHz and check that the test point is $130\text{mV} \pm 3\text{dB}$.

<FM>
Settings : • Test point : TP8 (Lch), TP9 (Rch)
• Input level : $60\text{dB}\mu\text{V}$
Method : Set to FM 98.0MHz and check that the test point is $520\text{mV} \pm 3\text{dB}$.
11. FM Separation Check
Settings : • Test point : TP8 (Lch), TP9 (Rch)
• Input level : $60\text{dB}\mu\text{V}$
Method : Set to FM 98.0MHz and check that the test point is more than 25dB.

PRACTICAL SERVICE FIGURE

<TUNER SECTION>

<FM SECTION>

IHF Sensitivity : $8 + 6 / - 10 \text{ dB}\mu\text{V}$
(THD 3%) [at 87.5 / 98.0MHz]
 $10 + 6 / - 10 \text{ dB}\mu\text{V}$
[at 108.0MHz]

Signal to noise ratio : More than 60dB

(Input 66dB μ V) [at 98.0MHz]

Distortion : Less than 1.5%

(Input 66dB μ V) [at 98.0MHz]

Auto stop level : $25 \text{ dB}\mu\text{V} \pm 10 \text{ dB}$

[at 98.0MHz]

Stereo separation : More than 16dB

[at 98.0MHz]

Intermediate frequency : 10.7MHz

<MW SECTION>

Sensitivity : $54 \text{ dB}\mu\text{V} \pm 6 \text{ dB}\mu\text{V}$
(S/N 20 dB) [at 603kHz]
 $52 \text{ dB}\mu\text{V} \pm 6 \text{ dB}\mu\text{V}$
[at 999/1404kHz]

Signal to noise ratio : More than 36dB

(Input 100dB μ V) [at 999kHz]

Distortion : Less than 8.0%

(Input 115dB μ V) [at 999kHz]

Auto stop level : $50 \text{ dB}\mu\text{V} +10/-15 \text{ dB}$


[at 999kHz]

Intermediate frequency : 450kHz

<LW SECTION>

Sensitivity : $67 \text{ dB}\mu\text{V} \pm 5 \text{ dB}\mu\text{V}$
(S/N 20 dB) [at 144kHz]
 $62 \text{ dB}\mu\text{V} \pm 5 \text{ dB}\mu\text{V}$
[at 198kHz]
 $60 \text{ dB}\mu\text{V} \pm 5 \text{ dB}\mu\text{V}$
[at 290kHz]

Intermediate frequency : 450kHz

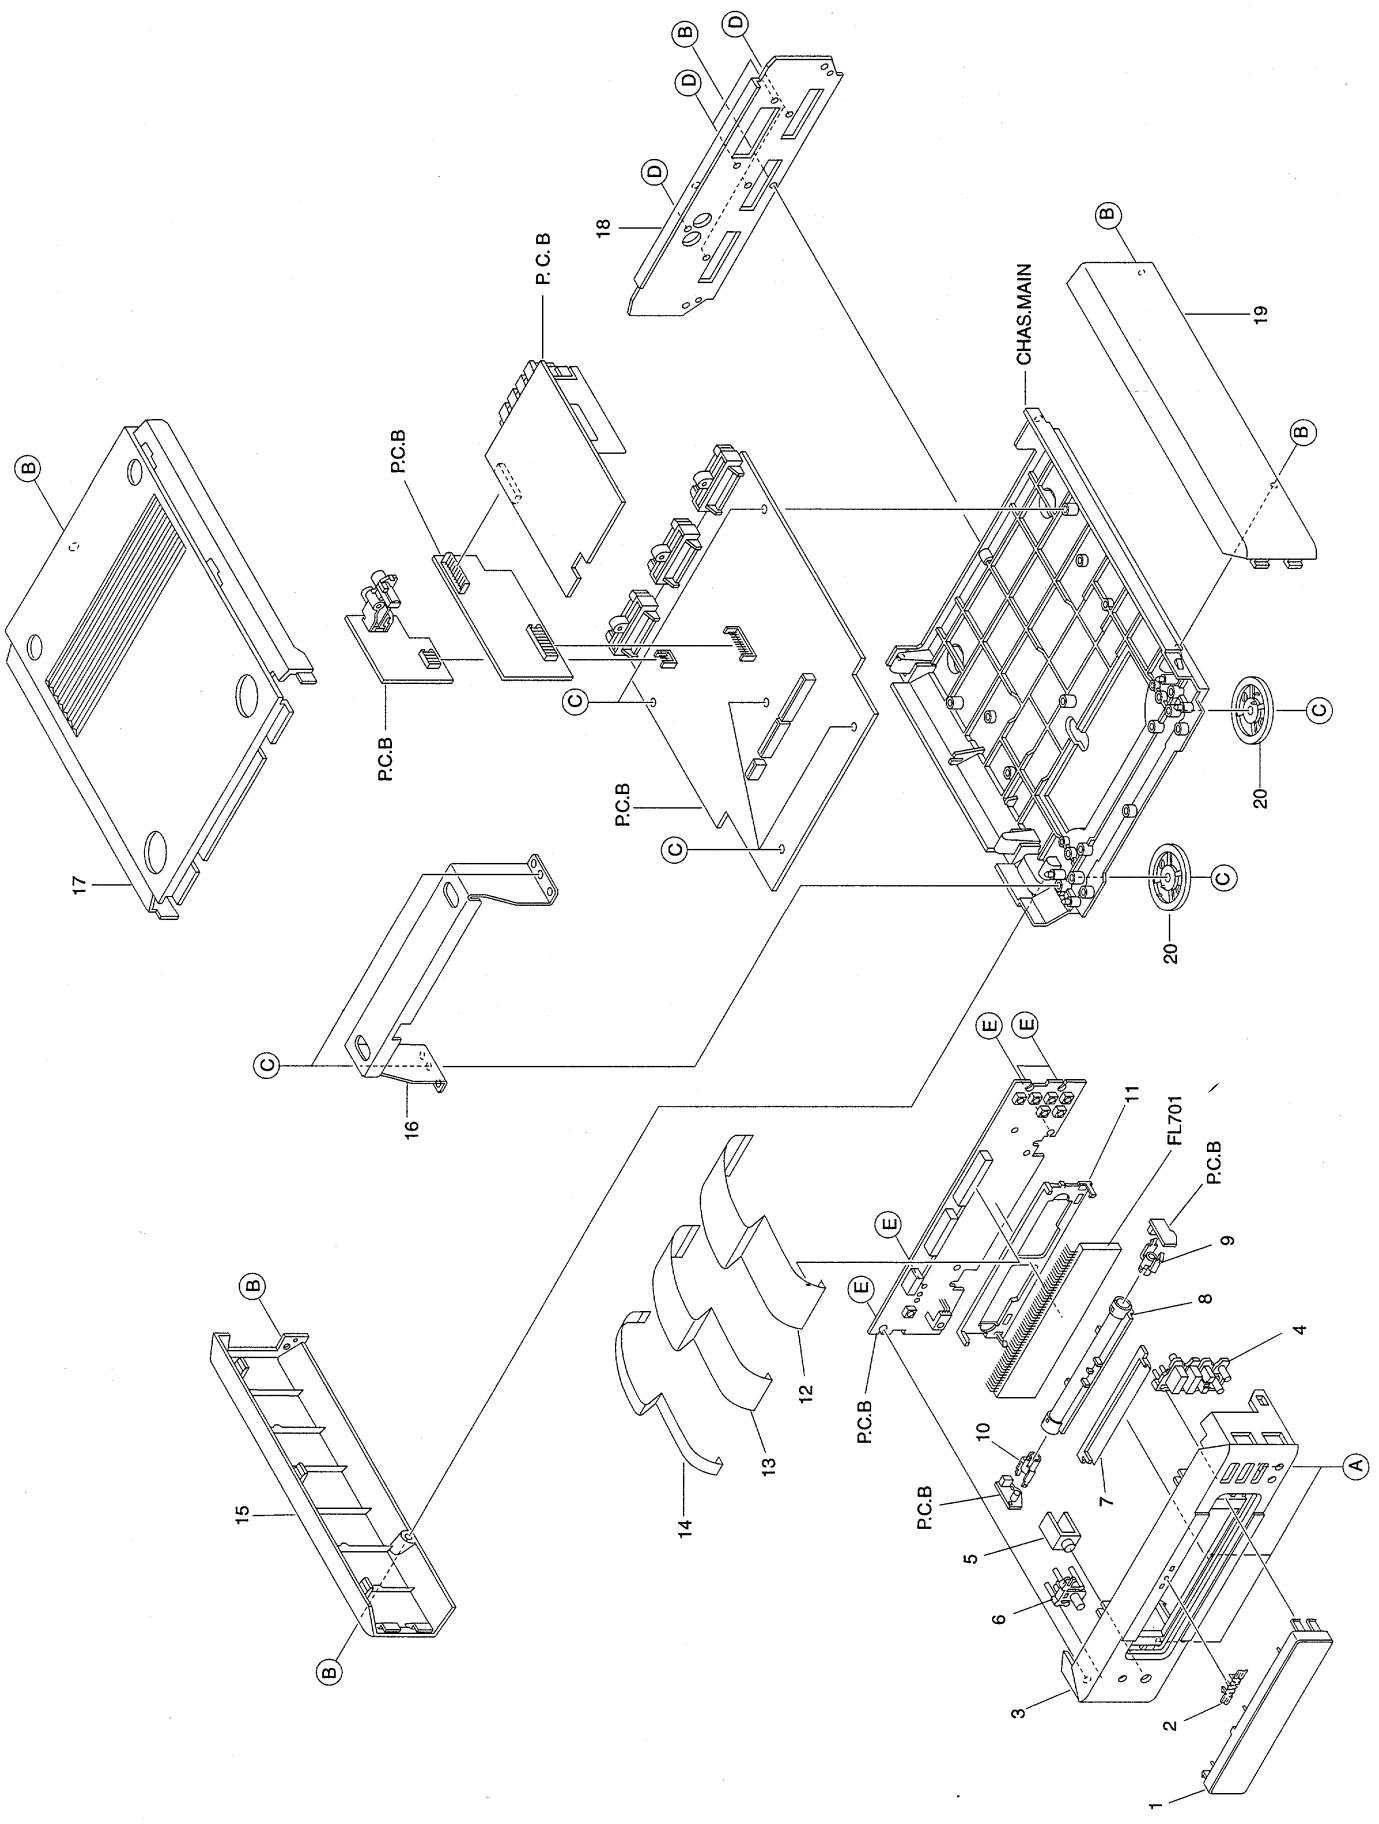

MECHANICAL PARTS LIST 1 / 1 (TX-LM98 / 99)

If can't understand for Description please kindly refer to "REFERENCE NAME LIST".

REF. NO	PART NO.	KANRI NO.	DESCRIPTION
1	8Z-CF3-005-010		WINDOW, DISPLAY
2	8Z-CC3-007-010		BADGE, AIWA 27.5 ABS SIL
3	8Z-CF3-001-010		CABI, FR TUNER<K>
3	8Z-CF3-009-010		CABI, FR TUNER (EZ)<EZ>
4	8Z-CF3-008-010		KEY, TUNER
5	8Z-CF3-006-010		WINDOW, SENSOR
6	8Z-CP3-007-010		KEY, DEMO
7	8Z-CE3-007-010		REFLECTOR, FR
8	8Z-CB3-202-010		GUIDE, LED CNT
9	8Z-CE3-204-010		GUIDE, LED R
10	8Z-CE3-203-010		GUIDE, LED L
11	8Z-CF3-202-010		GUIDE, FL
12	88-930-151-110		FF-CABLE, 30P 1.25
13	88-920-151-110		FF-CABLE, 20P 1.25
14	88-908-151-110		FF-CABLE, 8P 1.25-150MM
15	8Z-CF3-002-010		PANEL, SIDE L LOW
16	8Z-CF3-203-010		PLATE, TOP TUNER
17	8Z-CB3-005-010		PANEL, TOP
18	8Z-CF3-010-010		PANEL, REAR TUNER (EZ)<EZ>
18	8Z-CF3-015-010		PANEL, REAR TUNER (K)<K>
19	8Z-CP3-003-010		PANEL, SIDE R LOW
20	8Z-CB3-006-010		FOOT, DIA40 H4
A	87-721-096-410		QT2+3-10 GLD
B	87-067-761-010		TAPPING SCREW, BVT2+3-10
C	87-067-703-010		TAPPING SCREW, BVT2+3-10
D	87-067-660-010		TAPPING SCREW, BVT2+3-8
E	87-078-060-010		BVIT3PB+3-10

COLOR NAME TABLE

Basic color symbol	Color	Basic color symbol	Color	Basic color symbol	Color
B	Black	C	Cream	D	Orange
G	Green	H	Gray	L	Blue
LT	Transparent Blue	N	Gold	P	Pink
R	Red	S	Silver	ST	Titan Silver
T	Brown	V	Violet	W	White
WT	Transparent White	Y	Yellow	YT	Transparent Yellow
LM	Metallic Blue	LL	Light Blue	GT	Transparent Green
LD	Dark Blue	DT	Transparent Orange		

MODEL NO.

DX-LM99

DISASSEMBLY INSTRUCTIONS

1. Top Panel and Side Panels L/R Removal

- 1) Remove 3 screws **A** from the rear of unit. (See Fig-1)
- 2) Remove 2 screws **B** from side panels L/R. (See Fig-1)

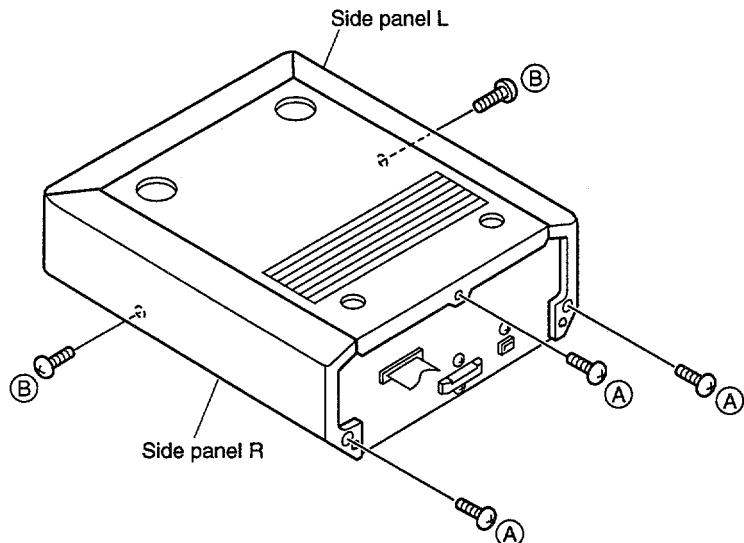


Fig-1

- 3) Remove side panels L/R in the directions of arrows **A** and **B**. (See Fig-2)

- 4) Remove the top panel in the direction of arrow **C**. (See Fig-2)

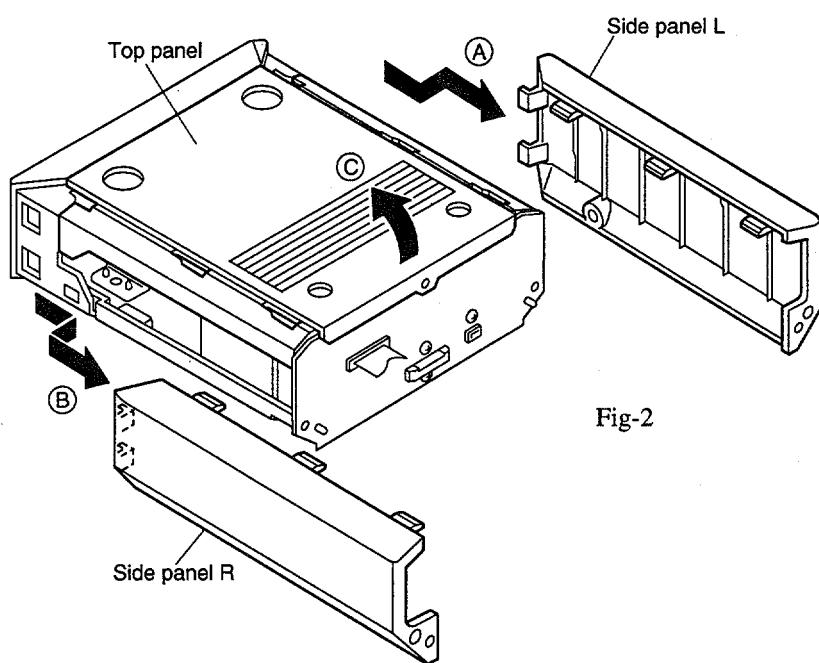


Fig-2

ELECTRICAL MAIN PARTS LIST (DX-LM99)

If can't understand for Description please kindly refer to " REFERENCE NAME LIST ".


REF. NO.	PART NO.	KANRI NO.	DESCRIPTION	REF. NO.	PART NO.	KANRI NO.	DESCRIPTION
IC				C59	87-010-263-080	CAP, ELECT 100-10V	
87-A20-446-010	C-IC,LA9241ML			C60	87-010-196-080	CHIP CAPACITOR,0.1-25	
87-A20-459-010	C-IC,LC78622ED			C61	87-010-196-080	CHIP CAPACITOR,0.1-25	
87-A20-445-010	IC,BA5936			C62	87-A10-373-080	CAP,E 220-6.3 M SSL	
87-017-915-080	IC,BU4094BCF			C65	87-010-404-080	CAP, ELECT 4.7-50V	
87-017-825-010	IC,GP1F32T			C66	87-010-196-080	CHIP CAPACITOR,0.1-25	
87-A21-326-010	IC,TC74HC154AP			C67	87-010-263-080	CAP, ELECT 100-10V	
				C68	87-010-322-080	C-CAP,S 100P-50 CH	
				C69	87-012-154-080	C-CAP,S 150P-50 CH	
				C75	87-010-197-080	CAP, CHIP 0.01 DM	
TRANSISTOR				C76	87-A10-102-080	CAP,E 1000-10 REA	
87-026-463-080	TR,2SA933S (0.3W)			C77	87-010-197-080	CAP, CHIP 0.01 DM	
87-026-239-080	TR,DTC114TK (0.2W)			C78	87-010-221-080	CAP, ELECT 470-10V	
88-NF9-637-010	TR,2SA1318T/U			C79	87-010-263-080	CAP, ELECT 100-10V	
87-026-297-080	TR,DTA144TK			C80	87-010-197-080	CAP, CHIP 0.01 DM	
87-A30-047-080	TR,CSD655E			C81	87-010-405-080	CAP, ELECT 10-50V	
87-026-580-080	C-TR,DTA123JK			C82	87-010-405-080	CAP, ELECT 10-50V	
87-026-238-080	CHIP-TR,DTC114WK			C83	87-010-181-080	CAP,CHIP S 1800P	
87-026-233-080	TR,DTA114TK			C84	87-010-181-080	CAP,CHIP S 1800P	
				C90	87-010-196-080	CHIP CAPACITOR,0.1-25	
DIODE				C93	87-010-197-080	CAP, CHIP 0.01 DM	
				C94	87-010-196-080	CAP, CHIP 0.1-25 ZF	
87-A40-291-080	DIODE,1N4148 (CPT)			C96	87-010-197-080	CAP, CHIP 0.01 DM	
87-017-931-080	ZENER,MTZJ5.6B			C110	87-010-196-080	CHIP CAPACITOR,0.1-25	
				C200	87-012-349-080	C-CAP,S 1000P-50 J CH	
MAIN C.B				CN1	87-A60-424-010	CONN,16P V TOC-B	
C1	87-010-403-080	CAP, ELECT 3.3-50V		CN2	87-A60-081-010	CONN,06P H 9604S-06F	
C2	87-010-197-080	CAP, CHIP 0.01 DM		CN3	87-A60-082-010	CONN,05P H 9604S-05F	
C3	87-010-263-080	CAP, ELECT 100-10V		CN101	87-099-562-010	CONN,18P TUC-P18X-B1	
C4	87-010-248-080	CAP, ELECT 220-10V		FC1	8Z-CX3-608-010	FF-CABLE,16P 1.0 320MM	
C5	87-010-197-080	CAP, CHIP 0.01 DM		FC2	88-906-321-110	FF-CABLE,6P 1.25 320MM	
C6	87-010-374-080	CAP, ELECT 47-10V		FC3	88-905-111-110	FF-CABLE,5P 1.25 110MM	
C7	87-012-349-080	C-CAP,S 1000P-50 CH		L1	87-003-102-080	COIL, 10UH	
C8	87-010-198-080	CAP, CHIP 0.022		L3	87-008-372-080	FILTER, EMIBL01RN1	
C9	87-010-248-080	CAP, ELECT 220-10V		L4	87-003-152-080	COIL, 100UH	
C10	87-010-263-080	CAP, ELECT 100-10V		L5	87-003-152-080	COIL, 100UH	
C12	87-010-401-080	CAP, ELECT 1-50V		R68	87-A50-189-080	C-COIL,S BLM21B272S	
C13	87-010-193-080	CHIP CAPACITOR,0.033		SFR130	87-024-437-080	SFR100K,RH063EC	
C14	87-010-405-080	CAP, ELECT 10-50V		X1	87-A70-046-010	VIB,XTAL 16.934MHZ	
C15	87-018-209-080	CAP,TC U 0.1-50 ZF		FRONT C.B			
C17	87-012-157-080	C-CAP,S 330P-50 CH		CN202	87-A60-083-010	CONN,04P H 9604S-04F	
C18	87-010-213-080	C-CAP,S 0.015-50 B		CN203	88-805-020-790	CONN ASSY,2P 70MM	
C20	87-010-193-080	CHIP CAPACITOR,0.033		CN204	88-805-020-790	CONN ASSY,2P 70MM	
C22	87-010-183-080	C-CAP,S 2700P-50 B		S200	87-A90-696-080	SW,TACT TS2103-03-430	
C23	87-010-956-080	CHIP-CAP,S 0.068-25B		S201	87-A90-696-080	SW,TACT TS2103-03-430	
C25	87-010-994-080	C-CAP,S 680P-50 CH		S202	87-A90-696-080	SW,TACT TS2103-03-430	
C28	87-010-197-080	CAP, CHIP 0.01 DM		S203	87-A90-696-080	SW,TACT TS2103-03-430	
C29	87-010-186-080	CAP,CHIP 4700P		S204	87-A90-696-080	SW,TACT TS2103-03-430	
C30	87-012-156-080	C-CAP,S 220P-50 CH		S205	87-A90-696-080	SW,TACT TS2103-03-430	
C31	87-010-400-080	CAP, E 0.47-50 M 11L		W202	88-904-261-110	FF-CABLE,4P 1.25 260MM	
C32	87-010-374-080	CAP, ELECT 47-10V		SUB C.B			
C33	87-010-401-080	CAP, ELECT 1-50V		C301	87-010-374-080	CAP, ELECT 47-10V	
C34	87-010-184-080	CHIP CAPACITOR 3300P(K)		C302	87-010-197-080	CAP, CHIP 0.01 DM	
C35	87-010-197-080	CAP, CHIP 0.01 DM		CN303	87-099-555-010	CONN,7P TUC-P	
C36	87-010-374-080	CAP, ELECT 47-10V		REAR C.B			
C37	87-010-404-080	CAP, ELECT 4.7-50V		C91	87-010-408-080	CAP, ELECT 47-50V	
C38	87-010-196-080	CHIP CAPACITOR,0.1-25		C92	87-010-382-080	CAP, ELECT 22-25V	
C39	87-012-349-080	C-CAP,S 1000P-50 CH		C95	87-010-197-080	CAP, CHIP 0.01 DM	
C40	87-010-145-080	C-CAP,S 1P-50 CH		C101	87-010-322-080	C-CAP,S 100P-50 CH	
C42	87-010-314-080	C-CAP,S 22P-50V		C102	87-010-322-080	C-CAP,S 100P-50 CH	
C45	87-010-196-080	CHIP CAPACITOR,0.1-25		C103	87-010-322-080	C-CAP,S 100P-50 CH	
C46	87-010-196-080	CHIP CAPACITOR,0.1-25		C104	87-010-322-080	C-CAP,S 100P-50 CH	
C47	87-010-196-080	CHIP CAPACITOR,0.1-25		C107	87-010-197-080	CAP, CHIP 0.01 DM	
C48	87-010-315-080	C-CAP,S 27P-50 CH		C108	87-010-374-080	CAP, ELECT 47-10V	
C50	87-012-140-080	CAP 470P		C109	87-010-322-080	C-CAP,S 100P-50 CH	
C51	87-012-156-080	C-CAP,S 220P-50 CH					
C55	87-010-263-080	CAP, ELECT 100-10V					
C57	87-010-316-080	C-CAP,S 33P-50 CH					
C58	87-010-316-080	C-CAP,S 33P-50 CH					

REF. NO.	PART NO.	KANRI NO.	DESCRIPTION	REF. NO.	PART NO.	KANRI NO.	DESCRIPTION
C111	87-010-197-080		CAP, CHIP 0.01 DM				DRIVE C.B
C112	87-010-382-080		CAP, ELECT 22-25V				
C113	87-010-405-080		CAP, E 10-50 M 11L	CN5	87-A60-086-010		CONN, 06P H 6216
CN102	87-099-573-010		CONN, 18P TUC-P18P-B1	M1	87-045-356-010		MOT, RF-310TA 30
CN103	87-A60-063-010		CONN, 4P V 9604S-04C	M2	87-045-358-010		MOT, RF-310TA 43
CN104	87-A61-040-010		CONN, 20P V WHT 52328	SW1	87-A90-042-010		SW, LEAF MSW-17310MVPO
CN105	87-A61-041-010		CONN, 15P H BLK 52303-1511<U, LH>				
CN304	87-099-566-010		CONN, 7P TUC-P7P-B1				
LOAD C.B							
LED L C.B				CN4	87-099-210-010		CONN, 5P H BLK 6216
CN302	87-A60-619-010		CONN, 2P V 2MM JMT	M3	87-045-305-010		MOT, RF-500TB
D201	87-A40-640-010		LED, SELU1E10CXM BLUE-EF	SW2	87-036-110-010		SW, MICRO SPPB62
LED R C.B				SW3	87-036-110-010		SW, MICRO SPPB62
CN301	87-A60-619-010		CONN, 2P V 2MM JMT				
D202	87-A40-640-010		LED, SELU1E10CXM BLUE-EF				

○チップ抵抗部品コード／CHIP RESISTOR PART CODE

チップ抵抗部品コードの成り立ち


Chip Resistor Part Coding

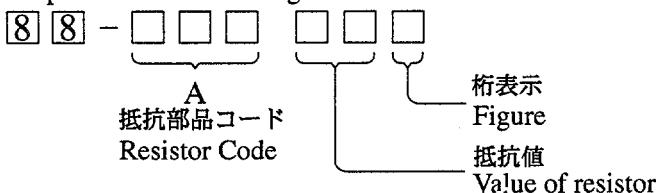

チップ抵抗
Chip resistor

容量 Wattage	種類 Type	許容誤差 Tolerance	記号 Symbol	寸法/Dimensions (mm)			抵抗コード : A Resistor Code : A
				外形/Form	L	W	
1/16W	1005	± 5%	CJ		1.0	0.5	0.35 104
1/16W	1608	± 5%	CJ		1.6	0.8	0.45 108
1/10W	2125	± 5%	CJ		2	1.25	0.45 118
1/8W	3216	± 5%	CJ		3.2	1.6	0.55 128

TRANSISTOR ILLUSTRATION (DX-LM99)

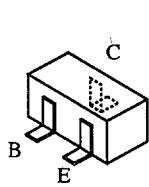


DTC114TK
DTA144TK
DTA123JK
DTC114WK
DTA114TK


CSD655E

2SA933S

2SA1318T/U

WIRING (MAIN / FRONT / SUB / REAR / LED / DRIVE / LOAD : DX-LM99)

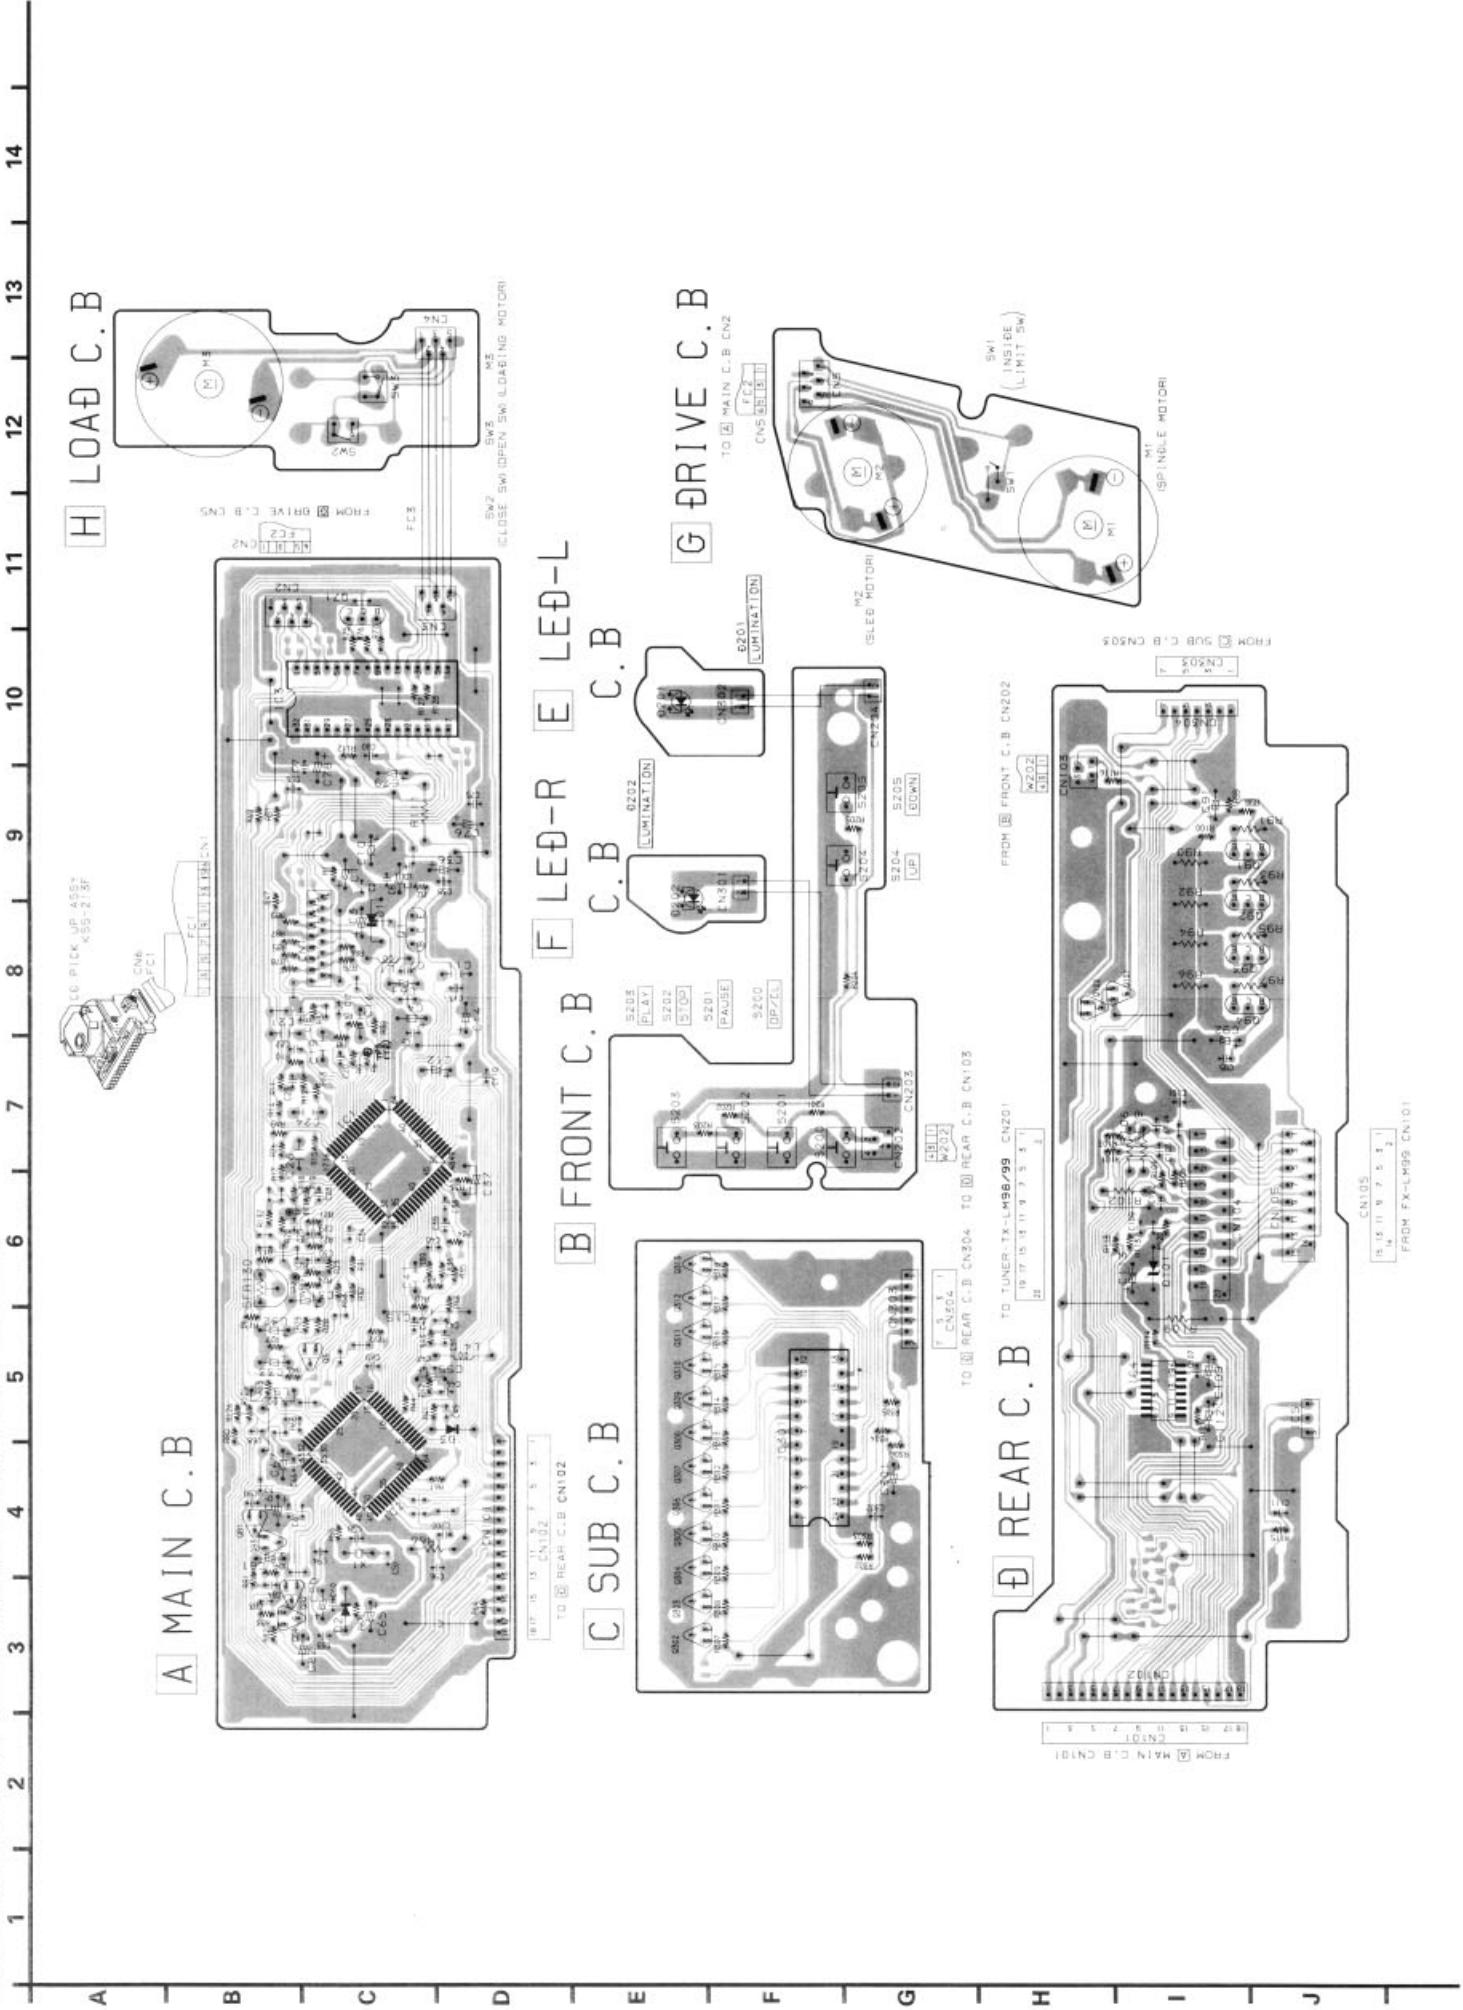

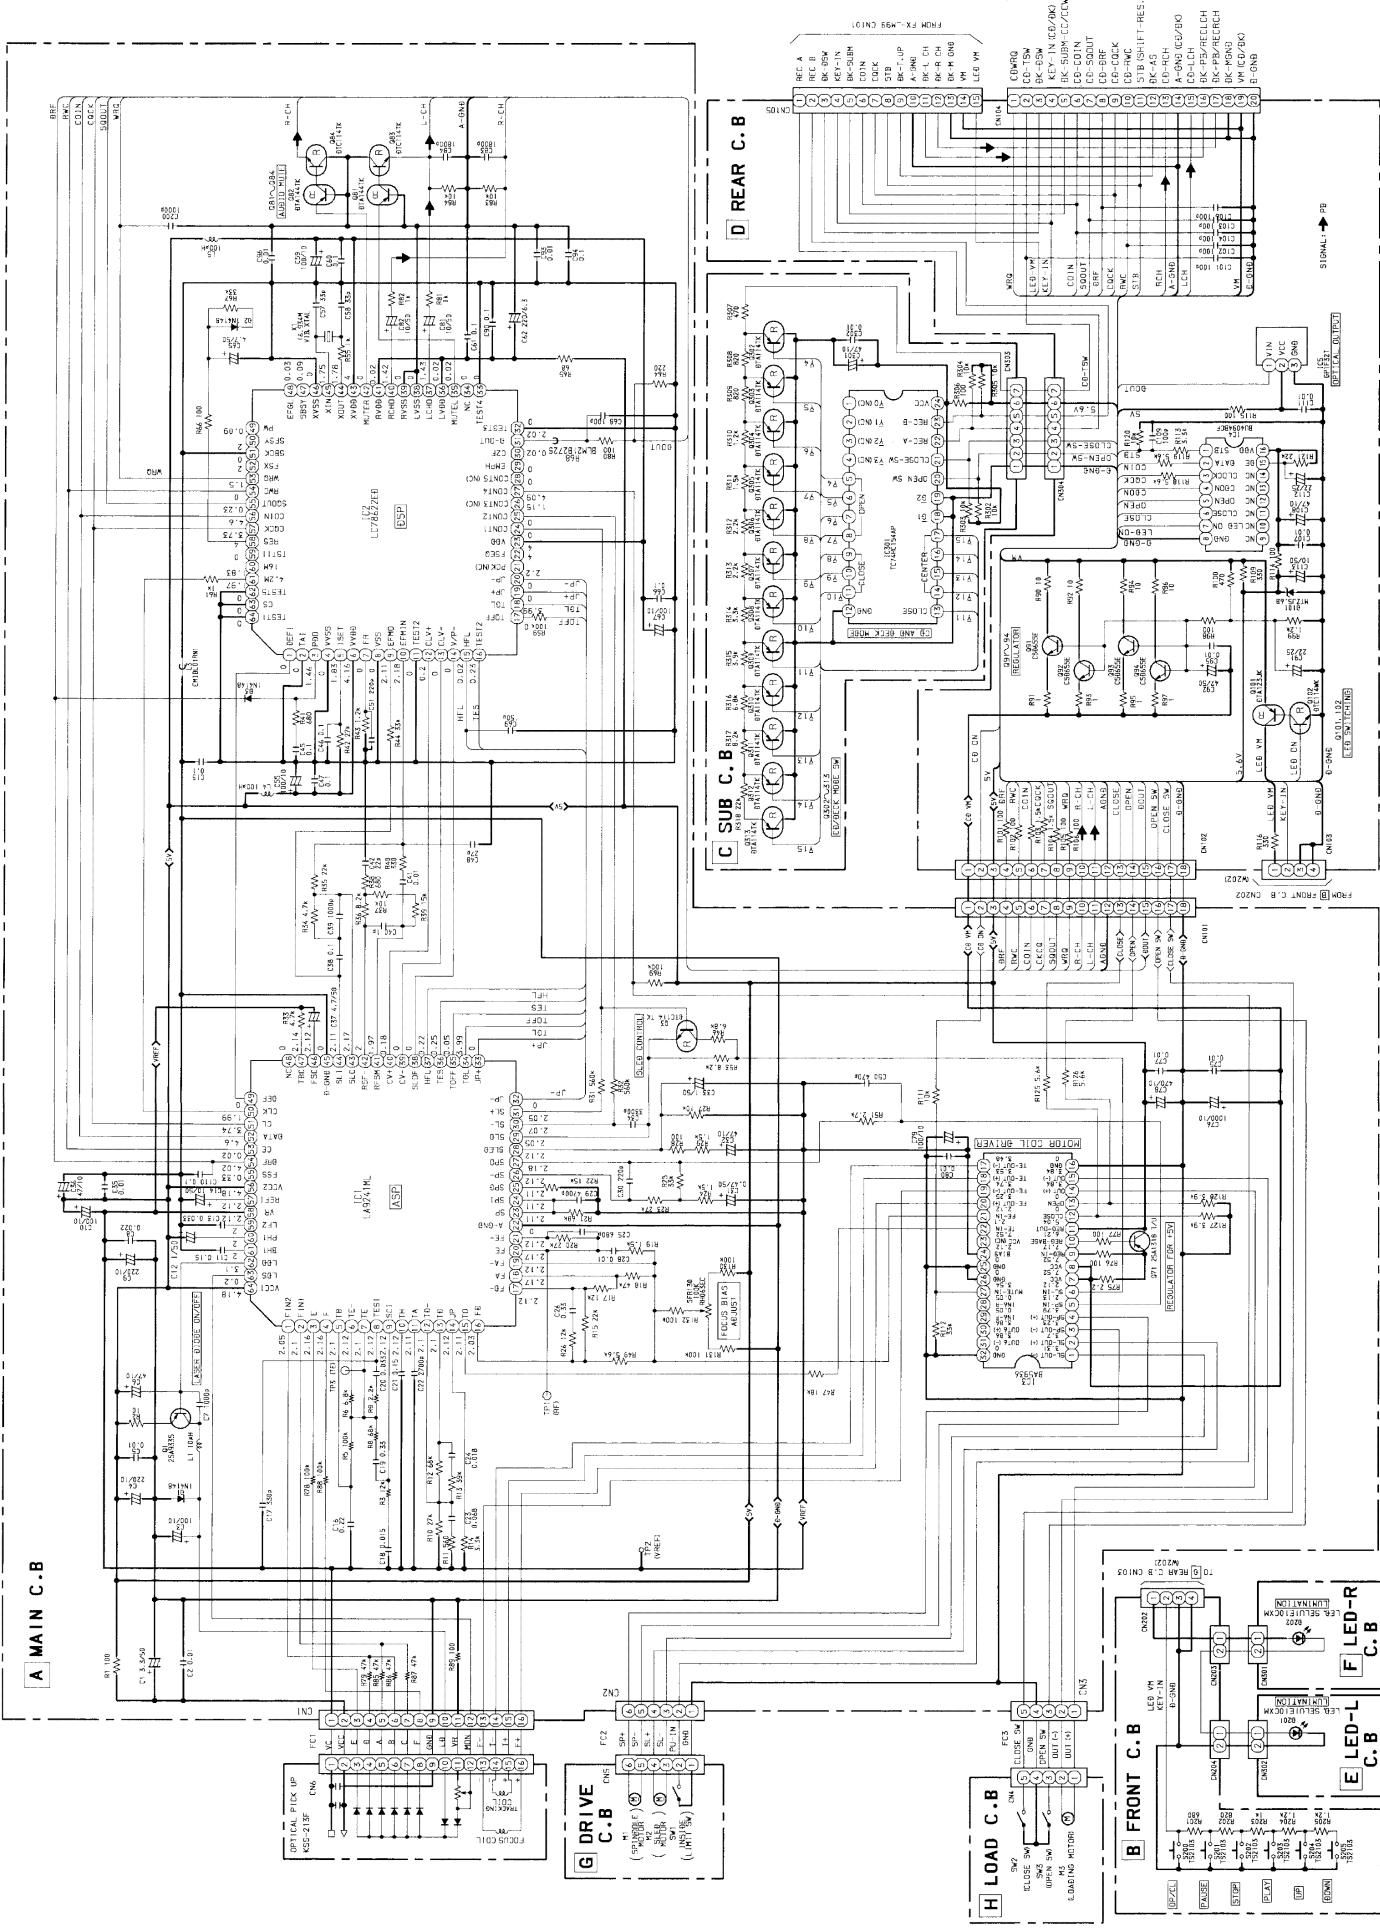

IC DESCRIPTION (DX-LM99)
IC: LC8622ED

Pin No.	Pin Name	I/O	Description	Pin No.	Pin Name	I/O	Description
1	DEFI	I	Defect detection signal input.	41	RVIDD	I/O	Right channel power supply.
2	TAI	I	Test input. A pull down resistor is built in. Must be connected to OV.	42	MUTER	O	Right channel mute output.
3	PDO	O	External VCO control phase comparator output.	43	XVDD	-	Crystal oscillator power supply.
4	VSS	-	Internal VCO ground. Must be connected to OV.	44	XOUT	O	Connections for a 16.9344MHz crystal oscillator element.
5	ISET	I	PDO output current adjustment resistor connection.	45	XIN	I	Input DC constituent parts of TE signal.
6	VVID	-	Internal VCO power supply.	46	XVSS	-	Connected to pick up photo-diode. Positive setting by FIN2 pin generates RF signal.
7	FR	I	VCO frequency range adjustment.	47	SBSY	O	Connected to pick up photo-diode. Negative setting does FE signal.
8	VSS	-	Digital system ground. Must be connected to OV.	48	EFG1	O	Connected to pick up photo-diode.
9	EFMO	O	Slice level control EFM signal output.	49	PW	O	Connected to pick up photo-diode. Negative setting by FIN1 pin generates TE signal.
10	EPMIN	I	EFMIN	50	SFSY	O	Connected to pick up photo-diode. Positive setting by FIN1 pin generates TE signal.
11	TEST2	I	Test input. A pull down resistor is built in. Must be connected to OV.	51	SBCK	I	Subcode readout clock input. This is a schmitt input. Must be connected to OV.
12	CLV+	O	Disk motor control output. Three-value output is also possible when specified by microprocessor command.	52	FSX	O	Output for the 7.3kHz synchronization signal divided from the crystal oscillator.
13	CLV-	O	Microprocessor command.	53	WRQ	O	Subcode Q output standby output.
14	V/P	O	Rough servo/yaw control automatic switching monitor output.	54	RWC	I	Read/write control input. This is a schmitt input.
15	HEL	I	Track detection signal input. This is a schmitt input.	55	SQOUT	O	Subcode Q output.
16	TEST2	I	Tracking error signal input. This is a schmitt input.	56	COIN	I	Command input from the control microprocessor.
17	TOFF	O	Tracking of output.	57	CLOCK	I	Input for both the command input clock and the subcode readout clock.
18	TGL	O	Tracking gain switching output. Increase the gain when low.	58	RES	I	Chip reset input.
19	JP+	O	Track jump output.	59	TEST1	O	Test output. Leave open. (Not used)
20	JP-	O	Three value output is also possible when specified by micro processor command.	60	16M	O	16.9344MHz output. (Not used)
21	PCK	O	EFM data playback clock monitor. Output 4.3219MHz when the phase is locked. (Not used)	61	4.2M	O	4.2336MHz output.
22	FSEQ	O	Synchronization signal detection output. (Not used)	62	TEST5	I	Test input. A pull down resistor is built in. Must be connected to OV.
23	VDD	-	Digital system power supply.	63	CS	I	Chip select input. Must be connected to OV.
24	CONT1	I/O	General purpose I/O pin 1.	64	TEST1	I	Test input. no pull down resistor. Must be connected to OV.
25	CONT2	I/O	General purpose I/O pin 2.	65	SLD	O	Output tracking gain control signal from DSP. TGL = "H": gain low.
26	CONT3	I/O	General purpose I/O pin 3. (Not used)	66	SL-	I	Input track sending signal from microcomputer.
27	CONT4	I/O	General purpose I/O pin 4.	67	SL+	I	Output tracking gain control signal from DSP.
28	CONT5	I/O	General purpose I/O pin 5. (Not used)	68	JP+	I	Input tracking gain control signal from DSP. TGL = "H": gain low.
29	EMPH	O	De-emphasis monitor pin. A high level indicates playback of a de-emphasis disk.	69	TGL	I	Input tracking gain control signal from DSP.
30	C2F	O	C2 flag output. (Not used)	70	TOFF	I	Input track control signal from DSP.
31	D-OUT	O	Digital output.	71	TES	O	Output TES signal to DSP.
32	TEST3	I	Test input. A pull down resistor is built in. Must be connected to OV.	72	HFL	O	HIGH FREQUENCY LEVEL: detects whether main-beam is on bit or mirror position.
33	TEST4	I	Test input. A pull down resistor is built in. Must be connected to OV.	73	SLOF	I	Input sled servo off control.
34	NC	-	Not connected.	74	CV	I	Input CLV error signal from DSP.
35	MUTEL	O	Left channel mute output.	75	CV*	I	Output RF.
36	LVDD	-	Left channel power supply.	76	RFSM	O	Establish RF gain and IT compensation value from EFM signal with RFSM pin.
37	LCHO	O	Left channel output.	77	RFS-	O	SLICE LEVEL CONTROL: control data slice level by DSP with RF wave form.
38	LYSS	-	Left channel ground. Must be connected to OV.	78	SLC	I	Control data slice level by DSP.
39	RVSS	-	Right channel ground. Must be connected to OV.	79	SLI	I	Digital GND.
40	RCHO	O	Right channel output.	80	FSC	O	Connected to focus search smoothing capacitor.
41	NC	-	Not connected.	81	TRC	I	TRACKING BALANCE CONTROL: establish EFM balance variable range.
42	NC	-	Not connected.	82	NC	-	Not connected.

Pin No.	Pin Name	I/O	Description	Pin No.	Pin Name	I/O	Description
1	FIN2	I	Connected to pick up photo-diode. Positive setting by FIN2 pin generates RF signal.	2	FIN1	I	Connected to pick up photo-diode. Negative setting does FE signal.
3	E	I	Connected to pick up photo-diode.	4	F	I	Connected to pick up photo-diode. Negative setting by FIN1 pin generates TE signal.
5	TB	I	Input DC constituent parts of TE signal.	6	TE-	O	Connected to TE pin with resistor set TE signal gain.
7	TE	O	Output TE signal.	8	TESI	I	Input TES (TRACK ERROR SENSE) comparator. Band pass and input TE signal.
9	SCI	I	Input shock detection.	10	TH	I	Establish tracking gain value.
11	TA	O	TA amplifier output.	12	TD-	I	Compose tracking phase compensation value between FD and VR pins.
13	TD	O	Used for tracking phase compensation setting.	14	JP	I	Establish amplitude of tracking jump signal (kick pulse).
15	TO	O	Output tracking control signal.	16	FD	O	Output focusing control signal.
17	FD-	I	Compose focusing phase compensation value between FD and FA pins.	18	FA	O	Compose focusing phase compensation value between FD- and FA- pins.
19	FA-	I	Compose focusing phase compensation value between FA and FE pins.	20	FE	O	Output tracking control signal.
21	FE-	I	Connected to FE pin with resistor set FE signal gain.	22	A-GND	-	Analog GND.
23	SP	O	Output straight end for CV+ and CV- pins input signal.	24	SPI	I	Spiral amplifier input.
25	SFG	I	Connect resistor for gain setting at spindle 12cm mode.	26	SP-	I	Connect spindle phase compensation value with SPD pin.
27	SFO	O	Output spindle control signal.	28	SLED	I	Output sled phase compensation value.
29	SLD	O	Output sled control signal.	30	SL-	I	Input sled sending signal from microcomputer.
31	SL+	I	Connect resistor for gain setting at spindle 12cm mode.	32	JP-	I	Input tracking jump signal from DSP.
33	JP+	I	Connect sled phase compensation value.	34	TGL	I	Input tracking gain control signal from DSP. TGL = "H": gain low.
35	TOFF	I	Input tracking gain control signal from DSP.	36	TES	O	Output TES signal to DSP.
37	HFL	O	HIGH FREQUENCY LEVEL: detects whether main-beam is on bit or mirror position.	38	SLOF	I	Input sled servo off control.
39	CV	I	Input CLV error signal from DSP.	40	CV*	I	Output RF.
41	RFSM	O	Establish RF gain and IT compensation value from EFM signal with RFSM pin.	42	RFS-	O	SLICE LEVEL CONTROL: control data slice level by DSP with RF wave form.
43	SLC	I	Control data slice level by DSP.	44	SLI	I	Digital GND.
45	D-GND	-	Not connected.	46	FSC	O	Connected to focus search smoothing capacitor.
47	TRC	I	TRACKING BALANCE CONTROL: establish EFM balance variable range.	48	NC	-	Not connected.

Pin No.	Pin Name	I/O	Description
49	DEF	O	Output disk defect detection.
50	CLK	I	Input reference clock. Inputs 4.23 MHz from DSP.
51	CL	I	Input microcomputer command clock.
52	DATA	I	Input microcomputer command data.
53	CE	I	Input microcomputer command chip enables.
54	DRF	O	DETECT RF: Output RF level detection.
55	FSS	I	FOCUS SEARCH SELECT: switches focus search mode (between \pm search and \pm search against reference voltage). (Not used)
56	VCC2	—	Servo/digital VCC.
57	REFI	—	Connected to reference voltage by pass condenser.
58	VR	O	Output reference voltage.
59	LF2	—	Establish value in detecting disc defect.
60	PH1	—	Connected to capacitor used to hold peak of RF signal.
61	BH1	—	Connected to capacitor used to hold bottom of RF signal.
62	LDD	O	APC-circuit output pin.
63	LDS	I	APC-circuit input pin.
64	VCC1	—	RF VCC.


IC, BU4094BCF

Pin No.	Pin Name	I/O	Description
1	STB	I	STB input.
2	DATA	I	Data input.
3	CLOCK	I	Clock input.
4	CD ON	O	CD ON output.
5	OPEN	O	Open output.
6	CLOSE	O	Close output.
7	LED ON	O	LED ON/OFF.
8	GND	—	Connect to ground.
9	NC	—	Not connected.
10	NC	—	Not connected.
11	NC	—	Not connected.
12	NC	—	Not connected.
13	NC	—	Not connected.
14	NC	—	Not connected.
15	DE	I	Data enable.
16	VDD	—	Voltage input.

Pin No.	Pin Name	I/O	Description
1	SL-OUT (-)	O	Sled output -.
2	SL-OUT (+)	O	Sled output +.
3	SP-OUT (-)	O	Spindle output -.
4	SP-OUT (+)	O	Spindle output +.
5	SP-IN	I	Spindle input.
6	SL-IN	I	Sled input.
7	VCC	-	Voltage input.
8	VCC	-	Voltage input.
9	REG-IN	I	Reg current input.
10	REG-BASE	I	Tr BASE connect.
11	REG-OUT	O	Reg output.
12	CLOSE	I	Close input.
13	OPEN	I	Open input.
14	OUT (+)	O	OP/CL output +.
15	OUT (-)	O	OP/CL output -.
16	GND	-	Connect to ground.
17	TE-OUT(-)	O	TE output -.
18	TE-OUT(+)	O	TE output +.
19	FE-OUT(-)	O	FE output -.
20	FE-OUT(+)	O	FE output +.
21	FE-IN	I	FE input.
22	TE-IN	I	TE input.
23	VCC	-	Voltage input. (Not used)
24	BIAS	I	Bias input.
25	GND	-	Connect to ground.
26	GND	-	Connect to ground.
27	MUTE IN	I	Mute input.
28	IN6-R	-	Not used.
29	IN6-F	-	Not used.
30	OUT6(+)	-	Not used.
31	OUT6(-)	-	Not used.
32	GND	-	Connect to ground.

IC BLOCK DIAGRAM (DX-LM99)

IC, TC74HC154AP

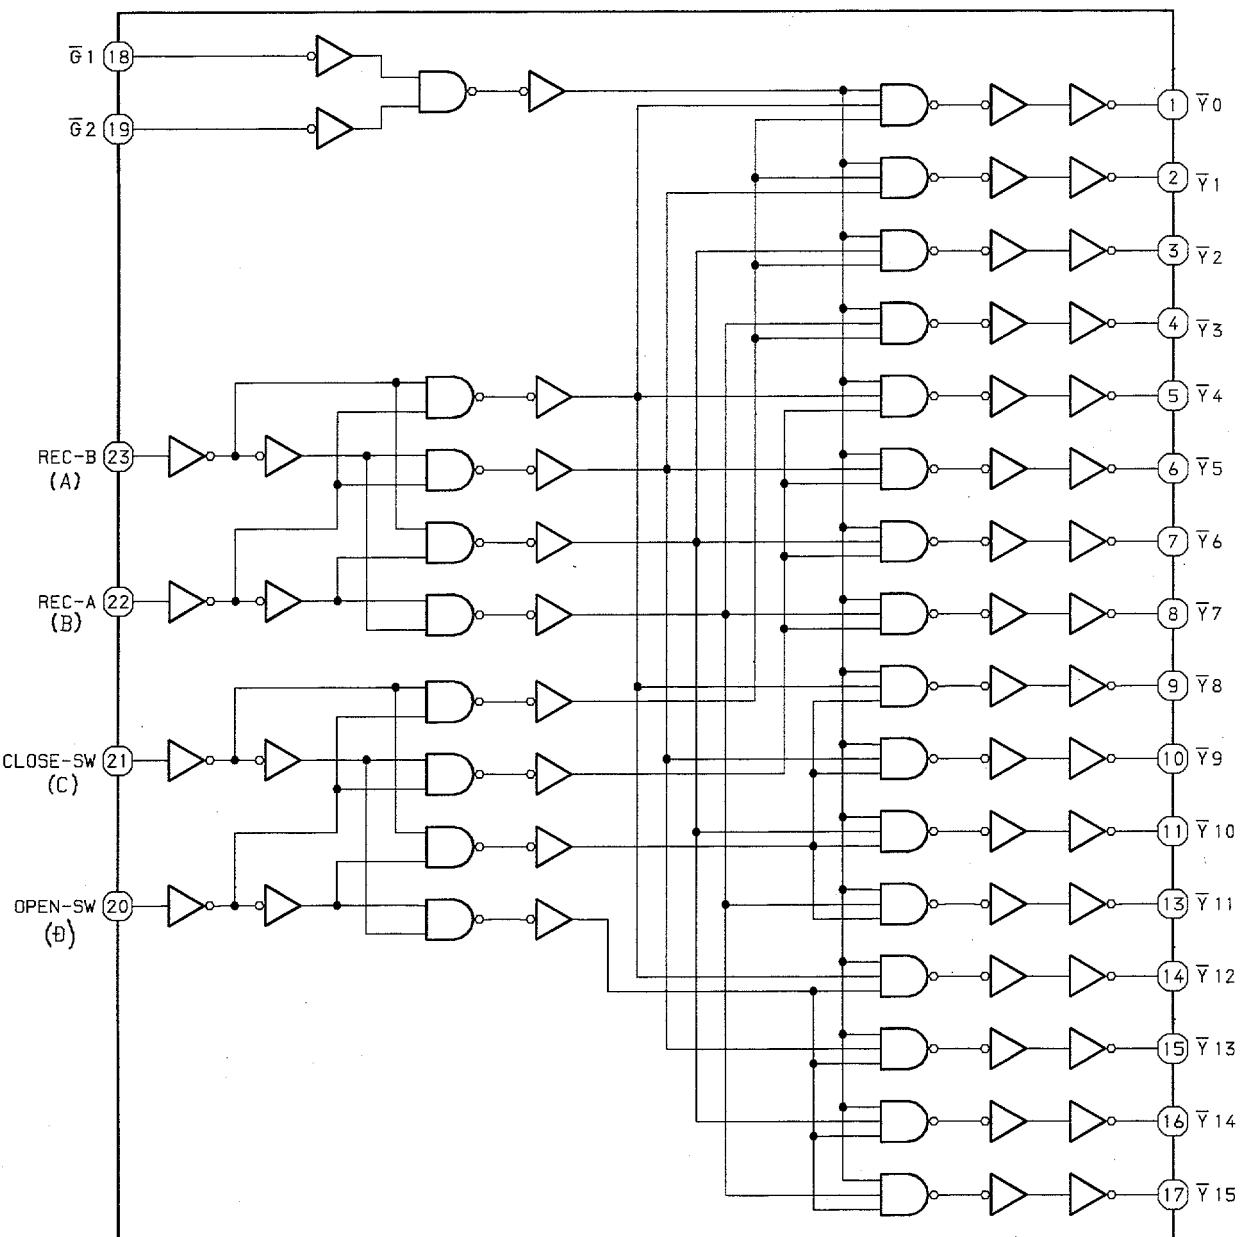


INPUT						SELECTED OUTPUT (L)
G1	G2	B	C	B	A	
L	L	L	L	L	L	Y0
L	L	L	L	L	H	Y1
L	L	L	L	H	L	Y2
L	L	L	L	H	H	Y3
L	L	L	H	L	L	Y4
L	L	L	H	L	H	Y5
L	L	L	H	H	L	Y6
L	L	L	H	H	H	Y7
L	L	H	L	L	L	Y8
L	L	H	L	L	H	Y9
L	L	H	L	H	L	Y10
L	L	H	L	H	H	Y11
L	L	H	H	L	L	Y12
L	L	H	H	L	H	Y13
L	L	H	H	H	L	Y14
L	L	H	H	H	H	Y15
X	H	X	X	X	X	NONE
H	X	X	X	X	X	NONE

X: DON'T CARE


ADJUSTMENT (DX-LM99)

A MAIN C.B

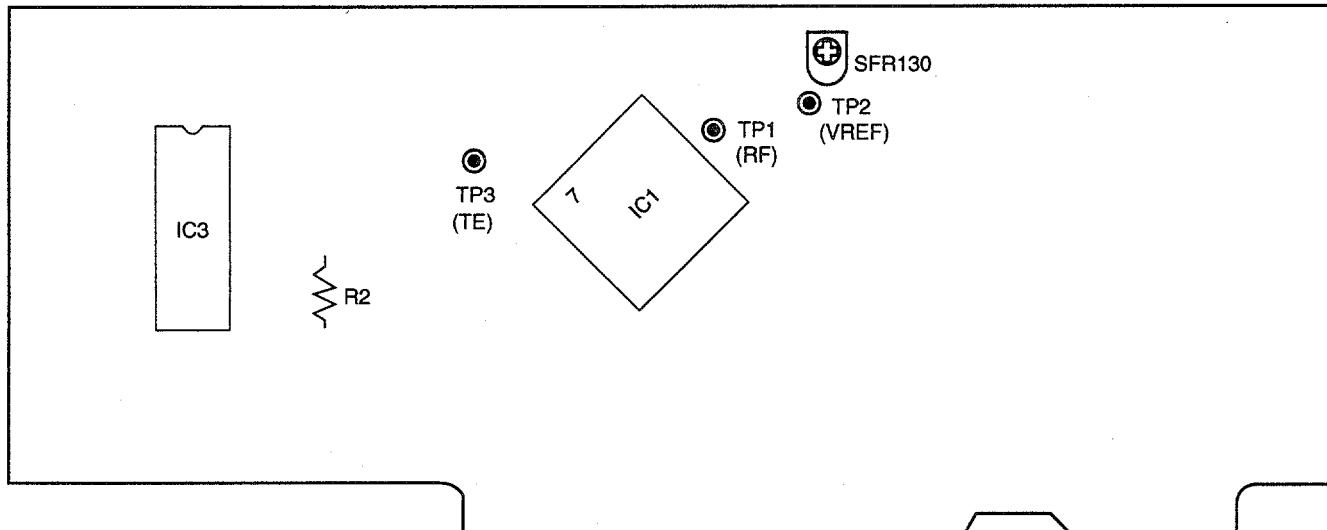


Note: Connect the probe (10:1) to adjust.
For adjustment, connect the negative side \ominus of
oscilloscope to TP2 (VREF).

1. Focus bias adjustment
This adjustment is applied when the optical block is replaced/
repaired.

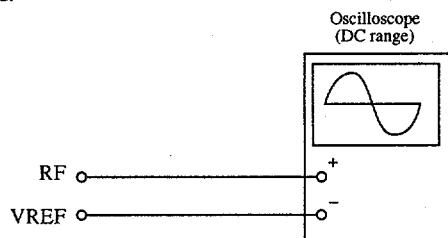

- 1) Connect oscilloscope to test point (TP1)RF and (TP2)VREF
- 2) Set the POWER switch to ON.
Insert the test disk TCD-782 (YEDS-18), and play the second track.
Adjust SFR130 so that the amplitude of wave form of the oscilloscope reaches maximum and the diamond shape in the center becomes clear.

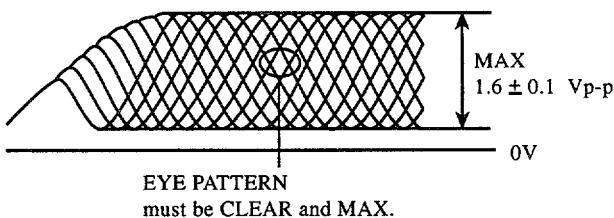


VOLT/DIV: 0.5V
TIME/DIV: 0.5μs

- 3) Laser electrical current check
Laser electrical current is checked at R2 (both ends of 10Ω voltage). Check that laser electrical current is (6.0mA against the electrical current value specified on the back label of laser pickup.




$$\text{Laser electrical current lop} = \frac{\text{Both ends voltage of R2}}{10\Omega}$$

2. Tracking balance check

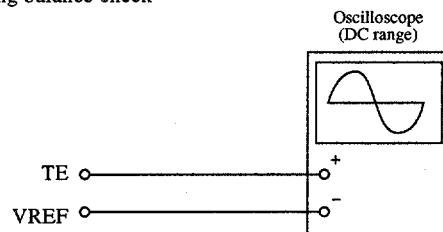

- 1) Connect oscilloscope to the test point (TP3)TE and (TP2)Vref.
- 2) Start CD test mode.
- 3) Insert the test disk TCD-782 (YEDS-18), and set to traverse mode of CD test mode.
- 4) Check that the traverse wave forms of oscilloscope make symmetrical ups and downs as follows.
- 5) After checking, quit CD test mode.

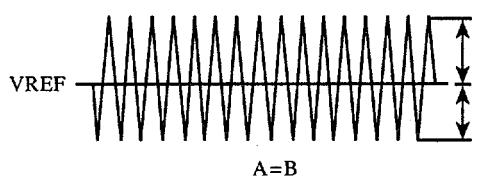

VOLT/DIV: 20mV
TIME/DIV: 1ms

TEST MODE (DX-LM99)

- 1 Activate CD test mode
Press and hold ► button of the CD deck (DX-LM99), and put the AC plug into an outlet.
When CD test mode is started, all the displays are lit.
- 2 Quitting CD test mode
Press the POWER key or the function keys, which are not for CD operation, or remove the AC plug from the outlet to quit CD test mode.
- 3 Description of test mode functions

MODE	Operation	Display	Action	Details
Start mode	Test mode starts	All are lit.	-	-
Search mode		CD	Sequential focus search PU lens repeats full-swings Note 1	Checks APC circuit. Measures laser electric current. Checks focus error waveforms.
Play mode		Track No. display. Playing time is displayed	Normal replay. If TOC READ is not available, the search mode action is applied	Focus servo. Tracking servo. CLY servo. Sled servo.
Traverse mode		Track No. display. Playing time display flashes	Replay pose status	Tracking Servo OFF.
Sled mode		CD Test	Moves to pickup inner track. Moves to pickup outer track.	Sled servo. Checks mechanical action.

Note 1

When focus search is operated continuously for more than 10 minutes, the protection circuit becomes activated due to the generation of heat from the driver IC, and CD may not work. In this case, turn off the power, and leave for about 10 minutes to release the heat before restarting.


MECHANICAL PARTS LIST (DX-LM99)

If can't understand for Description please kindly refer to "REFERENCE NAME LIST".


REF. NO.	PART NO.	KANRI NO.	DESCRIPTION	REF. NO.	PART NO.	KANRI NO.	DESCRIPTION
1	8Z-CC3-007-010		BADGE, AIWA 27.5 ABS SIL	16	8Z-CX3-204-010		HLDR, PWB CD
2	8Z-CX3-001-010		CABI, FR CD	17	8Z-CX3-012-010		PANEL, REAR CD (Y)
3	8Z-CX3-005-010		KEY, PLAY CD	18	8Z-CX3-608-010		FF-CABLE, 16P 1.0 320MM
4	8Z-CC3-005-010		KEY_UP DOWN	19	88-906-321-110		FF-CABLE, 6P 1.25 320MM
5	88-904-261-110		FF-CABLE, 4P 1.25 260MM	20	88-905-111-110		FF-CABLE, 5P 1.25 110MM
6	8Z-CX3-004-010		RING, CD	21	8Z-CE3-006-010		FOOT, DIA40 H4
7	8Z-CE3-007-010		REFLECTOR, FR	22	8Z-CX3-007-010		PANEL, SIDE R HIGH CD
8	8Z-CE3-204-010		GUIDE, LED R	A	87-721-096-410		QT2+3-10 GLD
9	8Z-CE3-202-010		GUIDE, LED CNT	B	87-067-703-010		TAPPING SCREW, BVT2+3-10
10	8Z-CE3-203-010		GUIDE, LED L	C	87-067-761-010		TAPPING SCREW, BVT2+3-10
11	8Z-CX3-003-010		PANEL, TRAY	D	87-078-060-010		BVIT3PB+3-10
12	8Z-CX3-006-010		PANEL, SIDE L HIGH CD	E	87-067-660-010		TAPPING SCREW, BVT2+3-8
13	8Z-CE3-005-010		PANEL, TOP	F	87-067-584-010		TAPPING SCREW, BVT2+3-6
14	8Z-CX3-202-010		PLATE, TOP CD				
15	8Z-CX3-607-010		CONN ASSY, 20P 52305-2011				

COLOR NAME TABLE

Basic color symbol	Color	Basic color symbol	Color	Basic color symbol	Color
B	Black	C	Cream	D	Orange
G	Green	H	Gray	L	Blue
LT	Transparent Blue	N	Gold	P	Pink
R	Red	S	Silver	ST	Titan Silver
T	Brown	V	Violet	W	White
WT	Transparent White	Y	Yellow	YT	Transparent Yellow
LM	Metallic Blue	LL	Light Blue	GT	Transparent Green
LD	Dark Blue	DT	Transparent Orange		

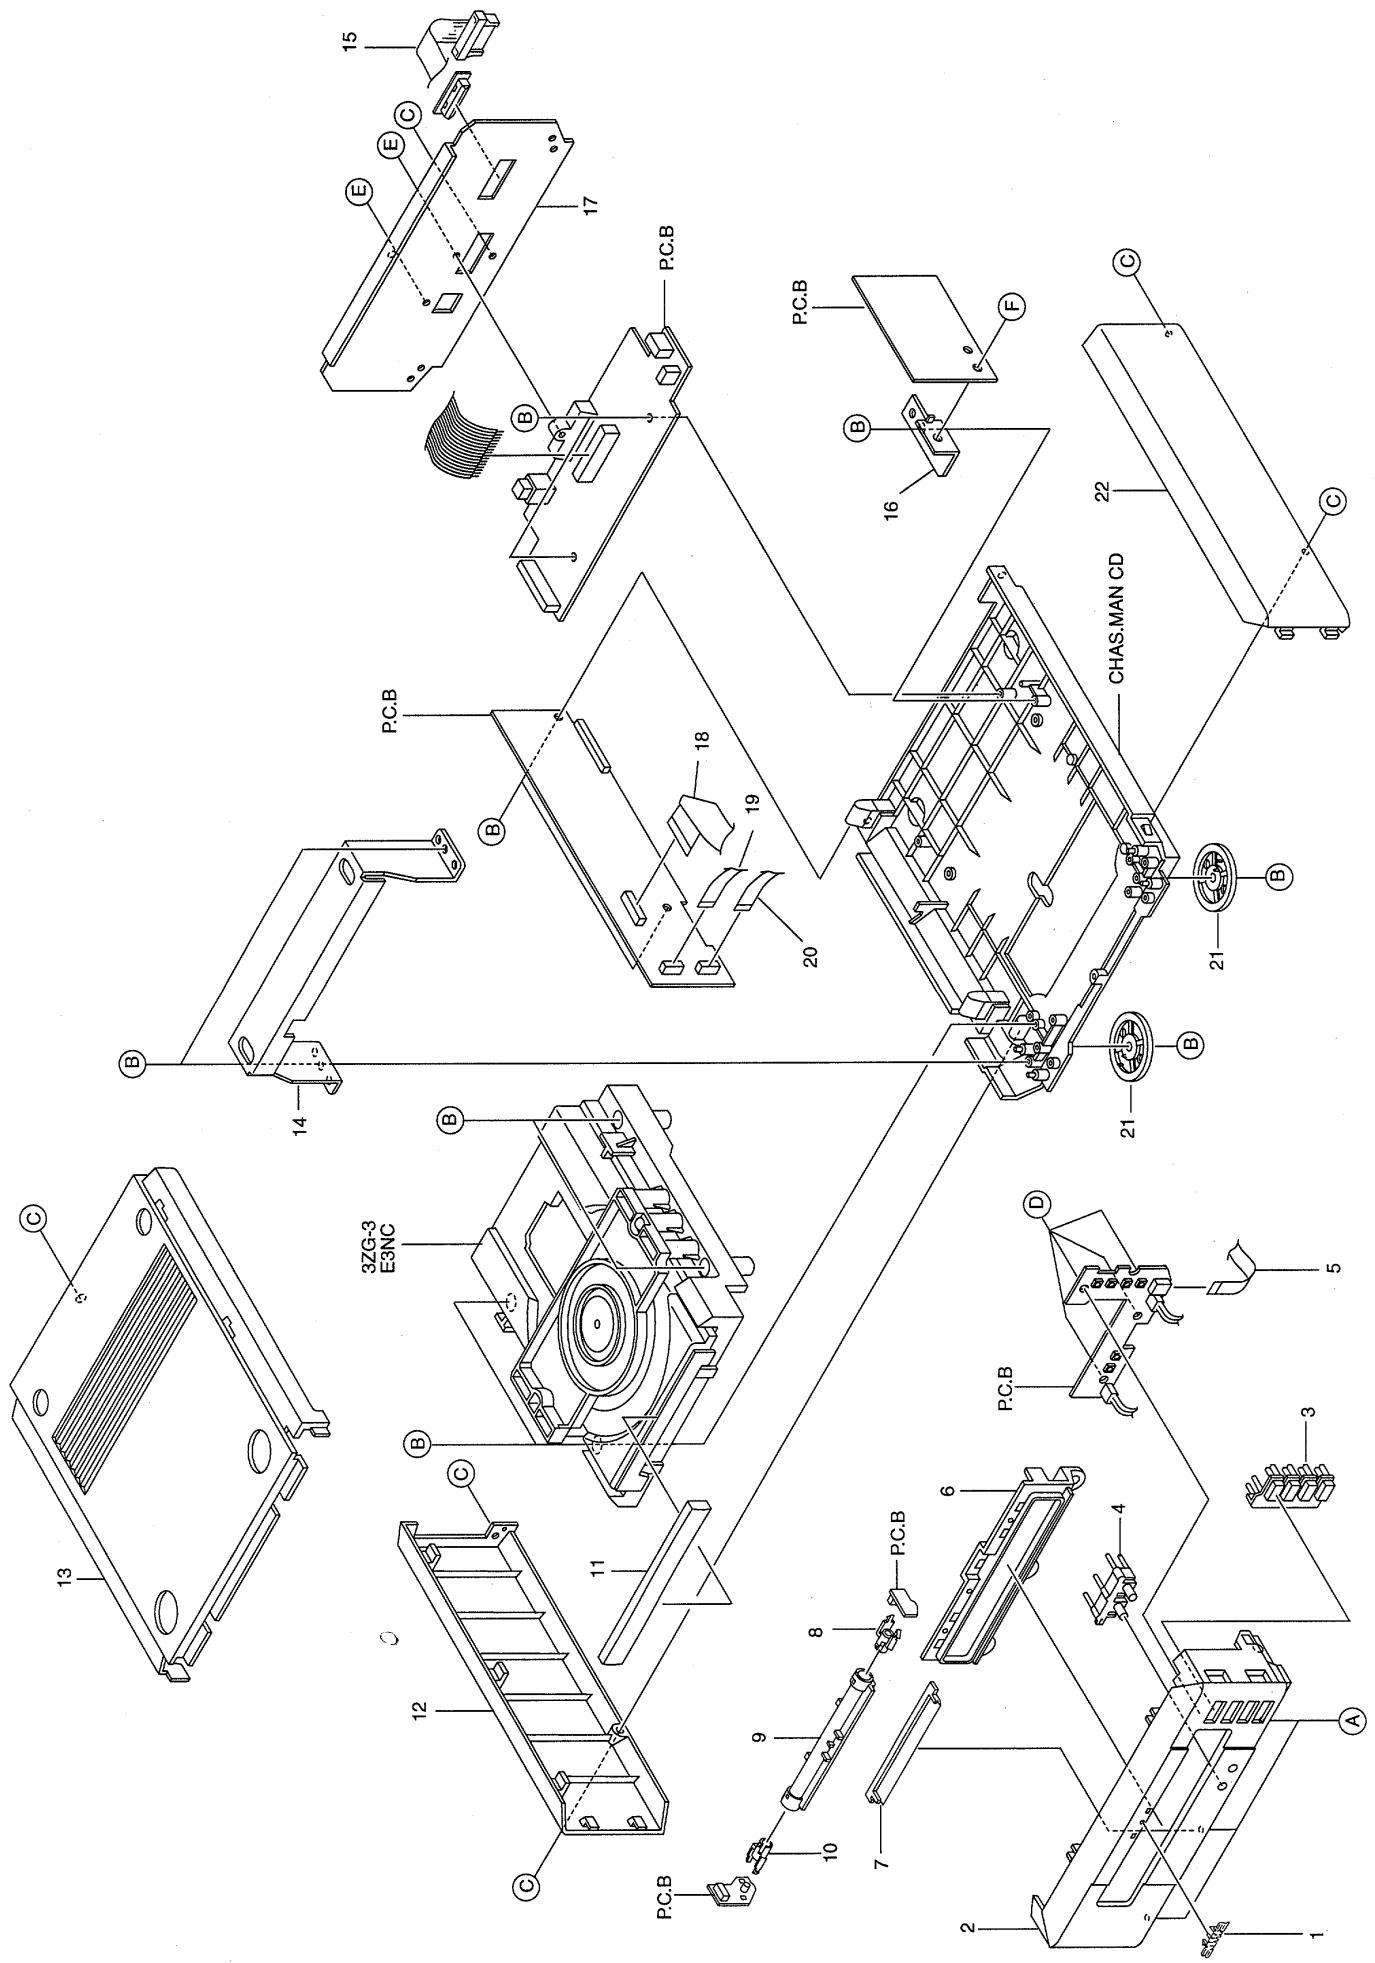

CD MECHANISM EXPLODED VIEW 1 / 2 (DX-LM99)

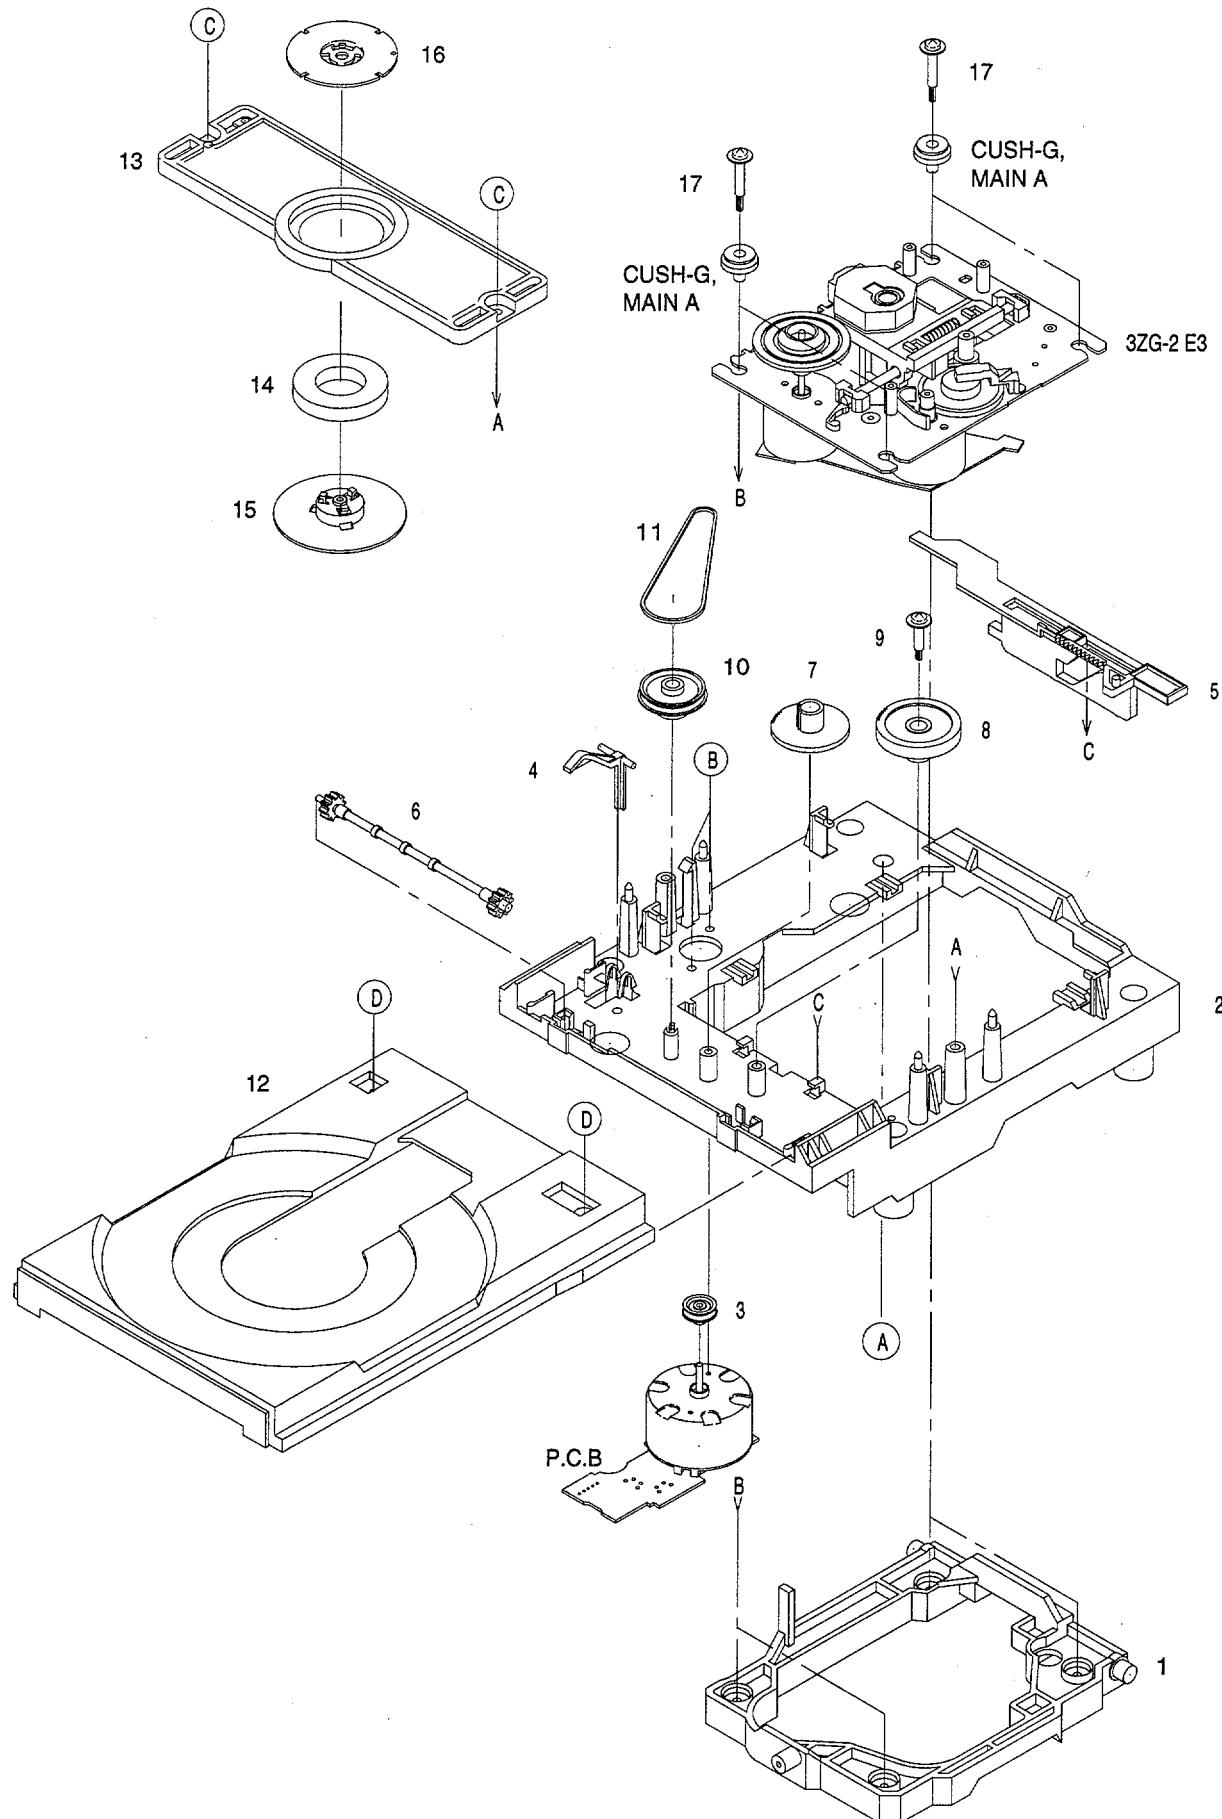


CD MECHANISM PARTS LIST 1 / 2 (DX-LM99)

If can't understand for Description please kindly refer to "REFERENCE NAME LIST".

REF. NO.	PART NO.	KANRI NO.	DESCRIPTION
1	83-ZG3-224-510		HLDR M2
2	83-ZG3-228-610		CHAS,L6
3	83-ZG3-208-010		PULLEY,MOTOR
4	83-ZG3-213-010		LVR, SW
5	83-ZG3-209-610		CAM, SLIDE
6	83-ZG3-207-010		GEAR, TRAY
7	83-ZG3-204-210		GEAR, C
8	83-ZG3-205-010		GEAR, D
9	83-ZG3-217-010		S-SCREW, GEAR D
10	83-ZG3-220-210		GEAR, PULLEY 2
11	83-ZG3-214-010		BELT, L
12	83-ZG3-229-410		TRAY, CD 2
13	83-ZG3-210-110		HLDR, CHUCK
14	83-ZG3-602-010		RING, MAG
15	83-ZG3-212-010		CAP, DISC
16	83-ZG3-211-010		PLATE, DISC
17	81-ZG1-254-010		S-SCREW, MECH HLDR
A	87-067-945-110		VFT2+3-12(F10)
B	87-251-071-410		U+2.6-4
C	87-512-074-210		SCREW, 2+2.6-8
D	87-352-075-210		VT2+2.6-10

CD MECHANISM EXPLODED VIEW 2 / 2 (DX-LM99)

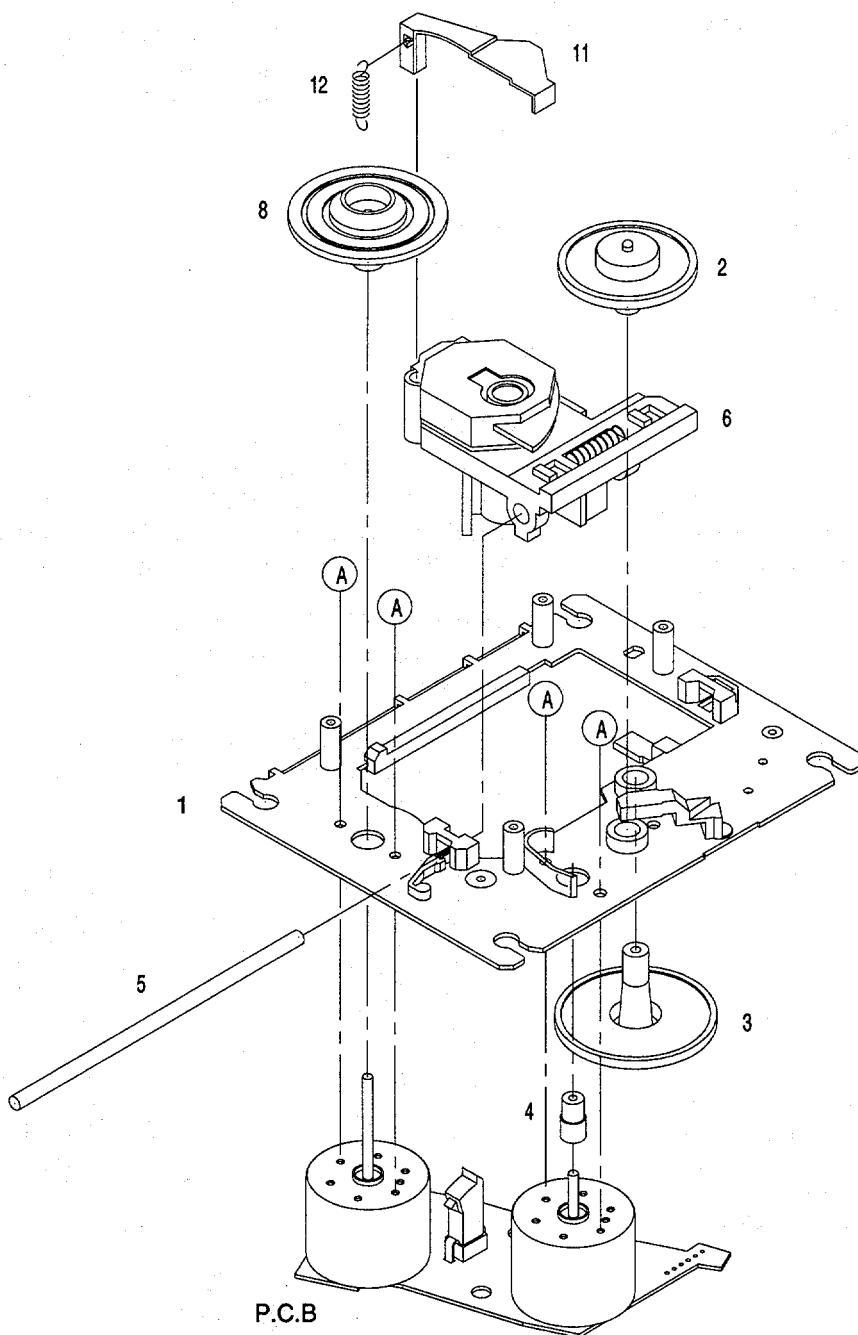

CD MECHANISM PARTS LIST 2 / 2 (DX-LM99)


If can't understand for Description please kindly refer to "REFERENCE NAME LIST".

REF. NO.	PART NO.	KANRI NO.	DESCRIPTION
1	83-ZG2-243-210		CHAS ASSY, SHT
2	83-ZG2-235-010		GEAR, A3
3	83-ZG2-205-210		GEAR, B
4	83-ZG2-236-010		GEAR MOTOR 3
5	83-ZG2-253-010		SHAFT, SLIDE 5
6	87-A90-836-010		PICKUP, KSS-213F
8	83-ZG2-227-210		TURN TABLE, C1
11	83-ZG2-245-410		LEVER, SHUTTER
12	83-ZG2-250-110		SPR-E, SHT 2
A	87-261-032-210		SCREW V+2-3

SPEAKER DISASSEMBLY INSTRUCTIONS


Type.1

Insert a flat-bladed screwdriver into the position indicated by the arrows and remove the panel. Remove the screws of each speaker unit and then remove the speaker units.

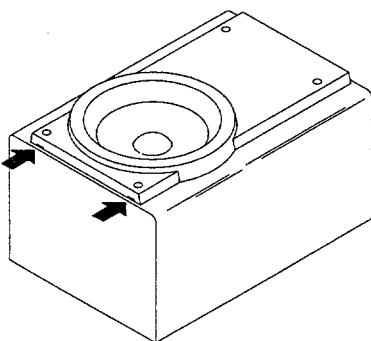


Type.2

Remove the grill frame and four pieces of rubber caps by pulling out with a flat-bladed screwdriver. Remove the screws from hole where installed rubber caps. Insert a flat-bladed screwdriver into the position indicated by the arrows and remove the panel. Remove the screws of each speaker unit and then remove the speaker units.

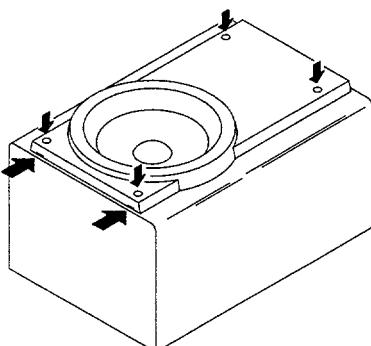


Type.3

Insert a flat-bladed screwdriver into the position indicated by the arrows and remove the panel. Turn the speaker unit to counter-clockwise direction while inserting a flat-bladed screwdriver into one of the hollows around speaker unit, and then remove the speaker unit. After replacing the speaker unit, install it turning to clockwise direction until "click" sound comes out.

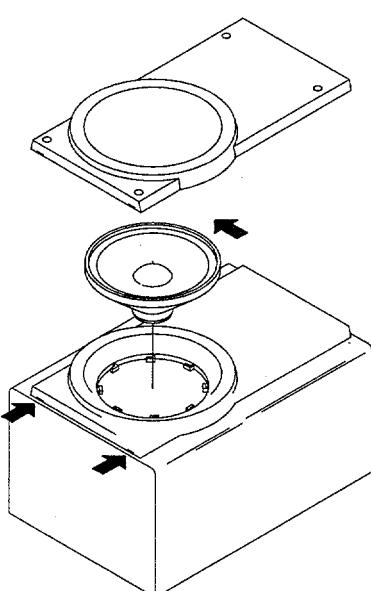

Type.4

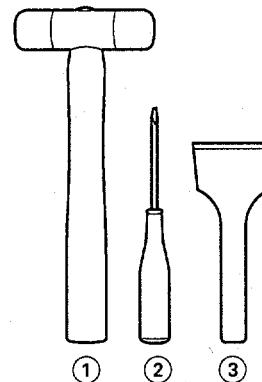

TOOLS

- ① Plastic head hammer
- ② (θ) flat head screwdriver
- ③ Cut chisel

How to Remove the PANEL, FR

1. Insert the (θ) flat head screwdriver tip into the gap between the PANEL, FR and the PANEL, SPKR. Tap the head of the (θ) flat head screwdriver with the plastic hammer head, and create the clearance as shown in Fig-1.
2. Insert the cut chisel in the clearance, and tap the head of the cut chisel with plastic hammer as shown in Fig-2, to remove the PANEL, FR.
3. Place the speaker horizontally. Tap head of the cut chisel with plastic hammer as shown in Fig-3, and remove the PANEL, FR completely.

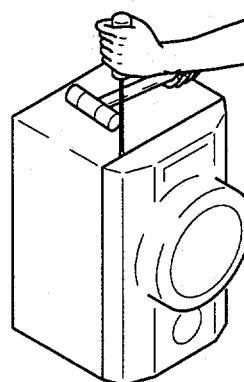


Fig-1

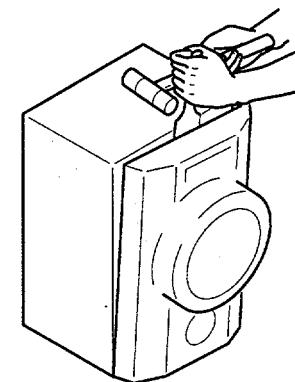


Fig-2

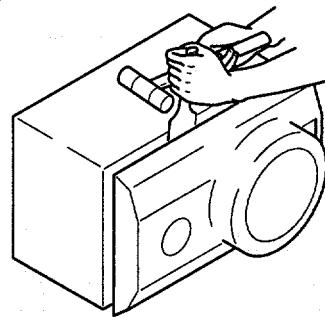


Fig-3

How to Attach the PANEL, FR

Attach the PANEL, FR to the PANEL, SPKR. Tap the four corners of the PANEL, FR with the plastic hammer to fit the PANEL, FR into the PANEL, SPKR completely.

SPEAKER PARTS LIST (SX-LM99 <YJTN>)

If can't understand for Description please kindly refer to "REFERENCE NAME LIST".

REF. NO.	PART NO.	KANRI NO.	DESCRIPTION
1	8Z-CP3-010-010		CORD, SP
2	8Z-CP3-002-010		GRILLE, FRAME ASSY
3	8Z-CP3-007-010		HLDR, TW
4	8Z-CP3-013-010		PANEL, FR L
5	8Z-CP3-014-010		PANEL, FR R
6	8Z-CP3-008-010		PANEL, PACKING TW
7	8Z-CP3-006-010		PANEL, TW
8	8Z-CP3-005-010		PANEL, W
9	8Z-CP3-602-010		SPKR, W
10	88-NSV-601-010		TERMINAL, ASSY

REFERENCE NAME LIST

ELECTRICAL SECTION

DESCRIPTION	REFERENCE NAME
ANT	ANTENNAS
C-	CHIP
C-CAP	CAP, CHIP
C-CAP TN	CAP, CHIP TANTALUM
C-COIL	COIL, CHIP
C-DI	DIODE, CHIP
C-DIODE	DIODE, CHIP
C-FET	FET, CHIP
C-FOTR	FILTER, CHIP
C-JACK	JACK, CHIP
C-LED	LED, CHIP
C-RES	RES, CHIP
C-SFR	SFR, CHIP
C-SLIDE SW	SLIDE SWITCH, CHIP
C-SW	SWITCH, CHIP
C-TR	TRANSISTOR, CHIP
C-VR	VOLUME, CHIP
C-ZENER	ZENER, CHIP
CAP, CER	CAP, CERA-SOL
CAP, E	CAP, ELECT
CAP, M/F	CAP, FILM
CAP, TC	CAP, CERA-SOL
CAP, TC-U	CAP, CERA-SOL SS
CAP, TN	CAP, TANTALUM
CERA FIL	FILTER, CERAMIC
CF	FILTER, CERAMIC
DL	DELAY LINE
E/CAP	CAP, ELECT
FILT	FILTER
FLTR	FILTER
FUSE RES	RES, FUSE
MOT	MOTOR
P-DIODE	PHOTO DIODE
P-SNSR	PHOTO SENSER
P-TR	PHOTO TRANSISTOR
POLY VARI	VARIABLE CAPACITOR
PPCAP	CAP, PP
PT	POWER TRANSFORMER
PTR, RES	PTR, MELF
RC	REMOTE CONTROLLER
RES NF	RES, NON-FLAMMABLE
RESO	RESONATOR
SHLD	SHIELD
SOL	SOLENOID
SPKR	SPEAKER
SW, LVR	SWITCH, LEVER
SW, RTRY	SWITCH, ROTARY
SW, SL	SWITCH, SLIDE
TC CAP	CAP, CERA-SOL
THMS	THERMISTOR
TR	TRANSISTOR
TRIMER	CAP, TRIMMER
TUN-CAP	VARIABLE CAPACITOR
VIB, CER	RESONATOR, CERAMIC
VIB, XTAL	RESONATOR, CRYSTAL
VR	VOLUME
ZENER	DIODE, ZENER

MECHANICAL SECTION

DESCRIPTION	REFERENCE NAME
ADHESIVE	SHEET ADHESIVE
AZ	AZIMUTH
BAR-ANT	BAR-ANTENNA
BAT	BATTERY
BATT	BATTERY
BRG	BEARING
BTN	BUTTON
CAB	CABINET
CASS	CASSETTE
CHAS	CHASSIS
CLR	COLLAR
CONT	CONTROL
CRSR	CURSOR
CU	CUSHION
CUSH	CUSHION
DIR	DIRECTION
DUBB	DUBBING
FL	FRONT LOADING
FLY-WHL	FLYWHEEL
FR	FRONT
FUN	FUNCTION
G-CU	G-CUSHION
HDL	HANDOL
HIMERON	CLOTH
HINGE, BAT	HINGE, BATTERY
HLDR	HOLDER
HT-SINK	HEAT SINK
IB	INSTRUCTION BOOKLET
IDLE	IDLER
IND, L-R	INDICATOR, L-R
KEY, CONT	KEY, CONTROL
KEY, PRGM	KEY, PROGRAM
KNOB, SL	KNOB, SLIDE
LBL	LABEL
LID, BATT	LID, BATTERY
LID, CASS	LID, CASSETTE
LVR	LEVER
P-SP	P-SPRING
PANEL, CONT	PANEL, CONTROL
PANEL, FR	PANEL, FRONT
PRGM	PROGRAM
PULLY, LOAD MO	PULLY, LOAD MOTOR
RBN	RIBBON
S-	SPECIAL
SEG	SEGMENT
SH	SHEET
SHLD-SH	SHIELD-SHEET
SL	SLIDE
SP	SPRING
SP-SCREW	SPECIAL-SCREW
SPACER, BAT	SPACER, BATTERY
SPR	SPRING
SPR-P	P-SPRING
SPR-PC-PUSH	P-SPRING, C-PUSH
T-SP	T-SPRING
TERM	TERMINAL
TRIG	TRIGGER
TUN	TUNING
VOL	VOLUME
W	WASHER
WHL	WHEEL
WORM-WHL	WORM-WHEEL

サービス技術ニュース	
番号	連絡内容
G- -	
G- -	
G- -	

アイワ株式会社
AIWA CO., LTD.

〒110-8710 東京都台東区池之端1-2-11 ☎03 (3827) 3111 (代表)

9820572, 9630472,
9630469, 931261

Tokyo Japan

Printed in Singapore