


# AKAI SERVICE MANUAL

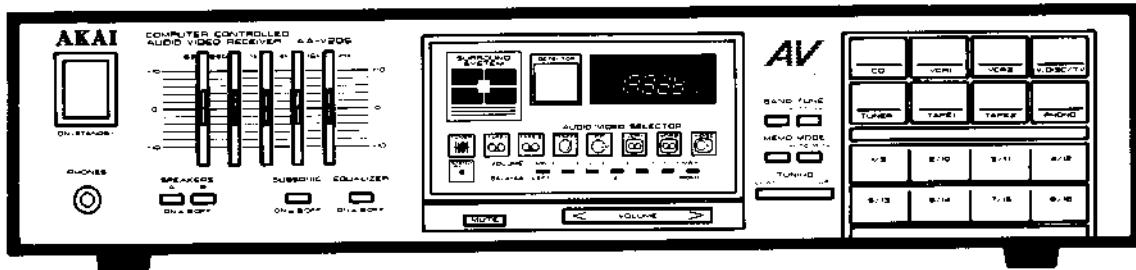

## COMPUTER CONTROLLED AUDIO VIDEO RECEIVER

**MODEL AA-V205**

## SPECIFICATIONS

Amplifier Section	
Power output	
Rated power output	
20Hz to 20 kHz	60W/0.05% at 8 ohms
Output power by FTC	
20Hz to 20kHz	60W/0.05% at 8 ohms
Output power by F. Norm	
63Hz to 12.5kHz	65W
Output power by DIN	
1kHz	65W
Music power (Both channels)	280W
Power bandwidth	
(IHF -3dB, 8 ohms)	5Hz to 70kHz/0.5%
S/N (IHF-A)	
PHONO	75dB
CO. TAPE	98dB
Residual noise (8 ohms)	0.5mV
Channel separation	
(HF, 1kHz)	65dB
Damping factor	
(1kHz, 8 ohms)	50
Speaker impedance	
A or B	8 to 16 ohms
A + B	16 ohms
SURROUND	8 ohms
Input sensitivity/Impedance	
PHONO	2.0mV/47kohms
CD, TAPE	150mV/47kohms
V. DISC/VCR (Audio)	150mV/47kohms
V. DISC/VCR (Video)	1Vp-p/75 ohms
Output level/Impedance	
TAPE REC	150mV/1kohms
VCR (Audio)	150mV/1kohms
MONITOR/VCR (Video)	1Vp-p/1kohms
Frequency response	
PHONO (RIAA)	±0.5dB
AUX/TAPE	5Hz to 100kHz -3dB
Graphic equalizer	
Control range	±10dB
Center frequency	63Hz/250Hz/1kHz/ 4kHz/16kHz
Phono max. input level	
(1kHz)	120mV

### Tuner Section

#### FM Tuner

Tuning frequency range	87.5MHz to 108.0MHz
Usable sensitivity	11.2dBf
Quieting sensitivity (HF)	16.2dBf (Mono)/37.2dBf (Stereo) (S/N = 50dB)
Capture ratio	1.5
Selectivity (400kHz)	60dB
Image rejection	85dB
IF rejection	90dB
Spurious rejection	80dB
AM suppression	60dB
Sub carrier suppression	60dB
S/N (IHF)	75dB (Mono)/65dB (Stereo)
Harmonic distortion	0.1% (Mono)/0.3% (Stereo)
Stereo separation (1kHz)	45dB
Frequency response	30Hz to 15kHz ±0.5dB

#### AM Tuner


	AM tuner section (MW for AA-V205L)	LW tuner section (for AA-V205L)
Tuning frequency range		
USA & Canada	530kHz to 1,610kHz	—
Other countries	531kHz to 1,602kHz	146kHz to 353kHz
Usable sensitivity		
(Loop antenna)	300µV/m	800µV/m
Selectivity	22dB	40dB
Image rejection	45dB	45dB
IF rejection	35dB	35dB
S/N	40dB	35dB
T.H.D.	1.0%	2.0%
Power requirements	120V, 60Hz for USA & Canada 220V, 50Hz for Europe except UK 240V, 50Hz for UK & Australia 110V/120V/220V/240V, 50Hz/60Hz convertible for other countries	
Dimensions	440(W) x 100(H) x 343(D) mm (17.3 x 3.9 x 13.5 inches)	
Weight	7.4kg (16.3 lbs)	

\* For improvement purposes, specifications and design are subject to change without notice.

# ★SAFETY INSTRUCTIONS

## PRECAUTIONS DURING SERVICING

1. Parts identified by the  $\Delta$  symbol parts are critical for safety. Replace only with parts number specified.
2. In addition to safety, other parts and assemblies are specified for conformance with such regulations as those applying to spurious radiation.  
These must also be replaced only with specified replacements.  
Examples: RF converters, tuner units, antenna selector switches, RF cables, noise blocking capacitors, noise blocking filters, etc.
3. Use specified internal wiring. Note especially:
  - 1) Wires covered with PVC tubing
  - 2) Double insulated wires
  - 3) High voltage leads
4. Use specified insulating materials for hazardous live parts. Note especially:
  - 1) Insulation Tape
  - 2) PVC tubing
  - 3) Spacers (Insulating Barriers)
  - 4) Insulation sheets for transistors
  - 5) Plastic screws for fixing microswitch (especially in turntable)
5. When replacing AC primary side components (transformers, power cords, noise blocking capacitors, etc.), wrap ends of wires securely about the terminals before soldering.

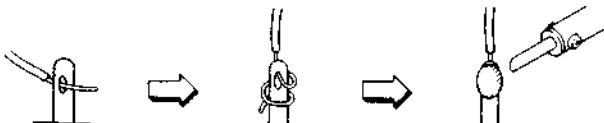

6. Observe that wires do not contact heat producing parts (heat sinks, oxide metal film resistors, fusible resistors, etc.).

7. Check that replaced wires do not contact sharp edged or pointed parts.
8. Also check areas surrounding repaired locations.
9. Use care that foreign objects (screws, solder droplets, etc.) do not remain inside the set.


## SAFETY CHECK AFTER SERVICING

Confirm the specified insulation resistance between power cord plug prongs and externally exposed parts of the set is greater than 10 M ohms. but for equipment with external antenna terminals (tuner, receiver, etc.) and is intended for **C** or **A**, specified insulation resistance should be headphone jacks line-in-out jacks etc. more than 2.2 M ohms (ground terminals, microphone jacks).

## PRECAUTION FOR THE LITHIUM BATTERY

The LITHIUM BATTERY employed for memory Back up has a explosive probability when the BATTERY itself is excessive heated.

IN CASE OF REPLACING: RESOLDER and SOLDER AS RECOMMENDED WAY.

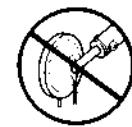

(DANGER)



(RECOMMENDED WAY)

## ★INFORMATION


### SYMBOLS FOR PRIMARY DESTINATION

Alphabet indicates the destination of the units as listed below.

Symbol	Principal Destinations
<b>A</b>	USA
<b>B</b>	UK
<b>C</b>	Canada
<b>E</b>	Europe (except UK)
<b>J</b>	Japan
<b>S</b>	Australia
<b>V</b>	W. Germany only
<b>U</b>	Universal Area
<b>Y*</b>	Custom version

### VOLTAGE CONVERSION (**U** Model only)


Before connecting the power cord, SET the VOLTAGE SELECTOR located on the rear panel with a screwdriver so that the correct voltage is indicated.

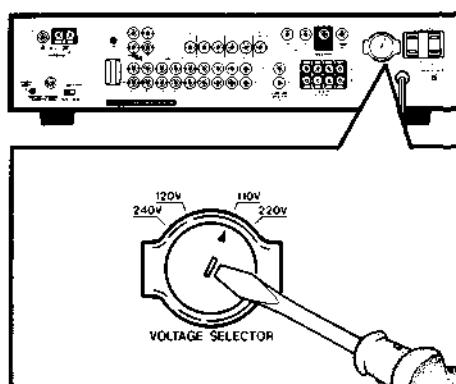


## I. DISMANTLING OF UNIT

In case of trouble, etc. necessitating dismantling, please dismantle in the order shown in the photographs. Reassemble in reverse order.


### 1. REMOVAL UPPER COVER

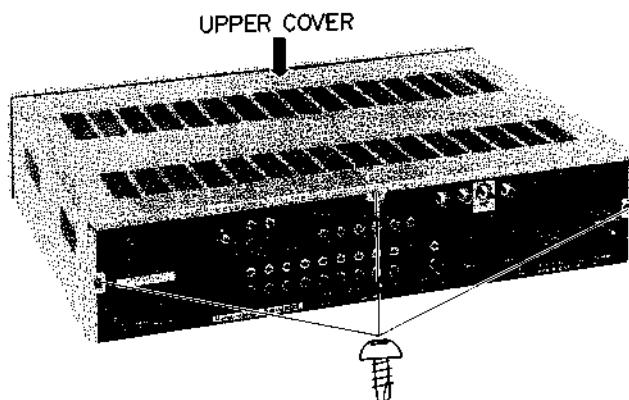

### 2. REMOVAL FRONT PANEL and BOTTOM COVER

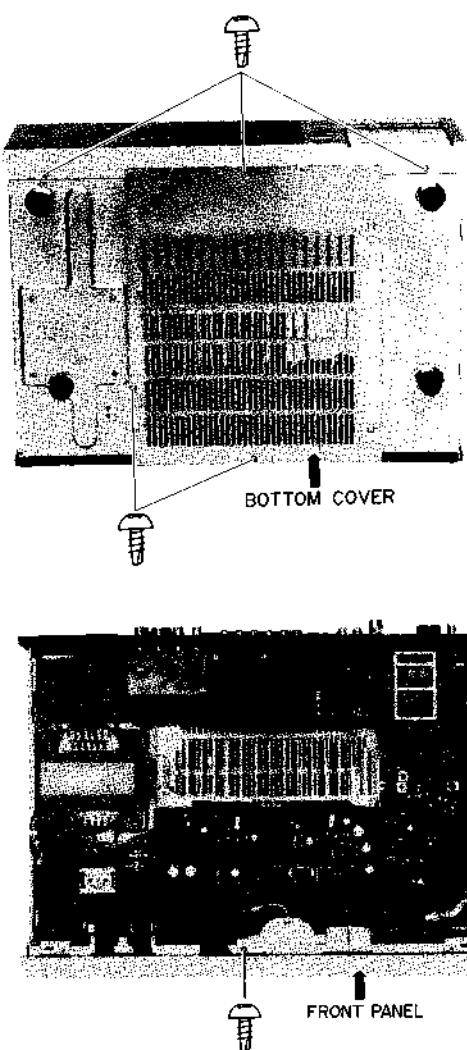

## II. CONTROLS

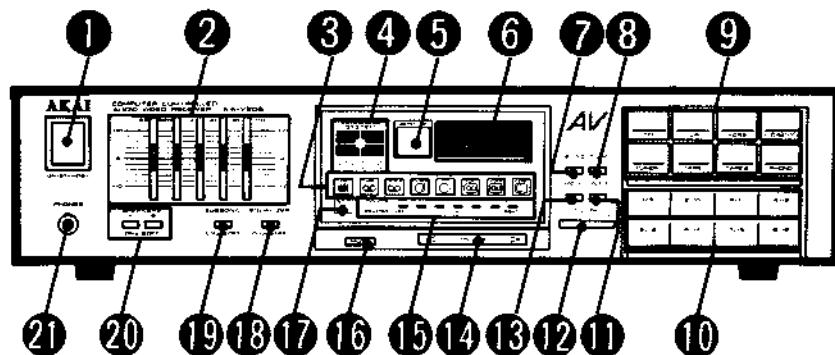

- 1 POWER ON/STANDBY switch**  
To turn ON and OFF the Akai audio video receiver.
- 2 5 band Graphic Equalizer**  
To finely adjust each frequency level.
- 3 AUDIO/VIDEO SELECTOR displays**  
Shows which source is selected for playback or recording.
- 4 Surround ON display**  
Lights when the SURROUND button is depressed.
- 5 DETECTOR window**  
Detects beams from remote control unit.
- 6 LC (liquid crystal) Tuner Display**  
Shows Band, Frequency, AUTO, MONO, and MEMO.
- 7 BAND selector**  
To select band.
- 8 TUNE (AUTO/MANU) selector**  
To select tuning mode automatically or manually during radio reception.
- 9 AV Source Selectors (CD, VCR1, VCR2, V.DISC/TV, TUNER, TAPE1, TAPE2, PHONO)**  
Use these selectors to choose an audio or video source.
- 10 Preset Station (1-8/9-16) Buttons**  
Use these buttons to memorize and recall preset stations.
- 11 MODE AUTO/MONO switch**  
Use this switch to choose Stereo or Monaural reception of FM broadcasts.

- 12 TUNING UP(>)/DOWN (<) Control**  
To tune in radio frequencies.
- 13 MEMO button**  
Use it when memorizing radio stations with the preset station buttons.
- 14 VOLUME Control**  
To adjust the volume level.
- 15 VOLUME/BALANCE display**
- 16 MUTE switch**  
To instantly reduce the volume.
- 17 STANDBY indicator**  
Lights when this unit is connected to an AC power supply and set the MAIN POWER switch to ON (—).
- 18 EQUALIZER ON/OFF switch**  
To turn ON and OFF the graphic equalizer.
- 19 SUBSONIC filter**  
Eliminates ultra low frequency disturbances during record playback.
- 20 SPEAKERS ON(—)/OFF (■) switches**  
To turn A and B speaker systems ON and OFF.
- 21 PHONES jack**  
For connection of headphones.

### The mute protection circuit system

The Akai audio video receiver has an audio mute system to prevent unwanted noise from damaging the equipment when the power is initially turned on. For the first few seconds, no sound is heard while the mute system is engaged. While the mute system is engaged, the VOLUME display will flash.

### III. PRINCIPAL PARTS LOCATION

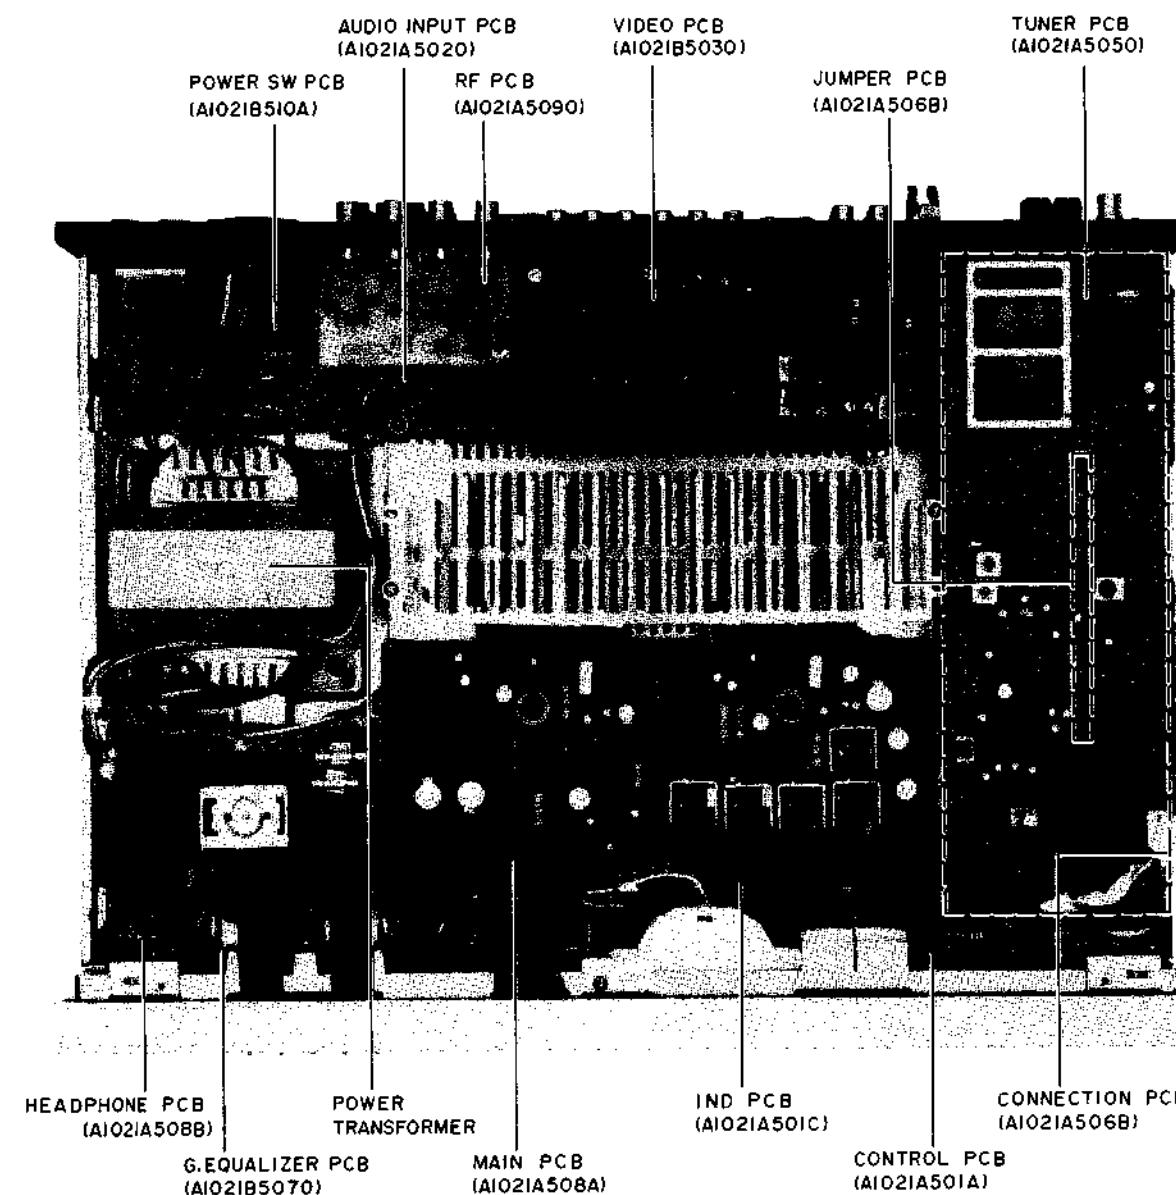


Fig. 3-1 Top View

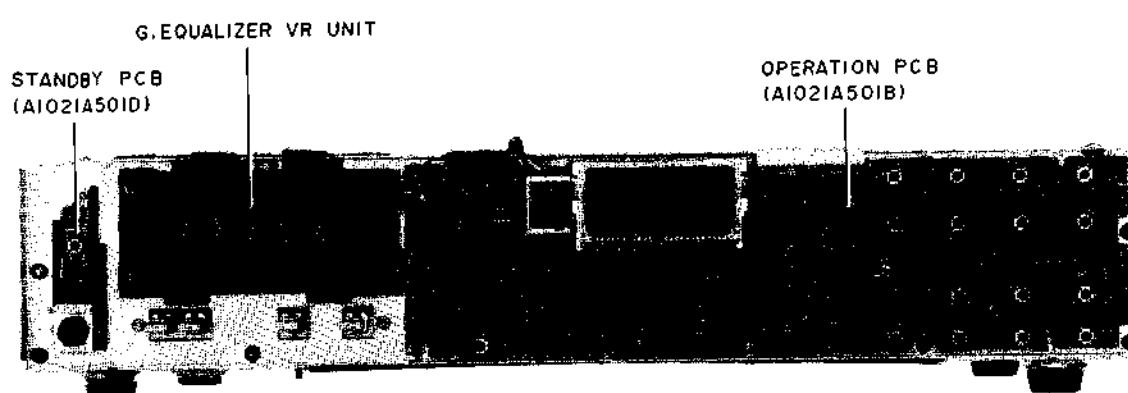


Fig. 3-2 Front View

### IV. ADJUSTMENT

#### 4-1. INSTRUMENT CONNECTIONS

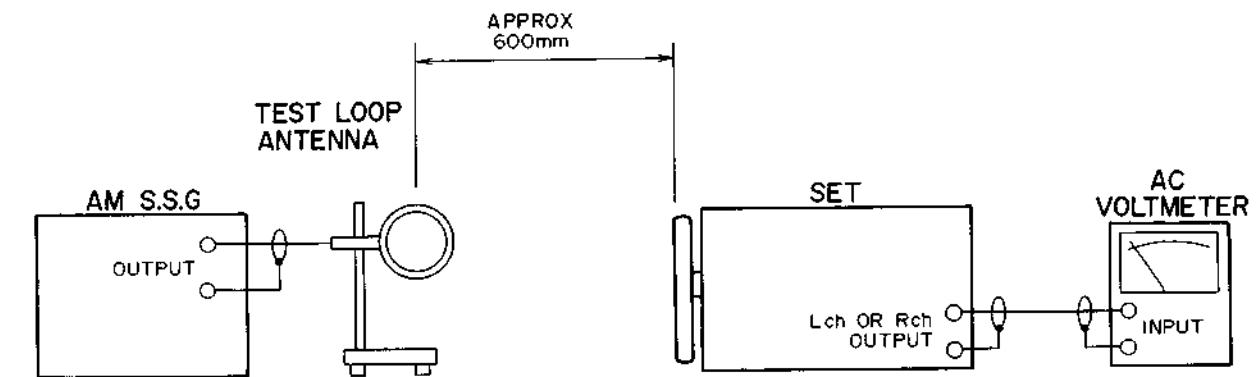


Fig. 4-1 Instrument Connections for AM (MW, LW) Section Adjustment

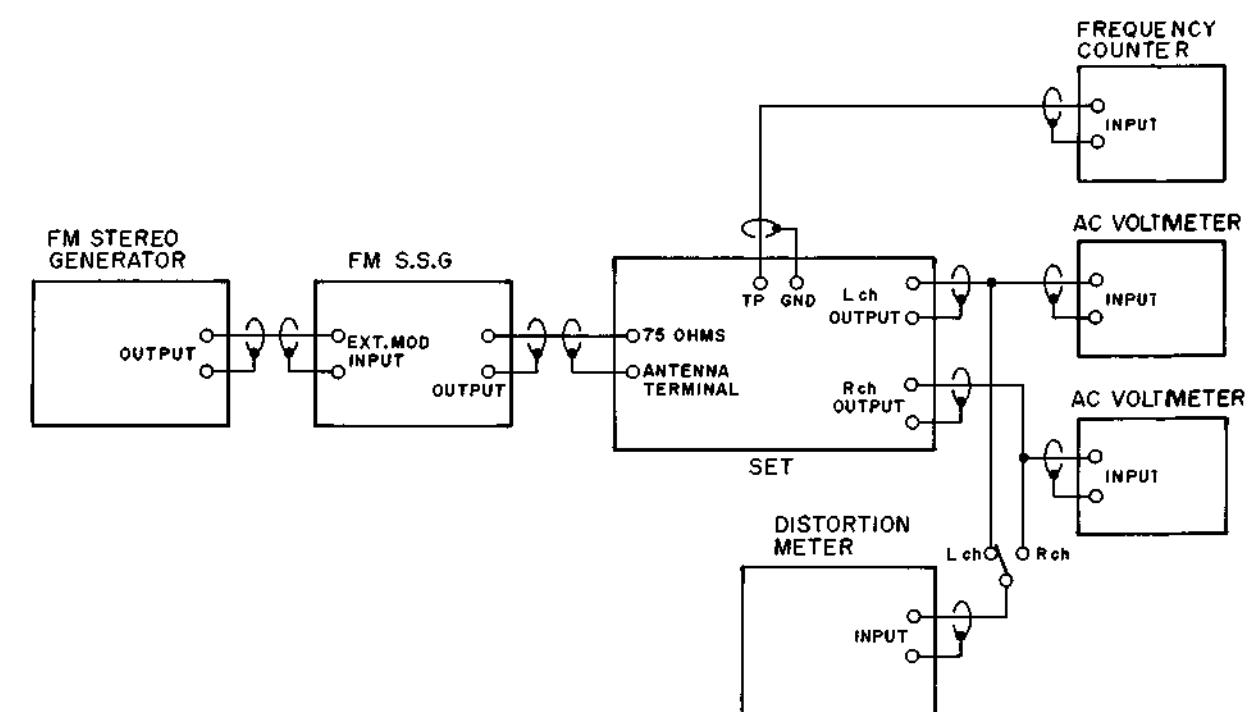


Fig. 4-2 Instrument Connection for FM Section Adjustment

## 4-2. MAIN PC BOARD ADJUSTMENT

\* EXAMPLE

STEP	ADJUSTMENT ITEM
1.	S.S.G. Frequency/ATT.
2.	SET Tuning Frequency
3.	Test Point, ADJUSTMENT PARTS
4.	Result & Remarks

Test Point  
Adjustment Part

### NOTES:

- Set the SSG to 75kHz deviation, 1kHz for C, A, U, S models, 40kHz deviation, 1kHz for B, E, V models.
- Readjust step 2 to step 6, in case T1 is turned more than a quarter turn obtaining the proper distortion (STEREO).
- Confirm that the sensitivity margin between Low and High Range sensitivities is within 3dB, otherwise readjust Low and High Range sensitivity.
- In step 2, 3 normally confirmation only, except waved coil by mistake.
- 0dB $\mu$  = 1  $\mu$ V

FM

FM6	MPX FREE RUNNING FREQUENCY
1.	-----
2.	-----
3.	Connect the Frequency counter to TP3 and GND, VR2.
4.	19kHz ± 50Hz

FM7	STEREO SEPARATION
1.	98.0MHz (Stereo)
Lch (Rch)	60dB $\mu$
2.	98.0MHz (Stereo mode)
3.	REC OUT, VR1
4.	Minimum output of Rch (Lch).

FM4	FM CENTER VOLTAGE
1.	No signal input
2.	87.5MHz
3.	Connect the DC Voltmeter between both end of R35, T6.
4.	0V

FMS	DISTORTION FACTOR
1.	98.0MHz (Mono), 60dB $\mu$
2.	98.0MHz
3.	REC OUT, T5
4.	Less than 0.3% distortion factor.
*	For best result, repeat Step 4 and 5 two or three times.

FM2	LOW RANGE SENSITIVITY
1.	88.0MHz (Mono), 8dB $\mu$
2.	88.0MHz (Mono mode)
3.	REC OUT, L1 to L5
4.	Connect TP1 to GND.
5.	Within 3% distortion factor.
*	See Note 4.

FM3	HIGH RANGE SENSITIVITY
1.	108.0kHz (Mono), 8dB $\mu$
2.	108.0MHz (Mono Mode)
3.	REC OUT, L1 to L5
4.	Connect TP1 to GND.
5.	Within 3% distortion factor.
*	For best result, repeat Step 2 and 3 two or three times.
*	See Note 4.

MW

MW2	MW LOW RANGE SENSITIVITY
1.	603kHz (600kHz), 65dB $\mu$
2.	603kHz (600kHz)
3.	REC OUT, T1
4.	Within 10% distortion factor.

MW3	MW HIGH RANGE SENSITIVITY
1.	1404kHz (1400kHz), 65dB $\mu$
2.	1404kHz (1400kHz)
3.	REC OUT, VC1
4.	Within 10% distortion factor.
*	For best result, repeat Step 2 and 3 two or three times.

MW5	TUNED INDICATION LEVEL
1.	999kHz (1000kHz), 75dB $\mu$
2.	999kHz (1000kHz)
3.	REC OUT, VR3
4.	TUNED light up
*	[L] Model confirmation only.

MW4	AM IF
1.	603kHz (600kHz), 74dB $\mu$
2.	603kHz (600kHz)
3.	REC OUT, T7
4.	Maximum output.

MW1	MW OSC
1.	No Signal input
2.	1404kHz (1400kHz)
3.	TP2, T3
4.	Connect the DC Voltmeter between TP2 and GND.
5.	6.7V ± 0.1V

LW4	TUNED INDICATION LEVEL
1.	200kHz, 76dB $\mu$
2.	200kHz
3.	REC OUT, VR3
4.	TUNED light up.

LW1	LW OSC
1.	No Signal input
2.	351kHz
3.	TP2, T4
4.	Connect the DV Voltmeter between TP2 and GND.
5.	8.0V ± 0.1V

LW3	LW HIGH RANGE SENSITIVITY
1.	300kHz, 66dB $\mu$
2.	300kHz
3.	REC OUT, VC2
4.	Within 10% distortion factor.
*	For best result, repeat Step 2 and 3 two or three times.

LW2	LW LOW RANGE SENSITIVITY
1.	160kHz, 66dB $\mu$
2.	160kHz
3.	REC OUT, T2
4.	Within 10% distortion factor.

### NOTES:

- Set the S.S.G. to 30% 1kHz of each.
- Confirm that the sensitivity margin between Low and High Range sensitivities is within 6dB $\mu$ , otherwise readjust Low and High Range Sensitivity.
- ( kHz) in result & Remarks indicates the test frequencies is AM 10kHz STEP area.

### NOTES:

- Set the SSG to 30%, 1kHz of each.
- Confirm that the sensitivity margin between Low and High Range sensitivities is within 6dB $\mu$ , otherwise readjust Low and High Range sensitivity.

## V. PARTS LIST

### ATTENTION

1. When placing an order for parts, be sure to list Part No., Model No. and the description of each part. Otherwise, the non-delivery of the part or the delivery of a wrong part may result.
2. Please make sure that Part No. is correct when ordering. If not, a part different from the one you ordered may be delivered.
3. Since the parts shown in Parts List of Preliminary Service Manual may have been the subject of changes, please use this Parts List for all future reference.

### HOW TO USE THIS PARTS LIST

1. This Parts List lists those parts which are considered necessary for repairs. Other common parts, such as resistors and capacitors, are listed in the "Common List for Service Parts" from which these parts should be selected and stocked.
2. The Recommended Spare Parts List shows those parts in the Parts List which are considered particularly important for service.
3. Parts not shown in the Parts List and "Common List for Service Parts" will not in principle be supplied.
4. How to read the Parts List.

a) Mechanism Block

b) PC Board

#### 2. HEAD BASE BLOCK

REF. NO.	PART NO.	DESCRIPTION
2-1x	BH-T2023A320A	HEAD BASE BLOCK
2-2	HP-H2206A010A	HEAD R/P PR4-8FU C
2-3	ZS-477876	PAN20x03STL CMT
2-4	ZS-536488	BID20x08STL CMT
2-5	ZG-402895	SP CS ANGLE ADJUST

SP (Service Parts) Classification  
A small "x" indicates that this part is not shown in the Photo or Illustration.  
This number corresponds with the individual parts index number in that figure.  
This number corresponds with the Figure Number.

#### 6. MAIN PC BOARD

REF. NO.	PART NO.	DESCRIPTION
6-IC1	EI-324536	IC HD14049BP
6-IC2	EI-336801	IC MB8841-564M
6-C1A	EC-338399	C MMY V 223M 250AC [U,E,B,S]
6-C1B	EC-350949	C MMY V 223M 250DC [J]
6-C1C	EC-338397	C MMY V 223M 125AC [C,A]
6-X1	EI-318384	OSC X'TAL NC-18C

Symbols for primary destination  
[A]: AAL(U.S.A.) [S]: SAA(Australia)  
[B]: BEAB(England) [U]: U/T(Universal Area)  
[C]: CSA(Canada) [V]: VDE(W. Germany)  
[E]: CEE(Europe) [Y]: Custom Version  
[J]: JPN(Japan)

SP (Service Parts) Classification  
These reference symbols correspond with component symbols in the Schematic Diagrams.

- The available PC Board Blocks are listed separately.
5. When Part No. is known, Parts Index at end of Parts List can be used to locate where that part is shown in Parts List by its Reference No. listed at right of Part No.

### WARNING

△ (\*) INDICATES SAFETY CRITICAL COMPONENTS. FOR CONTINUED SAFETY, REPLACE SAFETY CRITICAL COMPONENTS ONLY WITH MANUFACTURE'S RECOMMENDED PARTS.

### AVERTISSEMENT

△ (\*) IL INDIQUE LES COMPOSANTS CRITIQUES DE SÉCURITÉ. POUR MAINTENIR LE DÉGRÉ DE SÉCURITÉ DE L'APPAREIL, NE REMPLACER QUE DES PIÈCES RECOMMANDÉES PAR LE FABRICANT.

## 1. RECOMMENDED SPARE PARTS

We suggest you to stock the following Recommended Spare Part items listed below since they can cover most of the routine service.

Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
1	*BT-366324	TRANS POWER A1021-B5	61	EI-710037	OSC CE CSB455E 455KHZ
2	*BT-366321-A	TRANS POWER A1021-CA	62	EI-330256	OSC CE F85-006 4MHZ
3	*BT-366323	TRANS POWER A1021-EV	63	EI-344422	OSC X'TAL HC-18/U 7.200MHZ
4	*BT-366320	TRANS POWER A1021-U	64	EM-366356	IND LCD LCD9437P
5	ED-321269	D LED GL-5PR6 RED	65	*EQ-337159	RELAY POW G4Z-2282P 2NO 24V
6	ED-705414	D LED SE303A INFRARED	66	EQ-366328	RELAY SIG G4S 1112P-B 1NO 12V
7	ED-361885	D LED SLP284C-51U GREEN	67	ER-353343	R FUSE ERD2FC S10 1/4W 100J
8	ED-367216	D PHOT PN323B-LF	68	*ER-200595	R FUSE ERD2FC S10 1/4W 5R6J
9	ED-718039	D SILICON DAN201	69	*ER-200746	R FUSE ERD2FC 1/4W 1000G
10	ED-330319	D SILICON DBA108 100/1.0A	70	*ER-353343	R FUSE ERD2FC S10 1/4W 100J
11	ED-200749	D SILICON DBA60-K15 400/6.0A	71	ER-365402	R CT P F09 PLATE 3W R10K
12	ED-357754	D SILICON DS135D 200/1.0A	72	*ES-366363	SW PUSH ESB621630 4 THROW
13	ED-348990	D SILICON H DS446	73	*ES-337902	SW PUSH SDLD1P 01-1
14	ED-301911	D SILICON H DS448	74	*ES-349070	SW SELECTOR YKS11-0002 02-4
15	ED-344280	D SILICON H GMA-01-FY2 F05	75	ES-360115	SW SLIDE 00120262 01-02S
16	ED-366337	D SILICON H 1SS241	76	ES-349474	SW TACT SKHHAM004A
17	ED-349460	D VARACTER SVC321 A.B.C.D DBL	77	ES-359172	SW TACT SKHHAP
18	ED-349448	D VARACTOR 1SV147	78	ES-366019	SW TACT 2401422-8A
19	ED-365378	D ZENER H HZ513E F05 B2	79	ET-363953	TR DTA114TS
20	ED-365463	D ZENER H HZ516E F05 B2	80	ET-360646	TR DTA143ES F05
21	ED-346613	D ZENER H HZ11 C3	81	ET-354415	TR DTA144ES
22	ED-315759	D ZENER H HZ16 1	82	ET-353897	TR DTC114ES
23	ED-306316	D ZENER H HZ5 C2	83	ET-360399	TR DTC114TS
24	ED-309069	D ZENER H HZ6 B2	84	ET-354371	TR DTC124ES
25	ED-337265	D ZENER H HZ6 C2	85	ET-364060	TR DTC143ES
26	ED-306012	D ZENER H HZ7 A3	86	ET-354414	TR DTC144ES
27	ED-318859	D ZENER H HZ9 C2	87	ET-354094	TR DTC144WS
28	*EF-359007	FUSE BET T 250V 1.25A [B]	88	ET-349449	TR FET 2SK161 O.Y
29	*EF-358641	FUSE BET T 250V 800MA [B]	89	ET-352055	TR FET 2SK170 V
30	*EF-602550	FUSE SEMKO T 250V 1.25A [E.V.S]	90	ET-352408	TR FET 2SK192A GR
31	*EF-258344	FUSE SEMKO T 250V 800MA [E.V.S]	91	ET-337759	TR FET 2SK246 GR
32	*EF-306950	FUSE TSC A 250V 2.00A [U]	92	ET-353899	TR 2SA1317 S.T.U
33	*EF-309388	FUSE TSC A 250V 800MA [U]	93	ET-349718	TR 2SA1392 S.T
34	*EF-310229	FUSE TSC 125V 1.00A [C.A]	94	ET-305463	TR 2SA970 GR.BL
35	*EF-323080	FUSE TSC 125V 3.15A [C.A]	95	ET-366365	TR 2SB1185 E.F
36	EH-344434	FILTER CE BFU450C4N 0.450MHZ	96	ET-307195	TR 2SC2240 GR.BL
37	EH-355568	FILTER CE SFE10.7MS2GY-A	97	ET-338410	TR 2SC2878 A.B
38	EH-338338	FILTER CE SFE10.7MS3GK-A [V]	98	ET-336869	TR 2SC2999 C.D
39	EH-360924	FILTER LC BP BPMB6A	99	ET-360067	TR 2SC3330 T.U F05
40	EH-363344	FILTER LC LP 123-5010-03 [V]	100	ET-349081	TR 2SC3383 S.T
41	EH-370069	FILTER LC LP 42B-1081-00	101	ET-356437	TR 2SC930 D2.E.F
42	EI-370303	IC A1021-A 9453	102	ET-328265	TR 2SC930 F
43	EI-354401	IC BU4066B	103	ET-718040	TR 2SD1468
44	EI-361624	IC LA1265	104	ET-366581	TR 2SD1762 E.F
45	EI-356370	IC LA7224	105	ET-310148	TR 2SD612K E.F
46	EI-361230	IC LC7580	106	EV-366319	VR SPECIAL 2THROWX6 30MM
47	EI-361622	IC LM7001	107	EZ-358816	BATTERY LITHIUM BR2032-1HF
48	EI-337228	IC M5218L			
49	EI-349719	IC M5218P			
50	EI-344764	IC M5218P-21			
51	EI-365211	IC M5227P			
52	EI-300042	IC M54519P			
53	*EI-366366	IC STK4038II			
54	EI-343373	IC TC9156AP			
55	EI-366327	IC TC9162N			
56	EI-349392	IC TC9164N			
57	EI-351966	IC TC9176P			
58	EI-351849	IC UPC1235C			
59	EI-354080	IC UPC1237H			
60	EI-749983	IC UPD1943G			

## 2. P.C BOARD BLOCK

Ref. No.	Part No.	Description			
2-1A	BA-A1021E030A	PC AUDIO INPUT BLK AA-V205(U) [EXCEPT V]	3-I1	*EI-366368	IC STK4038II
2-1B	BA-A1021E030B	PC AUDIO INPUT BLK AA-V205(V)	3-IC2	EI-354080	IC UPC1237H
2-2A	BA-A1021E040A	PC V-INPUT BLK AA-V205(U,C,A)	3-L1	EO-332116	COIL FIX 2 103AK-006A 2R2K
2-2B	BA-A1021E040B	PC V-INPUT BLK AA-V205(E,B,S)	3-RL1	*EQ-337159	RELAY POW G4Z-2282P 2NO 24V
2-2C	BA-A1021E040C	PC VIDEO INPUT BLK AA-V205(V)	3-RL2	*EQ-337159	RELAY POW G4Z-2282P 2NO 24V
2-3A	BA-A1021E070A	PC CONTROL BLK AA-V205(U)	3-R1	ER-316802	R CB H S10 FS RDS 1/4W 471J
2-3B	BA-A1021E070B	PC CONTROL BLK AA-V205(C,A)	3-R2	ER-316802	R CB H S10 FS RDS 1/4W 471J
2-3C	BA-A1021E070C	PC CONTROL BLK AA-V205(E,V,S)	3-R3	ER-200944	R CB H S10 FS RDS 1/4W 152J
2-3D	BA-A1021E070D	PC CONTROL BLK AA-V205(E,B)	3-R4	ER-200944	R CB H S10 FS RDS 1/4W 152J
2-4A	BA-A1021E090A	PC(#) MAIN BLK AA-V205(U)	3-R5	ER-316802	R CB H S10 FS RDS 1/4W 471J
2-4B	BA-A1021E090B	PC(#) MAIN BLK AA-V205(C,A)	3-R6	ER-316802	R CB H S10 FS RDS 1/4W 471J
2-4C	BA-A1021E090C	PC(#) MAIN BLK AA-V205(E,V,B,S)	3-R7	ER-333074	R OMF H S20 FS 2W 910J
2-4D	BA-A1021E090D	PC(#) MAIN BLK AA-V205(V)	3-R8	ER-333074	R OMF H S20 FS 2W 910J
2-5A	BA-A1021E100A	PC TUNER BLK AA-V205(U)	3-R10	*ER-353343	R FUSE ERD2FC S10 1/4W 100J
2-5B	BA-A1021E100B	PC TUNER BLK AA-V205(C,A)	3-R12	*ER-353343	R FUSE ERD2FC S10 1/4W 100J
2-5C	BA-A1021E100C	PC TUNER BLK AA-V205(E)	3-R20	*ER-353343	R FUSE ERD2FC S10 1/4W 100J
2-5D	BA-A1021E100D	PC TUNER BLK AA-V205(V)	3-R23	ER-365331	R OMF H S15 FS 1W 822J
2-5E	BA-A1021E100E	PC TUNER BLK AA-V205(S)	3-R30	*ER-200746	R FUSE ERD2FC 1/4W 1000G
2-5F	BA-A1021E100F	PC TUNER BLK AA-V205(L,E,B)	3-R32	*ER-200746	R FUSE ERD2FC 1/4W 1000G
2-6A	BA-F0141C010A	PC FRONT END BLK FE41(U) [EXCEPT V]	3-R33	ER-365402	R CT P F09 PLATE 3W R10K
2-6B	BA-F0141A010B	PC FRONT END BLK FE41(V)	3-R37	ER-359520	R OMF H S20 FS 2W 120J
		[V]	3-R40	ER-366389	R OMF H S15 FS 1W 183J
			3-R44	ER-359520	R OMF H S20 FS 2W 120J
			3-R49	ER-333067	R OMF H S20 FS 2W 821J
			3-R50	ER-333067	R OMF H S20 FS 2W 821J
			3-R51	*ER-200595	R FUSE ERD2FC S10 1/4W 5R6J
			3-R53	ER-316802	R CB H S10 FS RDS 1/4W 471J
			3-R54	ER-333023	R OMF H S20 FS 2W 100J
			3-R55	*ER-353343	R FUSE ERD2FC S10 1/4W 100J
			3-SW1	ES-366363	SW PUSH ESB621630 4 THROW
			3-TR1	ET-337759	TR FET 2SK246 GR
			3-TR2	ET-337759	TR FET 2SK246 GR
			3-TR3	*ET-366581	TR 2SD1762 E,F
			3-TR4	*ET-366365	TR 2SB1185 E,F
			3-TR5	ET-349081	TR 2SC3383 S,T
			3-TR6	ET-349718	TR 2SA1392 S,T
			3-TR7	*ET-366581	TR 2SD1762 E,F
			3-TR8	*ET-366365	TR 2SB1185 E,F
			3-TR9	ET-349718	TR 2SA1392 S,T
			3-TR10	ET-349081	TR 2SC3383 S,T
			3-TR11	*ET-310148	TR 2SD612K E,F
			3-TR12	ET-352055	TR FET 2SK170 V
			3-TR13	ET-307195	TR 2SC2240 GR,BL
			3-TR14	ET-305463	TR 2SA970 GR,BL
			3-TR15	ET-337759	TR FET 2SK246 GR
			3-TR16	*ET-366581	TR 2SD1762 E,F
			3-F3A	*EF-309388	FUSE TSC A 250V 800MA (U)
			3-F3B	*EF-310229	FUSE TSC 125V 1.00A (C,A)
			3-F3C	*EF-258344	FUSE SEMKO T 250V 800MA (E,V,S)
			3-F3D	*EF-358641	FUSE BET T 250V 800MA (B)
			3-F4A	*EF-309388	FUSE TSC A 250V 800MA (U)
			3-F4B	*EF-310229	FUSE TSC 125V 1.00A (C,A)
			3-F4C	*EF-258344	FUSE SEMKO T 250V 800MA (E,V,S)
			3-F4D	*EF-358641	FUSE BET T 250V 800MA (B)

## 3. MAIN P.C BOARD

Ref. No.	Part No.	Description			
3-C1	EC-366358	C EC V CUT 682M 50.0DC			
3-C2	EC-366358	C EC V CUT 682M 50.0DC			
3-C3	EC-324109	C STY V S05 CQFS 181J 50DC			
3-C4	EC-324109	C STY V S05 CQFS 181J 50DC			
3-C14	EC-328070	C CE V F05 SL 101K 500DC			
3-C17	EC-328070	C CE V F05 SL 101K 500DC			
3-D1	*ED-200749	D SILICON DBA60-K15 400/6.0A			
3-D2	*ED-330319	D SILICON DBA10B 100/1.0A			
3-D3	ED-365463	D ZENER H HZS16E F05 B2			
3-D4	ED-365463	D ZENER H HZS16E F05 B2			
3-D5	ED-315759	D ZENER H HZ16 I			
3-D6	ED-346613	D ZENER H HZ11 C3			
3-D7	ED-309069	D ZENER H HZ6 B2			
3-D8	ED-309069	D ZENER H HZ6 B2			
3-D9	ED-301911	D SILICON H DS448			
3-D10	ED-315759	D ZENER H HZ16 I			
3-D11	ED-348990	D SILICON H DS446			
3-D12	ED-348990	D SILICON H DS446			
3-D13	ED-348990	D SILICON H DS446			
3-D14	ED-301911	D SILICON H DS448			
3-D15	ED-301911	D SILICON H DS448			
3-D16	ED-301911	D SILICON H DS448			
3-D17	ED-365378	D ZENER H HZ13E F05 B2			
3-D18	ED-306012	D ZENER H HZ7 A3			
3-D19	ED-337265	D ZENER H HZ6 C2			

#### 4. TUNER P.C BOARD

Ref. No.	Part No.	Description
4-D1	ED-306316	D ZENER H HZ5 C2
4-D2	ED-344280	D SILICON H GMA-01-FY2 F05
4-D3	ED-318859	D ZENER H HZ9 C2
4-D4	ED-349460	D VARACTER SVC321 A,B,C,D DBL
4-D5	ED-349460	D VARACTER SVC321 A,B,C,D DBL
4-D6	ED-344280	D SILICON H GMA-01-FY2 F05 [AA-V205L]
4-D7	ED-344280	D SILICON H GMA-01-FY2 F05 [AA-V205L]
4-D8	ED-344280	D SILICON H GMA-01-FY2 F05
4-D9	ED-344280	D SILICON H GMA-01-FY2 F05
4-D10	ED-344280	D SILICON H GMA-01-FY2 F05
4-D11	ED-344280	D SILICON H GMA-01-FY2 F05
4-FL1	EH-355568	FILTER CE SFE10.7MS2GY-A [EXCEPT V1]
4-FL1A	EH-338338	FILTER CE SFE10.7MS3GK-A [V]
4-FL2	EH-355568	FILTER CE SFE10.7MS2GY-A
4-FL3	EH-344434	FILTER CE BFU450C4N 0.450MHZ
4-FL4	EH-363344	FILTER LC LP 123-5010-03 [V]
4-FL6	EH-370069	FILTER LC LP 42B-1081-00
4-FL7	EH-370069	FILTER LC LP 42B-1081-00
4-FL8	EH-360924	FILTER LC BP BPMB6A [V]
4-IC1	EI-361622	IC LM7001
4-IC2	EI-361624	IC LA1265
4-IC3	EI-351849	IC UPC1235C
4-R10	ER-365172	R OMF H S12 FS 1W 331J
4-R16	ER-327710	R CB H S10 FS RDS 1/4W 151J
4-R25	ER-306805	R CB H S15 FS RDS 1/2W 101J
4-R31	ER-327710	R CB H S10 FS RDS 1/4W 151J
4-R35	ER-333406	R CB H S10 FS RDS 1/4W 363J
4-R59	ER-327710	R CB H S10 FS RDS 1/4W 151J
4-TM1	EJ-359031	TERMINAL LEVER YKD31-0215 P 2P
4-T1	EO-337598	COIL VARI 2 25A-1353-01 [AA-V205L]
4-T1A	EO-370070	COIL VARI 2 25A-5463-30 [AA-V205L]
4-T2	EO-337599	COIL VARI 2 25A-1354-03 [AA-V205L]
4-T3	EO-363279	COIL OSC 2 A7NRS-9857X 150.0UH
4-T4	EO-352089	COIL OSC 2 7BRS-9098X 580.0UH [AA-V205L]
4-T5	EO-363291	COIL DET 2 78-1128-01
4-T6	EO-361630	COIL DET 2 78-1126-02
4-T7	EO-356732	COIL IFT BCFLZ-450A
4-TR1	ET-337759	TR FET 2SK246 GR
4-TR2	ET-349081	TR 2SC3383 S.T
4-TR3	ET-353899	TR 2SA1317 S.T.U
4-TR4	ET-353899	TR 2SA1317 S.T.U
4-TR5	ET-338410	TR 2SC2878 A.B [AA-V205L]
4-TR6	ET-352408	TR FET 2SK192A GR [AA-V205L]
4-TR7	ET-354094	TR DTC144WS [AA-V205L]
4-TR8	ET-354094	TR DTC144WS [AA-V205L]
4-TR9	ET-353897	TR DTC114ES [AA-V205L]
4-TR10	ET-356437	TR 2SC930 D2.E,F
4-TR11	ET-308141	TR 2SC2603 G F05
4-TR12	ET-308141	TR 2SC2603 G F05
4-TR13	ET-349081	TR 2SC3383 S.T
4-TR14	ET-349081	TR 2SC3383 S.T
4-TR15	ET-354094	TR DTC144WS
4-VC1	EC-359065	C S-FIX H CTC-6U-020 4.3-20 [AA-V205L]
4-VC1A	EC-363331	C S-FIX H CTC-6U-030 5.5-30 [AA-V205L]
4-VC2	EC-370071	C S-FIX H CTC-6U-040 7.7-40 [AA-V205L]
4-VR1	EV-361673	R S-FIX H RH0615CN5J 3P 334
4-VR2	EV-356576	R S-FIX H RH0615CS3J 3P 472

#### 5. CONTROL P.C BOARD

Ref. No.	Part No.	Description
5-BT1	*EZ-358816	BATTERY LITHIUM BR2032-1HF
5-D1	ED-301911	D SILICON H DS448 [AA-V205L]
5-D3	ED-301911	D SILICON H DS448 [C.A]
5-D4	ED-301911	D SILICON H DS448 [U]
5-D5	ED-301911	D SILICON H DS448
5-D6	ED-301911	D SILICON H DS448
5-D7	ED-301911	D SILICON H DS448
5-IB1	EH-366351	COMP R RKC8BS 472J
5-IB2	EH-366351	COMP R RKC8BS 472J
5-IB3	EH-361669	COMP R RKC4BS 472J
5-IB4	EH-361669	COMP R RKC4BS 472J
5-IB5	EH-366353	COMP R RKC7BS 472J
5-IC1	EI-370303	IC A1021-A 9453
5-IC2	EI-356370	IC LA7224
5-IC3	EI-300042	IC M54519P
5-L1	EO-330719	COIL FIX 1 187LY-103K 103K
5-TR1	ET-360646	TR DTA143ES F05
5-TR2	ET-364060	TR DTC143ES
5-TR3	ET-354415	TR DTA144ES [U]
5-TR4	ET-354371	TR DTC124ES
5-X1	EI-330256	OSC CE F85-006 4MHZ

## **6. OPERATION P.C BOARD**

Ref. No.	Part No.	Description
6-D10	ED-367216	D PHOT PN323B-LF
6-D11	ED-321269	D LED GL-5PR6 RED
6-D12	ED-361885	D LED SLP284C-51U GREEN
6-D13	ED-361885	D LED SLP284C-51U GREEN
6-D14	ED-361885	D LED SLP284C-51U GREEN
6-D15	ED-361885	D LED SLP284C-51U GREEN
6-D16	ED-361885	D LED SLP284C-51U GREEN
6-D17	ED-361885	D LED SLP284C-51U GREEN
6-D18	ED-361885	D LED SLP284C-51U GREEN
6-D19	ED-361885	D LED SLP284C-51U GREEN
6-D20	ED-361885	D LED SLP284C-51U GREEN
6-D21	ED-361885	D LED SLP284C-51U GREEN
6-D22	ED-361885	D LED SLP284C-51U GREEN
6-D23	ED-361885	D LED SLP284C-51U GREEN
6-D24	ED-361885	D LED SLP284C-51U GREEN
6-D25	ED-361885	D LED SLP284C-51U GREEN
6-D26	ED-361885	D LED SLP284C-51U GREEN
6-D27	ED-361885	D LED SLP284C-51U GREEN
6-TS10	ES-349474	SW TACT SKHHAM004A
6-TR11	ES-349474	SW TACT SKHHAM004A
6-TS12	ES-349474	SW TACT SKHHAM004A
6-TS13	ES-349474	SW TACT SKHHAM004A
6-TS14	ES-349474	SW TACT SKHHAM004A
6-TS15	ES-349474	SW TACT SKHHAM004A
6-TS16	ES-349474	SW TACT SKHHAM004A
6-TS17	ES-349474	SW TACT SKHHAM004A
6-TS18	ES-349474	SW TACT SKHHAM004A
6-TS19	ES-349474	SW TACT SKHHAM004A
6-TS20	ES-349474	SW TACT SKHHAM004A
6-TS21	ES-349474	SW TACT SKHHAM004A
6-TS22	ES-349474	SW TACT SKHHAM004A
6-TS23	ES-349474	SW TACT SKHHAM004A
6-TS24	ES-349474	SW TACT SKHHAM004A
6-TS25	ES-349474	SW TACT SKHHAM004A
6-TS26	ES-349474	SW TACT SKHHAM004A
6-TS27	ES-349474	SW TACT SKHHAM004A
6-TS28	ES-349474	SW TACT SKHHAM004A
6-TS29	ES-349474	SW TACT SKHHAM004A
6-TS30	ES-349474	SW TACT SKHHAM004A
6-TS31	ES-349474	SW TACT SKHHAM004A
6-TS32	ES-349474	SW TACT SKHHAM004A
6-TS33	ES-349474	SW TACT SKHHAM004A
6-TS34	ES-349474	SW TACT SKHHAM004A

## 7. RF P.C BOARD

<b>Ref. No.</b>	<b>Part No.</b>	<b>Description</b>
7-D1	ED-344280	D SILICON H GMA-01-FY2 F05
7-D2	ED-344280	D SILICON H GMA-01-FY2 F05
7-D3	ED-344280	D SILICON H GMA-01-FY2 F05
7-D4	ED-344280	D SILICON H GMA-01-FY2 F05
7-D5	ED-344280	D SILICON H GMA-01-FY2 F05
7-D6	ED-344280	D SILICON H GMA-01-FY2 F05
7-D7	ED-366337	D SILICON H 1SS241
7-D8	ED-366337	D SILICON H 1SS241
7-D9	ED-366337	D SILICON H 1SS241
7-D10	ED-366337	D SILICON H 1SS241
7-D11	ED-366337	D SILICON H 1SS241
7-D12	ED-366337	D SILICON H 1SS241
7-D13	ED-366337	D SILICON H 1SS241
7-D14	ED-366337	D SILICON H 1SS241
7-D15	ED-366337	D SILICON H 1SS241
7-TM1	EJ-366338	JACK PLATE F CONNECTOR 4P
7-TR1	ET-363953	TR DTA114TS
7-TR2	ET-363953	TR DTA114TS
7-TR3	ET-363953	TR DTA114TS

## **8. VIDEO P.C BOARD**

Ref. No.	Part No.	Description
8-IC1	EI-344764	IC M5218P-21
8-IC2	EI-354401	IC BU4066B
8-IC3	EI-354401	IC BU4066B
8-PJ1	EJ-366334	PIN J T5858 P 4P
8-PJ2	EJ-366335	PIN J T6125-BAAA P 3P
8-PJ3	EJ-366335	PIN J T6125-BAAA P 3P
8-R9	ER-327710	R CB H S10 FS RDS 1/4W 151J
8-R10	ER-327710	R CB H S10 FS RDS 1/4W 151J
8-TR1	ET-360067	TR 2SC3330 T,U F05
8-TR2	ET-360067	TR 2SC3330 T,U F05
8-TR3	ET-360067	TR 2SC3330 T,U F05
8-TR4	ET-360067	TR 2SC3330 T,U F05
8-TR5	ET-360067	TR 2SC3330 T,U F05
8-TR6	ET-363953	TR DTA114TS
8-TR7	ET-363953	TR DTA114TS
8-TR8	ET-363953	TR DTA114TS
8-TR9	ET-360399	TR DTC114TS
8-TR10	ET-360399	TR DTC114TS

## **9. FRONT END P.C BOARD**

<b>Ref. No.</b>	<b>Part No.</b>	<b>Description</b>
9-D1	ED-349448	D VARACTOR 1SV147
9-D2	ED-349448	D VARACTOR 1SV147
9-D3	ED-349448	D VARACTOR 1SV147
9-D4	ED-349448	D VARACTOR 1SV147
9-L1	EO-349461	COIL FIX 2 LINK
9-L2	EO-349462	COIL FIX 2 U147
9-L3	EO-349461	COIL FIX 2 LINK
9-L4	EO-349462	COIL FIX 2 U147
9-L5	EO-349462	COIL FIX 2 U147
9-L6	EO-359056	COIL FIX 1 LAL03NA 2R2M
9-L7	EO-353687	COIL OSC 2 E525HN-110003
9-TR1	ET-349449	TR FET 2SK161 O.Y
9-TR2	ET-336869	TR 2SC2999 C.D
9-TR3	ET-328265	TR 2SC930 F
9-TR4	ET-349449	TR FET 2SK161 O.Y
9-T1	EO-337840	COIL IFT 119AC-1553X10.7MHZ

#### **10. AUDIO INPUT P.C. BOARD**

<b>Ref. No.</b>	<b>Part No.</b>	<b>Description</b>
10-D1	ED-357754	D SILICON DS135D 200 / 1.0A
10-IC1	EI-349392	IC TC9164N
10-IC2	EI-366327	IC TC9162N
10-IC3	EI-337228	IC M5218L
10-IC4	EI-337228	IC M5218L
10-PJ1	EJ-366329	PIN J T6813 P 6P
10-PJ2	EJ-366330	PIN J T6127 P 6P
10-PJ3	EJ-366331	PIN J T6127-AABA W / SWP 6P
10-PJ4	EJ-366332	PIN J T6138-AABA P 2P
10-RL1	EQ-366328	RELAY SIG G4S 1112P-B 1NO 1NO
10-R10	ER-321619	R DMF H S15 FS 1W 101J
10-TM1	EJ-349081	TERMINAL PUSH YKD21-0025 PBP
10-TR1	ET-360067	TR 2SC3330 T.U F05
10-TR2	ET-360067	TR 2SC3330 T.U F05

## 11. CONNECTION P.C BOARD

Ref. No.	Part No.	Description
11-D1	ED-337265	D ZENER H HZ6 C2
11-D2	ED-337265	D ZENER H HZ6 C2
11-IC1	EI-337228	IC M5218L
11-IC2	EI-337228	IC M5218L
11-IC3	EI-343373	IC TC9156AP
11-IC4	EI-349719	IC M5218P
11-IC5	EI-351986	IC TC9176P
11-J1	EJ-346076	DIN J TCS4690-01-1111 P 8P
11-R10	ER-323074	R CB H S10 FS RDS 1/4W 102J
11-R11	ER-323074	R CB H S10 FS RDS 1/4W 102J
11-SW1	ES-360115	SW SLIDE 00120262 01-02S
11-TS1	ES-366019	SW TACT 2401422-8A

## 15. TACT SW P.C BOARD

Ref. No.	Part No.	Description
15-TS50	ES-359172	SW TACT SKHHAP

## 12. POWER SW P.C BOARD

Ref. No.	Part No.	Description
12-C1	*EC-320548	C CE V F 103Z 250AC [U]
12-C1A	*EC-338411	C CE V FZ 103P 400AC [C,A]
12-C1B	*EC-338496	C CE V FZ 472P 400AC [E,V,B,S]
12-R1	*ER-356573	R SD ANTI-STATIC 1/2W 225K [C,A]
12-SW1	*ES-337902	SW PUSH SDLD1P 01-1
12-F1A	*EF-306950	FUSE TSC A 250V 2.00A [U]
12-F1B	*EF-323080	FUSE TSC 125V 3.15A [C,A]
12-F1C	*EF-602550	FUSE SEMKO T 250V 1.25A [E,V,S]
12-F1D	*EF-359007	FUSE BET T 250V 1.25A [B]
12-F2	*EF-306950	FUSE TSC A 250V 2.00A [U]

## 16. HEADPHONE P.C BOARD

Ref. No.	Part No.	Description
16-J1	EJ-355012	PHONE J 3P HLJ0541-010 6.3
16-R1	ER-333086	R OMF H S20 FS 2W 331J


## 13. GRAPHIC EQUALIZER P.C BOARD

Ref. No.	Part No.	Description
13-IC1	EI-337228	IC M5218L
13-IC2	EI-356211	IC M5227P
13-VR901	EV-366319	VR SPECIAL 2THROWX5 30MM

## 14. IND P.C BOARD

Ref. No.	Part No.	Description
14-IC40	EI-361230	IC LC7580
14-IND40	EM-366356	IND LCD LCD9437P
14-PL40	EL-366367	PL CORD 14.0V100MA L=80

### ASSEMBLY BLOCK

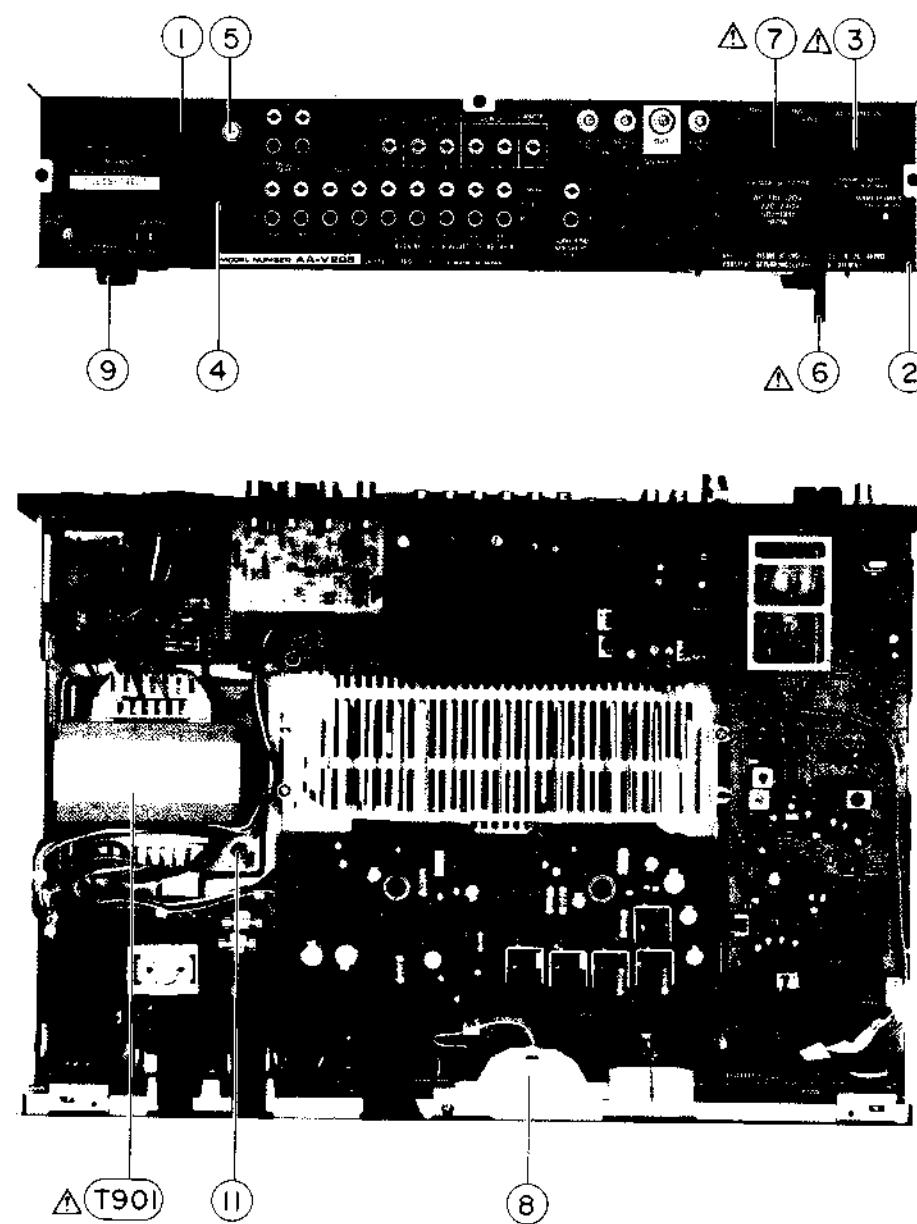


### 18. ASSEMBLY BLOCK

Ref. No.	Part No.	Description
18-1A	SP-366176A	PANEL REAR AA-V205(U)
18-1B	SP-366176B	PANEL REAR AA-V205(A,C)
18-1C	SP-366176C	PANEL REAR AA-V205(E,V)
18-1D	SP-366176D	PANEL REAR AA-205(S)
18-1E	SP-366176E	PANEL REAR AA-V205(I,E)
18-1F	SP-366176F	PANEL REAR AA-V205(L,B)
18-2	ZS-308846	T2BR30X08STL BZN PROJECTION [PANEL REAR FIX]
18-3	EJ-349174	SOCKET OUTLET S2-732T-122
18-4	SZ-362273	HOLDER ANTENNA (2)
18-5	EJ-366318	TERMINAL W/S SCREW UB-0060
18-6A	*EW-363658	AC CORD 200 0129AVFF B100 A U/T [U]
18-6B	*EW-363646	AC CORD 200 238APSPT2 B100 A UC [C,A]
18-6C	*EW-363672	AC CORD 200 0364 LCFL B070 A EV [E,V]
18-6D	*EW-363698	AC CORD 200 0436 LCFL B070 A S [S]

PARTS LIST

### FINAL ASSEMBLY BLOCK

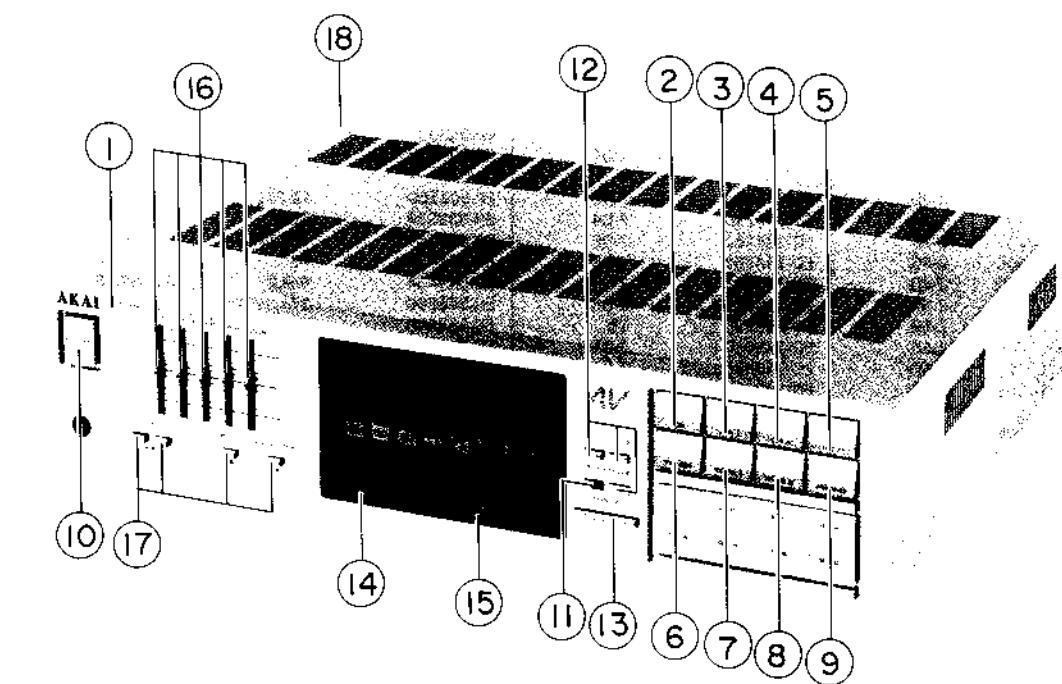

### 19. FINAL ASSEMBLY BLOCK

Ref. No.	Part No.	Description
19-1A	BD-A1021E110A	PANEL FRONT BLK AA-V205
19-1A-B	BD-A1021E110C	PANEL FRONT BLK AA-V205-B
19-1B	BD-A1021E110B	PANEL FRONT BLK AA-V205L
19-1B-B	BD-A1021E110D	PANEL FRONT BLK AA-V205L-B
19-2	SK-361870D	KNOB SELECTOR (A) CD
19-2-B	SK-361870H	KNOB SELECTOR (A)-B CD
19-3	SK-361870V	KNOB SELECTOR (A) VCR1
19-3-B	SK-366381B	KNOB SELECTOR (A)-B VCR1
19-4	SK-361870W	KNOB SELECTOR (A) VCR2
19-4-B	SK-366381C	KNOB SELECTOR (A)-B VCR2
19-5	SK-361870X	KNOB SELECTOR (A) V.DISK./TV
19-5-B	SK-366381D	KNOB SELECTOR (A)-B V.DISK./TV
19-6	SK-361870S	KNOB SELECTOR (A) TUNER
19-6-B	SK-361870Y	KNOB SELECTOR (A)-B TUNER
19-7	SK-361870T	KNOB SELECTOR (A) TAPE 1
19-7-B	SK-361870Z	KNOB SELECTOR (A)-B TAPE 1
19-8	SK-361870U	KNOB SELECTOR (A) TAPE 2
19-8-B	SK-366381A	KNOB SELECTOR (A)-B TAPE 2
19-9	SK-361870E	KNOB SELECTOR (A) PHONO
19-9-B	SK-361870J	KNOB SELECTOR (A)-B PHONO
19-10	SK-343017C	KNOB POWER (2)
19-10-B	SK-343017F	KNOB POWER-B
19-11	SK-365781D	KNOB PUSH (RED)
19-12	SK-365781C	KNOB PUSH
19-12-B	SK-365781B	KNOB PUSH-B
19-13	SK-366139A	KNOB TUNING
19-13-B	SK-366139B	KNOB TUNING-B
19-14	SK-366141	KNOB MUTE
19-15	SK-366140	KNOB VR
19-16	SK-366143A	KNOB EQ
19-16-B	SK-366143B	KNOB EQ-B
19-17	SK-366179A	KNOB SP
19-17-B	SK-366179B	KNOB SP-B
19-18	SP-366138A	COVER UPPER
19-18-B	SP-366138B	COVER UPPER-B

### SYMBOL FOR COLOR VARIATION

NON : SILVER  
B : BLOCK

### 20. REMOTE CONTROL UNIT RC-A905

Ref. No.	Part No.	Description
20-1	AX-366325	REMOCON RC-A905 WIRELESS (T)
20-1-B	AX-362546	REMOCON RC-A905-B WIRELESS(B)
20-D1	ED-705414	D LED SE303A INFRARED
20-D3	ED-718039	D SILICON DAN201
20-D4	ED-718039	D SILICON DAN201
20-IC1	EI-749983	IC UPD1943G
20-TR1	ET-718040	TR 2SD1468
20-X1	EI-710037	OSC CE CSB455E 455KHZ
20-2	SC-718689	COVER BATTERY
20-2-B	SC-718890	COVER BATTERY-B

PARTS LIST

# INDEX

Part No.	Ref. No.	Part No.	Ref. No.	Part No.	Ref. No.	Part No.	Ref. No.	Part No.	Ref. No.
AX-362546	20-1-B	ED-344280	15	EF-310229	3-F3B	EJ-349061	10-TM1		
AX-366325	20-1	ED-344280	4-D2	EF-310229	3-F4B	EJ-349174	18-3		
BA-A1021E030A	2-1A	ED-344280	4-D6	EF-323080	35	EJ-355012	16-JI		
BA-A1021E030B	2-1B	ED-344280	4-D7	EF-323080	12-F1B	EJ-359031	4-TM1		
BA-A1021E040A	2-2A	ED-344280	4-D8	EF-358641	29	EJ-366318	18-5		
BA-A1021E040B	2-2B	ED-344280	4-D9	EF-358641	3-F3D	EJ-366329	10-PJ1		
BA-A1021E040C	2-2C	ED-344280	4-D10	EF-358641	3-F4D	EJ-366330	10-PJ2		
BA-A1021E070A	2-3A	ED-344280	4-D11	EF-359007	28	EJ-366331	10-PJ3		
BA-A1021E070B	2-3B	ED-344280	7-D1	EF-359007	12-F1D	EJ-366332	10-PJ4		
BA-A1021E070C	2-3C	ED-344280	7-D2	EF-602550	30	EJ-366334	8-PJ1		
BA-A1021E070D	2-3D	ED-344280	7-D3	EF-602550	12-F1C	EJ-366335	8-PJ2		
BA-A1021E090A	2-4A	ED-344280	7-D4	EH-338338	38	EJ-366335	8-PJ3		
BA-A1021E090B	2-4B	ED-344280	7-D5	EH-338338	4-FL1A	EJ-366338	7-TM1		
BA-A1021E090C	2-4C	ED-344280	7-D6	EH-344434	36	EL-366367	14-PL40		
BA-A1021E090D	2-4D	ED-346613	21	EH-344434	4-FL3	EM-366356	64		
BA-A1021E100A	2-5A	ED-346613	3-D6	EH-355568	37	EM-366356	14-IND40		
BA-A1021E100B	2-5B	ED-348990	13	EH-355568	4-FL1	EO-330719	5-L1		
BA-A1021E100C	2-5C	ED-348990	3-D11	EH-355568	4-FL2	EO-332116	3-L1		
BA-A1021E100D	2-5D	ED-348990	3-D12	EH-360924	39	EO-337598	4-T1		
BA-A1021E100E	2-5E	ED-348990	3-D13	EH-360924	4-FL8	EO-337599	4-T2		
BA-A1021E100F	2-5F	ED-349448	18	EH-361669	5-IB3	EO-337640	9-T1		
BA-F0141A010B	2-6B	ED-349448	9-D1	EH-361669	5-IB4	EO-349461	9-L1		
BA-F0141C010A	2-6A	ED-349448	9-D2	EH-363344	40	EO-349461	9-L3		
BD-A1021E110A	19-1A	ED-349448	9-D3	EH-363344	4-FL4	EO-349462	9-L2		
BD-A1021E110B	19-1B	ED-349448	9-D4	EH-366351	5-IB1	EO-349462	9-L4		
BD-A1021E110C	19-1A-B	ED-349460	17	EH-366351	5-IB2	EO-349462	9-L5		
BD-A1021E110D	19-1B-B	ED-349460	4-D4	EH-366353	5-IB5	EO-352089	4-T4		
BT-366320	4	ED-349460	4-D5	EH-370069	41	EO-353687	9-L7		
BT-366320	18-T901A	ED-357754	12	EH-370069	4-FL6	EO-356732	4-T7		
BT-366321-A	2	ED-357754	10-D1	EH-370069	4-FL7	EO-359056	9-L6		
BT-366321-A	18-T901B	ED-361885	7	EI-300042	52	EO-361630	4-T6		
BT-366323	3	ED-361885	6-D12	EI-300042	5-IC3	EO-363279	4-T3		
BT-366323	18-T901C	ED-361885	6-D13	EI-330256	62	EO-363291	4-T5		
BT-366324	1	ED-361885	6-D14	EI-330256	5-X1	EO-370070	4-T1A		
BT-366324	18-T901D	ED-361885	6-D15	EI-337228	48	EO-337159	65		
EC-320548	12-C1	ED-361885	6-D16	EI-337228	10-IC3	EO-337159	3-RL1		
EC-324109	3-C3	ED-361885	6-D17	EI-337228	10-IC4	EO-337159	3-RL2		
EC-324109	3-C4	ED-361885	6-D18	EI-337228	11-IC1	EQ-366328	66		
EC-328070	3-C14	ED-361885	6-D19	EI-337228	11-IC2	EQ-366328	10-RL1		
EC-328070	3-C17	ED-361885	6-D20	EI-337228	13-IC1	ER-200595	68		
EC-338411	12-C1A	ED-361885	6-D21	EI-343373	54	ER-200595	3-R51		
EC-338496	12-C1B	ED-361885	6-D22	EI-343373	11-IC3	ER-200746	69		
EC-359065	4-VC1	ED-361885	6-D23	EI-344422	63	ER-200746	3-R30		
EC-363331	4-VC1A	ED-361885	6-D24	EI-344422	4-X1	ER-200746	3-R32		
EC-366358	3-C1	ED-361885	6-D25	EI-347634	50	ER-200944	3-R3		
EC-366358	3-C2	ED-361885	6-D26	EI-344764	8-IC1	ER-200944	3-R4		
EC-370071	4-VC2	ED-361885	6-D27	EI-349392	56	ER-308805	4-R25		
ED-200749	11	ED-365378	19	EI-349392	10-IC1	ER-316802	3-R1		
ED-200749	3-D1	ED-365378	3-D17	EI-349719	49	ER-316802	3-R2		
ED-301911	14	ED-365463	20	EI-349719	11-IC4	ER-316802	3-R5		
ED-301911	3-D9	ED-365463	3-D3	EI-351849	58	ER-316802	3-R6		
ED-301911	3-D14	ED-365463	3-D4	EI-351849	4-IC3	ER-316802	3-R53		
ED-301911	3-D15	ED-366337	16	EI-351966	57	ER-321619	10-R10		
ED-301911	3-D16	ED-366337	7-D7	EI-351966	11-IC5	ER-323074	11-R10		
ED-301911	5-D1	ED-366337	7-D8	EI-354080	59	ER-323074	11-R11		
ED-301911	5-D3	ED-366337	7-D9	EI-354080	3-IC2	ER-327710	4-R16		
ED-301911	5-D4	ED-366337	7-D10	EI-354401	43	ER-327710	4-R31		
ED-301911	5-D5	ED-366337	7-D11	EI-354401	8-IC2	ER-327710	4-R59		
ED-301911	5-D6	ED-366337	7-D12	EI-354401	8-IC3	ER-327710	8-R9		
ED-301911	5-D7	ED-366337	7-D13	EI-355211	51	ER-327710	8-R10		
ED-308012	26	ED-366337	7-D14	EI-355211	13-IC2	ER-333023	3-R54		
ED-308012	3-D18	ED-366337	7-D15	EI-356370	45	ER-333067	3-R49		
ED-308316	23	ED-367218	8	EI-356370	5-IC2	ER-333067	3-R50		
ED-306316	4-D1	ED-367218	6-D10	EI-361230	46	ER-333074	3-R7		
ED-309069	24	ED-705414	6	EI-361230	14-IC40	ER-333074	3-R8		
ED-309069	3-D7	ED-705414	20-D1	EI-361622	47	ER-333086	16-R1		
ED-309069	3-D8	ED-718039	9	EI-361622	4-IC1	ER-333406	4-R35		
ED-315759	22	ED-718039	20-D3	EI-361624	44	ER-353343	67		
ED-315759	3-D5	ED-718039	20-D4	EI-361624	4-IC2	ER-353343	70		
ED-315759	3-D10	EE-359265	18-13X	EI-366327	55	ER-353343	3-R10		
ED-318859	27	EF-258344	31	EI-366327	10-IC2	ER-353343	3-R12		
ED-318859	4-D3	EF-258344	3-F3C	EI-366366	53	ER-353343	3-R20		
ED-321269	5	EF-258344	3-F4C	EI-366366	3-IC1	ER-353343	3-R55		
ED-321269	6-D11	EF-306950	32	EI-370303	42	ER-356573	12-R1		
ED-330319	10	EF-306950							







# **AKAI**

## **MODEL AA-V205**


### **SCHEMATIC DIAGRAM AND PC BOARDS**

#### **TABLE OF CONTENTS**


1. SCHEMATIC DIAGRAM OF ICs .....	2
2. TUNER BLOCK DIAGRAM .....	6
3. AMP BLOCK DIAGRAM.....	7
4. CONNECTION DIAGRAM .....	8
5. CONNECTION PC BOARD AND OTHER PC BOARDS .....	9
6. MAIN/EQUALIZER SCHEMATIC DIAGRAM .....	10
7. MAIN/G EQUALIZER/POWER SW PC BOARD .....	11
8. TUNER/TUNER(L) PC BOARD.....	12
9. TUNER SCHEMATIC DIAGRAM.....	13
10. FRONT END SCHEMATIC DIAGRAM .....	14

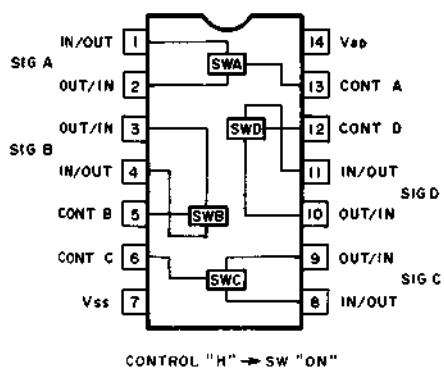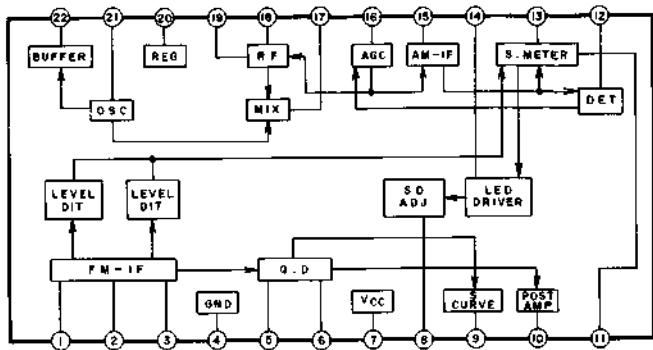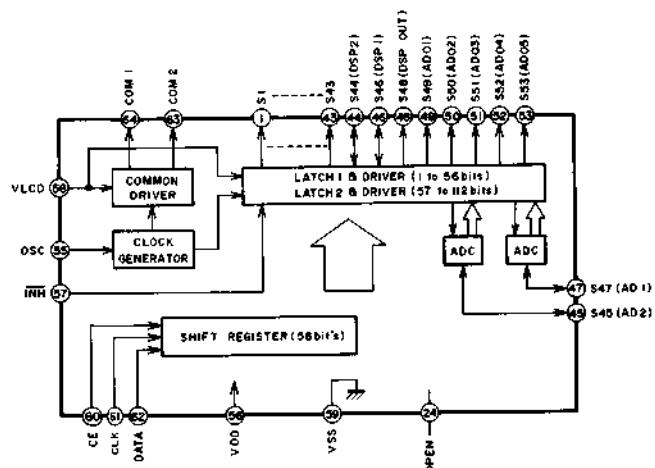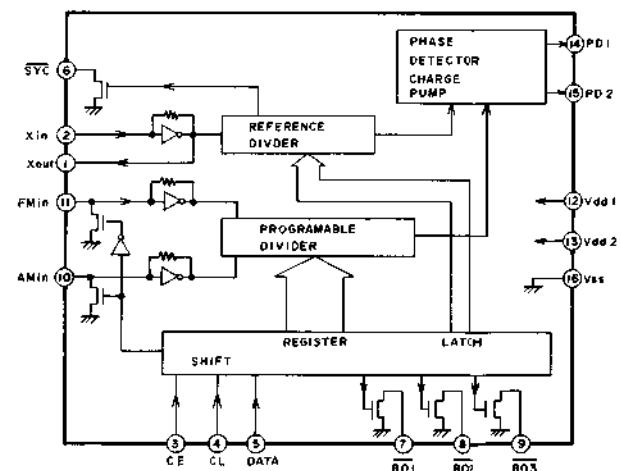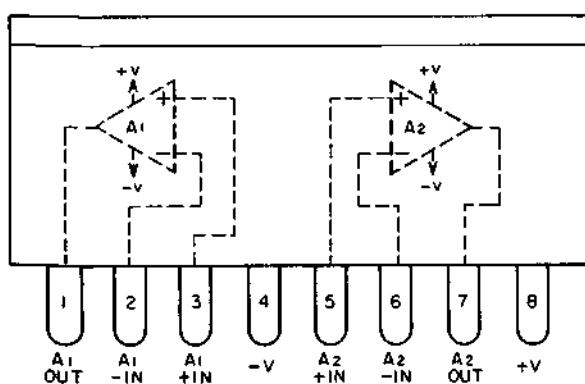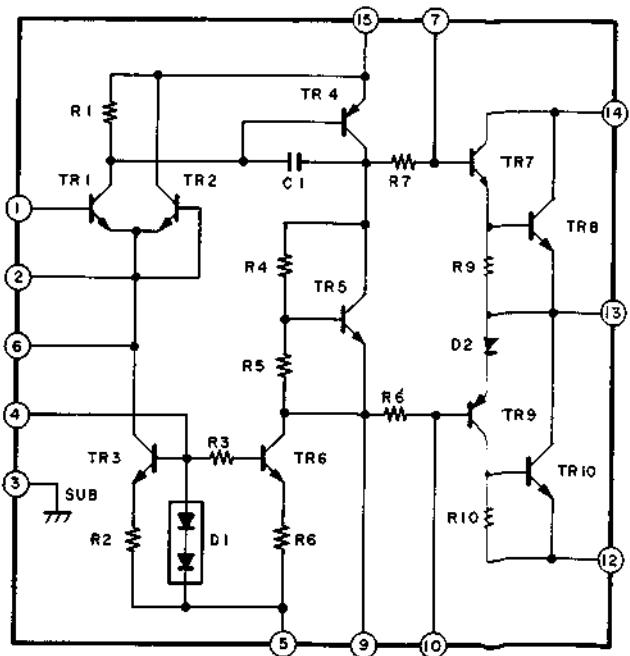**BU4066B****LA1265****LC7580****LM7001****M5218LO****STK-4038-II**


TC9156P

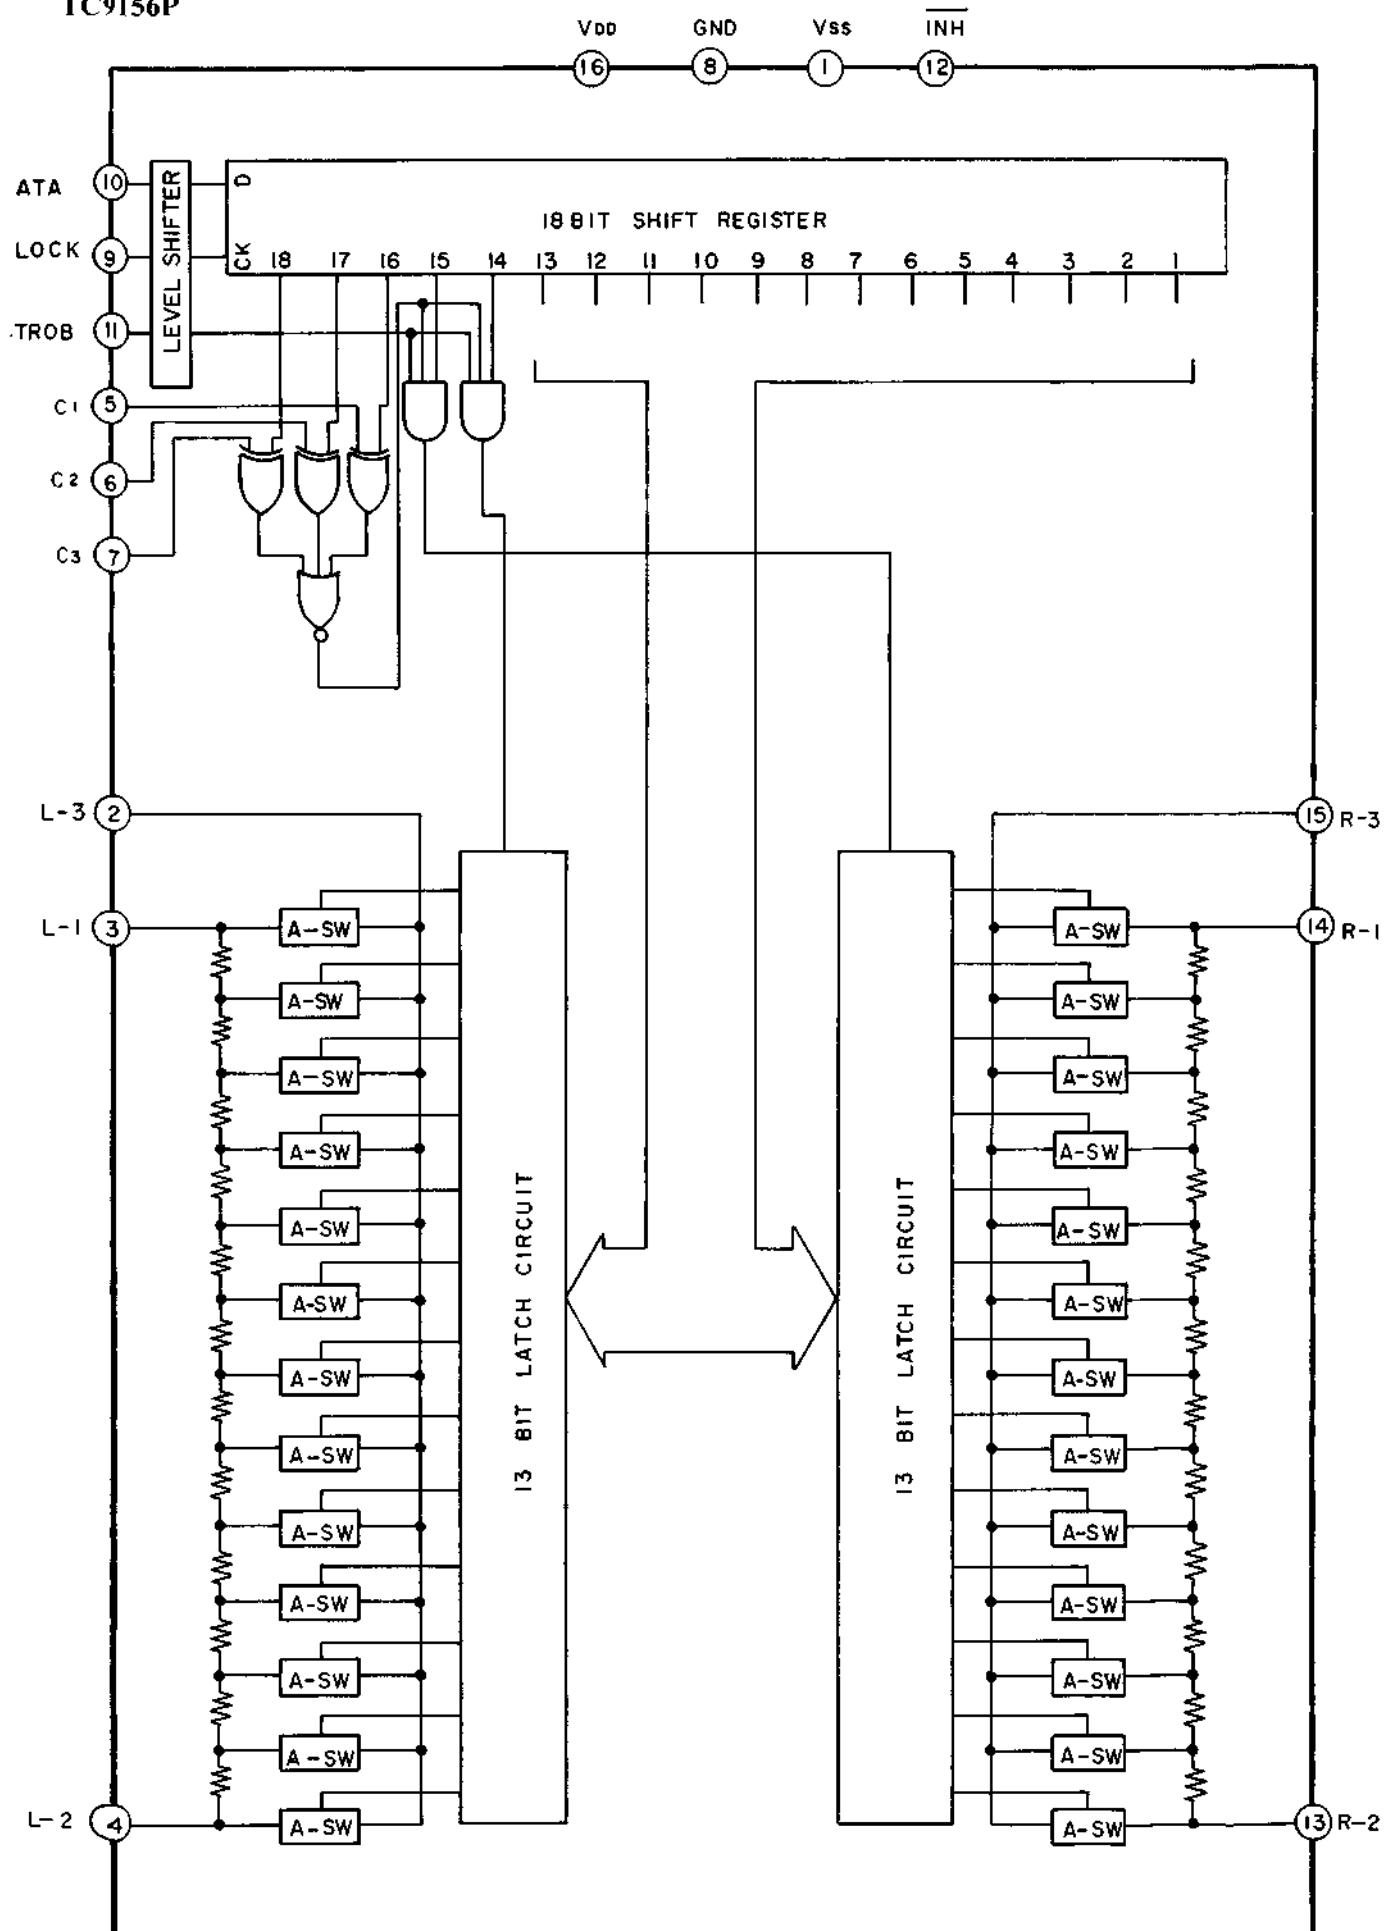


**TC9162N**

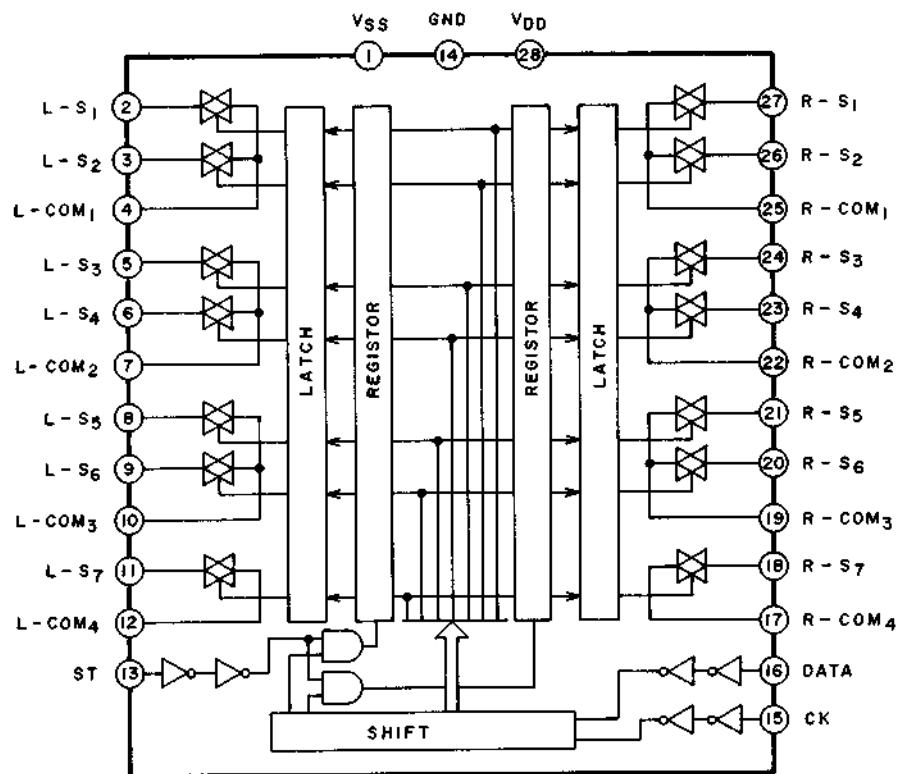


**TC9164N**

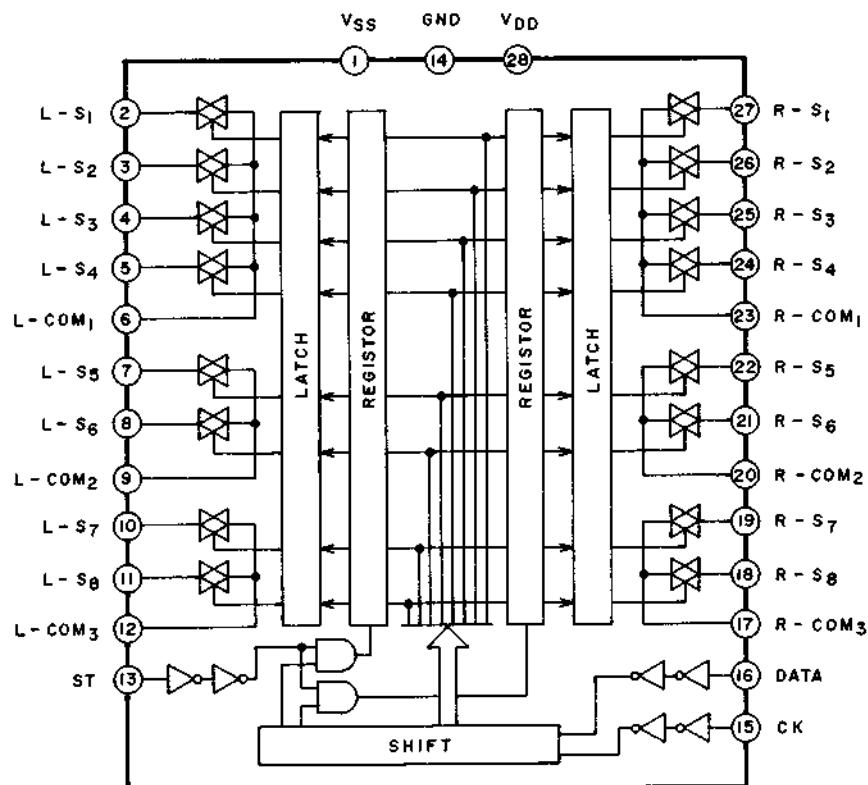


TC9176P

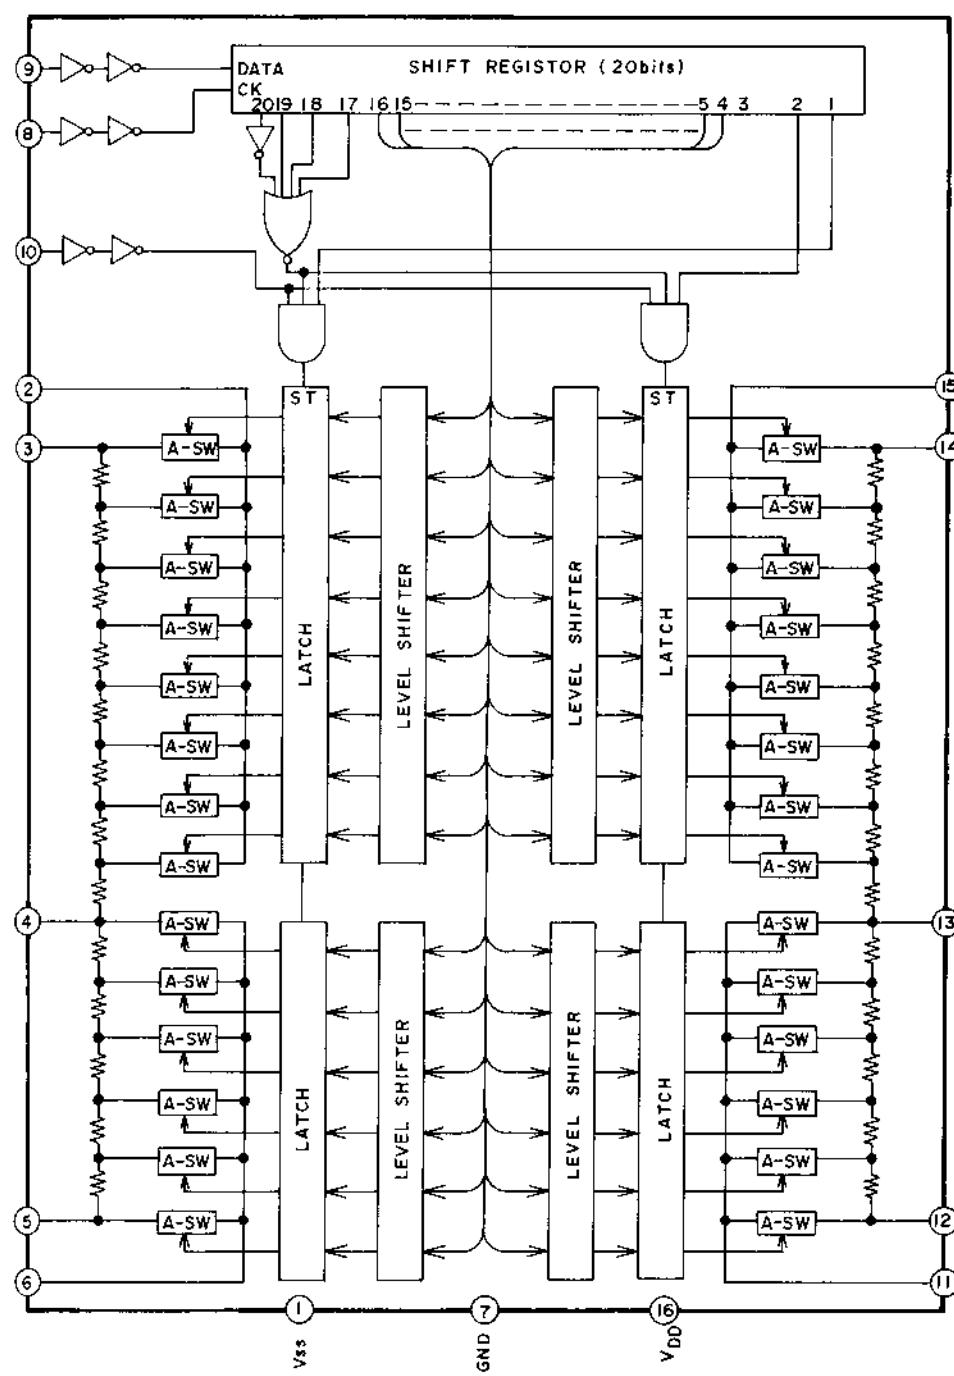


$\mu$ PC1235C

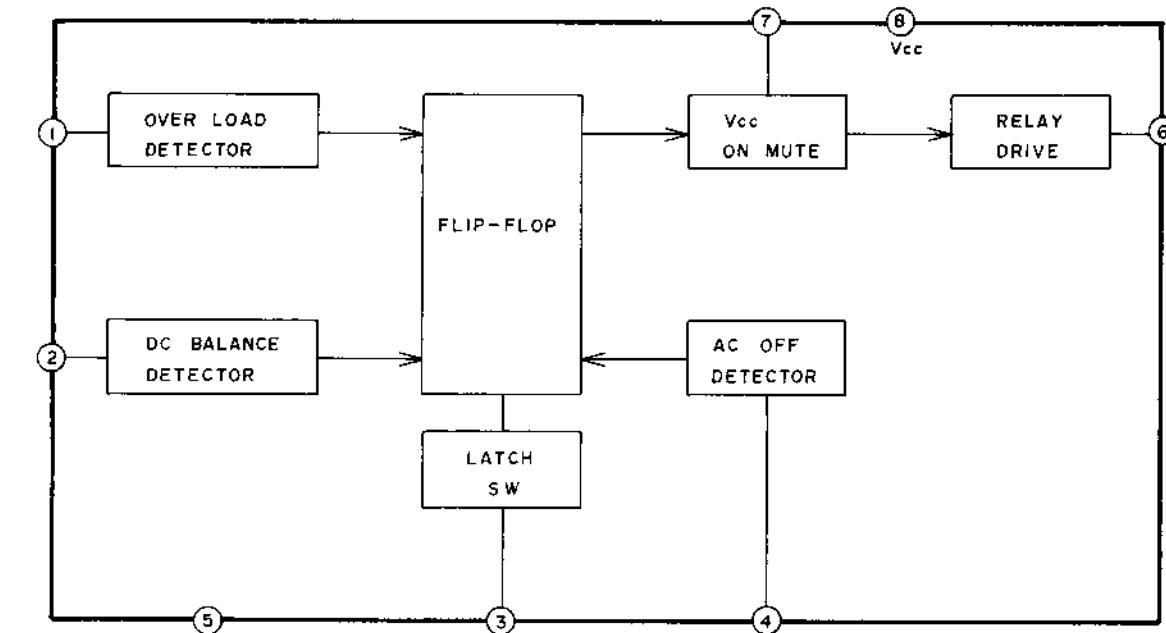



$\mu$ PC1237H

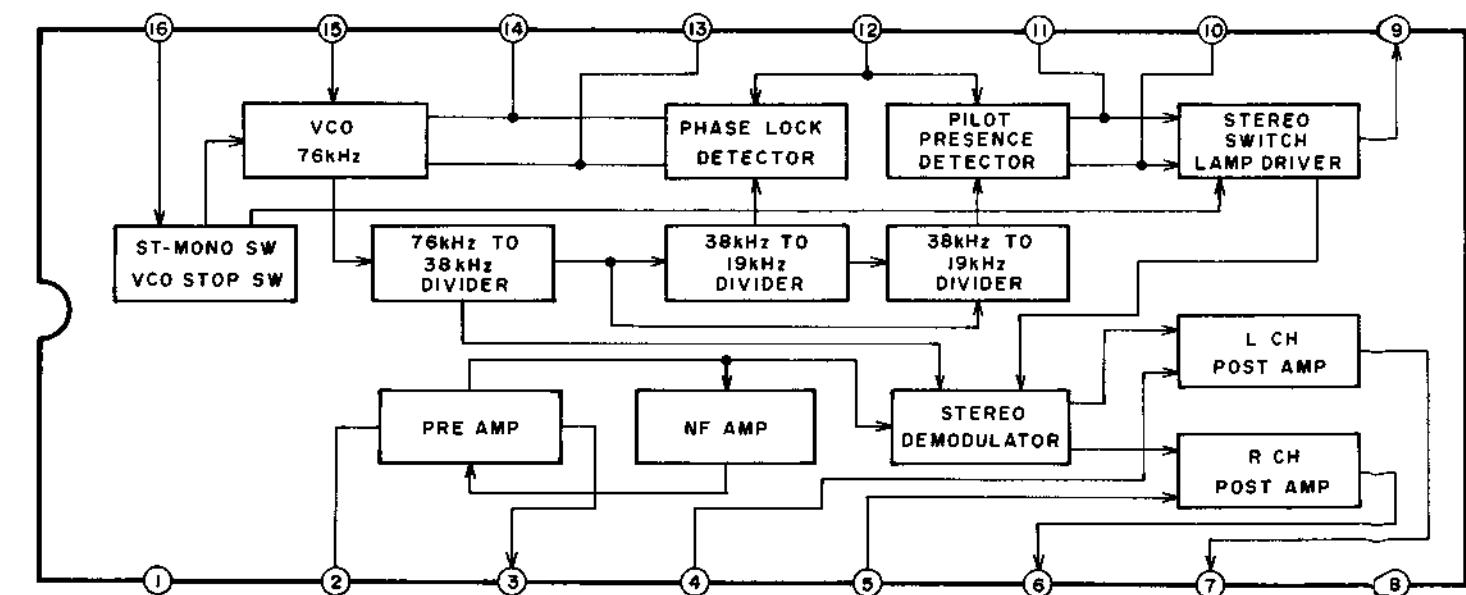

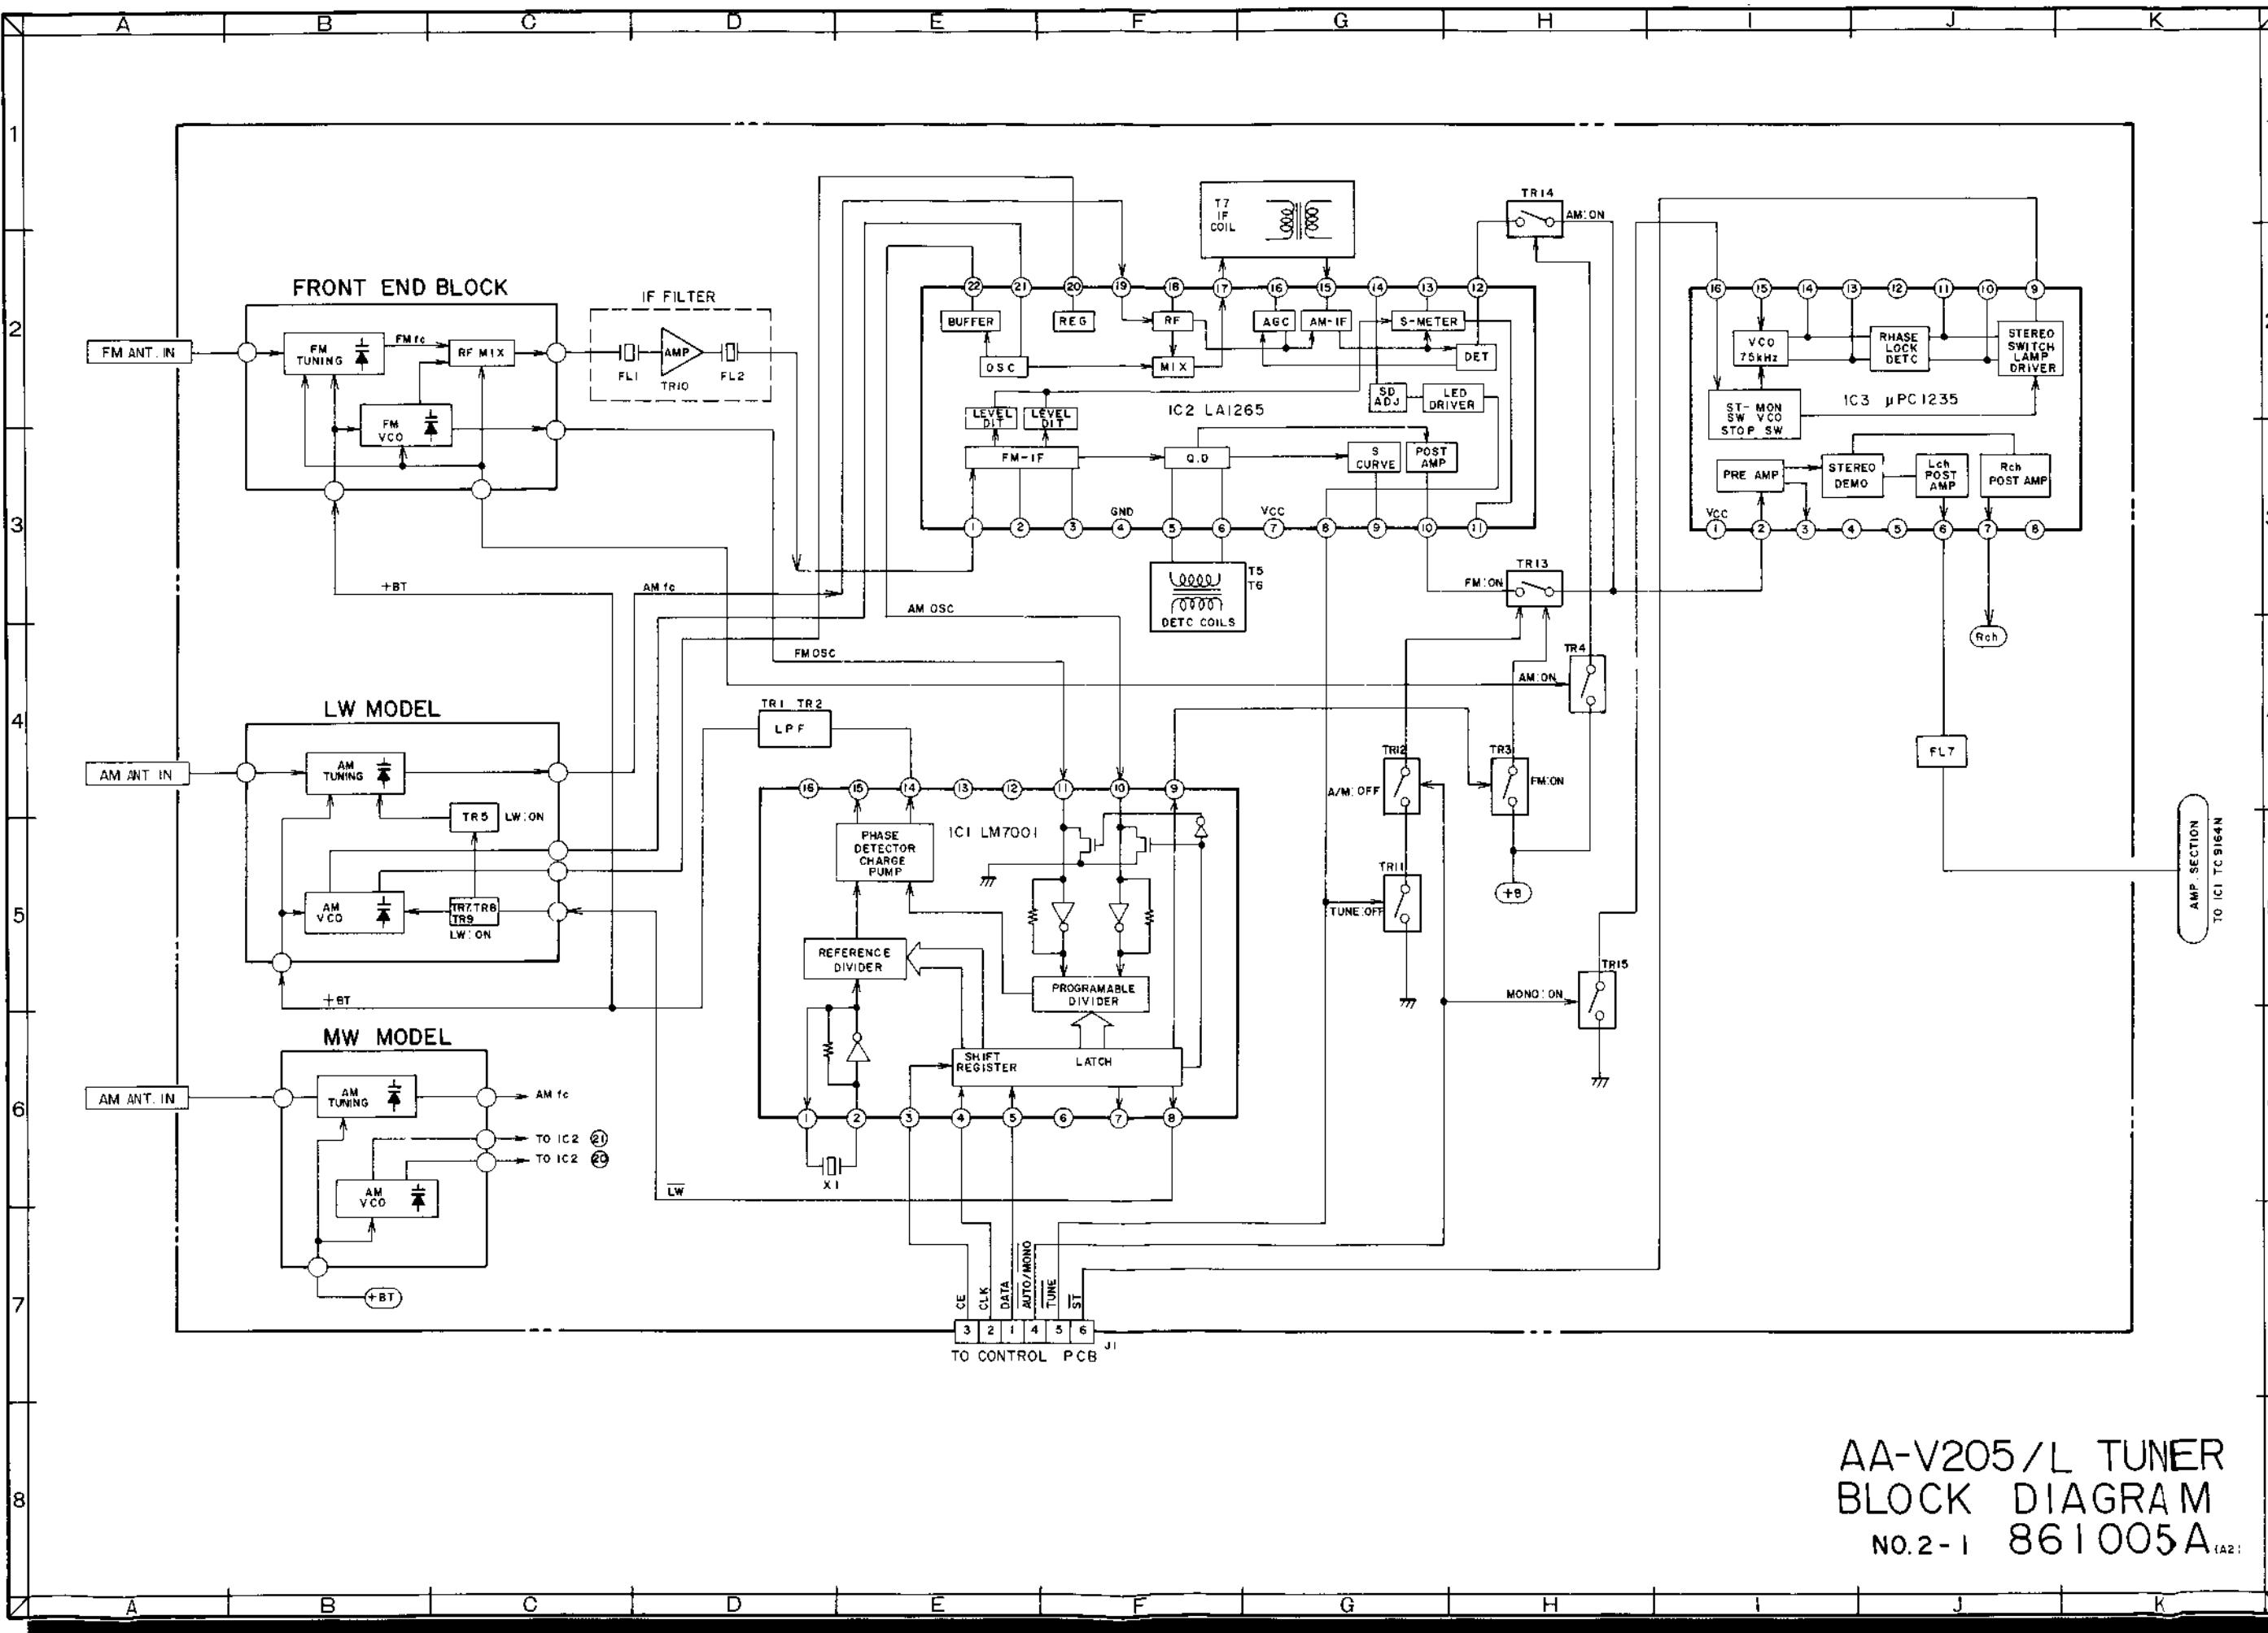



# AA-V205

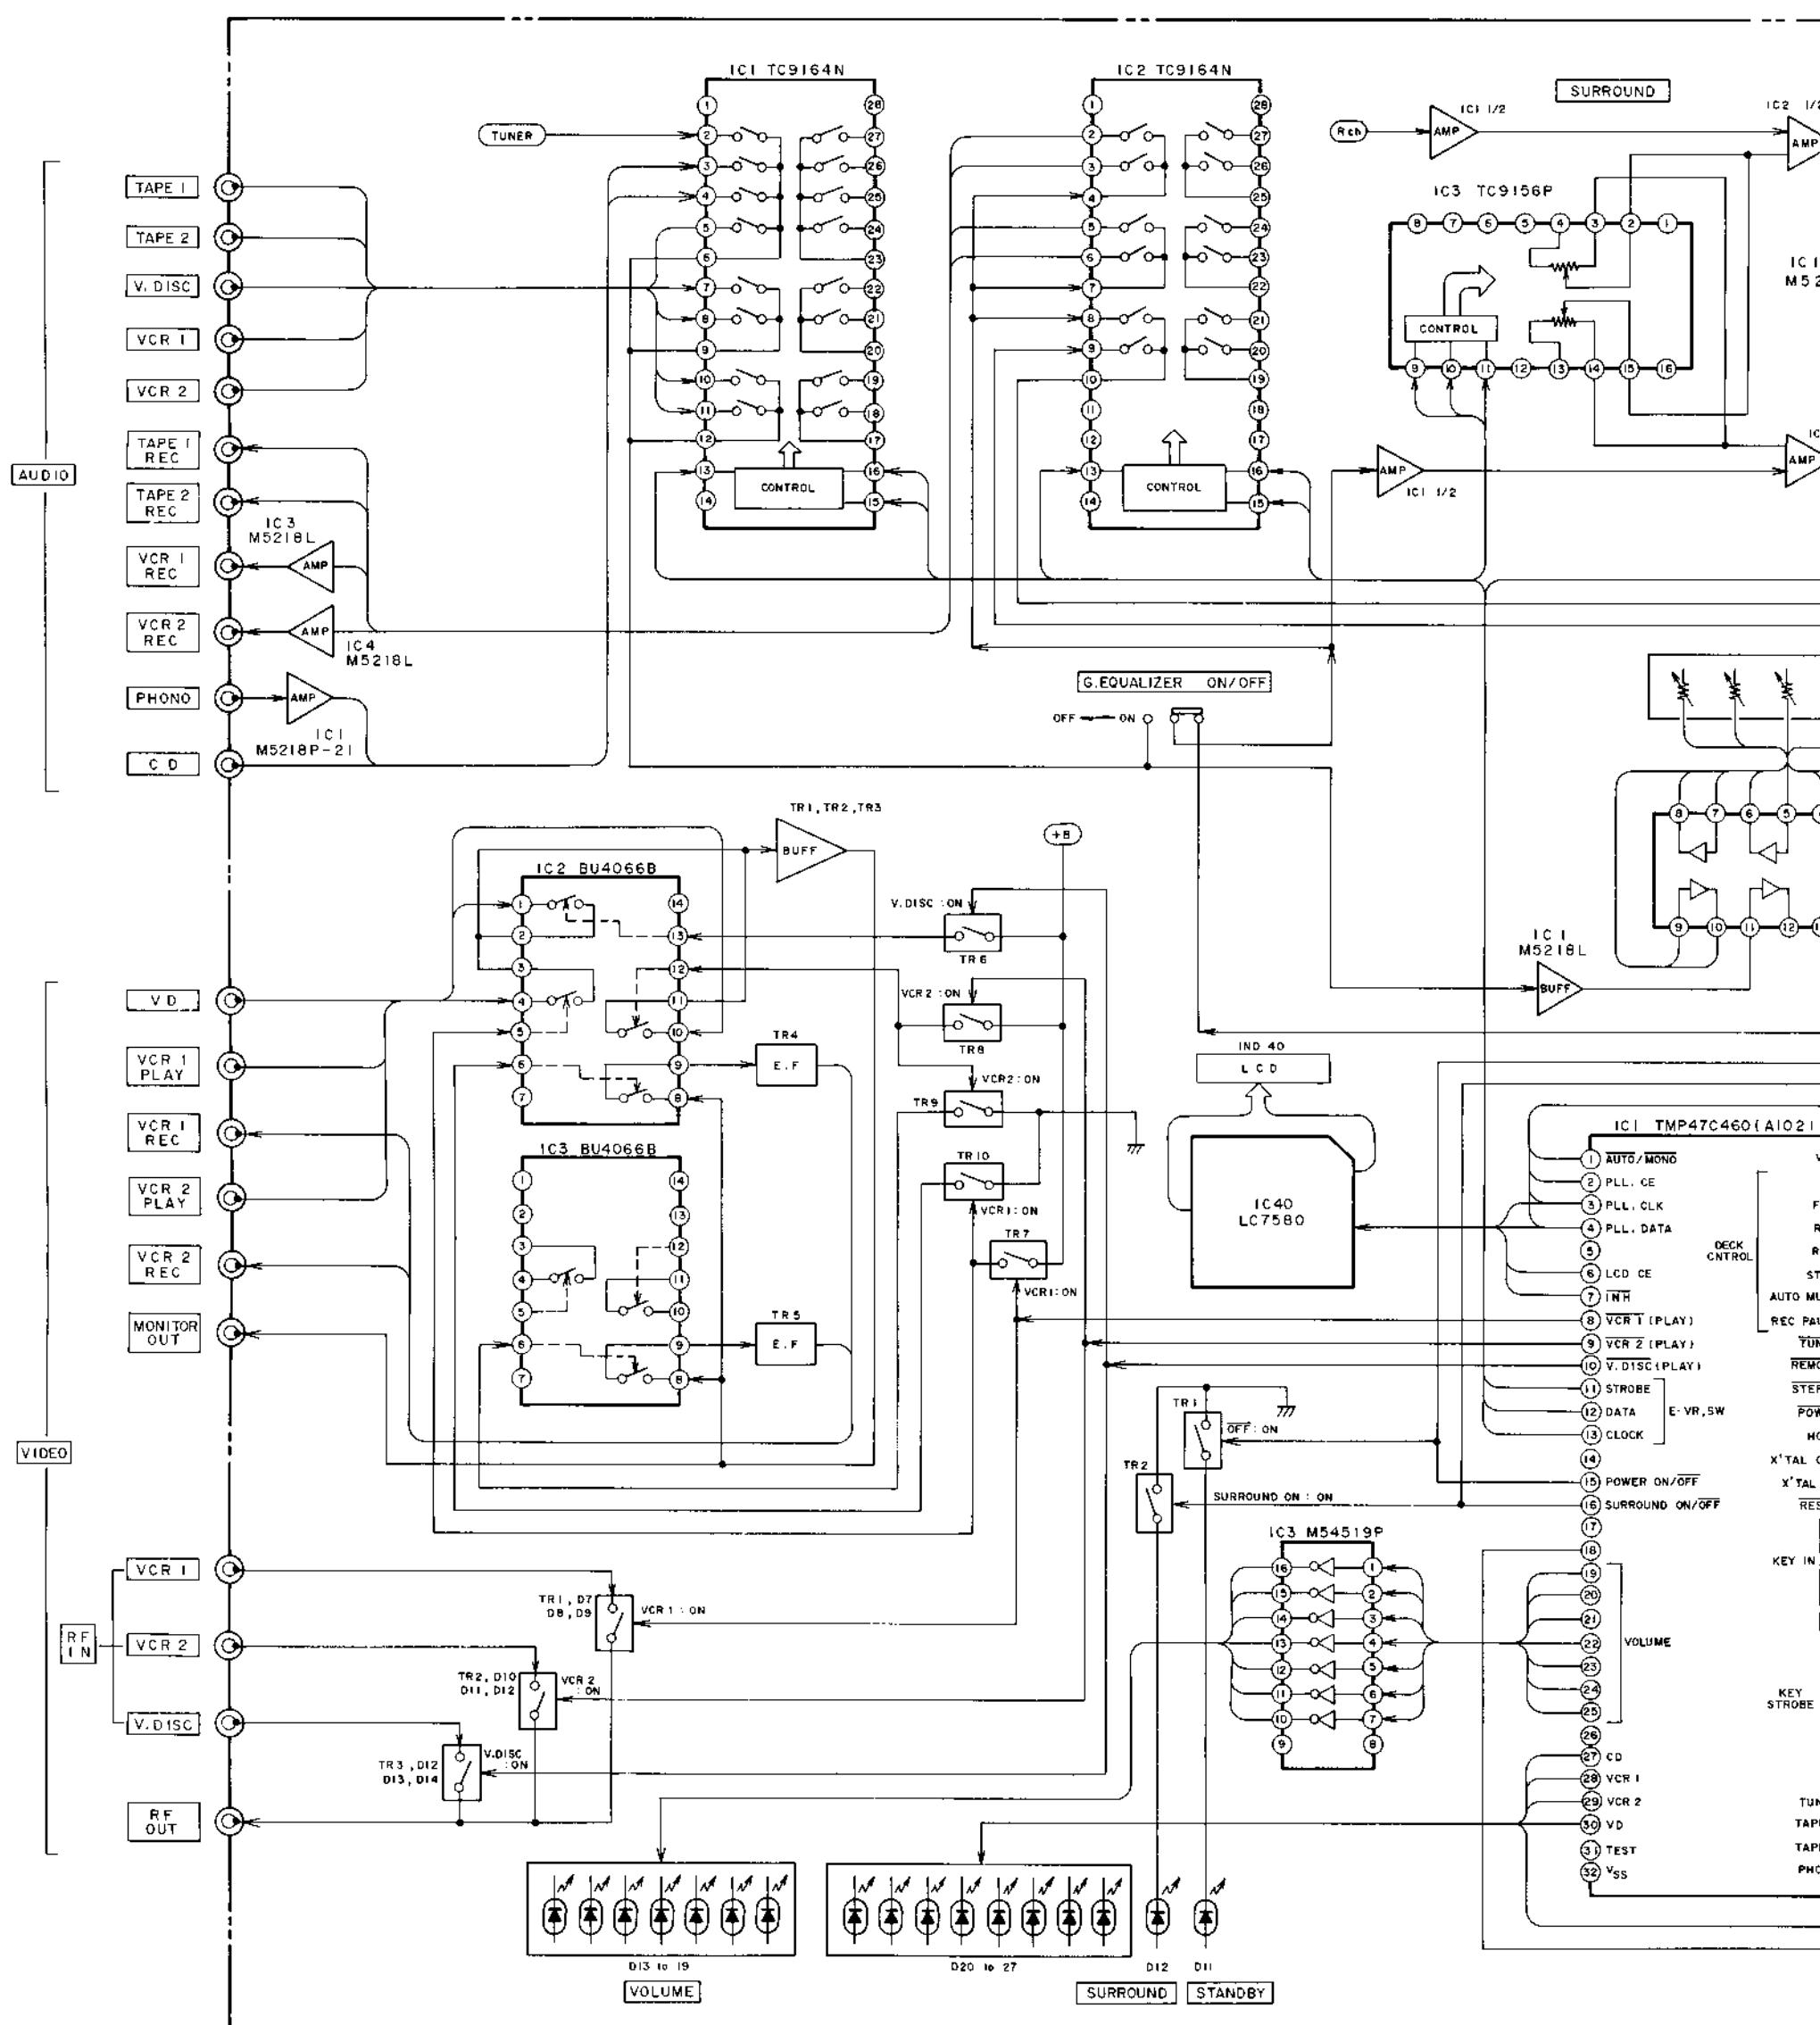

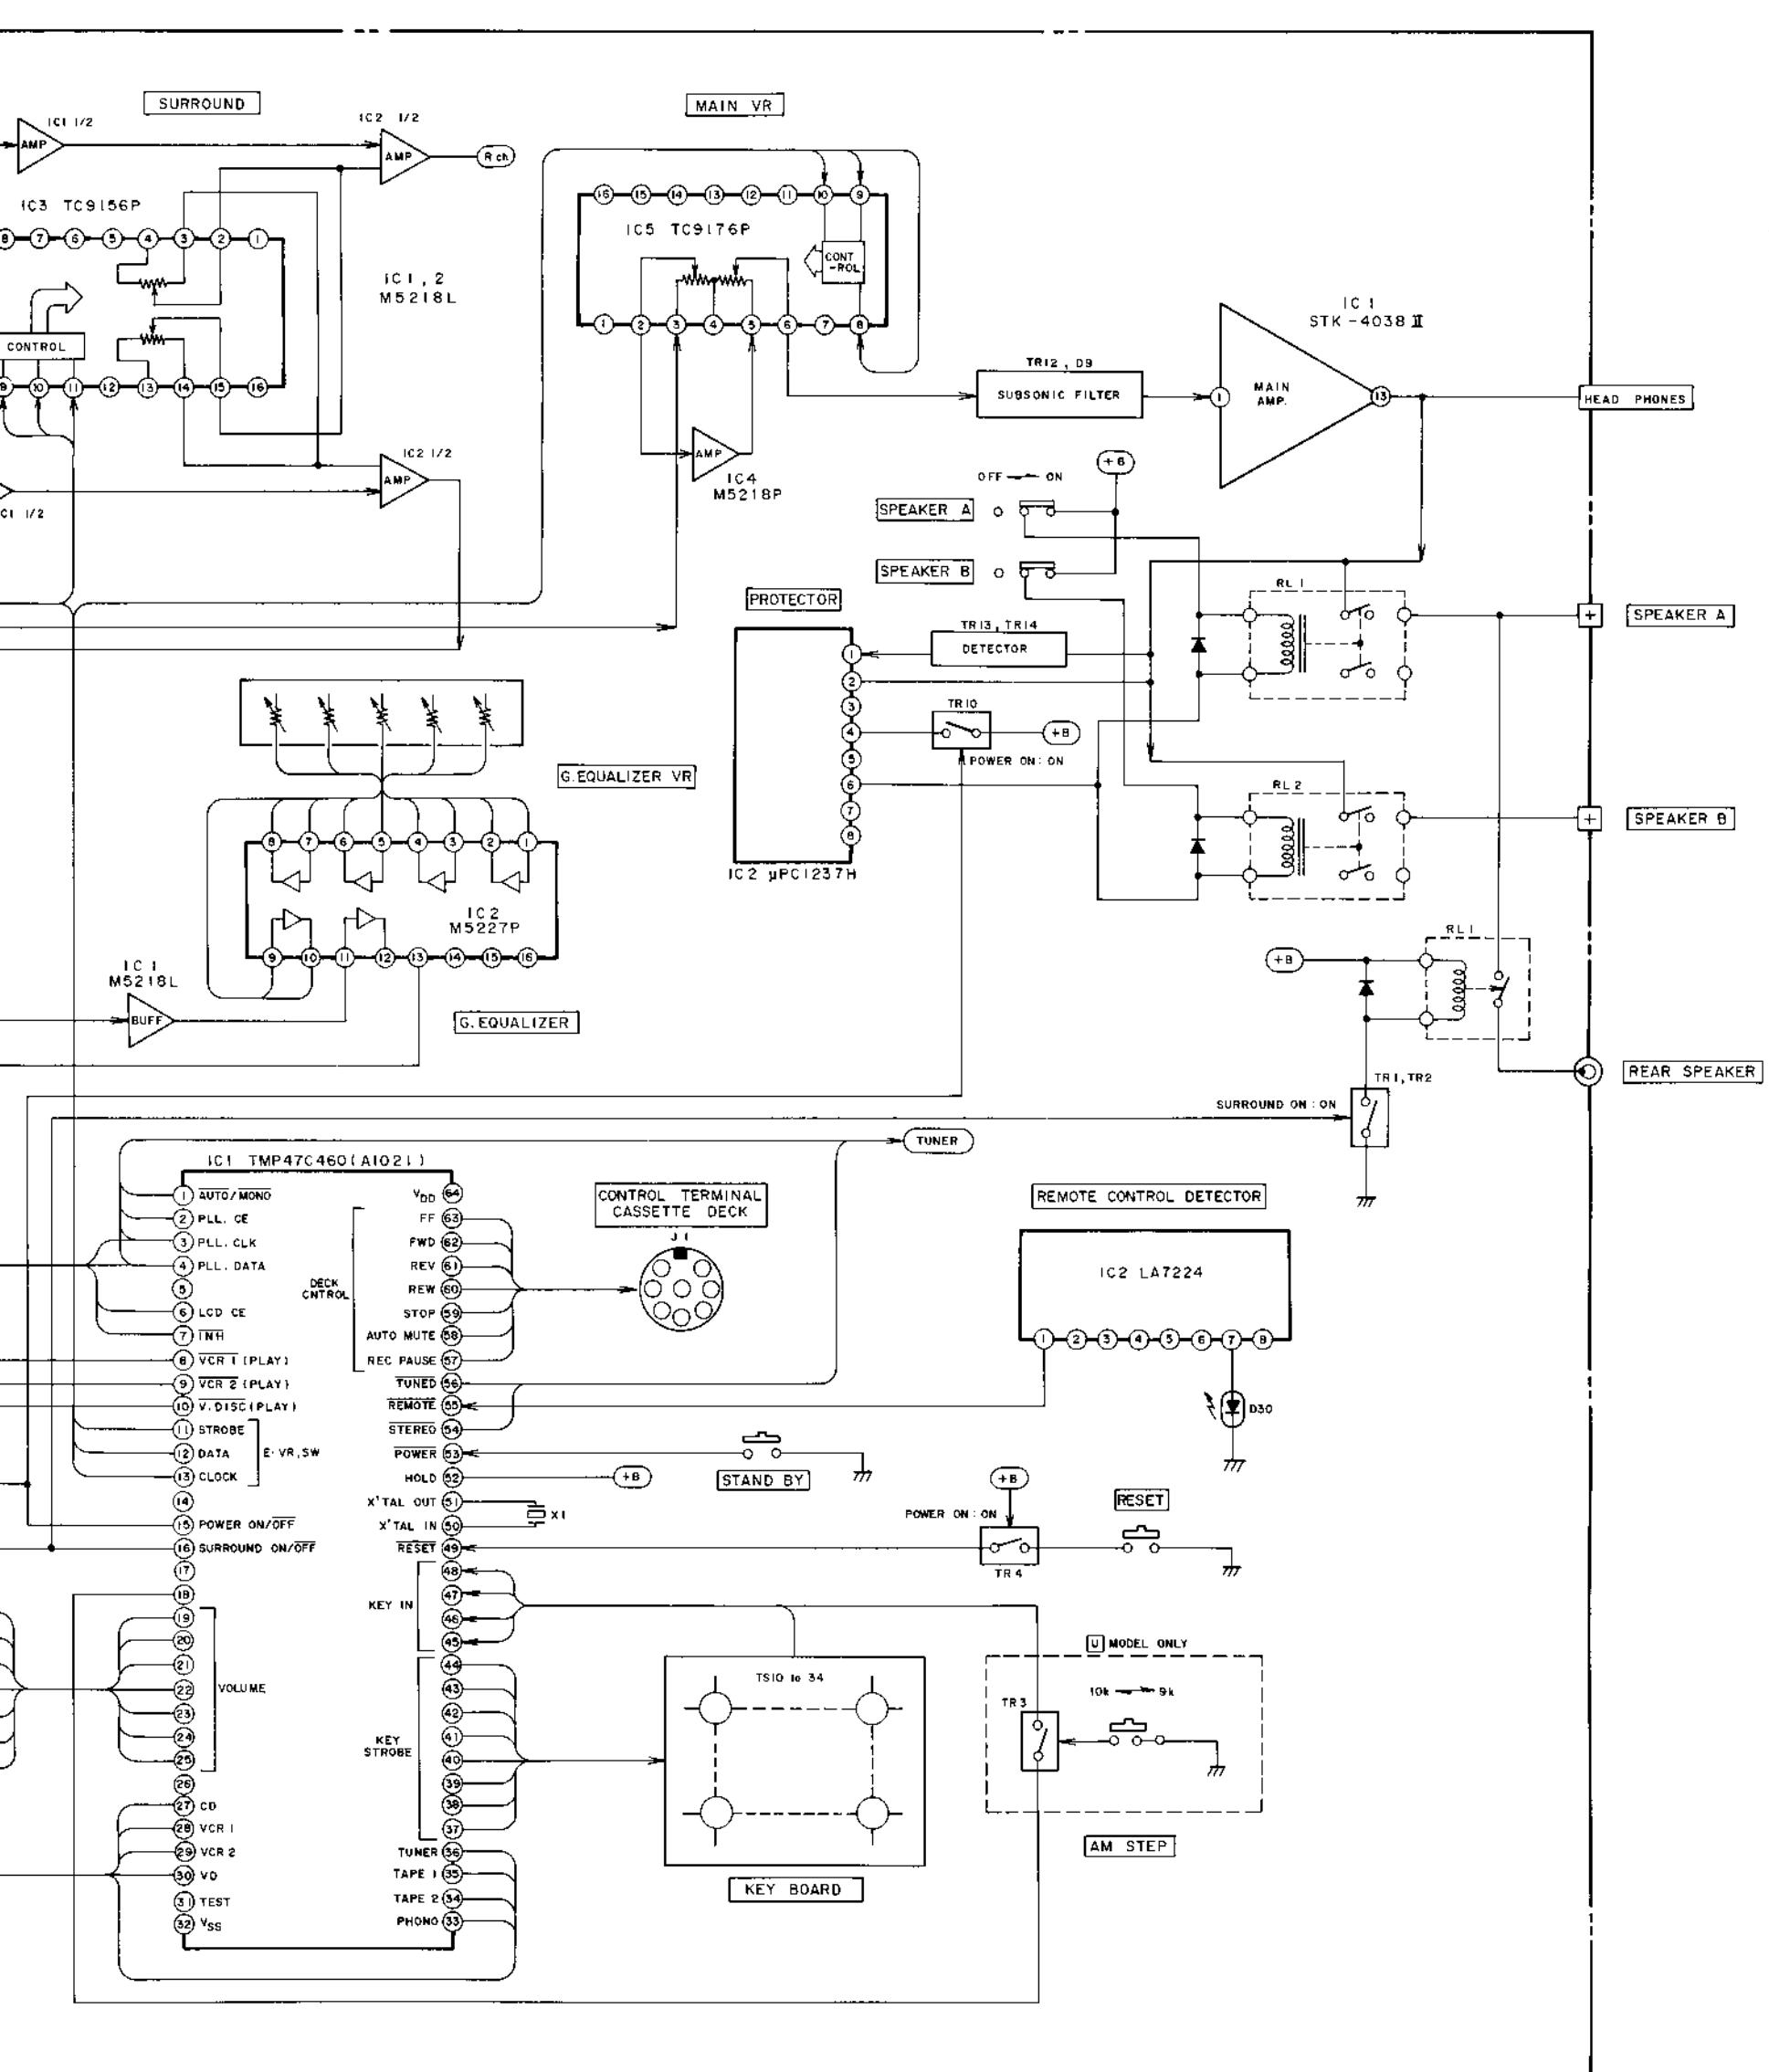

AA - V205/L AMP  
BLOCK DIAGRAM  
NO.2-2 861006A

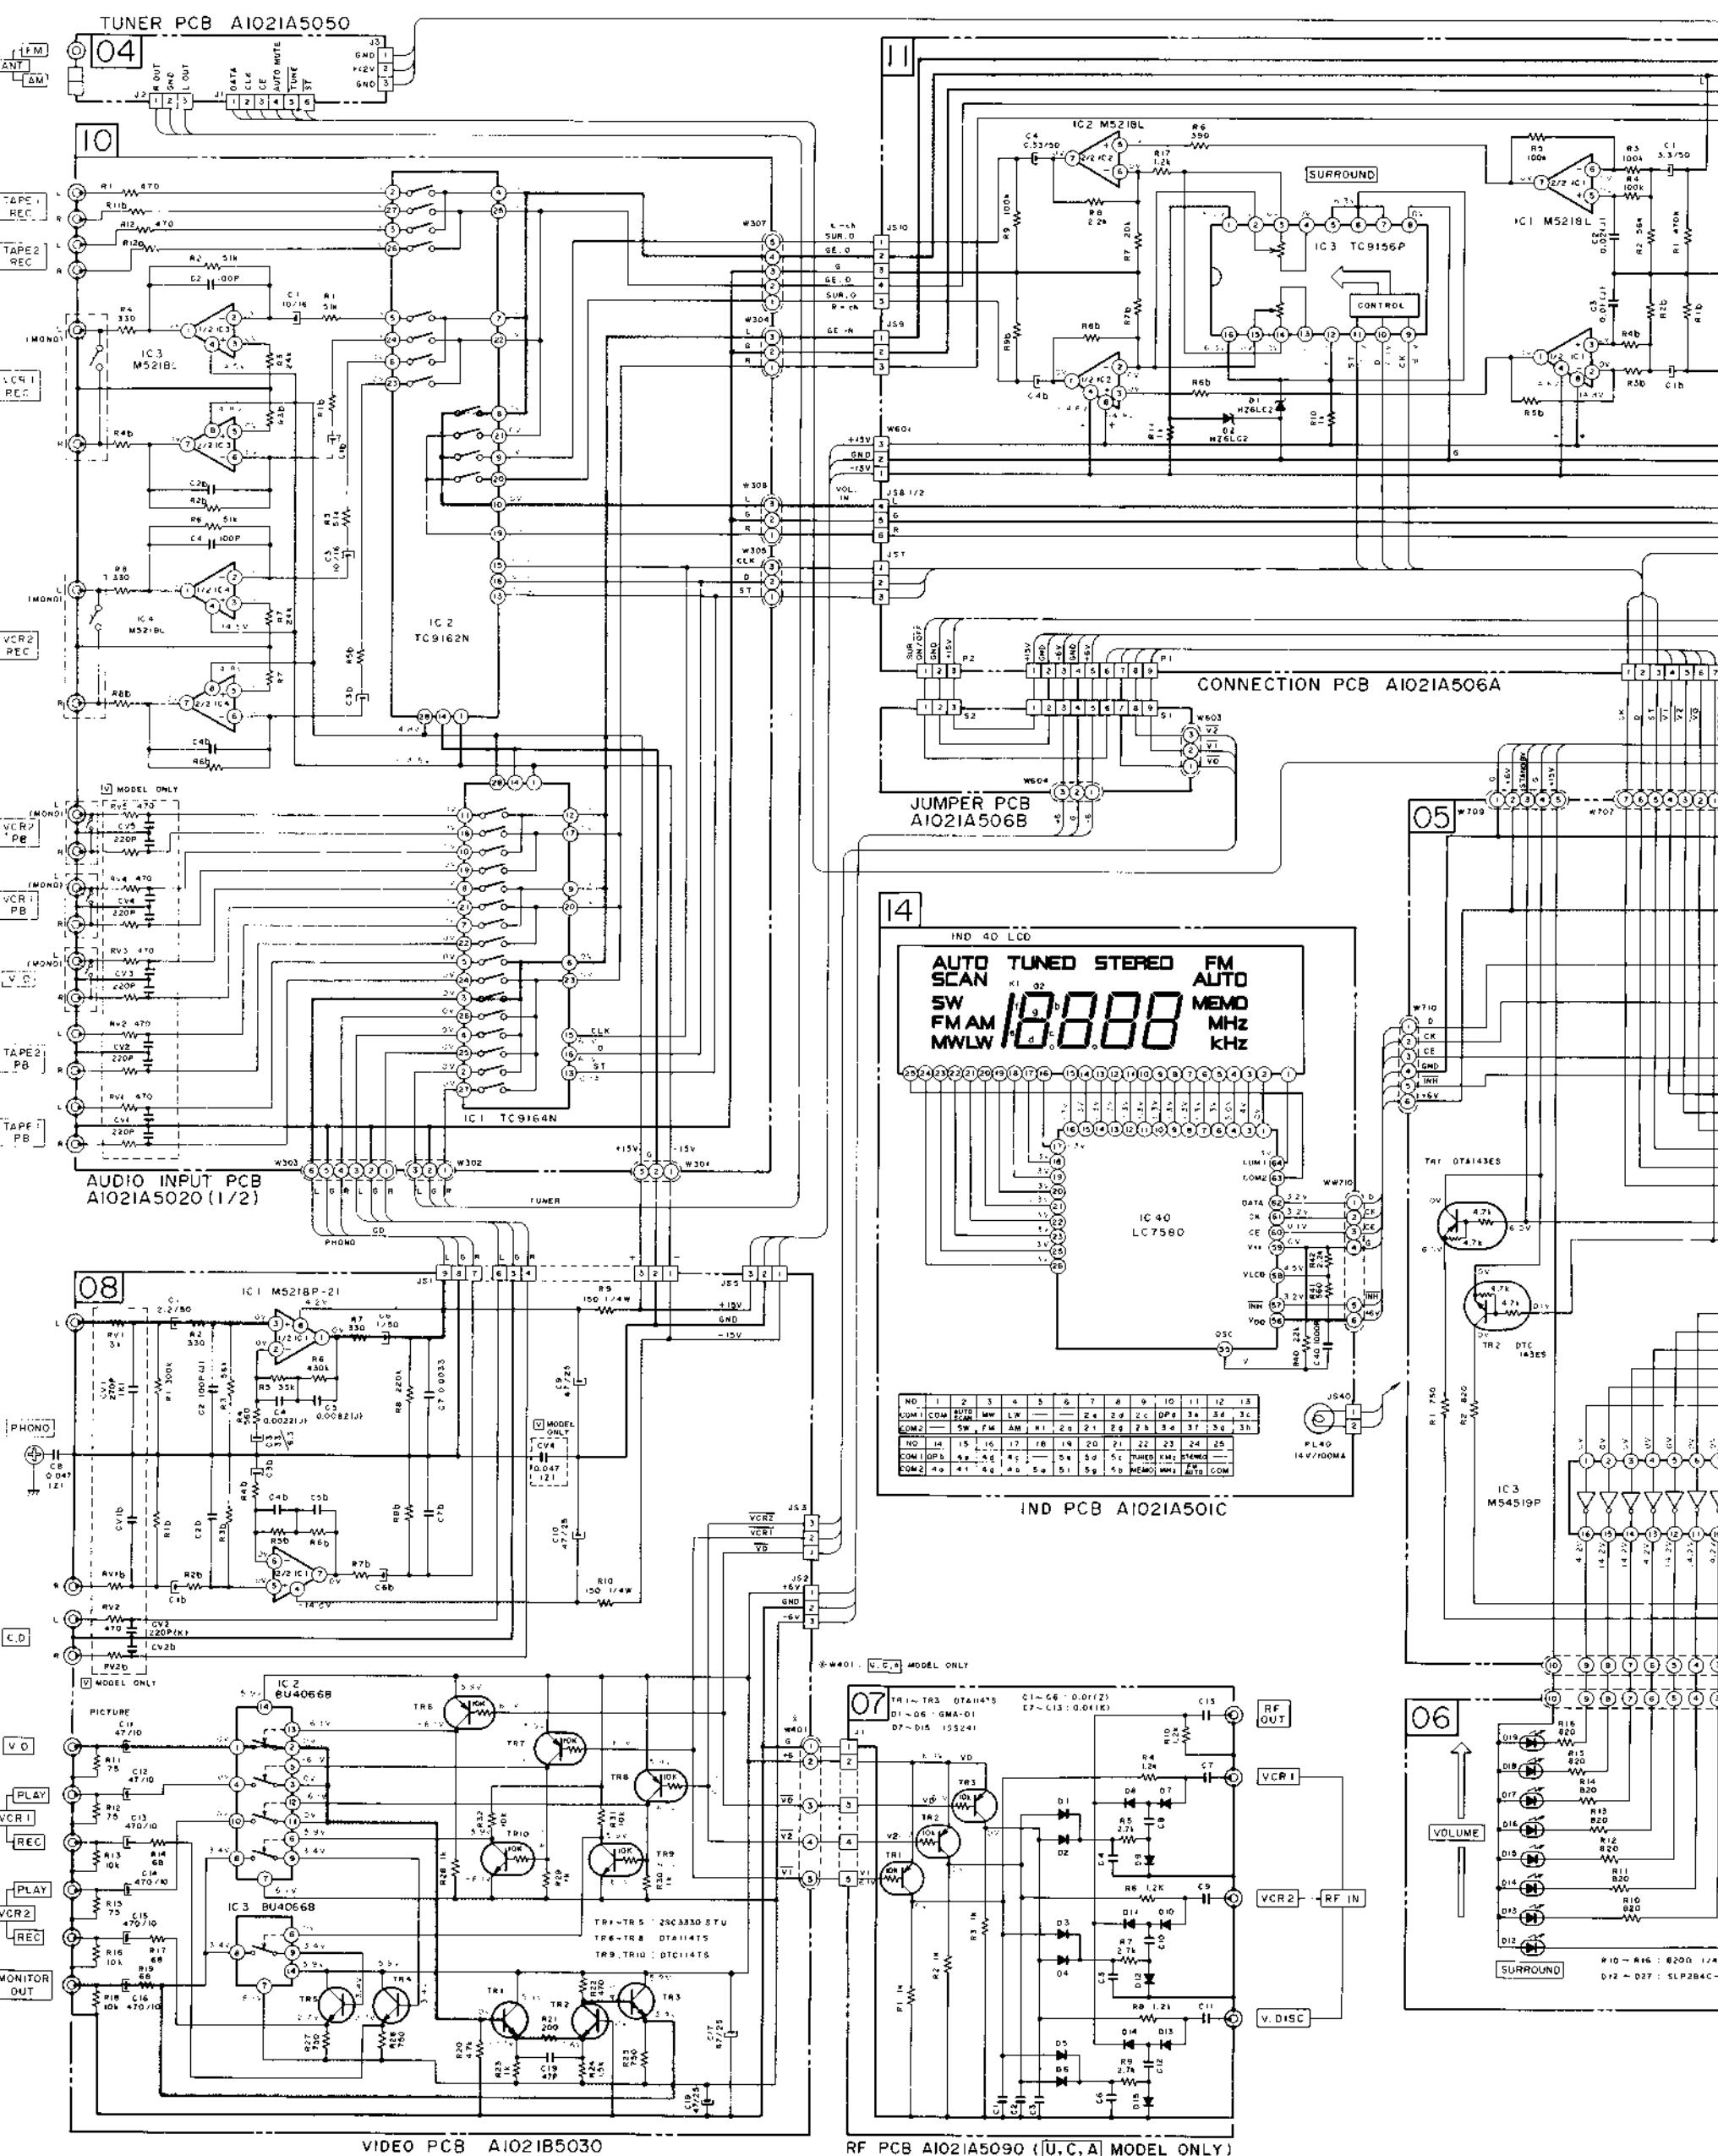

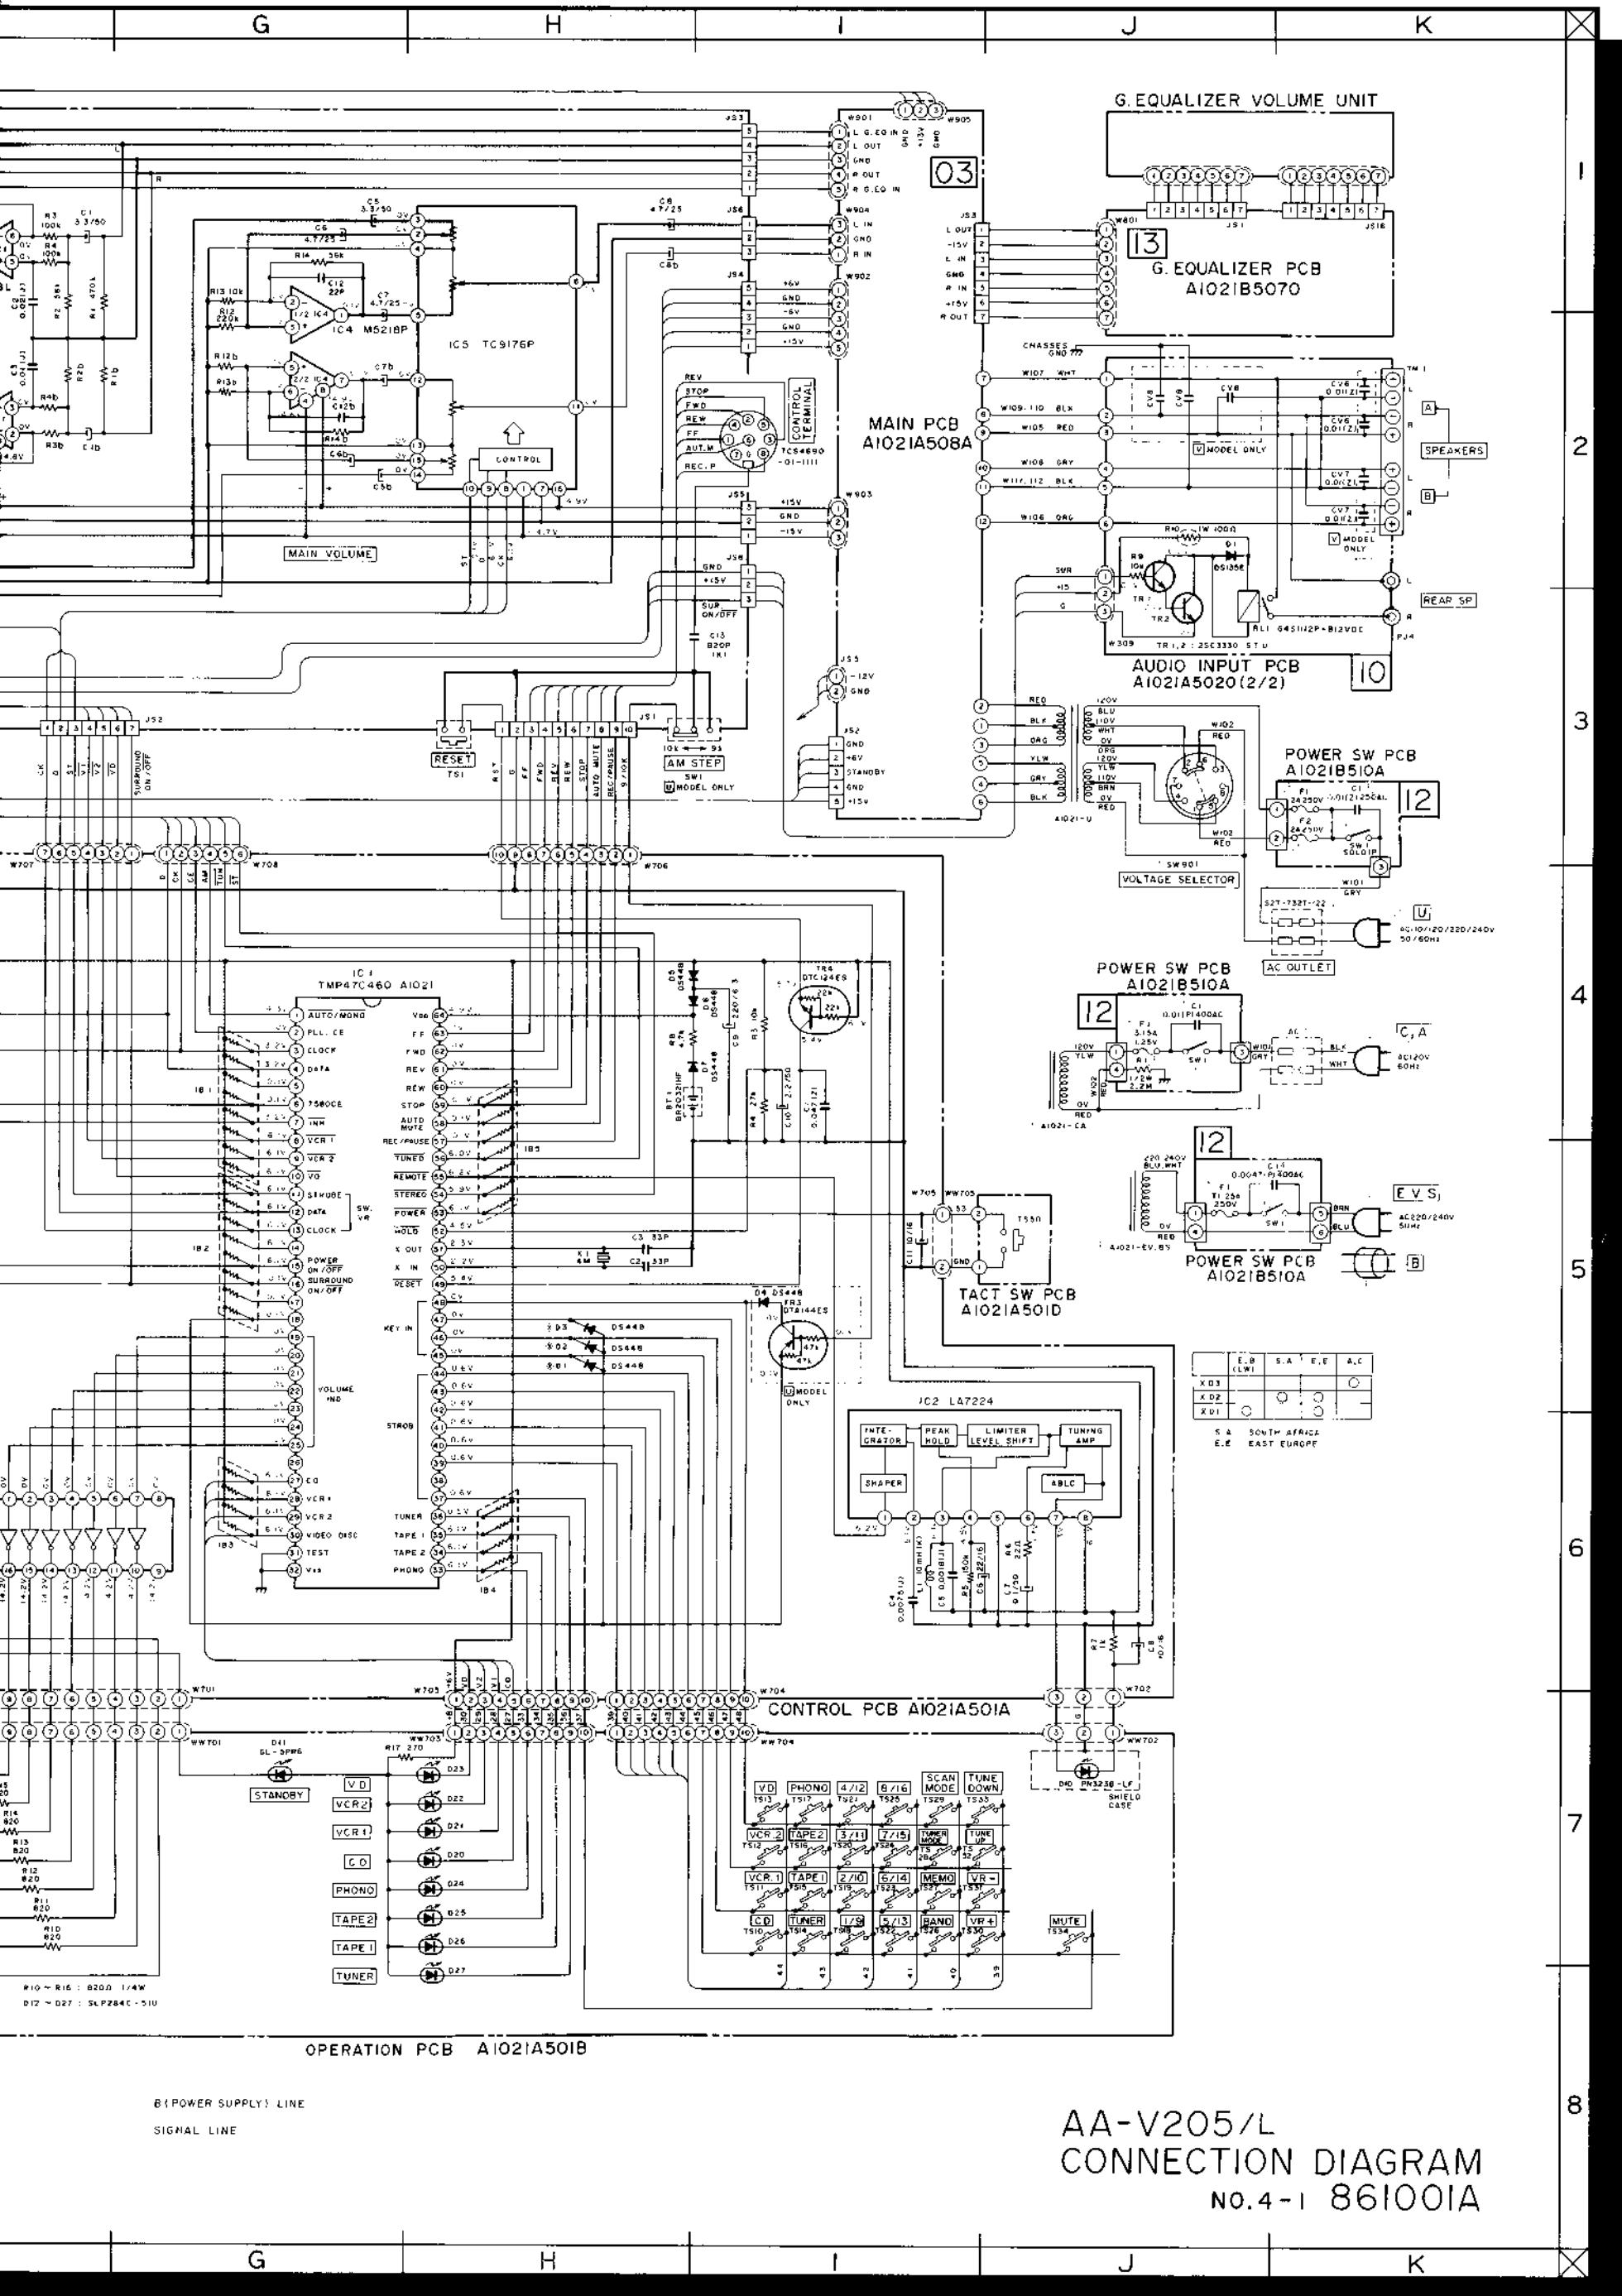

B = NPN TRANSISTOR

TR1, TR2 --- 2SC3330



\* INDICATED BY BROKEN LINE

MODEL ONLY


2SC3330




### AUDIO INPUT PCB AI021A502D

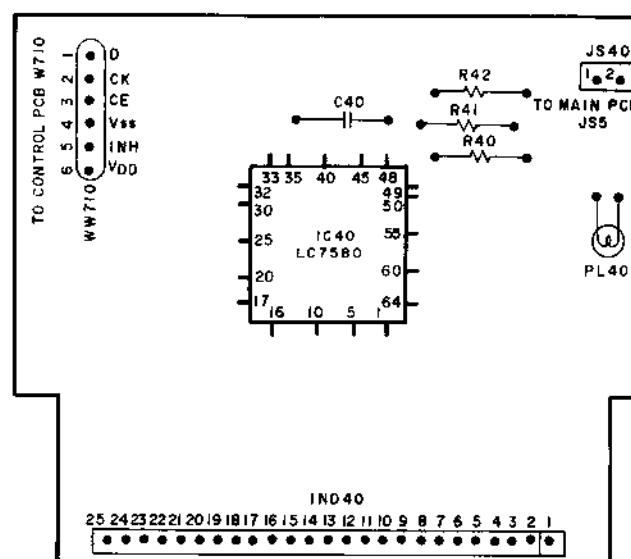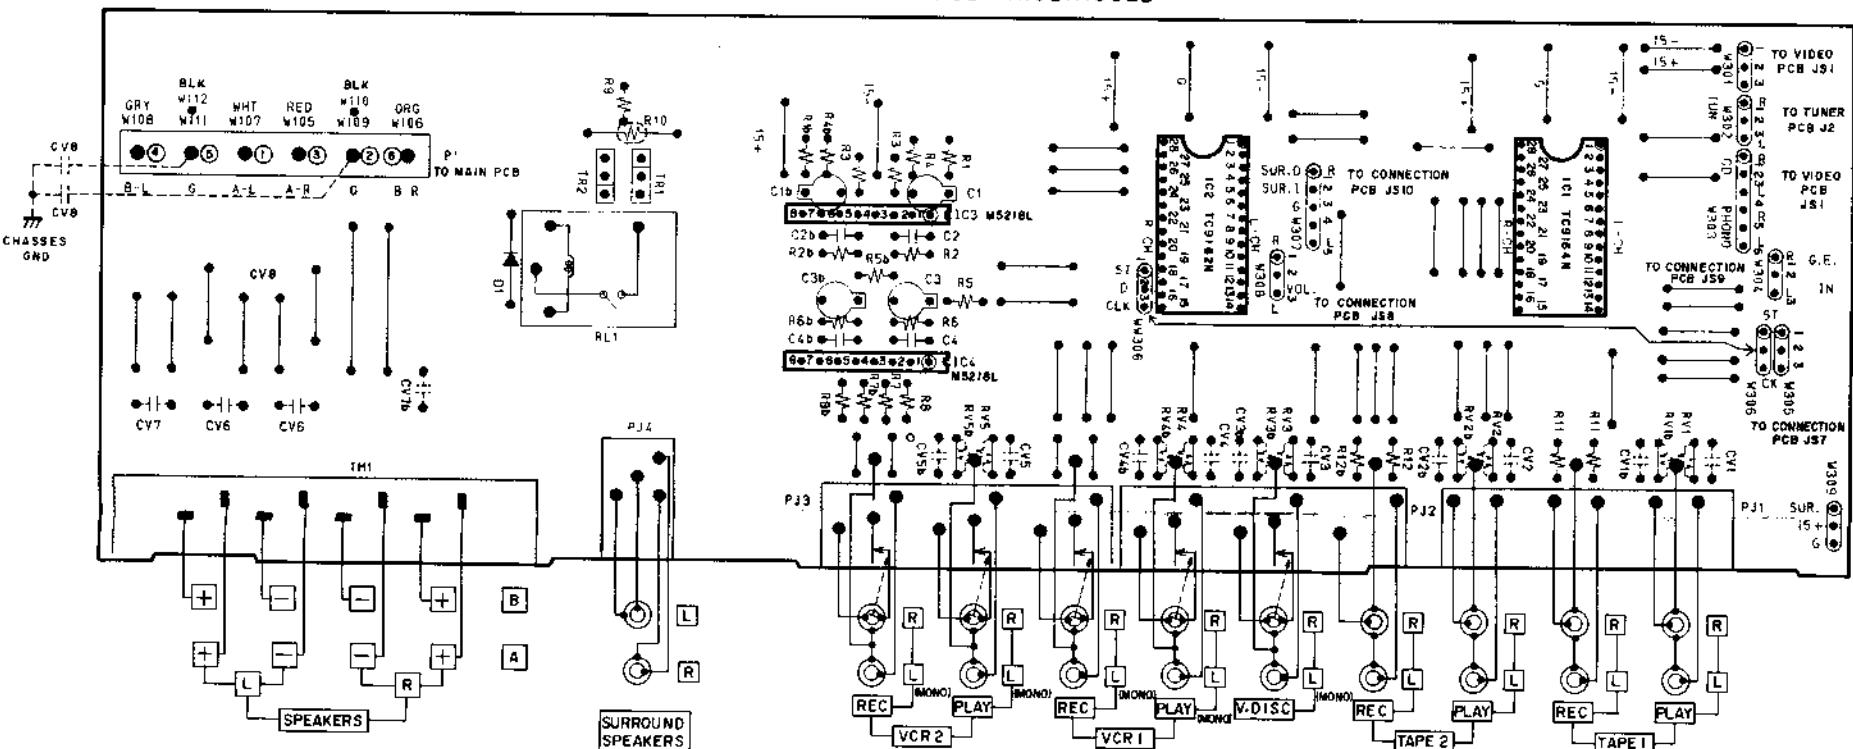

IND PCB AI021A501C

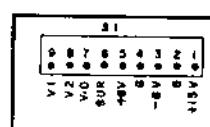

JUMPER PCB AI021A506B

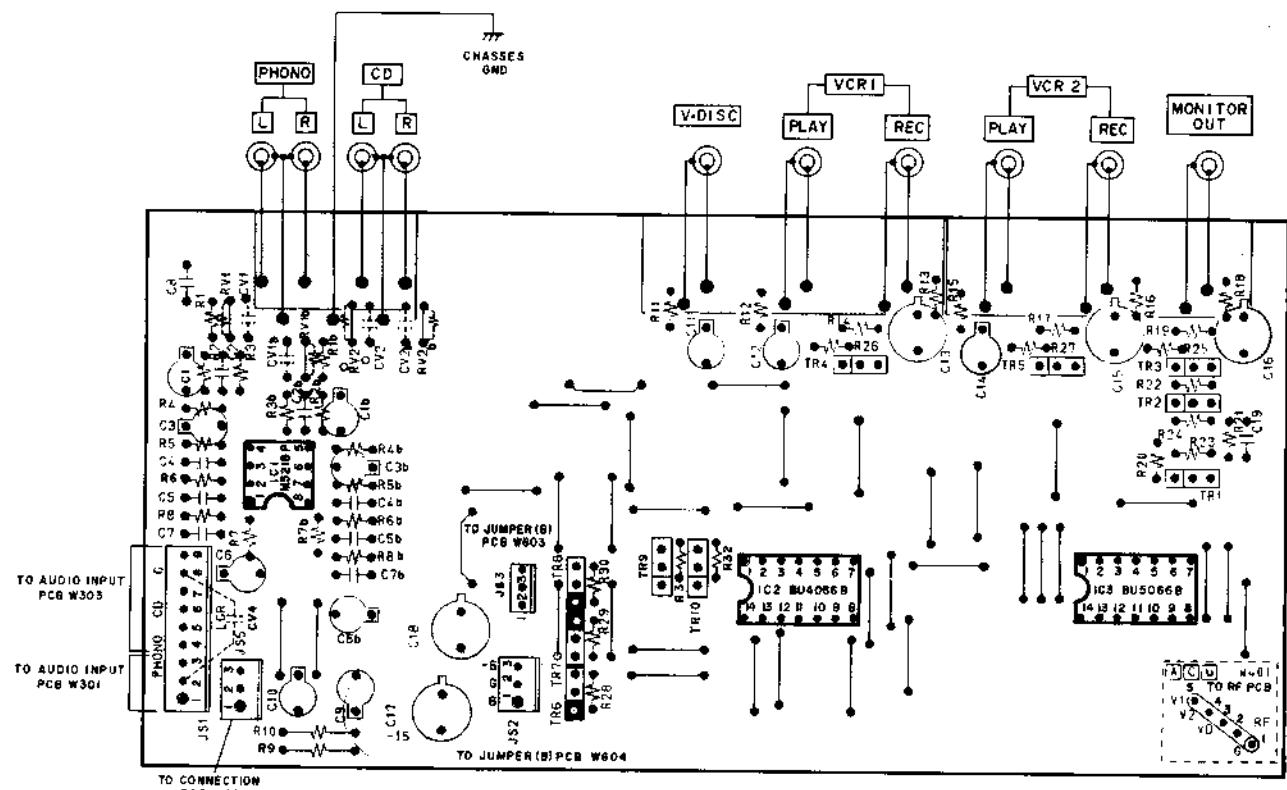

VIDEO PCB AI021B5030


\* INDICATED BY BROKEN LINE  MODEL ONLY

B = PNP TRANSISTOR  
B = NPN TRANSISTOR


TR1 to 5 --- 2SC3330  
TR6 to 8 --- DTA114TS  
TR9,10 --- DTC114TS


2SC3330

DTA114TS  
DTC114TS

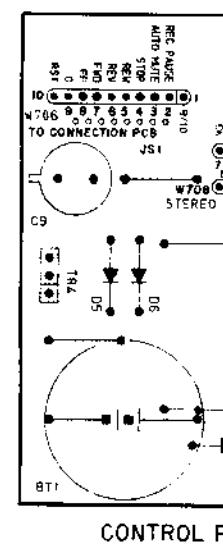


CONTROL F

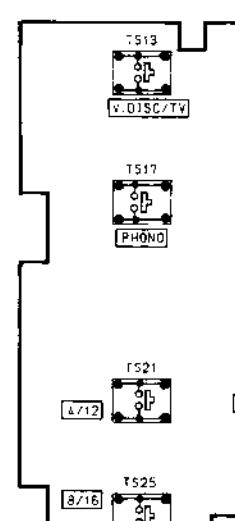


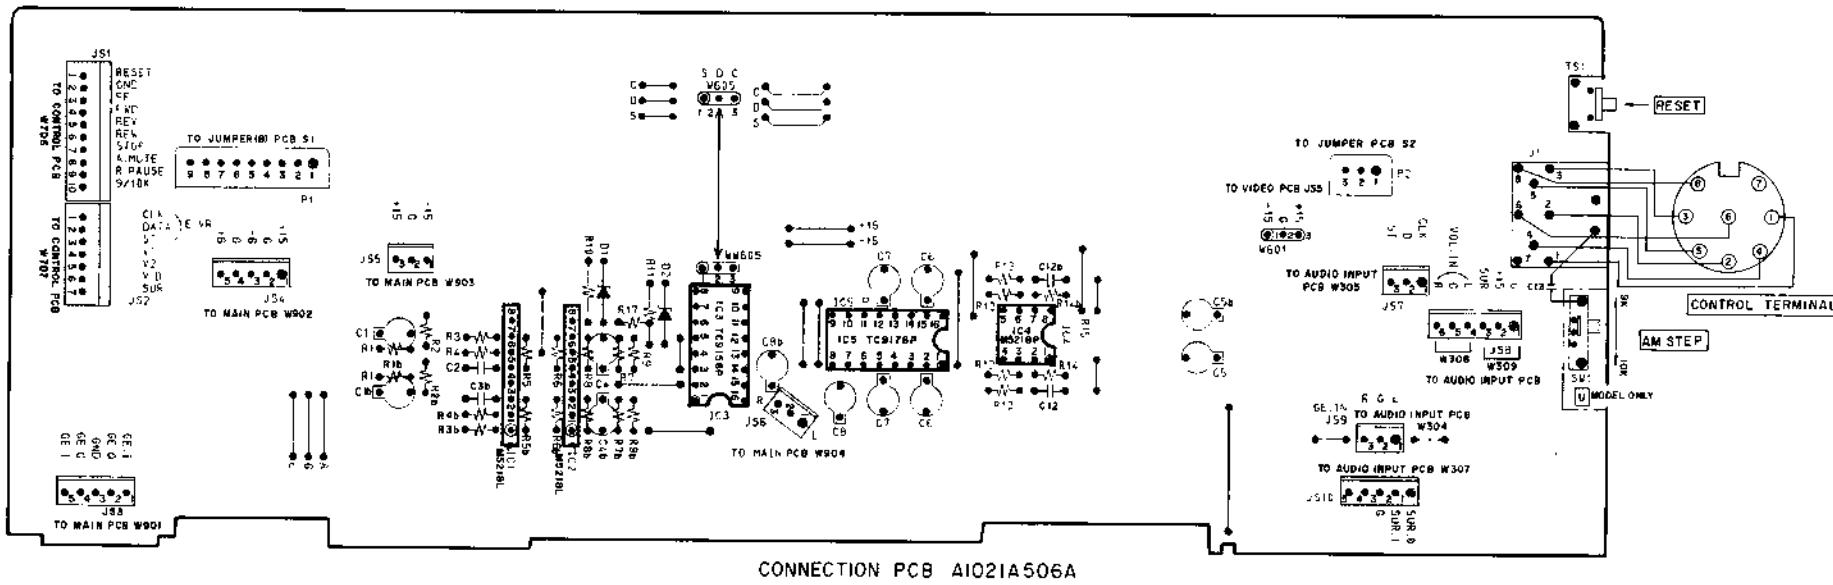


CONNECTION PCB AI021A506A

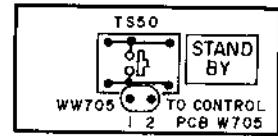


TACT SW PCB AI021A501D

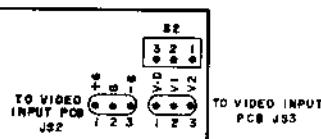

IA506B

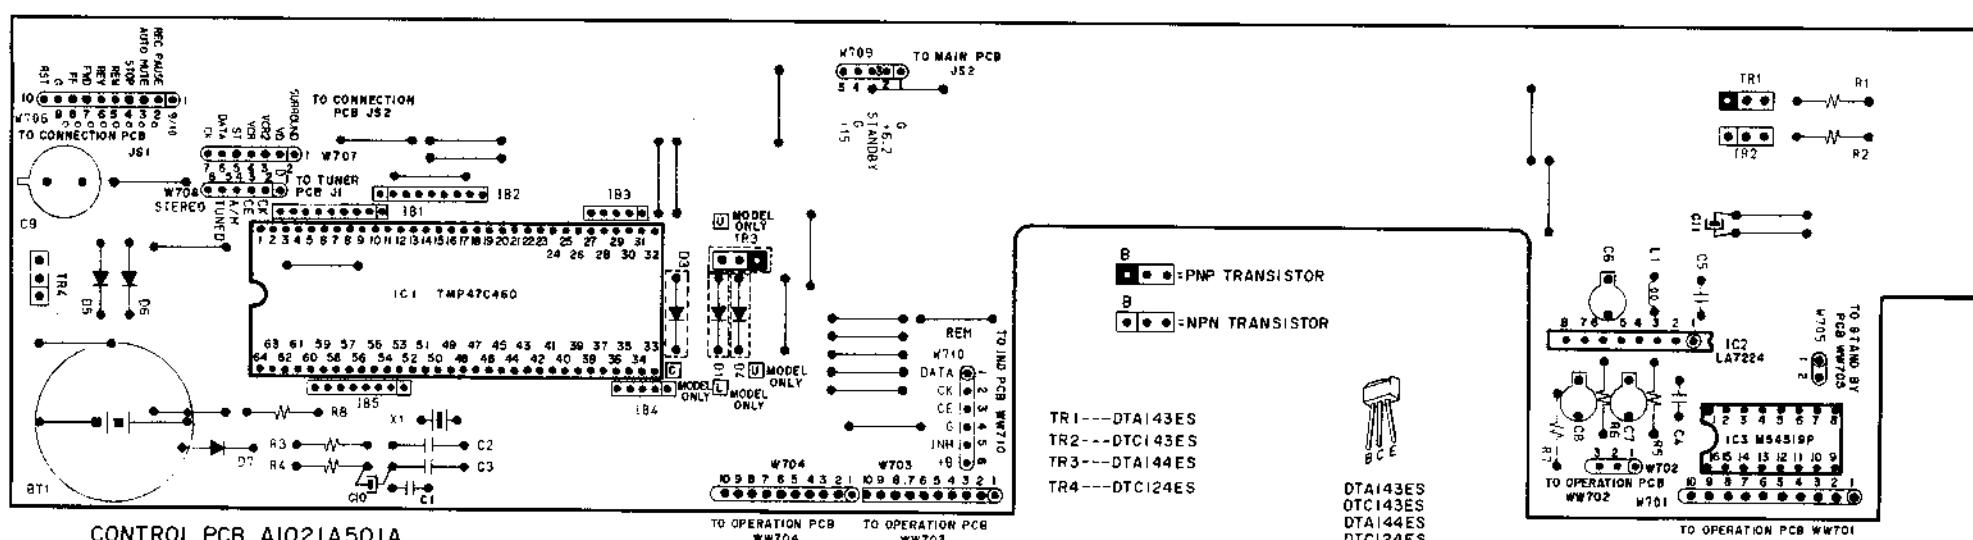


CONTROL PCB AI021A501A

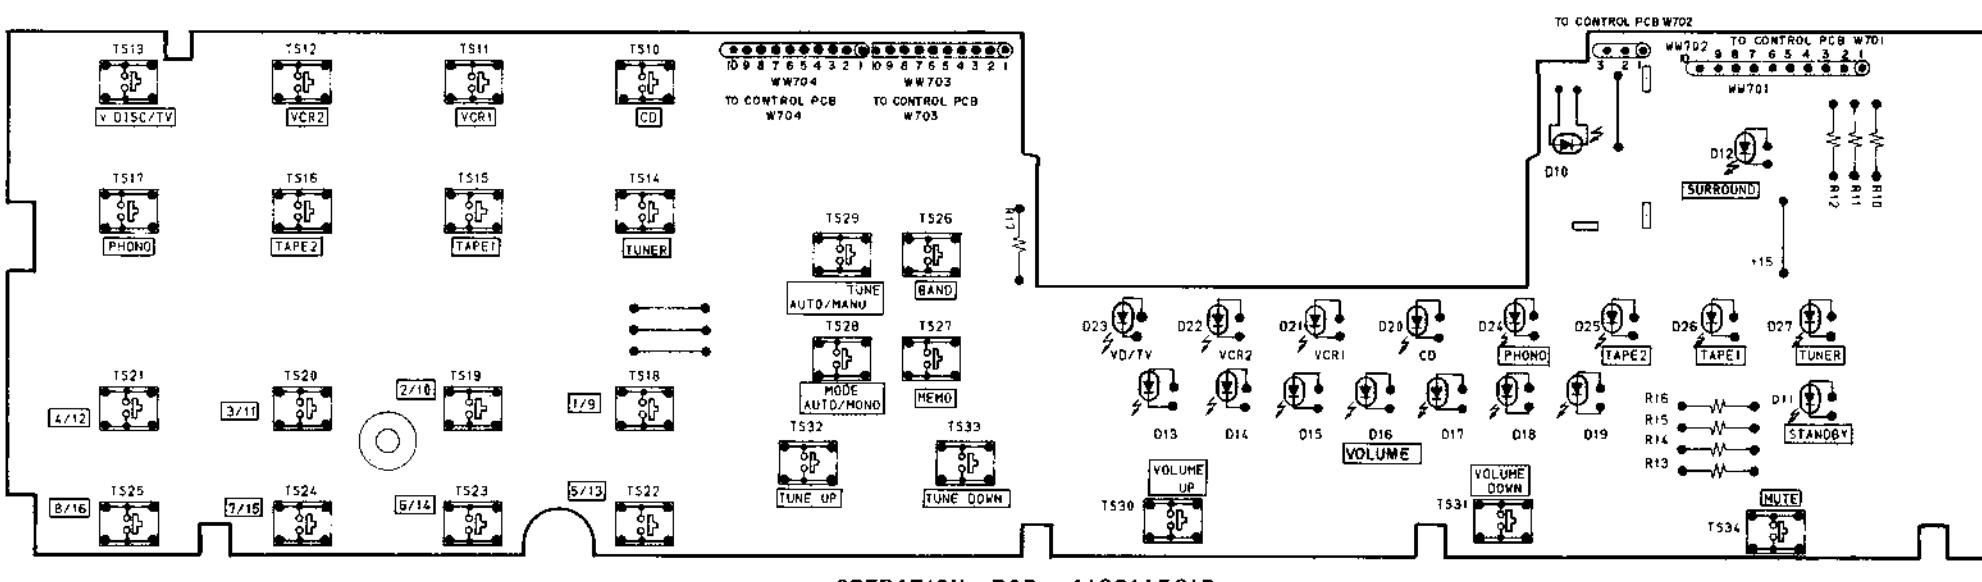


OPERATION PCB AI021A501B

AA - V205


## EQUALIZER VR BLOCK

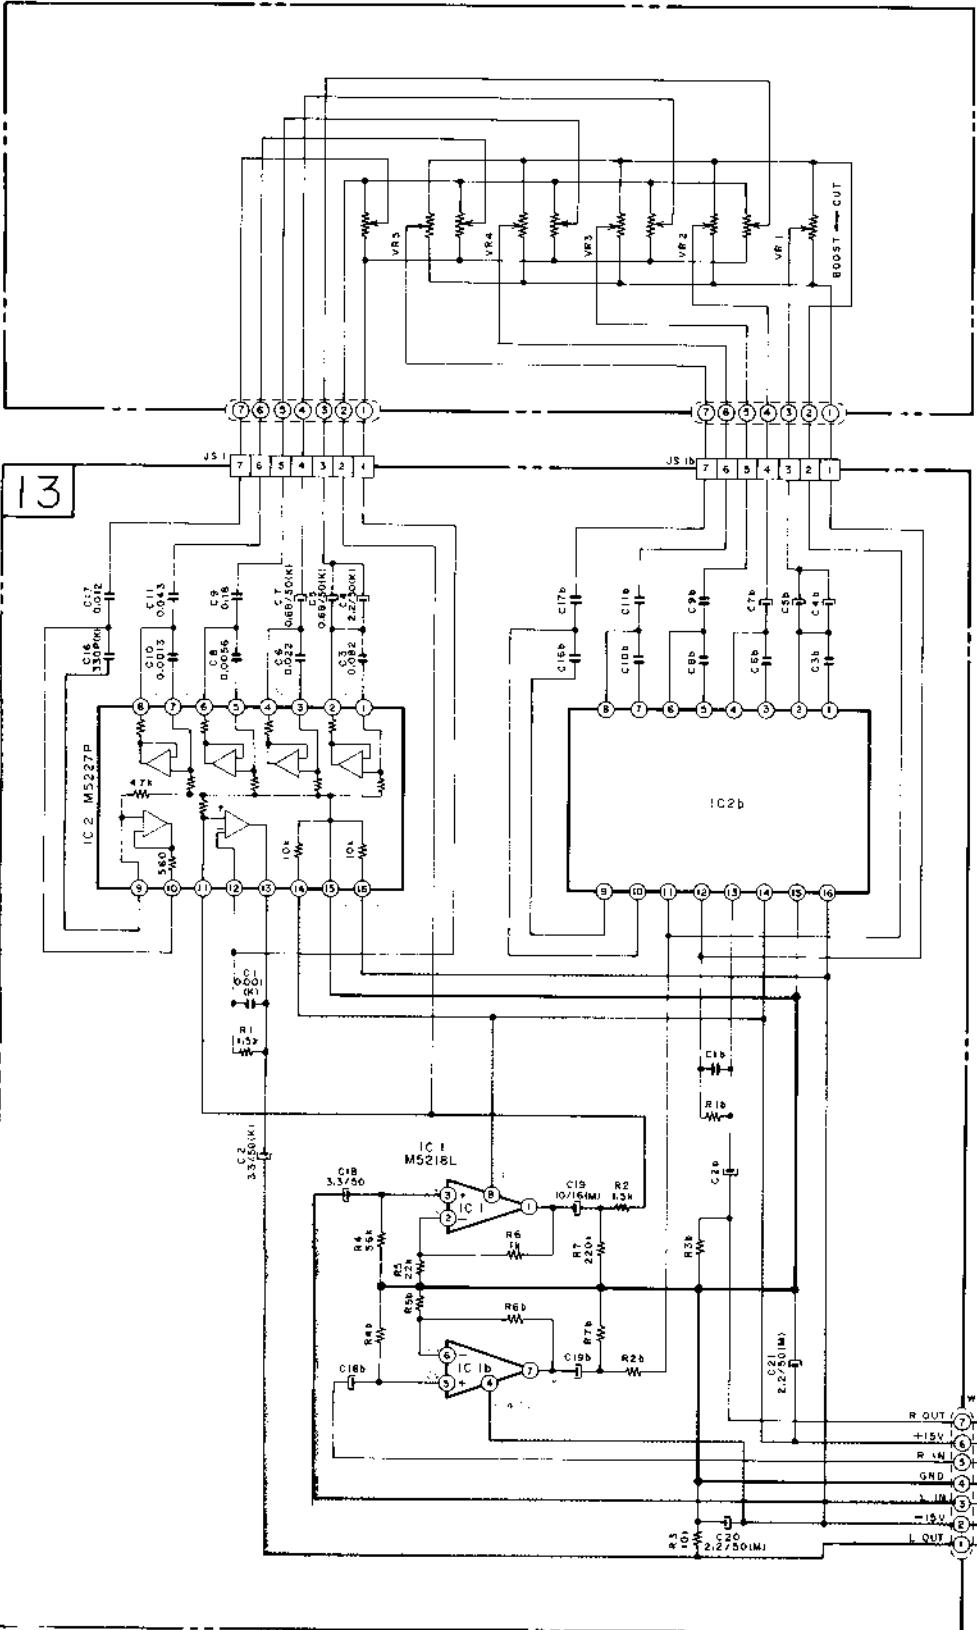




G. EQUALIZER PCB A1021B5070

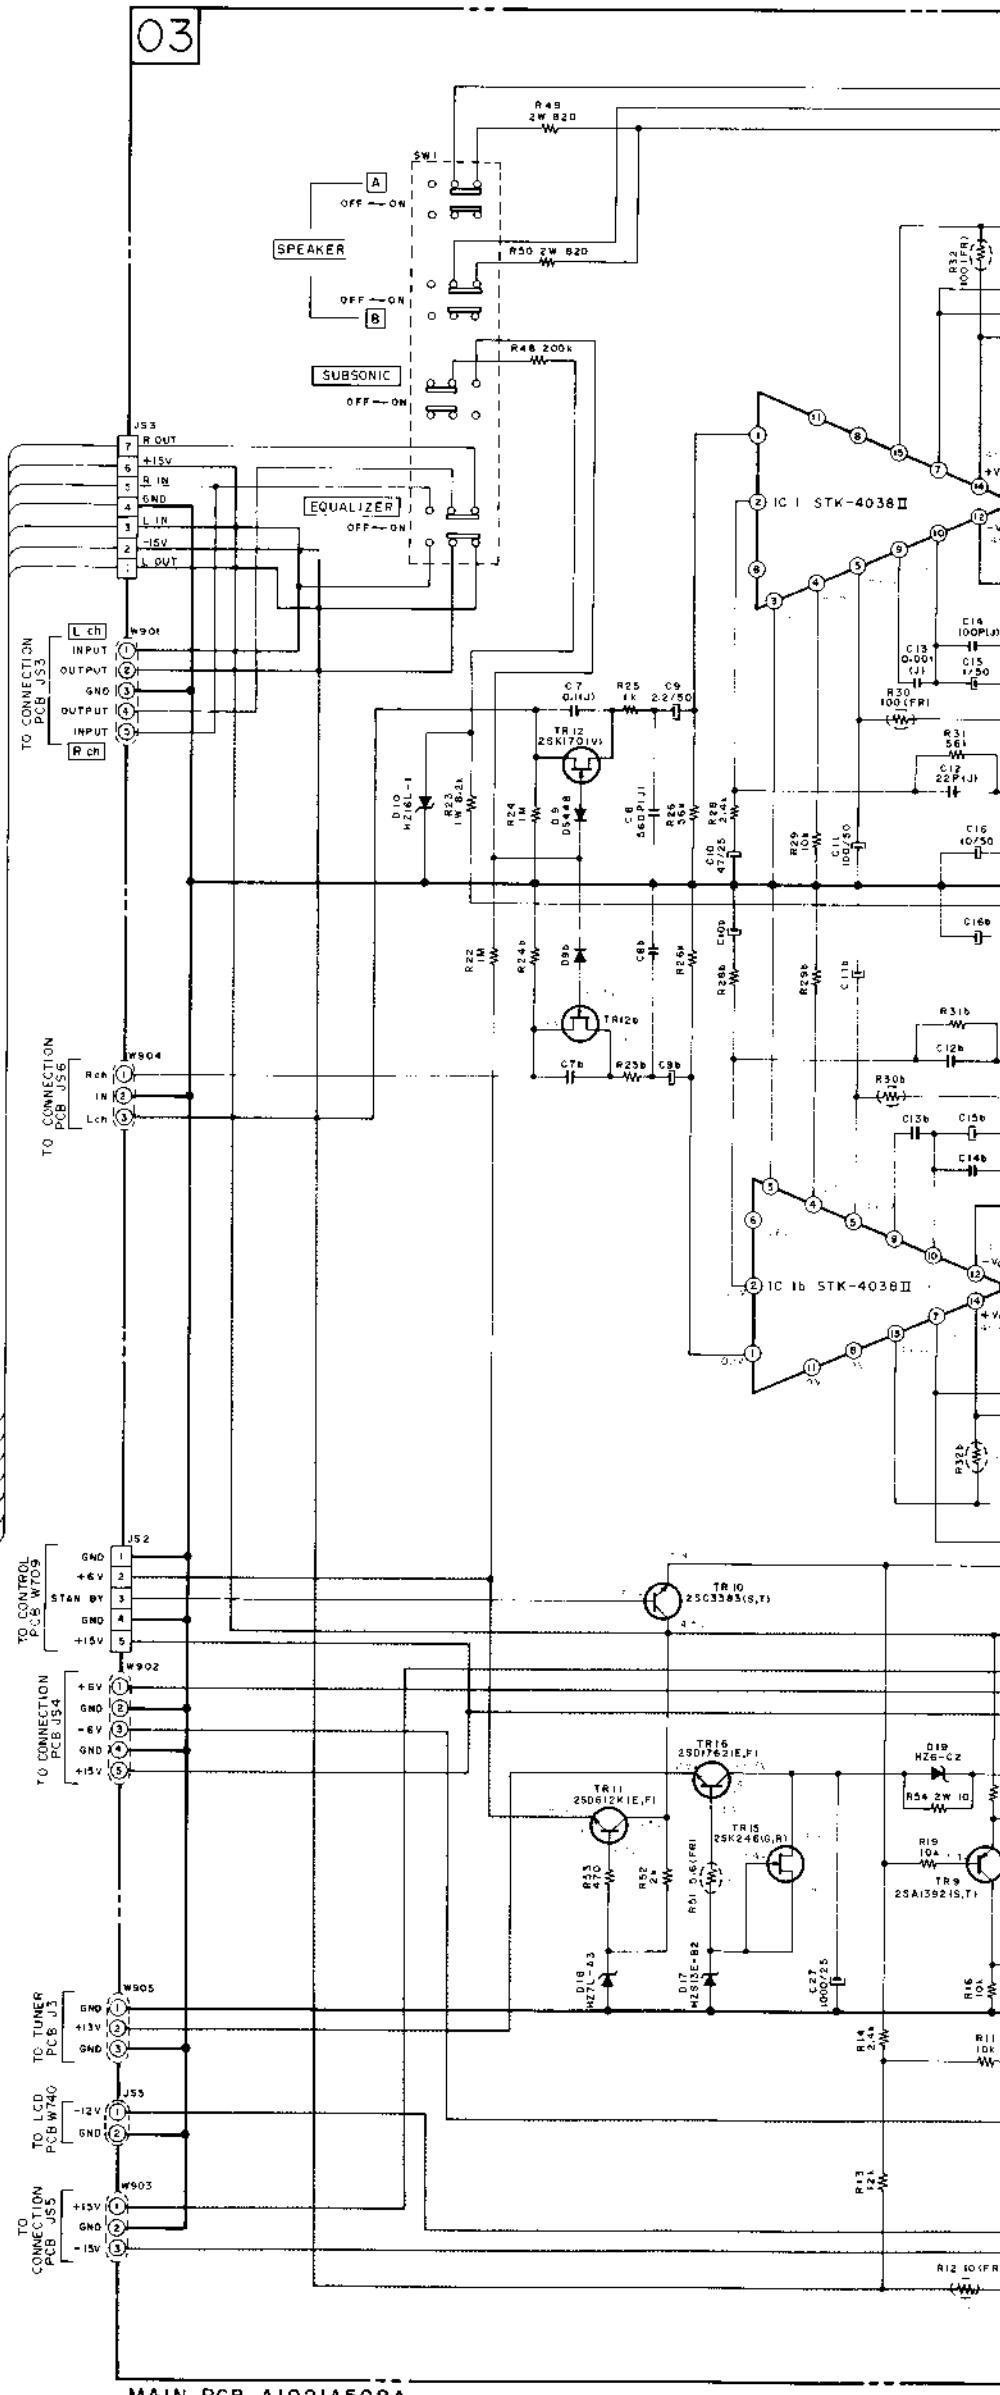B (POWER SUPPLY) LINE  
SIGNAL LINE

MAIN PCB A1021A508A

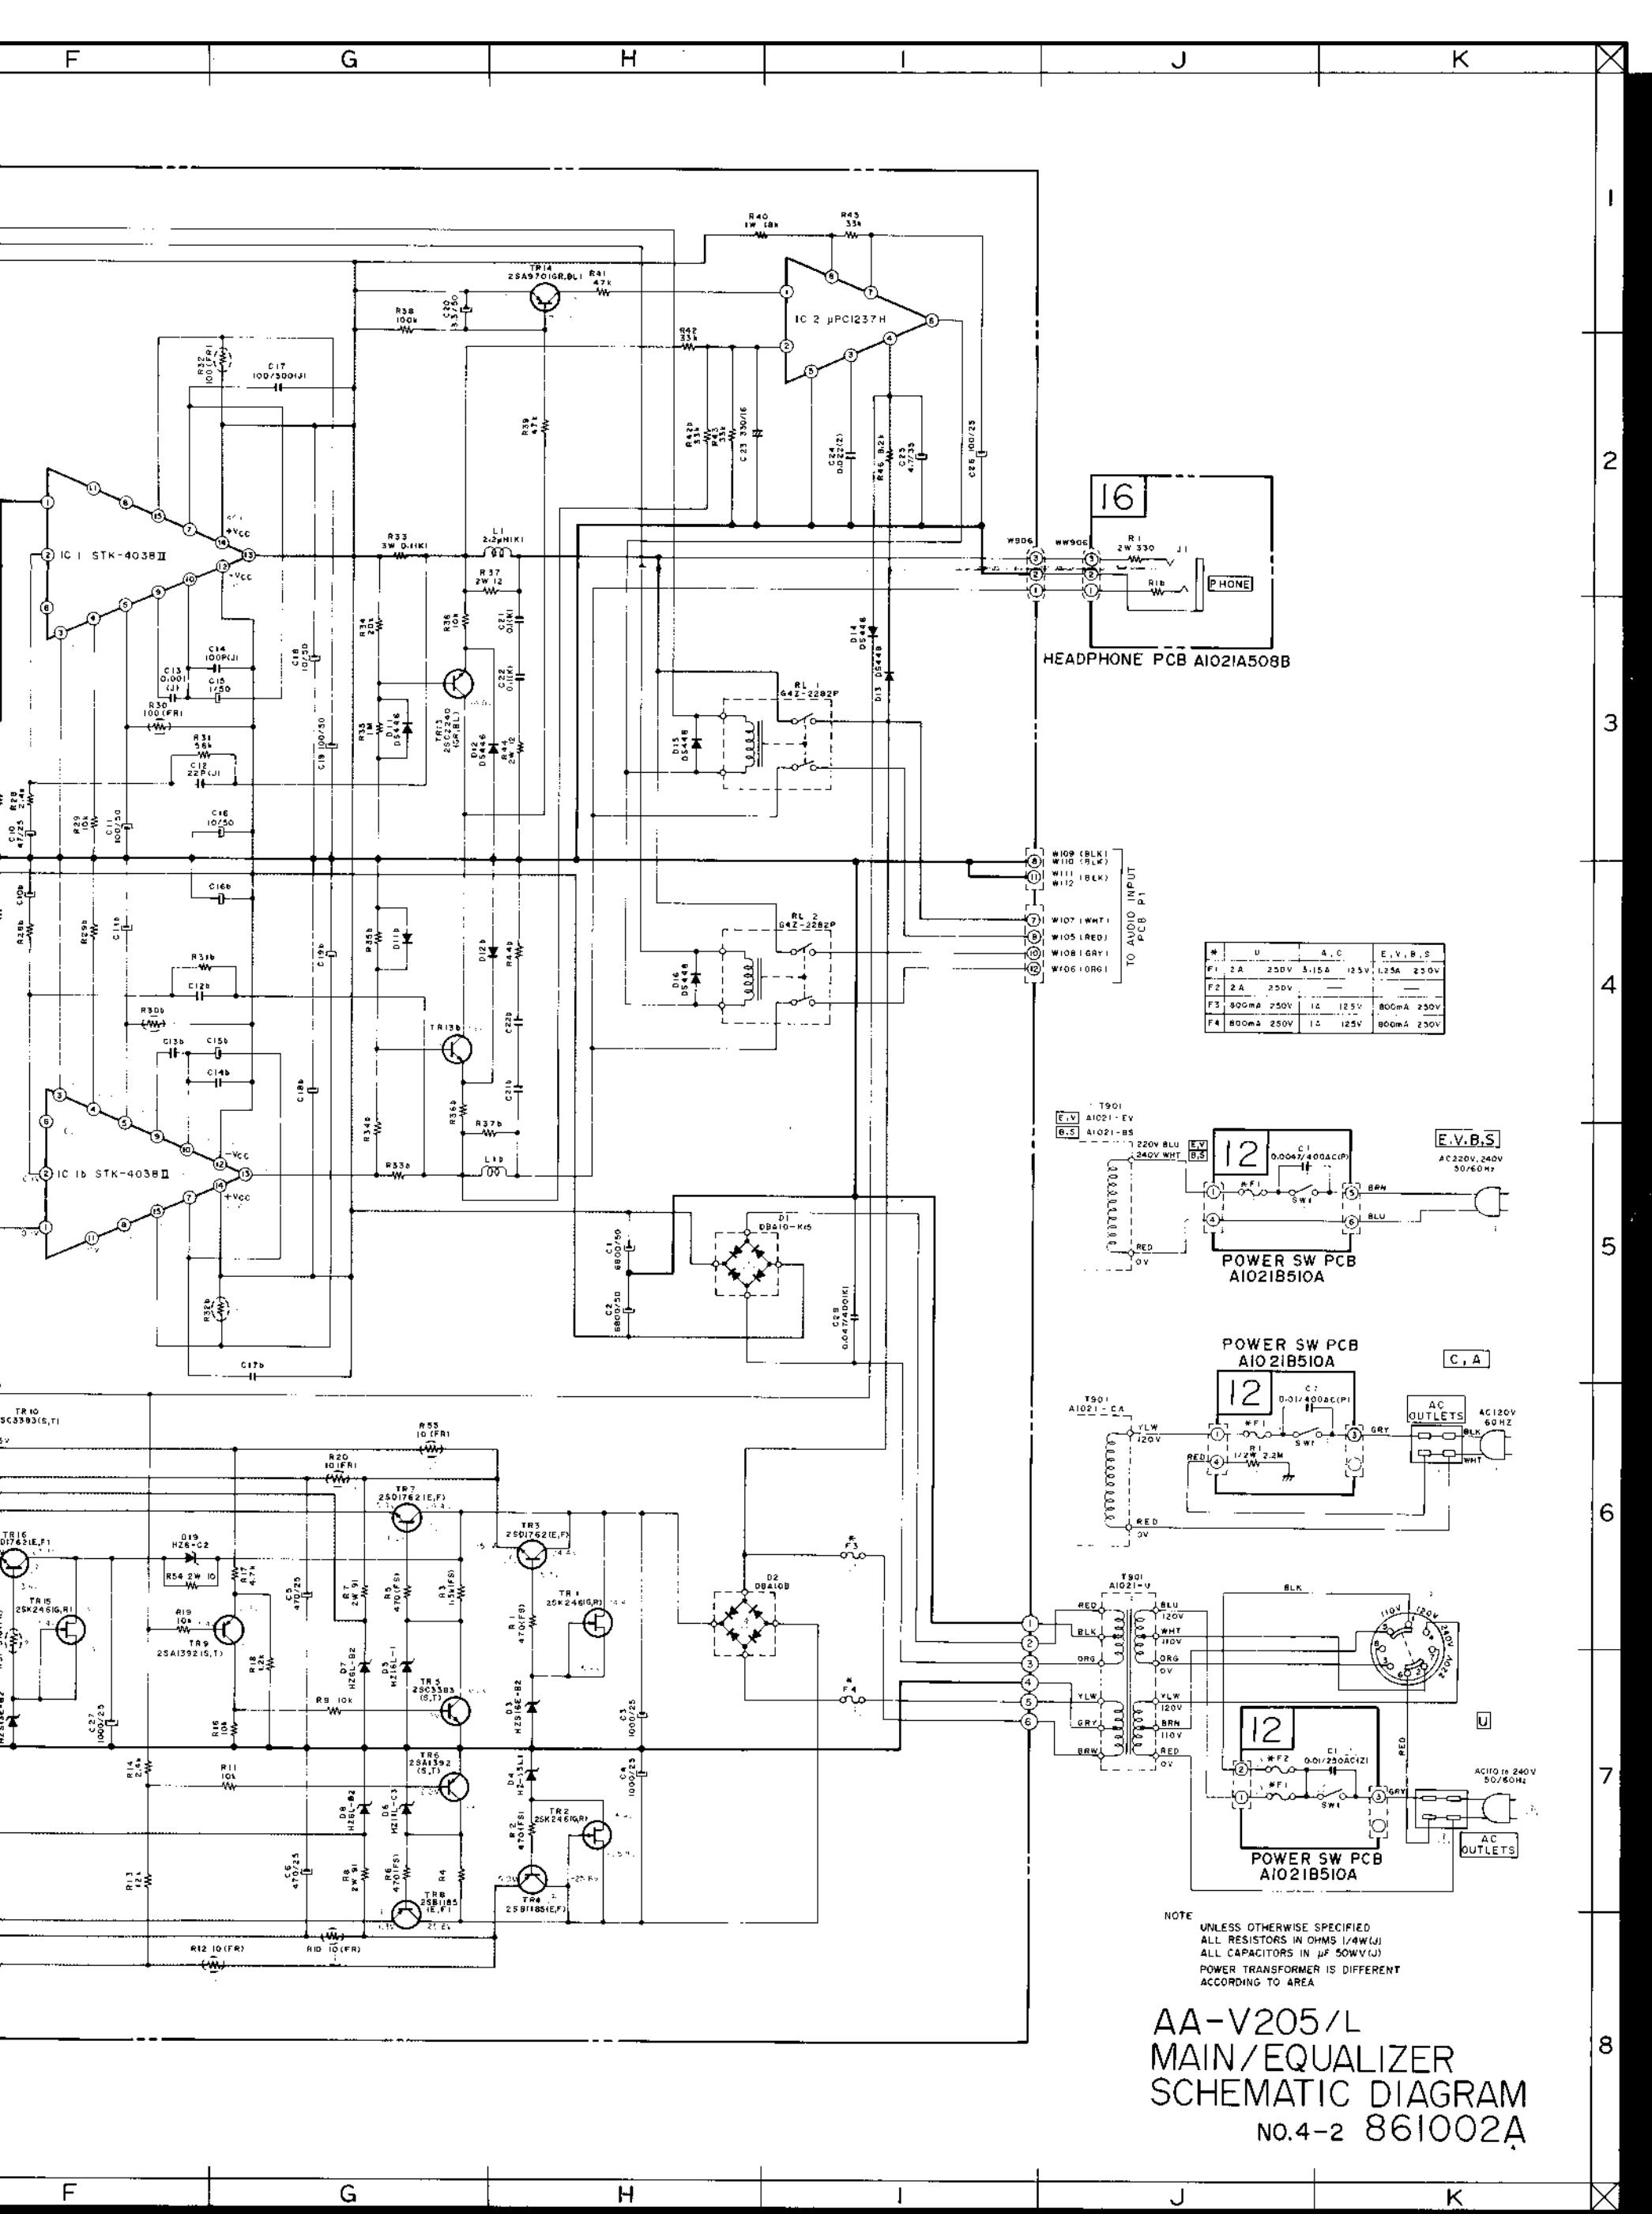


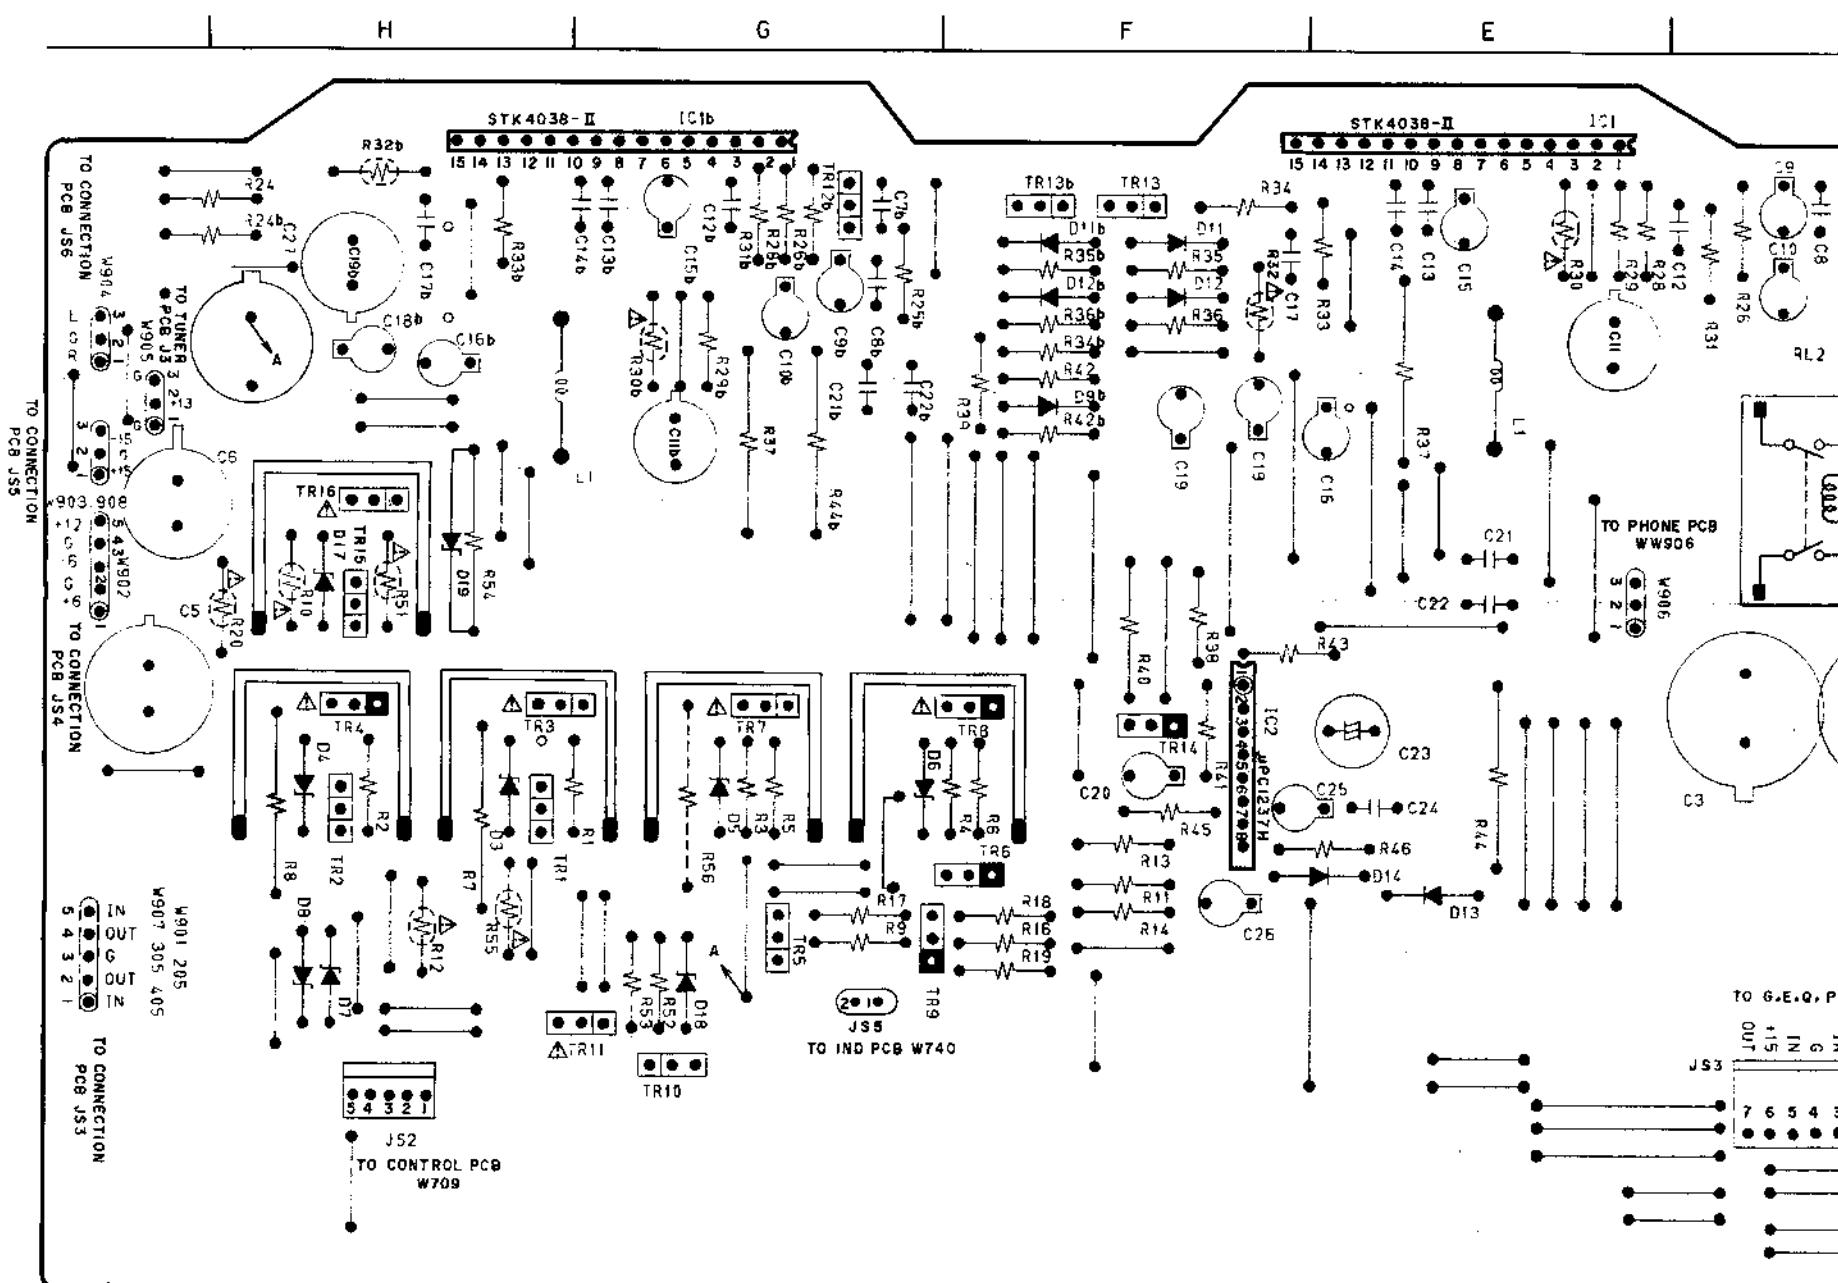


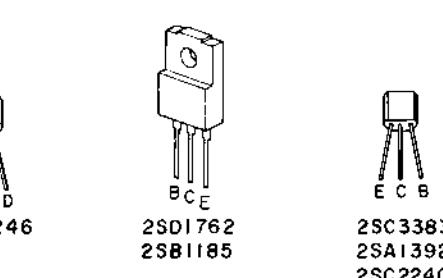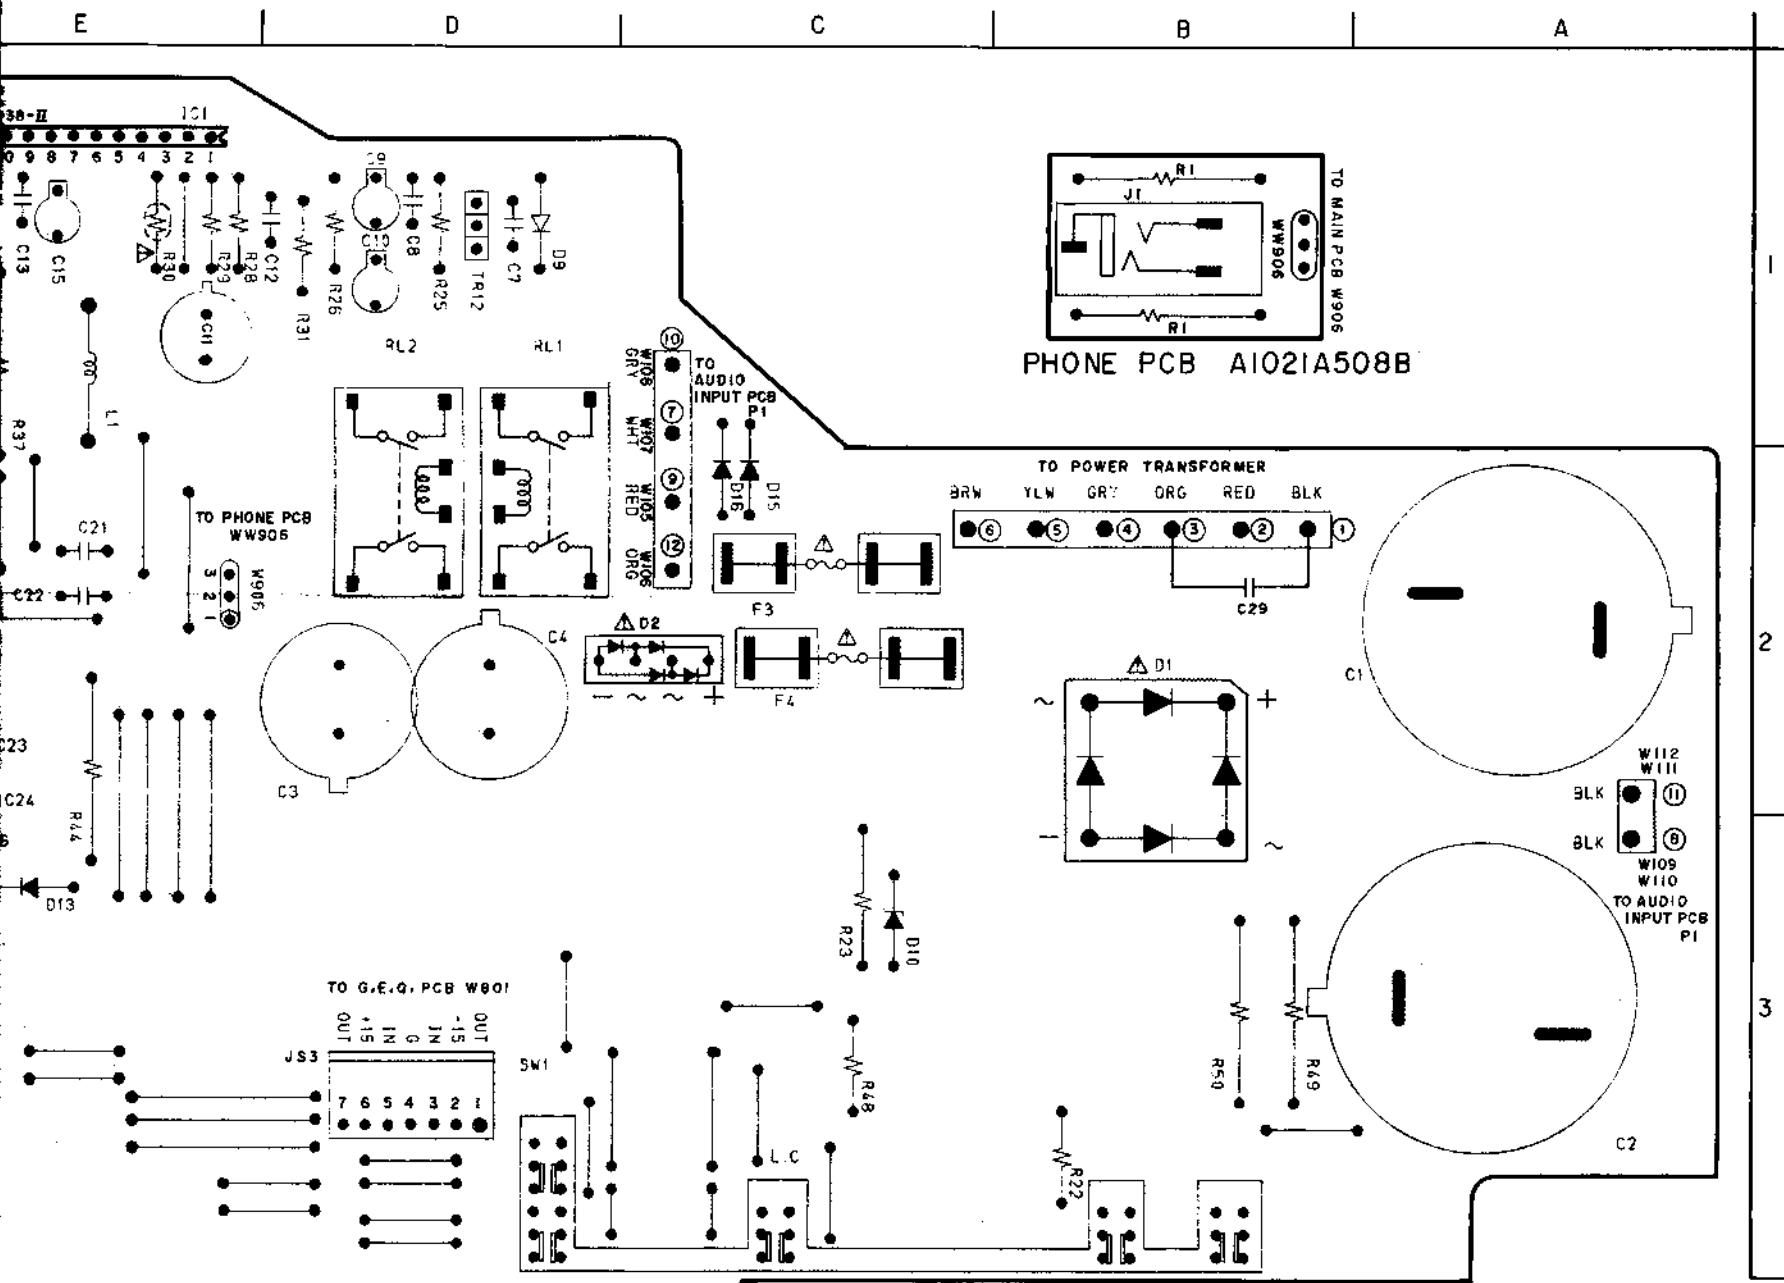

WARNING:  $\Delta$  INDICATES SAFETY CRITICAL COMPONENTS FOR CONTINUED SAFETY,  
REPLACE SAFETY CRITICAL COMPONENTS ONLY WITH MANUFACTURER'S  
RECOMMENDED PARTS

Avertissement:  $\Delta$  indique les composants critiques de sécurité  
pour maintenir le degré de sécurité de l'appareil.  
Ne remplacer que des pièces recommandées par le fabricant




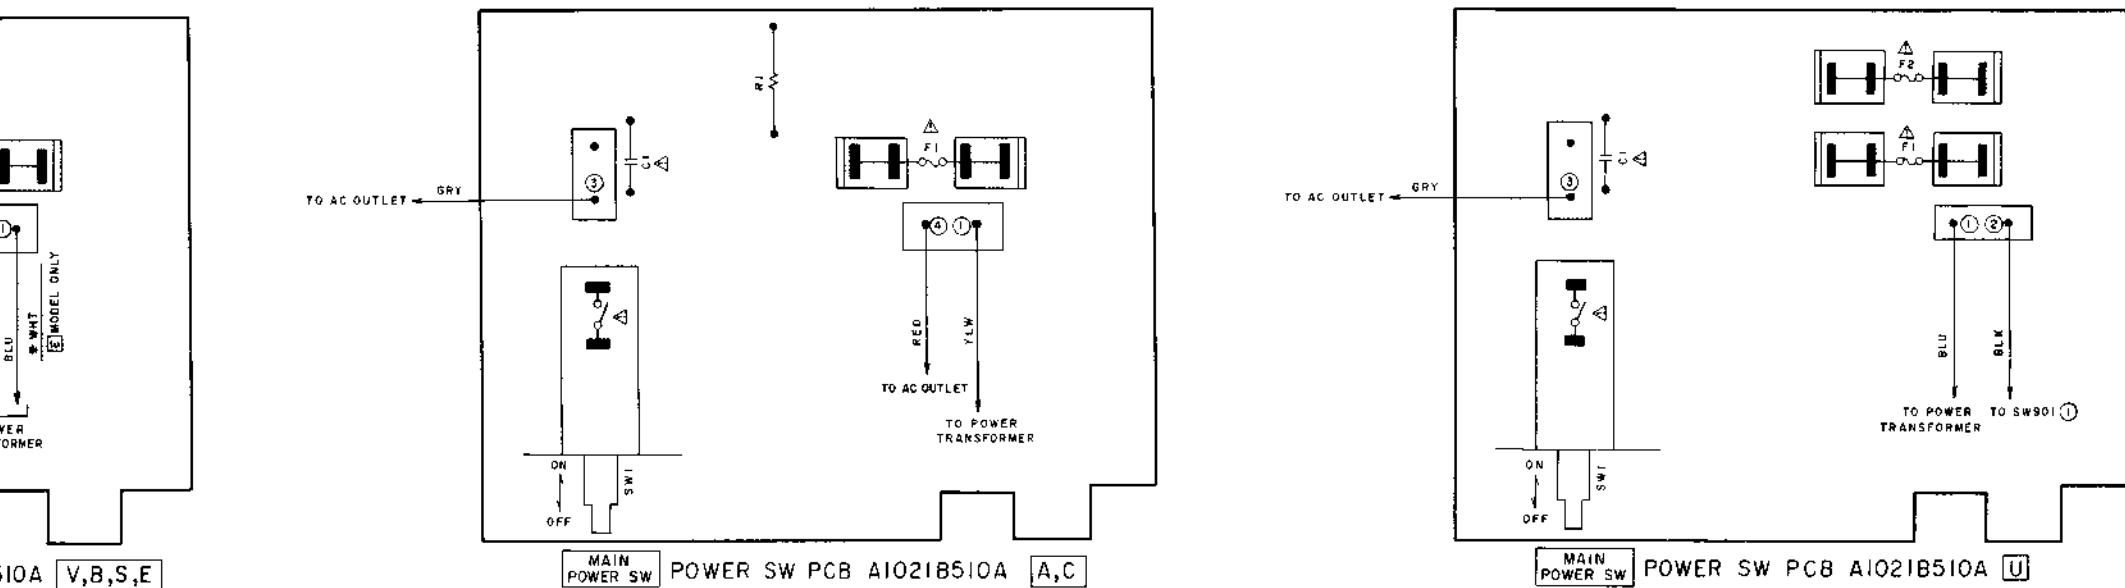


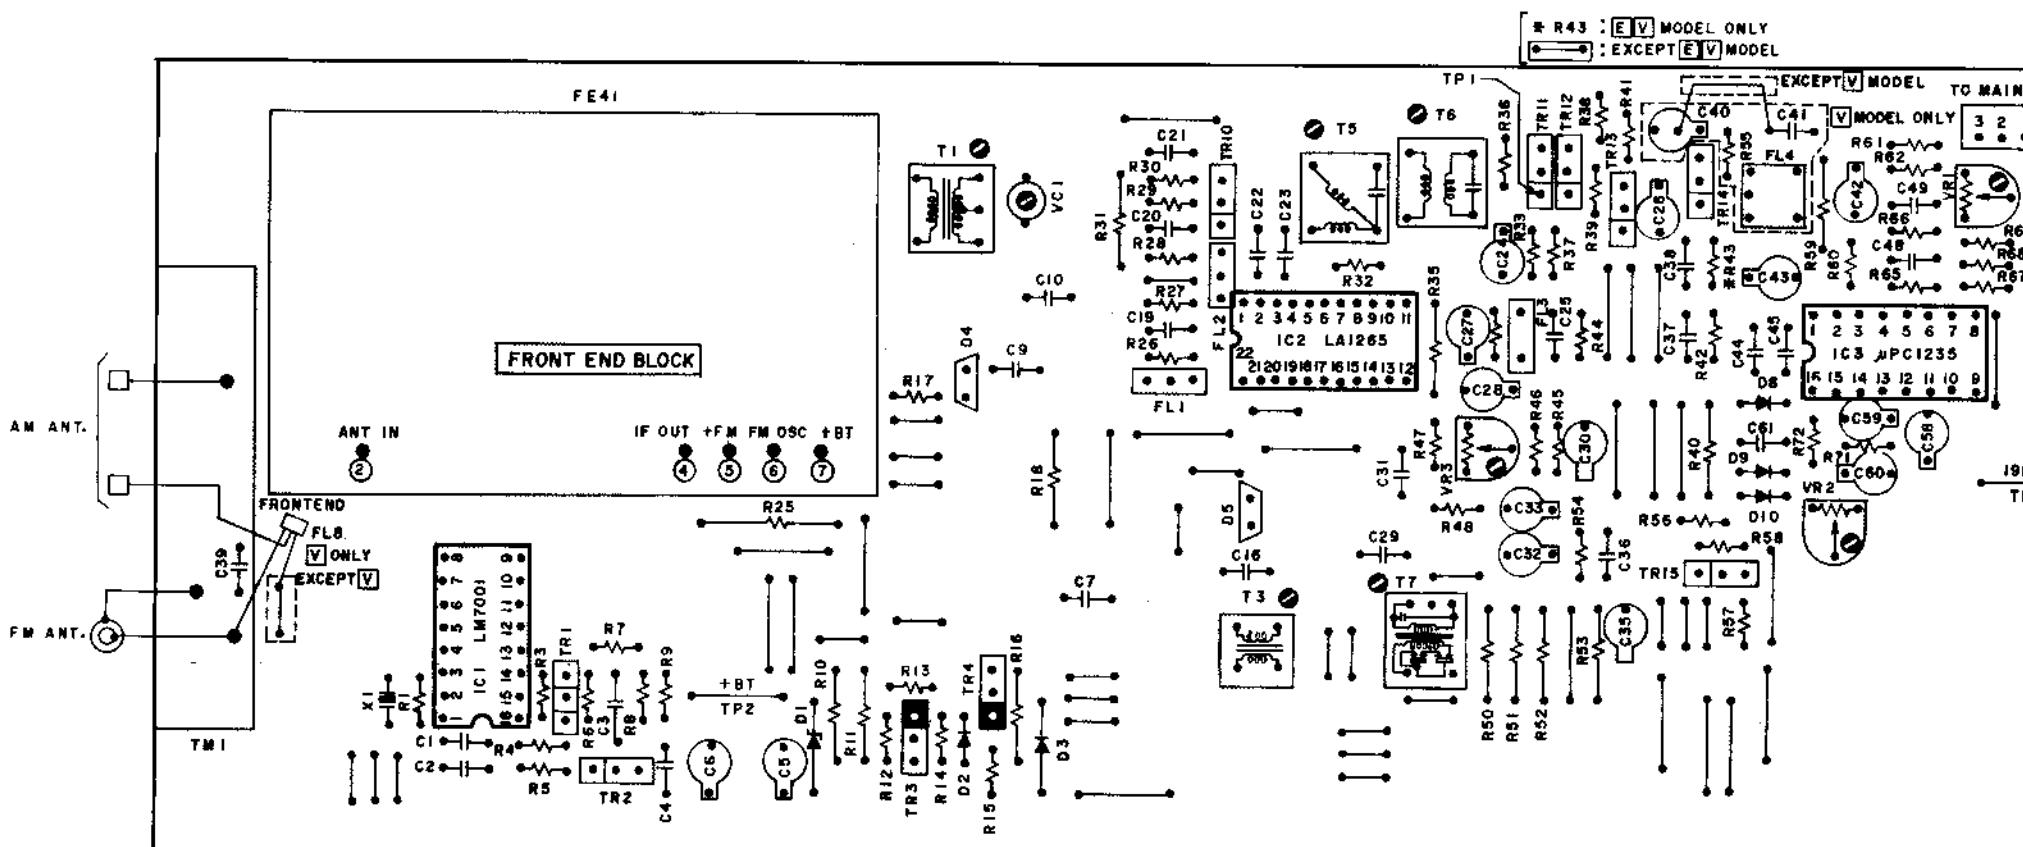

TUNER PCB A1

B  
■●●=PNP TRANSISTOR  
B  
●●●=NPN TRANSISTOR  
S G D  
●●●=FET




TR1-----2SK246  
TR2,13,14----2SC3383  
TR3,4-----2SA1317  
TR10-----2SC930  
TR11,12----2SC603  
TR15-----DTC144WS

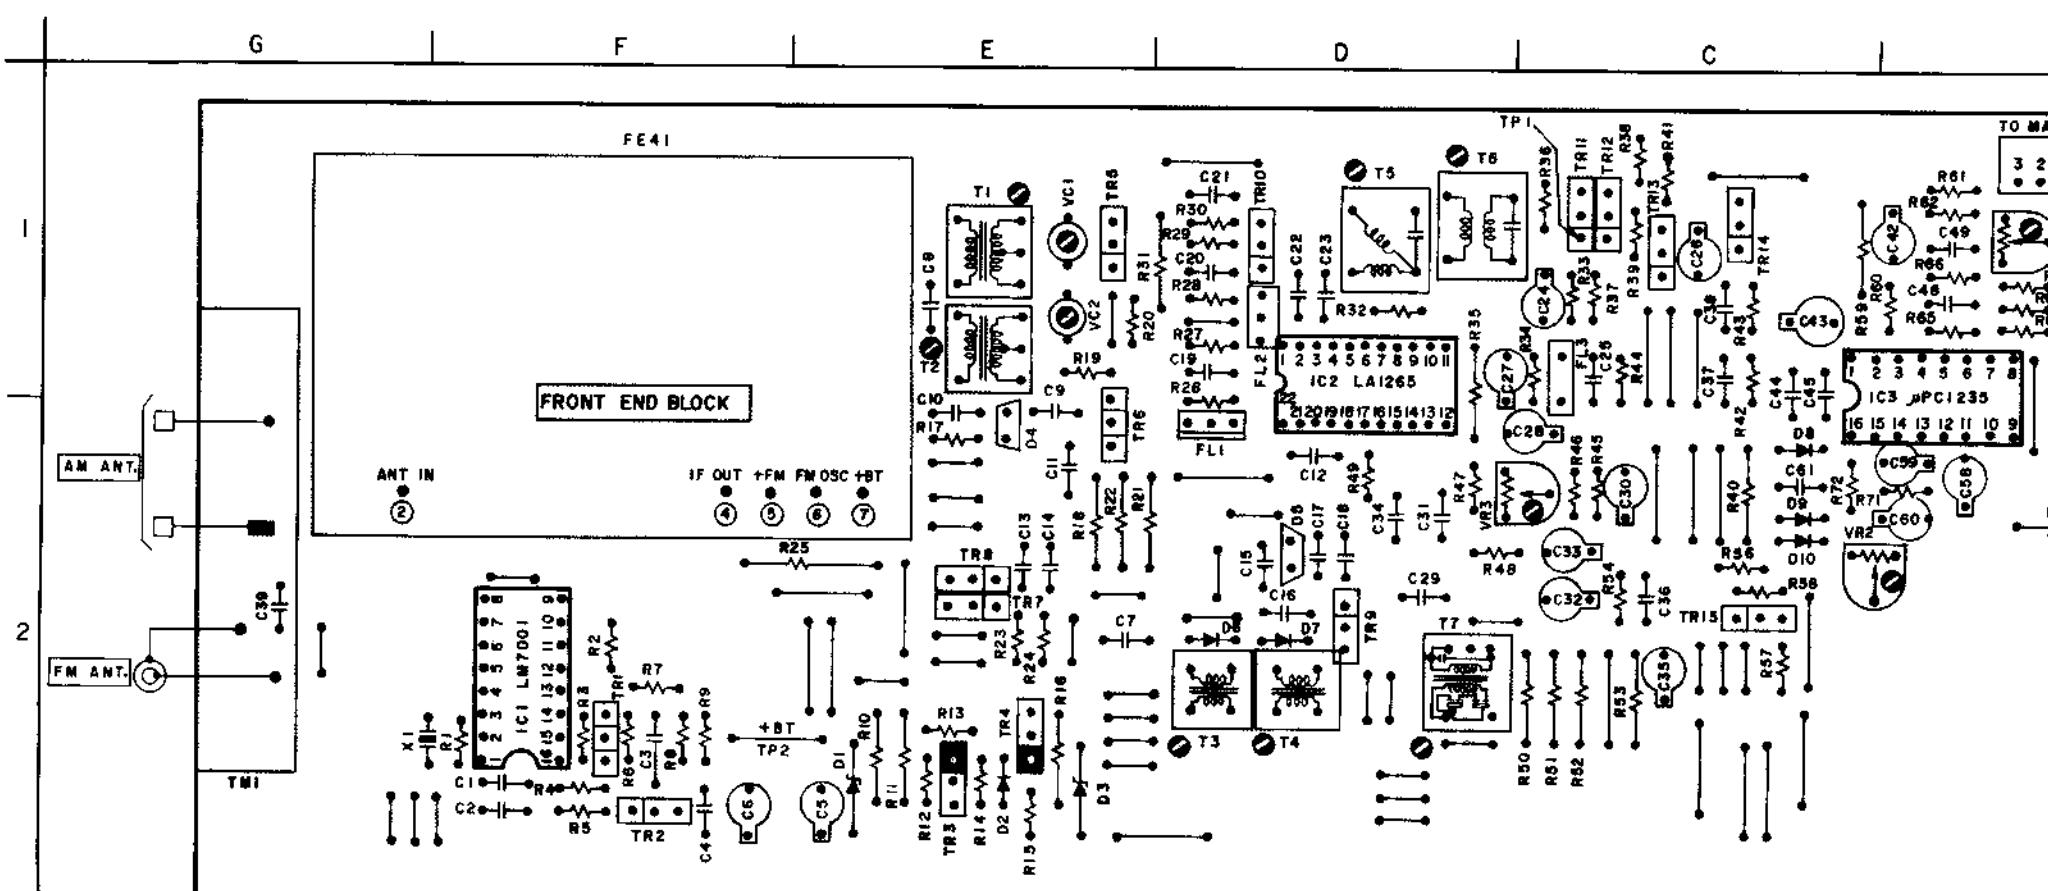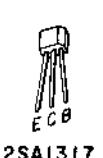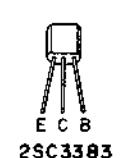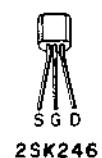


TUNER (L) PCB A1021A50


B  
■●●=PNP TRANSISTOR  
B  
●●●=NPN TRANSISTOR  
S G D  
●●●=FET  
TR1-----2SK246  
TR2,13,14----2SC3383  
TR3,4-----2SA1317  
TR5-----2SC2878  
TR6-----2SK192  
TR7,8,15----DTC144WS  
TR9-----DTC144ES  
TR10-----2SC930  
TR11,12----2SC603


LOCATION OF COMPONENTS  
IC's  
IC1---F2  
IC2---D2  
IC3---B1  
TR's  
TR1---F2  
TR2---F2  
TR3---E2  
TR4---E2  
TR5---E1  
TR6---E1  
TR7---E2  
TR8---E2  
TP1---C1  
TP2---F2  
TP3---B2

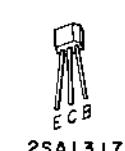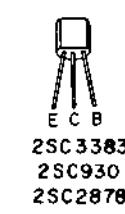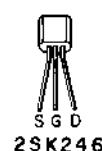

DTC144  
DTC144ES

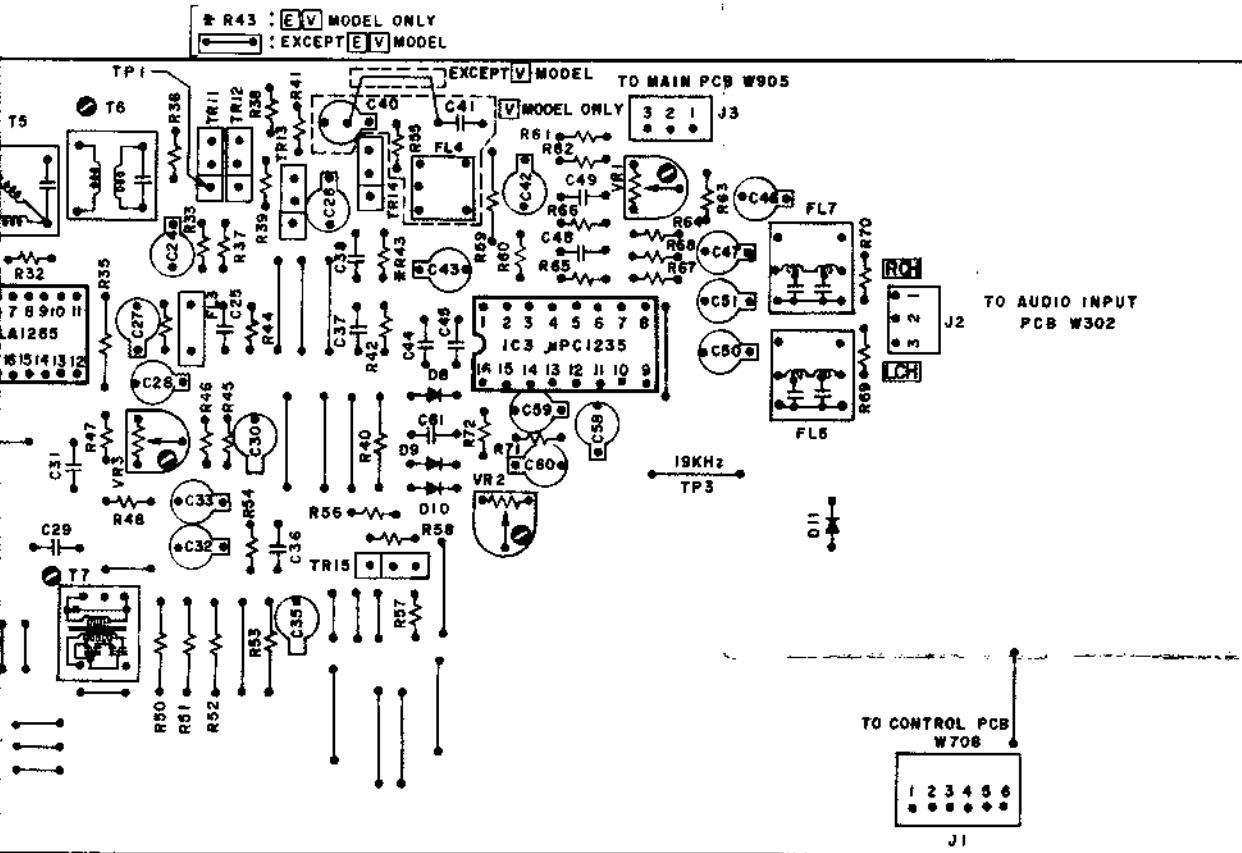

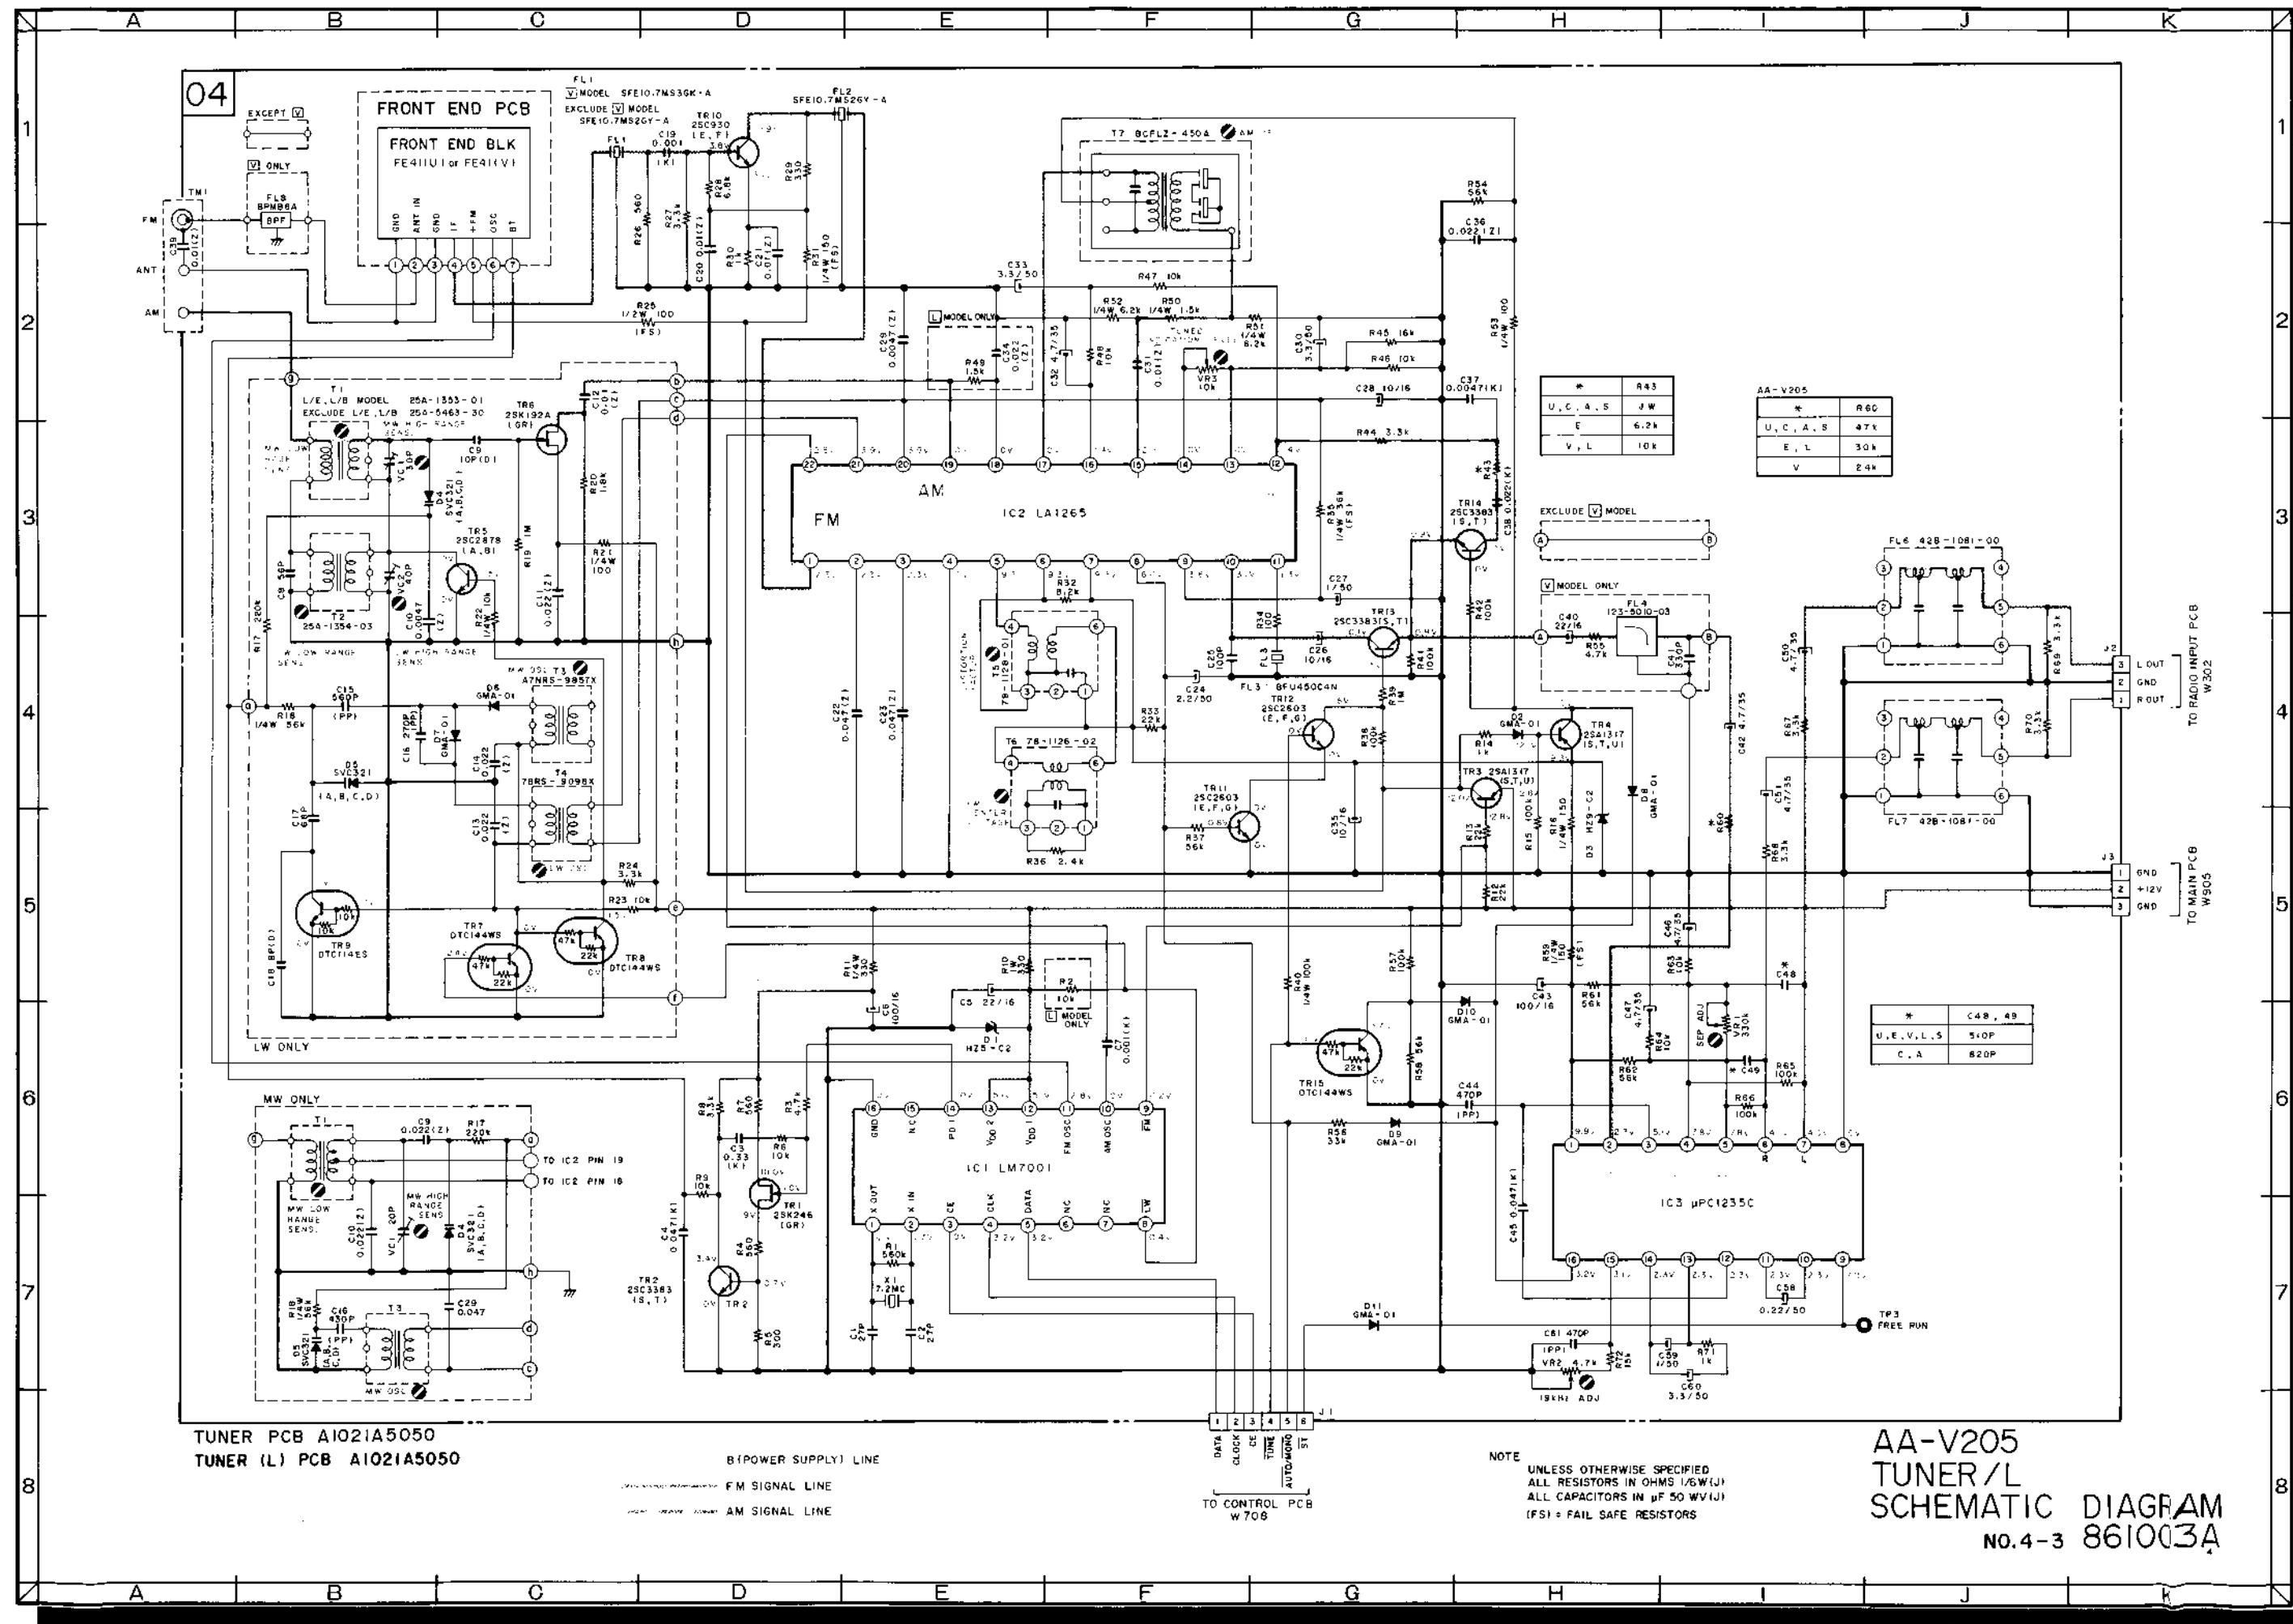

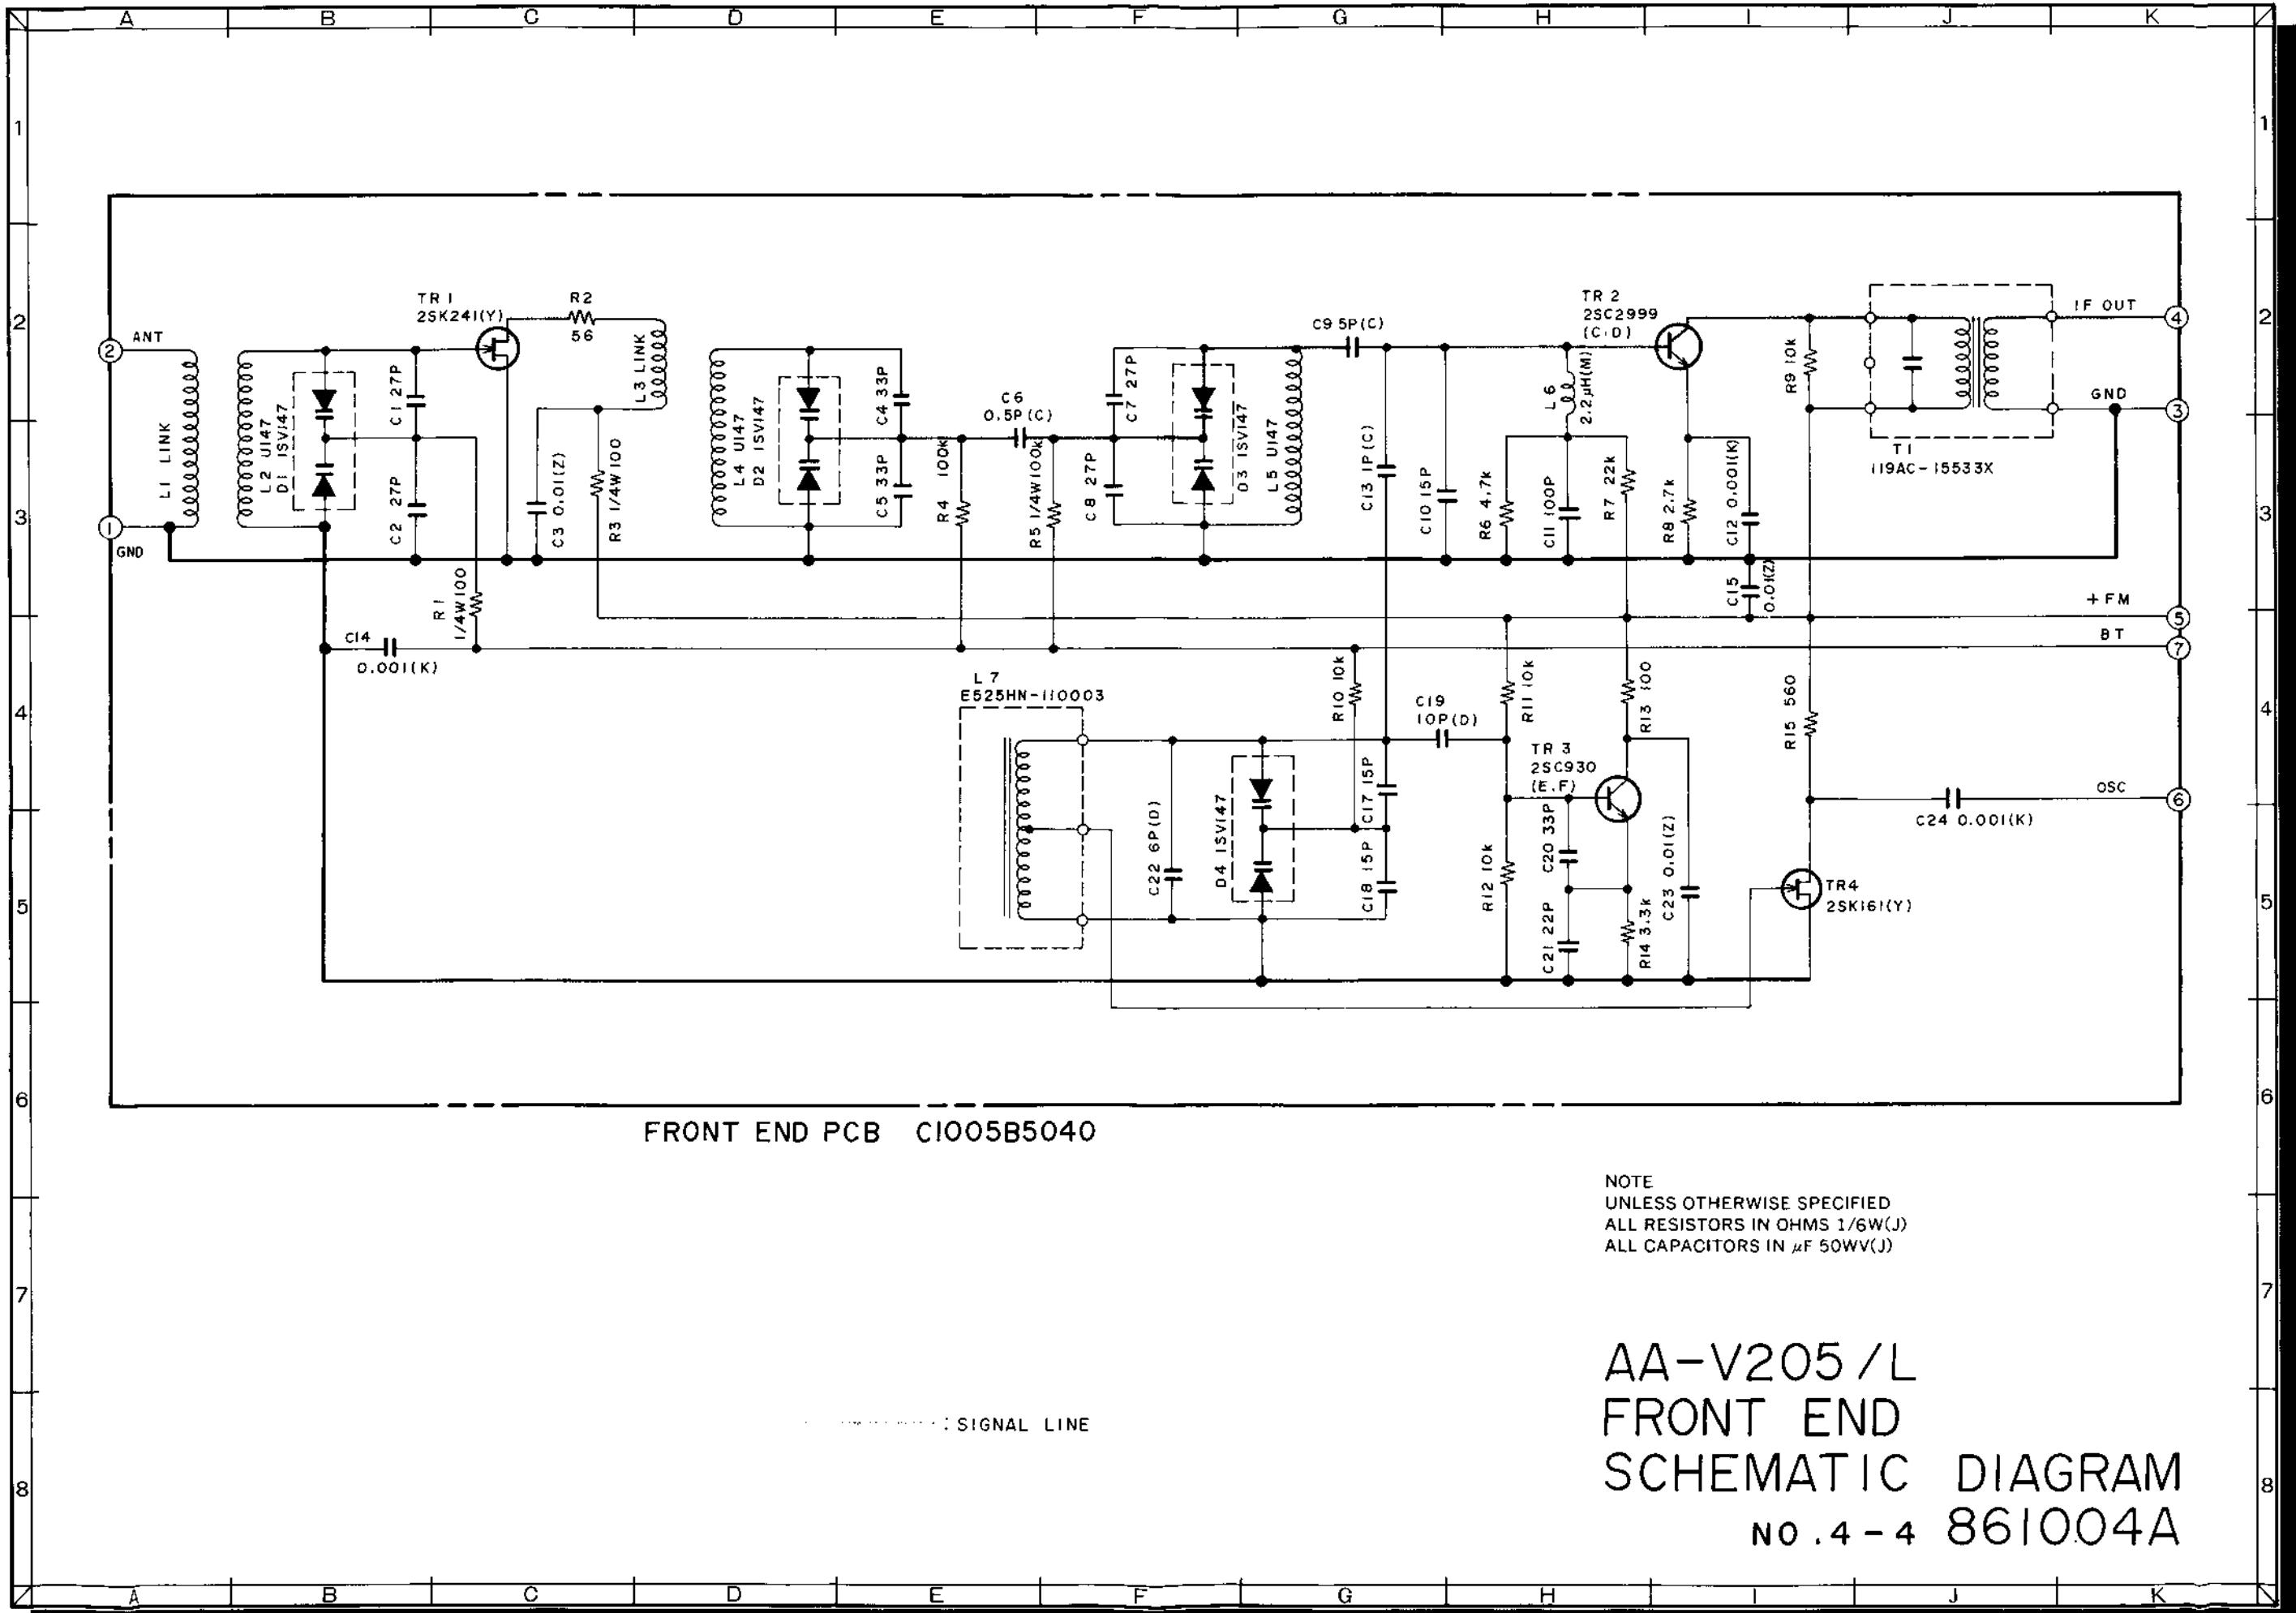

## ABBREVIATIONS FOR SERVICE MANUAL(RECEIVER)

ABBREVIATION	EXPLANATION	ABBREVIATION	EXPLANATION
AFC	Auto Frequency Control	MEMO	MEMOry
AGC	Auto Gain Control	MI-COM	Micro-COMputer
ALC	Auto Level Control	MIN	MINimum
AM	Amplitude Modulation	MIX	MIXing
AMP	AMPlifier	MPX	Multi pleX
ANT	ANTenna	MW	Medium Wave (frequency)
BATT	BATTery	NC	No Connection
BLK	BLock	NFB	Negative Feed Back
BUFF	BUFFER	OSC	OSCillator
COMP	COMPalator	PCB	Printed Circuit Board
DET	DETECT (DETector)	PLL	Phase Locked Loop
FLD		Q.D	Quadrature Detector
FM	Frequency Modulation	Rch	Right channel
FREQ	FREQuency	REF	REFerence
GND	GrouND	REG	REGulator
H	High	RF	Radio Frequency
HPF	High Pass Filter	SEG	SEGment
IF	Intermediate Frequency	SELE	SELEctor
IHF	Institut of High Fidelity	SENS	SENSitivity
IND	INDicator	SIG	SIGnal
I/O	In/Out	S/N	Signal to Noise Ratio
JW	Jumper Wire	SSG	Standard Signal Generator
L	Low	STD	STanDard
LCD	Liquid Crystal Display	SW	SWitch: Short Wave (frequency)
Lch	Left channel	THD	Total Harmonic Distortion
LED	Light Emitting Diode	TP	Test Point
LPF	Low Pass Filter	VCO	Voltage Controlled Oscillator
LW	Long Wave (Frequency)	VR	Variable Resistor
		X'TAL	Crystal