


JVC

SERVICE MANUAL

VIDEO CASSETTE RECORDER

HR-J680EK/EU, J780EU, J785EK

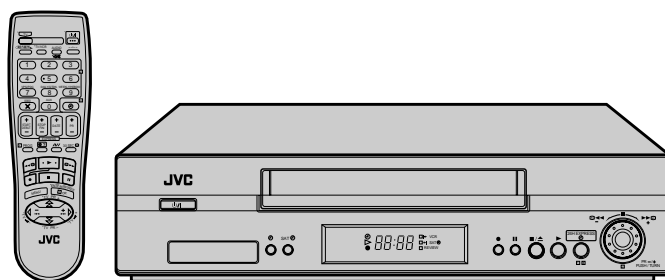

VIDEO *Plus*[®]
DELUXE
SQPB
Hi-Fi **VHS**
PAL

SPECIFICATIONS *(The specifications shown pertain specifically to the model HR-J785EK)*

GENERAL

Power requirement	: AC 220 V – 240 V ~, 50 Hz/60 Hz
Power consumption	: on : 16 W, off : 4.0 W
Operating Temperature	: 5°C to 40°C
Storage Temperature	: -20°C to 60°C
Operating position	: Horizontal only
Dimensions (WxHxD)	: 400 mm x 94 mm x 278 mm
Weight	: 3.4 kg
Format	: VHS PAL standard
Maximum recording time	
(SP)	: 240 min. with E-240 video cassette
(LP)	: 480 min. with E-240 video cassette

VIDEO / AUDIO

Signal system	: PAL-type colour signal and CCIR monochrome signal, 625 lines/50 fields
Recording system	: DA4 (Double Azimuth) helical scan system
Signal-to-noise ratio	: 45 dB
Horizontal resolution	: 250 lines
Frequency range	: 70 Hz to 10,000 Hz (Normal audio) 20 Hz to 20,000 Hz (Hi-Fi audio)
Input/Output	: 21-pin SCART connectors (IN/OUT x 1, IN/DECODER x 1) RCA connectors (AUDIO OUT x 1)

TUNER / TIMER

TV channel storage capacity	: 99 positions (+AUX position)
Tuning system	: Frequency synthesized tuner
Channel coverage	: VHF 44.5 MHz – 143 MHz/ 143 MHz – 470 MHz/ UHF 470 MHz – 862 MHz
Aerial output	: UHF channels 22 – 69 (Adjustable)
Memory backup time	: Approx. 10 min.

ACCESSORIES

Provided accessories	: RF cable, Satellite Controller, Infrared remote control unit, 'AA' battery x 2
----------------------	--

Specifications shown are for SP mode unless otherwise specified.
E.& O.E. Design and specifications subject to change without notice.

TABLE OF CONTENTS

Section	Title	Page	Section	Title	Page
Important Safety Precautions					
INSTRUCTIONS					
1. DISASSEMBLY					
1.1	Disassembly flow chart	1-1	2.2.24	Rotor assembly	2-14
1.2	How to read the disassembly and assembly	1-1	2.2.25	Upper drum assembly	2-15
1.3	Disassembly/assembly method	1-1	2.3	Compatibility adjustment	2-16
1.4	Service position	1-4	2.3.1	FM waveform linearity	2-16
1.4.1	How to set the "Service position"	1-4	2.3.2	Height and tilt of the A/C head	2-17
1.5	Mechanism service mode	1-4	2.3.3	A/C head phase (X-value)	2-17
1.5.1	How to set the "Mechanism service mode"	1-4	2.3.4	Standard tracking preset	2-18
1.6	Jig RCU mode	1-4	2.3.5	Tension pole position	2-18
1.6.1	Setting the Jig RCU mode	1-4	3. ELECTRICAL ADJUSTMENT		
1.6.2	Setting the User RCU mode	1-4	3.1	Precaution	3-1
1.7	Emergency display function	1-5	3.1.1	Required test equipments	3-1
1.7.1	Displaying the EMG information	1-5	3.1.2	Required adjustment tools	3-1
1.7.2	Clearing the EMG history	1-5	3.1.3	Color (colour) bar signal, color (colour) bar pattern	3-1
1.7.3	EMG content description	1-6	3.1.4	Switch settings and standard precautions	3-1
1.7.4	EMG detail information <1>	1-7	3.2	Servo circuit	3-2
1.7.5	EMG detail information <2>	1-8	3.2.1	Switching point	3-2
2. MECHANISM ADJUSTMENT			3.2.2	Slow tracking preset	3-2
2.1	Before starting repair and adjustment	2-1	3.3	Video circuit	3-2
2.1.1	Precautions	2-1	3.3.1	Auto picture initial setting	3-2
2.1.2	Checking for proper mechanical operations	2-1	3.4	Syscon circuit [HR-J680EU/J780EU]	3-2
2.1.3	Manually removing the cassette tape	2-1	3.4.1	Timer clock	3-2
2.1.4	Jigs and tools required for adjustment	2-2	4. CHARTS AND DIAGRAMS		
2.1.5	Maintenance and inspection	2-3	NOTES OF SCHEMATIC DIAGRAM		
2.2	Replacement of major parts	2-6	CIRCUIT BOARD NOTES		
2.2.1	Before starting disassembling (Phase matching between mechanical parts)	2-6	4.1	BOARD INTERCONNECTIONS	4-3
2.2.2	How to set the "Mechanism assembling mode"	2-6	4.2	MAIN(VIDEO/AUDIO) SCHEMATIC DIAGRAM	4-5
2.2.3	Cassette holder assembly	2-6	4.3	MAIN(ON SCREEN) SCHEMATIC DIAGRAM	4-7
2.2.4	Pinch roller arm assembly	2-8	4.4	MAIN(SYSCON) SCHEMATIC DIAGRAM	4-9
2.2.5	Guide arm assembly and press lever assembly	2-8	4.5	MAIN(SW.REG) SCHEMATIC DIAGRAM	4-11
2.2.6	A/C head	2-8	4.6	MAIN(TUNER) SCHEMATIC DIAGRAM	4-13
2.2.7	Loading motor	2-8	4.7	MAIN(FRONT) AND ADV.JOG SCHEMATIC DIAGRAMS	4-15
2.2.8	Capstan motor	2-9	4.8	MAIN(TERMINAL), SAT CTL AND R.PAUSE SCHEMATIC DIAGRAMS	4-17
2.2.9	Pole base assembly (supply or take-up side)	2-9	4.9	REMOTE CONTROLLER SCHEMATIC DIAGRAM	4-19
2.2.10	Rotary encoder	2-10	4.10	MAIN, SAT CTL AND R.PAUSE CIRCUIT BOARDS	4-21
2.2.11	Clutch unit	2-10	4.11	FDP GRID ASSIGNMENT AND ANODE CONNECTION	4-23
2.2.12	Change lever assembly, direct gear, clutch gear and coupling gear	2-10	4.12	WAVEFORMS	4-24
2.2.13	Link lever	2-11	4.13	VOLTAGE CHARTS	4-25
2.2.14	Cassette gear, control cam and worm gear	2-11	4.14	CPU PIN FUNCTION	4-26
2.2.15	Control plate	2-11	4.15	SYSTEM CONTROL BLOCK DIAGRAM	4-27
2.2.16	Loading arm gear (supply or take-up side) and loading arm gear shaft	2-12	4.16	VIDEO BLOCK DIAGRAM	4-29
2.2.17	Take-up lever, take-up head and control plate guide	2-13	4.17	AUDIO BLOCK DIAGRAM	4-31
2.2.18	Capstan brake assembly	2-13	5. PARTS LIST		
2.2.19	Sub brake assembly (take-up side)	2-13	5.1	PACKING AND ACCESSORY ASSEMBLY <M1>	5-1
2.2.20	Main brake assembly (take-up side), reel disk (take-up side) and main brake assembly (supply side)	2-13	5.2	FINAL ASSEMBLY <M2>	5-2
2.2.21	Tension brake assembly, reel disk (supply side) and tension arm assembly	2-14	5.3	MECHANISM ASSEMBLY <M4>	5-4
2.2.22	Idler lever, idler arm assembly	2-14	5.4	ELECTRICAL PARTS LIST	5-6
2.2.23	Stator assembly	2-14	MAIN BOARD ASSEMBLY <O3>		
			A/C HEAD BOARD ASSEMBLY <I2>		
			ADV.JOG BOARD ASSEMBLY(HR-J780EU/J785EK) <38> ...		
			LOADING MOTOR BOARD ASSEMBLY <55>		
			R.PAUSE BOARD ASSEMBLY(HR-J780EU)<91>		
			SAT_CTL BOARD ASSEMBLY <92>		

The following table lists the differing points between Models (HR-J680EK, HR-J680EU, HR-J780EU and HR-J785EK) in this series.

	HR-J680EK	HR-J680EU	HR-J780EU	HR-J785EK
JOG/SHUTTLE	NOT USED	NOT USED	USED	USED
VIDEO SYSTEM	PAL	PAL/MESECAM(MANUAL)	PAL/MESECAM(MANUAL)	PAL
BROADCASTING STANDARD	I	B/G,D/K	B/G,D/K	I
STEREO DECODER	NICAM	NICAM/A2	NICAM/A2	NICAM
RF OUT SYSTEM [INITIAL]	I	G,K	G,K	I
VCR PLUS+	VIDEOPLUS+ DELUXE	SHOWVIEW DELUXE	SHOWVIEW DELUXE	VIDEOPLUS+ DELUXE
LANGUAGE [INITIAL] (ON SCREEN DISPLAY)	ENG	13LANG.[ENG]	13LANG.[ENG]	ENG
AUDIO DUBBING/OPERATION	NOT USED	NOT USED	USED/BUTTON	NOT USED
FRONT VIDEO/AUDIO IN	NOT USED	NOT USED	USED	NOT USED
WINDOW COLOR	SMOKE LIGHT GRAY	SMOKE LIGHT GRAY	BLUE	SMOKE LIGHT GRAY
REMOTE PAUSE	NOT USED	NOT USED	USED	NOT USED
CABLE MOUSE	PROVIDED	OPTION	OPTION	PROVIDED

Important Safety Precautions

Prior to shipment from the factory, JVC products are strictly inspected to conform with the recognized product safety and electrical codes of the countries in which they are to be sold. However, in order to maintain such compliance, it is equally important to implement the following precautions when a set is being serviced.

● Precautions during Servicing

1. Locations requiring special caution are denoted by labels and inscriptions on the cabinet, chassis and certain parts of the product. When performing service, be sure to read and comply with these and other cautionary notices appearing in the operation and service manuals.

2. Parts identified by the \triangle symbol and shaded (■) parts are critical for safety.

Replace only with specified part numbers.

Note: Parts in this category also include those specified to comply with X-ray emission standards for products using cathode ray tubes and those specified for compliance with various regulations regarding spurious radiation emission.

3. Fuse replacement caution notice.
Caution for continued protection against fire hazard.
Replace only with same type and rated fuse(s) as specified.

4. Use specified internal wiring. Note especially:
1) Wires covered with PVC tubing
2) Double insulated wires
3) High voltage leads

5. Use specified insulating materials for hazardous live parts. Note especially:
1) Insulation Tape 3) Spacers 5) Barrier
2) PVC tubing 4) Insulation sheets for transistors

6. When replacing AC primary side components (transformers, power cords, noise blocking capacitors, etc.) wrap ends of wires securely about the terminals before soldering.

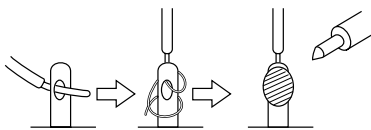


Fig.1

7. Observe that wires do not contact heat producing parts (heatsinks, oxide metal film resistors, fusible resistors, etc.)

8. Check that replaced wires do not contact sharp edged or pointed parts.

9. When a power cord has been replaced, check that 10-15 kg of force in any direction will not loosen it.

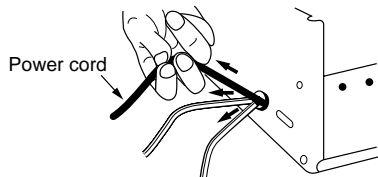


Fig.2

10. Also check areas surrounding repaired locations.

11. Products using cathode ray tubes (CRTs)
In regard to such products, the cathode ray tubes themselves, the high voltage circuits, and related circuits are specified for compliance with recognized codes pertaining to X-ray emission. Consequently, when servicing these products, replace the cathode ray tubes and other parts with only the specified parts. Under no circumstances attempt to modify these circuits. Unauthorized modification can increase the high voltage value and cause X-ray emission from the cathode ray tube.

12. Crimp type wire connector

In such cases as when replacing the power transformer in sets where the connections between the power cord and power transformer primary lead wires are performed using crimp type connectors, if replacing the connectors is unavoidable, in order to prevent safety hazards, perform carefully and precisely according to the following steps.

1) **Connector part number** : E03830-001

2) **Required tool** : Connector crimping tool of the proper type which will not damage insulated parts.

3) **Replacement procedure**

(1) Remove the old connector by cutting the wires at a point close to the connector.

Important : Do not reuse a connector (discard it).

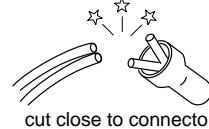


Fig.3

(2) Strip about 15 mm of the insulation from the ends of the wires. If the wires are stranded, twist the strands to avoid frayed conductors.




Fig.4

(3) Align the lengths of the wires to be connected. Insert the wires fully into the connector.

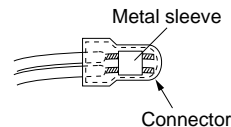


Fig.5

(4) As shown in Fig.6, use the crimping tool to crimp the metal sleeve at the center position. Be sure to crimp fully to the complete closure of the tool.



Fig.6

(5) Check the four points noted in Fig.7.

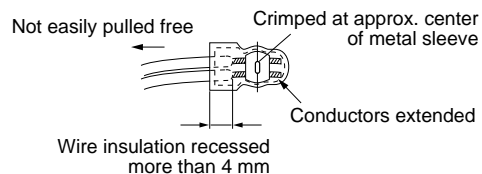


Fig.7

● Safety Check after Servicing

Examine the area surrounding the repaired location for damage or deterioration. Observe that screws, parts and wires have been returned to original positions. Afterwards, perform the following tests and confirm the specified values in order to verify compliance with safety standards.

1. Insulation resistance test


Confirm the specified insulation resistance or greater between power cord plug prongs and externally exposed parts of the set (RF terminals, antenna terminals, video and audio input and output terminals, microphone jacks, earphone jacks, etc.). See table 1 below.

2. Dielectric strength test

Confirm specified dielectric strength or greater between power cord plug prongs and exposed accessible parts of the set (RF terminals, antenna terminals, video and audio input and output terminals, microphone jacks, earphone jacks, etc.). See table 1 below.

3. Clearance distance

When replacing primary circuit components, confirm specified clearance distance (d), (d') between soldered terminals, and between terminals and surrounding metallic parts. See table 1 below.

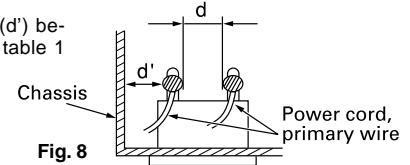


4. Leakage current test

Confirm specified or lower leakage current between earth ground/power cord plug prongs and externally exposed accessible parts (RF terminals, antenna terminals, video and audio input and output terminals, microphone jacks, earphone jacks, etc.).

Measuring Method : (Power ON)

Insert load Z between earth ground/power cord plug prongs and externally exposed accessible parts. Use an AC voltmeter to measure across both terminals of load Z. See figure 9 and following table 2.

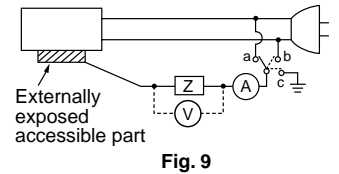


5. Grounding (Class 1 model only)

Confirm specified or lower grounding impedance between earth pin in AC inlet and externally exposed accessible parts (Video in, Video out, Audio in, Audio out or Fixing screw etc.).

Measuring Method:

Connect milli ohm meter between earth pin in AC inlet and exposed accessible parts. See figure 10 and grounding specifications.

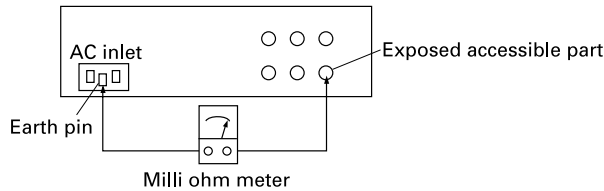

Grounding Specifications

Region	Grounding Impedance (Z)
USA & Canada	$Z \leq 0.1 \text{ ohm}$
Europe & Australia	$Z \leq 0.5 \text{ ohm}$

AC Line Voltage	Region	Insulation Resistance (R)	Dielectric Strength	Clearance Distance (d), (d')
100 V	Japan	$R \geq 1 \text{ M}\Omega/500 \text{ V DC}$	AC 1 kV 1 minute	$d, d' \geq 3 \text{ mm}$
100 to 240 V			AC 1.5 kV 1 minute	$d, d' \geq 4 \text{ mm}$
110 to 130 V	USA & Canada	$1 \text{ M}\Omega \leq R \leq 12 \text{ M}\Omega/500 \text{ V DC}$	AC 1 kV 1 minute	$d, d' \geq 3.2 \text{ mm}$
110 to 130 V 200 to 240 V	Europe & Australia	$R \geq 10 \text{ M}\Omega/500 \text{ V DC}$	AC 3 kV 1 minute (Class II) AC 1.5 kV 1 minute (Class I)	$d \geq 4 \text{ mm}$ $d' \geq 8 \text{ mm}$ (Power cord) $d' \geq 6 \text{ mm}$ (Primary wire)

Table 1 Specifications for each region

AC Line Voltage	Region	Load Z	Leakage Current (i)	a, b, c
100 V	Japan		$i \leq 1 \text{ mA rms}$	Exposed accessible parts
110 to 130 V	USA & Canada		$i \leq 0.5 \text{ mA rms}$	Exposed accessible parts
110 to 130 V 220 to 240 V	Europe & Australia		$i \leq 0.7 \text{ mA peak}$ $i \leq 2 \text{ mA dc}$	Antenna earth terminals
			$i \leq 0.7 \text{ mA peak}$ $i \leq 2 \text{ mA dc}$	Other terminals


Table 2 Leakage current specifications for each region

Note: These tables are unofficial and for reference only. Be sure to confirm the precise values for your particular country and locality.

SECTION 1 DISASSEMBLY

1.1 Disassembly flow chart

This flowchart lists the disassembling steps for the cabinet parts and P.C. boards in order to gain access to item(s) to be serviced. When reassembling, perform the step(s) in reverse order. Bend, route and dress the flat cables as they were originally laid.

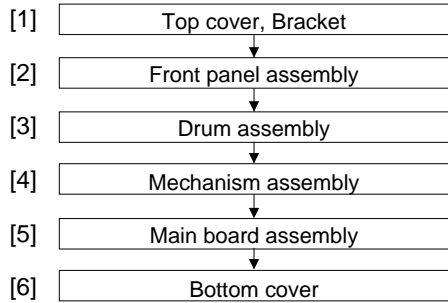

1.2 How to read the disassembly and assembly

<Example>

Step/ LocNo.	Part Name	Fig. No.	Point	Note
[1]	Top cover, Bracket	D1	4(S1a),(S1b),3(L1a), 2(SD1a),(P1a),(W1a), CN1(WR1a), 2(S1c)	<Note 1a>

(1) (2) (3) (4) (5)

- (1) Order of steps in Procedure
When reassembling, perform the step(s) in the reverse order. These numbers are also used as the identification (location) No. of parts Figures.
- (2) Part name to be removed or installed.
- (3) Fig. No. showing procedure or part location.
- (4) Identification of part to be removed, unhooked, unlocked, released, unplugged, unclamped or unsoldered.
P= Spring, W= Washer, S= Screw, L= Locking tab, SD= Solder, CN**(WR**)= Remove the wire (WR**) from the connector (CN**).

Note:

- **The bracketed () WR of the connector symbol are assigned nos. in priority order and do not correspond to those on the spare parts list.**

- (5) Adjustment information for installation

1.3 Disassembly/assembly method

Step/ LocNo.	Part Name	Fig. No.	Point	Note
[1]	Top cover, Bracket	D1	4(S1a), (S1b) ----- 2(S1c)	
[2]	Front panel assembly ADV. Jog board assembly	D2	CN7001(WR2a) [HR-J780EU/J785EK], 4(L2a), 3(L2b) ----- 2(S2a)	<Note 2a> <Note 2b> <Note 2c>
[3]	Drum assembly (Drum shield)	D3	CN1(WR3a), CN1(WR3b), (S3a), (S3b), (S3c) ----- 2(S3d)	<Note 2c>
[4]	Mechanism assembly	D4	CN2001(WR4a), (S4a),(S4b), (S4c), (S4d)	<Note 2c> <Note 4a>
[5]	Main board assembly	D5	6(L5a), (S5a), 3(S5b), (S5c)	<Note 2c>
[6]	Bottom cover	D6	2(L6a), 9(L6b)	<Note 6a>

<Note 2a>

- When reattaching the Front panel assembly, make sure that the door opener "a" of the Cassette holder assembly is lowered in position prior to the reinstallation.

<Note 2b>

- When reattaching the Front panel assembly, pay careful attention to the switch lever not to make it touch the switch knob "b" of the Main board assembly from the side.

<Note 2c>

- Be careful not to damage the connector and wire etc. during connection and disconnection.
When connecting the wire to the connector, be careful with the wire direction.

<Note 4a>


- When it is required to remove the screws (S4a to S4b) retaining the Mechanism assembly, please refer to the "Procedures for Lowering the Cassette holder assembly"(See on page 1-2).
- When reattaching the Mechanism assembly to the Main board assembly, take care not to damage the sensors on the Main board assembly.
- When removing the Mechanism assembly only, unhook the two spacers connecting it with the Main board assembly with pliers from the back side of the Main board assembly first, and then remove the Mechanism assembly.
- The wire (WR4a) has excess length that may be loose, as it is quite long. After inserting the wire and connectors, the loose portion of the wire should be taken up and accommodated between the A/C head base and the main deck.

<Note 6a>

- When removing the bottom cover, push down the two tabs (L6a) to slide the bottom cover.

Procedures for Lowering the Cassette holder assembly

As the mechanism of this unit is integrated with the Housing assembly, the holder must be lowered and the two screws unscrewed when removing the Mechanism assembly.

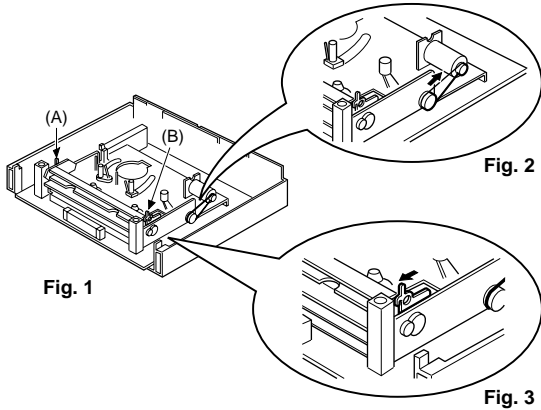

Turn the loading motor pulley in the direction as indicated by Fig.2. As both (A) and (B) levers are lodged twice, push the levers in the direction as indicated by Fig.3 to release them. When pushing the levers, do it in the order of (A), (B), (B), (A). When the holder has been lowered, turn the pulley until the cassette holder is securely in place without allowing any up/down movement.

Procedures for Lowering the Cassette holder assembly

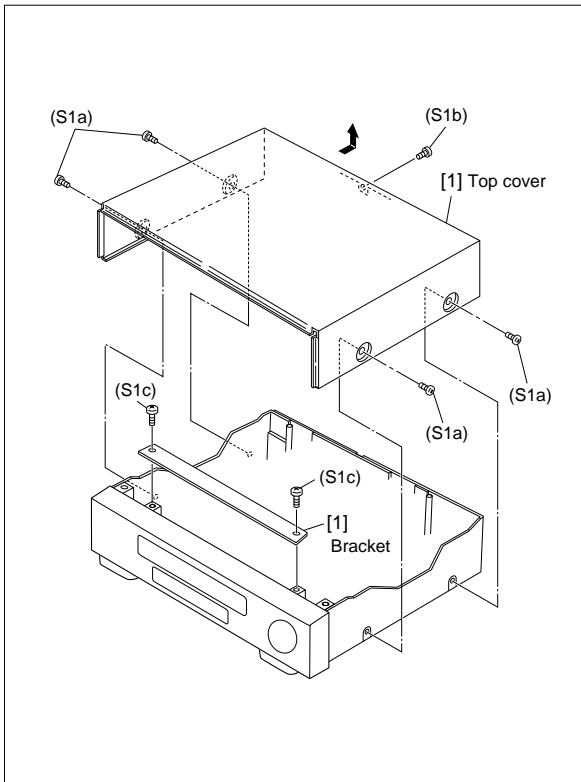


Fig. D1

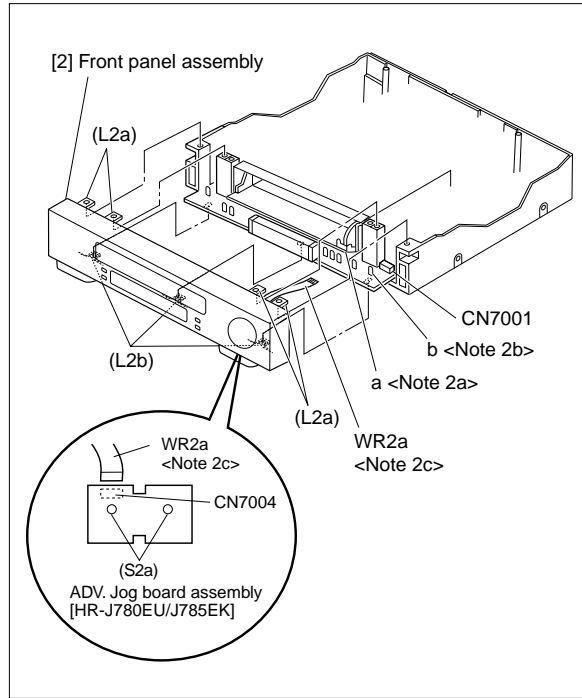


Fig. D2

Note:

When installing the Drum assembly, secure the screws (S3a to S3c) in the order of a, b, c.

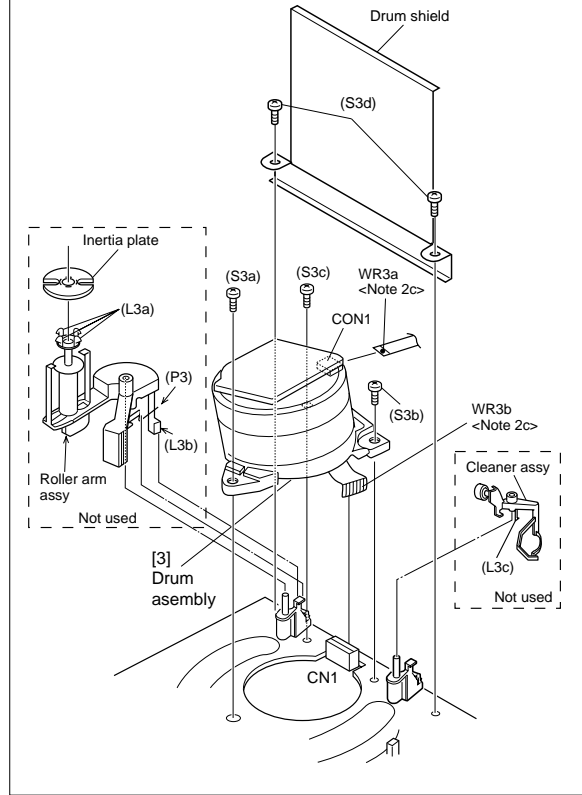


Fig. D3

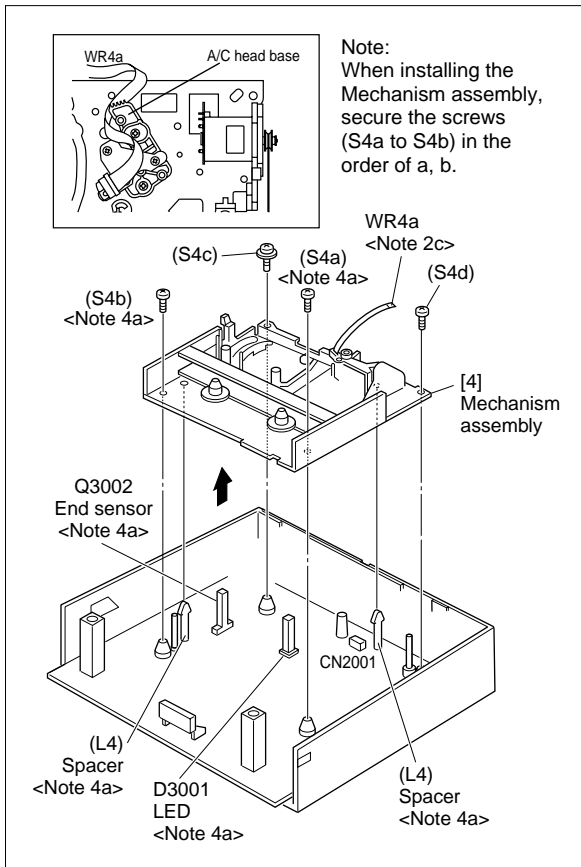


Fig. D4

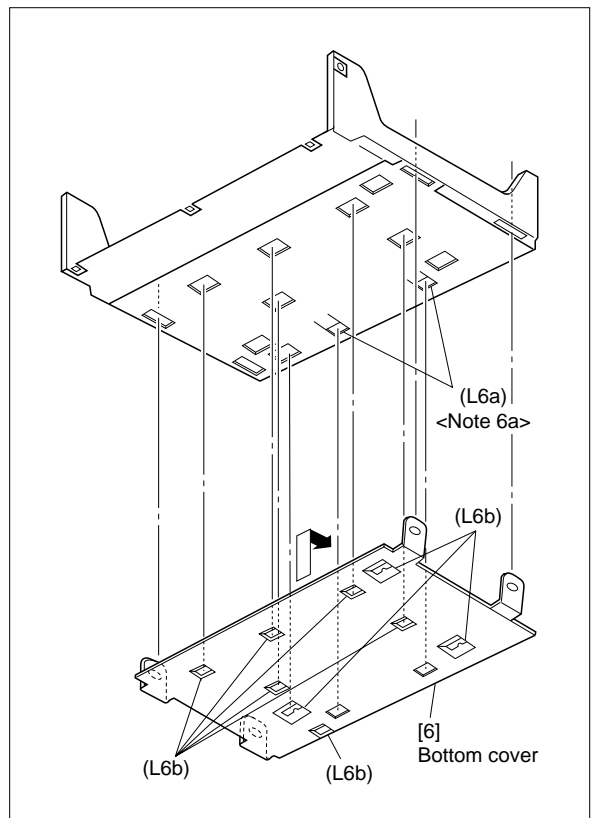


Fig. D6

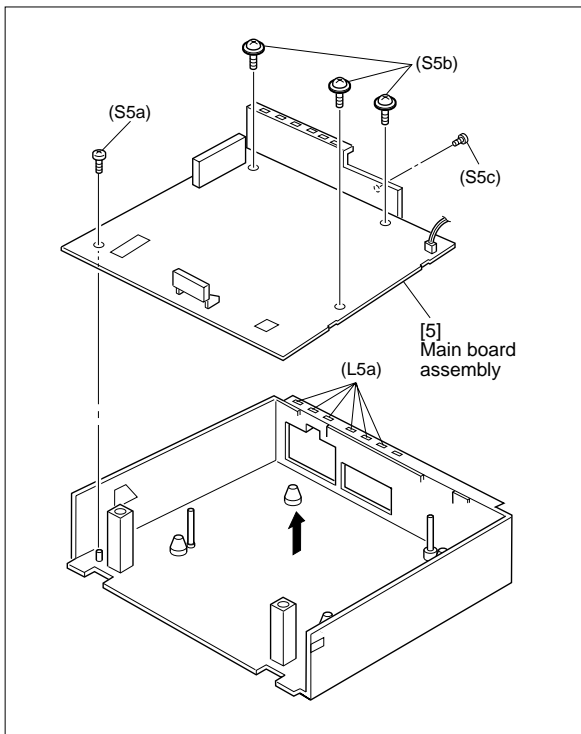


Fig. D5

1.4 Service position

This unit has been designed so that the Mechanism and Main board assemblies can be removed together from the chassis assembly. Before diagnosing or servicing the circuit boards, take out the major parts from the chassis assembly.

1.4.1 How to set the "Service position"

- (1) Refer to the disassembly procedure and perform the disassembly of the major parts before removing the Drum assembly.
- (2) Lower the cassette holder to prepare for the removal of the Mechanism assembly screws. (Refer to the "Procedures for lowering the Cassette holder assembly" of 1.3 Disassembly/assembly method.)
- (3) Remove the combined Mechanism and Main board assemblies.
- (4) Connect the wires and connectors of the major parts that have been removed in step (1). (Refer to Fig.1-4-1a.)
- (5) Place the combined Mechanism and Main board assemblies upside down.
- (6) Insert the power cord plug into the power outlet and then proceed with the diagnostics and servicing of the board assembly.

Notes:

- **Before inserting the power cord plug into the power outlet, make sure that none of the electrical parts are able to short-circuit between the workbench and the board assembly.**
- **For the disassembly procedure of the major parts and details of the precautions to be taken, see "1.3 Disassembly/assembly method".**
- **If there are wire connections from the Main board and Mechanism assemblies to the other major parts, be sure to remove them (including wires connected to the major parts) first before performing step (2).**
- **When carrying out diagnosis and repair of the Main board assembly in the "Service position", be sure to ground both the Main board and Mechanism assemblies. If they are improperly grounded, there may be noise on the playback picture or FDP counter display may move even when the mechanism is kept in an in-operative status.**
- **In order to diagnose the playback or recording of the cassette tape, set the Mechanism assembly to the required mode before placing it upside down. If the mechanism mode is changed (including ejection) while it is in an upside down position the tape inside may be damaged.**

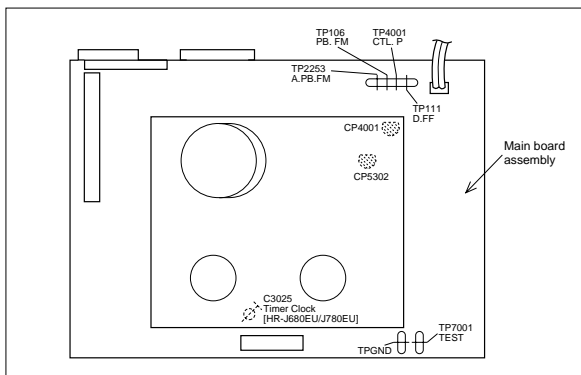


Fig. 1-4-1a

1.5 Mechanism service mode

This model has a unique function to enter the mechanism into every operation mode without loading of any cassette tape. This function is called the "Mechanism service mode".

1.5.1 How to set the "Mechanism service mode"

- (1) Unplug the power cord plug from the power outlet.
- (2) Connect TPGND and TP7001 (TEST) on the Main board assembly with a jump wire.
- (3) Insert the power cord plug into the power outlet.
- (4) With lock levers (A) (B) on the left and right of the Cassette holder assembly pulled toward the front, slide the holder in the same direction as the cassette insertion direction. (For the positions of lock levers (A) (B), refer to the "Procedures for lowering the Cassette holder assembly" of 1.3 Disassembly/assembly method.)
- (5) The cassette holder lowers and, when the loading has completed, the mechanism enters the desired mode.

1.6 Jig RCU mode

This unit uses the following two modes for receiving remote control codes.

- 1) User RCU mode : Ordinary mode for use by the user.
- 2) Jig RCU mode : Mode for use in production and servicing.

When using the Jig RCU, it is required to set the VCR to the Jig RCU mode (the mode in which codes from the Jig RCU can be received). As both of the above two modes are stored in the EEPROM, it is required to set the VCR back to the User RCU mode each time that an adjustment is made or to check that the necessary operations have been completed. These modes can be set by the operations described below.

1.6.1 Setting the Jig RCU mode

- (1) Unplug the power cord plug from the power outlet.
 - (2) Press and hold the "REC" and "PAUSE" buttons on the VCR simultaneously, while plugging the power cord plug into the power outlet.
- When the VCR is set to the Jig RCU mode, the symbols (" : ") in the time display of the FDP are turned off.

1.6.2 Setting the User RCU mode


- (1) Turn off the power.
- (2) Press the "REC" and "PAUSE" buttons of the VCR simultaneously. Alternatively, transmit the code "80" from the Jig RCU.

1.7 Emergency display function

This unit has a function for storing the history of the past two emergencies (EMG) and displaying them on each FDP (or OSD). With the status of the VCR and mechanism at the moment an emergency occurred can also be confirmed.


FDP display model

[FDP display]

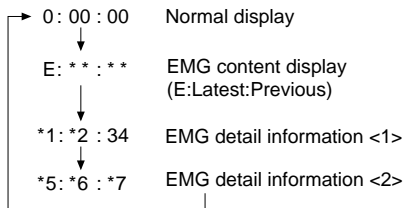


FDP (7segment LED) display model

[FDP display]

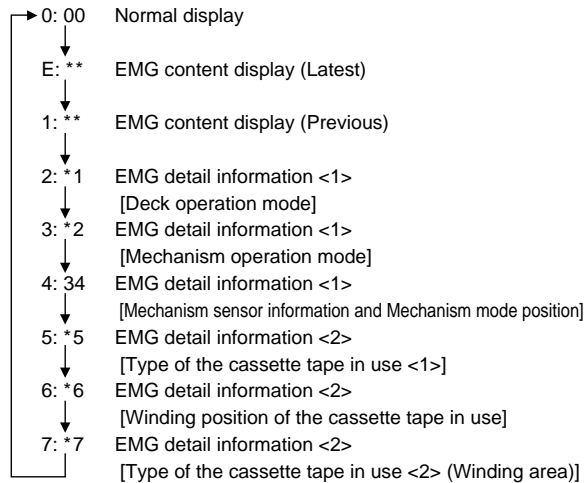

OSD display model

[OSD display]

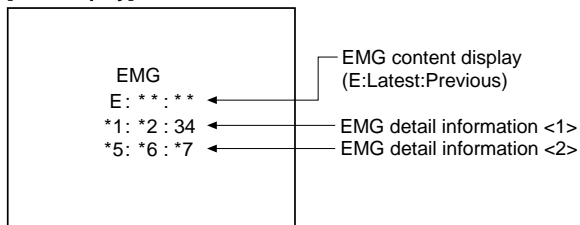

Notes:

- **The EMG detail information <1><2> show the information on the latest EMG.**
It becomes “-- : -- : --” when there is no latest EMG record.
- **When using the Jig RCU, it is required to set the VCR to the Jig RCU mode (the mode in which codes from the Jig RCU can be received).**

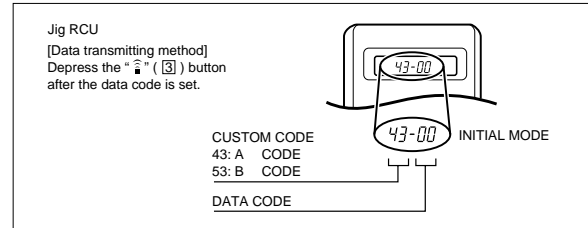


Fig. 1-7a Jig RCU [PTU94023B]

1.7.1 Displaying the EMG information

- (1) Transmit the code “59” from the Jig RCU.
The FDP shows the EMG content in the form of “E: ** : **”.
 <Example 1> E : 01 : 03
 ↑ Previous EMG
 ↑ Latest EMG
 <Example 2> E : -- : -- ← No EMG record
- (2) Transmit the code “59” from the Jig RCU again.
The FDP shows the EMG detail information <1> in the form of “*1 : *2 : 34”.
 *1 : Deck operation mode at the moment of EMG
 *2 : Mechanism operation mode at the moment of EMG
 3- : Mechanism sensor information at the moment of EMG
 -4 : Mechanism mode position at the moment of EMG
- (3) Transmit the code “59” from the Jig RCU once again.
The FDP shows the EMG detail information <2> in the form of “*5 : *6 : *7”.
 *5 : Type of the cassette tape in use <1> .
 *6 : Winding position of the cassette tape in use
 *7 : Type of the cassette tape in use <2> (Winding area)
- (4) Transmit the code “59” from the Jig RCU once again to reset the display.

Notes:

- **For the OSD display model, all EMG information are showed by transmitting first code from the Jig RCU.**
- **For the EMG content, see “1.7.3 EMG content description”.**
- **For the EMG detail information <1>, see “1.7.4 EMG detail information <1>”.**
- **For the EMG detail information <2>, see “1.7.5 EMG detail information <2>”.**

1.7.2 Clearing the EMG history

- (1) Display the EMG history.
- (2) Transmit the code “36” from the Jig RCU.
- (3) Reset the EMG display.

(EMG-02e)

1.7.3 EMG content description

Note: EMG contents "E08/E09" are for the model with Dynamic Drum (DD).

FDP	CONTENT	CAUSE
E01: Loading EMG	When the mechanism mode cannot be changed to another mode even when the loading motor has rotated for more than 4 seconds in the loading direction, [E:01] is identified and the power is turned off.	<ol style="list-style-type: none"> The mechanism is locked in the middle of mode transition. The mechanism is locked at the loading end due to the encoder position reading error during mode transition. Power is not supplied to the loading MDA.
E02: Unloading EMG	When the mechanism mode cannot be changed to another mode even when the loading motor has rotated for more than 4 seconds in the unloading direction, [E:02] is identified and the power is turned off.	<ol style="list-style-type: none"> The mechanism is locked in the middle of mode transition. The mechanism is locked at the unloading end due to the encoder position reading error during mode transition. Power is not supplied to the loading MDA.
E03: Take Up Reel Pulse EMG	When the take-up reel pulse has not been generated for more than 4 seconds in the capstan rotating mode, [E:03] is identified, the pinch rollers are turned off and stopped, and the power is turned off. However, the reel EMG is not detected in STILL/SLOW modes.	<ol style="list-style-type: none"> The take-up reel pulse is not generated in the FWD transport modes (PLAY/FWD SEARCH/FF, etc.) because; <ol style="list-style-type: none"> The idler gear is not meshed with the take-up reel gear; The idler gear is meshed with the take-up reel gear, but incapable of winding due to too large mechanical load (abnormal tension); The take-up reel sensor does not output the FG pulse. The supply reel pulse is not generated in the REV transport modes (REV SEARCH/REW, etc.) because; <ol style="list-style-type: none"> The idler gear is not meshed with the supply reel gear. The idler gear is meshed with the supply reel gear, but incapable of winding due to too large a mechanical load (abnormal tension); The supply reel sensor does not output the FG pulse. Power is not supplied to the reel sensors.
E04: Drum FG EMG	When the drum FG pulse has not been input for more than 3 seconds in the drum rotating mode, [E:04] is identified, the pinch rollers are turned off and stopped, and the power is turned off.	<ol style="list-style-type: none"> The drum could not start or the drum rotation has stopped due to too large a load on the tape, because; <ol style="list-style-type: none"> The tape tension is abnormally high; The tape is damaged or a foreign object (grease, etc.) adheres to the tape. The drum FG pulse did not reach the System controller CPU because; <ol style="list-style-type: none"> The signal circuit is disconnected in the middle; The FG pulse generator (hall device) of the drum is faulty. The drum control voltage (DRUM CTL V) is not supplied to the MDA. Power is not supplied to the drum MDA.
E05: Cassette Eject EMG	When the eject operation does not complete in 3 seconds after the start, [E:05] is identified, the pinch rollers are turned off and stopped, and the power is turned off. When the cassette insertion operation does not complete in 3 seconds after the start, the cassette is ejected. In addition, when the operation does not complete within 3 seconds after the start, [E:05] is also identified and the power is turned off immediately.	<ol style="list-style-type: none"> The cassette cannot be ejected due to a failure in the drive mechanism of the housing. When the housing load increases during ejection, the loading motor is stopped because of lack of headroom in its drive torque. Housing load increasing factors: Temperature environment (low temperature, etc.), mechanism wear or failure. The sensor/switch for detecting the end of ejection are not functioning normally. The loading motor drive voltage is lower than specified or power is not supplied to the motor (MDA). When the user attempted to eject a cassette, a foreign object (or perhaps the user's hand) was caught in the opening of the housing.
E06: Capstan FG EMG	When the capstan FG pulse has not been generated for more than 1 second in the capstan rotating mode, [E:06] is identified, the pinch rollers are turned off and stopped, and the power is turned off. However, the capstan EMG is not detected in STILL/SLOW/FF/REW modes.	<ol style="list-style-type: none"> The capstan could not start or the capstan rotation has stopped due to too large a load on the tape, because; <ol style="list-style-type: none"> The tape tension is abnormally high (mechanical lock); The tape is damaged or a foreign object (grease, etc.) is adhered to the tape (occurrence of tape entangling, etc.). The capstan FG pulse did not reach the System controller CPU because; <ol style="list-style-type: none"> The signal circuit is disconnected in the middle; The FG pulse generator (MR device) of the capstans is faulty. The capstan control voltage (CAPSTAN CTL V) is not supplied to the MDA. Power is not supplied to the capstan MDA.
E07: SW Power Short-Circuit EMG	When short-circuiting of the SW power supply with GND has lasted for 0.5 second or more, [E:07] is identified, all the motors are stopped and the power is turned off.	<ol style="list-style-type: none"> The SW 5 V power supply circuit is shorted with GND. The SW 12 V power supply circuit is shorted with GND.
E08: DD Initialized (Absolute Position Sensor) EMG	When DD tilting does not complete in 4 seconds, [E:08] is identified, the tilt motor is stopped and the power is turned off.	<ol style="list-style-type: none"> The absolute value sensor is defective. (The soldered parts have separated.) The pull-up resistor at the absolute sensor output is defective. (The soldered parts have separated.) Contact failure or soldering failure of the pins of the connector (board-to-board) to the absolute value sensor. The absolute value sensor data is not sent to the System Controller CPU.
E09: DD FG EMG	When the DD FG pulse is not generated within 2.5 seconds, [E:09] is identified, the tilt motor is stopped and the power is turned off.	<ol style="list-style-type: none"> The FG sensor is defective. (The soldered parts have separated.) The pull-up resistor at the FG sensor output is defective. (The soldered parts have separated.) Contact failure or soldering failure of the pins of the connector (board-to-board) to the FG sensor. The power to the sensor is not supplied. (Connection failure/soldering failure) The FG pulse is not sent to the System Controller CPU. The tilt motor is defective. (The soldered parts have separated.) The drive power to the tilt motor is not supplied. (Connection failure/soldering failure) The tilt motor drive MDA - IC is defective. Auto-recovery of the DD tilting cannot take place due to overrun.
E0A: Supply Reel Pulse EMG	When the supply reel pulse has not been generated for more than 10 seconds in the capstan rotating mode, [E:0A] is identified and the cassette is ejected (but the power is not turned off). However, note that the reel EMG is not detected in the SLOW/STILL mode.	<ol style="list-style-type: none"> The supply reel pulse is not generated in the FWD transport mode (PLAY/FWD SEARCH/FF, etc.) because; <ol style="list-style-type: none"> PLAY/FWD or SEARCH/FF is started while the tape in the inserted cassette is cut in the middle; A mechanical factor caused tape slack inside and outside the supply reel side of the cassette shell. In this case, the supply reel will not rotate until the tape slack is removed by the FWD transport, so the pulse is not generated until then; The FG pulse output from the supply reel sensor is absent. The take-up reel pulse is not generated in the REV transport mode (REV SEARCH/REW, etc.). <ol style="list-style-type: none"> REV SEARCH/REW is started when the tape in the inserted cassette has been cut in the middle; A mechanical factor caused tape slack inside and outside the take-up reel side of the cassette shell. In this case, the supply reel will not rotate until the tape slack is removed by the REV transport, so the pulse will not be generated until that time; The FG pulse output from the take-up reel sensor is absent. The power to a reel sensor is not supplied.
EC1 or EU1: Head clog warning	Presupposing the presence of the control pulse output in the PLAY mode, when the value obtained by mixing the two V.FM output channels (without regard to the A.FM output) has remained below a certain threshold level for more than 10 seconds, [E:C1] or [E:U1] is identified and recorded in the emergency history. During the period in which a head clog is detected, the FDP and OSD repeat the "3-second warning display" and "7-second noise picture display" alternately. EMG code : "E:C1" or "E:U1" / FDP : "U:01" / OSD : "Try cleaning tape." or "Use cleaning cassette." The head clog warning is reset when the above-mentioned threshold has been exceeded for more than 2 seconds or the mode is changed to another mode than PLAY.	

Table 1-7-3a

1.7.4 EMG detail information <1>

The status (electrical operation mode) of the VCR and the status (mechanism operation mode/sensor information) of the mechanism in the latest EMG can be confirmed based on the figure in EMG detail information <1> .

[FDP/OSD display]

*1 : *2 : 34

- *1 : Deck operation mode at the moment of EMG
- *2 : Mechanism operation mode at the moment of EMG
- 3- : Mechanism sensor information at the moment of EMG
- 4 : Mechanism mode position at the moment of EMG

Note:

- For EMG detailed information <1>, the content of the code that is shown on the FDP (or OSD) differs depending on the parts number of the system control microprocessor (IC3001) of the VCR. The system control microprocessor parts number starts with two letters, refer these to the corresponding table.

*1 : Deck operation mode

[Common table of MN*, HD* and M3*]

Display		Deck operation mode
MN*/M3*	HD*	
00	-	Mechanism being initialized
01	00	STOP with pinch roller pressure off (or tape present with P.OFF)
02	01	STOP with pinch roller pressure on
03	-	POWER OFF as a result of EMG
04	04	PLAY
0C	0E	REC
10	11	Cassette ejected
20	22	FF
21	-	Tape fully loaded, START sensor ON, short FF
22	-	Cassette identification FWD SEARCH before transition to FF (SP x7-speed)
24	26	FWD SEARCH (variable speed) including x2-speed
2C	2E	INSERT REC
40	43	REW
42	-	Cassette identification REV SEARCH before transition to REW (SP x7-speed)
44	47	REV SEARCH (variable speed)
4C	4C	AUDIO DUB
6C	6E	INSERT REC (VIDEO + AUDIO)
84	84	FWD STILL / SLOW
85	85	REV STILL / SLOW
8C	8F	REC PAUSE
8D	-	Back spacing
8E	-	Forward spacing (FWD transport mode with BEST function)
AC	AF	INSERT REC PAUSE
AD	-	INSERT REC back spacing
CC	CD	AUDIO DUB PAUSE
CD	-	AUDIO DUB back spacing
EC	EF	INSERT REC (VIDEO + AUDIO) PAUSE
ED	-	INSERT REC (VIDEO + AUDIO) back spacing

*2 : Mechanism operation mode

[Common table of MN* and M3*]

Display		Mechanism operation mode
MN*	M3*	
00	00	Command standby (Status without executing command)
02	02	POWER OFF by EMG occurrence
04	04	Moving to the adjacent position in the LOAD direction
06	06	Moving to the adjacent position in the UNLOAD direction
08	08	Cassette ejection being executed / Cassette housing ejection being executed
-	0A	Mode transition to STOP with cassette ejection end
0A	0C	Cassette insertion being executed
0C	0E	Tape being loaded
0E	10	Tape being unloaded
10	12	Mode transition to STOP with pinch roller compression ON
12	14	Mode transition to STOP with pinch roller compression OFF
14	16	Mode transition to STOP with pinch roller compression OFF as a result of POWER OFF
16	18	Mode transition to STOP with pinch roller compression ON as a result of POWER ON
18	1A	Mode transition to PLAY
1A	1C	Mode transition to FWD SEARCH
1C	1E	Mode transition to REC
1E	20	Mode transition to FWD STILL / SLOW
20	22	Mode transition to REV STILL / SLOW
22	24	Mode transition to REV SEARCH
24	26	Mode transition from FF / REW to STOP
26	28	Mode transition to FF
28	2A	Mode transition to REW
2A	2C	4 sec. of REV as a result of END sensor going ON during loading
2C	2E	Short FF / REV as a result of END sensor going ON during unloading
2E	30	Mechanism position being corrected due to overrun
80	80	Mechanism in initial position (Dummy command)

[Table of HD*]

Display	Mechanism operation mode
00	STOP with pinch roller pressure off
01	STOP with pinch roller pressure on
02	U/L STOP (or tape being loaded)
04	PLAY
05	PLAY (x1-speed playback using JOG)
0E	REC
11	Cassette ejected
22	FF
26	FWD SEARCH (variable speed) including x2-speed
2E	INSERT REC
43	REW
47	REV SEARCH
4C	AUDIO DUB
6E	INSERT REC (VIDEO + AUDIO)
84	FWD STILL/SLOW
85	REV STILL/SLOW
8F	REC PAUSE
AF	INSERT REC PAUSE
C7	REV SEARCH (x1-speed reverse playback using JOG)
CD	AUDIO DUB PAUSE
EF	INSERT REC (VIDEO + AUDIO) PAUSE
F0	Mechanism being initialized
F1	POWER OFF as a result of EMG
F2	Cassette being inserted
F3	Cassette being ejected
F4	Transition from STOP with pinch roller pressure on to STOP with pinch roller pressure off
F5	Transition from STOP with pinch roller pressure on to PLAY
F6	Transition from STOP with pinch roller pressure on to REC
F7	Cassette type detection SEARCH before FF/REW is being executed
F8	Tape being unloaded
F9	Transition from STOP with pinch roller pressure off to STOP with pinch roller pressure on
FA	Transition from STOP with pinch roller pressure off to FF/REW
FB	Transition from STOP with pinch roller pressure off to REC.P (T.REC,etc.)
FC	Transition from STOP with pinch roller pressure off to cassette type detection SEARCH
FD	Short REV being executed after END sensor on during unloading
FE	Tension loosening being executed after tape loading (STOP with pinch roller pressure on)

3- : Mechanism sensor information
[Common table of MN*, HD* and M3*]

Display	Mechanism sensor information				
	MN* / HD* S-VHS SW	M3* CASS SW	REC safety SW	Start sensor	End sensor
0-	VHS	Cassette insertion	Tab broken	ON	ON
1-	VHS	Cassette insertion	Tab broken	ON	OFF
2-	VHS	Cassette insertion	Tab broken	OFF	ON
3-	VHS	Cassette insertion	Tab broken	OFF	OFF
4-	VHS	Cassette insertion	Tab present	ON	ON
5-	VHS	Cassette insertion	Tab present	ON	OFF
6-	VHS	Cassette insertion	Tab present	OFF	ON
7-	VHS	Cassette insertion	Tab present	OFF	OFF
8-	S-VHS	Cassette ejection	Tab broken	ON	ON
9-	S-VHS	Cassette ejection	Tab broken	ON	OFF
A-	S-VHS	Cassette ejection	Tab broken	OFF	ON
B-	S-VHS	Cassette ejection	Tab broken	OFF	OFF
C-	S-VHS	Cassette ejection	Tab present	ON	ON
D-	S-VHS	Cassette ejection	Tab present	ON	OFF
E-	S-VHS	Cassette ejection	Tab present	OFF	ON
F-	S-VHS	Cassette ejection	Tab present	OFF	OFF

-4 : Mechanism mode position
[Common table of MN*, HD* and M3*]

Display			Mechanism mode position
MN*	HD*	M3*	
-0	-7	-	Initial value
-1	-0	-	EJECT position
-	-	-0	EJECT position (Cassette housing drive mode)
-2	-7	-	Housing operating
-	-	-1	Between EJECT and U / L STOP
-3	-1	-2	U / L STOP position
-	-	-3	Guide arm drive position
-4	-7	-4	Tape being loaded / unloaded (When the pole base is located on the front side of the position just beside the drum)
-5	-2	-5	Tape being loaded / unloaded (When the pole base is located on the rear side of the position just beside the drum)
-6	-7	-6	Pole base compressed position
-7	-3	-F	FF / REW position
-8	-7	-F	Between FF / REW and STOP with pinch roller compression ON
-9	-4	-F	STOP with pinch roller compression OFF
-A	-7	-E	Between STOP with pinch roller compression OFF and REV
-B	-5	-	REV (REV STILL / SLOW) position
-	-	-D	REV position
-	-	-C	Between REV and REV STILL / SLOW
-	-	-B	REV STILL / SLOW position
-C	-7	-	Between REV and FWD
-	-	-A	Between REV STILL / SLOW and FWD STILL / SLOW
-D	-6	-	FWD (FWD STILL / SLOW) position
-	-	-9	FWD STILL / SLOW position
-E	-7	-	Between FWD and PLAY
-	-	-8	Between FWD STILL / SLOW and PLAY
-F	-6	-7	PLAY position

Note:
• In the case of the "HD*" microprocessor, as the display is always "-7" at any intermediate position between modes, the position of transitory EMG may sometimes not be located.

1.7.5 EMG detail information <2>

The type of the cassette tape and the cassette tape winding position can be confirmed based on the figure in EMG detail information <2> .

[FDP/OSD display]

*5 : *6 : *7

- *5 : Type of the cassette tape in use <1>
- *6 : Winding position of the cassette tape in use
- *7 : Type of the cassette tape in use <2> (Winding area)

Note:

• **EMG detail information <2> is the reference information stored using the remaining tape detection function of the cassette tape. As a result, it may not identify cassette correctly when a special cassette tape is used or when the tape has variable thickness.**

***5 : Cassette tape type <1>**

Display	Cassette tape type <1>
00	Cassette type not identified
16	Large reel/small reel (T-0 to T-15/T-130 to T-210) not classified
82	Small reel, thick tape (T-120) identified/thin tape (T-140) identified
84	Large reel (T-0 to T-60) identified
92	Small reel, thick tape (T-130) identified/thin tape (T-160 to T-210) identified
93	Small reel, thick tape/C cassette (T-0 to T-100/C cassette) not classified
C3	Small reel, thick tape/C cassette (T-0 to T-100/C cassette) being classified
D3	Small reel, thick tape/C cassette (T-0 to T-100/C cassette) being classified
E1	C cassette, thick tape (TC-10 to TC-20) identified
E2	Small reel, thick tape (T-0 to T-100) identified
E9	C cassette, thin tape (TC-30 to TC-40) identified
F1	C cassette, thick tape/thin tape (TC-10 to TC-40) not classified

Notes:

• **Cassette tape type <1> is identified a few times during mode transition and the identification count is variable depending on the cassette tape type. If an EMG occurs in the middle of identification, the cassette tape type may not be able to be identified.**
 • **If other value than those listed in the above table is displayed, the cassette tape type is not identified.**

***6 : Cassette tape winding position**

The cassette tape winding position at the moment of EMG is displayed by dividing the entire tape (from the beginning to the end) in 22 sections using a hex number from "00" to "15".

- "00" : End of winding
- "15" : Beginning of winding
- "FF or --" : Tape position not identified

***7 : Cassette tape type <2> (Winding area)**

Display	Cassette tape type <2>
00	Cassette type not identified
07	Small reel, thick tape T-5
08 - 0E	C cassette, thick tape TC-10
09 - 15	C cassette, thick tape TC-20P
0A - 0B	Small reel, thick tape T-20
0A - 16	C cassette, thin tape TC-30
0A - 16	C cassette, thin tape TC-40
0D - 0F	Small reel, thick tape T-40
11 - 14	Small reel, thick tape T-60
15 - 18	Small reel, thick tape T-80 / DF-160
17 - 1A	Small reel, thick tape T-90 / DF-180
19 - 1D	Small reel, thick tape T-100
1D - 21	Small reel, thick tape T-120 / DF-240
1E - 1F	Small reel, thin tape T-140
1F - 23	Small reel, thick tape T-130
21 - 23	Small reel, thin tape T-160
21 - 23	Small reel, thin tape T-168
22 - 24	Small reel, thick tape DF-300
22 - 24	Small reel, thin tape T-180 / DF-360
22 - 24	Small reel, thin tape T-210 / DF-420
22 - 23	Large reel T-5
23 - 24	Large reel T-10
25 - 26	Large reel T-20
27 - 29	Large reel T-30
29 - 2B	Large reel T-40
2D - 2F	Large reel T-60

Note:

• **The values of cassette tape type <2> in the above table are typical values with representative cassette tapes.**

SECTION 2 MECHANISM ADJUSTMENT

2.1 Before starting repair and adjustment

2.1.1 Precautions

- (1) Unplug the power cord plug of the VCR before using your soldering iron.
- (2) Take care not to cause any damage to the conductor wires when plugging and unplugging the connectors.
- (3) Do not randomly handle the parts without identifying where the trouble is.
- (4) Exercise enough care not to damage the lugs, etc. during the repair work.
- (5) When reattaching the front panel assembly, make sure that the door opener of the cassette holder assembly is lowered in position prior to the reinstallation. (See SECTION 1 DISASSEMBLY.)
- (6) When using the Jig RCU, it is required to set the VCR to the Jig RCU mode (the mode in which codes from the Jig RCU can be received). (See SECTION 1 DISASSEMBLY.)

2.1.2 Checking for proper mechanical operations

Enter the mechanism service mode when you want to operate the mechanism when no cassette is loaded. (See SECTION 1 DISASSEMBLY.)

2.1.3 Manually removing the cassette tape

1. In case of electrical failures

If you cannot remove the cassette tape which is loaded because of any electrical failure, manually remove it by taking the following steps.

- (1) Unplug the power cord plug from the power outlet.
- (2) Refer to the disassembly procedure and perform the disassembly of the major parts before removing the drum assembly.
- (3) Unload the pole base assembly by manually turning the loading motor of the mechanism assembly toward the front. In doing so, hold the tape by the hand to keep the slack away from any grease. (See Fig.2-1-3a.)
- (4) Bring the pole base assembly to a pause when it reaches the position where it is hidden behind the cassette tape.
- (5) Move the top guide toward the drum while holding down the lug (A) of the bracket retaining the top guide. Likewise hold part (B) down and remove the top guide. Section (C) of the top guide is then brought under the cassette lid. Then remove the top guide by pressing the whole cassette tape down. (See Fig.2-1-3b.)
- (6) Remove the cassette tape by holding both the slackened tape and the cassette lid.
- (7) Take up the slack of the tape into the cassette. This completes removal of the cassette tape.

Note:

- For the disassembly procedure of the major parts and details of the precautions to be taken, see "SECTION 1 DISASSEMBLY".

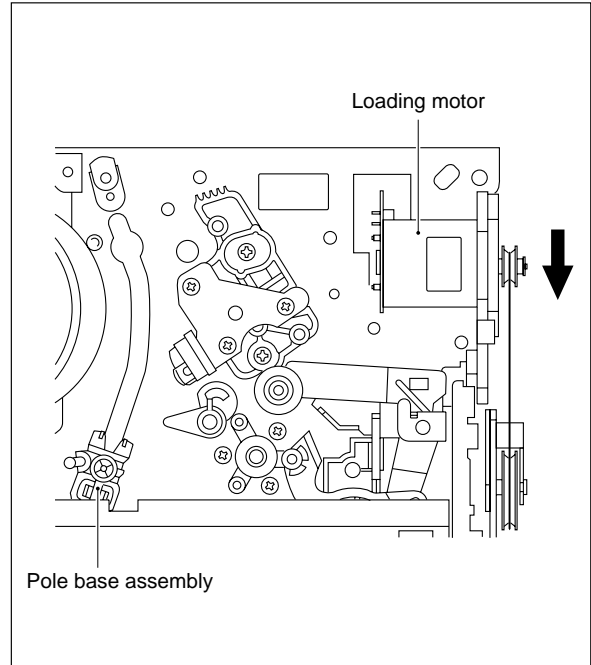


Fig. 2-1-3a

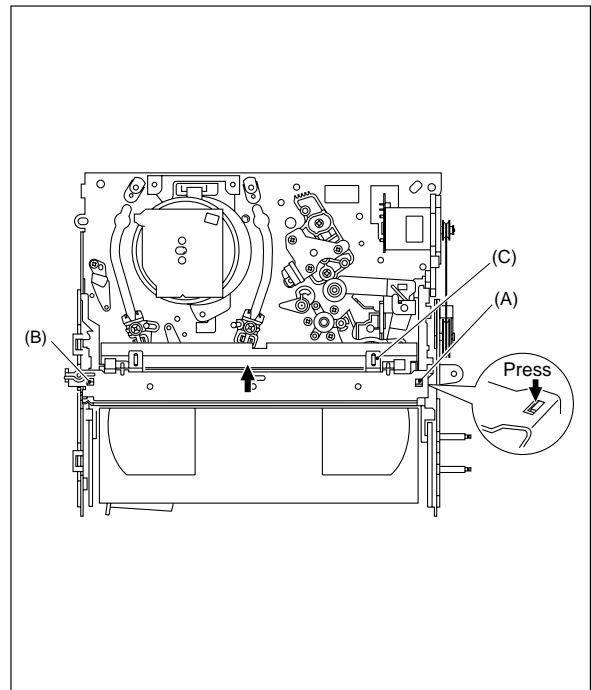









Fig. 2-1-3b

2. In case of mechanical failure

If you cannot remove the cassette tape which is loaded because of any mechanical failure, manually remove it by taking the following steps.

- (1) Unplug the power cable and remove the top cover, front panel assembly and others so that the mechanism assembly is visible. (See SECTION 1 DASSEMBLY.)
- (2) While keeping the tension arm assembly of the mechanism assembly free from tension, pull the tape on the pole base assembly (supply or take-up side) out of the guide roller. (See Fig.2-1-3c.)
- (3) Take the spring of the pinch roller arm assembly off the hook of the press lever assembly, and detach it from the tape. (See Fig.2-1-3d.)
- (4) In the same way as in the electrical failure instructions in 2.1.3-1(5), remove the top guide.
- (5) Raise the cassette tape cover. By keeping it in that position, draw out the cassette tape case from the cassette holder and take out the tape.
- (6) By hanging the pinch roller arm assembly spring back on the hook, take up the slack of the tape into the cassette.

2.1.4 Jigs and tools required for adjustment

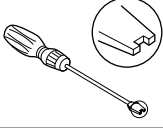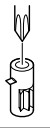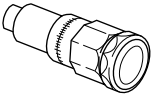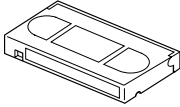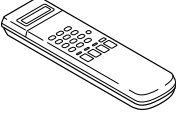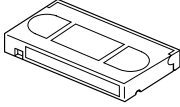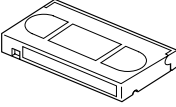Roller driver PTU94002	A/C head positioning tool PTU94010	Torque gauge PUJ48075-2
		
Back tension cassette gauge PUJ48076-2	Jig RCU PTU94023B	
		
Alignment tape (SP, stairstep, PAL) MHPE	Alignment tape (LP, stairstep, PAL) MHPE-L	
		

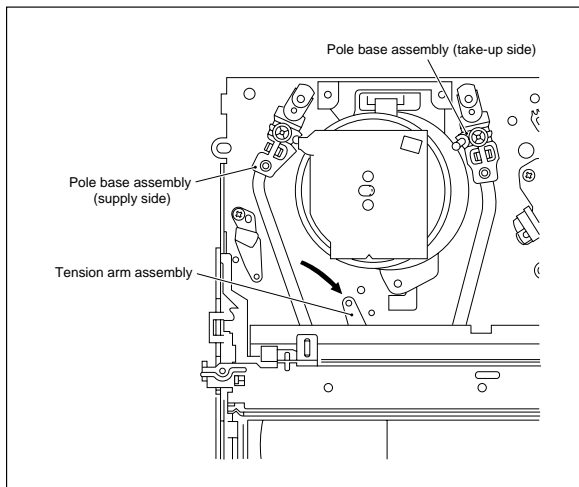


Fig. 2-1-3c

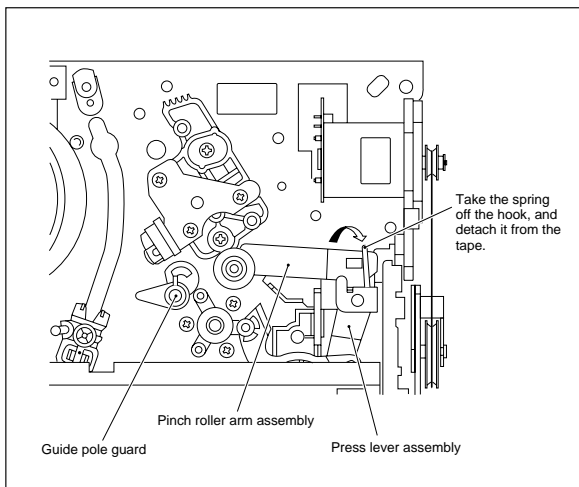


Fig. 2-1-3d

2.1.5 Maintenance and inspection

1. Location of major mechanical parts

In this chapter, the two mechanism speeds are described by comparing the speeds of the standard type and the high-speed FF/REW type.

It is possible to distinguish between these two types of mechanism by the diameters of their capstan pulleys.

The capstan pulley diameter for the standard type is approx. 32 mm.

The capstan pulley diameter for the high-speed FF/REW type is approx. 43 mm.

For information on the different parts used in the two mechanism types, please refer to the "Replacement of major parts".

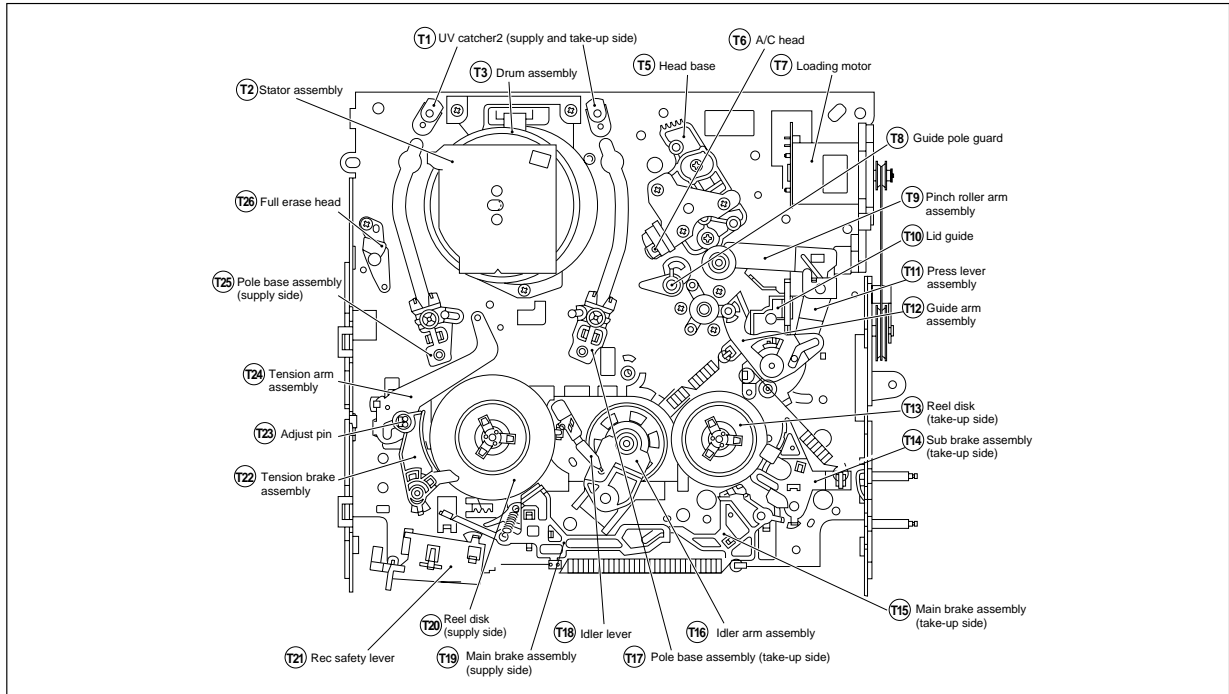


Fig. 2-1-5a Mechanism assembly top side

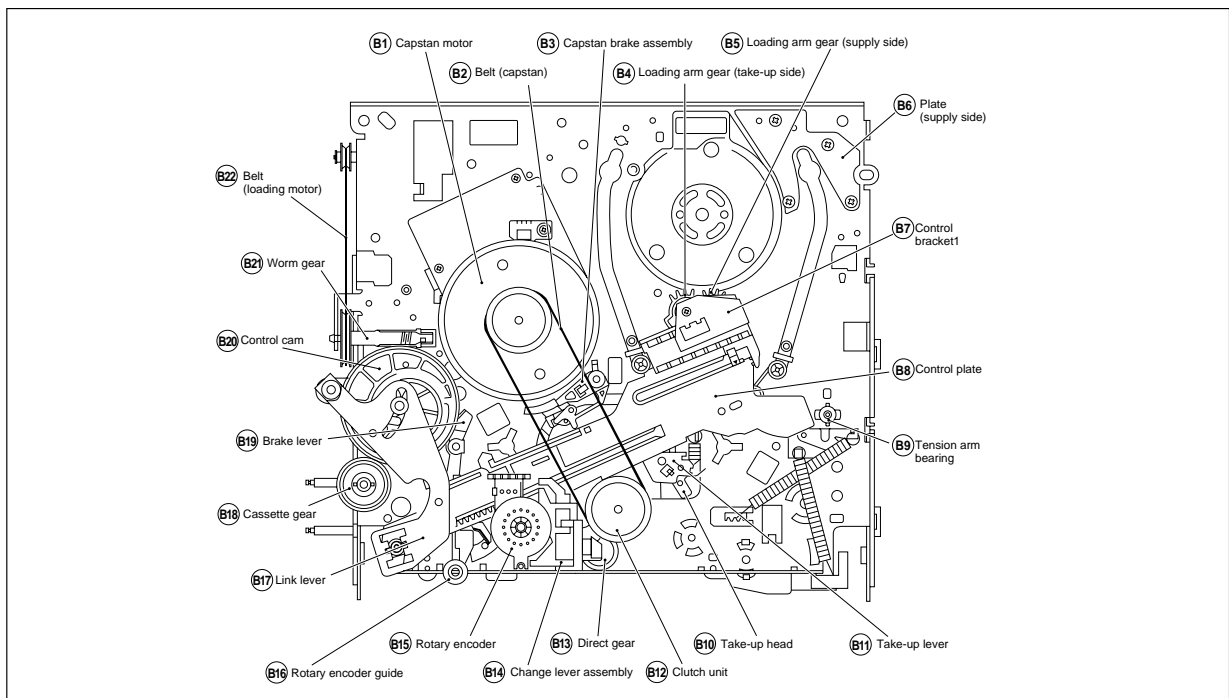


Fig. 2-1-5b Mechanism assembly bottom side

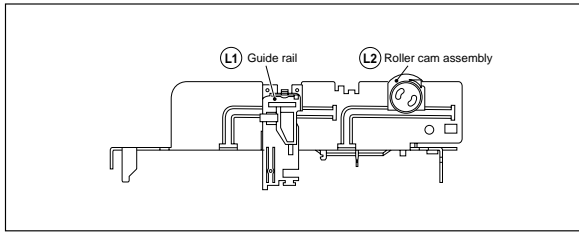


Fig. 2-1-5c Mechanism assembly left side

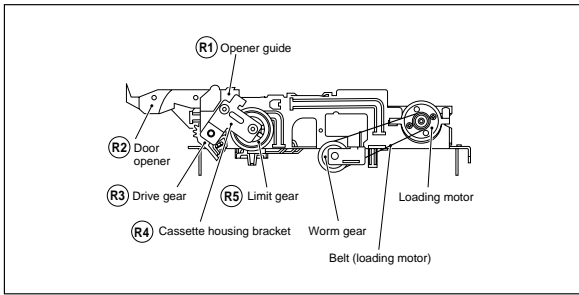


Fig. 2-1-5d Mechanism assembly right side

2. Cleaning

Regular cleaning of the transport system parts is desirable but practically impossible. So make it a rule to carry out cleaning of the tape transport system whenever the machine is serviced.

When the video head, tape guide and/or brush get soiled, the playback picture may appear inferior or at worst disappear, resulting in possible tape damage.

- (1) When cleaning the upper drum (especially the video head), soak a piece of closely woven cloth or Kimu-wipe with alcohol and while holding the cloth onto the upper drum by the fingers, turn the upper drum counterclockwise.

Note:

- **Absolutely avoid sweeping the upper drum vertically as this will cause damage to the video head.**

- (2) To clean the parts of the tape transport system other than the upper drum, use a piece of closely woven cloth or a cotton swab soaked with alcohol.
- (3) After cleaning, make sure that the cleaned parts are completely dry before using the video tape.

3. Lubrication

With no need for periodical lubrication, you have only to lubricate new parts after replacement. If any oil or grease on contact parts is soiled, wipe it off and newly lubricate the parts.

Note:

- **See the "mechanism assembly" diagram of the parts list for the lubricating or greasing spots, and for the types of oil or grease to be used.**

4. Suggested servicing schedule for main components

The following table indicates the suggested period for such service measures as cleaning, lubrication and replacement. In practice, the indicated periods will vary widely according to environmental and usage conditions. However, the indicated components should be inspected when a set is brought for service and the maintenance work performed if necessary. Also note that rubber parts may deform in time, even if the set is not used.

System	Parts Name	Operation Hours	
		~1000H	~2000H
Tape transport	Upper drum assembly	★○	○
	A/C head	★○	★○
	Lower drum assembly	★	★○
	Pinch roller arm assembly	★	★
	Full erase head	★	★
	Tension arm assembly	★	★
	Capstan motor (Shaft)	★	★
	Guide arm assembly	★	★
	Drive	Capstan motor	
Capstan brake assembly			○
Main brake assembly			○
Belt (Capstan)		○	○
Belt (Loading motor)			○
Loading motor			○
Clutch unit			○
Worm gear			○
Other	Control plate		○
	Brush	★○	★○
	Tension brake assembly	○	○
	Rotary encoder		○

★ : Cleaning

○ : Inspection or replacement if necessary

Table 2-1-5a

5. Disassembling procedure table

The following table indicates the order in which parts are removed for replacement. To replace parts, remove them in the order of 1 to 18 as shown in the table. To install them, reverse the removal sequence.

The symbols and numbers preceding the individual part names represent the numbers in the "Location of major mechanical parts" table. Also, the "T", "B", and "T/B" on the right of each part name shows that the particular part is removed from the front, from the back, and from both sides of the mechanism, respectively.

Symbols and numbers	Symbols and numbers		Front (T)/Back (B) of mechanism	Number of removal steps	L1	L2	R4	R1	-	-	R3	-	T9	T12	T11	T1	B15	B12	B14	B13	-	B17	B21	B7	B8	B5	B4	B11	T14	T15	T13	T22	T24	T18	B19			
	Removal parts	(Reference items) Replacement parts																																				
L1	2.2.3	Guide rail	T	1																																		
L2	2.2.3	Roller cam assembly	T	1																																		
R4	2.2.3	Cassette housing bracket	T	1																																		
R1	2.2.3	Opener guide	T	2			1																															
R2	2.2.3	Door opener	T	3			1	2																														
-	2.2.3	Relay gear	T	3			1	2																														
R5	2.2.3	Limit gear	T	3			1	2																														
-	2.2.3	Cassette holder assembly	T	6	1	2	3	4	5																													
R3	2.2.3	Drive gear	T	4			1	2	3																													
-	2.2.3	Drive arm	T	8	1	2	3	4	5	6	7																											
T9	2.2.4	Pinch roller arm assembly	T	1																																		
T12	2.2.5	Guide arm assembly	T	1																																		
T11	2.2.5	Press lever assembly	T	3									1	2																								
T6	2.2.6	A/C head	T	1																																		
T7	2.2.7	Loading motor	T	1																																		
B1	2.2.8	Capstan motor	T/B	1																																		
T1	2.2.9	UV catcher2	T	1																																		
T17	2.2.9	Pole base assembly (take-up side)	T/B	2												1																						
T25	2.2.9	Pole base assembly (supply side)	T/B	2												1																						
B15	2.2.10	Rotary encoder	B	1																																		
B12	2.2.11	Clutch unit	B	1																																		
B14	2.2.12	Change lever assembly	B	3													1	2																				
B13	2.2.12	Direct gear	B	4													1	2	3																			
-	2.2.12	Coupling gear	B	5													1	2	3	4																		
-	2.2.12	Clutch gear	B	6													1	2	3	4	5																	
B17	2.2.13	Link lever	B	1																																		
B18	2.2.14	Cassette gear	B	2																			1															
B20	2.2.14	Control cam	B	2																			1															
B21	2.2.14	Worm gear	B	1																																		
T10	-	Lid guide	T/B	5									1	2	3								4															
B7	2.2.15	Control bracket1	B	1																																		
B8	2.2.15	Control plate	B	6													1	2	3				4		5													
B5	2.2.16	Loading arm gear (supply side)	B	7													1	2	3				4		5	6												
B4	2.2.16	Loading arm gear (take-up side)	B	8													1	2	3				4		5	6	7											
-	2.2.16	Loading arm gear shaft	B	9													1	2	3				4		5	6	7	8										
B11	2.2.17	Take-up lever	T/B	7													1	2	3				4		5	6												
B10	2.2.17	Take-up head	T/B	8													1	2	3				4		5	6			7									
-	2.2.17	Control plate guide	T/B	8													1	2	3				4		5	6			7									
B3	2.2.18	Capstan brake assembly	T/B	7													1	2	3				4		5	6												
T14	2.2.19	Sub brake assembly (take-up side)	T/B	15	1	2	3	4	5	6	7	8					9	10	11				12		13	14												
T15	2.2.20	Main brake assembly (take-up side)	T/B	16	1	2	3	4	5	6	7	8					9	10	11				12		13	14			15									
T19	2.2.20	Main brake assembly (supply side)	T/B	9	1	2	3	4	5	6	7	8																										
T13	2.2.20	Reel disk (take-up side)	T/B	16	1	2	3	4	5	6	7	8					9	10	11				12		13	14			15									
T22	2.2.21	Tension brake assembly	T/B	9	1	2	3	4	5	6	7	8																										
T20	2.2.21	Reel disk (supply side)	T/B	10	1	2	3	4	5	6	7	8																								9		
T24	2.2.21	Tension arm assembly	T/B	10	1	2	3	4	5	6	7	8																									9	
B9	2.2.21	Tension arm bearing	T/B	10	1	2	3	4	5	6	7	8																									9	
T18	2.2.22	Idler lever	T/B	17	1	2	3	4	5	6	7	8					9	10	11				12		13	14									15	16		
T16	2.2.22	Idler arm assembly	T/B	18	1	2	3	4	5	6	7	8					9	10	11				12		13	14									15	16	17	
B19	-	Brake lever (*1)	T/B	18	1	2	3	4	5	6	7	8					9	10	11				12		13	14								15	16	17		
B16	-	Rotary encoder guide	T/B	19	1	2	3	4	5	6	7	8					9	10	11				12		13	14											18	

Table 2-1-5b

Note:

• **The parts with marked (*) have different types of mechanisms (standard type or high-speed FF/REW type).**

• *** 1 : Uses the standard type mechanism only.**

• *** 2 : Uses the high-speed FF/REW type mechanism only.**

2.2 Replacement of major parts

2.2.1 Before starting disassembling (Phase matching between mechanical parts)

The mechanism of this unit is closely linked with the rotary encoder and system controller circuits.

Since the system controller detects the status of mechanical operation in response to phases of the rotary encoder (internal switch positions), the mechanism may not operate properly unless such parts as the rotary encoder, control plate, loading arm gear, control cam, cassette gear, limit gear, relay gear and drive gear are installed in their correct positions.

Especially, this model is not provided with any cassette housing assembly, so that cassette loading and unloading must be accomplished by operation of the cassette holder assembly. The latter is in turn driven by such parts as the drive gear, relay gear and limit gear. Exercise enough care, therefore, to have the phases of all this gear matching one another. (For information on phase matching of the mechanism, see the instructions on how to install individual parts.)

This unit is provided with a mechanism assembly mode. It is therefore necessary to enter this mode for assembling and disassembling procedures.

This mode is usually not in use, manually set it when it is required.

2.2.2 How to set the "Mechanism assembling mode"

Remove the mechanism assembly and place it bottom side up. (See SECTION 1 DISASSEMBLY.) Turn the worm gear toward the front so that the guide hole of the control cam is brought into alignment with the hole at the mechanism assembly chassis. This position renders the mechanism assembling mode operational. Make sure that the control plate is located in alignment with the mark E. (See Fig.2-2-2a.)

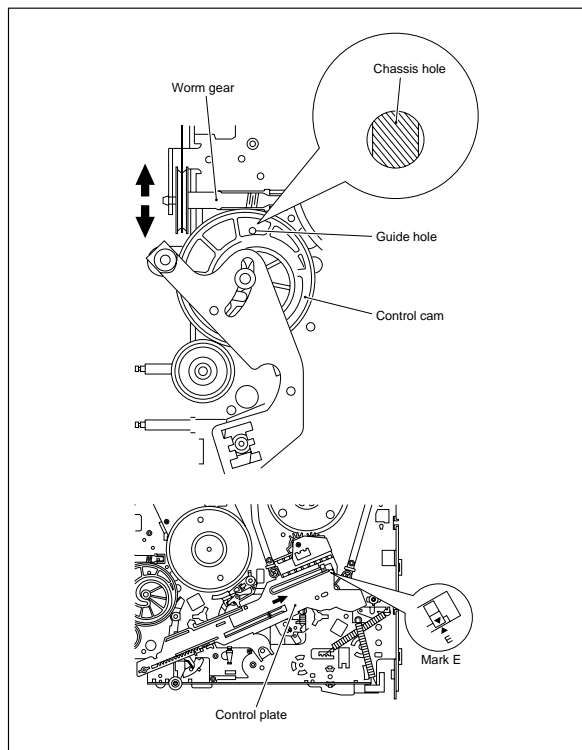


Fig. 2-2-2a

2.2.3 Cassette holder assembly

1. How to remove

(1) Remove the guide rail and roller cam assembly. (See Fig.2-2-3a.)

(3 lugs on the guide rail and one lug on the roller cam assembly)

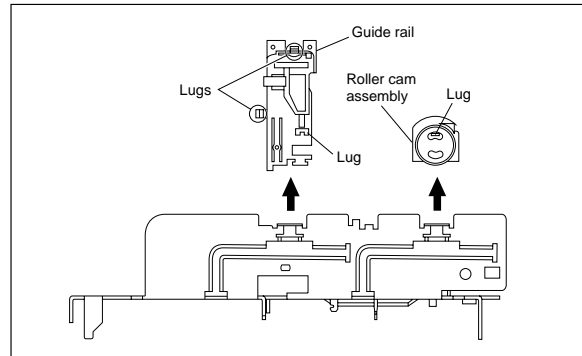


Fig. 2-2-3a

(2) Remove the two slit washers and remove the cassette housing bracket. (See Fig.2-2-3b.)

(3) Remove the opener guide, spring(A), door opener, relay gear and limit gear. (See Fig.2-2-3b.)

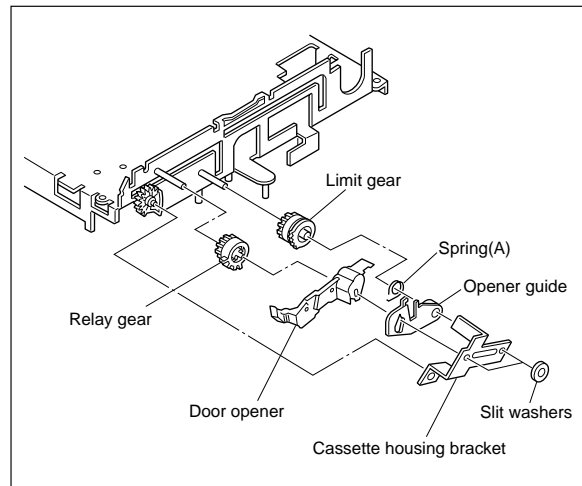


Fig. 2-2-3b

(4) While swinging the lock levers (R) and (L) of the cassette holder assembly toward the front, slide the cassette holder assembly until its legs come to where the guide rail and the roller cam assembly have been removed (so that the drive arm is upright). (See Fig.2-2-3c.)

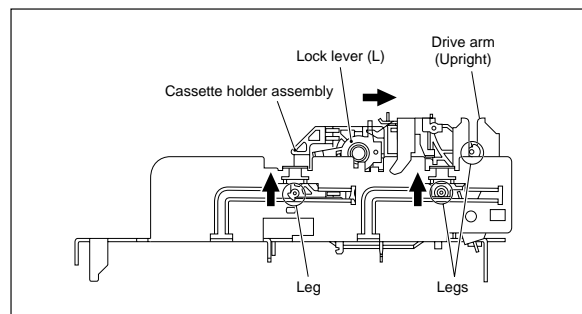


Fig. 2-2-3c

- (5) While holding the left side of the cassette holder, lift the cassette holder assembly so that the three legs on the left side are all released. Then pull the legs (A) and (B) on the right side out of the rail and also pull up the leg(C). (See Fig.2-2-3d and Fig.2-2-3e.)
- (6) Draw out the drive gear, and remove the drive arm.

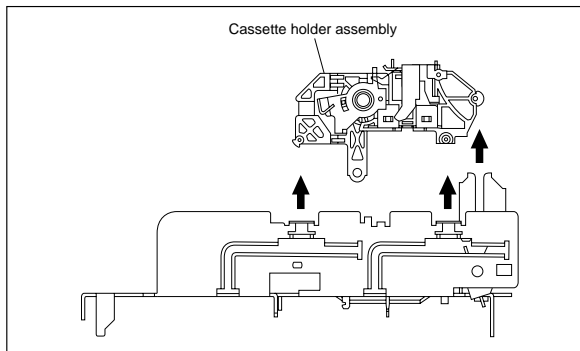


Fig. 2-2-3d

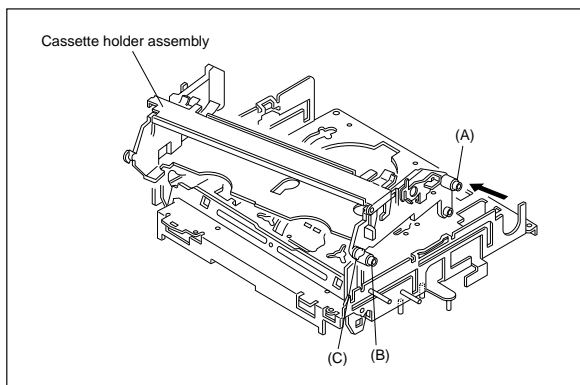


Fig. 2-2-3e

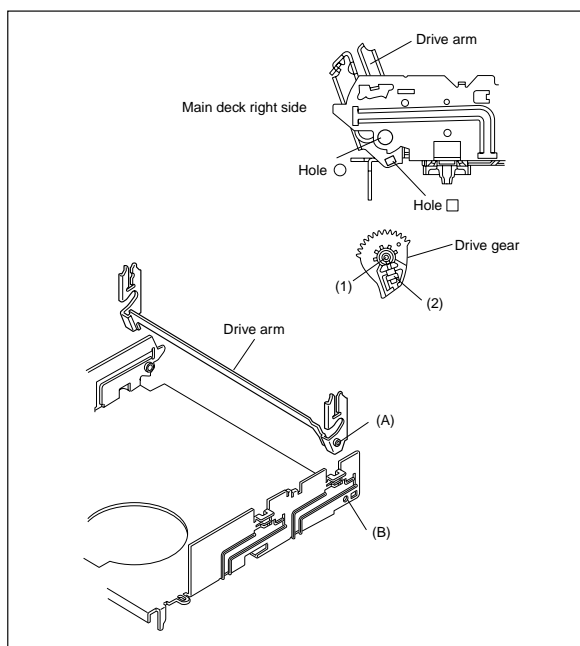


Fig. 2-2-3f

2. How to install (Phase matching)

- (1) Insert the section (A) of the drive arm into the section (B) of the main deck.
- (2) Insert the section (1) of the drive gear into the round hole, and the section (2) into the square hole on the drive arm. (See Fig.2-2-3f.)
- (3) Hold the drive arm upright and fit the leg (C) on the right side of the cassette holder assembly into the groove. (See Fig.2-2-3g.)
- (4) While swinging the lock lever (R) of the cassette holder assembly toward the front, put the legs (A) and (B) into the rail. (See Fig.2-2-3g.)
- (5) Drop the three legs on the left side of the cassette holder assembly into the groove at one time. (See Fig.2-2-3h.)
- (6) Slide the whole cassette holder assembly toward the front to bring it to the eject end position.
- (7) Install the limit gear so that the notch on the outer circumference of the limit gear is brought into alignment with the guide hole on the main deck. (See Fig.2-2-3i.)
- (8) Install so that the notch on the periphery of the relay gear is aligned with the notch of the main deck and that hole A of the relay gear is aligned with the hole A of the limit gear and that hole B of the relay gear is aligned with the hole B of the drive gear. (See Fig.2-2-3i.)
- (9) Install the door opener, opener guide, spring(A) and cassette housing bracket and fasten the two slit washers.

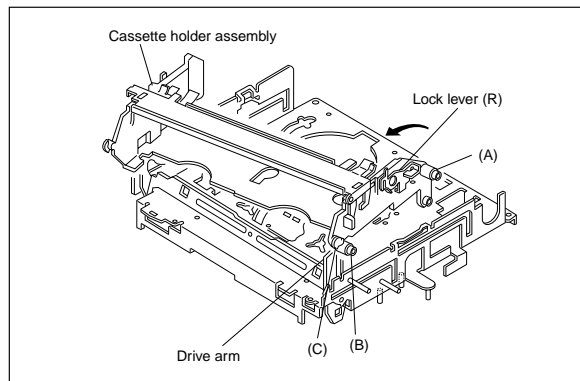


Fig. 2-2-3g

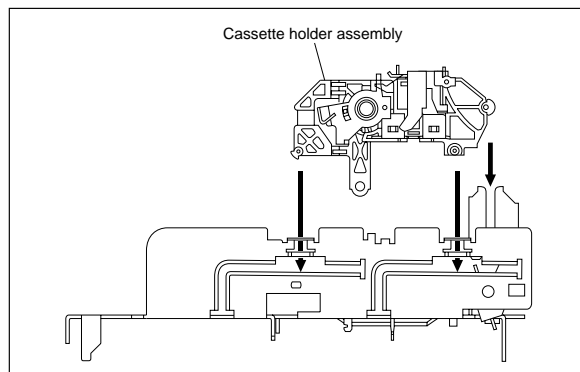


Fig. 2-2-3h

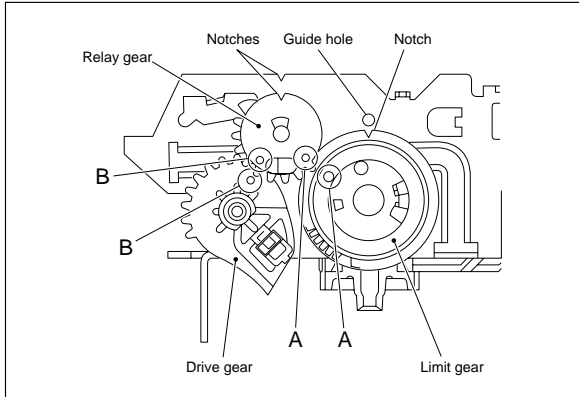


Fig. 2-2-3i

2.2.4 Pinch roller arm assembly

1. How to remove

- (1) Remove the spring from the hook of the press lever assembly.
- (2) Remove the slit washer and remove the pinch roller seat 2. (See Fig.2-2-4a.)
- (3) Remove the pinch roller arm assembly by pulling it up.

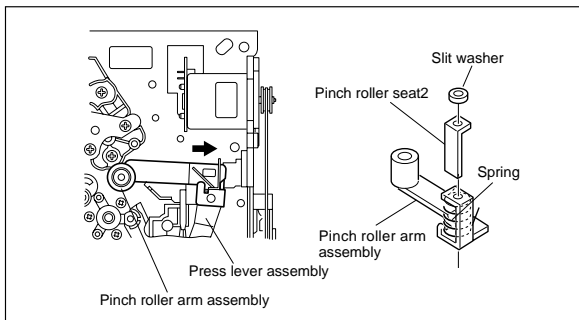


Fig. 2-2-4a

2.2.5 Guide arm assembly and press lever assembly

1. How to remove

- (1) Remove the spring and expand the lug of the lid guide in the arrow-indicated direction. Then remove the guide arm assembly by pulling it up.
- (2) Remove the press lever assembly by pulling it up. (See Fig.2-2-5a.)

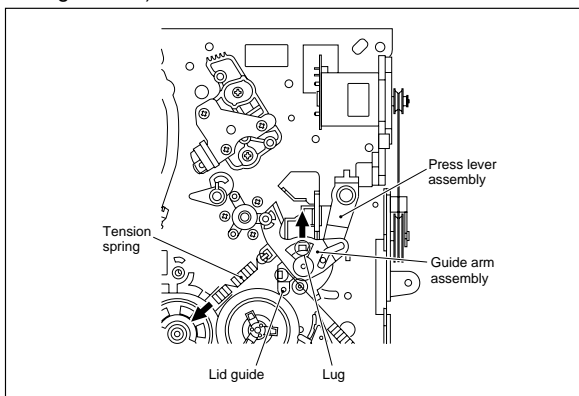


Fig. 2-2-5a

2.2.6 A/C head

1. How to remove

- (1) Remove the two screws (A) and remove the A/C head together with the head base.
- (2) When replacing only the A/C head, remove the three screws (B) while controlling the compression spring.

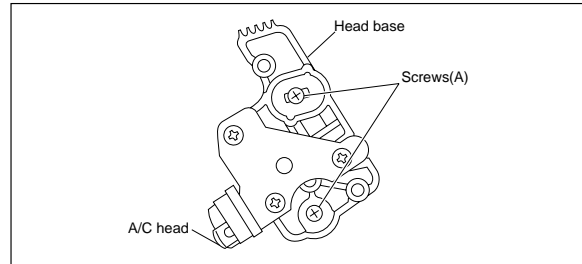


Fig. 2-2-6a

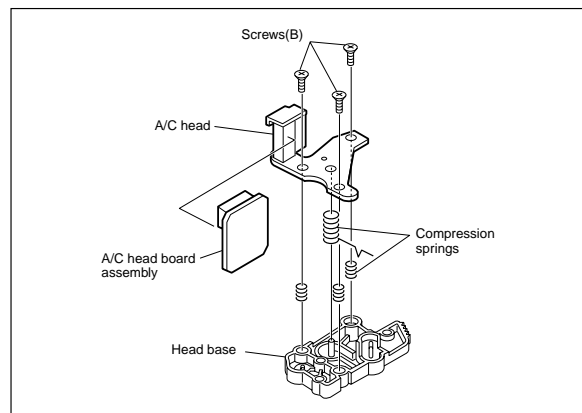


Fig. 2-2-6b

2. How to install

- (1) To make the post-installation adjustment easier, set the temporary level as indicated in Fig.2-2-6c. Also make sure that the screw center (centre) is brought into alignment with the center (centre) position of the slot.

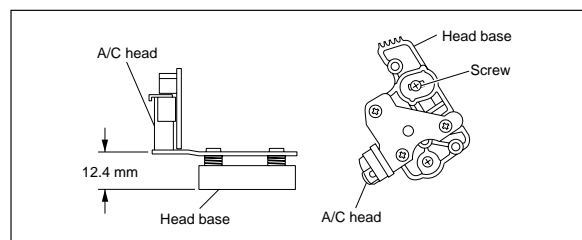


Fig. 2-2-6c

2.2.7 Loading motor

1. How to remove

- (1) Remove the belt wound around the worm gear.
- (2) Open the two lugs of the motor guide and remove the loading motor, loading motor board assembly and motor guide altogether by pulling them up.
- (3) When replacing the loading motor board assembly, take care with the orientation of the loading motor. (Install so that the loading motor label faces upward.)
- (4) When the motor pulley has been replaced, choose the fitting dimension as indicated in Fig.2-2-7a.

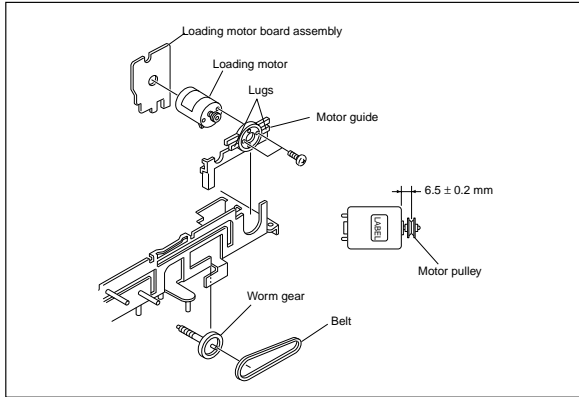


Fig. 2-2-7a

2.2.8 Capstan motor

1. How to remove

- (1) Remove the belt (capstan) on the mechanism assembly back side.
- (2) Remove the three screws (A) and remove the capstan motor.

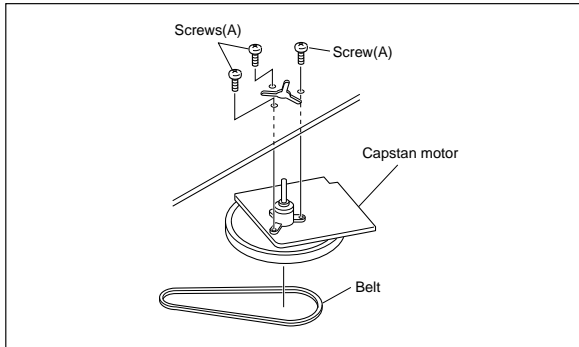


Fig. 2-2-8a

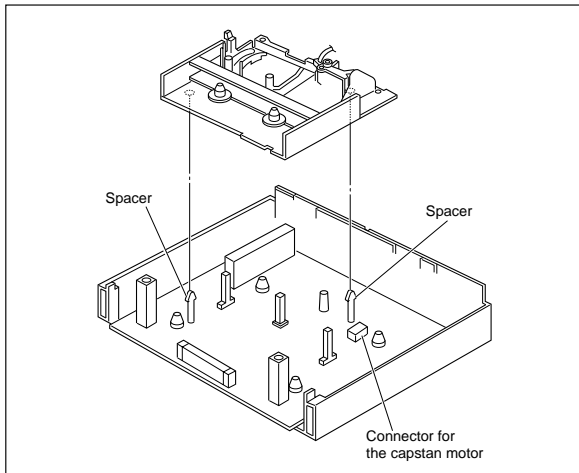


Fig. 2-2-8b

2. How to install (Centering the mounting position)

When the capstan motor has once been removed and then reinstalled out of the initial correct position in the rotational direction, the capstan motor current may be unstable during operation in high or low temperatures. This may result in greater Wow & Flutter and occasionally in power breakdown because of current over - load. Install the capstan motor while following the procedure given below.

(The capstan motor is centrally located when the unit is shipped from the factory.)

- (1) Provisionally tighten the three screws (A) securing the capstan motor.
- (2) Install the mechanism assembly to which the capstan motor is provisionally fastened on the bottom chassis which incorporates the Main board assembly. (No need to tighten the screws for mounting the mechanism.)
Make sure that all the connectors for the mechanism assembly and the Main board assembly are correctly installed as indicated in Fig. 2-2-8b.
- (3) Making sure that the connector for the capstan motor is correctly mounted, and securely tighten the three screws (A).

Note:

- **When the capstan motor has been replaced with a new one, perform recording in the EP(or LP) mode for at least 2 minutes at normal temperatures immediately before starting the FF/REW or SEARCH operations (Aging).**

2.2.9 Pole base assembly (supply or take-up side)

1. How to remove

- (1) Remove the UV catcher 2 on the removal side by loosening the screw (A).
- (2) Remove the pole base assembly on the supply side from the mechanism assembly by loosening the screw (B) on the mechanism assembly back side and sliding the pole base assembly toward the UV catcher 2.
- (3) As for the pole base assembly on the take-up side, turn the pulley of the loading motor to lower the cassette because the screw (B) is hidden under the control plate. (See the "Procedures for Lowering the Cassette holder assembly" of 1.3 DISASSEMBLY/ASSEMBLY METHOD.) Further turn the motor pulley to move the cassette holder until the screw (B) is no longer under the control plate (in the half-loading position). Then remove it as done for the supply side by removing the screw (B).

Note:

- **After reinstalling the Pole base assembly and the UV catcher2, be sure to perform compatibility adjustment.**

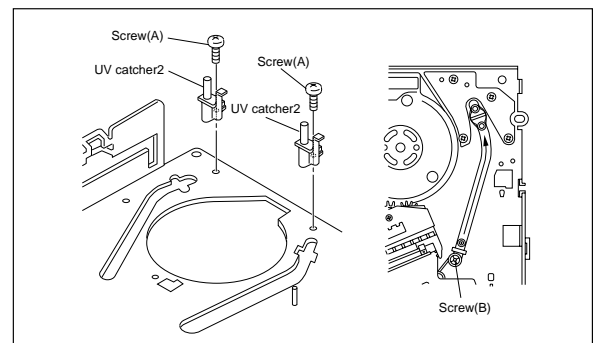


Fig. 2-2-9a

2.2.10 Rotary encoder

1. How to remove

- (1) Remove the screw (A) and remove the rotary encoder by pulling it up. (See Fig. 2-2-10a.)

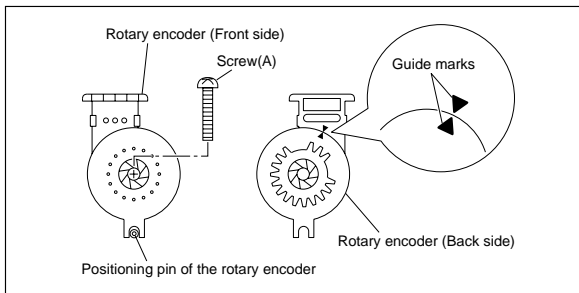


Fig. 2-2-10a

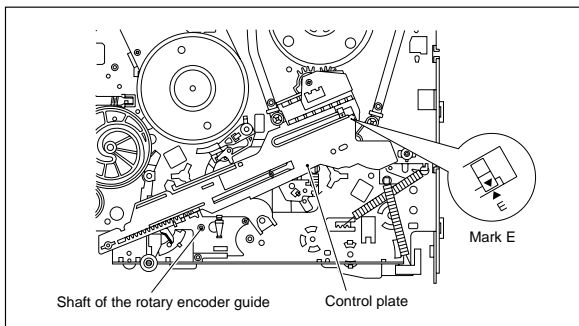


Fig. 2-2-10b

2. How to install (Phase matching)

- (1) Make sure that the mark E of the control plate is in alignment with the mark ▼ of the loading arm gear shaft and bring the guide marks on the rotary encoder into alignment as indicated in Fig.2-2-10a. (See Fig. 2-2-10a and Fig. 2-2-10b.)
- (2) Turn over the rotary encoder with its guide marks kept in alignment and install it by fitting on the shaft of the rotary encoder guide and the positioning pin.
- (3) Tighten the screw (A) to complete the installation.

2.2.11 Clutch unit

- (1) Remove the belt wound around the capstan motor and the clutch unit.
- (2) Remove the slit washer and remove the clutch unit.

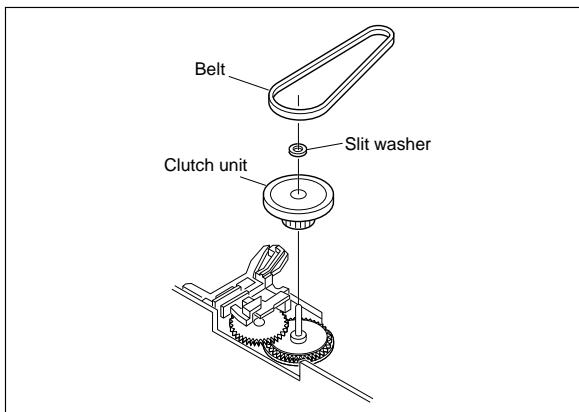


Fig. 2-2-11a

2.2.12 Change lever assembly, direct gear, clutch gear and coupling gear

1. How to remove

- (1) Release the two lugs of the rotary encoder guide in the arrow-indicated direction and remove the change lever assembly.
- (2) Remove the slit washer retaining the direct gear and remove the latter.
Take care so as not to lose the washer and spring. (See Fig.2-2-12a.)

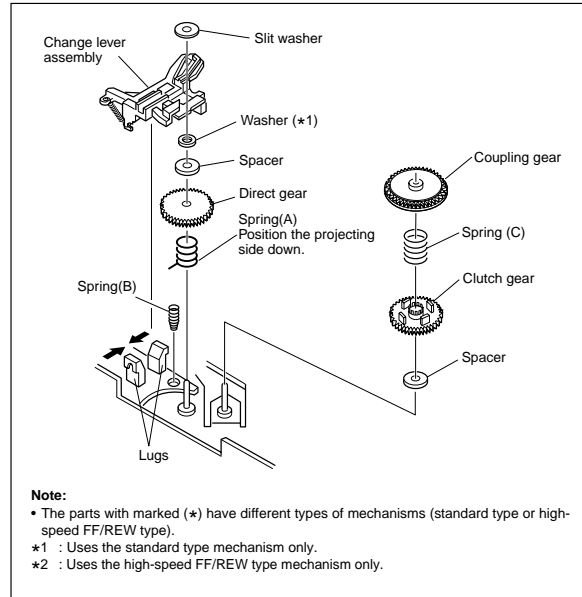


Fig. 2-2-12a

2. How to install

- (1) Install the clutch gear, spring (A), spring (C), direct gear, spacer and others to the individual shafts of the main deck, and finally the slit washer. (See Fig.2-2-12a.)
- (2) Let the spring (B) drops into the rotary encoder guide hole and install the change lever assembly. (Take care not to mistake a direction of the spring.) The point is to slightly lift the coupling gear and catch it from the both sides with the assembly. (See Fig.2-2-12b.)

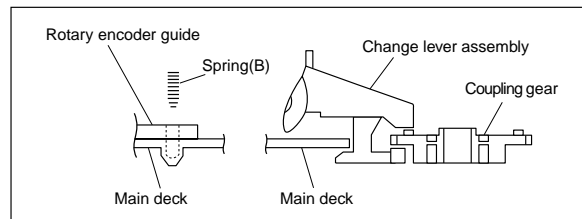


Fig. 2-2-12b

2.2.13 Link lever

1. How to remove

- (1) Remove the two slit washers.
- (2) Remove the link lever by lifting it from the shaft retained by the slit washers. Then swing the link lever counterclockwise and remove it from the locking section of the control plate.

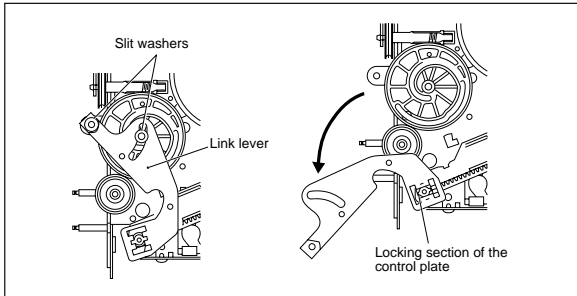


Fig. 2-2-13a

2. How to install (Phase matching)

- (1) Slide the control plate so that its mark E is aligned with the mark ▼ on the loading arm gear shaft. (See Fig.2-2-13b.)
- (2) Rotate the worm gear until the guide hole of the control cam is aligned exactly with the guide hole of the main deck. (See Fig.2-2-13c.)
- (3) Insert the link lever into the locking section of the control plate. (See Fig.2-2-13a.)
- (4) Rotate the link lever clockwise so that it is installed on the shafts in the center (centre) and on the left of the control cam.
- (5) Fasten the slit washers at these two points.

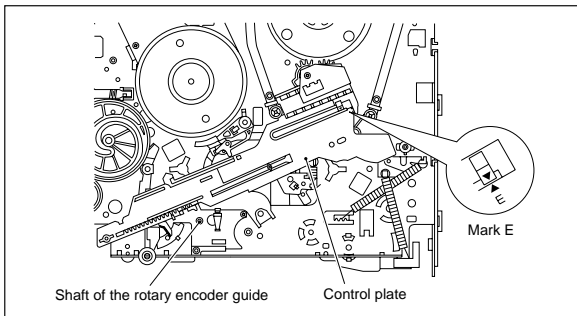


Fig. 2-2-13b

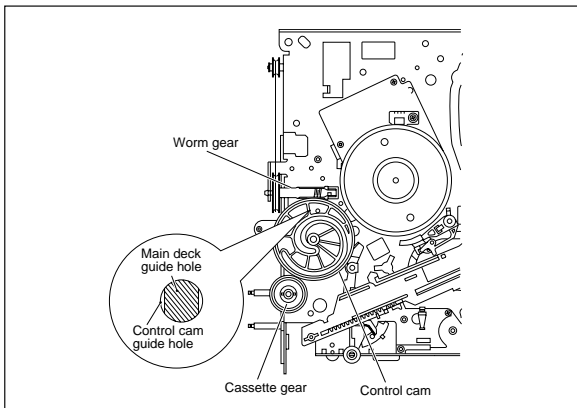


Fig. 2-2-13c

2.2.14 Cassette gear, control cam and worm gear

1. How to remove

- (1) Remove the control cam by lifting it.
- (2) Open the two lugs of the cassette gear outward and pull the latter off.
- (3) Remove the belt wound around the worm gear and the loading motor.
- (4) Open the lug of the lid guide outward and remove the worm gear.

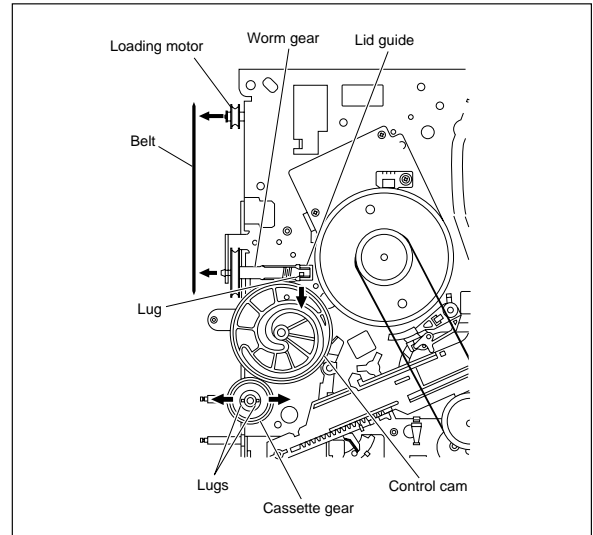


Fig. 2-2-14a

2.2.15 Control plate

1. How to remove

- (1) Remove the screw (A) retaining the control bracket 1 and remove the latter.
- (2) Slide the control plate as indicated by the arrow and remove the control plate. (See Fig.2-2-15a.)

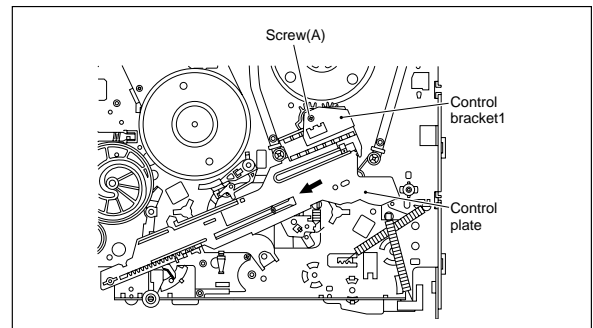


Fig. 2-2-15a

2. How to install (Phase matching)

- (1) Adjust the position of the idler arm assembly pin as indicated in Fig.2-2-15b (to the left of center (centre) of the R section).
- (2) Bring the guide hole of the take-up lever into alignment with the hole at the control plate guide and fix the position by inserting a 1.5 mm hexagonal wrench.

- (3) Install the control plate so that the section A of the loading arm gear shaft fits into the hole (A) of the control plate, the section B of the control plate guide into the hole (B), and the control plate comes under the section C of the rotary encoder guide and the section D of the loading arm gear shaft while press-fit the pole base assembly (supply side) as indicated by the arrow. It is important that the tension arm assembly shaft is positioned closer toward you than the control plate. (See Fig.2-2-15c.)
- (4) Make sure that the mark E of the control plate is in alignment with the mark ▼ of the loading arm gear shaft. (See Fig.2-2-15c.)
- (5) Pull off the hexagonal wrench for positioning.

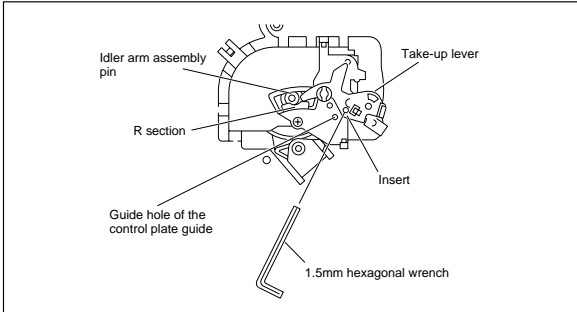


Fig. 2-2-15b

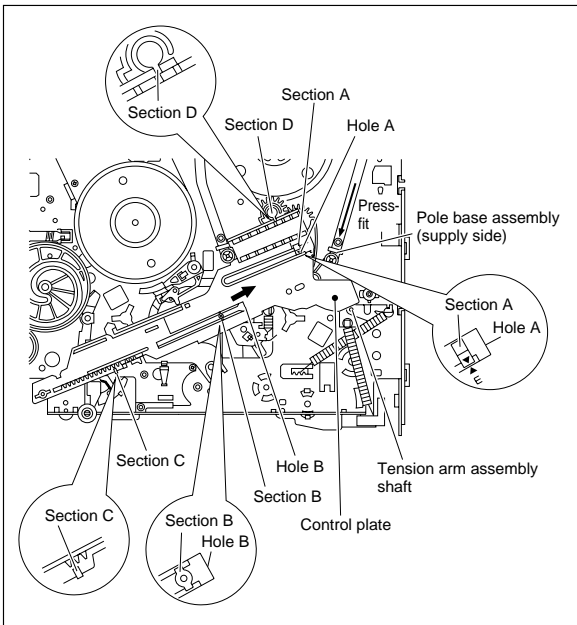


Fig. 2-2-15c

2.2.16 Loading arm gear (supply or take-up side) and loading arm gear shaft

1. How to remove

- (1) Remove the loading arm gear (supply side) by loosening the screw (A). (See Fig. 2-2-16a.)
- (2) Remove the screw (B) and remove the torsion arm from the pole base assembly (take-up side). (See Fig.2-2-16a.)

- (3) Turn the loading arm gear (take-up side) clockwise so that the notch of the loading arm gear (take-up side) is in alignment with the projection of the loading arm gear shaft and lift it. Likewise, turn the loading arm counterclockwise so that the notch is in alignment with the projection and remove the loading arm gear (take-up side). (See Fig.2-2-16a and Fig. 2-2-16b.)
- (4) When removing the loading arm gear shaft, be sure of first removing the screw retaining the drum assembly (on the back side of the loading arm gear shaft). Then remove the screw (C) and remove the loading arm gear shaft by sliding it.

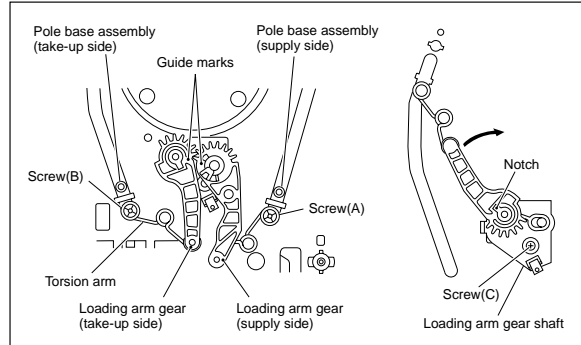


Fig. 2-2-16a

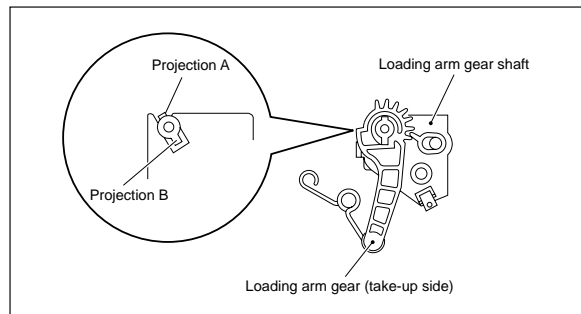


Fig. 2-2-16b

2. How to install

- (1) Align the notch of the loading arm gear (take-up side) to the projection B of the loading arm gear shaft and slip it over. Then rotate it clockwise for alignment with the projection A and slip it down to the bottom. (See Fig.2-2-16b.)
- (2) Then turn the loading arm gear (take-up side) counterclockwise. Hang the torsion arm on the pole base assembly (take-up side) and tighten the screw (B).
- (3) Install the loading arm gear (supply side) so that the guide mark of the loading arm gear (take-up side) is in alignment with the guide mark of the loading arm gear (supply side). Then hang the torsion arm on the pole base assembly (supply side) and tighten the screw (A). (See Fig.2-2-16a.)

2.2.17 Take-up lever, take-up head and control plate guide

- (1) Remove the spring of the take-up lever from the main deck.
- (2) Remove the lug (A) of the take-up lever from the main deck and pull out the take-up lever and the take-up head together.
- (3) Remove the screw (A).
- (4) Align the idler arm assembly pin in the center (centre) of the R section of the control plate guide, remove the control plate guide lugs (B) and (C) from the main deck, and remove the control plate guide.

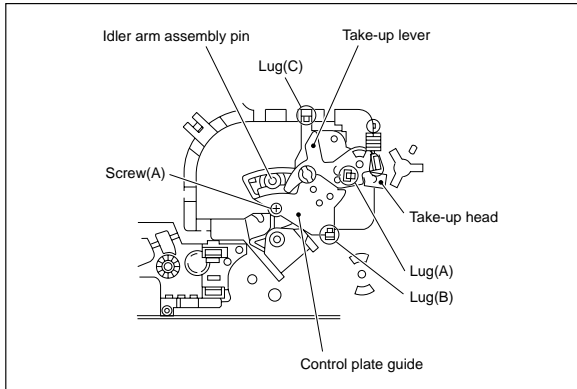


Fig. 2-2-17a

2.2.18 Capstan brake assembly

1. How to remove

- (1) Move the lug (A) of the capstan brake assembly in the arrow-indicated direction so that it comes into alignment with the notch of the main deck. (See Fig. 2-2-18a.)
- (2) Remove the lug (B) of the capstan brake assembly from the main deck and remove the capstan brake assembly.

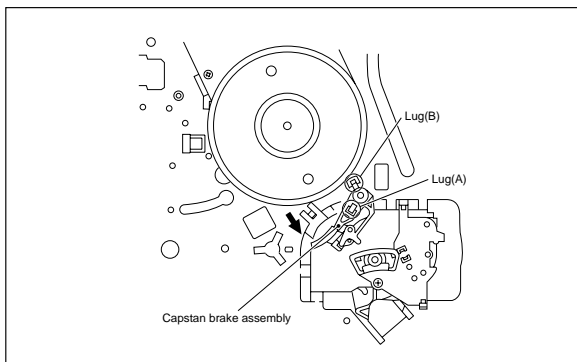


Fig. 2-2-18a

2.2.19 Sub brake assembly (take-up side)

1. How to remove

- (1) Remove the spring attached to the lid guide and sub brake assembly (take-up side).
- (2) Bring the lug (A) of the sub brake assembly (take-up side) into alignment with the notch of the main deck.
- (3) Remove the lugs (B) and (C) of the sub brake assembly (take-up side) from the main deck and remove the sub brake assembly (take-up side).

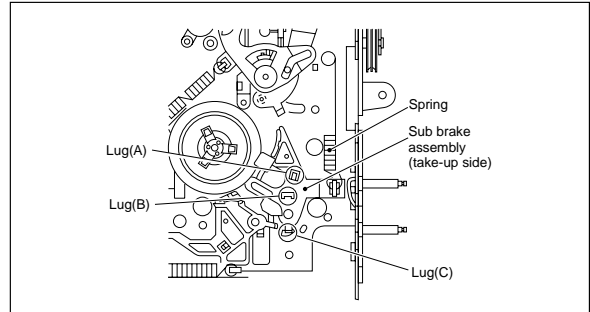


Fig. 2-2-19a

2.2.20 Main brake assembly (take-up side), reel disk (take-up side) and main brake assembly (supply side)

1. How to remove

- (1) Move the main brake assembly (take-up side) in the arrow-indicated direction and remove the reel disk (take-up side).
- (2) Remove the spring attached to the main brake assembly.
- (3) Remove the lug (A) of the main brake assembly (take-up side) and pull out the lug (B) after bringing it into alignment with the main deck notch.
- (4) Remove the lugs (C), (D) and (E) of the main brake assembly (supply side) from the main deck and pull them off. (See Fig.2-2-20a.)
- (5) When installing the main brake assembly (take-up side), slide the brake lever in the direction as indicated by the arrow to prevent it from hitting the projection of the main brake assembly (take-up side). (See Fig.2-2-20b.)


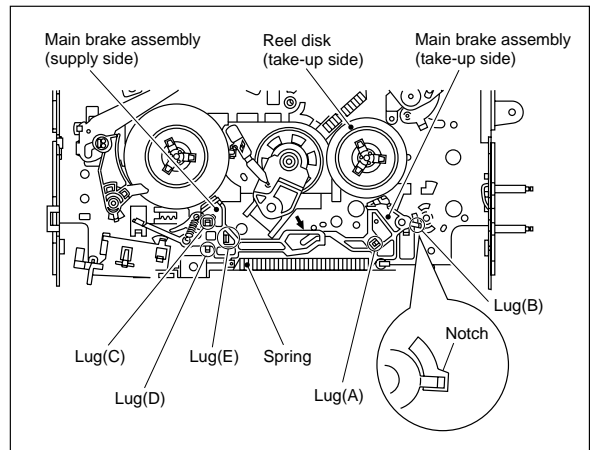


Fig. 2-2-20a

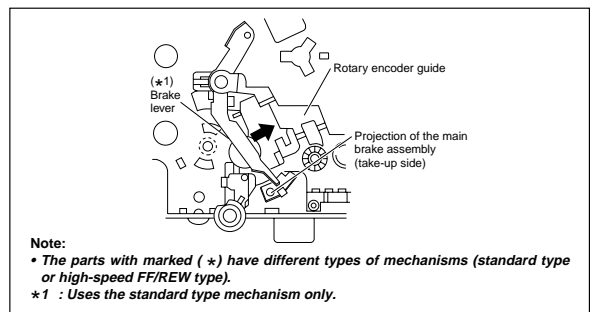

Note:
 • The parts with marked (*) have different types of mechanisms (standard type or high-speed FF/REW type).
 *1 : Uses the standard type mechanism only.

Fig. 2-2-20b

2.2.21 Tension brake assembly, reel disk (supply side) and tension arm assembly

1. How to remove

- (1) Remove the three lugs of the tension brake assembly from the main deck and pull them off.
- (2) Remove the reel disk (supply side) by loosening in the arrow-indicated direction the main brake assembly (supply side).
- (3) Remove the tension spring on the back of the main deck. Then release the lug of the tension arm bearing in the arrow-indicated direction and draw out the tension arm assembly.

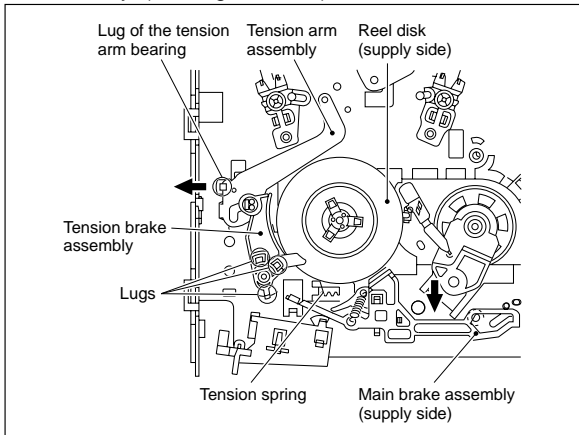


Fig. 2-2-21a

2.2.22 Idler lever, idler arm assembly

1. How to remove

- (1) Remove the lug of the idler lever from the main deck and remove the hook fitted in the idler arm assembly hole by lifting it.
- (2) Remove the slit washer and pull out the idler arm assembly.

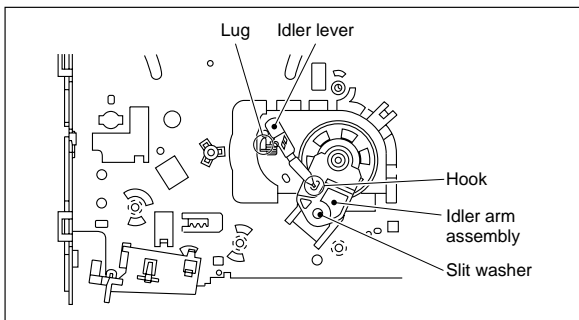


Fig. 2-2-22a

2.2.23 Stator assembly

- (1) Remove the flat cable.
- (2) Remove the two screws (A), (B) and remove the lug wire.
- (3) Remove the stator assembly by lifting in the arrow-indicated direction. (Take care that the brush spring does not jump out.)

Notes:

- **Be careful not to lose the brush and spring.**
- **There are some models that do not use the lug wire. Refer to the parts list for these models.**
- **When tightening the screw (B), place the caulked part of the lug terminal near to the shaft of the drum and then tighten it.**
- **After installation, be sure to perform the switching point adjustment according to the electrical adjustment procedure.**

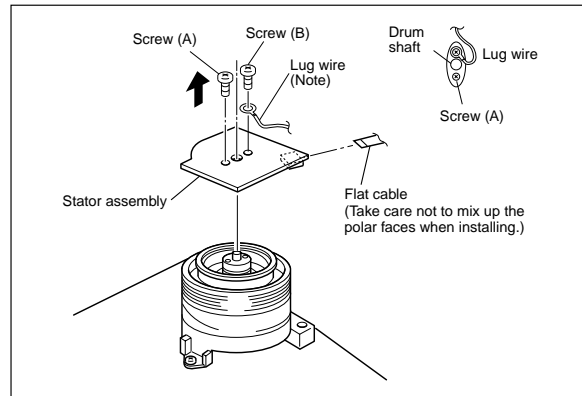


Fig. 2-2-23a

2.2.24 Rotor assembly

1. How to remove

- (1) Remove the stator assembly.
- (2) Remove the two screws (B) and remove the rotor assembly.

2. How to install

- (1) Match the phases of the upper drum assembly and the rotor assembly as indicated in Fig.2-2-24a.
- (2) Place the upper drum assembly hole (a) over the rotor assembly holes (b) (with three holes to be aligned) and tighten the two screws (B). (See Fig.2-2-24a.)

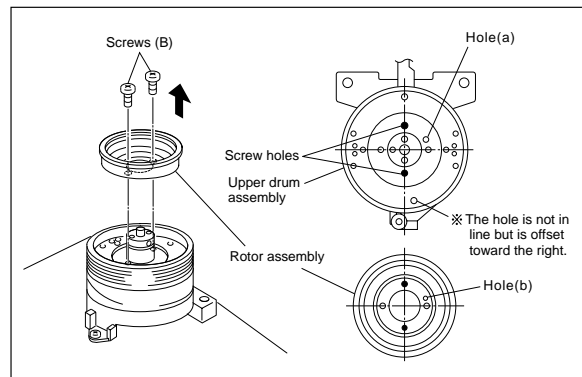


Fig. 2-2-24a

2.2.25 Upper drum assembly

Notes:

- To replace the upper drum assembly only may not be possible with some models. For upper drum assembly replacement, refer to the parts list. (When the parts number of the upper drum assembly is not listed on the parts list, then this cannot be replaced.)
- When replacement is required, control the up- down movement of the brush. Never apply grease.
- When replacing the upper drum assembly, replace it the together with the washer.

1. How to remove

- (1) Remove the stator assembly and rotor assembly.
- (2) Loosen the screw of the collar assembly using a 1.5 mm hexagonal wrench and remove the collar assembly. Also remove the brush, spring and cap at one time.
- (3) Remove the upper drum assembly and remove the washer using tweezers.

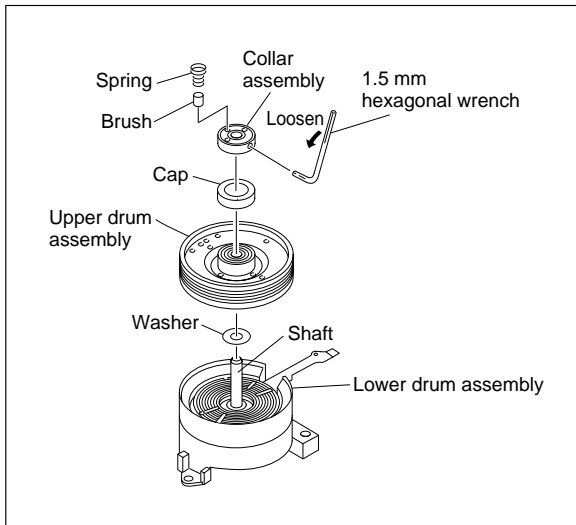


Fig. 2-2-25a

2. How to install

- (1) Clean the coil parts of the lower drum assembly and the newly installed upper drum assembly with an air brush in advance. (See Fig.2-2-25b.)
- (2) Install a new washer and upper drum assembly on the drum shaft. (See Fig.2-2-25a.)
- (3) Install the cap to the upper drum assembly.
- (4) Position the collar assembly as indicated in Fig.2-2-25c while controlling its up- down movement.
- (5) Secure the collar assembly in position with a hexagonal wrench while pressing its top with the fingers.
- (6) After installation, gently turn the upper drum assembly with your hand to make sure that it turns normally. Then install the brush and the spring.
- (7) Install the rotor assembly and stator assembly according to Fig 2-2-23a and 2-2-24a.
- (8) When installation is complete, clean the upper drum assembly and lower drum assembly and carry out the following adjustments.
 - PB switching point adjustment
 - Slow tracking adjustment
 - Compatibility adjustment (Be sure to check for compatibility for the EP (or LP) mode.)

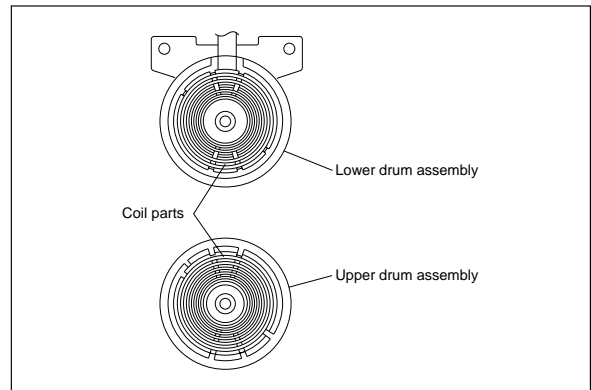


Fig. 2-2-25b

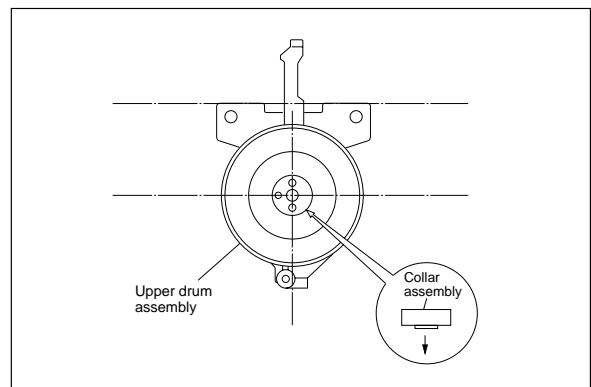


Fig. 2-2-25c

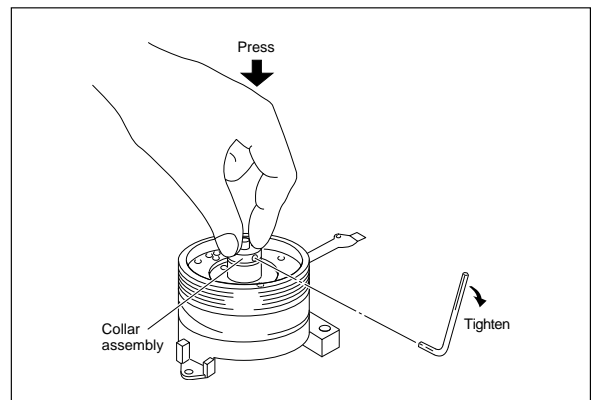


Fig. 2-2-25d

2.3 Compatibility adjustment

Notes:

- **Although compatibility adjustment is very important, it is not necessary to perform this as part of the normal servicing work. It will be required when you have replaced the A/C head, drum assembly or any part of the tape transport system.**
- **To avoid any damage to the alignment tape while performing the compatibility adjustment, get a separate cassette tape (for recording and play back) ready to be used for checking the initial tape running behavior.**
- **Unless otherwise specified, all measuring points and adjustment parts are located on the Main board.**
- **When using the Jig RCU, it is required to set the VCR to the Jig RCU mode (the mode in which codes from the Jig RCU can be received). (See SECTION 1 DISASSEMBLY.)**

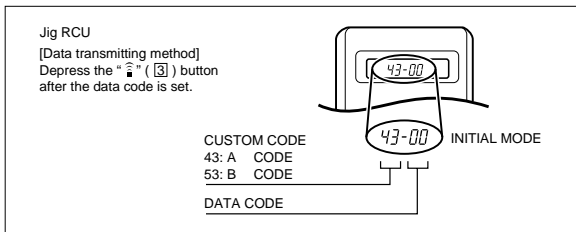


Fig. 2-3a Jig RCU [PTU94023B]

2.3.1 FM waveform linearity

Signal	(A1) (A2)	• Alignment tape(SP, stairstep, PAL) [MHPE] • Alignment tape(LP, stairstep, PAL) [MHPE-L]
Mode	(B)	• PB
Equipment	(C)	• Oscilloscope
Measuring point	(D)	• TP106 (PB. FM)
External trigger	(E)	• TP111 (D.FF)
Adjustment part	(F)	• Guide roller [Mechanism assembly]
Specified value	(G)	• Flat V.PB FM waveform
Adjustment tool	(H)	• Roller driver [PTU94002]

- (1) Play back the alignment tape (A1).
- (2) Apply the external trigger signal to D.FF (E), to observe the V.PB FM waveform at the measuring point (D).
- (3) Set the VCR to the manual tracking mode.
- (4) Make sure that there is no significant level drop of the V.PB FM waveform caused by the tracking operation, with its generally parallel and linear variation ensured. Perform the following adjustments when required. (See Fig. 2-3-1a.)
- (5) Reduce the V.PB FM waveform by the tracking operation. If a drop in level is found on the left side, turn the guide roller of the pole base assembly (supply side) with the roller driver to make the V.PB FM waveform linear. If a drop in level is on the right side, likewise turn the guide roller of the pole base assembly (take-up side) with the roller driver to make it linear. (See Fig. 2-3-1c.)
- (6) Make sure that the V.PB FM waveform varies in parallel and linearly with the tracking operation again. When required, perform fine-adjustment of the guide roller of the

pole base assembly (supply or take-up side).

- (7) Unload the cassette tape once, play back the alignment tape (A1) again and confirm the V.PB FM waveform.
- (8) After adjustment, confirm that the tape wrinkling does not occur at the roller upper or lower limits. (See Fig. 2-3-1d.)

[Perform adjustment step (9) only for the models equipped with SP mode and EP (or LP) mode.]

- (9) Repeat steps (1) to (8) by using the alignment tape (A2).

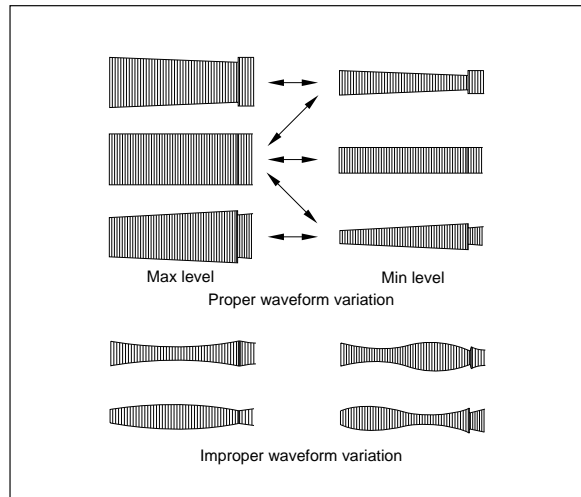


Fig. 2-3-1a

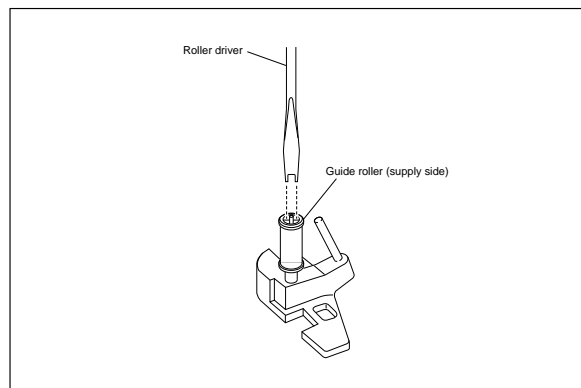


Fig. 2-3-1b

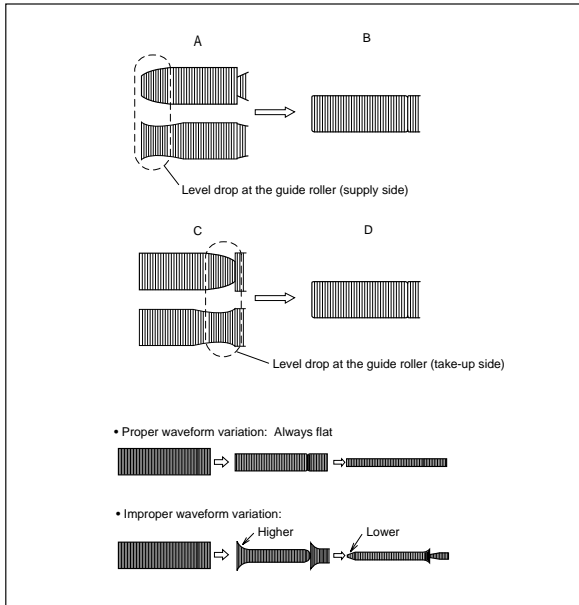


Fig. 2-3-1c

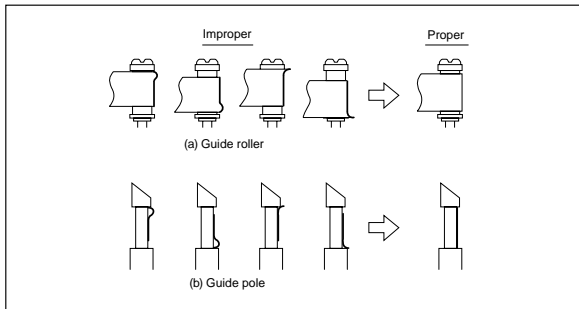


Fig. 2-3-1d

2.3.2 Height and tilt of the A/C head

Note:

• **Set a temporary level of the height of the A/C head in advance to make the adjustment easier after the A/C head has been replaced. (See Fig.2-2-6c.)**

Signal	(A)	• Alignment tape(SP, stairstep, PAL) [MHPE]
Mode	(B)	• PB
Equipment	(C)	• Oscilloscope
Measuring point	(D1) (D2)	• AUDIO OUT terminal • TP4001 (CTL. P)
External trigger	(E)	• TP111 (D.FF)
Adjustment part	(F)	• A/C head [Mechanism assembly]
Specified value	(G)	• Maximum waveform

- (1) Play back the alignment tape (A).
- (2) Apply the external trigger signal to D.FF (E), to observe the AUDIO OUT waveform and Control pulse waveform at the measuring points (D1) and (D2) in the ALT mode.
- (3) Set the VCR to the manual tracking mode.

- (4) Adjust the AUDIO OUT waveform and Control pulse waveform by turning the screws (1), (2) and (3) little by little until both waveforms reach maximum. The screw (1) and (3) are for adjustment of tilt and the screw (2) for azimuth.

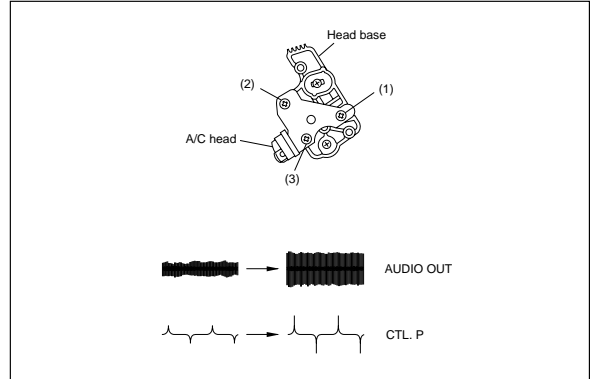


Fig. 2-3-2a

2.3.3 A/C head phase (X-value)

Signal	(A1)	• Alignment tape(SP, stairstep, PAL) [MHPE]
Mode	(B)	• PB
Equipment	(C)	• Oscilloscope
Measuring point	(D)	• TP106 (PB. FM)
External trigger	(E)	• TP111 (D.FF)
Adjustment part	(F)	• A/C head base [Mechanism assembly]
Specified value	(G)	• Maximum V.PB FM waveform
Adjustment tool	(H)	• A/C head positioning tool [PTU94010]

- (1) Play back the alignment tape (A1).
- (2) Apply the external trigger signal to D.FF (E), to observe the V.PB FM waveform at the measuring point (D).
- (3) Set the VCR to the manual tracking mode.
- (4) Loosen the screws (4) and (5), then set the A/C head positioning tool to the innermost projected part of the A/C head. (See Fig. 2-3-3a.)
- (5) Turn the A/C head positioning tool fully toward the capstan. Then turn it back gradually toward the drum and stop on the second peak point position of the V.PB FM waveform output level. Then tighten the screws (4) and (5).
- (6) Perform the tracking operation and make sure that the V.PB FM waveform is at its maximum. If it is not at maximum, loosen the screws (4) and (5), and turn the A/C head positioning tool to bring the A/C head to a position, around where the waveform reaches its maximum for the first time. Then tighten the screws (4) and (5).

[Perform adjustment steps (7) to (10) only for 2 Head models equipped with LP mode.]

- (7) Then play back the alignment tape (A2).
- (8) Set the VCR to the manual tracking mode.
- (9) Perform the tracking operation and make sure that the V.PB FM waveform is at its maximum.
- (10) If it is not at maximum, loosen the screws (4) and (5), and turn the A/C head positioning tool to bring the A/C head to a position, around where the waveform reaches its maximum for the first time. Then tighten the screws (4) and (5).

Note:

• After adjusting, always perform the confirmation and re-adjustment of the item 2.3.4.

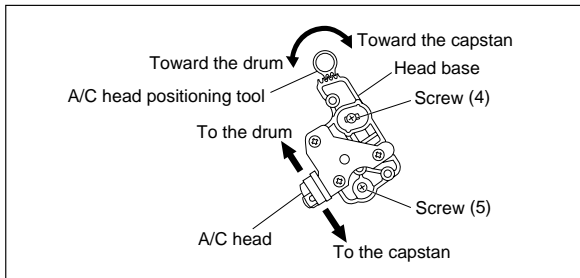


Fig. 2-3-3a

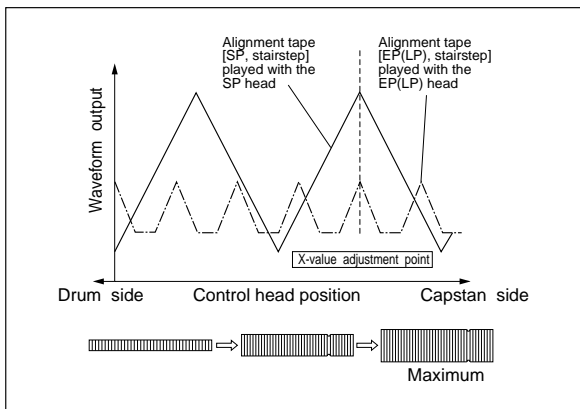


Fig. 2-3-3b

- (4) Set the VCR to the Auto adjust mode by transmitting the code (F) twice from the Jig RCU. When the VCR enters the stop mode, the adjustment is completed.
- (5) If the VCR enters the eject mode, perform adjustment for the audio control head phase (X-value) again.

2.3.5 Tension pole position

Signal	(A)	• Back tension cassette gauge [PUJ48076-2]
Mode	(B)	• PB
Adjustment part	(F)	• Adjust pin [Mechansim assembly]
Specified value	(G)	• 25 - 51 gf·cm (2.45 - 5 × 10 ⁻³ Nm)

- (1) Play back the back tension cassette gauge (A).
- (2) Check that the indicated value on the left side gauge is within the specified value (G).
- (3) If the indicated value is not within the specified value (G), perform the adjustment in a following procedure.
 - 1) Set the VCR to the mechanism service mode. (See SECTION 1 DISASSEMBLY.)
 - 2) Set the VCR to the play back mode and adjust by turning adjustment pin to align the tension arm assembly edge with the main deck hole (A) on the right edge marker. (See Fig. 2-3-5a)

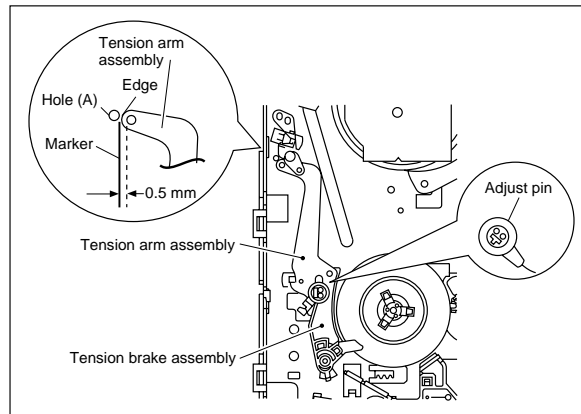



Fig. 2-3-5a

2.3.4 Standard tracking preset

Signal	(A)	• Alignment tape(LP, stairstep, PAL) [MHPE-L]
Mode	(B)	• PB → Auto adjust
Equipment	(C)	• Oscilloscope
Measuring point	(D)	• TP106 (PB. FM)
External trigger	(E)	• TP111 (D.FF)
Adjustment part	(F)	• Jig RCU: Code "50"
Specified value	(G)	• STOP mode (Maximum V.PB FM waveform)
Adjustment tool	(H)	• Jig RCU [PTU94023B]

- (1) Play back the alignment tape (A).
- (2) Apply the external trigger signal to D.FF (E), to observe the V.PB FM waveform at the measuring point (D).
- (3) Confirm that the automatic tracking operation is completed.

Mechanism Timing Chart

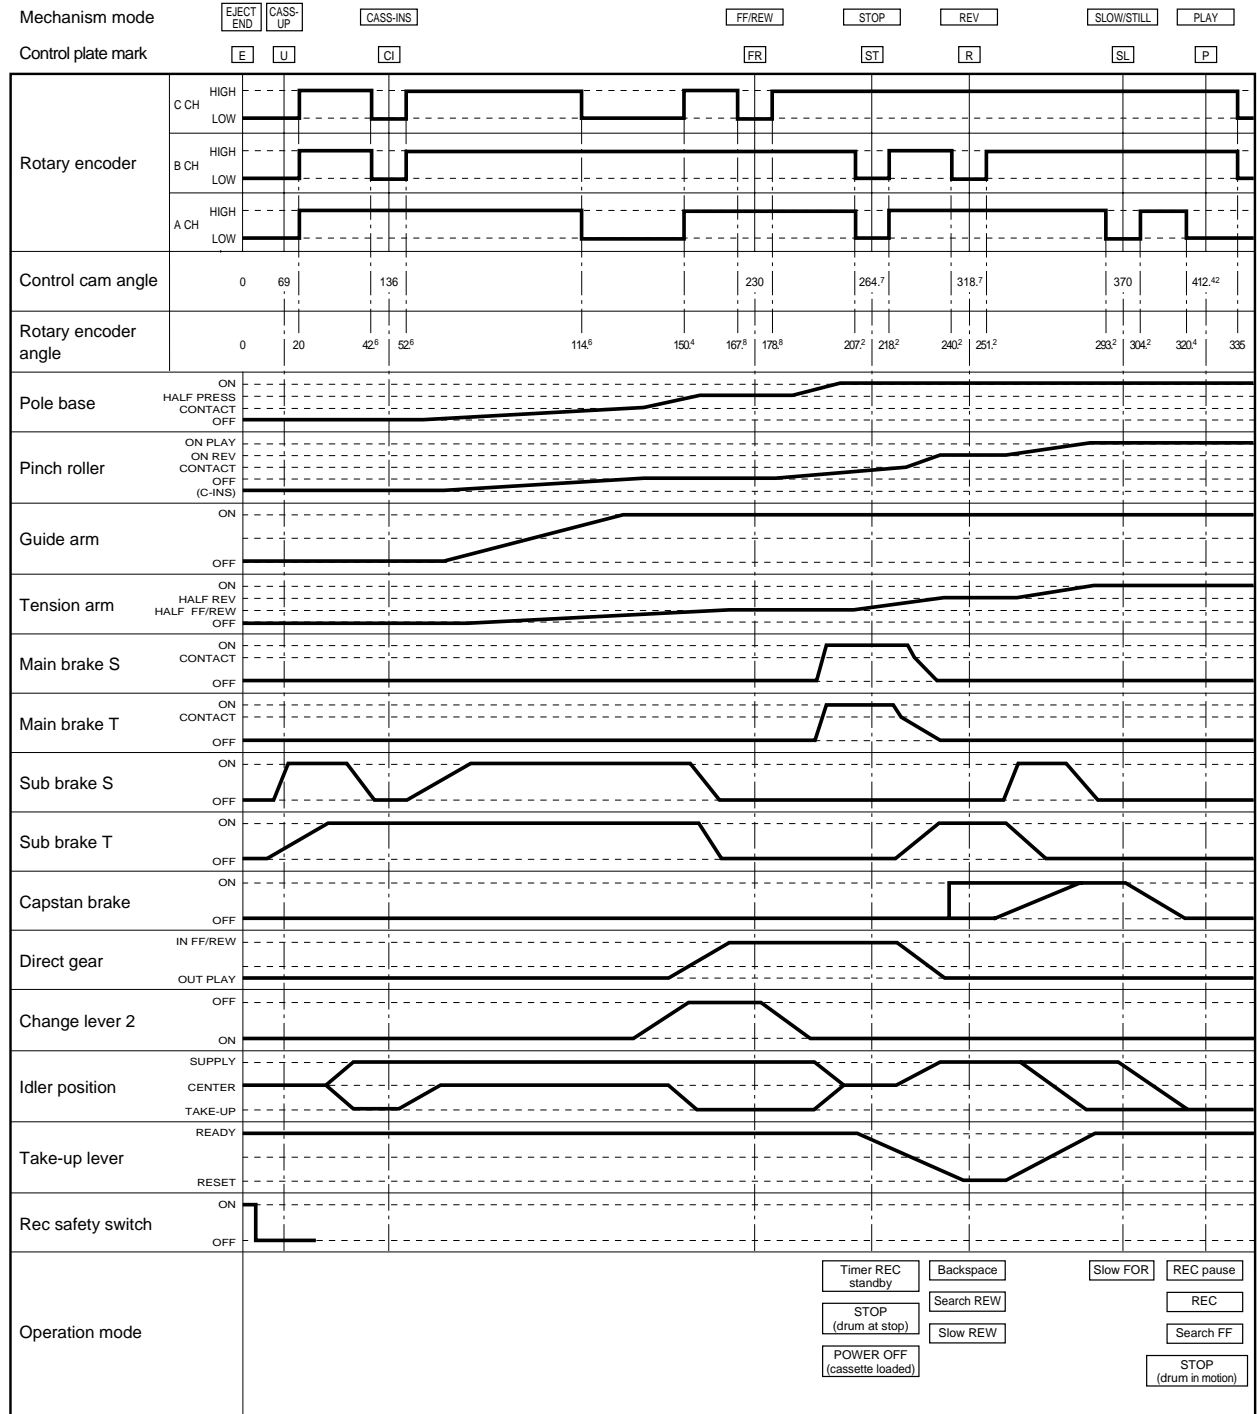

SECTION 3 ELECTRICAL ADJUSTMENT

3.1 Precaution


The following adjustment procedures are not only necessary after replacement of consumable mechanical parts or board assemblies, but are also provided as references to be referred to when servicing the electrical circuitry.

In case of trouble with the electrical circuitry, always begin a service by identifying the defective points by using the measuring instruments as described in the following electrical adjustment procedures. After this, proceed to the repair, replacement and/or adjustment. If the required measuring instruments are not available in the field, do not change the adjustment parts (variable resistor, etc.) carelessly.

3.1.1 Required test equipments


- Color (colour) television or monitor
- Oscilloscope: wide-band, dual-trace, triggered delayed sweep
- Signal generator: RF / IF sweep / marker
- Frequency counter
- Signal generator: stairstep, color (colour) bar [PAL]
- Recording tape
- Digit-key remote controller(provided)

3.1.2 Required adjustment tools

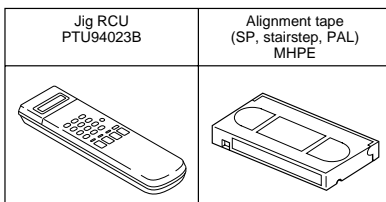

3.1.3 Color (colour) bar signal, color (colour) bar pattern

- Color (colour) bar signal [PAL]
- Color (colour) bar pattern [PAL]

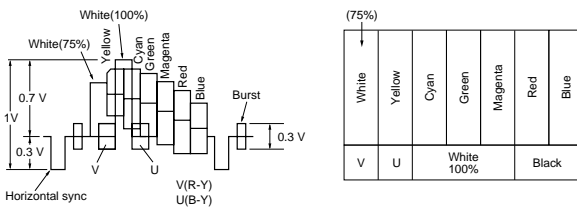

3.1.4 Switch settings and standard precautions

The SW settings of the VCR and the standard precautions for the electrical adjustments are as follows.

- **When using the Jig RCU, it is required to set the VCR to the Jig RCU mode (the mode in which codes from the Jig RCU can be received). (See SECTION 1 DIS-ASSEMBLY.)**

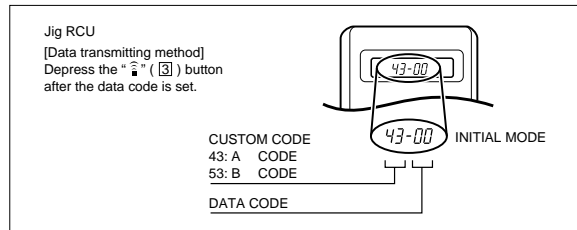


Fig. 3-1-4a Jig RCU [PTU94023B]

- **Set the switches as shown below unless otherwise specified on the relevant adjustment chart. The switches that are not listed below can be set as desired. If the VCR is not equipped with the functions detailed below, setup is not required.**

AUTO PICTURE/VIDEO CALIBRATION/ B.E.S.T./D.S.P.C.	OFF
PICTURE CONTROL/SMART PICTURE	NORMAL/NATURAL
VIDEO STABILIZER	OFF
TBC	ON
Digital 3R	ON
VIDEO NAVIGATION/TAPE MANAGER	OFF

- **If there is a reference to a signal input method in the signal column of the adjustment chart, "Ext. S-input" means the Y/C separated video signal and "Ext. input" means the composite video signal input.**
- **Unless otherwise specified, all measuring points and adjustment parts are located on the Main board.**

3.2 Servo circuit

3.2.1 Switching point

Signal	(A1) (A2)	• Stairstep signal • Alignment tape (SP, stairstep, PAL) [MHPE]
Mode	(B)	• PB
Equipment	(C)	• Oscilloscope
Measuring point	(D1) (D2)	• VIDEO OUT terminal (75Ω terminated) • TP106 (PB, FM)
External trigger	(E)	• TP111 (D.FF)/slope : -
Adjustment part	(F)	• Jig RCU: Code "5A"
Specified value	(G)	• $6.5 \pm 0.5H$
Adjustment tool	(H)	• Jig RCU [PTU94023B]

- (1) Play back the signal (A1) of the alignment tape (A2).
- (2) Apply the external trigger signal to D.FF (E) to observe the VIDEO OUT waveform and V.PB FM waveform at the measuring points (D1) and (D2).
- (3) Set the VCR to the manual tracking mode.
- (4) Adjust tracking so that the V.PB FM waveform becomes maximum.
- (5) Set the VCR to the Auto adjust mode by transmitting the code (F) from the Jig RCU. When the VCR enters the stop mode, the adjustment is completed.
- (6) If the VCR enters the eject mode, repeat steps (1) to (5) again.
- (7) Play back the alignment tape (A2) again, confirm that the switching point is the specified value (G).

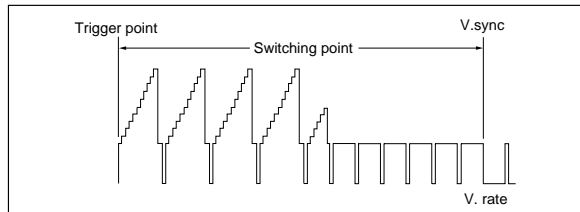


Fig. 3-2-1a Switching point

3.2.2 Slow tracking preset

Signal	(A1) (A2)	• Ext. input • Color (colour) bar signal [PAL]
Mode	(B1) (B2)	• VHS SP • VHS LP
Measuring point	(D)	• TV-Monitor
Adjustment part	(F)	• Jig RCU: Code "71" or "72"
Specified value	(G)	• Minimum noise
Adjustment tool	(H)	• Jig RCU [PTU94023B]

- (1) Record the signal (A2) in the mode (B1), and play back the recorded signal.
- (2) Set the VCR to the manual tracking mode.
- (3) Set the VCR to the FWD slow (+1/6x) mode.
- (4) Transmit the code (F) from the Jig RCU to adjust so that the noise bar becomes the specified value (G) on the TV monitor in the slow mode.
- (5) Set the VCR to the Stop mode.
- (6) Confirm that the noise bar is (G) on the TV monitor in the slow mode.
- (7) Repeat steps (3) to (6) in the REV slow (-1/6x) mode.
- (8) Repeat steps (1) to (7) in the mode (B2).

Note:

- For FWD slow (+1/6x) playback, transmit the code "08" from the Jig RCU to enter the slow playback mode, and transmit the code "D0" for REV slow (-1/6x) mode.

3.3 Video circuit

3.3.1 Auto picture initial setting

Signal	(A1) (A2) (A3)	• Ext. input • Video: Optional • VHS tape
Mode	(B)	• EE → Auto adjust (SP/LP REC → PB)
Adjustment part	(F)	• Jig RCU : Code "58"
Specified value	(G)	• STOP mode
Adjustment tool	(H)	• Jig RCU [PTU94023B]

- (1) Insert the cassette tape (A3).
- (2) Set the VCR to the Auto adjust mode by transmitting the code (F) from the Jig RCU. When the VCR enters the stop mode, the adjustment is completed. When the VCR enters the eject mode, repeat steps (1) to (2) again.

3.4 Syscon circuit [HR-J680EU/J780EU]

Note:

- When perform this adjustment, remove the Mechanism assembly.

3.4.1 Timer clock


Signal	(A)	• No signal
Mode	(B)	• EE
Equipment	(C)	• Frequency counter
Measuring point	(D1)	• IC3001 pin 61
Short point	(D2) (D3)	• IC3001 pin 24 • C3026 + and -
Adjustment part	(F)	• C3025 (TIMER CLOCK)
Specified value	(G)	• $1024.008 \pm 0.001 \text{ Hz}$ • $(976.5549 \pm 0.0010 \mu\text{sec})$

- (1) Connect the frequency counter to the measuring point (D1).
- (2) Connect the short wire between the short point (D2) and Vcc (5V).
- (3) Short the leads of capacitor (D3) once in order to reset the microprocessor of the SYSCON.
- (4) Disconnect the short wire between the short point (D2) and Vcc then connect it again.
- (5) Adjust the Adjustment part (F) so that the output frequency becomes the specified value (G).

SECTION 4 CHARTS AND DIAGRAMS

NOTES OF SCHEMATIC DIAGRAM

Safety precautions

The Components identified by the symbol  are critical for safety. For continued safety, replace safety critical components only with manufacturer's recommended parts.

1. Units of components on the schematic diagram

Unless otherwise specified.

- 1) All resistance values are in ohm, 1/6 W, 1/8 W (refer to parts list).
Chip resistors are 1/16 W.
K or k: k Ω (1000 Ω), M: M Ω (1000k Ω)
- 2) All capacitance values are in μ F, (P: PF).
- 3) All inductance values are in μ H, (m: mH).
- 4) All diodes are 1SS133, MA165 or 1N4148M (refer to parts list).

2. Indications of control voltage

AUX : Active at high

AUX or AUX(L) : Active at low

3. Interpreting Connector indications



Removable connector



Wire soldered directly on board



Non-removable Board connector



Board to Board




Connected pattern on board
The arrows indicate signal path

4. Voltage measurement

- 1) Video circuits
REC : Colour bar signal in SP mode, normal VHS mode
PB : Alignment tape, colour bar SP mode, normal VHS mode
— : Unmeasurable or unnecessary to measure
- 2) Audio circuits
REC : 1KHz, -8 dBs sine wave signal in SP mode, Normal VHS mode
PB : REC then playback it
- 3) Movie Camera circuits
Measured using a correctly illuminated gray scale or colour bar test charts in the E-E mode

4) Indication on schematic diagram


Voltage Indications for REC and PB mode on the schematic diagram are as shown below.

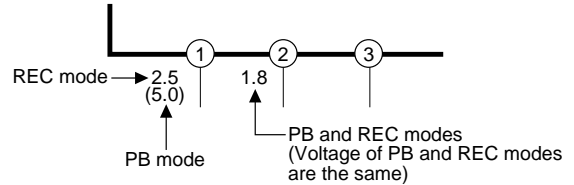


Note: If the voltages are not indicated on the schematic diagram, refer to the voltage charts.

5. Waveform measurement

- 1) Video circuits
REC : Colour bar signal in SP mode, normal VHS mode
PB : Alignment tape, colour bar SP mode, normal VHS mode
- 2) Audio circuits
REC : 1KHz, -8 dBs sine wave signal in SP mode, normal VHS mode
PB : REC then playback it
- 3) Movie Camera circuits
Measured using a correctly illuminated gray scale or colour bar test charts in the E-E mode
- 4) Indication on schematic diagram
Waveform indications on the schematic diagram are as shown below.

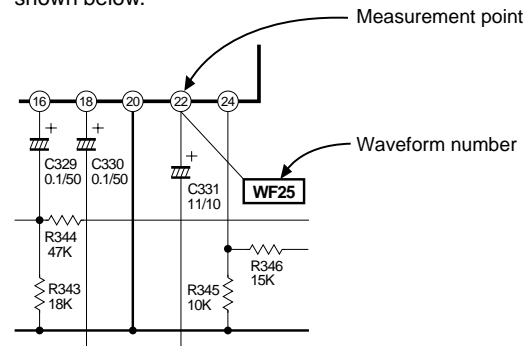


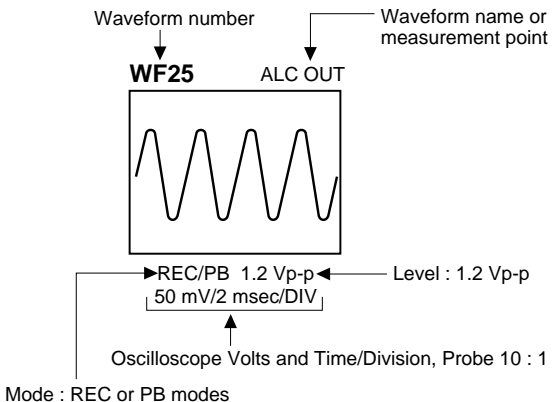



5) Waveform indications





6. Signal path Symbols

The arrows indicate the signal path as follows.


-  Playback signal path
-  Playback and recording signal path
-  Recording signal path (including E-E signal path)
-  Capstan servo path
-  Drum servo path

(Example)

-  R-Y Playback R-Y signal path
-  Y Recording Y signal path

7. Indication of the parts for adjustments

The parts for the adjustments are surrounded with the circle as shown below.



8. Indication of the parts not mounted on the circuit board

"OPEN" is indicated by the parts not mounted on the circuit board.




CIRCUIT BOARD NOTES

1. Foil and Component sides

- 1) Foil side (B side) :
Parts on the foil side seen from foil face (pattern face) are indicated.
- 2) Component side (A side) :
Parts on the component side seen from component face (parts face) indicated.

2. Parts location guides


Parts location are indicated by guide scale on the circuit board.

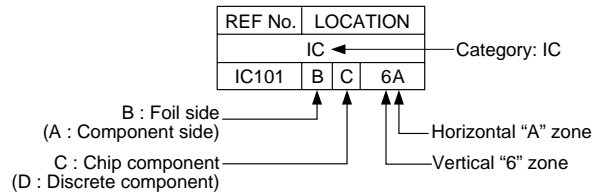

Note:


For general information in service manual, please refer to the Service Manual of GENERAL INFORMATION Edition 4 No. 82054D (January 1994).

4.1 BOARD INTERCONNECTIONS

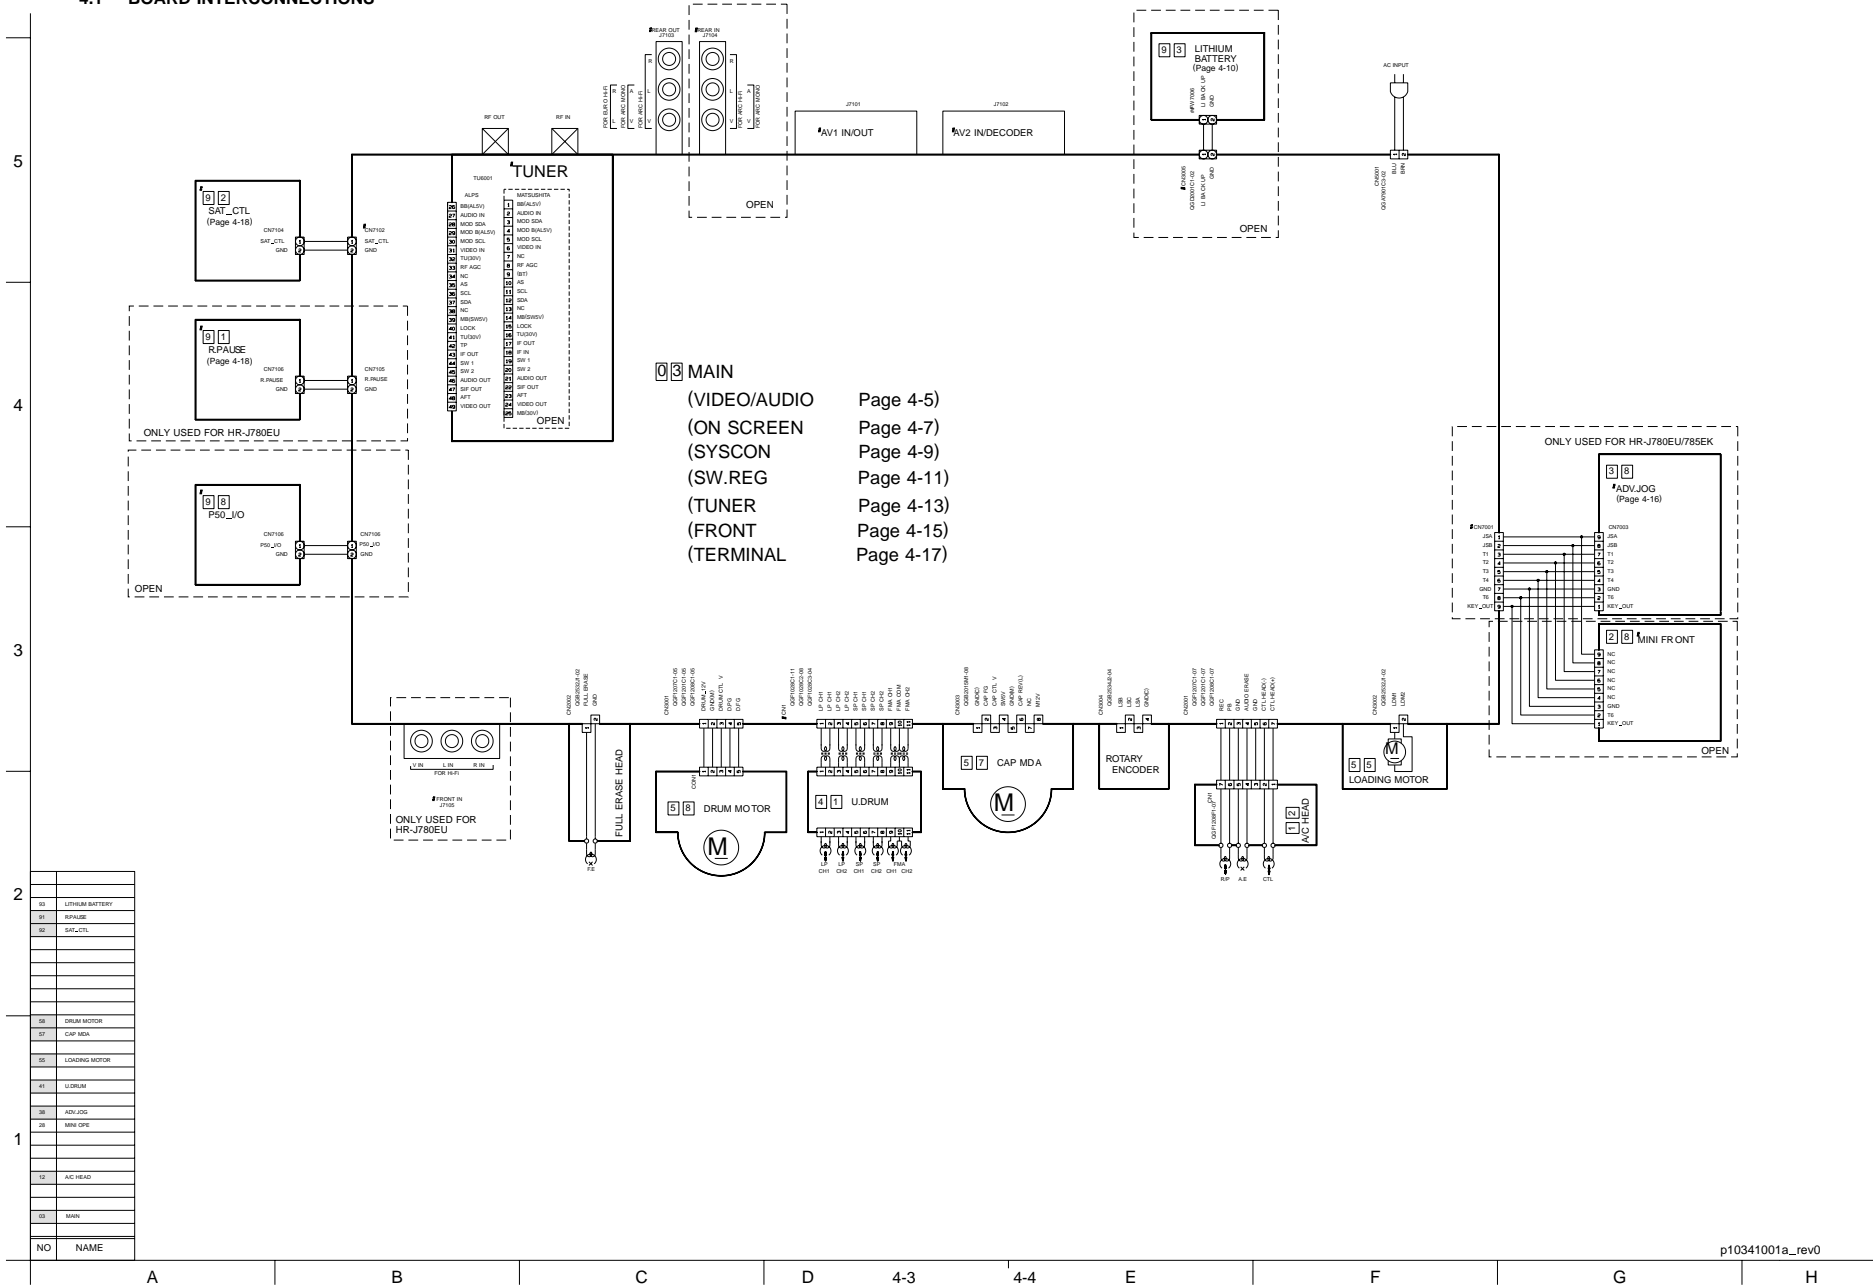

4.2 MAIN (VIDEO/AUDIO) SCHEMATIC DIAGRAM

Note : The Parts Number, value and rated voltage etc. in the Schematic Diagram are for references only. When replacing the parts, refer to the Parts List.

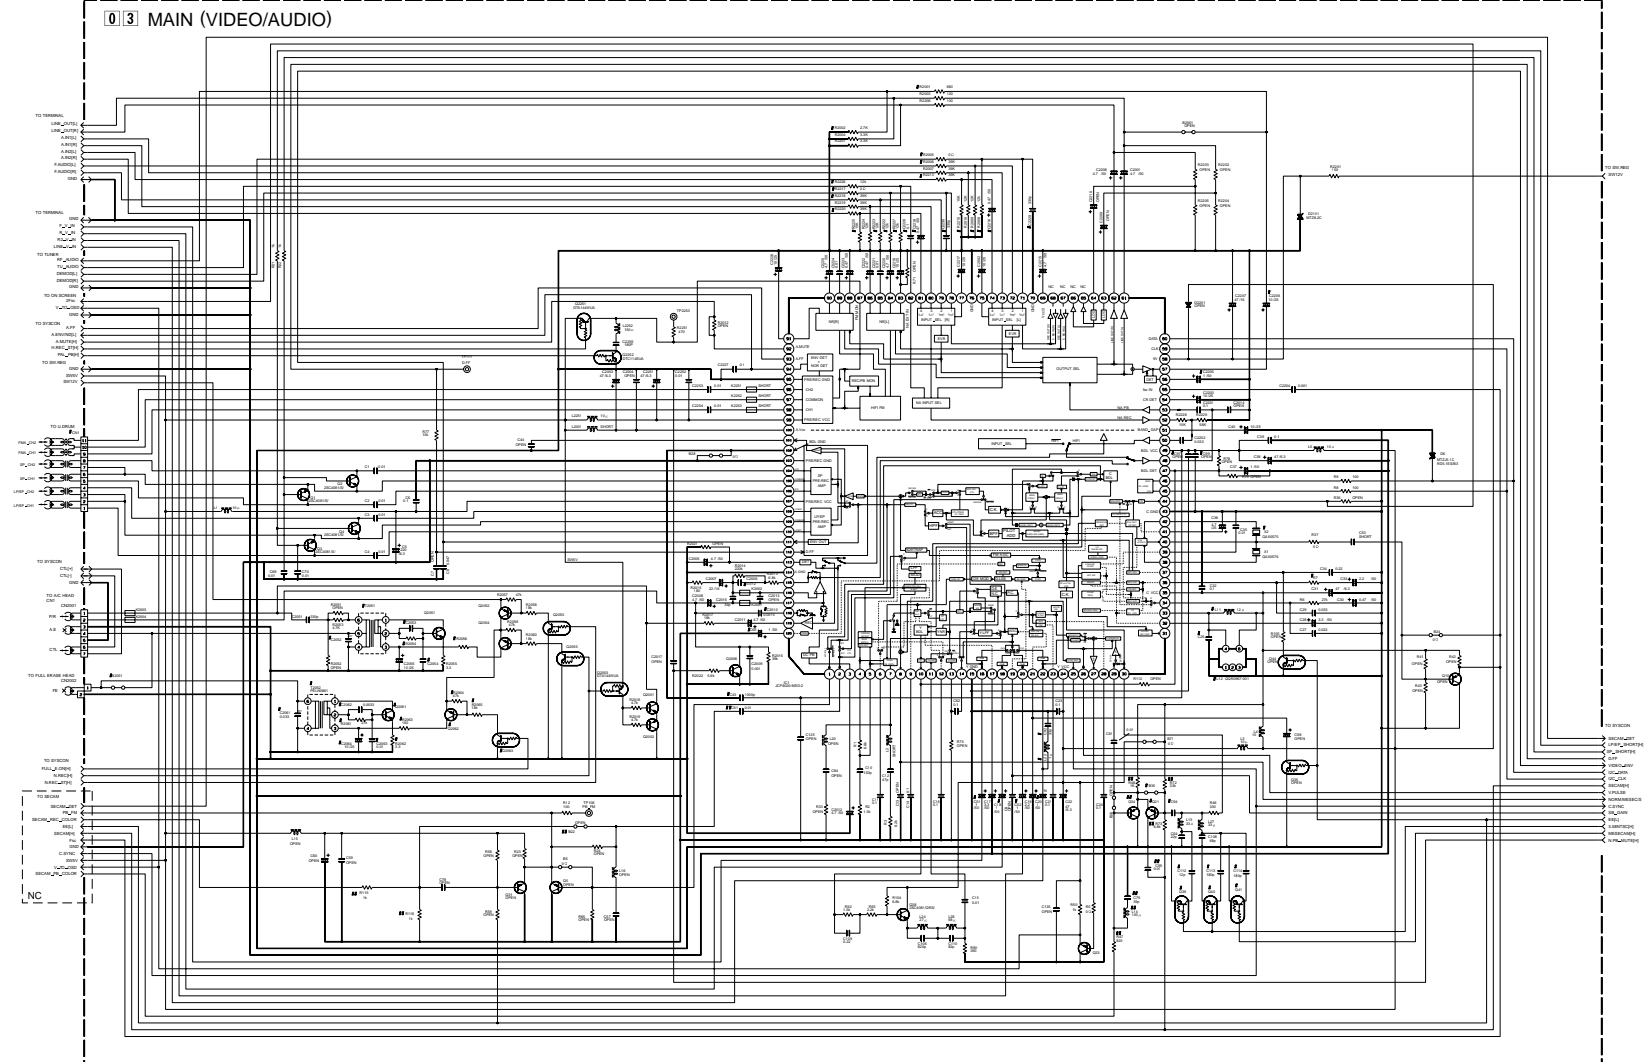

#DIFFERENCE TABLE

Model	Audio	Video
1000	X	X
1001	X	X
1002	X	X
1003	X	X
1004	X	X
1005	X	X
1006	X	X
1007	X	X
1008	X	X
1009	X	X
1010	X	X
1011	X	X
1012	X	X
1013	X	X
1014	X	X
1015	X	X
1016	X	X
1017	X	X
1018	X	X
1019	X	X
1020	X	X

#DIFFERENCE TABLE

Model	Audio	Video
1021	X	X
1022	X	X
1023	X	X
1024	X	X
1025	X	X
1026	X	X
1027	X	X
1028	X	X
1029	X	X
1030	X	X
1031	X	X
1032	X	X
1033	X	X
1034	X	X
1035	X	X
1036	X	X
1037	X	X
1038	X	X
1039	X	X
1040	X	X

#DIFFERENCE TABLE

Model	Audio	Video
1041	X	X
1042	X	X
1043	X	X
1044	X	X
1045	X	X
1046	X	X
1047	X	X
1048	X	X
1049	X	X
1050	X	X
1051	X	X
1052	X	X
1053	X	X
1054	X	X
1055	X	X
1056	X	X
1057	X	X
1058	X	X
1059	X	X
1060	X	X


#DIFFERENCE TABLE

Model	Audio	Video
1061	X	X
1062	X	X
1063	X	X
1064	X	X
1065	X	X
1066	X	X
1067	X	X
1068	X	X
1069	X	X
1070	X	X
1071	X	X
1072	X	X
1073	X	X
1074	X	X
1075	X	X
1076	X	X
1077	X	X
1078	X	X
1079	X	X
1080	X	X

NOTES-UNLESS OTHERWISE SPECIFIED:
 ALL NEW TRANSISTORS ARE SCHEMATICALLY IDENTIFIED BY SYMBOLS.
 ALL PNP TRANSISTORS ARE SCHEMATICALLY IDENTIFIED BY SP. ALL NPN TRANSISTORS ARE SCHEMATICALLY IDENTIFIED BY NPN.
 ALL NEW DIODS ARE SCHEMATICALLY IDENTIFIED BY DIODE SYMBOLS.
 ALL RESISTANCE VALUES ARE IN OHMS.
 ALL INDUCTANCE VALUES ARE IN H.
 ALL CAPACITANCE VALUES ARE IN P.F.
 ELECTROLYTIC
 RESISTOR
 CAPACITOR
 NON-POLAR

4.3 MAIN (ON SCREEN) SCHEMATIC DIAGRAM

Note : The Parts Number, value and rated voltage etc. in the Schematic Diagram are for references only. When replacing the parts, refer to the Parts List.

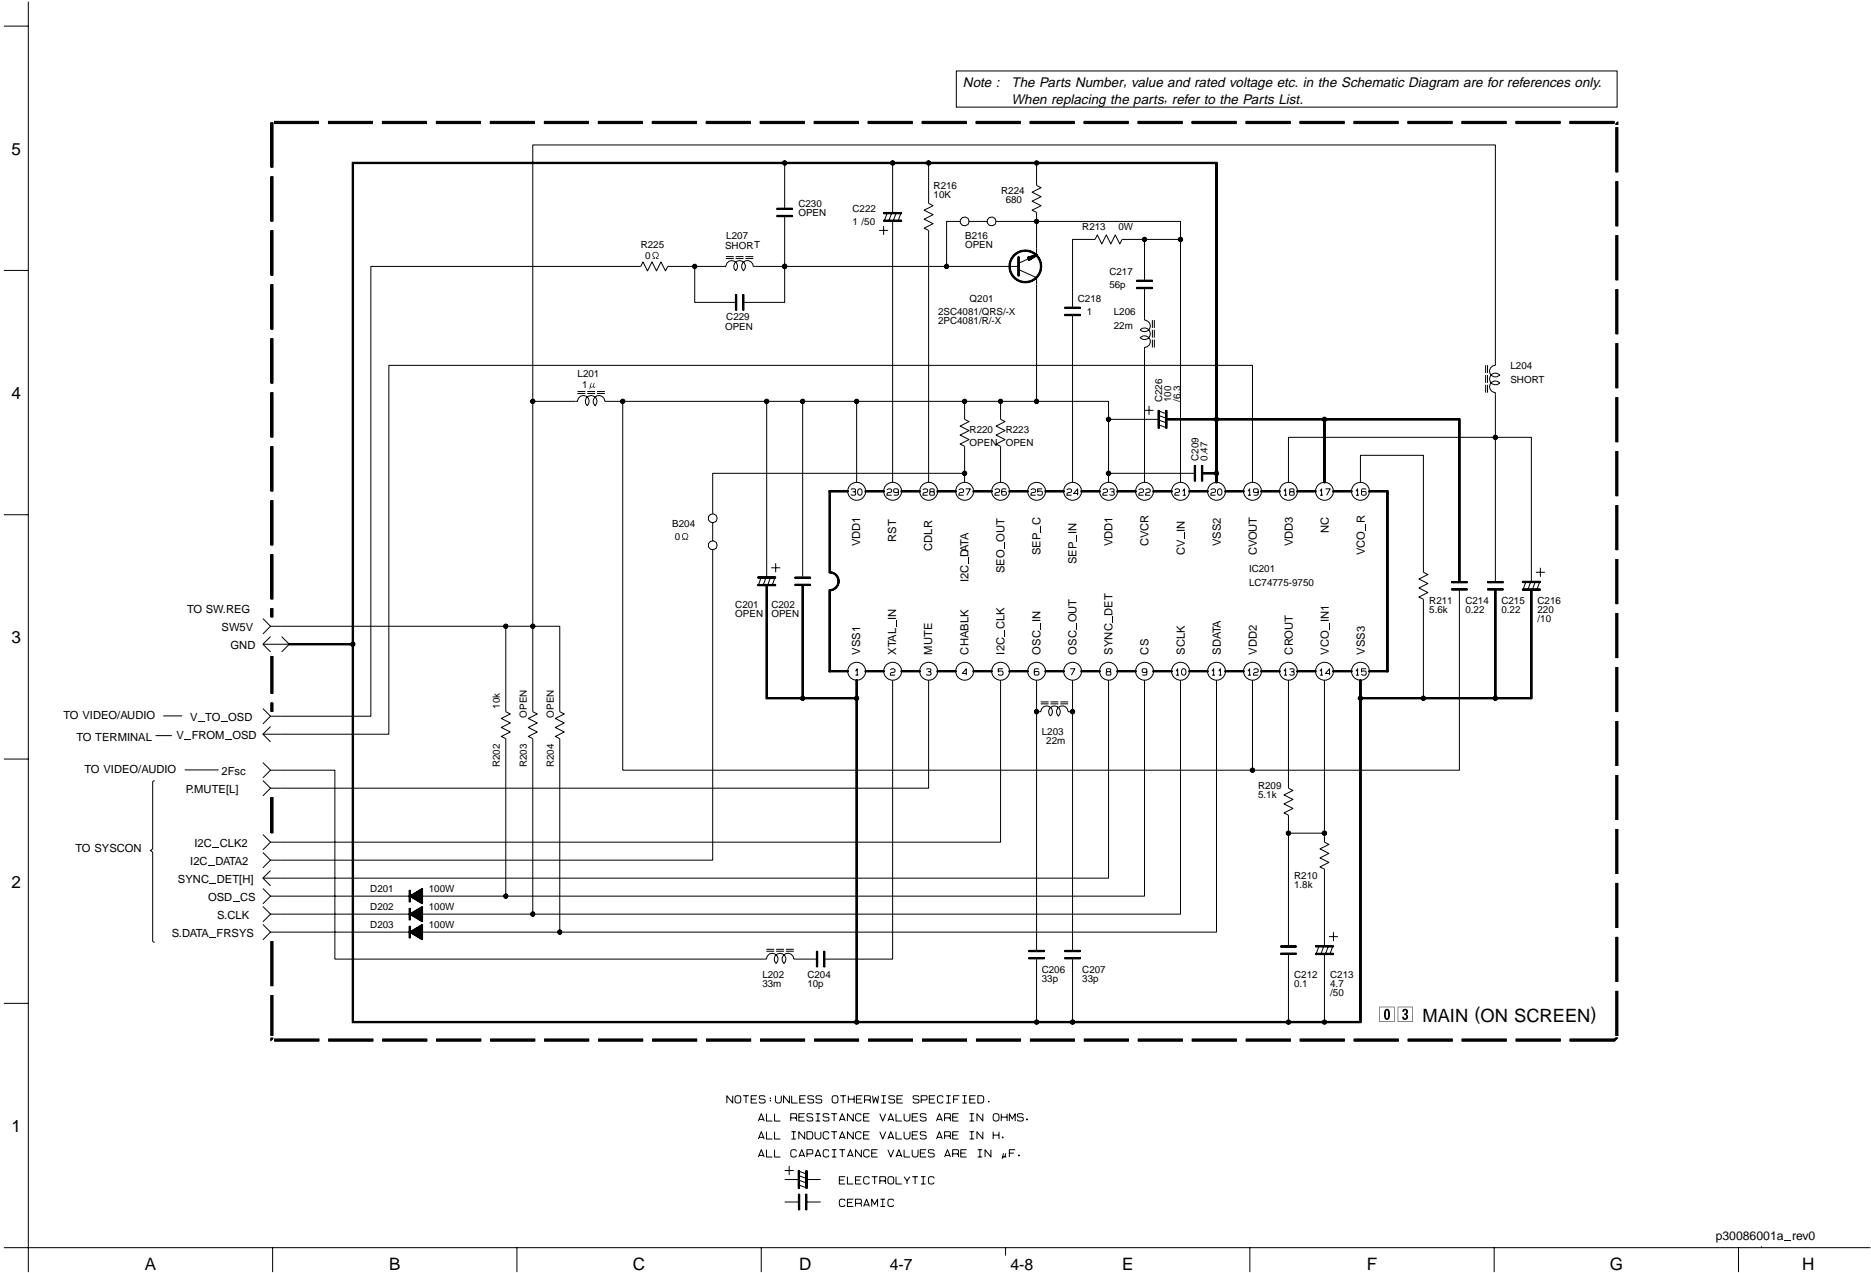


NOTES UNLESS OTHERWISE SPECIFIED.
 ALL RESISTANCE VALUES ARE IN OHMS.
 ALL INDUCTANCE VALUES ARE IN H.
 ALL CAPACITANCE VALUES ARE IN µF.

⊕ — ELECTROLYTIC
 — — CERAMIC

4.4 MAIN (SYSCON) SCHEMATIC DIAGRAM

Note : The Parts Number, value and rated voltage etc. in the Schematic Diagram are for references only. When replacing the parts, refer to the Parts List.

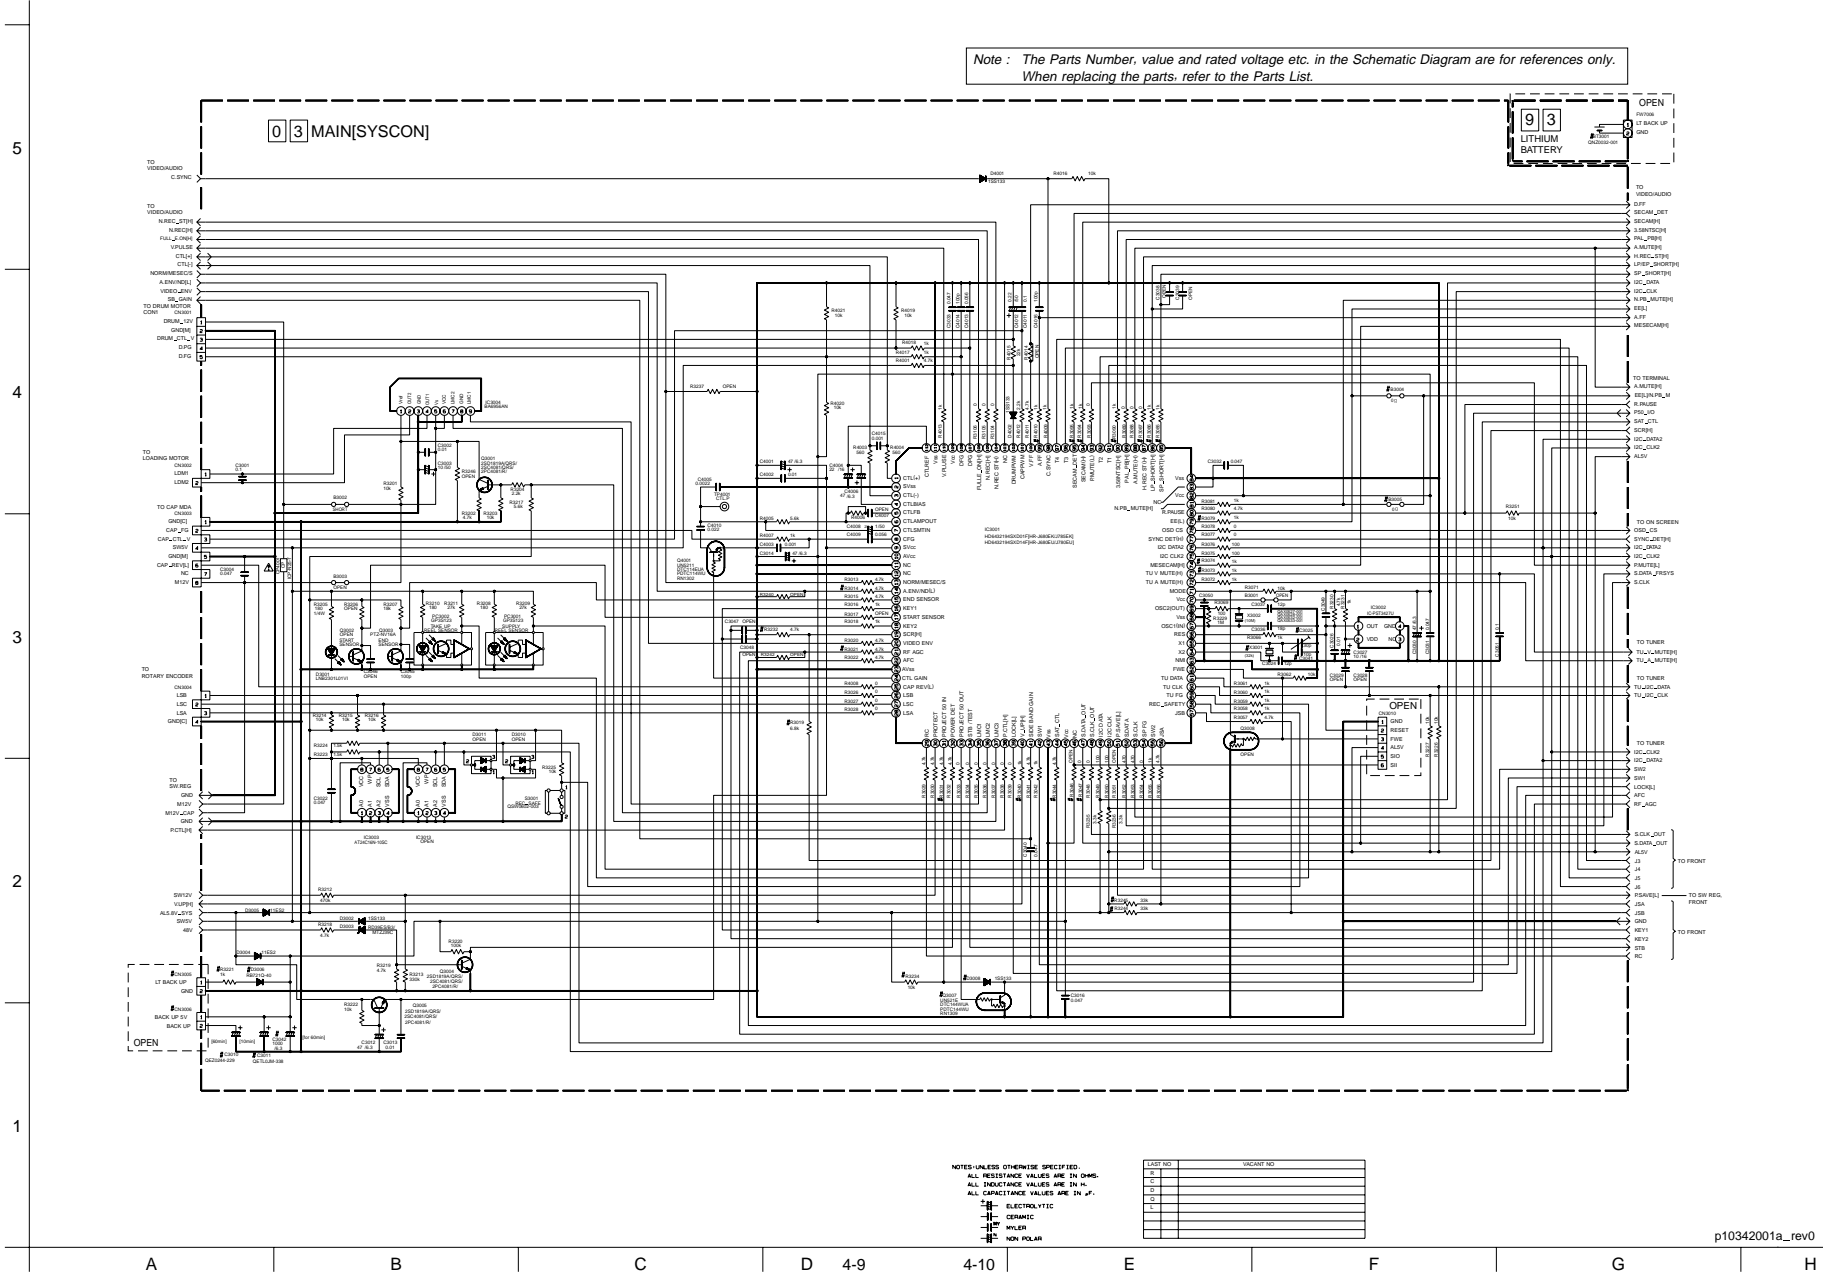


NOTES-UNLESS OTHERWISE SPECIFIED.
 ALL RESISTANCE VALUES ARE IN OHMS.
 ALL INDUCTANCE VALUES ARE IN mH.
 ALL CAPACITANCE VALUES ARE IN μF.

- RESISTOR
- CAPACITOR
- INDUCTOR
- DIODE
- ZENER DIODE
- LED
- TRIAC
- SCR
- THYRISTOR
- MOSFET
- BJT
- TRANSFORMER
- VARIABLE CAPACITOR
- VARIABLE INDUCTOR
- POTENTIOMETER
- SWITCH
- RELAY
- MICROSWITCH
- PUSH BUTTON
- TACTILE SWITCH
- THERMISTOR
- PHOTORESISTOR
- VOLTAGE DEPENDENT RESISTOR
- NEGATIVE TEMPERATURE COEFFICIENT THERMISTOR
- POSITIVE TEMPERATURE COEFFICIENT THERMISTOR
- NON-POLAR CAPACITOR

LAST NO.	VACANT NO.
1	
2	
3	
4	
5	
6	
7	
8	
9	
10	

4.5 MAIN (SW.REG) SCHEMATIC DIAGRAM

Note : The Parts Number, value and rated voltage etc. in the Schematic Diagram are for references only. When replacing the parts, refer to the Parts List.

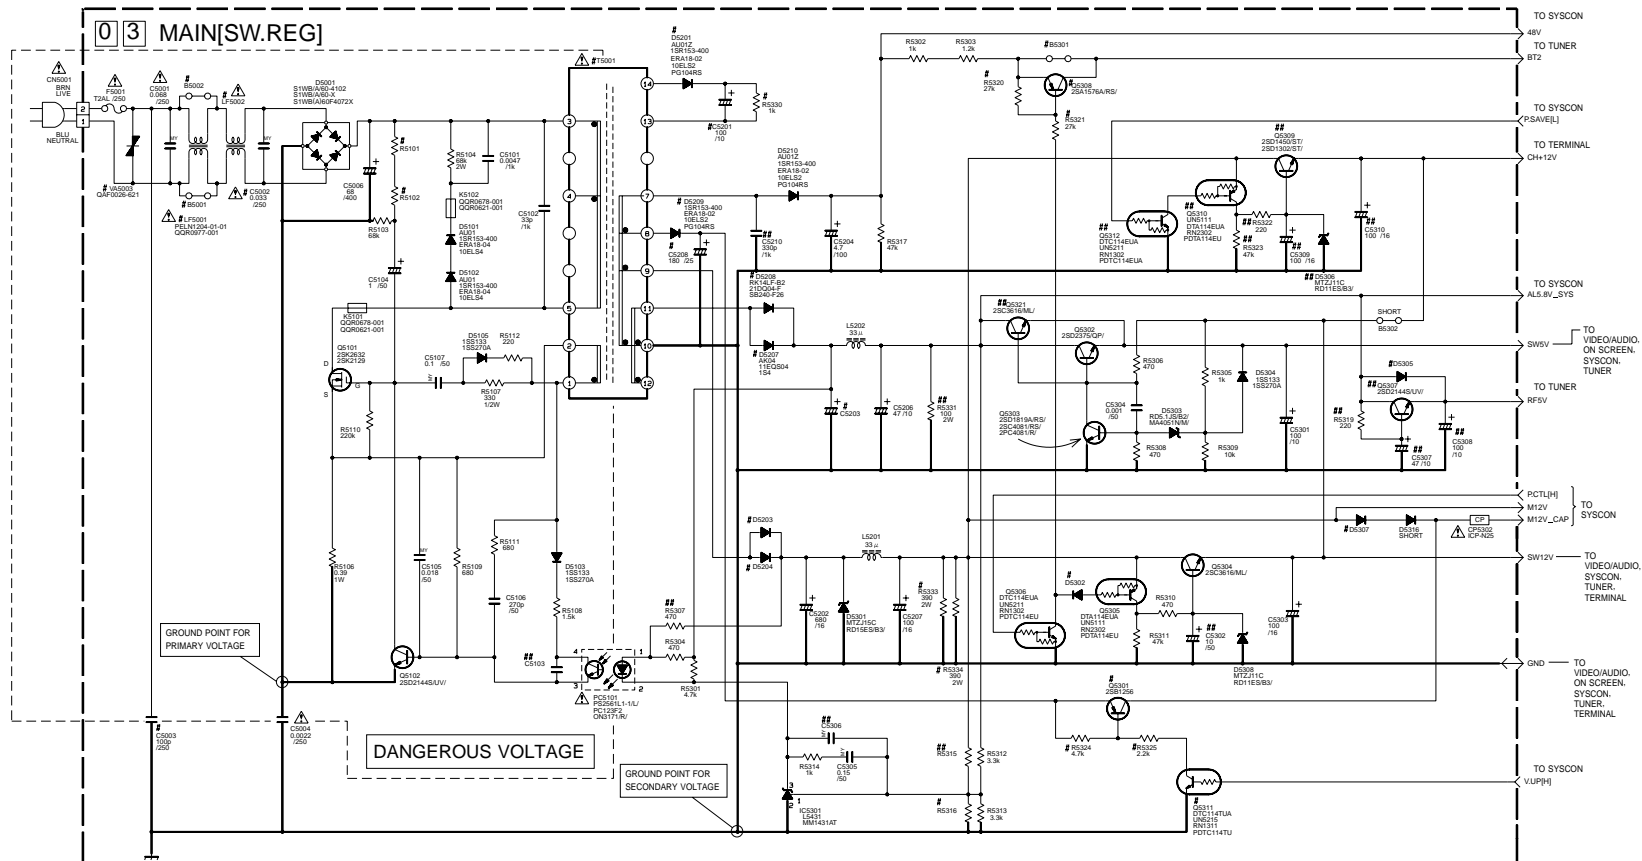

MARK ELEMENTS ARE NOT MOUNTED


DIFFERENCE TABLE 1		DIFFERENCE TABLE 2		DIFFERENCE TABLE 3		DIFFERENCE TABLE 4		DIFFERENCE TABLE 5		DIFFERENCE TABLE 6		DIFFERENCE TABLE 7	
HIGH SPEED FF/REW		POWER SAVE		CE		HIFI		AUTO		JVC		PH/75	
-YES-	YES	-YES-	NO	NO	NO	NO	NO	YES	NO	NO	NO	YES	YES
-NO-	NO	-NO-	YES	YES	YES	YES	YES	NO	YES	YES	YES	NO	NO

NOTES-UNLESS OTHERWISE SPECIFIED.
 ALL RESISTANCE VALUES ARE IN OHMS.
 ALL INDUCTANCE VALUES ARE IN H.
 ALL CAPACITANCE VALUES ARE IN μF.
 ELECTROLYTIC
 CERAMIC
 MYLAR
 NON POLAR

4.6 MAIN (TUNER) SCHEMATIC DIAGRAM

Note : The Parts Number, value and rated voltage etc. in the Schematic Diagram are for references only. When replacing the parts, refer to the Parts List.

03 MAIN (TUNER)

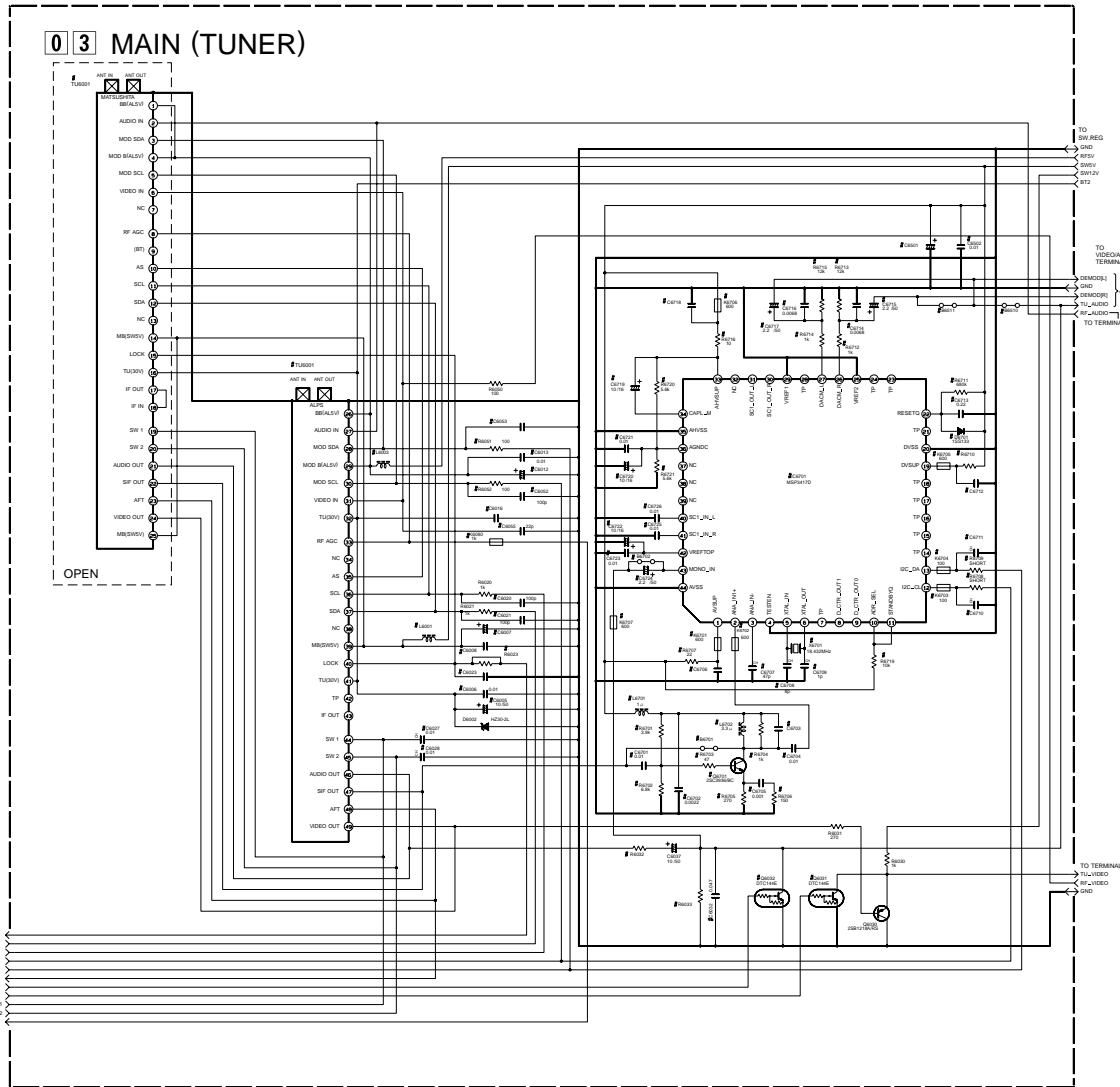


DIFFERENCE TABLE

TUNER UNIT	EURO				FRANCE NG				ASA SYSTEM				ASA SYSTEM			
	SET	MONO	MONO	MONO	SET	MONO	MONO	MONO	SET	MONO	MONO	MONO	SET	MONO	MONO	
TUNER UNIT	0301	0302	0303	0304	0305	0306	0307	0308	0309	0310	0311	0312	0313	0314	0315	
RF CONVERTER	0301	0302	0303	0304	0305	0306	0307	0308	0309	0310	0311	0312	0313	0314	0315	
IF AMP	0301	0302	0303	0304	0305	0306	0307	0308	0309	0310	0311	0312	0313	0314	0315	
VIDEO/VIDEO	0301	0302	0303	0304	0305	0306	0307	0308	0309	0310	0311	0312	0313	0314	0315	
RF AGC	0301	0302	0303	0304	0305	0306	0307	0308	0309	0310	0311	0312	0313	0314	0315	
TUNER PLL	0301	0302	0303	0304	0305	0306	0307	0308	0309	0310	0311	0312	0313	0314	0315	
CHANGING	0301	0302	0303	0304	0305	0306	0307	0308	0309	0310	0311	0312	0313	0314	0315	
AUDIO OUT	0301	0302	0303	0304	0305	0306	0307	0308	0309	0310	0311	0312	0313	0314	0315	
AUDIO MUTE	0301	0302	0303	0304	0305	0306	0307	0308	0309	0310	0311	0312	0313	0314	0315	
VIDEO MUTE	0301	0302	0303	0304	0305	0306	0307	0308	0309	0310	0311	0312	0313	0314	0315	
SEC. HORIZ. TUNER MONO	0301	0302	0303	0304	0305	0306	0307	0308	0309	0310	0311	0312	0313	0314	0315	
DEMOD	0301	0302	0303	0304	0305	0306	0307	0308	0309	0310	0311	0312	0313	0314	0315	
PRE AMP	0301	0302	0303	0304	0305	0306	0307	0308	0309	0310	0311	0312	0313	0314	0315	
MONO IN	0301	0302	0303	0304	0305	0306	0307	0308	0309	0310	0311	0312	0313	0314	0315	
AUDIO LOAD	0301	0302	0303	0304	0305	0306	0307	0308	0309	0310	0311	0312	0313	0314	0315	

NOTES-UNLESS OTHERWISE SPECIFIED.
 ALL RESISTANCE VALUES ARE IN OHMS.
 ALL INDUCTANCE VALUES ARE IN MH.
 ALL CAPACITANCE VALUES ARE IN PF.
 ELECTROLYTIC
 CERAMIC
 WILLY
 NON POLAR

4.7 MAIN (FRONT) AND ADJ.JOG SCHEMATIC DIAGRAMS

Note : The Parts Number, value and rated voltage etc. in the Schematic Diagram are for references only. When replacing the parts, refer to the Parts List.

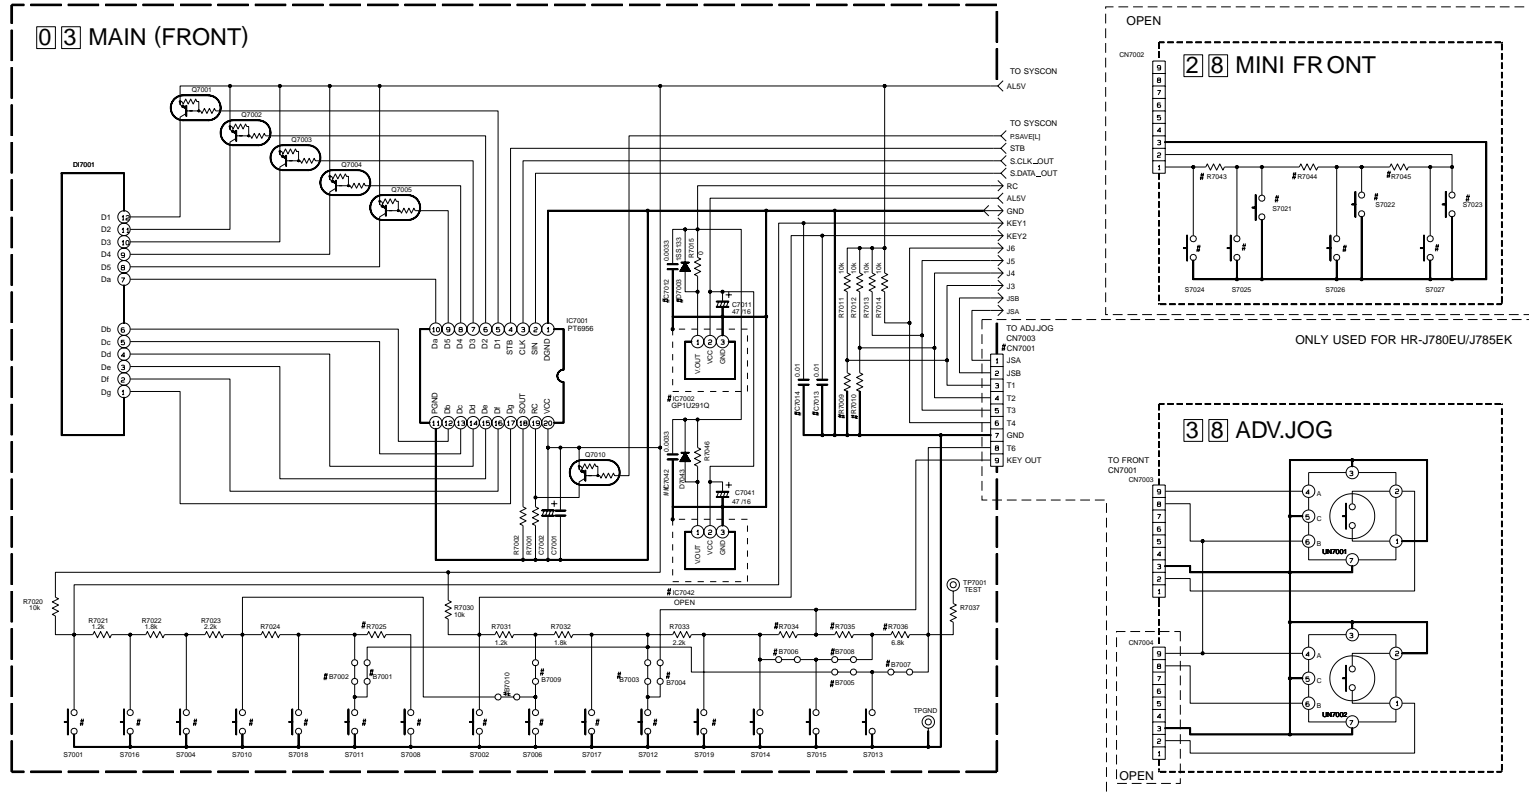

DIFFERENCE TABLE

O : Used
x : Not used


BRAND	TOOL	WORKING NUMBER	S7001	S7002	S7004	S7006	S7008	S7010	S7011	S7012	S7013	S7014	S7015	S7016	S7017	S7018	S7019	S7021 S7023	S7024 S7027	JIS	S7025	R7034	R7035 R7036	R7043 R7045	S7001	S7002	S7003	S7004	S7005 S7006	S7007	S7008	S7009	S7010
JVC	400HA	D1-D15	STAND-BY	A.DUB	REC	PAUSE	STOP/REACT	PLAY	---	E.PROG.	---	---	---	SAT.CTL.	---	---	---	---	---	adv	O	O	O	X	X	X	X	X	X	X	O	X	
	400A	D1-D11,D12	POWER	CH-	REC	PAUSE	STOP/REACT	REC.LNK	---	PLAY	---	REW	FF	CH+	---	---	---	---	---	X	O	O	O	X	X	X	X	X	X	O	O	X	
	360E	AT.A11.C1.D0A-D1-	STAND-BY	CH-	REC	PAUSE	STOP/REACT	SAT.CTL.	---	PLAY	---	REW	FF	CH+	---	---	---	---	X	O	O	O	X	X	X	X	X	X	O	O	X		
			STAND-BY	TIMER	CH-	CH+	---	DISPLAY	REC	---	PAUSE	---	STOP/REACT	SAT.CTL.	---	---	O	---	X	X	X	X	O	X	X	X	O	X	X	O	X		

NOTES-UNLESS OTHERWISE SPECIFIED.
ALL RESISTANCE VALUES ARE IN OHMS.
ALL INDUCTANCE VALUES ARE IN H.
ALL CAPACITANCE VALUES ARE IN μF.
ELECTROLYTIC
CERAMIC
MYLAR
NON-POLAR

LAST NO	VACANT NO

4.8 MAIN (TERMINAL), SAT CTL AND R.PAUSE SCHEMATIC DIAGRAMS


Note : The Parts Number, value and rated voltage etc. in the Schematic Diagram are for references only.
When replacing the parts, refer to the Parts List.

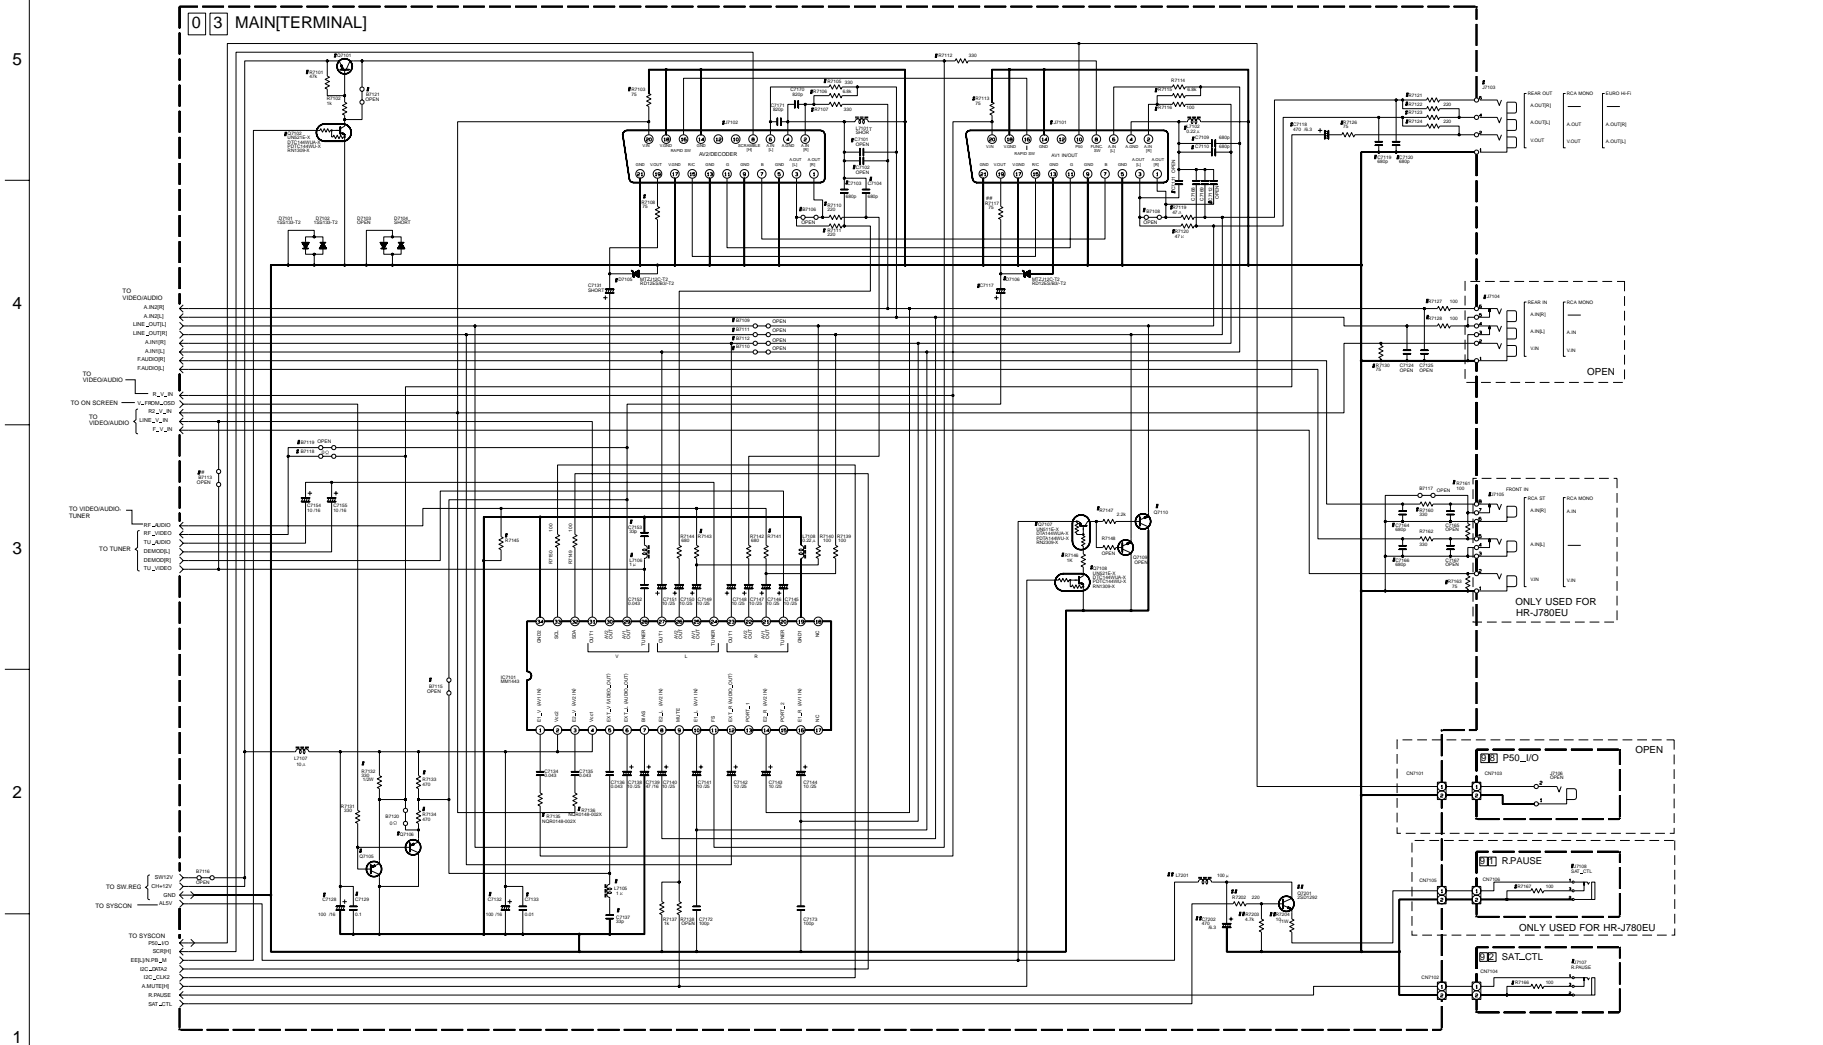

NOTES-UNLESS OTHERWISE SPECIFIED.
ALL RESISTANCE VALUES ARE IN OHMS.
ALL INDUCTANCE VALUES ARE IN μH.
ALL CAPACITANCE VALUES ARE IN pF.
ELECTROLYTIC
CERAMIC
WIPER
NON POLAR

4.9 REMOTE CONTROLLER SCHEMATIC DIAGRAM

- NOTES:
1. All parts shown in this schematic are critical for safety.
 2. This schematic is only for reference. Avoid replacing individual parts. Replace the entire unit only.

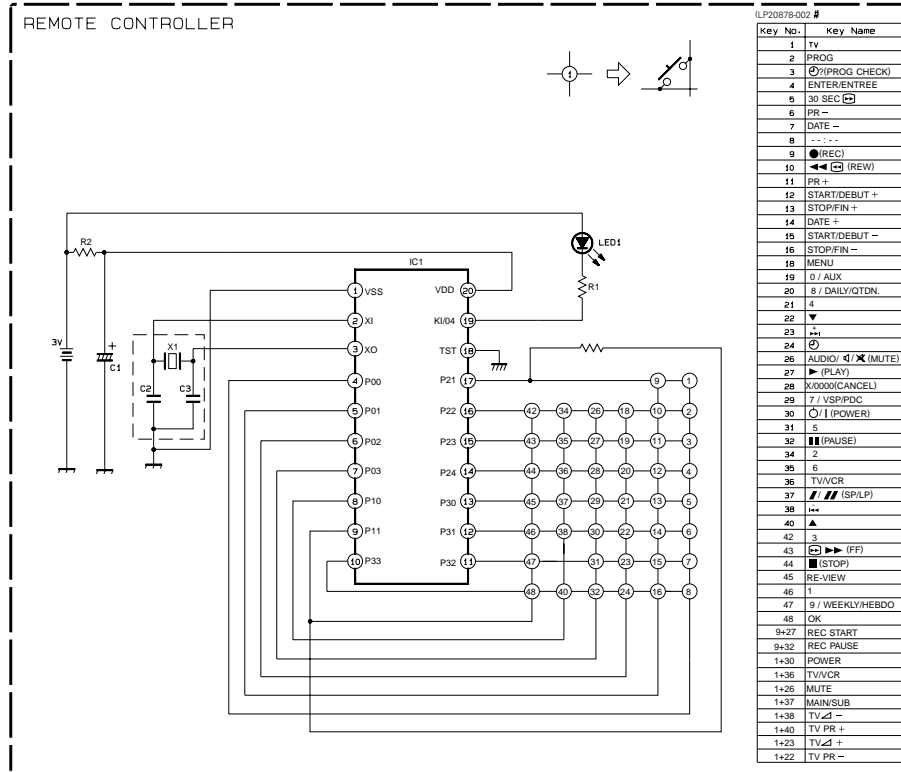


COMPONENT PARTS LOCATION GUIDE < MAIN >

Table with multiple columns for component types (Capacitor, Resistor, Diode, Transistor, Switch, Jack, Coil) and their corresponding location codes (REF.NO., LOCATION). The table lists various components like C1-C52, R1-R134, D1-D31, Q1-Q31, and TP1-TP10, along with their specific reference numbers and locations.

4.11 FDP GRID ASSIGNMENT AND ANODE CONNECTION


GRID ASSIGNMENT

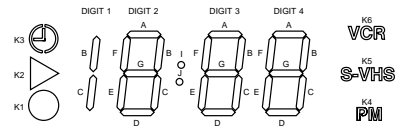

ANODE CONNECTION

No.	CONNECTION
1	CATHODE 2G, 3G, 4G, I, J
2	CATHODE 2F, 3F, 4F, K6
3	CATHODE 2E, 3E, 4E, K1
4	CATHODE 2D, 3D, 4D, K4
5	CATHODE 1C, 2C, 3C, 4C, K5
6	CATHODE 1B, 2B, 3B, 4B, K2
7	CATHODE 2A, 3A, 4A, K3
8	COMMON ANODE K3, K2, K5, K4, K1, K6, I, J
9	COMMON ANODE DIGIT4
10	COMMON ANODE DIGIT3
11	COMMON ANODE DIGIT2
12	COMMON ANODE DIGIT1

GRID ASSIGNMENT

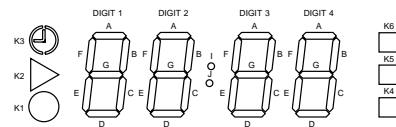


ANODE CONNECTION


No.	CONNECTION
1	CATHODE 1G, 2G, 3G, 4G, I, J
2	CATHODE 1F, 2F, 3F, 4F, K6
3	CATHODE 1E, 2E, 3E, 4E, K1
4	CATHODE 1D, 2D, 3D, 4D, K4
5	CATHODE 1C, 2C, 3C, 4C, K5
6	CATHODE 1B, 2B, 3B, 4B, K2
7	CATHODE 1A, 2A, 3A, 4A, K3
8	COMMON ANODE K3, K2, K5, K4, K1, K6, I, J
9	COMMON ANODE DIGIT4
10	COMMON ANODE DIGIT3
11	COMMON ANODE DIGIT2
12	COMMON ANODE DIGIT1

4.12 WAVEFORMS


< SYSCON >

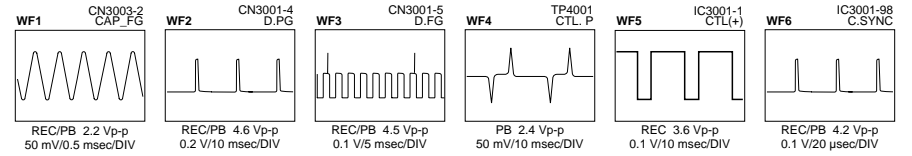


< VIDEO >

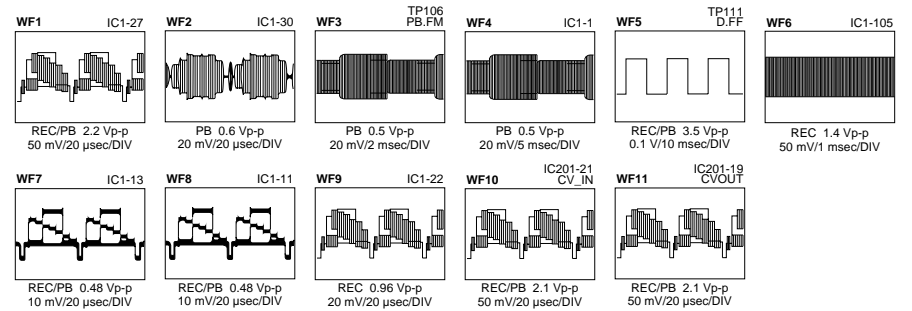

< AUDIO >

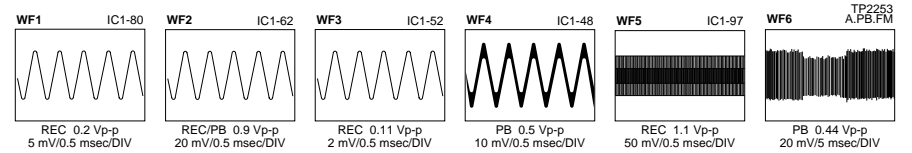


4.15 SYSTEM CONTROL BLOCK DIA GRAM

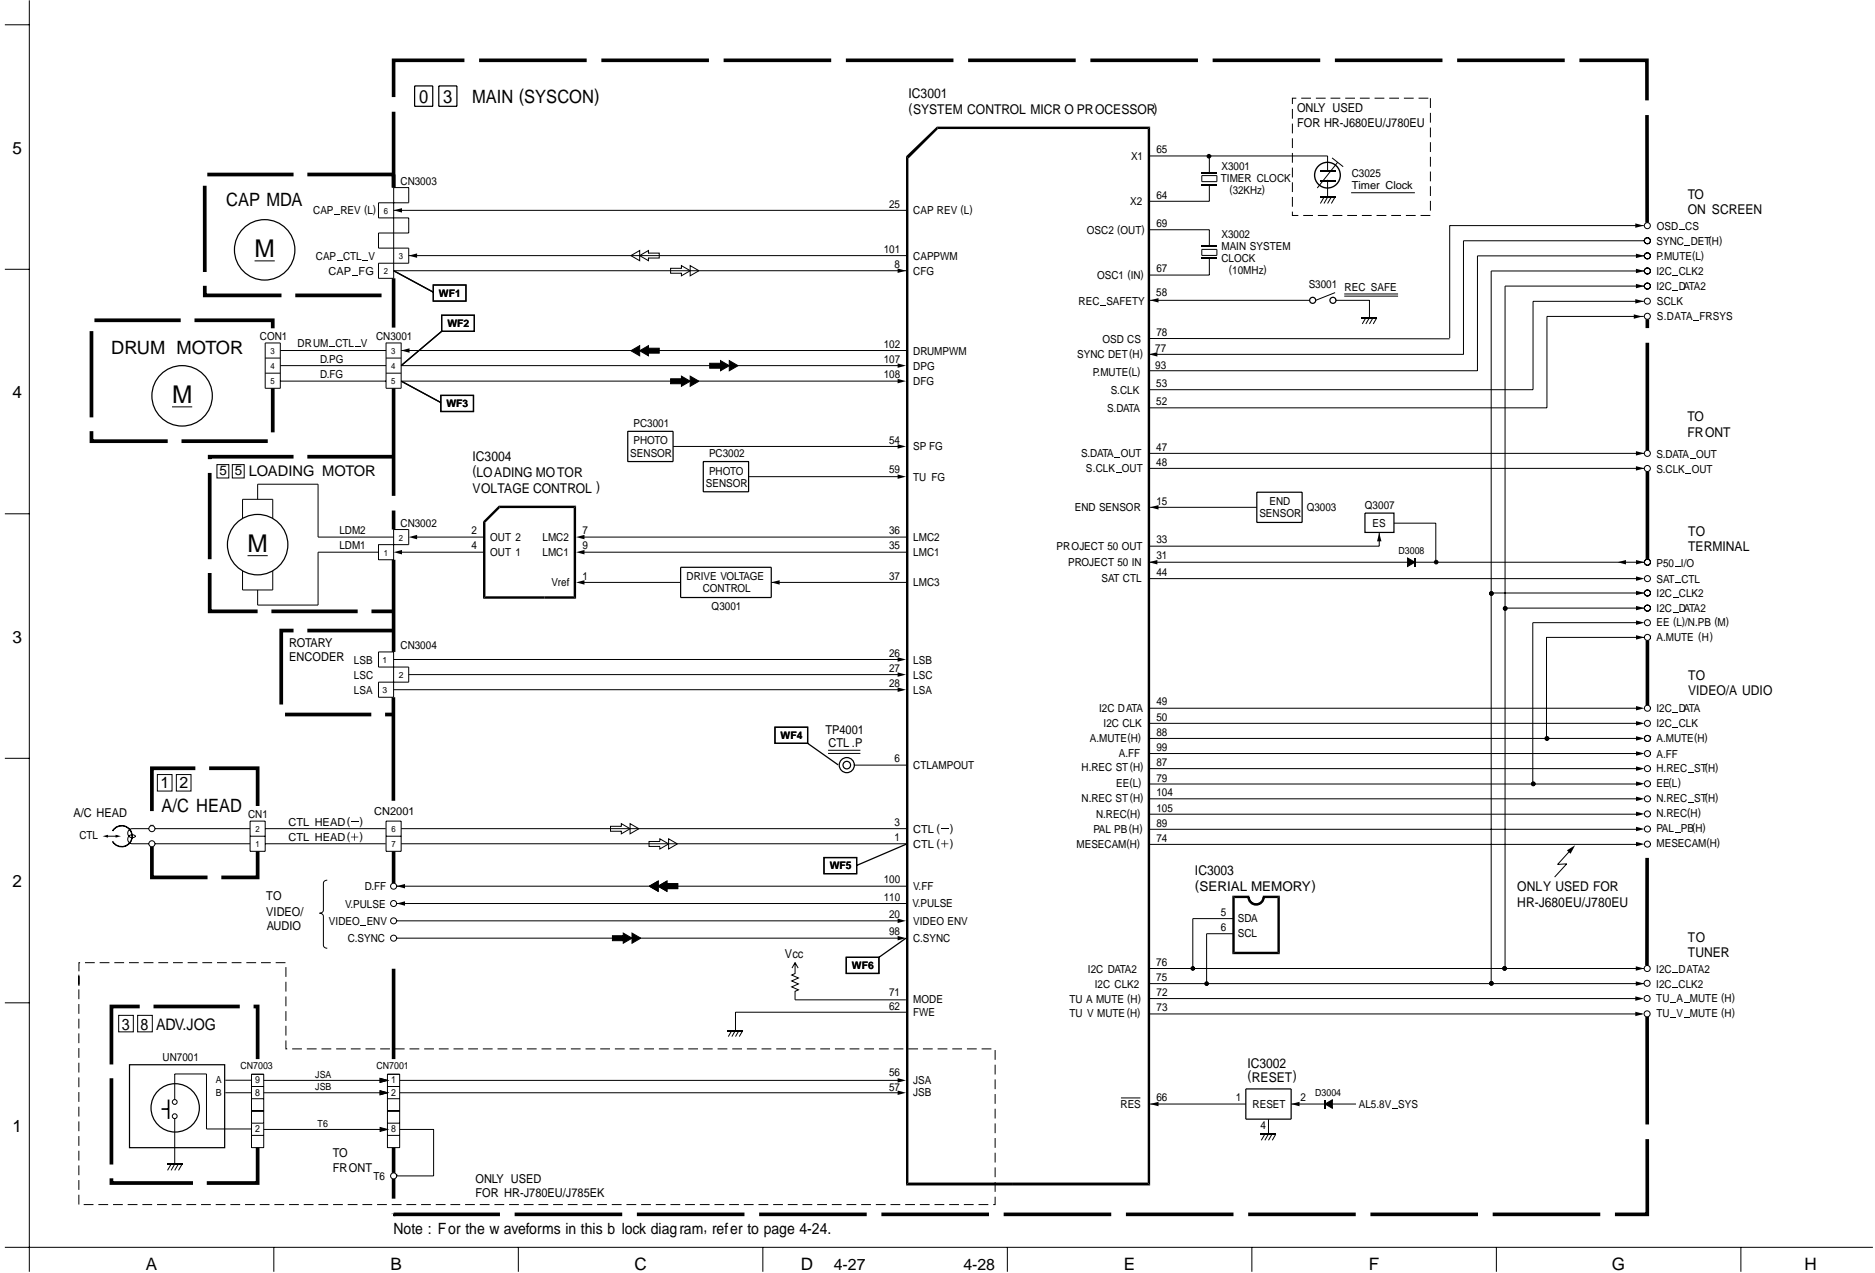


Note : For the waveforms in this block diagram, refer to page 4-24.

4.16 VIDEO BLOCK DIA GRAM

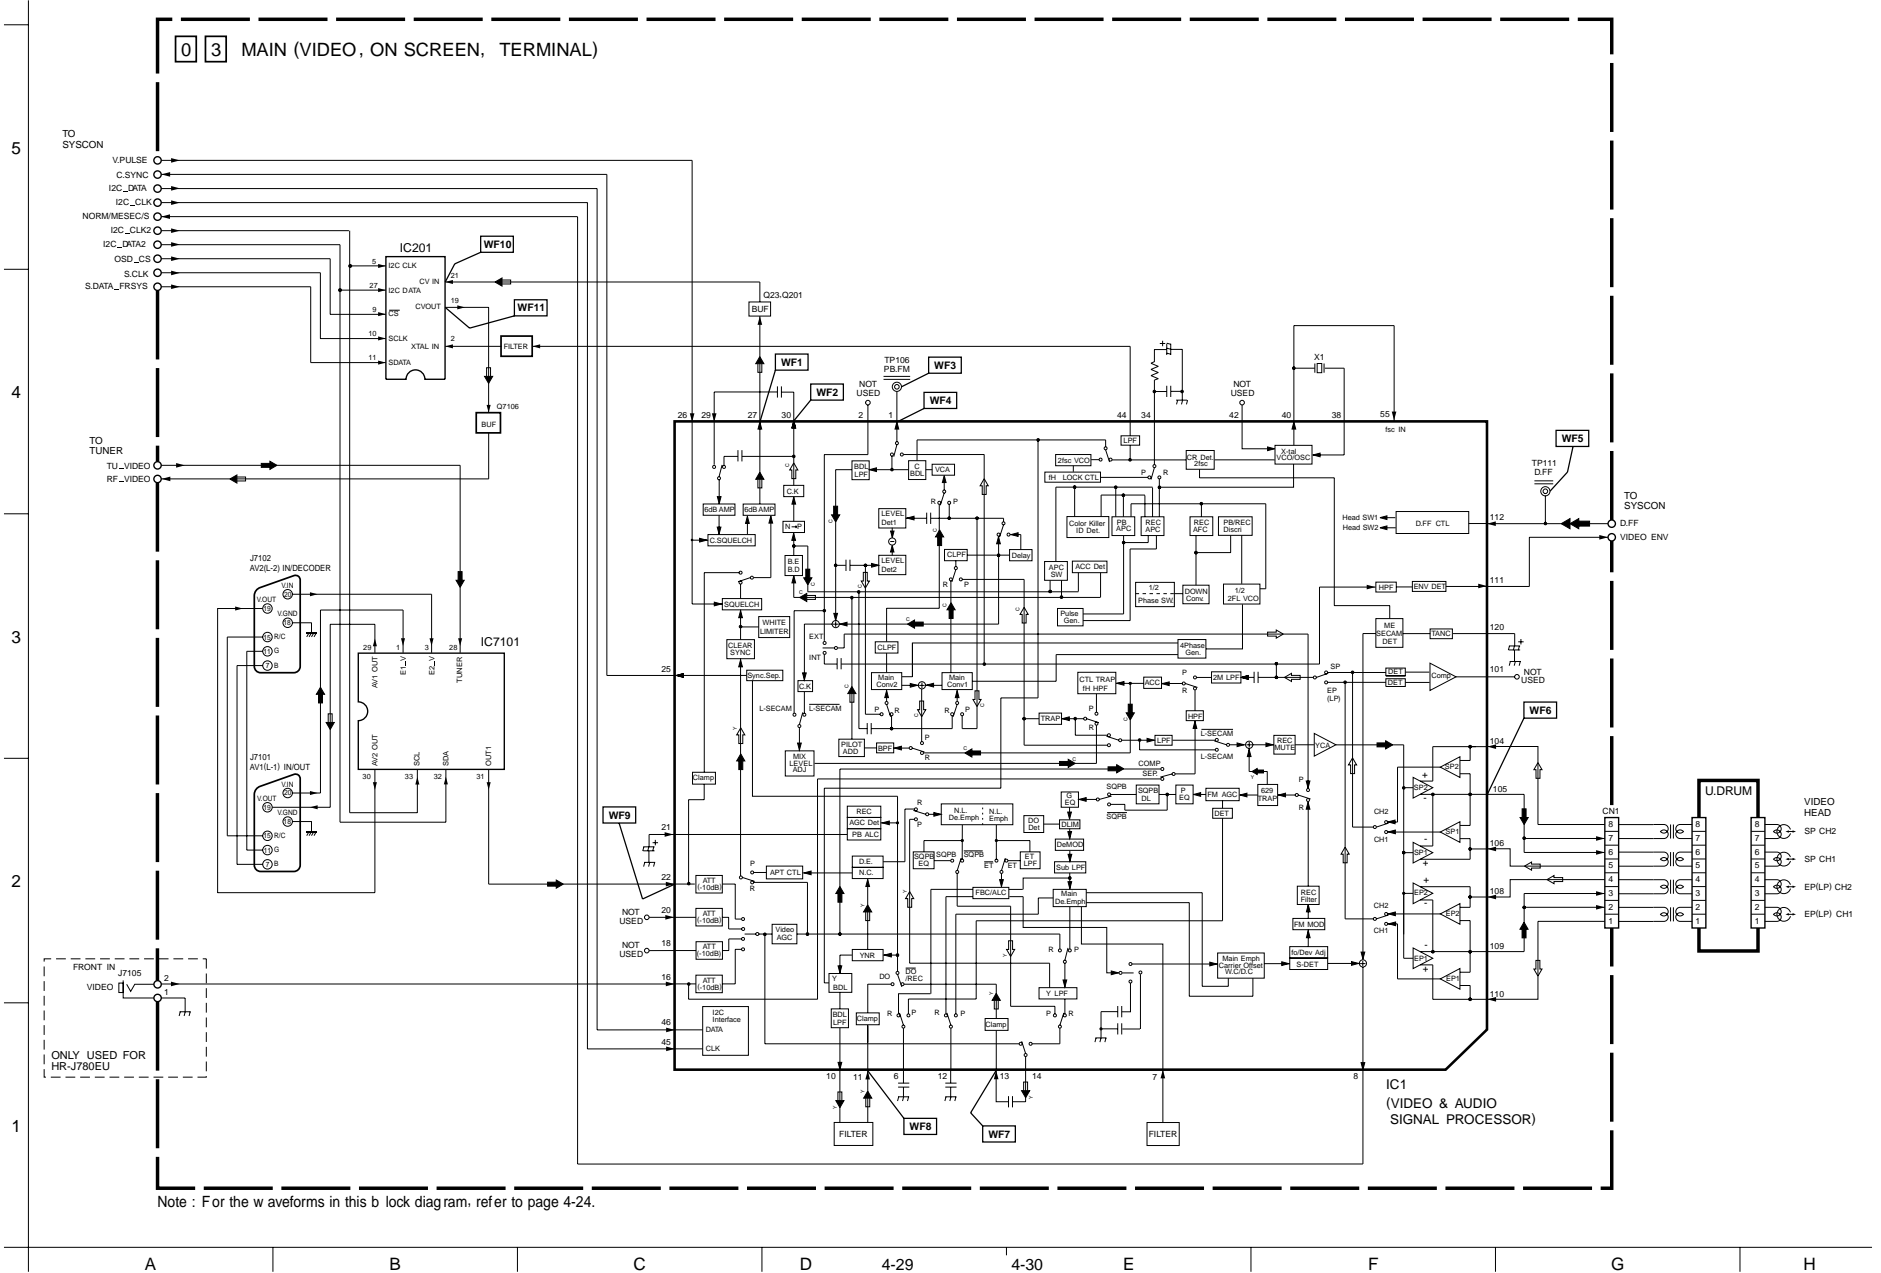

4.17 AUDIO BLOCK DIA GRAM

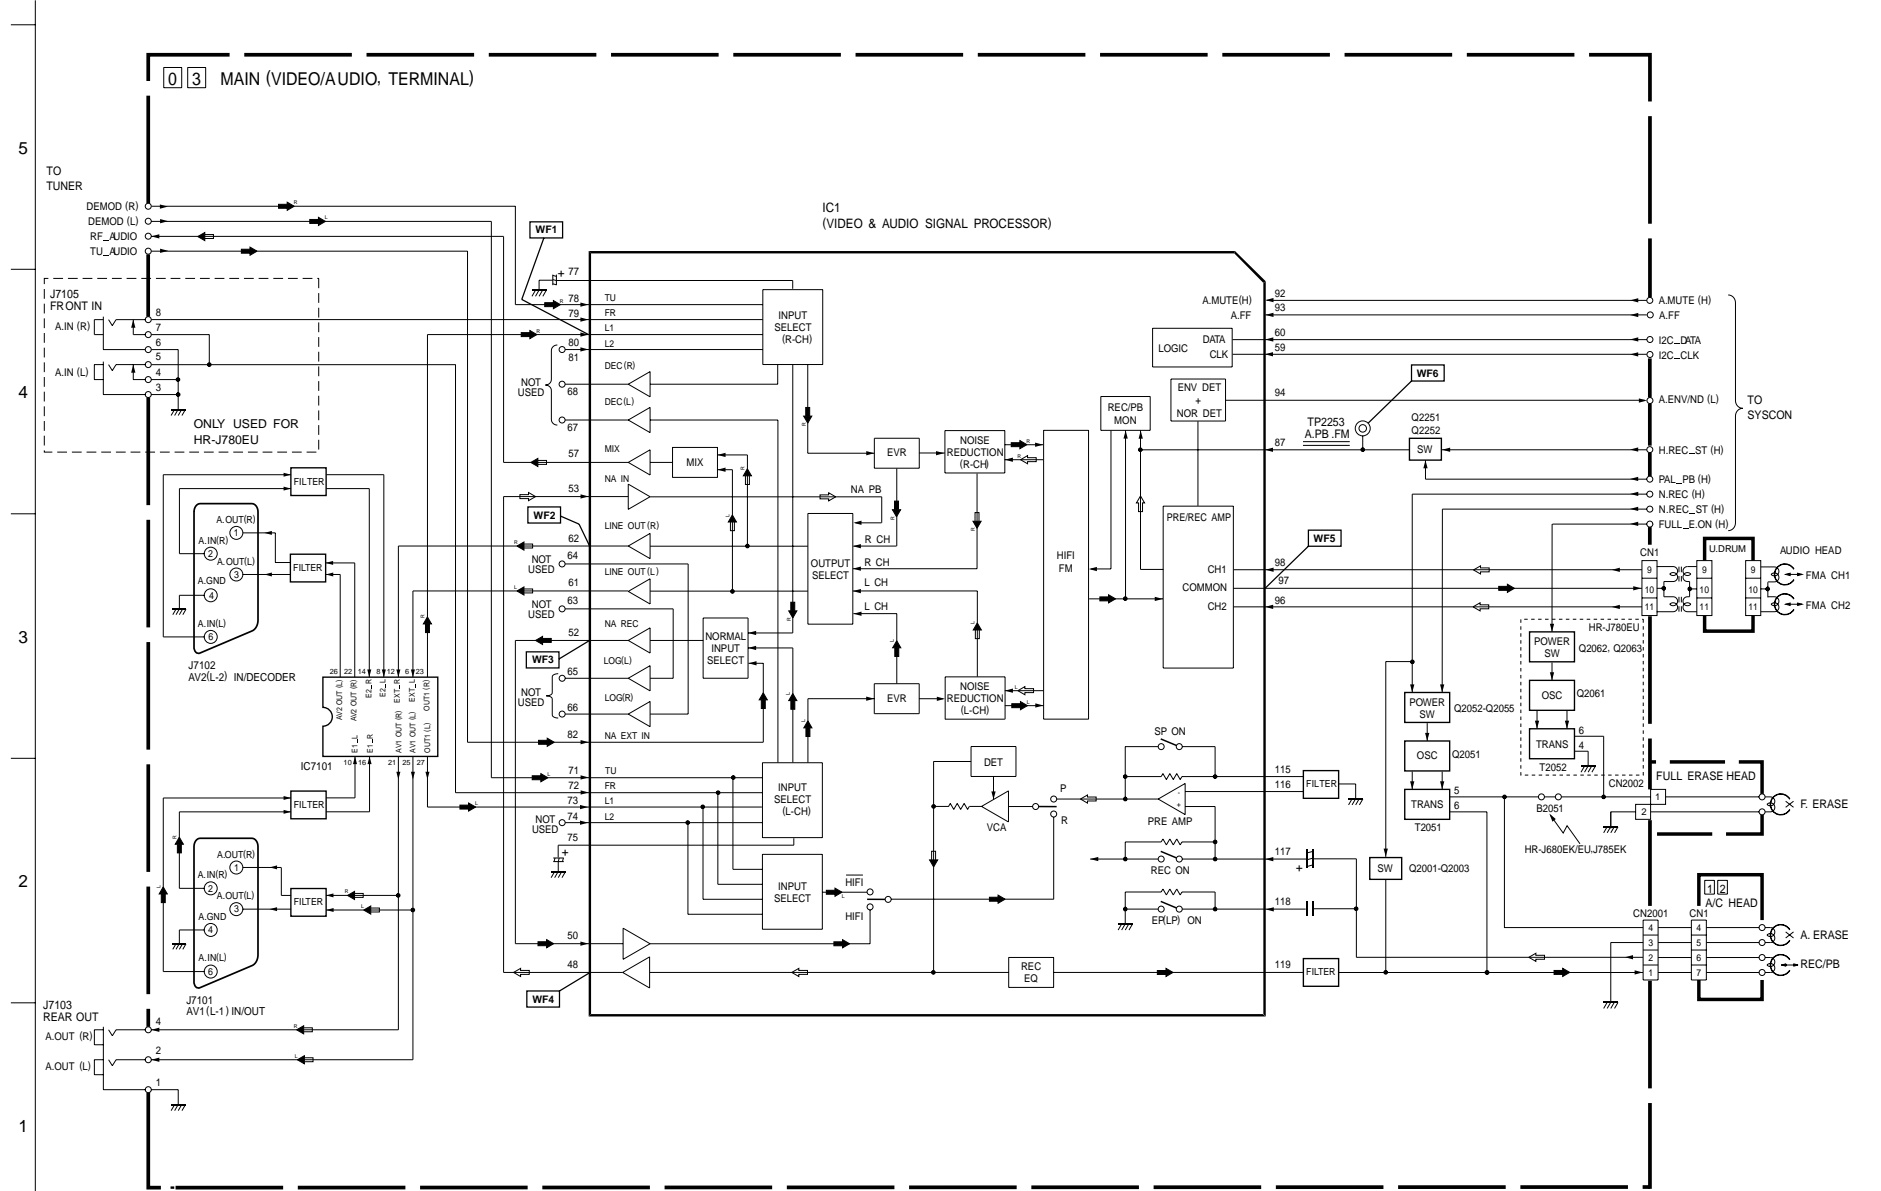

Note : F or the w aveforms in this b lock diag ram, ref er to page 4-24.


SECTION 5 PARTS LIST

SAFETY PRECAUTION

Parts identified by the \triangle symbol are critical for safety. Replace only with specified part numbers.

5.1 PACKING AND ACCESSORY ASSEMBLY <M1>

The instruction manual to be provided with this product will differ according to the destination.

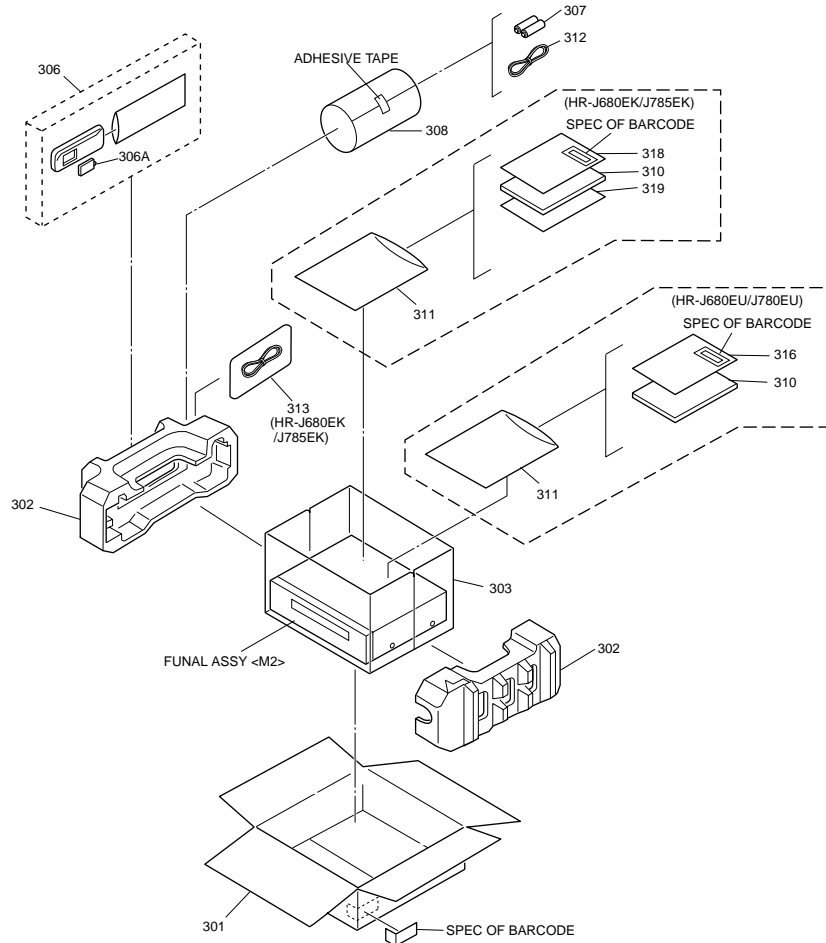


# \triangle	REF No.	PART No.	PART NAME, DESCRIPTION	# \triangle	REF No.	PART No.	PART NAME, DESCRIPTION

PACKING AND ACCESSORY ASSEMBLY <M1>							
		301	LP30855-001A			LPT0482-013A	INST BOOK(CZ),J680EU
		302	LP30909-001B			LPT0482-014A	INST BOOK(PO),J680EU
		303	PQM30021-93			LPT0482-015A	INST BOOK(HU),J680EU
		306	LP20878-002A			LPT0483-001A	INST BOOK(EN),J780EU
		306A	LP40610-002A			LPT0483-002A	INST BOOK(GE),J780EU
		307	-			LPT0483-003A	INST BOOK(FR),J780EU
		308	QPC02202230P			LPT0483-004A	INST BOOK(DU),J780EU
\triangle		310	LPT0474-001A	\triangle		LPT0483-005A	INST BOOK(SP),J780EU
\triangle			LPT0482-001A	\triangle		LPT0483-006A	INST BOOK(IT),J780EU
\triangle			LPT0482-002A	\triangle		LPT0483-007A	INST BOOK(DA),J780EU
\triangle			LPT0482-003A	\triangle		LPT0483-008A	INST BOOK(FI),J780EU
\triangle			LPT0482-004A	\triangle		LPT0483-009A	INST BOOK(SW),J780EU
\triangle			LPT0482-005A	\triangle		LPT0483-010A	INST BOOK(NO),J780EU
\triangle			LPT0482-006A	\triangle		LPT0483-011A	INST BOOK(PT),J780EU
\triangle			LPT0482-007A	\triangle		LPT0483-012A	INST BOOK(GR),J780EU
\triangle			LPT0482-008A	\triangle		LPT0483-013A	INST BOOK(CZ),J780EU
\triangle			LPT0482-009A	\triangle		LPT0483-014A	INST BOOK(PO),J780EU
\triangle			LPT0482-010A	\triangle		LPT0483-015A	INST BOOK(HU),J780EU
\triangle			LPT0482-011A	\triangle		LPT0545-001A	INST BOOK(EN),J785EK
\triangle			LPT0482-012A	\triangle		311	QPC02503530P
						312	PEAC0300-02
						313	QAL0095-005
						316	BT-54013-2
						318	BT-54008-2
						319	LYT0194-001B
							RF CABLE
							LED CABLE ASSY(Satellite Controller),J680EK/J785EK
							WARRANTY CARD, J680EU/J780EU
							GUARANTY CARD, J680EK/J785EK
							Q.CARD(JUK),J680EK/J785EK

5.2 FINAL ASSEMBLY <M2>

BEWARE OF BOGUS PARTS

Parts that do not meet specifications may cause trouble in regard to safety and performance. We recommend that genuine JVC parts be used.

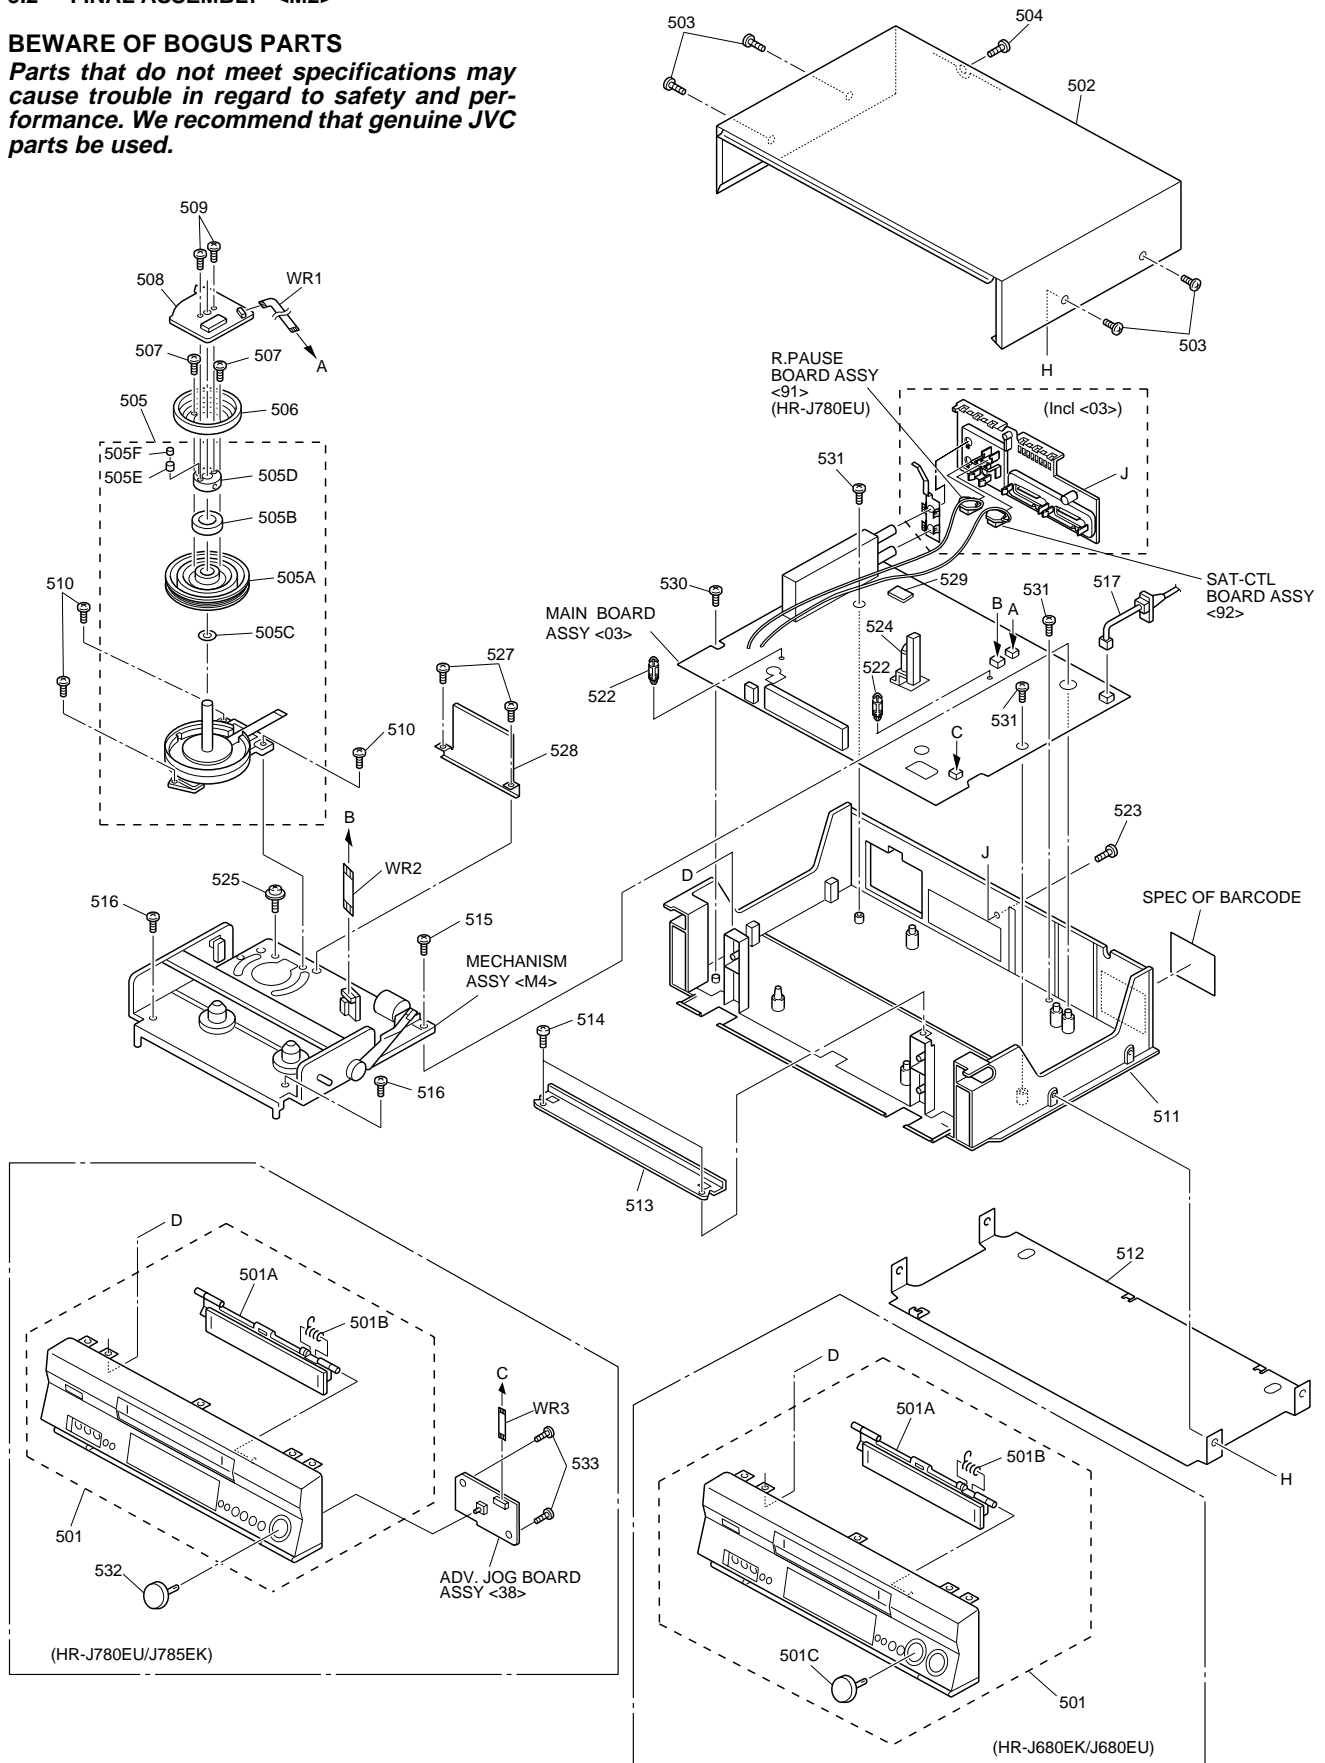


▲ REF No. PART No. PART NAME, DESCRIPTION

▲ REF No. PART No. PART NAME, DESCRIPTION

FINAL ASSEMBLY <M2>

▲	501	LP10333-001B	FRONT PANEL ASSY,J680EU
▲		LP10333-005B	FRONT PANEL ASSY,J780EU
▲		LP10333-009B	FRONT PANEL ASSY,J785EK
▲		LP10333-012B	FRONT PANEL ASSY,J680EK
	501A	LP20961-001A	CASSETTE DOOR
	501B	PQ46448	TORSION SPRING
	501C	LP30798-001A	BUTTON(OPE),J680EK/EU
▲	502	LP10013-051A	TOP COVER
	503	QYTDSF3010R	SCREW,X4 TOP COVER(SIDE)
	504	QYTDSF3010M	SCREW,TOP COVER(REAR)
	505	LP20981-002A	DRUM SUB ASSY
	505A	LP20982-002A	UPPER DRUM ASSY
	505B	PDM4439	CAP
	505C	PDM4444-19-2	WASHER
	505D	LP40572-001A	COLLAR ASSY
	505E	LP40323-001A	CONTACT
	505F	LP30004-014A	COMPRESSION SPRING
	506	PDZ0179-1-4	ROTOR ASSY
	507	QYSPSP3006Z	SCREW,X2
▲	508	QAR0169-002	STATOR ASSY
	509	QYSPSPH2606Z	SCREW,X2
	510	QYTDST2610Z	SCREW,X3 DRUM
▲	511	LP10108-001E	BOTTOM CHASSIS
▲	512	LP10014-002B	BOTTOM COVER
	513	LP30312-001B	BRACKET(CHASSIS)
	514	QYTDSF3010Z	SCREW,X2
	515	QYTDSF4012Z	SCREW,MECHA
	516	QYTDSF3010Z	SCREW,X2 MECHA
▲	517	QMP4A10-170	POWER CORD,J680EU/J780EU
▲		QMP51K0-170-K	POWER CORD,J680EK/J785EK
	522	LP40226-001A	PC SUPPORT,X2
	523	QYTDSF3010M	SCREW,TERMINAL
	524	LP40253-001B	STOPPER
	525	PQ40413	SPECIAL SCREW,MECHA
	527	LP30356-002C	DRUM SHIELD
	528	QYTDST2606Z	SCREW,X2 DRUM SHIELD
	529	LP30002-042A	SPACER
	530	QYTDSF3010Z	SCREW,MAIN
	531	DPSF3010Z	SCREW,X3
	532	LP30854-001B	KNOB(ADV.JOG),J780EU/J785EK
	533	QYTPSFG2608Z	SCREW,X2,J780EU/J785EK
	WR1	QUQ212-0518CG	FFC WIRE,DRUM CN3001
	WR2	WJT0005-001A	E-CARD WIRE,A/C HEAD CN2001
	WR3	QUQ112-0914CG	FFC WIRE,FRONT CN7001,J780EU/J785EK

5.3 MECHANISM ASSEMBLY <M4>

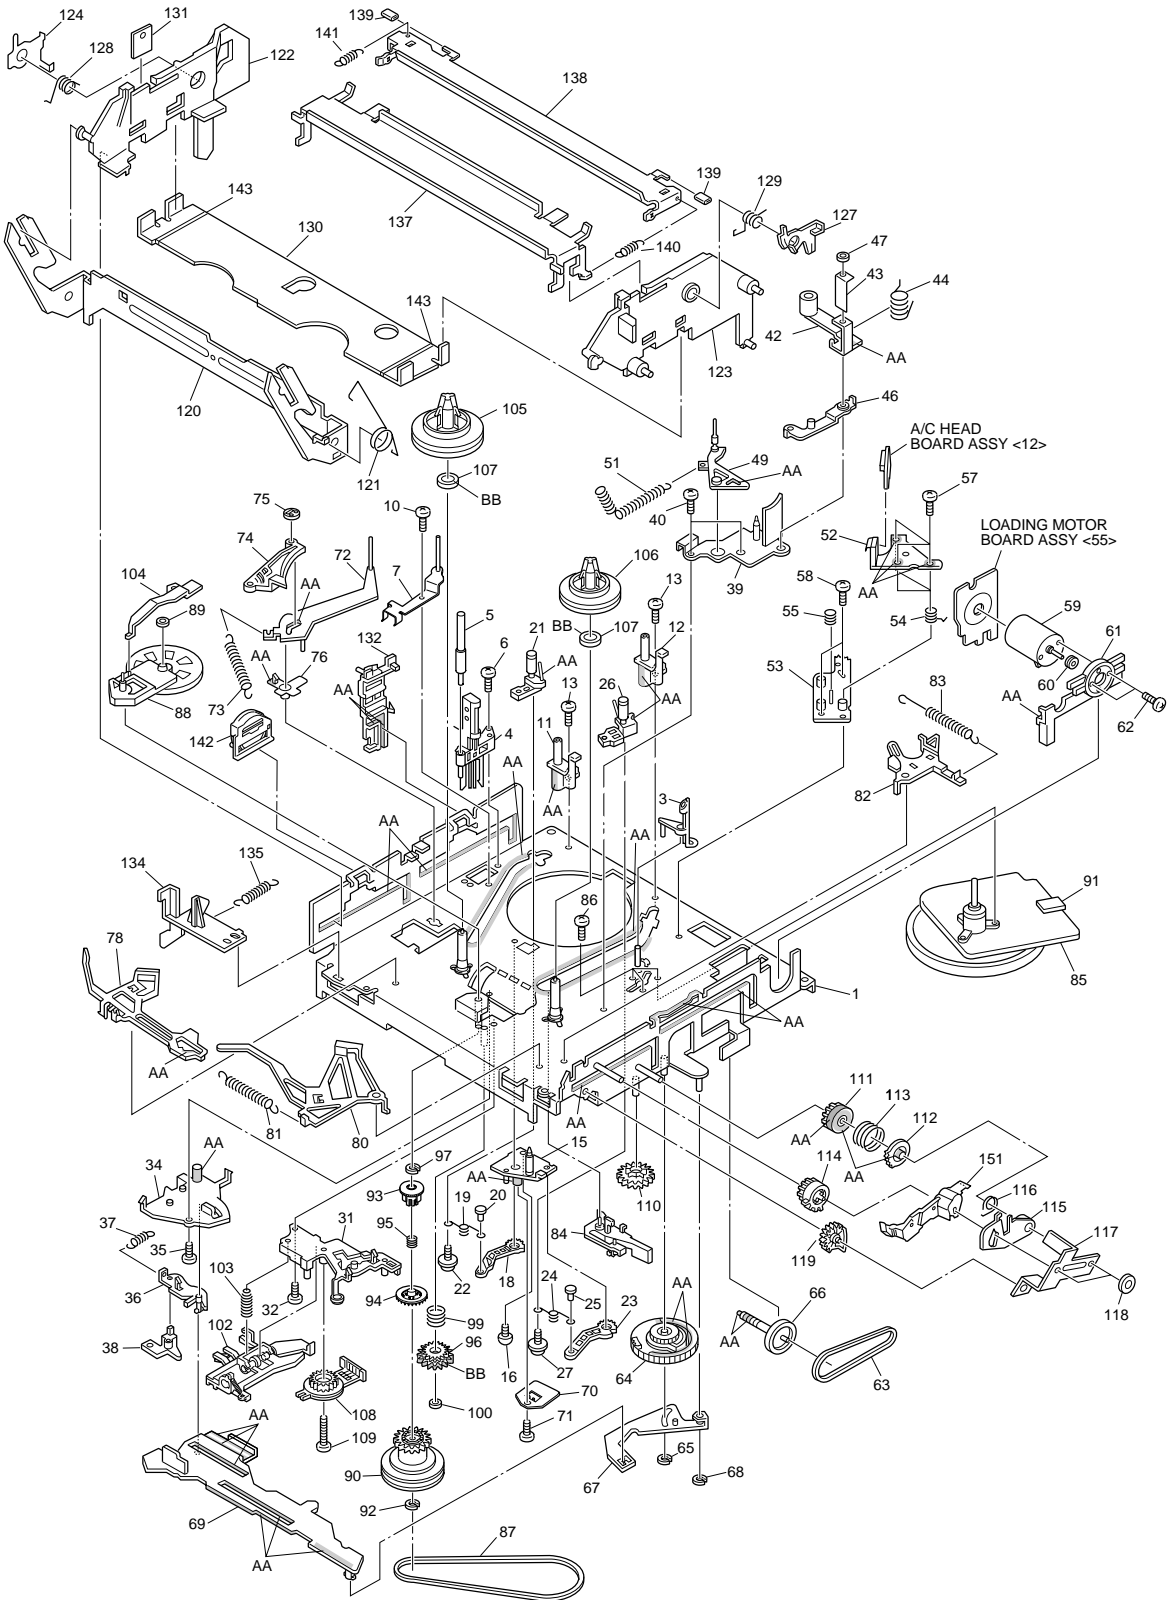

Classification	Part No.	Symbol in drawing
Grease	KYODO-SH-P	AA
Oil	COSMO-HV56	BB

NOTE:The section marked in AA and BB indicate lubrication and greasing areas.

#	△	REF No.	PART No.	PART NAME, DESCRIPTION	#	△	REF No.	PART No.	PART NAME, DESCRIPTION

MECHANISM ASSEMBLY <M4>									
1			LP20821-006A	MAIN DECK ASSY	75			PQ46302-1-3	ADJUST PIN
3			LP30492-002B	GUIDE POLE GUARD	76			LP30232-002A	TENSION ARM BEARING
4			NAH0001-001	FULL ERASE HEAD	78			LP40532-008B	MAIN BRAKE ASSY (SUPPLY)
5			LP40098-001B	GUIDE POLE(SUPPLY)	80			LP40111-011A	MAIN BRAKE ASSY (TAKE UP)
6			QYTDST2608Z	SCREW,FE HEAD	81			LP30003-026A	TENSION SPRING
7			LP40637-002A	TENSION STUD BASE ASSY	82			LP40112-001F	SUB BRAKE ASSY(TAKE UP)
10			QYTDST2606Z	SCREW	83			LP40357-002A	TENSION SPRING
11			LP30409-002C	UV CATCHER 2	84			LP40461-001A	CAPSTAN BRAKE ASSY
12			LP30409-002C	UV CATCHER 2	85			QAR0087-005	CAPSTAN MOTOR
13			QYTPST2606Z	SCREW,X2	86			QYTDSF2606M	SCREW,X3
15			LP30223-003C	LOADING ARM GEAR SHAFT	87			LP30005-007A	BELT,CAPSTAN MOTOR
16			QYTDST2606Z	SCREW	88			LP40114-012A	IDLER ARM ASSY
18			LP30224-001B	LOADING ARM GEAR(SUPPLY)	89			LP40599-001A	WASHER
19			LP40099-001A	TORSION ARM	90			LP40593-001A	CLUTCH UNIT 3
20			LP40100-001A	PIN	91			LP30002-097A	SPACER,CAPSTAN MOTOR
21			LP40101-006A	POLE BASE ASSY(SUPPLY)	92			PQM30017-47	SLIT WASHER
22			QYSPSTG2606Z	SCREW	93			LP30696-002A	CLUTCH GEAR 4
23			LP40103-002B	LOADING ARM GEAR(TAKE UP)	94			LP30697-003A	COUPLING GEAR
24			LP40099-001A	TORSION ARM	95			LP40554-002A	COMPRESSION SPRING
25			LP40100-001A	PIN	96			LP40442-001A	DIRECT GEAR
26			LP40104-006A	POLE BASE ASSY(TAKE UP)	97			LP30017-019A	SPACER
27			QYSPSTG2606Z	SCREW	99			LP40483-002A	COMPRESSION SPRING
31			LP20233-004B	ROTARY ENCODER GUIDE	100			LP30016-001A	SLIT WASHER
32			QYTPST2606Z	SCREW	102			LP40484-001J	CHANGE LEVER ASSY
34			LP30226-004E	CONTROL PLATE GUIDE	103			LP40512-002B	COMPRESSION SPRING
35			QYTPST2605Z	SCREW	104			LP30236-002C	IDLER LEVER
36			LP30249-003B	TAKE UP LEVER	105			LP20237-001B	REEL DISK (SUPPLY)
37			LP30003-006A	TENSION SPRING	106			LP20238-001B	REEL DISK (TAKE UP)
38			LP40119-002A	TAKE UP HEAD	107			LP30017-015A	SPACER,X2
39			LP20234-004B	LID GUIDE	108			QSW0554-003	ROTARY ENCODER
40			QYTDST2606Z	SCREW,X2	109			QYTPST2620Z	SCREW
42			LP40105-003A	PINCH ROLLER ARM ASSY	110			LP30237-002B	CASSETTE GEAR
43			LP40753-001A	PINCH ROLLER SHEET3	111			LP30239-002G	LIMIT GEAR(1)
44			LP40148-002A	TORSION SPRING	112			LP30240-002G	LIMIT GEAR(2)
46			LP40149-001C	PRESS LEVER ASSY	113			LP40136-001E	TORSION SPRING
49			LP40106-007A	GUIDE ARM ASSY	114			LP30242-002A	RELAY GEAR
51			LP40134-002A	TENSION SPRING	115			LP30339-002E	OPENER GUIDE
52			QAH0058-001	AC HEAD	116			LP40545-001A	TORSION SPRING
53			LP30228-001A	HEAD BASE	117			LP40214-001B	C.H.BRACKET
54			LP30004-013A	COMPRESSION SPRING,X3	118			PQM30017-47	SLIT WASHER,X2
55			LP40236-001A	COMPRESSION SPRING	119			LP30243-001D	DRIVE GEAR
57			LP40213-002B	SPECIAL SCREW,X3	120			LP20240-001G	DRIVE ARM
58			QYTDST2608Z	SCREW,X2	121			LP40137-001A	TORSION SPRING
59			QAR0023-001	LOADING MOTOR	122			LP10081-002L	SIDE HOLDER(L)
60			PQ43546-1-2	MOTOR PULLEY	123			LP10082-002M	SIDE HOLDER(R)
61			LP30230-001B	MOTOR GUIDE	124			LP30255-006A	LOCK LEVER(L)
62			QYTPSP3003Z	SCREW,X2	127			LP30256-001H	LOCK LEVER(R)
63			LP30005-003A	BELT,LOADING MOTOR	128			LP40168-003A	TORSION SPRING(L)
64			LP20791-002D	CONTROL CAM	129			LP40218-001B	TORSION SPRING(R)
65			PQM30017-24	SLIT WASHER	130			LP30257-001G	CASSETTE HOLDER
66			LP40120-001A	WORM GEAR	131			LP40852-001A	EARTH PLATE
67			LP40107-002A	LINK LEVER ASSY	132			LP30244-002G	GUIDE RAIL
68			PQM30017-24	SLIT WASHER	134			LP30245-002F	REC SAFETY LEVER
69			LP10201-003E	CONTROL PLATE	135			LP30003-004A	TENSION SPRING
70			LP40379-001B	CONTROL BRACKET(1)	137			LP20578-001C	TOP GUIDE
71			QYTDSF2608M	SCREW	138			LP30500-001C	HOLD PLATE
72			LP40108-002A	TENSION ARM ASSY	139			LP40450-003A	PAD,X2
73			LP30003-010A	TENSION SPRING	140			LP30003-025B	TENSION SPRING
74			LP40109-003D	TENSION BRAKE ASSY	141			LP30003-024A	TENSION SPRING
					142			LP40481-003A	ROLLER CAM ASSY
					143			LP30019-014A	PAD,X2
					151			LP20324-003B	DOOR OPENER

5.4 ELECTRICAL PARTS LIST

#	△ REF No.	PART No.	PART NAME, DESCRIPTION

MAIN BOARD ASSEMBLY <03>			
PW1	LPA10131-01D1		MAIN BOARD ASSY,J680EU
	LPA10131-02C1		MAIN BOARD ASSY,J785EK
	LPA10131-04D1		MAIN BOARD ASSY,J780EU
	LPA10131-05C1		MAIN BOARD ASSY,J680EK
IC1	JCP8020-MSD-2		IC
IC201	LC74775-9750		IC
IC3001	HD6432194SXD01F		IC(MCU),J680EK/J785EK
	HD6432194SXD14F		IC(MCU),J680EU/J780EU
IC3002	IC-PST3427U-X		IC
IC3003	AT24C16N-10SC-X		IC
	or BR24C16F		IC
	or X24C16S		IC
	or 24LC16B/SN-X		IC
IC3004	BA6956AN		IC
IC5301	L5431		IC
	or MM1431AT		IC
IC6701	MSP3417D		IC
	or MSP3417DG3		IC
IC7001	PT6956		IC
IC7002	GP1U291Q		IR DETECT UNIT
	or PIC-28143LJ		IR DETECT UNIT
	or PNA4652M00YC		IR DETECT UNIT
IC7101	MM1443XJ		IC
Q1	2SC4081/S/-X		TRANSISTOR
Q2	2SC4081/S/-X		TRANSISTOR
Q3	2SC4081/S/-X		TRANSISTOR
Q4	2SC4081/S/-X		TRANSISTOR
Q23	2SA1576A/QR/-X		TRANSISTOR
	or 2PA1576R/-X		TRANSISTOR
Q38	2SC4081/QRS/-X		TRANSISTOR
Q41	UN521E		TRANSISTOR,J680EU/J780EU
	or RN1309		TRANSISTOR,J680EU/J780EU
	or DTC144WU		TRANSISTOR,J680EU/J780EU
Q201	2SC4081/QRS/-X		TRANSISTOR
	or 2PC4081/R/-X		TRANSISTOR
Q2001	2SC4081/QRS/-X		TRANSISTOR
	or 2SD1819A/QRS/-X		TRANSISTOR
	or 2PC4081/R/-X		TRANSISTOR
Q2002	2SC4081/QRS/-X		TRANSISTOR
	or 2PC4081/R/-X		TRANSISTOR
	or 2SD1819A/QRS/-X		TRANSISTOR
Q2003	DTA144WU		TRANSISTOR
	or PDTA144WU		TRANSISTOR
	or RN2309		TRANSISTOR
	or UN511E		TRANSISTOR
Q2006	2SC4081/QRS/-X		TRANSISTOR
	or 2SD1819A/QRS/-X		TRANSISTOR
	or 2PC4081/R/-X		TRANSISTOR
Q2051	2SC4081/QRS/-X		TRANSISTOR
	or 2SD1819A/QRS/-X		TRANSISTOR
	or 2PC4081/R/-X		TRANSISTOR
Q2052	2SA1576A/QR/-X		TRANSISTOR
	or 2PA1576R/-X		TRANSISTOR
	or 2SB1218A/QR/-X		TRANSISTOR
Q2053	DTC144WU		TRANSISTOR
	or PDTC144WU		TRANSISTOR
	or RN1309		TRANSISTOR

#	△ REF No.	PART No.	PART NAME, DESCRIPTION
		or UN521E	TRANSISTOR
Q2054		2SA1576A/QR/-X	TRANSISTOR
		or 2SB1218A/QR/-X	TRANSISTOR
		or 2PA1576R/-X	TRANSISTOR
Q2055		DTC144WU	TRANSISTOR
		or PDTC144WU	TRANSISTOR
		or RN1309	TRANSISTOR
		or UN521E	TRANSISTOR
Q2061		2SC4081/QRS/-X	TRANSISTOR,J780EU
		or 2SD1819A/QRS/-X	TRANSISTOR,J780EU
		or 2PC4081/R/-X	TRANSISTOR,J780EU
Q2062		2SA1576A/QR/-X	TRANSISTOR,J780EU
		or 2SB1218A/QR/-X	TRANSISTOR,J780EU
		or 2PA1576R/-X	TRANSISTOR,J780EU
Q2063		DTC144WU	TRANSISTOR,J780EU
		or PDTC144WU	TRANSISTOR,J780EU
		or RN1309	TRANSISTOR,J780EU
		or UN521E	TRANSISTOR,J780EU
Q2251		DTA144WU	TRANSISTOR
		or PDTA144WU	TRANSISTOR
		or RN2309	TRANSISTOR
		or UN511E	TRANSISTOR
Q2252		DTC114EU	TRANSISTOR
		or PDTC114EU	TRANSISTOR
		or RN1302	TRANSISTOR
		or UN5211	TRANSISTOR
Q3001		2SD1819A/QRS/-X	TRANSISTOR
		or 2SC4081/QRS/-X	TRANSISTOR
		or 2PC4081/R/-X	TRANSISTOR
Q3003		PTZ-NV16	PHOTO TRANSISTOR
		or PTZ-NV16A	PHOTO TRANSISTOR
Q3004		2SD1819A/QRS/-X	TRANSISTOR
		or 2SC4081/QRS/-X	TRANSISTOR
		or 2PC4081/R/-X	TRANSISTOR
Q3005		2SD1819A/QRS/-X	TRANSISTOR
		or 2PC4081/R/-X	TRANSISTOR
		or 2SC4081/QRS/-X	TRANSISTOR
Q3007		UN521E	TRANSISTOR
		or PDTC144WU	TRANSISTOR
		or RN1309	TRANSISTOR
		or DTC144WU	TRANSISTOR
Q4001		UN5211	TRANSISTOR
		or RN1302	TRANSISTOR
		or DTC114EU	TRANSISTOR
		or PDTC114EU	TRANSISTOR
Q5101		2SK2632-CB14	POWER MOS FET
		or 2SK2632	POWER MOS FET
		or 2SK2129	POWER MOS FET
		or 2SK2129-LT	POWER MOS FET
Q5102		2SD2144S/UV/-T	TRANSISTOR
Q5302		2SD2375/QP/	TRANSISTOR
Q5303		2SD1819A/RS/-X	TRANSISTOR
		or 2SC4081/RS/-X	TRANSISTOR
		or 2PC4081/R/-X	TRANSISTOR
Q5304		2SC3616/ML/-T	TRANSISTOR
Q5305		DTA114EU	TRANSISTOR
		or RN2302	TRANSISTOR
		or UN5111	TRANSISTOR
		or PDTA114EU	TRANSISTOR
Q5306		DTC114EU	TRANSISTOR
		or PDTC114EU	TRANSISTOR

#	△	REF No.	PART No.	PART NAME, DESCRIPTION		#	△	REF No.	PART No.	PART NAME, DESCRIPTION	
			or RN1302	TRANSISTOR					or S1WB(A)60F4072X	BRIDGE DIODE	
			or UN5211	TRANSISTOR		D5101		AU01	FR DIODE		
Q5308			2SA1576A/RS/-X	TRANSISTOR				or ERA18-04-T2	FR DIODE		
Q6030			2SB1218A/RS/-X	TRANSISTOR				or 10ELS4	FR DIODE		
Q6031			DTC114EU	TRANSISTOR				or 1SR153-400-T2	FR DIODE		
			or PDTC114EU	TRANSISTOR		D5102		AU01	FR DIODE		
			or RN1302	TRANSISTOR				or ERA18-04-T2	FR DIODE		
			or UN5211	TRANSISTOR				or 1SR153-400-T2	FR DIODE		
Q6032			DTC114EU	TRANSISTOR				or 10ELS4	FR DIODE		
			or RN1302	TRANSISTOR		D5103		1SS133	DIODE		
			or UN5211	TRANSISTOR				or 1SS270A	DIODE		
			or PDTC114EU	TRANSISTOR		D5105		1SS133	DIODE		
Q7001			DTA143TU	TRANSISTOR				or 1SS270A	DIODE		
Q7002			DTA143TU	TRANSISTOR		D5203		AU01Z	FR DIODE		
Q7003			DTA143TU	TRANSISTOR				or 10ELS2	FR DIODE		
Q7004			DTA143TU	TRANSISTOR		D5204		AU01Z	FR DIODE		
Q7005			DTA143TU	TRANSISTOR				or 10ELS2	FR DIODE		
Q7101			2SB1218A/QRS/-X	TRANSISTOR		D5208		RK14LF-B2	BARRIER DIODE		
			or 2SA1576A/QRS/-X	TRANSISTOR				or SB240-F26	SB DIODE		
			or 2PA1576/R/-X	TRANSISTOR				or 21DQ04	BARRIER DIODE		
Q7102			DTC144WU	TRANSISTOR		D5210		AU01Z	FR DIODE		
			or PDTC144WU	TRANSISTOR,J680EK/EU/J780EU				or ERA18-02-T2	FR DIODE		
			or RN1309	TRANSISTOR,J680EK/EU/J780EU				or 1SR153-400-T2	FR DIODE		
			or UN521E	TRANSISTOR,J680EK/EU/J780EU				or 10ELS2	FR DIODE		
Q7106			2SA1576A/QRS/-X	TRANSISTOR				or PG104RS	FR DIODE		
			or 2PA1576/R/-X	TRANSISTOR		D5301		MTZJ15C	ZENER DIODE		
Q7107			DTA144WU	TRANSISTOR				or RD15ES/B3/-T2	ZENER DIODE		
			or PDTA144WU	TRANSISTOR		D5302		1SS133	DIODE		
			or RN2309	TRANSISTOR				or 1SS270A	DIODE		
			or UN511E	TRANSISTOR		D5303		RD5.1JS/B2/-T2	ZENER DIODE		
Q7108			DTC144WU	TRANSISTOR				or MA4051N/M/-T2	ZENER DIODE		
			or PDTC144WU	TRANSISTOR		D5304		1SS133	DIODE		
			or RN1309	TRANSISTOR				or 1SS270A	DIODE		
			or UN521E	TRANSISTOR		D5305		AK04	DIODE		
Q7109			2SC4081/QRS/-X	TRANSISTOR				or 11EQS04	SB DIODE		
			or 2SD1819A/QRS/-X	TRANSISTOR				or 1S4	SB DIODE		
			or 2PC4081/R/-X	TRANSISTOR		D5307		QUY160-100Y	IM BUS WIRE		
Q7110			2SC4081/QRS/-X	TRANSISTOR		D5308		MTZJ11C	ZENER DIODE		
			or 2PC4081/R/-X	TRANSISTOR				or RD11ES/B3/-T2	ZENER DIODE		
			or 2SD1819A/QRS/-X	TRANSISTOR		D5316		QUY160-100Y	IM BUS WIRE		
Q7201			2SC1317/RS/-T	TRANSISTOR		D6002		HZ30-2L-T2	ZENER DIODE		
D6			MTZJ5.6C	ZENER DIODE				or HZ30-2LTD	Z DIODE (M)		
			or RD5.6ES/B3/-T2	ZENER DIODE		D6701		1SS133	DIODE		
D201			QRE141J-101Y	RESISTOR	100Ω,1/4W	D7101		1SS133	DIODE		
D202			QRE141J-101Y	RESISTOR	100Ω,1/4W	D7102		1SS133	DIODE		
D203			QRE141J-101Y	RESISTOR	100Ω,1/4W	D7103		QUY160-100Y	IM BUS WIRE		
D2101			MTZJ8.2C	ZENER DIODE		D7105		MTZJ12C	ZENER DIODE		
D3001			LNB2301L01VI	LE DIODE				or RD12ES/B3/-T2	ZENER DIODE		
D3002			1SS133	DIODE		D7106		MTZJ12C	ZENER DIODE		
			or 1SS270A	DIODE				or RD12ES/B3/-T2	ZENER DIODE		
D3003			RD39ES/B3/-T2	ZENER DIODE		R1		NRSA02J-682X	MG RESISTOR	6.8kΩ,1/10W	
			or MTZJ39C	ZENER DIODE		R2		NRSA02J-152X	MG RESISTOR	1.5kΩ,1/10W	
D3004			11ES2	DIODE		R3		NRSA02J-822X	MG RESISTOR	8.2kΩ,1/10W	
			or 1A3G	DIODE		R5		NRSA02J-0R0X	MG RESISTOR	0Ω,1/10W	
D3005			11ES2	DIODE		R6		NRSA02J-273X	MG RESISTOR	27kΩ,1/10W	
			or 1A3G	DIODE		R7		NRSA02J-681X	MG RESISTOR	680Ω,1/10W	
D3008			1SS133	DIODE		R8		QRE141J-101Y	RESISTOR	100Ω,1/4W	
D4001			QUY153-050Y	IM BUS WIRE		R9		QRE141J-101Y	RESISTOR	100Ω,1/4W	
D4002			QUY153-050Y	IM BUS WIRE		R12		QRE141J-101Y	RESISTOR	100Ω,1/4W	
D5001			S1WB/A/60-4102	BRIDGE DIODE		R21		NRSA02J-102X	MG RESISTOR	1kΩ,1/10W	
			or S1WB/A/60-X	BRIDGE DIODE		R22		NRSA02J-102X	MG RESISTOR	1kΩ,1/10W	

#	△ REF No.	PART No.	PART NAME, DESCRIPTION	#	△ REF No.	PART No.	PART NAME, DESCRIPTION
R37		NRSA02J-0R0X	MG RESISTOR 0Ω, 1/10W	R3015		NRSA02J-472X	MG RESISTOR 4.7kΩ, 1/10W
R46		NRSA02J-331X	MG RESISTOR 330Ω, 1/10W	R3016		NRSA02J-102X	MG RESISTOR 1kΩ, 1/10W
R50		NRSA02J-102X	MG RESISTOR 1kΩ, 1/10W	R3018		NRSA02J-102X	MG RESISTOR 1kΩ, 1/10W
R77		NRSA02J-103X	MG RESISTOR 10kΩ, 1/10W	R3019		NRSA02J-682X	MG RESISTOR 6.8kΩ, 1/10W
R90		NRSA02J-391X	MG RESISTOR 390Ω, 1/10W	R3020		NRSA02J-472X	MG RESISTOR 4.7kΩ, 1/10W
R92		NRSA02J-152X	MG RESISTOR 1.5kΩ, 1/10W	R3021		NRSA02J-472X	MG RESISTOR 4.7kΩ, 1/10W
R93		NRSA02J-222X	MG RESISTOR 2.2kΩ, 1/10W	R3022		NRSA02J-472X	MG RESISTOR 4.7kΩ, 1/10W
R104		NRSA02J-682X	MG RESISTOR 6.8kΩ, 1/10W	R3026		NRSA02J-0R0X	MG RESISTOR 0Ω, 1/10W
R202		NRSA02J-103X	MG RESISTOR 10kΩ, 1/10W	R3027		NRSA02J-0R0X	MG RESISTOR 0Ω, 1/10W
R209		NRSA02J-512X	MG RESISTOR 5.1kΩ, 1/10W	R3028		NRSA02J-0R0X	MG RESISTOR 0Ω, 1/10W
R210		NRSA02J-182X	MG RESISTOR 1.8kΩ, 1/10W	R3029		QRE141J-472Y	RESISTOR 4.7kΩ, 1/4W
R211		NRSA02J-562X	MG RESISTOR 5.6kΩ, 1/10W	R3030		NRSA02J-472X	MG RESISTOR 4.7kΩ, 1/10W
R213		NRSA02J-0R0X	MG RESISTOR 0Ω, 1/10W	R3031		NRSA02J-472X	MG RESISTOR 4.7kΩ, 1/10W
R216		NRSA02J-103X	MG RESISTOR 10kΩ, 1/10W	R3032		NRSA02J-472X	MG RESISTOR 4.7kΩ, 1/10W
R224		NRSA02J-681X	MG RESISTOR 680Ω, 1/10W	R3033		NRSA02J-0R0X	MG RESISTOR 0Ω, 1/10W
R225		QUY160-100Y	IM BUS WIRE	R3034		QUY160-100Y	IM BUS WIRE
R2001		QRE141J-681Y	RESISTOR 680Ω, 1/4W	R3035		NRSA02J-0R0X	MG RESISTOR 0Ω, 1/10W
R2002		NRSA02J-272X	MG RESISTOR 2.7kΩ, 1/10W	R3036		NRSA02J-0R0X	MG RESISTOR 0Ω, 1/10W
R2003		NRSA02J-101X	MG RESISTOR 100Ω, 1/10W	R3037		NRSA02J-0R0X	MG RESISTOR 0Ω, 1/10W
R2004		NRSA02J-332X	MG RESISTOR 3.3kΩ, 1/10W	R3038		NRSA02J-0R0X	MG RESISTOR 0Ω, 1/10W
R2006		NRSA02J-393X	MG RESISTOR, J780EU 39kΩ, 1/10W	R3039		QRE141J-102Y	RESISTOR 1kΩ, 1/4W
R2007		NRSA02J-393X	MG RESISTOR 39kΩ, 1/10W	R3041		NRSA02J-472X	MG RESISTOR 4.7kΩ, 1/10W
R2009		NRSA02J-123X	MG RESISTOR, J780EU 12kΩ, 1/10W	R3042		QRE141J-102Y	RESISTOR 1kΩ, 1/4W
R2010		NRSA02J-123X	MG RESISTOR 12kΩ, 1/10W	R3044		NRSA02J-472X	MG RESISTOR 4.7kΩ, 1/10W
R2013		NRSA02J-682X	MG RESISTOR 6.8kΩ, 1/10W	R3046		NRSA02J-0R0X	MG RESISTOR, J785EK 0Ω, 1/10W
R2014		NRSA02J-224X	MG RESISTOR 220kΩ, 1/10W	R3047		NRSA02J-0R0X	MG RESISTOR 0Ω, 1/10W
R2015		NRSA02J-181X	MG RESISTOR 180Ω, 1/10W	R3048		NRSA63J-0R0X	MG RESISTOR 0Ω, 1/16W
R2016		NRSA02J-393X	MG RESISTOR 39kΩ, 1/10W	R3049		NRSA02J-101X	MG RESISTOR 100Ω, 1/10W
R2017		NRSA02J-183X	MG RESISTOR 18kΩ, 1/10W	R3050		NRSA02J-101X	MG RESISTOR 100Ω, 1/10W
R2018		NRSA02J-472X	MG RESISTOR 4.7kΩ, 1/10W	R3051		NRSA02J-102X	MG RESISTOR, J785EK 1kΩ, 1/10W
R2019		NRSA02J-472X	MG RESISTOR 4.7kΩ, 1/10W	R3052		NRSA02J-471X	MG RESISTOR 470Ω, 1/10W
R2022		NRSA02J-562X	MG RESISTOR 5.6kΩ, 1/10W	R3053		NRSA02J-471X	MG RESISTOR 470Ω, 1/10W
R2053		NRSA02J-472X	MG RESISTOR 4.7kΩ, 1/10W	R3054		NRSA02J-0R0X	MG RESISTOR 0Ω, 1/10W
R2054		NRSA02J-123X	MG RESISTOR, J680EK/EU/J785EK 12kΩ, 1/10W	R3055		NRSA02J-102X	MG RESISTOR 1kΩ, 1/10W
		NRSA02J-153X	MG RESISTOR, J780EU 15kΩ, 1/10W	R3056		NRSA02J-472X	MG RESISTOR, J780EU/J785EK 4.7kΩ, 1/10W
R2055		NRSA02J-3R3X	MG RESISTOR 3.3Ω, 1/10W	R3057		NRSA02J-472X	MG RESISTOR, J780EU/J785EK 4.7kΩ, 1/10W
R2056		QRE141J-101Y	RESISTOR, J780EU 100Ω, 1/4W	R3058		NRSA02J-102X	MG RESISTOR 1kΩ, 1/10W
		QRE141J-820Y	RESISTOR, J680EK/EU/J785EK 82Ω, 1/4W	R3059		NRSA02J-102X	MG RESISTOR 1kΩ, 1/10W
R2057		NRSA02J-473X	MG RESISTOR 47kΩ, 1/10W	R3060		NRSA02J-102X	MG RESISTOR 1kΩ, 1/10W
R2058		NRSA02J-183X	MG RESISTOR 18kΩ, 1/10W	R3061		NRSA02J-102X	MG RESISTOR 1kΩ, 1/10W
R2059		NRSA02J-473X	MG RESISTOR 47kΩ, 1/10W	R3062		NRSA02J-103X	MG RESISTOR 10kΩ, 1/10W
R2060		NRSA02J-183X	MG RESISTOR 18kΩ, 1/10W	R3066		NRSA02J-102X	MG RESISTOR 1kΩ, 1/10W
R2061		NRSA63J-273X	MG RESISTOR, J780EU 27kΩ, 1/16W	R3069		NRSA02J-101X	MG RESISTOR 100Ω, 1/10W
R2062		NRSA63J-3R3X	MG RESISTOR, J780EU 3.3Ω, 1/16W	R3071		NRSA02J-103X	MG RESISTOR 10kΩ, 1/10W
R2063		QRE141J-151Y	RESISTOR, J780EU 150Ω, 1/4W	R3072		NRSA02J-102X	MG RESISTOR 1kΩ, 1/10W
R2064		NRSA63J-473X	MG RESISTOR, J780EU 47kΩ, 1/16W	R3073		NRSA02J-102X	MG RESISTOR 1kΩ, 1/10W
R2065		NRSA63J-183X	MG RESISTOR, J780EU 18kΩ, 1/16W	R3074		QRE141J-102Y	RESISTOR 1kΩ, 1/4W
R2201		QRE141J-151Y	RESISTOR 150Ω, 1/4W	R3075		NRSA02J-101X	MG RESISTOR 100Ω, 1/10W
R2206		NRSA02J-101X	MG RESISTOR 100Ω, 1/10W	R3076		NRSA02J-101X	MG RESISTOR 100Ω, 1/10W
R2207		NRSA02J-332X	MG RESISTOR 3.3kΩ, 1/10W	R3077		NRSA02J-0R0X	MG RESISTOR 0Ω, 1/10W
R2218		NRSA02J-393X	MG RESISTOR, J780EU 39kΩ, 1/10W	R3078		NRSA02J-0R0X	MG RESISTOR 0Ω, 1/10W
R2219		NRSA02J-393X	MG RESISTOR 39kΩ, 1/10W	R3080		NRSA02J-472X	MG RESISTOR, J780EU 4.7kΩ, 1/10W
R2223		NRSA02J-123X	MG RESISTOR, J780EU 12kΩ, 1/10W	R3081		NRSA02J-102X	MG RESISTOR 1kΩ, 1/10W
R2224		QRE141J-123Y	RESISTOR 12kΩ, 1/4W	R3085		NRSA02J-102X	MG RESISTOR 1kΩ, 1/10W
R2226		NRSA02J-123X	MG RESISTOR 12kΩ, 1/10W	R3086		NRSA02J-102X	MG RESISTOR 1kΩ, 1/10W
R2227		QRE141J-123Y	RESISTOR 12kΩ, 1/4W	R3087		NRSA02J-0R0X	MG RESISTOR 0Ω, 1/10W
R2228		NRSA02J-103X	MG RESISTOR 10kΩ, 1/10W	R3088		QUY160-100Y	IM BUS WIRE
R2229		NRSA02J-563X	MG RESISTOR 56kΩ, 1/10W	R3089		NRSA02J-0R0X	MG RESISTOR 0Ω, 1/10W
R2251		NRSA02J-471X	MG RESISTOR 470Ω, 1/10W	R3090		QRE141J-102Y	RESISTOR 1kΩ, 1/4W
R3013		NRSA02J-472X	MG RESISTOR 4.7kΩ, 1/10W	R3093		QUY160-100Y	IM BUS WIRE
R3014		NRSA02J-472X	MG RESISTOR 4.7kΩ, 1/10W	R3104		NRSA02J-0R0X	MG RESISTOR 0Ω, 1/10W

#	△	REF No.	PART No.	PART NAME, DESCRIPTION	#	△	REF No.	PART No.	PART NAME, DESCRIPTION
R3105			NRSA02J-0R0X	MG RESISTOR 0Ω,1/10W	R5108			NRSA02J-152X	MG RESISTOR 1.5kΩ,1/10W
R3106			QUY160-100Y	IM BUS WIRE,J780EU	R5109			QRE141J-681Y	RESISTOR 680Ω,1/4W
R3201			NRSA02J-103X	MG RESISTOR 10kΩ,1/10W	R5110			NRSA02J-224X	MG RESISTOR 220kΩ,1/10W
R3202			NRSA02J-472X	MG RESISTOR 4.7kΩ,1/10W	R5111			NRSA02J-681X	MG RESISTOR 680Ω,1/10W
R3203			NRSA02J-103X	MG RESISTOR 10kΩ,1/10W	R5112			NRSA02J-221X	MG RESISTOR 220Ω,1/10W
R3204			NRSA02J-222X	MG RESISTOR 2.2kΩ,1/10W	R5301			NRSA02J-472X	MG RESISTOR 4.7kΩ,1/10W
R3205			QRE141J-181Y	RESISTOR 180Ω,1/4W	R5302			NRSA02J-102X	MG RESISTOR 1kΩ,1/10W
R3207			NRSA02J-183X	MG RESISTOR 18kΩ,1/10W	R5303			NRSA02J-122X	MG RESISTOR 1.2kΩ,1/10W
R3208			QRE141J-181Y	RESISTOR 180Ω,1/4W	R5304			NRSA02J-471X	MG RESISTOR 470Ω,1/10W
R3209			QRE141J-273Y	RESISTOR 27kΩ,1/4W	R5305			NRSA02J-102X	MG RESISTOR 1kΩ,1/10W
R3210			NRSA02J-181X	MG RESISTOR 180Ω,1/10W	R5306			NRSA02J-471X	MG RESISTOR 470Ω,1/10W
R3211			NRSA02J-273X	MG RESISTOR 27kΩ,1/10W	R5308			NRSA02J-471X	MG RESISTOR 470Ω,1/10W
R3212			NRSA02J-474X	MG RESISTOR 470kΩ,1/10W	R5309			NRSA02J-103X	MG RESISTOR 10kΩ,1/10W
R3213			NRSA02J-334X	MG RESISTOR 330kΩ,1/10W	R5310			NRSA02J-471X	MG RESISTOR 470Ω,1/10W
R3214			NRSA02J-103X	MG RESISTOR 10kΩ,1/10W	R5311			NRSA02J-473X	MG RESISTOR 470Ω,1/10W
R3215			NRSA02J-103X	MG RESISTOR 10kΩ,1/10W	R5312			QRE141J-332Y	RESISTOR 3.3kΩ,1/4W
R3216			NRSA02J-103X	MG RESISTOR 10kΩ,1/10W	R5313			NRSA02D-332X	MG RESISTOR 3.3kΩ,1/10W
R3217			NRSA02J-562X	MG RESISTOR 5.6kΩ,1/10W	R5314			NRSA02J-102X	MG RESISTOR 1kΩ,1/10W
R3218			QRE141J-472Y	RESISTOR 4.7kΩ,1/4W	R5316			NRSA02D-123X	MG RESISTOR 12kΩ,1/10W
R3219			NRSA02J-472X	MG RESISTOR 4.7kΩ,1/10W	R5317			NRSA02J-473X	MG RESISTOR 47kΩ,1/10W
R3220			NRSA02J-104X	MG RESISTOR 100kΩ,1/10W	R5320			NRSA02J-273X	MG RESISTOR 27kΩ,1/10W
R3222			NRSA02J-103X	MG RESISTOR 10kΩ,1/10W	R5321			QRE141J-273Y	RESISTOR 27kΩ,1/4W
R3223			NRSA02J-152X	MG RESISTOR 1.5kΩ,1/10W	R6020			NRSA02J-102X	MG RESISTOR 1kΩ,1/10W
R3224			NRSA02J-152X	MG RESISTOR 1.5kΩ,1/10W	R6021			NRSA02J-102X	MG RESISTOR 1kΩ,1/10W
R3225			NRSA02J-103X	MG RESISTOR 10kΩ,1/10W	R6030			NRSA02J-102X	MG RESISTOR 1kΩ,1/10W
R3226			NRSA02J-103X	MG RESISTOR 10kΩ,1/10W	R6031			NRSA02J-271X	MG RESISTOR 270Ω,1/10W
R3227			NRSA02J-103X	MG RESISTOR 10kΩ,1/10W	R6032			NRSA02J-472X	MG RESISTOR 4.7kΩ,1/10W
R3229			NRSA02J-105X	MG RESISTOR 1MΩ,1/10W	R6033			NRSA02J-182X	MG RESISTOR 1.8kΩ,1/10W
R3230			NRSA02J-472X	MG RESISTOR 4.7kΩ,1/10W	R6050			QRE141J-101Y	RESISTOR 100Ω,1/4W
R3231			NRSA02J-102X	MG RESISTOR 1kΩ,1/10W	R6051			NRSA02J-101X	MG RESISTOR 100Ω,1/10W
R3232			NRSA02J-472X	MG RESISTOR 4.7kΩ,1/10W	R6052			NRSA02J-101X	MG RESISTOR 100Ω,1/10W
R3234			QRE141J-103Y	RESISTOR 10kΩ,1/4W	R6702			NRSA02J-182X	MG RESISTOR 1.8kΩ,1/10W
R3235			NRSA02J-332X	MG RESISTOR 3.3kΩ,1/10W	R6707			NRSA02J-330X	MG RESISTOR 33Ω,1/10W
R3236			NRSA02J-332X	MG RESISTOR 3.3kΩ,1/10W	R6708			QUY153-050Y	IM BUS WIRE
R3240			NRSA02J-105X	MG RESISTOR 1MΩ,1/10W	R6709			QUY153-050Y	IM BUS WIRE
R3244			NRSA02J-333X	MG RESISTOR,J780EU/J785EK 33kΩ,1/10W	R6710			NRSA02J-0R0X	MG RESISTOR 0Ω,1/10W
R3245			NRSA02J-333X	MG RESISTOR,J780EU/J785EK 33kΩ,1/10W	R6711			NRSA02J-684X	MG RESISTOR 680kΩ,1/10W
R3251			NRSA02J-103X	MG RESISTOR,J780EU 10kΩ,1/10W	R6712			NRSA02J-102X	MG RESISTOR 1kΩ,1/10W
R4003			NRSA02J-561X	MG RESISTOR 560Ω,1/10W	R6713			NRSA02J-123X	MG RESISTOR 12kΩ,1/10W
R4004			NRSA02J-561X	MG RESISTOR 560Ω,1/10W	R6714			NRSA02J-102X	MG RESISTOR 1kΩ,1/10W
R4005			NRSA02J-562X	MG RESISTOR 5.6kΩ,1/10W	R6715			NRSA02J-123X	MG RESISTOR 12kΩ,1/10W
R4007			QRE141J-102Y	RESISTOR 1kΩ,1/4W	R6716			NRSA02J-470X	MG RESISTOR 47Ω,1/10W
R4008			NRSA02J-0R0X	MG RESISTOR 0Ω,1/10W	R6719			NRSA02J-103X	MG RESISTOR 10kΩ,1/10W
R4009			NRSA02J-102X	MG RESISTOR 1kΩ,1/10W	R6720			NRSA02J-562X	MG RESISTOR 5.6kΩ,1/10W
R4010			NRSA02J-102X	MG RESISTOR 1kΩ,1/10W	R6721			NRSA02J-562X	MG RESISTOR 5.6kΩ,1/10W
R4011			NRSA02J-472X	MG RESISTOR 4.7kΩ,1/10W	R7001			NRSA02J-331X	MG RESISTOR 330Ω,1/10W
R4012			NRSA02J-222X	MG RESISTOR 2.2kΩ,1/10W	R7015			NRSA02J-0R0X	MG RESISTOR 0Ω,1/10W
R4013			NRSA02J-102X	MG RESISTOR 1kΩ,1/10W	R7020			NRSA02J-103X	MG RESISTOR 10kΩ,1/10W
R4014			NRSA02J-0R0X	MG RESISTOR 0Ω,1/10W	R7021			NRSA02J-122X	MG RESISTOR 1.2kΩ,1/10W
R4015			NRSA02J-562X	MG RESISTOR 5.6kΩ,1/10W	R7022			NRSA02J-182X	MG RESISTOR 1.8kΩ,1/10W
R4017			NRSA02J-102X	MG RESISTOR 1kΩ,1/10W	R7023			NRSA02J-222X	MG RESISTOR 2.2kΩ,1/10W
R4018			NRSA02J-102X	MG RESISTOR 1kΩ,1/10W	R7024			NRSA02J-272X	MG RESISTOR 2.7kΩ,1/10W
R4019			NRSA02J-103X	MG RESISTOR 10kΩ,1/10W	R7025			NRSA02J-472X	MG RESISTOR 4.7kΩ,1/10W
R4020			QRE141J-103Y	RESISTOR 10kΩ,1/4W	R7030			NRSA02J-103X	MG RESISTOR 10kΩ,1/10W
R4021			NRSA02J-103X	MG RESISTOR 10kΩ,1/10W	R7031			NRSA02J-122X	MG RESISTOR 1.2kΩ,1/10W
R5101			QRE141J-334Y	RESISTOR 330kΩ,1/4W	R7032			NRSA02J-182X	MG RESISTOR 1.8kΩ,1/10W
R5102			QRE141J-334Y	RESISTOR 330kΩ,1/4W	R7033			NRSA02J-222X	MG RESISTOR 2.2kΩ,1/10W
R5103			QRE141J-683Y	RESISTOR 68kΩ,1/4W	R7034			NRSA02J-272X	MG RESISTOR 2.7kΩ,1/10W
R5104			QRG02GJ-683	OMF RESISTOR 68kΩ,2W	R7035			NRSA02J-472X	MG RESISTOR 4.7kΩ,1/10W
R5106			QRT01DJ-R39X	MF RESISTOR 0.39Ω,1W	R7036			NRSA02J-682X	MG RESISTOR 6.8kΩ,1/10W
R5107			QRE121J-331Y	RESISTOR 330Ω,1/2W	R7037			NRSA02J-563X	MG RESISTOR 56kΩ,1/10W

#	△ REF No.	PART No.	PART NAME, DESCRIPTION		#	△ REF No.	PART No.	PART NAME, DESCRIPTION	
R7101		NRSA63J-473X	MG RESISTOR	47kΩ, 1/16W	C4		NCB21HK-103X	CAPACITOR	0.01μF,50V
R7102		NRSA63J-102X	MG RESISTOR	1kΩ, 1/16W	C5		QEKJ0JM-227	E CAPACITOR	220μF,6.3V
R7103		NRSA02J-750X	MG RESISTOR	75Ω, 1/10W	C6		NCB21EK-104X	CAPACITOR	0.1μF,25V
R7105		NRSA02J-331X	MG RESISTOR	330Ω, 1/10W	C8		NCB21EK-473X	CAPACITOR	0.047μF,25V
R7107		NRSA02J-331X	MG RESISTOR	330Ω, 1/10W	C10		NDC21HJ-151X	CAPACITOR	150pF,50V
R7108		QRE141J-750Y	RESISTOR	75Ω, 1/4W	C11		NCB21EK-104X	CAPACITOR	0.1μF,25V
R7110		NRSA02J-221X	MG RESISTOR	220Ω, 1/10W	C12		NDC21HJ-470X	CAPACITOR	47pF,50V
R7111		NRSA02J-221X	MG RESISTOR	220Ω, 1/10W	C14		NCB21EK-104X	CAPACITOR	0.1μF,25V
R7112		NRSA02J-331X	MG RESISTOR	330Ω, 1/10W	C15		NCB21HK-103X	CAPACITOR	0.01μF,50V
R7113		NRSA02J-750X	MG RESISTOR	75Ω, 1/10W	C16		NCB21EK-104X	CAPACITOR	0.1μF,25V
R7114		NRSA02J-221X	MG RESISTOR	220Ω, 1/10W	C17		QEKJ1HM-335	E CAPACITOR	3.3μF,50V
R7116		NRSA02J-221X	MG RESISTOR	220Ω, 1/10W	C19		QEKJ1HM-225	E CAPACITOR	2.2μF,50V
R7117		QRE141J-750Y	RESISTOR	75Ω, 1/4W	C20		QEQF1HM-105	NP E CAPACITOR	1μF,50V
R7119		NQL402M-4R7X	COIL	4.7μH	C21		NCB21EK-104X	CAPACITOR	0.1μF,25V
R7120		NQL402M-4R7X	COIL	4.7μH	C22		QEKJ0JM-476	E CAPACITOR	47μF,6.3V
R7122		NRSA02J-331X	MG RESISTOR	330Ω, 1/10W	C23		NCB21EK-104X	CAPACITOR	0.1μF,25V
R7124		NRSA02J-331X	MG RESISTOR	330Ω, 1/10W	C24		NCB21EK-104X	CAPACITOR	0.1μF,25V
R7131		NRSA02J-331X	MG RESISTOR	330Ω, 1/10W	C25		NDC21HJ-6R0X	CAPACITOR	6pF,50V
R7133		QRE141J-471Y	RESISTOR	470Ω, 1/4W	C27		NCB21EK-223X	CAPACITOR	0.022μF,25V
R7134		NRSA02J-471X	MG RESISTOR	470Ω, 1/10W	C28		QEKJ1HM-335	E CAPACITOR	3.3μF,50V
R7135		NQR0148-002X	FERRITE BEAD		C29		NCB21EK-333X	CAPACITOR	0.033μF,25V
R7136		NQR0148-002X	FERRITE BEAD		C30		QEKJ1HM-474	E CAPACITOR	0.47μF,50V
R7137		NRSA02J-102X	MG RESISTOR	1kΩ, 1/10W	C31		QEKJ0JM-476	E CAPACITOR	47μF,6.3V
R7139		QRE141J-101Y	RESISTOR	100Ω, 1/4W	C32		NCB21EK-104X	CAPACITOR	0.1μF,25V
R7140		NRSA02J-101X	MG RESISTOR	100Ω, 1/10W	C33		QEKJ1HM-225	E CAPACITOR	2.2μF,50V
R7142		NRSA02J-681X	MG RESISTOR	680Ω, 1/10W	C34		NCB21CK-224X	CAPACITOR	0.22μF,16V
R7144		NRSA02J-681X	MG RESISTOR	680Ω, 1/10W	C35		NCB21HK-103X	CAPACITOR	0.01μF,50V
R7146		NRSA02J-102X	MG RESISTOR	1kΩ, 1/10W	C36		QERF1EM-475	E CAPACITOR	4.7μF,25V
R7147		NRSA02J-222X	MG RESISTOR	2.2kΩ, 1/10W	C37		QEKJ1HM-105	E CAPACITOR	1μF,50V
R7148		NRSA02J-222X	MG RESISTOR	2.2kΩ, 1/10W	C38		QEKJ0JM-476	E CAPACITOR	47μF,6.3V
R7149		NRSA02J-101X	MG RESISTOR	100Ω, 1/10W	C39		NCB21EK-104X	CAPACITOR	0.1μF,25V
R7150		NRSA02J-101X	MG RESISTOR	100Ω, 1/10W	C40		QEKJ1EM-106	E CAPACITOR	10μF,25V
R7160		NRSA02J-331X	MG RESISTOR,J780EU	330Ω, 1/10W	C43		NCB21HK-102X	CAPACITOR	0.001μF,50V
R7161		NRSA02J-101X	MG RESISTOR,J780EU	100Ω, 1/10W	C51		QEKJ1HM-105	E CAPACITOR,J780EU	1μF,50V
R7162		NRSA02J-331X	MG RESISTOR,J780EU	330Ω, 1/10W	C53		NRSA02J-0R0X	MG RESISTOR	0Ω, 1/10W
R7163		NRSA02J-750X	MG RESISTOR,J780EU	75Ω, 1/10W	C62		NCB21EK-104X	CAPACITOR	0.1μF,25V
R7202		QRE141J-221Y	RESISTOR	220Ω, 1/4W	C64		NDC21HJ-220X	CAPACITOR	22pF,50V
R7203		NRSA02J-472X	MG RESISTOR	4.7kΩ, 1/10W	C65		QEKJ1HM-105	E CAPACITOR	1μF,50V
R7204		QRE123J-100X	RESISTOR	10Ω, 1/2W	C69		NCB21HK-103X	CAPACITOR	0.01μF,50V
R7205		NRSA02J-223X	MG RESISTOR	22kΩ, 1/10W	C70		NCB21HK-103X	CAPACITOR	0.01μF,50V
R7206		NRSA02J-223X	MG RESISTOR	22kΩ, 1/10W	C81		NCB21HK-103X	CAPACITOR	0.01μF,50V
B5		NRSA02J-0R0X	MG RESISTOR	0Ω, 1/10W	C92		NDC21HJ-330X	CAPACITOR	33pF,50V
B24		NRSA02J-0R0X	MG RESISTOR	0Ω, 1/10W	C94		NRSA02J-0R0X	MG RESISTOR	0Ω, 1/10W
B28		NRSA02J-0R0X	MG RESISTOR	0Ω, 1/10W	C106		NCB21HK-821X	CAPACITOR	820pF,50V
B35		NRSA02J-0R0X	MG RESISTOR	0Ω, 1/10W	C108		NDC21HJ-680X	CAPACITOR	68pF,50V
B71		NRSA02J-0R0X	MG RESISTOR	0Ω, 1/10W	C109		NCB21CK-224X	CAPACITOR	0.22μF,16V
B204		NRSA02J-0R0X	MG RESISTOR	0Ω, 1/10W	C110		NDC21HJ-820X	CAPACITOR	82pF,50V
B2051		NRSA02J-0R0X	MG RESISTOR,J680EU/J785EK	0Ω, 1/10W	C114		NDC21HJ-181X	CAPACITOR,J680EU/J780EU	180pF,50V
B3002		QUY153-050Y	IM BUS WIRE		C204		NDC21HJ-100X	CAPACITOR	10pF,50V
B3004		NRSA02J-0R0X	MG RESISTOR	0Ω, 1/10W	C206		NDC21HJ-330X	CAPACITOR	33pF,50V
B3005		NRSA02J-0R0X	MG RESISTOR	0Ω, 1/10W	C207		NDC21HJ-330X	CAPACITOR	33pF,50V
B5302		QUY153-050Y	IM BUS WIRE		C209		NCB21CK-474X	CAPACITOR	0.47μF,16V
B6701		NRSA02J-0R0X	MG RESISTOR	0Ω, 1/10W	C212		NCB21EK-104X	CAPACITOR	0.1μF,25V
B7003		NRSA02J-0R0X	MG RESISTOR	0Ω, 1/10W	C213		QERF1HM-475	E CAPACITOR	4.7μF,50V
B7008		NRSA02J-0R0X	MG RESISTOR,J680EK/EU	0Ω, 1/10W	C214		NCB21CK-224X	CAPACITOR	0.22μF,16V
B7009		NRSA02J-0R0X	MG RESISTOR	0Ω, 1/10W	C215		NCB21CK-224X	CAPACITOR	0.22μF,16V
B7118		NRSA02J-0R0X	MG RESISTOR	0Ω, 1/10W	C216		QERF1AM-227	E CAPACITOR	220μF,10V
B7120		NRSA02J-0R0X	MG RESISTOR	0Ω, 1/10W	C217		NDC21HJ-560X	CAPACITOR	56pF,50V
C1		NCB21HK-103X	CAPACITOR	0.01μF,50V	C218		NCB21CK-105X	CAPACITOR	1μF,16V
C2		NCB21HK-103X	CAPACITOR	0.01μF,50V	C222		QERF1HM-105	E CAPACITOR	1μF,50V
C3		NCB21HK-103X	CAPACITOR	0.01μF,50V	C226		QERF0JM-107	E CAPACITOR	100μF,6.3V

#	△	REF No.	PART No.	PART NAME, DESCRIPTION	#	△	REF No.	PART No.	PART NAME, DESCRIPTION
C2001			QEKJ1HM-475	E CAPACITOR	C3026		NCB21HK-103X	CAPACITOR	0.01μF,50V
C2002			QEKJ1EM-106	E CAPACITOR	C3027		QEKJ1CM-106	E CAPACITOR	10μF,16V
C2003			QEKJ0JM-476	E CAPACITOR	C3030		QEKJ0JM-476	E CAPACITOR	47μF,6.3V
C2005			QEKJ1HM-475	E CAPACITOR	C3031		NCB21EK-473X	CAPACITOR	0.047μF,25V
C2006			NCB21HK-123X	CAPACITOR	C3032		NCB21EK-473X	CAPACITOR	0.047μF,25V
C2007			QEKJ1CM-226	E CAPACITOR	C3033		NCB21EK-473X	CAPACITOR	0.047μF,25V
C2008			QEKJ1HM-475	E CAPACITOR	C3036		NDC21HJ-180X	CAPACITOR	18pF,50V
C2009			NCB21HK-102X	CAPACITOR	C3037		NDC21HJ-120X	CAPACITOR	12pF,50V
C2010			NCB21HK-152X	CAPACITOR	C3040		NCB21EK-473X	CAPACITOR	0.047μF,25V
C2011			QEKJ1HM-475	E CAPACITOR	C3041		NDC21HJ-100X	CAPACITOR,J680EK/J785EK	10pF,50V
C2012			QEKJ1HM-475	E CAPACITOR	C3045		NDC21HJ-101X	CAPACITOR	100pF,50V
C2016			NDC21HJ-330X	CAPACITOR	C3050		NCF21EZ-104X	CAPACITOR	0.1μF,25V
C2051			NCB21HK-331X	CAPACITOR	C3051		NCB21EK-104X	CAPACITOR	0.1μF,25V
C2052			QFLC1HJ-333Z	F CAPACITOR,J780EU	C3101		QER61CM-106	E CAPACITOR	10μF,16V
			QFLC1HJ-823Z	F CAPACITOR,J680EK/EU/J785EK	C4002		QDYB1CM-103Y	CAPACITOR	0.01μF,16V
C2053			NCB21HK-332X	CAPACITOR,J780EU	C4003		NCB21HK-102X	CAPACITOR	0.001μF,50V
			NCB21HK-472X	CAPACITOR,J680EK/EU/J785EK	C4004		QERF1CM-226	E CAPACITOR	22μF,16V
C2054			NCB21EK-223X	CAPACITOR,J680EK/EU/J785EK	C4005		NCB21HK-222X	CAPACITOR	0.0022μF,50V
			NCB21HK-103X	CAPACITOR,J780EU	C4006		QERF0JM-476	E CAPACITOR	47μF,6.3V
C2055			QEKJ1EM-106	E CAPACITOR	C4007		NCB31HK-561X	CAPACITOR,J780EU	560pF,50V
C2061			QFLC1HJ-333Z	F CAPACITOR,J780EU	C4008		QEQF1HM-105	NP E CAPACITOR	1μF,50V
C2062			NCB31HK-332X	CAPACITOR,J780EU	C4009		NCB21HK-563X	CAPACITOR	0.056μF,50V
C2063			NCB31EK-103X	CAPACITOR,J780EU	C4010		NCB21EK-223X	CAPACITOR	0.022μF,25V
C2064			QEKJ1EM-106	E CAPACITOR,J780EU	C4011		NCB21EK-104X	CAPACITOR	0.1μF,25V
C2201			NCB21EK-104X	CAPACITOR	C4012		QERF1HM-105	E CAPACITOR	1μF,50V
C2202			NCB21EK-333X	CAPACITOR	C4013		NCB21HK-563X	CAPACITOR	0.056μF,50V
C2203			QEKJ1EM-106	E CAPACITOR	C4014		NDC21HJ-101X	CAPACITOR	100pF,50V
C2204			NCB21HK-102X	CAPACITOR	C4015		NCB21HK-102X	CAPACITOR	0.001μF,50V
C2205			QEKJ1HM-105	E CAPACITOR	C4016		NDC21HJ-101X	CAPACITOR	100pF,50V
C2206			QEKJ1EM-106	E CAPACITOR	△ C5001		QFZ9073-683	F CAPACITOR	0.068μF,250V
C2207			QEKJ1CM-476	E CAPACITOR	△ C5002		QFZ9051-333	F CAPACITOR	0.033μF,250V
C2208			QEKJ1HM-475	E CAPACITOR	△ C5004		QCZ9071-222	CAPACITOR	0.0022μF,250V
C2215			QEKJ1HM-475	E CAPACITOR	C5006		QEZ0375-686	E CAPACITOR	68μF,400V
C2217			QEKJ1EM-106	E CAPACITOR	C5101		QCZ0212-472	CAPACITOR	0.0047μF,1kV
C2219			QEKJ1EM-106	E CAPACITOR	C5102		QCZ0302-330Z	CAPACITOR	33pF,1kV
C2220			QEKJ1HM-475	E CAPACITOR	C5104		QEKJ1CM-105	E CAPACITOR	1μF,50V
C2221			NCB21HK-103X	CAPACITOR	C5105		QFN31HJ-183	F CAPACITOR	0.018μF,50V
C2222			QEKJ1HM-474	E CAPACITOR	C5106		QCB1HJ-271	CAPACITOR	270pF,50V
C2223			QEKJ1HM-474	E CAPACITOR	C5107		QFV91HJ-104	F CAPACITOR	0.1μF,50V
C2224			NCB21HK-103X	CAPACITOR	C5202		QEMT1CM-687	E CAPACITOR	680μF,16V
C2225			QEKJ1HM-475	E CAPACITOR	C5203		QEMT1AM-128	E CAPACITOR	1200μF,10V
C2226			QEKJ1EM-106	E CAPACITOR	C5204		QETN2AM-475	E CAPACITOR	4.7μF,100V
C2227			NCB21EK-104X	CAPACITOR	C5206		QETN1AM-476	E CAPACITOR	47μF,10V
C2228			NCB21EK-104X	CAPACITOR	C5207		QETN1CM-107	E CAPACITOR	100μF,16V
C2251			QEKJ0JM-476	E CAPACITOR	C5301		QEKJ1CM-107	E CAPACITOR	100μF,16V
C2252			QDYB1CM-103Y	CAPACITOR	C5302		QETJ1CM-107	E CAPACITOR	100μF,16V
C2253			NCB21HK-103X	CAPACITOR	C5303		QEKJ1CM-107	E CAPACITOR	100μF,16V
C2254			NCB21HK-103X	CAPACITOR	C5304		QFLC1HJ-102Z	F CAPACITOR	0.001μF,50V
C2255			NDC21HJ-181X	CAPACITOR	C5305		QFV91HJ-154	F CAPACITOR	0.15μF,50V
C3001			NCF21EZ-104X	CAPACITOR	C6005		QETJ1HM-106	E CAPACITOR	10μF,50V
C3002			NCB21HK-103X	CAPACITOR	C6007		QEKJ0JM-227	E CAPACITOR	220μF,6.3V
C3003			QEKJ1HM-106	E CAPACITOR	C6012		QEKJ1AM-107	E CAPACITOR	100μF,10V
C3004			NCB21EK-473X	CAPACITOR	C6013		NCB21HK-103X	CAPACITOR	0.01μF,50V
C3011			QETL0JM-338	E CAPACITOR	C6016		NCB21HK-103X	CAPACITOR	0.01μF,50V
C3012			QEKJ0JM-476	E CAPACITOR	C6023		NRSA02J-0R0X	MG RESISTOR	0Ω,1/10W
C3014			QERF0JM-476	E CAPACITOR	C6027		NCB21HK-103X	CAPACITOR	0.01μF,50V
C3016			NCB21EK-473X	CAPACITOR	C6032		NCB21EK-473X	CAPACITOR	0.047μF,25V
C3022			NCB21EK-473X	CAPACITOR	C6037		QEKJ1CM-106	E CAPACITOR	10μF,16V
C3024			NDC21HJ-120X	CAPACITOR,J785EK	C6701		NRSA02J-0R0X	MG RESISTOR	0Ω,1/10W
			NDC21HJ-220X	CAPACITOR,J680EK/EU/J780EU	C6704		NCB21HK-103X	CAPACITOR	0.01μF,50V
C3025			QAT3725-300Z	TRIM CAPACITOR,TIMER CLOCK,J680EU/J780EU	C6707		NDC21HJ-470X	CAPACITOR	47pF,50V

#	△ REF No.	PART No.	PART NAME, DESCRIPTION	#	△ REF No.	PART No.	PART NAME, DESCRIPTION
C6708		NDC21HJ-8R0X	CAPACITOR 8pF,50V	L5		QQL29BJ-100Z	COIL 10μH
C6709		NDC21HJ-2R0X	CAPACITOR 2pF,50V	L12		QQR0967-001	COIL 12μH
C6713		NCF21CZ-224X	CAPACITOR 0.22μF,16V	L13		QQL071J-330Y	COIL 33μH
C6714		NCB21HK-682X	CAPACITOR 0.0068μF,50V	L22		QQL231J-1R0Y	COIL 1μH
C6715		QEKJ1HM-225	E CAPACITOR 2.2μF,50V	L24		QQL071J-270Y	COIL 27μH
C6716		NCB21HK-682X	CAPACITOR 0.0068μF,50V	L27		QQL071J-330Y	COIL 33μH
C6717		QEKJ1HM-225	E CAPACITOR 2.2μF,50V	L28		QQL071J-680Y	COIL 68μH
C6719		QEKJ1EM-106	E CAPACITOR 10μF,25V	L201		QQL29BK-1R0Z	COIL 1μH
C6720		QEKJ1EM-106	E CAPACITOR 10μF,25V	L202		QQL071J-330Y	COIL 33μH
C6721		NCB21HK-103X	CAPACITOR 0.01μF,50V	L203		QQL29BJ-220Z	COIL 22μH
C6723		NCB21HK-103X	CAPACITOR 0.01μF,50V	L204		QUY153-050Y	IM BUS WIRE
C7001		NCB21HK-103X	CAPACITOR 0.01μF,50V	L206		QQL071J-220Y	COIL 22μH
C7002		QEKJ0JM-476	E CAPACITOR 47μF,6.3V	L207		QUY153-050Y	IM BUS WIRE
C7011		QEKJ0JM-227	E CAPACITOR 220μF,6.3V	L2001		QUY153-050Y	IM BUS WIRE
C7012		NCB21HK-103X	CAPACITOR 0.01μF,50V	L2251		QQL29BJ-100Z	COIL 10μH
C7103		NCB21HK-681X	CAPACITOR 680pF,50V	L2252		QQL29BJ-151Z	COIL 150μH
C7104		NCB21HK-681X	CAPACITOR 680pF,50V	L3101		QQL29BJ-100Z	COIL 10μH
C7117		QUY153-050Y	IM BUS WIRE	L5201		PELN1184	COIL 33μH
C7119		NCB21HK-471X	CAPACITOR 470pF,50V	L5202		PELN1184	COIL 33μH
C7120		NCB21HK-471X	CAPACITOR 470pF,50V	L6001		QQL29BK-1R0Z	COIL 1μH
C7128		QEKJ1CM-107	E CAPACITOR 100μF,16V	L6003		QQL29BJ-470Z	COIL 47μH
C7129		NCB31CK-104X	CAPACITOR 0.1μF,16V	L7101		NRSA02J-0R0X	MG RESISTOR 0Ω,1/10W
C7131		QUY153-050Y	IM BUS WIRE	L7102		NQL092M-R22X	COIL 0.22μH
C7132		QETN1CM-107	E CAPACITOR 100μF,16V	L7105		QQL231J-1R0Y	COIL 1μH
C7133		NCB21HK-103X	CAPACITOR 0.01μF,50V	L7106		QQL231J-1R0Y	COIL 1μH
C7134		NCB31CK-473X	CAPACITOR 0.047μF,16V	L7107		QQL01BJ-100Z	COIL 10μH
C7135		NCB31CK-473X	CAPACITOR 0.047μF,16V	L7108		QUY153-050Y	IM BUS WIRE
C7136		NCB31CK-473X	CAPACITOR 0.047μF,16V	L7109		QQL231J-R22Y	COIL 0.22μH
C7137		NDC21HJ-330X	CAPACITOR 33pF,50V	L7201		QQL01BJ-101Z	COIL 100μH
C7138		QEKJ1EM-106	E CAPACITOR 10μF,25V	X1		QAX0576-001Z	CRYSTAL RESONATOR
C7139		QEKJ1CM-476	E CAPACITOR 47μF,16V	X3001		QAX0444-001	CRYSTAL RESONATOR,J680EK/J785EK
C7140		QEKJ1EM-106	E CAPACITOR 10μF,25V			QAX0445-001	CRYSTAL RESONATOR,J680EU/J780EU
C7141		QEKJ1EM-106	E CAPACITOR 10μF,25V	X3002		QAX0527-001	CRYSTAL RESONATOR
C7142		QEKJ1EM-106	E CAPACITOR 10μF,25V	X6701		QAX0443-001	CRYSTAL RESONATOR
C7143		QEKJ1EM-106	E CAPACITOR 10μF,25V	S3001		QSW0602-004	PUSH SWITCH,REC SAFETY
C7144		QEKJ1EM-106	E CAPACITOR 10μF,25V	S7001		QSW0456-002Z	TACT SWITCH,STAND-BY
C7145		QEKJ1EM-106	E CAPACITOR 10μF,25V	S7002		QSW0456-002Z	TACT SWITCH,CH-,J680EK/EU
C7146		QEKJ1HM-475	E CAPACITOR 4.7μF,50V			QSW0456-002Z	TACT SWITCH,TIMER,J785EK
C7147		QEKJ1EM-106	E CAPACITOR 10μF,25V			QSW0456-002Z	TACT SWITCH,A.DUB,J780EU
C7148		QEKJ1EM-106	E CAPACITOR 10μF,25V	S7004		QSW0456-002Z	TACT SWITCH,REC
C7149		QEKJ1HM-475	E CAPACITOR 4.7μF,50V	S7006		QSW0456-002Z	TACT SWITCH,PAUSE
C7150		QEKJ1EM-106	E CAPACITOR 10μF,25V	S7008		QSW0456-002Z	TACT SWITCH,STOP/EJECT
C7151		QEKJ1EM-106	E CAPACITOR 10μF,25V	S7010		QSW0456-002Z	TACT SWITCH,SAT.TIMER,J680EK/EU
C7152		NCB21EK-473X	CAPACITOR 0.047μF,25V			QSW0456-002Z	TACT SWITCH,PLAY,J780EU/J785EK
C7153		NDC21HJ-330X	CAPACITOR 33pF,50V	S7012		QSW0456-002Z	TACT SWITCH,PLAY,J680EK/EU
C7155		QEKJ1EM-106	E CAPACITOR 10μF,25V			QSW0456-002Z	TACT SWITCH,E.PROG,J780EU/J785EK
C7164		NCB21HK-681X	CAPACITOR,J780EU 680pF,50V	S7014		QSW0456-002Z	TACT SWITCH,REW,J680EK/EU
C7166		NCB21HK-681X	CAPACITOR,J780EU 680pF,50V	S7015		QSW0456-002Z	TACT SWITCH,FF,J680EK/EU
C7168		NCB21HK-681X	CAPACITOR 680pF,50V	S7016		QSW0456-002Z	TACT SWITCH,CH+,J680EK/EU
C7169		NCB21HK-681X	CAPACITOR 680pF,50V			QSW0456-002Z	TACT SWITCH,SAT.TIMER,J780EU/J785EK
C7170		NCB21HK-821X	CAPACITOR 820pF,50V	K2001		NQL103K-R10X	COIL 0.1μH
C7171		NCB21HK-821X	CAPACITOR 820pF,50V	K2002		NQL103K-R10X	COIL 0.1μH
C7172		NDC21HJ-101X	CAPACITOR 100pF,50V	K2003		NQL103K-R10X	COIL 0.1μH
C7173		NDC21HJ-101X	CAPACITOR 100pF,50V	K2004		NQL103K-R10X	COIL 0.1μH
C7174		NCB21HK-681X	CAPACITOR 680pF,50V	K2251		NRSA02J-0R0X	MG RESISTOR 0Ω,1/10W
C7175		NCB21HK-681X	CAPACITOR 680pF,50V	K2252		NRSA02J-0R0X	MG RESISTOR 0Ω,1/10W
C7202		QETJ0JM-477	E CAPACITOR 470μF,6.3V	K2253		NRSA02J-0R0X	MG RESISTOR 0Ω,1/10W
L1		QQL29BJ-100Z	COIL 10μH	K5101		QQR0678-001Z	FERRITE BEAD
L2		QUY153-050Y	IM BUS WIRE	K5102		QQR0678-001Z	FERRITE BEAD
L3		QQL29BJ-100Z	COIL 10μH	K6080		NRSA02J-102X	MG RESISTOR 1kΩ,1/10W
L4		QQL29BJ-100Z	COIL 10μH	K6701		NQR0200-003X	FERRITE BEAD

#	△ REF No.	PART No.	PART NAME, DESCRIPTION
	K6702	NQR0200-003X	FERRITE BEAD
	K6703	NQR0200-003X	FERRITE BEAD
	K6704	NQR0200-003X	FERRITE BEAD
	K6705	NQR0200-003X	FERRITE BEAD
	K6706	NQR0200-003X	FERRITE BEAD
	K7001	NQR0403-003X	FERRITE BEAD
	PC3001	GP3S123	IC(PHOTO SENSOR)
	PC3002	GP3S123	IC(PHOTO SENSOR)
△	PC5101	PS2561L1-1/L/	IC(PHOTO COUPLER)
	T2051	PELN0832	OSC TRANSFORMER,J680EK/EU/J785EK
		PELN0860	OSC TRANSFORMER,J780EU
	T2052	PELN0861	OSC TRANSFORMER,J780EU
△	T5001	QQS0083-001	SW TRANSFORMER
	TU6001	QAU0208-001	TUNER
△	TB1	LP20317-005A	TERMINAL BOARD(PAL),J680EK/EU/J785EK
△		LP20317-007A	TERMINAL BOARD(PAL),J780EU
	DI7001	LTG-Y2K16M-J	LE DIODE
	ET1	PQ21623-2-5	EARTH PLATE(RF)
	HS1	LP40090-001A	HEAT SINK,Q5101
	SD1	LP21033-001A	SHIELD CASE(PRE)
	OT1	QYTDST3006Z	SCREW,Q5101
	FC5001	QNG0006-001Z	FUSE CLIP,F5001
	FC5002	QNG0006-001Z	FUSE CLIP,F5001
	J7101	PEMC1104	RGB21PIN SOCKET,AV1
	J7102	PEMC1104	RGB21PIN SOCKET,AV2
	J7103	QNN0292-003	PIN JACK
	J7105	QNN0381-002	PIN JACK,FRONT IN,J780EU
△	LF5001	PELN1204-01-01	LINE FILTER
△	LF5002	QQR0978-001	LINE FILTER
	CN1	QGF1028C1-11	FPC CONNECTOR,(1-11)U.DRUM
	CN2001	QGF1207C1-07	FPC CONNECTOR,(1-7)A/C HEAD
	CN2002	QGB2532J1-02	CONNECTOR,(1-2)FE HEAD
	CN3001	QGF1207C1-05	FPC CONNECTOR,(1-5)DRUM MDA
	CN3002	QGB2532J1-02	CONNECTOR,(1-2)LOADING MOTOR
	CN3003	QGB2015M2-08	CONNECTOR,(1-8)CAPSTAN MOTOR
	CN3004	QGB2534J2-04	CONNECTOR,(1-4)ROTARY ENCODER
△	CN5001	QGA7901C3-02	CONNECTOR,(1-2)AC IN
	CN7001	QGF1207C1-09	FPC CONNECTOR,(1-9)FRONT,J780EU/J785EK
△	CP4001	ICP-N25	CIRCUIT PROTECTOR
△	CP5302	ICP-N25	CIRCUIT PROTECTOR
△	F5001	QMF51E2-2R0J1	FUSE T2.0A,AC250V

A/C HEAD BOARD ASSEMBLY <12>

PW1	LP10122-01A1	A/C HEAD BOARD ASSY
CN1	QGF1208F1-07	FPC CONNECTOR

ADV.JOG BOARD ASSEMBLY(HR-J780EU/J785EK) <38>

PW1	LPA20013-01B	ADV.JOG BOARD ASSY
UN7001	QSW0905-001	ROTARY ENCODER
CN7003	QGF1209F1-09	FPC CONNECTOR,(1-9)MAIN

#	△ REF No.	PART No.	PART NAME, DESCRIPTION

LOADING MOTOR BOARD ASSEMBLY <55>

PW2	LP10122-01A2	LOADING MOTOR BOARD ASSY
CN1	QGB2533K1-02	CONNECTOR

R.PAUSE BOARD ASSEMBLY(HR-J780EU)<91>

PW3	LPA10131-01A3	R.PAUSE BOARD ASSY
R7167	NRSA02J-101X	MG RESISTOR 100Ω,1/10W
J7108	PU60612	MINI JACK,R.PAUSE
CN7106	QUM022-18A4A4	PARA RIBON WIRE

SAT_CTL BOARD ASSEMBLY <92>

PW4	LPA10131-01A4	SAT_CTL BOARD ASSY
R7166	NRSA02J-101X	MG RESISTOR 100Ω,1/10W
J7107	PU60612	MINI JACK,SAT_CTL
CN7104	QUM022-18A4A4	PARA RIBON WIRE