



Nakamichi

Service Manual

**Nakamichi
420
power amplifier**



CONTENTS

1. General	2
2. Principle of Operation	3
2.1. Power Supply	3
2.2. Power Block Pre-stage	3
2.3. Power Block Output Stage	4
3. Removal Procedures	6
3.1. Top Cover Ass'y	6
3.2. Power Block Ass'y	6
3.3. Front Panel Ass'y, Lamp and Thermostat	6
3.4. Transformer, Capacitors etc.	6
3.5. 2P Pin Jack and Push Terminal	6
4. Readjustment of Power Block	7
5. Mechanism Ass'y and Parts List	8
5.1. Synthesis	8
5.2. Mechanism Ass'y (A01)	8
5.3. Front Panel Ass'y (A02)	9
5.4. Rear Panel Ass'y (A03)	10
5.5. Rear Panel Sub-ass'y (B01)	10
6. Mounting Diagrams and Parts List	11
6.1. Power Block Ass'y	11
6.1.1. Power Block P.C.B. Ass'y	11
6.2. Output P.C.B. Ass'y	11
7. Wiring Diagram	13
8. Performance Data	14
9. Block Diagram	15
10. Schematic Diagram	16
11. Bridging Adaptor BA-100 (Option)	17
12. Specifications	18

1. GENERAL

Nakamichi 420 control functions are shown below.



Fig. 1.1

1. Power Indicator Pilot Light
2. AC Power Cord
3. Voltage Selector
4. Output Terminals
5. Input Jacks



Fig. 1.2

Cautions


The Nakamichi 420 incorporates large capacitances. It is very dangerous to access the capacitor for a duration of about 3 minutes after the power switch has been turned off because of incomplete discharging. Use extreme care when accessing the capacitor for repair purposes.

Never short the capacitor terminals with a screwdriver or a similar tool after the power switch is turned off, with an attempt to discharging the capacitor. (Shorting the terminal in such a way can melt the shorted point leading to a hole, and will give adverse effects on the capacitor itself.)


The recommended way to discharge the capacitor as quickly as possible is to turn off the power supply with sound emitting through the loudspeaker or to discharge the capacitor with resistances of $100\Omega - 300\Omega$, approx. 20W.

Voltage Selector


Change over either to 100V, 117V, 220V, or 240V.




240V



117V



220V



100V

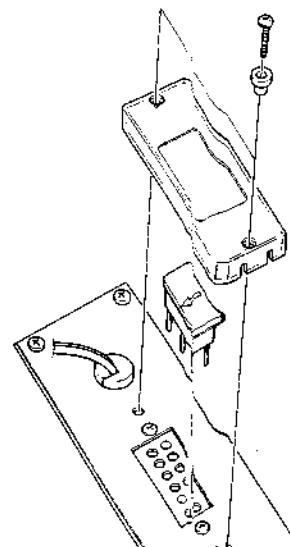


Fig. 1.3

2. PRINCIPLE OF OPERATION

2.1. Power Supply

Refer to Fig. 2.1.

The 420 has a thermostat in the power transformer primary circuit to prevent overheating of the system that may lead to a fire. If the heat sink of the 420 is heated to reach a temperature of approx. 85°C , the thermostat will open to interrupt the power supply to the system. When the temperature decreases to below approx. 65°C , the thermostat will be automatically reclosed.

Note: Keep the power cord off the system until the thermostat restores to normal.

A 147°C 2A thermal fuse is contained within the transformer and protects it from unusual heating.

If the fuse is blown, it is necessary to replace the transformer itself.

2.2. Power Block Pre-stage

Refer to Fig. 2.2.

As all the output stage consists of emitter-followers, the voltage gain is 1. Therefore, the gain required for power amplifier and NFB is obtained at the pre-stage. Generally, an increase in the number of transistor stages of an amplifier circuit increases distortion and phase shift. In large current amplification as seen with a power amplifier, a certain extent of distortion cannot be avoided and should be limited through use of NFB. However, excessive NFB is likely to cause unstable amplification as a result of phase shift in the amplifier or differences in loudspeaker impedance. This is one of the drawbacks inherent to an NFB amplifier.

The power amplifier used in the 420 employs 8 transistors, of which only two serve for voltage amplification and the remaining six are used to provide the former two with the best operating conditions. A gain of approx. 100dB is obtained through these two transistors to perform power amplification and NFB. The amplifier of this configuration assures stable NFB with low noise and low distortion and with little phase shift.

Q001 and Q007 are for voltage amplification; Q002 and Q003 form a current mirror circuit (the same current at both collectors); Q005 and Q008 provide a constant-current source; Q006 is for impedance conversion (emitter-follower); Q004 and Q001 make up a differential amplifier circuit. Thus, stable NFB is applied through a circuitry using these transistors.

C005 determines the high-band characteristic of the voltage amplifier to prevent NFB from becoming unstable because of unbalanced performance. R016 is a resistor for NFB.

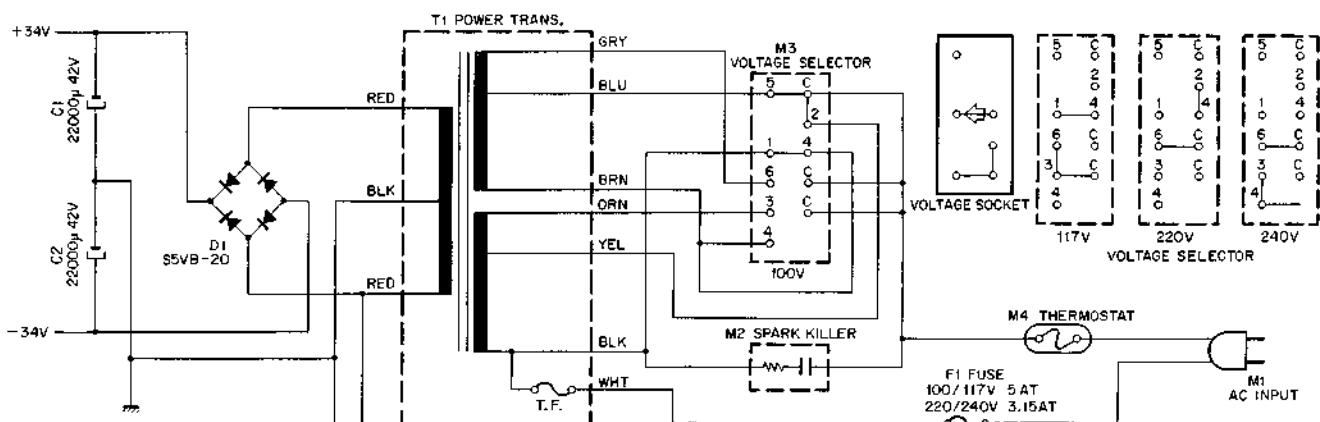


Fig. 2.1

2.3. Power Block Output Stage

In the Nakamichi 420 for making a bias voltage, varistor used in the conventional design of amplifier is replaced with transistor base-emitter so that the 420 design improves bias stability (against temperature or current changes) with lower distortion.

Especially for a class B push-pull amplifier, distortion cannot be reduced unless the positive and negative signal amplifiers are well balanced. The amplifier in the 420, however, is best balanced thanks to the vertically and horizontally symmetric configuration as shown in Fig. 2.3. This circuit allows distortion of only 0.1% at 1KHz 50 watts output even without NFB. This degree of distortion is low enough to make the amplifier used as a high-fidelity unit even if it is given no NFB.

Fig. 2.4 shows that a change in current flowing across the diode varies the terminal voltage and that E_b changes with signal current. These changes result in the generation of distortion. It is a matter of course that signal current flowing across the diode will produce distortion. See Fig. 2.3. Transistors Q009, Q011, Q010 and Q012 that generate bias voltage form an emitter-follower circuit of class A operation. Thus this circuit does not induce distorted signals.

Unless corrected perfectly against temperatures, the bias voltage of power amplifiers in the class B amplifier will increase distortion at low temperature or become unstable at high temperature. It may safely be said that temperature compensation of a transistor can be more properly and effectively carried out by the transistor of the same structure than a diode.

For an ordinary class B amplifier, crossover distortion is reduced by increasing idling current thus overlapping the operating ranges of the positive and negative transistors. The overlap portion acts as a class A amplifier. Generally, the degree of amplification decreases where a change takes place from class A to B and no linear curve is obtained as shown in Fig. 2.5 (A). However, if the circuit shown in Fig. 2.3 is current-driven, a linear curve can be obtained at the point of change from class A to B as shown in Fig. 2.5 (B).

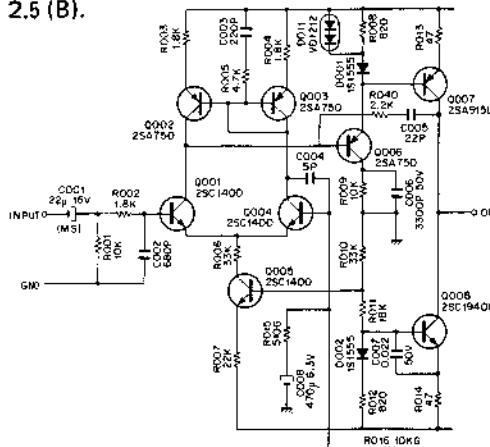


Fig. 2.2

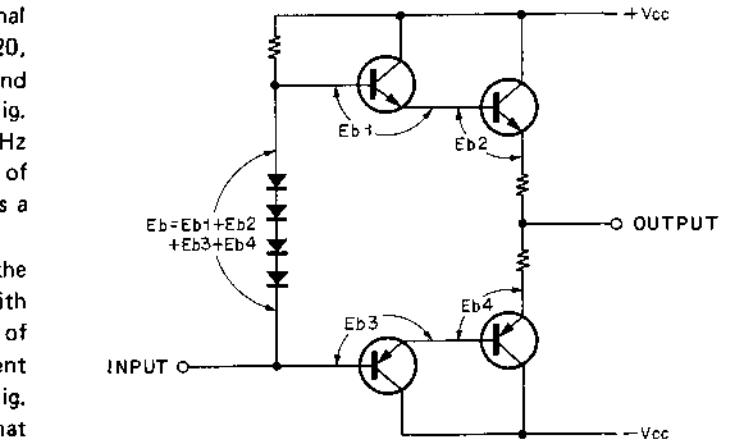


Fig. 2.4

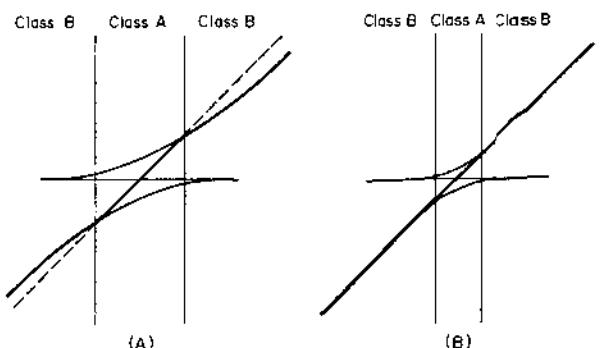


Fig. 2.5

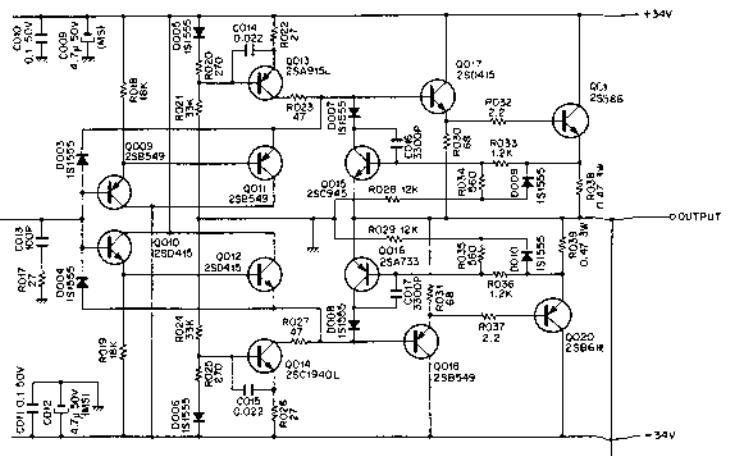


Fig. 2.3

4. READJUSTMENT OF POWER BLOCK

The 420 uses no semi-fixed parts to enhance reliability. As long as all parts meet the specification, the published characteristics can be obtained without readjustment. Generally, no readjustment is required if only defective parts are replaced at repair.

Observe the following precautions when repairing defective parts:

- 4.1. Relocating a wiring can cause larger distortion.
Do not relocate the wiring.
- 4.2. Fully tighten or retighten the screws on the chassis to decrease the resistance between GND terminals.
- 4.3. It must be noted that an incompletely soldered fuse in the output P.C.B. assembly will cause higher distortion.
- 4.4. Loudspeaker cords must be securely connected to the output terminals. A loose cord-to-terminal connection may cause poor contacting and, as a result, higher distortion.

4.5. If a new semiconductor is installed in the power block, a perfect balance should be held between it and the existing semiconductors in the block. An imperfect balance can cause larger distortion or unwanted oscillation.

To maintain a good balance, connect an 8Ω 50W load resistance to the output terminal, measure distortion and check that it meets the following requirements: (In this case, the residual distortion factor of the instrument should be lower than the specified value.)

- (1) Output 1 watt, 1 and 10 KHz input signals;
less than 0.008%
- (2) Output 50 watts, 1 and 10 KHz input signals;
less than 0.008%

Note: Following semiconductors are used as a pair.

Q009•Q011 – Q010•Q012

Q017•Q019 – Q018•Q020

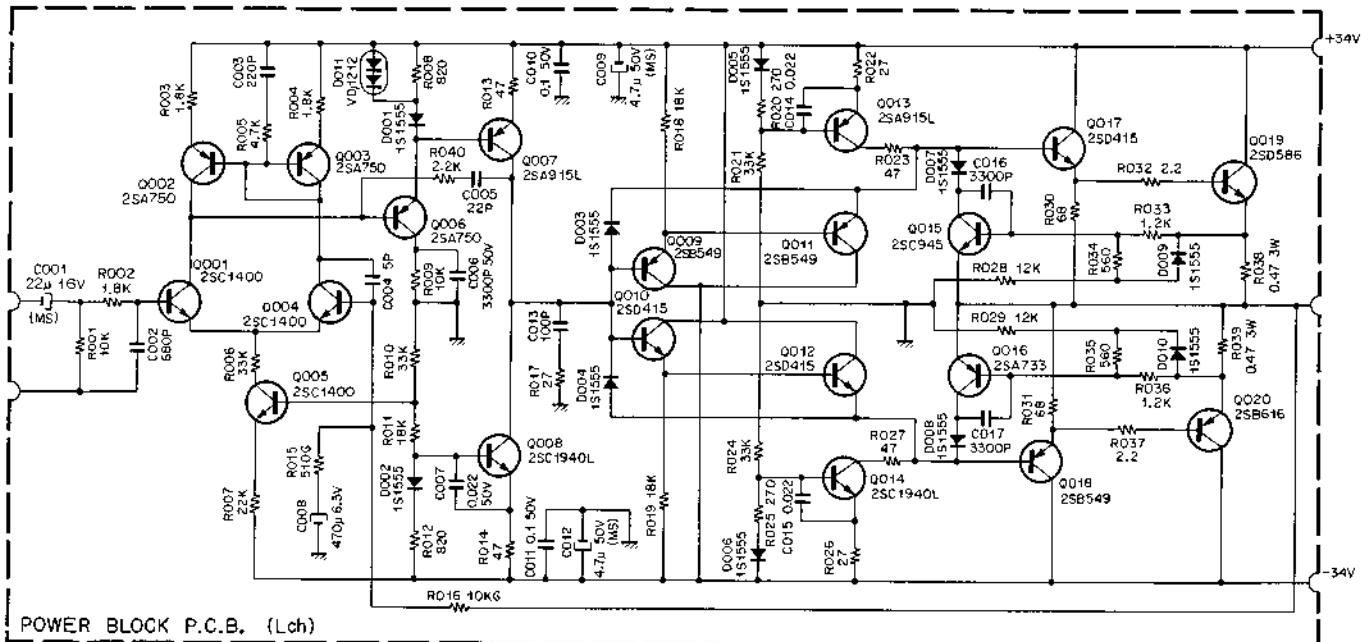


Fig. 4

5. MECHANISM ASS'Y AND PARTS LIST

5.1. Synthesis

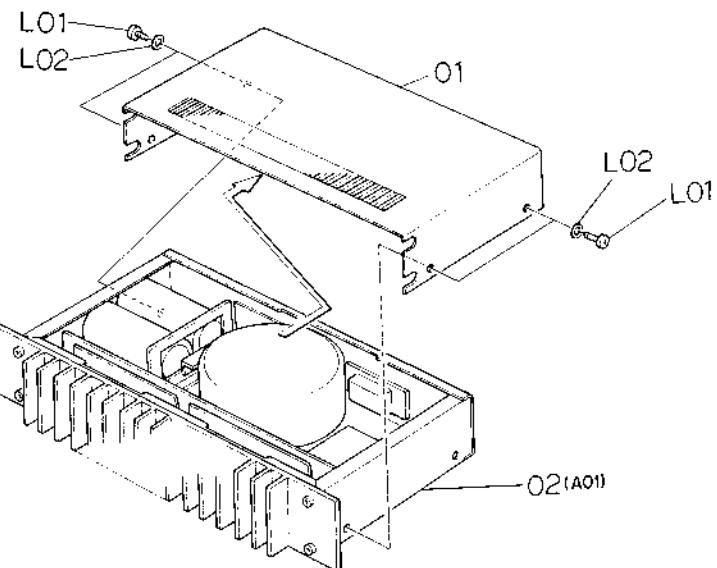


Fig. 5.1

5.2. Mechanism Ass'y (A01)

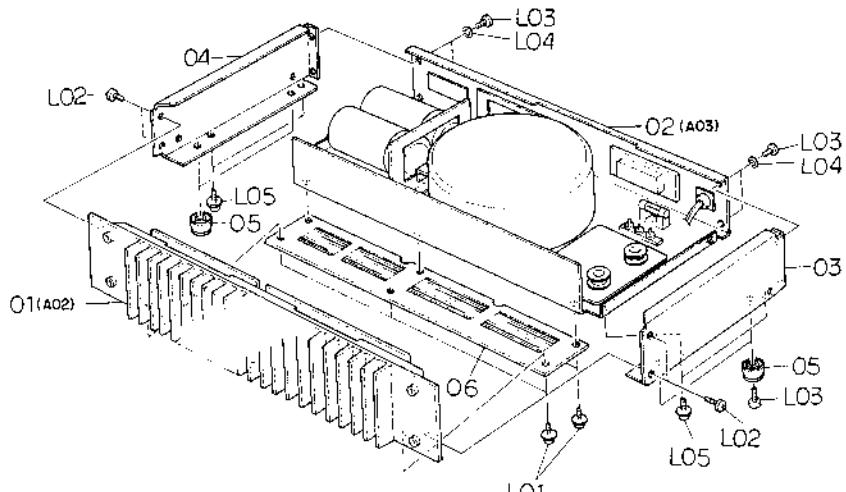


Fig. 5.2

Schematic Ref. No.	Part No.	Description	Q'ty	Schematic Ref. No.	Part No.	Description	Q'ty
01	HA03695A OH03470B OJ03579A OJ03580A	Synthesis	1	02	JA03139A	Rear Panel Ass'y	1
		Top Cover Ass'y		03	OJ03562A	Side Chassis R	1
		Top Cover		04	OJ03563A	Side Chassis L	1
		Blind Hemilor		05	OJ03564A	Foot T-H	4
	L01	Mechanism Ass'y	1	06	OJ03565A	Rear Cover	1
02	OE00593A	Top Cover Hemilor	1	L01	OE00606A	Screw M3x6 Philips Pan Head (3A)	6
		Screw M3x6 Philips Binding Head (Bronze)	4	L02	OE00738A	Screw M4x6 Philips Binding Head (Bronze)	4
L02	OE00157A	Washer 3mm (Plastics)	4	L03	OE00594A	Screw M3x8 Philips Binding Head (Bronze)	8
		Mechanism Ass'y	1	L04	OE00197A	Washer 3mm (Bronze)	4
01	HA03686A	Front Panel Ass'y	1	L05	OE00607A	Screw M3x8 Philips Pan Head (3A)	4

5.3. Front Panel Ass'y (A02)

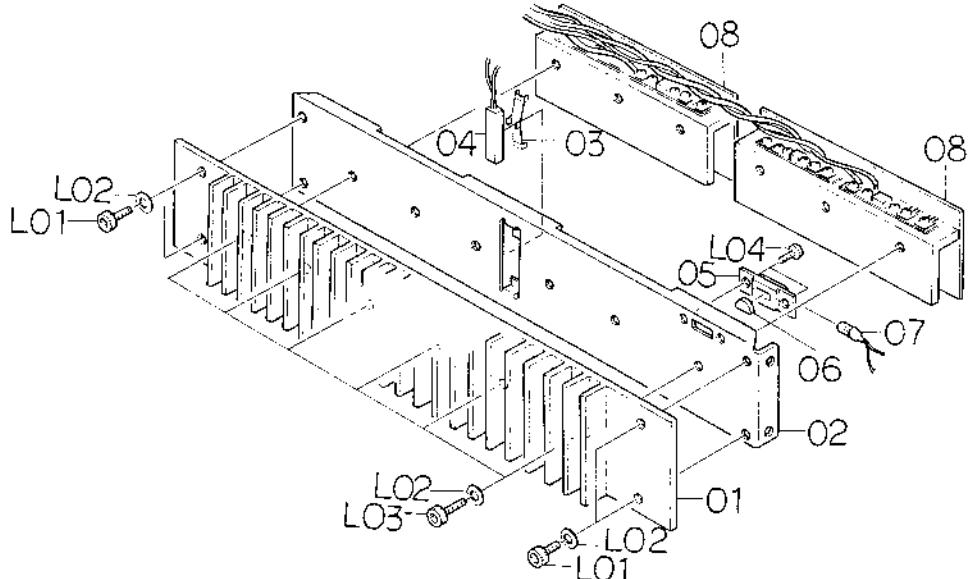


Fig. 5.3

Schematic Ref. No.	Part No.	Description	Q'ty	Schematic Ref. No.	Part No.	Description	Q'ty
A02	HA03686A	Front Panel Ass'y	1	L04	0E00606A	Screw M3x6 Philips Pan Head (3A)	11
01	OH03469C	Front Panel	1	L05	0E00659A	Screw M3x10 Philips Pan Head	2
02	OH03468C	Power Indicator	1	L06	0E00723A	Washer 3mm Spring	2
03	OJ03566B	Front Chassis	1	L07	0E00732A	Washer 3mm	2
04	OJ03567B	Thermostat Holder	1	L08	0E00612A	Screw M3x6 Philips Pan Head (2A)	1
05	OB08338A	Thermostat	1	L09	0E00510A	Screw M3x8 Philips Pan Head (2A)	2
06	OJ03568A	Lamp Holder	1	L10	0E00610A	Screw M3x12 Philips Pan Head (3A)	1
07	OH03467A	Lamp Filter (Orange)	1			Nut Hex. M3	2
08	OJ03570A	Lamp 16V 40mA	1	L11	0E00718A		
L01	JA03140A	Power Block Ass'y	2				
	OE00745A	Screw M4x10 Hex. Socket Head	4	B01		Rear Panel Sub-ass'y	1
L02	OJ03556A	Washer 4mm	10			Main Chassis	1
L03	OE00733A	Screw M4x12 Hex. Socket Head	6			Power Cord	1
L04	OE00649A	Screw M3x4 Philips Truss Head (Bronze)	2	01	JA03138A	Cord Bushing	1
				02	OB03900U	Cord Spacer	1
				03	OB08037U		
				04	OA03154B	Voltage Selector Socket	1
				05	OB03877U	Voltage Selector Cover SO	1
A03	JA03139A	Rear Panel Ass'y	1	06	OH03335A	Acrylic Cover	1
01		Rear Panel Sub-ass'y	1	07	OH03334B	Spark Killer	1
02	OB06553U	Power Transformer	1	08	OB08240U	Push Terminal	1
03	OJ03576A	Capacitor Holder	1	09	OB08233U	Push Terminal Holder	1
04	OB05908A	Electrolytic Capacitor 22000µF 42V	2	10	OJ03502A	2P Pin Jack	1
05	OB06108A	Rectifier Bridge S5VB-20	1	11	OB03072A	Screw M3x8 Philips Binding Head (Bronze)	4
06	OB08282U	Fuse 5A (Time Lag) (100, 117V)	1	L01	0E00594A	Washer 3mm (Plastics)	6
06	OB08281U	Fuse 3.15A (Time Lag) (220, 240V)	1	L02	0E00157A	Earth Lug B-5	1
07	OB08310U	Fuse Holder	1	L03	0E00037A	Washer 3mm Toothed Lock	4
08	OB08024U	3P Terminal	1	L04	0E00172A	Nut Hex. M3	4
09	BA03812A	Output P.C.B. Ass'y	1	L05	0E00507A	Screw M3x12 Philips Pan Head (Bronze)	2
	OJ03634A	Isolation Spacer	1	L06	0E00590A	Screw M3x20 Philips Pan Head (Bronze)	2
L01	OE00513A	Nut Hex. M5	4	L07	0E00591A	Washer for Voltage Selector Cover	2
L02	OE00709A	Washer 5mm Spring	4	L08	OH03366A		
L03	OJ03511A	Transformer Holder Washer	4				

5.4. Rear Panel Ass'y (A03)

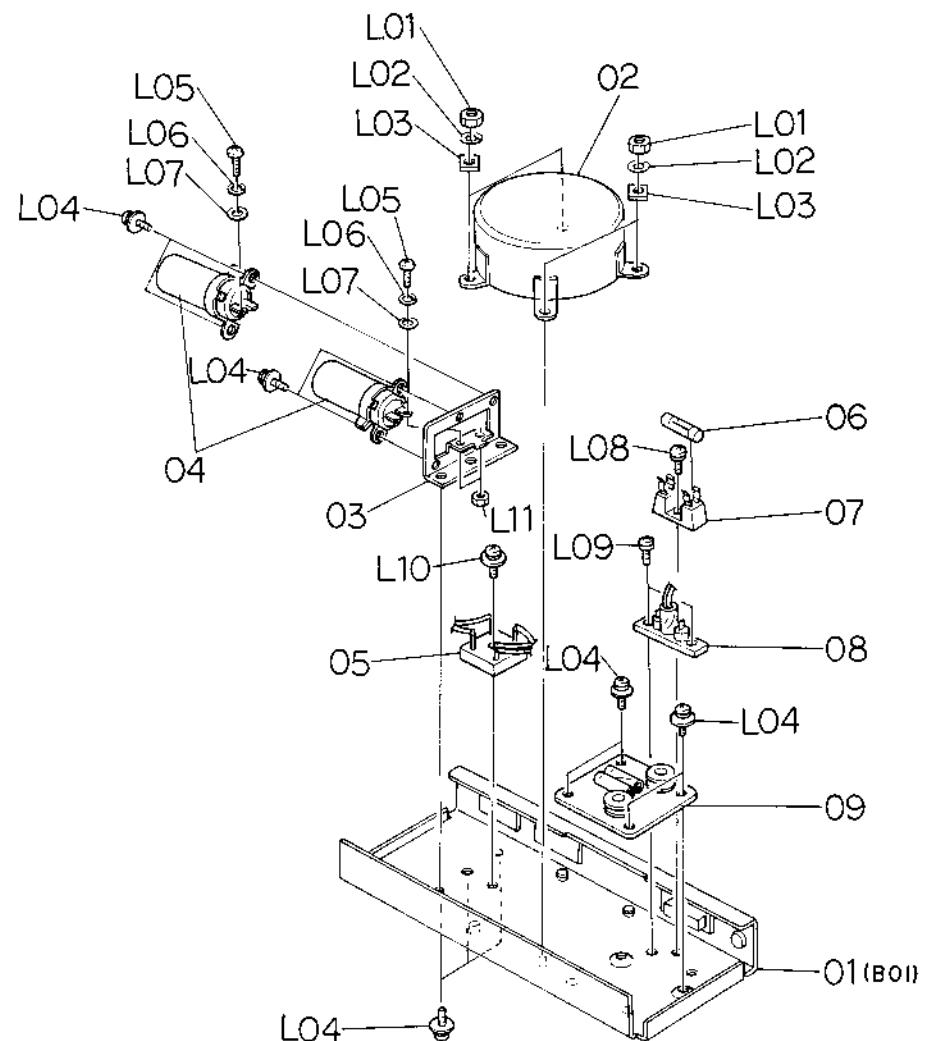


Fig. 5.4

5.5. Rear Panel Sub-ass'y (B01)

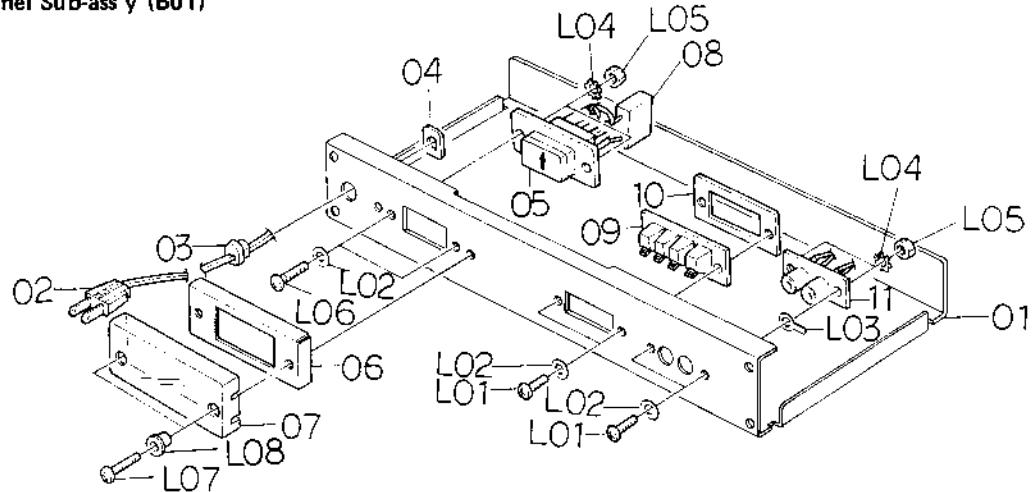


Fig. 5.5

6. MOUNTING DIAGRAMS AND PARTS LIST

Note: Mounting diagram shows a dip side view of the printed circuit board.

6.1. Power Block Ass'y

6.1.1. Power Block P.C.B. Ass'y

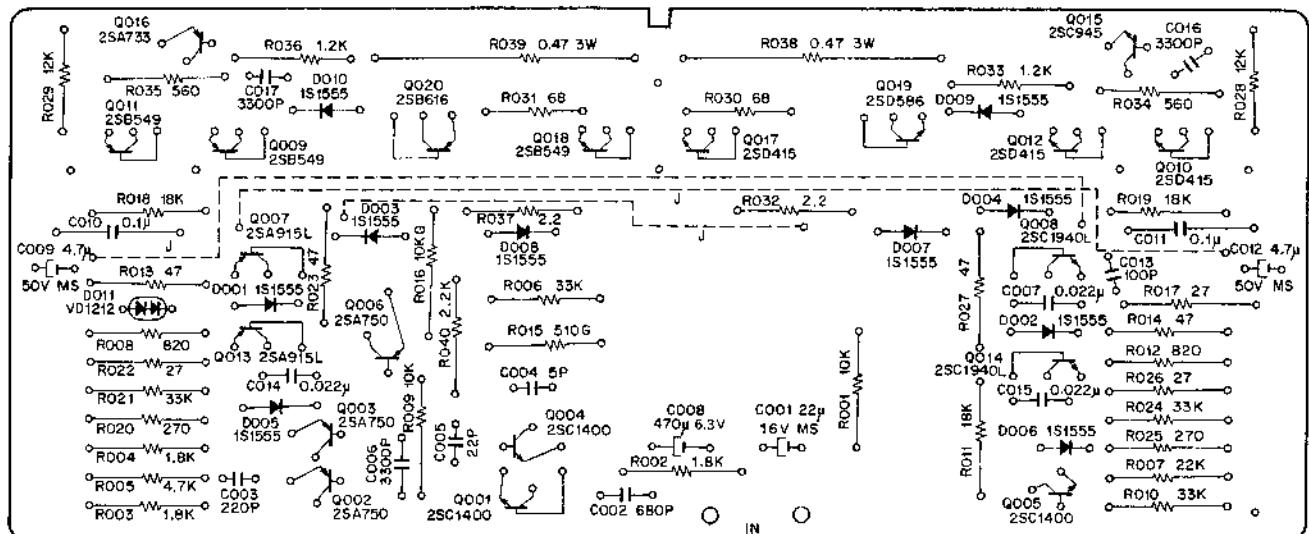


Fig. 6.1

Note: Diode FDH-999 is compatible with 1S1555.

6.2. Output P.C.B. Ass'y

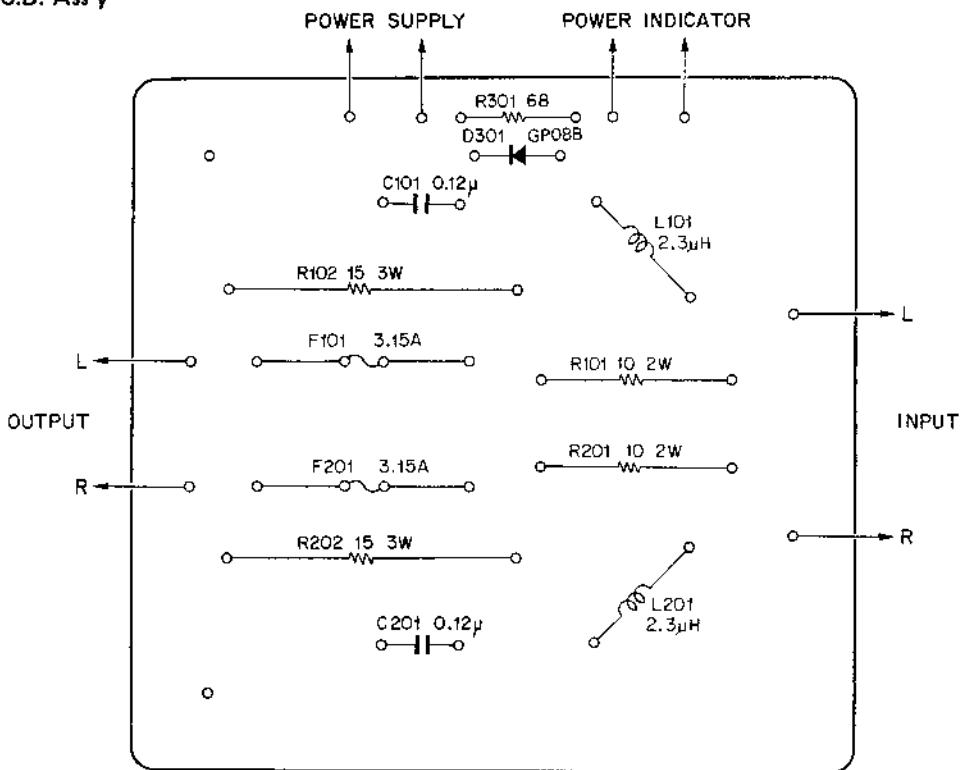


Fig. 6.2

Schematic Ref. No.	Part No.	Description	Schematic Ref. No.	Part No.	Description
	JA03140A	Power Block Ass'y	R040	0B05622A	Carbon Resistor 2.2K ERD-14 TJ
	BA03811A	Power Block P.C.B. Ass'y	C001	0B05820A	Electrolytic Capacitor 22 μ 16V M(MS)
	OJ03572A	Heat Sink 420	C002	0B05893A	Ceramic Capacitor 680P 50V K
	OJ03560A	Spring Pin (2 pcs.)	C003	0B05879A	Ceramic Capacitor 220P 50V K
	OE00231A	Screw M2.6x8 Philips Pan Head FT (3 pcs.)	C004	0B05905A	Ceramic Capacitor 5P 50V K
	OJ03494A	Transistor Bushing (10 pcs.)	C005	0B05806A	Ceramic Capacitor 22P 50V K
	OJ03573A	Transistor Plate (2 pcs.)	C006, 016	0B05881A	Ceramic Capacitor 3300P 50V M
	OJ03574A	Transistor R Holder (1 pce.)	017		
	OJ03575A	Transistor L Holder (1 pce.)	C007, 014	0B05882A	Ceramic Capacitor 0.022 μ 50V M
	OE00722A	Screw M3x12 Philips Pan Head (10 pcs.)	015	0B05842A	Electrolytic Capacitor 470 μ 6.3V
	OE00732A	Washer 3mm (8 pcs.)	C008		
	OE00723A	Washer 3mm Spring (10 pcs.)	C009, 012	0B05904A	Electrolytic Capacitor 4.7 μ 50V M(MS)
	BA03811A	Power Block P.C.B. Ass'y	C010, 011	0B01356A	Ceramic Capacitor 0.1 μ 50V M
Q001, 004 005	OB07693A	Power Block P.C.B.	C013	0B05892A	Ceramic Capacitor 100P 50V K
Q002, 003 006	OB06078A	Transistor 2SC1400		BA03812A	Output P.C.B. Ass'y
Q007, 013	OB06074A	Transistor 2SA750	D301	0B07692A	Output P.C.B.
Q008, 014	OB06102A	Transistor 2SA915 (L)	L101, 201	0B06109A	Silicon Diode GP08B
Q009, 011 018	OB06101A	Transistor 2SC1940 (L)	R101, 201	BA03784A	Output Coil Ass'y 2.3 μ H
Q010, 012 017	OB06103A	Transistor 2SB549	R102, 202	0B05906A	Metal Film Resistor 10 ERX-2AN
Q015	OB06104A	Transistor 2SD415	R301	0B05907A	Metal Film Resistor 15 ERX-3AN
Q016	OB06100A	Transistor 2SC945 (A)	C101, 201	0B01704A	Carbon Resistor 68 ERD-14 TJ
Q019	OB06013A	Transistor 2SA733	F101, 201	0B01772A	Mylar Capacitor 0.12 μ 50V K
Q020	OB06106A	Transistor 2SD586 (A)		0B08278A	Fuse 3.15A
Q001, 002 003, 004 005, 006 007, 008 009, 010	OB06105A	Transistor 2SB616 (A)			
Q011	OB01909A	Silicon Diode 1S1555			
R001, 009	OB06107A	Silicon Diode VD1212			
R002, 003 004	OB01888A	Carbon Resistor 10K ERD-14 TJ			
R005	OB05614A	Carbon Resistor 1.8K ERD-14 TJ			
R006, 010 021, 024	OB01846A	Carbon Resistor 4.7K ERD-14 TJ			
R007	OB05509A	Carbon Resistor 33K ERD-14 TJ			
R008, 012	OB05615A	Carbon Resistor 22K ERD-14 TJ			
R011, 018 019	OB01680A	Carbon Resistor 820 ERD-14 TJ			
R013, 014 023, 027	OB05560A	Carbon Resistor 18K ERD-14 TJ			
R015	OB01706A	Carbon Resistor 47 ERD-14 TJ			
R016	OB05903A	Metal Film Resistor 510 ERO-25 CKG			
R017, 022 026	OB05878A	Metal Film Resistor 10K ERO-25 CKG			
R020, 025	OB05875A	Carbon Resistor 27 ERD-14 TJ			
R028, 029	OB05645A	Carbon Resistor 270 ERD-14 TJ			
R030, 031	OB05771A	Carbon Resistor 12K ERD-14 TJ			
R032, 037	OB01704A	Carbon Resistor 68 ERD-14 TJ			
R033, 036	OB05580A	Carbon Resistor 2.2 ERD-14 TJ			
R034, 035	OB05623A	Carbon Resistor 1.2K ERD-14 TJ			
R038, 039	OB05675A	Carbon Resistor 560 ERD-14 TJ			
	OB05902A	Metal Film Resistor 0.47 ERX-3AN			

7. WIRING DIAGRAM













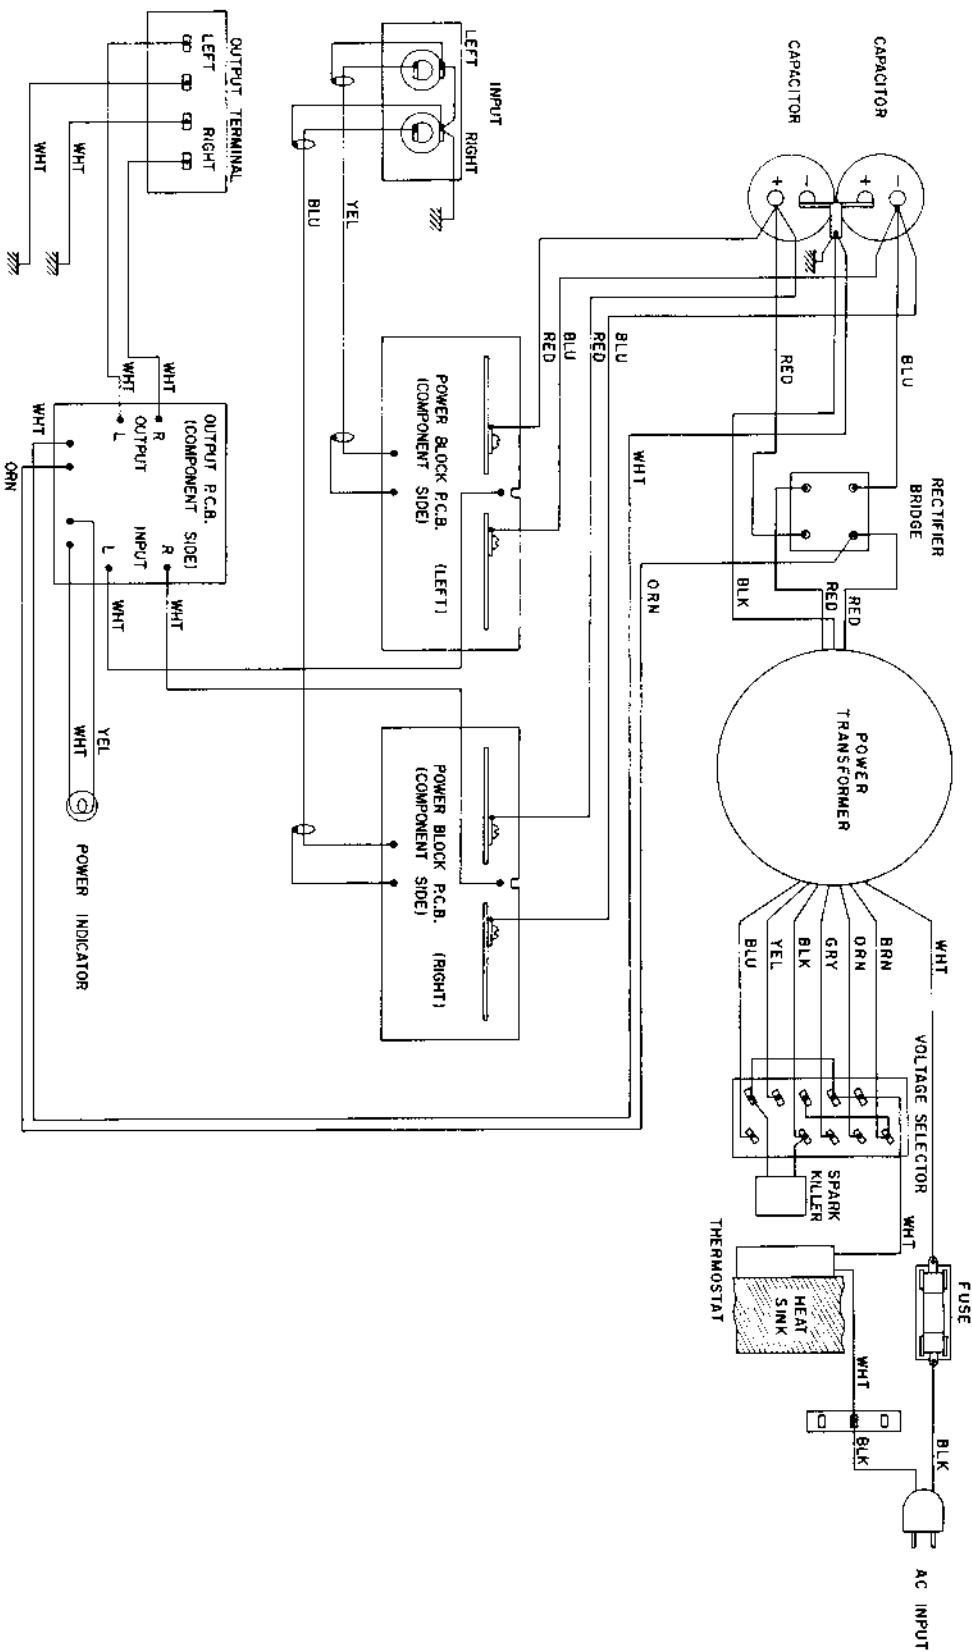


Fig. 7

8. PERFORMANCE DATA

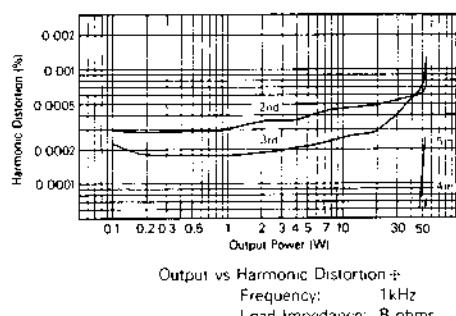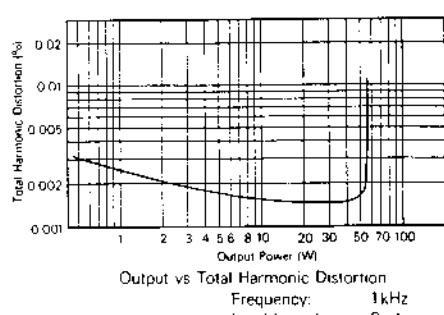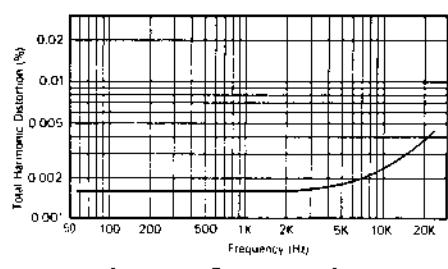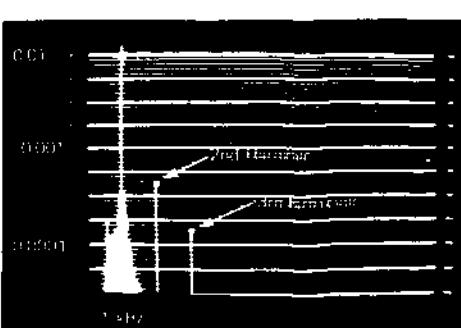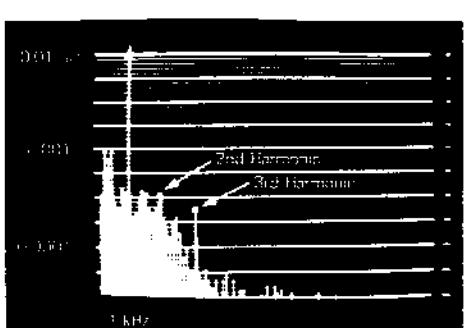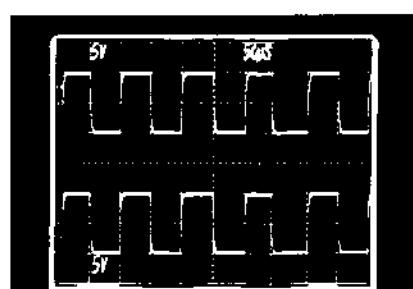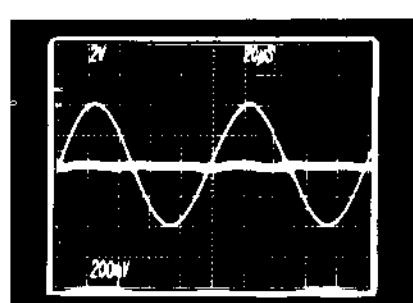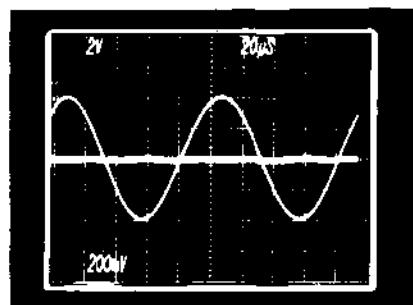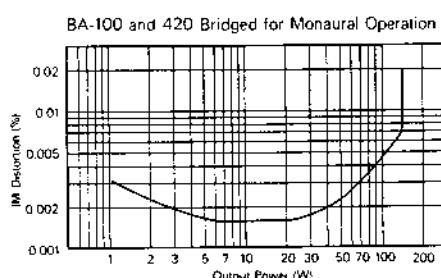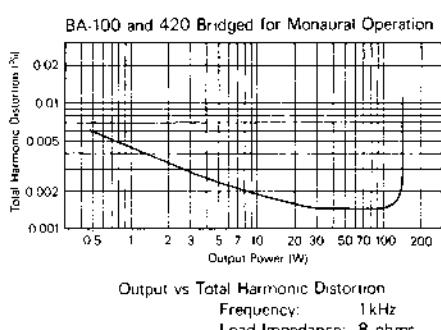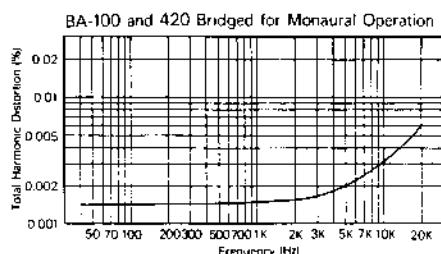

*This Data was obtained with the aid of a Brüel & Kjaer 3348 Real Time Analyzer
These measurements cannot be made with conventional distortion analyzers because of noise factors.

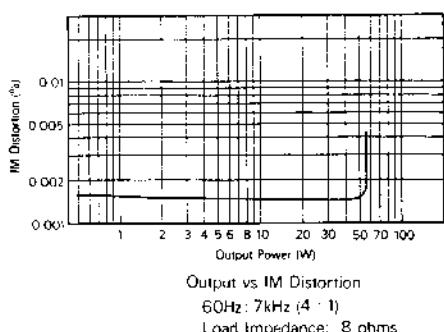

*B & K 3348 Real Time Spectrum Analyzer

Fig. 8

9. BLOCK DIAGRAM

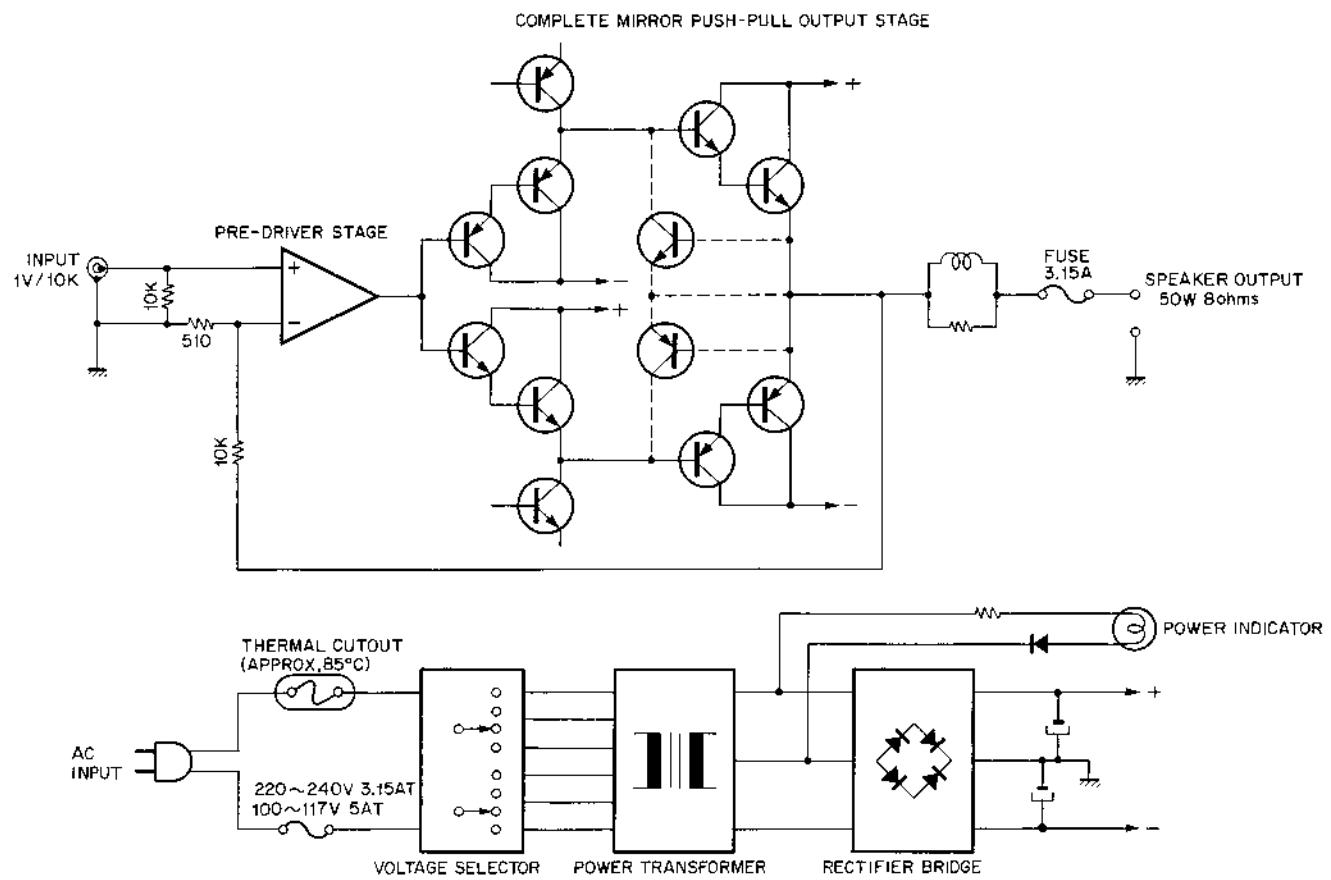


Fig. 9

Schematic Diagram


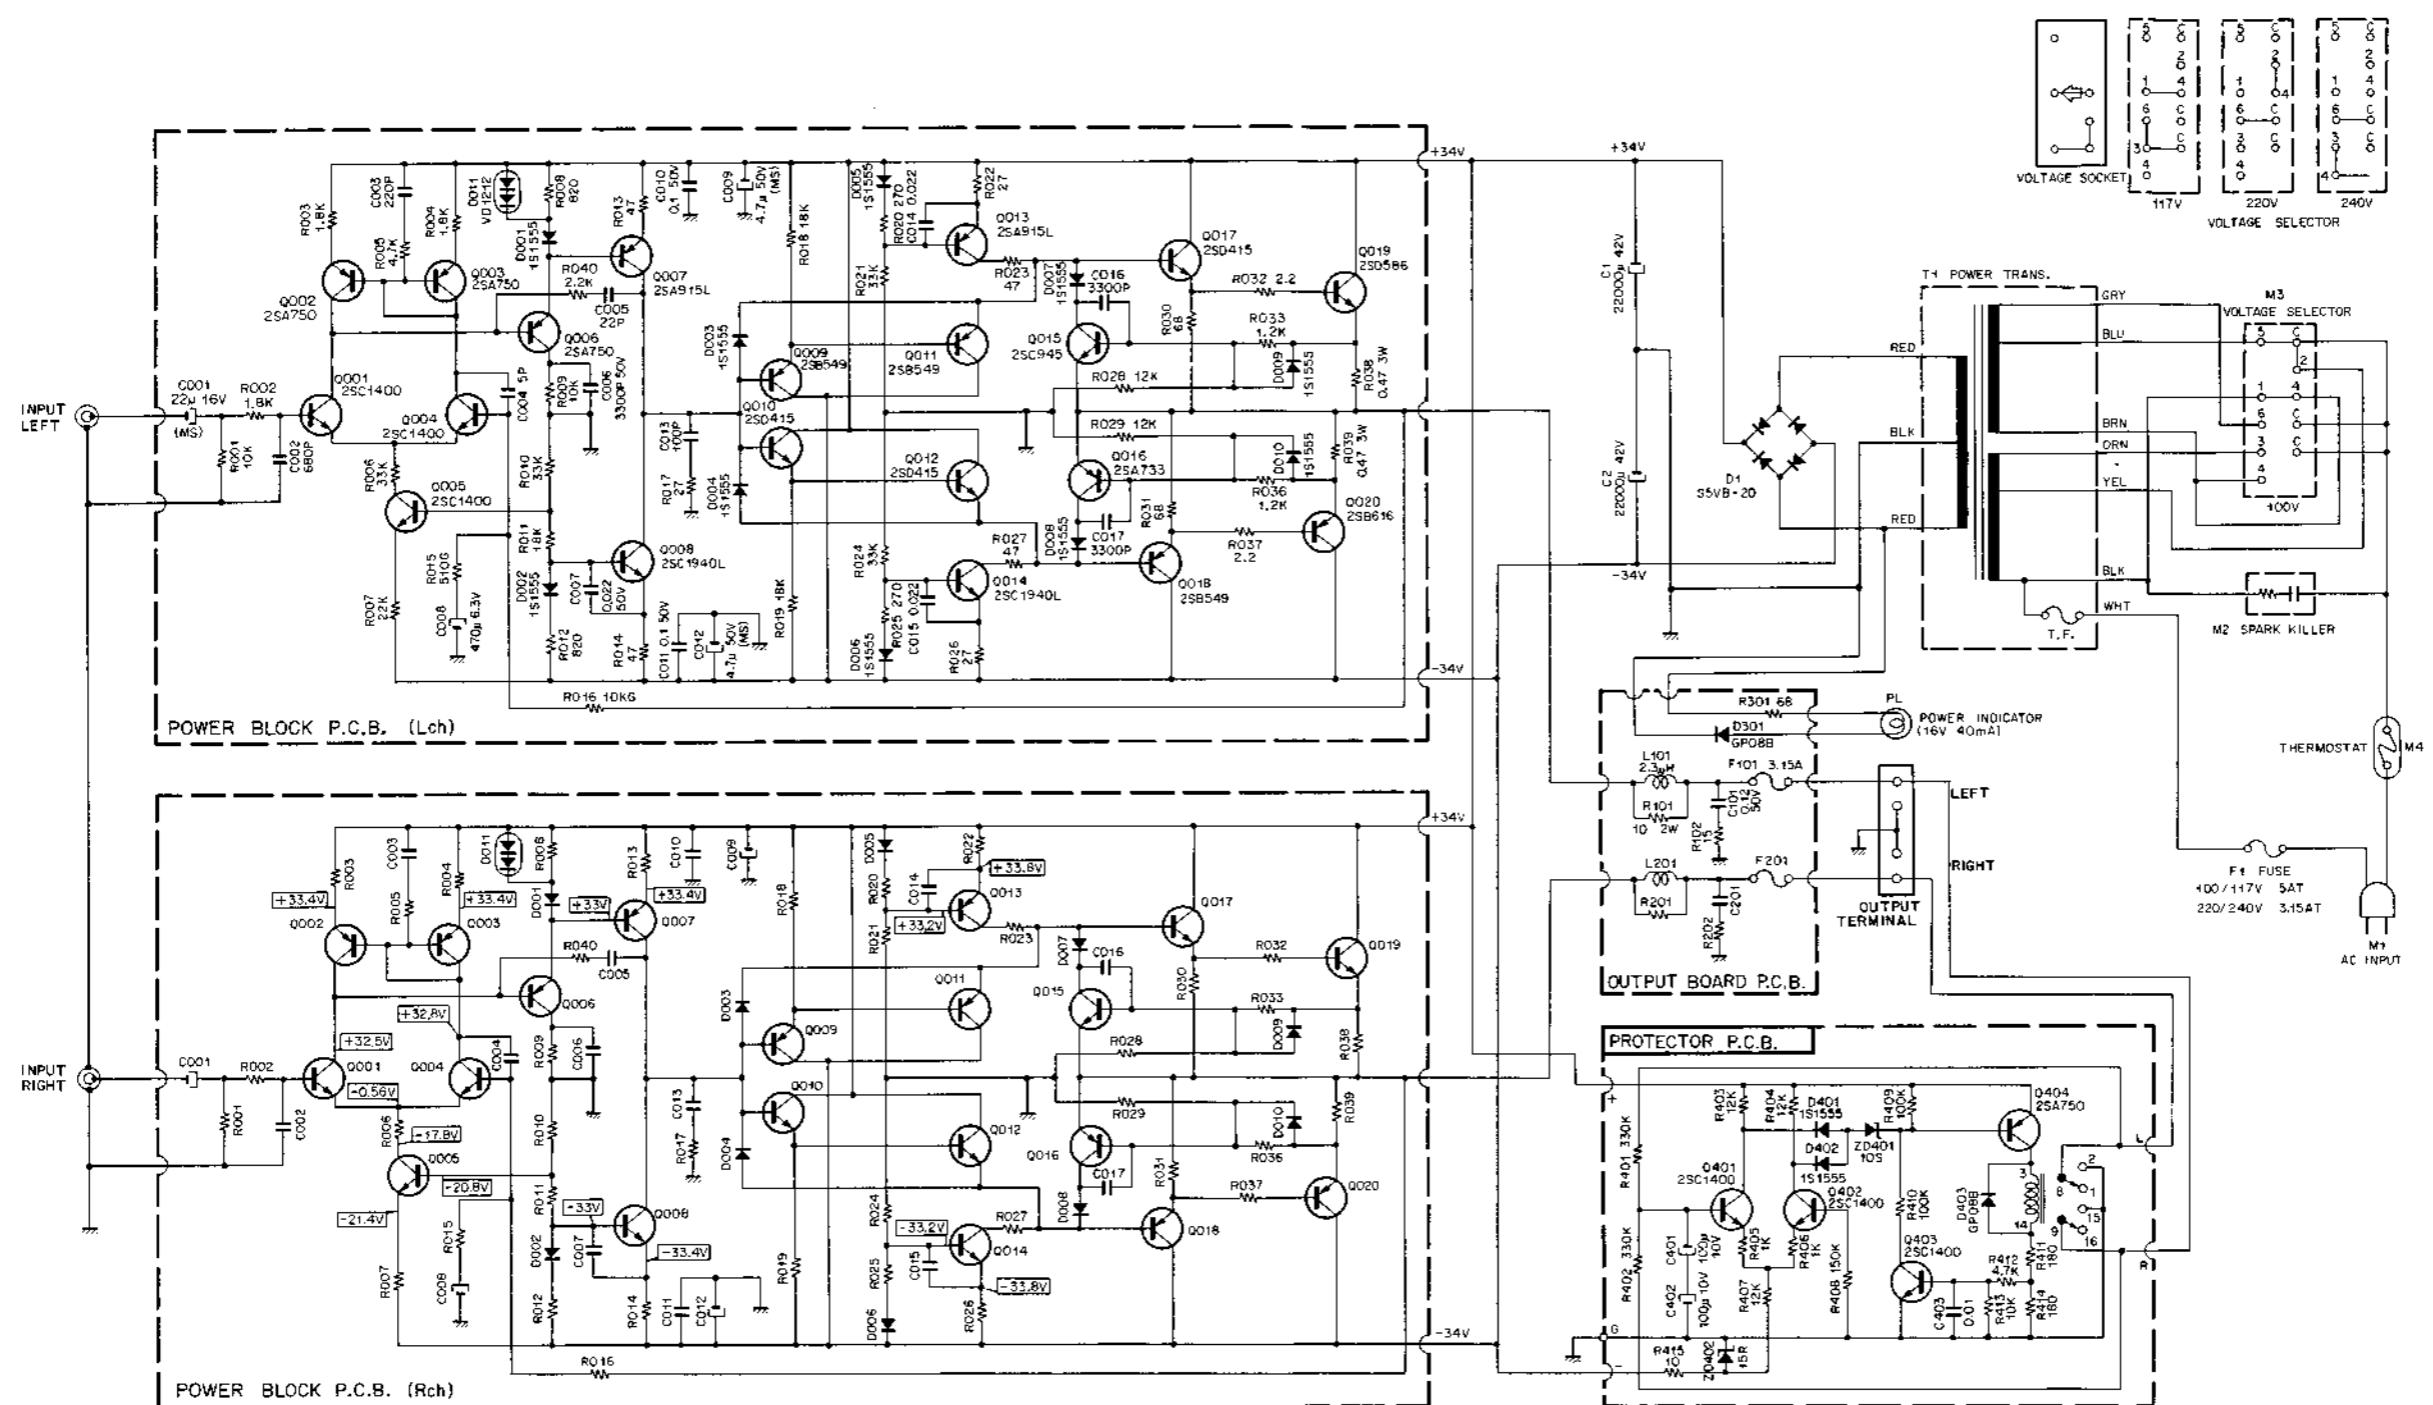


Fig. 3

10. SCHEMATIC DIAGRAM

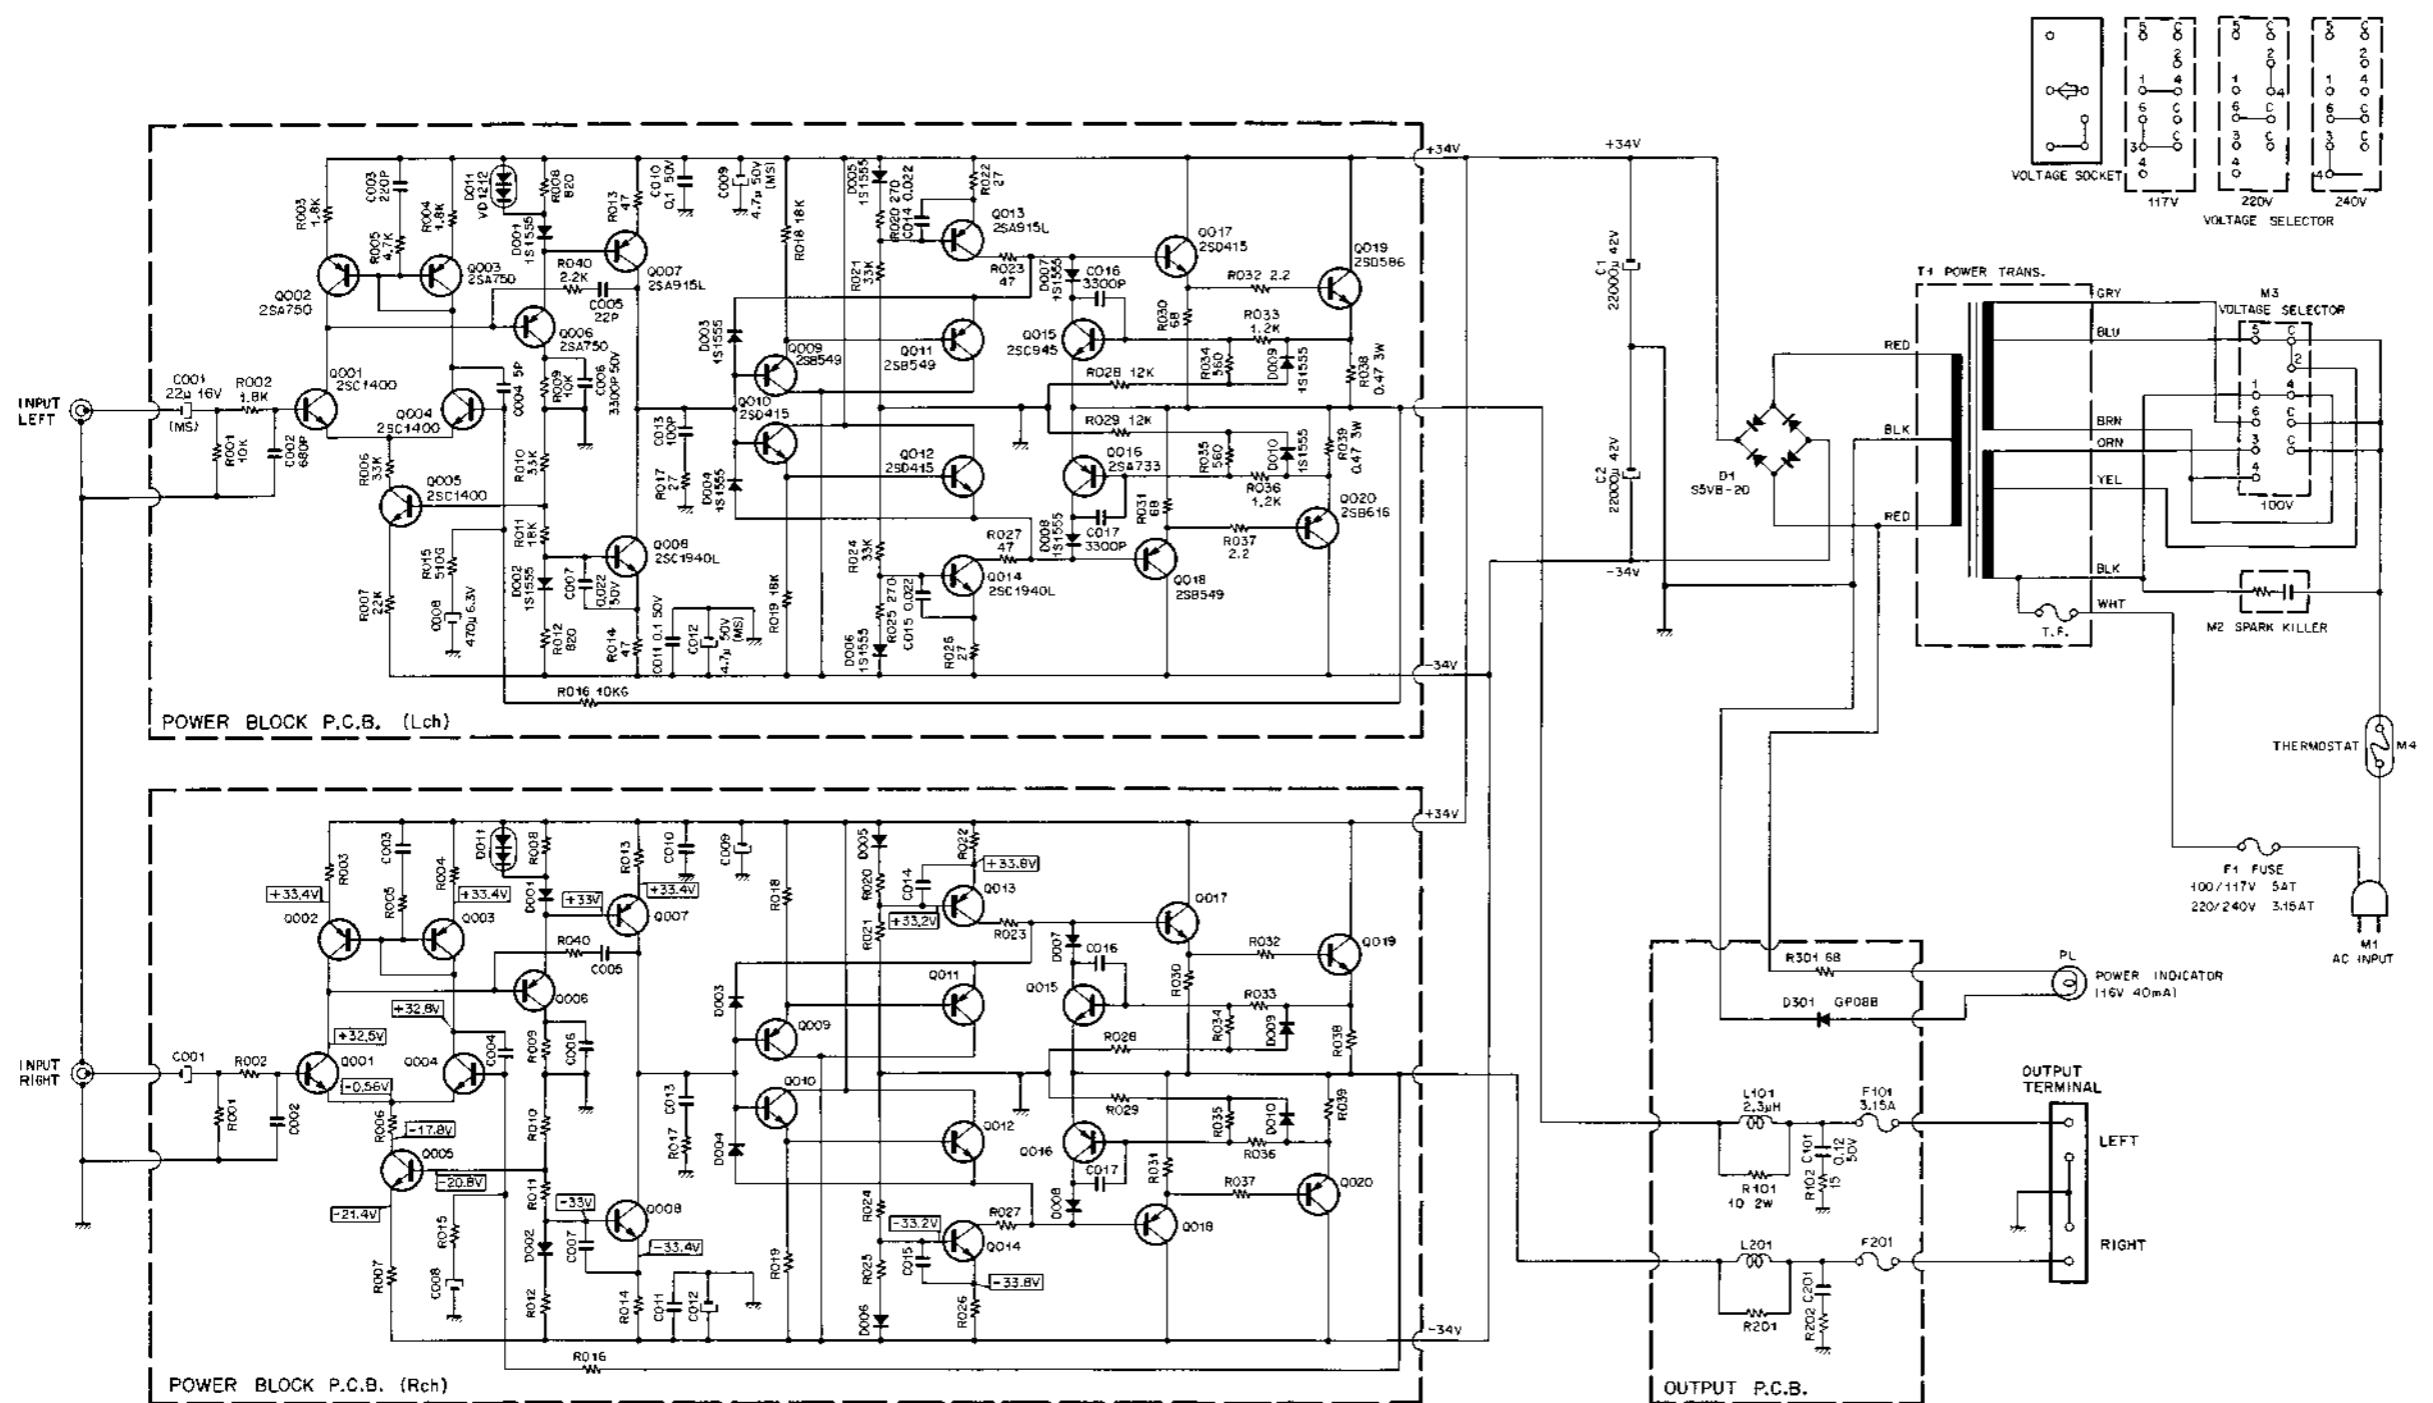

Note: [] shows the reference circuit voltage at approx. 50-watt output.

11. BRIDGING ADAPTOR BA-100 (OPTION)

Mechanism Ass'y, Circuit Diagram, Mounting Diagram and Parts List

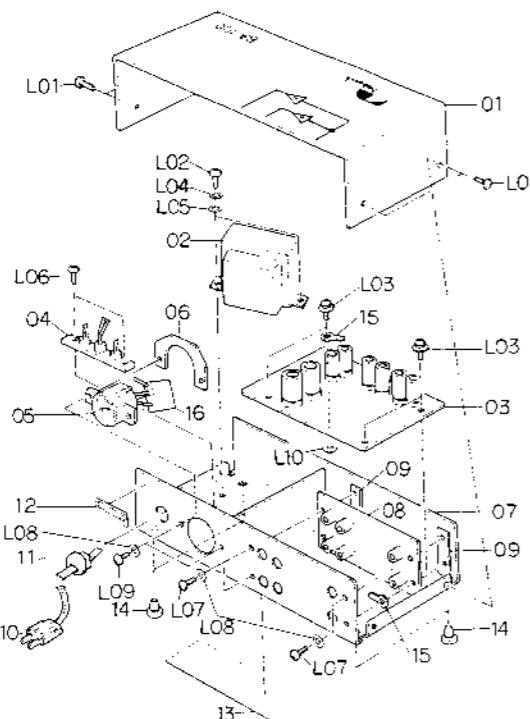


Fig. 11.1

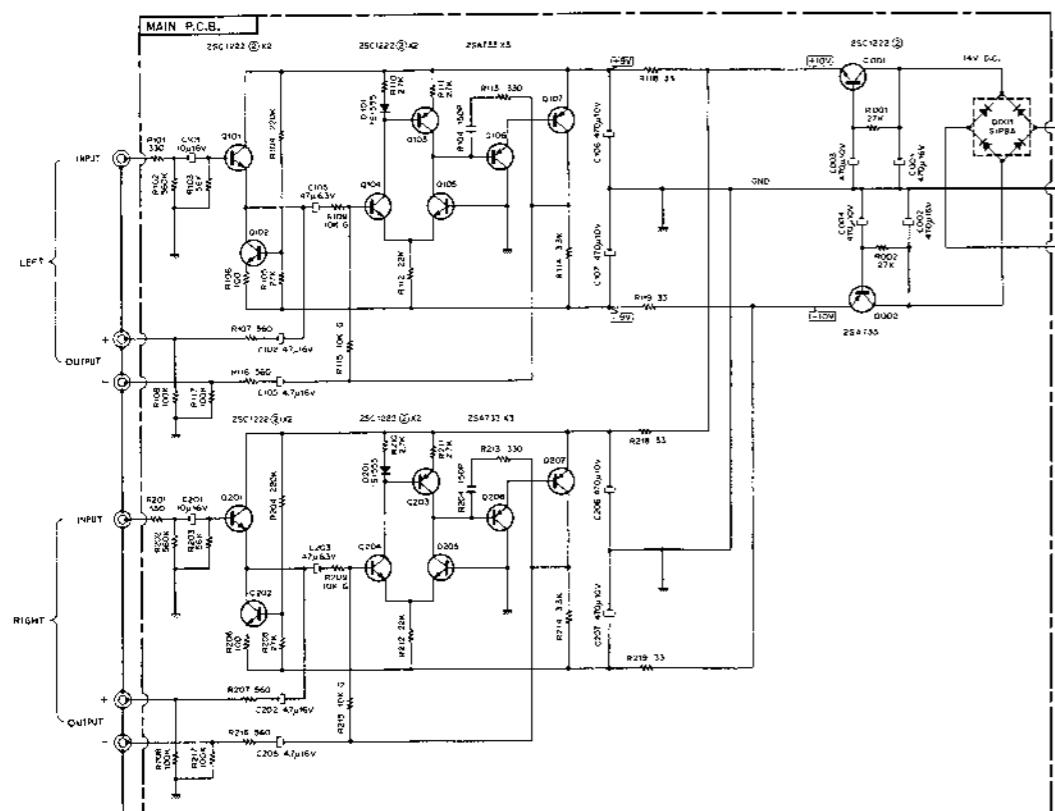


Fig. 11.2

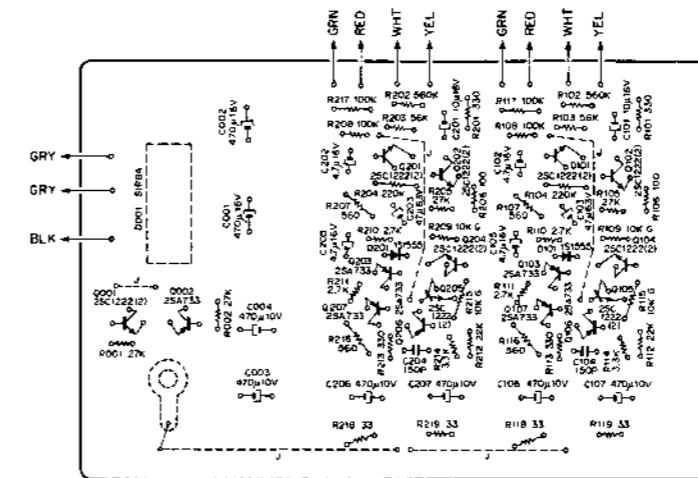


Fig. 11.

Schematic Ref. No.	Part No.	Description	Q'ty	Schematic Ref. No.	Part No.	Description	
		BA-100 Mechanism				Main P.C.B. Ass'y	
01	0H03477A	Upper Cover	1		0B07698A	Main P.C.B.	
02	0B06521U	Power Transformer	1	Q001	0B06062A	Transistor	2SC1222 (2)
03	BA03816A	Main P.C.B. Ass'y	1	101, 201			
04	0B08024U	3P Terminal	1	102, 202			
05	0B07152U	Voltage Selector	1	104, 204			
06	OJ03585A	ESE Nut	1	105, 205			
07	HA03687A	Main Chassis Sub Ass'y	1	Q002	0B06013A	Transistor	2SA733
08	0B08290A	6P Pin Jack	1	103, 203			
09	OJ03277A	Bolt Receptacle Plate	2	106, 206			
10	0B08219A	Power Cord	1	107, 207			
11	0B08037U	Cord Bushing C	1	D001	0B06088A	Silicon Diode	S1RBA
12	0M03551A	Pass Label B	1	D101, 201	0B01909A	Silicon Diode	1S1555
13	0M03544A	Caution Label B	1	R001, 002	0B05538A	Carbon Resistor	27K ERD-14 VJ
14	0H03437A	Rubber Foot	4	105, 205			
15	0E00037A	Earth Lug B-5	2	R101, 201	0B01789A	Carbon Resistor	330 ERD-14 VJ
16	0B08240U	Spark Killer	1	113, 213			
L01	0E00713A	Screw M3x6 Philips Truss Head (Bronze)	4	R102, 202	0B05665A	Carbon Resistor	560K ERD-14 VJ
L02	0E00540A	Screw M3x5 Philips Binding Head (Bronze)	2	R103, 203	0B05563A	Carbon Resistor	56K ERD-14 VJ
L03	0E00606A	Screw M3x6 Philips Pan Head (3A)	4	R104, 204	0B05596A	Carbon Resistor	220K ERD-14 VJ
L04	0E00581A	Washer 3mm Spring	2	R106, 206	0B05558A	Carbon Resistor	100 ERD-14 VJ
L05	0E00637A	Washer 3mm	2	R107, 207	0B05678A	Carbon Resistor	560 ERD-14 VJ
L06	0E00594A	Screw M3x8 Philips Binding Head (Bronze)	2	116, 216			
L07	0E00594A	Screw M3x8 Philips Binding Head	4	R108, 208	0B01920A	Carbon Resistor	100K ERD-14 VJ
L08	0E00159A	Washer 3mm (Plastics)	2	117, 217			
L09	0E00593A	Screw M3x6 Philips Binding Head (Bronze)	2	R109, 209	0B05895A	Metal Film Resistor	
L10	0E00254A	Washer 3.1mm (Mylar)	1	115, 215			10K ERO-25 VKG
				111, 211	0B01782A	Carbon Resistor	2.7K ERD-14 VJ
				119, 219	0B01392A	Electrolytic Capacitor	470 μ 16V
				C001, 002	0B05884A	Electrolytic Capacitor	470 μ 10V
				106, 206			
				107, 207			
				C101, 201	0B01412A	Electrolytic Capacitor	10 μ 16V
				C102, 202	0B01389A	Electrolytic Capacitor	4.7 μ 16V
				105, 205			
				C103, 203	0B01404A	Electrolytic Capacitor	47 μ 6.3V
				C104, 204	0B05599A	Ceramic Capacitor	150P 50V

12. SPECIFICATIONS

Power Source	100/117/220/240V AC, 50/60 Hz
Power Consumption	30VA at idling
Power Output	400VA with both channels driven to clipping into 8 ohm loads 60 Watts per channel minimum continuous sine wave ("RMS") at 4 ohms 5–20,000 Hz, with less than 0.05% THD 50 Watts per channel minimum continuous sine wave ("RMS") at 8 ohms 5–20,000 Hz, with less than 0.02% THD 25 Watts per channel minimum continuous sine wave ("RMS") at 16 ohms 5–20,000 Hz, with less than 0.02% THD
IHF Power Bandwidth (both channels driven)	5–100,000 Hz for less than 0.1% THD 5–25,000 Hz for less than 0.01% THD 5–10,000 Hz for less than 0.005% THD
Damping Factor	Greater than 100 (1 kHz, 8 ohms)
Total Harmonic Distortion	Less than 0.002% @ 1 kHz or below Less than 0.008% @ 10 kHz or below
Intermodulation Distortion	Less than 0.002% (60 Hz: 7 kHz, 4:1, 8 ohm load, 50 W output)
Frequency Response	5–50,000 Hz +0, -1 dB
Input Sensitivity	1V
Input Impedance	10 k ohms
Residual Noise Level	Less than 50 microvolts (IHF-A)
Signal-to-Noise Ratio	Better than 110 dB at rated output (IHF-A, input shorted)
Crosstalk	Better than -70 dB @ 1 kHz
Dimensions	16(W) x 3-5/32(H) x 8-7/8(D) inches 400(W) x 80(H) x 225(D) m/m
Weight	15.4 lbs. (approx.) 7 kg
Specifications for Nakamichi 420 power amplifier with BA-100 bridging adaptor and outputs bridged for monaural operation.	
Power Output	120 Watts minimum continuous sine wave "RMS" at 8 ohms, 5 – 20,000 Hz with less than 0.05% THD
Power Bandwidth	5 – 100,000 Hz (IHF, for under 0.05% THD)
Damping Factor	greater than 50 (at 1 kHz, 8 ohms)
Total Harmonic Distortion	less than 0.004% up to 1 kHz less than 0.025% up to 10 kHz
Intermodulation Distortion	0.003% (60 Hz: 7 kHz, 4:1)
Frequency Response	5–50,000 Hz (+0, -2 dB)
Residual Noise	100µV (IHF-A)
Signal-to-Noise Ratio	better than 110 dB (IHF-A, inputs shorted)

• Specifications and appearance design are subject to change for further improvement without notice.

Service Information



Model Nakamichi 420 (Power Amplifier)

Serial No. from 4504581

Subject Addition of Protector Circuit

No. OOD-M-0043 (1/5)

Date 1 September, 1977

I. General:

A. Purpose:

A protector circuit has been added to prevent speakers from breakage, as the breakage of transistors in 420 would induce possible breakage of speakers.

Note: When the protector circuit is activated (speaker terminals shorted with relay contacts), the power supply for 420 is required to be once switched off so as to release the protecting function. The power should again be supplied for at least 5 minutes after switching off.

B. Modification:

Current power block circuit has partly been modified in parallel with an addition of the protector circuit.

Refer to Fig. 1, assembled Protector P.C.B. Ass'y.

Modified Parts

Part No. BA03811A Power Block P.C.B. Ass'y resistors R034 and R035 (560Ω) have been shorted with a jumper wire (both channels). Rear Panel Ass'y Part No. has been changed from JA03839A to JA03839B (including Protector P.C.B. Ass'y).

Additional Parts

BA03865A Protector P.C.B. Ass'y 1 pce.

OJ03688A E.P. Stud B 2 pcs.

C. Principle of Operation:

The protector circuit aims at protecting the speaker with a shortcut from the speaker terminals to GND by operating the relay in Protector P.C.B. Ass'y when D.C. voltage is impressed between speaker terminals against any possible accident.

The time length required for protector to operate are specified as below according to D.C. voltages (either plus or minus) impressed between the speaker terminals:

<u>D.C. Voltage between Speaker Terminals</u>	<u>Time required till Protector operates</u>
34V DC	approx. 0.5 sec ± 30%
20V DC	approx. 1 sec ± 30%
15V DC	approx. 2 sec ± 30%
10V DC	approx. 2.5 sec ± 30%
5V DC	approx. 4 ~ 10 sec

Once the protector circuit is activated, the protecting state is retained until the power supply to 420 is disconnected to release it. The power should be supplied after power capacitors are fully discharged (for approximately 5 minutes or more).

Note: The protector circuit in 420 may occasionally be activated if a high transient D.C. voltage is delivered from the preamplifier connected with 420 at the time when the power supply for the preamplifier is turned on.

The cause is not from any trouble in 420.

For its countermeasure, the power for 420 is recommended to be supplied last of all.

II. Parts List:

Part No. BA03865A Protector P.C.B. Ass'y 1 pce.
OJ03688A E.P. Stud B 2 pcs.

<u>Schematic Ref. No.</u>	<u>Part No.</u>	<u>Description</u>
	BA03865A	Protector P.C.B. Ass'y
	OB07727A	Protector P.C.B.
Q401,402	OB06078A	Transistor 2SC1400 403
Q404	OB06074A	Transistor 2SA750
D401,402	OB01909A	Silicon Diode 1S1555
D403	OB06109A	Silicon Diode GP08B
ZD401	OB06073A	Zener Diode 10S
ZD402	OB06002A	Zener Diode 15R
R401,402	OB01921A	Carbon Resistor 330K ERD-25V J
R403,404	OB05650A	Carbon Resistor 12K ERD-25V J 407
R405,406	OB01781A	Carbon Resistor 1K ERD-25V J
R408	OB05593A	Carbon Resistor 150K ERD-25V J
R409,410	OB01920A	Carbon Resistor 100K ERD-25V J
R411,414	OB05607A	Carbon Resistor 180 ERD-25V J
R412	OB01795A	Carbon Resistor 4.7K ERD-25V J
R413,415	OB01833A	Carbon Resistor 10K ERD-25V J
C401,402	OB05885A	Electrolytic Capacitor 100μF 10V
C403	OB01290A	Ceramic Capacitor 0.01μF 50V
RY401	OB07171A	Relay HB-2T

III. Mounting Diagram and Schematic Diagram:

Refer to Figs. 2 and 3.

IV . Modification Procedures for the Current Models:

Following shows the way how to assemble the Protector P.C.B. Ass'y in the current Models.

A. Parts to be required:

Part No. BA03865A Protector P.C.B. Ass'y 1 pce.

OJ03688A E.P. Stud B 2 pcs.

B. Modification Procedures:

Refer to Fig. 1.

1. Disassemble the Top Cover by removing five screws.
2. Remove two screws from the Output P.C.B. Ass'y and replace with E.P. Studs.
3. Assemble the Protector P.C.B. Ass'y.
4. Solder the signal wires (WHT,WHT) of the Protector P.C.B. Ass'y to the speaker terminal (output terminal) plus side of both channels.
5. Solder the RED wire of the Protector P.C.B. Ass'y to the plus terminal (RED wires are already soldered) of the capacitor C1 22,000 μ F 42V.
6. Solder the BLU wire of the Protector P.C.B. Ass'y to the minus terminal (BLU wires are already soldered) of the capacitor C2 22,000 μ F 42V.
7. Bind these wires at an appropriate point.
8. Short the resistors R034 and R035 (560 Ω) of both channels on the Power Block P.C.B. Ass'y with a jumper wire from the dip side of the printed circuit board.
9. Assemble the Top Cover.

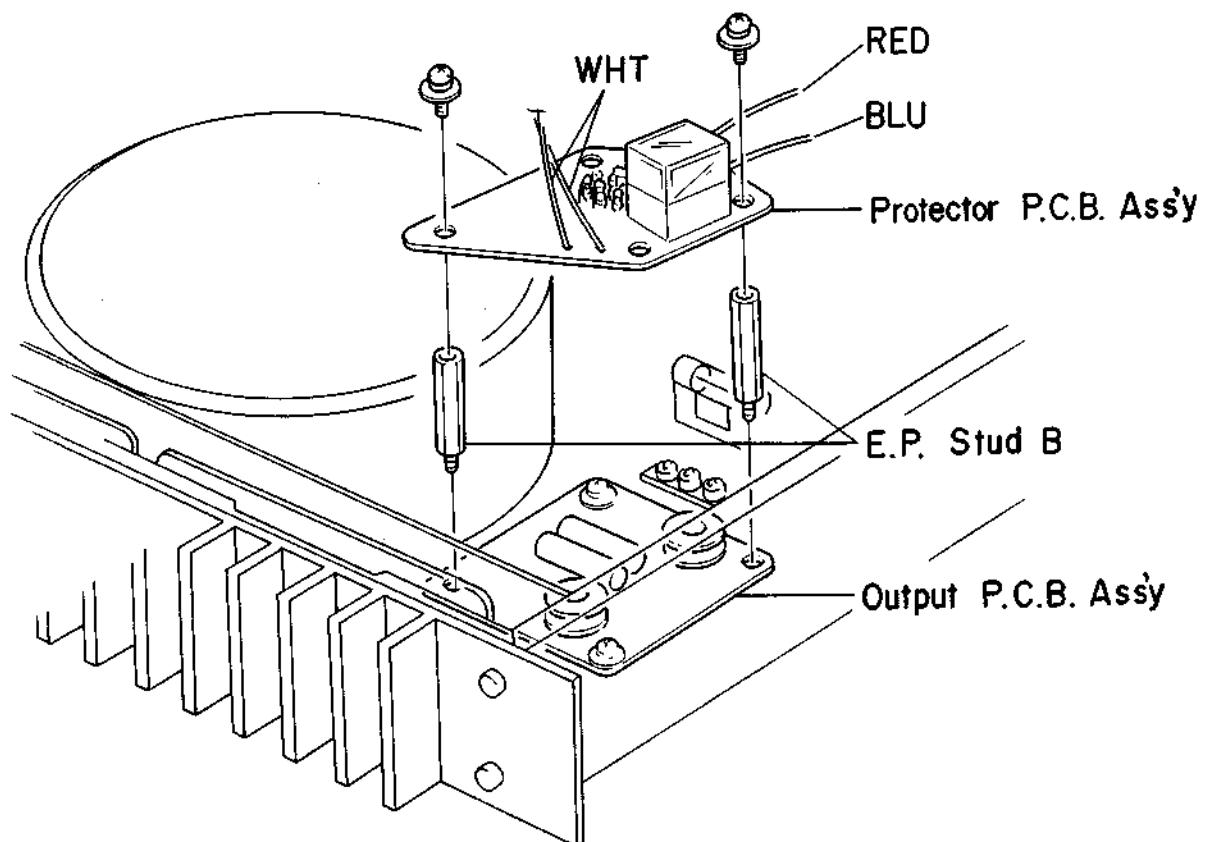


Fig. 1

Protector P.C.B. Ass'y Mounting Diagram

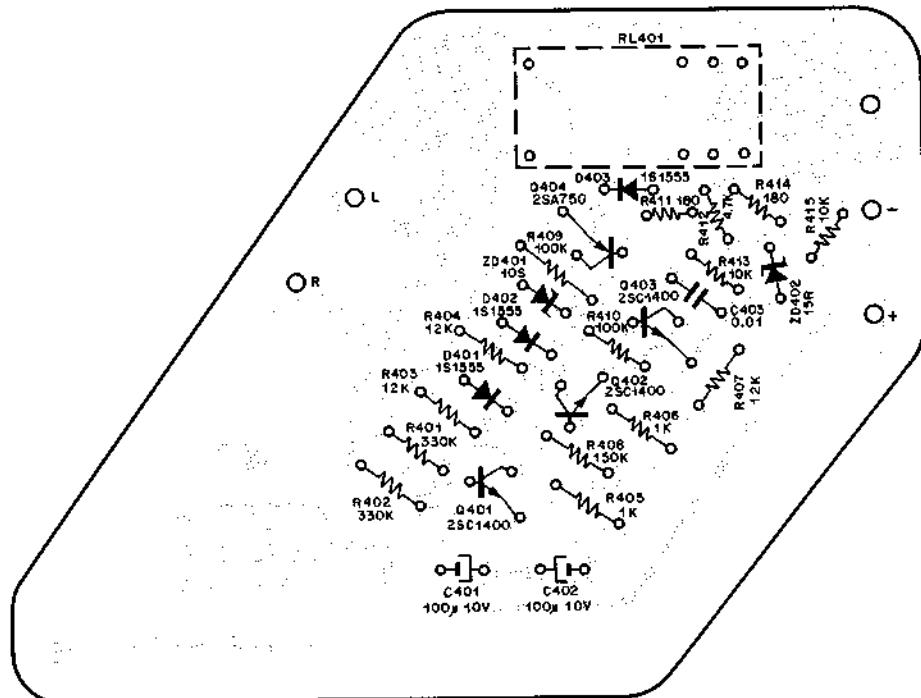


Fig. 2