



Service Manual

Nakamichi 670ZX

Discrete Head Cassette Deck



CONTENTS

1. General	3
2. Removal Procedures	5
2. 1. Side Panel Ass'y	5
2. 2. Top Cover Ass'y	5
2. 3. Bottom Cover Ass'y	5
2. 4. Cassette Case Cover Ass'y and Azimuth Alignment Cover Ass'y	5
2. 5. Front Panel Ass'y	5
2. 6. Headphone Jack Ass'y	5
2. 7. Mechanism Ass'y	5
2. 8. Level Meter	6
2. 9. Auto Azimuth P.C.B. Ass'y	6
2. 10. Logic P.C.B. Ass'y	6
2. 11. Switch P.C.B. Ass'y	6
2. 12. Main P.C.B. Ass'y	6
2. 13. Volume P.C.B. Ass'y	6
2. 14. Record Cal. P.C.B. Ass'y	6
2. 15. Power Switch	6
2. 16. Lamp P.C.B. B Ass'y and Lamp P.C.B. C Ass'y	6
2. 17. Control Switch P.C.B. Ass'y	7
2. 18. RAMM P.C.B. Ass'y	7
2. 19. Rear Panel Ass'y	7
2. 20. Power Transformer and Fuse P.C.B. Ass'y	7
2. 21. Cassette Case Ass'y and Cover Plate Ass'y	7
2. 22. Tape Counter Ass'y, Memory Switch and Pitch Control Volume	7
2. 23. Capstan Motor Ass'y and Flywheel Ass'y	7
2. 24. Sub Mechanism Chassis Ass'y	7
2. 25. Control Motor Ass'y and Reel Motor Ass'y	7
2. 26. Cam Control Volume	8
2. 27. Azimuth Motor Ass'y	8
2. 28. Reel Hub Ass'y and Idler Ass'y	8
2. 29. Cam Drive Gear and Control Cam	8
2. 30. Head Mount Base Ass'y	9
2. 31. Pressure Roller Ass'y and Erase Head	9
2. 32. Playback Head Ass'y and Record Head Ass'y	9
3. Measurement Instruments	10
4. Mechanical Adjustments	11
4. 1. Mechanism Control Cam Adjustment	11
4. 2. Tape Speed Adjustment	12
4. 3. Record Head and Playback Head Tilt Adjustment	13
4. 4. Head Base Stroke Adjustment in Play and Cue Modes	14
4. 5. Tape Guides Adjustment and Erase Head Stroke Adjustment	15
4. 6. Erase Head Height and Tilt Adjustment	15
4. 7. Back Tension Adjustment	16
4. 8. Playback Head and Record Head Height Adjustment and Azimuth Alignment	18
4. 9. Record Head Stroke Adjustment	19
4. 10. Tape Travelling Adjustment	20
4. 11. Flywheel Holder Adjustment	20
4. 12. Lubrication	20
5. Parts Location for Electrical Adjustment	21
6. Electrical Adjustments and Measurements	22
6. 1. Adjustment and Measurement Instructions	22
6. 2. Frequency Response Adjustment	27
6. 3. Dolby NR Circuit Check	28
7. Mounting Diagrams	28
7. 1. Control Switch P.C.B. Ass'y	28
7. 2. Lamp P.C.B. B Ass'y	28

7. 3.	Lamp P.C.B. C Ass'y	28
7. 4.	RAMM P.C.B. Ass'y	28
7. 5.	Fuse P.C.B. Ass'y	29
7. 6.	Auto Azimuth P.C.B. Ass'y	30
7. 7.	Pin Jack P.C.B. Ass'y	30
7. 8.	Auto Shut-off P.C.B. Ass'y	30
7. 9.	Switch P.C.B. Ass'y	31
7. 10.	Record Cal. P.C.B. Ass'y	31
7. 11.	Volume P.C.B. Ass'y	31
7. 12.	Main P.C.B. Ass'y	33
7. 13.	Logic P.C.B. Ass'y	35
8.	Mechanism Ass'y and Parts List	37
8. 1.	Synthesis	37
8. 2.	Front Panel Ass'y (A01)	40
8. 3.	Mechanism Ass'y 670ZX (A02)	41
8. 4.	Chassis Ass'y (A03)	44
8. 5.	Front Panel Escutcheon Ass'y (B01)	44
8. 6.	Control Button Ass'y (B02)	44
8. 7.	Flywheel Holder Ass'y (C01)	44
8. 8.	Sub Mechanism Chassis Ass'y (C02)	45
8. 9.	Main Mechanism Chassis Ass'y (C03)	48
8. 10.	Record Calibration Ass'y (D01)	53
8. 11.	Volume Holder Ass'y (D02)	53
8. 12.	Headphone Jack Ass'y (D03)	53
8. 13.	Reflector Ass'y (D04)	53
8. 14.	Counter Lamp Ass'y (D05)	53
8. 15.	Power Switch Holder Ass'y (D06)	53
8. 16.	Rear Panel Ass'y (D07)	54
8. 17.	Reel Motor Ass'y (E01)	56
8. 18.	Control Motor Ass'y (E02)	56
8. 19.	Azimuth Alignment Motor Ass'y (E03)	56
8. 20.	Head Mount Base Ass'y (F01)	56
8. 21.	Supply Pressure Roller Ass'y (F02)	56
8. 22.	Take-up Pressure Roller Ass'y (F03)	56
8. 23.	Head Base Ass'y D (F04)	56
8. 24.	Cassette Case Holder L Ass'y (F05)	56
8. 25.	Cassette Case Holder R Ass'y (F06)	56
8. 26.	Auto Shut-off Ass'y (F07)	57
8. 27.	Pneumatic Damper Ass'y (F08)	57
8. 28.	Pitch Control Holder Ass'y (F09)	57
8. 29.	Azimuth Motor Ass'y (G01)	57
8. 30.	P-8L Playback Head Ass'y (H01)	57
8. 31.	R-8L Record Head Ass'y (H02)	57
9.	Overall Timing Chart	58
10.	Eq. Amp. Frequency Response	58
10. 1.	Playback Frequency Response	58
10. 2.	Record Current Frequency Response	58
11.	Block Diagrams	59
11. 1.	Amplifier	59
11. 2.	Mechanism Control	60
12.	Wiring Diagram	61
13.	Schematic Diagrams	63
13. 1.	Amplifier	63
13. 2.	Mechanism Control	64
14.	Specifications	65

1.1. Control Functions

Nakamichi 670ZX control functions are shown below:

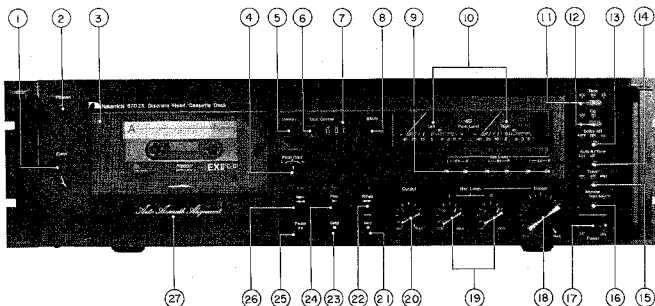


Fig. 1.1 Front View

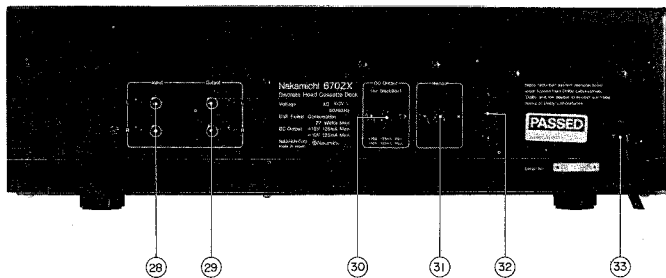


Fig. 1.2 Rear View

1. Eject Lever
2. Headphone Jack
3. Cassette Holder (with see-thru cover)
4. Pitch Control
5. Tape Start Memory Switch
6. Counter Reset Button
7. Tape Counter
8. RMM Display
9. Record Calibration Controls
10. Peak Level Meters
11. Tape Switch (EX/SX/ZX)
12. Eq. Switch (120 μ s/70 μ s)
13. Dolby NR/MPX Filter Switch
14. Auto. A/Tone Switch
15. Timer Switch
16. Monitor Switch
17. Power Switch
18. Master Input Level Control
19. Input Level Controls
20. Output Level Control
21. Record Button
22. Fast-Forward Button
23. Stop Button
24. Play Button
25. Pause Button
26. Rewind Button
27. Auto Azimuth Alignment Cover
28. Input Jacks
29. Output Jacks
30. DC Output Jack
31. Remote Control Socket
32. Voltage Selector
33. Power Cord

1.2. Voltage Selector

Voltage selector is installed on the rear panel for other versions of the Nakamichi 670ZX. This voltage selector can select either 120 V or 220 – 240 V at customer's disposal.

2. REMOVAL PROCEDURES

2.1. Side Panel Ass'y

Refer to Fig. 2.1.

Remove F01 and F02, then disassemble F03 (Side Panel Ass'y).

2.2. Top Cover Ass'y

Refer to Fig. 2.1.

(1) Remove Side Panel Ass'y referring to item 2.1.

(2) Remove F04 and F05, then disassemble F06 (Top Cover Ass'y).

2.3. Bottom Cover Ass'y

Refer to Fig. 2.1.

Remove F07, then disassemble F08 (Bottom Cover Ass'y).

2.4. Cassette Case Cover Ass'y and Azimuth Alignment Cover Ass'y

Refer to Fig. 2.1.

(1) Turn fully counterclockwise two screws which are mounted on the Cassette Case Cover, then disassemble F09 (Cassette Case Cover Ass'y).

(2) Turn fully counterclockwise two screws which are mounted on the Front Panel Escutcheon Ass'y, then disassemble F10 (Azimuth Alignment Cover Ass'y).

2.5. Front Panel Ass'y

Refer to Fig. 2.2.

(1) Refer to Fig. 2.1. Remove Top Cover Ass'y and Bottom Cover Ass'y referring to items 2.2 and 2.3.

(2) Pull out F01 (Volume Knob A), F02 (Volume Knob B) and F03 (Pitch Control Knob).

(3) Remove F04, F05 and F06, then disassemble F07 (Front Panel Ass'y including 3 connectors).

2.6. Headphone Jack Ass'y

Refer to Fig. 2.2.

(1) Remove Front Panel Ass'y referring to item 2.5.

(2) Remove F08, then disassemble F09 (Headphone Jack Ass'y).

2.7. Mechanism Ass'y

Refer to Fig. 2.2.

(1) Remove Front Panel Ass'y referring to item 2.5.

(2) Remove F10, then disassemble F11 (Mechanism Ass'y including 7 connectors).

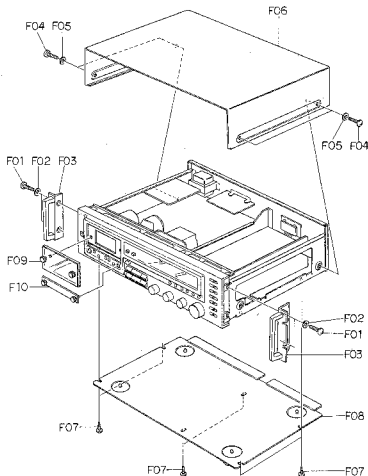


Fig. 2.1

2.8. Level Meter

Refer to Fig. 2.3.

- (1) Refer to Fig. 2.2. Remove Front Panel Ass'y referring to item 2.5.
- (2) Remove F01, then disassemble F02 (Level Meter Holder) and F03 (Level Meter).

2.9. Auto Azimuth P.C.B. Ass'y

Refer to Fig. 2.3.

- (1) Refer to Fig. 2.2. Remove Front Panel Ass'y referring to item 2.5.
- (2) Remove one connector and the wires connected by wrapping.
- (3) Remove F04, then disassemble F05 (Auto Azimuth P.C.B. Ass'y).

2.10. Logic P.C.B. Ass'y

Refer to Fig. 2.3.

- (1) Refer to Fig. 2.2. Remove Front Panel Ass'y referring to item 2.5.
- (2) Remove 7 connectors and the wires connected by wrapping from F07 (Logic P.C.B. Ass'y).
- (3) Remove F06, then disassemble F07 (Logic P.C.B. Ass'y).

2.11. Switch P.C.B. Ass'y

Refer to Fig. 2.3.

- (1) Refer to Fig. 2.2. Remove Front Panel Ass'y referring to item 2.5.
- (2) Pull out F08 (Function Switch Knob Ass'y).
- (3) Remove the Flat Cables, connector and wires connected by wrapping from F11 (Switch P.C.B. Ass'y).
- (4) Remove F09 and F10, then disassemble F11 (Switch P.C.B. Ass'y).

2.12. Main P.C.B. Ass'y

Refer to Fig. 2.3.

- (1) Remove Level Meter and Switch P.C.B. Ass'y referring to items 2.8 and 2.11.
- (2) Remove the Flat Cables, 3 connectors and wires connected by wrapping from F13 (Main P.C.B. Ass'y).
- (3) Remove F12, then disassemble F13 (Main P.C.B. Ass'y).

2.13. Volume P.C.B. Ass'y

Refer to Fig. 2.3.

- (1) Remove Level Meter referring to item 2.8.
- (2) Remove F14 and the Flat Cable from F15 (Volume P.C.B. Ass'y), then disassemble F15 (Volume P.C.B. Ass'y).

2.14. Record Cal. P.C.B. Ass'y

Refer to Fig. 2.3.

- (1) Refer to Fig. 2.2. Remove Front Panel Ass'y referring to item 2.5.
- (2) Remove F16, then disassemble F17 (Calibration Case Ass'y).
- (3) Remove F18, then disassemble F19 (Record Cal. P.C.B. Ass'y).

2.15. Power Switch

Refer to Fig. 2.3.

- (1) Refer to Fig. 2.2. Remove Front Panel Ass'y referring to item 2.5.
- (2) Remove F20, then disassemble F21 (Power Switch Knob).
- (3) Remove F22, then disassemble F23 (Power Switch Holder Ass'y).
- (4) Remove F24, then disassemble F25 (Power Switch).

2.16. Lamp P.C.B. B Ass'y and Lamp P.C.B. C Ass'y

Refer to Fig. 2.3.

- (1) Refer to Fig. 2.2. Remove Front Panel Ass'y referring to item 2.5.
- (2) Remove F26, then disassemble F27 (Insulator) and F28 (Lamp P.C.B. B Ass'y).
- (3) Remove F29 (Lamp P.C.B. C Ass'y) by releasing the self-interlocking pin of the Reflector.

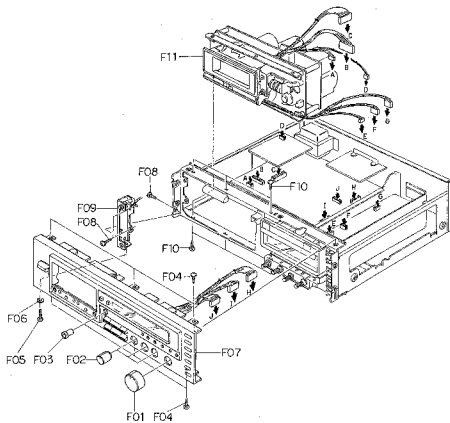


Fig. 2.2

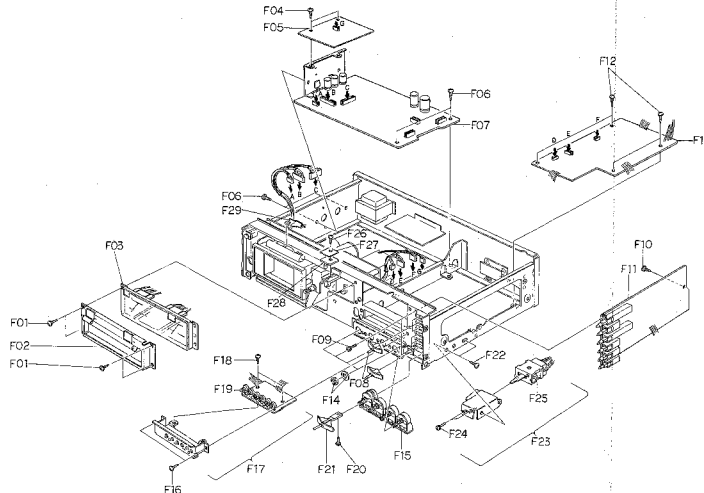


Fig. 2.3

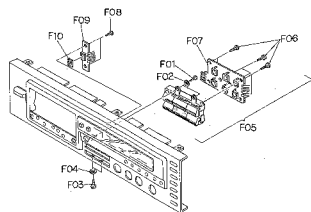


Fig. 2.4

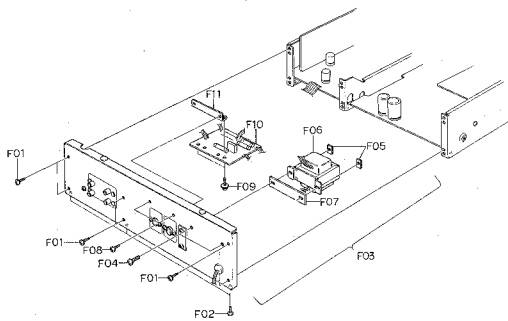


Fig. 2.5

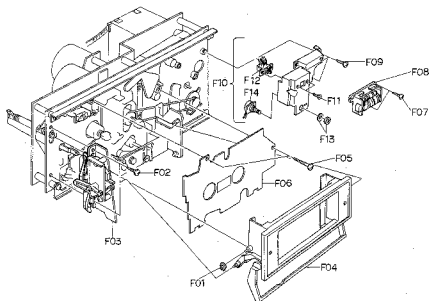


Fig. 2.6

2.17. Control Switch P.C.B. Ass'y

Refer to Fig. 2.4.

- (1) Refer to Fig. 2.2. Remove Front Panel Ass'y referring to item 2.5.
- (2) Remove F01, F02, F03 and F04, then disassemble F05 (Control Button Ass'y).
- (3) Remove F06, then disassemble F07 (Control Switch P.C.B. Ass'y).

2.18. RAMM P.C.B. Ass'y

Refer to Fig. 2.4.

- (1) Refer to Fig. 2.2. Remove Front Panel Ass'y referring to item 2.5.
- (2) Remove F08, then disassemble F09 (RAMM P.C.B. Ass'y) and F10 (LED Filter).

2.19. Rear Panel Ass'y

Refer to Fig. 2.5.

- (1) Refer to Fig. 2.1. Remove Top Cover Ass'y and Bottom Cover Ass'y referring to items 2.2 and 2.3.
- (2) Remove F01 and F02, then disassemble F03 (Rear Panel Ass'y).

2.20. Power Transformer and Fuse P.C.B. Ass'y

Refer to Fig. 2.5.

- (1) Refer to Fig. 2.1. Remove Top Cover Ass'y and Bottom Cover Ass'y referring to items 2.2 and 2.3.
- (2) Remove F04 and F05, then disassemble F06 (Power Transformer) and F07 (Transformer Plate).
- (3) Remove F08 and F09, then disassemble F10 (Fuse P.C.B. Ass'y).

2.21. Cassette Case Ass'y and Cover Plate Ass'y

Refer to Fig. 2.6.

- (1) Refer to Fig. 2.2. Remove Mechanism Ass'y referring to item 2.7.
- (2) Press the Eject Button to open the Cassette Case Ass'y.
- (3) Remove F01 and F02, then disassemble F03 (Cassette Case Holder L Ass'y) by releasing the self-interlocking pin of the Damper Lock Arm and F04 (Cassette Case Ass'y).
- (4) Remove F05, then disassemble F06 (Cover Plate Ass'y).

2.22. Tape Counter Ass'y, Memory Switch and Pitch Control Volume

Refer to Fig. 2.6.

- (1) Refer to Fig. 2.2. Remove Mechanism Ass'y referring to item 2.7.
- (2) Remove F07, then disassemble F08 (Tape Counter Ass'y).
- (3) Remove F09, then disassemble F10 (Pitch Control Holder Ass'y).
- (4) Remove F11, then disassemble F12 (Memory Switch).
- (5) Remove F13, then disassemble F14 (Pitch Control Volume).

2.23. Capstan Motor Ass'y and Flywheel Ass'y

Refer to Fig. 2.7.

- (1) Refer to Fig. 2.2. Remove Mechanism Ass'y referring to item 2.7.
- (2) Remove F01 and F02, then disassemble F03 (Flywheel Holder Ass'y) and F08 (Capstan Belt).
- (3) Remove F04, then disassemble F05 (Capstan Motor Ass'y).
- (4) Remove F06, then disassemble F07 (Speed Cal. P.C.B. Ass'y).
- (5) Remove F09 (Supply Flywheel Ass'y), then disassemble F10 (Take-up Flywheel Ass'y).
- (6) After removing both Flywheel Assemblies, disassemble F11 (Thrust Washer 3 mm), F12 (Thrust Washer 2.6 mm), F13 (Flange Thrust Cap) and F14 (Thrust Spring).

2.24. Sub Mechanism Chassis Ass'y

Refer to Fig. 2.8.

- (1) Remove Flywheel Holder Ass'y referring to item 2.23.
- (2) Remove F01 and F02, then disassemble F03 (Sub Mechanism Chassis Ass'y).

2.25. Control Motor Ass'y and Reel Motor Ass'y

Refer to Fig. 2.8.

- (1) Remove Sub Mechanism Chassis Ass'y referring to item 2.24.
- (2) Remove F04, then disassemble F05 (Control Motor Ass'y).
- (3) Remove F06, then disassemble F07 (Reel Motor Ass'y).

2.26. Cam Control Volume

Refer to Fig. 2.8.

- (1) Remove Sub Mechanism Chassis Ass'y referring to item 2.24.
- (2) Remove F08, then disassemble F09 (Volume Coupler).
- (3) Remove F10, then disassemble F11 (Cam Control Volume).

2.27. Azimuth Motor Ass'y

Refer to Fig. 2.8.

- (1) Remove Sub Mechanism Chassis Ass'y referring to item 2.24.
- (2) Remove F12, then disassemble F13 (Azimuth Alignment Motor Ass'y).
- (3) Remove F14, then disassemble F15 (Azimuth Motor Ass'y) and F16 (Drive Pulley Ass'y).

2.28. Reel Hub Ass'y and Idler Ass'y

Refer to Fig. 2.8.

- (1) Remove Sub Mechanism Chassis Ass'y referring to item 2.24.
- (2) Remove F17 (Reel Hub Head), then disassemble F18 (Reel Hub B Ass'y), F19 (Reel Hub Take-up Ass'y), F20 (Reel Hub Supply Ass'y), F21 (Back Tension Ass'y) and F22 (Back Tension Spring).
- (3) Remove F23, then disassemble F24 (Idler Ass'y).

2.29. Cam Drive Gear and Control Cam

Refer to Fig. 2.8.

- (1) Remove Sub Mechanism Chassis Ass'y referring to item 2.24.
- (2) Remove F25, then disassemble F26 (Cam Drive Gear).
- (3) Remove F27, then disassemble F28 (Counter-Load Arm Ass'y).
- (4) Remove F29, then disassemble F30 (Control Cam).

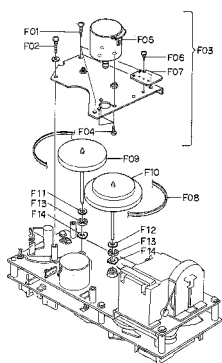


Fig. 2.7

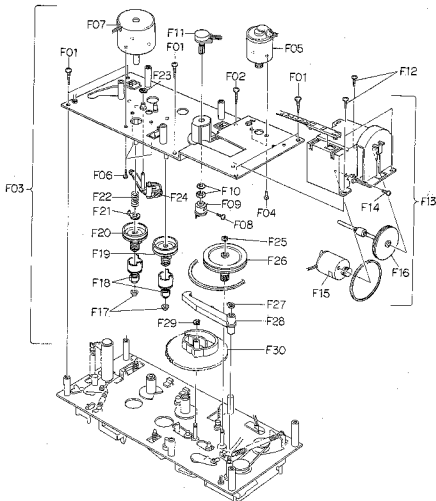


Fig. 2.8

2.30. Head Mount Base Ass'y

Refer to Fig. 2.9.

- (1) Refer to Fig. 2.6. Remove Cassette Case Ass'y referring to item 2.21.
- (2) Remove F01, then disassemble F02 (Head Mount Base Ass'y).

2.31. Pressure Roller Ass'y and Erase Head

Refer to Fig. 2.9.

- (1) Remove Head Mount Base Ass'y referring to item 2.30.
- (2) Remove F03, then disassemble F04 (Supply Pressure Roller Ass'y).
- (3) Remove F05, then disassemble F06 (Erase Head).
- (4) Remove F07, then disassemble F08 (Take-up Pressure Roller Ass'y).

2.32. Playback Head Ass'y and Record Head Ass'y

Refer to Fig. 2.9.

- (1) Remove Head Mount Base Ass'y referring to item 2.30.
- (2) Turn F09 by 90° by pushing it, then disassemble F10 (Playback Head Ass'y).
- (3) Turn F10 by 90° by pushing it, then disassemble F12 (Record Head Ass'y) and F13 (RH Azimuth Alignment Plate).

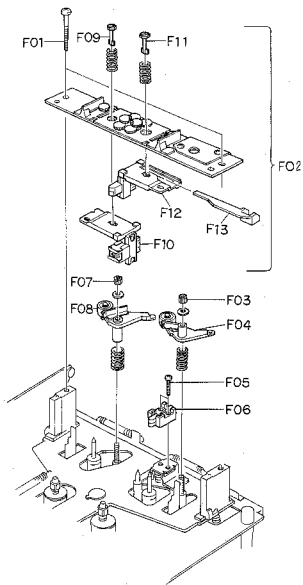


Fig. 2.9

3. MEASUREMENT INSTRUMENTS

- (1) Audio Generator (20 Hz – 200 kHz)
- (2) AC Millivolt Meter (with dB measures)
- (3) Oscilloscope (DC – 5 MHz)
- (4) Distortion Meter
- (5) Speed & Wow/Flutter Meter
- (6) Frequency Counter (DC – 1 MHz)
- (7) Ohm Meter
- (8) DC Volt Meter
- (9) AC Volt Meter
- (10) Torque Gauge (DA09013A)
- (11) 15 kHz Azimuth Tape (DA09004A)
- (12) 3 kHz Speed & Wow/Flutter Tape (DA09006A)
- (13) 1 kHz Track Alignment Tape (DA09007A)
- (14) 400 Hz Level Tape (DA09005A)
- (15) 20 kHz PB Frequency Response Tape (DA09001A)
- (16) 15 kHz PB Frequency Response Tape (DA09002A)
- (17) 10 kHz PB Frequency Response Tape (DA09003A)
- (18) Reference EXII Tape (DA09021A)
- (19) Reference SX Tape (DA09025A)
- (20) Reference ZX Tape (DA09037A)
- (21) Tilt Check Gauge M-9039 (DA09039A)
- (22) EH Tilt Check Gauge M-9040 (DA09040A)
- (23) EH Stroke Check Gauge M-9042 (DA09042A)
- (24) EH Stroke Check Gauge M-9051 (DA09051A)
- (25) Stroke Check Gauge M-9047 (DA09047A)
- (26) Record Head Mounting Gauge M-9048 (DA09048A)
- (27) Back Tension Gauge (DA09055A)
- (28) Tension Arm Adjustment Cassette (DA09056A)
- (29) Audio Analyzer T-100
(including Distortion, Wow/Flutter, Speed, Oscillator and dB meter)

Notes: 1. (10) – (29) are the products of Nakamichi Corporation.

2. EH Stroke Check Gauge M-9042 (DA09042A) should be used for the Models serial Nos. from A11501001 to A11503890, and EH Stroke Check Gauge M-9051 (DA09051A) is for the Models bearing serial Nos. A11503891 and greater.
3. Back Tension Gauge (DA09055A) and Tension Arm Adjustment Cassette (DA09056A) are used for the Models bearing serial Nos. A11505640 and greater.

4. MECHANICAL ADJUSTMENTS

4.1. Mechanism Control Cam Adjustment

Before adjustment, disassemble the Front Panel Ass'y, then remove the Cover Plate referring to items 2.5 and 2.21.

(1) Offset Adjustment of Control Motor Driver

(a) Refer to Figs. 4.1 and 4.2.

Adjust VR402 and VR403 on the Logic P.C.B. to locate approximately at the middle of the variable range. Then turn ON the Power Switch.

VR402 (for Cam position stop)

VR403 (for Cam position play)

(b) Press the Stop Switch to set the N-670ZX in stop mode.

Adjust VR402 (for stop) so that the "S" mark on the Cam corresponds to the pointer on the mechanism chassis.

(c) Press the Play Switch to set the N-670ZX in playback mode.

(Cam will rotate, and the position marked with "PY" comes to the pointer.) Adjust VR403 (for play) so that the "PY" mark on the Cam corresponds to the pointer.

(d) Repeat above (b) and (c) 2 - 3 times so that the "S" and "PY" marks on the Cam correspond to the pointer accurately in stop and playback modes respectively.

(This adjustment is required because the position adjusted by one volume will be slightly changed when the other volume is adjusted.)

(e) Set the N-670ZX in FF, pause, or cue mode by pressing each switch (press FF and Pause Switches to set the N-670ZX in cue mode) and check to insure that the pointer is in a range of "F", "PS", or "CU" mark respectively.

(f) If out of the range, precise adjustment for each position according to "(2) Offset Fine Adjustment of Control Motor Driver" will be required.

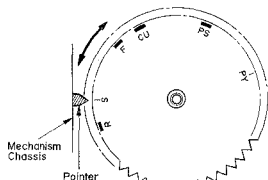


Fig. 4.1

(2) Offset Fine Adjustment of Control Motor Driver

Adjust only if a satisfactory result is not obtained in "(1) Offset Adjustment of Control Motor Driver". This adjustment is made by changing the value of the fixed resistors on the Logic P.C.B.

Note: The value of voltage is typical value.

(a) Observation Point of Reference Voltage

Observe the each voltage at the sliding contact of the Cam Control Volume VR405 (10 kΩ) in stop, fast (FF or REW), pause, record and playback modes.

(b) Reference Voltage

Reference voltage at the sliding contact of VR405 (Cam Control Volume) in each mode is as follows:

Mode	Reference Voltage (Typical Value)
Stop	3.0 V
Fast (FF/REW)	1.3 V
Pause	-2.8 V
Play	-5.4 V

} -1.7 V ±0.25 V
} -2.6 V ±0.4 V

(c) Resistors for Adjustment

Mode	Ref. No.	Typical Value
Stop	R461	9.1 kΩ (F)
Fast (FF/REW)	R462	4.32 kΩ (F)
Pause	R445	287 kΩ (F)
Play	R443	174 kΩ (F)

(d) Adjustment Procedures

1) Press the Stop Switch to set the N-670ZX in stop mode.

Adjust the value of R461 to obtain 3.0 V (±0.6 V) at the sliding contact of VR405.

Note: When R461 is adjusted, the reference voltage in fast (FF or REW) mode is changed. Therefore, re-check of the reference voltage in fast (FF or REW) mode is required. If the reference voltage is out of the range, re-adjustment of R462 according to next step 2) is necessary.

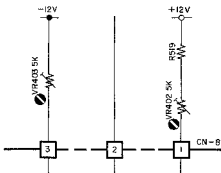


Fig. 4.2

- 2) Set the N-670ZX in FF mode, then adjust the value of R462 so that the voltage of VR405 will become lower by 1.7 V (± 0.25 V) than in stop mode.
- 3) Press the Pause Switch to set the N-670ZX in pause mode.
Adjust the value of R445 to obtain -2.8 V (± 0.4 , -0.15 V) at the sliding contact of VR405.
- 4) Set the N-670ZX in playback mode, then adjust the value of R443 so that the voltage of VR405 will become lower by 2.6 V (± 0.4 V) than in pause mode.

(3) Cam Timing Adjustment

- (a) Remove the wires from the Control Motor Terminals to set the motor open.
- (b) Without loading a cassette tape and with pressing the Record Protecting Switch with your finger tip, press the Record and Play Switches to set the N-670ZX in record mode.
- (c) Turn the Cam and bring the "PY" mark toward the pointer by hand. Reel Motor will rotate before the "PY" mark reaches the pointer. Adjust the value of R483 and R484 so that the voltage at sliding contact of VR405 becomes -3.6 V (± 0.3 V) when Reel Motor starts rotation.
- (d) Observe the mute signal at the Q418 collector. Turn the Cam referring to above step (c) and check to insure that the voltage at the sliding contact of VR405 is -3.8 V (± 0.3 V) when mute is released (mute signal changes from H to L).
(This voltage is determined by the adjustment of R483 and R484 in above step (c).)
- (e) Observe the Rec. signal at the Q417 collector. Turn the Cam referring to above step (c) and adjust the value of R488 to obtain -2.1 V (± 0.4 V) at the sliding contact of VR405 when Rec. signal changes from H to L (bias oscillation will begin).
- (f) Upon completion of the above adjustment, re-connect wires to the motor terminals.

4.2. Tape Speed Adjustment

- (1) Remove the Top Cover.
- (2) Connect a Frequency Counter to the Output Jack.
- (3) Load a 3 kHz Wow/Flutter Tape (DA09006A) and play it back.
- (4) Referring to Fig. 4.3, adjust the Tape Speed Adjustment Volume VR407 on the Speed Cal. P.C.B. to obtain 3,000 Hz on the Frequency Counter.
CCW: Motor drives slowly.
CW: Motor drives fast.

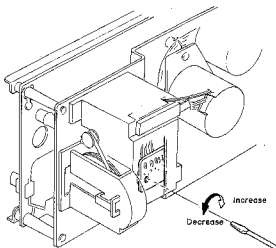


Fig. 4.3

4.3. Record Head and Playback Head Tilt Adjustment

Note: On items 4.3-4.9, please refer to Fig. 4.4 flow chart.

Refer to Figs. 4.5 and 4.6.

- (1) Load a Tilt Check Gauge M-9039 (DA09039A) in the N-670ZX.
- (2) Clip the grounding terminal of the Tilt Check Gauge with one end of the cord with clip, and the other end to the chassis of the N-670ZX.
- (3) Remove both of the Height Gears.
- (4) Set the N-670ZX in play mode. Check to insure whether the Beacons Playback Head "Upper" or "Lower" and Record Head "Upper" or "Lower" are illuminating. In order not to give damages onto the head surfaces, push both of slide knobs of the Gauge to the direction of arrow marks, then return it to the original place to be in contact with record head and playback head surfaces after play mode is se-

curely locked.

- (5) Check to insure freedom from contact between the Gauge and pad lifter.
- (6) Beacon Playback Head "Lower" will light on when height adjustment screw (P) turned clockwise but Playback Head "Upper" when counterclockwise. Adjust so that both "Upper" and "Lower" will light on even when you move the slide knob to the direction of an arrow mark and then return it to the original place.
- (7) Same procedures will apply to the Beacons Record Head "Upper" and "Lower", except for the height adjustment screw (R).
- (8) Set the N-670ZX in stop mode and fit both of the serrated height gears. Then set the N-670ZX again in play mode and insure all of the 4 Beacons are illuminating. If not, (3) through (7) will have to be repeated till satisfactory results are obtained.

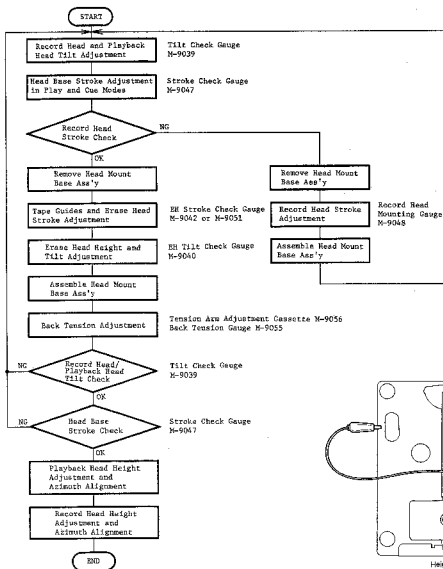


Fig. 4.4

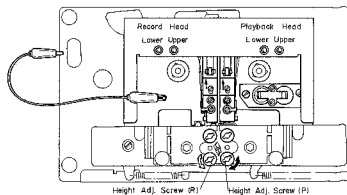


Fig. 4.5

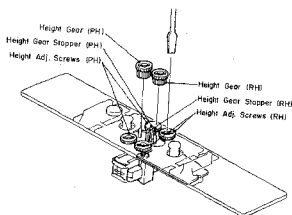


Fig. 4.6

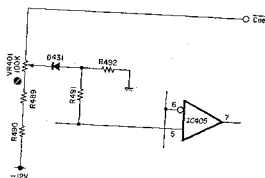


Fig. 4.8

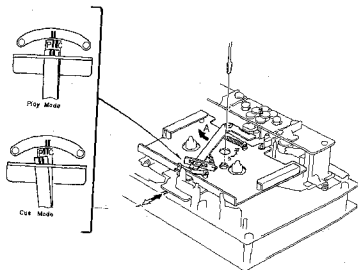


Fig. 4.7

4.4. Head Base Stroke Adjustment in Play and Cue Modes

Note: Before you conduct this adjustment, adjust with a "Tilt Check Gauge" to insure freedom from tilt on the playback head and record head.

(1) Head Base Stroke Adjustment in Play Mode

Refer to Fig. 4.7.

- Load a Stroke Check Gauge M-9047 (DA09047A) in the N-670ZX.
- Move Record Head Indicator and Playback Head Indicator to the direction of arrow mark "A" with your finger tip and then set the N-670ZX in play mode. Then slowly release the Indicators and insure whether each of the Indicators is in contact with record and playback heads.
- Check to insure whether the "P" pointer on the Playback Head Indicator locates between the 2 lines on the Indicator Plate.
- If the playback head stroke is noted to be misaligned, adjustment can be made by moving the stroke adjuster assembled in the head base assembly (either forwardly or backwardly).
- Check to insure whether the "P" pointer on the Playback Head Indicator locates between the 2 lines on the Record Head Indicator, thus check can be made on record head stroke.

- If the record head stroke is noted to be misaligned, adjustment can be made with a Record Head Mounting Gauge M-9048 (DA09048A).

(2) Head Base Stroke Adjustment in Cue Mode

Refer to Fig. 4.8.

- Load a Stroke Check Gauge M-9047 (DA09047A) in the N-670ZX.
- Move Record Head Indicator and Playback Head Indicator to the direction of arrow mark "A" with your finger tip and then set the N-670ZX in cue mode (F.F. and Pause). Then slowly release the Indicators and insure whether each of the Indicators is in contact with record and playback heads.
- Check to insure whether the "C" pointer on the Playback Head Indicator locates between the 2 lines on the Indicator Plate.
- If the playback head stroke is noted to be misaligned, adjust VR401 on the Logic P.C.B. Ass'y till satisfactory results are obtained.
- After completion of the Head Base Stroke Adjustment, check to insure accuracy of the Head Base Stroke Adjustment in play mode. If the above are inaccurate, items (1) and (2) will have to be repeated till satisfactory results are obtained.

4.5. Tape Guides Adjustment and Erase Head Stroke Adjustment

Remove Head Mount Base Ass'y referring to item 2.30. Refer to Figs. 4.9 and 4.10.

(1) Supply Tape Guide Height Adjustment

- Load an EH Stroke Check Gauge M-9042/M-9051 in the N-670ZX.
- Set the N-670ZX in play mode.
- Slide the Supply Tape Guide Check Bar down against the supply tape guide, thus check can be made on supply tape guide height.
- If the supply tape guide is misaligned, the Supply Tape Guide Check Bar will not come into the supply tape guide. If such is noted, turn to adjust the height adjustment nut A till the Supply Tape Guide Check Bar is accepted by the supply tape guide.
- If the above are insured, set the N-670ZX in pause mode, then in play mode to see whether adjustments are appropriately made. If not, (b) through (e) will have to be repeated till satisfactory results are obtained.

(2) Take-up Tape Guide Height Adjustment

- Load an EH Stroke Check Gauge M-9042/M-9051 in the N-670ZX.
- Set the N-670ZX in play mode.
- Slide the Take-up Tape Guide Check Bar down against the take-up tape guide, thus check can be made on take-up tape guide height.
- If the take-up tape guide is misaligned, the Take-up Tape Guide Check Bar will not come into the take-up tape guide. If such is noted, turn to adjust the height adjustment nut B till the Take-up Tape Guide Check Bar is accepted by the take-up tape guide.
- If the above are insured, set the N-670ZX in pause mode, then in play mode to see whether adjustments are appropriately made. If not, (b) through (e) will have to be repeated till satisfactory results are obtained.

(3) Erase Head Stroke Adjustment

- Load an EH Stroke Check Gauge M-9042/M-9051 in the N-670ZX.
- Set the N-670ZX in play mode, thus check can be made on erase head stroke through the EH Stroke Indicator.
- Check to insure whether the erase head surface is aligned with red line on the EH Stroke Indicator. If not, adjust the erase head stroke by loosening 2 screws that assembled erase head and erase head plate.
- After completion of adjustment, 2 pcs. of screws shall be locked with lock tight paint.

Note:

EH Stroke Check Gauge M-9042 (DA09042A) should be used for the Models serial Nos. from A11501001 to A11503890, and EH Stroke Check Gauge M-9051 (DA09051A) is for the Models bearing serial No. A11503891 and greater.

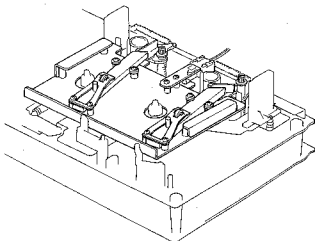


Fig. 4.9

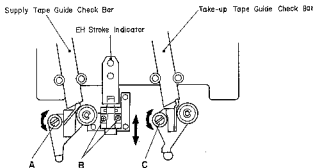


Fig. 4.10

4.6. Erase Head Height and Tilt Adjustment

Refer to Figs. 4.11 and 4.12.

- Remove Head Mount Base Ass'y referring to item 2.30.
- Load an EH Tilt Check Gauge M-9040 (DA09040A) in the N-670ZX.
- Set the N-670ZX in stop mode.
- Check to insure whether one of the 3 Beacons is illuminating. Look down the mirror as shown by an arrow mark and slowly turn the Screw "Height" counterclockwise (or clockwise) so that the two horizontal lines on the mirror will become superposed on the line (in different color) of the erase head, and check to insure whether Beacon "1" is illuminating.

- (5) Turn Screw "Tilt" counterclockwise (or clockwise) to light on Beacon "2". Excessive turning will cause the Beacon "1" to light off. Adjustments of Screw "Tilt" will therefore be conducted till both of the Beacons "1" and "2" illuminate.
- (6) Turn Screw "Azimuth" counterclockwise (or clockwise) to light on Beacon "3". Excessive turning will cause either Beacon "1" or "2" to light off, and therefore adjust with Screw "Azimuth" until all of the 3 Beacons "1", "2" and "3" illuminate.

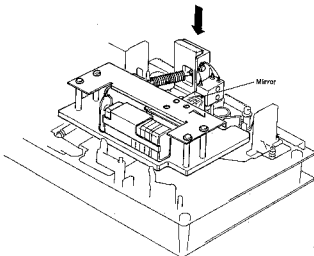


Fig. 4.11

- (7) Check to insure whether the horizontal line on the mirror corresponds to that on the erase head. If not, (4) through (7) will have to be repeated till satisfactory results are obtained.
- (8) After completion of adjustment, 3 pcs. of screws shall be locked with lock tight paint.

Note: Before use of this gauge, check to insure freedom from dust or dirt, or overflow in the groove of the erase head surface.

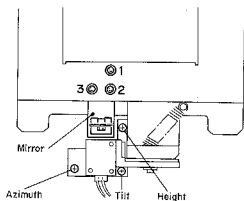


Fig. 4.12

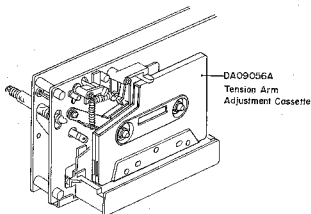


Fig. 4.13

4.7. Back Tension Adjustment

Note: This adjustment is required for the Models bearing serial Nos. A11505640 and greater.

Refer to Figs. 4.13 - 4.16.

- (1) Load the Tension Arm Adjustment Cassette (DA 09056A) referring to Fig. 4.13.
- (2) Set the Cassette Deck in play mode.
- (3) Bend the Back Tension Arm with pliers so that the gap between the Cassette Holding Spring assembled with the Head Base Ass'y and the Back Tension Arm becomes 0.5 mm as shown in Fig. 4.14. Do not bend the pointed end of the Back Tension Arm.

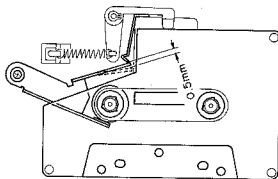


Fig. 4.14

- (4) Set the Cassette Deck in stop mode, and remove the Tension Arm Adjustment Cassette (DA09056A), then set the Cassette Deck in cue mode. In cue mode, check to insure that the gap is found between the Supply Reel Hub B Ass'y and the Felt of Back Tension Ass'y as shown in Fig. 4.15.
- (5) Load the Back Tension Gauge (DA09055A).
- (6) Set the Cassette Deck in play mode and read the torque value of Back Tension Gauge. If the value is in a range of 6 g-cm to 10 g-cm, adjustment is not necessary. If not, change the installation point of the Back Tension Spring as shown in Fig. 4.16, and obtain the torque of 7 g-cm to 9 g-cm range.

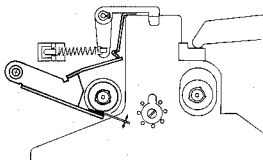


Fig. 4.15

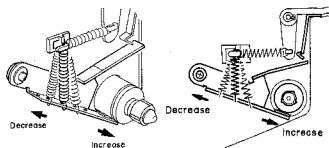


Fig. 4.16

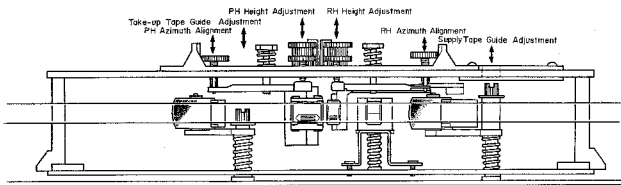


Fig. 4.17

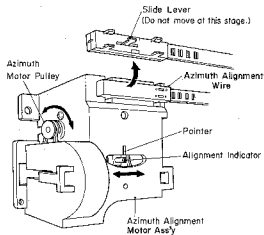


Fig. 4.18

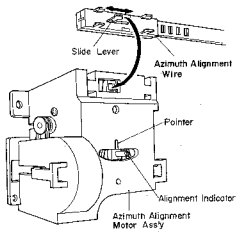


Fig. 4.19

4.8. Playback Head and Record Head Height Adjustment and Azimuth Alignment

(1) Playback Head Height Adjustment and Azimuth Alignment

Refer to Fig. 4.17.

- Set the Monitor Switch to the Tape position, then connect a VTVM to the Output Jacks.
- Load a 1 kHz Track Alignment Tape (DA09007A), then set the N-670ZX in play mode.
- Turn the PH Height Gear until the outputs of both channels become minimum.
- Load a 15 kHz Azimuth Tape (DA09004A), then set the N-670ZX in play mode.
- Turn the PH Azimuth Alignment Screw until the outputs of both channels become maximum.
- Repeat above steps (b) through (e) one or two times to obtain optimum performance.

(2) Record Head Height Adjustment and Azimuth Alignment

Refer to Figs. 4.17 - 4.20.

- Set the N-670ZX in stop mode.
Turn the Azimuth Motor in the Azimuth Alignment Motor Ass'y by hand so that the Alignment Indicator corresponds to the pointer of the Azimuth Alignment Motor Ass'y as shown in Fig. 4.18.
Remove the Azimuth Alignment Wire by pulling out from the Azimuth Alignment Motor Ass'y. In this case, do not move the Slide Lever of the Azimuth Alignment Wire. Short both leads of capacitor C903 on the Auto Azimuth P.C.B. Ass'y with a jumper wire.
- Set the Monitor Switch to the Tape position, then connect a VTVM to the Output Jacks.
- Load a Reference SX Tape (DA09025A). Set the Eq. Switch to the 70 μ s position and Tape Switch to the SX position. Then set the N-670ZX in record and play mode.
- Set the Auto. A/Tone Switch to the Cal. position, then turn the RH Height Gear until the outputs of both channels become maximum.
- Feed in 15 kHz (-20 dB), then set the N-670ZX in record and play mode. Turn the RH Azimuth Alignment Screw until the outputs of both channels become maximum.
- Repeat above steps (d) and (e) one or two times to obtain optimum performance.
- After completion of the above adjustments, perform the following electrical adjustment by using the same side of the same tape as used in the above steps.
 - Set the Monitor Switch to the Tape position and the Auto. A/Tone Switch to the Cal. position, then set the N-670ZX in record and play mode.
 - Adjust VR901 on the Auto Azimuth P.C.B. Ass'y so that the Azimuth Motor stops its rotation.

- Set the N-670ZX in stop mode.

Mount the Azimuth Alignment Wire on the Azimuth Alignment Motor Ass'y referring to Fig. 4.19. (Correct the position of the Slide Lever of the Azimuth Alignment Wire by sliding by hand, then insert the Slide Lever into the receptacle of the Azimuth Alignment Motor Ass'y.)

Remove the shorting jumper wire from C903 on the Auto Azimuth P.C.B. Ass'y.

- After completion of the above adjustments, record 400 Hz tone to the same portion of both sides A and B of the tape.
- Immerse the recorded tape in a magnetized developing solution. In turn, check to insure that the recording head tracks across the center are separated with a distance of 0.55 to 0.75 mm (typically 0.65 mm) as illustrated in Fig. 4.20.

Note: Liquid for tape magnetized development solution; "MAGNA-SEE, SOUND CRAFT a product of CBS RECORDS a division of Columbia Broadcasting System, Inc., Danbury, Conn. 06810 U.S.A., or equivalent".

After development, clean the tape otherwise pressure rollers and heads will become dirty.

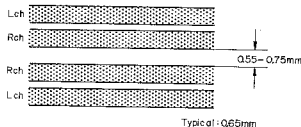


Fig. 4.20

4.9. Record Head Stroke Adjustment

Refer to Figs. 4.21 and 4.22.

Note: This adjustment will be required only to insure freedom from misalignment of the record head stroke in the record head stroke check mode.

- (1) Check the accuracy of the record head stroke.
- (2) Remove Head Mount Base Ass'y referring to item 2.30.
- (3) Remove the record head assembly.
- (4) Adjustment of Record Head Mounting Gauge M-9048 (DA09048A)
 - (a) Mount the Block B onto the Mounting Gauge Plate.
 - (b) Loosen the 2 screws fixing the Block A.
 - (c) As shown in Fig. 4.21 hold the Gauges (3.05 mm and either one of 0.05, 0.15, 0.2, 0.25, 0.3 or 0.35 mm thickness) between the Block A and Block B, fix the Block A with screws, pushing the Block A to the 2 guide pins.
- (5) Remove the Block B from the Mounting Gauge Plate.
- (6) As shown in Fig. 4.22, mount the R-8L record head assembly onto the Mounting Gauge Plate, then check the location of the R-8L record head surface. (If record head contacts to the Block C, loosen 2 pcs. of screws that assembled record head and R-8L record head assembly, then place the R-8L record head assembly onto the Plate.)
- (7) Remove the R-8L record head assembly from the Mounting Gauge Plate.

- (8) Readjustment of Record Head Mounting Gauge M-9048 (DA09048A)

- (a) Mount the Block B onto the Mounting Gauge Plate.
- (b) Loosen the 2 screws fixing the Block A.
- (c) As shown in Fig. 4.21 hold the Gauges (3.05 mm and either one of 0.05, 0.15, 0.2, 0.25, 0.3 or 0.35 mm thickness) between the Block A and Block B, fix the Block A with screw, pushing the Block A to the 2 guide pins.

- (9) Remove the Block B from the Mounting Gauge Plate.
- (10) Mount the R-8L record head assembly onto the Mounting Gauge Plate.
- (11) As shown in the Fig. 4.22, loosen the R-8L record head with 2 pcs. of screws onto the record head plate. As the location of the Block A is secured by the item (8)-(c), push the record head to the directions A and B, then tighten 2 pcs. of screws.
- (12) Check to insure freedom from gap between the Block C and record head surface, then tighten the 2 pcs. of screws on the record head plate with lock tight paint.
- (13) Assemble the record head assembly to the head mount base assembly.
- (14) Assemble the head mount base assembly to the mechanism assembly.
- (15) Check the record head stroke.

If the above are inaccurate, items (1) through (15) will have to be repeated till satisfactory results are obtained.

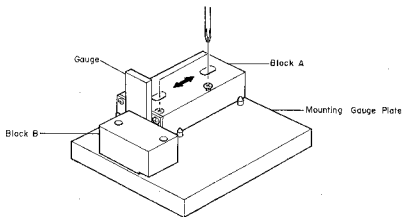



Fig. 4.21

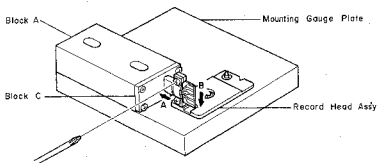


Fig. 4.22

4.10. Tape Travelling Adjustment

The adjustment shall be made with a modified version of the current type EX11 C-90 as shown in Fig. 4.23 (error will be made if a current type Tape Travelling Cassette (DA09011A) should be used for this purpose).

While modifying an EX11 C-90, the tape guides in the cassette housing shall be kept protected to avoid tilt. Check shall be made in the following procedures:

- (1) An EX11 C-90 Tape thus modified shall be loaded onto the N-670ZX.
- (2) Release the back-tension (rotate the Supply Reel and feed out some length of tape) and set the N-670ZX in play mode.
- (3) In this juncture, check to insure whether the tape is free from wavering or slippage from the tape guide.
- (4) When the modified EX11 C-90 is played back, check to insure whether the tape is free from wavering from head surface or at pressure rollers.
- (5) If either of wavering or slippage from the tape guide should be noted, adjustments of "4.3. Record Head and Playback Head Tilt Adjustment", "4.4. Head Base Stroke Adjustment", "4.5. Tape Guides Adjustment and Erase Head Stroke Adjustment", "4.6. Erase Head Height and Tilt Adjustment", "4.7. Back Tension Adjustment", "4.8. Playback Head and Record Head Height Adjustment and Azimuth Alignment", "4.9. Record Head Stroke Adjustment", etc. will be required.

As a case may be, the said wavering or slippage may have been caused from defective Supply Pressure Roller Ass'y or Take-up Pressure Roller Ass'y without parallel contact with capstans. If such are noted, the Pressure Roller Assemblies will have to be replaced.

Further, excessively weak take-up torque or strong take-up torque may cause defective tape travelling.

The N-670ZX is intended to be an adjustment-free Model, however if the similar matters as above should be noted, please replace the Reel Hub Ass'y to obtain appropriate take-up torque.

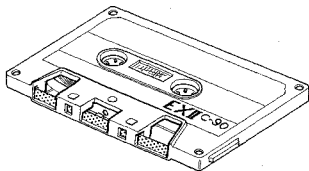


Fig. 4.23

4.11. Flywheel Holder Adjustment

- (1) Refer to Fig. 4.24.

Tighten the Thrust Screws until the gap between the Flywheel Assemblies and Thrust Screws becomes minimized when both of the Capstan Shafts are moved backwardly and forwardly (the Thrust Springs between the Capstan Flanges and Flywheel Thrust Caps are in a flat state).

Excessive tightening of the Thrust Screws however will give damages on the Flywheel Assemblies, to which careful attention is invited.

- (2) Return the Thrust Screws by 1/2 turn.
- (3) Fixing the Thrust Screw with a screwdriver, lock the Lock Nut.
- (4) Apply a quantity of lock tight paint to the Thrust Screws.

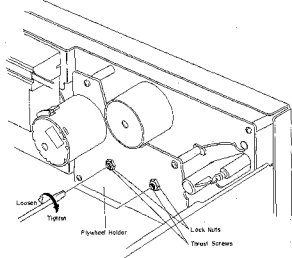


Fig. 4.24


4.12. Lubrication

N-670ZX is a lubrication-free cassette deck except when parts are replaced. Apply the following lubricant for each replaced part:

- (1) LAUNA #100
Capstan Shaft
Pressure Roller Shaft
Thrust Cap
- (2) FLOIL GB-TS-1
Reel Hub Shaft
Thrust portion on the Capstan Shaft
FLOIL GB-TS-1, made by Kanto Chemicals Co., Ltd., in Japan.
- (3) Silicon Oil #3000CST
Air Damper Piston

Note: Excessive lubrication may cause defective damper action as the 0.2φ hole at the end of the cylinder may be filled with oil.

5. PARTS LOCATION FOR ELECTRICAL ADJUSTMENT

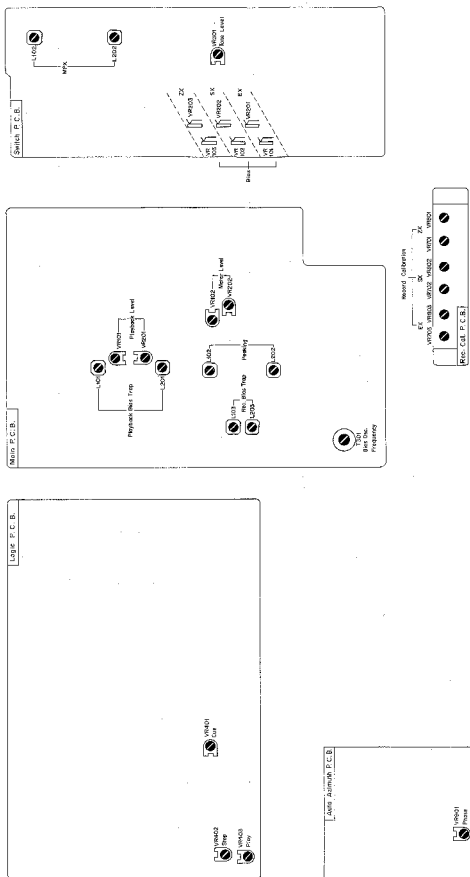

6. ELECTRICAL ADJUSTMENTS AND MEASUREMENTS

6.1. Adjustment and Measurement Instructions

Note: Electrical adjustment should be performed after mechanical adjustment is completed.

STEP	ITEM	SIGNAL SOURCE	OUTPUT CONNECTION	MODE	ADJUSTMENT	REMARKS
1	Tape Speed	3 kHz Speed and Wow/Flutter Tape (DA09006A)	Frequency Counter to OUTPUT Jacks	Playback	Speed Cal. P.C.B. VR407	Adjust VR407 to obtain 3 kHz \pm 0.5%.
2	Tone Calibration	Test Tone 400 Hz	VTVM to TP101, TP201 on the Main P.C.B.	Monitor SW — Source Auto. A/Tone SW — CAL	Switch P.C.B. VR301	1. Set the Auto. A/Tone Switch to CAL. Turn output level control fully clockwise (maximum position). 2. Adjust VR301 to obtain 100 mV \pm 0.2 dB at TP101 and TP201 on the VTVM (Output level will be 1V (0 dB)).
3	Meter Level	400 Hz 10 dB/—10 dB/—20 dB to INPUT Jacks	VTVM to TP101, TP201 on the Main P.C.B.	Monitor SW — Source Auto. A/Tone SW — CAL/OFF	Main P.C.B. VR102, VR202	1. Adjust VR102 (VR202) to obtain 0 dB on the level meters at 100 mV level on the VTVM. 2. Decrease input level by 10 dB/20 dB then short or open R145 (R245) to obtain minimum deviation for —10 dB/—20 dB on the level meters. (Perform at —10 dB and —20 dB.) 3. Again increase input level so that output will become 100 mV, then re-adjust VR102 (VR202) to obtain 0 dB on the level meters.
4	MPX Filter	19 kHz \pm 100 Hz to INPUT Jacks	VTVM to OUTPUT Jacks	Monitor SW — Source Auto. A/Tone SW — OFF Dolby NR SW — OUT/MPX	Switch P.C.B. L102, L202	1. Turn output level control fully clockwise (maximum position). 2. Adjust input level control to obtain 1 V on the VTVM. 3. Set the Dolby NR Switch to MPX position, then adjust L102 (L202) to obtain minimum reading on the VTVM (minimum reading will be less than —30 dB).
5	Playback Head Track Alignment	1 kHz Track Alignment Tape (DA09007A)	VTVM to OUTPUT Jacks	Playback Monitor SW — Tape Auto. A/Tone SW — OFF Eq. SW — 70 μ s Dolby NR SW — OUT	Playback Head Height Adj. Screw	Adjust the Playback Head Height Adj. Screw to obtain minimum reading of both L and R channels on the VTVM. See "Playback Head Height Adjustment and Azimuth Alignment" in item 4.B.
6	Playback Head Azimuth Alignment	15 kHz Azimuth Tape (DA09004A)	VTVM to OUTPUT Jacks	Same as above	Playback Head Azimuth Alignment Screw	Adjust the Playback Head Azimuth Alignment Screw to obtain maximum reading of both L and R channels on the VTVM. See "Playback Head Height Adjustment and Azimuth Alignment" in item 4.B. Note: Repeat steps 5 and 6 one or two times to obtain optimum performance.
7	Playback level	400 Hz Level Tape (DA09005A)	VTVM to TP101, TP201 on the Main P.C.B.	Same as above	Main P.C.B. VR101, VR201	Adjust VR101 (VR201) to obtain 100 mV on the VTVM or 0 dB on the level meters.

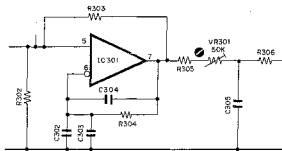


Fig. 6.1 2. Tone Calibration

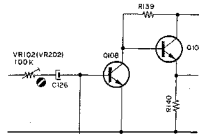


Fig. 6.2 3. Meter Level

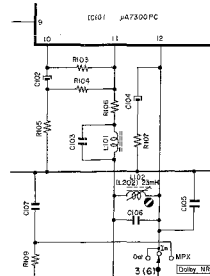


Fig. 6.3 4. MPX Filter

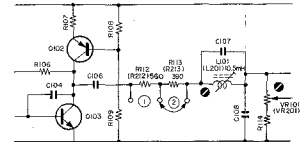


Fig. 6.4 7. Playback Level

STEP	ITEM	SIGNAL SOURCE	OUTPUT CONNECTION	MODE	ADJUSTMENT	REMARKS
12	Bias Trap (Playback Amp.)	Remove input signals	VTVM to OUTPUT Jacks	Record, Playback Monitor SW - Tape Auto. A/Tone SW - OFF Tape SW - ZX Eq. SW - 70 μ s Dolby NR SW - OUT	Main P.C.B. L101, L201	Adjust L101 (L201) to obtain minimum reading on the VTVM.
13	Record Head Height Adjustment and Azimuth Alignment	Test Tone 400 Hz and 15 kHz (-20 dB) to INPUT Jacks	VTVM to OUTPUT Jacks	Record, Playback Monitor SW - Tape Auto. A/Tone SW - CAL/OFF Tape SW - SX Eq. SW - 70 μ s Dolby NR SW - OUT	Head Height: Record Head Height Adj. Screw Azimuth Alignment: Record Head Azimuth Alignment Screw Rec. Cal. P.C.B. (Level) VR702, VR802 Switch P.C.B. (Bias) VR102, VR202 Auto Azimuth P.C.B. VR801	<ol style="list-style-type: none"> In stop mode, turn the Azimuth Motor by hand so that the Alignment Indicator corresponds to the pointer of the Azimuth Alignment Motor Ass'y as shown in Fig. 4.1B. Remove the Azimuth Alignment Wire by pulling out from the Azimuth Alignment Motor Ass'y. (In this case, do not move the Slide Lever of the Azimuth Alignment Wire.) Short both leads of capacitor C903 on the Auto Azimuth P.C.B. Ass'y with a jumper wire. Record Head Height Adjustment: <ol style="list-style-type: none"> Set the Auto. A/Tone Switch to CAL. Record signals on the reference SX tape (DA09025A), then play it back. Adjust the Record Head Height Adj. Screw to obtain maximum readings of both channels on the VTVM. Record Head Azimuth Alignment: <ol style="list-style-type: none"> Set the Auto. A/Tone Switch to CAL. Record signals on the reference SX tape (DA09025A), then play it back. Adjust Record Cal. VR702 (VR802) to the center position. Adjust Bias VR102 (VR202) to obtain maximum reading of the VTVM. Adjust Record Cal. VR702 (VR802) to obtain the same reading as the source monitor level on the level meter. Set the Auto. A/Tone Switch to OFF, then feed in 15 kHz (-20 dB). Record signals on the reference SX tape (DA09025A), then play it back. Adjust the Record Head Azimuth Alignment Screw to obtain maximum readings of both channels on the VTVM. Adjust finely VR102 (VR202) to obtain the same reading as the source monitor level on the VTVM. Repeat above substeps 2 and 3 one or two times to obtain optimum performance. Set the Auto. A/Tone Switch to CAL. Record signals on the reference SX tape (DA09025A), then play it back. Adjust VR801 so that the Azimuth Motor stops its rotation. After completion of above steps, mount the Azimuth Alignment Wire on the Azimuth Alignment Motor Ass'y. Remove the shorting jumper wire from C903 on the Auto Azimuth P.C.B. Ass'y. Check the Auto Azimuth Alignment function as follows: <ol style="list-style-type: none"> Set the Auto. A/Tone Switch to OFF. Load a reference tape; then depress the Record Button and Play Button simultaneously to start recording. Change the Auto. A/Tone Switch to the CAL position and check to insure that the play lamp will keep flashing. After the flashing is completed, check to insure that the playback level is indicated on the level meter for both channels. Set the Auto. A/Tone Switch to OFF, then feed in 15 kHz (-20 dB). Record signals on the reference SX tape (DA09025A), then play it back. Check to insure that the playback level is the same as the source monitor level for both channels. If above is insured, the Auto Azimuth Alignment function is accurate.

STEP	ITEM	SIGNAL SOURCE	OUTPUT CONNECTION	MODE	ADJUSTMENT	REMARKS
14	Record Level Calibration and Recording Bias Current Adjustment	Test Tone 400 Hz or 400 Hz and 15 kHz (-20 dB) to INPUT Jacks	VTVM and Distortion Meter to OUTPUT Jacks	Record, Playback Monitor SW - Tape Auto, A/Tone SW - CAL/OFF Tape SW - EX/SX/ZX Eq. SW - 120 μ s (EX) 70 μ s (SX/ZX) Dolby NR SW - OUT	Rec. Cal. P.C.B. (Lew) ZX: VR701, VR801 SX: VR702, VR802 EX: VR703, VR803 Switch P.C.B. (Bias) ZX: VR103, VR203 SX: VR102, VR202 EX: VR101, VR201	For each tape to be used, perform the Auto Azimuth Alignment operation by depressing Record and Play Buttons simultaneously after setting the Auto. A/Tone Switch to CAL. To minimize the influence of interference between each volume, adjustment should be made in the order of ZX, SX and EX. 1. Set the Auto. A/Tone Switch to CAL. 2. Record signals on the reference ZX tape (DA09037A), SX tape (DA09025A), or EXII tape (DA09021A), then play it back. 3. Adjust Record Cal, VR701 (VR801) (for ZX), VR702 (VR802) (for SX), or VR703 (VR803) (for EXII) to the center position. 4. Adjust Bias VR103 (VR203) (for ZX), VR102 (VR202) (for SX), or VR101 (VR201) (for EXII) to obtain maximum reading on the VTVM. 5. Set the Auto. A/Tone Switch to OFF, then feed in 15 kHz (-20 dB). 6. Adjust finely VR103 (VR203) (for ZX), VR102 (VR202) (for SX), or VR101 (VR201) (for EXII) to obtain the same reading as the source monitor level on the VTVM. 7. Set the Auto. A/Tone Switch to CAL. 8. Adjust Record Cal, VR701 (VR801) (for ZX), VR702 (VR802) (for SX), or VR703 (VR803) (for EXII) to obtain 0 dB on the level meter. 9. Repeat 5 through 8 as above two or three times to obtain optimum performance. 10. Check whether the total harmonic distortion (T.H.D.) is less than 0.8% (for ZX), or 1.0% (for SX and EXII). Note: Typical bias current: ZX: approx. 4.6 mA SX: approx. 2.5 mA EXII: approx. 1.6 mA
15	Overall Frequency Response	400 Hz (0 dB) and 10 Hz to 22 kHz/20 kHz (-20 dB) to INPUT Jacks	VTVM and Distortion Meter to OUTPUT Jacks	Record, Playback Monitor SW - Source/Tape Auto, A/Tone SW - OFF Tape SW - EX/SX/ZX Eq. SW - 120 μ s (EX) 70 μ s (SX/ZX) Dolby NR SW - OUT	Main P.C.B. L102, L202	For each tape to be used, perform the Auto Azimuth Alignment operation by depressing Record and Play Buttons simultaneously after setting the Auto. A/Tone Switch to CAL. 1. Set the Monitor Switch to Source. 2. Feed in 400 Hz (0 dB) and adjust input level controls to obtain 0 dB on the level meters. 3. Switch the Generator output level to -20 dB. 4. Set the Monitor Switch to Tape, then record and play it back. 5. Feed in 10 Hz to 22 kHz (-20 dB) (for ZX), or 10 Hz to 20 kHz (-20 dB) (for SX and EXII), and check to insure if the output levels are within -20 dB \pm 3 dB. 6. If above is not sufficient, adjust L102 (L202) to obtain approx. -20 dB on the VTVM. 7. Conduct step 14 "Record Level Calibration and Recording Bias Current Adjustment". 8. If above is not sufficient, precise re-adjustment of step 8 "Playback Frequency Responses", replacement of Playback Head or Record Head, or check on item 4.10 "Tape Travelling Adjustment" will be required.
16	Crosstalk	1 kHz to INPUT Jacks	1 kHz Band Pass Filter and VTVM to OUTPUT Jacks	Record and Playback Monitor SW - Tape Auto, A/Tone SW - OFF Tape SW - ZX Eq. SW - 70 μ s Dolby NR SW - OUT		1. Erase the tape with bulk eraser. 2. Adjust input level controls to obtain 0 dB on the level meters, and record the signals on the reference tape. 3. Turn the cassette tape the other way round and play it back. 4. Measure the difference between 2 and 3.
17	Channel Separation	1 kHz to INPUT Jacks	Same as above	Same as above		1. Erase the tape with bulk eraser. 2. Adjust Lch (Rch) input level control to obtain 0 dB on the level meter, and close Rch (Lch) input level control. 3. Record and play it back, then measure the Rch (Lch) level.

STEP	ITEM	SIGNAL SOURCE	OUTPUT CONNECTION	MODE	ADJUSTMENT	REMARKS
18	Eraseure	1 kHz to INPUT Jacks	1 kHz Band Pass Filter and VTVM to OUTPUT Jacks	Record and Playback Monitor SW - Tape Auto. A/Tone SW - OFF Tape SW - ZX Eq. SW - 70 μ s Dolby NR SW - OUT		<ol style="list-style-type: none"> Erase the tape with bulk eraser. Adjust input level controls to obtain 0 dB on the level meters, and record the signals on the reference tape. Rewind the tape then close input level controls. Record and play it back, then measure the difference between 2 and 3.
19	Signal to Noise Ratio	400 Hz to INPUT Jacks	VTVM and Distortion Meter to OUTPUT Jacks	Record and Playback Monitor SW - Tape Auto. A/Tone SW - OFF Tape SW - ZX Eq. SW - 70 μ s Dolby NR SW - MPX		<ol style="list-style-type: none"> Feed in 400 Hz and record, and play it back. Adjust the input level controls to obtain 3% total harmonic distortion in playback mode. Close the input level controls then record. After rearound, play back and check the output level difference between 2 and 3. <p>Note: The filter of IHF-A curve shall be used in the measurements.</p>
20	Total Harmonic Distortion	400 Hz to INPUT Jacks	Distortion Meter to OUTPUT Jacks	Record and Playback Monitor SW - Tape Auto. A/Tone SW - OFF Tape SW - EX/SX/ZX Eq. SW - 120 μ s (EX) 70 μ s (SX/ZX) Dolby NR SW - OUT		<ol style="list-style-type: none"> Adjust input level controls to obtain 0 dB on the level meters. Record and play it back. Read the distortion meter and check to insure that the distortion is less than 0.8% for ZX tape and 1.0% for SX and EX II tapes.
21	Wow/Flutter	3 kHz Speed and Wow/Flutter Tape (DA09006A)	Wow/Flutter Meter to OUTPUT Jacks	Playback Monitor SW - Tape Auto. A/Tone SW - OFF Eq. SW - 70 μ s Dolby NR SW - OUT		Play back and read the wow/flutter meter.

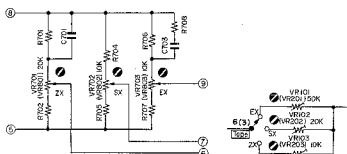


Fig. 6.10 14. Recording Level and Bias Current

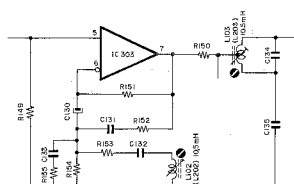


Fig. 6.11 15. Overall Frequency Response

6.2. Frequency Response Adjustment

(1) Playback Frequency Response Adjustment
Refer to Figs. 6.12 and 6.13.

(a) Level Adjustment (for middle frequency response)
This adjustment will be required when playback level is not sufficient at 10 kHz PB Frequency Response Tape (refer to step 8 in "6.1. Adjustment and Measurement Instructions.").

Peaking portion compensates the gap loss of the playback head.

Peaking level is varied by the short circuit of R112 (R212) or R113 (R213) as illustrated in the figure.

- Following are the details for level modification:
- Approx. +1 dB R111 (R211): 3.0K
 - 0 dB R110 (R210): 4.3K
 - 0 dB R111 (R211): 3.3K
 - 0 dB R110 (R210): 4.7K
 - Approx. -1 dB R111 (R211): 3.6K
 - 0 dB R110 (R210): 5.1K

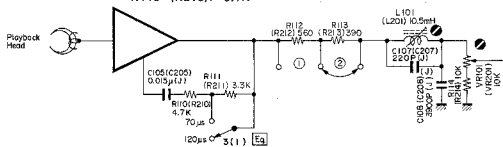


Fig. 6.13 Playback Eq. Amp.

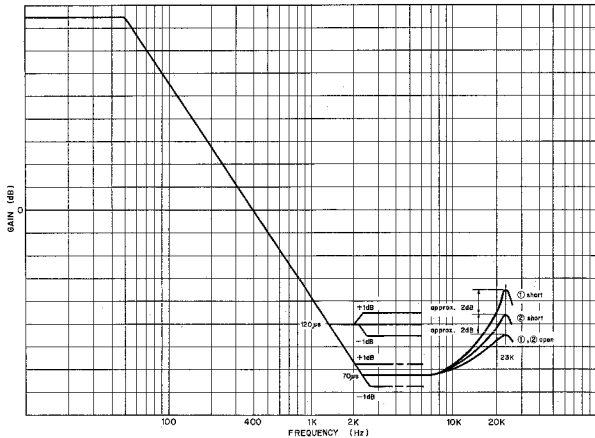


Fig. 6.12 Playback Equalization Curve

(b) Peaking Adjustment (for high frequency response)
This adjustment will be required when playback level is not sufficient at 20 kHz PB Frequency Response Tape (refer to step 8 in "6.1. Adjustment and Measurement Instructions.").

Peaking portion compensates the gap loss of the playback head.

Peaking level is varied by the short circuit of R112 (R212) or R113 (R213) as illustrated in the figure.

(2) Record Current Frequency Response Adjustment
Record eq. peaking is adjusted for compensating the overall frequency response when playback frequency response is completed.

Normally however peaking frequency is pre-adjusted to approx. 23 kHz in record mode. See Fig. 6.14.

(a) For ZX Tape

- 1) Feed in 400 Hz (0 dB), then record and play it back. Adjust bias current by VR103 (VR203) on the Switch P.C.B. to obtain a 0.8% distortion.
- 2) Feed in 10 kHz and 400 Hz (-20 dB), then record and play it back.

Check the difference of the levels between 10 kHz and 400 Hz, and mount an additional capacitor in parallel with the C119 (C219) on the Switch P.C.B. from the dip side of the printed circuit board depending upon the difference of the levels against 400 Hz. See Fig. 6.15.

Add	Total
0 dB	0
-1 dB	330 pF
-2 dB	680 pF
	1360 pF

- 3) Feed in 22 kHz (-20 dB), then record and play it back.

Adjust record peaking coil L102 (L202) to obtain flat overall frequency response.

(b) For SX Tape

- 1) Feed in 15 kHz and 400 Hz (-20 dB), then record and play it back.

Adjust bias current by VR102 (VR202) on the Switch P.C.B. to obtain flat overall frequency response.

- 2) Feed in 20 kHz and 400 Hz (-20 dB), then record and play it back.

And check to insure that the overall frequency response is flat.

(c) For EX Tape

- 1) Feed in 15 kHz and 400 Hz (-20 dB), then record and play it back.

Adjust bias current by VR101 (VR201) on the Switch P.C.B. to obtain flat overall frequency response.

- 2) Feed in 20 kHz and 400 Hz (-20 dB), then record and play it back.

And check to insure that the overall frequency response is flat.

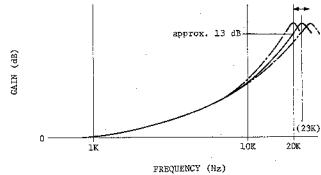


Fig. 6.14 Record Peaking Curve




Fig. 6.15

7. MOUNTING DIAGRAMS

6.3. Dolby NR Circuit Check

Dolby NR circuit incorporates a Dolby B-Type NR IC (μ A7300FC) which has no adjustment point.

Perform the following checks and make sure that the IC operates accurately i.e., accuracy of frequency response through IC.

(1) Playback Dolby NR Circuit (IC101 (IC201) on the Main P.C.B.)

Signal Source: 5 kHz to No. 9 pin of IC101 and IC201

Output Connection: VTVM to the test points TP101 and TP201 on the Main P.C.B.

Mode: Stop
Monitor SW - Tape
Dolby NR SW - OUT/IN

(a) Connect a VTVM to TP101 (TP201) on the Main P.C.B.

Feed in 5 kHz to No. 9 pin of IC101 (IC201) and adjust the generator output control so that the VTVM may read 7.6 mV at each test point.

(b) Set the Dolby NR Switch to IN. Check to insure that the level at TP101 (TP201) is 3 mV \pm 1.5 dB.

(2) Record Dolby NR Circuit (IC101 (IC201) on the Switch P.C.B.)

Signal Source: 5 kHz to INPUT Jacks

Output Connection: VTVM to the output side of C118 (C218) on the Switch P.C.B.

Mode: Stop
Monitor SW - Source

(a) Connect a VTVM to TP101 (TP201) on the Main P.C.B.

Feed in 5 kHz and adjust the input level so that the VTVM may read 100 mV (0 dB) at each test point. Pointer on the meter will indicate 0 dB.

(b) Remove the VTVM from TP101 (TP201) and reconnect it to the output side of C118 (C218). Check to insure that the VTVM indicates approx. 560 mV.

(c) Decrease the input level (0 dB) by 20 dB or 30 dB. Check to insure that the level at output side of C118 (C218) corresponds to the following with Dolby NR Switch IN and OUT.

Input Level		Capacitor Output Level	
1/3 \pm 5 kHz	Dolby NR OUT	Dolby NR IN	Difference between IN and OUT
-20 dB	-20 dB	-16.6 dB \pm 1.5 dB	3.2 dB \pm 1.5 dB
-30 dB	-30 dB	-21.8 dB \pm 1.5 dB	8.2 dB \pm 1.5 dB

Note: Mounting diagram shows a dip side view of the printed circuit board.

7.1. Control Switch P.C.B. Ass'y

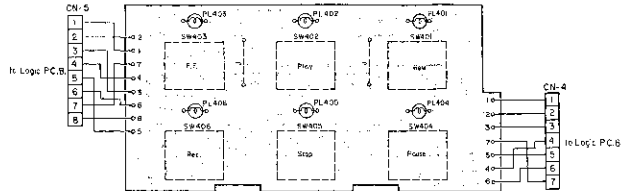


Fig. 7.1

7.2. Lamp P.C.B. B Ass'y




Fig. 7.2

7.3. Lamp P.C.B. C Ass'y



Fig. 7.3

7.4. RAMM P.C.B. Ass'y

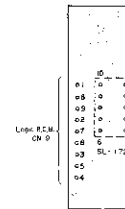


Fig. 7.4

Schematic Ref. No.	Part No.	Description	Schematic Ref. No.	Part No.	Description
	BA04071A	Control Switch P.C.B. Ass'y		BA04209A	RAMM P.C.B. Ass'y
	0B07832A	Control Switch P.C.B.	CND	0B07871A	RAMM P.C.B.
SW401406	0B07219A	Semiswitch		0B08712A	9P-H Connector Ass'y
PL401406	0B08552A	Lamp 12V 25mA		0B08246A	Segment LED
CN4	0B08031B	7P-H Connector A Ass'y			
	0B08630B	8P-H Connector A Ass'y			(1 pce.)
	BA04062A	Lamp P.C.B. B Ass'y			
	0B07838A	Lamp P.C.B. B			
	0B08586A	Lamp 12V 60mA			
PL403	BA04063A	Lamp P.C.B. C Ass'y			
	0B07840A	Lamp P.C.B. C			
PL409	0B08586A	Lamp 12V 60mA			

Schematic Ref. No.	Part No.	Description
F1 M2	BA04202A	Fuse P.C.B. Assy (U.S.A. & Canada)
	0807842A	Fuse P.C.B.
	0808374A	Fuse 1A 250V
	0808342A	Spark Killer
	0M04075A	Fuse Caution A112 (1 pce.)
	0M03782A	Fuse Label 1A (1 pce.)
	0J03834B	Fuse P.C.B. Holder (1 pce.)
	0E00606A	Screw M3x6 Phillips Pan Head (3A) (2 pcs.)
0E00752A	Eyelet (6 pcs.)	
F1 M2	BA04203A	Fuse P.C.B. Assy (Japan)
	0807842A	Fuse P.C.B.
	0808685A	Fuse 1A 250V
	0808363A	Spark Killer
	0M03782A	Fuse Label 1A (1 pce.)
	0J03834B	Fuse P.C.B. Holder (1 pce.)
	0E00606A	Screw M3x6 Phillips Pan Head (3A) (2 pcs.)
	0E00752A	Eyelet (6 pcs.)
F1 F4,5 M2	BA04206A	Fuse P.C.B. Assy (Others)
	0807842A	Fuse P.C.B.
	0808263A	Fuse T 315mA 250V
	0808161A	Fuse T 630mA 250V
	0808240A	Spark Killer
	0808349A	Fuse Clip (6 pcs.)
	0M04073A	Fuse Label 315mA (1 pce.)
	0M04072A	Fuse Label 630mA x2 (1 pce.)
0J03834B	Fuse P.C.B. Holder (1 pce.)	
0E00606A	Screw M3x6 Phillips Pan Head (3A) (2 pcs.)	
0E00752A	Eyelet (6 pcs.)	
F1 F4,5 M2	BA04205A	Fuse P.C.B. Assy (UK & Australia)
	0807842A	Fuse P.C.B.
	0808665A	Fuse T 160mA 250V
	0808161U	Fuse T 630mA 250V
	0808240A	Spark Killer
	0808349A	Fuse Clip (6 pcs.)
	0M04066A	Fuse Label 160mA (1 pce.)
	0M04072A	Fuse Label 630mA x2 (1 pce.)
0J03834B	Fuse P.C.B. Holder (1 pce.)	
0E00606A	Screw M3x6 Phillips Pan Head (3A) (2 pcs.)	
0E00752A	Eyelet (6 pcs.)	
F1 F4,5 M2,3	BA04204A	Fuse P.C.B. Assy (220V Class 2)
	0807842A	Fuse P.C.B.
	0808665A	Fuse T160mA 250V
	0808161U	Fuse T630mA 250V
	0808445A	Spark Killer
	0808349A	Fuse Clip (6 pcs.)
	0M04066A	Fuse Label 160mA (1 pce.)
	0M04072A	Fuse Label 630mA x 2 (1 pce.)
0J03834B	Fuse P.C.B. Holder (1 pce.)	
0E00606A	Screw M3x6 Phillips Pan Head (3A) (2 pcs.)	
0E00752A	Eyelet (6 pcs.)	

7.5. Fuse P.C.B. Assy

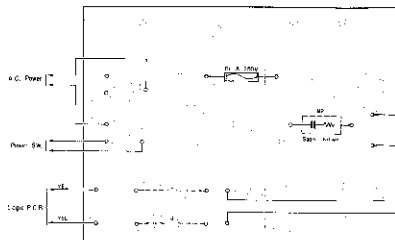


Fig. 7.5.1 U.S.A., Canada and Japan

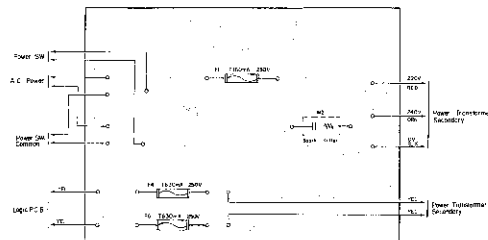


Fig. 7.5.3 UK and Australia

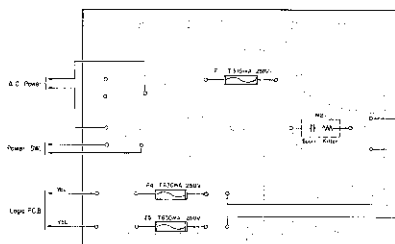


Fig. 7.5.2 Others

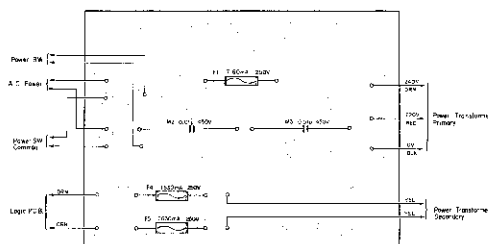


Fig. 7.5.4 220 V Class 2

Schematic Ref. No.	Part No.	Description	Schematic Ref. No.	Part No.	Description
	BA04207A	Auto Azimuth P.C.B. Ass'y		BA04176A	Pin Jack P.C.B. Ass'y
	0807872A	Auto Azimuth P.C.B.	FC5	0807835A	Pin Jack P.C.B.
IC901,905	0806124B	IC μ PC4558C		0805238A	5P Flat Cable 50mm
IC902	0806216A	IC RC4556D		0808709A	Jack Unit (1 pce.)
IC903	0806213A	IC TC4013BP		08E0037A	Earth Lug B5 (1 pce.)
IC904	0806244A	IC TC4073BP			
Q801,802	0801872A	Transistor 2SC945 (L)		BA04070A	Auto Shut-off P.C.B. Ass'y
R915,906				0807839A	Auto Shut-off P.C.B.
907,909				0801872A	Transistor 2SC945 (L)
910			Q449	0805229A	Photo Transistor PH104
Q803	0806066A	Transistor 2SD471	Q450	0805181A	Silicon Diode 1SS53
Q804	0806069A	Transistor 2SB564	D470	0805671A	Carbon Resistor 2.2M ERD-25T J
Q806	0806013A	Transistor 2SA733	R603	0805615A	Carbon Resistor 22K ERD-25T J
D701,702	0806191A	Silicon Diode 1SS53 (10 pcs.)	R604	0806215A	Fail Safe Type Resistor 100 RDF-25S J
801,802			R605	0801888A	Carbon Resistor 10K ERD-25T J
901-905			R608	0801405A	Electrolytic Capacitor 1 μ 50V
909			C452	0808552A	Lamp 12V 25mA
VRS01	0809107A	Semi-fixed Volume 500K	PL407		
R701,801	0805625A	Carbon Resistor 220K ERD-25T J			
912,919					
R702,802	0801888A	Carbon Resistor 100K ERD-25T J			
929,930					
R703,803	0805676A	Carbon Resistor 470 ERD-25T J			
R704,804	0805627A	Carbon Resistor 330K ERD-25T J			
904,927					
R705,706	0805500A	Carbon Resistor 33K ERD-25T J			
805,906					
905,908					
907,908					
910,925					
R707,807	0805671A	Carbon Resistor 2.2M ERD-25T J			
920,923					
928					
R801,802	0805776A	Carbon Resistor 1M ERD-25T J			
900,918					
R806	0801891A	Carbon Resistor 3.3K ERD-25T J			
R811,812	0801887A	Carbon Resistor 5.6K ERD-25T J			
R813,822	0801888A	Carbon Resistor 10K ERD-25T J			
R814,916	0805615A	Carbon Resistor 22K ERD-25T J			
924,931					
R816	0809380A	Carbon Resistor 1.5M ERD-25T J			
R821	0805927A	Carbon Resistor 68K ERD-25T J			
R826	0801652A	Carbon Resistor 6.8K ERD-25T J			
R832	0805626A	Carbon Resistor 150K ERD-25T J			
R933	0805641A	Carbon Resistor 47K ERD-25T J			
C701,801	0801405A	Electrolytic Capacitor 1 μ 50V			
901,902					
C702,802	0804412A	Electrolytic Capacitor 10 μ 15V			
C704,804	0801802A	Mylar Capacitor 2200P 50V J			
C705,805	0801676A	Mylar Capacitor 0.05 μ 50V			
C903	0809372A	Electrolytic Capacitor 2.2 μ 25V			
CB04	080572A	Tantalum Capacitor 0.22 μ 35V			
ON10	0808656A	2P-T Post			

7.6. Auto Azimuth P.C.B. Ass'y

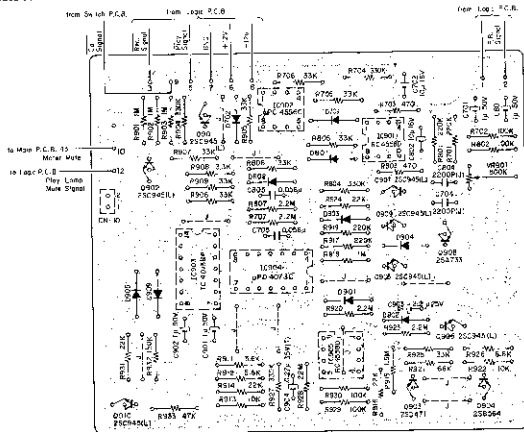


Fig. 7.6 Note: Diode is 1SS53 unless otherwise specified.

7.7. Pin Jack P.C.B. Ass'y

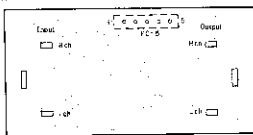


Fig. 7.7

7.8. Auto Shut-off P.C.B. Ass'y

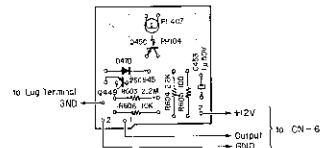


Fig. 7.8

Note: Diode is 1SS53 unless otherwise specified.

7.9. Switch P.C.B. Ass'y

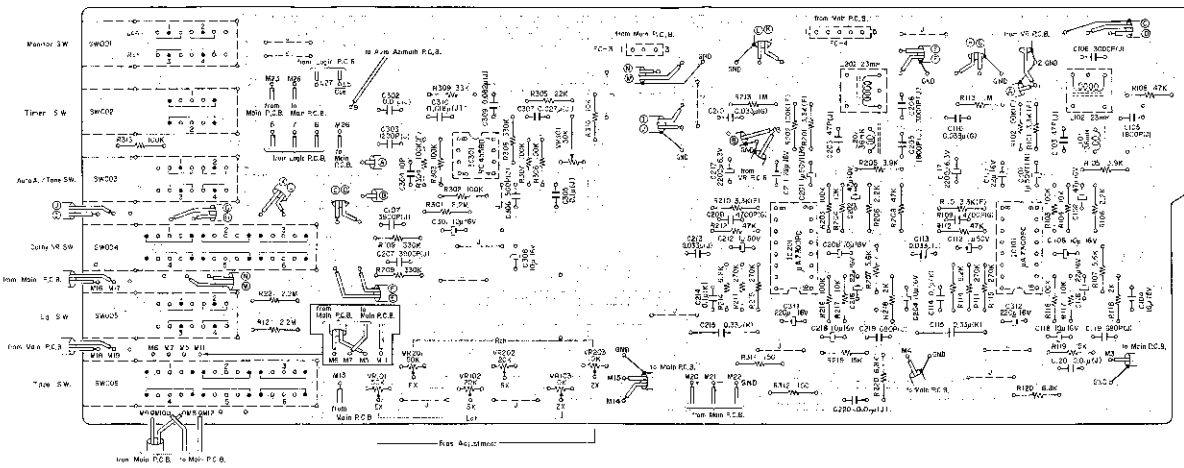


Fig. 7.9

Note: Diode is 1SS53 unless otherwise specified.

7.10. Record Cal. P.C.B. Ass'y

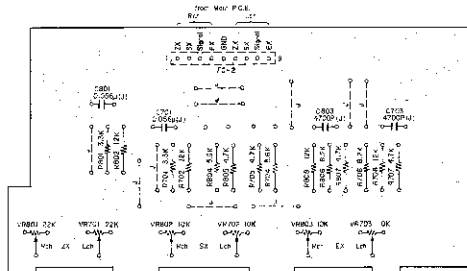


Fig. 7.10

7.11. Volume P.C.B. Ass'y

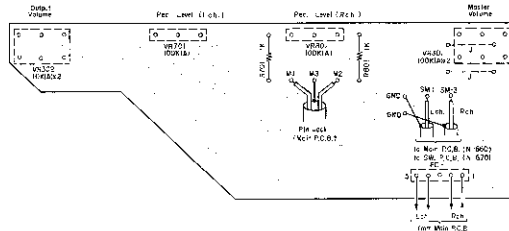


Fig. 7.11

Schematic Ref. No.	Part No.	Description	Schematic Ref. No.	Part No.	Description
	8A04183A	Switch P.C.B. Assy			
	— Tone Osc. —		C111,116	0801862A	Electrolytic Capacitor 22 μ 16V
			211,216		
			C112,212	0801405A	Electrolytic Capacitor 1 μ 50V
			C113,213	0805863A	Mylar Capacitor 0.033 μ 50V J
			C114,214	0801603A	Mylar Capacitor 0.1 μ 50V K
			C115,215	0801565A	Mylar Capacitor 0.33 μ 50V K
			C117,217	0808257A	Electrolytic Capacitor 2200 μ 6.3V
			C119,219	0809235A	PP Capacitor 880P 100V J
			C120,220	0805681A	Mylar Capacitor 0.01 μ 50V J
			C311,312	0801398A	Electrolytic Capacitor 220 μ 16V
				0806201A	IC Socket 16P (2 pck.)
					— Miscellaneous —
IC301	0806124B	IC RC4558D	0807869A	Switch P.C.B.	
VR301	0807058A	Semi-fixed Volume 50K	VR101,201	0807058A	Semi-fixed Volume 50K
R301	0805671A	Carbon Resistor 2.2K ERD-25T J	VR102,202	0807215A	Semi-fixed Volume 20K
R302,203	0801889A	Carbon Resistor 100K ERD-25T J	VR103,203	0801162A	Semi-fixed Volume 10K
305,307			R313	0801889A	Carbon Resistor 100K ERD-25T J
R304	0806305A	Metal Film Resistor 100K SN14K2E F	SW001	0807286A	Lever Switch 4-2 O
R305	0805615A	Carbon Resistor 22K ERD-25T J	SW002	0807284A	Lever Switch 2-3 S
R308	0805627A	Carbon Resistor 330K ERD-25T J	SW003,005	0807285A	Lever Switch 4-2 S
R309	0805509A	Carbon Resistor 33K ERD-25T J	SW004,006	0807300A	Lever Switch 6-3 S
R310	0801858A	Carbon Resistor 10K ERD-25T J	FC3	0805240A	3P Flat Cable 50mm
C301,308	0801412A	Electrolytic Capacitor 10 μ 16V	FC4	0805238A	5P Flat Cable 50mm
C302	0805681A	Mylar Capacitor 0.01 μ 50V J			
C303	0805667A	Mylar Capacitor 1200P 50V J			
C304	0809277A	Ceramic Capacitor 10P 50V J			
C305	0801750A	Mylar Capacitor 0.1 μ 50V J			
C306	0809323A	PP Capacitor 560P 100V J			
C307	0809045A	Mylar Capacitor 0.027 μ 50V J			
C309	0805695A	Mylar Capacitor 0.082 μ 50V J			
C310	0805832A	Mylar Capacitor 0.018 μ 50V J			
	— Rec. Dolby NR —				
IC101,201	0806200A	IC μ A7300PC		8A04188A	Record Cal. P.C.B. Assy
L101,201	0803919B	Inductor 36mH		0807867A	Record Cal. P.C.B.
L102,202	0805634A	15K Coil 23mH	VR701,801	0807276A	Semi-fixed Volume 22K
R101,110	0809317A	Metal Film Resistor 3.3K SN14K2E F	VR702,703	0807319A	Semi-fixed Volume 10K
201,210			802,803		
R102,202	0809305A	Metal Film Resistor 100K SN14K2E F	R701,801	0801681A	Carbon Resistor 3.3K ERD-25T J
R103,116	0801889A	Carbon Resistor 100K ERD-25T J	R702,706	0808263A	Carbon Resistor 10K ERD-25T J
203,216			802,806		
R104,117	0801889A	Carbon Resistor 10K ERD-25T J	R704,804	0801887A	Carbon Resistor 5.6K ERD-25T J
204,217			R705,707	0801846A	Carbon Resistor 4.7K ERD-25T J
R105,205	0806576A	Carbon Resistor 3.6K ERD-25T J	805,807		
R106,206	0805622A	Carbon Resistor 2.2K ERD-25T J	R706,806	0801856A	Carbon Resistor 8.2K ERD-25T J
R107,207	0801887A	Carbon Resistor 5.6K ERD-25T J	C701,801	0805813A	Mylar Capacitor 0.056 μ 50V J
R108,112	0806641A	Carbon Resistor 47K ERD-25T J	C703,803	0806952A	Mylar Capacitor 4700P 50V J
208,212			FC2	0805245A	9P Flat Cable 90mm
R109,209	0805627A	Carbon Resistor 330K ERD-25T J			
R111,115	0805620A	Carbon Resistor 270K ERD-25T J		8A04175A	Volume P.C.B. Assy
211,215				0807866A	Volume P.C.B.
R113,213	0805776A	Carbon Resistor 1M ERD-25T J	VR301	0807203A	Volume 100K (A) x 2
R114,214	0809277A	Carbon Resistor 6.2K ERD-25T J	VR302	0807204A	Volume 10K (A) x 2
R115,215	0805201A	Carbon Resistor 2K ERD-25T J	VR701,801	0807202A	Volume 100K (A)
R119,219	0801683A	Carbon Resistor 15K ERD-25T J	R701,801	0801857A	Carbon Resistor 1K ERD-25T J
R120,220	0801682A	Carbon Resistor 6.8K ERD-25T J	FC1	0806238A	5P Flat Cable 50mm
R121,221	0805671A	Carbon Resistor 2.2M ERD-25T J			
R311,312	0809213A	Fail Safe Type Resistor 150 RDF-25S J			
C101,201	0809223A	Electrolytic Capacitor 1 μ 50V (LN)			
C102,202	0801836A	Electrolytic Capacitor 4 μ 10V			
C103,203	0809242A	Mica Capacitor 47P 50V J			
C104,118	0801412A	Electrolytic Capacitor 10 μ 16V			
204,218					
C105,205	0801913A	Mylar Capacitor 1800P 50V J			
C106,206	0809262A	PP Capacitor 3300P 100V J			
C107,207	0801804A	Mylar Capacitor 3300P 50V J			
C108,208	0809386A	Electrolytic Capacitor 10 μ 16V (LN)			
C109,209	0809191A	PP Capacitor 4700P 100V G			
C110,210	0806240A	PP Capacitor 0.033 μ 100V G			

7.12. Main P.C.B. Ass'y

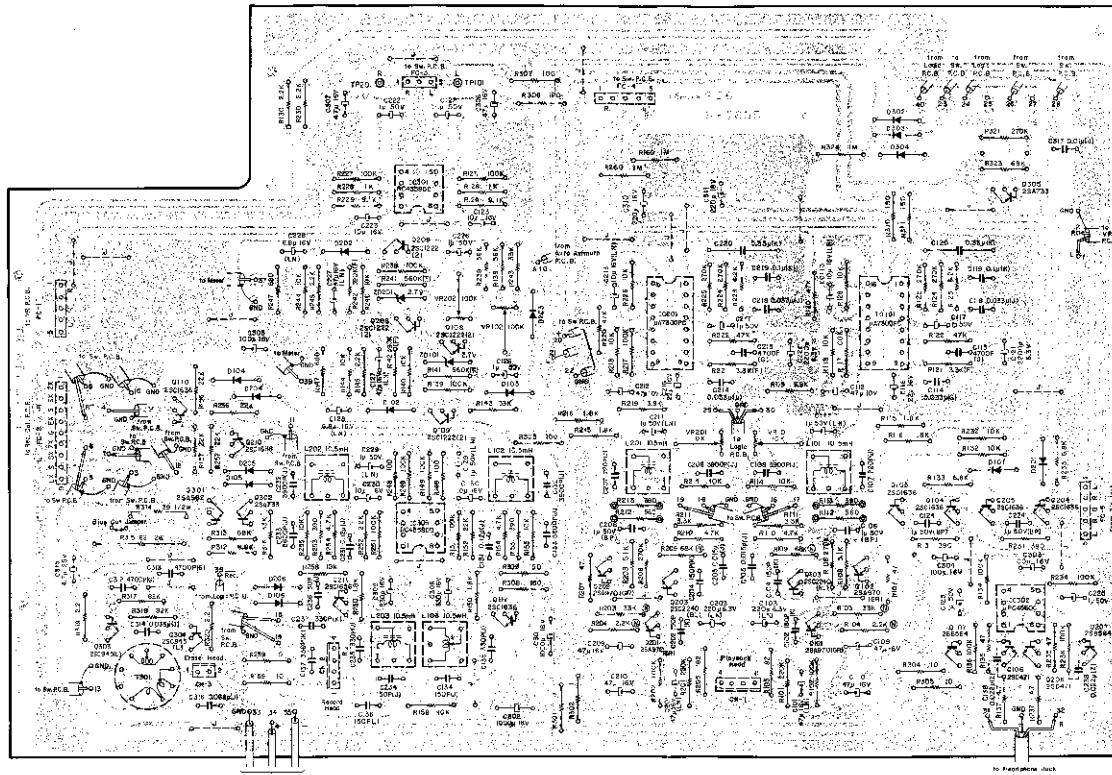


Fig. 7.12

Note: Diode is 1SS53 unless otherwise specified.

Schematic Ref. No.	Part No.	Description	Schematic Ref. No.	Part No.	Description	Schematic Ref. No.	Part No.	Description	Schematic Ref. No.	Part No.	Description
BA04184A		Main P.C.B. Assy	C119,219	0801603A	Mylar Capacitor 0.1u 50V K	C124,224	0809187A	Electrolytic Capacitor 1u 50V (BP)			- Miscellaneous -
		-- PB Eq. Amp. --	C120,220	0801602A	Mylar Capacitor 0.33u 50V K	C301,302	0801397A	Electrolytic Capacitor 1000u 16V			0807895C Carbon Resistor 2.2K ERD-25T J
			C121,221	0809257A	Electrolytic Capacitor 2200u 6.3V	C306,307	0801403A	Electrolytic Capacitor 47u 16V			0805821A Mylar Capacitor 0.01u 50V J
			C310,311	0801956A	Electrolytic Capacitor 220u 16V				R130,230	CN1,2	4P-T Post
Q103,102		25A970 (GR) Transistor			-- Rec. Amp. --				CN3		0806654A 2P-T Post
Q103,203	0806142A	Transistor 25C2240 (BL)	IC303	0806148A	IC RC4556DD	IC302	0806217A	IC RC4560D			
L101,201	0809068A	Trap Coil 10.5mH	Q110,111	0808070A	Transistor 25C1636	Q106,206	0806066A	Transistor 25D471			
VF101,201	0807235A	Semi-fixed Volume 10K				Q107,207	0806069A	Transistor 25B66A			
R101,201	0805625A	Carbon Resistor 220K ERD-25T J				R134,136	0801869A	Carbon Resistor 100K ERD-25T J			
R102,202	0801889A	Carbon Resistor 100K ERD-25T J	Q302	0808013A	Transistor 25A733						
R103,203	0809310A	Carbon Resistor 3.3K ERD-25T J (Noiseless)	D104,105	0806181A	Silicon Diode 1SS53	Q34,236					
			100,204			R135,235	0801706A	Carbon Resistor 47 ERD-25T J			
R104,204	0806309A	Carbon Resistor 2.2K ERD-25T J (Noiseless)	205,206			R137,237	0809321A	Fail Safe Type Resistor 4.7 RDF-25S J			
			302,303			R303,304	0809216A	Fail Safe Type Resistor 10 RDF-25S J			
R105,205	0805631A	Carbon Resistor 82 ERD-25T J	L102,103	0800068A	Trap Coil 10.5mH	C126,226	0801405A	Electrolytic Capacitor 1u 50V			
R106,206	0805620A	Carbon Resistor 270K ERD-25T J	R148,248	0801679A	Carbon Resistor 100 ERD-25T J	D138,238	0809291A	Ovenic Capacitor 0.022u 50V 2			
R107,207	0801706A	Carbon Resistor 47 ERD-25T J	R149,151	0801889A	Carbon Resistor 100K ERD-25T J	C303,304	0801400A	Electrolytic Capacitor 100u 16V			
R108,208	0803314A	Carbon Resistor 5.1K ERD-25T J									
R109,209	0809311A	Carbon Resistor 68K ERD-25T J (Noiseless)	R150,250	0805614A	Carbon Resistor 1.8K ERD-25T J						
			R152,155	0805615A	Carbon Resistor 22K ERD-25T J						
R110,210	0801946A	Carbon Resistor 4.7K ERD-25T J									
R111,211	0801891A	Carbon Resistor 3.3K ERD-25T J									
R112,212	0805575A	Carbon Resistor 560 ERD-25T J									
R113,213	0806891A	Carbon Resistor 390 ERD-25T J									
R114,214	0801988A	Carbon Resistor 10K ERD-25T J									
R115,116	0809514A	Carbon Resistor 1.8K ERD-25T J									
		216,216									
C101,201	0809216A	Electrolytic Capacitor 47u 16V (LN)									
C102,104	0809281A	Ceramic Capacitor 150P 50V K									
202,204											
C103,203	0809151A	Electrolytic Capacitor 220u 6.3V (LN)									
C105,205	0809577A	Mylar Capacitor 0.015u 50V J									
C106,206	0809187A	Electrolytic Capacitor 1u 50V (BP)									
C107,207	0809247A	Mica Capacitor 220P 50V J									
C108,208	0801804A	Mylar Capacitor 3900P 50V J									
C109,110	0801403A	Electrolytic Capacitor 47u 16V									
209,210											
		-- PB Delay NR --									
IC101,201	0806200A	IC uA7300PC									
R117,217	0801889A	Carbon Resistor 100K ERD-25T J									
R118,126	0801888A	Carbon Resistor 10K ERD-25T J									
218,226											
R119,219	0805575A	Carbon Resistor 3.9K ERD-25T J									
R120,122	0805641A	Carbon Resistor 47K ERD-25T J									
220,222											
R121,221	0809317A	Metal Film Resistor 3.3K SN14K2E F									
R123,223	0809271A	Carbon Resistor 6.2K ERD-25T J									
R124,126	0805620A	Carbon Resistor 270K ERD-25T J									
224,225											
R160,260	0805776A	Carbon Resistor 1M ERD-25T J									
R310,311	0809213A	Fail Safe Type Resistor 150 RDF-25S J									
C111,211	0809223A	Electrolytic Capacitor 1u 50V (LN)									
C112,212	0801836A	Electrolytic Capacitor 47u 10V									
C113,213	0809386A	Electrolytic Capacitor 10u 16V (LN)									
C114,214	0809240A	PP Capacitor 0.033u 100V G									
C115,215	0808191A	PP Capacitor 4700P 100V G									
C118,216	0801982A	Electrolytic Capacitor 22u 16V									
C117,217	0801406A	Electrolytic Capacitor 1u 50V									
C118,218	0805983A	Mylar Capacitor 0.003u 50V J									

7.13. Logic P.C.B. Ass'y

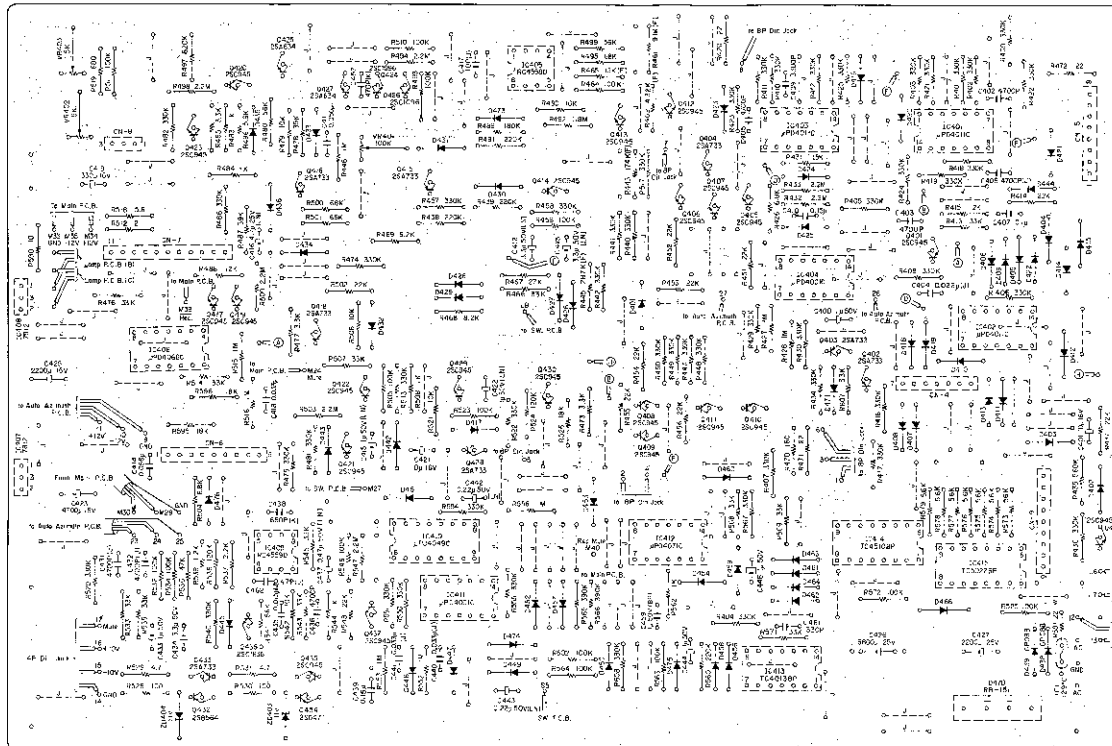


Fig. 7.13

Note: Diode is 1SS53 unless otherwise specified.

Schematic Ref. No.	Part No.	Description	Schematic Ref. No.	Part No.	Description	Schematic Ref. No.	Part No.	Description	Schematic Ref. No.	Part No.	Description
	BAD4185A	Logic P.C.B. Ass'y	R432,433 494,498 503,509	0B05671A	Carbon Resistor 2.2M ERD-25T J	C457	0B05286A	Ceramic Capacitor 470P 50V K	C442,443	0B09220A	Electrolytic Capacitor 0.22µ 50V (LN)
	- Logic -		R435	0B05794A	Carbon Resistor 560K ERD-25T J	CN4	0B08443A	7P-T Post	C459	0B09187A	Electrolytic Capacitor 1µ 50V (BP)
			R438,439	0B05625A	Carbon Resistor 220K ERD-25T J	CN5	0B08444A	8P-T Post	C461	0B01190A	Ceramic Capacitor 330P 100V
IC401,402 403	0B06178A	IC #PD4011C	R443	0B09387A	Metal Film Resistor 174K SN14K2E F	CN6	0B08445A	9P-T Post	C452	0B08280A	Ceramic Capacitor 47P 50V J
IC404	0B06143A	IC #PD4001C	R445	0B09366A	Metal Film Resistor 287K SN14K2E F	CN7	0B08555A	11P-T Post		- Miscellaneous -	
IC405	0B06124B	IC #PC4588C	R481	0B09326A	Metal Film Resistor 3.1K SN14K2E F	CN8	0B08553A	3P-T Post		0B07670B	Logic P.C.B.
IC406	0B05344A	IC #PD4066C	R482	0B09365A	Metal Film Resistor 4.32K SN14K2E F	TF1	0B08715A	Thermal Fuse		0J04103A	Heat Sink (1 pc.)
IC407	0B06192A	Regulator +12V #A7912	R459,484	0B01899A	Carbon Resistor 100K ERD-25T J		- RAMM -			0E00890A	BT Screw M3x6 Philips Binding Head (2 pcs.)
IC408	0B06190A	Regulator -12V #A7912	493,505 510,511 523,525			IC409	0B06127A	IC RC4558D		0E00896A	Screw M3x6 Philips Binding Head (2 pcs.)
Q401	0B06190A	Transistor 2SC945 (A) (21 pcs.)	R465	0B09340A	Metal Film Resistor 15K SN14K2E F	IC410	0B06250A	IC µPD4049C		0E00607A	Nut Hex. M3 (2 pcs.)
406-414 417			R467	0B09743A	Carbon Resistor 27K ERD-25T J	IC411	0B06143A	IC µPD4001C			
419-423 429,430			R468,469	0B01856A	Carbon Resistor 8.2K ERD-25T J	IC412	0B06214A	IC µPD4071C			
435,447			R470	0B05578A	Carbon Resistor 180 ERD-25T J	IC413	0B06213A	IC TC4013BP			
Q402,403	0B06013A	Transistor 2SA733	R473,477	0B01881A	Carbon Resistor 3.3K ERD-25T J	IC414	0B06212A	IC TC45106P			
404,415 416,418 428,433			485			IC415	0B06211A	IC TC50228P			
Q424,426	0B06020A	Transistor 2SC1056	R476,487	0B01864A	Carbon Resistor 30K ERD-25T J	D445	0B06100A	Transistor 2SC1036			
Q425,427	0B06012A	Transistor 2SA834	R479,490	0B01888A	Carbon Resistor 10K ERD-25T J	447,454	0B01818A	Silicon Diode 1S553 (21 pcs.)			
Q432	0B06069A	Transistor 2SB564	506,521			456,464					
Q434	0B06066A	Transistor 2SD471	R480,499	0B05508A	Carbon Resistor 56K ERD-25T J	466,474					
ZD403,404	0B06231A	Zener Diode RD11E82	R483,484	0B01857A	Carbon Resistor 1K ERD-25T J	475					
D401-436	0B01909A	Silicon Diodes 1S1555 (42 pcs.)	508	0B05640A	Carbon Resistor 180K ERD-25T J	R632,634	0B01889A	Carbon Resistor 100K ERD-25T J			
442,444 471,473 476			R489	0B05660A	Carbon Resistor 1.8M ERD-25T J	546,563					
D438,439	0B06109A	Silicon Diode GP088	R492	0B05668A	Carbon Resistor 1.8M ERD-25T J	564,572					
D470	0B06193A	Diode Bridge RB151	R495,500	0B05692A	Carbon Resistor 68K ERD-25T J	583,589					
VR401	0B03832A	Semi-fixed Volume 100K	501	0B01887A	Carbon Resistor 5.6K ERD-25T J	571					
VR402,403	0B03831A	Semi-fixed Volume 5K	R496	0B09320A	Carbon Resistor 820K ERD-25T J	R536	0B05641A	Carbon Resistor 47K ERD-25T J			
R401-412	0B05627A	Carbon Resistor 330K ERD-25T J (43 pcs.)	R497	0B09381A	Fail Safe Type Resistor 2. RDF-25S J	R537	0B05622A	Carbon Resistor 2.2K ERD-25T J			
416-419 421-425 428,430 434,436 440-442 443,450 457,458 474,475 481,482			R512	0B09381A	Fail Safe Type Resistor 5.6 RDF-25S J	R538	0B05621A	Carbon Resistor 120K ERD-25T J			
486,513 517,520 522			R518	0B09217A	Fail Safe Type Resistor 6.8 RDF-25S J	R539	0B05623A	Carbon Resistor 1.2K ERD-25T J			
R413,466 476,507 514,607	0B05509A	Carbon Resistor 33K ERD-25T J	R519	0B05794A	Carbon Resistor 680 ERD-25T J	R640,650	0B05627A	Carbon Resistor 330K ERD-25T J			
R414,437 451-456 502	0B05615A	Carbon Resistor 22K ERD-25T J (9 pcs.)	R524	0B05621A	Carbon Resistor 120K ERD-25T J	602					
R415,488 R420,471 472	0B09293A	Carbon Resistor 12K ERD-25T J	R626,596	0B05606A	Carbon Resistor 18K ERD-25T J	R633,535	0B05509A	Carbon Resistor 33K ERD-25T J			
R426,504 R427,428 448,515 516	0B01892A	Carbon Resistor 6.8K ERD-25T J	R529,530	0B09216A	Fail Safe Type Resistor 100 RDF-25S J	543,545					
R431	0B06098A	Carbon Resistor 1.5K ERD-25T J	R529,531	0B09321A	Fail Safe Type Resistor 4.7 RDF-25S J	589,589					
			R581	0B09376A	Fail Safe Type Resistor 22 RSP-18 J	608					
			R590	0B09216A	Fail Safe Type Resistor 10 RDF-25S J	R641	0B05508A	Carbon Resistor 56K ERD-25T J			
			C401,421	0B01412A	Electrolytic Capacitor 10µ 16V	R642	0B01889A	Carbon Resistor 10K ERD-25T J			
			C402,403	0B05565A	Mylar Capacitor 4700P 50V	R643,562	0B01857A	Carbon Resistor 1K ERD-25T J			
			C404	0B05582A	Mylar Capacitor 0.022µ 50V J	R546	0B05619A	Carbon Resistor 2.2M ERD-25T J			
			C407	0B00093A	Mylar Capacitor 0.1µ 50V	R548	0B05617A	Carbon Resistor 22K ERD-25T J			
			C408	0B01405A	Electrolytic Capacitor 1µ 50V	R552,553	0B05776A	Carbon Resistor 1M ERD-25T J			
			C410	0B09188A	Mylar Capacitor 3300P 50V	558					
			C411,414	0B09324A	Electrolytic Capacitor 3.3µ 60V (LN)	R573,574	0B01887A	Carbon Resistor 5.6K ERD-25T J			
			C412,413	0B09223A	Electrolytic Capacitor 1µ 50V (LN)	575,576					
			C415,422	0B09173A	Electrolytic Capacitor 4.7µ 25V (LN)	R577,578					
			C416	0B09170A	Electrolytic Capacitor 10µ 50V J	579					
			C417	0B09277A	Ceramic Capacitor 10P 50V J						
			C418	0B09513A	Mylar Capacitor 0.033µ 50V						
			C419	0B01502A	Electrolytic Capacitor 330µ 16V						
			C423	0B09377A	Electrolytic Capacitor 4700µ 16V						
			C425	0B01406A	Electrolytic Capacitor 2200µ 16V						
			C426	0B09374A	Electrolytic Capacitor 6800µ 25V						
			C427	0B05669A	Electrolytic Capacitor 2200µ 25V						

8. MECHANISM ASS'Y AND PARTS LIST

8.1. Synthesis

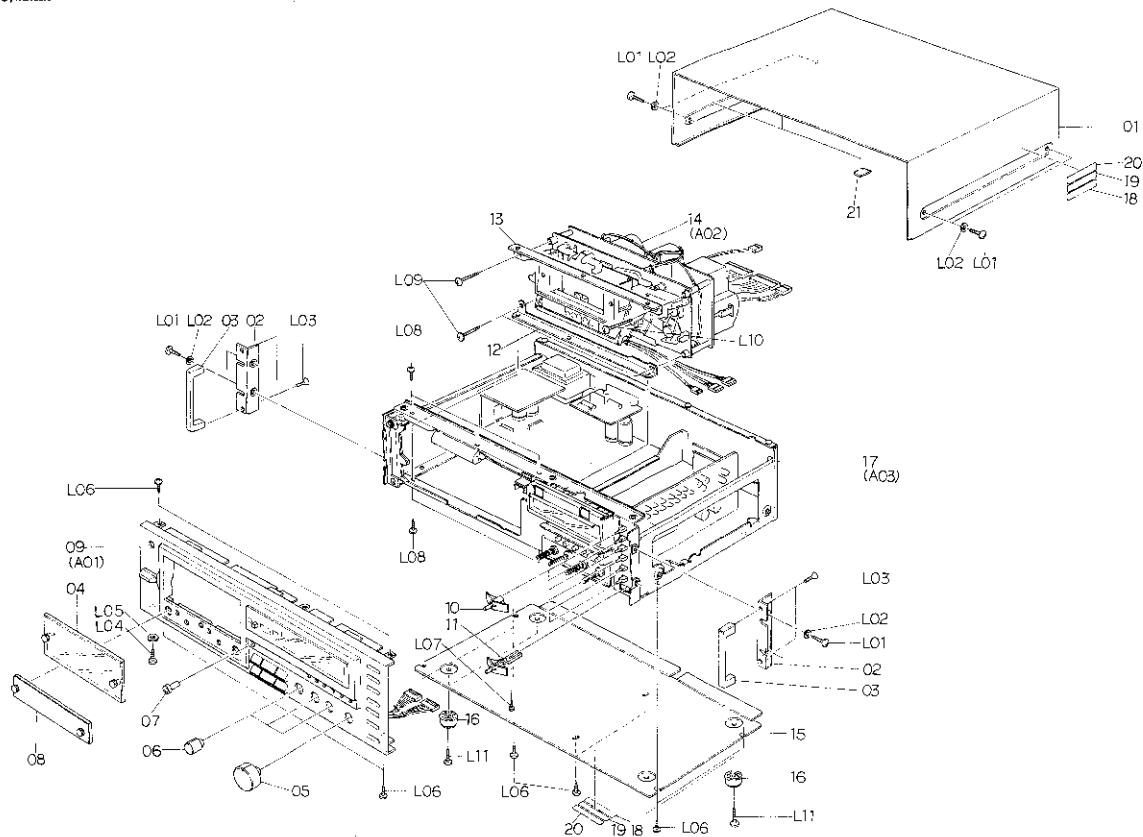


Fig. 8.1

Schematic Ref. No.	Part No.	Description	Q'ty	Schematic Ref. No.	Part No.	Description	Q'ty
		Synthesis Serial No.: A11505650 -				Synthesis Serial Nos.: A11505640 - A11505649	
01	0H03723D	Top Cover	1				
02	0H03788B	Side Panel B	2	01	0H03723D	Top Cover	1
03	0H03763B	Handle B	2	02	0H03788B	Side Panel B	2
04	HA03882A	Cassette Case Cover Ass'y	1	03	0H03763B	Handle B	2
05	0H03732B	Volume Knob A	1	04	HA03882A	Cassette Case Cover Ass'y	1
(05)	0H03733A	Volume Knob Sleeve A	1	05	0H03732B	Volume Knob A	1
06	0H03738B	Volume Knob B	3	(05)	0H03733A	Volume Knob Sleeve A	1
(06)	0H03739A	Volume Knob Sleeve B	3	06	0H03738B	Volume Knob B	3
07	0H03725A	Pitch Control Knob	1	(06)	0H03739A	Volume Knob Sleeve B	3
08	HA03981A	Azimuth Alignment Cover Ass'y	1	07	0H03725A	Pitch Control Knob	1
09	HA03959A	Front Panel Ass'y	1	08	HA03981A	Azimuth Alignment Cover Ass'y	1
10	HA03838B	Function Switch Knob Ass'y	6	09	HA03959A	Front Panel Ass'y	1
11	0H03741A	Power Switch Knob	1	10	HA03838B	Function Switch Knob Ass'y	6
12	0J04054B	Mechanism Holder B	1	11	0H03741A	Power Switch Knob	1
13	0J04053A	Mechanism Holder A	1	12	0J04054B	Mechanism Holder B	1
14	CA08229A	Mechanism Ass'y 670ZX	1	13	0J04053A	Mechanism Holder A	1
15	0H03757A	Bottom Cover	1	14	CA08151C	Mechanism Ass'y 670ZX	1
16	0J03825A	Lag S	4	15	0H03757A	Bottom Cover	1
17	JA03663A	Chassis Ass'y (U.S.A. & Canada)	1	16	0J03825A	Lag S	4
	JA03664A	Chassis Ass'y (Japan)	1	17	JA03663A	Chassis Ass'y (U.S.A. & Canada)	1
	JA03666A	Chassis Ass'y (220V Class 2)	1		JA03664A	Chassis Ass'y (Japan)	1
	JA03667A	Chassis Ass'y (Australia)	1		JA03666A	Chassis Ass'y (220V Class 2)	1
	JA03668A	Chassis Ass'y (UK)	1		JA03667A	Chassis Ass'y (Australia)	1
	JA03665A	Chassis Ass'y (Others)	1		JA03668A	Chassis Ass'y (UK)	1
18	0M03799A	Caution Label G	2		JA03665A	Chassis Ass'y (Others)	1
*19	0M03800A	Caution Label H (U.S.A. & Canada)	2	18	0M03799A	Caution Label G	2
*20	0M03883A	Lamp Caution Label (U.S.A. & Canada)	2	*19	0M03800A	Caution Label H (U.S.A. & Canada)	2
				*20	0M03883A	Lamp Caution Label (U.S.A. & Canada)	2
21	0J04080A	Top Cover Himelton	4				
L01	0E00915A	BT Screw M4x8 Philips Binding Head (Black Chromate)	8	21	0J04080A	Top Cover Himelton	4
L02	0E00736A	Washer 4mm (Black Chromate)	8	L01	0E00915A	BT Screw M4x8 Philips Binding Head (Black Chromate)	8
L03	0E00908A	Screw M4x6 Philips Countersunk Head (Black Chromate)	4	L02	0E00736A	Washer 4mm (Black Chromate)	8
L04	0E00921A	BT Screw M3x8 Philips Binding Head (Black Chromate)	1	L03	0E00908A	Screw M4x6 Philips Countersunk Head (Black Chromate)	4
L05	0E00677A	Washer 3mm (Black Chromate)	1	L04	0E00921A	BT Screw M3x8 Philips Binding Head (Black Chromate)	1
L06	0E00857A	BT Screw M3x6 Philips Binding Head	12	L05	0E00677A	Washer 3mm (Black Chromate)	1
L07	0E00814A	ST Screw M2x4 Philips Pan Head	1	L06	0E00857A	BT Screw M3x6 Philips Binding Head	12
L08	0E00920A	Screw M3x6 Philips Polywave	6	L07	0E00814A	ST Screw M2x4 Philips Pan Head	1
L09	0E00867A	BT Screw M4x15 Philips Binding Head	3	L08	0E00920A	Screw M3x6 Philips Polywave	6
L10	0E00878A	BT Screw M4x20 Philips Binding Head	1	L09	0E00867A	BT Screw M4x15 Philips Binding Head	3
L11	0E00852A	BT Screw M4x12 Philips Binding Head	4	L10	0E00878A	BT Screw M4x20 Philips Binding Head	1
				L11	0E00852A	BT Screw M4x12 Philips Binding Head	4

*: Depends on the versions.

*: Depends on the versions.

Schematic Ref. No.	Part No.	Description	Q'ty	Schematic Ref. No.	Part No.	Description	Q'ty
		Synthesis Serial Nos.: A11504731 — A11505639				Synthesis Serial Nos.: A11501001 — A11504730	
01	0H03723D	Top Cover	1	01	0H03723D	Top Cover	1
02	0H03788B	Side Panel B	2	02	0H03788B	Side Panel B	2
03	0H03763B	Handle B	2	03	0H03763B	Handle B	2
04	HA03882A	Cassette Case Cover Ass'y	1	04	HA03882A	Cassette Case Cover Ass'y	1
05	0H03732B	Volume Knob A	1	05	0H03732B	Volume Knob A	1
(05)	0H03733A	Volume Knob Sleeve A	1	(05)	0H03733A	Volume Knob Sleeve A	1
06	0H03738B	Volume Knob B	3	06	0H03738B	Volume Knob B	3
(06)	0H03739A	Volume Knob Sleeve B	3	(06)	0H03739A	Volume Knob Sleeve B	3
07	0H03725A	Pitch Control Knob	1	07	0H03725A	Pitch Control Knob	1
08	HA03981A	Azimuth Alignment Cover Ass'y	1	08	HA03981A	Azimuth Alignment Cover Ass'y	1
09	HA03959A	Front Panel Ass'y	1	09	HA03959A	Front Panel Ass'y	1
10	HA03838B	Function Switch Knob Ass'y	6	10	HA03838B	Function Switch Knob Ass'y	6
11	0H03741A	Power Switch Knob	1	11	0H03741A	Power Switch Knob	1
12	0J04054B	Mechanism Holder B	1	12	0J04054B	Mechanism Holder B	1
13	0J04053A	Mechanism Holder A	1	13	0J04053A	Mechanism Holder A	1
14	CA08151B	Mechanism Ass'y 670ZX	1	14	CA08151A	Mechanism Ass'y 670ZX	1
15	0H03757A	Bottom Cover	1	15	0H03757A	Bottom Cover	1
16	0J03825A	Leg S	4	16	0J03825A	Leg S	4
17	JA03663A	Chassis Ass'y (U.S.A. & Canada)	1	17	JA03663A	Chassis Ass'y (U.S.A. & Canada)	1
	JA03664A	Chassis Ass'y (Japan)	1		JA03664A	Chassis Ass'y (Japan)	1
	JA03666A	Chassis Ass'y (220V Class 2)	1		JA03666A	Chassis Ass'y (220V Class 2)	1
	JA03667A	Chassis Ass'y (Australia)	1		JA03667A	Chassis Ass'y (Australia)	1
	JA03668A	Chassis Ass'y (UK)	1		JA03668A	Chassis Ass'y (UK)	1
	JA03665A	Chassis Ass'y (Others)	1		JA03665A	Chassis Ass'y (Others)	1
18	0M03799A	Caution Label G	2	18	0M03799A	Caution Label G	2
* 19	0M03800A	Caution Label H (U.S.A. & Canada)	2	* 19	0M03800A	Caution Label H (U.S.A. & Canada)	2
* 20	0M03883A	Lamp Caution Label (U.S.A. & Canada)	2	* 20	0M03883A	Lamp Caution Label (U.S.A. & Canada)	2
21	0J04080A	Top Cover Himeion	4	21	0J04080A	Top Cover Himeion	4
L01	0E00915A	BT Screw M4x8 Phillips Binding Head (Black Chromate)	8	L01	0E00915A	BT Screw M4x8 Phillips Binding Head (Black Chromate)	8
L02	0E00736A	Washer 4mm (Black Chromate)	8	L02	0E00736A	Washer 4mm (Black Chromate)	8
L03	0E00908A	Screw M4x6 Phillips Countersunk	4	L03	0E00908A	Screw M4x6 Phillips Countersunk	4
L04	0E00921A	BT Screw M3x8 Phillips Binding Head (Black Chromate)	1	L04	0E00921A	BT Screw M3x8 Phillips Binding Head (Black Chromate)	1
L05	0E00677A	Washer 3mm (Black Chromate)	1	L05	0E00677A	Washer 3mm (Black Chromate)	1
L06	0E00857A	BT Screw M3x6 Phillips Binding Head	12	L06	0E00857A	BT Screw M3x6 Phillips Binding Head	12
L07	0E00814A	ST Screw M2x4 Phillips Pan Head	1	L07	0E00814A	ST Screw M2x4 Phillips Pan Head	1
L08	0E00920A	Screw M3x6 Phillips Polywave	6	L08	0E00920A	Screw M3x6 Phillips Polywave	6
L09	0E00867A	BT Screw M4x15 Phillips Binding Head	3	L09	0E00867A	BT Screw M4x15 Phillips Binding Head	3
L10	0E00878A	BT Screw M4x20 Phillips Binding Head	1	L10	0E00878A	BT Screw M4x20 Phillips Binding Head	1
L11	0E00852A	BT Screw M4x12 Phillips Binding Head	4	L11	0E00852A	BT Screw M4x12 Phillips Binding Head	4
		*: Depends on the versions.				*: Depends on the versions.	

8.2. Front Panel Ass'y (A01)

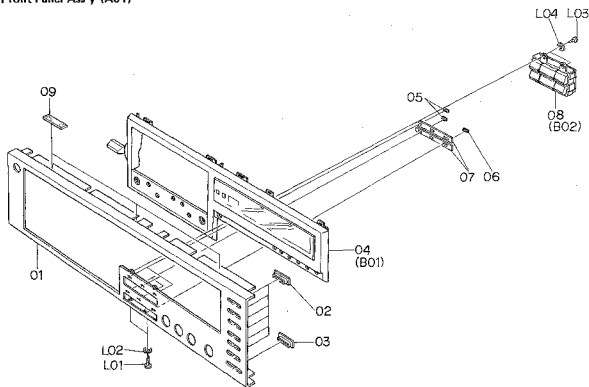


Fig. 8.2

Schematic Ref. No.	Part No.	Description	Q'ty
A01	HA03959A	Front Panel Ass'y Serial No.: A11501001 -	1
01	0H03823A	Front Panel	1
02	0H03746A	Function Switch Escutcheon	1
03	0H03747C	Power Switch Escutcheon	1
04	HA03958B	Front Panel Escutcheon Ass'y	1
05	0H03744B	Green Lens	5
06	0H03745B	Orange Lens	1
07	0J04059B	Light Intercepting Seal A	2
08	HA03823A	Control Button Ass'y	1
09	0H03781A	Cushion	1
L01	0E00825A	BT Screw M2.6x8 Philips Binding Head	2
L02	0E00912A	Washer FT25	2
L03	0E00794A	BT Screw M2x5 Philips Pan Head	2
L04	0E00117A	Washer 2mm	2

8.3. Mechanism Ass'y 670ZX (A02)

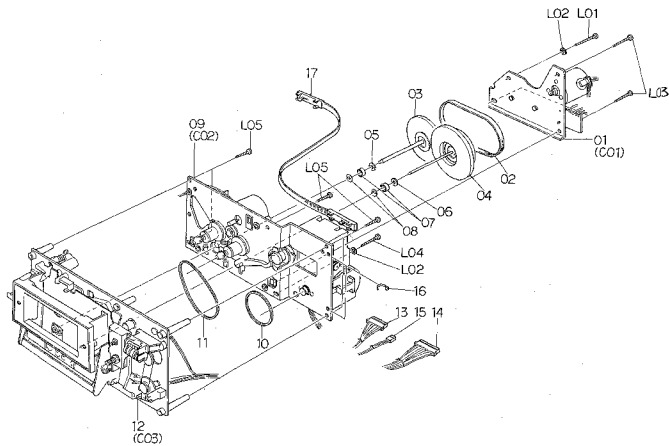


Fig. 8.3

Schematic Ref. No.	Part No.	Description	Q'ty	Schematic Ref. No.	Part No.	Description	Q'ty
A02	CA08229A	Mechanism Ass'y 670ZX Serial No.: A11505650 -	1	A02	CA08151B	Mechanism Ass'y 670ZX Serial Nos.: A11504731 - A11506639	1
01	CA08156A	Flywheel Holder Ass'y	1				
02	0C08096C	Capstan Belt	1	01	CA08156A	Flywheel Holder Ass'y	1
03	CA08173A	Supply Flywheel Ass'y D	1	02	0C08096C	Capstan Belt	1
04	CA08015A	Take-up Flywheel Ass'y	1	03	CA08173A	Supply Flywheel Ass'y D	1
05	0C08021B	Thrust Washer 3.1mm	1	04	CA08015A	Take-up Flywheel Ass'y	1
06	0C08020B	Thrust Washer 2.6mm	1	05	0C08021B	Thrust Washer 3.1mm	1
07	0C08069C	Flange Thrust Cap	2	06	0C08020B	Thrust Washer 2.6mm	1
08	0C08022B	Flange Thrust Spring	2	07	0C08069C	Flange Thrust Cap	2
09	CA08235A	Sub Mechanism Chassis Ass'y	1	08	0C08022B	Flange Thrust Spring	2
10	0C08099B	Control Motor Belt	1	09	CA08146A	Sub Mechanism Chassis Ass'y	1
11	0C08098B	Counter Belt B	1	10	0C08099B	Control Motor Belt	1
12	CA08221A	Main Mechanism Chassis Ass'y	1	11	0C08098B	Counter Belt B	1
13	0B08650B	9P-H Connector	1	12	CA08180A	Main Mechanism Chassis Ass'y	1
14	0B08651D	11P-H Connector	1	13	0B08650B	9P-H Connector	1
15	0B08652C	3P-H Connector	1	14	0B08651D	11P-H Connector	1
16	0B08515A	Insh-Lock	15	15	0B08652C	3P-H Connector	1
17	0C08237A	Azimuth Alignment Wire	1	16	0B08515A	Insh-Lock	15
-	0M04158A	Mechanism Serial No. Seal	1	17	0C08237A	Azimuth Alignment Wire	1
L01	0E00834A	BT Screw M3x30 Philips Pan Head	1	-	0M04158A	Mechanism Serial No. Seal	1
L02	0E00178A	Washer 3mm	2	L01	0E00834A	BT Screw M3x30 Philips Pan Head	1
L03	0E00833A	BT Screw M3x20 Philips Pan Head	3	L02	0E00178A	Washer 3mm	2
L04	0E00835A	BT Screw M3x25 Philips Pan Head	1	L03	0E00833A	BT Screw M3x20 Philips Pan Head	3
L05	0E00883A	BT Screw M3x18 Philips Pan Head	5	L04	0E00835A	BT Screw M3x25 Philips Pan Head	1
				L05	0E00883A	BT Screw M3x18 Philips Pan Head	5
A02	CA08151C	Mechanism Ass'y 670ZX Serial Nos.: A11505640 - A11505649	1	A02	CA08151A	Mechanism Ass'y 670ZX Serial Nos.: A11501001 - A11504730	1
01	CA08156A	Flywheel Holder Ass'y	1				
02	0C08096C	Capstan Belt	1	01	CA08156A	Flywheel Holder Ass'y	1
03	CA08173A	Supply Flywheel Ass'y D	1	02	0C08096C	Capstan Belt	1
04	CA08015A	Take-up Flywheel Ass'y	1	03	CA08014A	Supply Flywheel Ass'y	1
05	0C08021B	Thrust Washer 3.1mm	1	04	CA08015A	Take-up Flywheel Ass'y	1
06	0C08020B	Thrust Washer 2.6mm	1	05	0C08021B	Thrust Washer 3.1mm	1
07	0C08069C	Flange Thrust Cap	2	06	0C08020B	Thrust Washer 2.6mm	1
08	0C08022B	Flange Thrust Spring	2	07	0C08069C	Flange Thrust Cap	2
09	CA08202A	Sub Mechanism Chassis Ass'y	1	08	0C08022B	Flange Thrust Spring	2
10	0C08099B	Control Motor Belt	1	09	CA08146A	Sub Mechanism Chassis Ass'y	1
11	0C08098B	Counter Belt B	1	10	0C08099B	Control Motor Belt	1
12	CA08209A	Main Mechanism Chassis Ass'y	1	11	0C08098B	Counter Belt B	1
13	0B08650B	9P-H Connector	1	12	CA08154A	Main Mechanism Chassis Ass'y	1
14	0B08651D	11P-H Connector	1	13	0B08650B	9P-H Connector	1
15	0B08652C	3P-H Connector	1	14	0B08651D	11P-H Connector	1
16	0B08515A	Insh-Lock	15	15	0B08652C	3P-H Connector	1
17	0C08237A	Azimuth Alignment Wire	1	16	0B08515A	Insh-Lock	15
-	0M04158A	Mechanism Serial No. Seal	1	17	0C08237A	Azimuth Alignment Wire	1
L01	0E00834A	BT Screw M3x30 Philips Pan Head	1	-	0M04158A	Mechanism Serial No. Seal	1
L02	0E00178A	Washer 3mm	2	L01	0E00834A	BT Screw M3x30 Philips Pan Head	1
L03	0E00833A	BT Screw M3x20 Philips Pan Head	3	L02	0E00178A	Washer 3mm	2
L04	0E00835A	BT Screw M3x25 Philips Pan Head	1	L03	0E00833A	BT Screw M3x20 Philips Pan Head	3
L05	0E00883A	BT Screw M3x18 Philips Pan Head	5	L04	0E00835A	BT Screw M3x25 Philips Pan Head	1
				L05	0E00883A	BT Screw M3x18 Philips Pan Head	5

Schematic Ref. No.	Part No.	Description	Q'ty	Schematic Ref. No.	Part No.	Description	Q'ty
A03	JA03663A	Chassis Ass'y (U.S.A. & Canada)	1	B01	HA03958B	Front Panel Escutcheon Ass'y	1
	JA03664A	Chassis Ass'y (Japan)	1			Serial No.: A11501001 -	
	JA03666A	Chassis Ass'y (220V Class 2)	1				
	JA03667A	Chassis Ass'y (Australia)	1				
	JA03668A	Chassis Ass'y (UK)	1	01	HA03983C	Front Panel Escutcheon Sub Ass'y	1
	JA03665A	Chassis Ass'y (Others)	1	02	0H03722B	Display Glass	1
		Serial No.:		03	0H03826B	Display Glass Hold Plate	1
		A11501001 -		04	BA04209A	RAMM P.C.B. Ass'y	1
				05	0H03830A	LED Filter	1
01	0B08716A	Level Meter	1	06	0J04050A	Counter Escutcheon Holder	1
02	0H03829B	Meter Holder	1	07	0H03749A	Memory Switch Knob	1
03	JA03661A	Record Calibration Ass'y	1	08	0J04043A	Memory Switch Knob Spring	1
04	JA03658A	Volume Holder Ass'y	1	09	0H03743B	Counter Reset Knob Holder	1
05	JA03659A	Headphone Jack Ass'y	1	10	0H03750A	Counter Reset Knob	1
06	JA03600A	Reflector Ass'y	1	11	0J04042A	Counter Reset Knob Spring	1
07	JA03802A	Counter Lamp Ass'y	1	12	0H03724F	Eject Lever	1
08	0J04034F	Front Chassis	1	13	0H03762A	Eject Lever Spring	1
09	BA04183A	Switch P.C.B. Ass'y	1	14	0J04057B	Eject Lever Cushion	1
10	BA04184A	Main P.C.B. Ass'y	1	L01	0E00674A	Stopper Ring CS 2mm	5
11	BA04185A	Logic P.C.B. Ass'y	1	L02	0E00854A	BT Screw M2.6x6 Phillips Pan Head	4
12	BA04207A	Auto Azimuth P.C.B. Ass'y	1	L03	0E00890A	C-Ring 2mm	1
13	0J04033C	Side Chassis Right	1	L04	0E00837A	Stopper Ring 3mm	1
14	JA03692A	Power Switch Holder Ass'y	1				
		(U.S.A., Canada & Others)		B02	HA03823A	Control Button Ass'y	1
	JA03595A	Power Switch Holder Ass'y	1			Serial No.: A11501001 -	
		(Japan)					
	JA03594A	Power Switch Holder Ass'y (220V	1	01	0H03726B	Control Button Stop	1
		Class 2, Australia & UK)		02	0H03727B	Control Button Play	1
15	0J04055B	Switch P.C.B. Holder	1	03	0H03726B	Control Button F.F.	1
16	0J04032D	Center Chassis	1	04	0H03729B	Control Button Rewind	1
17	0J04031B	Side Chassis Left	1	05	0H03730B	Control Button Pause	1
18	HA03952A	Rear Panel Ass'y (U.S.A. & Canada)	1	06	0H03731B	Control Button Record	1
	HA03953A	Rear Panel Ass'y (Japan)	1	07	0J04044C	Control Button Holder	1
	HA03955A	Rear Panel Ass'y (220V Class 2)	1	08	0J04045B	Control Button Shaft	2
	HA03956A	Rear Panel Ass'y (Australia)	1	09	0J04046A	Control Button Spring	6
	HA03957A	Rear Panel Ass'y (UK)	1	10	0J04052B	Spring Stopper	6
	HA03954A	Rear Panel Ass'y (Others)	1	11	0J04099A	Control Button Himelon	2
19	0J04062B	Insulator	2	12	BA04071A	Control Switch P.C.B. Ass'y	1
20	0B08515A	Insu-Lock	23	L01	0E00792A	BT Screw M2.6x6 Phillips Pan Head	6
21	0J04054A	Free Bushing 85mm	1	L02	0J04061A	Washer FT20	8
* 22	0M03700A	Earth Mark Label	1				
23	0B08580A	Wire Holder 161	1				
L01	0E00857A	BT Screw M3x6 Phillips Binding Head	36	C01	CA08156A	Flywheel Holder Ass'y	1
L02	0E00868A	BT Screw M3x8 Phillips Binding Head	6			Serial No.: A11501001 -	
L03	0E00859A	BT Screw M2.6x6 Phillips Binding Head	3	01	0C08013I	Flywheel Holder	1
L04	0E00622A	Screw M3x5 Phillips Pan Head (2A)	6	02	0C08238A	Capstan Motor	1
L05	0E00860A	BT Screw M3x6 Phillips Binding Head (Black Chromate)	6	03	0C08079G	Capstan Motor Pulley	1
				04	-	Speed Cal. P.C.B. Ass'y	(1)
* L06	0E00521A	Screw M3x8 Phillips Pan Head	1			(Incorporated in the Capstan Motor)	
* L07	0E00507A	Nut Hex. M3	1	L01	0E00226A	Screw M2.6x4 Phillips Pan Head	3
* L08	0E00581A	Washer 3mm (Spring)	1	L02	0C08068C	Thrust Screw	2
* L09	0E00037A	Earth Lug B-5	1	L03	0C03857A	Lock Nut	2
				L04	0E00862A	BT Screw M3x6 Phillips Pan Head	1

*: Depends on the versions.

8.4. Chassis Ass'y (A03)

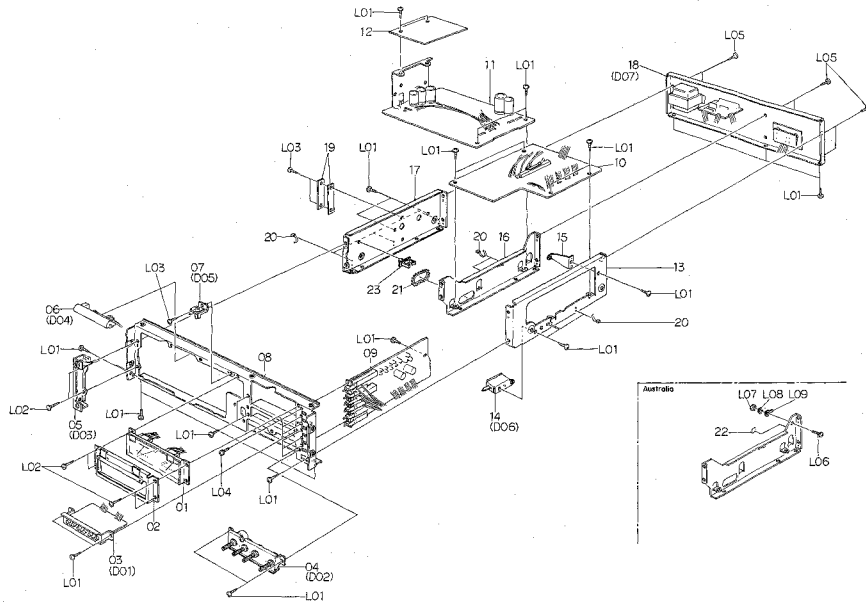


Fig. 8.4

8.5. Front Panel Escutcheon Ass'y (B01)

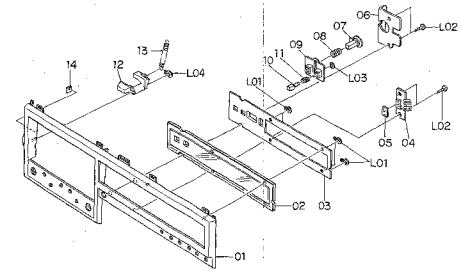


Fig. 8.5

8.6. Control Button Ass'y (B02)

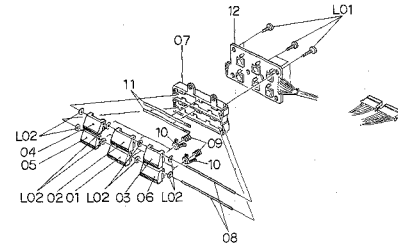


Fig. 8.6

8.7. Flywheel Holder Ass'y (C01)

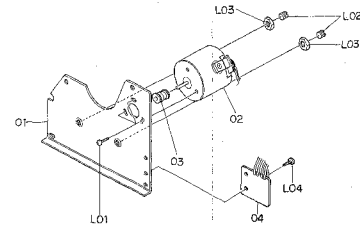


Fig. 8.7

8.8. Sub Mechanism Chassis Ass'y (C02)

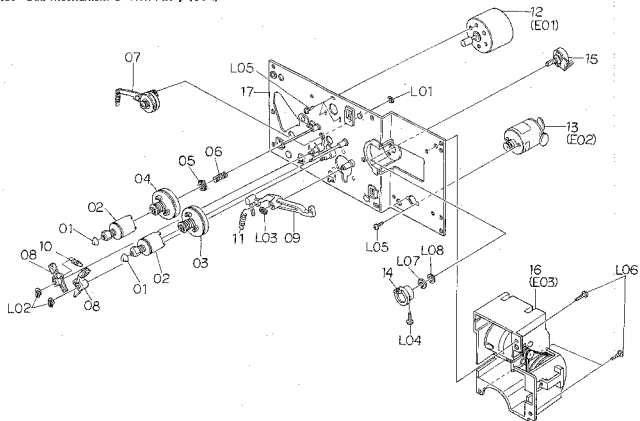


Fig. 8.8.1 Serial No.: A11505650 -

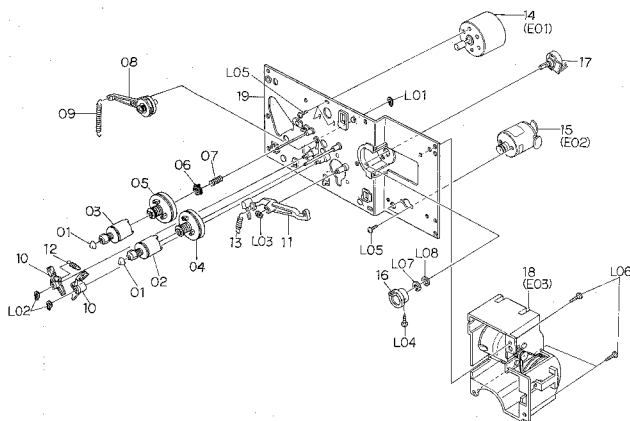


Fig. 8.8.2 Serial Nos.: A11505640 - A11505649

Schematic Ref. No.	Part No.	Description	Q'ty	Schematic Ref. No.	Part No.	Description	Q'ty	Schematic Ref. No.	Part No.	Description	Q'ty	Schematic Ref. No.	Part No.	Description	Q'ty
C02	CA06235A	Sub Mechanism Chassis Ass'y Serial No.: A11505650 -	1	L05	0E00226A	Screw M2.6x4 Phillips Pan Head	5	C02	CA08202A	Sub Mechanism Chassis Ass'y Serial Nos.: A11505640 - A11505649	1	L04	0E00859A	BT Screw M2.6x6 Phillips Binding Head	1
				L06	0E00846A	BT Screw M3x8 Phillips Pan Head	3					L05	0E00226A	Screw M2.6x4 Phillips Pan Head	5
01	0C08039B	Reel Hub Head	2	L07	-	Volume Nut	(1)	01	0C08039B	Reel Hub Head	2	L06	0E00846A	BT Screw M3x8 Phillips Pan Head	3
02	CA08038C	Reel Hub B Ass'y	2	L08	-	Volume Washer	(1)	02	CA08038B	Reel Hub B Ass'y	1				
03	CA08037A	Reel Hub Take-up Ass'y	1					03	CA08197A	Reel Hub B Ass'y	1	L07	-	Volume Nut	(1)
04	CA08064A	Reel Hub Supply Ass'y	1					04	CA08037A	Reel Hub Take-up Ass'y	1	L08	-	Volume Washer	(1)
05	CA08039A	Back Tension Ass'y	1					05	CA08064A	Reel Hub Supply Ass'y	1				
06	0C08178A	Back Tension Spring	1					06	CA08039A	Back Tension Ass'y	1				
07	CA08193A	Idler Ass'y	1					07	0C08178A	Back Tension Spring	1				
08	CA08042A	Brake Ass'y	2					08	CA08040A	Idler Ass'y	1				
09	0C08030C	Brake Drive Arm	1					09	0C08127B	Idler Arm Spring	1				
10	0C08128A	Brake Arm Spring	1					10	CA08042A	Brake Ass'y	2				
11	0C08128A	Brake Drive Arm Spring	1					11	0C08030C	Brake Drive Arm	1				
12	CA08117B	Reel Motor Ass'y	1					12	0C08129A	Brake Arm Spring	1				
13	CA08034A	Control Motor Ass'y	1					13	0C08128A	Brake Drive Arm Spring	1				
14	0C08053B	Volume Coupler	1					14	CA08117B	Reel Motor Ass'y	1				
15	0B07240A	Volume Control 10kΩ (B)	1					15	CA08034A	Control Motor Ass'y	1				
16	CA08148A	Azimuth Alignment Motor Ass'y	1					16	0C08053B	Volume Coupler	1				
17	CA08041A	Sub Chassis Ass'y	1					17	0B07240A	Volume Control 10kΩ (B)	1				
L01	0E00698A	E-Ring 2.5mm	1					18	CA08148A	Azimuth Alignment Motor Ass'y	1				
L02	0E00837A	Stopper Ring 3mm	2					19	CA08041A	Sub Chassis Ass'y	1				
L03	0E00838A	Stopper Ring 4mm	1					L01	0E00842A	Stopper Ring 2mm	1				
L04	0E00859A	BT Screw M2.6x6 Phillips Binding Head	1					L02	0E00837A	Stopper Ring 3mm	2				
								L03	0E00838A	Stopper Ring 4mm	1				

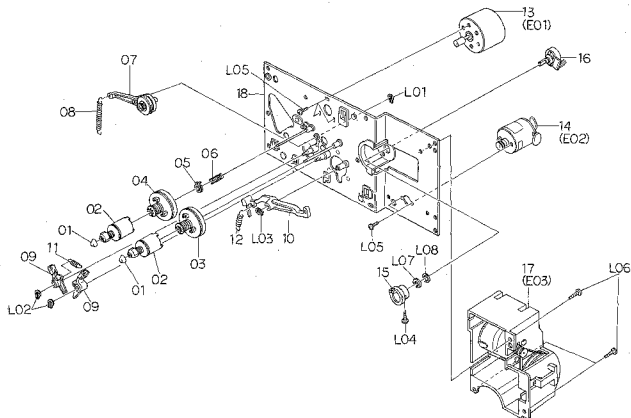


Fig. 8.8.3 Serial Nos.: A11501001 – A11505639

Schematic Ref. No.	Part No.	Description	Q'ty	Schematic Ref. No.	Part No.	Description	Q'ty
C02	CA08146A	Sub Mechanism Chassis Ass'y Serial Nos.: A11501001 – A11505639	1	L04	0E00859A	BT Screw M2.6x6 Phillips Binding Head	1
01	0C08039B	Reel Hub Head	2	L05	0E00226A	Screw M2.6x4 Phillips Pan Head	5
02	CA08038B	Reel Hub B Ass'y	2	L06	0E00846A	BT Screw M3x8 Phillips Pan Head	3
03	CA08037A	Reel Hub Take-up Ass'y	1	L07	—	Volume Nut	(1)
04	CA08064A	Reel Hub Supply Ass'y	1	L08	—	Volume Washer	(1)
05	CA08039A	Back Tension Ass'y	1				
06	0C08178A	Back Tension Spring	1				
07	CA08040A	Idler Ass'y	1				
08	0C08127B	Idler Arm Spring	1				
09	CA08042A	Brake Ass'y	2				
10	0C08030C	Brake Drive Arm	1				
11	0C08129A	Brake Arm Spring	1				
12	0C08128A	Brake Drive Arm Spring	1				
13	CA08117B	Reel Motor Ass'y	1				
14	CA08034A	Control Motor Ass'y	1				
15	0C08053B	Volume Coupler	1				
16	0B07240A	Volume Control 10kΩ (B)	1				
17	CA08148A	Azimuth Alignment Motor Ass'y	1				
18	CA08041A	Sub Chassis Ass'y	1				
L01	0E00842A	Stopper Ring 2mm	1				
L02	0E00837A	Stopper Ring 3mm	2				
L03	0E00838A	Stopper Ring 4mm	1				

Schematic Ref. No.	Part No.	Description	Q'ty	Schematic Ref. No.	Part No.	Description	Q'ty
C03	CA08209A	Main Mechanism Chassis Ass'y Serial No.: A11506640 --	1	L15	0E00859A	BT Screw M2.6x6 Phillips Binding Head	1
				L16	0C08256A	Washer 2.6mm	1
01	CA08125A	Cassette Case Holder L Ass'y	1				
02	0C08151A	Lid Arm Spring Tube	1				
03	CA08022A	Cassette Case Holder R Ass'y	1				
04	CA08163A	Cassette Case Ass'y	1				
05	0C08019I	Cover Plate	1				
06	0M03977A	Cassette Viewer Label	1				
07	CA08147A	Head Mount Base Ass'y	1				
08	0C08121A	Supply Pressure Roller Spring	1				
09	CA080953B	Supply Pressure Roller Ass'y	1				
10	0C08122B	Supply Pressure Roller Thrust Spring	1				
11	CA08079B	Take-up Pressure Roller Ass'y	1				
12	0C08183B	Take-up Pressure Roller Thrust Spring	1				
13	CA08104A	Head Base Ass'y D	1				
14	0C08182A	Pressure Roller Drive Bar B	1				
15	0C08086B	Head Base Roller	3				
16	0C08050B	Record Sensor	1				
17	0C08051E	Cassette Hold Arm	1				
18	0C08120A	Cassette Hold Arm Spring	1				
19	CA08027A	Head Base Drive Arm Ass'y	1				
20	0C08143C	Head Base Drive Arm Spring	1				
21	CA08026A	Pressure Roller Drive Arm Ass'y	1				
22	CA08099A	Auto Shut-off Ass'y	1				
23	CA08098A	Counter Ass'y	1				
24	CA08105A	Pitch Control Holder Ass'y	1				
25	0C08224A	Counter Belt	1				
26	0C08119A	Record Protector	1				
27	0C08194C	Damper Lock Arm	1				
28	0C08153A	Damper Lock Arm Spring Tube	1				
29	0C08125A	Damper Lock Arm Spring	1				
30	CA08030A	Pneumatic Damper Ass'y	1				
31	CA08023A	Supply Capstan Flange Ass'y	1				
32	CA08024A	Take-up Capstan Flange Ass'y	1				
33	0C08186A	Cam Drive Gear	1				
34	0C08029H	Control Cam	1				
35	0C08152A	Counter-Load Arm Spring	1				
36	0C08117A	Counter-Load Arm Spring Tube	1				
37	CA08028A	Counter-Load Arm Ass'y	1				
38	CA08072A	Main Chassis Ass'y	1				
39	0C08250A	Supply Pressure Roller Spring B	1				
40	CA08196A	Back Tension Ass'y	1				
41	0C08254A	Back Tension Arm Collar	1				
L01	0E00637A	Stopper Ring 3mm	7				
L02	0E00832A	BT Screw M3x14 Phillips Pan Head	2				
L03	0E00834A	BT Screw M3x30 Phillips Pan Head	2				
L04	0E00831A	BT Screw M3x10 Phillips Pan Head	3				
L05	0E00254A	Washer 3.1mm (Plastics)	2				
L06	0E00222A	E-Ring 2mm	2				
L07	0E00876A	BT Screw M2.6x8 Phillips Pan Head	11				
L08	0C08060B	Height Adjustment Nut	2				
L09	0E00142A	Washer 2.6mm	2				
L10	0E00879A	BT Screw M2x15 Phillips Pan Head	1				
L11	0E00838A	Stopper Ring 4mm	3				
L12	0E00846A	BT Screw M3x8 Phillips Pan Head	3				
L13	0E00865A	BT Screw M3x10 Phillips Binding Head	2				
L14	0E00895A	Earth Lug 3mm	2				

8.9. Main Mechanism Chassis Ass'y (C03)

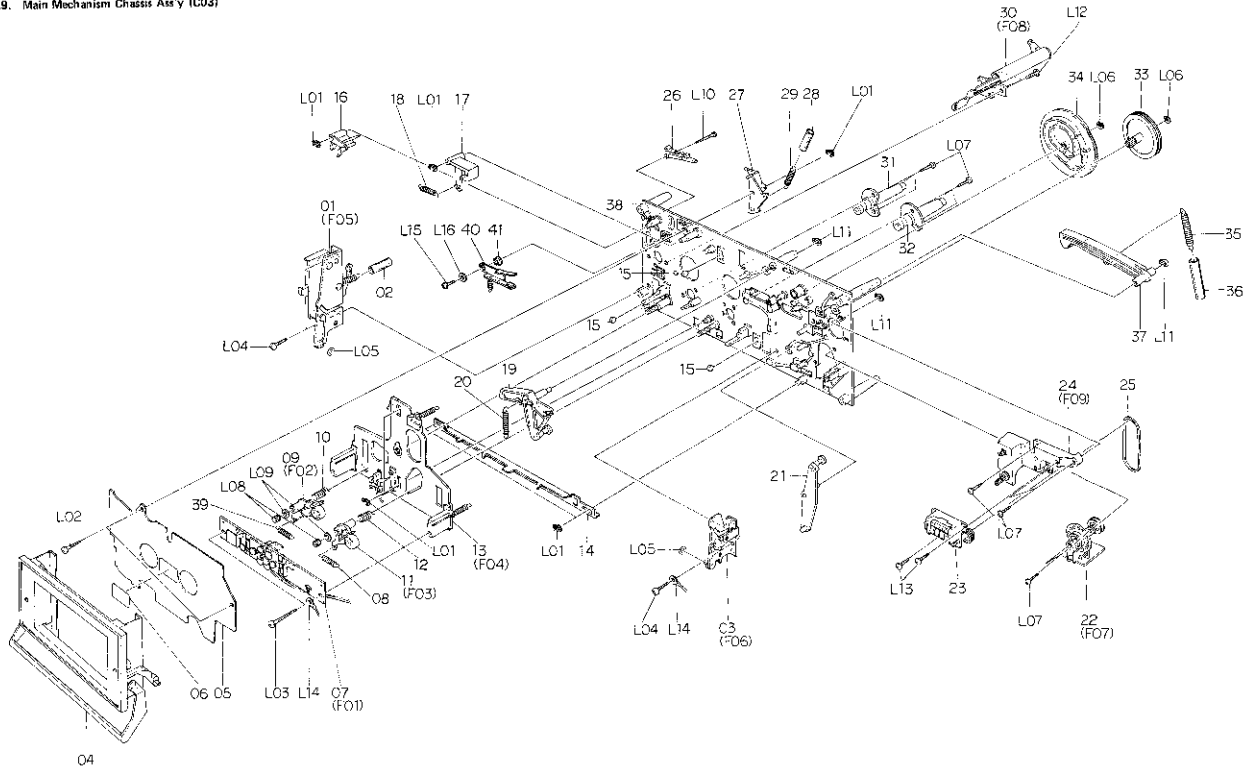


Fig. 8.9.1 Serial No.: A11505640 -

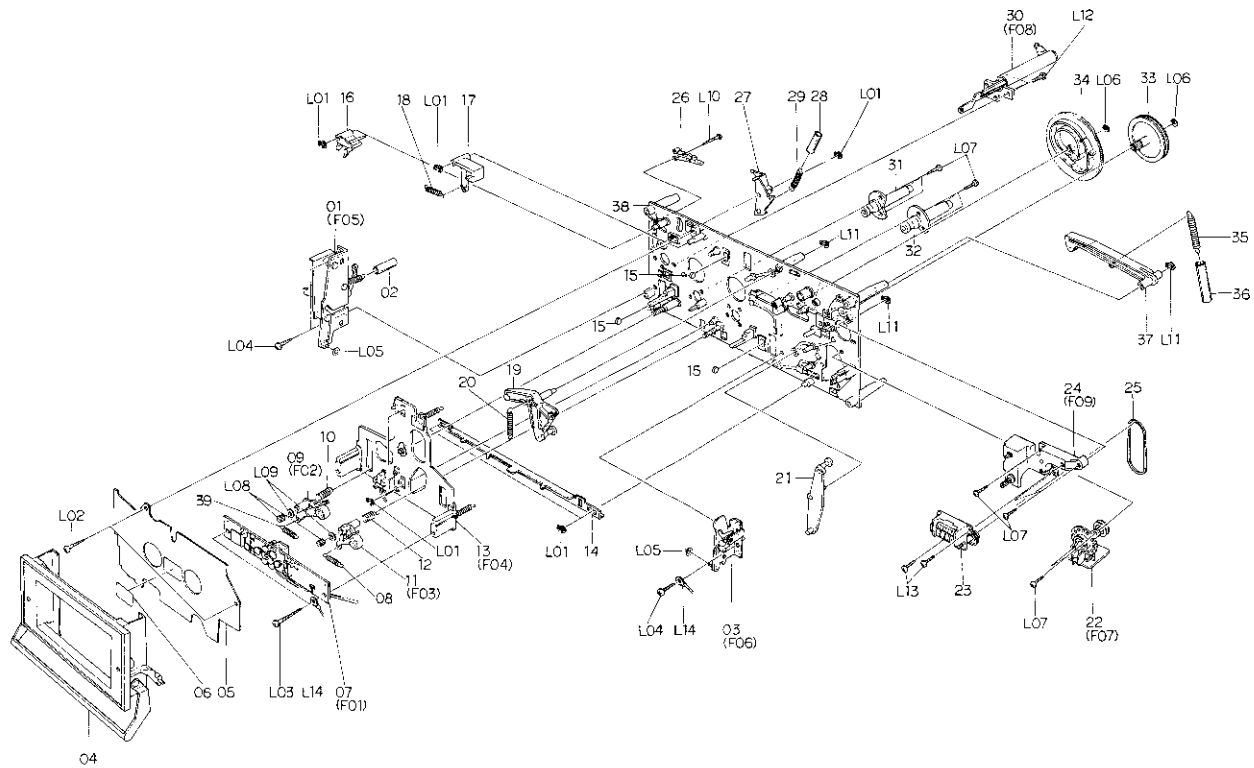


Fig. 8.9.2 Serial Nos: A11504731 – A11505639

Schematic Ref. No.	Part No.	Description	Q'ty	Schematic Ref. No.	Part No.	Description	Q'ty
C03	CA08180A	Main Mechanism Chassis Ass'y Serial Nos.: A11604731 - A11505039	1	L11	0E00838A	Stopper Ring 4mm	3
				L12	0E00846A	BT Screw M3x8 Phillips Pan Head	3
				L13	0E00865A	BT Screw M3x10 Phillips Binding Head	2
01	CA08125A	Cassette Case Holder L Ass'y	1	L14	0E00895A	Earth Lug 3mm	2
02	0C08151A	Lid Arm Spring Tube	1				
03	CA08022A	Cassette Case Holder R Ass'y	1				
04	CA08183A	Cassette Case Ass'y	1				
05	0C08019I	Cover Plate	1				
06	0M03977A	Cassette Viewer Label	1				
07	CA08147A	Head Mount Base Ass'y	1				
08	0C08121A	Supply Pressure Roller Spring	1				
09	CA08053B	Supply Pressure Roller Ass'y	1				
10	0C08122B	Supply Pressure Roller Thrust Spring	1				
11	CA08079B	Take-up Pressure Roller Ass'y	1				
12	0C08183B	Take-up Pressure Roller Thrust Spring	1				
13	CA08104A	Head Base Ass'y D	1				
14	0C08182A	Pressure Roller Drive Bar B	1				
15	0C08086B	Head Base Roller	3				
16	0C08050B	Record Sensor	1				
17	0C08051E	Cassette Hold Arm	1				
18	0C08120A	Cassette Hold Arm Spring	1				
19	CA08027A	Head Base Drive Arm Ass'y	1				
20	0C08143C	Head Base Drive Arm Spring	1				
21	CA08026A	Pressure Roller Drive Arm Ass'y	1				
22	CA08098A	Auto Shut-off Ass'y	1				
23	CA08099A	Counter Ass'y	1				
24	CA08105A	Pitch Control Holder Ass'y	1				
25	DC08224A	Counter Belt	1				
26	0C08119A	Record Protector	1				
27	0C08194C	Damper Lock Arm	1				
28	0C08153A	Damper Lock Arm Spring Tube	1				
29	DC08125A	Damper Lock Arm Spring	1				
30	CA08030A	Pneumatic Damper Ass'y	1				
31	CA08023A	Supply Capstan Flange Ass'y	1				
32	CA08024A	Take-up Capstan Flange Ass'y	1				
33	0C08186A	Cam Drive Gear	1				
34	0C08029H	Control Cam	1				
35	0C08152A	Counter-Load Arm Spring	1				
36	0C08117A	Counter-Load Arm Spring Tube	1				
37	CA08028A	Counter-Load Arm Ass'y	1				
38	CA08072A	Main Chassis Ass'y	1				
39	0C08250A	Supply Pressure Roller Spring B	1				
L01	0E00837A	Stopper Ring 3mm	7				
L02	0E00832A	BT Screw M3x14 Phillips Pan Head	2				
L03	0E00834A	BT Screw M3x30 Phillips Pan Head	2				
L04	0E00831A	BT Screw M3x10 Phillips Pan Head	3				
L05	0E00254A	Washer 3.1mm (Plastic)	2				
L06	0E00222A	E-Ring 2mm	1				
L07	0E00876A	BT Screw M2.6x8 Phillips Pan Head	11				
L08	0C08060B	Height Adjustment Nut	2				
L09	0E00142A	Washer 2.6mm	2				
L10	0E00879A	BT Screw M2x15 Phillips Pan Head	1				



Schematic Ref. No.	Part No.	Description	Q'ty	Schematic Ref. No.	Part No.	Description	Q'ty
C03	CA08154A	Main Mechanism Chassis Ass'y Serial Nos.: A11503891 - A11504730		C03	CA08154A	Main Mechanism Chassis Ass'y Serial Nos.: A11501001 - A11503890	1
01	CA08125A	Cassette Case Holder L Ass'y	1	01	CA08125A	Cassette Case Holder L Ass'y	1
02	0C08151A	Lid Arm Spring Tube	1	02	0C08151A	Lid Arm Spring Tube	1
03	CA08022A	Cassette Case Holder R Ass'y	1	03	CA08022A	Cassette Case Holder R Ass'y	1
04	CA08163A	Cassette Case Ass'y	1	04	CA08163A	Cassette Case Ass'y	1
05	0C08019I	Cover Plate	1	05	0C08019I	Cover Plate	1
06	0M03977A	Cassette Viewer Label	1	06	0M03977A	Cassette Viewer Label	1
07	CA08147A	Head Mount Base Ass'y	1	07	CA08147A	Head Mount Base Ass'y	1
08	0C08121A	Supply Pressure Roller Spring	2	08	0C08121A	Supply Pressure Roller Spring	2
09	CA08053B	Supply Pressure Roller Ass'y	1	09	CA08053B	Supply Pressure Roller Ass'y	1
10	0C08122B	Supply Pressure Roller Thrust Spring	1	10	0C08122B	Supply Pressure Roller Thrust Spring	1
11	CA08079B	Take-up Pressure Roller Ass'y	1	11	CA08079A	Take-up Pressure Roller Ass'y	1
12	0C08183B	Take-up Pressure Roller Thrust Spring	1	12	0C08183B	Take-up Pressure Roller Thrust Spring	1
13	CA08104A	Head Base Ass'y D	1	13	CA08104A	Head Base Ass'y D	1
14	0C08182A	Pressure Roller Drive Bar B	1	14	0C08182A	Pressure Roller Drive Bar B	1
15	0C08086B	Head Base Roller	3	15	0C08086B	Head Base Roller	3
16	0C08050B	Record Sensor	1	16	0C08050B	Record Sensor	1
17	0C08051E	Cassette Hold Arm	1	17	0C08051E	Cassette Hold Arm	1
18	0C08120A	Cassette Hold Arm Spring	1	18	0C08120A	Cassette Hold Arm Spring	1
19	CA08027A	Head Base Drive Arm Ass'y	1	19	CA08027A	Head Base Drive Arm Ass'y	1
20	0C08143C	Head Base Drive Arm Spring	1	20	0C08143C	Head Base Drive Arm Spring	1
21	CA08026A	Pressure Roller Drive Arm Ass'y	1	21	CA08026A	Pressure Roller Drive Arm Ass'y	1
22	CA08089A	Auto Shut-off Ass'y	1	22	CA08089A	Auto Shut-off Ass'y	1
23	CA08098A	Counter Ass'y	1	23	CA08098A	Counter Ass'y	1
24	CA08105A	Pitch Control Holder Ass'y	1	24	CA08105A	Pitch Control Holder Ass'y	1
25	0C08224A	Counter Belt	1	25	0C08224A	Counter Belt	1
26	0C08119A	Record Protector	1	26	0C08119A	Record Protector	1
27	0C08194C	Damper Lock Arm	1	27	0C08194C	Damper Lock Arm	1
28	0C08153A	Damper Lock Arm Spring Tube	1	28	0C08153A	Damper Lock Arm Spring Tube	1
29	0C08125A	Damper Lock Arm Spring	1	29	0C08125A	Damper Lock Arm Spring	1
30	CA08030A	Pneumatic Damper Ass'y	1	30	CA08030A	Pneumatic Damper Ass'y	1
31	CA08023A	Supply Capstan Flange Ass'y	1	31	CA08023A	Supply Capstan Flange Ass'y	1
32	CA08024A	Take-up Capstan Flange Ass'y	1	32	CA08024A	Take-up Capstan Flange Ass'y	1
33	0C08186A	Cm Drive Gear	1	33	0C08186A	Cm Drive Gear	1
34	0C08029H	Control Cam	1	34	0C08029H	Control Cam	1
35	0C08152A	Counter-Load Arm Spring	1	35	0C08152A	Counter-Load Arm Spring	1
36	0C08117A	Counter-Load Arm Spring Tube	1	36	0C08117A	Counter-Load Arm Spring Tube	1
37	CA08028A	Counter-Load Arm Ass'y	1	37	CA08028A	Counter-Load Arm Ass'y	1
38	CA08072A	Main Chassis Ass'y	1	38	CA08072A	Main Chassis Ass'y	1
L01	0E00837A	Stopper Ring 3mm	7	L01	0E00837A	Stopper Ring 3mm	7
L02	0E00832A	BT Screw M3x14 Philips Pan Head	2	L02	0E00832A	BT Screw M3x14 Philips Pan Head	2
L03	0E00834A	BT Screw M3x30 Philips Pan Head	2	L03	0E00834A	BT Screw M3x30 Philips Pan Head	2
L04	0E00831A	BT Screw M3x10 Philips Pan Head	3	L04	0E00831A	BT Screw M3x10 Philips Pan Head	3
L05	0E00254A	Washer 3.1mm (Plastics)	2	L05	0E00254A	Washer 3.1mm (Plastics)	2
L06	0E00222A	E-Ring 2mm	2	L06	0E00222A	E-Ring 2mm	2
L07	0E00876A	BT Screw M2.6x8 Philips Pan Head	11	L07	0E00876A	BT Screw M2.6x8 Philips Pan Head	11
L08	0C08060B	Height Adjustment Nut	2	L08	0C08060B	Height Adjustment Nut	2
L09	0E00142A	Washer 2.6mm	2	L09	0E00142A	Washer 2.6mm	2
L10	0E00879A	BT Screw M2x15 Philips Pan Head	1	L10	0E00879A	BT Screw M2x15 Philips Pan Head	1
L11	0E00838A	Stopper Ring 4mm	3	L11	0E00838A	Stopper Ring 4mm	3
L12	0E00846A	BT Screw M3x8 Philips Pan Head	3	L12	0E00846A	BT Screw M3x8 Philips Pan Head	3
L13	0E00895A	BT Screw M3x10 Philips Binding Head	2	L13	0E00895A	BT Screw M3x10 Philips Binding Head	2
L14	0E00895A	Earth Lug 3mm	2	L14	0E00895A	Earth Lug 3mm	2

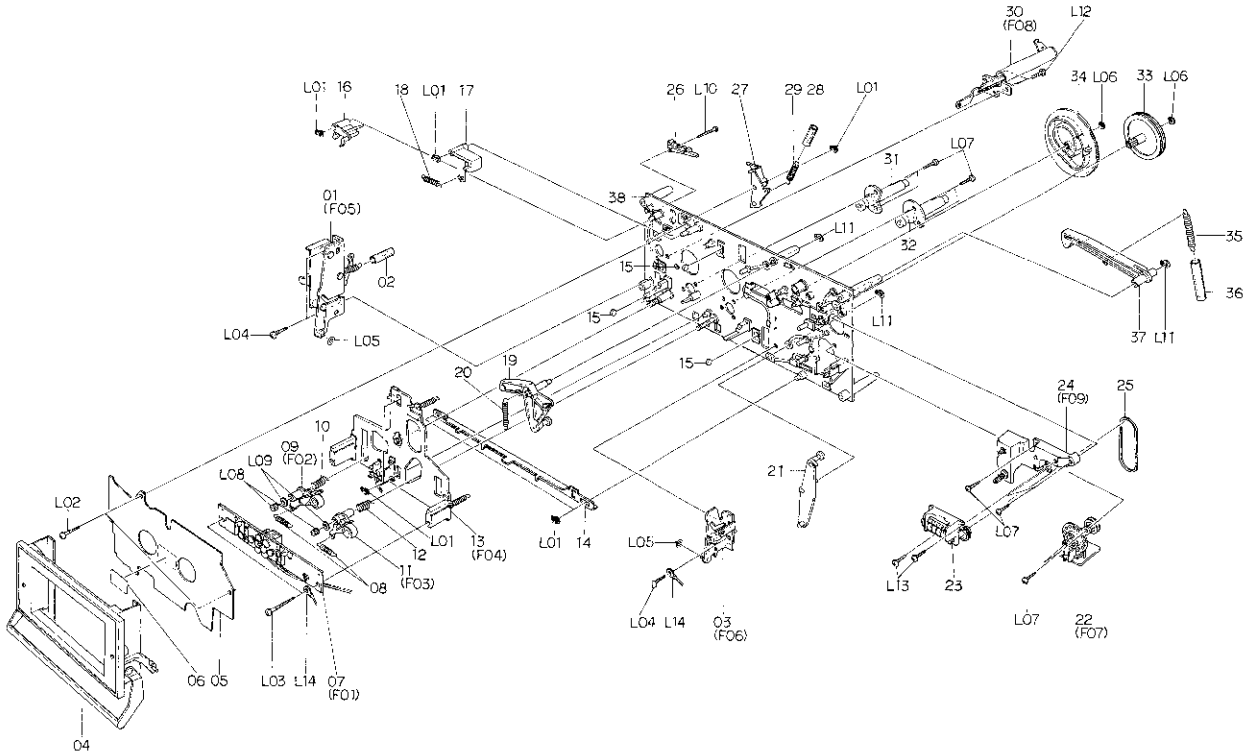


Fig. 8.9.3 Serial Nos.: A11501001 - A11504730

8.10. Record Calibration Ass'y (D01)

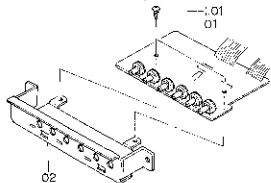


Fig. 8.10

8.11. Volume Holder Ass'y (D02)

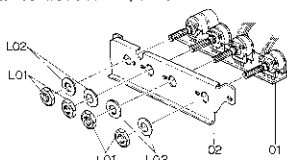


Fig. 8.11

8.12. Headphone Jack Ass'y (D03)

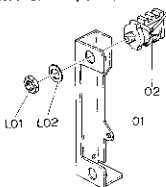


Fig. 8.12

8.13. Reflector Ass'y (D04)

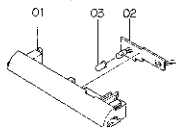


Fig. 8.13

8.14. Counter Lamp Ass'y (D05)

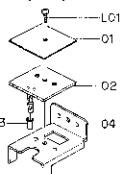


Fig. 8.14

8.15. Power Switch Holder Ass'y (D06)

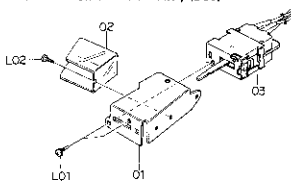


Fig. 8.15

Schematic Ref. No.	Part No.	Description	Q'ty	Schematic Ref. No.	Part No.	Description	Q'ty	
D01	JA03661A	Record Calibration Ass'y Serial No.: A11501001 -	1	D07	HA03952A	Rear Panel Ass'y (U.S.A. & Canada)	1	
					HA03953A	Rear Panel Ass'y (Japan)	1	
					HA03955A	Rear Panel Ass'y (220V Class 2)	1	
					HA03956A	Rear Panel Ass'y (Australia)	1	
	O1	BA04188A	Record Cal. P.C.B. Ass'y	1	HA03957A	Rear Panel Ass'y (UK)	1	
	O2	QJ04102B	Cal. P.C.B. Holder	1	HA03958A	Rear Panel Ass'y (Others)	1	
	L01	0E00856A	BT Screw M3x5 Phillips Binding Head	2	Serial No.: A11501001 -			
D02	JA03668A	Volume Holder Ass'y Serial No.: A11501001 -	1	O1	0H03818A	Rear Panel	1	
				O2	BA04176A	Pin Jack P.C.B. Ass'y	1	
				O3	0B03355A	4P DIN Socket	1	
				O4	0B09584A	8P DIN Socket	1	
				O5	BA04202A	Fuse P.C.B. Ass'y (U.S.A. & Canada)	1	
	O1	BA04175A	Volume P.C.B. Ass'y	1	BA04205A	Fuse P.C.B. Ass'y (Japan)	1	
	O2	QJ04100A	Volume Holder	1	BA04204A	Fuse P.C.B. Ass'y (220V Class 2)	1	
	L01	-	Volume Nut	(4)	BA04205A	Fuse P.C.B. Ass'y (UK & Australia)	1	
	L02	-	Volume Washer	(4)	BA04206A	Fuse P.C.B. Ass'y (Others)	1	
D03	JA03659A	Headphone Jack Ass'y Serial No.: A11501001 -	1	O6	0C01162B	Bolt Receptacle Plate	2	
				O7	0B06509B	Power Transformer (U.S.A. & Canada)	1	
				O1	0B0610A	Power Transformer (Japan)	1	
	O2	0B08511A	Headphone Jack	1	0B06612A	Power Transformer (220V Class 2, UK & Australia)	1	
	L01	-	Headphone Jack Nut	(1)	0B06511B	Power Transformer (Others)	1	
	L02	-	Headphone Jack Washer	(1)	0J04016A	Transformer Plate	1	
D04	JA03600A	Reflector Ass'y Serial No.: A11501001 -	1	O8	0B06037U	Cord Bushing C (U.S.A., Canada, Japan, 220V Class 2 & Others)	1	
				O9	0B08719A	Cord Bushing (Australia)	1	
				10	0E08351A	Cord Bushing 4x-4 (UK)	1	
					0B08530A	Power Cord (U.S.A., Canada & Others)	1	
	O1	0H03754C	Reflector	1	0B08219B	Power Cord (Japan)	1	
	O2	BA04063A	Lamp P.C.B. C Ass'y	1	0B08093A	Power Cord (220V Class 2)	1	
	O3	QJ04107A	Filter Cap	1	0B08566A	Power Cord (Australia)	1	
D05	JA03602A	Counter Lamp Ass'y Serial No.: A11501001 -	1	11	0B08348A	Power Cord (UK)	1	
				12	DA03154B	Cord Spacer	1	
					0J03659A	Switch Cover (U.S.A., Canada, Japan, 220V Class 2, Australia & UK)	1	
					0M02946A	Voltage Selector Lock Plate C (Others)	1	
	O1	QJ04063A	Insulator	1	0B07052U	Voltage Selector (Others)	1	
	O2	BA04062A	Lamp P.C.B. B Ass'y	1	QJ04079A	Caution B	3	
	O3	QJ04107A	Filter Cap	1	0M02458B	Pass Label	1	
	O4	QJ04041A	Counter Lamp P.C.B. Holder	1	0M04075A	Fuse Caution Label (U.S.A. & Canada)	1	
	L01	0E00856A	BT Screw M2.5x6 Phillips Binding Head	1	0M03794A	Voltage Label 100V (Japan)	1	
D06	JA03592A	Power Switch Holder Ass'y (U.S.A. & Canada)	1	* 13	0M03796A	Voltage Label 220V (220V Class 2)	1	
	JA03956A	Power Switch Holder Ass'y (Japan)	1	14	0M02397A	Voltage Label 240V (UK & Australia)	1	
	JA03954A	Power Switch Holder Ass'y (220V Class 2, UK, Australia & Other)	1	15	0M02955A	Voltage Label 120V/220V 240V (Others)	1	
				* 16	0M03844B	Power Cord Label (UK)	1	
		O1	QJ04038A	Power Switch Holder	1	0F01071A	Free up Belt	1
		O2	QJ04056A	Power Switch Insulator	1	0M04065A	Serial Number Plate	1
		O3	0B07280A	Power Switch (U.S.A. & Canada)	1	0B08720A	Plastic Rivet	4
				1	0E00594A	Screw M3x8 Phillips Binding Head (Bronze)	3	
				1	0E00622A	Screw M3x5 Phillips Pan Head (Zn)	2	
				1	0E00673A	BT Screw M2.5x6 Phillips Binding Head	1	
				1	0E00507A	Nut Hex. M3	3	

8.16. Rear Panel Ass'y (D07)

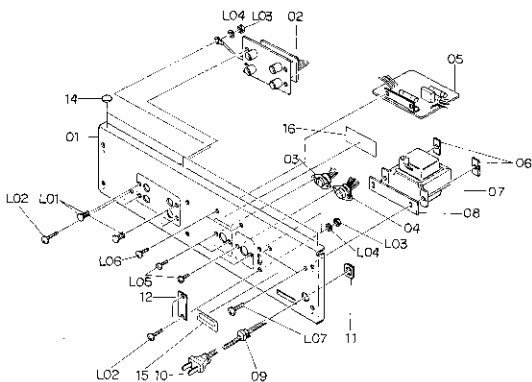
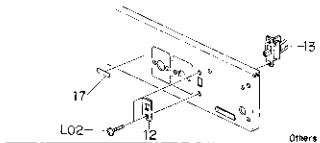


Fig. 8.16

Schematic Ref. No.	Part No.	Description	Qty
* L04	0E00581A	Washer 3mm (Spring)	3
L05	0E00714A	Screw M2.5x6 Phillips Binding Head (Bronze)	4
L06	0E00583A	Screw M3x6 Phillips Binding Head (Bronze)	2
L07	0E00756A	Screw M4x8 Phillips Binding Head (Bronze)	2
-	0J03644A	Chobert Rivet	2
*: Depends on the versions.			

Schematic Ref. No.	Part No.	Description	Qty	Schematic Ref. No.	Part No.	Description	Qty
E01	CA08117B	Reel Motor Ass'y Serial No.: A11501001 -	1	F03	CA08079B	Take-up Pressure Roller Ass'y Serial No.: A11503891 -	1
01	0C08218A	Reel Motor	1	01	0C08164F	Pressure Roller	1
02	0C08063F	Reel Motor Pulley	1	02	0C08151C	Take-up Tape Guide	1
E02	CA08034A	Control Motor Ass'y Serial No.: A11501001 -	1	03	CA08024A	Take-up Pressure Roller Arm Ass'y	1
01	0C08137A	Control Motor	1	L01	0E00042A	E-Ring 1.5mm	1
02	0C08064A	Control Motor Pulley	1	L02	0C08024A	Washer 2mm	2
03	0B09292A	Ceramic Capacitor 0.1µ 50V	1	L03	0E00788A	BT Screw M2x8 Philips Pan Head	1
04	0M03985A	Control Motor Label	1	F03	CA08079A	Take-up Pressure Roller Ass'y Serial No.: A11501001 - A11503890	1
05	0M03988A	Motor Seal B	1	01	0C08164F	Pressure Roller	1
E03	CA08148A	Azimuth Alignment Motor Ass'y Serial No.: A11501001 -	1	02	0C08181B	Take-up Tape Guide	1
01	CA08149A	Azimuth Motor Ass'y	1	03	CA08024A	Take-up Pressure Roller Arm Ass'y	1
02	0C08099B	Control Motor Bolt	1	L01	0E00042A	E-Ring 1.5mm	1
03	0C08229B	Drive Pulley	1	L02	0C08024A	Washer 2mm	2
04	0C08239B	Drive Pulley Shaft	1	L03	0E00788A	BT Screw M2x8 Philips Pan Head	1
05	0C08231B	Drive Nut	1	F04	CA08104A	Head Base Ass'y D Serial No.: A11501001 -	1
06	0C08232C	Drive Bar	1	01	GA02083A	E-SLH Erase Head	1
07	0C08233G	Drive Unit Base	1	02	0C08158C	EH Hold Plate	1
L01	0E00226A	Screw M2.6x4 Philips Pan Head	2	03	0C08186A	EH Hold Plate Spring	1
L02	0E00837A	Stopper Ring 3mm	1	04	0C08174C	Cassette Hold Spring	1
F01	CA08147A	Head Mount Base Ass'y Serial No.: A11501001 -	1	05	CA08003P	Head Base Ass'y	1
01	0C08028C	Head Height Adjustment Gear	2	06	0C08175A	Head Base L Spring	3
02	0C08027E	Head Height Adjustment Screw	4	07	0B08649E	2P-H Connector	1
03	0C08026D	Azimuth Alignment Screw	2	L01	0E00888A	Screw M1.7x8 Philips Pan Head	2
04	0C08161B	Spring Stopper	2	L02	0E00909A	Screw M2x6 Philips Pan Head	3
05	0C08187B	Head Plate Spring	2	L03	0E00117A	Washer 2mm	3
06	0C08236A	Azimuth Alignment Wire Hold Plate	1	L04	0E00853A	BT Screw M2x3 Philips Pan Head	1
07	CA08083C	Head Mount Base Sub Ass'y	1	F05	CA08125A	Cassette Case Holder L Ass'y Serial No.: A11501001 -	1
08	CA08158A	P-SL Playback Head Ass'y	1	01	CA08090F	Cassette Case Holder L Sub Ass'y	1
09	0C08235A	Azimuth Alignment Plate	1	02	0C08073C	Lid Arm A	1
10	CA08150A	R-SL Record Head Ass'y	1	03	0C08195F	Eject Arm Holder	1
L01	0E00917A	BT Screw M2.6x5 Philips Pan Head	2	04	0C08196B	Eject Arm A	1
F02	CA08053B	Supply Pressure Roller Ass'y Serial No.: A11501001 -	1	05	0C08197C	Eject Arm B	1
01	0C08164F	Pressure Roller	1	06	0C08199B	Eject Arm Joint	1
02	0C08193B	Supply Tape Guide	1	07	0C08144A	Lid Arm Spring	1
03	CA08061A	Supply Pressure Roller Arm Ass'y	1	08	0C08211C	Eject Arm Spring	1
L01	0E00042A	E-Ring 1.5mm	1	L01	0E00837A	Stopper Ring 3mm	1
L02	0C08024A	Washer 2mm	2	L02	0E00838A	Stopper Ring 4mm	1
L03	0E00788A	BT Screw M2x8 Philips Pan Head	1	L03	0E00865A	BT Screw M3x10 Philips Binding Head	2
F06	CA08022A	Cassette Case Holder R Ass'y Serial No.: A11501001 -	1	F06	CA08022A	Cassette Case Holder R Ass'y Serial No.: A11501001 -	1
01	0C08133A	Eject Sensor	1	01	0C08133A	Eject Sensor	1
02	CA08044A	Cassette Case Holder R Sub Ass'y	1	02	CA08044A	Cassette Case Holder R Sub Ass'y	1
L01	0E00840A	BT Screw M2x8 Philips Pan Head	2	L01	0E00840A	BT Screw M2x8 Philips Pan Head	2

8.17. Reel Motor Ass'y (E01)



Fig. 8.17

8.18. Control Motor Ass'y (E02)




Fig. 8.18

8.19. Azimuth Alignment Motor Ass'y (E03)

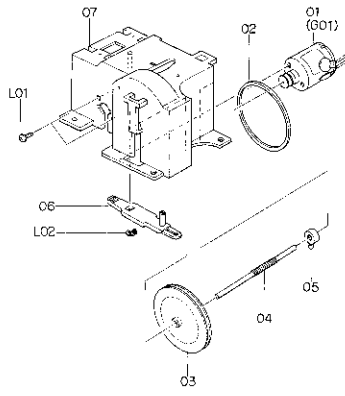


Fig. 8.19

8.20. Head Mount Base Ass'y (F01)

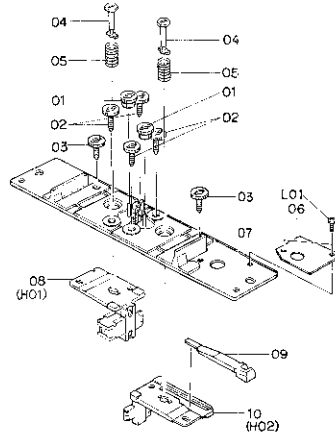


Fig. 8.20

8.21. Supply Pressure Roller Ass'y (F02)

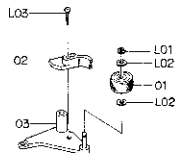


Fig. 8.21

8.22. Take-up Pressure Roller Ass'y (F03)

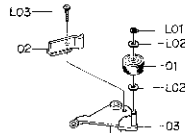


Fig. 8.22

8.23. Head Base Ass'y D (F04)

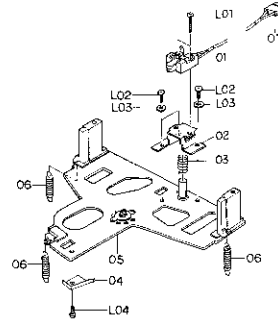


Fig. 8.23

8.24. Cassette Case Holder L Ass'y (F05)

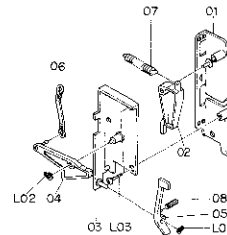


Fig. 8.24

8.25. Cassette Case Holder R Ass'y (F06)

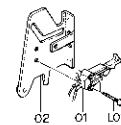


Fig. 8.25

Schematic Ref. No.	Part No.	Description	Qty
F07	CA08099A	Auto Shut-off Ass'y Serial No.: A11501001 -	1
01	0C08047A	Shut-off Pulley	2
02	0C08206B	Shut-off Pulley	1
03	0C08210A	Shut-off Pulley Shaft	1
04	0C08207E	Shut-off Pulley Holder	1
06	6A08100A	Shut-off P.C.B. Ass'y	1
F06	CA08030A	Pneumatic Damper Ass'y Serial No.: A11501001 -	1
01	0C08058C	Damper Piston	1
02	0C08102B	Damper Ring	1
03	0C08010C	Damper Plate	1
04	0C08059E	Cylinder	1
L01	DE00674A	Stopper Ring CS 2mm	1
F09	CA08105A	Pitch Control Holder Ass'y Serial No.: A11501001 -	1
01	0B07283A	Memory Switch	1
02	0B07282A	Volume Control 20kΩ (B)	1
03	0C08214D	Pitch Control Holder	1
L01	DE00125A	Screw M2x6 Phillips Countersunk	2
L02	-	Volume Nut	(1)
L03	-	Volume Washer	(1)
G01	CA08149A	Azimuth Motor Ass'y Serial No.: A11501001 -	1
01	0C08137A	Control Motor	1
02	0C08064A	Control Motor Pulley	1
03	0B09292A	Ceramic Capacitor 0.1μ 50V Z	2
04	0M09985A	Motor Label 730	1
05	0M03988A	Motor Seal A	1
06	0B08708A	2P Connector	1
H01	CA08158A	P-BL Playback Head Ass'y Serial No.: A11501001 -	1
01	0C08160F	Head Plate	1
02	6A02034A	P-BL Playback Head	1
03	0C08169D	Pad Lifter S4	1
04	0B08647D	4P-M Connector	1
L01	DE00885A	Screw M1.7x6.5 Phillips Pan Head	2
H02	CA08150A	R-RL Record Head Ass'y Serial No.: A11501001 -	1
01	0C08159C	Head Plate	1
02	6A01090A	R-RL Record Head	1
03	0B08648D	4P-H Connector	1
L01	DE00687A	Screw M1.7x4 Phillips Pan Head	2

8.26. Auto Shut-off Ass'y (F07)

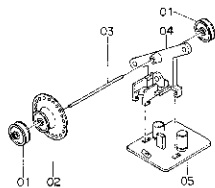


Fig. 8.26

8.27. Pneumatic Damper Ass'y (F08)

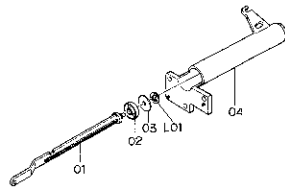


Fig. 8.27

8.28. Pitch Control Holder Ass'y (F09)

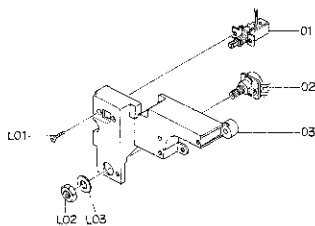


Fig. 8.28

8.29. Azimuth Motor Ass'y (G01)

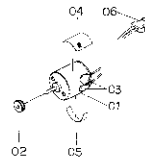


Fig. 8.29

8.30. P-BL Playback Head Ass'y (H01)

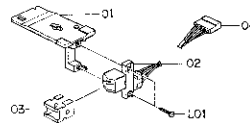


Fig. 8.30

8.31. R-RL Record Head Ass'y (H02)



Fig. 8.31

9. OVERALL TIMING CHART

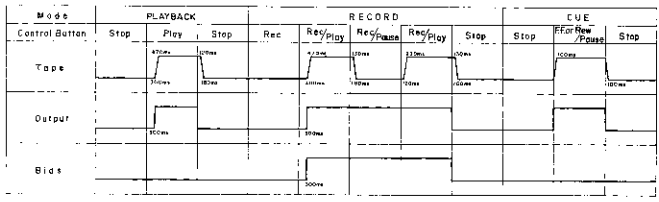


Fig. 9

10. EQ. AMP. FREQUENCY RESPONSE

10.1. Playback Frequency Response

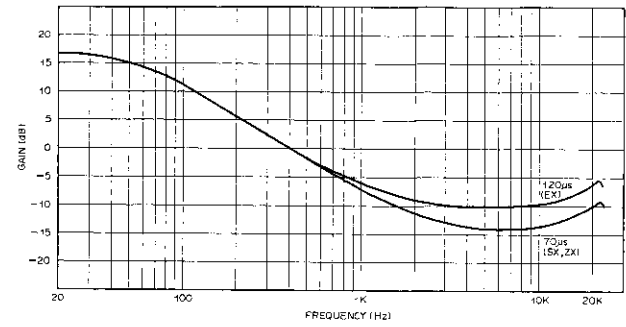


Fig. 10.1

10.2. Record Current Frequency Response

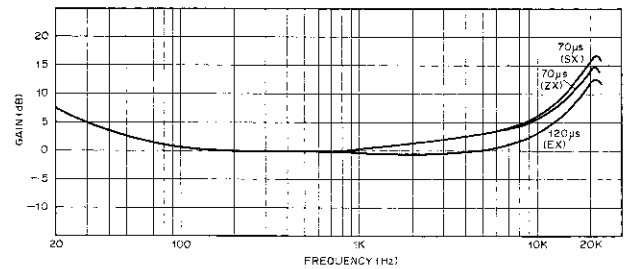


Fig. 10.2

11. BLOCK DIAGRAMS

11.1. Amplifier

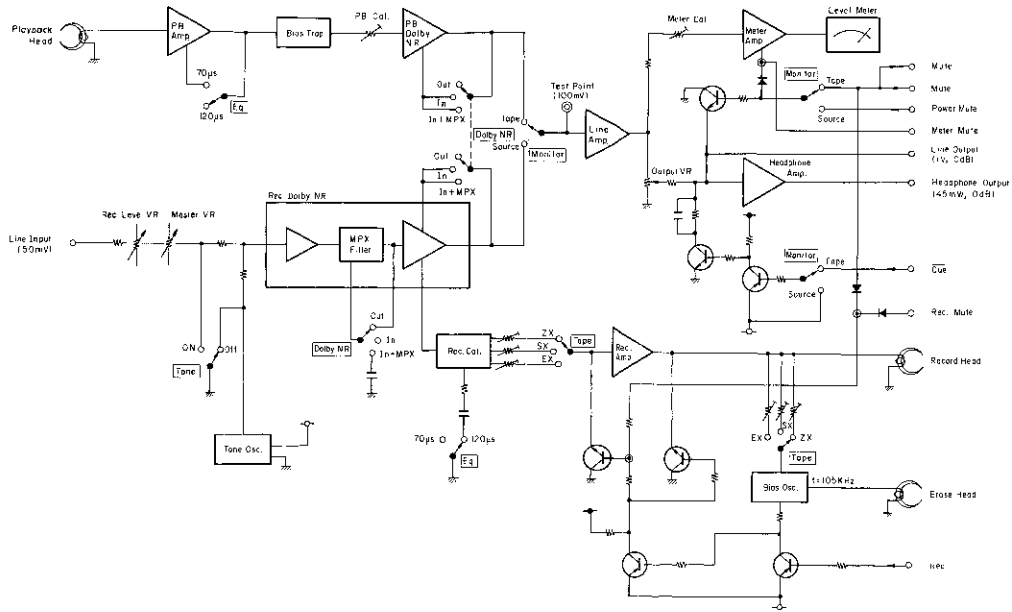


Fig. 11.1

11.2. Mechanism Control

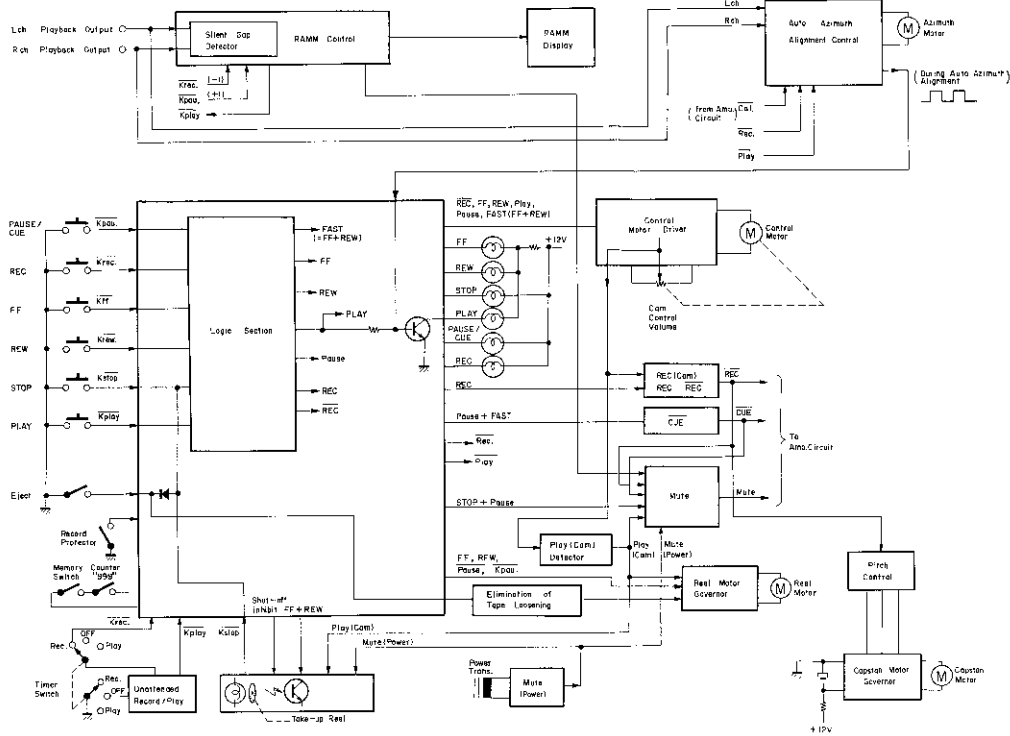


Fig. 11.2

12. WIRING DIAGRAM


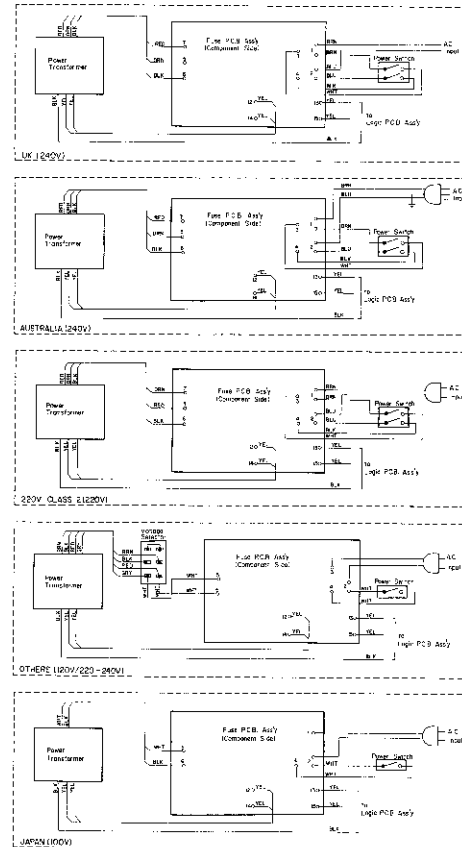


Fig. 12.1

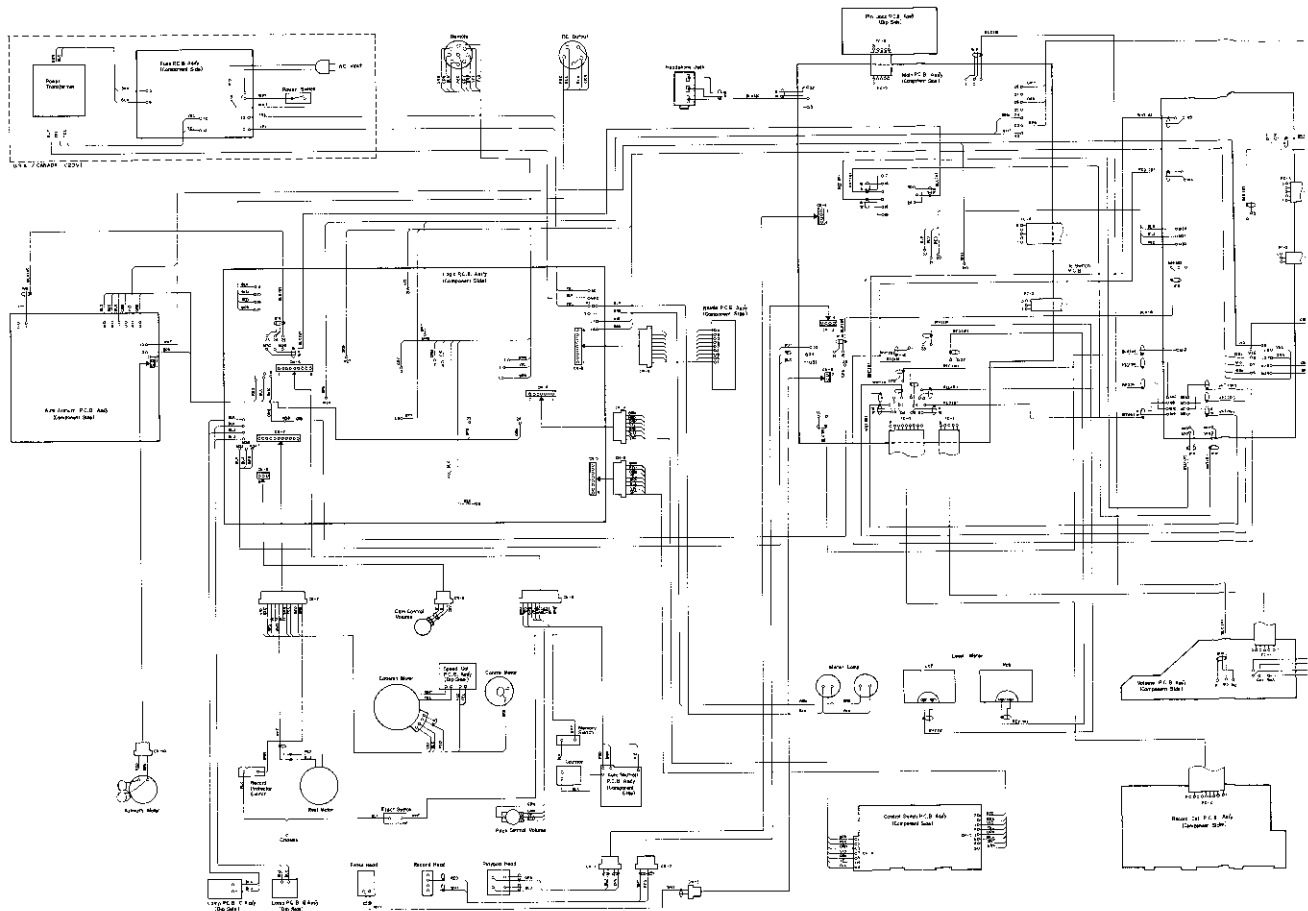

- Notes:
- Table of wire colors
 BLK - Black
 BLU - Blue
 GRN - Green
 RED - Red
 WHT - White
 ORN - Orange
 GRY - Gray
 BRN - Brown
 YEL - Yellow
 VIO - Violet
 - Table of wire tube colors
 (B) - Black
 (R) - Red
 (W) - White
 (G) - Gray

Fig. 12.2

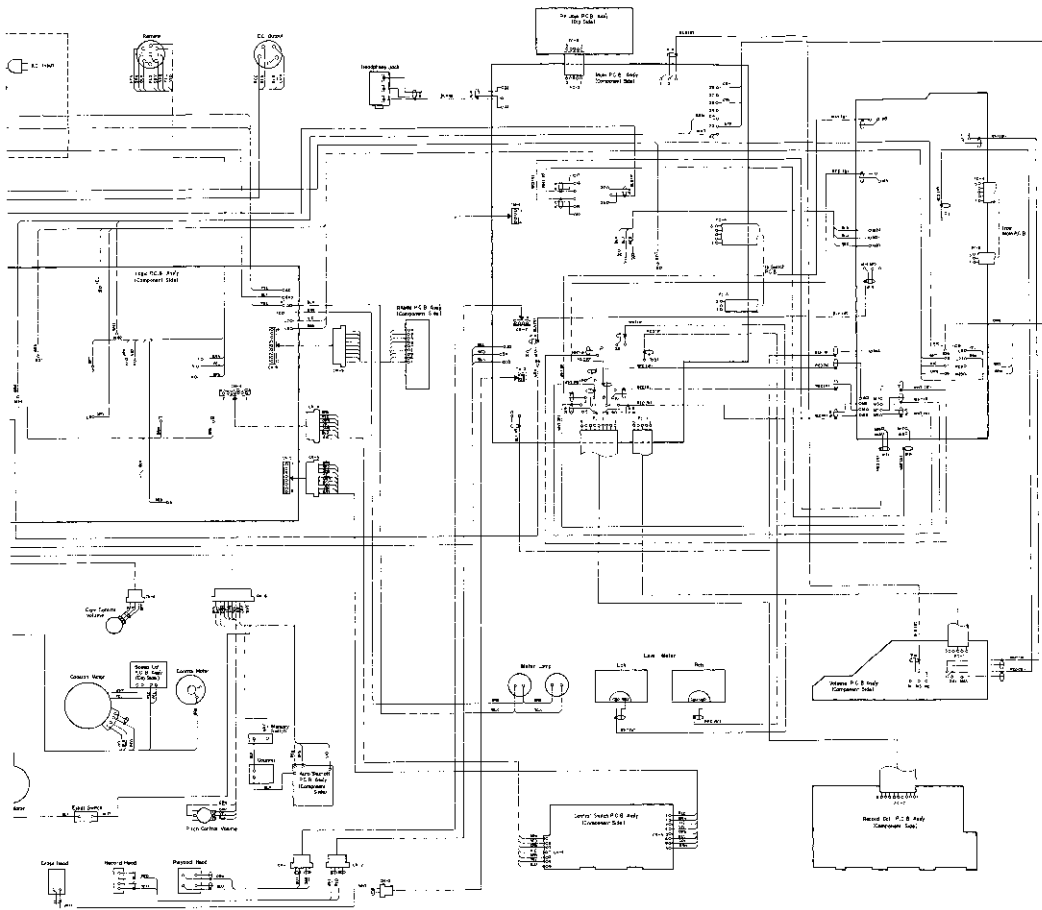


Fig. 12.2

13. SCHEMATIC DIAGRAMS

13.1. Amplifier

- Notes:
1. Diode is 1S553, 1S953, or 1S1555 unless otherwise specified.
 2. Resistor and capacitor marked with * show typical value.


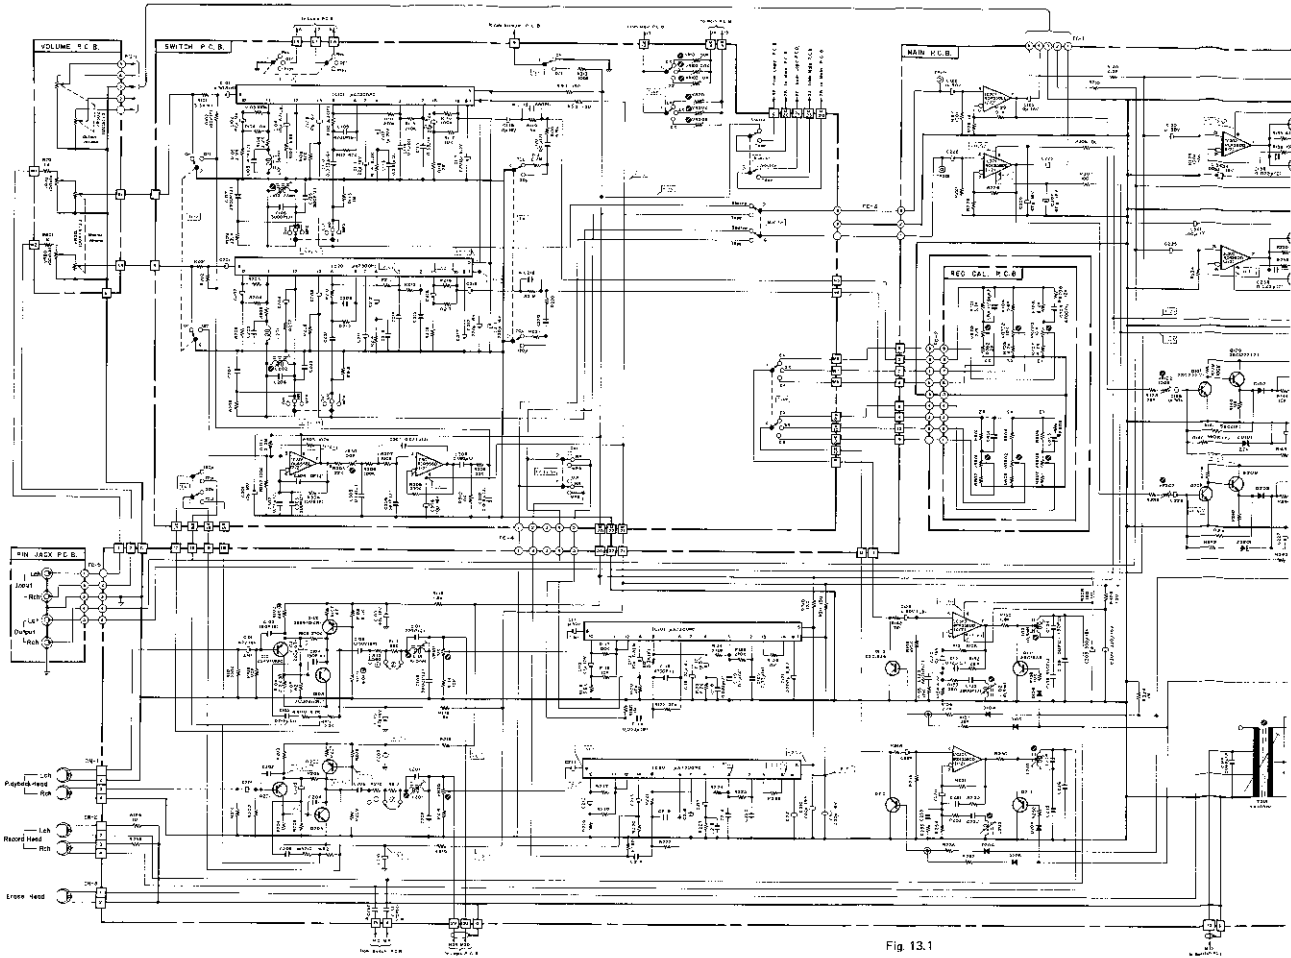



Fig. 13.1

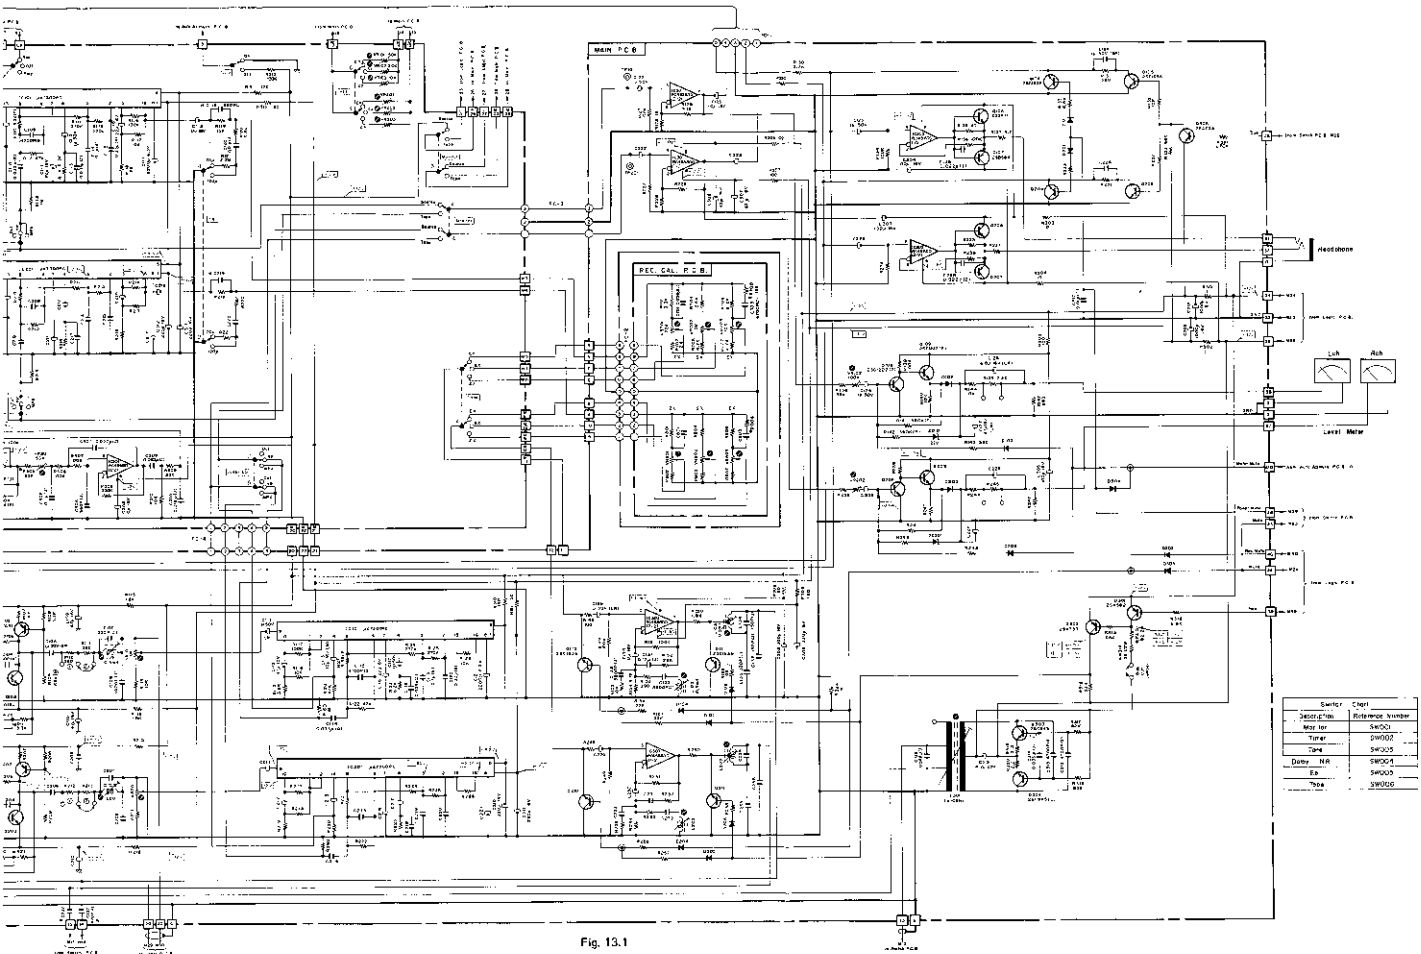

Symbol	Code	Qty
Resistor	Res	1000
Capacitor	Cap	1000
IC	IC	1000
Relay	Rel	1000
Meter	Mtr	1000
Terminal	Term	1000
Wiring	Wiring	1000
Other	Other	1000


Fig. 13.1

13.2. Mechanism Control

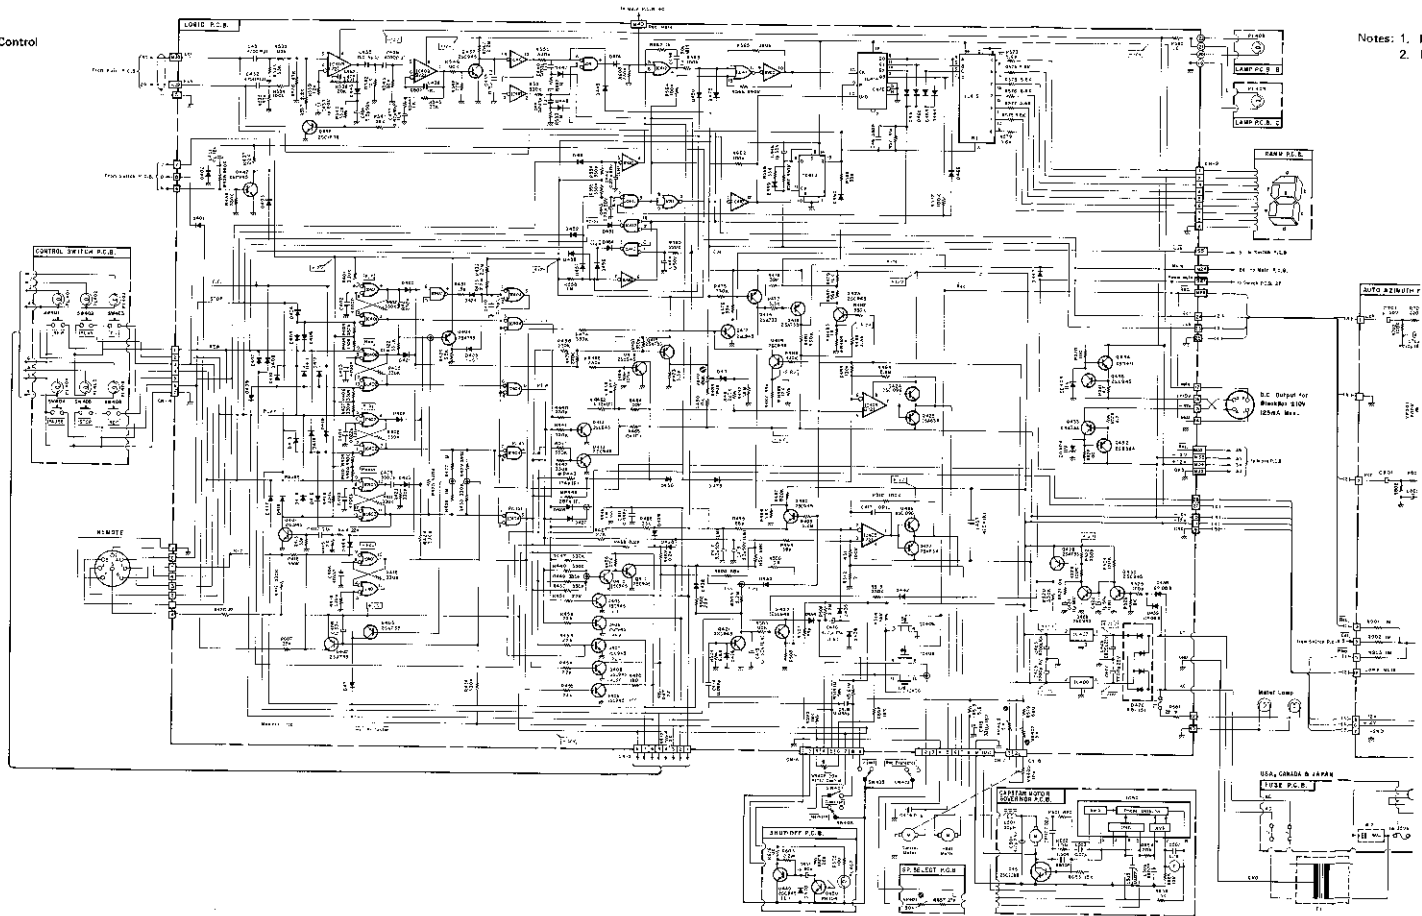

Notes: 1. I
2.

Fig 13.2

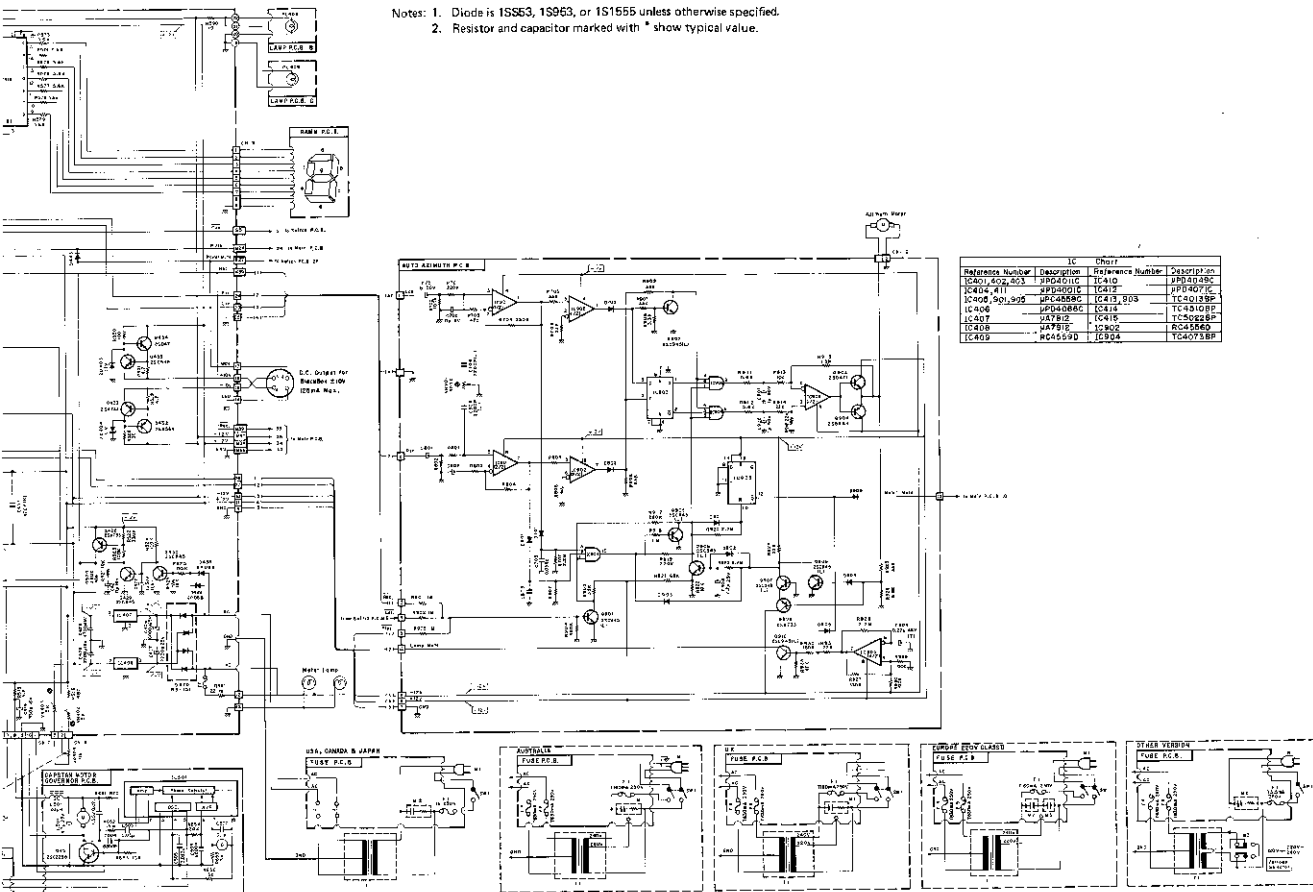

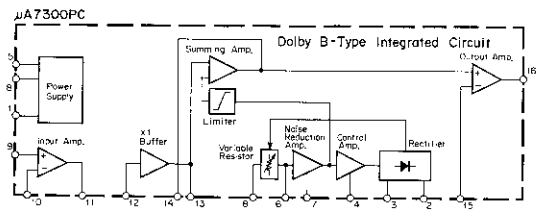


Fig. 13.3 Dolby NR IC μA7300PC

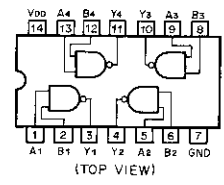


Fig. 13.8 NAND Gate C-MOS IC μPD4011C (TOP VIEW)

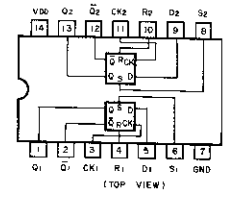


Fig. 13.11 D-Type Flip-Flop C-MOS IC TC4113BP (TOP VIEW)

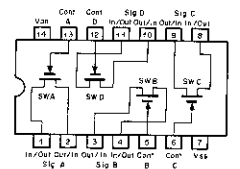


Fig. 13.4 Bilateral Switch C-MOS IC μPD4066C

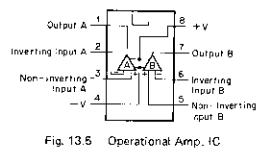


Fig. 13.5 Operational Amp. IC (TOP VIEW)

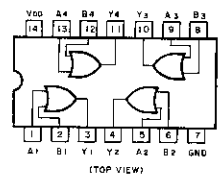


Fig. 13.9 OR Gate C-MOS IC μPD4071C (TOP VIEW)

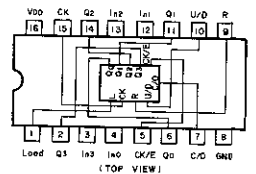


Fig. 13.12 BCD Up/Down Counter C-MOS IC TC4510BP (TOP VIEW)

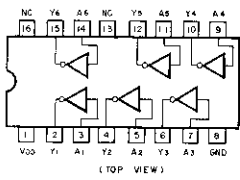


Fig. 13.6 Inverter C-MOS IC μPD4049C (TOP VIEW)

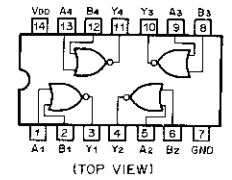


Fig. 13.7 NOR Gate C-MOS IC μPD4001C (TOP VIEW)

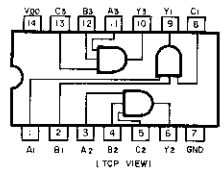


Fig. 13.10 AND Gate C-MOS IC μPD4073C (TOP VIEW)

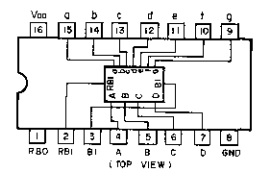


Fig. 13.13 BCD to 7-segment Decoder/Driver C-MOS IC TC5022BP (TOP VIEW)

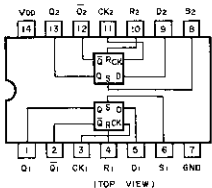


Fig. 13.11 D-Type Flip-Flop C-MOS IC TC4013BP

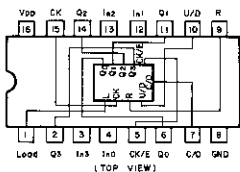


Fig. 13.12 BCD Up/Down Counter C-MOS IC TC4510BP

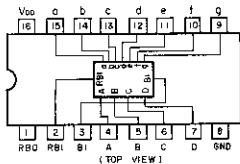


Fig. 13.13 BCD to 7-segment Decoder/Driver C-MOS IC TC5022BP

14. SPECIFICATIONS

Power Source	100, 120, 120/220-240, 220 or 240 V; 50/60 Hz (according to country of sale)
Power Consumption	27 W max.
Tape Speed	1-7/8 ips, (4.8 cm/sec.) \pm 0.5%
Frequency Response	10-22,000 Hz \pm 3 dB (-20 dB rec. level, ZX tape)
Signal-to-Noise Ratio	Better than 66 dB (IHF-A WTD RMS, ref. 400 Hz, 3% THD, w/Dolby NR, ZX tape, 70 μ sec EQ)
Total Harmonic Distortion	Less than 0.8% at 400 Hz, 0 dB w/ZX tape Less than 1.0% at 400 Hz, 0 dB w/SX, EX-II tapes
Wow-and-Flutter	Less than 0.08% WTD peak, 0.04% WTD RMS
Erasure	Better than 60 dB below saturation level at 1 kHz
Separation	Better than 37 dB at 1 kHz, 0 dB
Crosstalk	Better than 60 dB at 1 kHz, 0 dB
Bias Frequency	105 kHz
Input	50 mV, 50 k ohms
Output	1 V (400 Hz, 0 dB, output control at max.) 2.2 k ohms
Headphone Output	45 mW (at 400 Hz, 0 dB, 8 ohms)
DC Output Jack	\pm 10 V DC, 125 mA max.
Dimensions	482(W) x 143(H) x 340(D) millimeters 19(W) x 5-5/8(H) x 13-3/8(D) inches
Approximate Weight	9 kg. 19 lb. 13 oz

- Specifications and appearance design are subject to change for further improvement without notice.
- Dolby NR under license from Dolby Laboratories.
- The word "DOLBY" and the Double-D-Symbol are trademarks of Dolby Laboratories.