




Service Manual

Nakamichi

TA-4
TA-4A
TA-4E

High Definition Tuner Amplifier

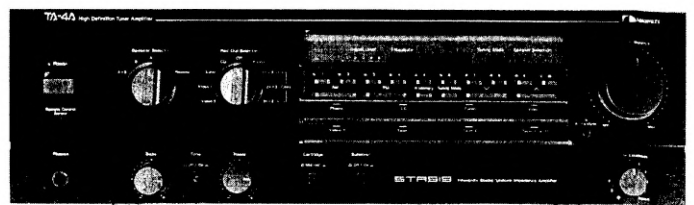


CONTENTS

1.	General	1
2.	Removal Procedures	3
2. 1.	Top Cover Ass'y and Bottom Cover Ass'y	3
2. 2.	Front Panel Ass'y, Remote Control Sensor P.C.B. Ass'y and Power Indicator P.C.B. Ass'y	3
2. 3.	Front Chassis Ass'y and Control Switch & Display P.C.B. Ass'y	3
2. 4.	How to Disconnect/Connect Flat Cable	4
2. 5.	Video & Logic P.C.B. Ass'y	4
3.	Parts Location for Electrical Adjustment	5
4.	Electrical Adjustments	6
4. 1.	Power Amplifier Section	6
4. 2.	Tuner Section	6
4.2.1.	FM Tuner Section	6
4.2.2.	AM Tuner Section	8
5.	Mechanism Ass'y and Parts List	9
5. 1.	Synthesis	9
5. 2.	Front Panel Ass'y (A01)	10
5. 3.	Front Chassis Ass'y (A02)	10
5. 4.	Chassis Ass'y (A03)	11
5. 5.	Heat Sink Ass'y (B01)	13
6.	Mounting Diagrams and Parts List	14
6. 1.	Power Switch P.C.B. Ass'y	14
6. 2.	Speaker Terminal P.C.B. Ass'y	14
6. 3.	Pin Jack P.C.B. Ass'y	14
6. 4.	Headphone Jack P.C.B. Ass'y	14
6. 5.	Power Indicator P.C.B. Ass'y	14
6. 6.	Volume Indicator P.C.B. Ass'y	15
6. 7.	Volume Motor P.C.B. Ass'y	15
6. 8.	Transistor Joint P.C.B. Ass'y	15
6. 9.	Remote Control Sensor P.C.B. Ass'y	15
6. 10.	IF Band Switch P.C.B. Ass'y	15
6. 11.	Selector P.C.B. Ass'y	15
6. 12.	Remote Jack P.C.B. Ass'y	16
6. 13.	Volume P.C.B. Ass'y	16
6. 14.	Power Supply P.C.B. Ass'y	16
6. 15.	Standby P.C.B. Ass'y	17
6. 16.	Tone Control P.C.B. Ass'y	17
6. 17.	Control Switch & Display P.C.B. Ass'y	19
6. 18.	Tuner P.C.B. Ass'y	21
6. 19.	Video & Logic P.C.B. Ass'y	24
6. 20.	Main P.C.B. Ass'y	25
7.	Schematic Diagrams	27
7. 1.	IC Block Diagrams	27
7. 2.	Schematic Diagrams	30
7.2.1.	Tuner Section	30
7.2.2.	Video and Control Section	31
7.2.3.	Amplifier Section	32
8.	Wiring Diagram	33
9.	Block Diagrams	34
9. 1.	Tuner Section	34
9. 2.	Amplifier Section	35
10.	Specifications	36

1. GENERAL

1.1. CAUTIONS/WARNINGS

(1) Product Safety Notice

Parts marked with the symbol  in the schematic diagram have critical characteristics.

Use ONLY replacement parts recommended by the manufacturer.

It is recommended that the unit be operated from a suitable DC supply or batteries during initial check-out procedures.

(2) Leakage Current Check/Resistance Check

Before returning the unit to the customer, make sure you make either (1) a leakage current check or (2) a line to chassis resistance check. If the leakage current exceeds 0.5 milliamp, or if the resistance from chassis to either side of the power cord is less than 240 k ohms, the unit is defective.

WARNING — DO NOT return the unit to the customer until the problem is located and corrected.

(3) Lithium Battery Caution

Use **ONLY** replacement parts recommended by the manufacturer. Replacement must be done only by qualified service personnel because of risk for explosion.

VARNING

Litiumbatteri. Explosionsfare ved felaktig hantering. Byte får endast ske av sakkunnig personal enligt servicedokumentationens anvisningar.

ADVARSEL!

Lithiumbatterier. Eksplosionsfare. Udskiftning må kun foretages af en sagkyndig og som beskrevet i servicemanualen. batterierne kun må udskiftes med batterier af samme fabrikat og type.

1.2. Destination

- TA-4: Other
- TA-4A: U.S.A. & Canada
- TA-4E: Europe

1.3. Voltage Selector

Voltage selector is installed on the rear panel of the TA-4 (Other). This voltage selector can select 110, 120, 220, or 240 V at customer's disposal.

1.4. Package Ass'y

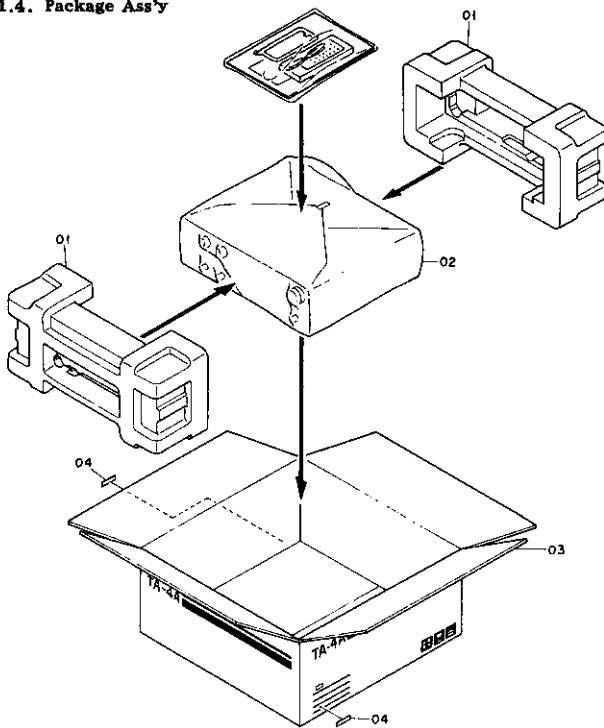


Fig. 1.1

1.5. Accessory Ass'y

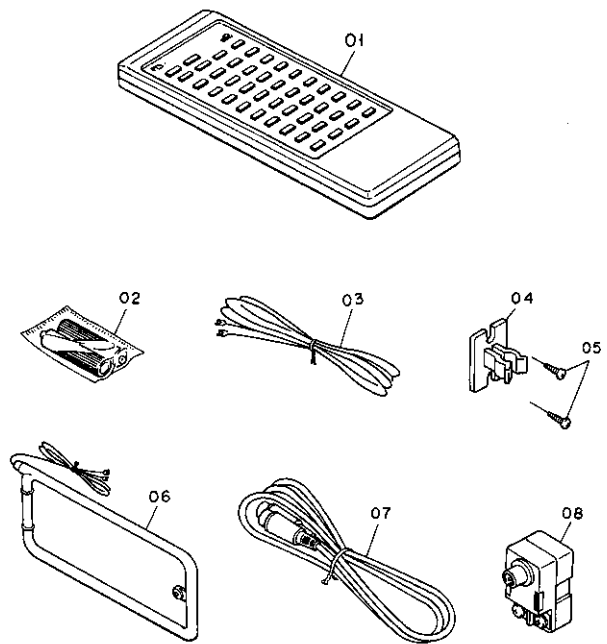


Fig. 1.2

Schematic Ref. No.	Part No.	Description	Qty	Schematic Ref. No.	Part No.	Description	Qty
		Package Ass'y				Accessory Ass'y	
01	0F04176A	Packing (TA-4/4E)	2	01	DA04183A	Remote Control Unit	1
	0F04175B	Packing (TA-4A)	2	02	0B90242A	Battery AA Type x 2 (TA-4/4E)	1
02	0F04212A	Soft Sheet (TA-4/4E)	1		0B90341A	Battery AA Type x 2 (TA-4A)	1
	0F04177A	Soft Sheet (TA-4A)	1	03	0B90320A	Feeder Antenna	1
03	0F04172A	Carton Box (TA-4)	1	04	0B90319A	AM Loop Antenna Holder	1
	0F04171A	Carton Box (TA-4A)	1	05	0E03496A	Screw 3.1x10 Ⓞ (For Wood)	2
	0F04174A	Carton Box (TA-4E)	1			(Black Chromate)	
04	0M05281A	Serial Number Label (TA-4/4E)	2	06	0B90318A	AM Loop Antenna	1
	0M05199A	Serial Number Label (TA-4A)	2	07	0B83465A	8P DIN Cable	1
				08	0B90194A	Antenna Adapter F YAE21-0120 (TA-4/4A)	1
					0B90208A	Antenna Adapter EP FA-322 (TA-4E)	1
				—	0D04872D	Owner's Manual (English/ German/French)	1
				—	0D04836C	Warranty Card (TA-4A)	1
				—	0J05916A	Speaker Terminal Bush (TA-4E)	8

2. REMOVAL PROCEDURES

2.1. Top Cover Ass'y and Bottom Cover Ass'y

Refer to Fig. 2.1.

- (1) Loosen screws F01 (5 pcs.) and remove F02 (Top Cover Ass'y).
- (2) Loosen screws F03 (13 pcs.) and remove F04 (Bottom Cover Ass'y).
- (3) Loosen screws F05 (2 pcs.) and remove legs F06 (2 pcs.) in order to place the unit horizontally.

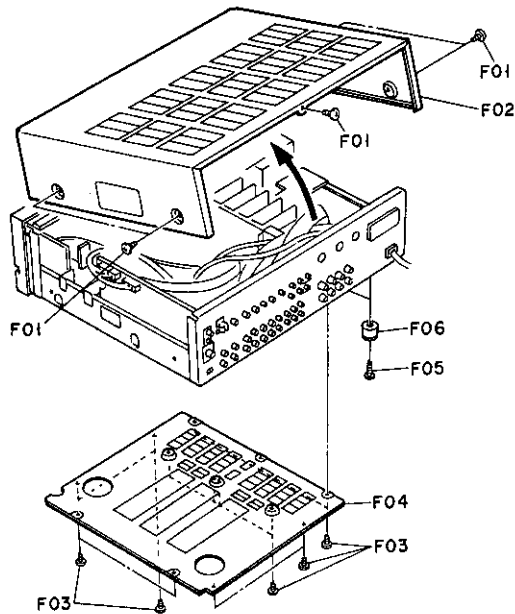


Fig. 2.1

2.2. Front Panel Ass'y, Remote Control Sensor P.C.B. Ass'y and Power Indicator P.C.B. Ass'y

Refer to Figs. 2.2.1 and 2.2.2.

- (1) Remove the Top Cover Ass'y and Bottom Cover Ass'y referring to item 2.1.
- (2) Loosen screws F01 (3 pcs.) and F02 (3 pcs.).
- (3) Remove F03 (Tone Volume Knob Ass'y, 2 pcs.), F04 (Selector Knob Ass'y, 2 pcs.), and F05 (Power Button). Note: F05 (Power Button) is hard to remove.
- (4) Turn F06 (Front Panel Ass'y) in the direction of the arrow.
- (5) Loosen a screw F07 and remove F08 (Remote Control Sensor P.C.B. Ass'y). Refer to Fig. 2.2.2.
- (6) Loosen a screw F09 and remove F10 (Power Indicator P.C.B. Ass'y).

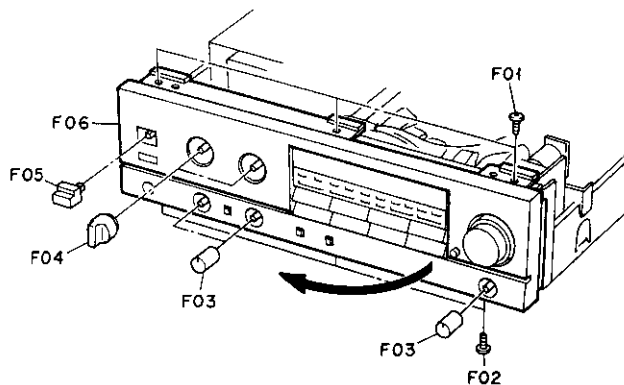


Fig. 2.2.1

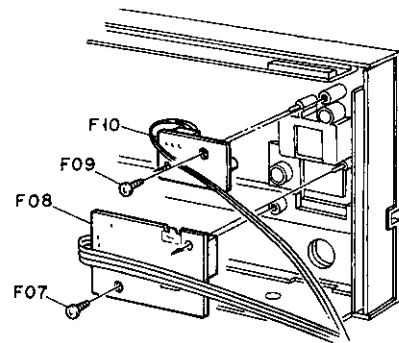


Fig. 2.2.2

2.3. Front Chassis Ass'y and Control Switch & Display P.C.B. Ass'y

Refer to Figs. 2.3.1 and 2.3.2.

- (1) Remove the Front Panel Ass'y referring to item 2.2.
- (2) Loosen screws F01 (4 pcs.) and remove F02 (Front Chassis Ass'y). Note: As the pins of F02 (Front Chassis Ass'y) are inserted into the chassis, pull F02 (Front Chassis Ass'y) toward you to separate it.
- (3) Loosen screws F03 (6 pcs.), unhook Claws (2 pcs.), and remove F04 (Control Switch & Display P.C.B. Ass'y). Refer to Fig. 2.3.2. Note: To disconnect flat cables of F04 (Control Switch & Display P.C.B. Ass'y) from Video & Logic P.C.B. Ass'y, refer to item 2.4.

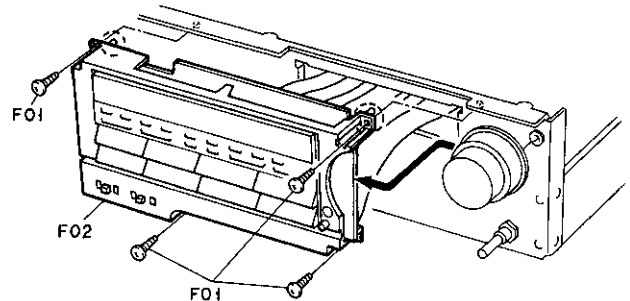


Fig. 2.3.1

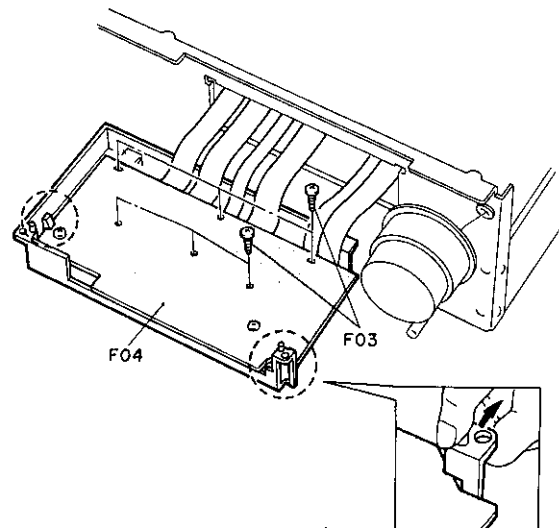


Fig. 2.3.2

2.4. How to Disconnect/Connect Flat Cable

Refer to Figs. 2.4.1 and 2.4.2.

- (1) To disconnect a flat cable, press down F01 (Connector Cover) strongly and remove F02 (Flat Cable). Refer to Fig. 2.4.1.
- (2) To connect a flat cable, straighten the leads of flat cable and position each lead to the grooves of connector. Refer to Fig. 2.4.2.
- (3) Press down F01 (Connector Cover) and insert F02 (Flat Cable).

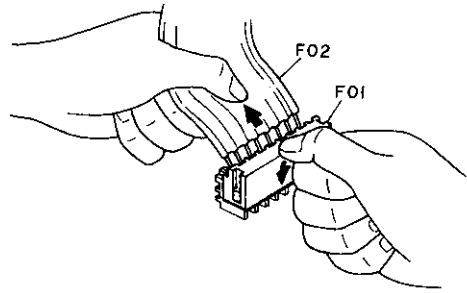


Fig. 2.4.1

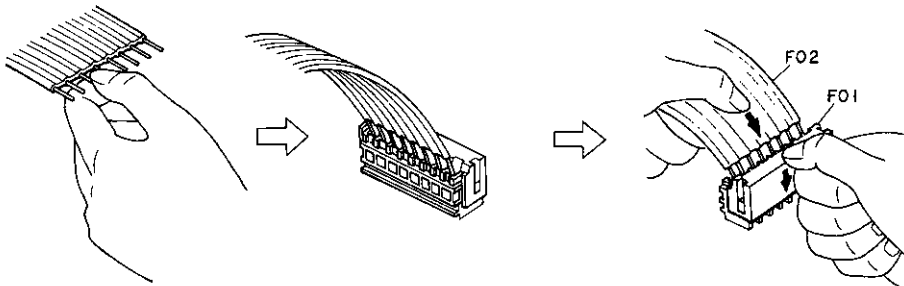


Fig. 2.4.2

2.5. Video & Logic P.C.B. Ass'y

Refer to Figs. 2.5.1 and 2.5.2.

- (1) Remove the Top Cover Ass'y referring to item 2.1.
- (2) Disconnect all connectors from F04 (Video & Logic P.C.B. Ass'y). Disconnect flat cables referring to item 2.4.
- (3) Loosen screw F01 (5 pcs.) and F02 (4 pcs.).
- (4) Unhook F03 using pliers.
- (5) Turn F04 (Video & Logic P.C.B. Ass'y) as shown in Fig. 2.5.2.

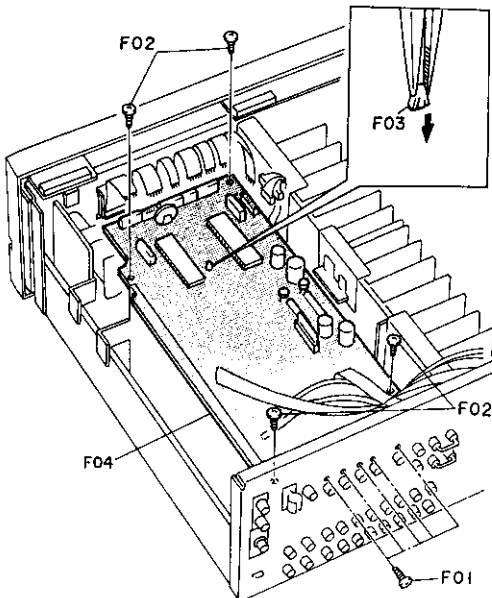


Fig. 2.5.1

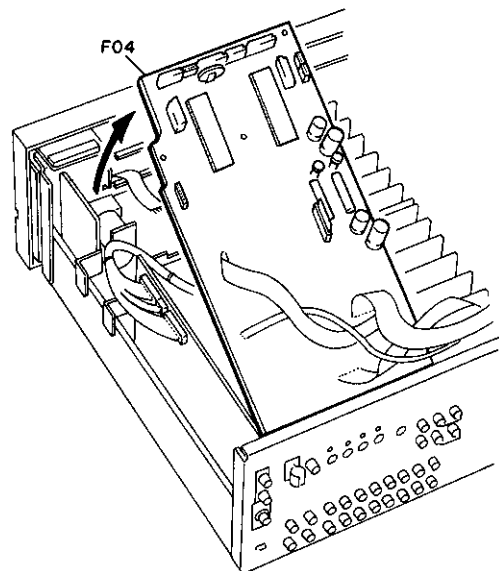


Fig. 2.5.2

3. PARTS LOCATION FOR ELECTRICAL ADJUSTMENT

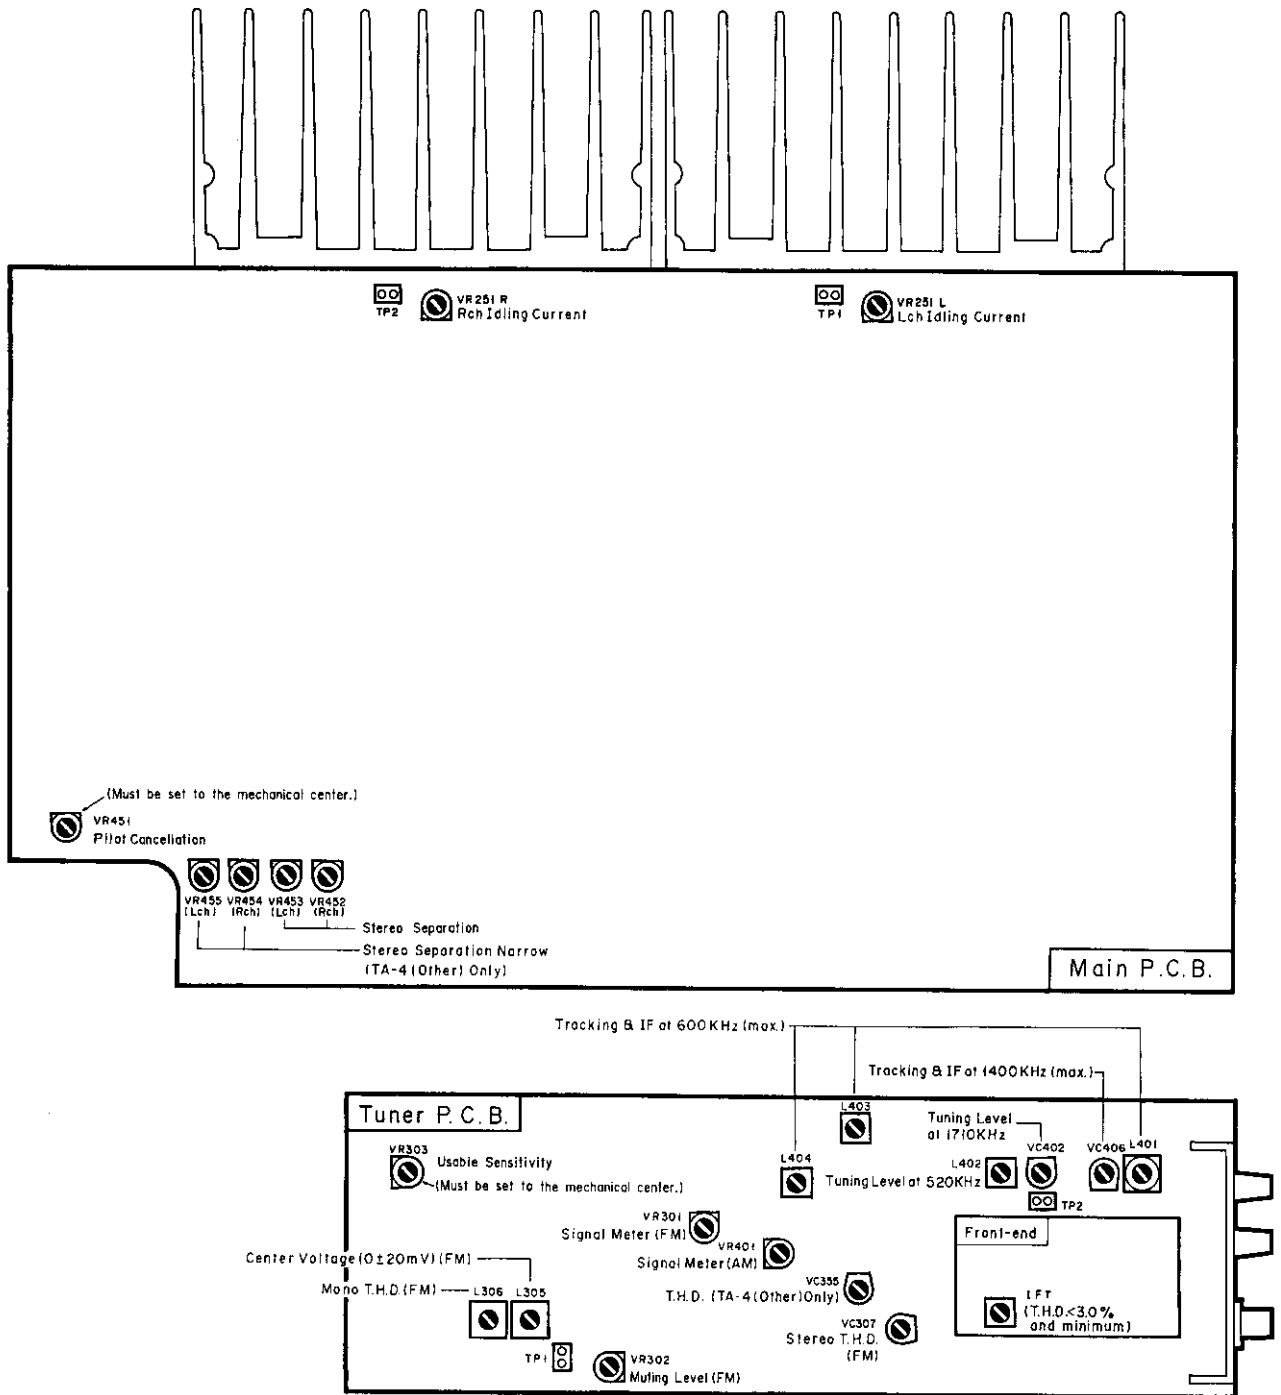


Fig. 3

4. ELECTRICAL ADJUSTMENTS

4.1. Power Amplifier Section

STEP	ITEM	SIGNAL SOURCE	OUTPUT CONNECTION	MODE	ADJUSTMENT	REMARKS
1	Idling Current	None	DC Voltmeter between both Pins of TP1 (Pins of TP2) on Main P.C.B.	Monitor Selector - CD Output Level - Min. Speaker Selector - OFF	Main P.C.B. VR251L VR251R	<ol style="list-style-type: none"> 1. Insert shorting plugs into the CD Player Input Jacks. 2. Turn ON the power and allow 3 minutes before adjustment. (Top Cover must be installed in this period of time.) 3. Adjust VR251L (VR251R) to obtain 25 mV \pm5 mV on the DC voltmeter.

4.2. Tuner Section

Note: Adjustment should be made in a shielded room in principle.

4.2.1. FM Tuner Section

STEP	ITEM	OUTPUT CONNECTION	MODE	ADJUSTMENT	REMARKS
1	Preliminary Step	See Fig. 4.1	Tuner Amplifier Monitor Selector - Tuner Band Selector - FM Rec.Out Selector - Tuner Signal Generator Freq. - 98 MHz RF Level - 65 dBf Modulation - See REMARKS		<ol style="list-style-type: none"> 1. Set the Tuner Amplifier as indicated in the MODE. 2. Adjustment and confirmation should be made after tuning in to the set carrier frequency of the Signal Generator. <p>Note: Contents of modulation</p> <ol style="list-style-type: none"> 1. For U.S.A., Canada & Other (Wide) <ul style="list-style-type: none"> o Stereo Audio: 1 kHz, 91% Pilot: 19 kHz, 9% o Mono Audio: 1 kHz, 100% 2. For Europe & Other (Narrow) <ul style="list-style-type: none"> o Stereo Audio: 1 kHz, 51% Pilot: 19 kHz, 9% o Mono Audio: 1 kHz, 60%
2	Usable Sensitivity Adjustment	Distortion Meter to Tape 1 Record Output Jacks	Tuner Amplifier Same as above Signal Generator Freq. - 98 MHz RF Level - 13.5 dBf Modulation - Mono	Tuner P.C.B. Front-end IFT	<ol style="list-style-type: none"> 1. Set the Tuner Amplifier to Manual mode by pressing the Tuning Mode button. 2. Adjust the IFT to obtain minimum distortion (total harmonic distortion (THD): 3% or less). 3. Set the frequency of the Signal Generator to 90 MHz/106 MHz and check that the THD is 3% or less.
3	Center Voltage and THD Adjustment	DC Voltmeter between both Pins of TP1 on Tuner P.C.B. and Distortion Meter to Tape 1 Record Output Jacks	Tuner Amplifier Same as above Signal Generator Freq. - 98 MHz RF Level - 65 dBf Modulation - Mono	Tuner P.C.B. L305 L306	<ol style="list-style-type: none"> 1. Set the Tuner Amplifier to Manual mode. 2. Adjust L305 so that the reading on the DC voltmeter is 0 V \pm20 mV. 3. Adjust L306 to obtain minimum distortion (THD: 0.07% or less). Repeat 2 and 3, if necessary.

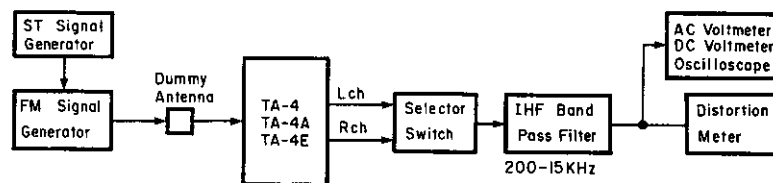


Fig. 4.1 FM Measuring Connection

STEP	ITEM	OUTPUT CONNECTION	MODE	ADJUSTMENT	REMARKS
4	Muting Level Adjustment	Oscilloscope to Tape 1 Record Output Jacks	Tuner Amplifier Same as above Signal Generator Freq. - 98 MHz RF Level - 30 dBf Modulation - Mono	Tuner P.C.B. VR302	<ol style="list-style-type: none"> 1. Set the Tuner Amplifier to Auto mode. 2. Rotate VR302 fully counterclockwise. Then, return it clockwise gradually until a waveform appears on the oscilloscope. 3. Decrease the RF level of the Signal Generator until the waveform on the oscilloscope disappears. Then increase the RF level gradually until a waveform appears again. At this point, check that the RF level of the Signal Generator is 30 dBf \pm6 dB.
5	Signal Strength Meter Level Adjustment	None	Tuner Amplifier Same as above Signal Generator Freq. - 98 MHz RF Level - 56 dBf Modulation - Mono	Tuner P.C.B. VR301	<ol style="list-style-type: none"> 1. Set the Tuner Amplifier to Auto mode. 2. Adjust VR301 so that all segments (1 - 5) of the signal strength meter light up. 3. Decrease the RF level of the Signal Generator to distinguish the segment 5. Next, increase it gradually so that the segment 5 starts illuminating. At this point, check that the RF level of the Signal Generator is 52 to 64 dBf.
6	Stereo Separation Adjustment	AC Voltmeter to Tape 1 Record Output Jacks	Tuner Amplifier Same as above Signal Generator Freq. - 98 MHz RF Level - 65 dBf Modulation - L or R only	Main P.C.B. VR452 (Rch) VR453 (Lch) VR454 (Rch) VR455 (Lch) (Other only)	<p>For U.S.A., Canada & Europe versions:</p> <ol style="list-style-type: none"> 1. Set the Tuner Amplifier to Auto mode. 2. Apply modulation to only L channel. 3. Adjust VR452 (Rch) to obtain minimum reading on the AC voltmeter at the R channel output jack. 4. Apply modulation to only R channel. 5. Adjust VR453 (Lch) to obtain minimum reading on the AC voltmeter at the L channel output jack. <p>For Other version:</p> <ol style="list-style-type: none"> 1. Set the switches on the rear panel as follows: Freq. Step FM/AM - 100 kHz/10 kHz IF Band - Wide 2. Apply the same procedures as above. 3. Set the switches as follows: Freq. step FM/AM - 50 kHz/9 kHz IF Band - Narrow 4. Apply the same procedures as mentioned above. Adjust VR454 (Rch) and VR455 (Lch) instead of VR452 and VR453.
7	Stereo THD Adjustment	Distortion Meter to Tape 1 Record Output Jacks	Tuner Amplifier Same as above Signal Generator Freq. - 98 MHz RF Level - 65 dBf Modulation - Stereo	Tuner P.C.B. VC307 VC355 (Other Only)	<ol style="list-style-type: none"> 1. Set the Tuner Amplifier to Auto mode. 2. Apply 1 kHz (L = -R) signal. 3. Adjust VC307 to obtain minimum distortion. 4. For Other version (Narrow) only, adjust VC355 to obtain minimum distortion.

4.2.2. AM Tuner Section

Note: Frequencies for Europe & Other (Narrow) are indicated in parentheses.

STEP	ITEM	OUTPUT CONNECTION	MODE	ADJUSTMENT	REMARKS
1	Tuning Level Adjustment	DC Voltmeter between both Pins of TP2 on Tuner P.C.B.	Tuner Amplifier Monitor Selector - Tuner Band Selector - AM Rec.Out Selector - Tuner Signal Generator Freq. - 520 (522) kHz/ 1710 (1611) kHz Modulation - 400 Hz 30%	Tuner P.C.B. L402 VC402	<ol style="list-style-type: none"> 1. Set the frequency of the Signal Generator to 520 kHz (522 kHz) and make tuning. 2. Adjust L402 to obtain 1.4 V \pm0.02 V on the DC voltmeter. 3. Change the frequency to 1710 kHz (1611 kHz) and make tuning. 4. Adjust VC402 to obtain 22 V \pm0.2 V on on DC voltmeter. 5. Repeat 1 through 4 once.
2	Tracking and IF Adjustment	AC Voltmeter to Tape 1 Record Output Jacks	Tuner Amplifier Same as above Signal Generator Freq. - 600 (603) kHz/ 1400 (1404) kHz RF Level - 82 dB μ Modulation - 400 Hz 30%	Tuner P.C.B. L401 L403 L404 VC406	<ol style="list-style-type: none"> 1. Set the measurement instruments as shown in Fig. 4.2. Set the distance between the AM Loop Antenna of the TA-4/4A/4E and a test loop to 60 cm. To obtain 56 dBμ/m at the AM Loop Antenna, set the RF level output of the AM Signal Generator to 82 dBμ as loss is 26 dB in this setting. 2. Set the frequency of the Signal Generator to 600 kHz (603 kHz) and make tuning. 3. Adjust L401 to obtain maximum reading on the AC voltmeter. 4. Adjust L403 to obtain maximum reading on the AC voltmeter. 5. Adjust L404 to obtain maximum reading on the AC voltmeter. 6. Set the frequency to 1400 kHz (1404 kHz) and make tuning. 7. Adjust VC406 to obtain maximum reading on the AC voltmeter. 8. Repeat 2 through 7 once.
3	Signal Strength Meter Level Adjustment	None	Tuner Amplifier Same as above Signal Generator Freq. - 1000 (999) kHz RF Level - 106 dB μ Modulation - 400 Hz 30%	Tuner P.C.B. VR401	<ol style="list-style-type: none"> 1. With the same setting as in Step 2, set the RF level output of the AM Signal Generator to 106 dBμ in order to obtain 80 dBμ/m at the AM Loop Antenna. 2. Adjust VR401 so that the segment 5 of the signal strength meter starts illuminating. <p>Note: Before adjustment, select AM mode and wait for more than three minutes.</p>

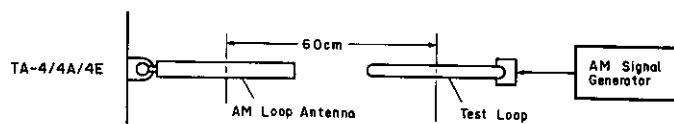


Fig. 4.2

5. MECHANISM ASS'Y AND PARTS LIST

5.1. Synthesis

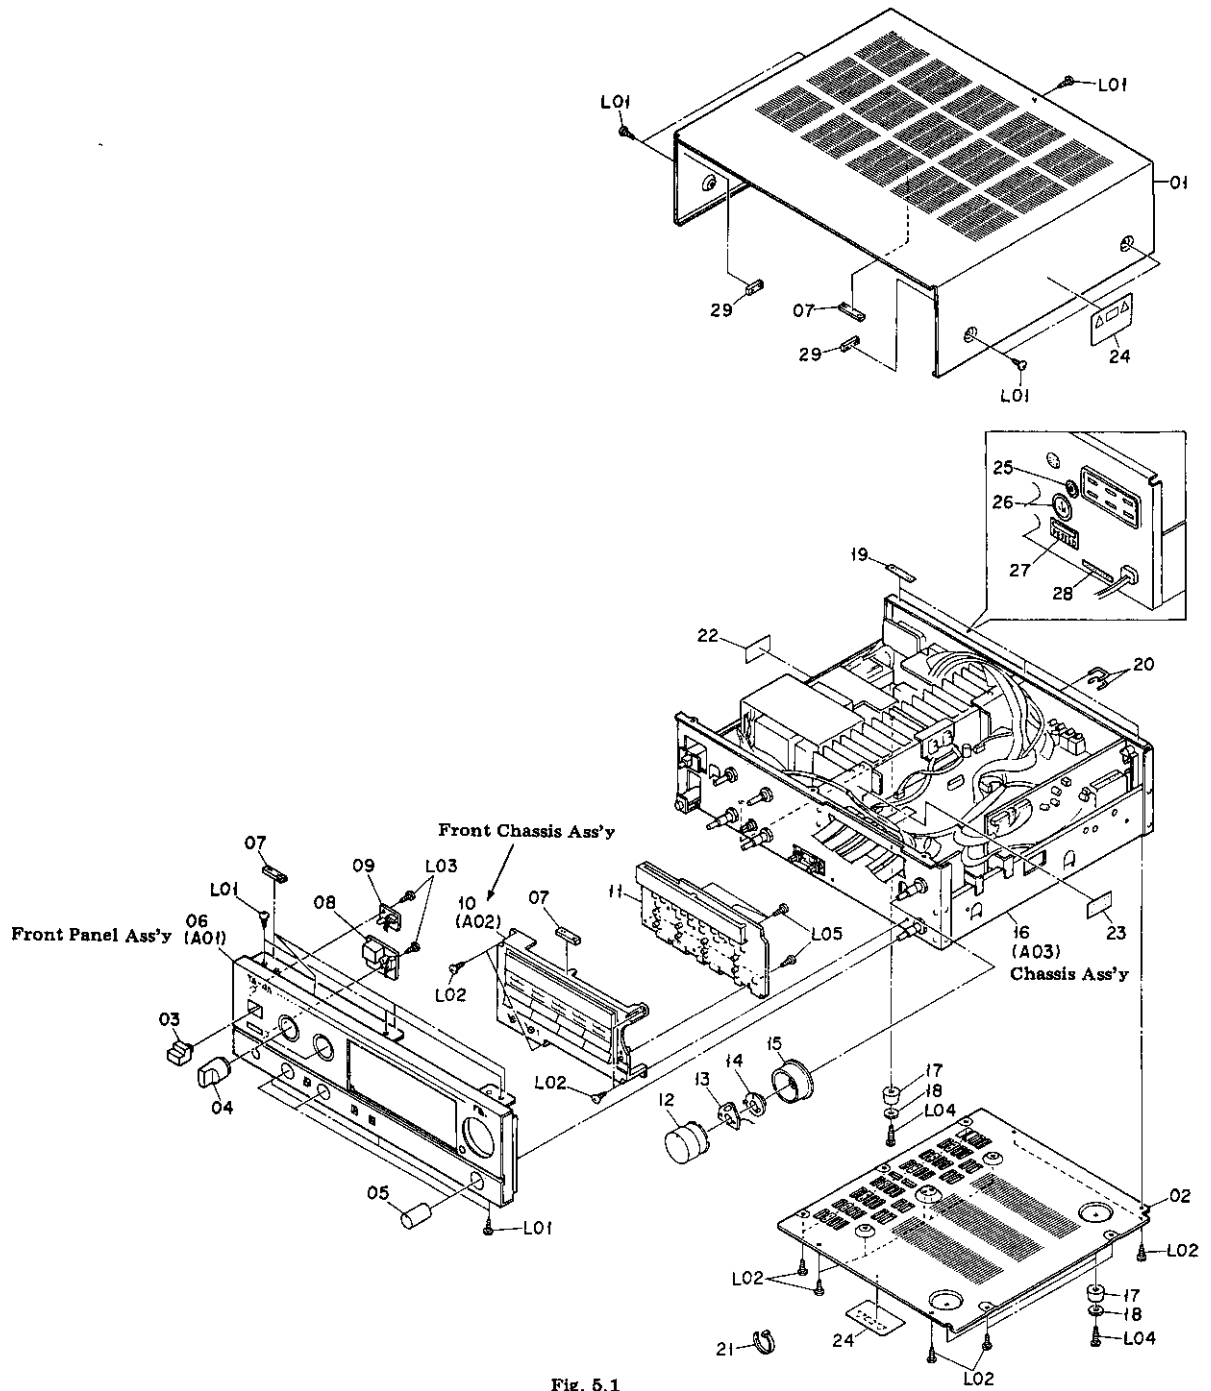


Fig. 5.1

Schematic Ref. No.	Part No.	Description	Q'ty
5.1. Synthesis			
		Synthesis	
01	0H05357A	Top Cover	1
02	0J05626A	Bottom Cover	1
03	0H05340A	Power Button	1
04	HA05450A	Selector Knob Ass'y	2
05	HA05451A	Tone Volume Knob Ass'y	3
06	—	Front Panel Ass'y	1
07	0J05633A	Top Cover Cushion	6
08	BA07297A	Remote Control Sensor P.C.B. Ass'y	1
09	BA07298A	Power Indicator P.C.B. Ass'y	1
10	—	Front Chassis Ass'y	1
11	BA07363A	Control Switch & Display P.C.B. Ass'y (TA-4/4E)	1
	BA07294A	Control Switch & Display P.C.B. Ass'y (TA-4A)	1
12	HA05465A	Master Volume Ass'y	1
13	BA07320A	Volume Indicator P.C.B. Ass'y	1
14	0H05356A	Volume Indicator P.C.B. Holder	1
15	HA05466A	Balance Knob Ass'y	1
16	—	Chassis Ass'y	1
17	0J05420A	Leg N	4
18	0J05461A	Leg Felt N	4
19	0J05407A	Top Cover Sheet R	3
20	0B90342A	U-Shape Pin 14	2
21	0B90019A	Insu-Lock	42
22	0M05201B	Fuse Caution Label A (TA-4A)	1
23	0M05202A	Fuse Caution Label B (TA-4A)	1
24	0M04377B	Caution Label (TA-4A)	2
25	0M05148A	Production Date Label (TA-4A)	1
26	0M04113A	LA Label (TA-4 (U.S.A.))	1
27	0M04430A	Pass Label (TA-4/4E)	1
	0M05171A	Pass Label (TA-4A)	1
28	0M05281A	Serial Number Label (TA-4/4E)	1
	0M05199A	Serial Number Label (TA-4A)	1
29	0J05706A	Side Rubber	2
L01	0E03483A	BT3x6 @ Binding Projected (Black Chromate)	11
L02	0E00857A	BT3x6 @ Binding	17
L03	0E00921A	BT3x8 @ Binding (Black Chromate)	2
L04	0E00888A	BT3x12 @ Binding	4
L05	0E00846A	BT3x8 @ Fan	6
5.2. Front Panel Ass'y (A01)			
A01	—	Front Panel Ass'y	1
01	0H05331A	Front Panel (TA-4)	1
	0H05329B	Front Panel (TA-4A)	1
	0H05330A	Front Panel (TA-4E)	1
02	0H05103A	LED Lens B	2
03	0H05363C	Remote Control Lens	1
04	0J05636A	Diffuser Sheet C	1
05	0H05334A	Front Escutcheon L	1
06	0J05750A	Push Knob Spring	1
07	0H05341A	Push Button	1
08	0H05333A	Front Escutcheon R	1
5.3. Front Chassis Ass'y (A02)			
A02	—	Front Chassis Ass'y	1
01	HA05478A	Video-2 Button Ass'y	1
02	HA05479A	Tape-1 Button Ass'y	1
03	HA05480A	Tape-2 Button Ass'y	1
04	HA05481A	Tape-3 Button Ass'y	1
05	HA05490A	Phono Button Ass'y	1
06	HA05491A	CD Button Ass'y	1
07	HA05492A	Tuner Button Ass'y	1
08	HA05477A	Video-1 Button Ass'y	1
09	0H05346B	Function Plate	1
10	0H05343A	Preset Lens A	11
11	0H05335A	Front Mold	1
12	0J05633A	Top Cover Cushion	1
13	0H05344A	Display Lens	1
14	0H05338A	Preset Knob A	12
15	0H05339A	Preset Knob B	4
16	0J05750A	Push Spring	2
17	0H05341A	Push Button	2
18	0H05342A	Muting Knob	1

5.2. Front Panel Ass'y (A01)

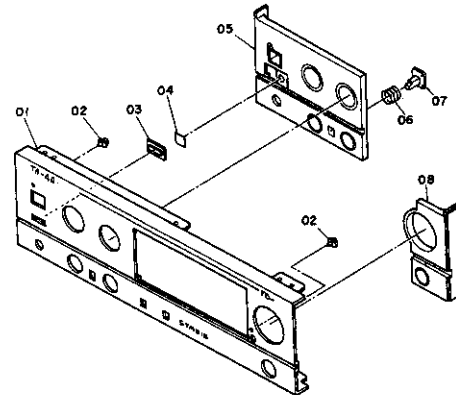


Fig. 5.2

5.3. Front Chassis Ass'y (A02)

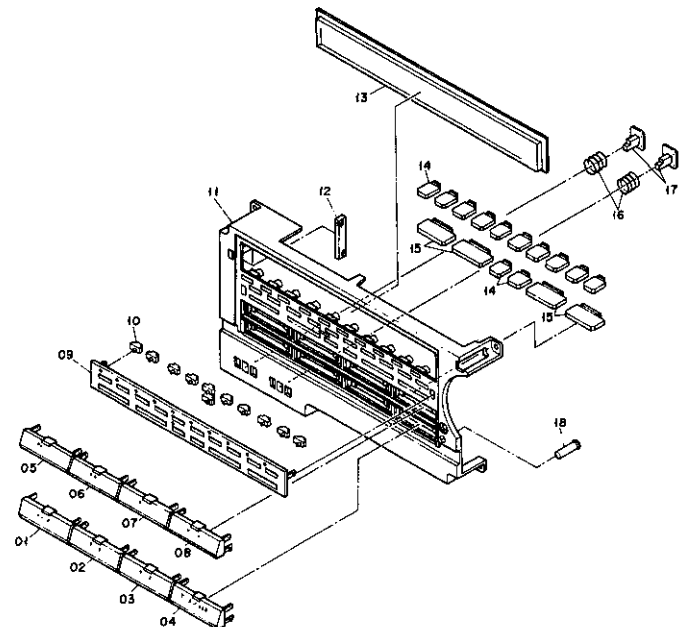


Fig. 5.3

5.4. Chassis Ass'y (A03)

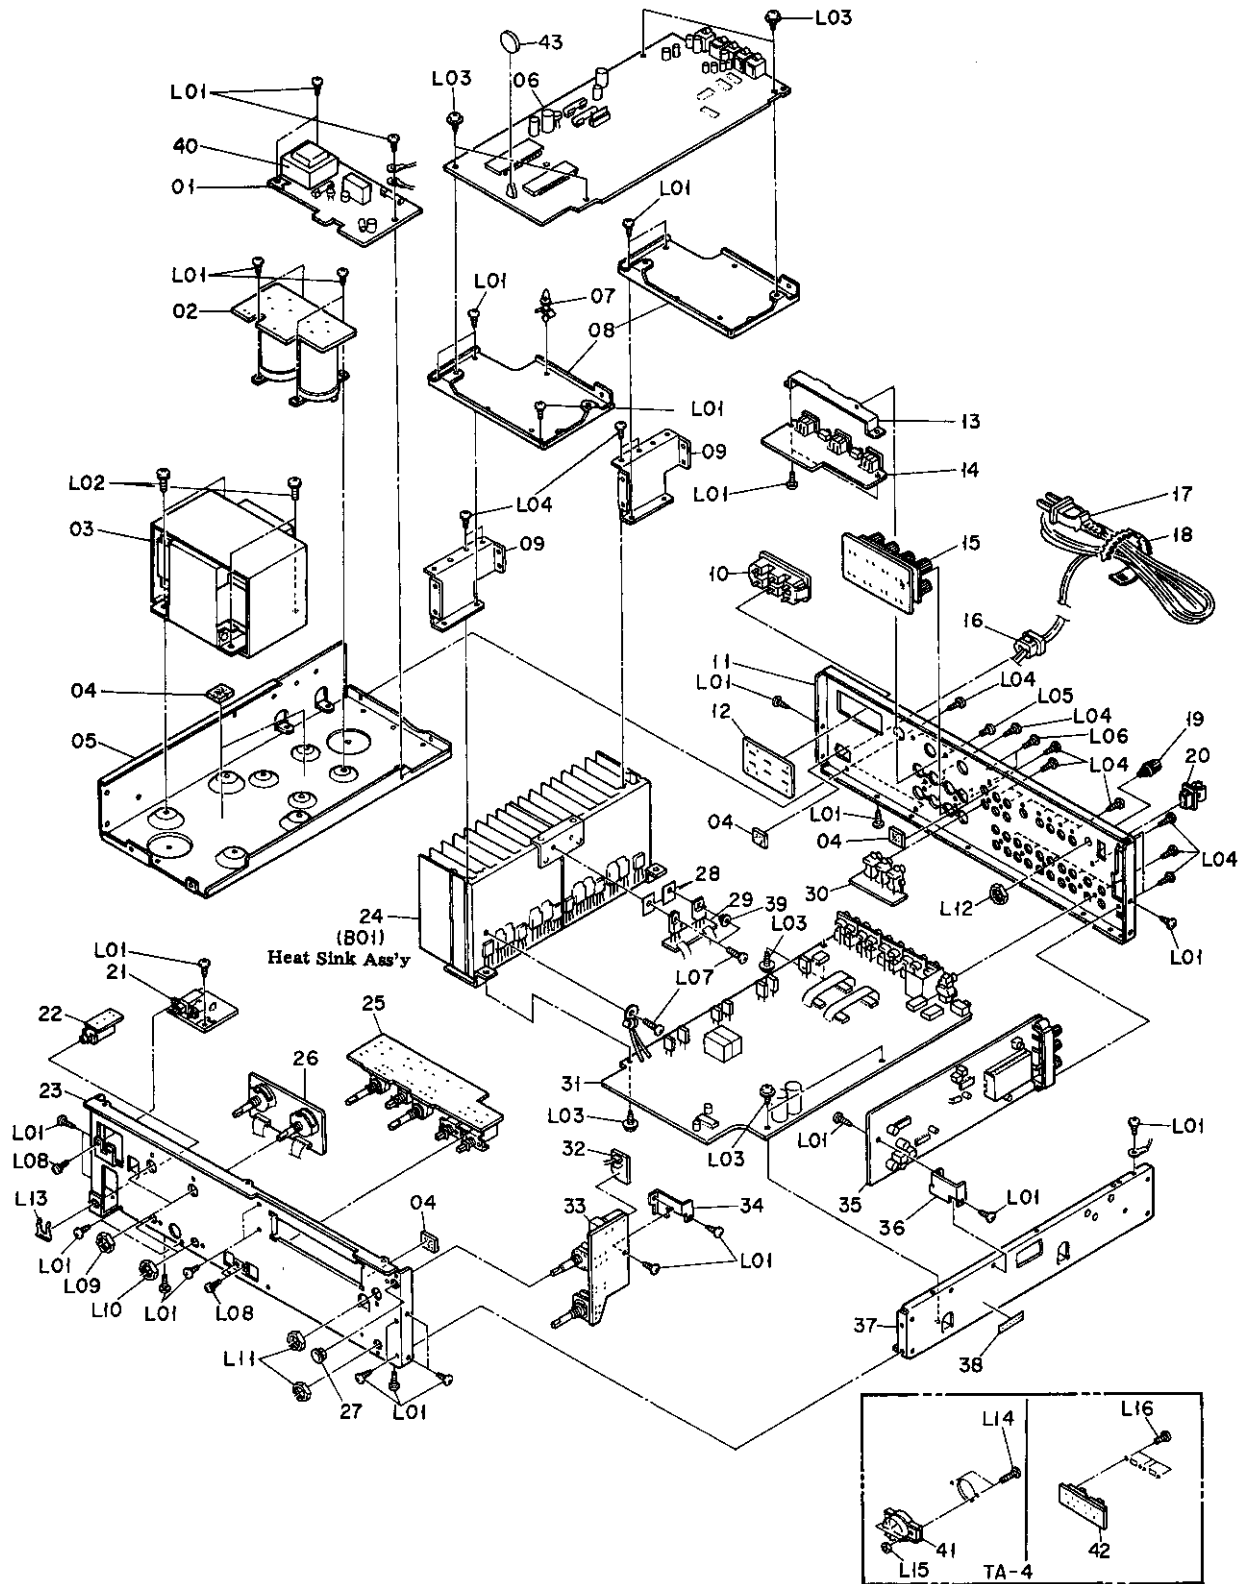


Fig. 5.4

Schematic Ref. No.	Part No.	Description	Q'ty	Schematic Ref. No.	Part No.	Description	Q'ty
5.4. Chassis Ass'y (A03)				L07	OE03138A	M3x10 @ Binding	3
				L08	OE00510A	M3x8 @ Pan (2A)	4
				L09	—	Nut	2
				L10	—	Nut	2
				L11	—	Nut	2
				L12	OJ05673A	Nut 70	1
				L13	OJ05427A	Mounting Plate	1
				L14	OE00986A	M3x10 @ Binding (TA-4)	2
				L15	OE03176A	Nut Hex, M3 (TA-4)	2
				L16	OE03202A	M2.6x3 @ Binding (Black Chromate) (TA-4)	4
				—	OE00174A	Earth Lug B-4 (TA-4E)	1
A03	—	Chassis Ass'y	1				
01	BA07364A	Standby P.C.B. Ass'y (TA-4)	1				
	BA07287A	Standby P.C.B. Ass'y (TA-4A)	1				
	BA07365A	Standby P.C.B. Ass'y (TA-4E)	1				
02	BA07284A	Power Supply P.C.B. Ass'y	1				
03	OB50118A	Power Transformer 110V—240V (TA-4)	1				
	OB50117A	Power Transformer (TA-4A)	1				
	OB50119A	Power Transformer 220V—240V (TA-4E)	1				
04	OJ05307A	BS Damper	5				
05	OJ05617B	Power Supply Chassis	1				
06	BA07360A	Video & Logic P.C.B. Ass'y (TA-4)	1				
	BA07296A	Video & Logic P.C.B. Ass'y (TA-4A)	1				
	BA07361A	Video & Logic P.C.B. Ass'y (TA-4E)	1				
07	OJ05637A	P.C.B. Spacer	1				
08	OJ05620B	Shield Plate	2				
09	OJ05622B	Heat Sink Holder A	2				
10	OB81706A	AC Outlet 3P (TA-4/4A)	1				
	OB81987A	AC Outlet S-16536 (TA-4E)	1				
11	OH05361A	Rear Panel (TA-4)	1				
	OH05358A	Rear Panel (TA-4A)	1				
	OH05359B	Rear Panel (TA-4E)	1				
12	OB60602A	AC Outlet P.C.B. (TA-4/4A)	1				
13	OJ05621A	DIN Jack Holder	1				
14	BA07323A	Remote Jack P.C.B. Ass'y	1				
15	BA07285A	Speaker Terminal P.C.B. Ass'y (TA-4/4A)	1				
	BA07555A	Speaker Terminal P.C.B. Ass'y (TA-4E)	1				
16	OB90280A	Cord Bushing (TA-4/4A)	1				
	OB90367A	Cord Bushing (TA-4E)	1				
17	OB80199A	AC Power Cord SPT-2 (TA-4/4A)	1				
	OB80124A	AC Power Cord (TA-4E)	1				
18	OJ05665A	Free-up Belt	1				
19	JA04383A	GND Terminal Ass'y	1				
20	OB90316A	AM Antenna Holder	1				
21	BA07283A	Power Switch P.C.B. Ass'y (TA-4/4A)	1				
	BA07553A	Power Switch P.C.B. Ass'y (TA-4E)	1				
22	BA07291A	Headphone Jack P.C.B. Ass'y	1				
23	OJ05619B	Front Chassis	1				
24	—	Heat Sink Ass'y	1				
25	BA07288A	Tone Control P.C.B. Ass'y (TA-4/4A)	1				
	BA07554A	Tone Control P.C.B. Ass'y (TA-4E)	1				
26	BA07286A	Selector P.C.B. Ass'y	1				
27	OJ05702A	Snap Bushing	1				
28	OJ05692A	Transistor Silicon Rubber B	2				
29	BA07331A	Transistor Joint P.C.B. Ass'y	1				
30	BA07290A	Pin Jack P.C.B. Ass'y	1				
31	BA07540A	Main P.C.B. Ass'y (TA-4)	1				
	BA07282A	Main P.C.B. Ass'y (TA-4A)	1				
	BA07541A	Main P.C.B. Ass'y (TA-4E)	1				
32	BA07289A	Volume Motor P.C.B. Ass'y	1				
33	BA07293A	Volume P.C.B. Ass'y	1				
34	OJ05632B	Volume Holder	1				
35	BA07357A	Tuner P.C.B. Ass'y (TA-4)	1				
	BA07295A	Tuner P.C.B. Ass'y (TA-4A)	1				
	BA07358A	Tuner P.C.B. Ass'y (TA-4E)	1				
36	OJ05631A	Tuner P.C.B. Holder	1				
37	OJ05618B	Side Chassis	1				
38	OM05210A	Amp. No. Seal (TA-4A)	1				
39	OB90369A	Transistor Bushing	1				
40	OB50115A	Sub Transformer 100V—240V (TA-4)	1				
	OB50114A	Sub Transformer (TA-4A)	1				
	OB50116A	Sub Transformer (TA-4E)	1				
41	OB70080A	Voltage Selector (TA-4)	1				
42	BA07543A	IF Band Switch P.C.B. Ass'y (TA-4)	1				
43	OB90241A	Lithium Battery	1				
L01	OE00857A	BT3x6 @ Binding	34				
L02	OE03494A	M5x10 @ Pan (2A)	4				
L03	OE03432A	BT3x6 @ Tapping (Black Chromate)	8				
L04	OE00921A	BT3x8 @ Binding (Black Chromate)	26				
L05	OE00818A	M3x8 @ Binding (Black Chromate)	2				
L06	OE03433A	BT3x6 @ Pan Projected (Black Chromate)	2				

5.5. Heat Sink Ass'y (B01)

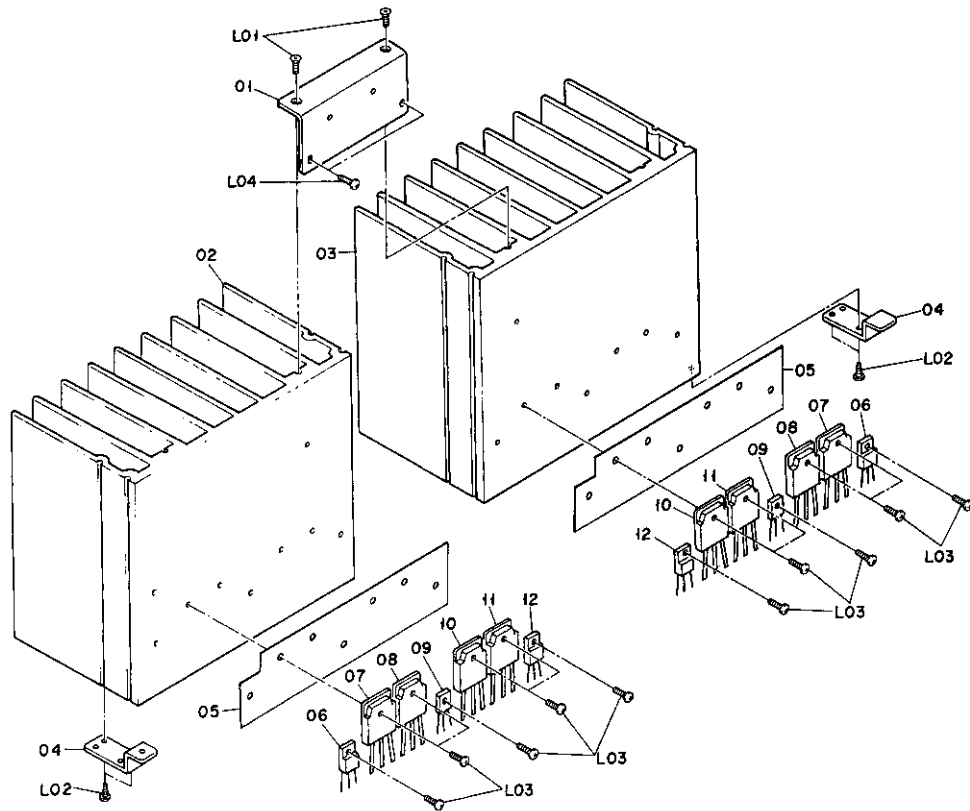


Fig. 5.5

Schematic Ref. No.	Part No.	Description	Q'ty
5.5. Heat Sink Ass'y (B01)			
B01	—	Heat Sink Ass'y	1
01	0J05630A	Joint Holder	1
02	0J05616A	Heat Sink	1
03	0J05627A	Heat Sink R	1
04	0J05623A	Heat Sink Holder B	2
05	0J05700A	Transistor Silicon Rubber	2
06	0B10258A	Transistor 2SA1667 (O,Y) (Pair) [Q260L,R]	2
07	0B10250A	Transistor 2SC3856 (O,Y) (Pair) [Q264L,R]	2
08	0B10250A	Transistor 2SC3856 (O,Y) (Pair) [Q263L,R]	2
09	0B06316A	Transistor 2SD882 (R,S) (Pair) [Q258L,R]	2
10	0B10251A	Transistor 2SA1492 (O,Y) (Pair) [Q262L,R]	2
11	0B10251A	Transistor 2SA1492 (O,Y) (Pair) [Q261L,R]	2
12	0B10259A	Transistor 2SC4381 (O,Y) (Pair) [Q259L,R]	2
L01	0E03495A	BT3x10 @ Countersunk (Black Chromate)	2
L02	0E00921A	BT3x8 @ Binding (Black Chromate)	4
L03	0E03138A	M3x10 @ Binding	14
L04	0E00818A	M3x8 @ Binding	2
—	0B19011A	Thermistor [TH250]	1

6. MOUNTING DIAGRAMS AND PARTS LIST

- Notes: 1. Mounting diagram shows a dip side view of the printed circuit board.
 2. Diode is 1S853, 1S1555, or 1S8176 unless otherwise specified.
 3. Following transistors are interchangeable with each other.
 a. 2SA733, 2SA608SP, 2SA1048, 2SA1175
 b. 2SC945, 2SC536SP, 2SC2458, 2SC2785
 4. Abbreviation for part name:

TR — Transistor, SiD — Silicon Diode, ZD — Zener Diode, Varicap — Variable Capacitance Diode
 RK — Carbon Resistor, RM — Metal Film Resistor, RF — Fail Safe Type Resistor
 CE — Electrolytic Capacitor, CML — Mylar Capacitor, CC — Ceramic Capacitor, CPP — PP Capacitor,
 CMM — Metalized Mylar Capacitor, CSP — Polystyrene Capacitor, C — Mica Capacitor

6.1. Power Switch P.C.B. Ass'y


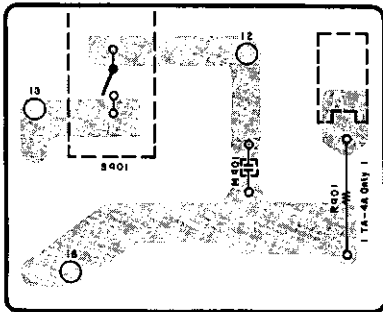


Fig. 6.1

6.2. Speaker Terminal P.C.B. Ass'y

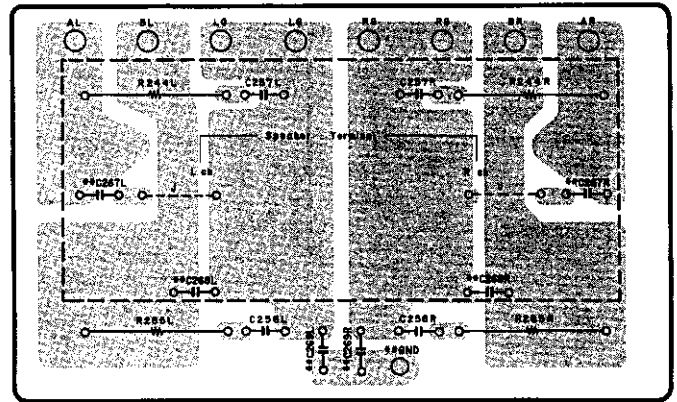

** :TA-4E

Fig. 6.2

6.3. Pin Jack P.C.B. Ass'y

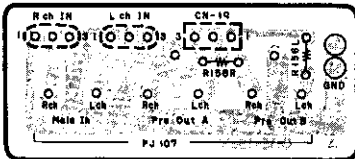


Fig. 6.3

6.4. Headphone Jack P.C.B. Ass'y

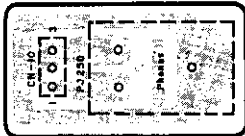


Fig. 6.4

6.5. Power Indicator P.C.B. Ass'y

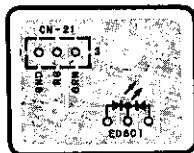


Fig. 6.5

Schematic Ref. No.	Part No.	Description	Schematic Ref. No.	Part No.	Description
6.1. Power Switch P.C.B. Ass'y			6.3. Pin Jack P.C.B. Ass'y		
	BA07283A	Power Switch P.C.B. Ass'y (TA-4/4A)		BA07290A	Pin Jack P.C.B. Ass'y
	BA07553A	Power Switch P.C.B. Ass'y (TA-4E)	R156L,R	OB60600A	Pin Jack P.C.B. RK 100 1/6W J
R901	OB60593A	Power Switch P.C.B. RK 4.7M 1/2W J (TA-4A)	FJ107	OB09653A	6F Pin Jack
S901	OB71008A	Power Switch SDDLA1007U	CN19	OB81949A	3P-T Post
M901	OB41829A	Earth Plate (TA-4/4A) (1)		OB81968A	EH-3PREDB3B
6.2. Speaker Terminal P.C.B. Ass'y			6.4. Headphone Jack P.C.B. Ass'y		
	BA07285A	Speaker Terminal P.C.B. Ass'y (TA-4/4A)		BA07291A	Headphone Jack P.C.B. Ass'y
	BA07555A	Speaker Terminal P.C.B. Ass'y (TA-4E)		OB60601A	Headphone Jack P.C.B.
R244L,R	OB24199A	Speaker Terminal P.C.B. Ass'y (TA-4E)	PJ250	OB81757A	Headphone Jack 3P Connector 350mm
R285L,R	OB24199A	RF 22 1W J	CN10	OB83406B	
C257L,R	OB01609A	CML 0.01μ 50V K	6.5. Power Indicator P.C.B. Ass'y		
C258L,R	OB01609A	CML 0.01μ 50V K		BA07298A	Power Indicator P.C.B. Ass'y
C267L,R	OB09290A	CC 0.01μ 50V Z (TA-4E)	ED601	OB12421A	LED SPR-56PDWF GRN/RED
C268L,R	OB09290A	CC 0.01μ 50V Z (TA-4E)	CN21	OB83409A	2P Connector Ass'y
C269L,R	OB09290A	CC 0.01μ 50V Z (TA-4E)			
CN13	OB83420B	6P Connector 350mm			
	OB81950A	Speaker Terminal P.C.B. Ass'y (1)			

6.6. Volume Indicator P.C.B. Ass'y

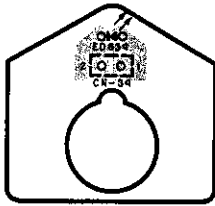


Fig. 6.6

6.7. Volume Motor P.C.B. Ass'y

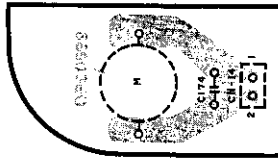


Fig. 6.7

6.8. Transistor Joint P.C.B. Ass'y



Fig. 6.8

6.9. Remote Control Sensor P.C.B. Ass'y

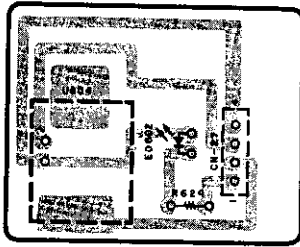


Fig. 6.9

6.10. IF Band Switch P.C.B. Ass'y

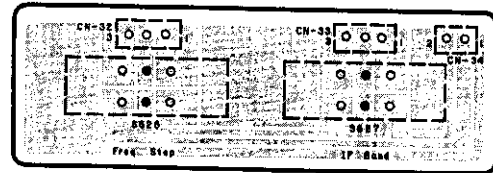


Fig. 6.10

6.11. Selector P.C.B. Ass'y

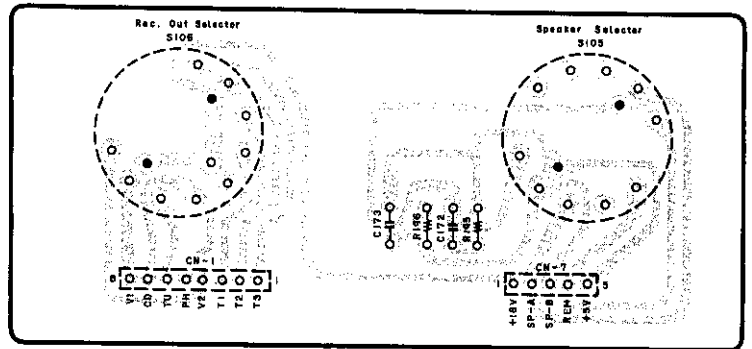


Fig. 6.11

Schematic Ref. No.	Part No.	Description	Schematic Ref. No.	Part No.	Description	Schematic Ref. No.	Part No.	Description	
6.6. Volume Indicator P.C.B. Ass'y			6.9. Remote Control Sensor P.C.B. Ass'y			6.11. Selector P.C.B. Ass'y			
ED639	BA07320A	Volume Indicator P.C.B. Ass'y	U604 ED602	BA07297A	Remote Control Sensor P.C.B. Ass'y	R195,196 C172,173 S105	BA07286A	Selector P.C.B. Ass'y	
	OB60611A	Volume Indicator P.C.B.		OB60607A	Remote Control Sensor P.C.B.		OB60596A	Selector P.C.B.	
	OB12395A	LED SLR-34PC3F P-GRN		OB11511A	IC BX1407		OB09653A	RK 100 1/6W J	
6.7. Volume Motor P.C.B. Ass'y				R629	OB09662A		RK 240 1/6W J	OB41917A	CC 0.1μ 25V Z
C174 CN14	BA07289A	Volume Motor P.C.B. Ass'y		CN27	OB83410A		4P Connector Ass'y 400mm	OB70134A	Rotary Switch SRRM 2-5
	OB60599A	Volume Motor P.C.B.	6.10. IF Band Switch P.C.B. Ass'y			OB70135A	Rotary Switch SRRM 1-9		
	OB41917A	CC 0.1μ 25V Z	S626,627 CN32 CN33 CN34	BA07543A	IF Band Switch P.C.B. Ass'y (TA-4)	OB83425B	8P Connector Ass'y 350mm		
OB83401B	2P Connector 200mm	OB60609B		IF Band Switch P.C.B.	OB83413B	5P Connector Ass'y 300mm			
6.8. Transistor Joint P.C.B. Ass'y				OB70137A	Slide Switch				
U951 Q952 CN40,41	BA07331A	Transistor Joint P.C.B. Ass'y	OB83429B	C.Cable Ass'y 3P					
	OB60613A	Transistor Joint P.C.B.	OB83428B	C.Cable Ass'y 3P					
	OB11526A	IC NJM78M12	OB83430B	C.Cable Ass'y 2P					
	OB06452A	TR 2SD1406 (Y)							
	OB83437A	Flat Wire 3P							

6.12. Remote Jack P.C.B. Ass'y

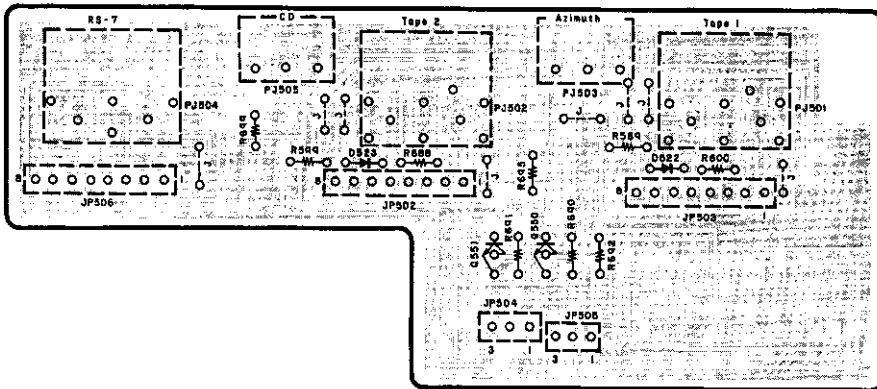


Fig. 6.12

6.13. Volume P.C.B. Ass'y

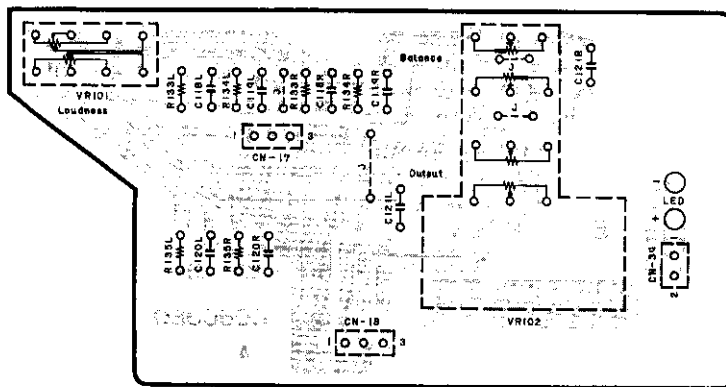


Fig. 6.13

6.14. Power Supply P.C.B. Ass'y

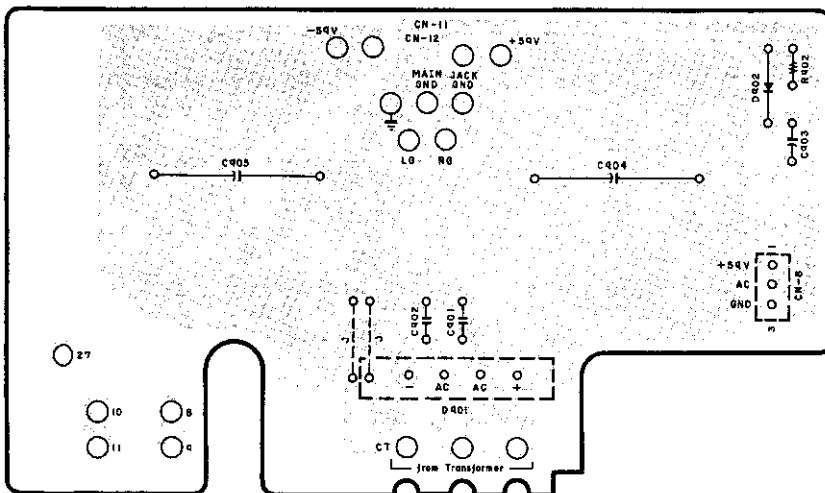


Fig. 6.14

Schematic Ref. No.	Part No.	Description
6.12. Remote Jack P.C.B. Ass'y		
	BA07323A	Remote Jack P.C.B. Ass'y
Q550,551	OB60614A	Remote Jack P.C.B.
D522,523	OB10113A	TR 2SC1815 (GR)
R589	OB06398A	SID 1SS176
R599	OB09637A	RK 22 1/6W J
R600	OB09637A	RK 22 1/6W J
R688	OB09677A	RK 1K 1/6W J
R690,691	OB09717A	RK 47K 1/6W J
R692	OB09637A	RK 22 1/6W J
R695	OB09709A	RK 22K 1/6W J
R699	OB09637A	RK 22 1/6W J
PJ501,502	OB81754A	8P Din Socket
PJ503	OB81952A	ST Mini Jack
PJ504	OB81953A	6P Din Socket
PJ505	OB81952A	ST Mini Jack
	OJ05621A	Remote Jack Holder (1)
6.13. Volume P.C.B. Ass'y		
	BA07293A	Volume P.C.B. Ass'y
VR101	OB60603A	Volume P.C.B.
VR102	OB30091A	VR 300K
	OB30092A	Volume 250KMN+50KB
R133L,R	OB09709A	RK 22K 1/6W J
R134L,R	OB09698A	RK 8.2K 1/6W J
R135L,R	OB09707A	RK 18K 1/6W J
C118L,R	OB41274A	CML 1000P 50V J
C119L,R	OB41290A	CML 0.022μ 50V J
C120L,R	OB41298A	CML 0.1μ 50V J
C121L,R	OB41702A	CSP 22P 50V J
CN17	OB83422B	3P Connector 400mm
CN18	OB81760A	3P-T Post EH-3P WHT
CN39	OB83424A	Cable Ass'y 2P
6.14. Power Supply P.C.B. Ass'y		
	BA07284A	Power Supply P.C.B. Ass'y
D901	OB60594B	Power Supply P.C.B.
D902	OB12617A	SID KBU8D
R902	OB12586A	SID 1N4002
C901,902	OB09711A	RK 27K 1/6W J
C903	OB41537A	CML 0.1μ 100V J
C904,905	OB40126A	CE 4.7μ 63V
CN8	OB40511A	CE 1200μ 71V
	OB83407B	3P Connector Ass'y 350mm
CN11	OB83418B	2P Connector Ass'y 400mm
CN12	OB83419B	2P Connector Ass'y 500mm
	OJ05625B	Heat Sink (1)
	OJ05701A	Transistor Silicon Rubber D (1)

6.15. Standby P.C.B. Ass'y

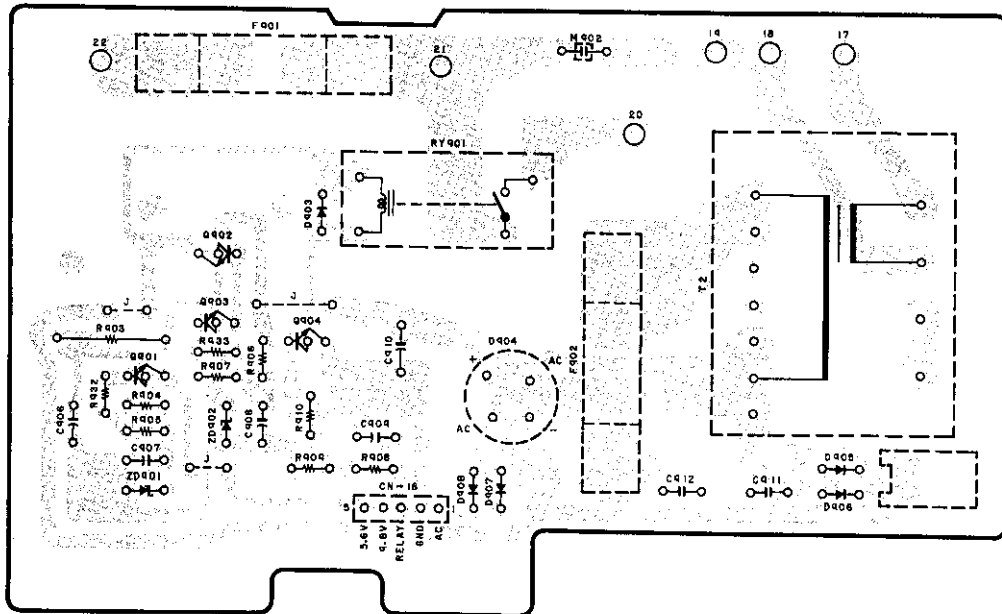


Fig. 6.15

6.16. Tone Control P.C.B. Ass'y

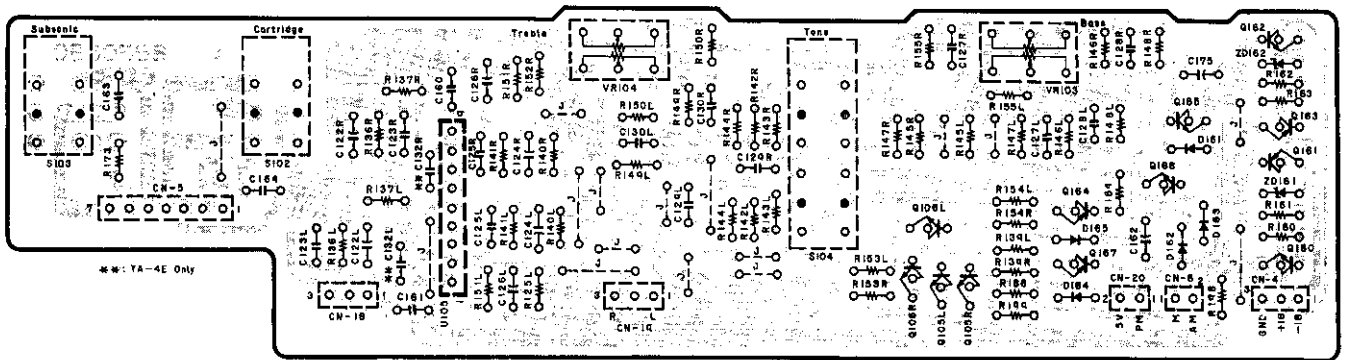


Fig. 6.16

Schematic Ref. No.	Part No.	Description	Schematic Ref. No.	Part No.	Description
6.15. Standby P.C.B. Ass'y			6.16. Tone Control P.C.B. Ass'y		
	BA07364A	Standby P.C.B. Ass'y (TA-4)		BA07288A	Tone Control P.C.B. Ass'y (TA-4/4A)
	BA07287A	Standby P.C.B. Ass'y (TA-4A)		BA07554A	Tone Control P.C.B. Ass'y (TA-4E)
	BA07365A	Standby P.C.B. Ass'y (TA-4E)			
Q901	OB60597A	Standby P.C.B.	U105	OB60598A	Tone Control P.C.B.
	OB06066A	TR 2SD471 (L,M) (TA-4)	Q105L,R	OB11512A	IC NJM5532SD
	OB06100A	TR 2SC945 (K,P,Q) (TA-4A/4E)	Q106L,R	OB06299A	TR 2SC2878
Q902	OB06452A	TR 2SD1406 (TA-4/4E)	Q160	OB06299A	TR 2SC2878
	OB06066A	TR 2SD471 (L,M) (TA-4A)	Q161	OB06142A	TR 2SC2240 (BL)
Q903	OB06100A	TR 2SC945 (K,P,Q)	Q162	OB06013A	TR 2SA733 (P,Q)
Q904	OB06322A	TR 2SC2002 (K,L)	Q163	OB06100A	TR 2SC945 (K,P,Q)
ZD901	OB12619A	ZD 6.8V	Q164	OB10050A	TR 2SA970 (BL)
			Q165	OB10053A	TR DTA144ES
			Q166	OB10062A	TR DTC144ES
ZD902	OB12623A	RD6.8ES-T1B2	Q167	OB10062A	TR DTC144ES
		ZD 11V	ZD161,162	OB10053A	TR DTA144ES
		RD11ES-T1B2		OB12177A	ZD 13V
D903	OB06398A	SID 1SS176	D161,162	OB06398A	RD13JS-T1B2
D904	OB12604A	SID W02M	D163,164	OB06398A	SID 1SS176
D905,906	OB06398A	SID 1SS176 (TA-4)	D165	OB06398A	SID 1SS176
D907,908	OB12624A	SID 1SS177 (TA-4)	VR103	OB30093A	Volume 50K _{Cx2}
			VR104	OB30094A	Volume 100K _{Cx2}
R903	OB24200A	RF 56 1W J	R136L,R	OB09727A	RK 120K 1/6W J
R904,905	OB09677A	RK 1K 1/6W J	R137L,R	OB25099A	RM 100 1/4W F
R906,907	OB09669A	RK 470 1/6W J	R139L,R	OB09717A	RK 47K 1/6W J
R908	OB09677A	RK 1K 1/6W J	R140L,R	OB09725A	RK 100K 1/6W J
R909	OB09709A	RK 22K 1/6W J	R141L,R	OB09749A	RK 1M 1/6W J
R910	OB09629A	RK 10K 1/6W J	R142L,R	OB22570A	RM 12.0K 1/4W F
R932,933	OB09677A	RK 1K 1/6W J	R143L,R	OB22570A	RM 12.0K 1/4W F
C906	OB40121A	CE 220 μ 50V (TA-4)	R144L,R	OB25195A	RM 1.00K 1/4W F
			R145L,R	OB09703A	RK 12K 1/6W J
			R146L,R	OB09705A	RK 15K 1/6W J
			R147L,R	OB09669A	RK 470 1/6W J
			R148L,R	OB09684A	RK 2K 1/6W J
			R149L,R	OB09687A	RK 2.7K 1/6W J
			R150L,R	OB09673A	RK 680 1/6W J
			R151L,R	OB09725A	RK 100K 1/6W J
C907	OB40116A	CE 10 μ 50V (TA-4)	R152L,R	OB25195A	RM 1.00K 1/4W F
			R153L,R	OB09653A	RK 100 1/6W J
			R154L,R	OB09717A	RK 47K 1/6W J
			R155L,R	OB09723A	RK 82K 1/6W J
C908	OB40119A	CE 47 μ 50V (TA-4)	R160	OB09685A	RK 2.2K 1/6W J
			R161,162	OB09695A	RK 5.6K 1/6W J
			R163	OB09685A	RK 2.2K 1/6W J
			R164	OB09725A	RK 100K 1/6W J
C909	OB01836A	CE 47 μ 10V	R173	OB09731A	RK 180K 1/6W J
C910	OB40335A	CE 470 μ 50V (TA-4)	R186	OB09725A	RK 100K 1/6W J
			R198,199	OB09645A	RK 47 1/6W J
			C122L,R	OB40612A	CE 0.33 μ 50V (LN)
			C123L,R	OB41788A	CSP 220P 50V J
			C124L,R	OB09933A	CE 2.2 μ 50V (LN)
			C125L,R	OB41922A	CSP 47P 50V J
C911,912	OB01603A	CML 0.1 μ 50V K	C126L,R	OB09933A	CE 2.2 μ 50V (LN)
RY901	OB90332A	Relay 12V 12MB-NR-UL,TV-8 (TA-4/4A)	C127L,R	OB41296A	CML 0.068 μ 50V J
			C128L,R	OB41305A	CML 0.39 μ 50V J
			C129L,R	OB09189A	CML 2700P 50V J
			C130L,R	OB05832A	CML 0.018 μ 50V J
			C132L,R	OB41735A	CC 100P 50V J (TA-4E)
F901	OB90354A	Fuse 6A 125V (TA-4/4A)	C160,161	OB41298A	CML 0.1 μ 50V J
			C162	OB01400A	CE 100 μ 16V
			C163,164	OB01603A	CML 0.1 μ 50V K
F902	OB90335A	Fuse 0.5A 250V (TA-4/4A)	C175	OB01405A	CE 1 μ 50V
			S102,103	OB70132A	Push Switch
					SPUN2-2
CN16	OB83414B	5P Connector Ass'y 400mm	S104	OB70133A	Push Switch
					SPUN4-2
M902	OB41829A	CC 4700P 100V Z	CN4	OB83408B	3P Connector Ass'y 450mm
	OE00510A	M3x8 Φ Pan (2A) (TA-4) (1)	CN5	OB83415B	7P Connector Ass'y 330mm
	OJ05670A	Earth Plate (1)	CN6	OB83404B	2P Connector Ass'y 350mm
	OJ05846A	Heat Sink (TA-4) (1)	CN18	OB83421B	3P Connector Ass'y 250mm
	OB80204A	Terminal Pin (K) (TA-4) (4)	CN19	OB83423B	3P Connector Ass'y 400mm
	OB81930A	Fuse Holder SN-5051 (TA-4/4A) (4)	CN20	OB83403B	2P Connector Ass'y 270mm
	OB81848A	Fuse Holder Z-N1152 (TA-4E) (4)			
	OM03936B	Fuse Label T3.15A 250V (TA-4E) (1)			
	OM04096C	Fuse Label T500mA 250V (TA-4E) (2)			

6.17. Control Switch & Display P.C.B. Ass'y

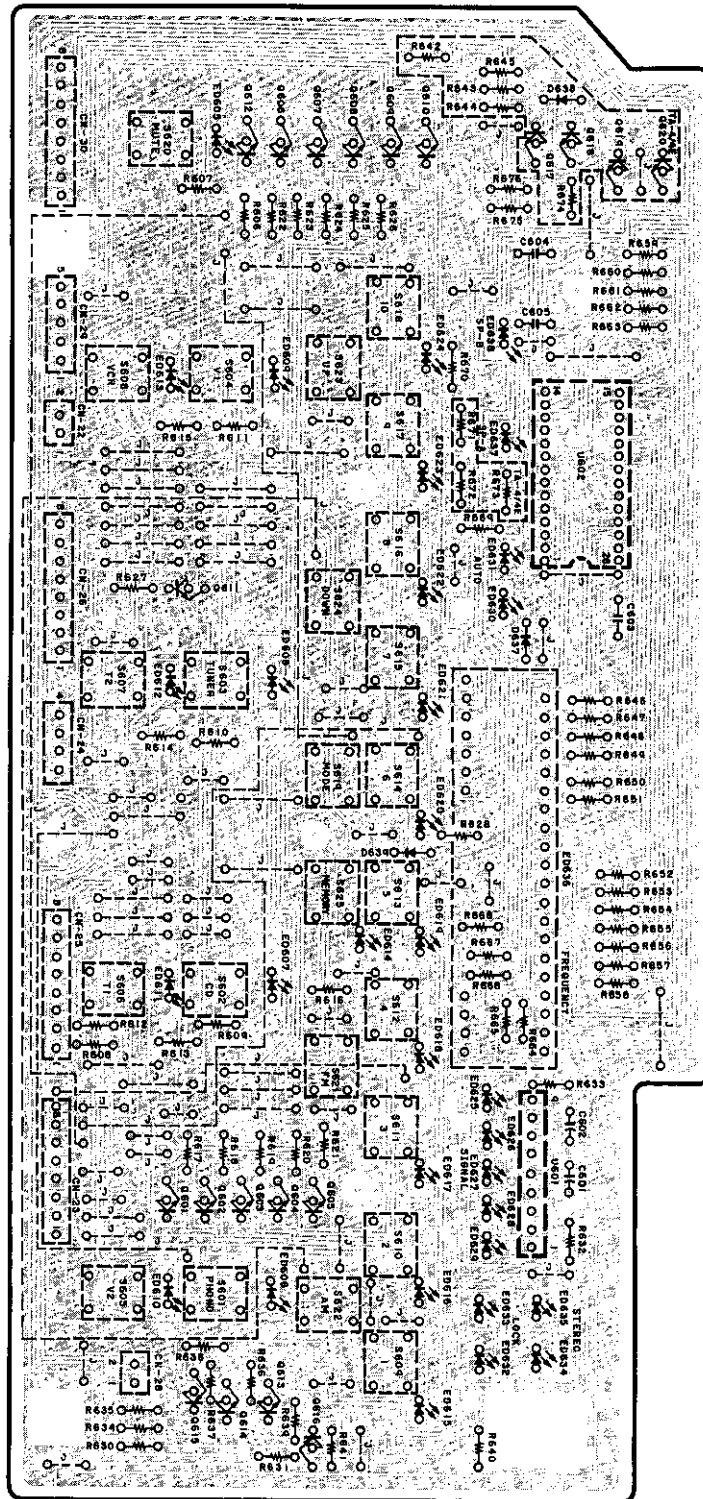


Fig. 6.17

Schematic Ref. No.	Part No.	Description	Schematic Ref. No.	Part No.	Description
6.17. Control Switch & Display P.C.B. Ass'y			R636,637	OB09655A	RK 120 1/6W J
	BA07363A	Control Switch & Display P.C.B. Ass'y (TA-4/4E)	R638	OB09655A	RK 120 1/6W J
	BA07294A	Control Switch & Display P.C.B. Ass'y (TA-4A)	R639,640	OB09717A	RK 47K 1/6W J
	OB60604B	Control Switch & Display P.C.B.	R641	OB09717A	RK 47K 1/6W J
			R642	OB09701A	RK 10K 1/6W J
U601	OB11244A	IC LB1413N	R643,644	OB09693A	RK 4.7K 1/6W J
U602	OB11523A	IC TD6301AN	R645	OB09693A	RK 4.7K 1/6W J
Q601,602	OB10257A	TR 2SC2021 (S)	R646,647	OB09662A	RK 240 1/6W J
Q603,604	OB10257A	TR 2SC2021 (S)	R648,649	OB09662A	RK 240 1/6W J
Q605,606	OB10257A	TR 2SC2021 (S)	R650,651	OB09662A	RK 240 1/6W J
Q607,608	OB10257A	TR 2SC2021 (S)	R652,653	OB09662A	RK 240 1/6W J
Q609,610	OB10257A	TR 2SC2021 (S)	R654,655	OB09662A	RK 240 1/6W J
Q611,612	OB10257A	TR 2SC2021 (S)	R656,657	OB09662A	RK 240 1/6W J
Q613,614	OB10257A	TR 2SC2021 (S)	R658,659	OB09662A	RK 240 1/6W J
Q615,616	OB10256A	TR 2SA937 (R)	R660,661	OB09662A	RK 240 1/6W J
Q617,618	OB10257A	TR 2SC2021 (S) (TA-4/4E)	R662,663	OB09662A	RK 240 1/6W J
Q619,620	OB10257A	TR 2SC2021 (S) (TA-4/4E)	R664,665	OB09662A	RK 240 1/6W J
D637	OB06398A	SID 1SS176	R666	OB09662A	RK 240 1/6W J
D638	OB06398A	SID 1SS176 (TA-4/4E)	R667	OB09655A	RK 120 1/6W J
D639	OB06398A	SID 1SS176	R668	OB09679A	RK 1.2K 1/6W J
ED605,606	OB12395A	LED SLR-34PC3F P-Green	R669,670	OB09668A	RK 430 1/6W J
ED607,608	OB12395A	LED SLR-34PC3F P-Green	R671,672	OB09655A	RK 120 1/6W J
ED609,610	OB12395A	LED SLR-34PC3F P-Green	R673	OB09662A	RK 240 1/6W J
ED611,612	OB12395A	LED SLR-34PC3F P-Green	R674	OB09655A	RK 120 1/6W J
ED613,614	OB12395A	LED SLR-34PC3F P-Green	R675,676	OB09659A	RK 180 1/6W J
ED615,616	OB12395A	LED SLR-34PC3F P-Green	C601,602	OB40162A	CE 10μ 16V
ED617,618	OB12395A	LED SLR-34PC3F P-Green	C603	OB41787A	CC 0.022μ 25V Z
ED619,620	OB12395A	LED SLR-34PC3F P-Green	C604,605	OB41911A	CC 470P 50V J
ED621,622	OB12395A	LED SLR-34PC3F P-Green	S601,602	OB70043A	Tact Switch SKHHPM
ED623,624	OB12395A	LED SLR-34PC3F P-Green	S603,604	OB70043A	Tact Switch SKHHPM
ED625,626	OB12625A	LED SLR-34PG3F P-Green	S605,606	OB70043A	Tact Switch SKHHPM
ED627,628	OB12625A	LED SLR-34PG3F P-Green	S607,608	OB70043A	Tact Switch SKHHPM
ED629,630	OB12625A	LED SLR-34PG3F P-Green	S609,610	OB70043A	Tact Switch SKHHPM
ED631,632	OB12625A	LED SLR-34PG3F P-Green	S611,612	OB70043A	Tact Switch SKHHPM
ED633,634	OB12625A	LED SLR-34PG3F P-Green	S613,614	OB70043A	Tact Switch SKHHPM
ED635	OB12625A	LED SLR-34PG3F P-Green	S615,616	OB70043A	Tact Switch SKHHPM
ED636	OB12616A	LED Display LTF2501 (TA-4/4E)	S617,618	OB70043A	Tact Switch SKHHPM
	OB12608A	LED Display LTF2401 (TA-4A)	S619,620	OB70043A	Tact Switch SKHHPM
ED637,638	OB12625A	LED SLR-34PG3F P-Green	S621,622	OB70043A	Tact Switch SKHHPM
R606	OB09707A	RK 18K 1/6W J	S623,624	OB70043A	Tact Switch SKHHPM
R607	OB09662A	RK 240 1/6W J	S625	OB70043A	Tact Switch SKHHPM
R608,609	OB09681A	RK 1.5K 1/6W J	CN22	OB83402B	2P Connector Ass'y 250mm
R610,611	OB09681A	RK 1.5K 1/6W J	CN23	OB83380A	8P Flat Cable 230mm
R612,613	OB09681A	RK 1.5K 1/6W J	CN24	OB83376A	4P Flat Cable 170mm
R614,615	OB09681A	RK 1.5K 1/6W J	CN25,26	OB83378A	8P Flat Cable 170mm
R616	OB09662A	RK 240 1/6W J	CN28	OB83405B	2P Connector Ass'y 450mm
R617,618	OB09707A	RK 18K 1/6W J	CN29	OB83377A	5P Flat Cable 170mm
R619,620	OB09707A	RK 18K 1/6W J	CN30	OB83379A	8P Flat Cable 190mm
R621,622	OB09707A	RK 18K 1/6W J		OH05336A	Display Reflector
R623,624	OB09707A	RK 18K 1/6W J		OH05345A	Display Overlay (1)
R625,626	OB09707A	RK 18K 1/6W J		OJ05634A	Diffuser Sheet A (1)
R627	OB09707A	RK 18K 1/6W J		OJ05635B	Diffuser Sheet B (1)
R628	OB09662A	RK 240 1/6W J		OJ05416A	LED Reflector (8)
R630	OB09717A	RK 47K 1/6W J			
R631	OB09677A	RK 1K 1/6W J			
R632	OB09701A	RK 10K 1/6W J			
R633	OB09677A	RK 1K 1/6W J			
R634,635	OB09701A	RK 10K 1/6W J			

6.18. Tuner P.C.B. Ass'y

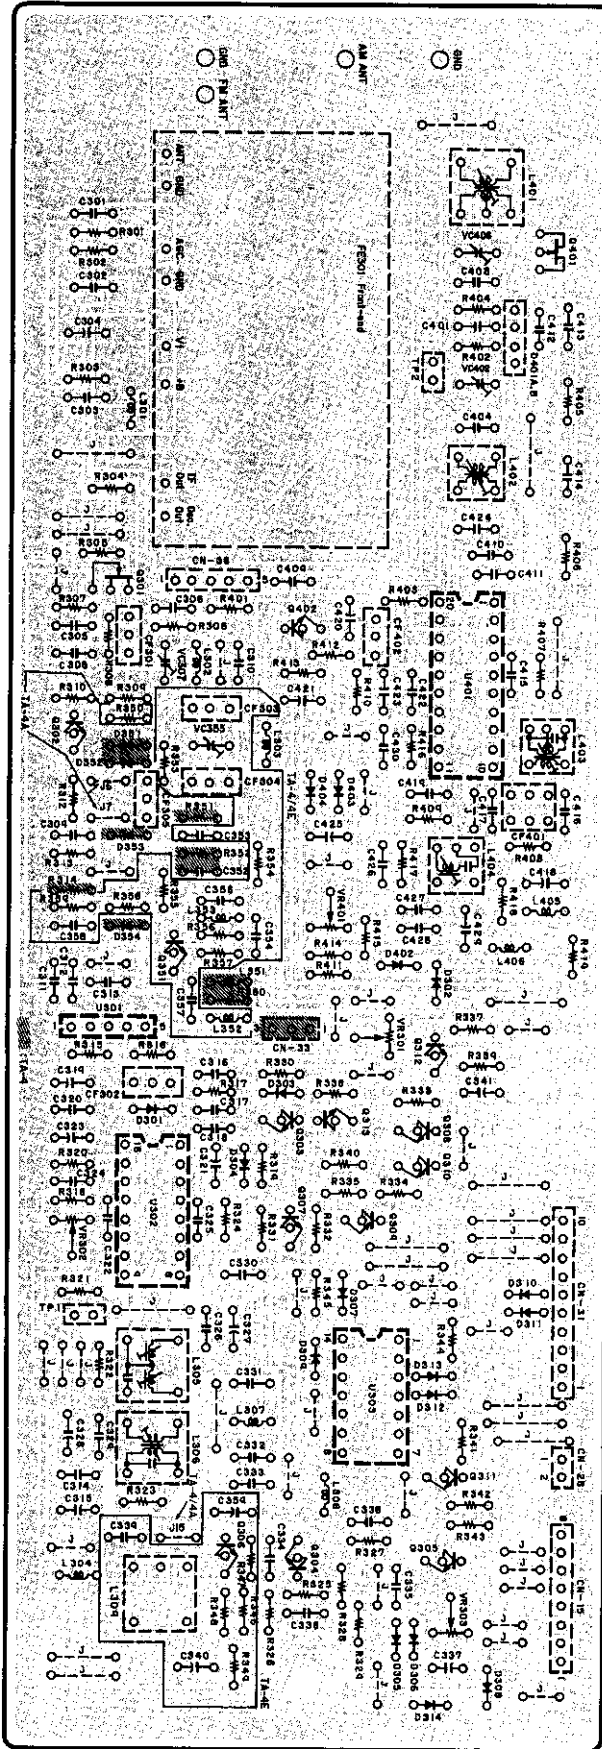


Fig. 6.18

Schematic Ref. No.	Part No.	Description	Schematic Ref. No.	Part No.	Description	Schematic Ref. No.	Part No.	Description
6.18. Tuner P.C.B. Ass'y			R310	OB09686A	RK 2.4K 1/6W J	C301	OB41787A	CC 0.022μ 25V Z
	BA07357A	Tuner P.C.B. Ass'y (TA-4)	R312	OB09645A	RK 47 1/6W J	C302	OB41294A	CML 0.047μ 50V J
	BA07295A	Tuner P.C.B. Ass'y (TA-4A)	R313	OB09667A	RK 390 1/6W J	C303	OB41290A	CML 0.022μ 50V J
	BA07358A	Tuner P.C.B. Ass'y (TA-4E)	R314	OB09689A	RK 3.3K 1/6W J (TA-4)	C304	OB40420A	CE 220μ 16V (LN)
	OB60605A	Tuner P.C.B.	R315,316	OB09667A	RK 390 1/6W J	C305,306	OB41787A	CC 0.022μ 25V Z
U301	OB11156A	IC TA7060AP	R317	OB09665A	RK 330 1/6W J	C308,309	OB41787A	CC 0.022μ 25V Z
U302	OB11157A	IC LA1235	R318	OB09677A	RK 1K 1/6W J	C310,311	OB41787A	CC 0.022μ 25V Z
U303	OB06219A	IC μPD4081BC	R319	OB09701A	RK 10K 1/6W J	C312	OB41787A	CC 0.022μ 25V Z
U401	OB11243A	IC LA1247	R320	OB09719A	RK 56K 1/6W J	C313,314	OB41290A	CML 0.022μ 50V J
Q301	OB10127A	FET 2SK241 (GR)	R321	OB09705A	RK 15K 1/6W J (TA-4/4E)	C315	OB40420A	CE 220μ 16V (LN)
Q302	OB10174A	TR 2SC2669 (O,Y)	R322	OB09699A	RK 8.2K 1/6W J	C316,317	OB41787A	CC 0.022μ 25V Z
Q303,304	OB06100A	TR 2SC945 (K,P,Q)	R323	OB25228A	RM 2.2K 1/6W F	C318	OB41787A	CC 0.022μ 25V Z
Q305	OB06100A	TR 2SC945 (K,P,Q)	R324	OB09677A	RK 1K 1/6W J	C319	OB01402A	CE 4.7μ 25V
Q306	OB10025A	TR 2SC945L (P,K) (TA-4E)	R325	OB09705A	RK 15K 1/6W J	C320	OB41787A	CC 0.022μ 25V Z
			R326	OB09669A	RK 470 1/6W J	C321	OB09872A	CE 2.2μ 50V
Q307,308	OB06100A	TR 2SC945 (K,P,Q)	R327	OB09693A	RK 4.7K 1/6W J	C322	OB41787A	CC 0.022μ 25V Z
Q309	OB06013A	TR 2SA733 (P,Q)	R328	OB09677A	RK 1K 1/6W J	C323	OB01408A	CE 1μ 50V
Q310	OB10068A	TR DTC114ES	R329	OB09717A	RK 47K 1/6W J	C324	OB41787A	CC 0.022μ 25V Z
Q311,312	OB06100A	TR 2SC945 (K,P,Q)	R330	OB09725A	RK 100K 1/6W J	C325	OB41909A	CC 100P 50V J
Q313	OB06100A	TR 2SC945 (K,P,Q)	R331	OB09701A	RK 10K 1/6W J	C326	OB41787A	CC 0.022μ 25V Z
Q351	OB10174A	TR 2SC945 (K,P,Q) (TA-4/4E)	R332	OB09717A	RK 47K 1/6W J	C327	OB01405A	CE 1μ 50V
			R333	OB09701A	RK 10K 1/6W J	C328	OB40066A	CE 330μ 10V
Q401	OB06129A	FET 2SK117 (Y)	R334,335	OB09701A	RK 10K 1/6W J	C329	OB41787A	CC 0.022μ 25V Z
Q402	OB06100A	TR 2SC945 (K,P,Q)	R337,338	OB09701A	RK 10K 1/6W J	C330	OB41907A	CC 47P 50V J
D301	OB06398A	SID 1SS176	R339	OB09707A	RK 18K 1/6W J	C331	OB41912A	CC 1000P 50V Z
D302,303	OB06398A	SID 1SS176	R340	OB09725A	RK 100K 1/6W J	C332	OB41907A	CC 47P 50V J
D304,305	OB06398A	SID 1SS176	R341	OB09701A	RK 10K 1/6W J	C333	OB41921A	CSP 560P 50V J
D306,307	OB06398A	SID 1SS176	R342,343	OB09717A	RK 47K 1/6W J	C334	OB41907A	CC 47P 50V J
D308,309	OB06398A	SID 1SS176	R344,345	OB09701A	RK 10K 1/6W J	C335,336	OB41787A	CC 0.022μ 25V Z
D310,311	OB06398A	SID 1SS176	R346	OB09694A	RK 5.1K 1/6W J (TA-4E)	C337	OB01405A	CE 1μ 50V
D312,313	OB06398A	SID 1SS176	R347	OB09745A	RK 680K 1/6W J (TA-4E)	C338	OB41787A	CC 0.022μ 25V Z
D314	OB06398A	SID 1SS176	R348	OB09687A	RK 2.7K 1/6W J (TA-4E)	C339	OB41219A	CPP 560P 100V (TA-4E)
D351,352	OB06398A	SID 1SS176 (TA-4)	R349	OB09669A	RK 470 1/6W J (TA-4E)	C340	OB01400A	CE 100μ 16V (TA-4E)
D353,354	OB06398A	SID 1SS176 (TA-4)	R350	OB09665A	RK 330 1/6W J (TA-4A)	C341	OB01405A	CE 1μ 50V
D401	OB12386A	Varicap KV1226Y	R351	OB09665A	RK 330 1/6W J (TA-4)	C352	OB41787A	CC 0.022μ 25V (TA-4)
D402	OB12363A	SID MA700	R352	OB09693A	RK 4.7K 1/6W J (TA-4)	C353,354	OB41787A	CC 0.022μ 25V (TA-4/4E)
D403,404	OB06398A	SID 1SS176	R353	OB09665A	RK 330 1/6W J (TA-4/4E)	C356,357	OB41787A	CC 0.022μ 25V (TA-4/4E)
CF301,302	OB41918A	Ceramic Filter SFE10.7MLA	R354	OB09665A	RK 330 1/6W J (TA-4/4E)	C358	OB41787A	CC 0.022μ 25V (TA-4/4E)
CF303,304	OB41746A	Ceramic Filter SFE10.7MS3GH15A (TA-4/4E)	R355	OB09689A	RK 3.3K 1/6W J (TA-4/4E)	C359	OB01412A	CE 10μ 16V (TA-4E)
CF305	OB41918A	Ceramic Filter SFE10.7MLA	R356	OB09698A	RK 7.5K 1/6W J (TA-4/4E)	C401	OB41787A	CC 0.022μ 25V Z
CF401	OB41701A	Ceramic Filter SFZ450G3L	R357	OB09671A	RK 560 1/6W J (TA-4/4E)	C404	OB41920A	CSP 430P 50V J
CF402	OB92003A	Ceramic Resonator 450KHz BFO450C4N	R358	OB09650A	RK 75 1/6W J (TA-4)	C408,409	OB41787A	CC 0.022μ 25V Z
L301,302	OB51239A	Coil 22μH (K)	R359	OB09646A	RK 51 1/6W J (TA-4E)	C410	OB41912A	CC 1000P 50V Z
L303,304	OB51239A	Coil 22μH (K)	R360	OB09677A	RK 1K 1/6W J (TA-4/4E)	C411,412	OB41787A	CC 0.022μ 25V Z
L305	OB51240A	FM DET Coil A	R401	OB09677A	RK 1K 1/6W J	C413	OB41912A	CC 1000P 50V Z
L306	OB51241A	FM DET Coil B	R402	OB09725A	RK 100K 1/6W J	C414,415	OB41787A	CC 0.022μ 25V Z
L307,308	OB51243A	Choke Coil 6.2mH	R403	OB09685A	RK 2.2K 1/6W J	C416	OB41908A	CC 82P 50V J
L309	OB51288A	L.P.F. Filter (TA-4E)	R404	OB09725A	RK 100K 1/6W J	C417	OB41787A	CC 0.022μ 25V Z
L351	OB51239A	Coil 22μH (K) (TA-4)	R405	OB09665A	RK 330 1/6W J	C418	OB01403A	CE 47μ 16V
L352,353	OB51239A	Coil 22μH (K) (TA-4/4E)	R406	OB09661A	RK 220 1/6W J	C419	OB41912A	CC 1000P 50V Z
L401	OB51282A	ANT Coil	R407	OB09681A	RK 1.5K 1/6W J	C420,421	OB01402A	CE 4.7μ 25V
L402	OB51279A	OSC Coil	R408	OB09685A	RK 2.2K 1/6W J	C422	OB41787A	CC 0.022μ 25V Z
L403	OB51280A	AM IFT1 Coil	R409	OB09674A	RK 750 1/6W J	C423	OB40111A	CC 0.47μ 50V
L404	OB51281A	AM IFT2 Coil	R410	OB09651A	RK 82 1/6W J	C424	OB41787A	CC 0.022μ 25V Z
L405,406	OB51239A	Coil 22μH (K)	R411	OB09733A	RK 220K 1/6W J	C425	OB09372A	CE 2.2μ 50V
VR301	OB32084A	Semi VR 47KB	R412,413	OB09701A	RK 10K 1/6W J	C426	OB41787A	CC 0.022μ 25V Z
VR302	OB32080A	Semi VR 10KB	R414	OB09708A	RK 20K 1/6W J	C427	OB41913A	CC 2200P 50V M
VR303	OB32084A	Semi VR 47KB	R415	OB09701A	RK 10K 1/6W J	C428	OB41292A	CML 0.033μ 50V J
VR401	OB32086A	Semi VR 100KB	R416	OB09677A	RK 1K 1/6W J	C429	OB01403A	CE 47μ 16V
R301	OB09725A	RK 100K 1/6W J	R417	OB09685A	RK 2.2K 1/6W J	C430	OB41914A	CC 0.01μ 50V Z
R302	OB09721A	RK 68K 1/6W J	R418	OB09725A	RK 100K 1/6W J	TP1,2	OB81759A	2P-T Post EH-2P
R303	OB09727A	RK 120K 1/6W J	R419	OB09709A	RK 22K 1/6W J	PJ301	OB81977A	Antenna Terminal F (TA-4/4A)
R304	OB09677A	RK 1K 1/6W J	VC307	OB42012A	C Trimmer 30P			Antenna Terminal F (TA-4E)
R305	OB09745A	RK 680K 1/6W J	VC355	OB42012A	C Trimmer 30P (TA-4/4E)			8P-T Post EH-8P
R306	OB09665A	RK 330 1/6W J	VC402	OB42011A	C Trimmer 20P			BLK
R307	OB09645A	RK 47 1/6W J	VC406	OB42011A	C Trimmer 20P			2P-T Post EH-2P
R308	OB09667A	RK 390 1/6W J						WHT
R309	OB09698A	RK 7.5K 1/6W J						10P Connector 250mm
								3P-T Post EH-3P (TA-4)
								5P Connector 260mm
								Front-end FE407-A16 (TA-4/4A)
								Front-end FE407-G58 (TA-4E)
								Terminal Holder (2)

Schematic Ref. No.	Part No.	Description	Schematic Ref. No.	Part No.	Description	Schematic Ref. No.	Part No.	Description
6.19. Video & Logic P.C.B. Ass'y			D516	OB06398A	SID 1SS176	R575,576	OB01846A	RK 4.7K 1/4W J
	BA07360A	Video & Logic P.C.B. Ass'y (TA-4)	D517	OB06181A	SID 1SS53	R577	OB01846A	RK 4.7K 1/4W J
	BA07296A	Video & Logic P.C.B. Ass'y (TA-4A)	D518,519	OB06398A	SID 1SS176	R578,579	OB09693A	RK 4.7K 1/6W J
	BA07361A	Video & Logic P.C.B. Ass'y (TA-4E)	D520,521	OB06398A	SID 1SS176	R580	OB09693A	RK 4.7K 1/6W J
	OB60606A	Video & Logic P.C.B.	D524,525	OB06398A	SID 1SS176	R581,582	OB05641A	RK 47K 1/4W J
U501	OB11250A	IC LB1645N	D526,527	OB06398A	SID 1SS176	R583,584	OB05641A	RK 47K 1/4W J
U502	OB06143A	IC μ PD4001BC	D528,529	OB06398A	SID 1SS176	R585,586	OB05641A	RK 47K 1/4W J
U503	OB06219A	IC μ PD4081BC	D530	OB06398A	SID 1SS176	R587,588	OB05641A	RK 47K 1/4W J
U504	OB11513A	IC μ PD74HC237	D531	OB06181A	SID 1SS53	R590,591	OB09717A	RK 47K 1/6W J
U505	OB11502A	IC μ PD75104CW	D532	OB06398A	SID 1SS176	R592,593	OB09717A	RK 47K 1/6W J
U506	OB11161A	IC TC9147BP	D534	OB06398A	SID 1SS176	R594,595	OB09717A	RK 47K 1/6W J
U507	OB11159A	IC TD6104P	D535	OB06181A	SID 1SS53	R596,597	OB09717A	RK 47K 1/6W J
U952	OB11248A	IC ICP-N5	D951	OB12604A	SID W02M	R598	OB09717A	RK 47K 1/6W J
U953	OB11335A	IC ICP-N15	D953,954	OB06398A	SID 1SS176	R601,602	OB09733A	RK 220K 1/6W J
U1001,1002	OB06169A	IC TC4066BP	D955	OB06398A	SID 1SS176	R603,604	OB09733A	RK 220K 1/6W J
Q501,502	OB10113A	TR 2SC1815 (GR)	D956	OB12604A	SID W02M	R681,682	OB09717A	RK 47K 1/6W J
Q503	OB10113A	TR 2SC1815 (GR)	D957,958	OB06398A	SID 1SS176	R683,684	OB09717A	RK 47K 1/6W J
Q504	OB10116A	TR 2SA1015 (GR)	D959,960	OB12624A	SID 1SS177	R685,686	OB09717A	RK 47K 1/6W J
Q505,506	OB10113A	TR 2SC1815 (GR)	D961,962	OB12586A	SID 1N4002	R687	OB09717A	RK 47K 1/6W J
Q507,508	OB10116A	TR 2SA1015 (GR)	D963	OB06398A	SID 1SS176	R693,694	OB09681A	RK 1.5K 1/6W J
Q509,510	OB10116A	TR 2SA1015 (GR)	D966,967	OB06398A	SID 1SS176	R696,697	OB09701A	RK 10K 1/6W J
Q511	OB10068A	TR DTC114ES	D968,969	OB06398A	SID 1SS176	R698	OB09709A	RK 22K 1/6W J
Q512,513	OB10113A	TR 2SC1815 (GR)	D1001	OB12604A	SID W02M	R951	OB09665A	RK 330 1/6W J
Q514,515	OB10088A	TR 2SC1815L (GR) (Low Noise)	D1003,1004	OB06398A	SID 1SS176	R952	OB09669A	RK 470 1/6W J
			D1005,1006	OB06398A	SID 1SS176	R953,954	OB09686A	RK 2.4K 1/6W J
			D1007,1008	OB06398A	SID 1SS176	R955	OB09685A	RK 2.2K 1/6W J
			D1009,1010	OB06398A	SID 1SS176	R956	OB09695A	RK 5.6K 1/6W J
			X501	OB92014A	Ceramic Resonator 4MHz	R957	OB09733A	RK 220K 1/6W J
			X502	OB92006A	X'Tal 7.2MHz	R958	OB09725A	RK 100K 1/6W J
			L501	OB51289A	Coil 22 μ H	R959	OB09709A	RK 22K 1/6W J
			L502	OB51286A	Coil 470 μ H	R960	OB09707A	RK 18K 1/6W J
			R500	OB09677A	RK 1K 1/6W J	R961	OB09693A	RK 4.7K 1/6W J
			R501	OB09725A	RK 100K 1/6W J	R962	OB09727A	RK 120K 1/6W J
			R502	OB09707A	RK 18K 1/6W J	R963	OB09719A	RK 56K 1/6W J
			R503	OB09695A	RK 5.6K 1/6W J	R964	OB09721A	RK 68K 1/6W J
			R504	OB09697A	RK 6.8K 1/6W J	R965,966	OB09725A	RK 100K 1/6W J
			R505,506	OB09725A	RK 100K 1/6W J	R967	OB09717A	RK 47K 1/6W J
			R507	OB01888A	RK 10K 1/4W J	R968	OB09701A	RK 10K 1/6W J
			R508	OB09669A	RK 470 1/6W J	R969	OB09694A	RK 5.1K 1/6W J
			R509	OB09701A	RK 10K 1/6W J	R970,971	OB09701A	RK 10K 1/6W J
			R510,511	OB09695A	RK 5.6K 1/6W J	R972	OB09694A	RK 5.1K 1/6W J
			R512	OB09689A	RK 3.3K 1/6W J	R973	OB09701A	RK 10K 1/6W J
			R513	OB09683A	RK 1.8K 1/6W J	R1001	OB09681A	RK 1.5K 1/6W J
			R514	OB09689A	RK 3.3K 1/6W J	R1002	OB09725A	RK 100K 1/6W J
			R515,516	OB09661A	RK 220 1/6W J	R1003	OB09701A	RK 10K 1/6W J
			R517	OB09701A	RK 10K 1/6W J	R1004	OB09649A	RK 68 1/6W J
			R518	OB09725A	RK 100K 1/6W J	R1005	OB09661A	RK 220 1/6W J
			R519	OB09661A	RK 220 1/6W J	R1006	OB20514A	RK 100 1/2W J
			R520,521	OB09701A	RK 10K 1/6W J	R1007	OB09669A	RK 470 1/6W J
			R522,523	OB09725A	RK 100K 1/6W J	R1008	OB09683A	RK 1.8K 1/6W J
			R524,525	OB09725A	RK 100K 1/6W J	R1009	OB09669A	RK 470 1/6W J
			R526,527	OB09725A	RK 100K 1/6W J	R1010	OB09677A	RK 1K 1/6W J
			R528	OB09725A	RK 100K 1/6W J	R1011	OB09665A	RK 330 1/6W J
			R529	OB09725A	RK 100K 1/6W J	R1012	OB09679A	RK 1.2K 1/6W J
			R530	OB09717A	RK 47K 1/6W J	R1013	OB09691A	RK 3.9K 1/6W J
			R531	OB09663A	RK 270 1/6W J	R1014	OB09651A	RK 82 1/6W J
			R532	OB09693A	RK 4.7K 1/6W J	R1015	OB09701A	RK 10K 1/6W J
			R533,534	OB09717A	RK 47K 1/6W J	R1016	OB09649A	RK 68 1/6W J
			R535,536	OB09677A	RK 1K 1/6W J	R1017	OB20514A	RK 100 1/2W J
			R537,538	OB09677A	RK 1K 1/6W J	R1018	OB09661A	RK 220 1/6W J
			R539,540	OB09677A	RK 1K 1/6W J	R1019	OB09669A	RK 470 1/6W J
			R541,542	OB09677A	RK 1K 1/6W J	R1020	OB09683A	RK 1.8K 1/6W J
			R543,544	OB09677A	RK 1K 1/6W J	R1021	OB09677A	RK 1K 1/6W J
			R545,546	OB09693A	RK 1K 1/6W J	R1022	OB09669A	RK 470 1/6W J
			R547	OB09725A	RK 4.7K 1/6W J	R1023	OB09665A	RK 330 1/6W J
			R548	OB09725A	RK 100K 1/6W J	R1024	OB09691A	RK 3.9K 1/6W J
			R549	OB09701A	RK 10K 1/6W J	R1025	OB09679A	RK 1.2K 1/6W J
			R550	OB09739A	RK 390K 1/6W J	R1026	OB09651A	RK 82 1/6W J
			R551,552	OB09709A	RK 22K 1/6W J	R1027,1028	OB09650A	RK 75 1/6W J
			R553,554	OB09685A	RK 2.2K 1/6W J	R1029	OB09650A	RK 75 1/6W J
			R555	OB09701A	RK 10K 1/6W J	R1030,1031	OB05776A	RK 1M 1/4W J
			R556	OB20093A	RK 1.5M 1/6W J	R1032,1033	OB05776A	RK 1M 1/4W J
			R557	OB09731A	RK 180K 1/6W J	R1034,1035	OB05776A	RK 1M 1/4W J
			R558	OB09733A	RK 220K 1/6W J	R1036	OB01857A	RK 1K 1/4W J
			R559	OB09693A	RK 4.7K 1/6W J	C501	OB01836A	CE 47 μ 10V
			R560,561	OB09725A	RK 100K 1/6W J	C502	OB09372A	CE 2.2 μ 50V
			R562,563	OB09721A	RK 68K 1/6W J	C503	OB41917A	CC 0.1 μ 25V Z
			R564	OB09725A	RK 100K 1/6W J	C504	OB41914A	CC 0.01 μ 50V Z
			R565	OB09677A	RK 1K 1/6W J	C505	OB01405A	CE 1 μ 50V
			R566,567	OB09725A	RK 100K 1/6W J	C506	OB41787A	CC 0.022 μ 25V Z
			R568	OB09701A	RK 10K 1/6W J	C507	OB05885A	CE 100 μ 10V
			R569	OB09677A	RK 1K 1/6W J	C508	OB01405A	CE 1 μ 50V
			R570	OB09699A	RK 8.2K 1/6W J	C509	OB05681A	CML 0.01 μ 50V J
			R571	OB09701A	RK 10K 1/6W J	C510,511	OB41903A	CC 33F 50V J
			R572	OB09677A	RK 1K 1/6W J	C512	OB01405A	CE 1 μ 50V
			R573,574	OB00346A	RK 1K 1/2W J	C513	OB41787A	CC 0.022 μ 25V Z
				OB01846A	RK 4.7K 1/4W J	C514	OB01405A	CE 1 μ 50V
						C515	OB05899A	CE 220 μ 10V

6.19. Video & Logic P.C.B. Ass'y

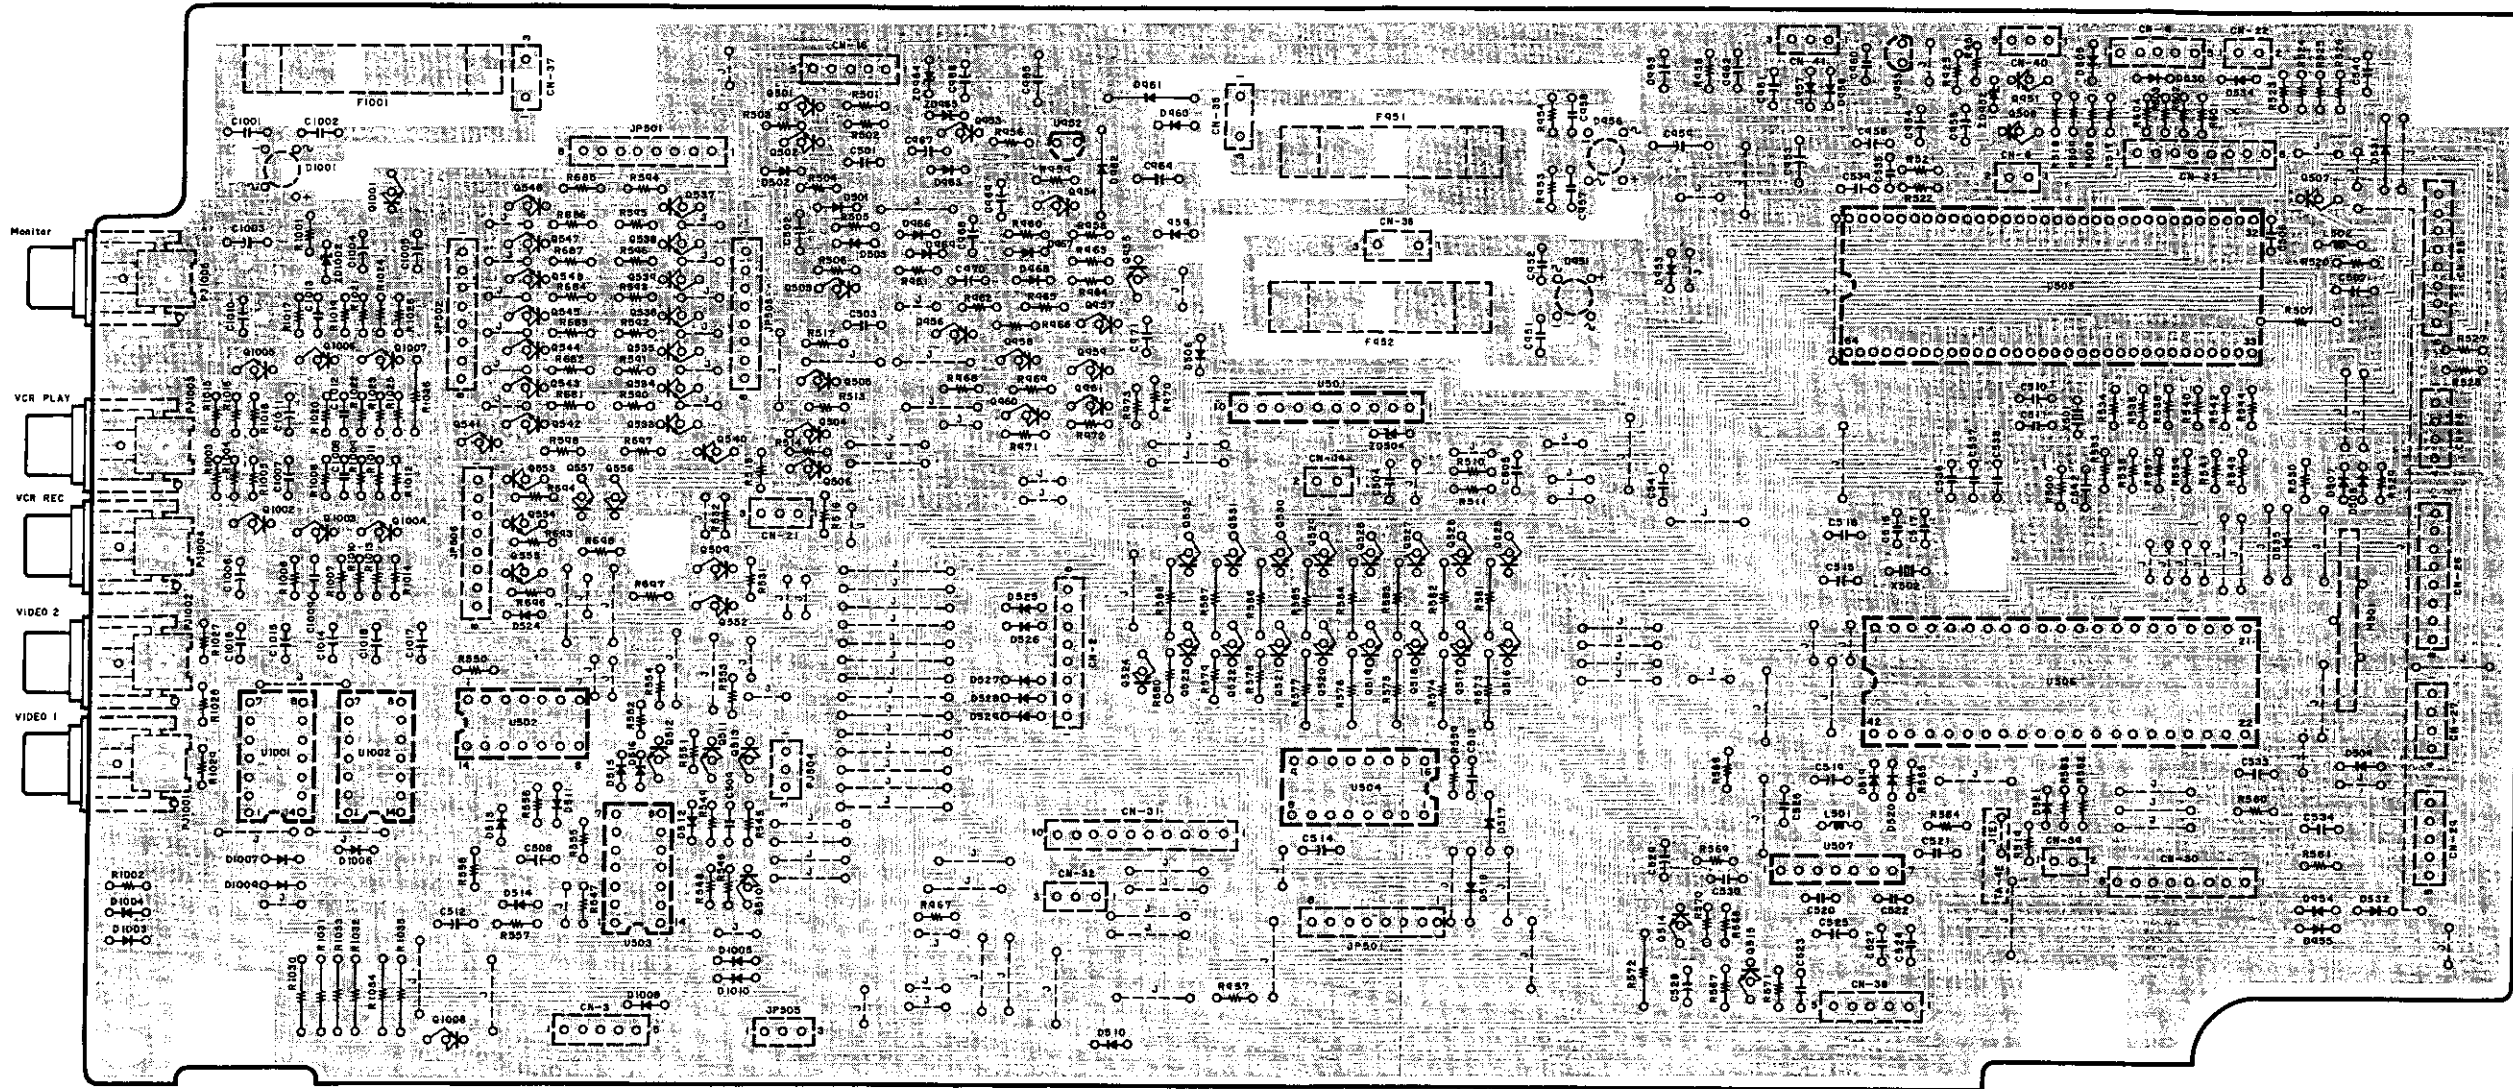


Fig. 6.19

Schematic Ref. No.	Part No.	Description	Schematic Ref. No.	Part No.	Description	Schematic Ref. No.	Part No.	Description	Schematic Ref. No.	Part No.	Description	Schematic Ref. No.	Part No.	Description
C516	OB41902A	CC 22P 50V J	C959	OB40095A	CE 1000µ 25V	C1016,1017	OB01862A	CE 22µ 16V	CN2	OB81765A	8P-T Post EH-8P WHT	CN32	OB81968A	3P-T Post EH-3P RED (TA-4)
C517	OB41904A	CC 47P 50V J	C960	OB41917A	CC 0.1µ 25V Z	C1018	OB01862A	CE 22µ 16V				CN35	OB81760A	3P-T Post EH-3P WHT
C518	OB41787A	CC 0.022µ 25V Z	C961	OB01412A	CE 10µ 16V	F951	OB90336A	Fuse 1A 250V (TA-4/4A)	CN3	OB81762A	5P-T Post EH-5P WHT	CN36	OB81968A	3P-T Post EH-3P RED
C519	OB01405A	CE 1µ 50V	C962	OB41917A	CC 0.1µ 25V Z		OB90286A	Fuse T1A 250V (TA-4E)	CN6	OB81759A	2P-T Post EH-2P WHT	CN37	OB81970A	3P-T Post EH-3P YEL
C520	OB41906A	CC 39P 50V J	C963	OB01400A	CE 100µ 16V	F952	OB90337A	Fuse 2A 250V (TA-4/4A)	CN9	OB81973A	5P-T Post EH-5P BLK	CN38	OB81762A	5P-T Post EH-5P BLK
C521	OB41914A	CC 0.01µ 50V Z	C964	OB40094A	CE 470µ 25V		OB90355A	Fuse T2A 250V (TA-4E)	CN14	OB81967A	2P-T Post EH-2P BLK	CN39	OB81759A	2P-T Post EH-2P BLK
C522	OB41913A	CC 2200P 50V K	C965	OB40123A	CE 470µ 50V		OB90335A	Fuse 0.5A 250V (TA-4/4A)	CN16	OB81972A	5P-T Post EH-5P RED	CN40,41	OB81954A	3P Connector Fuse Holder (TA-4E) (6)
C523	OB41787A	CC 0.022µ 25V Z	C966	OB40100A	CE 10µ 35V		OB90288A	Fuse T500mA 250V (TA-4E)	CN21	OB81969A	3P-T Post EH-3P BLK		OB81930A	Fuse Holder SN-5051 (TA-4/4A) (6)
C524	OB41909A	CC 100P 50V J	C967	OB01405A	CE 1µ 50V	F1001	OB90335A	Fuse 0.5A 250V (TA-4/4A)	CN22	OB81966A	2P-T Post EH-2P RED		OJ05704A	Shield Plate B (1)
C525	OB01403A	CE 47µ 16V	C968	OB01400A	CE 100µ 16V		OB83399B	Flat Wire 8P 260	CN23	OB81959A	8P Connector		OJ05705B	Shield Plate (1)
C526,527	OB41787A	CC 0.022µ 25V Z	C969	OB01405A	CE 1µ 50V		PJ501	1P Pin Jack	CN24	OB81955A	4P Connector		OM04191A	Fuse Label T1A 250V (TA-4E) (1)
C528	OB40103A	CE 47µ 35V	C970	OB01863A	CE 3.3µ 50V		PJ502	Flat Wire 8P 220	CN25,26	OB83395B	Flat Wire 3P 400		OM05295A	Fuse Label T2A 250V (TA-4E) (1)
C529	OB09567A	CE 0.33µ 50V (LN)	C971	OB41304A	CML 0.33µ 50V J		PJ503	Flat Wire 8P 320	CN27	OB81761A	4P-T Post EH-4P WHT			
C530	OB01780A	CML 0.1µ 50V J	C1001,1002	OB41915A	CC 0.1µ 50V Z		PJ504	Flat Wire 3P 320						
C533	OB01405A	CE 1µ 50V	C1003	OB40423A	CE 470µ 16V		PJ505	Flat Wire 3P 400						
C534	OB40025A	CE 0.47µ 50V	C1004	OB40079A	CE 220µ 16V		PJ506	Flat Wire 8P 250						
C535,536	OB41787A	CC 0.022µ 25V Z	C1005	OB01400A	CE 100µ 16V		PJ1001,1002	1P Pin Jack						
C537,538	OB41787A	CC 0.022µ 25V Z	C1006	OB40082A	CE 1000µ 16V		PJ1003,1004	1P Pin Jack						
C539,540	OB41787A	CC 0.022µ 25V Z	C1007	OB01400A	CE 100µ 16V		PJ1005	1P Pin Jack						
C541,542	OB41787A	CC 0.022µ 25V Z	C1008	OB41905A	CC 5P 50V C									
C951,952	OB41915A	CC 0.1µ 50V Z	C1009	OB41910A	CC 390P 50V J									
C953	OB40082A	CE 1000µ 16V	C1010	OB40082A	CE 1000µ 16V									
C954	OB01400A	CE 100µ 16V	C1011	OB01400A	CE 100µ 16V									
C955	OB01405A	CE 1µ 50V	C1012	OB41905A	CC 5P 50V C									
C956	OB05885A	CE 100µ 10V	C1013	OB41910A	CC 390P 50V J									
C957,958	OB41915A	CC 0.1µ 50V Z	C1014,1015	OB01862A	CE 22µ 16V									

6.20. Main P.C.B. Ass'y

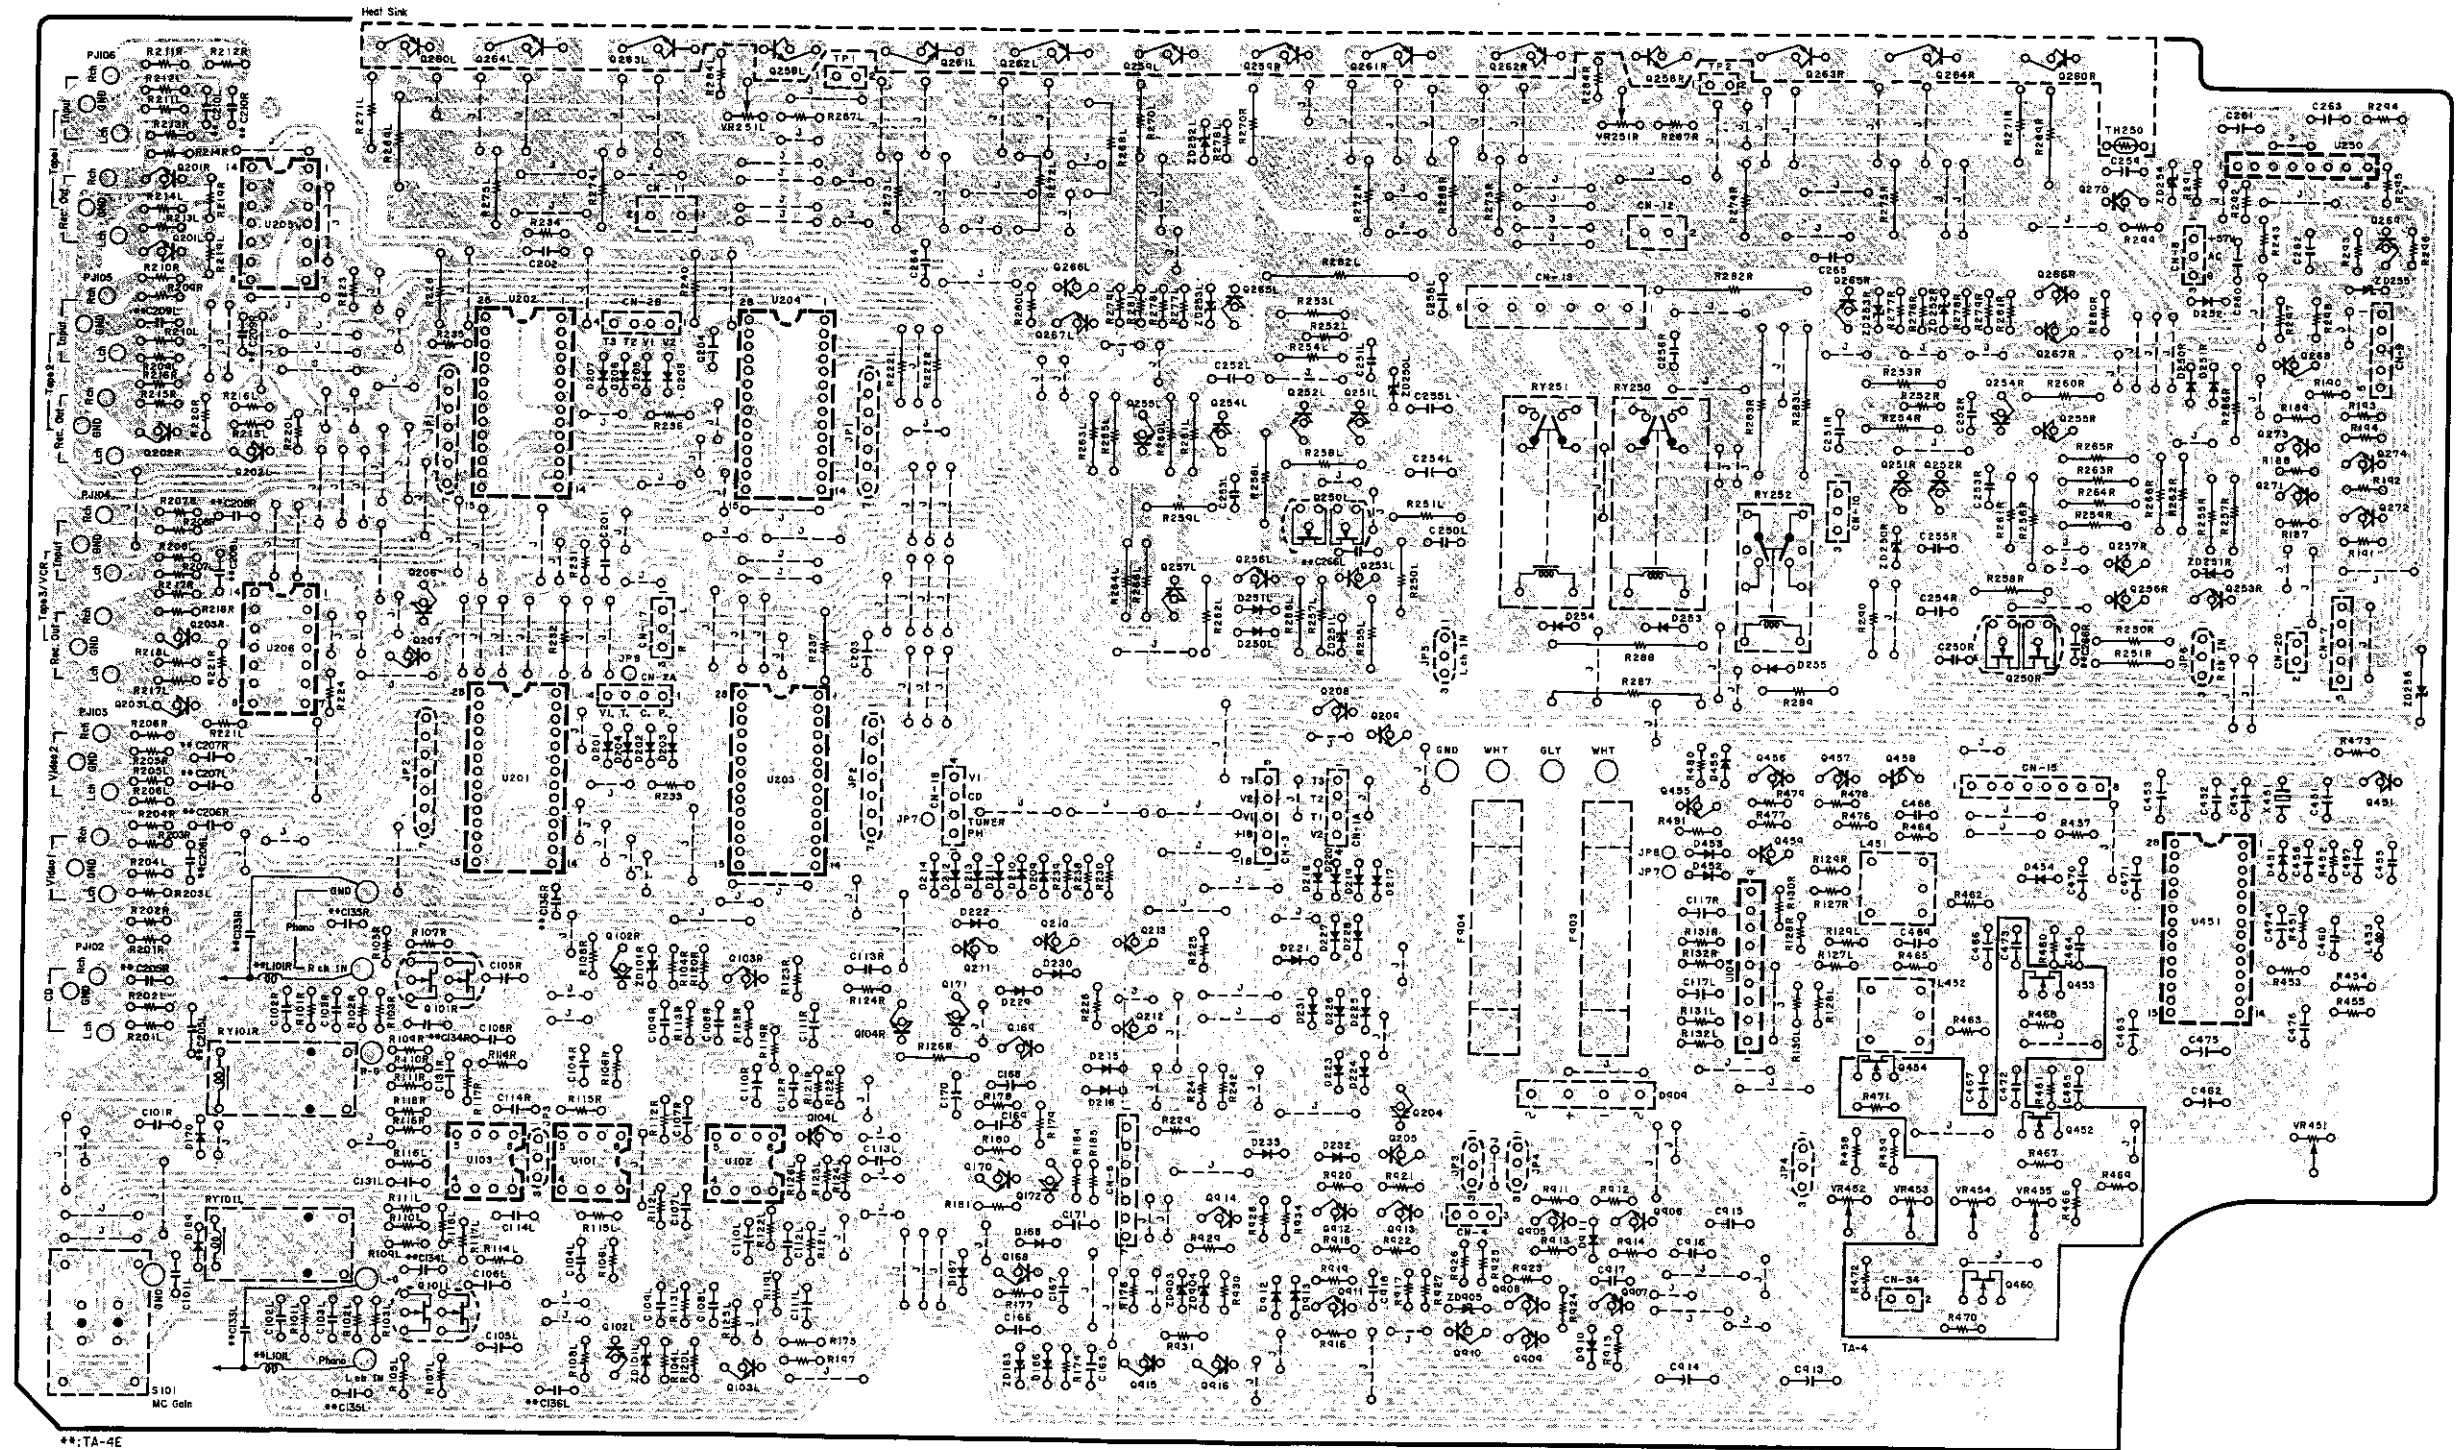


Fig. 6.20

7. SCHEMATIC DIAGRAMS

7.1. IC Block Diagrams

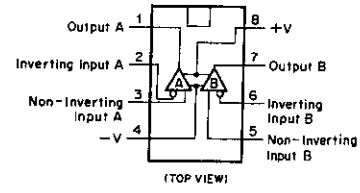


Fig. 7.1.1 Operational Amp. IC NJM4558D, NJM072DE, NJM5532DD

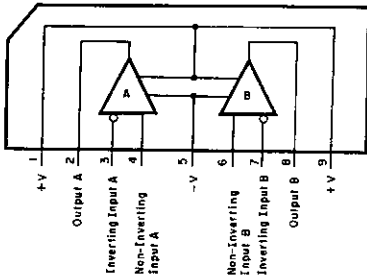


Fig. 7.1.2 Operational Amp. IC NJM4558S, NJM5532SD

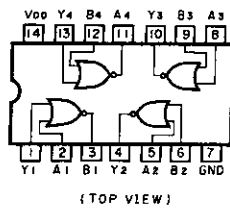


Fig. 7.1.3 NOR Gate C-MOS IC μ PD4001BC

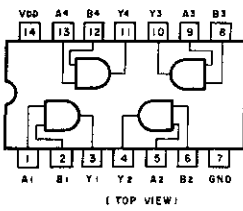


Fig. 7.1.4 AND Gate C-MOS IC μ PD4081BC

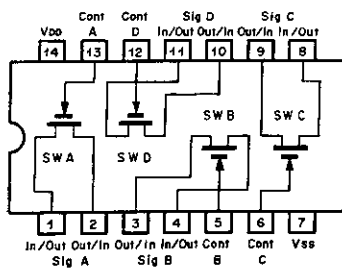


Fig. 7.1.5 Bilateral Switch IC TC4066BP, LC4966

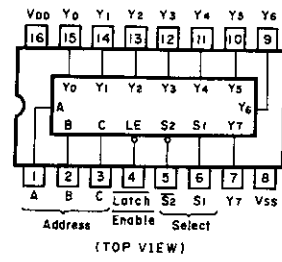


Fig. 7.1.6 3-to-8 Line Decoder IC μ PD74HC237

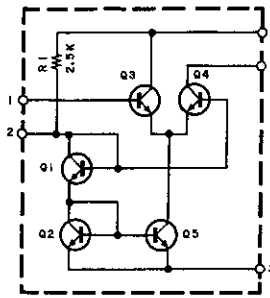


Fig. 7.1.7 FM IF Amp. IC TA7060AP

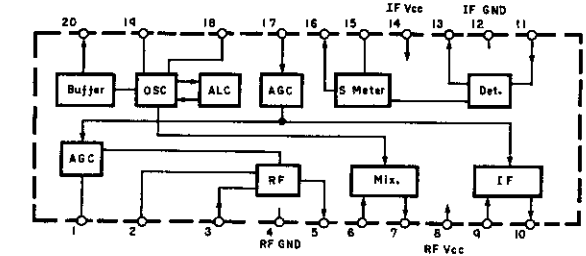


Fig. 7.1.11 AM Tuner IC LA1247

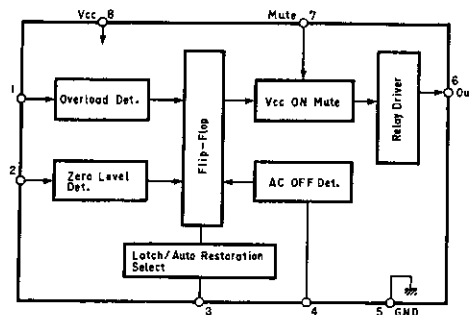


Fig. 7.1.8 Power Amp. Protector IC μ PC1237H

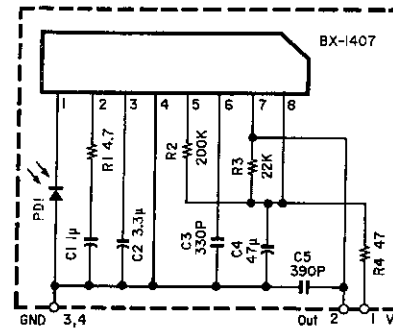


Fig. 7.1.9 Remote Control Receiver IC BX-1407

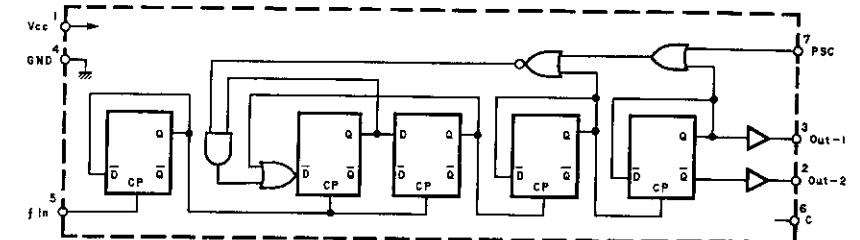


Fig. 7.1.12 ECL Prescaler (FM) IC TD6104P

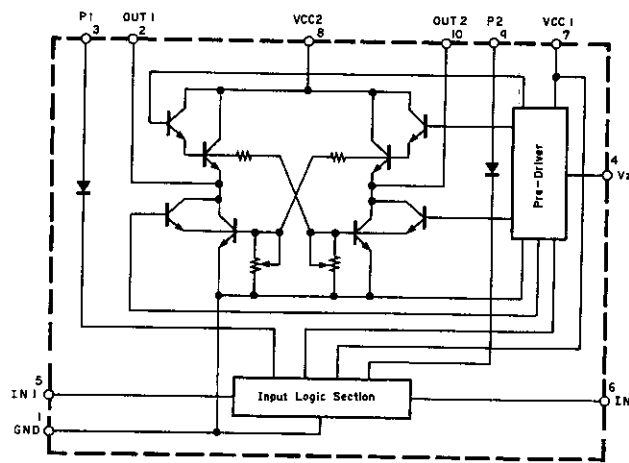


Fig. 7.1.10 Motor Control IC LB1645N

INPUT IN 1	INPUT IN 2	OUTPUT OUT 1	OUTPUT OUT 2	OPERATION
0	0	0	0	Braking
1	0	1	0	Forward (Reverse)
0	1	0	1	Reverse (Forward)
1	1	0	0	Braking

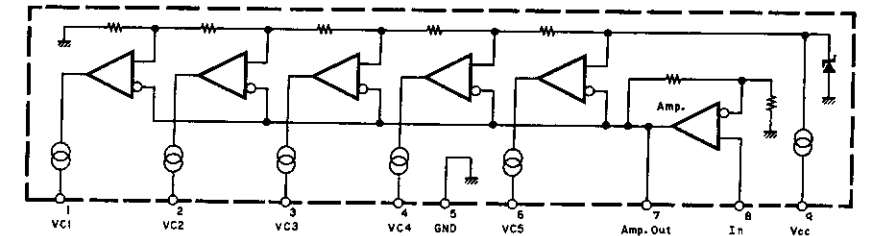


Fig. 7.1.13 Signal Meter Driver IC LB1413N

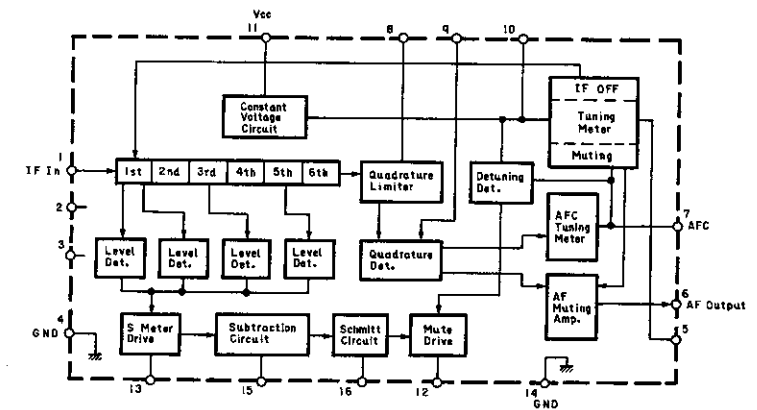


Fig. 7.1.14 FM IF Amp. & Detector IC LA1235

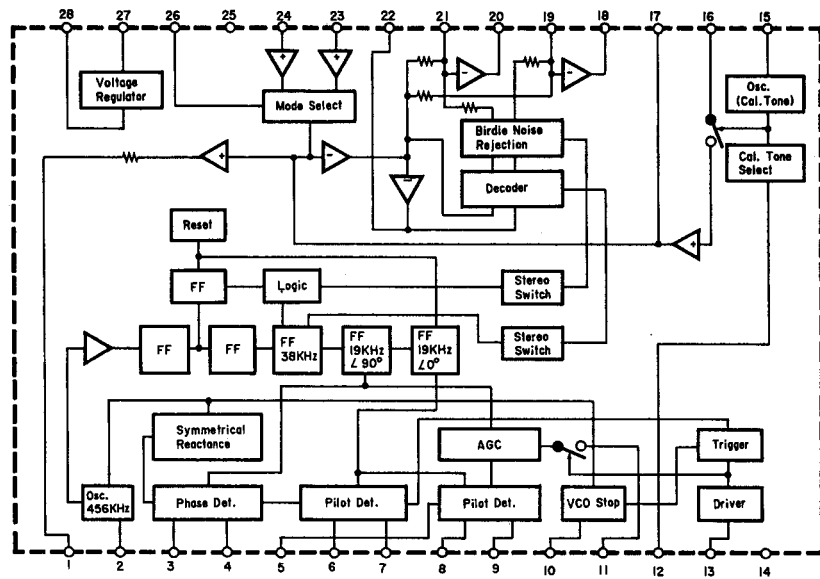


Fig. 7.1.15 PLL FM MPX Demodulator IC LA3450

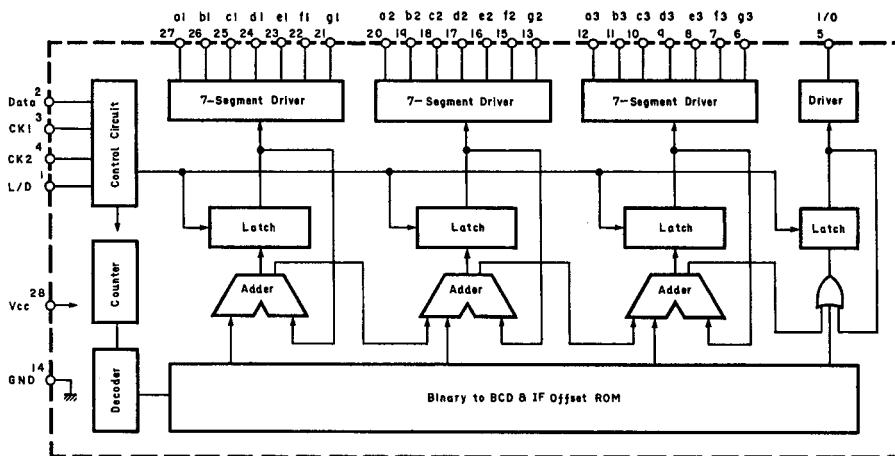


Fig. 7.1.16 Display Driver IC TD6301AN

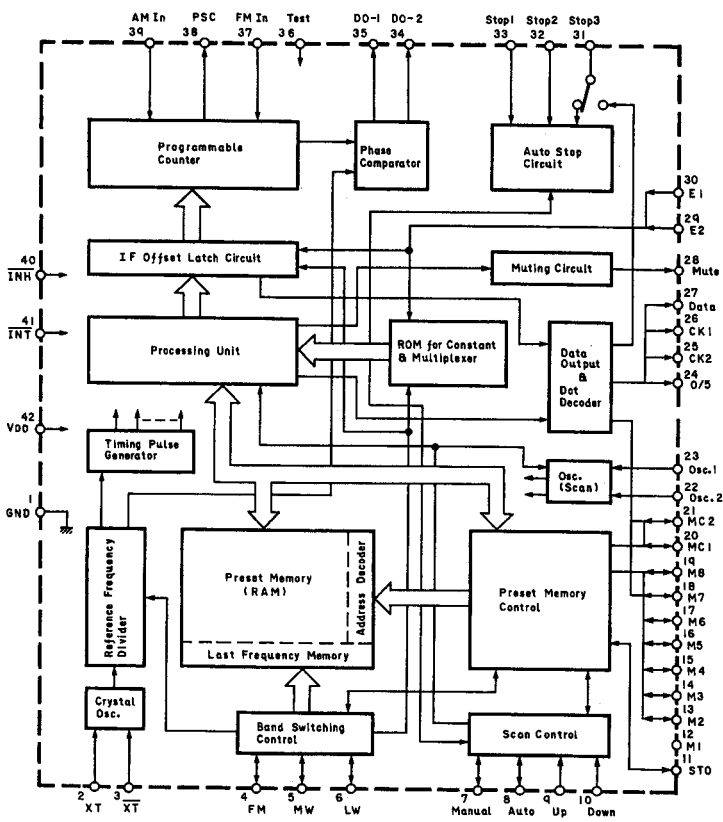


Fig. 7.1.17 PLL Synthesizer IC TC9147BP

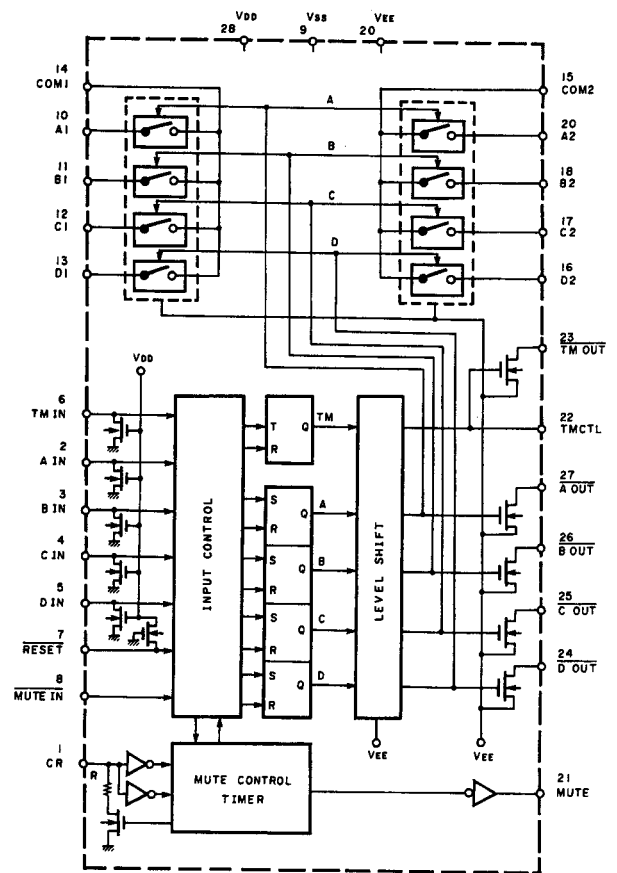


Fig. 7.1.18 Analog Function Switch LC7816

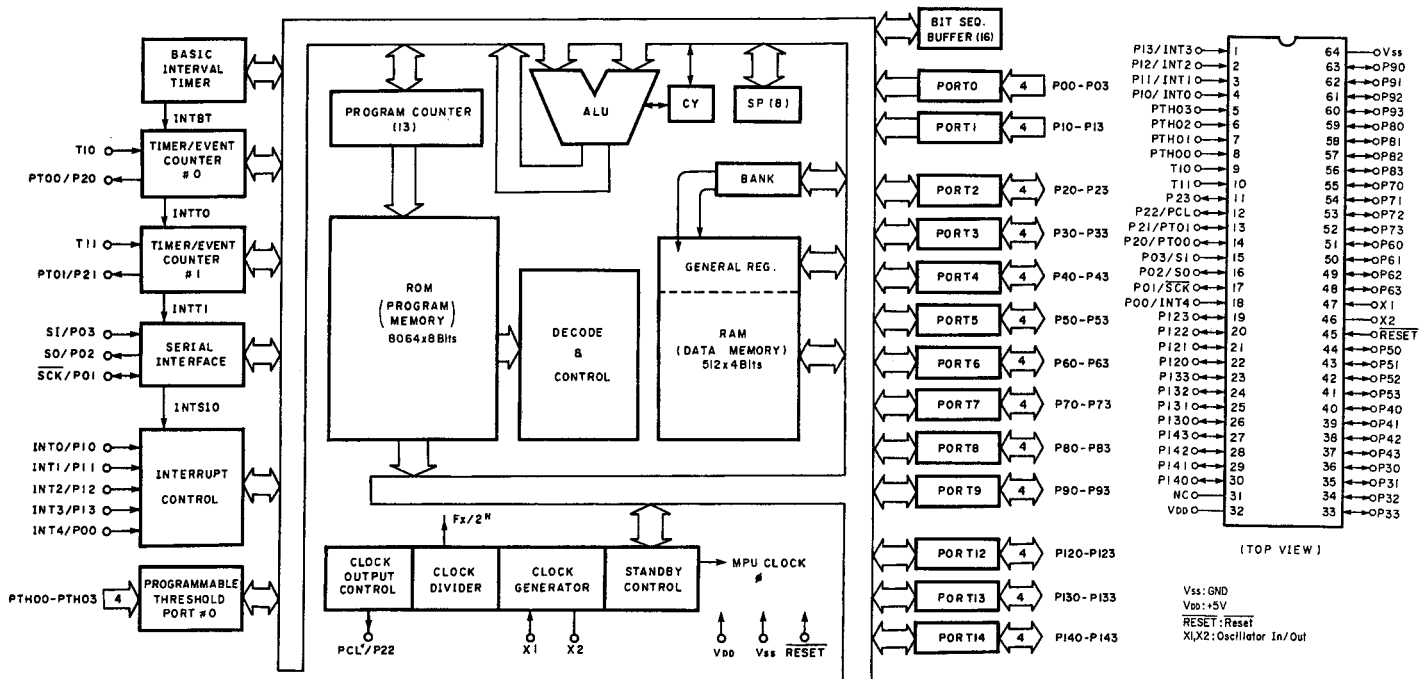


Fig. 7.1.19 MPU μPD75104CW

7.2. Schematic Diagrams
7.2.1. Tuner Section

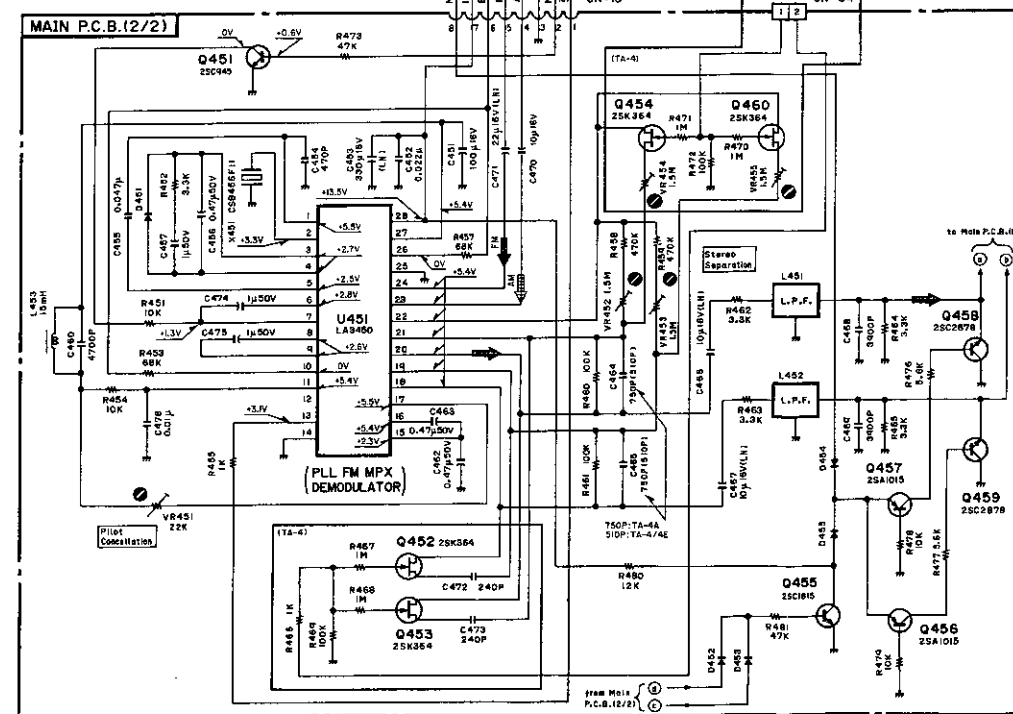
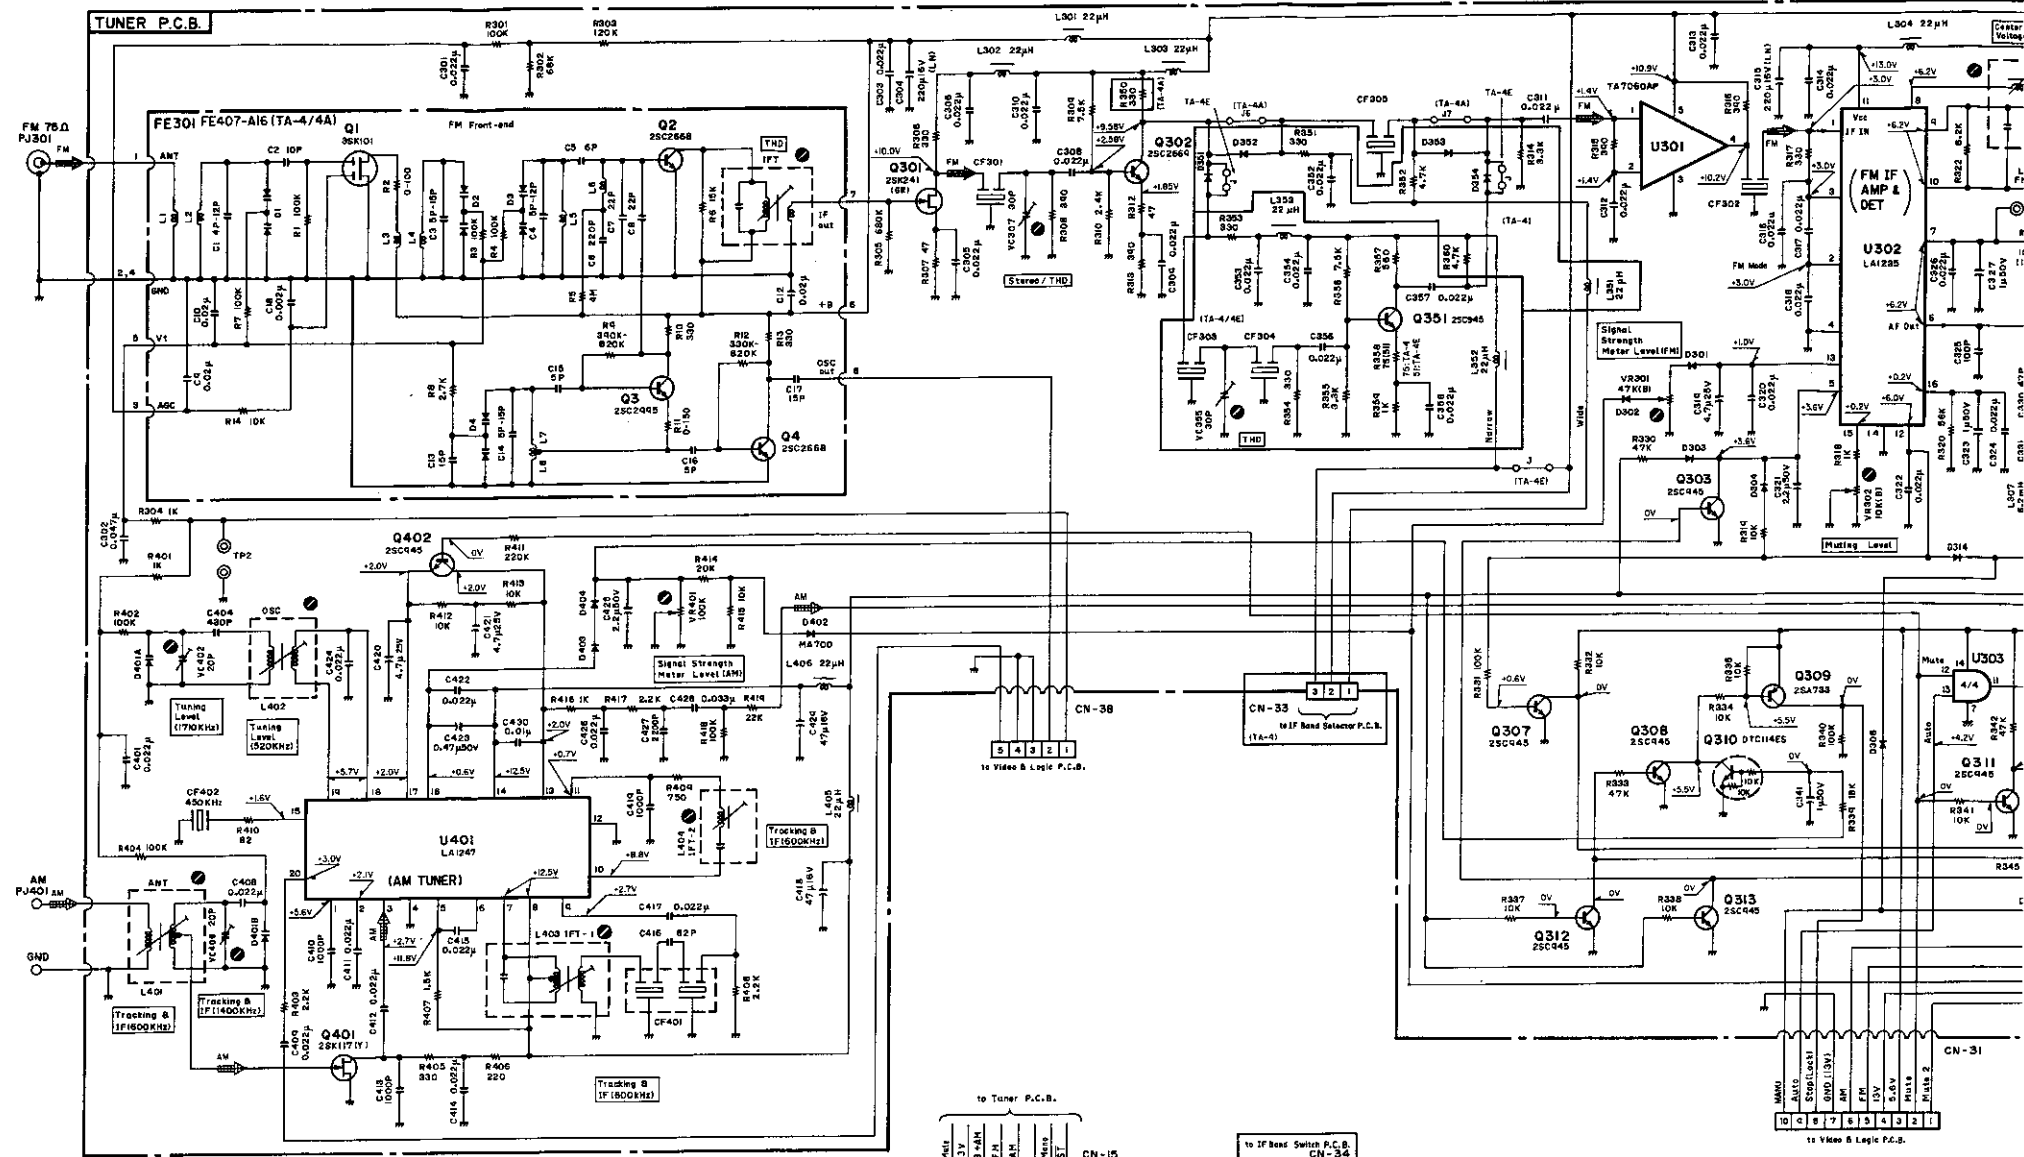
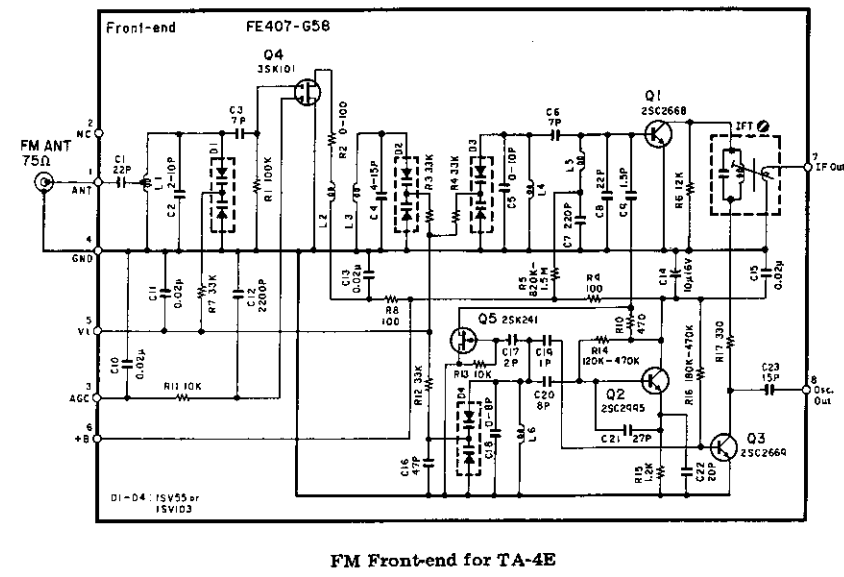


Fig. 7.2.1


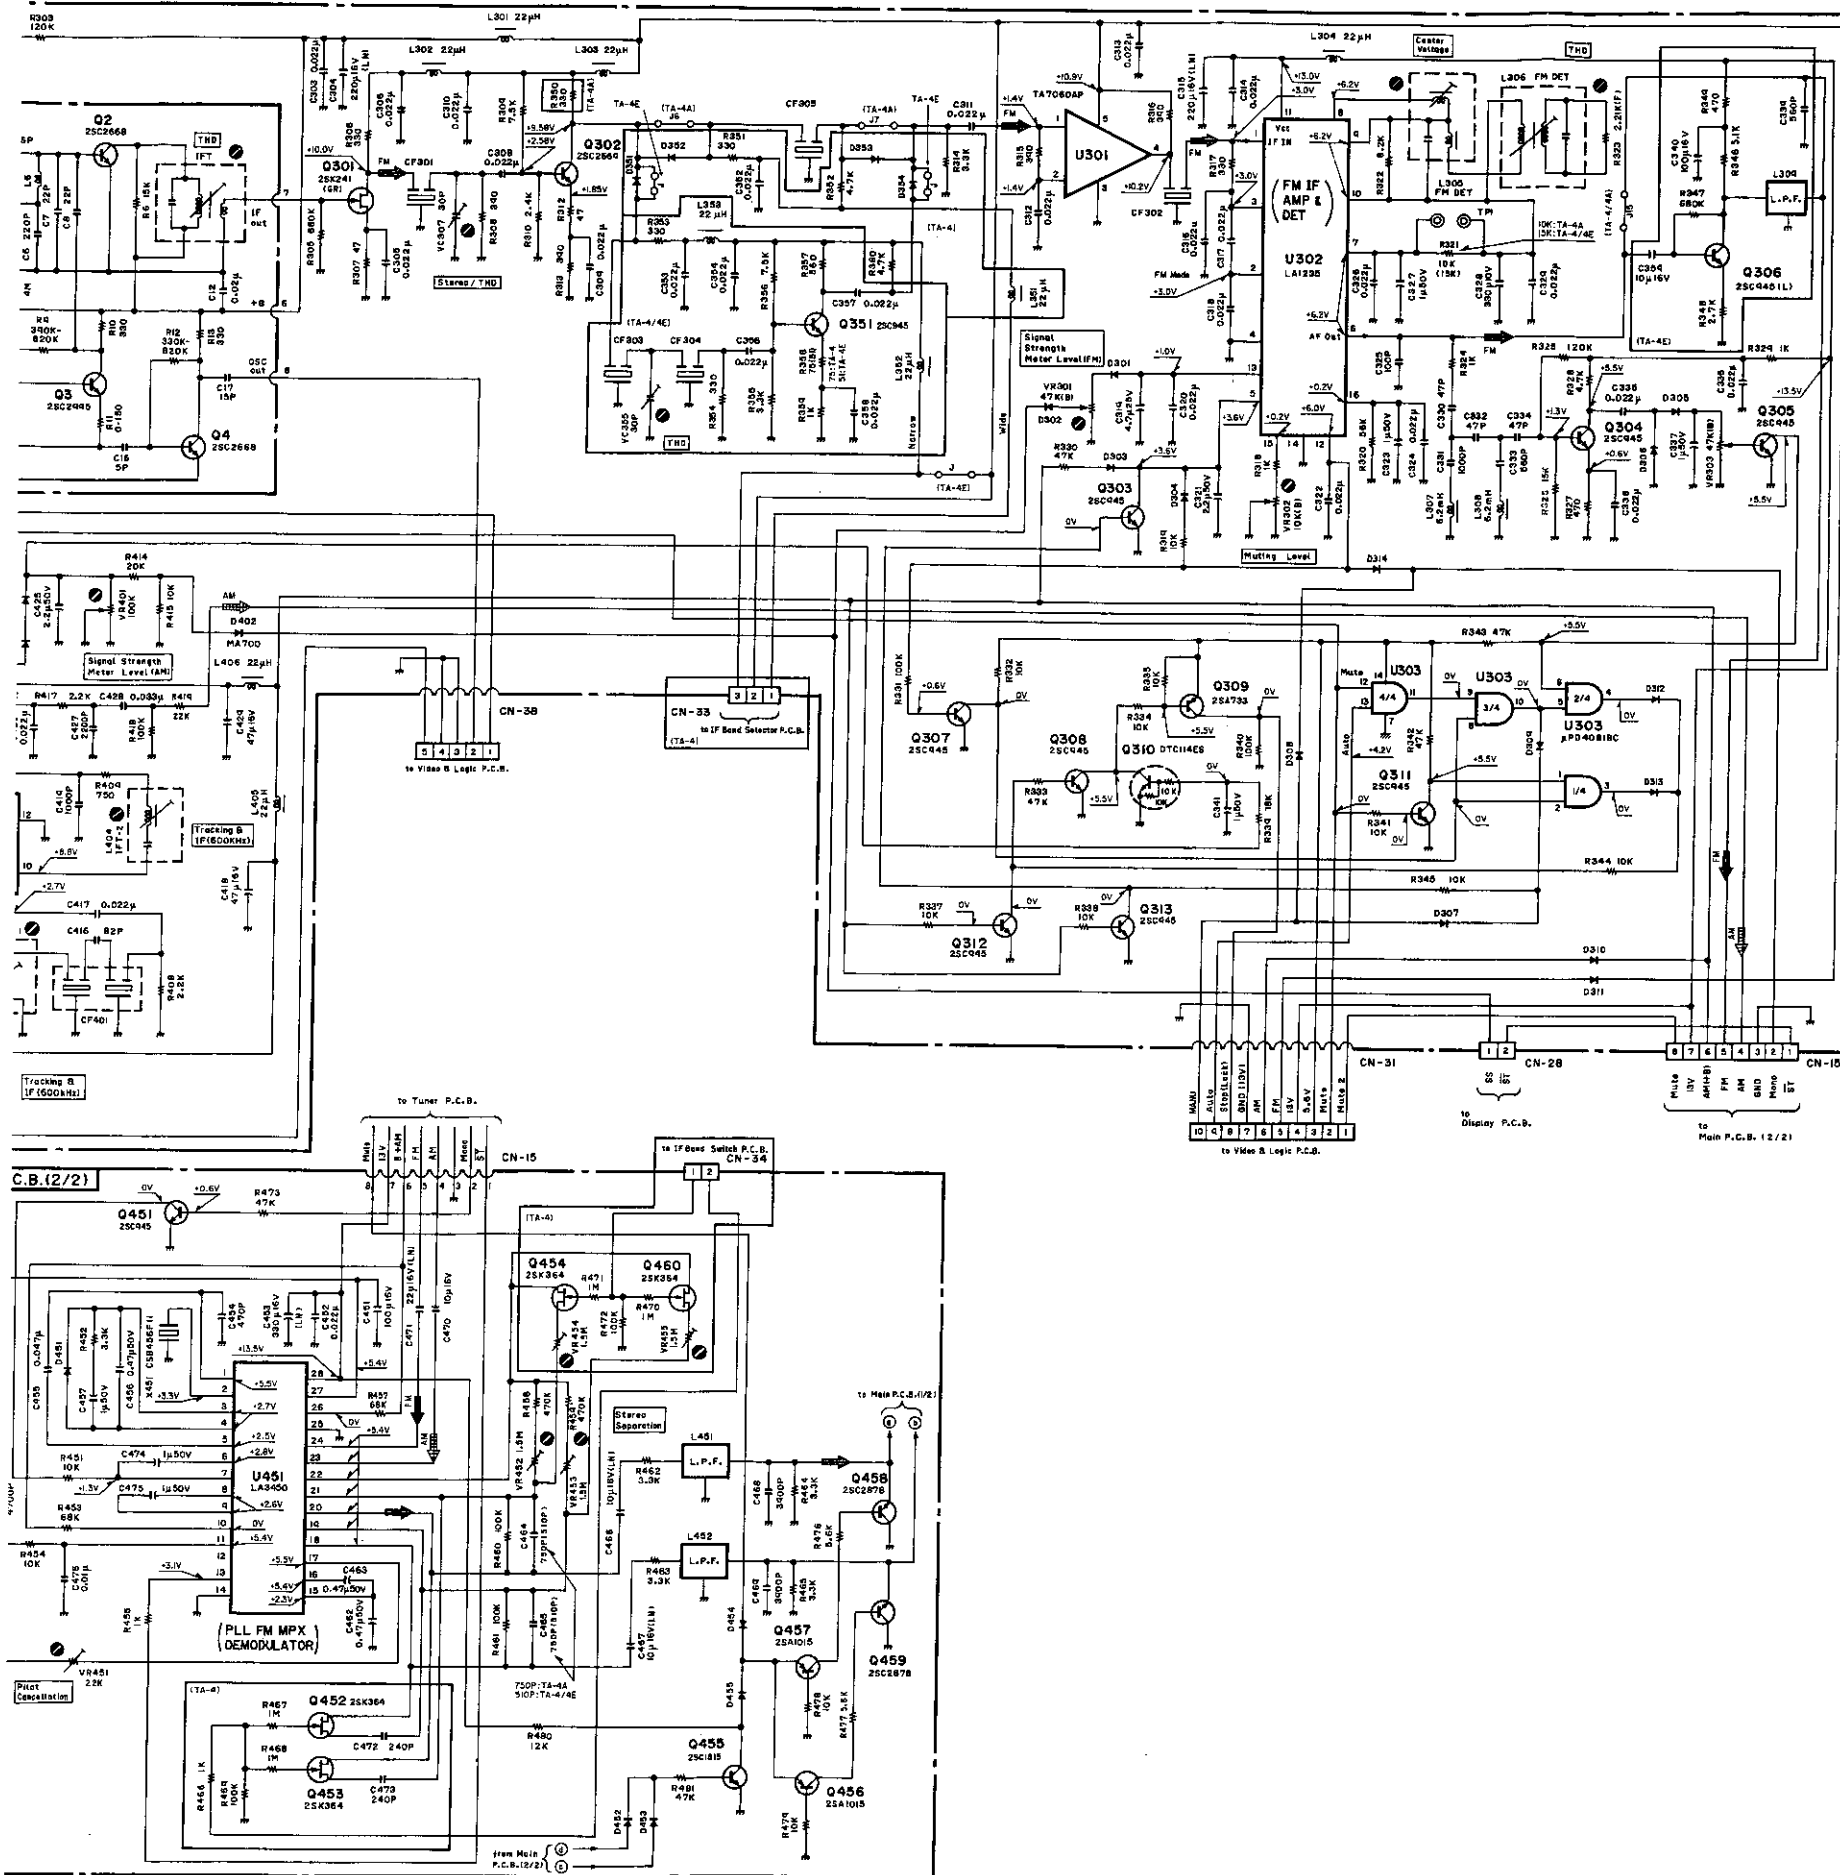




Fig. 7.2.1

Notes:

1. Diode is 1SS53, 1S1555 or 1SS176 unless otherwise specified.
2. 2SA733, 2SA608SP, 2SA1048 and 2SA1175 are interchangeable with each other.
3. 2SC945, 2SC536SP, 2SC2458 and 2SC2785 are interchangeable with each other.
4. Voltage measuring conditions
 - With no input signal applied to the input terminals.
 - With no load connected to the speaker terminals.

7.2.2. Video and Control Section

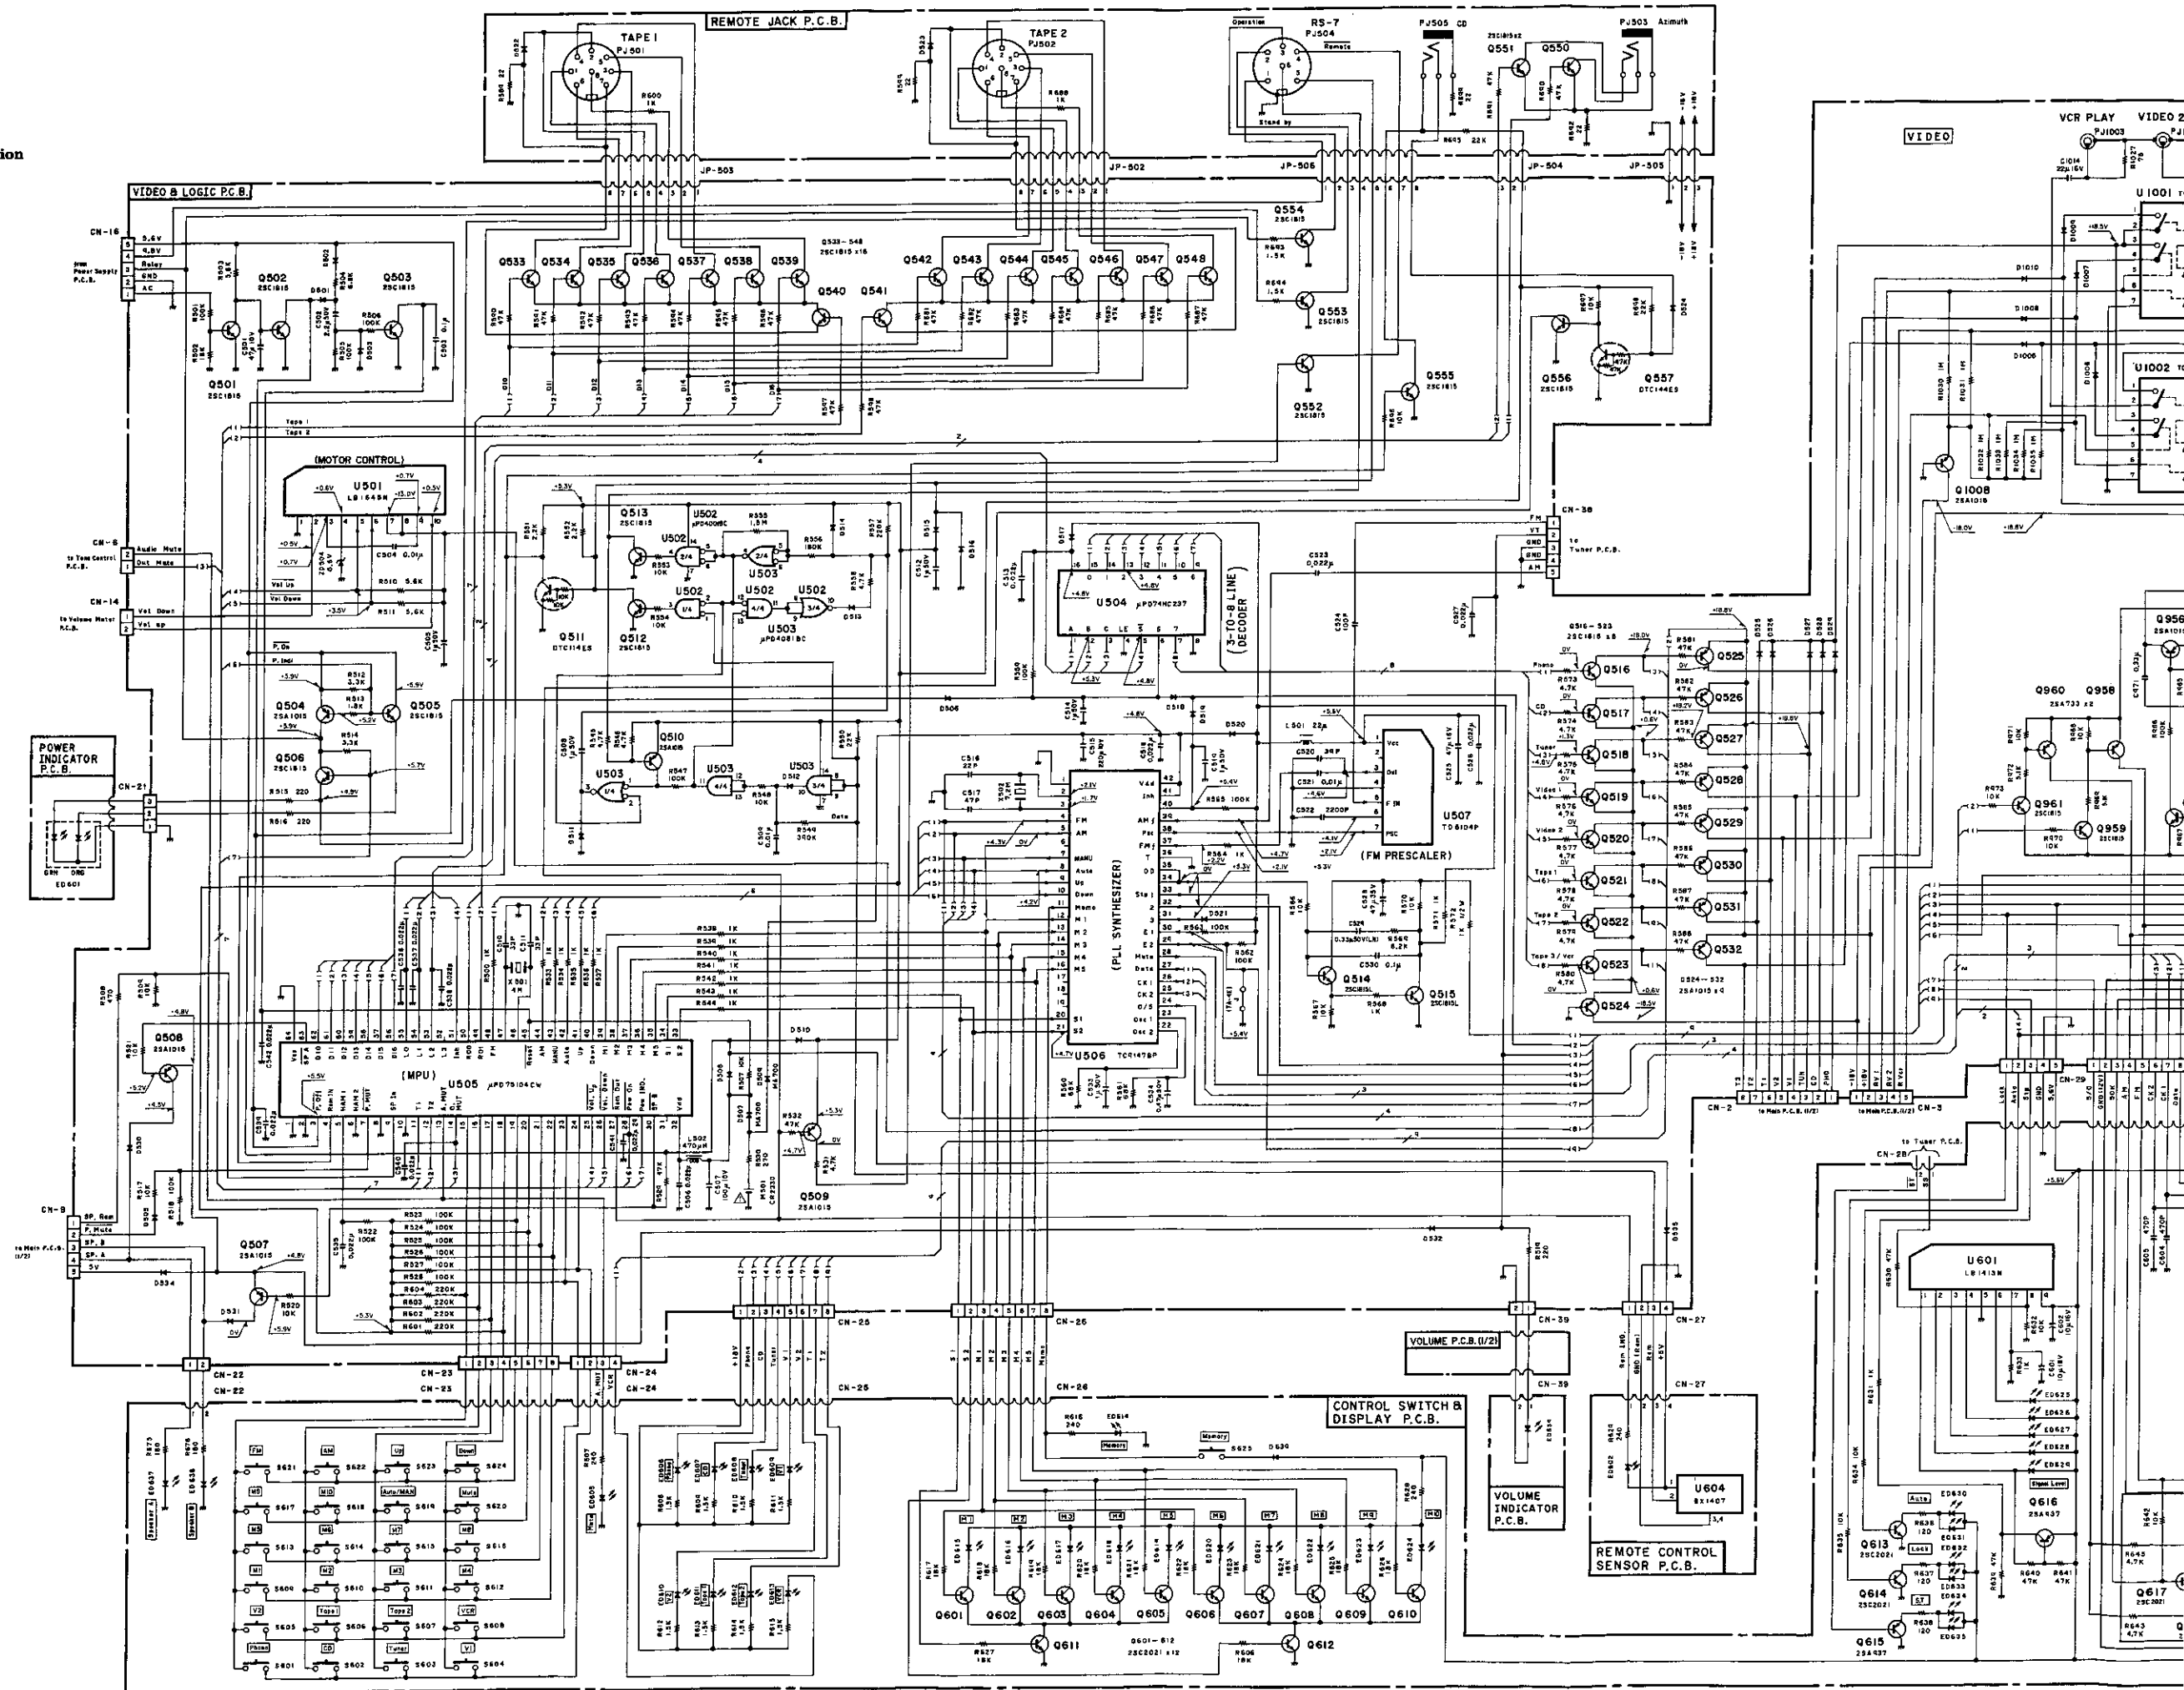

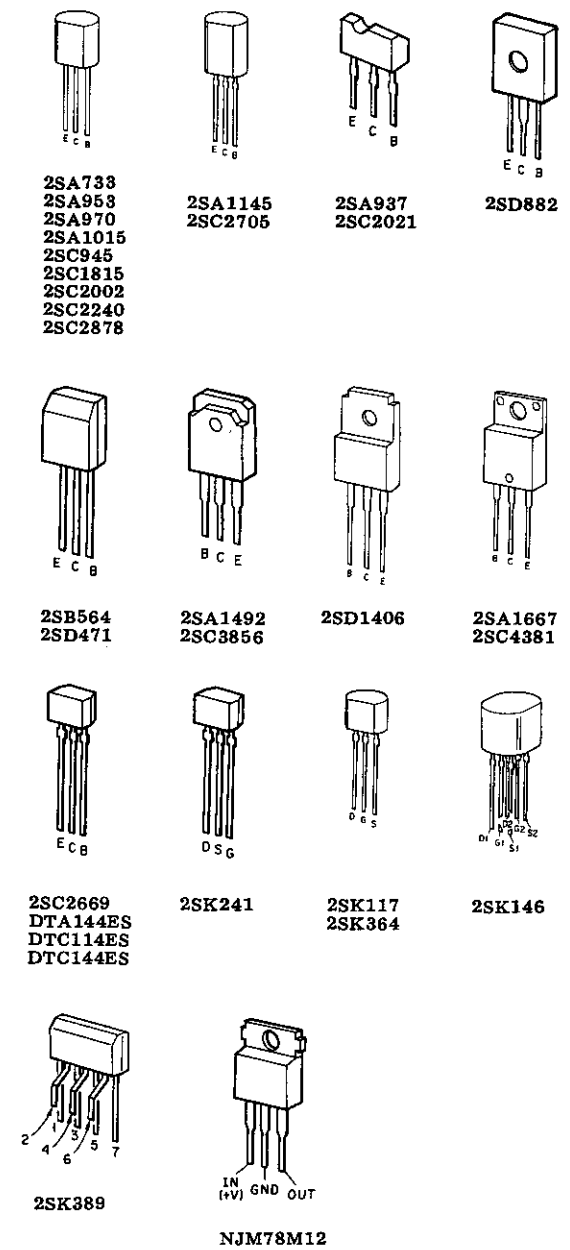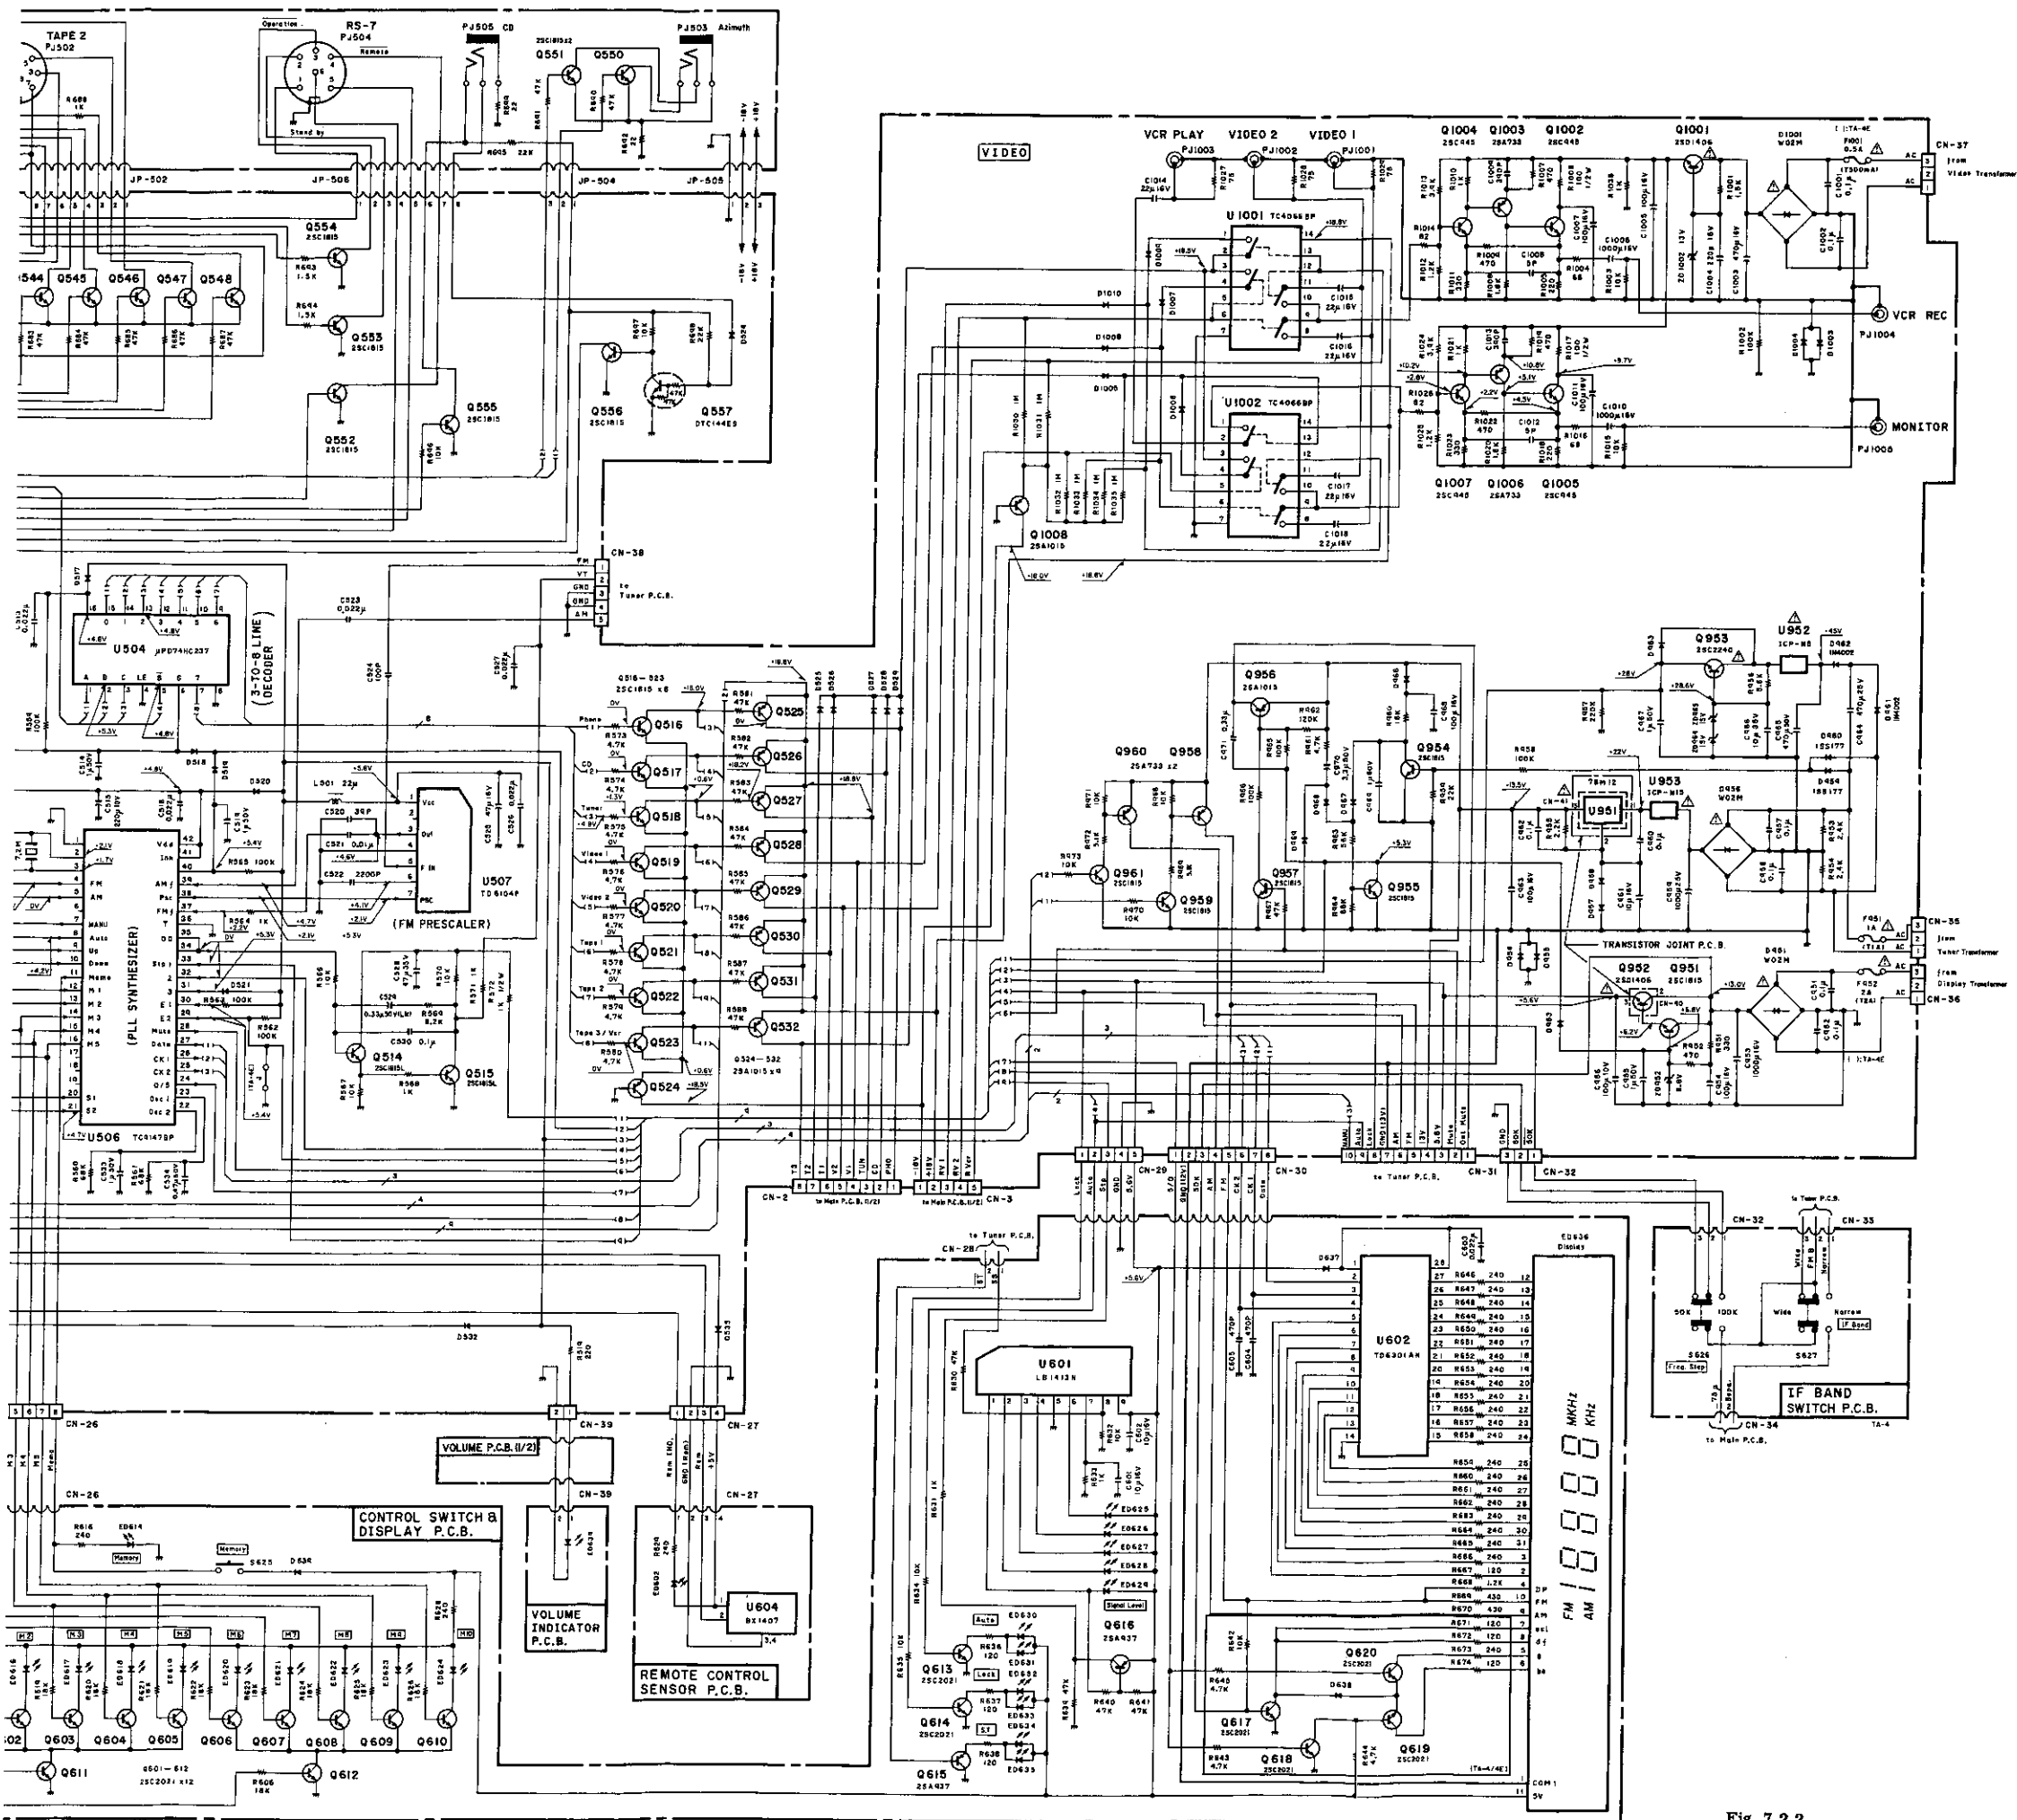

- Notes:
1. Diode is 1SS53, 1S1555 or 1SS176 unless otherwise specified.
 2. 2SA733, 2SA608SP, 2SA1048 and 2SA1175 are interchangeable with each other.
 3. 2SC945, 2SC536SP, 2SC2458 and 2SC2785 are interchangeable with each other.
 4. Parts marked with ** indicate those for TA-4E.
 5. Voltage measuring conditions
 - With no input signal applied to the input terminals.
 - With no load connected to the speaker terminals.

Fig. 7.2.2

7.2.3. Amplifier Section

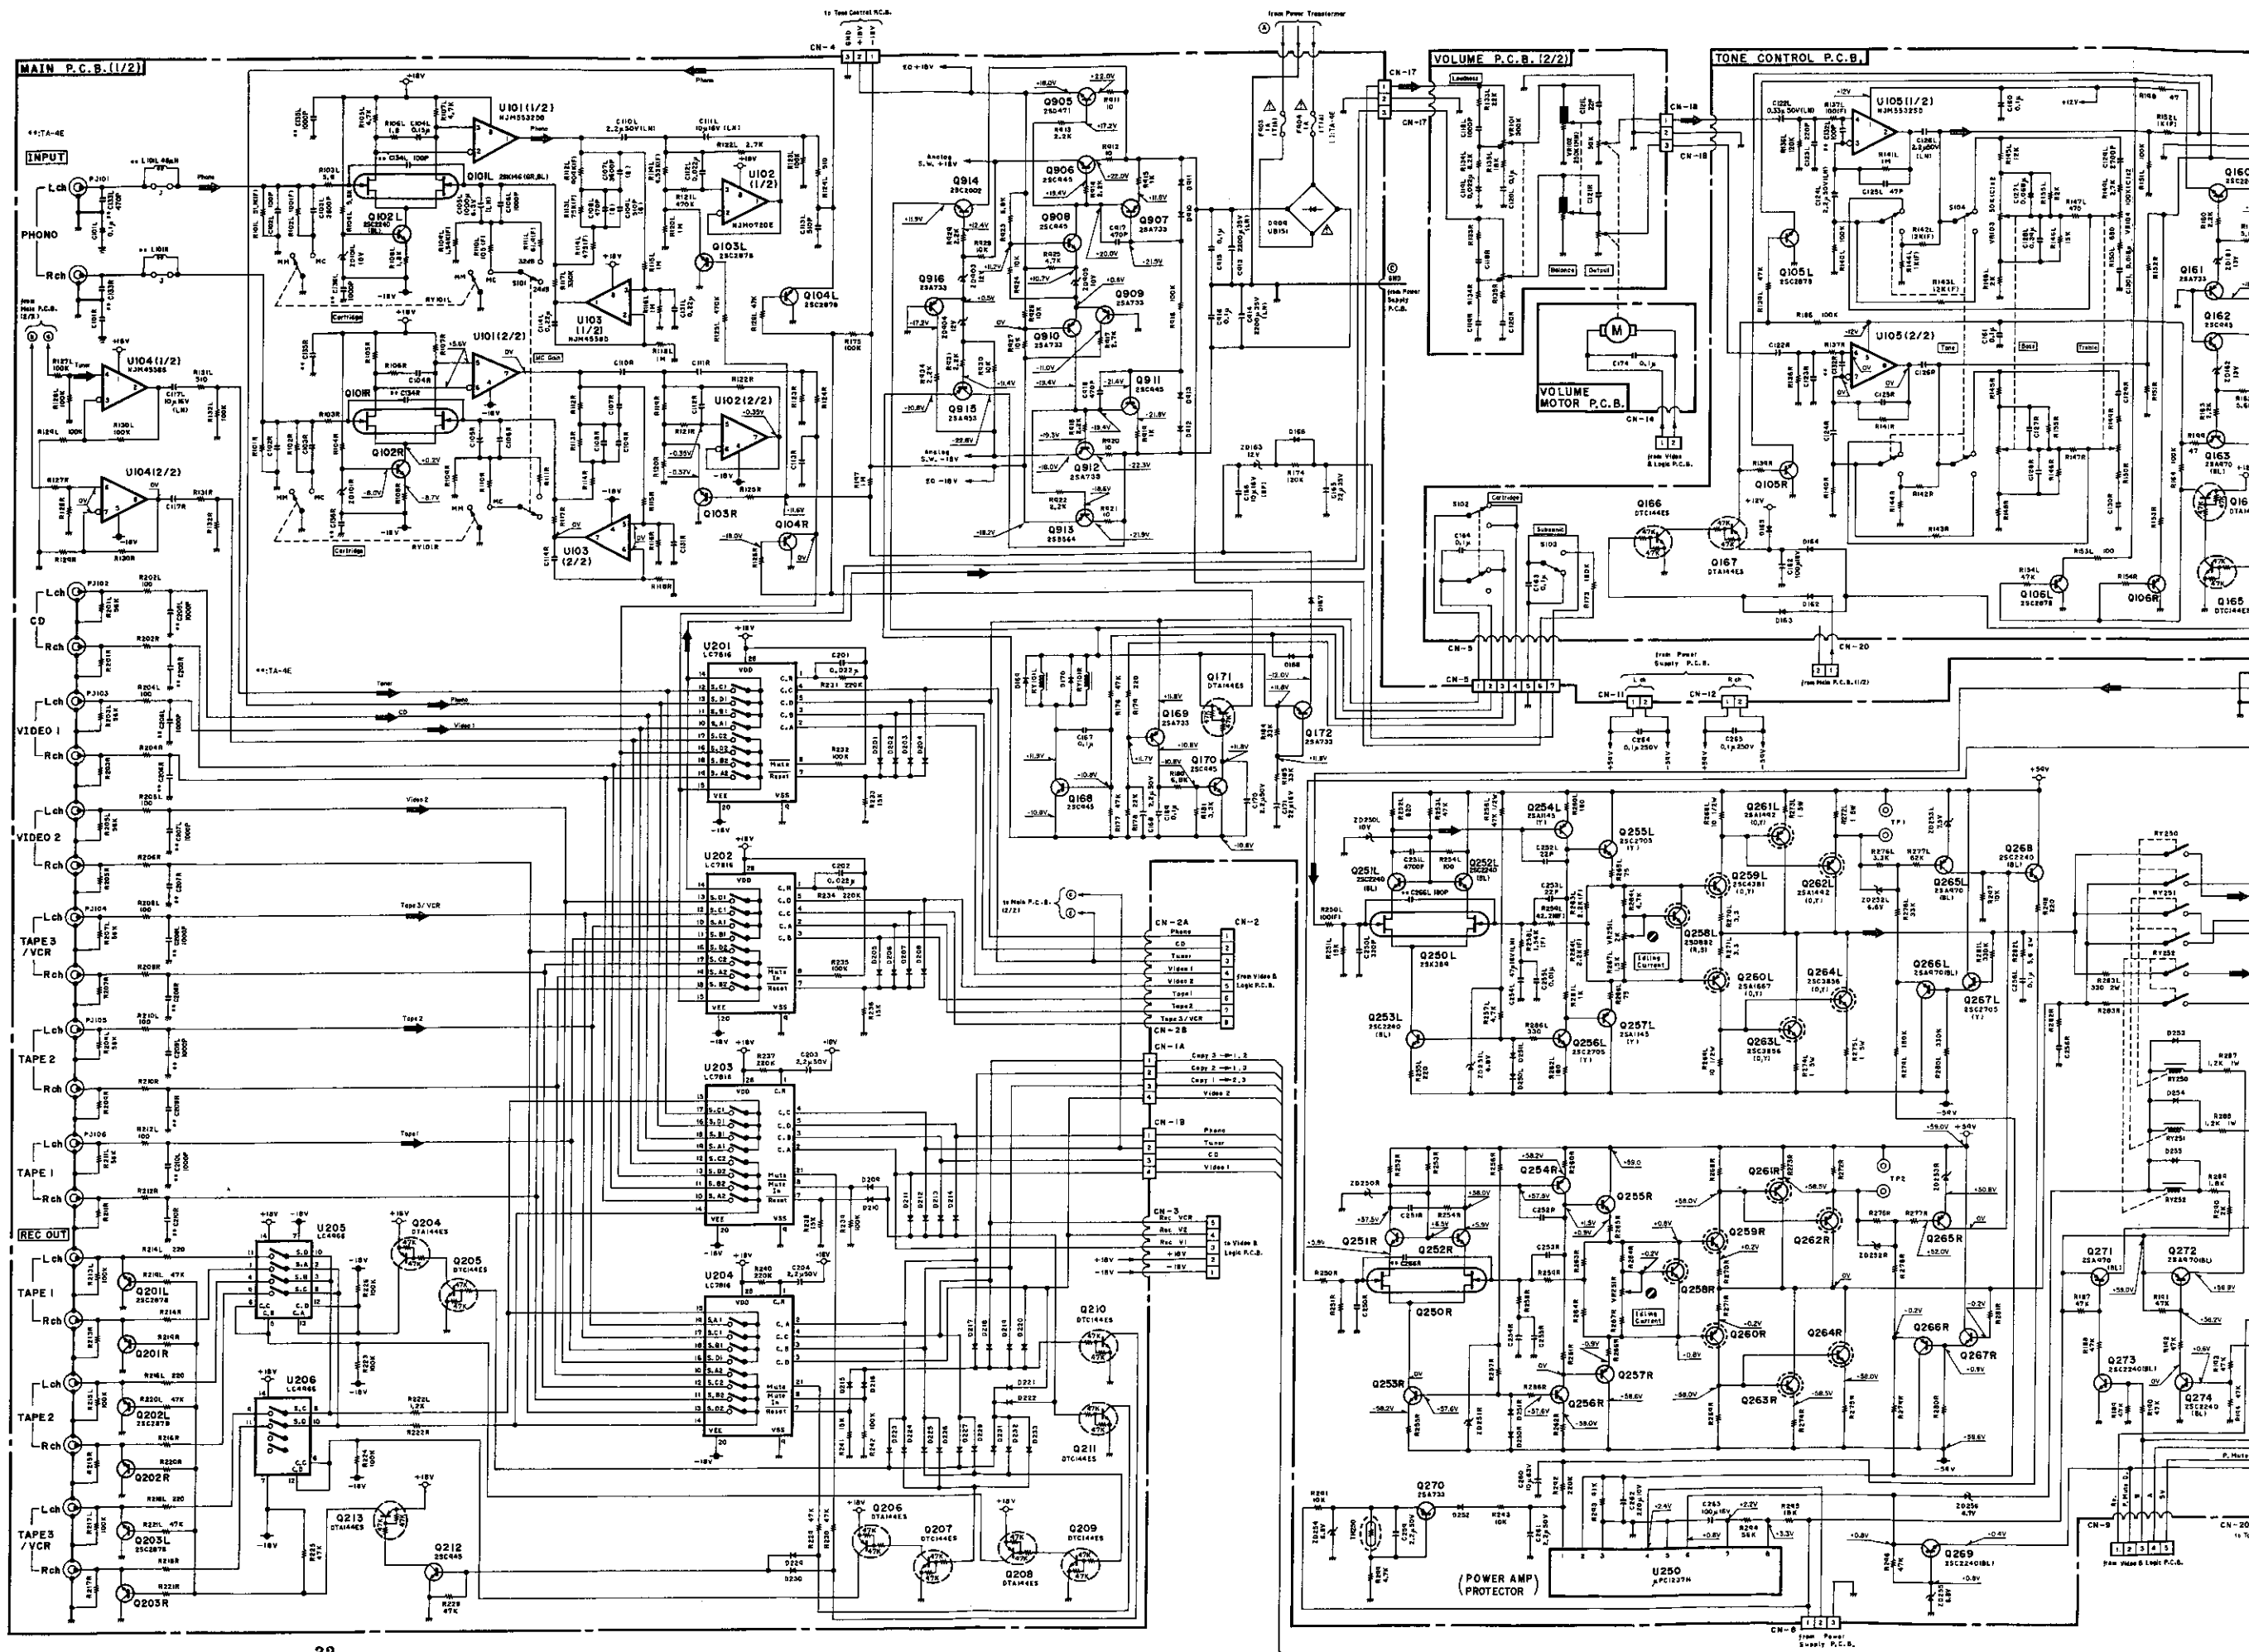


Fig. 7.2.3



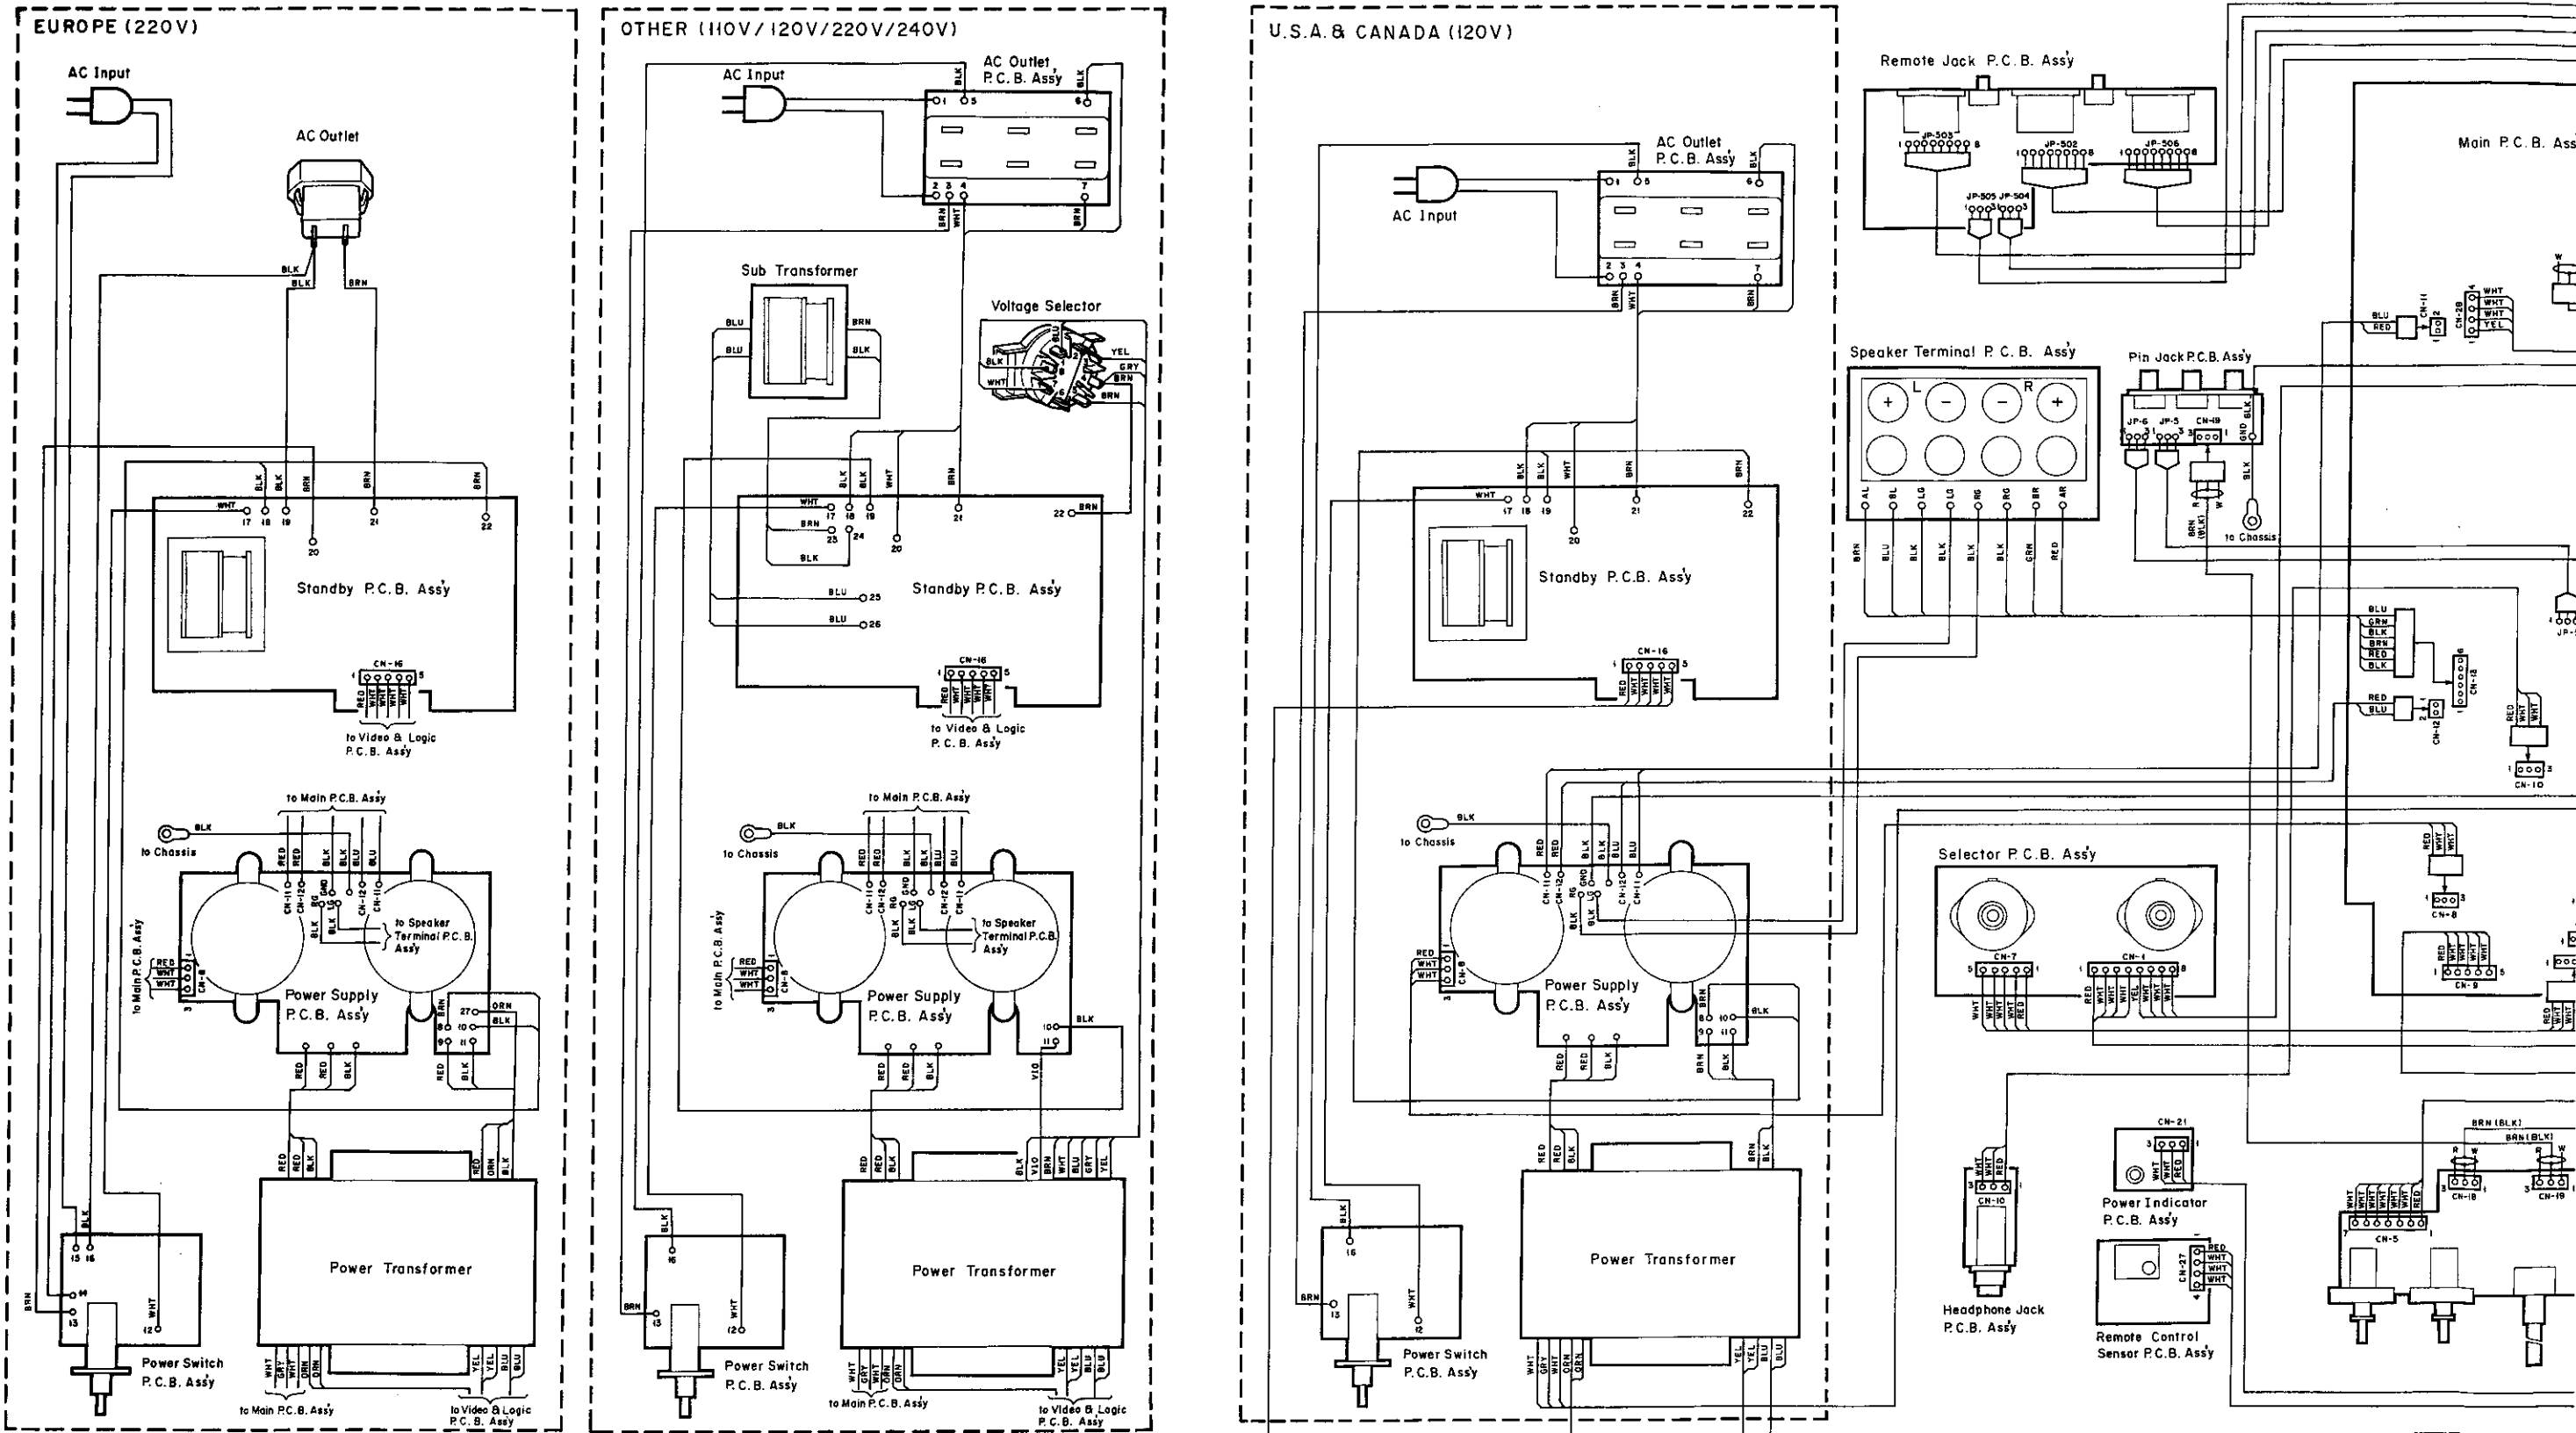


Fig. 7.2.3

WARNING:
 Parts marked with the symbol  have critical characteristics.
 Use **ONLY** replacement parts recommended by the manufacturer.
 It is recommended that the unit be operated from a suitable DC supply or batteries during initial check-out procedures.

Note: Q258L/R, Q259L/R, Q260L/R, Q261L/R, Q262L/R, Q263L/R, Q264L/R are included in Heat Sink Assy.

8. WIRING DIAGRAM

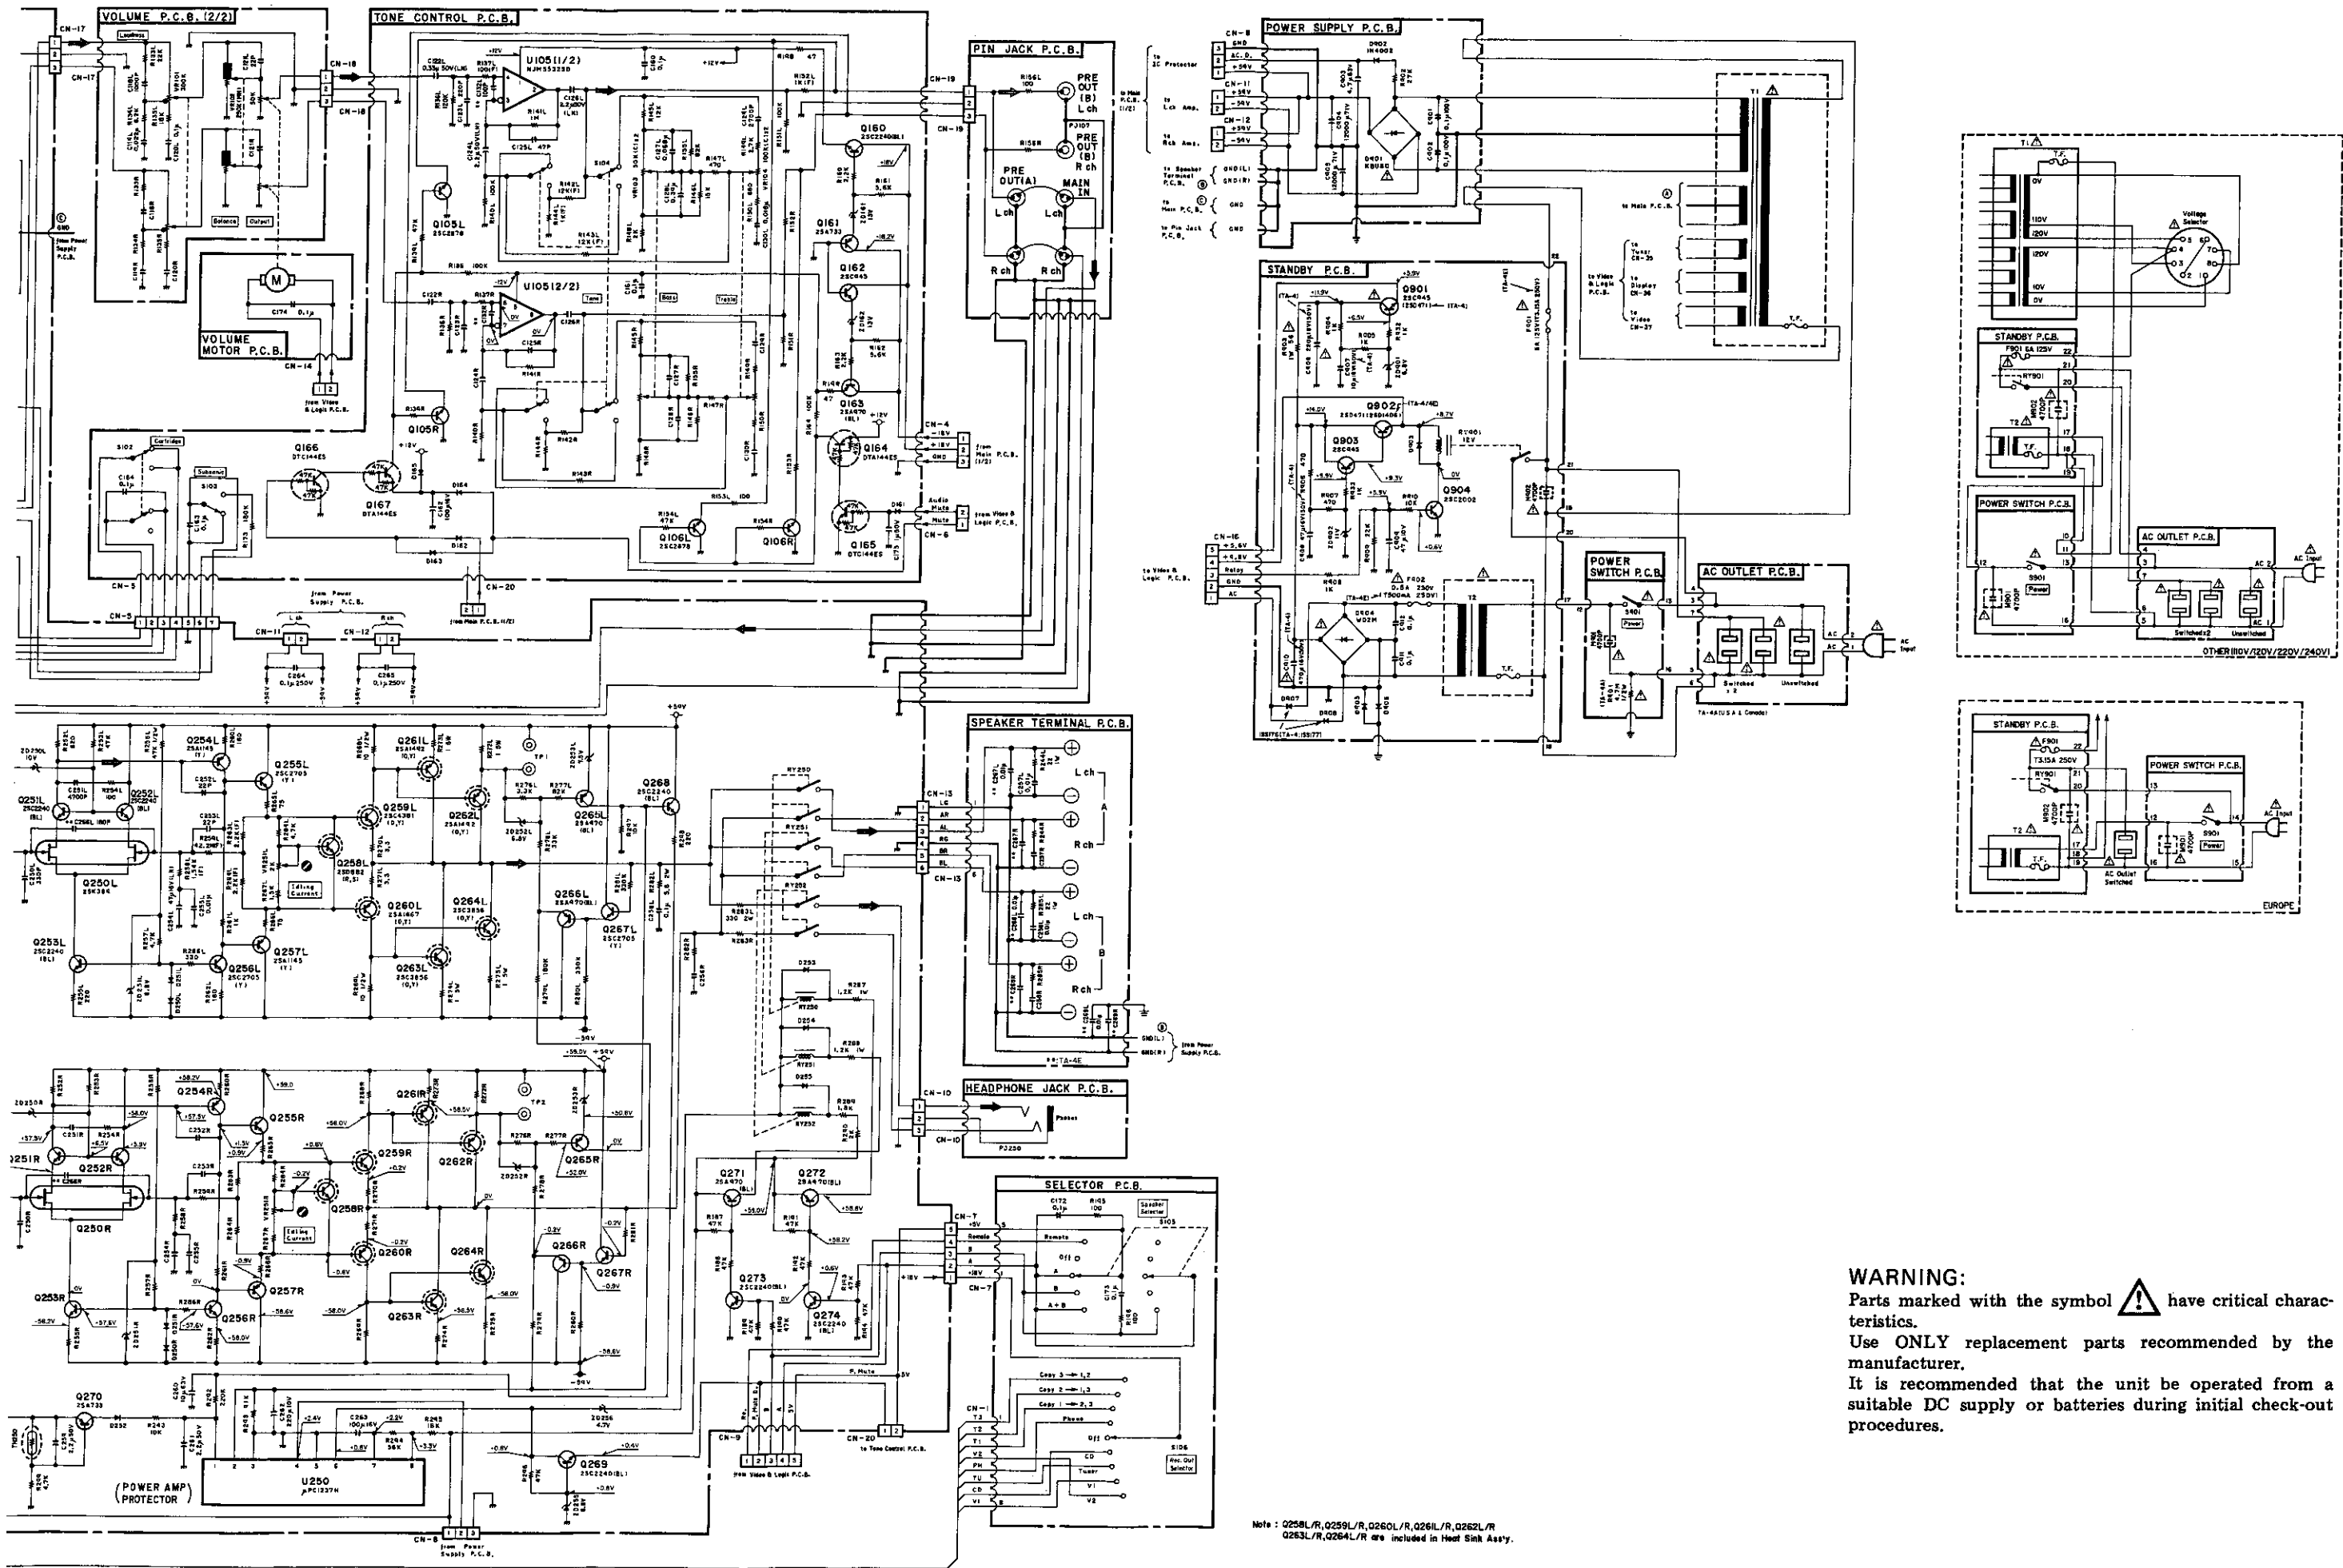

- Notes: 1. Table of wire colors
- | | |
|--------------|--------------|
| BRN - Brown | BLU - Blue |
| RED - Red | VIO - Violet |
| ORN - Orange | GRY - Gray |
| YEL - Yellow | WHT - White |
| GRN - Green | BLK - Black |

2. Component side view of the P.C.B. is illustrated unless otherwise specified.
 3. Wire tube color is shown in ().

Fig. 8

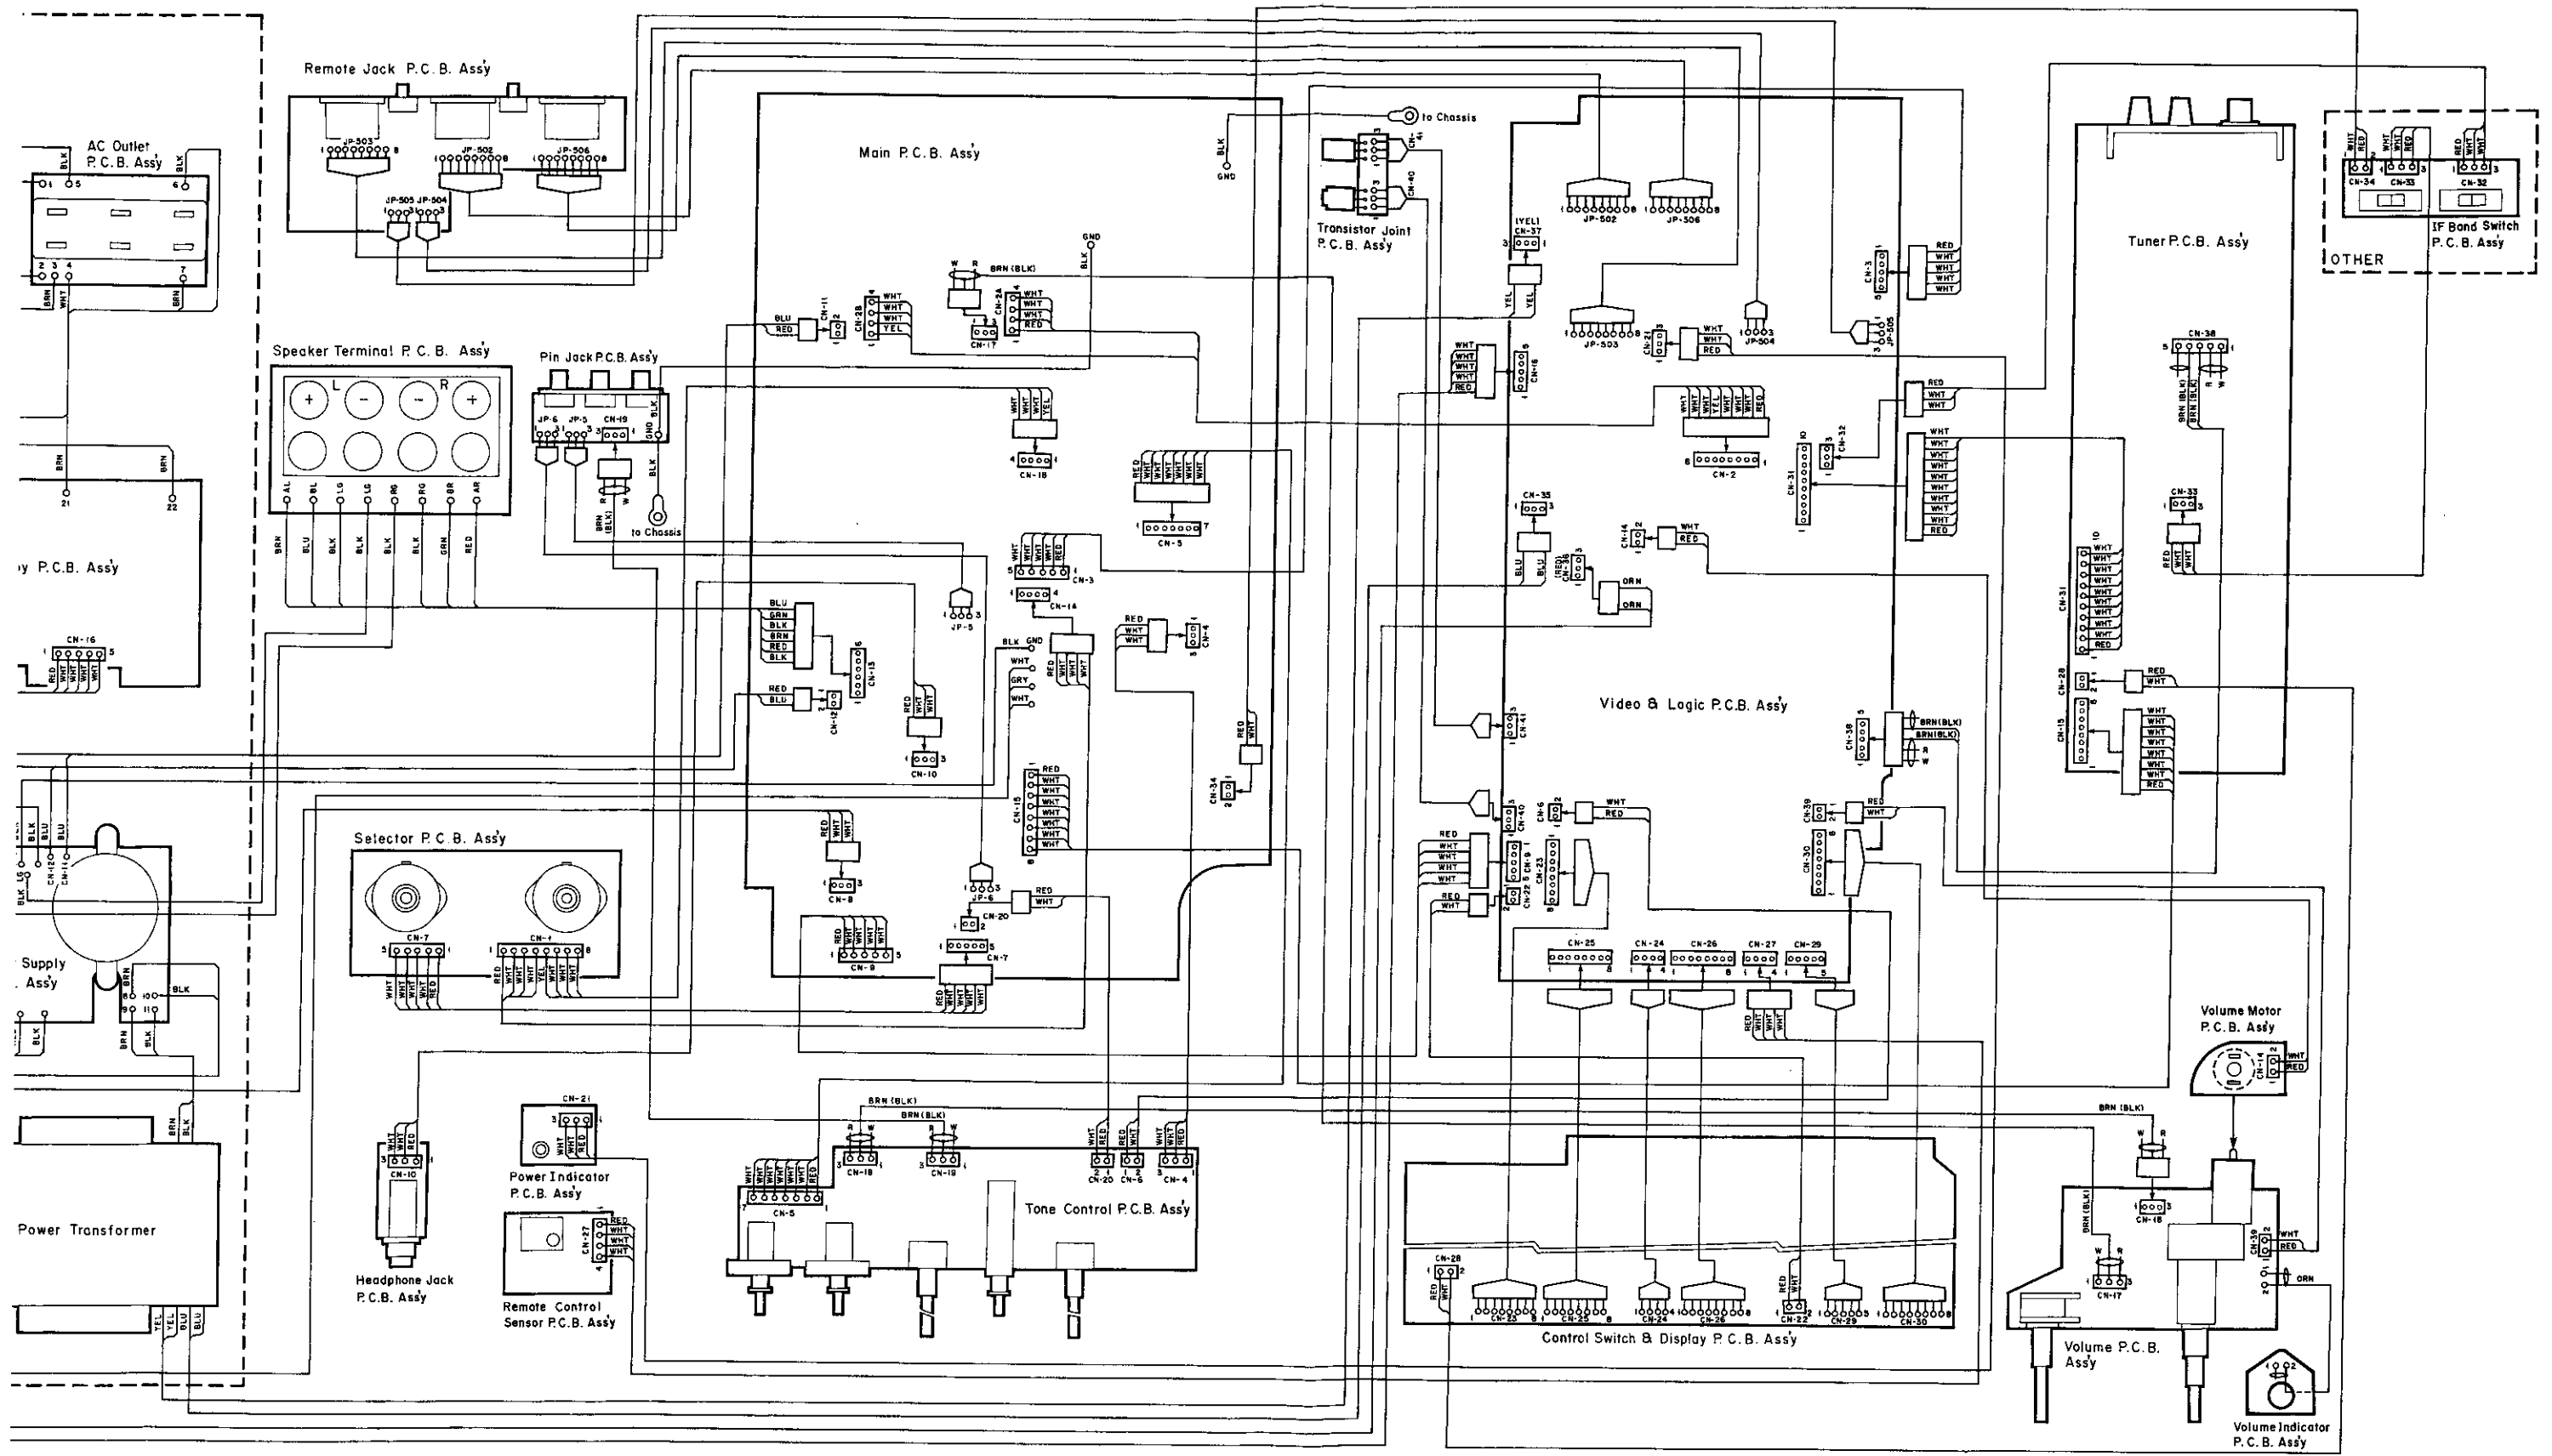


Fig. 8

9. BLOCK DIAGRAMS

9.1. Tuner Section

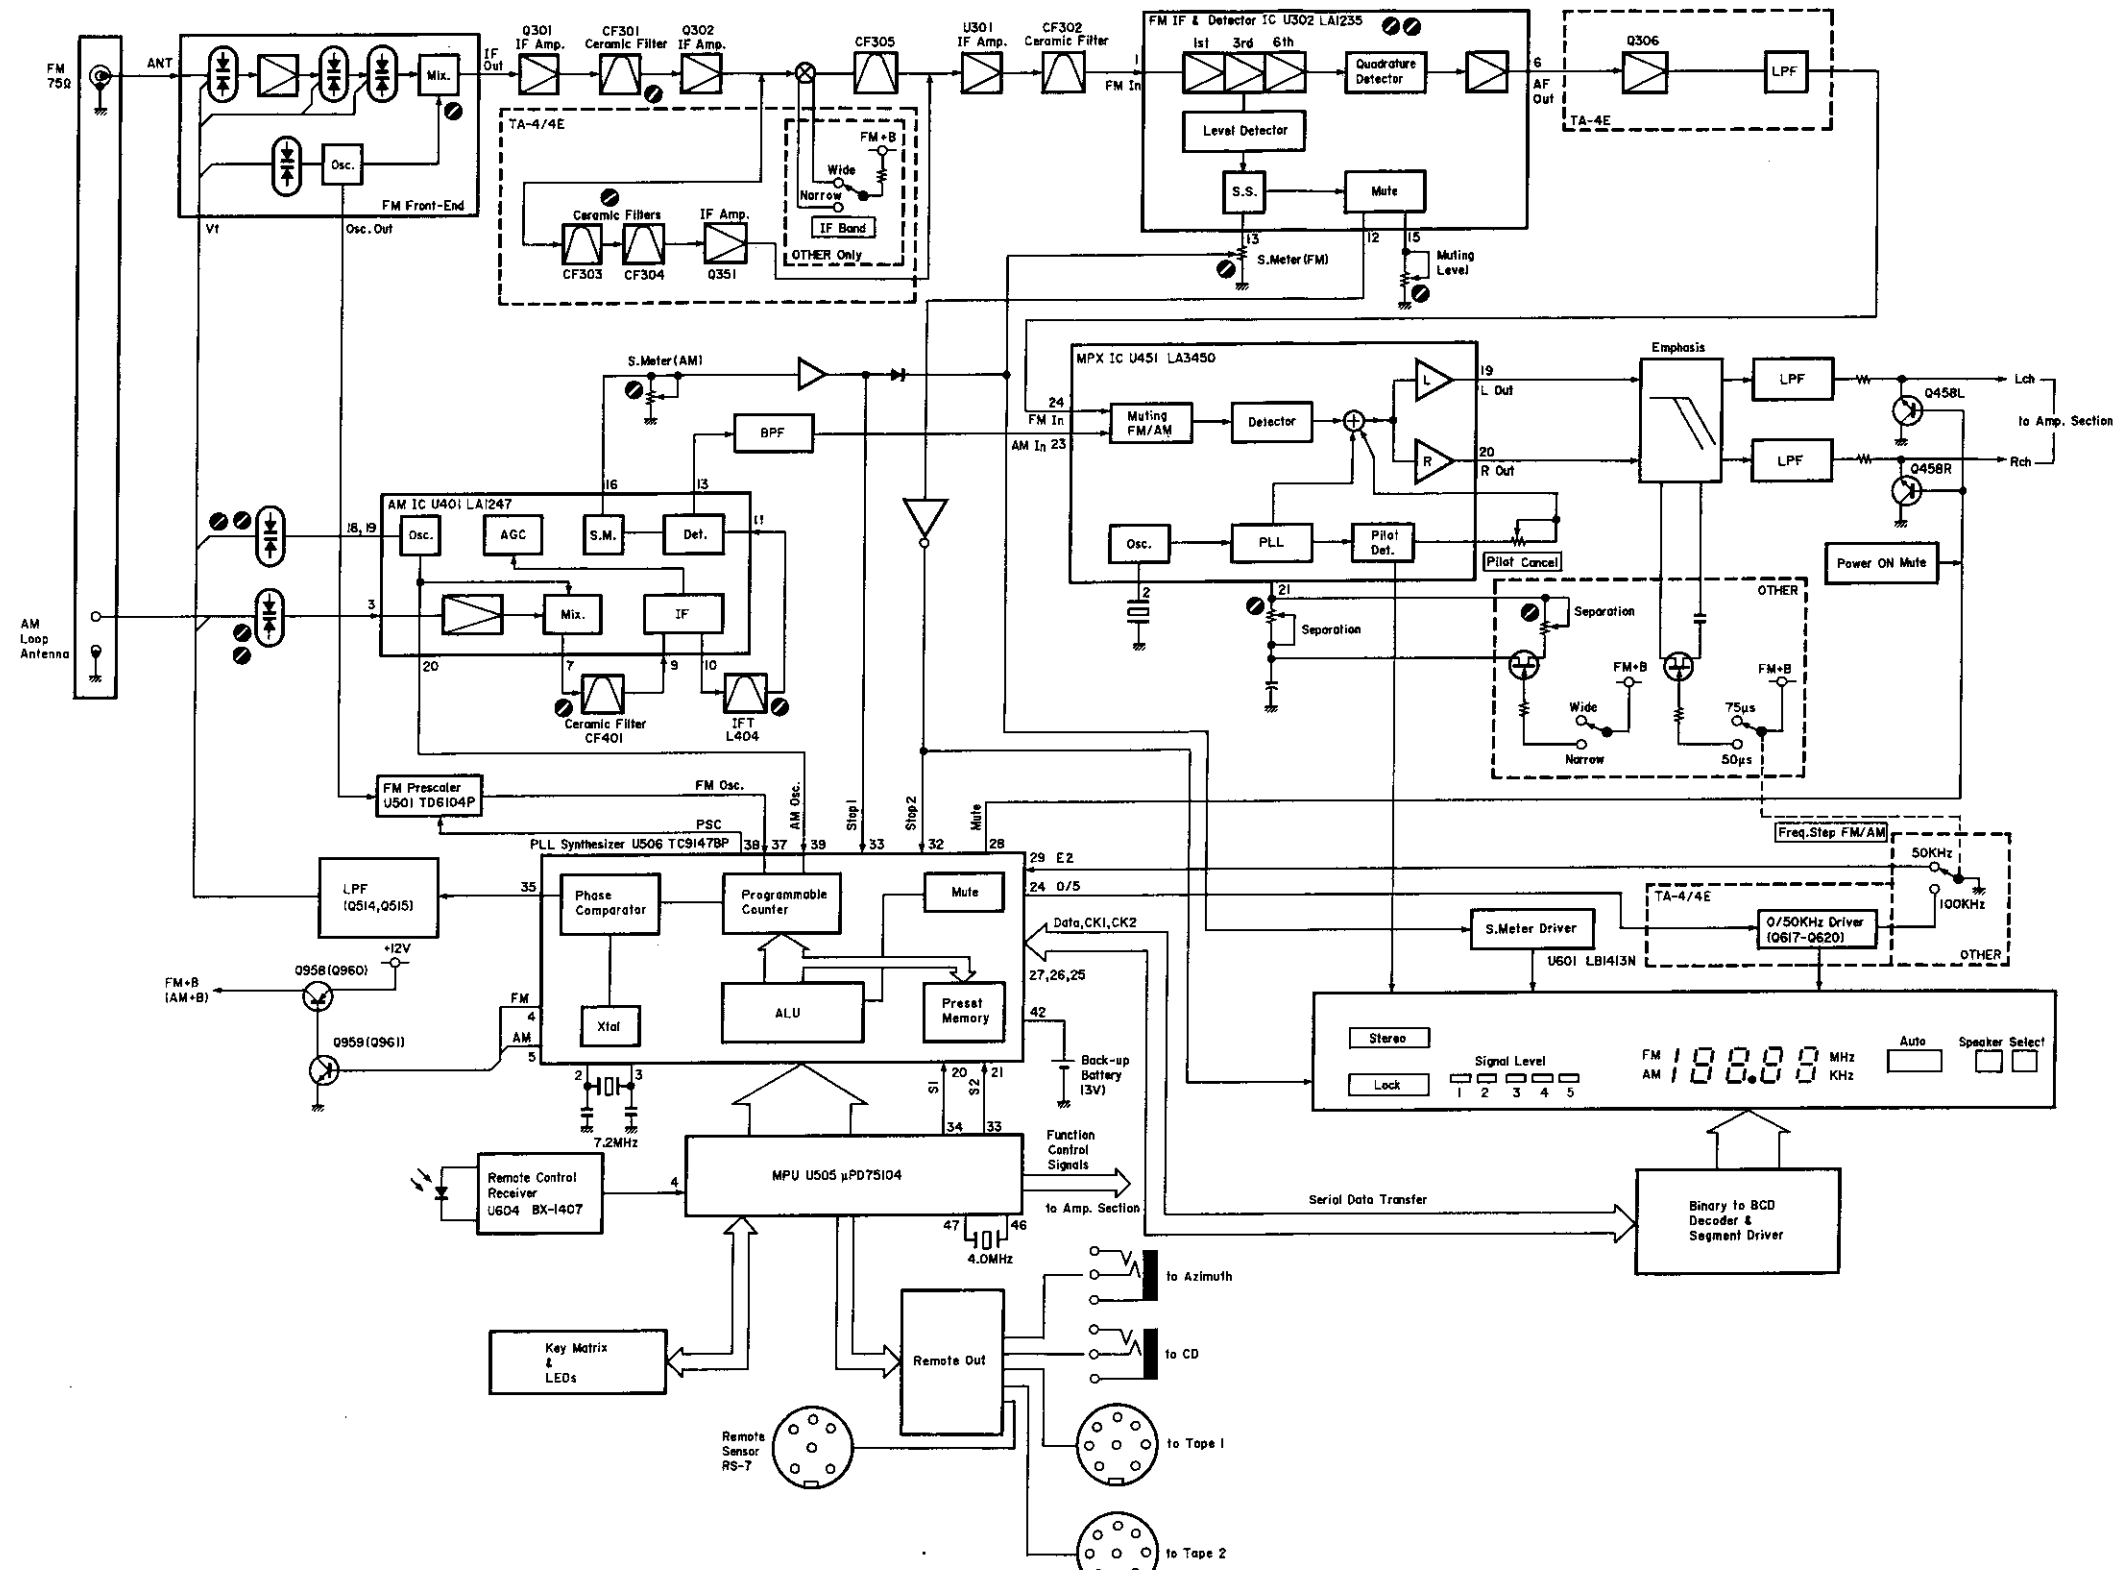


Fig. 9.1

9.2. Amplifier Section

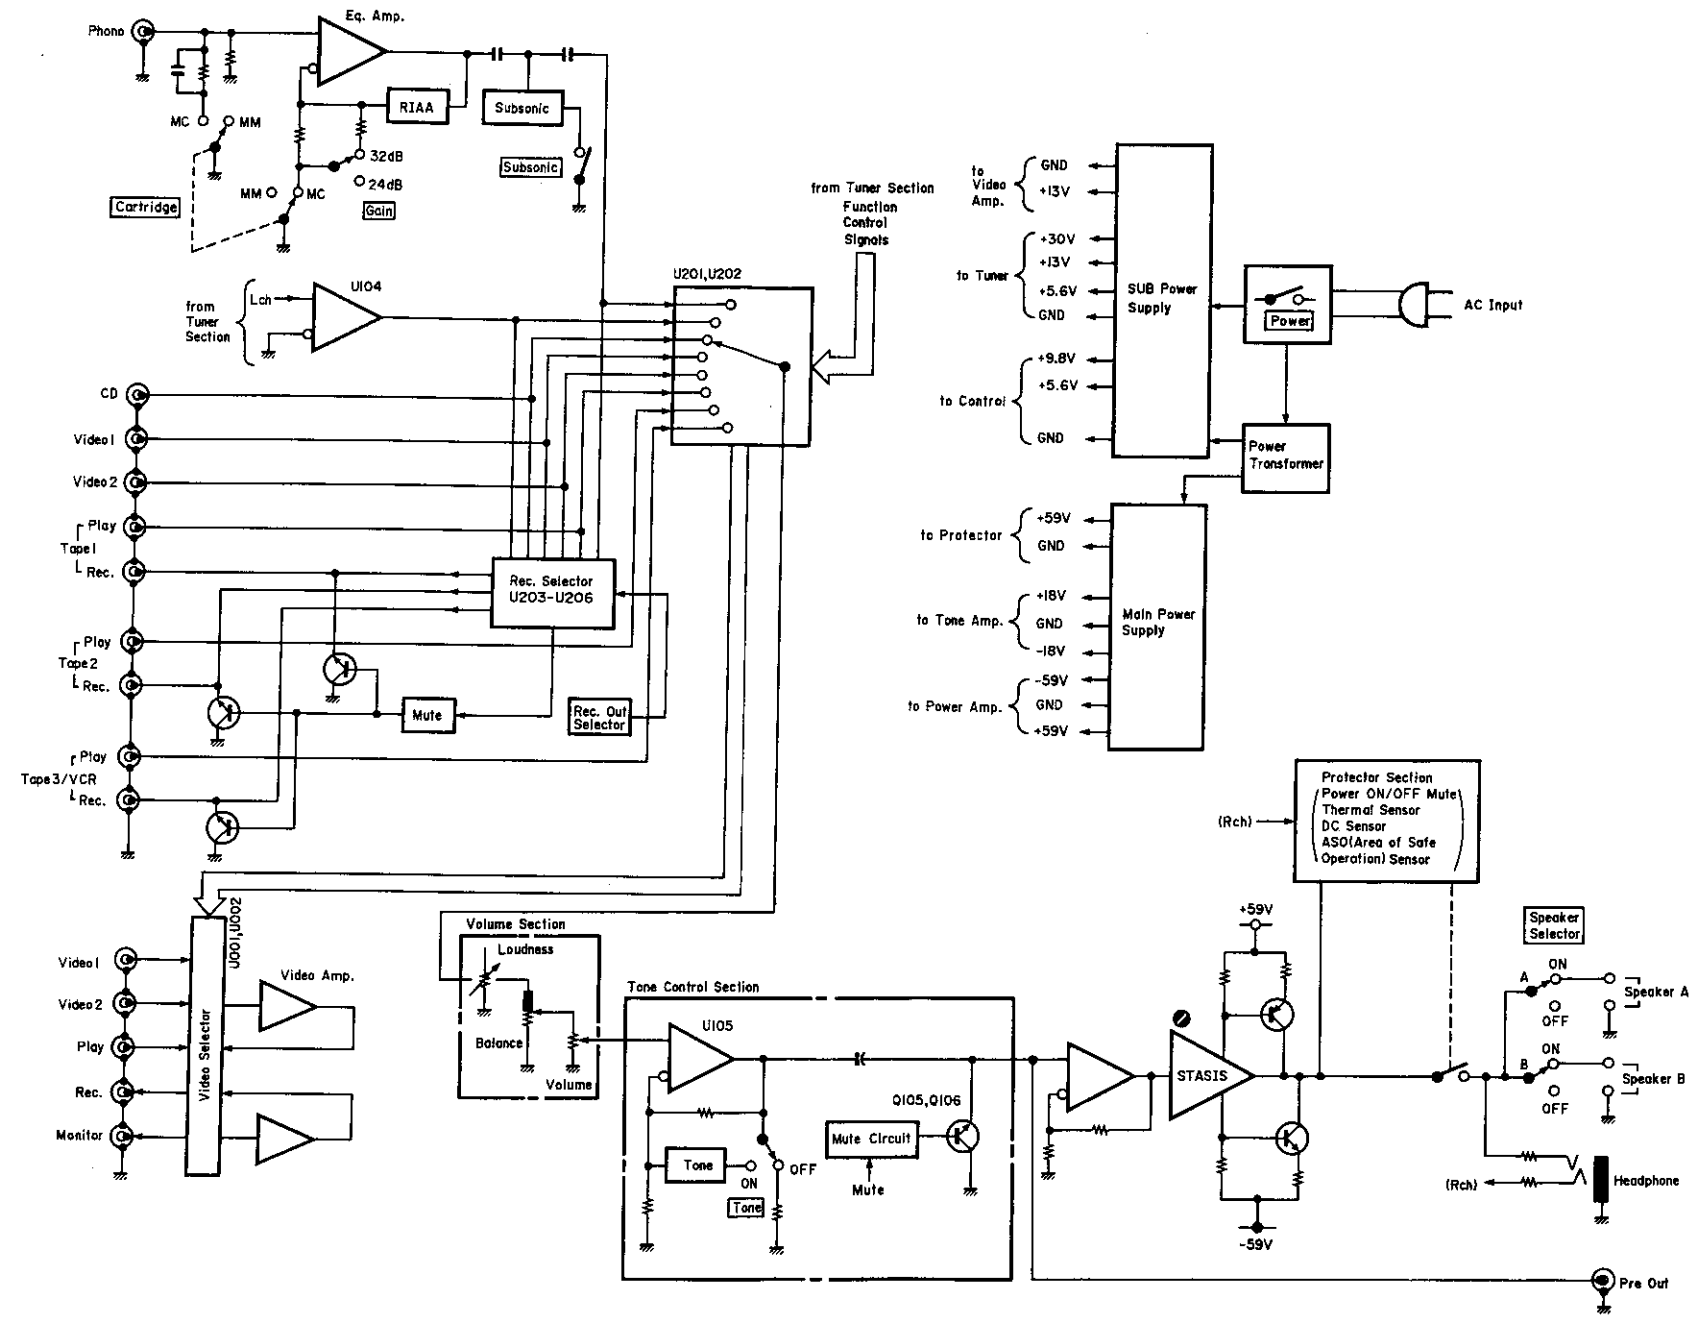


Fig. 9.2

10. SPECIFICATIONS

Power Amplifier Section

Note: Unless noted otherwise, specifications are in accordance with IHF-A-202 measured from any high-level input (CD/VIDEO/TAPE) to the speaker output.

Continuous Average Output Power	100 watts per channel into 8 ohms, both channels driven, 20–20,000 Hz, at no greater than 0.1% THD
Dynamic Output Power	132 watts per channel into 8 ohms 167 watts per channel into 4 ohms
Power Bandwidth	5–60,000 Hz 5–30,000 Hz (TA-4E)
Frequency Response	20–20,000 Hz; +0, –0.5 dB 20–20,000 Hz; +0, –1 dB (TA-4E) 5–85,000 Hz; +0, –3 dB 5–45,000 Hz; +0, –3 dB (TA-4E)
Signal to Noise Ratio (A-WTD, Input Shorted)	Better than 100 dB re Rated Power Better than 83 dB (IHF-A-202)
Total Harmonic Distortion (8 ohms, Rated Power, 20 Hz–20 kHz)	Less than 0.1%
Headphone Rated Output (40 ohms)	234 mW
Output Current Capability	28 A peak per channel

Preamplifier Section

Note: Unless noted otherwise, specifications are in accordance with IHF-A-202. Except for Sensitivity, S/N, Tone Control and Loudness characteristics (which are measured to the speaker outputs), measurements are made from the specified input to Rec. Out.

Sensitivity (for rated output)

Phono MC	60/160 μ V
(Gain: 32/24 dB)	
Phono MM	2.5 mV
CD/Tape/Video	150 mV
Main In	1.0 V

Sensitivity (for 1-watt output, IHF-A-202)

Phono MC	6.0/16 μ V
(Gain: 32/24 dB)	
Phono MM	0.25 mV
CD/Tape/Video	15 mV
Main In	100 mV

Input Impedance

Phono MC	100 ohms
Phono MM	47 kohms
CD/Tape/Video	20 kohms
Main In	15 kohms

Maximum Input Level (1 kHz)

Phono MC	4.0/10 mV
(Gain: 32/24 dB)	
Phono MM	180 mV

Pre Output Level/Impedance . . . 1.0 V/1 kohms

Record Output Level/Impedance . . . 150 mV/1.5 kohms

Total Harmonic Distortion (1 kHz, to Rec. Out, at 1 V)

Phono MC	Less than 0.007% (either gain)
Phono MM	Less than 0.005%

RIAA Deviation

Phono MC	30–20,000 Hz \pm 0.5 dB
Phono MM	30–20,000 Hz \pm 0.5 dB

Signal to Noise Ratio (to speaker output, IHF-A-202)

Phono MC	Better than 70 dB (either gain) Better than 68 dB (either gain) (TA-4E)
Phono MM	Better than 78 dB Better than 76 dB (TA-4E)

Tone Controls

Bass 20 Hz, ± 10 dB
Treble 20 kHz, ± 10 dB
Variable Loudness 20 Hz, +20 dB; 20 kHz, +6 dB
(re maximum attenuation:
-40 dB at 1 kHz)
Subsonic Filter (Phono only) . . Cutoff Frequency 20 Hz, -12 dB/octave

Tuner Section

(1) TA-4 (Other) (See Note) & TA-4A

Note: Selector switch settings for Other Model

Frequency Step FM/AM: 100 kHz/10 kHz, De-emphasis: 75 μ s, IF Band: Wide

[FM Section]

Note: All RF levels in microvolts given re 300-ohm antenna input.

Modulation: Mono 100%, Stereo Pilot 9%, Stereo Audio Signal 91%.

All measurements made at Rec. Out Jack.

Frequency Range 87.5-108.0 MHz in 100 kHz steps

IHF Usable Sensitivity 11.0 dBf/1.9 μ V

(Mono)

50-dB Quieting Sensitivity

Mono 14.7 dBf/3.0 μ V

Stereo 37.5 dBf/41.1 μ V

Signal to Noise Ratio at 65 dBf

Mono Better than 82 dB

Stereo Better than 75 dB

Muting Threshold 30 dBf/17.3 μ V

Frequency Response 20-15,000 Hz ± 1 dB

Total Harmonic Distortion (1 kHz)

Mono Less than 0.07%

Stereo Less than 0.07%

Capture Ratio 2.0 dB

Alternate Channel Selectivity . . 65 dB (± 400 kHz)

Stereo Separation at 1 kHz Better than 50 dB

Spurious Response Rejection . . . Better than 90 dB

Image Rejection Better than 75 dB

IF Rejection Better than 80 dB

AM Suppression Better than 60 dB

[AM Section]

Note: Modulation - 400 Hz, 30%

Frequency Range 520-1,710 kHz in 10 kHz steps

Sensitivity 53 dB μ /m

Signal to Noise Ratio at 90 Better than 52 dB
dB μ /m

Total Harmonic Distortion Less than 0.5%
at 90 dB μ /m

Selectivity Better than 20 dB (± 10 kHz)

(2) TA-4 (Other) (See Note) & TA-4E

Note: Selector switch settings for Other Model

Frequency Step FM/AM: 50 kHz/9 kHz, De-emphasis: 50 μ s, IF Band: Narrow

[FM Section]

Note: All RF levels in microvolts given re 300-ohm antenna input.

Modulation: Mono 60%, Stereo Pilot 9%, Stereo Audio Signal 51%.

All measurements made at Rec. Out Jack.

Frequency Range	87.50—108.00 MHz in 50 kHz steps
IHF Usable Sensitivity (Mono)	11.0 dBf/1.9 μ V
50-dB Quieting Sensitivity	
Mono	23.0 dBf/7.7 μ V
Stereo	44.0 dBf/86.8 μ V
Signal to Noise Ratio at 65 dBf	
Mono	Better than 72 dB (TA-4E)/78 dB (TA-4 (Other))
Stereo	Better than 67 dB (TA-4E)/68 dB (TA-4 (Other))
Muting Threshold	30 dBf/17.3 μ V
Frequency Response	20—15,000 Hz \pm 1 dB
Total Harmonic Distortion (1 kHz)	
Mono	Less than 0.20%
Stereo	Less than 0.25%
Capture Ratio	2.0 dB
Alternate Channel Selectivity	70 dB (\pm 300 kHz)
Stereo Separation at 1 kHz	Better than 40 dB
Spurious Response Rejection	Better than 90 dB
Image Rejection	Better than 75 dB
IF Rejection	Better than 80 dB
AM Suppression	Better than 60 dB

[AM Section]

Note: Modulation — 400 Hz, 30%

Frequency Range	522—1,611 kHz in 9 kHz steps
Sensitivity	53 dB μ /m
Signal to Noise Ratio at 90	Better than 52 dB
dB μ /m	
Total Harmonic Distortion	Less than 0.5%
at 90 dB μ /m	
Selectivity	Better than 20 dB (\pm 9 kHz)

General

Power Source	120, 220, 240 or 110/120/220/240 V AC, 50/60 Hz (According to country of sale)
Power Consumption	425 watts max.
Convenience Outlets	Switched (2 pcs.) + Unswitched (1 pce.) (TA-4 (Other) & TA-4A) Switched (1 pce.) (TA-4E)
Dimensions	430 (W) x 125 (H) x 370 (D) mm 16-15/16 (W) x 4-15/16 (H) x 14-9/16 (D) inches
Approximate Weight	15.0 kg, 33 lbs. 1 oz.

Remote Control Unit (RM-4TA)

Principle	Infrared Pulse System
Power Supply	3 V DC (1.5 V x 2)
Dimensions	64 (W) x 18 (H) x 176 (D) mm 2-1/2 (W) x 11/16 (H) x 6-15/16 (D) inches
Approximate Weight	140 g, 5 oz. (including batteries)

- Specifications and design are subject to change for further improvement without notice.
- STASIS manufactured under license from Threshold Corporation.
- STASIS is a trademark of Threshold Corporation.