


# **SERVICE MANUAL**

## **ORION**

### **TV-1404 / 1404 SI**

**COLOR TELEVISION RECEIVER**

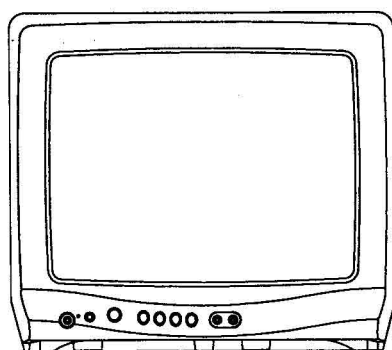

**ORIGINAL  
CHASSIS CODE A**

**Best. Nr. SM1404TV**

---

Design and specifications are subject to change without notice.

## SERVICING NOTICES ON CHECKING

### 1. KEEP THE NOTICES

As for the places which need special attentions, they are indicated with the labels or seals on the cabinet, chassis and parts. Make sure to keep the indications and notices in the operation manual.

### 2. AVOID AN ELECTRIC SHOCK

There is a high voltage part inside. Avoid an electric shock while the electric current is flowing.

### 3. USE THE DESIGNATED PARTS

The parts in this equipment have the specific characters of incombustibility and withstand voltage for safety. Therefore, the part which is replaced should be used the part which has the same character.

Especially as to the important parts for safety which is indicated in the circuit diagram or the table of parts as a  $\triangle$  mark, the designated parts must be used.

### 4. PUT PARTS AND WIRES IN THE ORIGINAL POSITION AFTER ASSEMBLING OR WIRING

There are parts which use the insulation material such as a tube or tape for safety, or which are assembled in the condition that these do not contact with the printed board. The inside wiring is designed not to get closer to the pyrogenic parts and high voltage parts. Therefore, put these parts in the original positions.

### 5. TAKE CARE TO DEAL WITH THE CATHODE-RAY TUBE

In the condition that an explosion-proof cathode-ray tube is set in this equipment, safety is secured against implosion. However, when removing it or serving from backward, it is dangerous to give a shock. Take enough care to deal with it.

### 6. AVOID AN X-RAY

Safety is secured against an X-ray by considering about the cathode-ray tube and the high voltage peripheral circuit, etc.

Therefore, when repairing the high voltage peripheral circuit, use the designated parts and make sure not modify the circuit.

Repairing except indicates causes rising of high voltage, and it emits an X-ray from the cathode-ray tube.

### 7. PERFORM A SAFETY CHECK AFTER SERVICING

Confirm that the screws, parts and wiring which were removed in order to service are put in the original positions, or whether there are the portions which are deteriorated around the serviced places serviced or not. Check the insulation between the antenna terminal or external metal and the AC cord plug blades. And be sure the safety of that.

#### (INSULATION CHECK PROCEDURE)

1. Unplug the plug from the AC outlet.
2. Remove the antenna terminal on TV and turn on the TV.
3. Insulation resistance between the cord plug terminals and the external exposure metal [Note 2] should be more than 1M ohm by using the 500V insulation resistance meter [Note 1].
4. If the insulation resistance is less than 1M ohm, the inspection repair should be required.

#### [Note 1]

If you have not the 500V insulation resistance meter, use a Tester.

#### [Note 2]

External exposure metal: Antenna terminal  
Earphone jack

## HOW TO ORDER PARTS

Please include the following informations when you order parts. (Particularly the CHASSIS CODE.)

1. MODEL NUMBER and CHASSIS CODE  
You can find it in the back of your unit.
2. PART NO. and DESCRIPTION  
You can find it in your SERVICE MANUAL.

## IMPORTANT

Inferior silicon grease can damage IC's and transistors.

When replacing an IC's or transistors, use only specified silicon grease (YG6260M).

Remove all old silicon before applying new silicon.

# CONTENTS

SERVICING NOTICES ON CHECKING .....	A1-1
HOW TO ORDER PARTS .....	A1-1
IMPORTANT .....	A1-1
CONTENTS .....	A2-1
GENERAL SPECIFICATIONS .....	A3-1-A3-5
DISASSEMBLY INSTRUCTIONS .....	B-1
SERVICE MODE LIST .....	C-1
CONFIRMATION OF HOURS USED .....	C-1
WHAN REPLACING EEPROM (MEMORY) IC .....	C-2
ELECTRICAL ADJUSTMENTS .....	D-1-D-5
BLOCK DIAGRAM .....	E-1, E-2
PRINTED CIRCUIT BOARDS .....	F-1-F-4
MAIN/CRT .....	F-1-F-4
SCHEMATIC DIAGRAMS .....	
MICON/TUNER .....	G-1, G-2
CHROMA/SIF/VIF/21PIN .....	G-3, G-4
SOUND AMP/FRONT AV .....	G-5, G-6
DEFLECTION/CRT .....	G-7, G-8
POWER .....	G-9, G-10
WAVEFORMS .....	H-1-H-3
MECHANICAL EXPLODED VIEW .....	I-1
MECHANICAL REPLACEMENT PARTS LIST .....	J1-1
ELECTRICAL REPLACEMENT PARTS LIST .....	J2-1, J2-2

## GENERAL SPECIFICATIONS

G-1	TV System	CRT	CRT Size / Visual Size	14 inch / 335.4mmV
			CRT Type	Normal
			Deflection	90 degree
			Magnetic Field BV/BH	+0.45G/0.18G
			Color System	PAL
			Speaker	1Speaker
			Position	Bottom
			Size	3 Inch
			Impedance	8 ohm
			Sound Output	MAX 1.0 W 10%(Typical) 0.8 W
			PAL60Hz	Yes
G-2	Tuning System	Broadcasting System	CCIR System B/G	
		Tuner and Receive CH	1Tuner	
			Destination	W/ Hyper
			Tuning System	F-Synth
			Input Impedance	VHF/UHF 75 ohm
			CH Coverage	E2 - E4, X - Z+2, S1 - S10, E5 - E12, S11 - S41, E21 - E69
		Intermediate Frequency	Picture(FP)	38.90MHz
			Sound(FS)	33.4MHz
			FP-FS	5.5MHz
			Auto Tuning Method	C.C.I.R CH PLAN
			Preset CH	80
	Stereo/Dual TV Sound	No		
	Tuner Sound Muting	Yes		
G-3	Power	Power Source	AC	230V AC 50Hz
			DC	-
		Power Consumption	at AC	44 W at AC 230 V 50 Hz
			Stand by (at AC) Per Year	7 W at AC 230 V 50 Hz -- kWh/Year
		Protector	Power Fuse	Yes
			Safety Circuit	Yes
	IC Protector	No		
G-4	Regulation	Safety	CE	
		Radiation	CE	
		X-Radiation	PTB	
G-5	Temperature	Operation	+5°C ~ +40°C	
		Storage	-20°C ~ +60°C	
G-6	Operating Humidity		Less than 80% RH	

## GENERAL SPECIFICATIONS

G-7	On Screen Display	Menu	Menu Type	Yes		
			Character	Yes		
			Picture	Yes		
			Contrast	Yes		
			Brightness	Yes		
			Color	Yes		
			Tint	No		
			Sharpness	Yes		
			Audio	No		
			Bass	No		
			Treble	No		
			Balance	No		
			BBE On/Off	No		
			Stable Sound On/Off	No		
			CH Tuning	Yes		
			Manual	Yes		
			Auto	Yes		
			CH Allocation	Yes		
			Language	Yes		
			Clock Set	No		
			On/Off Timer Set	No		
			Pin Code Registration	No		
			Nicam Auto Off	No		
			Colour System	No		
			Sound System	No		
			AV2 Output Source	No		
			Control Level	Yes		
			Volume	Yes		
			Brightness	Yes		
			Contrast	Yes		
			Color	Yes		
			Tint (NTSC Only)	No		
			Sharpness	Yes		
Tuning	Yes					
Bass	No					
Treble	No					
Balance	No					
Back Light	No					
Nicam ST	No					
Tone 1/2	No					
Pin Code	No					
AV	Yes					
Skip	Yes					
Channel	Yes					
Hotel Lock	No					
Sleep Timer	Yes					
Sound Mute	Yes					
G-8	OSD Language		English	French	Spanish	
			German	Italian		
G-9	Clock and Timer	Sleep Timer	Max Time	120 Min		
			Step	10 Min		
		On/Off Timer	Program(On Timer / Off Timer)	No		
		Wake Up Timer		No		
		Timer Back-up (at Power Off Mode)	more than	--	Min Sec	

## GENERAL SPECIFICATIONS

G-10	Remote Control	Unit	RC-GE	
		Glow in Dark Remocon	No	
		Format	NEC	
		Custom Code	80-63 h	
		Power Source	Voltage(D.C)	3V
			UM size x pcs	UM-4 x 2 pcs
		Total Keys	31 Keys	
		Keys	Power(Stand By)	Yes
			1	Yes
			2	Yes
			3	Yes
			4	Yes
			5	Yes
			6	Yes
			7	Yes
			8	Yes
			9	Yes
			0 / AV	Yes
			CH Up	No
			CH Down	No
			Volume Up / +	Yes
			Volume Down / -	Yes
			Quick View	No
			Sleep	Yes
			Info(CH Call)	Yes
			Normal	No
			Menu	Yes
			Enter	Yes
			Mute	Yes
			Fine Tuning +	No
		Fine Tuning -	No	
		Tone 1/2	No	
		TTEXT Keys	TEXT / MIX / TV	Yes
			CH Up / Page Up	Yes
			CH Down / Page Down	Yes
Red	Yes			
Green	Yes			
Yellow / Fine Tuning -	Yes			
Cyan / Fine Tuning +	Yes			
F/T/B(Expand) / Normal	Yes			
Reveal / Skip	Yes			
Display Cancel	Yes			
Reset	Yes			
Reset / Tone 1/2	No			
Hold / Status	Yes			
Sub Page / Quick View	Yes			

## GENERAL SPECIFICATIONS

G-11	Features	Auto Degauss	Yes	
		Auto Shut Off	Yes	
		Canal+	No	
		CATV	Yes	
		Anti-theft	No	
		Memory(Last CH)	Yes	
		Memory(Last Volume)	Yes	
		BBE	No	
		Auto Search	Yes	
		CH Allocation	Yes	
		Channel Lock	No	
		Just Clock Function	No	
		Game Position	No	
		CH Label	No	
		VM Circuit	No	
		Full OSD	No	
		Unitext	Yes	
		Fastext	No	
		Top Text	No	
		Premiere	No	
		Comb Filter	No	
			Lines	
		Auto CH Memory	Yes	
		Auto Set Up	No	
		Stable Sound	No	
		FBT Leak Test Protect	No	
Hotel Lock	No			
Power On Memory	Yes			
G-12	Accessories	Owner's Manual	Language w/Guarantee Card	German Yes
		Remote Control Unit		Yes
		Rod Antenna		No
			Poles	-
			Terminal	-
		Loop Antenna		No
			Terminal	-
		U/V Mixer		No
		DC Car Cord (Center+)		No
		Guarantee Card		No
		Warning Sheet		No
		Circuit Diagram		No
		Antenna Change Plug		No
		Service Facility List		No
		Important Safeguard		No
		Dew/AHC Caution Sheet		No
		AC Plug Adapter		No
		Quick Set-up Sheet		No
		Battery		Yes
			UM size x pcs	UM-4 x 2 pcs
			OEM Brand	No
		AC Cord		No
AV Cord (2Pin-1Pin)		No		
Registration Card		No		
300 ohm to 75 ohm Antenna Adapter		No		

## GENERAL SPECIFICATIONS

G-13	Interface	Switch	Front	Power	No	
				System Select	No	
				Main Power SW	Yes	
				Sub Power	No	
				Channel Up	Yes	
				Channel Down	Yes	
				Volume Up	Yes	
		Rear	Volume Down	Yes		
			AC/DC	No		
			TV/CATV Selector	No		
			Degauss	No		
			Main Power SW	No		
			Indicator	Power	No	
				Stand-by	Yes	
		On Timer		No		
		Terminals	Front	Video Input	RCA x1	
				Audio Input	RCA x1	
				Other Terminal	Ear Phone	
			Rear	Video Input(Rear1)	No	
				Video Input(Rear2)	No	
				Audio Input(Rear1)	No	
				Audio Input(Rear2)	No	
				Video Output	No	
Audio Output	No					
Euro Scart(21Pin)	Yes ( x1 )					
Component Input	No					
Diversity	No					
Ext Speaker	No					
DC Jack 12V(Center +)	No					
VHF/UHF Antenna Input	Din Type					
AC Outlet	No					
G-14	Set Size	Approx. W x D x H (mm)		362 x 360 x 320.5		
G-15	Weight	Net (Approx.)		9.5 kg ( --- lbs)		
		Gross (Approx.)		11.5kg ( ---lbs)		
G-16	Carton	Master Carton	Content	---	Sets	
			Material	--	/-	
			Dimensions W x D x H(mm)	--	x --	x --
			Description of Origin	No		
			Gift Box	Yes		
		Gift Box	Material	Double/Full Color		
			Dimensions W x D x H(mm)	440 x 408 x 380		
			Design	As per Buyer's		
		Drop Test	Description of Origin	No		
			Height (cm)	62		
		Container Stuffing		866 Sets/40' container		
G-17	Material	Cabinet	Cabinet Front	PS 94V0 DECABROM		
			Cabinet Rear	PS 94V0 DECABROM		
		PCB	Non-Halogen Demand	No		
			Eyelet Demand	No		
G-18	Environment	Pb Free	Lead-free Solder	No		
			Other	No		
		Cd Free	No			



# DISASSEMBLY INSTRUCTIONS

## 1. REMOVAL OF ANODE CAP

Read the following **NOTED** items before starting work.

- \* After turning the power off there might still be a potential voltage that is very dangerous. When removing the Anode Cap, make sure to discharge the Anode Cap's potential voltage.
- \* Do not use pliers to loosen or tighten the Anode Cap terminal, this may cause the spring to be damaged.

### REMOVAL

1. Follow the steps as follows to discharge the Anode Cap. (Refer to Fig. 1-1.)  
Connect one end of an Alligator Clip to the metal part of a flat-blade screwdriver and the other end to ground. While holding the plastic part of the insulated screwdriver, touch the support of the Anode with the tip of the screwdriver. A cracking noise will be heard as the voltage is discharged.

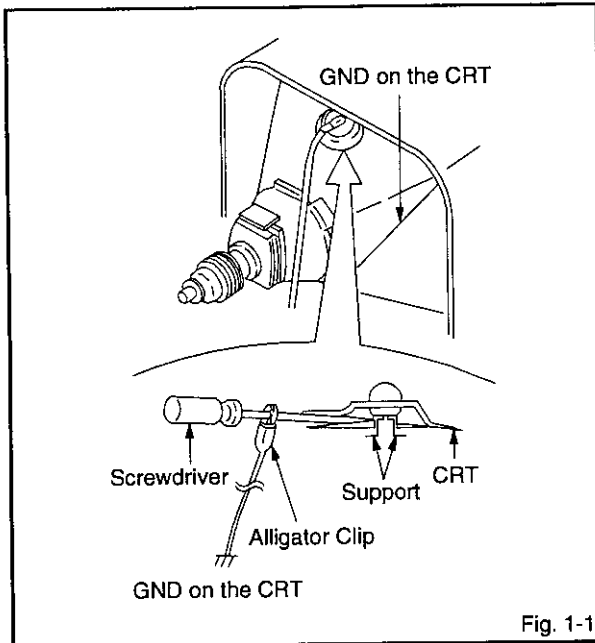


Fig. 1-1

2. Flip up the sides of the Rubber Cap in the direction of the arrow and remove one side of the support. (Refer to Fig. 1-2.)

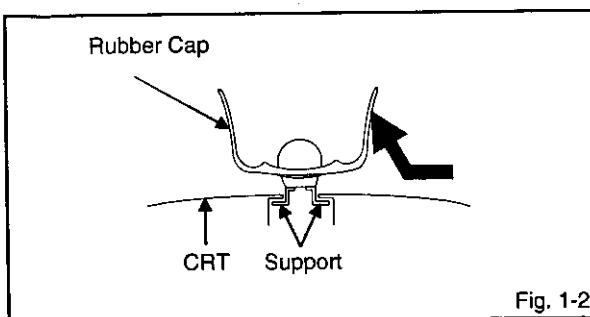


Fig. 1-2

3. After one side is removed, pull in the opposite direction to remove the other.

### NOTE

Take care not to damage the Rubber Cap.

### INSTALLATION

1. Clean the spot where the cap was located with a small amount of alcohol. (Refer to Fig. 1-3.)

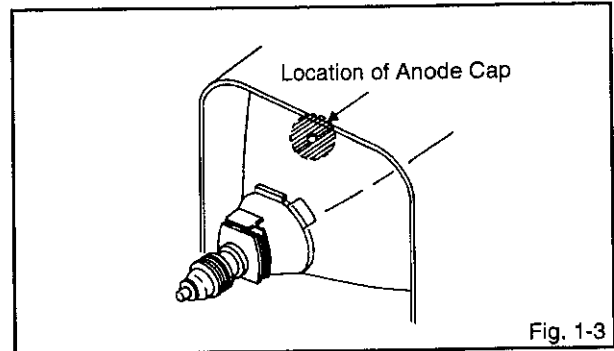


Fig. 1-3

### NOTE

Confirm that there is no dirt, dust, etc. at the spot where the cap was located.

2. Arrange the wire of the Anode Cap and make sure the wire is not twisted.
3. Turn over the Rubber Cap. (Refer to Fig. 1-4.)

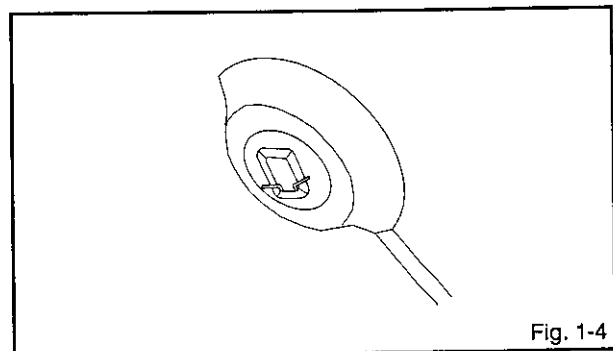


Fig. 1-4

4. Insert one end of the Anode Support into the anode button, then the other as shown in Fig. 1-5.

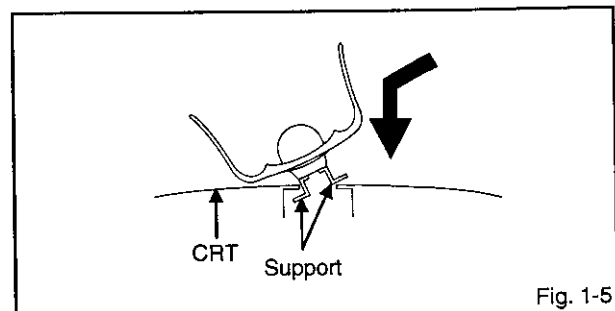


Fig. 1-5

5. Confirm that the Support is securely connected.
6. Put on the Rubber Cap without moving any parts.

## SERVICE MODE LIST

This unit provided with the following SERVICE MODES so you can repair, examine and adjust easily. To enter the Service Mode, press both set key and remote control key for more than 1 second.

Set Key	Remocon Key	Operations
VOL. (-) MIN	0	Releasing of V-CHIP PASSWORD.
VOL. (-) MIN	1	Initialization of the factory. NOTE: Do not use this for the normal servicing. If you set a factory initialization, the memories are reser such as the clock setting, the cheannel setting, the POWER ON total hours, and PLAY/REC total hours.
VOL. (-) MIN	6	POWER ON total hours is displayed on the screen. Refer to the "CONFIRMATION OF HOURS USED".  Can be checked of the INITIAL DATA of MEMORY IC. Refer to the "WHEN REPLACING EEPROM (MEMORY) IC".
VOL. (-) MIN	8	Writing of EEPROM initial data. NOTE: Do not use this for the normal servicing.
VOL. (-) MIN	9	Display of the Adjustment MENU on the screen. Refer to the "ELECTRICAL ADJUSTMENT" (On-Screen Display Adjustment).

### CONFIRMATION OF HOURS USED

POWER ON total hours can be checked on the screen. Total hours are displayed in 16 system of notation.

**NOTE: If you set a factory initialization, the total hours is reset to "0".**

1. Set the VOLUME to minimum.
2. Press both VOL. DOWN button on the set and Channel button (6) on the remote control for more than 2 second.
3. After the confirmation of using hours, turn off the power.

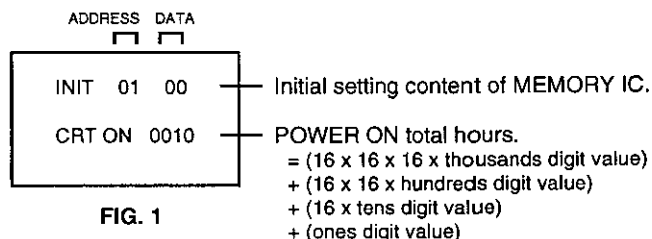


FIG. 1


## WHEN REPLACING EEPROM (MEMORY) IC

If a service repair is undertaken where it has been required to change the MEMORY IC, the following steps should be taken to ensure correct data settings while making reference to TABLE 1.

INI	+0	+1	+2	+3	+4	+5	+6	+7	+8	+9	+A	+B	+C	+D	+E	+F
00	---	00	00	00	00	39	94	41	00	41	00	01	03	00	06	00
10	10	00	80	80	80	00	00									

**Table 1**

1. Enter DATA SET mode by setting VOLUME to minimum.
2. While holding down VOLUME button on front cabinet, press key 6 on remote control for more than 2 seconds. ADDRESS and DATA should appear as FIG 1.

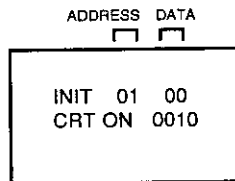

**Fig. 1**

3. ADDRESS is now selected and should "blink". Using the VOL. +/- button on the remote, step through the ADDRESS until required ADDRESS to be changed is reached.
4. Press ENTER to select DATA. When DATA is selected, it will "blink".
5. Again, step through the DATA using VOL. +/- button until required DATA value has been selected.
6. Pressing ENTER will take you back to ADDRESS for further selection if necessary.
7. Repeat steps 3 to 6 until all data has been checked.
8. When satisfied correct DATA has been entered, turn POWER off (return to STANDBY MODE) to finish DATA input.

**After the data input, set to the initializing of shipping.**

9. Turn POWER on.
10. While holding down VOLUME button on front cabinet, press key 1 on remote control for more than 2 seconds.
11. After the finishing of the initializing of shipping, the unit will turn off automatically.

The unit will now have the correct DATA for the new MEMORY IC.

# ELECTRICAL ADJUSTMENTS

## 1. BEFORE MAKING ELECTRICAL ADJUSTMENTS

Read and perform these adjustments when repairing the circuits or replacing electrical parts or PCB assemblies.

### CAUTION

- Use an isolation transformer when performing any service on this chassis.
- Before removing the anode cap, discharge electricity because it contains high voltage.
- When removing a PCB or related component, after unfastening or changing a wire, be sure to put the wire back in its original position.
- When you exchange IC and Transistor for a heat sink, apply the silicon grease (**YG6260M**) on the contact section of the heat sink. Before applying new silicon grease, remove all the old silicon grease. (Old grease may cause damages to the IC and Transistor.)

Prepare the following measurement tools for electrical adjustments.

1. Oscilloscope
2. Digital Voltmeter
3. Pattern Generator

### On-Screen Display Adjustment

1. In the condition of NO indication on the screen. Press the VOL. DOWN button on the set and the Channel button (9) on the remote control for more than 1 second to appear the adjustment mode on the screen as shown in Fig. 1-1.

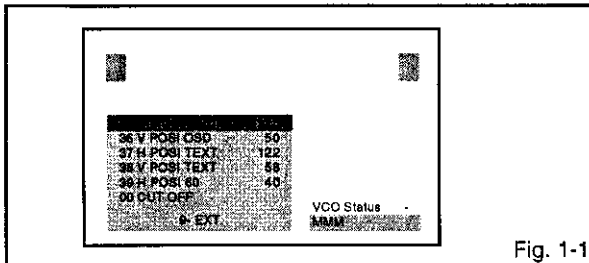


Fig. 1-1

2. Use the Channel UP/DOWN button or Channel button (0-9) on the remote control to select the options shown in Fig. 1-2.
3. Press the MENU button on the remote control to end the adjustments.

NO.	FUNCTION	NO.	FUNCTION
00	CUT OFF	20	TINT
01	RF AGC	21	SHARP
02	AGC GAIN	22	CONT CENT
03	R DRIVE	23	CONT MAX
04	R CUT OFF	24	CONT MIN
05	G DRIVE	25	COLOR CENT
06	G CUT OFF	26	COLOR MAX
07	B DRIVE	27	COLOR MIN
08	H POSI 50	28	M R CUT OFF
09	V POSI 50	29	M G CUT OFF
10	V POSI 60	30	M B CUT OFF
11	V SIZE 50	31	CVBS OUT
12	V SIZE 60	32	APR THR
13	VCO COARSE	33	BELL
14	VCO FINE	34	BANDPASS
15	-	35	H POSI OSD
16	-	36	V POSI OSD
17	BRIGHT CENT	37	H POSI TXT
18	BRIGHT MAX	38	V POSI TXT
19	BRIGHT MIN	39	H POSI 60

Fig. 1-2

## 2. BASIC ADJUSTMENTS

### 2-1: AGC VOLTAGE

1. Place the set with Aging Test for more than 15 minutes.
2. Receive the UHF (63 ± 1dB).
3. Connect the digital voltmeter between the TP002 and the (GND) of TU001.
4. Activate the adjustment mode display of Fig. 1-1 and press the channel button (01) on the remote control to select "RF AGC".
5. Press the VOL. UP/DOWN button on the remote control until the digital voltmeter is 2.50 ± 0.05V.

### 2-2: CUT OFF

1. Place the set with Aging Test for more than 15 minutes.
2. Using the remote control, set the brightness and contrast to normal position.
3. Activate the adjustment mode display of Fig. 1-1 and press the channel button (00) on the remote control to select "CUT OFF".
4. Adjust the Screen Volume until a dim raster is obtained.

### 2-3: WHITE BALANCE

NOTE: Adjust after performing CUT OFF adjustment.

1. Place the set with Aging Test for more than 10 minutes.
2. Receive the white 100% signal from the Pattern Generator.
3. Using the remote control, set the brightness and contrast to normal position.
4. Activate the adjustment mode display of Fig. 1-1 and press the channel button (28) on the remote control to select "M R CUT OFF".
5. Using the VOL. UP/DOWN button on the remote control, adjust the M R CUT OFF.
6. Press the CH. UP/DOWN button on the remote control to select the "R DRIVE", "G DRIVE", or "M G CUT OFF".
7. Using the VOL. UP/DOWN button on the remote control, adjust the R DRIVE, G DRIVE, M G CUT OFF or M R CUT OFF.
8. Perform the above adjustments 6 and 7 until the white color is looked like a white.

### 2-4: FOCUS

1. Receive the monoscope pattern.
2. Turn the Focus Volume fully counterclockwise once.
3. Adjust the Focus Volume until picture is distinct.

### 2-5: CONSTANT VOLTAGE

1. Place the set with Aging Test for more than 15 minutes.
2. Using the remote control, set the brightness and contrast to normal position.
3. Connect the digital voltmeter to TP501 (W812).
4. Set condition is AV MODE without signal.
5. Adjust the VR501 until the digital voltmeter is 135 ± 0.5V.

### 2-6: VERTICAL LINEARITY

1. Receive the monoscope pattern.
2. Using the remote control, set the brightness and contrast to normal position.
3. Adjust the VR420 until the SHIFT quantity of the OVER SCAN on upside and downside becomes minimum.

## ELECTRICAL ADJUSTMENTS

### 2-7: HORIZONTAL POSITION

1. Receive the monoscope pattern.
2. Using the remote control, set the brightness and contrast to normal position.
3. Activate the adjustment mode display of **Fig. 1-1** and press the channel button **(08)** on the remote control to select "H POSI(50)".
4. Press the VOL. UP/DOWN button on the remote control until the SHIFT quantity of the OVER SCAN on right and left becomes minimum.
5. Receive the monoscope pattern of NTSC.
6. Using the remote control, set the brightness and contrast to normal position.
7. Activate the adjustment mode display of **Fig. 1-1** and press the channel button **(39)** on the remote control to select "H POSI(60)".
8. Press the VOL. UP/DOWN button on the remote control until the SHIFT quantity of the OVER SCAN on right and left becomes minimum.

### 2-8: VERTICAL SIZE

1. Receive the monoscope pattern.
2. Using the remote control, set the brightness and contrast to normal position.
3. Activate the adjustment mode display of **Fig. 1-1** and press the channel button **(11)** on the remote control to select "V SIZE(50)".
4. Press the VOL. UP/DOWN button on the remote control until the SHIFT quantity of the OVER SCAN on upside and downside becomes  $8 \pm 3\%$ .
5. Receive the monoscope pattern of NTSC.
6. Using the remote control, set the brightness and contrast to normal position.
7. Activate the adjustment mode display of **Fig. 1-1** and press the channel button **(12)** on the remote control to select "V SIZE(60)".
8. Press the VOL. UP/DOWN button on the remote control until the SHIFT quantity of the OVER SCAN on upside and downside becomes  $8 \pm 3\%$ .

### 2-9: VERTICAL POSITION


1. Receive the monoscope pattern.
2. Using the remote control, set the brightness and contrast to normal position.
3. Activate the adjustment mode display of **Fig. 1-1** and press the channel button **(09)** on the remote control to select "V POSI(50)".
4. Check the step No. V. POSI is "8".
5. Adjust the **VR401** until the horizontal line becomes fit to notch of the shadow mask.

### 2-10: BRIGHT CENT

1. Place the set with Aging Test for more than 15 minutes.
2. Receive the monoscope pattern. (RF Input)
3. Using the remote control, set the brightness and contrast to normal position.
4. Activate the adjustment mode display of **Fig. 1-1** and press the channel button **(17)** on the remote control to select "BRIGHT CENT".
5. Press the VOL. UP/DOWN button on the remote control until the GLAY SCALE 0% section become to be half black.
6. Receive the monoscope pattern. (Audio Video Input)
7. Press the AV button on the remote control to set to the AV mode. Then perform the above adjustments 3-5.

### 2-11: COLOR CENT

1. Receive the color bar pattern. (RF Input)
2. Connect the oscilloscope to **TP023**.
3. Using the remote control, set the brightness, contrast and color to normal position.
4. Activate the adjustment mode display of **Fig. 1-1** and press the channel button **(25)** on the remote control to select "COLOR CENT".
5. Adjust the VOLTS RANGE VARIABLE knob of the oscilloscope until the range between white 100% and 0% is set to 5 scales on the screen of the oscilloscope.
6. Press the VOL. UP/DOWN button on the remote control until the red color level is adjusted to  $85 \pm 10\%$  for the white level. (**Refer to Fig. 2-2**)
7. Receive the color bar pattern. (Audio Video Input)
8. Press the AV button on the remote control to set the AV mode. Then perform the above adjustments 2-6.

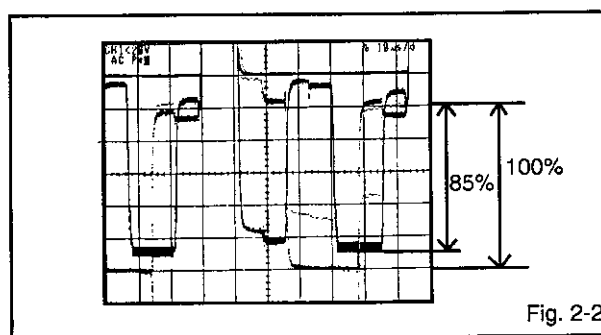

### 2-12: VCO COARSE/VCO FINE

1. Connect the oscillator (38.9MHz) to between the **TP003** and the **(GND)** of **TU001**.
2. Activate the adjustment mode display of **Fig. 1-1** and press the channel button **(13)** on the remote control to select "VCO COARSE".
3. Press the VOL. UP/DOWN button on the remote control until the "+" appear on the screen.
4. Press the CH UP button once to set to "VCO FINE" mode.
5. Press the VOL. UP/DOWN button on the remote control to select the 4 step down point from the upper limit on the "+".  
(Example: In case of the "+" point 30~41, select 37.)

### 2-13: CONT CENT

1. Place the set with Aging Test for more than 15 minutes.
2. Activate the adjustment mode display of **Fig. 1-1** and press the channel button **(22)** on the remote control to select "CONT CENT".
3. Press the VOL. UP/DOWN button on the remote control until the cont cent step No. becomes "33".
4. Press the AV button on the remote control to set the AV mode.
5. Activate the adjustment mode display of **Fig. 1-1** and press the channel button **(22)** on the remote control to select "CONT CENT".
6. Press the VOL. UP/DOWN button on the remote control until the cont cent step No. becomes "32"

## ELECTRICAL ADJUSTMENTS

### 2-14: Confirmation of Fixed Value (Step No.)

Please check if the fixed values of the each adjustment items are set correctly referring below.

NO.	FUNCTION	RF	AV
02	AGC GAIN	00	---
04	R CUTOFF	00	---
06	G CUTOFF	00	---
07	B DRIVE	45	---
09	V POSI (50)	08	---
10	V POSI (60)	08	---
18	BRIGHT MAX	37	37
19	BRIGHT MIN	08	08
20	TINT	32	32
21	SHARP	04	04
23	CONTRAST MAX	50	50
24	CONTRAST MIN	08	08
26	COLOR MAX	39	39
27	COLOR MIN	10	10
30	M B CUT OFF	127	---
31	CVBS OUT	16	---
32	APR THRESHOLD	04	---
33	BELL FILTER	10	---
34	BANDPASS	06	---
35	H POSI OSD	125	---
36	V POSI OSD	50	---
37	H POSI TEXT	122	---
38	V POSI TEXT	58	---

\*To check for the fixed values of the RF (60Hz),  
indicate the adjustment mode screen while input the  
60Hz video signal.

# ELECTRICAL ADJUSTMENTS

## 3. PURITY AND CONVERGENCE ADJUSTMENTS

### NOTE

1. Turn the unit on and let it warm up for at least 30 minutes before performing the following adjustments.
2. Place the CRT surface facing east or west to reduce the terrestrial magnetism.
3. Turn ON the unit and demagnetize with a Degauss Coil.

### 3-1: STATIC CONVERGENCE (ROUGH ADJUSTMENT)

1. Tighten the screw for the magnet. Refer to the adjusted CRT for the position. (Refer to Fig. 3-1)  
If the deflection yoke and magnet are in one body, untighten the screw for the body.
2. Receive the green raster pattern from the color bar generator.
3. Slide the deflection yoke until it touches the funnel side of the CRT.
4. Adjust center of screen to green, with red and blue on the sides, using the pair of purity magnets.
5. Switch the color bar generator from the green raster pattern to the crosshatch pattern.
6. Combine red and blue of the 3 color crosshatch pattern on the center of the screen by adjusting the pair of 4 pole magnets.
7. Combine red/blue (magenta) and green by adjusting the pair of 6 pole magnets.
8. Adjust the crosshatch pattern to change to white by repeating steps 6 and 7.

### 3-2: PURITY

#### NOTE

Adjust after performing adjustments in section 3-1.

1. Receive the green raster pattern from color bar generator.
2. Adjust the pair of purity magnets to center the color on the screen.  
Adjust the pair of purity magnets so the color at the ends are equally wide.
3. Move the deflection yoke backward (to neck side) slowly, and stop it at the position when the whole screen is green.
4. Confirm red and blue colors.
5. Adjust the slant of the deflection yoke while watching the screen, then tighten the fixing screw.

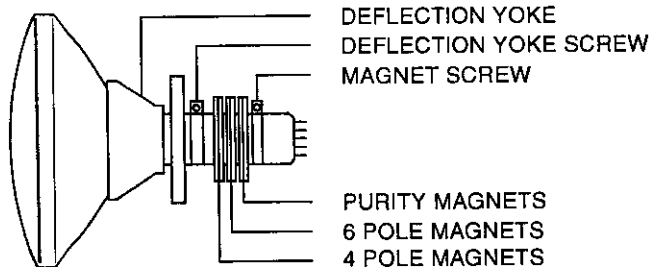


Fig. 3-1

### 3-3: STATIC CONVERGENCE

#### NOTE

Adjust after performing adjustments in section 3-2.

1. Receive the crosshatch pattern from the color bar generator.
2. Combine red and blue of the 3 color crosshatch pattern on the center of the screen by adjusting the pair of 4 pole magnets.
3. Combine red/blue (magenta) and green by adjusting the pair of 6 pole magnets.

### 3-4: DYNAMIC CONVERGENCE

#### NOTE

Adjust after performing adjustments in section 3-3.

1. Adjust the differences around the screen by moving the deflection yoke upward/downward and right/left. (Refer to Fig. 3-2-a)
2. Insert three wedges between the deflection yoke and CRT funnel to fix the deflection yoke. (Refer to Fig. 3-2-b)


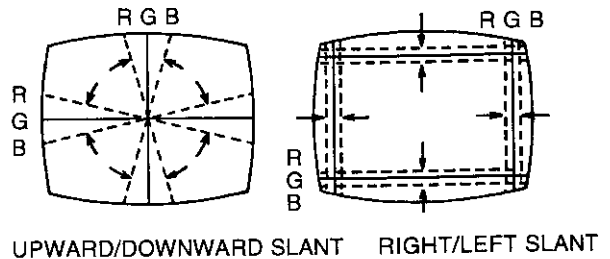


Fig. 3-2-a

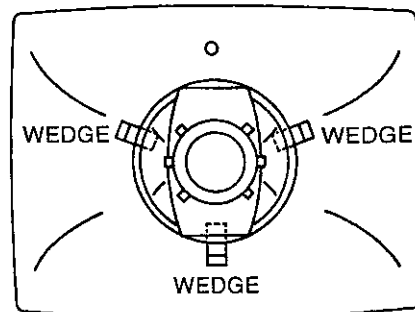


WEDGE POSITION

Fig. 3-2-b


# ELECTRICAL ADJUSTMENTS

## 4. ELECTRICAL ADJUSTMENT PARTS LOCATION GUIDE (WIRING CONNECTION)

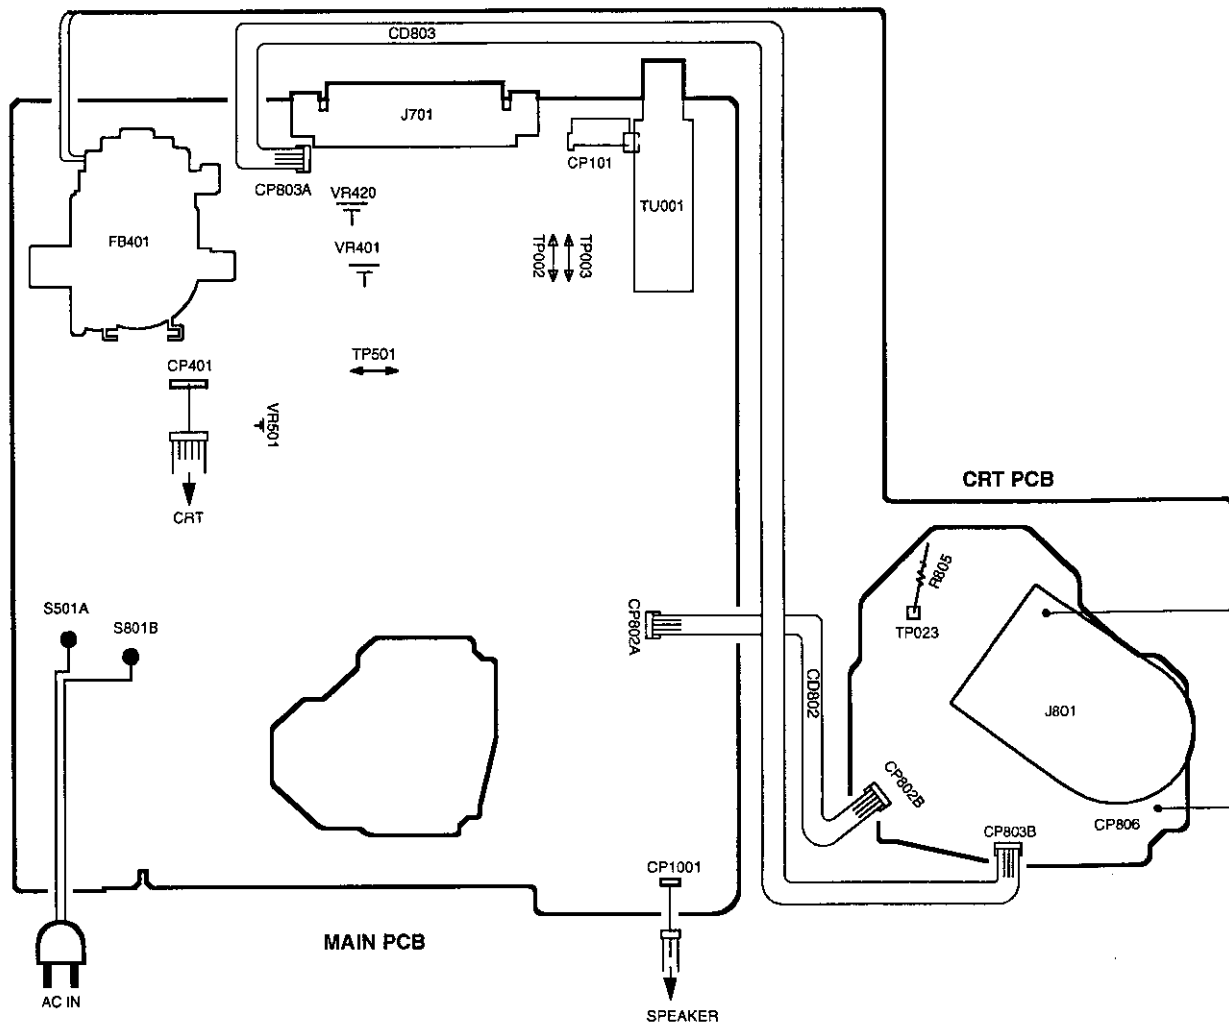





# BLOCK DIAGRAM

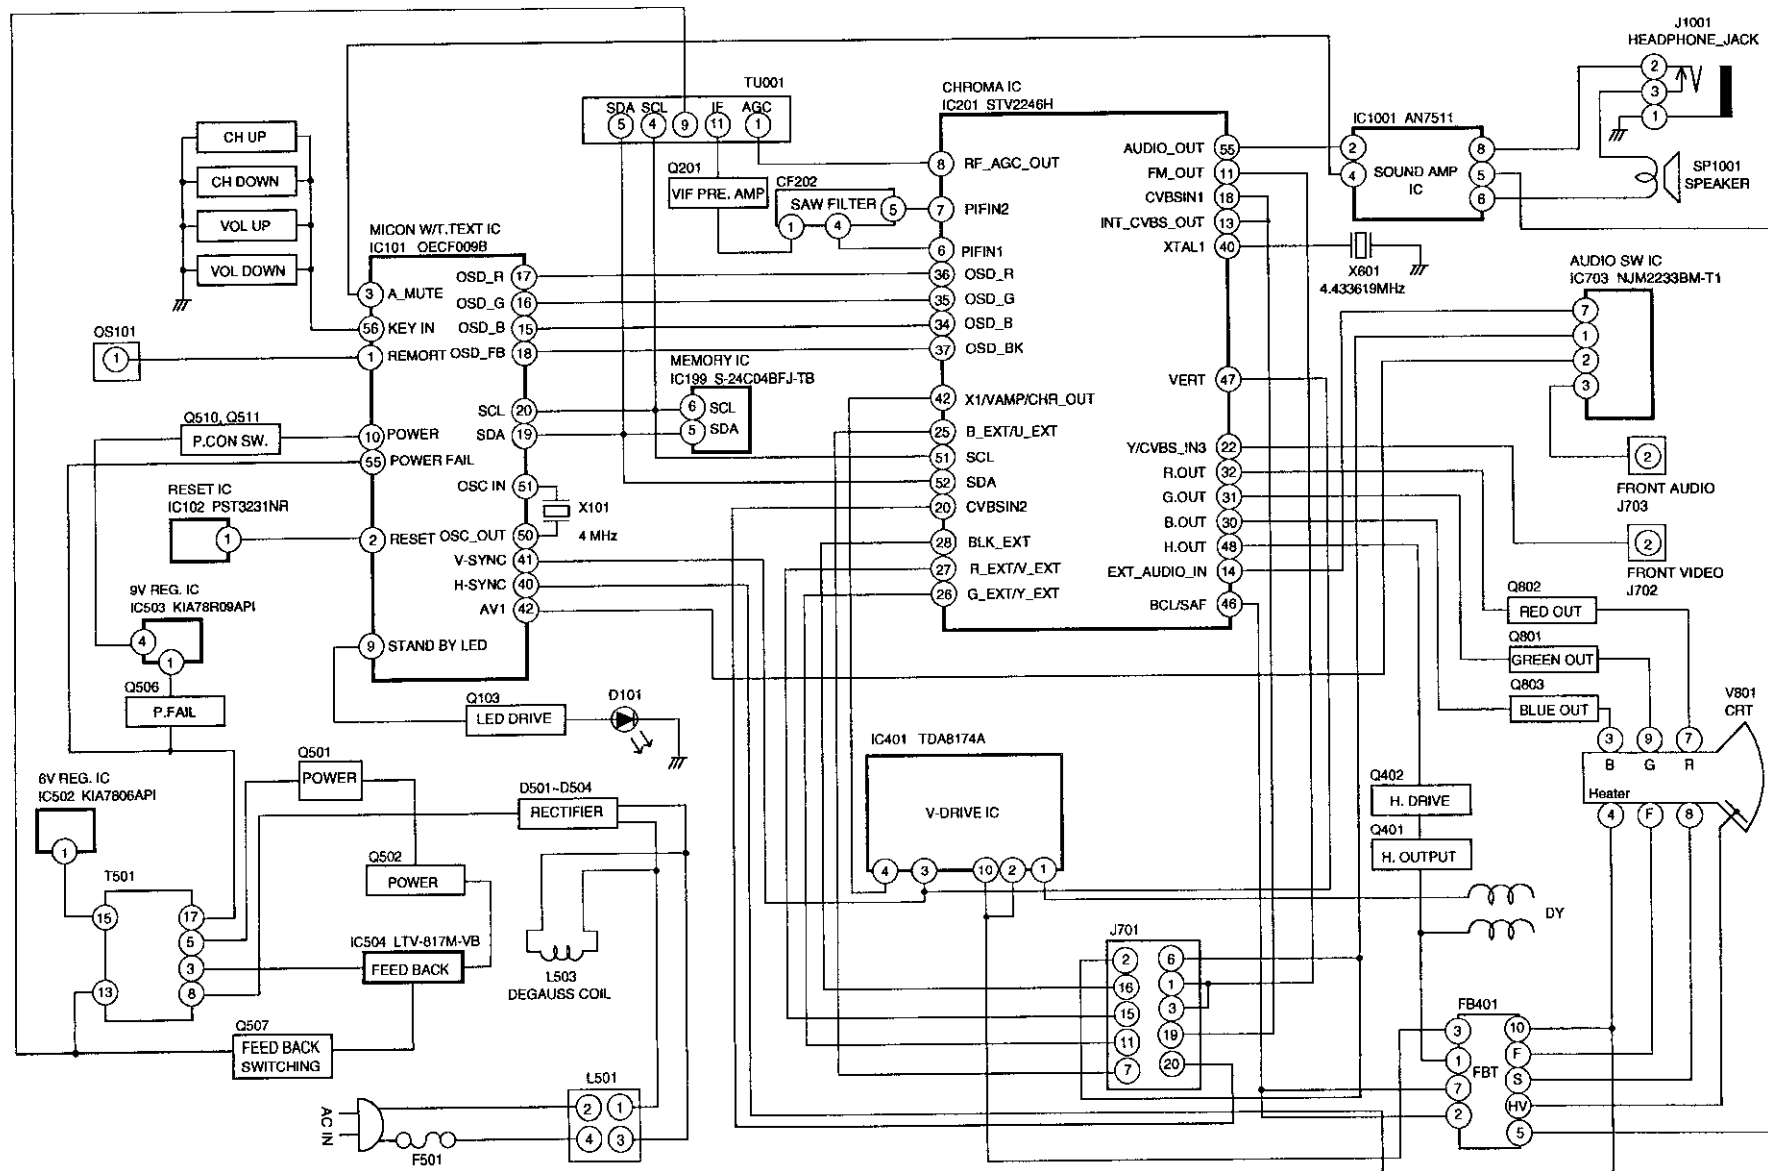


PRINTED CIRCUIT BOARDS  
MAIN/CRT (INSERTED PARTS)  
SOLDER SIDE

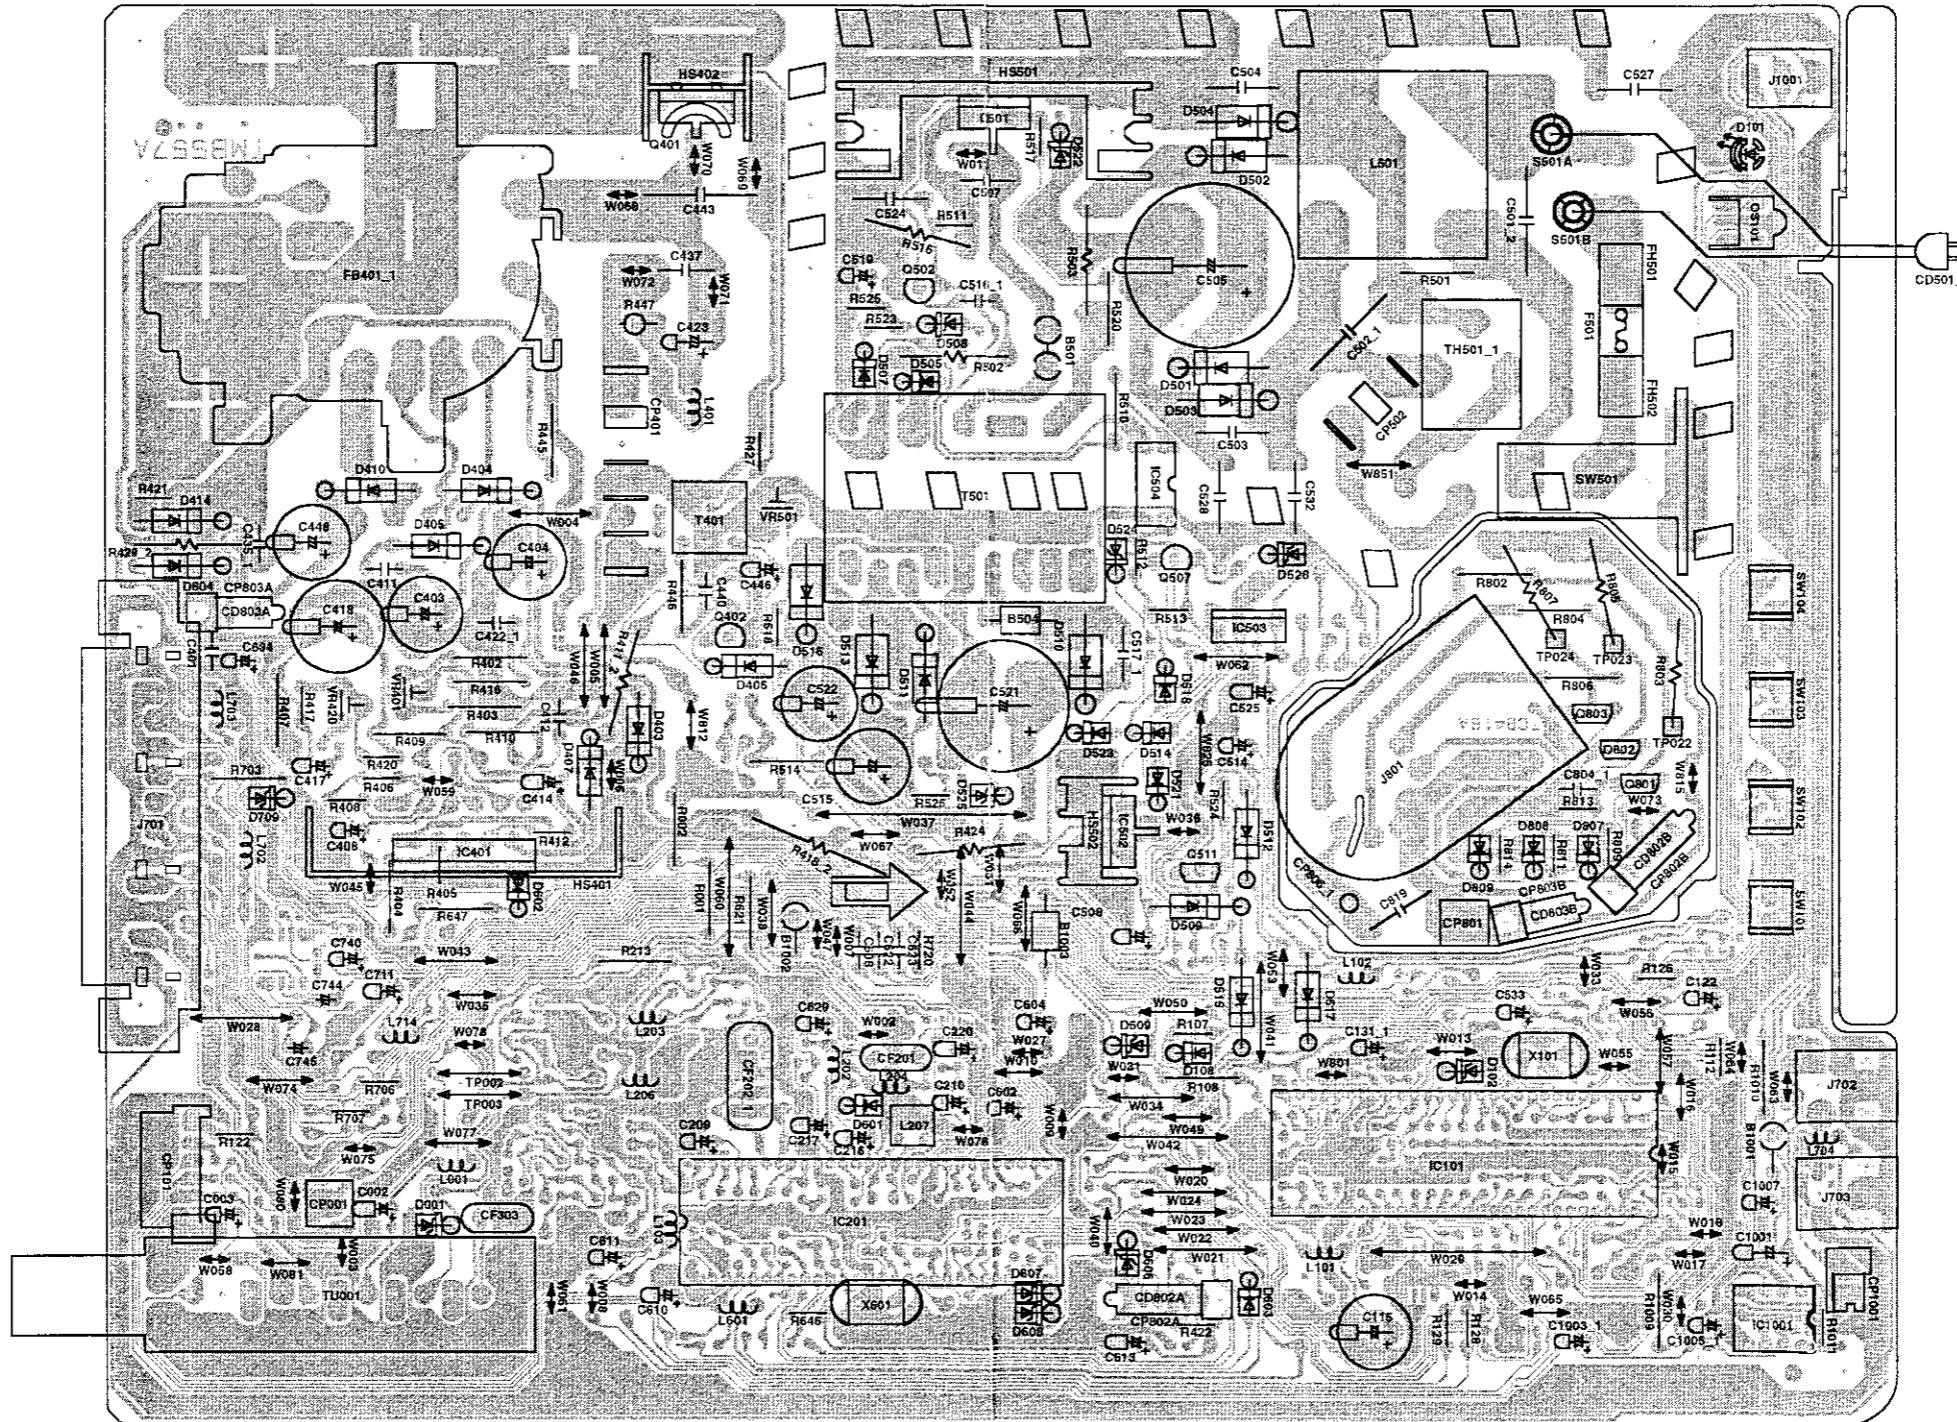

PRINTED CIRCUIT BOARDS  
MAIN/CRT (CHIP MOUNTED PARTS)  
SOLDER SIDE

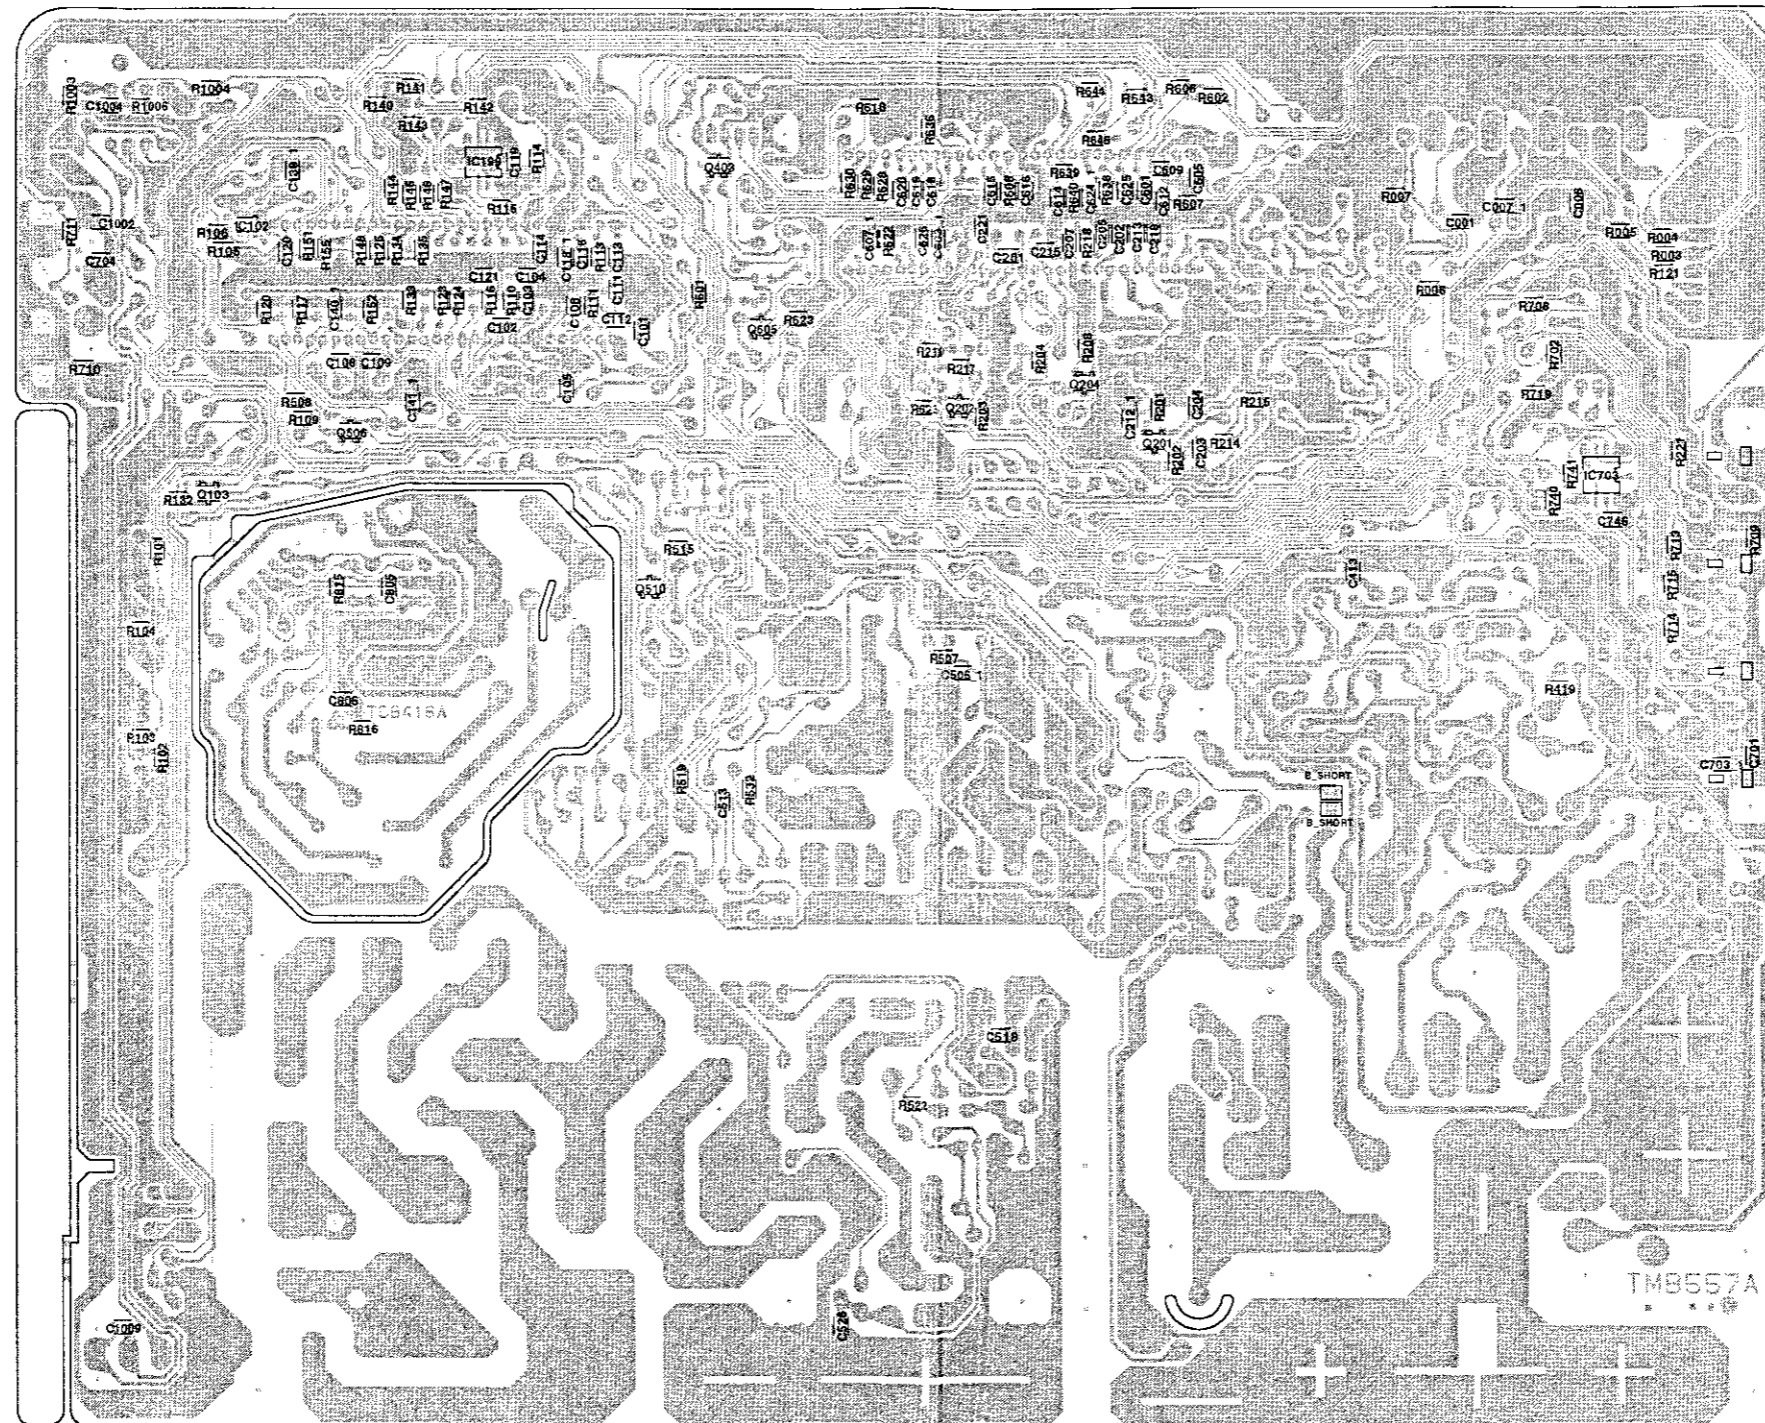

# MICON/TUNER SCHEMATIC DIAGRAM (MAIN PCB)

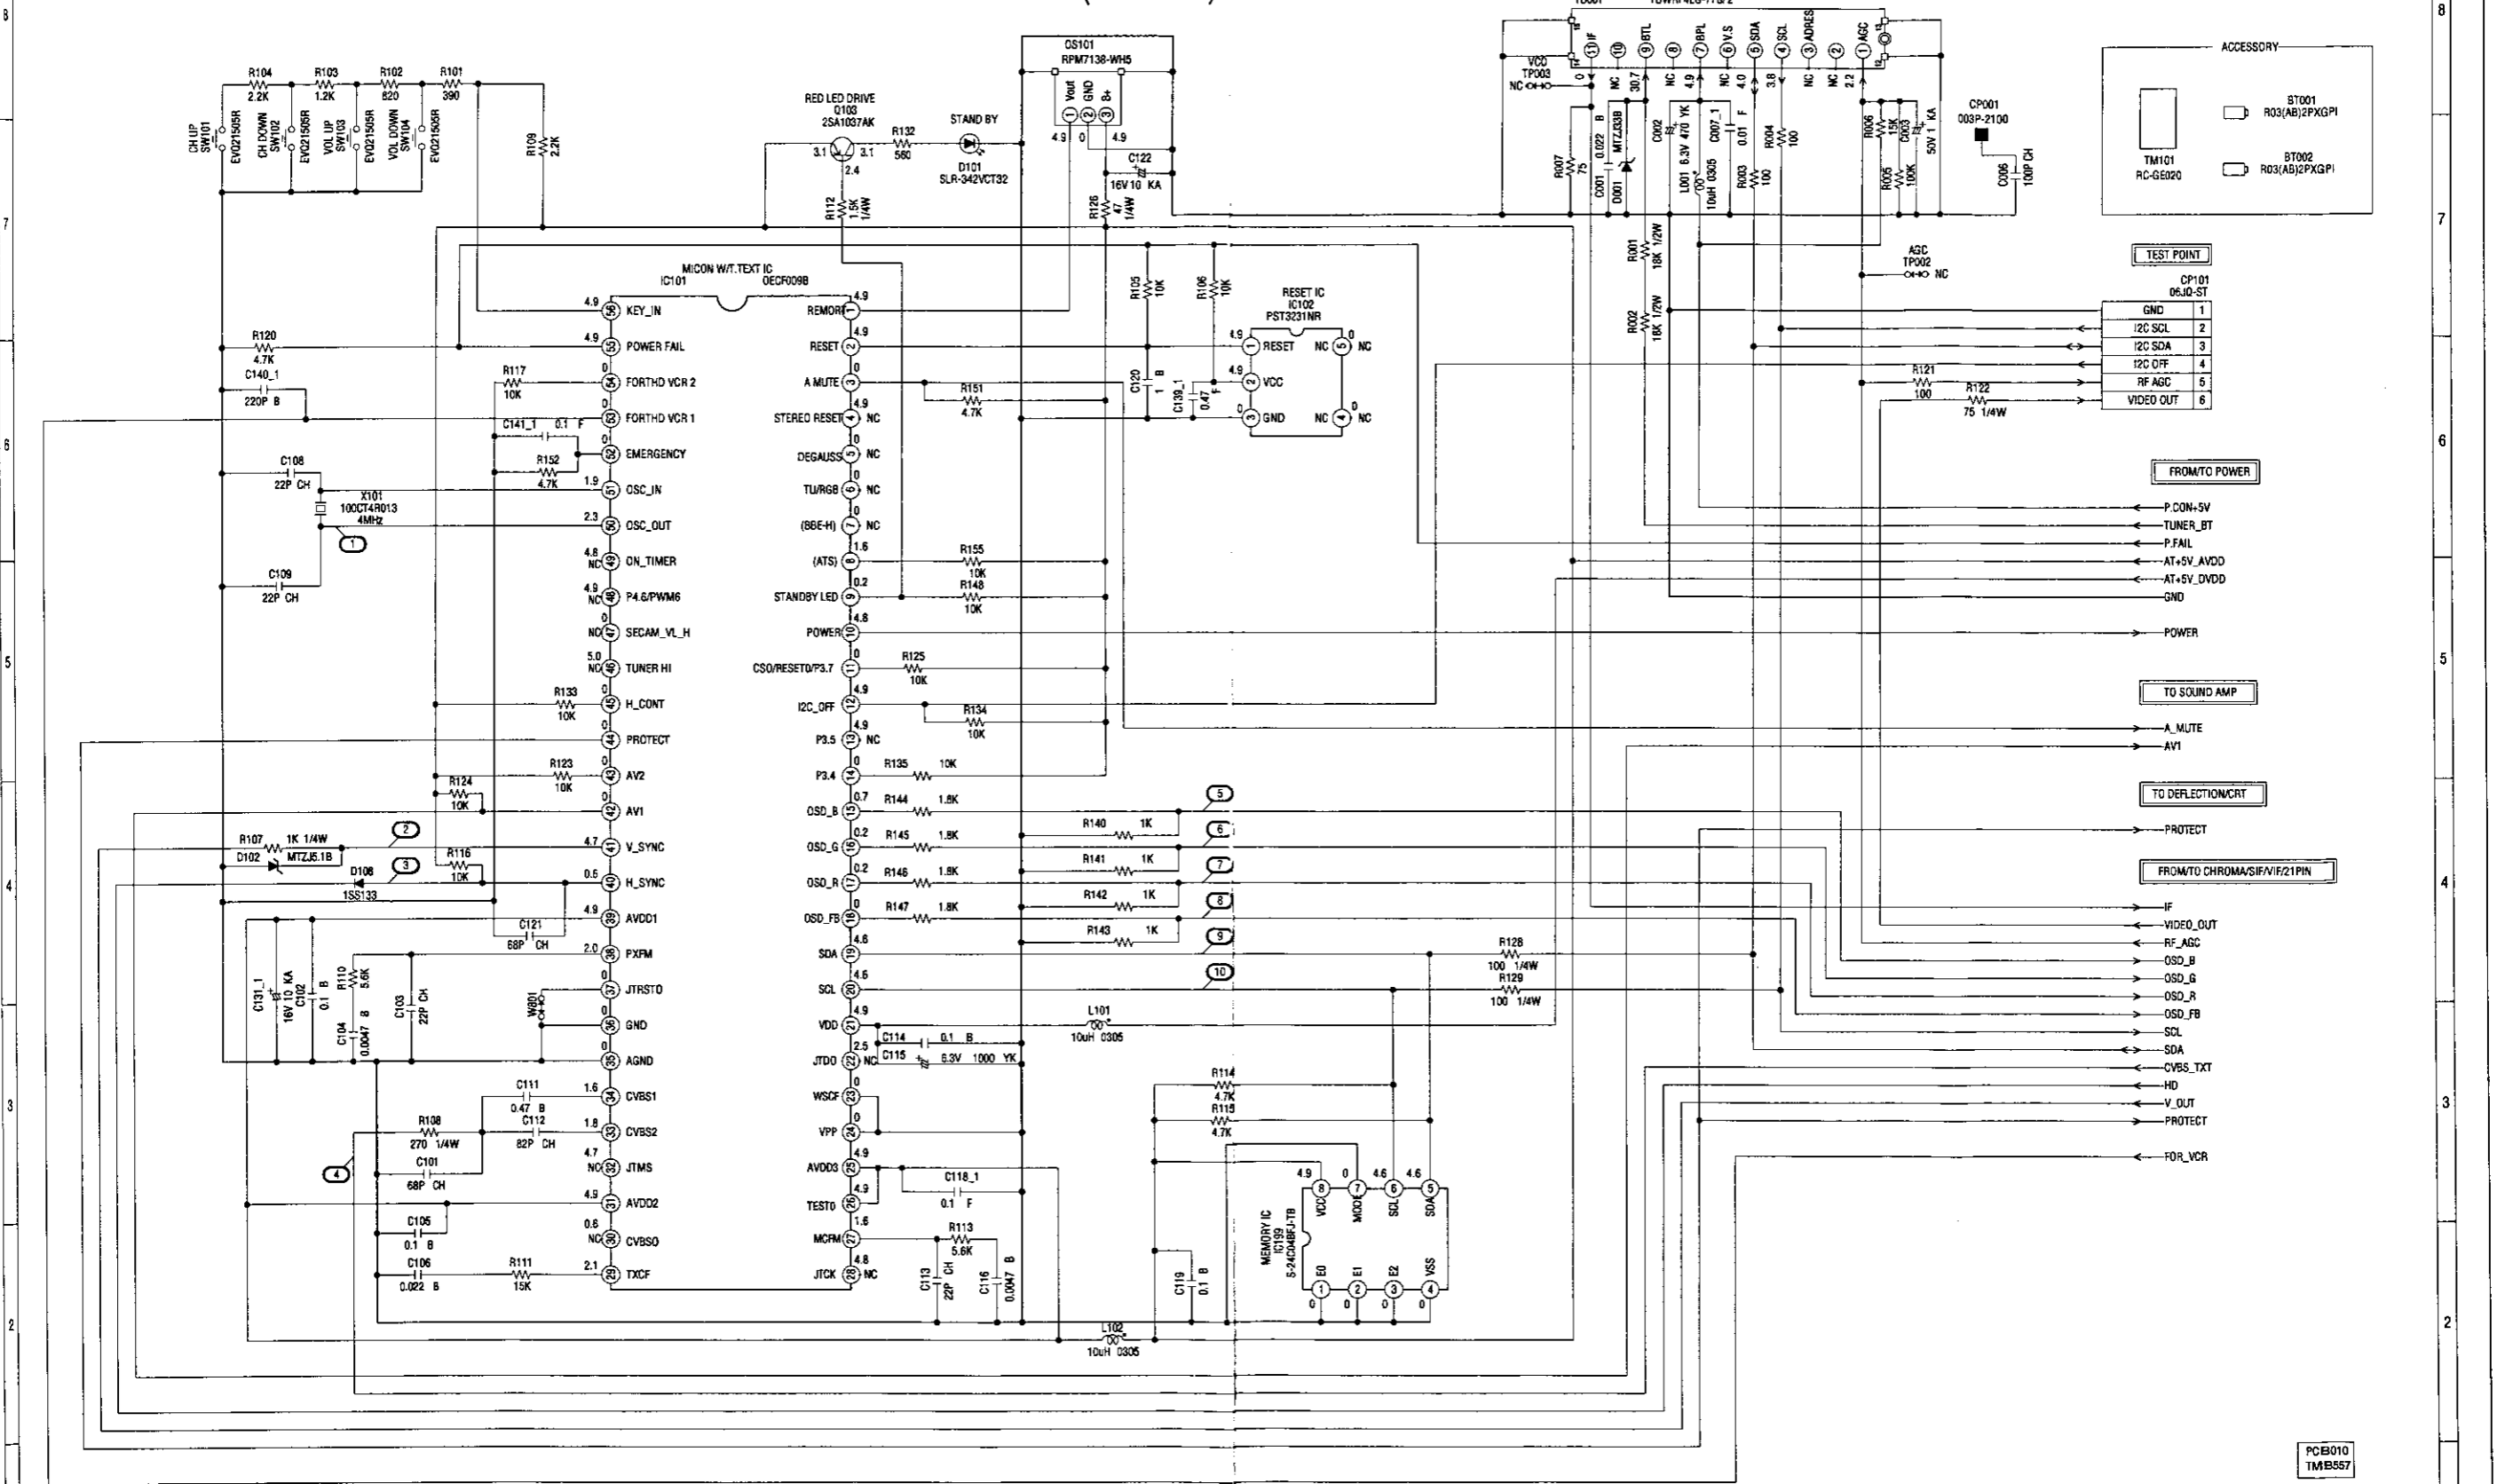


NOTE: THIS SCHEMATIC DIAGRAM IS THE LATEST AT THE TIME OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE.

NOTE: THE DC VOLTAGE AT EACH PART WAS MEASURED WITH THE DIGITAL TESTER WHEN THE COLOR BROADCAST WAS RECEIVED IN GOOD CONDITION AND PICTURE IS NORMAL.

PCB010  
TMB557

# CHROMA/SIF/VIF/21PIN SCHEMATIC DIAGRAM (MAIN PCB)

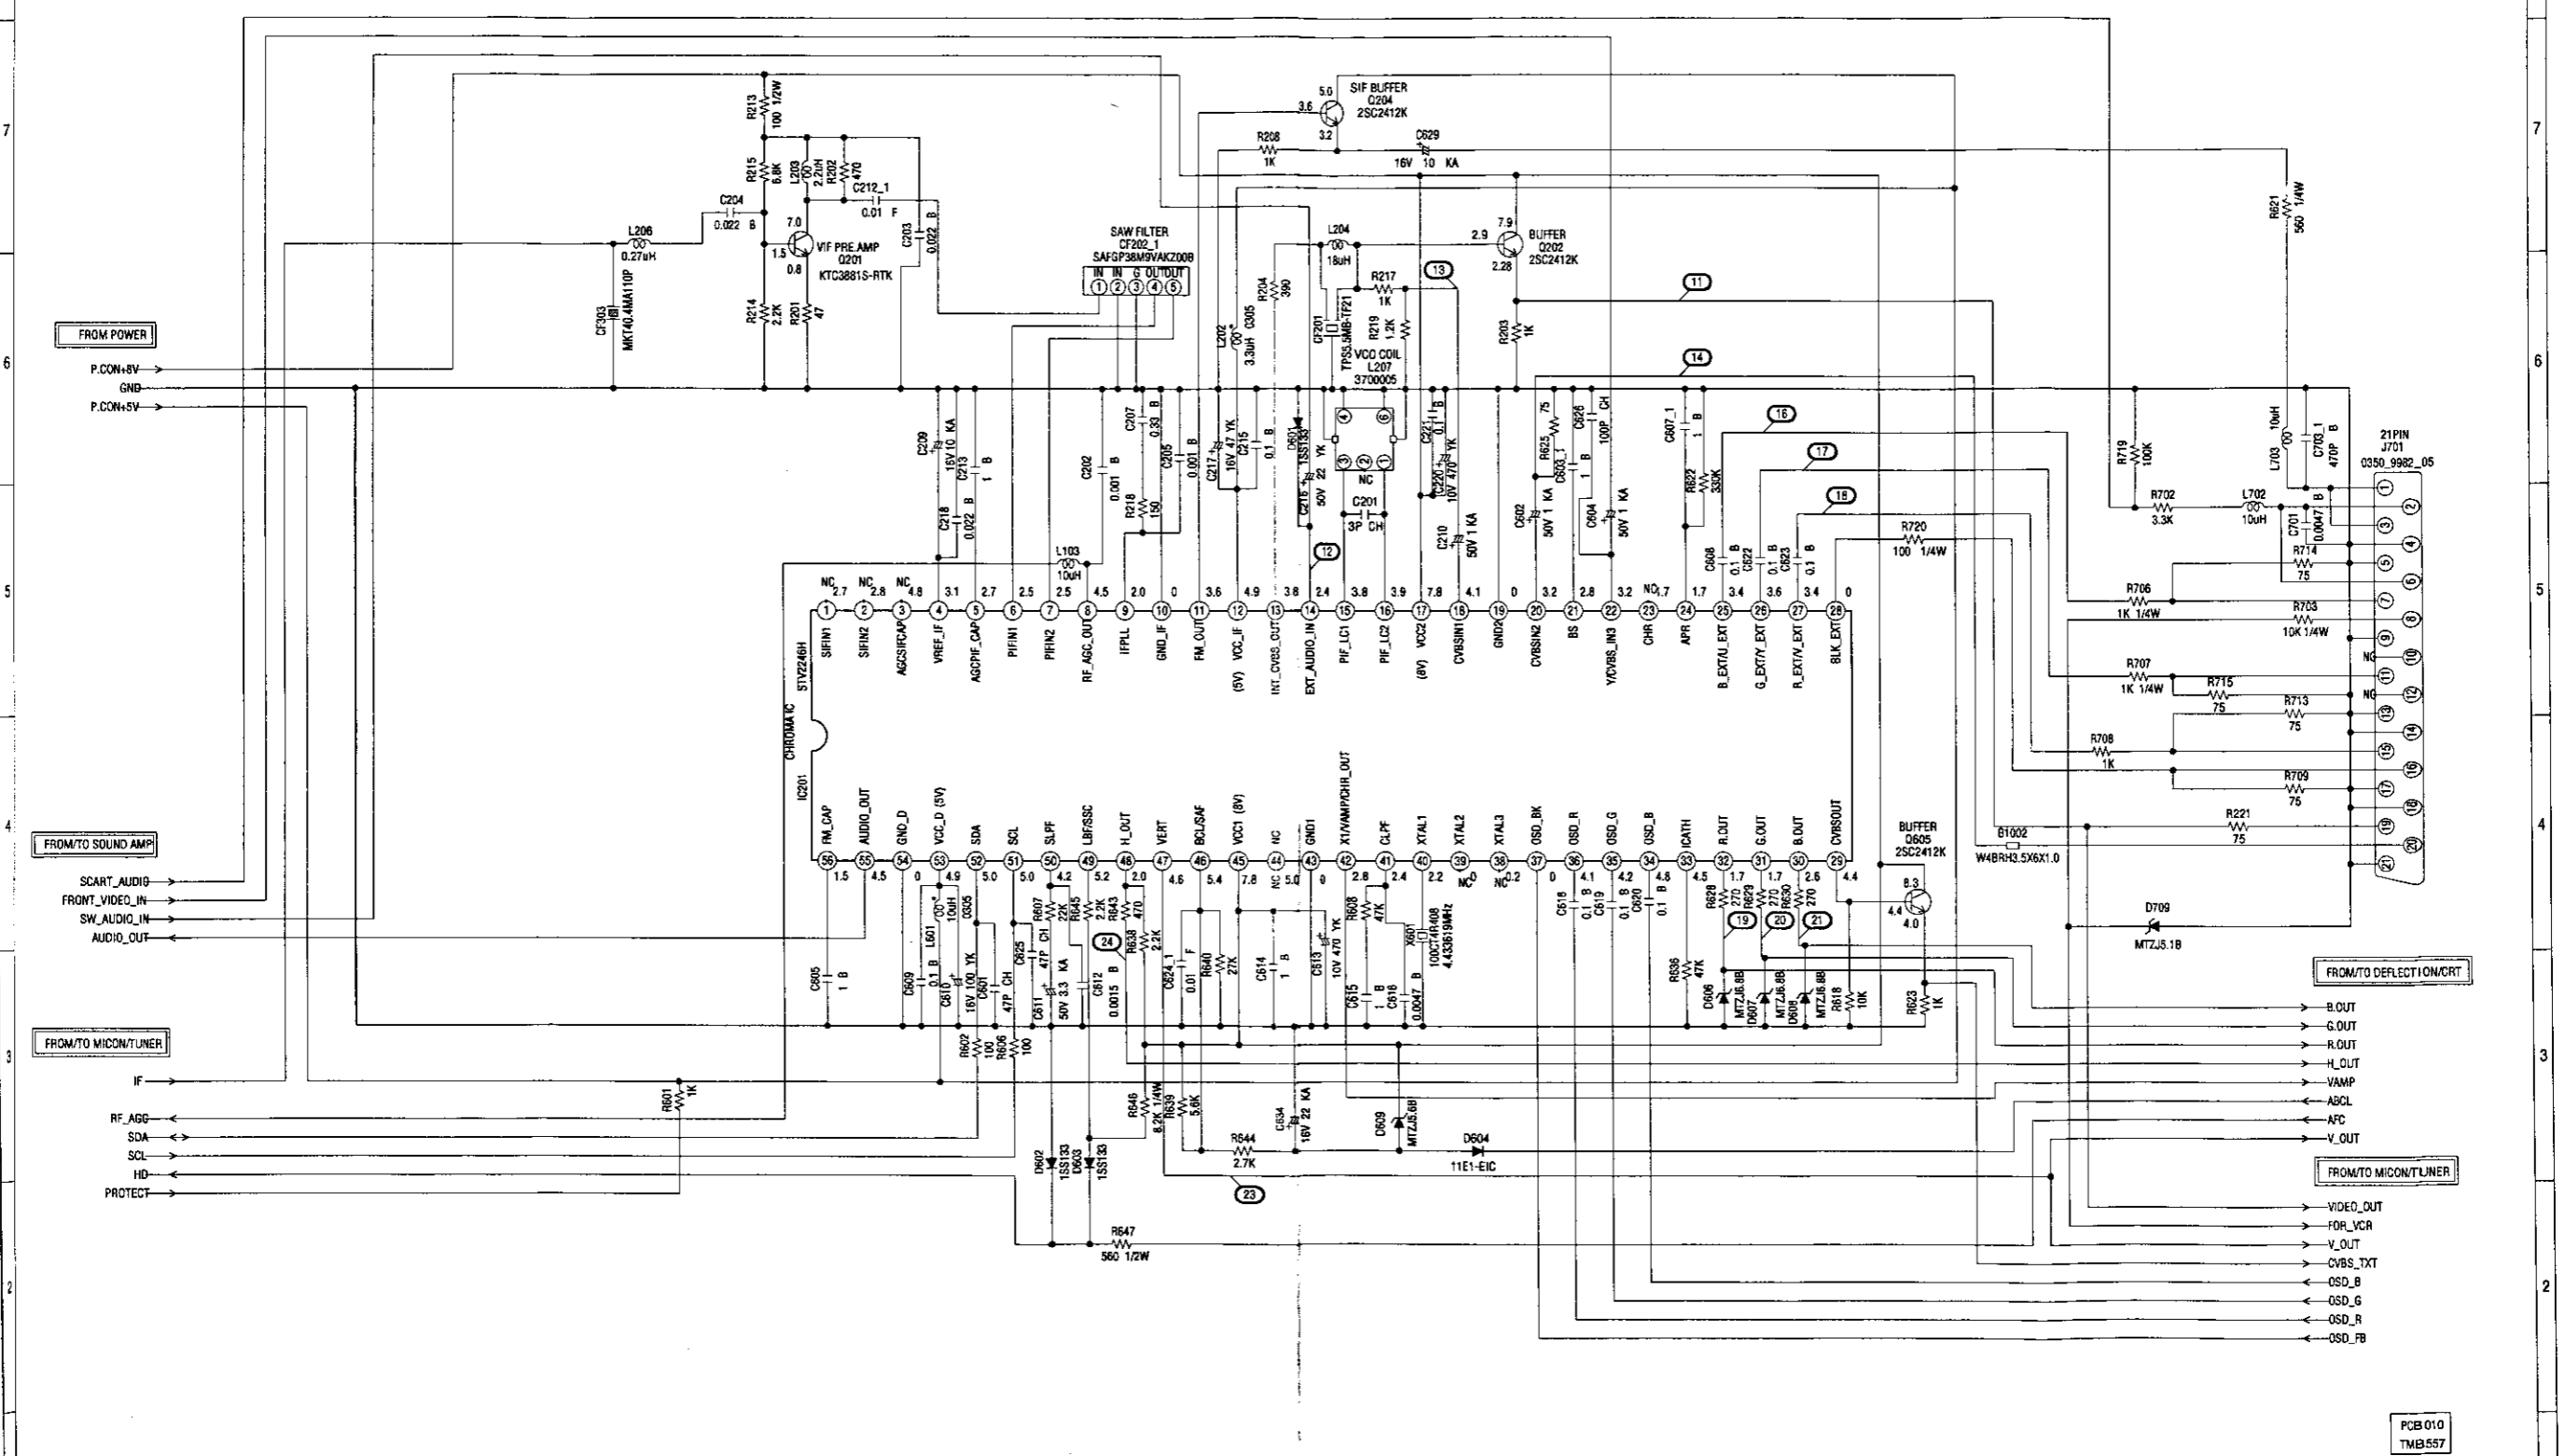


NOTE: THIS SCHEMATIC DIAGRAM IS THE LATEST AT THE TIME OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE.

NOTE: THE DC VOLTAGE AT EACH PART WAS MEASURED WITH THE DIGITAL TESTER WHEN THE COLOR BROADCAST WAS RECEIVED IN GOOD CONDITION AND PICTURE IS NORMAL.

PCB 010  
TMB557

# SOUND AMP/FRONT AV SCHEMATIC DIAGRAM (MAIN PCB)

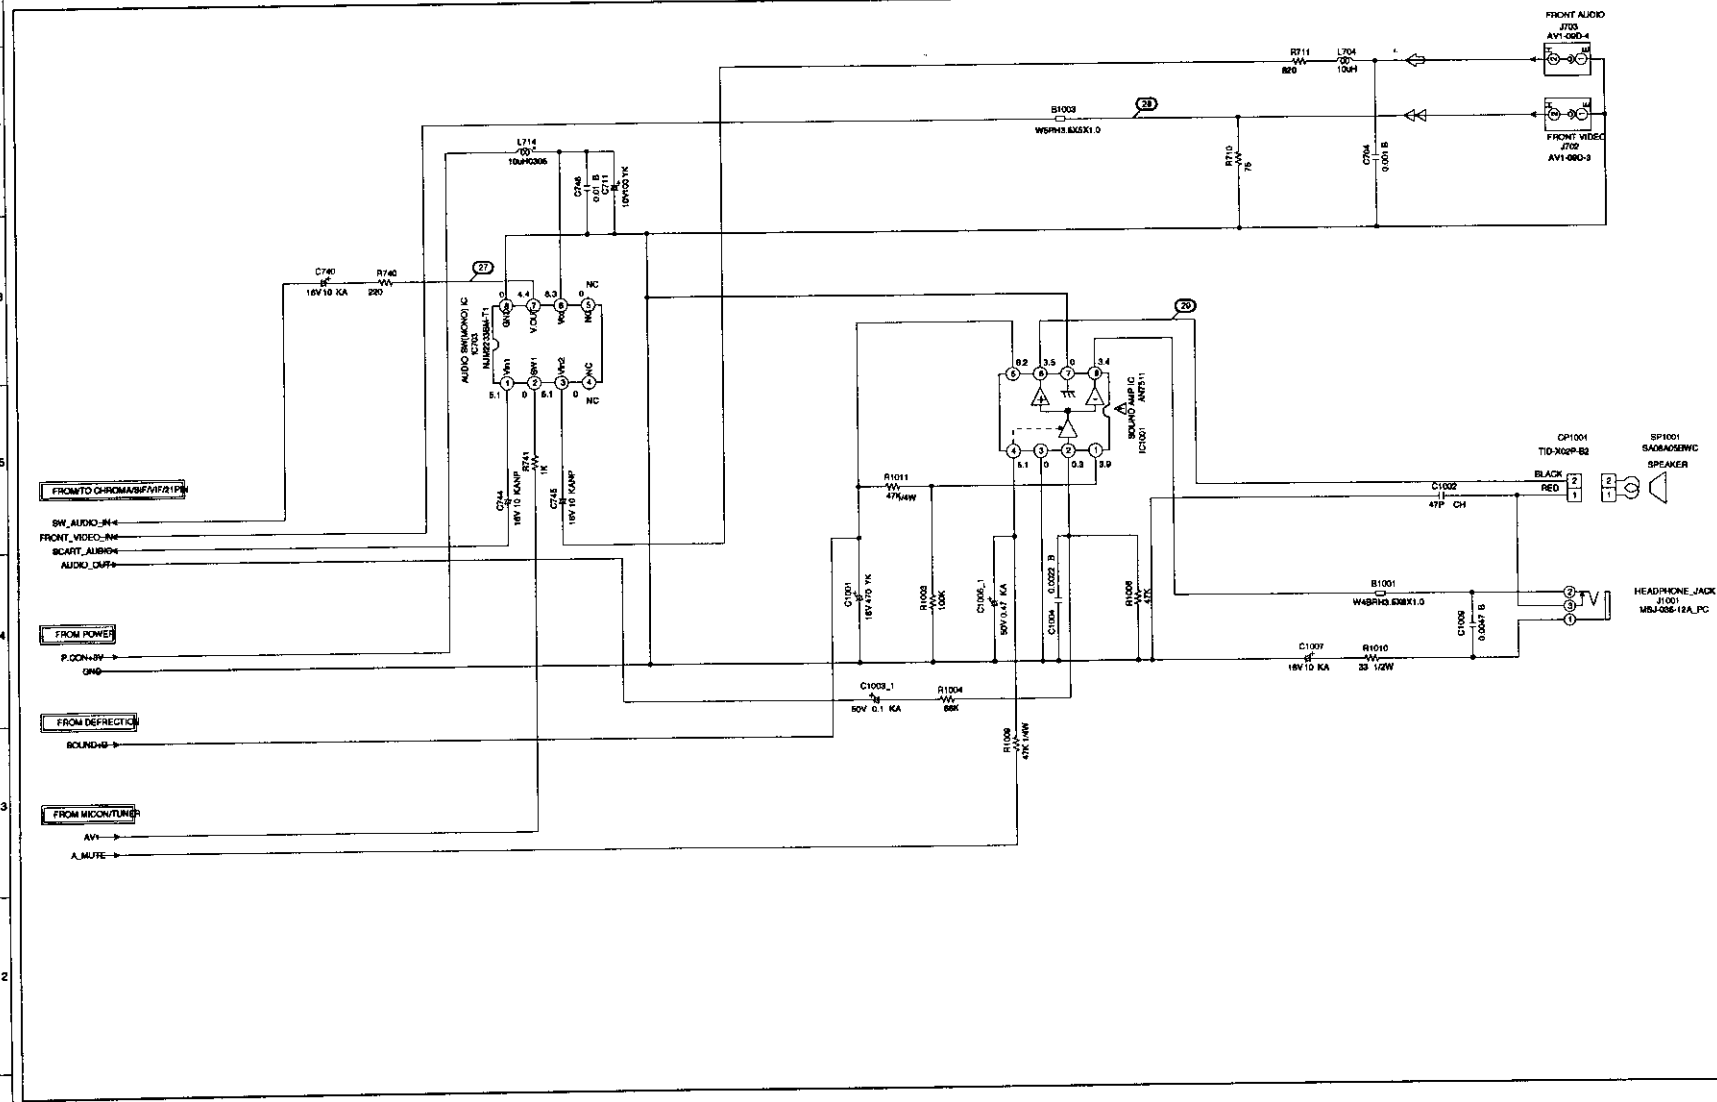

FROM TO CHROMA/BUFFER/PTIP

SW\_AUDIO-IN

FRONT\_VIDEO-IN

SCART\_AUDIO

AUDIO\_BUFF

FROM POWER

P\_ON+BY

0V

FROM DEFECTION

SOUND+5

FROM MICROTUNER

AV1

A\_MUTE

NOTE: THIS SCHEMATIC DIAGRAM IS THE LATEST AT THE TIME OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE


NOTE: THE DC VOLTAGE AT EACH PART WAS MEASURED WITH THE DIGITAL TESTER WHEN THE COLOR BROADCAST WAS RECEIVED IN GOOD CONDITION AND PICTURE IS NORMAL

**ATTENTION** LES PIÈCES RÉPARÉES PAR UN TECHNICIEN QUALIFIÉ SONT SEULEMENT GARANTIES EN CE QUI CONCERNE LEUR MONTAGE. VÉRIFIER LA NÉCESSITÉ DE CES PIÈCES EN CONSULTANT LE MANUEL D'UTILISATION. NE PAS UTILISER QUE CELLES DÉCRITES DANS LA NOMENCLATURE DES PIÈCES.

**CAUTION** THESE PARTS MARKED ARE DANGEROUS AN POINT DE VUE SECURITE CRITICAL FOR SAFETY, USE ONES DESCRIBED IN PARTS LIST ONLY

PC8010  
TM8557

# DEFLECTION/CRT SCHEMATIC DIAGRAM (PCB)

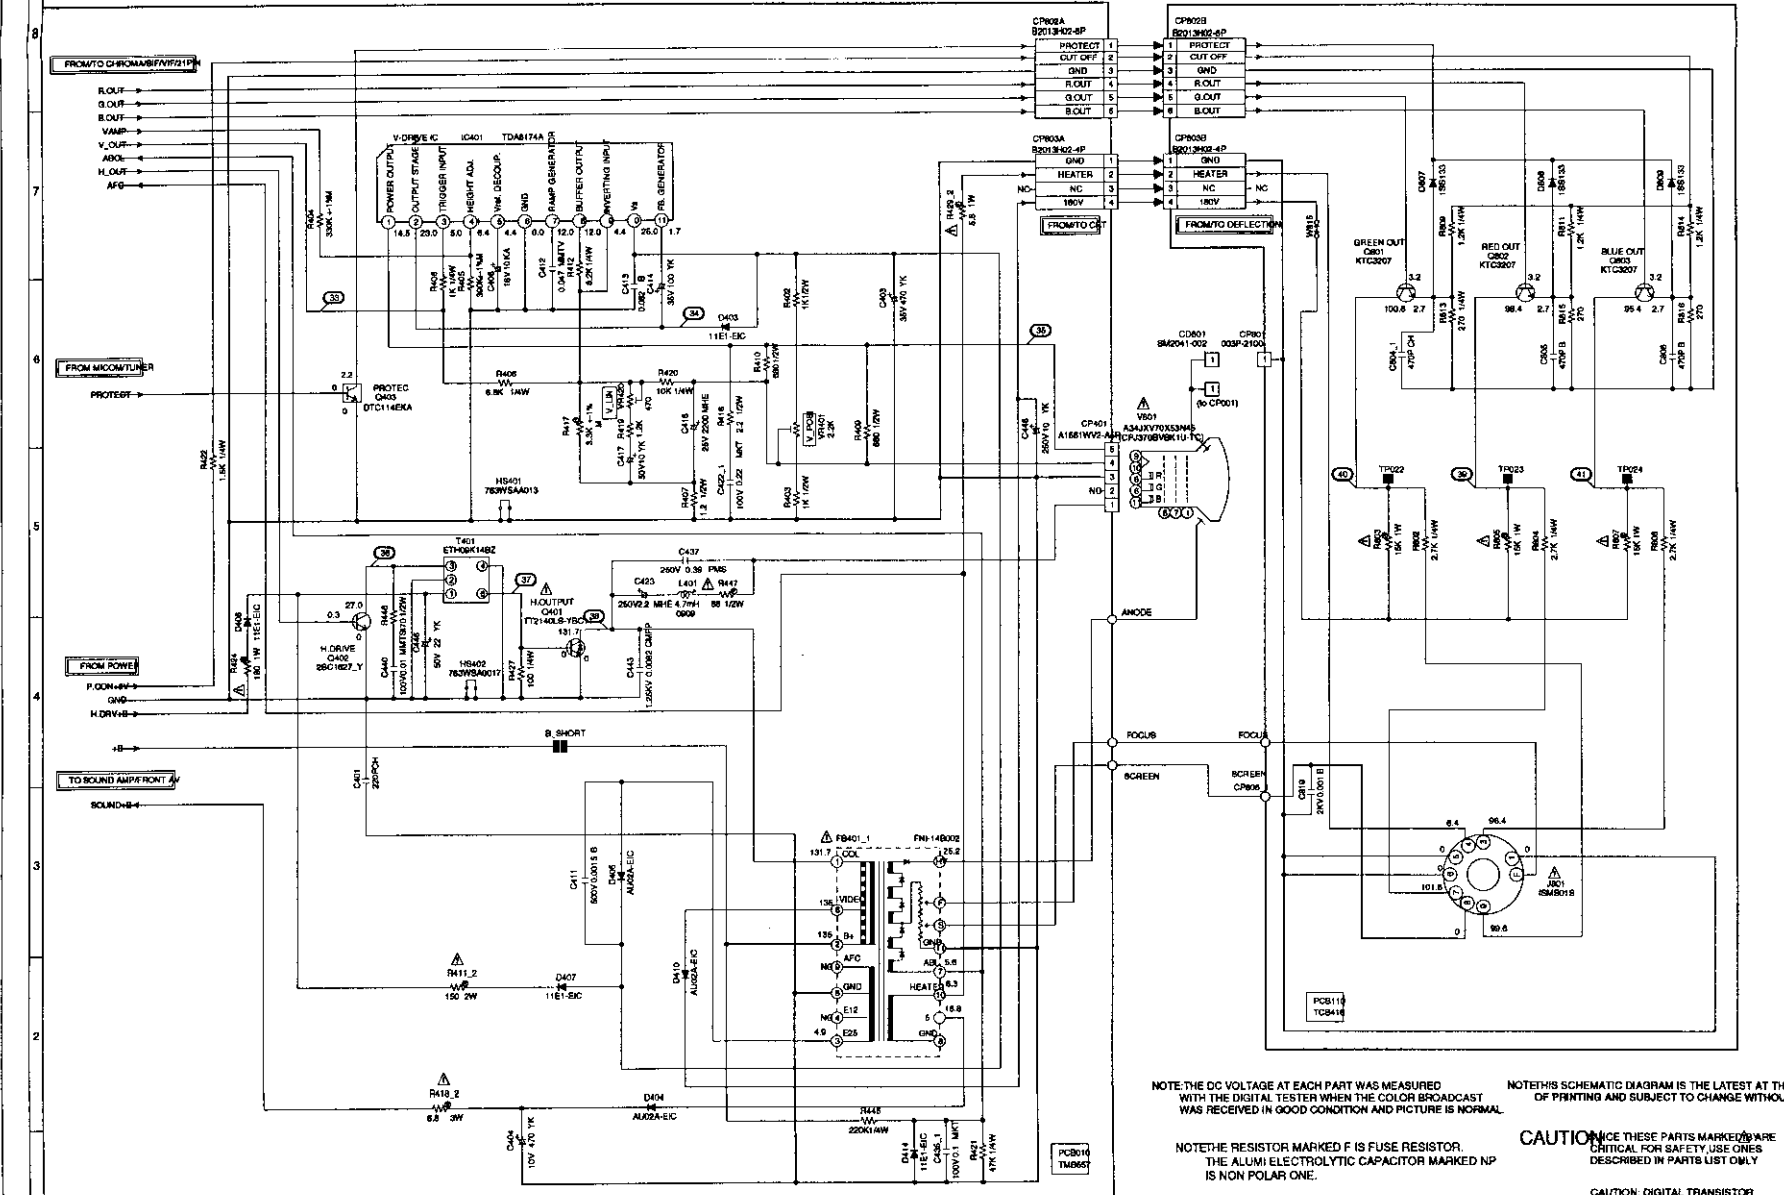

NOTE: THE DC VOLTAGE AT EACH PART WAS MEASURED WITH THE DIGITAL TESTER WHEN THE COLOR BROADCAST WAS RECEIVED IN GOOD CONDITION AND PICTURE IS NORMAL.


NOTE: THIS SCHEMATIC DIAGRAM IS THE LATEST AT THE TIME OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE.

NOTE: THE RESISTOR MARKED F IS FUSE RESISTOR. THE ALUMI ELECTROLYTIC CAPACITOR MARKED NP IS NON POLAR ONE.


**CAUTION:** THESE PARTS MARKED ARE CRITICAL FOR SAFETY, USE ONES DESCRIBED IN PARTS LIST ONLY.

**ATTENTION:** LES PIÈCES REPARÈS PAR LE TANT DANGEREUSES AU POINT DE VUE SECURITE N'UTILISER QUE CELLES DECRITES DANS LA NOMENCLATURE DES REÇUES


CAUTION: DIGITAL TRANSISTOR



# POWER SCHEMATIC DIAGRAM (MAIN PCB)

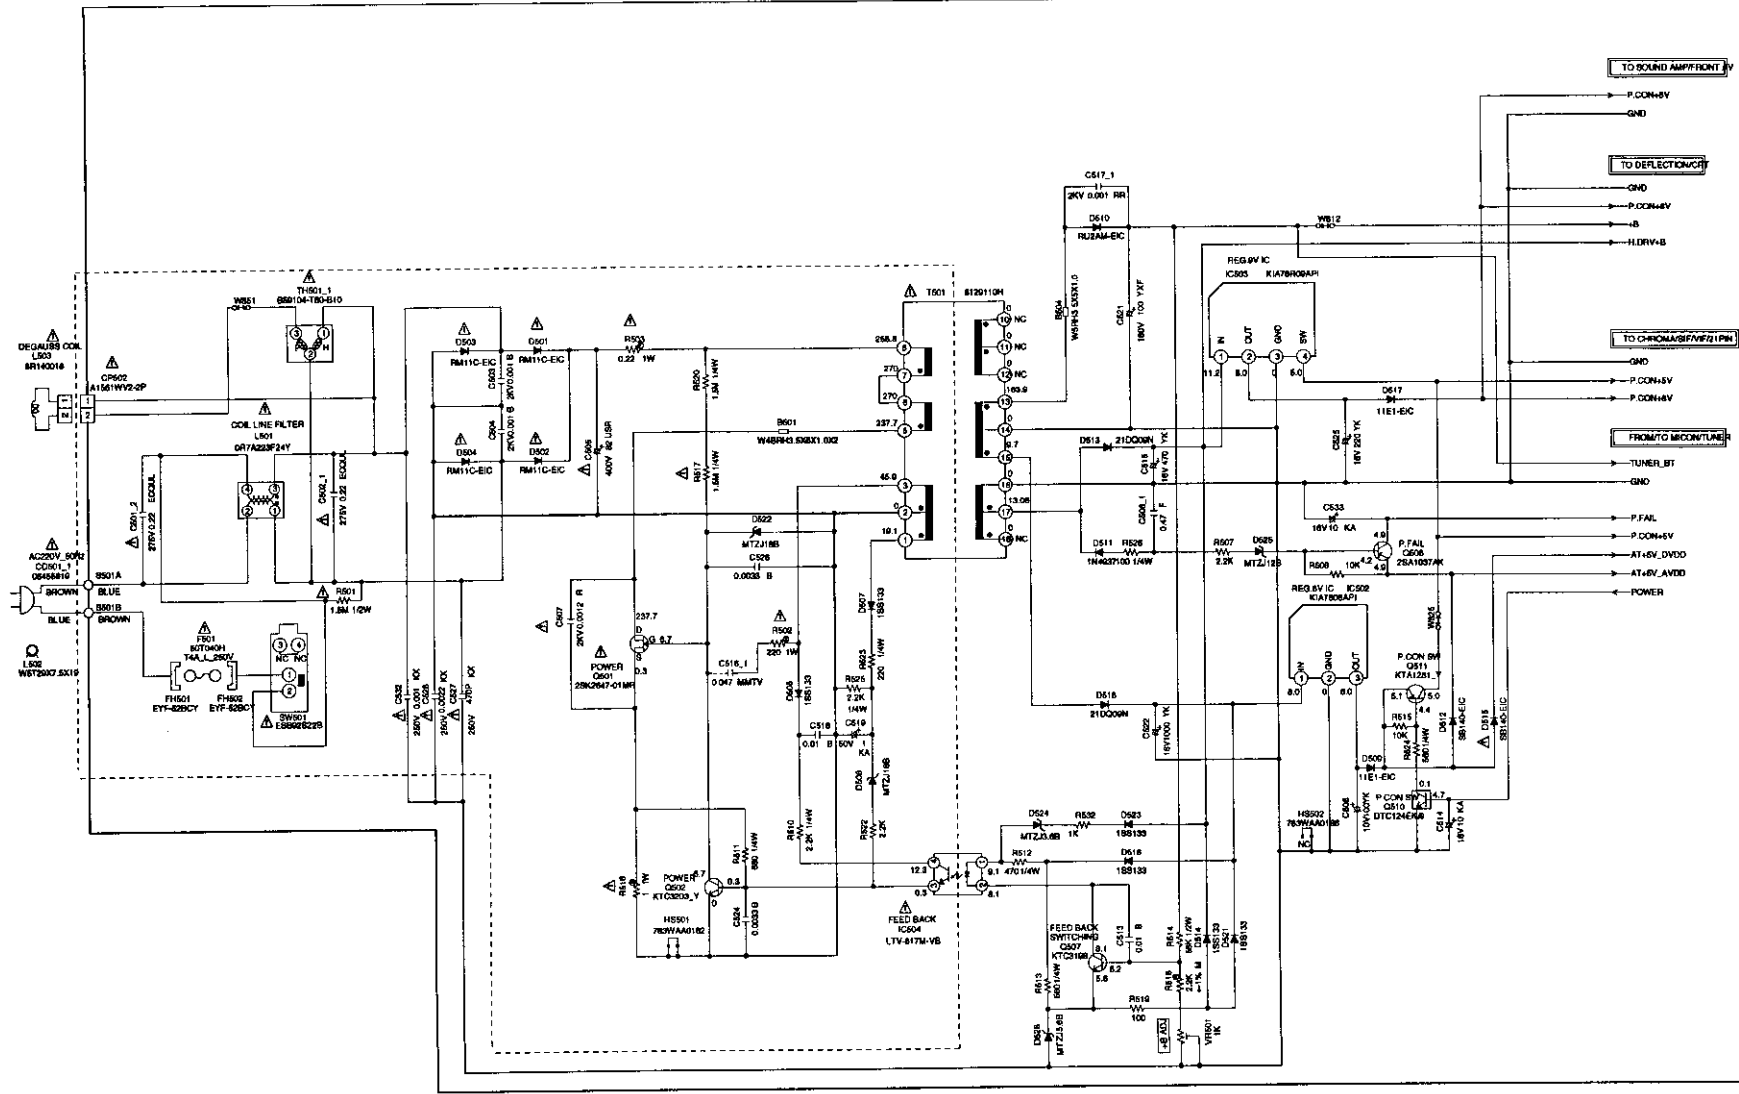

CAUTION: DIGITAL TRANSISTOR



**ATTENTION:** LES PIÈCES RÉPARÉES PAR LA MAIN D'ŒUVRE SONT CRITIQUES POUR LA SÉCURITÉ. VÉRIFIER QUE CELLES DÉCRITES DANS LA NOMENCLATURE DES PIÈCES.

**CAUTION:** THESE PARTS MARKED WITH A TRIANGLE ARE CRITICAL FOR SAFETY. USE ONES DESCRIBED IN PARTS LIST ONLY.











THIS SCHEMATIC DIAGRAM IS THE LATEST AT THE TIME OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE.

THE DC VOLTAGE AT EACH PART WAS MEASURED WITH THE DIGITAL TESTER WHEN THE COLOR BROADCAST WAS RECEIVED IN GOOD CONDITION AND PICTURE IS NORMAL.








# WAVEFORMS

## MICON/TUNER

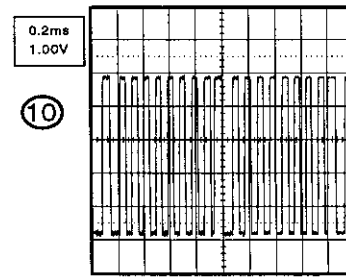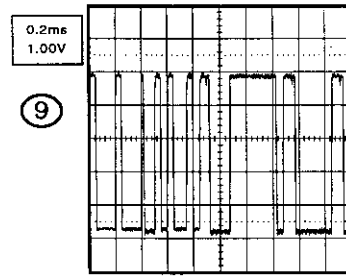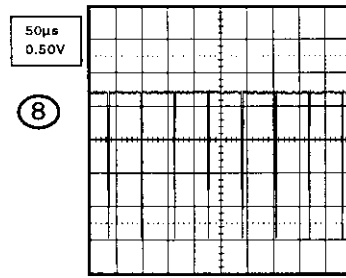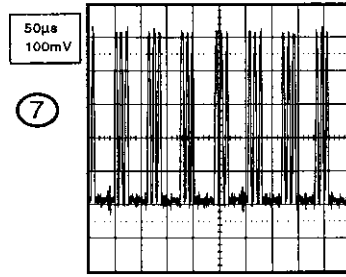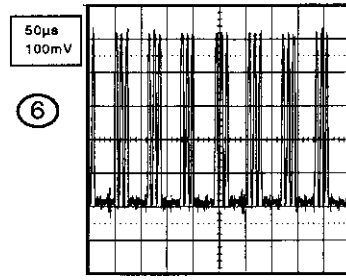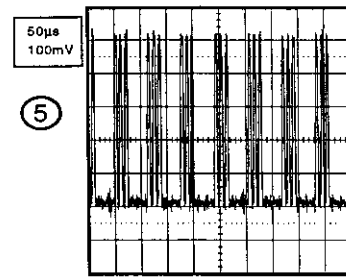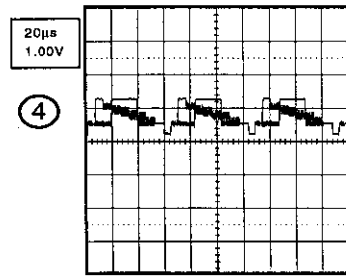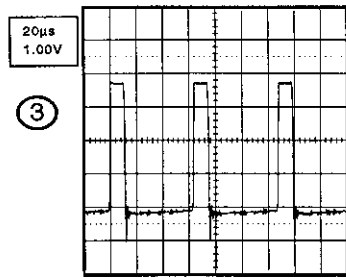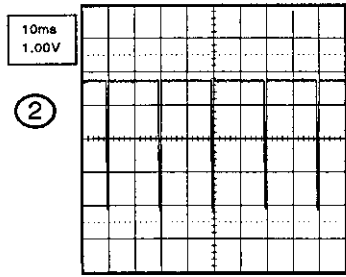
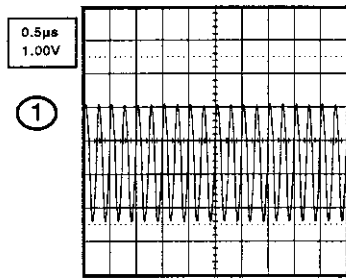


## CHROMA/SIF/VIF/21PIN

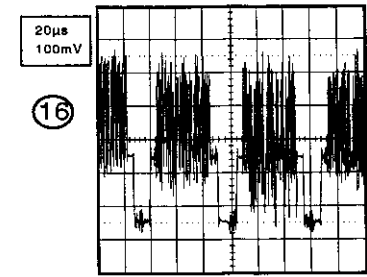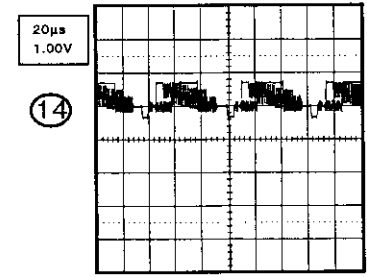
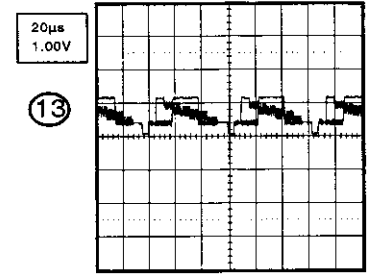
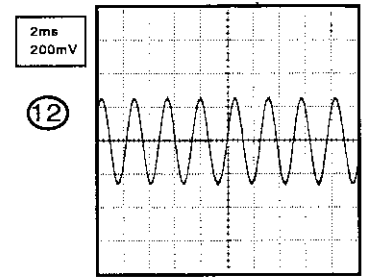
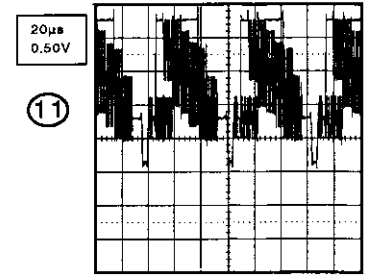


**NOTE:** The following waveforms were measured at the point of the corresponding balloon number in the schematic diagram.










# WAVEFORMS

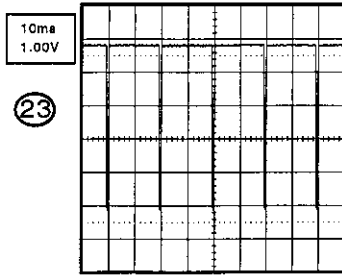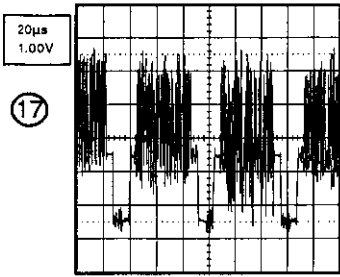

## DEFLECTION/CRT

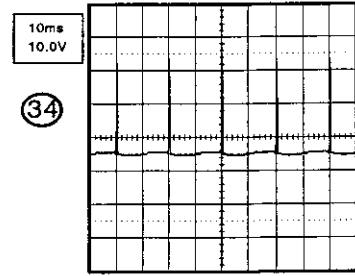
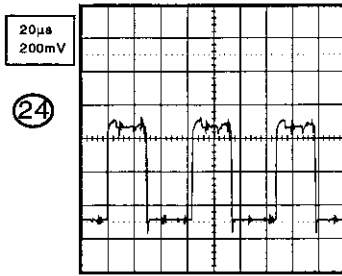
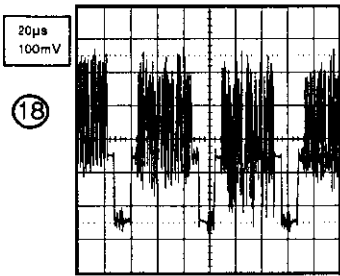
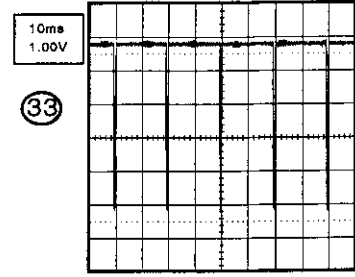


## SOUND AMP

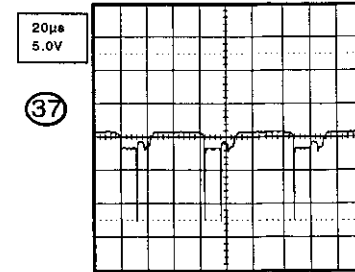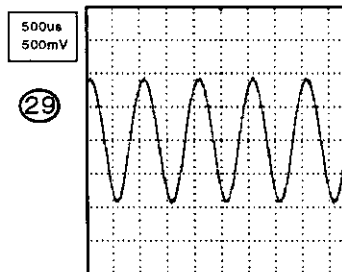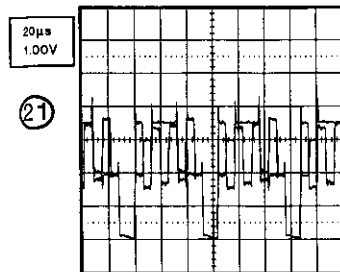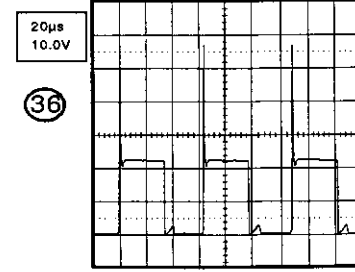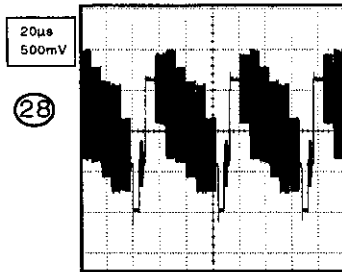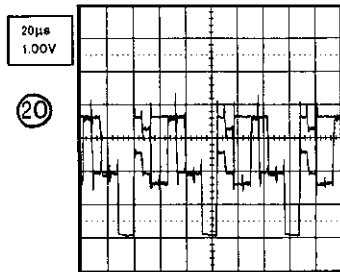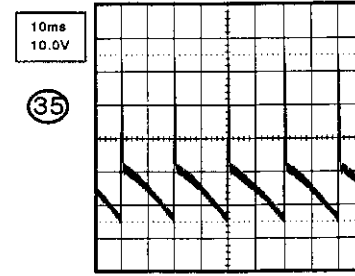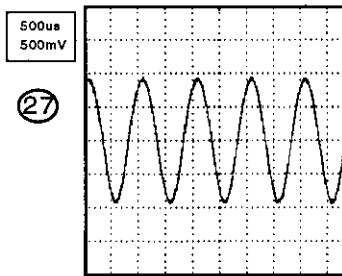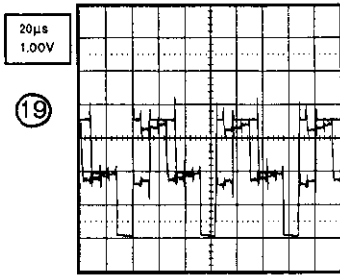


NOTE: The following waveforms were measured at the point of the corresponding balloon number in the schematic diagram.

# WAVEFORMS

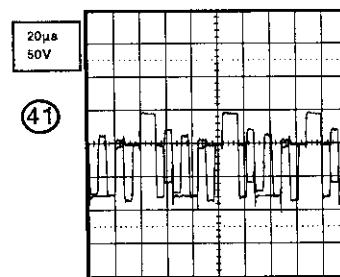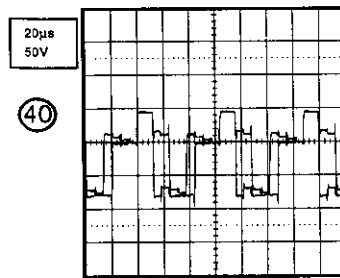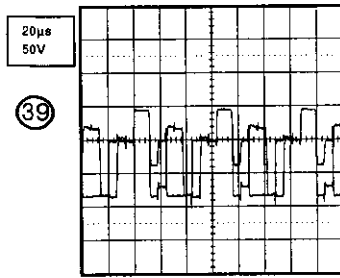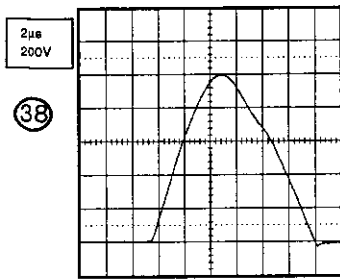

**NOTE:** The following waveforms were measured at the point of the corresponding balloon number in the schematic diagram.

# MECHANICAL EXPLODED VIEW

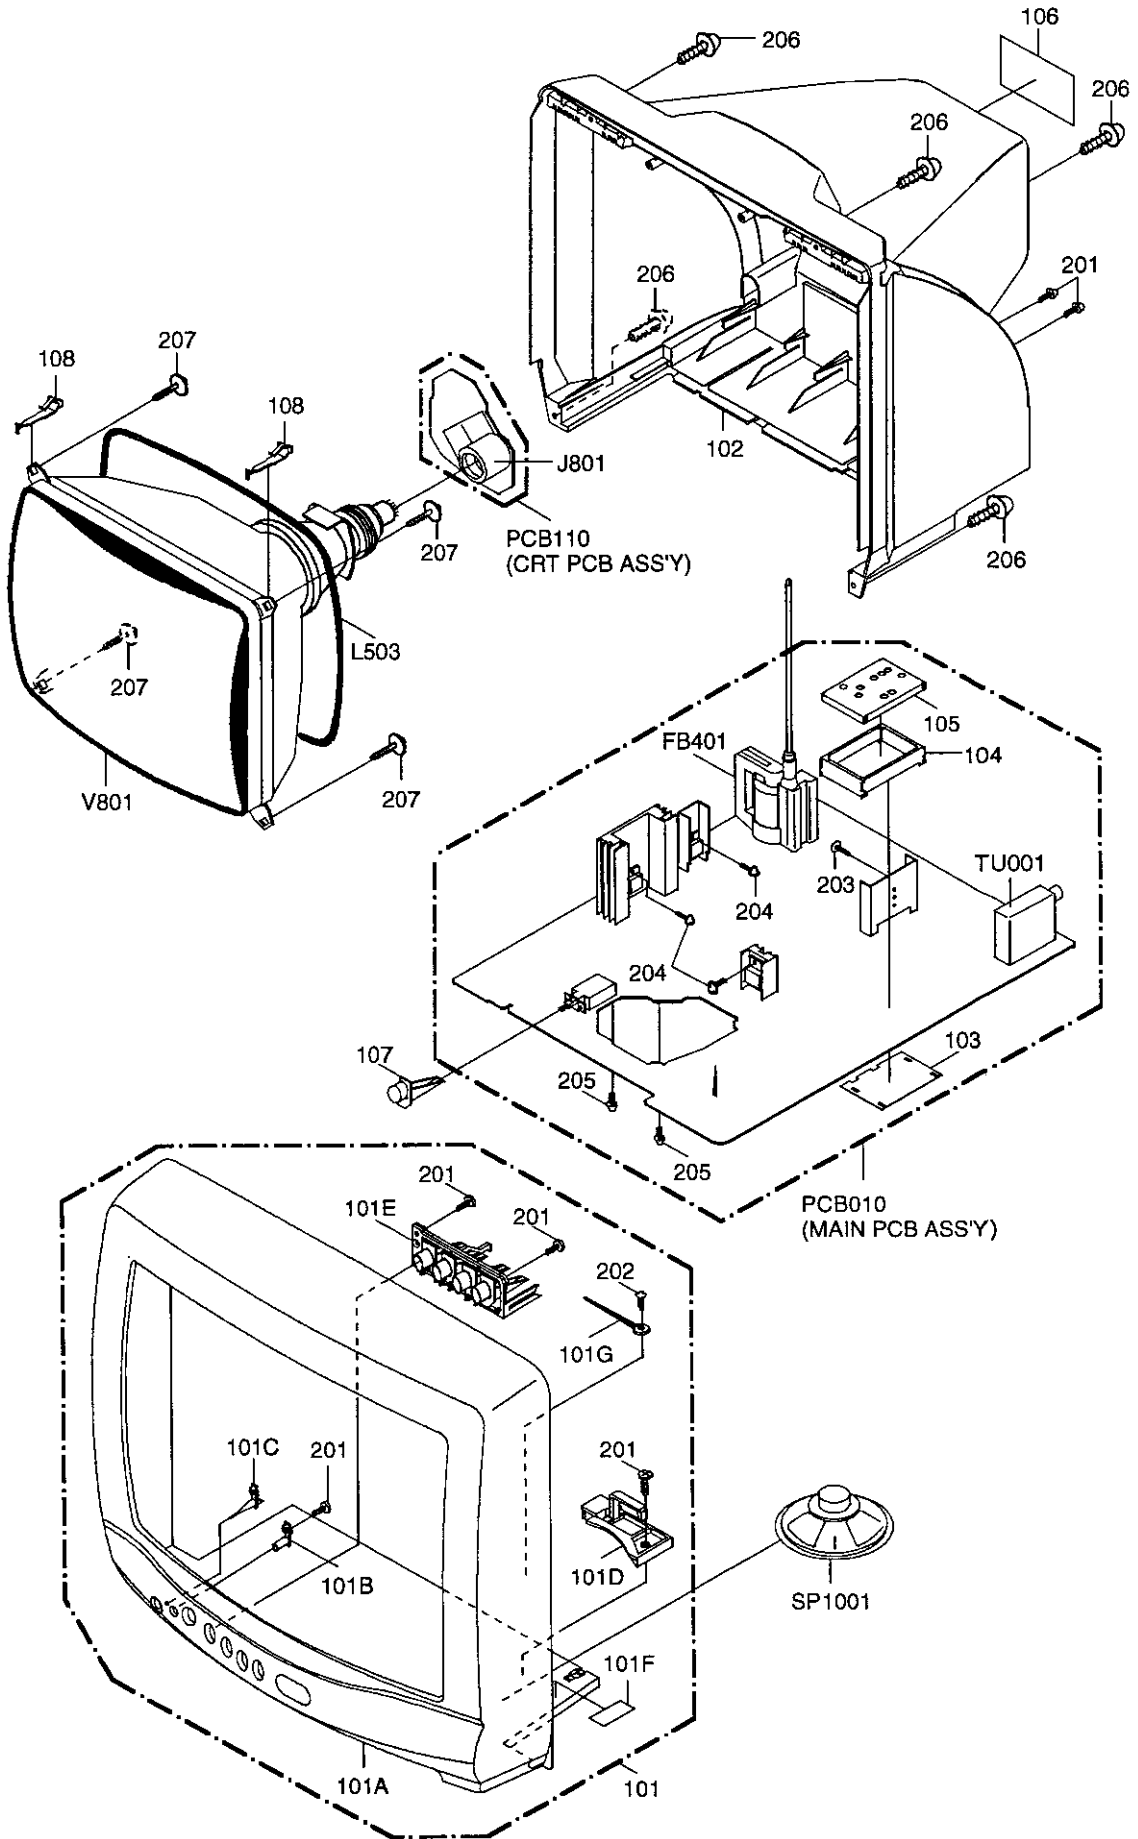

## MECHANICAL REPLACEMENT PARTS LIST

REF. NO.	PART NO.	DESCRIPTION		
101	7A701A047A	CABINET,FRONT ASS'Y		
101A	701WPC533	CABINET,FRONT		
101B	713WPAA048	GUIDE,REMOCON		
101C	713WPAA111	GLASS LED		
101D	735WPA0396	SPEAKER,HOLDER		
101E	735WPBA978	BUTTON,FRAME		
101F	800WQ0A001	SHEET 18X15XT0.8		
101G	8995034000	CORD CLIP UL CO.		
102	A3M445C740	CABINET,BACK ASS'Y		
103	752WSAA006	PLATE,SHIELD		
104	752WSAA008	SHIELD,CASE		
105	752WSAA013	SHIELD,LID		
106	722202A795	SHEET,RATING		
107	735WPBA809	BUTTON,POWER		
108	8994101000	HOLDER,CRT WIRE		
201	8110630A04	SCREW,TAP TITE(P)	BRAZIER	3x10
202	8110630604	SCREW,TAP TITE(P)	BRAZIER	3x6
203	8107630804	SCREW,TAP TITE(S)	BRAZIER	3x8
204	8109I30804	SCREW,TAP TITE(B)	WH7	3x8
205	8109630802	SCREW,TAP TITE(B)	BRAZIER	3x8
206	8117540A64	SCREW,TAPPING(B0)	TRUSS	4x16
207	8121J50B54	SCREW,TAP TITE(F)	GW20	5x28
---	791WHA0090	LAMIFILM,BAG		
---	792UHAA021	PACKAGE,TOP		
---	792UHAA022	PACKAGE,BOTTOM		
---	793UCDB295	GIFT BOX		
---	J3M44501A	INSTRUCTION BOOK		
---	JB5X0100	POLYBAG,INSTRUCTION		
---	A3M445C975	INSTRUCTION BOOK KIT		

# ELECTRICAL REPLACEMENT PARTS LIST

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
<b>RESISTORS</b>			<b>ICS</b>		
△ R411	R3X28A151J	R,METAL OXIDE 150 OHM 2W	IC101	I5PD0F009B	IC OECF009B
△ R418	R3X28B6R8J	R,METAL OXIDE 6.8 OHM 3W	IC102	I9UF032310	IC PST3231NR
△ R424	R3X181181J	R,METAL OXIDE 180 OHM 1W	IC199	A3M417I015	IC S-24C04BFJ-TB
△ R429	R635815R6J	R,FUSE 5.6 OHM 1W	IC201	I0WDE2246H	IC STV2246H or
△ R447	R635U2680J	R,FUSE 68 OHM 1/2W		I0WDE2246E	IC STV2246E
△ R501	R002T2155J	RC 1.5M OHM 1/2W	IC401	I0WTD81740	IC TDA8174A
△ R502	R3X181221J	R,METAL OXIDE 220 OHM 1W	IC502	I1KA97806A	IC KIA7806API
△ R503	R63581R22J	R,FUSE 0.22 OHM 1W	IC503	I1KA98R09A	IC KIA78R09API
△ R516	R3X181010J	R,METAL OXIDE 1 OHM 1W	△ IC504	0002E00610	IC PHOTO COUPLER
△ R517	R002T4155J	RC 1.5M OHM 1/4W	IC703	I0QF022330	IC NJM2233BM-T1
△ R803	R3X181153J	R,METAL OXIDE 15K OHM 1W	IC1001	I01DP75110	IC AN7511
△ R805	R3X181153J	R,METAL OXIDE 15K OHM 1W			
△ R807	R3X181153J	R,METAL OXIDE 15K OHM 1W			
<b>CAPACITORS</b>			<b>TRANSISTORS</b>		
C418	E5EZ3222M	CE 2200 UF 25V	Q103	T6YJ1037K0	TRANSISTOR,SILICON 2SA1037AKT146R,S
C437	P4J7F3394J	CMPP 0.39 UF 250V PMS	Q201	T8AA03881S	TRANSISTOR SILICON KTC3881S-RTK
C443	P4N8FJ822H	CMPP 0.0082UF 1.25KV	Q202	T8YJ2412K0	TRANSISTOR SILICON 2SC2412KT146 R,S
△ C501	P2122B224M	CMP 0.22 UF 275V ECQUL	Q204	T8YJ2412K0	TRANSISTOR SILICON 2SC2412KT146 R,S
△ C502	P2122B224M	CMP 0.22 UF 275V ECQUL	△ Q401	TD3Q021400	TRANSISTOR SILICON TT2140LS-YBC11
C503	C0JBB0713K	CC 0.001 UF 2KV B	Q402	TC5T01627Y	TRANSISTOR SILICON 2SC1627_Y(TPE2)
C504	C0JBB0713K	CC 0.001 UF 2KV B	Q403	TNYJB05001	COMPOUND TRANSISTOR DTC114EKAT146
△ C505	E52DHH820M	CE 82 UF 400V	△ Q501	T410K26470	FET 2SK2647-01MR
C507	C03L0R7B3K	CC 0.0012UF 2KV R	Q502	TCAT032034	TRANSISTOR, SILICON KTC3203_Y-AT
C517	C0PLRR713K	CC 0.001 UF 2KV R	Q506	T6YJ1037K0	TRANSISTOR,SILICON 2SA1037AKT146R,S
C521	E62NFB101M	CE 100 UF 160V	Q507	TCATC31980	TRANSISTOR,SILICON KTC3198-AT(Y,GR)
△ C527	CD39B0M2K	CC 470 PF 250V	Q510	TNYJC05001	COMPOUND TRANSISTOR DTC124EKAT146
△ C528	CD39E0M3M	CC 0.0022UF 250V	Q511	TAAT01281Y	TRANSISTOR SILICON KTA1281_Y
△ C532	CD39E0M13M	CC 0.001 UF 250V	Q605	T8YJ2412K0	TRANSISTOR SILICON 2SC2412KT146 R,S
C819	C0JBB0713K	CC 0.001 UF 2KV B	Q801	TCAT032070	TRANSISTOR SILICON KTC3207-AT
			Q802	TCAT032070	TRANSISTOR SILICON KTC3207-AT
			Q803	TCAT032070	TRANSISTOR SILICON KTC3207-AT
<b>DIODES</b>			<b>COILS &amp; TRANSFORMERS</b>		
D001	D97U03301B	DIODE,ZENER MTZJ33B T-77	L001	02167F100J	COIL 10 UH
D101	0021721150	LED SLR-342VCT32	L101	02167F100J	COIL 10 UH
D102	D97U05R11B	DIODE,ZENER MTZJ5.1B T-77	L102	02167F100J	COIL 10 UH
D108	D1VT001330	DIODE,SILICON 1SS133T-77	L103	021LA6100K	COIL 10 UH
D403	D2WT011E10	DIODE SILICON 11E1-EIC	L202	02167F3R3J	COIL 3.3 UH
D404	D2WTAU02A0	DIODE SILICON AU02A-EIC	L203	021LA62R2K	COIL 2.2 UH
D405	D2WTAU02A0	DIODE SILICON AU02A-EIC	L204	021LA6180K	COIL 18 UH
D406	D2WT011E10	DIODE SILICON 11E1-EIC	L206	021LA6R27M	COIL 0.27 UH
D407	D2WT011E10	DIODE SILICON 11E1-EIC	L207	033700005R	COIL,VIDEO IFT 3700005
D410	D2WTAU02A0	DIODE SILICON AU02A-EIC	L401	021679472K	COIL 4.7 MH
D414	D2WT011E10	DIODE SILICON 11E1-EIC	△ L501	029T000094	COIL,LINE FILTER 0R7A223F24Y
△ D501	D2WTRM11C0	DIODE SILICON RM11C-EIC	L502	02AHB9A972	CORE,FERRITE W5T29X7.5X19
△ D502	D2WTRM11C0	DIODE SILICON RM11C-EIC	△ L503	028R140018	COIL,DEGAUSS 8R140018
△ D503	D2WTRM11C0	DIODE SILICON RM11C-EIC	L601	02167F100J	COIL 10 UH
△ D504	D2WTRM11C0	DIODE SILICON RM11C-EIC	L702	021LA6100K	COIL 10 UH
D505	D1VT001330	DIODE,SILICON 1SS133T-77	L703	021LA6100K	COIL 10 UH
D507	D1VT001330	DIODE,SILICON 1SS133T-77	L704	021LA6100J	COIL 10 UH
D508	D97U01801B	DIODE,ZENER MTZJ18B T-77	L714	02167F100J	COIL 10 UH
D509	D2WT011E10	DIODE SILICON 11E1-EIC	T401	045009003J	TRANS,HORIZONTAL DRIVE ETH09K14BZ
D510	D2WXR02AM0	DIODE SILICON RU2AM-EIC	△ T501	048129110H	TRANSFORMER,SWITCHING 8129110H
D511	D2WXN49370	DIODE SILICON 1N4937	<b>JACKS</b>		
D512	D2WXS81400	DIODE SCHOTTKY SB140-EIC	J701	063G100042	SOCKET,21PIN 0350_9982_05
D513	D28T21DQN9	DIODE SCHOTTKY 21DQ09N-TA2B1	J702	060Q401077	RCA JACK AV1-09D-3
D514	D1VT001330	DIODE,SILICON 1SS133T-77	J703	060Q401076	RCA JACK AV1-09D-4
△ D515	D2WXS81400	DIODE SCHOTTKY SB140-EIC	J801	066F120018	SOCKET,CATHODE RAY TUBE ISMS01S
D516	D28T21DQN9	DIODE SCHOTTKY 21DQ09N-TA2B1	J1001	060J121014	JACK,RCA,3.5 MSJ-035-12A_PC
D517	D2WT011E10	DIODE SILICON 11E1-EIC	<b>SWITCHES</b>		
D518	D1VT001330	DIODE,SILICON 1SS133T-77	SW101	0504101T34	SWITCH,TACT EVQ21505R
D521	D1VT001330	DIODE,SILICON 1SS133T-77	SW102	0504101T34	SWITCH,TACT EVQ21505R
D522	D97U01801B	DIODE,ZENER MTZJ18B T-77	SW103	0504101T34	SWITCH,TACT EVQ21505R
D523	D1VT001330	DIODE,SILICON 1SS133T-77	SW104	0504101T34	SWITCH,TACT EVQ21505R
D524	D97U03R61B	DIODE,ZENER MTZJ3.6B T-77	△ SW501	0530105019	SWITCH ESB92S22B
D525	D97U01201B	DIODE,ZENER MTZJ12B T-77	<b>VARIABLE RESISTORS</b>		
D528	D97U05R61B	DIODE,ZENER MTZJ5.6B T-77	VR401	V1163H3BTC	VOLUME,SEMI FIXED EVNVCYAA03BE3
D601	D1VT001330	DIODE,SILICON 1SS133T-77	VR420	V1163Q2BTC	VOLUME,SEMI FIXED EVNVCYAA03BQ2
D602	D1VT001330	DIODE,SILICON 1SS133T-77	VR501	V1163I3BTC	VOLUME,SEMI FIXED EVNVCYAA03B13
D603	D1VT001330	DIODE,SILICON 1SS133T-77	<b>P.C.BOARD ASSEMBLIES</b>		
D604	D2WT011E10	DIODE SILICON 11E1-EIC	PCB010	A3M417C010K	PCB ASSY TMB557A
D606	D97U06R81B	DIODE,ZENER MTZJ6.8B T-77	PCB110	A3M417C110K	PCB ASSY TCB416A
D607	D97U06R81B	DIODE,ZENER MTZJ6.8B T-77	<b>MISCELLANEOUS</b>		
D608	D97U06R81B	DIODE,ZENER MTZJ6.8B T-77	B501	024HT03563	CORE,BEADS W4BRH3.5X6X1.0X2
D609	D97U05R61B	DIODE,ZENER MTZJ5.6B T-77	B504	024HT03553	CORE,BEADS W5RH3.5X5X1.0
D709	D97U05R11B	DIODE,ZENER MTZJ5.1B T-77	B1001	024HT03564	CORE,BEADS W4BRH3.5X6X1.0
D807	D1VT001330	DIODE,SILICON 1SS133T-77	B1002	024HT03564	CORE,BEADS W4BRH3.5X6X1.0
D808	D1VT001330	DIODE,SILICON 1SS133T-77	B1003	024HT03553	CORE,BEADS W5RH3.5X5X1.0
D809	D1VT001330	DIODE,SILICON 1SS133T-77	BT001	1412004013	BATTERY,MANGAN R03(AB)2PXGPI
			BT002	1412004013	BATTERY,MANGAN R03(AB)2PXGPI

## ELECTRICAL REPLACEMENT PARTS LIST

REF. NO.	PART NO.	DESCRIPTION	
<b>MISCELLANEOUS</b>			
△ CD501	1206455819	CORD AC BUSH	6455819
CD801	1278140031	BRAIDED WIRE	SM2041-007
CD802	WDL6028038	FLAT CABLE AWM2468	AWG26 6C BLACK 280MM
CD803	WBL6026038	FLAT CABLE AWM2468	AWG26 4C BLACK 260MM
CF201	1012T5R503	FILTER,CERAMIC TRAP	TPS5.5MB-TF21
CF202	1022038R9E	FILTER,SAW	SAFGP38M9VAKZ00B
CF303	1012T04001	FILTER,CERAMIC TRAP	MKT40.4MA110P-TF
CP001	069W01001A	CONNECTOR PCB SIDE	003P-2100
CP101	069X160379	CONNECTOR PCB SIDE	06JQ-ST
CP401	069S450089	CONNECTOR PCB SIDE	A1561WV2-A5P
CP502	069S420110	CONNECTOR PCB SIDE	A1561WV2-2P
CP801	069W01001A	CONNECTOR PCB SIDE	003P-2100
CP1001	069W120019	CONNECTOR PCB SIDE	TID-X02P-B2
CP802A	067U006049	WIRE HOLDER	B2013H02-6P
CP802B	067U006049	WIRE HOLDER	B2013H02-6P
CP803A	067U004029	WIRE HOLDER	B2013H02-4P
CP803B	067U004029	WIRE HOLDER	B2013H02-4P
EL002	124120301A	EYE LET	XRY2DX30BD
△ F501	080NT04004	FUSE	50T040H
△ FB401	043214039F	TRANSFORMER,FLYBACK	FNI-14B002
FH501	06710T0009	HOLDER,FUSE	EYF-52BCY
FH502	06710T0009	HOLDER,FUSE	EYF-52BCY
OS101	0773071001	REMOTE RECEIVER	RPM7138-WH5
SP1001	070C132019	SPEAKER	SA08A05BWC
△ TH501	D8E080B100	DEGAUSS ELEMENT	B59104-T80-B10
TM101	076N0GE040	TRANSMITTER	RC-GE040
TU001	0145517006	TUNER,VHF-UHF	TUWRF4EG-778F2
△ V801	098Y1404B9	CRT W/DY	A34JXV70X53N45
X101	100CT4R013	CRYSTAL	HC-49/U-S
X601	100CT4R408	CRYSTAL	HC-49/U

### RESISTOR

RC..... CARBON RESISTOR

### CAPACITORS

CC..... CERAMIC CAPACITOR  
 CE..... ALUMI ELECTROLYTIC CAPACITOR  
 CP..... POLYESTER CAPACITOR  
 CPP..... POLYPROPYLENE CAPACITOR  
 CPL..... PLASTIC CAPACITOR  
 CMP..... METAL POLYESTER CAPACITOR  
 CMPL..... METAL PLASTIC CAPACITOR  
 CMPP..... METAL POLYPROPYLENE CAPACITOR

SPEC.NO.	M3M4-45C
O/R NO.	U423534