


ORION VHS


Video Cassette Recorder

HQ HIGH QUALITY PICTURE

VH-1070RC

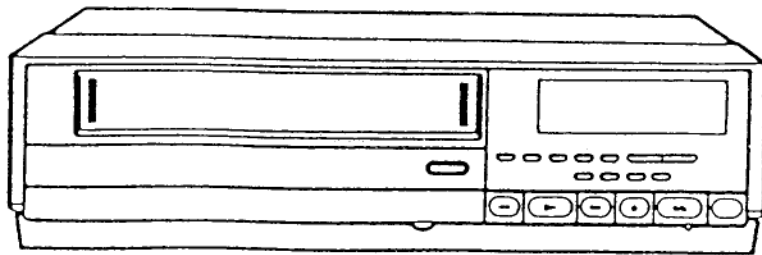

MFR'S Version:



3331

PREVENTIVE CHECKS AND SERVICE INTERVALS

The following standard table depends on environmental conditions and usage. Unless maintenance is properly carried out, the following service intervals may be quite shortened as harmful effects may be had on other parts. Also, long term storage or abuse may cause transformation and aging of rubber parts.


Parts Name	Time					Notes
	500 hours	1,000 hours	1,500 hours	2,000 hours	3,000 hours	
Head, Full Erase	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Clean those parts in contact with the tape
Head, Audio Control	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	
Belt, Loading		<input type="checkbox"/>		<input type="checkbox"/>		Clean the rubber, and parts which the rubber touches.
Belt, Reel		<input type="checkbox"/>		<input type="checkbox"/>		
Pinch Roller	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Replace when rolling becomes abnormal
Capstan DD Unit					<input type="checkbox"/>	
Motor, Loading					<input type="checkbox"/>	
Tension Band Ass'y					<input type="checkbox"/>	
Capstan Shaft	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	
Impedance Roller	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	
Tape Running Guide Post	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	
Unit, Cylinder	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	

: Replace
 : Clean

■ Clean the upper drum (especially the video heads) in the direction of drum rotation using a thick, textured cloth with a high quality methyl alcohol. Avoid wiping vertically as this may cause damage to the video heads.



HOW TO REMOVE AND INSTALL RIBBON WIRE IN CASE OF DISCONNECTION.

- To remove the wire, simultaneously press both parts indicated by arrow (A).
- To install the wire, do not press the parts indicated by arrow (A), but insert the wire into the connector.

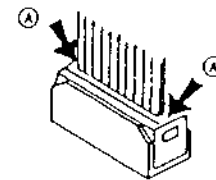

CONNECTOR

DECK PARTS LOCATION

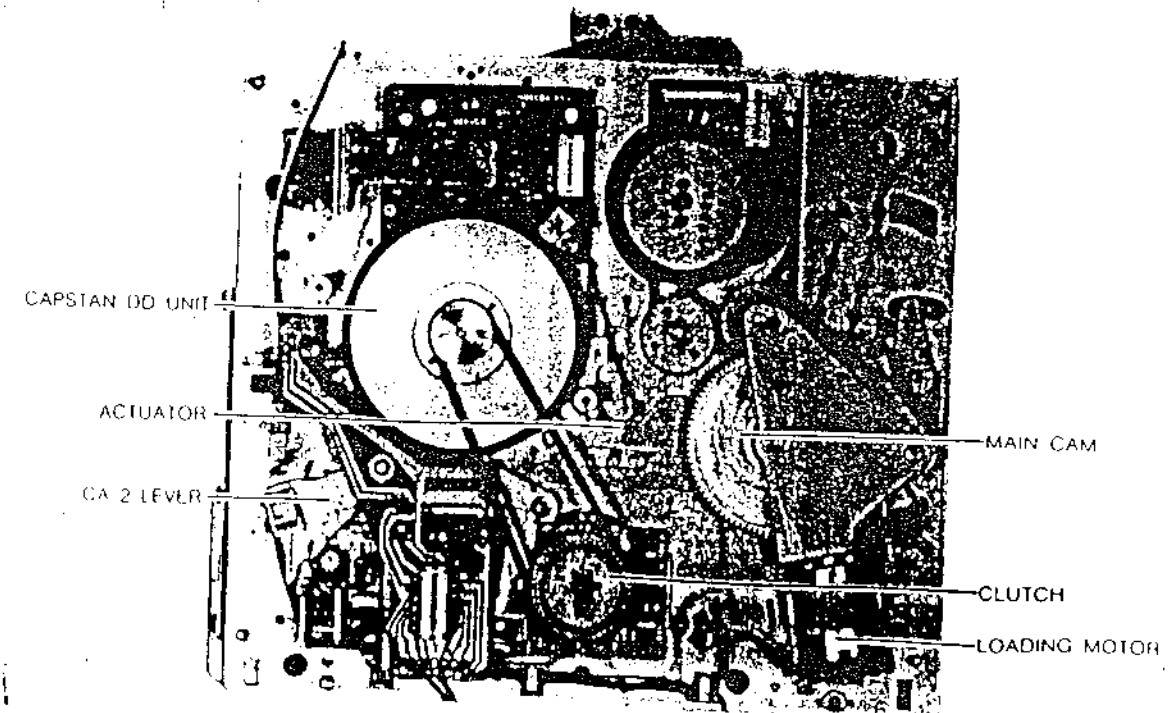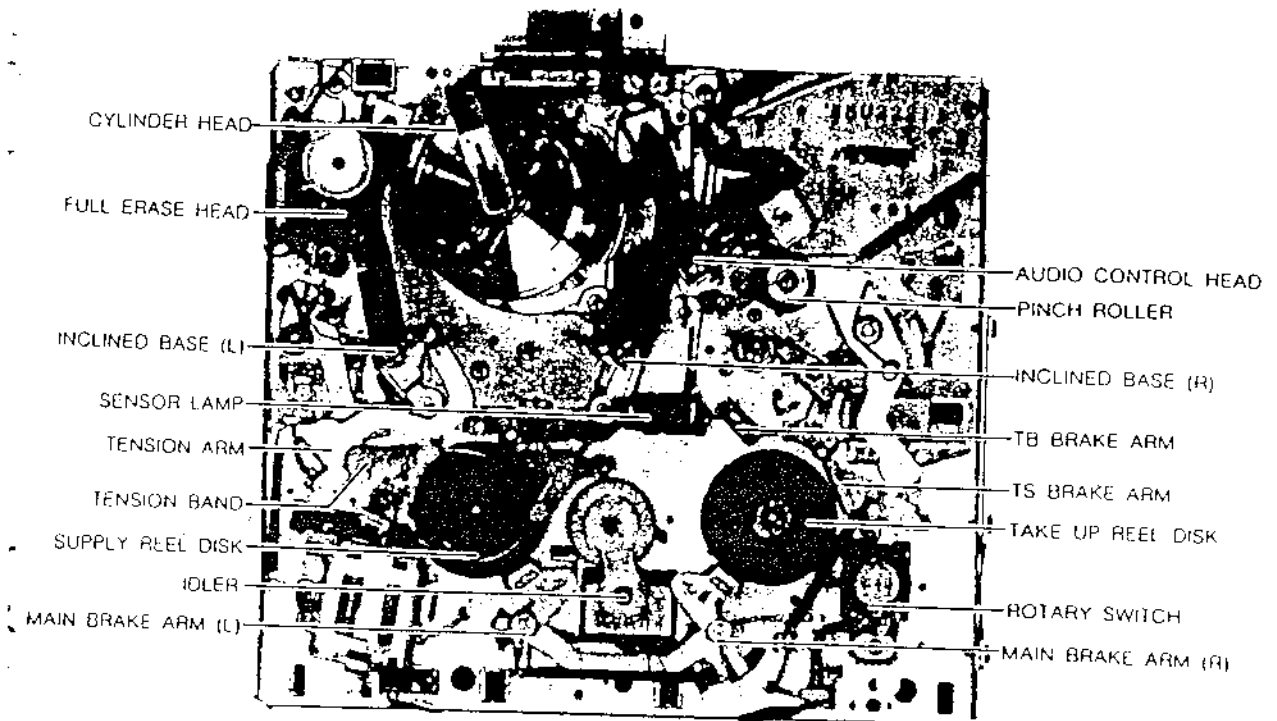

METHODS OF ADJUSTMENT AND REPLACEMENT

● PRECAUTION

○ Remove the following items before adjusting the Deck and starting work.

1. Top Cabinet (2 screws)
2. Bottom Plate (5 screws)
3. Front Panel
4. Stage
(Refer to STAGE REMOVAL AND INSTALLATION)

Carefully read each item in ● NOTE sections before starting work.

To operate Deck with stage removed from the unit.

- * Short the Cassette In Switch Terminal with the Deck Chassis.
- * Place an object which weighs between 350g and 500g on the Video Tape to keep it steady while using the Video Cassette Tape. (Do not place an object which weighs over 500g.)


HOW TO REMOVE AND INSTALL STAGE

● REMOVAL

1. Disconnect the eight pin connector (CP1001), which has been connected to the stage PCB, from the system control PCB.
2. Remove 2 screws held to inside panel.
3. Remove 2 screws (Tapping (Bo) 3x10) while stage is locked when power switch is OFF.
4. Push the stage toward arrow mark, and lift up to remove the stage.

● NOTE

1. When you remove and install the stage, be careful not to touch guide pin or cylinder head.
2. Be careful not to break connectors or cut leads.

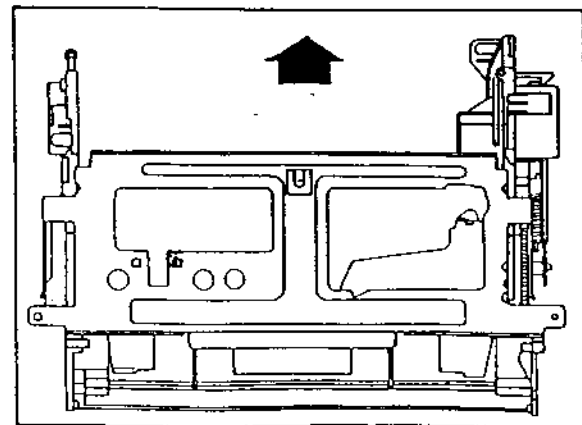

INSTALLATION

1. Set the stage and hold with the 2 screws (Tapping (Bo) 3x10).
2. Attach 2 screws to inside panel.
3. Connect the eight pin connector (CP1001), which comes from stage, to system control PCB.

● NOTE AFTER INSTALLATION

1. Check the following:

- a. The Front Loading Operation works well when turning on the power and when inserting a cassette pack into the stage.
- b. It begins play mode after Play Button is pushed.
- c. It begins recording mode after Recording Button is pushed.
- d. It ejects after Eject Button is pushed.

● NOTE

1. Under this operation system, the end sensor and the start sensor are opened, so the auto rewind at the end of the tape will not work.
2. When you want to make a tape run without the stage, set an object which weighs approximately 500g on the tape.

● A-1: REPLACEMENT OF REEL DISK AND CONFIRMATION OF ITS HEIGHT


● REMOVAL

(Supply Reel Disk)

1. Remove the SS Brake Spring from the Loading Base.
2. Remove the SS Brake.
3. Remove the tension band.
4. Remove the polyslider washer ①.
5. Separate the mechanical brake from the reel disk.
6. Pull the supply reel disk ② upward and replace it.

(Take-up Reel Disk)

1. Remove the TB Brake.
2. Remove the polyslider washer ①.
3. Separate the mechanical brake from the reel disk.
4. Pull the take-up reel disk ④ upward and replace it.

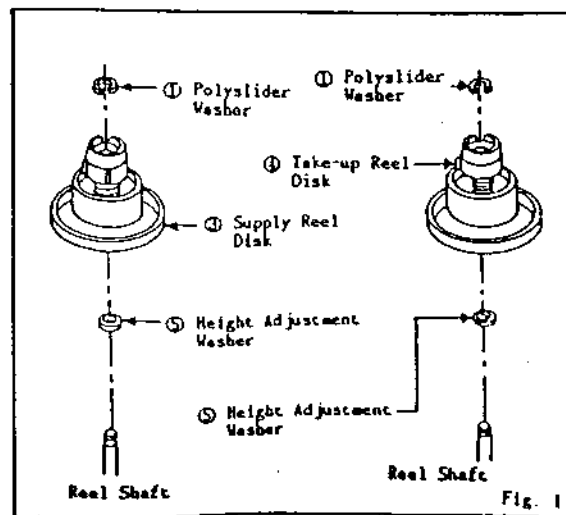

METHODS OF ADJUSTMENT AND REPLACEMENT

● INSTALLATION

(Supply Reel Disk)

1. Clean the reel disk shaft and put in height adjusting washer ⑤.
2. Install new supply reel disk.
3. Make height adjustment of the reel disk using the master plane (JG022) and the reel table height chip (JG024).
4. Pull out the new supply reel disk. After oiling (Cosmo Oil Hydro HV100) the reel disk shaft, hold the new supply reel disk again.
5. Install the polyslider washer ①.
6. Install the tension band.
7. Install the SS Brake in the chassis.
8. Install the Spring in the Loading Base.


(Take-up Reel Disk)

1. Clean the reel disk shaft and put in height adjusting washer ⑤.
2. Install new take-up reel disk.
3. Make height adjustment of the reel disk using the master plane (JG022) and the reel table height chip (JG024).
4. Pull out the new reel take-up disk. After oiling (Cosmo Oil Hydro HV100) the reel disk shaft, hold the new take-up reel support again.
5. Install the polyslider washer ①.
6. Install the take-up side (TS) Brake.

● NOTE

1. Make height adjustment of the reel disk after replacement.
2. Be careful not to damage the tension band at the time of removal and installation.
3. Be careful not to damage the TS Brake.
4. Be careful not to scratch the reel disk shaft with the polyslider washer or tool at the time of removal and installation.
5. After installation adjust the tension post position and the tape tension when playing back in accordance with ● A-7.
6. Refer to ● A-2 for reel disk height adjustment.

● A-2: HEIGHT CONFIRMATION AND ADJUSTMENT

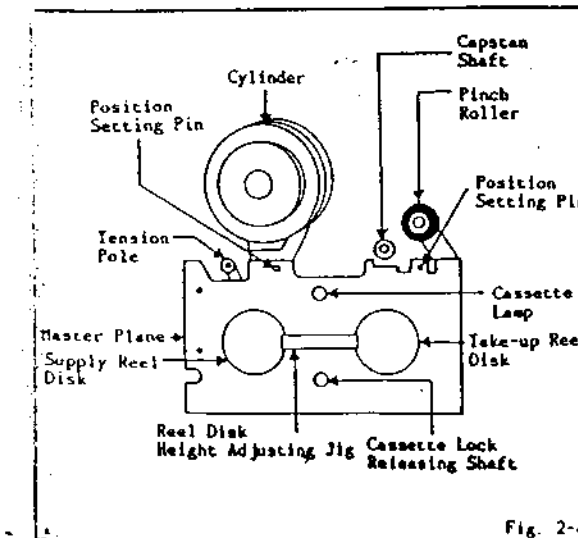


● ADJUSTMENT

1. Set the master plane (JG022) at mechanism framework, taking care not to scratch the drum, as shown in Fig. 2-a.

2. Confirm that the master plane (JG022) sits between A and B, as shown in Fig. 2-b, using the reel table height chip (JG024). In case it is beyond the range of set-up value, adjust it by the height adjusting washer, making up-down play within 0.1~0.5mm.

● NOTE

1. Use same thickness adjustment washer (REF#S21) as found in unit.

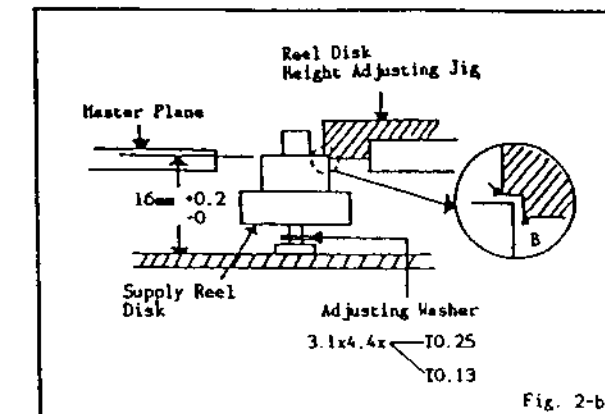

NOTE: Refer to the table below for possible cause of problems when confirmation cannot be made for the indicated items.

CONFIRMATION ITEM	CHECK POINT (REPLACEMENT)
A-3 A-4 A-5 A-7	Capstan belt may be stretched. Clutch may be worn out (if so, change reel disk.) Idler ASS'Y may be worn out.
A-6 A-8	Tension band may be worn out.
A-15	Main brake belt may be worn out.

LIST OF CONFIRMATION ITEM:

- A-3 Fast forward and its take-up torque confirmation
- A-4 Rewind and its take-up torque confirmation
- A-5 Record take-up torque confirmation
- A-6 Confirmation of fast forward back tension
- A-7 Confirmation of rewind
- A-8 Confirmation of search/cue back tension
- A-15 Confirmation of reel brake torque

● A-3: CONFIRMATION OF FAST FORWARD AND ITS TAKE-UP TORQUE

● CONFIRMATION

1. Set torque gauge (JG002D) on take-up reel disk, and place unit in fast forward mode.
2. Confirm that torque is more than 800g.cm.

● NOTE

1. After setting the torque gauge (JG002D) on the reel disk, hold the gauge in place. Push the Fast Forward Button and the reel disk will begin to turn.
2. Carry out this confirmation and adjustment without using a video cassette tape.

METHODS OF ADJUSTMENT AND REPLACEMENT

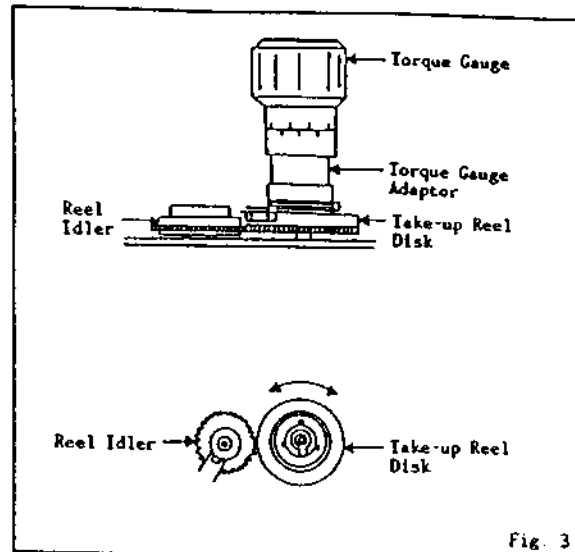


Fig. 3

■ A-4: CONFIRMATION OF REWIND AND ITS TAKE-UP TORQUE

● CONFIRMATION

1. Set the torque gauge (JG002D) on the supply reel disk, and place the unit in rewinding mode.
2. Confirm that torque is more than 800g.cm.

● NOTE

1. Hold the torque gauge (JG002D) in place when you push the Rewind Button. The reel disk will begin to turn, after setting the torque gauge (JG002D) on the reel disk.
2. Carry out this confirmation and adjustment without using a video cassette tape.

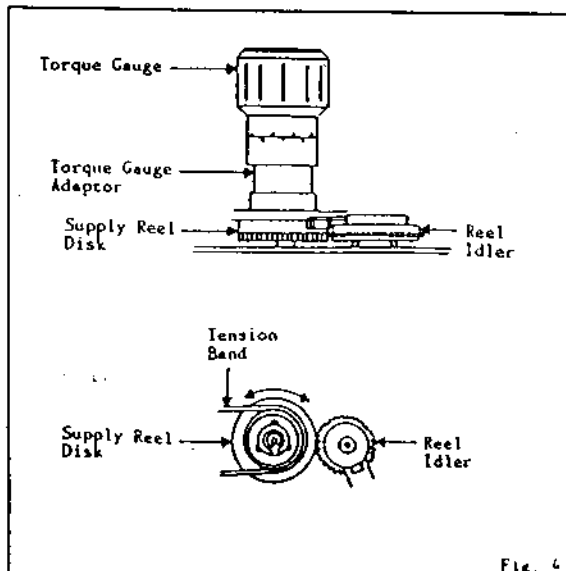


Fig. 4

■ A-5: CONFIRMATION OF RECORDING TAKE-UP TORQUE

● CONFIRMATION

1. Set the torque gauge (JG027) on the rewind reel disk, then check REC mode.
2. Make sure that the torque covers the range, 100~230g.cm.

■ A-6: CONFIRMATION OF FAST FORWARD BACK TENSION

● CONFIRMATION

1. Set the unit in the fast forward mode by pushing Fast Forward Button.
2. Put the torque gauge (JG002E) on the supply reel disk and make slow right turn (one turn in a few seconds). Confirm the torque is within set-up value (15~35g.cm).

● NOTE

1. Put the torque gauge (JG002E) on the reel disk steadily and measure.

■ A-7: CONFIRMATION OF REWIND

● CONFIRMATION

1. Set the unit in the rewind mode by pushing Rewind Button.
2. Put the torque gauge (JG002E) on the take-up reel disk and make slow left turn (one turn in a few seconds) and confirm the torque is within set value (30~60g.cm).

● NOTE

Put the torque gauge (JG002E) on the reel disk steadily and measure.

■ A-8: CONFIRMATION OF SEARCH/CUE BACK TENSION

● CONFIRMATION

1. Set the unit in the play mode by pushing Play Button.
2. Push Search Cue Button and the unit will be in the search cue mode. Confirm SS brake is working on the supply reel disk.
3. Put the torque gauge (JG002E) on the supply reel disk and make slow right turn (one turn in a few seconds). Measure torque and confirm it satisfies set-up point (above 90g.cm).

● NOTE

1. After positioning the tension arm, conduct confirmation and adjustment of visual search cue back tension.
2. Put the torque gauge (JG002E) on the reel disk steadily and measure. If the torque gauge is moving, a correct measurement cannot be accomplished.

■ A-9, 10, 11: NOT REQUIRED FOR THIS MODEL

METHODS OF ADJUSTMENT AND REPLACEMENT

■ A-12: CONFIRMATION AND ADJUSTMENT OF TENSION POLE POSITION

● CONFIRMATION

1. Load a E-180 tape, and press the PLAY button to set the playback mode.
2. As soon as the guide rollers, L, R begin to draw the tape from the cassette, the tension pole shall move to the left, thus loading will start. Confirm tension pole position at this stage.
3. When the tape (E-180) is near the beginning, confirm by eye that the center of the tension pole is positioned 4.5~6.5mm to the left from center of P1 post. (Fig. 12-a)
4. Confirm that the video tape is not curling at the flange of P1 post or is not running on flanges.

● POSITIONING

1. In case tension pole is positioned to the left of P1 post center by less than 4.5mm, move tension band adjustment angle ① in the direction of arrow B (Fig. 12-b), then the screw ② shall be tightened.
2. In case tension pole is positioned on the left of P1 post center by more than 6.5mm, move tension band adjustment angle ① in the direction of arrow A (Fig. 12-b), then the screw ② shall be tightened.

● NOTE

1. After completion of positioning, do not forget to fix the position with paint.
2. Do not overtighten the screw, otherwise the threads may be damaged.

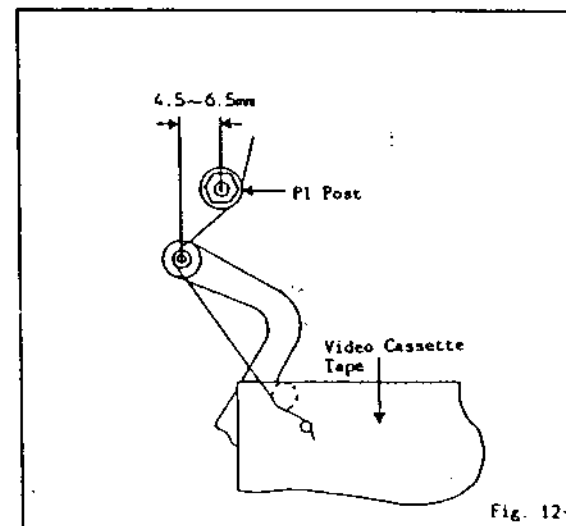


Fig. 12-a

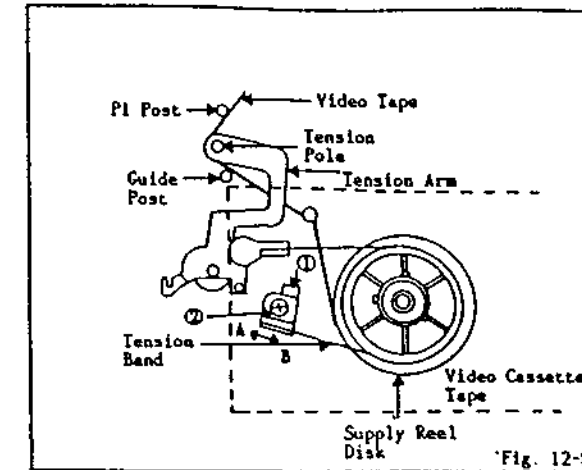


Fig. 12-b

■ A-13: NOT REQUIRED FOR THIS MODEL

■ A-14: CONFIRMATION AND ADJUSTMENT OF BACK TENSION ON RECORDING AND PLAYBACK

● CONFIRMATION

○ When you use a back tension measuring cassette.

1. Set the measuring cassette tape.
2. Set the unit in the recording mode. At this time, confirm, by the pointer of the measuring cassette tape, that the back tension is within set-up points (20~50g.cm).
3. Confirm the video tape is tightly running on the fixed guide.
4. At the beginning and ending of the tape, confirm there is no sag or damage on edges of the tape.

○ When you use tentelometer.

1. Set E-180 cassette tape to the beginning.
2. Set the unit in the recording mode.
3. Pull Impedance roller toward arrow A as in Fig. 14-a and set the tentelometer as in Fig. 14-a, 14-b confirming the tape tension is within set-up points (23~30g).
4. Confirm the video tape is running tight on P1 post.
5. Confirm there is no sag or damage on edges of the tape both at the beginning and end of the tape.

● ADJUSTMENT

1. In case the tape tension is weaker than 23g, adjust the tension plate on arrow A side of Fig. 14-c and re-confirm the tension.
2. In case the tape tension is stronger than 30g, adjust the tension plate on arrow B side of Fig. 14-c and re-confirm the tension. (Use adjusting screwdriver, JG032)

METHODS OF ADJUSTMENT AND REPLACEMENT

NOTE

1. The tentelometer should not touch F/E Head, drum or other components in the tape path.
2. When you use the back tension measuring cassette, it is recommended to also use a tentelometer for confirmation.
3. Use lock paint after adjustment.
4. Do not overtighten the screw, as threads may be damaged.

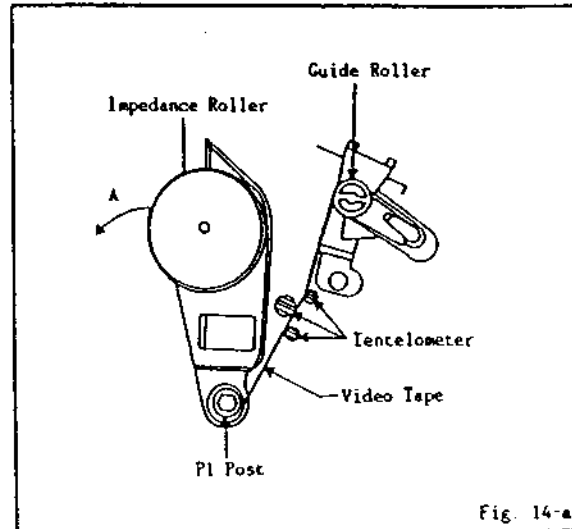


Fig. 14-a

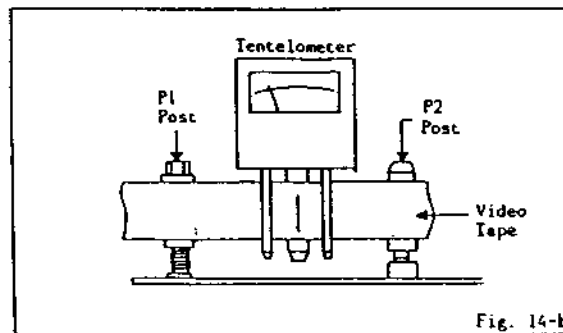


Fig. 14-b

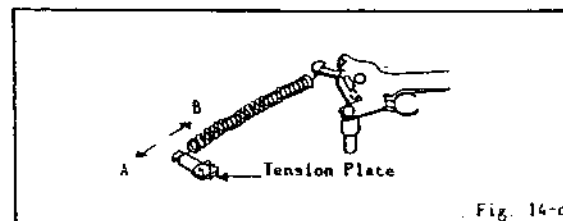


Fig. 14-c

■ A-15: CONFIRMATION OF REEL BRAKE TORQUE

■ A-15-1: Confirmation of take-up reel brake

● CONFIRMATION

1. Set the stop mode.
2. Set the torque gauge (JG002G) to the take-up reel and turn it counter-clockwise. Confirm that the brake torque is more than 250g.cm. Refer to Fig. 15-a.

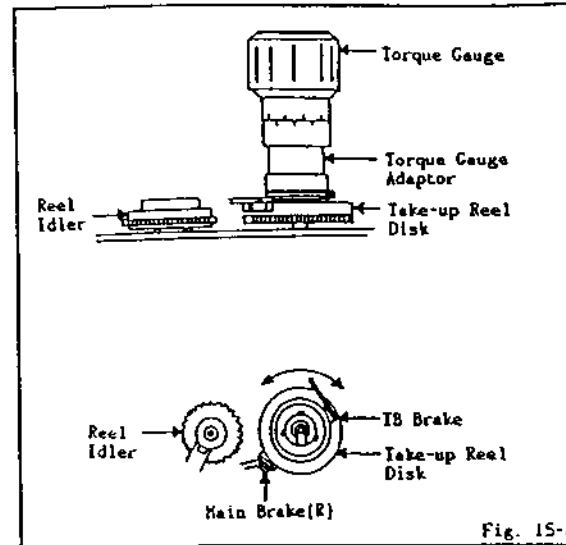


Fig. 15-a

■ A-15-2: Confirmation of supply reel brake

● CONFIRMATION

1. Set the stop mode.
2. Set the torque gauge (JG002G) to the supply reel and turn it clockwise. Confirm that the brake torque is more than 250g.cm. Refer to Fig. 15-b.

● NOTE

1. Separate the idler from the reel and confirm the brake torque.

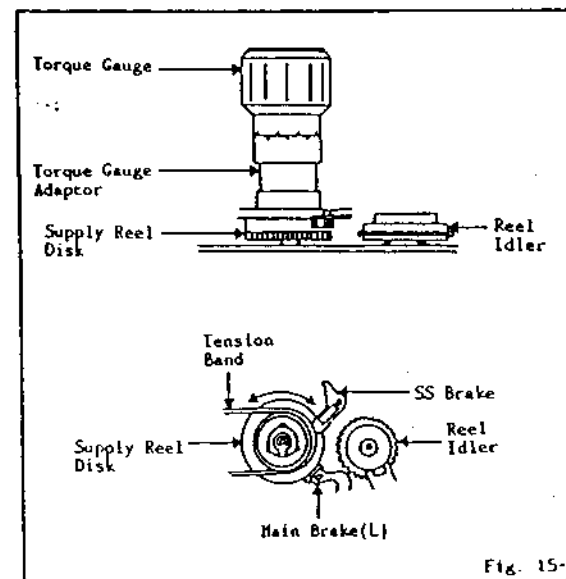


Fig. 15-b

METHODS OF ADJUSTMENT AND REPLACEMENT

■ A-16: CONFIRMATION AND ADJUSTMENT FOR THE HEIGHT OF P1 POST, P4 POST, LIMITER POST

● CONFIRMATION

1. Confirm that when tape is running there is no crease or bend on the tape edge at the places shown in Fig. 16-a.

■ A-16-1: Confirmation and adjustment for the height of P1 post

● ADJUSTMENT

1. Set the master plane (JG022) to the Deck.
2. Put the Post Adjustment Tip (JG026) on the master plane (JG022), adjust the height by sliding the 'A' part of Post Adjustment Tip (JG026) to the 'a' direction of the master plane (JG022). Refer to Fig. 16-b, c.

■ A-16-2: Confirmation and adjustment for the height of P4 post

● ADJUSTMENT

1. Set the master plane (JG022) to the Deck.
2. Put the Post Adjustment Tip (JG026) on the master plane (JG022), adjust the height by sliding the 'A' part of Post Adjustment Tip (JG026) to the 'b' direction of the master plane (JG022). Refer to Fig. 16-b, c.

■ A-16-3: Confirmation and adjustment for the height of limiter post

● ADJUSTMENT

1. Set the master plane (JG022) to the Deck.
2. Put the Post Adjustment Tip (JG026) on the master plane (JG022), adjust the height by sliding the 'A' part of Post Adjustment Tip (JG026) to the 'c' direction of the master plane (JG022). Refer to Fig. 16-b, c.

● NOTE

1. The following adjustment must be carried out only when the height is not correct.
2. After adjustment, check the running condition with a video tape.
3. After completion of adjustment, carry out tape running adjustment. After adjusting the guide roller (L, R), check as shown in Fig. 16-a.
4. Do not move the nut after completion of adjustment.
5. After completing the adjustment, always fix P1 post and the guide roller with a lock screw.

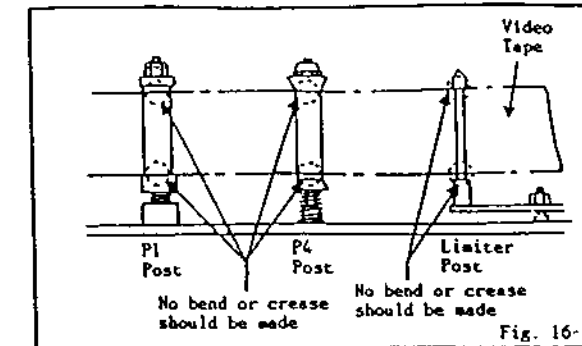


Fig. 16-a

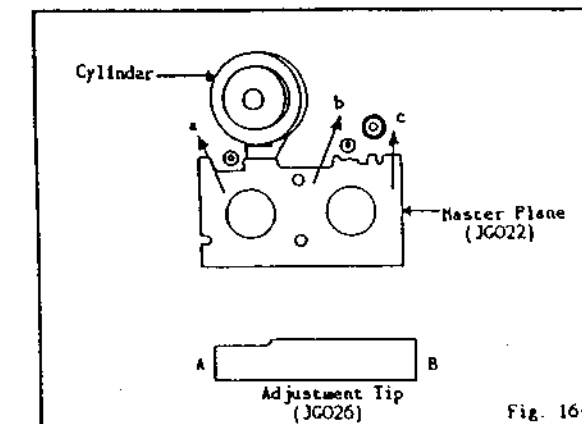


Fig. 16-b

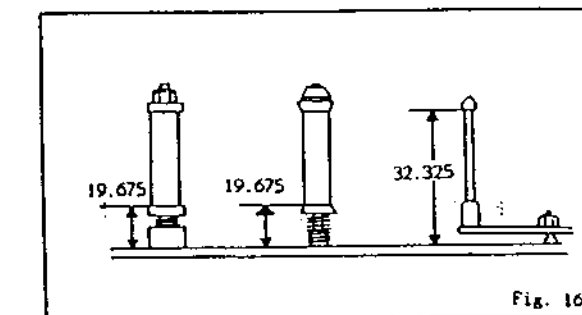


Fig. 16-c

■ A-17: REPLACEMENT OF A/C HEAD

● REPLACEMENT

1. Remove solder from the lead wires placed on A/C Head P.C. Board, and take the lead wires away from P.C. Board.
2. Loosen SET SCREW (1) using phillips screwdriver (Fig. 17-a).
3. Remove screw (2) using phillips screwdriver.
4. Remove A/C Head screw (3) using phillips screwdriver. Carefully do this, because there is a spring between the plate and A/C Head screw.

● NOTE

1. After completion of replacement, do not fail to carry out the tape running adjustment. Do not touch heads by any means when replacing A/C Head.

METHODS OF ADJUSTMENT AND REPLACEMENT

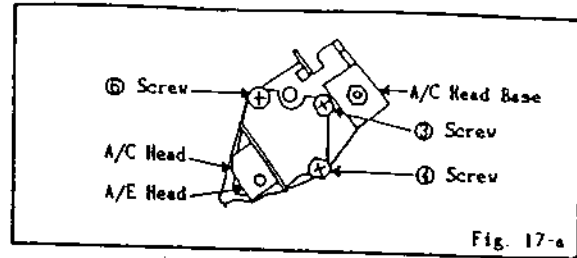


Fig. 17-a

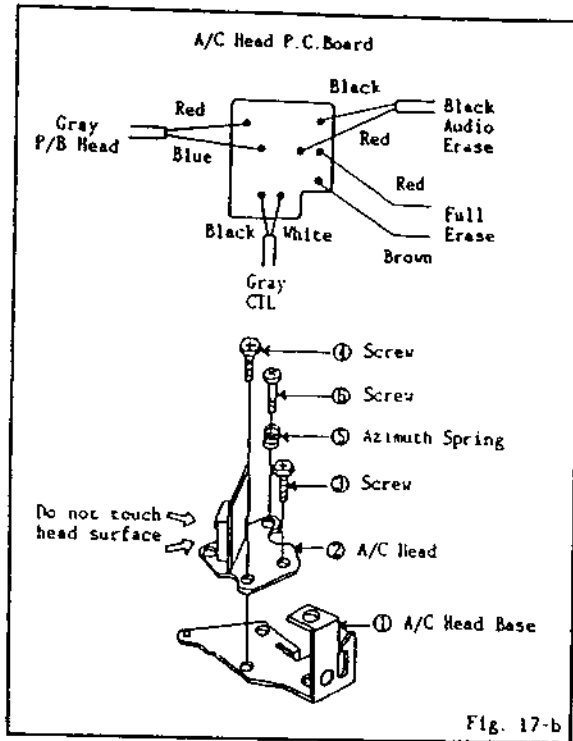


Fig. 17-b

■ A-18: CONFIRMATION AND ADJUSTMENT OF A/C HEAD HEIGHT AND TILT

● CONFIRMATION

1. Set the unit in the play mode using a E-180 tape.
2. Confirm that the tape is not curling on flange of guide post.
3. Confirm that the height and tilt of A/C Head against the tape are as per Fig. 18.

● ADJUSTMENT

In case tape is running abnormally, make the following adjustments (Fig. 17-a and 18).

1. Check the tape running condition with the unit in the play mode using the E-180 tape.
2. Confirm tape runs smoothly without any crease or bend between the guide post and guide roller R.
3. It is absolutely impossible to get satisfactory sound if the tape is distorted between A/C Head and guide post. So confirm there is no crease on the tape.
4. If tape still does not run smoothly adjust it by turning screw (4) slowly.
NOTE: Do not move guide post.
5. Height of A/C Head against the tape should be as per Fig. 18.

If a tape runs smoothly around A/C Head and rough adjustment of height is done, carry out the height and azimuth adjustment of A/C Head using linear tape (JG001).

1. Playback audio tone 6KHz (picture is B/W Pattern) linear tape (JG001) and observe the waveform at Audio output terminal with oscilloscope.
2. Turn SET SCREW (4) slowly until maximum level is achieved. If maximum level cannot be maintained set screws where level variation is the smallest. (Fig. 17-a)
3. Re-check the tape running adjustment. (■ A-19)

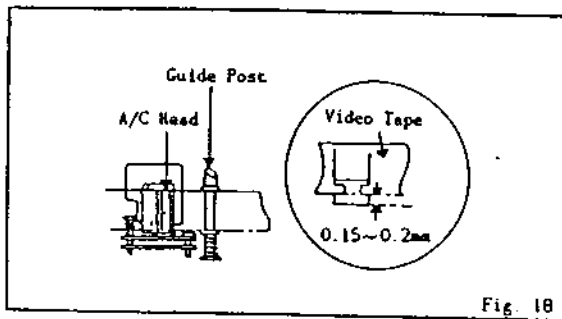


Fig. 18

■ A-19: TAPE RUNNING ADJUSTMENT

● ADJUSTMENT

1. Carry out the reel disk height adjustment using master plane (JG022) and reel table height chip (JG024).
2. Carry out the height confirmation and adjustment of P1 post and the post adjustment chip jig (JG026) in accordance with paragraph ■ A-16.
3. In accordance with ■ A-12, carry out the positioning and confirm tension pole position with the post adjustment chip-jig (JG026).
4. Playback the rough adjustment tape and make a rough adjustment of guide roller height with the tool (JG021) according to ■ A-21. Then, match lower edge of tape to drum lead and make sure that the video tape does not curl on flange of the guide post.
5. In accordance with ■ A-21, play the linear tape and adjust the guide roller height so that the envelope becomes flat and that flatness will not be affected even when the tracking control knob is turned.
6. In accordance with ■ A-18, adjust A/C Head height, tilt and azimuth.
7. Position the tracking control knob at preset and turn adjusting nut X a little as in Fig. 17-a so that envelope becomes maximum. Adjust position of A/C Head.
8. To confirm the flatness of envelope and voice recording, use the output from an appropriate test signal.
9. After completion of adjustment, fix each adjustment screw and nut etc.

METHODS OF ADJUSTMENT AND REPLACEMENT

■ A-20: REPLACEMENT OF UPPER DRUM

● REPLACEMENT

1. Remove the screw (5) which holds the EARTH BRUSH (5).
2. Disconnect the lead wires (1) (two, yellow).
3. Disconnect the lead wire (2) (one, red).
4. Disconnect the lead wire (3) (one, brown).
5. Remove the two holding screws with the flat washers (4) using a phillips screwdriver.
6. Pull out the upper drum in such a way that it will not incline upward and carefully replace in order not to scratch disk.

● INSTALLATION

1. Set up a new drum as per Fig. 20 and correctly place each lead wire.
2. Set upper drum by installing two screws (4).
3. Solder lead wires (1), (2) and (3) to their respective positions.
4. Install the EARTH BRUSH (5) with the screw (5).

● NOTE

1. Fitting clearance between the disk outer diameter and the drum inner diameter is made in micron order. Scratches and dust can make them hard to fit or separate and can adversely affect fitness of the drum and disk. Pay attention.
2. Do not touch the head on drum surface directly.
3. Do not apply excessive pressure to screwdriver.
4. If you don't have the tool (JG031), use gloves.
5. Connect yellow and brown leads and red and yellow leads.
6. Before installing, confirm that there are no scratches or dust on the disk front and surface.
7. Before installing, confirm that there are no scratches on the disk and upper drum assembly.
8. When setting, take care not to let any dust or dirt go into the clearance between disk and upper drum.
9. Turn holding screws slowly and carefully.
10. After completion of replacement, do not forget to carry out tape running adjustment and do the following electrical adjustments and confirmations.

- a. ■ E-4: P.G. Shifter Adjustment
- b. ■ E-6: Tracking Fix Adjustment
- c. ■ E-18: Playback Luminance Level Adjustment
- d. ■ A-21: Guide Roller Adjustment

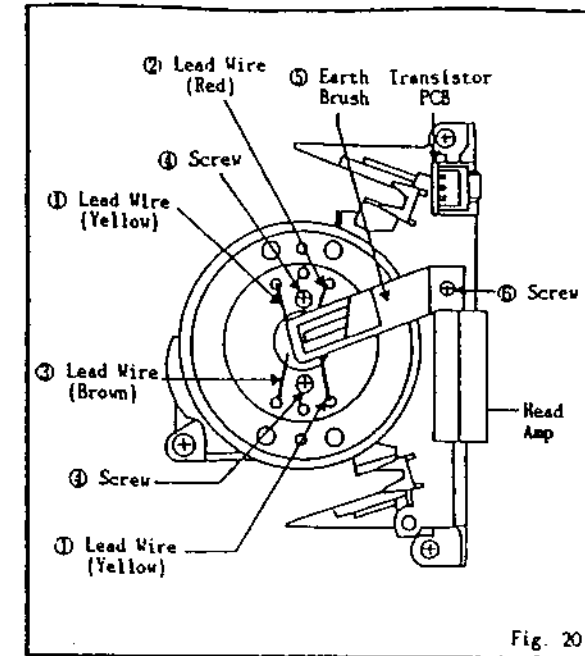


Fig. 20

■ A-21: ADJUSTMENT OF GUIDE ROLLER

● ADJUSTMENT

1. Insert a linear tape into stage.
2. Switch on main power and then connect monitor output cord and video input cord to their proper positions.
3. Connect CH-1 and CH-2 of oscilloscope to envelope output and to the test point of switching pulse, respectively.
4. Carry out this adjustment in playback mode.
5. Trigger with SW pulse and observe the envelope. (Fig. 21-a)
6. Observe the envelope, adjust the guide roller height and let tape run on drum head. (Use the adjustment screw driver JG005). If a video tape is running above or below helical lead position, waveform shall appear as in Fig. 21-b and 21-c.
7. Adjust the guide roller height while observing the envelope, and make the envelope flat. Adjust the envelope so that the flatness will not be affected even when the tracking control knob is turned. (Use the adjustment screw driver JG005).
8. When the tracking control knob is turned, adjust the envelope so that its A:B ratio is better than 10:7 where the waveform starts to reduce at 'A'. (Fig. 21-d)
9. Make adjustment of ■ E-4 P.G. shifter point as per play SW point of electrical adjustment.
10. Record the color bar and playback, to confirm the envelope is flat.
11. After that, carry out confirmation of the envelope.

● NOTE

If the guide roller adjustment does not produce a satisfactory result, refer to the adjustment section in ■ A-18.

METHODS OF ADJUSTMENT AND REPLACEMENT

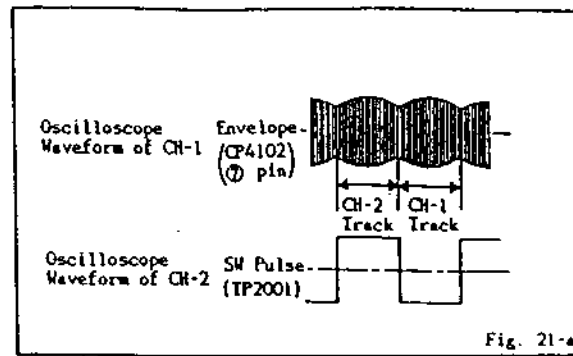


Fig. 21-a

a: Envelope waveform will be as shown in Fig. 21-b when a video tape is above the helical lead position.

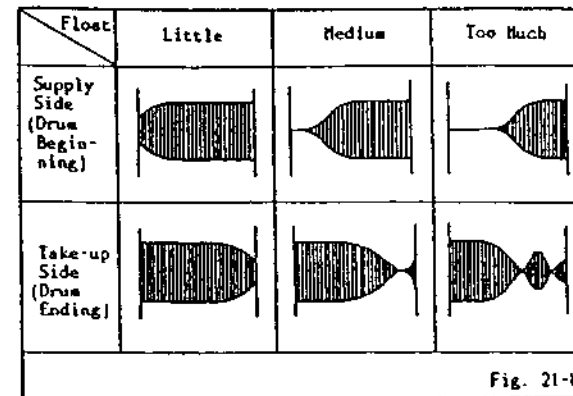


Fig. 21-b

b: Envelope waveform will be as shown in Fig. 21-c when a video tape is lower than helical lead position.

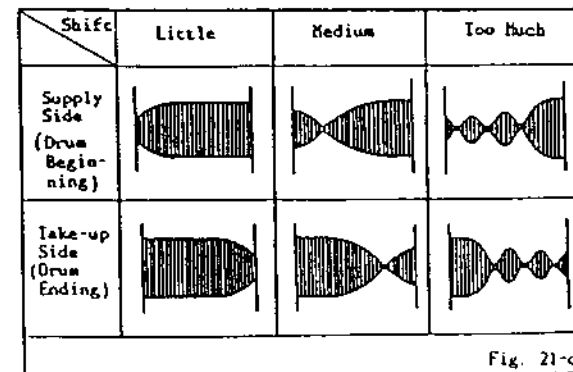


Fig. 21-c

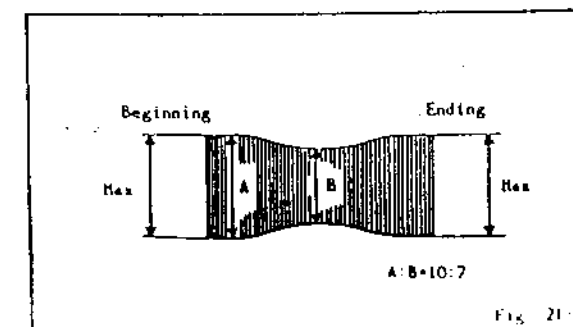


Fig. 21-d

■ A-22~25: NOT REQUIRED FOR THIS MODEL

■ A-26: REPLACEMENT OF CYLINDER UNIT

● REMOVAL

1. Remove the shield plate on the Head Amp and remove the screw ④ to disconnect the solder for the heater lead.
2. Remove the transistor PCB according to item ■ A-39.
3. Remove the screw ④ which holds the EARTH BRUSH ⑤.
4. Remove the cylinder unit by taking out the screws ① and ②. (Fig. 26)

● INSTALLATION

1. Install a new cylinder unit in reverse steps of REMOVAL.
2. Install the transistor PCB according to item ■ A-39.
3. Install the Head Amp with the screw ④ again.

● NOTE

1. Do not touch the surface of the cylinder head.
2. Make sure ■ A-20 was done properly.

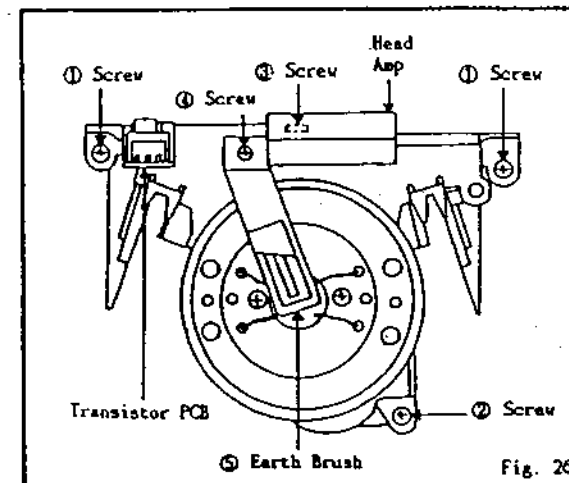


Fig. 26

■ A-27: REPLACEMENT OF TENSION BAND ASS'Y

● REMOVAL

1. Remove the screw ① held to the tension band.
2. Release the SS brake from the tension band to remove it from the Supply Reel Disk. (Fig. 27)
3. Remove the tension band from the tension arm.

● INSTALLATION

Install a new cylinder unit in reverse steps of REMOVAL.

● NOTE

1. The tension band should not be twisted during installation.
2. Adjust the placement of the tension post according to item ■ A-12.
3. After adjustment of the above two items, adjust it according to item ■ A-14.

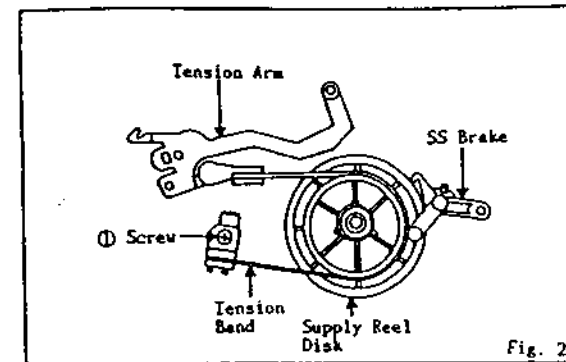


Fig. 27

■ A-28~33: NOT REQUIRED FOR THIS MODEL

■ A-34: REPLACEMENT OF LOADING BELT

● REMOVAL

1. Remove the screw ① held to the FS Gear Plate.
2. Remove the FS Gear Plate, the Polyslider Washer ② and the Fan Shaped Gear. (Fig. 34-a)
3. Remove the 2 pieces of stoppers ④, then pull the hook ③ in the direction of the arrow to remove the Loading Motor. (Fig. 34-b)
4. Remove the Loading Belt from the Loading Motor.
5. Move the Tension Lever 1 to the dotted line. (Fig. 34-a)
6. Remove the Main Cam.
7. Remove the Worm Ass'y and replace Loading Belt with new one.

● INSTALLATION

1. Hang a new Loading Belt on the pulley of the Worm Ass'y, then hang it on the pulley of the Loading Motor.
2. First, attach the Loading Motor, next fix the Worm Ass'y.
3. Install the Main Cam.
4. Install the Tension Lever 1.
5. Install the Fan Shaped Gear.
6. Install the FS Gear Plate, then hold the screw ①.

● NOTE

1. Clean the pulley when replacing Loading Belt.
2. Exchange it in stop mode.
3. Avoid getting grease on the Loading Belt.
4. Do not misalign the points (A, D, E) of the Main Cam, the Tension Lever 1 and the Fan Shaped Gear. (Fig. 34-a, b, c)
5. Make sure that A point is within B range in holding of the Main Cam. (Fig. 34-c)
6. Make sure that D part is within C part in holding of the Tension Lever 1. (Fig. 34-a, c)
7. Make sure that E part is within C part in holding of the Fan Shaped Gear. (Fig. 34-a, c)

● CHECK AFTER INSTALLATION

1. Check if strange sound is heard in play mode.
2. Check if P2 post and P3 post are fitted to the post stopper.
3. Check if P2 post and P3 post are completely returned in stop mode.

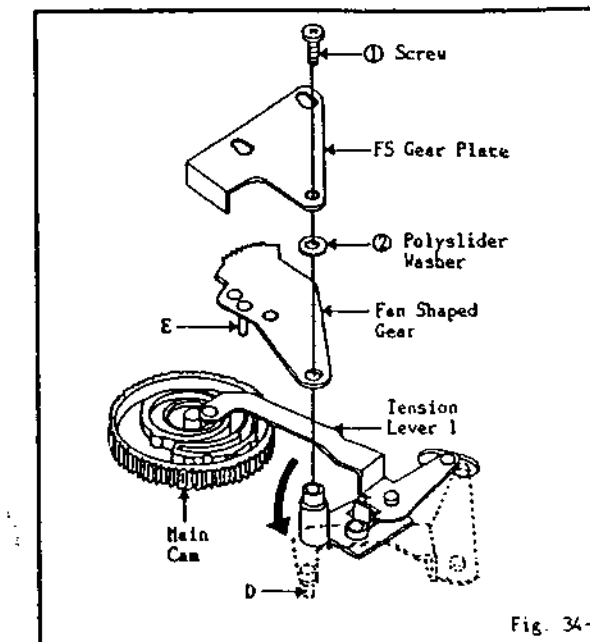


Fig. 34-a

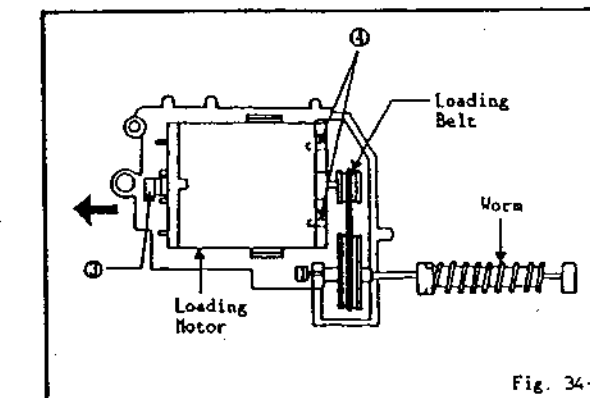


Fig. 34-b

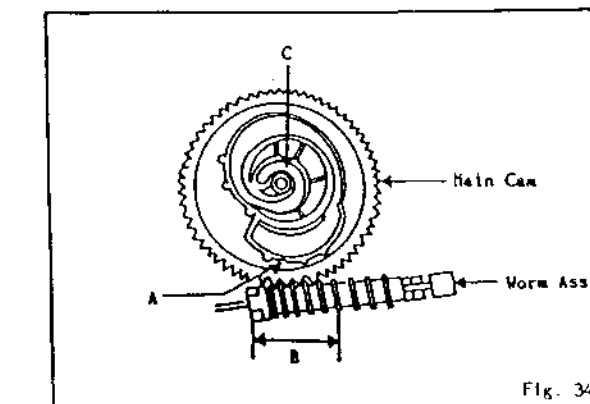


Fig. 34-c

METHODS OF ADJUSTMENT AND REPLACEMENT

■ A-35: NOT REQUIRED FOR THIS MODEL

■ A-36: REPLACEMENT OF PINCH ROLLER

● REMOVAL

1. Remove the screw ①. (Fig. 36)
2. Remove the Pinch Roller.

● INSTALLATION

Install a new Pinch Roller in reverse order of REMOVAL.

● NOTE

1. Be careful of bending the Pinch Roller Arm in removal and installation.
2. Do not touch around the Pinch Roller.

● CHECK AFTER INSTALLATION

Check if the tape is running normally in PLAY mode.

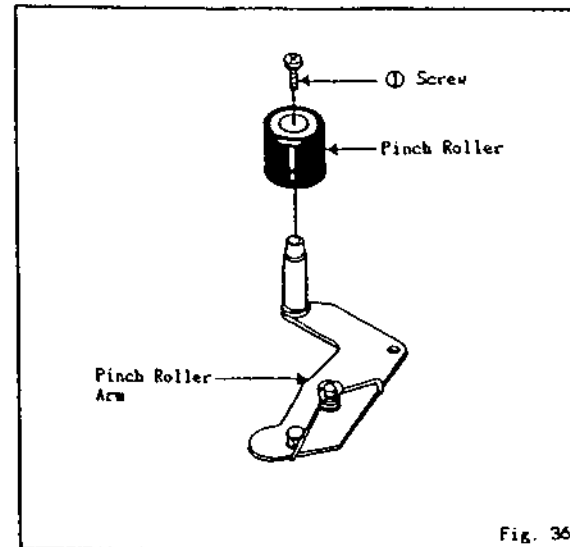


Fig. 36

■ A-37: REPLACEMENT OF DD UNIT

● REMOVAL

1. Remove the Deck unit from the Inside Cabinet.
2. Remove the 3 screws ① (SEMS A 2.6x6) held to DD unit on front of the Deck. (Fig. 37)
3. Turn the Deck over, then remove the Reel Belt from the clutch pulley.
4. Remove the DD unit slowly from rear side of the Deck.

● INSTALLATION

1. Return the Limiter Post to the dotted line, then fit new DD unit to the chassis without touching center of the shaft of the DD unit to the chassis. Return the Limiter Post to where it was. (Fig. 37)
2. Install the clutch pulley without twisting the Reel Belt.

● NOTE

1. Do not bend the Limiter Post.
2. Use the specified screw held to the DD unit.
3. Tighten the screws completely.

● CHECK AFTER INSTALLATION

1. Check if tape running is normal in PLAY mode.
2. Check if FF/REW mode works normally.

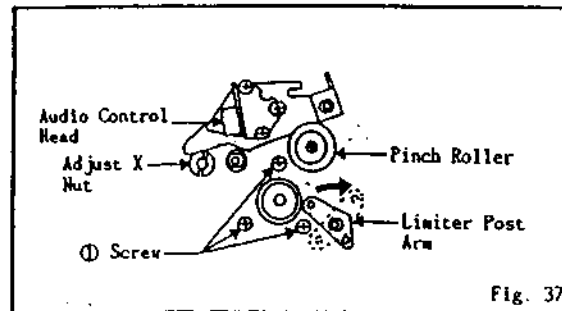


Fig. 37

■ A-38: REPLACEMENT OF LOADING MOTOR

● REMOVAL

1. Remove the 2 stoppers ④, then pull the hook ③ in the direction of the arrow to take off the Loading Motor. (Fig. 34-b)
2. Remove the Loading Belt from the Loading Motor.

● INSTALLATION

1. Install new Loading Motor in reverse steps of REMOVAL.

■ A-39: REPLACEMENT OF TRANSISTOR PCB AND TRANSISTOR SPRING

● REMOVAL

1. Insert a small flat-blade screwdriver into the transistor spring as shown in Fig. 39-a.
2. Hold both edges of the transistor PCB (A part) with your fingers and pull out the transistor PCB while turning the driver.

● INSTALLATION

1. Set the transistor spring in the place marked as shown in Fig. 39-b.
2. Fit the transistor PCB as shown in Fig. 39-b.

● NOTE

1. The unit should be unplugged from the AC outlet.
2. Do not scratch or mar the cylinder.
3. Be careful not to split the transistor PCB.
4. If the transistor spring is broken when holding or removing the transistor PCB, replace with a new one.

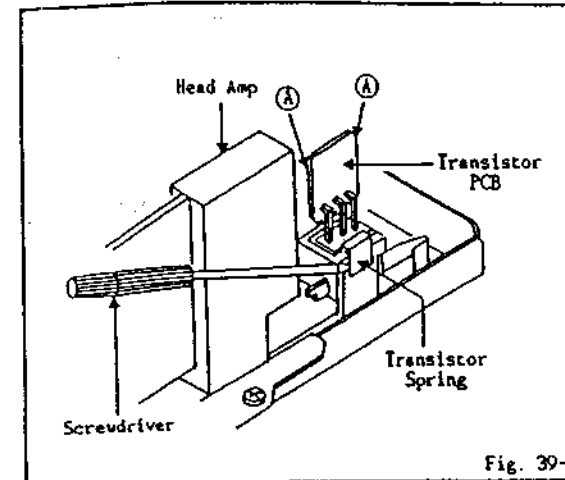


Fig. 39-a

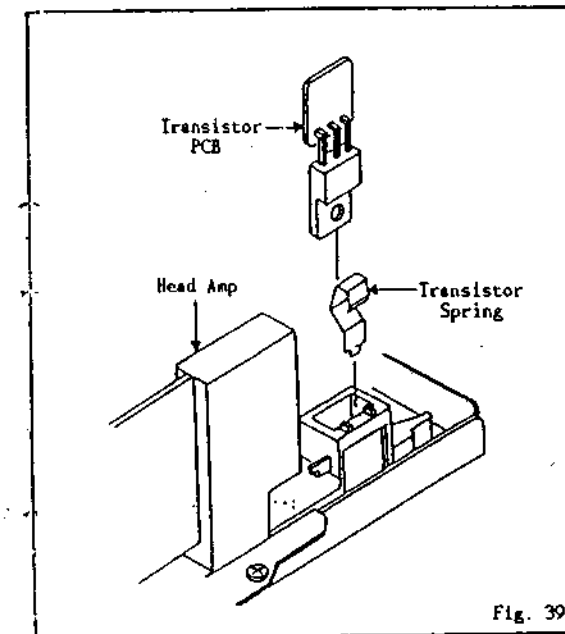


Fig. 39-b

METHODS OF ADJUSTMENT AND REPLACEMENT

■ A-40: INSTALLATION OF ROTARY SW

● INSTALLATION

1. Rotate the Loading Gear L in the direction ⑤ in full.
2. As viewed from the top of the deck, adjust so that the point A of the actuator and point B of the Main Chassis.
3. Adjust the point C of the Main Cam within width of D.
4. Adjust so that the Fan Shaped Gear F engages with the Loading Gear L. (Fig. 40-a)
5. Adjust the stop position in the Stop mode, install the Rotary Switch. The screw position and stop position of the Rotary Switch are aligned.
6. Adjust the stop position of the Rotary Switch as indicated Fig. 40-b, A and B are aligned.

● CONFIRMATION

When in the Rec. Pause Mode, confirm it the distance of the Pinch Roller face to the Capstan Shaft face is 0.5~1.5mm. If the distance is over, move the Rotary Switch in the direction of ①.

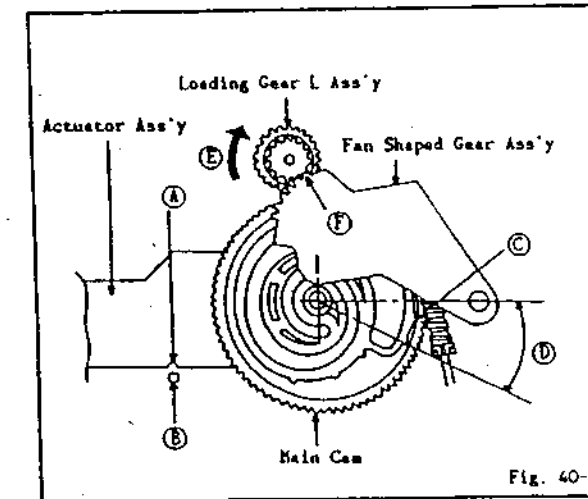


Fig. 40-a

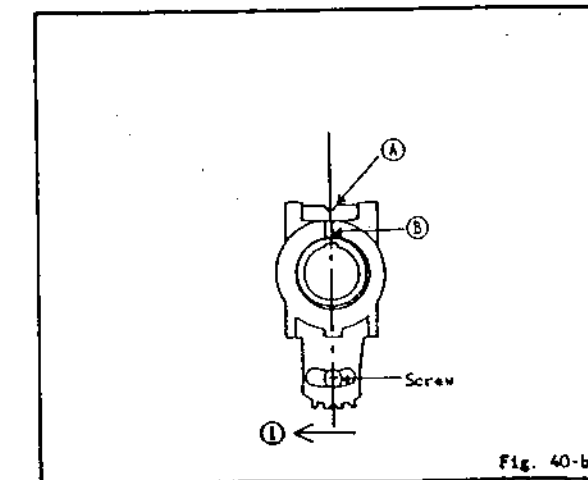


Fig. 40-b

ELECTRICAL ADJUSTMENTS

Remove the following parts before performing electric adjustment.

1. Top Cabinet (2 screws)
2. Bottom Plate (5 screws)

After adjustment, reassemble the unit in reverse order.

Prepare the following measurement tools for the electrical adjustment.

1. Oscilloscope (2 channel type)
2. AC Voltmeter
3. Quartz Timer
4. Sweep-Marker Generator
5. AFT Adjustment Oscillator
6. Synchro Scope
7. VIF Unit
8. Voltmeter
9. Frequency Counter
10. DC Voltmeter
11. Spectrum Analyzer
12. DC Supplier

ADJUSTMENT PROCEDURE

■ E-1~3: NOT REQUIRED FOR THIS MODEL

■ E-4: PB. SWITCHING POSITION.

CONDITIONS

MODE - PLAYBACK
Input signal - Standard test tape

NOTE: Tracking control should be set at click point.

INSTRUCTIONS

- (1) Connect CH-1 on the oscilloscope to TP2001 and connect CH-2 on the oscilloscope to TP4201.
- (2) Adjust VR2001 so that the waveform of the oscilloscope measures $6.5 \pm 0.5(H)$ at both leading and trailing edges as shown in Fig. 4-a, b.

CHART/CHARACTERISTICS

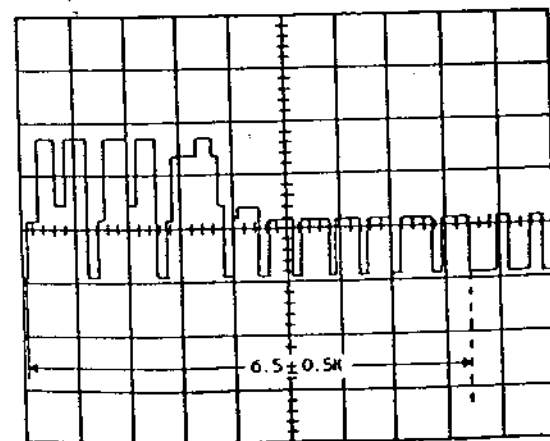


Fig. 4-a

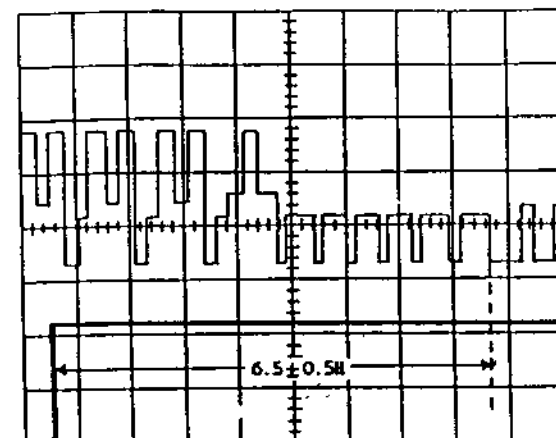


Fig. 4-b

■ E-5: NOT REQUIRED FOR THIS MODEL

■ E-6: TRACKING FIX ADJUSTMENT

CONDITIONS

MODE - PLAYBACK
Input signal - Standard test tape

NOTE: Tracking control should be set at click point.

INSTRUCTIONS

- (1) Connect CH-1 on the oscilloscope to TP2001 and connect CH-2 on the oscilloscope to TP2003.
- (2) Adjust VR2002 so that the "I" portion measures $2.0 \pm 0.3\text{msec}$ as shown in Fig. 6.

CHART/CHARACTERISTICS

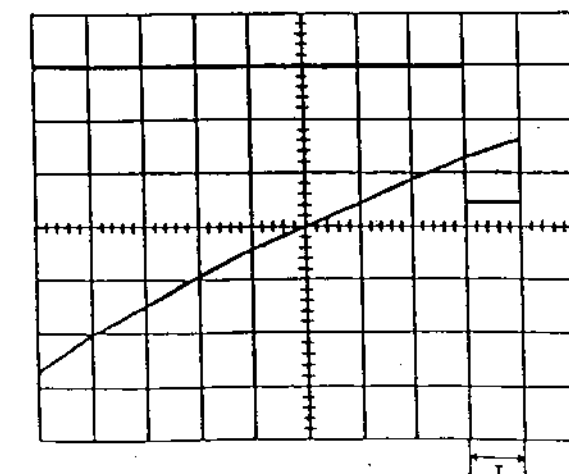


Fig. 6

ELECTRICAL ADJUSTMENTS

■ E-7~11: NOT REQUIRED FOR THIS MODEL

■ E-12: E-E LEVEL ADJUSTMENT

CONDITIONS


MODE - STOP
Input signal - Color bar

NOTE: Video out of the unit should be terminated with 75 ohm load.

INSTRUCTIONS

- (1) Connect the oscilloscope to TP4005.
- (2) Adjust VR4004 so that the waveform measures $0.53 \pm 0.01\text{Vp-p}$ as shown in Fig. 12.

CHART/CHARACTERISTICS

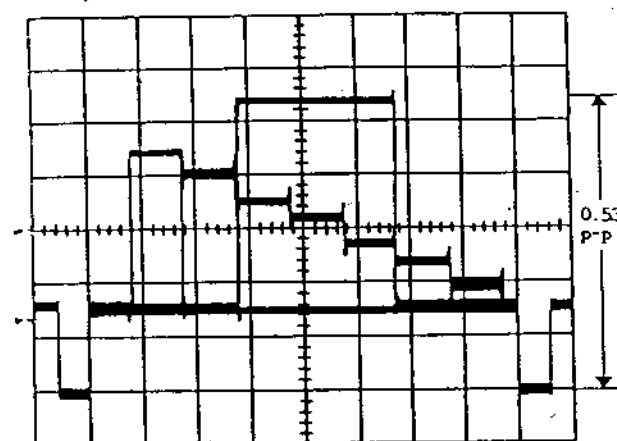

100mV 5 μs/div

Fig. 12

■ E-13~15: NOT REQUIRED FOR THIS MODEL

■ E-16: SET CARRIER AND DEVIATION ADJUSTMENT

CONDITIONS

MODE - STOP
Input signal - Color bar

INSTRUCTIONS

- (1) Connect TP4001 to the input terminal on the spectrum analyzer, then adjust 3.8MHz and 4.8MHz as shown in Fig. 16 with VR4001 and VR4002.

VR4001 (SET CARRIER)
VR4002 (DEVIATION)

CHART/CHARACTERISTICS

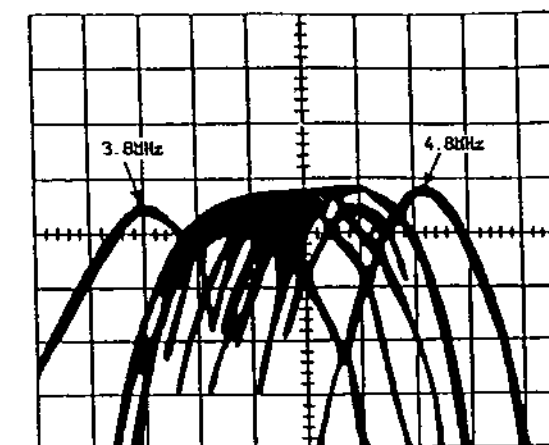


Fig. 16

■ E-17: RECORD CURRENT ADJUSTMENT


CONDITIONS

MODE - RECORD (SP MODE)
Input signal - Color bar

INSTRUCTIONS

- (1) Connect CH-1 on the oscilloscope to TP4101 and CH-2 to TP4201. Reduce Rec.-Luminance signal factors by turning VR4102 fully counter-clockwise.
- (2) Adjust VR4101 so that the cyan level becomes $30 \pm 2\text{mVp-p}$ as shown in Fig. 17-a.
- (3) Adjust VR4102 so that the horizontal sync. level becomes $120 \pm 5\text{mVp-p}$ as shown in Fig. 17-b.

CHART/CHARACTERISTICS

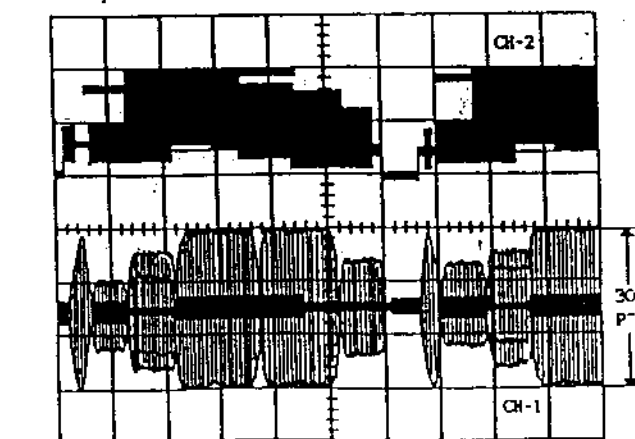

10mV 5 μs/div

Fig. 17-a

ELECTRICAL ADJUSTMENTS

Remove the following parts before performing electric adjustment.

1. Top Cabinet (2 screws)
2. Bottom Plate (5 screws)

After adjustment, reassemble the unit in reverse order.

Prepare the following measurement tools for the electrical adjustment.

1. Oscilloscope (2 channel type)
2. AC Voltmeter
3. Quartz Timer
4. Sweep-Marker Generator
5. AFT Adjustment Oscillator
6. Synchro Scope
7. VIF Unit
8. Voltmeter
9. Frequency Counter
10. DC Voltmeter
11. Spectrum Analyzer
12. DC Supplier

ADJUSTMENT PROCEDURE

■ E-1~3: NOT REQUIRED FOR THIS MODEL

■ E-4: PB. SWITCHING POSITION.

CONDITIONS

MODE - PLAYBACK
Input signal - Standard test tape

NOTE: Tracking control should be set at click point.

INSTRUCTIONS

- (1) Connect CH-1 on the oscilloscope to TP2001 and connect CH-2 on the oscilloscope to TP4201.
- (2) Adjust VR2001 so that the waveform of the oscilloscope measures $6.5 \pm 0.5(H)$ at both leading and trailing edges as shown in Fig. 4-a, b.

CHART/CHARACTERISTICS

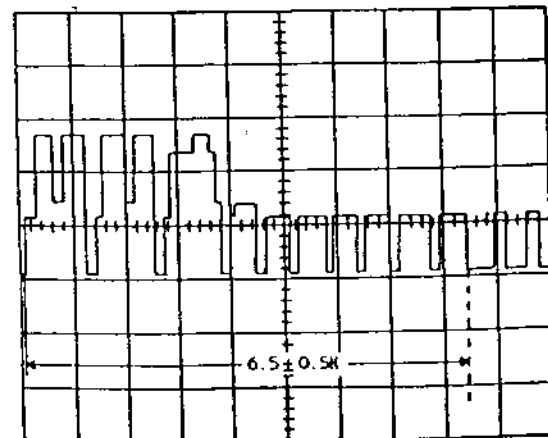


Fig. 4-a

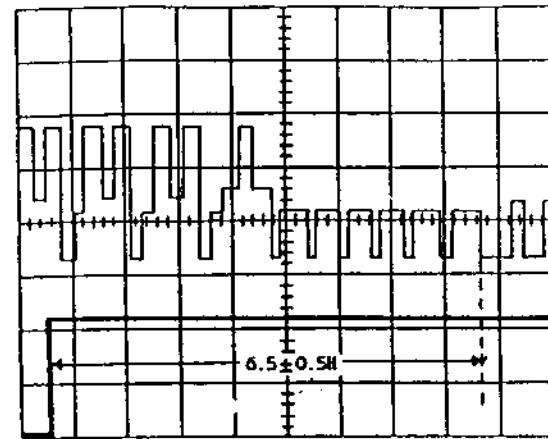


Fig. 4-b

■ E-5: NOT REQUIRED FOR THIS MODEL

■ E-6: TRACKING FIX ADJUSTMENT

CONDITIONS

MODE - PLAYBACK
Input signal - Standard test tape

NOTE: Tracking control should be set at click point.

INSTRUCTIONS

- (1) Connect CH-1 on the oscilloscope to TP2001 and connect CH-2 on the oscilloscope to TP2003.
- (2) Adjust VR2002 so that the "I" portion measures $2.0 \pm 0.3 \text{ msec}$ as shown in Fig. 6.

CHART/CHARACTERISTICS

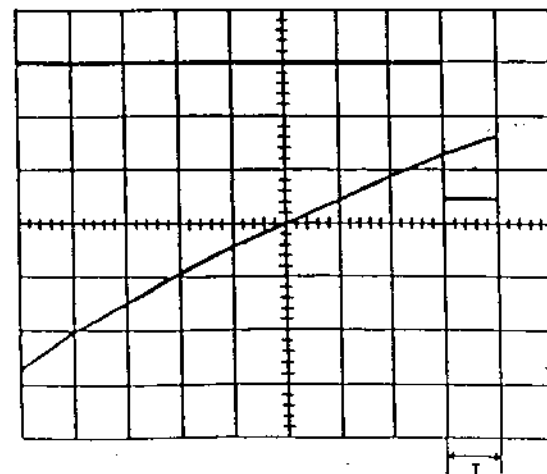


Fig. 6

ELECTRICAL ADJUSTMENTS

■ E-7~11: NOT REQUIRED FOR THIS MODEL

■ E-12: E-E LEVEL ADJUSTMENT

CONDITIONS


MODE - STOP
Input signal - Color bar

NOTE: Video out of the unit should be terminated with 75 ohm load.

INSTRUCTIONS

- (1) Connect the oscilloscope to TP4005.
- (2) Adjust VR4004 so that the waveform measures $0.53 \pm 0.01 \text{ Vp-p}$ as shown in Fig. 12.

CHART/CHARACTERISTICS

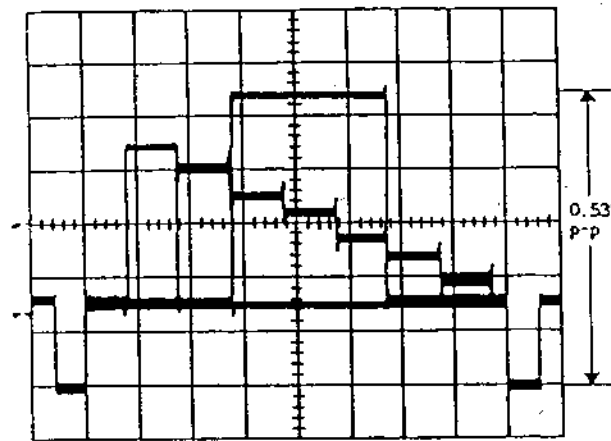

100mV 5 μs/div

Fig. 12

■ E-13~15: NOT REQUIRED FOR THIS MODEL

■ E-16: SET CARRIER AND DEVIATION ADJUSTMENT

CONDITIONS

MODE - STOP
Input signal - Color bar

INSTRUCTIONS

- (1) Connect TP4001 to the input terminal on the spectrum analyzer, then adjust 3.8MHz and 4.8MHz as shown in Fig. 16 with VR4001 and VR4002.

VR4001 (SET CARRIER)
VR4002 (DEVIATION)

CHART/CHARACTERISTICS

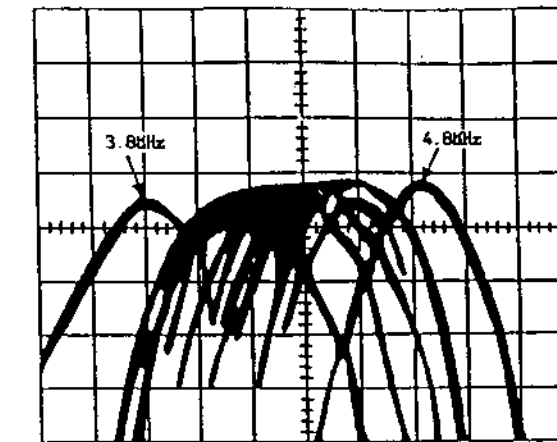


Fig. 16

■ E-17: RECORD CURRENT ADJUSTMENT


CONDITIONS

MODE - RECORD(SP MODE)
Input signal - Color bar

INSTRUCTIONS

- (1) Connect CH-1 on the oscilloscope to TP4101 and CH-2 to TP4201. Reduce Rec.-Luminance signal factors by turning VR4102 fully counter-clockwise.
- (2) Adjust VR4101 so that the cyan level becomes $30 \pm 2 \text{ mVp-p}$ as shown in Fig. 17-a.
- (3) Adjust VR4102 so that the horizontal sync. level becomes $120 \pm 5 \text{ mVp-p}$ as shown in Fig. 17-b.


CHART/CHARACTERISTICS

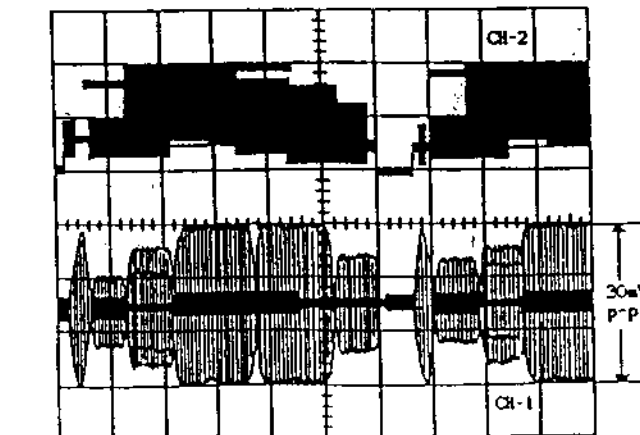

10mV 5 μs/div

Fig. 17-a

ELECTRICAL ADJUSTMENTS

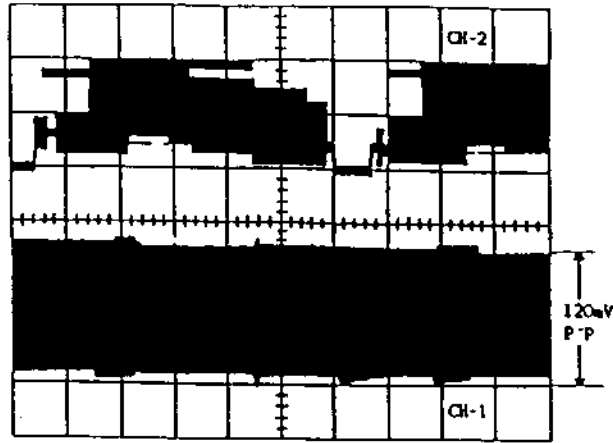

50mV 5 μ s/div
Fig. 17-b

E-18: PLAYBACK LUMINANCE LEVEL ADJUSTMENT

CONDITIONS


MODE - PLAYBACK
Input signal - Color bar test tape

NOTE: Video out of the unit should be terminated with 75 ohm load.

INSTRUCTIONS

- Connect the oscilloscope to TP4201.
- Adjust VR4003 so that the signal becomes $1.0 \pm 0.05V$ as shown in Fig. 18.

CHART/CHARACTERISTICS

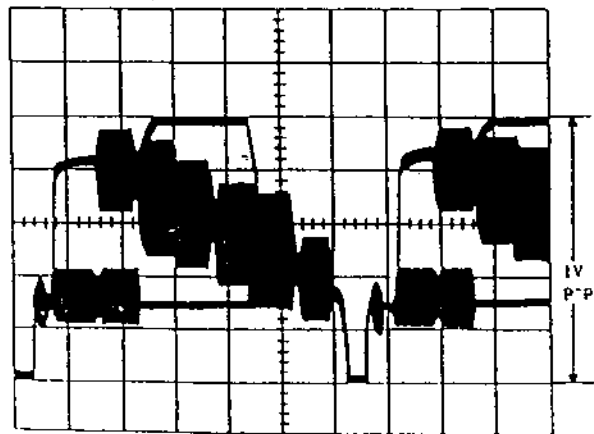

200mV 10 μ s/div
Fig. 18

E-19: AUDIO BIAS CURRENT ADJUSTMENT

CONDITIONS

MODE - RECORD
Input signal - No signal

INSTRUCTIONS

Connect the AC voltmeter to the arrow point, then adjust the voltage to $3.0 \pm 0.1mV_{rms}$ with VR3002.

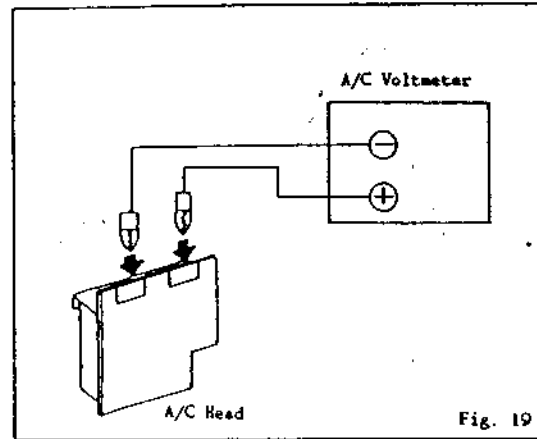


Fig. 19

E-20: AUDIO PLAYBACK LEVEL ADJUSTMENT

CONDITIONS

MODE - Self(RECORD and PLAYBACK)
Input signal - 1KHz 300mV_{rms}, Audio signal
Color bar

INSTRUCTIONS

- Connect the AC voltmeter to audio out jack, which is terminated with 47K ohm resistor.
- Record and then playback the audio signal as specified.
- Adjust VR5001 so that the playback output may become $390 \pm 10mV_{rms}$.

ELECTRICAL ADJUSTMENTS

E-21-27: NOT REQUIRED FOR THIS MODEL

E-28-1: SECAM IDENTIFICATION (1) ADJUSTMENT

CONDITIONS

MODE - RECORD
Input signal - SECAM RF signal

INSTRUCTIONS

- Connect CH-1 of oscilloscope to TP4501 and CH-2 of oscilloscope to TP3702.
- Adjust L3702 so that peak of waveform A and leading edge of video signal of waveform B may become same as shown in Fig. 28.

E-28-2: SECAM IDENTIFICATION (2) ADJUSTMENT

CONDITIONS

MODE - RECORD
Input signal - SECAM RF signal

INSTRUCTIONS

- Connect the oscilloscope to TP3701.
- Receive SECAM RF signal at 33dB.
- At this time, adjust TP3701 to High Level with VR3701.
- Next, check that the TP3701 will indicate Low Level with adjusting the output level to 31dB.
- Receiving the PAL signal, check that the TP3701 will indicate Low Level regardless of output strength.

CHART/CHARACTERISTICS

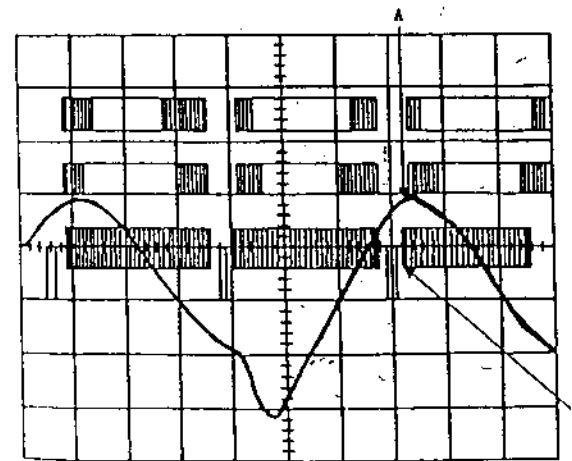


Fig. 28

E-29-37: NOT REQUIRED FOR THIS MODEL

E-58: NOISE CANCEL ADJUSTMENT

CONDITION

MODE - PLAYBACK
Input signal - Color bar test tape

INSTRUCTIONS

- Connect CH-1 of the oscilloscope to TP4003 and CH-2 on the oscilloscope to TP4004.
- Adjust the VR4005 so that the waveform of CH-1 is straight as shown in Fig. 58.

CHART/CHARACTERISTICS

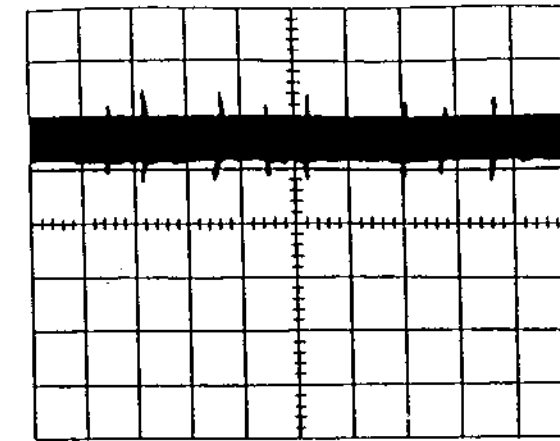



Fig. 58

E-59, 60: NOT REQUIRED FOR THIS MODEL

E-61: VIDEO IF ADJUSTMENT


INSTRUCTIONS

- Supply 12V with the DC Supplier.
- Terminate TP6004 and TP6005 with a 100 ohm resistor.

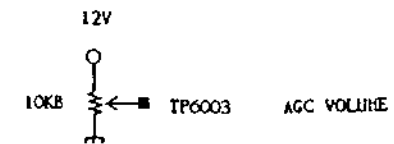

- Connect the output of Sweep-Marker Generator to TP6006.
- Adjust L6004 so that output waveform of TP6007 may become as shown in Fig. 61-a.
- Connect the output of Sweep-Marker Generator to the Tuner Pack IP.
- Make sure that the output of waveform of TP6007 is as shown in Fig. 61-b.


CHART/CHARACTERISTICS

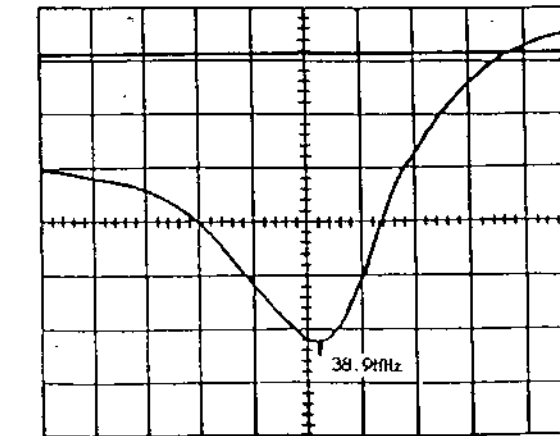

Single peak waveform

Fig. 61-a

ELECTRICAL ADJUSTMENTS

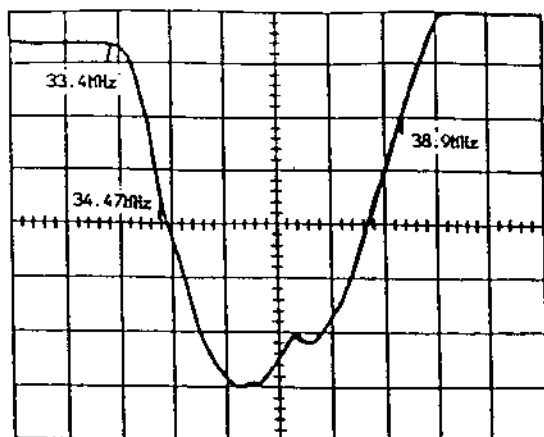

Overall waveform
Fig. 61-b

■ E-62: AFT ADJUSTMENT

NOTE: Disconnect the condenser C6014 in the adjustment.

INSTRUCTIONS

- Connect output of the Sweep-Marker Generator to Tuner Pack TP and adjust L6005 so that output waveform for TP6002 is as shown in Fig. 62.
- Disconnect the Sweep-Marker Generator and the oscilloscope from Tuner Pack TP and connect the condenser C6014.
- Connect the AFT adjustment oscillator (38.9MHz) to the Tuner Pack TP through 2.2K ohm and connect the DC voltmeter to TP6002.
- Adjust L6005 so that voltage at AFT switch ON is as much as one at AFT switch OFF.

CHART/CHARACTERISTICS

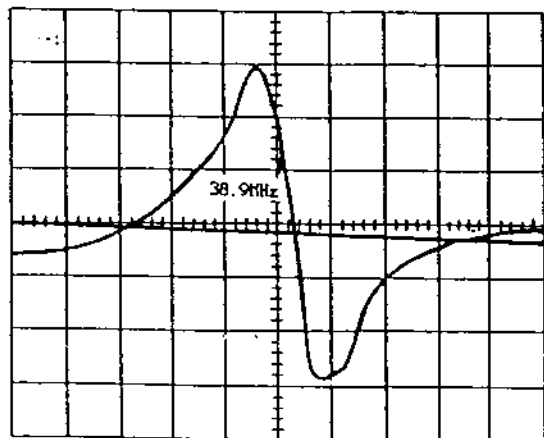


Fig. 62

■ E-63: NOT REQUIRED FOR THIS MODEL

■ E-64: RF AGC ADJUSTMENT

CONDITIONS

MODE - STOP

INSTRUCTIONS

- Receive the Monochrome Pattern signal.
- Connect the DC Voltmeter to TP6001.
- Set the RF input to 80dB.
- Adjust VR6001 so that the voltage is equal to $4.2 \pm 0.1V$.

■ E-65: COLOR LEVEL ADJUSTMENT

CONDITIONS

MODE - STOP

INSTRUCTIONS

- Obtain a color bar signal.
- Connect the oscilloscope to TP6008.
- Adjust VR6002 so that the magenta level is $55 \pm 5X$ when Y-level is 1Vp-p.

CHART/CHARACTERISTICS

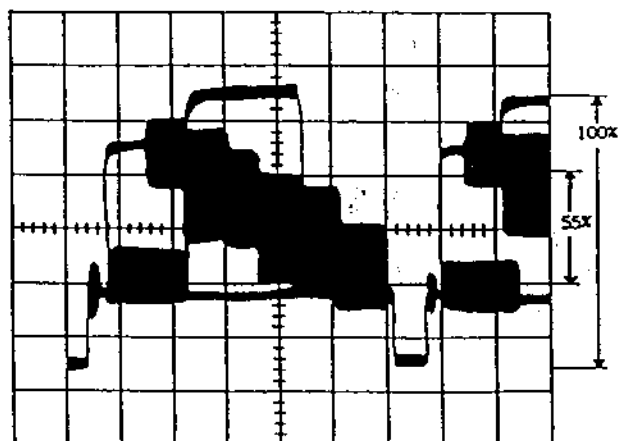


Fig. 65

■ E-66: CLOCK ADJUSTMENT

CONDITIONS





MODE - STOP
POWER ON
CLOCK SET

NOTE: Quartz timer should be supplied with power for at least 30 minutes before the adjustment.


INSTRUCTIONS

- Connect the Quartz timer to TP601.
- Adjust TC601 so that day difference is within 0.15 sec.


MAJOR COMPONENTS LOCATION GUIDE

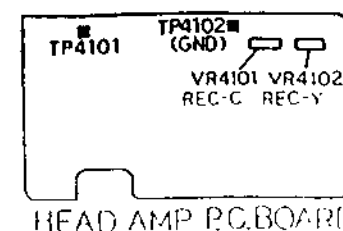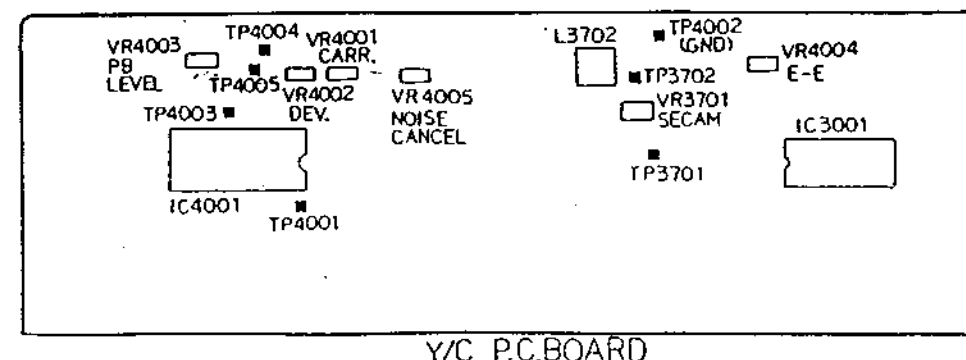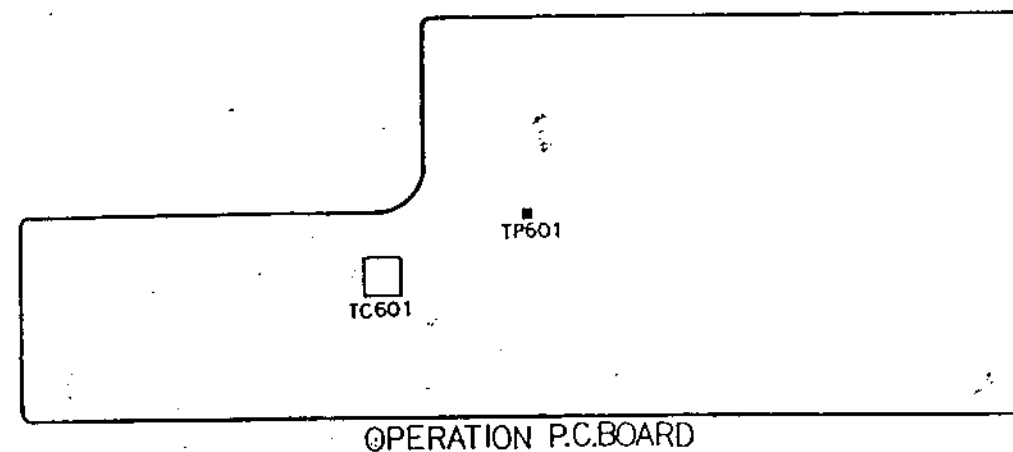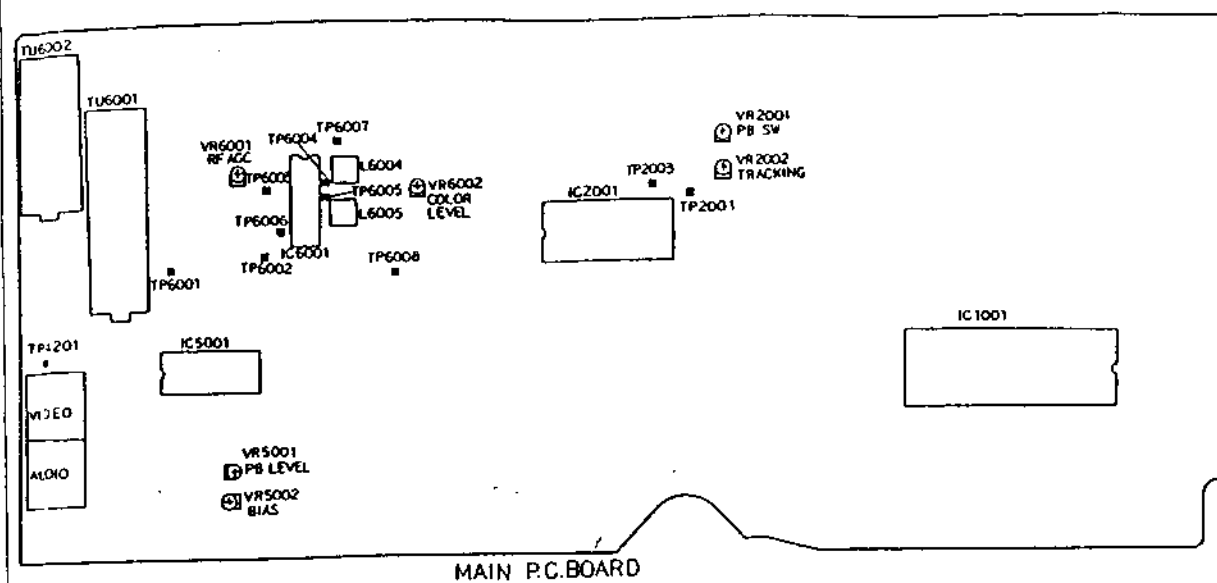


SERVO BLOCK DIAGRAM

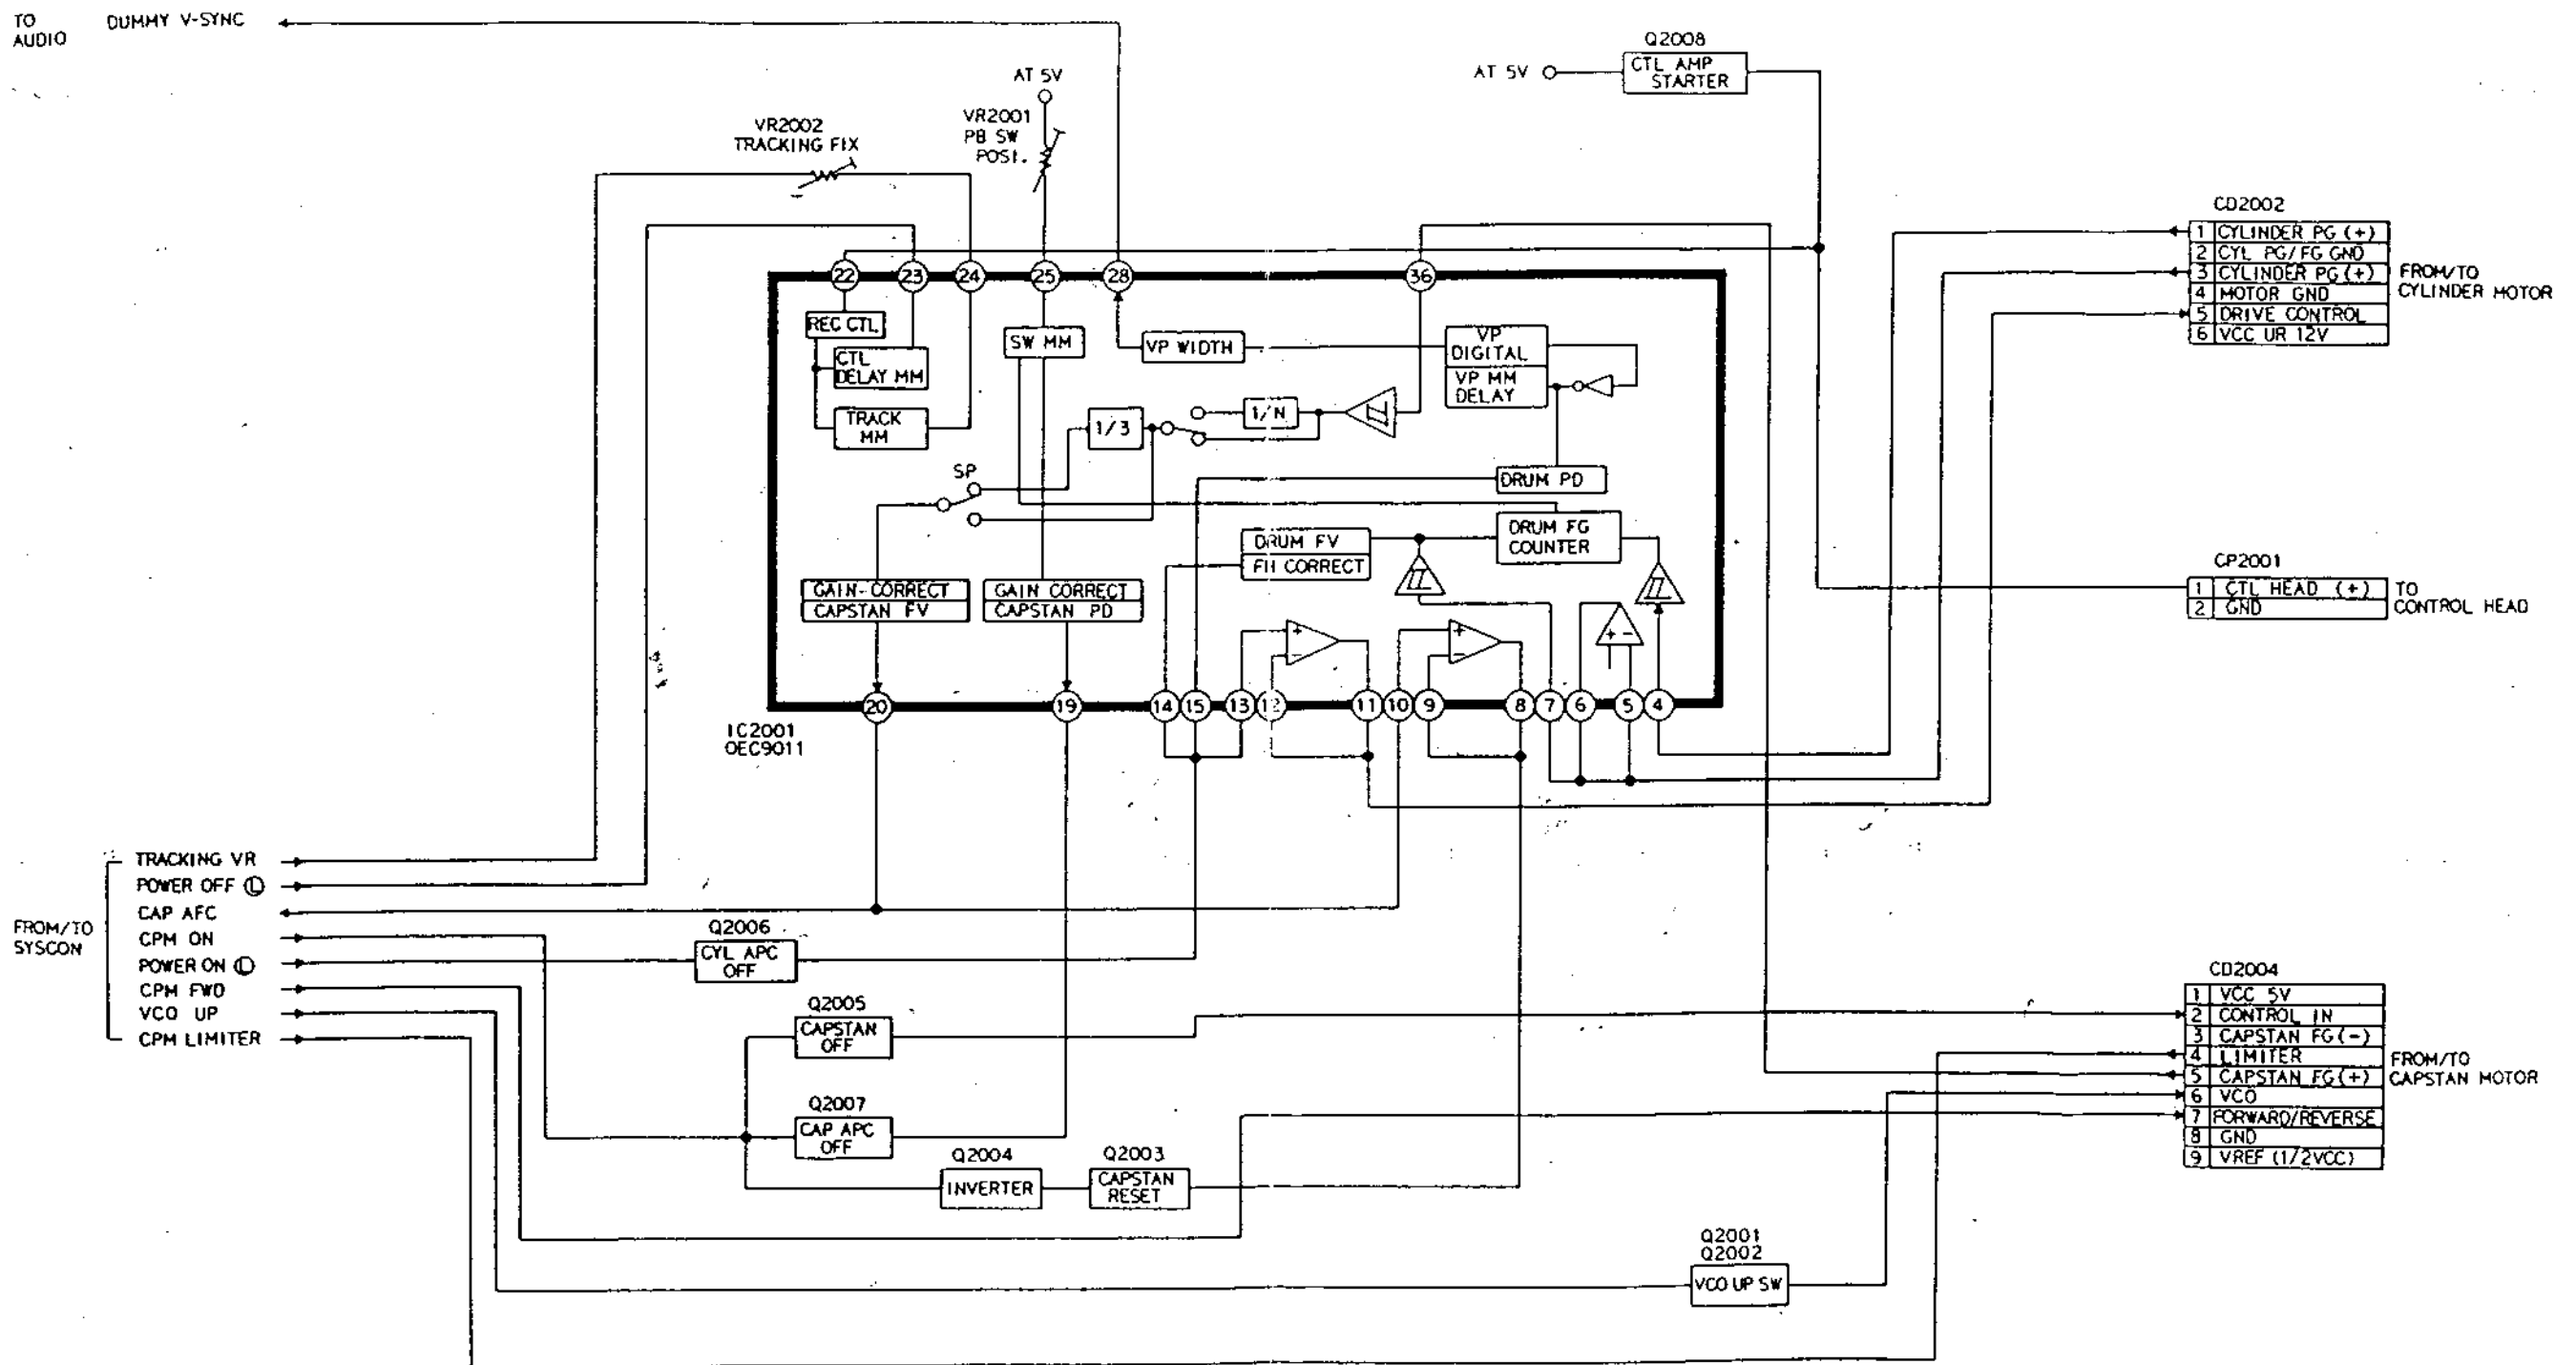


SERVO SCHEMATIC DIAGRAM

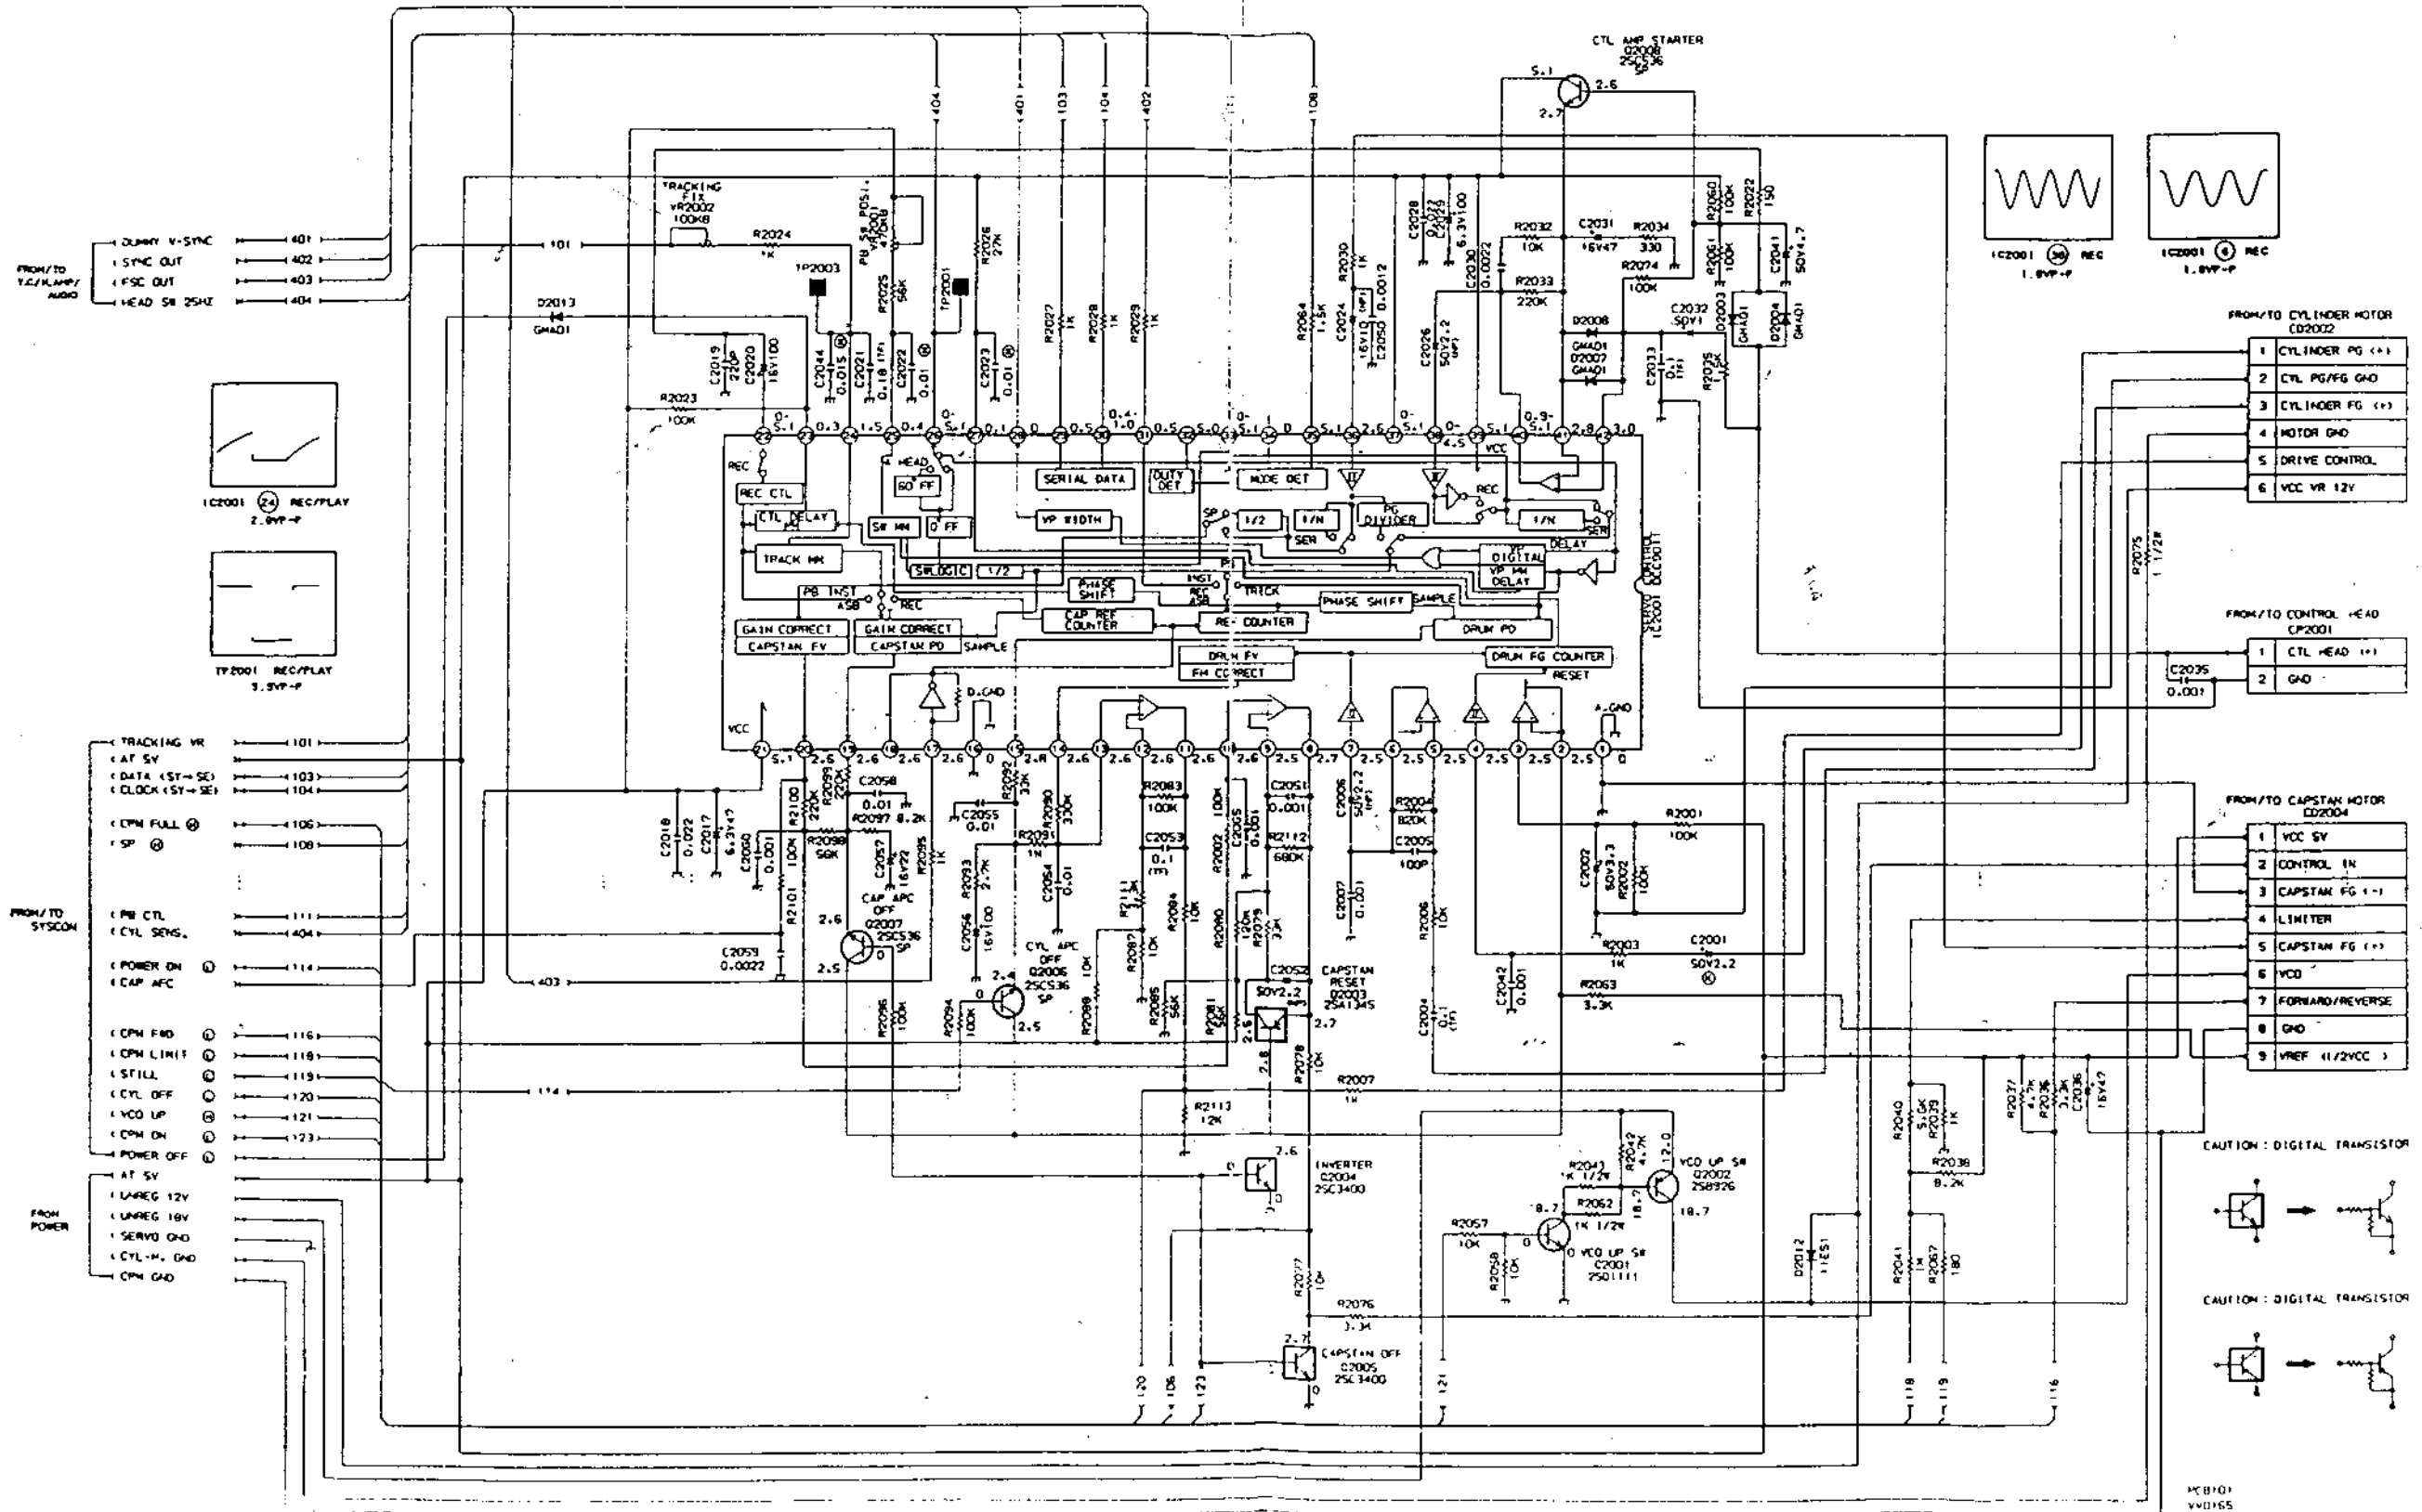


OPERATION BLOCK DIAGRAM

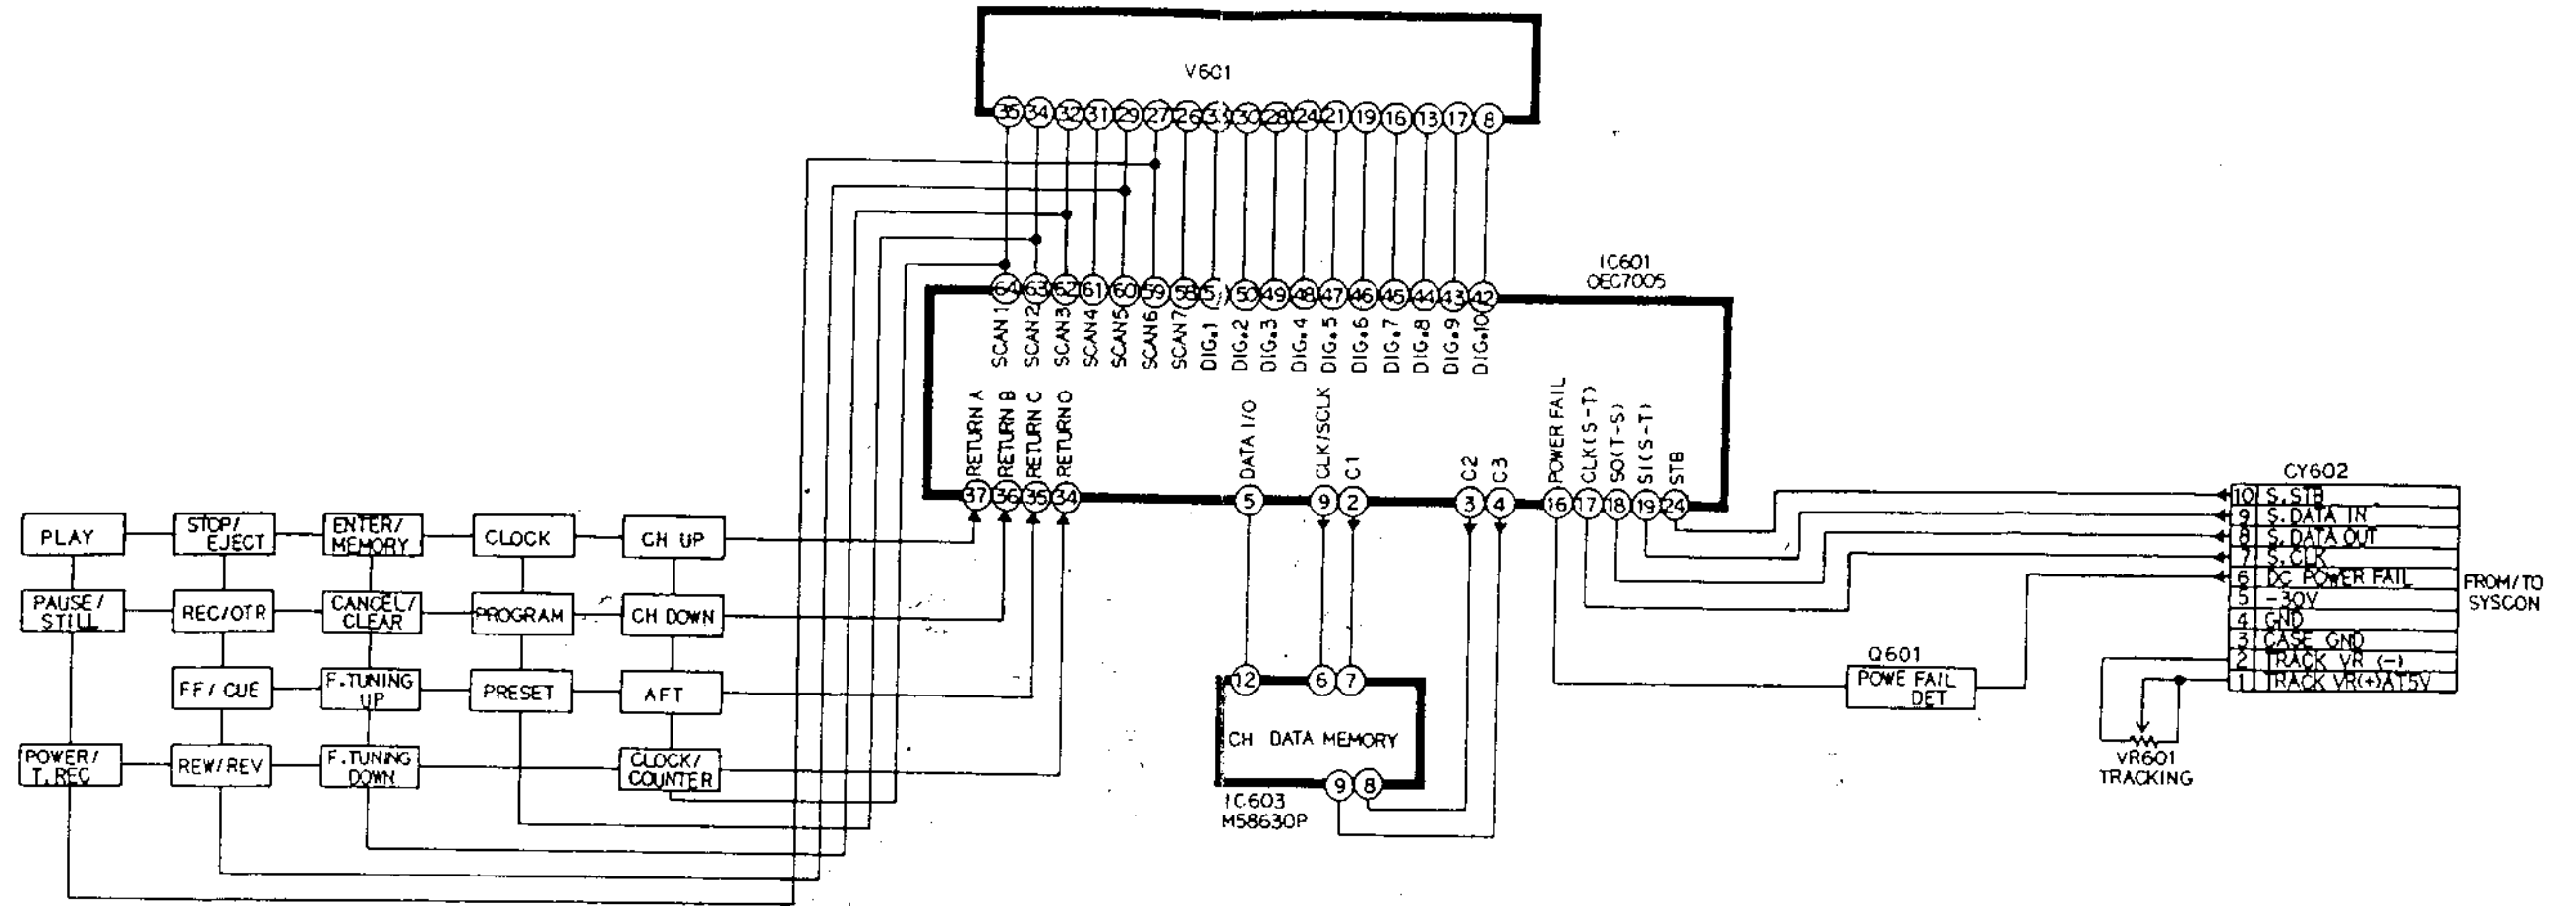

TUNER BLOCK DIAGRAM

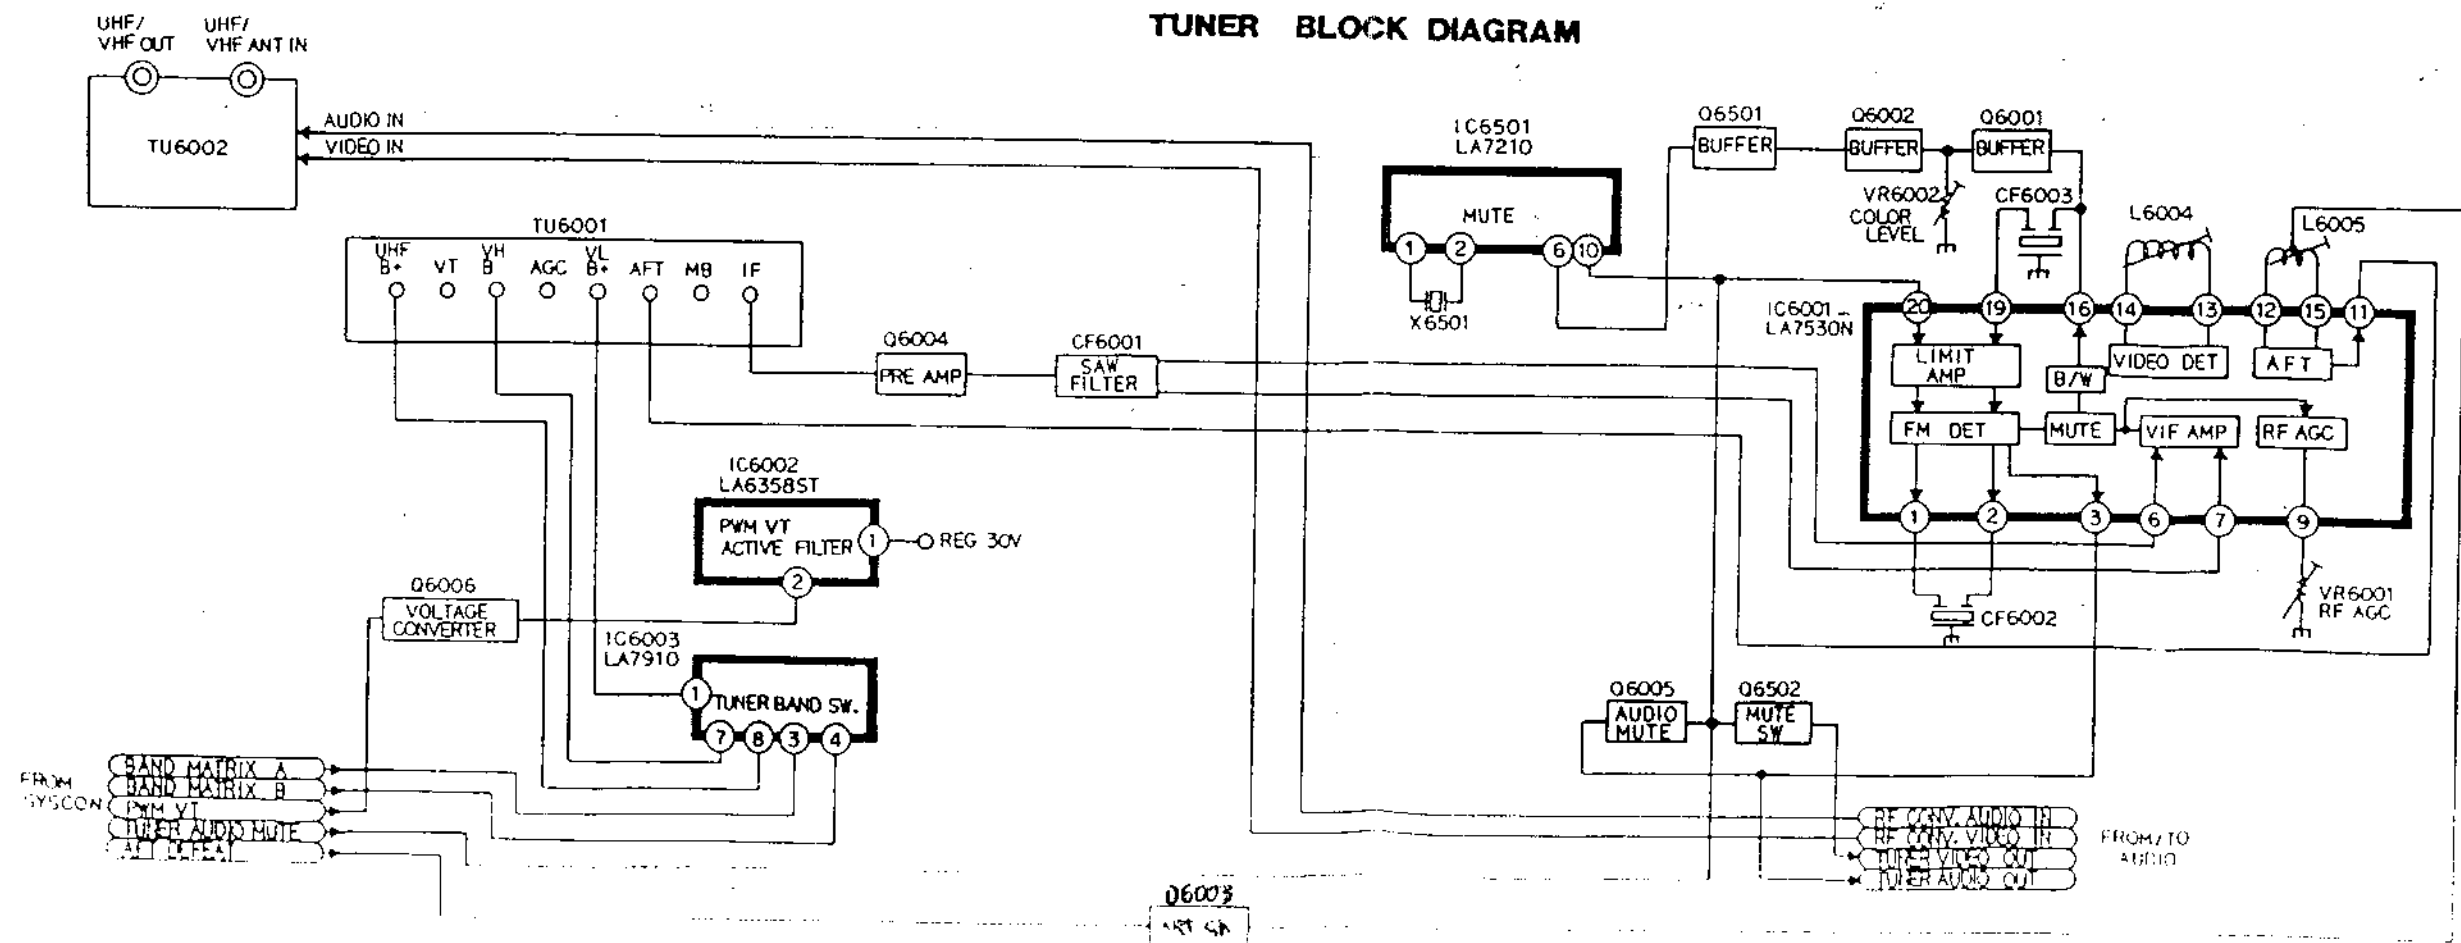

OPERATION SCHEMATIC DIAGRAM

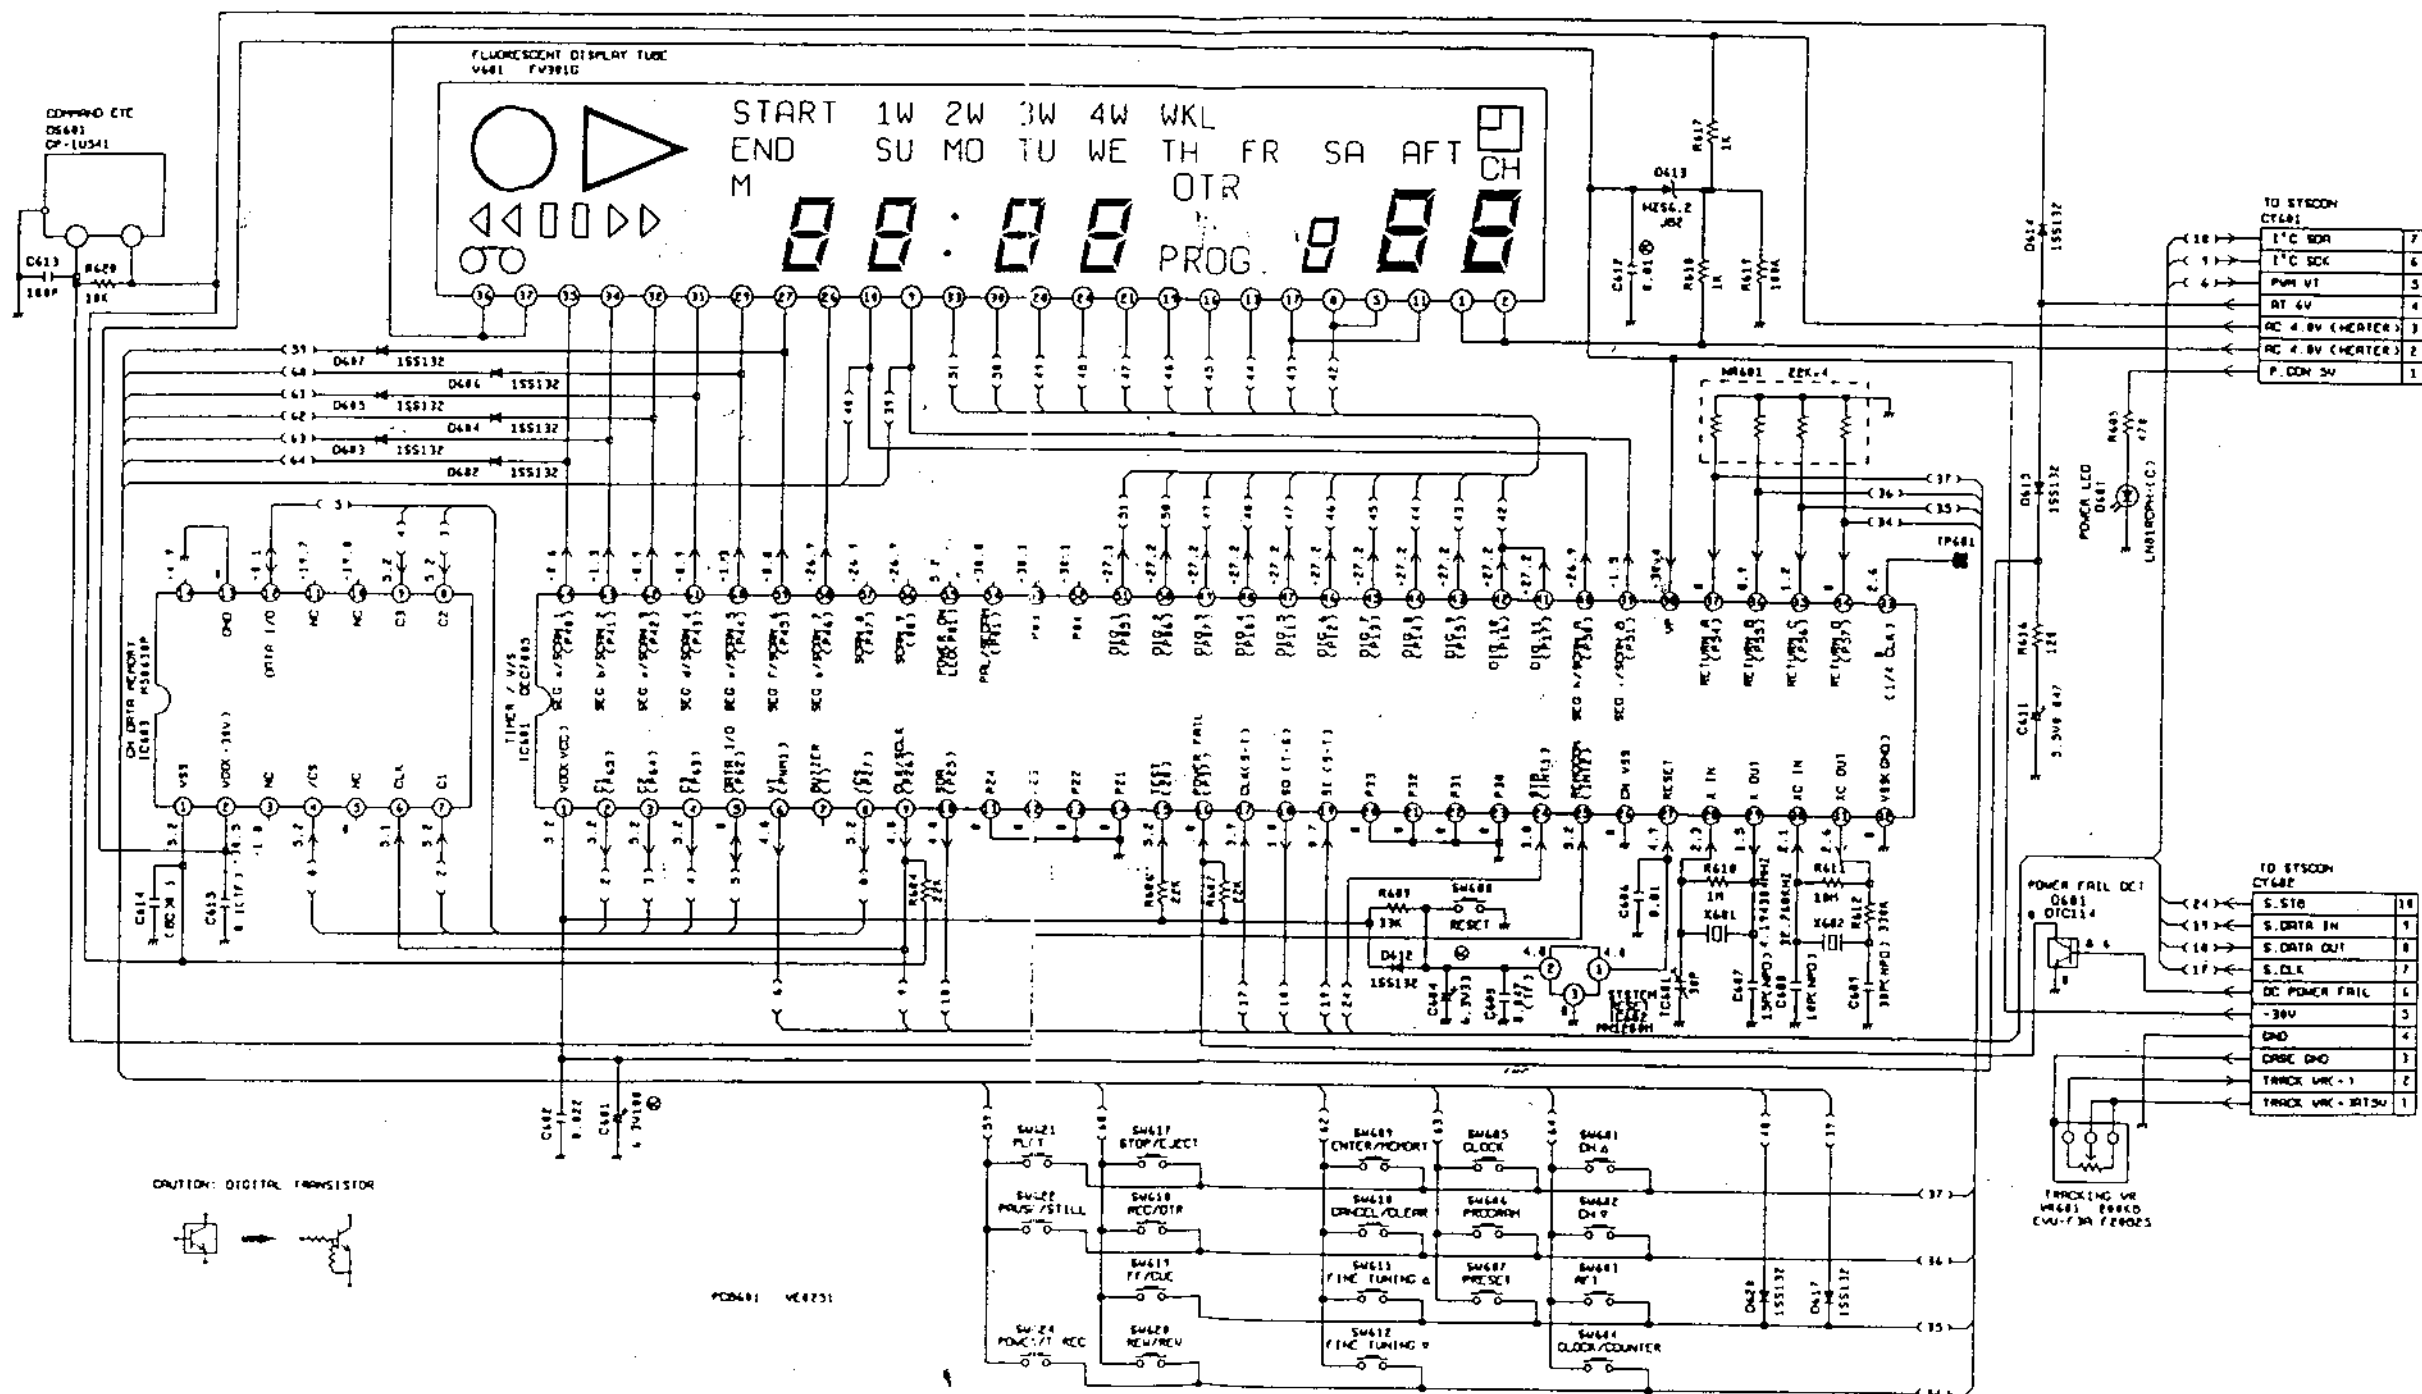

CAUTION: DIGITAL TRANSISTOR

ATTENTION: LES PIÈCES MARQUÉES PAR UN Δ SONT DIRECTIONNELLES EN POINT DE MISE SECURITE. N'UTILISER QUE CELLES DÉCRITES DANS LA NOMÉCLATURE DES PIÈCES.

NOTE: THIS SCHEMATIC DIAGRAM IS THE LATEST AT THE TIME OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE.


TO SYSTEM CYLAR1

18	1°C SWR	7
17	1°C SWC	6
6	PWR VT	5
4	RT 4V	4
3	RC 4.0V (HEATER)	3
2	RC 4.0V (HEATER)	2
1	P. CON SW	1

POWER FAIL DC1

24	S. STO	18
19	S. DATA IN	1
18	S. DATA OUT	8
17	S. CLK	7
6	DC POWER FAIL	6
5	-30V	5
4	DND	4
3	DRBC DND	3
2	TRACK VAK - 1	2
1	TRACK VAK - RT50V	1

TUNER SCHEMATIC DIAGRAM

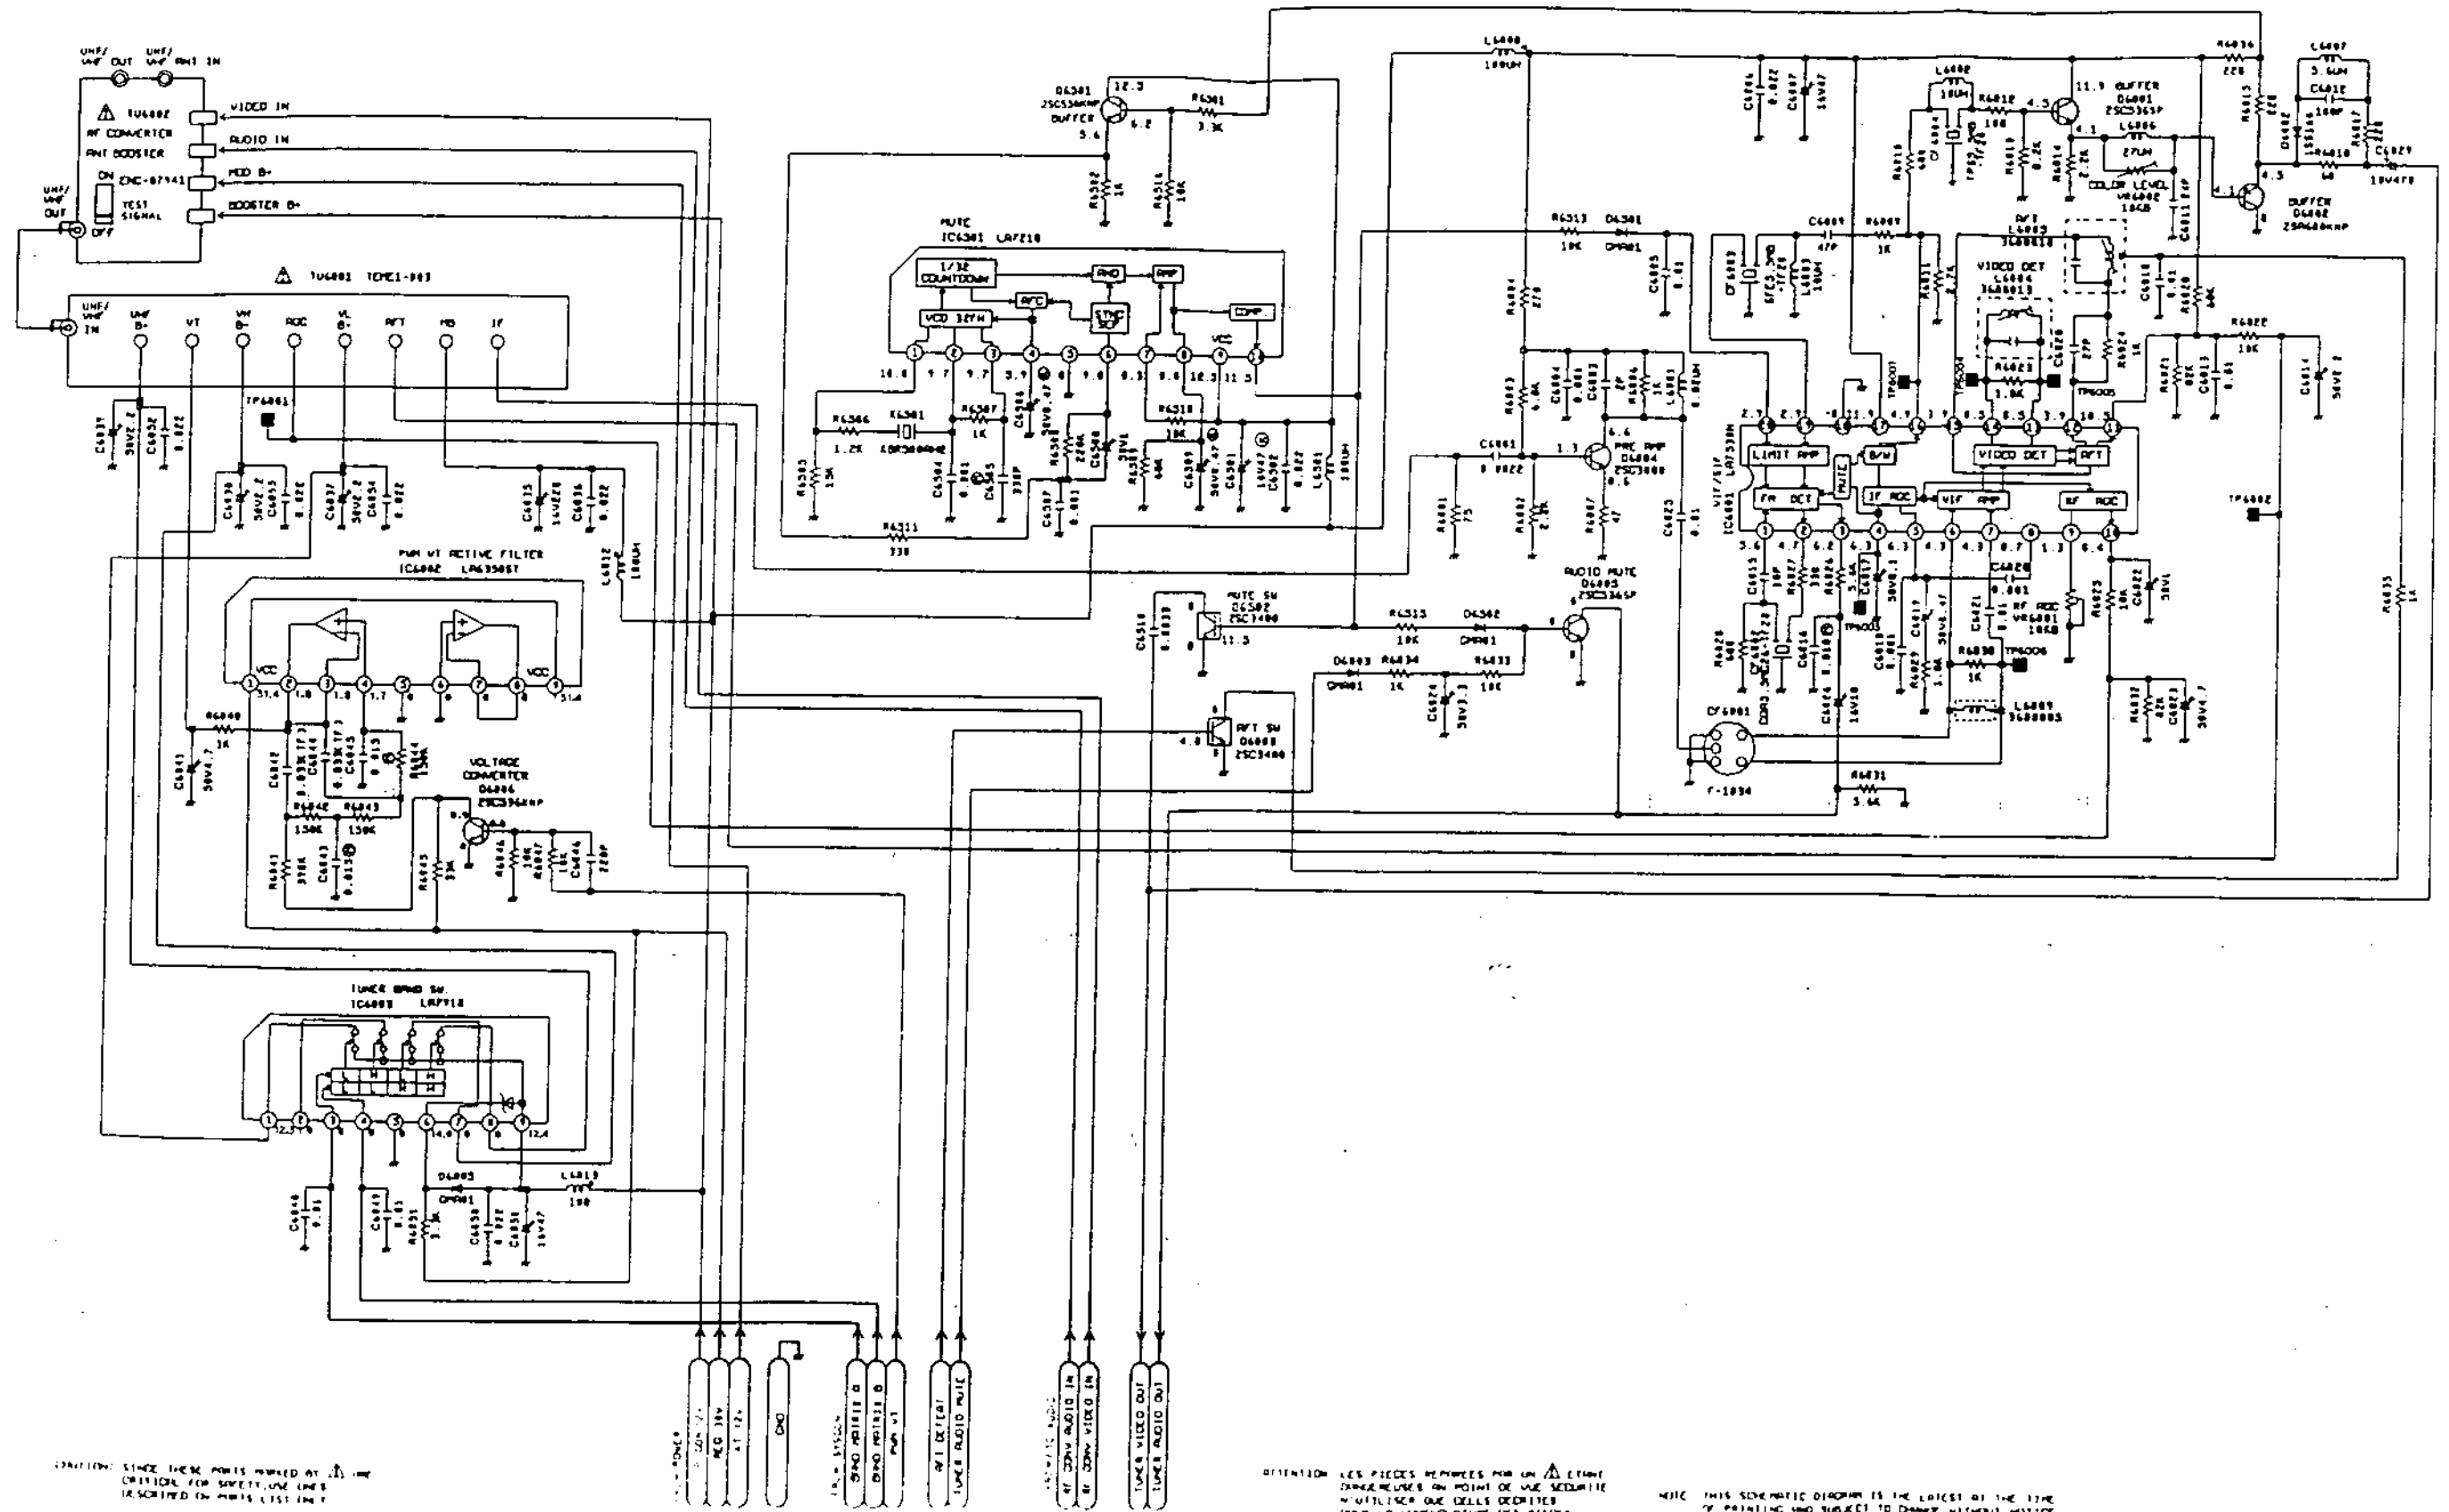


CAUTION: SINCE THESE PORTS ARE MARKED BY A TRIANGLE, THEY ARE CRITICAL FOR SERVICE. USE THE LINE DESCRIBED IN THIS LIST FIRST.

ATTENTION: LES PIÈCES REMPLACÉES PAR UN TRIANGLE SONT CRITIQUES EN CE QUI CONCERNE LA SÉCURITÉ. UTILISER D'ABORD LES LIGNES DÉCRITES DANS LA RÉFÉRENCE DES PIÈCES.

NOTE: THIS SCHEMATIC DIAGRAM IS THE LATEST AT THE TIME OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE.

SYSTEM CONTROL SCHEMATIC DIAGRAM

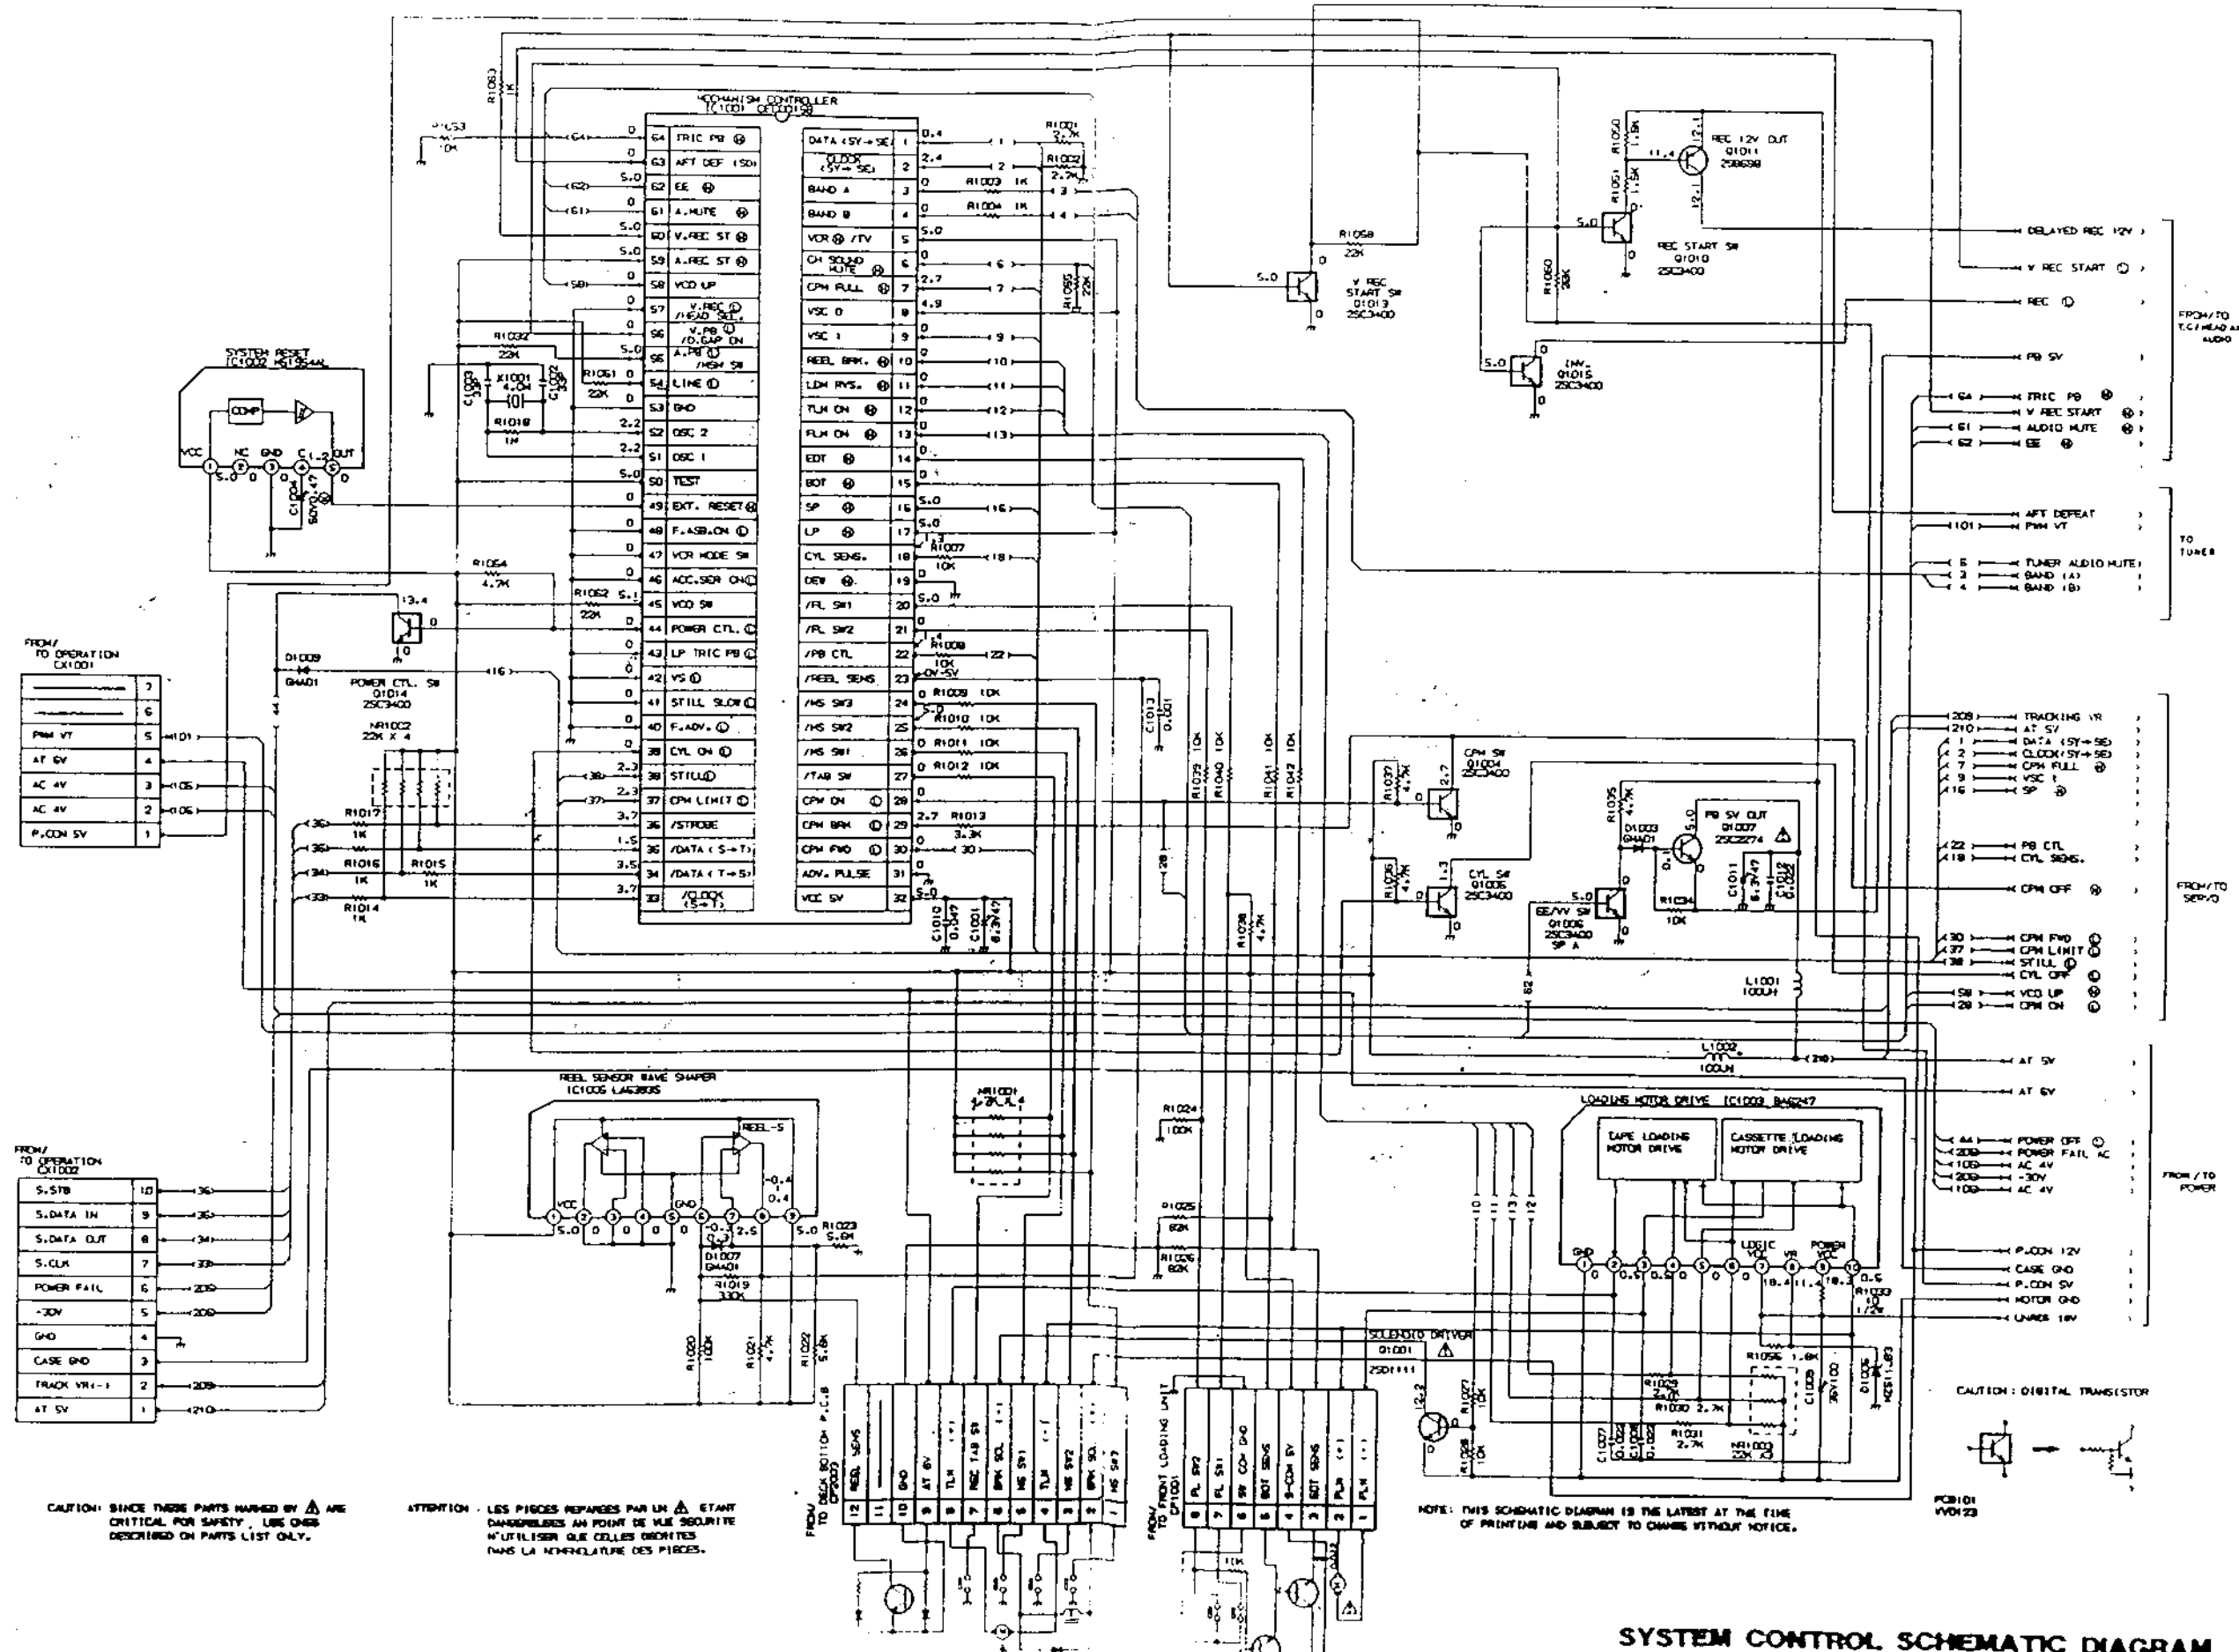


CAUTION: SINCE THESE PARTS MARKED BY Δ ARE CRITICAL FOR SAFETY, USE ONLY THOSE DESCRIBED ON PARTS LIST ONLY.


ATTENTION: LES PIÈCES MARQUÉES PAR UN Δ ÉTAIENT DANGEREUSES AU POINT DE VUE SÉCURITÉ N'UTILISER QUE CELLES DÉCRITES DANS LA NÉCESSAIRE DES PIÈCES.

SYSTEM CONTROL SCHEMATIC DIAGRAM

SYSTEM CONTROL BLOCK DIAGRAM

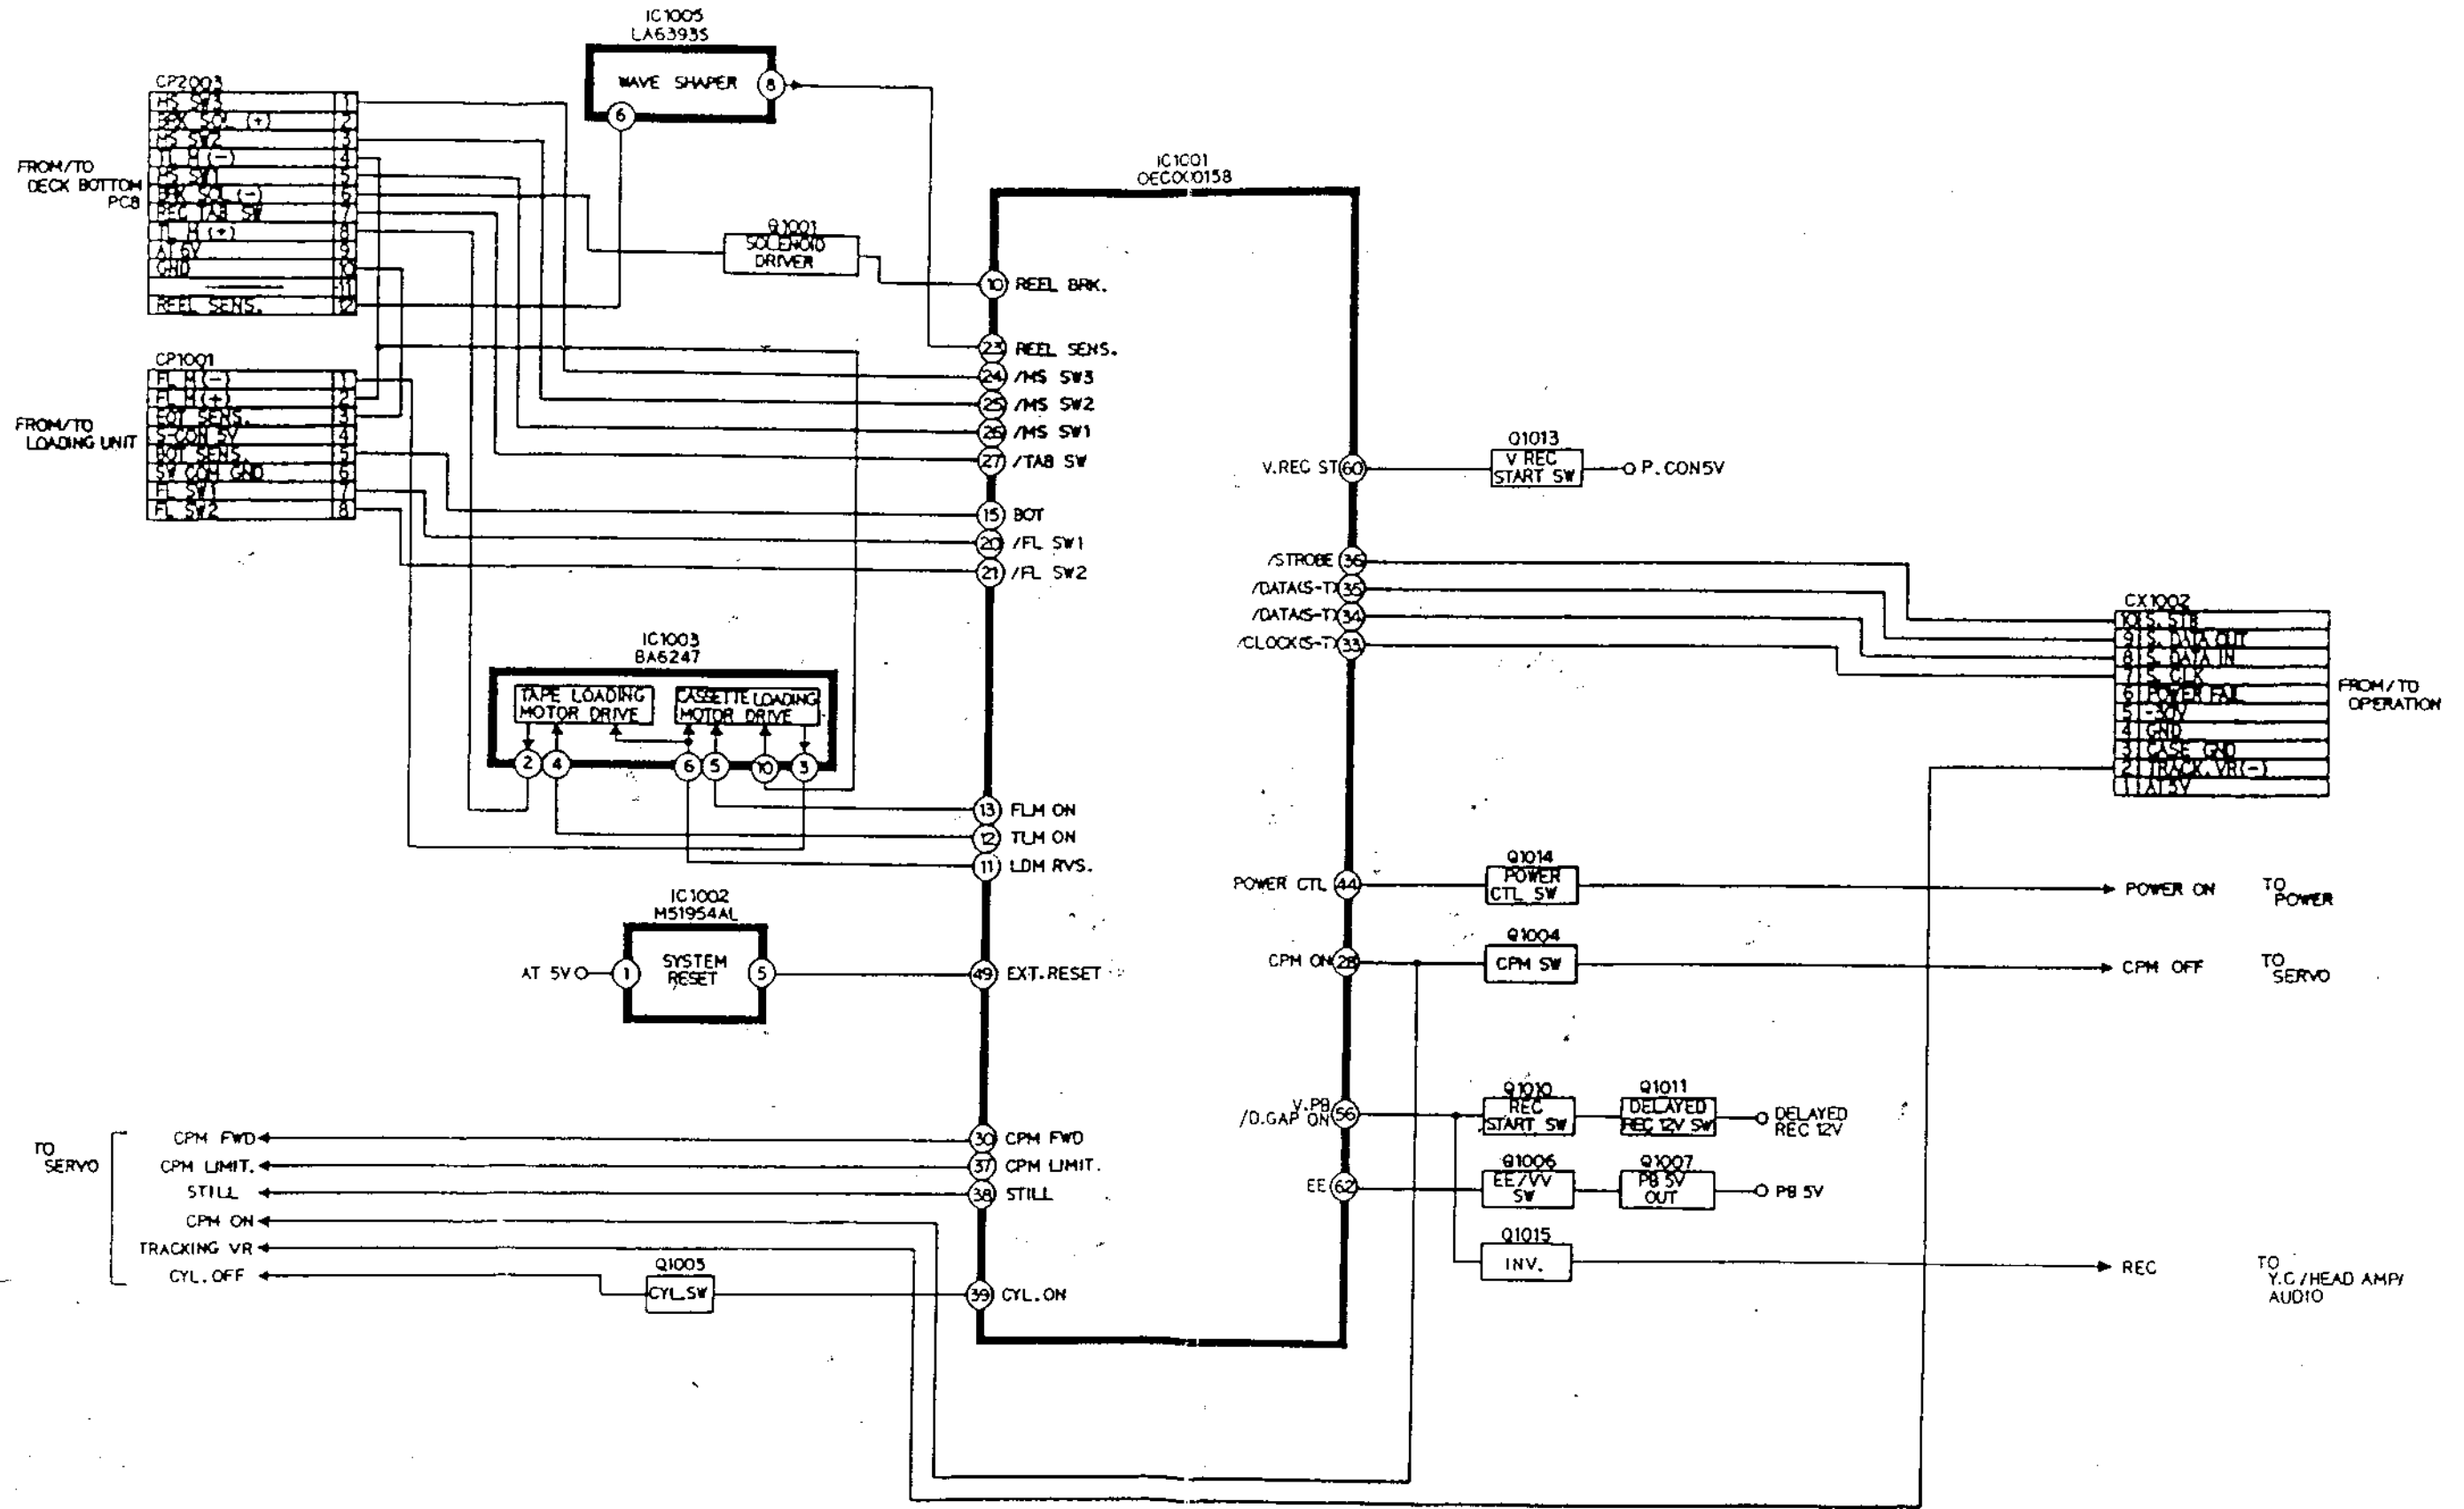











Y.C. BLOCK DIAGRAM

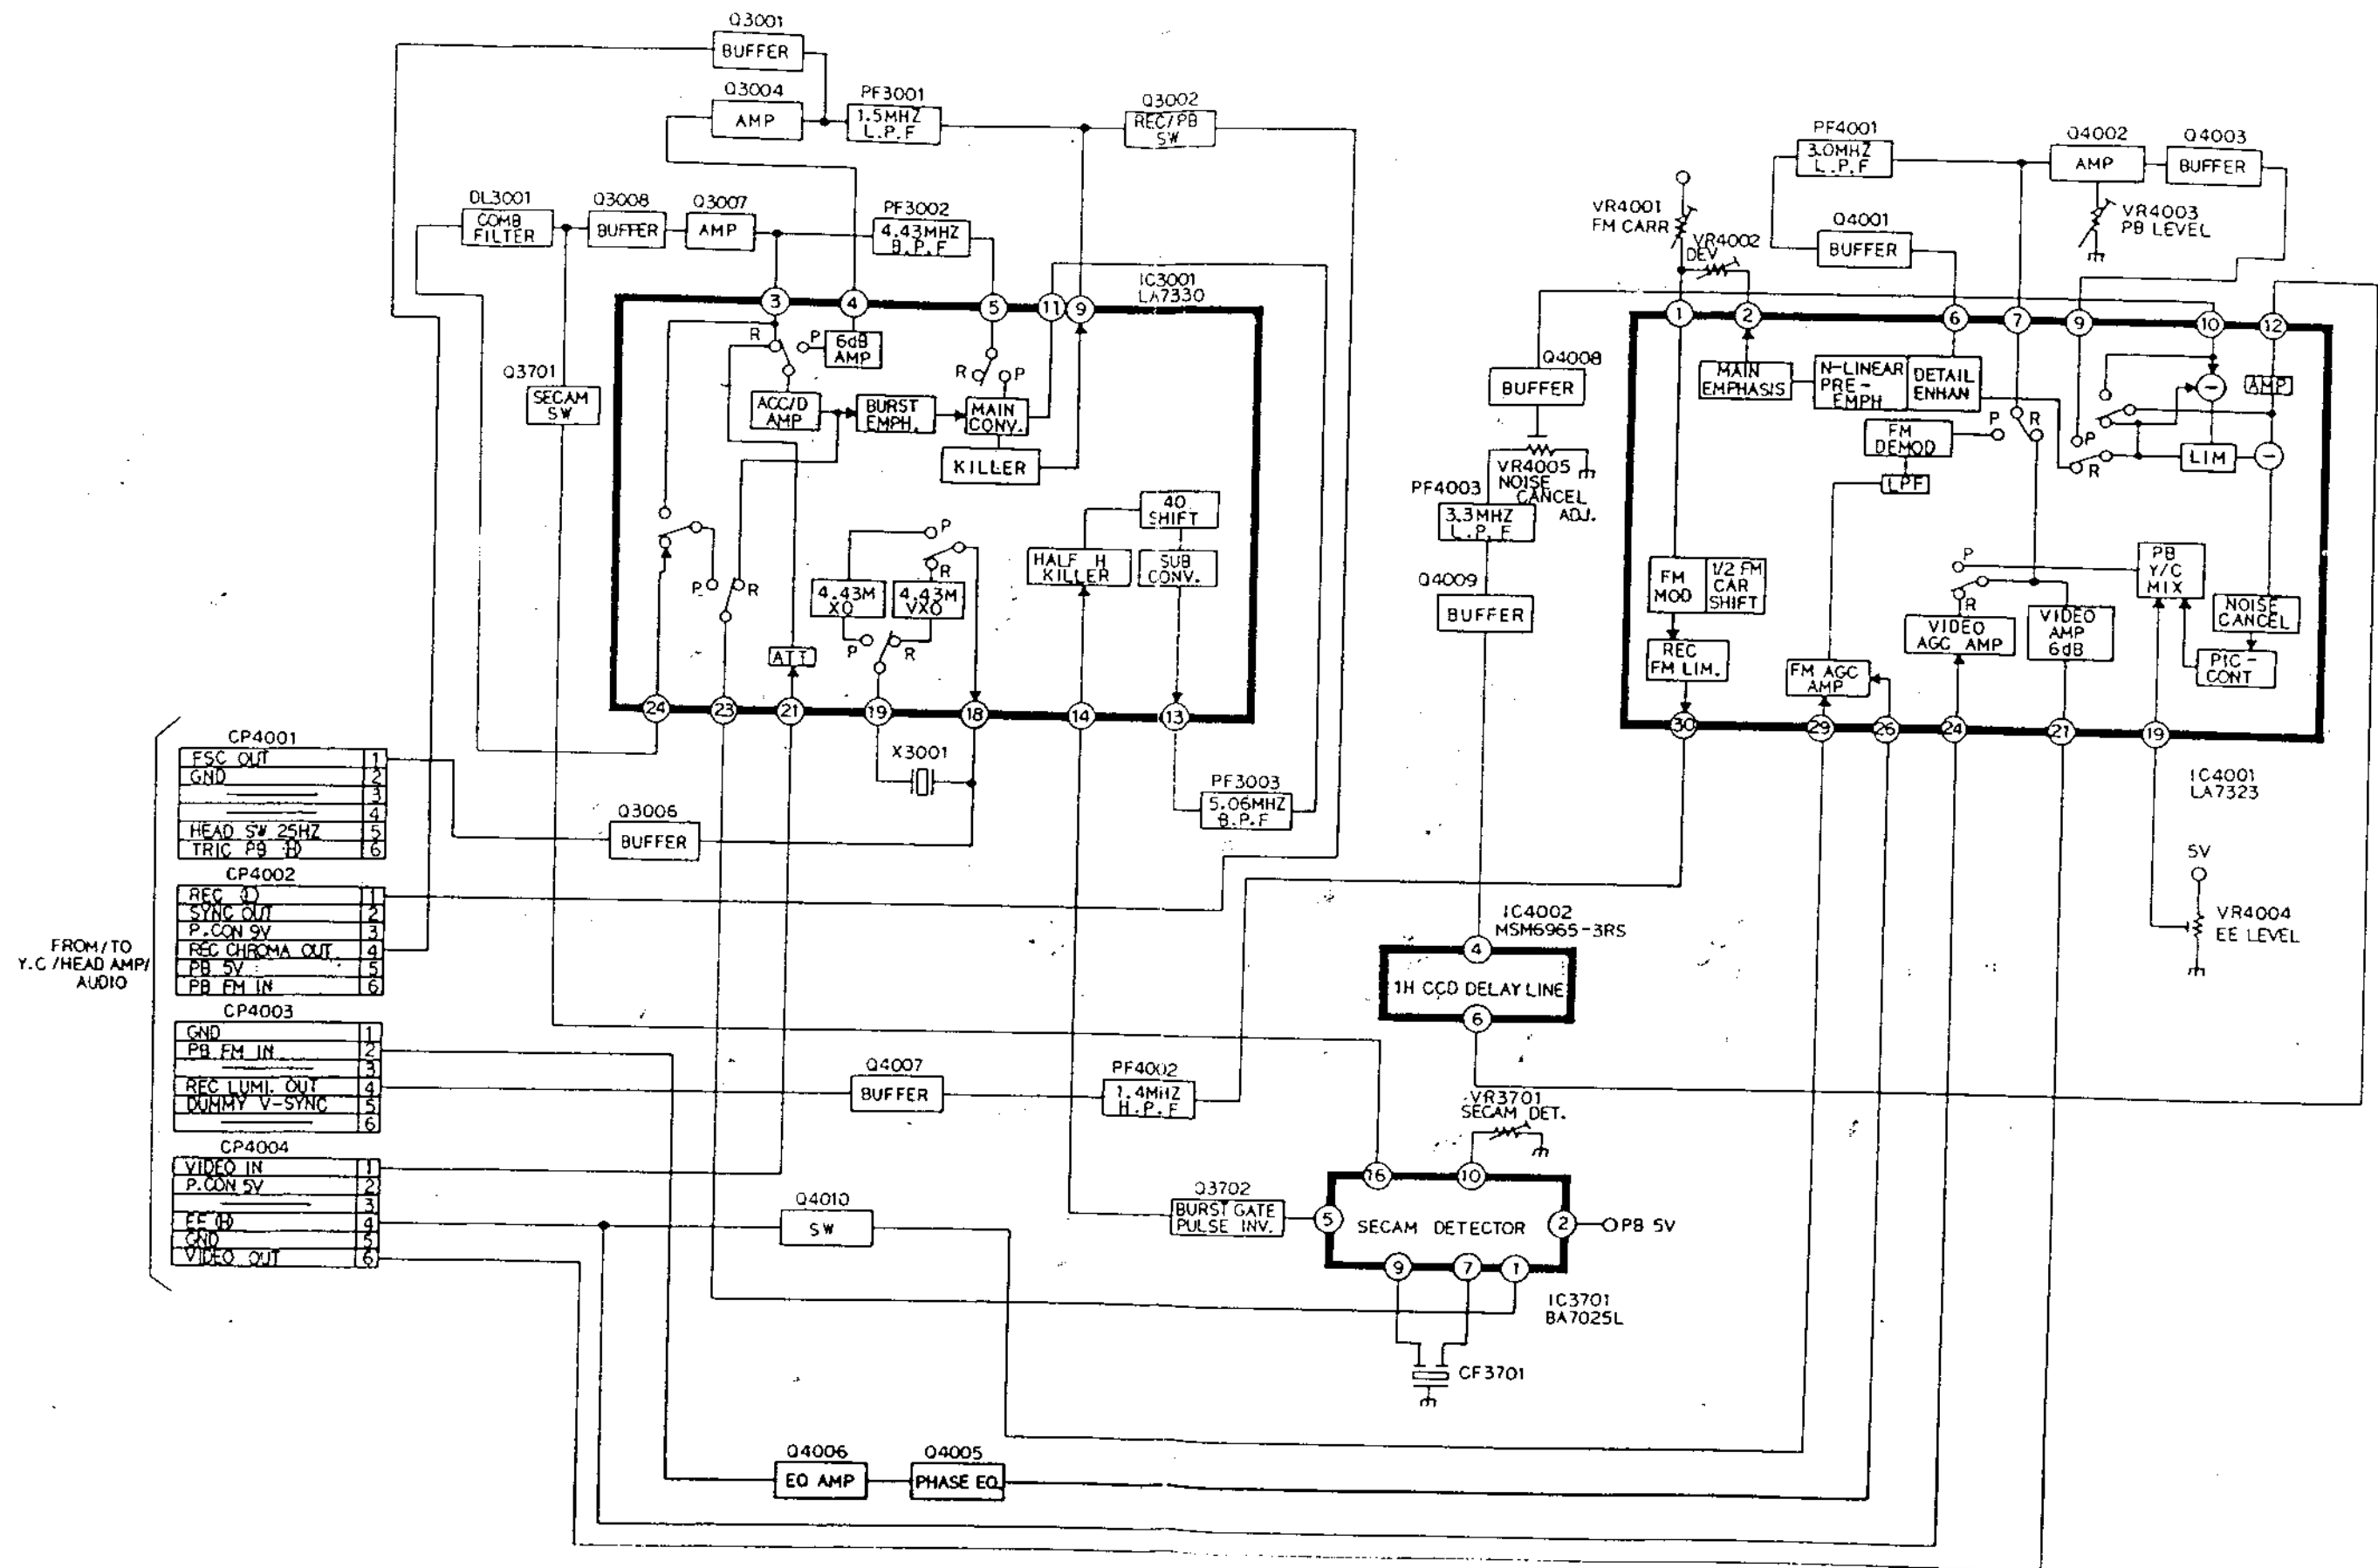

Y.C. SCHEMATIC DIAGRAM


CAUTION: DIGITAL TRANSISTOR

CAUTION: DIGITAL TRANSISTOR

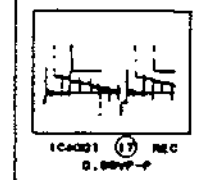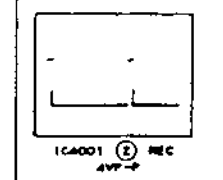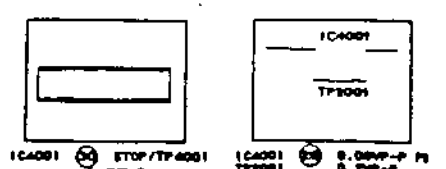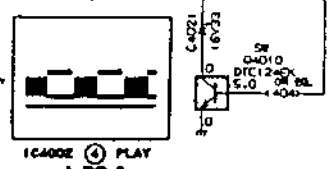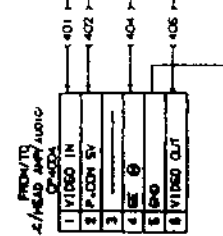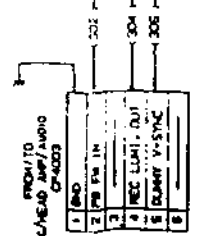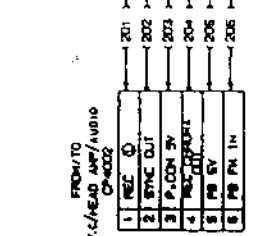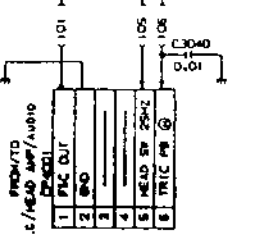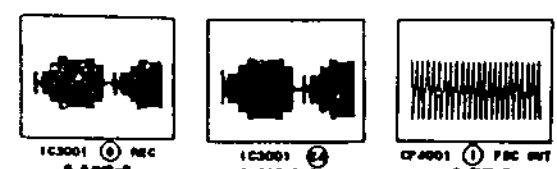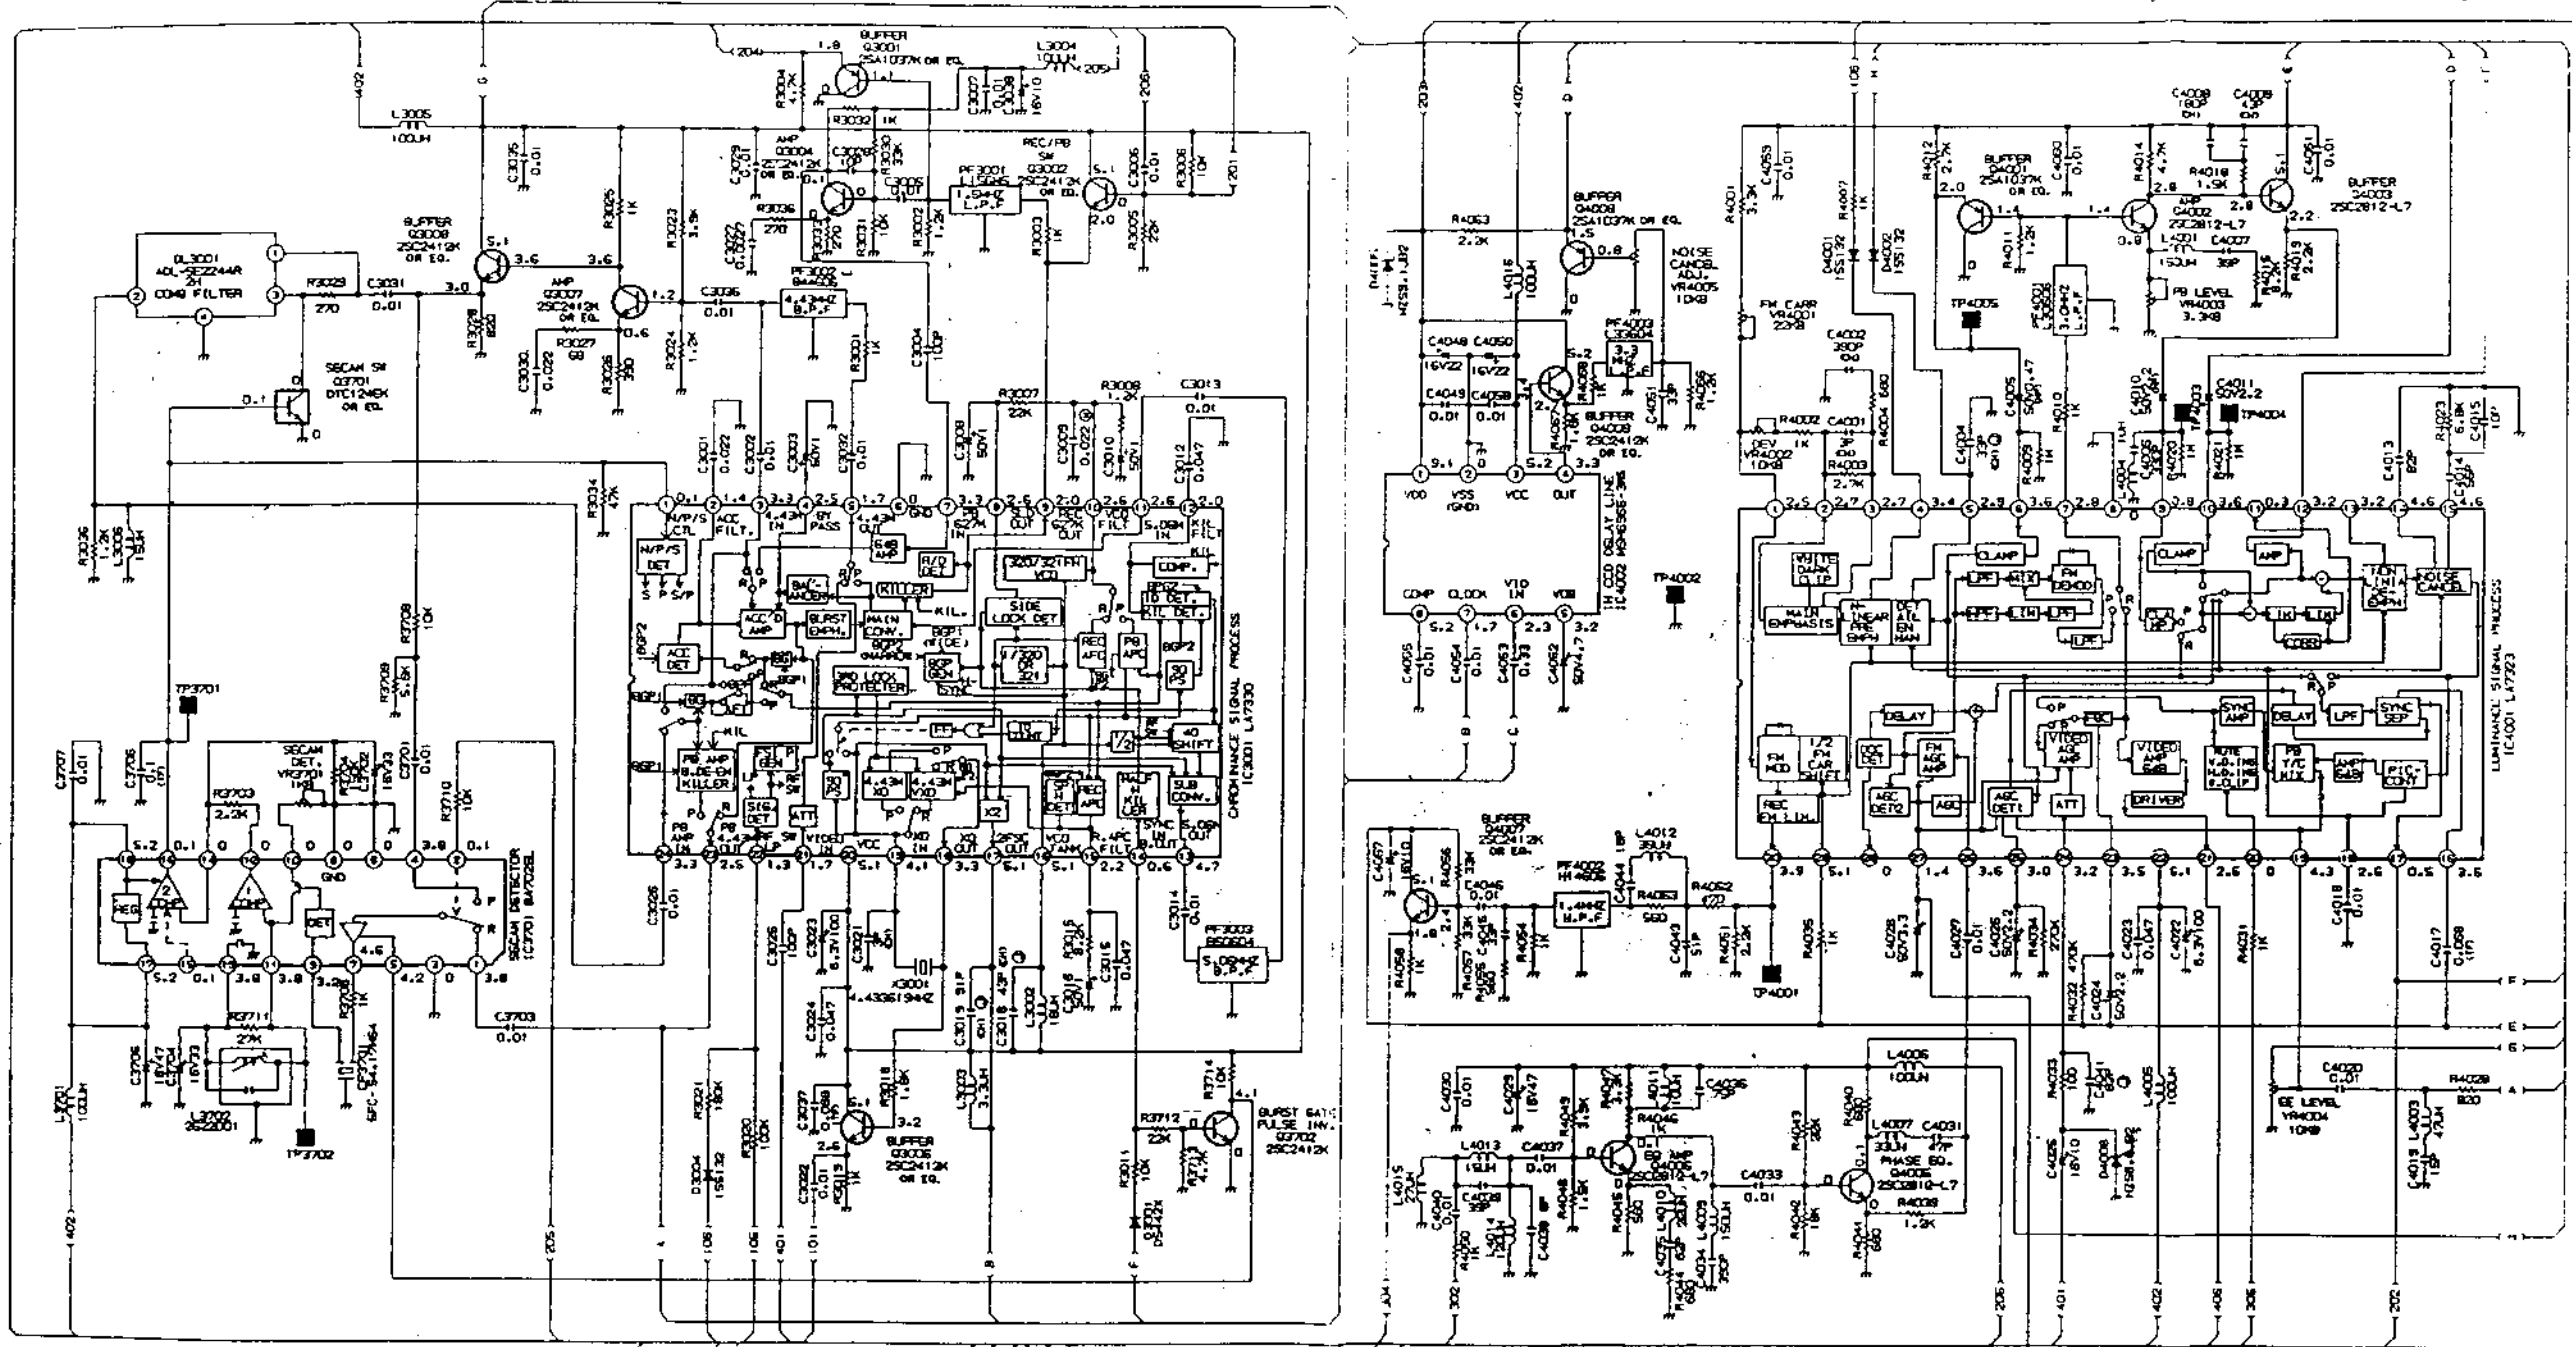


Y.C. SCHEMATIC DIAGRAM


POWER SUPPLY BLOCK DIAGRAM

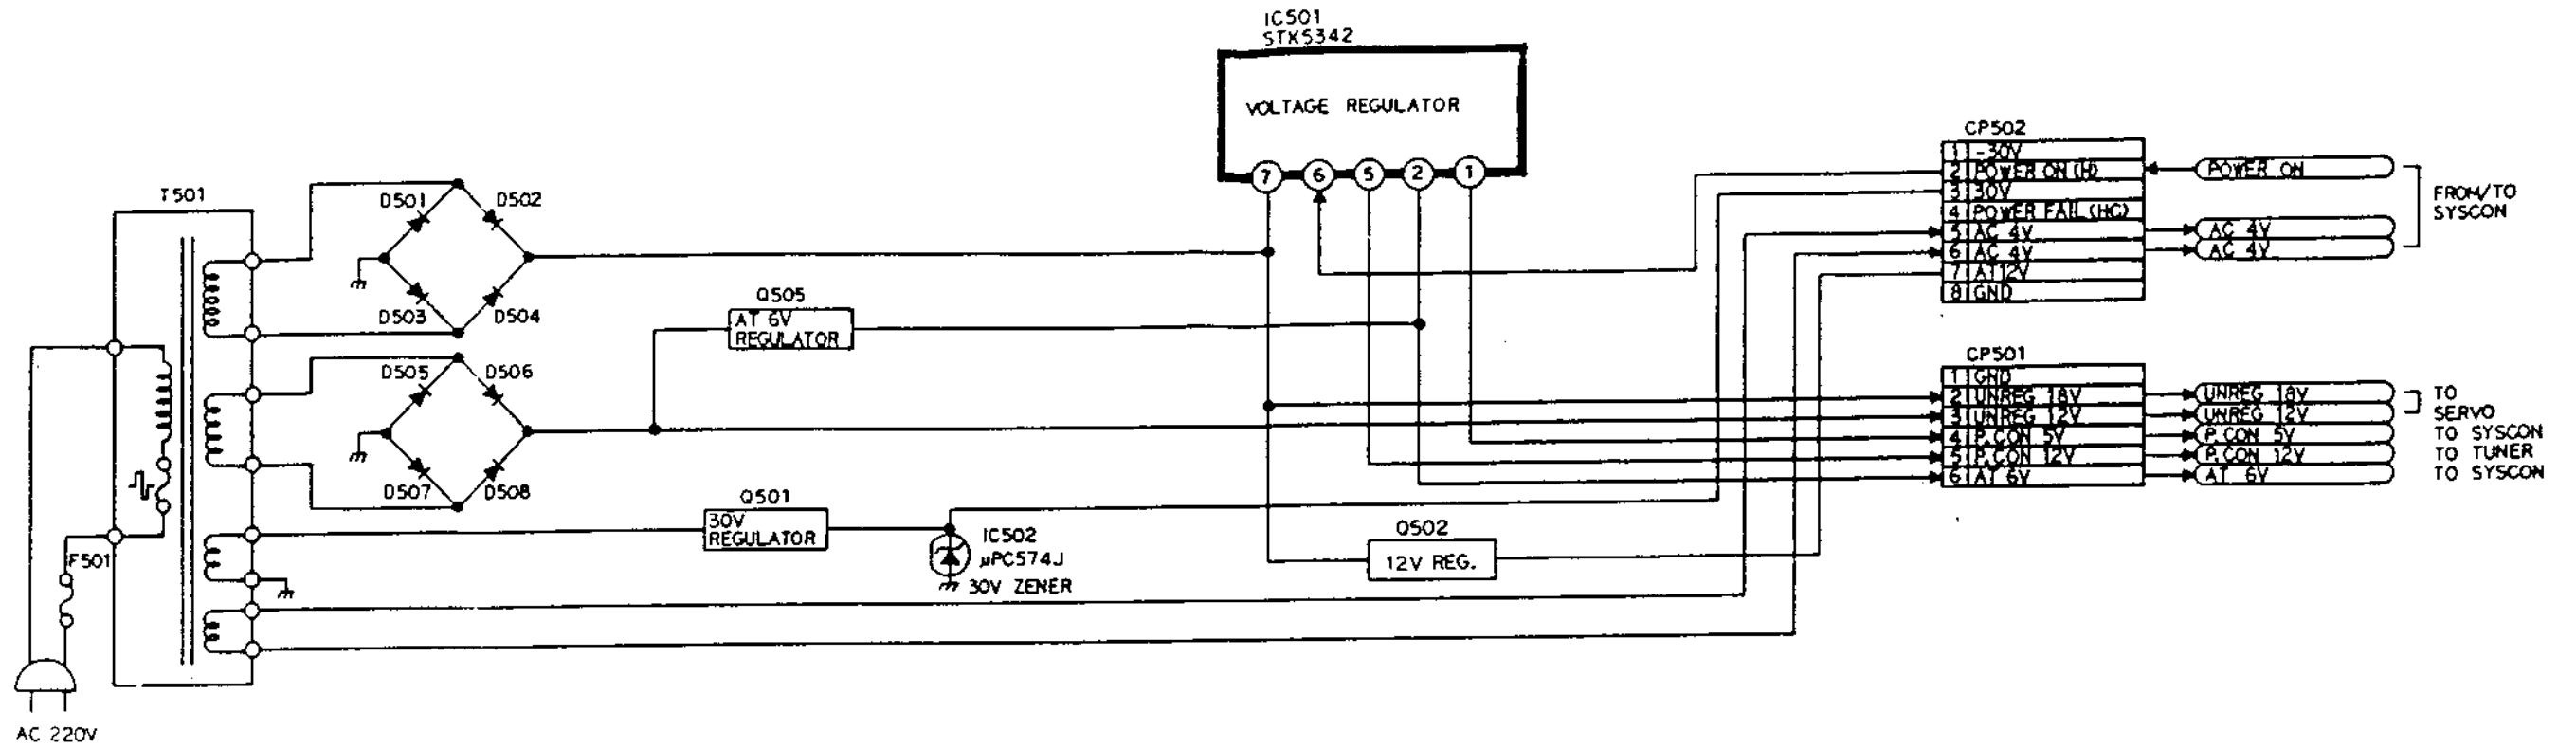

Y.C./HEAD AMP/AUDIO BLOCK DIAGRAM

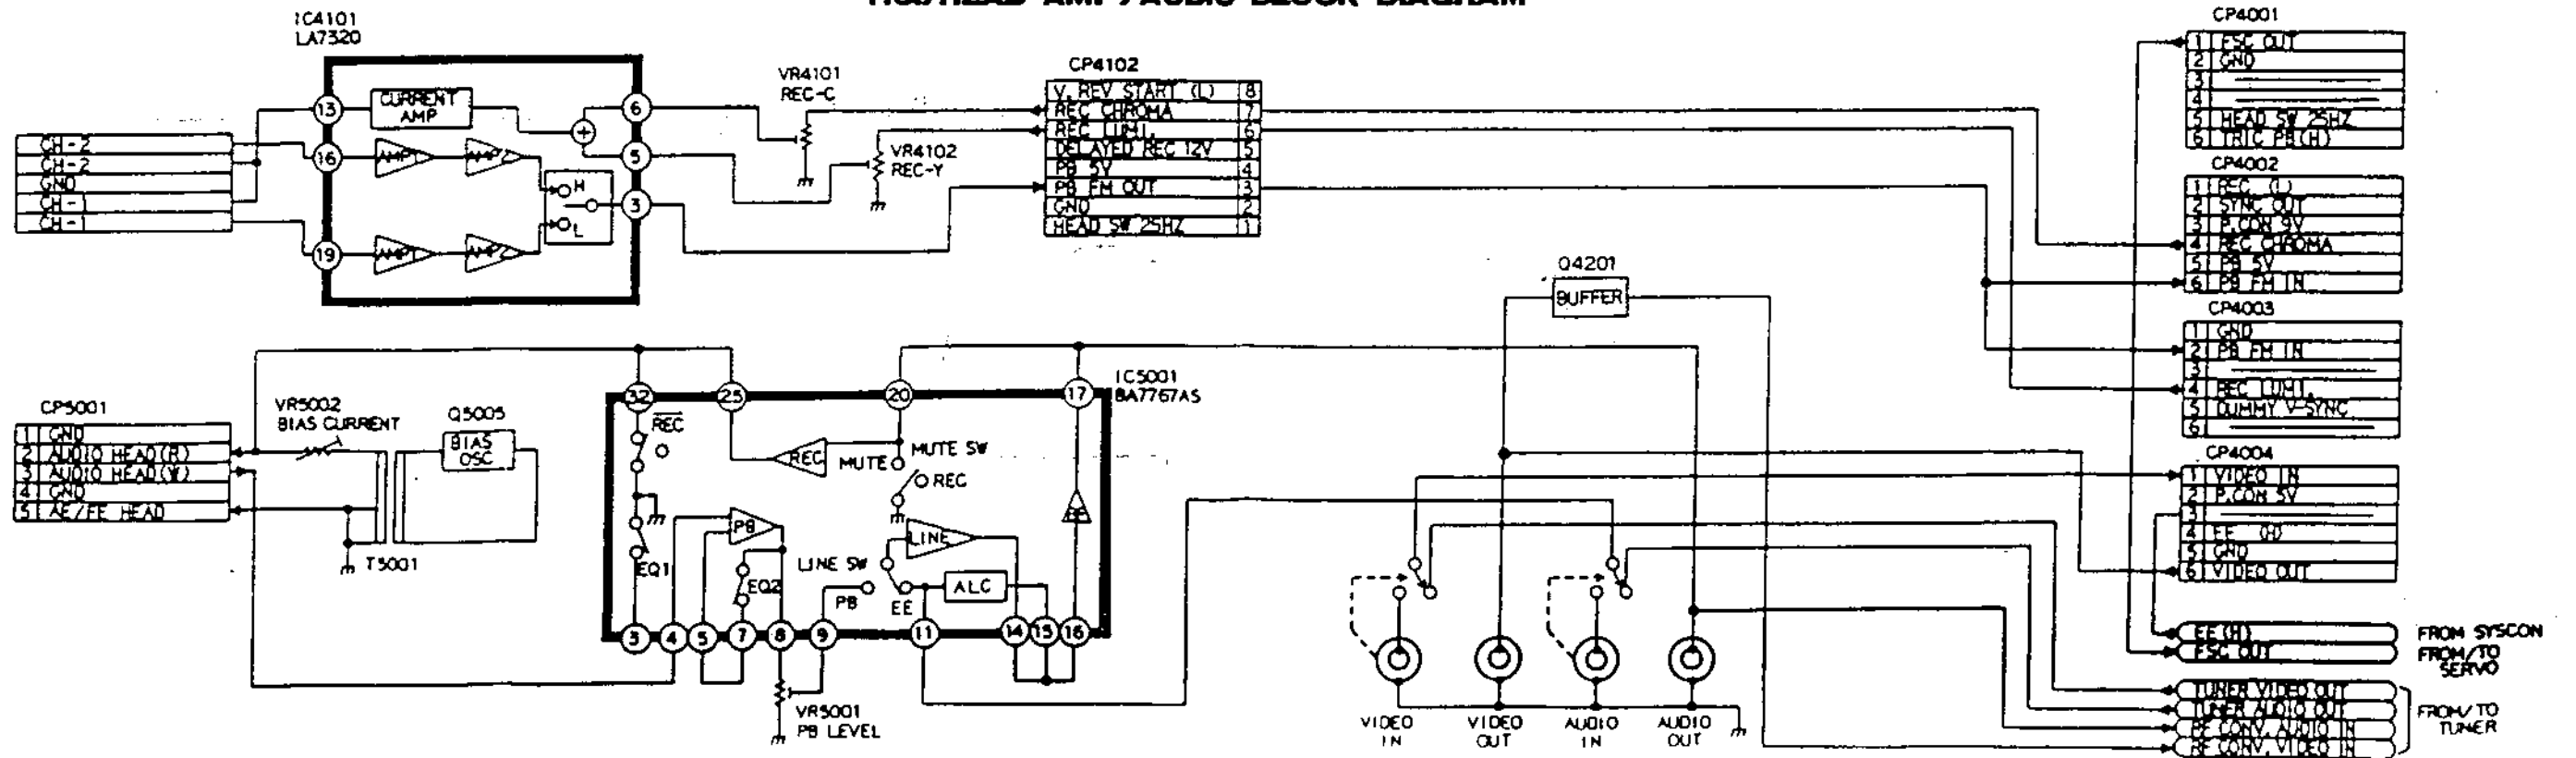

POWER SUPPLY SCHEMATIC DIAGRAM

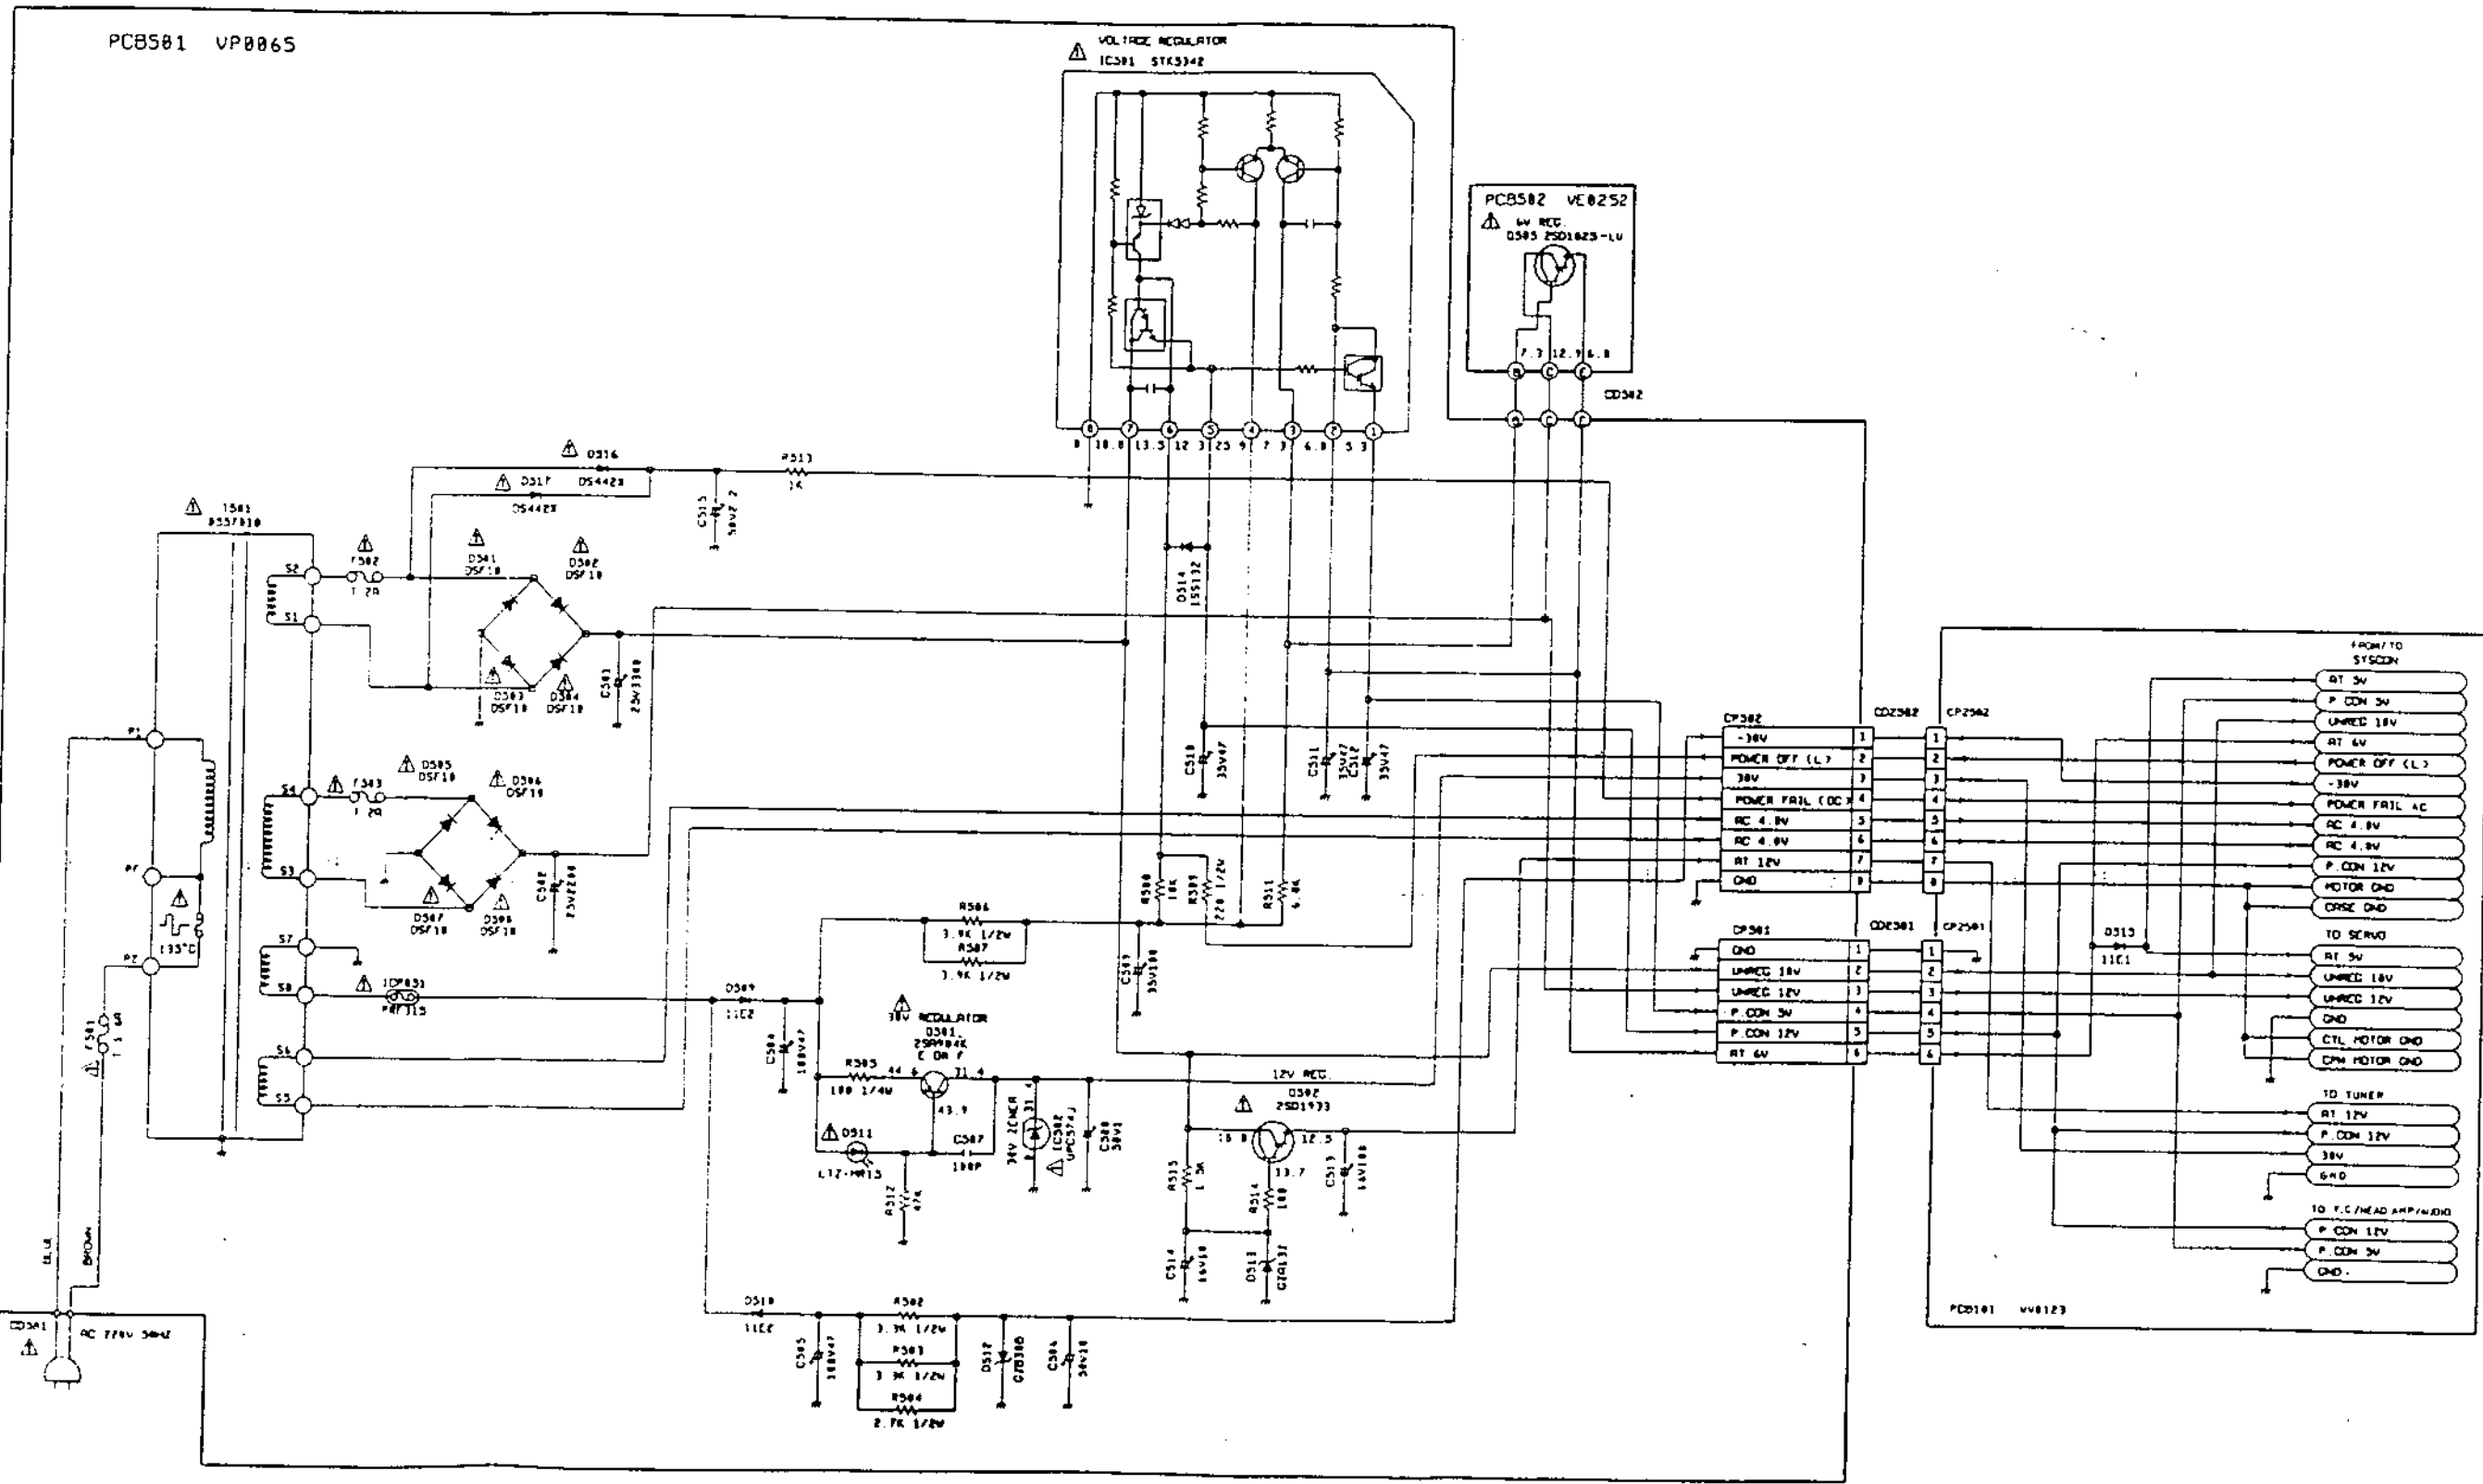


ATTENTION: SINCE THESE PARTS ARE NOT AVAILABLE IN THE MARKET, THE PARTS LISTED IN THIS SCHEMATIC DIAGRAM ARE SUBJECT TO CHANGE WITHOUT NOTICE.

ATTENTION: LES PIÉCES MENTIONNÉES SONT EN COURS DE DÉVELOPPEMENT. LES PIÉCES MENTIONNÉES SONT EN COURS DE DÉVELOPPEMENT. LES PIÉCES MENTIONNÉES SONT EN COURS DE DÉVELOPPEMENT.

NOTE: THIS SCHEMATIC DIAGRAM IS THE LATEST AT THE TIME OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE.

POWER SUPPLY SCHEMATIC DIAGRAM

POWER SUPPLY SCHEMATIC DIAGRAM

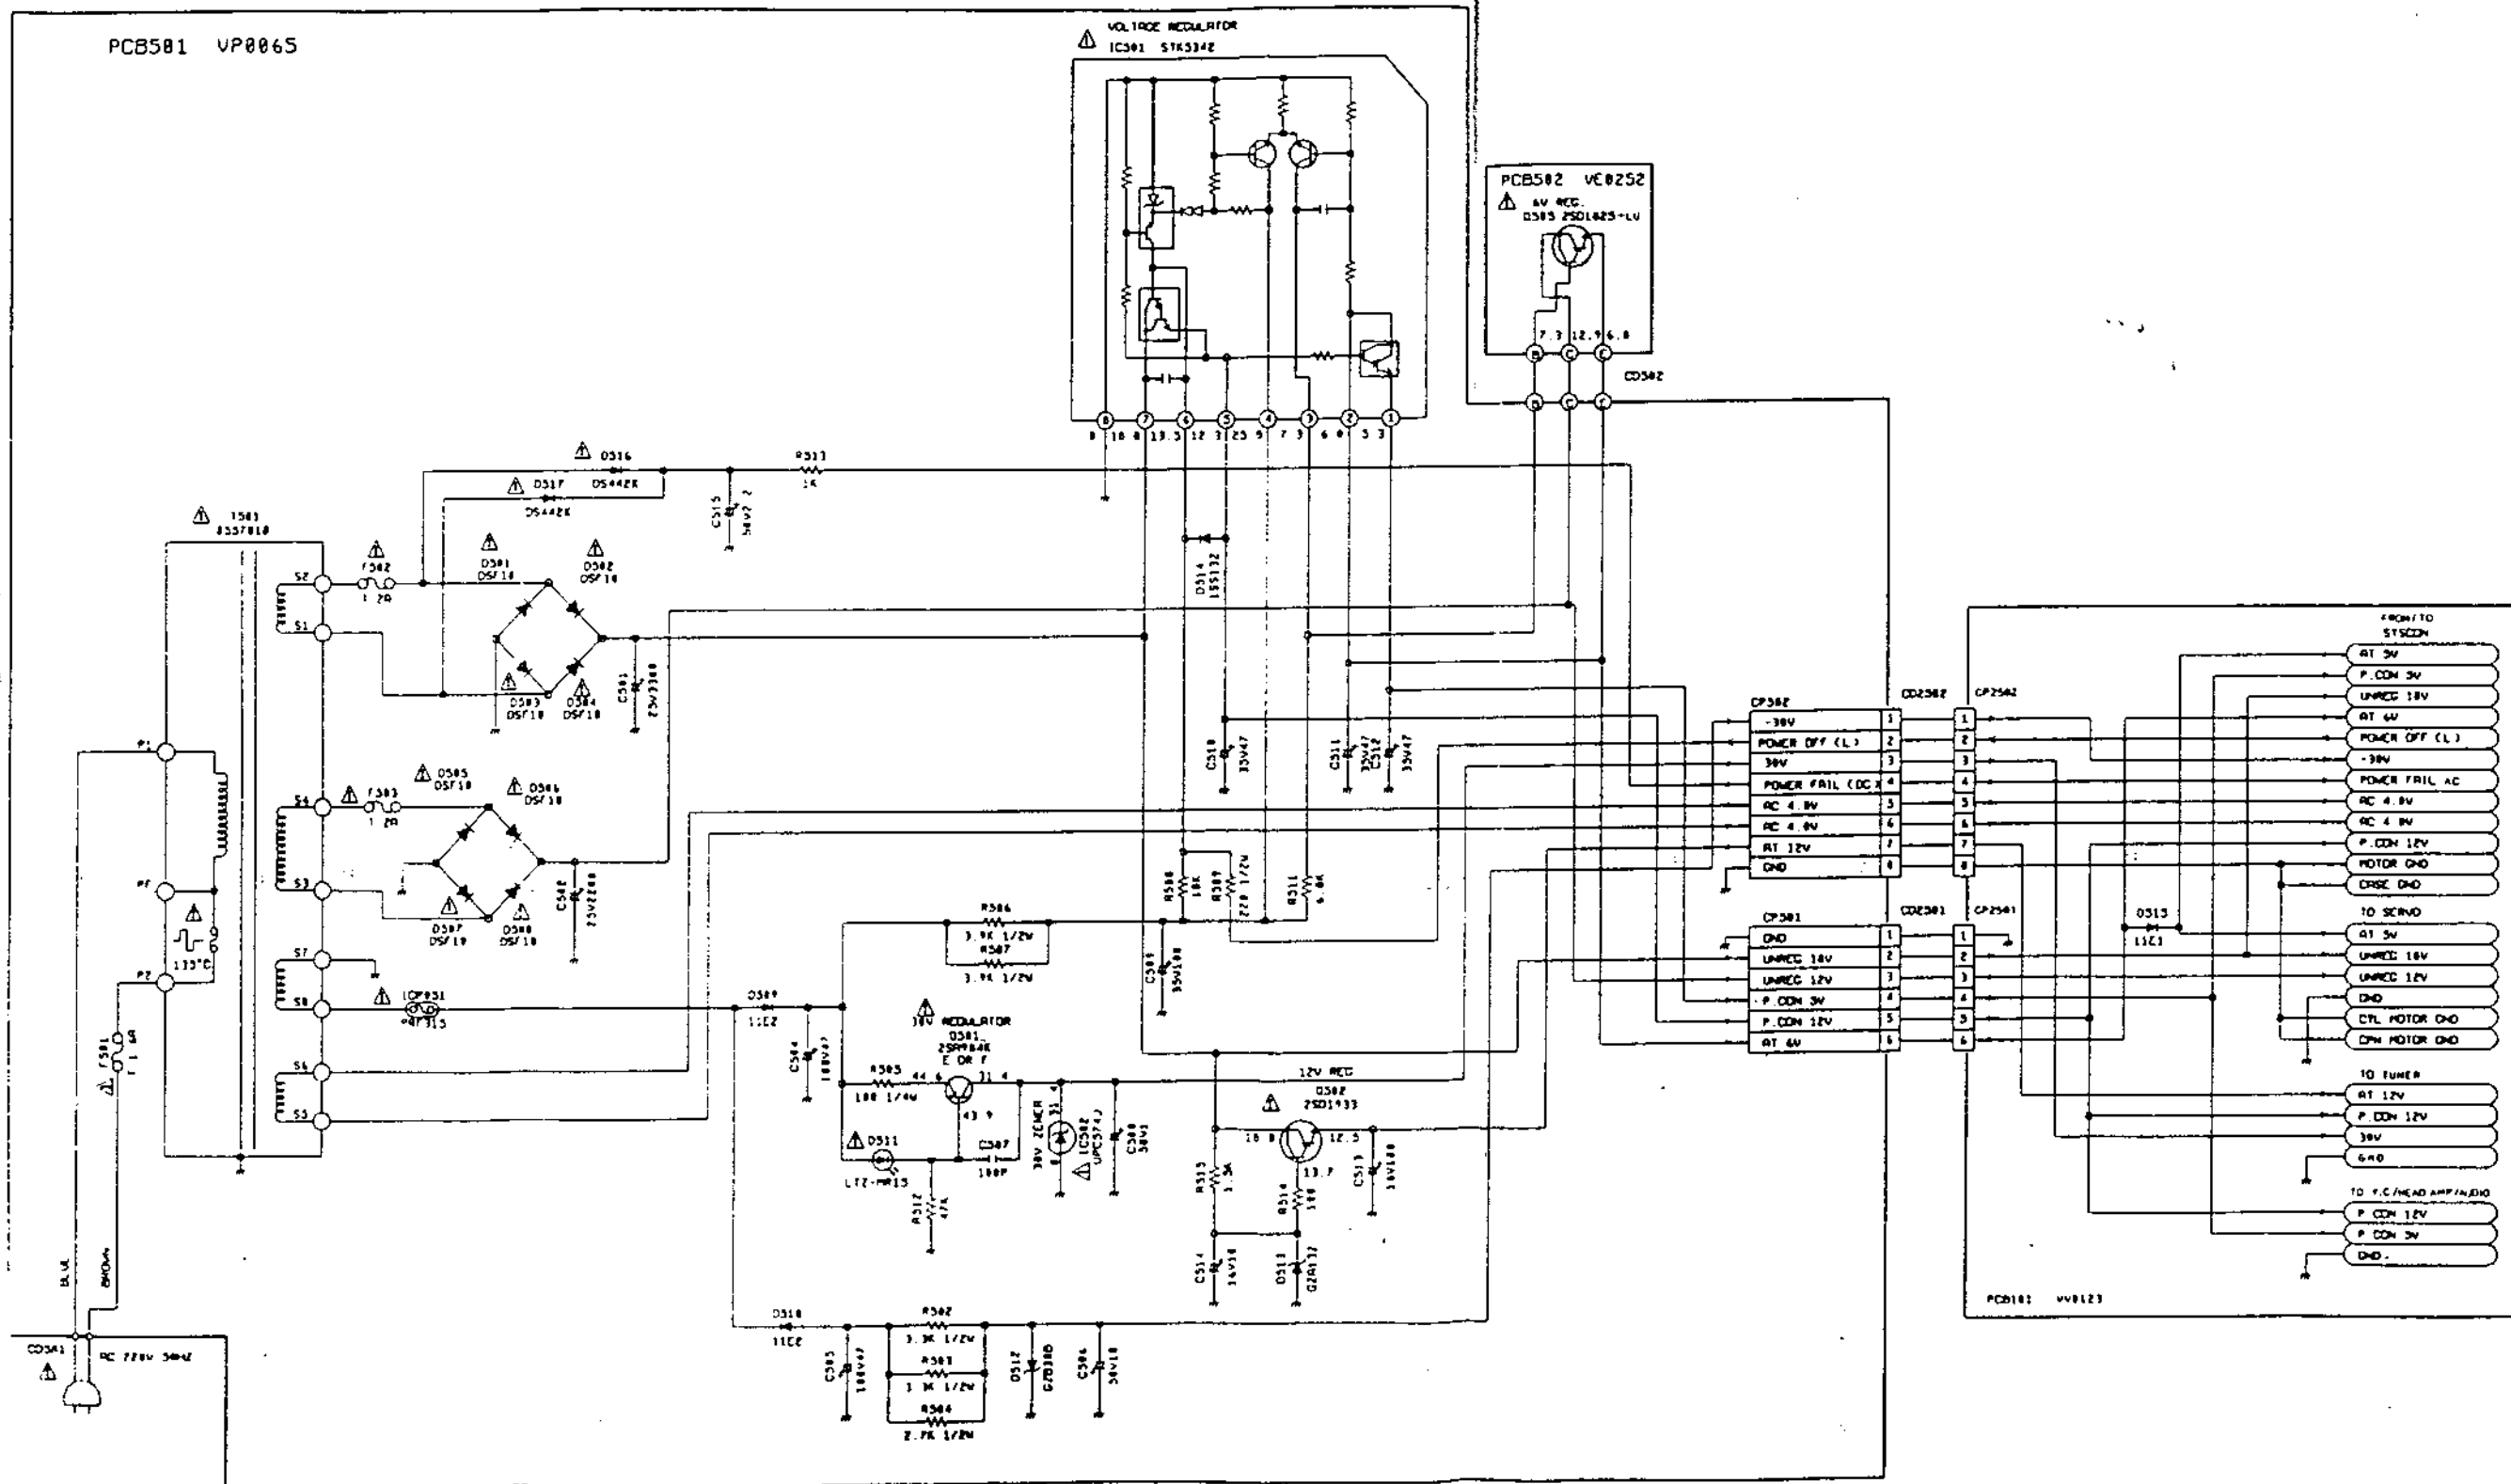


ATTENTION: LES PIÈCES NUMÉRÉES PAR UN Δ SONT
 IDENTIFIÉES EN POINT DE VUE SÉCURITÉ
 UTILISER QUE CELLES DÉCRITES
 DANS LA NÉCESSAIRE DES PIÈCES

ATTENTION: LES PIÈCES NUMÉRÉES PAR UN Δ SONT
 IDENTIFIÉES EN POINT DE VUE SÉCURITÉ
 UTILISER QUE CELLES DÉCRITES
 DANS LA NÉCESSAIRE DES PIÈCES

THIS SCHEMATIC DIAGRAM IS THE LATEST AT THE TIME
 OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE

POWER SUPPLY SCHEMATIC DIAGRAM

Y.C./HEAD AMP/AUDIO SCHEMATIC DIAGRAM

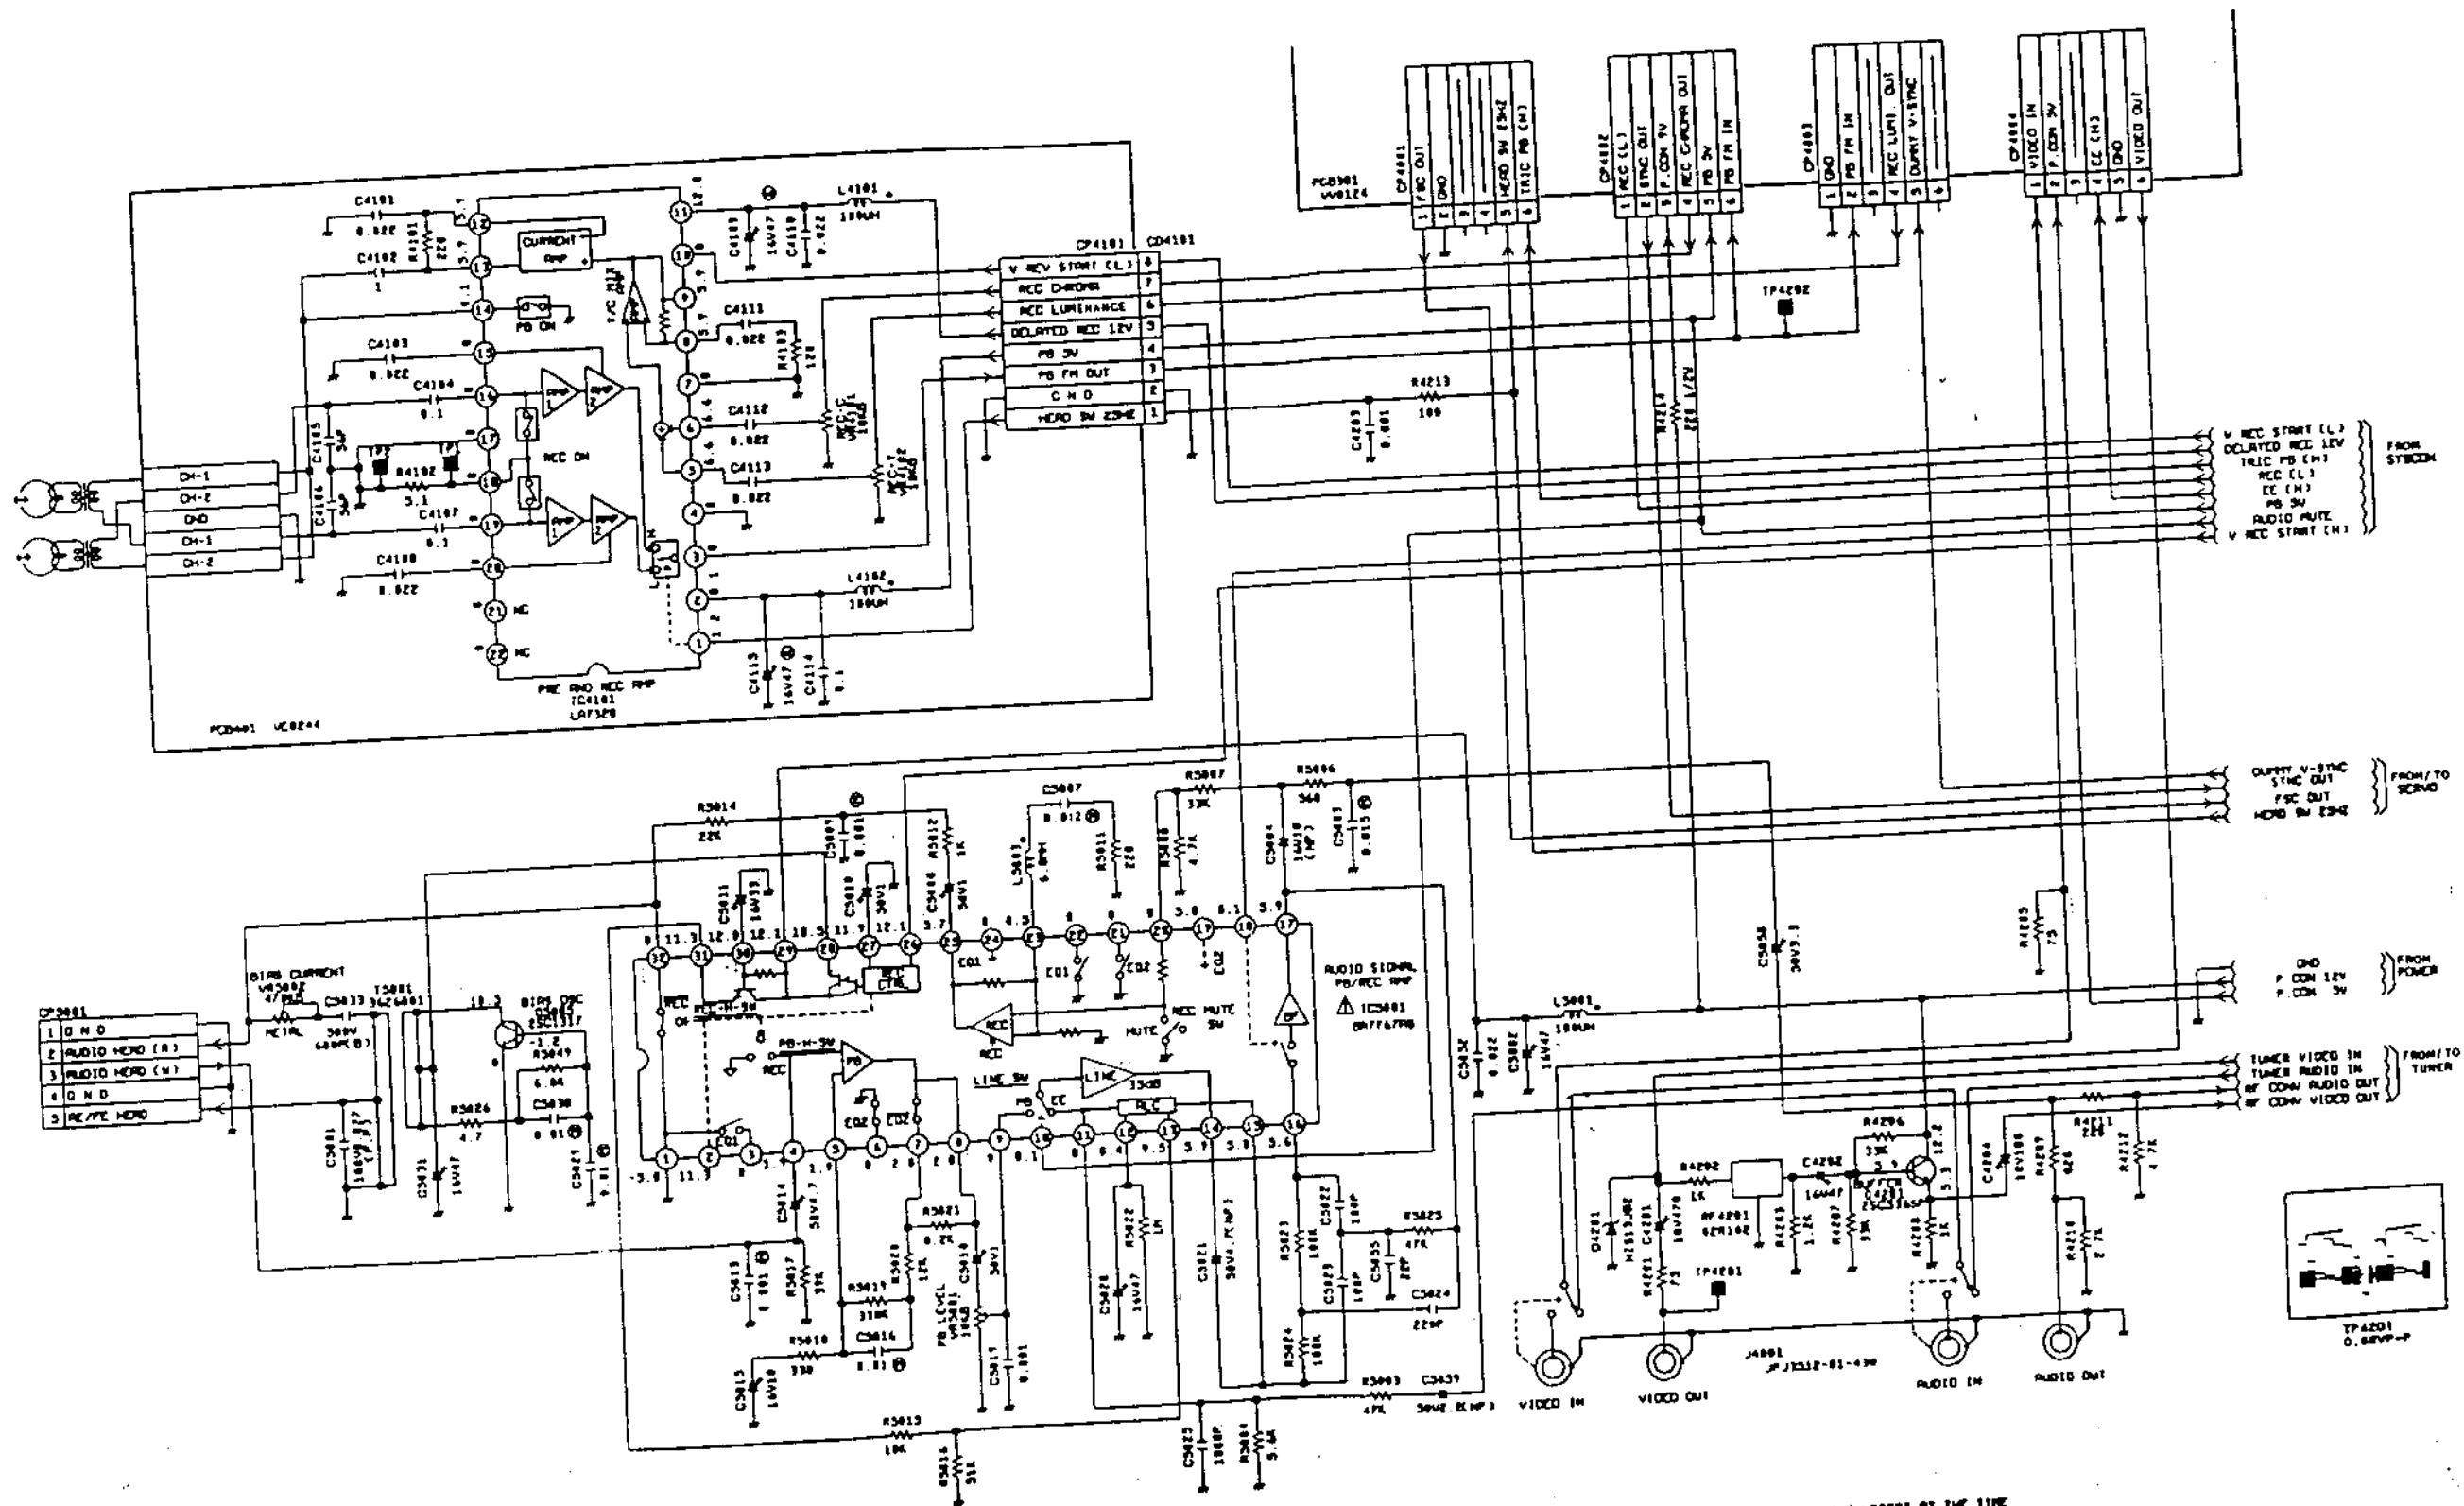


CAUTION: SINCE THESE PARTS MARKED BY Δ ARE CRITICAL FOR SAFETY, USE ONLY THOSE DESCRIBED IN PARTS LIST ONLY

ATTENTION: LES PIÈCES MARQUÉES PAR UN Δ ÉTAIENT CRUCIALES EN UN POINT DE VUE SÉCURITAIRE. N'UTILISEZ QUE CELLES DÉCRITES DANS LA NOMÉCLATURE DES PIÈCES


NOTE: THIS SCHEMATIC DIAGRAM IS THE LATEST AT THE TIME OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE.

Y.C./HEAD AMP/AUDIO SCHEMATIC DIAGRAM


INTERCONNECTION DIAGRAM

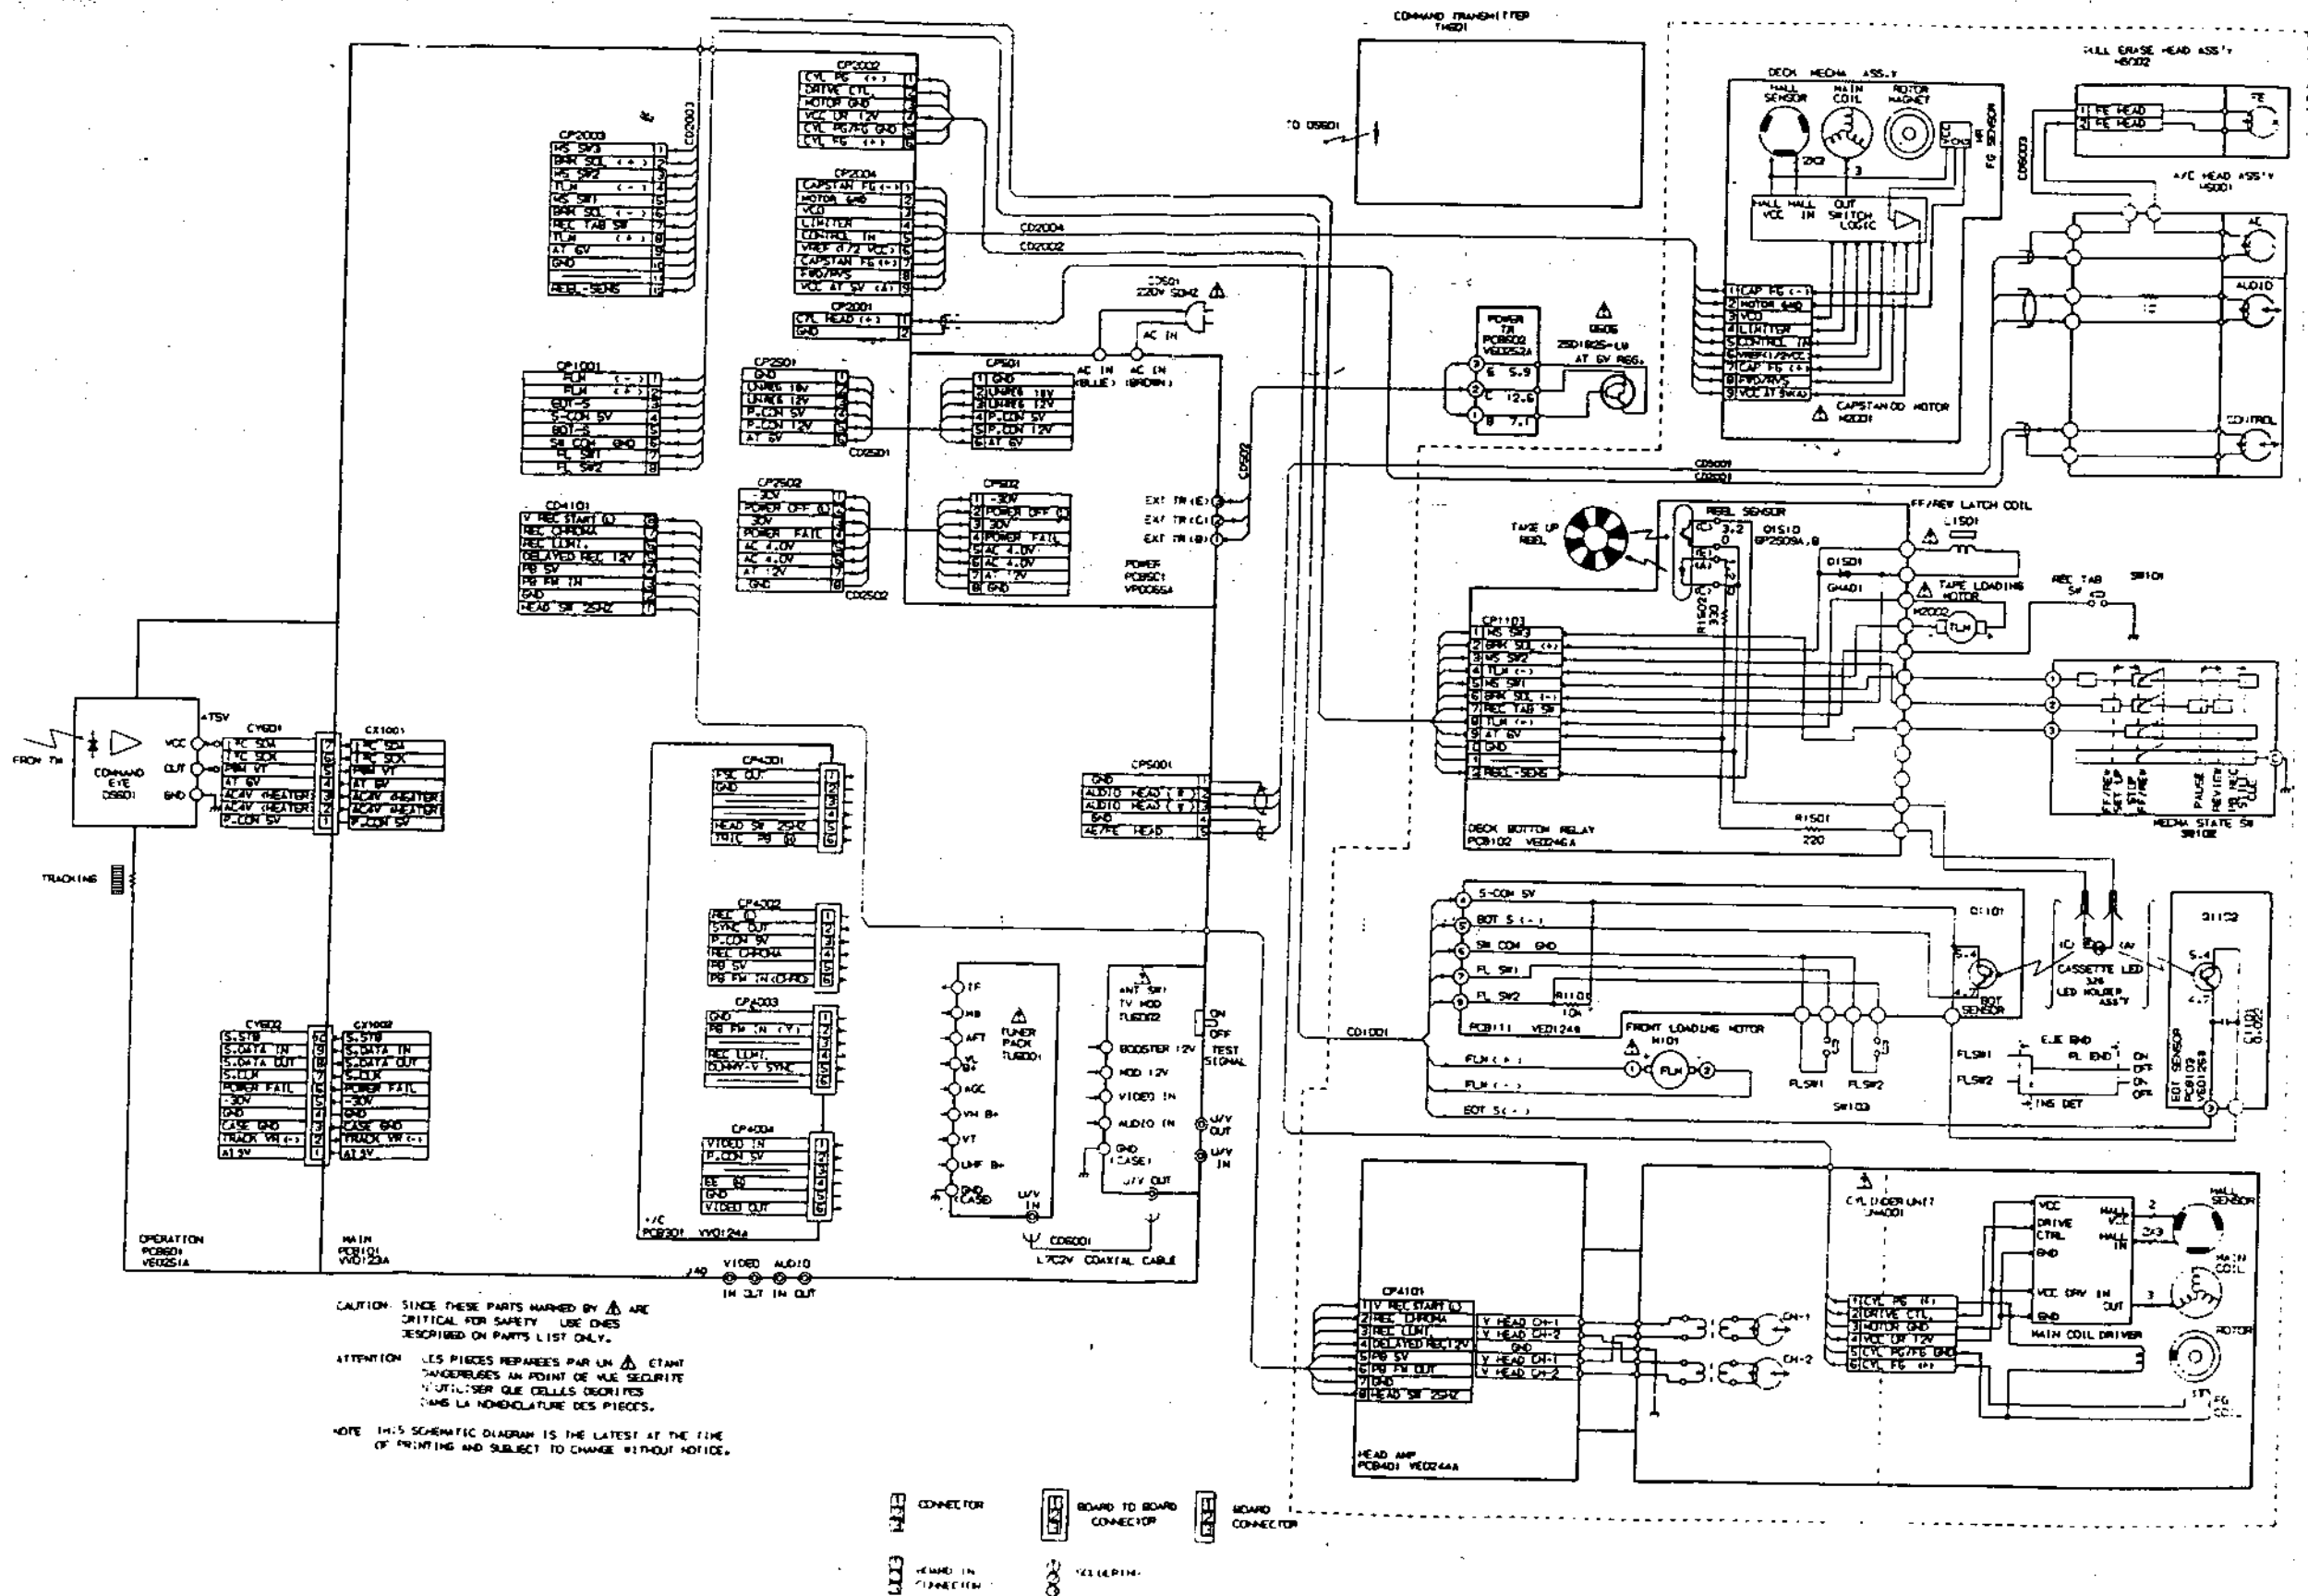


MAIN P.C.BOARD

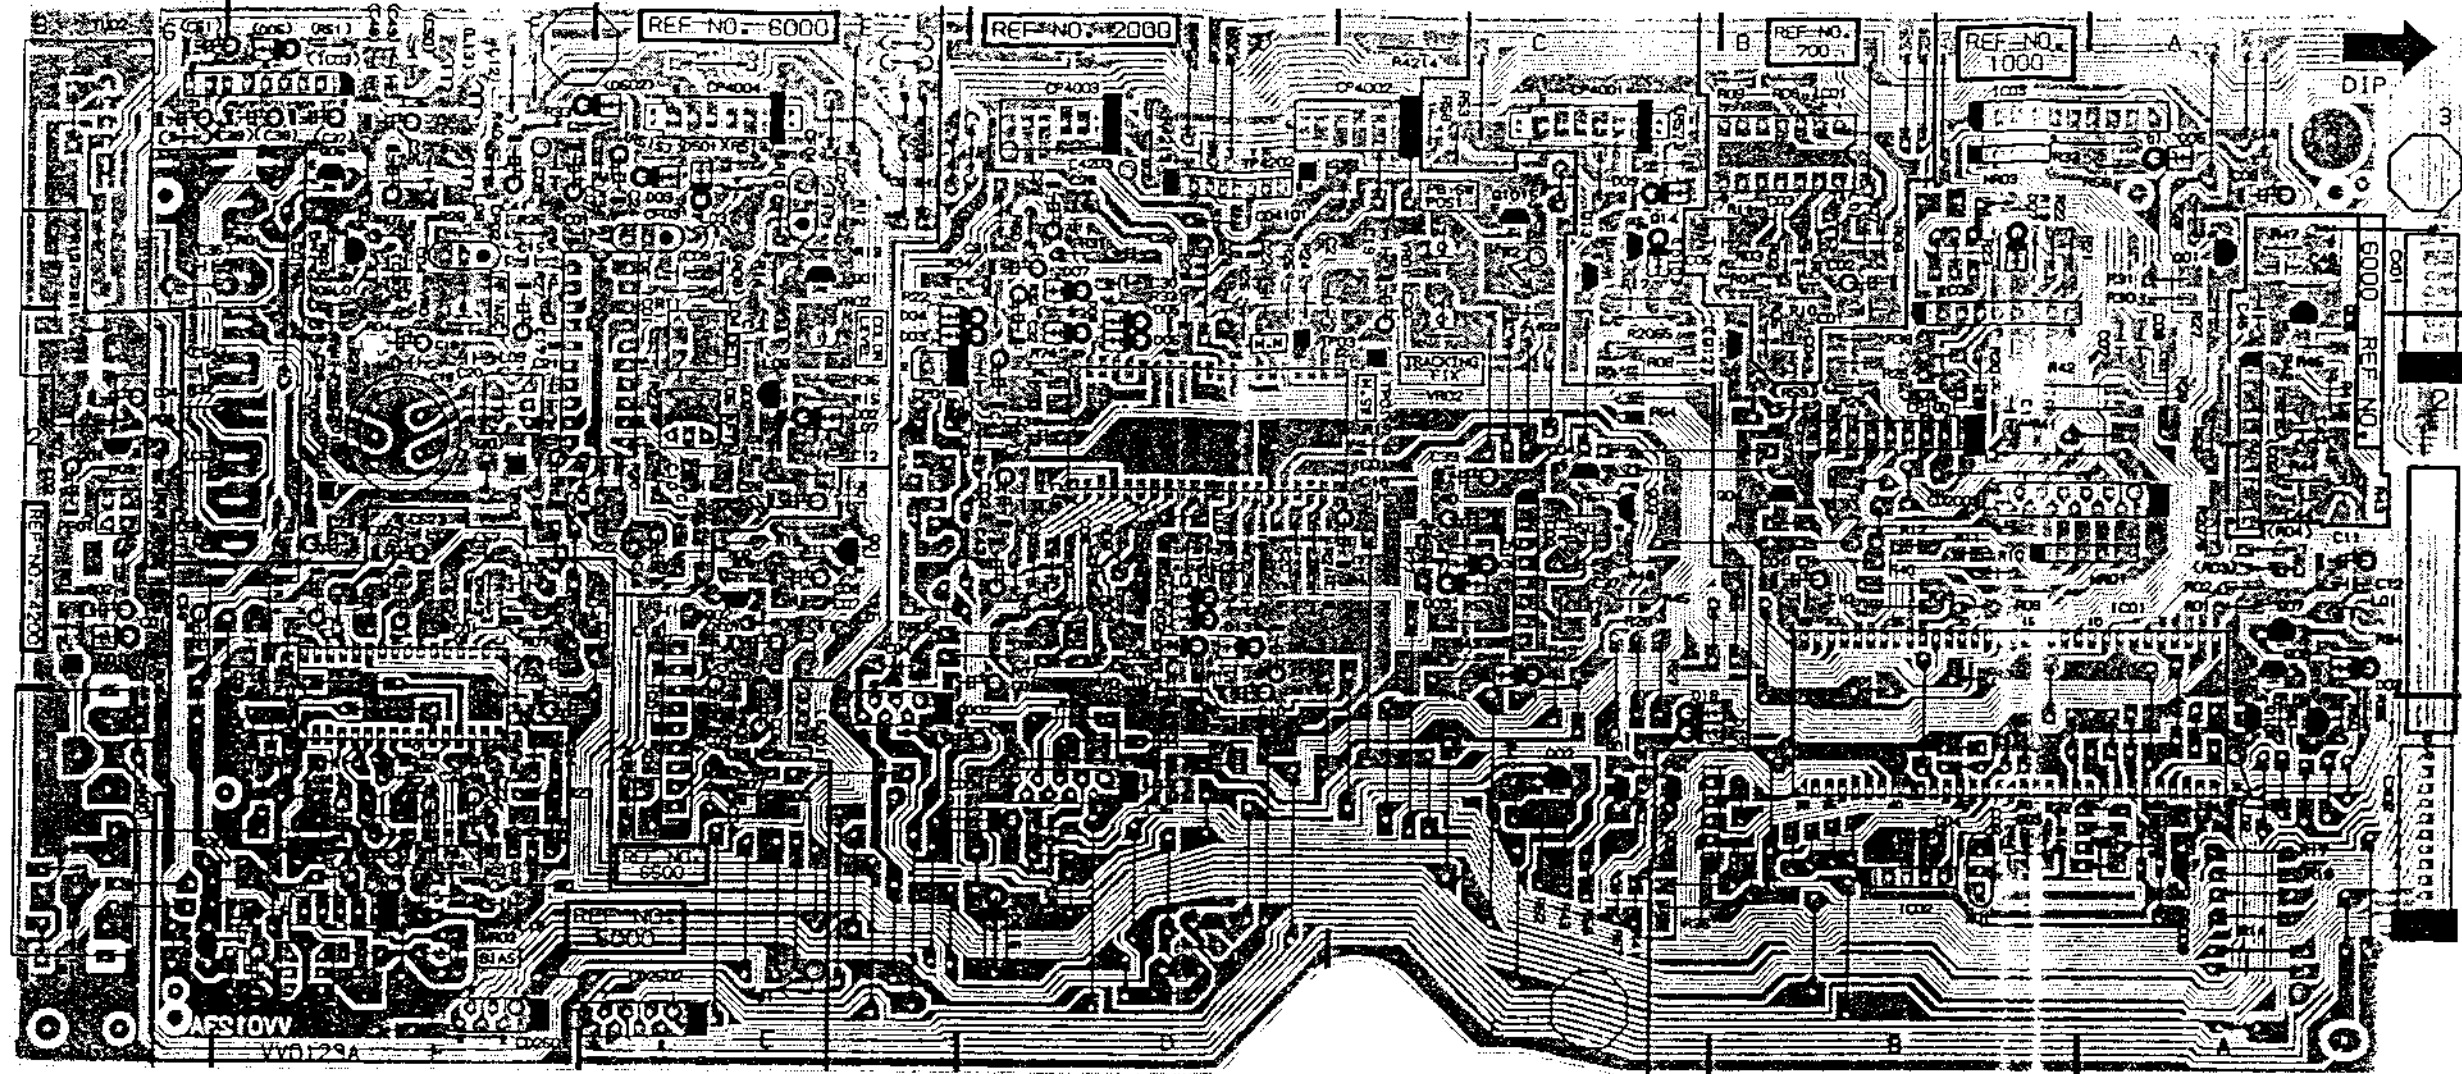

POWER SUPPLY / TRANSISTOR P.C.BOARD

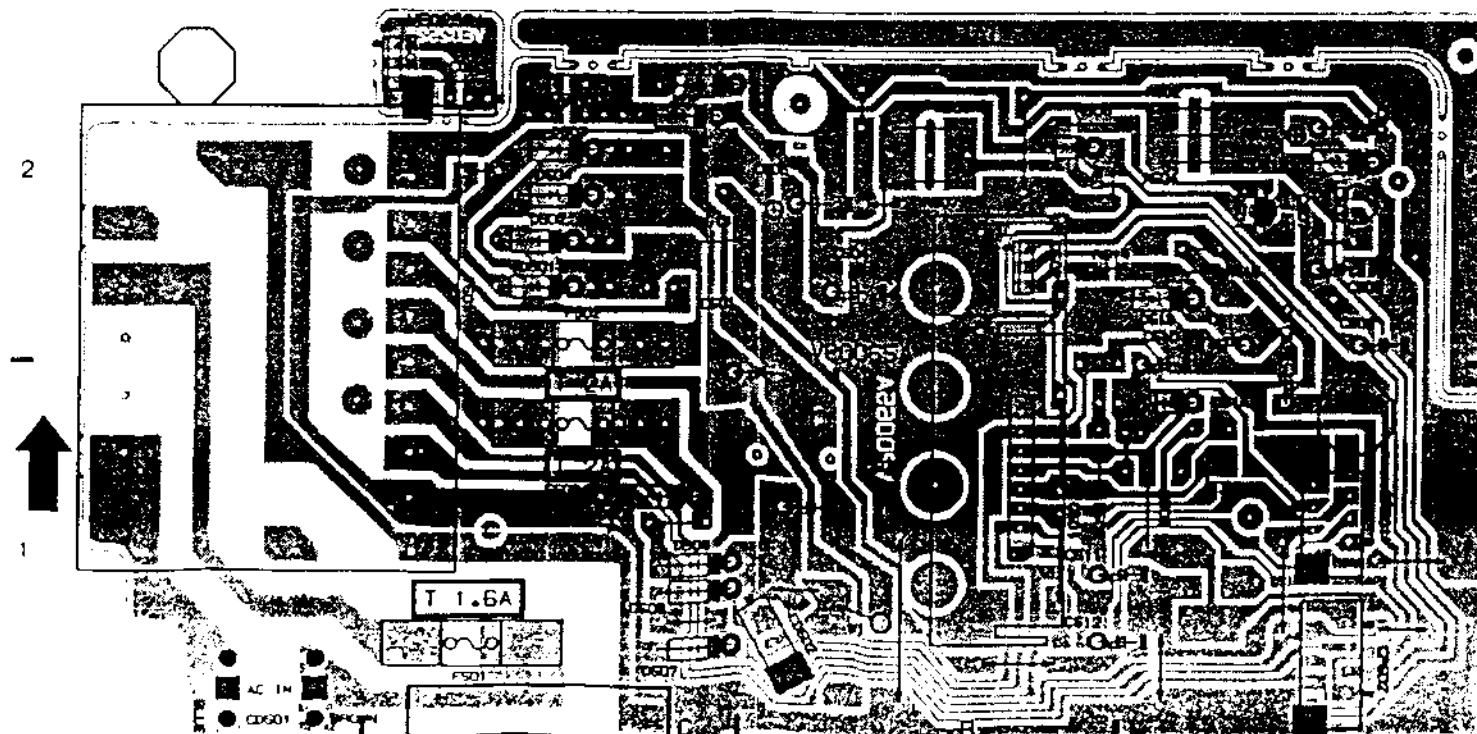


Y.C. P.C.BOARD

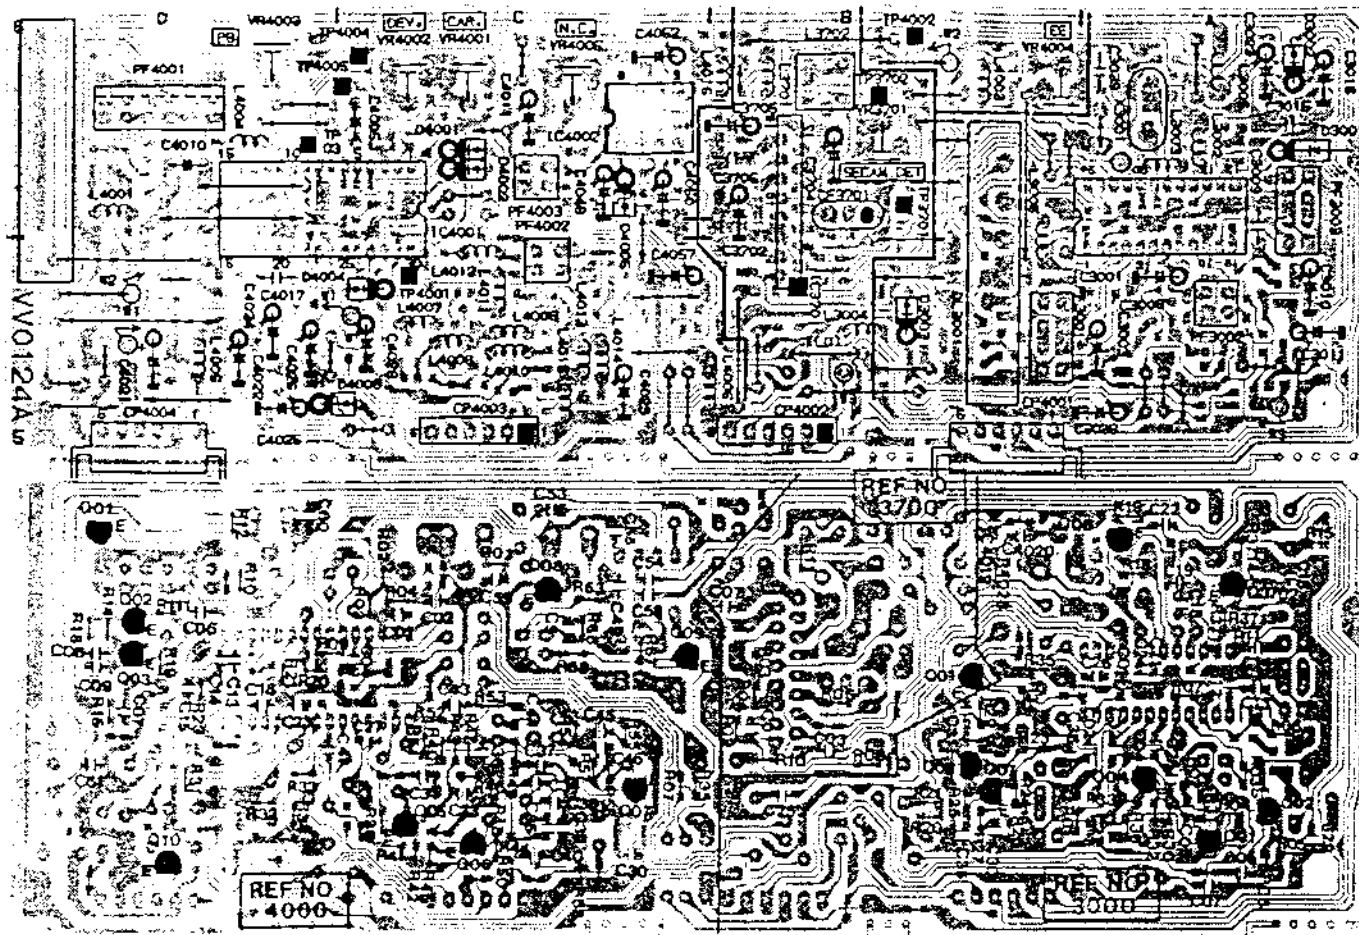

COMPONENT SIDE

SOLDER SIDE


HEAD AMP P.C.BOARD

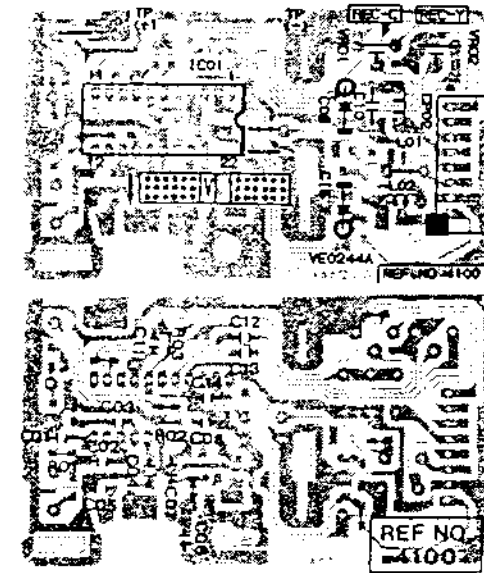


COMPONENT SIDE


SOLDER SIDE

OPERATION P.C.BOARD

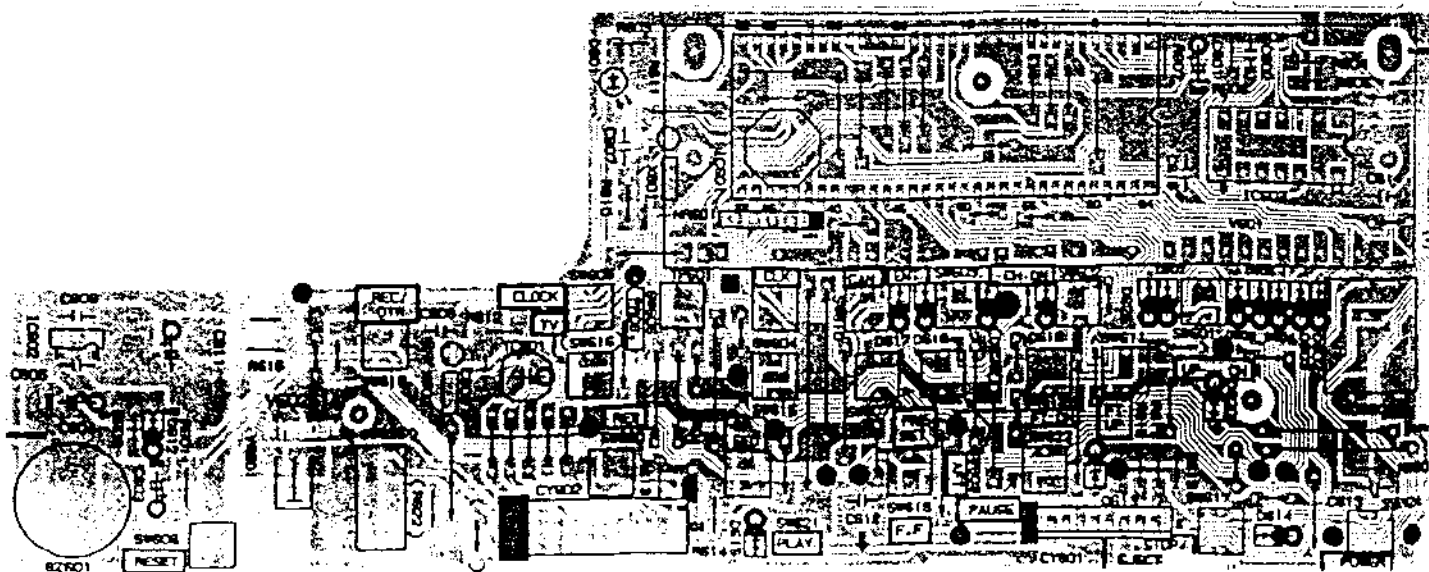

DECK P.C.BOARDS

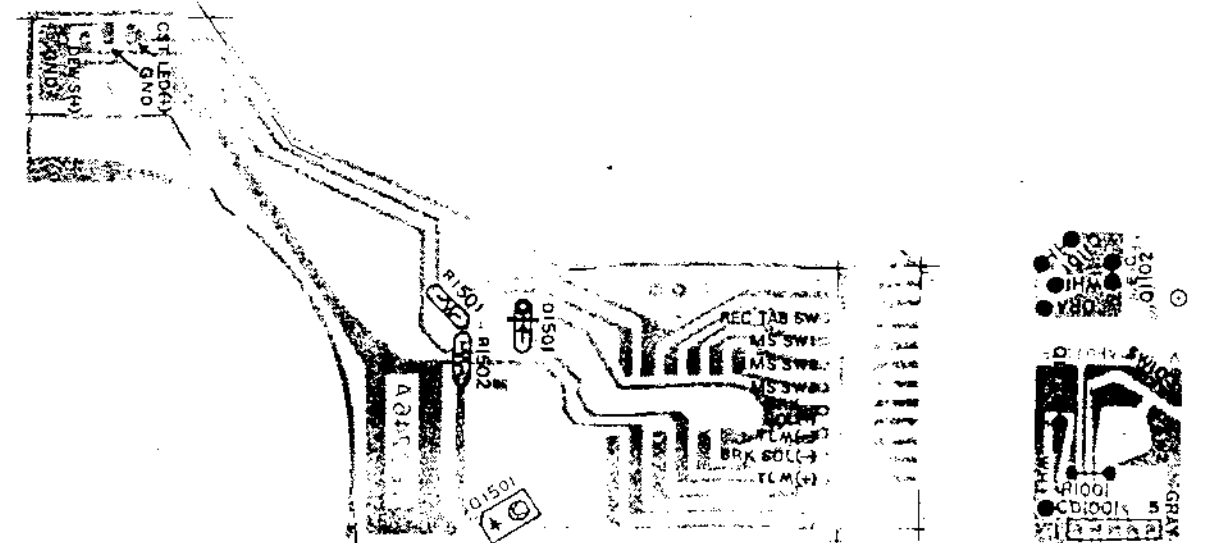

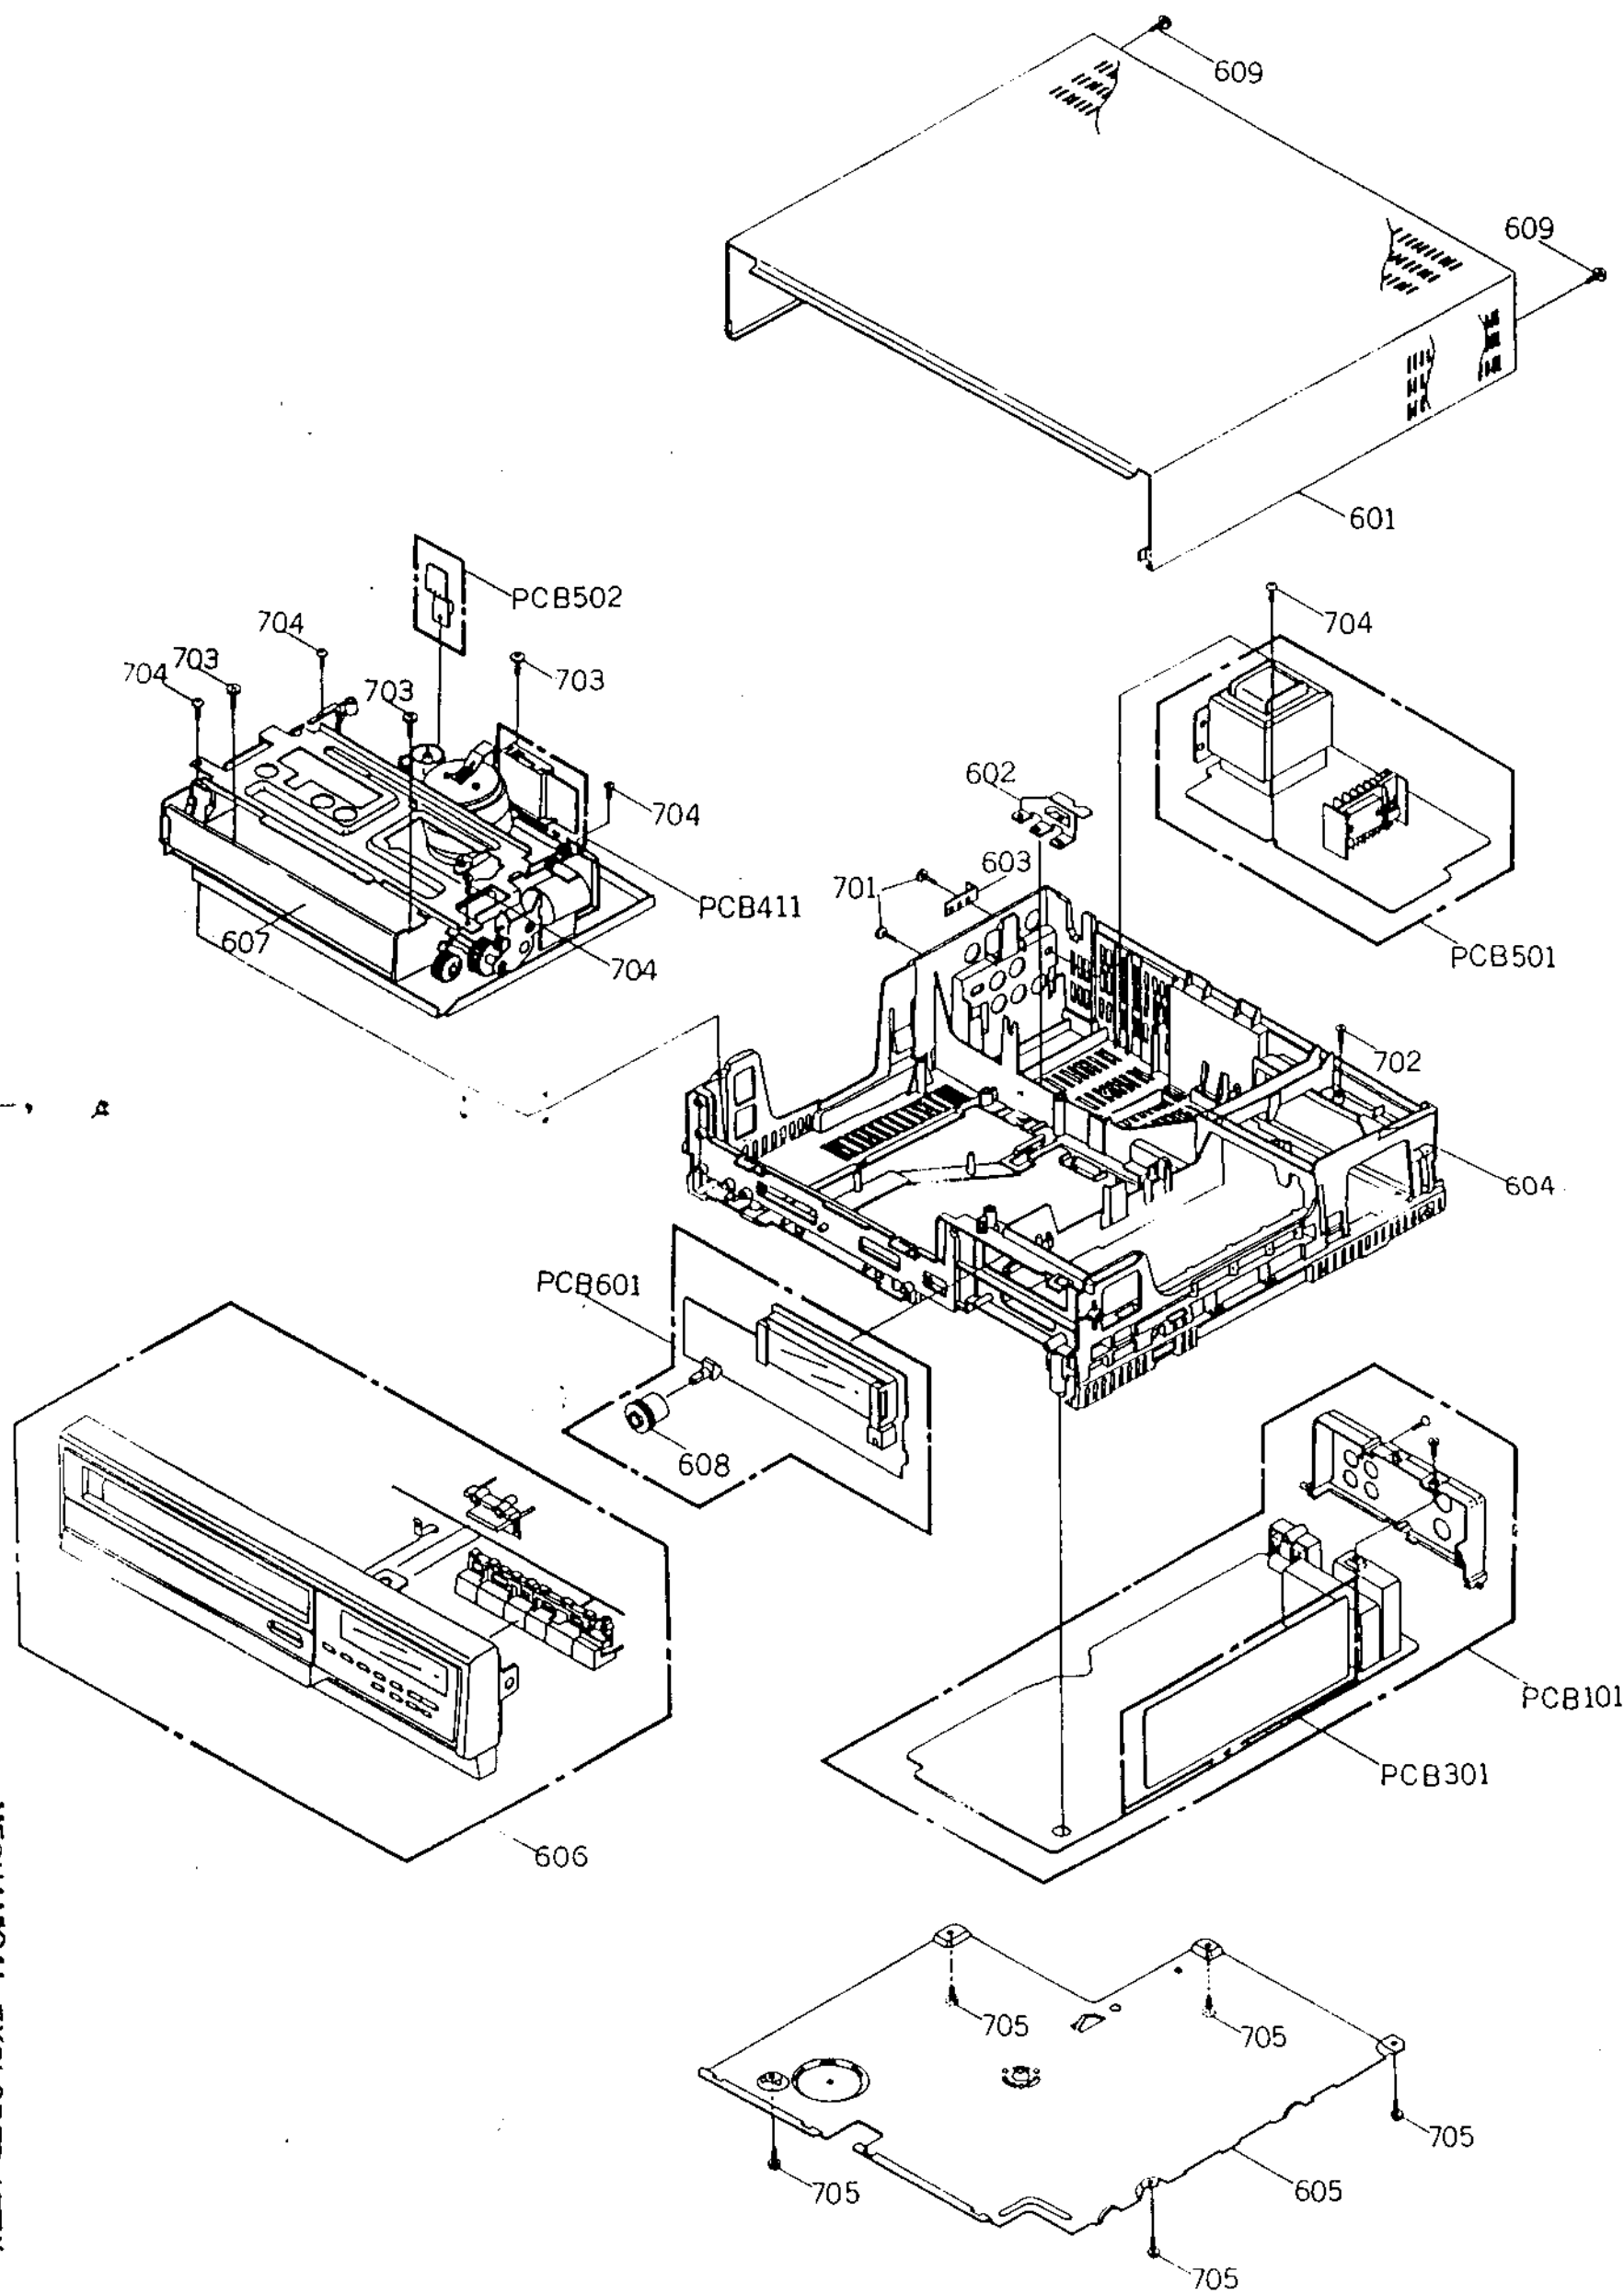

MECHANICAL EXPLODED VIEW

MECHANICAL EXPLODED VIEW

DECK REPLACEMENT PARTS LIST


Table with columns: REF NO, PART NO, DESCRIPTION. Lists various mechanical parts like springs, gears, levers, and actuators for a deck replacement.

THIS ELECTRICAL PARTS LIST IS A STANDARD PART LIST. BUT INTERCHANGEABLE PARTS MAY BE USED IN THE UNIT SEE THE INTERCHANGEABLE PARTS LIST AFTER THE STANDARD PARTS LIST

ELECTRICAL REPLACEMENT PARTS LIST

Table with columns: REF NO, PART NO, DESCRIPTION. Lists various electrical components including resistors, capacitors, semiconductors, and coils.

**DECK EXPLODED VIEW
(FL-5)(A43701A650)**

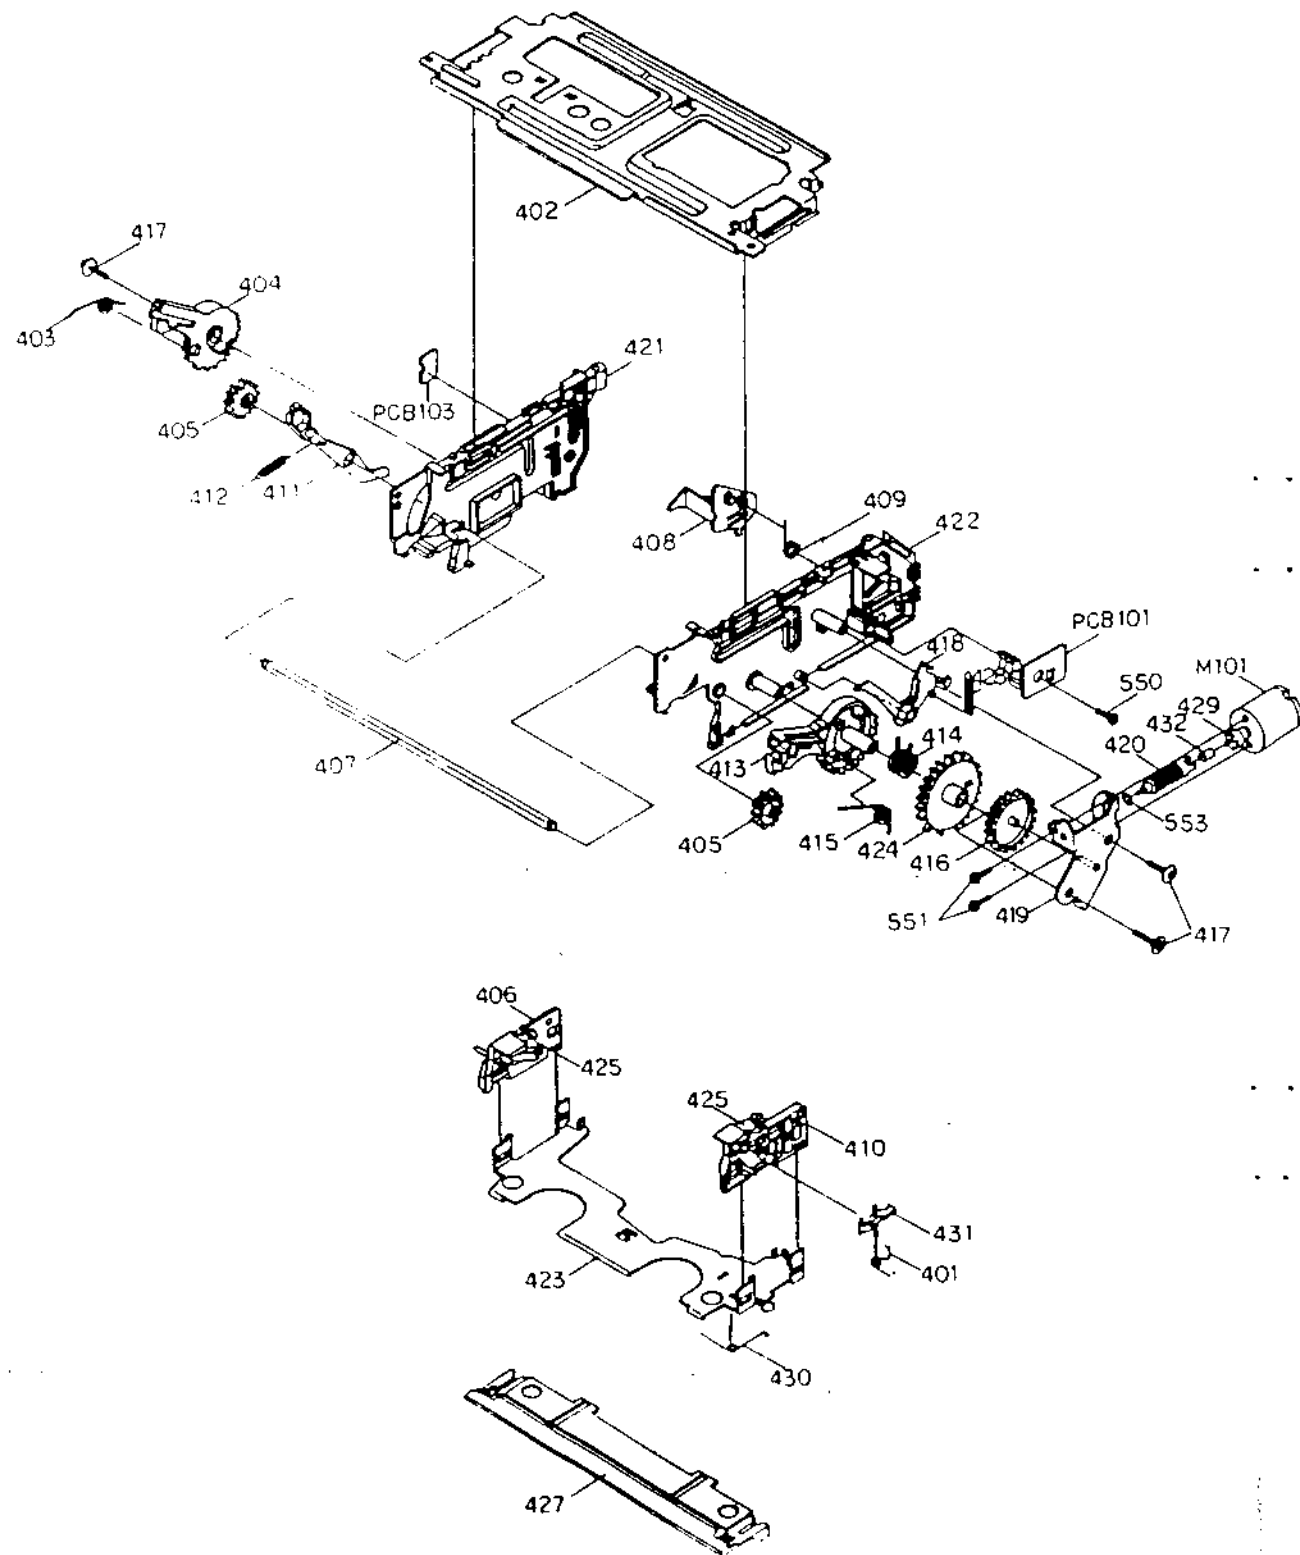

MECHANICAL REPLACEMENT PARTS LIST

REF.NO	PART NO	DESCRIPTION	
601	702JS80004	CABINET.TOP	
602	753JSA0021	PLATE.DECK EARTH	
603	753JSA0014	PLATE.TRANS EARTH	
604	702JPA0327	CABINET.INSIDE SHEET.RATING	
605	702JSA0019	CABINET.BOTTOM	
606	A43704A723	CABINET.FRONT ASS'Y	
607	7230002442	FLAP	
608	731JPA0042	KNOB.TRACKING	
609	788JSE0014	TAPPING(80) TRUSS	4*12 Bx
701	8102240604	BIND	M4*8 CH
702	8110630A44	TAP TITE(P) BRAZIER	3*14 CH
703	8117240A24	TAPPING(80) BIND	4*12 CH
704	8117630A04	TAPPING(80) BRAZIER	3*10 CH
705	8110630804	TAP TITE(P) BRAZIER	3*8 CH
---	J1ACVAA028	GUARANTEE CARD	
---	J1ACVAA25C	WARNING SHEET	
---	J1ACVYA20A	CAUTION SHEET	
---	J4370401A	INSTRUCTION BOOK	
---	J4370407A	QUICK SET-UP SHEET	
---	791JHA0082	GIFT SHEET	
---	792JHA0171	PACKAGE	
---	793JCD1945	GIFT BOX	

ELECTRICAL REPLACEMENT PARTS LIST

REF NO PART NO DESCRIPTION

COILS & TRANSFORMERS (CONT)

L4013 021JA6150K COIL LAL02TA150K 15 UH
 L4014 021JA6121K COIL LAL02TA121K 120 UH
 L4015 021JA6270K COIL LAL02TA270K 27 UH
 L4016 021B73101K COIL FLRS0T50A-101K 100 UH
 L4101 021B73101K COIL FLRS0T50A-101K 100 UH
 L4102 021B73101K COIL FLRS0T50A-101K 100 UH
 L5001 021B73101K COIL FLRS0T50A-101K 100 UH
 L5003 021J74682J COIL LHL06TB682J 6.8 MH
 L6001 021JA6R82M COIL LAL02TA82M 0.82 UH
 L6002 021JA6100K COIL LAL02TA100K 10 UH
 L6003 021JA6100K COIL LAL02TA100K 10 UH
 L6004 0336000137 COIL VIDEO IFT 3600013
 L6005 033600M107 COIL VIDEO IFT 3600010(F370A1)
 L6006 021JA6270K COIL LAL02TA270K 27 UH
 L6007 021JA65R6K COIL LAL02TA5R6K 5.6 UH
 L6008 021B73101K COIL FLRS0T50A-101K 100 UH
 L6009 0336000057 COIL VIDEO IFT 3600005(E693X)
 L6012 021B73101K COIL FLRS0T50A-101K 100 UH
 L6013 021B73101K COIL FLRS0T50A-101K 100 UH
 L6501 021B73101K COIL FLRS0T50A-101K 100 UH

△ T501 0405570183 TRANSFORMER POWER AC 0557018
 T5001 033626M018 COIL BIAS OSC 3626001

- JACK -

J4001 0632000024 JACK PLATE JPJ3512-01-430

- SWITCHES -

SW601 0504201T11 SWITCH TACT SKHVAD
 SW602 0504201T11 SWITCH TACT SKHVAD
 SW603 0504201T11 SWITCH TACT SKHVAD
 SW604 0504201T11 SWITCH TACT SKHVAD
 SW605 0504201T11 SWITCH TACT SKHVAD
 SW606 0504201T11 SWITCH TACT SKHVAD
 SW607 0504201T11 SWITCH TACT SKHVAD
 SW608 0504201T11 SWITCH TACT SKHVAD
 SW609 0504201T11 SWITCH TACT SKHVAD
 SW610 0504201T11 SWITCH TACT SKHVAD
 SW611 0504201T11 SWITCH TACT SKHVAD
 SW612 0504201T11 SWITCH TACT SKHVAD
 SW617 0504201T11 SWITCH TACT SKHVAD
 SW618 0504201T11 SWITCH TACT SKHVAD
 SW619 0504201T11 SWITCH TACT SKHVAD
 SW620 0504201T11 SWITCH TACT SKHVAD
 SW621 0504201T11 SWITCH TACT SKHVAD
 SW622 0504201T11 SWITCH TACT SKHVAD
 SW624 0504201T11 SWITCH TACT SKHVAD

- VARIABLE RESISTORS -

VR601 V014025B06 VR ROTARY EVU-F3A F25 825
 VR2001 V126305B71 VR SEMIFIXED RH0634C55R
 VR2002 V126315B71 VR SEMIFIXED RH0634C15R
 VR3701 V126313B71 VR SEMIFIXED RH0634C13R
 VR4001 V1263H4B71 VR SEMIFIXED RH0634CJ4R
 VR4002 V126314B71 VR SEMIFIXED RH0634C14R
 VR4003 V1263L3B71 VR SEMIFIXED RH0634CN3R
 VR4004 V126314B71 VR SEMIFIXED RH0634C14R
 VR4005 V126314B71 VR SEMIFIXED RH0634C14R
 VR4101 V126214B71 VR SEMIFIXED RH0632C14R
 VR4102 V126214B71 VR SEMIFIXED RH0632C14R
 VR5001 V126314B71 VR SEMIFIXED RH0634C14R
 VR5002 V126305B03 VR SEMIFIXED RH0624C55J
 VR6001 V126314B71 VR SEMIFIXED RH0634C14R
 VR6002 V126314B71 VR SEMIFIXED RH0634C14R

- P.C. BOARDS ASS'Y -

PCB101 A43704A010 PCB ASS'Y VV0123A
 PCB301 A43704A300 PCB ASS'Y VV0124A
 PCB401 A43708A330 PCB ASS'Y VE0244A
 PCB501 A43704A020 PCB ASS'Y VP0065A
 PCB502(A43704A020) PCB ASS'Y VE0252A
 PCB601 A43704A270 PCB ASS'Y VE0251A

- MISCELLANEOUS -

BT601 1412004001 BATTERY MANGAN UM-4(SP)
 CD501 1204450022 CORD JUMPER E2M 7FEET
 CD502 1227031203 CORD JUMPER 27031203
 CP501 069R960019 CONNECTOR PCB SIDE 52004-0610
 CP502 069R960019 CONNECTOR PCB SIDE 52004-0810
 CY601 0694270060 CONNECTOR PCB SIDE 173991-7
 CY602 06942A0060 CONNECTOR PCB SIDE 1-173991-0
 CD2002 1227062002 CORD JUMPER 27062002
 CD2003 12270C1503 CORD JUMPER 270C1503
 CD2004 1227091201 CORD JUMPER 27091201

REF NO PART NO DESCRIPTION

- MISCELLANEOUS (CONT) -

CD2501 1227069001 CORD JUMPER 27069001
 CD2502 1227089001 CORD JUMPER 27089001
 CD4101 068328007A CORD EIS CONNECTOR 8328007A
 CD6001 0682H06001 CORD COAXIAL 82H06001
 CD6002 0680L05004 CABLE PAL PDS05-DP05-3CL 5
 CF3701 10114R1703 FILTER CERAMIC EFC54R17MS4A
 CF6001 102T038R91 FILTER SAW F1034
 CF6002 1012TSR501 FILTER CERAMIC CDAS.SMC26-TF20
 CF6003 1012TSR502 FILTER CERAMIC SFES.SMB-TF20
 CF6004 1012TSR503 FILTER CERAMIC TRAP TPSS.SMB-TF20

CP1001 0694180050 CONNECTOR PCB SIDE 172681-8 UX-V
 CP2001 0694120060 CONNECTOR PCB SIDE 172681-2
 CP2002 069R960029 CONNECTOR PCB SIDE 51016-0600
 CP2003 069R960029 CONNECTOR PCB SIDE 51016-1200
 CP2004 069R960029 CONNECTOR PCB SIDE 51016-0900
 CP2501 069R960029 CONNECTOR PCB SIDE 51016-0600
 CP2502 069R960029 CONNECTOR PCB SIDE 51016-0800
 CP4001 069Q160179 CONNECTOR PCB SIDE CPB1806-0101
 CP4002 0697160189 CONNECTOR PCB SIDE TXX-H06P-01
 CP4003 0697160189 CONNECTOR PCB SIDE TXX-H06P-01

CP4004 069Q160179 CONNECTOR PCB SIDE CPB1806-0101
 CP4101 069R280189 CONNECTOR PCB SIDE 53015-0810
 CP5001 0694150060 CONNECTOR PCB SIDE 172681-5 UX-V
 CX1001 0694270070 CONNECTOR PCB SIDE 173992-7
 CX1002 06942A0070 CONNECTOR PCB SIDE 1-173992-0
 DL3001 104A24R436 DELAY LINE GLASS ADL-SE2244R
 F501 080ET1R601 FUSE BET 1.6 A(T) 250V
 F502 080ET02001 FUSE BET 2A(T) 250V
 F503 080ET02001 FUSE BET 2A(T) 250V
 FH501 067MOT0004 HOLDER FUSE H0451

FH502 067MOT0005 HOLDER FUSE H0452
 △ ICP051 084EF0R301 IC PROTECTOR PRF-315-F003
 NR601 110E42237A R.NETWORK RN5E5A223J
 NR1001 110E447272 R.NETWORK RN5E5A472J
 NR1002 110E42237A R.NETWORK RN5E5A223J
 NR1003 110E322372 R.NETWORK RN5E4A223J
 OS601 0779010002 REMOTE RECEIVER GP-1U541
 PF3001 1147L156M5 FILTER LOW PASS 47L156M5
 PF3002 1147B44606 FILTER BAND PASS 47B44606
 PF3003 1147B50604 FILTER BAND PASS 47B50604

PF4001 1147L30606 FILTER LOW PASS 47L30606
 PF4002 1147H146M5 FILTER HIGH PASS 47H14605
 PF4003 1147L336M4 FILTER LOW PASS 47L33604
 PF4201 103802R102 DELAY 3802R102
 TC601 0100614F08 C.CERAMIC TRIMMER VCT51F716A
 TM601 0761002003 TRANSMITTER EUR-53579
 TU6001 0145601016 TUNER UHF-VHF TEME1-003(KA1)
 TU6002 0151101008 RF CONVERTER ENC-67941
 V601 096770R304 TUBE FLUORESCENT DISPLAY FV301G CSA-309
 X601 100EA4R108 CRYSTAL

X602 100D32R601 CRYSTAL DT-265 32.768KHZ
 X1001 1002T4R001 CERAMIC OSCILLATOR CSA4.00MG-TF01
 X3001 1006A4R302 CRYSTAL HC-49/U 4.43361875MHZ
 X6501 1003R50001 CERAMIC OSCILLATOR KBR-500AHZ

RESISTOR

RC..... CARBON RESISTOR

CAPACITORS

CC..... CERAMIC CAPACITOR
 CE..... ALUMI ELECTROLYTIC CAPACITOR
 CP..... POLYESTER CAPACITOR
 CPP..... POLYPROPYLENE CAPACITOR
 CPL..... PLASTIC CAPACITOR
 CMP..... METAL POLYESTER CAPACITOR
 CNPL..... METAL PLASTIC CAPACITOR
 CNPP..... METAL POLYPROPYLENE CAPACITOR
 CST..... STYROL CAPACITOR

INTERCHANGEABLE PART LIST

NOTE: THE FOLLOWING PART(S) MAY BE SUBSTITUTED FOR PARTS INDICATED IN THE BASIC PART(S) LIST (WITH THE SAME REF. NO.). THESE PARTS SHARE THE SAME ELECTRICAL CHARACTERISTICS AND OTHER ELEMENTS FOR COMMON USAGE EITHER PART NUMBER MAY BE USED IN THIS UNIT

REF. NO.	DESCRIPTION (PART NO.)	DESCRIPTION (PART NO.)
Q3001	2SA1037KT97 (T67A1037K0)	2SA1179-TA (T63A011790)
Q3002	2SC2412K (T87A02412K)	2SC2812-TA (T83A028120)
Q3004	2SC2412K (T87A02412K)	2SC2812-TA (T83A028120)
Q3006	2SC2412K (T87A02412K)	2SC2812-TA (T83A028120)
Q3007	2SC2412K (T87A02412K)	2SC2812-TA (T83A028120)
Q3008	2SC2412K (T87A02412K)	2SC2812-TA (T83A028120)
Q3701	DTC124EKP (TN7TC05001)	2SC3396(CY)-TA (TN3TC05001)
Q3702	2SC2412K (T87A02412K)	2SC2812-TA (T83A028120)
Q4001	2SA1037KT97 (T67A1037K0)	2SC1179-TA (T63A011790)
Q4007	2SC2412K (T87A02412K)	2SC2812-TA (T83A028120)
Q4008	2SA1037KT97 (T67A1037K0)	2SA1179-TA (T63A011790)
Q4009	2SC2412K (T87A02412K)	2SC2812-TA (T83A028120)
Q4010	DTC124EKP (TN7TC05001)	2SC3396(CY)-TA (TN3TC05001)
BT601	UM-4(SP) (1412004001)	UM-4 (1417004003)
CD502	27031203 (1227031203)	2U031203 (122U031203)
CD2002	27062002 (1227062002)	28062002 (1228062002)
CD2003	270C1503 (12270C1503)	280C1503 (12280C1503)
CD2004	27091201 (1227091201)	28091201 (1228091201)
CD2501	27069001 (1227069001)	28069001 (1228069001)
CD2502	27089001 (1227089001)	28089001 (1228089001)
CD4101	8328007A (068328007A)	8N28007A (068N28007A)