


# SERVICE MANUAL


## ORION

### DVD/C-1462 SI

### COLOR TELEVISION/DVD PLAYER

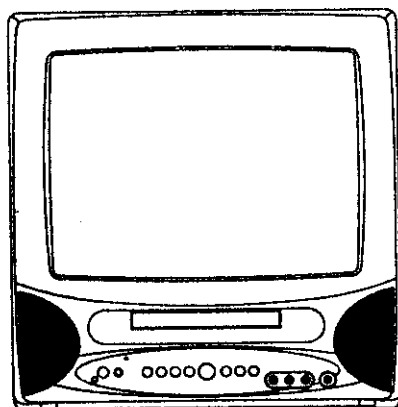

ORIGINAL  
CHASSIS CODE B

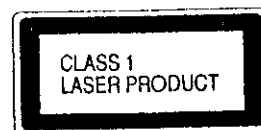

Best. Nr. SM1462

---


Design and specifications are subject to change without notice.

## TABLE OF CONTENTS

### IMPORTANT WARNING

**CAUTION:**  
DVD PLAYER IS A CLASS 1 LASER PRODUCT. HOWEVER THIS PLAYER USES A VISIBLE LASER BEAM WHICH COULD CAUSE HAZARDOUS RADIATION EXPOSURE IF DIRECTED. BE SURE TO OPERATE THE PLAYER CORRECTLY AS INSTRUCTED.

THE FOLLOWING CAUTION LABEL IS LOCATED ON THE REAR PANEL OF THE PLAYER.

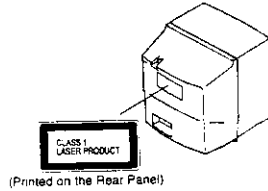

WHEN THIS PLAYER IS PLUGGED TO THE WALL OUTLET, DO NOT PLACE YOUR EYES CLOSE TO THE OPENING OF THE DISC TRAY AND OTHER OPENINGS TO LOOK INTO THE INSIDE OF THIS PLAYER.

USE OF CONTROLS OR ADJUSTMENTS OR PERFORMANCE OF PROCEDURES OTHER THAN THOSE SPECIFIED HEREIN MAY RESULT IN HAZARDOUS RADIATION EXPOSURE.

DO NOT OPEN COVERS AND DO NOT REPAIR YOURSELF. REFER SERVICING TO QUALIFIED PERSONNEL.

### SERVICING NOTICES ON CHECKING

#### 1. KEEP THE NOTICES

As for the places which need special attentions, they are indicated with the labels or seals on the cabinet, chassis and parts. Make sure to keep the indications and notices in the operation manual.

#### 2. USE THE DESIGNATED PARTS

The parts in this equipment have the specific characters of incombustibility and withstand voltage for safety. Therefore, the part which is replaced should be used the part which has the same character.

Especially as to the important parts for safety which is indicated in the circuit diagram or the table of parts as a  $\Delta$  mark, the designated parts must be used.

#### 3. PUT PARTS AND WIRES IN THE ORIGINAL POSITION AFTER ASSEMBLING OR WIRING

There are parts which use the insulation material such as a tube or tape for safety, or which are assembled in the condition that these do not contact with the printed board. The inside wiring is designed not to get closer to the pyrogenic parts and high voltage parts. Therefore, put these parts in the original positions.

#### 4. PERFORM A SAFETY CHECK AFTER SERVICING

Confirm that the screws, parts and wiring which were removed in order to service are put in the original positions, or whether there are the portions which are deteriorated around the serviced places serviced or not. Check the insulation between the antenna terminal or external metal and the AC cord plug blades. And be sure the safety of that.

### HOW TO ORDER PARTS

Please include the following informations when you order parts. (Particularly the CHASSIS CODE.)

#### 1. MODEL NUMBER and CHASSIS CODE

The MODEL NUMBER can be found on the back of each product and the CHASSIS CODE can be found at the end of the SERIAL NUMBER.

#### 2. PART NO. and DESCRIPTION

You can find it in your SERVICE MANUAL.

IMPORTANT WARNING .....	A1-1
SERVICING NOTICES ON CHECKING .....	A1-1
HOW TO ORDER PARTS .....	A1-1
DISC REMOVAL METHOD AT NO POWER SUPPLY .....	A1-2
PARENTAL CONTROL-RATING LEVEL .....	A1-2
TABLE OF CONTENTS .....	A2-1
GENERAL SPECIFICATIONS .....	A3-1-A3-5
DISASSEMBLY INSTRUCTIONS .....	
1. REMOVAL OF MECHANICAL PARTS AND P.C. BOARDS .....	B1-1, B1-2
2. REMOVAL OF DVD DECK PARTS .....	B2-1, B2-4
3. REMOVAL OF ANODE CAP .....	B3-1
4. REMOVAL AND INSTALLATION OF FLAT PACKAGE IC .....	B4-1, B4-2
SERVICE MODE LIST .....	C-1
CONFIRMATION OF HOURS USED .....	C-1
WHEN REPLACING EEPROM (MEMORY) IC .....	C-2
ELECTRICAL ADJUSTMENTS .....	D-1-D-6
BLOCK DIAGRAMS .....	
DVD .....	E-1, E-2
TV .....	E-3, E-4
POWER .....	E-5, E-6
PRINTED CIRCUIT BOARDS .....	
DVD .....	F-1
AV/CRT .....	F-2-F-5
SCHEMATIC DIAGRAMS .....	
MPEG/MICON .....	G-1, G-2
MEMORY .....	G-3, G-4
RF AMP/DSP .....	G-5, G-6
AUDIO/VIDEO .....	G-7, G-8
REGULATOR1 .....	G-9, G-10
MICON/TUNER .....	G-11, G-12
CHROMA/SIF/VIF/21PIN .....	G-13, G-14
SOUND AMP .....	G-15, G-16
IN/OUT .....	G-17, G-18
AUDIO SW .....	G-19, G-20
DEFLECTION .....	G-21, G-22
CRT .....	G-23, G-24
POWER .....	G-25, G-26
INTERCONNECTION DIAGRAM .....	G-27, G-28
WAVEFORMS .....	H-1-H-3
MECHANICAL EXPLODED VIEW .....	I1-1, I1-2
DVD DECK EXPLODED VIEW .....	I2-1
MECHANICAL REPLACEMENT PARTS LIST .....	J1-1
DVD DECK REPLACEMENT PARTS LIST .....	J2-1
ELECTRICAL REPLACEMENT PARTS LIST .....	J3-1-J3-3

## DISC REMOVAL METHOD AT NO POWER SUPPLY

1. Remove the Back Cabinet and AV PCB/DVD Block. (Refer to item 1 of the **DISASSEMBLY INSTRUCTIONS**.)
2. Slide the Rack Loading (White) toward the arrow direction by using a minus driver to release the lock. (Refer to Fig. 1)
3. Draw the Tray.

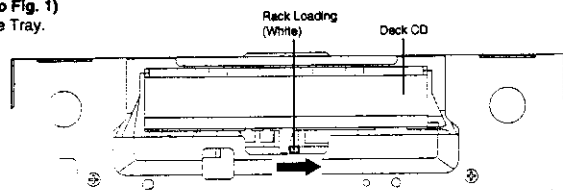


Fig. 1

## PARENTAL CONTROL - RATING LEVEL 4 DIGIT PASSWORD CANCELLATION

If the stored 4 digit password in the Rating Level menu needs to be cancelled, please follow the steps below.

1. Turn Unit ON.
2. Press and hold the 'STOP' key on the front panel.
3. Simultaneously press and hold the '7' key on the remote control unit.
4. Hold both keys for more than 3 seconds.
5. The On Screen Display message 'PASSWORD CLEAR' will appear.
6. The 4 digit password has now been cleared.

NB: The above procedure will reset ALL of the player's settings to the default factory state.

## GENERAL SPECIFICATIONS

G-1	TV System	CRT	CRT Size / Visual Size	14 inch / 335.4mmV	
			CRT Type	Normal	
			Deflection	90 degree	
			Magnetic Field	±0.45G / ±0.18G	
		Color System		PAL	
		Speaker		2 Speaker	
			Position	Front	
			Size	1.5 x 2.7 inch	
			Impedance	8 ohm	
		Sound Output		1.5W + 1.5W	
			MAX	1.5W + 1.5W	
			10%(Typical)		
G-2	DVD System	Color System		PAL	
		Disc		DVD, CD-DA, CD-R/RW, Video CD, SVCD	
		Disc Diameter		120 mm, 80 mm	
		Deck	Disc Loading System	Front Loading	
			Motor	2 Motors	
		Pick up		1-Lens 2-Beams System	
		Playback time(Max)	DVD DVD 1-Layer		135min (4.7GB)
			DVD 2-Layer		245min (8.5GB)
			CD		74min
		Search speed	Fwd		2-20 times / 4 step
				Actual	2-45 times (DVD, VIDEO CD)
					4-40 times (CD)
Rev		2-20 times / 4 step			
	Actual	2-45 times (DVD, VIDEO CD)			
		4-40 times (CD)			
Slow speed	Fwd		1/7 - 1/2 times		
	Actual		-		
	Rev		1/7 - 1/2 times		
	Actual		-		
G-3	Tuning System	Broadcasting System		CCIR System B/G	
		Tuner and Receive CH	System	1Tuner	
			Destination	CCIR HYPER	
			Tuning System	F-Synth	
			Input Impedance	VHF/UHF 75 ohm	
			CH Coverage	E2-E4, X-Z+2, S1-S10, E5-E12, S11-S41, E21-E69	
		Intermediate Frequency	Picture (FP)	38.9MHz	
			Sound (FS)	33.4MHz	
			FP-FS	5.5MHz	
		Auto Tuning Method		CCIR CH Plan	
		Preset CH		80CH	
		Stereo/Dual TV Sound		No	
Tuner Sound Muting		Yes			
G-4	Signal	Video Signal	Input Level	1 V p-p/75 ohm	
			Output Level	1 V p-p/75 ohm	
			S/N Ratio (Weighted) at DVD Mode	65dB	
			Horizontal Resolution at DVD Mode	400 Lines	
		RGB Signal	Output Level	-	
			Resolution	-	
		Audio Signal	TV	Input Level	-3.8dBm/50k ohm
				Output Level (0dB=0.775Vrms)	-3.8dBm/1k ohm
			DVD	Output Level (-20dBFS 0dBFS=2.0Vrms)	-12.5dBm/1k ohm
				Digital Output Level	0.5 V p-p/75 ohm(DVD)
			S/N Ratio at DVD (Weighted)		90 dB
			Harmonic Distortion at DVD Mode		0.06% (1kHz)
Frequency Response	DVD Mode		at DVD	4Hz - 22kHz	
	at VIDEO CD			4Hz - 20kHz	
	at SVCD		4Hz - 20kHz		
	at CD		4Hz - 20kHz		
G-5	Power	Power Source	AC		
			DC		
		Power Consumption		at AC	55 W at 230 V 50 Hz
		at DC			
		Stand by (at AC)		8 W at 230 V 50 Hz	
		Per Year			
		Protector	Power Fuse	Yes	
G-6	Regulation	Safety		CE	
		Radiation		CE	
		X-Radiation		PTB	
G-7	Temperature	Operation		+5°C - +40°C	
		Storage		20°C - +60°C	
G-8	Operating Humidity			Less than 80% RH	
G-9	On Screen Display	Menu Type		Yes	
		CH Tuning		Character	
				Yes	

## GENERAL SPECIFICATIONS

	Manual	Yes
	Auto	Yes
Picture	CH Allocation	Yes
	Contrast	Yes
	Brightness	Yes
	Color	Yes
	Tint (NTSC Only)	Yes
	Sharpness	Yes
Audio		No
	Bass	No
	Treble	No
	Balance	No
AV Color System	Yes	
Language	Yes	
Clock Set	No	
On Timer Set	No	
Off Timer Set	No	
Sound System	No	
Control Level	Yes	
	Brightness	Yes
	Contrast	Yes
	Color	Yes
	Sharpness	Yes
	Tint (NTSC Only)	Yes
	Volume	Yes
	Tuning	Yes
	Bass	No
	Treble	No
	Balance	No
NICAM ST		No
G(A2)Stereo		No
CH/AV/DVD		Yes
Skip		Yes
Channel		Yes
Sleep Timer		Yes
Sound Mute		Yes
G-10 On Screen Menu (DVD) Display	Menu Type	Character
	Language	Yes
	Menu	Yes
	Subtitle	Yes
	Audio	Yes
Picture		Yes
	TV Screen Size	Yes
	OSD Display On/Off	Yes
	JPEG Interval	Yes
	Select File	Yes
		Yes
Sound	DRC (Dynamic Range Control)	Yes
	dts Decode	No
	Output(5.1ch/2ch)	No
	Surround On/Off	No
	Center On/Off	No
	Sub Woofer On/Off	No
		Yes
Parental	Password Lock/ Un Lock	Yes
	Rating Level	Yes
		Yes
Other	OSD Language(Set up Language)	Yes
	Output(RGB/Composite)	No
Open		Yes
Close		Yes
No disc		Yes
Reading		Yes
Play		Yes
Still/Pause		Yes
Stop		Yes
Prohibit Mark		Yes
Stop		Yes
Skip(=>)		Yes
Skip(<=<)		Yes
Random		Yes (CD,MP3,JPEG)
Repeat		Yes
Stop		Yes
Search ##		Yes
Search ##		Yes

A3-2

## GENERAL SPECIFICATIONS

	Search- / Reveal	Yes		
	Skip+	No		
	Skip+ / F/T/B	Yes		
	Skip-	No		
	Skip- / Hold	Yes		
	Slow+	No		
	Slow+ / Cyan	Yes		
	Slow-	No		
	Slow- / Red	Yes		
	Still/Pause	No		
	Still/Pause / Green	Yes		
	Up/ Set+/ CH Up	No		
	Up/ Set+/ CH Up/ Page Up	Yes		
	Down/ Set-/ CH Down	No		
	Down/ Set-/ CH Down/ Page Down	Yes		
	Play Mode	No		
	Play Mode/ Yellow	Yes		
G-14 Features	Auto Shut Off	Yes		
	Auto Search	Yes		
	CH Allocation	Yes		
	Auto C/ Memory	Yes		
	Protect of FBT Leak Circuit	No		
	Power On Memory	Yes		
	T*Text	Yes		
		Text type	UNI Text	
	Tray Lock		No	
	Parental Lock (DVD Only)		Yes	
	VIDEO CD Playback		Yes	
	SVCD Playback		Yes	
		Overlay Graphics And Text	No	
		Command List	No	
		Entry Point Jump	No	
	MP3 Playback		Yes	
	WMA Playback		No	
	JPEG Playback		Yes	
	Digital Out	(Dolby Digital)	Yes	
		(MPEG)	Yes	
		(PCM)	Yes	
		(DTS)	Yes	
	Down Mix Out	(Dolby Digital)	Yes	
		(DTS)	No	
	TruSurround		No	
	Screen Saver		No	
	Audio DAC		192kHz / 24bit	
	G-15 Accessories	Owners Manual	Language	German
			w/Guarantee Card	Yes
		Remote Control Unit		Yes
Rod Antenna			No	
		Poles	-	
		Terminal	-	
		w/300 ohm to 75 ohm Antenna Adapter	-	
Loop Antenna			No	
		Terminal	-	
UV Mixer			No	
DC Car Cord (Center+)			No	
Guarantee Card			No	
Warning Sheet			No	
Circuit Diagram			No	
Antenna Change Plug			No	
Service Facility List			No	
Information Sheet			No	
Important Safeguard			No	
Dew/AHC Caution Sheet			No	
AC Plug Adapter			No	
Quick Set-up Sheet			Yes	
Battery			Yes	
		UM size x pcs	UM-4 -2 pcs	
		OEM Brand	No	
AC Cord			No	
AV Cord (2Pin-1Pin)			No	
21pin-RCA Cable			No	
Registration Card		No		
PTB Sheet		No		
Anti-Theft Sheet		No		
Euro Warranty Information Sheet		No		
G-16 Interface	Switch	Front	Power(Tact)	No
			Channel Up	Yes

A3-4

## GENERAL SPECIFICATIONS

		Search- **	Yes
		Jump	Yes
		Resume	Yes
		Title No.	Yes
		Chapter No.	Yes
		Track No.	Yes
		Time	Yes
		Sub Title No.	Yes
		Angle No.	Yes
		Vocal On/Off	Yes
		Audio No.	Yes
		Audio Stereo LR	Yes (Video CD, SVCO)
		Zoom	Yes
		Marker No.	Yes
		Program Play Back	Yes (CD,MP3,JPEG)
		Surround On/Off	No
		Screen Saver	No
		MP-3,JPEG	Folder Name Yes
			File Name Yes
			File No Yes
			Time Yes
			Track No Yes
G-11	OSD Language	(TV: English, French, Spanish, German, Italian (DVO) English, French, Spanish, German, Italian	
G-12	Clock and Timer	Sleep Timer	Max Time 120 Min
			Step 10 Min
		On/Off Timer	Program(On Timer/Off Timer) No
		Wake Up Timer	No
		Timer Back-up (at Power Off Mode)	more than - Min Sec
G-13	Remote Control Unit	Unit	RC-HE
		Glow in Dark Remocon	No
		Format	NEC
		Custom Code	71-8E
		Power Source	Voltage(D.C) 3V
			UM size x pcs UM-4 x 2 pcs
		Total Keys	48 Keys
		Keys	Power Yes
			1 Yes
			2 Yes
			3 Yes
			4 Yes
			5 Yes
			6 Yes
			7 Yes
			8 Yes
			9 Yes
		0/AV	Yes
		Open/Close	Yes
		Play	Yes
		Stop	Yes
		Display/Call	Yes
		TV/DVD	Yes
		Cancel	Yes
		Audio	Yes
		Angle	Yes
		Subtitle	Yes
		Subtitle On/Off	No
		Title	Yes
		Setup/Menu	Yes
		Return	Yes
		DVD Menu	Yes
		Left/Select-	Yes
		Right/Select+	Yes
		Select/Enter	Yes
		Marker	Yes
		Repeat Mode	No
		Volume+	Yes
		Volume-	Yes
		Repeat A-B	Yes
		Zoom/Quick View	Yes
		Mute	Yes
		Sleep	Yes
		Jump	Yes
		Text/Mix/TV	Yes
		Search-	No
		Search+ / Sub Page	Yes
		Search-	No

## GENERAL SPECIFICATIONS


		Channel Down	Yes
		Volume Up	Yes
		Volume Down	Yes
		Play	Yes
		Stop	Yes
		Skip/Search+	Yes
		Skip/Search-	Yes
		Open/Close	Yes
		Still/Pause	No
		Main Power SW	Yes
Indicator		Power	No
		Stand-by	Yes (Red)
		On Timer	No
Terminals	Front	Video Input	RCA x 1
		Audio Input	RCA x 2
		Other Terminal	Headphone (Stereo & Mono, 3.5mm)
	Rear	Video Input	No
		Audio Input	No
		Video Output	No
		Audio Output	No
		Digital Audio Output	Coaxial (DVD Only)
		Euro Scart	1-SCART
		Diversity	No
		DC Jack 12V(Center +)	No
		VHF/UHF Antenna Input	DIN type
G-17	Set Size	Approx. W x D x H (mm)	362 x 365 x 382
G-18	Weight	Net (Approx.)	11.0kg (24.3lbs)
		Gross (Approx.)	12.5kg (27.6lbs)
G-19	Carton	Master Carton	No
		Content	-
		Material	-
		Dimensions W x D x H(mm)	-
		Description of Origin	-
		Gift Box	Yes
		Material	Double/Full Color
		Dimensions W x D x H(mm)	423 x 447 x 443
		Design	As per Buyer's
		Description of Origin	No
		Drop Test	Natural Dropping At 1 Corner / 3 Edges / 6 Surfaces
		Height (cm)	62
		Container Stuffing(40' container)	700 Sats
G-20	Material	Cabinet	Front PS 94HB
			Rear PS 94V0 DECABROM
		Jack Panel	-
		PCB	Non-Halogen Yes
			Eyslet Yes
G-21	Environment	Pb Free	Lead-free Solder No
			Other No
		Cd Free	No

## DISASSEMBLY INSTRUCTIONS

### 1. REMOVAL OF MECHANICAL PARTS AND P.C. BOARDS

#### 1-1: BACK CABINET (Refer to Fig. 1-1)


1. Remove the 4 screws ①.
2. Remove the screw ② which are used for holding the Back Cabinet.
3. Remove the AC cord from the AC cord hook ③.
4. Remove the Back Cabinet in the direction of arrow.

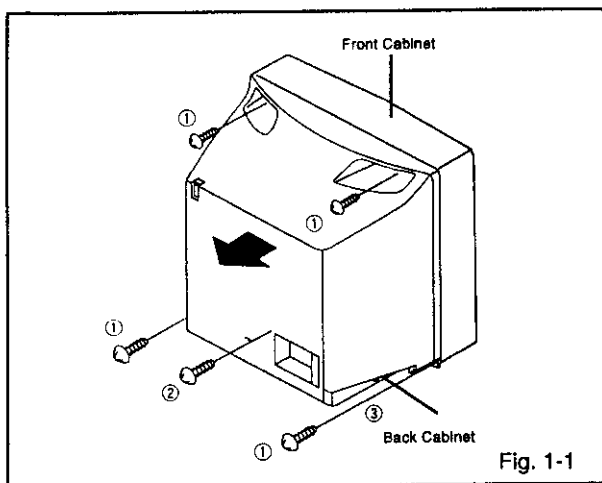

#### 1-2: CRT PCB (Refer to Fig. 1-2)


**CAUTION: BEFORE REMOVING THE ANODE CAP, DISCHARGE ELECTRICITY BECAUSE IT CONTAINS HIGH VOLTAGE. BEFORE ATTEMPTING TO REMOVE OR REPAIR ANY PCB, UNPLUG THE POWER CORD FROM THE AC SOURCE.**

1. Remove the Anode Cap. (Refer to REMOVAL OF ANODE CAP)
2. Disconnect the following connector: (CP801 and CP803B).
3. Remove the CRT PCB in the direction of arrow.

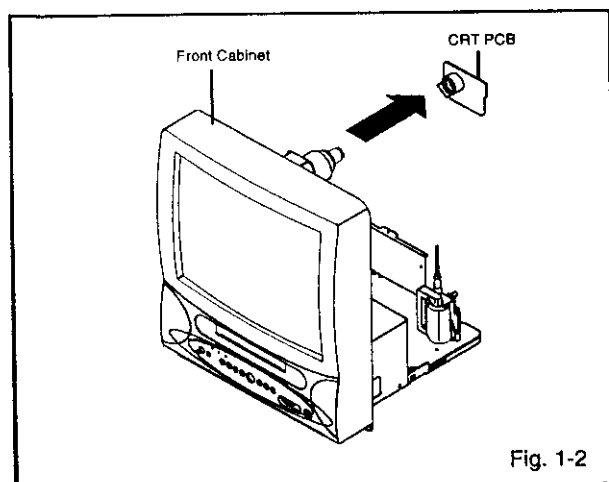


#### 1-3: AV PCB/DVD BLOCK (Refer to Fig. 1-3)

1. Remove the screw ①.
2. Remove the screw ②.
3. Disconnect the following connectors: (CP301, CP302, CP402, CP3801 and CP3802).
4. Remove the AV PCB/DVD Block in the direction of arrow.

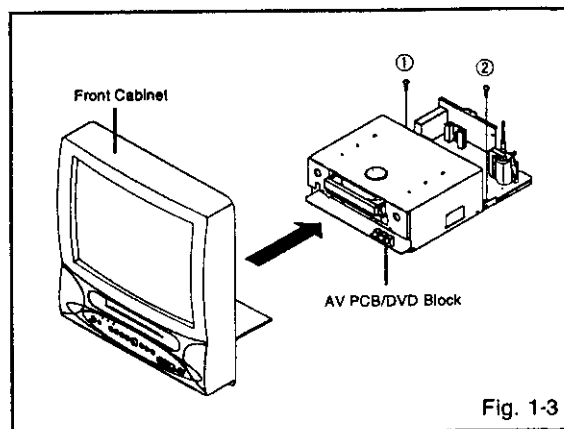

#### 1-4: DVD BLOCK (Refer to Fig. 1-4)

1. Remove the 13 screws ①.
2. Remove the Top Shield in the direction of arrow (A).
3. Disconnect the following connectors: (CP8001 and CP8002).
4. Remove the 4 screws ②.
5. Remove the DVD Block in the direction of arrow (B).
6. Remove the 2 screws ③.
7. Remove the Jack Shield.
8. Remove the AV PCB in the direction of arrow (C).

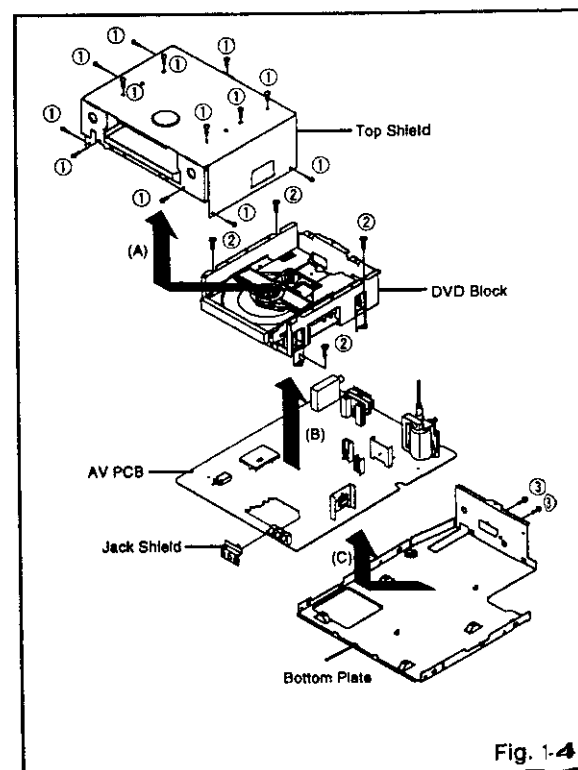

## DISASSEMBLY INSTRUCTIONS


### 2. REMOVAL OF DVD DECK PARTS

#### NOTE

1. Do not disassemble the DVD DECK PARTS except listed parts here. Minute adjustments are needed if the disassemble is done. If the repair is needed except listed parts, replace the DVD MECHA ASS'Y.


#### 2-1: TRAY (Refer to Fig. 2-1-A)

1. Set the Tray opened. (Refer to the DISC REMOVAL METHOD AT NO POWER SUPPLY)
2. Unlock the support ① and remove the Tray.

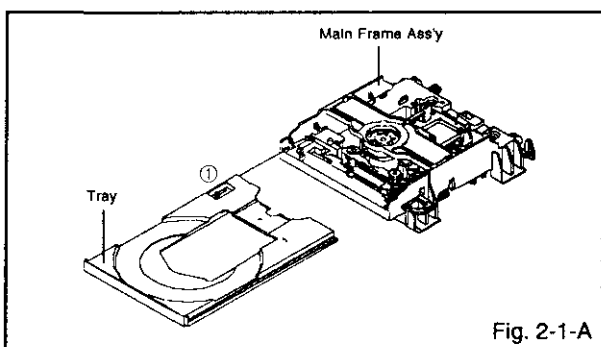


#### NOTE

1. In case of the Tray installation, install them as the circled section of Fig. 2-1-B so that the each markers are met.

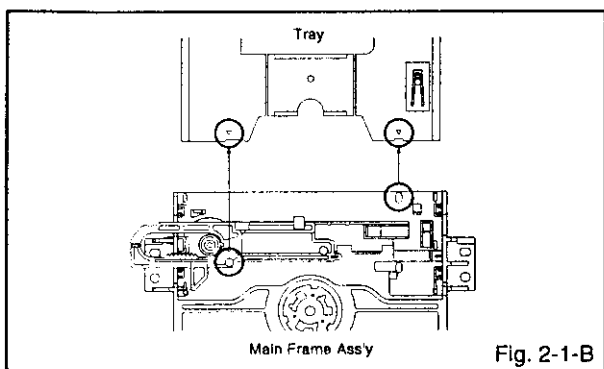


#### 2-2: MAIN CHASSIS ASS'Y (Refer to Fig. 2-2-A)

1. Remove the Main Chassis Ass'y from the Insulator (R).
2. Unlock the support ①.
3. Remove the Main Chassis Ass'y.

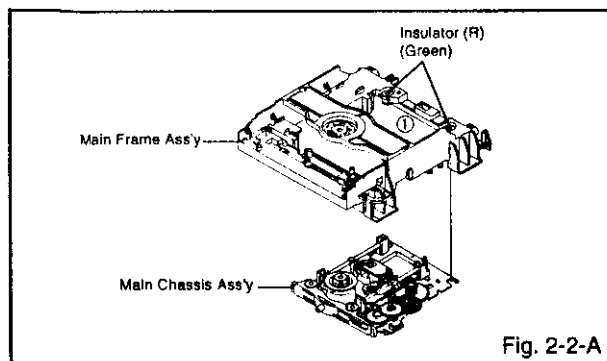


#### NOTE

1. In case of the Main Chassis Ass'y, install it from (1) to (6) in order. (Refer to Fig. 2-2-B)

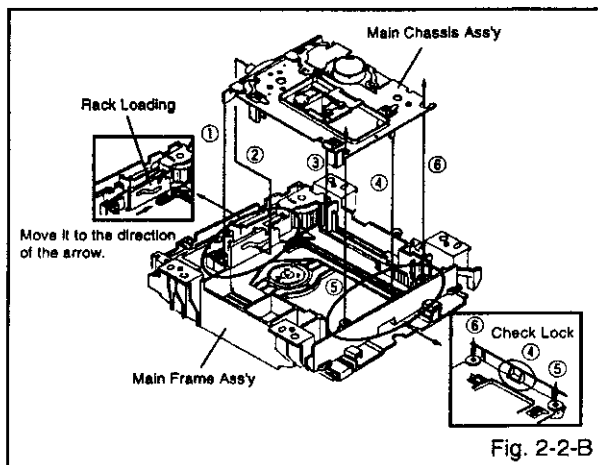


#### 2-3: RACK LOADING/MAIN GEAR/ RACK LOADING SPRING (Refer to Fig. 2-3)

1. Press down the catcher ① and slide the Rack Loading.
2. Remove the Rack Loading, Rack Loading Spring and Main Gear.
3. Remove the Rack Loading, Rack L Spring and Main Gear.

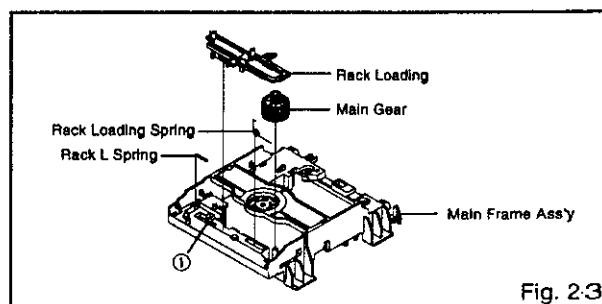

#### 2-4: CLAMPER ASS'Y/INSULATOR(R)/LEVER SWITCH (Refer to Fig. 2-4-A)

1. Remove the screw ①.
2. Remove the Lever Switch.
3. Remove the 2 Insulator (R).
4. Press the Clamper and rotate the Clamper Plate clockwise, then unlock the 3 supports ②.
5. Remove the Clamper Plate, Clamper Magnet and Clamper.

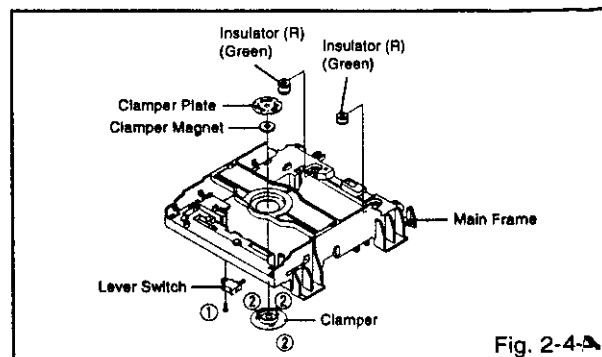

## DISASSEMBLY INSTRUCTIONS

### 1-5: DVD PCB/DVD DECK (Refer to Fig. 1-5)

1. Make the short circuit on the position as shown Fig. 1-5 using a soldering. If you remove the DVD Deck with no soldering, the Laser may be damaged.
2. Disconnect the following connectors: (CP2601, CP2602 and CP2603).
3. Remove the 4 screws ①.
4. Remove the DVD Deck in the direction of arrow (A).
5. Remove the 4 screws ②.
6. Remove the DVD PCB in the direction of arrow (B).

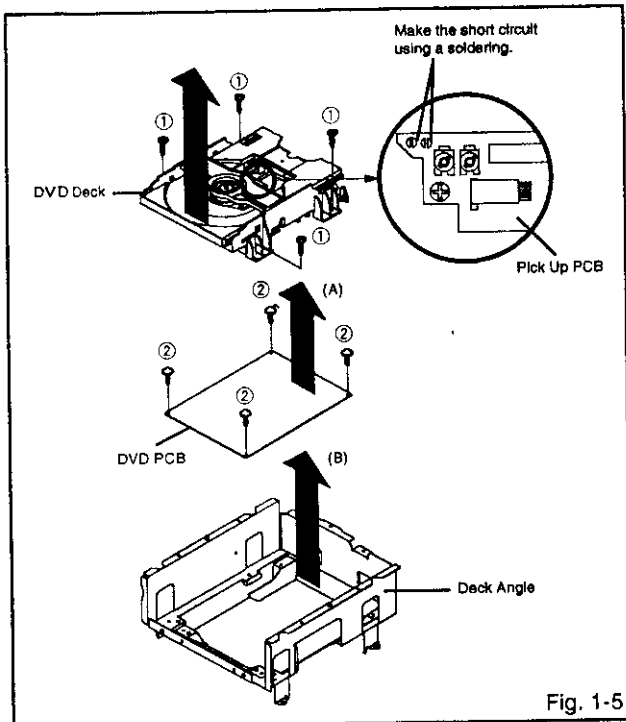


Fig. 1-5

### NOTE




When the installation of the DVD Deck, remove all the soldering on the short circuit position after the connection of Pick Up PCB and DVD PCB connector.



## DISASSEMBLY INSTRUCTIONS


### NOTE

1. When installing the Clamper Magnet, install it with the green face up.
2. When installing the wire of the Lever Switch, install it correctly as Fig. 2-4-B.
3. When installing the Lever Switch, install it correctly as Fig. 2-4-C.
4. In case of the Lever Switch installation, hook the wire on the Main Frame as shown Fig. 2-4-D.

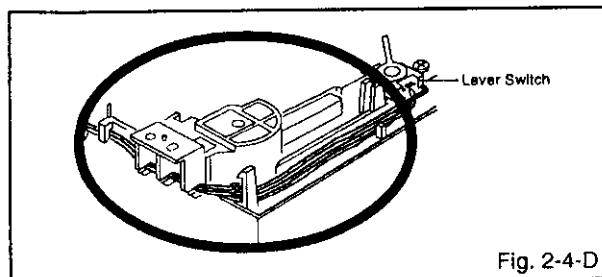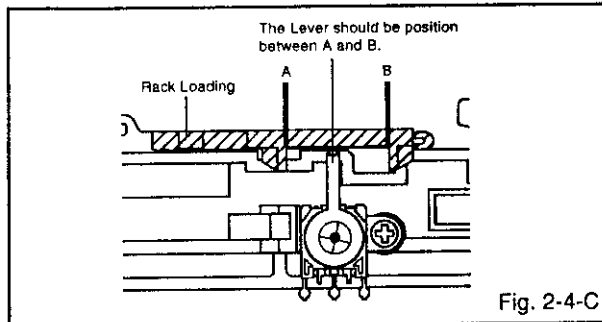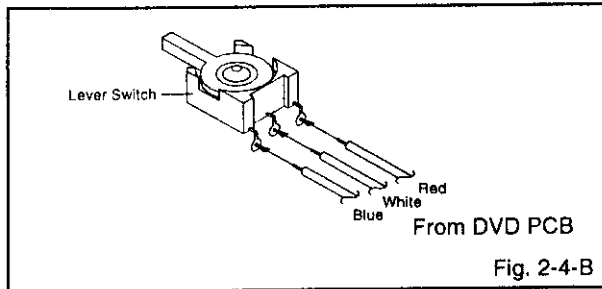


### 2-5: TRAVERSE HOLDER/INSULATOR (F) (Refer to Fig. 2-5-A)

1. Remove the Traverse Holder.
2. Remove the 2 Insulator (F).

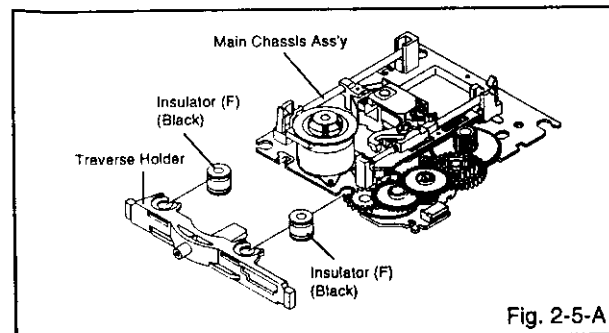


### NOTE

1. After the installing of the Traverse Holder, check if the wire is like Fig. 2-5-B.

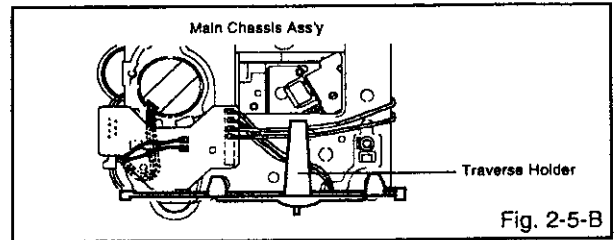


### 2-6: SWITCH PCB ASS'Y (Refer to Fig. 2-6-A)

1. Remove the screw ①.
2. Remove the Switch PCB Ass'y.

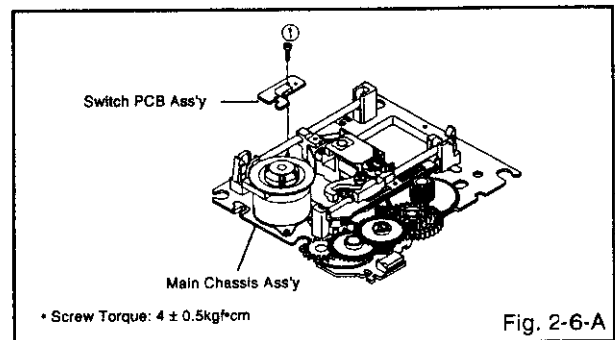


### NOTE

1. When installing the wire of the Switch PCB, install it correctly as Fig. 2-6-B.

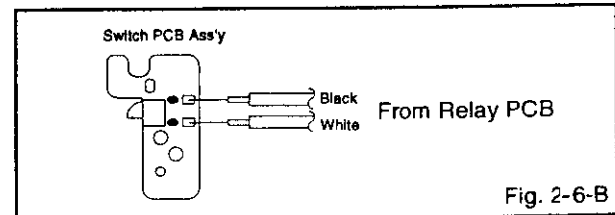

### 2-7: RACK FEED ASS'Y (Refer to Fig. 2-7-A)



1. Remove the screw ①.
2. Remove the Rack Feed 1A Spring, Rack Feed 1A/2A and Rack Feed Lever.

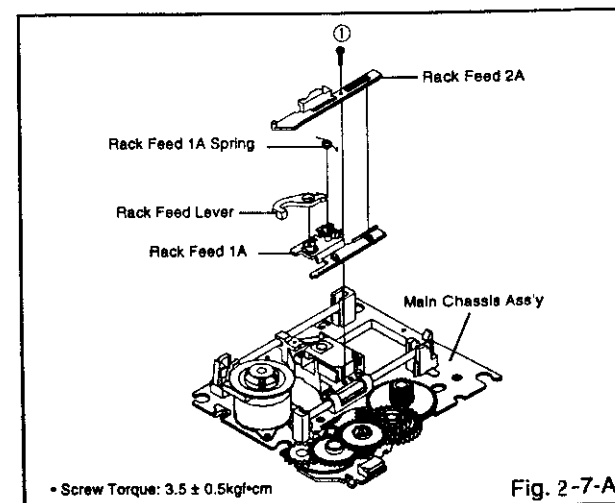

# DISASSEMBLY INSTRUCTIONS


## NOTE

1. After the assembly of the Rack Feed, check if the Rack Feed 1/2 is moving smoothly. (Refer to Fig. 2-7-B)
2. In case of the Rack Feed Ass'y installation, install correctly as Fig. 2-7-C.

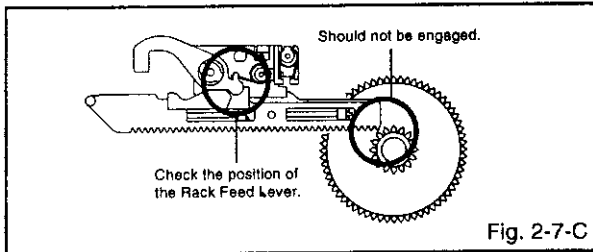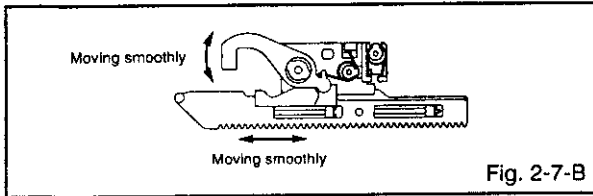


## 2-8: RELAY PCB ASS'Y (Refer to Fig. 3-8-A)

1. Remove the screw ①.
2. Remove the Relay PCB Ass'y.

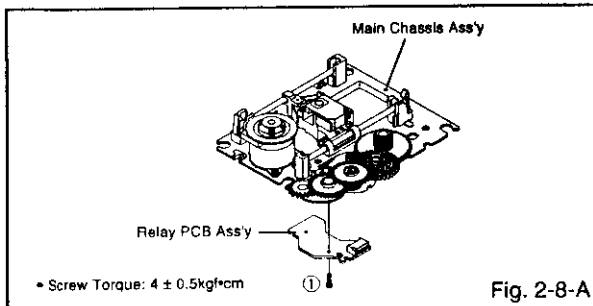


## NOTE

1. When installing the wire of the Relay PCB, install it correctly as Fig. 2-8-B.

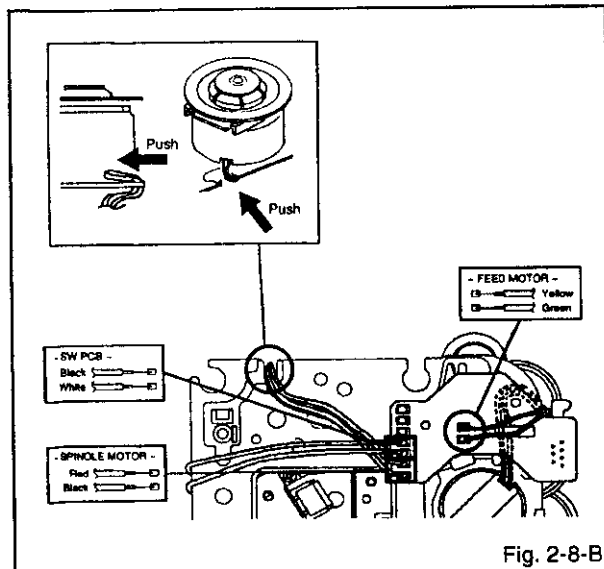



## 2-9: GEAR (Refer to Fig. 3-9-A)

1. Unlock the support ①.
2. Remove the Middle Gear 1/2/3, Idler Gear and Feed Gear.

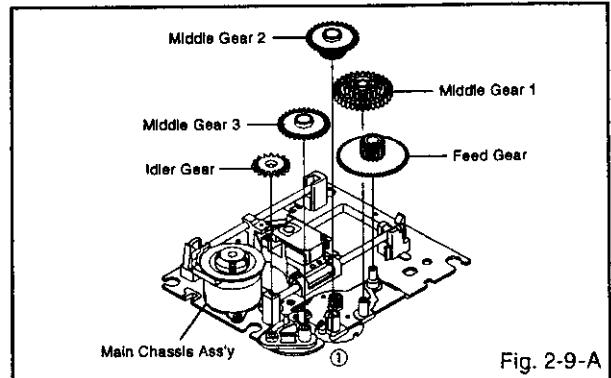


## NOTE

1. In case of the Idler Gear installation, install correctly as Fig. 2-9-B.
2. When installing the Middle Gear 2, check if the Middle Gear 2 is locked correctly as Fig. 2-9-C.

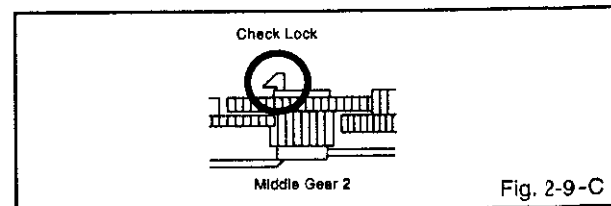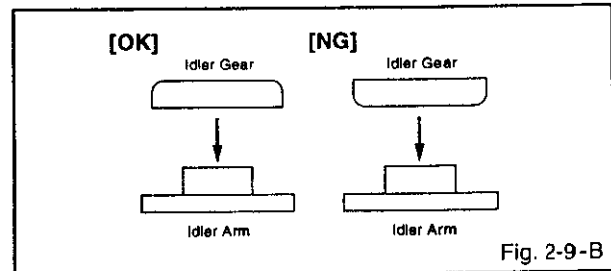

## 2-10: IDLER ARM 2 (Refer to Fig. 2-10-A)


1. Remove the Idler Arm 2.

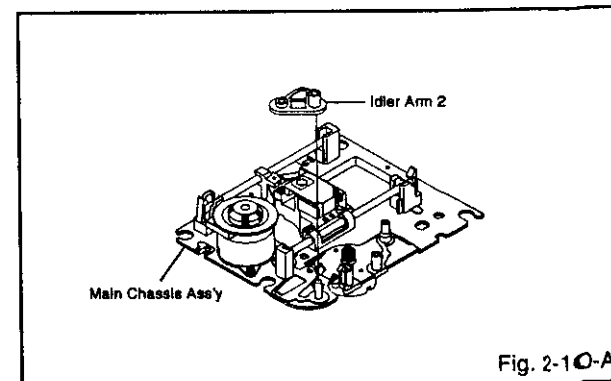

## DISASSEMBLY INSTRUCTIONS



### 2-11: FEED MOTOR (Refer to Fig. 2-11-A)

1. Remove the 2 screws ①.
2. Remove the Feed Motor.
3. Remove the Motor Gear.

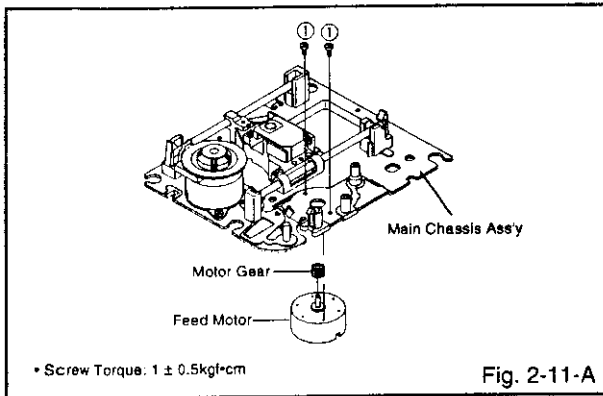

### NOTE

1. In case of the Motor Gear installation, check if the value of the Fig. 2-11-B is correct.
2. When installing the Feed Motor, check if the cable is positioned as Fig. 2-11-C.

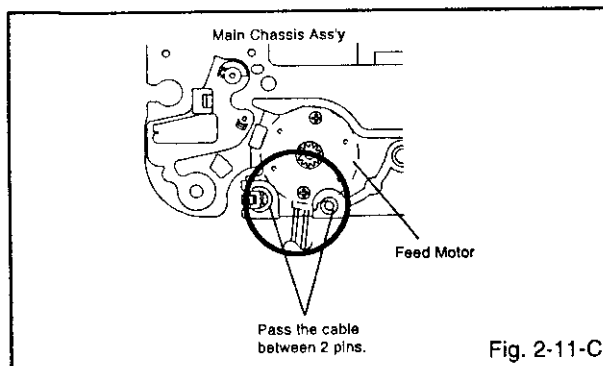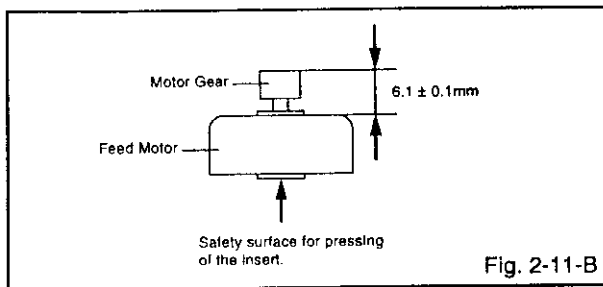

## DISASSEMBLY INSTRUCTIONS

### 3. REMOVAL OF ANODE CAP

Read the following **NOTED** items before starting work.

- \* After turning the power off there might still be a potential voltage that is very dangerous. When removing the Anode Cap, make sure to discharge the Anode Cap's potential voltage.
- \* Do not use pliers to loosen or tighten the Anode Cap terminal, this may cause the spring to be damaged.

#### REMOVAL

1. Follow the steps as follows to discharge the Anode Cap. (Refer to Fig. 3-1.)  
Connect one end of an Alligator Clip to the metal part of a flat-blade screwdriver and the other end to ground. While holding the plastic part of the insulated Screwdriver, touch the support of the Anode with the tip of the Screwdriver. A cracking noise will be heard as the voltage is discharged.

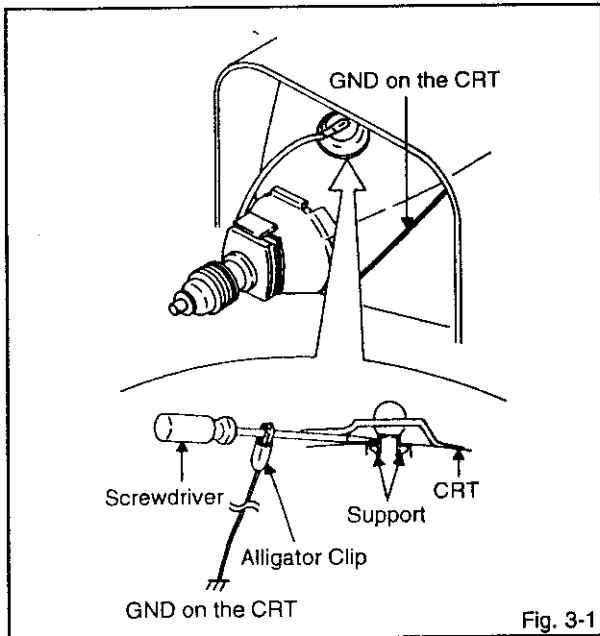


Fig. 3-1

2. Flip up the sides of the Rubber Cap in the direction of the arrow and remove one side of the support. (Refer to Fig. 3-2.)

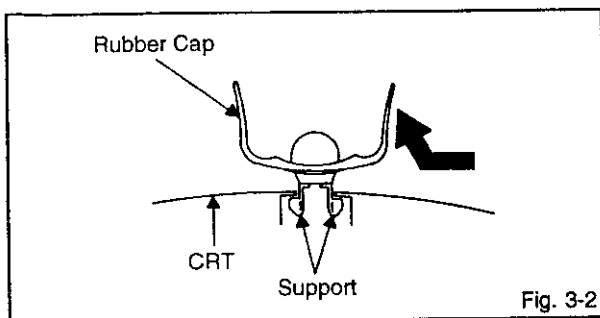


Fig. 3-2

3. After one side is removed, pull in the opposite direction to remove the other.

#### NOTE

Take care not to damage the Rubber Cap.

#### INSTALLATION

1. Clean the spot where the cap was located with a small amount of alcohol. (Refer to Fig. 3-3.)

#### NOTE

Confirm that there is no dirt, dust, etc. at the spot where the cap was located.

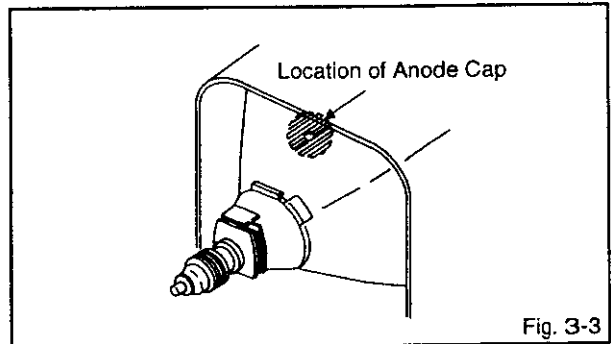


Fig. 3-3

2. Arrange the wire of the Anode Cap and make sure the wire is not twisted.
3. Turn over the Rubber Cap. (Refer to Fig. 3-4.)

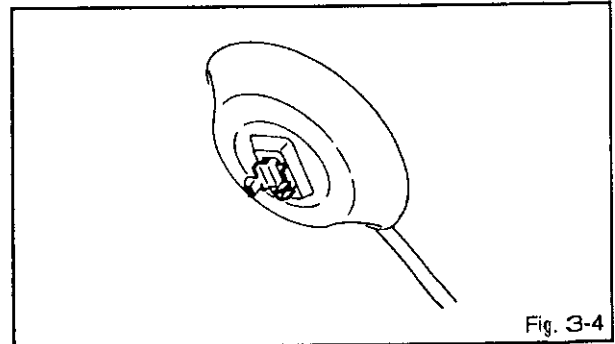


Fig. 3-4

4. Insert one end of the Anode Support into the anode button, then the other as shown in Fig. 3-5.

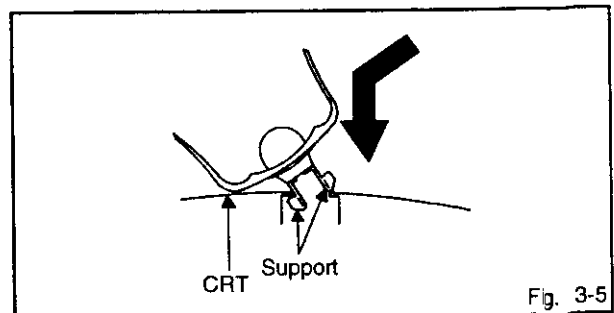


Fig. 3-5

5. Confirm that the Support is securely connected.
6. Put on the Rubber Cap without moving any parts.

## DISASSEMBLY INSTRUCTIONS


### 4. REMOVAL AND INSTALLATION OF FLAT PACKAGE IC

#### REMOVAL

1. Put the Masking Tape (cotton tape) around the Flat Package IC to protect other parts from any damage. (Refer to Fig. 4-1.)

#### NOTE


Masking is carried out on all the parts located within 10 mm distance from IC leads.

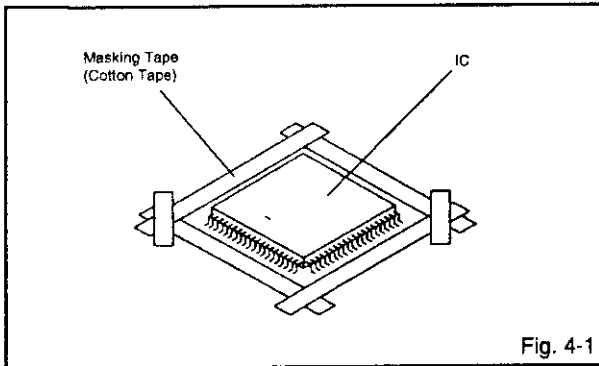

2. Heat the IC leads using a blower type IC desoldering machine. (Refer to Fig. 4-2.)

#### NOTE


Do not add the rotating and the back and forth directions force on the IC, until IC can move back and forth easily after desoldering the IC leads completely.

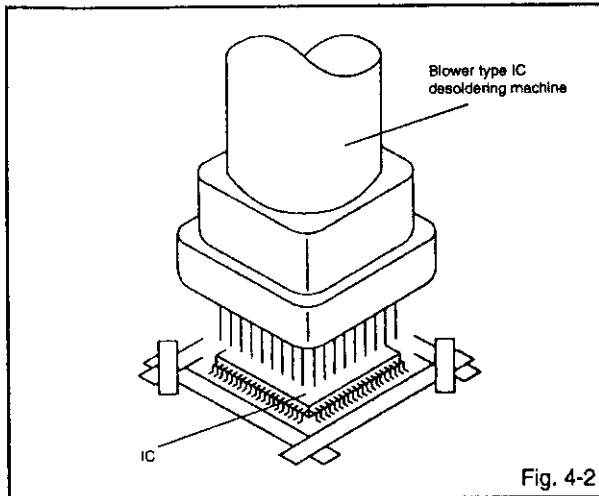

3. When IC starts moving back and forth easily after desoldering completely, pickup the corner of the IC using a tweezers and remove the IC by moving with the IC desoldering machine. (Refer to Fig. 4-3.)

#### NOTE


Some ICs on the PCB are affixed with glue, so be careful not to break or damage the foil of each IC leads or solder lands under the IC when removing it.

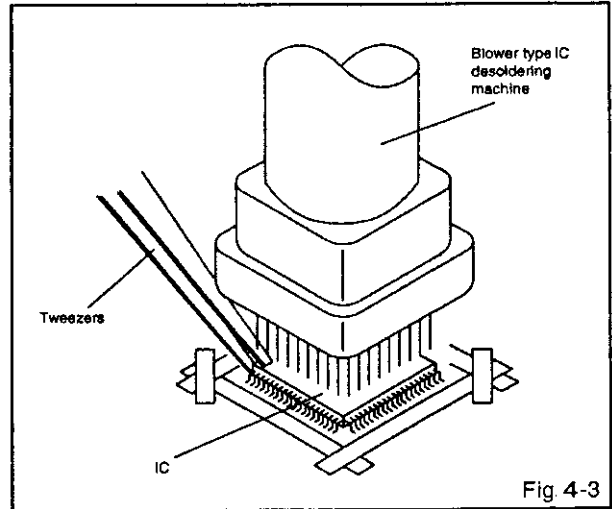

4. Peel off the Masking Tape.
5. Absorb the solder left on the pattern using the Braided Shield Wire. (Refer to Fig. 4-4.)

#### NOTE


Do not move the Braided Shield Wire in the vertical direction towards the IC pattern.

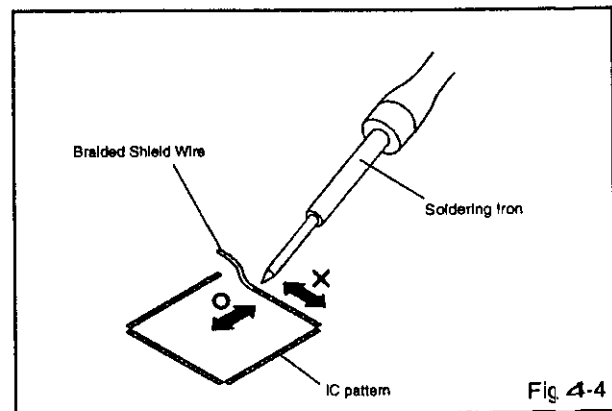


## DISASSEMBLY INSTRUCTIONS

### INSTALLATION

1. Take care of the polarity of new IC and then install the new IC fitting on the printed circuit pattern. Then solder each lead on the diagonal positions of IC temporarily. (Refer to Fig. 4-5.)

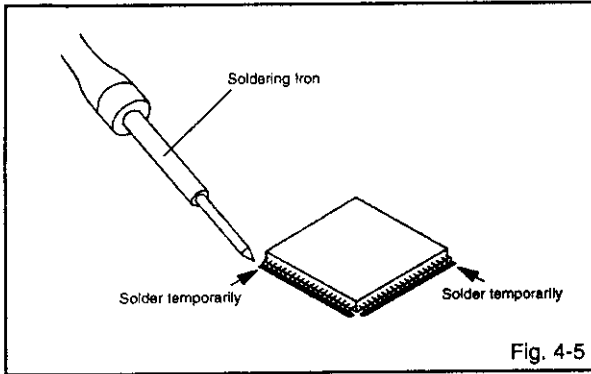


2. Supply the solder from the upper position of IC leads sliding to the lower position of the IC leads. (Refer to Fig. 4-6.)

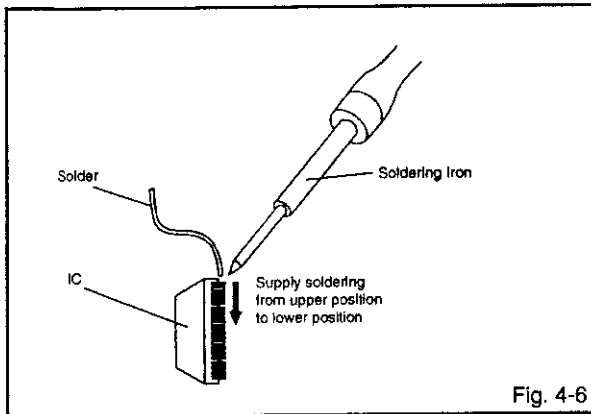


3. Absorb the solder left on the lead using the Braided Shield Wire. (Refer to Fig. 4-7.)

### NOTE

Do not absorb the solder to excess.

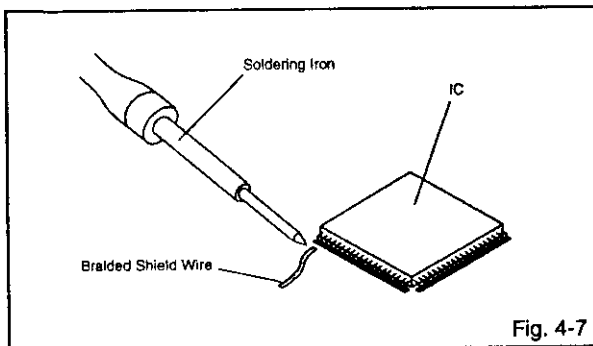

4. When bridge-soldering between terminals and/or the soldering amount are not enough, resolder using a Thin-tip Soldering Iron. (Refer to Fig. 4-8.)

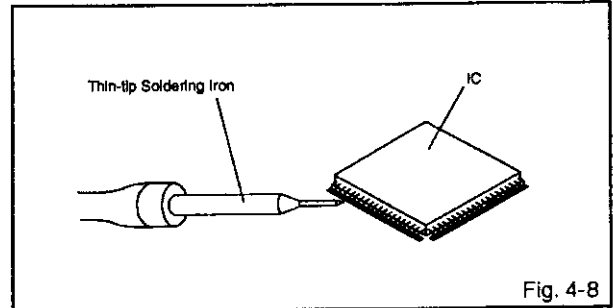

5. Finally, confirm the soldering status on four sides of the IC using a magnifying glass. Confirm that no abnormality is found on the soldering position and installation position of the parts around the IC. If some abnormality is found, correct by resoldering.

### NOTE

When the IC leads are bent during soldering and/or repairing, do not repair the bending of leads. If the bending of leads are repaired, the pattern may be damaged. So, be always sure to replace the IC in this case.

## SERVICE MODE LIST

This unit provided with the following SERVICE MODES so you can repair, examine and adjust easily.

To enter to the SERVICE MODE function, press and hold both buttons simultaneously on the main unit and on the remote control for more than a standard time (second).


Set Key	Remocon Key	Standard Time (seconds)	Operations
VOL. (-) MIN	1	1	Initialization of the factory on TV. NOTE: Do not use this for the normal servicing. If you set a factory initialization, the memories are reset such as the channel setting, and the POWER ON total hours.
VOL. (-) MIN	4	1	Initialization of the factory on DVD. NOTE: Do not use this for the normal servicing. The function will only work without the setting of DVD disc at DVD mode. While pressing the Remocon Key for more than the Standard Time, press the Set Key simultaneously.
VOL. (-) MIN	6	1	POWER ON total hours are displayed on the screen. Refer to the "CONFIRMATION OF HOURS USED"  Can be checked of the INITIAL DATA of MEMORY IC. Refer to the "WHEN REPLACING EEPROM (MEMORY) IC".
VOL. (-) MIN	9	1	Display of the Adjustment MENU on the screen. Refer to the "ELECTRICAL ADJUSTMENT" (On-Screen Display Adjustment).
STOP	7	3	Releasing of PARENTAL LOCK. Refer to the "PARENTAL CONTROL - RATING LEVEL". NOTE: The function will only work without the setting of DVD disc at DVD mode. While pressing the Remocon Key for more than the Standard Time, press the Set Key simultaneously.

## CONFIRMATION OF HOURS USED

POWER ON total hours can be checked on the screen. Total hours are displayed in 16 system of notation.

**NOTE:** If you set a factory initialization, the total hours is reset to "0".

1. Set the VOLUME to minimum.
2. Press both VOL. DOWN button on the set and Channel button (6) on the remote control for more than 1 second.
3. After the confirmation of using hours, turn off the power.

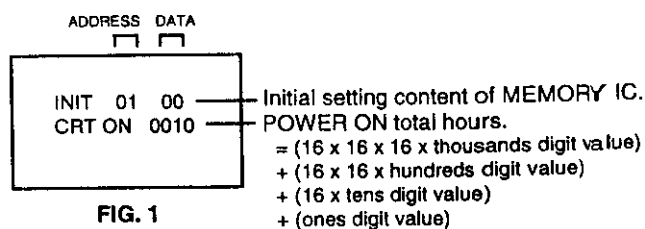

## WHEN REPLACING EEPROM (MEMORY) IC

If a service repair is undertaken where it has been required to change the MEMORY IC, the following steps should be taken to ensure correct data settings while making reference to TABLE 1.

**NOTE: No need setting for after INI 16 due to the adjustment value.**

INI	+0	+1	+2	+3	+4	+5	+6	+7	+8	+9	+A	+B	+C	+D	+E	+F
00	---	00	01	02	00	B8	90	B1	41	01	60	0C	13	01	00	02
10	50	00	00	00	50	42	36	---	---	---	---	---	---	---	---	---

Table 1

1. Enter DATA SET mode by setting VOLUME to minimum.
2. Press both VOL. DOWN button on the set and Channel button (6) on the remote control for more than 1 second. ADDRESS and DATA should appear as FIG 1.

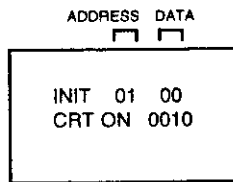


FIG. 1

3. ADDRESS is now selected and should "blink". Using the VOL. UP/DOWN button on the remote, step through the ADDRESS until required ADDRESS to be changed is reached.
  4. Press ENTER to select DATA. When DATA is selected, it will "blink".
  5. Again, step through the DATA using VOL. UP/DOWN button until required DATA value has been selected.
  6. Pressing ENTER will take you back to ADDRESS for further selection if necessary.
  7. Repeat steps 3 to 6 until all data has been checked.
  8. When satisfied correct DATA has been entered, turn POWER off (return to STANDBY MODE) to finish DATA input. **After the data input, set to the initializing of shipping.**
  9. Turn POWER on.
  10. Press both VOL. DOWN button on the set and Channel button (1) on the remote control for more than 1 second.
  11. After the finishing of the initializing of shipping, the unit will turn off automatically.
- The unit will now have the correct DATA for the new MEMORY IC.



## SERVICE MODE LIST

This unit provided with the following SERVICE MODES so you can repair, examine and adjust easily.

To enter to the SERVICE MODE function, press and hold both buttons simultaneously on the main unit and on the remote control for more than a standard time (second).


Set Key	Remocon Key	Standard Time (seconds)	Operations
VOL. (-) MIN	1	1	Initialization of the factory on TV. NOTE: Do not use this for the normal servicing. If you set a factory initialization, the memories are reset such as the channel setting, and the POWER ON total hours.
VOL. (-) MIN	4	1	Initialization of the factory on DVD. NOTE: Do not use this for the normal servicing. The function will only work without the setting of DVD disc at DVD mode. While pressing the Remocon Key for more than the Standard Time, press the Set Key simultaneously.
VOL. (-) MIN	6	1	POWER ON total hours are displayed on the screen. Refer to the "CONFIRMATION OF HOURS USED" Can be checked of the INITIAL DATA of MEMORY IC. Refer to the "WHEN REPLACING EEPROM (MEMORY) IC".
VOL. (-) MIN	9	1	Display of the Adjustment MENU on the screen. Refer to the "ELECTRICAL ADJUSTMENT" (On-Screen Display Adjustment).
STOP	7	3	Releasing of PARENTAL LOCK. Refer to the "PARENTAL CONTROL - RATING LEVEL". NOTE: The function will only work without the setting of DVD disc at DVD mode. While pressing the Remocon Key for more than the Standard Time, press the Set Key simultaneously.

## CONFIRMATION OF HOURS USED

POWER ON total hours can be checked on the screen. Total hours are displayed in 16 system of notation.

NOTE: If you set a factory initialization, the total hours is reset to "0".

1. Set the VOLUME to minimum.
2. Press both VOL. DOWN button on the set and Channel button (6) on the remote control for more than 1 second.
3. After the confirmation of using hours, turn off the power.

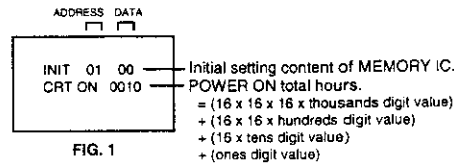

## ELECTRICAL ADJUSTMENTS

### 1. BEFORE MAKING ELECTRICAL ADJUSTMENTS

Read and perform these adjustments when repairing the circuits or replacing electrical parts or PCB assemblies.

#### CAUTION

- Use an isolation transformer when performing any service on this chassis.
- Before removing the anode cap, discharge electricity because it contains high voltage.
- When removing a PCB or related component, after unfastening or changing a wire, be sure to put the wire back in its original position.
- When you exchange IC and Transistor for a heat sink, apply the silicon grease (YG6260M) on the contact section of the heat sink. Before applying new silicon grease, remove all the old silicon grease. (Old grease may cause damages to the IC and Transistor).

Prepare the following measurement tools for electrical adjustments.

1. Oscilloscope
2. Digital Voltmeter
3. Pattern Generator

#### On-Screen Display Adjustment

1. Set the volume level to minimum.
2. Press the VOL. DOWN button on the set and the channel button (9) on the remote control for more than 1 second to display adjustment mode on the screen as shown in Fig. 1-1.

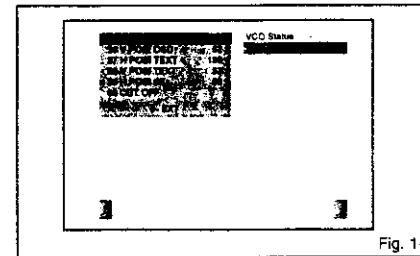


Fig. 1-1

3. Use the Channel UP/DOWN button or Channel button (0-9) on the remote control to select the options shown in Fig. 1-2.
4. Press the MENU button on the remote control to end the adjustments.

NO.	FUNCTION	NO.	FUNCTION
00	CUT OFF	20	TINT
01	RF AGC	21	SHARP
02	AGC GAIN	22	CONT. CENT
03	R DRIVE	23	CONT. MAX
04	R CUTOFF	24	CONT. MIN
05	G DRIVE	25	COLOR CENT
06	G CUTOFF	26	COLOR MAX
07	B DRIVE	27	COLOR MIN
08	H POSI 60	28	M R CUT OFF
09	V POSI 60	29	M G CUT OFF
10	V POSI 60	30	N B CUT OFF
11	V SIZE 50	31	CVBS OUT
12	V SIZE 60	32	APR. THR
13	VCC COARSE	33	BELL FILTER
14	VCC FINE	34	BANDPASS
15	---	35	H POSI OSD
16	---	36	V POSI OSD
17	H POSI CENT	37	H POSI TXT
18	H POSI MAX	38	Y POSI TXT
19	H POSI MIN	39	H POSI 60

Fig. 1-2

### 2. BASIC ADJUSTMENTS

#### 2-1: CONSTANT VOLTAGE

1. Connect the digital voltmeter to TP401.
2. Set condition is AV MODE without signal.
3. Using the remote control, set the brightness and contrast to normal position.
4. Adjust the VR3801 until the digital voltmeter is  $135 \pm 0.5V$ .

#### 2-2: VCO (AFT)

1. Place the set with Aging Test for more than 10 minutes.
2. Connect the oscillator (38.9MHz) to TP101.
3. Activate the adjustment mode display of Fig. 1-1 and press the channel button (13) on the remote control to select "VCO COARSE".
4. Press the VOL. UP/DOWN button on the remote control until the "OK" appear on the screen. If the "OK" is not displayed, select the "-" side on the changed from "+" to "-".
5. Press the CH UP button once to set to "VCO FINE" mode.
6. Press the VOL. UP/DOWN button on the remote control to select the 5 step down point from the upper limit on the "OK".  
(Example: In case of the "OK" point 30-41, select 36.)

#### 2-3: RF AGC

1. Receive the UHF (63dB).
2. Place the set with Aging Test for more than 15 minutes.
3. Connect the digital voltmeter between the pin 5 of CP101 and the pin 1 of CP101.
4. Activate the adjustment mode display of Fig. 1-1 and press the channel button (01) on the remote control to select "RF AGC".
5. Press the VOL. UP/DOWN button on the remote control until the digital voltmeter is  $2.4 \pm 0.05V$ .

## ELECTRICAL ADJUSTMENTS

### 2-4: FOCUS

1. Receive the monoscope pattern.
2. Turn the Focus Volume fully counterclockwise once.
3. Adjust the Focus Volume until picture is distinct.

### 2-5: HORIZONTAL POSITION

1. Receive the monoscope pattern from the Pattern Generator.
2. Using the remote control, set the brightness and contrast to normal position.
3. Activate the adjustment mode display of Fig. 1-1 and press the channel button (08) on the remote control to select "H POSI 50".
4. Press the VOL. UP/DOWN button on the remote control until the SHIFT quantity of the OVER SCAN on right and left becomes minimum.
5. Receive the cross hatch signal of NTSC. (Audio Video Input)
6. Press the AV button on the remote control to set to the AV mode.
7. Activate the adjustment mode display of Fig. 1-1 and press the channel button (39) on the remote control to select "H POSI 60".
8. Press the VOL. UP/DOWN button on the remote control until the SHIFT quantity of the OVER SCAN on right and left becomes minimum.

### 2-6: VERTICAL POSITION

**NOTE:** Adjust after performing adjustments in section 2-5.

1. Receive the cross hatch signal from the Pattern Generator.
2. Using the remote control, set the brightness and contrast to normal position.
3. Activate the adjustment mode display of Fig. 1-1 and press the channel button (09) on the remote control to select "V POSI (50)".
4. Check if the step No. V.POSI (50) is "10".
5. Adjust the VR402 until the horizontal line becomes fit to notch of the shadow mask.
6. Press the AV button on the remote control to set to the AV mode.
7. Activate the adjustment mode display of Fig. 1-1 and press the channel button (10) on the remote control to select "V POSI (60)".
8. Check if the step No. V.POSI (60) is "05".

### 2-7: VERTICAL SIZE

**NOTE:** Adjust after performing adjustments in section 2-7.

1. Receive the monoscope pattern from the Pattern Generator.
2. Using the remote control, set the brightness and contrast to normal position.
3. Activate the adjustment mode display of Fig. 1-1 and press the channel button (11) on the remote control to select "V SIZE 50".
4. Adjust by using the VOL. UP/DOWN button on the remote control so that the Up/Down OVER SCAN Quantity becomes equal to the Right/Left OVER SCAN Quantity.
5. Receive a broadcast and check if the picture is normal.
6. Receive the cross hatch signal of NTSC. (Audio Video Input)
7. Press the AV button on the remote control to set to the AV mode.
8. Activate the adjustment mode display of Fig. 1-1 and press the channel button (12) on the remote control to select "V SIZE 60".
9. Adjust by using the VOL. UP/DOWN button on the remote control so that the Up/Down OVER SCAN Quantity becomes equal to the Right/Left OVER SCAN Quantity.
10. Receive a broadcast and check if the picture is normal.

### 2-8: VERTICAL LINEARITY

**NOTE:** Adjust after performing adjustments in section 2-7. After the adjustment of Vertical Linearity, reconfirm the Vertical Position and Vertical Size adjustments.

1. Receive the monoscope pattern from the Pattern Generator.
2. Using the remote control, set the brightness and contrast to normal position.
3. Adjust the VR401 until the SHIFT quantity of the OVER SCAN on upside and downside becomes minimum.

### 2-9: OSD HORIZONTAL

1. Using the remote control, set the brightness and contrast to normal position.
2. Activate the adjustment mode display of Fig. 1-1 and press the channel button (35) on the remote control to select "H POSI OSD".
3. Press the VOL. UP/DOWN button on the remote control until the difference of A and B becomes minimum. (Refer to Fig. 2-1)

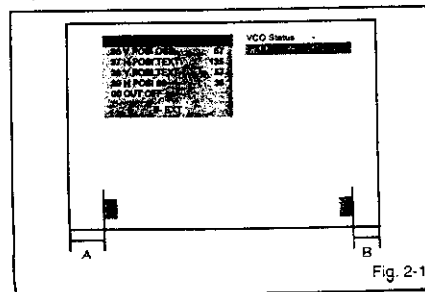


Fig. 2-1

## ELECTRICAL ADJUSTMENTS

### 2-10: CUT OFF

1. Set condition is AV MODE without signal.
2. Using the remote control, set the brightness and contrast to normal position.
3. Place the set with Aging Test for more than 15 minutes.
4. Activate the adjustment mode display of Fig. 1-1 and press the channel button (00) on the remote control to select "CUT OFF".
5. Adjust the Screen Volume until a dim raster is obtained.

### 2-11: WHITE BALANCE

**NOTE:** Adjust after performing CUT OFF adjustment.

1. Place the set with Aging Test for more than 15 minutes.
2. Receive the gray scale pattern from the Pattern Generator.
3. Using the remote control, set the brightness and contrast to normal position.
4. Activate the adjustment mode display of Fig. 1-1 and press the channel button (03) on the remote control to select "R DRIVE".
5. Press the UP/DOWN button on the remote control to select the "R DRIVE", "G DRIVE", "M R CUT OFF" or "M G CUT OFF".
6. Adjust the VOL. UP/DOWN button on the remote control to whiten the R DRIVE, G DRIVE, M R CUT OFF, and M G CUT OFF at each step one sections equally.
7. Perform the above adjustments 5 and 6 until the white color is looked like a white.

### 2-12: BRIGHT CENTER

1. Activate the adjustment mode display of Fig. 1-1 and press the channel button (17) on the remote control to select "BRI CENT".
2. Press the VOL. UP/DOWN button on the remote control until the brightness step No. becomes "20".
3. Press the AV button on the remote control to set to the AV mode. Then perform the above adjustments 1-2.
4. Press the DVD button on the remote control to set to the DVD mode.
5. Activate the adjustment mode display of Fig. 1-1 and press the channel button (17) on the remote control to select "BRI CENT".
6. Press the VOL. UP/DOWN button on the remote control to set the same step numbers as the AV mode.

### 2-13: CONTRAST CENT

1. Receive the color bar pattern. (RF Input)
2. Using the remote control, set the brightness, contrast, color and tint to normal position.
3. Activate the adjustment mode display of Fig. 1-1 and press the channel button (22) on the remote control to select "CONT CENT".
4. Press the VOL. UP/DOWN button on the remote control until the contrast step No. becomes "22".
5. Press the AV button on the remote control to set to the AV mode. Then perform the above adjustments 1-4.
6. Press the DVD button on the remote control to set to the DVD mode.
7. Activate the adjustment mode display of Fig. 1-1 and press the channel button (22) on the remote control to select "CONT CENT".
8. Press the VOL. UP/DOWN button on the remote control to set the same step numbers as the AV mode.

### 2-14: COLOR CENTER

1. Receive the color bar pattern. (RF Input)
2. Using the remote control, set the brightness, contrast, color and tint to normal position.
3. Connect the oscilloscope to TP803.
4. Activate the adjustment mode display of Fig. 1-1 and press the channel button (25) on the remote control to select "COL CENT".
5. Adjust the VOLTS RANGE VARIABLE knob of the oscilloscope until the range between white 100% and 0% is set to 4 scales on the screen of the oscilloscope.
6. Press the VOL. UP/DOWN button on the remote control until the red color level is adjusted to  $90 \pm 5\%$  of the white level. (Refer to Fig. 2-2)
7. Receive the color bar pattern. (Audio Video Input)
8. Press the INPUT SELECT button on the remote control to set to the AV mode. Then perform the above adjustments 2-6.
9. Press the DVD button on the remote control to set to the DVD mode.
10. Activate the adjustment mode display of Fig. 1-1 and press the channel button (25) on the remote control to select "COL CENT".
11. Press the VOL. UP/DOWN button on the remote control to set the same step numbers as the AV mode.

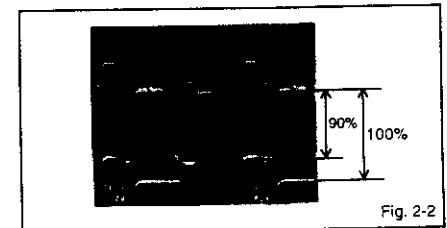


Fig. 2-2

## ELECTRICAL ADJUSTMENTS

### 2-15: Confirmation of Fixed Value (Step No.)

Please check if the fixed values of the each adjustment items are set correctly referring below.

NO.	FUNCTION	STEP NO.
02	AGC GAIN	00
04	R CUTOFF	31
06	G CUTOFF	31
07	B DRIVE	45
18	BRIGHT MAX	30
19	BRIGHT MIN	05
20	TINT	31
21	SHARP	05
23	CONT MAX	50
24	CONT MIN	05
26	COLOR MAX	60
27	COLOR MIN	10
30	M B CUT OFF	100
31	CVBS OUT	20
32	APR THR	15
33	BELL FILTER	22
34	BANDPASS	00
36	V POSI OSD	57
37	H POSI TXT	135
38	V POSI TXT	57

## ELECTRICAL ADJUSTMENTS

### 3. PURITY AND CONVERGENCE ADJUSTMENTS

#### NOTE

1. Turn the unit on and let it warm up for at least 30 minutes before performing the following adjustments.
2. Place the CRT surface facing east or west to reduce the terrestrial magnetism.
3. Turn ON the unit and demagnetize with a Degauss Coil.

#### 3-1: STATIC CONVERGENCE (ROUGH ADJUSTMENT)

1. Tighten the screw for the magnet. Refer to the adjusted CRT for the position. (Refer to Fig. 3-1)
- If the deflection yoke and magnet are in one body, untighten the screw for the body.
2. Receive the green raster pattern from the color bar generator.
3. Slide the deflection yoke until it touches the funnel side of the CRT.
4. Adjust center of screen to green, with red and blue on the sides, using the pair of purity magnets.
5. Switch the color bar generator from the green raster pattern to the crosshatch pattern.
6. Combine red and blue of the 3 color crosshatch pattern on the center of the screen by adjusting the pair of 4 pole magnets.
7. Combine red/blue (magenta) and green by adjusting the pair of 6 pole magnets.
8. Adjust the crosshatch pattern to change to white by repeating steps 6 and 7.

#### 3-2: PURITY

#### NOTE

Adjust after performing adjustments in section 3-1.

1. Receive the green raster pattern from color bar generator.
2. Adjust the pair of purity magnets to center the color on the screen.  
Adjust the pair of purity magnets so the color at the ends are equally wide.
3. Move the deflection yoke backward (to neck side) slowly, and stop it at the position when the whole screen is green.
4. Confirm red and blue color.
5. Adjust the slant of the deflection yoke while watching the screen, then tighten the fixing screw.

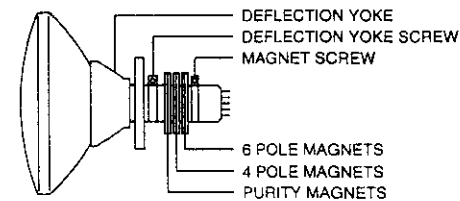


Fig. 3-1

#### 3-3: STATIC CONVERGENCE

#### NOTE

Adjust after performing adjustments in section 3-2.


1. Receive the crosshatch pattern from the color bar generator.
2. Combine red and blue of the 3 color crosshatch pattern on the center of the screen by adjusting the pair of 4 pole magnets.
3. Combine red/blue (magenta) and green by adjusting the pair of 6 pole magnets.

#### 3-4: DYNAMIC CONVERGENCE

#### NOTE


Adjust after performing adjustments in section 3-3.

1. Adjust the differences around the screen by moving the deflection yoke upward/downward and right/left. (Refer to Fig. 3-2-a)
2. Insert three wedges between the deflection yoke and CRT funnel to fix the deflection yoke. (Refer to Fig. 3-2-b)

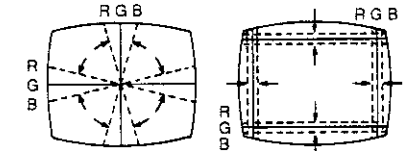

UPWARD/DOWNWARD SLANT RIGHT/LEFT SLANT

Fig. 3-2-a

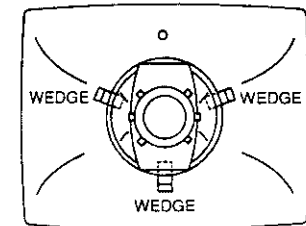


WEDGE POSITION


Fig. 3-2-b

# ELECTRICAL ADJUSTMENTS

## 4. ELECTRICAL ADJUSTMENT PARTS LOCATION GUIDE (WIRING CONNECTION)

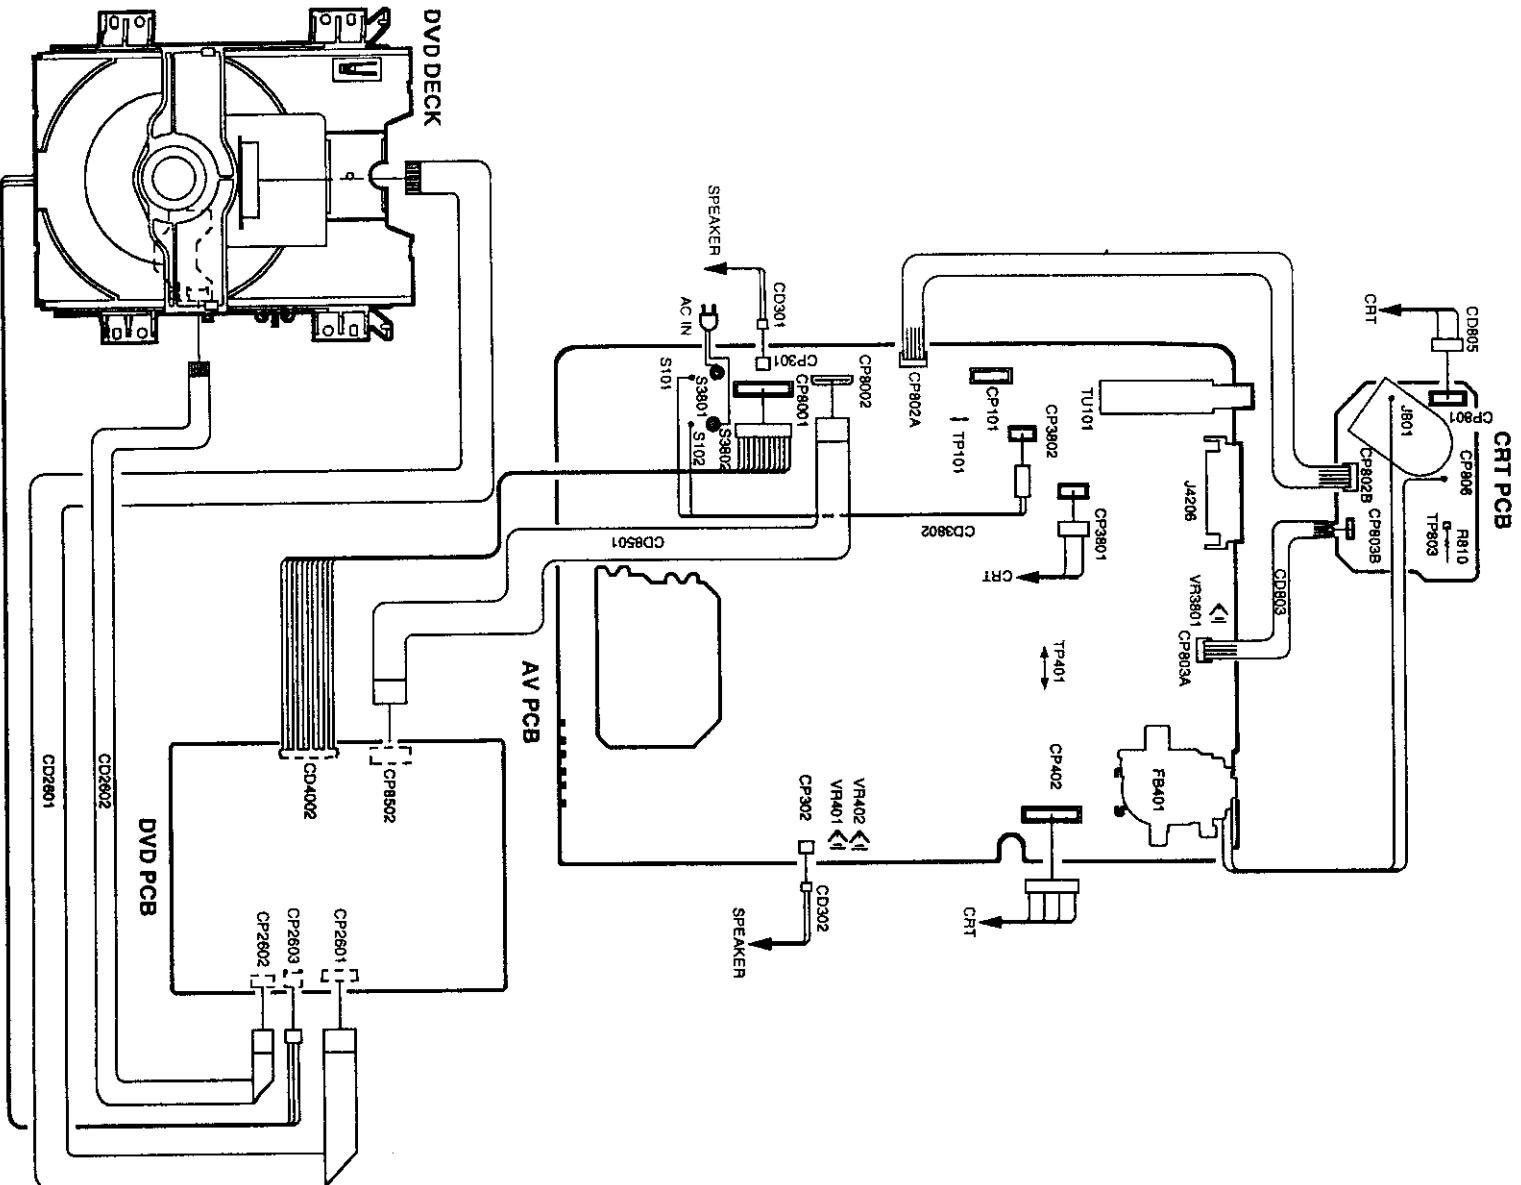


# DVD BLOCK DIAGRAM

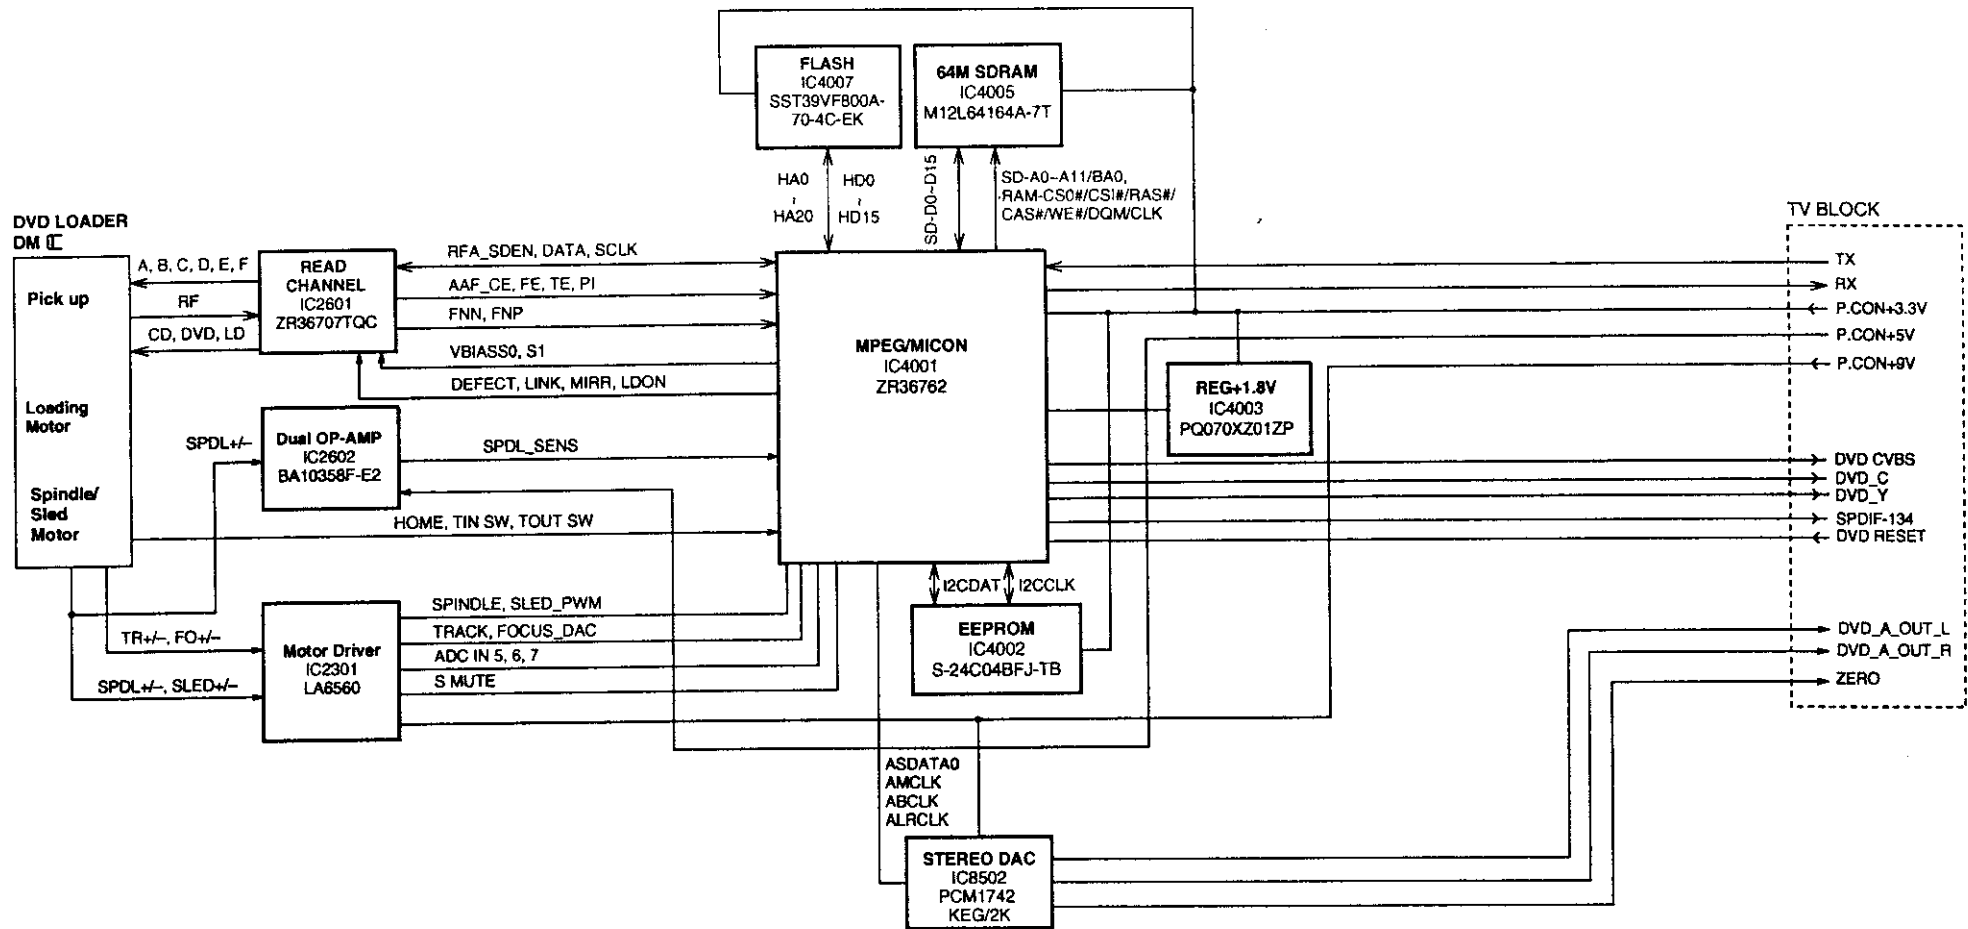


# TV BLOCK DIAGRAM


- \*A--P.CON+9V
- \*B--P.CON+12V
- \*C--P.CON+15V
- \*D--CHROMA+5V
- \*E--AT+5.7V
- \*F--AT-8V

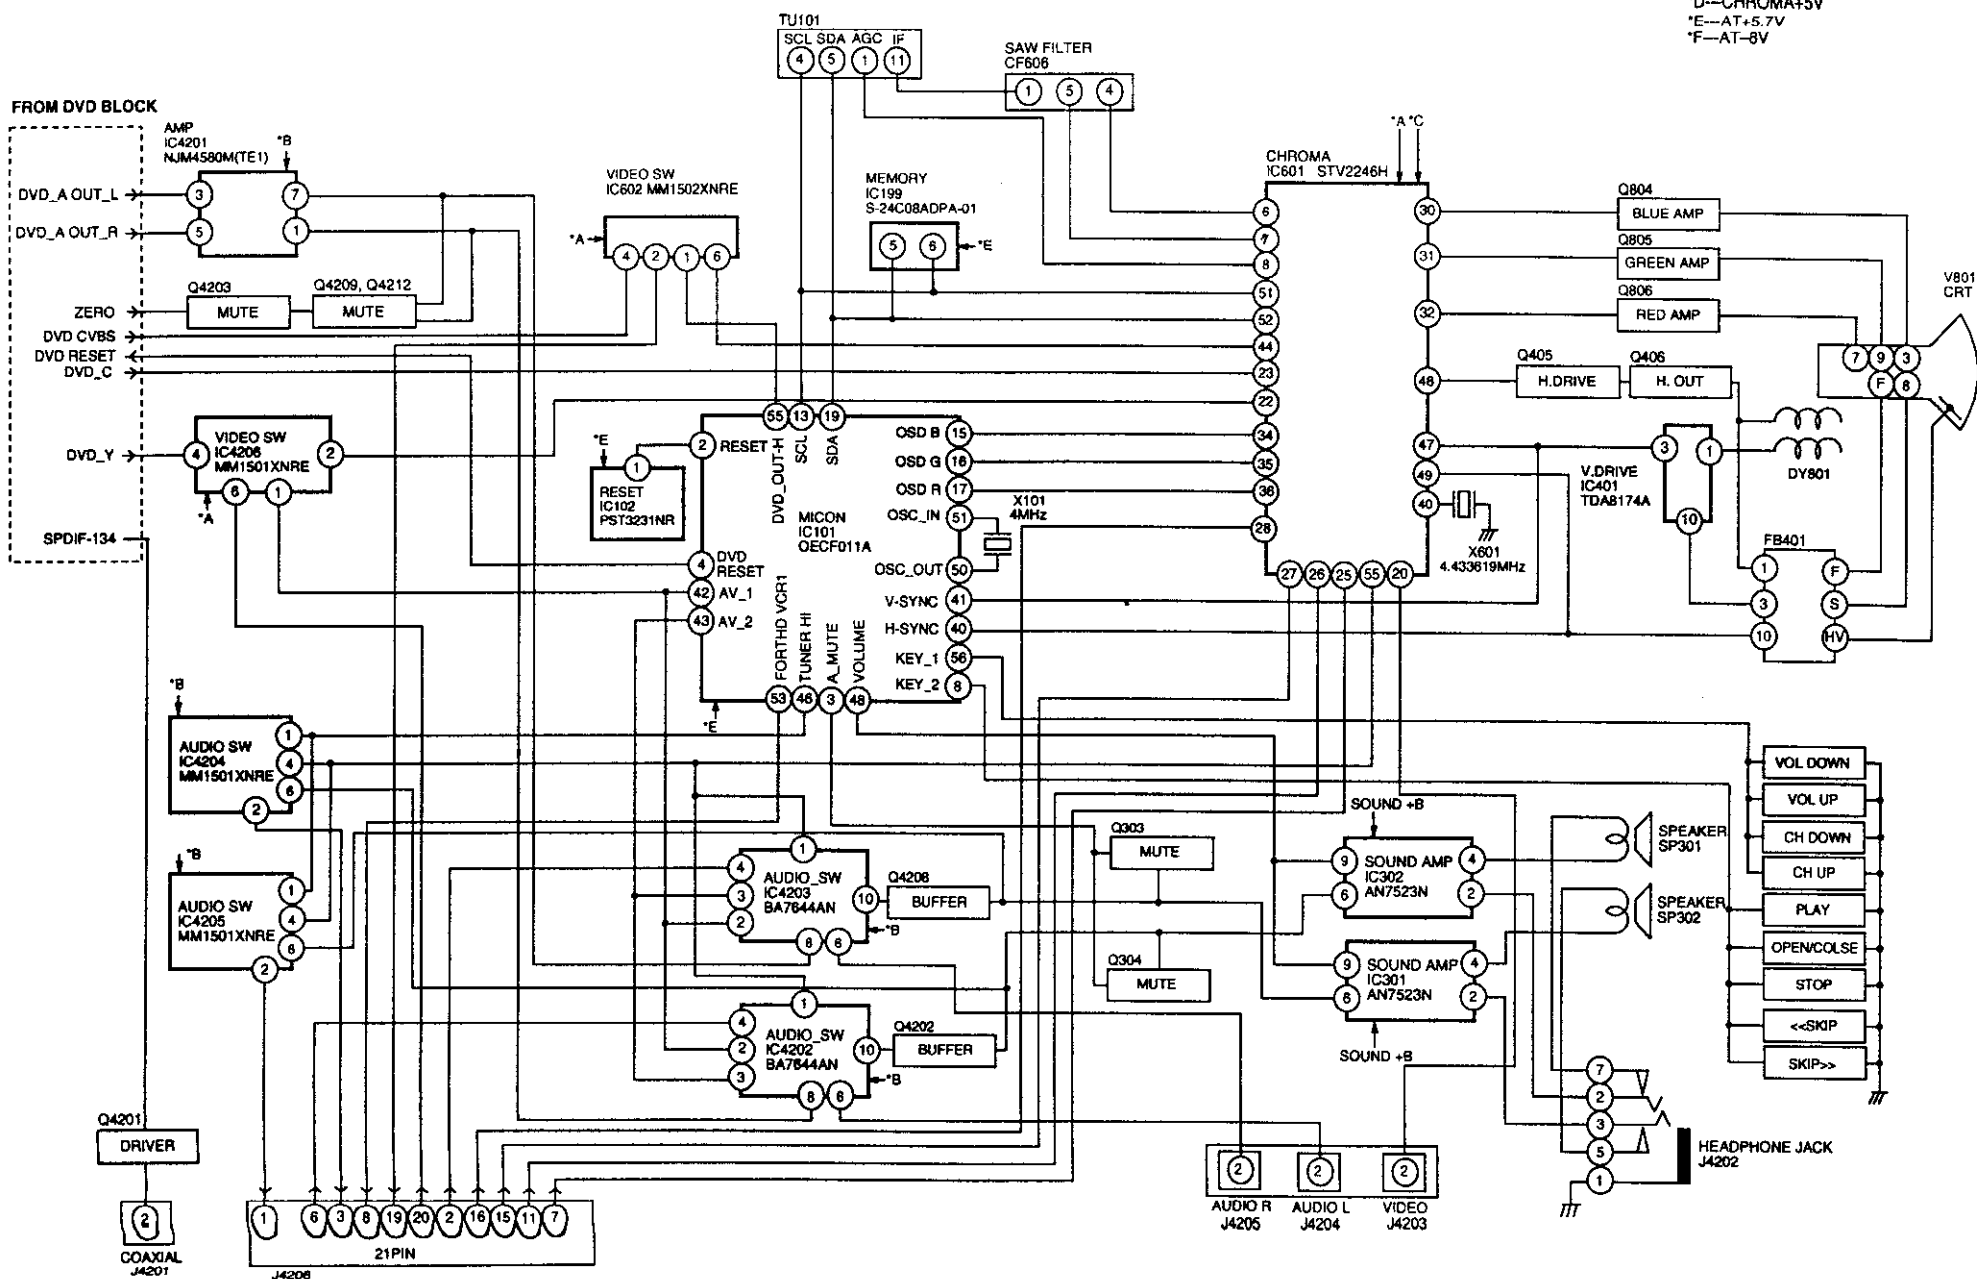

# POWER BLOCK DIAGRAM

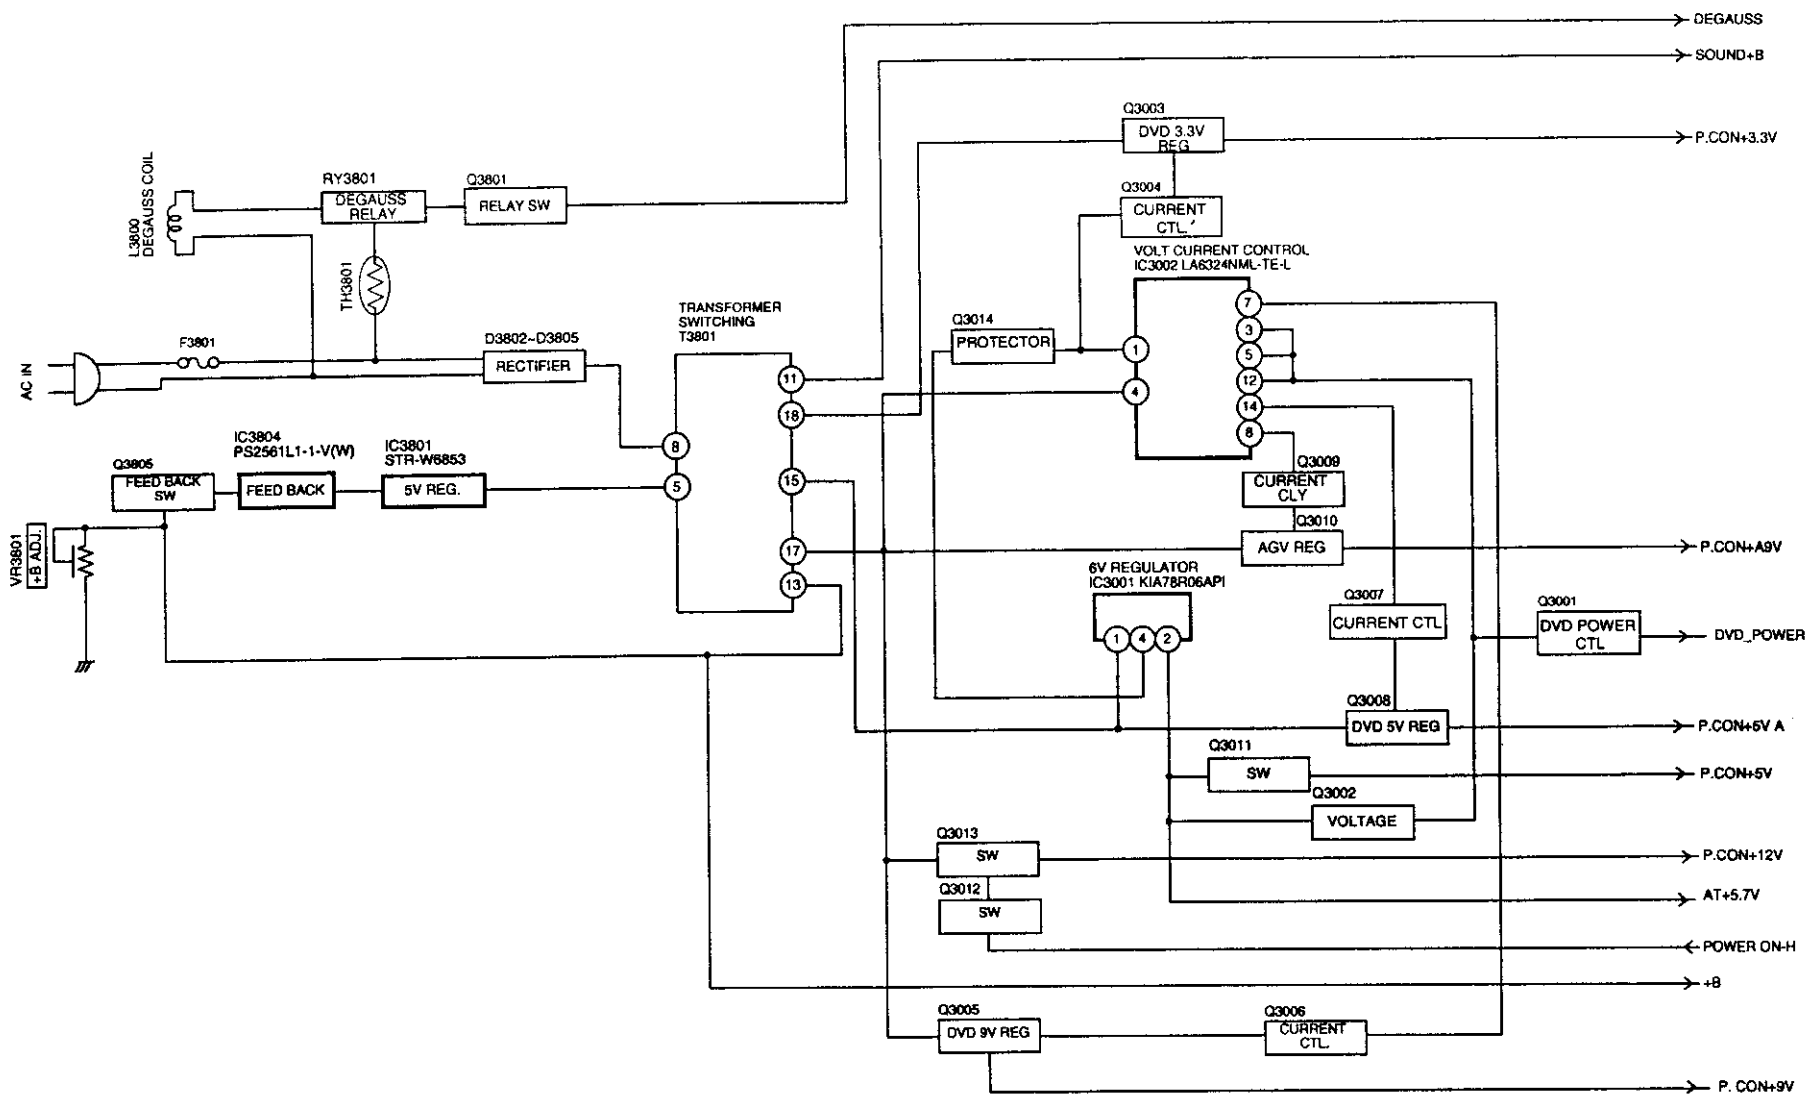


PRINT CIRCUIT BOARDS  
DVD (TOP SIDE)

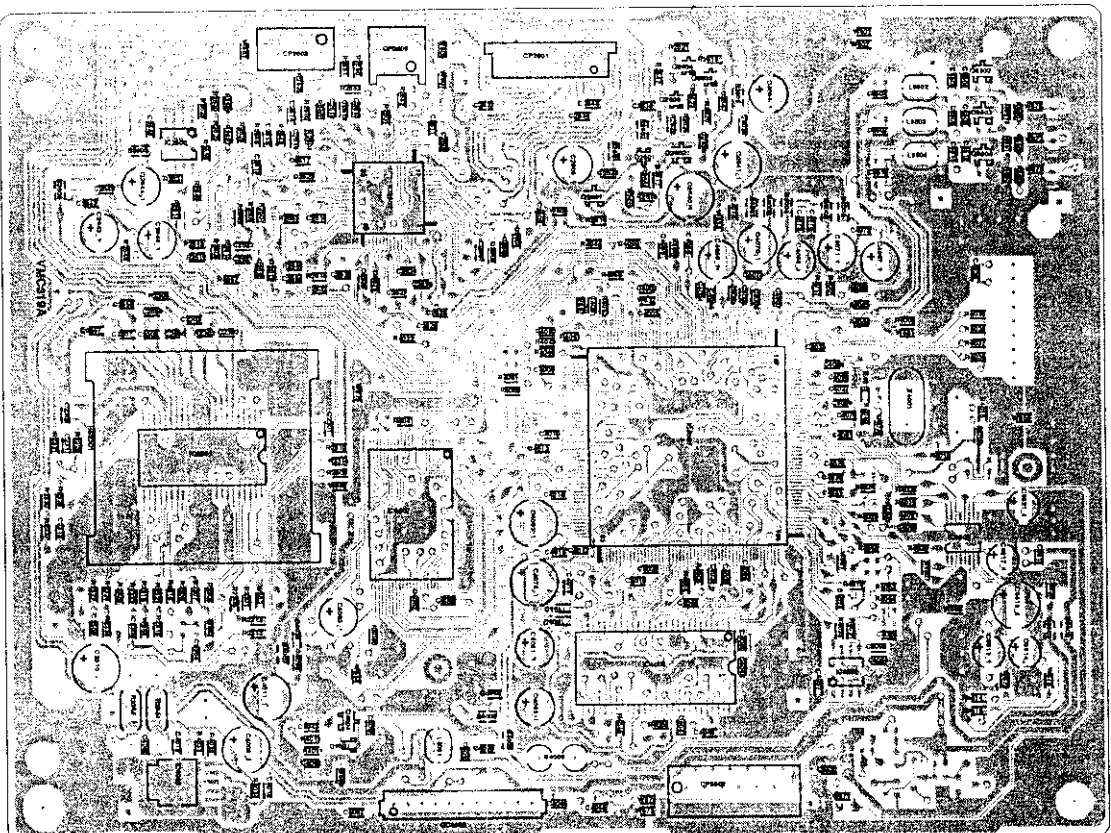






PRINTED CIRCUIT BOARDS  
AV/CRT (CHIP MOUNTED PARTS)  
SOLDER SIDE

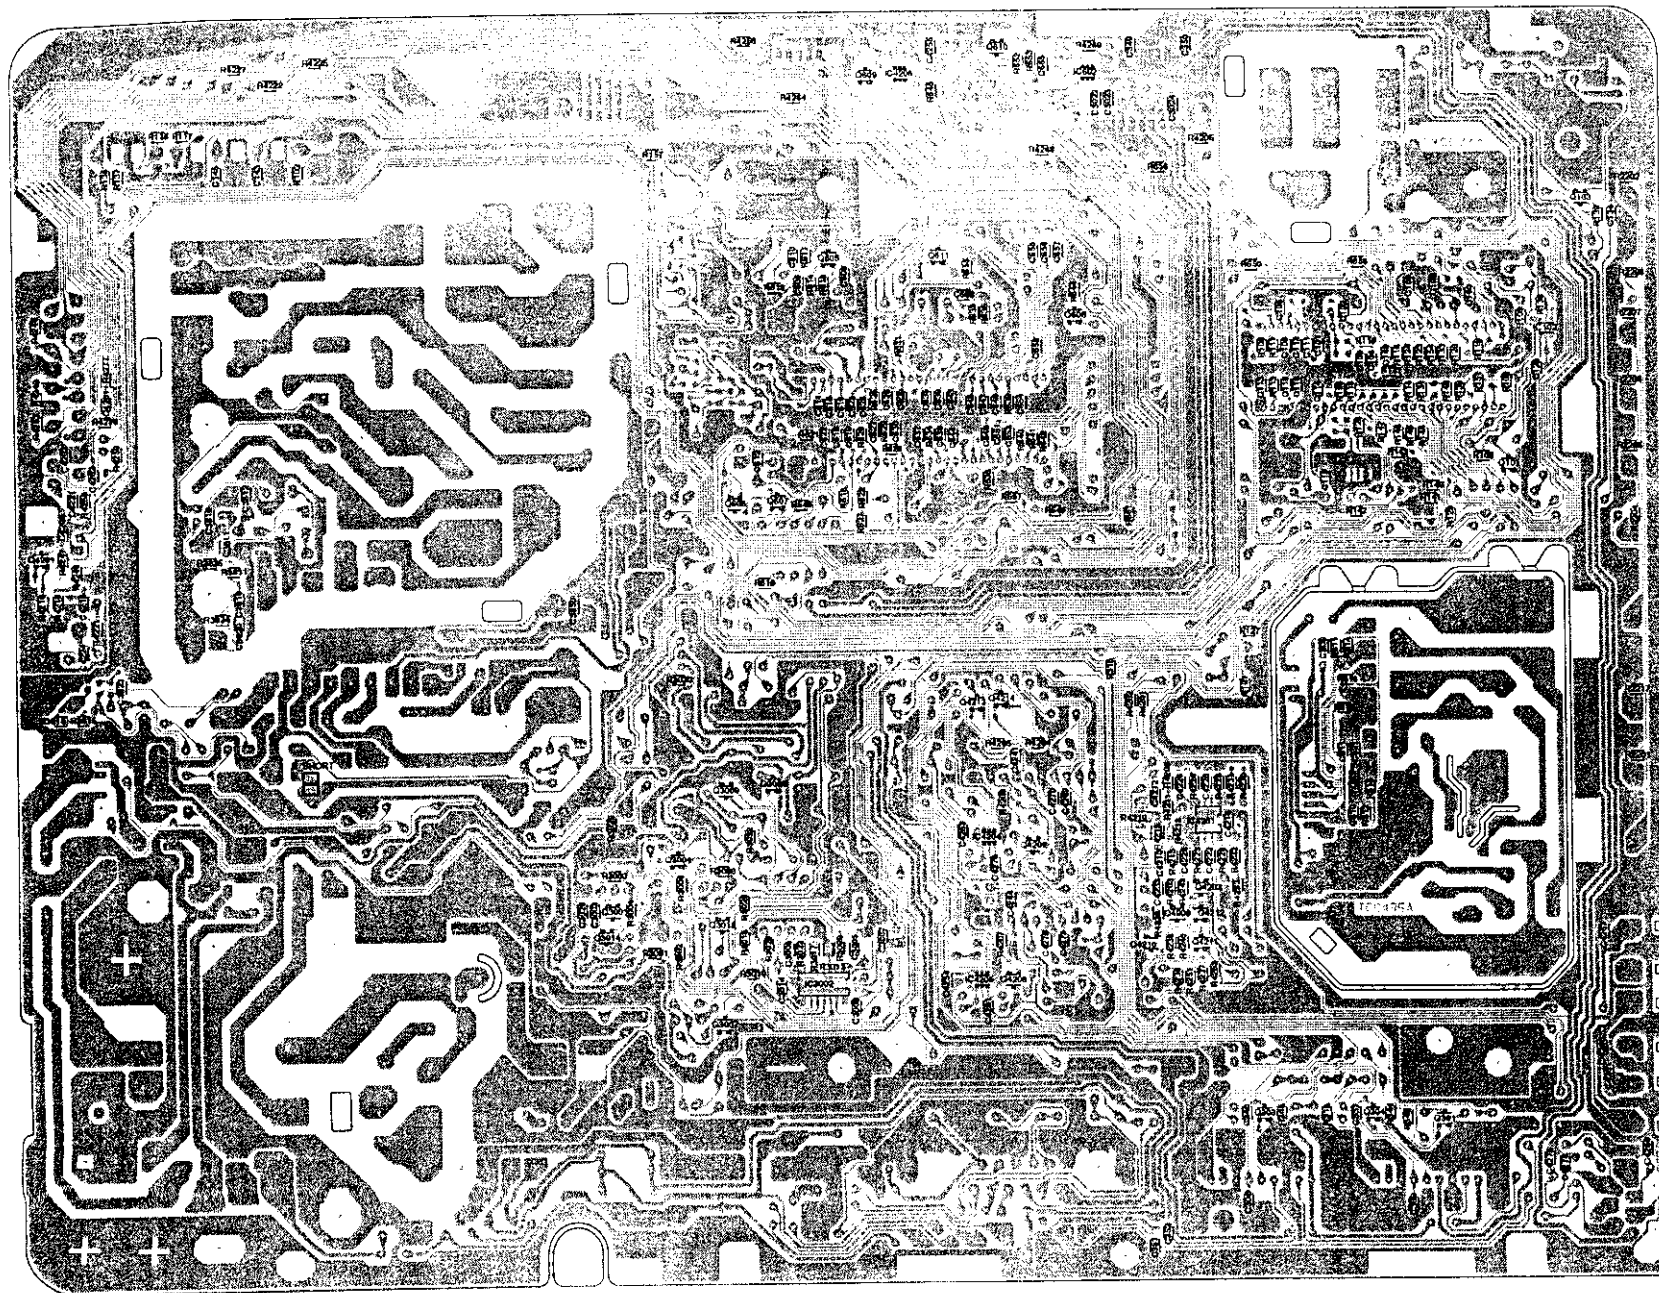


# MPEG/MICON SCHEMATIC DIAGRAM (DVD PCB)

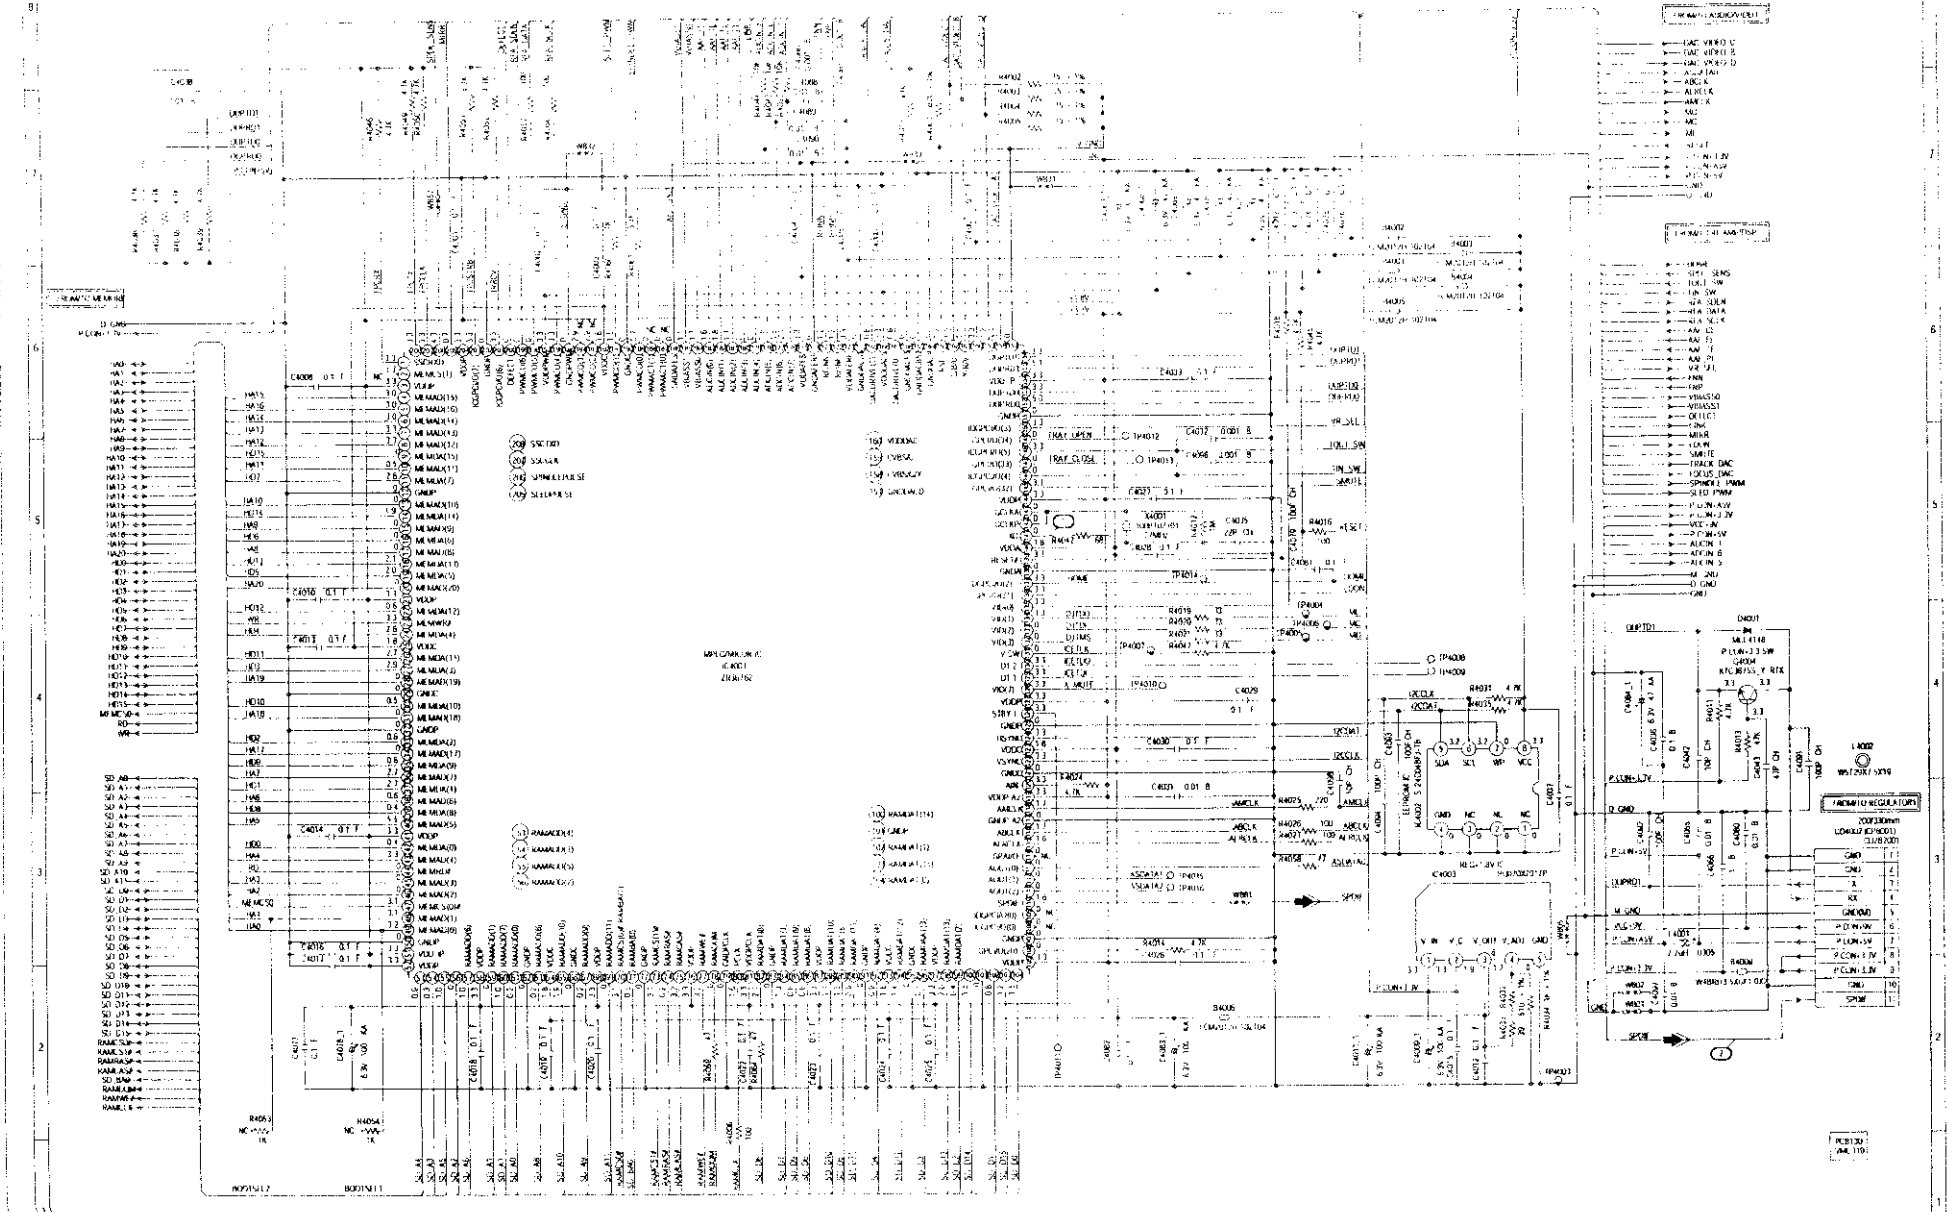

- IC PARTS LIST (MICON)**
- ▶ M6050 MICON
  - ▶ M6051 M6051
  - ▶ M6052 M6052
  - ▶ M6053 M6053
  - ▶ M6054 M6054
  - ▶ M6055 M6055
  - ▶ M6056 M6056
  - ▶ M6057 M6057
  - ▶ M6058 M6058
  - ▶ M6059 M6059
  - ▶ M6060 M6060
  - ▶ M6061 M6061
  - ▶ M6062 M6062

- IC PARTS LIST (M6059)**
- ▶ M6059 M6059
  - ▶ M6060 M6060
  - ▶ M6061 M6061
  - ▶ M6062 M6062
  - ▶ M6063 M6063
  - ▶ M6064 M6064
  - ▶ M6065 M6065
  - ▶ M6066 M6066
  - ▶ M6067 M6067
  - ▶ M6068 M6068
  - ▶ M6069 M6069
  - ▶ M6070 M6070
  - ▶ M6071 M6071
  - ▶ M6072 M6072
  - ▶ M6073 M6073
  - ▶ M6074 M6074
  - ▶ M6075 M6075
  - ▶ M6076 M6076
  - ▶ M6077 M6077
  - ▶ M6078 M6078
  - ▶ M6079 M6079
  - ▶ M6080 M6080
  - ▶ M6081 M6081
  - ▶ M6082 M6082
  - ▶ M6083 M6083
  - ▶ M6084 M6084
  - ▶ M6085 M6085
  - ▶ M6086 M6086
  - ▶ M6087 M6087
  - ▶ M6088 M6088
  - ▶ M6089 M6089
  - ▶ M6090 M6090
  - ▶ M6091 M6091
  - ▶ M6092 M6092
  - ▶ M6093 M6093
  - ▶ M6094 M6094
  - ▶ M6095 M6095
  - ▶ M6096 M6096
  - ▶ M6097 M6097
  - ▶ M6098 M6098
  - ▶ M6099 M6099
  - ▶ M6100 M6100
  - ▶ M6101 M6101
  - ▶ M6102 M6102
  - ▶ M6103 M6103
  - ▶ M6104 M6104
  - ▶ M6105 M6105
  - ▶ M6106 M6106
  - ▶ M6107 M6107
  - ▶ M6108 M6108
  - ▶ M6109 M6109
  - ▶ M6110 M6110
  - ▶ M6111 M6111
  - ▶ M6112 M6112
  - ▶ M6113 M6113
  - ▶ M6114 M6114
  - ▶ M6115 M6115
  - ▶ M6116 M6116
  - ▶ M6117 M6117
  - ▶ M6118 M6118
  - ▶ M6119 M6119
  - ▶ M6120 M6120
  - ▶ M6121 M6121
  - ▶ M6122 M6122
  - ▶ M6123 M6123
  - ▶ M6124 M6124
  - ▶ M6125 M6125
  - ▶ M6126 M6126
  - ▶ M6127 M6127
  - ▶ M6128 M6128
  - ▶ M6129 M6129
  - ▶ M6130 M6130
  - ▶ M6131 M6131
  - ▶ M6132 M6132
  - ▶ M6133 M6133
  - ▶ M6134 M6134
  - ▶ M6135 M6135
  - ▶ M6136 M6136
  - ▶ M6137 M6137
  - ▶ M6138 M6138
  - ▶ M6139 M6139
  - ▶ M6140 M6140
  - ▶ M6141 M6141
  - ▶ M6142 M6142
  - ▶ M6143 M6143
  - ▶ M6144 M6144
  - ▶ M6145 M6145
  - ▶ M6146 M6146
  - ▶ M6147 M6147
  - ▶ M6148 M6148
  - ▶ M6149 M6149
  - ▶ M6150 M6150
  - ▶ M6151 M6151
  - ▶ M6152 M6152
  - ▶ M6153 M6153
  - ▶ M6154 M6154
  - ▶ M6155 M6155
  - ▶ M6156 M6156
  - ▶ M6157 M6157
  - ▶ M6158 M6158
  - ▶ M6159 M6159
  - ▶ M6160 M6160
  - ▶ M6161 M6161
  - ▶ M6162 M6162
  - ▶ M6163 M6163
  - ▶ M6164 M6164
  - ▶ M6165 M6165
  - ▶ M6166 M6166
  - ▶ M6167 M6167
  - ▶ M6168 M6168
  - ▶ M6169 M6169
  - ▶ M6170 M6170
  - ▶ M6171 M6171
  - ▶ M6172 M6172
  - ▶ M6173 M6173
  - ▶ M6174 M6174
  - ▶ M6175 M6175
  - ▶ M6176 M6176
  - ▶ M6177 M6177
  - ▶ M6178 M6178
  - ▶ M6179 M6179
  - ▶ M6180 M6180
  - ▶ M6181 M6181
  - ▶ M6182 M6182
  - ▶ M6183 M6183
  - ▶ M6184 M6184
  - ▶ M6185 M6185
  - ▶ M6186 M6186
  - ▶ M6187 M6187
  - ▶ M6188 M6188
  - ▶ M6189 M6189
  - ▶ M6190 M6190
  - ▶ M6191 M6191
  - ▶ M6192 M6192
  - ▶ M6193 M6193
  - ▶ M6194 M6194
  - ▶ M6195 M6195
  - ▶ M6196 M6196
  - ▶ M6197 M6197
  - ▶ M6198 M6198
  - ▶ M6199 M6199
  - ▶ M6200 M6200

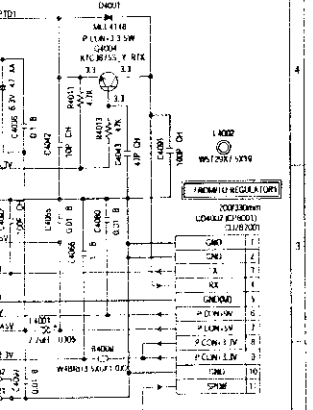


◀ DIGITAL AUDIO SIGNAL (P/B)

NOTE: THE DC VOLTAGE EACH PART WAS MEASURED WITH THE ORIGINAL TESTER DURING P/A-BACK.

NOTE: THIS SCHEMATIC DIAGRAM IS THE LATEST AT THE TIME OF PRINTING AND IS SUBJECT TO CHANGE WITHOUT NOTICE.

# MEMORY SCHEMATIC DIAGRAM (DVD PCB)

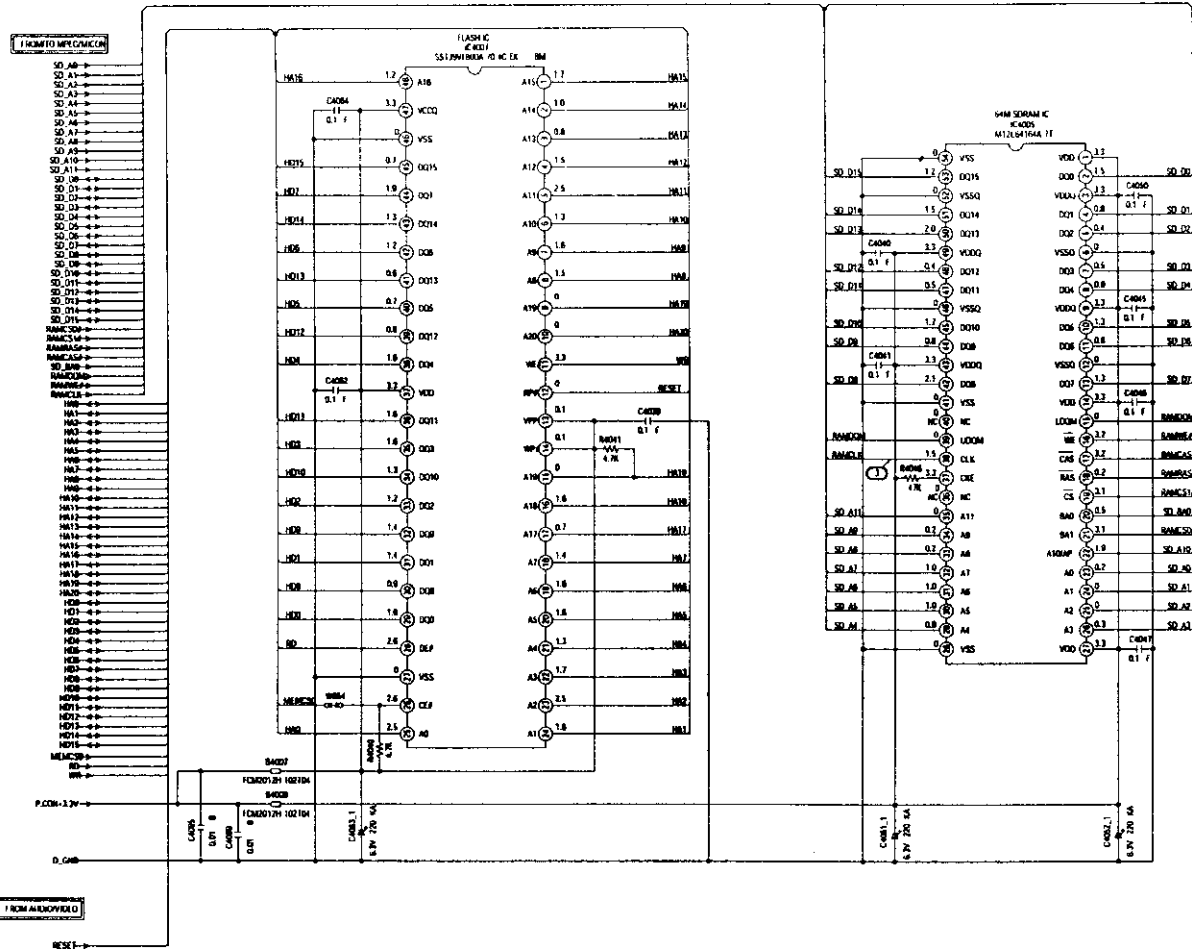


NOTE: THIS SCHEMATIC DIAGRAM IS THE LATEST AT THE TIME OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE.

NOTE: THE DC VOLTAGE EACH PART WAS MEASURED WITH THE DIGITAL TESTER DURING PLAYBACK.

PCB130  
VME119


# RF AMP/DSP SCHEMATIC DIAGRAM (DVD PCB)

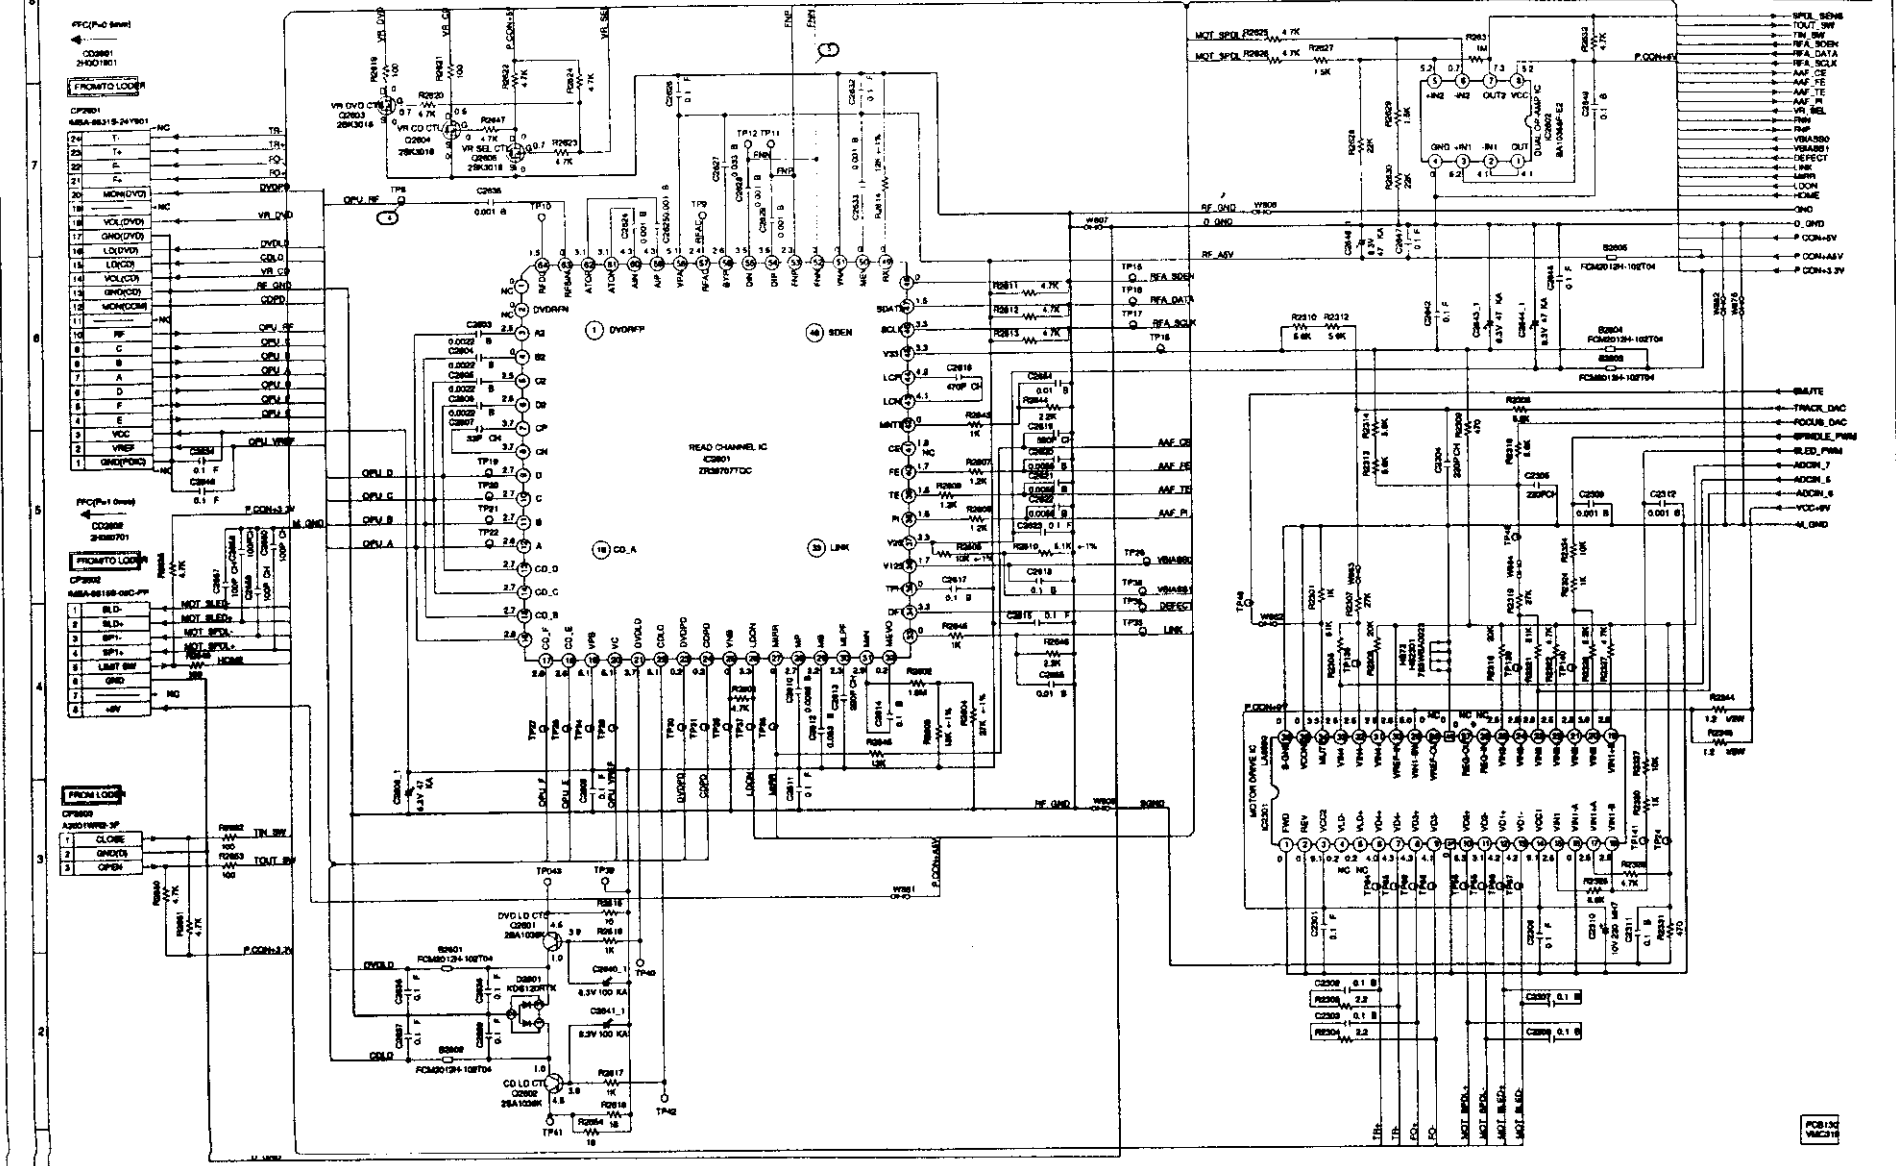

NOTE: THIS SCHEMATIC DIAGRAM IS THE LATEST AT THE TIME OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE.

NOTE: THE DC VOLTAGE EACH PART WAS MEASURED WITH THE DIGITAL TESTER DURING PLAYBACK.

# AUDIO/VIDEO SCHEMATIC DIAGRAM (DVD PCB)

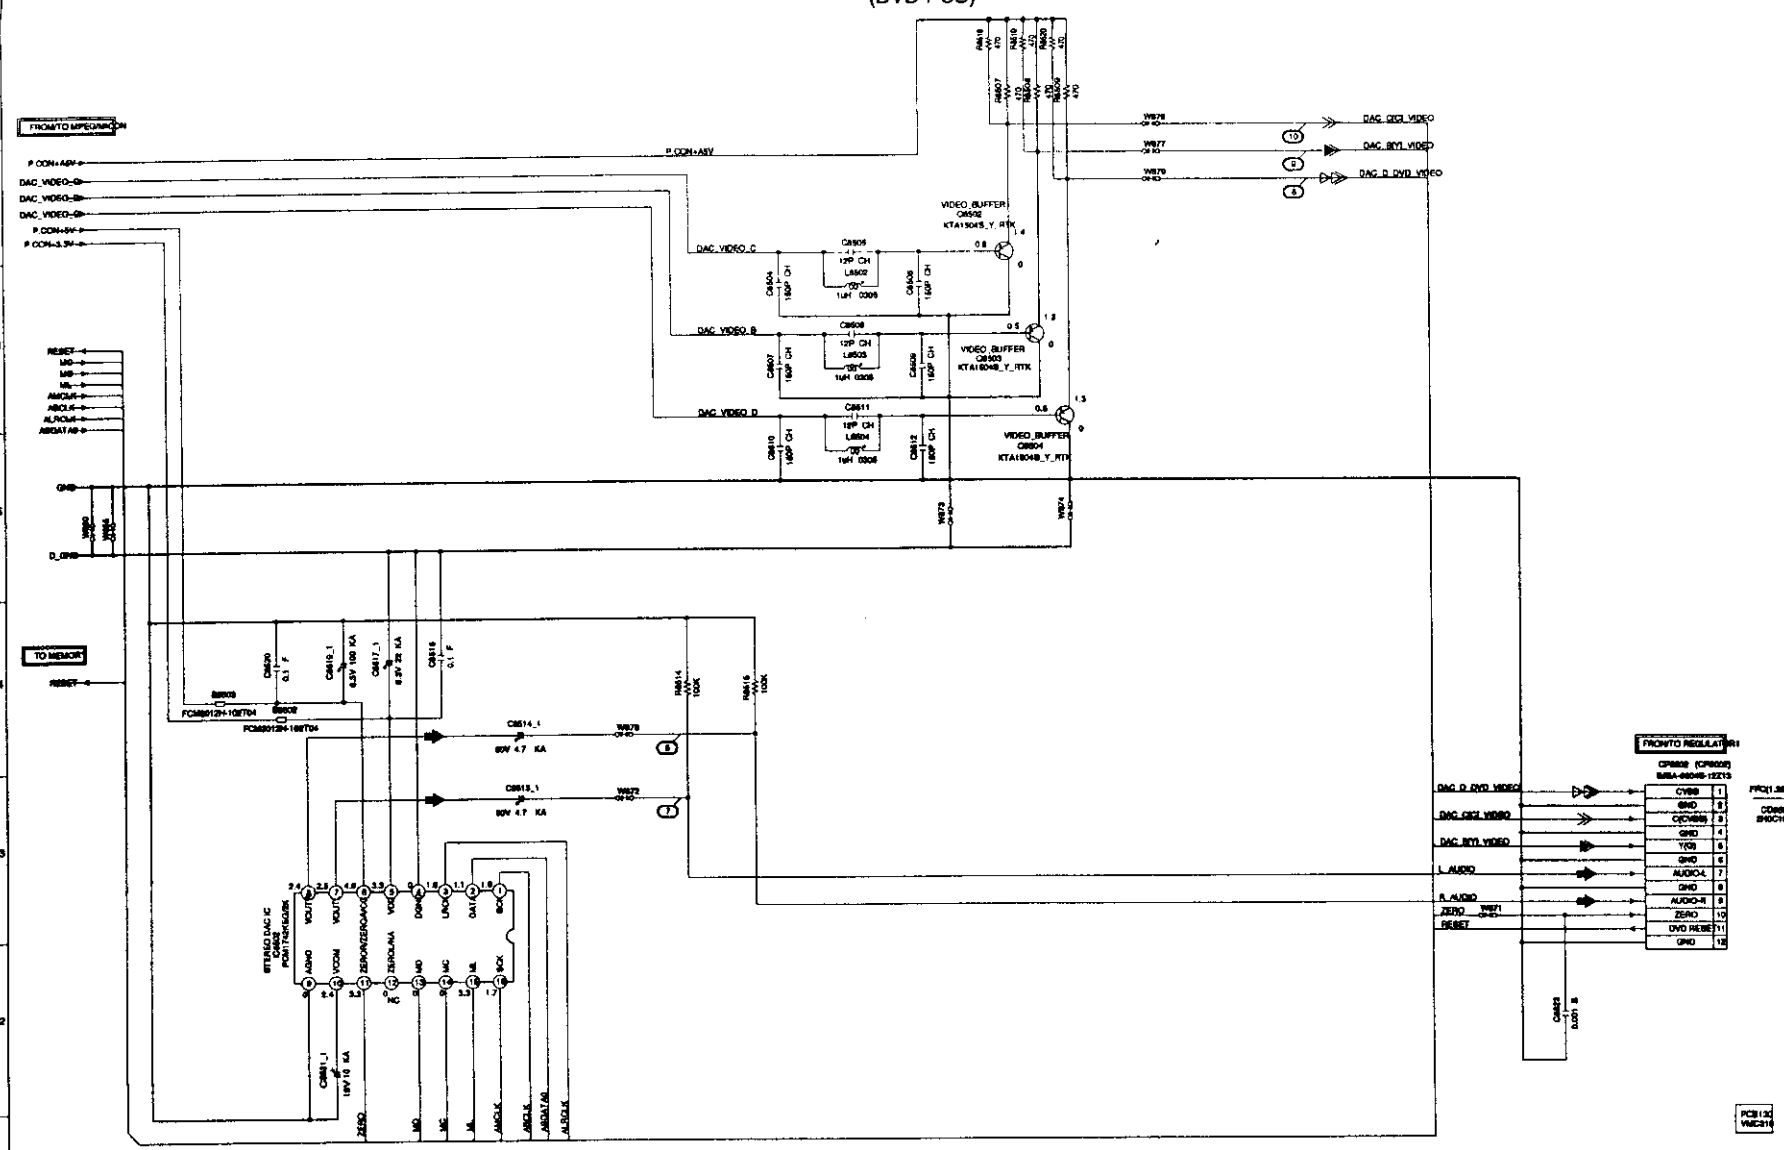


◀ AUDIO SIGNAL (PB)  
 ◀◀ PLAYBACK VIDEO SIGNAL  
 ◀◀◀ R SIGNAL COMPONENT SIGNAL (U)  
 ◀◀◀◀ G SIGNAL COMPONENT SIGNAL (V)

NOTE: THE DC VOLTAGE EACH PART WAS MEASURED WITH THE DIGITAL TESTER DURING PLAYBACK.

NOTE: THIS SCHEMATIC DIAGRAM IS THE LATEST AT THE TIME OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE.

# REGULATOR1 SCHEMATIC DIAGRAM (AV PCB)

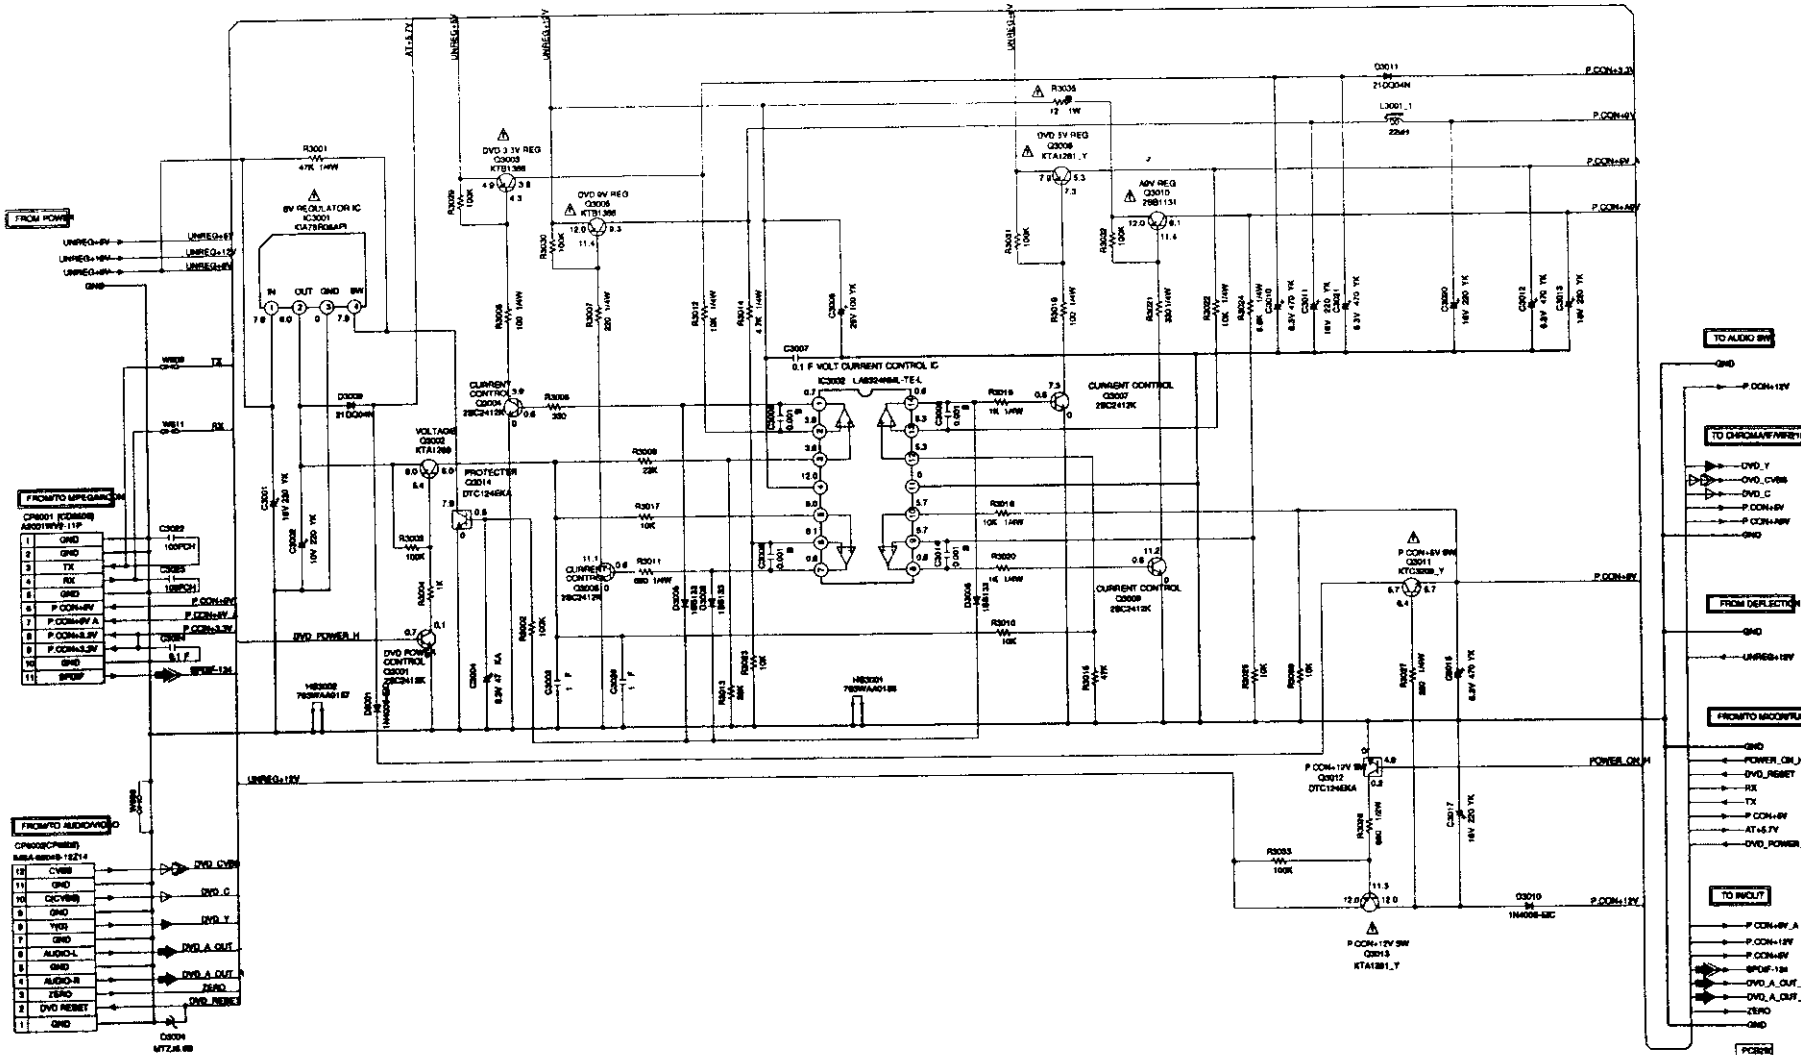

NOTE THE DC VOLTAGE AT EACH PART WAS MEASURED WITH THE DIGITAL METER WHEN THE COLOR BROADCAST WAS RECEIVED IN GOOD CONDITION AND PICTURE IS NORMAL.

NOTES: THIS SCHEMATIC DIAGRAM IS THE LATEST AT THE TIME OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE.


**CAUTION** THESE PARTS MARKED WITH THIS SYMBOL ARE CRITICAL FOR SAFETY. USE ONLY THOSE DESCRIBED IN PARTS LIST ONLY.

**ATTENTION** CES PIÈCES RÉPARÉES PAR UN MÉTANT DANGEREUSES À UN POINT DE VUE SÉCURITÉ. UTILISER SEULEMENT LES CELLES DÉCRITES DANS LA NOMENCLATURE DES PIÈCES.

CAUTION: DIGITAL TRANSISTOR

- ◀ PLAYBACK LUMINANCE SIGNAL
- ◀ PLAYBACK COLOR SIGNAL
- ◀ AUDIO SIGNAL (PB)
- ◀ DIGITAL AUDIO SIGNAL (PB)
- ◀ PLAYBACK VIDEO SIGNAL

# MICON/TUNER SCHEMATIC DIAGRAM (AV PCB)

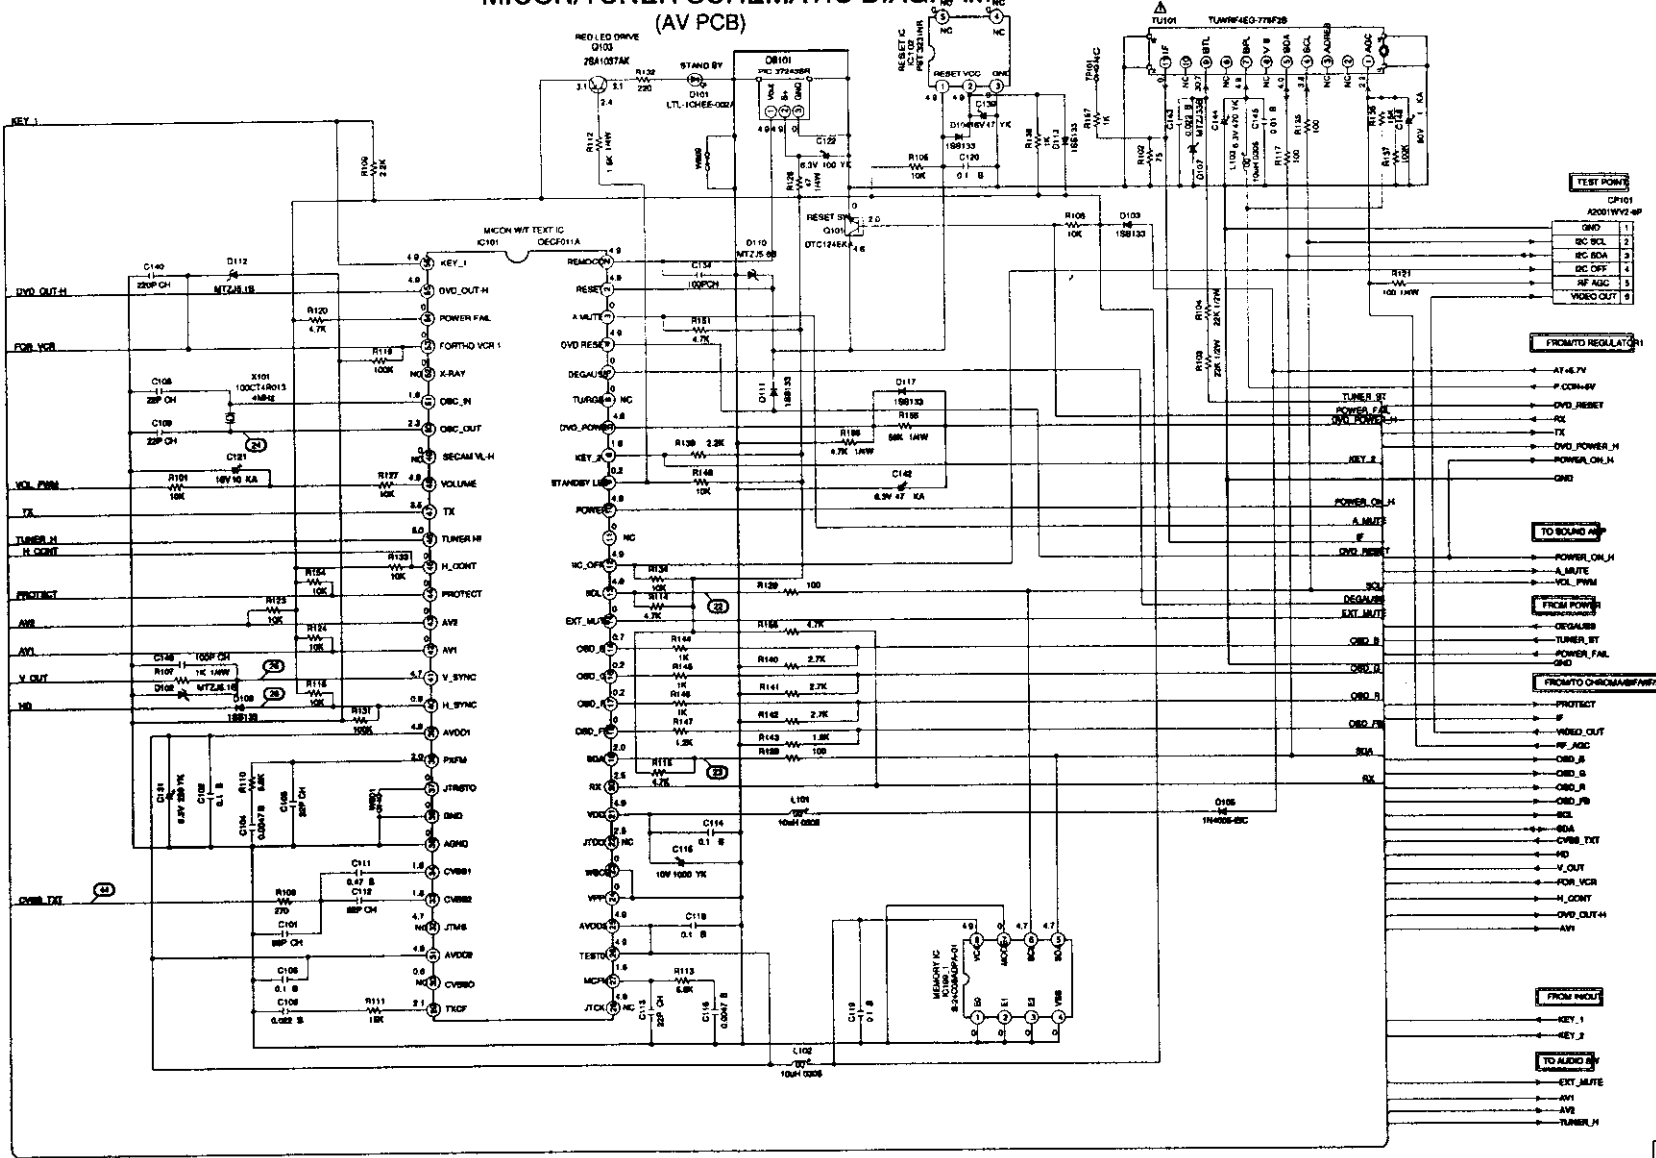


**CAUTION** THESE PARTS MARKED ARE CRITICAL FOR SAFETY. USE ONES DESCRIBED IN PARTS LIST ONLY.

**ATTENTION** LES PIÈCES REPARÉES PARMI Celles-ci sont dangereuses au point de vue de la sécurité. N'utiliser que celles décrites dans la nomenclature des pièces.

NOTE: THE DC VOLTAGE AT EACH PART WAS MEASURED WITH THE DIGITAL TESTER WHEN THE COLOR BROADCAST WAS RECEIVED IN GOOD CONDITION AND PICTURE IS NORMAL.

NOTE: THIS SCHEMATIC DIAGRAM IS THE LATEST AT THE TIME OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE.


**CAUTION: DIGITAL TRANSISTOR**





# CHROMA/SIF/VIF/21PIN SCHEMATIC DIAGRAM


(AV PCB)

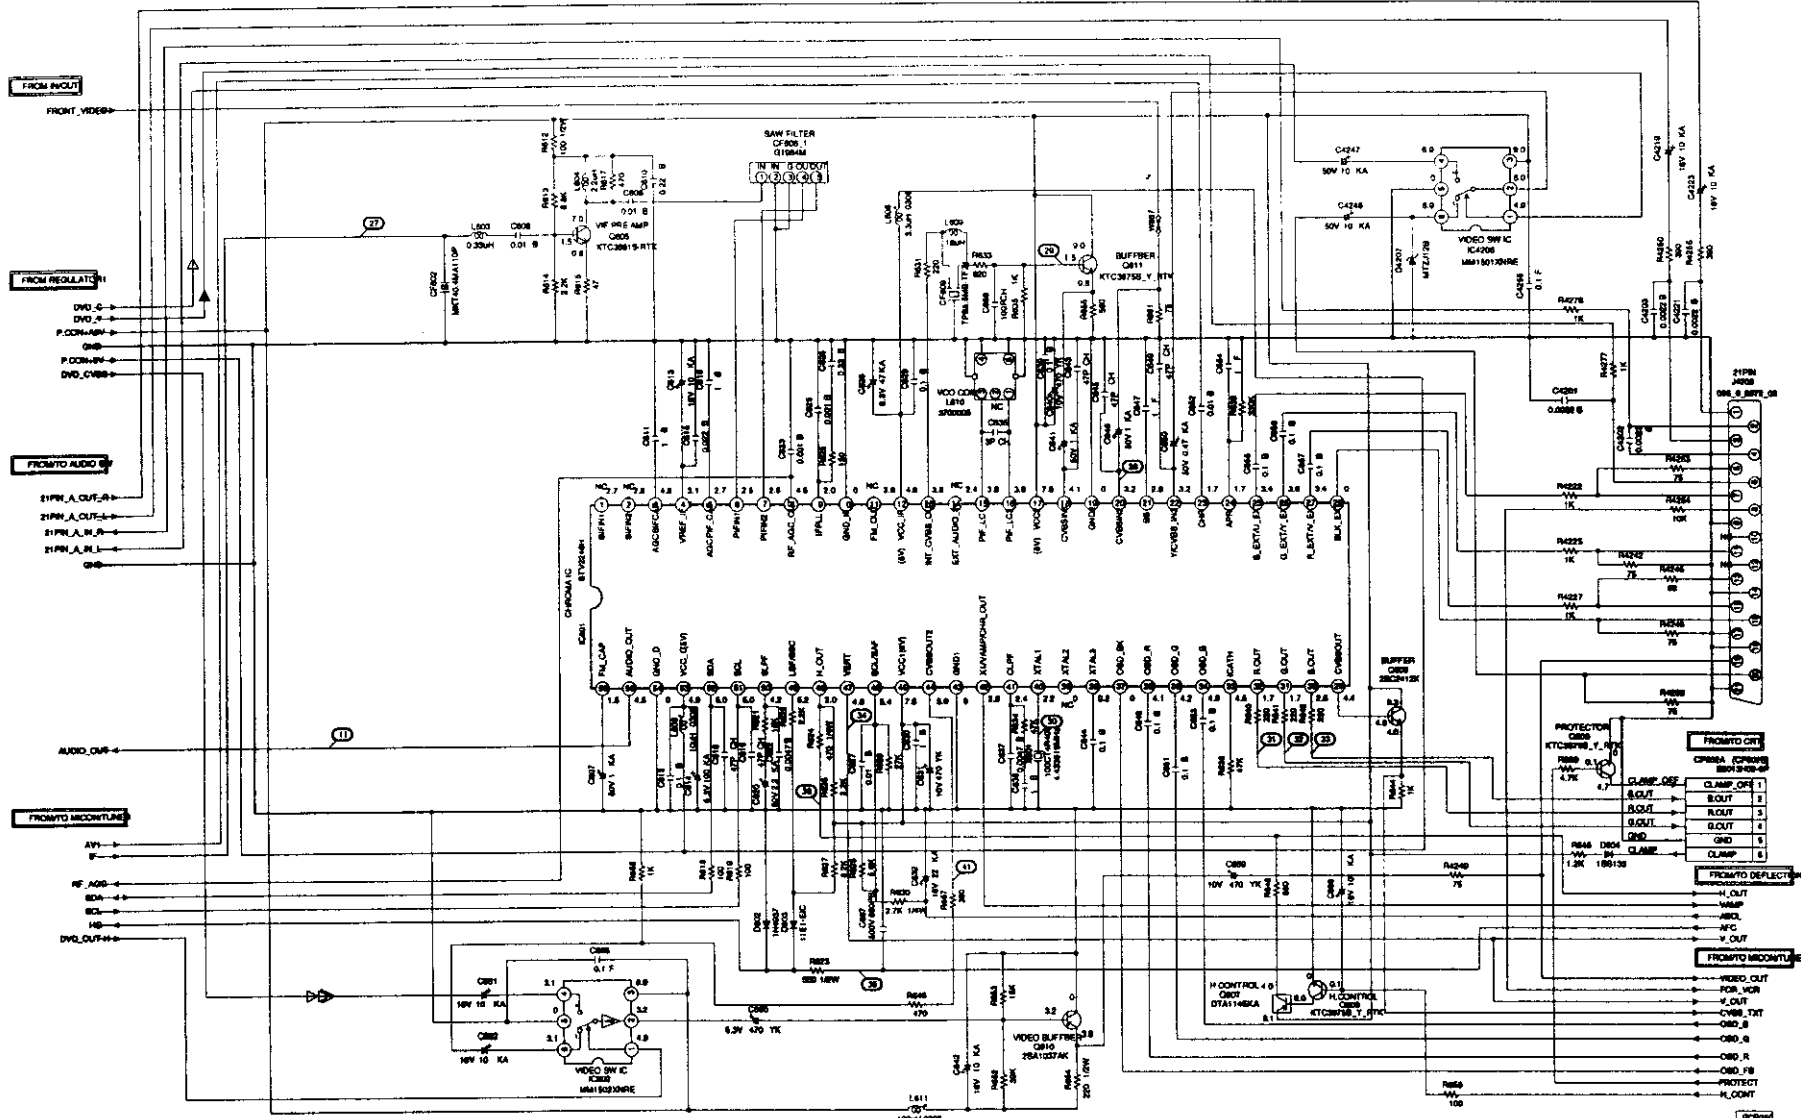

NOTE: THIS SCHEMATIC DIAGRAM IS THE LATEST AT THE TIME OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE

NOTE: THE DC VOLTAGE AT EACH PART WAS MEASURED WITH THE DIGITAL TESTER WHEN THE COLOR BROADCAST WAS RECEIVED IN GOOD CONDITION AND PICTURE IS NORMAL


CAUTION: DIGITAL TRANSISTOR



- ◀ PLAYBACK LUMINANCE SIGNAL
- ◁ PLAYBACK COLOR SIGNAL
- ◁◁ PLAYBACK VIDEO SIGNAL

PCBREV TRACK2

# SOUND AMP SCHEMATIC DIAGRAM (AV PCB)

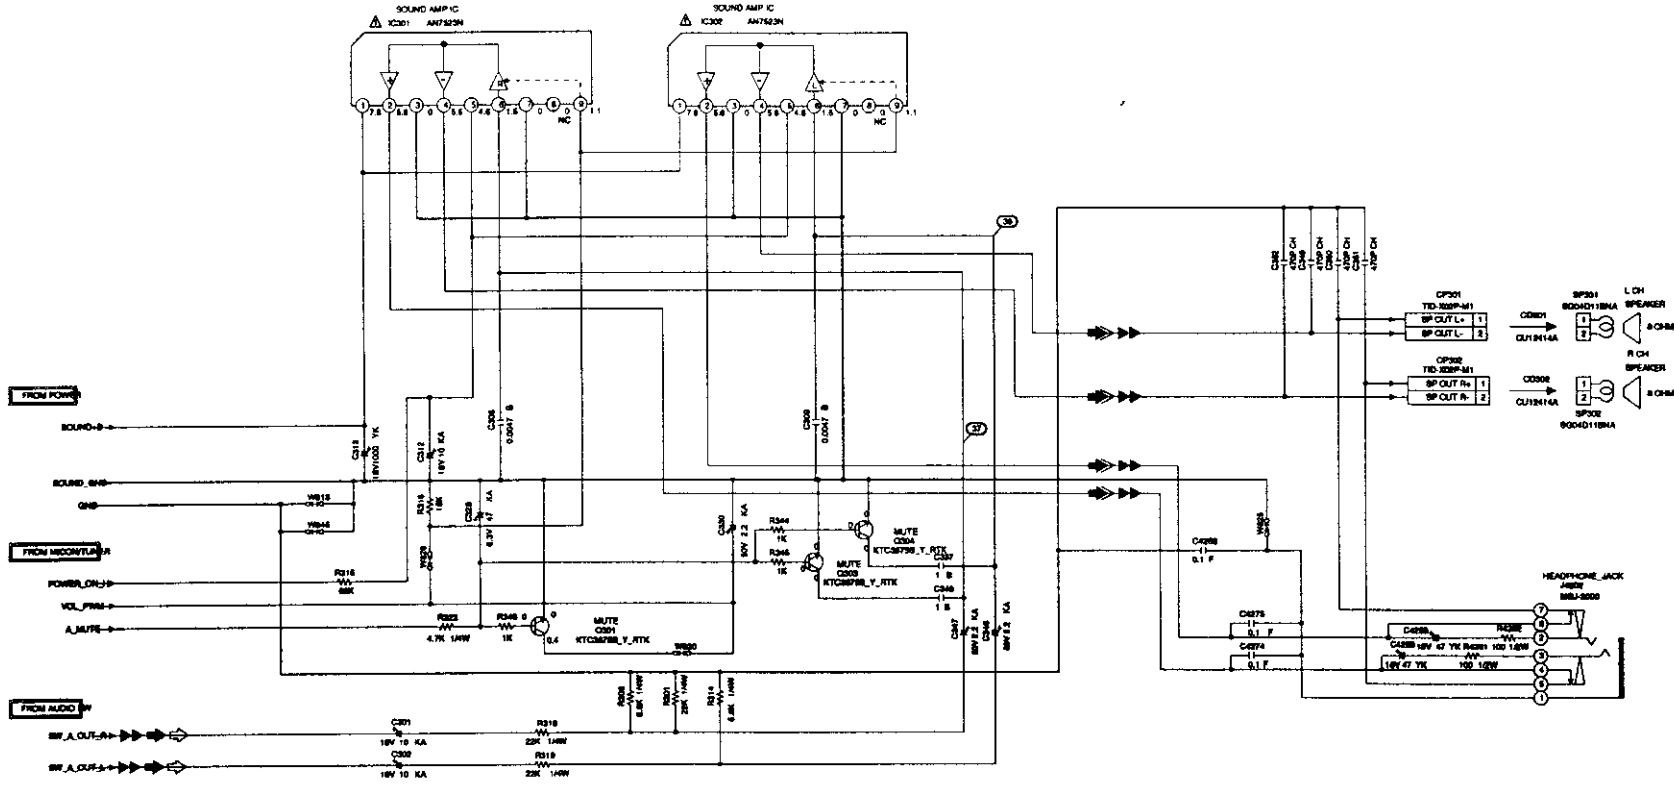

NOTE: THE DC VOLTAGE AT EACH PART WAS MEASURED WITH THE DIGITAL TESTER WHEN THE COLOR BROADCAST WAS RECEIVED IN GOOD CONDITION AND THE TUBE IS NORMAL.

NOTE: THIS SCHEMATIC DIAGRAM IS THE LATEST AT THE TIME OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE.


**CAUTION:** THESE PARTS MARKED WITH THIS SYMBOL ARE CRITICAL FOR SAFETY. USE ONLY THOSE DESCRIBED IN PARTS LIST ONLY.

**ATTENTION:** PIÈCES REPARER MARQUÉES AVEC CE SYMBOLE SONT CRITIQUES EN CE QUI CONCERNE LA SÉCURITÉ. UTILISER SEULEMENT LES PIÈCES DÉCRITES DANS LA NOMÉNCLATURE DES PIÈCES.

- ◀ DIGITAL AUDIO SIGNAL (PB)
- ◀ AUDIO SIGNAL
- ◀ AUDIO SIGNAL (PB)
- ◀ TUNER AUDIO SIGNAL

POSER  
TICER


# IN/OUT SCHEMATIC DIAGRAM (AV PCB)

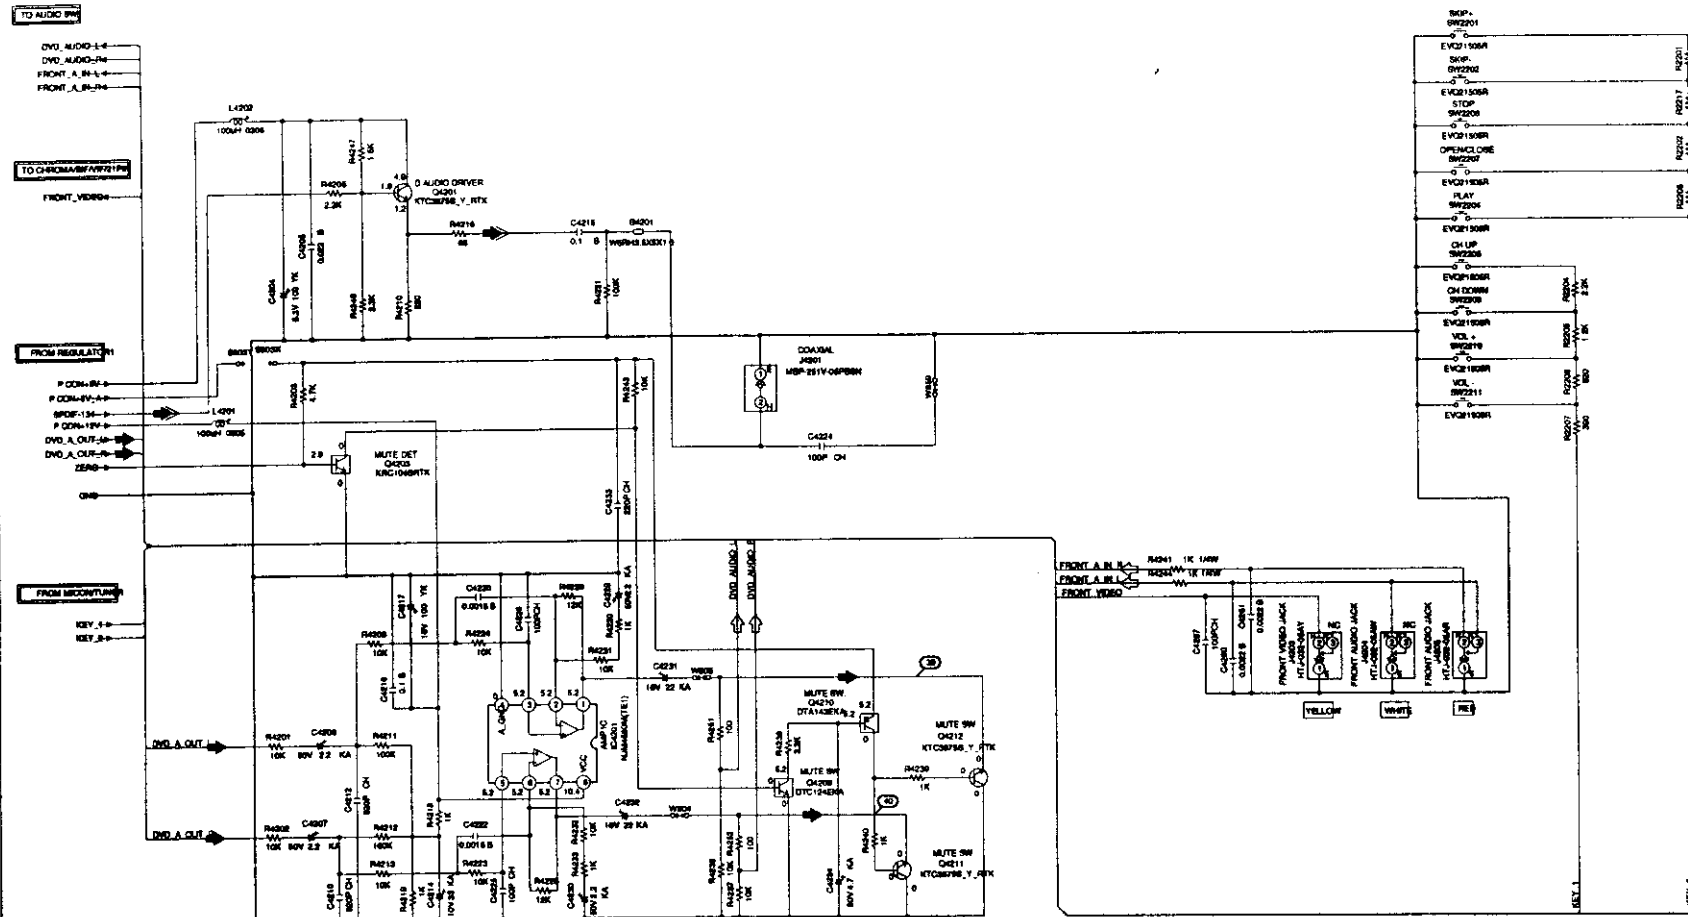

CAUTION: DIGITAL TRANSISTOR



CAUTION: DIGITAL TRANSISTOR




NOTE: THIS SCHEMATIC DIAGRAM IS THE LATEST AT THE TIME OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE

NOTE: THE DC VOLTAGE AT EACH PART WAS MEASURED WITH THE DIGITAL TESTER WHEN THE COLOR BROADCAST WAS RECEIVED IN GOOD CONDITION AND PICTURE IS NORMAL

- ◁ AUDIO SIGNAL
- ◄ AUDIO SIGNAL (PB)
- ◄ DIGITAL AUDIO SIGNAL (PB)

PC926  
TMC67

# AUDIO SW SCHEMATIC DIAGRAM (AV PCB)

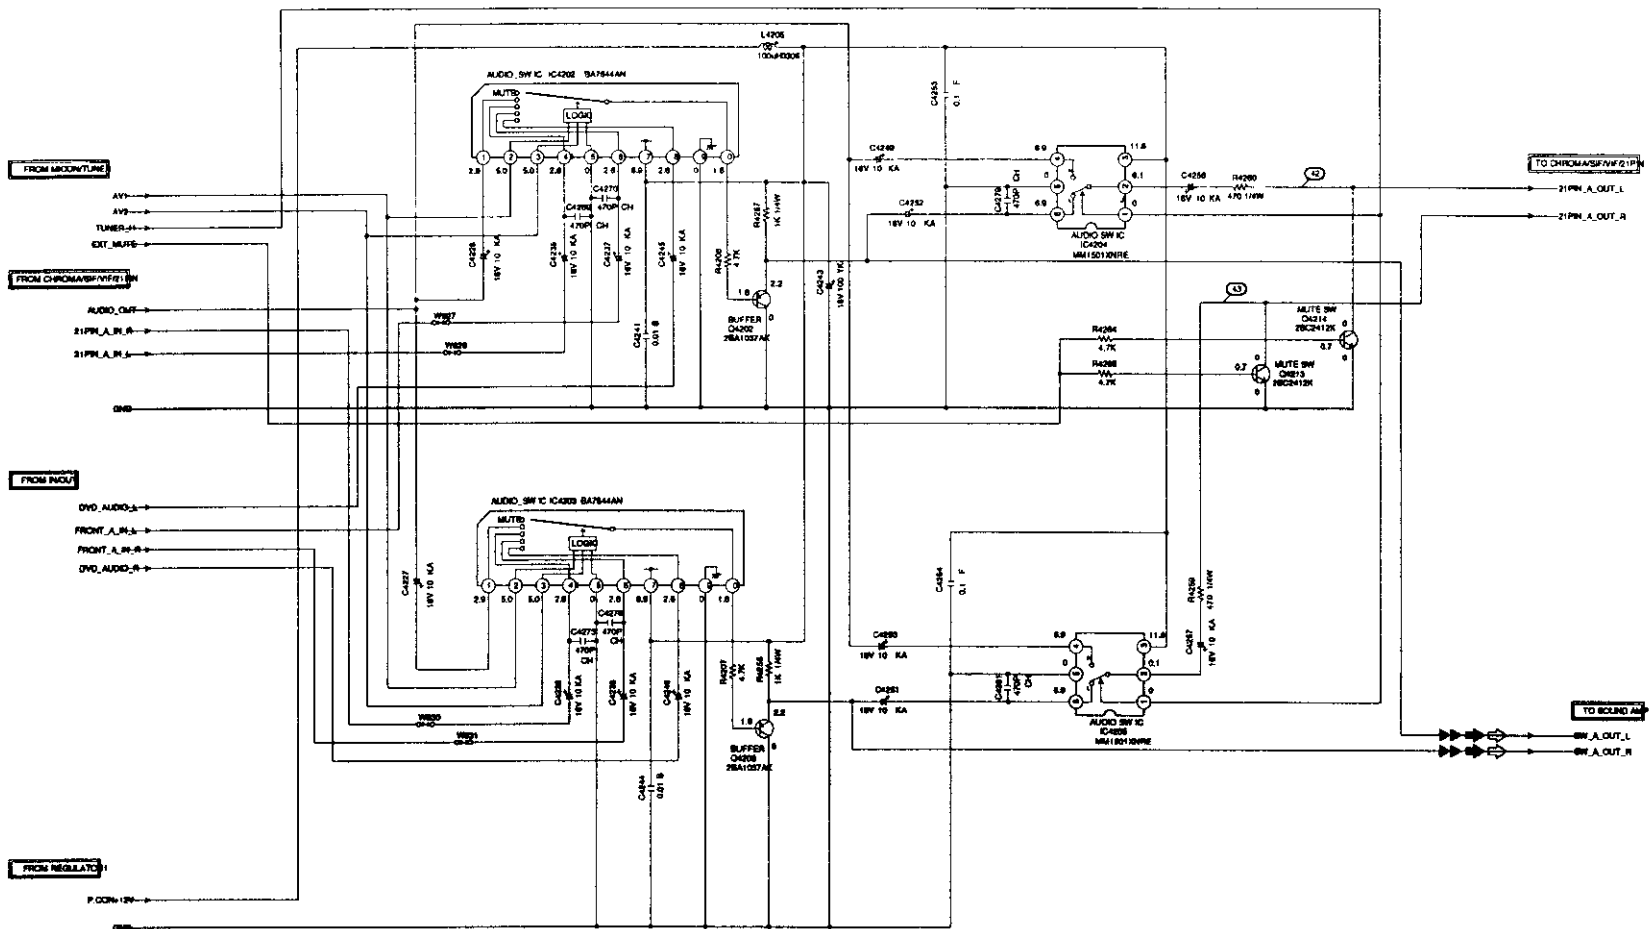

FROM FRONTLINE

FROM CHROMA/SF/FF/BI

FROM INCU

FROM REGULATOR

TO CHROMA/SF/FF/BI

31PM\_A\_OUT\_L

31PM\_A\_OUT\_R

TO SOUND AM

SW\_A\_OUT\_L

SW\_A\_OUT\_R


NOTE: THE DC VOLTAGE AT EACH PART WAS MEASURED WITH THE DIGITAL TESTER WHEN THE COLOR BROADCAST WAS RECEIVED IN GOOD CONDITION AND PICTURE IS NORMAL.

NOTE: THIS SCHEMATIC DIAGRAM IS THE LATEST AT THE TIME OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE.

- ◀ AUDIO SIGNAL (PB)
- ◇ AUDIO SIGNAL
- ▶ TUNER AUDIO SIGNAL

PCB206  
TMC27

# DEFLECTION SCHEMATIC DIAGRAM (AV PCB)

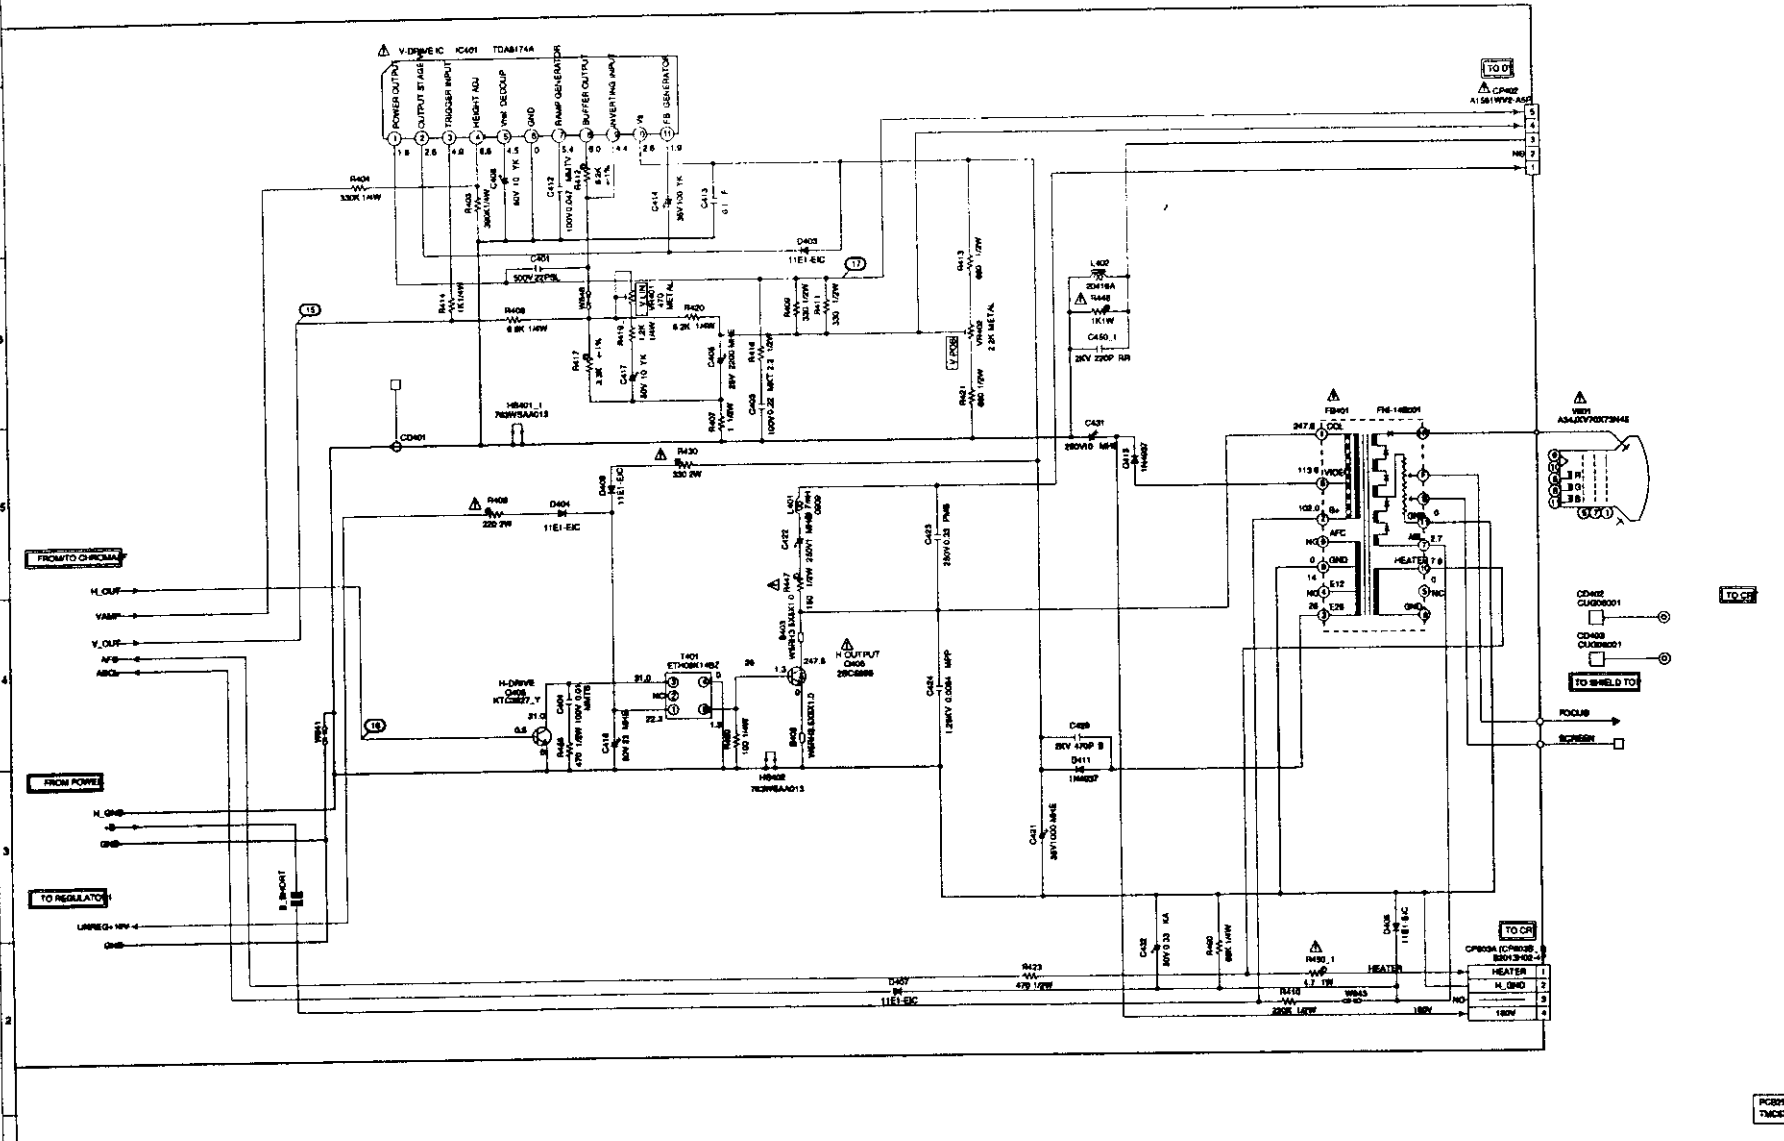

NOT THIS SCHEMATIC DIAGRAM IS THE LATEST AT THE TIME OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE


THE DC VOLTAGE AT EACH PART WAS MEASURED WITH THE DIGITAL TESTER WHEN THE COLOR BROADCAST WAS RECEIVED IN GOOD CONDITION AND PICTURE IS NORMAL

NOT THE RESISTOR MARKED F IS FUSE RESISTOR. THE ALUMI ELECTROLYTIC CAPACITOR MARKED NE IS NON POLAR ONE.

**CAUTION** THESE PARTS MARKED ARE CRITICAL FOR SAFETY USE ONES DESCRIBED IN PARTS LIST ONLY

**ATTENTION** LES PIÈCES REPARÉES PARMIANT DANGEREUSES AU POINT DE VUE SECURITE UTILISER QUE CELLES DÉCRITES DANS LA NOMENCLATURE DES PIÈCES

# CRT SCHEMATIC DIAGRAM (CRT PCB)

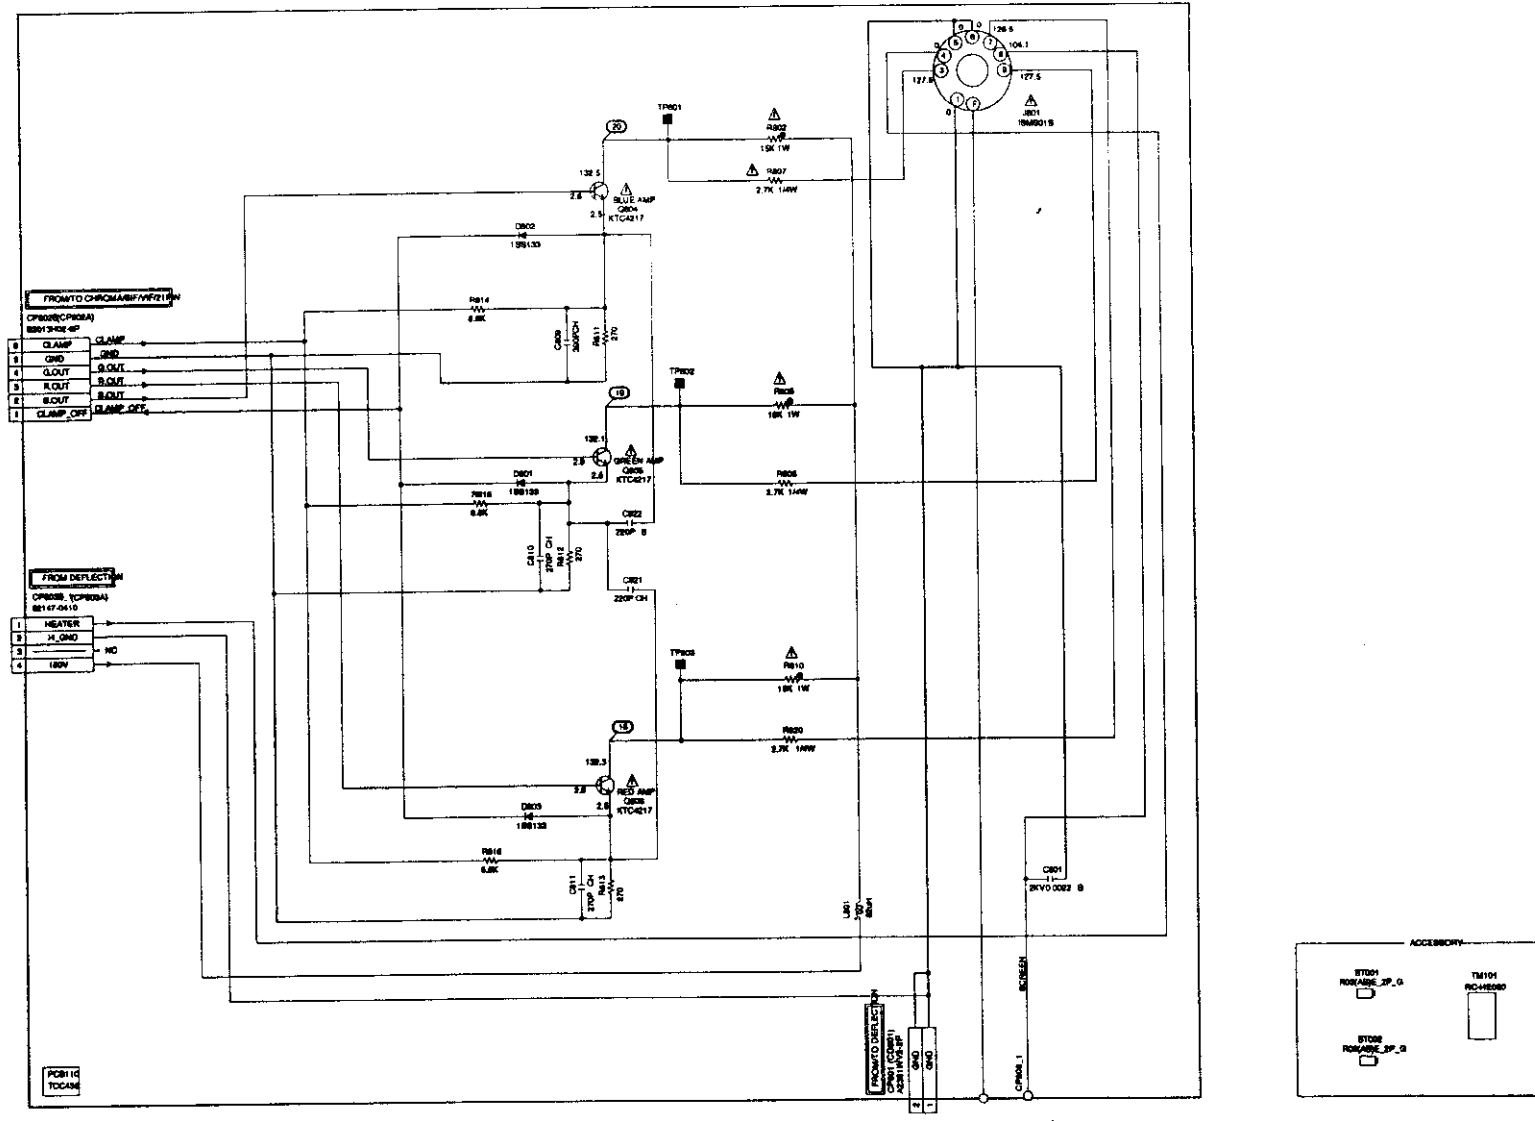

**FROM TO CHARGE/AMP/WFZ11**  
 CP8002(CP800A)  
 8B17242-47

3	CLAMP	CLAMP
4	CLAMP	CLAMP
5	FL OUT	FL OUT
6	FL OUT	FL OUT
7	FL OUT	FL OUT
8	CLAMP OFF	CLAMP OFF


**FROM DEFLECTION**  
 CP8003, CP8003A  
 8B147-0610

1	HEATER	HE
2	H. GND	HG
3		
4	180V	

NOTE THE DC VOLTAGE AT EACH PART WAS MEASURED WITH THE DIGITAL TESTER WHEN THE COLOR BROADCAST WAS MEASURED IN GOOD CONDITION AND PICTURE IS NORMAL.


NOTE THIS SCHEMATIC DIAGRAM IS THE LATEST AT THE TIME OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE.

**CAUTION** THESE PARTS MARKED ARE CRITICAL FOR SAFETY. USE ONLY THOSE DESCRIBED IN PARTS LIST ONLY.

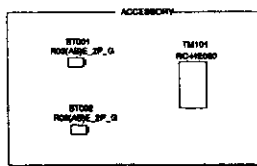

**ATTENTION** LES PIÈCES RÉPARÉES PAR UN TANT DANGEREUSES AU POINT DE VUE SÉCURITÉ. UTILISER QUE CELLES DÉCRITES DANS LA NOMÉCLATURE DES PIÈCES.

# POWER SCHEMATIC DIAGRAM (AV PCB)

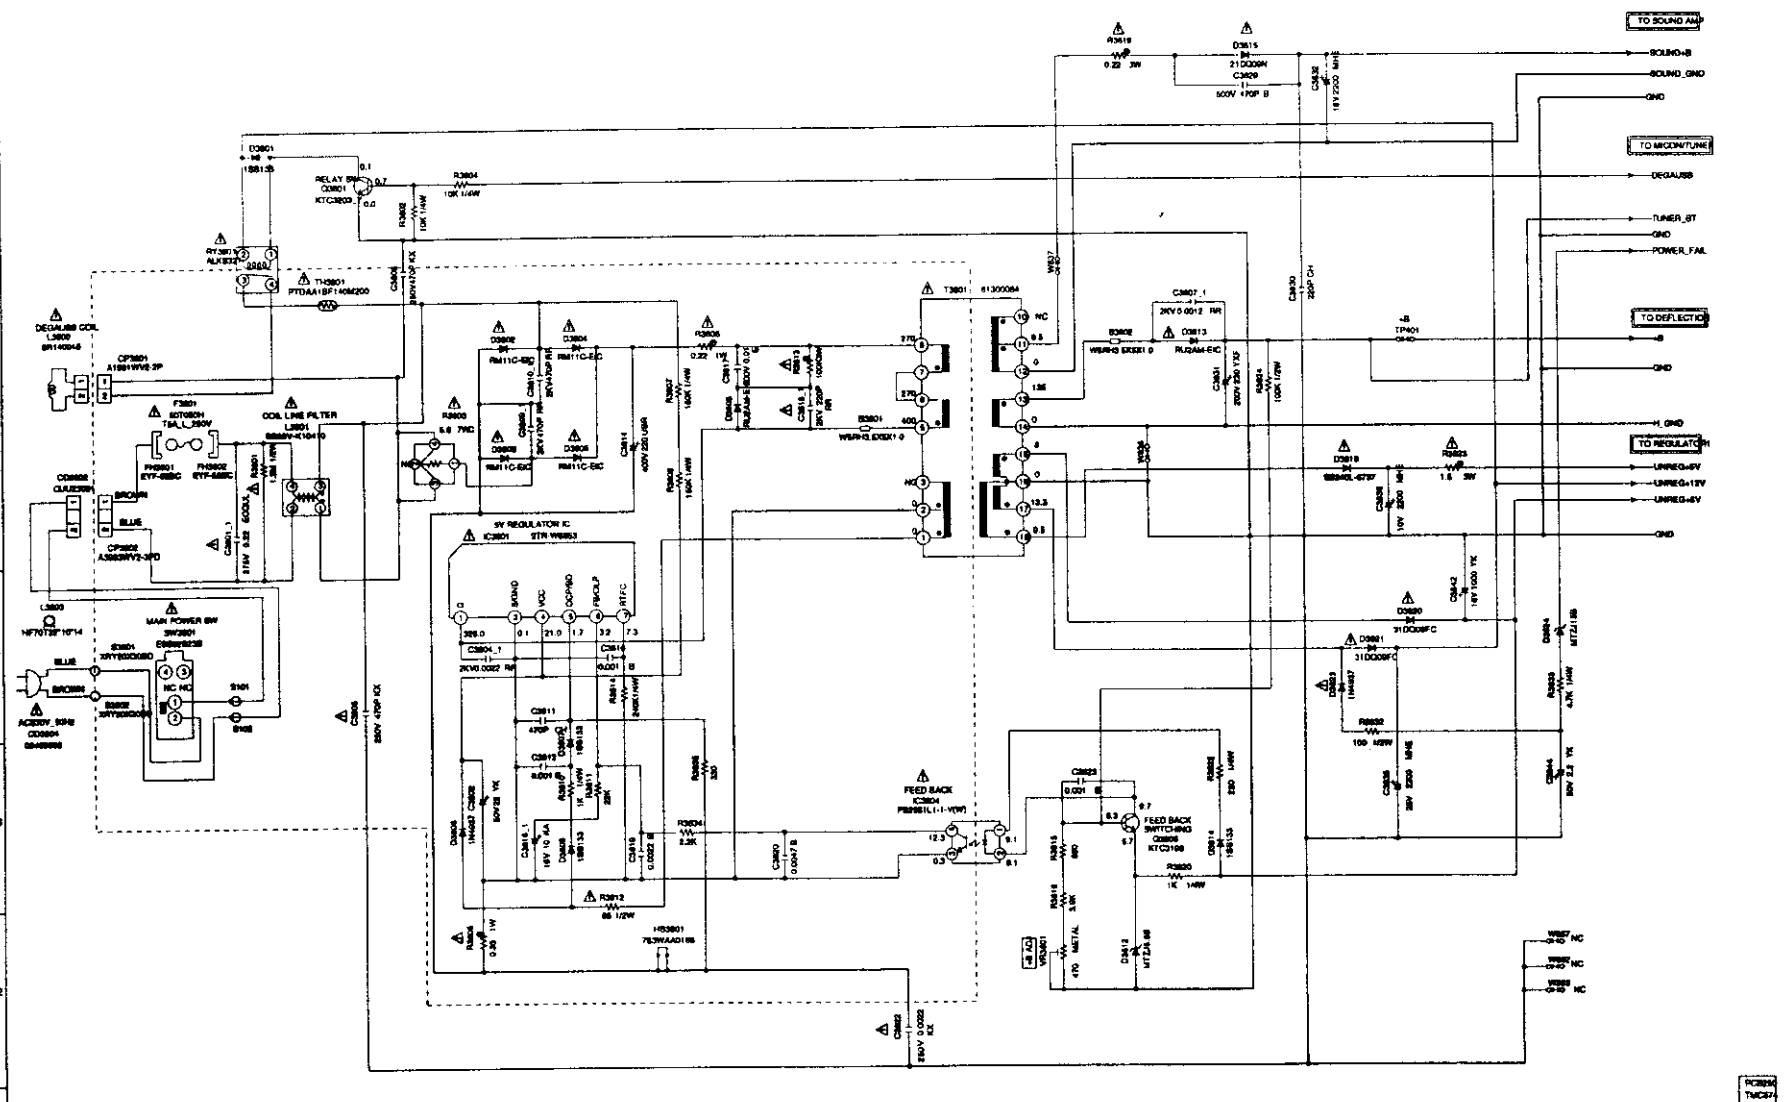

**ATTENTION:** REPIÈCES RÉPARÉES PAR UN  
D'UN TECHNICIEN QUALIFIÉ  
UTILISER QUE CELLES DÉCRITES  
DANS LA NOMENCLATURE DES PIÈCES

**CAUTION:** THESE PARTS MARKED ARE  
CRITICAL FOR SAFETY. USE ONES  
DESCRIBED IN PARTS LIST ONLY


NOTE: THIS SCHEMATIC DIAGRAM IS THE LATEST AT THE TIME  
OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE

NOTE: THE DC VOLTAGE AT EACH PART WAS MEASURED  
WITH THE DIGITAL TESTER WHEN THE COLOR BROADCAST  
WAS RECEIVED IN GOOD CONDITION AND PICTURE IS NORMAL

NOTE: THE RESISTOR MARKED F IS FUSE RESISTOR.  
THE ALUMI ELECTROLYTIC CAPACITOR MARKED NP  
IS NON POLAR ONE.

PCB3801  
TUC24

# INTERCONNECTION DIAGRAM

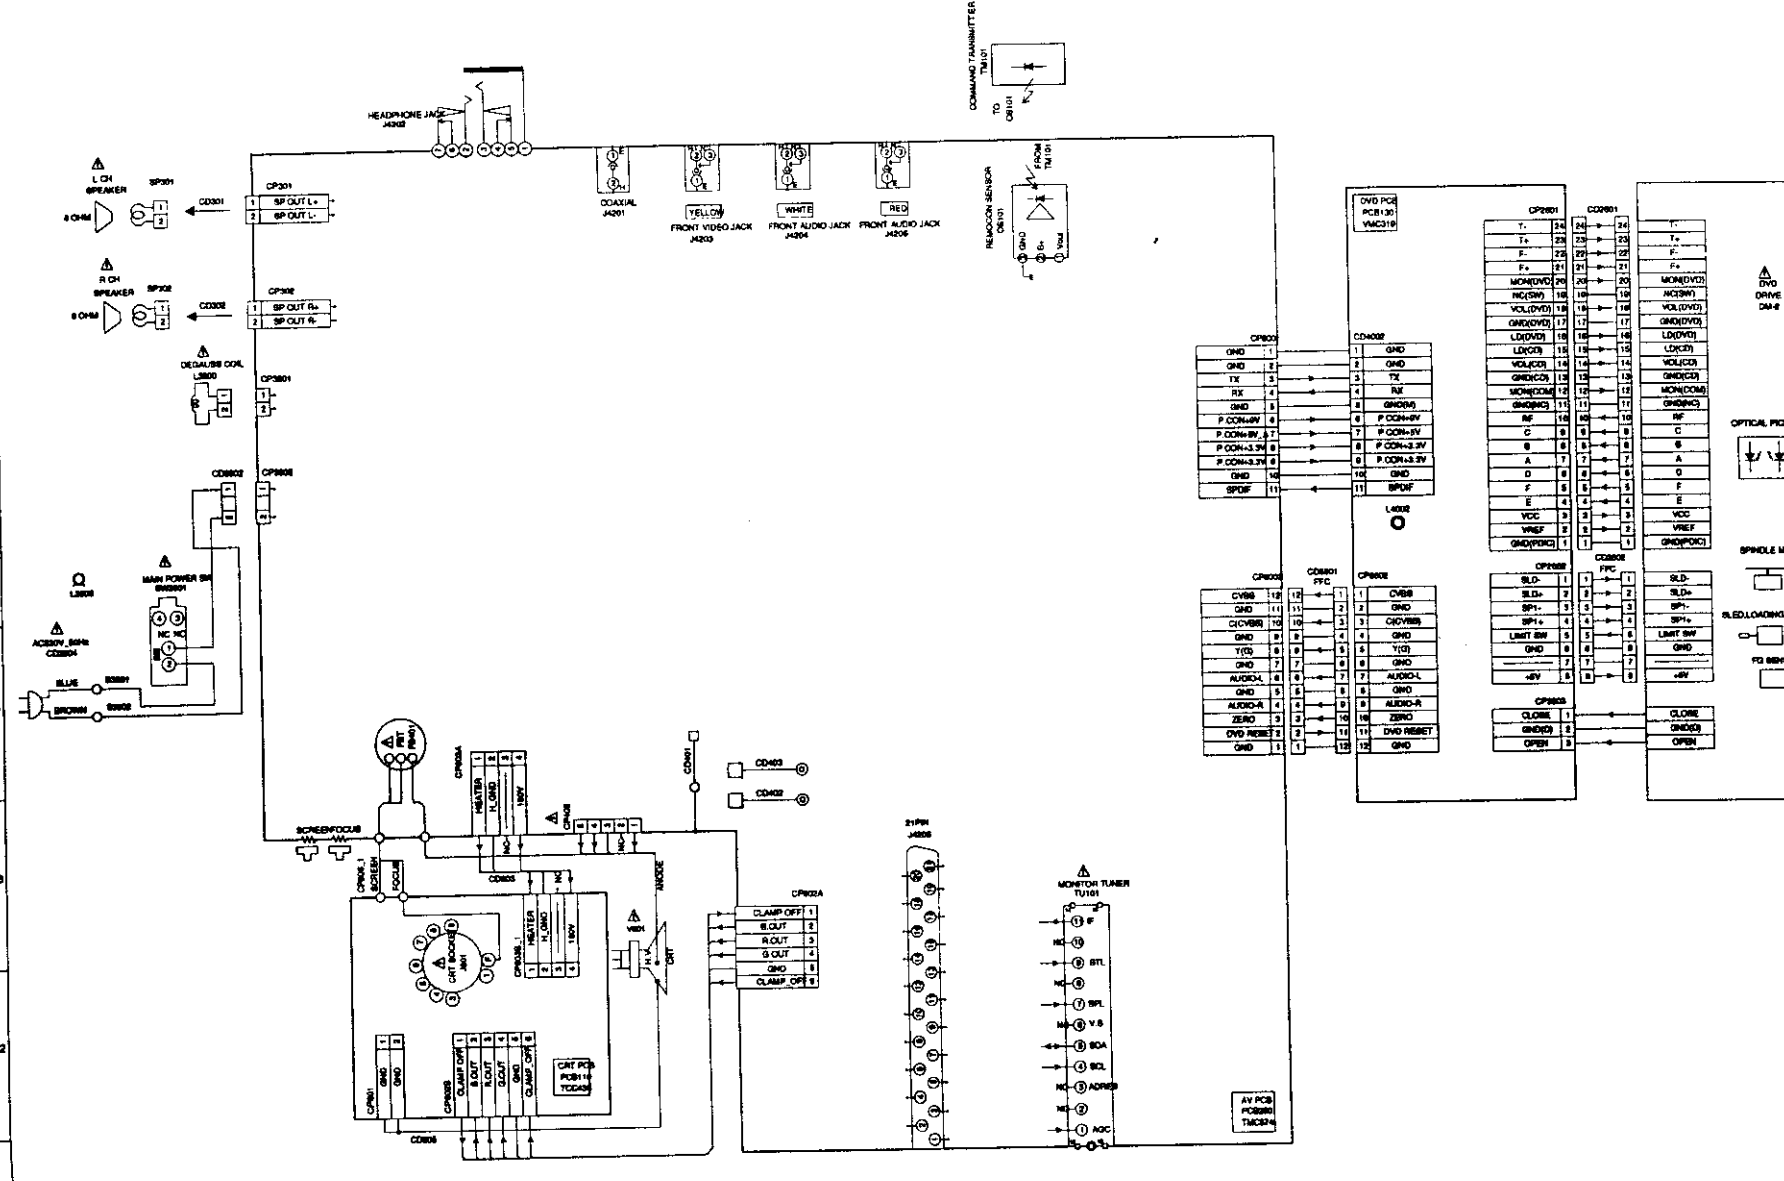

NOTES: THIS INTERCONNECTION DIAGRAM IS THE LATEST REVISION OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE


ATTENTION: NE PAS REPARER PARTS DÉTACHÉES DANGEREUSES AN POINT DE VUE SECURITE UTILISER QUE CELLES DECRIES DANS LA NOMENCLATURE DES BIECES

CAUTION: DO NOT REPAIR THESE PARTS MARKED AS CRITICAL FOR SAFETY. USE ONES DESCRIBED IN PARTS LIST ONLY




# WAVEFORMS




## MPEG/MICON

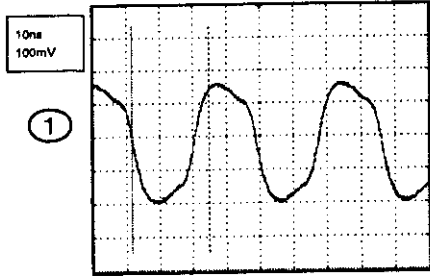


## AUDIO/VIDEO

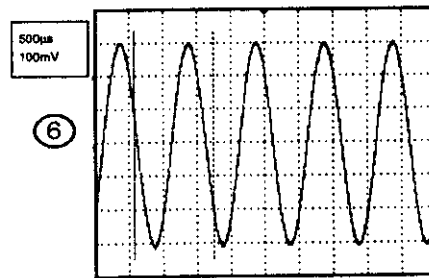




## CHROMA/SIF/VIF/21PIN

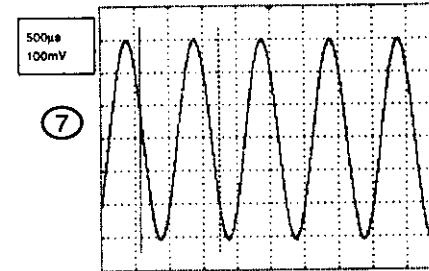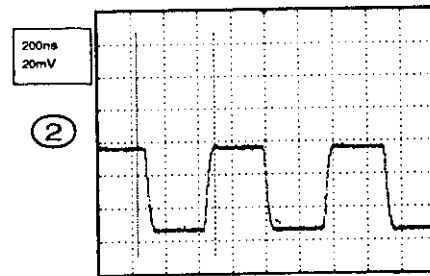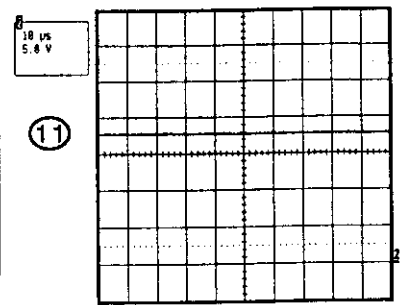





## DEFLECTION

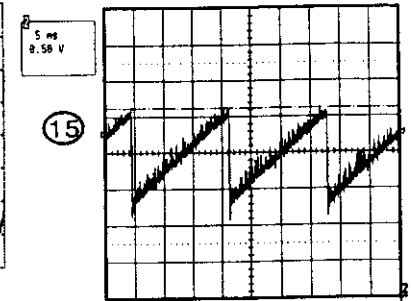


## MEMORY

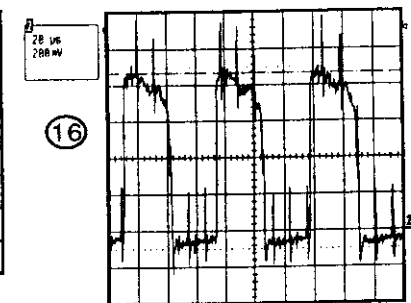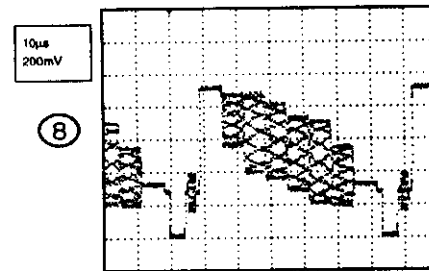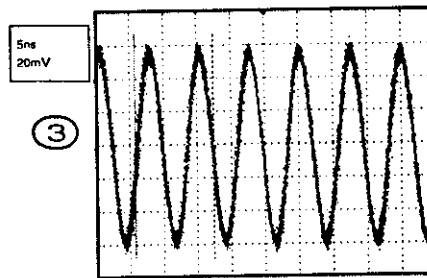

## RF AMP/DSP



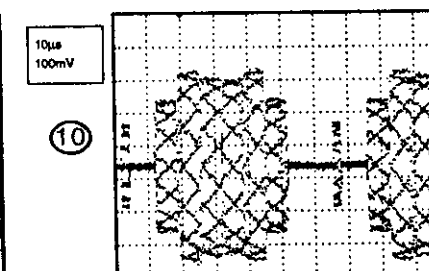
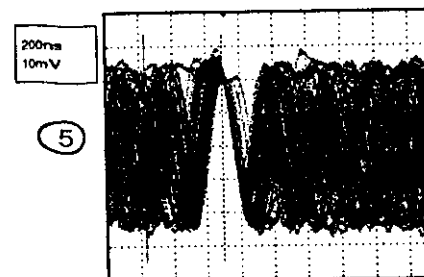
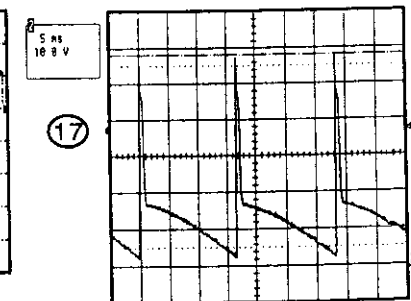
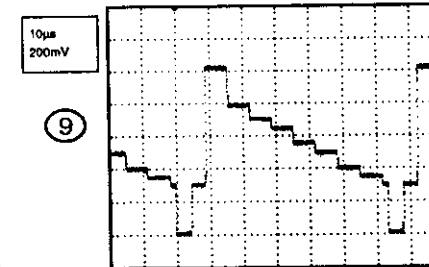


## CRT

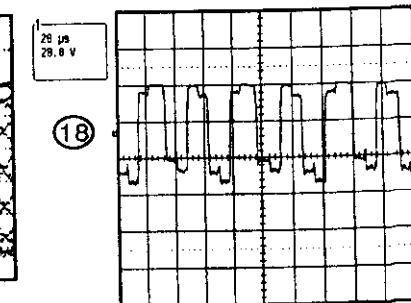


NOTE: The following waveforms were measured at the point of the corresponding balloon number in the schematic diagram.









# WAVEFORMS

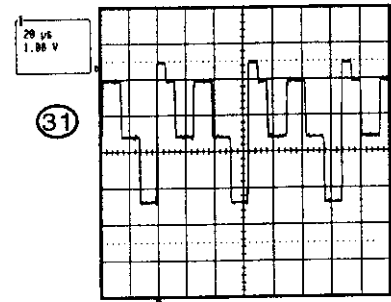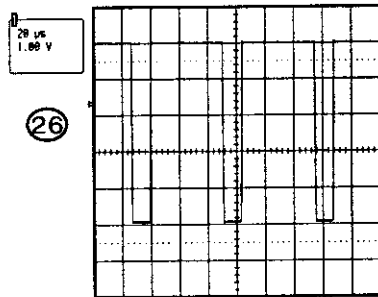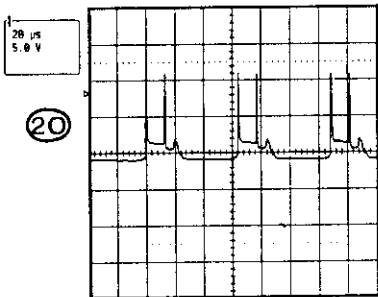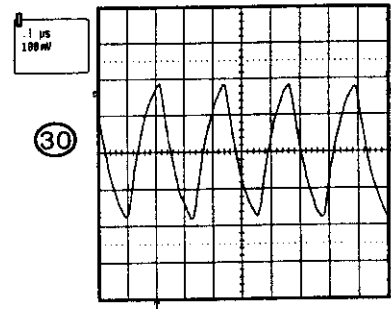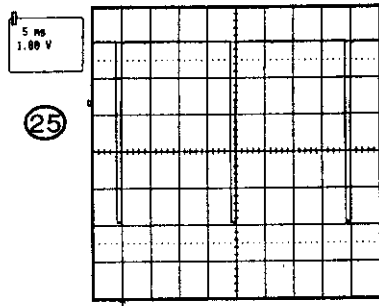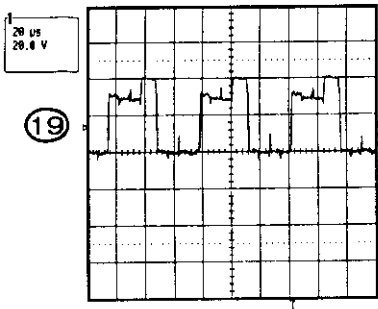

## MICON/TUNER




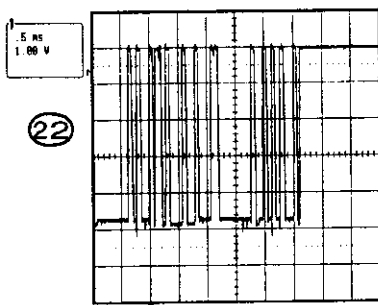


## CHROMA/SIF/VIF/21PIN

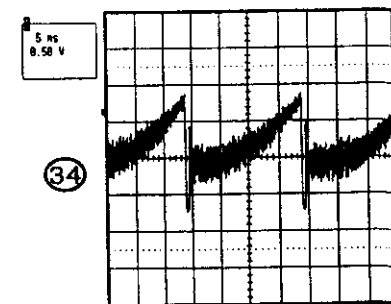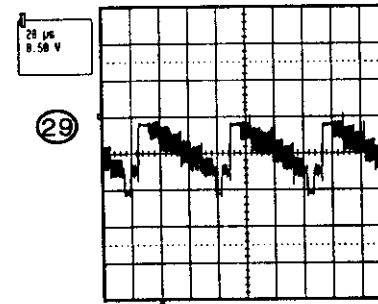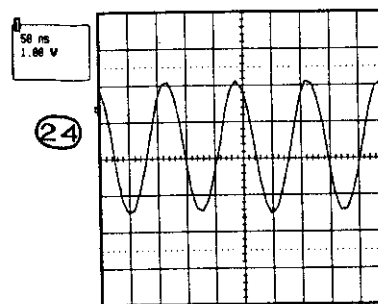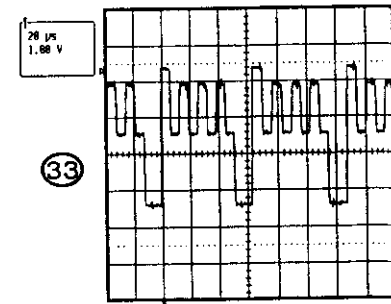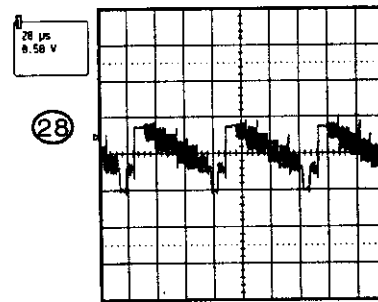
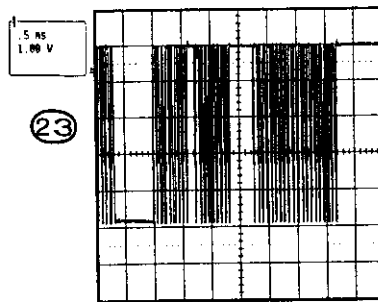
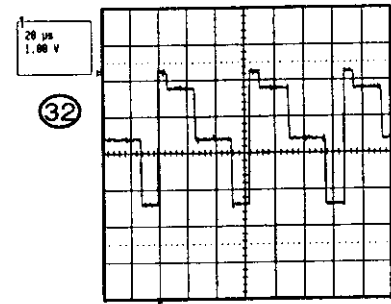
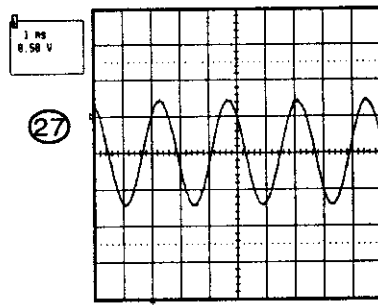


NOTE: The following waveforms were measured at the point of the corresponding balloon number in the schematic diagram.


## WAVEFORMS

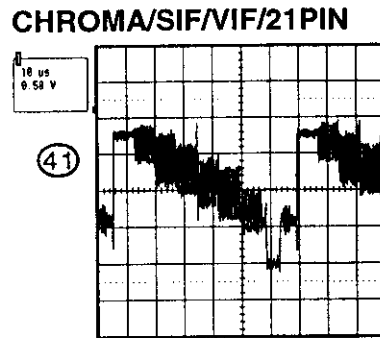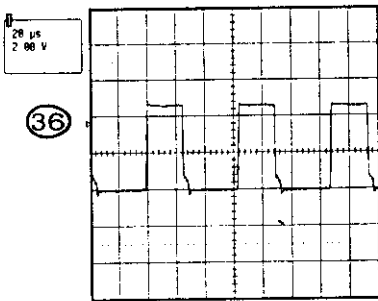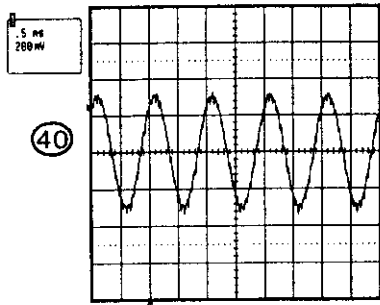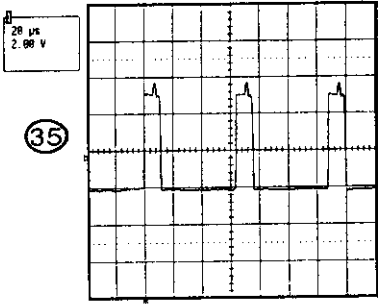


### CHROMA/SIF/VIF/21PIN

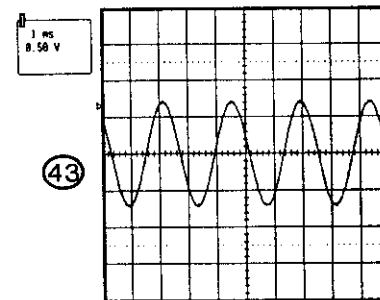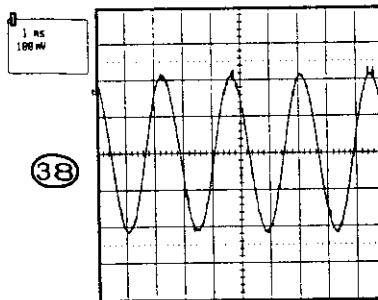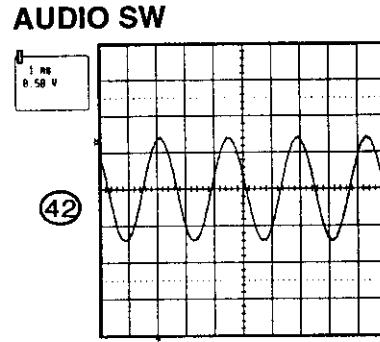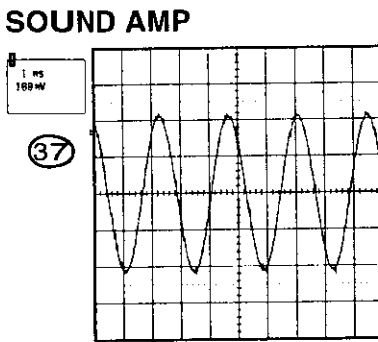

### IN/OUT

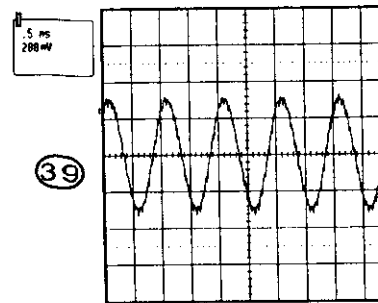


### MICON/TUNER

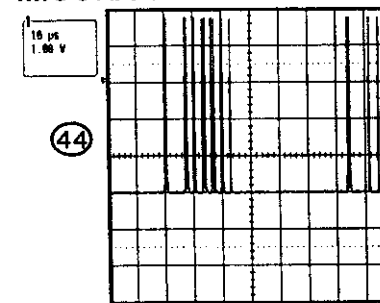


NOTE: The following waveforms were measured at the point of the corresponding balloon number in the schematic diagram.


# MECHANICAL EXPLODED VIEW

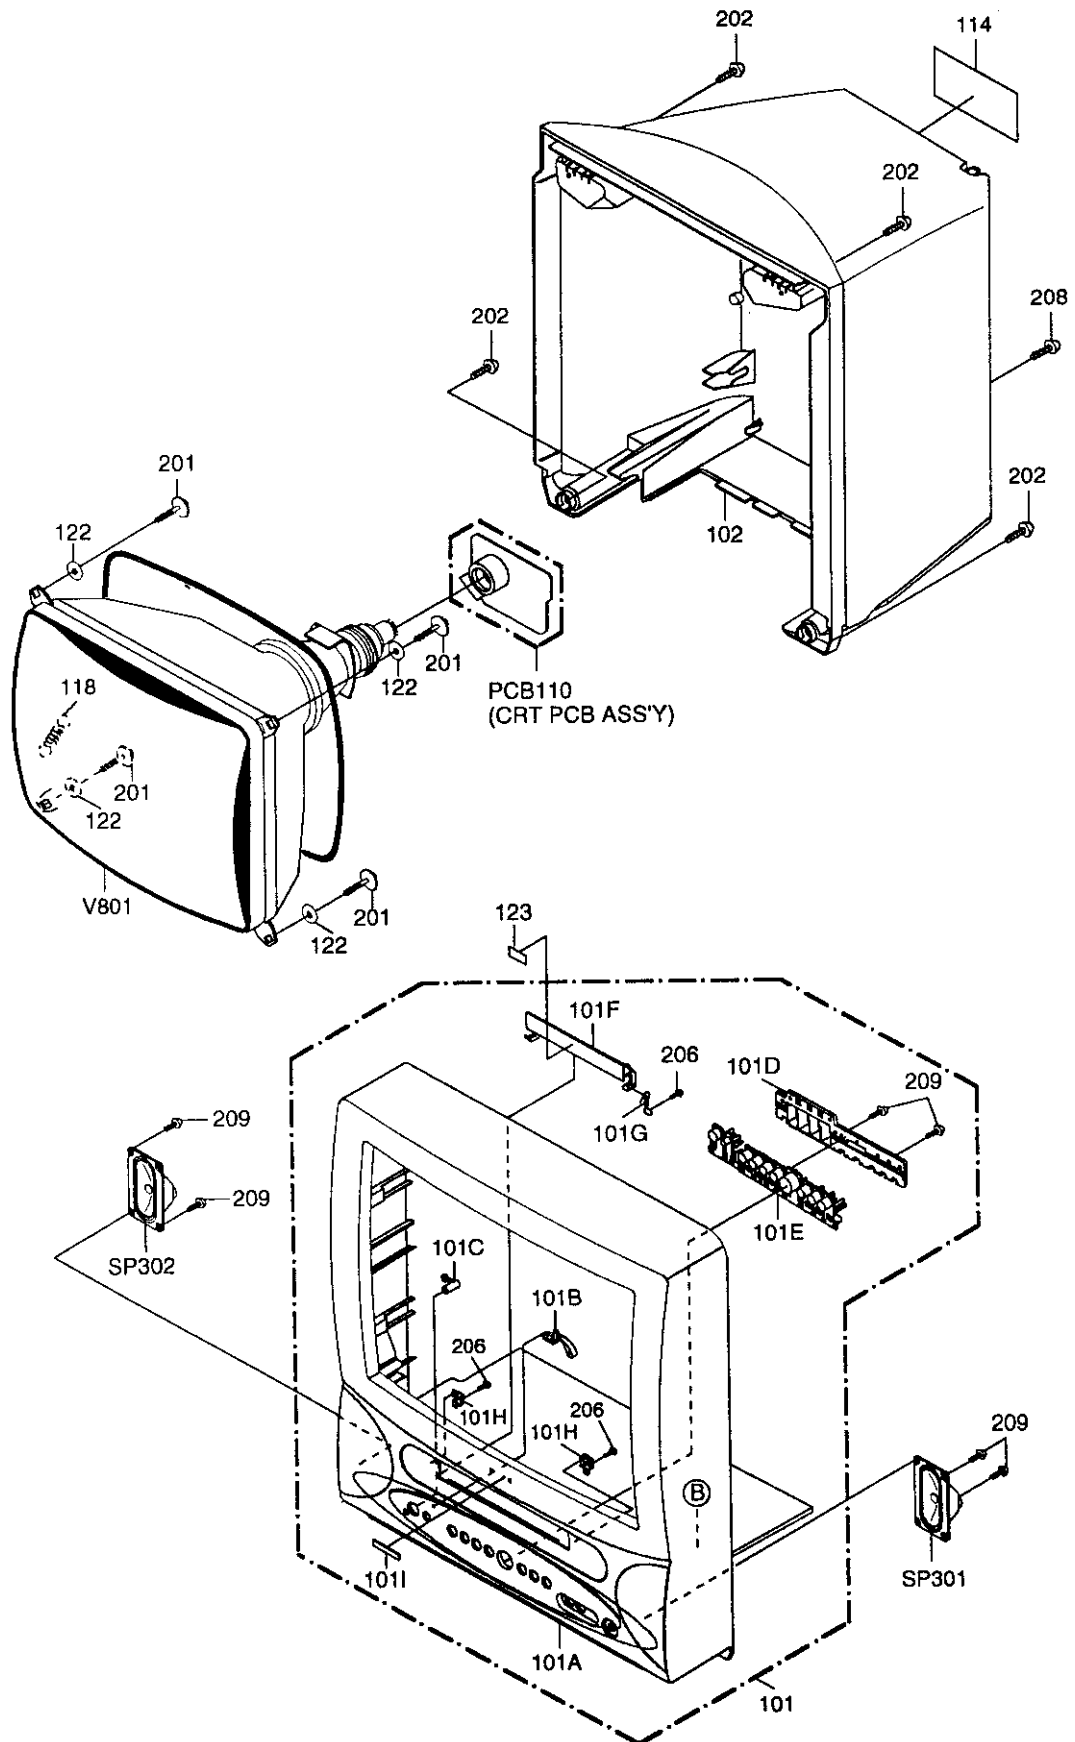

# MECHANICAL EXPLODED VIEW

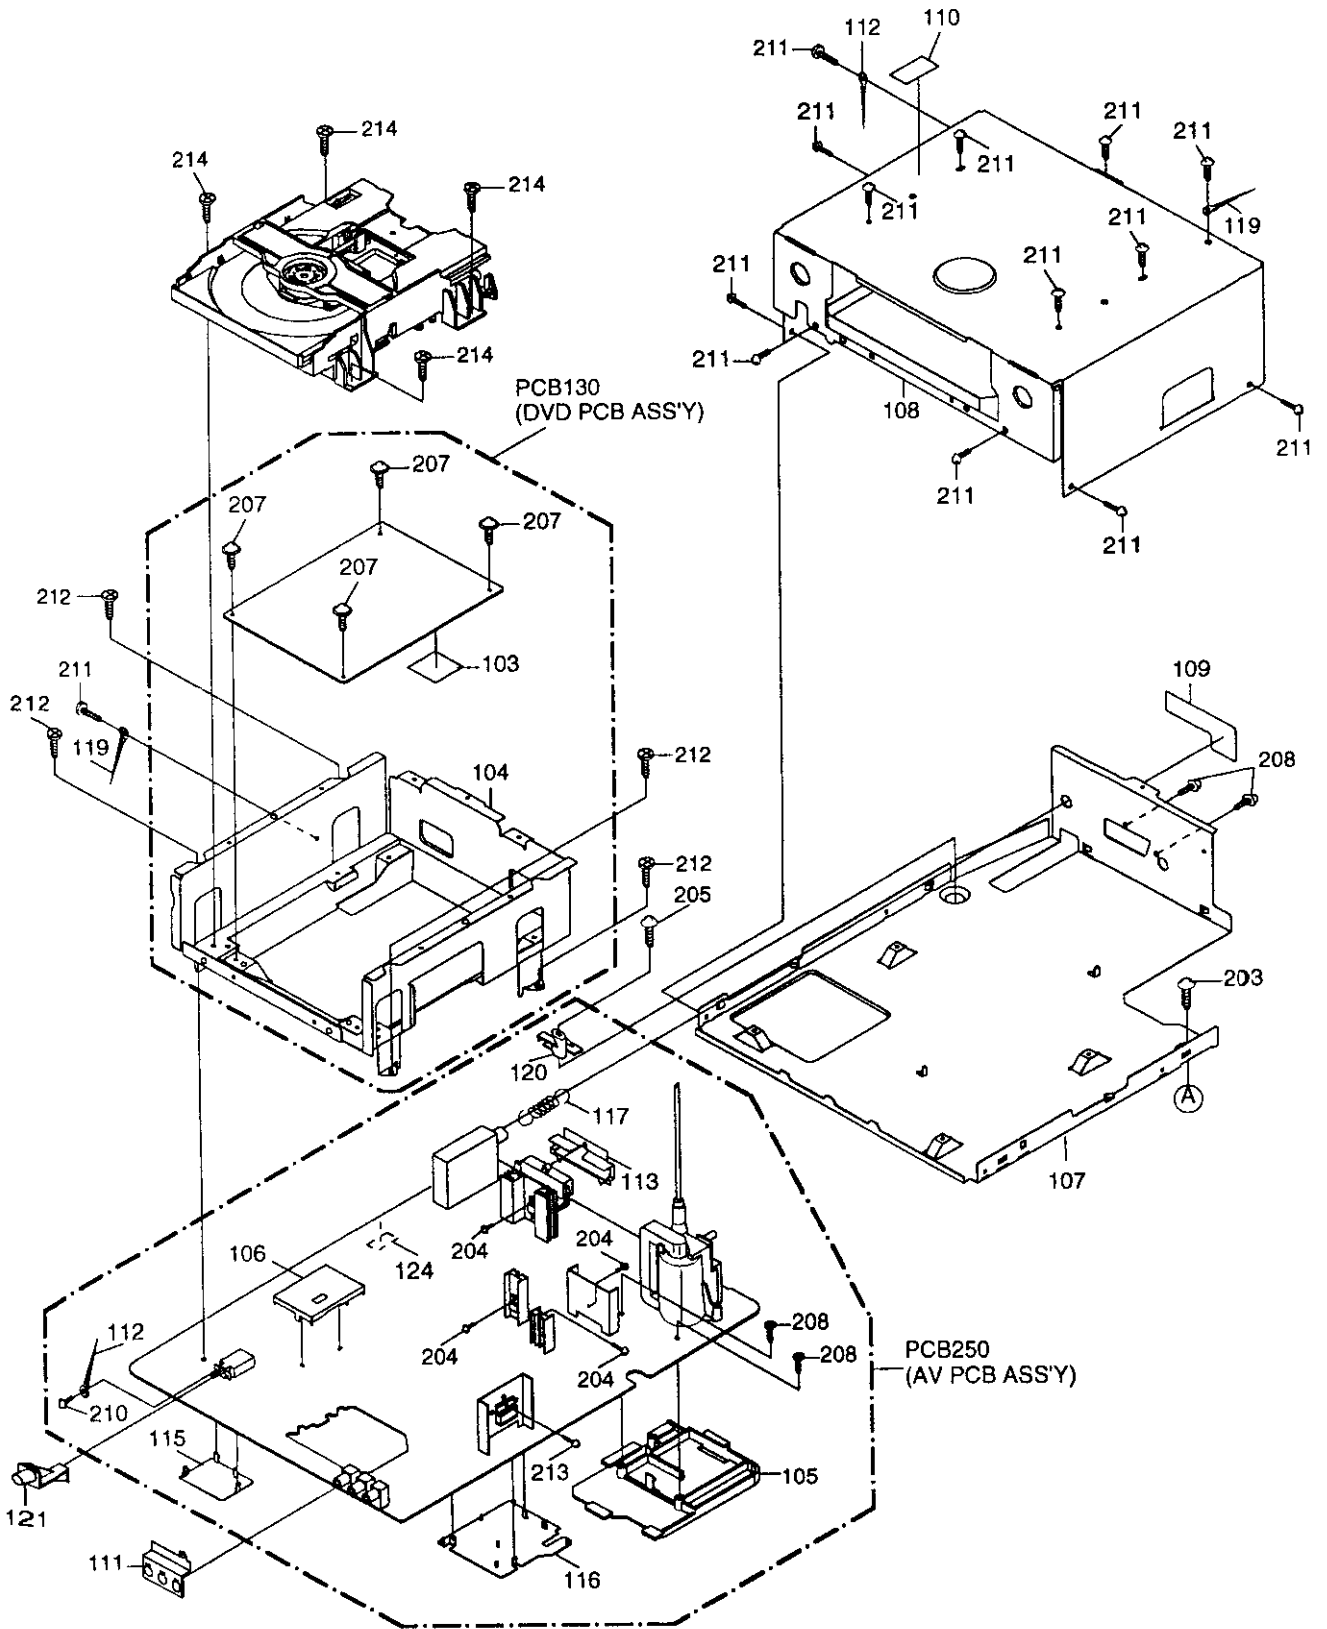

## DVD DECK EXPLODED VIEW

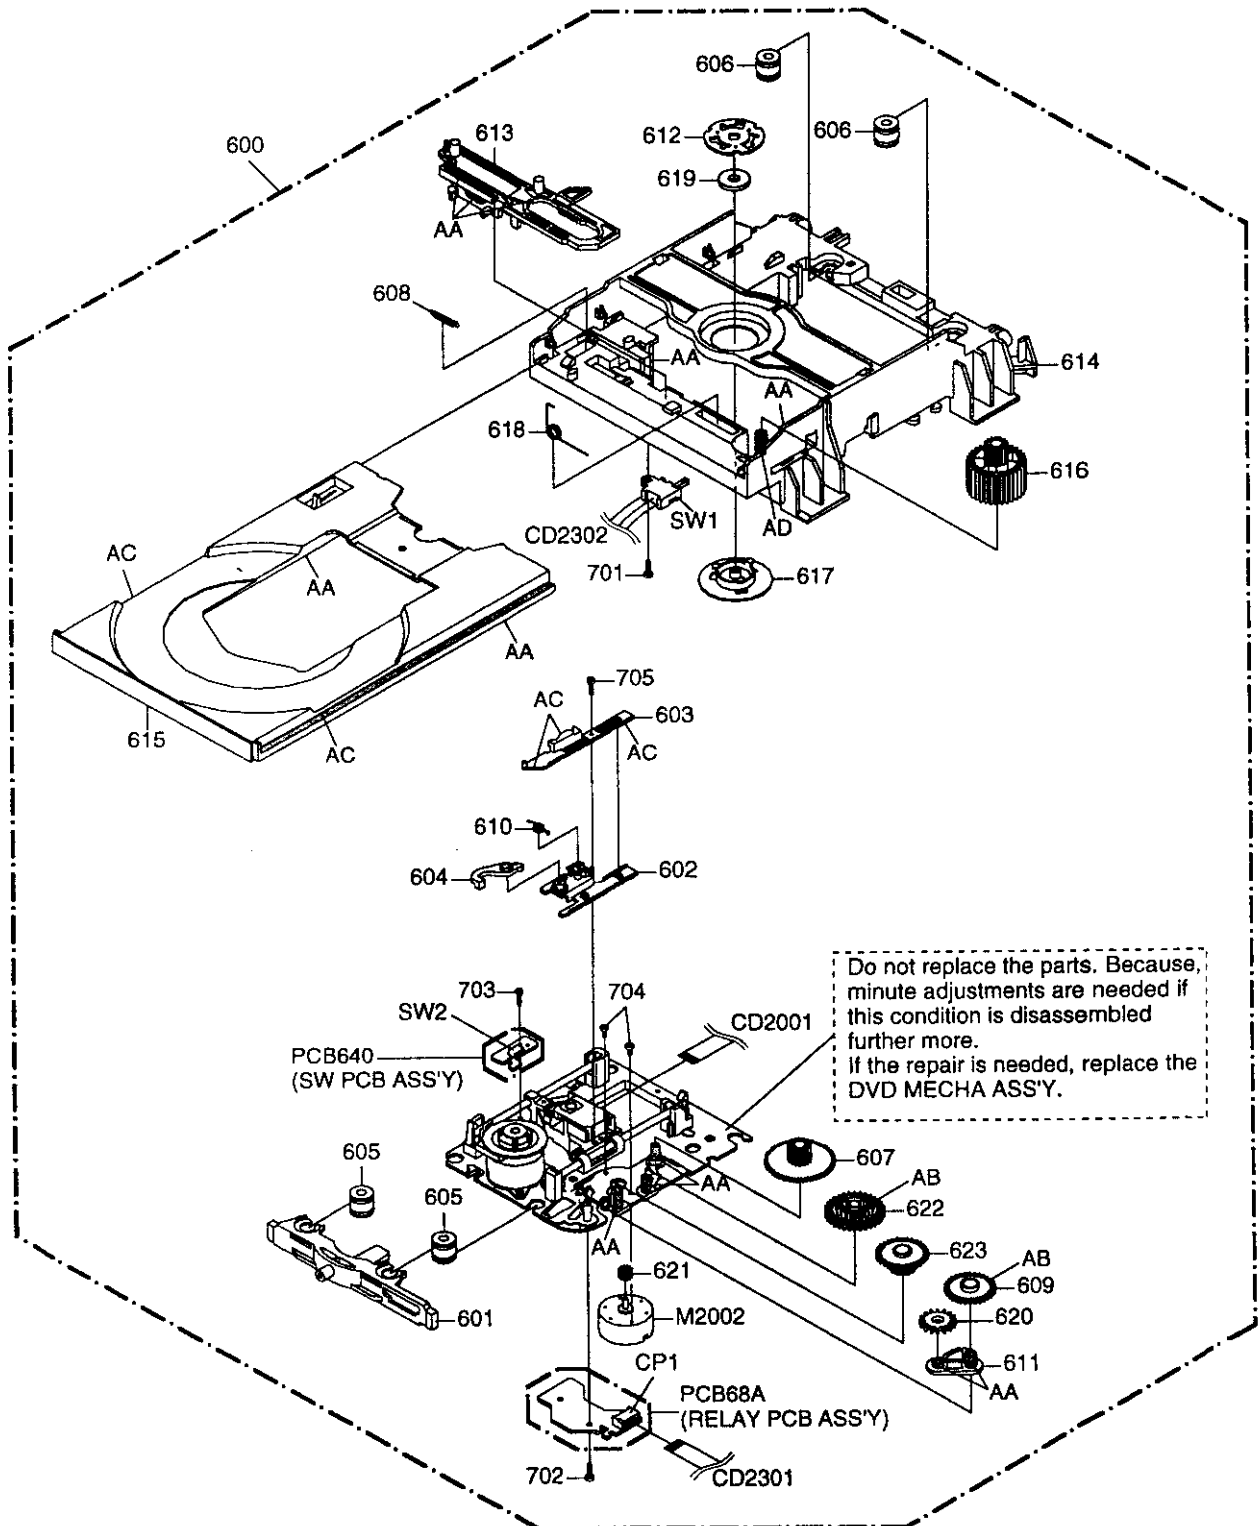

CLASS	PART NO.	PART NAME	MARK
GREASE	Y315061000	G-555G	AA
	Y315121000	G-337F	AB
	Y315131000	SF-112	AC
	Y31D031000	ORG-102	AD

**NOTE:** Applying positions AA, AB, AC and AD for the grease are displayed for this section. Check if the correct grease is applied for each position.

## MECHANICAL REPLACEMENT PARTS LIST

REF. NO.	PART NO.	DESCRIPTION
101	ASJ505C720	CABINET,FRONT ASSY
101A	701WPAJC285	CABINET,FRONT
101B	713WPA0257	GLASS,LED
101C	713WPA0258	GUIDE,REMOCON
101D	735WPAAS76	STOPPER,BUTTON
101E	735WPBA740	BUTTON,FRAME
101F	712WPBA072	FLAP,DVD
101G	742WKA0001	SPRING,DVD-FLAP
101H	761WPA0283	HOLDER,FLAP
101I	711WPCA017	BADGE,BRAND
102	702WPA4460	CABINET BACK ASSY
	702WPAAS51	CABINET,BACK
103	7232020748	SHEET,IC
104	761WSA0138	ANGLE,DECK
105	761WPA0249	HOLDER,PBT
106	752WSA0347	SHIELD,CASE
107	702WSA0188	PLATE,BC TOM
108	702WSA0191	SHIELD,TOP
109	7230007687	SHEET,JACK
110	7260000341	SHEET,CAUTION
111	752WSA0333	SHIELD,JACK
112	8995034006	CORD CLIP,UL CO.
113	761WSA0096	SHIELD,21PIN
114	722202A735	SHEET,RATING
115	755WPA0037	COVER,PCB
116	755WPA0038	COVER,PCB
117	743WKA0046	SPRING,TUNER
118	741WUA0001	SPRING,EARTH
119	899EFA001	WIRING CLIP
120	735WPA0777	SPACER
121	735WPBA859	BUTTON,POWER
122	800WRA011	SHEET CRT SUPPORT (D)
123	7235630001	SHEET,DVD(NEW)
124	724WNAA002	SHEET,PVC
201	8121F50984	SCREW,TAP TITE(P) FAI20 FLAT 5x28
202	8117540A54	SCREW,TAPPING(B0) TRUSS 4x16
203	8117540904	SCREW,TAPPING(B0) TRUSS 4x8
204	8109300A04	SCREW,TAP TITE(B) WH7 3x10
205	8117540804	SCREW,TAPPING(B0) TRUSS 4x20
206	8110E30804	SCREW,TAP TITE(P) WH10 3x8
207	810930804	SCREW,TAP TITE(B) WH7 3x8
208	8108230804	SCREW,TAP TITE(B) BIND 3x8
209	8110630804	SCREW,TAP TITE(P) BRAZIER 3x8
210	8107230404	SCREW,TAP TITE(S) BIND 3x4
211	8109230604	SCREW,TAP TITE(B) BIND 3x6
212	8109230704	SCREW,TAP TITE(B)R BIND 3x7
213	8107630804	SCREW,TAP TITE(S) BRAZIER 3x8
214	810F130804	SEMS(F) 3x8
--	ASJ505C975	INSTRUCTION BOOK KIT
--	JSJ50501A	INSTRUCTION BOOK
--	JSJ50507A	QUICK SET-UP SHEET
--	JBSZ0200	POLYBAG,INSTRUCTION
--	791WHAA0061	LAMIFILM BAG
--	792WHAA0077	PACKAGE, TOP
--	792WHAA0078	PACKAGE,BOTTOM
--	793WCD8937	GIFT BOX

## DVD DECK REPLACEMENT PARTS LIST

REF. NO.	PART NO.	DESCRIPTION	AS1601C4200
800	AS1601C4200	DVD MECHA ASSY	AS1601C4200
801	92P100022A	TRAVERSE HOLDER	
802	92P100080A	RACK FEED 1A	
803	92P100081A	RACK FEED 2A	
804	92P100035A	LEVER,RACK FEED	
805	92P200008A	INSULATOR(F)	
806	92P200007A	INSULATOR(R)	
807	92P300029A	GEAR,FEED	
808	92P300009A	SPRING,RACK L	
809	92P100028A	GEAR,MIDDLE 3	
610	92P300019A	SPRING,RACK FEED 1A	
611	92P100040A	ARM,IDLER 2	
612	92P000001A	CLAMPER PLATE	
613	92P100019A	RACK,LOADING	
614	92P100020A	MAIN FRAME M	
615	92P100039A	TRAY	
616	92P100023A	GEAR,MAIN	
617	92P100024A	CLAMPER	
618	92P300002A	SPRING,RACK LOADING	
619	92P400002A	MAGNET,CLAMPER	
820	92P100030A	GEAR,IDLER	
821	92P100025A	GEAR,MOTOR	
822	92P100063A	GEAR,MIDDLE 1	
823	92P100027A	GEAR,MIDDLE 2	
701	8110228804	SCREW,TAP TITE(P) BIND	2.6x8
702	8110120804	SCREW,TAP TITE(P) PAN	2x6
703	8107220504	SCREW,TAP TITE(S) BIND	2x5
704	8140117254	SCREW,PAN	M4.7x2.5 P3
705	8110220804	SCREW,TAP TITE(P) BIND	2x8
CD2001	122H001901	CORD JUMPER	2H001901
CD2301	122H080701	CORD JUMPER	2H080701
CD2302	06CH232101	CORD CONNECTOR	232101
CP1	069J980180	CONNECTOR PCB SIDE	1MSA-9815S-08C-PP
CP1	069J980180	CONNECTOR PCB SIDE	BCC03881
M2002	1515S98001	FEED MOTOR	BEC001A
PCB440	ASE801V680	PCB ASSY	VEBA12A
PCB48A	ASE801V680	PCB ASSY	SSS-23-6
SW1	0515S32001	SWITCH	ESE22MH22
SW2	0500101036	PUSH SWITCH	

## ELECTRICAL REPLACEMENT PARTS LIST

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION		
<b>RESISTORS</b>							
R408	R3X18A221J	R,METAL OXIDE	220 OHM 2W	D3803	D2WTRM11C0	DIODE SILICON	RM11C-EIC
R430	R3X18A331J	R,METAL OXIDE	330 OHM 2W	D3804	D2WTRM11C0	DIODE SILICON	RM11C-EIC
R447	R85582151J	R,FUSE	150 OHM 1/2W	D3805	D2WTRM11C0	DIODE SILICON	1N4937
R448	R3X181102J	R,METAL OXIDE	1K OHM 1W	D3806	D2WXXN4937Q	DIODE SILICON	1SS133T-77
R450	R853814RTJ	R,FUSE	4.7 OHM 1W	D3807	D1VT001330	DIODE SILICON	R2U2AM-EIC
R802	R3X181153J	R,METAL OXIDE	15K OHM 1W	D3808	D2WXRJ24A0	DIODE SILICON	1SS133T-77
R805	R3X181153J	R,METAL OXIDE	15K OHM 1W	D3809	D1VT001330	DIODE ZENER	MTZJ5.6B T-77
R610	R3X181153J	R,METAL OXIDE	15K OHM 1W	D3812	D97U05R11B	DIODE ZENER	R2U2AM-EIC
R2344	R002T21R2J	RC	1.2 OHM 1/2W	D3813	D2WXRJ24A0	DIODE SILICON	1SS133T-77
R2345	R002T21R2J	RC	1.2 OHM 1/2W	D3814	D1VT001330	DIODE SILICON	21D006N-TA2B1
R3035	R3X181120J	R,METAL OXIDE	12 OHM 1W	D3815	D2LKB34L0	DIODE SCHOTTKY	SB340L-6737
R3803	R5X34E5R6J	R,CEMENT	5.6 OHM 7W	D3819	D28F31D009	DIODE SCHOTTKY	31DQ09FC
R3805	R3X181R33J	R,METAL OXIDE	0.33 OHM 1W	D3820	D28F31D009	DIODE SCHOTTKY	31DQ09FC
R3806	R83581R22J	R,FUSE	0.22 OHM 1W	D3821	D28F31D009	DIODE SCHOTTKY	1N4937
R3813	R3X28B104J	R,METAL	100K OHM 3W	D3823	D2WXRJ24A0	DIODE SILICON	MTZJ15B T-77
R3819	R3X28B22J	R,METAL	0.22 OHM 3W	D3824	D97U05101B	DIODE ZENER	VCL4148
R3823	R3X28B1R5J	R,METAL	1.5 OHM 3W	D4001	DDRL41480	DIODE SILICON	MTZJ12B T-77
<b>CAPACITORS</b>							
C405	E5EZF3222M	CE	2200 UF 25V	IC101	15PDDF011A	IC	DECFO11A
C421	E5EZF4102M	CE	1000 UF 35V	IC102	19UF032310	IC	PS13231NR
C423	PAJ7F3334J	CMPP	0.33 UF 250V PMS	IC199	15HD080AD0	IC	S-24C08ACPA-01
C424	PANRFB42H	CMPP	0.0084UF 1.25KV	IC301	10FSR7523N	IC	AN7523N
C450	COPLRR7H2K	CC	220 PF 2KV R	IC302	10FSR7523N	IC	AN7523N
C801	COJBB07H3K	CC	0.0022UF 2KV B	IC401	10WTD81740	IC	TD48174A
C3801	P2122B224M	CMP	0.22 UF 275V ECOLL	IC601	10WDE2246E	IC	STV2246E
C3804	COPLRR7H3K	CC	0.0022 UF 2KV R	IC602	10WDE2246E	IC	STV2246E
C3805	CD39B0M02K	CC	470 PF 250V	IC603	10UF15020	IC	MM1502XNRE
C3806	CD39B0M02K	CC	470 PF 250V	IC2301	109F065600	IC	LA6560
C3807	COPLRR7B3K	CC	0.0012 UF 2KV R	IC2601	10CQK067070	IC	ZR36707GC
C3809	COPLRR7Q2K	CC	470 PF 2KV R	IC2602	107E00358F	IC	BA10358F-E2
C3810	COPLRR7Q2K	CC	470 PF 2KV R	IC3001	11KA98R06A	IC	KIA78R06A
C3814	E52D0H4221M	CE	220 UF 400V	IC3002	103F8324N0	IC	LA8324NML-TE-L
C3817	COJFE0514M	CC	0.01 UF 500V E	IC3801	12B7068530	IC	STR-W8553
C3818	COPLRR7H2K	CC	220 PF 2KV R	IC3804	000220011V	IC	PS25611.1-1-V(W)
C3822	CD09E0M43M	CC	0.0022UF 250V	IC4001	10CQK06720	IC	ZR36720
C3829	COJ0B0502K	CC	470 PF 500V B	IC4002	15HU0048F0	IC	S-24C048FJ-TB
C3831	E62NFC221M	CE	220 UF 200V	IC4003	10GF9JZ010	IC	F0070XZ01ZP
C3832	E5EZF2222M	CE	2200 UF 18V	IC4005	10FJ016447	IC	M12L8418A4-7T
C3835	E5EZF3222M	CE	2200 UF 25V	IC4006	10FJ016447	IC	SST30V800A-704C-EK
C3836	E5EZF21222M	CE	2200 UF 10V	IC4007	10CJ080047	IC	NJM4580M(TTE1)
<b>DIODES</b>							
D101	0021E2Q14	LED	MTZJ5.1B T-77	IC4201	107S0844AN	IC	BA7844AN
D102	D97U05R11B	DIODE ZENER	1SS133T-77	IC4202	107S0844AN	IC	BA7844AN
D103	D1VT001330	DIODE SILICON	1SS133T-77	IC4203	107S0844AN	IC	BA7844AN
D104	D1VT001330	DIODE SILICON	1SS133T-77	IC4204	10UF015010	IC	MM1501XNRE
D105	D2WXXN40060	DIODE SILICON	1N4005-EIC	IC4205	10UF015010	IC	MM1501XNRE
D107	D97U03301B	DIODE ZENER	MTZJ336 T-77	IC4206	10UF015010	IC	MM1501XNRE
D108	D1VT001330	DIODE SILICON	1SS133T-77	IC8502	117F02KEG0	IC	PCM11742KEG2K
D110	D97U05R61B	DIODE ZENER	MTZJ5.6B T-77	<b>TRANSISTORS</b>			
D111	D1VT001330	DIODE SILICON	1SS133T-77	Q101	TNYJ05001	COMPOUND TRANSISTOR	DTG124EKAT148
D112	D97U05R11B	DIODE ZENER	MTZJ5.1B T-77	Q103	T8VJ1037K0	TRANSISTOR SILICON	2SA1037AKT148R,S
D113	D1VT001330	DIODE SILICON	1SS133T-77	Q301	TCAA38755Y	TRANSISTOR SILICON	KTC3875S_Y_RTK
D117	D1VT001330	DIODE SILICON	1SS133T-77	Q303	TCAA38755Y	TRANSISTOR SILICON	KTC3875S_Y_RTK
D403	D2W7011E10	DIODE SILICON	11E1-EIC	Q304	TCAA38755Y	TRANSISTOR SILICON	KTC3227_Y-AT
D404	D2W7011E10	DIODE SILICON	11E1-EIC	Q405	TCAT03227Y	TRANSISTOR SILICON	2SC5885
D405	D2W7011E10	DIODE SILICON	11E1-EIC	Q406	TC1G058850	TRANSISTOR SILICON	KTC3881S-RTK
D406	D2W7011E10	DIODE SILICON	11E1-EIC	Q605	T8AA03881S	TRANSISTOR SILICON	2SC2412KT146 R,S
D407	D2W7011E10	DIODE SILICON	11E1-EIC	Q606	T8VJ2412K0	TRANSISTOR SILICON	DTA114EKAT148
D411	D2WXXN49370	DIODE SILICON	1N4937	Q607	TPVJ05001	COMPOUND TRANSISTOR	KTC3875S_Y_RTK
D413	D2WXXN49370	DIODE SILICON	1N4937	Q608	TCAA38755Y	TRANSISTOR SILICON	KTC3875S_Y_RTK
D602	D2WXXN49370	DIODE SILICON	1N4937	Q609	TCAA38755Y	TRANSISTOR SILICON	KTC3875S_Y_RTK
D603	D2WXXN49370	DIODE SILICON	1N4937	Q610	T8VJ1037K0	TRANSISTOR SILICON	2SA1037AKT148R,S
D604	D2WXXN49370	DIODE SILICON	1N4937	Q611	TCAA38755Y	TRANSISTOR SILICON	KTC4217(O,Y)
D605	D2WXXN49370	DIODE SILICON	1N4937	Q804	TCAD0042170	TRANSISTOR SILICON	KTC4217(O,Y)
D801	D1VT001330	DIODE SILICON	1SS133T-77	Q805	TCAD0042170	TRANSISTOR SILICON	KTC4217(O,Y)
D802	D1VT001330	DIODE SILICON	1SS133T-77	Q806	TCAD0042170	TRANSISTOR SILICON	2SA1036KT148
D803	D1VT001330	DIODE SILICON	1SS133T-77	Q2501	T87J1036K0	TRANSISTOR SILICON	2SA1036KT148
D2601	DDARDS1200	DIODE SILICON	KDS120RTK	Q2602	T87J1036K0	FET	2SK3018
Q3001	D2WXXN40050	DIODE SILICON	1N4005-EIC	Q2603	T27T030180	FET	2SK3018
Q3004	D97U05R61B	DIODE ZENER	MTZJ5.6B T-77	Q2604	T27T030180	FET	2SK3018
Q3005	D1VT001330	DIODE SILICON	1SS133T-77	Q2605	T27T030180	FET	2SK3018
Q3006	D1VT001330	DIODE SILICON	1SS133T-77	Q3001	T8VJ2412K0	TRANSISTOR SILICON	2SC2412KT146 R,S
Q3008	D1VT001330	DIODE SILICON	1SS133T-77	Q3002	TAA7A12890	TRANSISTOR SILICON	KTA1266-AT(Y,GR)
Q3009	D28T21DQ44	DIODE SCHOTTKY	21DQ04N-TA2B1	Q3003	T8VJ2412K0	TRANSISTOR SILICON	2SC2412KT146 R,S
Q3010	D2WXXN40050	DIODE SILICON	1N4005-EIC	Q3004	T8A0013660	TRANSISTOR SILICON	KTB1366(O,Y)
Q3011	D28021DQ44	DIODE SCHOTTKY	21DQ04N	Q3005	T8VJ2412K0	TRANSISTOR SILICON	2SC2412KT146 R,S
Q3801	D1VT001330	DIODE SILICON	1SS133T-77	Q3006	T8A0013660	TRANSISTOR SILICON	KTB1366(O,Y)
Q3802	D2WTRM11C0	DIODE SILICON	RM11C-EIC	Q3007	T8VJ2412K0	TRANSISTOR SILICON	2SC2412KT146 R,S



ELECTRICAL REPLACEMENT PARTS LIST

ELECTRICAL REPLACEMENT PARTS LIST

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
<b>TRANSISTORS</b>			<b>P.C. BOARD ASSEMBLIES</b>		
Q3006	TAAT01281Y	TRANSISTOR SILICON	PCB250	ASJ505C250	PCB ASSY
Q3006	TBYJ2412K0	TRANSISTOR SILICON	<b>MISCELLANEOUS</b>		
Q3010	TB3T011310	TRANSISTOR SILICON	B402	024HT03553	CORE,BEADS
Q3011	TCAT032030Y	TRANSISTOR SILICON	B403	024HT03553	CORE,BEADS
Q3012	TNYJC05001	COMPOUND TRANSISTOR	B2801	024HC31022	CORE,BEADS
Q3013	TAAT01281Y	TRANSISTOR SILICON	B2802	024HC31022	CORE,BEADS
Q3014	TNYJC05001	COMPOUND TRANSISTOR	B2803	024HC31022	CORE,BEADS
Q3801	TCAT032034	TRANSISTOR, SILICON	B2804	024HC31022	CORE,BEADS
Q3805	TCATC31980	TRANSISTOR,SILICON	B2805	024HC31022	CORE,BEADS
Q4004	TCAA38755Y	TRANSISTOR SILICON	B3801	024HT03553	CORE,BEADS
Q4201	TCAA38755Y	TRANSISTOR SILICON	B3802	024HT03553	CORE,BEADS
Q4202	TBYJ1037K0	TRANSISTOR,SILICON	B4001	024HC31022	CORE,BEADS
Q4203	TNAAD05001	COMPOUND TRANSISTOR	B4002	024HC31022	CORE,BEADS
Q4208	TBYJ1037K0	TRANSISTOR,SILICON	B4003	024HC31022	CORE,BEADS
Q4209	TNYJC05001	COMPOUND TRANSISTOR	B4004	024HC31022	CORE,BEADS
Q4210	TPYJA05001	COMPOUND TRANSISTOR	B4005	024HC31022	CORE,BEADS
Q4211	TCAA38755Y	TRANSISTOR SILICON	B4006	024HC31022	CORE,BEADS
Q4212	TCAA38755Y	TRANSISTOR SILICON	B4007	024HC31022	CORE,BEADS
Q4213	TBYJ2412K0	TRANSISTOR SILICON	B4008	024HC31022	CORE,BEADS
Q4214	TBYJ2412K0	TRANSISTOR SILICON	B4009	024HT03553	CORE,BEADS
Q8502	TAA15045Y	TRANSISTOR SILICON	B4201	024HT03553	CORE,BEADS
Q8503	TAA15045Y	TRANSISTOR SILICON	B8502	024HC31022	CORE,BEADS
Q8504	TAA15045Y	TRANSISTOR SILICON	B8503	024HC31022	CORE,BEADS
<b>COILS &amp; TRANSFORMERS</b>			B7001	1412004008	BATTERY,MANGAN
L101	02167F100J	COIL	B7002	1412004008	BATTERY,MANGAN
L102	02167F100J	COIL	CD301	08CU12414A	CORD CONNECTOR
L103	02167F100J	COIL	CD302	06CU12414A	CORD CONNECTOR
L401	021679472K	COIL	CD402	06CUG06001	CORD CONNECTOR
L402	022800033A	COIL,LINEARITY	CD403	06CUG06001	CORD CONNECTOR
L603	0216A6R33K	COIL	CD602	WDL6032038	FLAT CABLE
L604	0216A6R2R2K	COIL	CD603	WBL6022038	FLAT CABLE
L606	02167F100J	COIL	CD605	06CU82039A	CORD CONNECTOR
L608	02167F3R3J	COIL	CF602	1012T04001	FILTER,CERAMIC TRAP
L609	0216A6180J	COIL	CF606	102E238R9G	FILTER,SAW
L610	033700005R	COIL,VIDEO IFT	CF609	1012T5R503	FILTER,CERAMIC TRAP
L611	02167F101J	COIL	CP101	069S260629	CONNECTOR PCB SIDE
L801	021673820K	COIL	CP301	069W120029	CONNECTOR PCB SIDE
L3001	021W7A220K	COIL	CP302	069W120029	CONNECTOR PCB SIDE
L3800	028R14001B	COIL,DEGAUSS	CP402	069S450089	CONNECTOR PCB SIDE
L3801	029X000108	COIL,LINE FILTER	CP801	069S320010	CONNECTOR PCB SIDE
L3803	02A662E0A1	CORE,FERRITE	CD3802	06CUU23001	CORD CONNECTOR
L4001	02167F2R2J	COIL	CD3804	1206459803	CORD AC BUSH
L4002	02AH89A972	CORE,FERRITE	CD4002	06CU2B2001	CORD CONNECTOR
L4201	02167F101J	COIL	CD8501	122H0C1001	CORD JUMPER
L4202	02167F101J	COIL	CP2601	069JY0Y099	CONNECTOR PCB SIDE
L4205	02167F101J	COIL	CP2602	069JV90180	CONNECTOR PCB SIDE
L8502	02167F1R0K	COIL	CP2803	069S230639	CONNECTOR PCB SIDE
L8503	02167F1R0K	COIL	CP3801	069S420110	CONNECTOR PCB SIDE
L8504	02167F1R0K	COIL	CP3802	069S320419	CONNECTOR PCB SIDE
T401	045000003J	TRANS,HORIZONTAL DRIVE	CP8001	069S280629	CONNECTOR PCB SIDE
T3801	0481300064	TRANSFORMER,SWITCHING	CP8002	069J7C0029	CONNECTOR PCB SIDE
<b>JACKS</b>			CP802A	067U006048	WIRE HOLDER
J801	066F120018	SOCKET,CATHODE RAY TUBE	CP802B	067U006048	WIRE HOLDER
J4201	080J401082	RCA JACK	CP803A	067U004029	WIRE HOLDER
J4202	080J310105	HEADPHONE JACK	CP803B	069R240589	CONNECTOR PCB SIDE
J4203	060G421016	RCA JACK	CP8502	069J7C0019	CONNECTOR PCB SIDE
J4204	080G421017	RCA JACK	ELO01	124102001A	EYE LET
J4205	080G421020	RCA JACK	ELO02	124116281A	EYE LET
J4206	093G100046	SOCKET,21PIN	F3801	080NT05004	FUSE
<b>SWITCHES</b>			F8401	043214037F	TRANSFORMER,FLYBACK
SW2201	0504101T34	SWITCH,TACT	FH3801	06710T0006	HOLDER,FUSE
SW2202	0504101T34	SWITCH,TACT	FH3802	06710T0006	HOLDER,FUSE
SW2204	0504101T34	SWITCH,TACT	QS101	077Q004017	REMOTE RECEIVER
SW2206	0504101T34	SWITCH,TACT	RY3801	0660V20115	RELAY
SW2207	0504101T34	SWITCH,TACT	SP301	070C533019	SPEAKER
SW2208	0504101T34	SWITCH,TACT	SP302	070C533019	SPEAKER
SW2209	0504101T34	SWITCH,TACT	TM101	078NGHE230	TRANSMITTER
SW2210	0504101T34	SWITCH,TACT	TU101	0145517008	TUNER,VHF-UHF
SW2211	0504101T34	SWITCH,TACT	TH3801	D8R0A140M0	DEGAUSS ELEMENT
SW3801	0530105018	SWITCH	V801	099Y1404C8	CRT W/DY
<b>VARIABLE RESISTORS</b>			X101	100CT4R013	CRYSTAL
VR401	V1K62Q28TB	VOLUME,SEMI FIXED	X601	100CT4R408	CRYSTAL
VR402	V1K62H38TB	VOLUME,SEMI FIXED	X4001	100B702701	CRYSTAL
VR3801	V1K63C28TE	VOLUME,SEMI FIXED	<b>P.C. BOARD ASSEMBLIES</b>		
PCB110	ASJ505C110	PCB ASSY	TCC435A		
PCB130	ASJ505C130	PCB ASSY	VMC319A		

RESISTOR

RC..... CARBON RESISTOR

CAPACITORS

CC..... CERAMIC CAPACITOR  
 CE..... ALUMI ELECTROLYTIC CAPACITOR  
 CP..... POLYESTER CAPACITOR  
 CPP..... POLYPROPYLENE CAPACITOR  
 CPL..... PLASTIC CAPACITOR  
 CML..... METAL POLYESTER CAPACITOR  
 CMP..... METAL PLASTIC CAPACITOR  
 CMPPE..... METAL POLYPROPYLENE CAPACITOR

SPEC.NO.	M5J5-05C
O/R NO.	W395522