

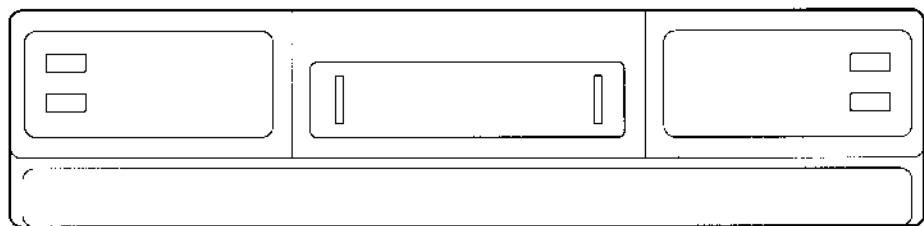


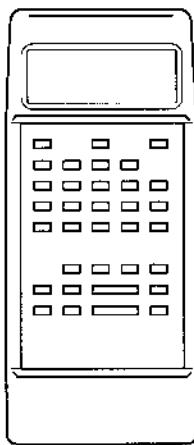

# VIDEO RECORDER

## VC153NX

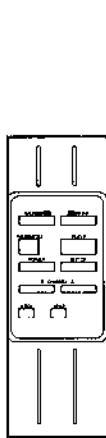

| SECTIONS   | PAGE      |
|--|-----------|
| 1. Main Board and Mechanism Part Locations       | 2 ~ 5     |
| 2. Mechanism Dismantling and Re-assembling       | 6 ~ 42    |
| 3. Block Diagrams                                | 43 ~ 54   |
| 4. Mechanism Maintenance and Checking            | 55 ~ 60   |
| 5. Mechanism Adjustment                          | 61 ~ 72   |
| 6. Electrical Adjustment                         | 73 ~ 83   |
| 7. Electrical Parts List                         | 84 ~ 99   |
| 8. Mechanical Parts List                         | 100 ~ 105 |
| 9. Schematic Diagrams and Printed Circuit Boards | 107 ~ 154 |

# SERVICE MANUAL

## PRODUCT SAFETY NOTICE

The components designated by a symbol ( $\Delta$ ) in this schematic diagram designates components whose value are of special significance to product safety. Should any component designated by a symbol need to be replaced, use only the part designated in the Parts List. Do not deviate from the resistance, wattage and voltage ratings shown.


### NOTES:

1. All resistance values in "OHMS" unless otherwise noted. (K = 1,000, M = 1,000,000)
2. All capacitance values in " $\mu$ fd" unless otherwise noted.  
 $\mu$  = pico farad
3. All inductance values in "mH" unless otherwise noted.  
 $\mu$  = micro henry

## 1. Main Board and Mechanism Part Locations


### 1-1. MAIN BOARDS

L13L046

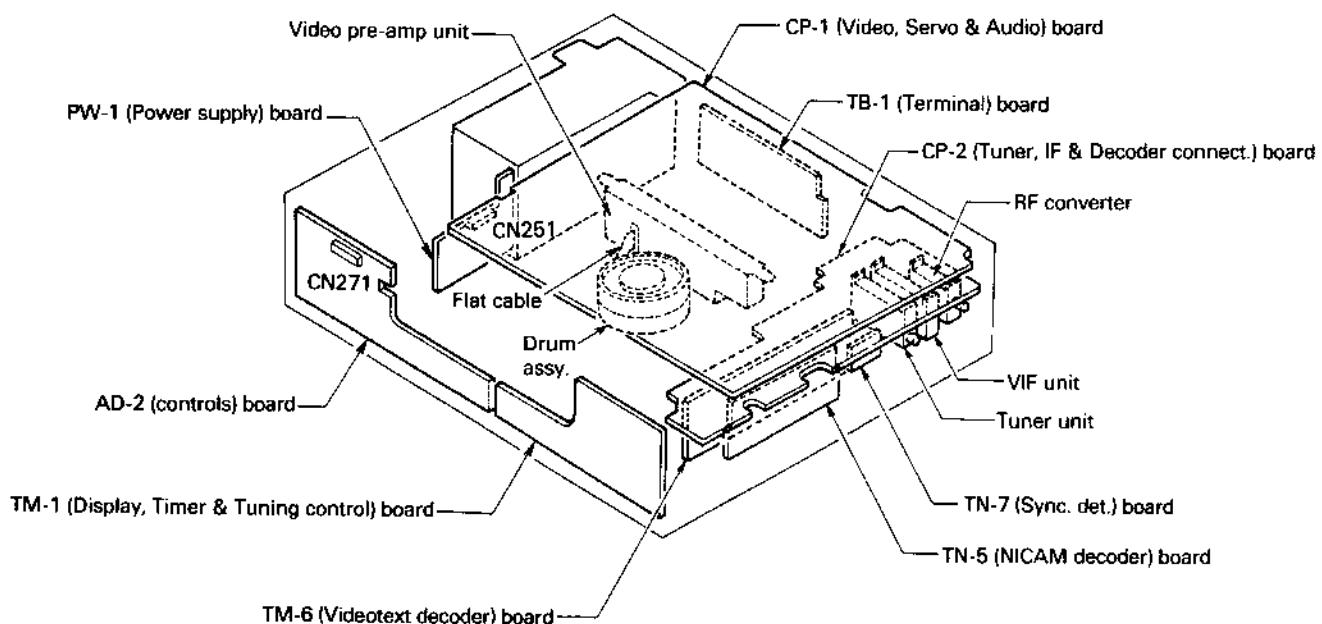


## 1-2. MAIN MECHANISM PARTS LOCATIONS


### (1) Mechanism Assembly (Top View)

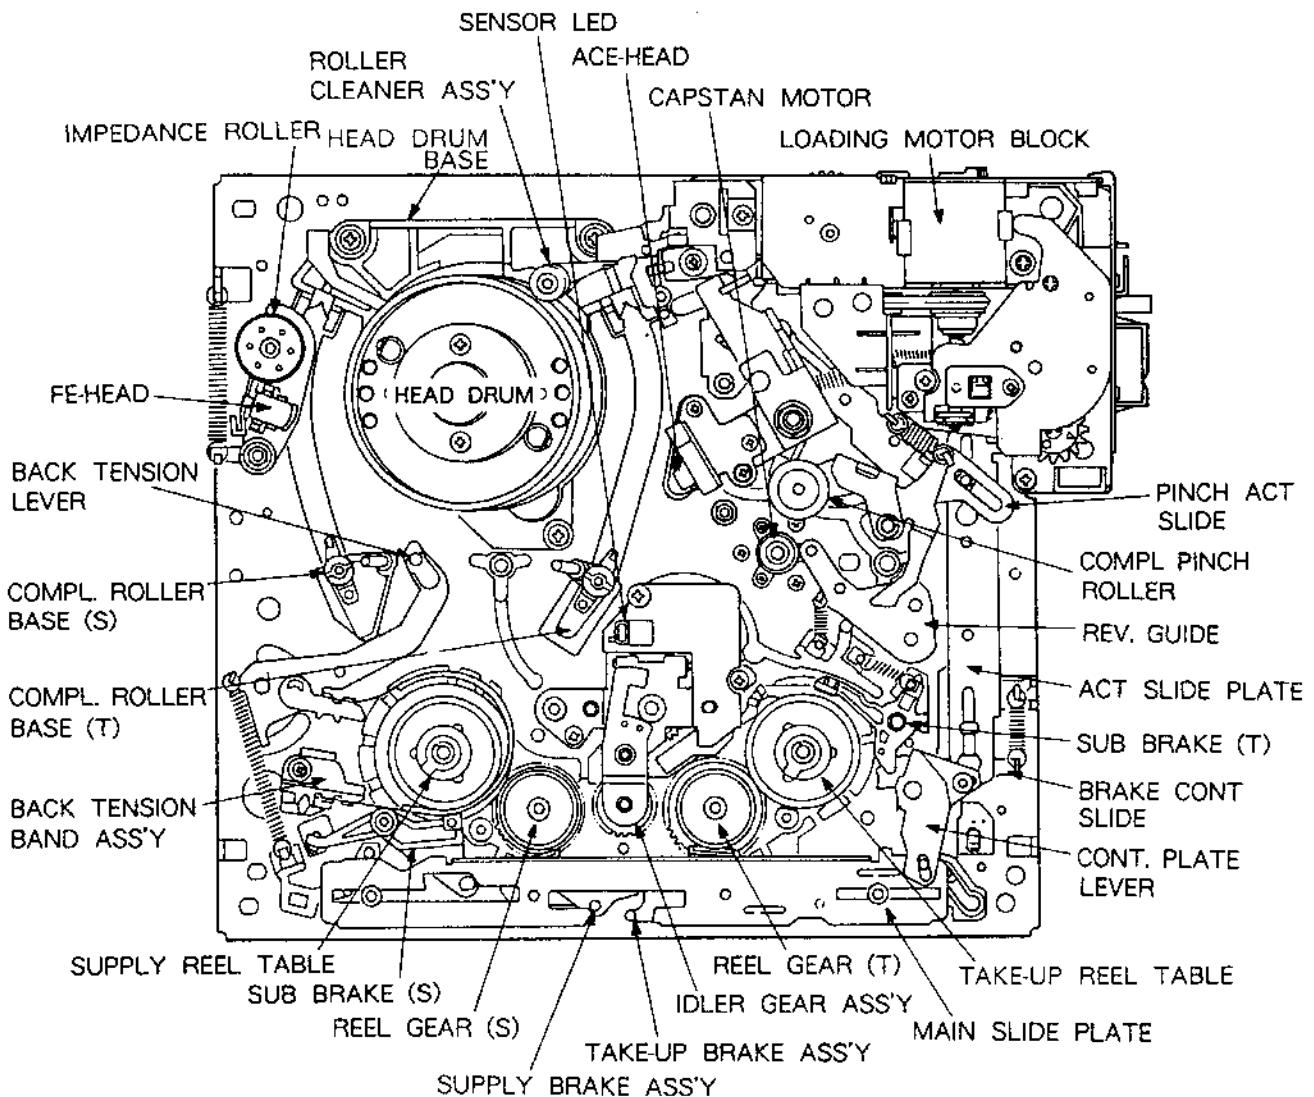

**(2) Mechanism Assembly (Bottom View)**

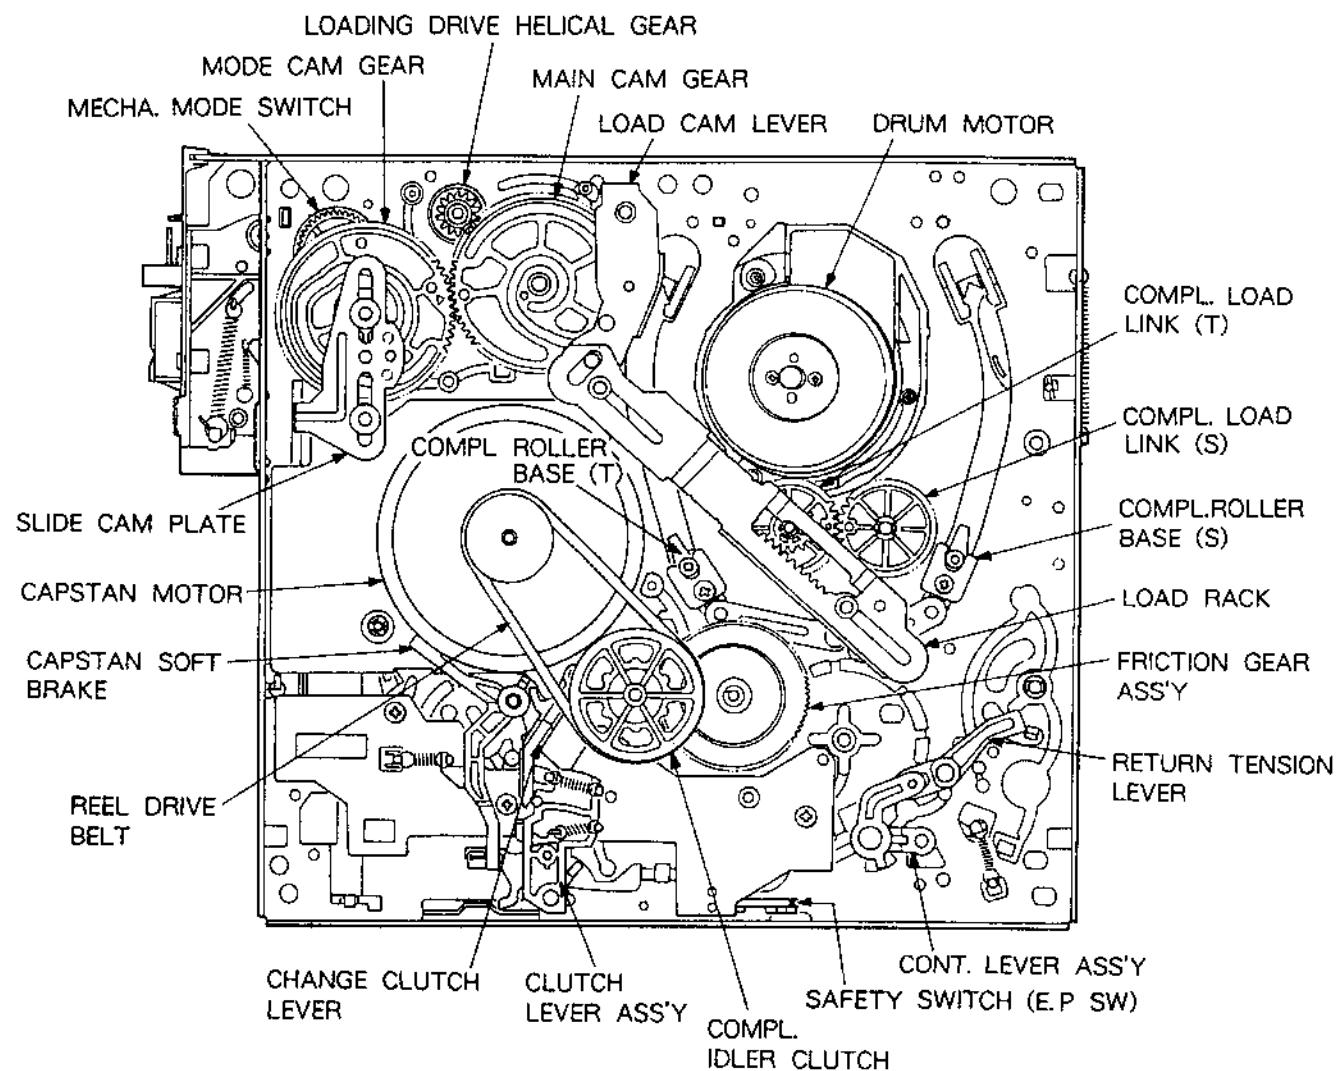

### (3) Front Loading Mechanism

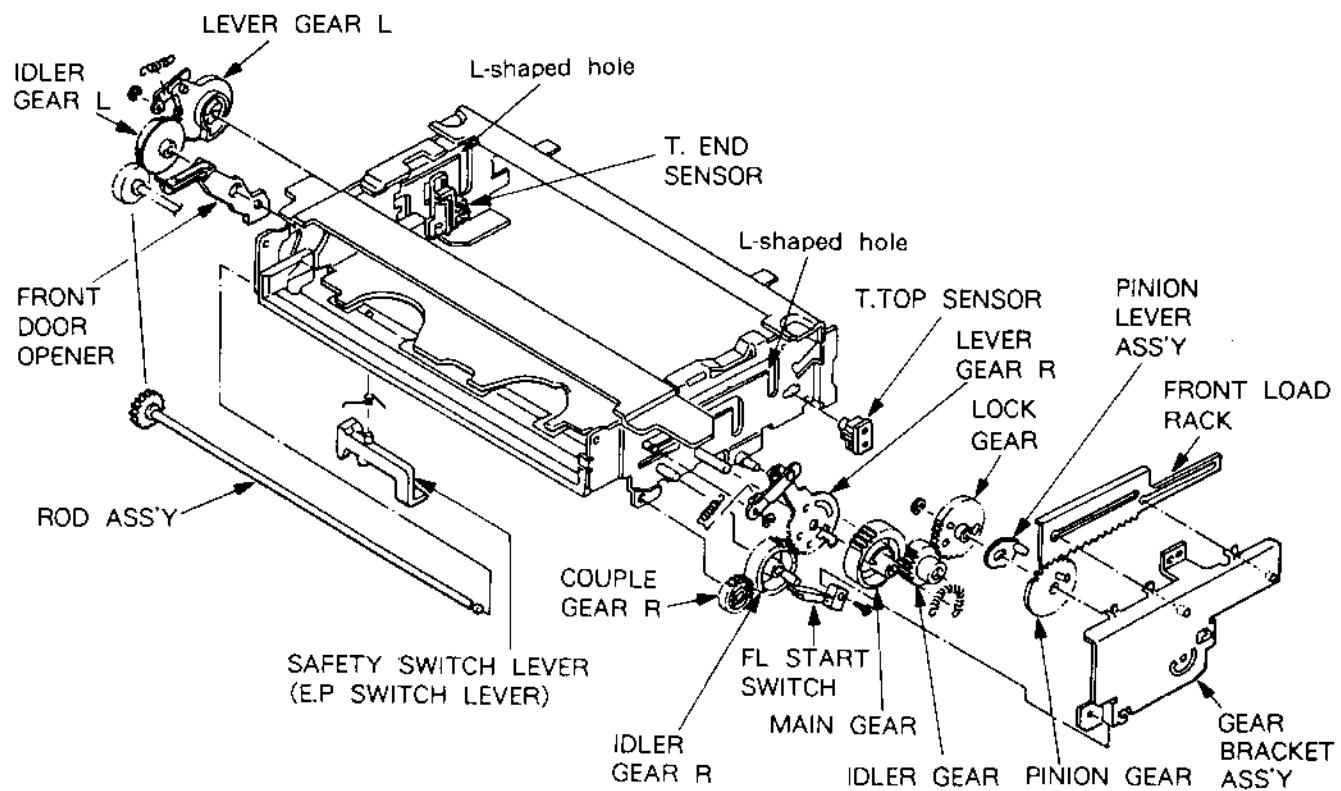

## 2. Mechanism Dismantling and Reassembling

### 2-1. MECHANISM MAIN UNIT (See Fig. 2-1-1.)

#### 1. Removal

- 1) Remove the connectors of the COMPL MC-3 and the COMPL HEAD BRACKET.
- 2) Remove the flexible cable ① connecting the COMPL CYLINDER to the PRE-AMP UNIT ③. (See Fig. A.)
- 3) Remove the two screws ②, then remove the PRE-AMP UNIT ③.
- 4) Remove the two screws ④, then remove the PRE-AMP BRACKET ⑤.
- 5) Remove the two screws ⑥.
- 6) Remove the three screws ⑦ and two screws ⑩, then lift up the mechanism main unit and remove it.

Since the TRAY ⑧ obstructs removal of the two front screws ⑩, move the TRAY LOCK LEVER ⑨ in the direction of the arrow to unlock, then slide the TRAY ⑧ before removing the screws. (See Fig. B)

**Note:** Shape of the PRE-AMP UNIT ③ and the PRE-AMP BRACKET ⑤ differ depending on the model.

#### 2. Remounting

- 1) Mount the mechanism main unit onto the chassis with the three screws ⑦ and two screws ⑩.
- 2) Tighten the two screws ⑥.
- 3) Mount the PRE-AMP BRACKET ⑤ with the two screws ④.
- 4) Mount the PRE-AMP UNIT ③ and the ground lug with the two screws ②. (some models are not provided with a ground lug.)
- 5) Insert the flexible cable ① into the connector of the PRE-AMP UNIT.
- 6) Connect the connectors of the COMPL MC-3 and COMPL HEAD BRACKET.

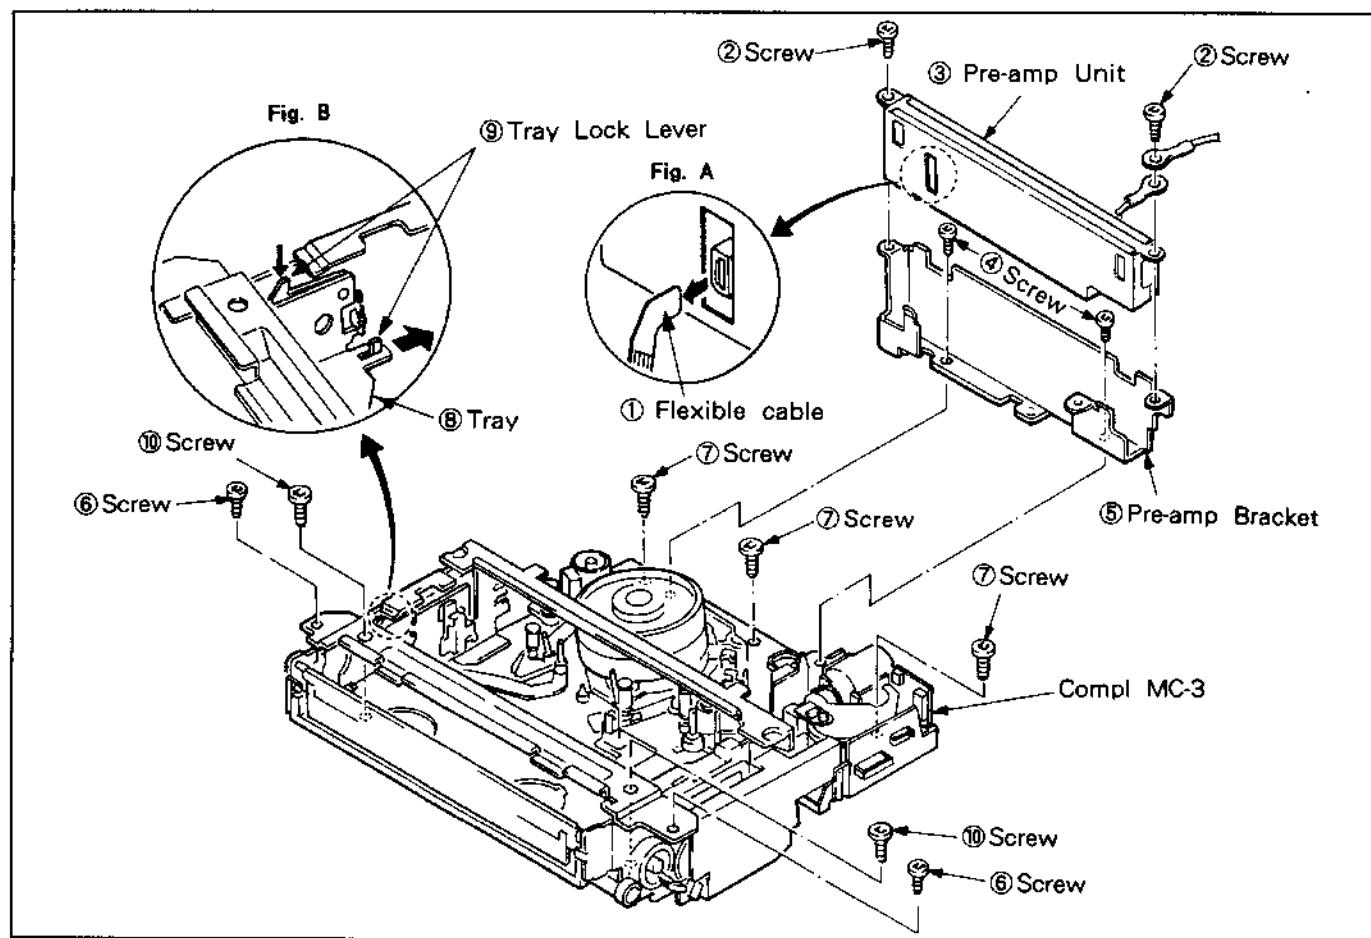


Fig. 2-1-1. Mechanism Main Unit

## 2-2. CASSETTE MECHANISM ASSEMBLY

### 2-2-1. CASSETTE MECHANISM

(See Fig 2-2-1.)

#### 1. Removal

- 1) Set the video main unit to the EJECT completed mode.
- 2) Pull out the connectors (6-PIN CONNECTOR connected to the system control circuit board, ACE HEAD CONNECTOR, and FTE HEAD CONNECTOR) from CASSETTE HOLDER.
- 3) Remove the two screws ①.
- 4) Remove the two screws ②.
- 5) Lift up the COMPL CASSETTE MECHANISM ④ back a little and remove the two hooks ③ on the front. (See Fig. B.) When doing so, make sure that the SAFETY SWITCH LEVER is not caught by the mechanism chassis.

#### 2. Remounting

- 1) Set the chassis section mechanism to the EJECT mode with the mode selector (VHJ-0050) (looking from the top, align the EJECT mode positioning alignment hole ⑤ to the MOTOR HOLDER hole ⑥ as shown in Fig. A).
- 2) Set the COMPL CASSETTE MECHANISM ④ to the EJECT completed mode.
- 3) Mount the COMPL CASSETTE MECHANISM ④ onto the mechanism chassis, aligning it with the protuberance. Align the EJECT mode positioning alignment mark ⑧ to the △ positioning alignment mark ⑦. (See Fig. A)
- 4) Fix to the mechanism chassis with the two screws ②.
- 5) Fix to the chassis with the two screws ①.
- 6) Connect to the various connectors.

④ Compl Cassette Mechanism

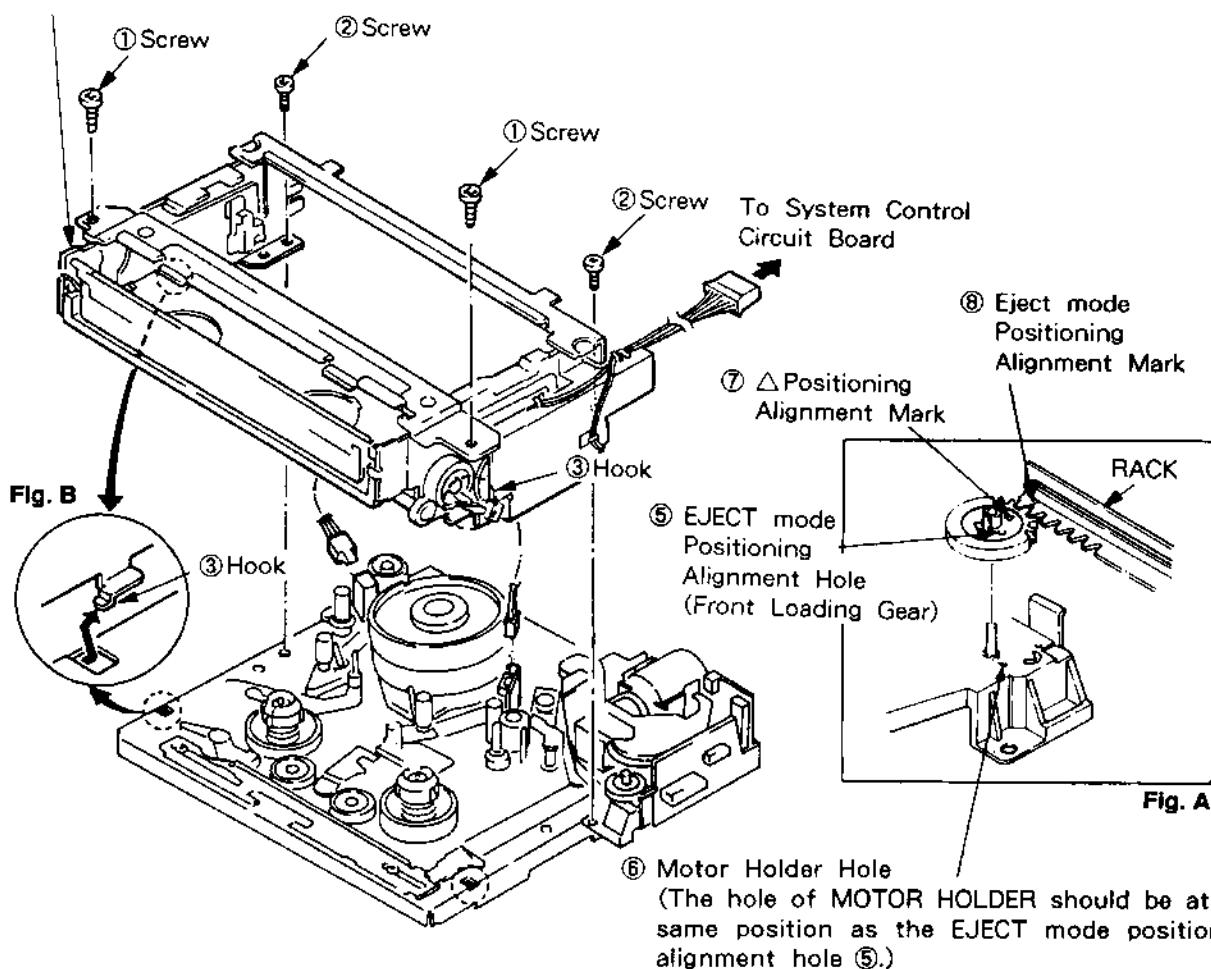


Fig. 2-2-1. Cassette Mechanism

## 2-2-2. GEAR BRACKET ASS'Y (See Fig. 2-2-2.)

### 1. Removal

- 1) Remove the COMPL CASSETTE MECHANISM as instructed in 2-2-1.
- 2) Remove the four screws ①, then remove the GEAR BRACKET ASS'Y ② as shown in Fig. A.
- 3) Remove the E ring ③, then remove the LOCK GEAR ④, the PINION LEVER ASS'Y ⑤, the PINION GEAR ⑥ and the RACK ⑦, in that order.

### 2. Remounting

- 1) Apply grease to the shaft ⑧ and the two pins ⑨ of the GEAR BRACKET ASS'Y.
- 2) Apply grease to the pin ⑩ of the PINION LEVER ASS'Y.
- 3) Apply grease to the toothed part of the RACK ⑦.
- 4) Fit the RACK ⑦ onto the two pins ⑨. Align the positioning alignment hole ⑪ to the positioning alignment hole ⑫ of the GEAR BRACKET.

- 5) Mount the PINION GEAR ⑥, PINION LEVER ASS'Y ⑤, and LOCK GEAR ④ in the shaft ⑧ in the order mentioned. Align the positioning alignment holes ⑬ of PINION GEAR and LOCK GEAR with the positioning alignment hole ⑪ of RACK at that time.
- 6) Mount the E ring ③ onto the shaft ⑧.
- 7) Set the GEAR BRACKET ASS'Y ② to the dowel and mount it using four screws ①. Align the positioning alignment hole ⑭ of the IDLER GEAR with the positioning alignment hole ⑮ of the SIDE BOARD as shown in Fig. 2-2-3 at this time. Also align the positioning alignment holes ⑯ of PINION GEAR and LOCK GEAR with the positioning alignment hole ⑯ of GEAR BRACKET by referring to Fig. 2-2-2. After mounting them, check to be sure that FL START SWITCH ⑯ is in the ON state shown in Fig. A.
- 8) Remount the COMPL CASSETTE MECHANISM as instructed in 2-2-1.

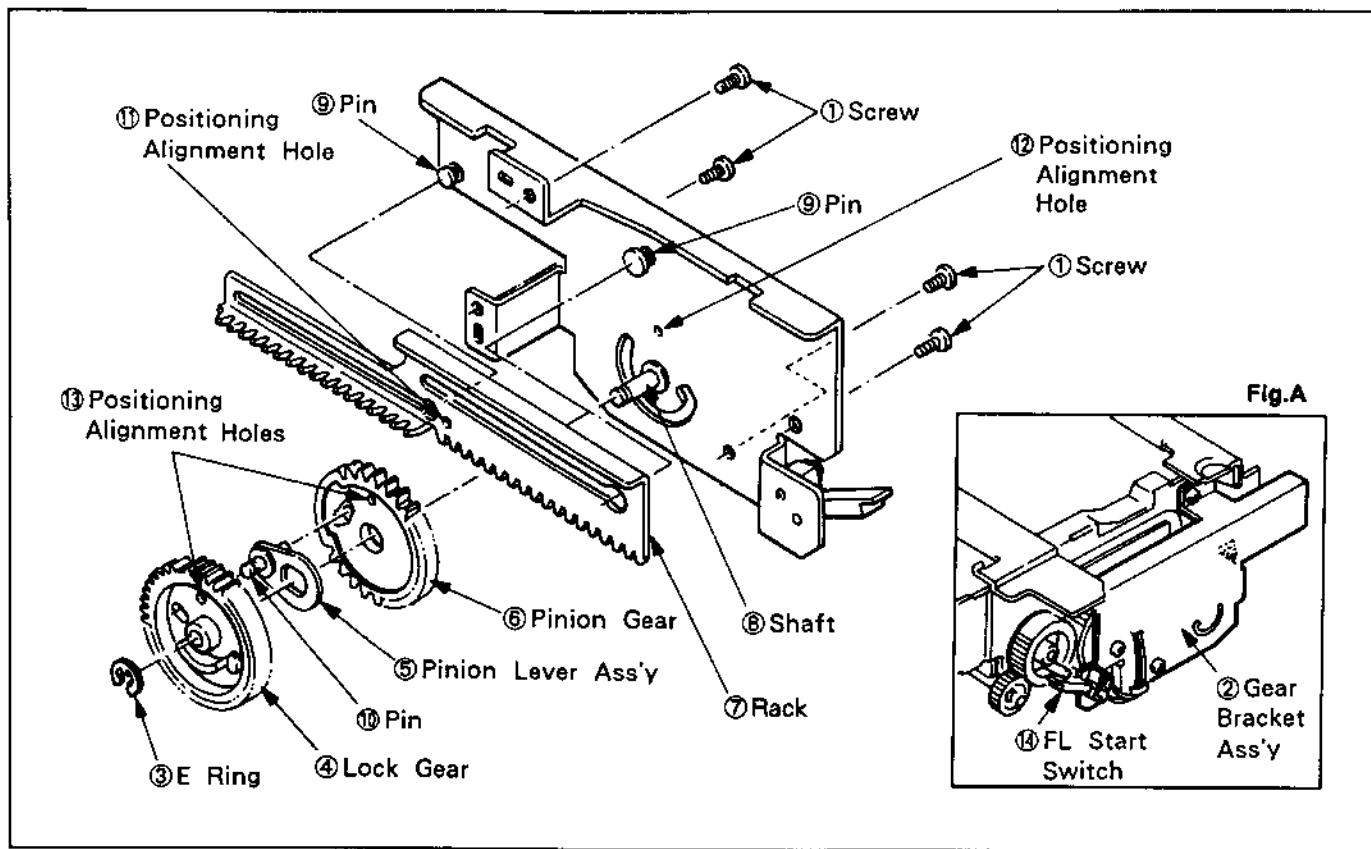


Fig. 2-2-2. Gear Bracket Ass'y

## 2-2-3. CASSETTE DRIVE GEAR (RIGHT)

(See Fig. 2-2-3.)

### 1. Removal

- 1) Remove the COMPL CASSETTE MECHANISM and the GEAR BRACKET ASS'Y as instructed in 2-2-1. and 2-2-2., respectively.
- 2) Remove the IDLER GEAR ①.
- 3) Remove the SPRING COIL ②, then remove the MAIN GEAR ③.
- 4) Remove the E ring ④, then remove the LEVER GEAR ASS'Y R ⑤.

### 2. Remounting

- 1) Apply grease to gear parts that undergo friction.
- 2) Align the positioning alignment hole ⑧ of IDLER GEAR ⑧ with the positioning alignment hole ⑨ of SIDE BOARD.
- 3) Mount the LEVER GEAR ASS'Y R ⑤ onto the axles ⑪ and ⑫. Align with the IDLER GEAR ⑧ as shown in Fig. A.
- 4) Mount the E ring ④ onto the axle ⑫.
- 5) Mount the MAIN GEAR ③ onto the axle ⑪. When doing so, align with the IDLER GEAR ⑧ as shown in Fig. A.
- 6) Hook the SPRING COIL ② to the notch ⑬ in the MAIN GEAR ③ and the LEVER GEAR ASS'Y R.
- 7) Mount the IDLER GEAR ① onto the axle ⑭. When doing so, align with the MAIN GEAR as shown in Fig. A.
- 8) Mount the GEAR BRACKET ASS'Y and the COMPL CASSETTE MECHANISM as instructed in 2-2-2. and 2-2-1., respectively.

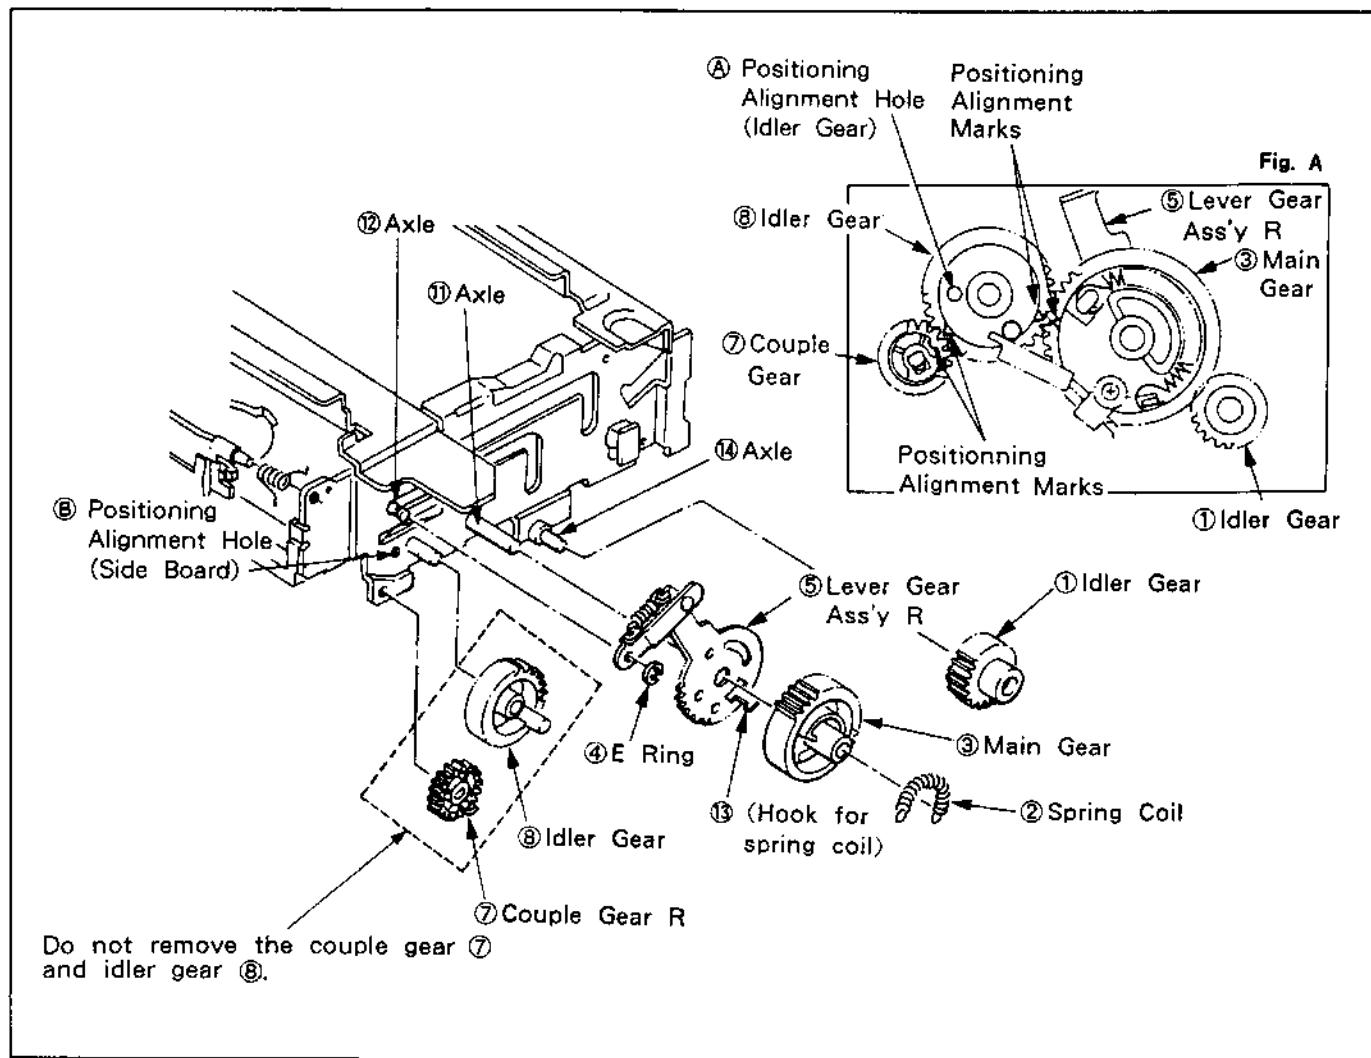


Fig. 2-2-3. Cassette Drive Gears (Right Side)

## 2-2-4. CASSETTE DRIVE GEAR (LEFT) (See Fig. 2-2-4)

### 1. Removal



- 1) Remove the COMPL CASSETTE MECHANISM as instructed in 2-2-1.
- 2) Remove the E ring ②.
- 3) Open the hook ③, then remove the LEVER GEAR ASS'Y L ④. Take care not to open the hook ③ too much, otherwise it may get deformed or broken. If it does, replace it.
- 4) Remove the SPRING COIL ⑤ from the LEVER GEAR ASS'Y L ④.

### 2. Remounting

- 1) Apply grease to the axle ⑨ and shaft ⑩.
- 2) Align with the COUPLE GEAR L ⑬ and the IDLER GEAR L ⑥ as shown in Fig. B.
- 3) Hook the SPRING COIL ⑤ to the LEVER GEAR ASS'Y L ④.
- 4) Mount the LEVER GEAR ASS'Y L ④ onto the axle ⑨ and the shaft ⑩. Align with the IDLER GEAR L ⑥ as shown in Fig. B.
- 5) Mount the COMPL CASSETTE MECHANISM onto the chassis as instructed in 2-2-1.

**Note:** The end of the DOOR OPEN LEVER ⑦ leans against the front side of the CASSETTE DOOR ⑪ as shown in Fig. A.

Positioning Alignment Marks

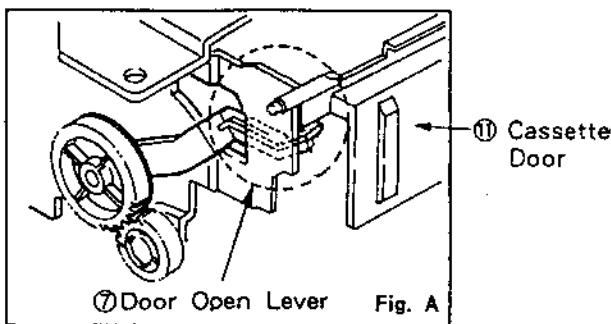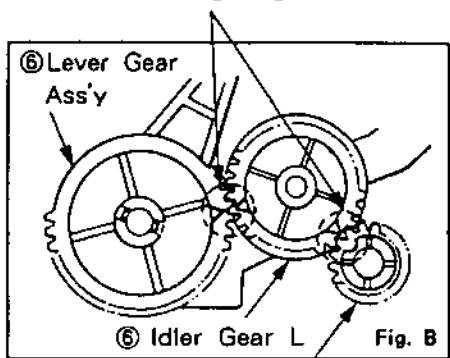

⑬ Couple Gear L

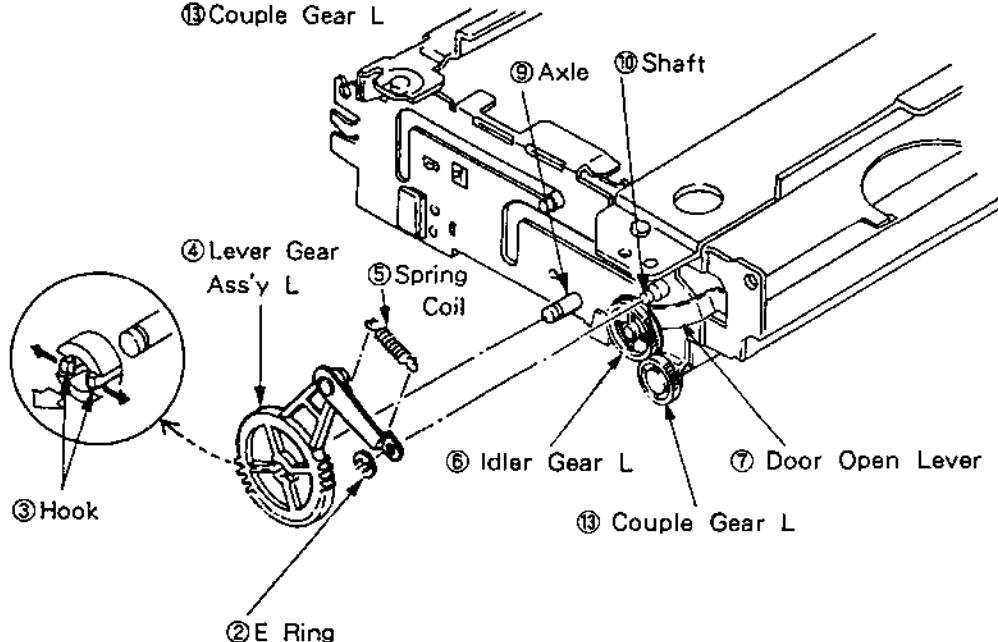


Fig. 2-2-4. Cassette Drive Gears (Left Side)

## 2-2-5. FL START SWITCH (See Fig. 2-2-5.)

### 1. Removal

- 1) Remove the COMPL CASSETTE MECHANISM as instructed in 2-2-1.
- 2) Remove the screw ①.
- 3) Remove the lead wire of the FL START SWITCH ②.

### 2. Remounting

- 1) Solder the lead wire to the FL START SWITCH ② terminal.
- 2) Align the FL START SWITCH ② protuberance to the hole ⑤, then mount it onto the GEAR BRACKET ASS'Y ③ with the screw ①. Do it so that the FL START SWITCH ② is turned ON by holding the pin ④ of IDLER GEAR in the EJECT completed mode.
- 3) Mount the COMPL CASSETTE MECHANISM as instructed in 2-2-1.

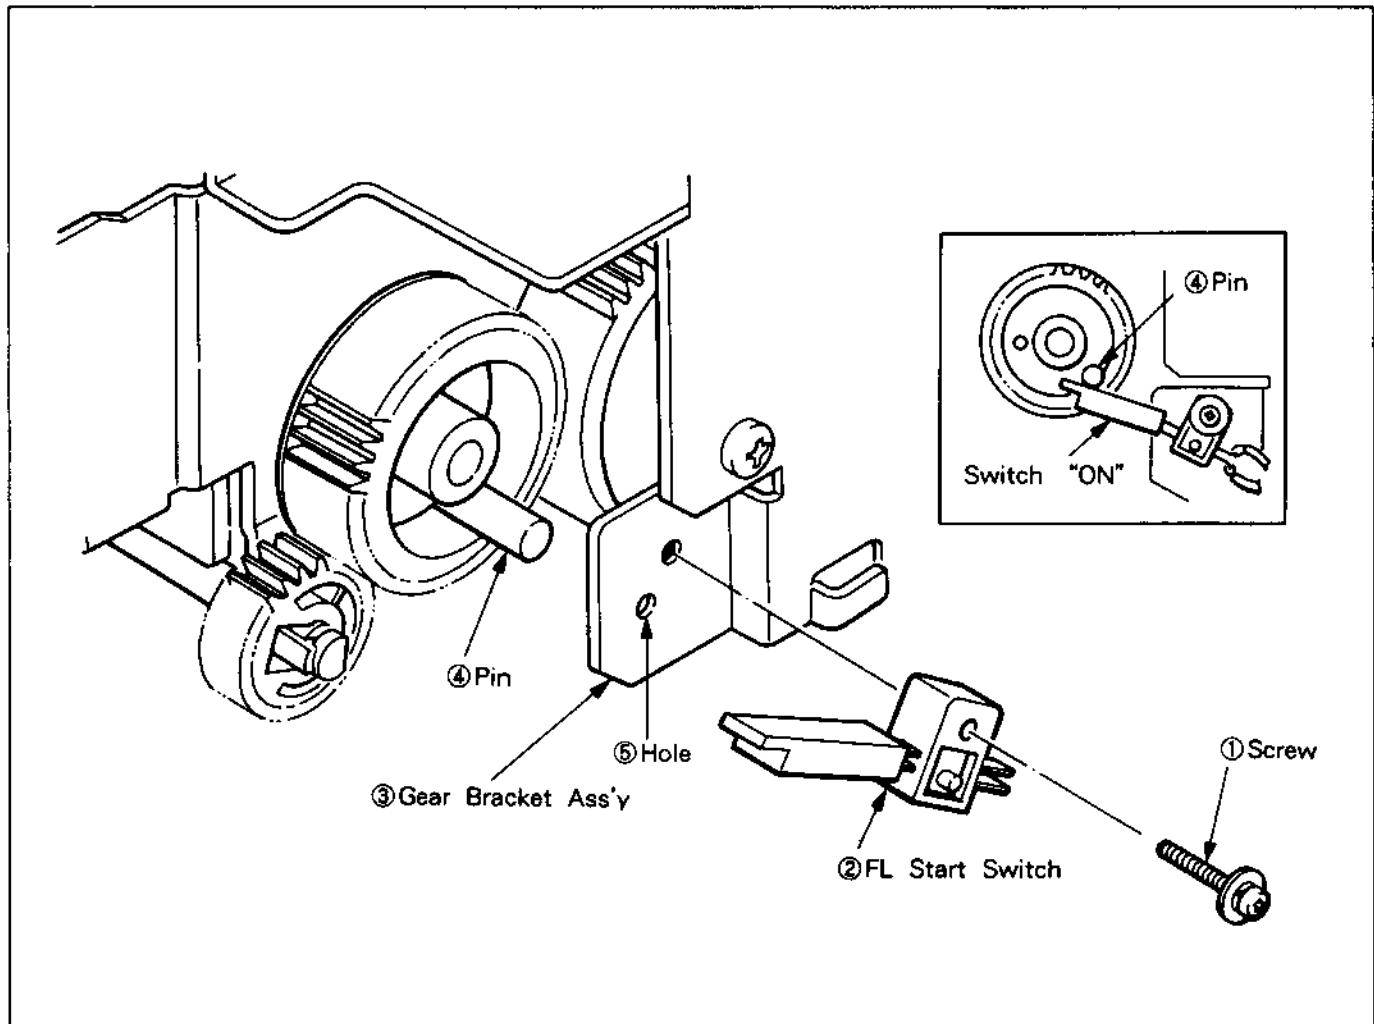


Fig. 2-2-5. FL Start Switch

## 2-2-6. T-TOP SENSOR, T-END SENSOR (See Fig. 2-2-6.)

### 1. Removal

- 1) Remove the COMPL CASSETTE MECHANISM as instructed in 2-2-1.
- 2) When removing the T-TOP SENSOR, remove the GEAR BRACKET ASS'Y as instructed in 2-2-2.
- 3) Unhook the hook ① as instructed in Fig. A, then remove the LID ②. Take care not to push the hook ① too much, otherwise it may be deformed or broken.
- 4) Remove the photo transistors ③, then remove the lead wires.

**Note:** Mounting position of the transistor holder on the T-END SENSOR side is precisely adjusted at the factory, so never remove it from the COMPL CASSETTE MECHANISM.

### 2. Remounting

- 1) Solder the brown lead wire to the emitter side, and the red lead wire to the collector side of the T-TOP SENSOR photo transistor ③. Solder the orange lead wire to the emitter side, and the yellow lead wire to the collector side of the T-END SENSOR photo transistor.
- 2) Mount the photo transistors ③ onto their respective holders.
- 3) Mount the LID ② and fix it with the hook ①.
- 4) Mount the GEAR BRACKET ASS'Y as instructed in 2-2-2.
- 5) Mount the COMPL CASSETTE MECHANISM as instructed in 2-2-1.

Do not remove the holder from the compl cassette mechanism.

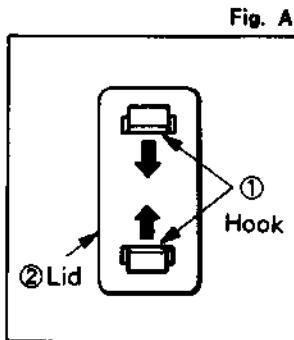
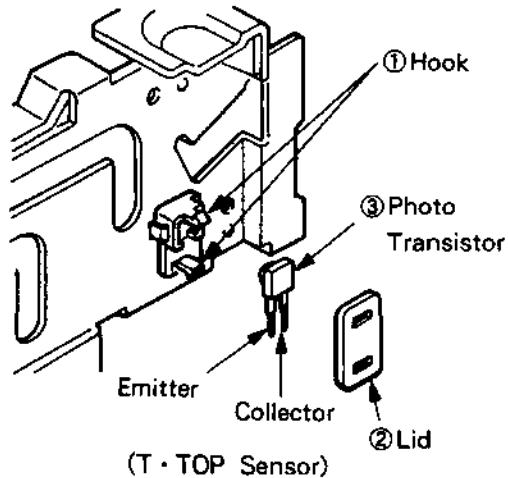
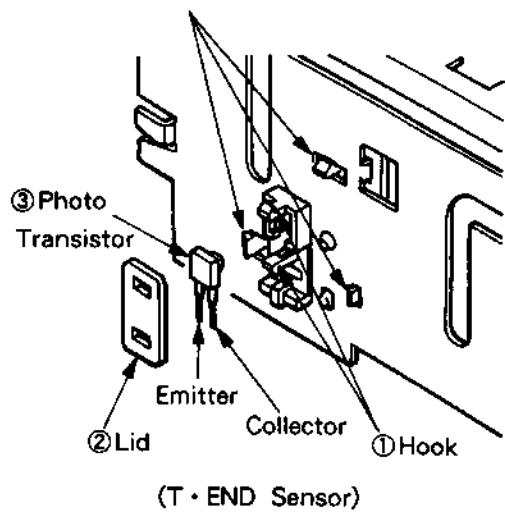


Fig. 2-2-6. T TOP Sensor & T END Sensor

## 2-3. COMPL HOLDER MOTOR (LOADING MOTOR BLOCK)

### 2-3-1. COMPL HOLDER MOTOR

#### 1. Removal

- 1) Remove the PRE-AMP UNIT and the PRE-AMP BRACKET as instructed in 2-1.
- 2) Remove the COMPL CASSETTE MECHANISM as instructed in 2-2-1.
- 3) Remove the two screws ① and the other one ⑩, then remove the COMPL HOLDER MOTOR ②. (See Fig. 2-3-1.)

#### 2. Remounting

- 1) Set the mechanism chassis to the INITIAL mode. In this mode, look at the mechanism chassis INITIAL mode positioning alignment holes ③ just from above and align the MAIN CAM ④ and MODE CAM ⑤ INITIAL mode positioning alignment holes as shown in Fig. A.

- 2) Set the COMPL HOLDER MOTOR ② to the INITIAL mode with the mode selector (VHJ-0050). In this position, the FRONT LOADING GEAR △ positioning alignment mark ⑥ is aligned with the MOTOR HOLDER INITIAL mode positioning alignment mark ⑦. (See Fig. B.)
- 3) Align the ROTARY SWITCH (mode detector switch) ⑧ with the INITIAL mode positioning alignment mark ⑨. (See Fig. C.)
- 4) Line up COMPL HOLDER MOTOR ② with PROTUBERANCE ⑪ and POSITIONING ALIGNMENT HOLE ⑫, and attach with two screws ① and one screw ⑩. (Refer to Fig. 2-3-1.)
- 5) Mount the COMPL CASSETTE MECHANISM as instructed in 2-2-1.
- 6) Mount the PRE-AMP UNIT and the PRE-AMP BRACKET as instructed in 2-1.

**Note:** Normal mechanism operation cannot be achieved if INITIAL mode positioning of the MAIN CAM ④, the MODE CAM ⑤ and the ROTARY SWITCH (mode detector switch) ⑧ are not performed precisely.

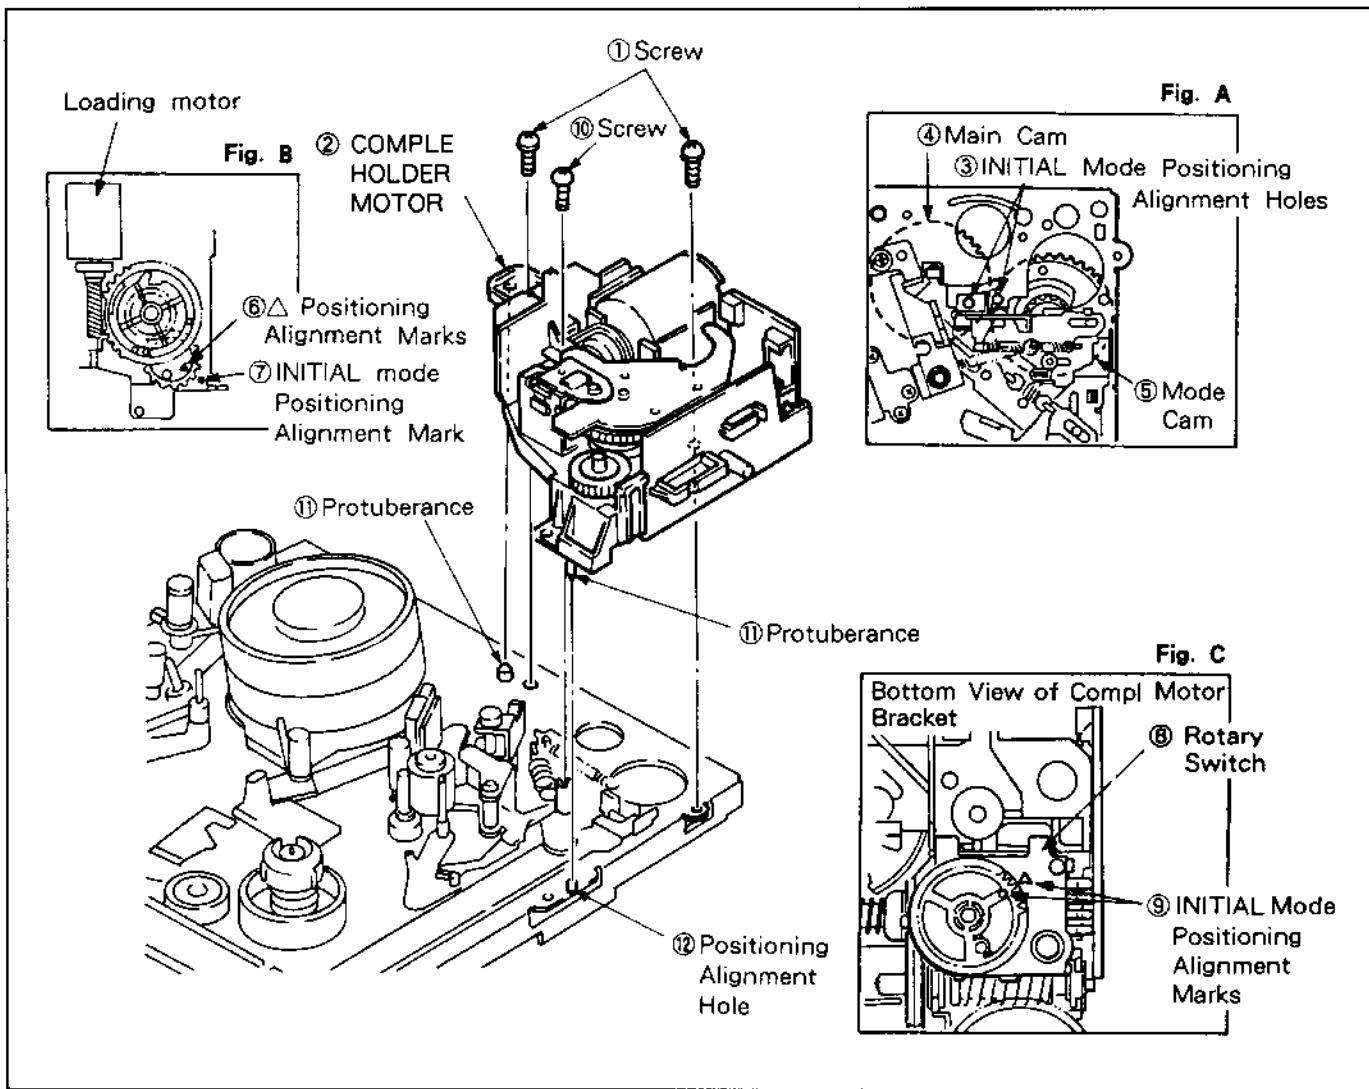


Fig. 2-3-1. Compl Holder Motor

## 2-3-2. LOADING MOTOR (See Fig. 2-3-2.)

### 1. Removal

LOADING MOTOR can be replaced after LOADING MOTOR BLOCK unit has been removed by referring to 2-3-1. The 1991 version of the mechanism allows LOADING MOTOR itself to be replaced without removing CASSETTE HOLDER BLOCK and LOADING MOTOR BLOCK. The following describes this procedure.

- 1) Use MODE SELECTOR (VHJ-0050) to set the mechanism to the INITIAL mode.
- 2) Remove the connector for the DEW SENSOR connected to the MC-3 board ①.
- 3) Remove the three screws ② and remove the HOLDER BRACKET ④ with the FRONT WORM ASS'Y ③ still attached.
- 4) Remove the DAMPER ⑥ attached to the pulley of the LOADING MOTOR ⑤.
- 5) Remove the FRONT HELICAL GEAR ⑦ and WASHER ⑧.
- 6) Remove soldered LEAD WIRE from the terminal of LOADING MOTOR ⑤.
- 7) Remove the LOADING BELT ⑨.
- 8) Remove the LOADING MOTOR ⑤ by lifting up from the back terminal side.

### 2. Remounting

Before attaching the LOADING MOTOR ⑤ to the MOTOR HOLDER ⑩, confirm the DAMPER ⑪ and DAMPER ⑫ shown in Fig. 2-3-2. are in the proper position on the MOTOR HOLDER ⑩.

- 1) The LOADING MOTOR ⑤ puts the PROTUBERANCE ⑬ in the slit ⑭ of the MOTOR HOLDER ⑩.  
Further, mount the tap hole ⑯ at two points of the front pulley side so that it is secured to the PROTUBERANCE ⑭ of the MOTOR HOLDER at two points.
- 2) Solder the lead wire from the MC-3 board to the LOADING MOTOR ⑤ terminal. (Solder the red lead wire to the positive terminal side.)
- 3) Hang the LOADING BELT ⑨ on the pulley.
- 4) After hanging the LOADING BELT ⑨ on the pulley, confirm that the mechanism unit is in the INITIAL mode. The INITIAL mode is indicated by Fig. A of Fig. 2-3-2., and is the position in which INITIAL mode positioning alignment holes of the MAIN CAM ⑮ and MODE CAM ⑯ are lined up with the THROUGH HOLE ⑰ of the MOTOR HOLDER. If the INITIAL mode is not selected, adjust with the MODE SELECTOR (VHJ-0050).
- 5) As shown in Fig. B, confirm the positions of the △ INITIAL mode positioning alignment mark ⑯ on the FRONT LOAD GEAR and INITIAL mode positioning alignment mark ⑯ position of the MOTOR HOLDER and the position relationship of the RACK ⑰.
- 6) Apply a light coat of grease to the entire sides of the AXLE ⑮ and FRONT HELICAL GEAR ⑦.
- 7) Attach the FRONT HELICAL GEAR ⑦ and WASHER ⑧ to the AXLE ⑮. As shown in Fig. C, the FRONT HELICAL GEAR ⑦ is attached so that the indent on the side is inside PIN ⑯ of the FRONT LEVER ASS'Y.
- 8) Attach the DAMPER ⑥ to the LOADING MOTOR ⑤ pulley.
- 9) The HOLDER BRACKET ④ is attached by engaging the FRONT WORM ASS'Y ③ with the LOADING MOTOR ⑤ pulley, and held in place with three screws ②.
- 10) Attach the connector of the DEW SENSOR ⑩ to the MC-3 board ① and return the mechanism to the eject completion using MODE SELECTOR.

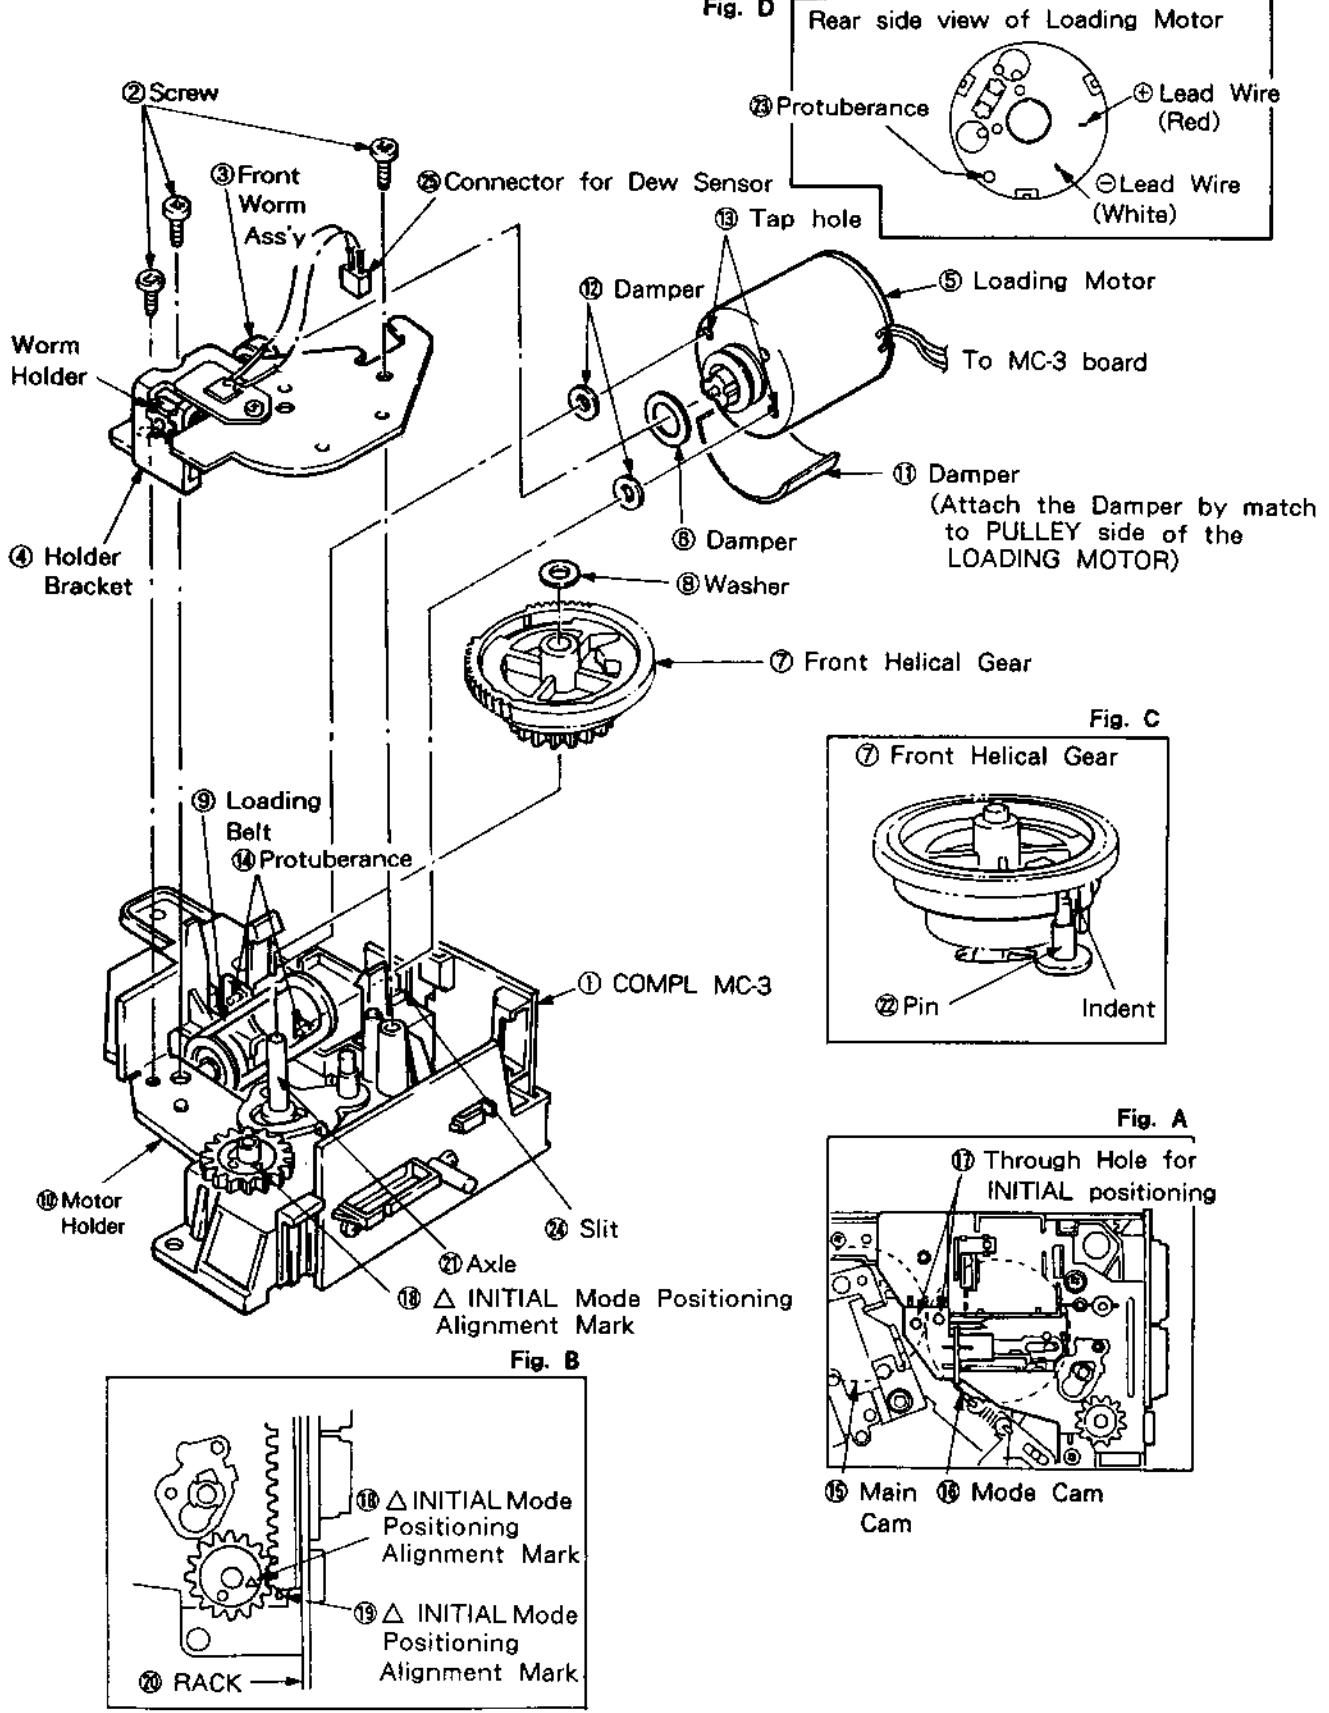


Fig. 2-3-2. Loading Motor

## 2-4. TAPE LOADING MECHANISM

### 2-4-1. MAIN PARTS OF THE TAPE LOADING MECHANISM (See Fig. 2-4-1.)

#### 1. Removal

- 1) Remove connectors from the DRUM MOTOR board (SV-5).
- 2) Remove the three screws ①, then remove the REINFORCE BRACKET ②.
- 3) Remove the two special washers ③, then remove the LOAD RACK ④.
- 4) Remove the special washer ⑤, then remove the CAM LOAD LEVER ASS'Y ⑥.
- 5) Remove the special washer ⑦, then remove the MAIN CAM ⑧.
- 6) Unhook the LOAD GEAR T hook ⑩, then remove the LOAD GEAR T ⑨ as shown in Fig. A, with the SPRING COIL ⑪ and the LOAD LEVER ASS'Y T ⑫ attached to it.
- 7) Unhook the LOAD GEAR S hook ⑭, then remove the LOAD GEAR S ⑬ as shown in Fig. B, with the SPRING COIL ⑮ and the LOAD LEVER ASS'Y S ⑯ attached to it.

**Note:** Take care not to open the LOAD GEAR hooks too much, otherwise they may be deformed or broken. If they are, replace them.

#### 2. Remounting

- 1) Apply grease to the hole ⑪ of the LOAD LEVER ASS'Y S ⑯, as shown in Fig. B.
- 2) Apply grease to the hole ⑫ of the LOAD LEVER ASS'Y T ⑯ as shown in Fig. A, and to the sections of the LOAD GEAR T ⑨ as indicated with an arrow in Fig. C.
- 3) Apply grease to GROOVE 1, GROOVE 2 and to the outer side of the MAIN CAM ⑧, shown in Fig. E.
- 4) Apply grease to the three oval holes of the LOAD RACK ④ as shown in Fig. D.
- 5) Apply grease to the outer surface of axles ⑩, ⑪, ⑫ and ⑯.
- 6) After assembling as shown in Fig. B, mount the LOAD GEAR S ⑬ onto the axle ⑩. Insert the ROLLER BASE S pin ⑯ into the hole ⑪ of the LOAD LEVER ASS'Y S.
- 7) After assembling as shown in Fig. A, mount the LOAD GEAR T ⑨ onto the axle ⑫. When doing so, align the INITIAL mode positioning alignment holes ⑯ of the LOAD GEAR S ⑬ and the LOAD GEAR T ⑨ to the INITIAL mode position. Insert the ROLLER BASE T pin ⑯ into the hole ⑫ of the LOAD LEVER ASS'Y T ⑯.
- 8) Mount the MAIN CAM ⑧ onto the axle ⑫. At that time, make sure that the INITIAL mode positioning alignment holes ⑯ of the MAIN CAM ⑧ and the MODE CAM ⑯ match the INITIAL mode positioning alignment holes ⑯ of the MECHANISM CHASSIS. Also check to be sure that the pin ⑯ of the CAM PINCH LEVER ASS'Y is put in the GROOVE 1 of the MAIN CAM as shown in Fig. E.
- 9) Mount the special washer ⑦ onto the axle ⑫.
- 10) Mount the CAM LOAD LEVER ASS'Y ⑥ onto the axle ⑫. Insert the pin ⑯ into the MAIN CAM GROOVE 2 as shown in Fig. E.
- 11) Mount the special washer ⑤ onto the axle ⑫.
- 12) Set the INITIAL mode positioning alignment marks ⑯ of the LOAD RACK ④ and the LOAD GEAR T ⑨ to the INITIAL mode position, and mount onto the two axles ⑩. Insert the CAM LOAD LEVER ASS'Y pin ⑯ into the hole ⑯.
- 13) Mount the two special washers ③ onto the two axles ⑩.
- 14) Mount the REINFORCE BRACKET ② with the three screws ①.
- 15) Insert the connector into the DRUM MOTOR board (SV-5).
- 16) Confirm that loading and unloading are performed smoothly.

**Note:** Be sure to perform INITIAL mode positioning of cams and gears precisely.

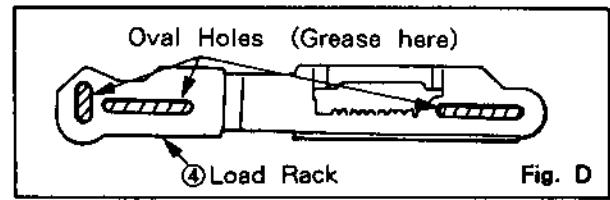


Fig. D






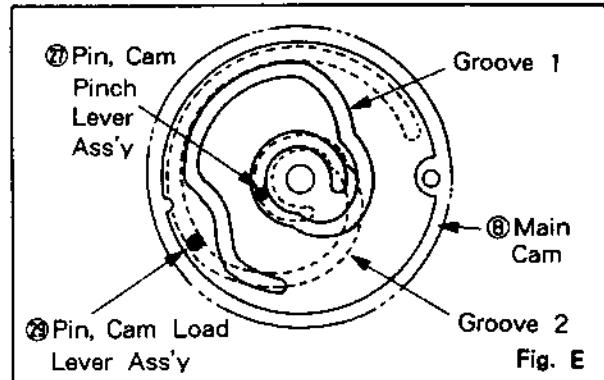


Fig. E

② INITIAL mode Positioning Alignment Holes

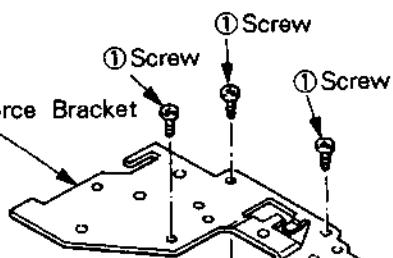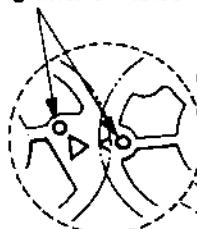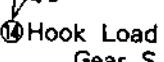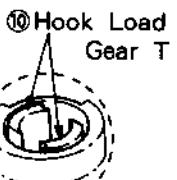

② Reinforce Bracket

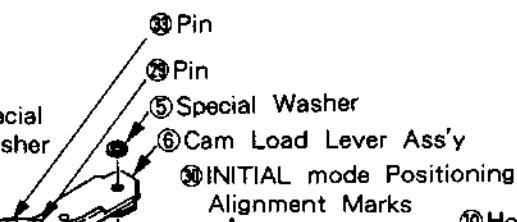

⑰ INITIAL mode Positioning Alignment Holes


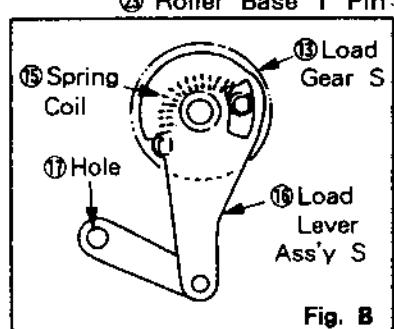


Fig. B

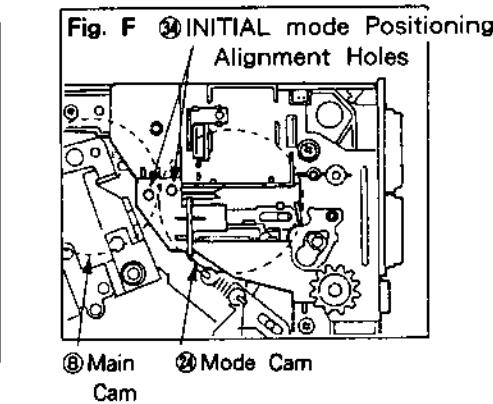

⑥ Main Cam    ⑦ Mode Cam

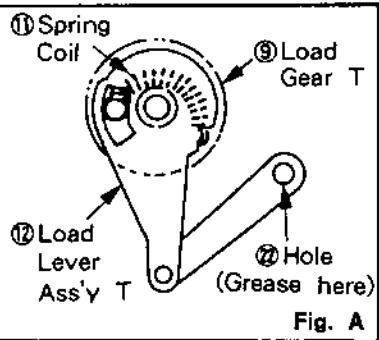


Fig. A

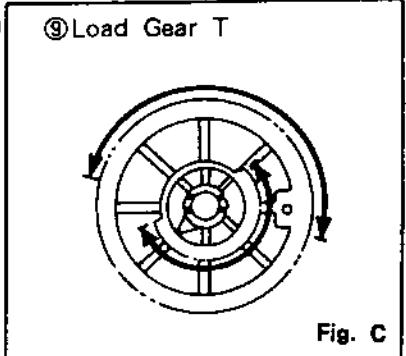


Fig. C

Fig. 2-4-1. Loading Mechanism Main Parts

## 2-4-2. MODE CAM (See Fig. 2-4-2.)

### 1. Removal

- 1) Set the INITIAL mode with the mode selector (VHJ-0050).
- 2) Remove the REINFORCE BRACKET as instructed in 2-4-1.
- 3) Remove the two special washers ①, then remove the CAM PLATE SLIDE ASS'Y ②.
- 4) Remove the MODE CAM ③.

### 2. Remounting

- 1) Referring to 2-4-1., confirm that the MAIN CAM is in the INITIAL mode position.
- 2) In case the MAIN CAM is misplaced, use the mode selector (VHJ-0050) to align the MAIN CAM positioning hole with the chassis INITIAL mode position hole (refer to 2-4-1. for the INITIAL mode position). Since the ROTARY SWITCH (mode detector switch) does not rotate, the mode selector indicator lamp will not show the correct mode.

- 3) Align the ROTARY SWITCH (mode detector switch) ④ with the INITIAL mode positioning alignment mark ⑤ as shown in Fig. A.
- 4) Mount the MODE CAM ③ onto the axle ⑥. Do it so that the SLIDE CAM ASS'Y pin ⑪ is placed in the GROOVE 3 as shown in Fig. B.
- 5) Mount the CAM PLATE SLIDE ASS'Y ② onto the axles ⑥ and ⑦. Do it so that the pin ⑧ gets into the GROOVE 4 of the MODE CAM as shown in Fig. B, and the point of the bent-up part ⑨ into the ACT PLATE SLIDE ASS'Y hole ⑩.
- 6) Mount the two special washers ① onto the axles ⑥ and ⑦.
- 7) Mount the REINFORCE BRACKET as instructed in 2-4-1.

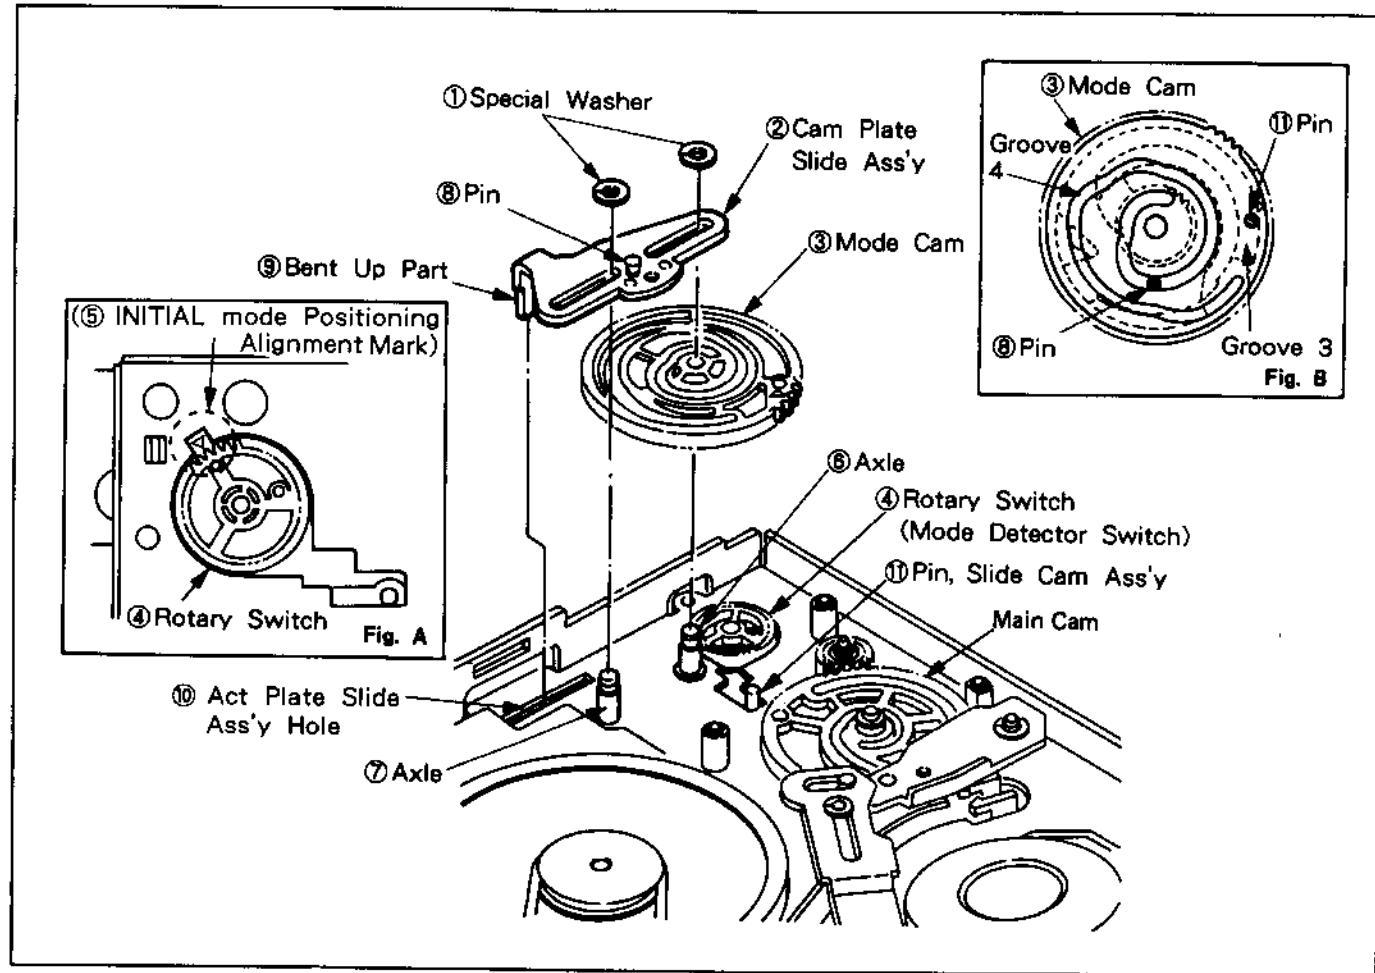


Fig. 2-4-2. Mode Cam

## 2-5. COMPL HEAD BRACKET (ACE HEAD) (See Fig. 2-5-1.)

### 1. Removal

- 1) Remove the special nut ②.
- 2) Remove the SLEEVE ③, the COMPL HEAD BRACKET ① and the SPRING COIL ④, in that order.

**Note:** Take care not to scratch or soil the ACE head surface.

### 2. Remounting

- 1) Apply grease to the axle ⑥ as shown in Fig. A.
- 2) Apply grease to the spot where the COMPL HEAD BRACKET ① makes contact with the STOPPER ⑦.
- 3) Mount the SPRING COIL ④ and the COMPL HEAD BRACKET ①, in that order, onto the axle ⑥. Hook one end of the SPRING COIL ④ to the notch ⑤, and the other end to the COMPL HEAD BRACKET, so that the COMPL HEAD BRACKET is pressed against the STOPPER ⑦.
- 4) Mount the special nut ② onto the axle ⑥ through the SLEEVE ③.
- 5) Clean the ACE head surface with a chamois leather moistened with methyl alcohol.
- 6) Perform ACE head adjustment as instructed in 5-4.

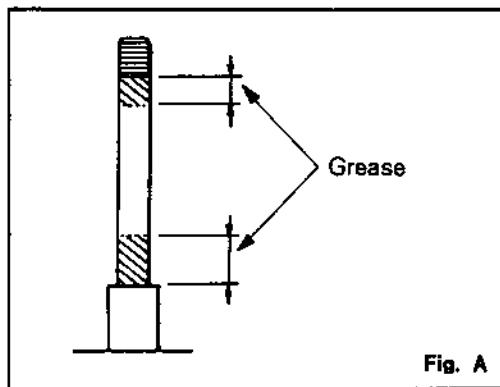
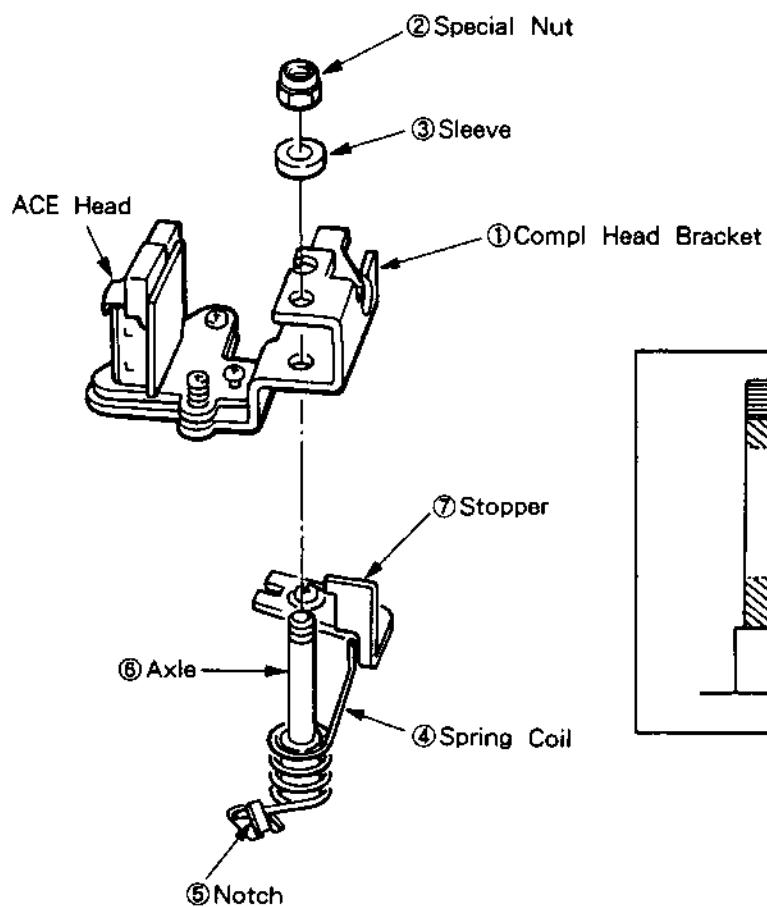


Fig. 2-5-1. Compl Head Bracket (ACE Head)

## 2-6. PINCH ROLLER PRESSURE MECHANISM (See Fig. 2-6-1.)

### 1. Removal

- 1) Remove the COMPL CASSETTE MECHANISM as instructed in 2-2-1.
- 2) Remove the COMPL HEAD BRACKET as instructed in 2-5.
- 3) Remove the PINCH SPRING COIL ①.
- 4) Remove the special washer ②, then remove the PINCH LEVER ASS'Y ③.
- 5) Remove the REV GUIDE LEVER SPRING COIL ④.
- 6) Remove REV GUIDE LEVER ASS'Y ⑥ from the hook ⑤ of the plastic bearing on the bottom side. Use a jig VHJ-0073 shown in Fig. 2-6-2 to widen the hook of the plastic bearing. By so doing, the above removal of the REV GUIDE LEVER ASS'Y ⑥ can be made more easily. Care should be taken to avoid pushing the jig VHJ-0073 too much. Pushing it too hard may damage the hook in an extreme case.
- 7) Remove the SLIDE BRAKE SPRING COIL ⑦.
- 8) Remove the special washer ⑧, then remove the PINCH CAM LEVER ASS'Y ⑨.
- 9) Remove the ACT PINCH SLIDE ASS'Y ⑩.

**Note:** If the hook ⑤ of the plastic bearing is damaged, reference should be made to Section 3. "Method of Repairing the Bearing Section of REV GUIDE LEVER ASS'Y".

### 2. Remounting

- 1) Apply grease to pins ⑫/⑬ and axles ⑯/⑰.
- 2) Apply grease to the ACT PINCH SLIDE ASS'Y pin ⑪.
- 3) Set the INITIAL mode with the mode selector (VHJ-0050).
- 4) Mount the ACT PINCH SLIDE ASS'Y ⑩ onto pins ⑫ and ⑬.
- 5) Insert the pin ⑭ of the PINCH CAM LEVER ASS'Y ⑨ into the MAIN CAM ⑪ GROOVE 1, and mount onto the axle ⑯ while inserting the ACT PINCH SLIDE ASS'Y pin ⑪ of the ACT PINCH SLIDE ASS'Y into the hole ⑮.
- 6) Mount the special washer ⑬ onto the axle ⑯.
- 7) Hook the SLIDE BRAKE SPRING COIL ⑦ to the plastic pin ⑯.
- 8) Mount the REV GUIDE LEVER ASS'Y ⑥ to the plastic molding bearing, then fix it with the hook ⑤ at the bottom.
- 9) Hook the REV GUIDE LEVER SPRING COIL ④.
- 10) Mount the PINCH LEVER ASS'Y ③ to the axle ⑯.
- 11) Mount the special washer ⑧ to the axle ⑯.
- 12) Hook the PINCH SPRING COIL ① between the ACT PINCH SLIDE ASS'Y ⑩ and the PINCH LEVER ASS'Y ③.
- 13) Mount the COMPL HEAD BRACKET as instructed in 2-5.
- 14) Mount the COMPL CASSETTE MECHANISM as instructed in 2-2-1.
- 15) Perform ACE head adjustment as instructed in 5-4.


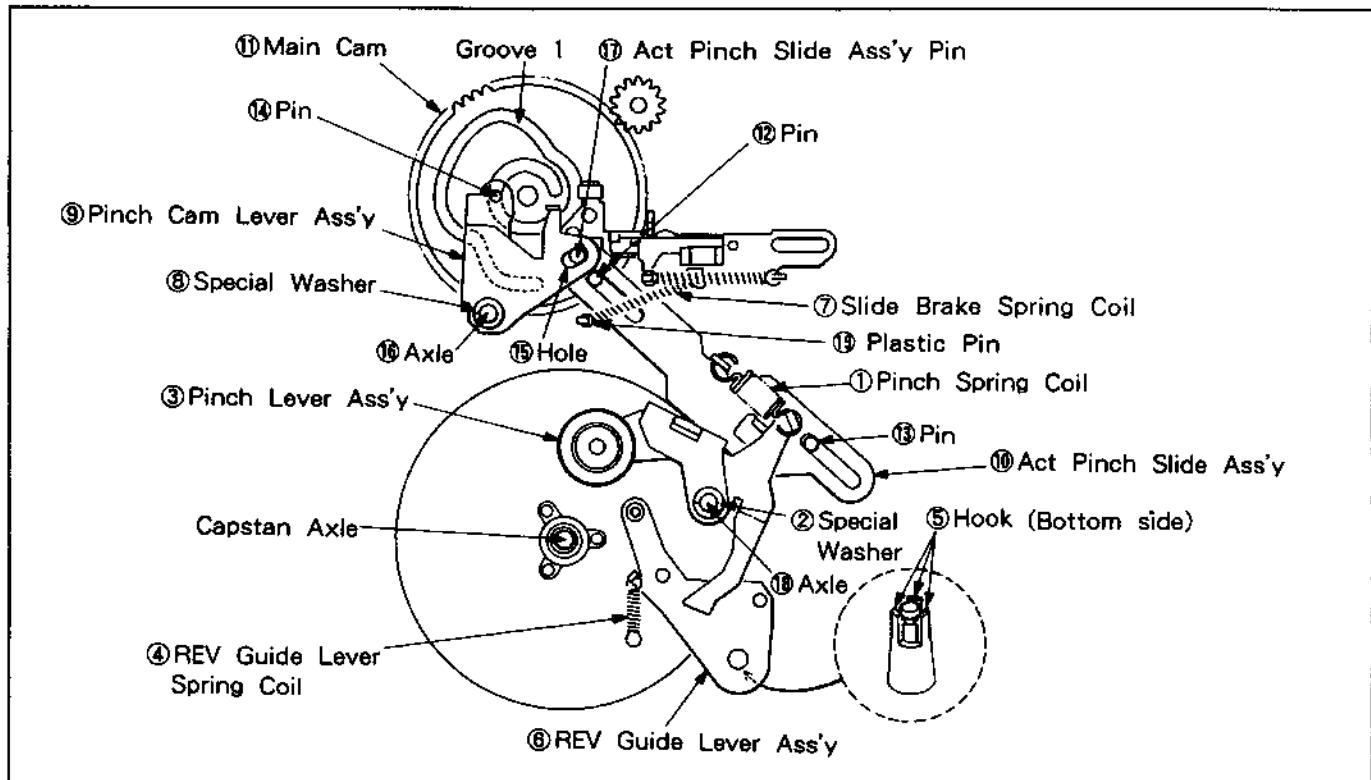


Fig. 2-6-1. Pinch Roller Pressure Mechanism

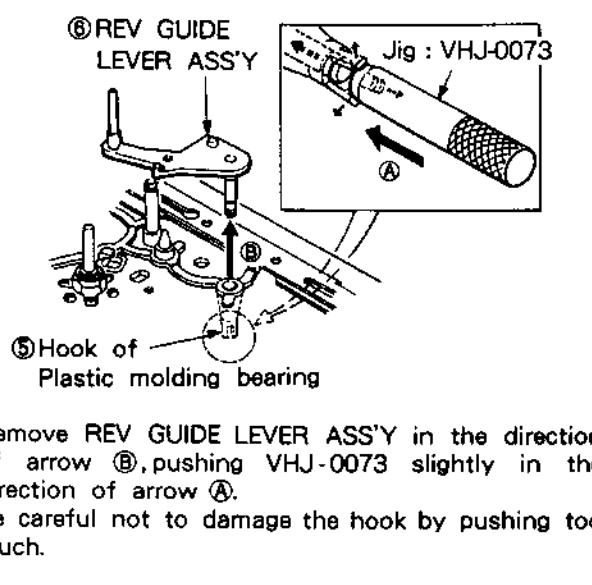

Remove REV GUIDE LEVER ASS'Y in the direction of arrow B, pushing VHJ-0073 slightly in the direction of arrow A.  
Be careful not to damage the hook by pushing too much.

**Fig. 2-6-2. Method of Using the Jig VHJ-0073**


### 3. Method of Repairing the Bearing Section of REV GUIDE LEVER ASS'Y

If the hook of the plastic molding bearing is damaged in the process of removing the REV GUIDE LEVER ASS'Y, proceed with the repair as follows:

- 1) Scrape the broken hook of the bearing section with a cutter knife and flatten it.
- 2) Insert the REV GUIDE LEVER ASS'Y in the bearing and fit a stopper washer in. The special washer to be used must be Part No. 411 109 1605. This stop washer (part No. 411 109 1605) is the same as that used on SUPPLY REEL ASS'Y or TAKE-UP REEL ASS'Y.

Remove the REV GUIDE LEVER ASS'Y toward an arrow B while pushing the jig VHJ-0073 lightly in the direction of an arrow A.

Pushing the jig VHJ-0073 too much may cause hook breakage. Therefore, care should be taken.

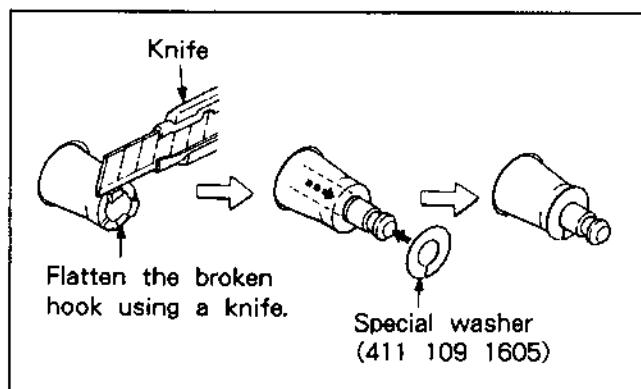

**Fig. 2-6-3. Method of Repairing the Bearing Section of the REV GUIDE LEVER ASSEMBLY**

## 2-7. BRAKE MECHANISM

### 2-7-1. SUB TAKE-UP BRAKE ASS'Y (See Fig. 2-7-1.)

#### 1. Removal

- 1) Remove the COMPL CASSETTE MECHANISM as instructed in 2-2-1.
- 2) Remove the SPRING COIL ①.
- 3) While pushing the hook ② in the direction of arrow, remove the SUB TAKE-UP BRAKE ASS'Y ③.

#### 2. Remounting

- 1) Mount the SUB TAKE-UP BRAKE ASS'Y ③ onto the pin ④. Confirm that the hook ② is firmly hooked to the chassis.
- 2) Fit the SPRING COIL between hooks ⑤ and ⑥.
- 3) Mount the COMPL CASSETTE MECHANISM as instructed in 2-2-1.

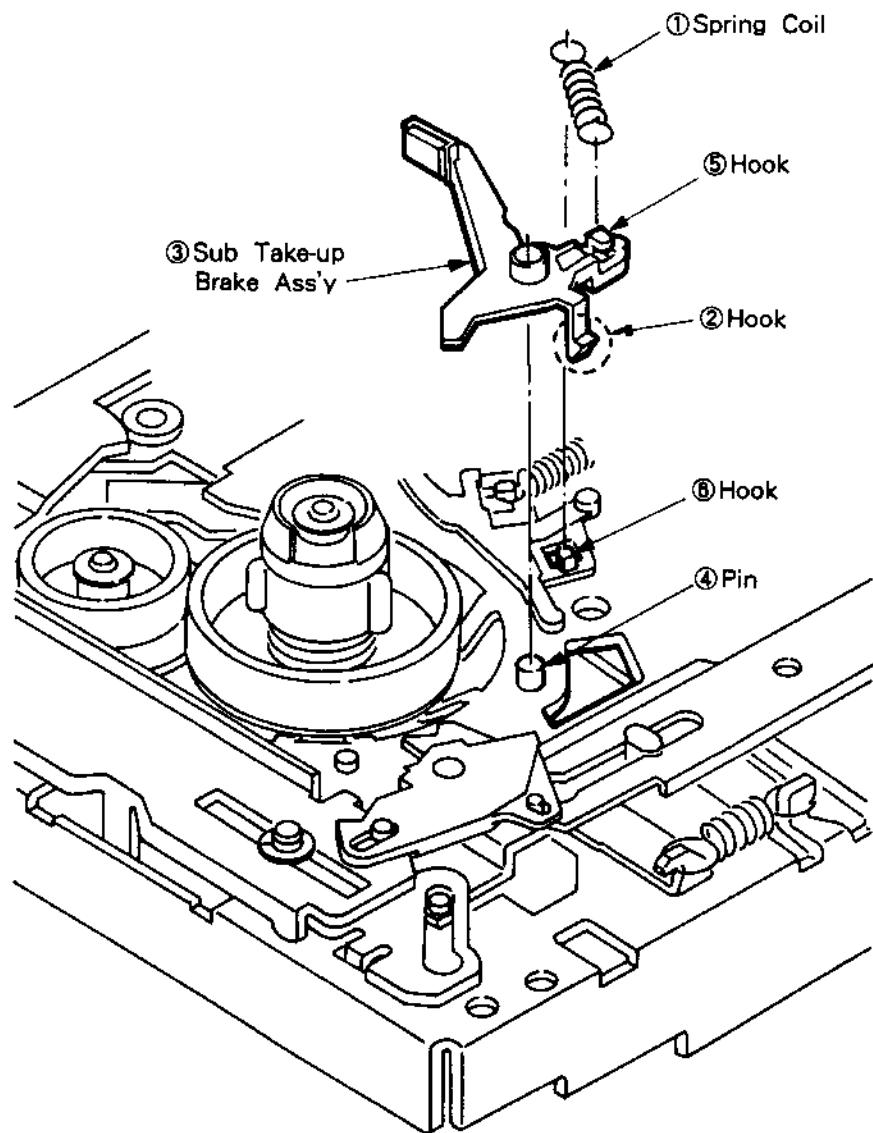


Fig. 2-7-1. Sub Take-up Brake Ass'y

## 2-7-2. SUPPLY BRAKE ASS'Y AND TAKE-UP BRAKE ASS'Y (See Fig. 2-7-2.)

### 1. Removal

- 1) Remove the COMPL CASSETTE MECHANISM as instructed in 2-2-1.
- 2) Remove the SUB TAKE-UP BRAKE as instructed in 2-7-1.
- 3) Remove the special washer ①, then remove the CONTROL PLATE LEVER ②.
- 4) Remove the two special washers ③, then remove the M PLATE SLIDE ASS'Y ④.
- 5) Remove the SPRING COIL ⑤.
- 6) Remove the SUPPLY BRAKE ASS'Y ⑥ and the TAKE-UP BRAKE ASS'Y ⑦.

**Note:** Take care not to soil the brake shoes.

### 2. Remounting

- 1) Apply a thin layer of grease to axles ⑧ and ⑨.

- 2) Mount the TAKE-UP BRAKE ASS'Y ⑦ onto the axle ⑧.
- 3) Mount the SUPPLY BRAKE ASS'Y ⑥ onto the axle ⑨.
- 4) After applying a thin layer of grease to the M PLATE SLIDE ASS'Y ④ as shown in Fig. A, mount it onto the two pins ⑩.
- 5) Mount the two special washers ③ onto the two pins ⑩.
- 6) After applying grease to the CONTROL PLATE LEVER ② as shown in Fig. B, mount it onto the axle ⑪. Insert the pin ⑫ of the ACT PLATE SLIDE ASS'Y into the hole ⑭, and the pin ⑬ of M PLATE SLIDE ASS'Y into the hole ⑮.
- 7) Mount the special washer ① onto the pin ⑫.
- 8) Mount the SUB TAKE-UP BRAKE as instructed in 2-7-1.
- 9) Mount the COMPL CASSETTE MECHANISM as instructed in 2-2-1.

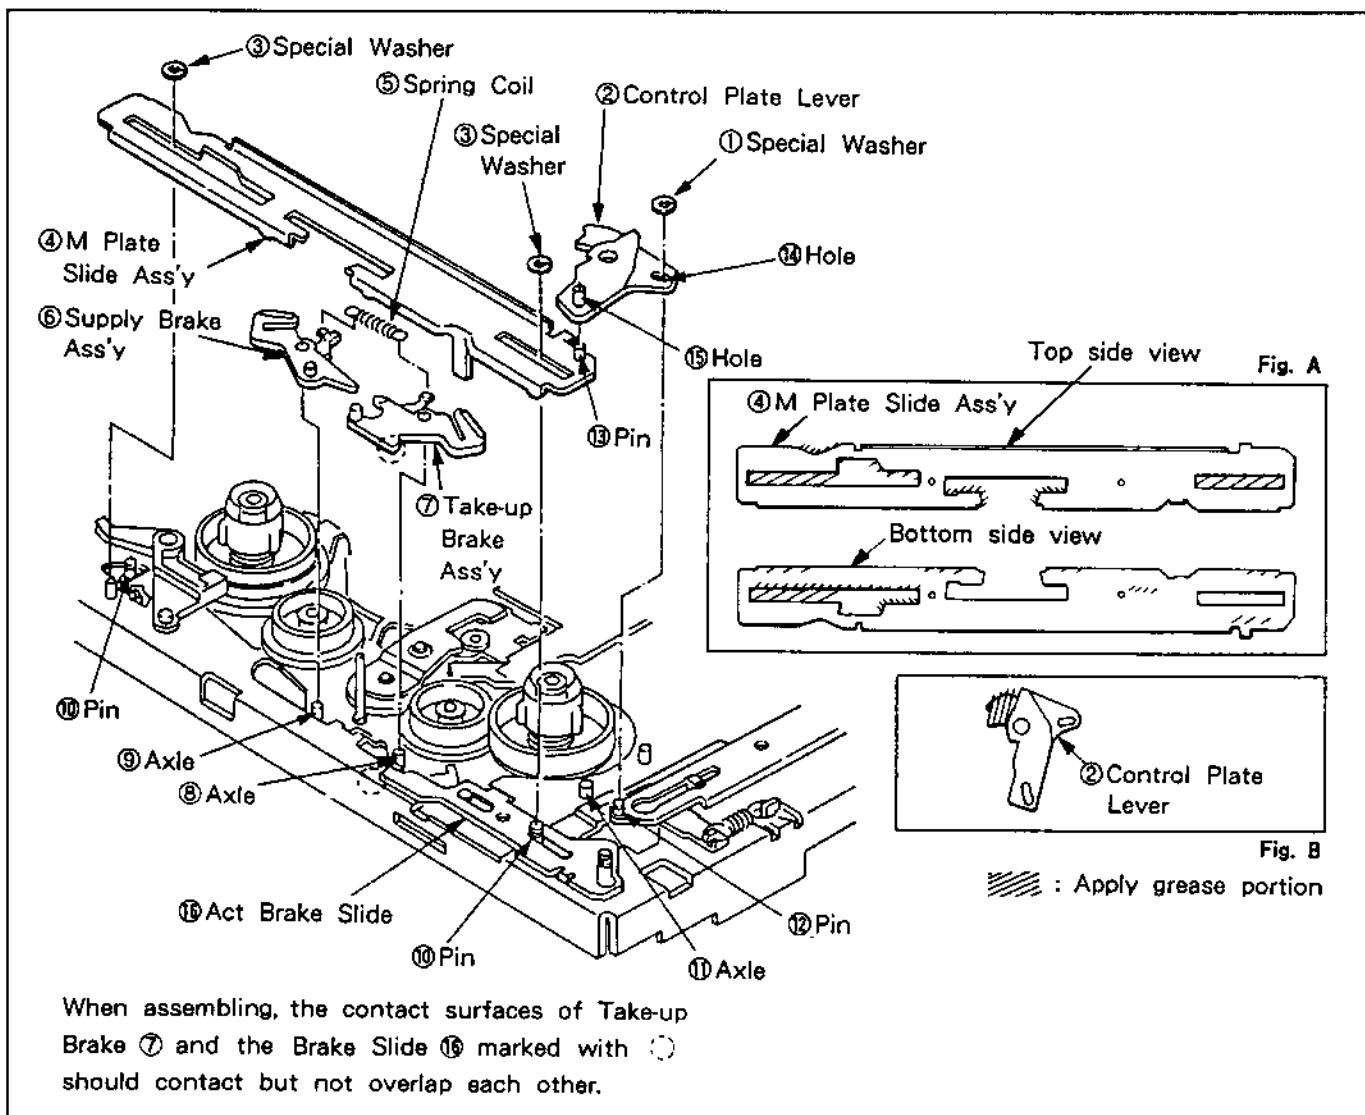


Fig. 2-7-2. Supply Brake Ass'y & Take-up Brake Ass'y

### 2-7-3. TENSION LEVER ASS'Y AND BAND HOLDER ASS'Y (See Fig. 2-7-3.)

#### 1. Removal

- 1) Remove the COMPL CASSETTE MECHANISM as instructed in 2-2-1.
- 2) Remove the SPRING COIL ①.
- 3) Remove the screw ③ fixing the BAND HOLDER ASS'Y ②.
- 4) Push the SUB SUPPLY BRAKE ④ in the direction of the arrow, setting the BAND HOLDER ASS'Y ② free.
- 5) Open the hook ⑤ a little and remove the TENSION LEVER ASS'Y ⑥. Take care not to open the hook ⑤ too much, otherwise it may be deformed or broken.
- 6) Remove the hook ⑦ of the BAND HOLDER ASS'Y.

#### 2. Remounting

- 1) Mount the BAND HOLDER ASS'Y hook ⑦ into the TENSION LEVER ASS'Y hole ⑧.
- 2) Insert the TENSION LEVER ASS'Y axle ⑨ into the hole ⑩ and confirm that the hook ⑤ is hooked.
- 3) While pushing the SUB SUPPLY BRAKE ④ in the direction of arrow A, mount the BAND HOLDER ASS'Y ② with the screw ③.
- 4) Hook the SPRING COIL ① between the hooks ⑪ and ⑫.
- 5) Perform TENSION POLE position adjustment as instructed in 5-3.
- 6) Mount the COMPL CASSETTE MECHANISM as instructed in 2-2-1.

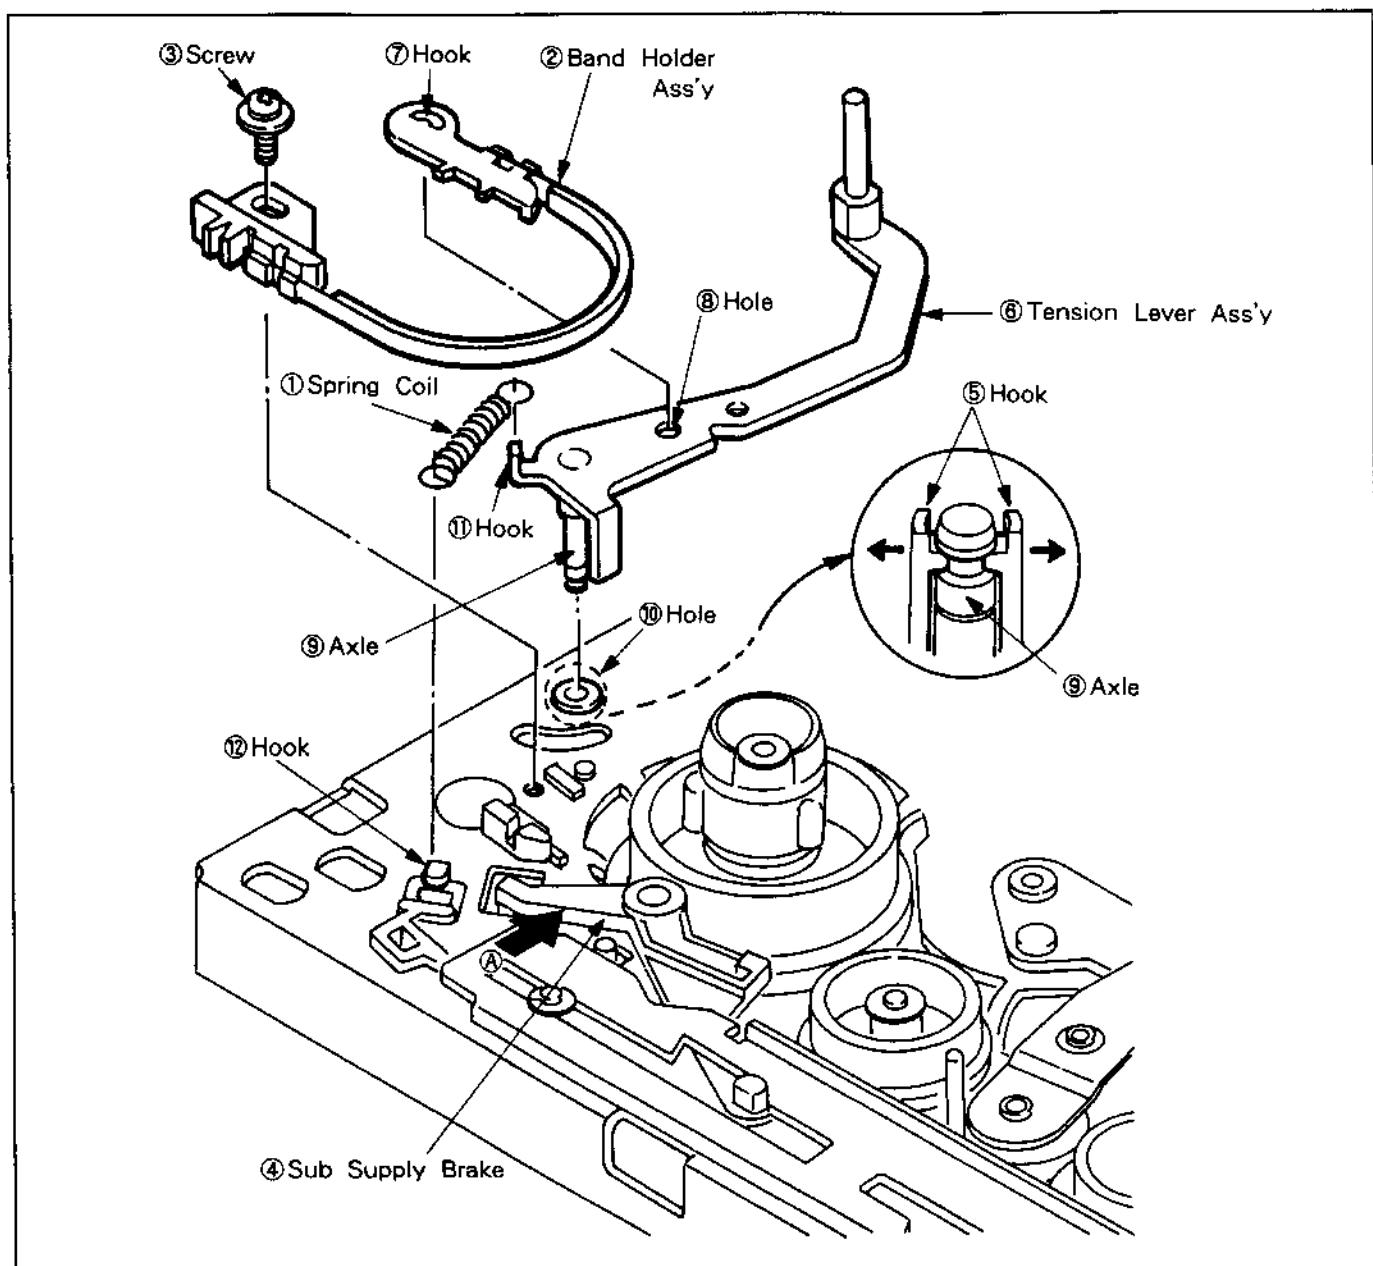


Fig. 2-7-3. Tension Lever Ass'y & Band Holder Ass'y

## 2-7-4. CAPSTAN BRAKE ASS'Y (See Fig. 2-7-4.)

### 1. Removal

- 1) Remove the SPRING COIL ①.
- 2) Unhook the hook ②, then remove the CAPSTAN BRAKE ASS'Y ③.

### 2. Remounting

- 1) Mount the CAPSTAN BRAKE ASS'Y ③ onto the axle ④. Confirm that the hook ② is hooked to the chassis.
- 2) Hook the SPRING COIL ① between hooks ⑤ and ⑥. Fix the hook ⑥ side with adhesive (use an adhesive that allows later detaching).

**Note:** As for the model with two video heads, there are two types: one with the spring coil ① and CAPSTAN BRAKE ASS'Y ③ mounted, and one where these parts are not mounted.

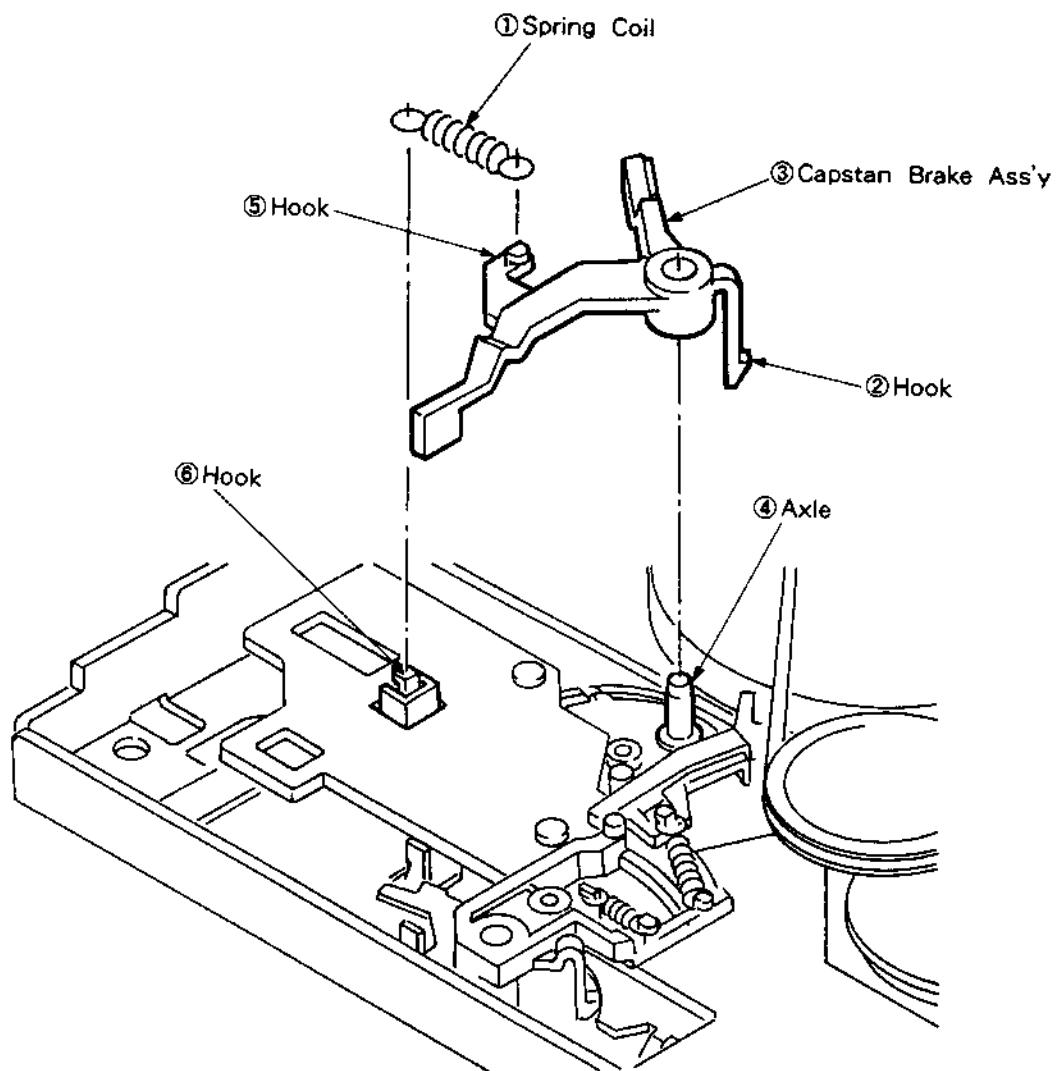


Fig. 2-7-4. Capstan Brake Ass'y

## 2-8. REEL TABLE DRIVE MECHANISM

### 2-8-1. SUPPLY REEL ASS'Y AND SUPPLY REEL GEAR (See Fig. 2-8-1.)

#### 1. Removal

- 1) Remove the COMPL CASSETTE MECHANISM as instructed in 2-2-1.
- 2) Remove the BAND HOLDER ASS'Y as instructed in 2-7-3.
- 3) Set the PLAY mode with the mode selector (VHJ-0050).
- 4) Remove the special washer ①, then remove the SUPPLY REEL ASS'Y ② and the washer ③.
- 5) Remove the special washer ④.
- 6) While pushing the SUPPLY BRAKE ASS'Y ⑤ in the direction of arrow A, remove the SUPPLY REEL GEAR ⑥ and the washer ⑦.

**Note:** Be sure that no dirt gets on the section where both brake shoes make contact.

#### 2. Remounting

- 1) Apply a little oil (less than one drop) to the part of the axle ⑧ indicated by the arrow B, then mount the washer ⑨.
- 2) While pushing the SUPPLY BRAKE ASS'Y ⑤ in the direction of arrow A, mount the SUPPLY REEL GEAR ⑥ onto the axle ⑧.
- 3) Mount the special washer ④ to the axle ⑧.
- 4) Apply 1 drop of oil to the part of the axle ⑨ indicated by the arrow C, then mount the washer ⑩.
- 5) Mount the SUPPLY REEL ASS'Y ② onto the axle ⑨.
- 6) Perform reel table height adjustment as instructed in 5-2-1.
- 7) Mount the special washer ① onto the axle ⑨.
- 8) Mount the BAND HOLDER ASS'Y as instructed in 2-7-3.
- 9) Perform tension pole position adjustment as instructed in 5-3.
- 10) Mount the COMPL CASSETTE MECHANISM as instructed in 2-2-1.

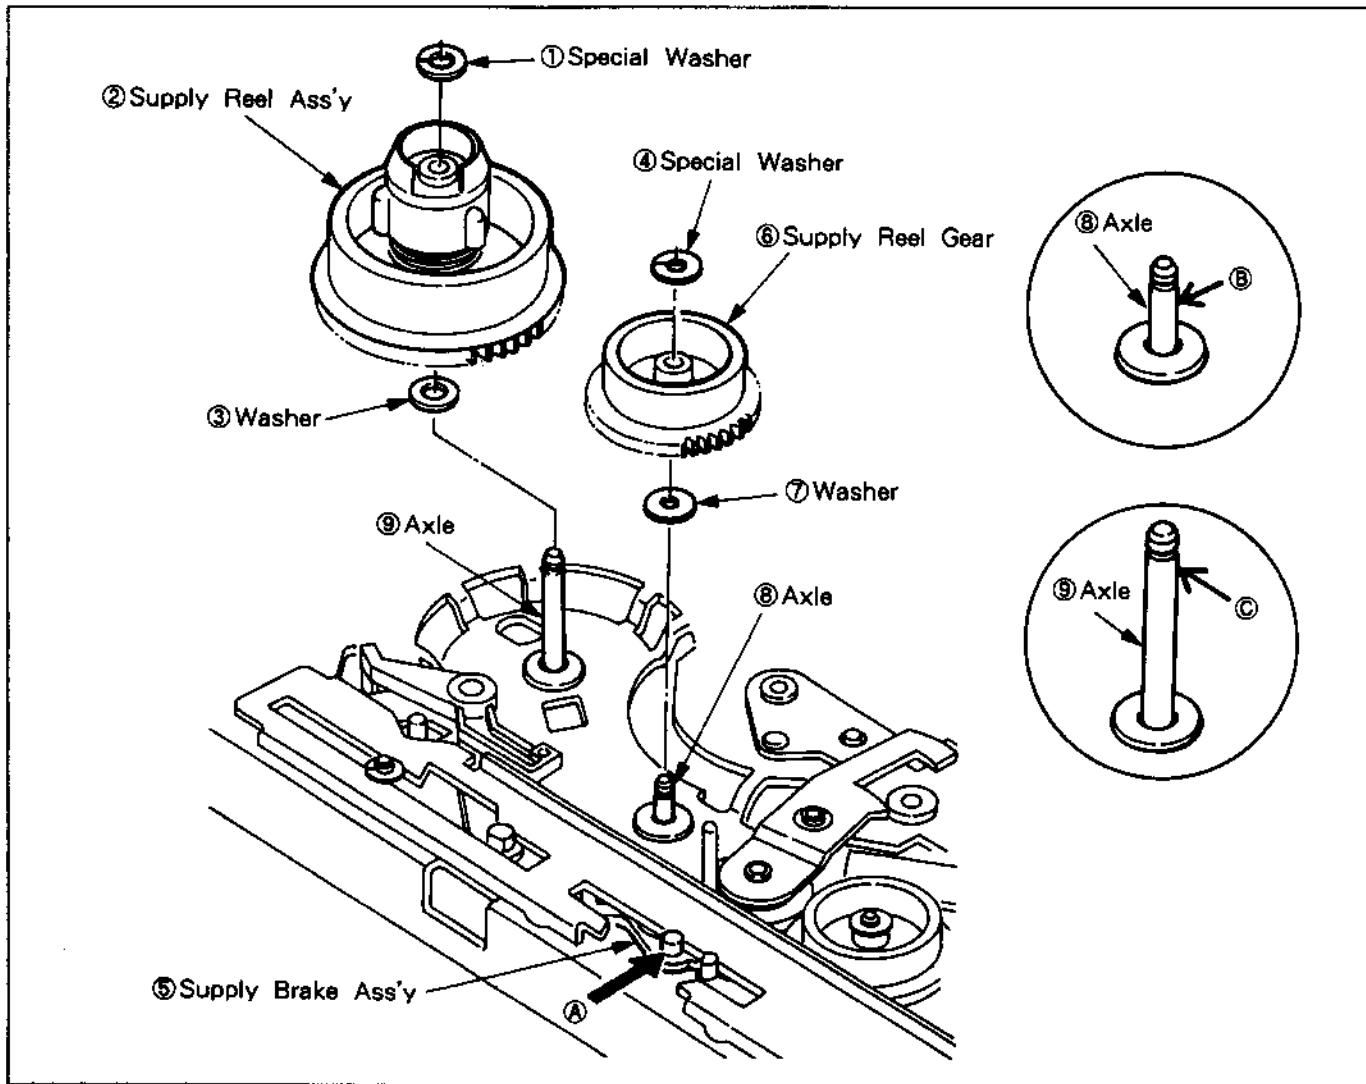


Fig. 2-8-1. Supply Reel Ass'y & Supply Reel Gear

## 2-8-2. TAKE-UP REEL ASS'Y (See Fig. 2-8-2.)

### 1. Removal

- 1) Remove the COMPL CASSETTE MECHANISM as instructed in 2-2-1.
- 2) Remove the special washer ①.
- 3) Push the SUB TAKE-UP BRAKE ASS'Y ② in the direction of arrow A to release the brake, then remove the TAKE-UP REEL ASS'Y ③ and the washer ④.

**Note:** Be sure that no dirt gets on the section where both brake shoes make contact.

### 2. Remounting

- 1) Apply 1 drop of oil to the part of the axle ⑤ indicated by the arrow B, then mount the washer ④.
- 2) While pushing the SUB TAKE-UP BRAKE ASS'Y ② in the direction of arrow A, mount the TAKE-UP REEL ASS'Y ③ onto the axle ⑤.
- 3) Perform reel table height adjustment as instructed in 5-2.
- 4) Mount the special washer ① onto the axle ⑤.
- 5) Mount the COMPL CASSETTE MECHANISM as instructed in 2-2-1.

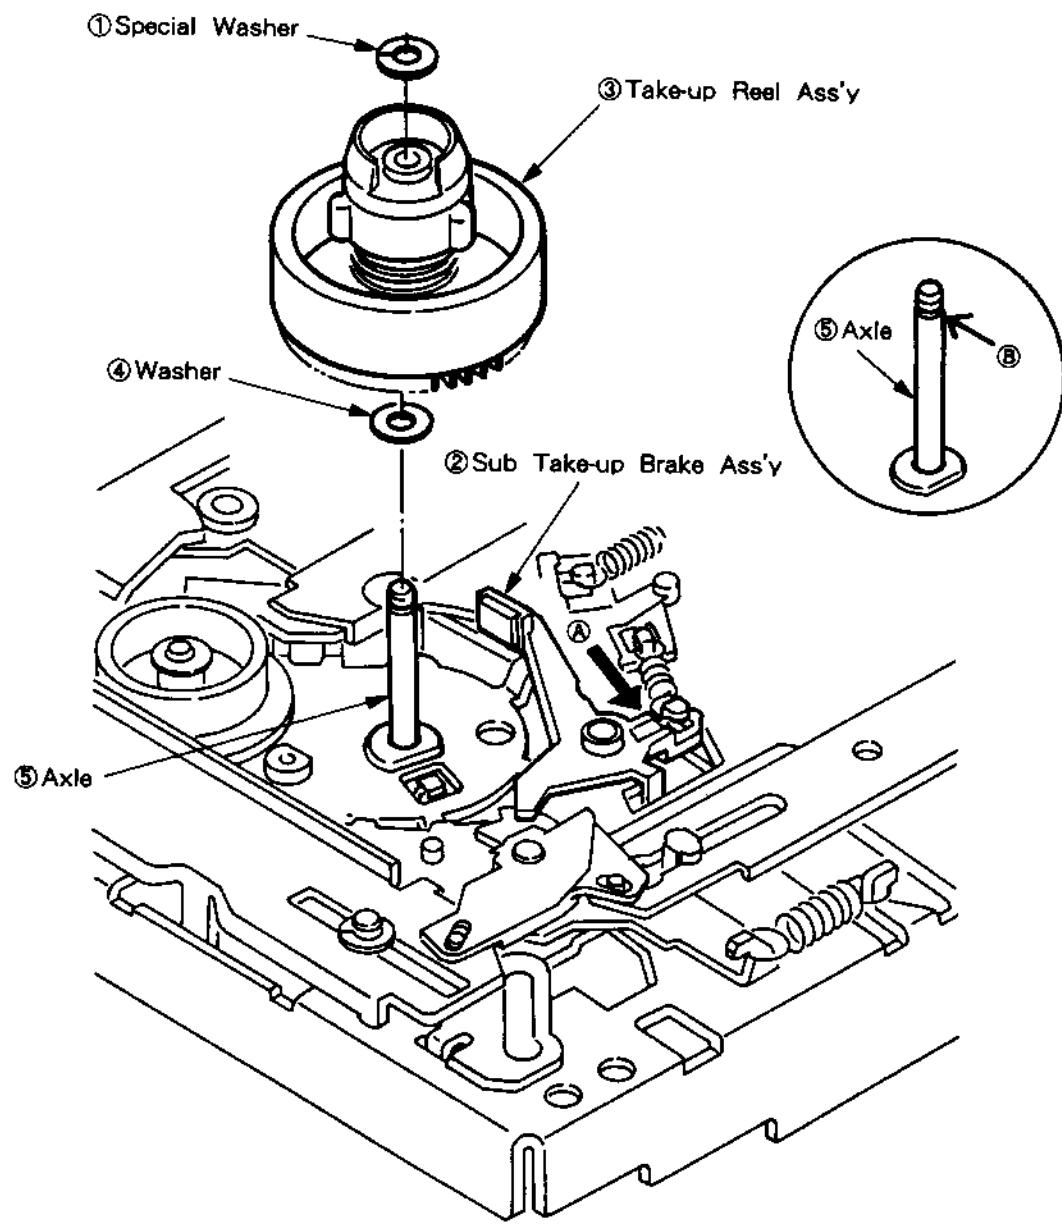


Fig. 2-8-2. Take-up Reel Ass'y

### 2-8-3. TAKE-UP REEL GEAR (See Fig. 2-8-3.)

#### 1. Removal

- 1) Remove the COMPL CASSETTE MECHANISM as instructed in 2-2-1.
- 2) Remove the TAKE-UP REEL ASS'Y as instructed in 2-8-2.
- 3) Remove the SUB TAKE-UP BRAKE ASS'Y as instructed in 2-7-1.
- 4) Remove the TAKE-UP BRAKE ASS'Y as instructed in 2-7-2.
- 5) Remove the special washer ①, then remove the TAKE-UP REEL GEAR ③ and the washer ④.

#### 2. Remounting

- 1) Apply a little oil (less than one drop) to the part of the axle ⑤ indicated with an arrow.
- 2) Mount the washer ④ and the TAKE-UP REEL GEAR ③ onto the axle ⑤.
- 3) Mount the special washer ① onto the axle ⑤.
- 4) Mount the TAKE-UP BRAKE ASS'Y as instructed in 2-7-2.
- 5) Mount the SUB TAKE-UP BRAKE ASS'Y as instructed in 2-7-1.
- 6) Mount the TAKE-UP REEL ASS'Y as instructed in 2-8-2.
- 7) Mount the COMPL CASSETTE MECHANISM as instructed in 2-2-1.

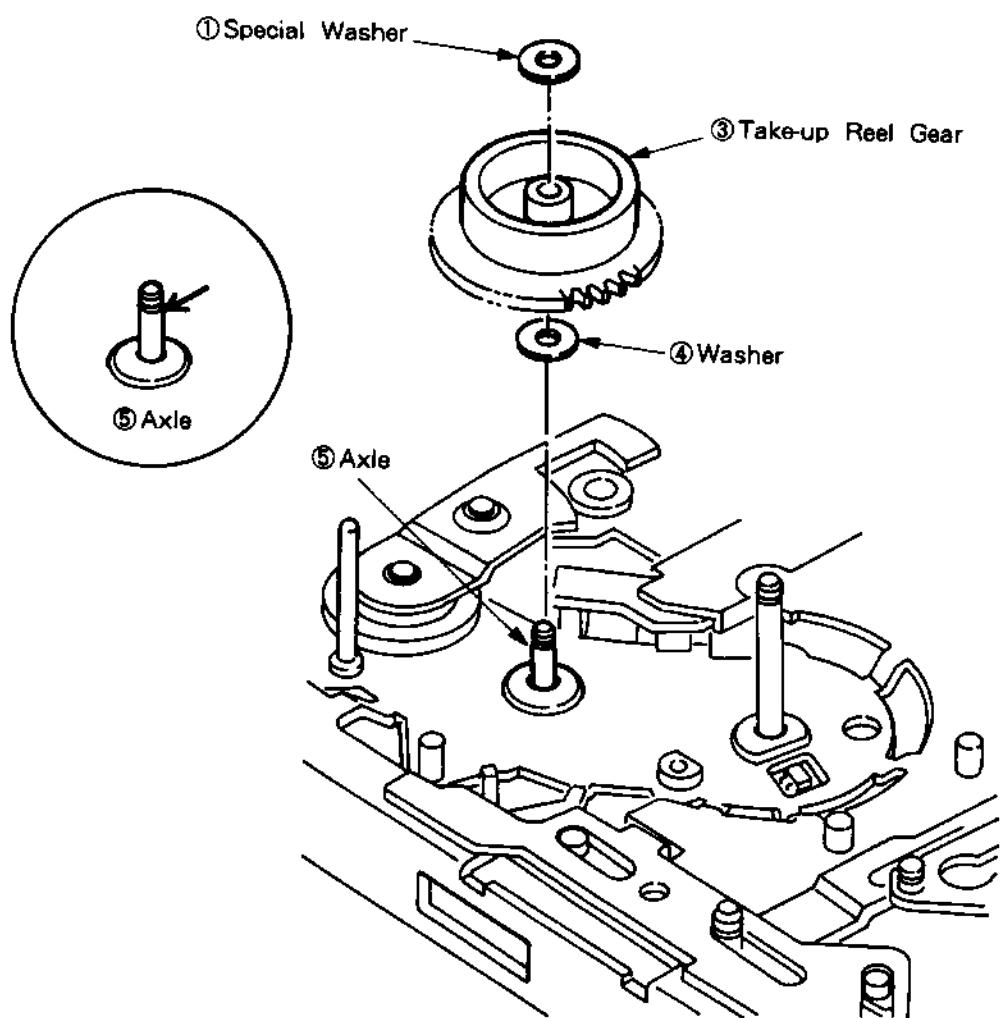


Fig. 2-8-3. Take-up Reel Gear

## 2-8-4. REEL PULLEY AND FRICTION GEAR ASS'Y (See Fig. 2-8-4.)

### 1. Removal

- 1) Remove the two screws ①, then remove the PULLEY BRACKET ②.
- 2) Remove the REEL DRIVE BELT ③.
- 3) Remove the special washer ④, then remove the REEL PULLEY ⑤.
- 4) Remove the special washer ⑥, then remove the FRICTION GEAR ASS'Y ⑦ and the washer ⑧.

**Note:** Some model may not incorporate the pulley bracket ②. Washer ⑫ is mounted on the pin ⑪ with a screw ⑬, and serves as the PULLEY BRACKET ②.

### 2. Remounting

- 1) Apply one drop of oil to the parts of axles ⑨ and ⑩ indicated with arrows.
- 2) Mount the washer ⑧ and the FRICTION GEAR ASS'Y ⑦ onto the axle ⑨.
- 3) Mount the special washer ⑥ onto the axle ⑨.
- 4) Mount the REEL PULLEY ⑤ onto the axle ⑩.
- 5) Mount the special washer ④ onto the axle ⑩.
- 6) Set the REEL DRIVE BELT ③.
- 7) Mount the PULLEY BRACKET ② with the two screws ①.

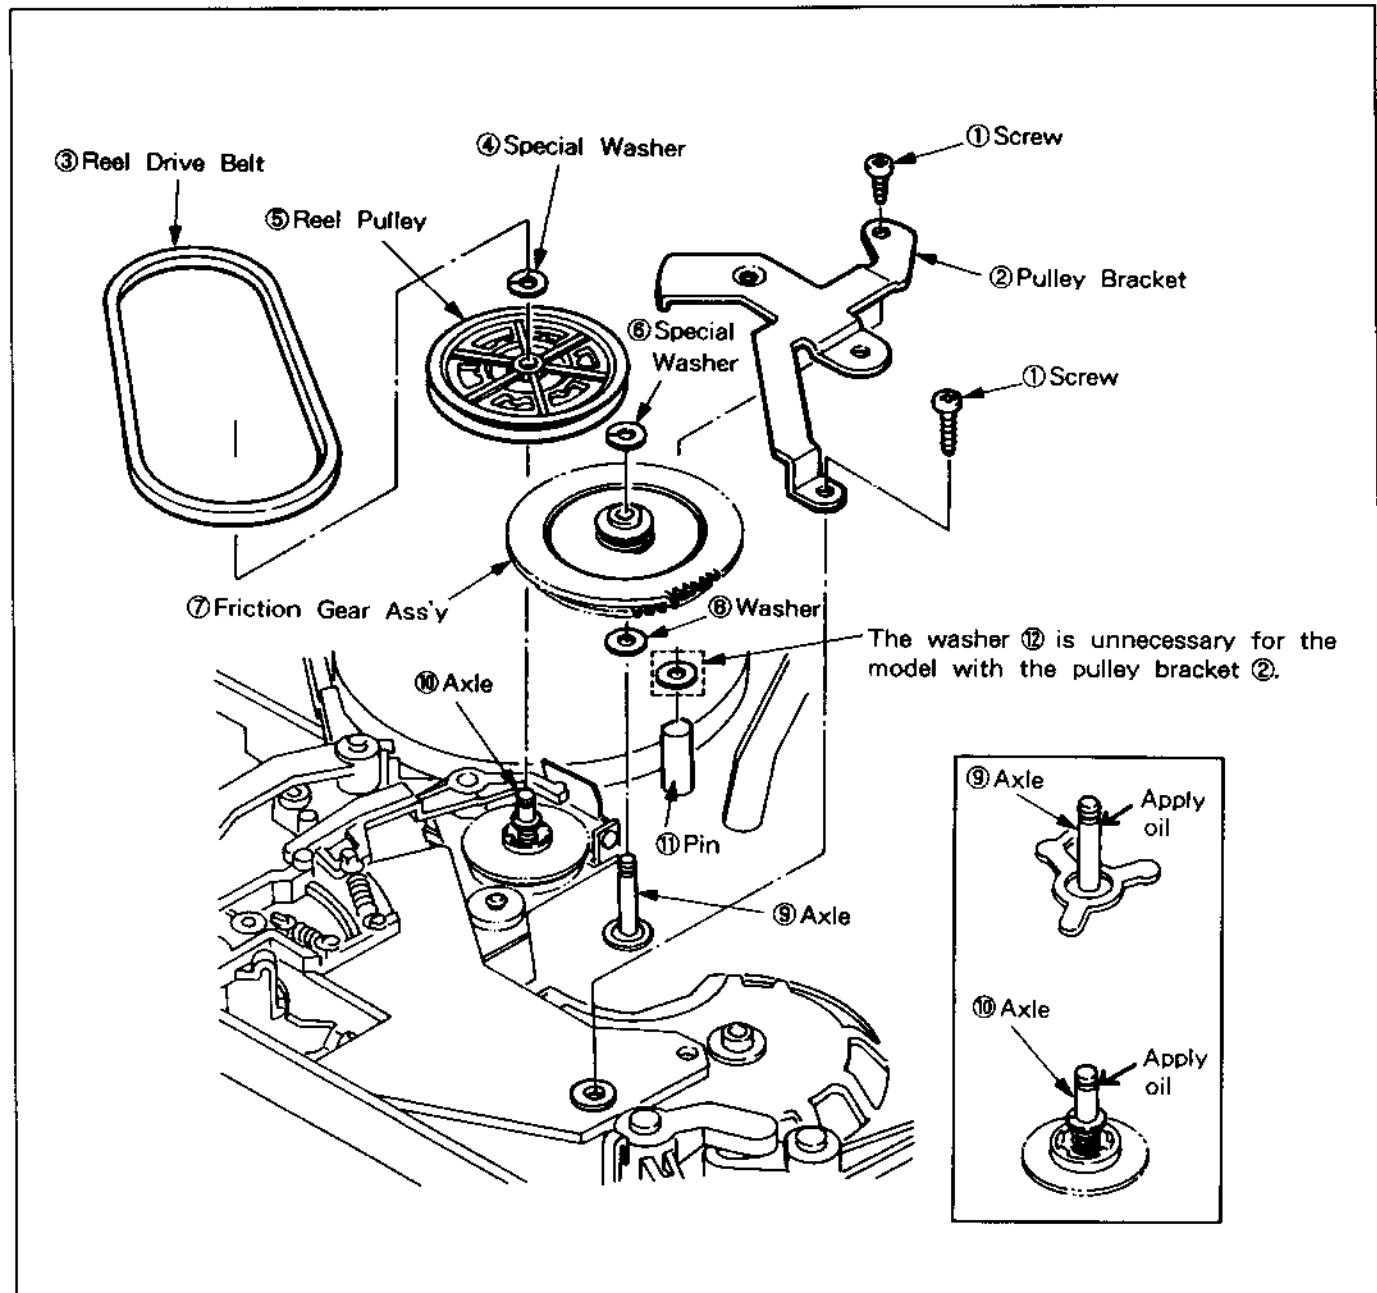


Fig. 2-8-4. Reel Pulley & Friction Gear

## 2-8-5. COMPL CLUTCH (See Fig. 2-8-5.)

### 1. Removal

- 1) Remove the COMPL CASSETTE MECHANISM as instructed in 2-2-1.
- 2) Remove the PULLEY BRACKET, the REEL DRIVE BELT and the REEL PULLEY as instructed in 2-8-4.
- 3) Remove the screw ①, then remove the COMPL MC-4 ②.
- 4) Remove the two screws ③, then remove the COMPL CLUTCH ④.

### 2. Remounting

- 1) Mount the COMPL CLUTCH ④ with the two screws ③, aligning it with the protuberance ⑤.
- 2) After inserting the CN831 (COMPL MC-4) into the CN801 (COMPL MC-1), mount the COMPL MC-4 with the screw ①.
- 3) Mount the REEL PULLEY, the REEL DRIVE BELT and the PULLEY BRACKET as instructed in 2-8-4.
- 4) Mount the COMPL CASSETTE MECHANISM as instructed in 2-2-1.

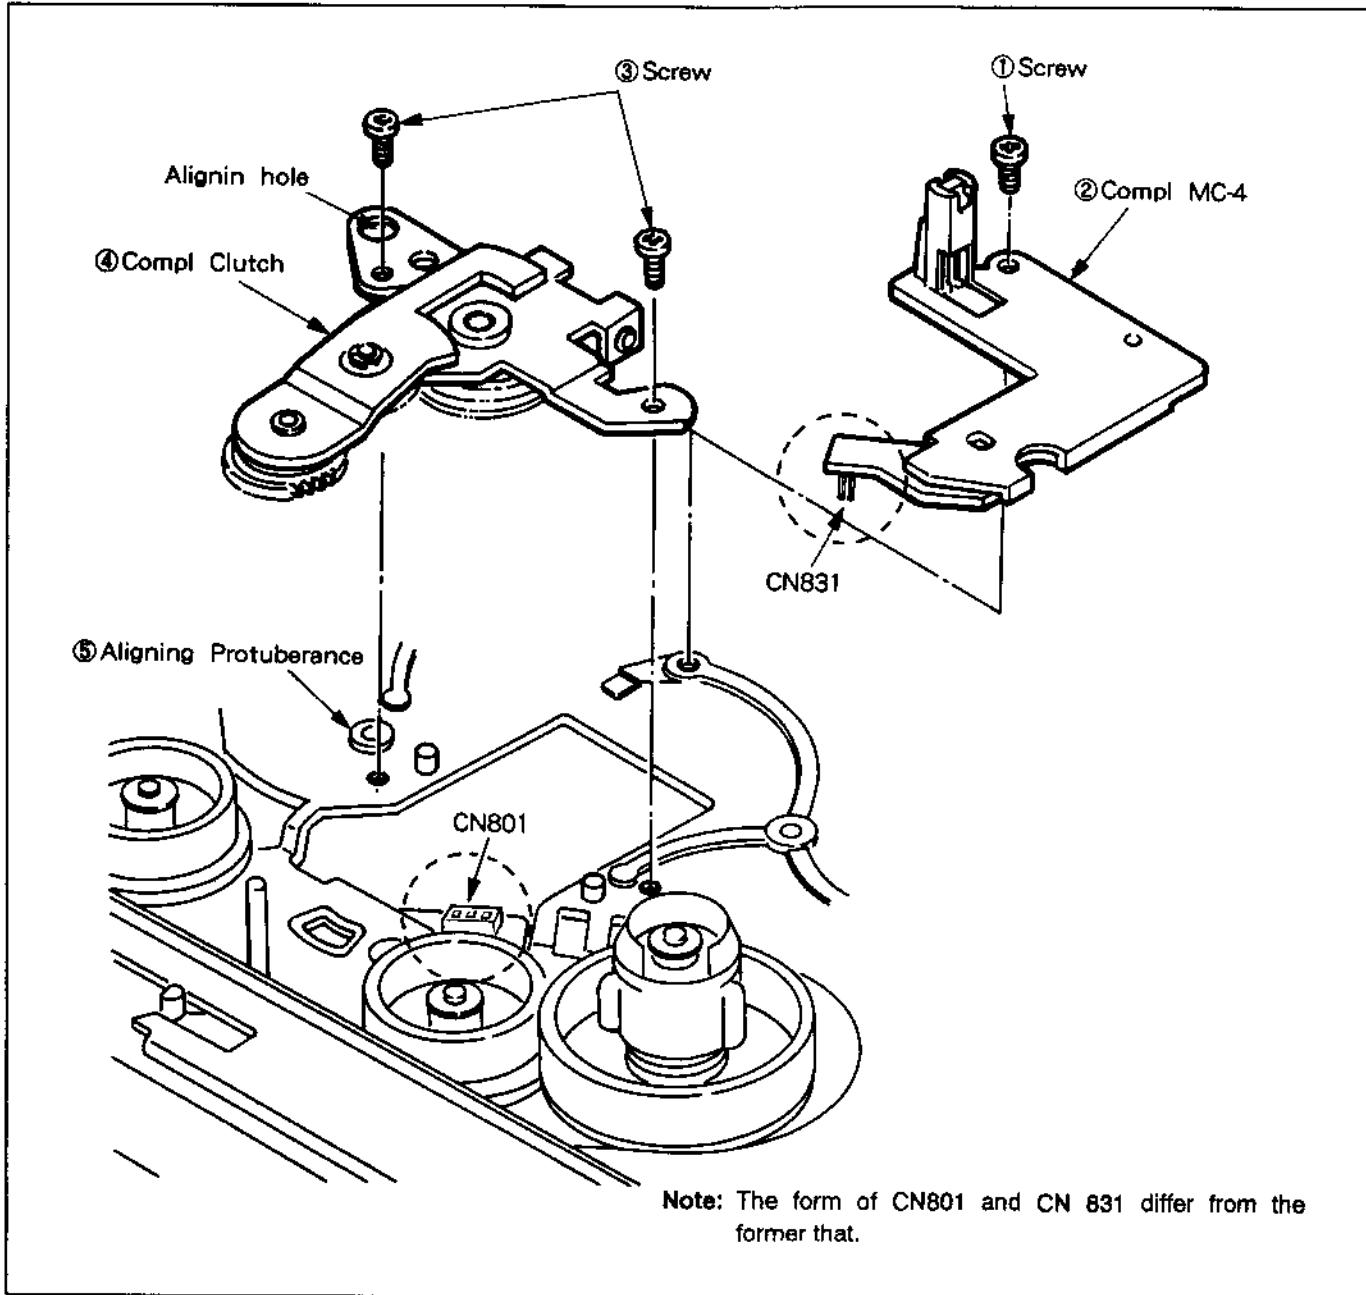


Fig. 2-8-5. Compl Clutch

## 2-8-6. CLUTCH CHANGE LEVER AND CLUTCH LEVER ASS'Y (See Fig. 2-8-6.)

### 1. Removal

- 1) Remove the CAPSTAN BRAKE ASS'Y as instructed in 2-7-4.
- 2) Remove the PULLEY BRACKET, the REEL DRIVE BELT and the REEL PULLEY as instructed in 2-8-4.
- 3) Remove the SPRING COIL ①.
- 4) Unhook the hook ②, then remove the CLUTCH CHANGE LEVER ③.
- 5) Unhook the hook ⑤, then remove the CLUTCH LEVER ASS'Y ⑥.

### 2. Remounting

- 1) Mount the CLUTCH LEVER ASS'Y ⑥ onto the axle ⑦. Confirm that the hook ⑤ is hooked to the chassis.
- 2) Mount the CLUTCH CHANGE LEVER ③ onto the axle ⑧. Confirm that the hook ② is hooked to the chassis.
- 3) Hook the SPRING COIL ① between the hooks ⑨ and ⑩.
- 4) Mount the PULLEY BRACKET, the REEL DRIVE BELT and the REEL PULLEY as instructed in 2-8-4.
- 5) Mount the CAPSTAN BRAKE ASS'Y as instructed in 2-7-4.

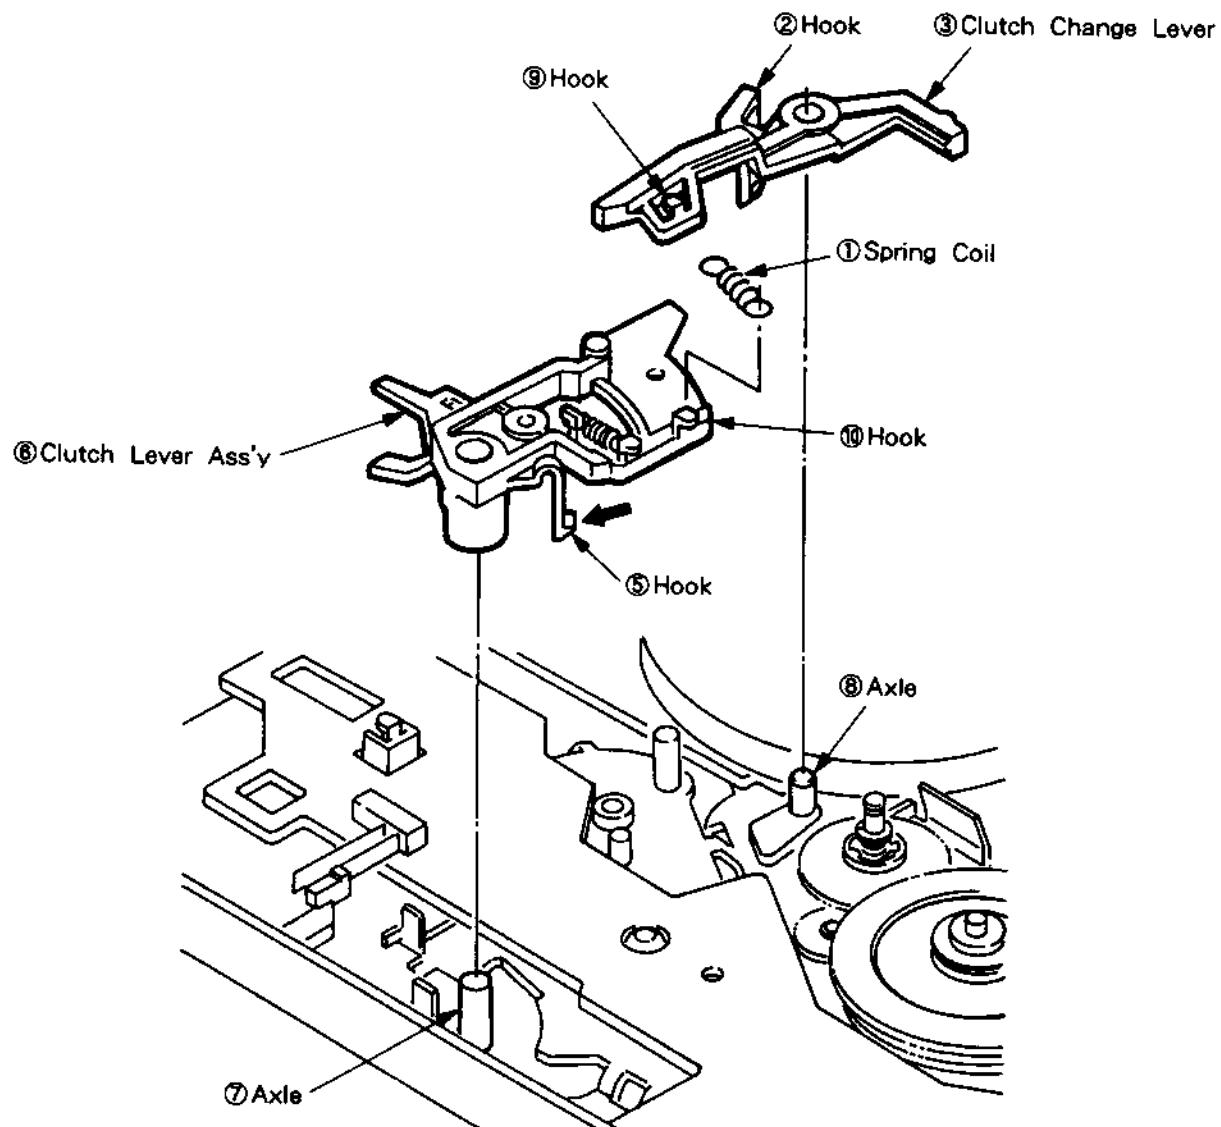


Fig. 2-8-6. Clutch Change Lever & Clutch Lever Ass'y

## 2-9. CAPSTAN MOTOR (See Fig. 2-9-1.)

### 1. Removal

- 1) Remove the CAPSTAN BRAKE ASS'Y as instructed in 2-7-4.
- 2) Remove the CAPSTAN MOTOR ⑥ connector.
- 3) Remove the REEL DRIVE BELT ② from the CAPSTAN MOTOR PULLEY ①.
- 4) Remove the two screws ④ fixing the COMPL CASSETTE MECHANISM TOP BOARD ③, then slide the TOP BOARD ③ backward.
- 5) Remove the three screws ⑤, then remove the CAPSTAN MOTOR ⑥.

**Note:** Take care not to scratch or soil the capstan axle.

### 2. Remounting

- 1) Mount the CAPSTAN MOTOR ⑥ with the three screws ⑤.
- 2) Connect the CAPSTAN MOTOR ⑥ connector.
- 3) Mount the TOP BOARD ③ with the two screws ④.
- 4) Fit the REEL DRIVE BELT ② around the CAPSTAN MOTOR PULLEY ① and the REEL PULLEY ⑦.
- 5) Mount the CAPSTAN BRAKE ASS'Y as instructed in 2-7-4.

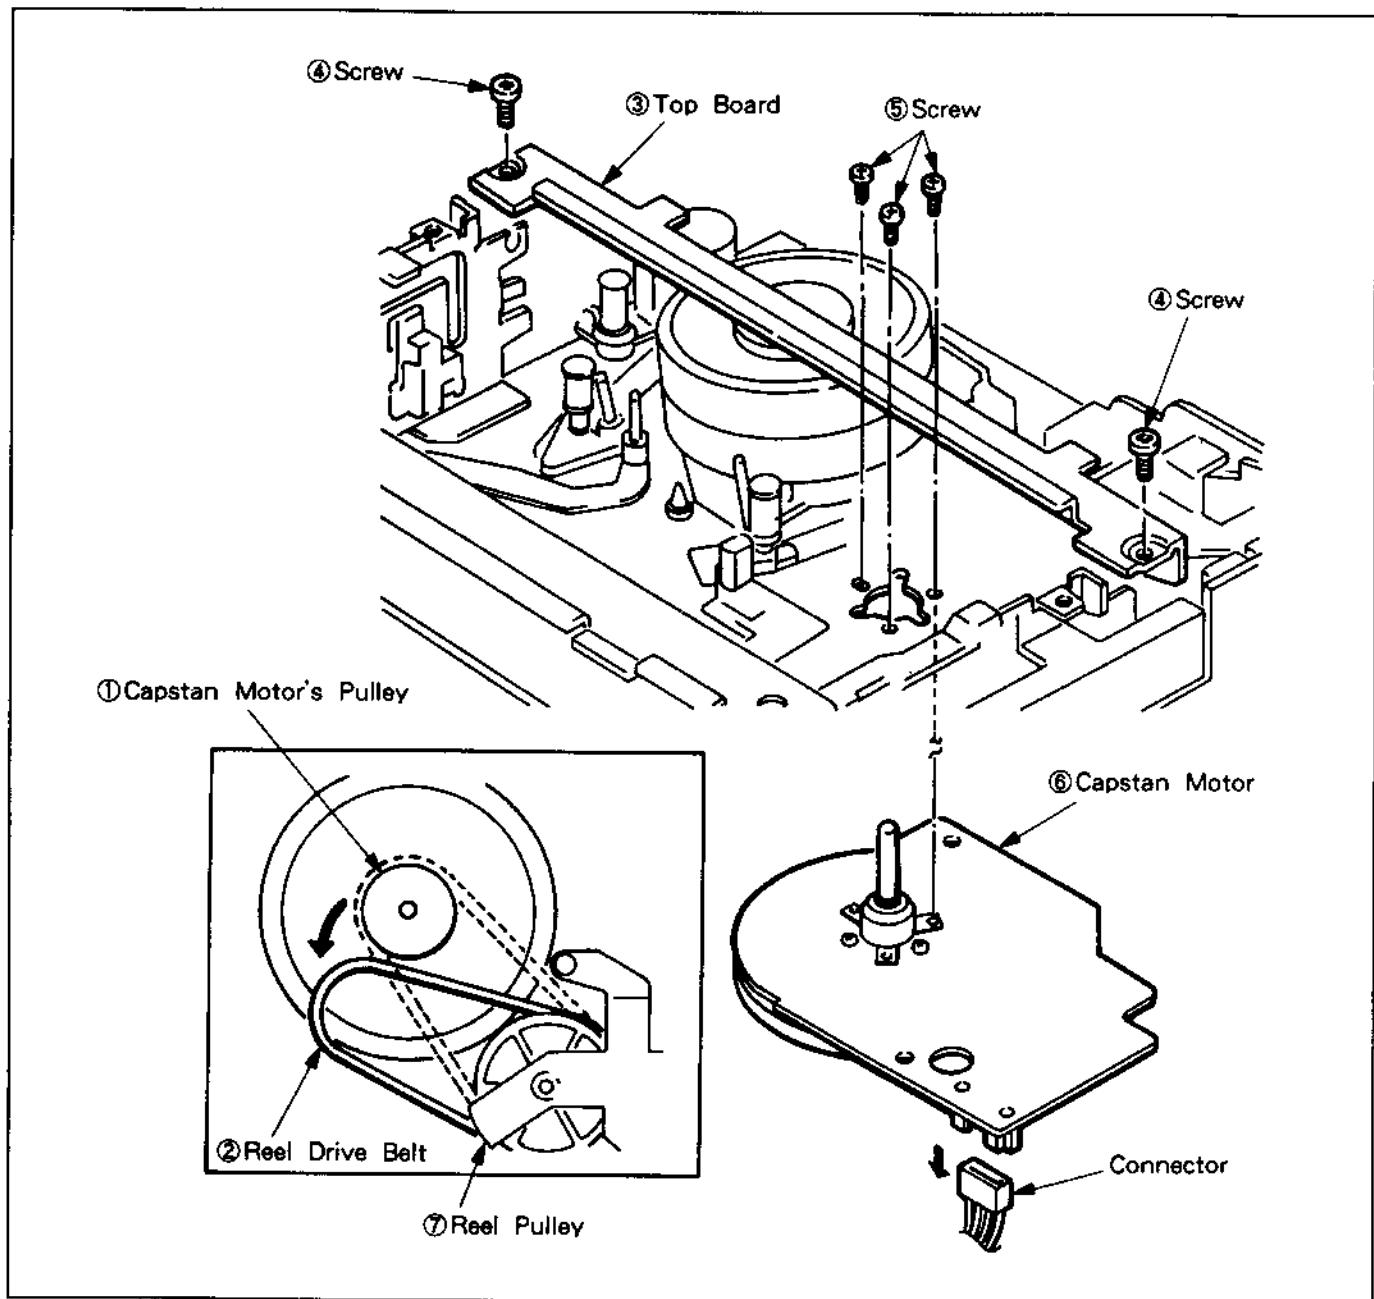


Fig. 2-9-1. Capstan Motor

## 2-10. FIXED GUIDE, FE HEAD LEVER ASS'Y

### 2-10-1. S-SIDE FIXED GUIDE AND FE LEVER ASS'Y (See Fig. 2-10-1.)

#### 1. Removal

- 1) Remove the special nut ①, then remove the GUIDE PIPE ③ and the special washer ② (lower), in that order.
- 2) Remove the SPRING COIL ⑤.
- 3) Remove the FTE HEAD connector.
- 4) Remove the special washer ⑥, then remove the FE HEAD LEVER ASS'Y ⑦.

#### 2. Remounting

- 1) After mounting the FE LEVER ASS'Y ⑦ onto the axle ⑧, mount the special washer ⑥.
- 2) Hook the SPRING COIL ⑤ between the chassis notch ⑨ and the FE LEVER ASS'Y hook ⑩.
- 3) Mount the special washer ② (lower), the GUIDE pipe ③ and the special nut ① to the axle ⑧, in that order. At that time, do not excessively tighten the special nut ① to avoid idle rotation of the axle rivet. The height of fixing guide on the inlet side is not required.
- 4) Connect the connector to the FTE HEAD.

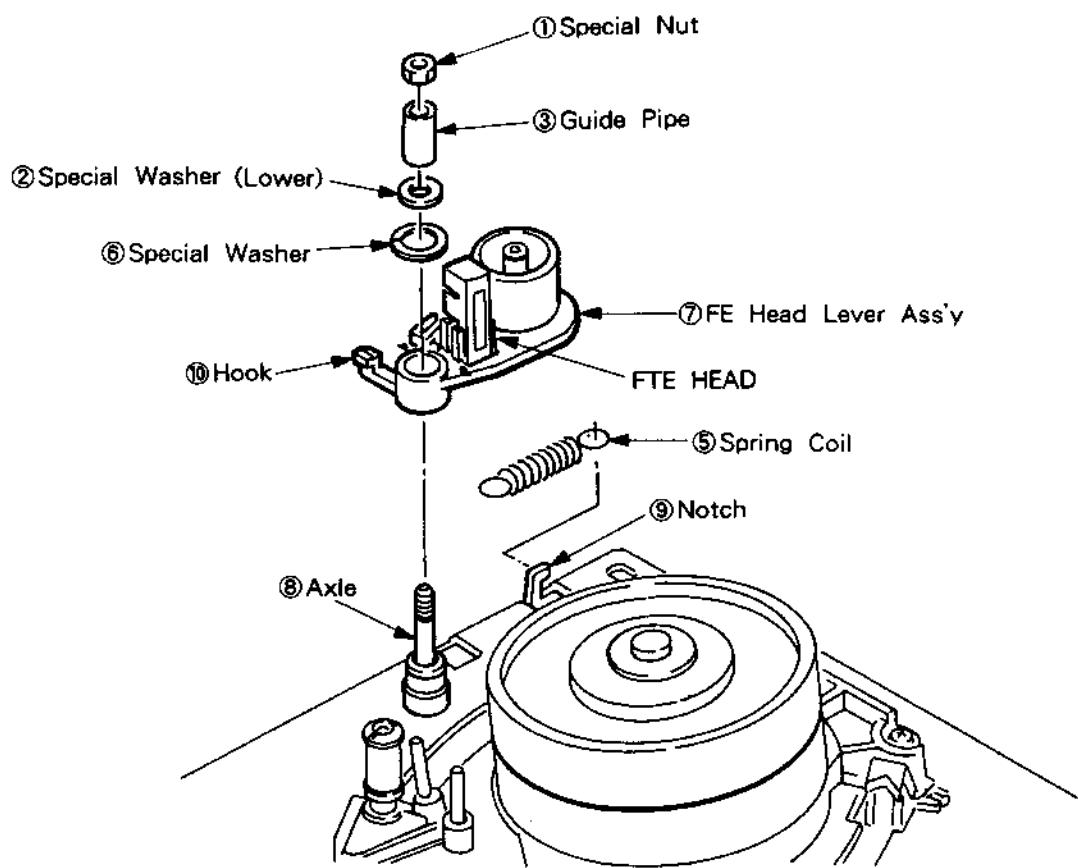


Fig. 2-10-1. Fixed Guide (S) & FE Lever Ass'y

## 2-10-2. IMPEDANCE ROLLER, FTE HEAD (See Fig. 2-10-2.)

### 1. Removal

- 1) Remove the FTE HEAD (full track erase head) ① connector.
- 2) Remove the special washer ②, then remove the IMPEDANCE ROLLER ③ and the washer ④.
- 3) Open the hook ⑤ a little and remove the FTE HEAD ①.

**Note:** Take care not to open the hook too much, otherwise it may be deformed or broken.

### 2. Remounting

- 1) Mount the FTE HEAD ① onto the FE HEAD LEVER ASS'Y ⑥. Confirm that the hook ⑤ is hooked to the FTE HEAD ①.
- 2) Mount the washer ④ and the IMPEDANCE ROLLER ③, in that order, onto the axle ⑦, then mount the special washer ②.
- 3) Connect the connector to the terminal of the FTE HEAD ①.

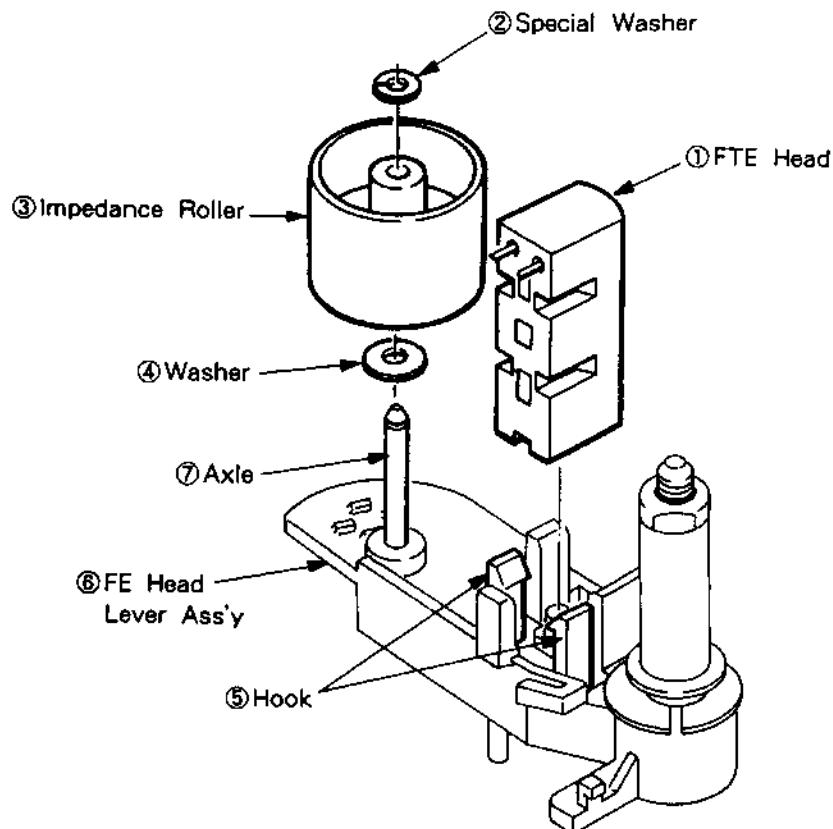


Fig. 2-10-2. Impedance Roller & FTE Head

## 2-10-3. FIXED GUIDE (T) (See Fig. 2-10-3.)

### 1. Removal

- 1) Remove the CAP ①.
- 2) Remove the special nut ②, then remove the special washer ③ (upper), the GUIDE PIPE ④, the special washer ③ (lower) and the SLEEVE ⑤, in that order.

### 2. Remounting

- 1) Mount the SLEEVE ⑤, the special washer ③ (lower), the GUIDE PIPE ④, the special washer ③ (upper) and the special nut ②, in that order, to the axle ⑥.
- 2) Mount the CAP ① onto the axle ⑥.

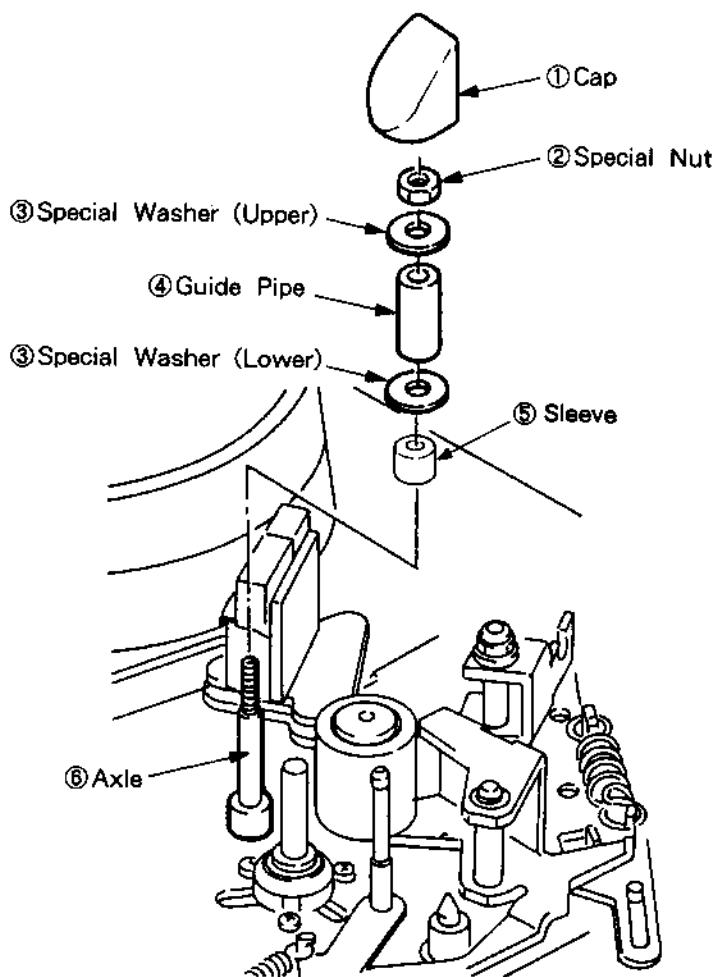


Fig. 2-10-3. Fixed Guide (T)

## 2-11. DRUM SECTION

### 2-11-1. DRUM MOTOR (ROTOR, STATOR) (See Fig. 2-11-1.)

#### 1. Removal

- 1) Remove the screw ①, then remove the CYLINDER EARTH ASS'Y ②.
- 2) Remove the two screws ③, then remove the ROTOR ④ and the SPACER.
- 3) Remove the STATOR board connector.
- 4) Remove the three screws ⑤, then remove the STATOR ⑥.

#### 2. Remounting

- 1) Mount the STATOR ⑥ with the three screws ⑤.
- 2) Mount the SPACER ⑪ onto the AXLE ⑫.
- 3) While aligning the ROTOR oval hole ⑦ with the ROTOR DISK hole ⑧, mount the ROTOR with the two screws ③.
- 4) Insert the connector ⑩.
- 5) While aligning the CYLINDER EARTH ASS'Y ② protuberance with the chassis hole ⑨, mount it with the screw ①.

**Note 1:** Use a torque driver (VHJ-0014) for mounting the STATOR ⑥ and the ROTOR ④. Set fastening torque to 3 kg-cm.

**Note 2:** When the drum unit has been replaced, perform a tape path adjustment as instructed in 5-4, and perform a PB PHASE adjustment of the servo circuit.

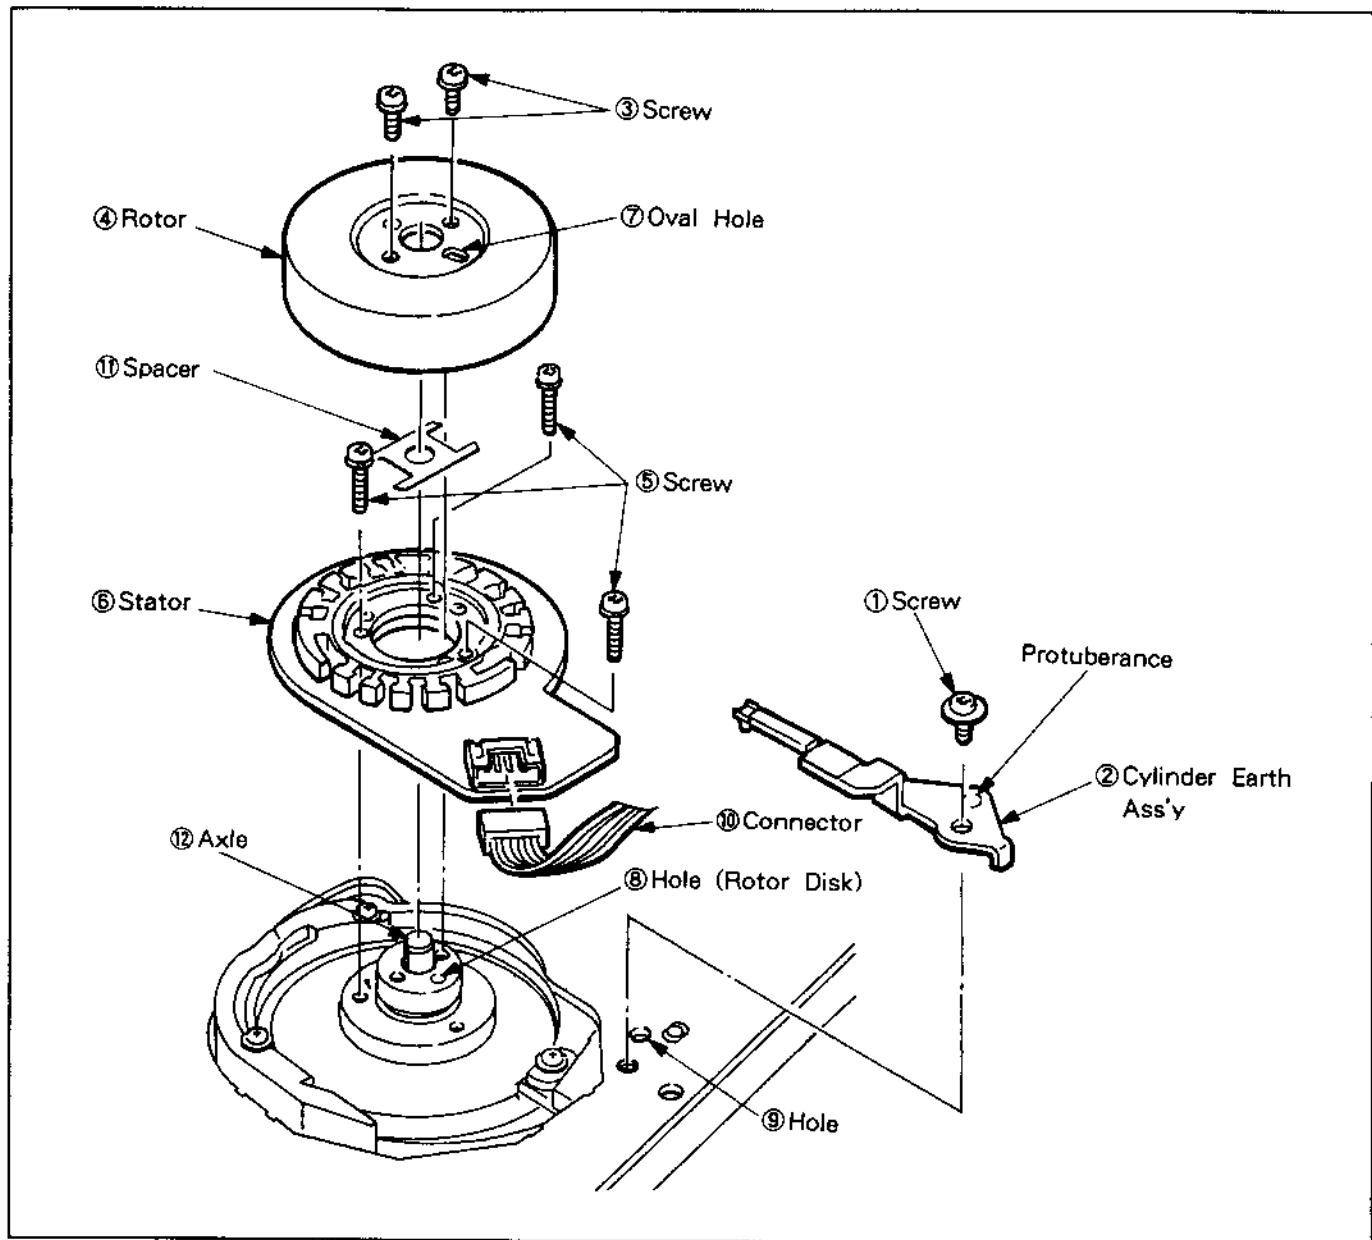


Fig. 2-11-1. Drum Motor

## 2-11-2. DRUM UNIT (See Fig. 2-11-2.)

### 1. Removal

- 1) For some models with the board located above the upper drum, remove the board.
- 2) Remove the flexible cable ① from the PRE-AMP UNIT (take care not to pull the flexible cable in the upward direction).
- 3) Remove the LOAD RACK only, as instructed in 2-4-1.
- 4) Remove the three screws ②, then remove the drum unit ③.

**Note:** When removing and remounting the drum unit, handle it carefully to protect it from scratches and dirt.

### 2. Remounting

- 1) While aligning the drum unit ③ to the protuberance, mount it to the drum base (CYLINDER BASE) ⑤ with the three screws ②.
- 2) Mount the ROAD RACK as instructed in 2-4-1.
- 3) Insert the flexible cable into the PRE-AMP UNIT.
- 4) Clean the drum unit.
- 5) Perform the tape path adjustment as instructed in 5-4, and perform the PB PHASE adjustment of the servo circuit.

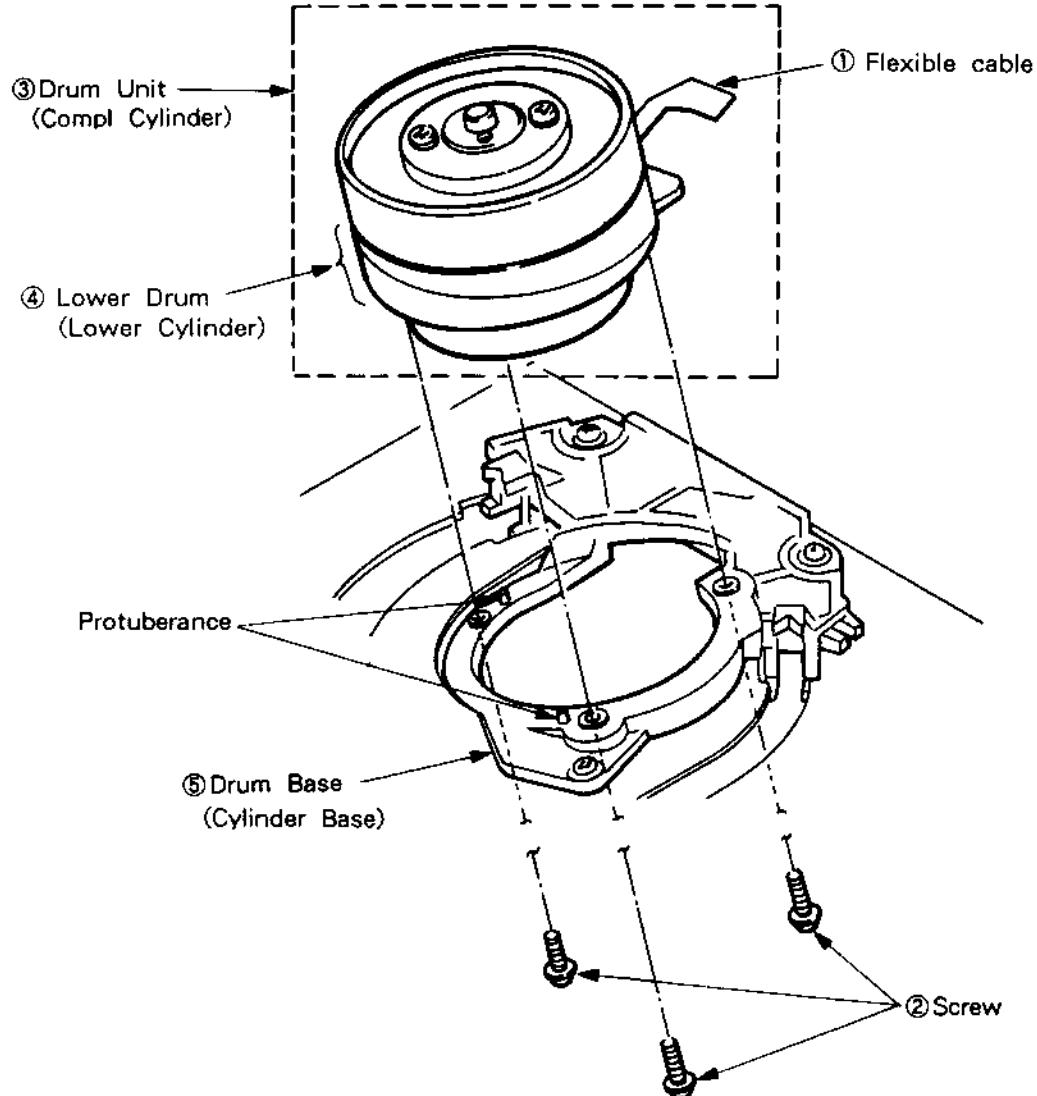



Fig. 2-11-2. Drum Unit (Compl Cylinder)

## 2-11-3. UPPER DRUM (Upper Cylinder)

### 1. Removal

- 1) Remove the two screws ①. (See Fig. 2-11-3.)
- 2) In case the RE (ROTARY ERASE) HEAD is attached to the upper drum (UPPER CYLINDER), remove the lead wires soldered from the P.C. board. (See Fig. 2-11-4.)
- 3) Turn the head removing jig (VHJ-0041) handle ② counterclockwise to lift up the stopper ③. (See Fig. 2-11-5.)
- 4) Insert the two long screws ④ of the jig into the screw holes ⑥ located on the head chip side of the upper drum (UPPER CYLINDER) ⑤, then mount by turning the handle clockwise.
- 5) While holding the jig so that the upper drum ⑤ does not rotate, turn the handle ② clockwise to remove the upper drum.
- 6) Remove the jig from the upper drum.

**Note:** Handle parts carefully to protect the drum from scratches and dirt, and the video head from damage.

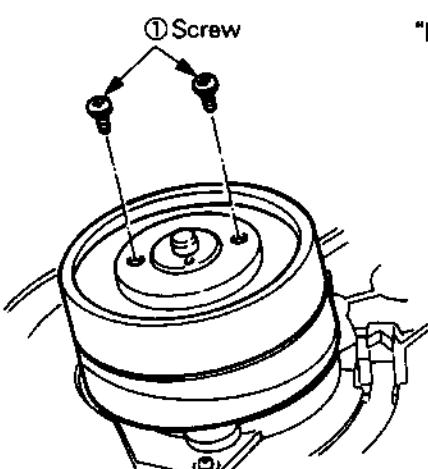

"Disassemble"

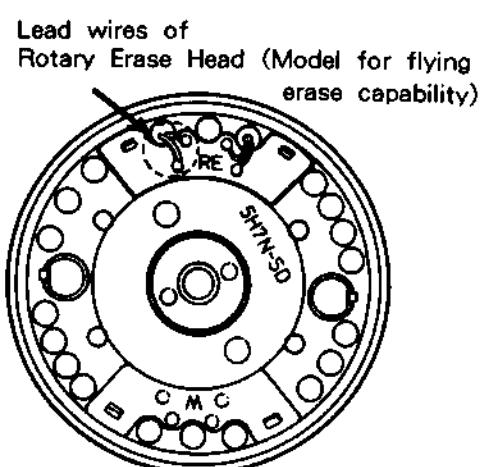


Fig. 2-11-4

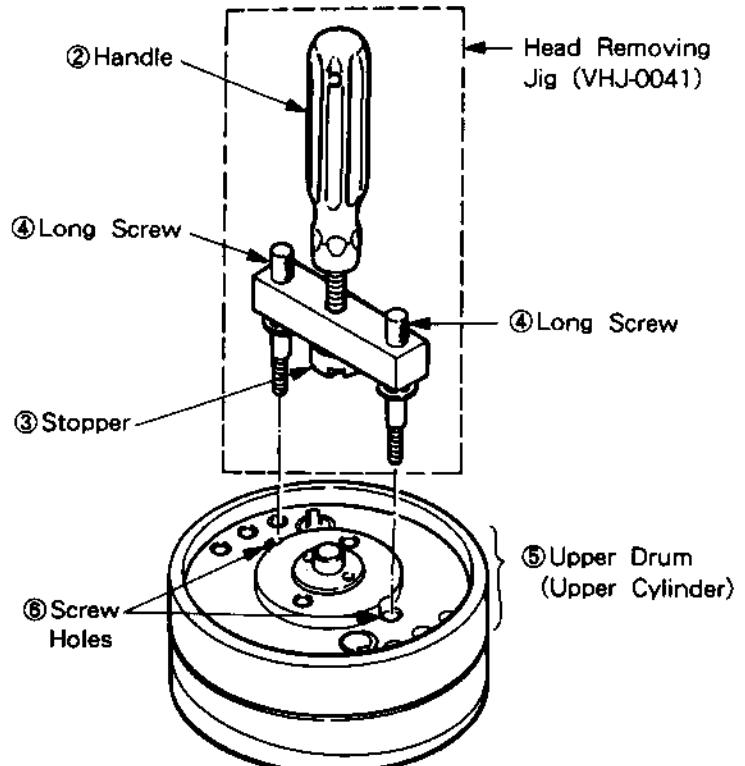


Fig. 2-11-5

Upper Drum (Upper Cylinder)

## 2. Remounting (See Fig. 2-11-6.)

- 1) Confirm that surfaces where the flywheel and the upper drum (UPPER CYLINDER) are engaged or make contact are free from scratches and dirt.
- 2) The code name ① of the drum is printed on the video head side of the upper drum ⑤ SP CH-1 (channel A, plus azimuth). The code name ① is set with in the rotary transformer terminal round hole side ② position of lower drum (LOWER CYLINDER), so that the two screw holes ③ of the upper drum are aligned with the two screw holes ④ of the flywheel. (Refer to 3. Recognizing the SP CH-1 Head side.)
- 3) In case the RE (ROTARY ERASE) HEAD is attached to the upper drum, pass the lead wires through the lead wire hole. (See Fig. 2-11-4.)

- 4) While keeping the upper drum ⑤ parallel to the lower drum (LOWER CYLINDER) ⑧, insert it completely into the flywheel.
- 5) Temporarily tighten the two screws ⑦ alternately a little at a time, then tighten them to a torque of 6 kg-cm using a torque driver (VHJ-0014) and a 3 mm bit (VHJ-0045).
- 6) In case the RE head is attached to the upper drum ⑤, solder the lead wires to the P.C. board. Solder the red lead wire to the R terminal, and the yellow lead wire to the Y terminal.

**Note:** When the upper drum has been replaced, perform a tape path adjustment as instructed in 5-4. and the PB PHASE adjustment of the servo circuit.

"Reassemble"

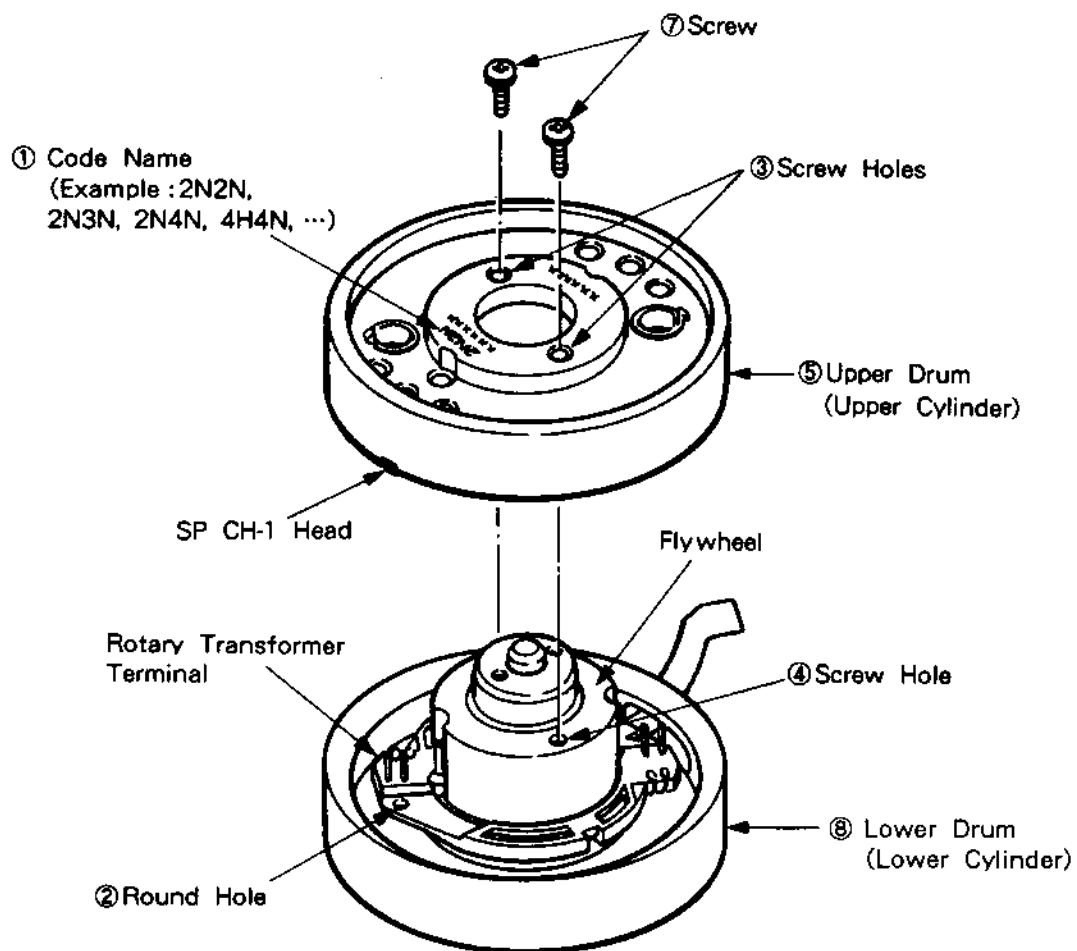


Fig. 2-11-6.

### 3. Recognizing the SP CH-1 Head Side

No playback picture can be obtained if the video head is not wired as a pair with the rotary transformer located inside the lower drum rotating section. Therefore, mounting position should be matched when mounting the upper drum. In the P91 mechanism series, the code name of the drum is printed on the SP CH-1 (CH-A, plus azimuth) side as a mark for mounting the upper drum. (See Fig. 2-11-7.) This code name differs according to the drum type, but its basic form is as follows:



A = Number of head bases

B = "N" for normal audio  
"H" for HI-FI audio


C = Number of heads

D = TV system ("N" or "P")

EF = Code for detailed classification. Depending on drum type, it can also be just one character, or a blank space.

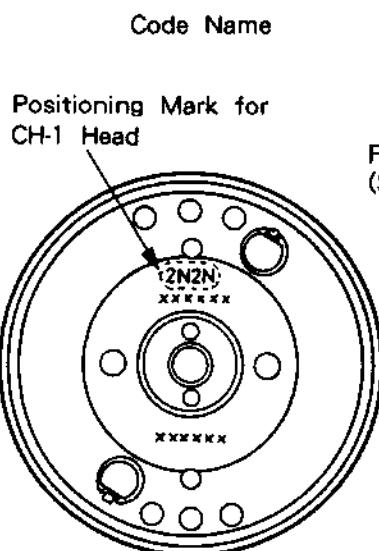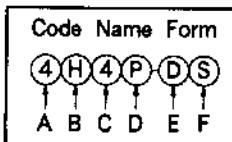

Except 2-head normal audio model.

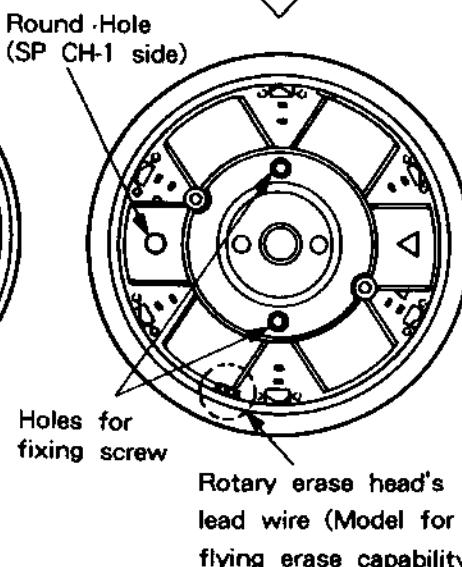

Only 2-head normal audio model

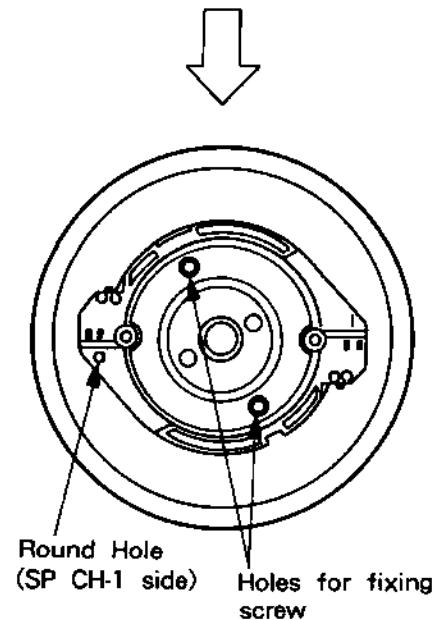


Fig. 2-11-7. Upper Drum

Fig. 2-11-8. Lower Drum

### Examples of Detailed Classification Codes

V = Head with level difference

D = Compatible with digital units

S = SVHS-compatible

### Examples of Code Names

2N2P, 2N2P-L, 2N2P-V, 2N2P-D, 2N3P, 2N4P, 4H4P, 4H4P-D

Moreover, there is a round hole with marking purposes on the SP CH-1 (CH-A, plus azimuth) side of the lower drum rotary transformer terminal. As shown in Fig. 2-11-8, there are two types of rotary transformer terminals (the number of pins differs according to the number of heads).

**Note:** When ordering parts such as drums (CYLINDERS), do not use the code names; always refer to the parts list and order with the specified part numbers.

## 2-12. AUTO HEAD CLEANING MECHANISM (See Fig. 2-12-1.)

### 1. Removal

- Note:**
- Do not hold the ROLLER CLEANER ASS'Y ① by bare hand. Use tweezers and gloves not soiled with grease or dust, etc.
  - When the cleaning function deteriorates and replacing only ROLLER CLEANER ASS'Y ①, there is no need to perform item 4).
- 1) Make sure that the ROLLER CLEANER ASS'Y ① is not pressed against a drum (cylinder).
  - 2) Remove the PRE-AMP UNIT and the PRE-AMP BRACKET.
  - 3) Remove screw ②, then lift up and remove the BRACKET CLEANER ASS'Y ③.
  - 4) With the BRACKET CLEANER ASS'Y ③ is fixed by finger, turn the LEVER CLEANER ASS'Y ④ 35° to 40° to clockwise, then lift up and remove.
  - 5) Remove the special washer ⑤, then remove the ROLLER CLEANER ASS'Y ①.

### 2. Remounting

- 1) Mount the ROLLER CLEANER ASS'Y ① and the special washer ⑤ to the axle ⑥ of LEVER CLEANER ASS'Y.
- 2) Mount the SPRING COIL ⑧ and the LEVER CLEANER ASS'Y ④ to the axle ⑦ of BRACKET CLEANER ASS'Y. At this time, hook the SPRING COIL ⑧ to the hole ⑨ of the LEVER CLEANER ASS'Y and the bent part ⑩ of the BRACKET CLEANER ASS'Y. "A part" of the LEVER CLEANER ASS'Y should be under "B part" of the BRACKET CLEANER ASS'Y.
- 3) Fix the BRACKET CLEANER ASS'Y ③ on screw hole ⑫ by screw ②. Before fasten screw ②, insert hole ⑪ of the BRACKET CLEANER ASS'Y to axle ⑯, axle ⑦ to hole ⑬ to match positions. Pin ⑭ of the LEVER CLEANER ASS'Y should be run along the circumference of the MAIN CAM ⑮ not to be came off.
- 4) The upper side of the lower drum should be within approx. 2mm from the lower side of the ROLLER CLEANER ASS'Y as shown in Fig. B.
- 5) Mount the PRE-AMP BRACKET and the PRE-AMP UNIT.

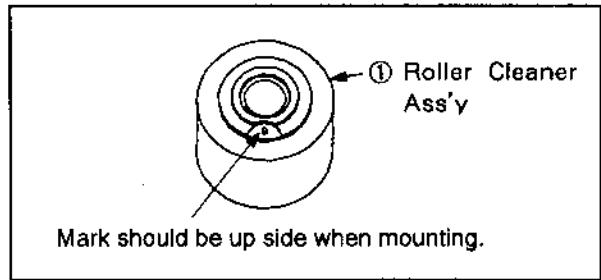
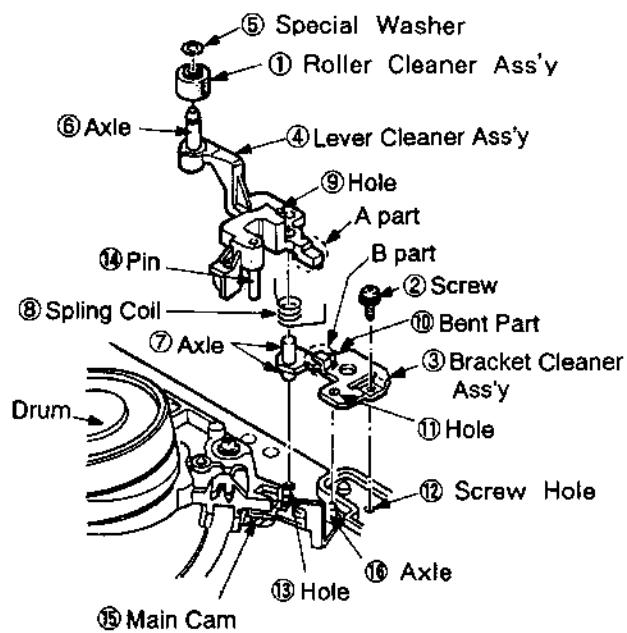


Fig. A

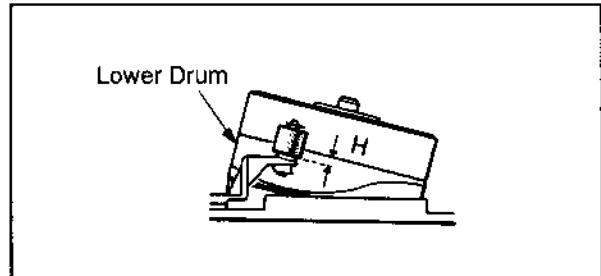


Fig. B

Fig. 2-12. Auto Head Cleaning Mechanism

## 2-13. HOW TO PROCEED WHEN THE CASSETTE CANNOT BE REMOVED



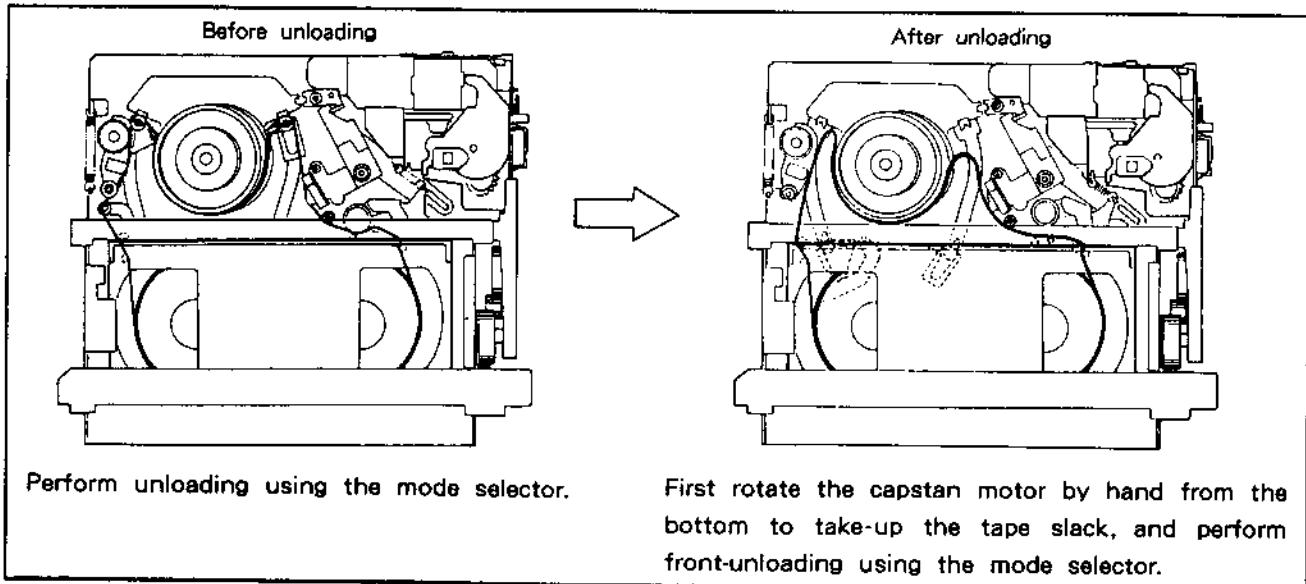



Fig. 2-13-1.

### 3. Block Diagrams


#### 3-1. OVERALL WIRING DIAGRAM

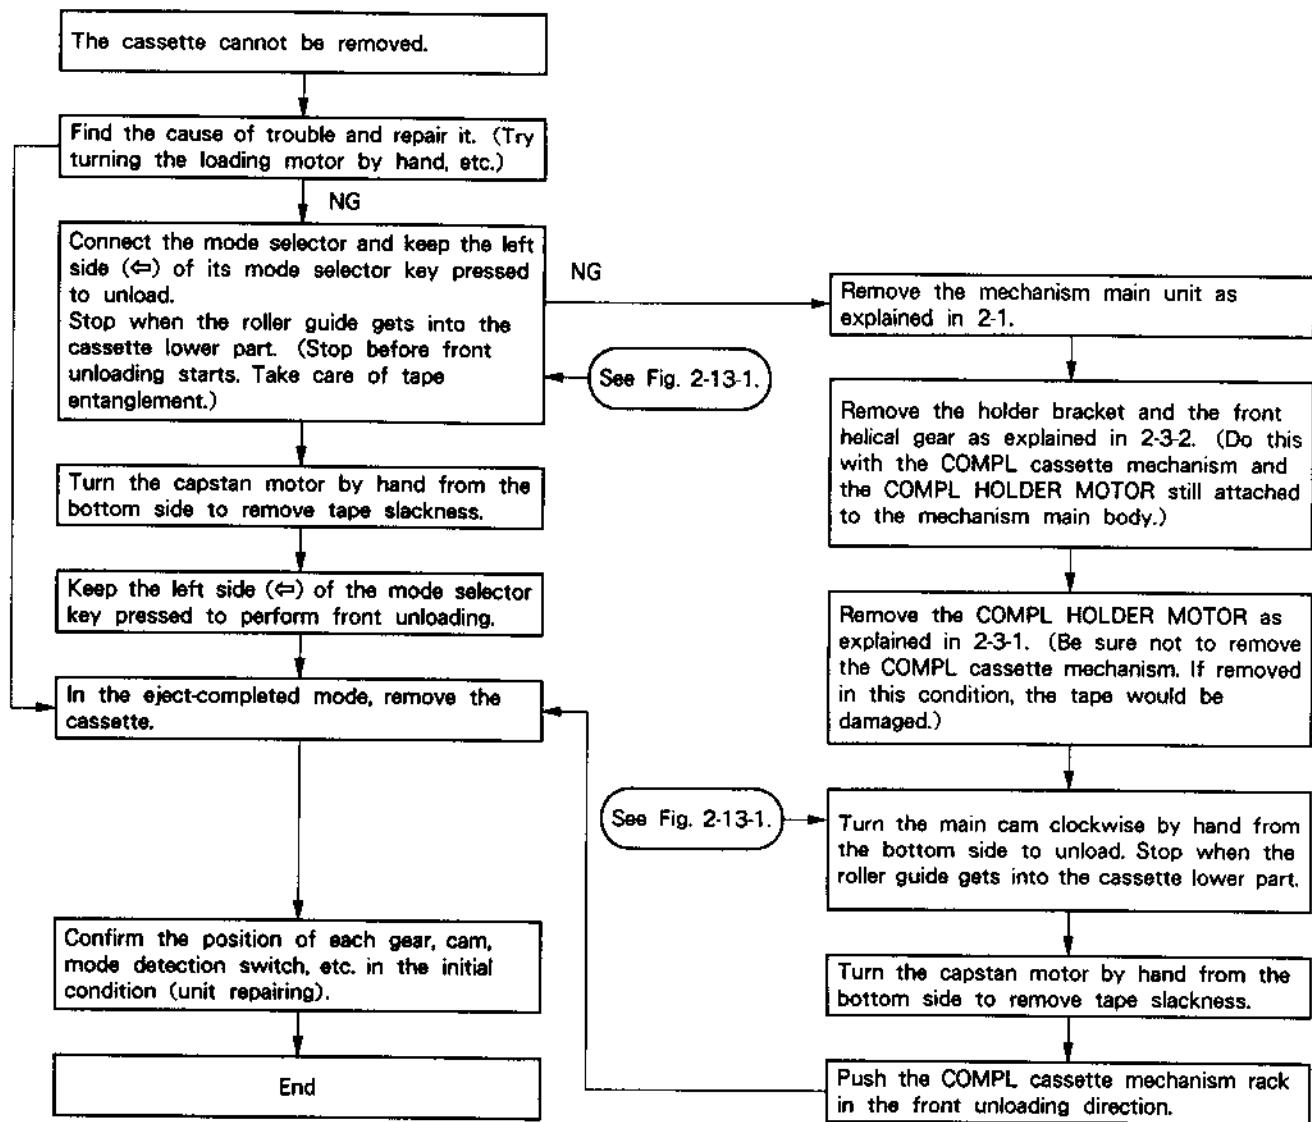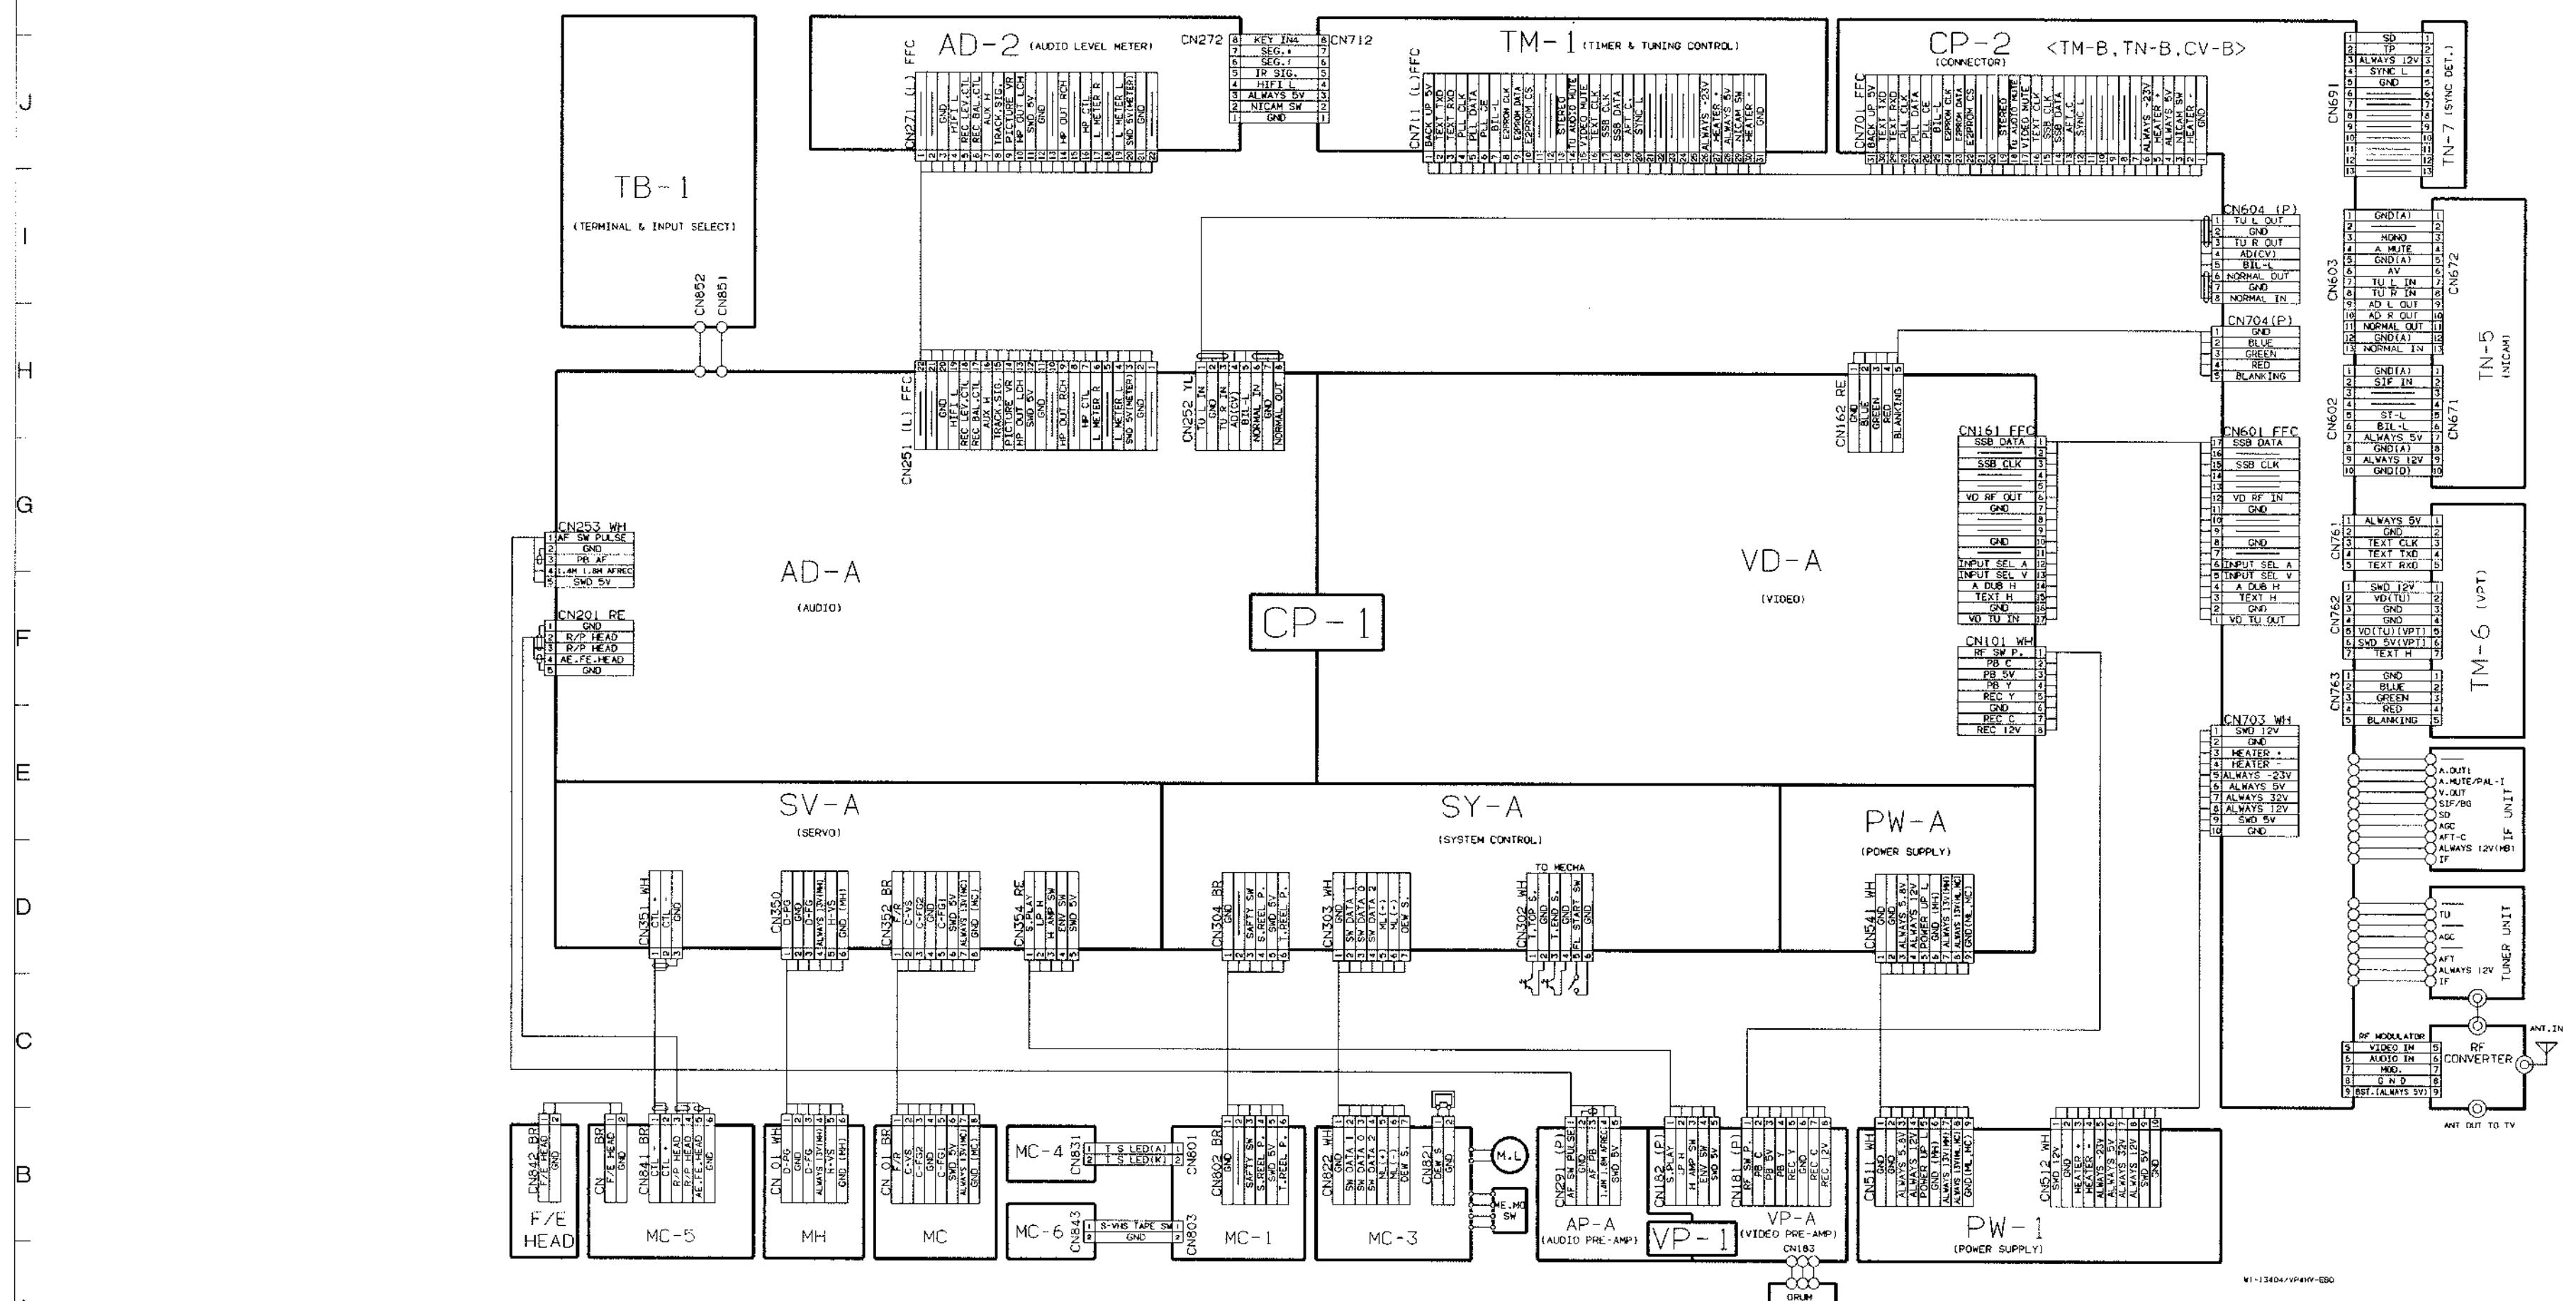


### 3-2. VIDEO CIRCUIT BASIC BLOCK DIAGRAM

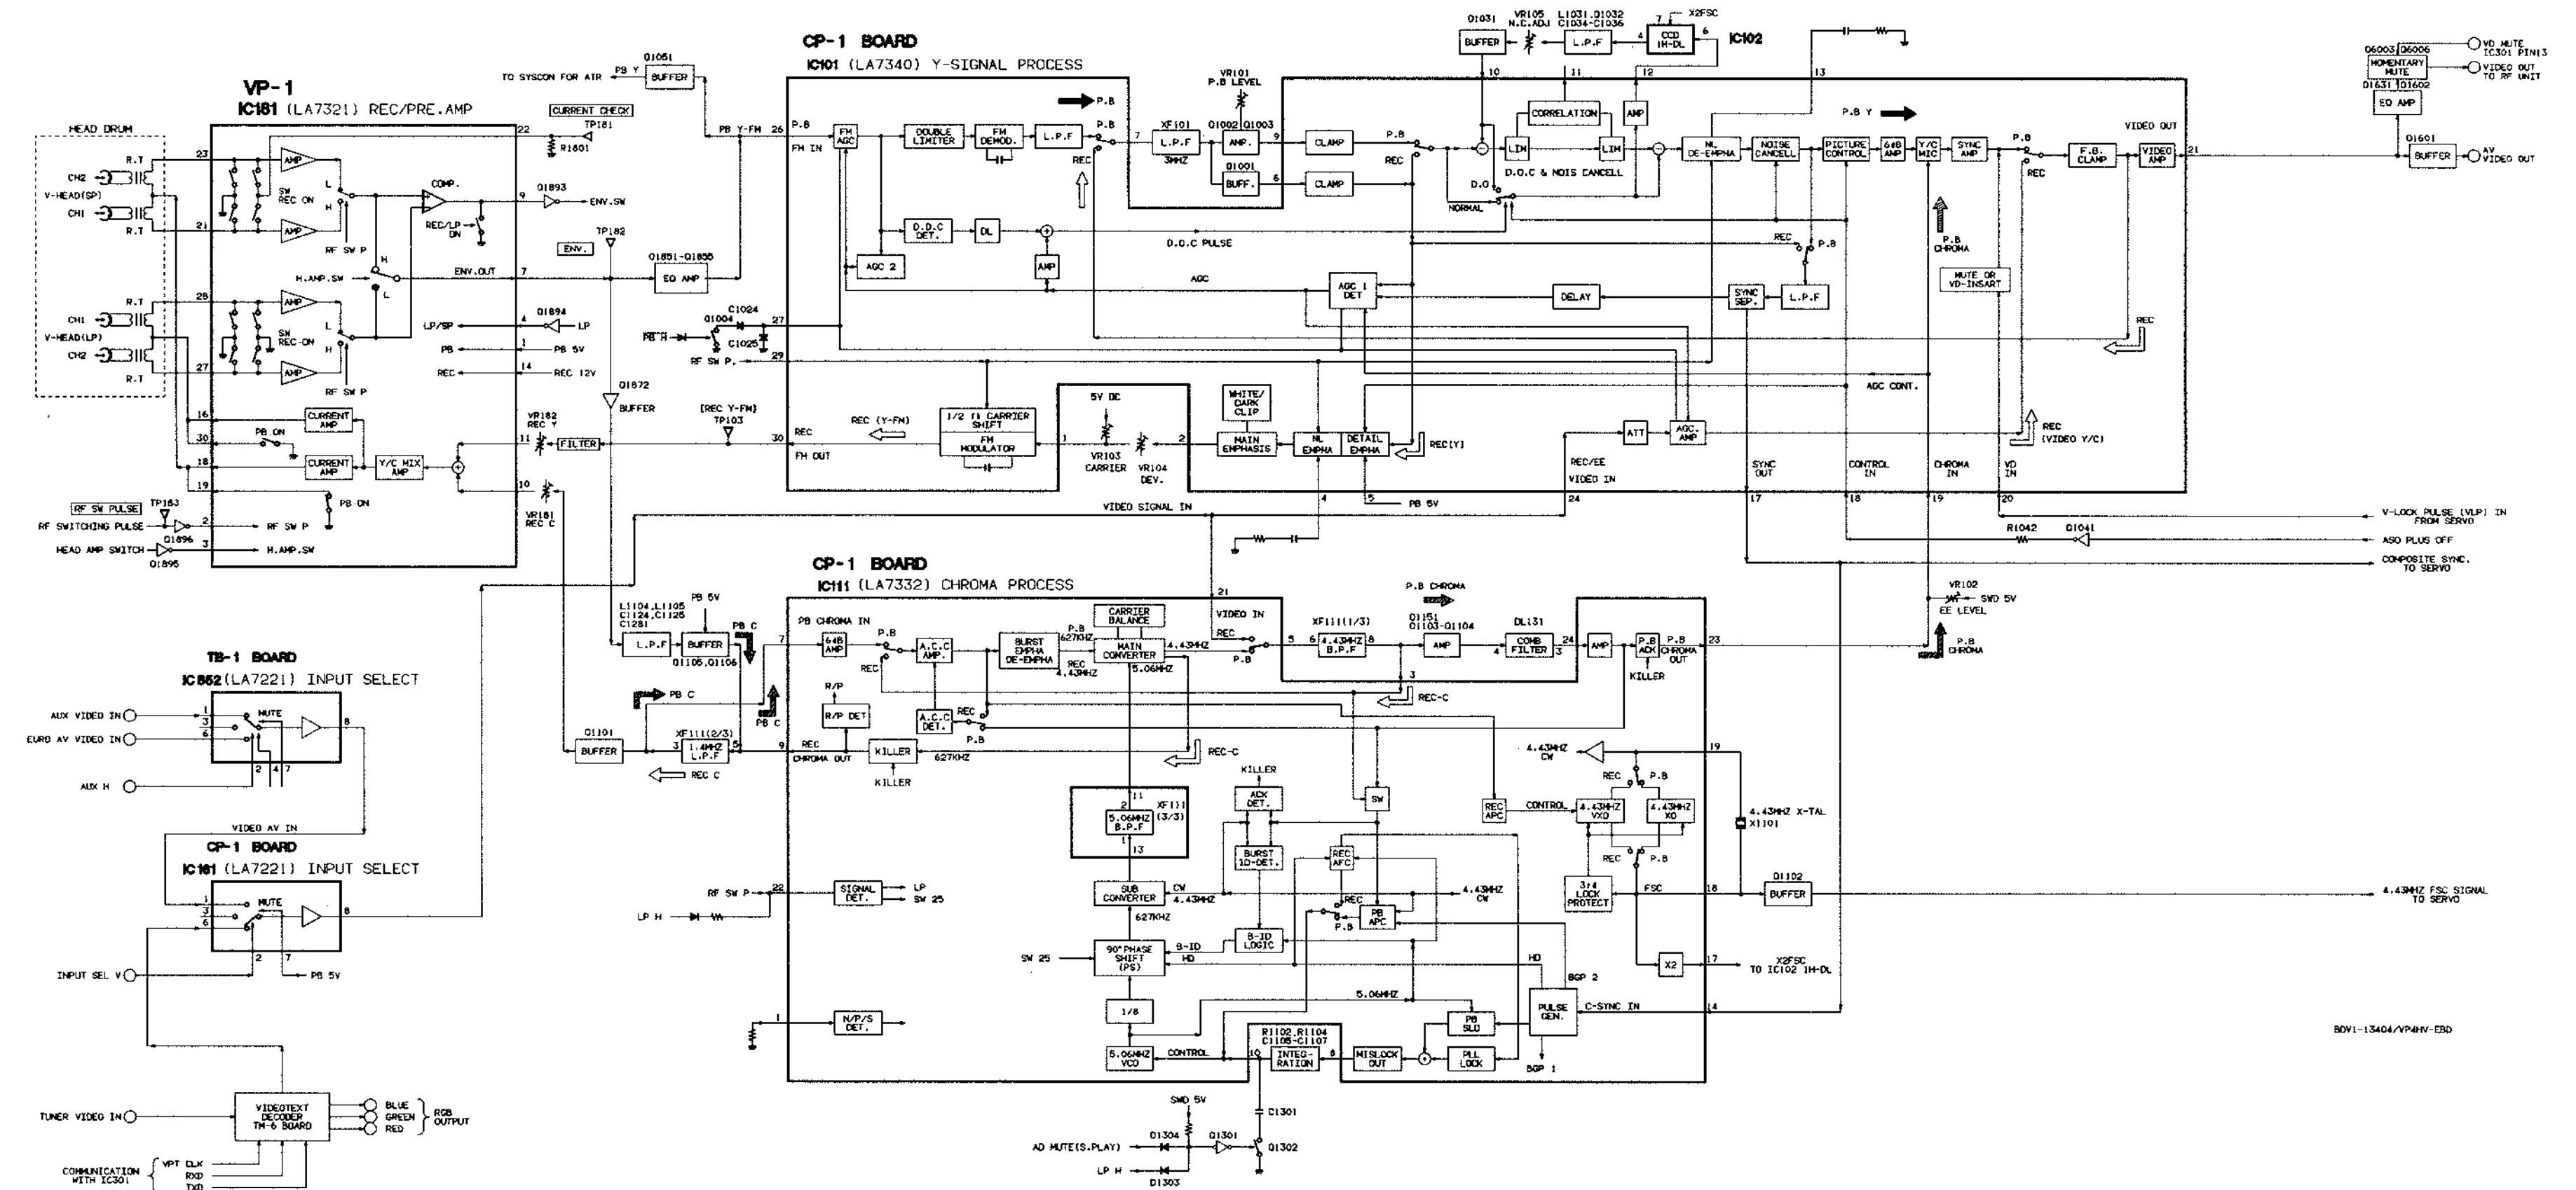

### 3-3. AUDIO CIRCUIT BASIC BLOCK DIAGRAM

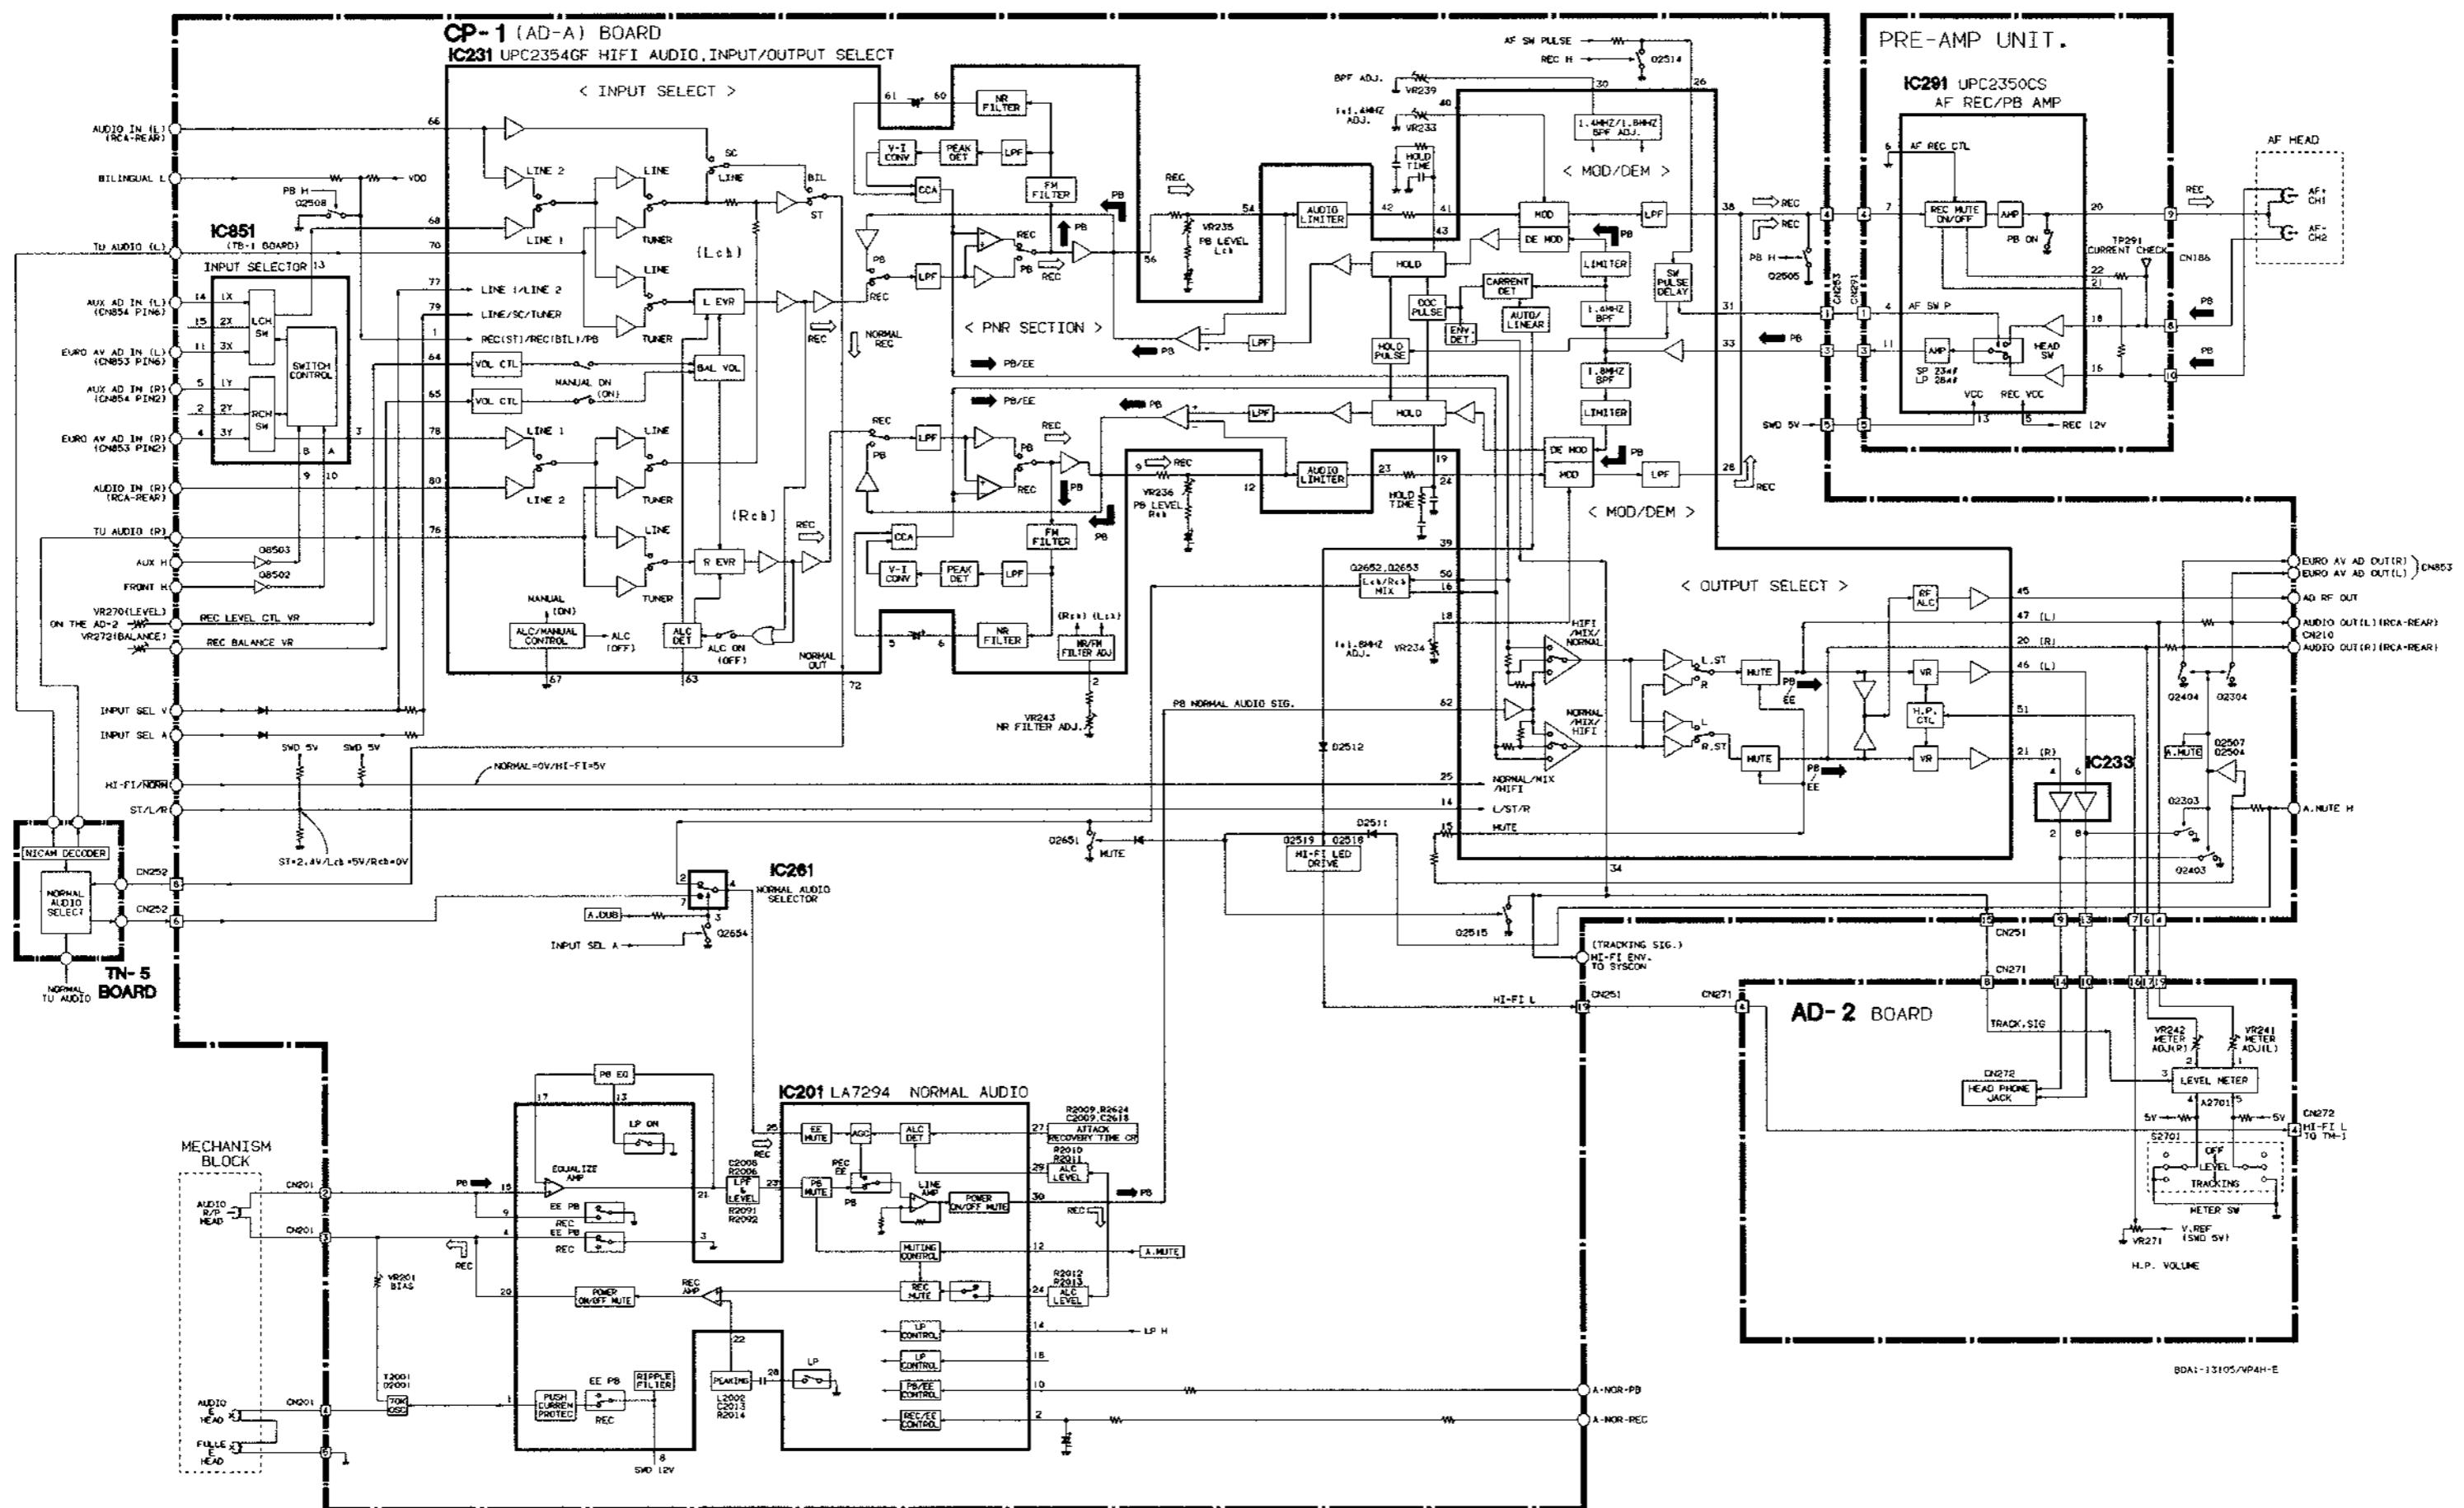

### 3-4. SYSTEM CONTROL & SERVO CIRCUIT BASIC BLOCK DIAGRAM

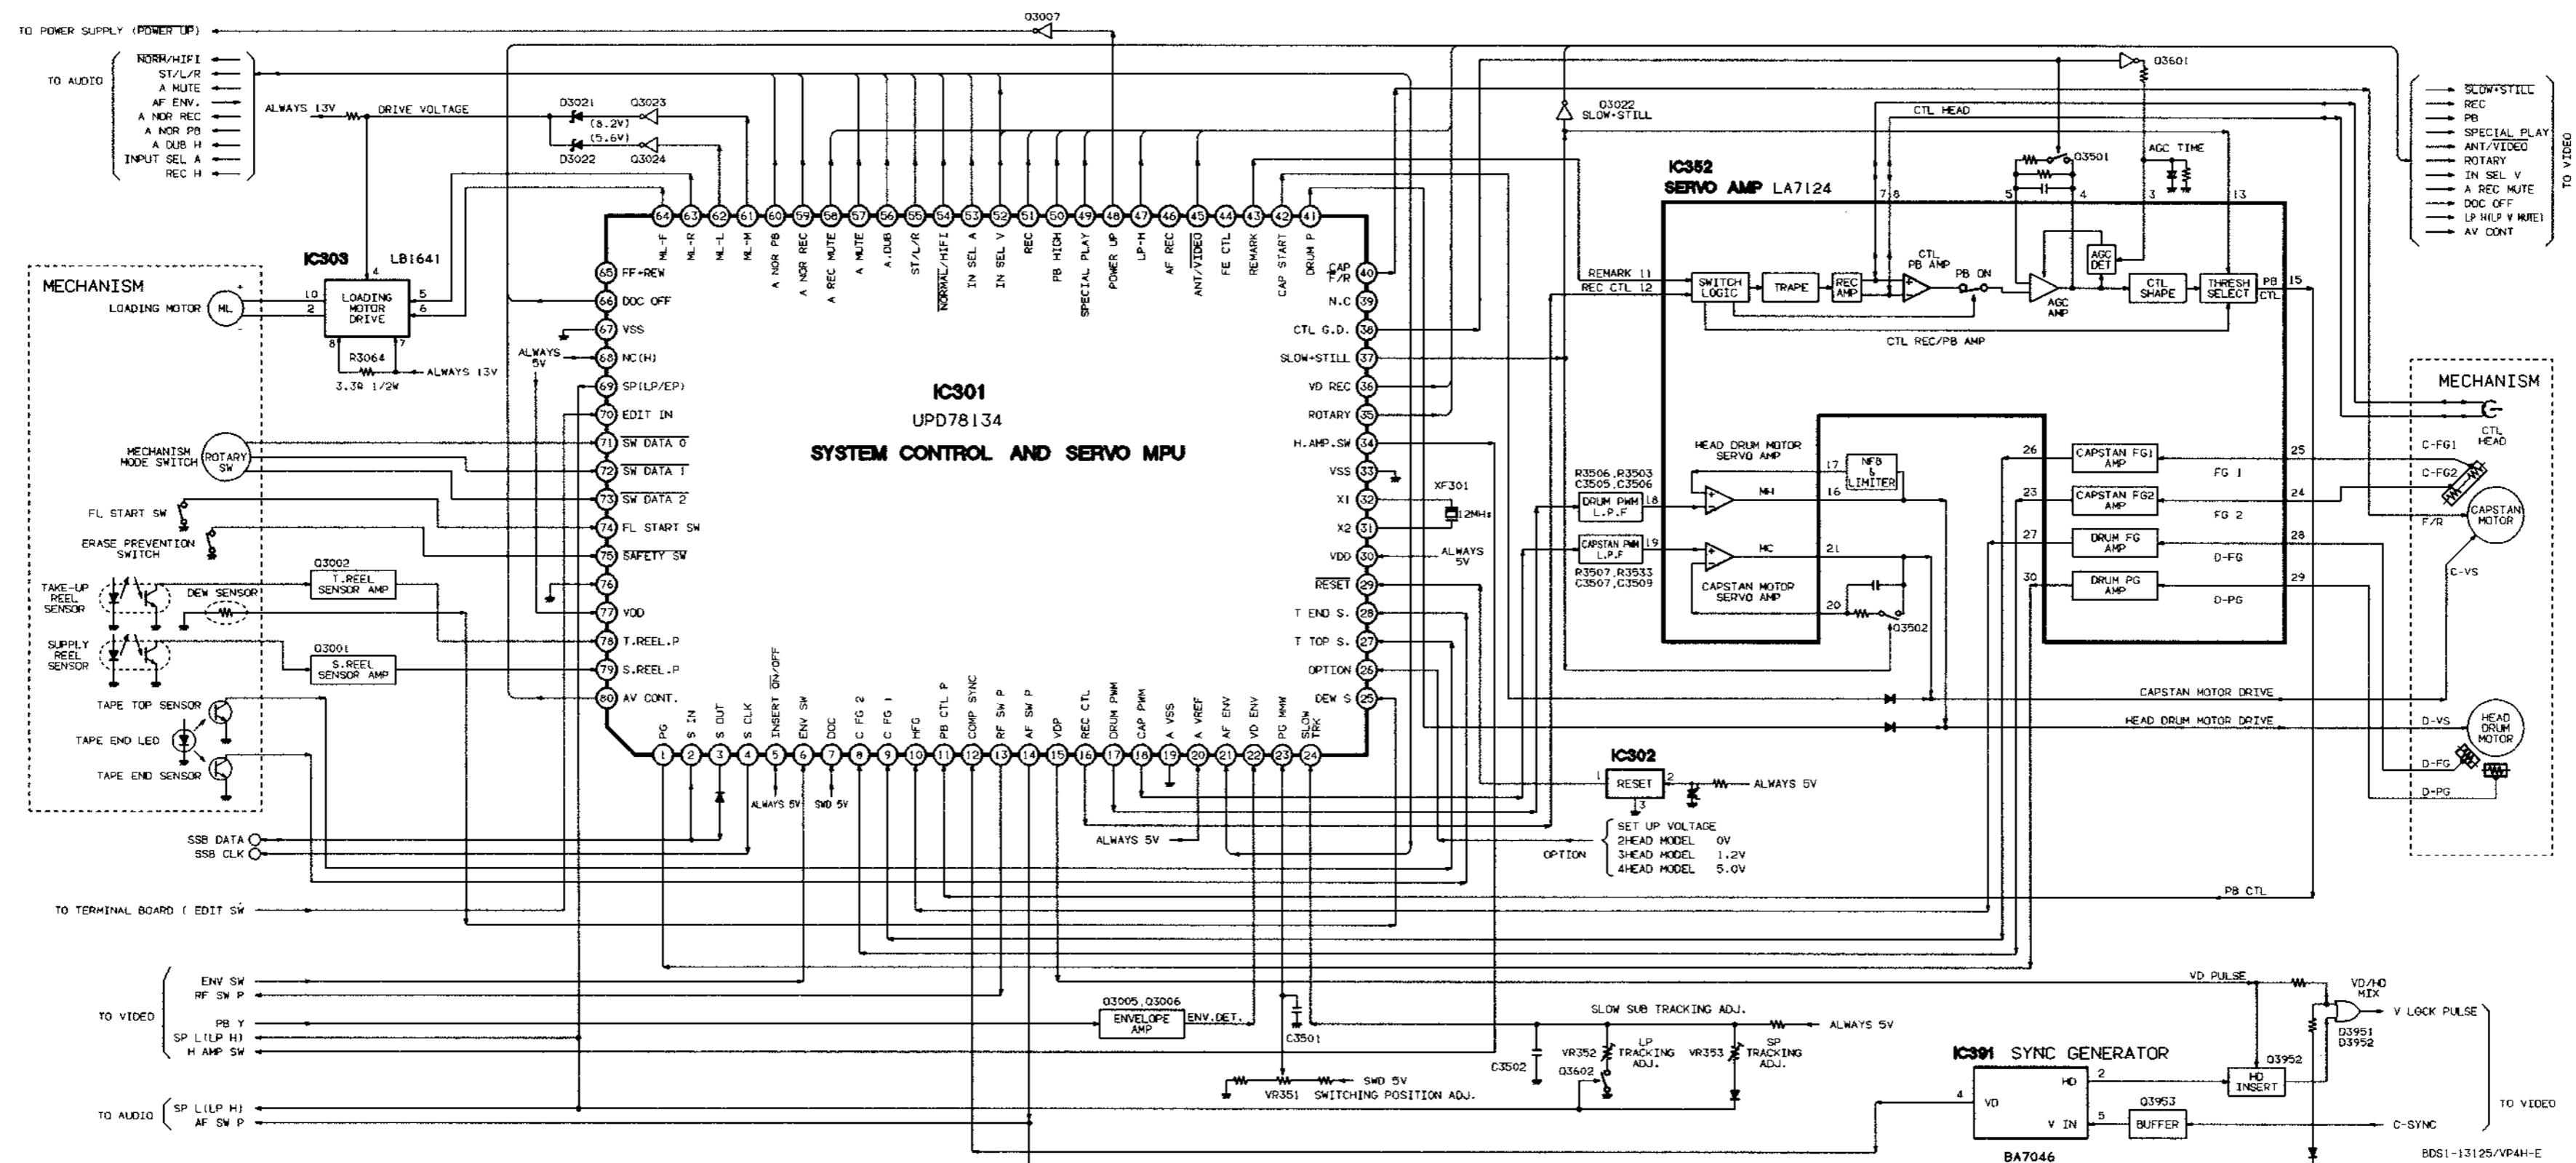

## 4. Mechanism Maintenance and Checking

### 4-1. PERIODIC CHECKING AND MAINTENANCE ITEMS AND SERVICE JIGS

The following maintenance and periodic checking procedures are recommended to ensure proper operation, and to protect the tape from dirt and damage. Also, these procedures should always be followed after repairing the unit.

#### 4-1-1. PERIODIC CHECK ITEMS

○ Cleaning    © Confirmation    △ Lubrication

| Part              |                                 | Usage Time<br>(hours) | 500 | 1000 | 1500 | 2000 | 2500 | 3000 | 3500 | 4000 | 4500 | 5000         | Remarks   |
|-------------------|---------------------------------|-----------------------|-----|------|------|------|------|------|------|------|------|--------------|---|
| Tape Guide System | Tape running surfaces           | ○                     | ○   | ○    | ○    | ○    | ○    | ○    | ○    | ○    | ○    | ○            |   |
|                   | ACE head                        | ○                     | ○   | ○    | ○    | ○    | ○    | ○    | ○    | ○    | ○    | ○            |   |
|                   | Drum (cylinder)                 | ○                     | ○   | ○    | ○    | ○    | ○    | ○    | ○    | ○    | ○    | ○            | Head life depends heavily on operating conditions.  |
| Drive System      | Loading belt                    | ◎                     | ◎   | ◎    | ◎    | ◎    | ◎    | ◎    | ◎    | ◎    | ◎    | ◎            |   |
|                   | Reel drive belt                 | ◎                     | ◎   | ◎    | ◎    | ◎    | ◎    | ◎    | ◎    | ◎    | ◎    | ◎            |   |
|                   | Intermediate gear, pulley axles |                       | △   |      | △    |      | △    |      | △    |      | △    |              | Absolutely avoid oil on tape running surfaces.  |
|                   | Capstan axles                   |                       | △   |      | △    |      | △    |      | △    |      | △    |              |   |
|                   | Loading motor                   | ◎                     |     | ◎    |      | ◎    |      | ◎    |      | ◎    |      | ◎            |   |
| Performance Check | Back tension torque             |                       | ◎   |      | ◎    |      | ◎    |      | ◎    |      | ◎    | 50 ± 10 g·cm |   |
|                   | Brake system                    |                       | ◎   |      | ◎    |      | ◎    |      | ◎    |      | ◎    |              |   |
|                   | FF, REW, REV, PLAY torque       |                       | ◎   |      | ◎    |      | ◎    |      | ◎    |      | ◎    |              | FWD: 600 g·cm and over<br>REW: 750 g·cm and over<br>PLAY: 100 to 160 g·cm<br>REV: 150 to 240 g·cm |

**Note:** The back tension torque is the value that has been measured by the cassette torque meter (VHJ-0016). The torque of FF, REV, REW, and PLAY represent those measured with them locked by the torque gauge. FF and REV are values 2 seconds after starting.

#### 4-1-2. CLEANING

##### 1. Drum (COMPL CYLINDER) and Video Heads (See Fig. 4-1-1.)

- 1) Wrap a chamois leather around your finger and moisten it with methyl alcohol.
- 2) Move the chamois leather to left and right several times on the video head to clean. There is a video head also on the opposite side, so clean it likewise. In Hi-Fi models, clean the audio head also.
- 3) Clean the tape path surface of the cylinder in the same way.

**Note:** Always turn power off before cleaning. Never move the chamois leather vertically or apply too much force to the head; it may be damaged.

##### 2. Cleaning of the Tape Guide System (See Fig. 4-1-2.)

Set the EJECT mode and clean the tape guide system (tape guides, impedance roller, FTE head, ACE head, pinch rollers, capstan axles, etc.) with a chamois leather moistened with methyl alcohol.

**Note:** Make sure that no oil, grease, etc. adhere to the chamois leather and that heads are not damaged.

##### 3. Cleaning of the Drive System

Clean the drive system (loading belt, reel drive belt, pulley, supply reel table, etc.) with a soft cloth moistened with methyl alcohol.

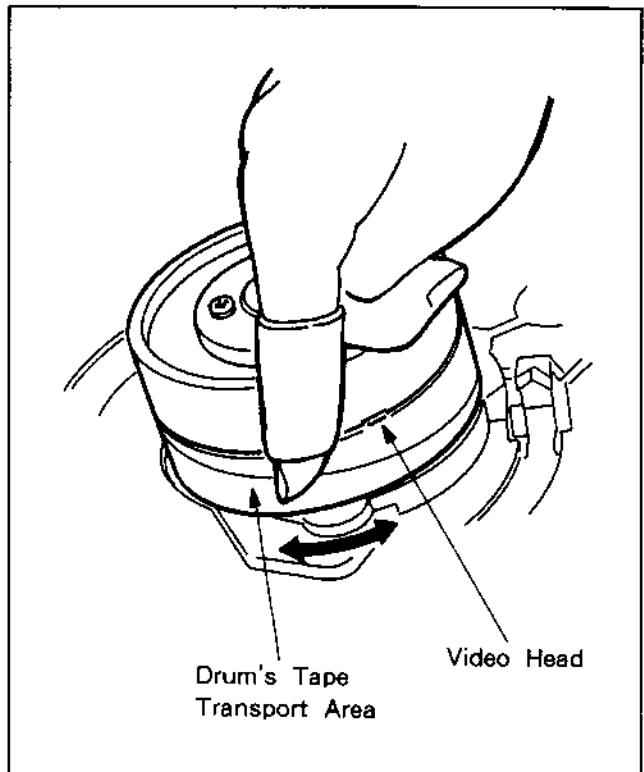


Fig. 4-1-1.


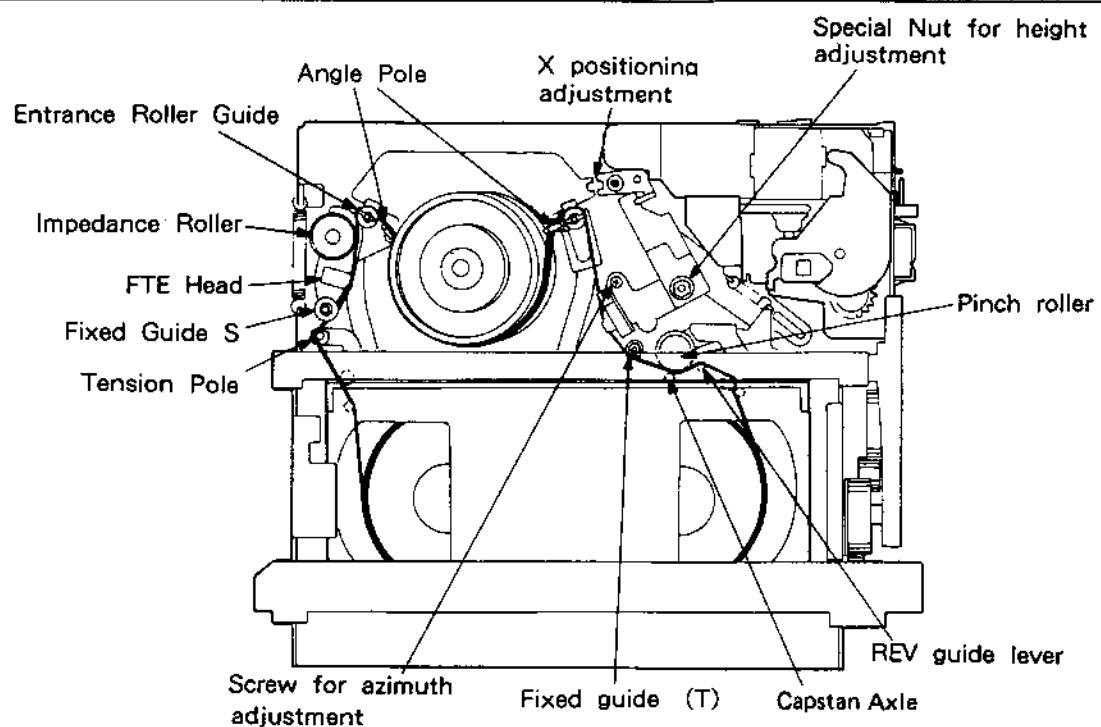


Fig. 4-1-2. Cleaning

#### 4-1-3. Service Jigs

| No. | Jig                                       | Jig No.  | Remarks                                    |
|-----|---|----------|--|
| 1   | Alignment tape                            | VHJ-0009 | SP monoscope, 7kHz (normal)                |
| 2   | Eccentric screwdriver                     | VHJ-0003 | For tape path adjustment                   |
| 3   | Nut box                                   | VHJ-0048 | For fixed guide removal                    |
| 4   | Torque gauge                              | VHJ-0004 | For reel take-up torque measurement        |
| 5   | Cassette torquemeter                      | VHJ-0016 | For back tension torque measurement        |
| 6   | Position adjustment gauge                 | VHJ-0049 | For position adjustment                    |
| 7   | Torque gauge screwdriver                  | VHJ-0014 | For screw fastening torque adjustment      |
| 8   | 3mm dia. bit for torque screwdriver       | VHJ-0045 | Spare bit for the torque gauge screwdriver |
| 9   | Video head removing tool                  | VHJ-0041 | For upper drum removal                     |
| 10  | Cassette stand plate gauge                | VHJ-0001 | For reel height adjustment                 |
| 11  | Mode selector                             | VHJ-0050 | For mechanism mode selection               |
| 12  | 26-pin flexible flat cable                | VHJ-0064 | Spare cable for mode selector              |
| 13  | Mode selector relay board (with VHJ-0076) | VHJ-0075 | Relay board for mode selector              |
| 14  | 7-wire flat cable                         | VHJ-0076 | Extension cable for relay board            |
| 15  | REV guide lever removing tool             | VHJ-0073 | For REV guide lever removal                |

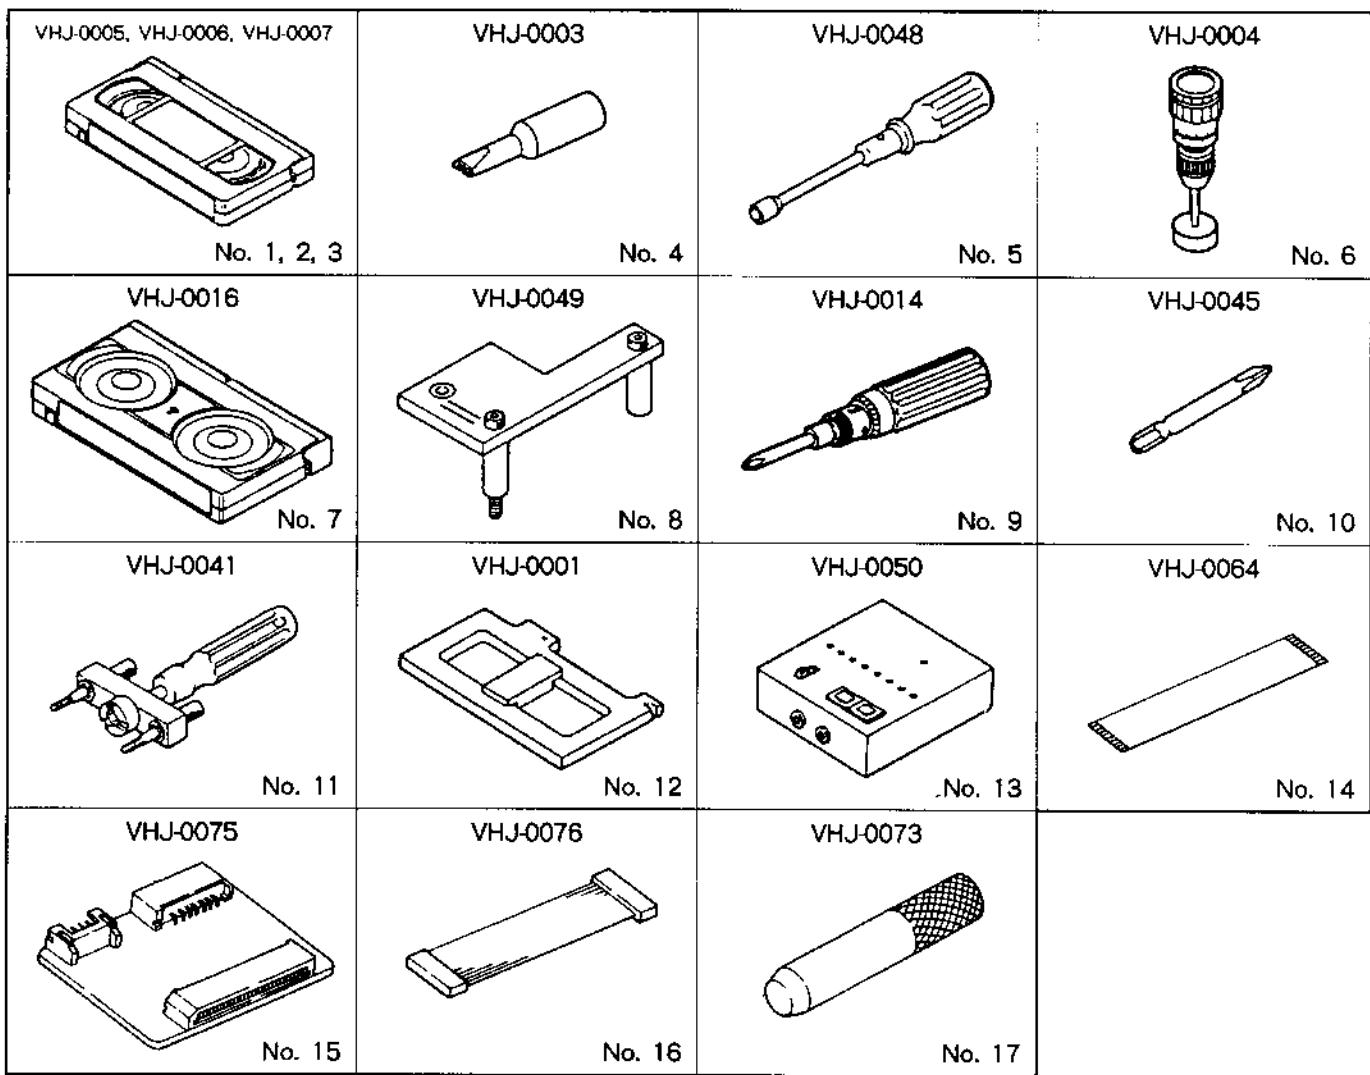

## 4-2. MODE SELECTOR (VHJ-0050) HANDLING INSTRUCTIONS

The mode selector drives the loading motor of the P91 mechanism with its internal batteries (UM-2 × 4 = 6V), using LEDs to indicate the mode (EJECT, INITIAL, BRAKE, STOP/REW/FWD, STILL, PLAY, IDLER, REV) simultaneously with EJECT↔REV mode changes.

Instead of the internal batteries, an external DC 6V power supply can also be used.

### 4-2-1. PART NAMES (See Fig. 4-2-1)

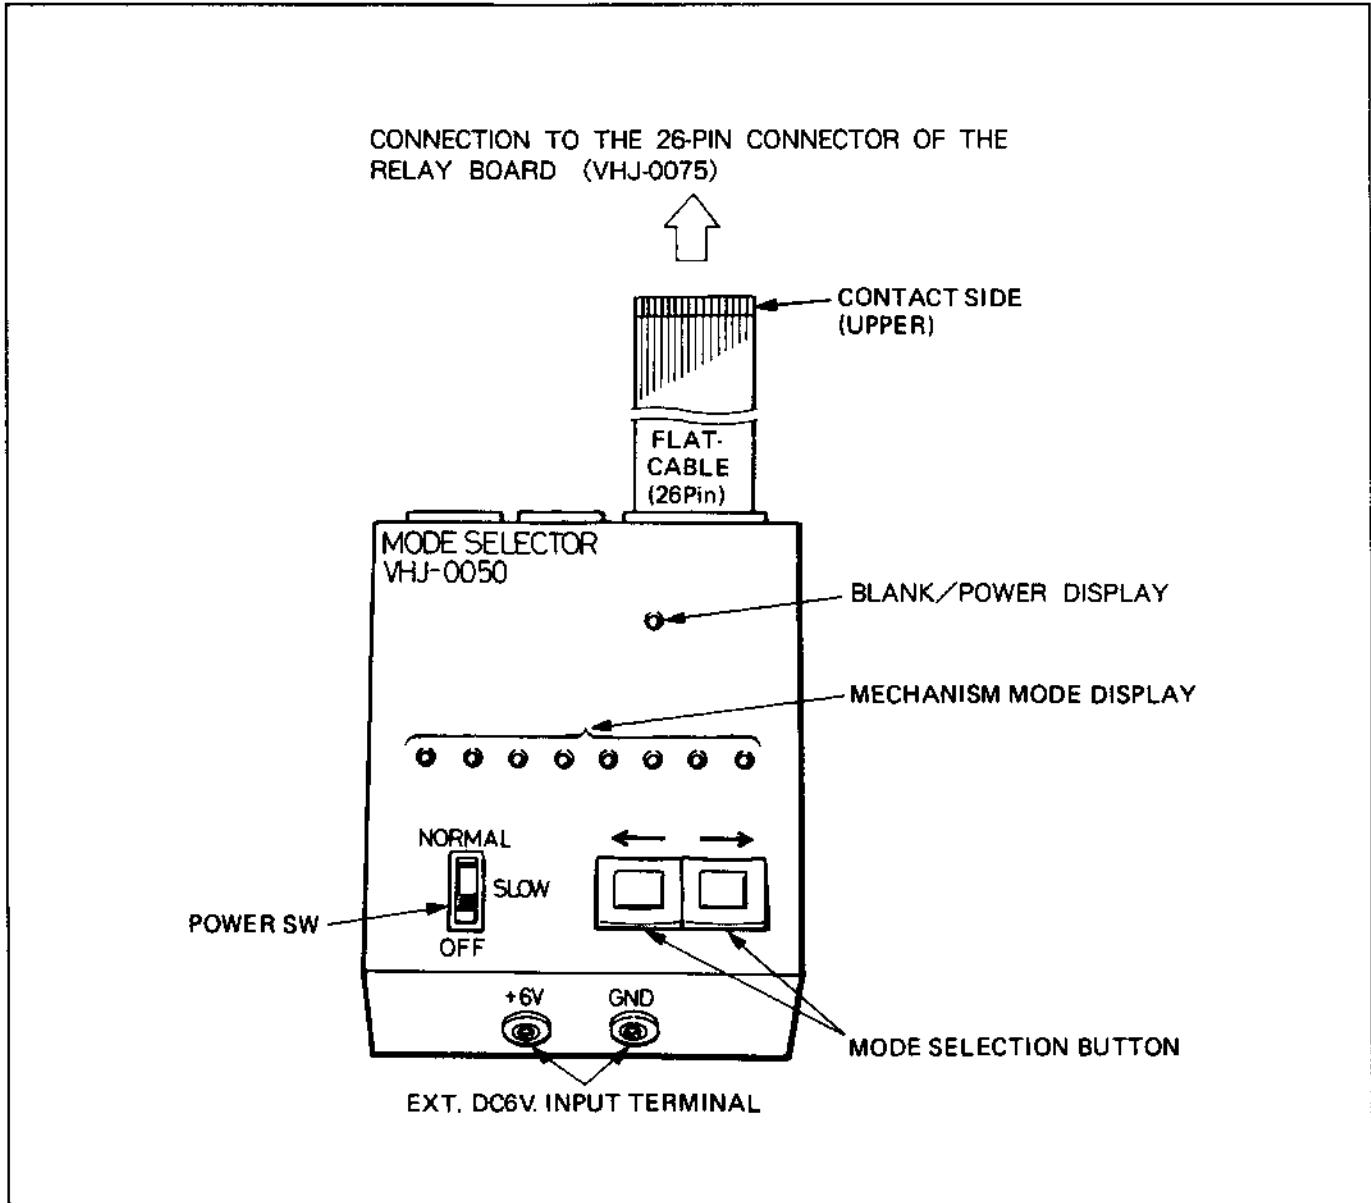


Fig. 4-2-1.

#### 4-2-2. CONNECTION METHOD (See Fig. 4-2-2)

- 1) Remove the 7-wire cable connected from the system control circuit to the connector (CN822) of the MC-3 board.
- 2) Connect the 7-wire cable (VHJ-0076) between the connector (CN822) of the MC-3 board and the 7-pin connector of the Mode Selector Connection Board (VHJ-0075).
- 3) Remove the 6-wire cable extending from the cassette holder section from the connector of the System Control Circuit Board and connect it to the 6-pin connector of the Mode Selector Connection Board (VHJ-0075).

- 4) Connect a supplied 26-pin flat cable (VHJ-0064) of the mode selector (VHJ-0050) between the mode selector body and the 26-pin connector of the Connection Board (VHJ-0075).

**Note:** Care should be taken to avoid mistaking the direction of the contacting side when connecting a flexible flat cable.

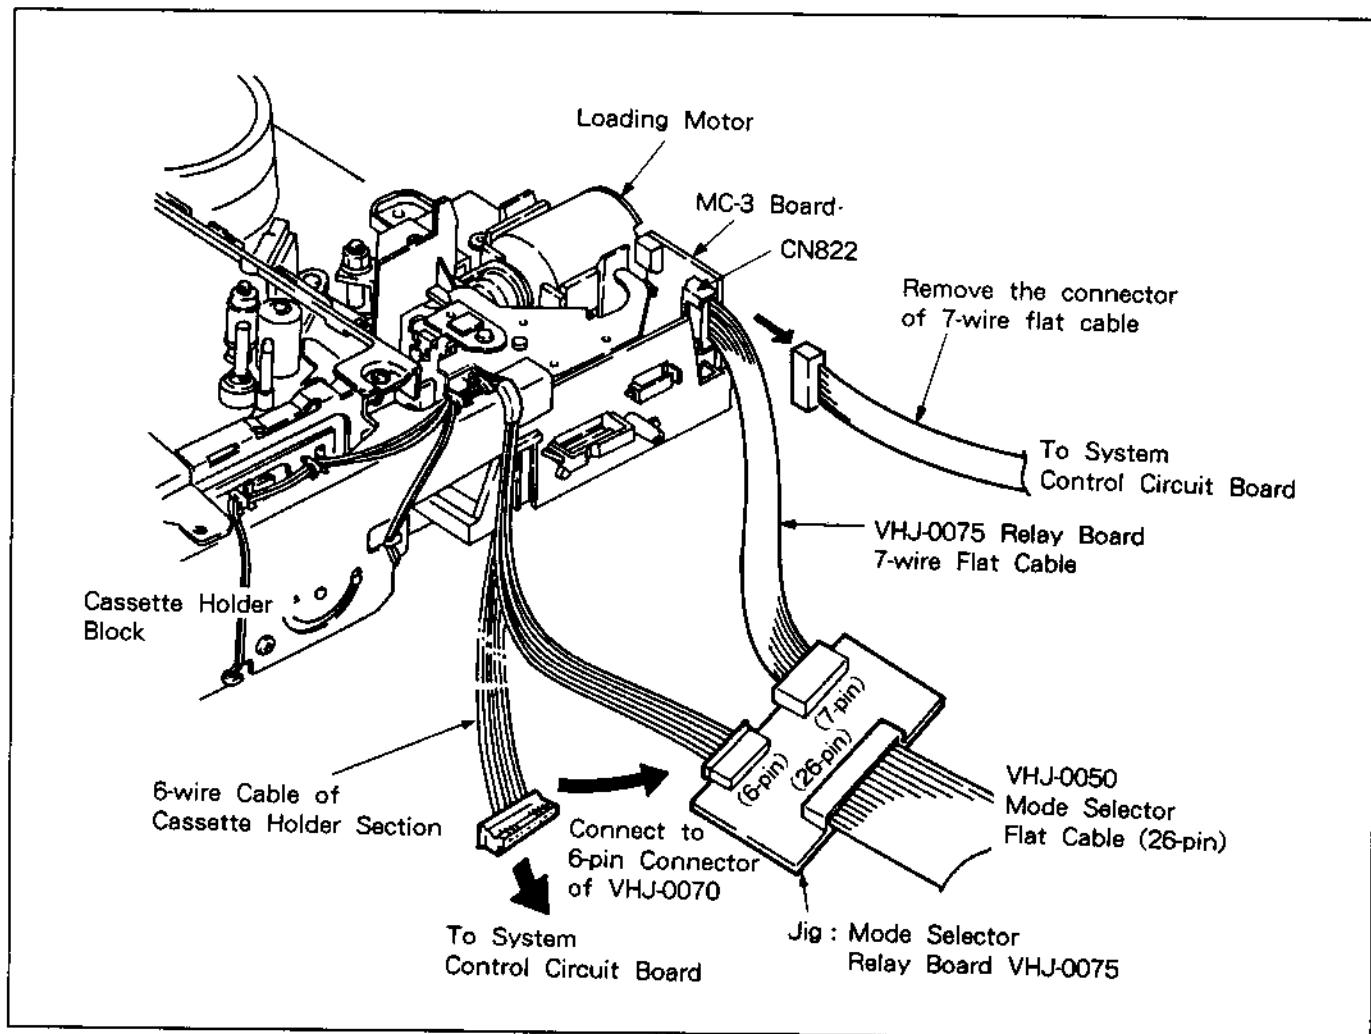


Fig. 4-2-2. Connection

#### 4-2-3. HANDLING METHOD

- 1) The mode changes in sequence of EJECT, INITIAL, BRAKE, STOP/REW/FF, STILL, PLAY, IDLER, REV when the right side ( $\Rightarrow$ ) of the mode selector button is kept on pressing.
- 2) To change the mode from REV to EJECT, press the left side ( $\Leftarrow$ ) of the mode selector button to select the desired mode.
- 3) In the mid position of each mode during a shift to other mode, the "BLANK" LED lights. But the "PLAY", "IDLER", "REV" LEDs light between the EJECT mode and the INITIAL mode. Be sure therefore to check the mechanism body to see just what state the mechanism is in.  
Incidentally, if the mode selector is not connected to the mechanism, the "BLANK" LED lights to indicate the power ON.
- 4) The SLOW position of POWER switch makes relatively slow motions in comparison with the NORMAL position.

**Note 1:** The mode selector drives the loading motor only, not affecting the head drum motor and the capstan motor. When using the mode selector with a cassette loaded, turn the capstan motor manually to remove tape slackness, preventing tape entanglement.

**Note 2:** If the Left side ( $\Leftarrow$ ) of the mode selector (VHJ-0050) key is kept pressed with the COMPL cassette mechanism removed, it might get past the EJECT position, causing the front helical gear and the front worm gear to get disengaged.

In this condition, since the front helical gear will not turn even if the right side ( $\Rightarrow$ ) of the mode selector key is pressed, rotate (push) the front helical gear clockwise by hand and engage it with the front worm gear. As there is a misalignment between the mechanism main body operation mode (indicated by the mode selector indicator lamps) and the front loading mechanism operation mode, keep the right side ( $\Rightarrow$ ) of the mode selector key pressed until the front helical gear and the front loading gear of the front loading mechanism get back to the initial condition. (Refer to A and B in Fig. 2-3-2 of section 2-3-2. Loading Motor.)

When the front loading mechanism returns to the initial condition, operation mode of the whole mechanism gets back to normal, matching the mode shown by the mode indicator lamps (mode EJECT would not be properly indicated during eject).

Sometimes, engagement of the front helical gear with the front worm gear is delayed and operation mode. The mechanism main body gets too much ahead and the front loading mechanism mode cannot be switched to the initial condition. In that case, press the Left side ( $\Leftarrow$ ) of the mode selector key, setting the mechanism main body operation mode back to EJECT (rotation of the mode cam and the MAIN CAM stops).

**Note 3:** The mode indicator lamps show the mechanism operation mode, but the EJECT lamp may sometimes fail to indicate the actual mechanism operation mode.

When setting the mechanism to the EJECT or INITIAL mode for dismounting or reassembling, fine adjustment of the each gear and cam, etc., marking positions is required after the mode indicator lamp has lighted up. Perform this with the mode selector switch in the SLOW position.

## 5. Mechanism Adjustment

### 5-1. OPERATING THE MECHANISM WITH NO CASSETTE INSERTED (See Fig. 5-1-1.)

- 1) Attach black vinyl tape to the T. END and T. TOP sensors to prevent light from entering.
- 2) Push the TRAY LOCK LEVER in the direction of the arrow to maintain the unlocked condition. Release the lever just before the TRAY starts moving down.
- 3) In this condition, operation is possible in every mode. However, the following procedures are necessary to operate the unit in the REC, REW and R-SEARCH modes.

REC mode :

Push the SAFETY SW LEVER to turn the SAFETY SWITCH (Erasure Prevention Switch) ON, then press the REC button. If the SAFETY SWITCH is not turned ON, the unit will enter the EJECT mode.

REW/R-SEARCH : After pressing the REW button, turn the TAKE-UP REEL ASS'Y by hand. Otherwise, the reel sensor will operate, setting into the INITIAL mode after 2 to 3 seconds.

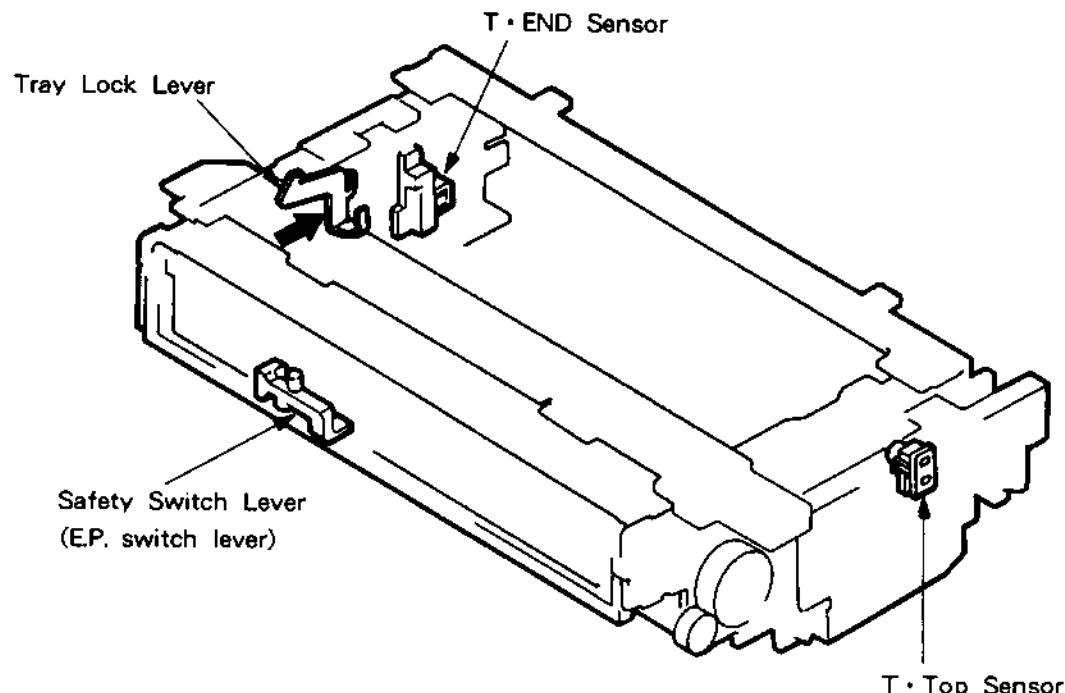


Fig. 5-1-1. Preparations for Adjustment

## 5-2. REEL TABLE HEIGHT ADJUSTMENT AND TORQUE CHECK

### 5-2-1. REEL TABLE HEIGHT (See Fig. 5-2-1.)

If the SUPPLY REEL ASS'Y or the TAKE-UP REEL ASS'Y is replaced, it will be necessary to adjust the REEL TABLE height.

- (1) Remove the COMPL CASSETTE MECHANISM as instructed in 2-2-1.
- (2) Attach the cassette stand plate gauge (VHJ-0001) and slide the gauge in the direction of the arrows.
- (3) Confirm that, when the gauge stops, the REEL TABLES are not in contact with surface A of the plate and are in contact with surface B.
- (4) If the REEL TABLE is in contact with surface A, remove a spacer and check again.
- (5) If the REEL TABLE is not in contact with surface B, add a spacer and check again.
- (6) Remove the cassette stand plate gauge.
- (7) Set the EJECT mode with the mode selector.
- (8) Mount the COMPL CASSETTE MECHANISM as instructed in 2-2-1.

#### Note:

- Adjust the reel table height by adding or removing spacers (0.13t, 0.25t, 0.3t, 0.4t and 0.5t) as appropriate so that the height meets the specifications. Use the same method for both the TAKE-UP REEL TABLE and the SUPPLY REEL TABLE.

(The 0.5t washer is included as the standard washer for the SUPPLY REEL ASS'Y. The 0.4t washer is included as the standard washer for the TAKE-UP REEL ASS'Y.)

- If the height of the reel table is not within the specified value, the tape edge might be damaged as a result, or the tape path adjustment might not be possible to make.

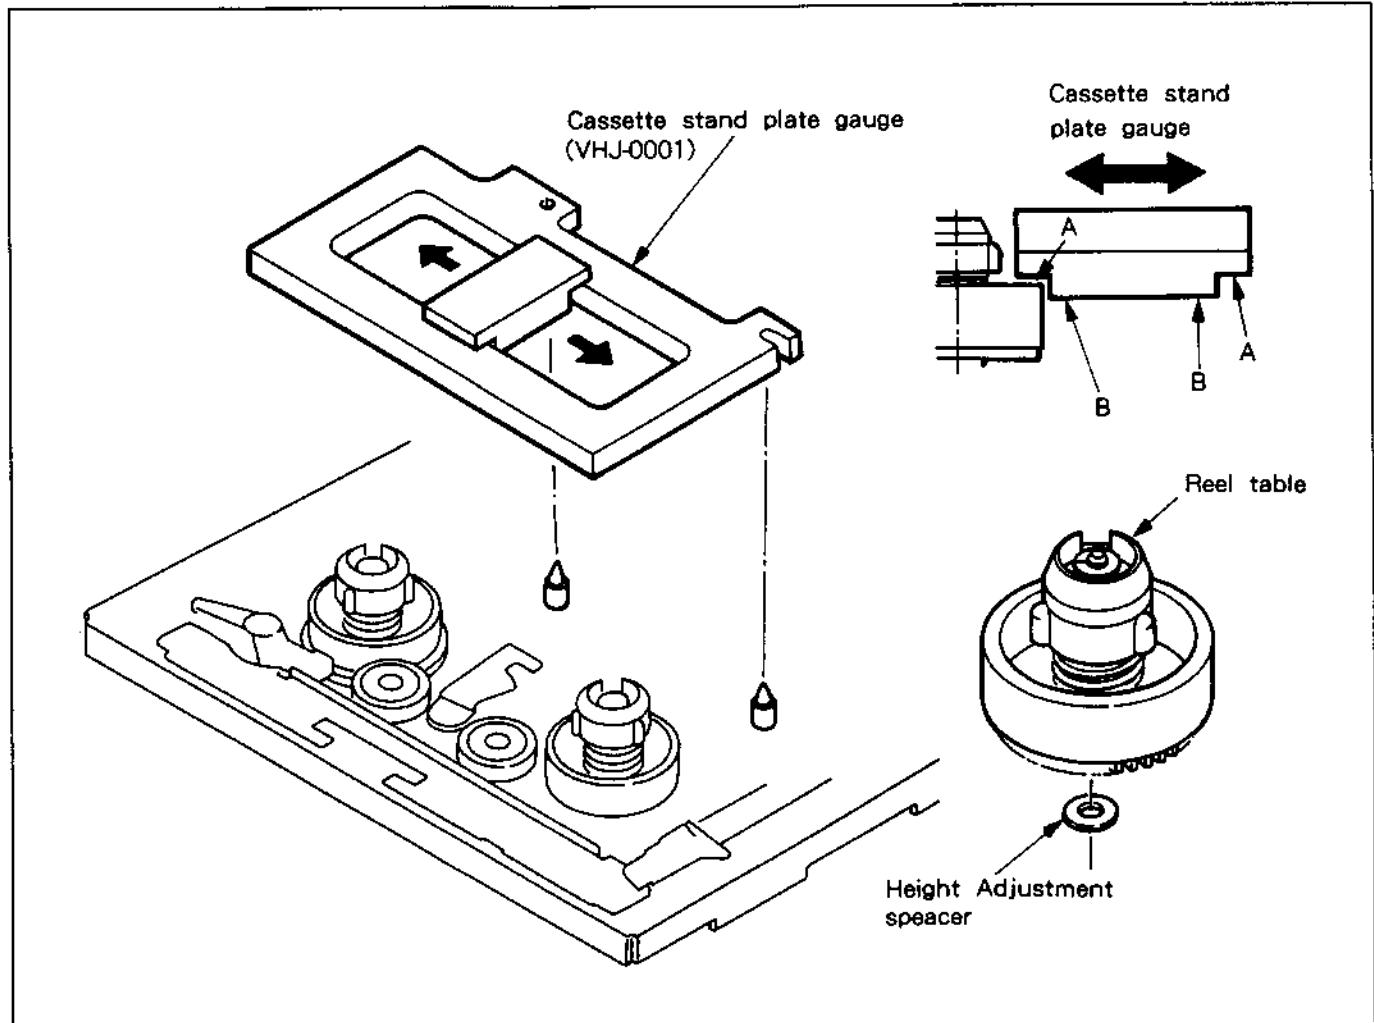


Fig. 5-2-1. Reel Table Height Adjustment

## 5-2-2. TORQUE CHECK (See Fig. 5-2-2.)

- 1) Set the unit to operating condition without a cassette inserted as instructed in 5-1.
- 2) Measure the SUPPLY REEL TABLE torque in the REW mode, and confirm that it is 750 g-cm or more. Perform this measurement keeping the torque gauge in a fixed position with your hand (locked torque).
- 3) Measure the TAKE-UP REEL TABLE torque in the F.FWD mode, and confirm that it is 600 g-cm or more (locked torque).
- 4) Measure the TAKE-UP REEL TABLE torque in the playback mode (SP tape speed), and confirm that it is within 100 through 160 g-cm (locked torque).
- 5) Measure the SUPPLY REEL TABLE torque in the REV (R-SEARCH) mode, and confirm that it is within 150 through 240 g-cm (locked torque).

6) After confirming that torque readings are within the specifications for each mode, check the following :

- Ⓐ Dirt on the capstan motor and the REEL PULLEY groove.
- Ⓑ Deterioration of the REEL DRIVE BELT.
- Ⓒ Deterioration of the FRICTION GEAR ASS'Y felt (torque during playback).
- Ⓓ Wear and damage of the COMPL CLUTCH MECHANISM and the reel drive system gears.

**Note 1:** Items Ⓐ, Ⓑ and Ⓒ require replacement if found defective.

**Note 2:** The measured value of torque during FF and REW represents the value 2 seconds after starting.

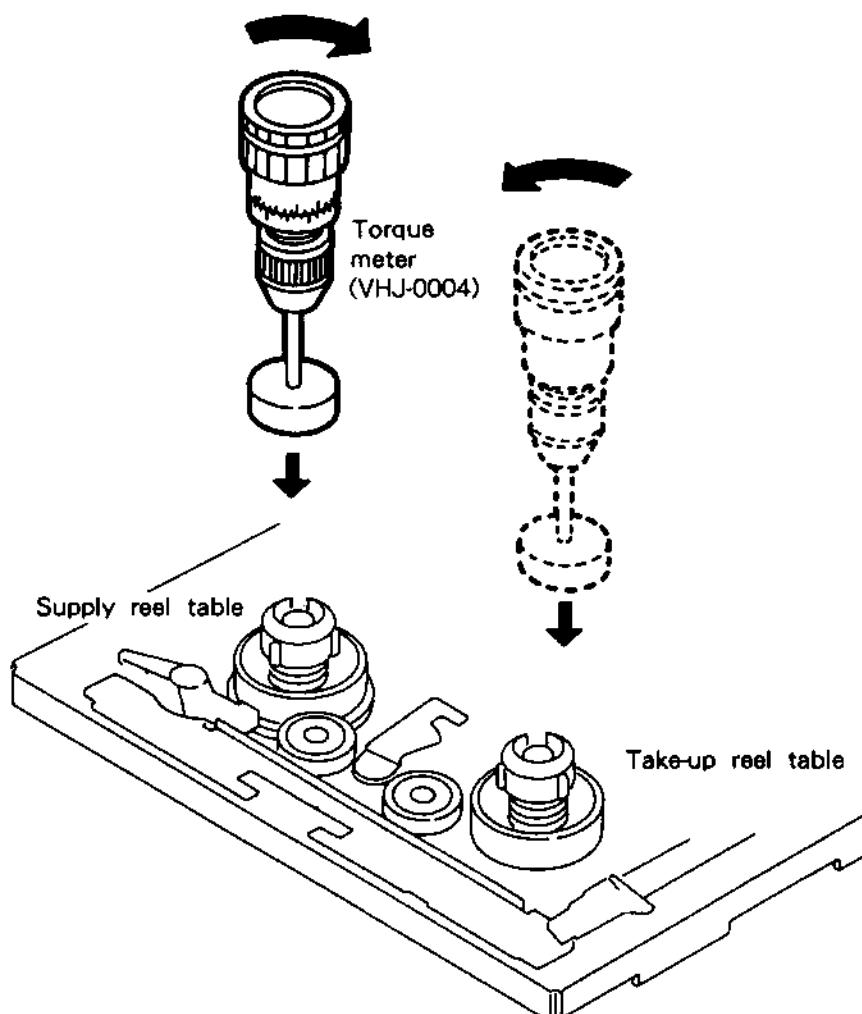


Fig. 5-2-2. Checking REW/FF/PLAY Torque

### 5-3. TENSION POLE (BACK TENSION GUIDE) POSITION ADJUSTMENT AND BACK TENSION TORQUE CHECK

#### 5-3-1. TENSION POLE (BACK TENSION GUIDE) POSITION ADJUSTMENT (See Fig. 5-3-1.)

- 1) Remove the COMPL CASSETTE MECHANISM as instructed in 2-2-1.
- 2) Set the PLAY mode with the mode selector (VHJ-0050).
- 3) Attach the position adjustment gauge (VHJ-0049) ①.
- 4) Confirm that the tension pole ② is within the position adjustment gauge frame.
- 5) In case the tension pole is not within the above-mentioned frame, adjust it by loosening the screw ④ a little and changing the mounting position of the BAND HOLDER ⑤ in the direction of the arrow A.
- 6) Remove the position adjustment gauge ①.
- 7) Set the EJECT mode with the mode selector.
- 8) Mount the COMPL CASSETTE MECHANISM as instructed in 2-2-1.
- 9) Confirm that back tension torque is within  $50 \pm 10$  g-cm, as instructed in 5-3-2 below.

#### 5-3-2. BACK TENSION TORQUE CHECK (See Fig. 5-3-1.)

- 1) Attach the cassette torquemeter (VHJ-0016) and set the PLAY mode.
- 2) Confirm that back tension torque is within  $50 \pm 10$  g-cm.
- 3) In case back tension torque does not meet the above specification, proceed as follows :
  - ④ Clean the portion where the brake band (BAND HOLDER ASS'Y) ⑦ of the SUPPLY REEL ASS'Y ⑥ makes contact.
  - ⑥ Confirm that the brake band of the BAND HOLDER ASS'Y ⑦ does not make wear and that it is clean. If wear or dirt is found, replace the band holder assembly ⑦ as instructed in 2-7-3.
  - ⑧ Replace the TENSION LEVER ASS'Y SPRING COIL ⑧.
- 4) Perform the Tension Pole Position Adjustment after performing ④, ⑥ and ⑧.

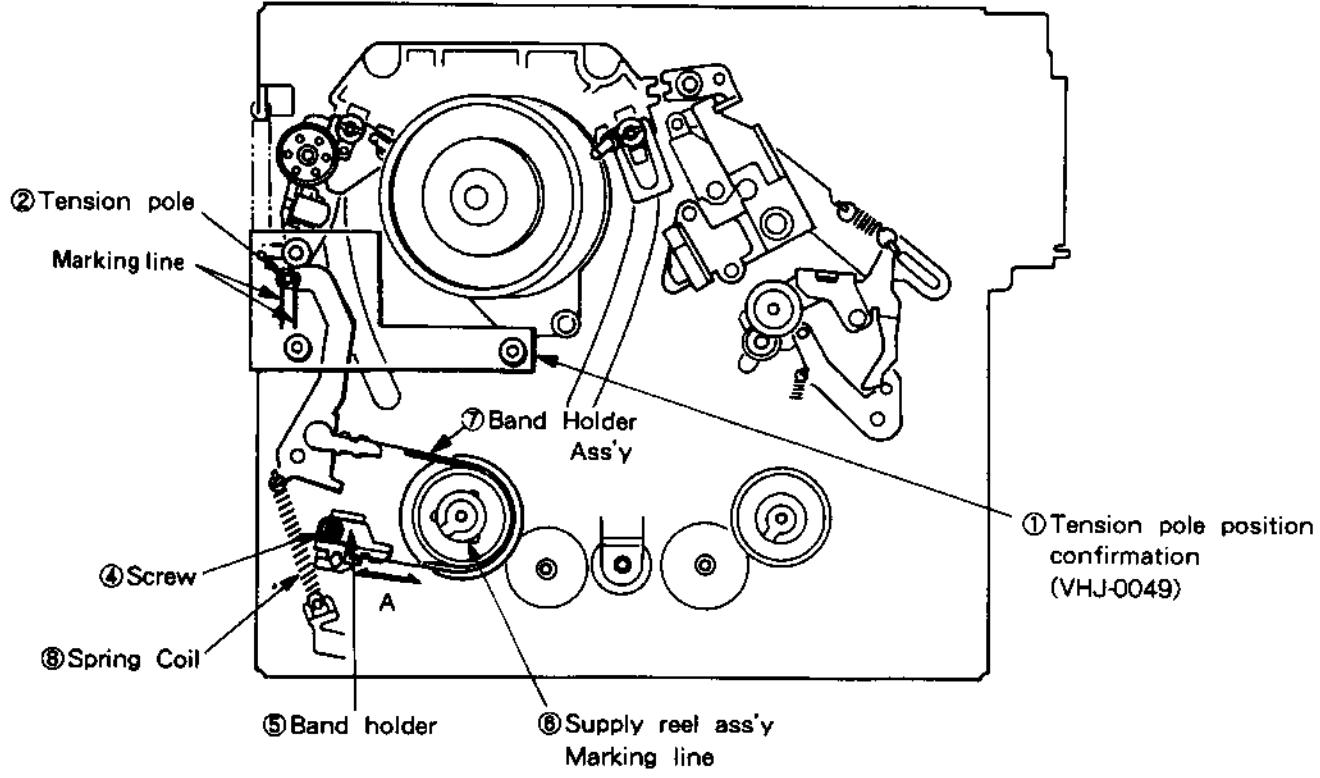


Fig. 5-3-1. Tension Pole Positioning Adjustment

## 5-4. TAPE PATH ADJUSTMENT

The tape path mechanism is precisely adjusted at the factory. Normally no readjustment is required, but checking and/or adjustment is necessary when parts of the tape path mechanism among those shown in the figure below (See Fig. 5-4-1.) have been removed or replaced after a long period of use. This operation consists of adjusting the various guides so that the tape drawn out from the supply reel runs smoothly along the DRUM (CYLINDER) lead surface. A way of grasping the tape path condition by electronic means is monitoring the video head output envelope waveform with an oscilloscope. However, the fact that visual observation is essential in order to know whether the tape is running through the various guides in a smooth and natural way should be kept in mind when checking and adjusting.

Also remember that the position of tape guides is not greatly affected by the replacement of the UPPER DRUM (UPPER CYLINDER) or the COMPL DRUM (COMPL CYLINDER), provided that it is correctly performed, and that only the replaced parts should be adjusted after replacing a tape guide or COMPL HEAD BRACKET, since the position of the other tape guides shall not change considerably.

### 5-4-1. PREPARATIONS FOR ADJUSTMENT

- (1) Clean the tape transport surfaces. (See Fig. 5-4-1.)
- (2) Connect the oscilloscope. Connect the channel 1 probe to the envelope waveform test point, and the channel 2 probe to the SW25 (RF SW P) test point. During adjustment, apply a trigger to the L side of the SW25 (RF SW P) in order to monitor the waveform output from channel 1 of the video head.  
**Note:** Since oscilloscope connection points differ according to the model, refer to the "TEST POINT FOR TAPE PATH ADJUSTMENT" in the section 6 ELECTRICAL ADJUSTMENT.
- (3) Use a dentist's mirror for visual observation of tape path condition.
- (4) Use an eccentric driver (VHJ-0003) for adjustment of the guide rollers.
- (5) When adjusting height of the guide rollers or COMPL HEAD BRACKET, turn the special nut or the upper flange clockwise to push the tape downward, and counterclockwise to make the tape rise up.
- (6) Do not use damaged cassette tapes for tape path adjustment.

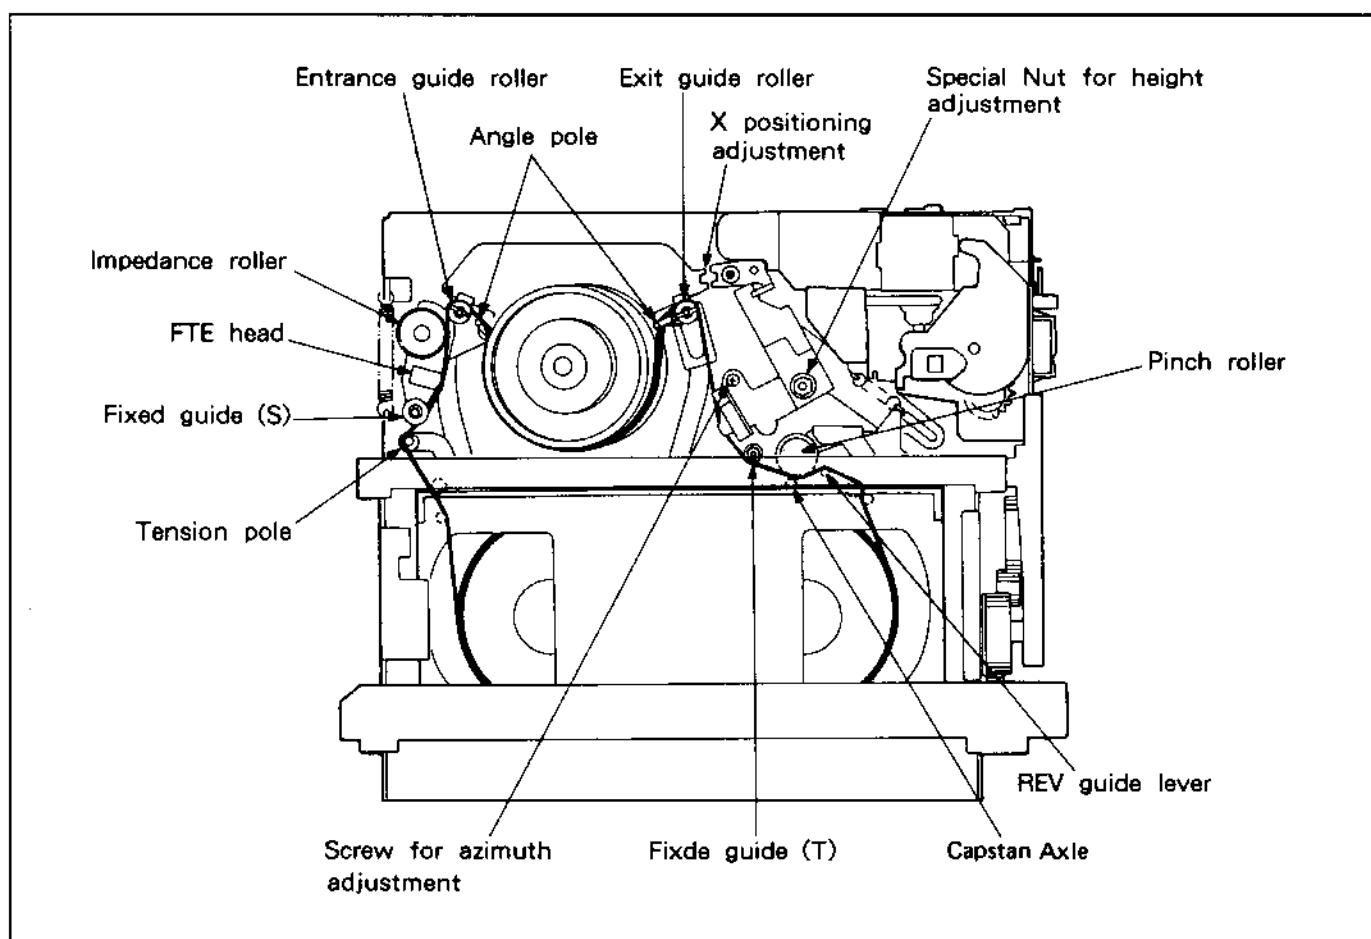


Fig. 5-4-1. Preparation for Adjustment

#### **5-4-2. ADJUSTMENT BY VISUAL OBSERVATION AFTER GUIDE ROLLER OR COMPL HEAD BRACKET REPLACEMENT**


Perform this adjustment after removing or replacing any of the above parts. Only for the replaced or removed parts, play back an alignment tape (VHJ-0009) beforehand and adjust height by visual observation.

##### **(1) Guide Rollers (See Fig. 5-4-2.)**

The tape should not be curled by the guide roller upper and lower flanges. It should also run smoothly, without moving up and down on the DRUM (CYLINDER) lead surface.

**Note:** An excessive guide roller pressure may cause tape damage.

(Normal)

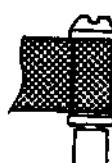

Correct



(Too high tape  
running position)



(Too low tape  
running position)



Incorrect

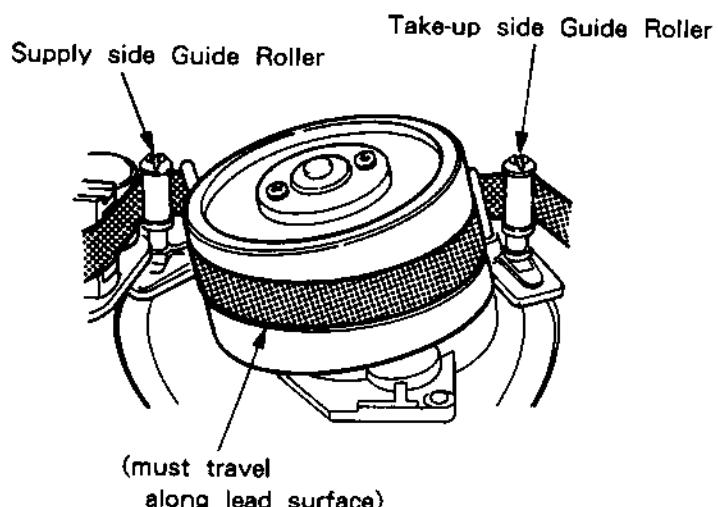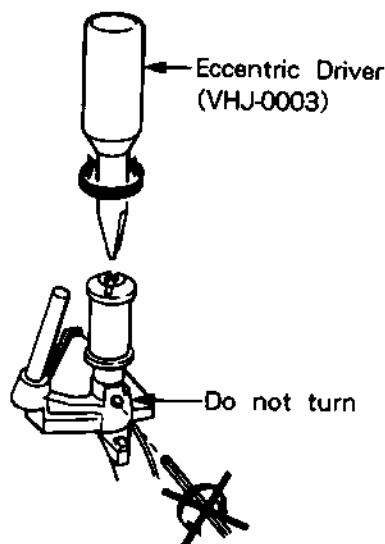

**Fig. 5-4-2. (1) Pre-set for Guide Roller**

(2) COMPL Head Bracket (ACE Head) (See Fig. 5-4-3.)

Adjust the ACE Head Height Adjustment nut so that the tape edge runs between the audio head upper end and the control head lower end. Gaps A and B should be of about the same width. Since at this point it is only required that the control signal is picked up and the servo circuit works normally, no adjusting screws except the COMPL HEAD BRACKET special nut should be touched.

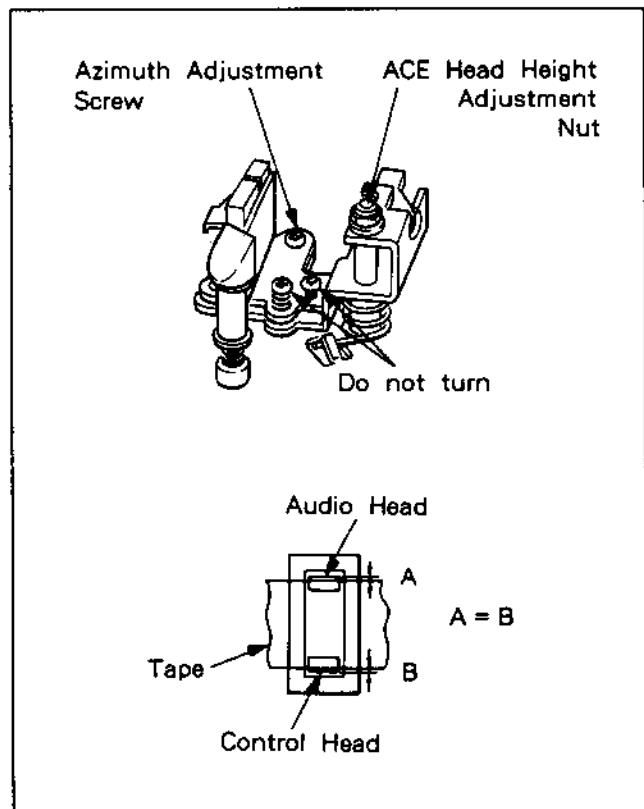


Fig. 5-4-3. (2) Pre-set for Compl Head Bracket

**5-4-3. TAPE PATH CHECK OF ENTRANCE SIDE FIXED GUIDE (S) (See Fig. 5-4-4.)**

The fixed guide (S) of the entrance side does not require adjustment in this mechanism.

Confirm that the lower edge portion of the tape is running along the lower flange of the entrance side fixed guide (S).

The tape should not be curled by the entrance side fixed guide (S) upper and lower flanges.

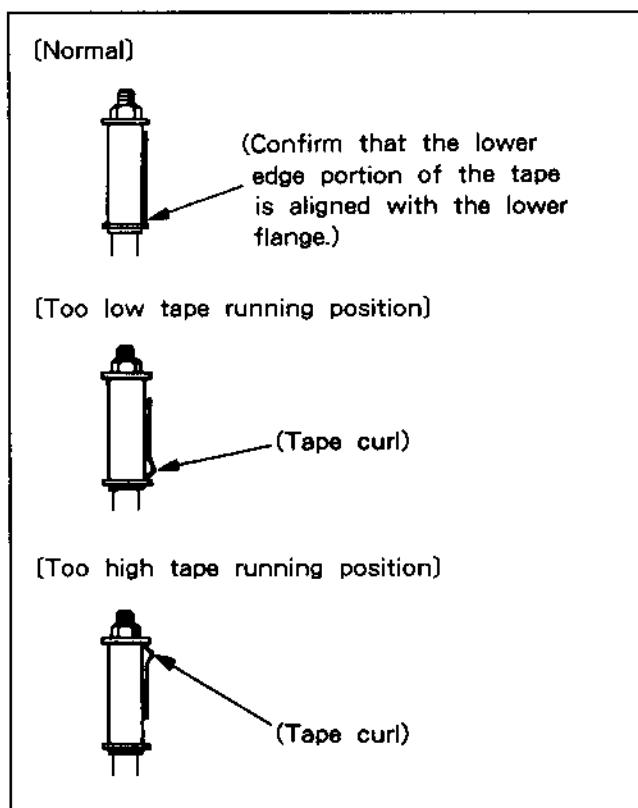


Fig. 5-4-4. Fixed Guide (S)

#### 5-4-4. GUIDE ROLLER ADJUSTMENT

(See Fig. 5-4-5.)

- 1) Play back the alignment tape (VHJ-0009), press the tracking control key and adjust the envelope waveform to the maximum level.
- 2) Loosen the supply side and take-up side guide rollers by rotating them counterclockwise, then rotate them clockwise alternately until a flat video output waveform is obtained.
- 3) Confirm that the envelope waveform is not deformed. Check visually that no curling occurs at the guide roller upper and lower flanges.

- 4) Press the tracking control key and set the envelope waveform level to approx. 50% of the maximum. In this condition, confirm whether the envelope waveform is flat. It will show valleys or peaks at the first half (supply side) or second half (take-up side) if the tape running position is too high or too low. In case there is unevenness in the first half (supply side), adjust the entrance side guide roller. If the second half (take-up side) shows trouble, adjust finely the take-up side guide roller.

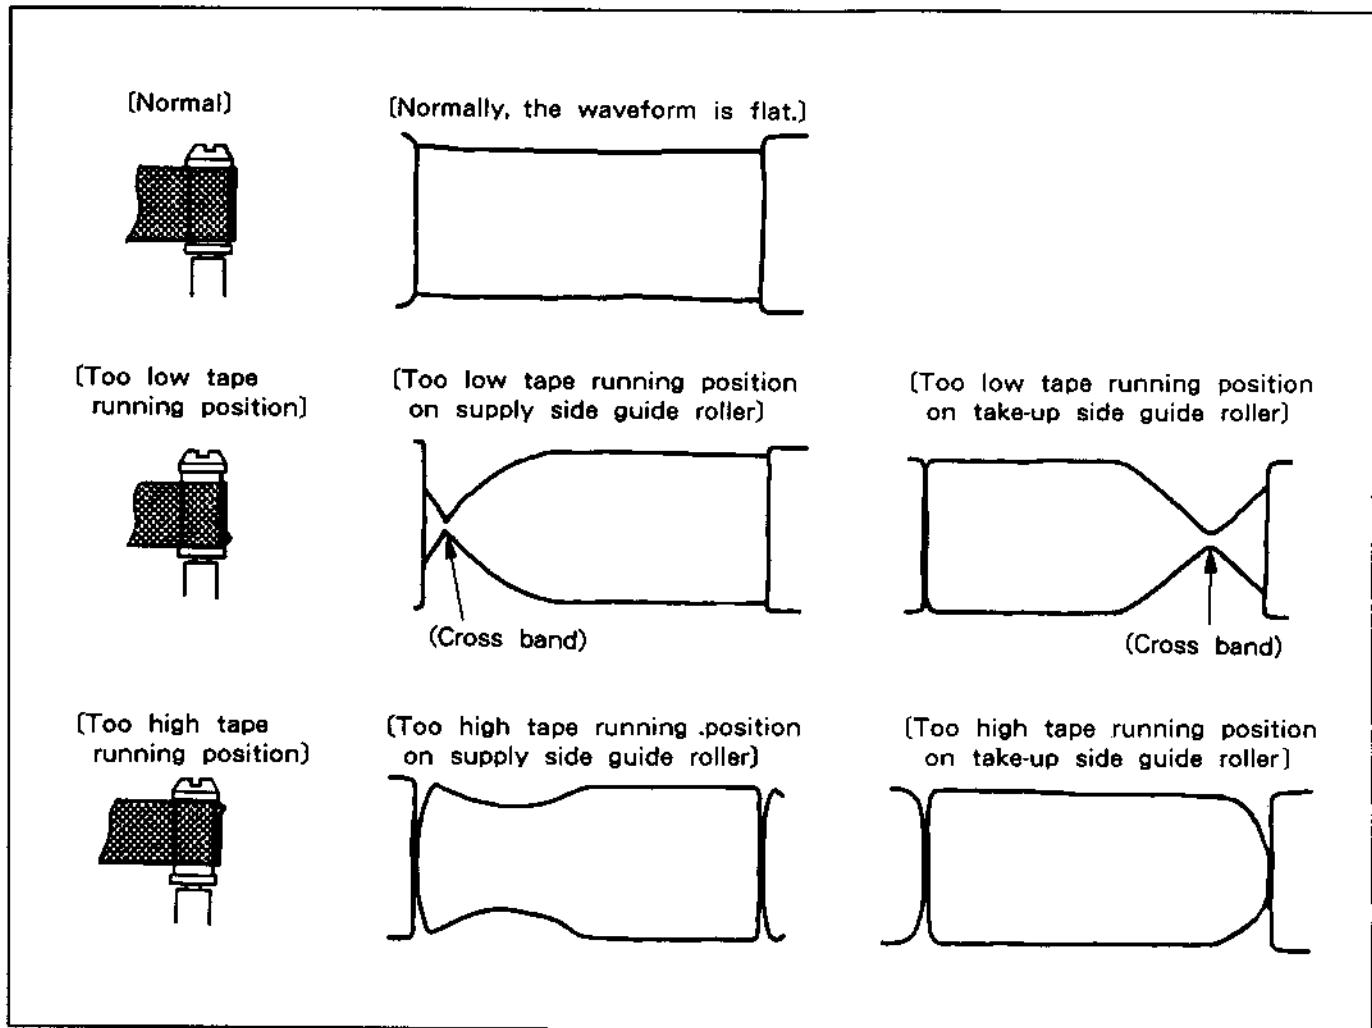


Fig. 5-4-5. Guide Roller Adjustment

#### 5-4-5. TAPE PATH CHECK OF EXIT SIDE FIXED GUIDE (T) (See Fig. 5-4-6.)

The fixed guide (T) of the exit side does not require adjustment in this mechanism.

Confirm that the lower edge portion of the tape is running close to the lower flange of the exit side fixed guide (T).

The tape should not be curled by the exit side fixed guide (T) upper and lower flanges.

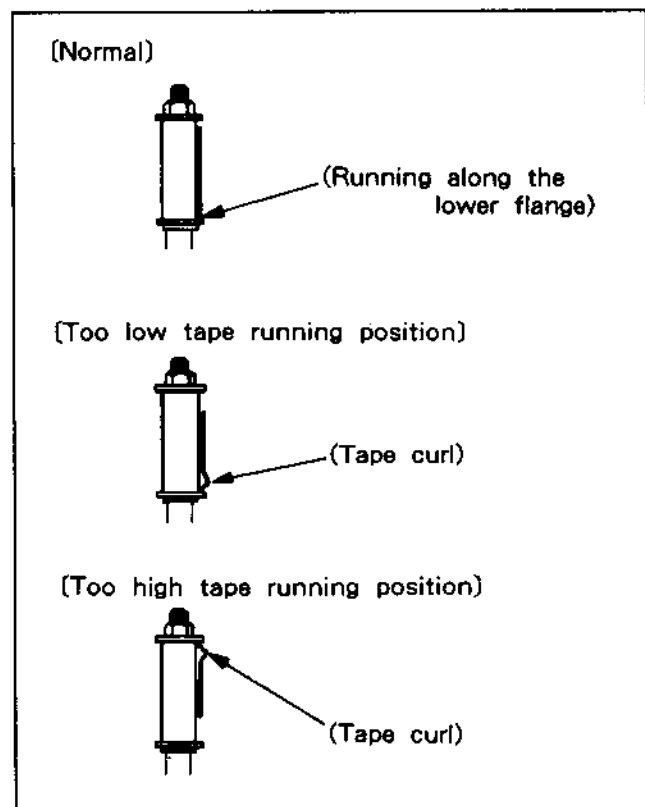


Fig. 5-4-6. Fixed Guide (T)

#### 5-4-6. COMPL HEAD BRACKET(ACE HEAD) ADJUSTMENT

- (1) Height Adjustment and Azimuth Adjustment. (See Fig. 5-4-7.)
- 1) Load the alignment tape (VHJ-0009) and set the PLAY mode.
- 2) Monitor the audio output waveform with the oscilloscope.
- 3) Rotate the azimuth adjustment screw until the audio output waveform amplitude is maximum.
- 4) After loosening the ACE head height adjustment special nut, rotate it slowly clockwise until amplitude of the audio output waveform is maximum, then adjust it finely clockwise to the point just before the said waveform amplitude begins to decrease.
- 5) Rotate the azimuth adjustment screw until amplitude of the audio output waveform is maximum.
- 6) Confirm that the audio output waveform amplitude does not fluctuate.

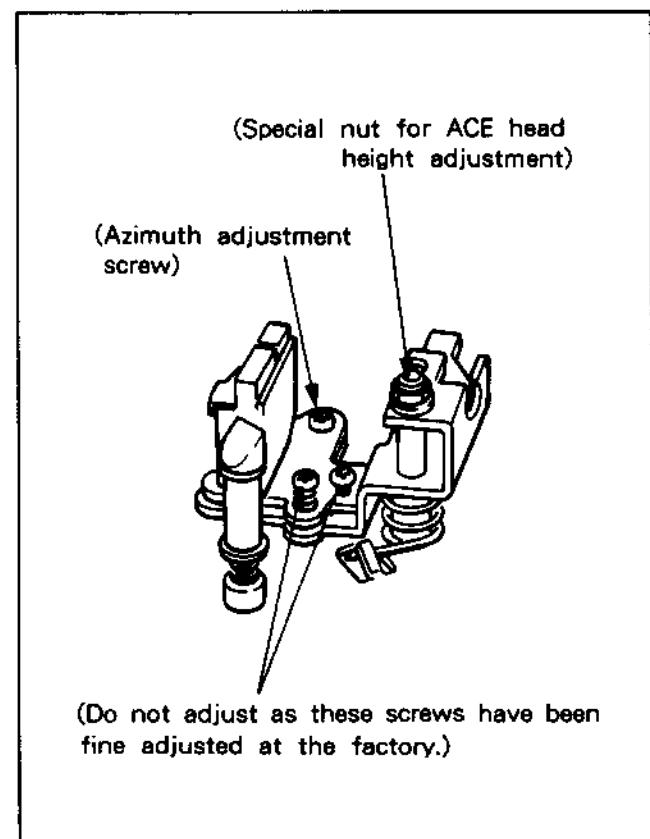


Fig. 5-4-7. Compl Head Bracket

- (2) Tracking (X Value) Adjustment (See Fig. 5-4-8.)
- 1) Load the alignment tape (VHJ-0009) and set the PLAY mode.
  - 2) Set tracking to the center position with the tracking control key (See Note below).
  - 3) Rotate the stopper bracket fixing screw 180° counterclockwise.
  - 4) Monitor the video head output envelope waveform with the oscilloscope.
  - 5) Adjust the stopper bracket position so that amplitude of the envelope waveform becomes maximum at the tracking center and the envelope waveform amplitude changes by the same amount when shifting the tracking center by pressing the plus (+) and minus (-) tracking control keys.
  - 6) Tighten the fixing screw.
  - 7) (Model for LP mode tape speed capability)  
Playback the alignment tape (VHJ-0052) and set the tracking to the center using a tracking control key.  
Then confirm that the playback picture on screen is normal. If not, Make readjustment by referring to items 1) through 7). To readjust, playback VHJ-0009 and finely adjust the position of the stopper bracket within the range in which the amplitude of the envelope waveform can be held to a maximum.
  - 8) Perform servo circuit PB PHASE (Switching position) adjustment.

**Note:** For models equipped with auto tracking, always set to the manual tracking mode before adjustment. To confirm the tracking center position, press the tracking keys (+, -) and observe the front panel clock display.

It will read "T - : -" at the tracking center, "T - : , T - - :" when keeping the minus (-) key pressed, and "T : - , T : - - :" when keeping the plus (+) key pressed. The time indication will be restored 2 to 3 seconds after the tracking keys are released.

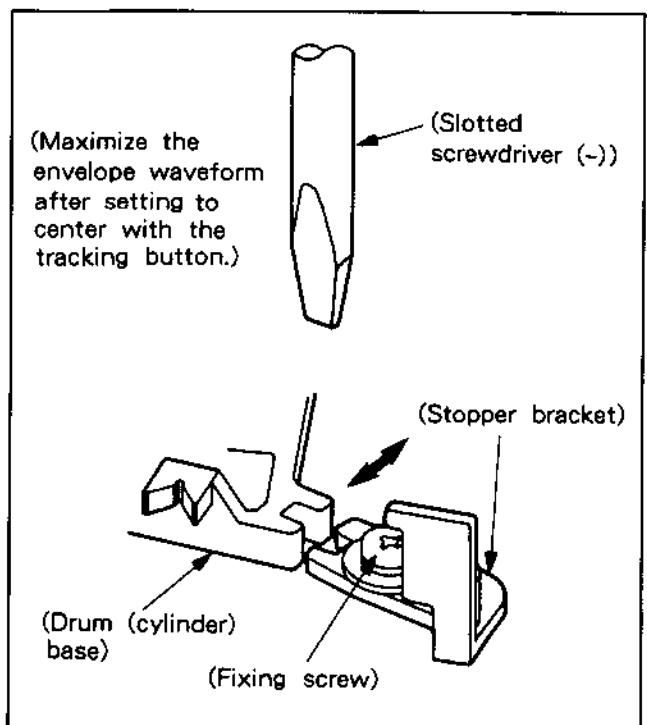


Fig. 5-4-8.

#### 5-4-7. CHECKING AFTER ADJUSTMENT

Tape running may show a slight change depending upon the type of the cassette tape (thick or thin tape), the start, middle, or end of cassette tape winding, etc. After performing the tape path adjustment with use of an alignment tape, be sure to check the following points. Incidentally, the alignment tape to be used should be E-180 or E-240 cassette should be a good one without any damage to it.

- (1) Try to play back the alignment tape (VHJ-0009) and confirm that the envelope waveform rise immediately and that there is no fluctuation in the envelope waveform and the audio output waveform.
- (2) Load a cassette tape E-180 and start recording operation in the standard mode. 1 kHz should be fed to the audio input terminal when recording. After recording, the following points should be checked.
  1. When the recorded portion is played back, the envelope waveform rise immediately, and no fluctuation in the envelope waveform is observed. Also, no speed drop occurs during the first half period or the last half period. Further, check to be sure that no fluctuation occurs in the audio waveform. Also confirm that neither the tape curling or derailing is caused on the upper or lower flange and the on the read side of the drum.
  2. Confirm that no tape curling or derailing occurs in the upper or lower flange of each tape guide and the read side of the drum during each mode of operation, namely, FF, REW, F. SEARCH, and R. SEARCH.
  3. Confirm that the envelope waveform rise immediately after changing the mode directly to the PLAY from each mode of FF, REW, F. SEARCH, R. SEARCH, or POWER OFF (INITIAL) and that no tape curling or derailing occurs in the upper or lower flange of the each tape guide and on the read side of the drum.
- (3) Load a E-240 cassette tape and perform recording operation in the SP mode. 1 kHz should be fed to the audio input terminal when recording. Now, confirm that the envelope waveform rise immediately upon starting the playback of the recorded portion, and that neither fluctuation in the envelope waveform nor a speed drop occurs during the first half period or the last half period. Also confirm that no tape curling or derailing is caused in the upper or lower flange of each tape guide and on the drum lead surface.

- (4) Perform recording for 60 seconds in the SP mode at the start of E-240 cassette winding. Play back the recorded portion and repeat the F.SEARCH → R.SEARCH ten times, following which confirm that no damage is done to the tape edge. If any damage is found on the tape edge, a proper step must be taken as below depending upon the symptom observed.
  1. When a sawtooth shaped damage is caused on underside of the tape edge by the REV guide
    - 1) Check to see if damage is done to the tape by the REV guide.
    - 2) Loosen the tilt adjustment screw of the ACE head bracket by turning it 135° counter-clockwise.
    - 3) Make readjustment of the ACE head bracket (azimuth, height and adjustment of X value) by referring to item 5-4-6.
    - 4) Confirm that no fluctuation in the audio level is caused by loosening the tilt adjustment screw in steps 1) and 2) above. Move the screw a little back if any fluctuation is found (but never move it back to the original position). After adjusting the tilt adjustment screw is readjusted, perform step 4) once again.
    - 5) Confirm again that the E-240 cassette tape does not sustain any damage.
    - 6) Perform the recording and playback on the E-180 and E-240 cassette tape and confirm that no fluctuation occurs in the envelope waveform and the audio waveform.

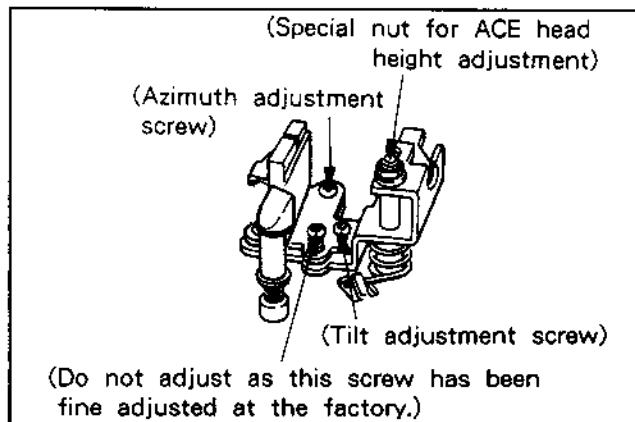


Fig. 5-4-9. Compl Head Bracket

2. If damage in the form of a sawtooth or a streak is found on the tape edge
  - 1) Check if a large amount of magnetic particles is adhered to the exit-side guide roller. If magnetic particles cannot be removed in spite of repeated cleaning, the guide roller must be replaced.
  - 2) Confirm if the tape is held too tightly by the exit-side guide roller, or if the last half of the envelope waveform is flat. If the tape is found held too tightly, readjustment should be made by referring to 5-4-4.
  - 3) Recheck if the damage is still caused on the E-240 tape.  
If similar damage is still found on the tape, the exit-side guide roller should be loosened about 20° counterclockwise.
  - 4) Check once again that no fluctuation is caused in the envelope waveform or the audio waveform by loosening the exit-side guide roller. To do this, record and play back the E-240 cassette tape.
- (5) Perform recording for 60 seconds in the SP mode at the near end of the E-240 cassette tape. Play back the recorded portion and repeat the F. SEARCH ↔ R. SEARCH ten times, following which a check should be made to see if damage is still done to the tape edge. If a damage in the form of a sawtooth or a streak is still occurred on the tape edge by the upper tongue of entrance side guide roller, proceed with the step given below.
  1. Check if a large amount of magnetic particles is adhered to the entrance-side guide roller. If the magnetic particles cannot be removed in spite of repeated cleaning, the guide roller must be replaced with new one.
  2. Confirm if the tape is held too tightly by the entrance-side guide roller, or if the first half of the envelope waveform is flat. If the tape is found held too tightly, readjustment should be made by referring to 5-4-4.
  3. Recheck if the damage is still caused on the E-240 tape.  
If the damage is still found on the tape, the entrance-side guide roller should be loosened about 20° counterclockwise.
  4. Check once again that no fluctuation is caused in the envelope waveform or the audio waveform by loosening the entrance-side guide roller. To do this, record and play back the E-240 cassette tape.

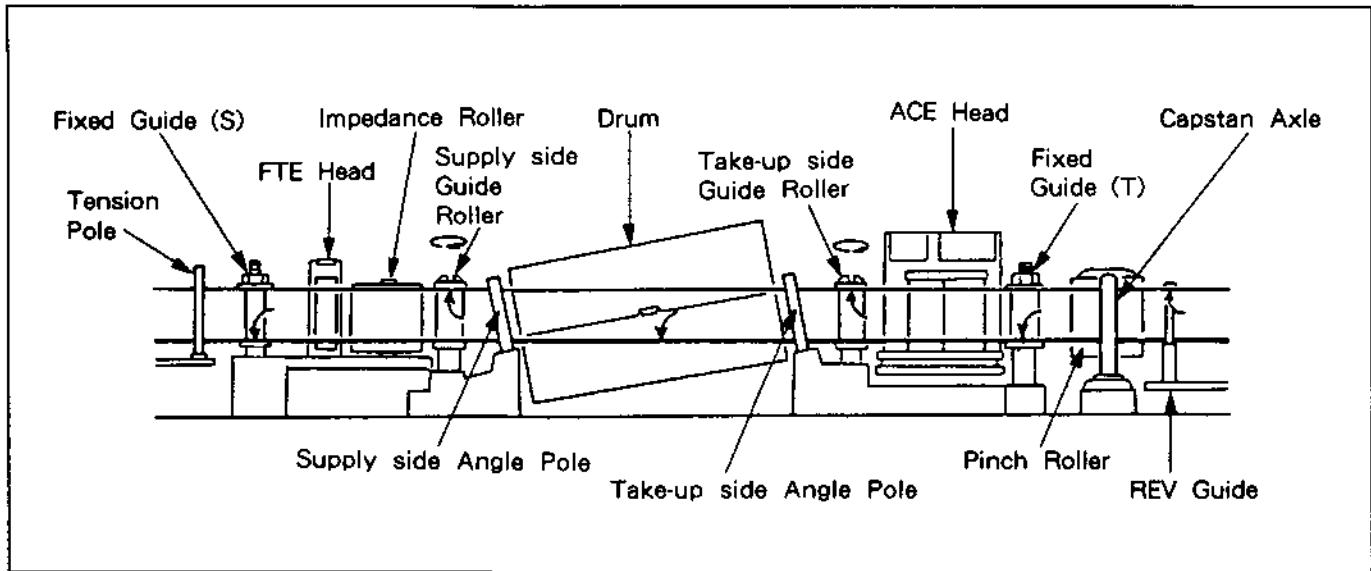


Fig. 5-4-10

## 6. Electrical Adjustment

### 6-1. PREPARATION

#### 6-1-1. EQUIPMENT

- Colour TV monitor
- PAL Colour-bar generator (with RF and LINE OUTPUT)
- PAL TV test signal generator (Multi-burst signal with colour burst)
- Audio signal generator
- Oscilloscope (dual trace; frequency response: 10MHz or more; probe: 10:1)
- Frequency counter (countable to 10MHz or higher)
- Digital voltmeter
- AC voltmeter
- In/output probes
- Alignment cassette (VHJ-0008) PAL Colour bar 1KHz
- Alignment cassette (VHJ-0009) Monoscope 6KHz
- Alignment cassette (VHJ-0051) Check for D.O.C.
- Alignment cassette (VHJ-0023) PAL Monoscope 6KHz, PAL Colour-bar 1KHz, SECAM Colour-bar 1KHz, PAL RF Sweep MESECAM Colour-bar 1KHz, NTSC Colour-bar 1KHz.
- Alignment cassette (VHJ-0080) PAL colour bar HiFi BPF
- Alignment cassette (VHJ-0020) AF level colour bar 1KHz
- Relay jig (VHJ-0067) 12-wire cable for Pre-amp unit  
Connect the Flat cable end from the Drum assembly to the Pre-amp unit using the Relay jig to provide simple repairing and adjustment of the Pre-amp unit, as shown in Fig. 6-1-1. Further, when adjusting the Pre-amp unit, be sure to make contact an end of Shield case with Bracket of the Pre-amp unit to maintain the shield effect.
- Relay jig (VHJ-0088) for AD-2 board  
Connect the Flat cable end to CN251 of the CP-1 board and other end to CN271 of the AD-2 board using the Relay jig (Shown in Fig. 6-1-2) to provide simple repairing and adjustment of the AD-2 board.

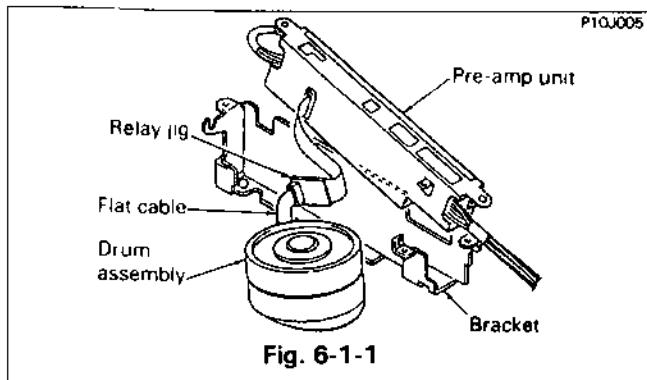


Fig. 6-1-1

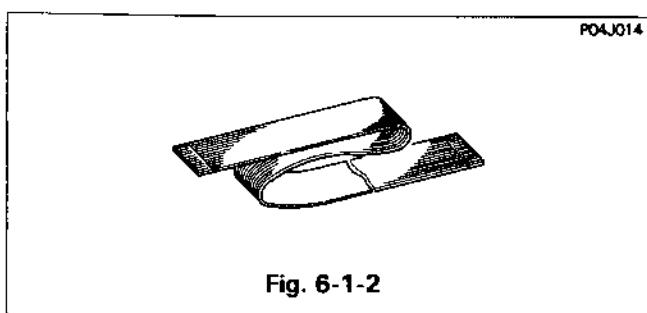


Fig. 6-1-2

#### 6-1-2. SET-UP

Because the RF input signal is used for circuit adjustments, connect the colour-bar generator to the ANT IN terminal of the VCR. The RF input signal is processed by the tuner and IF circuit. It is important that the video output signal of the IF circuit satisfies the items shown in Fig. 6-1-3. Connect the oscilloscope to the VIDEO OUTPUT terminal of the video circuit and terminate with a  $75\Omega$  load, and then check the video output signal.

- The amplitude of the sync signal should be approximately 0.3 Vp-p.
- The amplitude of the video signal should be approximately 0.7 Vp-p.
- While observing the oscilloscope or TV screen, make fine-tuning adjustments so that the colour burst amplitude is approximately 0.3 Vp-p.

- Check to be sure that there is no spike noise in the sync part of the horizontal sync signal.

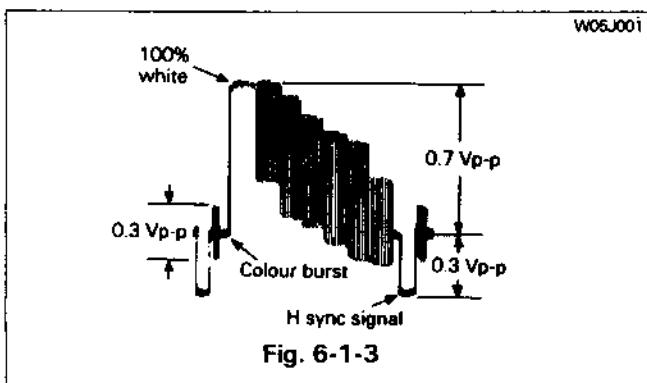
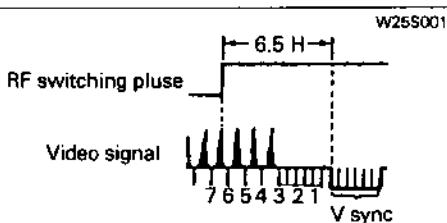
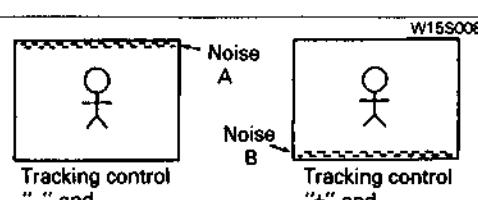



Fig. 6-1-3

## 6-2. SERVO CIRCUIT ADJUSTMENT ..... CP-1 board and VP-1 Pre-amp unit

NOTE (1) : These adjustments should be carried out upon completion of the transport adjustments.

(2) : If the tape transport adjustments are carried out after these adjustments, follow the procedures again in SWITCHING POSITIONS.

| No. | Item                      | Input                                     | Mode  | Point  | Location  | Remark  |
|-----|---------------------------|---|---|--|---|---|
| 1   | SWITCHING POSITION        | Alignment cassette (VHJ-0009 or VHJ-0023) | PLAY  | VIDEO OUTPUT TP101<br>RF SW pulse TP351 (CP-1 board) | VR351   |  <ol style="list-style-type: none"> <li>Turn VR351 fully clockwise (seeing from the foil side) in the STOP mode.</li> <li>Set the tracking control position to the center. (Tracking center position display in the indicator panel 'T ——')</li> <li>Play back the test tape and adjust VR351 so that the phase of the leading edge of the vertical sync signal is delayed <math>6.5 \pm 0.5</math> H from the rise of the RF switching pulse waveform.</li> <li>If the adjustment value does not change by adjustment, repeat steps 1 through 3.</li> </ol>   |
| 2   | STILL V-LOCK for SP mode  | Colour bar from Colour bar generator      | REC (SP)<br>↓<br>PLAY (SP)<br>↓<br>STILL (SP) | TV screen  | V-Lock/<br>Tracking/Fine control (+) (-)<br>buttons (Front panel) | <ol style="list-style-type: none"> <li>Put the VCR in the REC (SP) mode and record at the middle of the cassette tape.</li> <li>Playback the recorded part, and put the VCR in the STILL (SP) mode.</li> <li>Press the (+) or (-) v-lock control buttons until V jitter (very fine movement of the vertical sync) is minimized.</li> </ol>  |
| 3   | SLOW TRACKING for SP mode | Colour bar from Colour bar generator      | REC (SP)<br>↓<br>PLAY (SP)<br>↓<br>SLOW (SP)  | TV screen  | VR353   |  <ol style="list-style-type: none"> <li>Put the VCR in the REC (SP) mode and record at the middle of the cassette tape.</li> <li>Playback the recorded part, and VCR in the SLOW (SP) mode by remote control unit.</li> <li>Press the tracking control (+) (-) buttons simultaneously to the center position. (on the display 'T ——')</li> <li>Turn VR353, and move the noise out of the TV screen, while watching to the screen.</li> <li>The noise position at which noise begins to appear at the upper edge of the TV screen is A, when the tracking control is turned to the "—" end.</li> <li>The noise position at which noise begins to appear at the lower edge of the TV screen is B, when the tracking control is turned to the "+" end.</li> <li>Readjust VR353 so that the same level of noise A and noise B can be obtained.</li> </ol> |
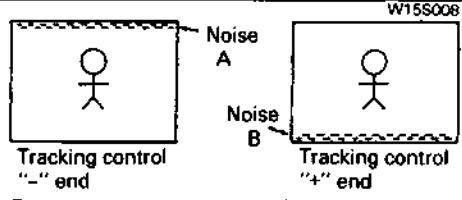
| No. | Item                               | Input   | Mode  | Point     | Location  | Remark   |
|-----|------------------------------------|---|---|-----------|---|--|
| 4   | STILL<br>V-LOCK<br>for<br>LP mode  | Colour bar<br>from<br>Colour bar<br>generator | REC (LP)<br>↓<br>PLAY (LP)<br>↓<br>STILL (LP) | TV screen | V-Lock/<br>Tracking/Fine<br>control (+) (-)<br>buttons<br>(Front panel) | <p>1. Put the VCR in the REC (LP) mode and record at the middle of the cassette tape.</p> <p>2. Playback the recorded part, and put the VCR in the STILL (LP) mode.</p> <p>3. Press the (+) or (-) v-lock control buttons until V jitter (very fine movement of the vertical sync) is minimized.</p>   |
| 5   | SLOW<br>TRACKING<br>for<br>LP mode | Colour bar<br>from<br>Colour bar<br>generator | REC (LP)<br>↓<br>PLAY (LP)<br>↓<br>SLOW (LP)  | TV screen | VR354   |  <p>W15S008</p> <p>1. Put the VCR in the REC (LP) mode and record at the middle of the cassette tape.</p> <p>2. Playback the recorded part, and VCR in the SLOW (LP) mode by remote control unit.</p> <p>3. Press the tracking control (+) (-) buttons simultaneously to the center position. (on the display "T —— ")</p> <p>4. Turn VR354, and move the noise out of the TV screen, while watching to the screen.</p> <p>5. The noise position at which noise begins to appear at the upper edge of the TV screen is A, when the tracking control is turned to the “-” end.</p> <p>6. The noise position at which noise begins to appear at the lower edge of the TV screen is B, when the tracking control is turned to the “+” end.</p> <p>7. Readjust VR354 so that the same level of noise A and noise B can be obtained.</p> |

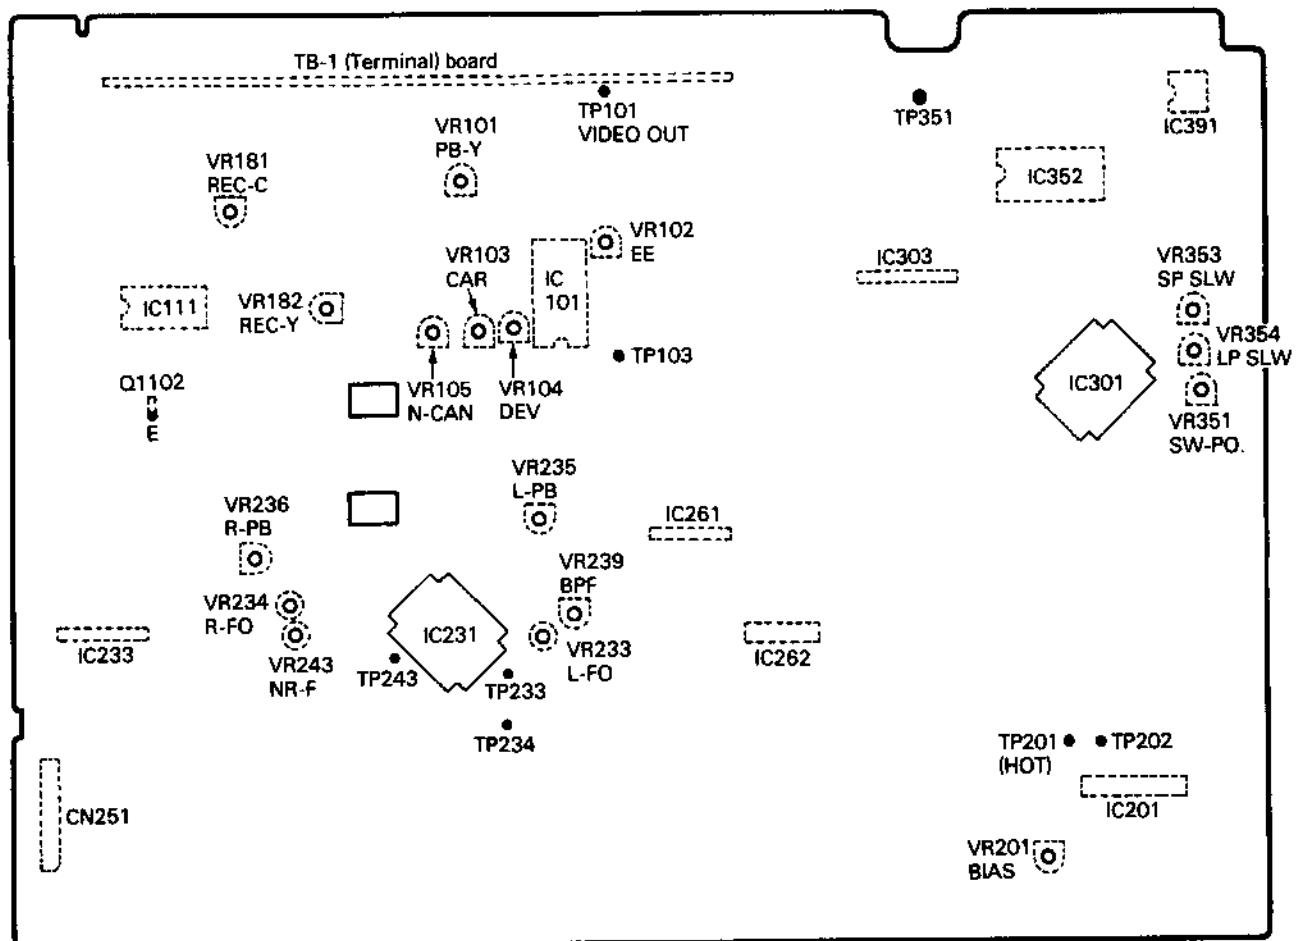
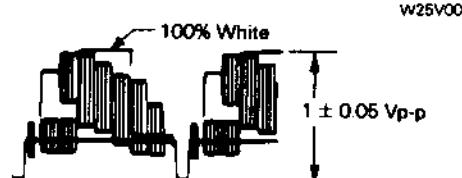
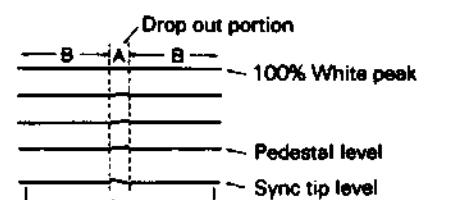
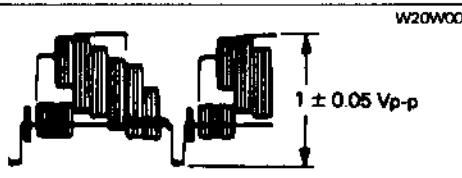
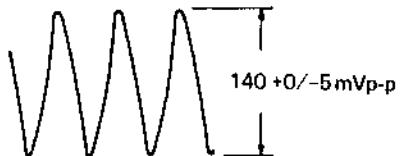



Fig. 6-2-1 CP-1 board (Foil side view)

### 6-3. VIDEO CIRCUIT ADJUSTMENT ... CP-1 board and Video pre-amp unit

- NOTE (1) : Use the Relay jig mentioned in the 6-1. PREPARATION to provide easy adjustment of the Pre-amp unit.  
 (2) : Before these adjustments place the unit in the SP mode.  
 (3) : When adjustment No. 1, No. 2 and No. 5 below, terminate VIDEO OUTPUT TP101 at 75 ohms.  
 (4) : 'No-signal REC mode' is not to supply any signal to VIDEO INPUT terminal.

| No. | Item        | Input   | Mode                                  | Point                           | Location | Remark   |
|-----|-------------|---|---------------------------------------|---------------------------------|----------|--|
| 1   | E-E LEVEL   | Colour bar<br>(100% white level)<br>from Colour bar generator | E-E                                   | VIDEO OUTPUT TP101 (CP-1 board) | VR102    | <br>w26v001<br>1. Adjust VR102 so that the level is $1.00 \pm 0.05$ Vp-p.   |
| 2   | PB-Y LEVEL  | Alignment cassette (VHJ-0008 or VHJ-0023)                     | PLAY                                  | VIDEO OUTPUT TP101 (CP-1 board) | VR101    | <br>w20v003<br>1. Adjust VR101 so that the level is $1.00 \pm 0.05$ Vp-p.   |
| 3   | N-CAN LEVEL | Alignment cassette (VHJ-0051)                                 | PLAY                                  | VIDEO OUTPUT TP101 (CP-1 board) | VR105    | <br>w30v012<br>1. Set the horizontal scale (TIME/DIV) of the oscilloscope to 1 msec./div..<br>2. Adjust VR105 so that the drop out portion "A" of white peak (100%) and other portion "B" are same level.   |
| 4   | CARRIER SET | No-signal   | REC                                   | TP103 (CP-1 board)              | VR103    | 1. Set the channel selector buttons to the AV position and put the VCR in the no-signal REC mode.<br>2. Adjust VR103 so that the frequency is $3.75 +0/-0.05$ MHz.   |
| 5   | DEVIATION   | Colour bar<br>(100% white level)<br>from Colour bar generator | REC (Adjustment)<br>↓<br>PLAY (Check) | VIDEO OUTPUT TP101 (CP-1 board) | VR104    | <br>w20w003<br>1. Insert the blank tape to the VCR and record colour bar signal.<br>2. Playback the recorded part, and check that the level is $1.00 \pm 0.05$ Vp-p.<br>3. Repeat adjust VR104 before the record, and the playback it, if not satisfactory. |

| No. | Item          | Input                                | Mode | Point  | Location           | Remark  |
|-----|---------------|--------------------------------------|------|--|--------------------|---|
| 6   | C REC CURRENT | Colour bar from Colour bar generator | REC  | TP181 (HOT) shield case (GND) (Video pre-amp unit) | VR181 (CP-1 board) | <br>1. Rotate VR182 so that the luminance level is minimize.<br>2. Adjust VR181 so that the level is 35 +0/-2 mVp-p.   |
| 7   | Y REC CURRENT | No-signal                            | REC  | TP181 (HOT) shield case (GND) (Video pre-amp unit) | VR182 (CP-1 board) | <br>1. Set the channel selector buttons to AV position and put the VCR in the no-signal REC mode.<br>2. Adjust VR182 so that the level is 140 +0/-5 mVp-p.<br>3. Follows are the applicable models and their corresponding mark. |

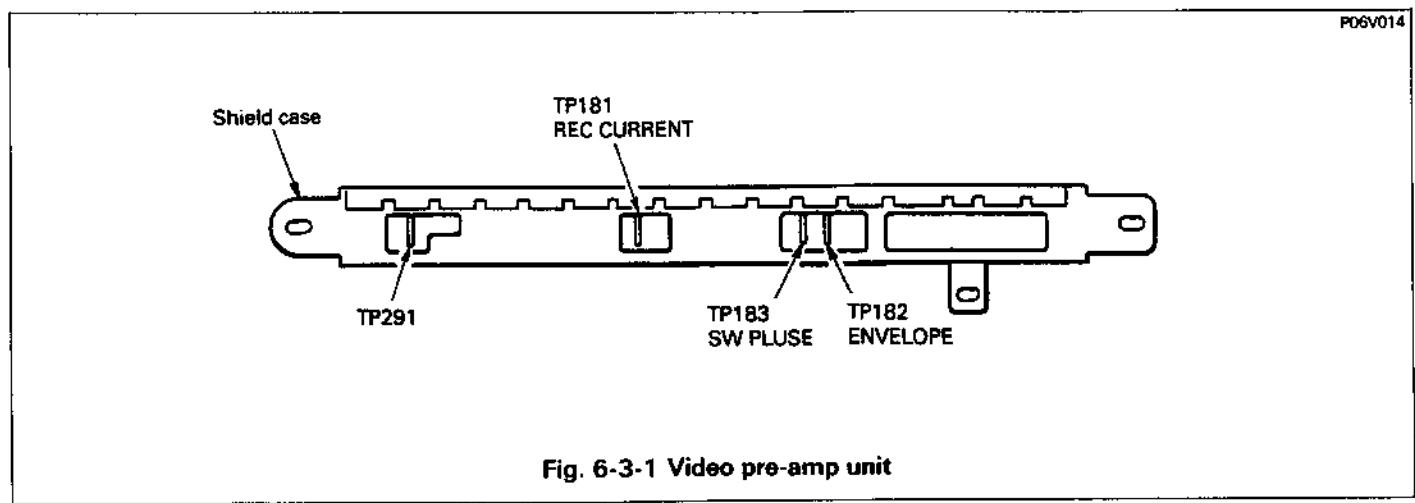

## 6-4. AUDIO CIRCUIT ADJUSTMENT

**NOTE:** When repairing and adjusting the CP-1 board and AD-2 board, use the optionally supplied Relay jig (VHJ-0088) since the flexible PCB for connecting to the AD-2 board is short. Connect the Flat cable end to CN271 on the AD-2 board and other end to CN251 on the CP-1 board.

### SETTING BEFORE ADJUSTMENT

- The audio input terminal of the audio signal generator should be terminated at 600 ohms.
- The audio output terminal of the VCR should be terminated at 47 kilo ohms (L ch and R ch).
- O/AV button on the remote control ..... [AV] position.
- AUDIO output button on the remote control ..... [L] and [R] position.
- SP/LP select button on the remote control ..... [SP] position.
- REC LEVEL control ..... Center (click stop) position.
- REC BALANCE control ..... Center (click stop) position.

P16A013

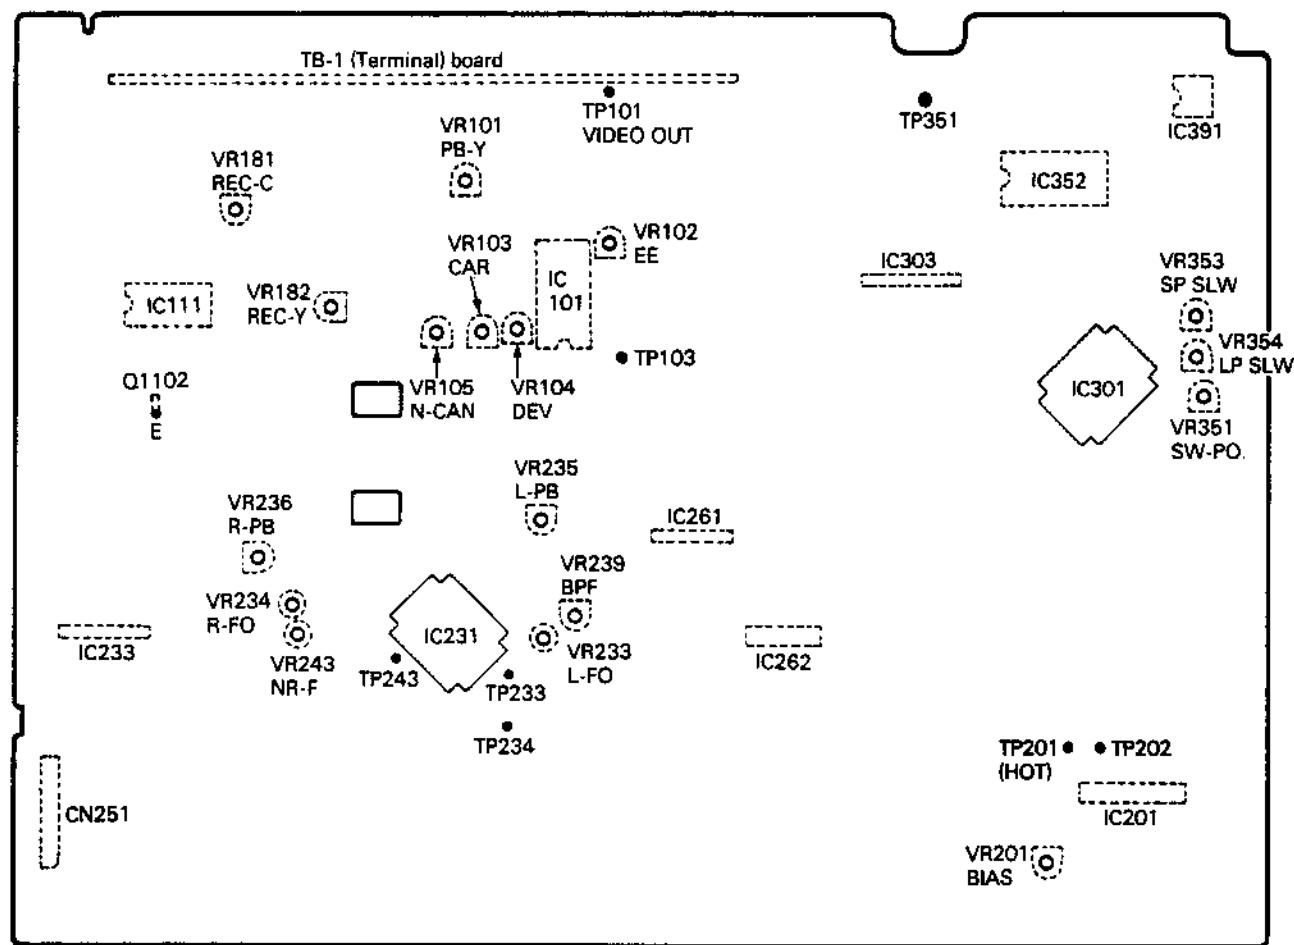



Fig. 6-4-1 CP-1 board (Foil side view)

## Hi-Fi AUDIO CIRCUIT .... CP-1 board

NOTE (1): The Hi-Fi AUDIO section adjustment has separate adjustment items for the L ch and R ch.

The R ch adjustments are included in parentheses.

(2): 'No-signal record mode' is not to supply any signal to the AUDIO INPUT terminal.
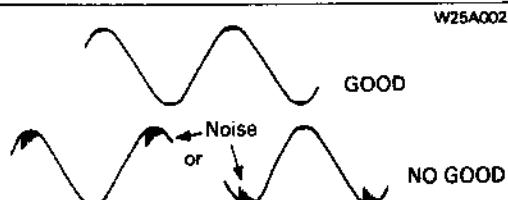
| No. | Item                   | Input   | Mode | Point                               | Location                           | Remark   |
|-----|------------------------|---|------|-------------------------------------|------------------------------------|--|
| 1   | A-FM CARRIER FREQUENCY | No-signal   | REC  | TP233<br>(L ch)<br>TP234<br>(R ch)  | VR233<br>(L ch)<br>VR234<br>(R ch) | 1. Connect a frequency counter to TP233 (TP234) and ground.<br>2. Adjust VR233 (VR234) so that the carrier frequency is 1.4 MHz (1.8 MHz) +1/-9 KHz.   |
| 2   | A-FM BPF               | Alignment cassette (VHJ-0080)                             | PLAY | AUDIO OUTPUT terminals (L ch, R ch) | VR239<br>L ch (R ch)               |  <p>1. Connect a oscilloscope to AUDIO OUTPUT L ch (R ch) terminal.<br/>2. Playback the alignment cassette and observe the waveform on the audio output.<br/>3. Adjust VR239 until the noise component of both channel is minimum level.</p> |
| 3   | A-FM NR FILTER         | Audio signal (5 KHz, -17 dBm) from Audio signal generator | E-E  | TP243                               | VR243                              | 1. Adjust VR243 so that the output level is minimum.   |
| 4   | A-FM PB LEVEL          | Alignment cassette (VHJ-0020)                             | PLAY | AUDIO OUTPUT terminals (L ch, R ch) | VR235<br>(L ch)<br>VR236<br>(R ch) | 1. Adjust VR235 (VR236) so that the playback level is $-7 \pm 0.5$ dBm.  |

## NORMAL AUDIO CIRCUIT ..... CP-1 board

NOTE (1): 'No-signal record mode' is not to supply any signal to the AUDIO INPUT terminal.

(2): Press the AUDIO output select button to the Mono (No indication) position.

| No. | Item'      | Input     | Mode | Point                | Location | Remark   |
|-----|------------|-----------|------|----------------------|----------|--|
| 1   | BIAS LEVEL | No-signal | REC  | TP201 (HOT)<br>TP202 | VR201    | <ol style="list-style-type: none"> <li>Set the channel selector buttons to the AV position and put the VCR in the no-signal REC mode.</li> <li>Adjust VR201 so that the level is 24 mVrms.</li> <li>Confirm that the bias frequency is 70 <math>\pm</math> 5 KHz.</li> </ol> |

## 6-5. LEVEL METER CIRCUIT ADJUSTMENT ... CP-1 and AD-2 board

**NOTE:** When repairing and adjusting the CP-1 board and AD-2 board, use the optionally supplied Relay jig (VHJ-0088) since the flexible PCB for connecting to the AD-2 board is short. Connect the Flat cable end to CN271 on the AD-2 board and other end to CN251 on the CP-1 board.

| No. | Item                    | Input  | Mode | Point  | Location   | Remark   |
|-----|-------------------------|--|------|--|--|--|
| 1   | AUDIO<br>LEVEL<br>METER | Audio signal<br>(1 KHz, -7<br>dBm) from<br>Audio signal<br>generator | E-E  | AUDIO<br>OUTPUT<br>terminals<br>(L ch, R ch) | VR241<br>(L ch)<br><br>VR242<br>(R ch)<br>(AD-2 board) | <ol style="list-style-type: none"> <li>1. Connect an audio signal generator to AUDIO INPUT terminals.</li> <li>2. Connect the AC voltmeter to the AUDIO OUTPUT terminals.</li> <li>3. Set the LEVEL METER switch to the "AUDIO LEVEL" position.</li> <li>4. Press the "0" button on the remote control unit to the AV position.</li> <li>5. Press the AUDIO output button on the remote control unit to the "Lch" and "Rch" position.</li> <li>6. Set the AUDIO REC LEVEL control so that the audio output signal level is -7.0dBm.</li> <li>7. Adjust VR241 and VR242 so that illuminates the -4dB LED.</li> <li>8. Set the AUDIO REC LEVEL control so that the audio output signal level is -7.5dBm.</li> <li>9. Adjust VR241 and VR242 so that confirm only the -4dB LED goes out.</li> </ol> |


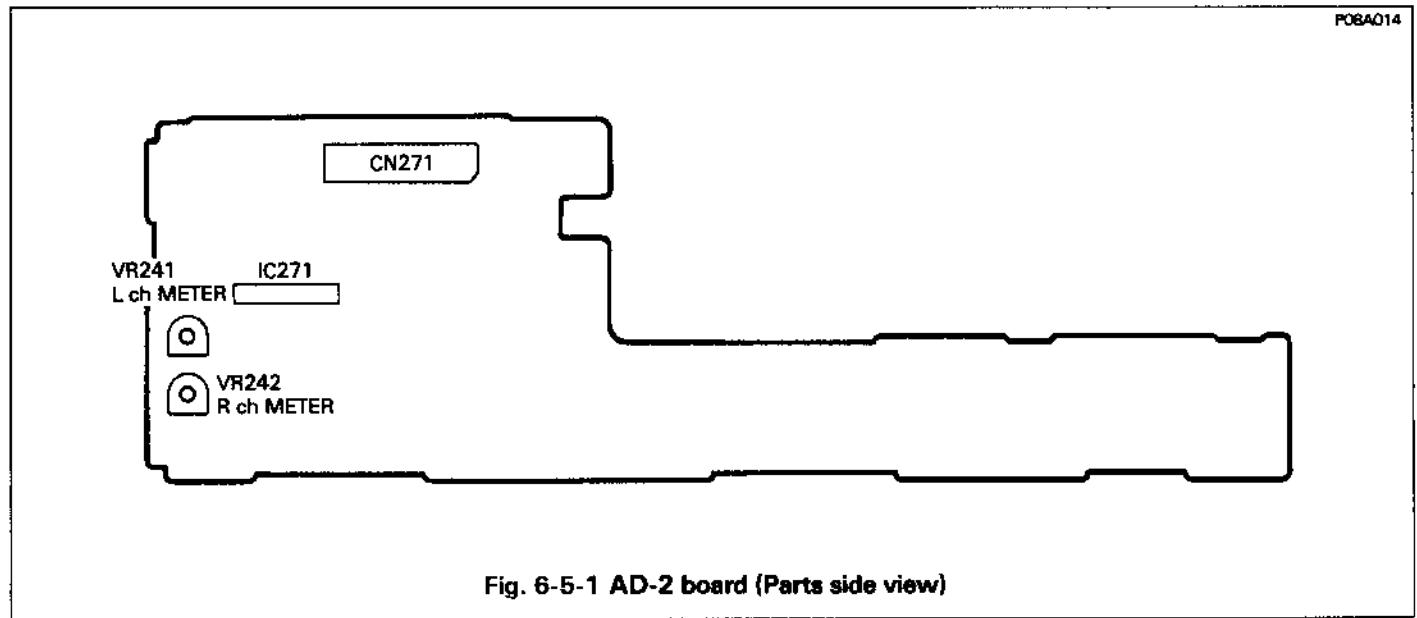


Fig. 6-5-1 AD-2 board (Parts side view)


## 6-6. VIDEOTEXT DECODER CIRCUIT ADJUSTMENT ... TM-6 and CP-1 board

| No. | Item        | Input | Mode | Point  | Location | Remark  |
|-----|-------------|-------|------|--|----------|---|
| 1   | DECODER VXO | NONE  | E-E  | Emitter of Q1102<br>(CP-1 board)<br>Fig. 6-2-1 | CT761    | <ol style="list-style-type: none"> <li>Set the vertical scale (VOLTAGE/DIV.) of the oscilloscope to 10 mV/DIV..</li> <li>Connect the frequency counter to Emitter of Q1102 and ground through a pre-amp of the above oscilloscope.</li> <li>Press the "MENU" button on the remote control unit.</li> <li>Adjust CT761 so that the frequency is <math>4433619 \pm 20\text{Hz}</math>.</li> </ol> |

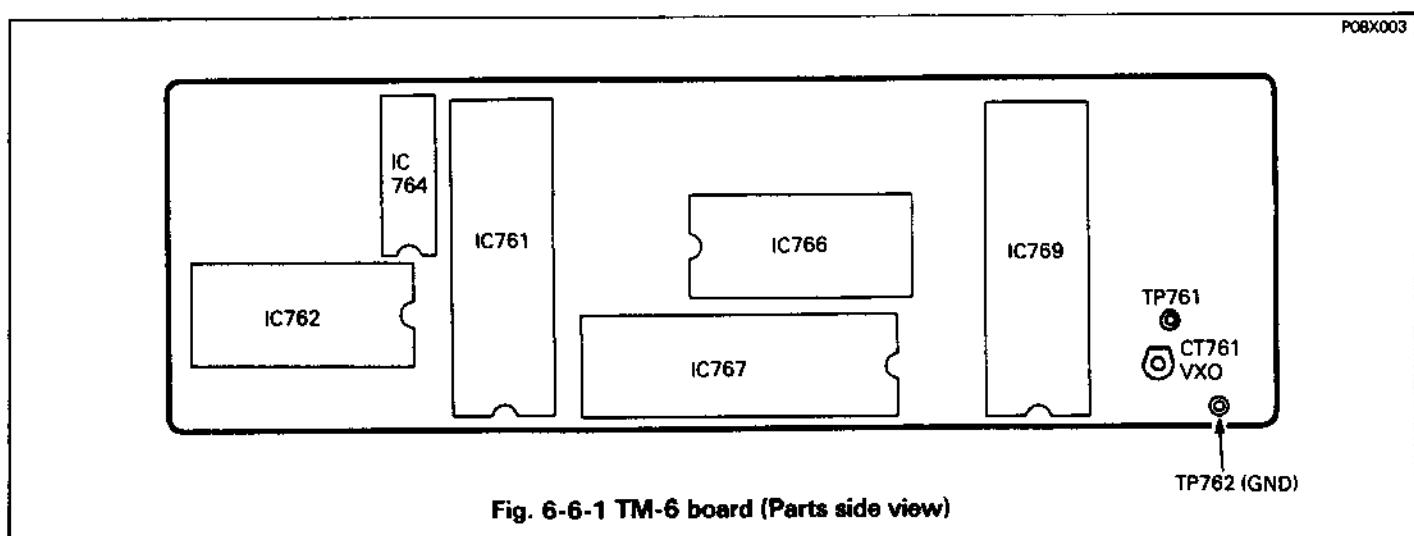

## 6-7. TUNER IF CIRCUIT ADJUSTMENT ... VIF unit

| No. | Item   | Input        | Mode | Point     | Location | Remark  |
|-----|--------|--------------|------|-----------|----------|---|
| 1   | RF AGC | TV broadcast | E-E  | TV screen | VR611    | <ol style="list-style-type: none"> <li>Turn VR611 in the direction which causes snow to appear, then in the opposite direction until the show just disappears.</li> </ol> |

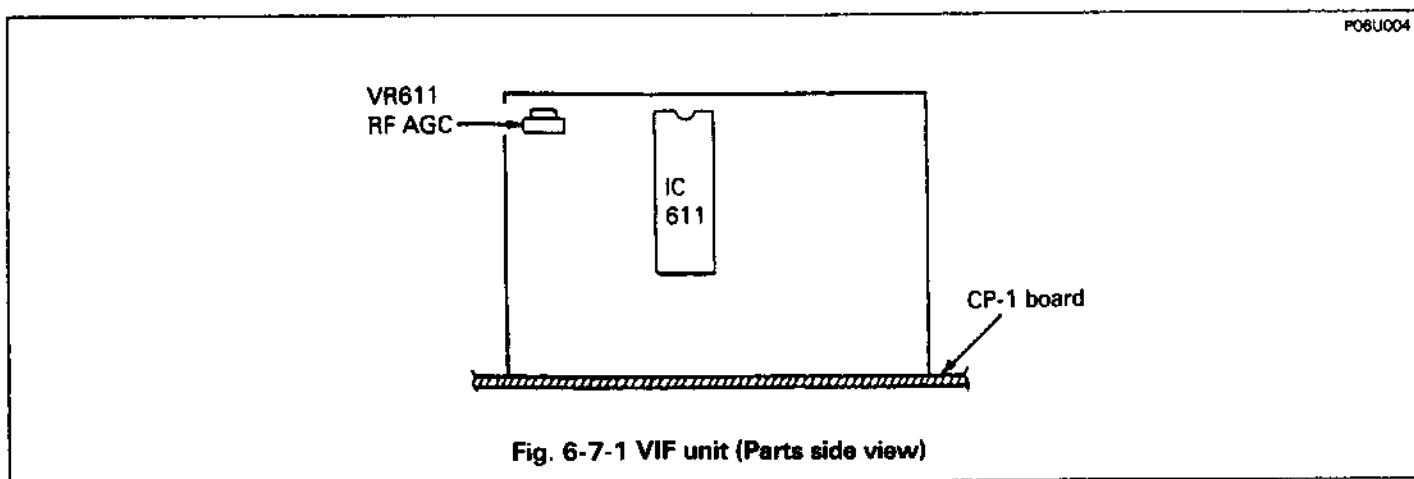

## 6-8. LOCATION FOR TAPE PATH ADJUSTMENT

NOTE: Test point TP182 and TP183 for tape path adjustment is shown in figure below.  
For adjustment, refer to "5-4. TAPE PATH ADJUSTMENT".

P06L014

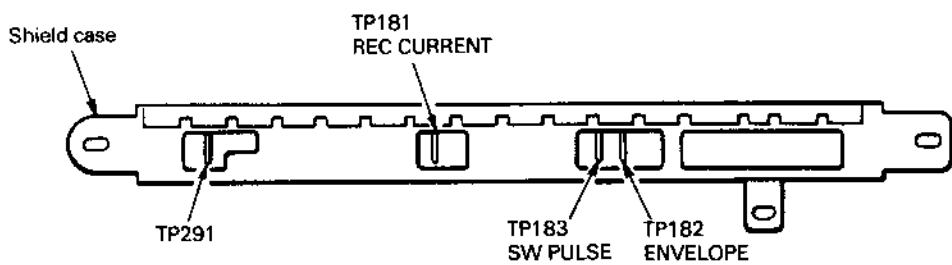


Fig. 6-8-1 Pre-amp unit

## 7. Electrical Parts List

### NOTE:

\*Materials of Capacitors and Resistors are abbreviated as follows;

|            |                                |  |          |  |
|------------|--------------------------------|--|----------|--|
| Resistors  |                                |  | TA-SOLID | Tantalum Solid Capacitor   |
| MT-FILE    | Metal Film Resistor            |  | AL-SOLID | Aluminum Solid Capacitor   |
| MT-GLAZE   | Metal Glaze Resistor           |  | NP-ELECT | Non-Polarized Electrolytic Capacitor   |
| OXIDE-MT   | Oxide Metal Film Resistor      |  | OS-SOLID | Aluminum Solid Capacitors with Organic Semiconductive Electrolytic Capacitor |
| Capacitors |                                |  | DL-ELECT | Double Layered Electrolytic Capacitor  |
| MT-POLYEST | Metallized Polyester Capacitor |  |          |  |
| MT-COMPO   | Metallized Composite Capacitor |  |          |  |

\*Tolerance of Capacitor(10pF over) and Resistor are noted with follow symboles.

F ..... ±1% G ..... ±2% J ..... ±5% K ..... ±10%

M ..... ±20% N ..... ±30% Z ..... +80% ~ -20%

\*N.S.P. : Not available as service parts.

| LOCATION                                  | PARTS NO. | DESCRIPTION  | LOCATION | PARTS NO.    | DESCRIPTION              |
|---|-----------|--------------|----------|--------------|--------------------------|
| COMPL. PCB.CP-A<br>COMPL.NO. 613 127 6031 |           |              | C1106    | 403 109 6308 | ELECT 1U M 50V           |
|   |           |              | C1107    | 403 003 3700 | CERAMIC 0.022U Z 25V     |
|   |           |              | C1108    | 403 214 1106 | CERAMIC 0.047U J 16V     |
|   |           |              | C1109    | 403 001 1906 | CERAMIC 0.01U M 16V      |
|   |           |              | C1112    | 403 139 2707 | ELECT 1U M 50V           |
| VIDEO CIRCUIT(VD-A)                       |           |              | C1113    | 403 214 1106 | CERAMIC 0.047U J 16V     |
| C1001 403 025 7304                        | CERAMIC   | 4.7P K 50V   | C1114    | 403 025 8608 | CERAMIC 43P J 50V        |
| C1002 403 073 2702                        | CERAMIC   | 390P J 50V   | C1115    | 403 150 1703 | CERAMIC 91P J 50V        |
| C1003 403 026 2209                        | CERAMIC   | 47P J 50V    | C1116    | 403 001 1906 | CERAMIC 0.01U M 16V      |
| C1004 403 179 4501                        | NP-ELECT  | 0.47U M 50V  | C1117    | 403 135 4002 | ELECT 47U M 6.3V         |
| C1005 403 150 1703                        | CERAMIC   | 91P J 50V    | C1118    | 403 068 8801 | CERAMIC 100P J 50V       |
| C1006 403 071 1509                        | CERAMIC   | 180P J 50V   | C1119    | 403 001 1906 | CERAMIC 0.01U M 16V      |
| C1007 403 075 4001                        | CERAMIC   | 820P J 50V   | C1121    | 403 001 1906 | CERAMIC 0.01U M 16V      |
| C1008 403 134 4706                        | NP-ELECT  | 2.2U M 50V   | C1124    | 403 121 0100 | CERAMIC 0.082U J 16V     |
| C1009 403 001 1906                        | CERAMIC   | 0.01U M 16V  | OR       | 403 214 1403 | CERAMIC 0.082U J 16V     |
| C1010 403 121 3408                        | ELECT     | 2.2U M 50V   | C1125    | 403 070 3702 | CERAMIC 120P J 50V       |
| C1011 403 130 2904                        | ELECT     | 0.47U M 50V  | C1126    | 403 001 1906 | CERAMIC 0.01U M 16V      |
| C1012 403 075 3103                        | CERAMIC   | 82P J 50V    | C1131    | 403 075 3103 | CERAMIC 82P J 50V        |
| C1013 403 068 8801                        | CERAMIC   | 100P J 50V   | C1271    | 403 001 1906 | CERAMIC 0.01U M 16V      |
| C1014 403 063 2200                        | POLYESTER | 0.068U K 50V | C1272    | 403 001 1906 | CERAMIC 0.01U M 16V      |
| C1015 403 001 1906                        | CERAMIC   | 0.01U M 16V  | C1292    | 403 115 0901 | CERAMIC 560P J 50V       |
| C1016 403 001 1906                        | CERAMIC   | 0.01U M 16V  | C1301    | 403 003 3700 | CERAMIC 0.022U Z 25V     |
| C1017 403 001 1906                        | CERAMIC   | 0.01U M 16V  | C1351    | 403 022 7703 | CERAMIC 33P J 50V        |
| C1018 403 135 4002                        | ELECT     | 47U M 6.3V   | C1352    | 403 014 2600 | CERAMIC 18P J 50V        |
| C1019 403 121 3408                        | ELECT     | 2.2U M 50V   | C1601    | 403 139 1502 | ELECT 10U M 16V          |
| C1020 403 107 9905                        | ELECT     | 10U M 16V    | C1602    | 403 107 9905 | ELECT 10U M 16V          |
| C1021 403 121 3408                        | ELECT     | 2.2U M 50V   | C1603    | 403 154 3307 | OS-SOLID 4.7U M 10V      |
| C1023 403 001 1906                        | CERAMIC   | 0.01U M 16V  | C1605    | 403 135 4101 | ELECT 470U M 6.3V        |
| C1024 403 139 1205                        | ELECT     | 22U M 10V    | C1608    | 403 162 1807 | ELECT 22U M 10V          |
| C1025 403 130 2904                        | ELECT     | 0.47U M 50V  | C1609    | 403 093 9606 | OS-SOLID 1U M 16V        |
| C1031 403 001 1906                        | CERAMIC   | 0.01U M 16V  | D1001    | 407 007 9904 | DIODE GMA01-BT           |
| C1032 403 135 5009                        | ELECT     | 47U M 10V    | CR       | 407 012 4406 | DIODE 1SS133-T-77        |
| C1033 403 139 2707                        | ELECT     | 1U M 50V     | D1002    | 407 007 9904 | DIODE GMA01-BT           |
| C1034 403 026 2209                        | CERAMIC   | 47P J 50V    | OR       | 407 012 4406 | DIODE 1SS133-T-77        |
| C1035 403 025 7304                        | CERAMIC   | 4.7P K 50V   | D1005    | 407 007 9904 | DIODE GMA01-BT           |
| C1036 403 026 2209                        | CERAMIC   | 47P J 50V    | OR       | 407 012 4406 | DIODE 1SS133-T-77        |
| C1037 403 121 3002                        | ELECT     | 4.7U M 25V   | D1031    | 407 070 8408 | ZENER DIODE 6ZS9.1Y-TB   |
| C1038 403 001 1906                        | CERAMIC   | 0.01U M 16V  | OR       | 407 012 4406 | DIODE 1SS133-T-77        |
| C1039 403 001 1906                        | CERAMIC   | 0.01U M 16V  | D1302    | 407 007 9904 | DIODE GMA01-BT           |
| C1040 403 073 6205                        | CERAMIC   | 470P J 50V   | OR       | 407 053 8906 | ZENER DIODE MTZ9.1C-T-77 |
| C1061 403 074 8703                        | CERAMIC   | 680P J 50V   | D1301    | 407 007 9904 | DIODE GMA01-BT           |
| C1081 403 028 3402                        | CERAMIC   | 56P J 50V    | OR       | 407 012 4406 | DIODE 1SS133-T-77        |
| C1082 403 026 2209                        | CERAMIC   | 47P J 50V    | D1302    | 407 007 9904 | DIODE GMA01-BT           |
| C1083 403 072 7500                        | CERAMIC   | 330P J 50V   | OR       | 407 012 4406 | DIODE 1SS133-T-77        |
| C1084 403 073 2702                        | CERAMIC   | 390P J 50V   | D1303    | 407 007 9904 | DIODE GMA01-BT           |
| C1085 403 030 6309                        | CERAMIC   | 68P J 50V    | OR       | 407 012 4406 | DIODE 1SS133-T-77        |
| C1101 403 214 0703                        | CERAMIC   | 0.022U J 16V | D1304    | 407 007 9904 | DIODE GMA01-BT           |
| C1102 403 001 1906                        | CERAMIC   | 0.01U M 16V  | OR       | 407 012 4406 | DIODE 1SS133-T-77        |
| C1103 403 109 6308                        | ELECT     | 1U M 50V     | D1601    | 407 007 9904 | DIODE GMA01-BT           |
| C1104 403 001 1906                        | CERAMIC   | 0.01U M 16V  | OR       | 407 012 4406 | DIODE 1SS133-T-77        |
| C1105 403 109 6308                        | ELECT     | 1U M 50V     | D1603    | 407 012 4406 | DIODE 1SS133-T-77        |

| <u>LOCATION</u> | <u>PARTS NO.</u> | <u>DESCRIPTION</u>   | <u>LOCATION</u> | <u>PARTS NO.</u> | <u>DESCRIPTION</u>  |
|-----------------|------------------|----------------------|-----------------|------------------|---------------------|
| D1603           | 407 007 9904     | DIODE GMA01-BT       | Q1051           | 405 093 0508     | TR KSA1175-Y        |
| D1604           | 407 007 9904     | DIODE GMA01-BT       | OR              | 405 004 4007     | TR 2SA608-E-SPA-AC  |
| OR              | 407 012 4406     | DIODE 1SS133-T-77    | OR              | 405 004 4601     | TR 2SA608-F-SPA-AC  |
| D1611           | 407 007 9904     | DIODE GMA01-BT       | OR              | 405 006 1707     | TR 2SA933S-TP-Q     |
| OR              | 407 012 4406     | DIODE 1SS133-T-77    | OR              | 405 006 1806     | TR 2SA933S-T93-R    |
| D1612           | 407 007 9904     | DIODE GMA01-BT       | Q1101           | 405 093 0508     | TR KSA1175-Y        |
| OR              | 407 012 4406     | DIODE 1SS133-T-77    | OR              | 405 004 4007     | TR 2SA608-E-SPA-AC  |
| D1651           | 407 007 9904     | DIODE GMA01-BT       | OR              | 405 004 4601     | TR 2SA608-F-SPA-AC  |
| OR              | 407 012 4406     | DIODE 1SS133-T-77    | OR              | 405 006 1707     | TR 2SA933S-TP-Q     |
| DL131           | 613 116 7001     | DELAY,2H             | OR              | 405 006 1806     | TR 2SA933S-T93-R    |
| OR              | 613 117 4870     | DELAY,2H             | Q1102           | 405 057 6201     | TR 2SC4038-Q-TL2    |
|                 |                  |                      | OR              | 405 057 6409     | TR 2SC4038-R-TL2    |
| IC101           | 409 178 3309     | IC LA7340            | Q1103           | 405 093 0607     | TR KSC2785-Y        |
| IC102           | 409 171 9209     | IC LC8992            | OR              | 405 011 8401     | TR 2SC1740S-DCTP-Q  |
| IC111           | 409 208 7208     | IC LA7332            | OR              | 405 011 8500     | TR 2SC1740S-DCTP-R  |
| IC161           | 409 003 4501     | IC BA7021            | OR              | 405 019 2005     | TR 2SC536-E-SPA-AC  |
| OR              | 409 120 3401     | IC LA7221            | OR              | 405 019 2807     | TR 2SC536-F-SPA-AC  |
| L1001           | 613 014 0951     | COIL,INDUCTOR 68UHK  | OR              | 405 093 0607     | TR KSC2785-Y        |
| OR              | 613 014 4478     | HF CHOKE 68UH K      | OR              | 405 011 8401     | TR 2SC1740S-DCTP-Q  |
| L1031           | 613 014 0968     | COIL,INDUCTOR 82UHK  | OR              | 405 011 8500     | TR 2SC1740S-DCTP-R  |
| OR              | 613 014 4485     | HF CHOKE 82UH K      | OR              | 405 019 2005     | TR 2SC536-E-SPA-AC  |
| L1032           | 613 014 0739     | COIL,INDUCTOR 1.0UHM | OR              | 405 019 2807     | TR 2SC536-F-SPA-AC  |
| OR              | 613 014 4256     | HF CHOKE 1.0UH K     | Q1105           | 405 057 6201     | TR 2SC4038-Q-TL2    |
| L1061           | 613 014 0975     | COIL,INDUCTOR 100UHK | OR              | 405 057 6409     | TR 2SC4038-R-TL2    |
| OR              | 613 014 4492     | HF CHOKE 100UH K     | Q1106           | 405 093 0607     | TR KSC2785-Y        |
| L1081           | 613 014 0838     | COIL,INDUCTOR 6.8UHK | OR              | 405 011 8401     | TR 2SC1740S-DCTP-Q  |
| OR              | 613 014 4355     | HF CHOKE 6.8UH K     | OR              | 405 011 8500     | TR 2SC1740S-DCTP-R  |
| L1082           | 613 014 0890     | COIL,INDUCTOR 22UHK  | OR              | 405 019 2005     | TR 2SC536-E-SPA-AC  |
| OR              | 613 014 4416     | HF CHOKE 22UH K      | OR              | 405 019 2807     | TR 2SC536-F-SPA-AC  |
| L1083           | 613 014 0951     | COIL,INDUCTOR 68UHK  | Q1151           | 405 093 0508     | TR KSA1175-Y        |
| OR              | 613 014 4478     | HF CHOKE 68UH K      | OR              | 405 004 4007     | TR 2SA608-E-SPA-AC  |
| L1084           | 613 014 0968     | COIL,INDUCTOR 82UHK  | OR              | 405 004 4601     | TR 2SA608-F-SPA-AC  |
| OR              | 613 014 4485     | HF CHOKE 82UH K      | OR              | 405 006 1707     | TR 2SA933S-TP-Q     |
| L1101           | 613 014 0883     | COIL,INDUCTOR 18UHK  | OR              | 405 006 1806     | TR 2SA933S-T93-R    |
| OR              | 613 014 4409     | HF CHOKE 18UH K      | Q1301           | 405 064 0100     | TR 2SA1561-TL2-Q    |
| L1102           | 613 014 0791     | COIL,INDUCTOR 3.3UHK | OR              | 405 064 0209     | TR 2SA1561-TL2-R    |
| OR              | 613 014 4317     | HF CHOKE 3.3UH K     | Q1302           | 405 093 0607     | TR KSC2785-Y        |
| L1103           | 613 014 0876     | COIL,INDUCTOR 15UHK  | OR              | 405 011 8401     | TR 2SC1740S-DCTP-Q  |
| OR              | 613 014 4393     | HF CHOKE 15UH K      | OR              | 405 011 8500     | TR 2SC1740S-DCTP-R  |
| L1104           | 613 014 1019     | COIL,INDUCTOR 220UHK | OR              | 405 019 2005     | TR 2SC536-E-SPA-AC  |
| OR              | 613 014 4539     | HF CHOKE 220UH K     | OR              | 405 019 2807     | TR 2SC536-F-SPA-AC  |
| L1105           | 613 014 0906     | COIL,INDUCTOR 27UHK  | Q1351           | 405 063 9104     | TR DTA144EL-TL2     |
| OR              | 613 014 4423     | HF CHOKE 27UH K      | Q1381           | 405 063 9708     | TR DTC144EL-TL2     |
|                 |                  |                      | Q1382           | 405 063 9708     | TR DTC144EL-TL2     |
|                 |                  |                      | Q1391           | 405 063 9708     | TR DTC144EL-TL2     |
|                 |                  |                      | Q1401           | 405 093 0607     | TR KSC2785-Y        |
| Q1001           | 405 093 0508     | TR KSA1175-Y         | OR              | 405 011 8401     | TR 2SC1740S-DCTP-Q  |
| OR              | 405 004 4007     | TR 2SA608-E-SPA-AC   | OR              | 405 011 8500     | TR 2SC1740S-DCTP-R  |
| OR              | 405 004 4601     | TR 2SA608-F-SPA-AC   | OR              | 405 019 2005     | TR 2SC536-E-SPA-AC  |
| OR              | 405 006 1707     | TR 2SA933S-TP-Q      | OR              | 405 019 2807     | TR 2SC536-F-SPA-AC  |
| OR              | 405 006 1806     | TR 2SA933S-T93-R     | Q1402           | 405 086 4506     | TR KSA643C-Y        |
| Q1002           | 405 093 0607     | TR KSC2785-Y         | OR              | 405 006 6504     | TR 2SA984-E-AA      |
| OR              | 405 011 8401     | TR 2SC1740S-DCTP-Q   | OR              | 405 006 6702     | TR 2SA984-F-AA      |
| OR              | 405 011 8500     | TR 2SC1740S-DCTP-R   | Q1403           | 405 093 0607     | TR KSC2785-Y        |
| OR              | 405 019 2005     | TR 2SC536-E-SPA-AC   | OR              | 405 011 8401     | TR 2SC1740S-DCTP-Q  |
| OR              | 405 019 2807     | TR 2SC536-F-SPA-AC   | OR              | 405 011 8500     | TR 2SC1740S-DCTP-R  |
| Q1003           | 405 093 0607     | TR KSC2785-Y         | OR              | 405 019 2005     | TR 2SC536-E-SPA-AC  |
| OR              | 405 011 8401     | TR 2SC1740S-DCTP-Q   | OR              | 405 019 2807     | TR 2SC536-F-SPA-AC  |
| OR              | 405 011 8500     | TR 2SC1740S-DCTP-R   | Q1404           | 405 089 0109     | TR 2SA1707-T-AN     |
| OR              | 405 019 2005     | TR 2SC536-E-SPA-AC   | OR              | 405 084 7905     | TR 2SB1240-TV2-R    |
| OR              | 405 019 2807     | TR 2SC536-F-SPA-AC   | Q1601           | 405 004 4601     | TR 2SA608-F-SPA-AC  |
| Q1004           | 405 063 9708     | TR DTC144EL-TL2      | OR              | 405 006 1806     | TR 2SA933S-T93-R    |
| Q1031           | 405 093 0508     | TR KSA1175-Y         | Q1602           | 405 064 0100     | TR 2SA1561-TL2-Q    |
| OR              | 405 004 4007     | TR 2SA608-E-SPA-AC   | OR              | 405 064 0209     | TR 2SA1561-TL2-R    |
| OR              | 405 004 4601     | TR 2SA608-F-SPA-AC   | Q1611           | 405 064 0100     | TR 2SA1561-TL2-Q    |
| OR              | 405 006 1707     | TR 2SA933S-TP-Q      | OR              | 405 064 0209     | TR 2SA1561-TL2-R    |
| OR              | 405 006 1806     | TR 2SA933S-T93-R     | Q1612           | 405 063 9708     | TR DTC144EL-TL2     |
| Q1032           | 405 057 6201     | TR 2SC4038-Q-TL2     | R1001           | 401 022 3008     | CARBON 6.8K JA 1/4W |
| OR              | 405 057 6409     | TR 2SC4038-R-TL2     |                 |                  |                     |

| LOCATION | PARTS NO.    | DESCRIPTION | LOCATION     | PARTS NO.    | DESCRIPTION                |                          |              |
|----------|--------------|-------------|--------------|--------------|----------------------------|--------------------------|--------------|
| R1002    | 401 017 1705 | CARBON      | 2.7K JA 1/4W | R1306        | 401 015 4609               | CARBON                   | 180K JA 1/4W |
| R1003    | 401 022 1806 | CARBON      | 680 JA 1/4W  | R1351        | 401 016 3700               | CARBON                   | 2.2K JA 1/4W |
| R1004    | 401 012 9201 | CARBON      | 1M JA 1/4W   | R1352        | 401 016 3700               | CARBON                   | 2.2K JA 1/4W |
| R1005    | 401 012 5609 | CARBON      | 1K JA 1/4W   | R1381        | 401 012 6903               | CARBON                   | 10K JA 1/4W  |
| R1006    | 401 017 1705 | CARBON      | 2.7K JA 1/4W | R1391        | 401 014 2804               | CARBON                   | 150 JA 1/4W  |
| R1007    | 401 012 5609 | CARBON      | 1K JA 1/4W   | R1401        | 401 016 4707               | CARBON                   | 22K JA 1/4W  |
| R1008    | 401 022 1806 | CARBON      | 680 JA 1/4W  | R1402        | 401 016 4707               | CARBON                   | 22K JA 1/4W  |
| R1009    | 401 012 5609 | CARBON      | 1K JA 1/4W   | R1403        | 401 020 1907               | CARBON                   | 4.7K JA 1/4W |
| R1010    | 401 017 8506 | CARBON      | 300 JA 1/4W  | R1404        | 401 020 1907               | CARBON                   | 4.7K JA 1/4W |
| R1011    | 401 015 2605 | CARBON      | 1.8K JA 1/4W | R1405        | 401 020 2805               | CARBON                   | 47K JA 1/4W  |
| R1012    | 401 015 4609 | CARBON      | 180K JA 1/4W | R1406        | 401 020 2805               | CARBON                   | 47K JA 1/4W  |
| R1013    | 401 012 9201 | CARBON      | 1M JA 1/4W   | R1407        | 401 015 2605               | CARBON                   | 1.8K JA 1/4W |
| R1014    | 401 016 3700 | CARBON      | 2.2K JA 1/4W | R1408        | 401 016 2505               | CARBON                   | 220 JA 1/4W  |
| R1015    | 401 023 2703 | CARBON      | 8.2K JA 1/4W | R1601        | 401 012 5609               | CARBON                   | 1K JA 1/4W   |
| R1016    | 401 013 5202 | CARBON      | 1.2K JA 1/4W | R1602        | 401 012 5609               | CARBON                   | 1K JA 1/4W   |
| R1017    | 401 018 4804 | CARBON      | 33K JA 1/4W  | R1607        | 401 021 1807               | CARBON                   | 560 JA 1/4W  |
| R1018    | 401 012 5609 | CARBON      | 1K JA 1/4W   | R1608        | 401 022 6702               | CARBON                   | 75 JA 1/4W   |
| R1019    | 401 016 2505 | CARBON      | 220 JA 1/4W  | R1609        | 401 013 9408               | CARBON                   | 1.3K JA 1/4W |
| R1020    | 401 020 3802 | CARBON      | 470K JA 1/4W | R1610        | 401 021 1807               | CARBON                   | 560 JA 1/4W  |
| R1021    | 401 014 6000 | CARBON      | 150K JA 1/4W | R1611        | 401 012 6903               | CARBON                   | 10K JA 1/4W  |
| R1022    | 401 022 1806 | CARBON      | 680 JA 1/4W  | R1612        | 401 021 2903               | CARBON                   | 5.6K JA 1/4W |
| R1023    | 401 016 4707 | CARBON      | 22K JA 1/4W  | R1613        | 401 021 2903               | CARBON                   | 5.6K JA 1/4W |
| R1024    | 401 020 2805 | CARBON      | 47K JA 1/4W  | R1614        | 401 016 4707               | CARBON                   | 22K JA 1/4W  |
| R1025    | 401 016 3700 | CARBON      | 2.2K JA 1/4W | R1615        | 401 021 0602               | CARBON                   | 56 JA 1/4W   |
| R1026    | 401 012 5609 | CARBON      | 1K JA 1/4W   | R1616        | 401 012 5609               | CARBON                   | 1K JA 1/4W   |
| R1031    | 401 012 5609 | CARBON      | 1K JA 1/4W   | R1641        | 401 013 9408               | CARBON                   | 1.3K JA 1/4W |
| R1032    | 401 020 0702 | CARBON      | 470 JA 1/4W  |              |                            |                          |              |
| R1033    | 401 018 9700 | CARBON      | 39 JA 1/4W   | TH101        | 407 142 4208               | THERMISTOR TD5-C310DB    |              |
| R1034    | 401 018 9700 | CARBON      | 39 JA 1/4W   |              |                            |                          |              |
| R1035    | 401 018 9700 | CARBON      | 39 JA 1/4W   |              |                            |                          |              |
| R1051    | 401 012 4404 | CARBON      | 100 JA 1/4W  | VR101        | 613 079 2525               | VR,SEMI 1KB              |              |
| R1052    | 401 012 5609 | CARBON      | 1K JA 1/4W   | OR           | 613 120 8537               | VR,SEMI 1KB              |              |
| R1081    | 401 020 0702 | CARBON      | 470 JA 1/4W  | VR102        | 613 079 2532               | VR,SEMI 10KB             |              |
| R1082    | 401 021 1807 | CARBON      | 560 JA 1/4W  | OR           | 613 120 8544               | VR,SEMI 10KB             |              |
| R1101    | 401 020 2805 | CARBON      | 47K JA 1/4W  | VR103        | 613 120 8506               | VR,SEMI 4.7KB            |              |
| R1102    | 401 016 4707 | CARBON      | 22K JA 1/4W  | OR           | 613 120 8650               | VR,SEMI 4.7KB            |              |
| R1103    | 401 012 5609 | CARBON      | 1K JA 1/4W   | VR104        | 613 079 2532               | VR,SEMI 10KB             |              |
| R1104    | 401 013 5202 | CARBON      | 1.2K JA 1/4W | VR105        | 613 079 2525               | VR,SEMI 1KB              |              |
| R1105    | 401 018 2701 | CARBON      | 330 JA 1/4W  | OR           | 613 120 8537               | VR,SEMI 1KB              |              |
| R1106    | 401 021 1807 | CARBON      | 560 JA 1/4W  | VR181        | 613 001 8953               | SEMI VR 470B             |              |
| R1107    | 401 012 5609 | CARBON      | 1K JA 1/4W   | OR           | 613 097 7984               | VR,SEMI 470B             |              |
| R1108    | 401 012 5609 | CARBON      | 1K JA 1/4W   | VR182        | 613 001 8977               | SEMI VR 1KB              |              |
| R1109    | 401 012 6903 | CARBON      | 10K JA 1/4W  | OR           | 613 097 7892               | VR,SEMI 1KB              |              |
| R1110    | 401 023 2703 | CARBON      | 8.2K JA 1/4W |              |                            |                          |              |
| R1111    | 401 012 5609 | CARBON      | 1K JA 1/4W   | X1101        | 613 080 9407               | DSC,CRYSTAL 4.43MHZ      |              |
| R1112    | 401 015 2605 | CARBON      | 1.8K JA 1/4W | OR           | 613 093 8008               | DSC,CRYSTAL 4.433619MHZ  |              |
| R1113    | 401 012 8006 | CARBON      | 100K JA 1/4W | OR           | 613 120 8865               | DSC,CRYSTAL 4.433619MHZ  |              |
| R1114    | 401 019 0904 | CARBON      | 390 JA 1/4W  |              |                            |                          |              |
| R1115    | 401 012 5609 | CARBON      | 1K JA 1/4W   | XF101        | 613 004 5539               | LC PACK 4MHZ LPF         |              |
| R1116    | 401 019 1802 | CARBON      | 3.9K JA 1/4W | XF111        | 613 111 3800               | FILTER,5.06 4.43M 8.1M L |              |
| R1117    | 401 014 4006 | CARBON      | 1.5K JA 1/4W |              |                            |                          |              |
| R1118    | 401 022 7105 | CARBON      | 750 JA 1/4W  |              |                            |                          |              |
| R1119    | 401 012 5609 | CARBON      | 1K JA 1/4W   |              |                            |                          |              |
| R1120    | 401 012 4404 | CARBON      | 100 JA 1/4W  |              |                            |                          |              |
| R1121    | 401 012 5609 | CARBON      | 1K JA 1/4W   |              |                            |                          |              |
| R1122    | 401 020 0702 | CARBON      | 470 JA 1/4W  | C2001        | 403 191 8709               | ELECT 1U M 50V           |              |
| R1123    | 401 014 4006 | CARBON      | 1.5K JA 1/4W | C2002        | 403 075 4506               | CERAMIC 820P K 50V       |              |
| R1124    | 401 015 8805 | CARBON      | 200 JA 1/4W  | C2004        | 403 167 6500               | ELECT 33U M 6.3V         |              |
| R1125    | 401 023 1607 | CARBON      | 820 JA 1/4W  | C2005        | 403 003 0600               | CERAMIC 0.018U K 25V     |              |
| R1126    | 401 012 5609 | CARBON      | 1K JA 1/4W   | C2006        | 403 193 8608               | ELECT 0.47U M 50V        |              |
| R1127    | 401 014 8202 | CARBON      | 160 JA 1/4W  | C2008        | 403 001 7403               | CERAMIC 4700P K 16V      |              |
| R1152    | 401 012 5609 | CARBON      | 1K JA 1/4W   | C2009        | 403 163 7907               | ELECT 47U M 6.3V         |              |
| R1271    | 401 022 1806 | CARBON      | 680 JA 1/4W  | C2010        | 403 189 2405               | ELECT 10U M 16V          |              |
| R1272    | 401 016 2505 | CARBON      | 220 JA 1/4W  | C2013        | 403 003 2406               | CERAMIC 0.022U J 25V     |              |
| R1301    | 401 012 6903 | CARBON      | 10K JA 1/4W  | C2016        | 403 191 8709               | ELECT 1U M 50V           |              |
| R1302    | 401 012 5609 | CARBON      | 1K JA 1/4W   | C2017        | 403 149 0700               | ELECT 33U M 16V          |              |
| R1303    | 401 012 5609 | CARBON      | 1K JA 1/4W   | C2018        | 403 191 8600               | ELECT 4.7U M 25V         |              |
| R1304    | 401 020 2805 | CARBON      | 47K JA 1/4W  | C2019        | 403 163 8409               | ELECT 47U M 16V          |              |
| R1305    | 401 016 4707 | CARBON      | 22K JA 1/4W  | C2020        | 403 071 6207               | CERAMIC 220P K 50V       |              |
|          |              |             |              | 613 126 7329 | FLEXIBLE FLAT CABLES,CN251 |                          |              |
|          |              |             |              |              | AUDIO CIRCUIT(CD-A)        |                          |              |
|          |              |             |              |              |                            |                          |              |

| LOCATION | PARTS NO.    | DESCRIPTION           | LOCATION | PARTS NO.    | DESCRIPTION              |
|----------|--------------|-----------------------|----------|--------------|--------------------------|
| C2021    | 403 081 7409 | POLYPRO 0.033U J 100V | D2001    | 407 007 9904 | DIODE GMA01-BT           |
| C2022    | 403 001 1609 | CERAMIC 0.01U K 16V   | D2501    | 407 012 4406 | DIODE 1SS133-T-77        |
| C2024    | 403 002 1905 | CERAMIC 0.01U K 25V   | OR       | 407 007 9904 | DIODE GMA01-BT           |
| C2025    | 403 003 3700 | CERAMIC 0.022U Z 25V  | D2502    | 407 012 4406 | DIODE 1SS133-T-77        |
| C2051    | 403 069 1207 | CERAMIC 1000P K 50V   | OR       | 407 007 9904 | DIODE GMA01-BT           |
| C2071    | 403 075 4001 | CERAMIC 820P J 50V    | D2509    | 407 053 6308 | ZENER DIODE MTZ5.1B-T-77 |
| C2072    | 403 191 8709 | ELECT 1U M 50V        | D2510    | 407 012 4406 | DIODE 1SS133-T-77        |
| C2073    | 403 003 8606 | CERAMIC 0.039U J 25V  | OR       | 407 007 9904 | DIODE GMA01-BT           |
| C2075    | 403 191 8600 | ELECT 4.7U M 25V      | D2511    | 407 012 4406 | DIODE 1SS133-T-77        |
| C2301    | 403 121 3002 | ELECT 4.7U M 25V      | OR       | 407 007 9904 | DIODE GMA01-BT           |
| C2302    | 403 121 3002 | ELECT 4.7U M 25V      | D2512    | 407 012 4406 | DIODE 1SS133-T-77        |
| C2303    | 403 121 3002 | ELECT 4.7U M 25V      | OR       | 407 007 9904 | DIODE GMA01-BT           |
| C2304    | 403 001 1609 | CERAMIC 0.01U K 16V   | D2513    | 407 012 4406 | DIODE 1SS133-T-77        |
| C2305    | 403 129 5602 | ELECT 33U M 10V       | OR       | 407 007 9904 | DIODE GMA01-BT           |
| C2306    | 403 121 3002 | ELECT 4.7U M 25V      | D2514    | 407 012 4406 | DIODE 1SS133-T-77        |
| C2307    | 403 107 9509 | ELECT 100U M 10V      | OR       | 407 007 9904 | DIODE GMA01-BT           |
| C2308    | 403 135 5009 | ELECT 47U M 10V       | D2515    | 407 012 4406 | DIODE 1SS133-T-77        |
| C2309    | 403 134 9602 | ELECT 47U M 16V       | OR       | 407 007 9904 | DIODE GMA01-BT           |
| C2310    | 403 107 9905 | ELECT 10U M 16V       | D2516    | 407 099 5303 | ZENER DIODE MTZ5.6B-T-77 |
| C2311    | 403 163 8003 | ELECT 33U M 10V       | D2517    | 407 012 4406 | DIODE 1SS133-T-77        |
| C2312    | 403 001 1609 | CERAMIC 0.01U K 16V   | OR       | 407 007 9904 | DIODE GMA01-BT           |
| C2313    | 403 134 8100 | ELECT 100U M 6.3V     | D2518    | 407 012 4406 | DIODE 1SS133-T-77        |
| C2314    | 403 001 3801 | CERAMIC 1500P K 16V   | OR       | 407 007 9904 | DIODE GMA01-BT           |
| C2315    | 403 073 7004 | CERAMIC 470P K 50V    |          |              |                          |
| C2318    | 403 001 1609 | CERAMIC 0.01U K 16V   | IC201    | 409 133 1401 | IC LA7294                |
| C2319    | 403 135 3500 | ELECT 220U M 6.3V     | IC231    | 409 252 4208 | IC UPC2354AGF-3B9        |
| C2320    | 403 135 5009 | ELECT 47U M 10V       | IC232    | 409 036 8408 | IC MS237L-TCO4A-31       |
| C2323    | 403 193 9001 | ELECT 3.3U M 50V      | IC233    | 409 039 7309 | IC NJM4556S              |
| C2401    | 403 121 3002 | ELECT 4.7U M 25V      |          |              |                          |
| C2402    | 403 121 3002 | ELECT 4.7U M 25V      | L2002    | 613 014 3037 | COIL.INDUCTOR 10MHJ      |
| C2403    | 403 121 3002 | ELECT 4.7U M 25V      | OR       | 613 014 3532 | HF CHOKE 10MH J          |
| C2404    | 403 001 1609 | CERAMIC 0.01U K 16V   | L2003    | 613 014 2870 | COIL.INDUCTOR 560UHK     |
| C2405    | 403 129 5602 | ELECT 33U M 10V       | OR       | 613 014 3259 | HF CHOKE 560UH K         |
| C2406    | 403 121 3002 | ELECT 4.7U M 25V      |          |              |                          |
| C2407    | 403 107 9509 | ELECT 100U M 10V      | Q2001    | 405 024 9709 | TR 2SD734-E-AA           |
| C2408    | 403 135 5009 | ELECT 47U M 10V       | OR       | 405 024 9907 | TR 2SD734-F-AA           |
| C2409    | 403 134 9602 | ELECT 47U M 16V       | Q2303    | 405 076 6404 | TR DTC343T-STP           |
| C2410    | 403 107 9905 | ELECT 10U M 16V       | Q2304    | 405 076 6404 | TR DTC343T-STP           |
| C2411    | 403 129 5602 | ELECT 33U M 10V       | Q2403    | 405 076 6404 | TR DTC343T-STP           |
| C2412    | 403 001 1609 | CERAMIC 0.01U K 16V   | Q2404    | 405 076 6404 | TR DTC343T-STP           |
| C2413    | 403 134 8100 | ELECT 100U M 6.3V     | Q2502    | 405 007 3106 | TR 2SB544-F-MP-AE        |
| C2414    | 403 001 3801 | CERAMIC 1500P K 16V   | Q2503    | 405 089 2103 | TR 2SC4483-S-AN          |
| C2415    | 403 073 7004 | CERAMIC 470P K 50V    | Q2504    | 405 018 2501 | TR 2SC3399-AC            |
| C2418    | 403 001 1609 | CERAMIC 0.01U K 16V   | OR       | 405 000 6104 | TR DTC144ES-DCTP         |
| C2419    | 403 135 3500 | ELECT 220U M 6.3V     | Q2505    | 405 000 6104 | TR DTC144ES-DCTP         |
| C2420    | 403 135 5009 | ELECT 47U M 10V       | Q2506    | 405 018 2501 | TR 2SC3399-AC            |
| C2423    | 403 135 7805 | ELECT 3.3U M 50V      | OR       | 405 000 6104 | TR DTC144ES-DCTP         |
| C2501    | 403 193 9001 | ELECT 3.3U M 50V      | Q2507    | 405 003 7702 | TR 2SA1346-AC            |
| C2502    | 403 134 9602 | ELECT 47U M 16V       | OR       | 405 000 1208 | TR DTA124ES-DCTP         |
| C2503    | 403 107 9905 | ELECT 10U M 16V       | Q2508    | 405 018 2501 | TR 2SC3399-AC            |
| C2504    | 403 125 5606 | ELECT 100U M 16V      | OR       | 405 000 6104 | TR DTC144ES-DCTP         |
| C2505    | 403 001 1609 | CERAMIC 0.01U K 16V   | Q2509    | 405 003 7702 | TR 2SA1346-AC            |
| C2506    | 403 069 1207 | CERAMIC 1000P K 50V   | OR       | 405 000 1208 | TR DTA124ES-DCTP         |
| C2507    | 403 072 7500 | CERAMIC 330P J 50V    | Q2512    | 405 003 7702 | TR 2SA1346-AC            |
| C2508    | 403 167 6500 | ELECT 33U M 6.3V      | OR       | 405 000 1208 | TR DTA124ES-DCTP         |
| C2509    | 403 191 8600 | ELECT 4.7U M 25V      | Q2514    | 405 018 2501 | TR 2SC3399-AC            |
| C2510    | 403 189 2405 | ELECT 10U M 16V       | OR       | 405 000 6104 | TR DTC144ES-DCTP         |
| C2511    | 403 107 9905 | ELECT 10U M 16V       | Q2515    | 405 018 2501 | TR 2SC3399-AC            |
| C2513    | 403 121 3408 | ELECT 2.2U M 50V      | OR       | 405 000 6104 | TR DTC144ES-DCTP         |
| C2514    | 403 134 9602 | ELECT 47U M 16V       | Q2518    | 405 018 2808 | TR 2SC3402-AC            |
| C2515    | 403 001 1609 | CERAMIC 0.01U K 16V   | OR       | 405 000 3103 | TR DTC114ES-DCTP         |
| C2517    | 403 003 6701 | CERAMIC 0.033U K 25V  | Q2519    | 405 018 2501 | TR 2SC3399-AC            |
| C2518    | 403 125 5606 | ELECT 100U M 16V      | OR       | 405 000 6104 | TR DTC144ES-DCTP         |
| C2520    | 403 135 5009 | ELECT 47U M 10V       | Q2522    | 405 024 0409 | TR 2SD545-F-NP-AA        |
| C2521    | 403 069 1207 | CERAMIC 1000P K 50V   | Q2523    | 405 018 2808 | TR 2SC3402-AC            |
| C2522    | 403 001 1609 | CERAMIC 0.01U K 16V   | OR       | 405 000 3103 | TR DTC114ES-DCTP         |
| C2527    | 403 107 9905 | ELECT 10U M 16V       |          |              |                          |
| D2001    | 407 012 4406 | DIODE 1SS133-T-77     | R2001    | 401 012 4404 | CARBON 100 JA 1/4W       |
|          |              |                       | R2002    | 401 017 1705 | CARBON 2.7K JA 1/4W      |

| LOCATION | PARTS NO.    | DESCRIPTION | LOCATION     | PARTS NO.    | DESCRIPTION  |                  |
|----------|--------------|-------------|--------------|--------------|--------------|------------------|
| R2003    | 401 013 4106 | CARBON      | 120 JA 1/4W  | R2513        | 401 012 6903 | CARBON           |
| R2004    | 401 019 3905 | CARBON      | 390K JA 1/4W | R2514        | 401 023 7401 | CARBON           |
| R2005    | 401 021 8905 | CARBON      | 6.2K JA 1/4W | R2515        | 401 012 6903 | CARBON           |
| R2006    | 401 017 1705 | CARBON      | 2.7K JA 1/4W | R2518        | 401 017 8506 | CARBON           |
| R2007    | 401 012 5609 | CARBON      | 1K JA 1/4W   | R2519        | 401 019 2908 | CARBON           |
| R2008    | 401 022 7600 | CARBON      | 7.5K JA 1/4W | R2520        | 401 016 4707 | CARBON           |
| R2009    | 401 018 6501 | CARBON      | 3.3M JA 1/4W | R2521        | 401 017 9701 | CARBON           |
| R2010    | 401 012 6903 | CARBON      | 10K JA 1/4W  | R2522        | 401 020 1907 | CARBON           |
| R2011    | 401 023 7401 | CARBON      | 9.1K JA 1/4W | R2523        | 401 012 6903 | CARBON           |
| R2012    | 401 019 7705 | CARBON      | 4.3K JA 1/4W | R2524        | 401 012 6903 | CARBON           |
| R2013    | 401 012 5609 | CARBON      | 1K JA 1/4W   | R2525        | 401 018 4804 | CARBON           |
| R2014    | 401 015 2605 | CARBON      | 1.8K JA 1/4W | R2526        | 401 016 4707 | CARBON           |
| R2016    | 401 012 8006 | CARBON      | 100K JA 1/4W | R2527        | 401 019 1802 | CARBON           |
| R2018    | 401 015 3701 | CARBON      | 18K JA 1/4W  | R2528        | 401 016 4707 | CARBON           |
| R2019    | 401 015 3701 | CARBON      | 18K JA 1/4W  | R2529        | 401 018 8307 | CARBON           |
| R2021    | 401 012 3308 | CARBON      | 10 JA 1/4W   | R2531        | 401 012 5609 | CARBON           |
| R2022    | 401 019 9501 | CARBON      | 47 JA 1/4W   | R2534        | 401 016 2505 | CARBON           |
| R2023    | 401 014 5102 | CARBON      | 15K JA 1/4W  | R2536        | 401 019 7705 | CARBON           |
| R2024    | 401 015 6405 | CARBON      | 2.2 JA 1/4W  | R2537        | 401 018 4804 | CARBON           |
| R2051    | 401 012 5609 | CARBON      | 1K JA 1/4W   | R2538        | 401 020 1907 | CARBON           |
| R2071    | 401 013 4106 | CARBON      | 120 JA 1/4W  | R2539        | 401 019 7200 | CARBON           |
| R2072    | 401 012 6903 | CARBON      | 10K JA 1/4W  | R2540        | 401 012 6903 | CARBON           |
| R2091    | 401 021 2903 | CARBON      | 5.6K JA 1/4W | R2541        | 401 020 1907 | CARBON           |
| R2092    | 401 021 2903 | CARBON      | 5.6K JA 1/4W | R2542        | 401 016 4707 | CARBON           |
| R2301    | 401 017 2702 | CARBON      | 27K JA 1/4W  | R2544        | 401 087 4804 | MT-FILM          |
| R2302    | 401 020 2805 | CARBON      | 47K JA 1/4W  | R2545        | 401 012 6903 | CARBON           |
| R2303    | 401 015 3701 | CARBON      | 18K JA 1/4W  | R2547        | 401 014 4006 | CARBON           |
| R2304    | 401 020 2805 | CARBON      | 47K JA 1/4W  | R2548        | 401 012 6903 | CARBON           |
| R2305    | 401 017 2702 | CARBON      | 27K JA 1/4W  | R2551        | 401 020 1907 | CARBON           |
| R2306    | 401 020 2805 | CARBON      | 47K JA 1/4W  | R2552        | 401 020 1907 | CARBON           |
| R2307    | 401 012 5609 | CARBON      | 1K JA 1/4W   | R2557        | 401 015 2605 | CARBON           |
| R2308    | 401 012 6903 | CARBON      | 10K JA 1/4W  | R2558        | 401 021 2903 | CARBON           |
| R2309    | 401 022 3008 | CARBON      | 6.8K JA 1/4W |              |              |                  |
| R2310    | 401 020 0702 | CARBON      | 470 JA 1/4W  | T2001        | 613 016 2205 | OSC COIL 70KHZ   |
| R2311    | 401 016 0402 | CARBON      | 200K JA 1/4W | OR           | 613 094 3378 | TRANS. OSC 70KHZ |
| R2312    | 401 017 9701 | CARBON      | 30K JA 1/4W  |              |              |                  |
| R2313    | 401 087 2909 | MT-FILM     | 12K FD 1/6W  | VR201        | 613 001 9097 | SEMI VR 100KB    |
| R2314    | 401 014 9001 | CARBON      | 16K JA 1/4W  | VR233        | 613 001 5853 | SEMI VR 10KB     |
| R2315    | 401 016 9603 | CARBON      | 27 JA 1/4W   | VR234        | 613 001 5853 | SEMI VR 10KB     |
| R2316    | 401 016 3700 | CARBON      | 2.2K JA 1/4W | VR235        | 613 001 9424 | SEMI VR 20KB     |
| R2317    | 401 016 2505 | CARBON      | 220 JA 1/4W  | OR           | 613 079 2549 | VR.SEMI 20KB     |
| R2318    | 401 020 1907 | CARBON      | 4.7K JA 1/4W | VR236        | 613 001 9424 | SEMI VR 20KB     |
| R2323    | 401 020 1907 | CARBON      | 4.7K JA 1/4W | OR           | 613 079 2549 | VR.SEMI 20KB     |
| R2401    | 401 017 2702 | CARBON      | 27K JA 1/4W  | VR239        | 613 001 9400 | SEMI VR 5KB      |
| R2402    | 401 020 2805 | CARBON      | 47K JA 1/4W  | OR           | 613 112 4912 | VR.SEMI 5KB      |
| R2403    | 401 015 3701 | CARBON      | 18K JA 1/4W  | VR243        | 613 001 5648 | SEMI VR 100KB    |
| R2404    | 401 020 2805 | CARBON      | 47K JA 1/4W  |              |              |                  |
| R2405    | 401 017 2702 | CARBON      | 27K JA 1/4W  |              |              |                  |
| R2406    | 401 020 2805 | CARBON      | 47K JA 1/4W  |              |              |                  |
| R2407    | 401 012 5609 | CARBON      | 1K JA 1/4W   |              |              |                  |
| R2408    | 401 012 6903 | CARBON      | 10K JA 1/4W  | C3001        | 403 121 9509 | CERAMIC          |
| R2409    | 401 022 3008 | CARBON      | 6.8K JA 1/4W | C3002        | 403 159 8109 | ELECT            |
| R2410    | 401 020 0702 | CARBON      | 470 JA 1/4W  | C3003        | 403 139 1601 | ELECT            |
| R2411    | 401 016 0402 | CARBON      | 200K JA 1/4W | C3004        | 403 121 9509 | CERAMIC          |
| R2412    | 401 017 9701 | CARBON      | 30K JA 1/4W  | C3005        | 403 069 1207 | CERAMIC          |
| R2413    | 401 091 3305 | MT-FILM     | 7.5K FD 1/6W | C3006        | 403 012 6006 | CERAMIC          |
| R2414    | 401 020 1907 | CARBON      | 4.7K JA 1/4W | C3007        | 403 017 9705 | CERAMIC          |
| R2415    | 401 016 9603 | CARBON      | 27 JA 1/4W   | C3008        | 403 001 1609 | CERAMIC          |
| R2416    | 401 016 3700 | CARBON      | 2.2K JA 1/4W | C3009        | 403 010 7807 | CERAMIC          |
| R2417    | 401 016 2505 | CARBON      | 220 JA 1/4W  | C3010        | 403 068 9402 | CERAMIC          |
| R2501    | 401 012 6903 | CARBON      | 10K JA 1/4W  | C3012        | 403 001 1609 | CERAMIC          |
| R2502    | 401 012 6903 | CARBON      | 10K JA 1/4W  | C3013        | 403 001 1609 | CERAMIC          |
| R2503    | 401 012 6903 | CARBON      | 10K JA 1/4W  | C3014        | 403 139 1403 | ELECT            |
| R2504    | 401 013 6308 | CARBON      | 12K JA 1/4W  | C3016        | 403 069 1207 | CERAMIC          |
| R2505    | 401 012 6903 | CARBON      | 10K JA 1/4W  | C3017        | 403 001 1609 | CERAMIC          |
| R2506    | 401 020 1907 | CARBON      | 4.7K JA 1/4W | C3018        | 403 001 1609 | CERAMIC          |
| R2507    | 401 020 1907 | CARBON      | 4.7K JA 1/4W | C3019        | 403 069 1207 | CERAMIC          |
| R2509    | 401 012 9201 | CARBON      | 1M JA 1/4W   | C3021        | 403 001 1609 | CERAMIC          |
| R2510    | 401 012 8006 | CARBON      | 100K JA 1/4W | C3022        | 403 001 1609 | CERAMIC          |
|          |              |             | C3023        | 403 069 1207 | CERAMIC      |                  |

### SYSTEM CONTROL & SERVO CIRCUIT(SV-A)

| <u>LOCATION</u> | <u>PARTS NO.</u> | <u>DESCRIPTION</u>        | <u>LOCATION</u> | <u>PARTS NO.</u> | <u>DESCRIPTION</u>  |
|-----------------|------------------|---------------------------|-----------------|------------------|---------------------|
| C3024           | 403 204 5107     | NP-ELECT 10U M 25V        | IC302           | 409 032 3803     | IC MN1280-S         |
| C3025           | 403 204 5107     | NP-ELECT 10U M 25V        | OR              | 409 243 4200     | IC MN1380-R         |
| C3026           | 403 069 1207     | CERAMIC 1000P K 50V       | OR              | 409 243 4309     | IC MN1380-S         |
| C3027           | 403 139 2905     | ELECT 2.2U M 50V          | IC303           | 409 114 4803     | IC LB1641           |
| C3028           | 403 121 9509     | CERAMIC 0.1U Z 50V        | IC352           | 409 178 3200     | IC LA7124           |
| C3029           | 403 002 2506     | CERAMIC 0.01U M 25V       | IC391           | 409 225 6109     | IC BA7046           |
| C3501           | 403 003 2802     | CERAMIC 0.022U K 25V      |                 |                  |                     |
| C3502           | 403 071 6207     | CERAMIC 220P K 50V        | L3005           | 613 014 1187     | COIL,INDUCTOR 68UHJ |
| C3503           | 403 071 6207     | CERAMIC 220P K 50V        | OR              | 613 014 4706     | HF CHOKE 68UH J     |
| C3504           | 403 001 6208     | CERAMIC 2700P M 16V       |                 |                  |                     |
| C3505           | 403 001 1609     | CERAMIC 0.01U K 16V       | Q3001           | 405 019 2807     | TR 2SC536-F-SPA-AC  |
| C3506           | 403 003 2802     | CERAMIC 0.022U K 25V      | Q3002           | 405 019 2807     | TR 2SC536-F-SPA-AC  |
| C3507           | 403 119 6701     | CERAMIC 0.068U K 16V      | Q3005           | 405 015 2603     | TR 2SC2669-Y-TPE4   |
| OR              | 403 214 2707     | CERAMIC 0.068U K 16V      | OR              | 405 016 1100     | TR 2SC2839-F-SPA-AC |
| C3509           | 403 072 8200     | CERAMIC 330P K 50V        | Q3006           | 405 019 2807     | TR 2SC536-F-SPA-AC  |
| C3512           | 403 139 1007     | ELECT 47U M 6.3V          | Q3007           | 405 018 2808     | TR 2SC3402-AC       |
| C3513           | 403 001 1609     | CERAMIC 0.01U K 16V       | Q3022           | 405 000 6104     | TR DTC144ES-DCTP    |
| C3514           | 403 086 2904     | NP-ELECT 1U M 50V         | OR              | 405 018 2501     | TR 2SC3399-AC       |
| C3515           | 403 139 1502     | ELECT 10U M 16V           | Q3023           | 405 000 3103     | TR DTC114ES-DCTP    |
| C3516           | 403 139 3001     | ELECT 3.3U M 50V          | OR              | 405 018 2808     | TR 2SC3402-AC       |
| C3517           | 403 074 9205     | CERAMIC 680P K 50V        | Q3024           | 405 000 3103     | TR DTC114ES-DCTP    |
| C3518           | 403 085 6101     | NP-ELECT 33U M 16V        | OR              | 405 018 2808     | TR 2SC3402-AC       |
| C3519           | 403 069 1207     | CERAMIC 1000P K 50V       | Q3501           | 405 019 2807     | TR 2SC536-F-SPA-AC  |
| C3520           | 403 184 9102     | MT-POLYEST 0.033U J 50V   | Q3601           | 405 000 6104     | TR DTC144ES-DCTP    |
| C3521           | 403 069 1207     | CERAMIC 1000P K 50V       | OR              | 405 018 2501     | TR 2SC3399-AC       |
| C3522           | 403 139 1007     | ELECT 47U M 6.3V          | Q3602           | 405 000 6104     | TR DTC144ES-DCTP    |
| C3524           | 403 001 1906     | CERAMIC 0.01U M 16V       | OR              | 405 018 2501     | TR 2SC3399-AC       |
| C3525           | 403 139 2707     | ELECT 1U M 50V            | Q3952           | 405 016 1100     | TR 2SC2839-F-SPA-AC |
| C3526           | 403 086 2904     | NP-ELECT 1U M 50V         | Q3953           | 405 000 6104     | TR DTC144ES-DCTP    |
| C3527           | 403 001 1609     | CERAMIC 0.01U K 16V       | OR              | 405 018 2501     | TR 2SC3399-AC       |
| C3528           | 403 139 2400     | ELECT 0.22U M 50V         |                 |                  |                     |
| C3529           | 403 001 1609     | CERAMIC 0.01U K 16V       | R3001           | 401 018 3708     | CARBON 3.3K JA 1/4W |
| C3530           | 403 121 9509     | CERAMIC 0.1U Z 50V        | R3002           | 401 012 6903     | CARBON 10K JA 1/4W  |
| C3951           | 403 059 2900     | POLYESTER 2200P J 50V     | R3003           | 401 020 1907     | CARBON 4.7K JA 1/4W |
| OR              | 403 059 3006     | POLYESTER 2200P J 50V     | R3006           | 401 022 7105     | CARBON 750 JA 1/4W  |
| C3952           | 403 139 2707     | ELECT 1U M 50V            | R3007           | 401 012 5609     | CARBON 1K JA 1/4W   |
| C3953           | 403 139 1007     | ELECT 47U M 6.3V          | R3008           | 401 016 3700     | CARBON 2.2K JA 1/4W |
| C3954           | 403 003 3700     | CERAMIC 0.022U Z 25V      | R3009           | 401 023 2703     | CARBON 8.2K JA 1/4W |
| C3955           | 403 068 9402     | CERAMIC 100P K 50V        | R3010           | 401 012 5609     | CARBON 1K JA 1/4W   |
| C3956           | 403 139 2707     | ELECT 1U M 50V            | R3011           | 401 019 1802     | CARBON 3.9K JA 1/4W |
|                 |                  |                           | R3012           | 401 020 0702     | CARBON 470 JA 1/4W  |
| D3001           | 407 078 2705     | DIODE 1SS244-T-77         | R3014           | 401 019 1802     | CARBON 3.9K JA 1/4W |
| D3010           | 407 007 9904     | DIODE GMA01-BT            | R3015           | 401 012 5609     | CARBON 1K JA 1/4W   |
| OR              | 407 012 4406     | DIODE 1SS133-T-77         | R3016           | 401 018 4804     | CARBON 33K JA 1/4W  |
| D3021           | 407 070 8101     | ZENER DIODE GZ8.2Y-BT     | R3017           | 401 018 4804     | CARBON 33K JA 1/4W  |
| OR              | 407 063 9504     | ZENER DIODE MTZJ8.2B-T-77 | R3018           | 401 012 6903     | CARBON 10K JA 1/4W  |
| D3022           | 407 051 6904     | ZENER DIODE GZ5.6Y-BT     | R3031           | 401 012 5609     | CARBON 1K JA 1/4W   |
| OR              | 407 099 5303     | ZENER DIODE MTZJ5.6B-T-77 | R3032           | 401 012 5609     | CARBON 1K JA 1/4W   |
| D3023           | 407 007 9904     | DIODE GMA01-BT            | R3033           | 401 012 5609     | CARBON 1K JA 1/4W   |
| OR              | 407 012 4406     | DIODE 1SS133-T-77         | R3034           | 401 020 1907     | CARBON 4.7K JA 1/4W |
| D3025           | 407 007 9904     | DIODE GMA01-BT            | R3035           | 401 020 1907     | CARBON 4.7K JA 1/4W |
| OR              | 407 012 4406     | DIODE 1SS133-T-77         | R3036           | 401 020 1907     | CARBON 4.7K JA 1/4W |
| D3501           | 407 007 9904     | DIODE GMA01-BT            | R3041           | 401 020 1907     | CARBON 4.7K JA 1/4W |
| OR              | 407 012 4406     | DIODE 1SS133-T-77         | R3042           | 401 016 0402     | CARBON 200K JA 1/4W |
| D3504           | 407 007 9904     | DIODE GMA01-BT            | R3043           | 401 016 0402     | CARBON 200K JA 1/4W |
| OR              | 407 012 4406     | DIODE 1SS133-T-77         | R3044           | 401 012 5609     | CARBON 1K JA 1/4W   |
| D3505           | 407 007 9904     | DIODE GMA01-BT            | R3045           | 401 012 5609     | CARBON 1K JA 1/4W   |
| OR              | 407 012 4406     | DIODE 1SS133-T-77         | R3046           | 401 012 5609     | CARBON 1K JA 1/4W   |
| D3506           | 407 007 9904     | DIODE GMA01-BT            | R3047           | 401 012 5609     | CARBON 1K JA 1/4W   |
| DR              | 407 012 4406     | DIODE 1SS133-T-77         | R3048           | 401 012 5609     | CARBON 1K JA 1/4W   |
| D3951           | 407 007 9904     | DIODE GMA01-BT            | R3049           | 401 020 2805     | CARBON 47K JA 1/4W  |
| OR              | 407 012 4406     | DIODE 1SS133-T-77         | R3050           | 401 018 4804     | CARBON 33K JA 1/4W  |
| D3952           | 407 007 9904     | DIODE GMA01-BT            | R3051           | 401 020 1907     | CARBON 4.7K JA 1/4W |
| OR              | 407 012 4406     | DIODE 1SS133-T-77         | R3052           | 401 012 5609     | CARBON 1K JA 1/4W   |
| D3953           | 407 007 9904     | DIODE GMA01-BT            | R3053           | 401 016 4707     | CARBON 22K JA 1/4W  |
| OR              | 407 012 4406     | DIODE 1SS133-T-77         | R3054           | 401 014 7106     | CARBON 1.5M JA 1/4W |
|                 |                  |                           | R3055           | 401 012 6903     | CARBON 10K JA 1/4W  |
| IC301           | 410 128 9500     | IC UPD78136GF-012-389     | R3059           | 401 020 2805     | CARBON 47K JA 1/4W  |
| IC302           | 409 032 3704     | IC MN1280-R               | R3060           | 401 018 4804     | CARBON 33K JA 1/4W  |

| LOCATION                          | PARTS NO.    | DESCRIPTION                | LOCATION                  | PARTS NO.    | DESCRIPTION                |
|-----------------------------------|--------------|----------------------------|---------------------------|--------------|----------------------------|
| R3061                             | 401 014 7106 | CARBON      1.5M JA 1/4W   | Q5401                     | 405 108 6907 | TR 2SB1322A-R(TA)          |
| R3062                             | 401 016 4707 | CARBON      22K JA 1/4W    | OR                        | 405 108 7003 | TR 2SB1322A-S(TA)          |
| R3063                             | 401 022 7105 | CARBON      750 JA 1/4W    | Q5402                     | 405 107 4102 | TR 2SD1994-R (TA)          |
| R3064                             | 402 036 4401 | FUSIBLE RES    3.3 JA 1/2W | OR                        | 405 107 4201 | TR 2SD1994-S (TA)          |
| OR                                | 402 036 3701 | FUSIBLE RES    3.3 JA 1/2W | OR                        | 405 089 2103 | TR 2SC4483-S-AN            |
| R3065                             | 401 012 6903 | CARBON      10K JA 1/4W    |                           |              |                            |
| R3066                             | 401 012 6903 | CARBON      10K JA 1/4W    | R5401                     | 401 021 8905 | CARBON      6.2K JA 1/4W   |
| R3068                             | 401 014 5102 | CARBON      15K JA 1/4W    | R5402                     | 401 016 3700 | CARBON      2.2K JA 1/4W   |
| R3501                             | 401 012 5609 | CARBON      1K JA 1/4W     | R5403                     | 401 012 5609 | CARBON      1K JA 1/4W     |
| R3502                             | 401 016 4707 | CARBON      22K JA 1/4W    | R5404 △                   | 402 004 2200 | FUSIBLE RES    5.6 JA 1/4W |
| R3503                             | 401 012 8006 | CARBON      100K JA 1/4W   |                           |              |                            |
| R3504                             | 401 012 6903 | CARBON      10K JA 1/4W    |                           |              |                            |
| R3506                             | 401 012 8006 | CARBON      100K JA 1/4W   | COMPL PCB,VP-1            |              |                            |
| R3507                             | 401 012 8006 | CARBON      10K JA 1/4W    | COMPL.NO.    613 132 6545 |              |                            |
| R3510                             | 401 012 6903 | CARBON      10K JA 1/4W    |                           |              |                            |
| R3511                             | 401 012 5609 | CARBON      1K JA 1/4W     |                           |              |                            |
| R3514                             | 401 016 3700 | CARBON      2.2K JA 1/4W   | C1801                     | 403 071 8102 | CERAMIC    2200P K 50V     |
| R3515                             | 401 016 3700 | CARBON      2.2K JA 1/4W   | C1802                     | 403 071 8102 | CERAMIC    2200P K 50V     |
| R3516                             | 401 023 6909 | CARBON      910 JA 1/4W    | C1803                     | 403 071 8102 | CERAMIC    2200P K 50V     |
| R3517                             | 401 012 5609 | CARBON      1K JA 1/4W     | C1804                     | 403 073 1200 | CERAMIC    0.033U K 50V    |
| R3518                             | 401 015 4609 | CARBON      180K JA 1/4W   | C1805                     | 403 191 8709 | ELECT    1U M 50V          |
| R3519                             | 401 013 6308 | CARBON      12K JA 1/4W    | C1806                     | 403 071 8102 | CERAMIC    2200P K 50V     |
| R3520                             | 401 021 9902 | CARBON      620K JA 1/4W   | C1807                     | 403 073 1200 | CERAMIC    0.033U K 50V    |
| R3521                             | 401 022 8508 | CARBON      750K JA 1/4W   | C1808                     | 403 073 1200 | CERAMIC    0.033U K 50V    |
| R3522                             | 401 014 6000 | CARBON      150K JA 1/4W   | C1812                     | 403 069 5601 | CERAMIC    0.01U K 50V     |
| R3523                             | 401 012 8006 | CARBON      100K JA 1/4W   | C1813                     | 403 069 5601 | CERAMIC    0.01U K 50V     |
| R3524                             | 401 012 8006 | CARBON      100K JA 1/4W   | C1814                     | 403 073 1200 | CERAMIC    0.033U K 50V    |
| R3525                             | 401 018 7508 | CARBON      360 JA 1/4W    | C1815                     | 403 069 5601 | CERAMIC    0.01U K 50V     |
| R3526                             | 401 020 7800 | CARBON      510 JA 1/4W    | C1816                     | 403 069 5601 | CERAMIC    0.01U K 50V     |
| R3527                             | 401 020 7800 | CARBON      510 JA 1/4W    | C1817                     | 403 069 1702 | CERAMIC    1000P K 50V     |
| R3528                             | 401 012 6903 | CARBON      10K JA 1/4W    | C1818                     | 403 154 3307 | OS-SOLID    4.7U M 10V     |
| R3529                             | 401 012 6903 | CARBON      10K JA 1/4W    | C1820                     | 403 154 5806 | OS-SOLID    6.8U M 16V     |
| R3530                             | 401 012 5609 | CARBON      1K JA 1/4W     | C1851                     | 403 069 5601 | CERAMIC    0.01U K 50V     |
| R3531                             | 401 012 5609 | CARBON      1K JA 1/4W     | C1852                     | 403 022 8304 | CERAMIC    33P J 50V       |
| R3532                             | 401 012 5609 | CARBON      1K JA 1/4W     | C1853                     | 403 022 8304 | CERAMIC    33P J 50V       |
| R3533                             | 401 012 8006 | CARBON      100K JA 1/4W   | C1854                     | 403 026 2902 | CERAMIC    47P J 50V       |
| R3534                             | 401 012 5609 | CARBON      1K JA 1/4W     | C1855                     | 403 030 7009 | CERAMIC    68P J 50V       |
| R3951                             | 401 020 3802 | CARBON      470K JA 1/4W   | C1861                     | 403 070 1005 | CERAMIC    0.1U K 50V      |
| R3952                             | 401 107 8003 | MT-FILM      130K FD 1/4W  | C1891                     | 403 191 8709 | ELECT    1U M 50V          |
| R3953                             | 401 012 6903 | CARBON      10K JA 1/4W    | C1892                     | 403 073 1200 | CERAMIC    0.033U K 50V    |
| R3954                             | 401 012 5609 | CARBON      1K JA 1/4W     | C1893                     | 403 073 1200 | CERAMIC    0.033U K 50V    |
| R3955                             | 401 020 3802 | CARBON      470K JA 1/4W   | C1895                     | 403 069 1702 | CERAMIC    1000P K 50V     |
| R3956                             | 401 018 3708 | CARBON      3.3K JA 1/4W   | C1896                     | 403 073 1200 | CERAMIC    0.033U K 50V    |
| R3957                             | 401 018 3708 | CARBON      3.3K JA 1/4W   |                           |              |                            |
| R3958                             | 401 012 8006 | CARBON      100K JA 1/4W   | IC181                     | 409 161 9806 | IC LA7321                  |
| R3959                             | 401 016 3700 | CARBON      2.2K JA 1/4W   |                           |              |                            |
| R3960                             | 401 017 1705 | CARBON      2.7K JA 1/4W   | J1835                     | 401 037 5004 | MT-GLAZE    0.000 ZA 1/10W |
| R3961                             | 401 016 3700 | CARBON      2.2K JA 1/4W   | J1836                     | 401 037 5004 | MT-GLAZE    0.000 ZA 1/10W |
| R3962                             | 401 016 3700 | CARBON      2.2K JA 1/4W   | J1837                     | 401 037 5004 | MT-GLAZE    0.000 ZA 1/10W |
|                                   |              |                            | J1838                     | 401 037 5004 | MT-GLAZE    0.000 ZA 1/10W |
| VR351                             | 613 001 9110 | SEMI VR 220KB              | J1847                     | 401 037 5004 | MT-GLAZE    0.000 ZA 1/10W |
| OR                                | 613 097 7953 | VR,SEMI 220KB              | J1850                     | 401 037 5004 | MT-GLAZE    0.000 ZA 1/10W |
| VR353                             | 613 001 9035 | SEMI VR 10KB               | J1851                     | 401 037 5004 | MT-GLAZE    0.000 ZA 1/10W |
| OR                                | 613 097 7908 | VR,SEMI 10KB               | J1860                     | 401 037 5004 | MT-GLAZE    0.000 ZA 1/10W |
| VR354                             | 613 001 9035 | SEMI VR 10KB               | J1891                     | 401 037 5004 | MT-GLAZE    0.000 ZA 1/10W |
| OR                                | 613 097 7908 | VR,SEMI 10KB               | J1899                     | 401 037 5004 | MT-GLAZE    0.000 ZA 1/10W |
| XF301                             | 613 129 4462 | DSC,CRYSTAL 12MHZ          | L1851                     | 613 014 0821 | COIL,INDUCTOR 5.6UHK       |
| <b>POWER SUPPLY CIRCUIT(PM-A)</b> |              |                            | OR                        | 613 014 4348 | HF CHOKE 5.6UH K           |
| CS401                             | 403 001 1609 | CERAMIC      0.01U K 16V   | L1852                     | 613 014 0944 | COIL,INDUCTOR 56UHK        |
| CS402                             | 403 139 1007 | ELECT      47U M 6.3V      | OR                        | 613 014 4461 | HF CHOKE 56UH K            |
| CS403                             | 403 134 8100 | ELECT      100U M 6.3V     | L1853                     | 613 014 0876 | COIL,INDUCTOR 15UHK        |
| D5401                             | 407 012 4406 | DIODE 1SS133-T-77          | OR                        | 613 014 4393 | HF CHOKE 15UH K            |
| D5402                             | 407 099 5204 | ZENER DIODE MTZ5.18-T-77   | L1854                     | 613 014 0876 | COIL,INDUCTOR 15UHK        |
| Q5401                             | 405 088 9103 | TR 2SA1703-S-AN            | OR                        | 613 014 4393 | HF CHOKE 15UH K            |
|                                   |              |                            |                           |              |                            |
|                                   |              |                            | Q1851                     | 405 035 6100 | TR 2SC2413K-T96-Q          |
|                                   |              |                            | OR                        | 405 015 9701 | TR 2SC2814-F4-TB           |
|                                   |              |                            | Q1852                     | 405 035 6100 | TR 2SC2413K-T96-Q          |



| LOCATION                                | PARTS NO.    | DESCRIPTION            | LOCATION                   | PARTS NO.    | DESCRIPTION              |  |
|---|--------------|------------------------|----------------------------|--------------|--------------------------|--|
| D6001                                   | 407 007 9904 | DIODE GMA01-BT         | R7003                      | 401 012 6903 | CARBON 10K JA 1/4W       |  |
| OR                                      | 407 012 4406 | DIODE ISS133-T-77      | R7004                      | 401 012 6903 | CARBON 10K JA 1/4W       |  |
| D6003                                   | 407 012 4406 | DIODE ISS133-T-77      | R7007                      | 401 012 6903 | CARBON 10K JA 1/4W       |  |
| OR                                      | 407 007 9904 | DIODE GMA01-BT         | R7018                      | 401 012 5609 | CARBON 1K JA 1/4W        |  |
| D6004                                   | 407 012 4406 | DIODE ISS133-T-77      | R7019                      | 401 012 5609 | CARBON 1K JA 1/4W        |  |
| OR                                      | 407 007 9904 | DIODE GMA01-BT         | RB701                      | 613 079 5885 | R-NETWORK,10KX5          |  |
| D6005                                   | 407 012 4406 | DIODE ISS133-T-77      | OR                         | 613 017 2860 | RESISTOR PACK            |  |
| OR                                      | 407 007 9904 | DIODE GMA01-BT         | RF CONVERTER CIRCUIT(CV-B) |              |                          |  |
| D6006                                   | 407 012 4406 | DIODE ISS133-T-77      | C6601                      | 403 134 8100 | ELECT 100U M 6.3V        |  |
| OR                                      | 407 007 9904 | DIODE GMA01-BT         | C6602                      | 403 134 8100 | ELECT 100U M 6.3V        |  |
| D6014                                   | 407 012 4406 | DIODE ISS133-T-77      | L6601                      | 613 014 8667 | HF CHOKE 15UH K          |  |
| OR                                      | 407 007 9904 | DIODE GMA01-BT         | OR                         | 613 015 6631 | COIL,INDUCTOR 15UHK      |  |
| D6015                                   | 407 012 4406 | DIODE ISS133-T-77      | L6602                      | 613 014 0739 | COIL,INDUCTOR 1.0UHM     |  |
| OR                                      | 407 007 9904 | DIODE GMA01-BT         | OR                         | 613 014 4256 | HF CHOKE 1.0UH K         |  |
| D6016                                   | 407 012 4406 | DIODE ISS133-T-77      | R6603                      | 401 016 3700 | CARBON 2.2K JA 1/4W      |  |
| OR                                      | 407 007 9904 | DIODE GMA01-BT         | R6604                      | 401 019 1802 | CARBON 3.9K JA 1/4W      |  |
| I6002                                   | 409 148 5005 | IC M6M80021P           | COMPL PCB,PN-1             |              |                          |  |
| L6007                                   | 613 015 6617 | COIL,INDUCTOR 10UHK    | COMPL.NO.                  | 613 124 7307 |                          |  |
| Q6002                                   | 405 004 4007 | TR 2SA608-E-SPA-AC     | C5001                      | 404 044 7900 | MT-POLYEST 0.22U M 250V  |  |
| OR                                      | 405 004 4601 | TR 2SA608-F-SPA-AC     | C5002 ▲                    | 404 044 7009 | MT-POLYEST 0.068U M 250V |  |
| OR                                      | 405 006 1707 | TR 2SA933S-TP-Q        | C5003                      | 404 052 4304 | ELECT 62U M 400V         |  |
| OR                                      | 405 006 1806 | TR 2SA933S-T93-R       | OR                         | 404 053 6505 | ELECT 56U M 400V         |  |
| Q6003                                   | 405 019 2005 | TR 2SC536-E-SPA-AC     | C5004                      | 403 183 3309 | MT-POLYEST 0.047U M 630V |  |
| OR                                      | 405 019 2807 | TR 2SC536-F-SPA-AC     | C5005                      | 403 137 5007 | CERAMIC 100P K 1K        |  |
| OR                                      | 405 093 0607 | TR KSC2785-Y           | OR                         | 403 137 5007 | CERAMIC 100P K 1K        |  |
| OR                                      | 405 011 8401 | TR 2SC1740S-DCTP-Q     | C5007                      | 403 222 1808 | ELECT 1U M 400V          |  |
| OR                                      | 405 011 8500 | TR 2SC1740S-DCTP-R     | C5008                      | 403 094 0800 | OS-SOLID 2.2U M 16V      |  |
| Q6004                                   | 405 019 2005 | TR 2SC536-E-SPA-AC     | C5009                      | 403 061 7702 | POLYESTER 4700P J 50V    |  |
| OR                                      | 405 019 2807 | TR 2SC536-F-SPA-AC     | C5010                      | 403 018 6208 | CERAMIC 220P J 50V       |  |
| OR                                      | 405 093 0607 | TR KSC2785-Y           | OR                         | 403 214 9706 | CERAMIC 220P J 50V       |  |
| OR                                      | 405 011 8401 | TR 2SC1740S-DCTP-Q     | C5011                      | 403 001 5003 | CERAMIC 2200P K 16V      |  |
| OR                                      | 405 011 8500 | TR 2SC1740S-DCTP-R     | C5012                      | 403 058 9504 | POLYESTER 0.018U J 50V   |  |
| Q6007                                   | 405 003 7603 | TR 2SA1345-AC          | C5013                      | 403 058 9504 | POLYESTER 0.018U J 50V   |  |
| OR                                      | 405 000 2205 | TR DTA144ES-DCTP       | C5020 ▲                    | 404 034 7507 | CERAMIC 2200P M 400V     |  |
| Q6008                                   | 405 018 2501 | TR 2SC3399-AC          | OR ▲                       | 404 032 6304 | CERAMIC 2200P M 400V     |  |
| OR                                      | 405 000 6104 | TR DTC144ES-DCTP       | C5021 ▲                    | 404 034 7507 | CERAMIC 2200P M 400V     |  |
| R6001                                   | 401 018 2701 | CARBON 330 JA 1/4W     | OR ▲                       | 404 032 6304 | CERAMIC 2200P M 400V     |  |
| R6002                                   | 401 019 0904 | CARBON 390 JA 1/4W     | C5022                      | 404 034 7507 | CERAMIC 2200P M 400V     |  |
| R6006                                   | 401 019 3905 | CARBON 390K JA 1/4W    | OR                         | 404 032 6304 | CERAMIC 2200P M 400V     |  |
| R6007                                   | 401 021 4907 | CARBON 560K JA 1/4W    | C5023                      | 404 034 7507 | CERAMIC 2200P M 400V     |  |
| R6008                                   | 401 012 5609 | CARBON 1K JA 1/4W      | OR                         | 404 032 6304 | CERAMIC 2200P M 400V     |  |
| R6014                                   | 401 015 9406 | CARBON 2K JA 1/4W      | C5101                      | 403 205 2105 | ELECT 1200U M 16V        |  |
| R6015                                   | 401 012 6903 | CARBON 10K JA 1/4W     | C5102                      | 403 160 7207 | ELECT 470U M 16V         |  |
| R6016                                   | 401 012 6903 | CARBON 10K JA 1/4W     | C5104                      | 403 205 2105 | ELECT 1200U M 16V        |  |
| R6017                                   | 401 023 7807 | CARBON 91K JA 1/4W     | C5105                      | 403 147 9507 | ELECT 470U M 6.3V        |  |
| R6018                                   | 401 023 7807 | CARBON 91K JA 1/4W     | OR                         | 403 160 2905 | ELECT 470U M 6.3V        |  |
| R6019                                   | 401 016 3700 | CARBON 2.2K JA 1/4W    | C5106                      | 403 121 6607 | ELECT 47U M 50V          |  |
| R6025                                   | 401 012 6903 | CARBON 10K JA 1/4W     | OR                         | 403 154 8302 | ELECT 47U M 50V          |  |
| R6026                                   | 401 012 8006 | CARBON 100K JA 1/4W    | C5107                      | 403 121 6607 | ELECT 47U M 50V          |  |
| R6027                                   | 401 012 6903 | CARBON 10K JA 1/4W     | OR                         | 403 154 8302 | ELECT 47U M 50V          |  |
| TIMER CIRCUIT(TM-B)                     |              |                        | C5108                      | 403 160 2400 | ELECT 330U M 6.3V        |  |
| 613 126 7336 FLEXIBLE FLAT CABLES,CN701 |              |                        | OR                         | 403 155 5508 | ELECT 330U M 6.3V        |  |
| C7001                                   | 403 155 2804 | DL-ELECT 0.047F Z 5.5V | CS109                      | 403 004 0500 | CERAMIC 0.047U K 25V     |  |
| OR                                      | 403 212 9104 | DL-ELECT 0.1F Z 5.5V   | CS110                      | 403 168 6103 | MT-POLYEST 0.1U J 50V    |  |
| D7001                                   | 407 120 5807 | DIODE AK04-V2          | CS111                      | 403 125 5606 | ELECT 100U M 16V         |  |
| R7001                                   | 401 012 6903 | CARBON 10K JA 1/4W     | CS114                      | 403 001 1906 | CERAMIC 0.01U M 16V      |  |
| R7002                                   | 401 012 6903 | CARBON 10K JA 1/4W     | CS115                      | 403 135 4002 | ELECT 47U M 6.3V         |  |
| CN501                                   | 613 120 7912 | CONNECTOR,INLET        |                            |              |                          |  |
| D5001                                   | 407 010 9403 | DIODE S1WBA60          |                            |              |                          |  |
| OR                                      | 407 134 8900 | DIODE OBC106           |                            |              |                          |  |

| LOCATION | PARTS NO.    | DESCRIPTION               | LOCATION  | PARTS NO.    | DESCRIPTION             |
|----------|--------------|---------------------------|-----------|--------------|-------------------------|
| D5003    | 407 091 6704 | DIODE AP01C-V0            | R5015     | 401 057 5107 | OXIDE-MT 0.47 JA 1W     |
| D5004    | 407 078 2705 | DIODE 1SS244-T-77         | R5101 A   | 402 004 0909 | FUSIBLE RES 2.7 JA 1/4W |
| D5005    | 407 078 2705 | DIODE 1SS244-T-77         | R5102 A   | 402 004 1302 | FUSIBLE RES 220 JA 1/4W |
| D5006    | 407 050 9302 | ZENER DIODE GZB18C        | R5103     | 401 016 3700 | CARBON 2.2K JA 1/4W     |
| D5007    | 407 078 2705 | DIODE 1SS244-T-77         | R5104     | 401 015 2605 | CARBON 1.8K JA 1/4W     |
| D5008    | 407 078 2705 | DIODE 1SS244-T-77         | R5105     | 401 107 6009 | MT-FILM 1.6K FD 1/4W    |
| D5009    | 407 006 0902 | DIODE ERB12-02U14ATP      | R5106     | 401 107 1707 | MT-FILM 2.2K FD 1/4W    |
| OR       | 407 148 4103 | DIODE ERB12-02UA          | R5107     | 401 012 4404 | CARBON 100 JA 1/4W      |
| D5010    | 407 136 8809 | DIODE ERA15-04A-V5        | R5108     | 401 014 5102 | CARBON 15K JA 1/4W      |
| OR       | 407 004 9808 | DIODE DSK10E-BT           | R5109     | 401 021 8905 | CARBON 6.2K JA 1/4W     |
| D5011    | 407 097 0300 | PHOTO COUPLE PC113A       | R5110     | 401 016 3700 | CARBON 2.2K JA 1/4W     |
| D5101    | 407 100 9108 | DIODE DLE30C-KC9          | R5111     | 401 012 5609 | CARBON 1K JA 1/4W       |
| D5104    | 407 100 6909 | DIODE AG01-V2             | R5112     | 401 016 3700 | CARBON 2.2K JA 1/4W     |
| OR       | 407 091 6902 | DIODE ERA38-04-V5         | R5113     | 401 016 3700 | CARBON 2.2K JA 1/4W     |
| DS105    | 407 078 2705 | DIODE 1SS244-T-77         | R5114     | 401 011 5709 | CARBON 820 JA 1/2W      |
| DS106    | 407 078 2705 | DIODE 1SS244-T-77         | R5115     | 401 011 5709 | CARBON 820 JA 1/2W      |
| DS107    | 407 100 6909 | DIODE AG01-V2             | R5117     | 401 013 6308 | CARBON 12K JA 1/4W      |
| OR       | 407 091 6902 | DIODE ERA38-04-V5         |           |              |                         |
| DS108    | 407 004 9709 | DIODE DSK10C-BT           | T5001 A   | 613 126 5172 | TRANS,SW                |
| OR       | 407 005 8701 | DIODE ERA15-02-V5         | OR A      | 613 128 3824 | TRANS,SW                |
| DS109    | 407 099 5105 | ZENER DIODE MTZJ4.7B-T-77 |           |              |                         |
| DS110    | 407 012 4406 | DIODE 1SS133-T-77         | IF PACK   |              |                         |
| DS111    | 407 099 5204 | ZENER DIODE MTZJ5.1B-T-77 | COMPL.NO. | 613 122 1062 | BB-9070                 |
| DS113    | 407 051 4801 | ZENER DIODE GZS2.0X-BT    |           |              |                         |
| OR       | 407 125 9008 | ZENER DIODE MTZJ2.0A-T-77 | C6101     | 403 028 4409 | CERAMIC 56P J 50V       |
| DS114    | 407 099 6508 | ZENER DIODE MTZJ12A-T-77  | C6102     | 403 012 7003 | CERAMIC 15P J 50V       |
| DS115    | 407 099 6508 | ZENER DIODE MTZJ12A-T-77  | C6103     | 403 026 3008 | CERAMIC 47P J 50V       |
| DS120    | 407 142 1108 | DIODE RK44 LF-M1          | C6104     | 403 069 9500 | CERAMIC 0.01U Z 50V     |
|          |              |                           | C6105     | 403 069 9500 | CERAMIC 0.01U Z 50V     |
| FS001 A  | 423 006 1305 | FUSE 250V 2A              | C6106     | 403 069 9500 | CERAMIC 0.01U Z 50V     |
|          |              |                           | C6107     | 403 069 9500 | CERAMIC 0.01U Z 50V     |
| ICS11    | 409 067 7203 | IC L5431-AA               | C6109     | 403 042 3006 | ELECT 100U M 16V        |
| ICS12    | 409 234 7005 | IC SI-3120CA              | C6110     | 403 069 9500 | CERAMIC 0.01U Z 50V     |
|          |              |                           | C6111     | 403 068 0409 | CERAMIC 0.1U Z 25V      |
| LS002 A  | 613 013 1362 | LF CHOKE                  | C6112     | 403 069 1702 | CERAMIC 1000P K 50V     |
| LS101    | 613 017 0354 | CORE                      | C6113     | 403 050 0509 | ELECT 2.2U M 50V        |
| LS102    | 613 110 4198 | COIL,INDUCTOR 10UH K      | C6114     | 403 069 9500 | CERAMIC 0.01U Z 50V     |
|          |              |                           | C6115     | 403 109 9200 | CERAMIC 27P J 50V       |
| PRS11 A  | 613 000 2327 | CIRCUIT PROTECTOR         | C6116     | 403 069 9500 | CERAMIC 0.01U Z 50V     |
|          |              |                           | C6117     | 403 048 4809 | ELECT 0.33U M 50V       |
| Q5001    | 405 103 7909 | TR 2SK1460-YA             | C6118     | 403 069 9500 | CERAMIC 0.01U Z 50V     |
| Q5002    | 405 017 9600 | TR 2SC3330-T-AC           | C6119     | 403 069 9500 | CERAMIC 0.01U Z 50V     |
| Q5003    | 405 105 0700 | TR 2SB1050-R              | C6120     | 403 068 0409 | CERAMIC 0.1U Z 25V      |
| Q5101    | 405 088 9103 | TR 2SA1703-S-AN           | C6123     | 403 069 9500 | CERAMIC 0.01U Z 50V     |
| OR       | 405 108 6907 | TR 2SB1322A-R(TA)         | C6124     | 403 042 3006 | ELECT 100U M 16V        |
| OR       | 405 108 7003 | TR 2SB1322A-S(TA)         | C6125     | 403 068 0409 | CERAMIC 0.1U Z 25V      |
| Q5102    | 405 107 4102 | TR 2SD1994-R (TA)         | C6130     | 403 069 9500 | CERAMIC 0.01U Z 50V     |
| OR       | 405 107 4201 | TR 2SD1994-S (TA)         | C6131     | 403 069 9500 | CERAMIC 0.01U Z 50V     |
| OR       | 405 089 2103 | TR 2SC4483-S-AN           | C6132     | 403 010 8606 | CERAMIC 12P J 50V       |
| Q5103    | 405 035 6902 | TR 2SC3851-0              | C6133     | 403 030 7405 | CERAMIC 68P J 50V       |
| OR       | 405 035 7008 | TR 2SC3851-Y              | C6134     | 403 068 0409 | CERAMIC 0.1U Z 25V      |
| Q5104    | 405 019 1909 | TR 2SC536-E-NP-AA         | C6136     | 403 014 3409 | CERAMIC 18P J 50V       |
| OR       | 405 019 2708 | TR 2SC536-F-NP-AA         | C6137     | 403 188 1805 | CERAMIC 93P H 50V       |
|          |              |                           | C6138     | 403 048 6902 | ELECT 0.47U M 50V       |
| R5001    | 401 001 8000 | SOLID 2.7M MA 1/2W        | C6139     | 403 022 8403 | CERAMIC 33P J 50V       |
| OR       | 401 001 7904 | SOLID 2.7M KA 1/2W        | C6140     | 403 049 0800 | ELECT 1U M 50V          |
| R5002    | 401 080 0605 | WIRE WOUND 2.2 KA 2W      | C6141     | 403 010 8705 | CERAMIC 12P J 50V       |
| R5003    | 401 069 4402 | OXIDE-MT 68K JA 2W        | C6142     | 403 073 1200 | CERAMIC 0.033U K 50V    |
| R5004    | 401 069 4402 | OXIDE-MT 68K JA 2W        | C6144     | 403 047 0604 | ELECT 4.7U M 25V        |
| R5005    | 401 090 4709 | OXIDE-MT 220K JA 1W       | C6152     | 403 012 6808 | CERAMIC 15P J 50V       |
| R5006    | 401 090 1104 | CARBON 1M JA 1/2W         | C6155     | 403 069 9500 | CERAMIC 0.01U Z 50V     |
| R5007    | 401 009 5001 | CARBON 33 JA 1/2W         |           |              |                         |
| R5008    | 401 007 0305 | CARBON 100 JA 1/2W        | D6101     | 407 053 8906 | ZENER DIODE MTZ9.1C     |
| R5009    | 401 020 2805 | CARBON 47K JA 1/4W        | D6102     | 407 103 5305 | DIODE 1SS318-TT51       |
| R5010    | 401 012 5609 | CARBON 1K JA 1/4W         |           |              |                         |
| R5011    | 401 011 8809 | CARBON 1 JA 1/4W          | IC611     | 409 036 0105 | IC M51366SP             |
| R5012    | 401 016 1409 | CARBON 22 JA 1/4W         | J6107     | 401 035 4108 | MT-GLAZE 0.000 ZA 1/8W  |
| R5013    | 401 012 6903 | CARBON 10K JA 1/4W        | J6108     | 401 035 4108 | MT-GLAZE 0.000 ZA 1/8W  |
| R5014    | 401 017 2702 | CARBON 27K JA 1/4W        |           |              |                         |

| LOCATION | PARTS NO.    | DESCRIPTION             | LOCATION               | PARTS NO.    | DESCRIPTION            |
|----------|--------------|-------------------------|------------------------|--------------|------------------------|
| J6109    | 401 037 5004 | MT-GLAZE 0.000 ZA 1/10W | R6157                  | 401 038 0701 | MT-GLAZE 2.2K JA 1/10W |
| J6112    | 401 037 5004 | MT-GLAZE 0.000 ZA 1/10W | R6159                  | 401 037 5608 | MT-GLAZE 10K JA 1/10W  |
| J6116    | 401 037 5004 | MT-GLAZE 0.000 ZA 1/10W | R6160                  | 401 037 5400 | MT-GLAZE 1K JA 1/10W   |
| J6117    | 401 037 5004 | MT-GLAZE 0.000 ZA 1/10W | R6166                  | 401 038 0503 | MT-GLAZE 22 JA 1/10W   |
| J6124    | 401 035 4108 | MT-GLAZE 0.000 ZA 1/8W  | R6167                  | 401 038 0602 | MT-GLAZE 220 JA 1/10W  |
| J6125    | 401 037 5004 | MT-GLAZE 0.000 ZA 1/10W | VR611                  | 613 001 8977 | SEMI VR 1KB            |
| L6101    | 613 119 1600 | TRANS,IF                | X6101                  | 421 002 6607 | SAW F TSF1336L         |
| L6103    | 613 014 0746 | COIL,INDUCTOR 1.2UHM    | X6102                  | 422 000 8907 | SAW F SAF32.9MC70Z     |
| L6104    | 613 014 0807 | COIL,INDUCTOR 3.9UHK    | X6104                  | 613 084 1667 | FILTER                 |
| L6105    | 613 014 0913 | COIL,INDUCTOR 33UHK     | X6105                  | 613 095 3063 | FILTER.6.55MHZ         |
| L6106    | 613 095 2462 | TRANS,IF                | X6108                  | 613 113 9220 | FILTER                 |
| L6107    | 613 103 3979 | TRANS,IF                | X6111                  | 613 095 3070 | DISCR,CERAMIC          |
| L6108    | 613 014 0845 | COIL,INDUCTOR 8.2UHK    | COMPL PCB,TN-5         |              |                        |
| L6109    | 613 088 8396 | TRANS,IF                | COMPL.NO. 613 123 0866 |              |                        |
| L6110    | 613 098 6047 | COIL,CHOKE 1.5UH        | C6701                  | 403 069 5601 | CERAMIC 0.01U K 50V    |
| L6111    | 613 014 0692 | COIL,INDUCTOR 0.47UHM   | C6702                  | 403 038 2006 | ELECT 100U M 6.3V      |
| Q6101    | 405 090 3304 | TR 2SC3838K-ADP-T96     | C6703                  | 403 069 5601 | CERAMIC 0.01U K 50V    |
| Q6102    | 405 004 3901 | TR 2SA608-E-NP          | C6704                  | 403 043 9601 | ELECT 47U M 16V        |
| Q6103    | 405 015 8407 | TR 2SC2812-L5-TB        | C6705                  | 403 041 9405 | ELECT 10U M 16V        |
| Q6105    | 405 015 8407 | TR 2SC2812-L5-TB        | C6706                  | 403 069 5601 | CERAMIC 0.01U K 50V    |
| Q6106    | 405 015 8407 | TR 2SC2812-L5-TB        | C6707                  | 403 158 5604 | NP-ELECT 0.47U M 50V   |
| R6101    | 402 023 4506 | FUSIBLE RES 27 JA 1/2W  | C6709                  | 403 017 0900 | CERAMIC 20P J 50V      |
| R6103    | 401 038 7700 | MT-GLAZE 5.6K JA 1/10W  | C6710                  | 403 018 0503 | CERAMIC 22P J 50V      |
| R6104    | 401 037 5400 | MT-GLAZE 1K JA 1/10W    | C6711                  | 403 069 5601 | CERAMIC 0.01U K 50V    |
| R6105    | 401 038 0503 | MT-GLAZE 22 JA 1/10W    | C6712                  | 403 069 5601 | CERAMIC 0.01U K 50V    |
| R6106    | 401 035 4603 | MT-GLAZE 100 JA 1/8W    | C6713                  | 403 069 5601 | CERAMIC 0.01U K 50V    |
| R6107    | 401 038 0602 | MT-GLAZE 220 JA 1/10W   | C6714                  | 403 069 5601 | CERAMIC 0.01U K 50V    |
| R6109    | 401 038 3603 | MT-GLAZE 3.3K JA 1/10W  | C6715                  | 403 038 2006 | ELECT 100U M 6.3V      |
| R6110    | 401 038 6604 | MT-GLAZE 470K JA 1/10W  | C6716                  | 403 069 5601 | CERAMIC 0.01U K 50V    |
| R6111    | 401 037 9309 | MT-GLAZE 18K JA 1/10W   | C6717                  | 403 048 6902 | ELECT 0.47U M 50V      |
| R6112    | 401 038 6604 | MT-GLAZE 470K JA 1/10W  | C6718                  | 403 068 0409 | CERAMIC 0.1U Z 25V     |
| R6113    | 401 038 7809 | MT-GLAZE 56K JA 1/10W   | C6719                  | 403 068 0409 | CERAMIC 0.1U Z 25V     |
| R6114    | 401 038 9209 | MT-GLAZE 6.8K JA 1/10W  | C6720                  | 403 048 6902 | ELECT 0.47U M 50V      |
| R6115    | 401 038 5102 | MT-GLAZE 3.9K JA 1/10W  | C6721                  | 403 069 5601 | CERAMIC 0.01U K 50V    |
| R6116    | 401 038 7700 | MT-GLAZE 5.6K JA 1/10W  | C6722                  | 403 028 4102 | CERAMIC 56P J 50V      |
| R6117    | 401 038 0701 | MT-GLAZE 2.2K JA 1/10W  | C6726                  | 403 018 0503 | CERAMIC 22P J 50V      |
| R6118    | 401 038 0701 | MT-GLAZE 2.2K JA 1/10W  | C6727                  | 403 018 0503 | CERAMIC 22P J 50V      |
| R6119    | 401 038 2101 | MT-GLAZE 2.7K JA 1/10W  | C6728                  | 403 069 5601 | CERAMIC 0.01U K 50V    |
| R6120    | 401 037 7909 | MT-GLAZE 1.5K JA 1/10W  | C6729                  | 403 038 9708 | ELECT 330U M 6.3V      |
| R6121    | 401 039 0601 | MT-GLAZE 820K JA 1/10W  | C6730                  | 403 062 8302 | POLYESTER 680P J 50V   |
| R6122    | 401 039 0403 | MT-GLAZE 8.2K JA 1/10W  | C6731                  | 403 039 2609 | ELECT 47U M 6.3V       |
| R6123    | 401 038 3504 | MT-GLAZE 330 JA 1/10W   | C6732                  | 403 087 3801 | STYRENE 1200P J 50V    |
| R6124    | 401 039 0403 | MT-GLAZE 8.2K JA 1/10W  | C6733                  | 403 038 6707 | ELECT 220U M 6.3V      |
| R6125    | 401 038 3504 | MT-GLAZE 330 JA 1/10W   | C6734                  | 403 087 3801 | STYRENE 1200P J 50V    |
| R6126    | 401 037 5400 | MT-GLAZE 1K JA 1/10W    | C6735                  | 403 038 2006 | ELECT 100U M 6.3V      |
| R6127    | 401 036 8105 | MT-GLAZE 470 JA 1/8W    | C6736                  | 403 039 2609 | ELECT 47U M 6.3V       |
| R6128    | 401 037 1709 | MT-GLAZE 68 JA 1/8W     | C6737                  | 403 062 8302 | POLYESTER 680P J 50V   |
| R6129    | 401 037 5202 | MT-GLAZE 100 JA 1/10W   | C6738                  | 403 041 9405 | ELECT 10U M 16V        |
| R6130    | 401 038 3702 | MT-GLAZE 33K JA 1/10W   | C6739                  | 403 041 9405 | ELECT 10U M 16V        |
| R6136    | 401 038 6307 | MT-GLAZE 470 JA 1/10W   | C6740                  | 403 041 9405 | ELECT 10U M 16V        |
| R6137    | 401 038 7205 | MT-GLAZE 5.1K JA 1/10W  | C6741                  | 403 041 9405 | ELECT 10U M 16V        |
| R6138    | 401 037 5202 | MT-GLAZE 100 JA 1/10W   | C6742                  | 403 041 9405 | ELECT 10U M 16V        |
| R6139    | 401 037 5400 | MT-GLAZE 1K JA 1/10W    | C6743                  | 403 041 9405 | ELECT 10U M 16V        |
| R6140    | 401 037 5608 | MT-GLAZE 10K JA 1/10W   | C6744                  | 403 043 9601 | ELECT 47U M 16V        |
| R6141    | 401 037 5608 | MT-GLAZE 10K JA 1/10W   | C6745                  | 403 046 2104 | ELECT 3.3U M 25V       |
| R6142    | 401 037 5400 | MT-GLAZE 1K JA 1/10W    | C6746                  | 403 046 2104 | ELECT 3.3U M 25V       |
| R6144    | 401 037 5202 | MT-GLAZE 100 JA 1/10W   | C6747                  | 403 046 2104 | ELECT 3.3U M 25V       |
| R6145    | 401 039 0304 | MT-GLAZE 820 JA 1/10W   | C6748                  | 403 046 2104 | ELECT 3.3U M 25V       |
| R6146    | 401 038 6208 | MT-GLAZE 47 JA 1/10W    | C6750                  | 403 028 1606 | CERAMIC 56P J 50V      |
| R6147    | 401 038 6505 | MT-GLAZE 47K JA 1/10W   | C6751                  | 403 022 8205 | CERAMIC 33P J 50V      |
| R6148    | 401 037 9200 | MT-GLAZE 1.8K JA 1/10W  | D6701                  | 407 003 3609 | DIODE DAN202K-T-96     |
| R6149    | 401 038 3504 | MT-GLAZE 330 JA 1/10W   | OR                     | 407 004 0706 | DIODE DCB015-TB        |
| R6152    | 401 037 5400 | MT-GLAZE 1K JA 1/10W    | D6702                  | 407 003 3609 | DIODE DAN202K-T-96     |
| R6153    | 401 038 6307 | MT-GLAZE 470 JA 1/10W   | OR                     | 407 004 0706 | DIODE DCB015-TB        |
| R6155    | 401 038 7601 | MT-GLAZE 560 JA 1/10W   |                        |              |                        |
| R6156    | 401 038 3603 | MT-GLAZE 3.3K JA 1/10W  |                        |              |                        |

| LOCATION | PARTS NO.    | DESCRIPTION             | LOCATION | PARTS NO.    | DESCRIPTION              |
|----------|--------------|-------------------------|----------|--------------|--------------------------|
| D6703    | 407 003 4507 | DIODE DAP202K-T-96      | R6724    | 401 037 5608 | MT-GLAZE 10K JA 1/10W    |
| D6704    | 407 003 3609 | DIODE DAN202K-T-96      | R6725    | 401 038 6406 | MT-GLAZE 4.7K JA 1/10W   |
| OR       | 407 004 0706 | DIODE DCB015-TB         | R6726    | 401 038 6406 | MT-GLAZE 4.7K JA 1/10W   |
| D6705    | 407 003 3609 | DIODE DAN202K-T-96      | R6727    | 401 037 5400 | MT-GLAZE 1K JA 1/10W     |
| OR       | 407 004 0706 | DIODE DCB015-TB         | R6728    | 401 038 2200 | MT-GLAZE 27K JA 1/10W    |
| D6706    | 407 003 3609 | DIODE DAN202K-T-96      | R6729    | 401 038 7700 | MT-GLAZE 5.6K JA 1/10W   |
| OR       | 407 004 0706 | DIODE DCB015-TB         | R6730    | 401 037 5400 | MT-GLAZE 1K JA 1/10W     |
|          |              |                         | R6731    | 401 037 5400 | MT-GLAZE 1K JA 1/10W     |
| IC671    | 409 248 5202 | IC TB1210F              | R6732    | 401 038 2200 | MT-GLAZE 27K JA 1/10W    |
| IC672    | 409 163 2102 | IC TD6710AN             | R6733    | 401 038 7700 | MT-GLAZE 5.6K JA 1/10W   |
| IC673    | 409 051 3006 | IC TC4053BP             | R6734    | 401 037 5400 | MT-GLAZE 1K JA 1/10W     |
| IC674    | 409 018 5203 | IC LA6462D              | R6736    | 401 038 6505 | MT-GLAZE 47K JA 1/10W    |
| IC675    | 409 018 5203 | IC LA6462D              | R6737    | 401 037 5608 | MT-GLAZE 10K JA 1/10W    |
|          |              |                         | R6738    | 401 037 5608 | MT-GLAZE 10K JA 1/10W    |
| J6702    | 401 037 5004 | MT-GLAZE 0.000 ZA 1/10W | R6740    | 401 038 6109 | MT-GLAZE 430K JA 1/10W   |
| J6703    | 401 037 5004 | MT-GLAZE 0.000 ZA 1/10W | X6701    | 613 123 4154 | OSC,CRYSTAL 11.648MHZ    |
| J6704    | 401 037 5004 | MT-GLAZE 0.000 ZA 1/10W | X6702    | 613 084 3227 | OSC CRYSTAL,6.552MHZ     |
| J6705    | 401 037 5004 | MT-GLAZE 0.000 ZA 1/10W | X6703    | 613 084 3258 | RESONATOR,CERAMIC 16.93M |
| J6706    | 401 037 5004 | MT-GLAZE 0.000 ZA 1/10W |          |              |                          |
| J6707    | 401 037 5004 | MT-GLAZE 0.000 ZA 1/10W | XF671    | 613 084 3173 | FILTER,6.552MHZ          |
| J6708    | 401 037 5004 | MT-GLAZE 0.000 ZA 1/10W | XF672    | 613 123 1481 | FILTER,14KHZ             |
| J6709    | 401 037 5004 | MT-GLAZE 0.000 ZA 1/10W |          |              |                          |
| J6710    | 401 037 5004 | MT-GLAZE 0.000 ZA 1/10W |          |              |                          |
| J6711    | 401 037 5004 | MT-GLAZE 0.000 ZA 1/10W |          |              |                          |
| J6712    | 401 037 5004 | MT-GLAZE 0.000 ZA 1/10W |          |              |                          |
| J6713    | 401 037 5004 | MT-GLAZE 0.000 ZA 1/10W |          |              |                          |
| J6714    | 401 037 5004 | MT-GLAZE 0.000 ZA 1/10W | B6901    | 405 018 1900 | TR 2SC3395-TB            |
| J6715    | 401 037 5004 | MT-GLAZE 0.000 ZA 1/10W | OR       | 405 029 3504 | TR DTC144EK-T96          |
| L6701    | 613 014 0777 | COIL,INDUCTOR 2.2UHM    | C6901    | 403 068 0409 | CERAMIC 0.1U Z 25V       |
| L6702    | 613 014 0777 | COIL,INDUCTOR 2.2UHM    | OR       | 403 116 2508 | CERAMIC 0.1U Z 25V       |
| L6703    | 613 014 0777 | COIL,INDUCTOR 2.2UHM    | C6902    | 403 189 2405 | ELECT 10U M 16V          |
| L6704    | 613 014 0777 | COIL,INDUCTOR 2.2UHM    | C6903    | 403 072 3403 | CERAMIC 0.022U Z 50V     |
|          |              |                         | C6904    | 403 193 8400 | ELECT 0.22U M 50V        |
| Q6701    | 405 060 7509 | TR FMG2-T98             | C6921    | 403 068 0409 | CERAMIC 0.1U Z 25V       |
| Q6702    | 405 060 7202 | TR FMA2-T148            | OR       | 403 116 2508 | CERAMIC 0.1U Z 25V       |
| Q6703    | 405 060 7509 | TR FMG2-T98             |          |              |                          |
| Q6704    | 405 015 9701 | TR 2SC2814-F4-TB        | D6901    | 407 004 0706 | DIODE DCB015-TB          |
| OR       | 405 078 0400 | TR 2SC2413K-T96-P       | OR       | 407 003 3609 | DIODE DAN202K-T-96       |
| Q6705    | 405 058 5401 | TR FMC2-T98             | D6902    | 407 003 5108 | DIODE DA204K-T96         |
| Q6706    | 405 015 8308 | TR 2SC2812-L4-TB        |          |              |                          |
| OR       | 405 015 8407 | TR 2SC2812-L5-TB        | J6901    | 401 037 5004 | MT-GLAZE 0.000 ZA 1/10W  |
| OR       | 405 014 4400 | TR 2SC2412K-T96-Q       |          |              |                          |
| OR       | 405 014 4509 | TR 2SC2412K-T96-R       | Q6901    | 405 015 8308 | TR 2SC2812-L4-TB         |
| Q6707    | 405 060 7509 | TR FMG2-T98             | OR       | 405 015 8407 | TR 2SC2812-L5-TB         |
|          |              |                         | OR       | 405 014 4400 | TR 2SC2412K-T96-Q        |
| R6701    | 401 037 5608 | MT-GLAZE 10K JA 1/10W   | OR       | 405 014 4509 | TR 2SC2412K-T96-R        |
| R6702    | 401 037 5608 | MT-GLAZE 10K JA 1/10W   | OR       | 405 015 8704 | TR 2SC2812-L6-TB         |
| R6703    | 401 038 5102 | MT-GLAZE 3.9K JA 1/10W  | Q6902    | 405 030 7201 | TR 2SA1338-4-TB          |
| R6704    | 401 037 5400 | MT-GLAZE 1K JA 1/10W    | OR       | 405 030 7300 | TR 2SA1338-5-TB          |
| R6705    | 401 037 5608 | MT-GLAZE 10K JA 1/10W   | Q6903    | 405 015 8308 | TR 2SC2812-L4-TB         |
| R6706    | 401 038 0701 | MT-GLAZE 2.2K JA 1/10W  | OR       | 405 015 8407 | TR 2SC2812-L5-TB         |
| R6707    | 401 037 5202 | MT-GLAZE 100 JA 1/10W   | OR       | 405 014 4400 | TR 2SC2412K-T96-Q        |
| R6708    | 401 038 2002 | MT-GLAZE 270 JA 1/10W   | OR       | 405 014 4509 | TR 2SC2412K-T96-R        |
| R6709    | 401 039 0205 | MT-GLAZE 82 JA 1/10W    | OR       | 405 015 8704 | TR 2SC2812-L6-TB         |
| R6710    | 401 038 3702 | MT-GLAZE 33K JA 1/10W   |          |              |                          |
| R6711    | 401 038 9001 | MT-GLAZE 680 JA 1/10W   | R6901    | 401 037 5400 | MT-GLAZE 1K JA 1/10W     |
| R6712    | 401 038 0602 | MT-GLAZE 220 JA 1/10W   | R6902    | 401 038 3504 | MT-GLAZE 330 JA 1/10W    |
| R6713    | 401 038 9001 | MT-GLAZE 680 JA 1/10W   | R6903    | 401 038 8509 | MT-GLAZE 620 JA 1/10W    |
| R6714    | 401 037 5608 | MT-GLAZE 10K JA 1/10W   | R6904    | 401 037 5608 | MT-GLAZE 10K JA 1/10W    |
| R6715    | 401 038 0909 | MT-GLAZE 220K JA 1/10W  | R6905    | 401 038 3801 | MT-GLAZE 330K JA 1/10W   |
| R6716    | 401 038 5300 | MT-GLAZE 39K JA 1/10W   | R6906    | 401 037 5608 | MT-GLAZE 10K JA 1/10W    |
| R6717    | 401 038 0107 | MT-GLAZE 2K JA 1/10W    | R6907    | 401 038 3603 | MT-GLAZE 3.3K JA 1/10W   |
| R6718    | 401 038 9308 | MT-GLAZE 68K JA 1/10W   | R6908    | 401 039 0205 | MT-GLAZE 82 JA 1/10W     |
| R6719    | 401 038 2101 | MT-GLAZE 2.7K JA 1/10W  | R6909    | 401 037 5400 | MT-GLAZE 1K JA 1/10W     |
| R6720    | 401 038 6505 | MT-GLAZE 47K JA 1/10W   | R6910    | 401 038 7106 | MT-GLAZE 510 JA 1/10W    |
| R6721    | 401 038 0800 | MT-GLAZE 22K JA 1/10W   | R6911    | 401 038 7700 | MT-GLAZE 5.6K JA 1/10W   |
| R6722    | 401 038 0800 | MT-GLAZE 22K JA 1/10W   | R6912    | 401 038 5102 | MT-GLAZE 3.9K JA 1/10W   |
| R6723    | 401 037 5608 | MT-GLAZE 10K JA 1/10W   |          |              |                          |

| LOCATION   | PARTS NO.  | DESCRIPTION   | LOCATION   | PARTS NO.  | DESCRIPTION   |
|--|--|---|--|--|---|
| T6901<br>OR  | 613 109 0958<br>613 109 0965   | TRANS,IF<br>TRANS,IF  | S7101<br>OR  | 613 092 0768<br>613 006 3649   | SW,PUSH,REW<br>PUSH SWITCH,PLAY   |
| COMPL PCB,TM-1<br>COMPL.NO.  | 613 127 3962   |   | OR   | 613 079 4130<br>613 092 1734<br>613 092 0751   | SW,PUSH,PLAY<br>SW,PUSH,PLAY<br>SW,PUSH,PLAY  |
|  | 613 108 4230   | HOLDER  | S7103<br>OR  | 613 077 4354<br>613 079 4154   | PUSH SWITCH,REC<br>SW,PUSH,REC  |
| A7101  | 613 113 2672   | FLUORESCENT TUBE  | OR   | 613 092 0744   | SW,PUSH,REC   |
| C7101<br>C7102<br>C7103<br>C7104<br>C7105<br>C7106<br>C7107<br>C7108<br>C7111<br>C7113                   | 403 021 7308<br>403 014 2501<br>403 017 0108<br>403 001 1906<br>403 139 1601<br>403 001 1906<br>403 001 1906<br>403 139 1502<br>403 121 9509<br>403 139 1502                                 | CERAMIC 3.3P K 50V<br>CERAMIC 18P J 50V<br>CERAMIC 20P J 50V<br>CERAMIC 0.01U M 16V<br>ELECT 22U M 16V<br>CERAMIC 0.01U M 16V<br>CERAMIC 0.01U M 16V<br>ELECT 10U M 16V<br>CERAMIC 0.1U Z 50V<br>ELECT 10U M 16V  | S7105<br>OR  | 613 077 4354<br>613 079 4154<br>613 092 0768<br>613 077 4354<br>613 092 0744<br>613 092 0768<br>613 092 0751   | PUSH SWITCH,FF<br>SW,PUSH,FF<br>SW,PUSH,FF<br>SW,PUSH,FF<br>SW,PUSH,STOP<br>SW,PUSH,STOP<br>SW,PUSH,STOP<br>PUSH SWITCH,PAUSE<br>SW,PUSH,PAUSE<br>SW,PUSH,PAUSE                                       |
| D7103<br>OR  | 407 007 9904<br>407 012 4406   | DIODE GMA01-BT<br>DIODE 1SS133-T-77   | S7115<br>OR  | 613 077 4354<br>613 079 4154   | PUSH SWITCH,PRESET<br>SW,PUSH,PRESET  |
| D7104<br>OR  | 407 007 9904<br>407 012 4406   | DIODE GMA01-BT<br>DIODE 1SS133-T-77   | OR   | 613 092 0744   | SW,PUSH,PRESET  |
| D7106<br>OR  | 407 007 9904<br>407 012 4406   | DIODE GMA01-BT<br>DIODE 1SS133-T-77   | S7116<br>OR  | 613 077 4354<br>613 079 4154   | PUSH SWITCH,CH UP<br>SW,PUSH,CH UP  |
| D7107<br>OR  | 407 007 9904<br>407 012 4406   | DIODE GMA01-BT<br>DIODE 1SS133-T-77   | OR   | 613 092 0744   | SW,PUSH,CH UP   |
| D7108<br>OR  | 407 007 9904<br>407 012 4406   | DIODE GMA01-BT<br>DIODE 1SS133-T-77   | S7118<br>OR  | 613 077 4354<br>613 079 4154   | SW,PUSH,CH UP<br>PUSH SWITCH,CH DOWN  |
| D7110<br>OR  | 407 007 9904<br>407 012 4406   | DIODE GMA01-BT<br>DIODE 1SS133-T-77   | OR   | 613 092 0744   | SW,PUSH,CH DOWN   |
| D7116<br>OR  | 407 007 9904<br>407 012 4406   | DIODE GMA01-BT<br>DIODE 1SS133-T-77   | S7119<br>OR  | 613 077 4354<br>613 079 4154   | SW,PUSH,CH DOWN<br>PUSH SWITCH,OK   |
| D7118<br>OR  | 407 007 9904<br>407 012 4406   | DIODE GMA01-BT<br>DIODE 1SS133-T-77   | OR   | 613 092 0744   | SW,PUSH,OK  |
| D7123<br>OR  | 407 007 9904<br>407 012 4406   | DIODE GMA01-BT<br>DIODE 1SS133-T-77   | S7121<br>OR  | 613 077 4354<br>613 079 4154   | SW,PUSH,OK<br>PUSH SWITCH,TR+/FT+   |
| D7125<br>OR  | 407 007 9904<br>407 012 4406   | DIODE GMA01-BT<br>DIODE 1SS133-T-77   | OR   | 613 092 0744   | SW,PUSH,TR+/FT+   |
| D7129<br>OR  | 407 007 9904<br>407 012 4406   | DIODE GMA01-BT<br>DIODE 1SS133-T-77   | S7122<br>OR  | 613 077 4354<br>613 079 4154   | SW,PUSH,TR+/FT+<br>PUSH SWITCH,TR-/FT-  |
| IC711<br>IC712<br>OR   | 409 251 0805<br>409 032 3308<br>409 243 4101   | IC M50959-439SP<br>IC MN1280-L<br>IC MN1380-L   | OR   | 613 092 0744   | SW,PUSH,TR-/FT-   |
| Q7101  | 405 063 9609   | TR DTA114EL-TL2   | S7130<br>OR  | 613 077 4354<br>613 079 4154   | PUSH SWITCH,SUMMER TIME   |
| R7101<br>R7102<br>R7103<br>R7104<br>R7106<br>R7108<br>R7110<br>R7116<br>R7117<br>R7122<br>R7123<br>R7124 | 401 012 9201<br>401 110 6201<br>401 018 5702<br>401 012 5609<br>401 012 5609<br>401 012 5609<br>401 012 5609<br>401 016 4707<br>401 012 6903<br>401 012 5609<br>401 012 5609<br>401 014 4006 | CARBON 1M JA 1/4W<br>CARBON 10M JA 1/4W<br>CARBON 330K JA 1/4W<br>CARBON 1K JA 1/4W<br>CARBON 1K JA 1/4W<br>CARBON 1K JA 1/4W<br>CARBON 1K JA 1/4W<br>CARBON 22K JA 1/4W<br>CARBON 10K JA 1/4W<br>CARBON 1K JA 1/4W<br>CARBON 1K JA 1/4W<br>CARBON 1.5K JA 1/4W | OR<br>OR<br>OR<br>OR<br>X7101<br>OR<br>OR<br>OR<br>X7102<br>OR<br>OR | 613 092 0744<br>613 092 0744<br>613 092 0768<br>613 092 0744<br>613 122 1444<br>613 124 2135<br>613 089 4069<br>613 108 9570<br>613 109 0972<br>613 079 4154<br>613 092 0744<br>613 092 0768<br>613 077 4354<br>613 092 0744<br>613 077 4354 | SW,PUSH,AC<br>SW,PUSH,AC<br>SW,PUSH,AC<br>SW,PUSH,AC<br>RESONATOR,CERAMIC 6.0MHZ<br>RESONATOR,CERAMIC 6MHZ<br>RESONATOR,CERAMIC 6MHZ<br>RESONATOR,CERAMIC 6MHZ<br>OSC,CRYSTAL 32KHZ<br>PUSH SWITCH,AC |
| RB711<br>OR  | 613 079 5878<br>613 017 2853   | R-NETWORK,10KX4<br>RESISTOR PACK 10K X4 J   | B7601  | 405 018 2402   | TR 2SC3398-TB   |
| S7101<br>OR  | 613 077 4354<br>613 079 4154<br>613 092 0744   | PUSH SWITCH,REW<br>SW,PUSH,REW<br>SW,PUSH,REW   | C7601<br>C7602<br>C7603<br>C7604                                     | 403 155 2804<br>403 041 2703<br>403 039 3507<br>403 069 9500   | DL-ELECT 0.047F Z 5.5V<br>ELECT 470U M 10V<br>ELECT 470U M 6.3V<br>CERAMIC 0.01U Z 50V  |

| LOCATION | PARTS NO.    | DESCRIPTION          | LOCATION | PARTS NO.    | DESCRIPTION            |
|----------|--------------|----------------------|----------|--------------|------------------------|
| C7605    | 403 069 9500 | CERAMIC 0.01U Z 50V  | D7660    | 407 004 0201 | DIODE DCA015-TB        |
| C7606    | 403 069 9500 | CERAMIC 0.01U Z 50V  | OR       | 407 003 4507 | DIODE DAP202K-T-96     |
| C7609    | 403 041 9405 | ELECT 10U M 16V      |          |              |                        |
| C7610    | 403 069 9500 | CERAMIC 0.01U Z 50V  | IC761    | 409 120 6402 | IC P8031AH             |
| C7611    | 403 069 9500 | CERAMIC 0.01U Z 50V  | IC762    | 410 126 0905 | IC TMS27PCS12-20NL.S17 |
| C7625    | 403 041 2109 | ELECT 47U M 10V      | IC763    | 409 194 6100 | IC SRM2264LC-10        |
| C7640    | 403 012 6808 | CERAMIC 15P J 50V    | OR       | 409 194 6209 | IC SRM2264LC-12        |
| C7642    | 403 069 9500 | CERAMIC 0.01U Z 50V  | OR       | 409 225 6000 | IC LH5164N-10L         |
| C7643    | 403 069 9500 | CERAMIC 0.01U Z 50V  | OR       | 409 239 7406 | IC LH5160N-10TL        |
| C7644    | 403 049 0800 | ELECT 1U M 50V       | OR       | 409 240 1004 | IC LH5160N-10L         |
| C7646    | 403 043 9106 | ELECT 47U M 16V      | IC764    | 409 052 6907 | IC TC74HC373P          |
| C7651    | 403 161 6902 | NP-ELECT 2.2U M 50V  | OR       | 409 067 5506 | IC LC74HC373           |
| C7652    | 403 012 6907 | CERAMIC 15P J 50V    | IC765    | 409 032 3704 | IC MN1280-R            |
| C7653    | 403 069 1702 | CERAMIC 1000P K 50V  | OR       | 409 243 4200 | IC MN1380-R            |
| C7654    | 403 026 7600 | CERAMIC 470P J 50V   | IC766    | 409 184 0507 | IC SDA5231             |
| C7655    | 403 072 1607 | CERAMIC 0.022U K 50V | OR       | 409 107 8108 | IC SAA5231             |
| C7656    | 403 020 5602 | CERAMIC 270P J 50V   | OR       | 409 265 0808 | IC SDA5231-2           |
| C7657    | 403 009 5807 | CERAMIC 100P J 50V   | IC767    | 409 196 0304 | IC SDA5243             |
| C7658    | 403 012 6907 | CERAMIC 15P J 50V    | OR       | 409 211 2603 | IC SAA5243P/E          |
| C7659    | 403 020 0508 | CERAMIC 27P J 50V    | OR       | 409 262 4106 | IC SDA5243-2           |
| C7660    | 403 067 7300 | MT-COMPO 0.33U J 50V | IC768    | 409 194 6100 | IC SRM2264LC-10        |
| C7661    | 403 068 3202 | CERAMIC 0.033U K 25V | OR       | 409 194 6209 | IC SRM2264LC-12        |
| C7662    | 403 049 0800 | ELECT 1U M 50V       | OR       | 409 225 6000 | IC LH5164N-10L         |
| C7663    | 403 041 9405 | ELECT 10U M 16V      | OR       | 409 239 7406 | IC LH5160N-10TL        |
| C7664    | 403 073 1200 | CERAMIC 0.033U K 50V | OR       | 409 240 1004 | IC LH5160N-10L         |
| C7665    | 403 014 3508 | CERAMIC 18P J 50V    | IC769    | 409 221 4000 | IC MC1378P             |
| C7666    | 403 018 0602 | CERAMIC 22P J 50V    |          |              |                        |
| C7667    | 403 018 7502 | CERAMIC 220P J 50V   | L7601    | 613 094 3279 | RF CHOKE 10UH K        |
| C7668    | 403 130 4106 | CERAMIC 0.068U K 25V | L7602    | 613 094 3279 | RF CHOKE 10UH K        |
| OR       | 403 228 7408 | CERAMIC 0.068U K 25V | L7604    | 613 094 3279 | RF CHOKE 10UH K        |
| C7669    | 403 043 9601 | ELECT 47U M 16V      | L7605    | 613 013 7807 | HF CHOKE 2.2UH         |
| C7670    | 403 069 9500 | CERAMIC 0.01U Z 50V  | L7606    | 613 017 0316 | CORE                   |
| C7671    | 403 069 9500 | CERAMIC 0.01U Z 50V  | L7607    | 613 094 3279 | RF CHOKE 10UH K        |
| C7672    | 403 041 2703 | ELECT 47U M 10V      | L7651    | 613 014 0876 | COIL,INDUCTOR 15UHK    |
| C7673    | 403 069 9500 | CERAMIC 0.01U Z 50V  |          |              |                        |
| C7674    | 403 042 8308 | ELECT 22U M 16V      | Q7601    | 405 015 8407 | TR 2SC2812-L5-TB       |
| C7675    | 403 042 8308 | ELECT 22U M 16V      | OR       | 405 015 8704 | TR 2SC2812-L6-TB       |
| C7676    | 403 042 8308 | ELECT 22U M 16V      | Q7602    | 405 015 8407 | TR 2SC2812-L5-TB       |
| C7677    | 403 072 1607 | CERAMIC 0.022U K 50V | DR       | 405 015 8704 | TR 2SC2812-L6-TB       |
| C7678    | 403 026 2902 | CERAMIC 47P J 50V    | Q7651    | 405 002 6508 | TR 2SA1179-M5-TB       |
| C7679    | 403 069 1702 | CERAMIC 1000P K 50V  | DR       | 405 002 6706 | TR 2SA1179-M6-TB       |
| C7680    | 403 049 0800 | ELECT 1U M 50V       | Q7653    | 405 015 8407 | TR 2SC2812-L5-TB       |
| C7681    | 403 068 0409 | CERAMIC 0.1U Z 25V   | DR       | 405 015 8704 | TR 2SC2812-L6-TB       |
| C7682    | 403 093 8302 | DS-SOLID 47U M 10V   | Q7654    | 405 002 6508 | TR 2SA1179-M5-TB       |
| C7683    | 403 069 9500 | CERAMIC 0.01U Z 50V  | OR       | 405 002 6706 | TR 2SA1179-M6-TB       |
| C7684    | 403 068 0409 | CERAMIC 0.1U Z 25V   | Q7655    | 405 002 6508 | TR 2SA1179-M5-TB       |
| C7685    | 403 049 0800 | ELECT 1U M 50V       | OR       | 405 002 6706 | TR 2SA1179-M6-TB       |
| C7686    | 403 069 5601 | CERAMIC 0.01U K 50V  | Q7656    | 405 002 6508 | TR 2SA1179-M5-TB       |
| C7687    | 403 069 1702 | CERAMIC 1000P K 50V  | OR       | 405 002 6706 | TR 2SA1179-M6-TB       |
| C7688    | 403 049 0800 | ELECT 1U M 50V       | Q7657    | 405 015 8407 | TR 2SC2812-L5-TB       |
| C7689    | 403 086 0108 | NP-ELECT 4.7U M 25V  | DR       | 405 015 8704 | TR 2SC2812-L6-TB       |
| C7691    | 403 049 0800 | ELECT 1U M 50V       | Q7658    | 405 002 6508 | TR 2SA1179-M5-TB       |
| C7692    | 403 042 3006 | ELECT 100U M 16V     | OR       | 405 002 6706 | TR 2SA1179-M6-TB       |
| C7693    | 403 042 3006 | ELECT 100U M 16V     | Q7659    | 405 002 6508 | TR 2SA1179-M5-TB       |
| C7694    | 403 042 3006 | ELECT 100U M 16V     | OR       | 405 002 6706 | TR 2SA1179-M6-TB       |
| C7695    | 403 068 0409 | CERAMIC 0.1U Z 25V   | Q7660    | 405 015 8407 | TR 2SC2812-L5-TB       |
| C7696    | 403 074 3104 | CERAMIC 0.047U Z 50V | OR       | 405 015 8704 | TR 2SC2812-L6-TB       |
| C7698    | 403 073 9107 | CERAMIC 4700P K 50V  |          |              |                        |
| C7699    | 403 206 8601 | CERAMIC 0.33U Z 16V  | R7601    | 401 037 5400 | MT-GLAZE 1K JA 1/10W   |
| CT761    | 613 002 6545 | TRIMMER              | R7602    | 401 037 5400 | MT-GLAZE 1K JA 1/10W   |
| D7602    | 407 120 5807 | DIODE AK04-V2        | R7603    | 401 037 5400 | MT-GLAZE 1K JA 1/10W   |
| D7603    | 407 004 0201 | DIODE DCA015-TB      | R7604    | 401 038 0602 | MT-GLAZE 220 JA 1/10W  |
| DR       | 407 003 4507 | DIODE DAP202K-T-96   | R7605    | 401 038 3702 | MT-GLAZE 33K JA 1/10W  |
| D7657    | 407 004 0201 | DIODE DCA015-TB      | R7606    | 401 038 3702 | MT-GLAZE 33K JA 1/10W  |
| DR       | 407 003 4507 | DIODE DAP202K-T-96   | R7607    | 401 037 5608 | MT-GLAZE 10K JA 1/10W  |
| D7659    | 407 004 0201 | DIODE DCA015-TB      | R7610    | 401 038 7809 | MT-GLAZE 56K JA 1/10W  |
| DR       | 407 003 4507 | DIODE DAP202K-T-96   | R7611    | 401 038 7809 | MT-GLAZE 56K JA 1/10W  |
|          |              |                      | R7612    | 401 037 5806 | MT-GLAZE 1M JA 1/10W   |
|          |              |                      | R7614    | 401 037 5202 | MT-GLAZE 100 JA 1/10W  |




| <u>LOCATION</u> | <u>PARTS NO.</u> | <u>DESCRIPTION</u> |      |         |
|-----------------|------------------|--------------------|------|---------|
| R8505           | 401 016 5704     | CARBON             | 220K | JA 1/4W |
| R8508           | 401 012 5609     | CARBON             | 1K   | JA 1/4W |
| R8521           | 401 012 5609     | CARBON             | 1K   | JA 1/4W |
| R8522           | 401 012 5609     | CARBON             | 1K   | JA 1/4W |
| R8523           | 401 022 1806     | CARBON             | 680  | JA 1/4W |
| R8524           | 401 022 1806     | CARBON             | 680  | JA 1/4W |
| R8525           | 401 016 5704     | CARBON             | 220K | JA 1/4W |
| R8528           | 401 012 5609     | CARBON             | 1K   | JA 1/4W |
| R8541           | 401 020 1907     | CARBON             | 4.7K | JA 1/4W |
| R8542           | 401 020 1907     | CARBON             | 4.7K | JA 1/4W |
| R8543           | 401 016 4707     | CARBON             | 22K  | JA 1/4W |
| R8544           | 401 016 4707     | CARBON             | 22K  | JA 1/4W |
| R8547           | 401 012 5609     | CARBON             | 1K   | JA 1/4W |
| R8551           | 401 022 6702     | CARBON             | 75   | JA 1/4W |
| R8553           | 401 022 6702     | CARBON             | 75   | JA 1/4W |
| R8554           | 401 012 5609     | CARBON             | 1K   | JA 1/4W |
| RB851           | 613 085 3110     | R-NETWORK, 100KX5  |      |         |
| RB852           | 613 085 3110     | R-NETWORK, 100KX5  |      |         |



## 8. Mechanical Parts List

| LOCATION                                | PARTS NO.    | DESCRIPTION        | LOCATION | PARTS NO.    | DESCRIPTION         |
|---|--------------|--------------------|----------|--------------|---------------------|
| <b>8-1. CABINET &amp; CHASSIS PARTS</b> |              |                    |          |              |                     |
| 1                                       | 411 137 0007 | SCR L-TPG BIN 3X10 | 18       | 613 120 5642 | MODULATOR,RF        |
| 2                                       | 613 132 6545 | COMPL PCB,VP-1     | 19       | 613 122 1062 | IF PACK             |
| 3                                       | 613 124 7307 | COMPL PCB,PW-1     | 20       | 613 122 1055 | TUNER PACK          |
| 4                                       | 411 021 7907 | SCR S-TPG BIN 4X12 | 21       | 613 082 5223 | HOLDER,VPT          |
| 5                                       | 613 129 8699 | STAND,BACK         | 22       | 613 127 8035 | COMPL PCB,TN-7      |
| 6                                       | 613 125 9416 | COVER,TOP          | 23       | 613 123 0866 | COMPL PCB,TN-5      |
| 7                                       | 412 028 9406 | SPECIAL SCREW      | 24       | 613 130 0613 | COMPL PCB,TM-6      |
| 8                                       | 613 122 0027 | TERMINAL,PAL       | 25       | 613 127 6826 | COMPL PCB,CP-B      |
| 9                                       | 613 127 6031 | COMPL PCB,CP-A     | 26       | 613 132 3742 | COVER,BOTTOM        |
| 10                                      | 411 021 3800 | SCR S-TPG BIN 3X10 | 27       | 613 123 1245 | STAND,FRONT         |
| 11                                      | 411 137 0007 | SCR L-TPG BIN 3X10 | 28       | 613 127 3962 | COMPL PCB,TM-1      |
| OR                                      | 411 021 4005 | SCR S-TPG BIN 3X12 | 29       | 613 048 2884 | LOCK                |
| 12                                      | 613 053 8055 | FIXER              | 30       | 613 128 2285 | ASSY,CABINET,FRONT  |
| 13                                      | 613 126 6629 | HOLDER             | 31       | 613 127 7335 | ASSY,DOOR           |
| 14                                      | 411 021 3701 | SCR S-TPG BIN 3X10 | 32       | 613 083 6441 | SPRING,DR CASSE-HCO |
| 15                                      | 613 125 9751 | COMPL PCB,TB-1     | 33       | 613 132 4121 | DOOR,CASSETTE       |
| 17                                      | 613 122 0034 | TERMINAL,RF        | 34       | 613 127 5393 | COMPL PCB,AD-2      |
| 18                                      | 613 110 3665 | MODULATOR,RF       | 36       | 613 119 6391 | HOLDER,VPT          |


N.S.P:Not available as service parts

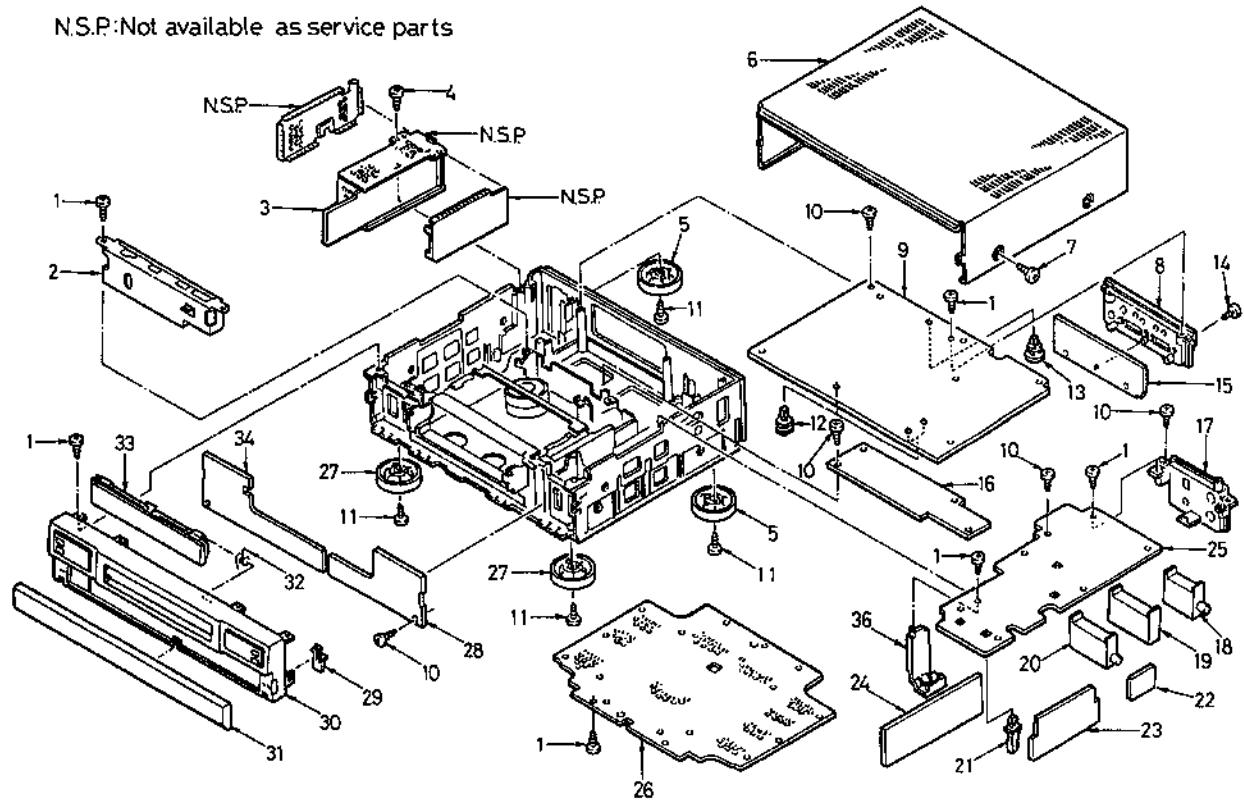

| LOCATION                      | PARTS NO.    | DESCRIPTION           | LOCATION | PARTS NO.    | DESCRIPTION               |
|-------------------------------|--------------|-----------------------|----------|--------------|---------------------------|
| <b>8-2. MECHANISM PARTS 1</b> |              |                       |          |              |                           |
| 1                             | 613 125 4879 | COMPL.CASSETTE MECHA  | 47       | 412 021 5306 | SPECIAL WASHER 3.1×6×0.3  |
| 4                             | 613 022 0585 | LID                   | OR       | 412 015 8900 | SPECIAL WASHER 3.1×6×0.4  |
| 5                             | 407 098 3201 | PHOTO COUPLE PN150SAN | OR       | 412 015 8504 | SPECIAL WASHER 3.1×6×0.5  |
| 6                             | 411 015 9801 | RING E 2.3            | 48       | 411 109 1506 | WASHER Y 2.1×6×0.25       |
| 7                             | 613 022 1643 | SPRING,LINK L         | OR       | 411 109 1407 | WASHER Y 2.1×5×0.25       |
| 8                             | 613 022 0073 | ASSY.GEAR,LEVER L     | 49       | 613 126 6148 | GEAR,REEL SUPPLY          |
| 9                             | 613 022 2695 | RACK                  | 50       | 412 026 7305 | SPECIAL WASHER 2.6×6×0.25 |
| 10                            | 613 022 2633 | GEAR,LOCK             | 51       | 613 126 6155 | GEAR,REEL TAKE UP         |
| 11                            | 613 021 9916 | ASSY,LEVER,PINION     | 54       | 412 042 4302 | SPECIAL SCREW 2.6×4       |
| 12                            | 613 022 2626 | GEAR,PINION           | 55       | 613 085 7101 | COMPL.IDLER,CLUTCH        |
| 13                            | 613 021 9857 | ASSY,BRACKET,GEAR     | 56       | 411 120 1301 | WASHER Y 2.1×4×0.25       |
| 14                            | 411 027 1305 | SCR S-TPG BIN 2.6×4   | 57       | 613 022 0134 | ASSY, IDLER               |
| 15                            | 613 006 4479 | SPECIAL SWITCH        | 58       | 411 021 3107 | SCR S-TPG BIN 2.6×8       |
| OR                            | 613 095 0949 | SPECIAL SWITCH        | 59       | 613 120 9053 | COMPL,PCB,MC-4            |
| 16                            | 411 106 9208 | SCR PAN+SW+W 2×9      | 60       | 407 016 7205 | LED LN59                  |
| 17                            | 613 022 0943 | HOLDER,TRANSISTOR     | 61       | 613 021 9985 | ASSY,SLIDE,ACT PLATE      |
| 18                            | 613 022 2619 | GEAR, IDLER           | 62       | 613 021 9992 | ASSY,SLIDE,C BRAKE        |
| 19                            | 613 022 1667 | SPRING,GEAR MAIN      | 63       | 613 022 1612 | SPRING,RETURN SLIDE       |
| 20                            | 613 022 2596 | GEAR,MAIN             | 64       | 613 022 1506 | SPRING, SUB T             |
| 21                            | 613 022 0097 | ASSY,GEAR,LEVER R     | 65       | 613 098 0106 | ASSY,BRAKE, SUB T         |
| 22                            | 613 022 1674 | SPRING,LINK R         | 66       | 613 077 3647 | PULLEY,REEL               |
| 24                            | 613 108 0256 | BOARD,UNDER           | 67       | 613 022 1490 | SPRING, SUB SUPPLY        |
| 27                            | 613 124 5006 | LEVER,SAFETY SWITCH   | 68       | 613 022 2374 | SLIDE,ACT BRAKE           |
| 28                            | 613 125 6149 | SPRING,SAFETY SWITCH  | 69       | 613 084 8871 | BRAKE, SUB SUPPLY         |
| 31                            | 411 001 8702 | SCR BIN 3×6           | 70       | 613 022 0004 | ASSY,SLIDE,M PLATE        |
| 40                            | 613 100 0391 | ASSY,LEVER,TENSION    | 71       | 613 080 9216 | ASSY,BRAKE, SUPPLY        |
| 41                            | 613 085 7996 | SPRING,LEVER TENSION  | 72       | 613 086 2914 | SPRING,MAIN BRAKE         |
| 42                            | 613 021 9701 | ASSY,HOLDER,BAND      | 73       | 613 080 9209 | ASSY,BRAKE,TAKE UP        |
| 43                            | 411 144 2803 | SCR PAN+SW+W 2.6×6    | 74       | 411 109 3005 | WASHER Y 2.6×5×0.5        |
| OR                            | 411 036 2805 | SCR PAN+SW+W 2.6×6    | 75       | 613 022 2015 | LEVER,CONT PLATE          |
| 44                            | 411 109 1605 | WASHER Y 2.6×6×0.25   | 76       | 412 015 9501 | SPECIAL WASHER            |
| 45                            | 613 078 8375 | ASSY,REEL,SUPPLY      | 77       | 411 021 7907 | SCR S-TPG BIN 4×12        |
| 46                            | 613 022 0110 | ASSY,REEL,TAKE UP     |          |              |                           |

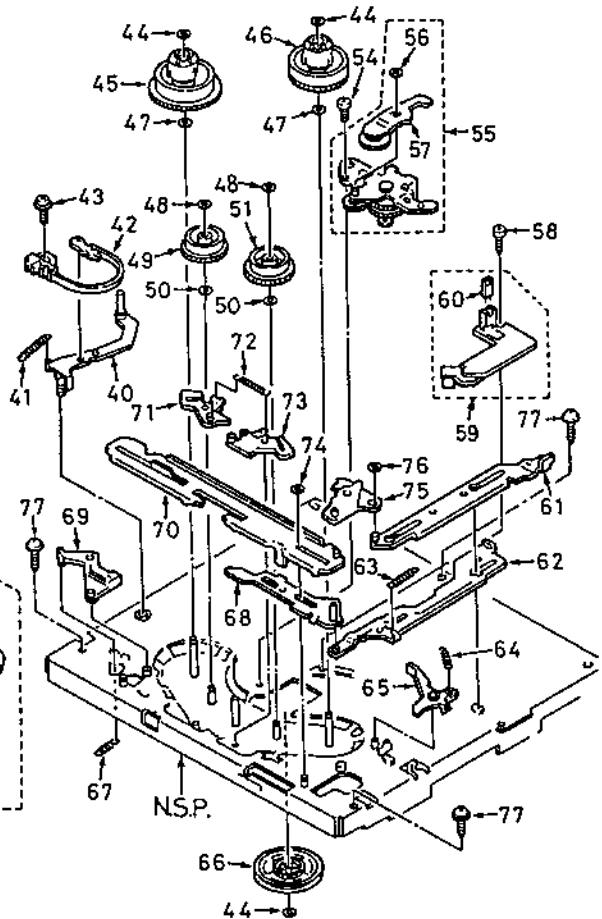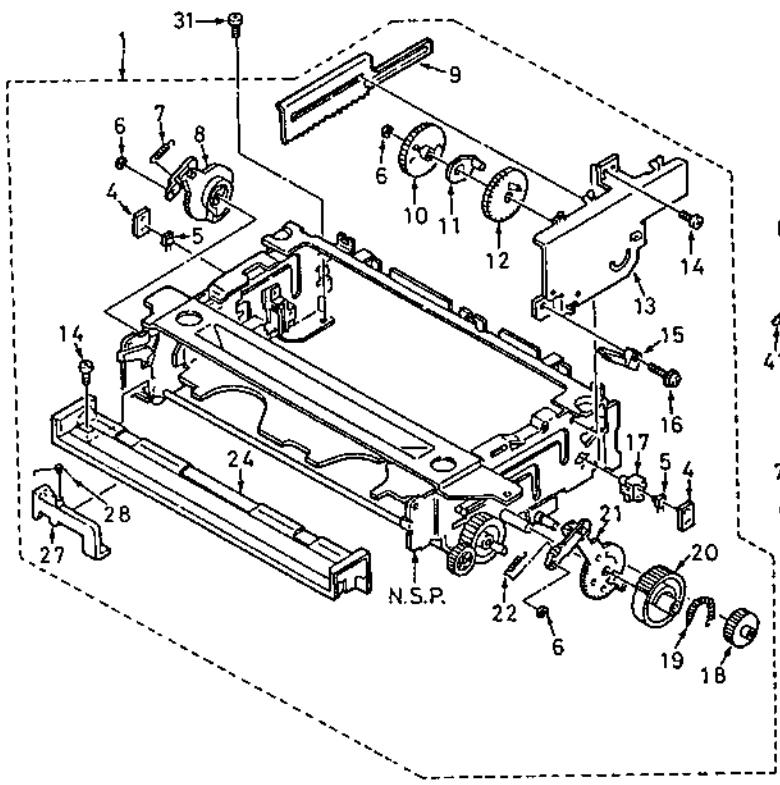


| <u>LOCATION</u>               | <u>PARTS NO.</u> | <u>DESCRIPTION</u>       | <u>LOCATION</u> | <u>PARTS NO.</u> | <u>DESCRIPTION</u>        |
|-------------------------------|------------------|--------------------------|-----------------|------------------|---------------------------|
| <b>8-3. MECHANISM PARTS 2</b> |                  |                          |                 |                  |                           |
| 1                             | 613 097 5355     | COMPL.CYLINDER,4H6P-R    | 44              | 613 117 0599     | BRACKET,HOLDER            |
| 2                             | 411 038 1608     | SCR PAN+W 3×8            | 45              | 613 093 9159     | PLATE,NUT                 |
| 3                             | 613 097 5362     | ASSY,CYLINDER,UPR 4H6P-R | 46              | 613 093 8374     | DAMPER,MOTOR              |
| 4                             | 613 095 9881     | ASSY,CYLINDER,LWR 6K     | 47              | 613 077 3616     | DAMPER,WORM               |
| 5                             | 613 097 2170     | SPACER,MOTOR,0.3T        | 48              | 613 121 9960     | ASSY,LOADING MOTOR        |
| 6                             | 613 088 9072     | BASE,CYLINDER            | 49              | 613 092 9945     | DAMPER,MOTOR              |
| 7                             | 411 047 7509     | SCR PAN+FLG 3×6          | 50              | 613 109 6462     | COMPL.PCB,MC-3            |
| 8                             | 411 047 5000     | SCR PAN+FLG 2.6×8        | 52              | 613 110 0374     | ROTARY SWITCH             |
| 9                             | 613 085 7279     | STATOR,MOTOR CYLINDER    | 53              | 411 126 5303     | SCR PAN 2.6×13            |
| 10                            | 411 044 9209     | SCR PAN+SW 2.3×8         | 54              | 613 092 9921     | ASSY,SLIDE,FRONT          |
| OR                            | 411 044 8301     | SCR PAN+SW 2.3×10        | 55              | 613 092 5985     | SPRING,LEVER LOAD         |
| 11                            | 613 022 4019     | ROTOR,MOTOR CYLINDER     | 56              | 613 092 5992     | SPRING,LEVER ACT          |
| 12                            | 411 044 9001     | SCR PAN+SW 2.3×6         | 57              | 613 092 5886     | HOLDER,WORM               |
| 13                            | 613 123 4802     | SLEEVE                   | 58              | 613 027 0627     | WASHER 2.1×6×0.5          |
| 14                            | 613 053 3227     | SPECIAL WASHER           | 59              | 613 092 9938     | ASSY,WORM,LOAD            |
| 15                            | 613 123 4970     | TAPE GUIDE               | 60              | 613 022 2985     | BELT,LOADING              |
| 16                            | 412 026 2607     | SPECIAL NUT (M3)         | 61              | 412 033 4106     | WASHER SLIT 2.6×5×0.5     |
| 17                            | 613 123 9418     | CAP                      | 62              | 613 077 3579     | GEAR,HELICAL              |
| 18                            | 613 021 9961     | ASSY,SLIDE,ACT PINCH     | 63              | 613 102 9293     | ASSY,LEVER,REV GUIDE      |
| 19                            | 613 021 9800     | ASSY,LEVER,CAM PINCH     | 64              | 613 022 1568     | SPRING,REVIEW LEVER       |
| 20                            | 411 109 2008     | WASHER Y 3.1×8×0.5       | 65              | 613 022 0158     | COMPL,PINCH ROLLER        |
| 21                            | 613 022 1797     | SPRING,ACE HEAD          | 66              | 613 022 1483     | SPRING,PINCH ROLLER       |
| 22                            | 613 021 9640     | COMPL,BRACKET,HEAD       | 67              | 411 109 2107     | WASHER Y 3.6×6×0.5        |
| 23                            | 613 110 1692     | SLEEVE,AC HEAD           | 68              | 613 078 8160     | COMPL,LEVER,ACT BRAKE     |
| 24                            | 412 015 8207     | SPECIAL NUT (M5)         | 69              | 411 031 1209     | SCR BIN 2.6×5             |
| 25                            | 411 120 0007     | SCR PAN+SW+W 2.6×5       | 70              | 613 022 1919     | PLATE,GUIDE               |
| 26                            | 613 120 3631     | BRACKET,STOPPER          | 71              | 613 021 9725     | ASSY,BASE,ROLLER S        |
| 27                            | 613 022 1575     | SPRING,LINK LOCK         | 72              | 613 021 9732     | ASSY,BASE,ROLLER T        |
| 28                            | 613 022 1582     | SPRING,SLIDE BRAKE       | 73              | 411 063 0904     | SCR SET HEX-SCT 2×3       |
| 29                            | 613 094 9233     | ASSY,SLIDE,CAM           | 74              | 613 022 0233     | ASSY,GUIDE,ROLLER         |
| 30                            | 613 022 2725     | DAMPER                   | 75              | 411 109 2602     | WASHER Y 1.5×4×0.25       |
| 31                            | 613 022 2534     | GEAR,FRONT LOAD          | 76              | 613 022 4224     | HEAD,FULL ERASE           |
| 32                            | 613 094 1206     | ASSY,LEVER,FRONT         | 77              | 613 022 2817     | IMPEDANCE ROLLER          |
| 33                            | 613 077 3586     | GEAR,HELICAL FRONT       | 78              | 412 032 5807     | SPECIAL WASHER 2.1×5×0.13 |
| 34                            | 613 027 0504     | WASHER 4.1×6.5×0.5       | 79              | 613 093 8305     | ASSY,LEVER,FE HEAD        |
| 35                            | 411 046 8002     | SCR PAN+SW+W 2.6×6       | 80              | 613 022 1698     | SPRING,ERASE HEAD         |
| 36                            | 411 023 2801     | SCR S-TPG PAN 2.6×6      | 81              | 411 109 1704     | WASHER Y 6.4×10×0.25      |
| 37                            | 411 023 3303     | SCR S-TPG PAN 2.6×8      | 90              | 613 120 5703     | FLEXIBLE FLAT CABLE 24    |
| OR                            | 411 021 3107     | SCR S-TPG BIN 2.6×8      | 91              | 411 109 1803     | WASHER Y 2.6×6×0.5        |
| 40                            | 613 053 2381     | SPECIAL WASHER           | 92              | 613 119 8562     | ASSY,ROLLER,CLEANER       |
| 41                            | 613 077 3227     | HOLDER,WORM              | 93              | 613 119 8548     | ASSY,LEVER,CLEANER        |
| 42                            | 613 027 0382     | WASHER                   | 94              | 613 119 8593     | SPRING                    |
| 43                            | 613 078 8320     | ASSY,WORM,FRONT          | 95              | 613 119 8524     | ASSY,BRACKET,CLEANER      |

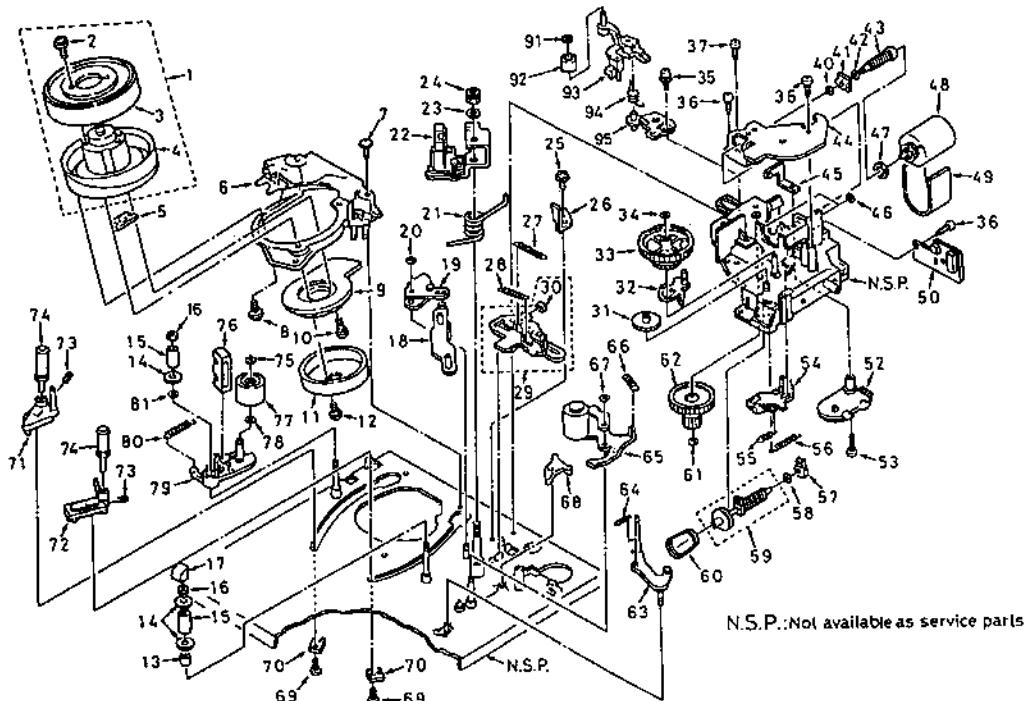


| LOCATION                      | PARTS NO.    | DESCRIPTION          | LOCATION | PARTS NO.    | DESCRIPTION               |
|-------------------------------|--------------|----------------------|----------|--------------|---------------------------|
| <b>8-4. MECHANISM PARTS 3</b> |              |                      |          |              |                           |
| 1                             | 613 022 4491 | MOTOR,CAPSTAN        | 26       | 613 021 9879 | ASSY,LEVER,LOAD T         |
| 2                             | 613 022 2978 | BELT,REEL DRIVE      | 27       | 613 090 6373 | GEAR,LOAD SUPPLY          |
| 3                             | 613 021 9848 | ASSY,LEVER,CLUTCH    | 28       | 613 022 1704 | SPRING,GEAR LOAD S        |
| 5                             | 613 079 1023 | DAMPER,LEVER CLUTCH  | 29       | 613 021 9862 | ASSY,LEVER,LOAD S         |
| 6                             | 613 022 1520 | SPRING,LEVER CLUTCH  | 30       | 613 022 2039 | LEVER,RETURN TENSION      |
| 7                             | 613 082 3434 | LEVER,CHANGE CLUTCH  | 31       | 613 091 3104 | ASSY,LEVER CONTROL        |
| 8                             | 613 022 1711 | SPRING,CHANGE CLUTCH | 34       | 411 040 2303 | SCR PAN 2.6×5             |
| 9                             | 613 081 7518 | ASSY,BRAKE CAPSTAN   | 35       | 412 015 8603 | SPECIAL WASHER 3.1×6×0.25 |
| 10                            | 613 098 2285 | SPRING,CAPSTAN       | 36       | 613 102 0900 | ASSY,GEAR FRICTION        |
| 12                            | 411 021 3107 | SCR S-TPG BIN 2.6×8  | 37       | 411 109 1605 | WASHER Y 2.6×6×0.25       |
| 13                            | 411 109 2008 | WASHER Y 3.1×8×0.5   | 39       | 613 079 8121 | BRACKET,PULLEY            |
| 14                            | 613 021 9978 | ASSY,SLIDE,CAM PLATE | 40       | 411 100 0300 | SCR S-TPG BIN 2.6×5       |
| 15                            | 613 022 2701 | CAM,MODE             | 41       | 613 123 9067 | COMPL,PCB,MC-1            |
| 16                            | 411 109 1902 | WASHER Y 3.1×6×0.5   | R1       | 401 026 0607 | CARBON 270 JA 1/6W        |
| 17                            | 613 120 1576 | CAM,MAIN             | OR       | 401 017 0708 | CARBON 270 JA 1/4W        |
| 18                            | 613 022 2664 | RACK,LOAD            | R2       | 401 024 6700 | CARBON 100 JA 1/6W        |
| 19                            | 411 109 1803 | WASHER Y 2.6×6×0.5   | OR       | 401 012 4404 | CARBON 100 JA 1/4W        |
| 20                            | 411 109 2107 | WASHER Y 3.6×6×0.5   | R3       | 401 026 0607 | CARBON 270 JA 1/6W        |
| OR                            | 411 109 2206 | WASHER Y 3.6×8×0.5   | OR       | 401 017 0708 | CARBON 270 JA 1/4W        |
| 21                            | 613 021 9794 | ASSY,LEVER,CAM LOAD  | D1       | 407 094 1300 | PHOTO COUPLE SPI-315-04-C |
| 22                            | 411 047 6809 | SCR PAN+FLG 3×4      | OR       | 407 043 0101 | PHOTO DIODE ON2170-R      |
| 23                            | 613 021 9763 | ASSY,EARTH,CYLINDER  | D2       | 407 094 1300 | PHOTO COUPLE SP1-315-04-C |
| 24                            | 613 090 6380 | GEAR,LOAD TAKE UP    | OR       | 407 043 0101 | PHOTO DIODE ON2170-R      |
| 25                            | 613 022 1551 | SPRING,GEAR LOAD T   | SW1      | 613 022 4545 | SPECIAL SWITCH,EP         |

N.S.P.:Not available as service part

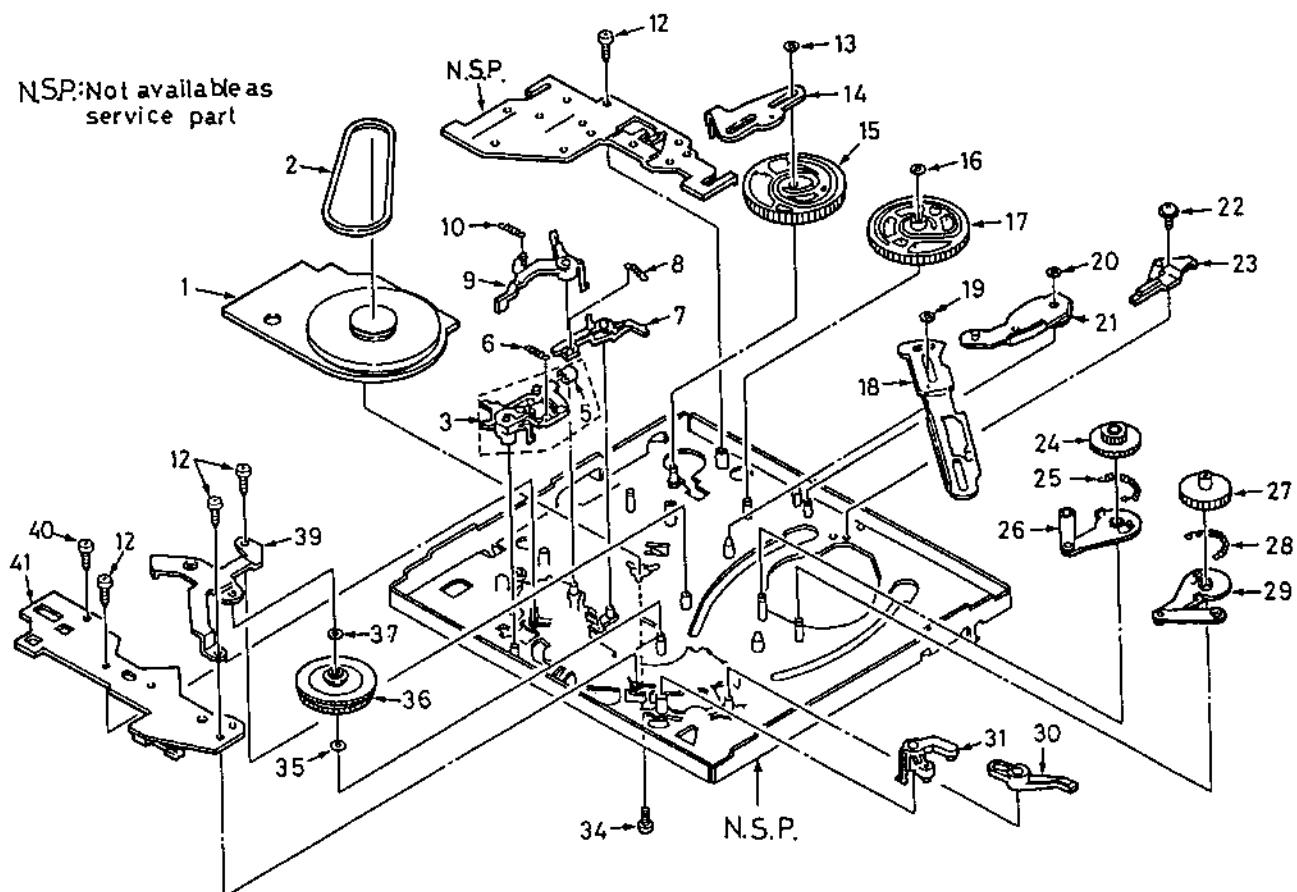

| <u>LOCATION</u>             | <u>PARTS NO.</u> | <u>DESCRIPTION</u>   | <u>LOCATION</u> | <u>PARTS NO.</u> | <u>DESCRIPTION</u>        |
|-----------------------------|------------------|----------------------|-----------------|------------------|---------------------------|
| <b>8-5. REMOCON,VC153NX</b> |                  |                      |                 |                  |                           |
| COMPL.NO.                   | 613 127 4426     |                      | COMPL.NO.       | 613 122 4940     |                           |
| 1                           | 613 127 8653     | ASSY,CABINET, TOP    |                 | 613 123 1948     | TERMINAL,BATTERY,+        |
| 2                           | 613 122 5305     | WINDOW               |                 | 613 123 1955     | TERMINAL,BATTERY,-        |
| 3                           | 613 123 1979     | LCD                  |                 | 613 123 1900     | SPACER                    |
| 4                           | 613 123 1931     | CONNECTOR            | C1              | 403 068 0409     | CERAMIC 0.1U Z 25V        |
| 5                           | 613 128 0243     | BUTTON               | C2              | 403 152 9707     | ELECT 220 M 6.3V          |
| 6                           | 411 101 7308     | SCR S-TPG FLT 2.6X10 | C3              | 403 009 9300     | CERAMIC 100P K 50V        |
| 7                           | 613 122 5220     | LID,BATTERY          | C4              | 403 009 9300     | CERAMIC 100P K 50V        |
| 8                           | 613 122 5213     | CABINET,BOTTOM       | C5              | 403 068 0409     | CERAMIC 0.1U Z 25V        |
| 9                           | 613 122 4940     | COMPL PCB,RM-1       | C6              | 403 068 0409     | CERAMIC 0.1U Z 25V        |
| 10                          | 613 123 1962     | TERMINAL,BATTERY     | C7              | 403 153 0802     | ELECT 220U M 4V           |
|                             |                  |                      | IC1             | 409 245 3003     | IC LC5872-S-1275          |
|                             |                  |                      | OR              | 409 246 8205     | IC LC5872-S-1300          |
|                             |                  |                      | J1              | 401 035 4108     | MT-GLAZE 0.000 ZA 1/8W    |
|                             |                  |                      | LE01            | 407 040 3709     | LED SLR-932A              |
|                             |                  |                      | Q1              | 405 021 2406     | TR ZSD1048-X7-TB          |
|                             |                  |                      | OR              | 405 021 2505     | TR ZSD1048-X8-TB          |
|                             |                  |                      | R1              | 401 035 4603     | MT-GLAZE 100 JA 1/8W      |
|                             |                  |                      | R2              | 401 169 5200     | MT-GLAZE 2.2 JA 1/4W      |
|                             |                  |                      | R3              | 401 035 4603     | MT-GLAZE 100 JA 1/8W      |
|                             |                  |                      | R4              | 401 037 5806     | MT-GLAZE 1M JA 1/10W      |
|                             |                  |                      | R5              | 401 039 0601     | MT-GLAZE 820K JA 1/10W    |
|                             |                  |                      | X1              | 613 123 2020     | RESONATOR,CERAMIC1.216MHZ |

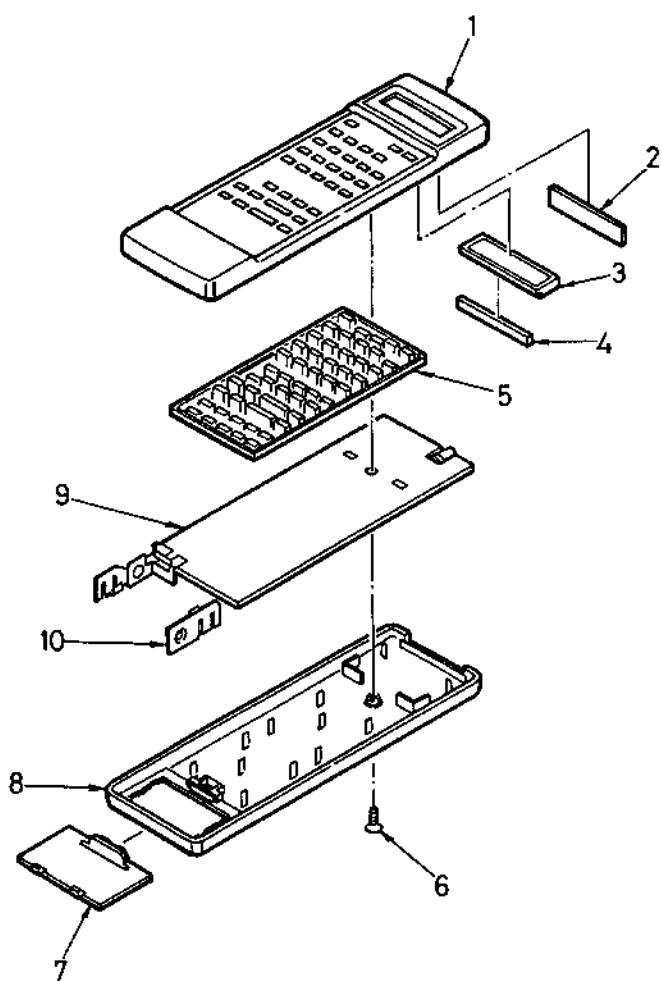


| <u>LOCATION</u>     | <u>PARTS NO.</u> | <u>DESCRIPTION</u> | <u>LOCATION</u> | <u>PARTS NO.</u> | <u>DESCRIPTION</u> |
|---------------------|------------------|--------------------|-----------------|------------------|--------------------|
| <b>8-7. REMOCON</b> |                  |                    |                 |                  |                    |
| COMPL.NO.           | 613 132 3544     |                    | COMPL.NO.       | 613 132 5999     |                    |

1 613 132 6095 ASSY,CABINET,FRONT  
 2 613 125 8204 WINDOW  
 3 613 132 5999 COMPL PCB,RM-1  
 4 613 125 8174 CABINET,BOTTOM  
 5 613 125 8198 LID,BATTERY  
 6 613 125 8259 TERMINAL,BATTERY  
 7 613 127 8721 BUTTON

613 125 8266 TERMINAL,BATTERY,+  
 613 125 8273 TERMINAL,BATTERY,-  
 C1 403 039 2104 ELECT 47U M 6.3V  
 C2 403 068 0409 CERAMIC 0.1U Z 25V  
 C3 403 009 9300 CERAMIC 100P K 50V  
 C4 403 009 9300 CERAMIC 100P K 50V

D1 407 077 2508 DIODE 1SS272  
 IC 410 122 2101 IC UPD6600GS-535  
 LED1 407 040 3709 LED SLR-932A  
 OR 407 126 0400 LED LD271E7317  
 R1 401 036 0307 HT-GLAZE 2.2 JA 1/8W  
 TR 405 021 2406 TR 2SD104B-X7  
 OR 405 021 2505 TR 2SD104B-X8  
 X1 613 016 6913 CERAMIC RESONATOR  
 OR 613 016 6920 CERAMIC RESONATOR

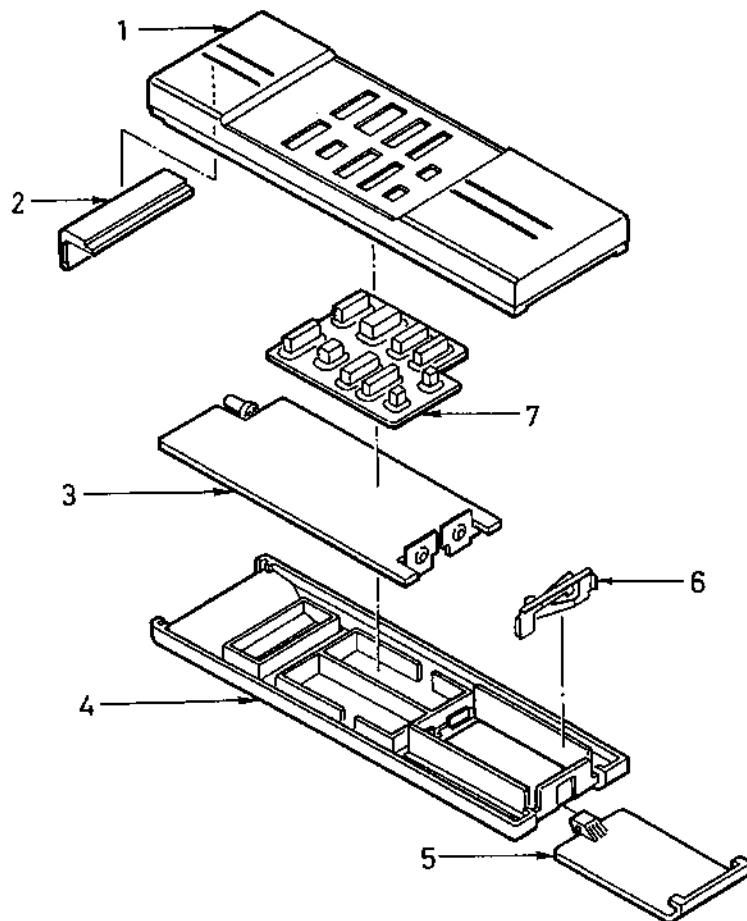

#### 8-8. COMPL PCB,RM-1

613 127 4426 REMOCON,VC153NX  
 613 132 3544 REMOCON  
 613 127 5140 INSTRUCTION MANUAL  
 613 127 7625 INSTRUCTION MANUAL,VPT  
 613 096 6773 CABLE,ANT  
 613 011 7359 CABLE,ANT  
 613 123 0781 CORD,POWER  
 613 133 1907 HOLDER

#### 8-9. ACCESSORIES


613 128 2919 CORR CASE,INNER  
 613 123 7414 CUSHION,INNER,FRONT  
 613 123 7421 CUSHION,INNER,BACK  
 613 095 0765 POLYE COVER,INNER

#### 8-10. PACKING MATERIALS




## 9. Schematic Diagrams and Printed Circuit Boards


9-1. PW-1 BOARD POWER SUPPLY CIRCUIT DIAGRAM

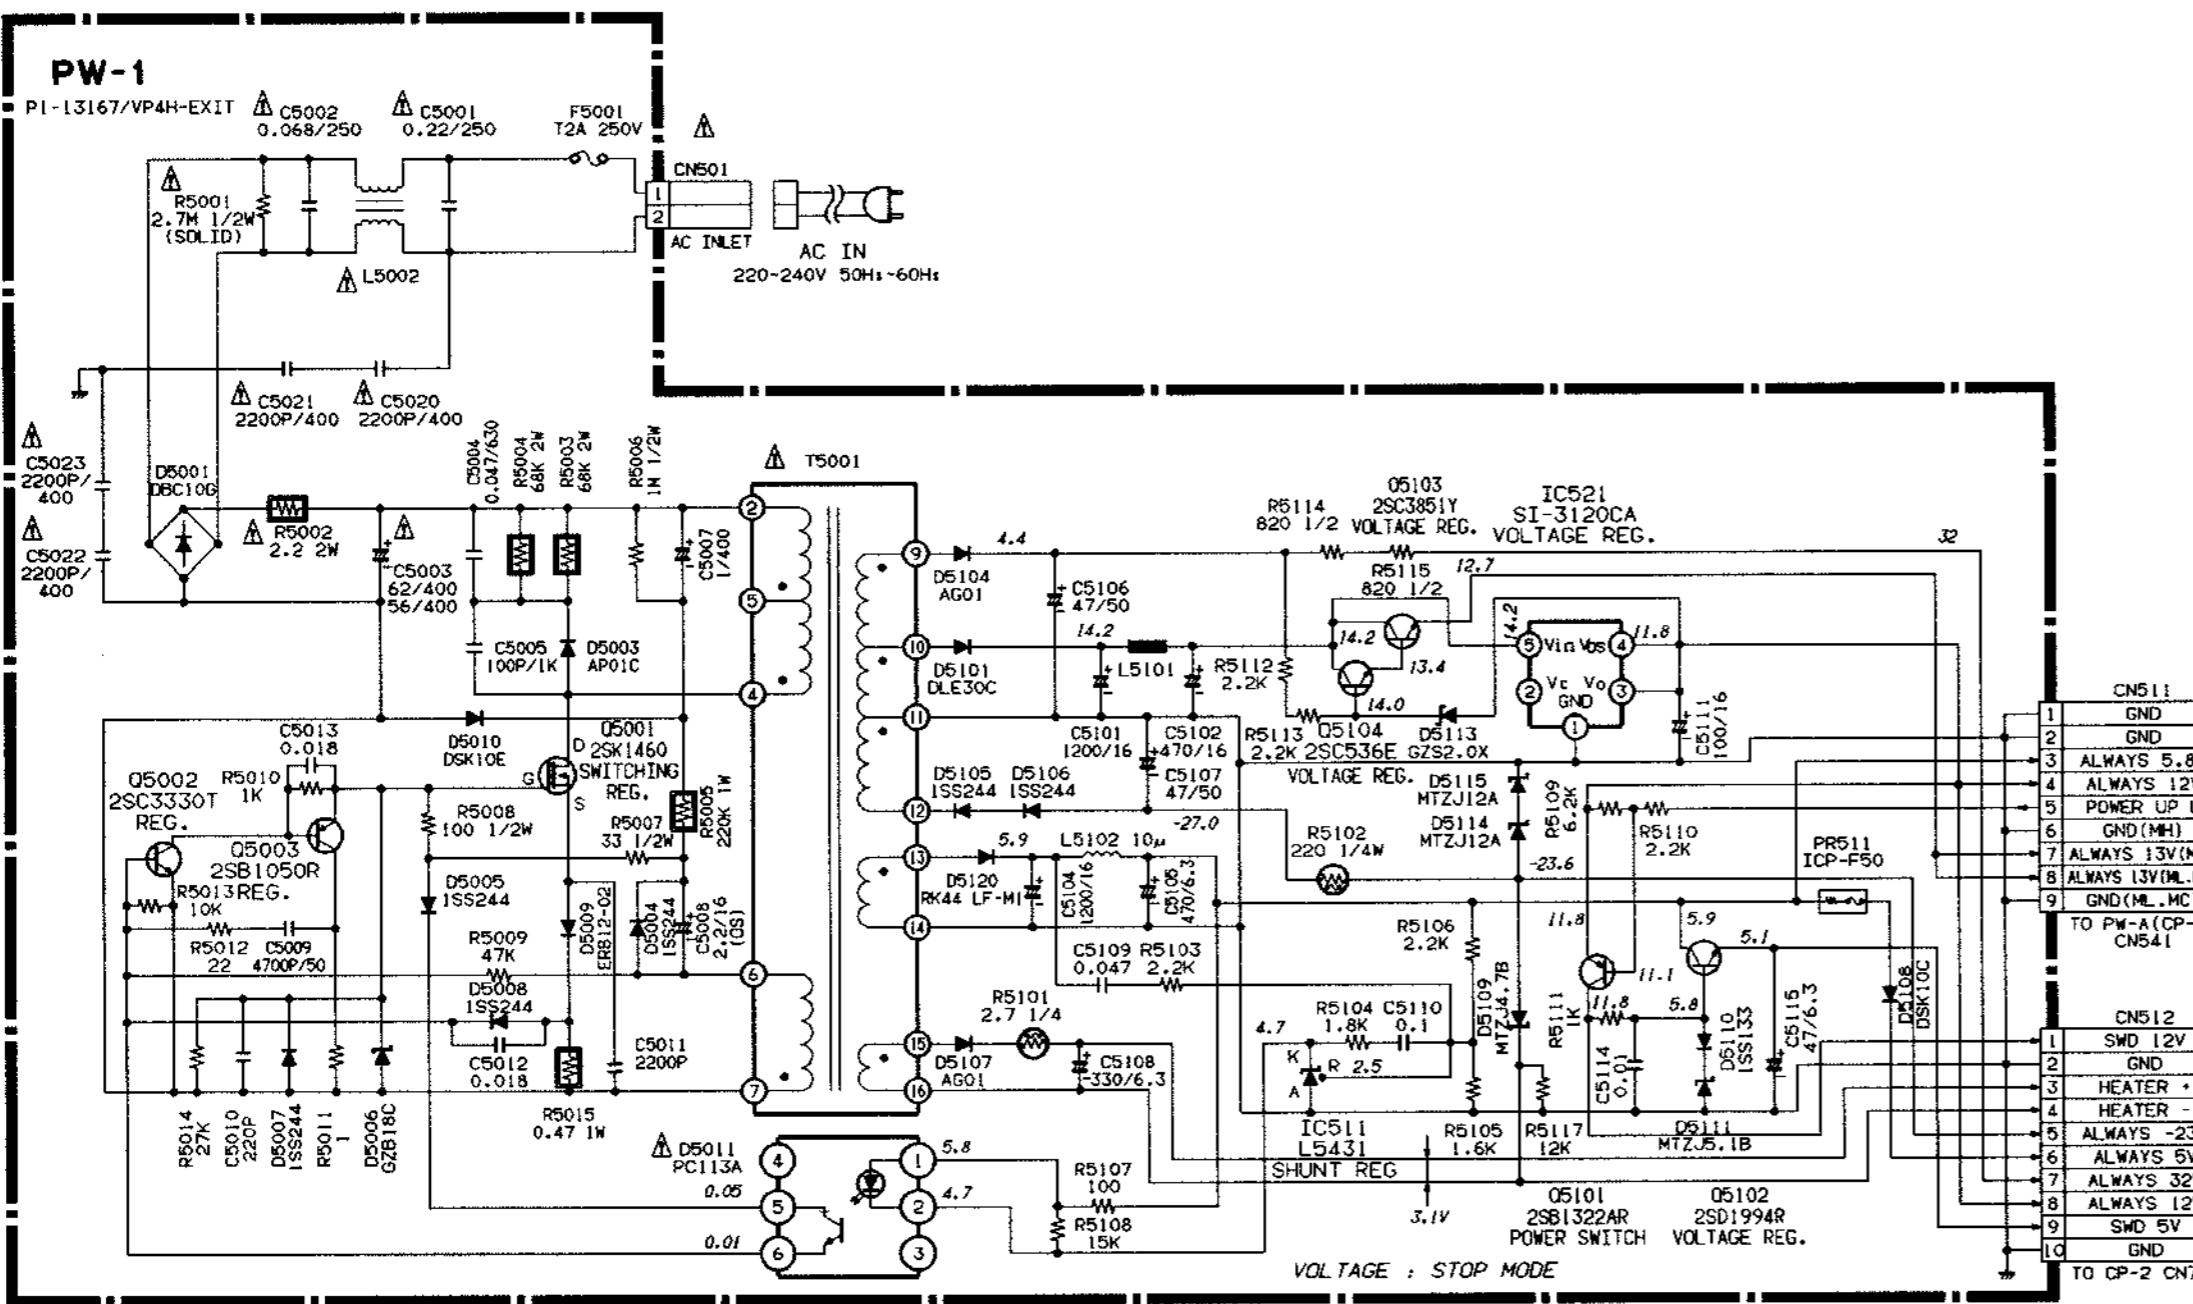

9-2. CP-1 BOARD (PW-A) POWER SUPPLY CIRCUIT DIAGRAM

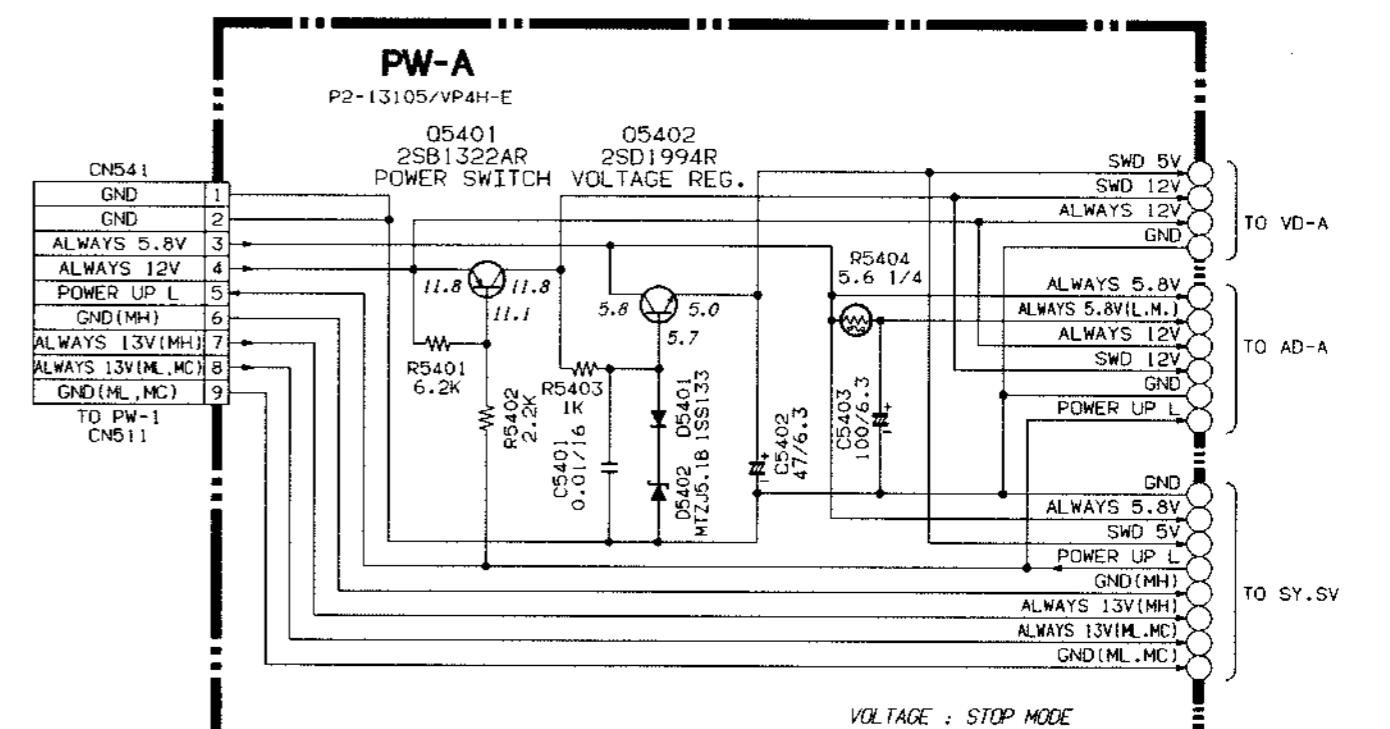

9-3. CP-1 BOARD (VD-A) VIDEO CIRCUIT DIAGRAM

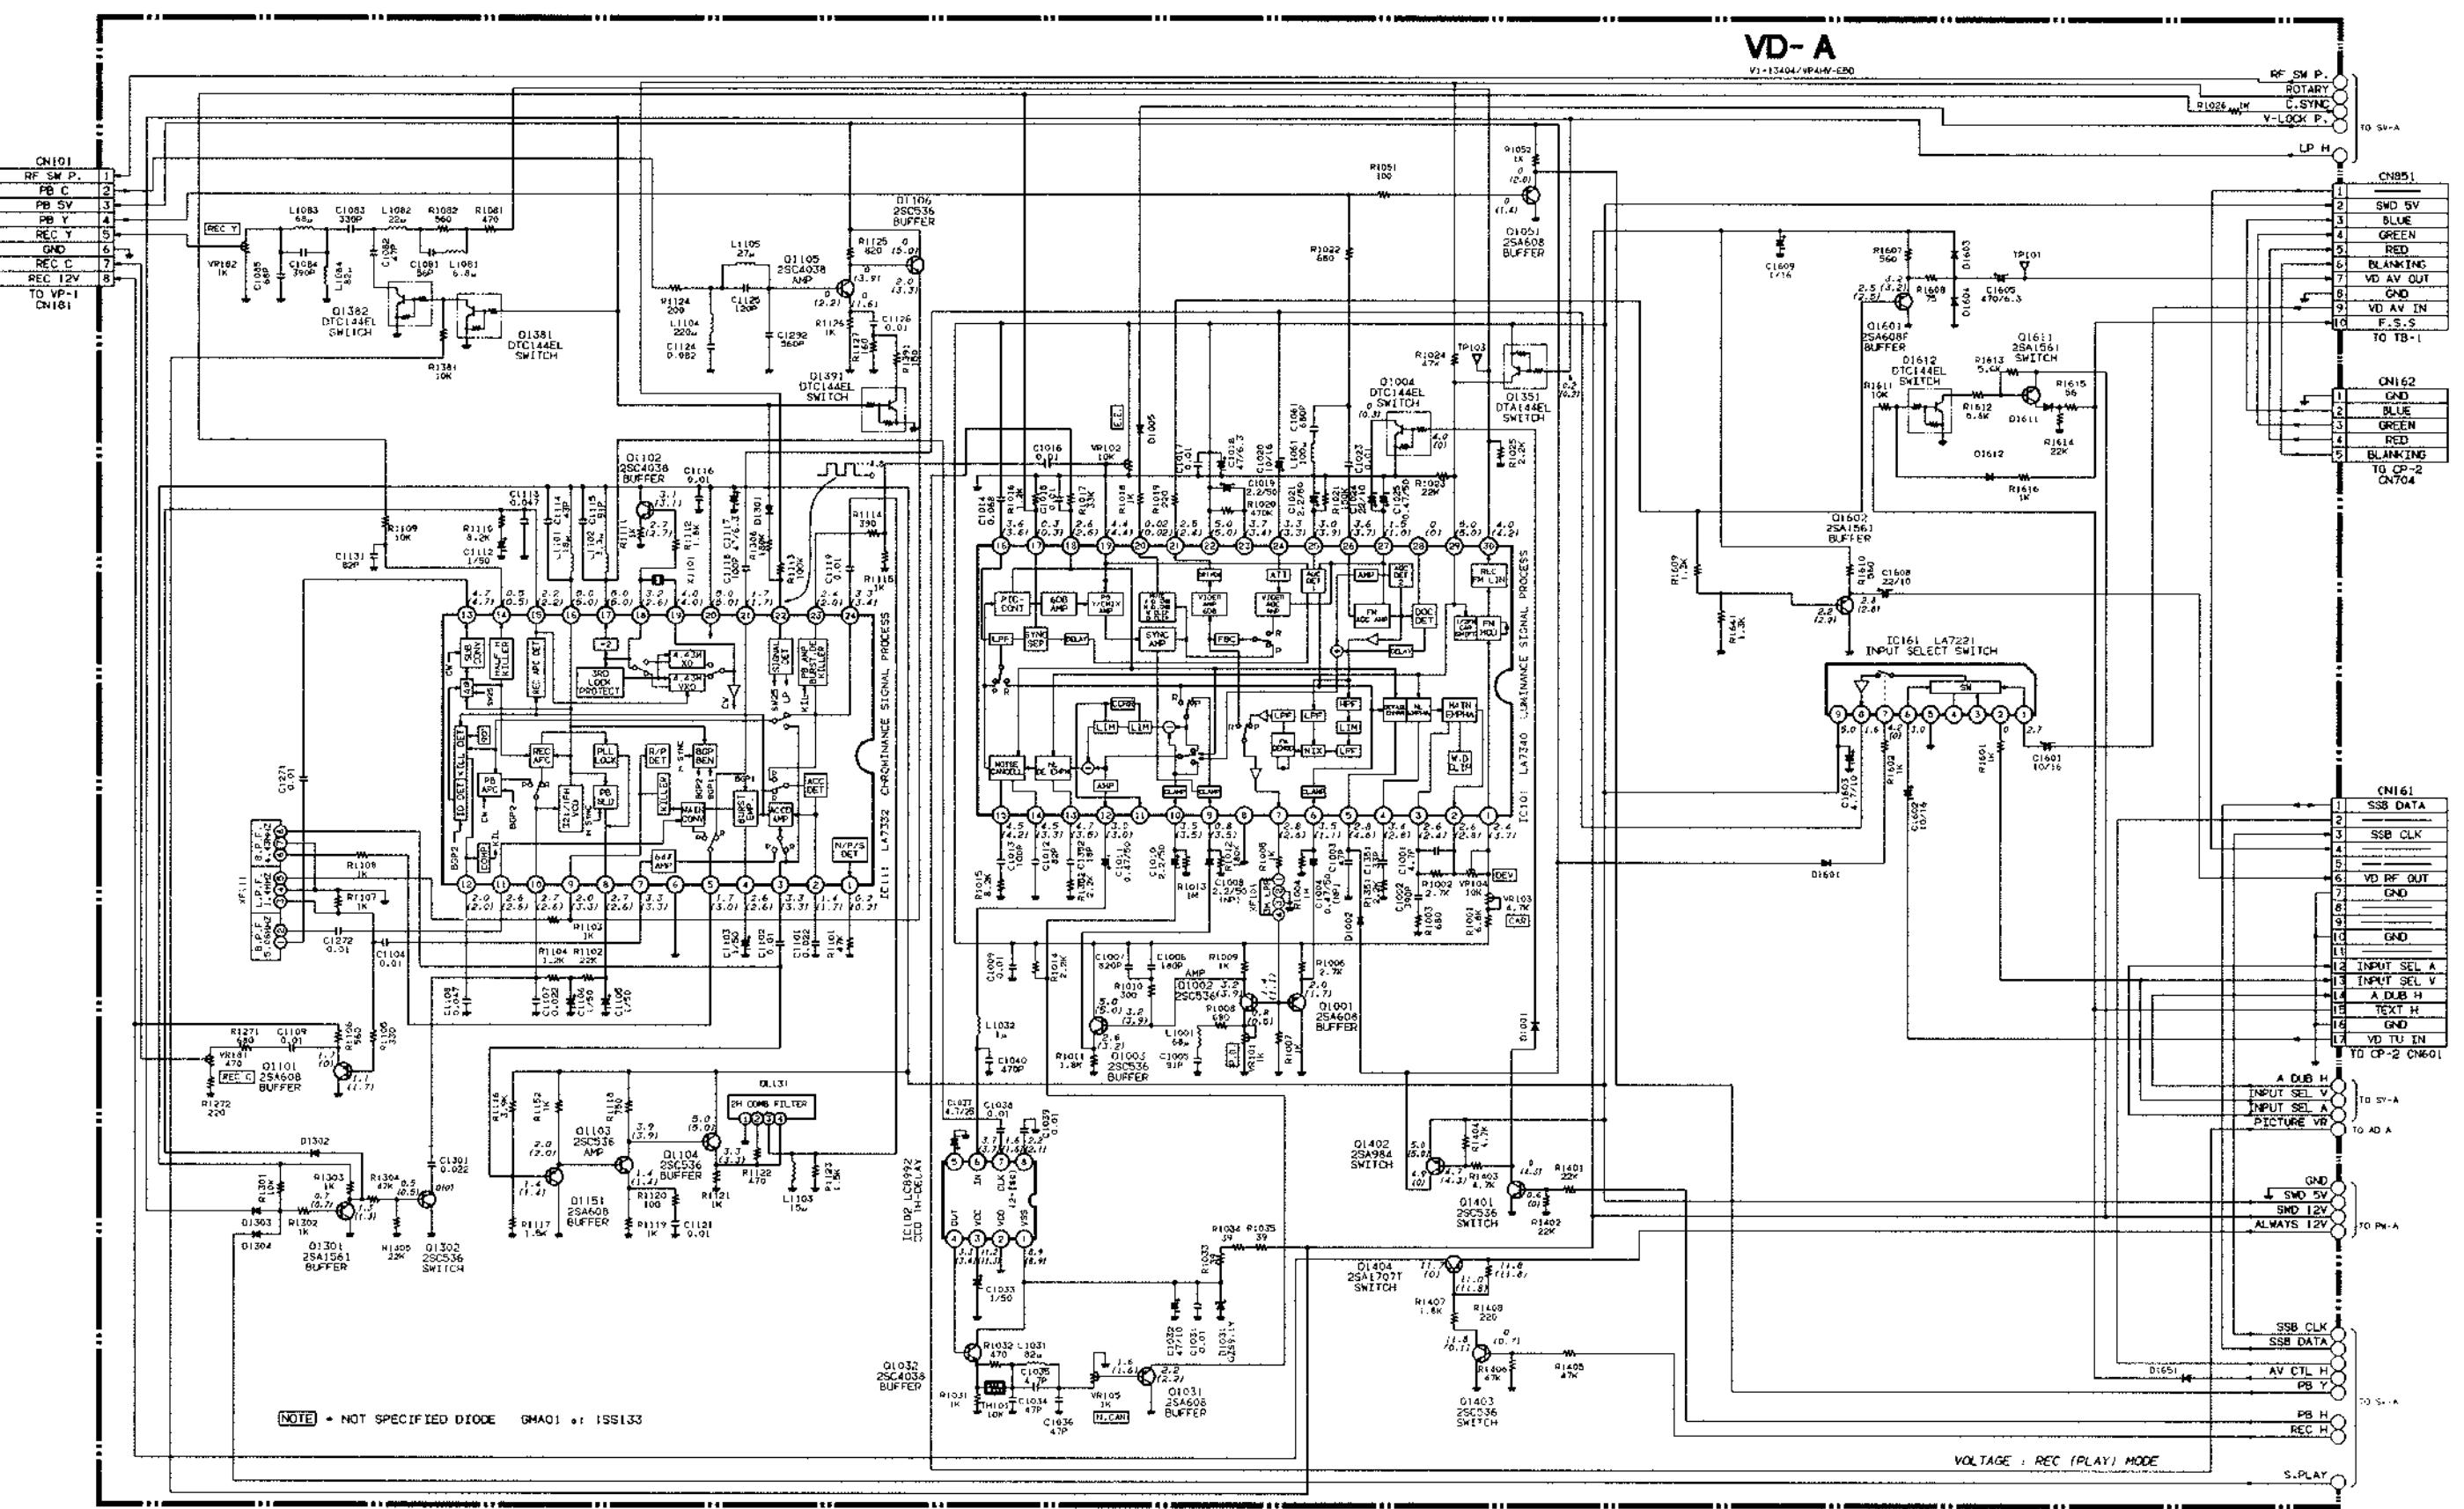


9-4. WAVEFORM OF VIDEO


| TEST LOCATION    | WAVEFORM | MODE/LEVEL        | TEST LOCATION                       | WAVEFORM | MODE/LEVEL                          |
|------------------|----------|-------------------|-------------------------------------|----------|-------------------------------------|
| IC101 Pin 24     |          | REC, EE 1 Vp-p    | IC101 Pin 21                        |          | REC, EE 2 Vp-p                      |
| IC101 Pin 7      |          | REC, EE 1 Vp-p    | IC101 (UPPER) Pin 21 (LOWER) Pin 20 |          | STILL (UPPER) 2 Vp-p (LOWER) 5 Vp-p |
| IC101 Pin 6      |          | REC, EE 0.45 Vp-p | IC111 Pin 21                        |          | REC, EE 1 Vp-p                      |
| IC101 Pin 2      |          | REC, EE 1.3 Vp-p  | IC111 Pin 3                         |          | REC, EE 0.14 Vp-p                   |
| IC101 Pin 30     |          | REC, EE 1.5 Vp-p  | IC111 Pin 9                         |          | REC, EE 0.8 Vp-p                    |
| IC101 Pin 26     |          | PB 0.8 Vp-p       | Q1105 Base                          |          | PB 0.1 Vp-p                         |
| IC101 Pin 7      |          | PB 2.0 Vp-p       | Q1108 Emitter                       |          | PB 1.2 Vp-p                         |
| Q1002 Base       |          | PB 0.5 Vp-p       | IC111 Pin 7                         |          | PB 0.5 Vp-p                         |
| IC101 Pin 9      |          | PB 0.6 Vp-p       | IC111 Pin 5                         |          | PB 1.2 Vp-p                         |
| IC101 Pins 10/12 |          | PB 0.5 Vp-p       | IC111 Pin 24                        |          | PB 0.22 Vp-p                        |
| IC101 Pin 21     |          | PB 2 Vp-p         | IC111 Pin 23                        |          | PB 0.6 Vp-p                         |

WF-V-SP


### 9-5. VP-1 BOARD (VP-A) VIDEO PRE-AMP CIRCUIT DIAGRAM

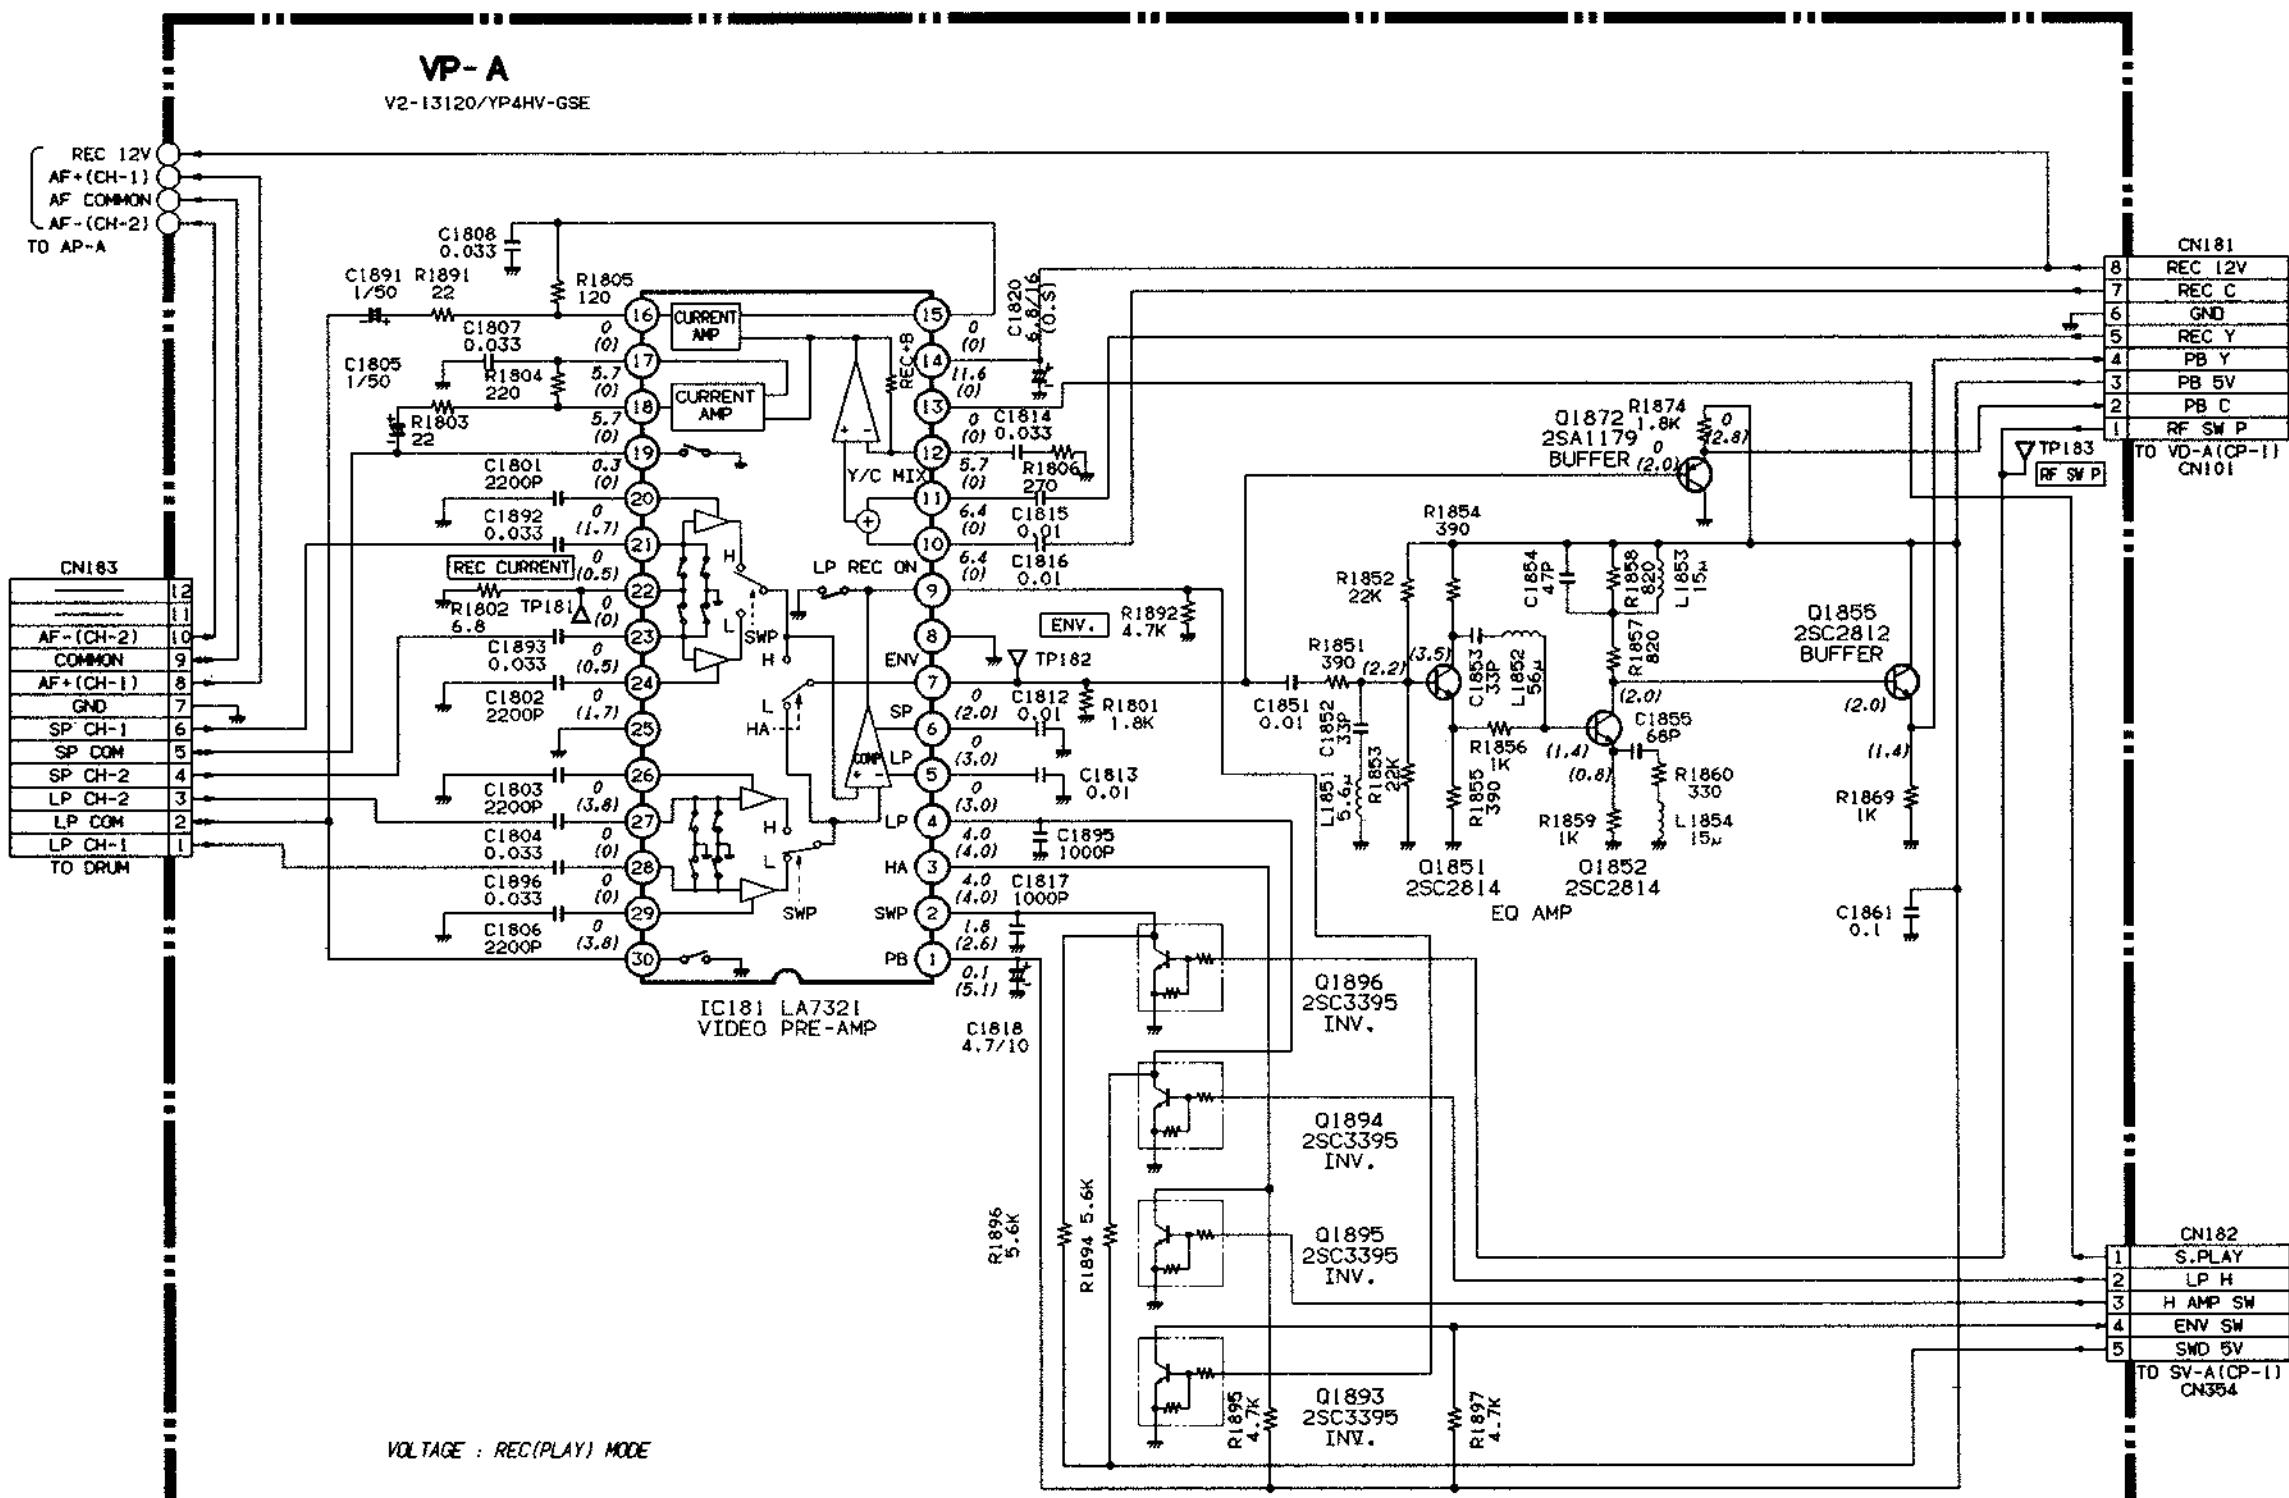


## 9-6. TM-6 BOARD VIDEO TEXT DECODER (VPT) CIRCUIT DIAGRAM

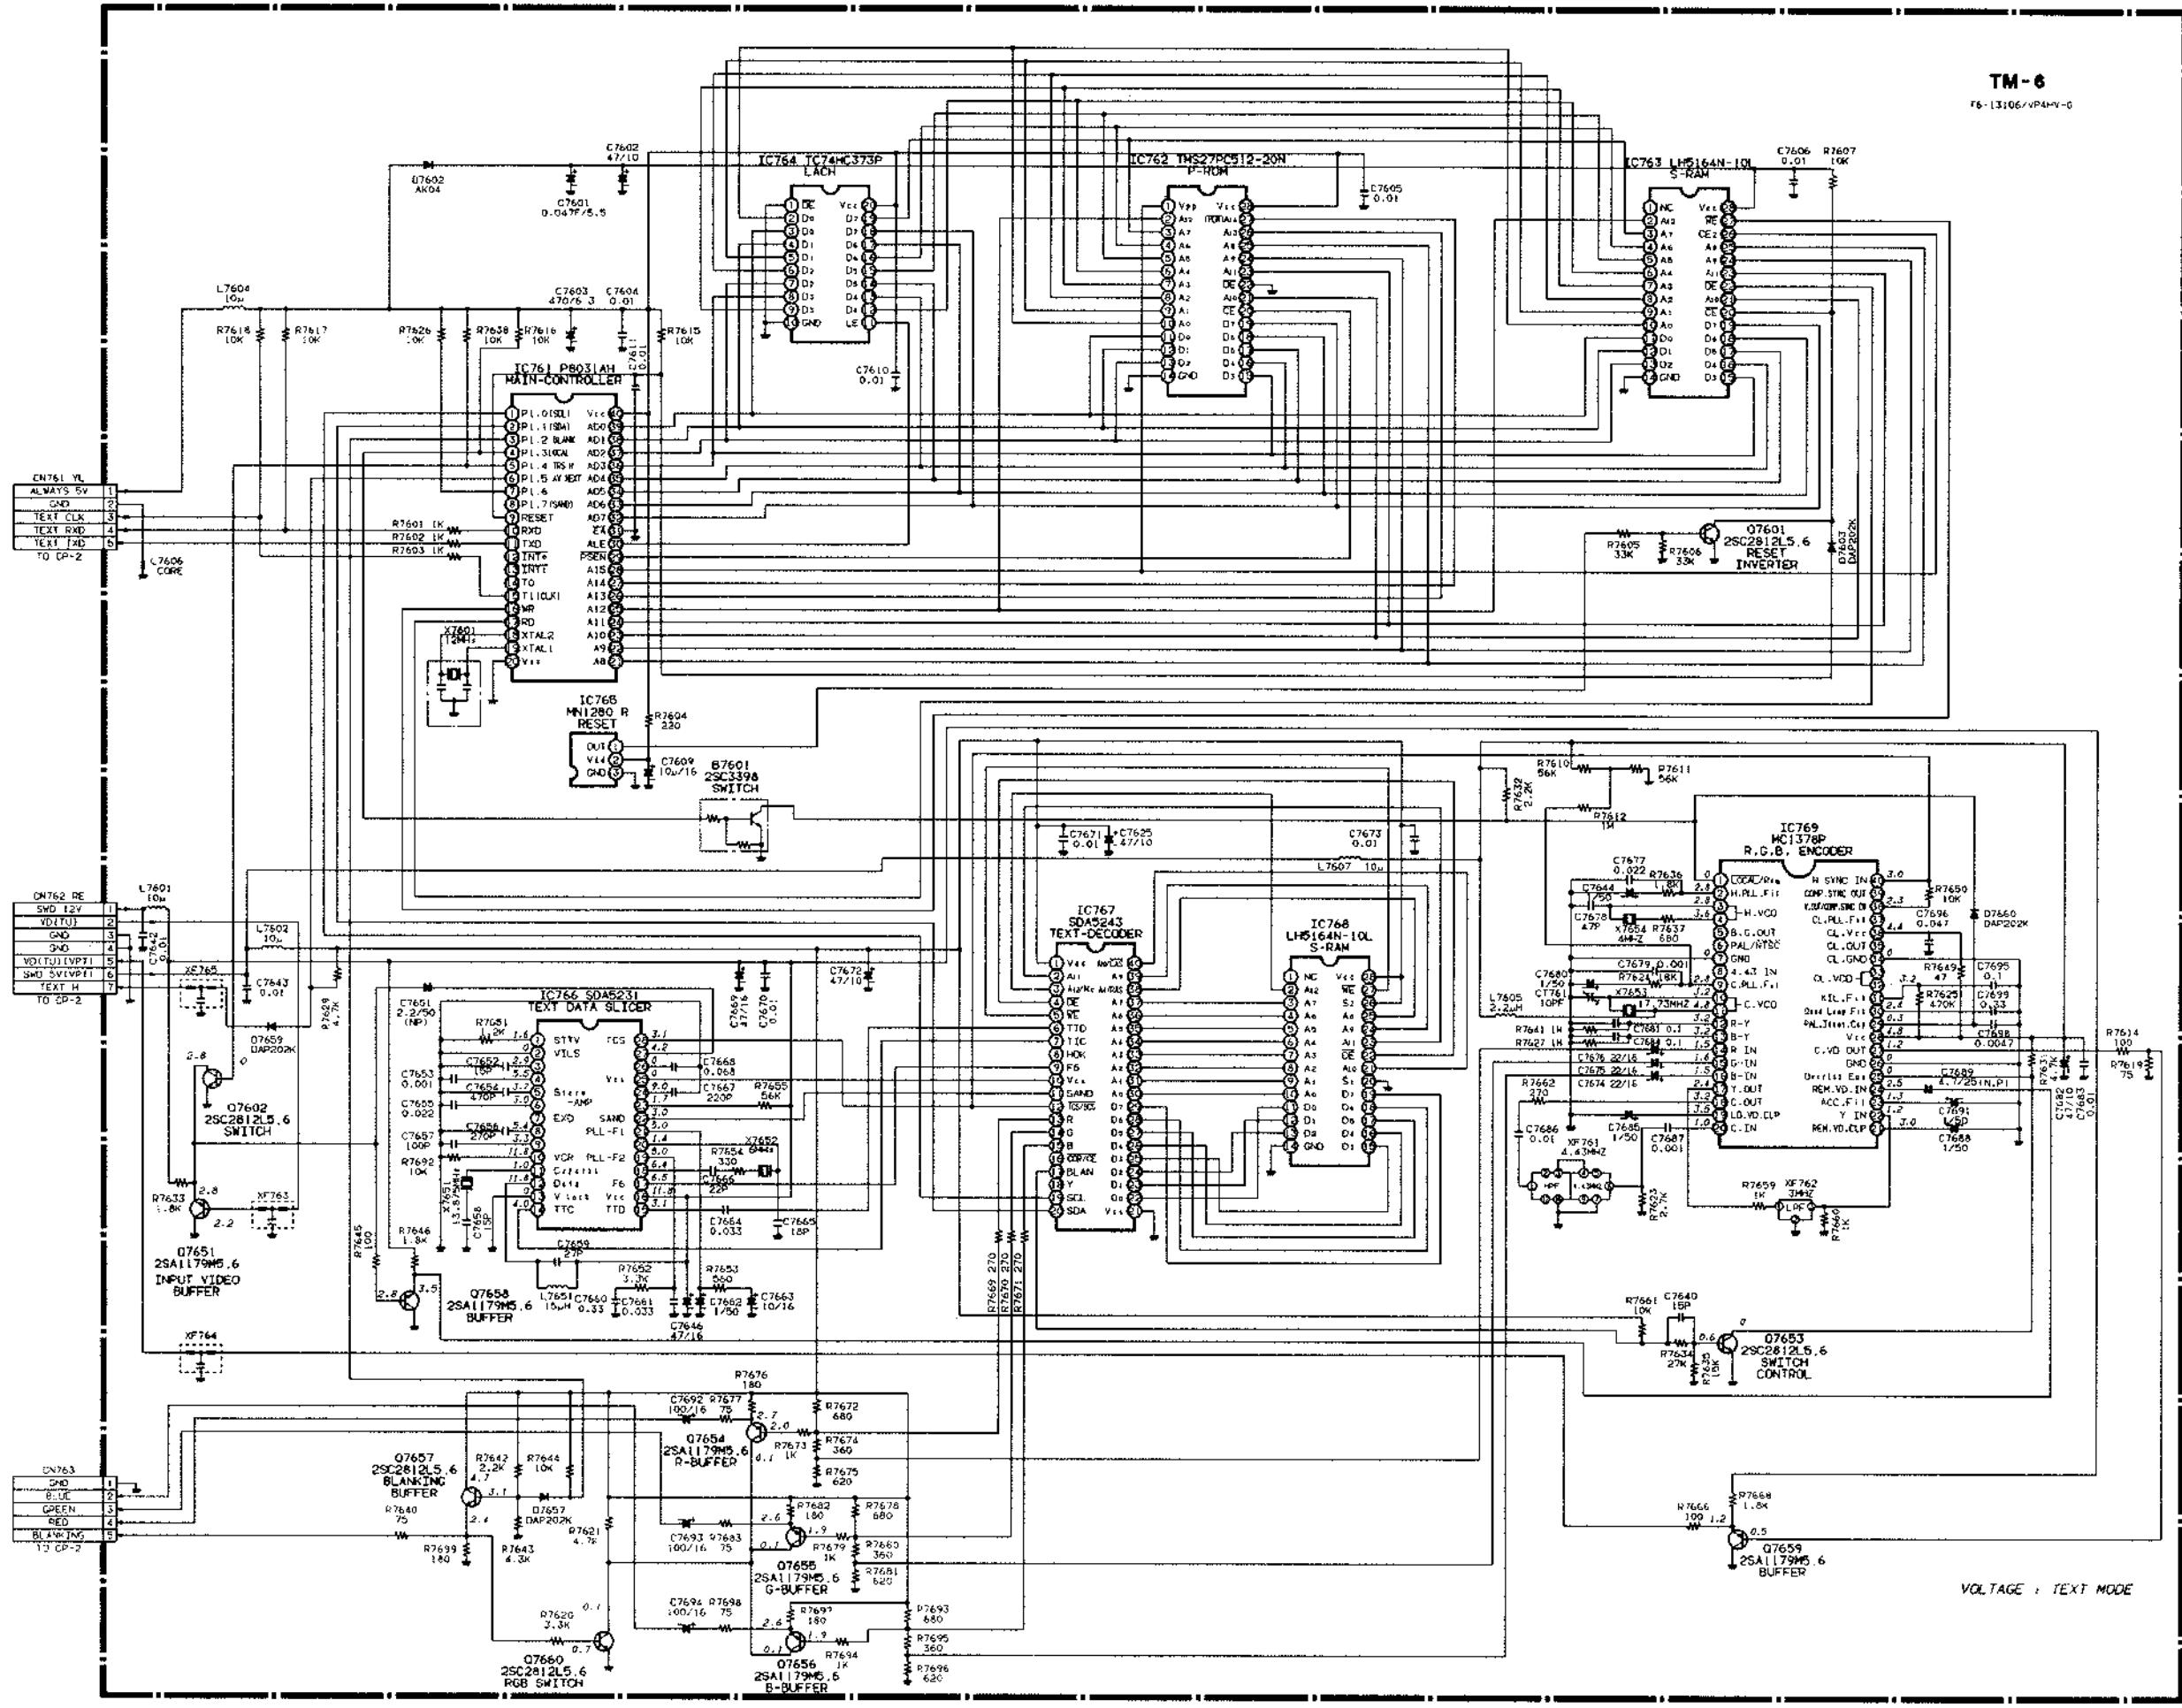

9-7. CP-2 BOARD CONNECTOR CIRCUIT DIAGRAM

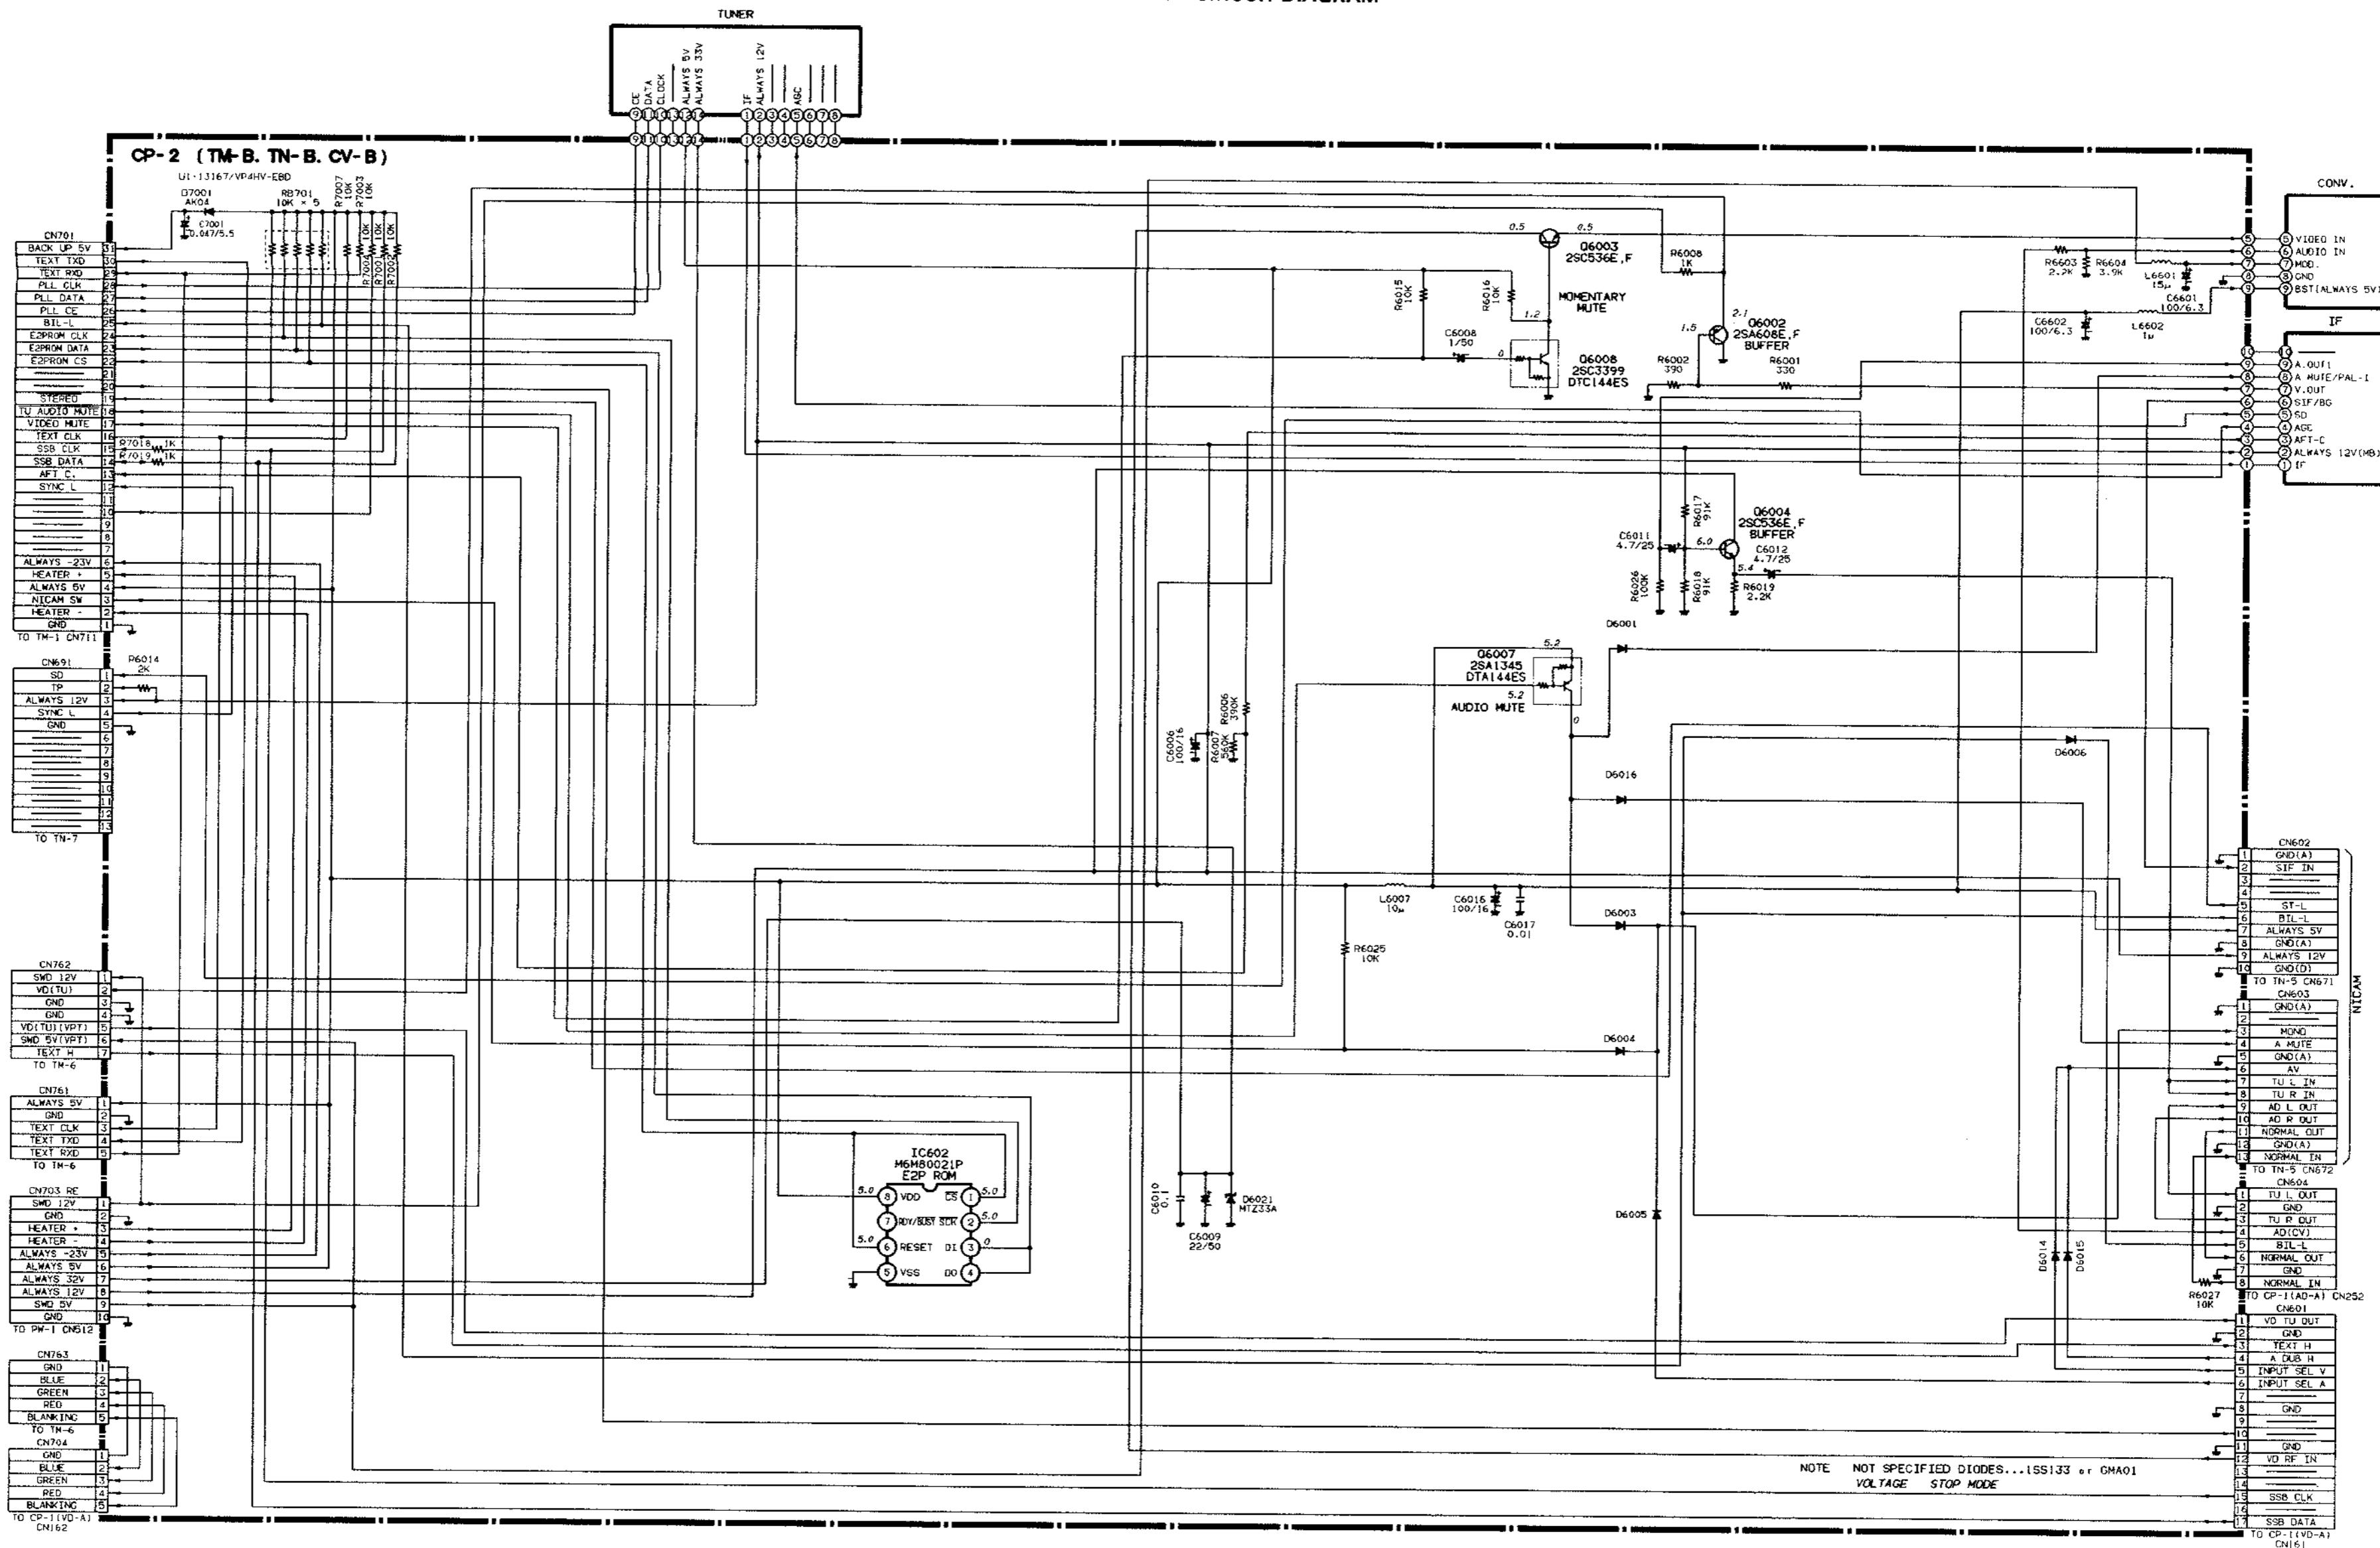


9-8. CP-1 BOARD (AD-A) AUDIO CIRCUIT DIAGRAM

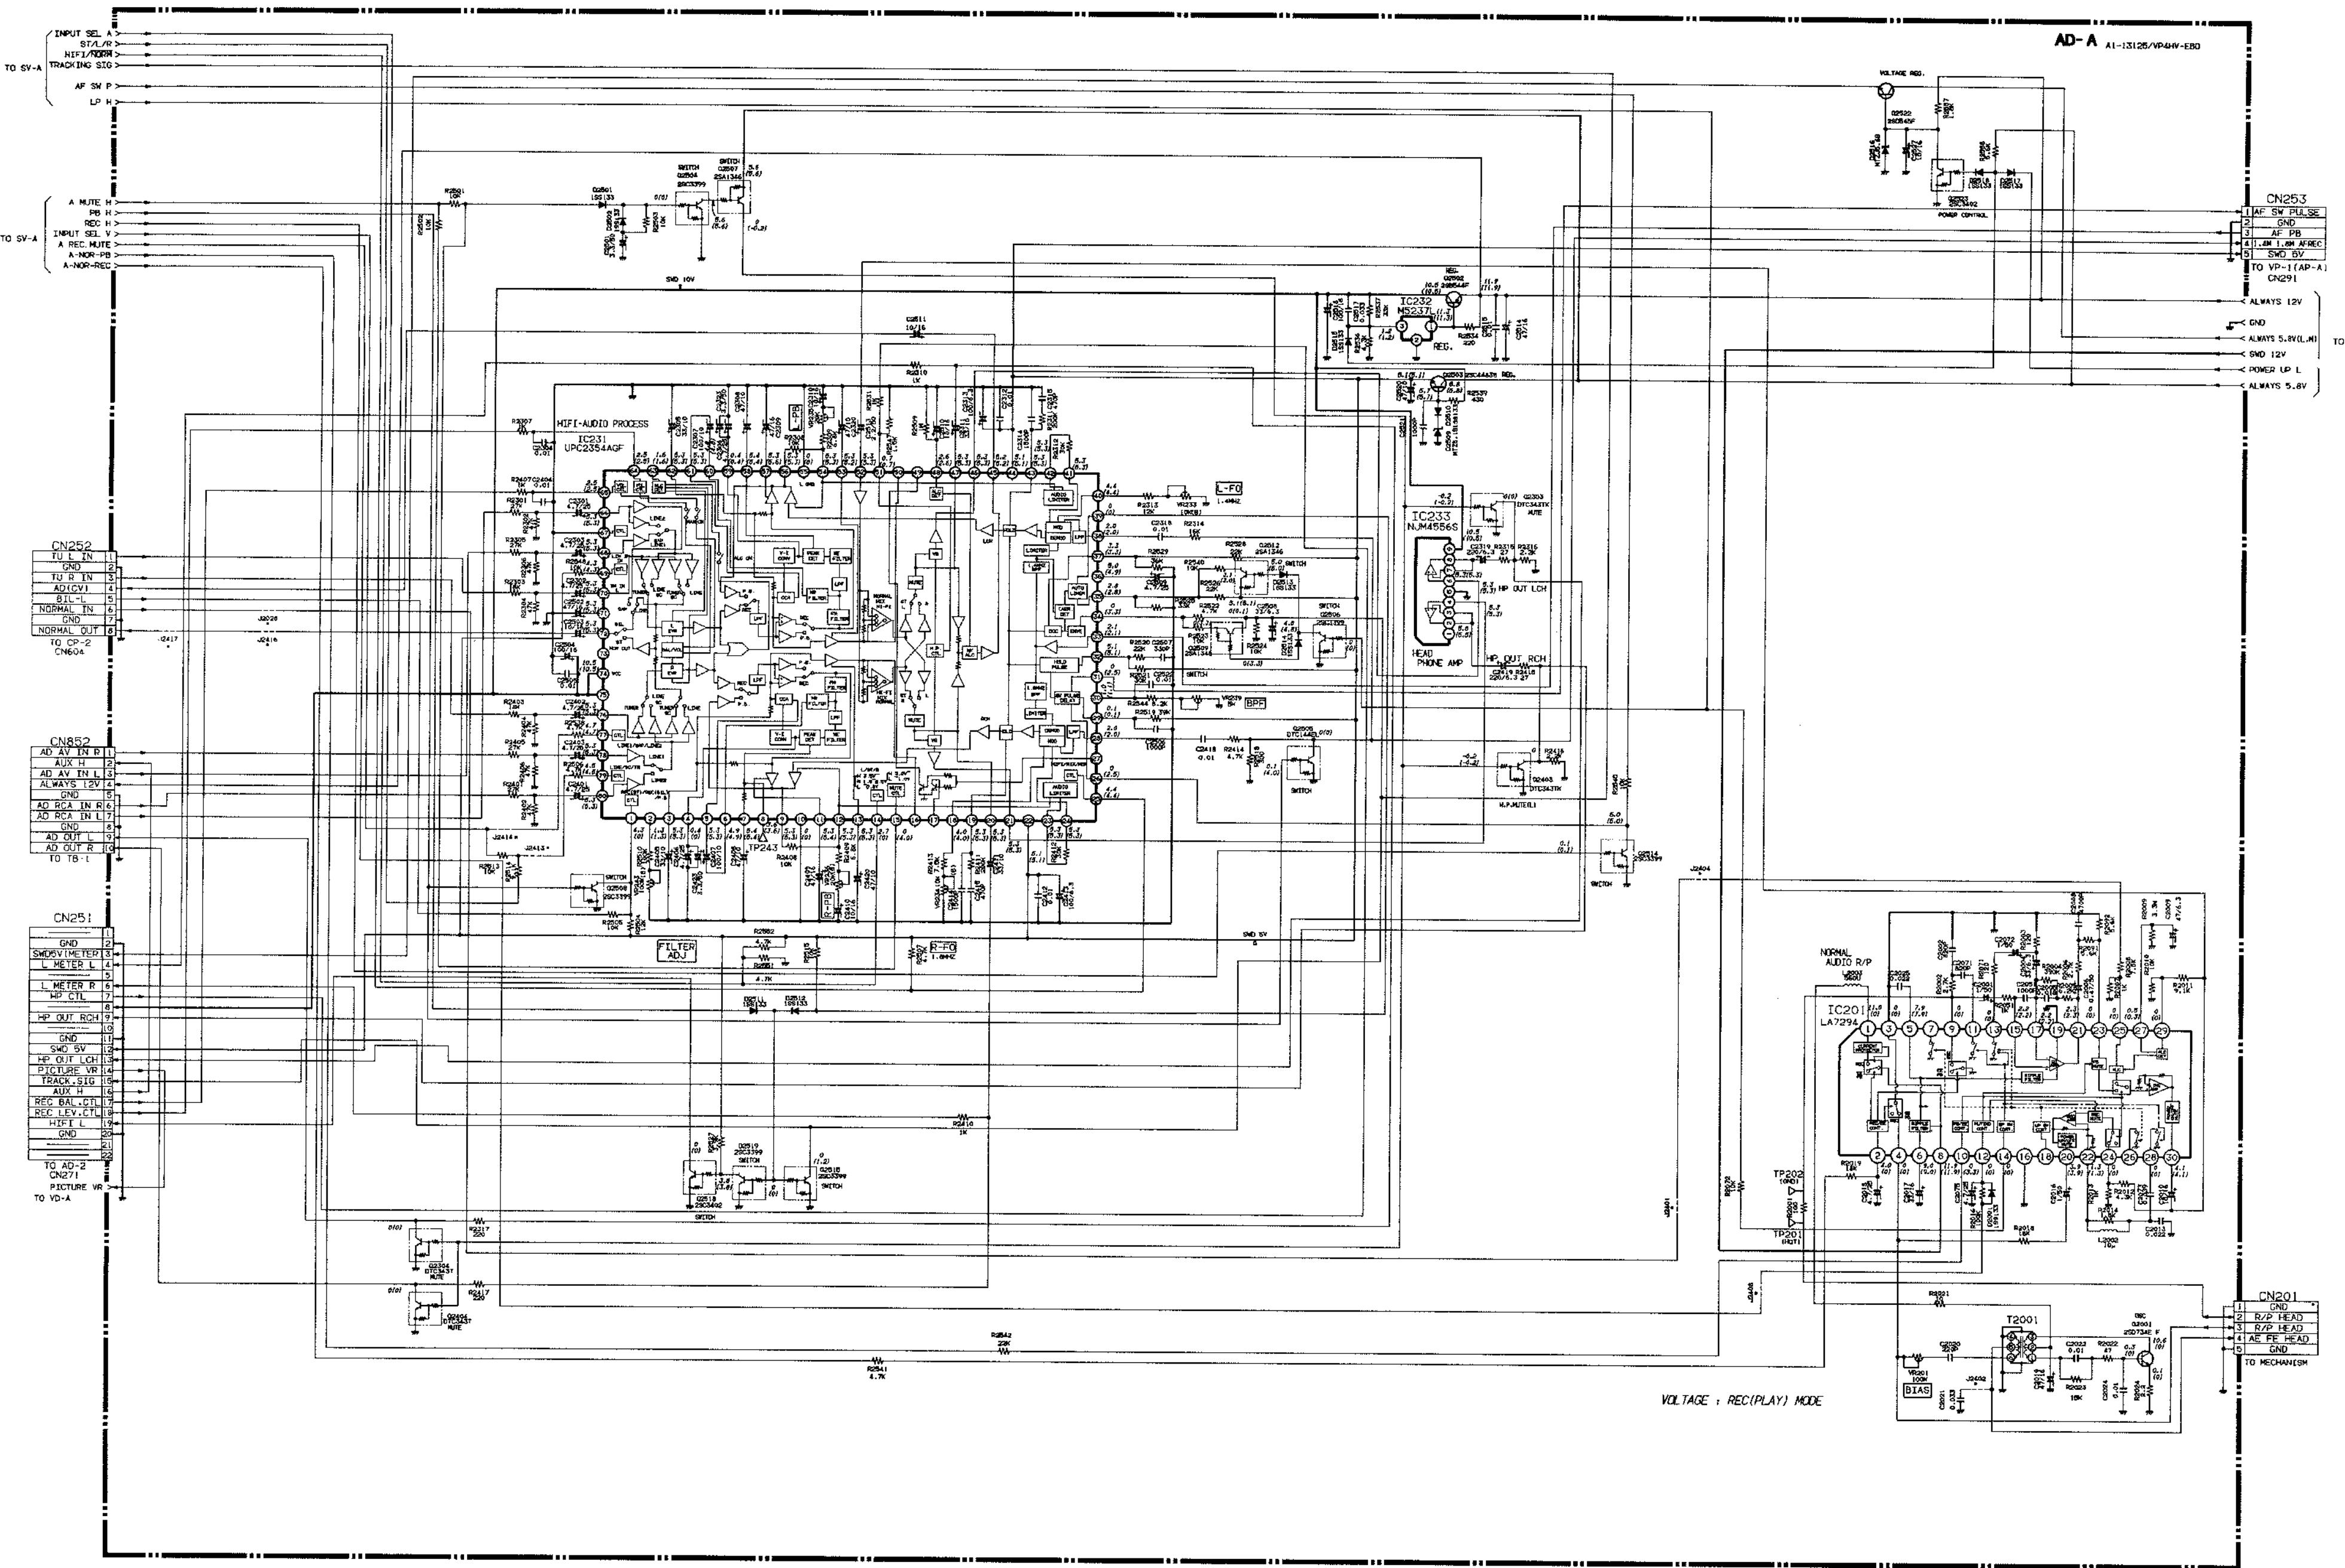


K  
J  
I  
H  
G  
F  
E  
D  
C  
B  
A

9-9. AD-2 BOARD AUDIO LEVEL METER CIRCUIT DIAGRAM

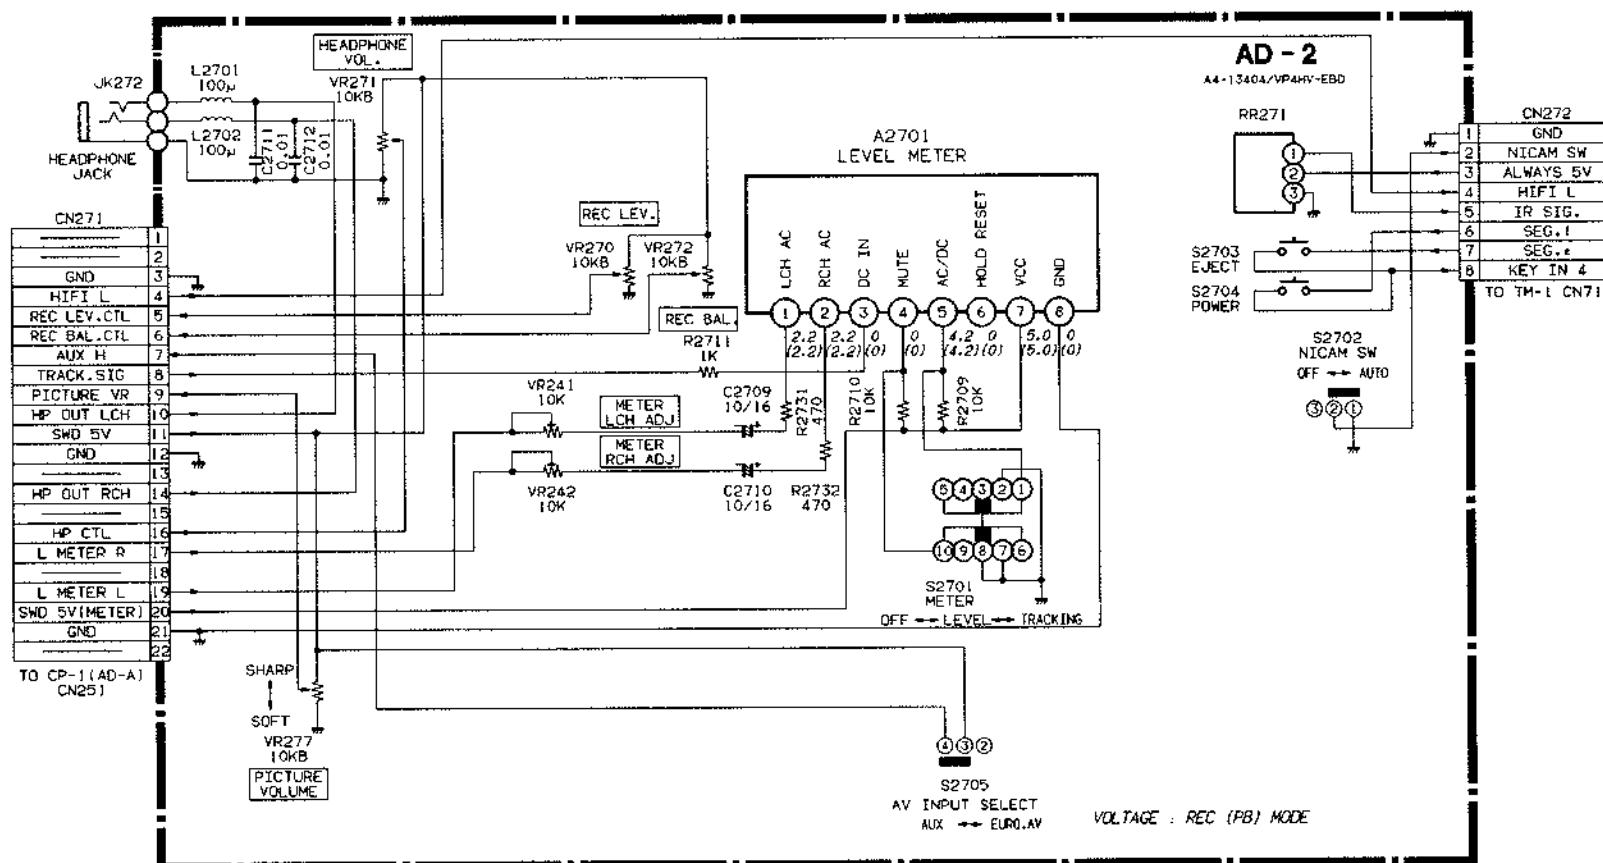


E  
D  
C  
B  
A


9-10. VP-1 BOARD (AP-A) AUDIO PRE-AMP CIRCUIT DIAGRAM

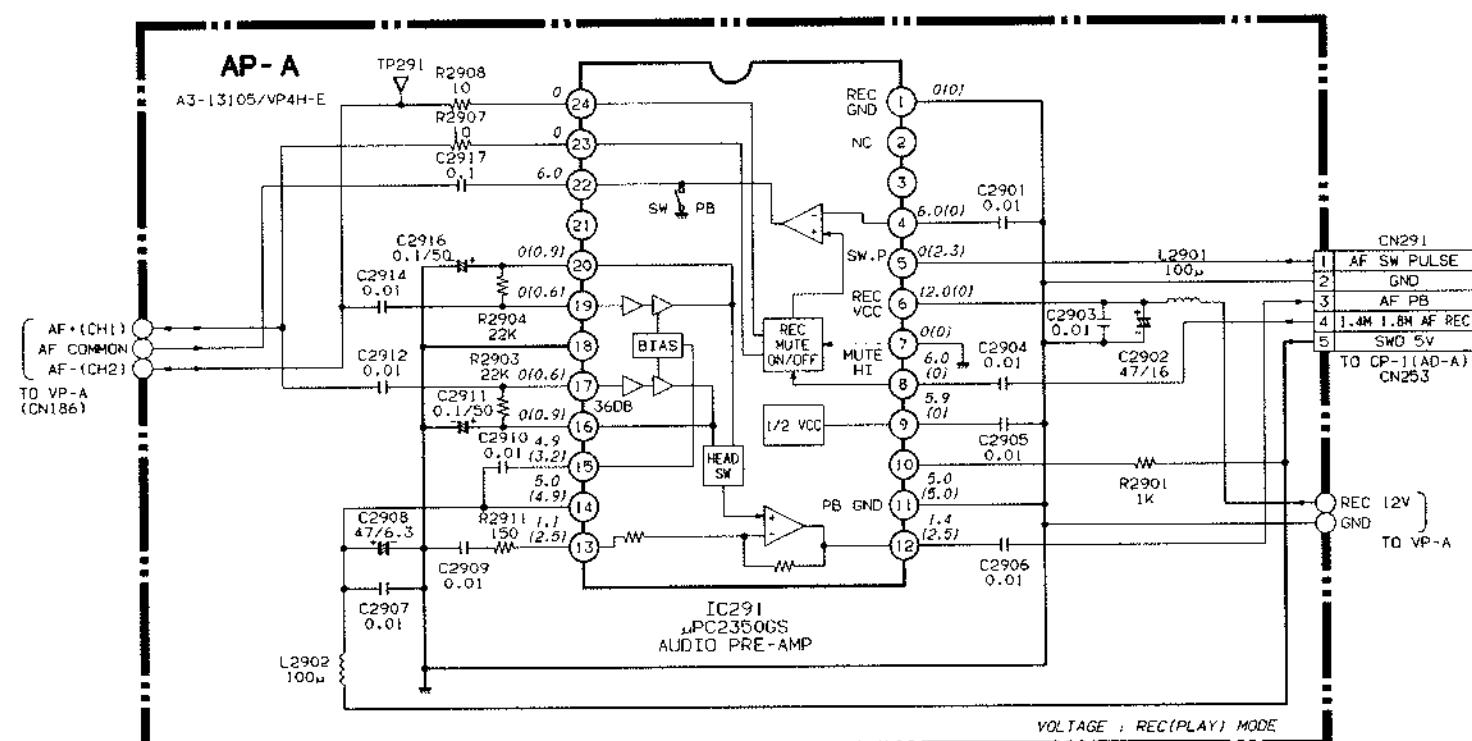


## 9-11. CP-1 BOARD (SV-A) SYSTEM CONTROL & SERVO CIRCUIT DIAGRAM

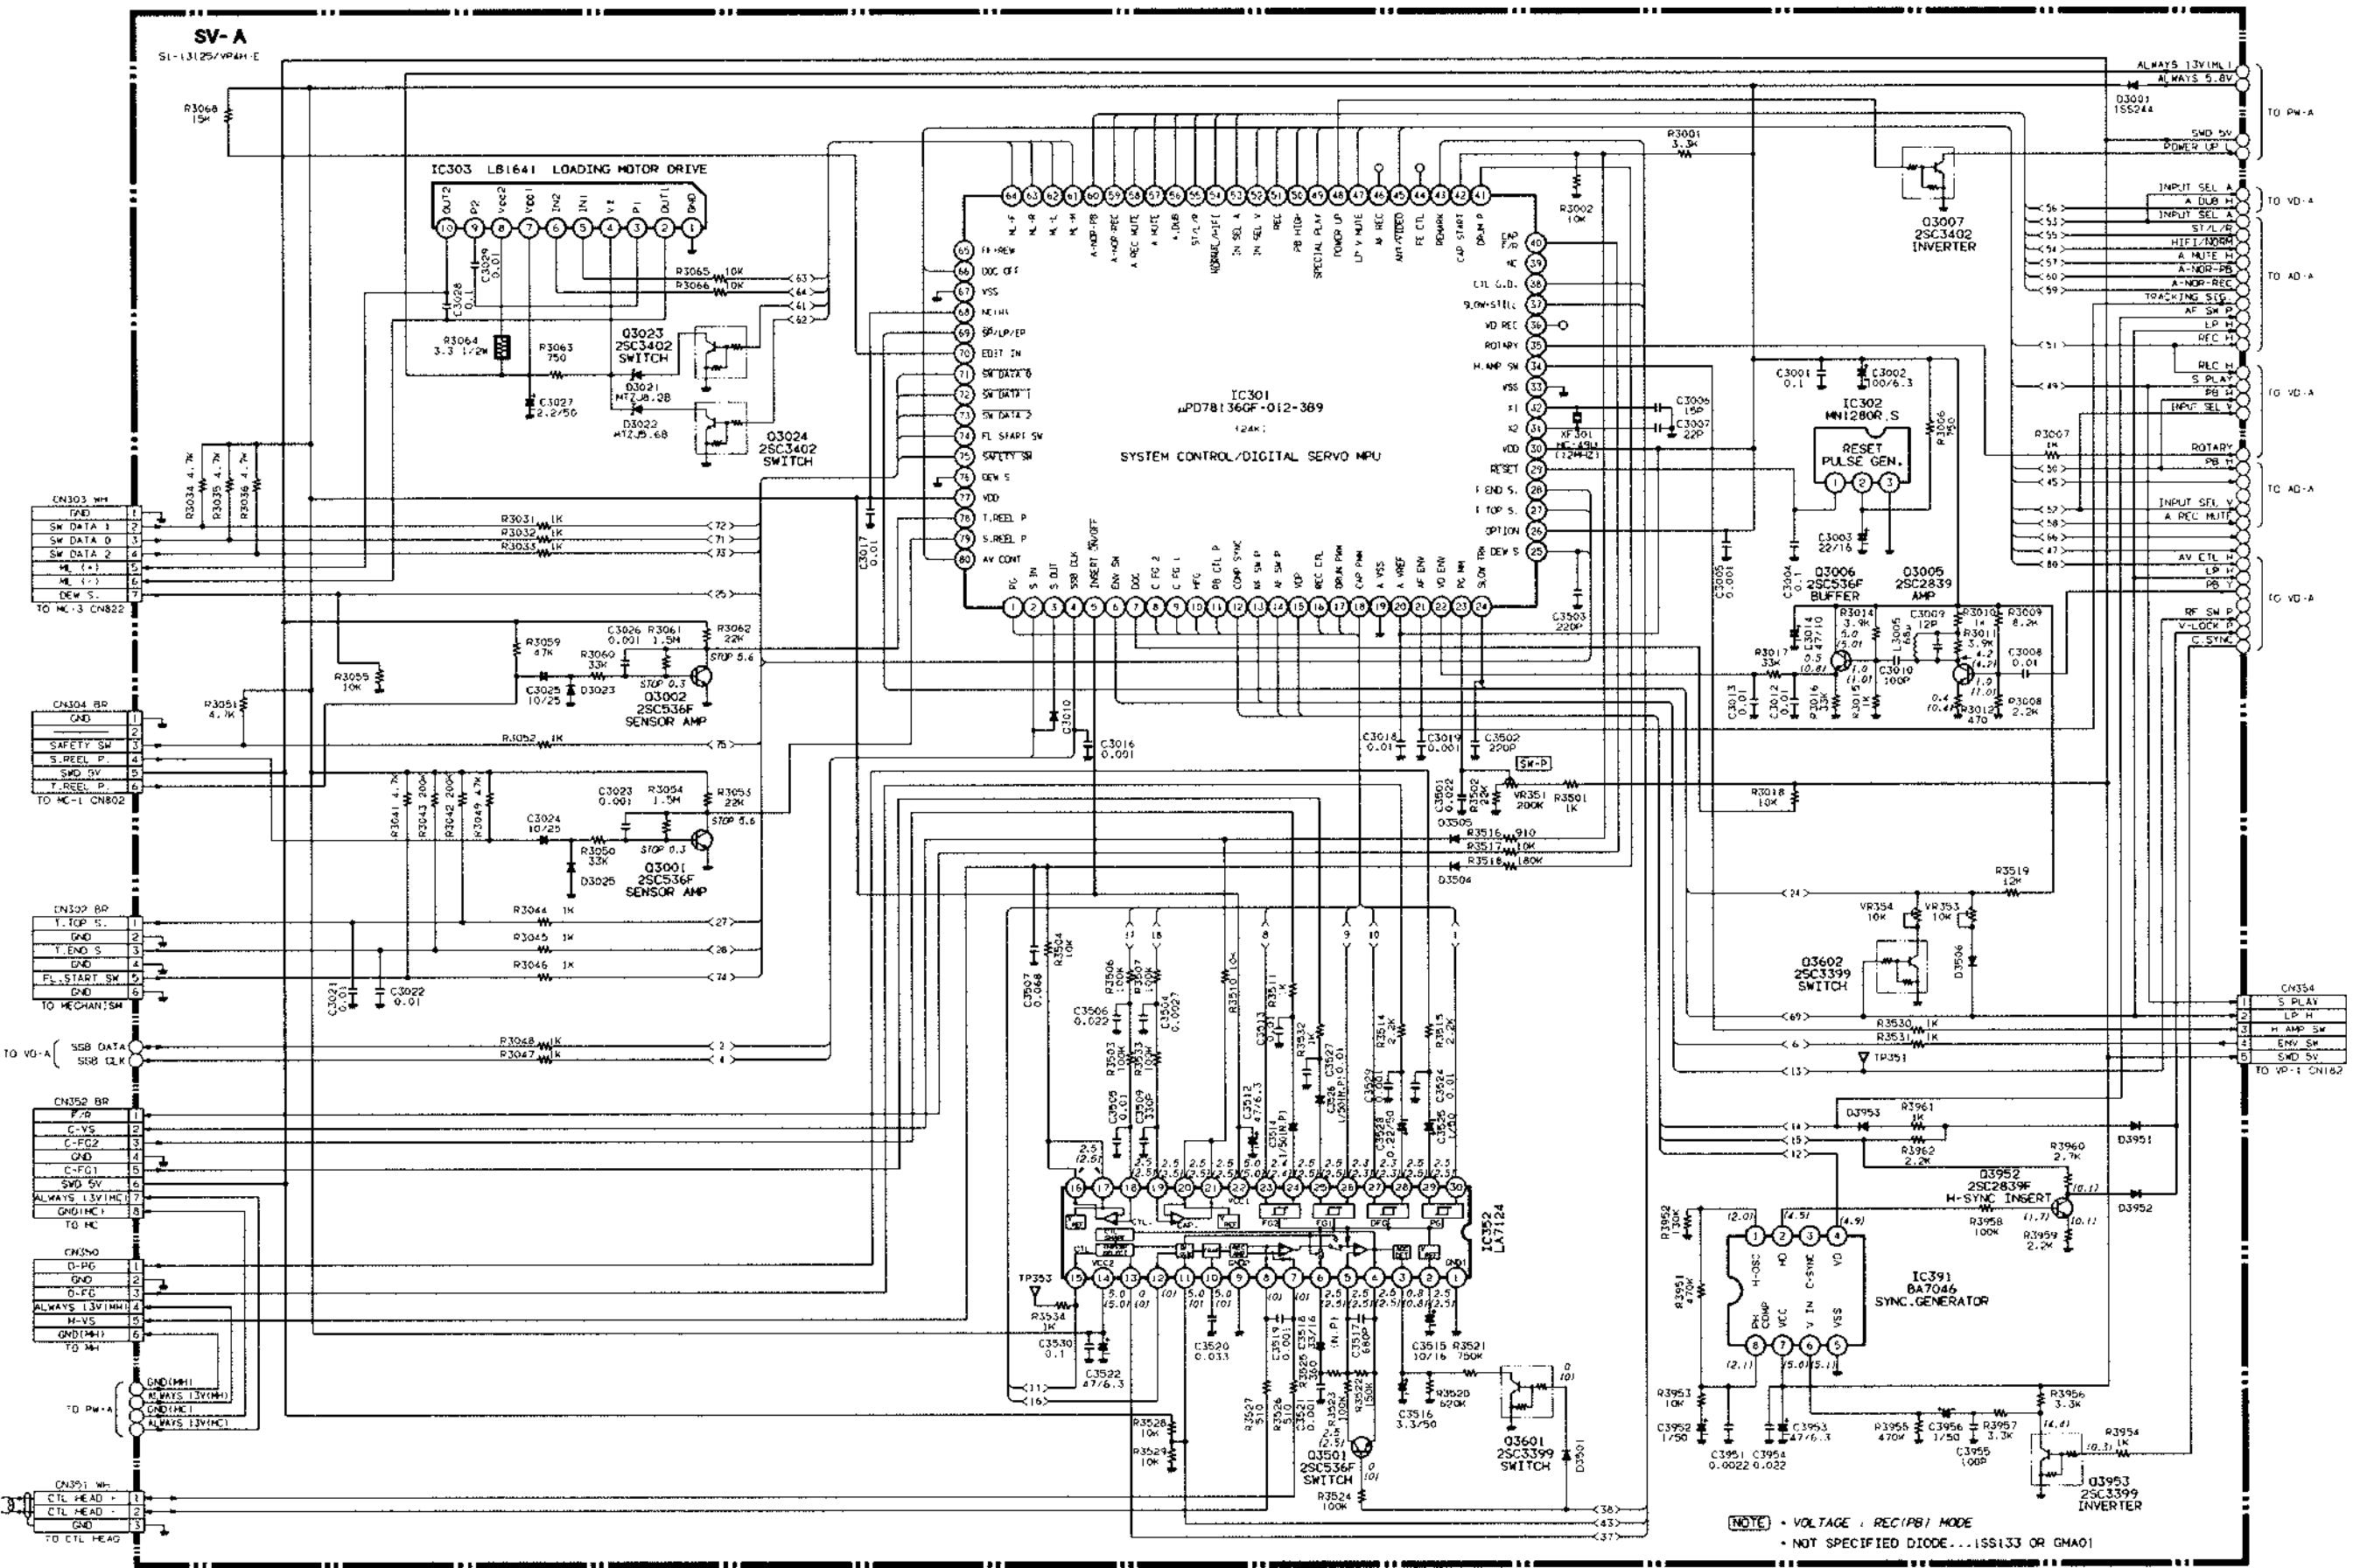

9-12. TB-1 BOARD TERMINAL & INPUT SELECT CIRCUIT DIAGRAM

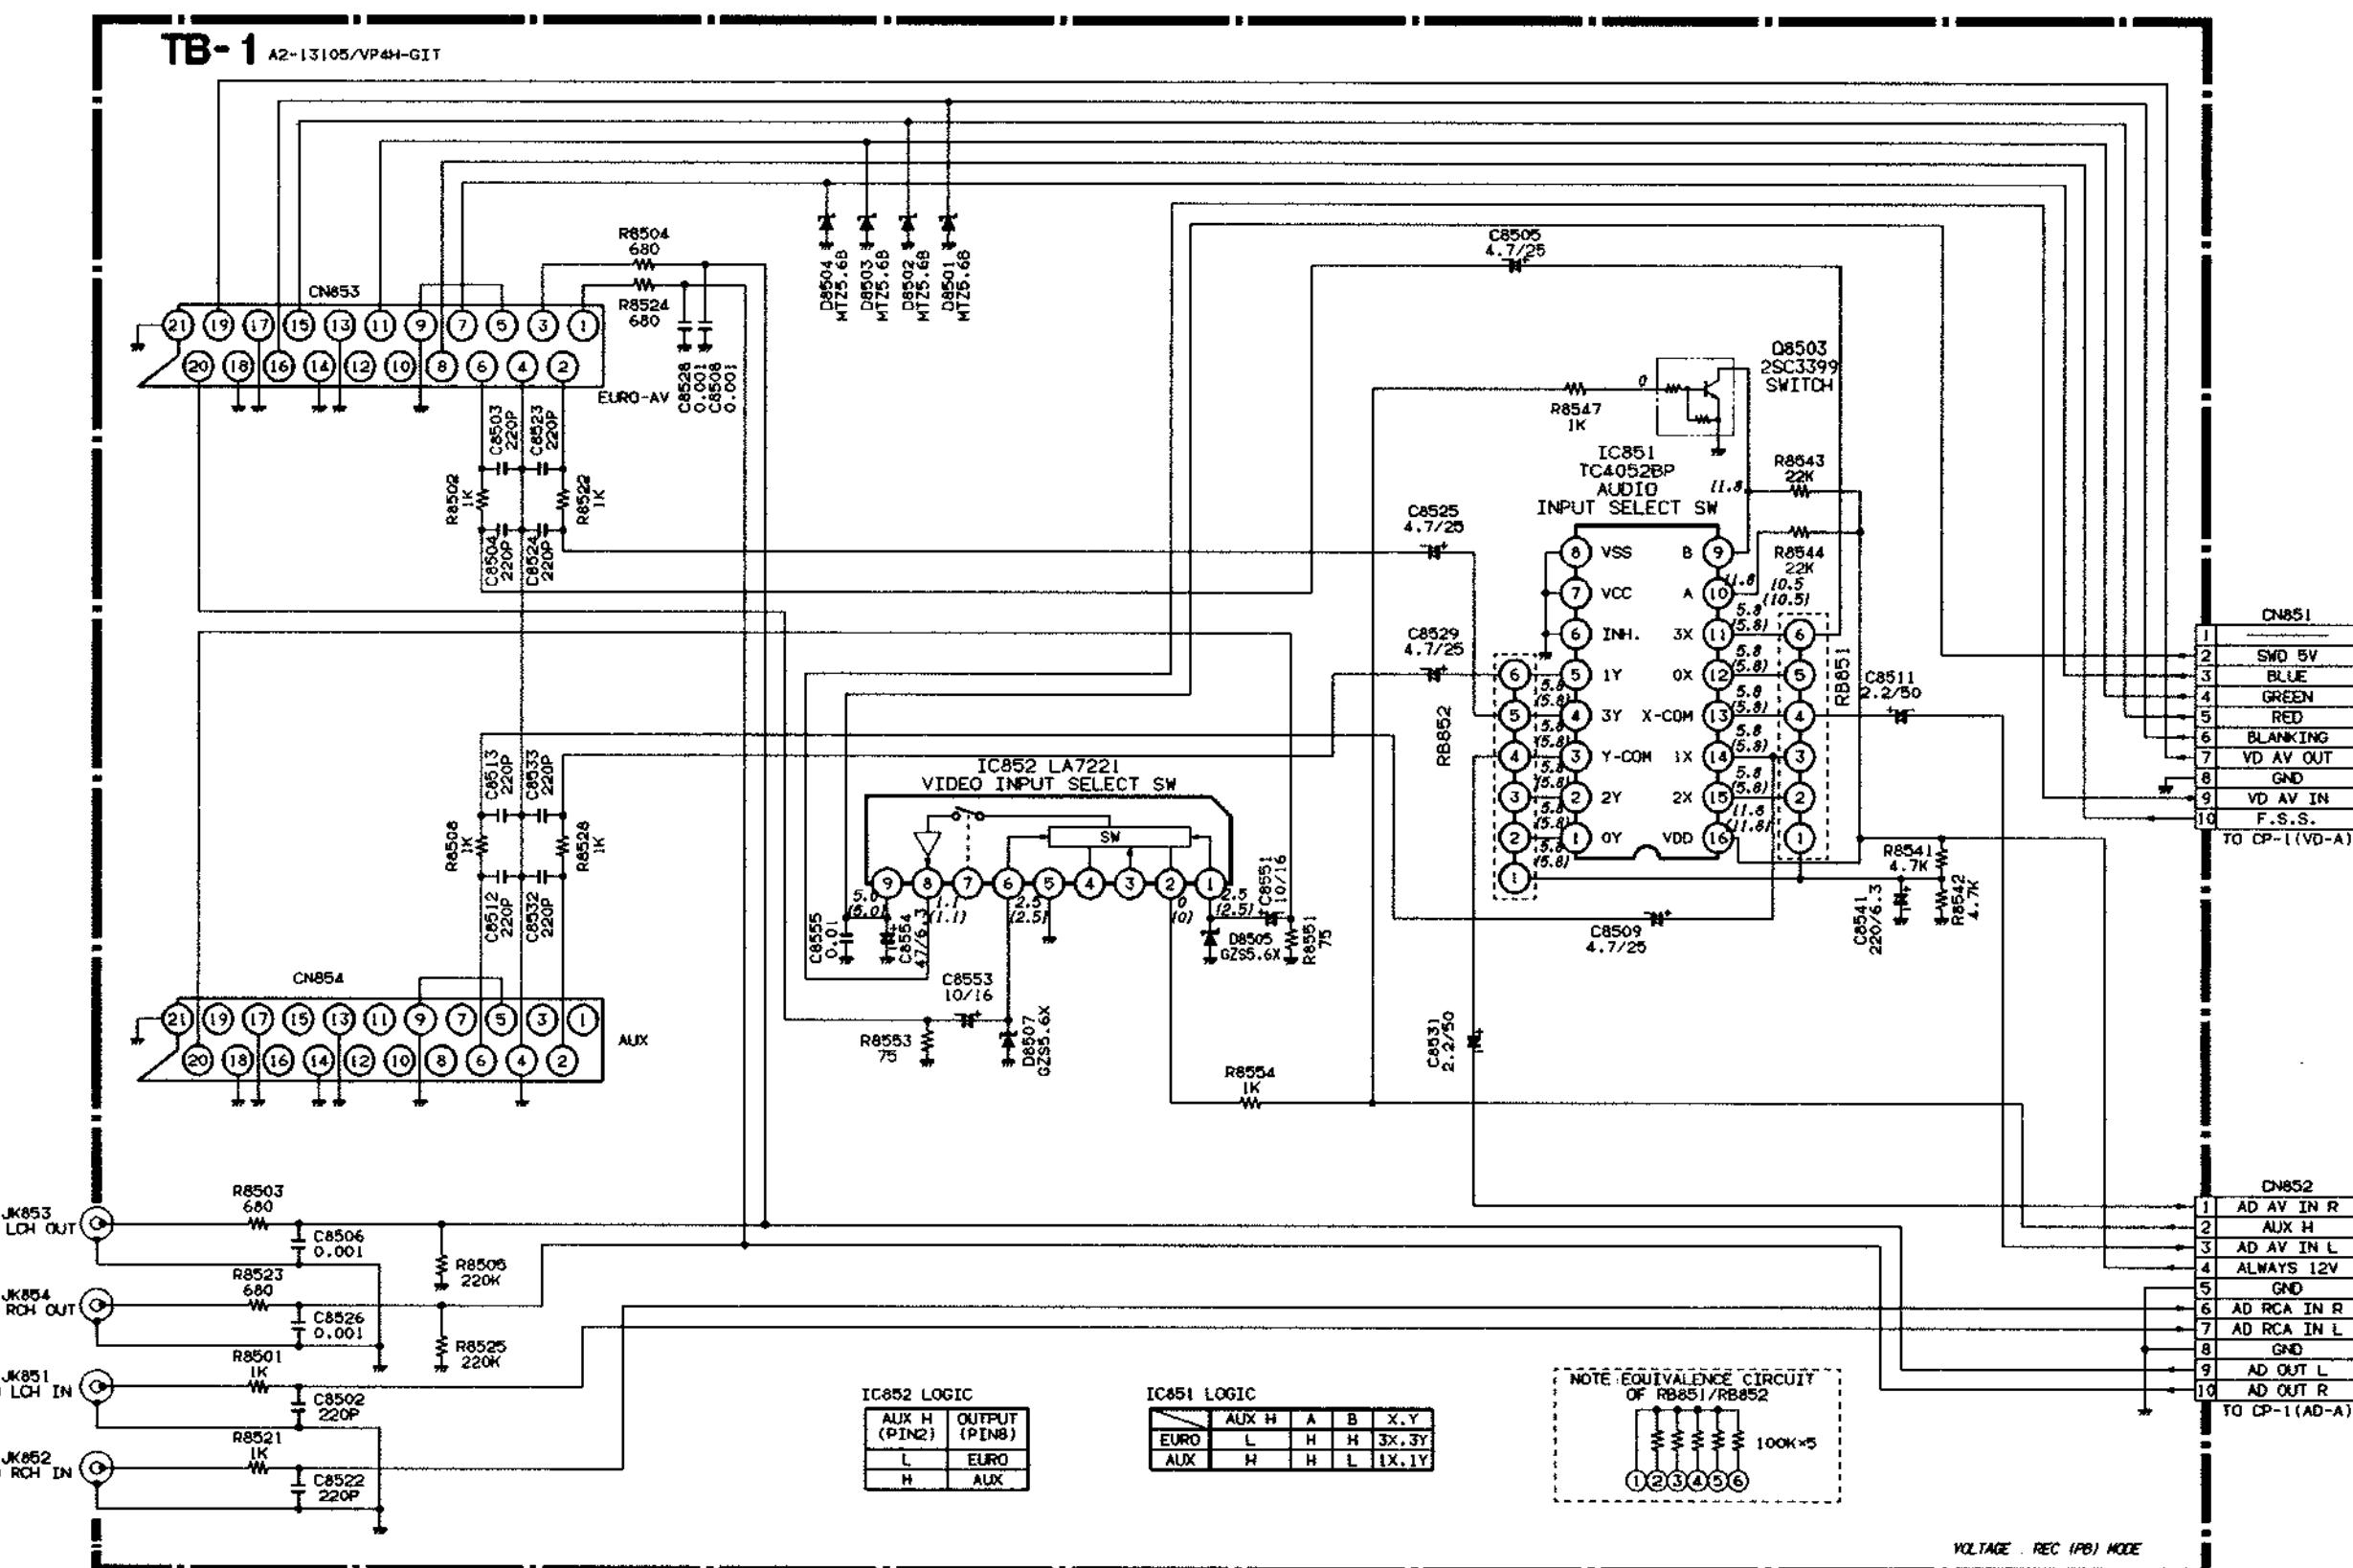


9-13. MECHANISM CONNECTION CIRCUIT DIAGRAM

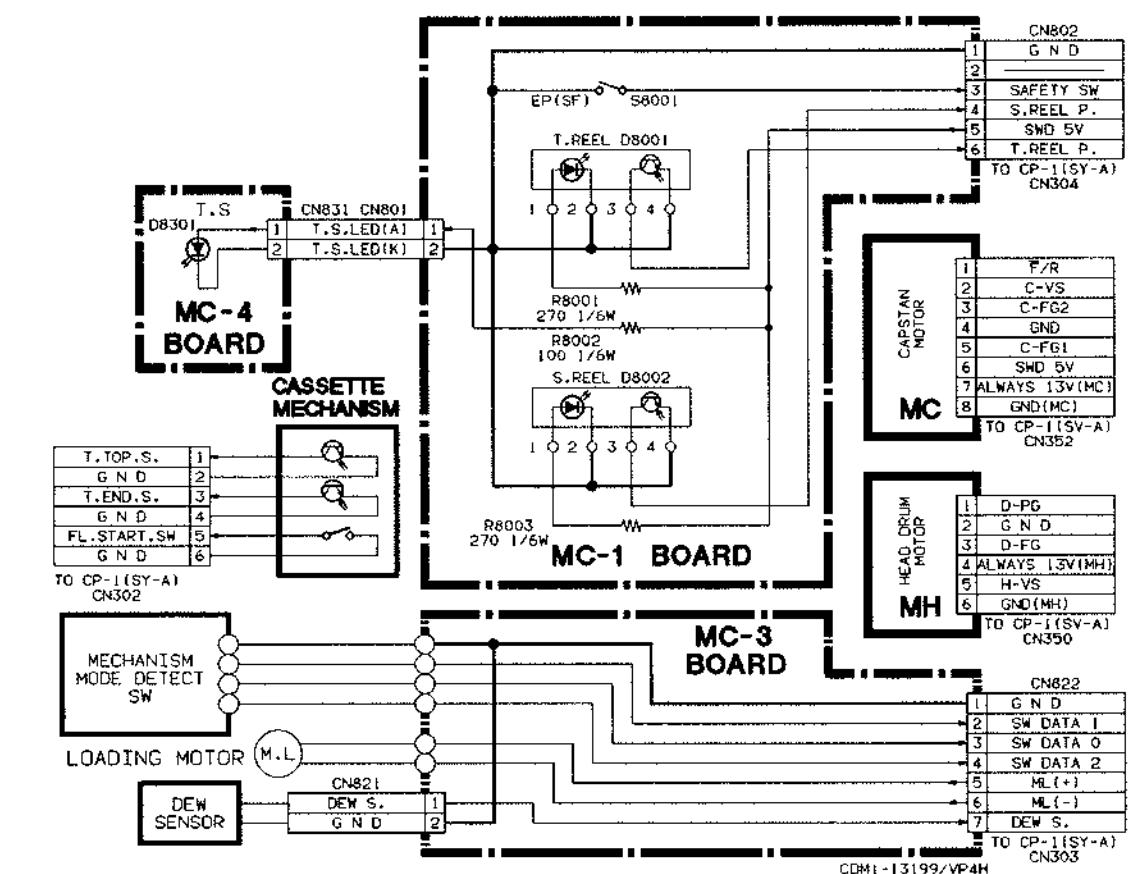


K  
C  
T  
H  
G  
F  
E  
D  
C  
B  
A

9-14. TM-1 BOARD TIMER & TUNING CONTROL CIRCUIT DIAGRAM

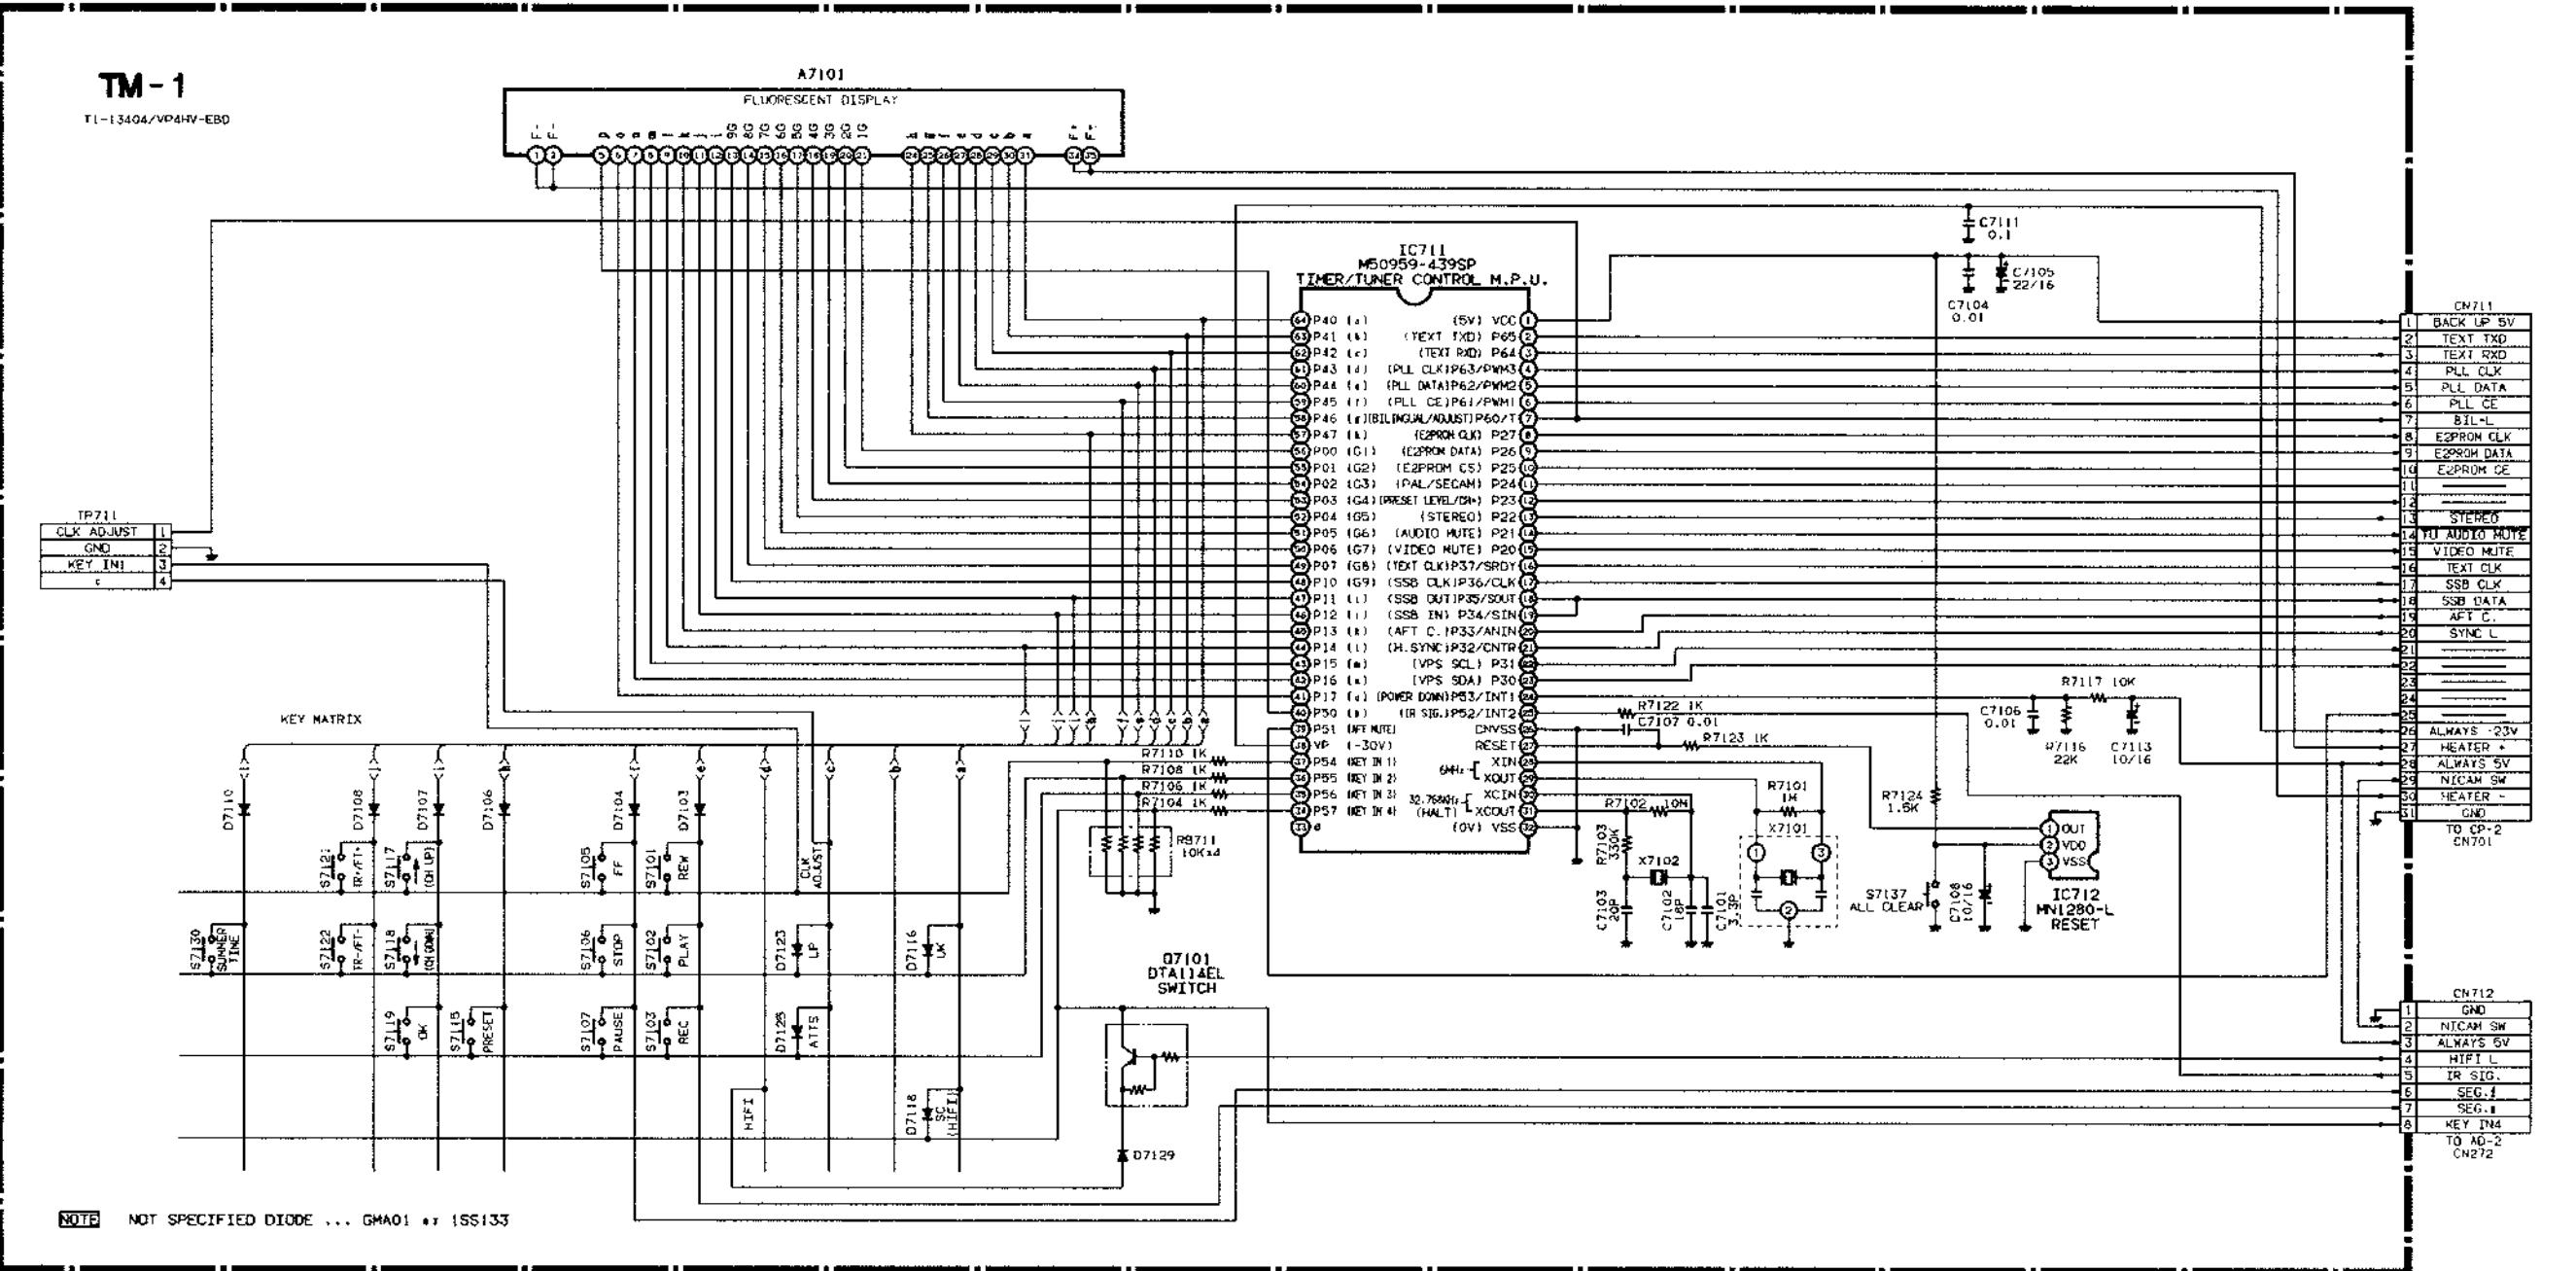

A7001 DISPLAY GRID/ANODE ASSIGNMENT

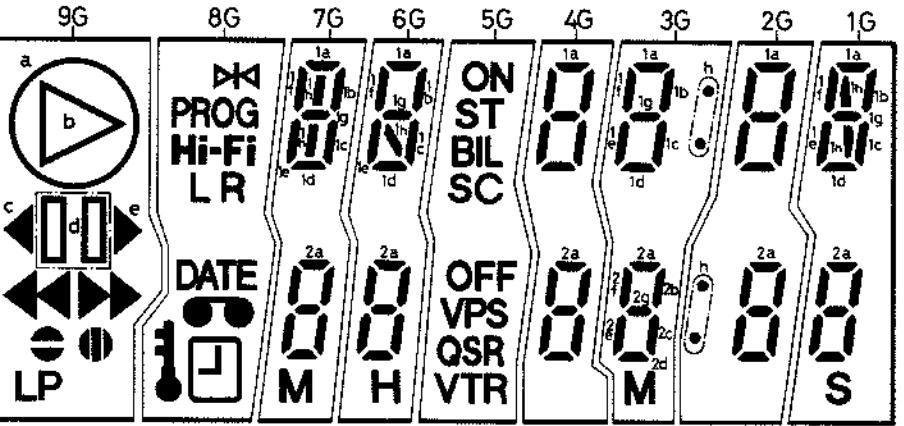


A7001 DISPLAY TABLE OF GRID/ANODE CONNECTION


|   | 9G | 8G    | 7G | 6G | 5G  | 4G | 3G      | 2G      | 1G |
|---|----|-------|----|----|-----|----|---------|---------|----|
| a | ○  | □     | 1a | 1a | 1a  | 1a | 1a      | 1a      | 1a |
| b | △  | ◀     | 1b | 1b | 1b  | 1b | 1b      | 1b      | 1b |
| c | ◀  | PROG  | 1c | 1c | 1c  | 1c | 1c      | 1c      | 1c |
| d | ■  | HI-FI | 1d | 1d | 1d  | 1d | 1d      | 1d      | 1d |
| e | ▶  | L     | 1e | 1e | -   | 1e | 1e      | 1e      | 1e |
| f | -  | R     | 1f | 1f | -   | 1f | 1f      | 1f      | 1f |
| g | -  | -     | 1g | 1g | -   | 1g | 1g      | 1g      | 1g |
| h | -  | -     | 1h | 1h | -   | -  | (UPPER) | (LOWER) | 1h |
| i | ◀  | DATE  | 2a | 2a | OFF | 2a | 2a      | 2a      | 2a |
| j | ▶  | ●     | 2b | 2b | VPS | 2b | 2b      | 2b      | 2b |
| k | ●  | 1     | 2c | 2c | 2c  | 2c | 2c      | 2c      | 2c |
| l | ●  | ■     | 2d | 2d | VTR | 2d | 2d      | 2d      | 2d |
| m | LP | -     | 2e | 2e | -   | 2e | 2e      | 2e      | 2e |
| n | EP | -     | 2f | 2f | -   | 2f | 2f      | 2f      | 2f |
| o | -  | -     | 2g | 2g | -   | 2g | 2g      | 2g      | 2g |
| p | -  | -     | M  | H  | -   | H  | M       | M       | S  |

9G/QP


9-15. TN-5 BOARD NICAM DECODER CIRCUIT DIAGRAM

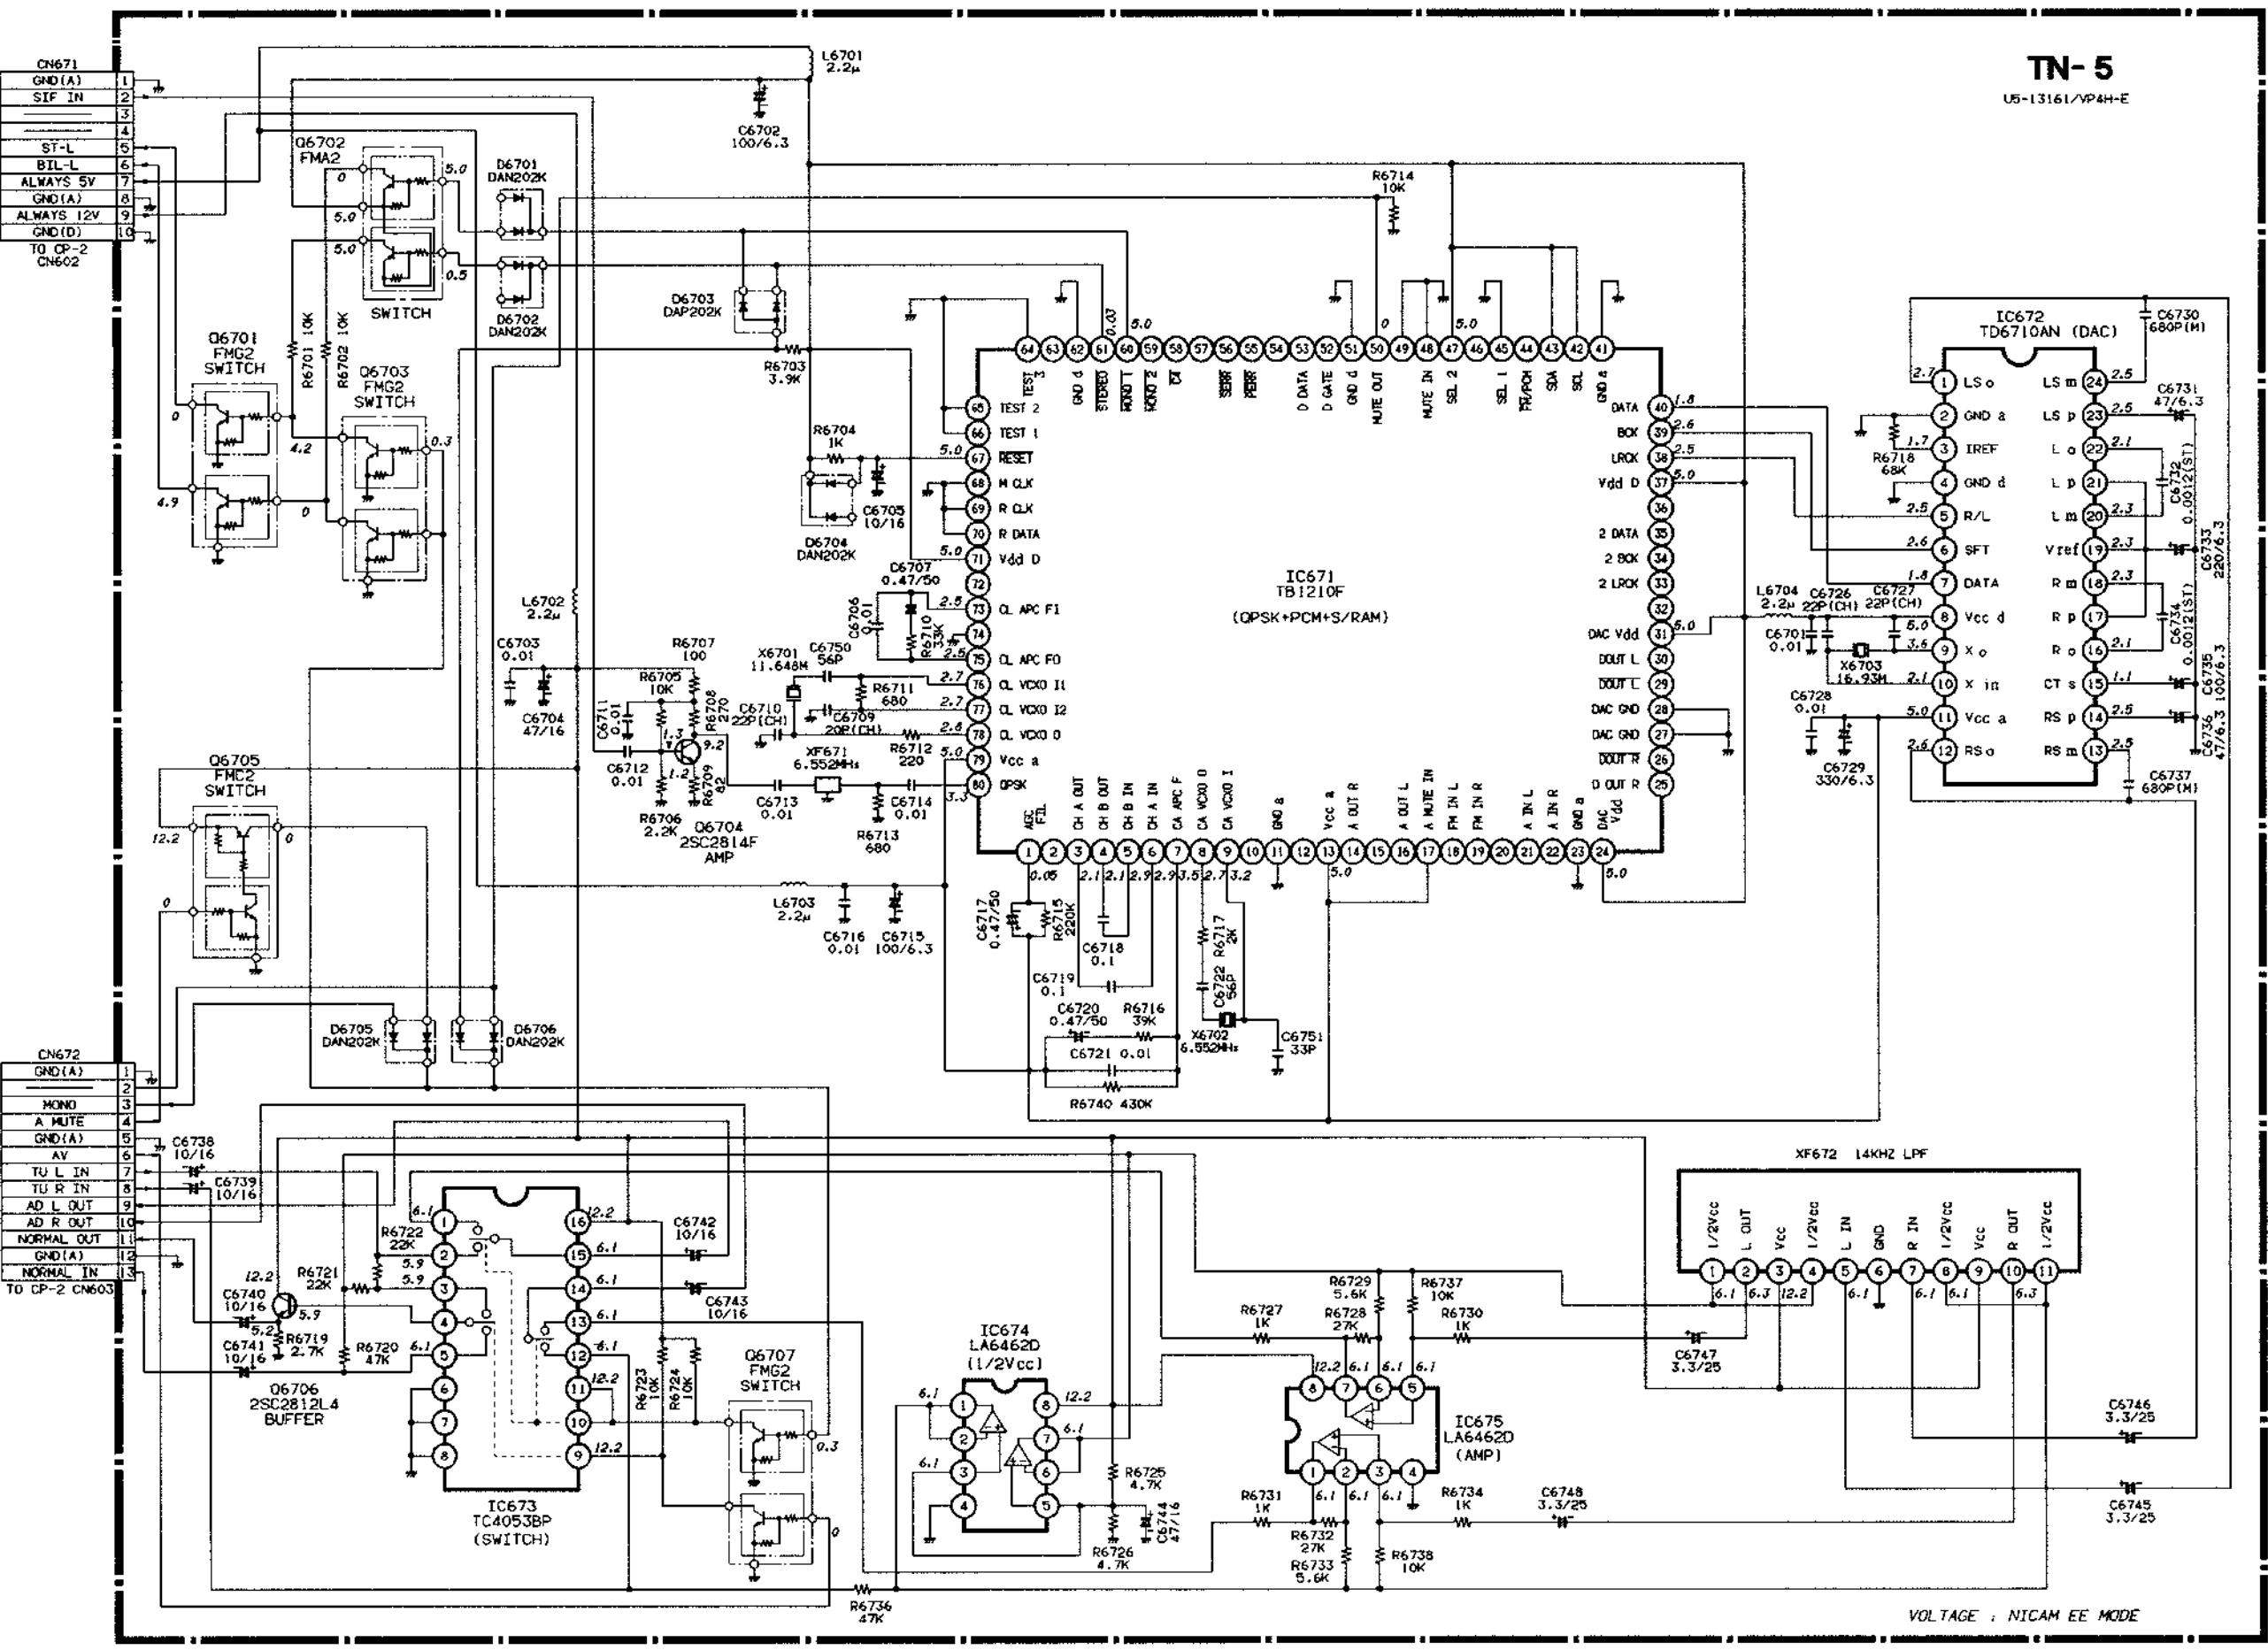


9-16. TN-7 BOARD SYNC DETECTOR CIRCUIT DIAGRAM

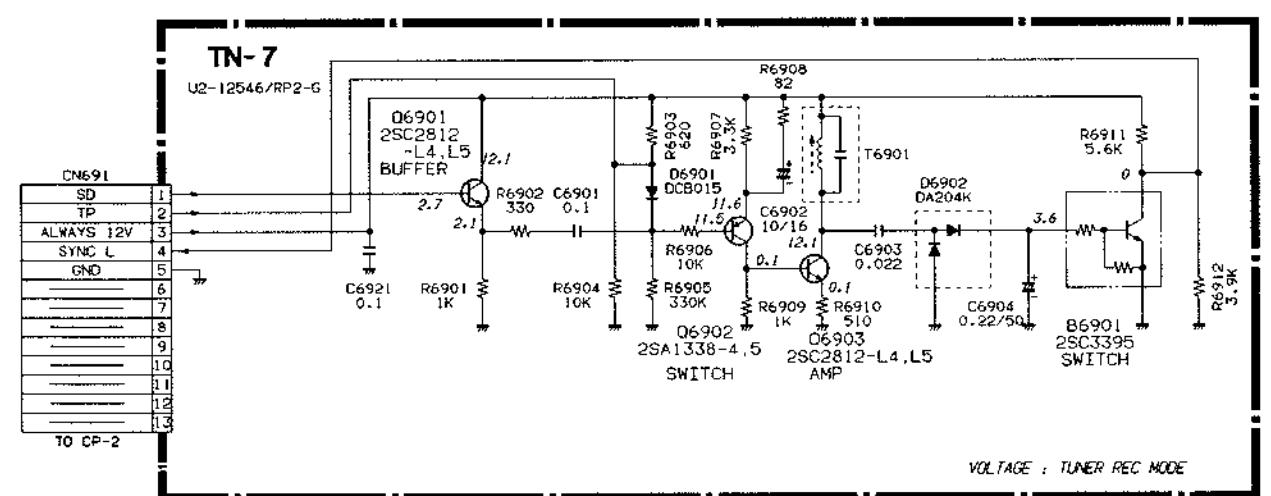

9-17. TN-7 P.C.B.


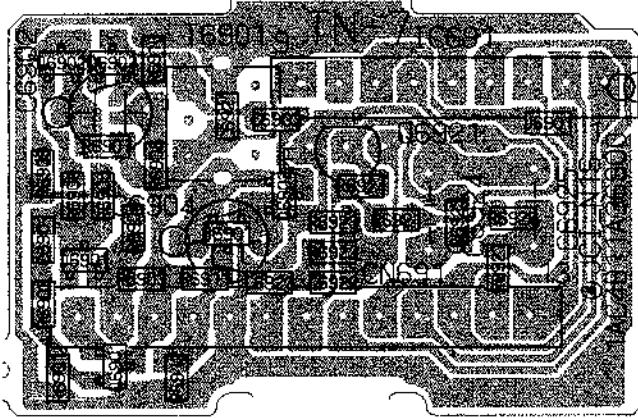


9-18. RF CONVERTER CIRCUIT DIAGRAM

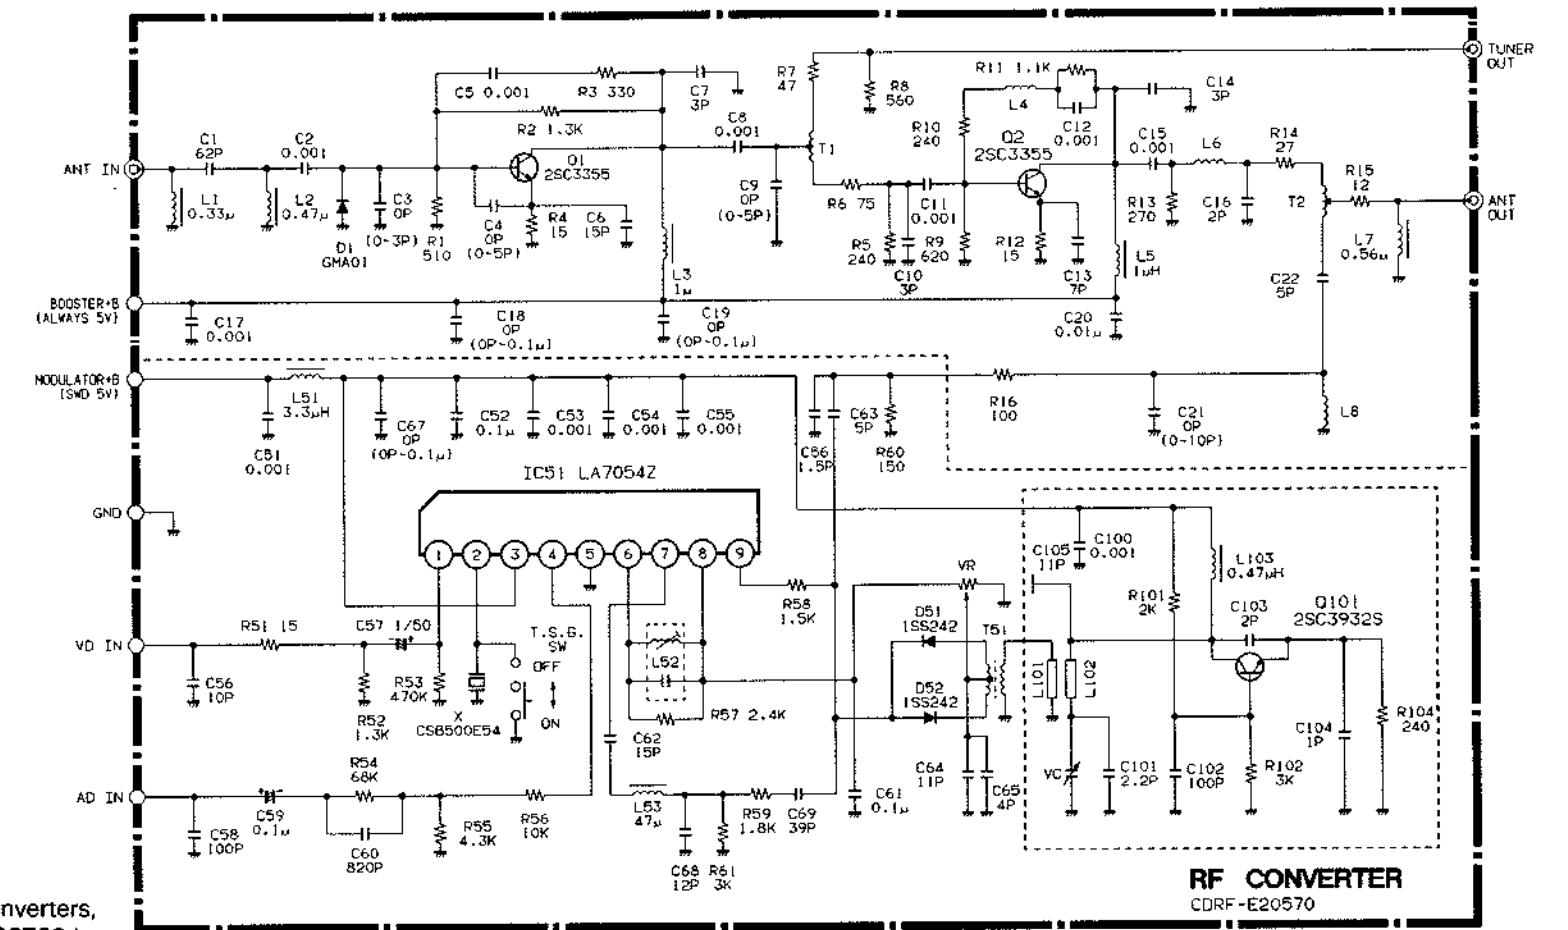


Note: Either one of these RF converters, type CDRF-E20570 or CDRF-E20730 is used, depending on availability.


9-19. IF CIRCUIT DIAGRAM

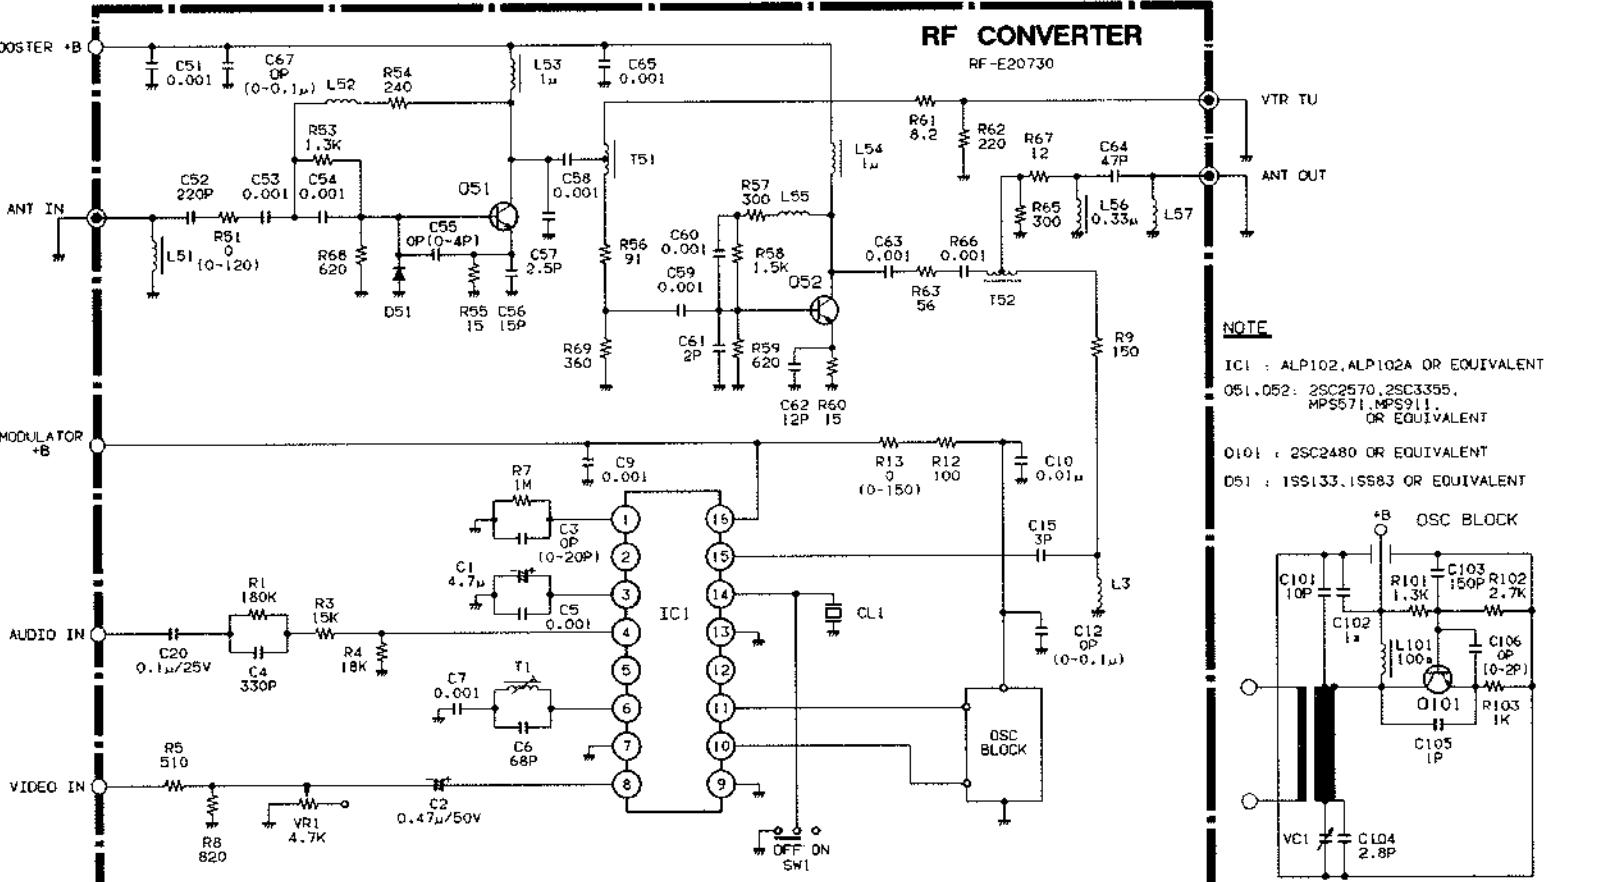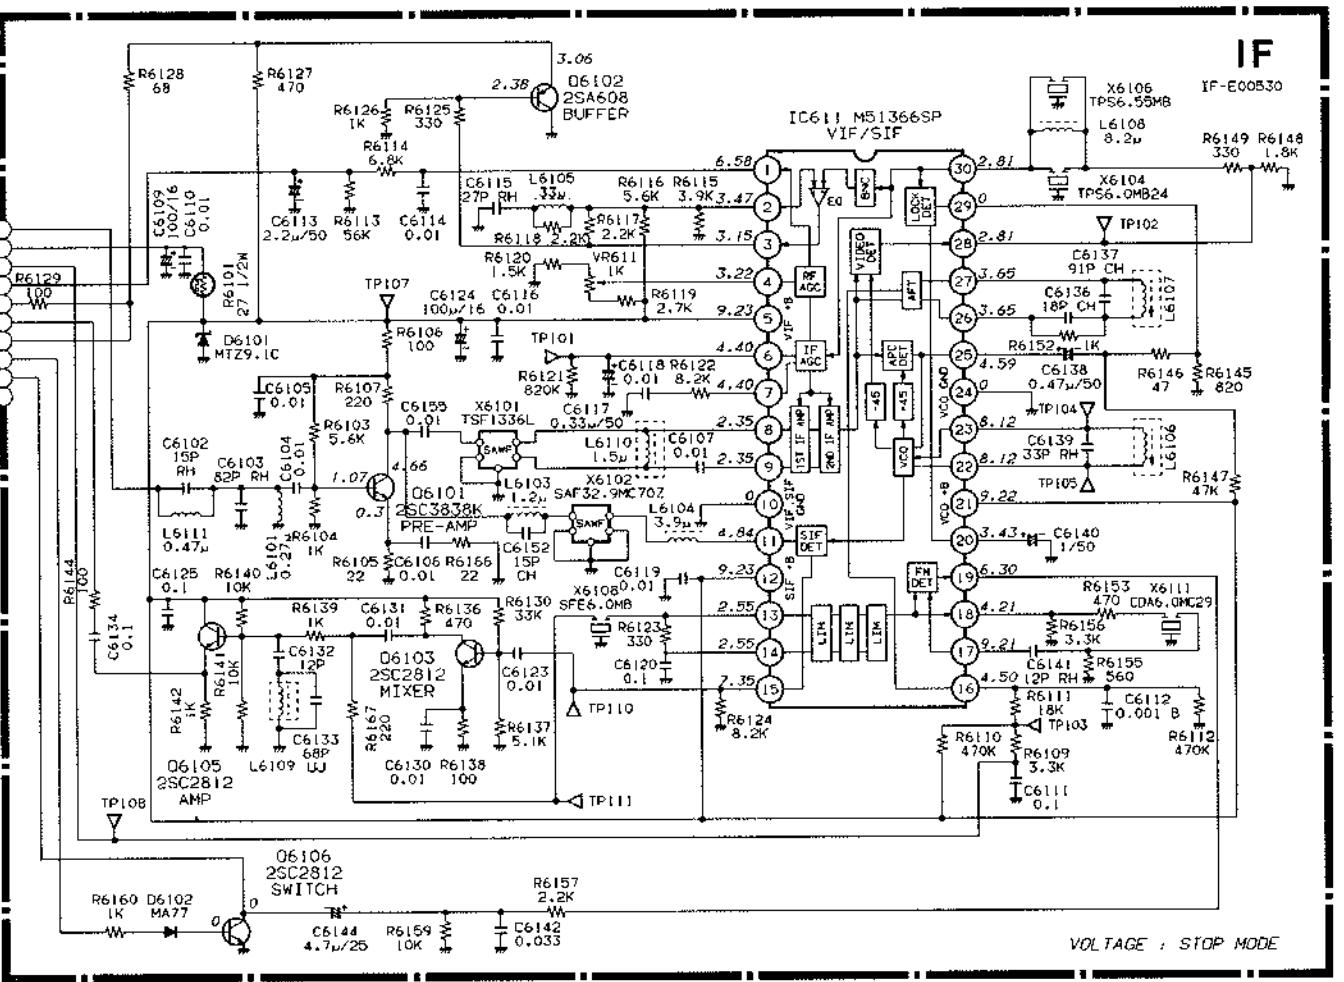


9-20. IF P.C.B.

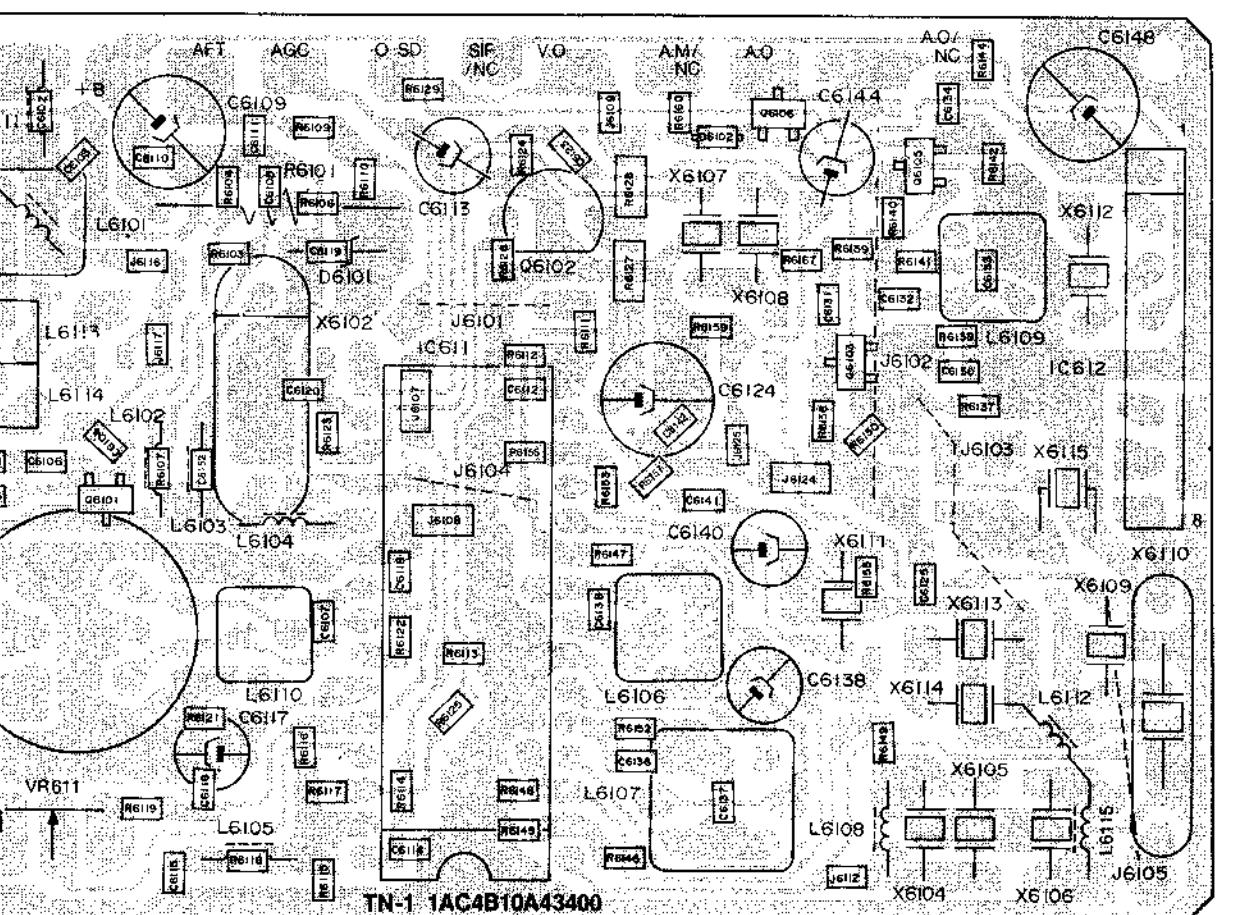

**9-21. IR REMOTE CONTROL CIRCUIT DIAGRAM**

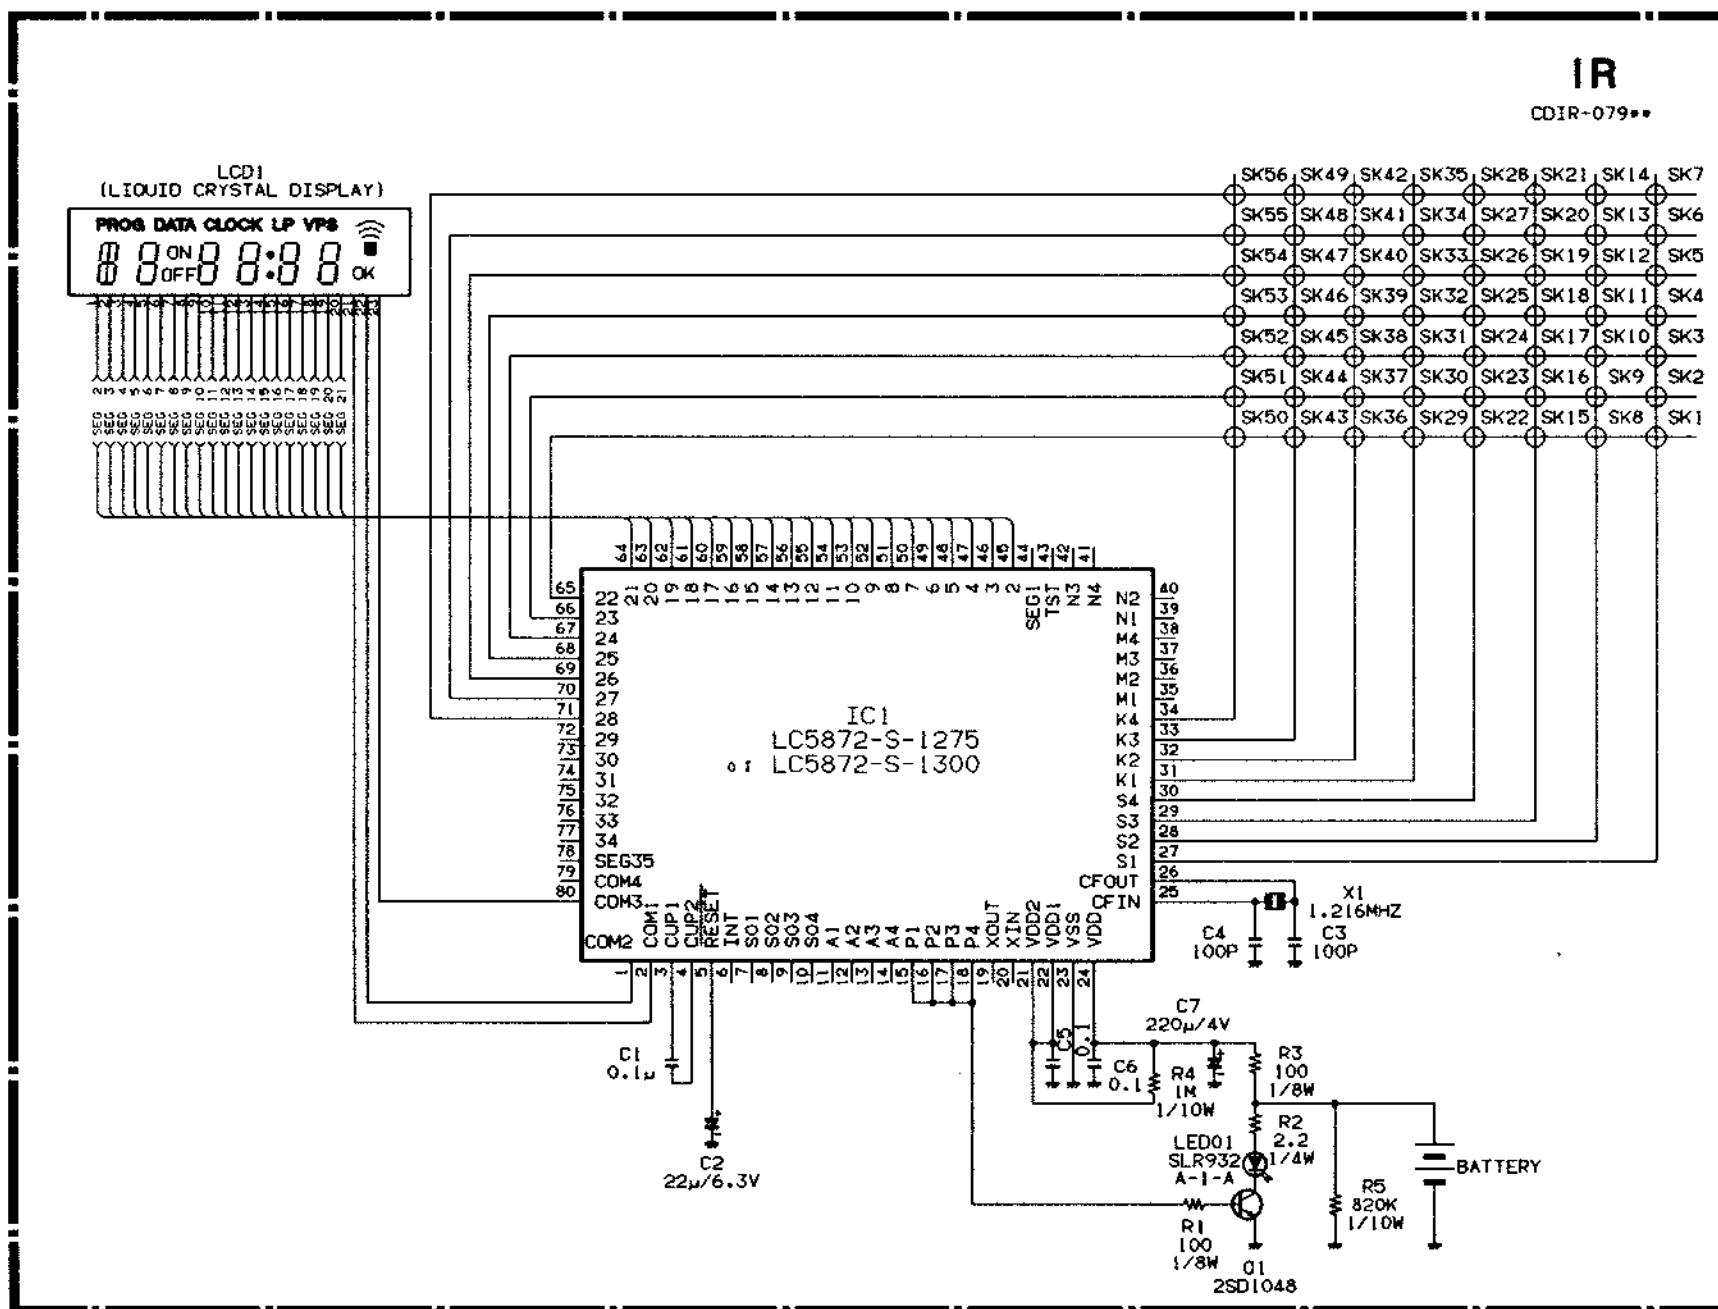


**9-22. IR REMOTE CONTROL CIRCUIT DIAGRAM**

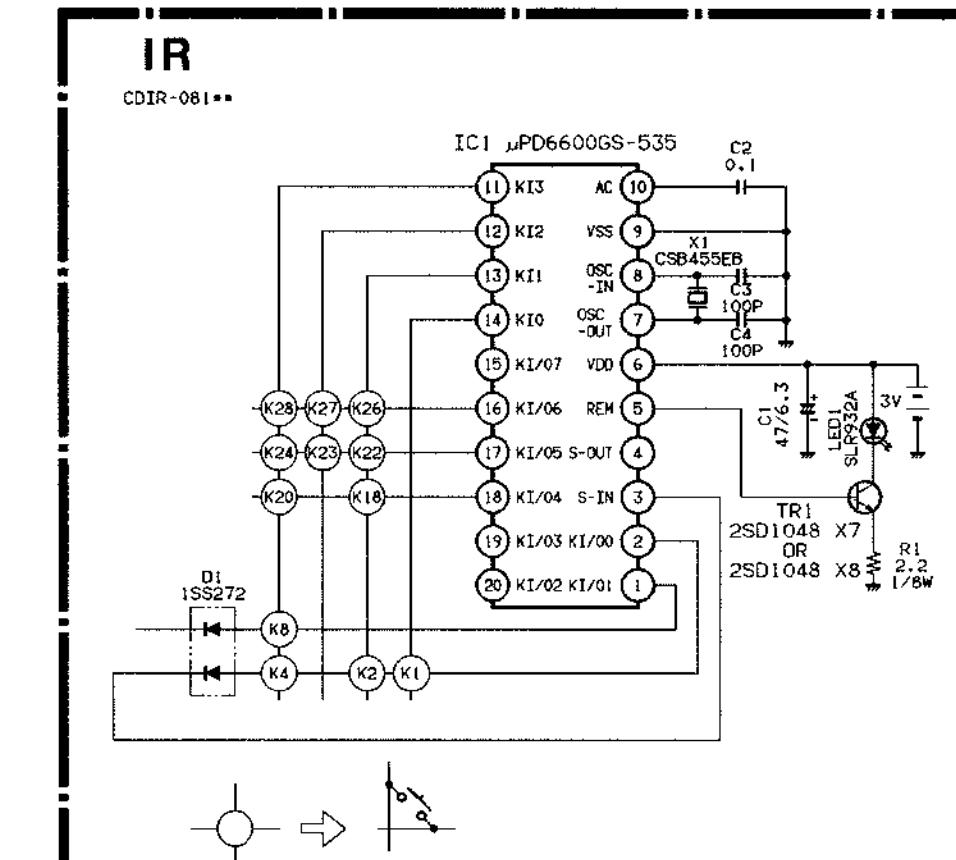


K  
J  
I  
H  
G  
F  
E  
D  
C  
B  
A


9-23. TM-6 P.C.B.

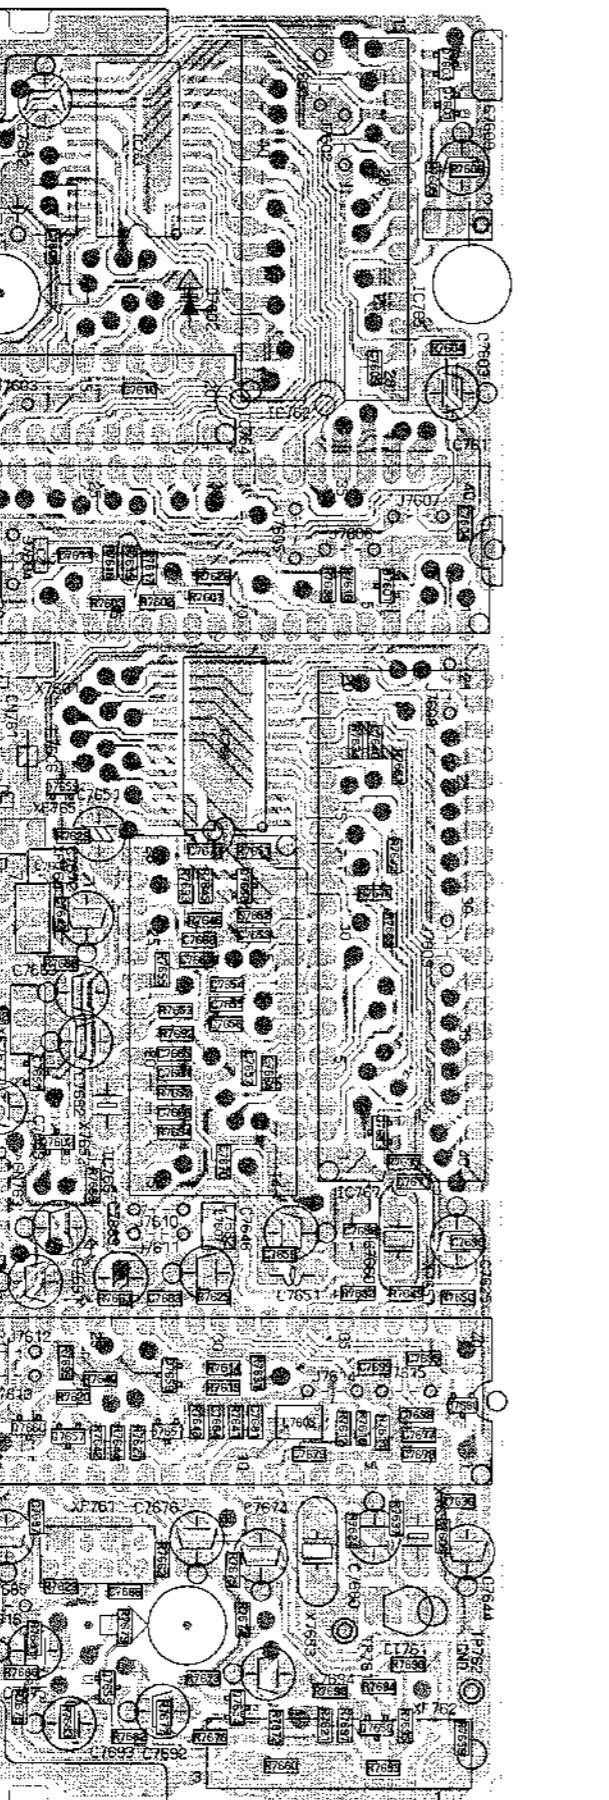


9-24. CP-1 P.C.B.

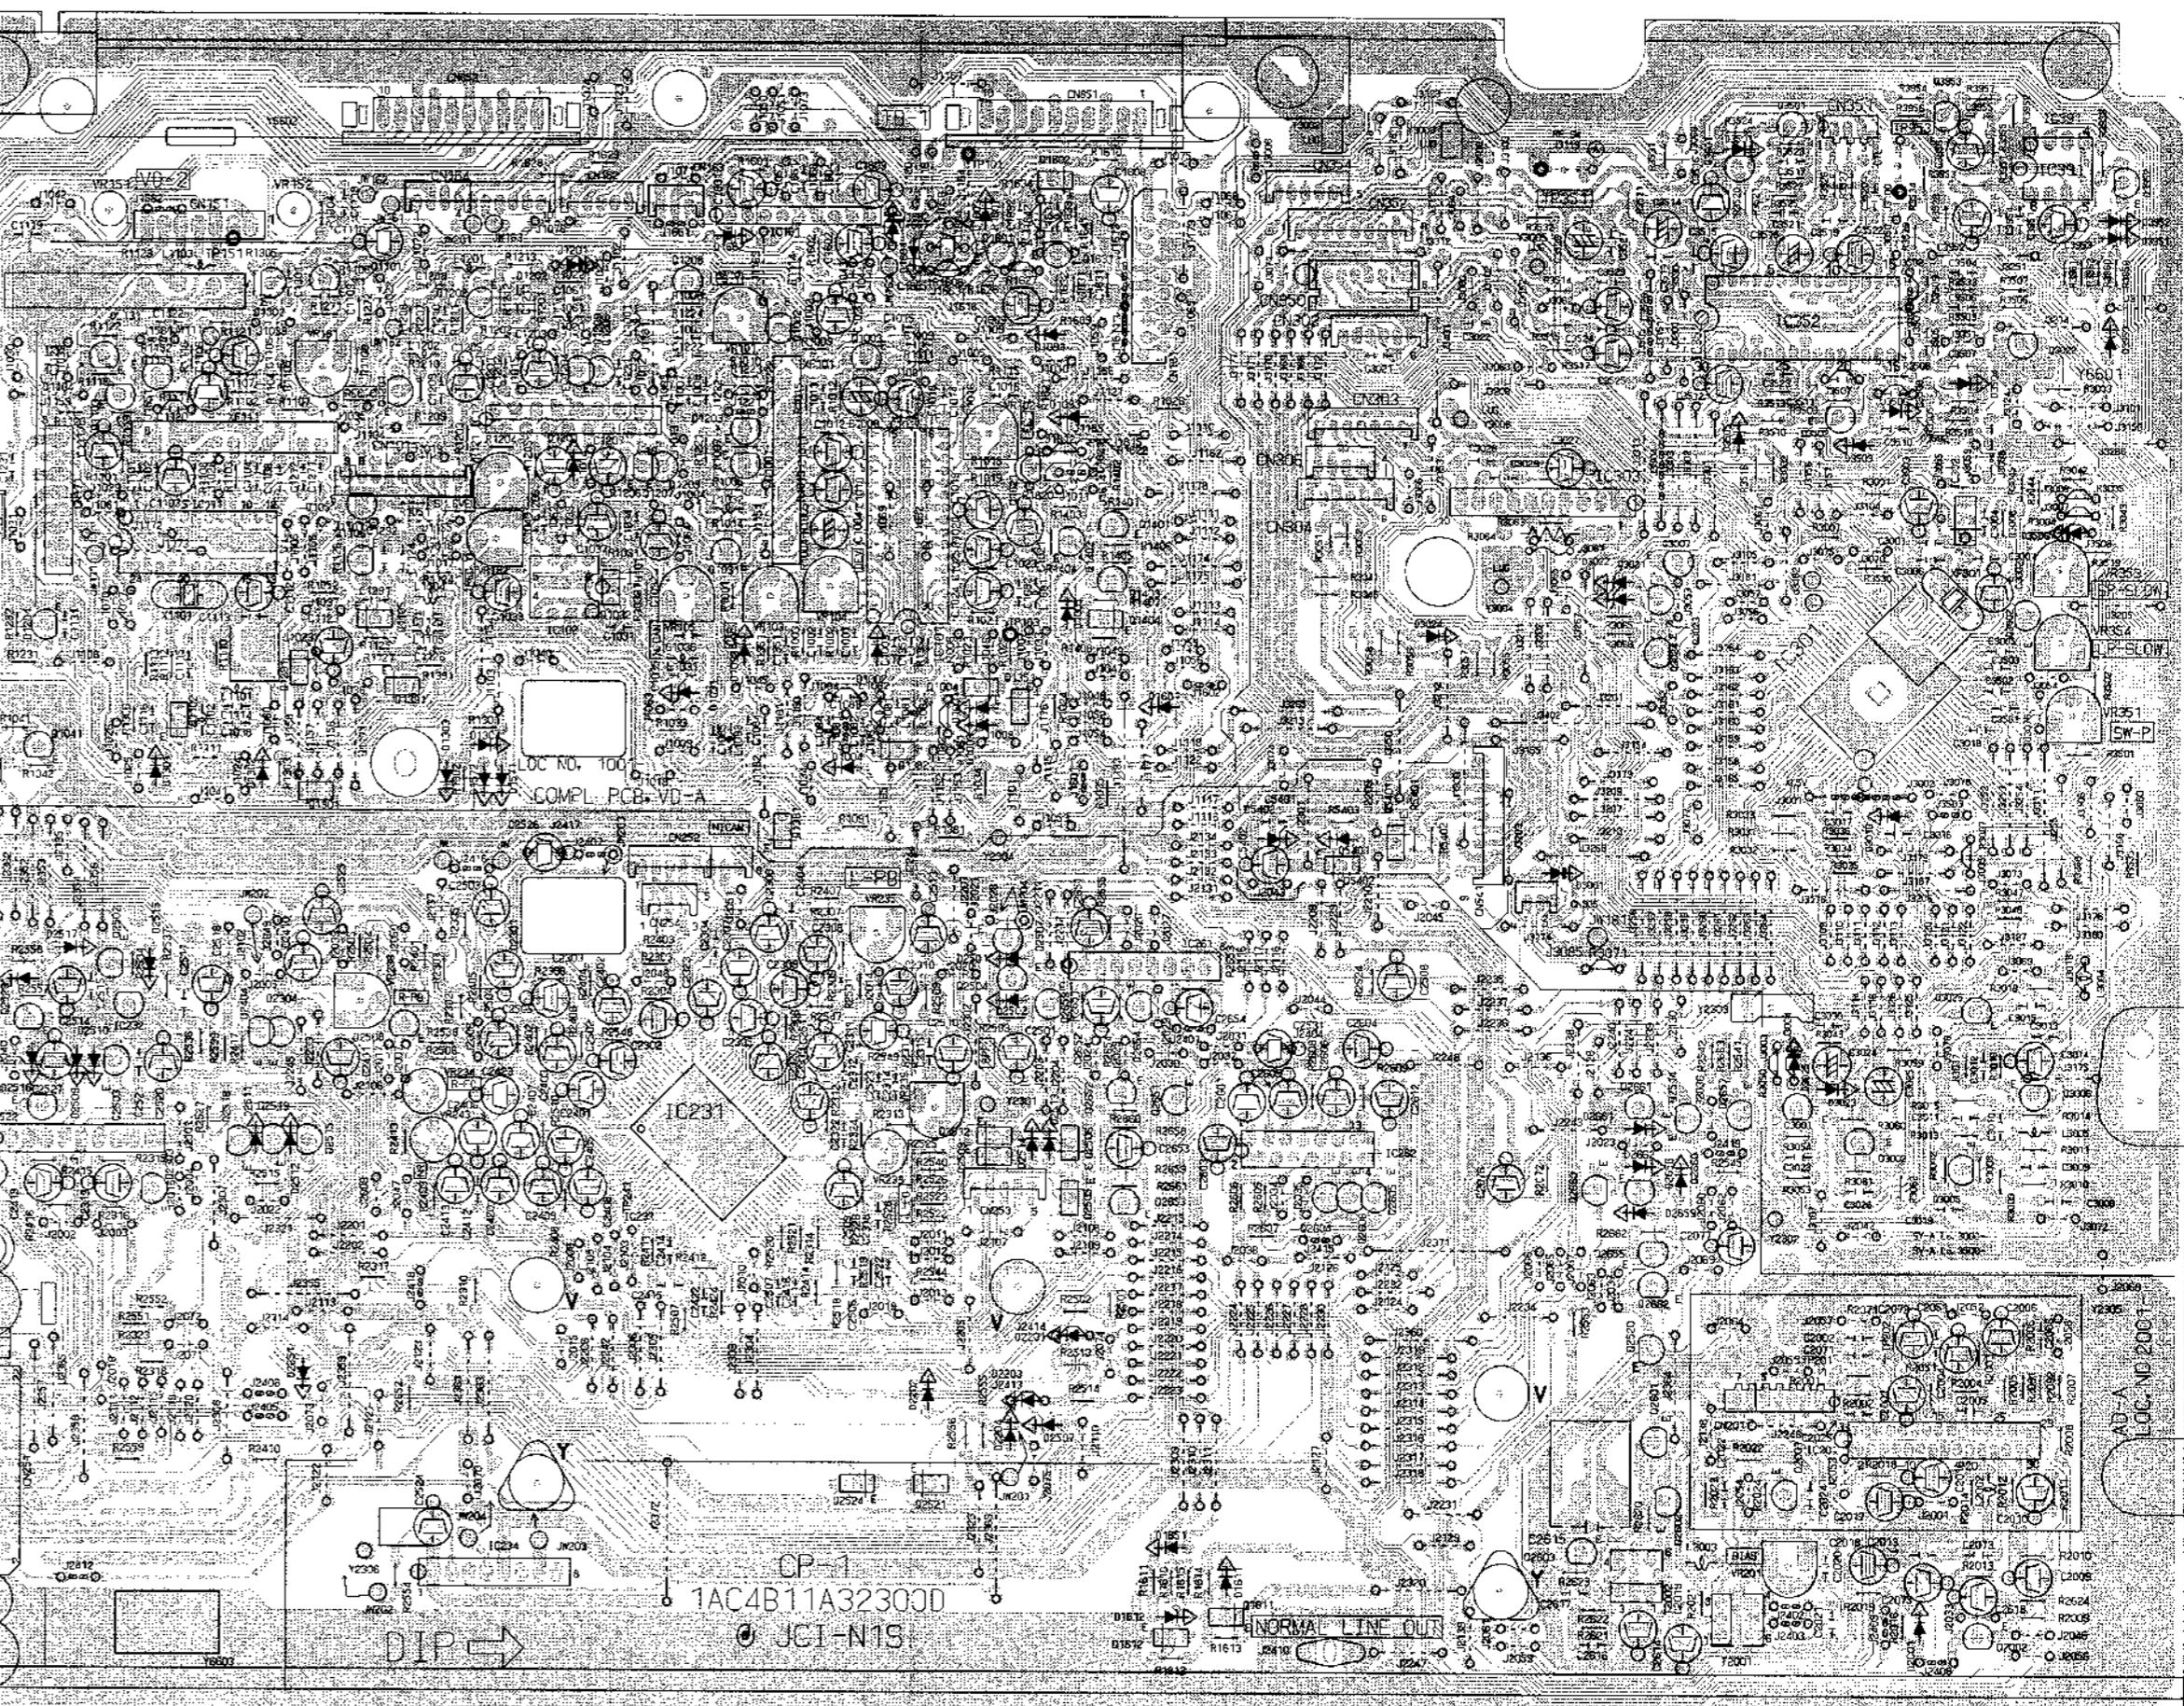

K  
C  
I  
G  
T  
P  
D  
C  
B  
A  
**9-25. PW-1 P.C.B.**

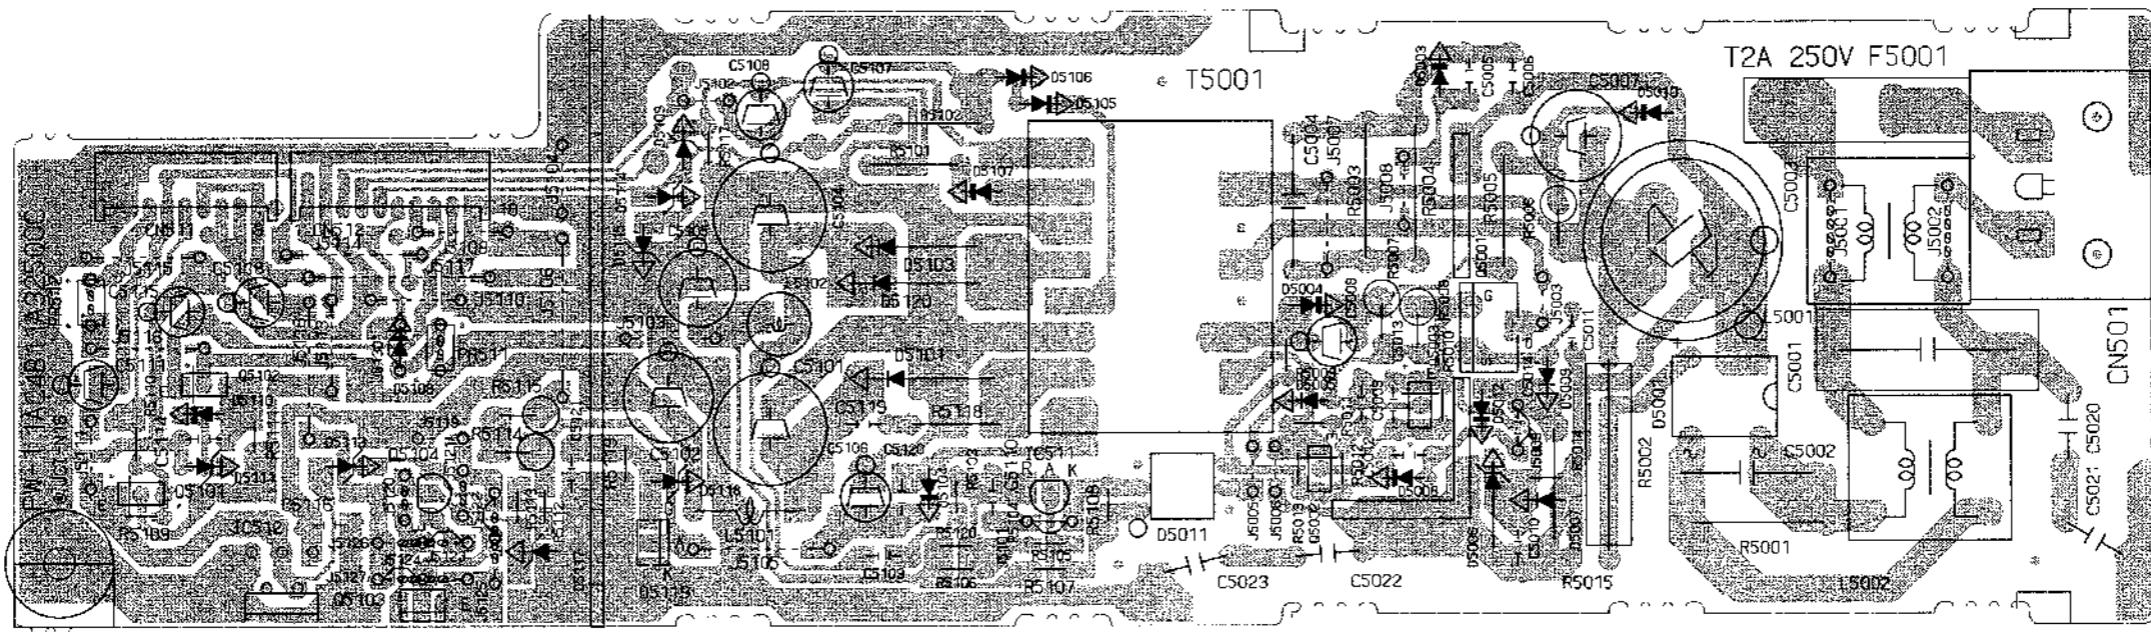


**9-26. CP-2 P.C.B.**

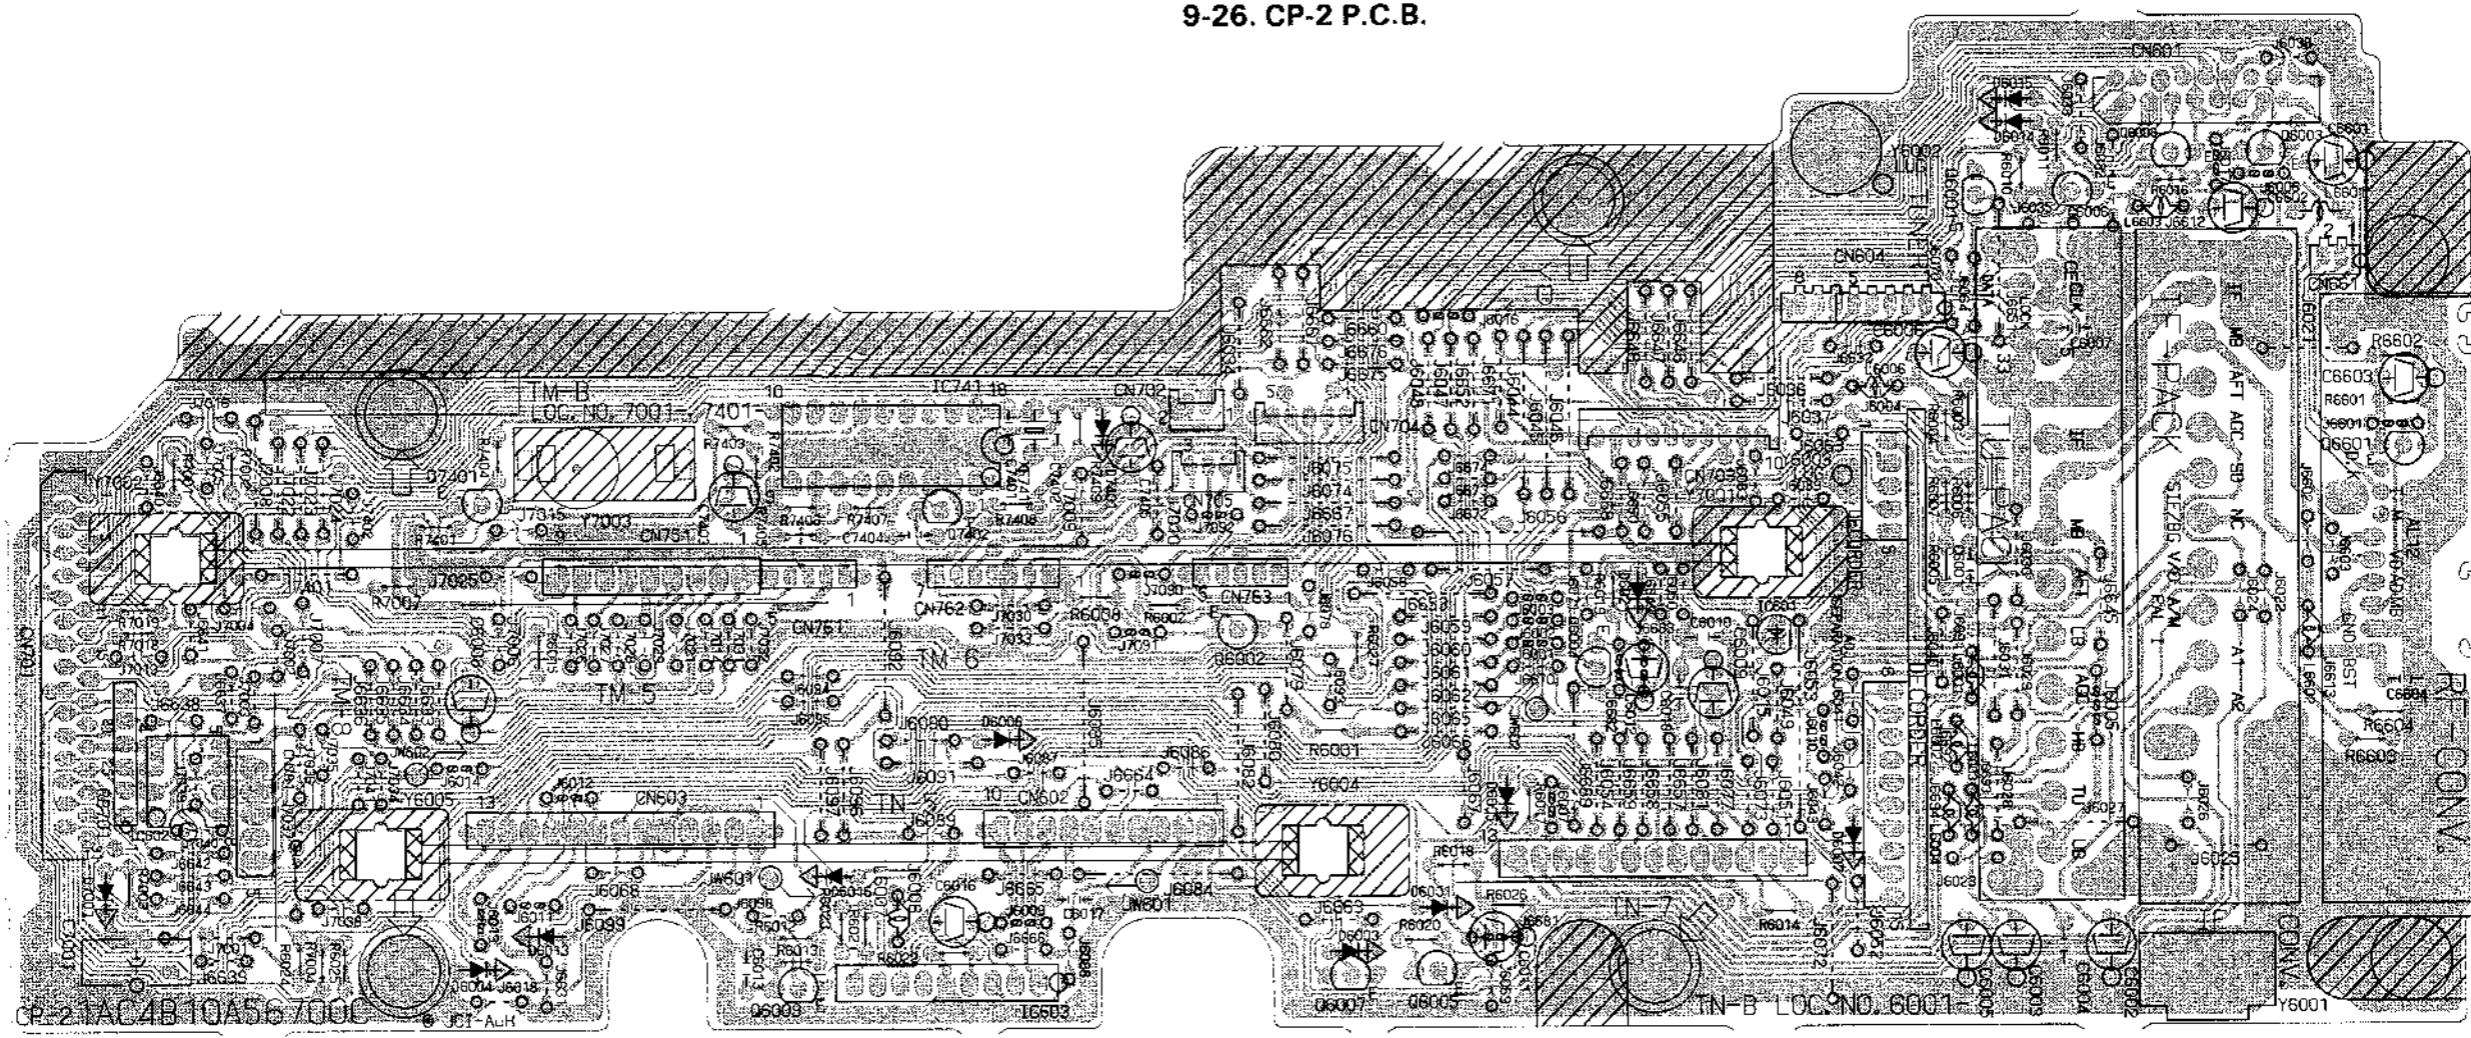


K  
C  
I  
G  
P  
L  
C  
B  
A


9-27. TB-1 P.C.B.

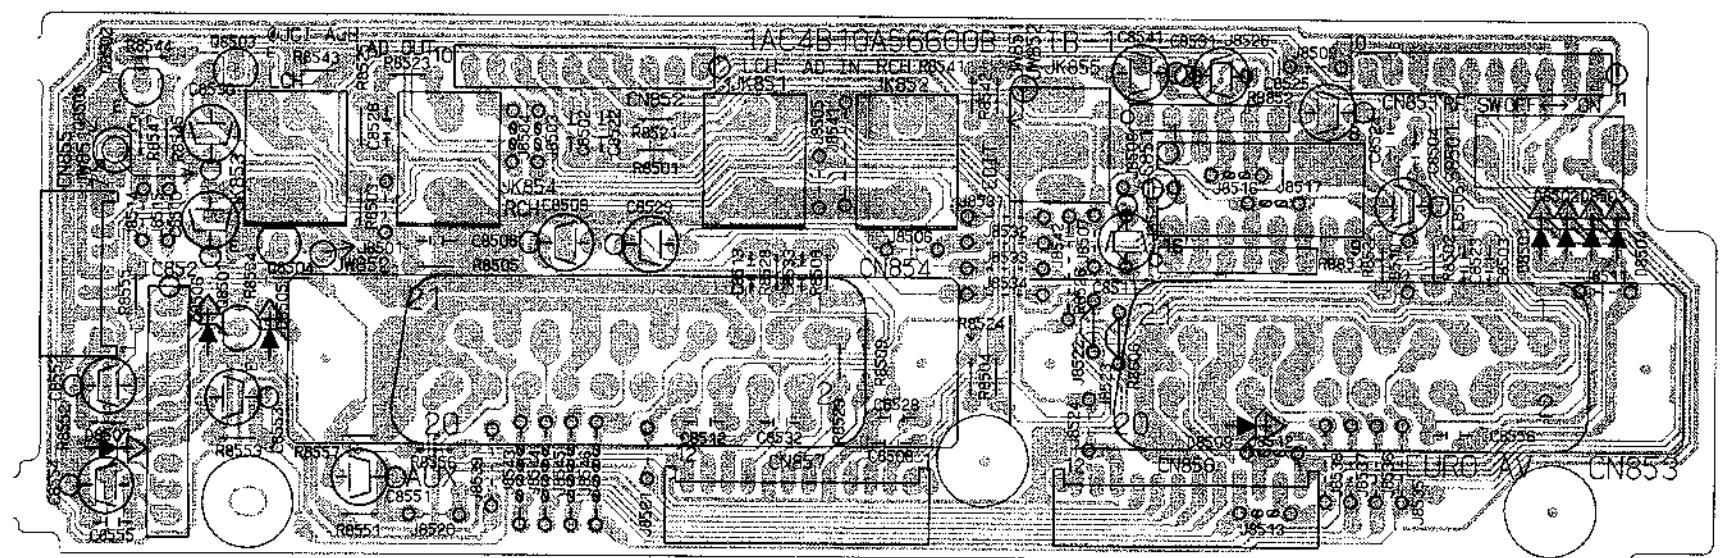

9-28. VP-1 P.C.B.

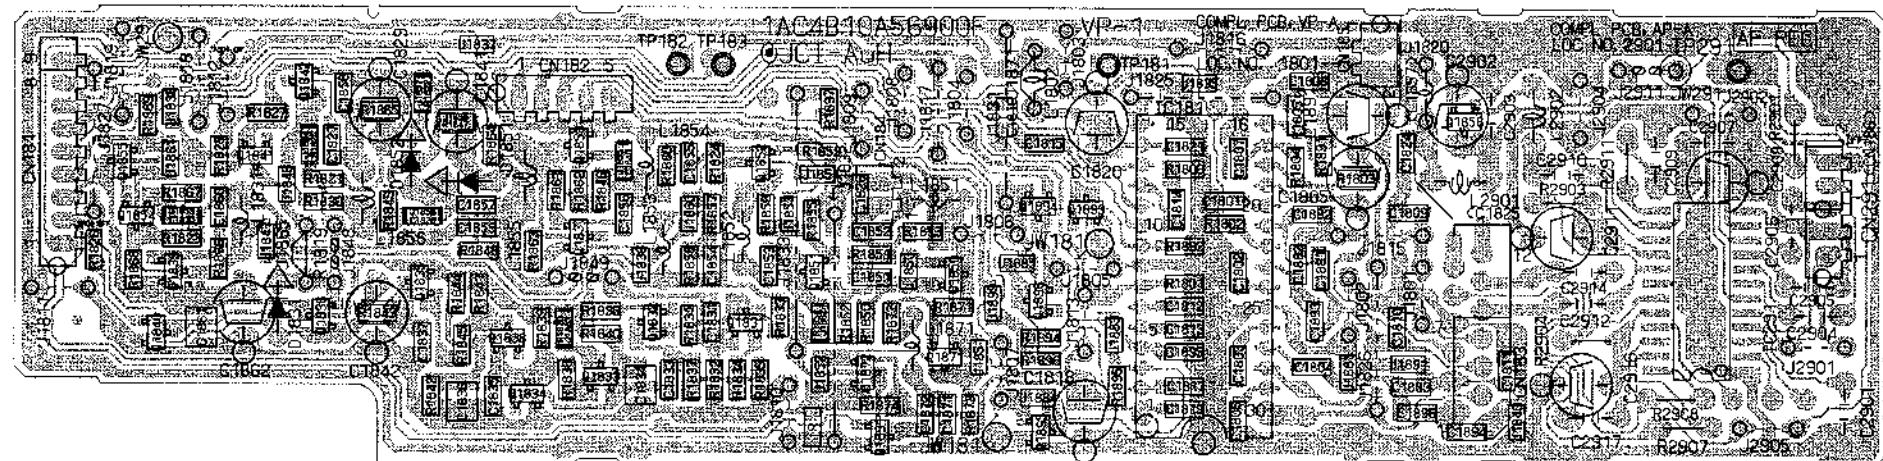


9-29. TN-5 P.C.B.

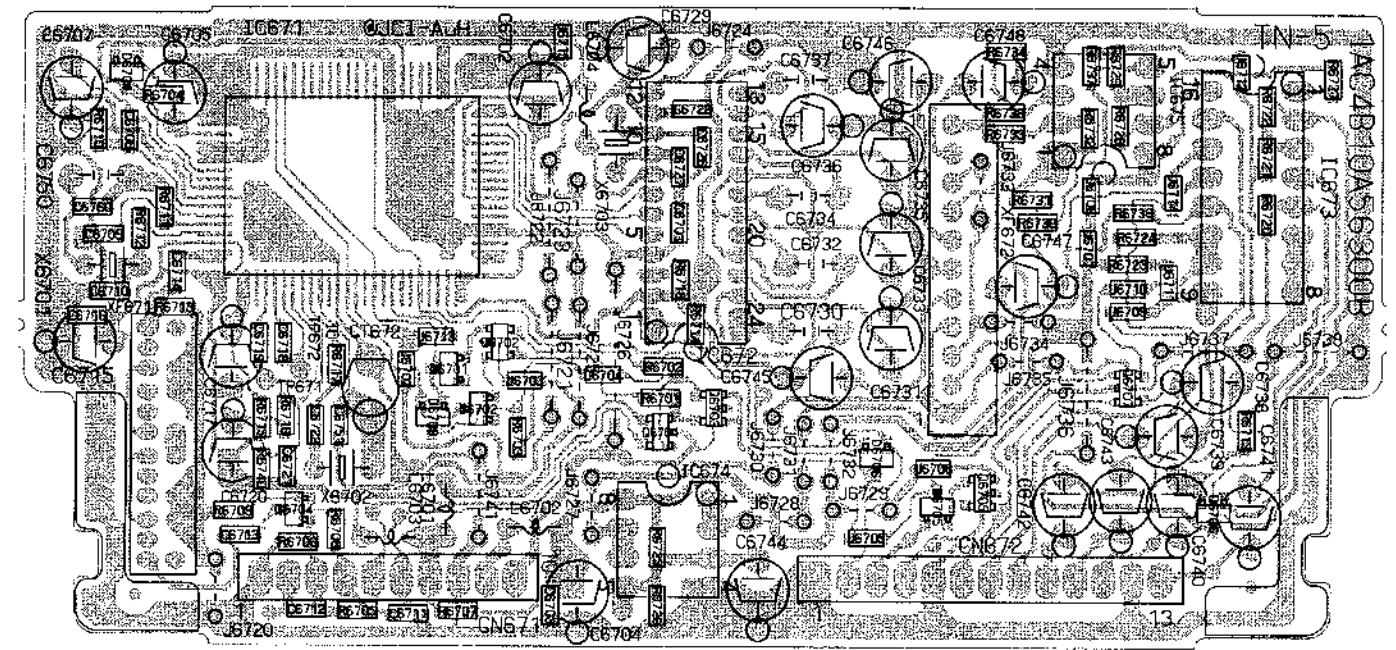


K  
J  
I  
H  
G  
F  
E  
D  
C  
B  
A


9-30. TM-1 P.C.B.

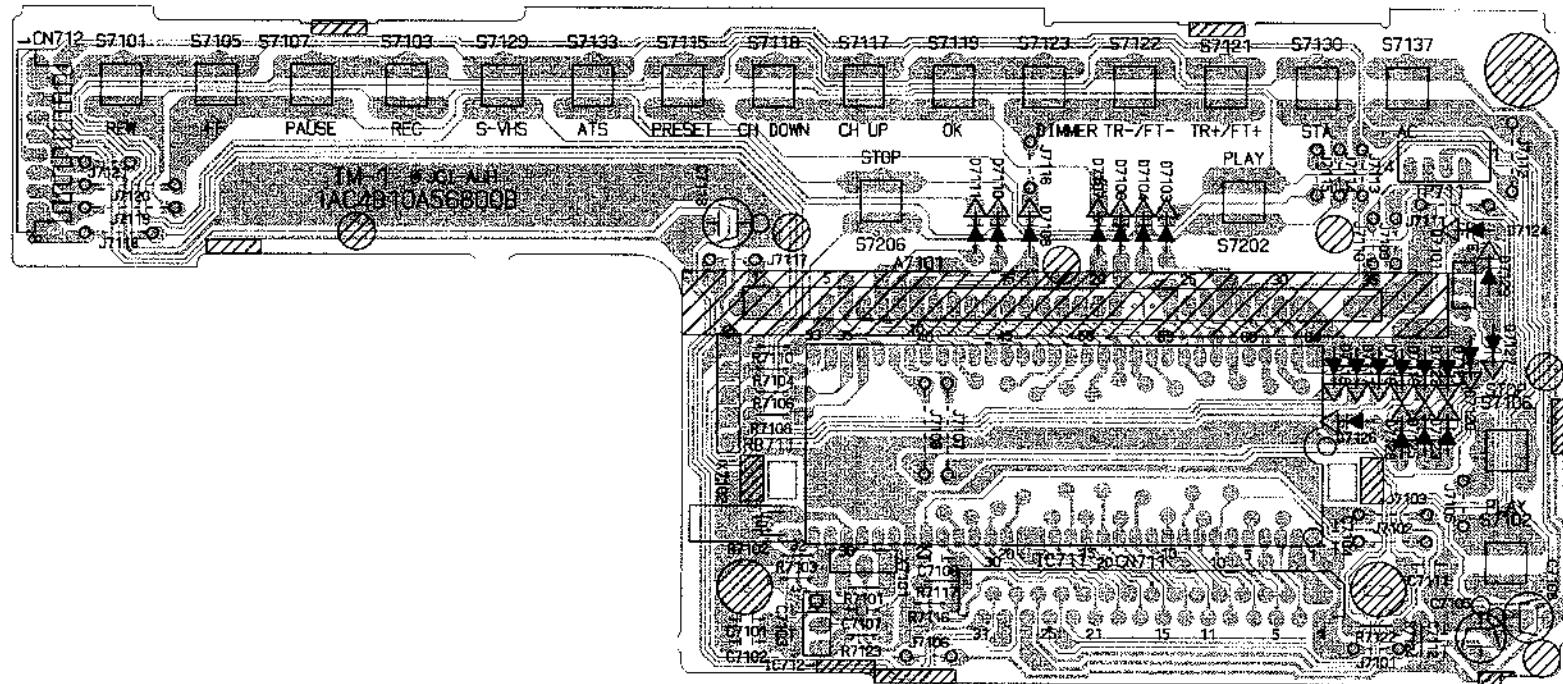


9-31. AD-2 P.C.B.

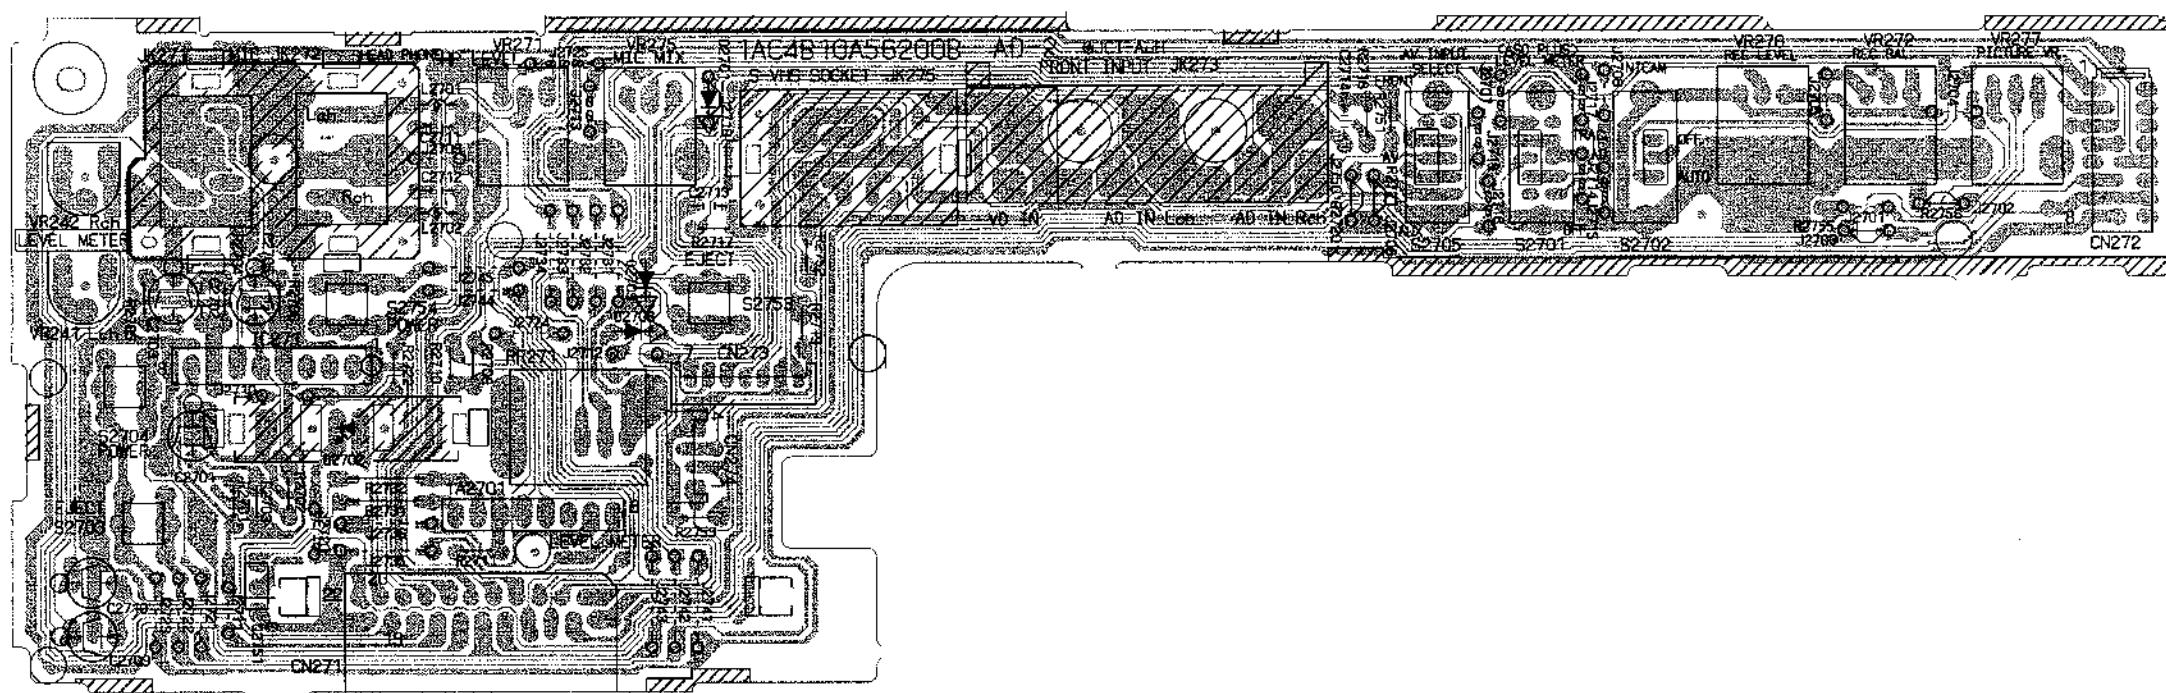

### 9-32. WAVEFORM OF SERVO

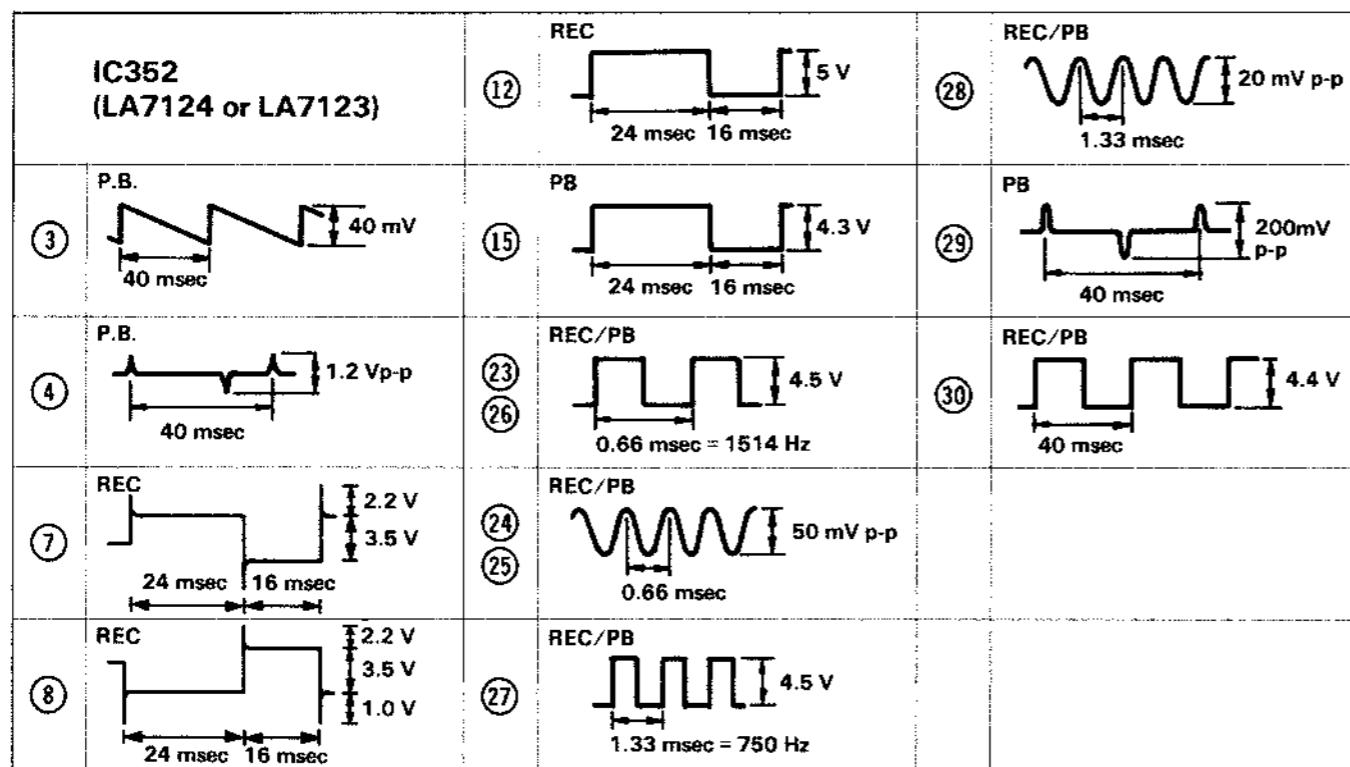

### V-LOCK PULSE GENERATION CIRCUIT WAVEFORM (IC391, Q3952, Q3953, D3951, D3952)

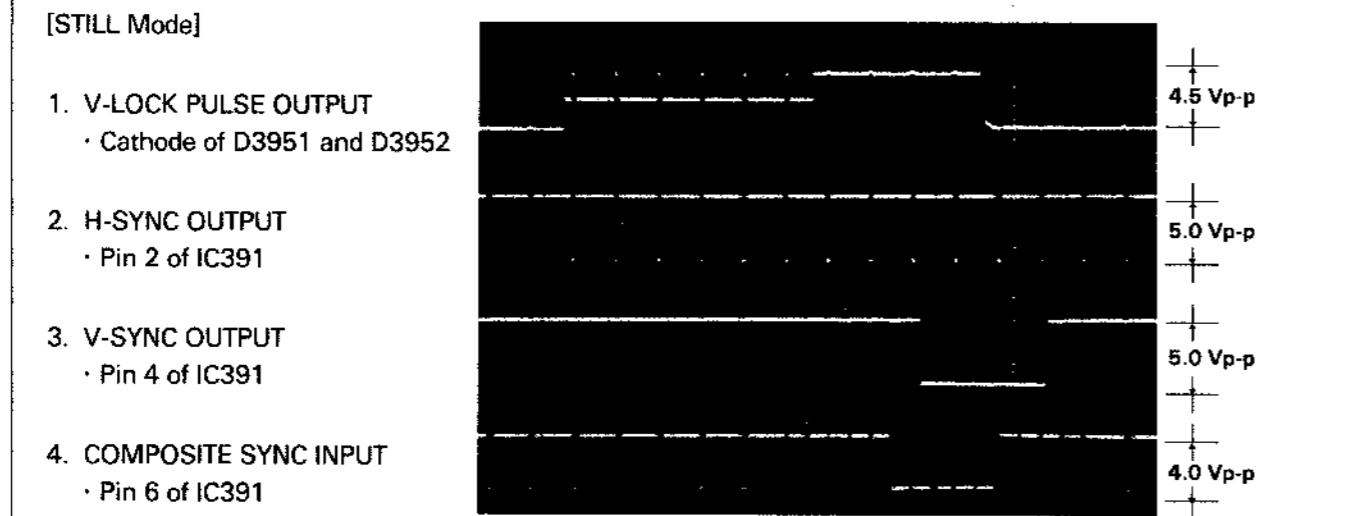

WF-S-VP

### 9-33. WAVEFORM OF AUDIO

| TEST LOCATION                                  | WAVEFORM | MODE/LEVEL                           |
|--|----------|--------------------------------------|
| IC201<br>Pin 68 (L ch)<br>and<br>Pin 78 (R ch) |          | REC<br>0.7 Vp-p<br>AV Input          |
| IC201<br>Pin 42 (L ch)<br>Pin 23 (R ch)        |          | REC<br>0.5 Vp-p<br>Modulation Level  |
| IC201<br>Pin 38<br>L ch                        |          | REC<br>1.2 Vp-p<br>1.4MHz Carrier    |
| IC201<br>Pin 28<br>R ch                        |          | REC<br>1.2 Vp-p<br>1.8 MHz Carrier   |
| CN202<br>Pin 4                                 |          | REC<br>100m Vp-p<br>1.4M/1.8M AF REC |
| CN202<br>Pin 3                                 |          | PB<br>1.5 Vp-p<br>AF PB              |
| IC201<br>Pin 56 (L ch)<br>Pin 9 (R ch)         |          | REC/PB<br>1.1 Vp-p<br>AD Level       |
| IC201<br>Pin 47 (L ch)<br>Pin 20 (R ch)        |          | REC/PB<br>1.5 Vp-p<br>Audio Output   |

#### NOTE:

Audio input Condition is 1KHz sine-wave signal from AV terminal.

WF-A2

## 9-34. IC301 SYSTEM CONTROL & DIGITAL SERVO MPU PIN FUNCTIONS TABLE

| No. | Name          | I/O | I/O Signal Function  |
|-----|---------------|-----|--|
| 1   | D-PG          | I   | Drum PG pulse input.   |
| 2   | S-DATA IN     | I   | Terminal for communication of mode data with other microprocessors.  |
| 3   | S-DATA OUT    | O   | Data is 8bitX12 block serial data.   |
| 4   | SSB CLK       | O   | The clock pulse is output from this microprocessor.  |
| 5   | INSERT ON/OFF | I   | Insert function ON/OFF terminal.   |
| 6   | ENV SW        | I   | Video head selection signal (PB envelop detection signal) input for 4-head special playback.                           |
| 7   | DOC           | I   | Drop out detection pulse input. Used for absorbing STILL noise.  |
| 8   | C-FG 2.       | I   | Capstan motor FG-2 signal input. Used for brake timing control at slow mode.   |
| 9   | C-FG 1.       | I   | Capstan motor FG-1 signal input. (Capstan speed control)   |
| 10  | D-FG          | I   | Head drum motor FG signal input. (Drum speed control)  |
| 11  | PB CTL P.     | I   | CTL head playback pulse input.   |
| 12  | COMP SYNC     | I   | Composite sync signal input.   |
| 13  | RF SW P.      | O   | Output of RF switching pulse created by head drum PG.  |
| 14  | AF SW P.      | O   | Output of Hi-Fi (FM) audio head switching pulse created by head drum PG.   |
| 15  | VD P          | O   | Dummy VD (V LOCK) pulse output at special playback mode.   |
| 16  | REC CTL       | O   | Recording control (CTL) signal output.   |
| 17  | DRUM PWM      | O   | Head drum motor rotation (speed/phase) control signal output. (Signal as Pulse Width Modulation)                       |
| 18  | CAP PWM       | O   | Capstan motor rotation (speed/phase) control signal output. (Signal as Pulse Width Modulation)                         |
| 19  | A-VSS         | -   | Ground terminal for internal A/D converter.  |
| 20  | AV REF        | I   | Reference voltage input for internal A/D converter.  |
| 21  | AF ENV        | I   | Hi-Fi (FM) audio head envelope detection signal input for ATR function.  |
| 22  | VD ENV        | I   | Video head envelope detection signal input for ATR function.   |
| 23  | D-PG MM       | I   | CR for drum PG pulse delay. (Head switching position adjustment.)  |
| 24  | SLOW TRK CR   | I   | CR for slow tracking adjustment.   |
| 25  | DEW S.        | I   | Dew sensor input terminal.   |
| 26  | OPTION        | I   | Terminal to alter internal specifications. (Set up input voltage: 0V for 2Head / 1.2V for 3Head / 5V for 4Head models) |
| 27  | T.TOP S.      | I   | Sensor signal input for tape beginning detection.  |
| 28  | T.END S.      | I   | Sensor signal input for tape end detection.  |
| 29  | RESET         | I   | Initial reset terminal for this IC.  |
| 30  | VDD           | -   | IC power supply input. (5Vdc)  |
| 31  | X2            | -   | IC clock OSC terminal. Frequency is 12MHz.   |
| 32  | X1            | -   |  |
| 33  | VSS           | -   | Ground terminal  |
| 34  | HAMP SW       | O   | Video head amplifier (SP/LP head or SUB head) selection signal output. (4/3 HEAD models)                               |
| 35  | ROTARY        | O   | Chrome phase control signal output for 4/3 head models.  |
| 36  | VD REC        | O   | Recording indication signal. Used for equipped rotary erase head models.   |
| 37  | SLOW+STILL    | O   | Output signal indicating SLOW/STILL modes.   |
| 38  | CTL GAIN DOWN | O   | CTL head AMP gain control signal output.   |
| 39  | -             | -   |  |
| 40  | CAP F/R       | O   | Capstan motor forward/revers control.  |
| 41  | DRUM P.       | O   | Outputs the drum jitter compensation in the slow mode.   |
| 42  | CAP STR/STP   | O   | Outputs the capstan motor start and brake pulses in the slow mode.   |
| 43  | REMARK        | O   | Output the control (CTL) signal re-recording control signal. Three-value output (H, M, L).                             |
| 44  | FE CTL        | O   | Output the rotary erase head ON/OFF control.   |
| 45  | ANT/VIDEO     | O   | Antenne through or video deck RF output select (Video when LOW).   |
| 46  | AF REC        | O   | Hi-Fi (FM) audio head recording timing control signal.   |
| 47  | LP H          | O   | "HIGH" output when tape speed is set to LP mode.   |
| 48  | POWER UP      | O   | "HIGH" output except when power is off, indicating that power is ON.   |
| 49  | SPECIAL PB    | O   | Output in special playback modes (R/F-SEARCH, STILL and SLOW).   |
| 50  | PB H          | O   | Signal indicating playback mode.   |
| 51  | REC           | O   | Signal indicating recording mode.  |
| 52  | INPUT SEL. V  | O   | Signal for selecting video input signal.   |
| 53  | INPUT SEL. A  | O   | Signal for selecting audio input signal.   |
| 54  | NORMAL/HIFI   | O   | Signal for selecting normal audio and Hi-Fi audio signal.  |
| 55  | ST/L/R        | O   | Signal for selecting audio output signal (STEREO / Lch / Rch / NORMAL).  |
| 56  | A.DUB         | O   | Signal indicating audio dubbing mode.  |
| 57  | A MUTE        | O   | Signal disable Hi-Fi audio signal output.  |
| 58  | A REC MUTE    | O   | Signal disable normal audio signal output.   |
| 59  | A NOR REC     | O   | Signal indicating normal audio recording.  |
| 60  | A NOR PB      | O   | Signal indicating normal audio playback.   |
| 61  | ML-M          | O   | Loading motor rotation speed (medium speed) indication signal.   |
| 62  | ML-L          | O   | Loading motor rotation speed (low speed) indication signal.  |
| 63  | ML-R          | O   | Loading motor rotation direction (REV) indication signal.  |
| 64  | ML-F          | O   | Loading motor rotation direction (FWD) indication signal.  |
| 65  | FF+REW        | O   | Signal indicating FF or REW modes.   |
| 66  | STLL+SLW2     | O   | Drop out pulse width selection signal output to DOC circuit.   |
| 67  | VSS           | -   | IC ground terminal.  |
| 68  | -             | I   | Normally pull-up 5Vdc.   |
| 69  | SP/LP         | O   | "LOW" output when tape speed is set to SP mode. "HIGH" is set to LP mode.  |
| 70  | EDIT IN       | I   | Edit mode control terminal.  |
| 71  | SW DATA 0     | I   |  |
| 72  | SW DATA 1     | I   | 3-bit data indicating operation position of mechanism.   |
| 73  | SW DATA 2     | I   |  |
| 74  | FL-START SW   | I   | Switch input indicating start of cassette loading or discharge by cassette mechanism.                                  |
| 75  | SAFETY SW     | I   | Input terminal for accidental ejection prevention switch. No operation to recording mode while "LOW" is input.         |
| 76  | -             | -   |  |
| 77  | VDD           | -   | IC power supply terminal. (5Vdc)   |
| 78  | T.REEL P.     | I   | Pulse input for detection of take-up reel table rotation.  |
| 79  | S.REEL P.     | I   | Pulse input for detection of supply reel table rotation.   |
| 80  | AV CTL        | O   | AV terminal (pin8 of 21pin AV socket) control signal output.   |

VP4968A

## 9-35. IC711 (M50959) TIMER MPU PIN FUNCTIONS TABLE

| No. | Name        | I/O | I/O Signal Function  |
|-----|-------------|-----|--|
| 1   | VDD         | -   | IC power supply input. (5 Vdc)   |
| 2   | TEXT TXD    | O   | Data output (TXD) terminal for VIDEOTEXT decoder unit.                                 |
| 3   | TEXT RXD    | I   | Data input (RXD) terminal for VIDEOTEXT decoder unit.                                  |
| 4   | PLL CLOCK   | O   |  |
| 5   | PLL DATA    | O   | PLL tuning DATA , CLOCK and CE (enable) signal output to tuner / IF unit.              |
| 6   | PLL CE      | O   |  |
| 7   | BILINGUAL   | I   | Audio transmission system indication signal (BILINGUAL) input from decoder circuit.    |
| 8   | COMMON CLK  | O   | Terminal for communication of respective data with E2PROM IC, OSD IC or tuning PLL IC. |
| 9   | COMMON DATA | I/O | The clock pulse is output from this microprocessor.                                    |
| 10  | E2PROM CS   | O   | E2PROM access (enable) signal output   |
| 11  | PAL / SECAM | O   |  |
| 12  | CH +        | O   | CH+ terminal control signal output.  |
| 13  | STEREO      | I   | Audio transmission system indication signal (STEREO) input from decoder circuit.       |
| 14  | AUDIO MUTE  | O   | "H" output (Audio Signal Mute) during tuning period.                                   |
| 15  | VIDEO MUTE  | O   | "H" output (Video Signal Mute) during tuning period.                                   |
| 16  | TEXT CLK    | O   | Clock signal output to VIDEOTEXT decoder unit  |
| 17  | SSB CLK     | I   | Terminal for communication of mode data with other MPU.                                |
| 18  | SSB SDA OUT | O   | The clock pulse is input from system control MPU.                                      |
| 19  | SSB SDA IN  | I   | Data is 8bit X 12 block serial data.   |
| 20  | AFT C       | I   | AFT S-curve input terminal.  |
| 21  | SD (H SYNC) | I   | Horizontal sync detection signal input for assistance channel discrimination.          |
| 22  | VPS SCL     | O   | Clock signal for VPS decoder IC.   |
| 23  | VPS SDA     | I/O | Data exchange with the VPS decoder IC.   |
| 24  | POWER FAIL  | I   | Power failure mode set at "L" input.   |
| 25  | IR SIG.     | I   | Remote control signal input.   |
| 26  | VSS         | -   | IC Ground terminal.  |
| 27  | RESET       | I   | Initial reset terminal for this IC. Reset when "LOW".                                  |
| 28  | X IN        | -   | IC clock OSC terminal.   |
| 29  | X OUT       | -   | Frequency is 6 MHz.  |
| 30  | XC IN       | -   | IC clock OSC used in the power failure mode.   |
| 31  | XC OUT      | -   | Frequency is 32.768 kHz.   |
| 32  | VSS         | -   | IC Ground terminal.  |
| 33  |             | -   |  |
| 34  | KEY IN 4    | I   |  |
| 35  | KEY IN 3    | I   | Operation key data inputs.   |
| 36  | KEY IN 2    | I   |  |
| 37  | KEY IN 1    | I   |  |
| 38  | Vpp         | I   |  |
| 39  | -           | -   | - 30 V input for display (FLD) drive.  |
| 40  | SEG p       | O   |  |
| 41  | SEG o       | O   |  |
| 42  | SEG n       | O   |  |
| 43  | SEG m       | O   | Display segment outputs (FLD).<br>(Included key-scan output)                           |
| 44  | SEG l       | O   |  |
| 45  | SEG k       | O   |  |
| 46  | SEG j       | O   |  |
| 47  | SEG i       | O   |  |
| 48  | G9          | O   |  |
| 49  | G8          | O   |  |
| 50  | G7          | O   |  |
| 51  | G6          | O   |  |
| 52  | G5          | O   |  |
| 53  | G4          | O   |  |
| 54  | G3          | O   |  |
| 55  | G2          | O   |  |
| 56  | G1          | O   |  |
| 57  | SEG h       | O   |  |
| 58  | SEG g       | O   |  |
| 59  | SEG f       | O   |  |
| 60  | SEG e       | O   | Display segment outputs (FLD).<br>(Included key-scan output)                           |
| 61  | SEG d       | O   |  |
| 62  | SEG c       | O   |  |
| 63  | SEG b       | O   |  |
| 64  | SEG a       | O   |  |

TMVP\_FVT



**Thorn EMI UK Rental Limited**  
**The Park Centre**  
**Arlington Business Park**  
**Theale**  
**Reading**  
**Berkshire**  
**RG7 4SA**

Registration in England No. 502489

VP4H/E-BD 500 HA WM-530994