



# DENON

Hi-Fi Integrated Stereo Amplifier


## SERVICE MANUAL MODEL PMA-925R/725R INTEGRATED STEREO AMPLIFIER

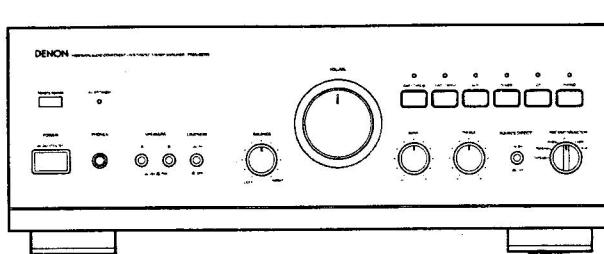

PMA-925R

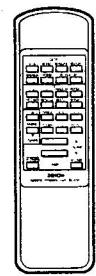

PMA-925R

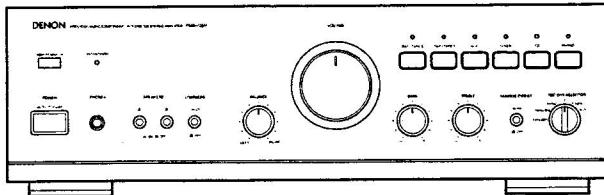


PMA-725R

### CONTENTS

|   |        |
|---|--------|
| OPERATING INSTRUCTIONS .....  | 2-7    |
| REMOVAL OF EACH SECTION .....   | 8, 9   |
| FUNCTION OF NEW CIRCUIT .....   | 10, 11 |
| METHOD OF ADJUSTMENTS .....   | 12     |
| BLOCK AND LEVEL DIAGRAM .....   | 13     |
| SEMICONDUCTORS .....  | 14, 15 |
| PRINTED WIRING BOARD .....  | 16-19  |
| NOTE FOR PARTS LIST .....   | 20     |
| PARTS LIST OF P.W.B. ASSY .....   | 20-25  |
| PMA-925R .....  | 20-23  |
| PMA-725R .....  | 23-25  |
| EXPLODED VIEW OF CHASSIS AND CABINET, PARTS LIST OF EXPLODED VIEW ..... | 26-29  |
| PMA-925R .....  | 26, 27 |
| PMA-725R .....  | 28, 29 |
| WIRING DIAGRAM .....  | 30     |
| SCHEMATIC DIAGRAM .....   | 31-34  |
| PMA-925R .....  | 31, 32 |
| PMA-725R .....  | 33, 34 |



**NIPPON COLUMBIA CO., LTD.**

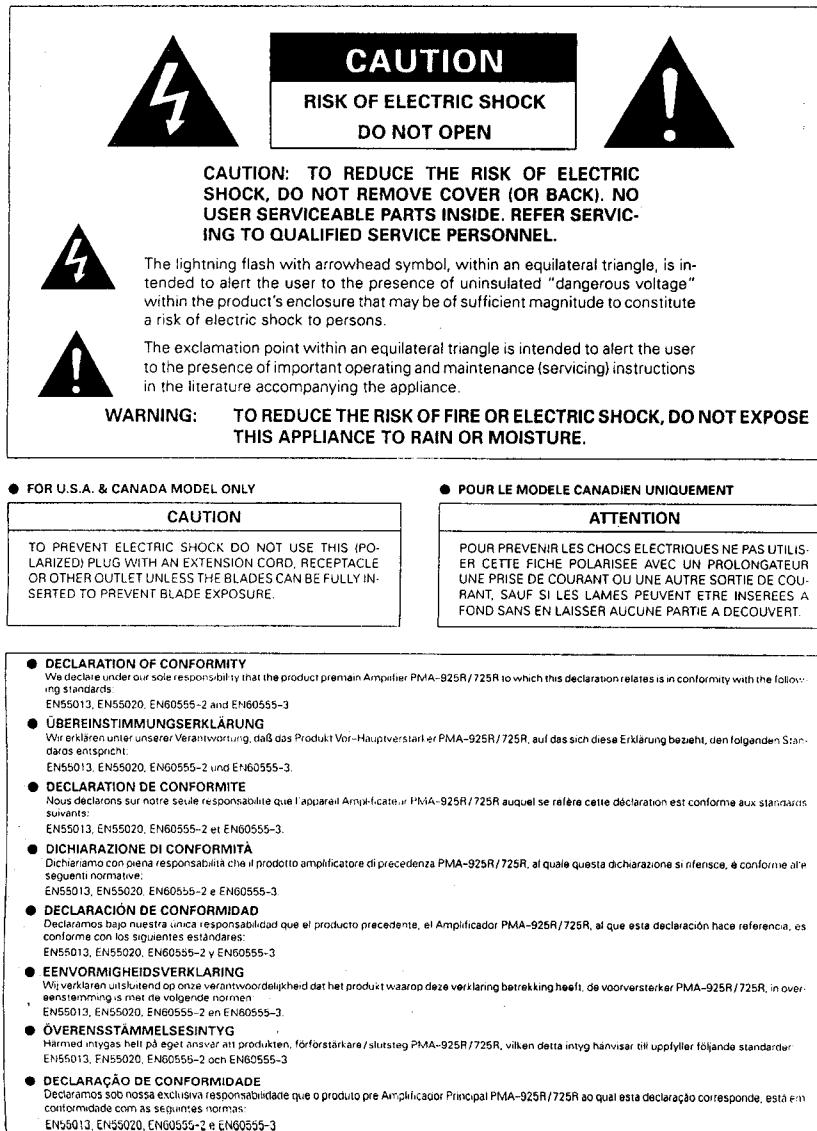

## ● FOR U.S.A. MODEL ONLY

## SAFETY INSTRUCTIONS

1. Read Instructions – All the safety and operating instructions should be read before the appliance is operated.
2. Retain Instructions – The safety and operating instructions should be retained for future reference.
3. Heed Warnings – All warnings on the appliance and in the operating instructions should be adhered to.
4. Follow Instructions – All operating and use instructions should be followed.
5. Water and Moisture – The appliance should not be used near water – for example, near a bathtub, washbowl, kitchen sink, laundry tub, in a wet basement, or near a swimming pool, and the like.
6. Carts and Stands – The appliance should be used only with a cart or stand that is recommended by the manufacturer.
7. An appliance and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the appliance and cart combination to overturn.
8. Wall or Ceiling Mounting – The appliance should be mounted to a wall or ceiling only as recommended by the manufacturer.
9. Ventilation – The appliance should be situated so that its location or position does not interfere with its proper ventilation. For example, the appliance should not be situated on a bed, sofa, rug, or similar surface that may block the ventilation openings; or, placed in a built-in installation, such as a bookcase or cabinet that may impede the flow of air through the ventilation openings.
10. Heat – The appliance should be situated away from heat sources such as radiators, heat registers, stoves, or other appliances (including amplifiers) that produce heat.
11. Power Sources – The appliance should be connected to a power supply only of the type described in the operating instructions or as marked on the appliance.
12. Power-Cord Protection – Power-supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords at plugs, convenience receptacles, and the point where they exit from the appliance.
13. Cleaning – The appliance should be cleaned only as recommended by the manufacturer.
14. Power Lines – An outdoor antenna should be located away from power lines.
15. Outdoor Antenna Grounding – If an outside antenna is connected to the receiver, be sure the antenna system is grounded so as to provide some protection against voltage surges and built-up static charges. Article 810 of the National Electrical Code, ANSI/NFPA 70, provides information with regard to proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna-discharge unit, size of grounding conductors, location of antenna-discharge unit, connection to grounding electrodes, and requirements for the grounding electrode. See Figure A.
16. Nonuse Periods – The power cord of the appliance should be unplugged from the outlet when left unused for a long period of time.
17. Object and Liquid Entry – Care should be taken so that objects do not fall and liquids are not spilled into the enclosure through openings.
18. Damage Requiring Service – The appliance should be serviced by qualified service personnel when:
  - a. The power-supply cord or the plug has been damaged; or
  - b. Objects have fallen, or liquid has been spilled into the appliance; or
  - c. The appliance has been exposed to rain; or
  - d. The appliance does not appear to operate normally or exhibits a marked change in performance; or
  - e. The appliance has been dropped, or the enclosure damaged.
19. Servicing – The user should not attempt to service the appliance beyond that described in the operating instructions. All other servicing should be referred to qualified service personnel.

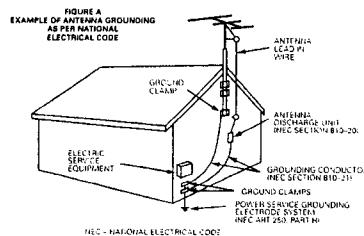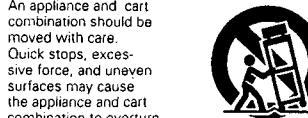

- NOTE:**
- Always keep the POWER switch on the main unit turned on
  - Turn the power on and off from the remote control unit
  - Unplug the power cord when you do not plan to use the unit for a long period of time.

**CAUTION:**  
If only the MUTE/STANDBY LED is lit, this means that the power is turned off from the remote control unit. Turn the power on from the remote control unit.

**HINWEIS:**  
1. Schalten Sie den Netzschalter (POWER) am Hauptgerät stets eingeschaltet.  
Schalten Sie den Strom mit dem Fernbedienungsgerät ein- und aus.  
3. Trennen Sie das Netzkabel vom Netz ab, wenn Sie beachten, dass Gerät über einen längeren Zeitraum hinweg nicht zu benutzen.

**VORSICHT:**  
Wenn nur das Stummenschalt-/Bereitschafts-LED (MUTE/STANDBY) leuchtet, so bedeutet dies, daß der Strom vom Fernbedienungsgerät aus ausgeschaltet worden ist. Schalten Sie den Strom vom Fernbedienungsgerät aus ein.

**REMARQUE:**  
1. S'assurer que le commutateur d'alimentation (POWER) sur l'unité principale soit toujours dans la position active.  
2. Allumer et éteindre l'appareil avec la télécommande.  
3. Débrancher le cordon d'alimentation lorsque l'appareil ne sera pas utilisé pendant une longue période.

**ATTENTION:**  
Si se iluminan (LED) de sordina/velilla (MUTE / STANDBY) est ilumina, ciò significa que l'appareil est mis hors circuit par la télécommande. Allumer l'appareil avec la télécommande.

**NOTA:**  
1. Tenere sempre l'interruttore della corrente (POWER) dell'unità principale nella posizione di attivazione.  
2. Accendete e spegnete la corrente usando il telecomando.  
3. Collegate il filo di alimentazione quando avete intenzione di non usare l'apparecchio per un lungo periodo.


**AVVERTENZE:**  
Se sono illuminati solo i LED di attenuazione/attesa (MUTE / STANDBY), questo significa che la corrente è stata spenta con il telecomando. Riaccende la corrente usando il telecomando.

**PRECAUTIONS FOR INSTALLATION**  
Leave at least 10cm of space between this unit and any other component placed above.

**SICHERHEITSMASSNAHMEN BEIM EINBAU**  
Lassen einen Mindestabstand von 10 cm zwischen diesem Gerät und der anderen Komponenten.

**PRÉCAUTIONS D'INSTALLATION**  
Prevoir un espace d'au moins 10cm entre l'unité et tout autre appareil se trouvant au-dessus.

**PRECAUZIONI PER L'INSTALLAZIONE**  
Lasciate uno spazio libero di almeno 10 cm fra quest'unità e qualsiasi altro componente che è collocato sopra la stessa.

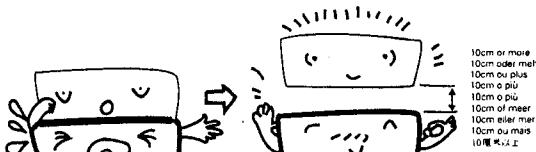

**NOTA:**

- Mantenga siempre activado el interruptor de alimentación (POWER) en la unidad principal.
- Encienda y apague el equipo desde la unidad de control remoto.
- Cuando la unidad vaya a estar fuera de uso por un período prolongado de tiempo, desconecte el cable de alimentación.

**PRECAUCIÓN:**  
Cuando solo el indicador LED de silenciamiento/modo de espera (MUTE/STANDBY) está encendido, significará que la alimentación a la unidad ha sido desconectada desde la unidad de control remoto. Conecte la alimentación desde la unidad de control remoto.

**OPMERKING:**  
1. Zorg er altijd voor dat de stroomschakelaar (POWER) van het hoofdstel in de ingeschakelde stand staat.  
2. Schakel de stroom in en uit m.b.v. de afstandsbediening.  
3. Trek het netsnoer uit wanneer u denkt het toestel gedurende een lange periode niet te gebruiken.

**WAARSCHUWING:**  
Indien enkel de dempings-(MUTE)/STANDBY LED brandt, betekent dit dat de spanning die afstandsbediening is uitgeschakeld. Schakel de spanning in met de afstandsbediening.

**OBSERVERA:**  
1. Låt alltid strömbrytaren (POWER) på huvudenheteren vara påslagen.  
2. Slå till/för strömmen med hjälp av fjärrkontrollen.  
3. Koppla loss nätkabeln om apparaten inte ska användas under lång tid.

**VARNING:**  
Om endast MUTE/STANDBY-lampan lyser betyder det att strömmen har stängts av via fjärrkontrollen. Strömmen måste då slås på via fjärrkontrollen igen.

**NOTA:**

- Mantenha o interruptor da Corrente (POWER) na unidade principal sempre ligado.
- Ligue e desligue a corrente a partir da unidade de controlo remoto.
- Desconecte o fio de força quando intentar não utilizar a unidade por longo tempo.

**CAUTELA:**  
Se apenas se iluminam o LED de sordina/espuma (MUTE / STANDBY), isso significa que a força se desligou a partir do controle remoto. Ligue a força a partir do controle remoto.

**註 :**

- 主機上的POWER (電源) 條掣必須一直保持接通。
- 由遙控器操縱電源之開和關。
- 本機打算長時間不用時應將電源接線拔下。

**注意：**  
若只有 MUTE/STANDBY LED 指示燈亮，就表示電源已由遙控器關閉。應從遙控器開啟電源。

**PRECAUCIONES PARA LA INSTALACION**  
Dejar por lo menos 10 cm de espacio entre esta unidad y cualquier otro componente situado sobre ella.

**VOORZORGSMAAITREGELLEN**  
Bij plaatsing dient u een ruimte van minstens 10 cm open te laten tussen dit toestel en een ander daarop geplaatst komponent.

**FÖRSIKTIGHETSGÅRÄDER VID INSTALLATIONEN**  
Se till att det finns minst 10 cm mellanrum mellan apparaten och en ev. annan apparat som sitter ovanpå.


**CUIDADOS NA INSTALAÇÃO**  
Deixe um espaço de pelo menos 10 cm entre esta unidade e qualquer outro componente colocado acima.

**安装注意**  
本机须与其上方摆放的其它音响设备相隔至少10厘米。

**NOTE ON USE / HINWEISE ZUM GEBRAUCH / OBSERVATIONS RELATIVES A L'UTILISATION  
NOTE SULL'USO / NOTAS SOBRE EL USO / ALVORENS TE GEBRUIKEN / OBSERVERA  
OBSERVAÇÕES QUANTO AO USO**



**FRONT PANEL**  
**FRONTPLATTE**  
**PANNEAU AVANT**  
**PANNELLO ANTERIORE**  
正面

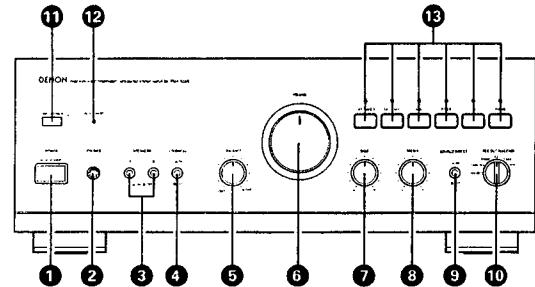

**REAR PANEL**  
**RÜCKWAND**  
**PANNEAU ARRIÈRE**  
**PANNELLO POSTERIORE**  
背面

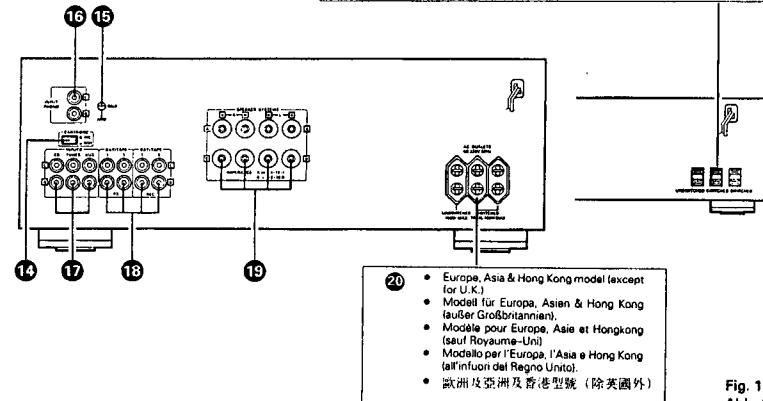


Fig. 1  
Abb. 1  
图1

| ① CARTRIDGE                                      | ⑩ GND | ⑯ PHONO   | ⑭ CD, TUNER,<br>AUX                       | ⑮ DAT/TAPE-1, DAT/TAPE-2<br>• TAPE PB • TAPE REC   | ⑯ SPEAKERS                   |
|--|-------|---|---|--|------------------------------|
| Cartridge Selector Switch                        | GND   | Phono Input Terminals<br>(Phone)                    | Input Terminals<br>(CD, TUNER, AUX)       | Playback and Recording Terminals<br>• Playback Terminals<br>• Recording Terminals                  | Speaker Terminals            |
| Tonabnehmer-<br>Wahlschalter                     | GND   | Schallplattenspieler-<br>Eingangsbuchsen<br>(Phone) | Eingangsbuchsen<br>(CD, TUNER, AUX)       | Tonband-Ein/Ausgänge<br>• Wiedergabe<br>• Aufnahme   | Lautsprecher-<br>Hörmömen    |
| Spieldose<br>der<br>Cartouche                    | GND   | Bornes d'entrée<br>(Phone)                          | Bornes d'entrée<br>(CD, TUNER, AUX)       | Bornes de lecture et d'enregistrement<br>• Bornes de lecture<br>• Bornes d'enregistrement          | Bornes de haut-<br>parleurs  |
| Interfattore di<br>Sincronizzazione<br>Cartuccia | GND   | Terminali di ingresso<br>Phono                      | Terminali di ingresso<br>(CD, TUNER, AUX) | Terminali di riproduzione registrazione<br>• Termini di riproduzione<br>• Termini di registrazione | Terminali degli altoparlanti |
| 输出接线端子   | PHONO | 唱盘输入端子  | 输入端子                                      | 播放与录音端子  | 扬声器端子                        |

**CONNECTIONS**  
**ANSCHLÜSSE**  
**CONNEXIONS**  
**CONNESSIONI**  
接线方法

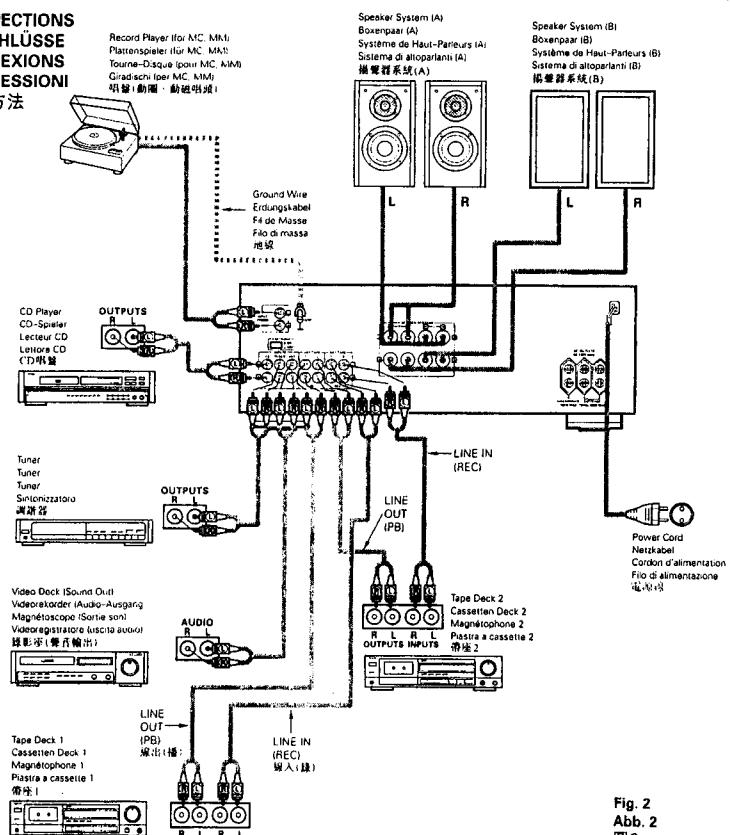


Fig. 2  
Abb. 2  
图2

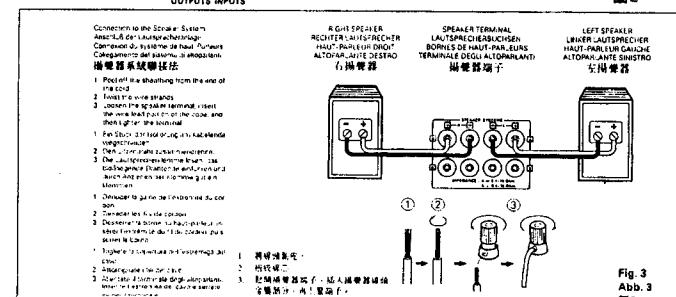


Fig. 3  
Abb. 3  
图3

## DESIGNATIONS AND FUNCTIONS OF PANEL CONTROLS

### ① POWER (Power Switch)

When the power switch is turned ON (▲), the MUTE/STANDBY LED (1) lights. When the power switch is turned ON, power is supplied to the unit. It takes a few seconds after the power is turned on for the unit to warm up. This is due to the built-in muting circuit that eliminates noise during the on/off operation.

### ② PHONES (Headphone Jack)

This jack is used to plug in the headphones.

### ③ SPEAKERS (Speaker Selection Switch)

The PMA-925R/725R can be connected to two speaker systems: speaker system A and speaker system B. When A is pressed, the speaker system connected to speaker output terminals A operates. When B is pressed, the speaker system connected to speaker output terminals B operates. When A and B are pressed on together, both speaker systems operate simultaneously. When the A and B switches are both off (in the out position), there is no output from the speaker terminals. This setting is used to listen to playback through the headphones.

### ④ LOUDNESS (Loudness Switch)

When the volume is low, it is difficult for the human ear to clearly distinguish notes in the low and high frequency ranges. The loudness switch allows a simple "one-touch" correction of this difficulty. Press the loudness switch ON (▲) when listening to music at a low volume. The low notes and high notes will be corrected to produce a natural sound.

### ⑤ BALANCE (Balance Control)

This knob is used to adjust the balance between the left and right channels. When it is set to the center position, the amplitude of the amplifier is equal on both sides. If there is a difference in the left and right channel output voltages for a cartridge, move the knob to the left and the right to adjust it. If the volume on the right side is too low, turn the knob to the right (▲). If the volume on the left side is too low, turn the knob to the left (▼). This will achieve an even balance on the left and right sides.

### ⑥ VOLUME (Volume Control)

This knob controls the overall volume level. Turn the knob to the right (▲) to raise the volume and to the left (▼) to lower it.

### ⑦ BASS (Bass Control)

This knob is used to control the bass quality of the sound. When the knob is set at the center position, the frequency characteristics are flattened in the range below 1000 Hz. The bass is emphasized as the knob is moved off center to the right (▲), and reduced as it is moved to the left (▼). When volume control (6) is set to the right of the center position, the effect of the other controls is reduced.

### ⑧ TREBLE (Treble Control)

This knob is used to control the treble quality of the sound. When the knob is set at the center position, the frequency characteristics are flattened in the range above 1000 Hz. The treble is emphasized as the knob is moved off center to the right (▲), and reduced as it is moved to the left (▼). When volume control (6) is set to the right of the center position, the effect of the other controls is reduced.

### ⑨ SOURCE DIRECT (Source Direct Switch)

The controls (BALANCE, LOUDNESS, and TONE) can be used when this switch is in the OFF (▲) position. When set to the ON (▲) position, the above controls are bypassed and the signals are input directly to the volume control circuit, providing high quality sound.

### ⑩ REC OUT SELECTOR (Rec Out Select Switch)

Use this switch to select the recording component.

- PHONO: Used to recording from the turntable.
- CD: Used to recording from the CD player.
- TUNER: Used to recording from the tuner.
- AUX: Used to recording component that connected to the AUX terminal.
- DAT/TAPE-1 ▶ 2: Used to recording from the tape deck connected to the DAT/TAPE-1 jacks.
- DAT/TAPE-2 ▶ 1: Used to recording from the tape deck connected to the DAT/TAPE-2 jacks.

### ⑪ REMOTE SENSOR (Remote Control Sensor)

This sensor receives the infra-red light transmitted from the wireless remote control unit. For remote control, point the wireless remote control unit towards the sensor.

### ⑫ MUTE / STANDBY LED

This LED flashes while the muting circuit is activated when the power is turned on and when muting is turned on from the remote control unit, and remains lit (without flashing) while the power is on.

### ⑬ INPUT SELECTOR (Input Select Switch)

Use these to select the program source. When the button for the desired program source is selected, its LED lights. One program source can only be selected at a time, as follows:

- PHONO: Used to select the output from a turntable that is connected to the PHONO terminal. Use the PHONO switch (1) (Rear Panel Side) to switch the sensitivity to correspond to the cartridge type being used.
- CD: Used to listen a compact disc player or other component that is connected to the CD terminal.
- TUNER: Used to play a component such as an FM/AM tuner or a TV tuner that is connected to the TUNER terminal.
- AUX: Used to play a component such as a Hi-Fi video player, TV tuner, 8-track tape player or tape deck that is connected to the AUX terminal.
- DAT/TAPE-1: Use this Position when using the tape deck, etc., connected to the DAT/TAPE-1 jacks.
- DAT/TAPE-2: Use this Position when using the tape deck, etc., connected to the DAT/TAPE-2 jacks.

### ⑭ PHONO (Cartridge Selection Switch): Rear Panel Side

This switch is set according to the type of player cartridge to be used.

- MC (▲): Used when an MC (moving-coil) cartridge with an output of less than 0.5 mV is used.
- MM (▲): Used when an MM (moving-magnet) cartridge with an output of 2 mV or more is used.

### ⑯ AC OUTLETS: Rear Panel Side

• For U.S.A., Canada, and Taiwan R.O.C. models.

AC outlets are used for connecting amplifier component units, such as tuner, turntable, tape deck, etc.

- SWITCHED (Total capacity: 120 W): These outlets are turned ON/OFF when main power switch and POWER button on the Remote Control Unit is turned on/off.
- UNSWITCHED (Capacity: 240 W): This outlet is always ON whether power switch is on or OFF.

• For Europe (except the U.K.), Asia and Hong Kong models.

AC outlets are used for connecting amplifier component units, such as tuner, turntable, tape deck, etc.

- SWITCHED (Total capacity: 100 W): These outlets are turned ON/OFF when main power switch and POWER button on the Remote Control Unit is turned on/off.
- UNSWITCHED (Capacity: 100 W): This outlet is always ON whether power switch is on or OFF.

## OPERATION

### PREPARED

#### 1. CHECKING CONNECTIONS

- Make sure that all the connections are proper by referring to the back panel. (Fig. 2, 3)
- Check the polarity (positive and negative) of connections, and the directivity of stereo separation (right cord to right channel terminal, and left cord to left channel terminal).
- Check the directivity of pin cord connection.

#### 2. SETTING OF EACH KNOB

- Turn the volume control knob counterclockwise, to "0".
- Set the rotary knob to "flat".
- Set SOURCE DIRECT and LOUDNESS to "OFF (▲)".

After checking the above items, turn on the power, the amplifier is set in the ready mode in a few seconds.

### PLAYING A RECORD

- 1. Set the INPUT SELECTOR switch to "PHONO".
- 2. Operate the turntable and play the record.
- 3. Turn the volume and tone controls to yield an appropriate volume and sound quality.

### PLAYBACK OF CD PLAYER

1. Set the INPUT SELECTOR switch to "CD".

2. Operate the CD player.

3. Turn the volume and tone controls to yield an appropriate volume and sound quality.

### RECEPTION OF RADIO PROGRAMS

1. Set the INPUT SELECTOR switch to "TUNER".

2. Operate the tuner to receive a radio program.

3. Turn the volume and tone controls to yield an appropriate volume and sound quality.

### CONNECTIONS OF AUDIO EQUIPMENT TO AUX TERMINALS

1. Set the INPUT SELECTOR switch to "AUX" Position.

2. Operate the Audio equipment Systems.

3. Turn the volume and tone controls to yield an appropriate volume and sound quality.

### PLAYBACK WITH TAPE DECK

1. Set the INPUT SELECTOR switch to "DAT/TAPE-1" or "DAT/TAPE-2".

2. Operate the Tape Deck.

3. Turn the volume and tone controls to yield an appropriate volume and sound quality.

### RECORDING WITH TAPE DECK

1. Set the REC OUT SELECTOR to the program source you wish to record.

2. Start the playback of the program source.

3. Start recording with the component connected to "DAT/TAPE-1" or "DAT/TAPE-2".

- In the PMA-925R/725R, the REC OUT signal and the speaker (headphone) signal are output via separate circuits so that knobs and switches related to the tone and volume have no effect whatever on the sound that is recorded. Also, since the recording function is selected by the REC OUT SELECTOR, the free program source can be played through the speakers (or headphones) even during recording.

### MONITORING THE RECORDING

A recording in progress can be monitored if a tape deck with three individual heads for recording and playback is used. A tape deck in which a common head is used for both recording and playback cannot be used to monitor recording. When a recording is being made using DAT/TAPE-1, selecting DAT/TAPE-1 with the INPUT SELECTOR will engage the RECORDING MONITOR and permit a check of the recording condition.

### CAUTION

#### Protective Circuit

This set is equipped with a high speed protective circuit. This circuit protects the internal circuitry from damage due to large currents flowing when the speaker jacks are not completely connected or when an output is generated by a short circuit. This protective circuit's operation cuts off the output to the speakers. In such a case, be sure to turn the power to the set off and check the connections to the speakers. Then turn the power on again. After muting for several seconds, the set will operate normally.

### NOTE


- This amplifier has a full memory back-up system. When the power is turned on, INPUT SELECTOR (1) are set to the last mode set before the power was turned off.

## REMOTE CONTROL OPERATION


The accessory Remote Control Unit is used to control the amplifier from a convenient distance.

### (1) Inserting the Dry Cell Batteries


- 1. Remove the battery cover on the Remote Control Unit.

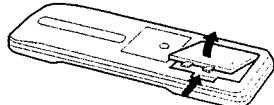


- 2. Insert two dry cell batteries as shown in the diagram on the battery supply unit.

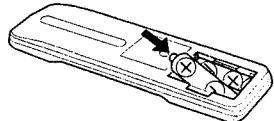

- 3. Replace the battery cover.

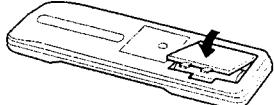

### (2) Directions for use

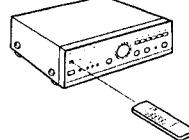

- Operate the Remote Control Unit while pointing it towards the Remote Control Sensor on the Amplifier as shown in the diagram on the left.
- The Remote Control Unit can be used at distances up to about 8 meters in a straight line from the amplifier. This distance will decrease if there are obstructions blocking the infra-red light transmission or if the Remote Control Unit is not directed straight at the amplifier.

#### Note on operation

- Do not press the operating buttons on the Amplifier and the Remote Control Unit at the same time. This will cause misoperation.
- Operation of the Remote Control Unit will become less effective or erratic if the infrared Remote Control Sensor on the Amplifier is exposed to strong light or if there are obstructions between the Remote Control Unit and the sensor.
- In case you operate a VCR, TV or other components by remote control, do not operate buttons on two different remote control units at the same time. This will cause misoperation.


**Besides being able to operate the PMA-925R/725R amplifier with this Remote Control Unit, you can also operate a DENON cassette deck and CD player from this handy full-system Remote Control Unit.**

#### Remote control section

##### Full-system Remote Control Unit

The full-system Remote Control Unit operates all major functions of the Amplifier, such as function switching, volume control. But that's not all! The same control pad can also control the major functions of a DENON CD player and cassette deck and tuner when combined with the PMA-925R/725R to create a remarkably ergonomic and versatile DENON system with all the quality sound reproduction that the devoted audiophile expects. .

## Remote Control Unit RC-176 supplied with the PMA-925R/725R

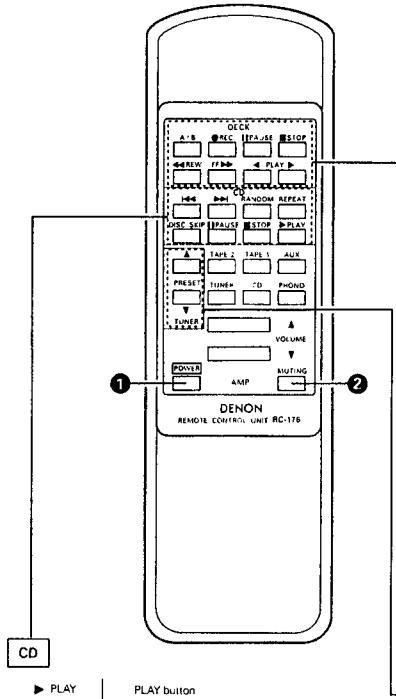

### ① POWER button

This button can be used to turn on and off the power of the amplifier. However, the power for the amplifier turned on and off if it is in the power standby mode and the power cord is plugged in.

This button will not function if there is a power failure, if the power cord is not plugged in, or when using an audio timer.

### ② MUTING button

Pressing this switch will activate the muting condition and no signals will be output to the speakers.

#### Other buttons

Other buttons are exclusively for the PMA-925R/725R, and function in the same way as the corresponding buttons on the set.

#### DECK

|           |   |
|-----------|---|
| ► PLAY    | PLAY button   |
| ■ STOP    | STOP button   |
| I ▲       | Reverse Track Search button                                 |
| ► ▼       | Forward Track Search button                                 |
| RANDOM    | Refer to the operating instructions of your DENON CD player |
| REPEAT    |   |
| DISC SKIP |   |
| II PAUSE  | PAUSE button  |

#### TUNER

### PRESET ▲ buttons

Press this button to move up or down among the preset station numbers.

- |           |   |
|-----------|---|
| ► PLAY    | PLAY button   |
| ■ STOP    | STOP button   |
| I ▲       | Reverse Track Search button                                 |
| ► ▼       | Forward Track Search button                                 |
| RANDOM    | Refer to the operating instructions of your DENON CD player |
| REPEAT    |   |
| DISC SKIP |   |
| II PAUSE  | PAUSE button  |
- The RC-176 Remote Control Unit can control CD players and cassette decks manufactured by DENON
  - Note that operation may not be possible for some models
  - Buttons are conveniently separated into groups, each group controlling one specific component. The groups are AMP, FUNCTION, CD, DECK and TUNER etc..

For details on operating other components, refer to the operating instructions for the CD player and/or cassette deck.

#### CAUTION:

- If the power is turned off with the Remote Control Unit, the set is switched to the power stand-by state. If you are absent for a long period of time, unplug the power cord.
- Only the MUTE/STANDBY LED ② lights when in the power stand-by mode.
- You may experience erratic operation of the Remote Control Unit if it is operated in fluorescent light and direct sunlight, in particular if this light strikes the Remote Control Sensor on the Amplifier. However, this is not a malfunction, and if this should happen, simply protect the sensor against such light.

| Technical Data<br>(typical value)   | Technische Daten<br>(typische Werte)  | Caractéristiques techniques<br>(valeur caractéristique)   | PMA-925R/725R   |
|---|---|---|---|
| <b>POWER AMPLIFIER SECTION</b>  |   |   |   |
| <b>Rated Output Power:</b><br>• Both channel driven:<br>20 W/20 Hz - 20 kHz, THD 0.02%/<br>0.05%<br>(4Ω/ohm Load)<br>DIN, 1 kHz, THD 0.7% | <b>LEISTUNGSSENDS VERSTÄRKER</b><br><b>Nenn-Ausgangsleistung:</b><br>• Beide Kanäle betrieben:<br>20 W/20 Hz - 20 kHz, THD 0.02%/<br>0.05%<br>(4Ω/ohm Load)<br>DIN, 1 kHz, THD 0.7% | <b>PARTIE AMPLIFICATEUR<br/>DEPUISSEANCE</b><br><b>Puissance nominale:</b><br>• Amplification deux canaux<br>20 W/20 Hz, THD 0.02%/<br>0.05%<br>(charge 4 Ω/ohms)<br>DIN, 1 kHz, THD 0.7% | 80W+80W/65W+65W<br>130W+130W/100W+100W  |
| <b>Total Harmonic Distortion:</b><br>(-3 dB at rated output,<br>8 Ω/ohms)   | <b>• 2-fachlaufend 80W/65W<br/>per channel bei 8 Ω/ohms<br/>20 W/20 Hz - 20 kHz, THD<br/>no more than 0.02%/0.05%<br/>total harmonic distortion</b>                                 | <b>• 2-fachlaufend 80W/65W<br/>par canal sur min. 8 Ω/ohms de<br/>20 Hz à 20 kHz, THD une<br/>distorsion harmonique totale<br/>de 0.02%/0.05% ou moins.</b>                               | 80W/65W   |
| <b>PRE AMPLIFIER SECTION</b>  |   |   |   |
| <b>Rated Output:</b><br>(Recout Terminal)<br>Input Sensitivity/<br>Input Impedance/<br>PHONO:   | <b>VORVERSTÄRKER</b><br><b>Nenn-Ausgangsleistung:</b><br>(Aufnahme-Ausgangsbuchse)<br>Eingangsempfindlichkeit/<br>Eingangsimpedanz/<br>PHONO:                                       | <b>• PRE-AMPLI</b><br><b>Puissance nominale:</b><br>(Borne de sortie d'enregistrement)<br>Sensibilité d'entrée/<br>Impédance d'entrée:<br>PHONO:  | 150 mV  |
| CD, TUNER AUX<br>TAPE-1, TAPE-2:  | CD, TUNER AUX<br>TAPE-1, TAPE-2:  | CD, TUNER AUX<br>TAPE-1, TAPE-2:  | MM 2.5 mV/47 kΩ/ohm<br>MC 200 μV/100 kΩ/ohm<br>150 mV/1 kΩ/ohm  |
| RIAA Deviation:<br>PHONO:<br>Within ± 0.3 dB  | Abweichung von der<br>RIAA-Kennlinie PHONO:<br>Innerhalb ± 0.3 dB   | Variation RIAA:<br>PHONO:<br>10 Hz ± 0.3 dB   | 20 Hz ~ 20 kHz<br>PHONO<br>MM 160 mV/1 kHz<br>MC 12mV/1 kHz   |
| Maximum Input:  | Maximaler Eingang:  | • GESAMTEIGENSCHAFTEN<br>Signal/Rauschabstand<br>(HF-A-Weiche):   | Entzerrung max.:  |
| <b>OVERALL CHARACTERISTICS</b>  |   | <b>• CARACTÉRISTIQUES GÉNÉRALES</b><br>Rapport signal/bruit<br>(ressau IHF A):  |   |
| <b>SN Ratio (IHF A Network):</b>  |   | (Bornes d'entrée court-circuitées)  |   |
| Input terminals shortcircuited!   | (Eingänge kurzgeschlossen)  | SOURCE DIRECT ON  |   |
| SOURCE-DIRECT ON  | SOURCE DIRECT ON  | Gamme de réglage de tonalité:   |   |
| Tone Control Adjustable Range:<br>BASS<br>TREBLE  | Klangregelbereich:<br>TEILEN (BASS)<br>HOHEN (TREBLE)   | GRAVES<br>AIGUS   | 100 Hz ± 8 dB<br>10 kHz ± 8 dB  |
| Loudness:   | Gehörrichtige Lautstärke:   | Compensation physiologique:   | 100 Hz ± 7 dB<br>10 kHz ± 6 dB  |
| <b>OTHERS</b>   |   | <b>• AUTRES</b><br>Alimentation   |   |
| Power Supply  | • SONSTIGES<br>Nettspannung und- Frequenz   | AC230V/50 Hz<br>(For Europe, Asia and Hong Kong models)<br>AC120V/60 Hz<br>(For U.S.A., Canada, and Taiwan R.O.C.<br>models)  |   |
| AC Outlets<br>Switched x 2:   | Wechselstrom-Ausgänge<br>Geschaltet x 2:  | Prises secteur (AC)<br>Commutées x 2:   | 100W (Total) (For Europe (except the U.K.,<br>Asia and Hong Kong models)<br>120W (Total) (For U.S.A., Canada, and<br>Taiwan R.O.C. models)<br>100W (For Europe (except the U.K.), Asia<br>and Hong Kong models)<br>240W (For U.S.A., Canada, and Taiwan<br>R.O.C. models)<br>200W (For U.S.A.)<br>4.2x4.5A (U.S.A. and Canada models)<br>434(W) x 162(H) x 348(D)mm PMA-925R<br>(17-3/32" x 6-5/8" x 13-5/8")<br>434(W) x 142(H) x 348(D)mm PMA-725R<br>(17-3/32" x 6-19/32" x 13-5/8") |
| Unswitched x 1:   | Ungeschaltet x 1:   | Non commutées x 1:  | 11 kg (24 lbs 4 oz) / 9.6 kg (21 lbs 0 oz)  |
| Power Consumption   | Leistungsaufnahme   | Consommation  |   |
| Dimensions (W) x (H) x (D)  | Abmessungen (B) x (H) x (T)   | Dimensions (L) x (H) x (D)  |   |
| Net Weight:<br>REMOTE CONTROL UNIT<br>(RC-176)  | Nettgewicht<br>FERNBEDIENUNGSGERÄT<br>(RC-176)  | Poids<br>UNITÉ DE TELECOMMANDE<br>(RC-176)  |   |
| Remote control system:<br>Infrared pulse system   | Fernbedienungs-System:<br>Infrarot-Impulse  | Système de télécommande:<br>Système à impulsions infrarouge   |   |
| Power supply:<br>3 " D-Typ Batterie, zwei Trockenzelle-<br>Batterie, eine normale R6P (AA)<br>Außen Abmessungen:<br>Gewicht:              | Stromversorgung:<br>3 " D-Typ Batterie, zwei Trockenzelle-<br>Batterie, eine normale R6P (AA)<br>Außen Abmessungen:<br>Gewicht:   | Alimentation:<br>3 " C, deux piles sèches<br>de format R6P ("AA")<br>Dimensions extérieures:<br>Poids:  | 55(W) x 194(H) x 18(D)mm<br>2-1/8" x 7-41/64" x 45/64"<br>100 g (about 3.5 oz)<br>(including batteries)   |

Note: \*1 For Europe, Asia and Hong Kong  
\*2 For U.S.A., Canada, and Taiwan R.O.C.

Hinweis: \*1 Für Europa, Asien und Hong Kong  
\*2 Für USA, Kanada, und Taiwan R.O.C.

Note: \*1 Pour Europe, Asie et Hongkong  
\*2 Pour U.S.A., Canada, et Taiwan R.O.C.

- Specifications and contents are subject to change without notice for purposes of improvement.
- Änderungen des Inhalts und der technischen Daten zum Zwecke der Verbesserung vorbehalten.
- Spécifications et contenu sont sujets à modification sans préavis.

### ENGLISH

Please check to make sure the following items are included with the main unit in the carton:

- (1) Operating Instructions .....
- (2) Remote Control Unit (RC-176) .....
- (3) Batteries R6P (AA) .....

### ESPAÑOL

Por favor verifique asegurandose de que los siguientes artículos son empacados en la caja pero separados de la unidad principal.

- (1) Manual de instrucciones .....
- (2) Unidad de control remoto (RC-176) .....
- (3) Pilas R6P (AA) .....

### DEUTSCH

Bitte überprüfen Sie, ob die folgenden Teile vollständig in der Verpackung enthalten sind:

- (1) Bedienungsanleitung .....
- (2) Fernbedienung (RC-176) .....
- (3) Batterien vom Typ R6P (AA) .....

### NEDERLANDS

Kontroleer of de volgende accessoires bij het hoofdtoestel in de doos zijn verpakt:

- (1) Gebruiksaanwijzing .....
- (2) Afstandsbediening (RC-176) .....
- (3) Batterijen R6P (AA) .....

### FRANÇAIS

Veuillez contrôler que les articles suivants sont bien joints à l'appareil principal dans le carton:

- (1) Mode d'emploi .....
- (2) Unité de télécommande (RC-176) .....
- (3) Piles R6P (AA) .....

### ITALIANO

Controllare che le parti seguenti si trovino imballate con l'apparecchio nella scatola di spedizione.

- (1) Libretto delle istruzioni .....
- (2) Telecomando (RC-176) .....
- (3) Batterie R6P (AA) .....

### PORTUGUÊS

Certifique-se de que as seguintes peças estão incluídas na embalagem fora da unidade principal:

- (1) Instruções de operação .....
- (2) Unidade de controle remoto (RC-176) .....
- (3) Baterias R6P (AA) .....

### 中 文

下列物品隨主機一起包裝於紙箱內，請查對：


- (1) 操作說明書 .....
- (2) 遙控器(RC-176) .....
- (3) 電池 R6P(AA) .....

### MEMO:

## REMOVAL OF EACH SECTION


### ● Top Cover

- 1) Remove 4 screws (A) and 3 screws (B).
- 2) Pull up Top Cover in arrow direction.

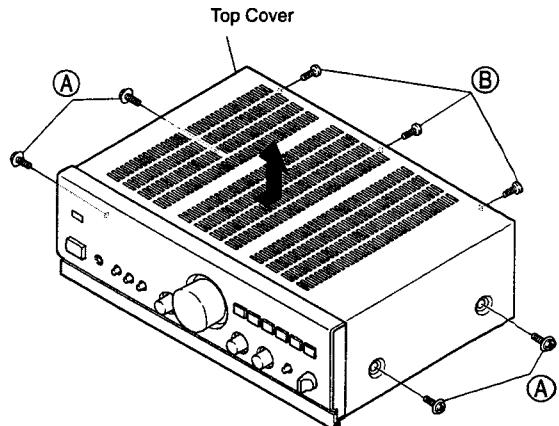


### ● Front Panel

- 1) Remove 3 screws (C).
- 2) Remove 6 screws (D).
- 3) Detach Front Panel in arrow direction.

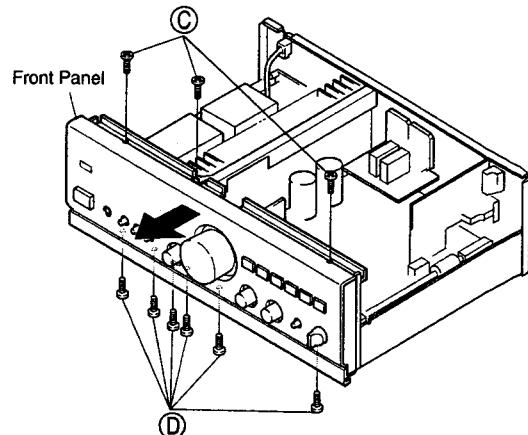


### ● Main Chassis

- 1) Remove 2 screws (E).
- 2) Remove 2 screws (F) securing Power Radiator with Main Chassis.
- 3) Remove 4 screws (G) securing Rear Panel with Main Chassis.

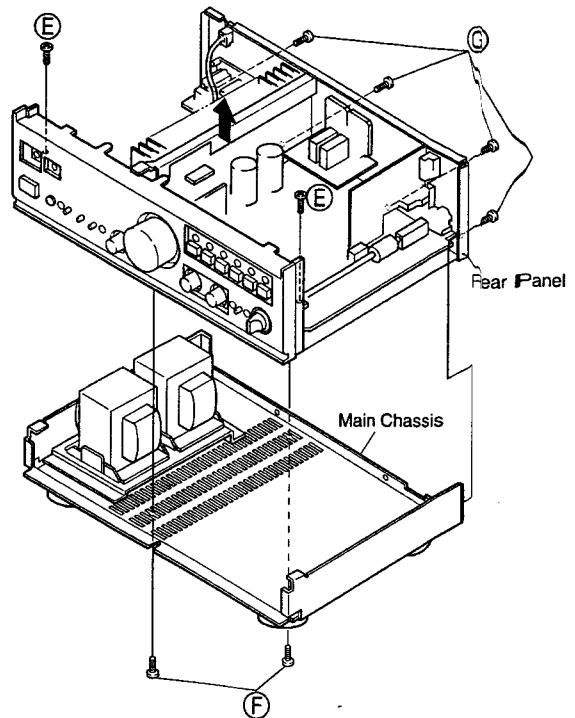


### ● Inner Panel

- 1) Remove 5 Knobs and 4 nuts.
- 2) Remove 2 screws (H) and detach Inner Panel in arrow direction.

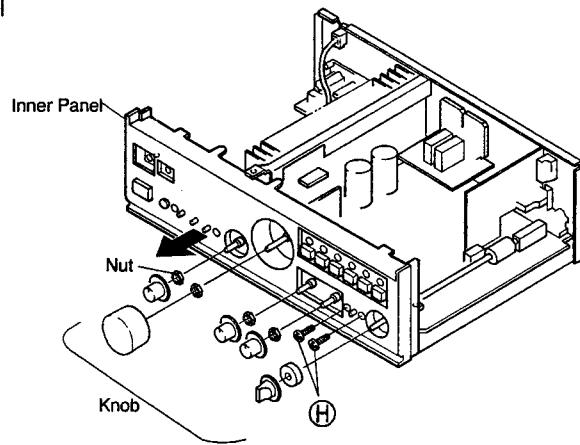

### ● Each Unit of Inner Panel

- 1) Remove 3 screws (I), and detach LED and Switch Unit.
- 2) Remove 2 screws (J), and detach μ-Com Unit.
- 3) Remove 2 screws (K) securing Headphone, SP Switch Unit with Inner Panel.
- 4) Remove 1 screw (L) and 1 washer, and detach Headphone, SP. switch Unit.
- 5) Remove 2 screws (M) and a Knob, then detach Power Switch Unit.

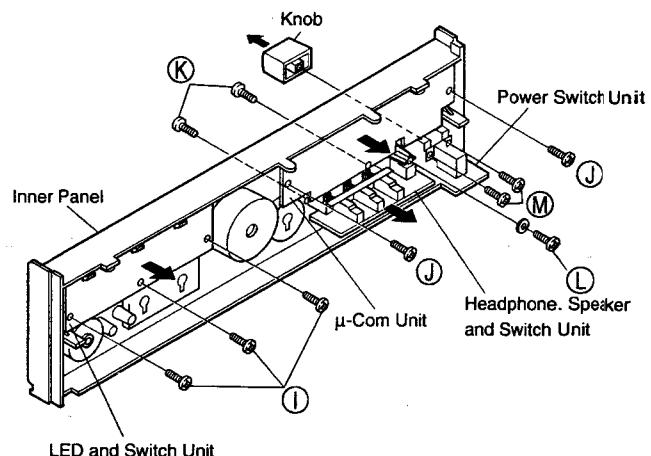

## FUNCTION OF NEW CIRCUIT

### 1. CHARACTERISTIC OF THIS CIRCUIT

The junction temperature of power amplifier output transistor always varies by an ambient temperature and music signal. Occurrence of junction temperature varying causes in change of bias current, unstable function, thus pure music signal playback is unable to do.

To maintain fixed bias current and to make pure music signal playback possible is the purpose of this circuit. This circuit holds stable bias current condition within a few seconds after turning on the power.

### 2. BLOCK DIAGRAM OF BIAS CONTROL CIRCUIT FUNCTION

As explained in Fig. 1, detects a voltage across the emitter resistors (RE) of TR1, TR2. Converts the detected voltage and comparing with the reference voltage to make the bias current value in stable state. Actually, these functions are performed by 1 chip IC.


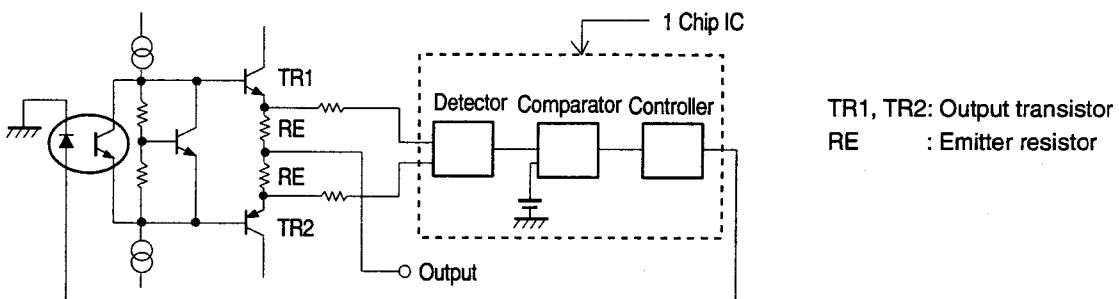


Fig. 1



### 3. POWER SUPPLY FOR ACTUATING CONTROL CIRCUIT

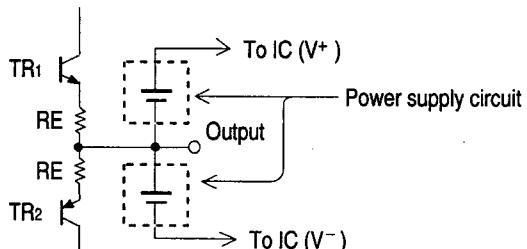

The circuit (IC) controlling bias current actuates by floating.  
Accordingly, the power supply is also needed to be floated.  
In this circuit, as indicated in Fig. 2, output is common to provide +, - power system and supplies to IC.

Fig. 2


#### 4. IC DESCRIPTION ( $\mu$ PC5023CS-064)

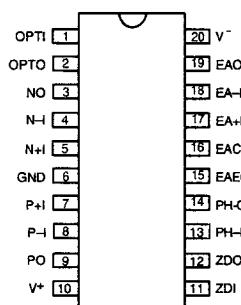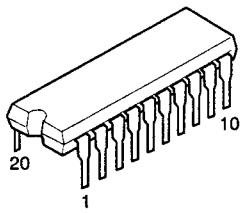


| Pin. No. | Name | Contents             |
|----------|------|----------------------|
| 1        | OPTI | NCP                  |
| 2        | OPTO |                      |
| 3        | NO   | Comparator output    |
| 4        | N-I  | Comparator input (-) |
| 5        | N+I  | Comparator input (+) |
| 6        | GND  | Floating common      |
| 7        | P+I  | Comparator input (+) |
| 8        | P-I  | Comparator input (-) |
| 9        | PO   | Comparator output    |
| 10       | V+   | + Power supply       |

| Pin. No. | Name | Contents                         |
|----------|------|----------------------------------|
| 11       | ZDI  | Control signal stabilizer input  |
| 12       | ZDO  | Control signal stabilizer output |
| 13       | PH-I | Peak hold input                  |
| 14       | PHO  | Peak hold output                 |
| 15       | EAEO | Controller gain setting          |
| 16       | EACO | Control signal output            |
| 17       | EA-I | Reference voltage                |
| 18       | EA-1 | Comparator gain setting          |
| 19       | EAO  | Comparator output                |
| 20       | V-   | - Power supply                   |

#### 5. CIRCUIT IN THE CONCRETE

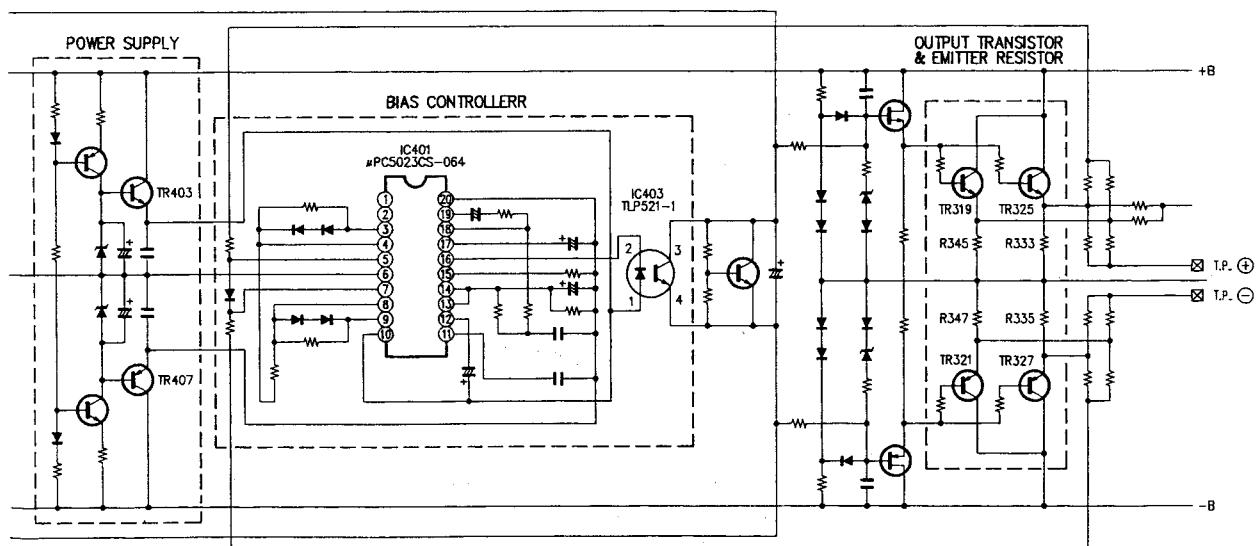

## METHOD OF ADJUSTMENTS

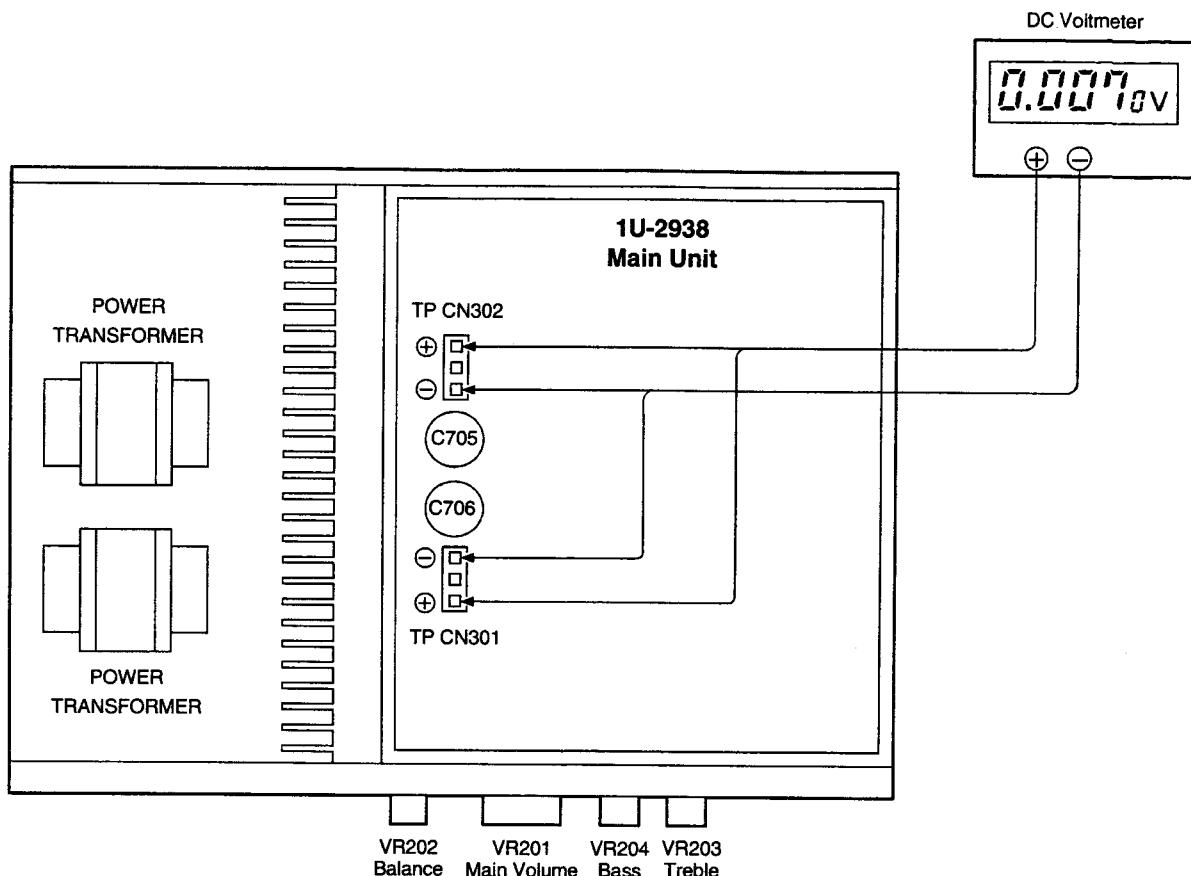

### IDLING CURRENT

- Setup

1. Lay the unit at an ordinary position away from a direct current from a cooler or fan. Do the adjustment at a temperature between 15°C (59°F) and 30°C (86°F).
2. Set controls as follows.

POWER SWITCH → OFF (■)


VOLUME CONTROL → fully counterclockwise. (○) min. (Main Volume VR201)  
(VR202, 203 and 204 are center position.)

SPEAKER Terminals → open: do not connect the speakers, dummy load etc.

- Confirm

1. Remove Top cover. And then connect DC Voltmeter to Test points of Main Unit.
2. Connect Power cord to AC Outlet, and turn POWER Switch "on" (—).
3. 10 seconds after check to see DC Voltmeter reading is  $7 \pm 2\text{mV}$ .
4. 2 minutes after re-check DC Voltmeter for  $7 \pm 2\text{mV}$  reading.



## BLOCK AND LEVEL DIAGRAM

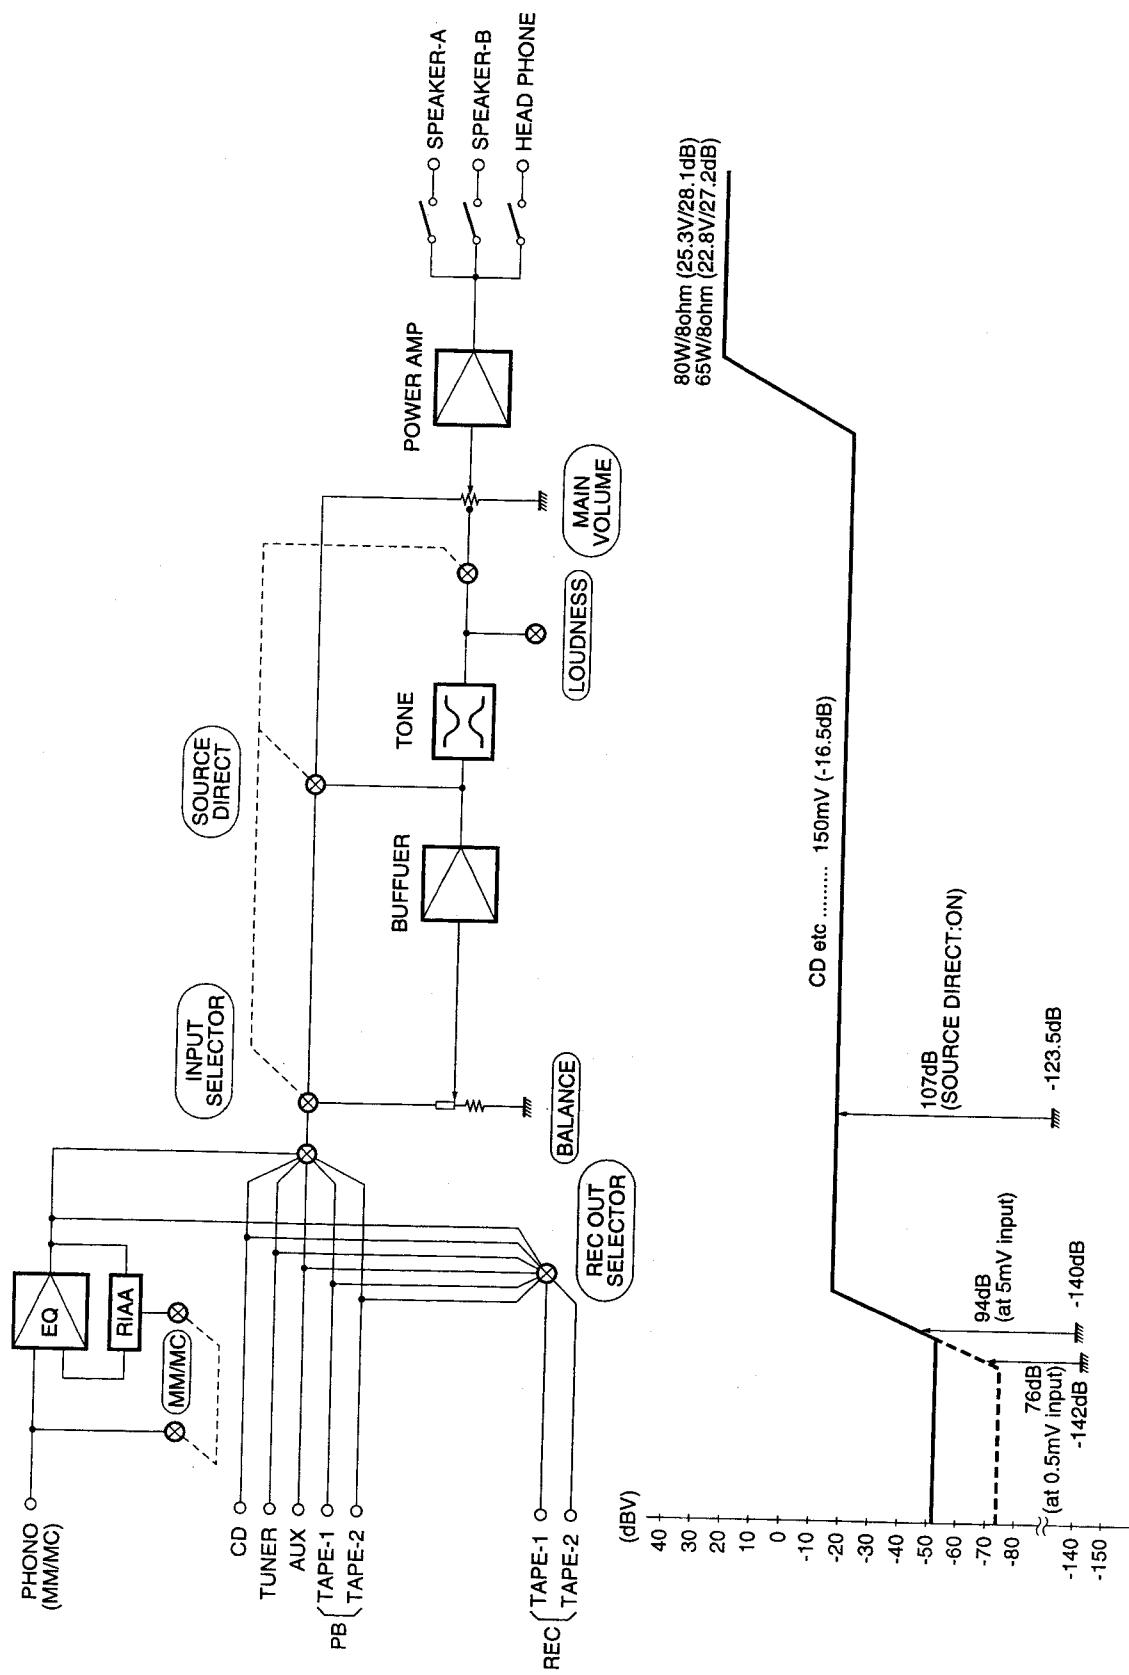

## SEMICONDUCTORS

### ● IC's


$\mu$ PC5023CS-064 (IC401,402)

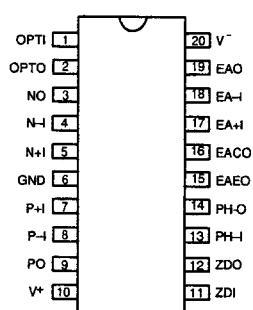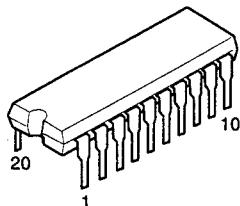

| Pin. No. | Name | Contents             |
|----------|------|----------------------|
| 1        | OPTI | NCP                  |
| 2        | OPTO |                      |
| 3        | NO   | Comparator output    |
| 4        | N-I  | Comparator input (-) |
| 5        | N+I  | Comparator input (+) |
| 6        | GND  | Floating common      |
| 7        | P+I  | Comparator input (+) |
| 8        | P-I  | Comparator input (-) |
| 9        | PO   | Comparator output    |
| 10       | V+   | + Power supply       |



| Pin. No. | Name | Contents                         |
|----------|------|----------------------------------|
| 11       | ZDI  | Control signal stabiliser input  |
| 12       | ZDO  | Control signal stabiliser output |
| 13       | PH-I | Peak hold input                  |
| 14       | PHO  | Peak hold output                 |
| 15       | EAEO | Controller gain setting          |
| 16       | EACO | Control signal output            |
| 17       | EA-I | Reference voltage                |
| 18       | EA-1 | Comparator gain setting          |
| 19       | EAO  | Comparator output                |
| 20       | V-   | - Power supply                   |

HD404304A13P (IC801)

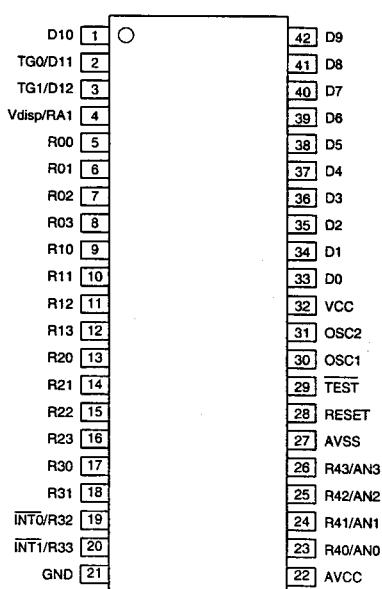


HD404304A13P Terminal Function

| Pin No. | Name      | I/O | Contents   | Active |
|---------|-----------|-----|--|--------|
| 1       | D10       | O   | MUTE/STANDBY LED Indication                              | H      |
| 2       | TG0/D11   | O   | NOP  | L      |
| 3       | TG1/D12   | O   | Power Control (REMOTE Power-ON/OFF)                      | L      |
| 4       | Vdisp/RA1 | I   | NOP  |        |
| 5       | R00       | O   | NOP  |        |
| 6       | R01       | O   | Muting Control (Power ON-OFF, Function Shifting, MUTING) | L      |
| 7       | R02       | O   | SP-A Control   | H      |
| 8       | R03       | O   | SP-B Control   | H      |
| 9       | R10       | O   |  | H      |
| 10      | R11       | O   | Key scan strobe  | H      |
| 11      | R12       | O   |  | H      |
| 12      | R13       | O   | NOP  |        |
| 13      | R20       | I   |  |        |
| 14      | R21       | I   |  |        |
| 15      | R22       | I   |  |        |
| 16      | R23       | I   |  |        |
| 17      | R30       | O   | Volume Control "UP" → "H"                                | H      |
| 18      | R31       | O   | Volume Control "DOWN" → "H"                              | H      |
| 19      | INT0/R32  | I   | Power Breakdown detect input                             |        |
| 20      | INT1/R33  | I   | Remote control signal decoding input                     |        |
| 21      | GND       |     | GND  |        |
| 22      | AVcc      |     | Avcc (Vcc)   |        |
| 23      | R40/AN0   |     | NOP  |        |
| 24      | R41/AN1   | I   | NOP  |        |
| 25      | R42/AN2   | I   | NOP  |        |
| 26      | R43/AN3   | I   | Discrimination port by user's genre                      |        |
| 27      | AVss      |     | AVss (GND)   |        |
| 28      | RESET     |     | M51954A; External  |        |
| 29      | TEST      |     | Vcc  |        |
| 30      | OSC1      |     | Celler Fill Oscillator 4MHz; External                    |        |
| 31      | OSC2      |     | Celler Fill Oscillator 4MHz; External                    |        |
| 32      | Vcc       |     | Vcc  |        |
| 33      | D0        | O   | NOP  |        |
| 34      | D1        | O   | NOP  |        |
| 35      | D2        | O   | TAPE-2 Control   | H      |
| 36      | D3        | O   | TAPE-1 Control   | H      |
| 37      | D4        | O   | NOP  |        |
| 38      | D5        | O   | AUX Control  |        |
| 39      | D6        | O   | TUNER Control  |        |
| 40      | D7        | O   | NOP  |        |
| 41      | D8        | O   | CD Control   |        |
| 42      | D9        | O   | PHONO Control  | H      |

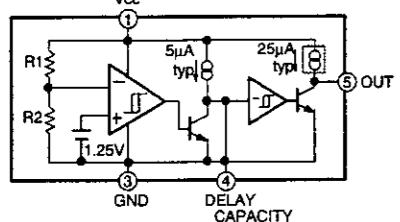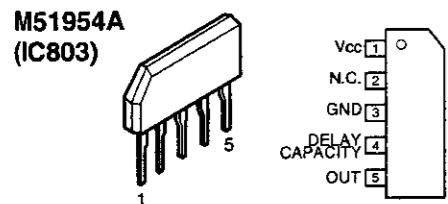


**BA4558 (IC201, 901)  
NJM2068DDC (IC202)**

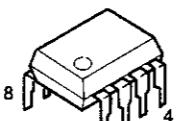

1. A OUTPUT
2. A-INPUT
3. A+INPUT
4. V-
5. B+INPUT
6. B-INPUT
7. B OUTPUT
8. V+



(TOP VIEW)

**NJM7806FA(S) (IC702)**



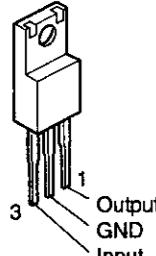


Output  
GND  
Input


**TLP521-1(BL)  
INFRARED LED + PHOTO TRANSISTOR  
(IC403, 404)**

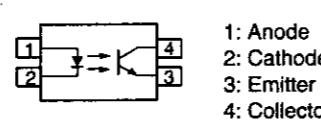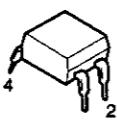

**LB1639 (IC802)**

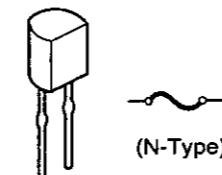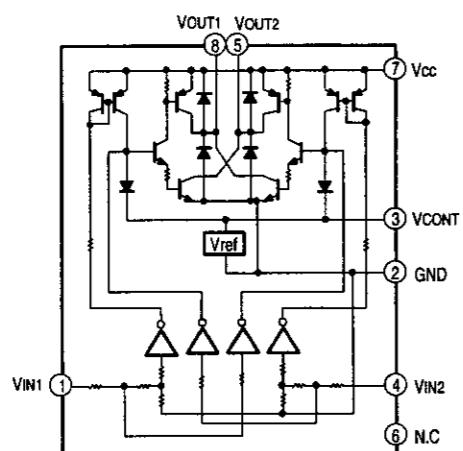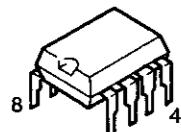


**SBX1610-52 (Remote Control Receiver) (IC105)**

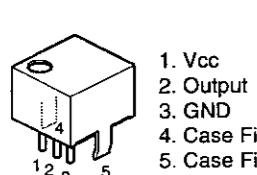

1. Vcc
2. Output
3. GND
4. Case Fin
5. Case Fin

**STANDARD  
TRANSMITTER**

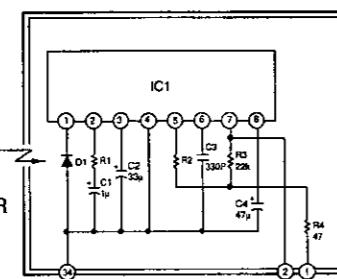




- IC1 : CX20106A Chip  
D1 : PIN Photo Diode Chip  
C1,C2,C4 : Aluminum Electrolytic Capacitor  
C3 : SL Characteristic  $\pm 5\%$   
R1 : Gain Adjuster  
R2 : fo Adjuster  $\pm 1\% \text{ USE}$   
R3,4 :  $\pm 5\%$

### ● TRANSISTORS

- 2SA970 (BL), (BL/GR)  
2SA988 (E/F)  
2SC1841 (E/F)  
2SC1815 (BL)  
2SC2240 (BL/GR)

- 2SA1145 (O)/(Y)  
2SC2705 (O)/(Y)

- 2SA1491 (O/P/Y)/(Z) PMA-925R  
2SC3855 (O/P/Y)/(Z) PMA-925R  
2SB1560 (O/P/Y) PMA-725R  
2SD2390 (O/P/Y) PMA-725R

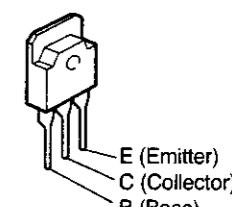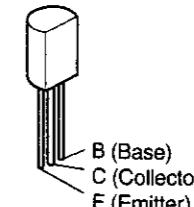
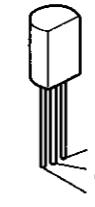


**2SA1038S (S/E)**


2SA933S (S)

- 2SC2389S (S/E)  
2SSC1740S (S)

**DTA114ES**

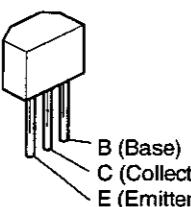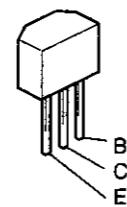


- 2SJ78  
2SK215

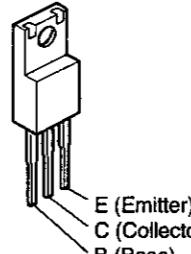

- 2SD2395 (E/F)  
2SB1566 (E/F)

**2SB1328 (P)**

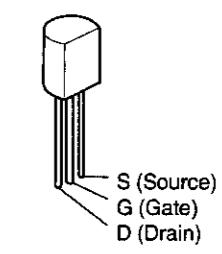


**2SK369 (BL)/(GR)-C**


### ● DIODES (including LED)

**1SS252**


- MTZJ 3.9A MTZJ 36A  
MTZJ 7.5A MTZJ 16A  
MTZJ 18A

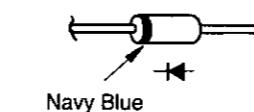


- S4VB20F (D702) PMA-725R  
4D4B42 (D702) PMA-925R

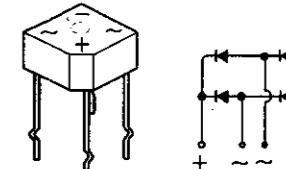


**SLR56-VR (Red)  
SLR56-DU (Orange)**

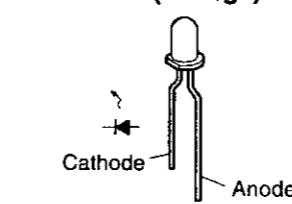

**Thyristor  
SF0R1A42 (SC601)**

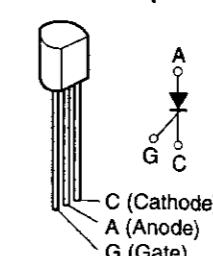

**1SR35-200A**

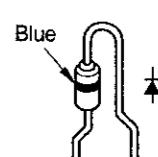

## PRINTED WIRING BOARD (Pattern Side)

1

2

3

4

5

6

7

8

1U-2938C MAIN UNIT ASS'Y FOR PMA-925R


A

B

C

D


E

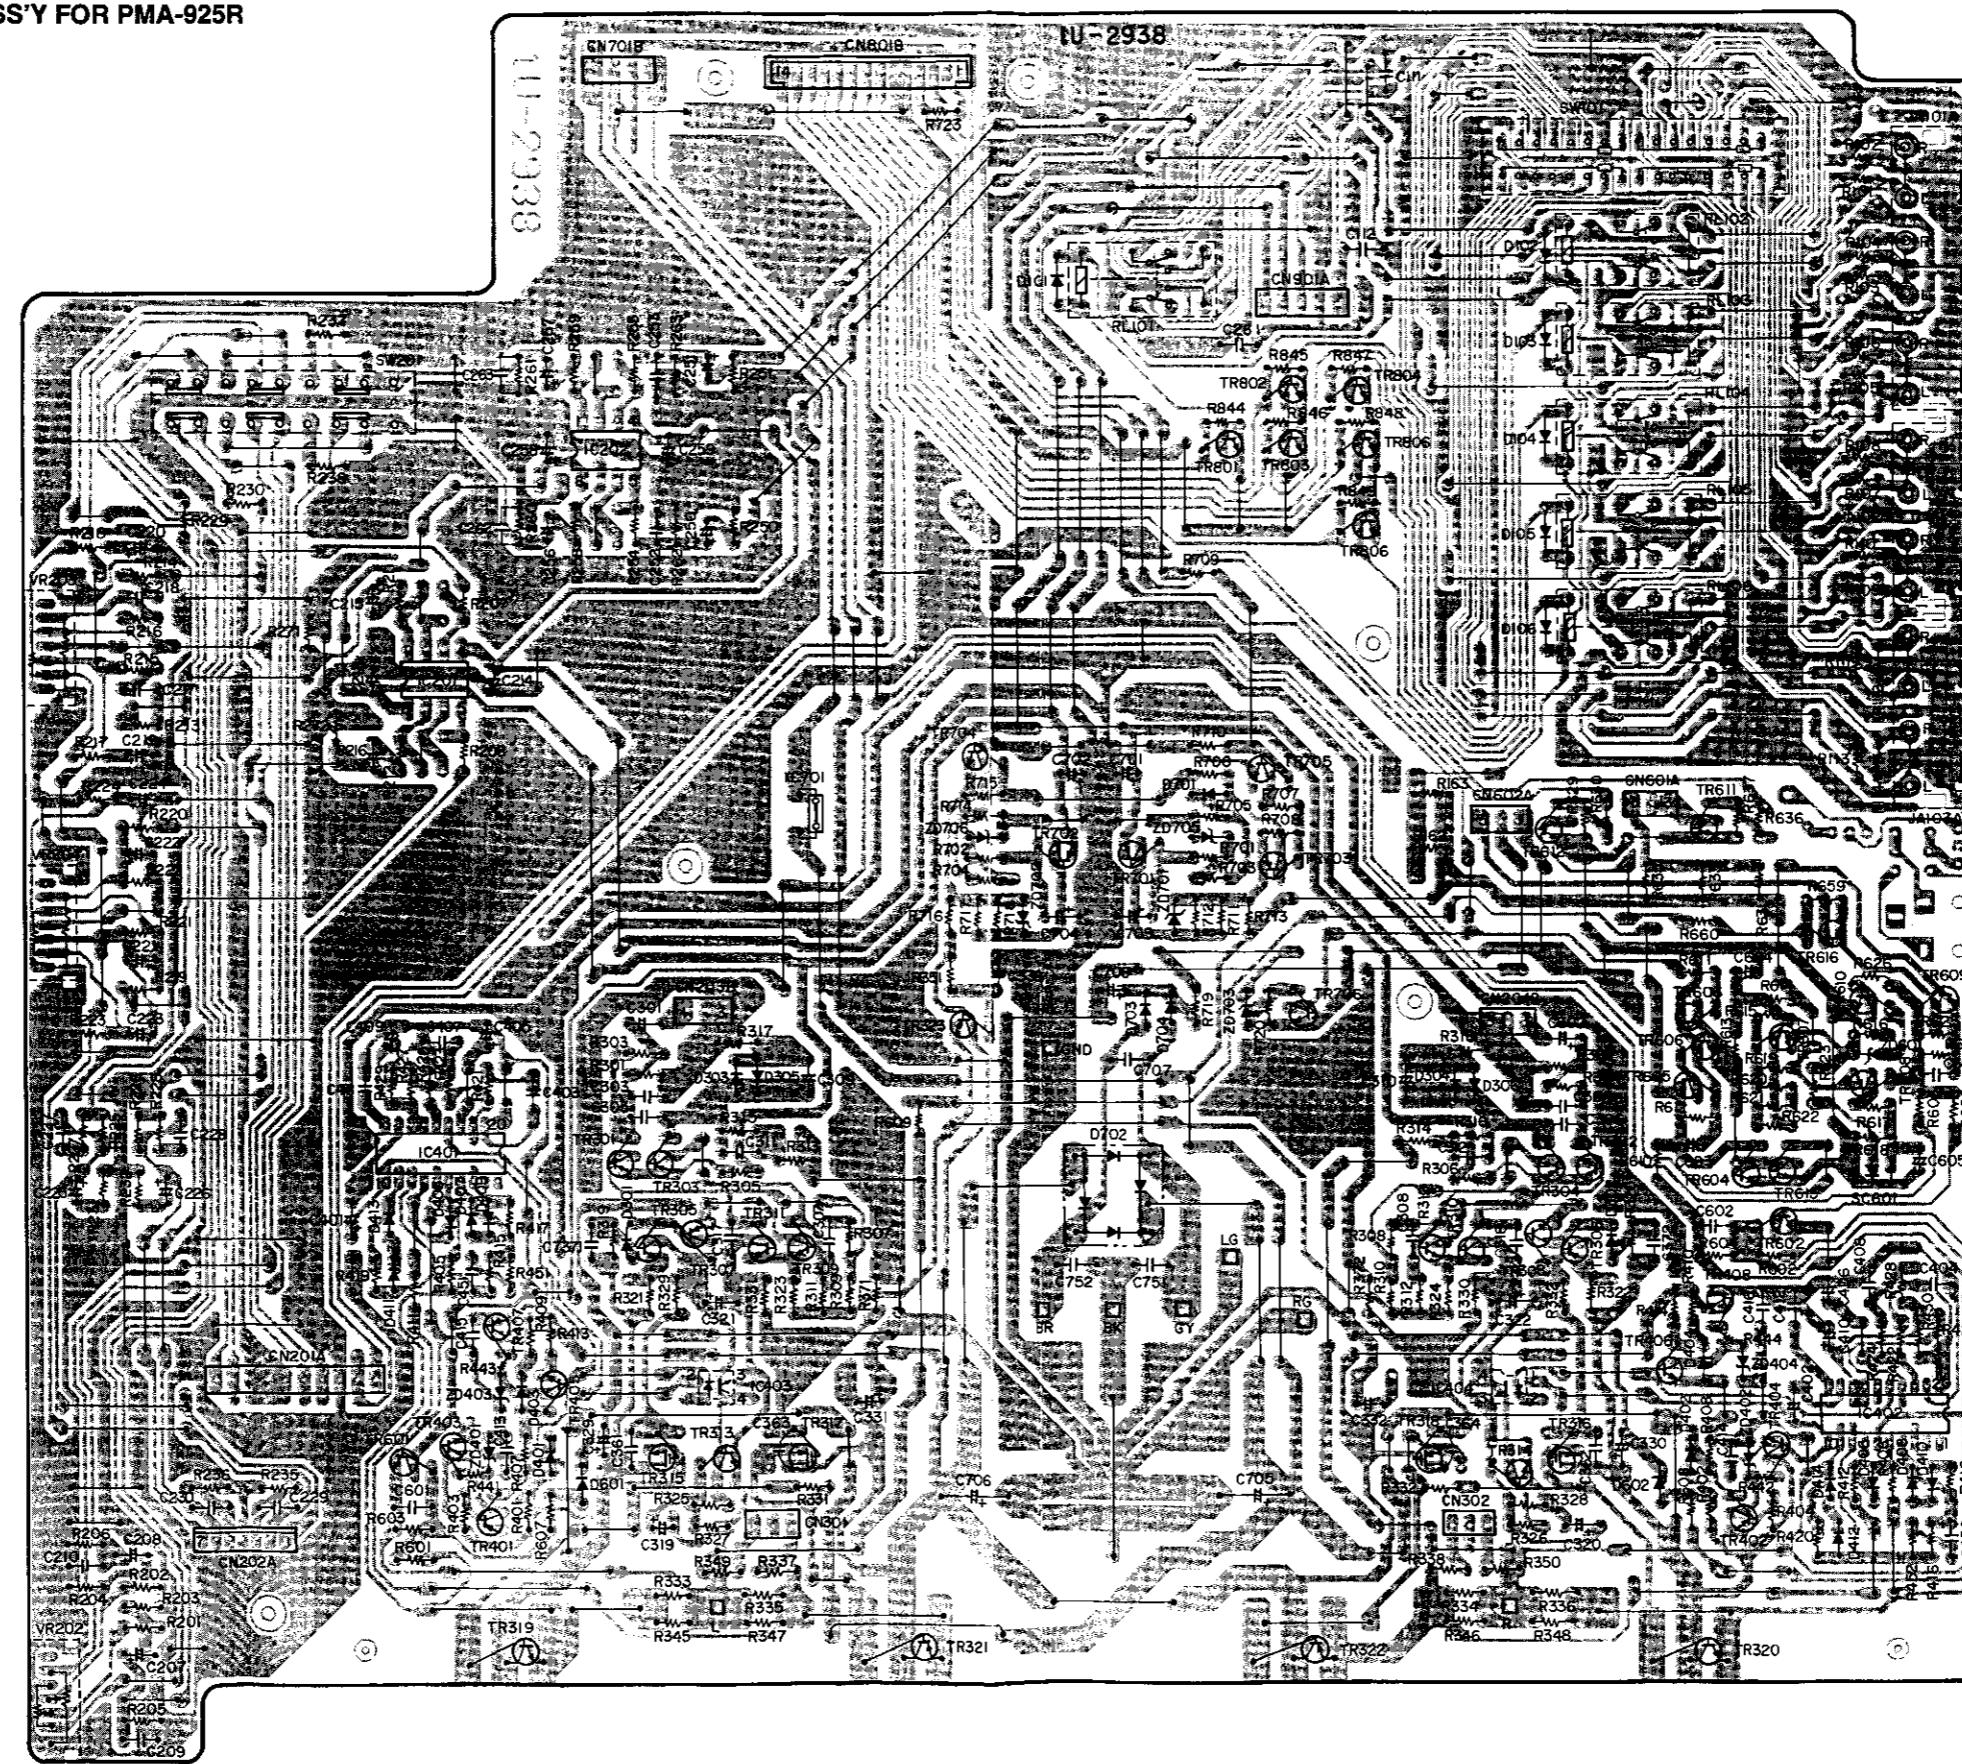

1      2      3      4      5      6      7      8

**1U-2938 MAIN UNIT ASS'Y FOR PMA-725R**





1U-2938A EUROPE Model  
1U-2938B U.K. Model

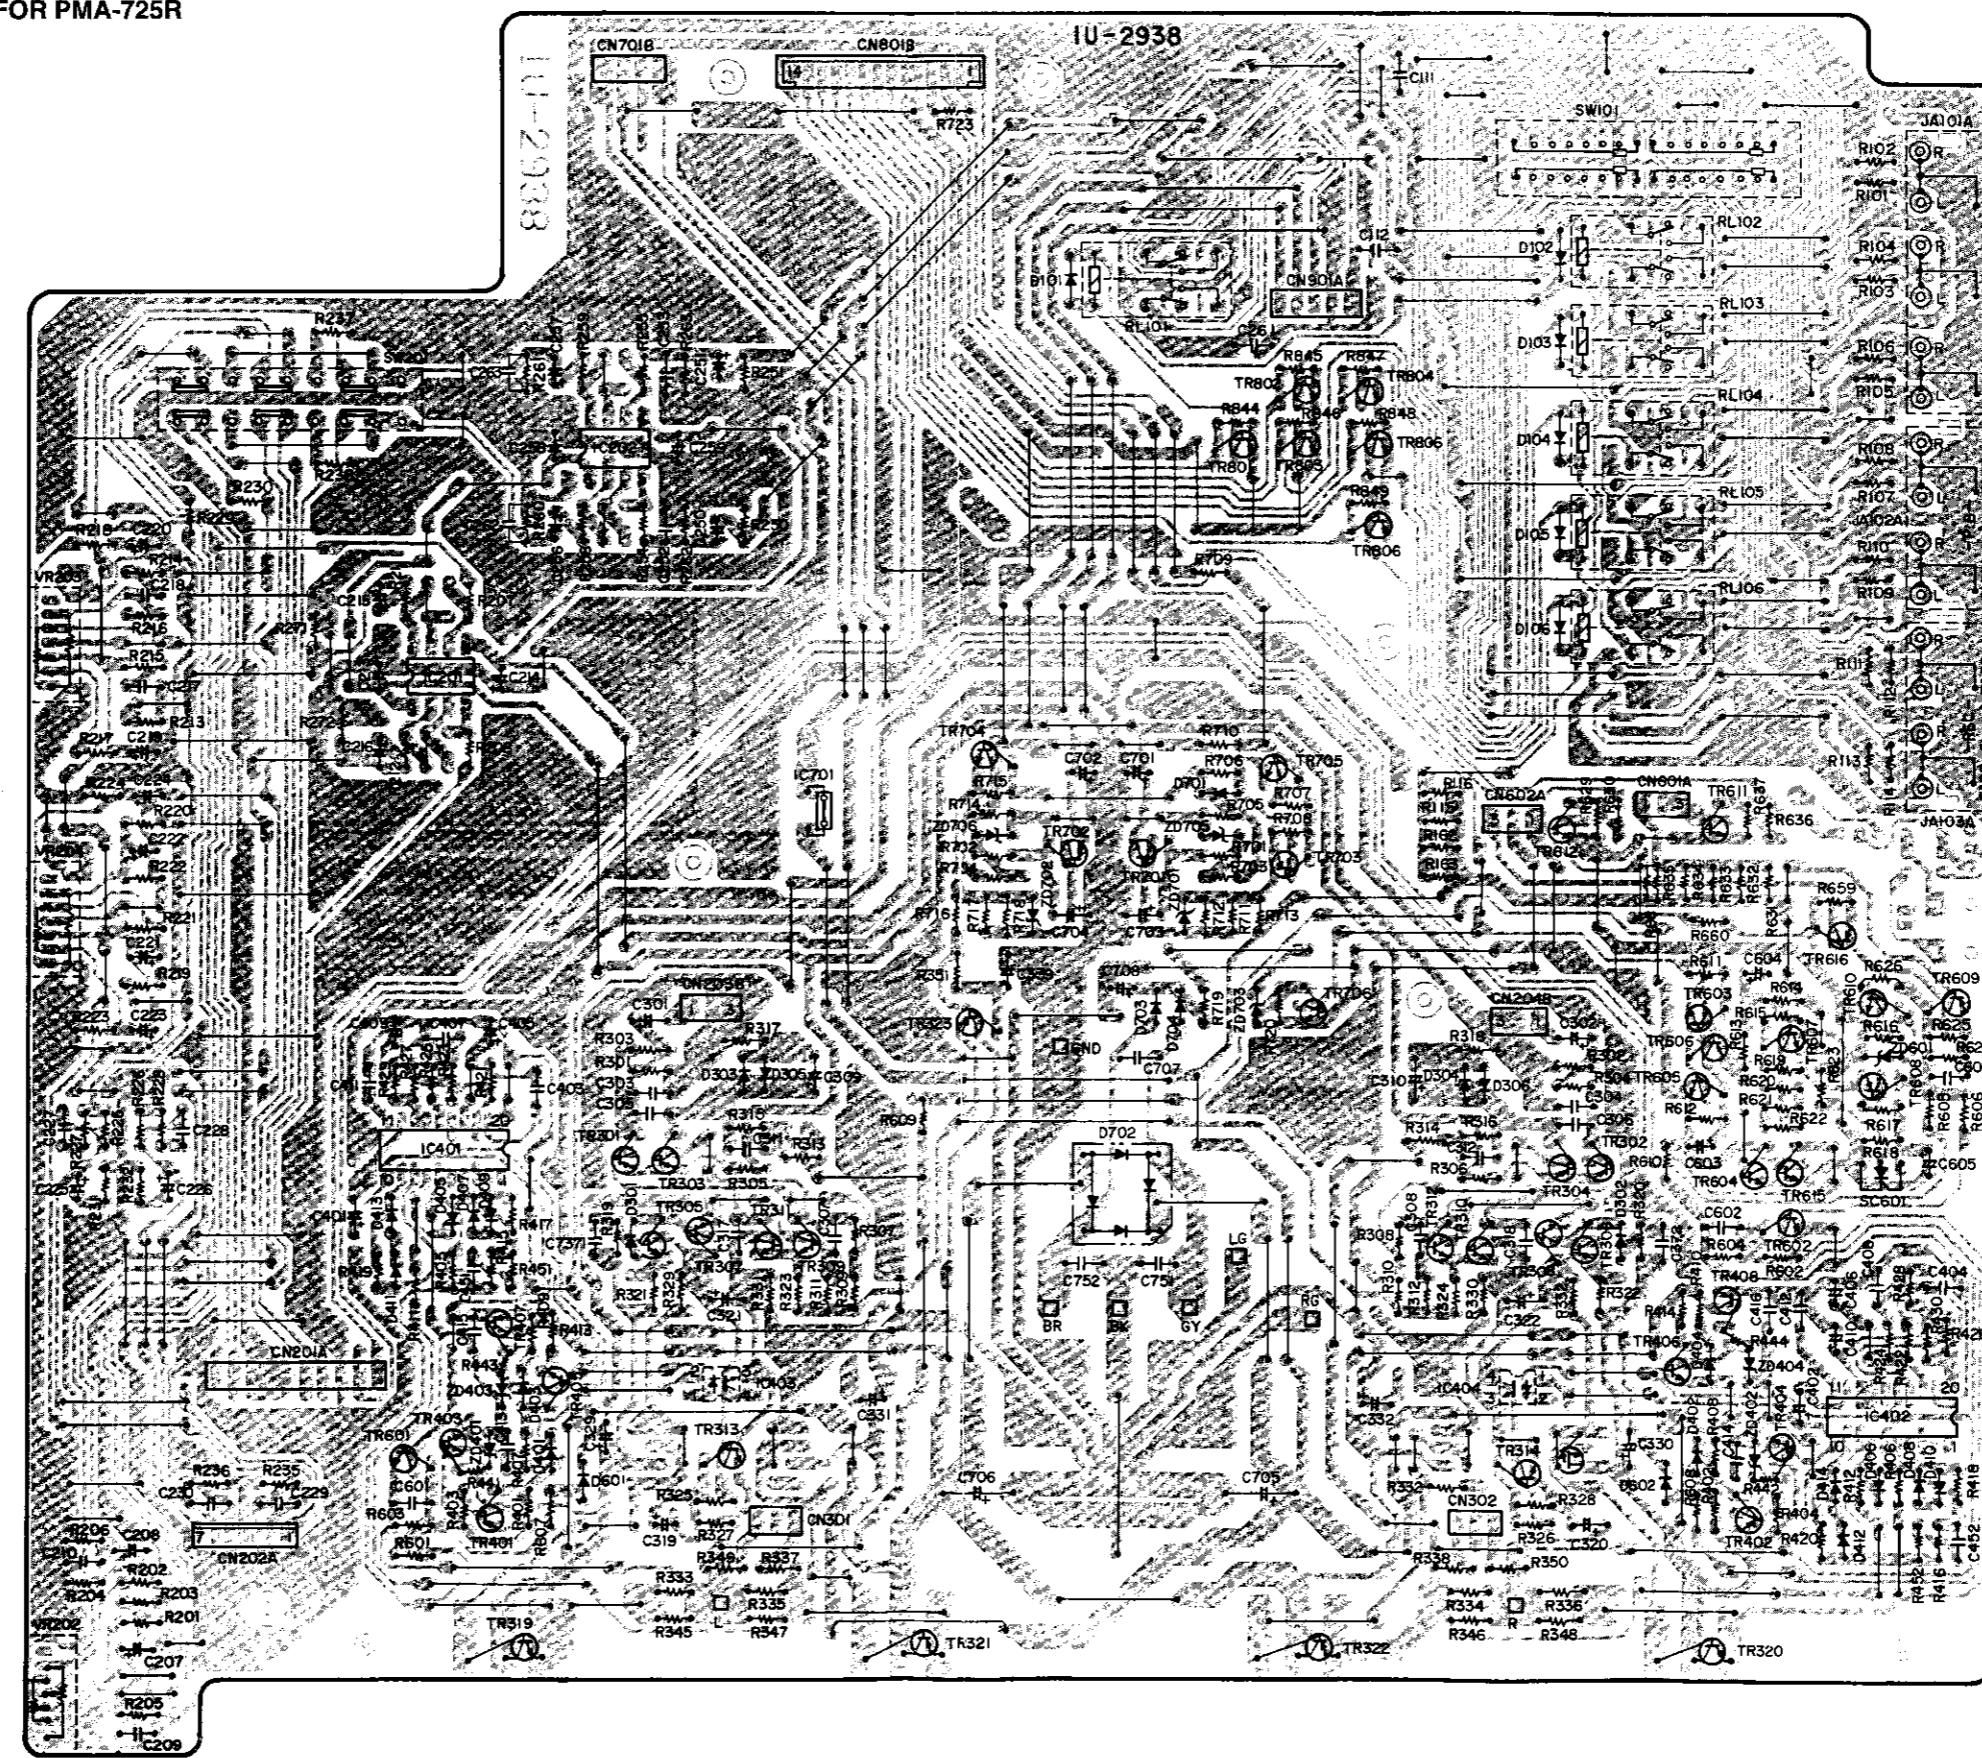

1 2 3 4 5 6 7 8

## 1U-2939A μ-COM. UNIT ASS'Y

| 1U-2939A μ-Com. Unit Ass'y |             |
|----------------------------|-------------|
| -1                         | μ-Com. Unit |
| -2                         | LED Unit    |
| -3                         | Phono Unit  |
| -4                         | Supply Unit |

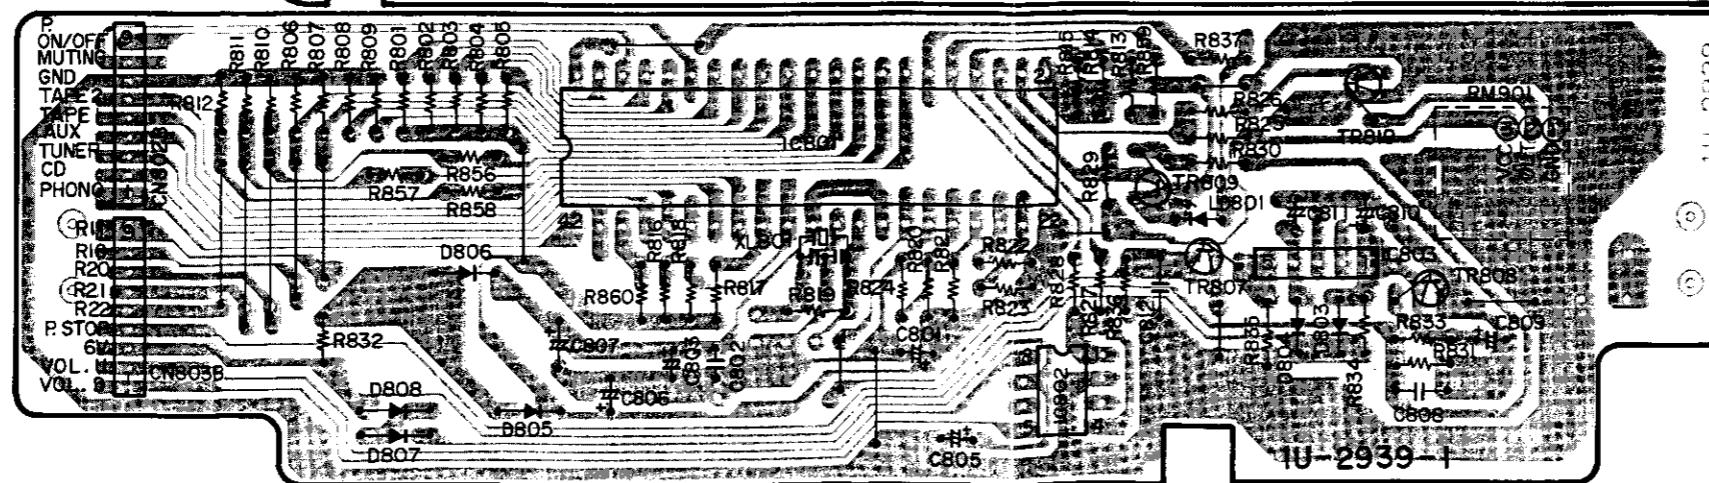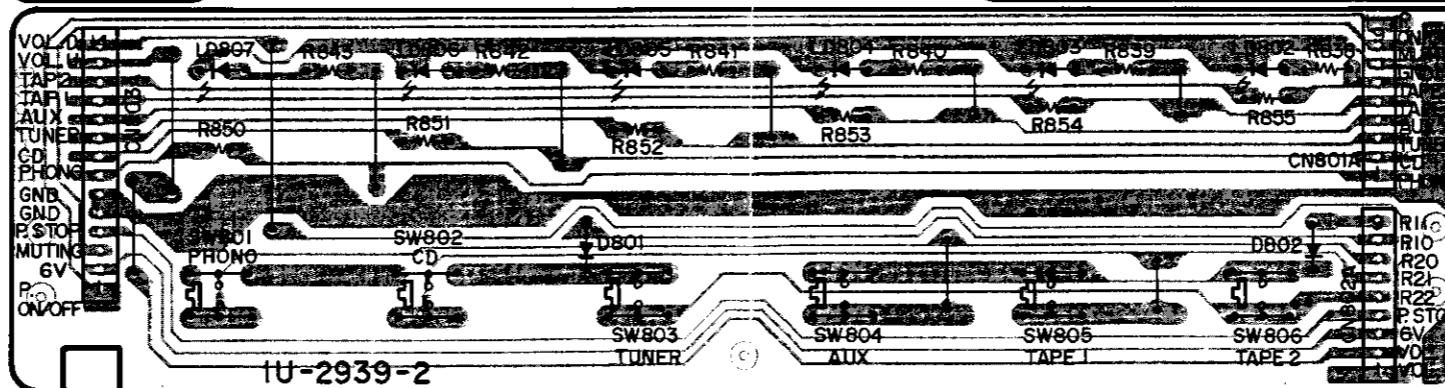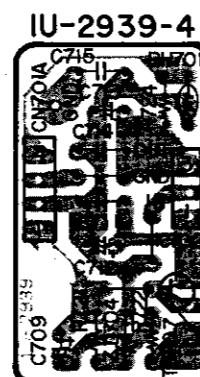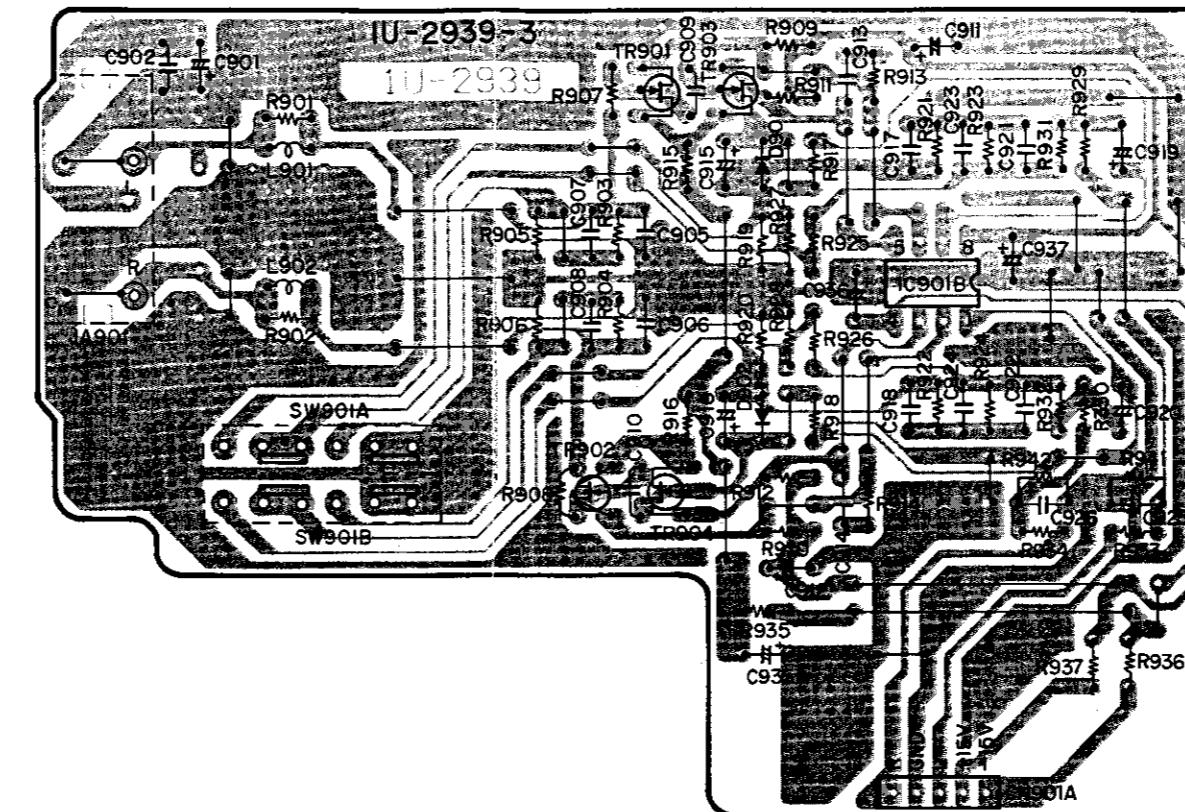

A

B

C





D

E

1 2 3 4 5 6 7 8

**1U-2940 VOLUME UNIT ASS'Y**  
 1U-2940A : PMA-725R EUROPE Model  
 1U-2940B : PMA-725R U.K. Model  
 1U-2940C : PMA-925R

|                           |                   |
|---------------------------|-------------------|
| 1U-2940 Volume Unit Ass'y |                   |
| -1                        | Volume Unit       |
| -2                        | Speaker Unit      |
| -3                        | AC Outlet Unit    |
| -4                        | Speaker Sel. Unit |

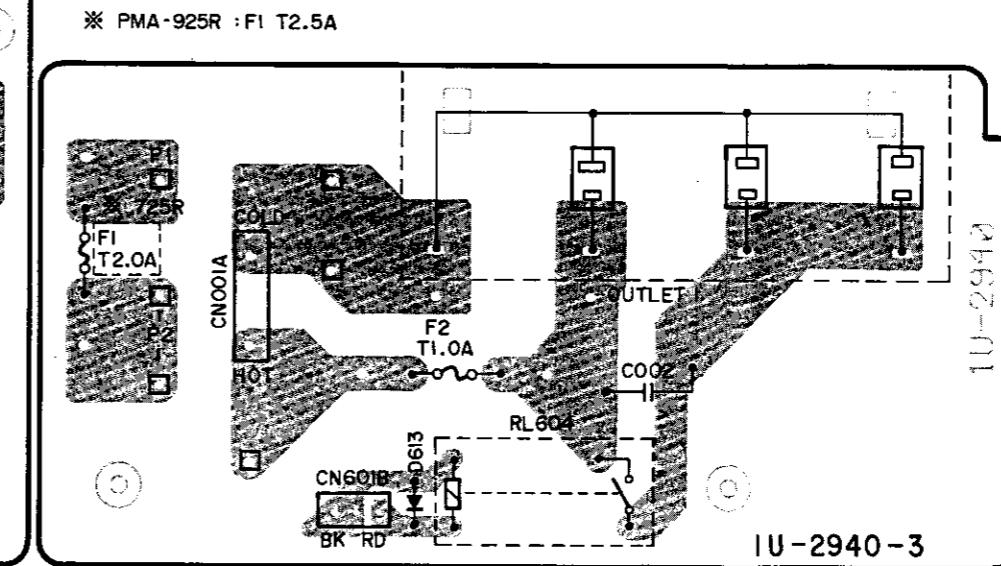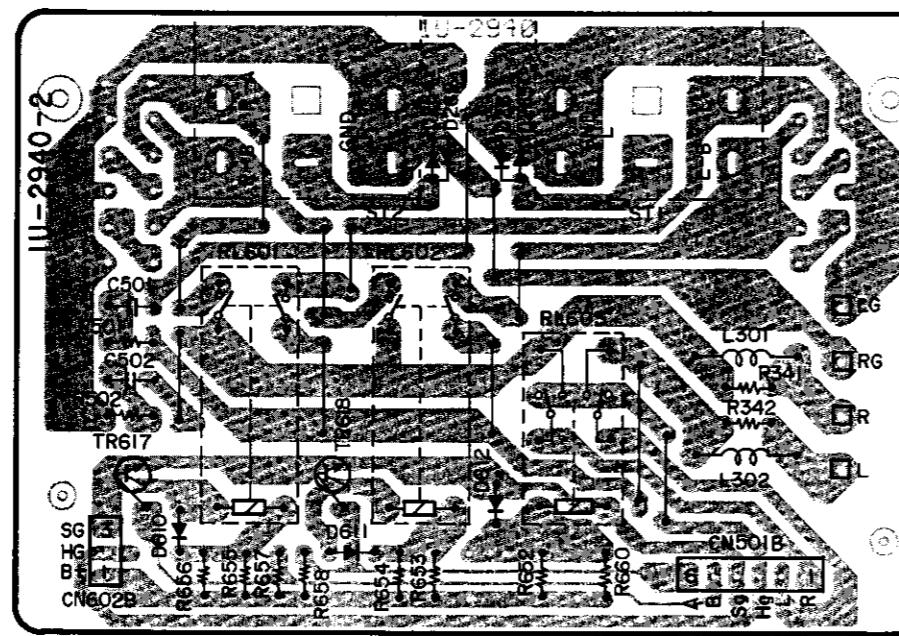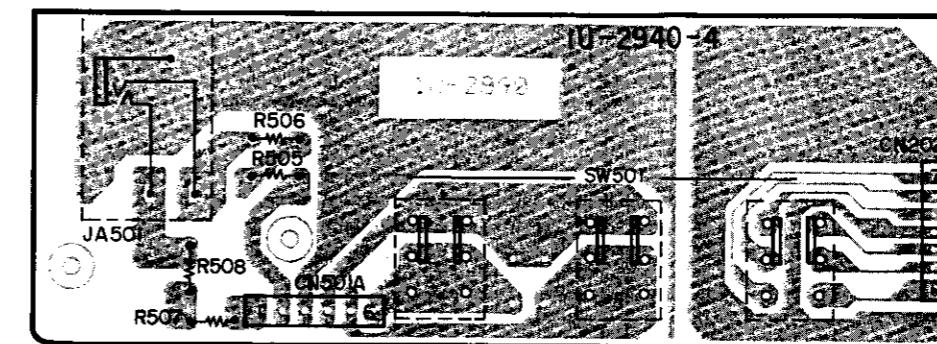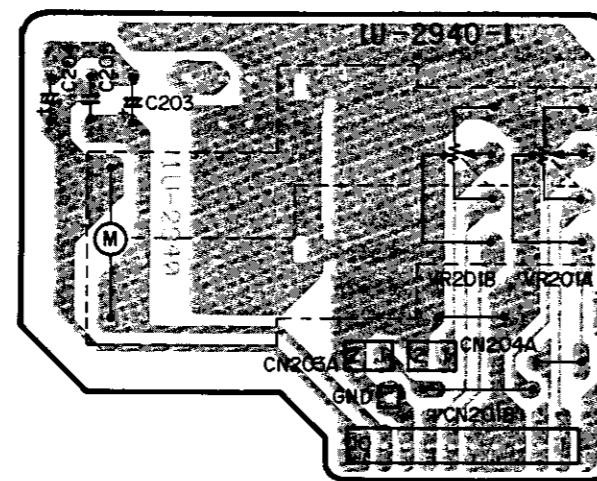

A

B

C

D

E

## NOTE FOR PARTS LIST

- Part indicated with the mark "◎" are not always in stock and possibly to take a long period of time for supplying, or in some case supplying of part may be refused.
  - When ordering of part, clearly indicate "I" and "II" (i) to avoid mis-supplying.
  - Ordering part without stating its part number can not be supplied.
  - Part indicated with the mark "★" is not illustrated in the exploded view.
  - Not including Carbon Film ±5%, 1/4W Type in the P.W.Board parts list. (Refer to the Schematic Diagram for those parts.)
- WARNING:**  
Parts marked with this symbol have critical characteristics.  
Use ONLY replacement parts recommended by the manufacturer.

## • Resistors

| Ex. RN                | 14K                   | 2E       | 182                      | G               | FR     |
|-----------------------|-----------------------|----------|--------------------------|-----------------|--------|
| Type                  | Shape and performance | Power    | Resist-ance              | Allowable error | Others |
| RD : Carbon           | 2B : 1/8W             | F : ±1%  | P : Pulse-resistant type |                 |        |
| RC : Composition      | 2E : 1/4W             | G : ±2%  | NL : Low noise type      |                 |        |
| RS : Metal oxide film | 2H : 1/2W             | J : ±5%  | NB : Non-burning type    |                 |        |
| RW : Winding          | 3A : 1W               | K : ±10% | FR : Fuse-resistor       |                 |        |
| RM : Metal film       | 3D : 2W               | M : ±20% | F : Lead wire forming    |                 |        |
| RK : Metal mixture    | 3F : 3W               |          |                          |                 |        |
|                       | 3H : 5W               |          |                          |                 |        |

• Resistance  
 1 8 2 ⇒ 1800 ohm = 1.8 kohm  
 Indicates number of zeros after effective number.  
 2-digit effective number.

• Units: ohm  
 1 R 2 ⇒ 1.2 ohm  
 1-digit effective number.  
 2-digit effective number, decimal point indicated by R.

• Units: ohm

## • Capacitors

| Ex. CE                           | 04W                   | 1H           | 2R2                              | M               | BP     |
|----------------------------------|-----------------------|--------------|----------------------------------|-----------------|--------|
| Type                             | Shape and performance | Dielectric   | Capacity                         | Allowable error | Others |
| CE : Aluminum foil electrolytic  | 0J : 6.3V             | F : ±1%      | HS : High stability type         |                 |        |
| CA : Aluminum solid electrolytic | 1A : 10V              | G : ±2%      | BP : Non-polar type              |                 |        |
| CS : Tantalum electrolytic       | 1C : 16V              | J : ±5%      | HR : Ripple-resistant type       |                 |        |
| CQ : Film                        | 1E : 25V              | K : ±10%     | DL : For charge and discharge    |                 |        |
| CK : Ceramic                     | 1V : 35V              | M : ±20%     | HF : For assuring high frequency |                 |        |
| CC : Ceramic                     | 1H : 50V              | Z : +80%     | U : UL part                      |                 |        |
| CP : Oil                         | 2A : 100V             | -20%         | C : CSA part                     |                 |        |
| CM : Mica                        | 2B : 125V             | P : +100%    | W : UL-CSA type                  |                 |        |
| CF : Metallized                  | 2C : 160V             | -0%          | F : Lead wire forming            |                 |        |
| CH : Metallized                  | 2D : 200V             | C : ±0.25pF  |                                  |                 |        |
|                                  | 2E : 250V             | D : ±0.5pF   |                                  |                 |        |
|                                  | 2H : 500V             | E : ± Others |                                  |                 |        |
|                                  | 2J : 630V             |              |                                  |                 |        |

## • Capacity (electrolyte only)

2 2 2 ⇒ 2200μF  
 Indicates number of zeros after effective number.  
 2-digit effective number.

• Units: μF.

2 R 2 ⇒ 2.2μF  
 1-digit effective number.  
 2-digit effective number, decimal point indicated by R.

• Units: μF.

## • Capacity (except electrolyte)

2 2 2 ⇒ 2200pF = 0.0022μF  
 (More than 2) — Indicates number of zeros after effective number.  
 2-digit effective number.

• Units: pF.

2 2 1 ⇒ 220pF  
 (0 or 1) — Indicates number of zeros after effective number.  
 2-digit effective number.

• Units: pF.

• When the dielectric strength is indicated in AC, "AC" is included after the dielectric strength value.

## PARTS LIST OF P.W.B. UNIT ASS'Y

1U-2938C MAIN UNIT ASS'Y (PMA-925R)

| Ref. No.                    | Part No.     | Part Name                   | Remarks           |
|-----------------------------|--------------|-----------------------------|-------------------|
| <b>SEMICONDUCTORS GROUP</b> |              |                             |                   |
| IC201                       | 263 0322 004 | IC BA4558                   | Linear ope. amp   |
| IC202                       | 263 0609 002 | IC NJM2068DDC               |                   |
| IC401,402                   | 263 0930 001 | IC μPC5023CS-064            | Bias IC           |
| IC403,404                   | 262 0874 009 | IC TLP521-1(BL)             |                   |
| IC701                       | 268 0073 905 | IC ICP-N15                  | IC protector      |
| TR301~304                   | 271 0094 919 | Transistor 2SA970(BL)       |                   |
| TR305,306                   | 271 0131 924 | Transistor 2SA988(E/F)      |                   |
| TR307~312                   | 273 0235 923 | Transistor 2SC1841(E/F)     |                   |
| TR313,314                   | 273 0303 910 | Transistor 2SC1740S(S)      |                   |
| TR315,316                   | 275 0069 001 | Transistor 2SK215           | N type FET        |
| TR317,318                   | 275 0068 002 | Transistor 2SJ78            | P type FET        |
| TR323                       | 271 0131 924 | Transistor 2SA988(E/F)      |                   |
| TR401,402                   | 271 0280 901 | Transistor 2SA1038S(S/E)    |                   |
| TR403,404                   | 273 0281 906 | Transistor 2SC2705(O)/(Y)   |                   |
| TR405,406                   | 273 0432 904 | Transistor 2SC2389S(S/E)    |                   |
| TR407,408                   | 271 0168 900 | Transistor 2SA1145(O)/(Y)   |                   |
| TR601,602                   | 273 0235 923 | Transistor 2SC1841(E/F)     |                   |
| TR603~605                   | 273 0303 910 | Transistor 2SC1740S(S)      |                   |
| TR606                       | 271 0192 905 | Transistor 2SA933S(S)       |                   |
| TR607                       | 273 0235 923 | Transistor 2SC1841(E/F)     |                   |
| TR608                       | 271 0094 935 | Transistor 2SA970(BL/GR)    |                   |
| TR609                       | 272 0107 906 | Transistor 2SB1328(P)       |                   |
| TR610~612                   | 273 0235 923 | Transistor 2SC1841(E/F)     |                   |
| TR615                       | 273 0303 910 | Transistor 2SC1740S(S)      |                   |
| TR616                       | 272 0107 906 | Transistor 2SB1328(P)       |                   |
| TR701                       | 274 0168 006 | Transistor 2SD2395(E/F)     |                   |
| TR702                       | 272 0129 007 | Transistor 2SB1566(E/F)     |                   |
| TR703                       | 271 0280 901 | Transistor 2SA1038S(S/E)    |                   |
| TR704,705                   | 273 0432 904 | Transistor 2SC2389S(S/E)    |                   |
| TR706                       | 273 0303 910 | Transistor 2SC1740S(S)      |                   |
| TR801~806                   | 273 0235 923 | Transistor 2SC1841(E/F)     |                   |
| D101~106                    | 276 0616 907 | Diode 1SS252                |                   |
| D301~306                    | 276 0616 907 | Diode 1SS252                |                   |
| D351,352                    | 276 0616 907 | Diode 1SS252                |                   |
| D401~414                    | 276 0616 907 | Diode 1SS252                |                   |
| D601,602                    | 276 0616 907 | Diode 1SS252                |                   |
| D701                        | 276 0553 905 | Diode 1SR35-200A            |                   |
| △D702                       | 276 0424 005 | Diode 404B42(LC1)           | Bridge            |
| D703,704                    | 276 0553 905 | Diode 1SR35-200A            |                   |
| ZD401~404                   | 276 0643 954 | Zener diode MTZJ3.9A        | 3.9 V             |
| ZD601                       | 276 0644 911 | Zener diode MTZJ7.5A        | 7.5 V             |
| ZD701,702                   | 276 0645 978 | Zener diode MTZJ36A         | 36 V              |
| ZD703                       | 276 0644 911 | Zener diode MTZJ7.5A        | 7.5 V             |
| ZD705,706                   | 276 0645 907 | Zener diode MTZJ18A         | 18 V              |
| SC601                       | 279 0016 904 | Thyristor SFOR1A42          |                   |
| <b>RESISTORS GROUP</b>      |              |                             |                   |
| VR202                       | 211 0798 103 | Variable resistor 100kohm   | Balance           |
| VR203                       | 211 0834 012 | Variable resistor 10kohm    | Treble            |
| VR204                       | 211 0834 009 | Variable resistor 30kohm    | Bass              |
| △R116                       | 244 0157 003 | Metal oxide 2.2kohm 3W      | RS14B3F22JNBS(S)  |
| △R162                       | 244 0157 003 | Metal oxide 2.2kohm 3W      | RS14B3F22JNBS(S)  |
| △R309~312                   | 241 2380 963 | Carbon film 2.2kohm 1/4W    | RD14B2E22JNBS     |
| △R317,318                   | 241 2377 963 | Carbon film 120ohm 1/4W     | RD14B2E12JNBS     |
| △R319~322                   | 241 2377 976 | Carbon film 130ohm 1/4W     | RD14B2E13JNBS     |
| △R323,324                   | 241 2315 967 | Fusible resistor 60ohm 1/4W | RD14B2E600GFFRS   |
| △R325,326                   | 241 2380 950 | Carbon film 20ohm 1/4W      | RD14B2E20JNBS     |
| △R327,328                   | 241 2379 929 | Carbon film 660ohm 1/4W     | RD14B2E660JNBS    |
| △R331,332                   | 241 2377 920 | Carbon film 220ohm 1/4W     | RD14B2E22JNBS     |
| △R333~336                   | 244 2043 962 | Metal oxide 0.22ohm 1W      | RS14B3AP2JNBS(S)  |
| △R345~348                   | 244 2043 962 | Metal oxide 0.22ohm 1W      | RS14B3AP2JNBS(S)  |
| △R351                       | 241 2379 987 | Carbon film 1kohm 1/4W      | RD14B2E102JNBS    |
| △R401,402                   | 241 2379 916 | Carbon film 510ohm 1/4W     | RD14B2E51JNBS     |
| △R403,404                   | 241 2378 946 | Carbon film 270ohm 1/4W     | RD14B2E27JNBS     |
| △R409,410                   | 241 2378 916 | Carbon film 510ohm 1/4W     | RD14B2E51JNBS     |
| △R413,414                   | 241 2378 946 | Carbon film 270ohm 1/4W     | RD14B2E27JNBS     |
| △R441~444                   | 241 2379 987 | Carbon film 1kohm 1/4W      | RD14B2E102JNBS    |
| △R601~604                   | 241 2380 950 | Carbon film 2kohm 1/4W      | RD14B2E202JNBS    |
| △R631                       | 244 2069 018 | Metal oxide 3kohm 5W        | RS14B3H302JNBS(S) |
| △R633                       | 244 2069 018 | Metal oxide 3kohm 5W        | RS14B3H302JNBS(S) |
| △R635                       | 244 2069 018 | Metal oxide 3kohm 5W        | RS14B3H302JNBS(S) |
| △R711,712                   | 244 2043 908 | Metal oxide 680ohm 1W       | RS14B3A681JNBS(S) |
| △R713                       | 241 2387 940 | Carbon film 4.7ohm 1/4W     | RD14B2E4R7JNBS    |
| △R716                       | 241 2387 940 | Carbon film 4.7ohm 1/4W     | RD14B2E4R7JNBS    |
| △R717,718                   | 244 2043 908 | Carbon film 680ohm 1W       | RS14B3A681JNBS(S) |

| Ref. No.                | Part No.     | Part Name                | Remarks                   | Ref. No.                  | Part No.     | Part Name                | Remarks          |
|-------------------------|--------------|--------------------------|---------------------------|---------------------------|--------------|--------------------------|------------------|
| <b>CAPACITORS GROUP</b> |              |                          |                           |                           |              |                          |                  |
| C111,112                | 253 4444 907 | Ceramic cap. 220pF/50V   | CC45SL1H221J              | C701,702                  | 254 4260 948 | Electrolytic 1μF/50V     | CE04W1H010M      |
| C207,208                | 254 4260 980 | Electrolytic 10μF/50V    | CE04W1H100M               | C703,704                  | 254 4261 921 | Electrolytic 100μF/50V   | CE04W1H101M      |
| C209,210                | 253 4537 982 | Ceramic cap. 56pF/50V    | CC45SL1H560J              | C705,706                  | 254 6206 007 | Electrolytic 12000μF/63V | CE68W1J123MC(DL) |
| C213,214                | 254 4260 948 | Electrolytic 1μF/50V     | CE04W1H010M               | C707                      | 256 1042 903 | Metalized 0.1μF/250V     | CF93A2E104K      |
| C215,216                | 254 4254 941 | Electrolytic 100μF/16V   | CE04W1C101M               | C708                      | 254 4263 916 | Electrolytic 0.22μF/100V | CE04W2AR22M      |
| C217,218                | 255 1265 994 | Film cap. 0.033μF/50V    | CQ93M1H333J(B)            | <b>OTHERS PARTS GROUP</b> |              |                          |                  |
| C219,220                | 254 4260 919 | Electrolytic 0.22μF/50V  | CE04W1HR22M               |                           |              |                          |                  |
| C221,222                | 254 4260 906 | Electrolytic 0.1μF/50V   | CE04W1H0R1M               | SW101                     | —            | (P.W.board)              | (1)              |
| C223,224                | 254 4260 935 | Electrolytic 0.47μF/50V  | CE04W1HR47M               | SW202                     | 212 0336 005 | Rotary switch            | Rec out sel. 1   |
| C225,226                | 254 4260 922 | Electrolytic 0.33μF/50V  | CE04W1HR33M               | RL101~106                 | 212 1161 004 | 1P push switch           | Surce direct 1   |
| C227,228                | 256 1034 953 | Metalized 0.068μF/50V    | CF93A1H683J               |                           | 214 0178 007 | Relay(MR62-12USRY)       | 6                |
| C229,230                | 255 1265 994 | Film cap. 0.033μF/50V    | CQ93M1H333J(B)            |                           | 204 8266 008 | 4P pin jack(S-GND)       | for TAPE 2       |
| C250,251                | 254 4254 941 | Electrolytic 100μF/16V   | CE04W1C101M               |                           | 204 8278 009 | 6P pin jack(S-GND)       | for INPUTS 1     |
| C252,253                | 255 4237 929 | Film cap. 56pF/100V      | CQ93P2A560J(NH)           |                           |              |                          |                  |
| C256,257                | 254 4254 941 | Electrolytic 100μF/16V   | CE04W1C101M               |                           |              |                          |                  |
| C258,259                | 254 4260 948 | Electrolytic 1μF/50V     | CE04W1H010M               |                           |              |                          |                  |
| C261                    | 253 1181 917 | Ceramic cap. 0.022μF/50V | CK45F1H223Z               |                           |              |                          |                  |
| C262,263                | 255 1265 936 | Film cap. 0.01μF/50V     | CQ93M1H103J(B)            |                           |              |                          |                  |
| C301,302                | 254 4254 941 | Electrolytic 100μF/16V   | CE04W1C101M               |                           |              |                          |                  |
| C303,304                | 255 4235 918 | Film cap. 100pF/100V     | CQ93P2A101J(NH)           |                           |              |                          |                  |
| C305,306                | 255 6177 980 | Film cap. 220pF/50V      | CQ09S1H221J(STM)          |                           |              |                          |                  |
| C307,308                | 255 1264 908 | Film cap. 1000pF/50V     | CQ93M1H102J(B)            |                           |              |                          |                  |
| C309,310                | 254 4252 082 | Electrolytic 2200μF/10V  | CE04W1A222M               |                           |              |                          |                  |
| C311,312                | 255 4237 929 | Film cap. 56pF/100V      | CQ93P2A560J(NH)           |                           |              |                          |                  |
| C317,318                | 253 4470 900 | Ceramic cap. 10pF/500V   | CC45SL2H100D              |                           |              |                          |                  |
| C319~322                | 254 4261 921 | Electrolytic 100μF/50V   | CE04W1H101M               |                           |              |                          |                  |
| C329~332                | 254 4262 904 | Electrolytic 4.7μF/63V   | CE04W1J4R7M               |                           |              |                          |                  |
| C339                    | 254 4262 755 | Electrolytic 100μF/63V   | CE04W1J101MC              |                           |              |                          |                  |
| C361,362                | 253 4490 906 | Ceramic cap. 68pF/500V   | CC45SL2H680J              |                           |              |                          |                  |
| C363,364                | 253 4470 900 | Ceramic cap. 10pF/500V   | CC45SL2H100D              |                           |              |                          |                  |
| C371,372                | 255 6178 947 | Film cap. 680pF/50V      | CQ09S1H681J(STM)          |                           |              |                          |                  |
| C401,402                | 254 4261 918 | Electrolytic 47μF/50V    | CE04W1H470M               |                           |              |                          |                  |
| C403,404                | 254 3056 959 | Electrolytic 10μF/50V    | CE04D1H100MBP<br>(Bipole) |                           |              |                          |                  |
| C405,406                | 254 4260 993 | Electrolytic 22μF/50V    | CE04W1H220M               |                           |              |                          |                  |
| C407,408                | 255 1264 908 | Film cap. 1000pF/50V     | CQ93M1H102J(B)            |                           |              |                          |                  |
| C409,410                | 254 4260 948 | Electrolytic 1μF/50V     | CE04W1H010M               |                           |              |                          |                  |
| C411,412                | 255 1265 936 | Film cap. 0.01μF/50V     | CQ93M1H103J(B)            |                           |              |                          |                  |
| C413~416                | 256 1034 979 | Metalized 0.1μF/50V      | CF93A1H104J               |                           |              |                          |                  |
| C451,452                | 253 1179 987 | Ceramic cap. 470pF/50V   | CK45B1H471K               |                           |              |                          |                  |
| C601,602                | 255 1265 936 | Film cap. 0.01μF/50V     | CQ93M1H103J(B)            |                           |              |                          |                  |
| C603                    | 254 4250 945 | Electrolytic 330μF/6.3V  | CE04W0J331M               |                           |              |                          |                  |
| C604                    | 254 4252 930 | Electrolytic 100μF/10V   | CE04W1A101M               |                           |              |                          |                  |
| C605                    | 254 4252 901 | Electrolytic 22μF/10V    | CE04W1A220M               |                           |              |                          |                  |
| C606                    | 255 1265 978 | Film cap. 0.022μF/50V    | CQ93M1H223J(B)            |                           |              |                          |                  |

## 1U-2939A μ-COM UNIT ASS'Y (PMA-925R)

| Ref. No.                    | Part No.     | Part Name                    | Remarks           | Ref. No.                  | Part No.     | Part Name                | Remarks          |
|-----------------------------|--------------|------------------------------|-------------------|---------------------------|--------------|--------------------------|------------------|
| <b>SEMICONDUCTORS GROUP</b> |              |                              |                   |                           |              |                          |                  |
| IC105                       | 499 0150 008 | IC SBX1610-52                | Remote sensor     | C809                      | 254 4196 973 | Electrolytic 4.7μF/50V   | CE04W1H4R7M(SRA) |
| IC702                       | 263 0793 002 | IC NJM7806FA(S)              | Regulator +6 V    | C810                      | 254 4196 944 | Electrolytic 1μF/50V     | CE04W1H010M(SRA) |
| IC801                       | 262 1579 303 | IC HD404304A13P              | μ-com             | C811                      | 254 4196 928 | Electrolytic 0.33μF/50V  | CE04W1HR33M(SRA) |
| IC802                       | 263 0476 002 | IC LB1639                    | Motor driver      | C812                      | 256 1034 982 | Metallized 0.12μF/50V    | CF93A1H124J      |
| IC803                       | 263 0535 008 | IC M51954AL                  | Reset IC          | C901                      | 254 4260 948 | Electrolytic 1μF/50V     | CE04W1H010M      |
| IC901                       | 263 0322 004 | IC BA4558                    |                   | C902                      | 253 1181 917 | Ceramic cap. 0.022μF/50V | CK45F1H223Z      |
| TR707                       | 274 0168 006 | Transistor 2SD2395(E/F)      |                   | C905,906                  | 253 1179 929 | Ceramic cap. 150pF/50V   | CK45B1H151K      |
| TR807                       | 271 0192 905 | Transistor 2SA933S(S)        |                   | C907,908                  | 253 1179 961 | Ceramic cap. 330pF/50V   | CK45B1H331K      |
| TR808,809                   | 273 0303 910 | Transistor 2SC1740S(S)       |                   | C909,910                  | 253 1179 903 | Ceramic cap. 100pF/50V   | CK45B1H101K      |
| TR810                       | 269 0046 906 | Transistor DTA114ES          | Built in resistor | C911,912                  | 254 4260 948 | Electrolytic 1μF/50V     | CE04W1H010M      |
| TR901~904                   | 275 0038 045 | Transistor 2SK369(BL)/(GR)-C | N type FET △VGS   | C913,914                  | 255 1251 937 | Film cap. 3300pF/50V     | CQ92M1H332J(MRZ) |
| D801~805                    | 276 0616 907 | Diode 1SS252                 |                   | C915,916                  | 254 4252 930 | Electrolytic 100μF/10V   | CE04W1A101M      |
| D806                        | 276 0553 905 | Diode 1SR35-200A             |                   | C917,918                  | 256 1034 953 | Metallized 0.068μF/50V   | CF93A1H683J      |
| D807,808                    | 276 0616 907 | Diode 1SS252                 |                   | C919,920                  | 254 4254 909 | Electrolytic 10μF/16V    | CE04W1C100M      |
| D901,902                    | 276 0616 907 | Diode 1SS252                 |                   | C921,922                  | 255 4223 959 | Film cap. 0.018μF/50V    | CQ92M1H183J(MRZ) |
| ZD704                       | 276 0644 995 | Zener diode MTZJ16A          | 16 V              | C923,924                  | 255 1264 911 | Film cap. 1200pF/50V     | CQ93M1H122J(B)   |
| LD801                       | 393 9559 904 | LED SLR-56DUTB7              |                   | C925,926                  | 253 1179 961 | Ceramic cap. 330pF/50V   | CK45B1H331K      |
| LD802~807                   | 393 9515 906 | LED SLR-56VR70               | Orange Red        | C935                      | 254 4252 930 | Electrolytic 100μF/10V   | CE04W1A101M      |
| PH701                       | 279 0034 041 | Posistor PTH9M04BD222TS2F333 |                   | C936,937                  | 254 4256 936 | Electrolytic 47μF/25V    | CE04W1E470M      |
| <b>RESISTORS GROUP</b>      |              |                              |                   |                           |              |                          |                  |
| △ R632                      | 241 2387 940 | Carbon film 4.7ohm 1/4W      |                   | <b>OTHERS PARTS GROUP</b> |              |                          |                  |
| △ R636,937                  | 241 2377 905 | Carbon film 68ohm 1/4W       |                   | Q'ty                      |              |                          |                  |
| <b>CAPACITORS GROUP</b>     |              |                              |                   |                           |              |                          |                  |
| C709                        | 254 4263 916 | Electrolytic 0.22μF/100V     | CE04W2AR22M       | L901,902                  | —            | (P.W.board)              | (1)              |
| C711                        | 253 1181 904 | Ceramic cap. 0.01μF/50V      | CK45F1H103Z       | XL801                     | 235 9003 002 | Inductor (150μH)         | 2                |
| C712,713                    | 254 4260 980 | Electrolytic 10μF/50V        | CE04W1H100M       | SW801~806                 | 399 9018 003 | Resonator                | 1                |
| C714,715                    | 253 1181 904 | Ceramic cap. 0.01μF/50V      | CK45F1H103Z       | SW901                     | 212 4789 001 | Tact switch              | 6                |
| C801                        | 254 4213 937 | Electrolytic 100μF/6.3V      | CE04W0J101M(SRA)  | SW901                     | 212 1099 008 | 1P push swtch            | 1                |
| C802                        | 253 1181 917 | Ceramic cap. 0.022μF/50V     | CK45F1H223Z       | SW901                     | 204 8413 000 | 2P pin jack(C-GND)       | 1                |
| C803                        | 254 4213 937 | Electrolytic 100μF/6.3V      | CE04W0J101M(SRA)  | SW901                     | 415 0309 013 | P.V.C.tube L=10          | 2                |
| C805                        | 254 4213 937 | Electrolytic 100μF/6.3V      | CE04W0J101M(SRA)  |                           |              |                          |                  |
| C806                        | 254 6190 906 | Electrolytic 330μF/6.3V      | CE04W0J331M(SRA)  |                           |              |                          |                  |
| C807                        | 259 0007 003 | Back up cap. 8200μF/5.5V     | SB CAP==822=      |                           |              |                          |                  |
| C808                        | 253 1181 917 | Ceramic cap. 0.022μF/50V     | CK45F1H223Z       |                           |              |                          |                  |

## 1U-2940C VOLUME UNIT ASS'Y (PMA-925R)

| Ref. No.   | Part No.     | Part Name                   | Remarks               |
|--|--------------|-----------------------------|-----------------------|
| <b>SEMICONDUCTORS GROUP</b>                                |              |                             |                       |
| TR617,618  | 273 0235 923 | Transistor 2SC1841(E/F)     |                       |
| D001   | 276 0616 907 | Diode 1SS252                |                       |
| D441-444   | 276 0616 907 | Diode 1SS252                |                       |
| D610-612   | 276 0616 907 | Diode 1SS252                |                       |
| <b>RESISTORS GROUP(Not included carbon film ±5%, 1/4W)</b> |              |                             |                       |
| VR201  | 211 0869 003 | Variable resistor 30kohm    | Main volume           |
| △R341,342  | 244 2043 982 | Metal oxide 0.22ohm 1W      | RS14B3AR22JNBS(S)     |
| △R501,502  | 244 2043 937 | Metal oxide 10ohm 1W        | RS14B3A100JNBS(S)     |
| △R505-508  | 244 2050 933 | Metal oxide 180ohm 1W       | RS14B3A181JNBS(S)     |
| △R652  | 244 0157 003 | Metal oxide 2.2kohm 3W      | RS14B3F222JNB         |
| △R653  | 244 2069 018 | Metal oxide 3kohm 5W        | RS14B3H302JNB(S)      |
| △R654  | 244 2069 005 | Metal oxide 2.4kohm 5W      | RS14B3H242JNB(S)      |
| △R655  | 244 2069 018 | Metal oxide 3kohm 5W        | RS14B3H302JNB(S)      |
| △R656  | 244 2069 005 | Metal oxide 2.4kohm 5W      | RS14B3H242JNB(S)      |
| △R660  | 244 0157 003 | Metal oxide 2.2kohm 3W      | RS14B3F222JNB         |
| <b>CAPACITORS GROUP</b>                                    |              |                             |                       |
| △C002  | 253 8003 713 | Ceramic cap. 4700pF/400V AC | CK45E2GAC472MC        |
| C203,204   | 254 4254 909 | Electrolytic 10μF/16V       | CE04W1C100M           |
| C205   | 255 1265 936 | Film cap. 0.01μF/50V        | CQ93M1H103J(B)        |
| C501,502   | 256 1034 979 | Metallized 0.1μF/50V        | CF93A1H104J           |
| <b>OTHERS PARTS GROUP</b>                                  |              |                             | Q'ty                  |
|  | —            | (P.W.board)                 | (1)                   |
| L301,302   | 235 0104 007 | Inductor(1mH)               | 2                     |
|  | 202 0022 008 | Fuse holder                 | for F001,002          |
|  |              |                             | 4                     |
| △F001  | 206 1015 032 | Fuse(2.5A)                  | 1                     |
| △F002  | 206 1015 029 | Fuse(1AT)                   | 1                     |
|  | 513 0654 017 | Fuse label (T. 25A)         | for F001              |
| △  | 415 0299 000 | Capacitor cover             | for C002              |
| △RL001   | 214 0142 004 | Relay(TV-5)                 | 1                     |
| RL601,602  | 214 0129 001 | Relay(DH2TU)                | for SP-A,B            |
| RL603  | 214 0178 007 | Relay(MR62-12USRY)          | for Headphone         |
| SW501  | 212 1162 003 | 3P push switch              | for Speaker<br>ON-OFF |
|  | 205 0484 001 | 8P speaker terminal         | for Speaker           |
|  | 204 8503 004 | :Head phone jack            | JA501                 |
| △  | 203 3950 002 | 3P AC outlet                | AOL-1                 |
| △  | 205 0692 000 | 2P wrapping terminal        | 1                     |

## 1U-2938 MAIN UNIT ASS'Y (PMA-725R)

1U-2938A : Europe model

1U-2938B : U.K. model

| Ref. No.                    | Part No.     | Part Name                 | Remarks         |
|-----------------------------|--------------|---------------------------|-----------------|
| <b>SEMICONDUCTORS GROUP</b> |              |                           |                 |
| IC201                       | 263 0322 004 | IC BA4558                 | Linear ope. amp |
| IC202                       | 263 0609 002 | IC NJM2068DDC             |                 |
| IC401,402                   | 263 0930 001 | IC μPC5023CS-064          | Bias IC         |
| IC403,404                   | 262 0874 009 | IC TLP521-1(BL)           |                 |
| IC701                       | 268 0073 905 | IC ICP-N15                | IC protector    |
| TR301~304                   | 271 0094 919 | Transistor 2SA970(BL)     |                 |
| TR305,306                   | 271 0131 924 | Transistor 2SA988(E/F)    |                 |
| TR307~312                   | 273 0235 923 | Transistor 2SC1841(E/F)   |                 |
| TR313,314                   | 273 0303 910 | Transistor 2SC1740S(S)    |                 |
| TR323                       | 271 0131 924 | Transistor 2SA988(E/F)    |                 |
| TR401,402                   | 271 0280 901 | Transistor 2SA1038S(S/E)  |                 |
| TR403,404                   | 273 0281 906 | Transistor 2SC2705(O)/(Y) |                 |
| TR405,406                   | 273 0432 904 | Transistor 2SC2389S(S/E)  |                 |
| TR407,408                   | 271 0168 900 | Transistor 2SA1145(O)/(Y) |                 |
| TR601,602                   | 273 0235 923 | Transistor 2SC1841(E/F)   |                 |
| TR603~605                   | 273 0303 910 | Transistor 2SC1740S(S)    |                 |
| TR606                       | 271 0192 905 | Transistor 2SA933S(S)     |                 |
| TR607                       | 273 0235 923 | Transistor 2SC1841(E/F)   |                 |
| TR608                       | 271 0094 935 | Transistor 2SA970(BL/GR)  |                 |
| TR609                       | 272 0107 906 | Transistor 2SB1328(P)     |                 |
| TR610                       | 273 0235 923 | Transistor 2SC1841(E/F)   |                 |
| TR611                       | 273 0235 923 | Transistor 2SC1841(E/F)   |                 |
| R612                        | 273 0235 923 | Transistor 2SC1841(E/F)   |                 |
| TR615                       | 273 0303 910 | Transistor 2SC1740S(S)    |                 |
| TR616                       | 272 0107 906 | Transistor 2SB1328(P)     |                 |
| TR701                       | 274 0168 006 | Transistor 2SD2395(E/F)   |                 |
| TR702                       | 272 0129 007 | Transistor 2SB1566(E/F)   |                 |
| TR703                       | 271 0280 901 | Transistor 2SA1038S(S/E)  |                 |
| TR704,705                   | 273 0432 904 | Transistor 2SC2389S(S/E)  |                 |
| TR706                       | 273 0303 910 | Transistor 2SC1740S(S)    |                 |
| TR801~806                   | 273 0235 923 | Transistor 2SC1841(E/F)   |                 |
| D101~106                    | 276 0616 907 | Diode 1SS252              |                 |
| D301~306                    | 276 0616 907 | Diode 1SS252              |                 |
| D351,352                    | 276 0616 907 | Diode 1SS252              |                 |
| D401~414                    | 276 0616 907 | Diode 1SS252              |                 |
| D601,602                    | 276 0616 907 | Diode 1SS252              |                 |
| D701                        | 276 0553 905 | Diode 1SR35-200A          |                 |

| Ref. No.               | Part No.     | Part Name                   | Remarks           | Ref. No. | Part No.     | Part Name                | Remarks                   |
|------------------------|--------------|-----------------------------|-------------------|----------|--------------|--------------------------|---------------------------|
| △D702                  | 276 0338 007 | Diode S4VB20F               | Bridge            | C111,112 | 253 4444 907 | Ceramic cap. 220pF/50V   | CC45SL1H221J              |
| D703,704               | 276 0553 905 | Diode 1SR35-200A            |                   | C207,208 | 254 4260 980 | Electrolytic 10μF/50V    | CE04W1H100M               |
| ZD401~404              | 276 0643 954 | Zener diode MTZJ3.9A        | 3.9 V             | C209,210 | 253 4537 982 | Ceramic cap. 56pF/50V    | CC45SL1H560J              |
| ZD601                  | 276 0644 911 | Zener diode MTZJ7.5A        | 7.5 V             | C213,214 | 254 4260 948 | Electrolytic 1μF/50V     | CE04W1H010M               |
| ZD701,702              | 276 0645 978 | Zener diode MTZJ36A         | 36 V              | C215,216 | 254 4254 941 | Electrolytic 100μF/16V   | CE04W1C101M               |
| ZD703                  | 276 0644 911 | Zener diode MTZJ7.5A        | 7.5 V             | C217,218 | 255 1265 994 | Film cap. 0.033μF/50V    | CQ93M1H333J(B)            |
| ZD705,706              | 276 0645 907 | Zener diode MTZJ18A         | 18 V              | C219,220 | 254 4260 919 | Electrolytic 0.22μF/50V  | CE04W1HR22M               |
| SC601                  | 279 0016 904 | Thyristor SF0R1A42          |                   | C221,222 | 254 4260 906 | Electrolytic 0.1μF/50V   | CE04W1H0R1M               |
| <b>RESISTORS GROUP</b> |              |                             |                   | C223,224 | 254 4260 935 | Electrolytic 0.47μF/50V  | CE04W1HR47M               |
| VR202                  | 211 0798 103 | Variable resistor 100kohm   | Balance           | C225,226 | 254 4260 922 | Electrolytic 0.33μF/50V  | CE04W1HR33M               |
| VR203                  | 211 0834 012 | Variable resistor 10kohm    | Treble            | C227,228 | 256 1034 953 | Metalized 0.068μF/50V    | CF93A1H683J               |
| VR204                  | 211 0834 009 | Variable resistor 30kohm    | Bass              | C229,230 | 255 1265 994 | Film cap. 0.033μF/50V    | CQ93M1H333J(B)            |
| △R115,116              | 244 2051 974 | Metal oxide 1kohm 1W        | RS14B3A102JNBS(S) | C250,251 | 254 4254 941 | Electrolytic 100μF/16V   | CE04W1C101M               |
| △R162,163              | 244 2051 974 | Metal oxide 1kohm 1W        | RS14B3A102JNBS(S) | C252,253 | 255 4237 929 | Film cap. 56pF/100V      | CQ93P2A560J(NH)           |
| △R309~312              | 241 2380 963 | Carbon film 2.2kohm 1/4W    | RD14B2E222JNBS    | C256,257 | 254 4254 941 | Electrolytic 100μF/16V   | CE04W1C101M               |
| △R317,318              | 241 2377 963 | Carbon film 120ohm 1/4W     | RD14B2E121JNBS    | C258,259 | 254 4260 948 | Electrolytic 1μF/50V     | CE04W1H010M               |
| △R319~322              | 241 2377 976 | Carbon film 130ohm 1/4W     | RD14B2E131JNBS    | C261     | 253 1181 917 | Ceramic cap. 0.022μF/50V | CK45F1H22Z                |
| △R323,324              | 241 2315 967 | Fusible resistor 68ohm 1/4W | RD14B2E680GFRS    | C262,263 | 255 1265 936 | Film cap. 0.01μF/50V     | CQ93M1H103J(B)            |
| △R325,326              | 241 2380 950 | Carbon film 2kohm 1/4W      | RD14B2E202JNBS    | C301,302 | 254 4254 941 | Electrolytic 100μF/16V   | CE04W1C101M               |
| △R327,328              | 241 2379 929 | Carbon film 560ohm 1/4W     | RD14B2E561JNBS    | C303,304 | 255 4235 918 | Film cap. 100pF/100V     | CQ93P2A101J(NH)           |
| △R333~336              | 244 2043 982 | Metal oxide 0.22ohm 1W      | RS14B3AR22JNBS(S) | C305,306 | 255 6177 980 | Film cap. 220pF/50V      | CQ09S1H221J(STM)          |
| △R345~348              | 244 2043 982 | Metal oxide 0.22ohm 1W      | RS14B3AR22JNBS(S) | C307,308 | 255 1264 908 | Film cap. 1000pF/50V     | CQ93M1H102J(B)            |
| △R351                  | 241 2379 987 | Carbon film 1kohm 1/4W      | RD14B2E102JNBS    | C309,310 | 254 4252 082 | Electrolytic 2200μF/10V  | CE04W1A22M                |
| △R401,402              | 241 2379 916 | Carbon film 510ohm 1/4W     | RD14B2E511JNBS    | C311,312 | 255 4237 929 | Film cap. 56pF/100V      | CQ93P2A561J(NH)           |
| △R403,404              | 241 2378 946 | Carbon film 270ohm 1/4W     | RD14B2E271JNBS    | C317,318 | 253 4470 900 | Ceramic cap. 10pF/500V   | CC45SL2H10OD              |
| △R409,410              | 241 2379 916 | Carbon film 510ohm 1/4W     | RD14B2E511JNBS    | C319~322 | 254 4261 921 | Electrolytic 100μF/50V   | CE04W1H101M               |
| △R413,414              | 241 2378 946 | Carbon film 270ohm 1/4W     | RD14B2E271JNBS    | C329~332 | 254 4262 904 | Electrolytic 4.7μF/63V   | CE04W1J4R1M               |
| △R441~444              | 241 2379 987 | Carbon film 1kohm 1/4W      | RD14B2E102JNBS    | C339     | 254 4262 755 | Electrolytic 100μF/63V   | CE04W1J101MC              |
| △R601~604              | 241 2380 950 | Carbon film 2kohm 1/4W      | RD14B2E202JNBS    | C371,372 | 255 6178 947 | Film cap. 680pF/50V      | CQ09S1H68J(STM)           |
| △R631~633              | 244 2051 990 | Metal oxide 4.7kohm 1W      | RS14B3A472JNBS(S) | C401,402 | 254 4261 918 | Electrolytic 47μF/50V    | CE04W1H471M               |
| △R634,635              | 244 2052 957 | Metal oxide 5.6kohm 1W      | RS14B3A562JNBS(S) | C403,404 | 254 3056 959 | Electrolytic 10μF/50V    | CE04D1H1001BP<br>(Bipole) |
| △R681                  | 244 2052 957 | Metal oxide 5.6kohm 1W      | RS14B3A562JNBS(S) | C405,406 | 254 4260 993 | Electrolytic 22μF/50V    | CE04W1H221M               |
| △R711,712              | 244 2043 908 | Metal oxide 680ohm 1W       | RS14B3A681JNBS(S) | C407,408 | 255 1264 908 | Film cap. 1000pF/50V     | CQ93M1H101J(B)            |
| △R713                  | 241 2387 940 | Carbon film 4.7ohm 1/4W     | RD14B2E4R7JNBS    | C409,410 | 254 4260 948 | Electrolytic 1μF/50V     | CE04W1H011M               |
| △R716                  | 241 2387 940 | Carbon film 4.7ohm 1/4W     | RD14B2E4R7JNBS    | C411,412 | 255 1265 936 | Film cap. 0.01μF/50V     | CQ93M1H101J(B)            |
| △R717,718              | 244 2043 908 | Metal oxide 680ohm 1W       | RS14B3A681JNBS(S) | C413~416 | 256 1034 979 | Metalized 0.1μF/50V      | CF93A1H104I               |
|                        |              |                             |                   | C451,452 | 253 1179 987 | Ceramic cap. 470pF/50V   | CK45B1H471I               |
|                        |              |                             |                   | C601,602 | 255 1265 936 | Film cap. 0.01μF/50V     | CQ93M1H101J(B)            |
|                        |              |                             |                   | C603     | 254 4250 945 | Electrolytic 330μF/6.3V  | CE04W0J331II              |
|                        |              |                             |                   | C604     | 254 4252 930 | Electrolytic 100μF/10V   | CE04W1A101II              |
|                        |              |                             |                   | C605     | 254 4252 901 | Electrolytic 22μF/10V    | CE04W1A220II              |
|                        |              |                             |                   | C606     | 255 1265 978 | Film cap. 0.022μF/50V    | CQ93M1H223J(B)            |
|                        |              |                             |                   | C701,702 | 254 4260 948 | Electrolytic 1μF/50V     | CE04W1H010II              |
|                        |              |                             |                   | C703,704 | 254 4261 921 | Electrolytic 100μF/50V   | CE04W1H101II              |

**1U-2939A μ-COM UNIT ASS'Y (PMA-725R)**

| Ref. No.                  | Part No.     | Part Name                | Remarks          |
|---------------------------|--------------|--------------------------|------------------|
| C705,706                  | 254 6205 008 | Electrolytic 10000μF/51V | CE68W==103MC(DL) |
| C707                      | 256 1042 903 | Metalized 0.1μF/250V     | CF93A2E104K      |
| C708                      | 254 4263 916 | Electrolytic 0.22μF/100V | CE04W2AR22M      |
| <b>OTHERS PARTS GROUP</b> |              |                          | Q'ty             |
|                           | —            | (P.W.board)              | (1)              |
| SW101                     | 212 0336 005 | Rotary switch            | Rec out sel.     |
| SW202                     | 212 1161 004 | 1P push switch           | Surce direct     |
| RL101~106                 | 214 0178 007 | Relay(MR62-12USRY)       | 6                |
|                           | 204 8266 008 | 4P pin jack(S-GND)       | for TAPE         |
|                           | 204 8278 009 | 6P pin jack(S-GND)       | for INPUTS       |
|                           |              |                          | 2                |
|                           |              |                          | 1                |

**1U-2940 VOLUME UNIT ASS'Y**

#### **1U-2940A : Europe model**

1U-2940B : U.K. model

| Ref. No.                  | Part No.     | Part Name                | Remarks          | Ref. No.  | Part No.     | Part Name                   | Remarks           |
|---------------------------|--------------|--------------------------|------------------|---|--------------|-----------------------------|-------------------|
| C809                      | 254 4196 973 | Electrolytic 4.7μF/50V   | CE04W1H4R7M(SRA) | <b>SEMICONDATORS GROUP</b>                                |              |                             |                   |
| C810                      | 254 4196 944 | Electrolytic 1μF/50V     | CE04W1H010M(SRA) | TR617,618   | 273 0235 923 | Transistor 2SC1841(E/F)     |                   |
| C811                      | 254 4196 928 | Electrolytic 0.33μF/50V  | CE04W1HR33M(SRA) | D001  | 276 0616 907 | Diode 1SS252                | Europe model only |
| C812                      | 256 1034 982 | Metallized 0.12μF/50V    | CF93A1H124J      | D441~444  | 276 0616 907 | Diode 1SS252                |                   |
| C901                      | 254 4260 948 | Electrolytic 1μF/50V     | CE04W1H010M      | D610~612  | 276 0616 907 | Diode 1SS252                |                   |
| C902                      | 253 1181 917 | Ceramic cap. 0.022μF/50V | CK45F1H223Z      | <b>RESISTORS GROUP(Not included carbon film ±5%,1/4W)</b> |              |                             |                   |
| C905,906                  | 253 1179 929 | Ceramic cap. 150pF/50V   | CK45B1H151K      | VR201   | 211 0869 003 | Variable resistor 30kohm    | Main volume       |
| C907,908                  | 253 1179 961 | Ceramic cap. 330pF/50V   | CK45B1H331K      | △R341,342   | 244 2043 982 | Metal oxide 0.22ohm 1W      | RS14B3AR22JNBS(S) |
| C909,910                  | 253 1179 903 | Ceramic cap. 100pF/50V   | CK45B1H101K      | △R501,502   | 244 2043 937 | Metal oxide 10ohm 1W        | RS14B3A100JNBS(S) |
| C911,912                  | 254 4260 948 | Electrolytic 1μF/50V     | CE04W1H010M      | △R505~508   | 244 2050 933 | Metal oxide 180ohm 1W       | RS14B3A18JNBS(S)  |
| C913,914                  | 255 1251 937 | Film cap. 3300pF/50V     | CQ92M1H332J(MRZ) | △R652   | 244 0157 003 | Metal oxide 2.2kohm 3W      | RS14B3F22JNJB     |
| C915,916                  | 254 4252 930 | Electrolytic 100μF/10V   | CE04W1A101M      | △R653   | 244 2043 940 | Metal oxide 2.2kohm 1W      | RS14B3A22JNBS(S)  |
| C917,918                  | 256 1034 953 | Metallized 0.068μF/50V   | CF93A1H683J      | △R654   | 244 2052 915 | Metal oxide 1.8kohm 1W      | RS14B3A18JNBS(S)  |
| C919,920                  | 254 4254 909 | Electrolytic 10μF/16V    | CE04W1C100M      | △R655   | 244 2043 940 | Metal oxide 2.2kohm 1W      | RS14B3AZ22JNBS(S) |
| C921,922                  | 255 4223 959 | Film cap. 0.018μF/50V    | CQ92M1H183J(MRZ) | △R656   | 244 2052 915 | Metal oxide 1.8kohm 1W      | RS14B3A B2JNBS(S) |
| C923,924                  | 255 1264 911 | Film cap. 1200pF/50V     | CQ93M1H122J(B)   | △R660   | 244 0157 003 | Metal oxide 2.2kohm 3W      | RS14B3F22JNJB     |
| C925,926                  | 253 1179 961 | Ceramic cap. 330pF/50V   | CK45B1H331K      | <b>CAPACITORS GROUP</b>                                   |              |                             |                   |
| C935                      | 254 4252 930 | Electrolytic 100μF/10V   | CE04W1A101M      | △C002   | 253 8003 713 | Ceramic cap. 4700pF/400V AC | CK45E2GAC472MC    |
| C936,937                  | 254 4256 936 | Electrolytic 47μF/25V    | CE04W1E470M      | C203,204  | 254 4254 909 | Electrolytic 10μF/16V       | CE04W1C100M       |
| <b>OTHERS PARTS GROUP</b> |              |                          |                  | C205  | 255 1265 936 | Film cap. 0.01μF/50V        | CQ93M1H103J(B)    |
|                           |              |                          |                  | C501,502  | 256 1034 979 | Metallized 0.1μF/50V        | CF93A1H04J        |
| <b>OTHERS PARTS GROUP</b> |              |                          |                  |   | Q'ty         |                             |                   |
| L901,902                  | 235 9003 002 | Inductor (150μH)         | FTZ choke coil   | 2   |              |                             |                   |
| XL801                     | 399 9018 003 | Resonator                | CST4.00 MGW      | 1   |              |                             |                   |
| SW801~806                 | 212 4789 001 | Tact switch              |                  | 6   |              |                             |                   |
| SW901                     | 212 1099 008 | 1P push swtch            | MM/MC            | 1   |              |                             |                   |
|                           | 204 8413 000 | 2P pin jack(C-GND)       | PHONO            | 1   |              |                             |                   |
|                           | 415 0309 013 | P.V.C.tube L=10          | for PH701        | 2   |              |                             |                   |
|                           |              |                          |                  |   |              |                             |                   |
| <b>OTHERS PARTS GROUP</b> |              |                          |                  |   | Q'ty         |                             |                   |
| L301,302                  | 235 0104 007 | (P.W.board)              |                  |   |              |                             |                   |
|                           | 202 0022 008 | Inductor(1mH)            |                  |   |              |                             |                   |
|                           | 202 0022 008 | Fuse holder              |                  |   |              |                             |                   |
|                           | 206 1015 061 | Fuse(2A)                 |                  |   |              |                             |                   |
|                           | 206 1015 029 | Fuse(1AT)                |                  |   |              |                             |                   |
|                           | 415 0299 000 | Capacitor cover          |                  |   |              |                             |                   |
|                           | 415 0299 000 | for C002                 |                  |   |              |                             |                   |
| △RL001                    | 214 0142 004 | Relay(TV-5)              |                  |   |              |                             |                   |
| RL601,602                 | 214 0129 001 | Relay(DH2TU)             |                  |   |              |                             |                   |
| RL603                     | 214 0178 007 | Relay(MR62-12USRY)       |                  |   |              |                             |                   |
| SW501                     | 212 1162 003 | 3P push switch           |                  |   |              |                             |                   |
|                           | 205 0484 001 | 8P speaker terminal      |                  |   |              |                             |                   |
|                           | 204 8503 004 | Head phone jack          |                  |   |              |                             |                   |
|                           | 203 3950 002 | 3P AC outlet             |                  |   |              |                             |                   |
|                           | 205 0692 000 | 2P wrapping terminal     |                  |   |              |                             |                   |

## EXPLODED VIEW OF CHASSIS AND CABINET : PMA-925R

1

2

3


4

5

6

7

8

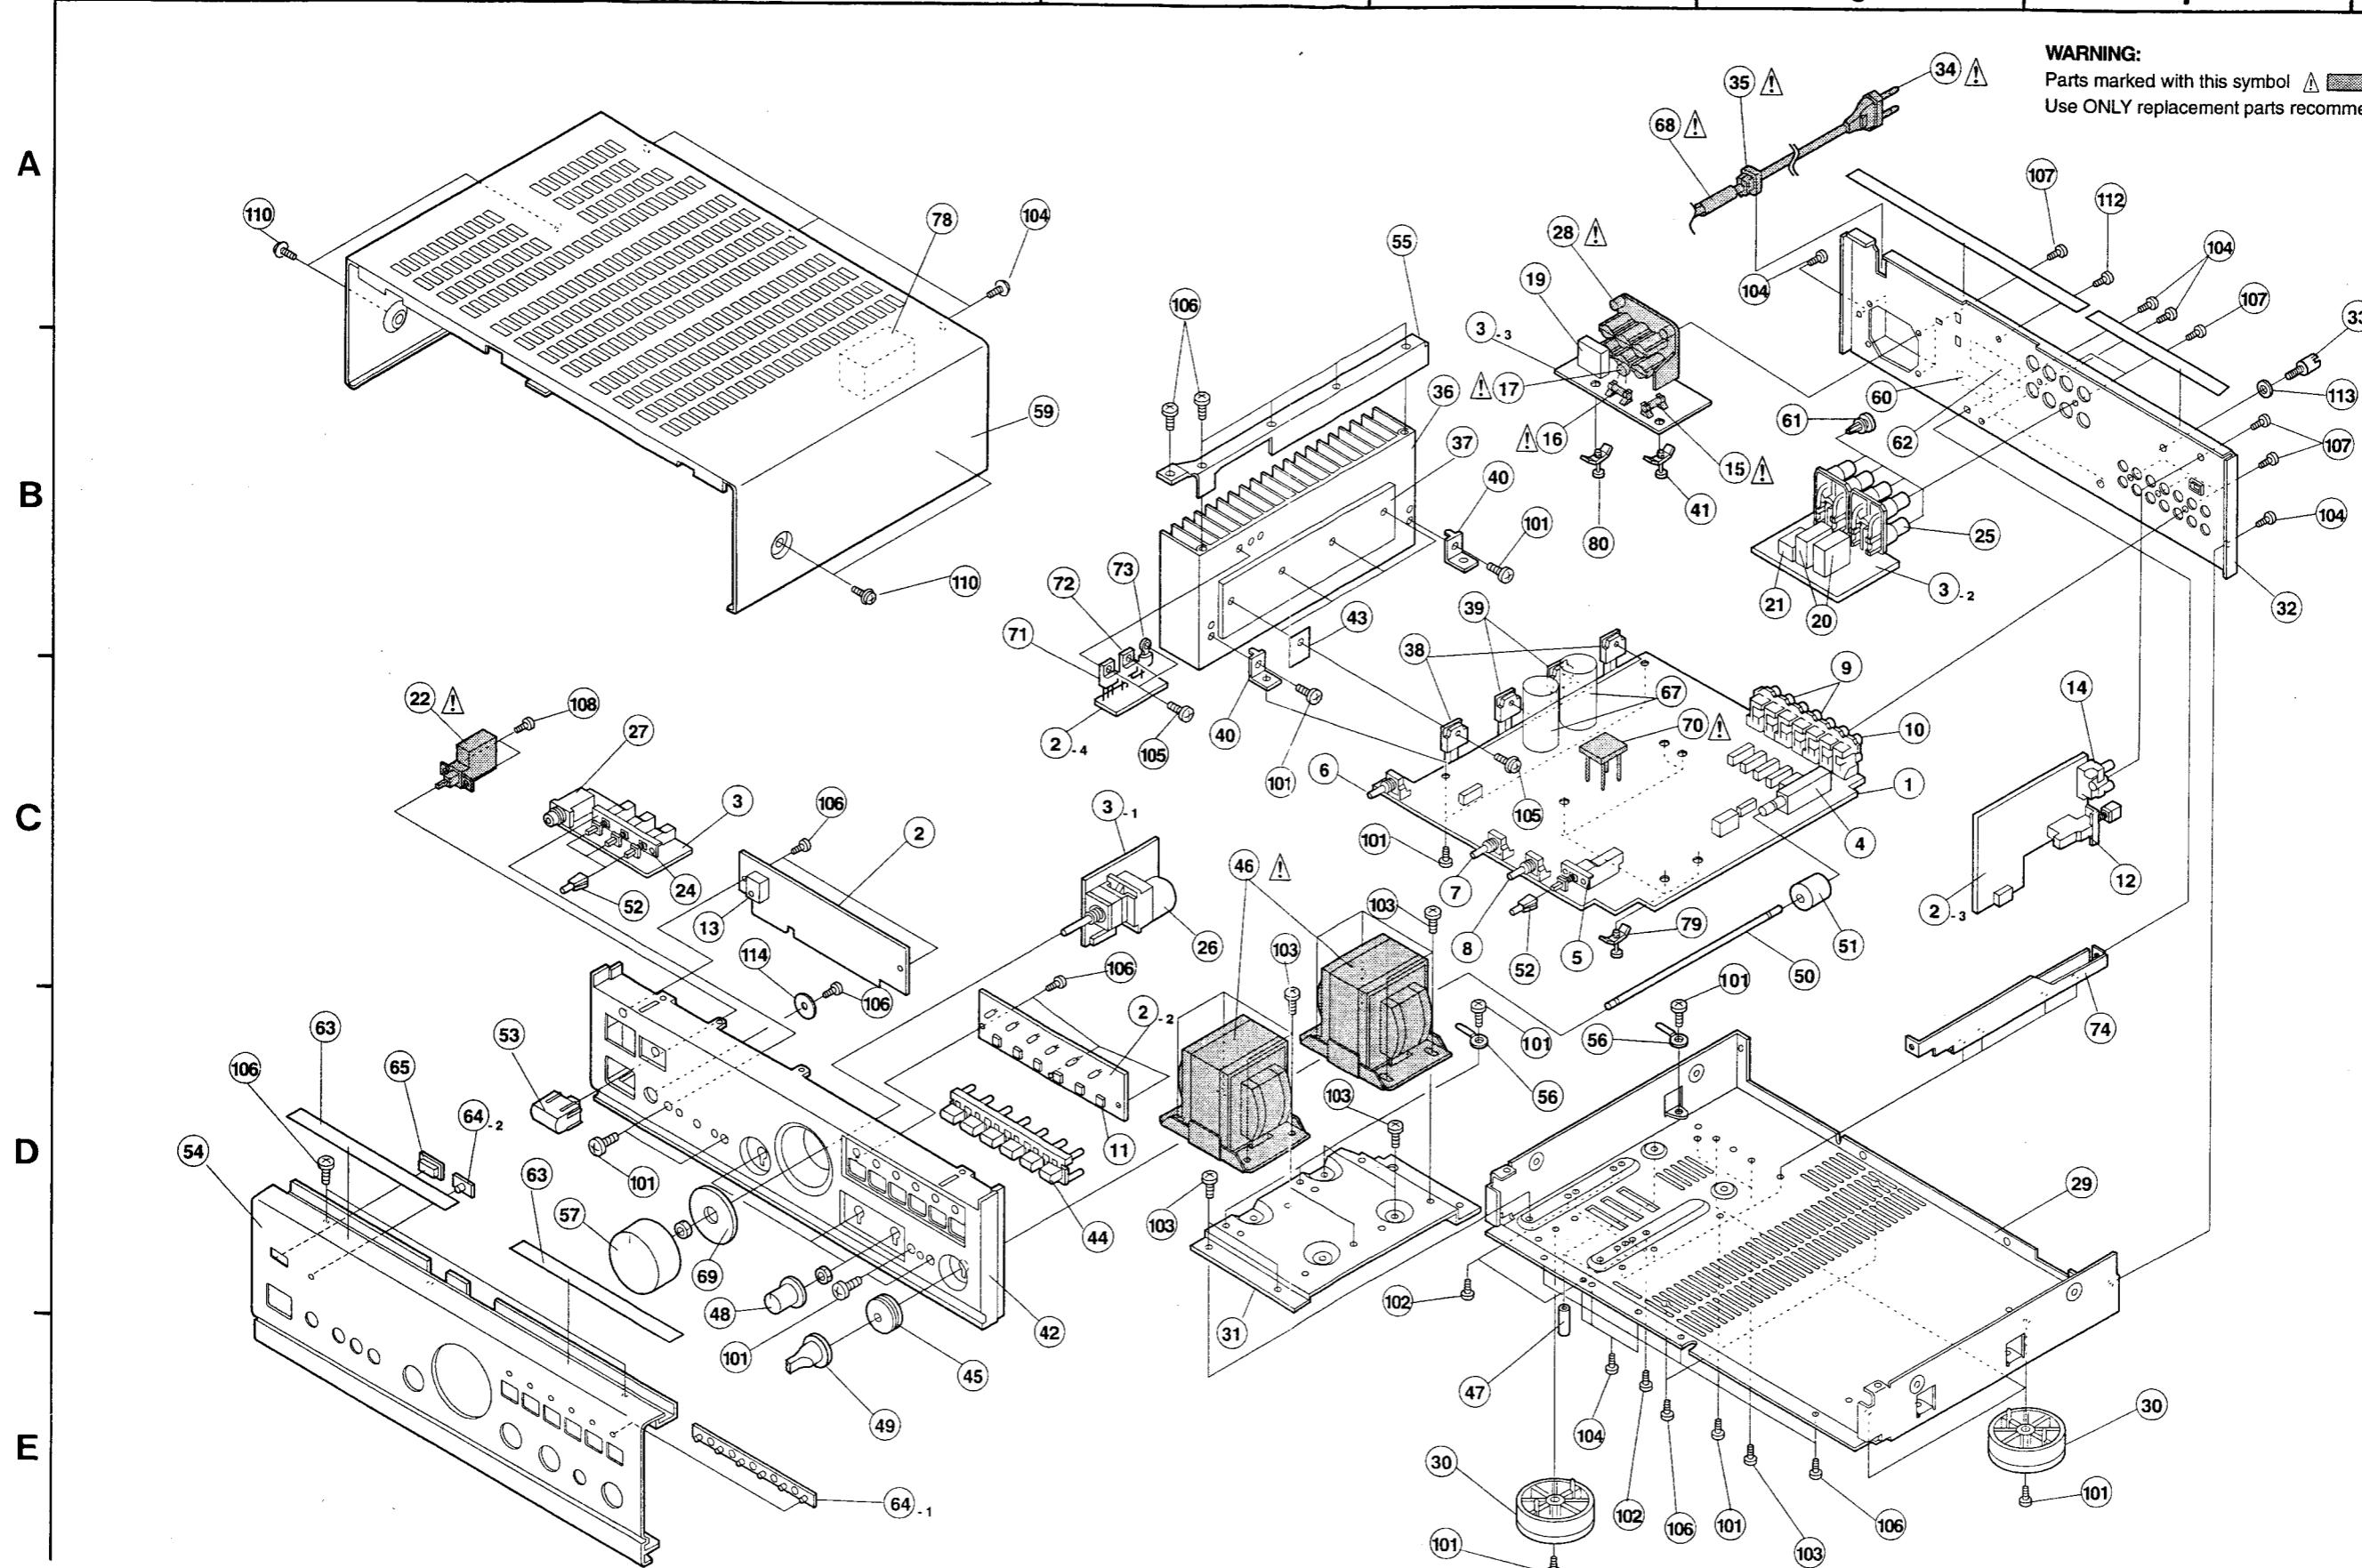

## PARTS LIST OF EXPLODED VIEW PMA-925R

| Ref. No. | Part No.     | Part Name                    | Remarks              | Q'ty | Ref. No. | Part No.     | Part Name                     | Remarks             | Q'ty |
|----------|--------------|------------------------------|----------------------|------|----------|--------------|-------------------------------|---------------------|------|
| ● 1      | 1U-2938 C    | Main unit Ass'y              |                      | 1s   | 47       | 462 0094 007 | Screw tube                    |                     | 2    |
| ● 2      | 1U-2939 A    | M-com unit Ass'y             |                      | 1s   | 48       | 112 0646 000 | :Knob(S)                      | Black model         | 3    |
| 2-1      | —            | M-com unit                   | (1)                  |      | 48       | 112 0646 013 | :Knob(S)                      | Gold model          | 3    |
| 2-2      | —            | LED unit                     | (1)                  |      | 49       | 112 0641 102 | :Fuji knob                    | Black model         | 1    |
| 2-3      | —            | Phono unit                   | (1)                  |      | 49       | 112 0641 115 | :Fuji knob                    | Gold model          | 1    |
| 2-4      | —            | Supply unit                  | (1)                  |      | 50       | 112 0784 001 | Volume knob joint             |                     | 1    |
| ● 3      | 1U-2940 C    | Volume unit Ass'y            |                      | 1s   | 51       | 112 0785 000 | Volume knob joint(B)          |                     | 1    |
| 3-1      | —            | Volume unit                  | (1)                  |      | 52       | 113 1745 107 | :Push button(Round)           | Black model         | 4    |
| 3-2      | —            | Speaker unit                 | (1)                  |      | 52       | 113 1745 110 | :Push button(Round)           | Gold model          | 4    |
| 3-3      | —            | AC outlet unit               | (1)                  |      | 53       | 113 1738 101 | :Power button                 | Black model         | 1    |
| 3-4      | —            | Speaker sel.unit             | (1)                  |      | 53       | 113 1738 114 | :Power button                 | Gold model          | 1    |
| 4        | 212 0336 005 | Rotary switch                | SW101 Rec out sel.   | 1    | ● 54     | 144 2509 207 | Front panel                   | Black model         | 1    |
| 5        | 212 1161 004 | 1P push switch               | SW202 S.Direct       | 1    | 54       | 144 2509 210 | Front panel                   | Gold model          | 1    |
| 6        | 211 0798 103 | Variable resistor 100kohm    | VR202 Balance        | 1    | ● 55     | 412 4136 005 | Radiator bracket              |                     | 1    |
| 7        | 211 0834 009 | Variable resistor 30kohm     | VR204 Bass           | 1    | 56       | 445 0048 003 | Cord holder L=76              |                     | 3    |
| 8        | 211 0834 012 | Variable resistor 10kohm     | VR203 Treble         | 1    | 57       | 112 0789 006 | Volume knob Ass'y             | Black model         | 1    |
| 9        | 204 8266 008 | 4P pin jack(S-GND)           | for TAPE             | 2    | 57       | 112 0789 019 | Volume knob Ass'y             | Gold model          | 1    |
| 10       | 204 8278 009 | 6P pin jack(S-GND)           | for INPUTS           | 1    | ★ 58     | 445 8004 007 | Wire clammer                  |                     | 18   |
| 11       | 212 4789 001 | Tact switch                  | SW801-806            | 6    | ● 59     | 102 0521 128 | :Top cover                    | Black model         | 1    |
| 12       | 212 1099 008 | 1P push switch               | SW901 MM/MC          | 1    | 59       | 102 0521 131 | :Top cover                    | Gold model          | 1    |
| 13       | 499 0150 008 | Remote sensor SBX1610-52     | IC105                | 1    | 60       | 513 2444 005 | Label (China)                 | Puton rear panel    | 1    |
| 14       | 204 8413 000 | 2P pin jack(C-GND)           | for PHONO            | 1    | 61       | 477 0096 007 | Push rivet                    |                     | 8    |
| ▲ 15     | 206 1015 032 | Fuse (2.5A)                  | F001                 | 1    | 62       | 513 2433 003 | Serial No. sheet              |                     | 1    |
| ▲ 16     | 206 1015 029 | Fuse (1AT)                   | F002                 | 1    | 63       | 122 0219 007 | Sheet                         | F/Panel,R/Panel     | 4    |
| ▲ 17     | 415 0299 000 | Capacitor cover              | for C002             | 1    | 64       | 143 0945 006 | :Lens                         |                     | 1    |
| 18       | —            | —                            |                      |      | 64-1     | —            | :Lens                         |                     | (1)  |
| ▲ 19     | 214 0142 004 | Relay(TV-5)                  | RL001                | 1    | 64-2     | —            | :Lens                         |                     | (1)  |
| 20       | 214 0129 001 | Relay(DH2TU)                 | RL601,602            | 2    | 65       | 143 9181 007 | :Remocon window               |                     | 1    |
| 21       | 214 0178 007 | Relay(MR62-12USRY)           | RL101-106,603        | 7    | ★ 66     | 254 4252 082 | Electrolytic cap. 2200μF/10V  | C309,310            | 2    |
| ▲ 22     | 212 1030 009 | Power switch(TV-5)           | SW001                | 1    | 67       | 254 6206 007 | Electrolytic cap. 12000μF/63V | C705,706            | 2    |
| 23       | —            | —                            |                      |      | ▲ 68     | 415 0305 017 | P.V.C. tube                   | for AC cord         | 1    |
| 24       | 212 1162 003 | 3P push switch               | SW501 Speaker ON-OFF | 1    | ● 69     | 412 4135 006 | Volume plate                  | Black model         | 1    |
| 25       | 205 0484 001 | 8P speaker terminal          | for speaker          | 1    | ● 69     | 412 4135 019 | Volume plate                  | Gold model          | 1    |
| 26       | 211 0869 003 | Variable resistor 30kohm     | VR201 Main volume    | 1    | ▲ 70     | 276 0424 005 | Diode 1D4B42                  | D-702 Bridge        | 1    |
| 27       | 204 8503 004 | :Head phone jack             | JA501                | 1    | 71       | 272 0129 007 | Transistor 2SB1566(E/F)       | TR702               | 1    |
| ▲ 28     | 203 3950 002 | 3P AC outlet                 | ACL-1                | 1    | 72       | 263 0793 002 | IC NJM7806FA(S)               | IC702 Regulator +6V | 1    |
| ● 29     | 411 1267 712 | *Main chassis                |                      | 1    | 73       | 279 0034 041 | PTH94M04BD222TS2F333          | PH701               | 1    |
| 30       | 104 0282 007 | :Foot Ass'y                  |                      | 4    | ● 74     | 412 4156 001 | Trans frame                   |                     | 1    |
| ● 31     | 441 1786 016 | Trans bracket                |                      | 1    | 75       | —            | —                             |                     |      |
| ● 32     | 105 1203 004 | Rear panel                   |                      | 1    | 76       | —            | —                             |                     |      |
| 33       | 205 0071 016 | Terminal Ass'y               |                      | 1    | 77       | 146 1651 000 | Side spacer                   |                     | 2    |
| ▲ 34     | 206 2063 009 | AC cord with plug            |                      | 1    | 78       | 461 0940 006 | :Rubber form                  |                     | 1    |
| ▲ 35     | 445 0056 008 | Cord bush                    |                      | 1    | 79       | 449 0138 025 | Card spacer (L=31)            |                     | 5    |
| ● 36     | 417 0503 132 | Power radiator               |                      | 1    | 80       | 449 0138 012 | Card spacer (L=25)            |                     | 1    |
| 37       | 417 0507 015 | :CU plate                    |                      | 1    | 81       | —            | —                             |                     |      |
| 38       | 273 0389 002 | Transistor 2SC3855(O/P/Y)(Z) | TR319,320            | 2    |          |              |                               |                     |      |
| 39       | 271 0240 006 | Transistor 2SA1491(O/P/Y)(Z) | TR321,322            | 2    |          |              |                               |                     |      |
| ● 40     | 412 4000 005 | :P.W.B.bracket (A)           |                      | 2    |          |              |                               |                     |      |
| 41       | 449 0138 009 | :Card spacer (L=12)          |                      | 1    |          |              |                               |                     |      |
| ● 42     | 146 1637 008 | Inner panel                  | Black model          | 1    |          |              |                               |                     |      |
| ● 42     | 146 1637 011 | Inner panel                  | Gold model           | 1    |          |              |                               |                     |      |
| 43       | —            | Mica sheet                   |                      | 4    |          |              |                               |                     |      |
| 44       | 113 1739 003 | :Functin button              | Black model          | 1    |          |              |                               |                     |      |
| 44       | 113 1739 016 | :Functin button              | Gold model           | 1    |          |              |                               |                     |      |
| 45       | —            | —                            |                      |      |          |              |                               |                     |      |
| ▲ 46     | 233 6207 009 | Power transformer            |                      | 2    |          |              |                               |                     |      |

## PACKING &amp; ACCESSORIES

| Ref. No.                    | Part No.     | Part Name              | Remarks     | Q'ty            |
|-----------------------------|--------------|------------------------|-------------|-----------------|
| <b>SCREWS &amp; WASHERS</b> |              |                        |             |                 |
| 101                         | 473 7002 018 | Screw 3x8              | CBTS(S)-Z   | 17              |
| 102                         | 473 7004 016 | Screw 4x6              | CBTS(S)-Z   | 8               |
| 103                         | 473 7004 029 | Screw 4x10             | CBTS(S)-Z   | 14              |
| 104                         | 473 7015 018 | Screw 3x8              | CBTS(S)-B   | 11              |
| 105                         | 473 8007 009 | Cup screw 3x12         |             | 7               |
| 106                         | 473 7508 017 | Screw 3x10             | CBTS(P)-B   | 18              |
| 107                         | 477 0064 107 | Fixing screw 3x10      |             | 10              |
| 108                         | 473 7508 004 | Screw 3x6              | CBTS(P)-B   | 2               |
| 109                         | 473 7500 044 | Screw 3x8              | CBTS(P)-B   | 2               |
| 110                         | 477 0263 005 | 3P swelling screw      | Black model | 4               |
| 110                         | 477 0263 018 | 3P swelling screw      | Gold model  | 4               |
| 111                         | —            | —                      |             |                 |
| 112                         | 473 7002 034 | Screw 3x6              | CBTS(S)-B   | 1               |
| 113                         | 477 0018 001 | Washer                 | P-87        | 1               |
| 114                         | 475 1175 002 | Washer                 |             | 1               |
| 115                         | —            | —                      |             |                 |
| 151                         | GEN 3580     | Envelope Sub. Ass'y    |             | 1s              |
| 151-1                       | 505 8006 019 | Envelope               |             | (1)             |
| 151-2                       | 511 2899 007 | Operating instructions |             | (1)             |
| 151-3                       | 399 0277 004 | Remoto control unit    |             | RC-176          |
| 151-4                       | —            | Batteries              |             | R6P/AA/SUM-3    |
| 151-5                       | 515 0671 326 | DENON service network  |             | (1)             |
| 152                         | 505 8092 010 | Laminate envelope      |             | 1               |
| 153                         | 503 1222 001 | Cushion                |             | 2               |
| 154                         | 502 0892 002 | :Support pad           |             | 2               |
| 155                         | 502 1227 006 | :Sub cushion           |             | 1               |
| 156                         | 501 1927 009 | Carton case            |             | 1               |
| 157                         | 513 2446 003 | China label(E)         |             | 1               |
| 158                         | 513 2447 002 | China label(F)         |             | 1               |
| 159                         | 513 9111 001 | Color label (Gold)     |             | Gold model only |

## NOTE FOR PARTS LIST

- Part indicated with the mark "●" are not always in stock and possibly to take a long period of time for supplying, or in some case supplying of part may be refused.
- When ordering of part, clearly indicate "1" and "I" (i) to avoid mis-supplying.
- Ordering part without stating its part number can not be supplied.
- Part indicated with the mark "★" is not illustrated in the exploded view.


## WARNING:

Parts marked with this symbol ▲ have critical characteristics.  
Use ONLY replacement parts recommended by the manufacturer.

## **EXPLODED VIEW OF CHASSIS AND CABINET : PMA-725**

A horizontal number line starting at 1 and ending at 8. There are 7 major tick marks labeled 1, 2, 3, 4, 5, 6, 7, and 8. Between each labeled tick mark, there are 3 smaller unlabeled tick marks, dividing each unit into 4 equal segments of 0.25 units each.

**WARNING:**  
Parts marked with this symbol  have critical characteristics.  
Use ONLY replacement parts recommended by the manufacturer.

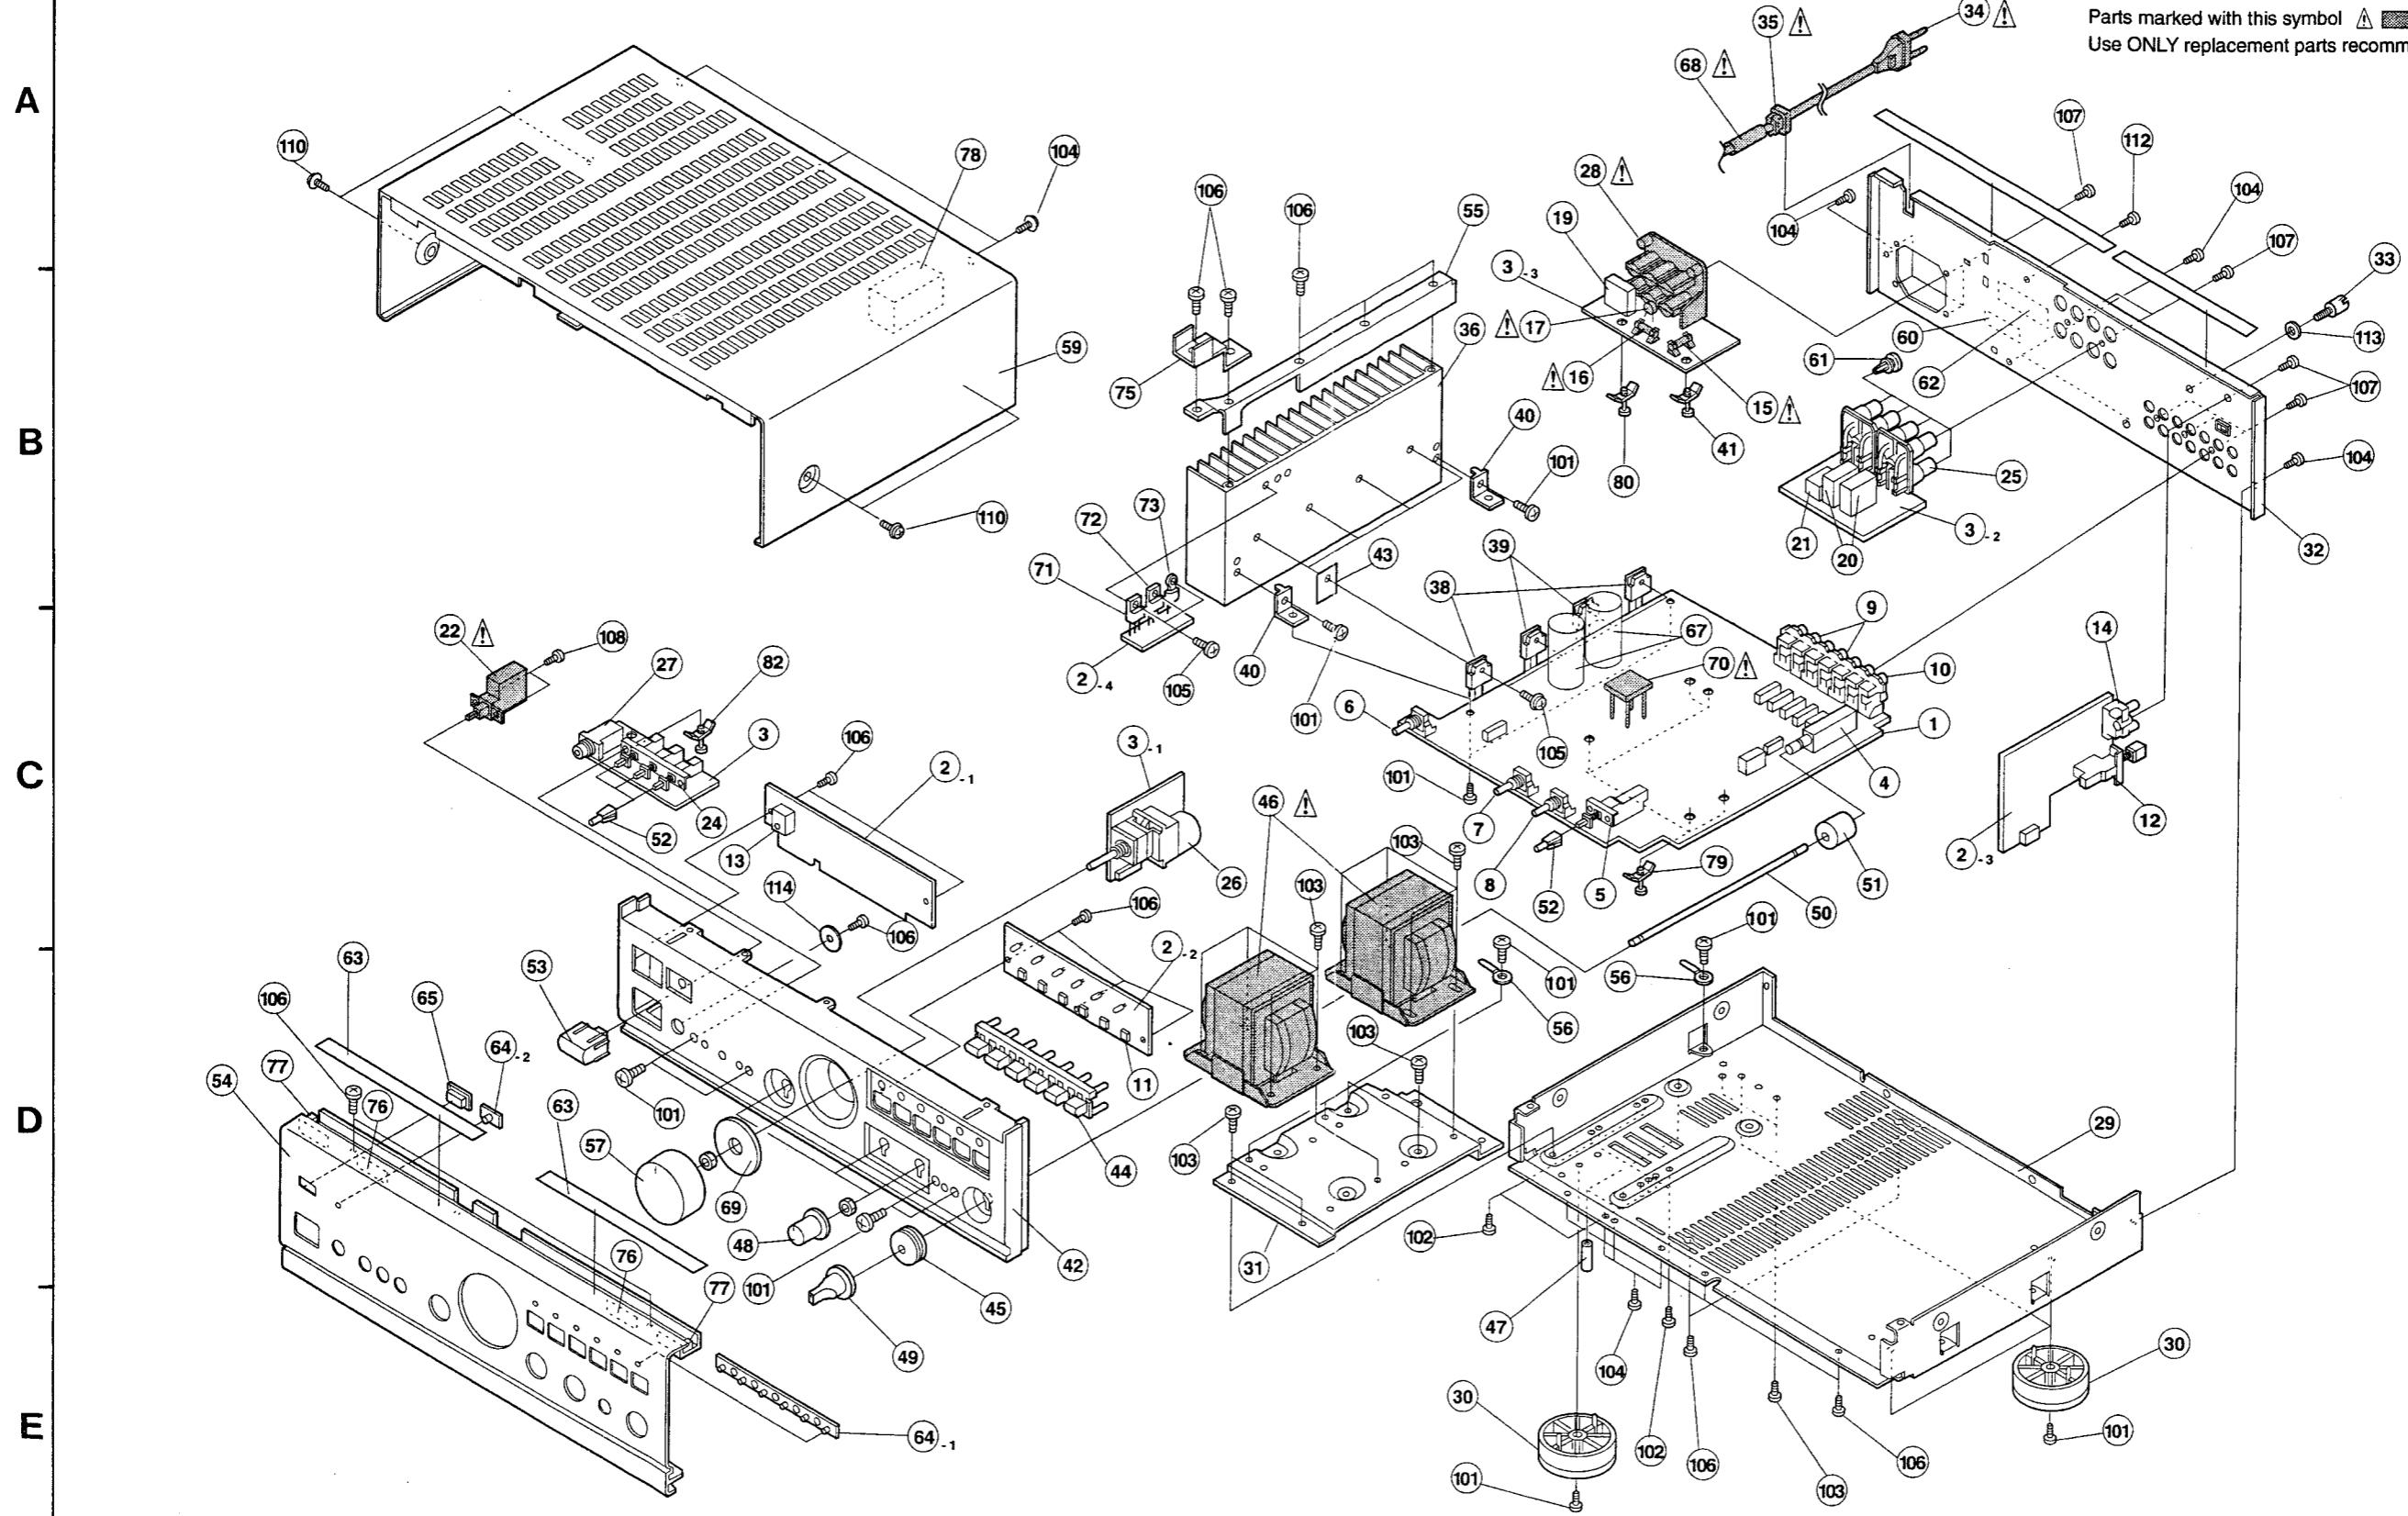

## PARTS LIST OF EXPLODED VIEW PMA-725R

| Ref. No. | Part No.     | Part Name                 | Remarks           | Q'ty              | Ref. No. | Part No.     | Part Name                     | Remarks            | Q'ty |
|----------|--------------|---------------------------|-------------------|-------------------|----------|--------------|-------------------------------|--------------------|------|
| ① 1      | 1U-2938 A    | Main unit Ass'y           | Europe model      | 1s                | ④ 40     | 412 4000 005 | :P.W.B.bracket (A)            |                    | 2    |
| ① 1      | 1U-2938 B    | Main unit Ass'y           | U.K. model        | 1s                | ④ 41     | —            | —                             |                    |      |
| ② 2      | 1U-2939 A    | M-com unit Ass'y          |                   | 1s                | ④ 42     | 146 1632 003 | Inner panel                   | Black model        | 1    |
| ② 2-1    | —            | M-com unit                |                   | (1)               | ④ 42     | 146 1632 016 | Inner panel                   | Gold model         | 1    |
| ② 2-2    | —            | LED unit                  |                   | (1)               | 43       | —            | Mica sheet                    |                    | 4    |
| ② 2-3    | —            | Phono unit                |                   | (1)               | 44       | 113 1739 003 | :Functin button               | Black model        | 1    |
| ② 2-4    | —            | Supply unit               |                   | (1)               | 44       | 113 1739 016 | :Functin button               | Gold model         | 1    |
| ③ 3      | 1U-2940 A    | Volume unit Ass'y         | Europe model      | 1s                | 45       | 124 0032 057 | Felt sheet                    |                    | 1    |
| ③ 3      | 1U-2940 B    | Volume unit Ass'y         | U.K. model        | 1s                | ⑥ 46     | 233 6203 003 | Power transformer             |                    | 2    |
| ③ 3-1    | —            | Volume unit               |                   | (1)               | 47       | 462 0094 007 | Screw tube                    |                    | 2    |
| ③ 3-2    | —            | Speaker unit              |                   | (1)               | 48       | 112 0646 000 | :Knob(S)                      | Black model        | 3    |
| ③ 3-3    | —            | AC outlet unit            | Europe model only | (1)               | 48       | 112 0646 013 | :Knob(S)                      | Gold model         | 3    |
| ③ 3-4    | —            | Speaker sel.unit          |                   | (1)               | 49       | 112 0641 102 | :Fuji knob                    | Black model        | 1    |
| ③ 3-5    | —            | Power switch unit         | U.K. model only   | (1)               | 49       | 112 0641 115 | :Fuji knob                    | Gold model         | 1    |
| ③ 3-6    | —            | AC unit                   | U.K. model only   | (1)               | 50       | 112 0784 001 | Volume knob joint             |                    | 1    |
| 4        | 212 0336 005 | Rotary switch             | SW101 Recout sel. | 1                 | 51       | 112 0785 000 | Volume knob joint (B)         |                    | 1    |
| 5        | 212 1161 004 | 1P push switch            | SW202 S.Direct    | 1                 | 52       | 113 1745 107 | :Push button(Round)           | Black model        | 4    |
| 6        | 211 0798 103 | Variable resistor 100kohm | VR202 Balance     | 1                 | 52       | 113 1745 110 | :Push button(Round)           | Gold model         | 4    |
| 7        | 211 0834 009 | Variable resistor 30kohm  | VR204 Bass        | 1                 | 53       | 113 1738 101 | :Power button                 | Black model        | 1    |
| 8        | 211 0834 012 | Variable resistor 10kohm  | VR203 Treble      | 1                 | 53       | 113 1738 114 | :Power button                 | Gold model         | 1    |
| 9        | 204 8266 008 | 4P pin jack(S-GND)        | for TAPE          | 2                 | ④ 54     | 144 2507 306 | Front panel                   | Black model        | 1    |
| 10       | 204 8278 009 | 6P pin jack(S-GND)        | for INPUTS        | 1                 | ④ 54     | 144 2507 319 | Front panel                   | Gold model         | 1    |
| 11       | 212 4789 001 | Tact switch               | SW801-806         | 6                 | ④ 55     | 412 4128 000 | Radiator bracket              |                    | 1    |
| 12       | 212 1099 008 | 1P push switch            | SW901 MM/MC       | 1                 | 56       | 445 0048 003 | Cord holder L=76              |                    | 3    |
| 13       | 499 0150 008 | Remote sensor SBX1610-52  | IC105             | 1                 | 57       | 112 0744 009 | Volume knob Assy              | Black model        | 1    |
| 14       | 204 8413 000 | 2P pin jack(C-GND)        | for PHONO         | 1                 | 57       | 112 0744 012 | Volume knob Assy              | Gold model         | 1    |
| ⑤ 15     | 206 1015 061 | Fuse (2 A)                | F001              | 1                 | ★ 58     | 445 8004 007 | Wire clamer                   |                    | 18   |
| ⑤ 16     | 206 1015 029 | Fuse (1AT)                | F002              | 1                 | ④ 59     | 102 0543 119 | ::Top cover                   | Black model        | 1    |
| ⑤ 17     | 415 0299 000 | Capacitor cover           |                   | Europe model only | 59       | 102 0543 122 | ::Top cover                   | Gold model         | 1    |
| 18       | —            | —                         | for C002          | 1                 | 60       | 513 2444 005 | Label (China)                 | Puton rear panel   | 1    |
| ⑤ 19     | 214 0142 004 | Relay(TV-5)               | RL001             | 1                 | 61       | 477 0096 007 | Push rivet                    |                    | 8    |
| 20       | 214 0129 001 | Relay(DH2TU)              | RL601,602         | 2                 | 62       | 513 2433 003 | Serial No. sheet              | F/Panel,R/Panel    | 1    |
| 21       | 214 0178 007 | Relay(MR62-12USRY)        | RL101-106,603     | 7                 | 63       | 122 0219 007 | Sheet                         |                    | 4    |
| ⑤ 22     | 212 1030 009 | Power switch(TV-5)        | SW001             | 1                 | 64       | 143 0945 006 | :Lens                         |                    | 1    |
| 23       | —            | —                         |                   |                   | 64-1     | —            | :Lens                         |                    | (1)  |
| 24       | 212 1162 003 | 3P push switch            | SW501 Speaker     | 1                 | 64-2     | —            | :Lens                         |                    | (1)  |
| 25       | 205 0484 001 | 8P speaker terminal       | ON-OFF            |                   | 65       | 143 9181 007 | :Remocon window               |                    | 1    |
| 26       | 211 0869 003 | Variable resistor 30kohm  | for speaker       | 1                 | ★ 66     | 254 4252 082 | Electrolytic cap. 2200μF/10V  | C309,310           | 2    |
| 27       | 204 8503 004 | :Head phone jack          | VR201 Main volume | 1                 | 67       | 254 6205 008 | Electrolytic cap. 10000μF/51V | C705,706           | 2    |
| ⑤ 28     | 203 3950 002 | 3P AC outlet              | AOL-1             | 1                 | ④ 68     | 415 0305 017 | P.V.C. tube                   | for AC cord        | 1    |
| ⑤ 29     | 411 1267 712 | *Main chassis             |                   | Europe model only | 69       | 412 4135 006 | Volume plate                  | Black model        | 1    |
| 30       | 104 0282 007 | *Foot Ass'y               |                   |                   | 69       | 412 4135 019 | Volume plate                  | Gold model         | 1    |
| ⑤ 31     | 441 1786 003 | Trans bracket             |                   |                   | ④ 70     | 276 0338 007 | Diode S4VB20F                 | D702 Bridge        | 1    |
| ⑤ 32     | 105 1198 009 | Rear panel                | Europe model      | 1                 | 71       | 272 0129 007 | Transistor 2SB1566 (E/F)      | TR702              | 1    |
| ⑤ 32     | 105 1198 012 | Rear panel                | U.K. model        | 1                 | 72       | 263 0793 002 | IC NJM7806FA (S)              | IC702 Regulator+6V | 1    |
| 33       | 205 0071 016 | Terminal Ass'y            |                   |                   | 73       | 279 0034 041 | PTH9M04BD222TS2F333           | PH701              | 1    |
| ⑤ 34     | 206 2063 009 | AC cord with plug         | Europe model      | 1                 | 74       | —            | —                             |                    |      |
| ⑤ 34     | 206 2131 009 | AC cord with plug         | U.K. model        | 1                 | 75       | 412 4159 008 | :Support bracket              |                    | 1    |
| ⑤ 35     | 445 0056 008 | Cord bush                 |                   | 1                 | 76       | 461 0942 004 | Spacer (T=1)                  |                    | 2    |
| ⑤ 36     | 417 0503 129 | Power radiator            |                   |                   | 77       | 146 1648 000 | Side spacer                   |                    | 2    |
| 37       | —            | —                         |                   |                   | 78       | 461 0941 005 | :Rubber form                  |                    | 1    |
| 38       | 274 0173 004 | Transistor 2SD2390(O/P/Y) | TR319,320         | 2                 | 79       | 449 0138 012 | :Card spacer (L=25)           |                    | 5    |
| 39       | 272 0137 002 | Transistor 2SB1560(O/P/Y) | TR321,322         | 2                 | 80       | 449 0138 012 | :Card spacer (L=25)           |                    | 1    |
|          |              |                           |                   |                   | 81       | 449 0138 012 | :Card spacer (L=25)           |                    | 1    |
|          |              |                           |                   |                   | 82       | 449 0138 025 | Card spacer (L=31)            |                    | 1    |
|          |              |                           |                   |                   | ★ 83     | 513 2001 008 | Insulate mark sheet           | U.K. model only    | 1    |
|          |              |                           |                   |                   | ④ 84     | 202 0013 101 | Fuse holder                   | U.K. model only    | 1    |

## PACKING &amp; ACCESSORIES

| Ref. No. | Part No.     | Part Name          | Remarks         | Q'ty | Ref. No. | Part No.     | Part Name              | Remarks | Q'ty            |
|----------|--------------|--------------------|-----------------|------|----------|--------------|------------------------|---------|-----------------|
| 85       | 415 0785 006 | Insulating plate   | U.K. model only | 1    | ① 151    | GEN 3580     | Envelope Sub. Ass'y    |         | 1s              |
| 86       | 513 1390 008 | Fuse label         | U.K. model only | 1    | ① 151-1  | 505 8006 019 | Envelope               |         | (1)             |
| ④ 87     | 203 0150 009 | Wite connector     | U.K. model only | 2    | ① 151-2  | 511 2899 007 | Operating instructions |         | (1)             |
| 88       | 415 0360 052 | P.V.C. Tubing (19) | U.K. model onoy | 1    | ① 151-3  | 399 0277 004 | Remoto control unit    |         | RC-176          |
|          |              |                    |                 |      | ① 151-4  | —            | Batteries              |         | R6P/AA/SUM-3    |
|          |              |                    |                 |      | ① 151-5  | 515 0671 326 | DENON service network  |         | (1)             |
|          |              |                    |                 |      | 152      | 505 8092 010 | Laminate envelope      |         | 1               |
|          |              |                    |                 |      | ① 153    | 503 1218 002 | Cushion                |         | 2               |
|          |              |                    |                 |      | ① 154    | 502 0893 001 | :L supporter           |         | 2               |
|          |              |                    |                 |      | ① 155    | 502 0894 000 | :Pad (T=10)            |         | 1               |
|          |              |                    |                 |      | ① 156    | 501 1922 004 | Carton case            |         | 1               |
|          |              |                    |                 |      | ① 157    | 513 2446 003 | China label(E)         |         | 1               |
|          |              |                    |                 |      | ① 158    | 513 2447 002 | China label(F)         |         | 1               |
|          |              |                    |                 |      | ① 159    | 513 9111 001 | Color label (Gold)     |         | Gold model only |
|          |              |                    |                 |      | ① 160    | 504 0176 009 | AC protect sheet       |         | U.K. model only |
|          |              |                    |                 |      | ① 161    | 503 1228 008 | Support pad            |         | U.K. model only |

## NOTE FOR PARTS LIST


- Part indicated with the mark "◎" are not always in stock and possibly to take a long period of time for supplying, or in some case supplying of part may be refused.
- When ordering of part, clearly indicate "1" and "I" (i) to avoid mis-supplying.
- Ordering part without stating its part number can not be supplied.
- Part indicated with the mark "★" is not illustrated in the exploded view.

## WARNING:

Parts marked with this symbol ▲ have critical characteristics.  
Use ONLY replacement parts recommended by the manufacturer.

## WIRING DIAGRAM

1 2 3 4 5 6 7 8

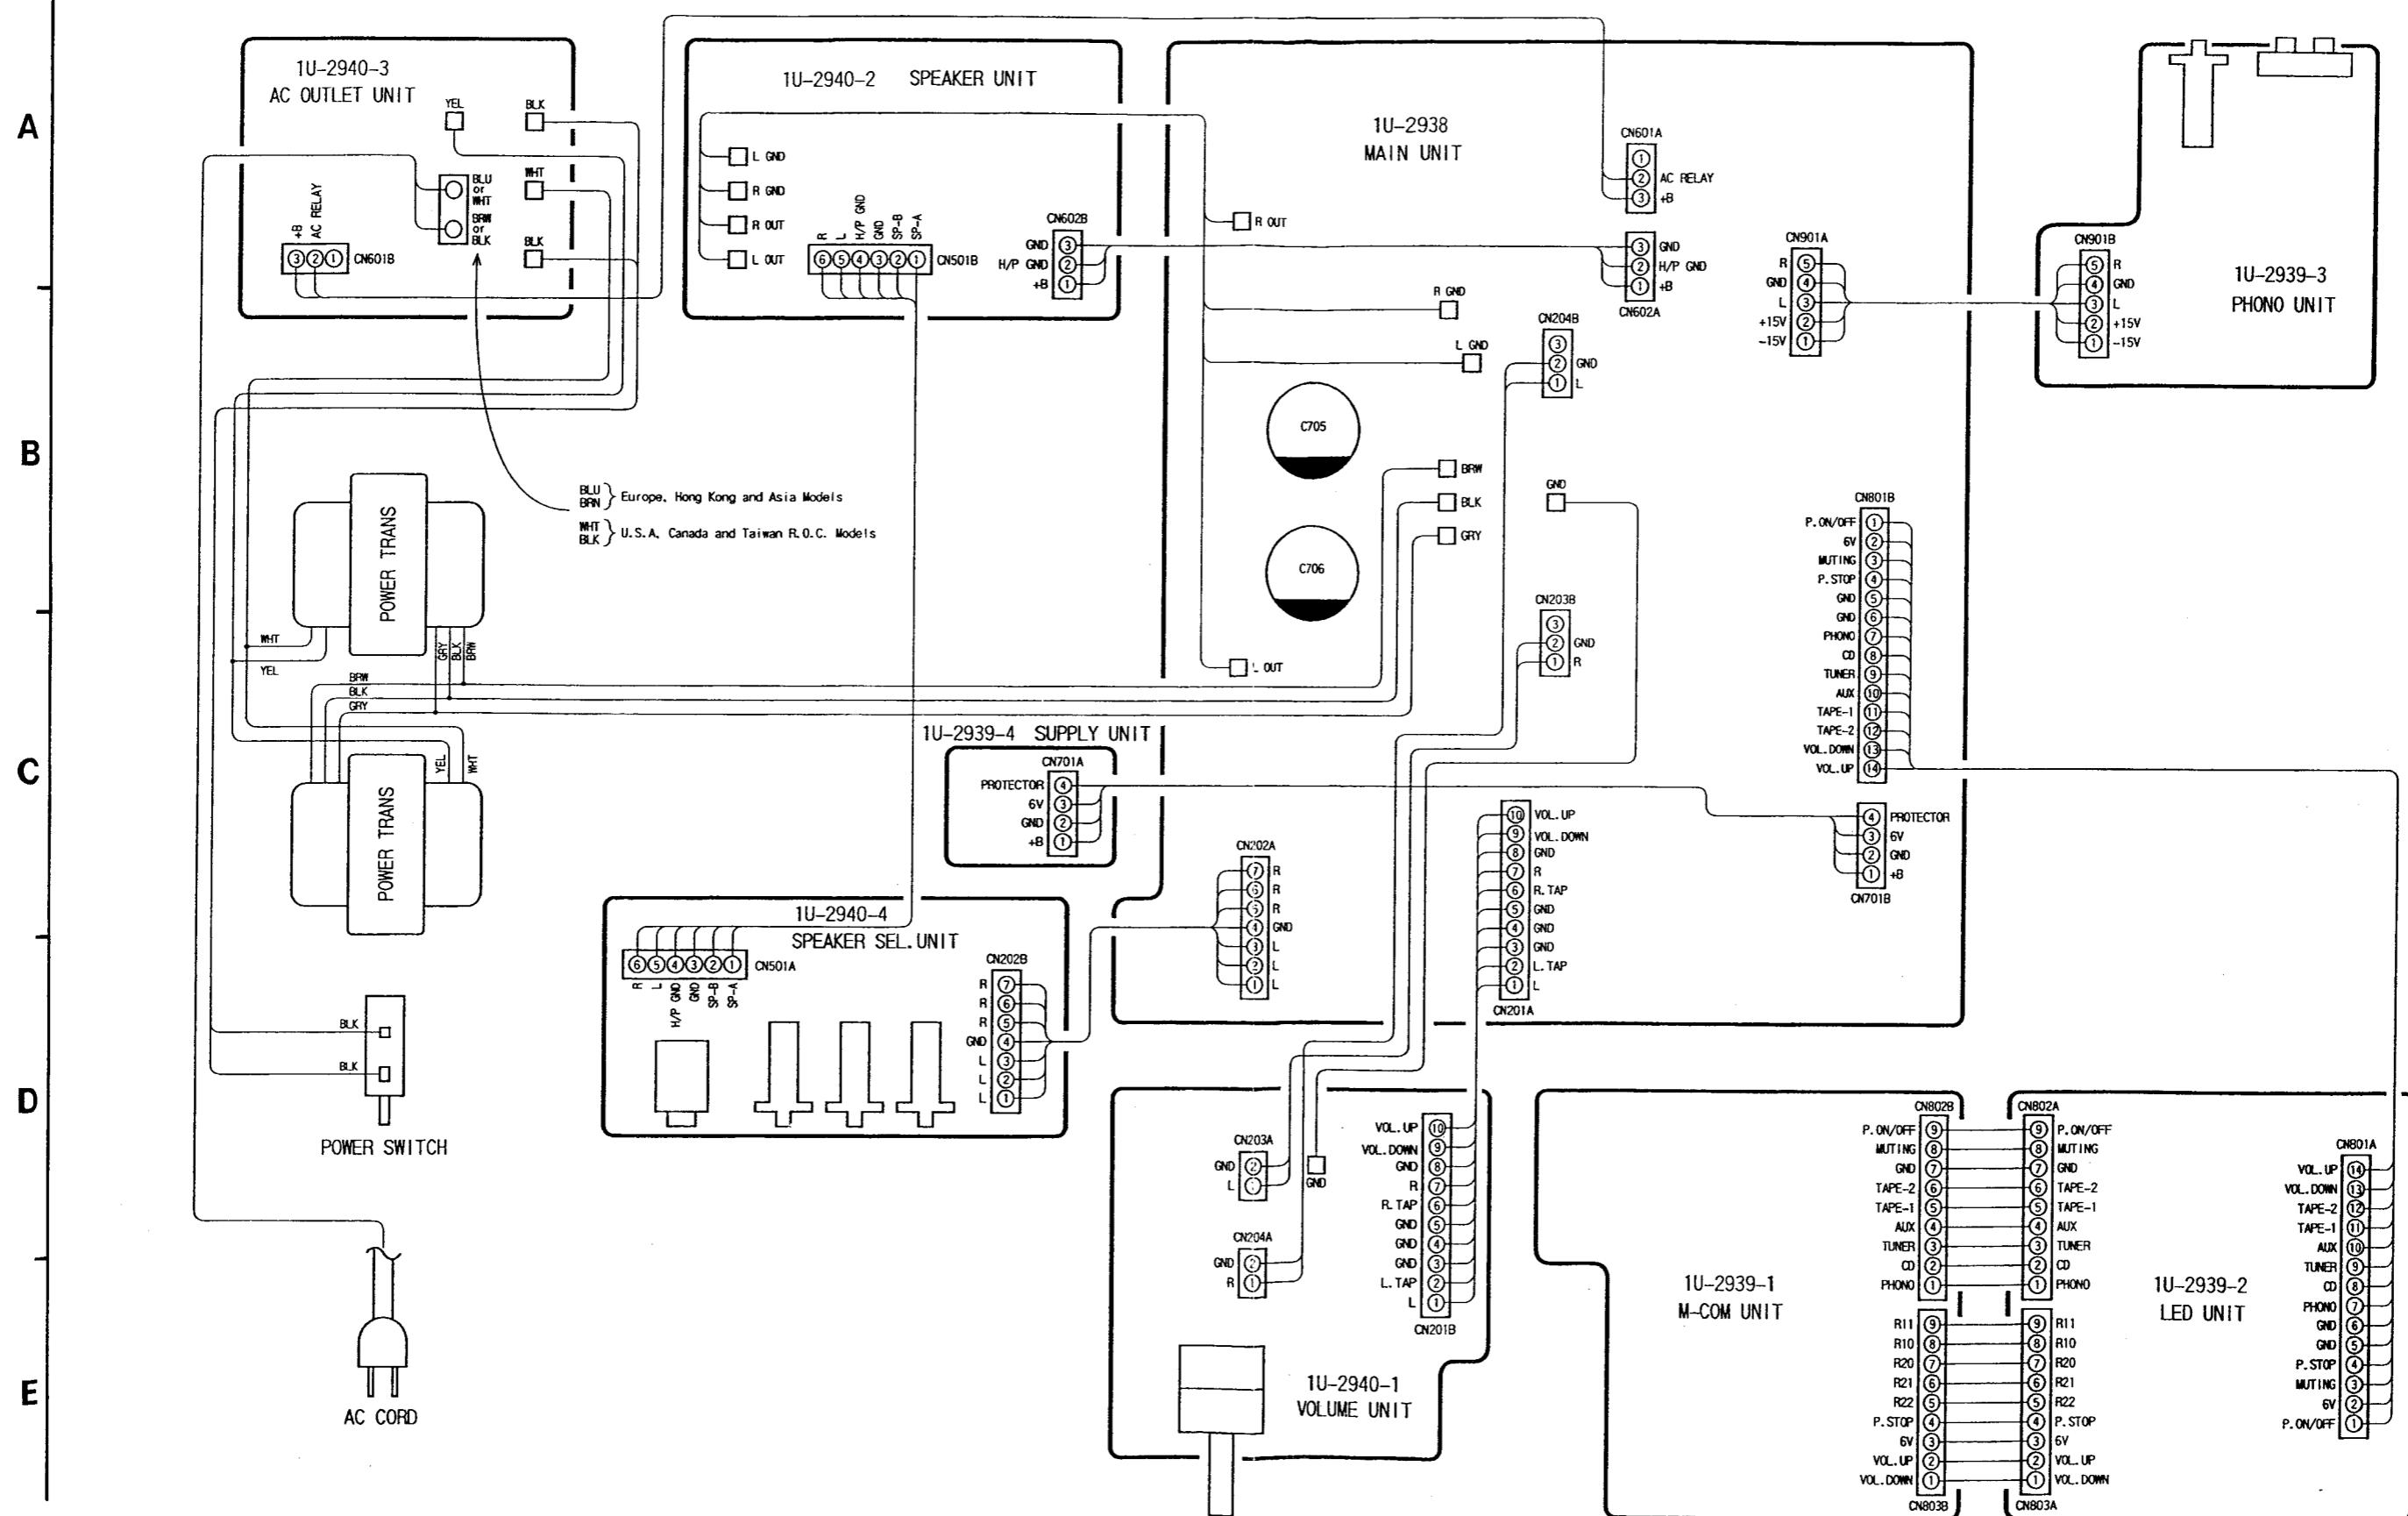

SCHEMATIC DIAGRAM (1/4) : PMA-925R

1


2

3

4

1

6

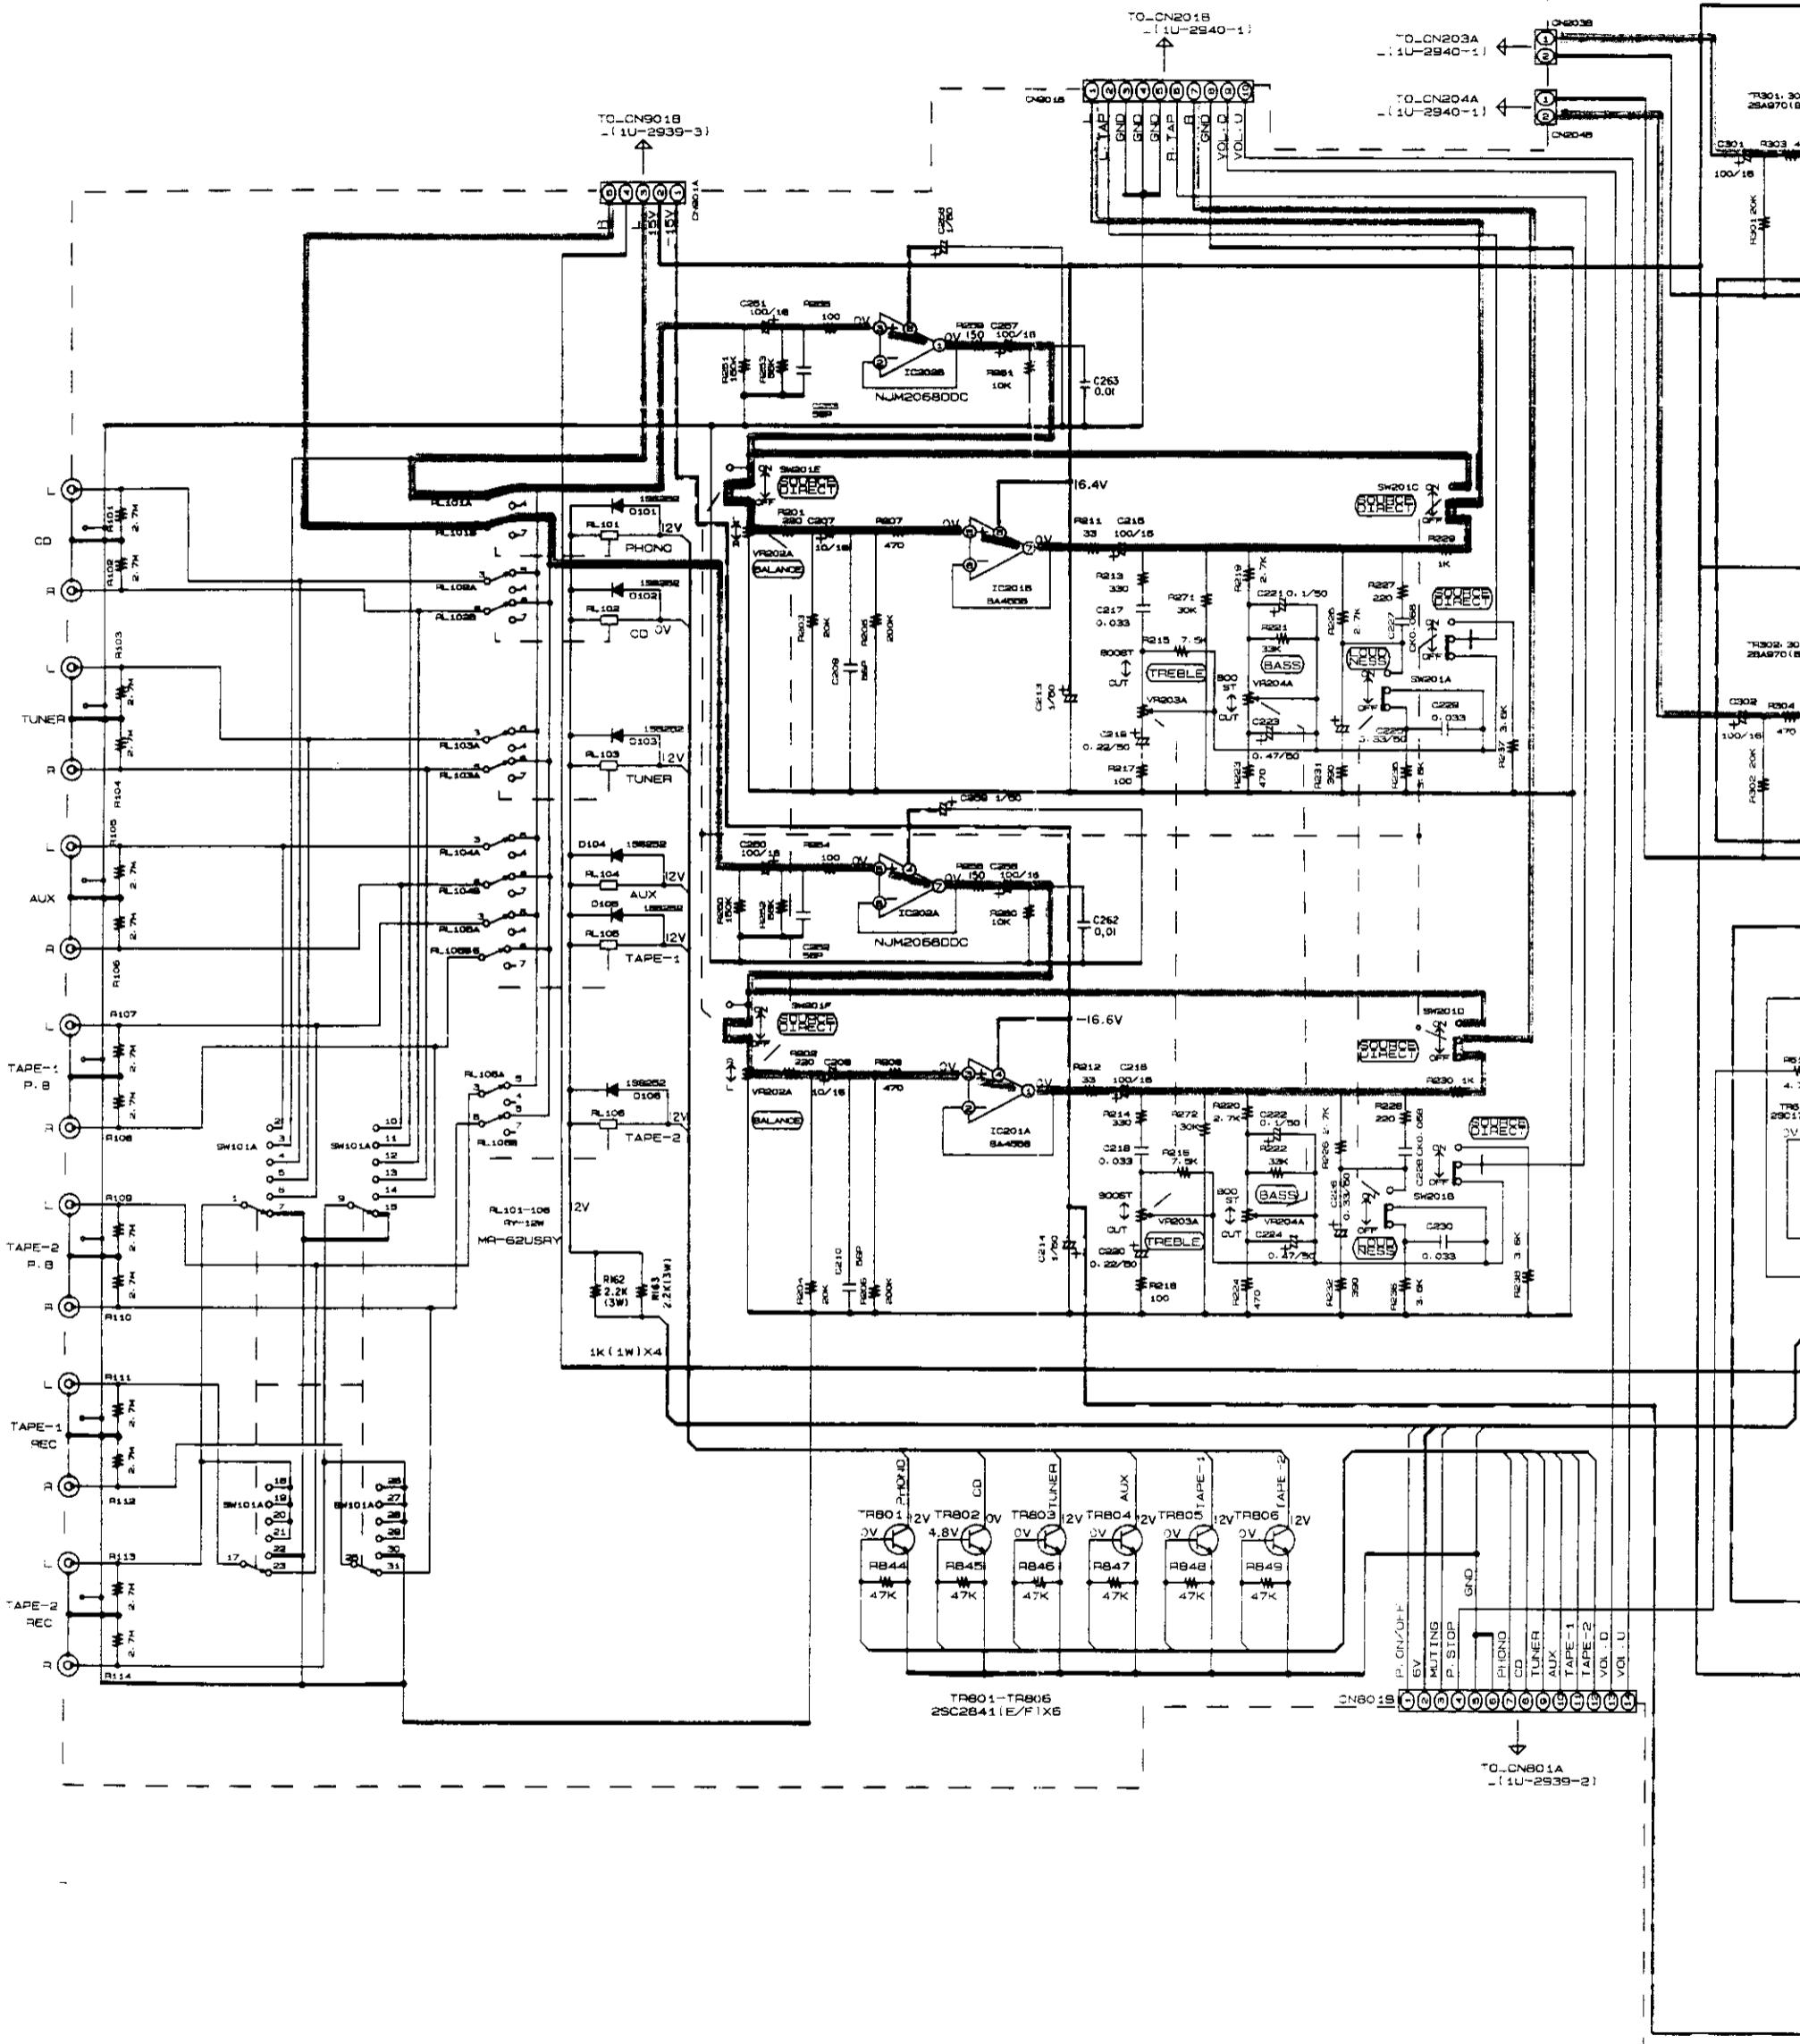

6

7


8

9

10

11

1U-2938

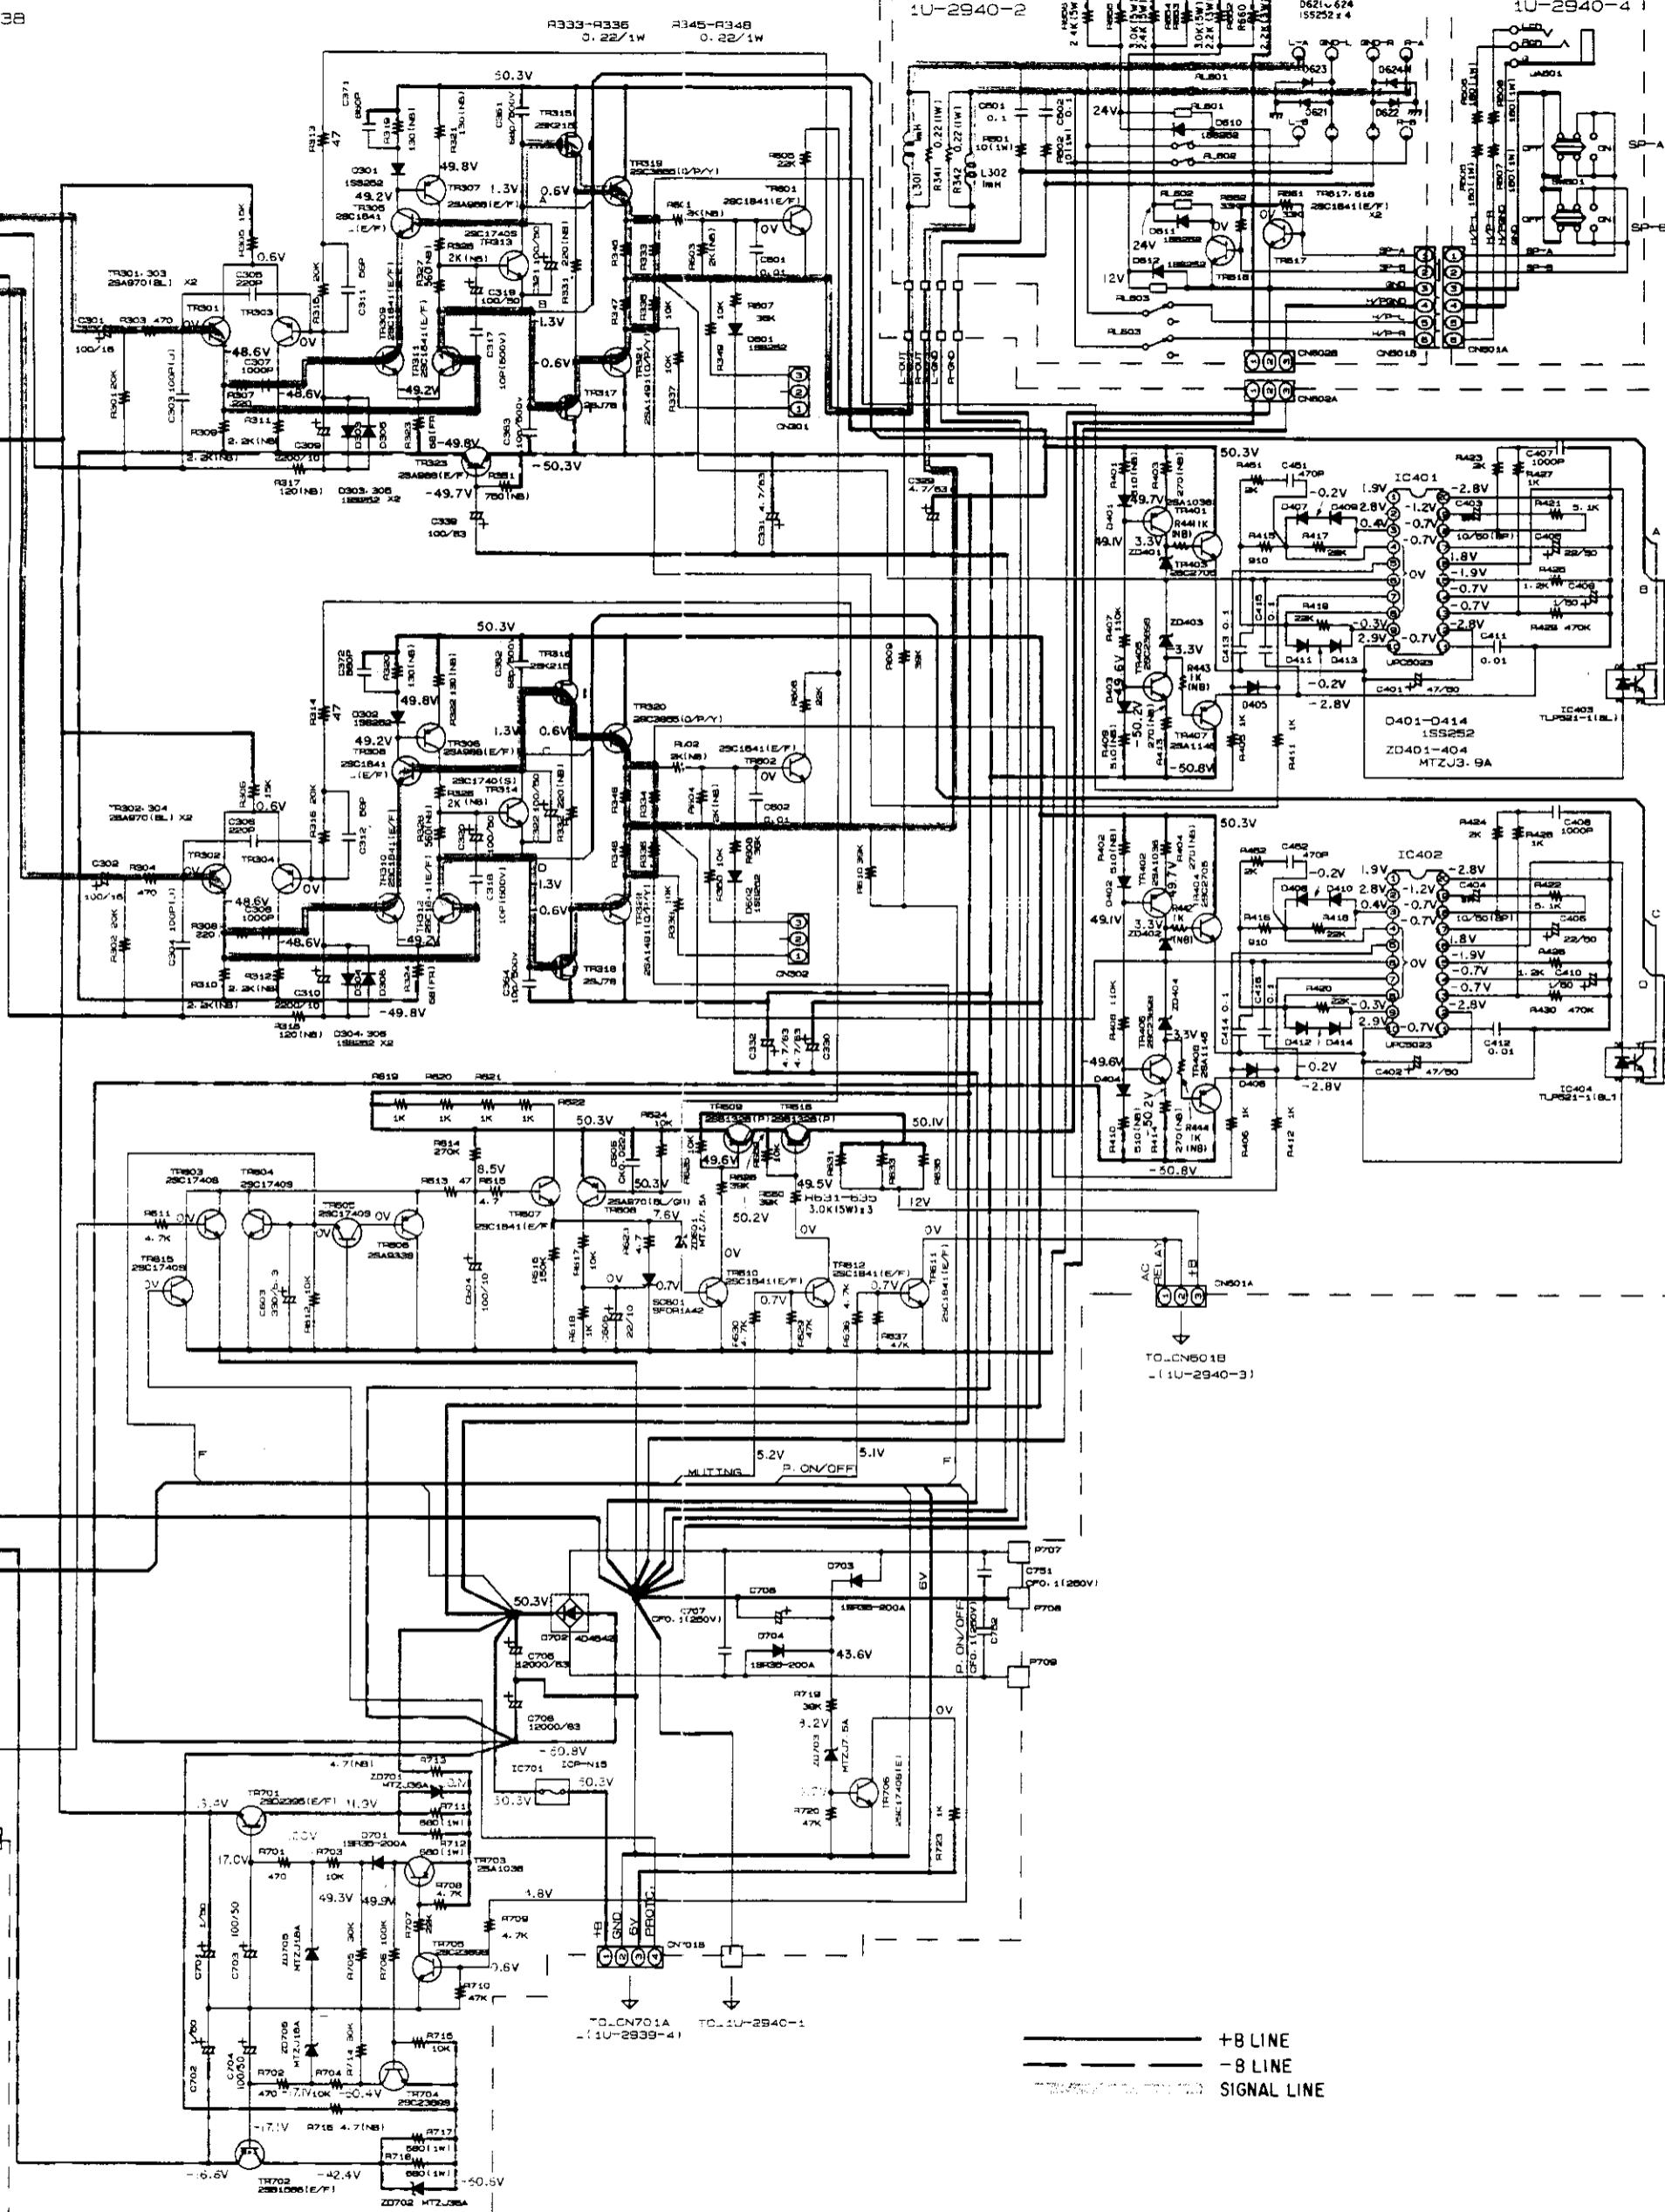

NOTES

**NOTES**  
ALL RESISTANCE VALUES IN OHM. K=1,000 OHM. M=1,000,000 OHM  
ALL CAPACITANCE VALUES IN MICRO FARAD. P=MICRO-MICRO FARAD  
EACH VOLTAGE AND CURRENT ARE MEASURED AT NO SIGNAL INPUT  
CONDITION.  
CIRCUIT AND PARTS ARE SUBJECT TO CHANGE WITHOUT PRIOR  
NOTICE.

**WARNING:**

**WARNING:** Parts marked with this symbol  have critical characteristics. Use ONLY replacement parts recommended by the manufacturer.

**CAUTION:**

Before returning the unit to the customer, make sure you make either (1) a leakage current check or (2) a line to chassis resistance check. If the leakage current exceeds 0.5 millamps or if the resistance from chassis to either side of the power cord is less than 240 kilohms, the unit is defective.

**WARNING:**

## **SCHEMATIC DIAGRAM (2/4) : PMA-925R**

1                    2                    3                    4                    5                    6

A

B

c


D

E




5

6

H

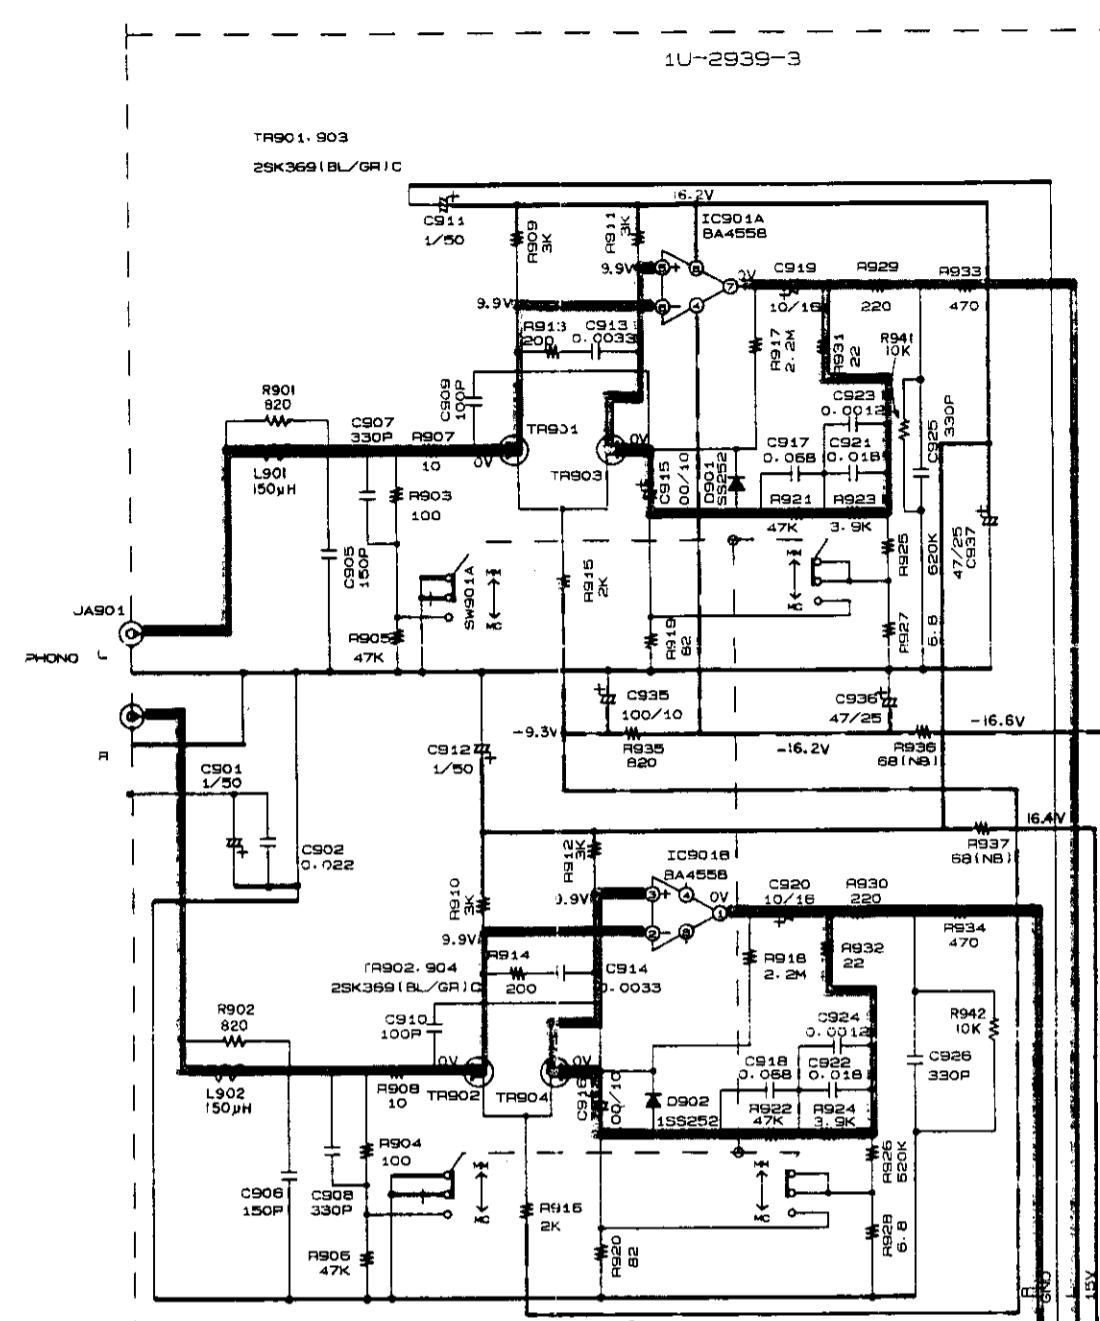

TR-CN901A (1U-2938)

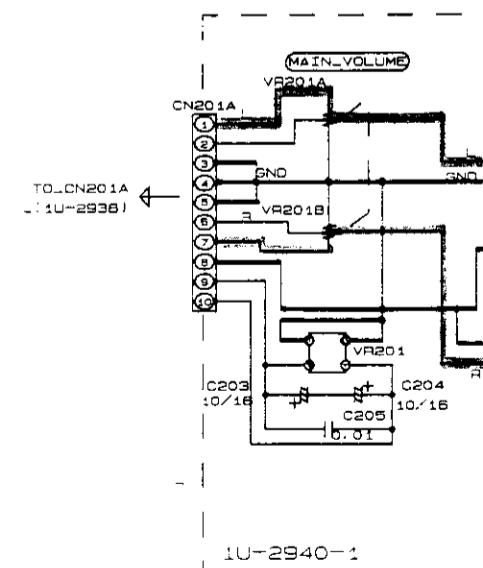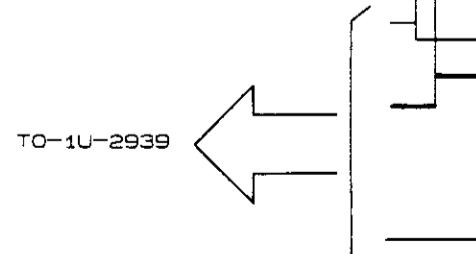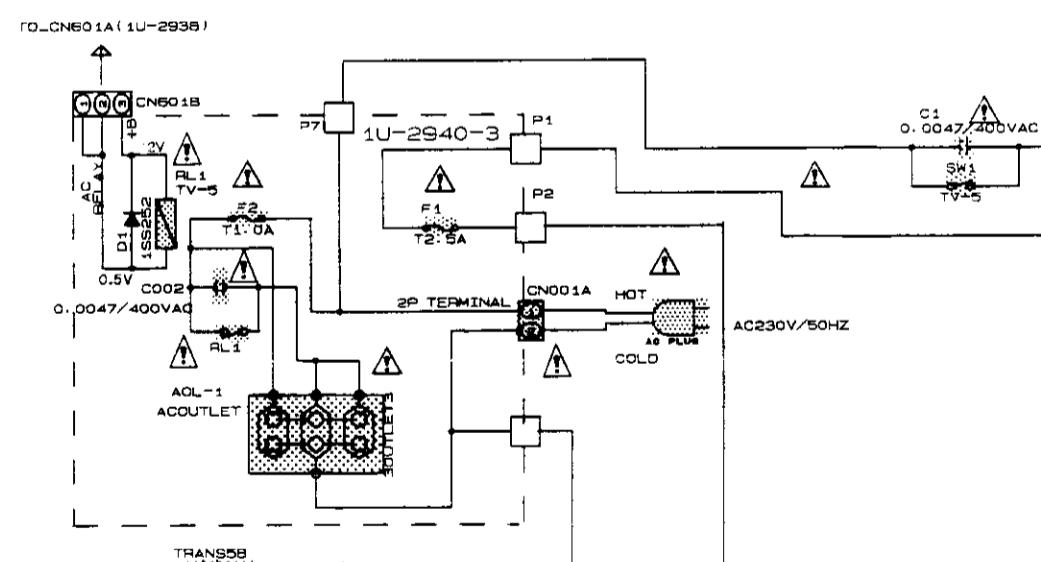

**WARNING:**  
Parts marked with this symbol   have critical characteristics.  
Use ONLY replacement parts recommended by the manufacturer.

**CAUTION:**  
Before returning the unit to the customer, make sure you make either (1) a leakage current check or (2) a line to chassis resistance check. If the leakage current exceeds 0.5 millamps, or if the resistance from chassis to either side of the power cord is less than 240 kilohms, the unit is defective.

**WARNING:**  
DO NOT return the unit to the customer until the problem is fixed and documented.

## NOTES

**ALL RESISTANCE  
M=1,000,000 OHM**


M=1,000,000 OHM  
ALL CAPACITANCE VALUES IN MICRO FARAD

ALL CAPACITANCE VALUES IN MICRO FARAD  
P=MICRO-MICRO FARAD

P=MICRO-MICRO FARAD  
EACH VOLTAGE AND CURRENT ARE MEASURED

EACH VOLTAGE AND CURRENT ARE MEASURED  
NO SIGNAL INPUT CONDITION.


CIRCUIT AND PARTS ARE SUB-

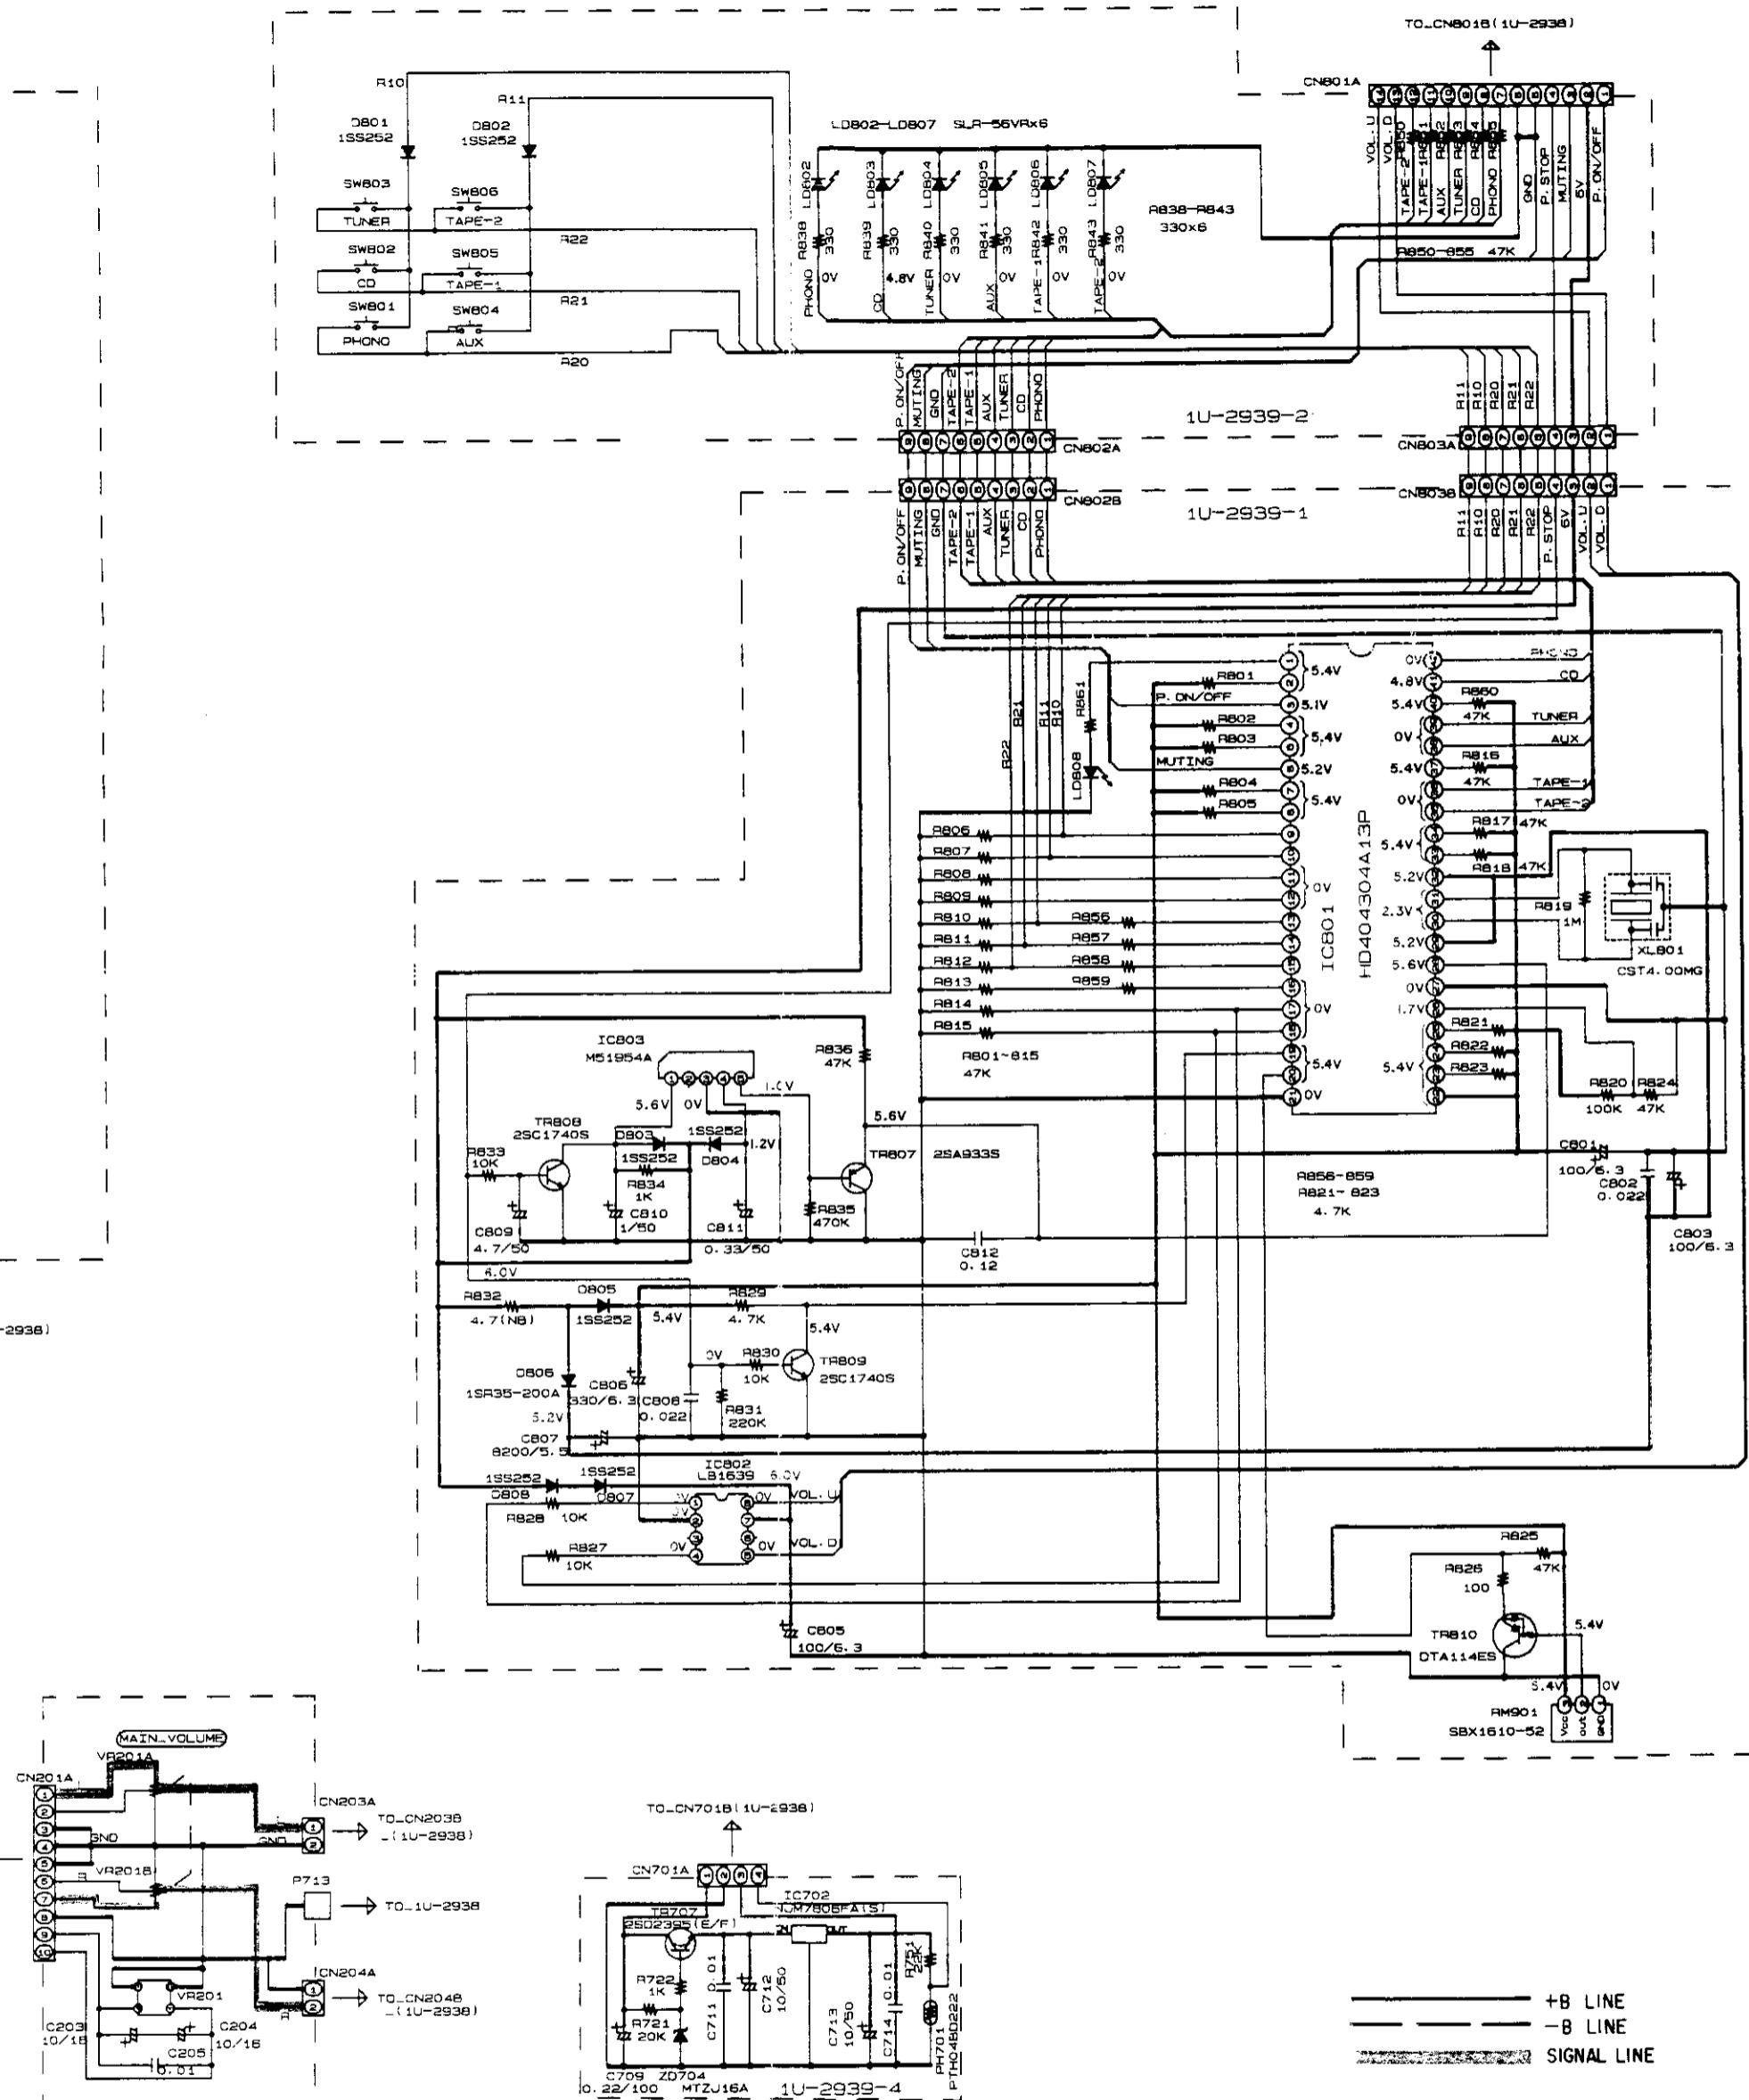


## SCHEMATIC DIAGRAM (4/4) : PMA-725R

1 2 3 4 5 6

A

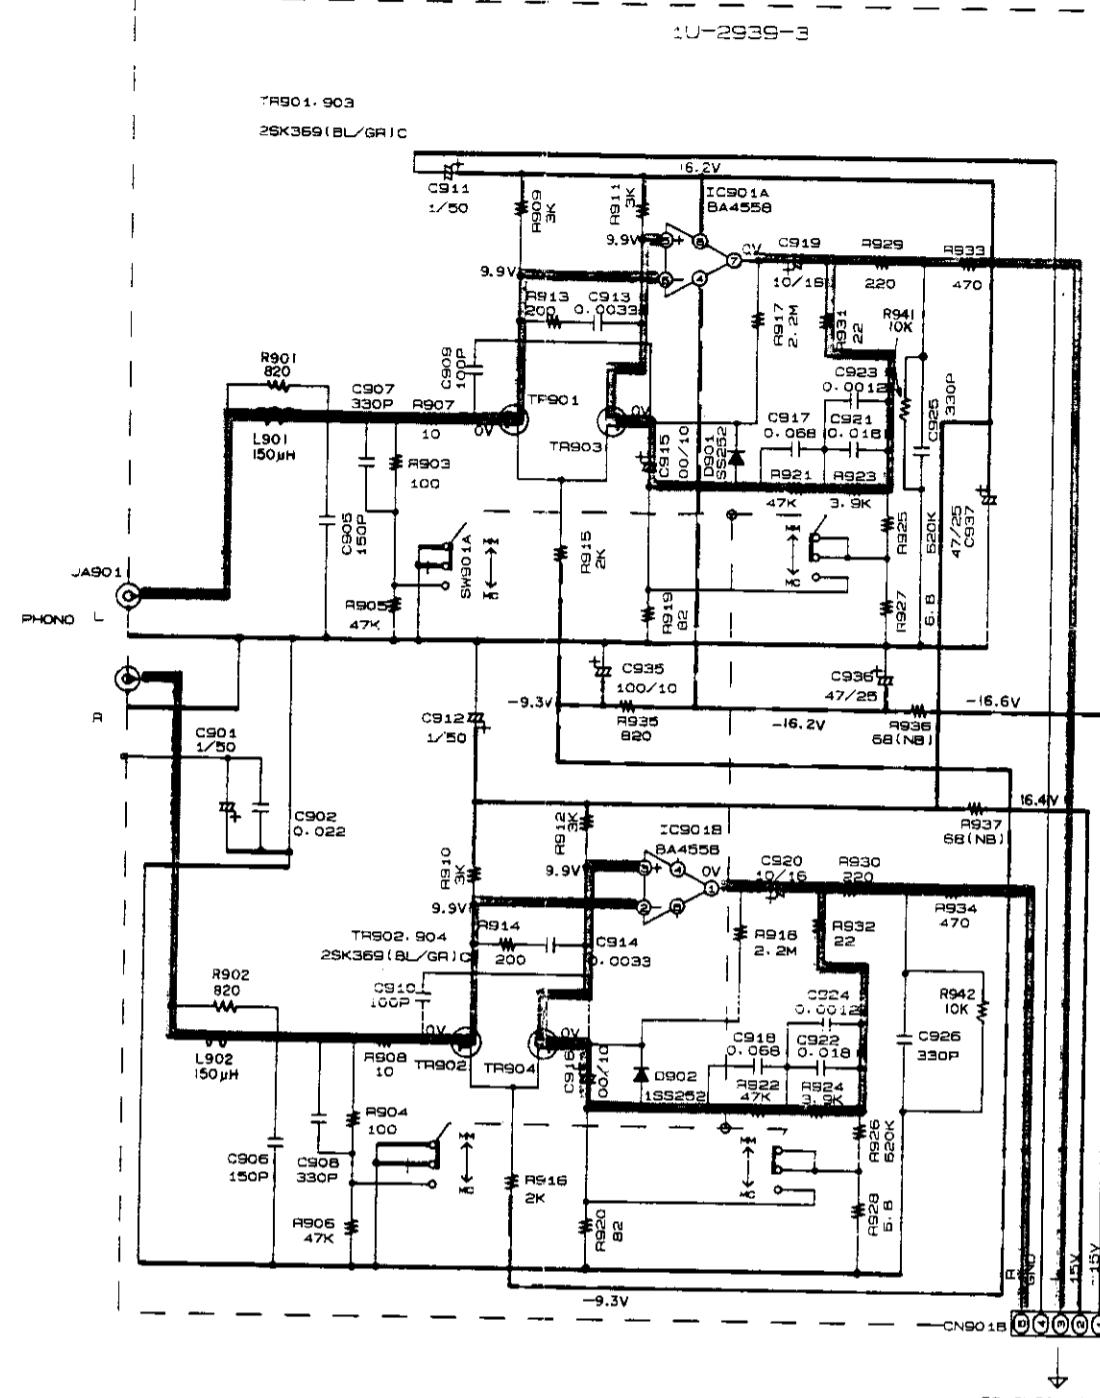


TO-CN901A(1U-2938)

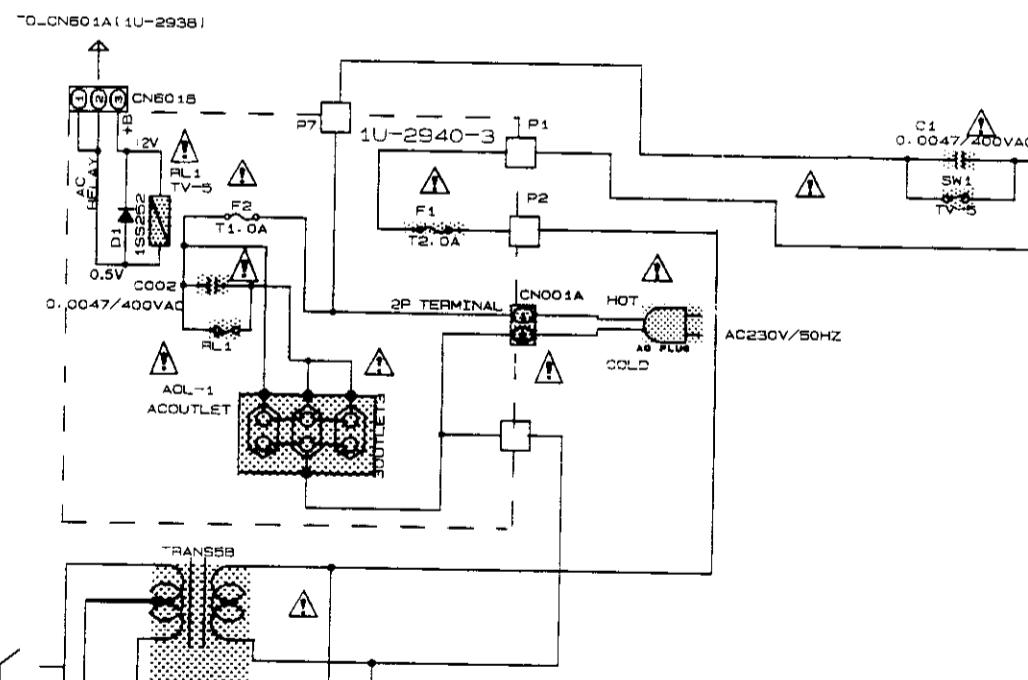

TO-1U-2939

AC OUTLET  
AOL-1


TRANS88

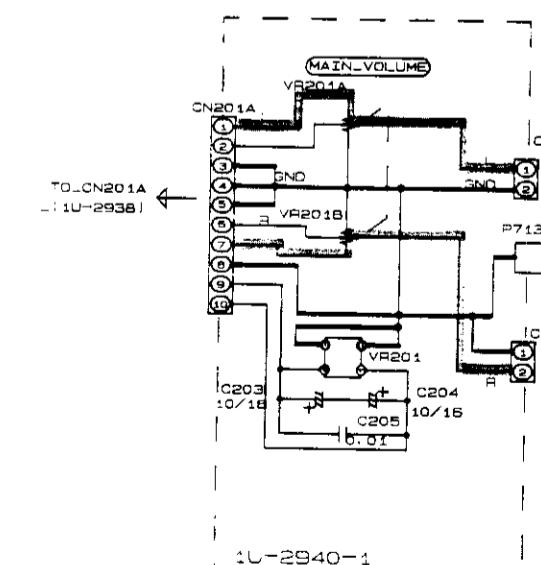

H

## NOTES

ALL RESISTANCE VALUES IN OHM. k=1,000 OHM. M=1,000,000 OHM  
ALL CAPACITANCE VALUES IN MICRO FARAD. P=MICRO-MICRO FARAD  
EACH VOLTAGE AND CURRENT ARE MEASURED AT NO SIGNAL INPUT CONDITION.  
CIRCUIT AND PARTS ARE SUBJECT TO CHANGE WITHOUT PRIOR NOTICE.

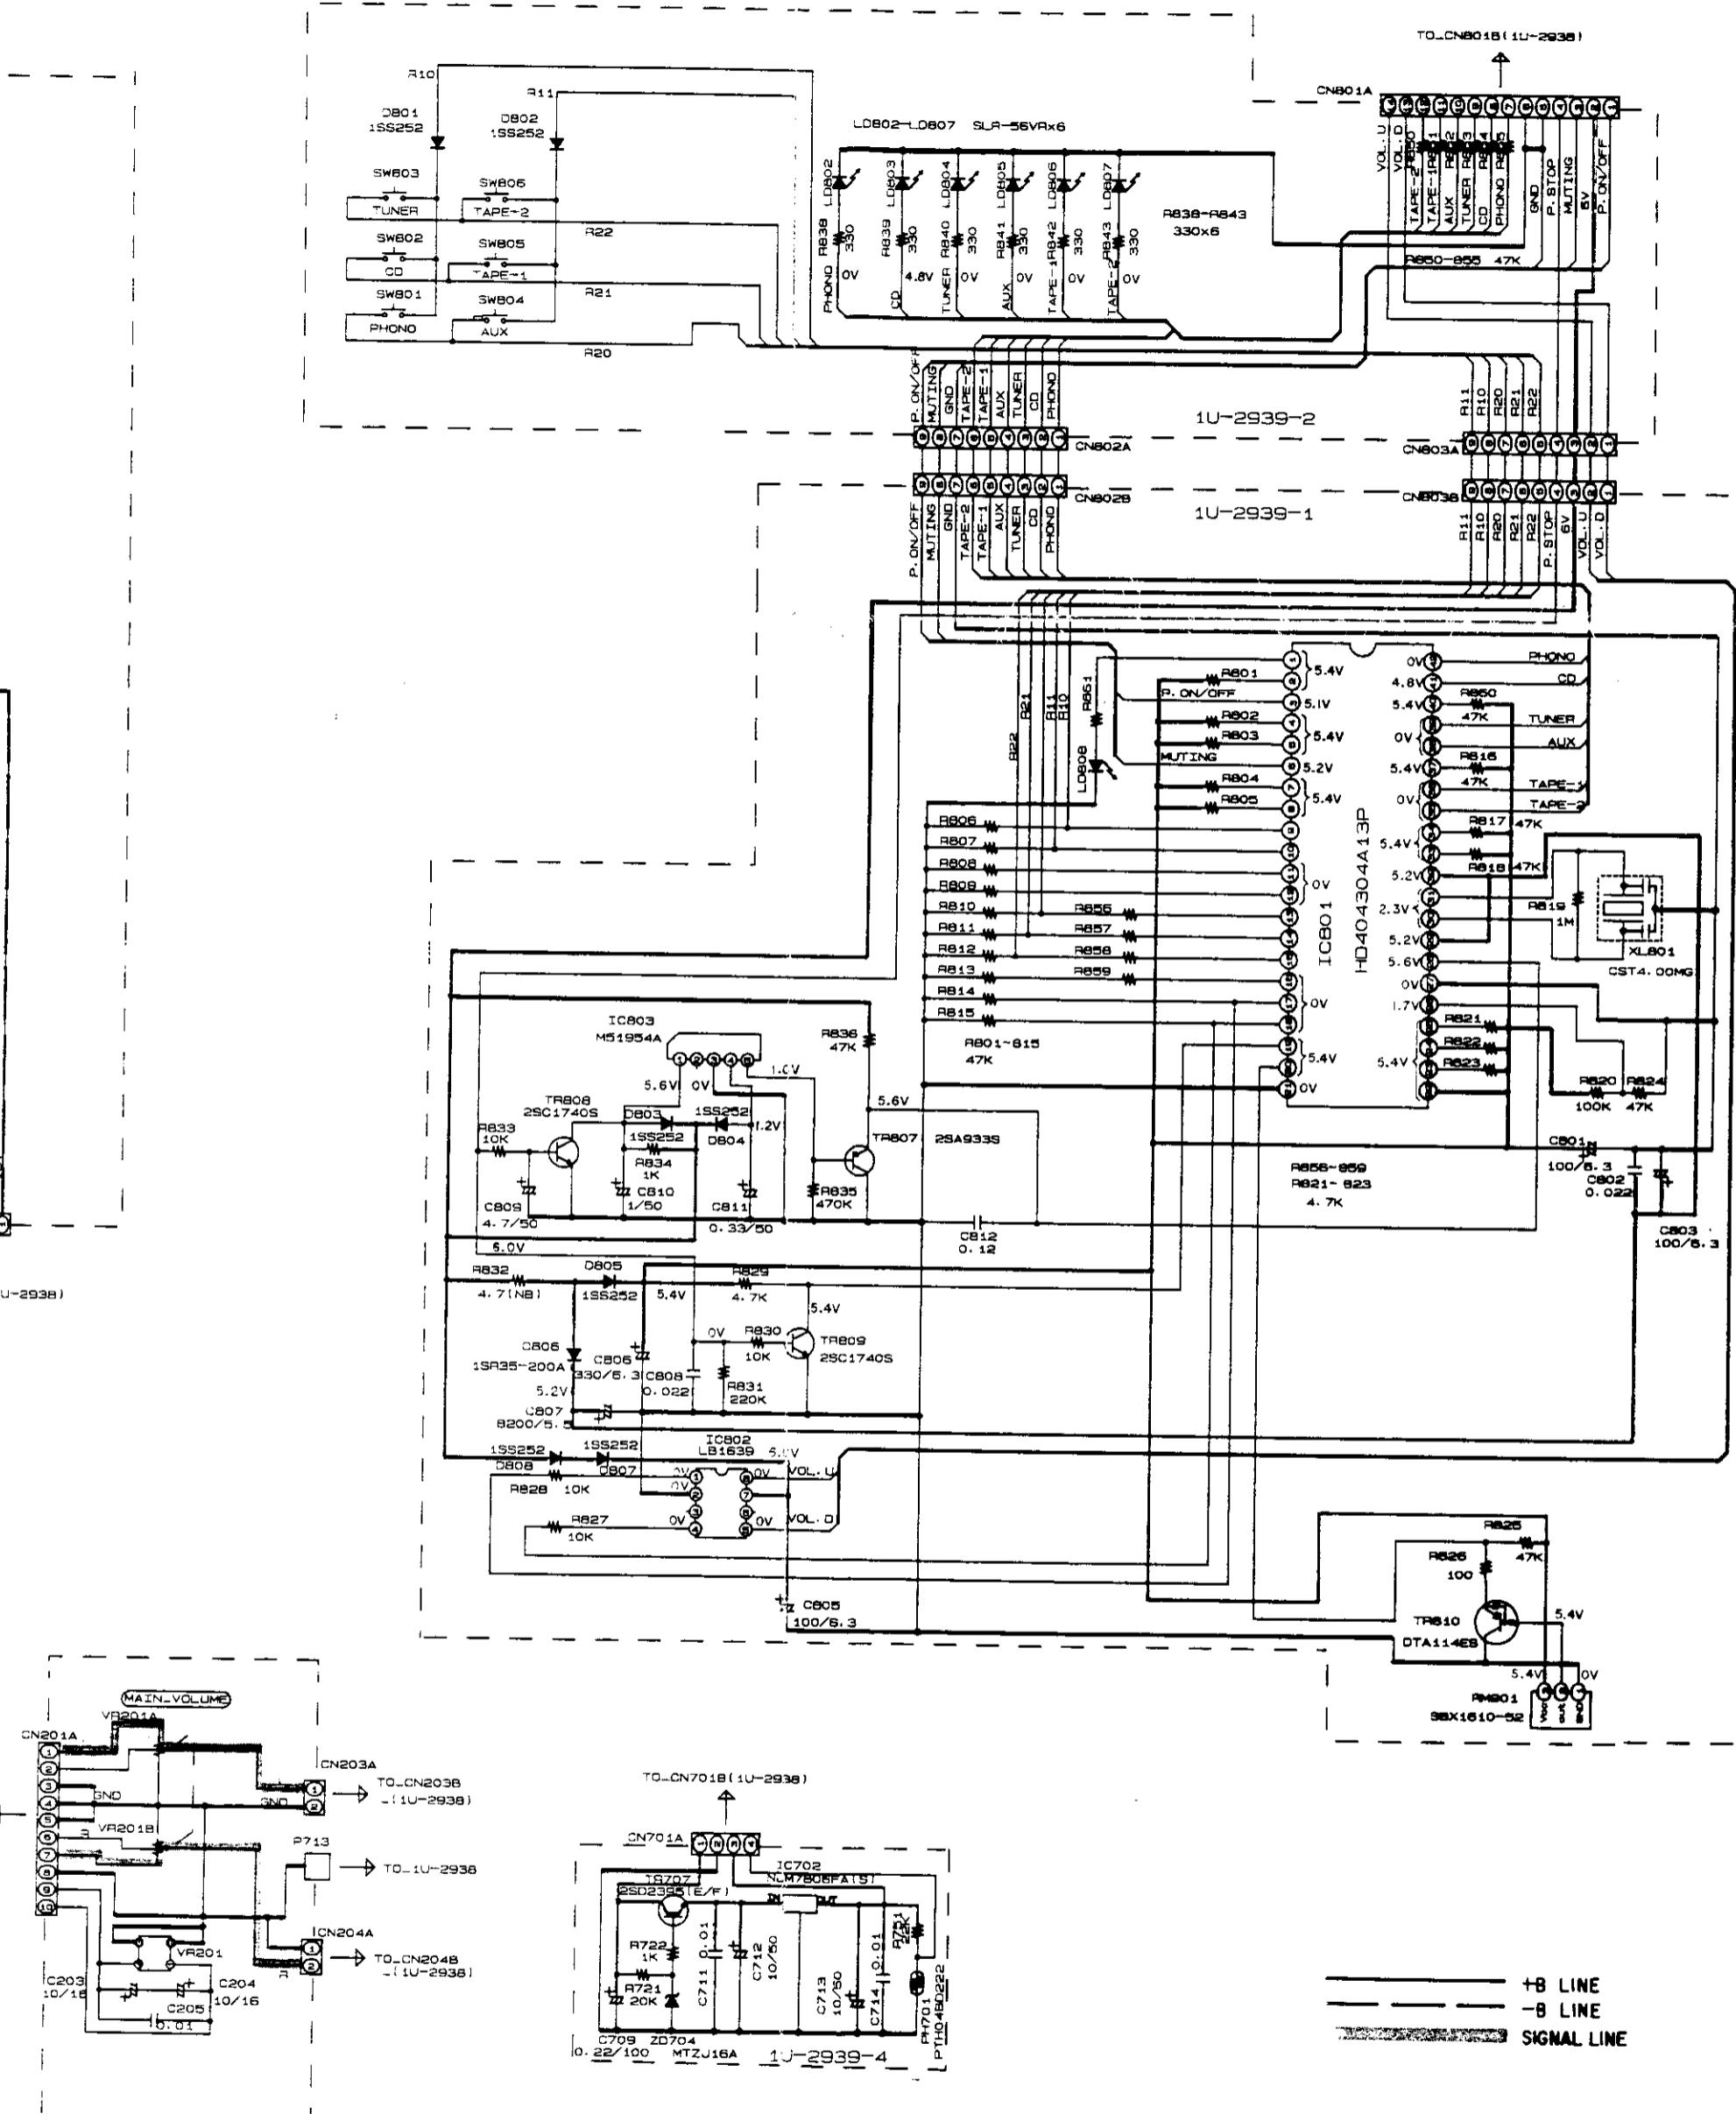

TO-CN701B(1U-2938)  
IC702  
ESD2358(E/F)  
P701  
P702  
P703  
P704  
P705  
P706  
P707  
P708  
P709  
ZD704  
MTZ16A  
1U-2939-4

+B LINE  
-B LINE  
SIGNAL LINE

## **SCHEMATIC DIAGRAM (3/4) : PMA-725R**

1

2


3


4

四

6

1U-2938

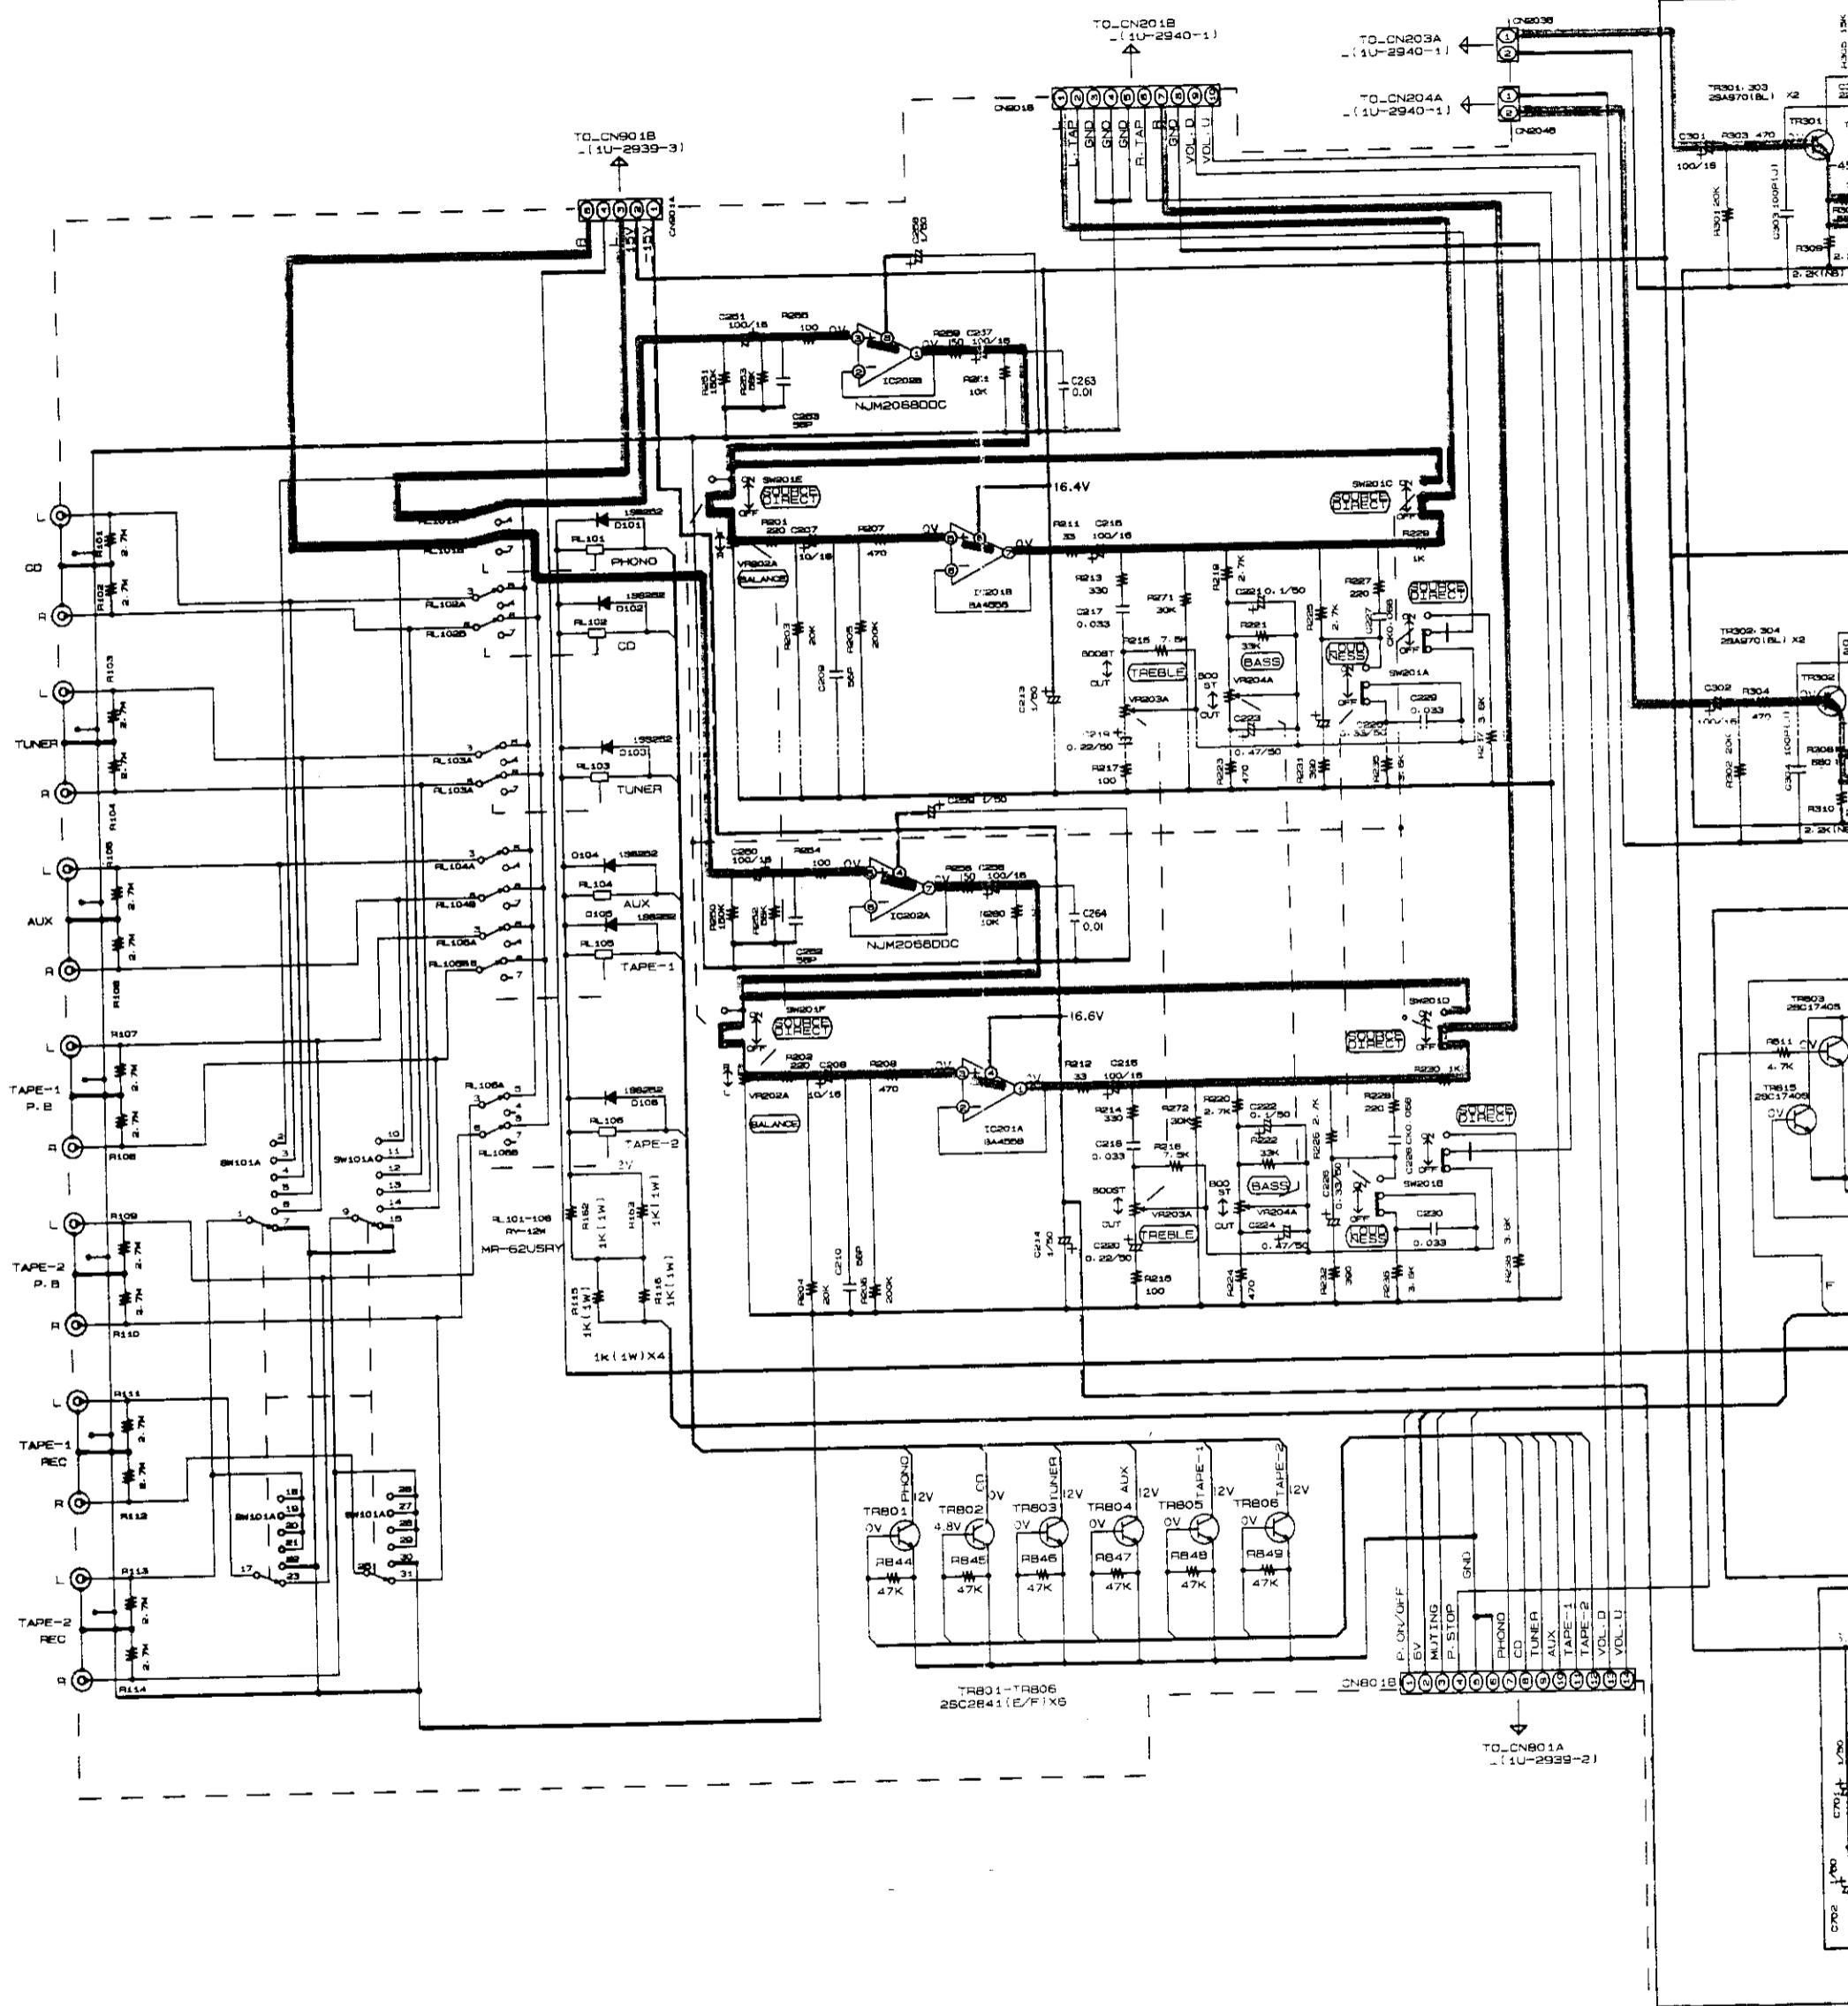

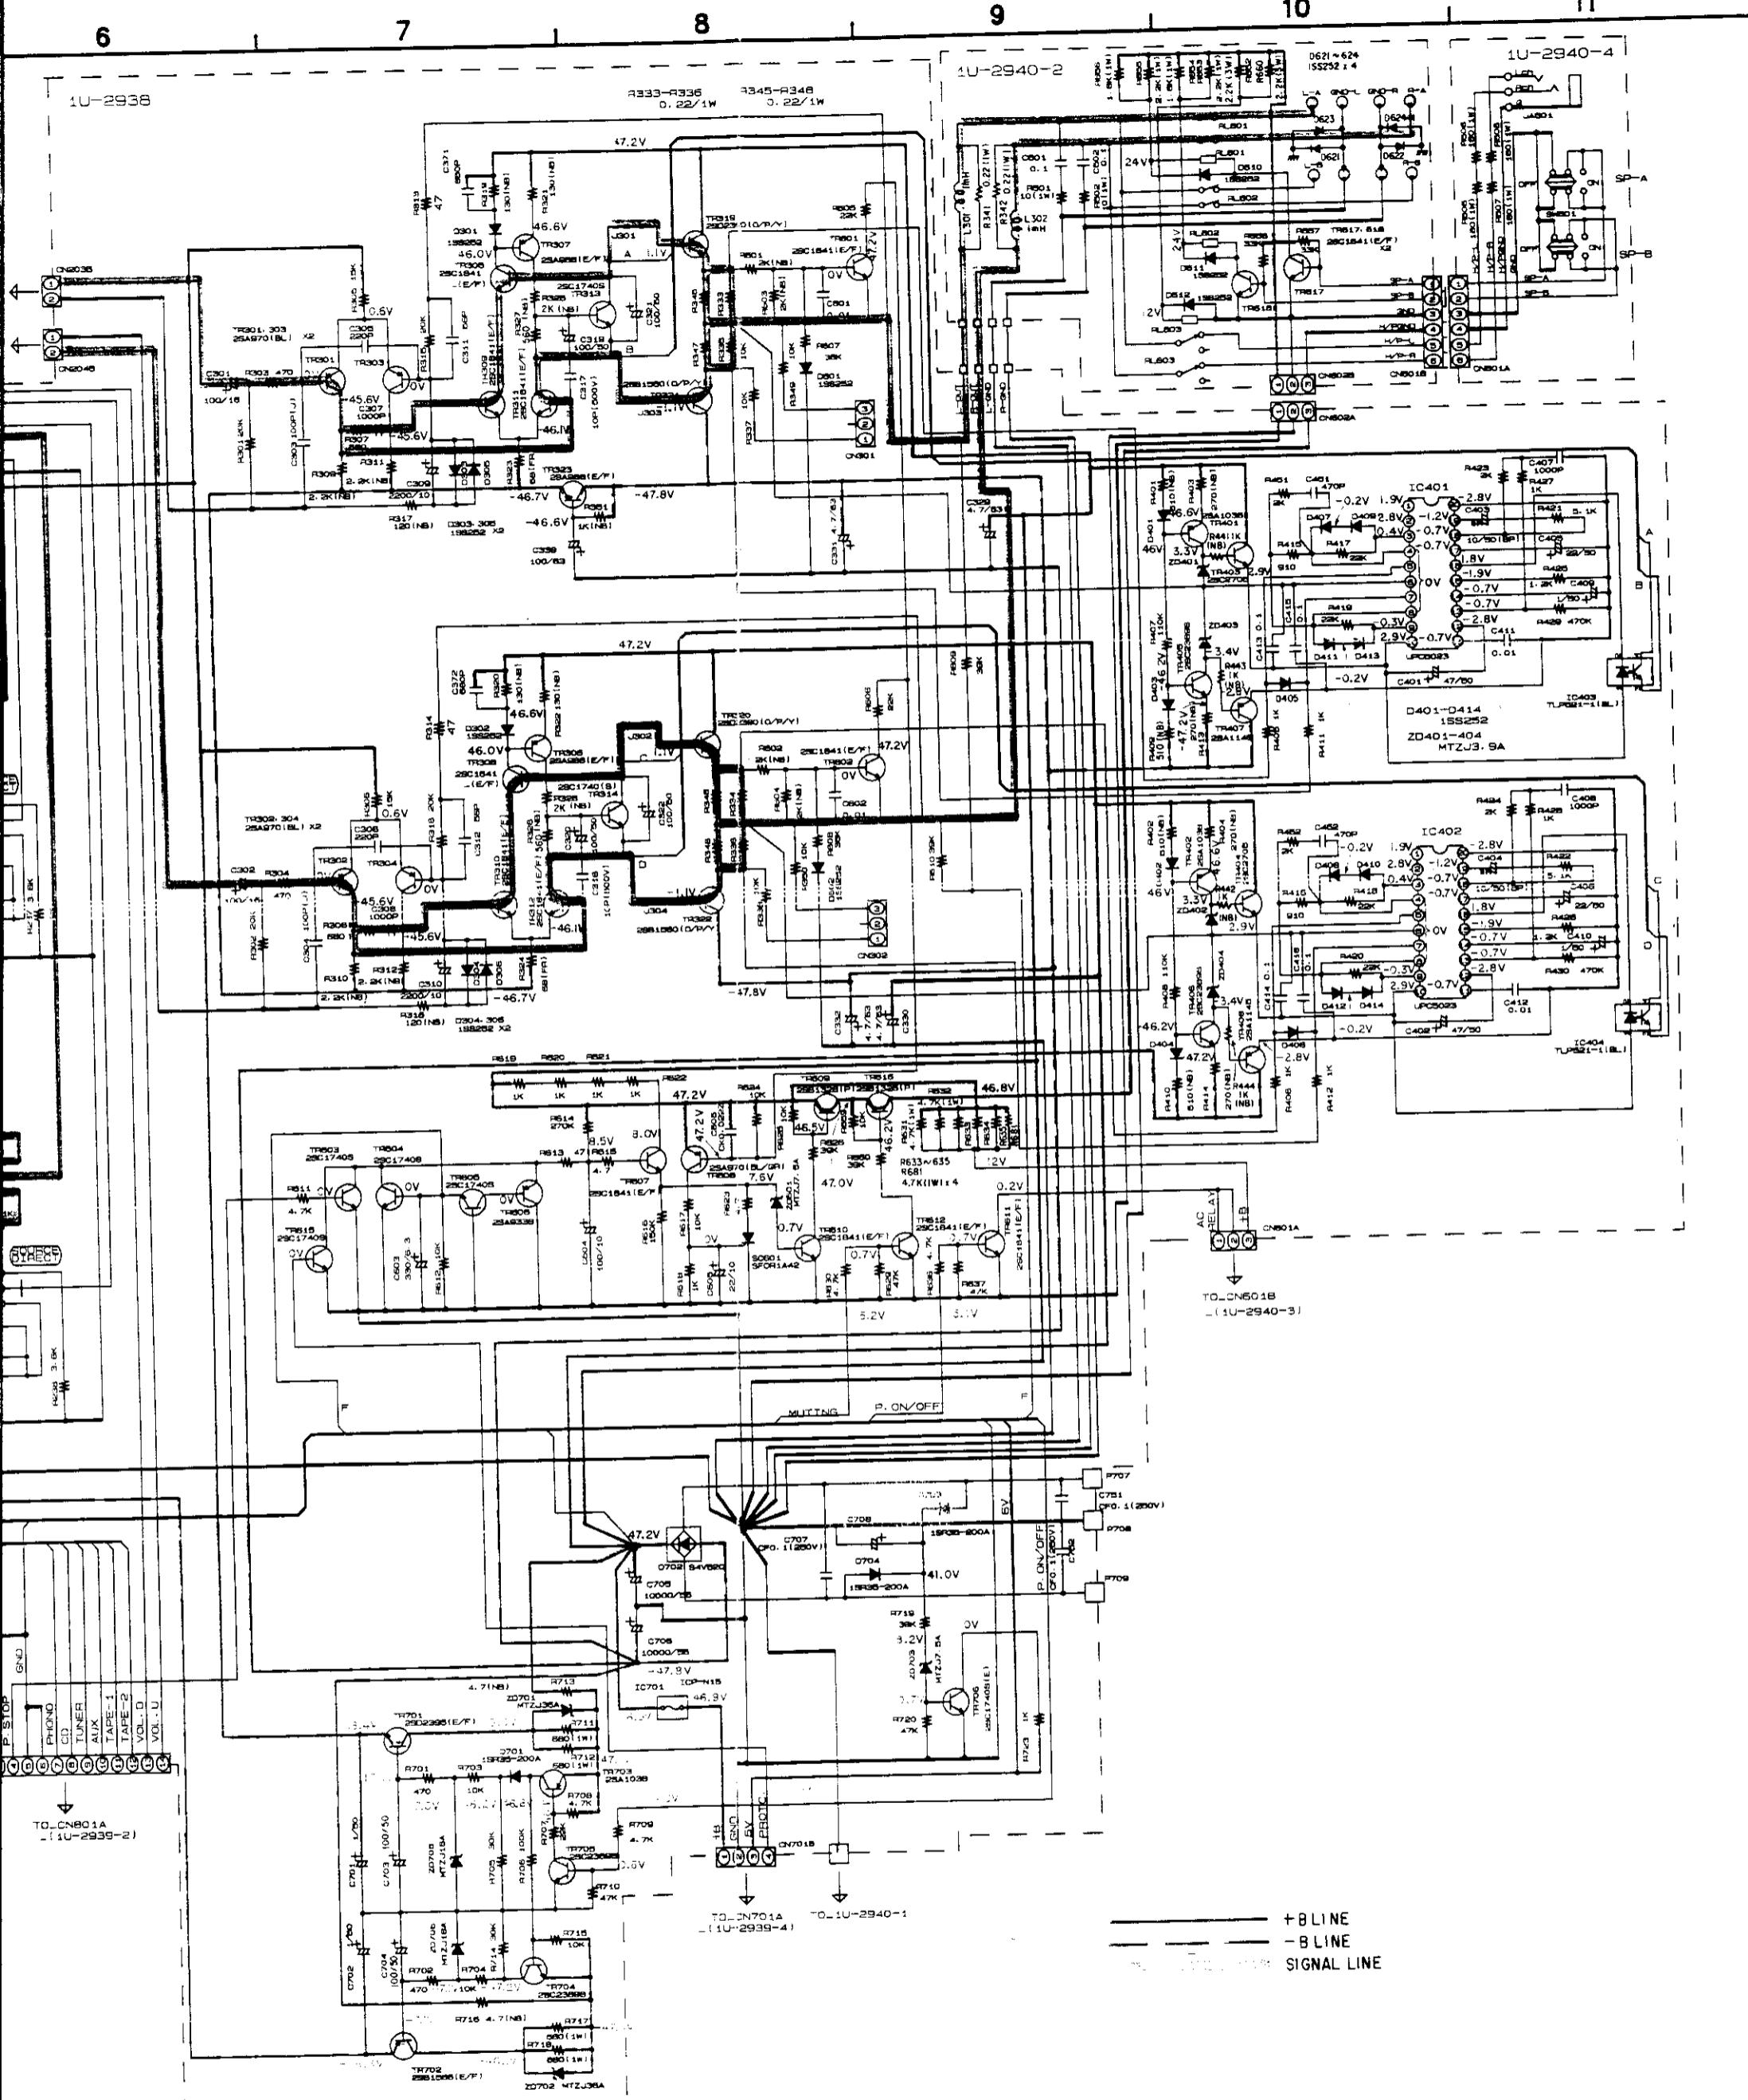

+B LINE  
-B LINE  
SIGNAL LINE

**NOTES:**  
ALL RESISTANCE VALUES IN OHM. K=1,000 OHM. M=1,000,000 OHM  
ALL CAPACITANCE VALUES IN MICRO FARAD. P=MICRO-MICRO FARAD  
EACH VOLTAGE AND CURRENT ARE MEASURED AT NO SIGNAL INPUT  
CONDITION  
CIRCUIT AND PARTS ARE SUBJECT TO CHANGE WITHOUT PRIOR  
NOTICE.

**WARNING:**  
Parts marked with this symbol have critical characteristics.  
Use ONLY replacement parts recommended by the manufacturer.

**CAUTION:**  
Before returning the unit to the customer, make sure you make either (1) a leakage current check or (2) a line to chassis resistance check. If the leakage current exceeds 0.5 millamps, or if the resistance from chassis to either side of the power cord is less than 240 kilohms, the unit is defective.

**WARNING:**  
DO NOT return the unit to the customer until the problem is located and corrected.