



DENON

Hi-Fi AM-FM Stereo Receiver

SERVICE MANUAL

MODEL DRA-1000

AM-FM STEREO RECEIVER

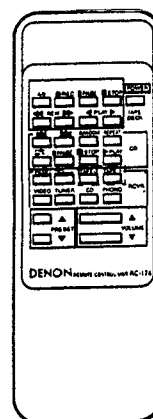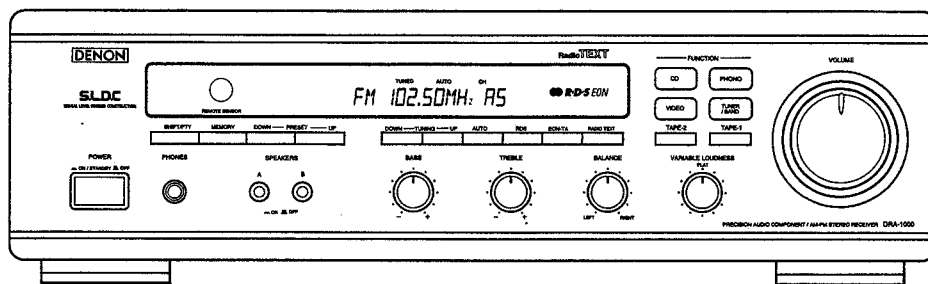

This service manual is composed of only pages whose contents are different from those for the model DRA-585RD. For servicing, refer to the previously issued service manual of DRA-585RD (for Europe and U.K. models) at the same time. 3/0

— TABLE OF CONTENTS —

SPECIFICATIONS	2
DISASSEMBLY	3
SEMICONDUCTOR (FLD)	4
NOTE FOR PARTS LIST	5
PARTS LIST OF P.W.B. UNIT	6-9
PRINTED WIRING BOARDS	10,11
1U-2817 MAIN UNIT ASS'Y	10
1U-2818 TUNER UNIT ASS'Y	11
1U-3204 DISPLAY UNIT ASS'Y	11
EXPLODED VIEW	12
PARTS LIST OF EXPLODED VIEW	13,14
SCHEMATIC DIAGRAM	15,16

● Some illustrations using in this service manual are slightly different from the actual set.

NIPPON COLUMBIA CO., LTD.

SAFETY PRECAUTIONS

The following check should be performed for the continued protection of the customer and service technician.

LEAKAGE CURRENT CHECK

Before returning the unit to the customer, make sure you make either (1) a leakage current check or (2) a line to chassis resistance check. If the leakage current exceeds 0.5 milliamps, or if the resistance from chassis to either side of the power cord is less than 460 kohms, the unit is defective.

SPECIFICATIONS

AMPLIFIER SECTION

Continuous Power

Output (DIN):	90 W +90 W (4 Ω /ohms, 1 kHz)
Power Bandwidth (IHF):	10 Hz ~ 40 kHz (T.H.D. 0.15 % both channels driven into 8 Ω /ohms)
Total Harmonic Distortion:	0.03 % (-3 dB at rated output, 8 Ω /ohms)
Frequency Response:	PHONO RIAA Standard Curve (Recording Out-put)
	MM 20 Hz ~ 20 kHz \pm 0.5 dB

Input Sensitivity and Impedance:	CD, VIDEO,	
	TAPE 1, TAPE 2	20 Hz ~ 50 kHz \pm 1.5 dB (at 1 W)
	PHONO MM	2.5 mV 47 k Ω /kohms
	CD, VIDEO,	
	TAPE 1, TAPE 2	150 mV 25 k Ω /kohms

Maximum Input Level (at 1 kHz):	PHONO MM	120 mV
Signal to Noise Ratio (IHF-A):	PHONO MM	78 dB (at 5.0 mV input)

Tone Controls:	CD, VIDEO,	
	TAPE 1, TAPE 2	98 dB
	BASS	\pm 10 dB at 100 Hz
	TREBLE	\pm 10 dB at 10 kHz

Loudness Control Effect:	Variable Loudness at maximum position 50 Hz/10 kHz, +10 dB/+5 dB
--------------------------	--

TUNER SECTION

[FM] (note: μ V at 75 Ω /ohms, 0 dBf = 1×10^{-15} W)

Receiving Range:	87.50 ~ 108.00 MHz
Usable Sensitivity:	0.9 μ V (10.3 dBf)
Signal to Noise Ratio (IHF-A):	MONO: 82 dB
	STEREO: 78 dB
Image Rejection:	65 dB
Selectivity (\pm 300 kHz):	55 dB
Frequency Response:	30 Hz ~ 15 kHz $^{+0.2}_{-1.5}$ dB
Stereo Separation (at 1 kHz):	40 dB

[AM]

Receiving Range:	522 ~ 1611 kHz
Usable Sensitivity:	18 μ V
Signal to Noise Ratio:	55 dB

GENERAL

Power Supply:	AC 230 V 50Hz
Power Consumption:	190 W
Power Outlet:	SWITCHED 100 W
Dimensions:	434 mm (W) \times 134 mm (H) \times 366 mm (D)
Weight:	8.5 kg

REMOTE CONTROL UNIT


	RC-174
Remote Control System:	Infrared pulse system
Power Supply:	3 V DC Two size "AA" (R6) dry cell batteries
External dimensions:	60 mm (W) \times 175 mm (H) \times 18 mm (D)
Weight:	120 g (includes batteries)

DISASSEMBLY

(To reassemble reverse disassembly)


1. Top Cover

- (1) Remove 8 screws ①.
- (2) Remove 2 screws ②.

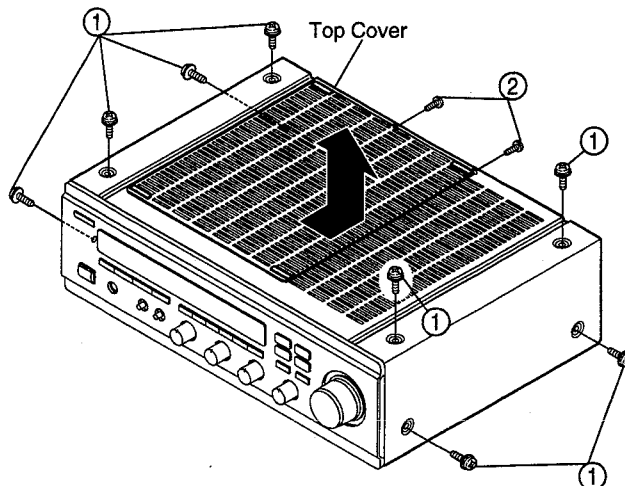


2. Front Panel

- (1) Pull out Volume knob ③.
- (2) Remove nut ④.
- (3) Remove Volume Plate ④-1.
- (4) Remove 6 screws ⑤ and undo hooks at 3 places.

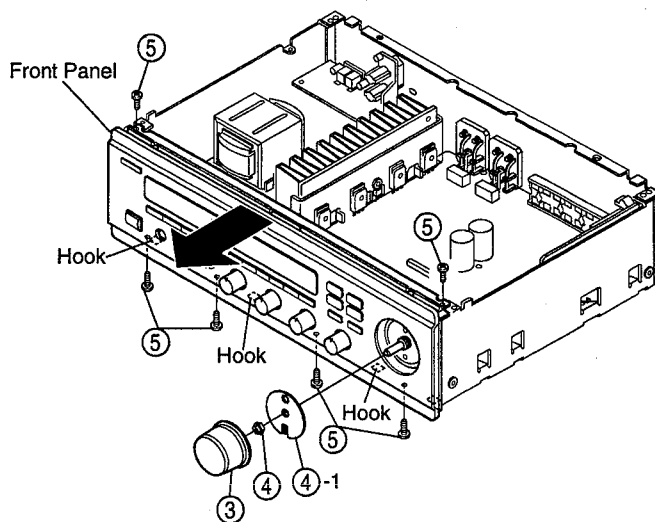




3. Rear Panel

- (1) Remove 2 screws ⑥ and 12 fixing screws ⑦.
- (2) Remove 4 screws ⑧.

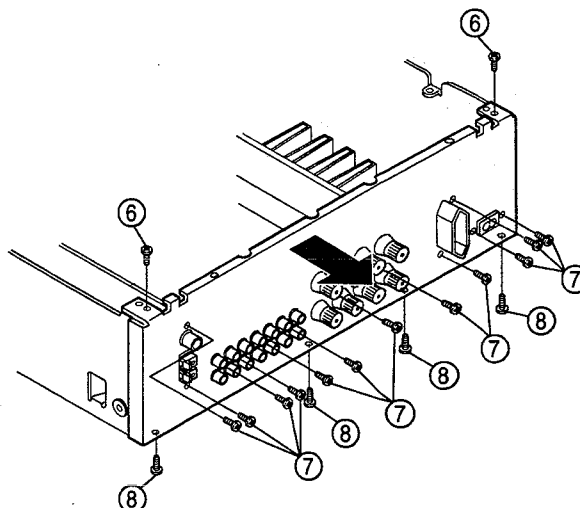

SEMICONDUCTOR (FLD)

● FLD (14-BT39GK)

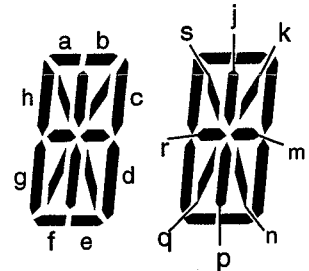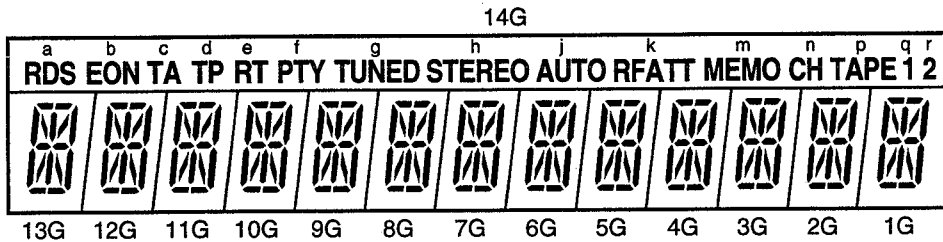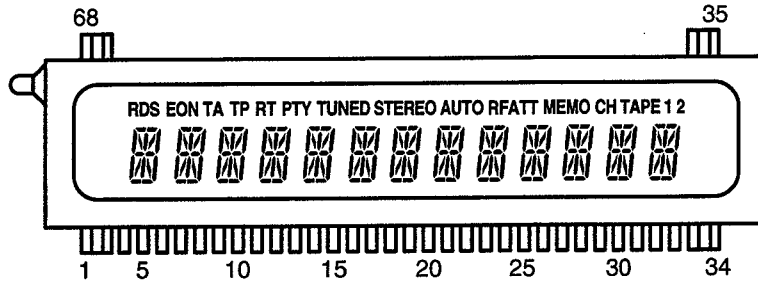

TERMINAL CONNECTION

(UPPER)

TERMINAL No. ELECTRODE	68	67	66	65	64	63	62	61	60	59	58	57	56	55	54	53	52				
	F1	F1	NP	NP	NP	NP	NP	NP	NP	NP	NP	NP	NP	NP	NP	NP	NP				
TERMINAL No. ELECTRODE				51	50	49	48	47	46	45	44	43	42	41	40	39	38	37	36	35	
				NP	NP	NP	NP	NP	NP	NP	NP	NP	NP	NP	NP	NP	NP	NP	NP	F2	F2

(LOWER)

TERMINAL No. ELECTRODE																		18	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33	34
																		P																
																		a	14G	13G	12G	11G	10G	9G	8G	7G	6G	5G	4G	3G	2G	1G	F2	F2
TERMINAL No. ELECTRODE	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17																	
	F1	F1	P	P	P	P	P	P	P	P	P	P	P	P	P	P	P																	
			s	r	q	p	n	m	k	j	h	g	f	e	d	c	b																	

Notes: F: Filament G: Grid A: Anode NP: No Pin

NOTE FOR PARTS LIST

- Part indicated with the mark "⊙" are not always in stock and possibly to take a long period of time for supplying, or in some case supplying of part may be refused.
- When ordering of part, clearly indicate "1" and "I" (i) to avoid mis-supplying.
- Ordering part without stating its part number can not be supplied.
- Part indicated with the mark "★" is not illustrated in the exploded view.
- Not including Carbon Film ±5%, 1/4W Type in the P.W.Board parts list. (Refer to the Schematic Diagram for those parts.)

WARNING:

Parts marked with this symbol  have critical characteristics. Use ONLY replacement parts recommended by the manufacturer.

● Resistors

Ex.: **RN** **14K** **2E** **182** **G** **FR**
 Type Shape Power Resist- Allowable Others
 and performance ance error

RD : Carbon	2B : 1/8W	F : ±1%	P : Pulse-resistant type
RC : Composition	2E : 1/4W	G : ±2%	NL : Low noise type
RS : Metal oxide film	2H : 1/2W	J : ±5%	NB : Non-burning type
RW : Winding	3A : 1W	K : ±10%	FR : Fuse-resistor
RN : Metal film	3D : 2W	M : ±20%	F : Lead wire forming
RK : Metal mixture	3F : 3W		
	3H : 5W		

*** Resistance**

$1 \overset{8}{\text{R}} 2 \Rightarrow 1800 \text{ ohm} = 1.8 \text{ kohm}$
 Indicates number of zeros after effective number.
 2-digit effective number.

• Units: ohm

$1 \overset{R}{\text{R}} 2 \Rightarrow 1.2 \text{ ohm}$
 1-digit effective number.
 2-digit effective number, decimal point indicated by R.

• Units: ohm

● Capacitors

Ex.: **CE** **04W** **1H** **2R2** **M** **BP**
 Type Shape Dielectric Capacity Allowable Others
 and performance strength error

CE : Aluminum foil electrolytic	0J : 6.3V	F : ±1%	HS : High stability type
CA : Aluminum solid electrolytic	1A : 10V	G : ±2%	BP : Non-polar type
CS : Tantalum electrolytic	1C : 16V	J : ±5%	HR : Ripple-resistant type
CQ : Film	1E : 25V	K : ±10%	DL : For charge and discharge
CK : Ceramic	1V : 35V	M : ±20%	HF : For assuring high frequency
CC : Ceramic	1H : 50V	Z : +80%	U : UL part
CP : Oil	2A : 100V	-20%	C : CSA part
CM : Mica	2B : 125V	P : +100%	W : UL-CSA type
CF : Metallized	2C : 160V	-0%	F : Lead wire forming
CH : Metallized	2D : 200V	C : ±0.25pF	
	2E : 250V	D : ±0.5pF	
	2H : 500V	= : Others	
	2J : 630V		

*** Capacity (electrolyte only)**

$2 \overset{2}{\text{R}} 2 \Rightarrow 2200\mu\text{F}$
 Indicates number of zeros after effective number.
 2-digit effective number.

• Units: μF.

$2 \overset{R}{\text{R}} 2 \Rightarrow 2.2\mu\text{F}$
 1-digit effective number.
 2-digit effective number, decimal point indicated by R.

• Units: μF.

*** Capacity (except electrolyte)**

$2 \overset{2}{\text{R}} 2 \Rightarrow 2200\text{pF} = 0.0022\mu\text{F}$
 (More than 2) — Indicates number of zeros after effective number.
 2-digit effective number.

• Units: μF.

$2 \overset{2}{\text{R}} 1 \Rightarrow 220\text{pF}$
 (0 or 1) — Indicates number of zeros after effective number.
 2-digit effective number.

• Units: pF.

• When the dielectric strength is indicated in AC, "AC" is included after the dielectric strength value.

PARTS LIST OF P.W.B. UNIT

1U-2817G MAIN UNIT ASS'Y

Ref. No.	Part No.	Part Name	Remarks	Ref. No.	Part No.	Part Name	Remarks
SEMICONDUCTORS GROUP				SEMICONDUCTORS GROUP			
IC101	262 1227 008	IC LC7821		D405-410	276 0553 905	Diode 1SR35-200A	
IC301	263 0615 902	IC BA15218F		D411,412	276 0432 903	Diode 1SS270A	
IC401	263 1010 001	IC BA178M06		D451-453	276 0432 903	Diode 1SS270A	
IC701	263 1032 908	IC NJM2082MD		D651	276 0432 903	Diode 1SS270A	
IC801	262 1701 906	IC :SAA6579T		ZD101	276 0634 905	Zener diode MTZJ3.3A	
IC802	262 1929 908	IC LC7074M		ZD251,252	276 0637 902	Zener diode MTZJ6.2A	
TR251	274 0158 003	Transistor 2SD1763A(D)		ZD401	276 0634 905	Zener diode MTZJ3.3A	
TR252	272 0115 008	Transistor 2SB1186A(D)		ZD402	276 0633 906	Zener diode MTZJ6.8C	
TR253	273 0432 904	Transistor 2SC2389S(S/E)		ZD403	276 0632 907	Zener diode MTZJ27D	
TR254	271 0280 901	Transistor 2SA1038S(S/E)		ZD451-453	276 0635 904	Zener diode MTZJ7.5C	
TR255	273 0432 984	Transistor 2SC2389S(S/E)		SC451	279 0016 904	Thyristor SF0R1A42	
TR256	271 0280 901	Transistor 2SA1038S(S/E)		RESISTORS GROUP			
TR257	273 0432 904	Transistor 2SC2389S(S/E)		VR305,306	211 6093 909	Semi fixed resistor 6.8Kohm	V06PB682
TR301,302	269 0107 900	Transistor RN1241(A/B)	Built in resistor	R001,002	247 0018 905	Carbon chip 0ohm 1/10W	RM73B-0R0K
TR303,304	273 0235 923	Transistor 2SC1841(E/F)		R101-108	247 0014 967	Carbon chip 1Mohm 1/10W	RM73B-105J
TR305-308	271 0131 924	Transistor 2SA988(E/F)		R109-116	247 0006 962	Carbon chip 470ohm 1/10W	RM73B-471J
TR309,310	273 0235 923	Transistor 2SC1841(E/F)		R117	247 0014 925	Carbon chip 680kohm 1/10W	RM73B-684J
TR315,316	273 0198 905	Transistor 2SC1815(Y)		R131-134	247 0014 967	Carbon chip 1Mohm 1/10W	RM73B-105J
TR317,318	274 0060 900	Transistor 2SD667A(C)		R135-138	247 0006 962	Carbon chip 470ohm 1/10W	RM73B-471J
TR319,320	272 0053 908	Transistor 2SB647A(C)		△ R201,202	244 2052 931	Metal oxide film 390ohm 1W	RS14B3A391JNBS(S)
TR321,322	273 0389 002	Transistor 2SC3855(O/P/Y)		△ R250,260	241 2387 940	Carbon 4.7ohm 1/4W	RD14B2E4R7JNBS
TR323,324	271 0240 006	Transistor 2SA1491(O/P/Y)		R263	247 0009 985	Carbon chip 10kohm 1/10W	RM73B-103J
TR325,326	273 0235 923	Transistor 2SC1841(E/F)		R264	247 0012 927	Carbon chip 100kohm 1/10W	RM73B-104J
TR401	273 0384 900	Transistor 2SC2412K(S)	Built in resistor	R305,306	247 0012 969	Carbon chip 150kohm 1/10W	RM73B-154J
TR402	269 0048 904	Transistor DTC143EK		R307,308	247 0006 962	Carbon chip 470ohm 1/10W	RM73B-471J
TR403	273 0384 900	Transistor 2SC2412K(S)		R309,310	247 0009 914	Carbon chip 5.1kohm 1/10W	RM73B-512J
TR404	272 0131 901	Transistor 2SB1041(R)		△ R311,312	241 2379 932	Carbon 620ohm 1/4W	RD14B2E621JNBS
TR451	271 0131 924	Transistor 2SA988(E/F)		R323,324	247 0005 989	Carbon chip 220kohm 1/10W	RM73B-221J
TR452	273 0432 904	Transistor 2SC2389S(S/E)	Built in resistor	△ R329,330	241 2376 920	Carbon 220ohm 1/4W	RD14B2E221JNBS
TR453	269 0054 901	Transistor DTC144EK		△ R331-334	244 2043 982	Metal oxide film 0.22ohm 1W	RS14B3AR22JNBS(S)
TR454	273 0384 900	Transistor 2SC2412K(S)		R335,336	247 0013 984	Carbon chip 470kohm 1/10W	RM73B-474J
TR455	273 0388 906	Transistor 2SC1740S(E)		R351,352	247 0012 901	Carbon chip 82kohm 1/10W	RM73B-823J
TR456	271 0192 905	Transistor 2SA933S(S)		R353,354	247 0012 969	Carbon chip 150kohm 1/10W	RM73B-154J
TR457	273 0388 906	Transistor 2SC1740S(E)		R355,356	247 0004 922	Carbon chip 47ohm 1/10W	RM73B-470J
TR458,459	273 0432 904	Transistor 2SC2389S(S/E)		R357	247 0009 901	Carbon chip 4.7kohm 1/10W	RM73B-472J
TR460	273 0384 900	Transistor 2SC2412K(S)	Built in resistor	R358	247 0011 944	Carbon chip 47kohm 1/10W	RM73B-473J
TR471	269 0083 901	Transistor DTA114EK	Built in resistor	△ R361-364	244 2043 982	Metal oxide film 0.22ohm 1W	RS14B3AR22JNBS(S)
TR473	269 0054 901	Transistor DTC144EK	Built in resistor	△ R385,386	241 2379 932	Carbon 620ohm 1/4W	RD14B2E621JNBS
D251	276 0424 005	Bridge diode 4D4B42		△ R387-390	241 2377 989	Carbon 150ohm 1/4W	RD14B2E151JNBS
D252	276 0553 905	Diode 1SR35-200A		△ R391,392	244 2043 937	Metal oxide film 10ohm 1W	RS14B3A100JNBS(S)
D253,254	276 0432 903	Diode 1SS270A					
D303-306	276 0619 904	Diode 1S2471					
D307-312	276 0432 903	Diode 1SS270A					
D401,402	276 0432 903	Diode 1SS270A					
D403	276 0553 905	Diode 1SR35-200A					

Ref. No.	Part No.	Part Name	Remarks
R401	247 0013 900	Carbon chip 220kohm 1/10W	RM73B—224J
R402	247 0009 985	Carbon chip 10kohm 1/10W	RM73B—103J
R403	247 0009 901	Carbon chip 4.7kohm 1/10W	RM73B—472J
R404,405	247 0007 945	Carbon chip 1kohm 1/10W	RM73B—102J
R406	247 0009 985	Carbon chip 10kohm 1/10W	RM73B—103J
R407	247 0010 958	Carbon chip 20kohm 1/10W	RM73B—203J
R408	247 0009 985	Carbon chip 10kohm 1/10W	RM73B—103J
R409	247 0007 945	Carbon chip 1kohm 1/10W	RM73B—102J
R410	247 0009 901	Carbon chip 4.7kohm 1/10W	RM73B—472J
△ R411	244 2051 987	Metal oxide film 4.7ohm 1W	RS14B3A4R7JNBS(S)
△ R412	241 2377 947	Carbon 10kohm 1/4W	RD14B2E101JNBS
△ R415	241 2387 908	Carbon 1ohm 1/4W	RD14B2E010JNBS
△ R451,452	244 2052 902	Metal oxide film 2.7kohm 1W	RS14B3A272JNBS(S)
△ R453	244 2051 990	Metal oxide film 4.7kohm 1W	RS14B3A472JNBS(S)
R460	247 0011 944	Carbon chip 47kohm 1/10W	RM73B—473J
△ R465,466	244 2052 902	Metal oxide film 2.7kohm 1W	RS14B3A272JNBS(S)
△ R467	244 2050 991	Metal oxide film 6.8kohm 1W	RS14B3A682JNBS(S)
R468	244 2052 957	Metal oxide film 5.6kohm 1W	RS14B3A562JNBS(S)
R475	247 0010 929	Carbon chip 15kohm 1/10W	RM73B—153J
R701,702	247 0009 901	Carbon chip 4.7kohm 1/10W	RM73B—472J
R703,704	247 0012 969	Carbon chip 150kohm 1/10W	RM73B—154J
R705,706	247 0011 986	Carbon chip 68kohm 1/10W	RM73B—683J
R707,708	247 0004 922	Carbon chip 47ohm 1/10W	RM73B—470J
R709,710	247 0005 992	Carbon chip 240ohm 1/10W	RM73B—241J
R711,712	247 0012 956	Carbon chip 130kohm 1/10W	RM73B—134J
R713,714	247 0009 998	Carbon chip 11kohm 1/10W	RM73B—113J
R715,716	247 0003 949	Carbon chip 22ohm 1/10W	RM73B—220J
R717,718	247 0005 905	Carbon chip 100ohm 1/10W	RM73B—101J
R719,720	247 0012 927	Carbon chip 100kohm 1/10W	RM73B—104J
CAPACITORS GROUP			
C101~108	257 0004 903	Ceramic chip 56pF/50V	CC73SL1H560J
C109,110	253 1179 945	Ceramic 220pF/50V	CK45B1H221KT
C111	257 0002 921	Ceramic chip 10pF/50V	CC73SL1H100D
C112,113	257 0012 982	Ceramic chip 0.022μF/50V	CK73F1H223Z
C124,125	257 0012 982	Ceramic chip 0.022μF/50V	CK73F1H223Z
C127	257 0012 982	Ceramic chip 0.022μF/50V	CK73F1H223Z
C131~134	257 0004 903	Ceramic chip 56pF/50V	CC73SL1H560J
C201~204	255 1265 907	Film 6800pF/50V	CQ93M1H682J(B)
C205,206	257 0006 985	Ceramic chip 820pF/50V	CC73SL1H821J
C251~254	254 4258 918	Electrolytic 10μF/35V	CE04W1V100M
△ C257,258	254 6201 002	Electrolytic 7200μF/63V	CE04W—722MC(DL)
C259	253 1181 904	Ceramic 0.01μF/50V	CK45F1H103Z
C307,308	257 0006 927	Ceramic chip 470pF/50V	CC73SL1H471J
C309,310	255 1265 936	Film 0.01 μF/50V	CQ93M1H103J(B)
C311~314	253 4536 909	Ceramic 10pF/50V	CC45SL1H100D
C321,322	255 1265 936	Film 0.01 μF/50V	CQ93M1H103J(B)
C323,324	254 4260 948	Electrolytic 1μF/50V	CE04W1H010M
C325,326	255 1265 936	Film 0.01μF/50V	CQ93M1H103J(B)

Ref. No.	Part No.	Part Name	Remarks
C327~330	254 4263 945	Electrolytic 1μF/100V	CE04W2A010M
C331,332	254 4260 948	Electrolytic 1μF/50V	CE04W1H010M
C333,334	254 4260 922	Electrolytic 0.33μF/50V	CE04W1HR33M
C335,336	257 0004 961	Ceramic chip 100pF/50V	CC73SL1H101J
C337,338	257 0002 992	Ceramic chip 20pF/50V	CC73SL1H200J
C339,340	254 4254 925	Electrolytic 33μF/16V	CE04W1C330M
C341,342	257 0004 961	Ceramic chip 100pF/50V	CC73SL1H101J
△ C353,354	256 1034 979	Metalized 0.1μF/50V	CF93A1H104J
C355,356	255 1265 978	Film 0.022μF/50V	CQ93M1H223J(B)
C357	254 4260 948	Electrolytic 1μF/50V	CE04W1H010M
C358	253 9030 963	Ceramic 0.01μF/25V	CK45=1E103K
C359,360	254 4260 948	Electrolytic 1μF/50V	CE04W1H010M
C401	254 4258 905	Electrolytic 4.7μF/35V	CE04W1V4R7M
C402	257 0012 966	Ceramic chip 0.01μF/50V	CK73F1H103Z
C403	254 4260 948	Electrolytic 1μF/50V	CE04W1H010M
C404,405	253 1181 904	Ceramic 0.01μF/50V	CK45F1H103Z
C406	259 0007 702	For back up 8200μF	SB CAP==822=C
C407	254 4254 909	Electrolytic 10μF/16V	CE04W1C100M
C408	254 4403 734	Electrolytic 4700μF/25V	CE04W1E472MC(SMG)
C409	254 4261 921	Electrolytic 100μF/50V	CE04W1H101M
C410	254 4260 948	Electrolytic 1μF/50V	CE04W1H010M
C451	254 4260 980	Electrolytic 10μF/50V	CE04W1H100M
C452	254 4254 925	Electrolytic 33μF/16V	CE04W1C330M
C453	254 4250 945	Electrolytic 330μF/6.3V	CE04W0J331M
C456	255 1265 936	Film 0.01μF/50V	CQ93M1H103J(B)
C459,460	253 1151 905	Ceramic 4700pF/500V	CK45E2H472P
△ C461	256 1042 903	Metalized 0.1μF/250V	CF93A2E104K
C462	254 4254 938	Electrolytic 47μF/16V	CE04W1C470M
C549	254 4252 927	Electrolytic 47μF/10V	CE04W1A470M
C582	253 4538 949	Ceramic 100pF/50V	CK45SL1H101J
C701,702	257 0003 988	Ceramic chip 47pF/50V	CC73SL1H470J
C703,704	257 0005 944	Ceramic chip 220pF/50V	CC73SL1H221J
C705,706	254 4254 909	Electrolytic 10μF/16V	CE04W1C100M
C709,710	254 4250 929	Electrolytic 100μF/6.3V	CE04W0J101M
C711,712	255 4199 999	Film 0.024μF/50V	CQ92M1H243J(MRZ)
C713,714	255 1265 907	Film 6800pF/50V	CQ93M1H682J(B)
C715,716	254 4254 909	Electrolytic 10μF/16V	CE04W1C100M
C717,718	253 1181 904	Ceramic 0.01μF/50V	CK45F1H103Z
C724	254 4260 948	Electrolytic 1μF/50V	CE04W1H010M
C725	257 0012 982	Ceramic chip 0.022μF/50V	CK73F1H223Z
C801,802	257 0016 962	Ceramic chip 27pF/50V	CC73CH1H270J
C803~805	254 4250 916	Electrolytic 47μF/6.3V	CE04W0J470M
C807,808	257 0003 933	Ceramic chip 30pF/50V	CC73SL1H300J
C809	257 0012 966	Ceramic chip 0.01μF/50V	CK73F1H103Z
C810	254 4250 916	Electrolytic 47μF/6.3V	CE04W0J470M
C811	257 0006 943	Ceramic chip 560pF/50V	CC73SL1H561J

1U-2818 TUNER UNIT ASS'Y

Ref. No.	Part No.	Part Name	Remarks	Ref. No.	Part No.	Part Name	Remarks
OTHERS PARTS GROUP				SEMICONDUCTORS GROUP			
△ AC401	203 3951 004	1P AC outlet		IC501	263 0891 001	IC LA1265(S)	
CB29D	205 0990 045	29P FFC connector base		IC502	263 0439 007	IC LA3401	
CB6A,6C	205 0343 061	6P connector base (KR-PH)		IC503	262 2349 901	IC LM7001JUM	
CB8A	205 0343 087	8P connector base (KR-PH)		IC504	263 0794 001	IC NJM78M12FA(S)	
CB8B,8C	205 0806 090	8P connector base (9115)		TR501	275 0074 902	Transistor 2SK211(Y/GR)	
△ CN2A	203 2349 009	2P inlet		TR502	273 0438 908	Transistor 2SC2413K (Q)	
CN2B	205 0581 085	2P VH connector base	Blue	TR503	269 0157 905	Transistor DTB123EK	Built in resistor
CN2C	203 2377 000	2P DA-DA connector cord		TR504	269 0083 901	Transistor DTA114EK	Built in resistor
CN3A	205 0581 001	2P VH connector base	White	TR505,506	269 0054 901	Transistor DTC144EK	Built in resistor
CN7A	205 0653 078	7P VH connector base		TR507	271 0286 905	Transistor 2SA1515S(R)	
△ F401	206 1075 030	Fuse (2.0A)		TR508	275 0075 901	Transistor 2SK209(Y/GR)	
△ F402	206 1075 043	Fuse (2.5A)		TR509	273 0403 904	Transistor 2SC2712(Y/GR)	
	513 2585 074	Fuse label	for F402	D501	276 0559 909	Diode DAP202K	
	202 0040 909	Fuse clip	for F401, F402	RESISTORS GROUP (Not included carbon film ±5% 1/4W)			
L391,392	235 0104 007	Inductor(1MHz)		R001-016	247 0018 905	Chip 0ohm 1/10W	RM73B—0R0K
L701,702	235 9003 002	FTZ choke coil		R501	247 0004 906	Chip 39ohm 1/10W	RM73B—390J
RL451,452	214 0167 005	Relay(G5Z-2A)		R502	247 0006 946	Chip 390ohm 1/10W	RM73B—391J
RL453	214 0127 003	Relay(RY-12W)		R503	247 0009 985	Chip 10kohm 1/10W	RM73B—103J
TH451	279 0034 067	Posistor	PTH9M04BB222TS2F333	R504	247 0009 927	Chip 5.6kohm 1/10W	RM73B—562J
TP001,002	205 0190 036	3P NH Connector base	TEST POINT	R505	247 0006 920	Chip 330ohm 1/10W	RM73B—331J
XL601	399 0178 007	Crystal	4.332MHz	R506	247 0009 901	Chip 4.7kohm 1/10W	RM73B—472J
XT801	399 0041 901	Resonator	CSA4.00MG	R507	247 0005 989	Chip 220ohm 1/10W	RM73B—221J
	205 0484 001	8P speaker terminal		R508,509	247 0006 920	Chip 330ohm 1/10W	RM73B—331J
	203 0475 056	1P contact Ass'y	D-D	R510	247 0006 988	Chip 560ohm 1/10W	RM73B—561J
JK101	204 8485 012	4P pin jack(S-GND) AU		R511	247 0012 927	Chip 100kohm 1/10W	RM73B—104J
JK102	204 8486 011	6P pin jack(S-GND) AU		R512	247 0009 914	Chip 5.1kohm 1/10W	RM73B—512J
JK103	204 8485 012	4P pin jack(S-GND) AU		R513	247 0005 905	Chip 100ohm 1/10W	RM73B—101J
	461 0415 007	Rubber sheet	for C582	R514	247 0008 986	Chip 3.9kohm 1/10W	RM73B—392J
				R515	247 0006 946	Chip 390ohm 1/10W	RM73B—391J
				R516	247 0005 947	Chip 150ohm 1/0W	RM73B—151J
				R517	247 0009 985	Chip 10kohm 1/10W	RM73B—103J
				R518	247 0018 905	Chip 0ohm 1/10W	RM73B—0R0K
				R519	247 0009 901	Chip 4.7kohm 1/10W	RM73B—472J
				R520	247 0004 980	Chip 82ohm 1/10W	RM73B—820J
				R521	247 0008 944	Chip 2.7kohm 1/10W	RM73B—272J
				R522	247 0011 902	Chip 33kohm 1/10W	RM73B—333J
				R523-525	247 0009 985	Chip 10kohm 1/10W	RM73B—103J
				R526	247 0008 957	Chip 3kohm 1/10W	RM73B—302J
				R527	247 0011 986	Chip 68kohm 1/10W	RM73B—683J
				R528	247 0009 943	Chip 6.8kohm 1/10W	RM73B—682J
				R529	247 0008 960	Chip 3.3kohm 1/10W	RM73B—332J
				R530	247 0012 927	Chip 100kohm 1/10W	RM73B—104J
				R532	247 0009 985	Chip 10kohm 1/10W	RM73B—103J
				R533	247 0007 945	Chip 1kohm 1/10W	RM73B—102J
				R534	247 0011 915	Chip 36kohm 1/10W	RM73B—363J
				R535	247 0010 974	Chip 24kohm 1/10W	RM73B—243J
				R536	247 0012 985	Chip 180kohm 1/10W	RM73B—184J

Ref. No.	Part No.	Part Name	Remarks	Ref. No.	Part No.	Part Name	Remarks
R537	247 0012 998	Chip 200kohm 1/10W	RM73B--204J	OTHERS PARTS GROUP			
R538	247 0012 985	Chip 180kohm 1/10W	RM73B--184J	CF501,502	261 0064 007	Ceramic filter	SFT10.7MS2
R539	247 0012 998	Chip 200kohm 1/10W	RM73B--204J	CF504	261 0101 009	Ceramic filter	BFU450C4N
R540,541	247 0008 902	Chip 1.8kohm 1/10W	RM73B--182J	CN8B,8C	205 0805 091	8P connector socket	
R542,543	247 0009 901	Chip 4.7kohm 1/10W	RM73B--472J	FE501	216 0065 006	Front end	
R544	247 1007 986	Chip 1.5kohm 1/8W	RM73B2B152J	T501	231 1913 004	MW antenna OSC coil	
R545	247 0009 985	Chip 10kohm 1/10W	RM73B--103J	T502	231 2099 008	FM DET trans	
R546	247 0012 927	Chip 100kohm 1/10W	RM73B--104J	T503	231 3904 008	AM IFT	
CAPACITORS GROUP				T504	232 9010 009	Antibirdie filter	
C501-506	257 0012 966	Chip(Ceramic) 0.01µF/50V	CK73F1H103Z	T505,506	232 0085 004	LPF	
C507	257 0002 947	Chip(Ceramic) 12pF/50V	CC73SL1H120J	XL502	261 0103 007	Resonator	CSB456F11
C508	254 4254 909	Electrolytic 10µF/16V	CE04W1C100M	XL503	399 0075 003	Crystal	7.2MHz
C509	257 0004 961	Chip(Ceramic) 100pF/50V	CC73SL1H101J		205 0847 004	3P antenna terminal(PAL/F)	
C510	257 0012 966	Chip(Ceramic) 0.01µF/50V	CK73F1H103Z		001 0036 064	VINYL wire	with R581
C511	254 4260 906	Electrolytic 0.1µF/50V	CE04W1H0R1M		461 0415 007	Rubber sheet	for R581
C513	254 3056 917	Electrolytic 1µF/50V (Non-polar)	CE04D1H010MBP		205 0003 107	3T LUG	with C382
C514	257 0012 982	Chip(Ceramic) 0.022µF/50V	CK73F1H223Z		415 0309 026	P.V.C. Tube (φ1, ℓ=20)	for C382
C515,516	257 0002 976	Chip(Ceramic) 16pF/50V	CC73SL1H160J				
C517	254 4254 938	Electrolytic 47µF/16V	CE04W1C470M				
C518,519	257 0012 966	Chip(Ceramic) 0.01µF/50V	CK73F1H103Z				
C520	254 4260 922	Electrolytic 0.33µF/50V	CE04W1HR33M				
C521	257 0012 966	Chip(Ceramic) 0.01µF/50V	CK73F1H103Z				
C522	254 4256 936	Electrolytic 47µF/25V	CE04W1E470M				
C523	254 4260 948	Electrolytic 1µF/50V	CE04W1H010M				
C524	254 4260 964	Electrolytic 3.3µF/50V	CE04W1H3R3M				
C525	257 0012 982	Chip(Ceramic) 0.022µF/50V	CK73F1H223Z				
C526	257 0012 966	Chip(Ceramic) 0.01µF/50V	CK73F1H103Z				
C527	254 4260 948	Electrolytic 1µF/50V	CE04W1H010M				
C528	254 4254 909	Electrolytic 10µF/16V	CE04W1C100M				
C529	257 1013 951	Chip(Ceramic) 0.047µF/25V	CK73F1E473K				
C530	254 4254 912	Electrolytic 22µF/16V	CE04W1C220M				
C531	257 0004 961	Chip(Ceramic) 100pF/50V	CC73SL1H101J				
C532	254 4260 948	Electrolytic 1µF/50V	CE04W1H010M				
C533	254 4260 919	Electrolytic 0.22µF/50V	CE04W1HR22M				
C534	254 4260 948	Electrolytic 1µF/50V	CE04W1H010M				
C535,536	257 0012 966	Chip(Ceramic) 0.01µF/50V	CK73F1H103Z				
C537	254 4254 912	Electrolytic 22µF/16V	CE04W1C220M				
C538	254 4254 938	Electrolytic 47µF/16V	CE04W1C470M				
C539,540	257 0005 960	Chip(Ceramic) 270pF/50V	CC73SL1H271J				
C541	254 4260 951	Electrolytic 2.2µF/50V	CE04W1H2R2M				
C545	253 0012 966	Chip(Ceramic) 0.01µF/50V	CK73F1H103Z				
C548	254 4260 951	Electrolytic 2.2µF/50V	CE04W1H2R2M				
C550,551	254 4260 948	Electrolytic 1µF/50V	CE04W1H010M				
C553,554	257 0012 966	Chip(Ceramic) 0.01µF/50V	CK73F1H103Z				
C555	256 1058 939	Metalized 0.047µF/50V	CF93A1H473J(JL)				
C561	257 0012 966	Chip(Ceramic) 0.01µF/50V	CK73F1H103Z				
C581	253 1181 904	Ceramic 0.01µF/50V	CK45F1H103Z				
C583	253 4538 046	Ceramic 100pF/50V	CC45SL1H101J				

1U-3204 DISPLAY UNIT ASS'Y

Ref. No.	Part No.	Part Name	Remarks	Ref. No.	Part No.	Part Name	Remarks	
SEMICONDUCTORS GROUP				CAPACITORS GROUP				
IC601	262 2249 001	IC TMP87CM71F-6348		C300	257 0012 966	Ceramic chip 0.01 µF/50V	CK73F1H103Z	
IC602	263 0905 900	IC BA6208F		C301,302	257 0006 943	Ceramic chip 560 pF/50V	CC73SL1H561J	
ZD651	276 0654 901	Zener diode DTZ8.2B		C303,304	255 1265 978	Mylar film 0.022 µF/50V	CQ93M1H223J(B)	
FL401	393 8020 007	VFD(14-BT-39GK)		C361,362	257 0004 961	Ceramic chip 100 pF/50V	CC73SL1H101J	
RESISTORS GROUP				C363,364	255 1265 981	Mylar film 0.027 µF/50V	CQ93M1H273J(B)	
R301,302	247 0011 928	Carbon chip 39kohm 1/10W	RM73B--393J	C365,366	256 1058 984	Metalized 0.12 µF/50V	CF93A1H124J(JL)	
R303,304	247 0009 943	Carbon chip 6.8kohm 1/10W	RM73B--682J	C367,368	255 1264 924	Mylar film 1500 pF/50V	CQ93M1H152J(B)	
R361,362	247 0011 973	Carbon chip 62kohm 1/10W	RM73B--623J	C369,370	255 1265 936	Mylar film 0.01 µF/50V	CQ93M1H103J(B)	
R363,364	247 0009 998	Carbon chip 11kohm 1/10W	RM73B--113J	C372	257 0012 966	Ceramic chip 0.01 µF/50V	CK73F1H103Z	
R365,366	247 0008 931	Carbon chip 2.4kohm 1/10W	RM73B--242J	▲ C411	253 8014 702	Ceramic 0.01 µF/400V(AC)	CK45F2GAC103MC	
R367,368	247 0013 984	Carbon chip 470kohm 1/10W	RM73B--474J	C651	257 0012 966	Ceramic chip 0.01 µF/50V	CK73F1H103Z	
R369,370	247 0010 945	Carbon chip 18kohm 1/10W	RM73B--183J	C652	254 4300 963	Electrolytic 100 µF/6.3V	CE04W0J101M(SRE)	
R371,372	247 0009 943	Carbon chip 6.8kohm 1/10W	RM73B--682J	C653	257 0012 966	Ceramic chip 0.01 µF/50V	CK73F1H103Z	
R373,374	247 0006 917	Carbon chip 300ohm 1/10W	RM73B--301J	C655	254 4299 964	Electrolytic 47 µF/16V	CE04W1C470M(SRE)	
R375,376	247 0011 944	Carbon chip 47kohm 1/10W	RM73B--473J	C657	257 0012 982	Ceramic chip 0.022 µF/50V	CK73F1H223Z	
R379,380	247 0009 901	Carbon chip 4.7kohm 1/10W	RM73B--472J	C666	257 0004 961	Ceramic chip 100 pF/50V	CC73SL1H101J	
R651	247 1009 900	Carbon chip 4.7kohm 1/8W	RM73B2B472J	OTHER PARTS GROUP				
R652-657	247 0009 985	Carbon chip 10kohm 1/10W	RM73B--103J	CB2B	205 0581 085	2P VH connector base	Blue	1
R665	247 0007 945	Carbon chip 1kohm 1/10W	RM73B--102J	CB8D	205 0919 026	8P JQ sockt (Side)		1
R666	247 0005 976	Carbon chip 200ohm 1/10W	RM73B--201J	CB10A	205 0375 000	10P connector base (KR-PH)		1
R667	247 0006 917	Carbon chip 300ohm 1/10W	RM73B--301J	CN6A,6C	205 0355 062	6P KR connector base (L)		2
R668	247 0007 945	Carbon chip 1kohm 1/10W	RM73B--102J	CN8A	205 0355 088	8P KR connector base (L)		1
R669	247 0005 976	Carbon chip 200ohm 1/10W	RM73B--201J	CN8D	205 0408 045	8P JQ connector		1
R670	247 0006 917	Carbon chip 300ohm 1/10W	RM73B--301J	CN10A	205 0480 005	10P KR connector base (L)		1
R671	247 0007 945	Carbon chip 1kohm 1/10W	RM73B--102J	CN29D	205 0990 045	29P FFC connector base		1
R672	247 0005 976	Carbon chip 200ohm 1/10W	RM73B--201J	G003	203 0418 071	1P SIN cord Ass'y		1
R673	247 0006 917	Carbon chip 300ohm 1/10W	RM73B--301J	JK201	204 8341 004	Headphone jack		1
R674	247 0006 975	Carbon chip 510ohm 1/10W	RM73B--511J	RM601	499 2023 007	Remocon sensor	SBX1810-52	1
R675,676	247 0007 945	Carbon chip 1kohm 1/10W	RM73B--102J	SW601-603	212 5604 910	Tact switch		3
R677	247 0005 976	Carbon chip 200ohm 1/10W	RM73B--201J	SW605-617	212 5604 910	Tact switch		13
R678	247 0006 917	Carbon chip 300ohm 1/10W	RM73B--301J	▲ SW401	212 1101 006	Power switch (TV-5)		1
R679	247 0006 975	Carbon chip 510ohm 1/10W	RM73B--511J	SW302,303	212 1140 009	Push switch (ESB6440)		2
R680	247 0007 945	Carbon chip 1kohm 1/10W	RM73B--102J	XL651	399 0261 901	Resonator	DCRH4.00M	1
R681-683	247 0009 985	Carbon chip 10kohm 1/10W	RM73B--103J		461 0877 014	Rubber sheet	for FL401	2
R685	247 0008 957	Carbon chip 3kohm 1/10W	RM73B--302J		415 0299 000	Condenser cover	for C411	1
VR301	211 0841 018	Variable resistor 100kohm	V14P22FW104K		203 5103 019	3P SAN-SAN connector cord	CB3C--CN3C	1
VR302	211 0831 002	Variable resistor 100kohm	V1620V25F=104R(MG)		414 0740 006	Shield plate		1
VR303	211 0842 017	Variable resistor 250kohm	V14P22FC254K					
VR304	211 0843 016	Variable resistor 50kohm	V14P22FC503K					
VR307	211 9131 004	Variable resistor 100kohm	V14P22FB104K					

PRINTED WIRING BOARDS

1

2

3

4

5

6

7

8

1U-2817-1 MAIN UNIT ASS'Y

1U-2817-2


A

B


C

D

E

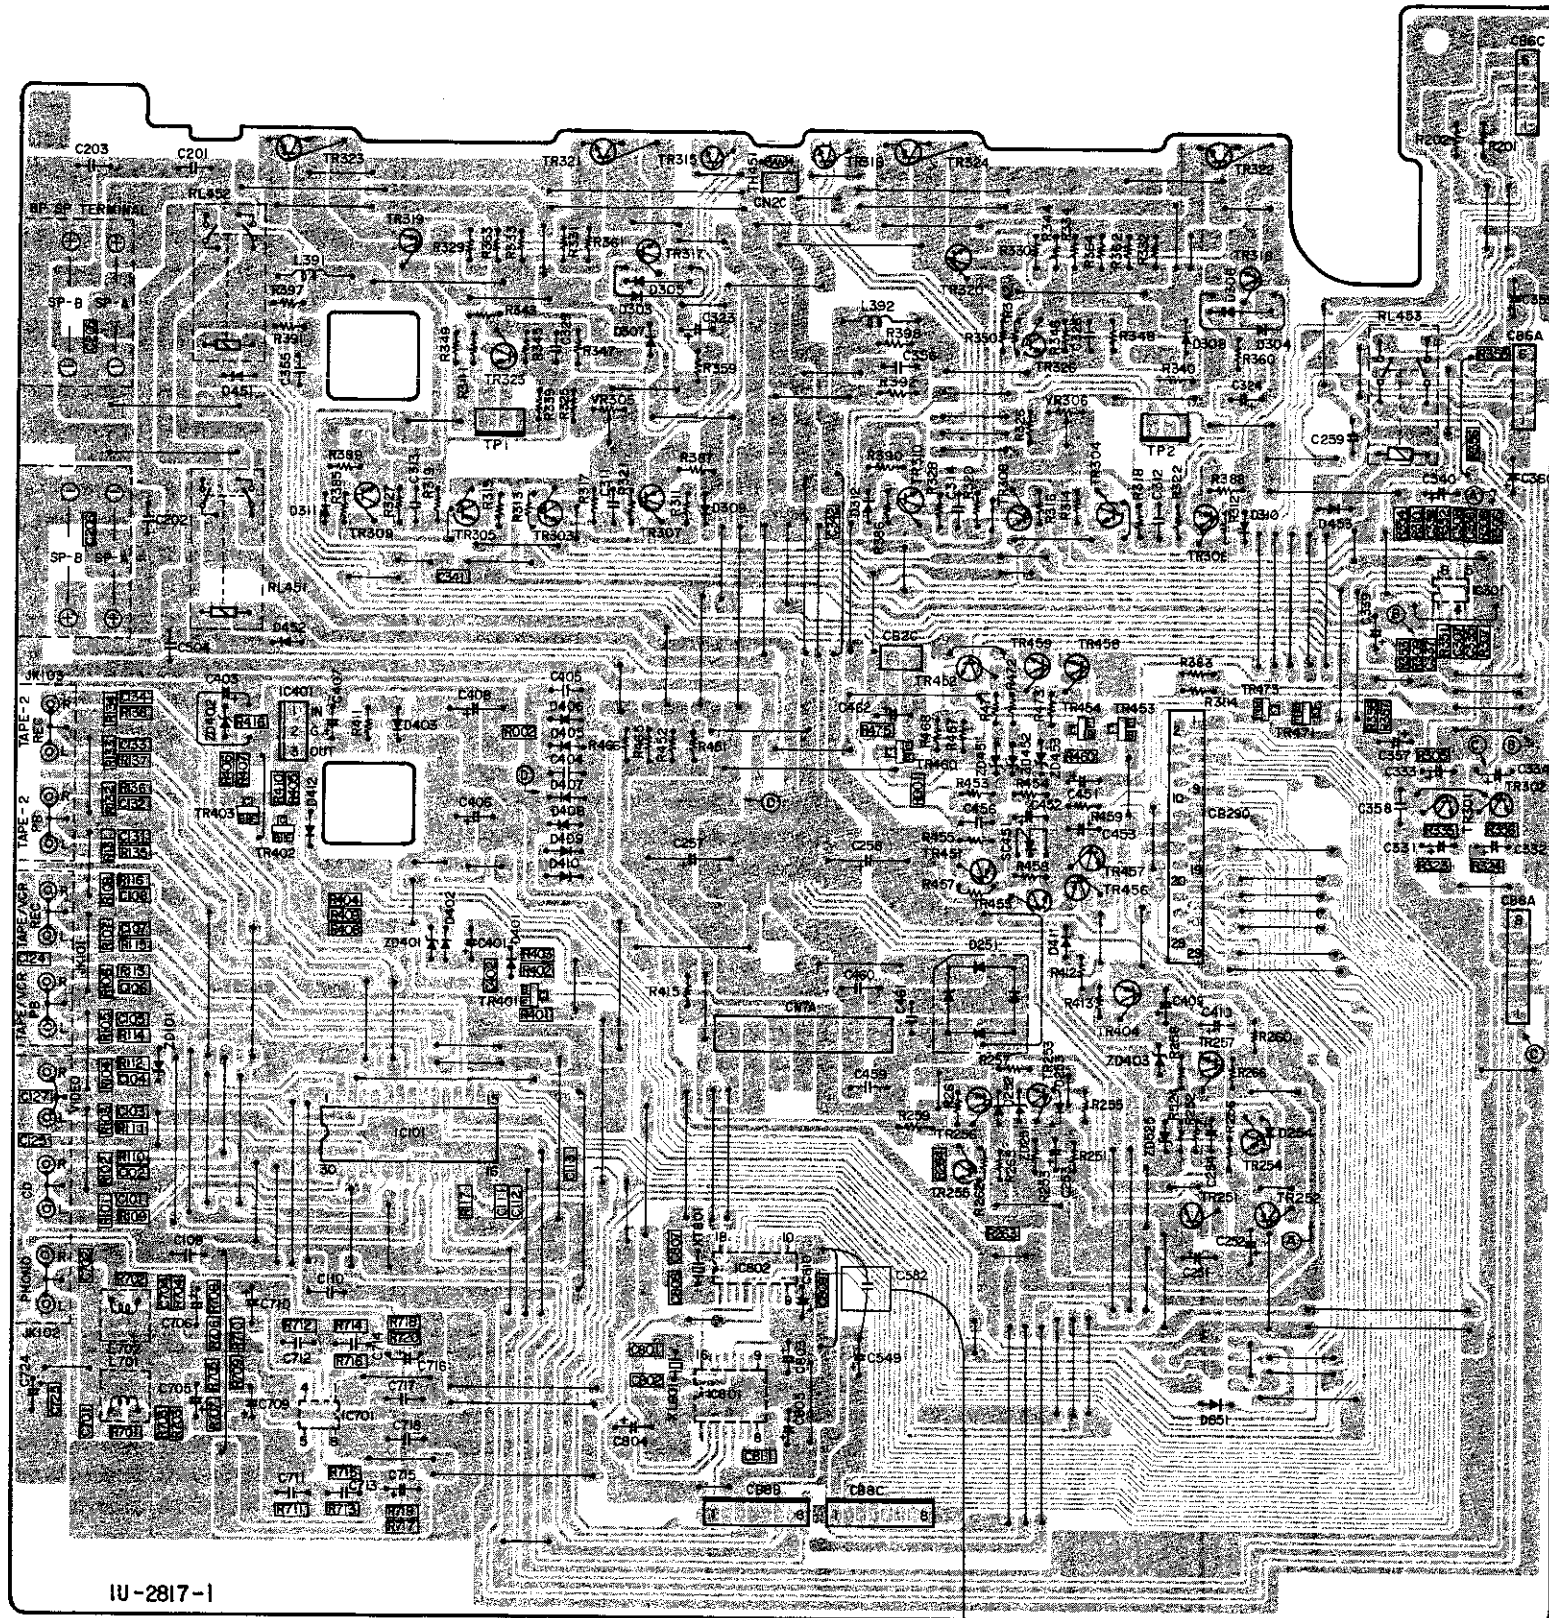

1U-2817-1





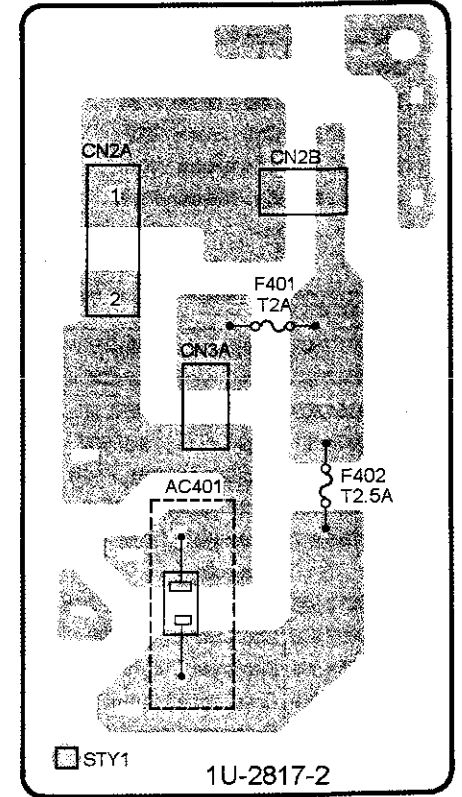


1U-2817-2


RUBBER SHEET

1 2 3 4 5 6 7 8

1U-3204 DISPLAY UNIT ASS'Y

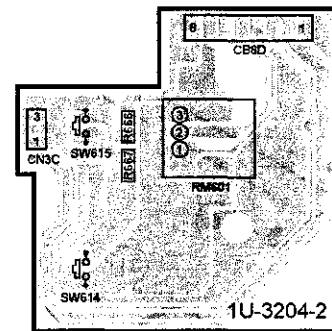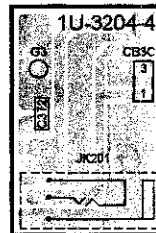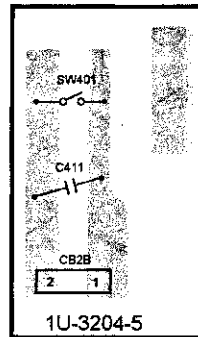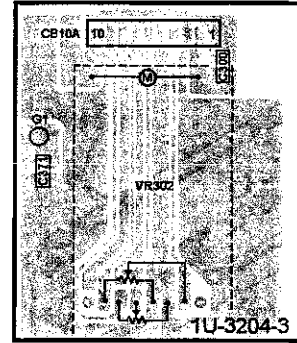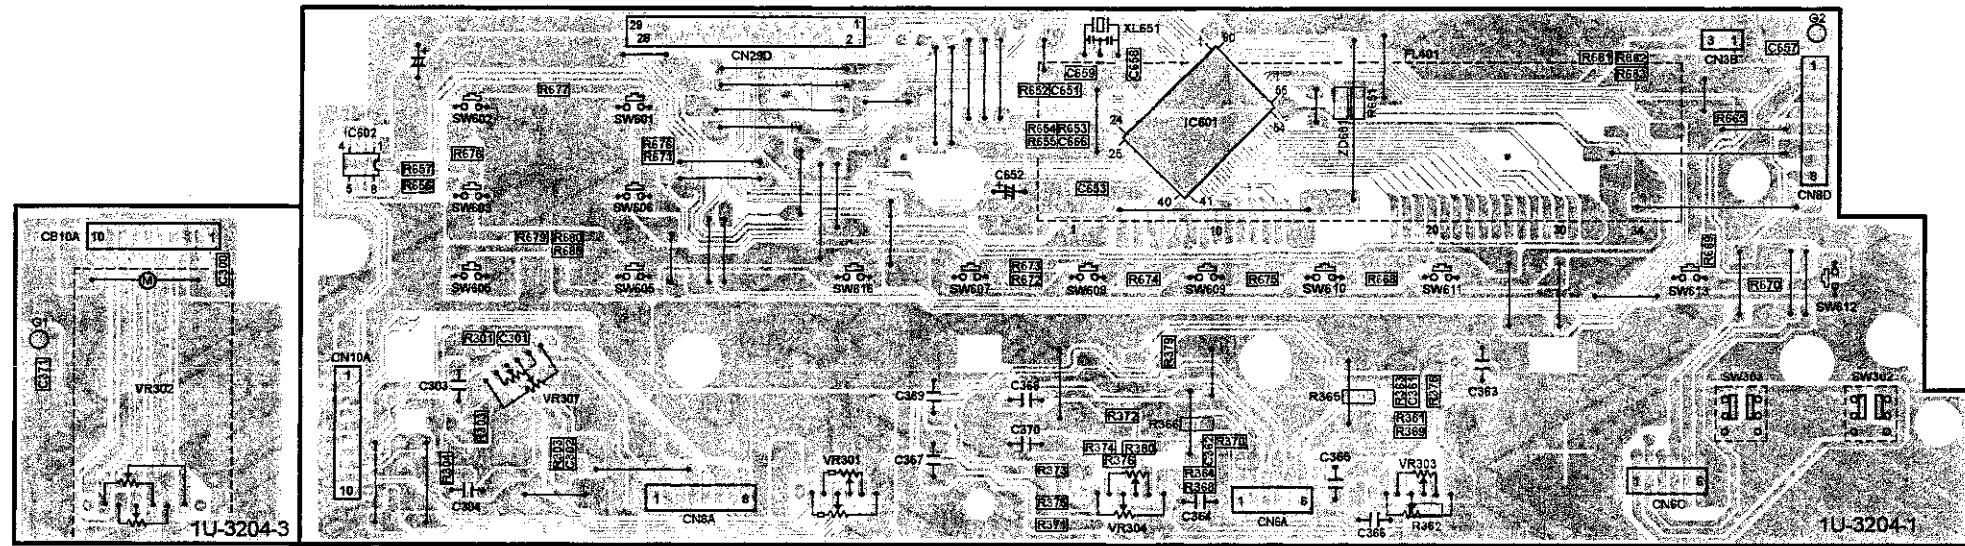


1U-2818 TUNER UNIT ASS'Y

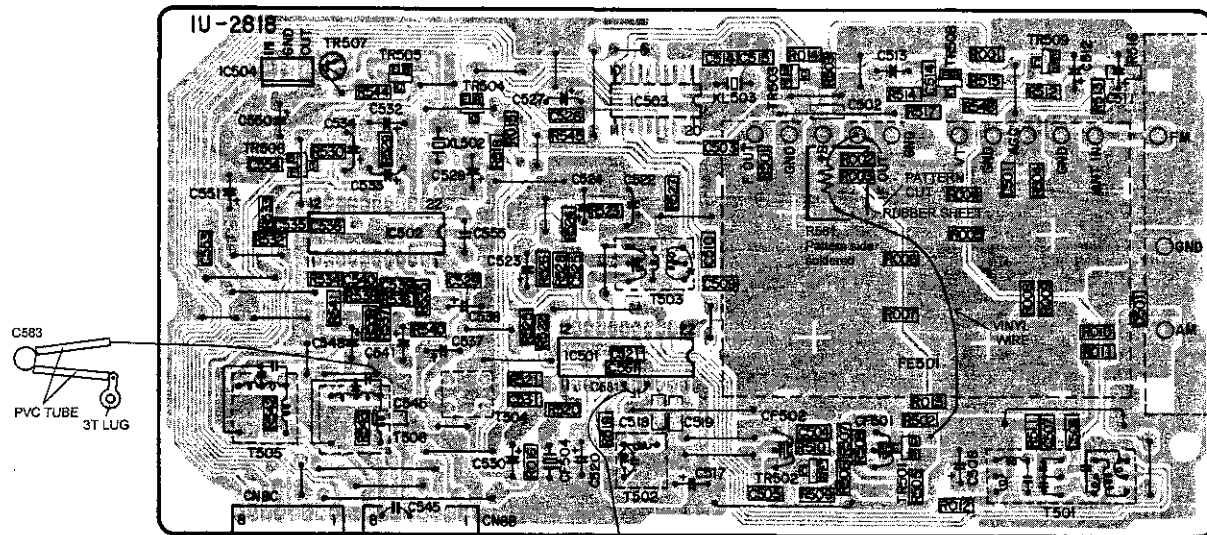


Soldered to pin 4.7 of IC501 (Component side)

A B C D E

EXPLODED VIEW

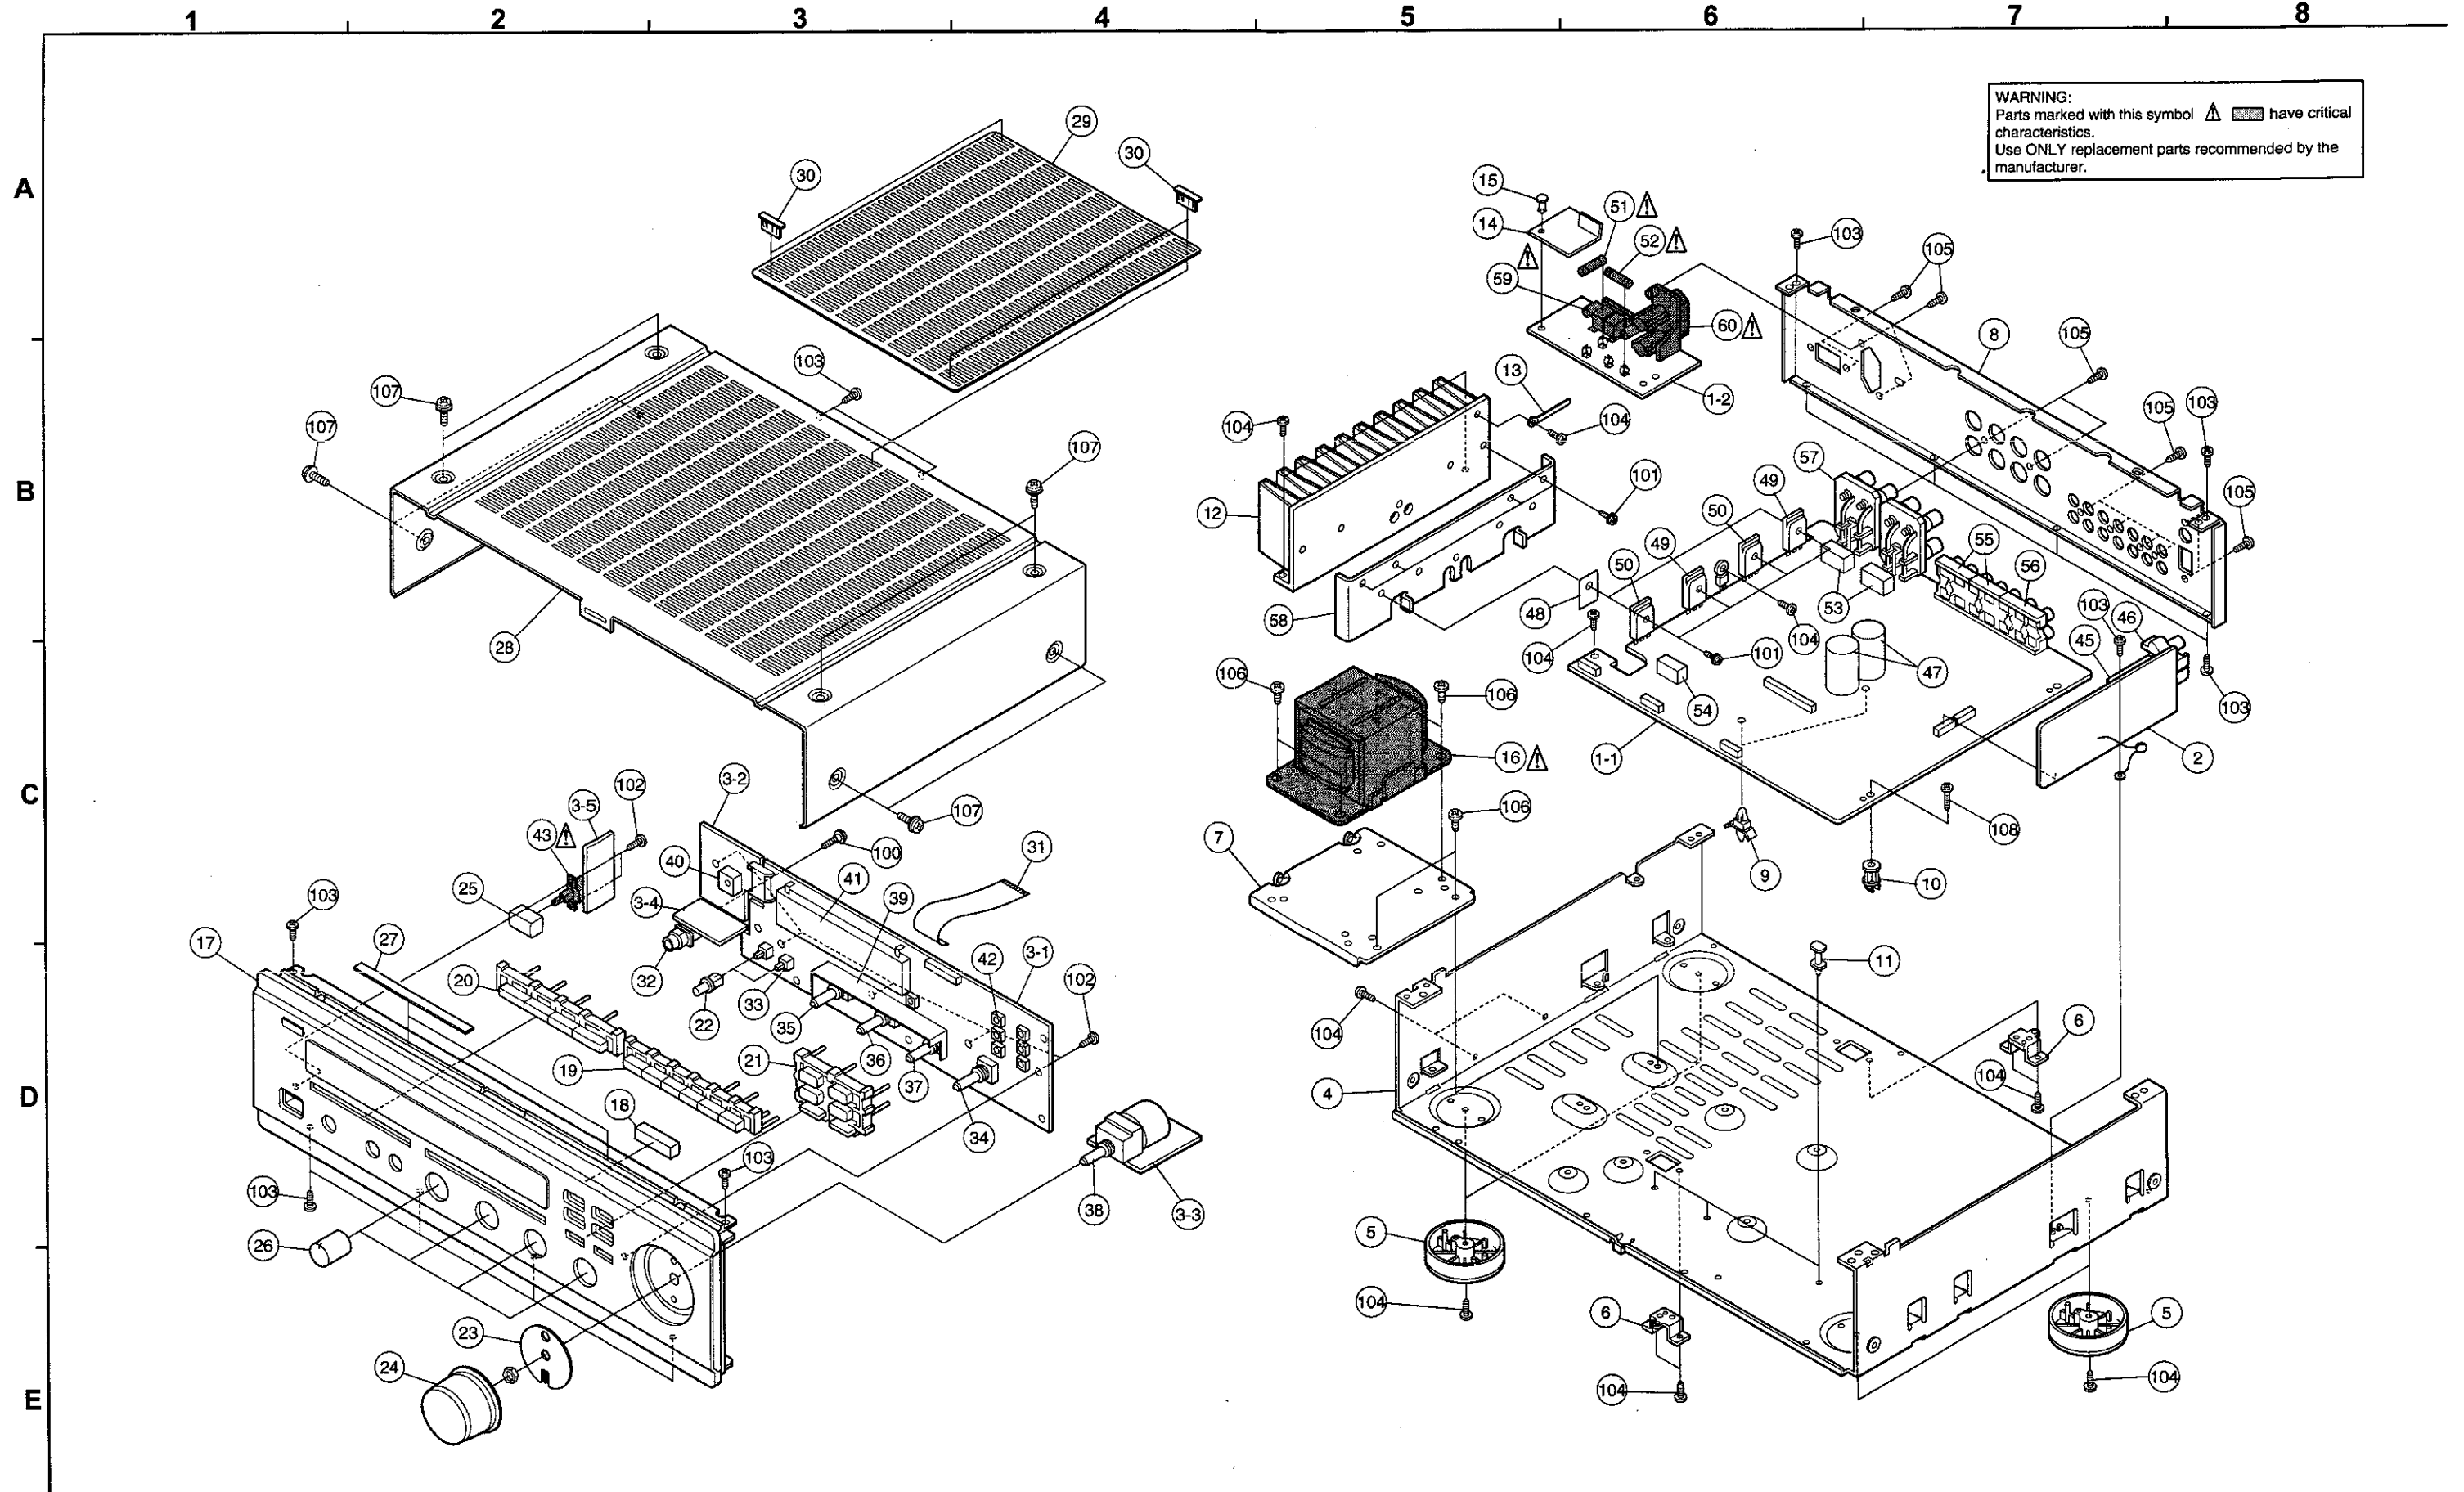

WARNING:
Parts marked with this symbol  have critical characteristics.
Use ONLY replacement parts recommended by the manufacturer.

PARTS LIST OF EXPLODED VIEW

Ref. No.	Part No.	Part Name	Remarks	Q'ty	Ref. No.	Part No.	Part Name	Remarks	Q'ty	
1	1U-2817G	Main unit Ass'y		1	36	211 0843 016	Variable resistor 50kohm	VR304	1	
		1-1	Main unit		37	211 0841 018	Variable resistor 100kohm	VR301	1	
		1-2	Power unit		38	211 0831 002	Variable resistor 100kohm	VR302	1	
		2	1U-2818	Tuner unit Ass'y	1	39	414 0740 006	Shield plate		1
		3	1U-3204	Display unit Ass'y	1	40	499 2023 007	Remocon sensor	SBX1810-52	1
3-1		Display unit		1	41	393 8020 007	VFD(14-BT-39GK)	FL401	1	
		3-2	Display B unit		42	212 5604 910	Tact switch		16	
		3-3	Volume unit		Δ	43	212 1181 036	Power switch (TV-5)	SW401	1
		3-4	H/P unit		45	216 0065 006	Front end		1	
		3-5	Power SW unit		46	205 0847 004	3P antenna terminal(PAL/F)		1	
4	411 1402 108	Chassis		47	254 6201 002	Electrolytic 7200μF/63V	C257,258	2		
5	104 0194 205	Foot Ass'y		48	415 0234 007	Insulating sheet		4		
6	412 4504 006	Radiator bracket		49	271 0240 006	Transistor 2SA1491(O/P/Y)(Z)	TR323,324	2		
7	412 4340 202	Trans bracket		50	273 0389 002	Transistor 2SC3855(O/P/Y)(Z)	TR321,322	2		
8	105 1312 102	Back panel		Δ	51	206 1075 030	Fuse(2.0A)	F401	1	
9	449 0033 036	Locking card spacer		Δ	52	206 1075 043	Fuse(2.5A)	F402	1	
10	412 3548 005	P.W.B catcher		53	214 0167 005	Relay(G5Z-2A)	RL451,452	2		
11	412 2814 028	Card spacer (L=10)		54	214 0127 003	Relay(RY-12W)	RL453	1		
12	417 0529 006	Power radiator		55	204 8485 012	4P pin jack (S-GND)AU		2		
13	445 0048 003	Cord holder(L=76)		56	204 8486 011	6P pin jack (S-GND)AU		1		
14	415 0824 006	Insulating sheet		57	205 0484 001	8P speaker terminal		1		
15	477 0096 007	Push rivet		58	417 0520 102	Sub radiator		1		
16	233 6194 002	Power trans.		Δ	59	203 2349 009	2P inlet	CN2A	1	
17	144 2660 104	Front panel Ass'y	Black model	1	Δ	60	203 3961 004	1P AC outlet	AC401	1
17	144 2660 117	Front panel Ass'y	Gold model	1	★	61	445 8004 007	Wire clasper		1
18	461 1034 005	Rubber sheet		1	Δ ★	62	203 5132 093	3P VH connector cord		1
19	113 9325 008	Series knob (A)	Black model	1	★	63	204 0389 019	6P PH connector cord		2
19	113 9325 024	Series knob (A)	Gold model	1	★	64	204 2661 078	8P PH-PH connector cord		1
20	113 9326 007	Series knob (B)	Black model	1	★	65	204 2572 031	10P PH connector cord		1
20	113 9326 023	Series knob (B)	Gold model	1	★	66	513 1642 002	NO. sheet		1
21	113 9324 274	Function knob	Black model	1						
21	113 9324 261	Function knob	Gold model	1						
22	113 9323 000	Push knob (SP)	Black model	2						
22	113 9323 039	Push knob (SP)	Gold model	2						
23	412 9521 013	Volume plate		1						
24	112 9123 139	Knob Ass'y(M)	Black model	1						
24	112 9123 126	Knob Ass'y(M)	Gold model	1						
25	113 9213 000	Power knob (P) Ass'y	Black model	1						
25	113 9213 084	Power knob (P) Ass'y	Gold model	1						
26	112 0739 001	Knob (MARU)	Black model	4						
26	112 0739 027	Knob (MARU)	Gold model	4						
27	461 0501 005	Rubber sheet		2						
28	102 0601 006	Top cover	Black model	1				Black model	8	
28	102 0601 019	Top cover	Gold model	1				Gold model	8	
29	414 0880 005	Safety cover	Black model	1					1	
29	414 0880 018	Safety cover	Gold model	1						
30	449 0139 105	Cover holder		4						
31	009 0109 021	29P FFC cable		1						
32	204 8341 004	Headphone jack	JK201	1						
33	212 1140 009	Push switch (ESB6440)	SW302,303	2						
34	211 9131 004	Variable resistor 100kohm	VR307	1						
35	211 0842 017	Variable resistor 250kohm	VR303	1						
SCREWS & NUTS										
					100	477 0262 006	Special screw		1	
					101	473 8007 009	Cup screw 3 × 12		8	
					102	473 7500 044	Screw 3 × 8 CBTS(P)-B		7	
					103	473 7015 018	Screw 3 × 8 CBTS(S)-B		14	
					104	473 7002 018	Screw 3 × 8 CBTS(S)-Z		16	
					105	473 8057 004	Screw 3 × 10 CBTS(B)-B		12	
					106	473 7004 016	Screw 4 × 6 CBTS(S)-Z		6	
					107	477 0263 005	3P. swelling screw	Black model	8	
					107	477 0263 018	3P. swelling screw	Gold model	8	
					108	473 7501 027	Screw 3 × 16 CBTS (P)-Z		1	

Ref. No.	Part No.	Part Name	Remarks	Q'ty
PACKING & ACCESSORIES (Not included EXPLODED VIEW.)				
201	505 0283 018	Envelope		1
202	511 3419 004	Instruction manual(8)		1
203	515 0671 724	S.S. list (EX)		1
204	231 1914 003	Loop antenna		1
205	395 0023 008	FM antenna Ass'y		1
206	399 0242 001	Remote control unit	RC-174	1
207	206 2108 003	AC connector with plug		1
208	505 0131 050	Cabinet cover		1
209	503 1281 000	Cushion		2
210	501 2044 004	Carton case		1
211	517 1400 000	E2 POS label	Black model	1
211	517 1400 013	E2 POS label	Gold model	1
212	513 9111 001	Color label (gold)	Gold model	2
213	513 1389 006	Control card		1

SCHEMATIC DIAGRAMS (1/2)

1


2

3

4

5

6

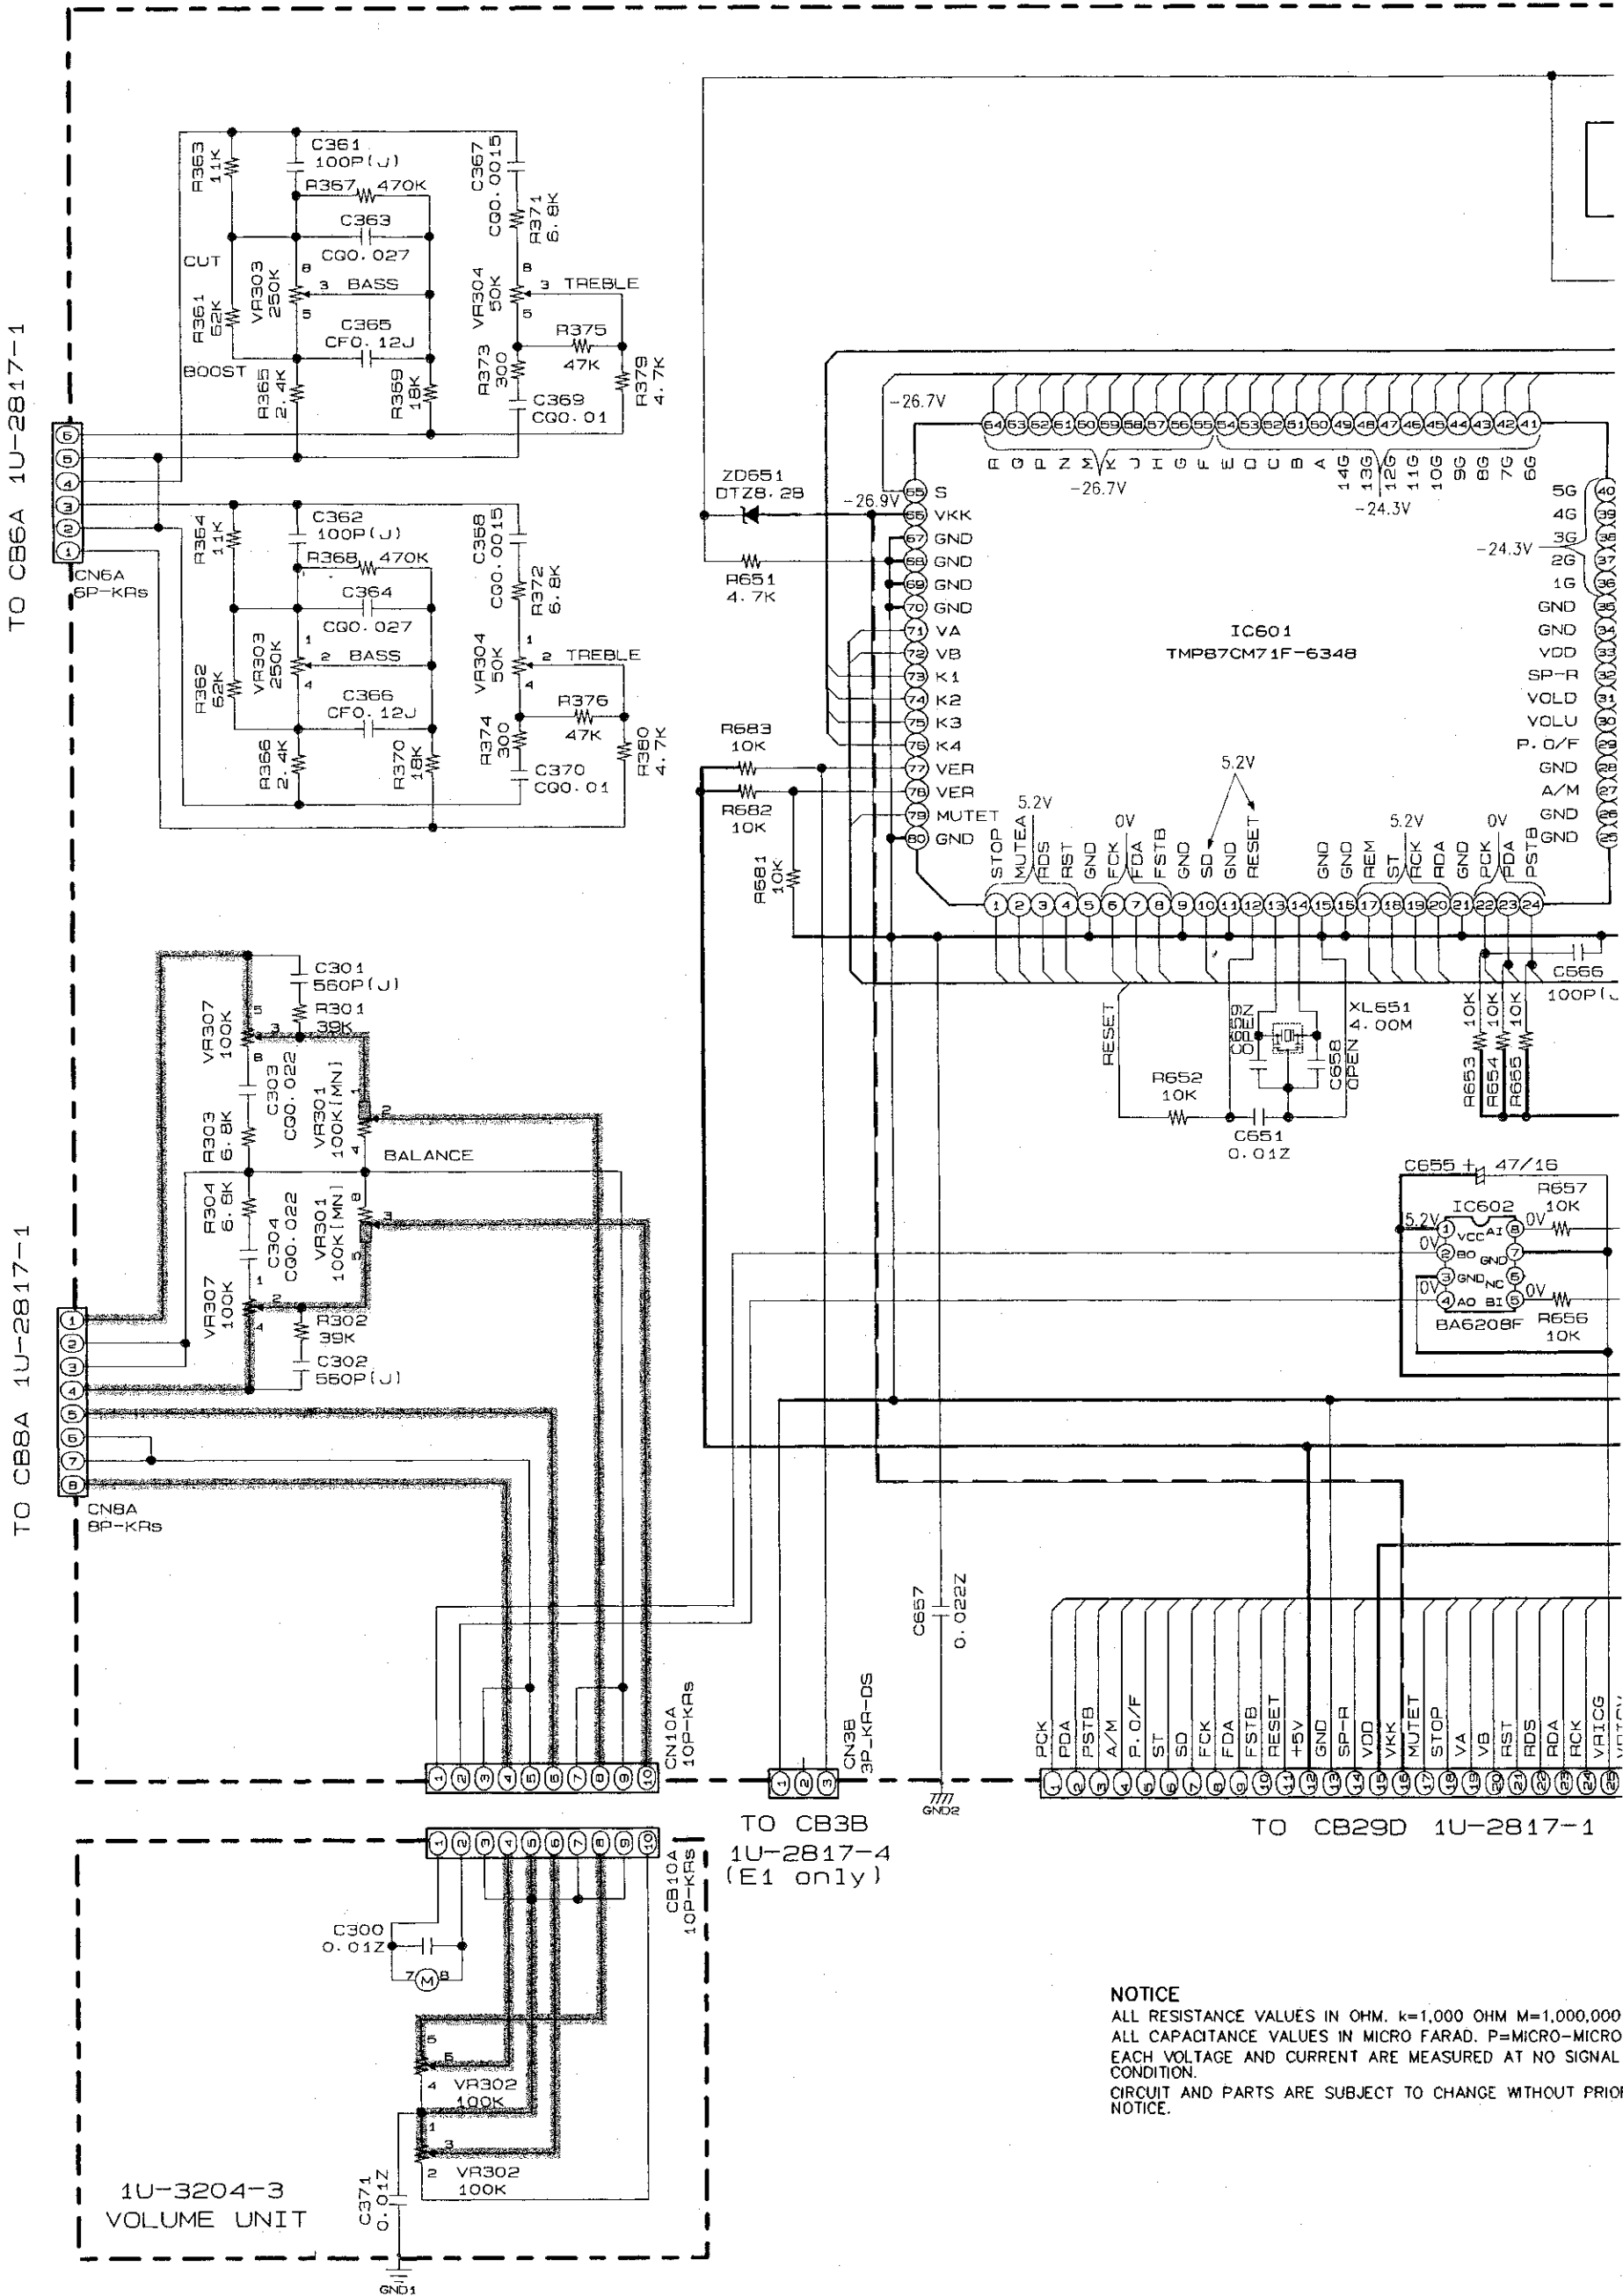

NOTICE
 ALL RESISTANCE VALUES IN OHM. k=1,000 OHM M=1,000,000
 ALL CAPACITANCE VALUES IN MICRO FARAD. P=MICRO-MICRO
 EACH VOLTAGE AND CURRENT ARE MEASURED AT NO SIGNAL
 CONDITION.
 CIRCUIT AND PARTS ARE SUBJECT TO CHANGE WITHOUT PRIOR
 NOTICE.

6 7 8 9 10 11

A

B

C


D

E

F

G

H

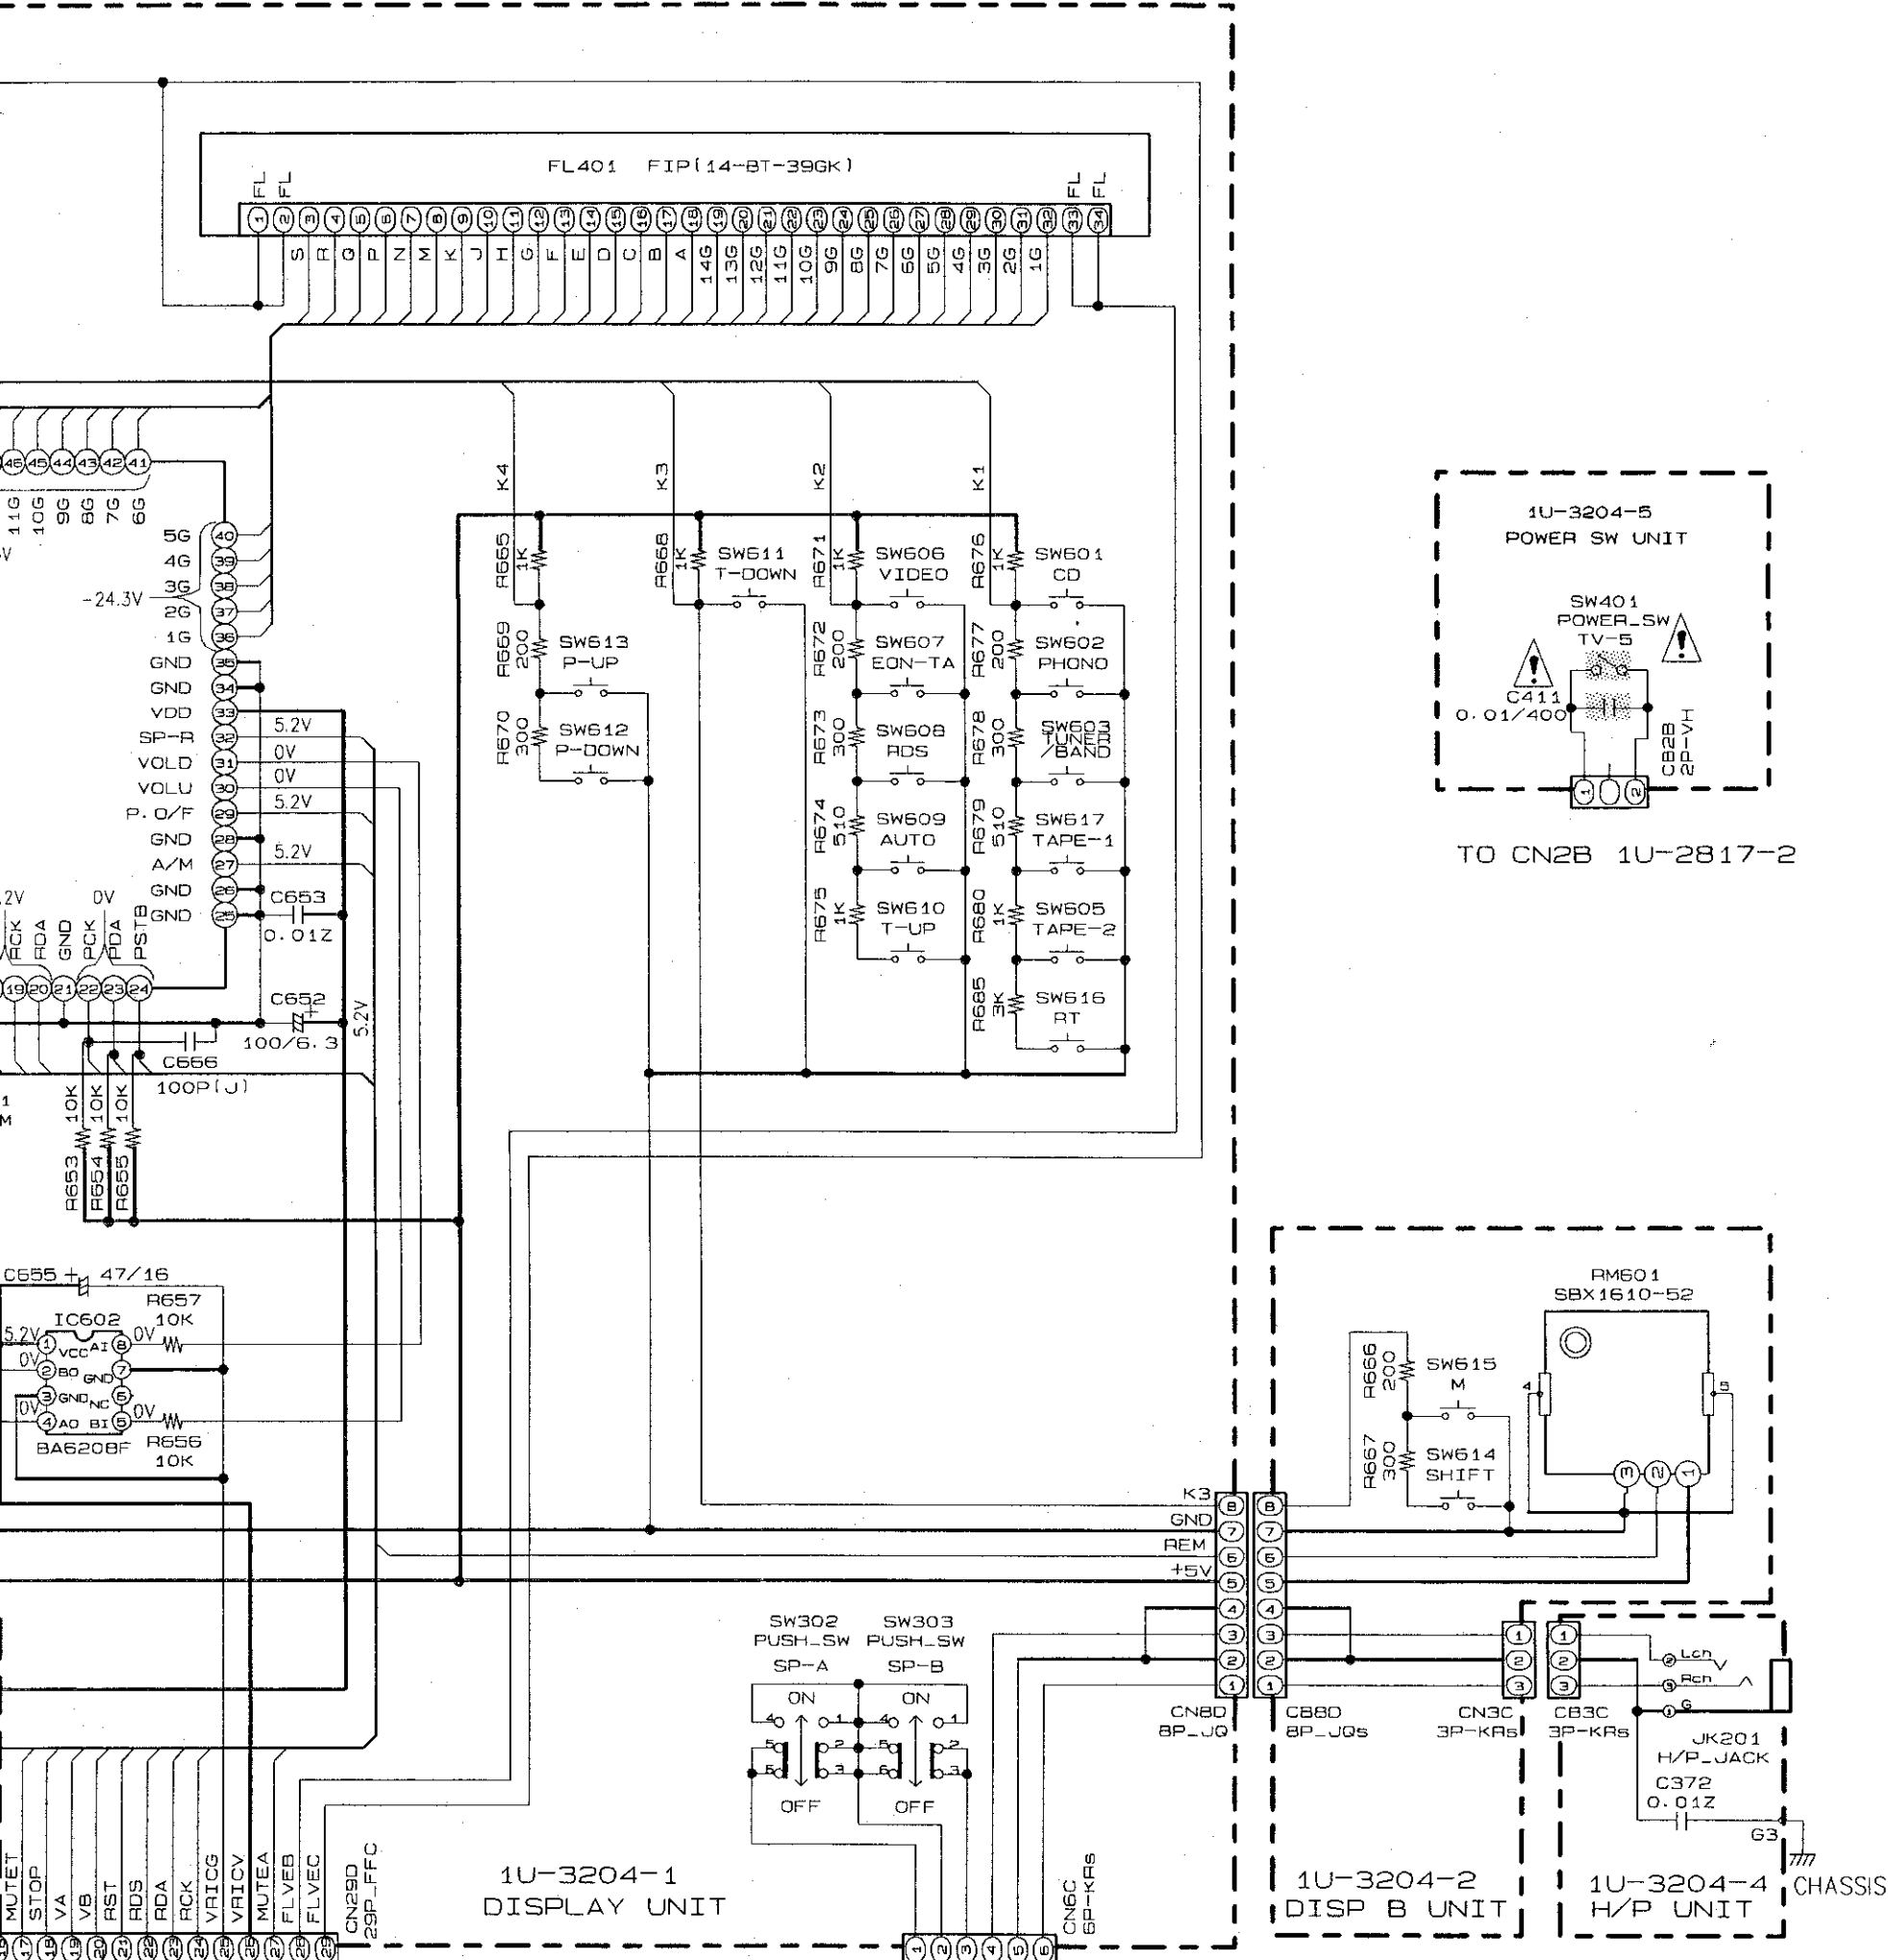


1U-2817-1

TO CB6C 1U-2817-1

————— +B LINE
 - - - - - -B LINE
 ~~~~~ SIGNAL LINE

**WARNING:**

Parts marked with this symbol  have critical characteristics. Use ONLY replacement parts recommended by the manufacturer.

**CAUTION:**

Before returning the unit to the customer, make sure you make either (1) a leakage current check or (2) a line to chassis resistance check. If the leakage current exceeds 0.5 milliamps, or if the resistance from chassis to either side of the power cord is less than 460 kohms, the unit is defective.

**WARNING:**

DO NOT return the unit to the customer until the problem is located and corrected.

R=1,000 OHM M=1,000,000 OHM  
F=100 FARAD, P=MICRO-MICRO FARAD  
RESISTANCE MEASURED AT NO SIGNAL INPUT

DO NOT CHANGE WITHOUT PRIOR



# SCHEMATIC DIAGRAMS (2/2)

1



2

3

4

5

6

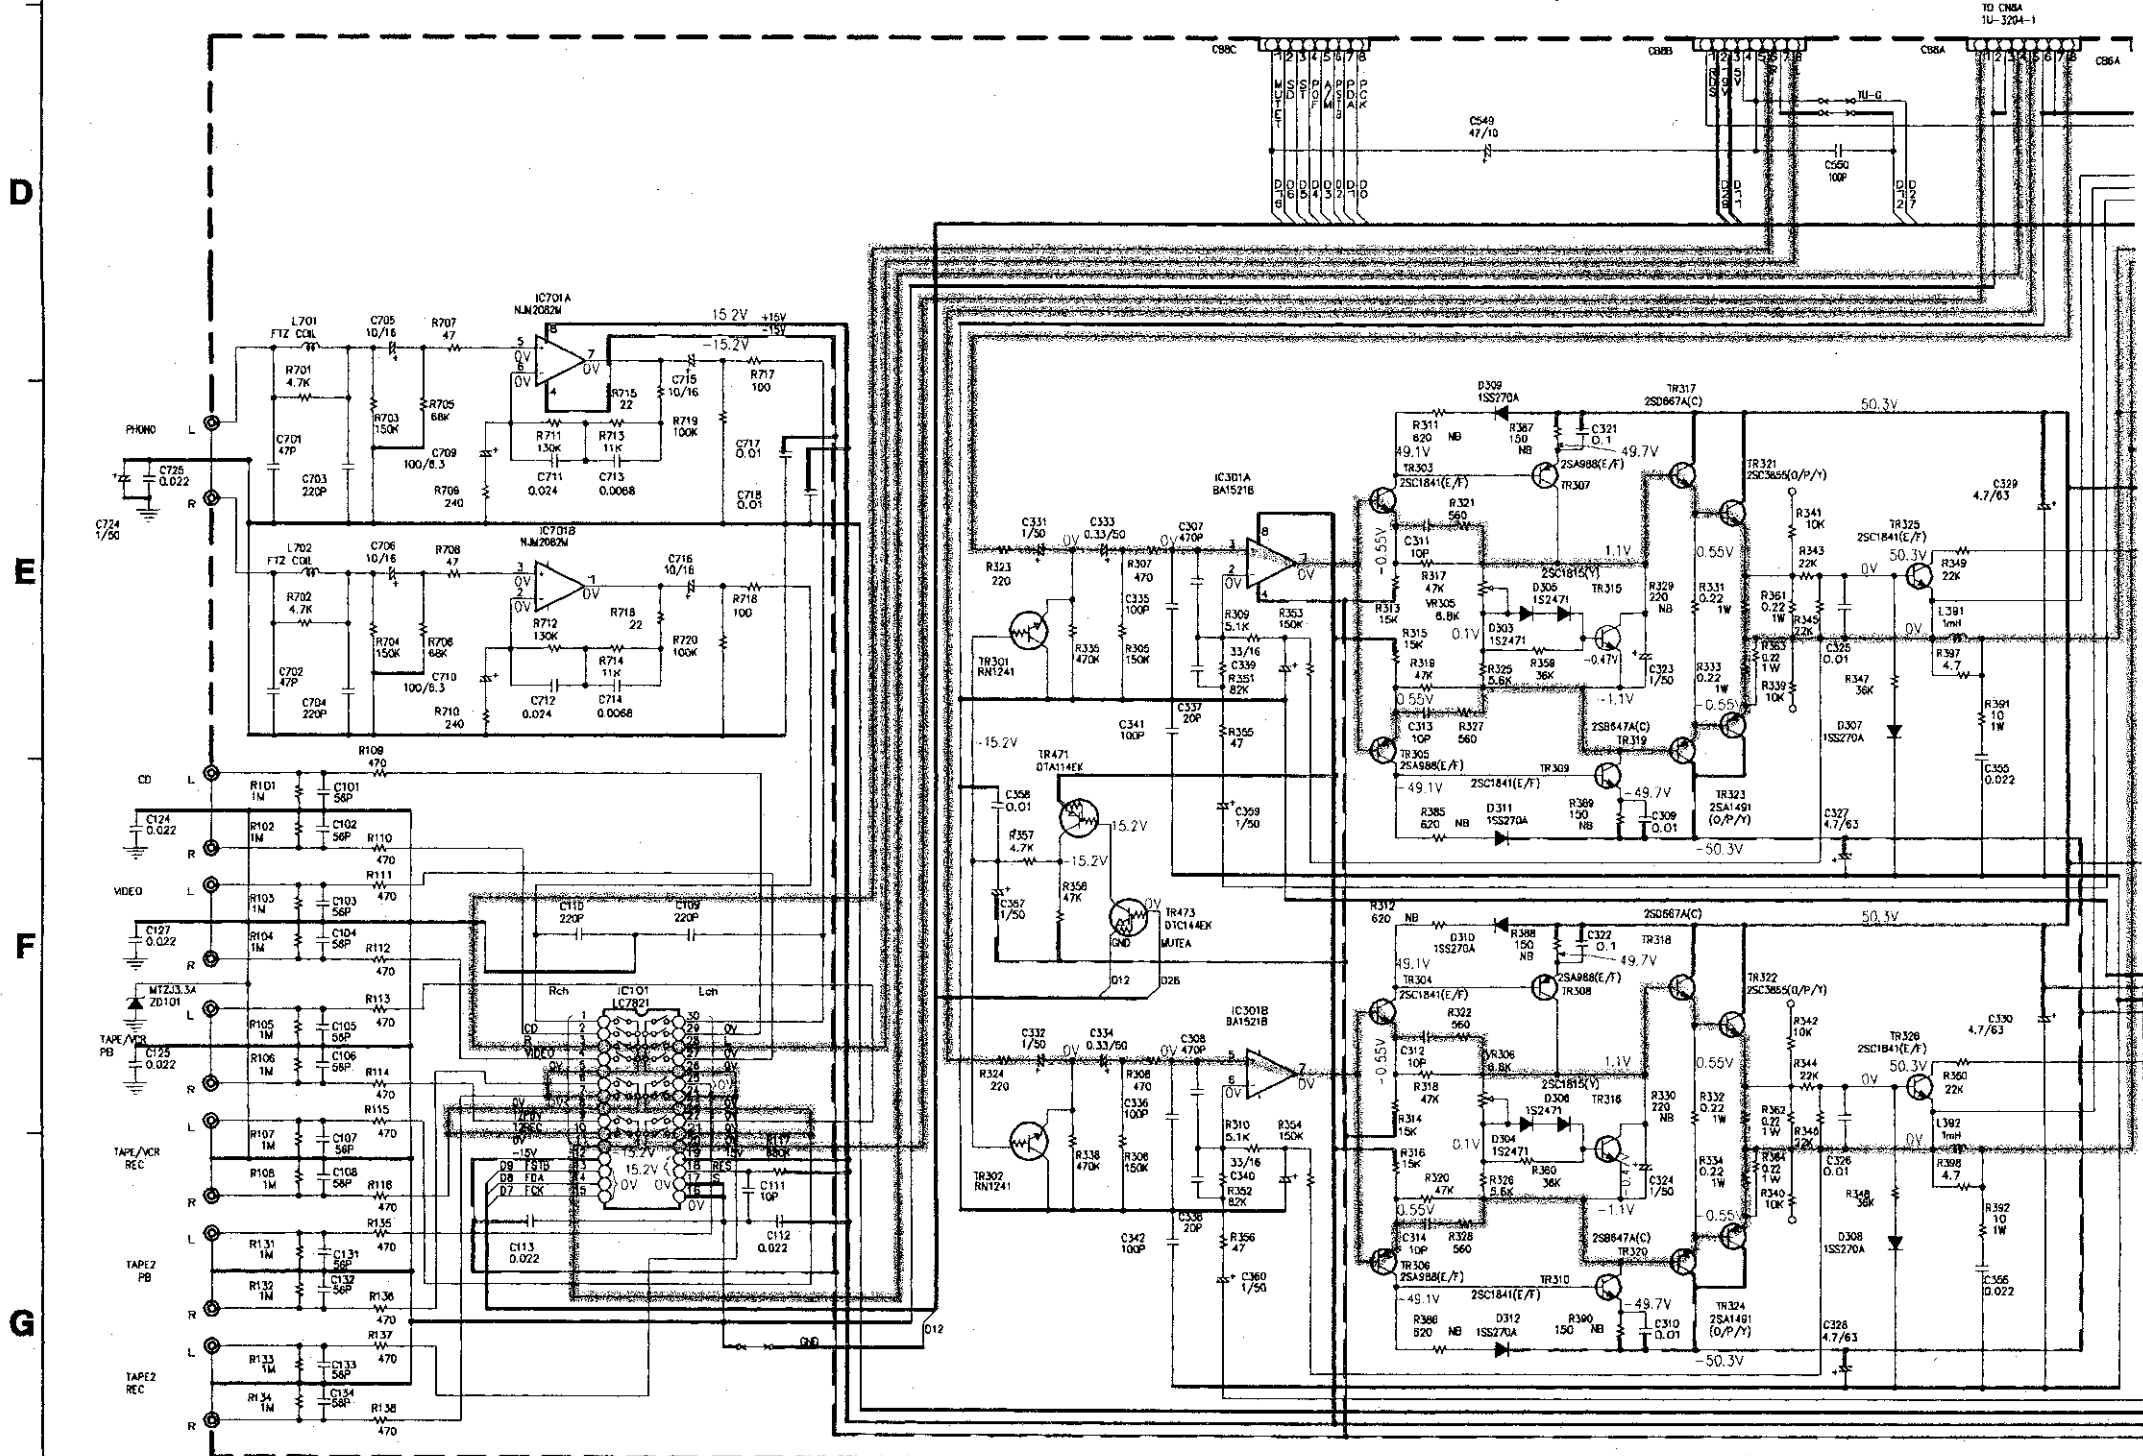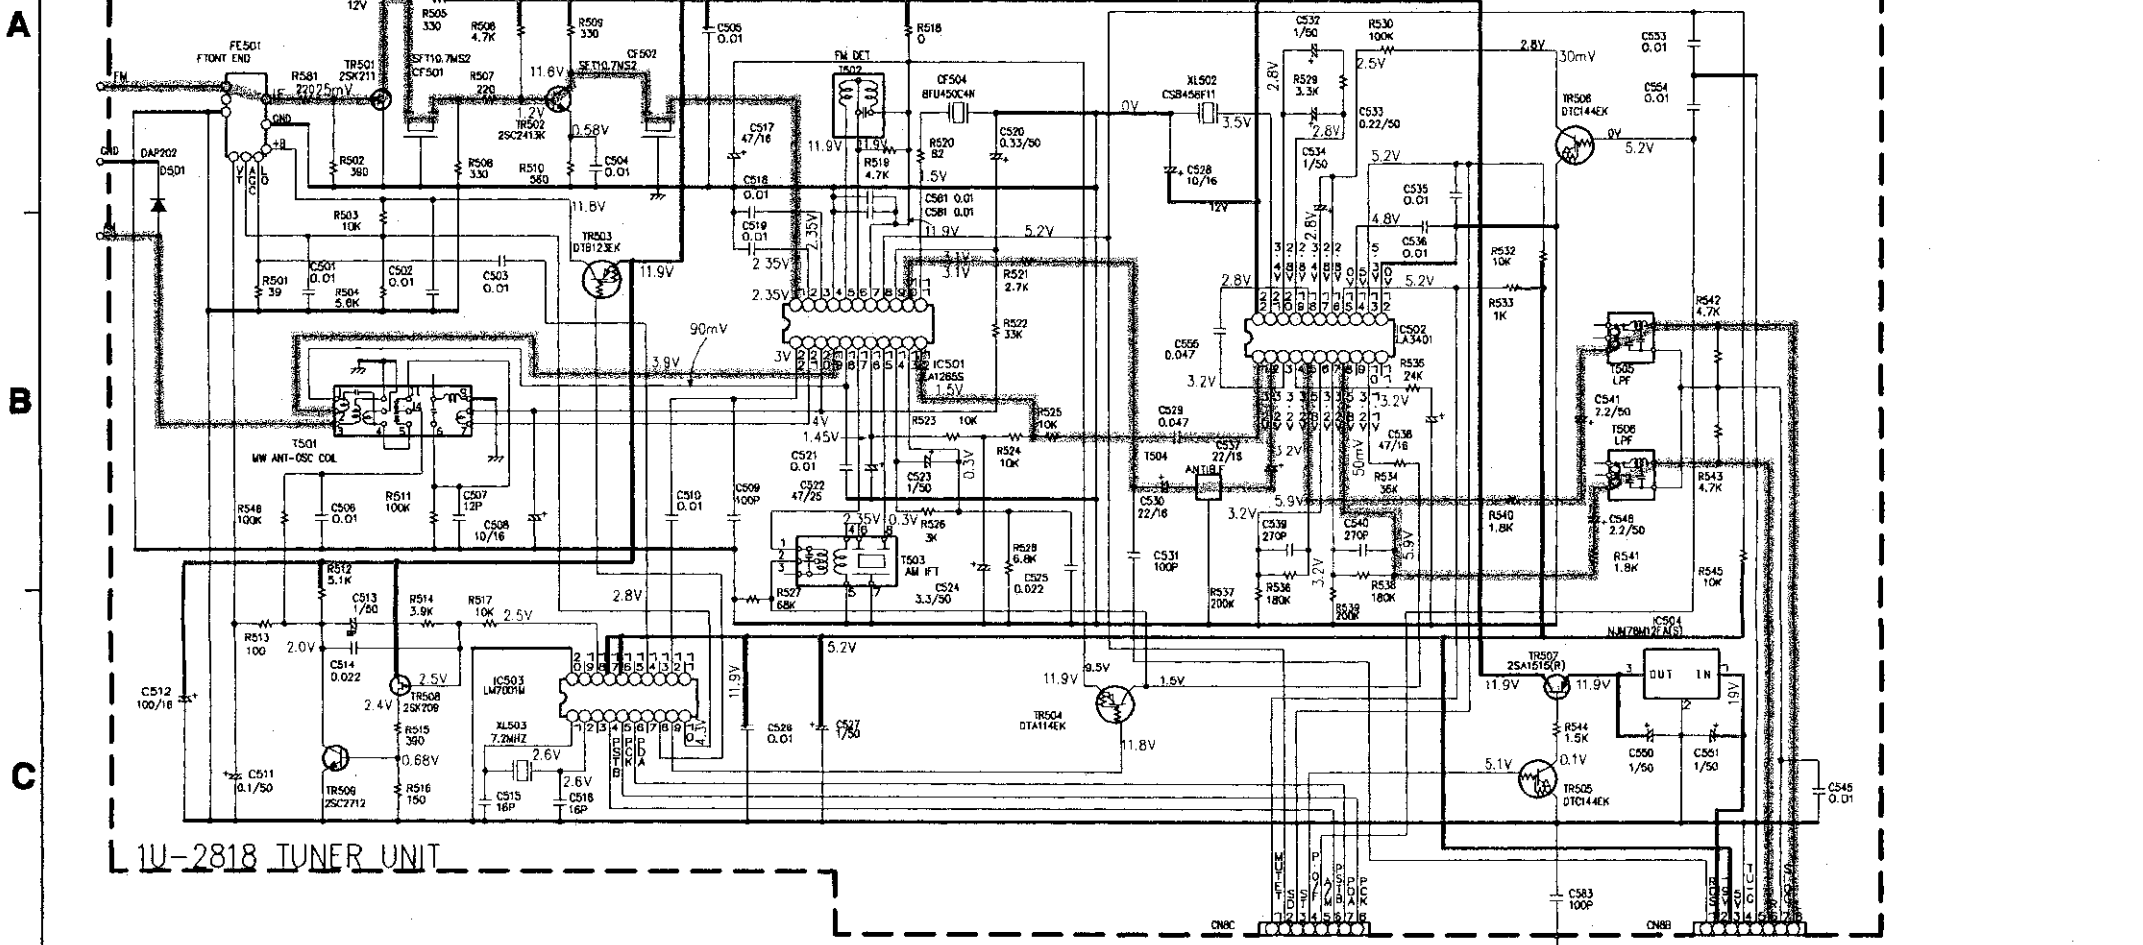

**NOTICE**

ALL RESISTANCE VALUES IN OHM. K=1,000 OHM M=1,000,000 OHM  
 ALL CAPACITANCE VALUES IN MICRO FARAD. P=MICRO-MICRO FARAD  
 EACH VOLTAGE AND CURRENT ARE MEASURED AT NO SIGNAL INPUT  
 CONDITION.  
 CIRCUIT AND PARTS ARE SUBJECT TO CHANGE WITHOUT PRIOR  
 NOTICE.

**WARNING:**


Parts marked with this symbol  have critical characteristics.  
 Use ONLY replacement parts recommended by the manufacturer.

**CAUTION:**

Before returning the unit to the customer, make sure you make either (1) a leakage current check or (2) a line to chassis resistance check. If the leakage current exceeds 0.5 milliamps, or if the resistance from chassis to either side of the power cord is less than 460 kohms, the unit is defective.

**WARNING:**

DO NOT return the unit to the customer until the problem is located and corrected.

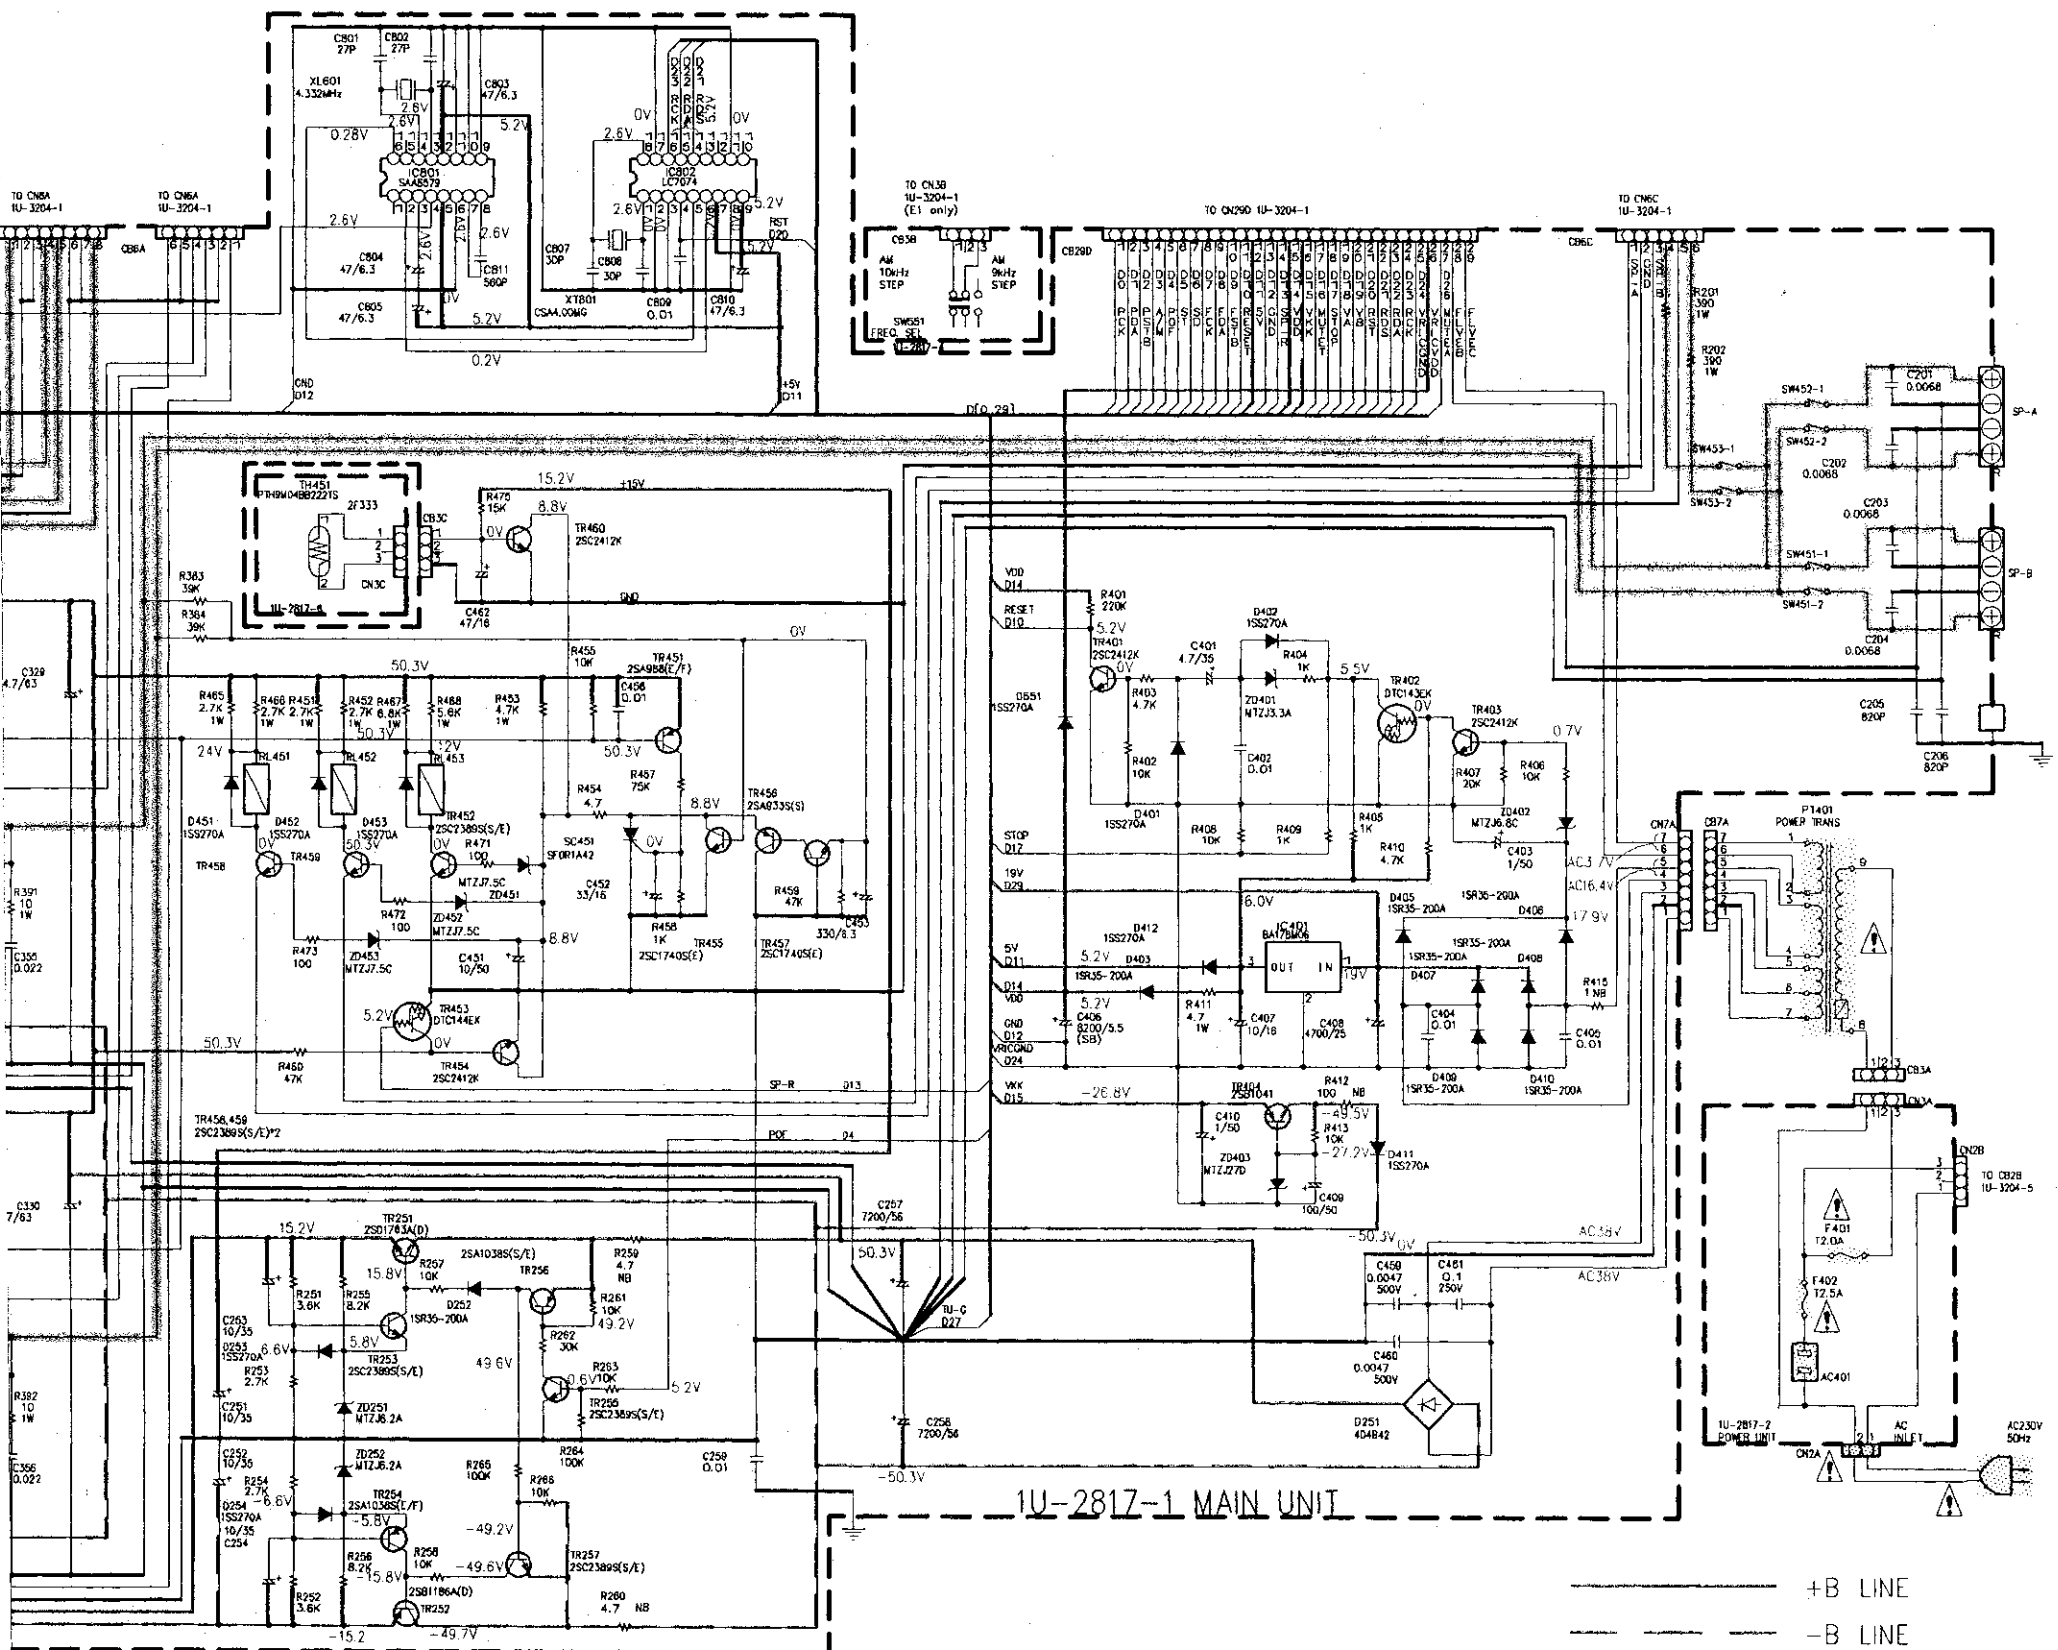

1U-2817-1 MAIN UNIT

— +B LINE  
 - - - - -B LINE  
 ——— SIGNAL LINE





DENO-00310

# DENON

Hi-Fi AM-FM Stereo Receiver

For Europe  
And U.K. Models


## SERVICE MANUAL MODEL DRA-585RD AM-FM STEREO RECEIVER

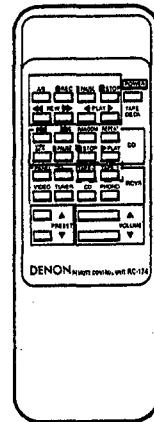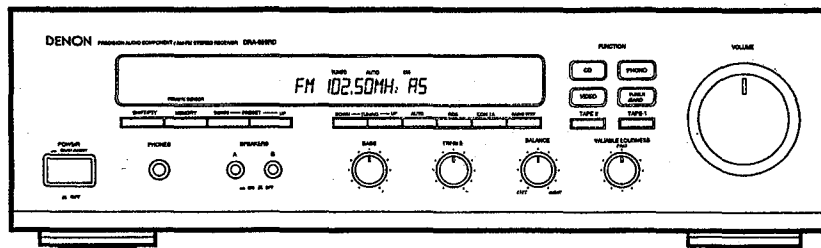


### TABLE OF CONTENTS

|                                                   |        |
|---------------------------------------------------|--------|
| OPERATING INSTRUCTIONS .....                      | 2-9    |
| DISASSEMBLY .....                                 | 10     |
| METHOD OF ADJUSTMENTS .....                       | 11     |
| CONNECTION DIAGRAM OF MEASURING INSTRUMENTS ..... | 12     |
| BLOCK/LEVEL DIAGRAM .....                         | 13     |
| NOTE FOR PARTS LIST .....                         | 14     |
| PRINTED WIRING BOARD PARTS LIST .....             | 15-19  |
| PRINTED WIRING BOARD PATTERNS .....               | 20, 21 |
| 1U-2817 MAIN UNIT ASS'Y .....                     | 20     |
| 1U-2915 POWER UNIT ASS'Y .....                    | 20     |
| KU-9328 DISPLAY UNIT ASS'Y .....                  | 21     |
| 1U-2818 TUNER UNIT ASS'Y .....                    | 21     |
| EXPLODED VIEW OF CHASSIS AND CABINET .....        | 22     |
| PARTS LIST OF EXPLODED VIEW .....                 | 23     |
| WIRING DIAGRAM .....                              | 24     |
| SCHEMATIC DIAGRAM .....                           | 25     |
| SEMICONDUCTORS .....                              | 26, 27 |

# NIPPON COLUMBIA CO., LTD.



**CAUTION**  
RISK OF ELECTRIC SHOCK  
DO NOT OPEN





**CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.**

The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.

The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.


**WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.**

FRONT PANEL  
VORDERSEITE  
PANNELLO ANTERIORE  
PANEL ANTERIOR  
VOORPANEEL  
PANEL FRONTAL

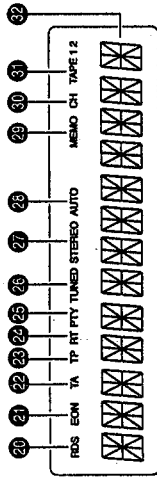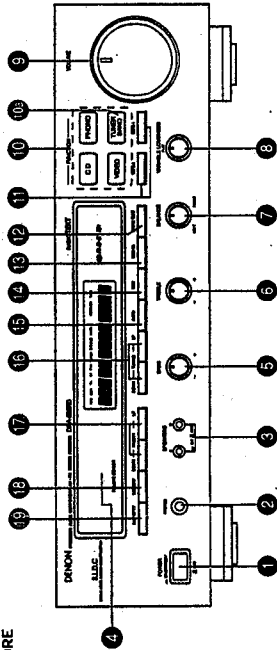

DISPLAY  
ANZEIGE  
AFFICHAGE  
DISPLAY  
VISUALIZADOR  
DISPLAYEN  
MOSTRADOR

REAR PANEL  
RÜCKSEITE  
PANNELLO POSTERIORE  
PANEL POSTERIOR  
ACHTERPANEEL  
BAKSIDAN  
PANEL TRASEIRO

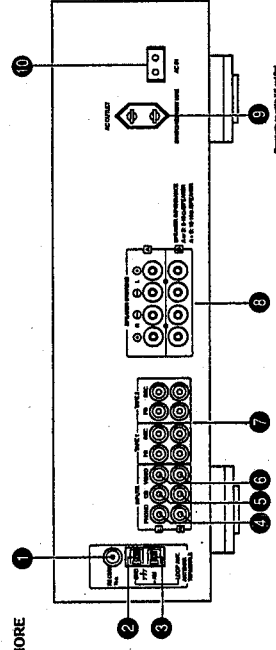

**PRECAUTIONS FOR INSTALLATION**  
Install DRA-585RD always horizontally. And leave at least 10 cm of space between the unit and other component placed above.

**VORKEHRUNGEN FÜR DIE AUFSTELLUNG**  
Stellen Sie den DRA-585RD stets waagrecht auf. Achten Sie ebenfalls darauf, daß ein Mindestabstand von 10 cm zwischen dem Gerät und der Komponente, die darüber gestellt wird, eingehalten wird.

**PRECAUTIONS D'INSTALLATION**  
Le DRA-585RD doit toujours être installé horizontalement. Laissez au moins un espace de 10 cm entre cet appareil et tout autre composant qui serait placé au-dessus.


**PRECAUZIONI PER L'INSTALLAZIONE**  
Installare il DRA-585RD sempre in posizione orizzontale, avendo cura di lasciare almeno 10 cm fra l'unità ed altri componenti posti al di sopra.

**PRECAUCIONES PARA LA INSTALACION**  
Instale siempre el DRA-585RD en posición horizontal. Asegúrese también de dejar un espacio de por lo menos 10 cm entre esta unidad y el componente que sea colocado encima.





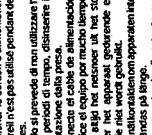
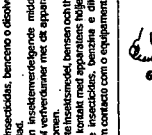
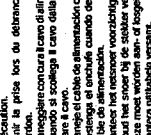
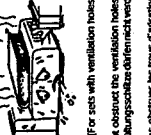
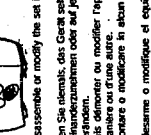
**VOORZORGSMAATREGELEN VOOR INSTALLATIE**  
De DRA-585RD altijd horizontaal plaatsen. Laat ten minste 10 cm ruimte tussen het apparaat en het andere component dat u erboven plaatst.

**FÖRBEREDELSE FÖR INSTALLATION**  
Inställ alltid DRA-585RD horisontellt. Lämna åtminstone 10 cm mellan denna apparat och en annan komponent som placeras ovanpå.

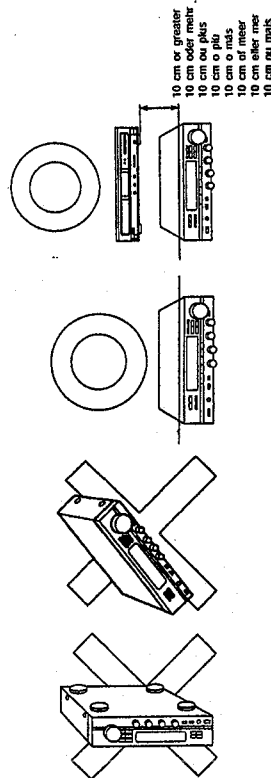**PRECAUÇÕES DURANTE A INSTALAÇÃO**  
Instale sempre o DRA-585RD em posição horizontal. E deixe pelo menos 10 cm de espaço entre esta unidade e o outro componente colocado acima.

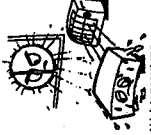

NOTE ON USE / HINWEISE ZUM GEBRAUCH / OBSERVATIONS RELATIVES A L'UTILISATION  
NOTE SULL'USO / NOTAS SOBRE EL USO / ALVORENS TE GEBRUIKEN / OBSERVERA  
OBSERVAÇÕES SOBRE O USO

|                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  <ul style="list-style-type: none"> <li>• Avoid high temperatures.</li> <li>• Do not install the cord in a rack.</li> <li>• Do not use the cord with any other equipment.</li> <li>• Do not use the cord with any other equipment.</li> <li>• Do not use the cord with any other equipment.</li> <li>• Do not use the cord with any other equipment.</li> <li>• Do not use the cord with any other equipment.</li> <li>• Do not use the cord with any other equipment.</li> </ul>       |  <ul style="list-style-type: none"> <li>• Keep the set free from moisture, water and dust.</li> <li>• Do not use the set in humid conditions.</li> <li>• Do not use the set in humid conditions.</li> <li>• Do not use the set in humid conditions.</li> <li>• Do not use the set in humid conditions.</li> <li>• Do not use the set in humid conditions.</li> <li>• Do not use the set in humid conditions.</li> <li>• Do not use the set in humid conditions.</li> </ul>                                                                                                                                                                                                                                                 |  <p><b>Do not let foreign objects in the set.</b></p> <ul style="list-style-type: none"> <li>• Do not let foreign objects in the set.</li> <li>• Do not let foreign objects in the set.</li> <li>• Do not let foreign objects in the set.</li> <li>• Do not let foreign objects in the set.</li> <li>• Do not let foreign objects in the set.</li> <li>• Do not let foreign objects in the set.</li> <li>• Do not let foreign objects in the set.</li> <li>• Do not let foreign objects in the set.</li> </ul>                                                                                                                                                                                                             |
|  <ul style="list-style-type: none"> <li>• Handle the power cord carefully.</li> <li>• Do not pull on the cord when unplugging it.</li> <li>• Do not pull on the cord when unplugging it.</li> <li>• Do not pull on the cord when unplugging it.</li> <li>• Do not pull on the cord when unplugging it.</li> <li>• Do not pull on the cord when unplugging it.</li> <li>• Do not pull on the cord when unplugging it.</li> <li>• Do not pull on the cord when unplugging it.</li> </ul> |  <ul style="list-style-type: none"> <li>• Unplug the power cord when not using the set for long periods of time.</li> <li>• Unplug the power cord when not using the set for long periods of time.</li> <li>• Unplug the power cord when not using the set for long periods of time.</li> <li>• Unplug the power cord when not using the set for long periods of time.</li> <li>• Unplug the power cord when not using the set for long periods of time.</li> <li>• Unplug the power cord when not using the set for long periods of time.</li> <li>• Unplug the power cord when not using the set for long periods of time.</li> <li>• Unplug the power cord when not using the set for long periods of time.</li> </ul> |  <ul style="list-style-type: none"> <li>• Do not let insects, rodents, and thinner come in contact with the set.</li> <li>• Do not let insects, rodents, and thinner come in contact with the set.</li> <li>• Do not let insects, rodents, and thinner come in contact with the set.</li> <li>• Do not let insects, rodents, and thinner come in contact with the set.</li> <li>• Do not let insects, rodents, and thinner come in contact with the set.</li> <li>• Do not let insects, rodents, and thinner come in contact with the set.</li> <li>• Do not let insects, rodents, and thinner come in contact with the set.</li> <li>• Do not let insects, rodents, and thinner come in contact with the set.</li> </ul> |
|  <ul style="list-style-type: none"> <li>• Do not obstruct the ventilation holes.</li> <li>• Do not obstruct the ventilation holes.</li> <li>• Do not obstruct the ventilation holes.</li> <li>• Do not obstruct the ventilation holes.</li> <li>• Do not obstruct the ventilation holes.</li> <li>• Do not obstruct the ventilation holes.</li> <li>• Do not obstruct the ventilation holes.</li> <li>• Do not obstruct the ventilation holes.</li> </ul>                             |  <ul style="list-style-type: none"> <li>• Never disassemble or modify the set in any way.</li> <li>• Never disassemble or modify the set in any way.</li> <li>• Never disassemble or modify the set in any way.</li> <li>• Never disassemble or modify the set in any way.</li> <li>• Never disassemble or modify the set in any way.</li> <li>• Never disassemble or modify the set in any way.</li> <li>• Never disassemble or modify the set in any way.</li> <li>• Never disassemble or modify the set in any way.</li> </ul>                                                                                                                                                                                        |  <ul style="list-style-type: none"> <li>• Never disassemble or modify the set in any way.</li> <li>• Never disassemble or modify the set in any way.</li> <li>• Never disassemble or modify the set in any way.</li> <li>• Never disassemble or modify the set in any way.</li> <li>• Never disassemble or modify the set in any way.</li> <li>• Never disassemble or modify the set in any way.</li> <li>• Never disassemble or modify the set in any way.</li> <li>• Never disassemble or modify the set in any way.</li> </ul>                                                                                                                                                                                        |

Please check the following items are included with the main unit in the carton:

- (1) Operating Instructions
- (2) AM Loop Antenna
- (3) FM Antenna
- (4) Remote Control RC-174
- (5) Batteries R6 (AA)
- (6) AC Cord

Vergewissern Sie sich, daß folgende Teile vollständig im Lieferumfang enthalten sind:

- (1) Bedienungsanleitung
- (2) MW-Rahmenantenne
- (3) UKW-Antenne
- (4) Fernbedienungsgerät RC-174
- (5) Trockenzellen-Batterien R6 (AA)
- (6) Netzstecker

Veuillez vérifier que les articles suivants sont bien joints à l'appareil principal dans le carton:

- (1) Mode d'emploi
- (2) Antenne-cadre AM
- (3) Antenne FM
- (4) Télécommande RC-174
- (5) Piles de format R6 (AA)
- (6) Cordon secteur

Controllare che le parti seguenti si trovino imballate con l'apparecchio nella scatola di spedizione:

- (1) Istruzioni per l'uso
- (2) Antenna AM a telaio
- (3) Antenna FM
- (4) Telecomando RC-174
- (5) Batterie a secco R6 (AA)
- (6) Cavo d'alimentazione

Verifique que los artículos siguientes hayan sido suministrados con la unidad principal:

- (1) Instrucciones de operación
- (2) Antena AM de cuadro
- (3) Antena de FM
- (4) Unidad de control remoto RC-174
- (5) Pilas secas R6 (AA)
- (6) Cable de alimentación

Controleer of de volgende accessoires bij het hoofdtoestel in de doos zijn verpakt:

- (1) Gebruiksaanwijzing
- (2) MW-raamantenne
- (3) UKW-antenne
- (4) Telebediening RC-174
- (5) R6 (AA) droge cel batterij
- (6) Netstekker

Kontrollera att följande tillbehör har packats ner i kartongen tillsammans med huvudenheten:

- (1) Bruksanvisning
- (2) Ramantenn för AM-bud
- (3) FM-antenn
- (4) Fjärrkontroll RC-174
- (5) R6 (AA) batterier
- (6) Nätledare

Verifique se os itens que se seguem estão incluídos na caixa de cartão com a unidade principal:



- (1) Instruções de funcionamento
- (2) Antena de quadro AM
- (3) Antena FM
- (4) Telecomando RC-174
- (5) Pilhas R6 (AA)
- (6) Cabo de alimentação

|     |     |     |
|-----|-----|-----|
| (1) | (2) | (3) |
| (4) | (5) | (6) |

NUR FÜR EUROPÄISCHE MODELLE:  
 Konformitätserklärung  
 Die DENON Elektronik GmbH  
 40880 Ratingen  
 erklärt das Hersteller/Importeur, daß das in dieser Bedienungsanleitung beschriebene Gerät den Technischen Vorschriften für Ton- und Fernseh-Rundfunkempfänger nach der Amtsblattverfügung 868/1989 (Amtsblatt des Bundesministers für Post und Telekommunikation vom 31.8.1989) entspricht.


**SPEAKER CONNECTION**

Confirm polarity (+, -) and left and right channels (L, R). Connect the speaker pairs to the SPEAKER terminals A or B on the back panel. Connections must be made with power cord disconnected.

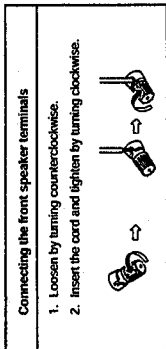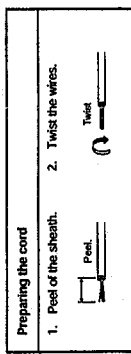


**ANTENNA INSTALLATION**

- FM ANTENNA**  
 The supplied indoor FM antenna can be used inside wooden houses for receiving local FM stations and other strong FM signals. Stretch out the end of the antenna and mount the antenna on the wall in a ceiling where optimum reception is expected. Reception of FM signals may be affected by the scale of reception due to environment changes. In such cases, the indoor FM antenna should only be used temporarily until an outdoor FM antenna has been installed. When connecting an outdoor FM antenna, the use of 75 ohm coaxial cable (3C-2V, 6C-2V) is strongly recommended.
- AM ANTENNA**  
 Attach the supplied AM loop antenna even when using an outdoor AM antenna. Connect the leads to the AM and GND terminals. Also use the AM terminals for connecting an outdoor AM antenna (when making such a connection do not disconnect the AM loop antenna). Adjust the loop antenna to obtain optimum reception. Where broadcast stations are distant and only weak signals are received, where signals are blocked, it is best to install an outdoor AM antenna.

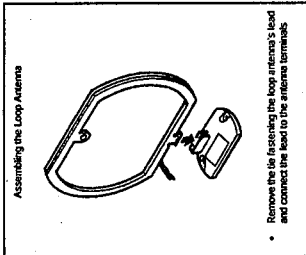

- Notes:**
- Do not connect the FM antennas simultaneously.
  - When an outdoor AM antenna is used, do not disconnect the AM loop antenna.
  - Make sure AM loop antenna lead terminals do not touch metal parts of the panel.

**CONNECTIONS**

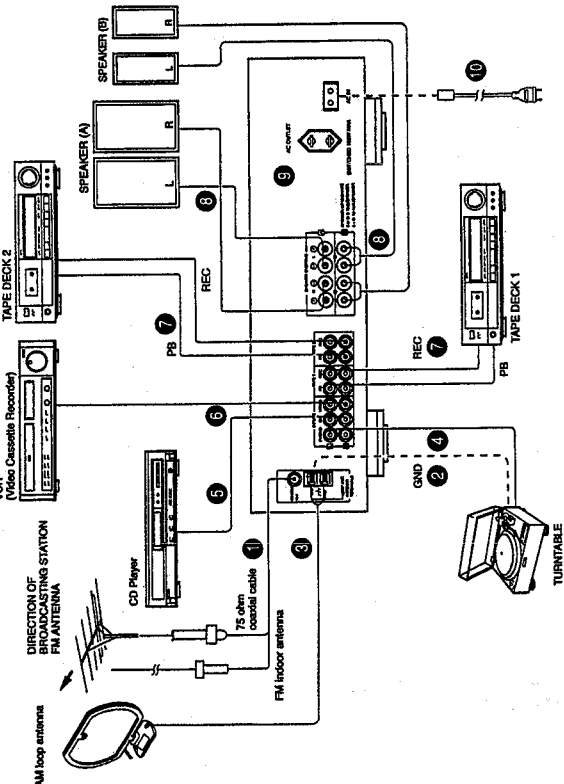

- Notes on Connection**
- Do not plug the power cord into the AC wall outlet until all connections have been completed.
  - Make sure channels are correctly connected. Connect Left channels to Left channels and Right channels to Right channels. Follow the color markings of plugs and terminals to make sure mistakes are not made.
  - Connect all pin-plugs securely, pushing them completely into the jacks. Incomplete connections will cause noise generation.
  - Binding the connection cables to power cords, or running such cables close to power supply transformers will cause humming or noise, and should thus be avoided.

REAR PANEL (Refer to page 6 and page 7.)

- 1 FM ANT (FM antenna terminals)  
15-ohm coaxial cable can be connected to this terminal. For antenna connecting procedure, see ANTENNA INSTALLATION.
- 2 GND (Grounding terminal)  
The ground wire of this terminal is connected here.
  - Hum or noise may be generated if the grounding wire is not connected.
- 3 AM ANT (AM antenna terminals)  
Connect the attached AM loop antenna.  
Connect to this terminal when a medium wave outdoor antenna is used.
- 4 PHONO (Phono input terminals)  
The output cord of the turntable is connected here.  
Since the input sensitivity of "PHONO" is extremely high, do not use the unit without the input phn cord. If used without this cord, the speakers may generate hum.
- 5 CD  
The output cord of the CD player is connected here.
- 6 VIDEO  
A VIDEO, such as a VCR or Video Disc may be connected here.
- 7 TAPE-1, TAPE-2  
Two tape decks or tape deck can be connected to these jacks for full-featured playback, recording and tape dubbing operation.
- 8 SPEAKER SYSTEMS (Speaker terminals)  
Two pairs of speakers A and B can be connected to these terminals.
- 9 AC OUTLET (AC power outlet)  
This AC outlet is controlled by the power switch.  
(Except units are sold in U.K. and Eire).
- 10 AC Inlet  
Connect the included AC cord here.

CAUTION

**Protective Circuit**  
This set is equipped with a high speed protective circuit. This circuit protects the internal circuitry from damage due to large currents flowing when the speaker jacks are not completely connected or when an output is generated by a short circuit.  
This protective circuit's operation cuts off the output to the speaker terminals. After the speaker terminals are disconnected, the set will operate normally. Then turn the power on again. After muting for several seconds, the set will operate normally.

DESIGNATIONS AND FUNCTIONS OF PANEL CONTROLS (Refer to Page 3.)

FRONT PANEL

- 1 POWER (Power ON-STANDBY/OFF Switch)  
This switch turns the unit ON or OFF. There is a delay of a few seconds before the unit will operate after this power switch is turned ON. If the unit is turned OFF from the remote control, the unit will be in the STANDBY mode. When in the STANDBY mode, the unit can be turned ON by the remote control. However, the power switch will not be used for extended period. Be sure to turn the unit OFF from the front panel power switch.  
NOTE: This unit includes a STANDBY protection feature. This feature is designed to prevent accidental turn-on from the STANDBY mode in the event of a power failure. Should AC power be disconnected and then reconnected when the unit is in STANDBY mode, the unit will return the STANDBY mode.  
To turn the unit ON from the STANDBY mode without the remote control, operate the front panel power switch four times. The unit will then operate normally.
- 2 PHONES (Headphones jack)  
Connect a pair of headphones (sold separately) to this jack for private listening.
- 3 SPEAKERS (Speaker selector switches)  
These switches are used to select speaker system A and B. No sound is heard through the speakers when both switches are reset to the (A) position.
- 4 REMOTE SENSOR (Remote control sensor)  
This sensor receives the infra-red light transmitted from the wireless remote control unit.  
For remote control, point the wireless remote control unit towards the sensor.
- 5 BASS (Bass control)  
Use this control to adjust the low-range response. When the control is set to the center position, the frequency characteristic curve (below 1,000 Hz) is flat. Turn the control clockwise to increase the bass response and counterclockwise to decrease it.
- 6 TREBLE (Treble control)  
Use this control to adjust the high-range response.  
When the control is set to the center position, the frequency characteristic curve (above 1,000 Hz) is flat. Turn the control clockwise to increase the treble response and counterclockwise to decrease it.
- 7 BALANCE (Balance control)  
Use this control to balance the volume levels between left and right channels. The volume levels in both channels are equal when the control is set to the center position.
- 8 VARIABLE LOUDNESS (Loudness control)  
At low volumes, the human ear is less sensitive to low (BASS) and high (TREBLE) frequencies. Use this control to compensate for this deficiency when listening at low volume levels. Turn this control counterclockwise until a natural balance of bass and treble sound has been restored.
- 9 VOLUME (Volume control)  
This knob is used to adjust the volume level of both channels. Turn the knob clockwise to raise the volume and counterclockwise to lower it.
- 10 Input selector (Input selector buttons)  
These buttons are used to select the audio input source.  
• PHONO: Press to play a record on a record player connected to the PHONO input jacks.  
• CD: Press to listen to a compact disc player or another compact disc player connected to the CD input jacks.  
• TUNER: Press to select the FM or AM programs, when the set is not TUNER function.  
• VIDEO: Use when playing back the audio from a Hi-Fi video, video disc player or other component connected to the VIDEO terminal.
- 11 BAND (Band selector button)  
Press this button to select the FM or AM (MW) band, when the set is in TUNER function.
- 12 Tape selector (Tape selector/monitor buttons)  
TAPE-1: Press this button, TAPE-1 indicator will light up and then you can play tape source on TAPE-1 terminal.  
TAPE-2: Press this button once, TAPE-2 indicator will light up and then you can play tape or video source of TAPE-2 terminal. In this state you can copy TAPE-2 source to TAPE-1 terminal. Press again the button currently accessed, to play sources selected by input selector 10, indicator goes out.
- 13 RADIO TEXT button  
This button is used for displaying radio text messages. When this button is pressed while the station currently tuned in is offering a radio text message service, the message scrolls on the display. This mode turns on and off each time the button is pressed. (Refer to page 13.)
- 14 EON TA button  
When a traffic announcement begins on a station in the same network as the station currently tuned in, that network station is automatically tuned in, and the previous station is tuned back in once the traffic announcement is over.  
This button is used to turn this mode on and off.  
If the station switches from the current station to the network station when this mode is set on, the network station cannot be received properly. Check signals of the previous station is immediately tuned back in. (Refer to page 13.)
- 15 RDS (RDS button)  
This button is used for the RDS search (refer to page 12) and PTY search (refer to page 12 and 13) search (refer to page 12) operations, and to input the station name (refer to page 11).

- 14 **AUTO (Tuning mode button)**  
This switches between auto and manual tuning. Auto tuning: When the UP button is pressed, the radio is tuned automatically to a higher frequency. Press the DOWN button to tune to a lower frequency. Use this position to eliminate noise when no signals or weak signals are being received. Manual tuning: In this position, the radio can be tuned manually. Reception is automatically manual when in the manual mode.
- 15 **TUNING (Tuning buttons)**  
Use these to change the received frequency to a higher frequency (UP) or a lower frequency (DOWN). When writing station names, use these buttons to select the letters. (Refer to Page 11.)
- 16 **Presets (Preset station buttons)**  
These buttons are used for saving stations or recalling stations which have been preset. Using the SHIFT/PTY button you can preset a total of 40 FM or AM stations into preset channels. Once a radio has been memorized, the same station can later be tuned in instantly simply by recalling the corresponding preset channel with PRESET UP or DOWN button.

**DISPLAY**

- 20 **RDS indicator**  
This lights when receiving RDS broadcasts, and flashes during the RDS search operation.
- 21 **EON indicator**  
This lights when receiving EON information.
- 22 **TA indicator**  
This lights when receiving traffic announcements.
- 23 **TP indicator**  
This flashes during the TP search operation and lights when TP stations are tuned in.
- 24 **RT indicator**  
This lights when the RADIO TEXT button is pressed.
- 25 **PTY indicator**  
This flashes during the PTY (Programme Type) search operation.
- 26 **TUNED indicator**  
This lights when a station is properly tuned in.
- 27 **STEREO indicator**  
This lights when receiving stereo broadcasts. It remains off when receiving AM broadcasts.

**USING THE VARIOUS FUNCTIONS**

1. Using the auto preset memory function  
This function automatically stores the FM stations which can be received in the area in which the set is being used in the preset memory. Use this function so that the RDS functions can be used. The RDS functions can be used in the area in which the set is being used. The RDS functions can be changed as will from after the preset stations have been stored with this function.  
**Operation**  
1. Connect the FM antenna and set so that FM stations can be received.  
2. Press the POWER button to turn on the power while holding in the MEMORY button.  
3. Searching begins automatically, and stations are stored in the preset memory in order, beginning from channel A1. (The operation automatically stops once 40 stations have been set in the memory.)
2. Storing new stations at the preset channels  
The reception frequency, RDS service information, Tuning mode and input characters can be stored at the different channel memories.  
When this operation is performed, the station already stored in the preset memory using the auto preset memory function is cleared.  
**Operation**  
1. Press the MEMORY button (The MEMO indicator flashes.)  
2. Use the SHIFT/PTY button to select the block, A to E.  
3. Use the PRESET UP or DOWN button to select the channel at which the station is to be stored.  
4. Press the MEMORY button again to store the station in the memory.


3. Recalling preset channels  
Use the following operation to recall preset channels:  
**Operation**  
1. Press the MEMORY button (The MEMO indicator flashes.)  
2. Use the SHIFT/PTY button to select the block, A to E.  
3. Use the PRESET UP or DOWN button to select the channel at which the station is to be stored.  
4. Press the MEMORY button again to store the station in the memory.

4. Recalling preset channels  
Use the following operation to recall preset channels:  
**Operation**  
1. Use the SHIFT/PTY button to select the block, A to E.  
2. Use the PRESET UP or DOWN button to recall the station stored in this block.  
3. If the PRESET UP or DOWN buttons are pressed without pressing the SHIFT/PTY button, the stations are recalled in the order A1 to A8, B1 to B8, and so on through E8.


4. Inputting characters  
Any characters can be input (up to 8 characters). The input characters can be stored at the preset channels.  
**Operation**  
1. Press the RDS button (four lines). (The cursor flashes at the first place.)




2. Use the TUNING UP or DOWN button to select the character for the first place. (The selected character flashes.)



3. Press the SHIFT/PTY button to move the cursor to the next place. (The cursor flashes at the second place).




4. Repeat steps 2 and 3 above to input up to 8 characters.



5. The characters are set five seconds after the input procedure is finished. The input characters can be stored in the memory. To keep the input characters, be sure to store them in a channel memory.

6. Clearing characters  
1. Recall the character you want to clear.  
2. Press the RDS button 4 times until the character at the first place flashes.  
3. Then press the SHIFT/PTY button for at least 2 seconds. The current character will then be cleared.

Table of characters  
The characters are input in the order shown to the right. Use the TUNING buttons to select the desired characters.






**RDS Emergency Alarm**  
 "ALARM" will flash on the display when the unit receives the Emergency Programme Type Code (PTY31) from an RDS station. This feature may not operate properly if the signal from the RDS station is too weak or is subjected to interference. It is not possible to select the "ALARM" display from the PTY search mode.

- NOTE:**
1. Be sure to turn the EON TA mode off when recording programmes.
  2. In the EON TA mode, if the stations in the network are not the same, the stations to be searched are weak and it cannot be tuned in properly. "WEAK SIGNAL" is displayed and the original station is immediately tuned back in.
  3. In the EON TA mode, the station does not switch to another station in the network if the current station is broadcasting a traffic announcement.
  4. Since the RDS services offered differ from station to station, some RDS functions may not operate for some stations, but this is not a malfunction.

**4. RADIO TEXT**  
 When the RADIO TEXT button is pressed while the station message scrolls on the display, a radio text message service, the message scrolls on the display. (The RT indicator lights when the RADIO TEXT button is pressed.)



"NO TEXT DATA" is displayed if no radio text message is being broadcast.

**5. EON TA**


When an RDS station is broadcasting RDS information on other stations within the same network and a traffic announcement begins on another station in the same network based on this information (EON-Enhanced/Other Network), that network station is automatically tuned in. The previous station is tuned back in once the traffic announcement is over.

**Operation**


1. Press the EON TA button . (The EON TA indicator lights.)



When a traffic announcement starts, that station is automatically tuned in.



When the traffic announcement is over, the previous station is tuned back in.



4. Searching begins again if the PRESET UP or DOWN button is pressed while the PTY indicator is flashing.



5. If no other station broadcasting the designated programme type is found when all the frequencies are searched, "NO PROGRAMME" is displayed.

**List of PTY (Programme Type) displays:**

1. NEWS
2. AFFAIRS
3. INFORMATION
4. SPORT
5. EDUCATION
6. DRAMA
7. CULTURE
8. SCIENCE
9. VARIED
10. POP MUSIC
11. ROCK MUSIC
12. M.O.R. MUSIC
13. L-CLASSICS (Light Classics)
14. S-CLASSICS (Serious Classics)
15. OTHER MUSIC
31. ALARM

**NOTE:** ALARM cannot be selected during the PTY search operation.

**3. TP Search**


Use this to automatically search and stop at stations which broadcast traffic announcements (even if the station is not currently broadcasting a traffic announcement).

**Operation**

1. Press the RDS button three times.



2. Press the PRESET UP or DOWN button . (Searching begins.)



3. Searching begins again if the PRESET UP or DOWN button is pressed while the TP indicator is flashing.



4. If no other TP station is found when all the frequencies are searched, "NO PROGRAMME" is displayed.

**Using the RDS functions (for FM only)**  
**1. RDS search**  
 Use this to automatically search and stop at stations offering RDS services.

**Operation**


1. Press the RDS button once.



2. Press the PRESET UP or DOWN button . (Searching begins.)



3. Searching begins again if the PRESET UP or DOWN button is pressed while the RDS indicator is flashing.




4. If no other RDS station is found when all the frequencies are searched, "NO RDS" is displayed.

**2. PTY Search**


Use this to automatically search and stop at stations broadcasting the specified programme type (PTY).

**Operation**


1. Press the RDS button twice.



2. Use the SHIFT/PTY button to select the programme type.




3. Press the PRESET UP or DOWN button . (Searching begins.)




**PLAYBACK USING THE REMOTE CONTROL**

The accessory RC-174 remote control unit is used to control the RECEIVER from a distance.


- Inserting the dry cell batteries




- Remove the rear cover on the remote control unit.

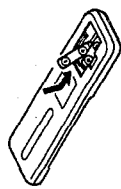

- Replace the rear cover.



- Directions for use

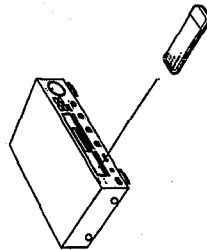

**Notes on Use of the Batteries**

- The remote control unit uses size "AA" (R6) dry cell batteries. The batteries will need to be replaced approximately once a year. This will depend upon how often the remote control is used.
- In less than a year from the time new batteries were inserted, the remote control fails to operate the receiver from a nearby position, it is likely that the batteries are not inserted in the correct position, it is likewise proper, following the diagram on the remote control battery supply unit, and making sure to align the plus and minus sides of each battery.
- Batteries are prone to damage and leakage. Therefore:
  - Do not combine different types of batteries.
  - Do not jumper the opposite poles of the batteries; expose them to heat or break them open, or put them into open fire.
- When the remote control is not to be used for a long period of time, remove the batteries from the unit.
- If the batteries have leaked, remove any battery fluid from the inside of the battery supply unit by wiping it out thoroughly and insert new batteries.

- Operate the remote control unit while pointing it towards the remote control sensor on the receiver as shown in the diagram left.
- The remote control unit can be used at distances up to about 8 meters in a straight line from the receiver. This distance will decrease if there are obstructions blocking the infra-red light transmission or if the remote control unit is not directed straight at the receiver.

**Note on Operation**


- Do not press the operating buttons on the receiver and the remote control unit at the same time. This will cause misoperation.
- Operation of the remote control unit will become less effective or cease if the infrared remote control sensor on the receiver is exposed to strong light or if there are obstructions between the remote control unit and the sensor.
- In case you operate your VCR, TV or other components by remote control, do not operate buttons on two different remote control units at the same time. This will cause misoperation.

Besides being able to operate the DRA-585RD receiver with this remote control unit, you can also operate a DENON cassette deck and CD player from this handy full-system remote control unit.

**Remote Control Section**  
Full-System Remote Control Unit

The full-system remote control unit operates all major functions of the receiver such as function switching, volume control, and preset station selection. But that's not all! The same control pad can also control the major functions of a DENON CD player and cassette deck to create a remarkably ergonomic and versatile DENON system with all the quality sound reproduction that the devoted audiophile expects.

**Remote Control Unit RC-174 supplied with DRA-585RD**

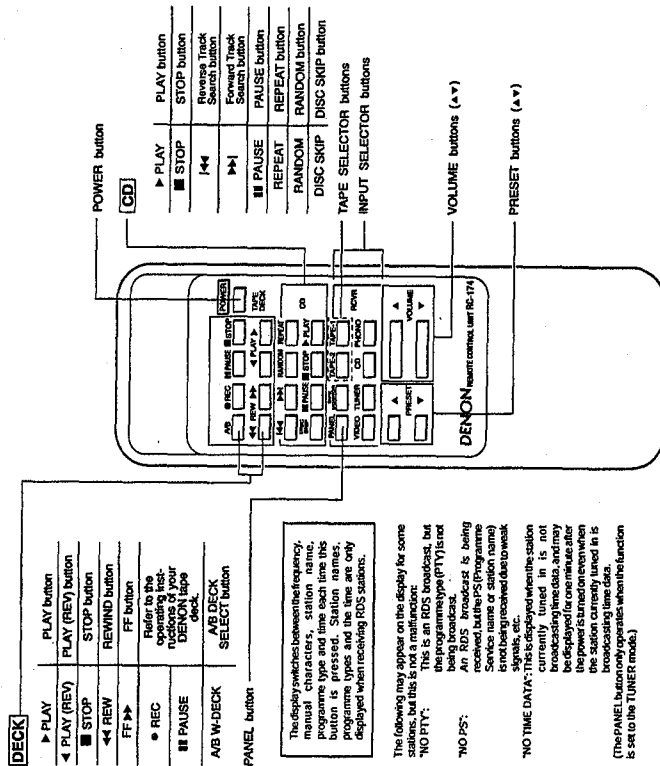

The display switches between the frequency, manual characters, station name, programme type and time each time this button is pressed. Station names, programme type and the time are only displayed when receiving RDS stations.

The following may appear on the display for some stations, but this is not a malfunction:  
**NO PTT:** This is an RDS broadcast, but there is no PTT (PTT) data being broadcast.  
**NO PS:** An RDS broadcast is being received, but the PS (Programme Service name or station name) data is not received due to weak signals, etc.  
**NO TIME DATA:** This is displayed when the station currently tuned in is not broadcasting time data, and may occur when the receiver is in the power save mode or when the station currently tuned in is not broadcasting time data.  
 (The PANEL button only operates when the function is set to the TUNER mode.)

- The RC-174 Remote Control Unit can control CD players and cassette decks made by DENON.
- Note the operation may not be possible for some models.
- Buttons are conveniently separated into groups, each group controlling one specific component. The groups are RECEIVER, CD and DECK.

For details on operating other components, refer to the instruction manuals for the CD player and/or cassette deck.

**CAUTION:**

- If the panel is turned off with the remote control unit, the receiver is switched to the power stand-by state. If you are to be absent for a long period of time, be sure to turn the power on using the POWER switch on the receiver.
- A part of the light of the power stand-by state.
- You may experience erratic operation of the receiver if it is operated in fluorescent light and direct sunlight, in particular if this light strikes the remote control sensor on the receiver. However, this is not a malfunction, and if this should happen, protect the sensor against such light.

**SPECIFICATIONS**

**AMPLIFIER SECTION**

Continuous Power Output  
Power Bandwidth (BPF):  
Total Harmonic Distortion:  
Frequency Response:

90 W ± 50 W (± 0.5 dB, 1 kHz)  
10 Hz - 40 kHz (F.H.D. 0.15% both channels driven into 8 ohms)  
0.05% (3 dB at rated output & above)  
PROVIDE RMA Standard Curve (Recording Out-put)  
MM 20 Hz - 20 kHz ± 0.5 dB  
CD, VIDEO, TAPE 1, TAPE 2 10 Hz - 15 kHz

Input Sensitivity and Impedance:  
Maximum Input Level:  
Signal to Noise Ratio (BPF-A):  
Tone Controls:  
Loudness Control Effect:

PHONO MM 2.5 mV 47 kohms  
CD, VIDEO, TAPE 1, TAPE 2 150 mV 25 kohms  
PHONO MM 1.00 mV  
PHONO MM 78 dB (at 5.0 mV input)  
CD, VIDEO, TAPE 1, TAPE 2 96 dB  
BASS TREBLE  
4, 10 dB at 100 Hz  
4, 10 dB at 10 kHz  
Variable Loudness at maximum position  
50 Hz/10 kHz, ± 10 dB/± 5 dB

**TUNER SECTION**

FM (noise: 10 at 75 ohms, 0 dBf - 1 × 10<sup>-10</sup> W)  
FM (noise: 10 at 75 ohms, 0 dBf - 1 × 10<sup>-10</sup> W)  
Usable Sensitivity:  
Signal to Noise Ratio (BPF-A):  
Image Rejection:  
Selectivity (± 300 kHz):  
Frequency Response:  
Stereo Separation  
[μm] (at 1 kHz):  
Receiving Range:  
Usable Sensitivity:  
Signal to Noise Ratio:  
General  
Power Supply:  
Power Consumption:  
Power Output:  
Dimensions:  
Weight:

MONO 82 dB  
STEREO 78 dB  
55 dB  
30 Hz - 15 kHz ± 0.2 dB  
40 dB  
522 - 1611 MHz  
15 μV  
55 dB  
AC 230 V 50 Hz  
190 W  
SWITCHED 100 W  
434 mm (W) × 128 mm (H) × 310 mm (D)  
6.7 kg

**REMOTE CONTROL UNIT**

RC-174  
Infrared remote system  
Power supply:  
External dimensions:  
Weight:

3V DC, Two size "AA" (R6)  
dry cell batteries  
66 mm (W) × 175 mm (H) × 120 mm (D)  
120 g (includes batteries)

Design and specifications are subject to change without prior notice.

**TROUBLESHOOTING**

1. Have all connections been made PROPERLY?
  2. Have you followed all operational instructions correctly?
  3. Check speaker and the turntable systems for proper operation.
- When your unit does not seem to be operating correctly, first check the items in the following table. If the symptom does not correspond to any of the problems as shown below, turn off the power sources immediately and contact your DENON dealer.


| Problem                                                                                         | Cause                                                                                                                                                                                                                                                                               | Remedy                                                                                                                                                                                                                                                                                                                 |
|-------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>FM AND AM RECEPTION</b>                                                                      |                                                                                                                                                                                                                                                                                     |                                                                                                                                                                                                                                                                                                                        |
| Radio program can not be received.                                                              | <ul style="list-style-type: none"> <li>• Antenna connection is wrong.</li> <li>• A signal strength is weak.</li> </ul>                                                                                                                                                              | <ul style="list-style-type: none"> <li>• Check the connection.</li> <li>• Check the antenna installation.</li> </ul>                                                                                                                                                                                                   |
| Noise is reproduced.                                                                            | <ul style="list-style-type: none"> <li>• A signal strength is weak.</li> <li>• Automobile ignition noise interferes with reception.</li> <li>• Other electrical equipment interferes with reception.</li> </ul>                                                                     | <ul style="list-style-type: none"> <li>• Install an outdoor antenna.</li> <li>• Keep the antenna away from the street.</li> <li>• Keep the equipment away from this set, or turn off the power of the other equipment.</li> </ul>                                                                                      |
| The preset frequencies are erased.                                                              | <ul style="list-style-type: none"> <li>• The memory back-up turn (about 1 month) passed.</li> </ul>                                                                                                                                                                                 | <ul style="list-style-type: none"> <li>• Preset again.</li> </ul>                                                                                                                                                                                                                                                      |
| In automatic tuning, the frequency doesn't stop at the radio station.                           | <ul style="list-style-type: none"> <li>• A signal strength is weak.</li> </ul>                                                                                                                                                                                                      | <ul style="list-style-type: none"> <li>• Use manual tuning.</li> </ul>                                                                                                                                                                                                                                                 |
| In automatic tuning, it stops at the one step lower or higher frequency than the radio station. | <ul style="list-style-type: none"> <li>• Noise or strong signal strength is received.</li> </ul>                                                                                                                                                                                    | <ul style="list-style-type: none"> <li>• Use manual tuning for optimum reception.</li> </ul>                                                                                                                                                                                                                           |
| <b>PLAYBACK OF THE AUDIO EQUIPMENTS</b>                                                         |                                                                                                                                                                                                                                                                                     |                                                                                                                                                                                                                                                                                                                        |
| No sound is produced with power on.                                                             | <ul style="list-style-type: none"> <li>• Input and speaker cords connection are wrong.</li> <li>• Speaker switch is off.</li> <li>• The INPUT SELECTOR buttons are in wrong position.</li> <li>• The protective circuit is operating.</li> <li>• The fuse has blown out.</li> </ul> | <ul style="list-style-type: none"> <li>• Check the connection.</li> <li>• Turn on speaker switch.</li> <li>• Check these position.</li> <li>• Turn the power off once, check the connectors to the speakers, then turn the power on again.</li> <li>• Ask your dealer, or the nearest DENON representative.</li> </ul> |
| Audible hum when playing records.                                                               | <ul style="list-style-type: none"> <li>• The input and grounding cords connection of the turntable are wrong.</li> <li>• The cords connection of the cartridge are wrong.</li> <li>• The interference from the nearby TV or radio transmission antenna</li> </ul>                   | <ul style="list-style-type: none"> <li>• Check the connection.</li> <li>• Check the connection.</li> <li>• Ask your dealer, or the nearest DENON representative.</li> </ul>                                                                                                                                            |
| Howling is produced when the volume control is turned up too high while playing records.        | <ul style="list-style-type: none"> <li>• The vibrations and sounds transmit from the speakers to the turntable.</li> </ul>                                                                                                                                                          | <ul style="list-style-type: none"> <li>• Insulate the vibrations, or keep the speakers away from the turntable.</li> </ul>                                                                                                                                                                                             |
| Crackling noise is produced when playing records.                                               | <ul style="list-style-type: none"> <li>• The record is stained with dust.</li> <li>• The stylus tip of the cartridge is stained with the dust.</li> <li>• The cartridge is defective.</li> </ul>                                                                                    | <ul style="list-style-type: none"> <li>• Clean the record.</li> <li>• Clean the stylus tip.</li> <li>• Try the other cartridge.</li> </ul>                                                                                                                                                                             |

# DISASSEMBLY

(To reassemble reverse disassembly)


## 1. Top Cover

- (1) Remove 4 screws ①.
- (2) Remove 3 screws ②.

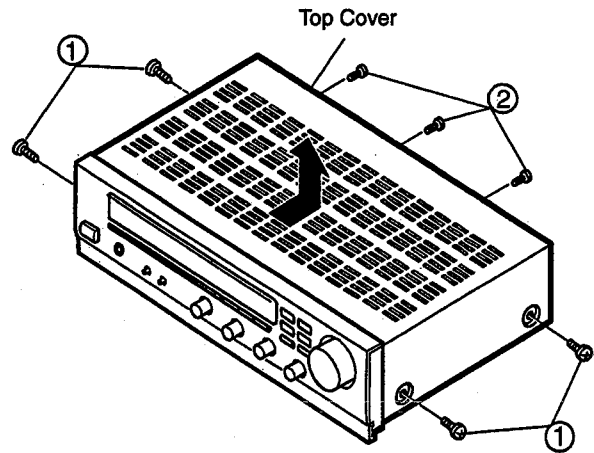


## 2. Front Panel

- (1) Pull out Volume knob ③.
- (2) Remove nut ④.
- (3) Remove 4 screws ⑤ and undo hooks at 3 places.

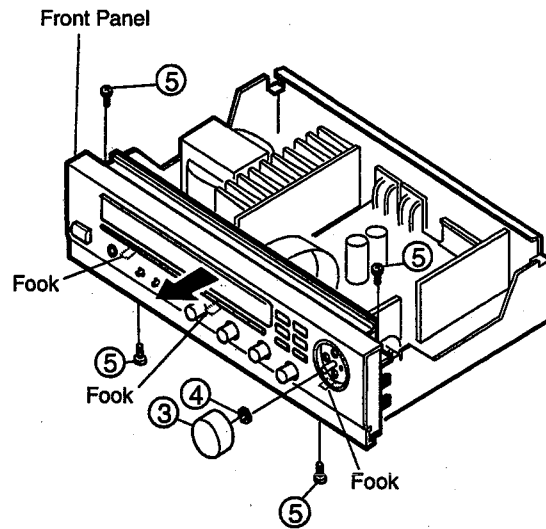


## 3. Rear Panel

- (1) Remove 2 screws ⑥ and 12 fixing screws ⑦.
- (2) Remove hooks at 3 places in arrow direction (↑).

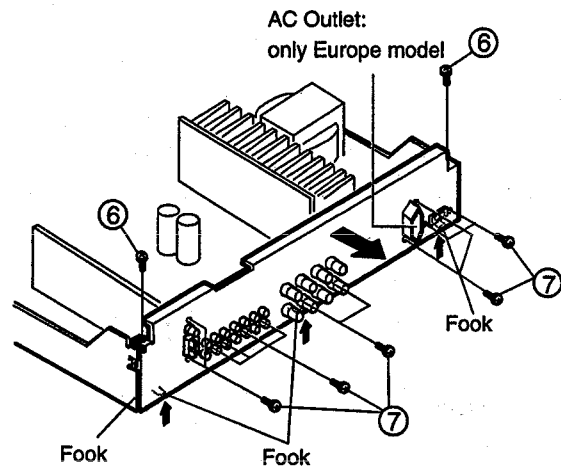

## METHOD OF ADJUSTMENTS

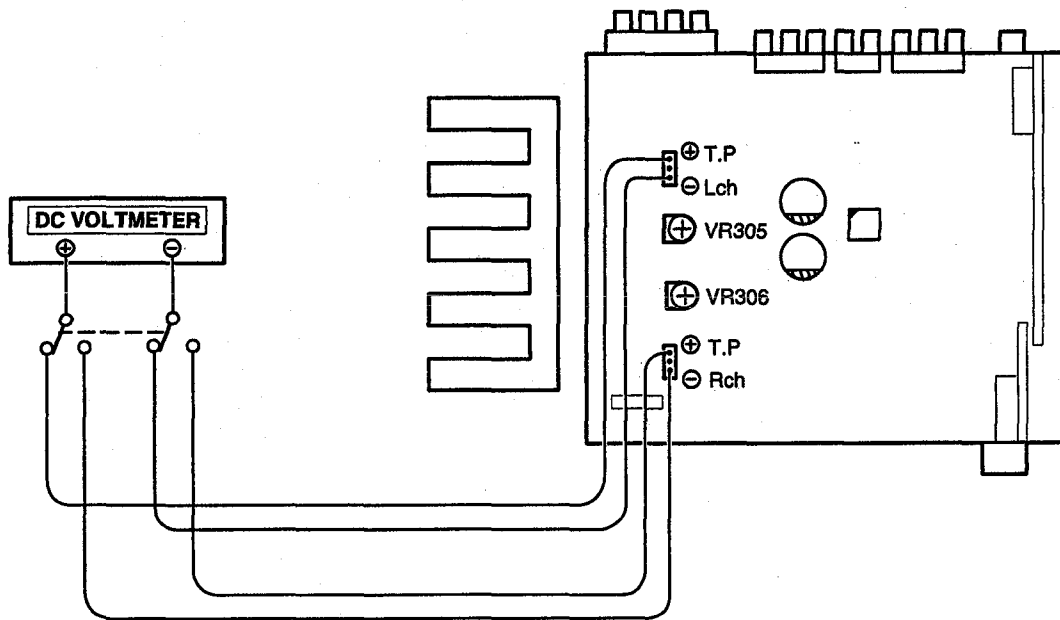


### IDLING CURRENT

- (1) Set controls as follows.
  - POWER Switch → off (■)
  - VOLUME Control → 0 (min.)
  - SPEAKERS → off (■)
  - Temperature → 15°C ~ 30°C (59°F ~ 86°F)
  - VR305 and VR306 of the 1U-2817 (Main Unit) → MIN. (⤵)
- (2) Connect DC Voltmeter to the T.P Lch and T.P Rch of the 1U-2817.
- (3) Turn the Power Switch on and rotate VR305 clockwise so that the DC Voltmeter reads 3 mV  $\pm$ 0.2 mV DC at the T.P Lch. Follow the same procedure to VR306 for T.P Rch.
- (4) Warm up for three minutes, then readjust VR305 and VR306 so that the DC Voltmeter reads 3 mV  $\pm$ 0.5 mV DC.
- (5) Warm up for 10 minutes, then readjust VR 305 and VR306 so that the DC Voltmeter reads 2.7 mV  $\pm$ 0.5 mV DC.



# CONNECTINON DIAGRAM OF MEASURING INSTRUMENTS

## ● FM SECTION

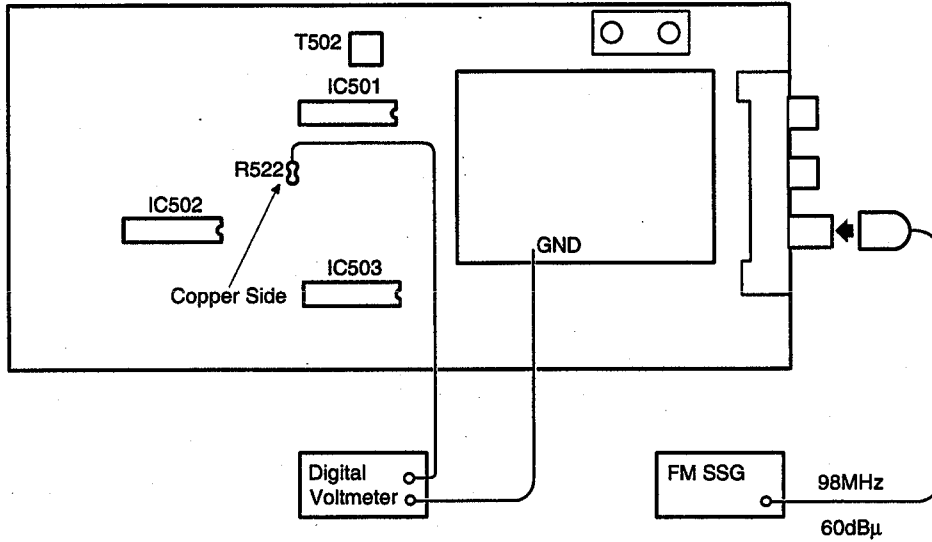

Adjust T502, Potential difference across R522 should be within 50mV.

# BLOCK/LEVEL DIAGRAM

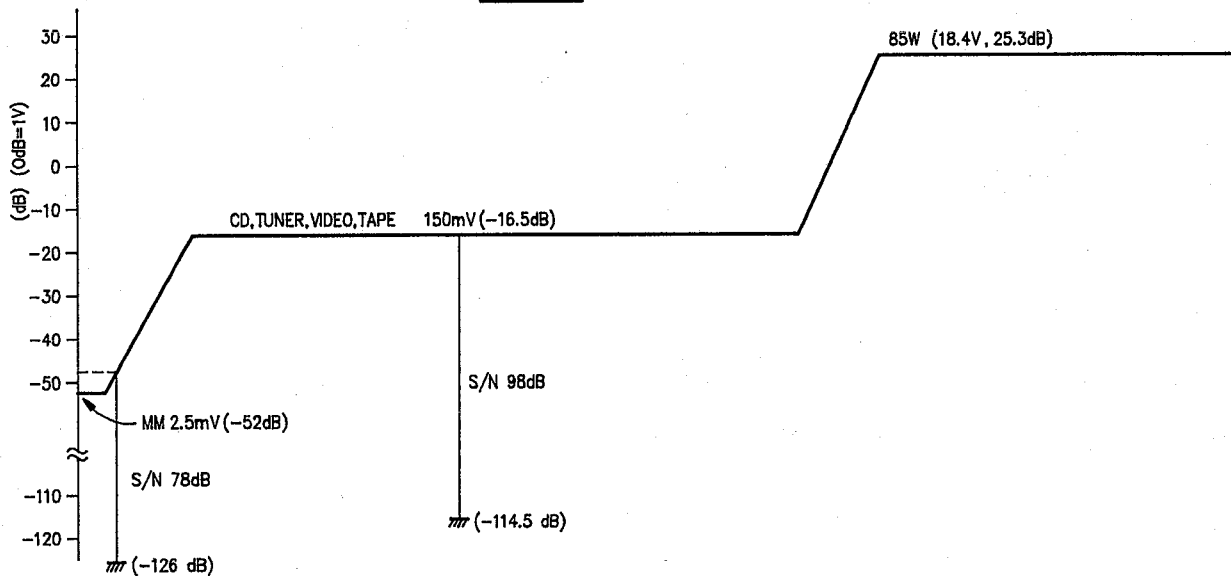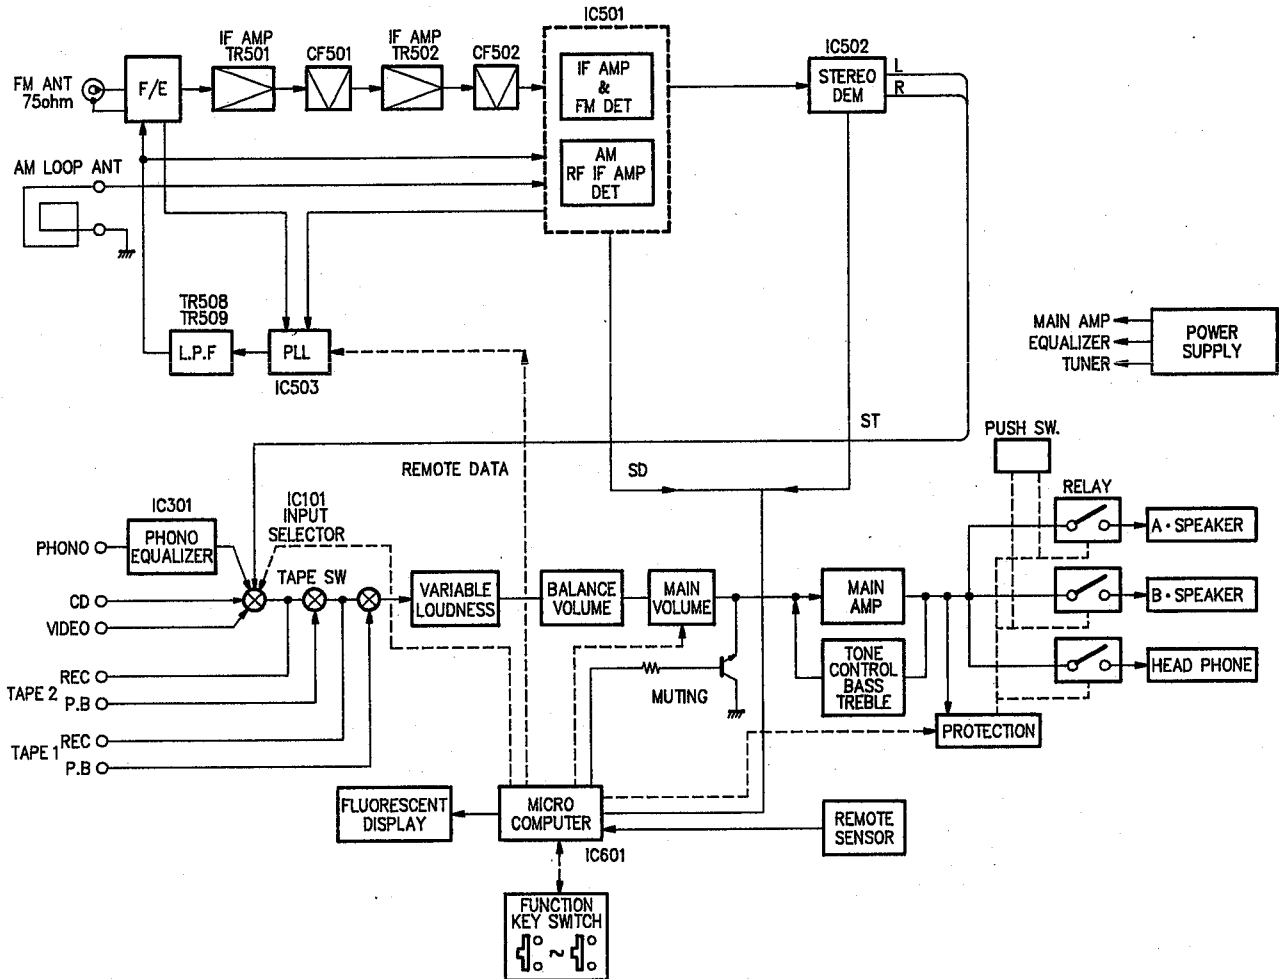

## NOTE FOR PARTS LIST

- Part indicated with the mark "◎" are not always in stock and possibly to take a long period of time for supplying, or in some case supplying of part may be refused.
- When ordering of part, clearly indicate "1" and "I" (I) to avoid mis-supplying.
- Ordering part without stating its part number can not be supplied.
- Part indicated with the mark "★" is not illustrated in the exploded view.
- Not including Carbon Film ±5%, 1/4W Type in the P.W.Board parts list. (Refer to the Schematic Diagram for those parts.)

**WARNING:**

Parts marked with this symbol  have critical characteristics.  
Use ONLY replacement parts recommended by the manufacturer.

### ● Resistors

Ex: RN 14K 2E 182 G FR  
 Type Shape and performance Power Resistance Allowable error Others

|                       |           |          |                          |
|-----------------------|-----------|----------|--------------------------|
| RD : Carbon           | 2B : 1/8W | F : ±1%  | P : Pulse-resistant type |
| RC : Composition      | 2E : 1/4W | G : ±2%  | NL : Low noise type      |
| RS : Metal oxide film | 2H : 1/2W | J : ±5%  | NB : Non-burning type    |
| RW : Winding          | 3A : 1W   | K : ±10% | FR : Fuse-resistor       |
| RN : Metal film       | 3D : 2W   | M : ±20% | F : Lead wire forming    |
| RK : Metal mixture    | 3F : 3W   |          |                          |
|                       | 3H : 5W   |          |                          |

**\* Resistance**

1 8 2 ⇒ 1800 ohm = 1.8 kohm  
 Indicates number of zeros after effective number.  
 2-digit effective number.

• Units: ohm

1 R 2 ⇒ 1.2 ohm  
 1-digit effective number.  
 2-digit effective number, decimal point indicated by R.

• Units: ohm

### ● Capacitors

Ex: CE 04W 1H 2R2 M BP  
 Type Shape and performance Dielectric strength Capacity Allowable error Others

|                                  |           |             |                                  |
|----------------------------------|-----------|-------------|----------------------------------|
| CE : Aluminum foil electrolytic  | 0J : 6.3V | F : ±1%     | HS : High stability type         |
| CA : Aluminum solid electrolytic | 1A : 10V  | G : ±2%     | BP : Non-polar type              |
| CS : Tantalum electrolytic       | 1C : 16V  | J : ±5%     | HR : Ripple-resistant type       |
| CQ : Film                        | 1E : 25V  | K : ±10%    | DL : For charge and discharge    |
| CK : Ceramic                     | 1V : 35V  | M : ±20%    | HF : For assuring high frequency |
| CC : Ceramic                     | 1H : 50V  | Z : +80%    | U : UL part                      |
| CP : Oil                         | 2A : 100V | -20%        | C : CSA part                     |
| CM : Mica                        | 2B : 125V | P : +100%   | W : UL-CSA type                  |
| CF : Metallized                  | 2C : 160V | -0%         | F : Lead wire forming            |
| CH : Metallized                  | 2D : 200V | C : ±0.25pF |                                  |
|                                  | 2E : 250V | D : ±0.5pF  |                                  |
|                                  | 2H : 500V | = : Others  |                                  |
|                                  | 2J : 630V |             |                                  |

**\* Capacity (electrolyte only)**

2 2 2 ⇒ 2200µF  
 Indicates number of zeros after effective number.  
 2-digit effective number.

• Units: µF.

2 R 2 ⇒ 2.2µF  
 1-digit effective number.  
 2-digit effective number, decimal point indicated by R.

• Units: µF.

**\* Capacity (except electrolyte)**

2 2 2 ⇒ 2200pF = 0.0022µF  
 (More than 2) — Indicates number of zeros after effective number.  
 2-digit effective number.

• Units: µF.

2 2 1 ⇒ 220pF  
 (0 or 1) — Indicates number of zeros after effective number.  
 2-digit effective number.

• Units: pF.

• When the dielectric strength is indicated in AC, "AC" is included after the dielectric strength value.



**PRINTED WIRING BOARD PARTS LIST**  
**1U-2817E MAIN UNIT ASS'Y**

| Ref. No.                    | Part No.     | Part Name                 | Remarks           | Ref. No.               | Part No.     | Part Name                   | Remarks           |
|-----------------------------|--------------|---------------------------|-------------------|------------------------|--------------|-----------------------------|-------------------|
| <b>SEMICONDUCTORS GROUP</b> |              |                           |                   | <b>RESISTORS GROUP</b> |              |                             |                   |
| IC101                       | 262 1227 008 | IC LC7821                 |                   | D403                   | 276 0553 905 | Diode 1SR35-200A            |                   |
| IC301                       | 263 0615 902 | IC BA15218F               |                   | D405-410               | 276 0553 905 | Diode 1SR35-200A            |                   |
| IC401                       | 263 1010 001 | IC BA178M06               |                   | D411,412               | 276 0616 907 | Diode 1SS252                |                   |
| IC701                       | 263 1032 908 | IC NJM2082MD              |                   | D451-453               | 276 0616 907 | Diode 1SS252                |                   |
| IC801                       | 262 1701 906 | IC :SAA6579T              |                   | D651                   | 276 0616 907 | Diode 1SS252                |                   |
| IC802                       | 262 1929 908 | IC LC7074M                |                   | ZD101                  | 276 0634 905 | Zener diode MTZJ3.3A        |                   |
| TR251                       | 274 0158 003 | Transistor 2SD2004(P)     |                   | ZD251,252              | 276 0637 902 | Zener diode MTZJ6.2A        |                   |
| TR252                       | 272 0115 008 | Transistor 2SB1328(P)     |                   | ZD401                  | 276 0634 905 | Zener diode MTZJ3.3A        |                   |
| TR253                       | 273 0432 904 | Transistor 2SC2389S(S/E)  |                   | ZD402                  | 276 0633 906 | Zener diode MTZJ6.8C        |                   |
| TR254                       | 271 0280 901 | Transistor 2SA933S(S)     |                   | ZD403                  | 276 0632 907 | Zener diode MTZJ27D         |                   |
| TR255                       | 273 0432 984 | Transistor 2SC2389S(S/E)  |                   | ZD451-453              | 276 0635 904 | Zener diode MTZJ7.5C        |                   |
| TR256                       | 271 0280 901 | Transistor 2SA1038S(S/E)  |                   | SC451                  | 279 0016 904 | Thyristor SF0R1A42          |                   |
| TR257                       | 273 0432 904 | Transistor 2SC2389S(S/E)  |                   | <b>RESISTORS GROUP</b> |              |                             |                   |
| TR301,302                   | 269 0107 900 | Transistor RN1241(A/B)    | Built in resistor | VR305,306              | 211 6093 909 | Semi fixed resistor 6.8Kohm | V06PB682          |
| TR303,304                   | 273 0235 923 | Transistor 2SC1841(E/F)   |                   | R001,002               | 247 0018 905 | Carbon chip 0ohm 1/10W      | RM73B-0R0K        |
| TR305-308                   | 271 0131 924 | Transistor 2SA988(E/F)    |                   | R101-108               | 247 0014 967 | Carbon chip 1Mohm 1/10W     | RM73B-105J        |
| TR309,310                   | 273 0235 923 | Transistor 2SC1841(E/F)   |                   | R109-116               | 247 0006 962 | Carbon chip 470ohm 1/10W    | RM73B-471J        |
| TR315,316                   | 273 0198 905 | Transistor 2SC1815(Y)     |                   | R117                   | 247 0014 925 | Carbon chip 680kohm 1/10W   | RM73B-684J        |
| TR317,318                   | 274 0060 900 | Transistor 2SD667A(C)     |                   | R131-134               | 247 0014 967 | Carbon chip 1Mohm 1/10W     | RM73B-105J        |
| TR319,320                   | 272 0053 908 | Transistor 2SB647A(C)     |                   | R135-138               | 247 0006 962 | Carbon chip 470ohm 1/10W    | RM73B-471J        |
| TR321,322                   | 273 0389 002 | Transistor 2SC3855(O/PHY) |                   | △R201,202              | 244 2052 931 | Metal oxide film 390ohm 1W  | RS14B3A391JNBS(S) |
| TR323,324                   | 271 0240 006 | Transistor 2SA1491(O/PHY) |                   | △R259,260              | 241 2387 940 | Carbon 4.7ohm 1/4W          | RD14B2E4R7JNBS    |
| TR325,326                   | 273 0235 923 | Transistor 2SC1841(E/F)   |                   | R263                   | 247 0009 985 | Carbon chip 10kohm 1/10W    | RM73B-103J        |
| TR401                       | 273 0384 900 | Transistor 2SC2412K(S)    |                   | R264                   | 247 0012 927 | Carbon chip 100kohm 1/10W   | RM73B-104J        |
| TR402                       | 269 0048 904 | Transistor DTC143EK       | Built in resistor | R305,306               | 247 0012 969 | Carbon chip 150kohm 1/10W   | RM73B-154J        |
| TR403                       | 273 0384 900 | Transistor 2SC2412K(S)    |                   | R307,308               | 247 0006 962 | Carbon chip 470ohm 1/10W    | RM73B-471J        |
| TR404                       | 272 0131 901 | Transistor 2SB1041(R)     |                   | R309,310               | 247 0009 914 | Carbon chip 5.1kohm 1/10W   | RM73B-512J        |
| TR451                       | 271 0131 924 | Transistor 2SA988(E/F)    |                   | △R311,312              | 241 2379 932 | Carbon 620ohm 1/4W          | RD14B2E621JNBS    |
| TR452                       | 273 0432 904 | Transistor 2SC2389S(S/E)  |                   | R323,324               | 247 0005 989 | Carbon chip 220kohm 1/10W   | RM73B-221J        |
| TR453                       | 269 0054 901 | Transistor DTC144EK       | Built in resistor | △R329,330              | 241 2378 926 | Carbon 220ohm 1/4W          | RD14B2E221JNBS    |
| TR454                       | 273 0384 900 | Transistor 2SC2412K(S)    |                   | △R331-334              | 244 2043 982 | Metal oxide film 0.22ohm 1W | RS14B3AR22JNBS(S) |
| TR455                       | 273 0388 906 | Transistor 2SC1740S(E)    |                   | R335,336               | 247 0013 984 | Carbon chip 470kohm 1/10W   | RM73B-474J        |
| TR456                       | 271 0192 905 | Transistor 2SA933S(S)     |                   | R351,352               | 247 0012 901 | Carbon chip 82kohm 1/10W    | RM73B-823J        |
| TR457                       | 273 0388 906 | Transistor 2SC1740S(E)    |                   | R353,354               | 247 0012 969 | Carbon chip 150kohm 1/10W   | RM73B-154J        |
| TR458,459                   | 273 0432 904 | Transistor 2SC2389S(S/E)  |                   | R355,356               | 247 0004 922 | Carbon chip 47ohm 1/10W     | RM73B-470J        |
| TR460                       | 273 0384 900 | Transistor 2SC2412K(S)    |                   | R357                   | 247 0009 901 | Carbon chip 4.7kohm 1/10W   | RM73B-472J        |
| TR471                       | 269 0083 901 | Transistor DTA114EK       | Built in resistor | R358                   | 247 0011 944 | Carbon chip 47kohm 1/10W    | RM73B-473J        |
| TR473                       | 269 0054 901 | Transistor DTC144EK       | Built in resistor | △R361-364              | 244 2043 982 | Metal oxide film 0.22ohm 1W | RS14B3AR22JNBS(S) |
| D251                        | 276 0667 008 | Bridge diode 4D4B41       |                   | △R385,386              | 241 2379 932 | Carbon 620ohm 1/4W          | RD14B2E621JNBS    |
| D252                        | 276 0553 905 | Diode 1SR35-200A          |                   | △R387-390              | 241 2377 889 | Carbon 150ohm 1/4W          | RD14B2E151JNBS    |
| D253,254                    | 276 0616 907 | Diode 1SS252              |                   | △R391,392              | 244 2043 987 | Metal oxide film 10ohm 1W   | RS14B3A100JNBS(S) |
| D303-306                    | 276 0619 904 | Diode 1S2471              |                   |                        |              |                             |                   |
| D307-312                    | 276 0616 907 | Diode 1SS252              |                   |                        |              |                             |                   |
| D401,402                    | 276 0616 907 | Diode 1SS252              |                   |                        |              |                             |                   |

| Ref. No.                | Part No.     | Part Name                   | Remarks           |
|-------------------------|--------------|-----------------------------|-------------------|
| R401                    | 247 0013 900 | Carbon chip 220kohm 1/10W   | RM73B--224J       |
| R402                    | 247 0009 985 | Carbon chip 10kohm 1/10W    | RM73B--103J       |
| R403                    | 247 0009 901 | Carbon chip 4.7kohm 1/10W   | RM73B--472J       |
| R404,405                | 247 0007 945 | Carbon chip 1kohm 1/10W     | RM73B--102J       |
| R406                    | 247 0009 985 | Carbon chip 10kohm 1/10W    | RM73B--103J       |
| R407                    | 247 0010 958 | Carbon chip 20kohm 1/10W    | RM73B--203J       |
| R408                    | 247 0009 985 | Carbon chip 10kohm 1/10W    | RM73B--103J       |
| R409                    | 247 0007 945 | Carbon chip 1kohm 1/10W     | RM73B--102J       |
| R410                    | 247 0009 901 | Carbon chip 4.7kohm 1/10W   | RM73B--472J       |
| △R411                   | 244 2051 987 | Metal oxide film 4.7ohm 1W  | RS14B3A4R7JNBS(S) |
| △R412                   | 241 2377 947 | Carbon 100ohm 1/4W          | RD14B2E101JNBS    |
| △R415                   | 241 2387 908 | Carbon 1ohm 1/4W            | RD14B2E010JNBS    |
| △R451,452               | 244 2052 902 | Metal oxide film 2.7kohm 1W | RS14B3A272JNBS(S) |
| △R453                   | 244 2051 990 | Metal oxide film 4.7kohm 1W | RS14B3A472JNBS(S) |
| R460                    | 247 0011 944 | Carbon chip 47kohm 1/10W    | RM73B--473J       |
| △R465,466               | 244 2052 902 | Metal oxide film 2.7kohm 1W | RS14B3A272JNBS(S) |
| △R467                   | 244 2050 991 | Metal oxide film 6.8kohm 1W | RS14B3A682JNBS(S) |
| R468                    | 244 2052 957 | Metal oxide film 5.6kohm 1W | RS14B3A562JNBS(S) |
| R475                    | 247 0010 929 | Carbon chip 15kohm 1/10W    | RM73B--153J       |
| R701,702                | 247 0009 901 | Carbon chip 4.7kohm 1/10W   | RM73B--472J       |
| R703,704                | 247 0012 969 | Carbon chip 150kohm 1/10W   | RM73B--154J       |
| R705,706                | 247 0011 986 | Carbon chip 68kohm 1/10W    | RM73B--683J       |
| R707,708                | 247 0004 922 | Carbon chip 47ohm 1/10W     | RM73B--470J       |
| R709,710                | 247 0005 992 | Carbon chip 240ohm 1/10W    | RM73B--241J       |
| R711,712                | 247 0012 956 | Carbon chip 130kohm 1/10W   | RM73B--134J       |
| R713,714                | 247 0009 998 | Carbon chip 11kohm 1/10W    | RM73B--113J       |
| R715,716                | 247 0003 949 | Carbon chip 22ohm 1/10W     | RM73B--220J       |
| R717,718                | 247 0005 905 | Carbon chip 100ohm 1/10W    | RM73B--101J       |
| R719,720                | 247 0012 927 | Carbon chip 100kohm 1/10W   | RM73B--104J       |
| <b>CAPACITORS GROUP</b> |              |                             |                   |
| C101-108                | 257 0004 903 | Ceramic chip 56pF/50V       | CC73SL1H560J      |
| C109,110                | 253 1179 945 | Ceramic 220pF/50V           | CK45B1H221KT      |
| C111                    | 257 0002 921 | Ceramic chip 10pF/50V       | CC73SL1H100D      |
| C112,113                | 257 0012 982 | Ceramic chip 0.022μF/50V    | CK73F1H223Z       |
| C124,125                | 257 0012 982 | Ceramic chip 0.022μF/50V    | CK73F1H223Z       |
| C127                    | 257 0012 982 | Ceramic chip 0.022μF/50V    | CK73F1H223Z       |
| C131-134                | 257 0004 903 | Ceramic chip 56pF/50V       | CC73SL1H560J      |
| C201-204                | 255 1265 907 | Film 6800pF/50V             | CQ93M1H682J(B)    |
| C205,206                | 257 0006 985 | Ceramic chip 820pF/50V      | CC73SL1H821J      |
| C251-254                | 254 4258 918 | Electrolytic 10μF/35V       | CE04W1V100M       |
| △C257,258               | 254 6201 002 | Electrolytic 7200μF/63V     | CE04W--722MC(DL)  |
| C259                    | 253 1181 904 | Ceramic 0.01μF/50V          | CK45F1H103Z       |
| C307,308                | 257 0006 927 | Ceramic chip 470pF/50V      | CC73SL1H471J      |
| C311-314                | 253 4536 909 | Ceramic 10pF/50V            | CC45SL1H100D      |
| C323,324                | 254 4260 948 | Electrolytic 1μF/50V        | CE04W1H010M       |
| C325,326                | 255 1265 936 | Film 0.01μF/50V             | CQ93M1H103J(B)    |

| Ref. No.  | Part No.     | Part Name                | Remarks           |
|-----------|--------------|--------------------------|-------------------|
| C331,332  | 254 4260 948 | Electrolytic 1μF/50V     | CE04W1H010M       |
| C333,334  | 254 4260 922 | Electrolytic 0.33μF/50V  | CE04W1HR33M       |
| C335,336  | 257 0004 961 | Ceramic chip 100pF/50V   | CC73SL1H101J      |
| C337,338  | 257 0002 992 | Ceramic chip 20pF/50V    | CC73SL1H200J      |
| C339,340  | 254 4254 925 | Electrolytic 33μF/16V    | CE04W1C330M       |
| C341,342  | 257 0004 961 | Ceramic chip 100pF/50V   | CC73SL1H101J      |
| △C353,354 | 255 1034 979 | Metalized 0.1μF/50V      | CF93A1H104J       |
| C355,356  | 255 1265 978 | Film 0.022F/50V          | CQ93M1H223J(B)    |
| C357      | 254 4260 948 | Electrolytic 1mF/50V     | CE04W1H010M       |
| C358      | 253 9030 963 | Ceramic 0.01μF/25V       | CK45-1E103K       |
| C359,360  | 254 4260 948 | Electrolytic 1μF/50V     | CE04W1H010M       |
| C401      | 254 4258 905 | Electrolytic 4.7μF/35V   | CE04W1V4R7M       |
| C402      | 257 0012 966 | Ceramic chip 0.01μF/50V  | CK73F1H103Z       |
| C403      | 254 4260 948 | Electrolytic 1μF/50V     | CE04W1H010M       |
| C404,405  | 253 1181 904 | Ceramic 0.01μF/50V       | CK45F1H103Z       |
| C406      | 259 0007 702 | For back up 8200μF       | SB CAP--822=C     |
| C407      | 254 4254 909 | Electrolytic 10μF/16V    | CE04W1C100M       |
| C408      | 254 4403 734 | Electrolytic 4700μF/25V  | CE04W1E472MC(SMG) |
| C409      | 254 4261 921 | Electrolytic 100μF/50V   | CE04W1H101M       |
| C410      | 254 4260 948 | Electrolytic 1μF/50V     | CE04W1H010M       |
| C451      | 254 4260 980 | Electrolytic 10μF/50V    | CE04W1H100M       |
| C452      | 254 4254 925 | Electrolytic 33μF/16V    | CE04W1C330M       |
| C453      | 254 4250 945 | Electrolytic 330μF/6.3V  | CE04W0J331M       |
| C456      | 255 1265 936 | Film 0.01μF/50V          | CQ93M1H103J(B)    |
| C459,460  | 253 1151 905 | Ceramic 4700pF/500V      | CK45E2H472P       |
| △C461     | 255 1042 903 | Metalized 0.1μF/250V     | CF93A2E104K       |
| C462      | 254 4254 938 | Electrolytic 47μF/16V    | CE04W1C470M       |
| C549      | 254 4252 927 | Electrolytic 47μF/10V    | CE04W1A470M       |
| C701,702  | 257 0003 988 | Ceramic chip 47pF/50V    | CC73SL1H470J      |
| C703,704  | 257 0005 944 | Ceramic chip 220pF/50V   | CC73SL1H221J      |
| C705,706  | 254 4254 909 | Electrolytic 10μF/16V    | CE04W1C100M       |
| C709,710  | 254 4250 929 | Electrolytic 100μF/6.3V  | CE04W0J101M       |
| C711,712  | 255 4199 999 | Film 0.024μF/50V         | CQ92M1H243J(MRZ)  |
| C713,714  | 255 1265 907 | Film 6800pF/50V          | CQ93M1H682J(B)    |
| C715,716  | 254 4254 909 | Electrolytic 10μF/16V    | CE04W1C100M       |
| C717,718  | 253 1181 904 | Ceramic 0.01μF/50V       | CK45F1H103Z       |
| C724      | 254 4260 948 | Electrolytic 1μF/50V     | CE04W1H010M       |
| C725      | 257 0012 982 | Ceramic chip 0.022μF/50V | CK73F1H223Z       |
| C801,802  | 257 0016 962 | Ceramic chip 27pF/50V    | CC73CH1H270J      |
| C803-805  | 254 4250 916 | Electrolytic 47μF/6.3V   | CE04W0J470M       |
| C807,808  | 257 0003 933 | Ceramic chip 30pF/50V    | CC73SL1H300J      |
| C809      | 257 0012 966 | Ceramic chip 0.01μF/50V  | CK73F1H103Z       |
| C810      | 254 4250 916 | Electrolytic 47μF/6.3V   | CE04W0J470M       |
| C811      | 257 0006 943 | Ceramic chip 560pF/50V   | CC73SL1H561J      |

1U-2818 TUNER UNIT ASS'Y

| Ref. No.                  | Part No.     | Part Name                | Remarks             | Ref. No.                                                   | Part No.     | Part Name                | Remarks           |
|---------------------------|--------------|--------------------------|---------------------|------------------------------------------------------------|--------------|--------------------------|-------------------|
| <b>OTHERS PARTS GROUP</b> |              |                          |                     | <b>SEMICONDUCTORS GROUP</b>                                |              |                          |                   |
| CB29D                     | 205 0990 045 | 29P FFC connector base   |                     | IC501                                                      | 263 0891 001 | IC LA1265(S)             |                   |
| CB6A,6C                   | 205 0918 001 | 6P bottom socket         |                     | IC502                                                      | 263 0439 007 | IC LA3401                |                   |
| CB8A                      | 205 0918 014 | 8P bottom socket         |                     | IC503                                                      | 263 0791 907 | IC LM7001M               |                   |
| CB8B,8C                   | 205 0806 090 | 8P connector base (9115) |                     | IC504                                                      | 263 0794 001 | IC NJM78M12FA(S)         |                   |
| CN3C                      | 203 2377 000 | 2P DA-DA connector cord  |                     | TR501                                                      | 275 0074 902 | Transistor 2SK211(Y/GR)  |                   |
| CN7A                      | 205 0653 078 | 7P VH connector base     |                     | TR502                                                      | 273 0438 908 | Transistor 2SC2413K (Q)  |                   |
| L391,392                  | 235 0104 007 | Inductor(1MHz)           |                     | TR503                                                      | 269 0157 905 | Transistor DTB123EK      | Built in resistor |
| L701,702                  | 235 9003 002 | FTZ choke coil           |                     | TR504                                                      | 269 0083 901 | Transistor DTA114EK      | Built in resistor |
| RL451,452                 | 214 0167 005 | Relay(G5Z-2A)            |                     | TR505,506                                                  | 269 0054 901 | Transistor DTC144EK      | Built in resistor |
| RL453                     | 214 0127 003 | Relay(RY-12W)            |                     | TR507                                                      | 271 0279 909 | Transistor 2SA1515(R)    |                   |
| TH451                     | 279 0034 067 | Posistor                 | PTH9M04BB222TS2F333 | TR508                                                      | 275 0075 901 | Transistor 2SK209(Y/GR)  |                   |
| TP001,002                 | 205 0190 036 | 3P NH Connector base     | TEST POINT          | TR509                                                      | 273 0403 904 | Transistor 2SC2712(Y/GR) |                   |
| XL601                     | 399 0178 007 | Crystal                  | 4.332MHz            | D501                                                       | 276 0559 909 | Diode DAP202K            |                   |
| XT801                     | 399 0041 901 | Resonator                | CSA4.00MG           |                                                            |              |                          |                   |
|                           | 205 0484 001 | 8P speaker terminal      | Europe model        | <b>RESISTORS GROUP (Not included carbon film ±5% 1/4W)</b> |              |                          |                   |
|                           | 203 0475 072 | 1P contact Ass'y         |                     | R001-016                                                   | 247 0018 905 | Chip 0ohm 1/10W          | RM73B-0R0K        |
|                           | 205 0472 013 | 8P speaker terminal      | U.K model           | R501                                                       | 247 0004 906 | Chip 39ohm 1/10W         | RM73B-390J        |
|                           | 204 8485 009 | 4P pin jack(S-GND)       |                     | R502                                                       | 247 0007 945 | Chip 1kohm 1/10W         | RM73B-102J        |
|                           | 204 8486 008 | 6P pin jack(S-GND)       |                     | R503                                                       | 247 0009 985 | Chip 10kohm 1/10W        | RM73B-103J        |
|                           |              |                          |                     | R504                                                       | 247 0009 927 | Chip 5.6kohm 1/10W       | RM73B-562J        |
|                           |              |                          |                     | R505                                                       | 247 0006 920 | Chip 330ohm 1/10W        | RM73B-331J        |
|                           |              |                          |                     | R506                                                       | 247 0009 901 | Chip 4.7kohm 1/10W       | RM73B-472J        |
|                           |              |                          |                     | R507                                                       | 247 0005 989 | Chip 220ohm 1/10W        | RM73B-221J        |
|                           |              |                          |                     | R508,509                                                   | 247 0006 920 | Chip 330ohm 1/10W        | RM73B-331J        |
|                           |              |                          |                     | R510                                                       | 247 0006 988 | Chip 560ohm 1/10W        | RM73B-561J        |
|                           |              |                          |                     | R511                                                       | 247 0012 927 | Chip 100kohm 1/10W       | RM73B-104J        |
|                           |              |                          |                     | R512                                                       | 247 0009 914 | Chip 5.1kohm 1/10W       | RM73B-512J        |
|                           |              |                          |                     | R513                                                       | 247 0005 905 | Chip 100ohm 1/10W        | RM73B-101J        |
|                           |              |                          |                     | R514                                                       | 247 0008 986 | Chip 3.9kohm 1/10W       | RM73B-392J        |
|                           |              |                          |                     | R515                                                       | 247 0006 946 | Chip 390ohm 1/10W        | RM73B-391J        |
|                           |              |                          |                     | R516                                                       | 247 0005 947 | Chip 150ohm 1/0W         | RM73B-151J        |
|                           |              |                          |                     | R517                                                       | 247 0009 985 | Chip 10kohm 1/10W        | RM73B-103J        |
|                           |              |                          |                     | R518                                                       | 247 0018 905 | Chip 0ohm 1/10W          | RM73B-0R0K        |
|                           |              |                          |                     | R519                                                       | 247 0009 901 | Chip 4.7kohm 1/10W       | RM73B-472J        |
|                           |              |                          |                     | R520                                                       | 247 0004 980 | Chip 82ohm 1/10W         | RM73B-820J        |
|                           |              |                          |                     | R521                                                       | 247 0008 944 | Chip 2.7kohm 1/10W       | RM73B-272J        |
|                           |              |                          |                     | R522                                                       | 247 0011 902 | Chip 33kohm 1/10W        | RM73B-333J        |
|                           |              |                          |                     | R523-525                                                   | 247 0009 985 | Chip 10kohm 1/10W        | RM73B-103J        |
|                           |              |                          |                     | R526                                                       | 247 0008 957 | Chip 3kohm 1/10W         | RM73B-302J        |
|                           |              |                          |                     | R527                                                       | 247 0011 986 | Chip 68kohm 1/10W        | RM73B-683J        |
|                           |              |                          |                     | R528                                                       | 247 0009 956 | Chip 7.5kohm 1/10W       | RM73B-752J        |
|                           |              |                          |                     | R529                                                       | 247 0008 960 | Chip 3.3kohm 1/10W       | RM73B-332J        |
|                           |              |                          |                     | R530                                                       | 247 0012 927 | Chip 100kohm 1/10W       | RM73B-104J        |
|                           |              |                          |                     | R532                                                       | 247 0009 985 | Chip 10kohm 1/10W        | RM73B-103J        |
|                           |              |                          |                     | R533                                                       | 247 0007 945 | Chip 1kohm 1/10W         | RM73B-102J        |
|                           |              |                          |                     | R534                                                       | 247 0011 915 | Chip 36kohm 1/10W        | RM73B-363J        |

| Ref. No. | Part No.     | Part Name          | Remarks     |
|----------|--------------|--------------------|-------------|
| R535     | 247 0010 974 | Chip 24kohm 1/10W  | RM73B--243J |
| R536     | 247 0012 985 | Chip 180kohm 1/10W | RM73B--184J |
| R537     | 247 0012 998 | Chip 200kohm 1/10W | RM73B--204J |
| R538     | 247 0012 985 | Chip 180kohm 1/10W | RM73B--184J |
| R539     | 247 0012 998 | Chip 200kohm 1/10W | RM73B--204J |
| R540,541 | 247 0008 902 | Chip 1.8kohm 1/10W | RM73B--182J |
| R542,543 | 247 0009 901 | Chip 4.7kohm 1/10W | RM73B--472J |
| R544     | 247 1007 986 | Chip 1.5kohm 1/8W  | RM73B2B152J |
| R545     | 247 0009 985 | Chip 10kohm 1/10W  | RM73B--103J |
| R546     | 247 0012 927 | Chip 100kohm 1/10W | RM73B--104J |

**CAPACITORS GROUP**

|          |              |                                     |               |
|----------|--------------|-------------------------------------|---------------|
| C501-506 | 257 0012 966 | Chip(Ceramic) 0.01µF/50V            | CK73F1H103Z   |
| C507     | 257 0002 947 | Chip(Ceramic) 12pF/50V              | CC73SL1H120J  |
| C508     | 254 4254 909 | Electrolytic 10µF/16V               | CE04W1C100M   |
| C509     | 257 0004 961 | Chip(Ceramic) 100pF/50V             | CC73SL1H101J  |
| C510     | 257 0012 966 | Chip(Ceramic) 0.01µF/50V            | CK73F1H103Z   |
| C511     | 254 4260 906 | Electrolytic 0.1µF/50V              | CE04W1H0R1M   |
| C513     | 254 3056 917 | Electrolytic 1µF/50V<br>(Non-polar) | CE04D1H010MBP |
| C514     | 257 0012 982 | Chip(Ceramic) 0.022µF/50V           | CK73F1H223Z   |
| C515,516 | 257 0002 976 | Chip(Ceramic) 16pF/50V              | CC73SL1H160J  |
| C517     | 254 4254 938 | Electrolytic 47µF/16V               | CE04W1C470M   |
| C518,519 | 257 0012 966 | Chip(Ceramic) 0.01µF/50V            | CK73F1H103Z   |
| C520     | 254 4260 922 | Electrolytic 0.33µF/50V             | CE04W1HR33M   |
| C521     | 257 0012 966 | Chip(Ceramic) 0.01µF/50V            | CK73F1H103Z   |
| C522     | 254 4256 936 | Electrolytic 47µF/25V               | CE04W1E470M   |
| C523     | 254 4260 948 | Electrolytic 1µF/50V                | CE04W1H010M   |
| C524     | 254 4260 964 | Electrolytic 3.3µF/50V              | CE04W1H3R3M   |
| C525     | 257 0012 982 | Chip(Ceramic) 0.022µF/50V           | CK73F1H223Z   |
| C526     | 257 0012 966 | Chip(Ceramic) 0.01µF/50V            | CK73F1H103Z   |
| C527     | 254 4260 948 | Electrolytic 1µF/50V                | CE04W1H010M   |
| C528     | 254 4254 909 | Electrolytic 10µF/16V               | CE04W1C100M   |
| C529     | 257 1013 951 | Chip(Ceramic) 0.047µF/25V           | CK73F1E473K   |
| C530     | 254 4254 912 | Electrolytic 22µF/16V               | CE04W1C220M   |
| C531     | 257 0004 961 | Chip(Ceramic) 100pF/50V             | CC73SL1H101J  |
| C532     | 254 4260 948 | Electrolytic 1µF/50V                | CE04W1H010M   |
| C533     | 254 4260 919 | Electrolytic 0.22µF/50V             | CE04W1HR22M   |
| C534     | 254 4260 948 | Electrolytic 1µF/50V                | CE04W1H010M   |
| C535,536 | 257 0012 966 | Chip(Ceramic) 0.01µF/50V            | CK73F1H103Z   |
| C537     | 254 4254 912 | Electrolytic 22µF/16V               | CE04W1C220M   |
| C538     | 254 4254 938 | Electrolytic 47µF/16V               | CE04W1C470M   |
| C539,540 | 257 0005 960 | Chip(Ceramic) 270pF/50V             | CC73SL1H271J  |
| C541     | 254 4260 951 | Electrolytic 2.2µF/50V              | CE04W1H2R2M   |
| C545     | 253 0012 966 | Chip(Ceramic) 0.01µF/50V            | CK73F1H103Z   |
| C548     | 254 4260 951 | Electrolytic 2.2µF/50V              | CE04W1H2R2M   |
| C550,551 | 254 4260 948 | Electrolytic 1µF/50V                | CE04W1H010M   |
| C553,554 | 257 0012 966 | Chip(Ceramic) 0.01µF/50V            | CK73F1H103Z   |
| C555     | 256 1034 937 | Metalized 0.047µF/50V               | CF93A1H473J   |
| C561     | 257 0012 966 | Chip(Ceramic) 0.01µF/50V            | CK73F1H103Z   |

| Ref. No.                  | Part No.     | Part Name                  | Remarks    |
|---------------------------|--------------|----------------------------|------------|
| <b>OTHERS PARTS GROUP</b> |              |                            |            |
| CF501,502                 | 261 0064 007 | Ceramic filter             | SFT10.7MS2 |
| CF504                     | 261 0101 009 | :Ceramic filter            | BFU450C4N  |
| CN8B,8C                   | 205 0805 091 | 8P connector socket        |            |
| FE501                     | 216 0065 006 | Front end                  |            |
| T501                      | 231 1913 004 | MW antenna OSC coil        |            |
| T502                      | 231 2099 008 | FM DET trans               |            |
| T503                      | 231 3904 008 | :AM IFT                    |            |
| T504                      | 232 9010 009 | Antibirdie filter          |            |
| T505,506                  | 232 0085 004 | :LPF                       |            |
| XL502                     | 261 0103 007 | :Resonator                 | CSB456F11  |
| XL503                     | 399 0075 003 | Crystal                    | 7.2MHz     |
|                           | 205 0847 004 | 3P antenna terminal(PAL/F) |            |
|                           | 203 0526 031 | 1P Contact Ass'y           |            |

**KU-9328 DISPLAY UNIT ASS'Y**

| Ref. No.                                                   | Part No.     | Part Name           | Remarks           |
|------------------------------------------------------------|--------------|---------------------|-------------------|
| <b>SEMICONDUCTORS GROUP</b>                                |              |                     |                   |
| IC601                                                      | 262 2249 001 | IC TMP87CM71F-6348  |                   |
| IC602                                                      | 263 0905 900 | IC BA6208F          |                   |
| ZD651                                                      | 276 0654 901 | Zener diode DTZ8.2B |                   |
| <b>RESISTORS GROUP (Not included carbon film ±5% 1/4W)</b> |              |                     |                   |
| VR301                                                      | 211 0841 018 | Variable 100kohm    | V14P22FW104K      |
| VR302                                                      | 211 0831 002 | Variable 100kohm    | V1620V25FB104(MG) |
| VR303                                                      | 211 0842 017 | Variable 250kohm    | V14P22FC254K      |
| VR304                                                      | 211 0843 016 | Variable 50kohm     | V14P22FC503K      |
| VR307                                                      | 211 9131 004 | Variable 100kohm    | V14P22FB104K      |
| R301,302                                                   | 247 0011 928 | Chip 39kohm 1/10W   | RM73B-393J        |
| R303,304                                                   | 247 0009 943 | Chip 6.8kohm 1/10W  | RM73B-682J        |
| R361,362                                                   | 247 0011 973 | Chip 62kohm 1/10W   | RM73B-623J        |
| R363,364                                                   | 247 0009 998 | Chip 11kohm 1/10W   | RM73B-113J        |
| R365,366                                                   | 247 0008 931 | Chip 2.4kohm 1/10W  | RM73B-242J        |
| R367,368                                                   | 247 0013 984 | Chip 470kohm 1/10W  | RM73B-474J        |
| R369,370                                                   | 247 0010 945 | Chip 18kohm 1/10W   | RM73B-183J        |
| R371,372                                                   | 247 0009 943 | Chip 6.8kohm 1/10W  | RM73B-682J        |
| R373,374                                                   | 247 0006 917 | Chip 300ohm 1/10W   | RM73B-301J        |
| R375,376                                                   | 247 0011 944 | Chip 47kohm 1/10W   | RM73B-473J        |
| R379,380                                                   | 247 0009 901 | Chip 4.7kohm 1/10W  | RM73B-472J        |
| R651                                                       | 247 1009 900 | Chip 4.7kohm 1/8W   | RM73B2B472J       |
| R652-657                                                   | 247 0009 985 | Chip 10kohm 1/10W   | RM73B-103J        |
| R665                                                       | 247 0007 945 | Chip 1kohm 1/10W    | RM73B-102J        |
| R666                                                       | 247 0005 976 | Chip 200ohm 1/10W   | RM73B-201J        |
| R667                                                       | 247 0006 917 | Chip 300ohm 1/10W   | RM73B-301J        |
| R668                                                       | 247 0007 945 | Chip 1kohm 1/10W    | RM73B-102J        |
| R669                                                       | 247 0005 976 | Chip 200ohm 1/10W   | RM73B-201J        |
| R670                                                       | 247 0006 917 | Chip 300ohm 1/10W   | RM73B-301J        |
| R671                                                       | 247 0007 945 | Chip 1kohm 1/10W    | RM73B-102J        |
| R672                                                       | 247 0005 976 | Chip 200ohm 1/10W   | RM73B-201J        |
| R673                                                       | 247 0006 917 | Chip 300ohm 1/10W   | RM73B-301J        |
| R674                                                       | 247 0006 975 | Chip 510ohm 1/10W   | RM73B-511J        |
| R675                                                       | 247 0007 945 | Chip 1kohm 1/10W    | RM73B-102J        |
| R676                                                       | 247 0007 945 | Chip 1kohm 1/10W    | RM73B-102J        |
| R677                                                       | 247 0005 976 | Chip 200ohm 1/10W   | RM73B-201J        |
| R678                                                       | 247 0006 917 | Chip 300ohm 1/10W   | RM73B-301J        |
| R679                                                       | 247 0006 975 | Chip 510ohm 1/10W   | RM73B-511J        |
| R680                                                       | 247 0007 945 | Chip 1kohm 1/10W    | RM73B-102J        |
| R681                                                       | 247 0009 985 | Chip 10kohm 1/10W   | RM73B-103J        |
| R682,683                                                   | 247 0009 985 | Chip 10kohm 1/10W   | RM73B-103J        |
| R685                                                       | 247 0008 957 | Chip 3kohm 1/10W    | RM73B-302J        |

| Ref. No.                  | Part No.     | Part Name                 | Remarks          |
|---------------------------|--------------|---------------------------|------------------|
| <b>CAPACITORS GROUP</b>   |              |                           |                  |
| C300                      | 257 0012 966 | Chip(Ceramic) 0.01µF/50V  | CK73F1H103Z      |
| C301,302                  | 257 0006 943 | Ceramic 560pF/50V         | CC73SL1H561J     |
| C303,304                  | 255 1265 978 | Film 0.022µF/50V          | CQ93M1H223J(B)   |
| C361,362                  | 257 0004 961 | Ceramic 100pF/50V         | CC73SL1H101J     |
| C363,364                  | 255 1265 981 | Film 0.027µF/50V          | CQ93M1H273J(B)   |
| C365,366                  | 256 1034 982 | Metalized 0.12µF/50V      | CF93A1H124J      |
| C367,368                  | 255 1264 924 | Film 1500pF/50V           | CQ93M1H152J(B)   |
| C369,370                  | 255 1265 936 | Film 0.01µF/50V           | CQ93M1H103J(B)   |
| C651                      | 257 0012 966 | Chip(Ceramic) 0.01µF/50V  | CK73F1H103Z      |
| C652                      | 254 4300 963 | Electrolytic 100µF/6.3V   | CE04WQJ101M(SRE) |
| C653                      | 257 0012 966 | Chip(Ceramic) 0.01µF/50V  | CK73F1H103Z      |
| C655                      | 254 4299 964 | Electrolytic 47µF/16V     | CE04W1C470M(SRE) |
| C657                      | 257 0012 982 | Chip(Ceramic) 0.022µF/50V | CK73F1H223Z      |
| C666                      | 257 0004 961 | Ceramic 100pF/50V         | CC73SL1H101J     |
| <b>OTHERS PARTS GROUP</b> |              |                           |                  |
| CB8D                      | 205 0919 026 | 8P JQ socket(Side)        |                  |
| CN29D                     | 205 0990 045 | 29P FFC connector base    |                  |
| CN6A,6C                   | 205 0917 002 | 6P bottom plug            |                  |
| CN8A                      | 205 0917 015 | 8P bottom plug            |                  |
| CN8D                      | 205 0408 045 | 8P JQ socket              |                  |
| FL401                     | 393 4155 002 | FL tube                   | FIP14AM7R        |
| JK201                     | 204 8354 017 | Head phone jack           | Black model      |
| JK201                     | 204 8355 003 | Head phone jack           | Gold model       |
| RM601                     | 499 0150 008 | Remote sensor             | SBX1610-52       |
| SW302,303                 | 212 1140 009 | Push switch(ESB6440)      |                  |
| SW601-617                 | 212 5604 910 | Tact switch               |                  |
| XL651                     | 399 0261 901 | Resonator                 | DCRH4.00M        |
|                           | 414 0740 006 | Shield plate              |                  |

**1U-2915 POWER UNIT ASS'Y**

| Ref. No.                              | Part No.     | Part Name              | Remarks        |
|---------------------------------------|--------------|------------------------|----------------|
| <b>CAPACITORS GROUP</b>               |              |                        |                |
| △C411                                 | 253 8014 702 | Ceramic 0.01µF/400V AC | CK45F2GA103MC  |
| <b>OTHERS PARTS GROUP CK45=1E103K</b> |              |                        |                |
| △AC401                                | 203 3961 004 | 1P AC outlet           | Except to U.K. |
| △CN2A                                 | 203 2349 009 | 2P Inlet               |                |
| CN3A                                  | 205 0581 001 | 2P VH connector base   |                |
| △F401                                 | 206 1075 030 | Fuse(2.0A)             |                |
| △F402                                 | 206 1075 001 | Fuse(1A)               | Except to U.K. |
| △SW401                                | 212 1031 008 | Power switch(TV-5)     |                |
|                                       | 415 0299 000 | Condenser cover        |                |
|                                       | 202 0040 909 | Fuse clip              |                |

PRINTED WIRING BOARD PATTERNS

1

2

3

4

5

6

7

8

1U-2817 MAIN UNIT ASS'Y

1U-2915 POWER UNIT ASS'Y


A

B


C

D

E

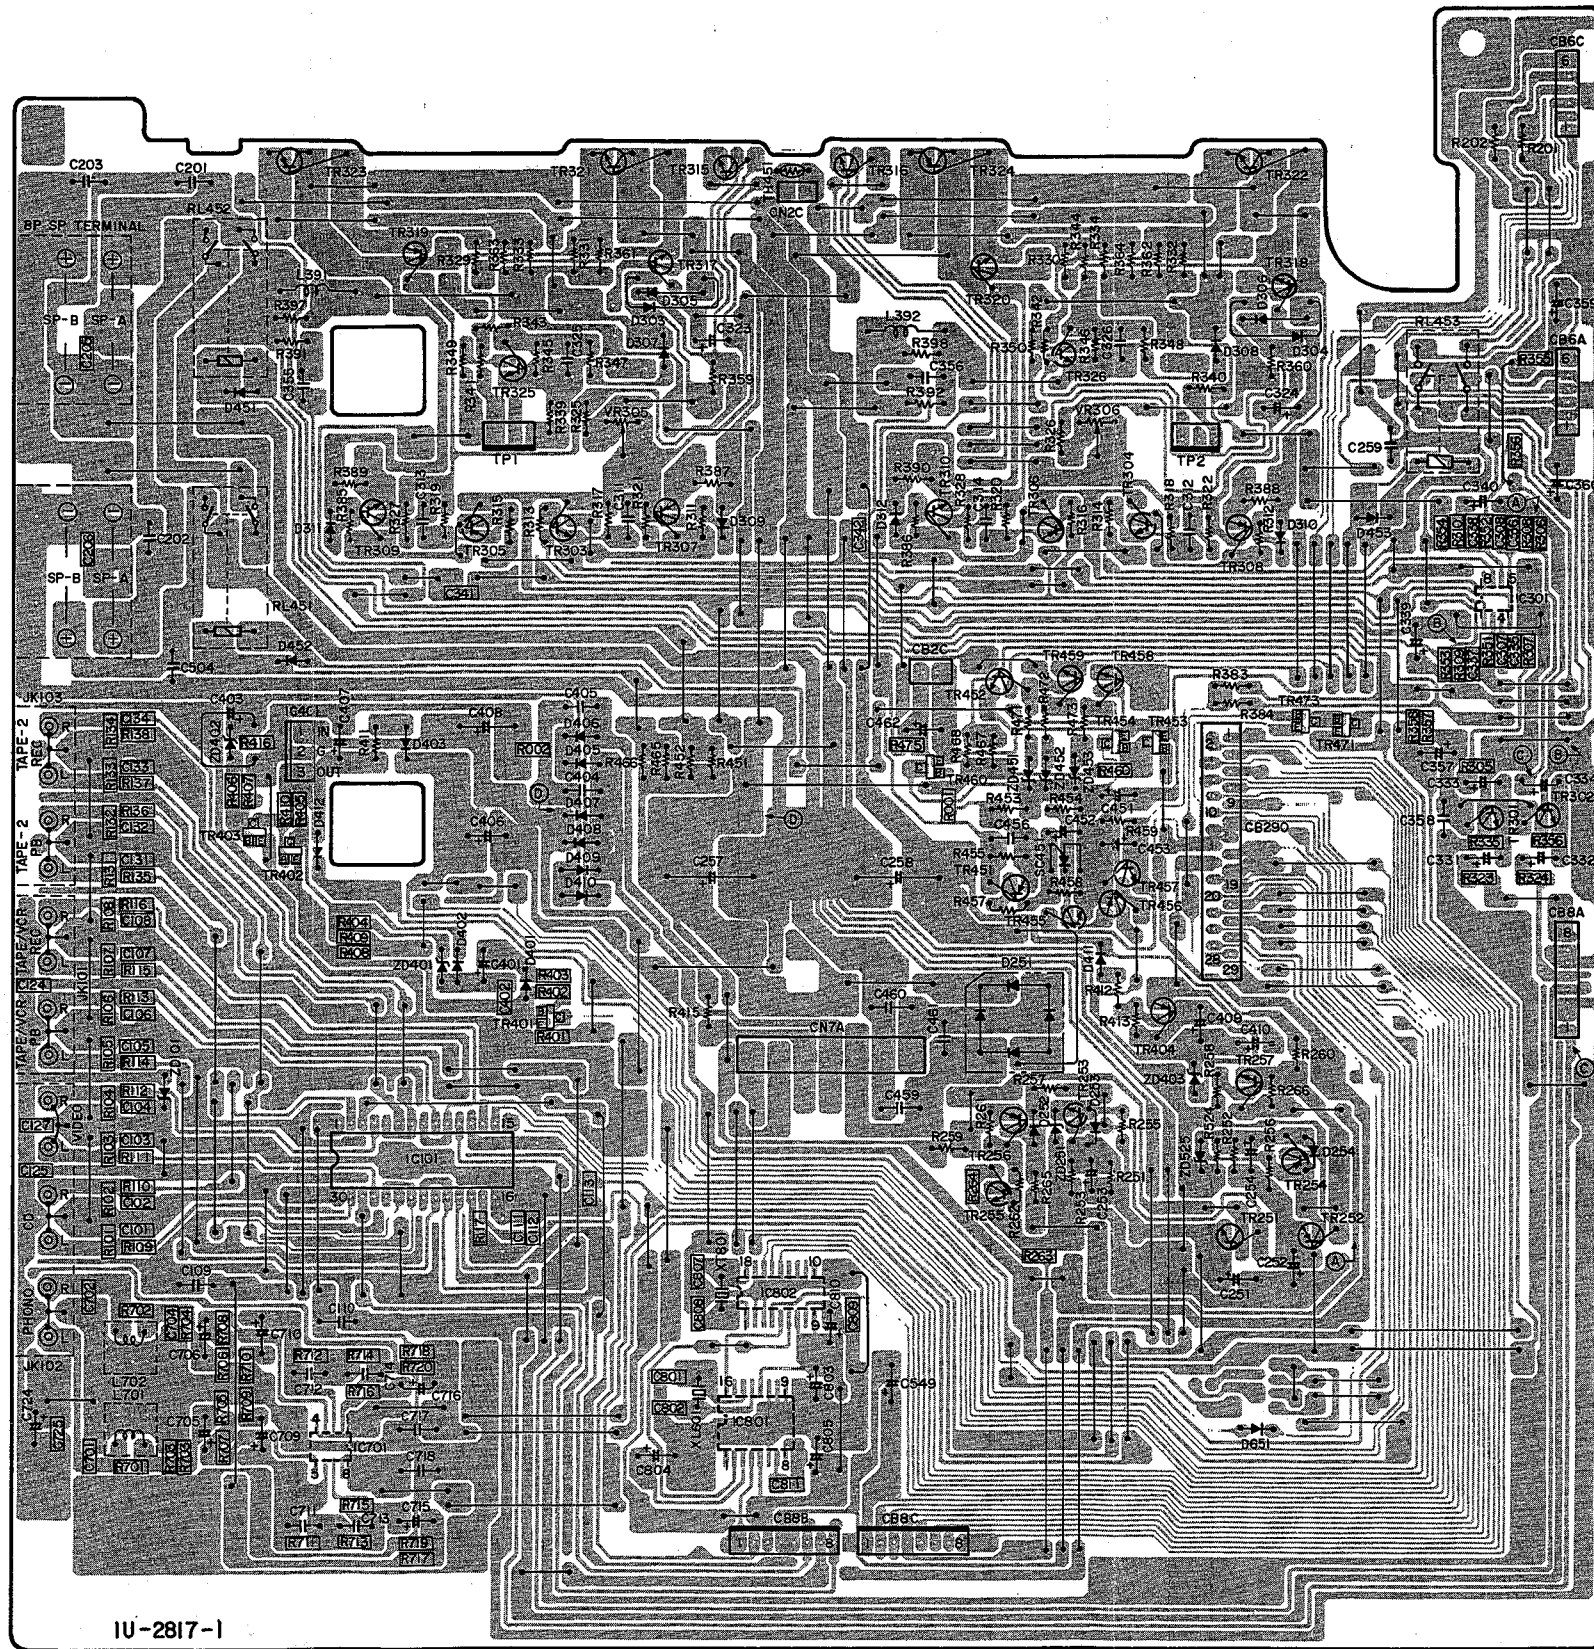


1U-2817-1

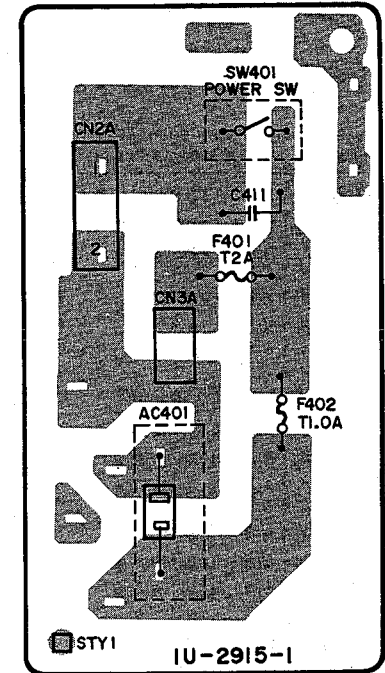

1U-2915-1


1 2 3 4 5 6 7 8

KU-9328 DISPLAY UNIT ASS'Y

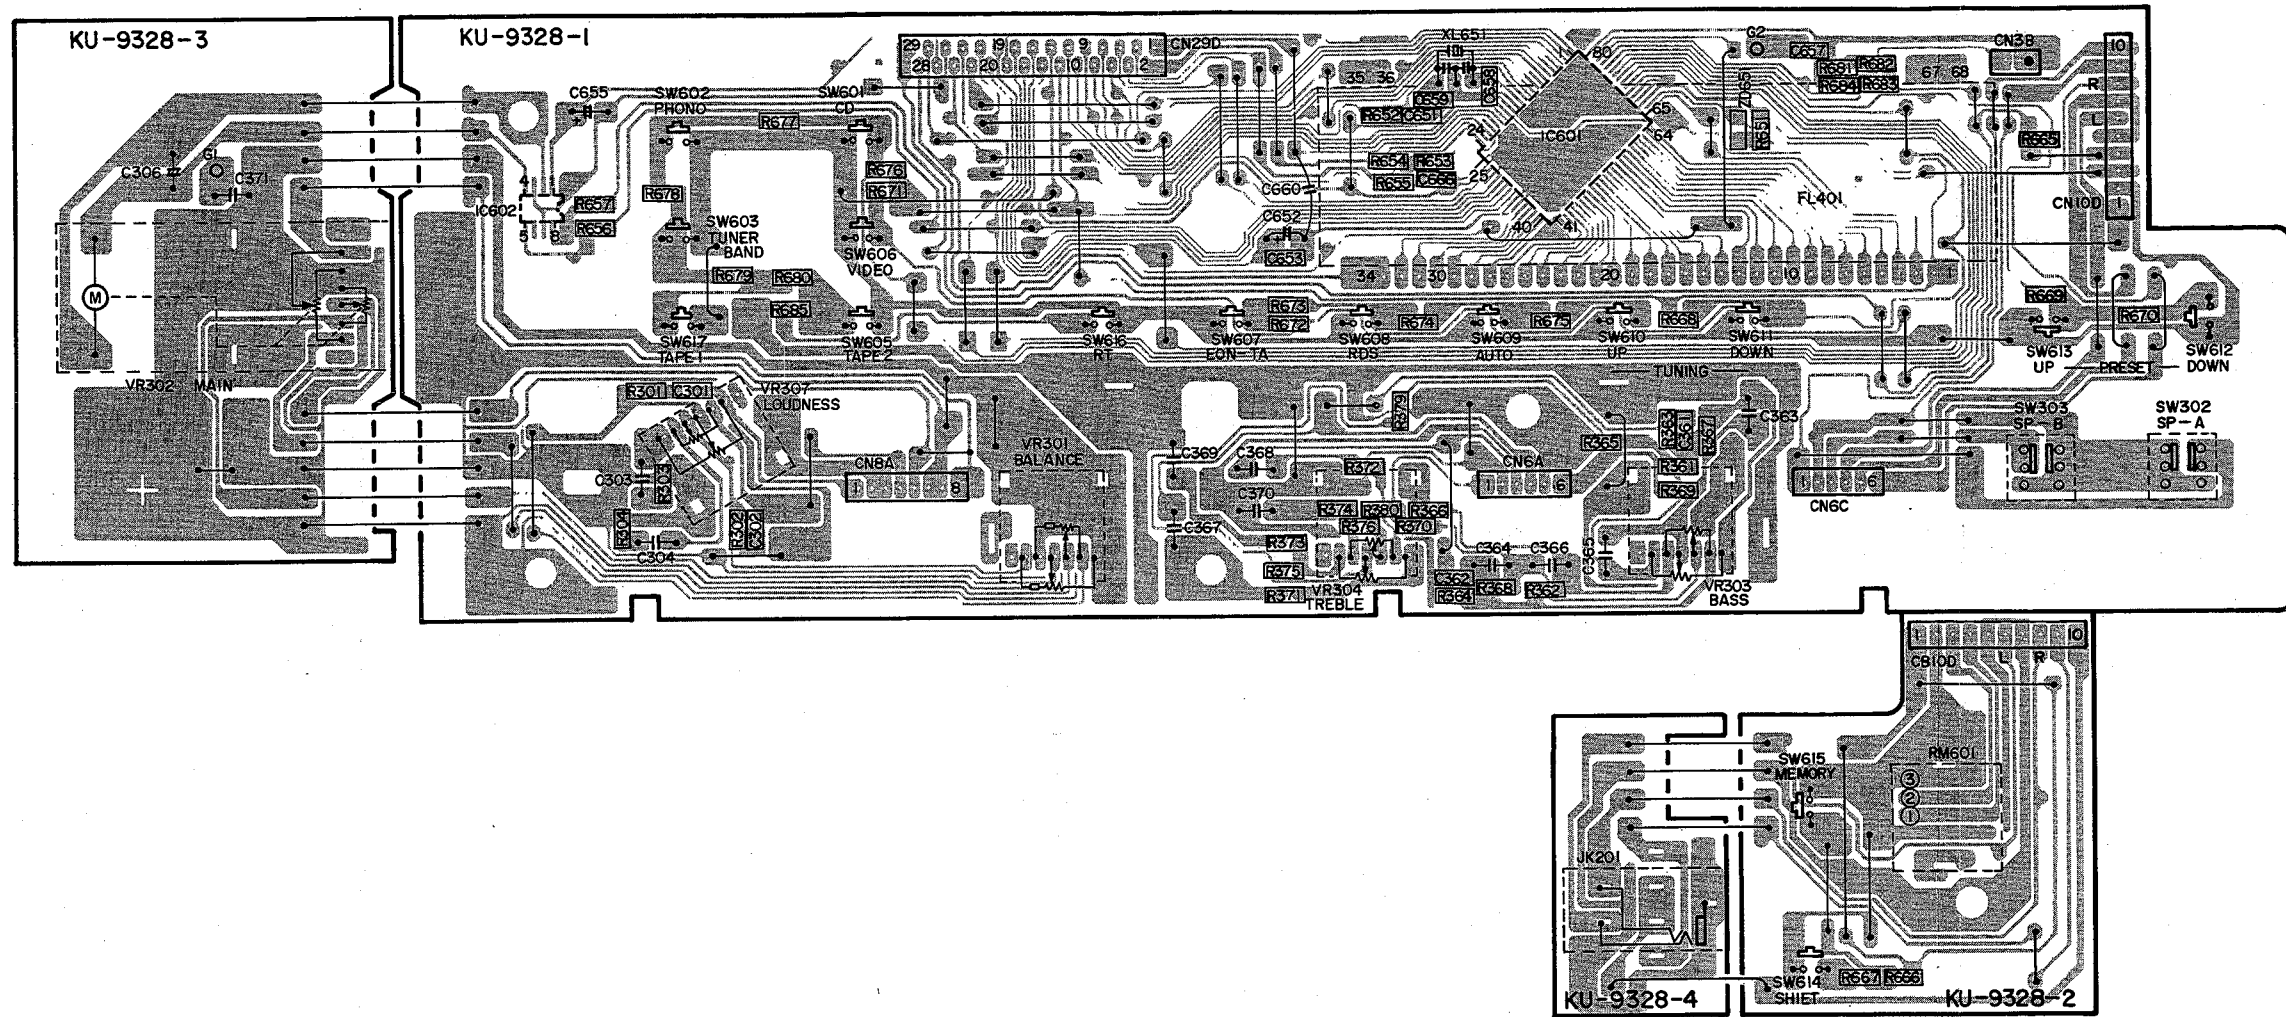


A  
B  
C  
D  
E

IU-2818 TUNER UNIT ASS'Y

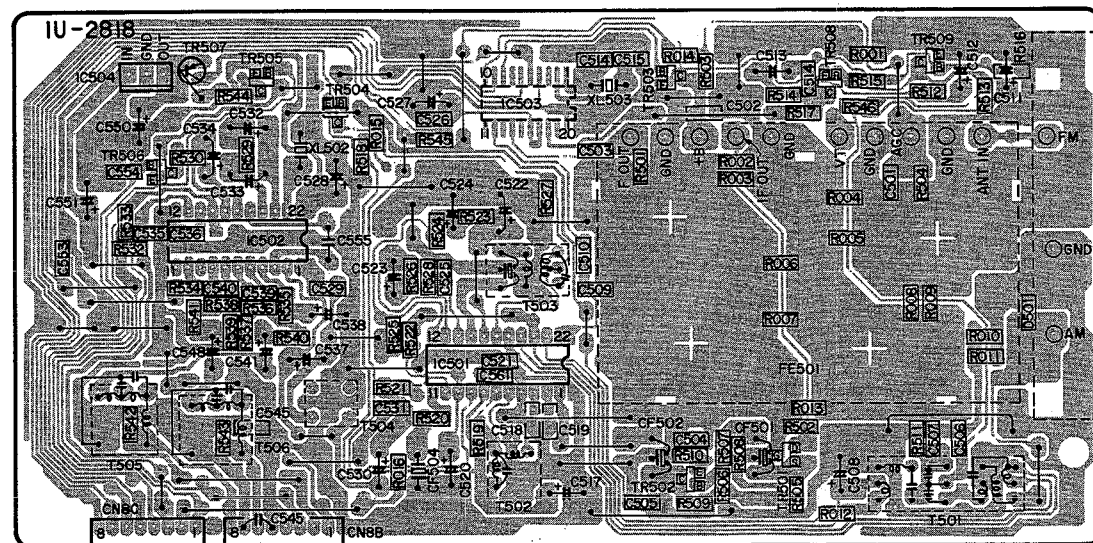

EXPLODED VIEW OF CHASSIS AND CABINET

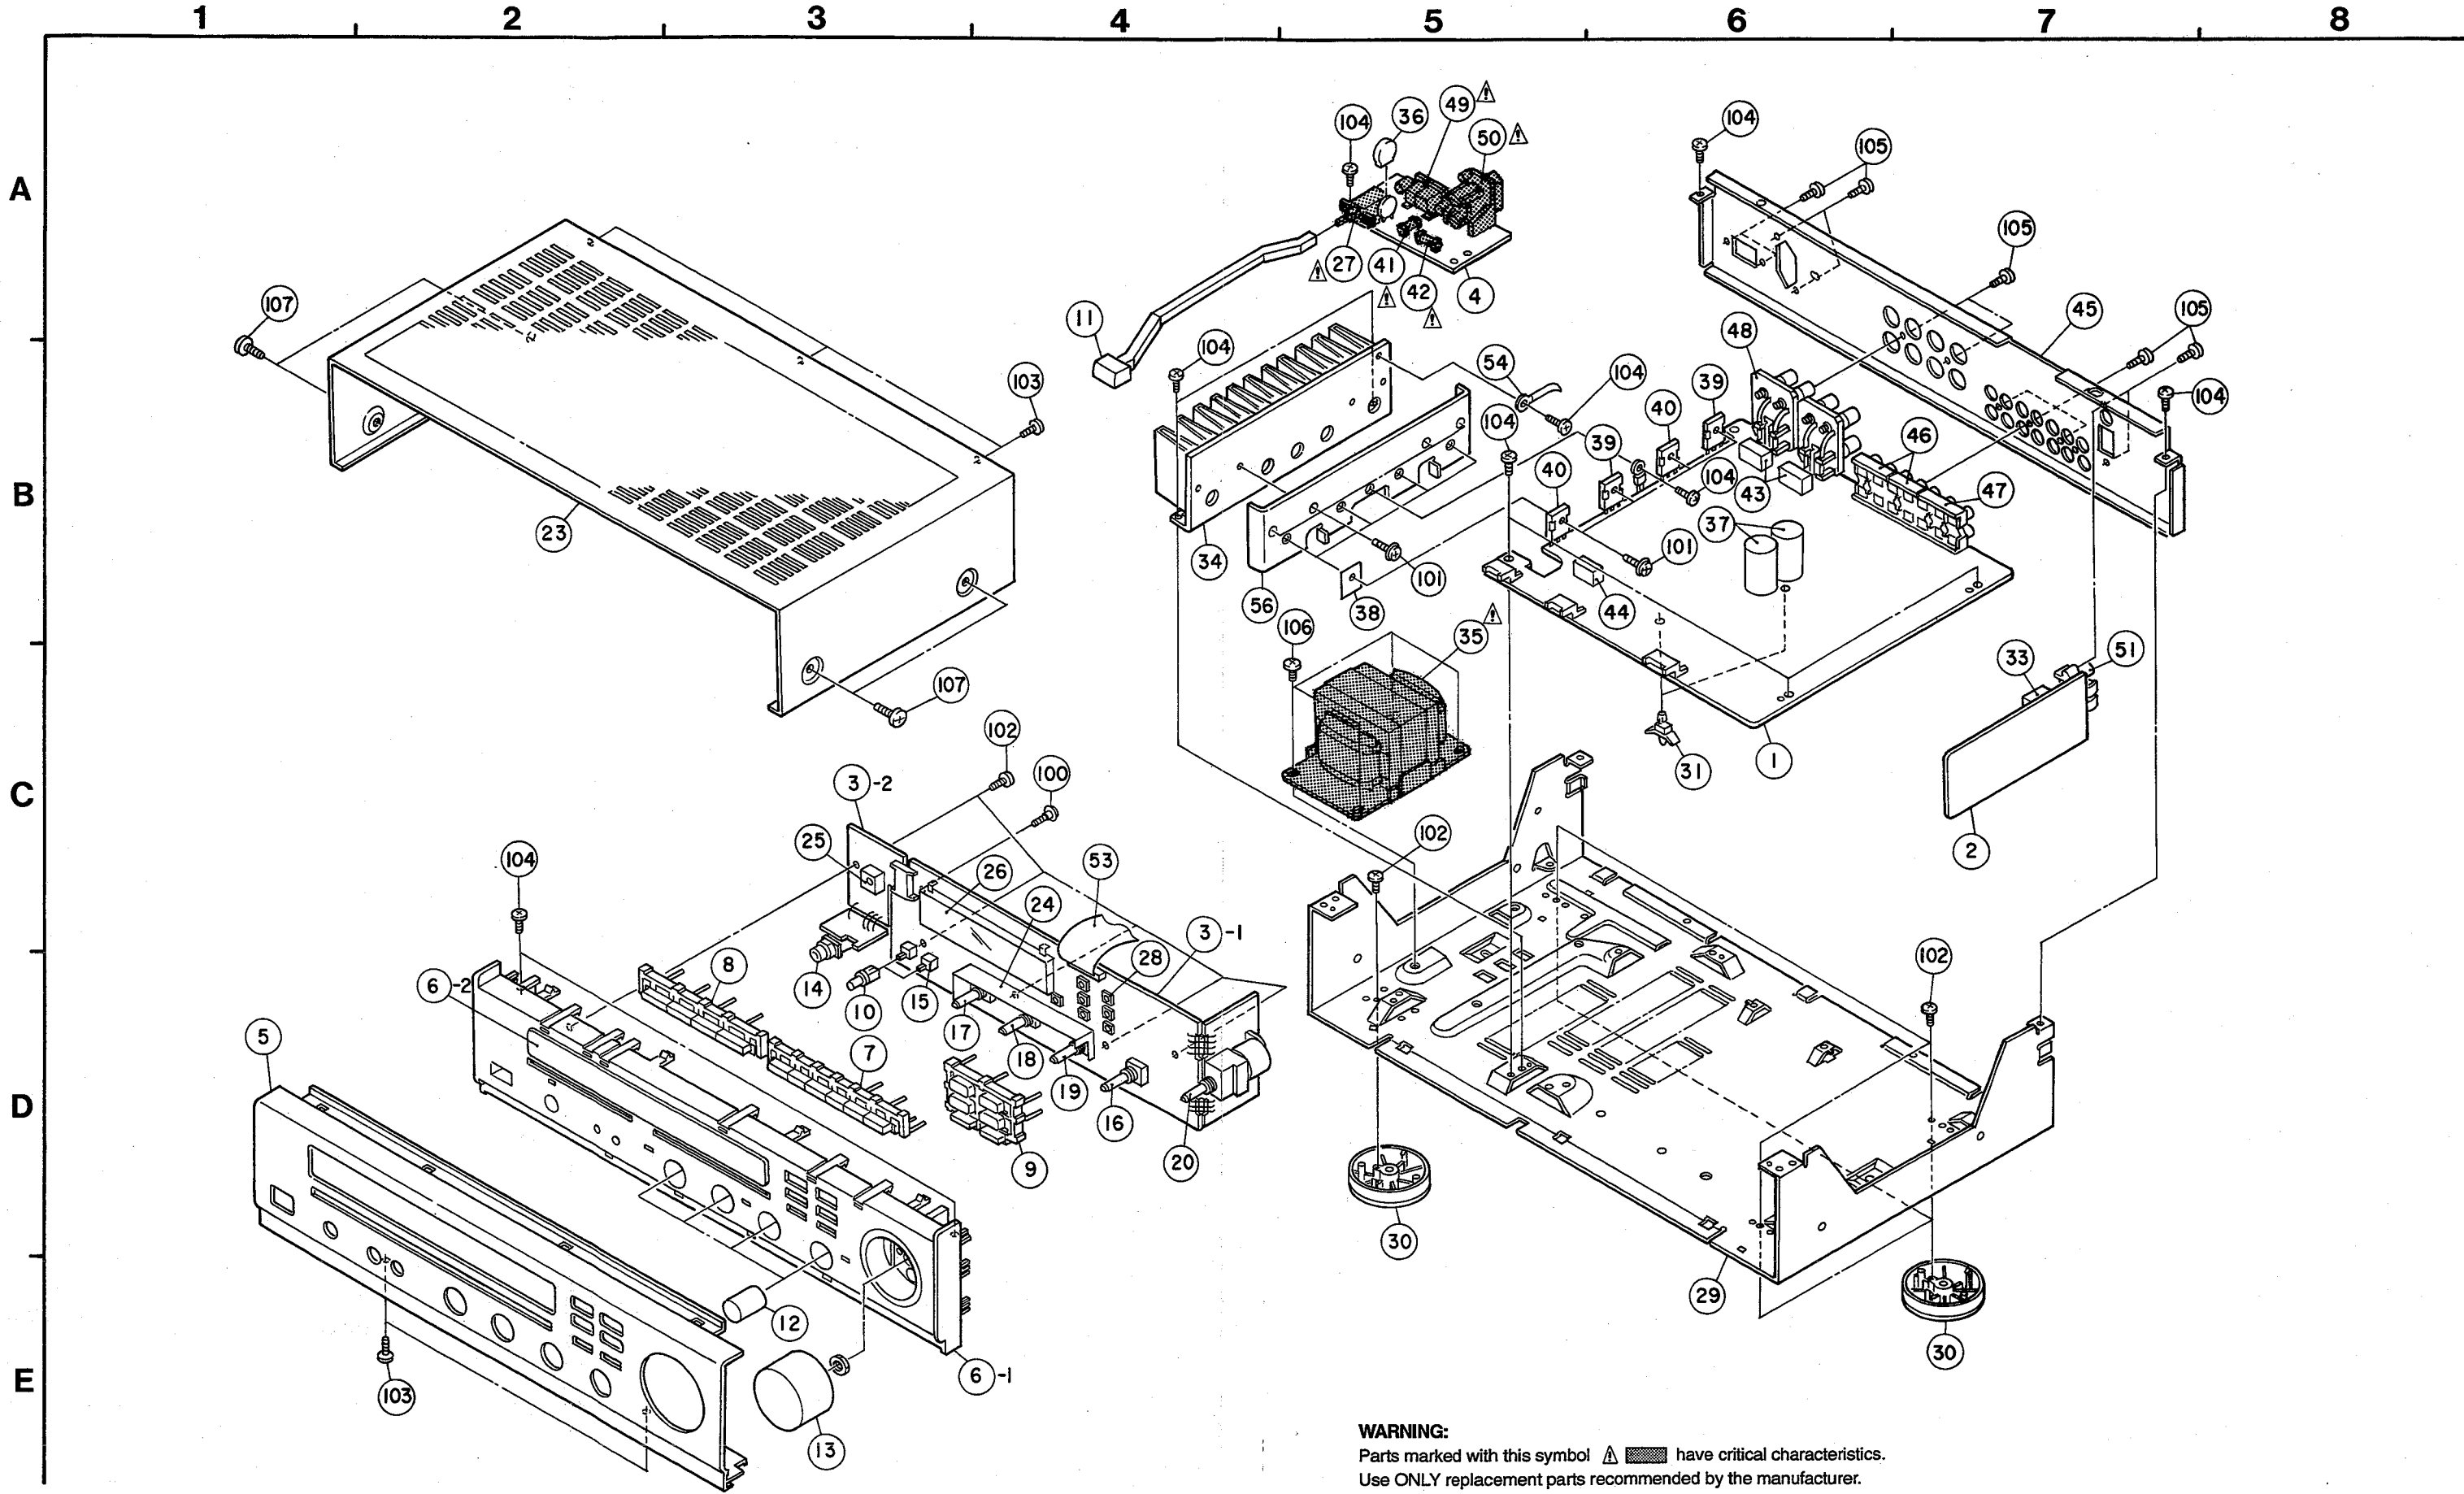

**WARNING:**  
 Parts marked with this symbol ▲ have critical characteristics.  
 Use ONLY replacement parts recommended by the manufacturer.



**PARTS LIST EXPLODED VIEW**


\* Gold model = Except to U.K.

| Ref. No. | Part No.     | Part Name             | Remarks      | Q'ty | Ref. No.      | Part No.     | Part Name                  | Remarks        | Q'ty |
|----------|--------------|-----------------------|--------------|------|---------------|--------------|----------------------------|----------------|------|
| 1        | 1U-2817 E    | Main unit Ass'y       | Europe model | 1    | 36            | 415 0299 000 | Capacitor cover            |                | 1    |
| 1        | 1U-2817 F    | Main unit Ass'y       | U.K. model   | 1    | 37            | 254 6201 002 | Electrolytic capacitor     | C257,258       | 2    |
| 2        | 1U-2818      | Tuner unit Ass'y      |              | 1    | 38            | 415 0234 007 | Insulating sheet           |                | 4    |
| 3        | KU-9328      | Display unit Ass'y    |              | 1    | 39            | 271 0240 006 | Transistor 2SA1491(O/P/Y)  | TR323,324      | 2    |
| 3-1      |              | Display & Volume unit |              |      | 40            | 273 0389 002 | Transistor 2SC3855(O/P/Y)  | TR321,322      | 2    |
| 3-2      |              | H/P J.& Remocon unit  |              |      | 41            | 206 1075 030 | Fuse (2.0A)                | F401           | 1    |
| 4        | 1U-2915      | Power unit Ass'y      |              | 1    | 42            | 206 1075 001 | Fuse (1A)                  | Except to U.K. | 1    |
| 5        | 144 2487 002 | Front panel           | Black model  | 1    | 43            | 214 0167 005 | Relay(G5Z-2A)              | RL451,452      | 2    |
| 5        | 144 2487 015 | Front panel           | Gold model   | 1    | 44            | 214 0127 003 | Relay(RY-12W)              | RL453          | 1    |
| 6-1      | 146 1602 004 | Inner panel Ass'y     | Black model  | 1    | 45            | 105 1187 104 | :Rear panel                | Europe model   | 1    |
| 6-2      | 143 9187 001 | (Window)              |              |      | 45            | 105 1187 117 | :Rear panel                | U.K model      | 1    |
| 6-1      | 146 1602 017 | Inner panel Ass'y     | Gold model   | 1    | 46            | 204 8485 009 | 4P pin jack(S-GND)         |                | 2    |
| 6-2      | 143 9187 001 | (Window)              |              |      | 47            | 204 8486 008 | 6P pin jack(S-GND)         |                | 1    |
| 7        | 113 9325 008 | Series button (A)     | Black model  | 1    | 48            | 205 0484 001 | 8P speaker terminal        | Europe model   | 1    |
| 7        | 113 9325 011 | Series button (A)     | Gold model   | 1    | 48            | 205 0472 013 | 8P speaker terminal        | U.K model      | 1    |
| 8        | 113 9326 007 | Series button (B)     | Black model  | 1    | 49            | 203 2348 009 | 2P inlet                   | CN2A           | 1    |
| 8        | 113 9326 010 | Series button (B)     | Gold model   | 1    | 50            | 203 3961 004 | 1P AC outlet               | Except to U.K. | 1    |
| 9        | 113 9324 229 | Function button       | Black model  | 1    | 51            | 205 0847 004 | 3P antenna terminal(PAL/F) |                | 1    |
| 9        | 113 9324 232 | Function button       | Gold model   | 1    | 53            | 009 0134 009 | 29P FFC cable              |                | 1    |
| 10       | 113 9323 000 | Push button (SP)      | Black model  | 2    | 54            | 445 0048 003 | Cord holder(L=76)          |                | 1    |
| 10       | 113 9323 013 | Push button (SP)      | Gold model   | 2    | 56            | 417 0520 102 | Sub radiator               |                | 1    |
| 11       | 113 1721 105 | Power button Ass'y    | Black model  | 1    | <b>SCREWS</b> |              |                            |                |      |
| 11       | 113 1721 011 | Power button Ass'y    | Gold model   | 1    | 100           | 477 0262 006 | Special screw              |                | 1    |
| 12       | 112 0739 001 | :*Knob (Maru)         | Black model  | 4    | 101           | 473 8007 009 | Cup screw 3x12             |                | 8    |
| 12       | 112 0739 014 | :*Knob (Maru)         | Gold model   | 4    | 102           | 473 7500 044 | Screw 3x8 (P) BK           |                | 9    |
| 13       | 112 0737 029 | :*Volume knob         | Black model  | 1    | 103           | 473 7015 018 | Screw 3x8 (S) BK           |                | 5    |
| 13       | 112 0737 032 | :*Volume knob         | Gold model   | 1    | 104           | 473 7002 018 | Screw 3x8 (S)              |                | 12   |
| 14       | 204 8354 017 | Head phone jack       | Black model  | 1    | 105           | 477 8057 004 | Fixing screw 3x10 BK       |                | 11   |
| 14       | 204 8355 003 | Head phone jack       | Gold model   | 1    | 106           | 473 7004 016 | Screw 4x6 (S)              |                | 4    |
| 15       | 212 1140 009 | Push switch(ESB6440)  | SW3002,303   | 2    | 107           | 473 7007 013 | Screw 4x10 (S) BK          | Black model    | 4    |
| 16       | 211 9131 004 | Variable resistor     | VR307        | 1    | 107           | 473 4801 005 | Screw 4x8                  | Gold model     | 4    |
| 17       | 211 0842 017 | Variable resistor     | VR303        | 1    |               |              |                            |                |      |
| 18       | 211 0843 016 | Variable resistor     | VR304        | 1    |               |              |                            |                |      |
| 19       | 211 0841 018 | Variable resistor     | VR301        | 1    |               |              |                            |                |      |
| 20       | 211 0831 002 | Variable resistor     | VR302        | 1    |               |              |                            |                |      |
| 23       | 102 0571 013 | Top cover             | Gold model   | 1    |               |              |                            |                |      |
| 23       | 102 0571 000 | Top cover             | Black model  | 1    |               |              |                            |                |      |
| 24       | 414 0740 006 | Shield plate          |              | 1    |               |              |                            |                |      |
| 25       | 499 0150 008 | Remote sensor         | SBX1610-52   | 1    |               |              |                            |                |      |
| 26       | 393 4155 002 | FL tube               | FIP14AM7R    | 1    |               |              |                            |                |      |
| 27       | 212 1031 008 | Power switch (TV-5)   |              | 1    |               |              |                            |                |      |
| 28       | 212 5604 910 | Tact switch           |              | 16   |               |              |                            |                |      |
|          |              | SW601-603,605-617     |              |      |               |              |                            |                |      |
| 29       | 411 1323 300 | Chassis               |              | 1    |               |              |                            |                |      |
| 30       | 104 0230 101 | :Foot Ass'y           |              | 4    |               |              |                            |                |      |
| 31       | 449 0033 049 | Locking card spacer   |              | 2    |               |              |                            |                |      |
| 33       | 216 0065 006 | Front end             |              | 1    |               |              |                            |                |      |
| 34       | 417 0529 006 | :Power radiator       |              | 1    |               |              |                            |                |      |
| 35       | 233 6194 002 | Power Transformer     |              | 1    |               |              |                            |                |      |

**PACKING & ACCESSORIES**



| Ref. No. | Part No.     | Part Name              | Remarks      | Q'ty |
|----------|--------------|------------------------|--------------|------|
| 1        | 505 0283 018 | :Envelope              |              | 1    |
| 1        | 511 2840 001 | Operating instructions |              | 1    |
| 1        | 231 1914 003 | AM loop antenna        |              | 1    |
| 1        | 395 0023 008 | :FM antenna Ass'y      |              | 1    |
| 1        | 399 0242 001 | Remoto control unit    | RC-174       | 1    |
| 1        | 206 2108 003 | :AC connectorWith plug | Europe model | 1    |
| 1        | 206 2113 001 | :AC cordWith connector | U.K model    | 1    |
| 1        | 505 0131 050 | Cabinet cover          |              | 1    |
| 2        | 503 1140 109 | :Cushion               |              | 2    |
| 1        | 501 1871 045 | Carton case            |              | 1    |


### WIRING DIAGRAM

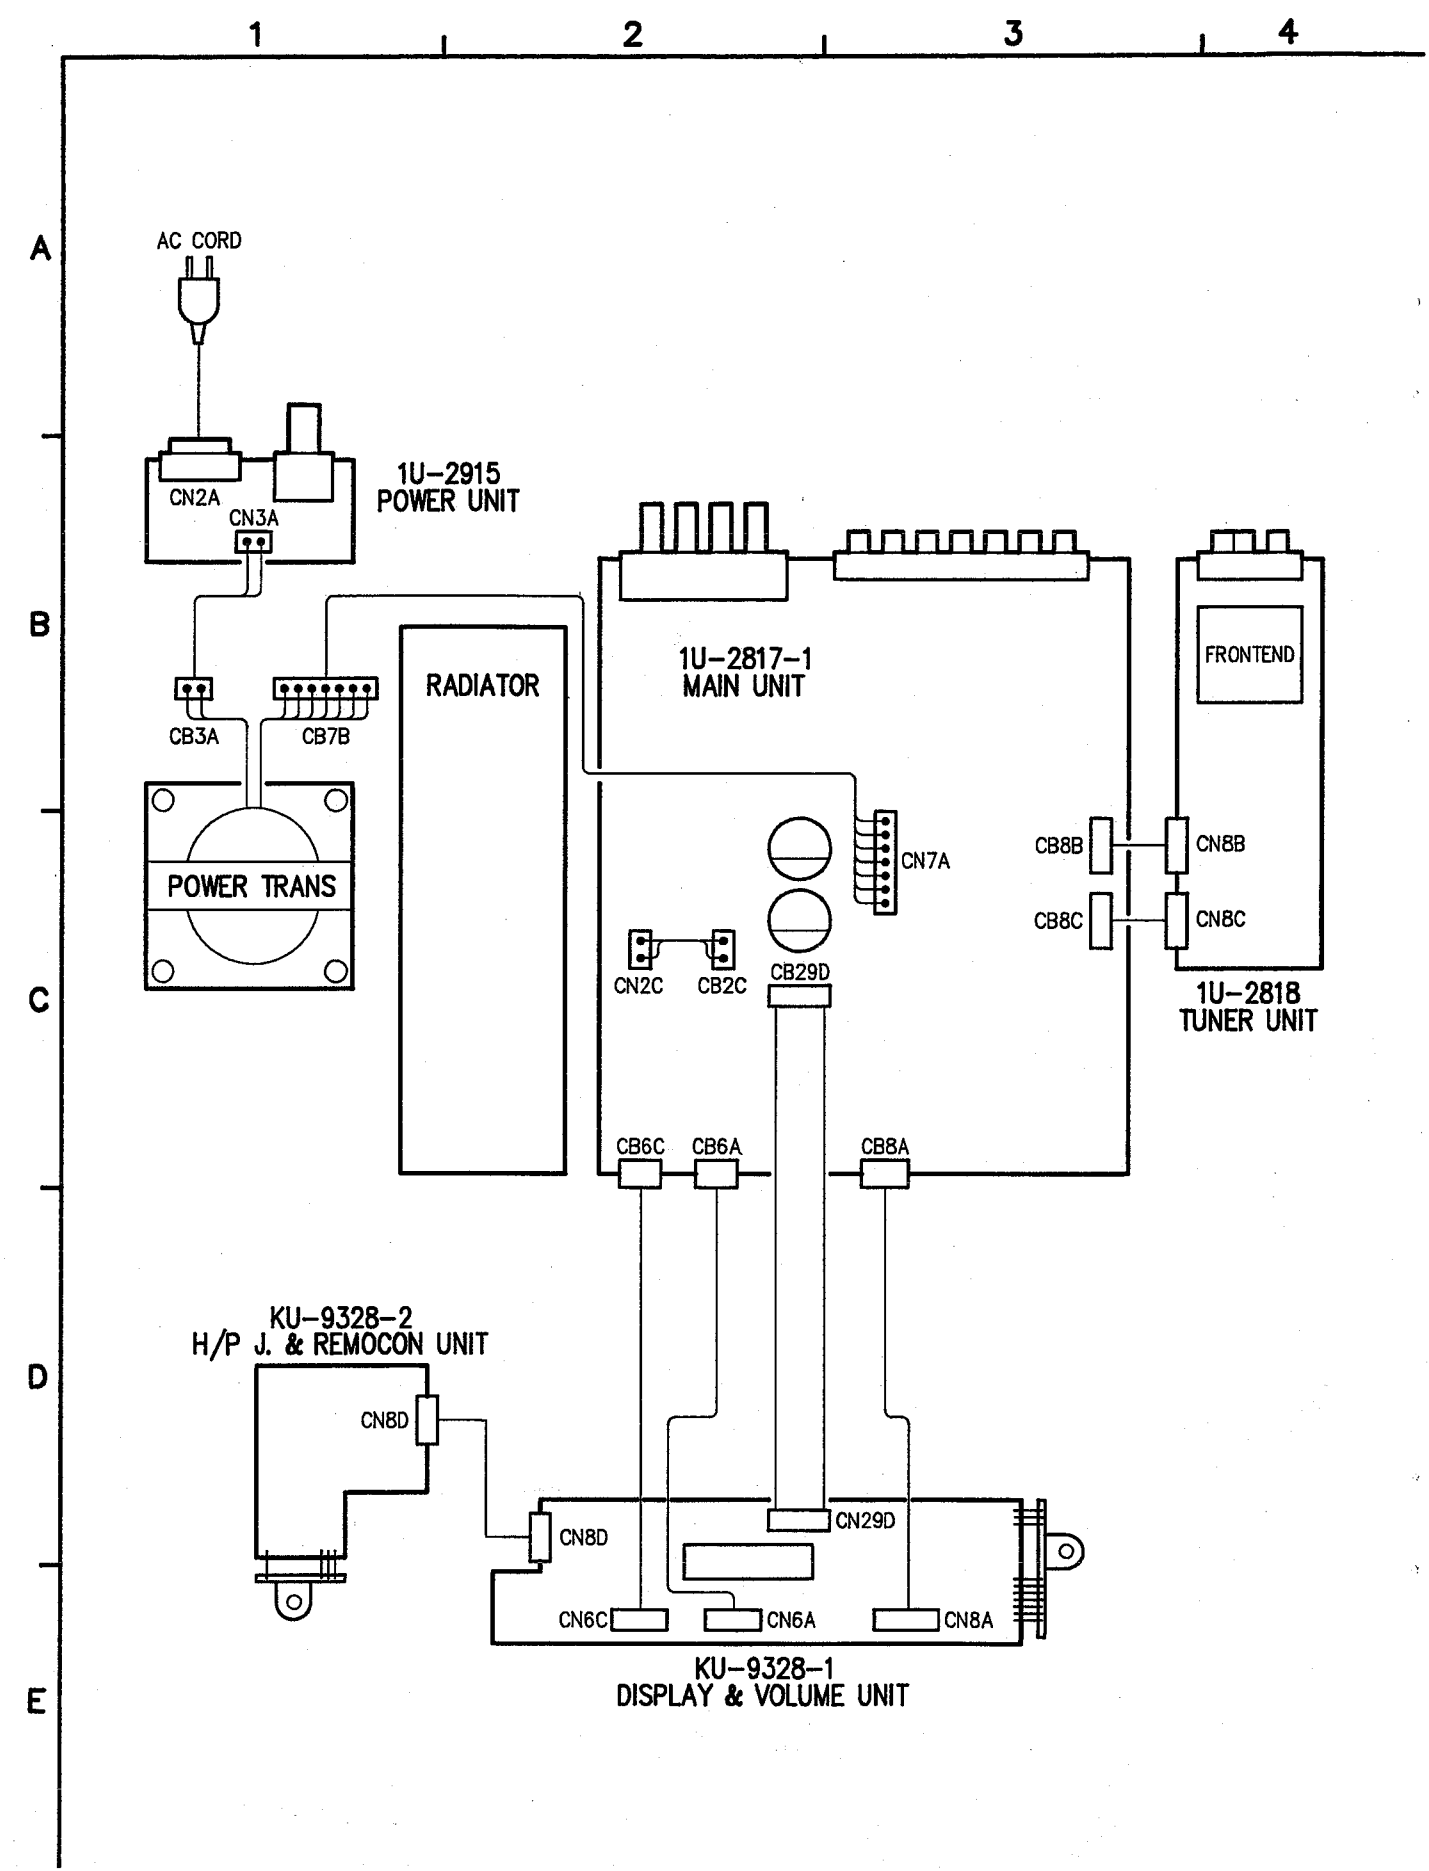

SCHEMATIC DIAGRAM

1 2 3 4 5 6

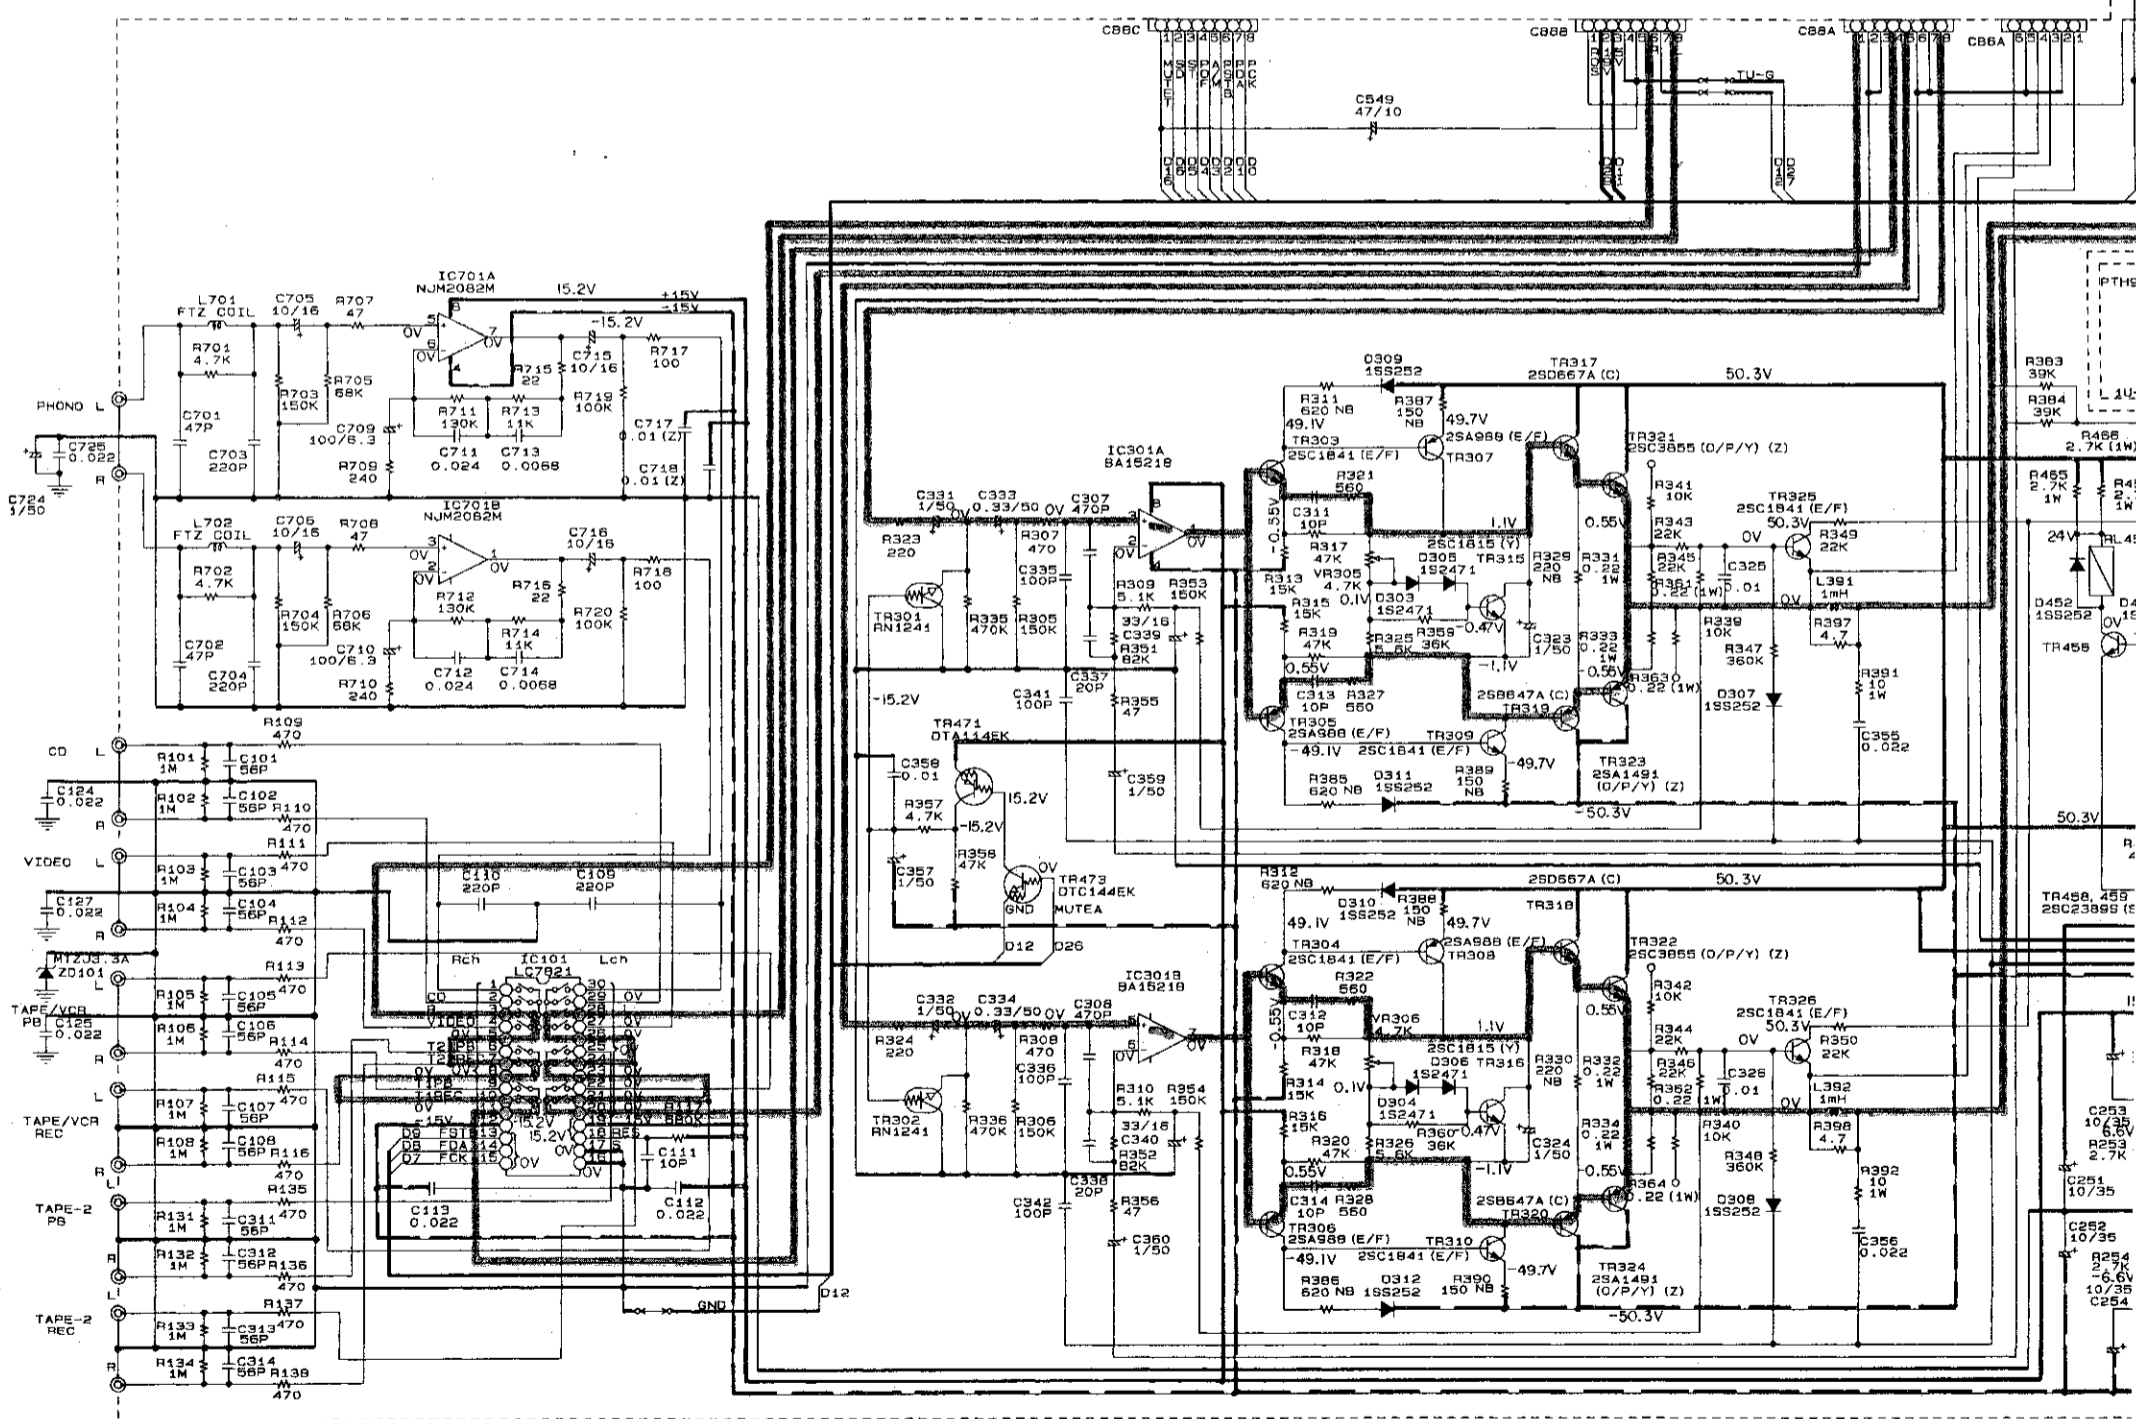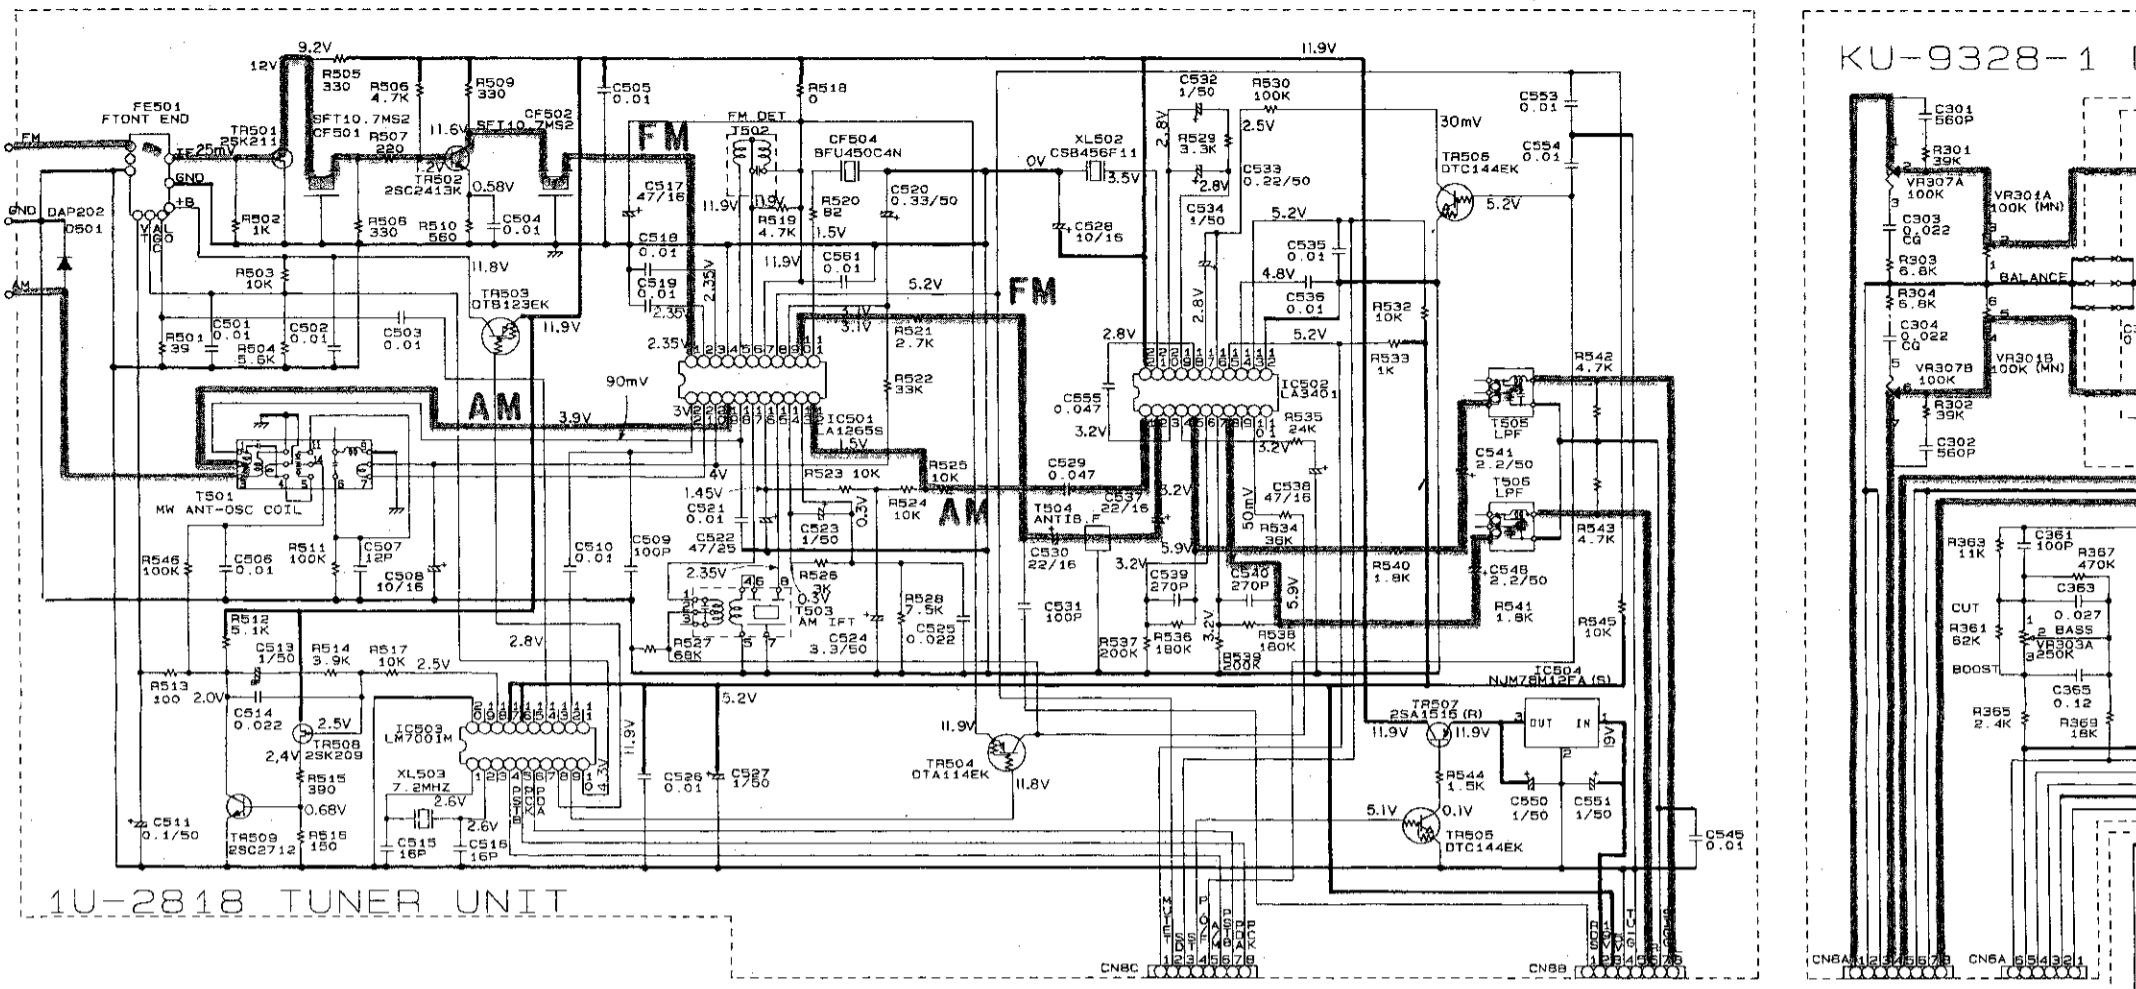

**WARNING:** Parts marked with this symbol  have critical characteristics. Use ONLY replacement parts recommended by the manufacturer.


**CAUTION:** Before returning the unit to the customer, make sure you have a current check or (2) a line to chassis resistance check. If it exceeds 0.5 milliamperes, or if the resistance from chassis to cord is less than 240 kohms, the unit is defective.

**WARNING:** DO NOT return the unit to the customer until the problem is corrected.

**NOTES:** Circuit and parts are subject to change without notice.

6 7 8 9 10 11

KU-9328-1 DISPLAY UNIT

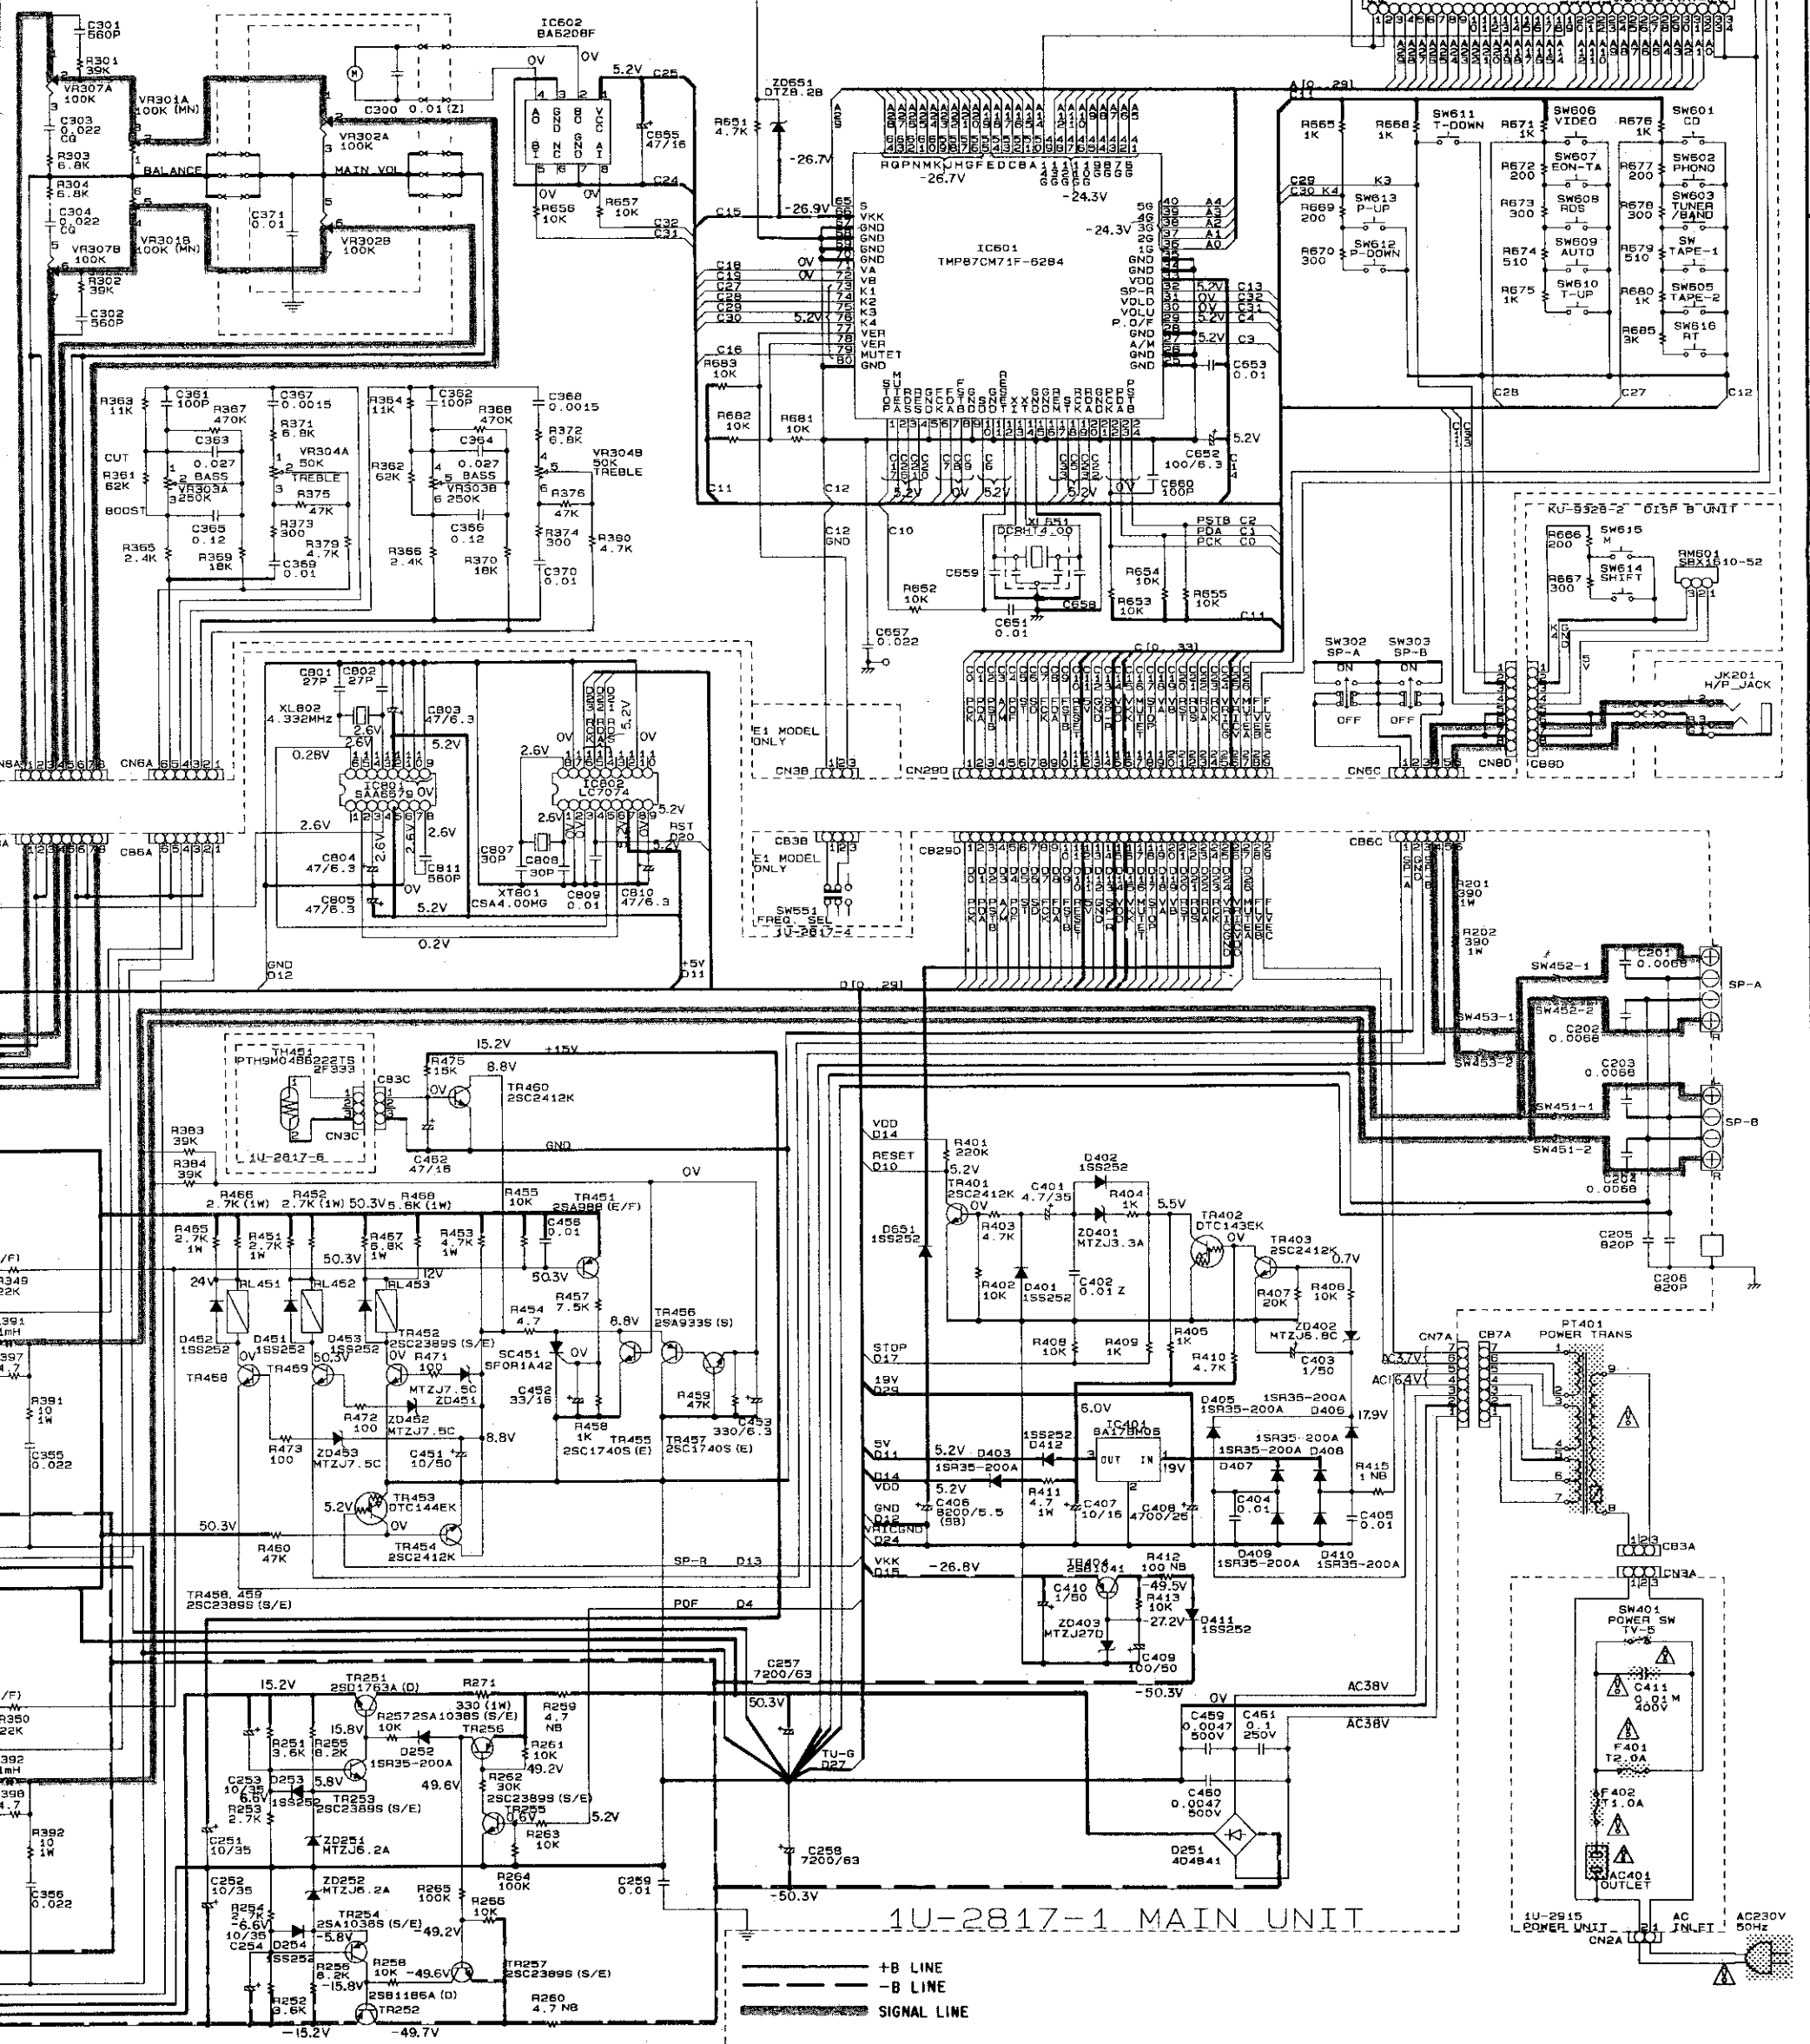

**NOTES**  
 ALL RESISTANCE VALUES IN OHM. k=1,000 OHM,  
 M=1,000,000 OHM  
 ALL CAPACITANCE VALUES IN MICRO FARAD.  
 P=MICRO-MICRO FARAD  
 EACH VOLTAGE AND CURRENT ARE MEASURED AT NO  
 SIGNAL INPUT CONDITION.  
 CIRCUIT AND PARTS ARE SUBJECT TO CHANGE WITHOUT  
 PRIOR NOTICE.


Symbol  $\Delta$  have critical characteristics.  
 Parts recommended by the manufacturer.  
 To the customer, make sure you make either (1) a leakage  
 line to chassis resistance check. If the leakage current  
 is, or if the resistance from chassis to either side of the power  
 kohms, the unit is defective.  
 To the customer until the problem is located and corrected.  
 Subject to change without prior notice.

A  
B  
C  
D  
E  
F  
G  
H

# SEMICONDUCTORS

## ● IC's


TMP87CM71F-6348 (IC601)

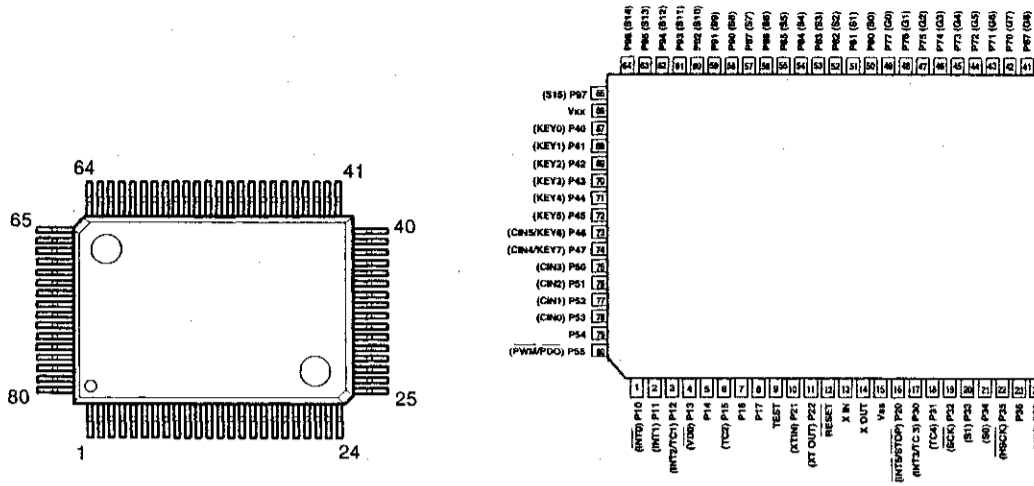


TMP87CM71F Port Allocation Table

| Pin No. | Symbol   | I/O | Logic  | Initial Setting | Function                                          |
|---------|----------|-----|--------|-----------------|---------------------------------------------------|
| 1       | STOP     | I   | L      | ---             | Power down detection ("L" = at power down).       |
| 2       | MUTE (A) | I   | ---    | ---             | MUTE (A) output ("H" = MUTE).                     |
| 3       | RDS      | I   | Serial | ---             | RDS data (start) input.                           |
| 4       | RES      | O   | L      | H               | LC7074 reset output.                              |
| 5       | GND      | I   | Serial | ---             | Not used.                                         |
| 6       | FCK      | O   | Serial | L               | Function control output (LC7821) for F-CK.        |
| 7       | FDA      | O   | Serial | L               | Function control output (LC7821) for F-DATA.      |
| 8       | FSTB     | O   | H      | L               | Function control output (LC7821) for F-STB.       |
| 9       | GND      | I   | ---    | ---             | Connect to GND.                                   |
| 10      | SD       | I   | L      | ---             | Tuned signal input ("L" = at tuned in).           |
| 11      | GND      | I   | ---    | ---             | Not used.                                         |
| 12      | RESET    | I   | L      | ---             | Reset input.                                      |
| 13      | XIN      | I   | ---    | ---             | Oscillation circuit (4MHz).                       |
| 14      | XOUT     | I   | ---    | ---             | Oscillation circuit (4MHz).                       |
| 15      | Vss      | PW  | ---    | ---             | GND.                                              |
| 16      | GND      | I   | ---    | ---             | GND.                                              |
| 17      | REM      | I   | L      | ---             | Remote control signal input.                      |
| 18      | ST       | I   | L      | ---             | Stereo signal input ("L" = at stereo).            |
| 19      | RCK      | I   | Serial | ---             | RDS data (clock) input.                           |
| 20      | RDA      | I   | Serial | ---             | RDS data (data) input.                            |
| 21      | GND      | I   | ---    | ---             | Not used.                                         |
| 22      | PCK      | O   | Serial | L               | LM7001 control output for PLL-CK (CL).            |
| 23      | PDA      | O   | Serial | L               | LM7001 control output for PLL-DATA (DATA).        |
| 24      | PSTB     | O   | H      | L               | LM7001 control output for PLL-STB (CE).           |
| 25      | GND      | O   | ---    | L               | GND.                                              |
| 26      | GND      | O   | ---    | L               | GND.                                              |
| 27      | AVM      | O   | L      | L               | AUTOMANUAL control.                               |
| 28      | GND      | I   | ---    | ---             | Not used.                                         |
| 29      | P.C/F    | O   | H      | L               | Power control output ("H" = ON).                  |
| 30      | VR-UP    | O   | H      | L               | Power volume control output (LB1639 ON = at "H"). |
| 31      | VR-D     | O   | H      | L               | Power volume control output (LB1639 ON = at "H"). |
| 32      | SP-R     | O   | H      | L               | Speaker relay control output (ON = at "H").       |
| 33      | VDD      | PW  | ---    | ---             | +5V.                                              |
| 34      | GND      | I   | ---    | ---             | GND.                                              |
| 35      | GND      | I   | ---    | ---             | GND.                                              |
| 36      | 1G       | O   | ---    | ---             | FL tube control output for 1G.                    |
| 37      | 2G       | O   | ---    | ---             | FL tube control output for 2G.                    |
| 38      | 3G       | O   | ---    | ---             | FL tube control output for 3G.                    |
| 39      | 4G       | O   | ---    | ---             | FL tube control output for 4G.                    |
| 40      | 5G       | O   | ---    | ---             | FL tube control output for 5G.                    |
| 41      | 6G       | O   | ---    | ---             | FL Tube control output for 6G.                    |
| 42      | 7G       | O   | ---    | ---             | FL Tube control output for 7G.                    |
| 43      | 8G       | O   | ---    | ---             | FL Tube control output for 8G.                    |
| 44      | 9G       | O   | ---    | ---             | FL Tube control output for 9G.                    |
| 45      | 10G      | O   | ---    | ---             | FL Tube control output for 10G.                   |
| 46      | 11G      | O   | ---    | ---             | FL Tube control output for 11G.                   |
| 47      | 12G      | O   | ---    | ---             | FL Tube control output for 12G.                   |
| 48      | 13G      | O   | ---    | ---             | FL Tube control output for 13G.                   |
| 49      | 14G      | O   | ---    | ---             | FL Tube control output for 14G.                   |
| 50      | S0 (a)   | O   | ---    | ---             | FL Tube control output for P(a).                  |
| 51      | S1 (b)   | O   | ---    | ---             | FL Tube control output for P(b).                  |
| 52      | S2 (c)   | O   | ---    | ---             | FL Tube control output for P(c).                  |
| 53      | S3 (d)   | O   | ---    | ---             | FL Tube control output for P(d).                  |
| 54      | S4 (e)   | O   | ---    | ---             | FL Tube control output for P(e).                  |
| 55      | S5 (f)   | O   | ---    | ---             | FL Tube control output for P(f).                  |
| 56      | S6 (g)   | O   | ---    | ---             | FL Tube control output for P(g).                  |
| 57      | S7 (h)   | O   | ---    | ---             | FL Tube control output for P(h).                  |
| 58      | S8 (i)   | O   | ---    | ---             | FL Tube control output for P(i).                  |
| 59      | S9 (k)   | O   | ---    | ---             | FL Tube control output for P(k).                  |
| 60      | S10 (m)  | O   | ---    | ---             | FL Tube control output for P(m).                  |
| 61      | S11 (n)  | O   | ---    | ---             | FL Tube control output for P(n).                  |
| 62      | S12 (p)  | O   | ---    | ---             | FL Tube control output for P(p).                  |
| 63      | S13 (q)  | O   | ---    | ---             | FL Tube control output for P(q).                  |
| 64      | S14 (r)  | O   | ---    | ---             | FL Tube control output for P(r).                  |
| 65      | S15 (s)  | O   | ---    | ---             | FL Tube control output for P(s).                  |
| 66      | Vkk      | PW  | ---    | ---             | -15V.                                             |
| 67      | GND      | I   | ---    | ---             | GND.                                              |
| 70      | GND      | I   | ---    | ---             | GND.                                              |
| 71      | VA       | O   | L      | H               | Video In/Out control ("L" = at selection) BV4066. |
| 72      | VB       | O   | L      | H               | Video In/Out control ("L" = at selection) BV4066. |
| 73      | K1       | I   | ---    | ---             | Key input (A/D conversion input).                 |
| 74      | K2       | I   | ---    | ---             | Key input (A/D conversion input).                 |
| 75      | K3       | I   | ---    | ---             | Key input (A/D conversion input).                 |
| 76      | K4       | I   | ---    | ---             | Key input (A/D conversion input).                 |
| 77      | VER      | I   | ---    | ---             | Forwarding country setting.                       |
| 78      | VER      | I   | ---    | ---             | Specification setting.                            |
| 79      | MUTE (T) | O   | H      | H               | MUTE output ("H" = MUTE).                         |
| 80      | GND      | I   | ---    | ---             | GND.                                              |

LM7001 (IC503)

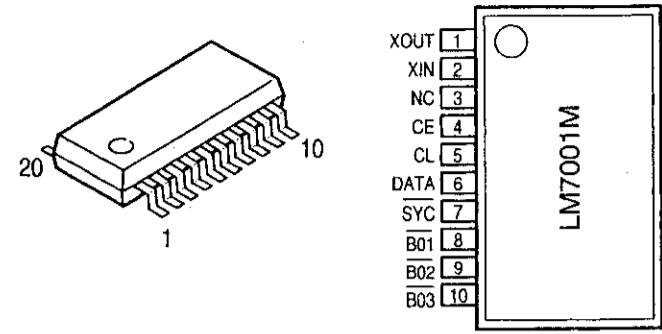

LA3401 (IC502)

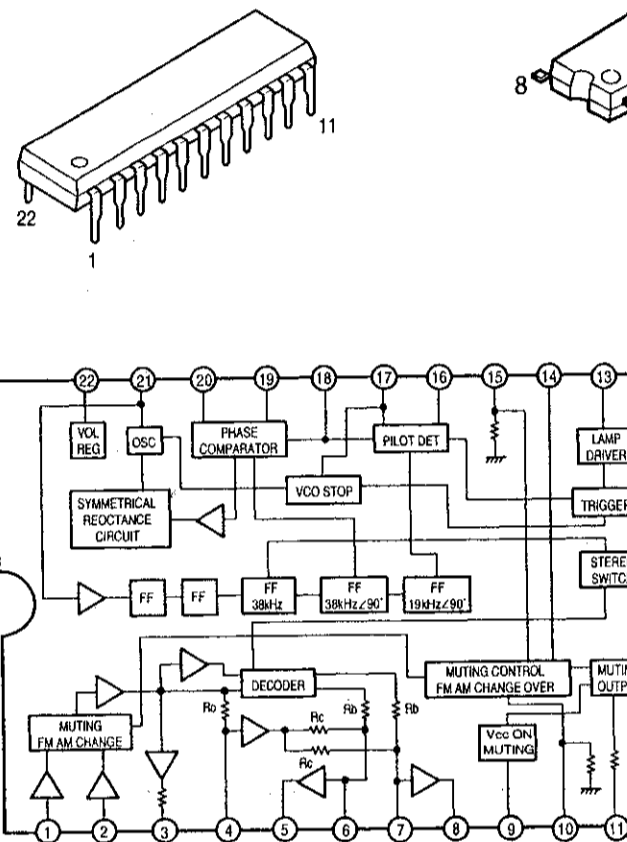

BA6208F

## ● TRANSISTORS

2SA988(E/F)  
2SA1515(R)  
2SC1815(Y)  
2SC1841(E/F)







2SB647A(C)  
2SB1041(R)  
2SD667A(C)

2SA933S(S)  
2SA1038S(S/E)  
2SC1740S(E)  
2SC2389S(S/E)

2SB1328(P)  
2SD2004(P)


Digital Transistor  
(Built in Resistors)

DTA · DTBEK Series

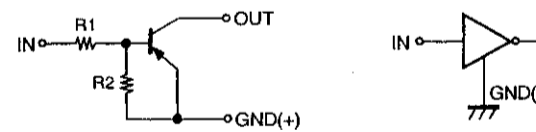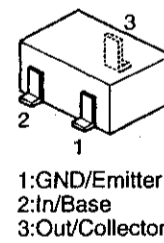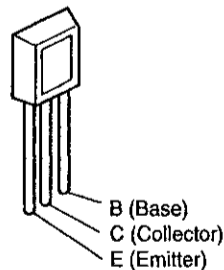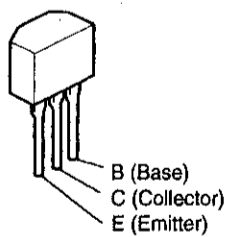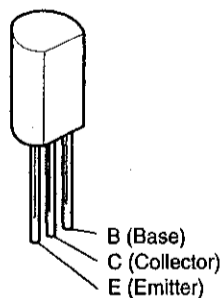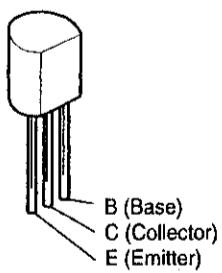

|          | R1      | R2      |
|----------|---------|---------|
| DTA114EK | 10kohm  | 10kohm  |
| DTB123EK | 2.2kohm | 2.2kohm |



DTCEK Series

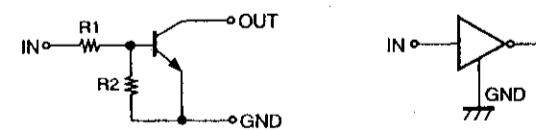


|          | R1      | R2      |
|----------|---------|---------|
| DTC114EK | 10kohm  | 10kohm  |
| DTC143EK | 4.7kohm | 4.7kohm |
| DTC144EK | 47kohm  | 47kohm  |

2SA1491 (O/P/Y) (TR323,324)  
2SC3855 (O/P/Y) (TR321,322)


2SB1186A (D)  
2SD1763A (D)

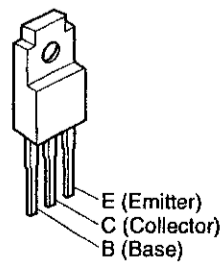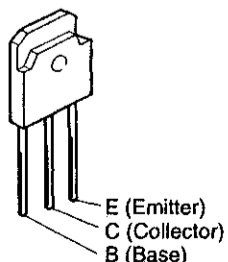


RN-1241(A/B)


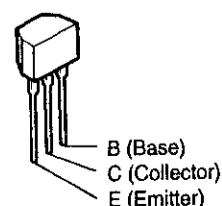


RN-1241

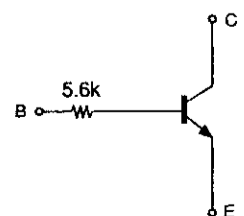


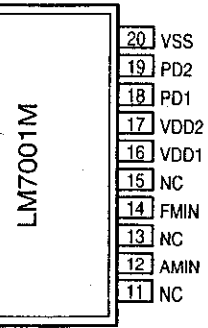



LA1265 (S)  
(IC501)

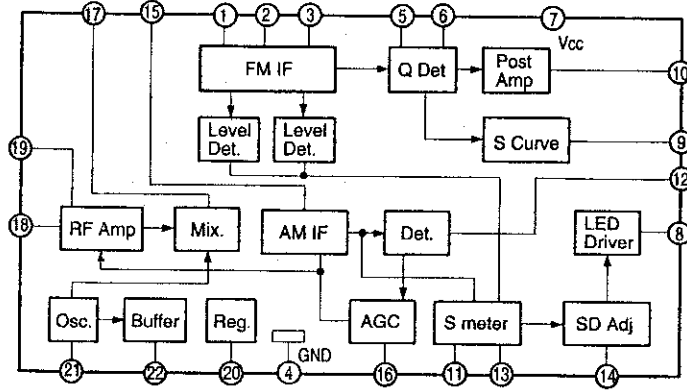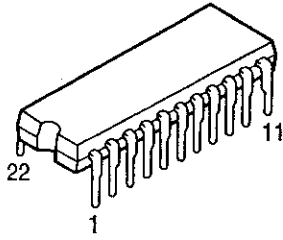



NJM78M12FA (IC504)  
BA178M06 (IC401)

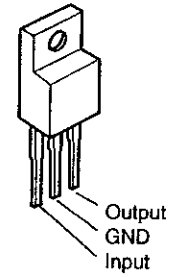



LC7821 (IC101)

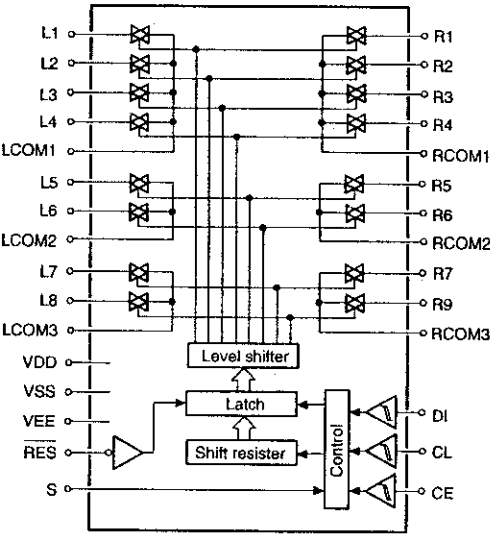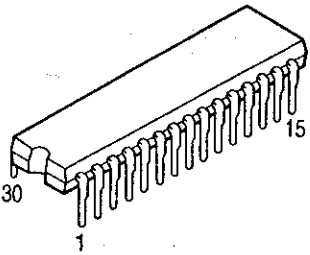



NJM2082MD (IC701)

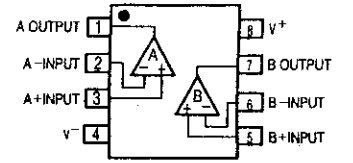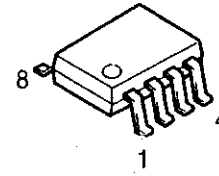

BA15218F (IC301)

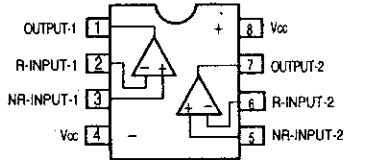
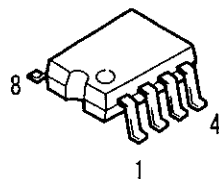


SAA6579T (IC801)

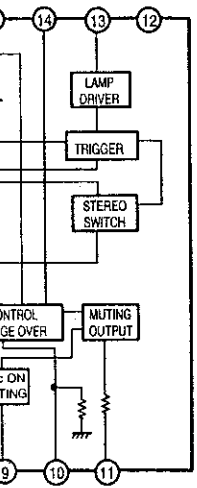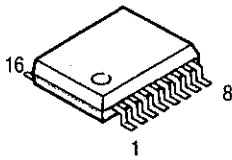


| Pin No. | Symbol           | Description                                       |
|---------|------------------|---------------------------------------------------|
| 1       | QUAL             | Quality indication output.                        |
| 2       | RDDA             | RDS data output.                                  |
| 3       | V <sub>ref</sub> | Reference voltage output (0.5 V <sub>DDA</sub> ). |
| 4       | MUX              | Multiplex signal input.                           |
| 5       | V <sub>DDA</sub> | +5 V supply voltage for analog part.              |
| 6       | V <sub>SSA</sub> | Ground for analog part (0 V).                     |
| 7       | CIN              | Subcarrier input to comparator.                   |
| 8       | SCOUT            | Subcarrier output of reconstruction filter.       |
| 9       | TSTLD            | Test control.                                     |
| 10      | TEST             | Test enable.                                      |
| 11      | V <sub>SSD</sub> | Ground for digital part (0 V).                    |
| 12      | V <sub>DDD</sub> | +5 V supply voltage for digital part.             |
| 13      | OSCI             | Oscillator input.                                 |
| 14      | OSCO             | Oscillator output.                                |
| 15      | T57              | 57 kHz clock signal output.                       |
| 16      | RDCL             | RDS clock output.                                 |


LC7074M (IC802)

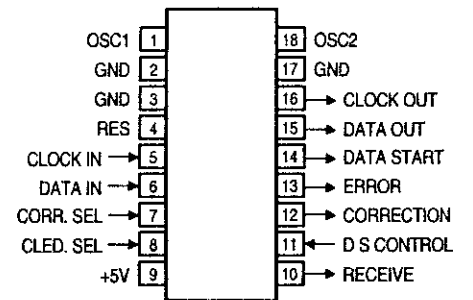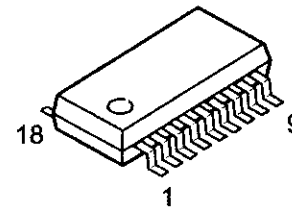

Series




|         |
|---------|
| R2      |
| 10kohm  |
| 2.2kohm |




|         |
|---------|
| R2      |
| 10kohm  |
| 4.7kohm |
| 47kohm  |

2SK209 (Y/GR)

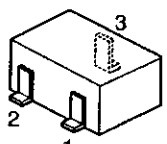

1: Drain  
2: Source  
3: Gate


2SA1037 (S/R)  
2SC2412 (S)  
2SC2413K (Q)  
2SC2712 (Y/GR)  
DTB123EK

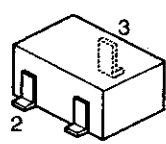


1: Emitter  
2: Base  
3: Collector

● DIODES (included LED)


1SS252

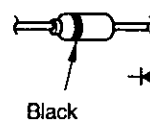


1S2471

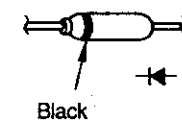


MTZJ3.3A  
MTZJ6.2A  
MTZJ6.8C

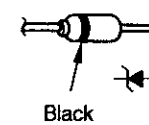


4D4B42

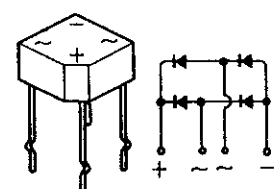

SF0R1A42

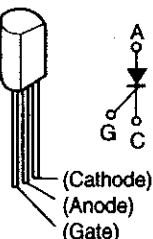


2SK211 (Y/RG)

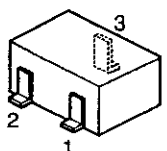


1: Gate  
2: Drain  
3: Source


1SR35-200 (A)

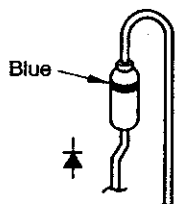

DAP202K  
(Chip)

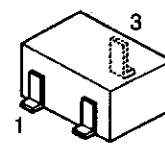


DAP202K




1: Cathode  
2: Cathode  
3: Anode


DTZ8.2B

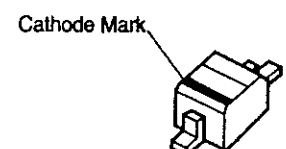

**SBX1610-52 (Remote Control Sensor)**

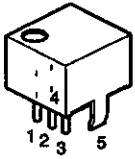

- 1. Vcc
- 2. Output
- 3. GND
- 4. Case Fin
- 5. Case Fin

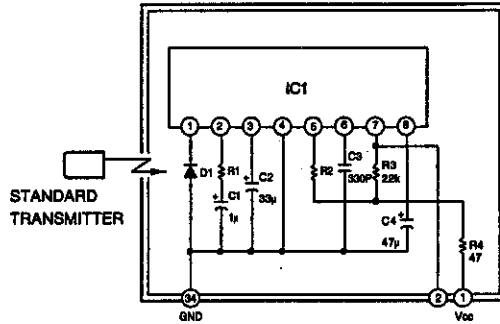

- IC1 : CX20106A Chip
- D1 : PIN Photodiode Chip
- C1,C2,C4 : Aluminum Electrolytic Capacitor
- C3 : SL Characteristic  $\pm 5\%$
- R1 : Gain control resistor
- R2 : fo control resistor (Using  $\pm 1\%$ )
- R (Other than above items) :  $\pm 5\%$