

DENON

Hi-Fi Component

SERVICE MANUAL MODEL DA-500

D/A CONVERTER




CONTENTS

OPERATING INSTRUCTIONS	2-5
DISASSEMBLY	6
BLOCK DIAGRAM	7
PRINTED WIRING BOARD	8
NOTE FOR PARTS LIST	9
PRINTED WIRING BOARD PARTS LIST	10,11
WIRING DIAGRAM	12
SCHEMATIC DIAGRAM	13
EXPLODED VIEW OF CHASSIS AND CABINET & PARTS LIST	14, 15
SEMICONDUCTORS	16-18

NIPPON COLUMBIA CO., LTD.


SAFETY INSTRUCTIONS

1. Read Instructions - All the safety and operating instructions should be read before the appliance is operated.
2. Retain Instructions - The safety and operating instructions should be retained for future reference.
3. Heed Warnings - All warnings on the appliance and in the operating instructions should be adhered to.
4. Follow Instructions - All operating and use instructions should be followed.
5. Water and Moisture - The appliance should not be used near water - for example, near a bathtub, washbowl, kitchen sink, laundry tub, in a wet basement, or near a swimming pool, and the like.
6. Carts and Stands - The appliance should be used only with a cart or stand that is recommended by the manufacturer.
- 6A. An appliance and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the appliance and cart combination to overturn.
7. Wall or Ceiling Mounting - The appliance should be mounted to a wall or ceiling only as recommended by the manufacturer.
8. Ventilation - The appliance should be situated so that its location or position does not interfere with its proper ventilation. For example, the appliance should not be situated on a bed, sofa, rug, or similar surface that may block the ventilation openings; or, placed in a built-in installation, such as a bookcase or cabinet that may impede the flow of air through the ventilation openings.
9. Heat - The appliance should be situated away from heat sources such as radiators, heat registers, stoves, or other appliances (including amplifiers) that produce heat.
10. Power Sources - The appliance should be connected to a power supply only of the type described in the operating instructions or as marked on the appliance.
11. Grounding or Polarization - Precautions should be taken so that the grounding or polarization means of an appliance is not defeated.
12. Power-Cord Protection - Power supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords at plugs, convenience receptacles, and the point where they exit from the appliance.
14. Cleaning - The appliance should be cleaned only as recommended by the manufacturer.
15. Power Lines - An outdoor antenna should be located away from power lines.
16. Outdoor Antenna Grounding - If an outside antenna is connected to the receiver, be sure the antenna system is grounded so as to provide some protection against voltage surges and built-up static charges. Article 810 of the National Electrical Code, ANSI/NFPA 70, provides information with regard to proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna-discharge unit, size of grounding conductors, location of antenna-discharge unit, connection to grounding electrodes, and requirements for the grounding electrode. See Figure A.
17. Nonuse Periods - The power cord of the appliance should be unplugged from the outlet when left unused for a long period of time.
18. Object and Liquid Entry - Care should be taken so that objects do not fall and liquids are not spilled into the enclosure through openings.
19. Damage Requiring Service - The appliance should be serviced by qualified service personnel when:
 - A. The power-supply cord or the plug has been damaged; or
 - B. Objects have fallen, or liquid has been spilled into the appliance; or
 - C. The appliance has been exposed to rain; or
 - D. The appliance does not appear to operate normally or exhibits a marked change in performance; or
 - E. The appliance has been dropped, or the enclosure damaged.
20. Servicing - The user should not attempt to service the appliance beyond that described in the operating instructions. All other servicing should be referred to qualified service personnel.

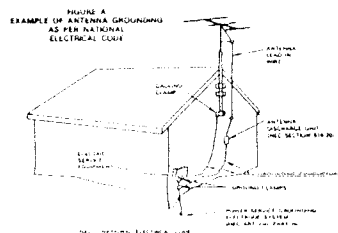


FRONT PANEL
FRONTPLATTE
PANNEAU AVANT
PANNELLO FRONTALE

TABLERO FRONTAL
VOORPANEEL
FRONT PANELEN
PAINEL FRONTAL

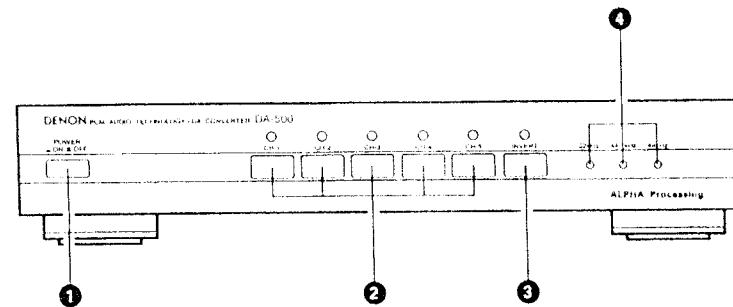





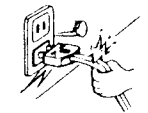
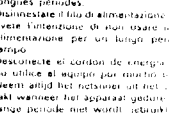
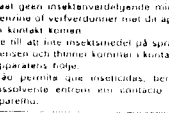


REAR PANEL
RÜCKWAND
PANNEAU ARRIERE
IL PANNELLO POSTERIORE

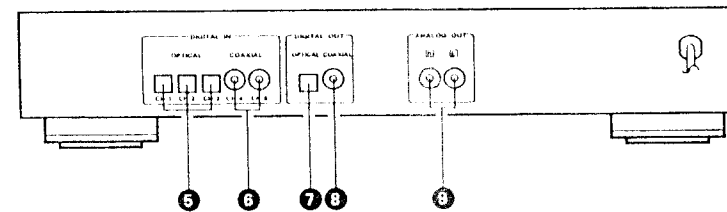PANEL TRASERO
ACHTERPANEEL
BAKSIDAN
PAINEL TRAZEIRO

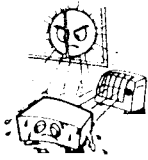

**NOTE ON USE/HINWEIS ZUM GEBRAUCH/OBSERVATIONS RELATIVES A L'UTILISATION
NOTE SULL'USO/NOTAS SOBRE EL USO/ALVORENS TE GEBRUIKEN/OBSERVERA
OBSERVAÇÕES QUANTO AO USO**

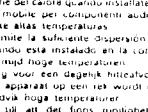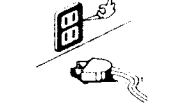 <ul style="list-style-type: none"> • Avoid high temperatures. Allow for sufficient heat dispersion when installed on a rack. • Vermeiden Sie hohe Temperaturen. Beachten Sie, daß eine ausreichende Luftzirkulation gewährleistet wird, wenn das Gerät auf ein Regal gestellt wird. • Éviter des températures élevées. Tenir compte d'une dispersion de chaleur suffisante lors de l'installation sur une étagère. • Evitate di espone l'unità a temperature alte. • Assicuratevi che esista un'adeguata dispersione del calore quando installate l'unità in un mobile per componenti audio. • Evite altas temperaturas. • Permitte la suficiente dispersión del calor cuando está instalado en la consola. • Vermijd hoge temperaturen. • Zorg voor een degelijk hittestrooien indien het apparaat op een rek wordt geplaatst. • Ünnyvã hõga temperaturen. • Se till att det finns möjlighet till god värmegledning vid monteringen i ett rack. • Evite temperaturas altas. • Conceda suficiente dispersão de calor quando o equipamento for instalado numa prateleira. 	 <ul style="list-style-type: none"> • Keep the set free from moisture, water, and dust. • Halten Sie das Gerät von Feuchtigkeit, Wasser und Staub fern. • Protéger l'appareil contre l'humidité, l'eau et la poussière. • Tenete l'unità lontana dall'umidità, dall'acqua e dalla polvere. • Mantenga el equipo libre de humedad, agua y polvo. • Laat geen vochtigheid, water of stof in het apparaat binnendringen. • Utsett inte apparaten för fukt, vatten och damm. • Mantenha o aparelho livre de qualquer umidade, água ou poeira. 	 <ul style="list-style-type: none"> • Do not let foreign objects in the set. • Keine fremden Gegenstände in das Gerät kommen lassen. • Ne pas laisser des objets étrangers dans l'appareil. • È importante che nessun oggetto entri nell'interno dell'unità. • No deve dejarse objetos dentro del equipo. • Laat geen vreemde voorwerpen in dit apparaat vallen. • Se till att frammande föremål inte tränger in i apparaten. • Não deixe objetos estranhos no aparelho.
 <ul style="list-style-type: none"> • Unplug the power cord when not using the set for long periods of time. • Wenn das Gerät eine längere Zeit nicht verwendet werden soll, trennen Sie das Netzstecker. • Débranchez le cordon d'alimentation lorsque l'appareil n'est pas utilisé pendant de longues périodes. • Disinnestare il filo di alimentazione quando avete l'intenzione di non usare il filo di alimentazione per un lungo periodo di tempo. • Desconecte el cordón de energía cuando no utilice el equipo por mucho tiempo. • Heeft u altijd het netvervoer af het apparaat wanneer het apparaat gedurende een lange periode niet wordt gebruikt. • Koppla av nätledningen om apparaten inte kommer att användas i lång tid. • Desligue o fio condutor de energia do aparelho não tiver que ser usado por um longo período. 	 <ul style="list-style-type: none"> • Do not let insecticides, benzene, and thinner come in contact with the set. • Lassen Sie das Gerät nicht mit Insektiziden, Benzin oder Verdünnungsmitteln in Berührung kommen. • Ne pas mettre en contact des insecticides, du benzène et un diluant avec l'appareil. • Assicuratevi che l'unità non venga in contatto con insetticidi, benzina o solventi. • No permita el contacto de insecticidas, gasolina y diluyentes con el equipo. • Laat geen insecticidevergiftigende middelen, benzine of verdunningsmiddel met dit apparaat in contact komen. • Se till att inte insektmedel på spraybottor, bensin och lösningsmedel på kontakt med apparatens fjärr. • Não permita que inseticidas, benzina e dissolventes entrem em contacto com o aparelho. 	 <ul style="list-style-type: none"> • Never disassemble or modify the set in any way. • Versuchen Sie niemals das Gerät auseinander zu nehmen oder auf jegliche Art zu verändern. • Ne jamais démonter ou modifier l'appareil d'une manière ou d'une autre. • Non smontate mai, né modificate l'unità in nessun modo. • Nunca desarme o modifique el equipo de ninguna manera. • nooit dit apparaat demonteren of op andere wijze modificeren. • La nie det apparaten och försök inte bygga om den. • Nunca desmonte ou modifique o aparelho de alguma forma.
 <ul style="list-style-type: none"> • Handle the power cord carefully. Hold the plug when unplugging the cord. • Gehen Sie vorsichtig mit dem Netzstecker um. • Halten Sie das Kabel am Stecker, wenn Sie den Stecker herausziehen. • Manipuler le cordon d'alimentation avec précaution. Tenir la prise lors du débranchement du cordon. • Maneggiare il filo di alimentazione con cura. • Agire per la spina quando scollegate il cavo dalla presa. • Manere el cordón de energía con cuidado. Sujetar el enchufe cuando desconecte el cordón de energía. • Hanter det netvervoer voorzichtig. Hou het stekker bij de stekker vast wanneer deze moet worden aan of losgekoppeld. • Hantera nätledningen försiktigt. Håll i kabeln när den kopplas från el uttaget. • Manuseie com cuidado o fio condutor de Segure a tomada ao desconectar o fio. 	 <p>*(For sets with ventilation holes)</p> <ul style="list-style-type: none"> • Do not obstruct the ventilation holes. • Die Belüftungöffnungen dürfen nicht verdeckt werden. • Ne pas obstruer les trous de ventilation. • Non coprire i fori di ventilazione. • No obstruya los orificios de ventilación. • De ventilatieopeningen mogen niet worden bedekt. • Se till att inte blockera de ventilationsöppningarna. • Não obstrua os orificios de ventilação. 	

IMPORTANT TO SAFETY


WARNING:
TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE

CAUTION:


1. Handle the power supply cord carefully. Do not damage or deform the power supply cord. If it is damaged or deformed, it may cause electric shock or malfunction when used. When removing from wall outlet, be sure to remove by holding the plug attachment and not by pulling the cord.
2. Do not open the top cover. In order to prevent electric shock, do not open the top cover. If problems occur, contact your DENON DEALER.
3. Do not place anything inside. Do not place metal objects or spill liquid inside the D/A Converter. Electric shock or malfunction may result.

Please, record and retain the Model name and serial number of your set shown on the rating label.

Model No. DA-500 Serial No. _____



CAUTION
RISK OF ELECTRIC SHOCK
DO NOT OPEN



CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.

The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

• NUR FÜR EUROPÄISCHE MODELLE

Konformitätserklärung

Die DENON Electronic GmbH
Halskestraße 12
40880 Ratingen

Erklärt als Hersteller/Importeur, daß das in dieser Bedienungsanleitung beschriebene Gerät den Technischen Vorschriften für Low und Fernseh-Hörfunkempfänger nach der Amtsblattverfügung 868/1969 (Amtsblatt des Bundesministers für Post und Fernkommunikation vom 31. 8. 1969) entspricht.

CAUTION:
USE OF CONTROLS OR ADJUSTMENTS OR PERFORMANCE OF PROCEDURES OTHER THAN THOSE SPECIFIED HEREIN MAY RESULT IN HAZARDOUS RADIATION EXPOSURE

THE D/A CONVERTER SHOULD NOT BE ADJUSTED OR REPAIRED BY ANYONE EXCEPT PROPERLY QUALIFIED SERVICE PERSONNEL

NOTE:
This unit may cause interference to radio and television reception if you do not operate it in strict accordance with this OPERATING INSTRUCTIONS

This unit complies with Class B computing device rules in accordance with the specifications in Sub-part J of Part 15 of the FCC Rules, which are designed to provide reasonable protection against such interference in a residential installation. If the unit does cause interference to any radio or television reception, try to reduce it by one or more of the following means:

- a) Turn the other unit to improve reception.
- b) Move this unit.
- c) Move the unit away from others.
- d) Plug this unit respectively into a different AC outlet.

* This is noted in accordance with Section 15.838 of the FCC Rules.

We greatly appreciate your purchase of this DENON product. To ensure that you take fullest advantage of your D/A converter, read these instructions carefully before using the unit and be sure to always operate it properly. After reading these instructions, be sure to keep them for future reference should questions or problems arise.

— TABLE OF CONTENTS —

FEATURES	6
NAMES AND FUNCTIONS OF PARTS	7
CONNECTIONS	8
OPERATION PRECAUTIONS	9
INSTALLATION PRECAUTIONS	9
TROUBLESHOOTING	9
SPECIFICATIONS	9

Please check to make sure the following items are included with the main unit in the carton.

- | | |
|----------------------------------|---|
| (1) Operating Instructions | 1 |
| (2) Connection Cord | 1 |

IMPORTANT (CANADIAN MODEL ONLY)

This digital apparatus does not exceed the Class B limits for radio noise emissions from digital apparatus set out in the Radio Interference Regulations of the Canadian Department of Communication.

• Line Voltage Selection (for multiple voltage model only)

- The desired voltage may be set with the VOLTAGE SELECTOR knob on the rear panel, using a screwdriver.
- Do not twist the VOLTAGE SELECTOR knob with excessive force as this may cause damage.
- If the VOLTAGE SELECTOR knob does not turn smoothly, please contact a qualified serviceman.



• FOR U.S.A. & CANADA MODEL ONLY

CAUTION

TO PREVENT ELECTRIC SHOCK DO NOT USE THIS (POLARIZED) PLUG WITH AN EXTENSION CORD, RECEPTACLE OR OTHER OUTLET UNLESS THE BLADES CAN BE FULLY INSERTED TO PREVENT BLADE EXPOSURE.

FEATURES

The DA-500 is a D/A converter using a newly developed ALPHA (Adaptive Line Return Harmonized Algorithm) processor to provide the ultimate waveform reproduction and in particular faithful reproductions of the original sound at low levels.

(1) Ultimate signal reproduction using a newly developed ALPHA processor

- High speed interpolation by the newly developed ALPHA processor recreates the data below the LSB (least significant bit) lost upon recording to provide smooth waveform reproduction.
- The effects of ALPHA processing are particularly noticeable at low levels, such as when music gently fades out or gradually emerges from total silence.

(2) High precision D/A converters

The highly acclaimed 20-bit Super Linear Converter is used to provide unrivaled linearity at low levels.

(3) High precision digital filter

The DA-500 uses a high performance 20-bit input digital filter of the type used for professional recording.

NAMES AND FUNCTIONS OF PARTS

① Power Switch (POWER)

- Press this to turn on the power of the DA-500.

② Input Selector Switches (CH-1 to CH-5)

- Use these switches to select one of the digital signal input jacks on the rear panel (⑥ or ⑦).
- The corresponding LED (light emitting diode) lights.

③ Phase Inverter Switch

- Press this to invert the phase of the output signals from output jack ⑨.
- The LED (light-emitting diode) lights when the inverted output mode is selected.

④ Sampling Frequency Indicators

- Digital audio signals with three different sampling frequencies (32 kHz, 44.1 kHz and 48 kHz) can be connected to the DA-500's digital inputs.
- The LED (light-emitting diode) for the sampling frequency of the digital audio signals connected to the channel selected with the input selector switches lights.

NOTE:

The input selector switch and the phase inverter switch position set when the power is turned off are stored in the memory, so the same input selector switch and phase inverter switch position are automatically set when the power is turned back on.

⑥ Digital Input Jacks — (CH-4 and CH-5) (COAXIAL-RCA)

- These are digital input jacks for connecting a 75 Ω (ohm) RCA pin plug cord.
- These input jacks are selected when the channel 4 (CH-4) or channel 5 (CH-5) input selector switch on the front panel is selected.

⑦ Digital Output Jack (OPTICAL-TOS)

- Digital data is output in optical form from this jack.
- The digital data input to the digital input jack selected with the input selector switches on the front panel (CH-1 to CH-5) is output from this jack.
- Optical fiber cables can be connected to this jack.

⑧ Digital Output Jack (COAXIAL-RCA)

- Digital data is output from this jack.
- The digital data input to the digital input jack selected with the input selector switches on the front panel (CH-1 to CH-5) is output from this jack.
- 75 Ω (ohm) RCA pin plug cords can be connected to this jack.

⑨ Analog Output Jacks (UNBALANCE) (Coaxial RCA)

- Use these jacks for connection to the amplifier's input jacks.

⑤ Digital Input Jacks — (CH-1 to CH-3) (OPTICAL-TOS)


- These are digital input jacks for connection of an optical fiber cable.
- These input jacks are selected when one of the channel 1 to 3 (CH-1 to CH-3) input selector switches on the front panel is selected.

CONNECTIONS


Always turn the power of all components off when making connections.

Output Jack Connections


- Analog Output Jacks (UNBALANCE)**
 - Connect as shown on the diagram using the included RCA pin-plug cords.
 - Use the amplifier's [CD], [AUX] or [TAPE/PLAY] input jacks.
 - Use the red lined pin-plug cord for the right channel, the white lined pin-plug cord for the left channel.

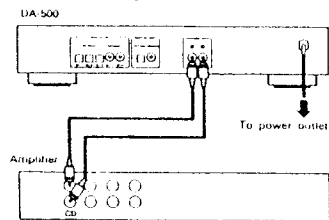

- Digital Output Jack (OPTICAL-TOS)**
 - Connect as shown on the diagram using an optical fiber cable, available in stores.
 - The jack includes a cap. Remove the cap, then insert the cord securely so that it is locked.

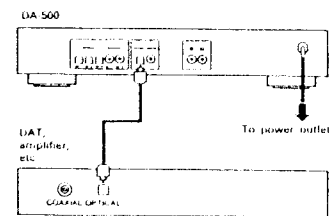


- Digital Output Jack (COAXIAL-RCA)**
 - Connect as shown on the diagram using a coaxial 75 Ω /ohm RCA pin-plug cord, available in stores.

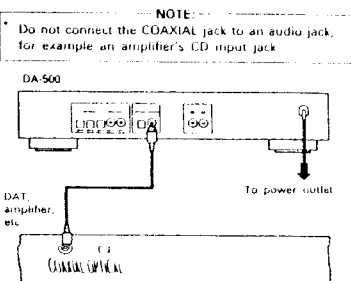


Input Jack Connections

- Digital Input Jacks (OPTICAL-TOS) (CH-1 to CH-3)**
 - Connect as shown on the diagram using an optical fiber cable, available in stores.
 - The jack includes a cap. Remove the cap, then insert the cord securely so that it is locked.

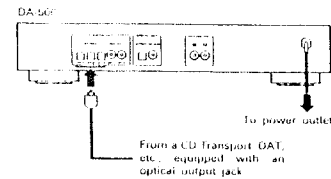

- Digital Input Jacks (COAXIAL-RCA) (CH-4 and CH-5)**
 - Connect as shown on the diagram using a coaxial 75 Ω /ohm RCA pin-plug cord, available in stores.

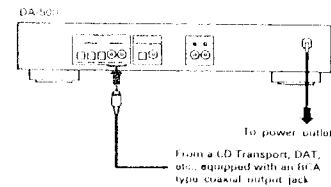


OPERATION PRECAUTIONS

- Optical fibers**
 The DA-500 uses optical fiber transmission for digital input jacks channels 1 to 3 (CH-1 to CH-3) and one of the digital output jacks. With optical fiber cables, light signals are transmitted along the inner core. Scratches on the tip of the plug or foreign objects in the receptacle could seriously hamper signal transmission. If there is extra cable length, coil the cable into a wide loop behind the set. Never strongly bend the cable. Optical fiber cables must be connected to the connectors in a specific direction. Always hold on to the plug when disconnecting the cable. Never pull directly on the cable.
- Volume level**
 The DA-500 has a wide dynamic range. Be careful not to turn the volume on the amplifier up too high for example at the beginning of a piece when the level seems low, as the speakers may be damaged at sections where the volume level is high.
- Place of installation**
 Humming may occur if the DA-500 is installed near a TV or other audio components or if their connection cords are nearby. If this happens, try setting the components or their connection cords in a different position. Also, noise may be heard in AM or FM broadcasts if the DA-500 is turned on while listening to a tuner. If this happens, turn the DA-500's power off.

INSTALLATION PRECAUTIONS

This D/A converter uses a microcomputer for controlling internal electronic circuits. In the event that the converter is used while a nearby tuner or TV is turned on, although unlikely, interference could occur either in the sound from the tuner or the picture of the TV. To avoid this, please take the following precautions.

- Keep the D/A converter as far away from the tuner or TV set as possible.
- Keep the power cable and connecting cable of the D/A converter separate from the antenna wires of the tuner and TV.
- Interference is particularly likely to occur when an indoor antenna or a 300 Ω /ohm feeder cable is used. Thus, use of an outdoor antenna and 75 Ω /ohm coaxial cable is strongly recommended.



TROUBLESHOOTING

Check the following once again before assuming there is a problem with the DA-500.

- Are all connections correct?
- Is the DA-500 being operated properly as described in the instructions?

If the set is not operating properly, check as shown on the table below. If this does not solve the problem, the DA-500 may be malfunctioning. Turn the power off immediately and contact your store of purchase.

Symptom	Cause	Refer to:
No sound is produced, or sound is distorted.	Output cord is not properly connected to the amplifier. Amplifier controls and switches not properly set.	Page 8

SPECIFICATIONS


- Audio**
 No. of channels: 2 channels
 Frequency response: 2 ~ 20,000 Hz
 Dynamic range: 100 dB
 Signal to-noise ratio: 112 dB
 Harmonic distortion: 0.0025%
 Separation: 105 dB (1kHz)
 Output voltage: Unbalanced: 2 Vrms/10 kΩ /ohm load
- Digital output signal format**
 - OPTICAL-TOS**
 Peak optical power: -15 dBm ~ -21 dBm
 Acceptable laser wavelength: 660 nm
 - COAXIAL-RCA:** 0.5 Vp p/75 Ω /ohm
- General**
 Power Supply: Frequency and voltage are shown on rating label.
 Power Consumption: 10 W
 Dimensions: 434 (W) × 74 (H) × 280 (D) mm (17 3/4" × 2 59/64" × 11")
 Weight: 3.4 kg (7 lbs 12 oz)
- Digital input signal format**
 Format: Digital audio interface
 - OPTICAL-TOS**
 Acceptable laser power: -27 dBm or greater
 Acceptable laser wavelength: 660 nm

* Design and specifications are subject to change without notice in the course of product improvement.

DISASSEMBLY


1. Top Cover

- ① Remove 4 screws fastening the Top Cover on the both sides, then detach the Top Cover in the arrow direction.

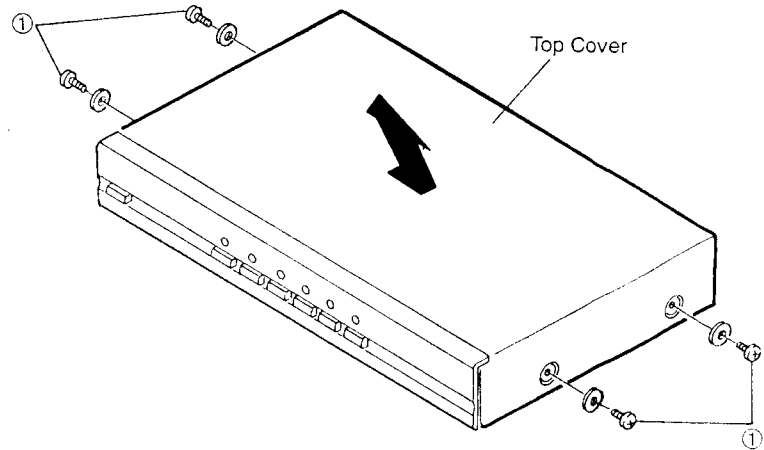


2. Front Panel Ass'y

- ② Disconnect CN4B, CN5B and CN7B in the Main Unit Ass'y, remove 4 screws from the bottom side and 4 screws from the both sides, then detach the Front Panel Ass'y in the arrow direction.

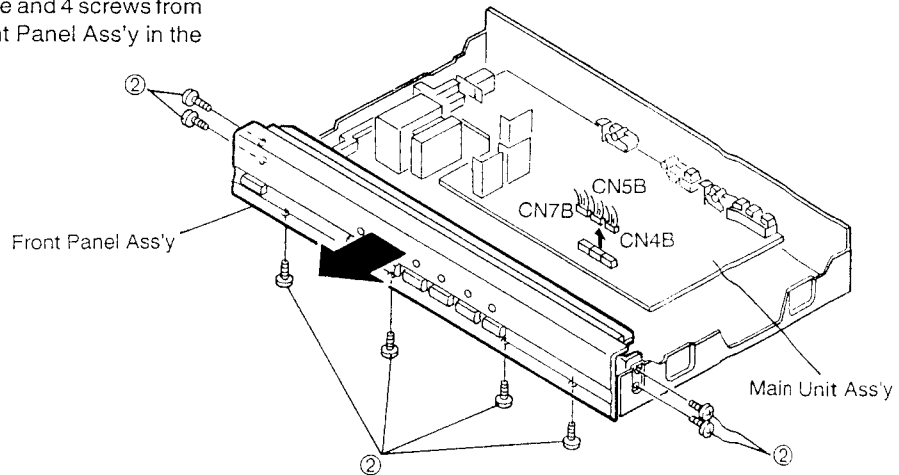


3. Main Unit Ass'y

- ③ Remove 2 screws mounting the Rear Panel and 3 screws fixing Main Chassis.
- ④ Release 3 PCB Holders, then detach the Main Unit Ass'y.

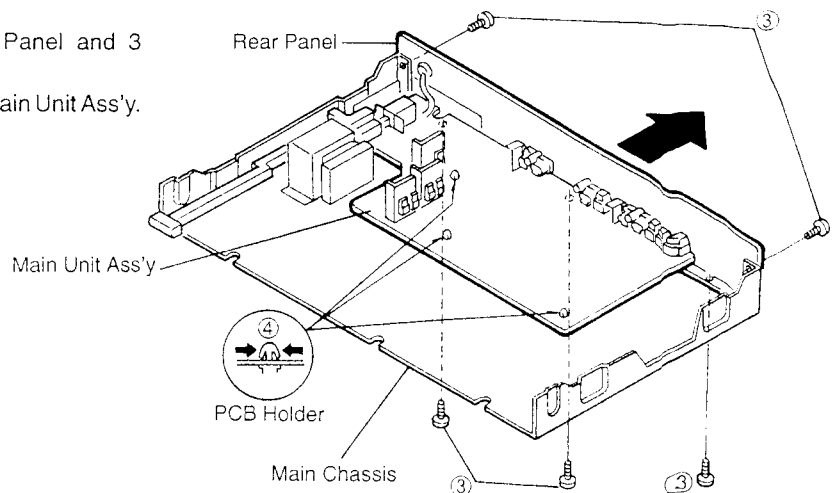

BLOCK DIAGRAM

1 2 3 4 5 6 7 8


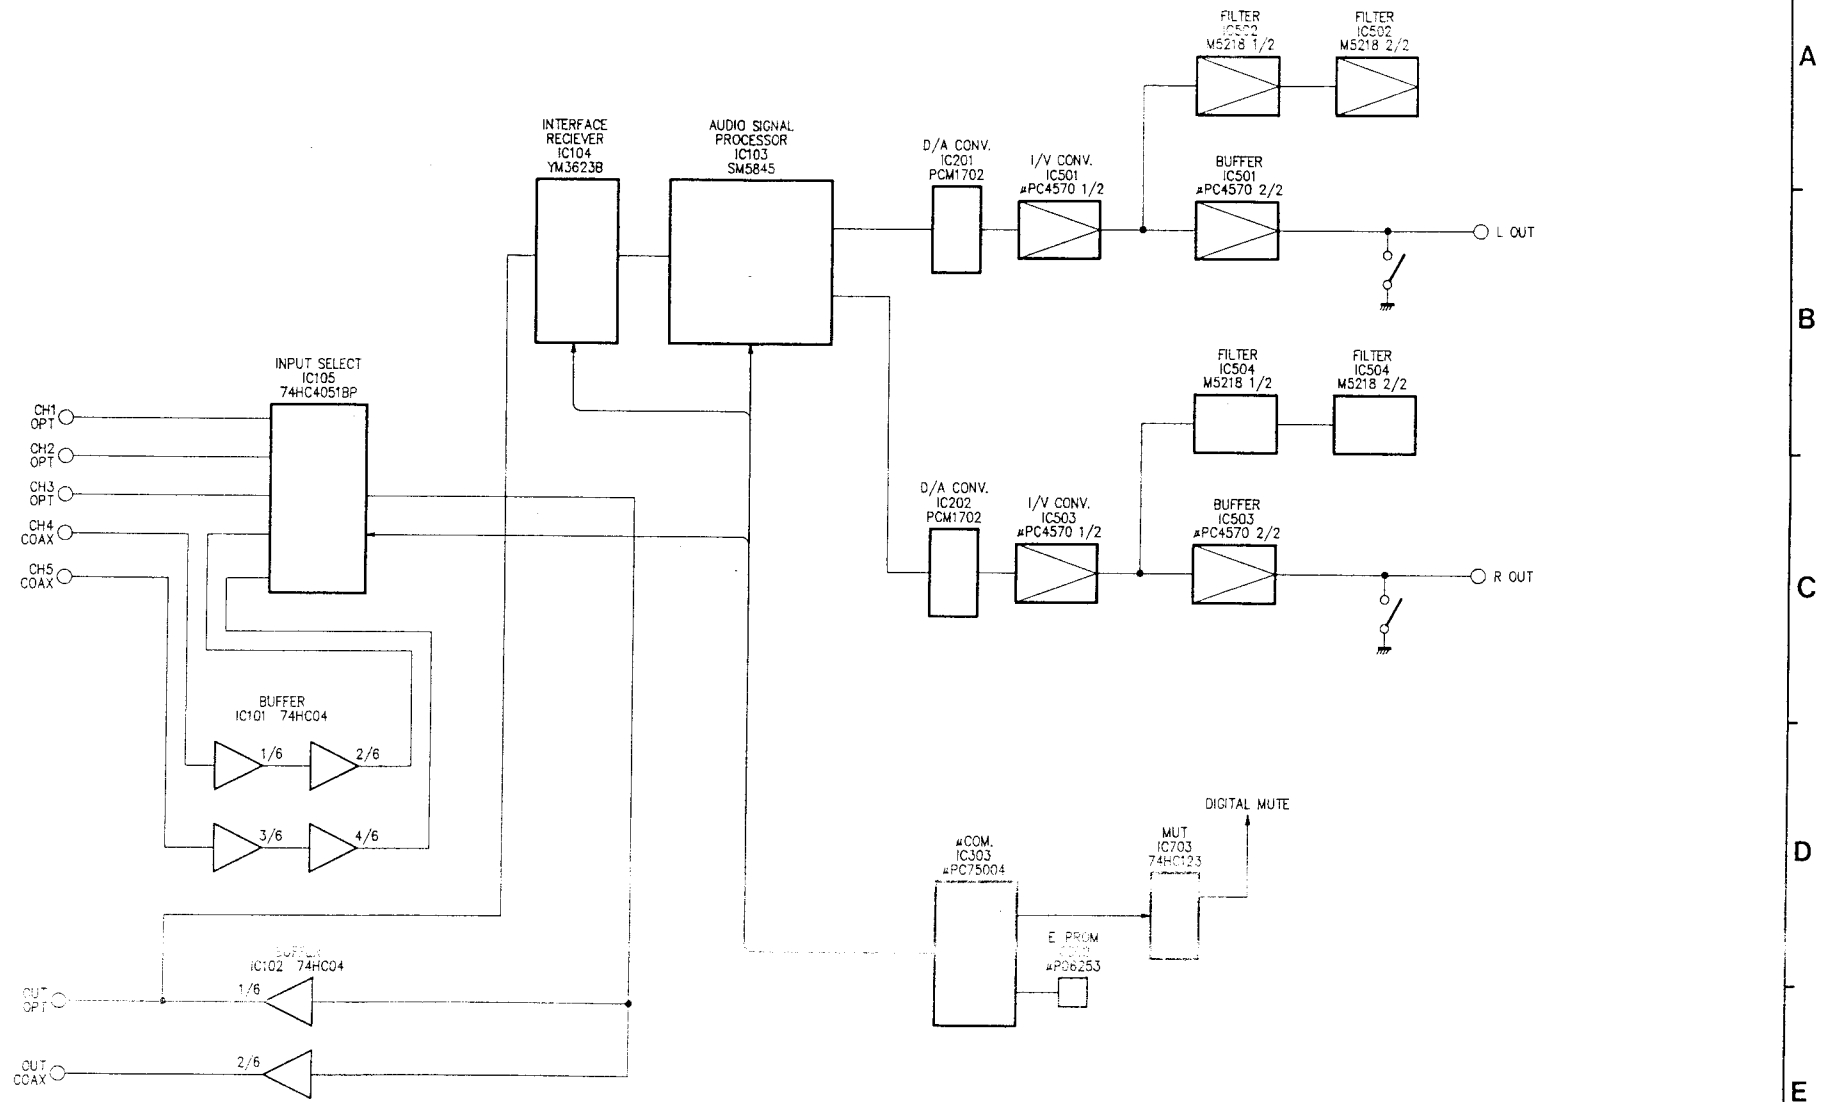


A
B
C
D
E

PRINTED WIRING BOARD

1 2 3 4 5 6 7 8

A

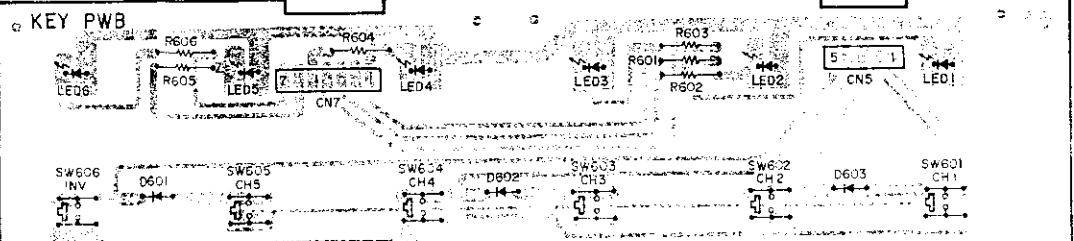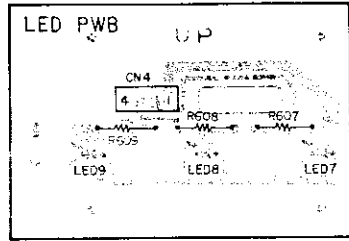


B

C

D

E

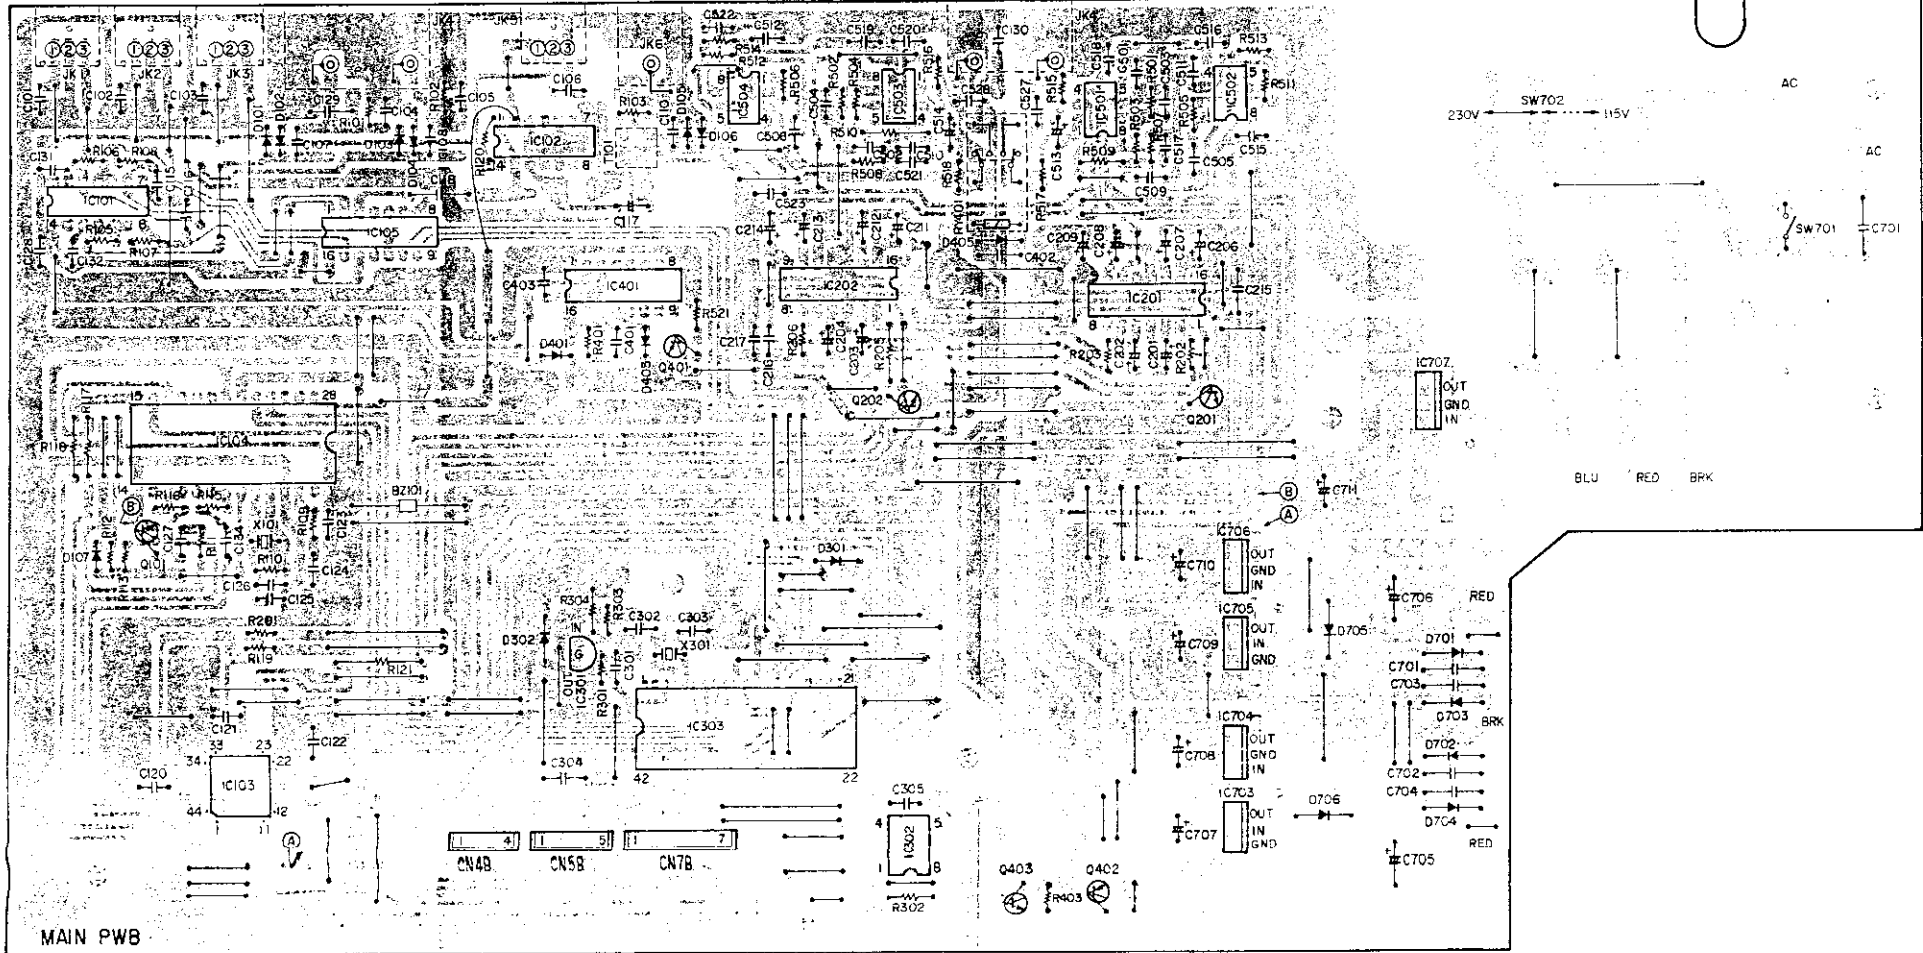

NOTE FOR PARTS LIST

- Part indicated with the mark "♦" are not always in stock and possibly to take a long period of time for supplying, or in some case supplying of part may be refused.
- When ordering of part, clearly indicate "1" and "1" (i) to avoid mis-supplying.
- Ordering part without stating its part number can not be supplied.
- Part indicated with the mark "★" is not illustrated in the exploded view.
- Not including Carbon Film ±5%, 1/4W Type in the P.W.Board parts list. (Refer to the Schematic Diagram of the boards.)

WARNING:

Parts marked with this symbol  have critical characteristics.
Use ONLY replacement parts recommended by the manufacturer.

● Resistors

Ex.	GN Type	14K Shape and performance	0E Power	18Q Resistance	G Allowable error	FR Others
01	Carbon	0	1/8W	J	±1%	B Pulse-resistor type
02	Composition	0	1/4W	Q	±2%	NL Low noise type
03	Metal oxide film	1	1/2W	J	±5%	NB Non-burning type
04	Wirewound	1A	1W	K	±10%	FR Fuse-resistor
05	Metal film	0	1/2W	M	±20%	F Lead wire forming
06	Metal mixture	0	1/2W			

• Resistance

1 8 2 ⇒ 1800 ohm = 1.8 kohm
 _____ Indicates number of zeros after effective number
 _____ 2-digit effective number.

• Units: ohm

1 R 2 ⇒ 1.2 ohm
 _____ 1-digit effective number.
 _____ 2-digit effective number, decimal point indicated by R.
 • Units: ohm

● Capacitors

Ex.	0E Type	04W Shape and performance	1H Dielectric strength	2R2 Capacity	M Allowable error	FR Others
0F	Aluminum foil electrolytic	0	6.3V	R	±5%	01 Lead wire type
0A	Aluminum solid electrolytic	1A	10V	G	±20%	02 Lead wire type
0G	Tantalum electrolytic	0	16V	J	±5%	03 Chip-resistor type
0C	Film	1E	25V	K	±10%	04 Chip-resistor type
0K	Ceramic	1V	35V	M	±20%	05 Chip-resistor type
0C	Ceramic	1H	50V	Z	±80%	06 Chip-resistor type
0P	Oil	2A	100V	0	±20%	07 Chip-resistor type
0M	Mica	2B	125V	P	±10%	08 Chip-resistor type
0F	Metalized	2C	150V	0	±5%	09 Chip-resistor type
0H	Metalized	2D	200V	C	±20%	
		2E	250V	D	±9.6%	
		2H	500V			
		2J	630V			

• Capacity (electrolyte only)

2 2 2 ⇒ 2200µF
 _____ Indicates number of zeros after effective number
 _____ 2-digit effective number.

• Units: µF

2 R 2 ⇒ 2.2µF
 _____ 1-digit effective number.
 _____ 2-digit effective number, decimal point indicated by R.

• Units: µF

• Capacity (except electrolyte)

2 2 2 ⇒ 2200pF = 0.0022µF
 _____ More than 2]— Indicates number of zeros after effective number
 _____ 2-digit effective number.

• Units: pF

2 2 1 ⇒ 220pF
 _____ (0 or 1) — Indicates number of zeros after effective number
 _____ 2-digit effective number.

• Units: pF

• When the dielectric strength is indicated in AC, it is indicated after the dielectric strength value.


PRINTED WIRING BOARD PARTS LIST

MAIN UNIT ASS'Y

Ref.No.	Part No.	Part Name	Remarks	Ref.No.	Part No.	Part Name	Remarks
SEMICONDUCTORS GROUP				RESISTORS GROUP			
IC101,102	262 1265 002	IC TC74HCU04AP		R101-103	241 2395 097	Carbon 75ohm 1/4W	
IC103	262 1869 000	IC SM5845-AF		R105,106	241 2402 951	Carbon 47kohm 1/4W	
IC104	262 0910 002	IC YM3623B		R107,108	241 2404 959	Carbon 330kohm 1/4W	
IC105	262 1158 009	IC TC74HC4501AP		R109	241 2397 008	Carbon 220ohm 1/4W	
IC201,202	262 1837 016	IC PCM-1702P-J		R110	241 2405 974	Carbon 1Mohm 1/4W	
IC301	263 0803 002	IC PST520D		R111	241 2397 972	Carbon 470ohm 1/4W	
IC302	DA5 0003 204	IC μ PD6253		R112	241 2400 021	Carbon 5.1kohm 1/4W	
IC303	BA5 0003 202	IC μ PD75008		R113	241 2397 972	Carbon 470ohm 1/4W	
IC401	262 1089 013	IC TC74HC123AP		R115-119	241 2398 955	Carbon 1kohm 1/4W	
IC501	262 0864 006	IC μ PC4570C		R120	241 2405 974	Carbon 1Mohm 1/4W	
IC502	DA5 0003 203	IC M5218A		R121	241 2398 955	Carbon 1kohm 1/4W	
IC503	262 0864 006	IC μ PC4570C		R201	241 2398 955	Carbon 1kohm 1/4W	
IC504	DA5 0003 203	IC M5218A		R203	241 2398 955	Carbon 1kohm 1/4W	
IC701,702	268 0055 004	IC ICP-F15		R206	241 2398 955	Carbon 1kohm 1/4W	
IC703	DA5 0003 205	IC TA79012S		R301-303	241 2400 092	Carbon 10kohm 1/4W	
IC704	DA5 0003 206	IC TA7812S		R304	241 2398 955	Carbon 1kohm 1/4W	
IC705	DA5 0003 207	IC TA79005S		R401	241 2405 000	Carbon 510kohm 1/4W	
IC706,707	HMA R810 201	IC TA7805S		R403	241 2402 951	Carbon 47kohm 1/4W	
Q101	269 0025 008	Transistor RN1202		R501-504	241 2400 050	Carbon 6.8kohm 1/4W	
Q201,202	269 0025 008	Transistor RN1202		R505,506	241 2399 051	Carbon 2.7kohm 1/4W	
Q401	271 0191 906	Transistor 2SA1048GR		R507,508	241 2400 021	Carbon 5.1kohm 1/4W	
Q402	269 0026 007	Transistor RN2202		R509,510	241 2398 081	Carbon 1.3kohm 1/4W	
Q403	269 0029 004	Transistor RN1204		R511,512	241 2399 093	Carbon 3.9kohm 1/4W	
D101-107	276 0432 000	Diode 1SS270A		R513,514	241 2400 018	Carbon 4.7kohm 1/4W	
D301,302	DA5 0003 208	Diode SB10-03A3		R515,516	241 2396 960	Carbon 150ohm 1/4W	
D401	276 0432 000	Diode 1SS270A		R517,518	241 2403 934	Carbon 100kohm 1/4W	
D403	276 0432 000	Diode 1SS270A		R521	241 2400 092	Carbon 10kohm 1/4W	
D405	276 0432 000	Diode 1SS270A		R601-609	241 2397 008	Carbon 220ohm 1/6W	
D601-603	276 0432 000	Diode 1SS270A		CAPACITORS GROUP			
D701-704	930 0327 002	Diode 1N4003		C101-103	HMA R810 303	Ceramic 0.1 μ F/25V	CK1 4=1E104K AX
D705,706	276 0519 004	Diode 1SR35-200A		C104,105	HMA 5000 402	Ceramic 47pF/25V	CK1 4=1E470K AX
LED1-6	DA5 0003 216	LED SLR342VR3F		C106	HMA R810 303	Ceramic 0.1 μ F/25V	CK1 4=1E104K AX
LED7-9	DA5 0003 216	LED SLR342VR3F		C107,108	HMA 5000 409	Ceramic 0.01 μ F/25V	CK1 4=1E103K AX
LED1-6	DA5 0003 217	LED Collar LH-5S-6		C110	HMA R810 303	Ceramic 0.1 μ F/25V	CK1 4=1E104K AX
				C114	HMA R810 303	Ceramic 0.1 μ F/25V	CK1 4=1E104K AX
				C115,116	DA5 0003 214	Ceramic 150pF	CK1 4NOP-151 AX
				C117	254 4254 022	Electrolytic 33 μ F/16V	CE04W1C330
				C118	HMA R810 303	Ceramic 0.1 μ F/25V	CK1 4=1E104K AX
				C120-123	HMA R810 303	Ceramic 0.1 μ F/25V	CK1 4=1E104K AX
				C124	255 1264 982	Film 0.0047 μ F/50V	CF93A1H472J
				C125,126	DA5 0003 213	Ceramic 10pF	CK1 4NOP-100 AX
				C127	255 1262 764	Film 1 μ F/50V	CF93A1H105J
				C128	HMA R810 303	Ceramic 0.1 μ F/25V	CK1 4=1E104K AX


Ref.No.	Part No.	Part Name	Remarks	Ref.No.	Part No.	Part Name	Remarks
C129,130	HMA R810 303	Ceramic 0.1 μ F/25V	CK14=1E104K AX	RY401	241 0127 003	Relay	RY-12WK
C134	DA5 0003 212	Ceramic 1000pF/25V	CK14=1E102K AX	SW601-606	212 4388 910	Tact Switch	
C201-204	254 4254 006	Electrolytic 10 μ F/16V	CE04W1C100	SW701	DA5 0003 209	Power Switch	
C206	254 4254 941	Electrolytic 100 μ F/16V	CE04W1C101	T101	231 8063 009	Pulse Trans	
C207	254 4254 019	Electrolytic 22 μ F/16V	CE04W1C220	X101	399 0165 007	Crystal	16.934MHz
C208,209	254 4254 941	Electrolytic 100 μ F/16V	CE04W1C101	X301	399 0082 009	Ceramic resonator	CSA4.19MHz
C211	254 4254 941	Electrolytic 100 μ F/16V	CE04W1C101		DA5 0003 211	Card Spacer	
C212	254 4254 019	Electrolytic 22 μ F/16V	CE04W1C220		DA5 0003 210	Terminal	for P.T. cable
C213,214	254 4254 941	Electrolytic 100 μ F/16V	CE04W1C101				
C215	HMA R810 303	Ceramic 0.1 μ F/25V	CK14=1E104K AX				
C216,217	HMA R810 303	Ceramic 0.1 μ F/25V	CK14=1E104K AX				
C302,303	253 3133 002	Ceramic 33pF/50V	CC45CH1H330J				
C304	HMA R810 303	Ceramic 0.1 μ F/25V	CK14=1E104K AX				
C305	HMA R810 303	Ceramic 0.1 μ F/25V	CK14=1E104K AX				
C401	255 1122 024	Film 0.068 μ F/50V	CF93A1H683J				
C402,403	HMA R810 303	Ceramic 0.1 μ F/25V	CK14=1E104K AX				
C501,502	HMA 5000 405	Ceramic 220pF/25V	CK14=1E221K AX				
C503,504	HMA 5000 404	Ceramic 100pF/25V	CK14=1E101K AX				
C505,506	255 1249 952	Film 0.0027 μ F/50V	CF93A1H272J				
C509,510	255 1249 952	Film 0.0027 μ F/50V	CF93A1H272J				
C511,512	255 1249 952	Film 0.0027 μ F/50V	CF93A1H272J				
C513,414	254 4254 019	Electrolytic 22 μ F/16V	CE04W1C220				
C515-521	HMA R810 303	Ceramic 0.1 μ F/25V	CK14=1E104K AX				
C522,523	HMA R810 303	Ceramic 0.1 μ F/25V	CK14=1E104K AX				
C701(P.SW)	DA5 0003 215	Ceramic 0.01 μ F	CS17==103Z				
C701-704	HMA 5000 409	Ceramic 0.01 μ F/25V	CK14=1E103K AX				
C705,706	254 4256 091	Electrolytic 2200 μ F/25V	CE04W1E222				
C707-711	254 4254 051	Electrolytic 220 μ F/16V	CE04W1C221				
OTHERS PARTS GROUP							
BZ101	235 0049 007	Beads Inductor					
CN4	DA5 003 219	Lead Connector (4P)					
CN4B	205 0233 045	EH Connector Base					
CN5	DA5 003 218	Lead Connector (5P)					
CN5B	205 0233 058	EH Connector Base					
CN7	DA5 003 220	Lead Connector (7P)					
CN7B	205 0233 074	EH Connector Base					
JK1-3	269 0097 007	GP1F32R					
JK4	204 8410 003	2P Pin Jack (BLK/BLK)					
JK5	269 0098 006	GP1F32T					
JK6	204 8495 002	1P Pin Jack (BLK)					
JK7	204 8433 006	2P Pin Jack (WHT/RED)					


WIRING DIAGRAM

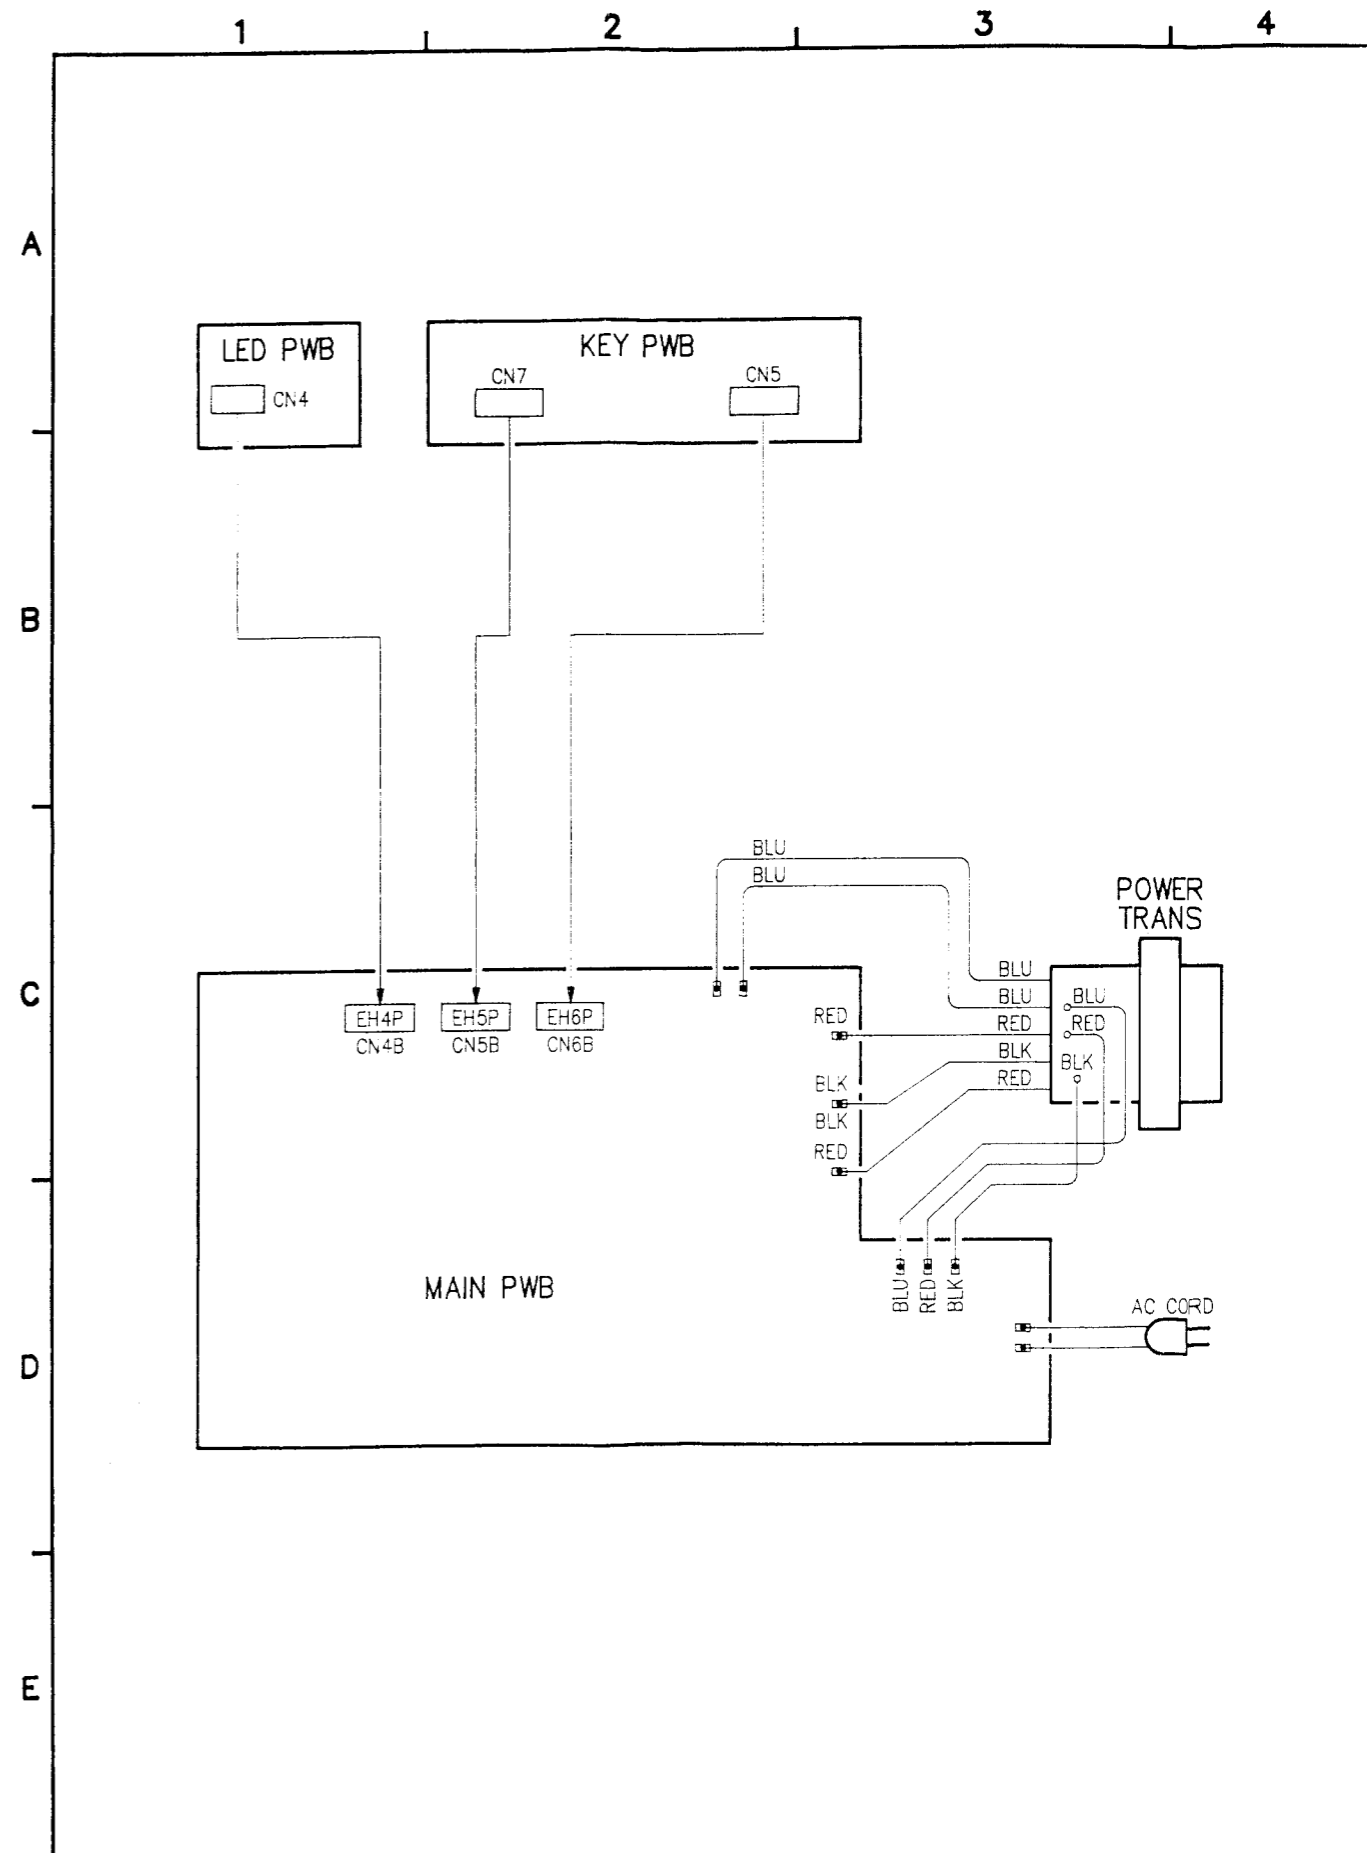

SCHEMATIC DIAGRAM

1 2 3 4 5 6 7 8

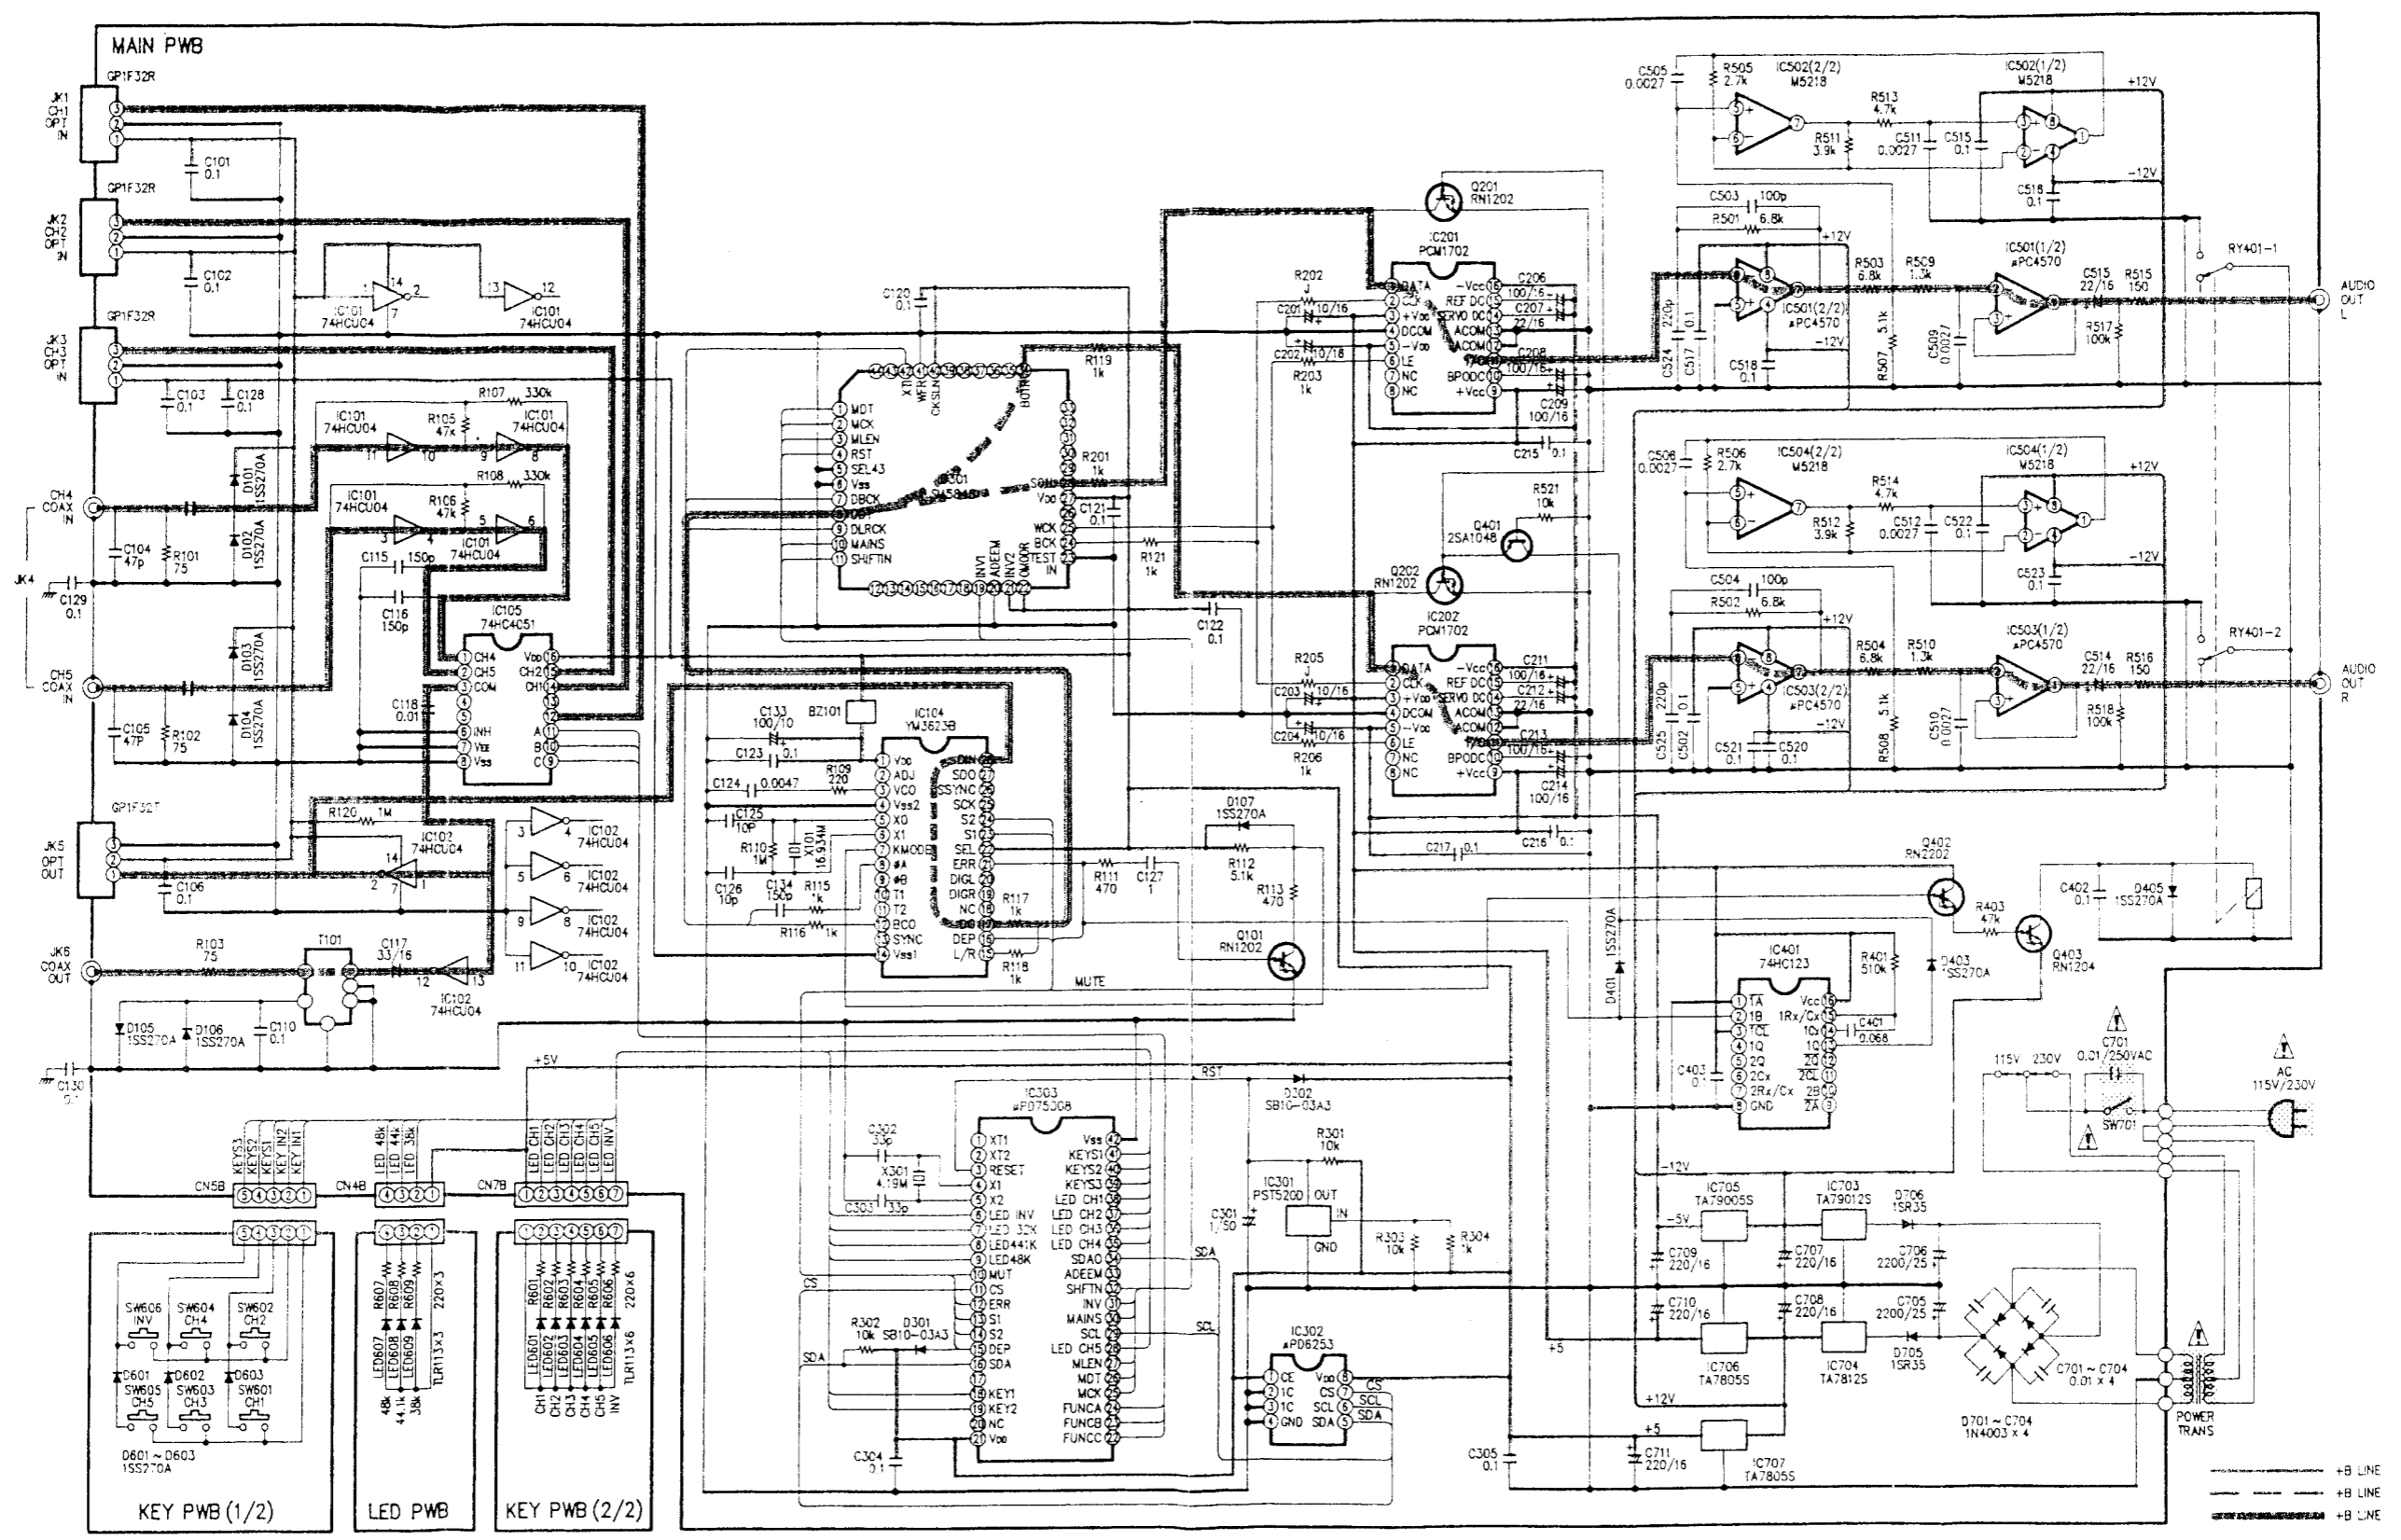

WARNING:
Parts marked with this symbol  have critical characteristics. Use ONLY replacement parts recommended by the manufacturer.

CAUTION:
Before returning the unit to the customer, make sure you make either (1) a leakage current check or (2) a line to chassis resistance check. If the leakage current exceeds 0.5 milliamperes, or if the resistance from chassis to either side of the power cord is less than 240 kohms, the unit is defective.


WARNING:
DO NOT return the unit to the customer until the problem is located and corrected.

NOTES:
Circuit and parts are subject to change without prior notice.

NOTES
ALL RESISTANCE VALUES IN OHM, k=1,000 OHM, M=1,000,000 OHM
ALL CAPACITANCE VALUES IN MICROFARAD P=NO SIGNAL INPUT CONDITION
EACH VOLTAGE AND CURRENT ARE MEASURED AT NO SIGNAL INPUT CONDITION
CIRCUIT AND PARTS ARE SUBJECT TO CHANGE WITHOUT PRIOR NOTICE.

A
B
C
D
E

EXPLODED VIEW OF CHASSIS AND CABINET

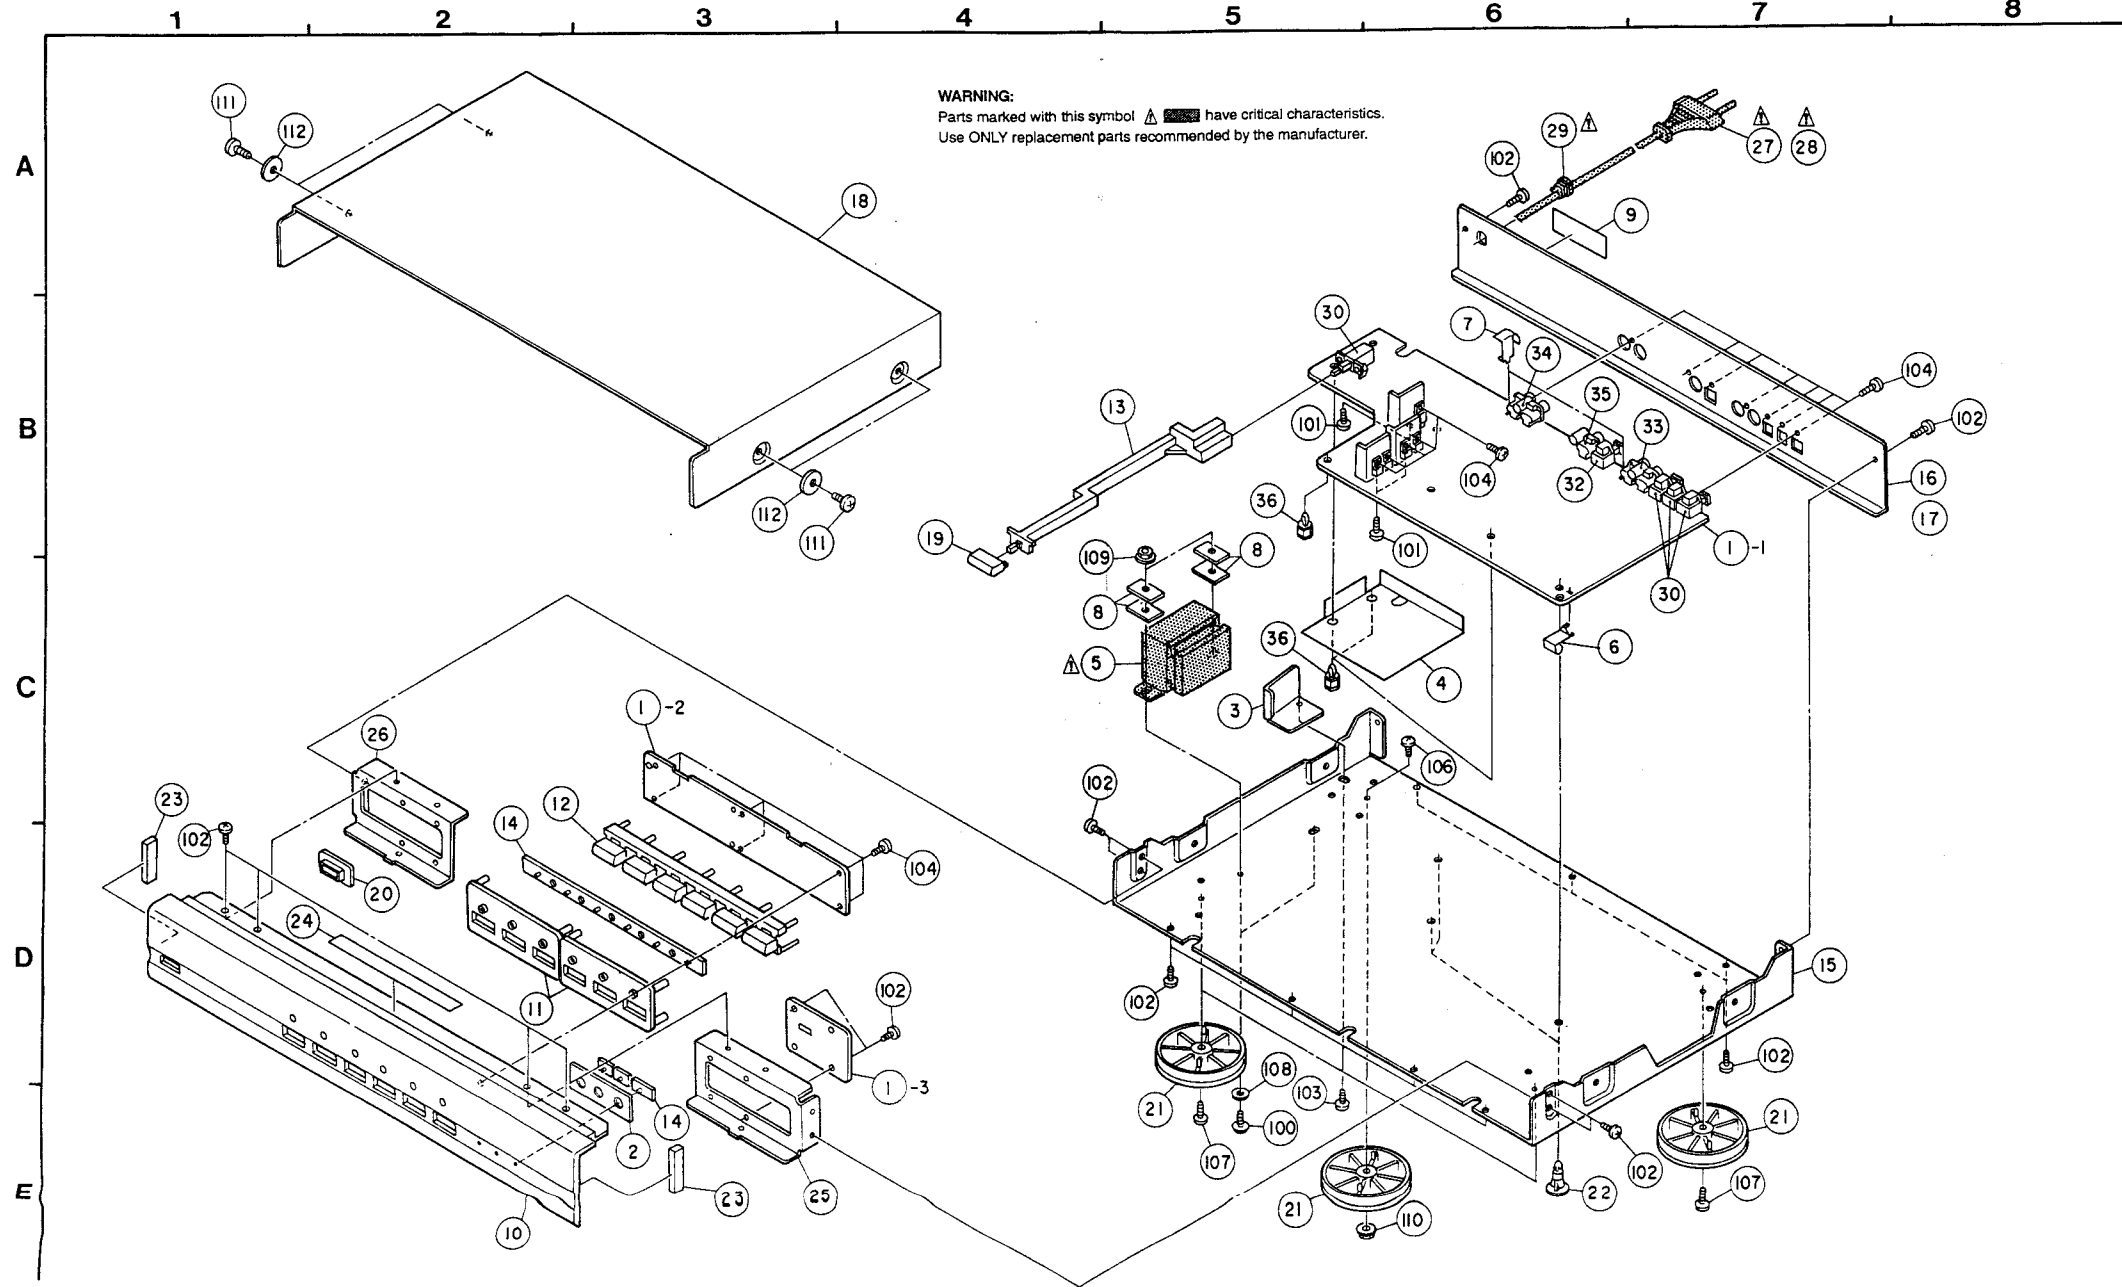



PARTS LIST OF EXPLODET VIEW

Ref.No.	Part No.	Part Name	Remarks	Q'ty	Ref.No.	Part No.	Part Name	Remarks	Q'ty
①-1	DA5 0003 201	Main Unit Ass'y			109	DA5 0003 117	Nut		2
①-1-1	—	Main Unit			110	DA5 0003 120	Nut		1
①-1-2	—	Key Unit			111	HMA 5000 336	Screw 4x6 B		4
①-1-3	—	LED Unit			112	HMA 5000 338	Washer		4
②	DA5 0003 112	Lens sheet		1	PACKING & ACCESSORIES (not inclded EXPLODED VIEW)				
3	DA5 0002 113	Biss Guard Bracket	Europe Model	1	⑤	505 0038 030	Envelope		1
4	DA5 0002 114	Insulate Sheet	Europe Model	1	⑥	511 2745 009	Operating instruction		1
△5	HMA R810 121	Power Trans		1		HMA 5000 324	2P Pin Cord	1.5mm	1
⑥	412 2504 105	Earth Plate		1	⑦	503 0762 203	Cushion		2
7	412 3100 003	PWB Earth		2	⑧	DN8 2030 134	Cabinet Cover		1
8	DA5 0003 115	Trans Fix Bracket		4	⑨	501 1873 001	Carton Case		1
⑩	DA5 0003 100	Front Panel Ass'y		1					
⑪	DA5 0003 101	Button Base		2					
⑫	113 1686 101	6P Function Key		1					
13	DA5 0003 102	Button Lever		1					
⑭	DA5 0003 103	Lens		1					
⑮	411 0752 600	Main Chassis		1					
⑯	DA5 0003 104	Rear Panel	U.S.A. & Canada Model	1					
⑰	DA5 0002 104	Rear Panel	Europe Model	1					
⑱	102 0122 378	Top Cover		1					
19	113 1375 207	P,P.W. Knob		1					
⑳	DA5 0003 105	P,P.W. Knob Guide		1					
㉑	104 0208 201	Foot Ass'y		4					
22	412 1979 003	PCB Holder		3					
23	DA5 0003 106	Sponge		2					
24	DA5 0003 107	Himeron		1					
25	DA5 0003 108	Side Bracket (R)		1					
26	DA5 0003 109	Side Bracket (L)		1					
△27	HMA 5000 352	AC Cord 2.0mm	U.S.A. & Canada Model	1					
△28	DA5 0002 110	AC Cord 1.7mm	Europe Model	1					
△29	HMA 5000 315	Cord Bush		1					
30	DA5 0003 209	Power Switch		1					
31	269 0097 007	GP1F32R	JK1 - 3	3					
32	269 0098 006	GP1F32T	JK5	1					
33	204 8410 003	2P Pin Jack (BLK/BLK)	JK4	1					
34	204 8433 006	2P Pin Jack (WHT/RED)	JK7	1					
35	204 8495 002	1P Pin Jack (BLK)	JK6	1					
36	DA5 0003 211	Card Spacer		4					
SCREW & NUT									
100	DA5 0003 118	Screw 3x10 B		2					
101	HMA R810 126	Screw 2.6x8 B		3					
102	HMA 5000 330	Screw 3x6 B		15					
103	HMA 5000 330	Screw 3x6 B	Europe Model	1					
104	DN8 2030 158	Screw 3x8 B		18					
106	DA5 0003 119	Screw 3x8 B		1					
107	HMA 5000 331	Screw 3x8 B		3					
108	475 1140 008	Washer		2					



SEMICONDUCTORS

● IC



μPD75008

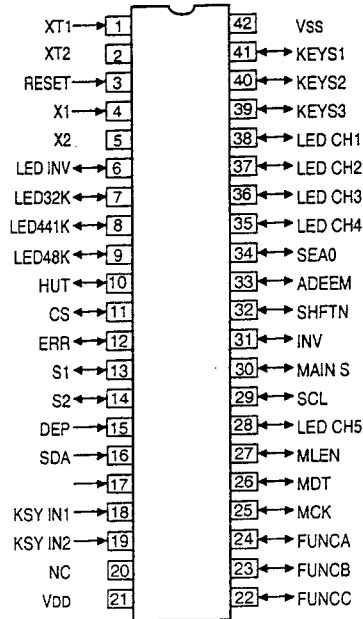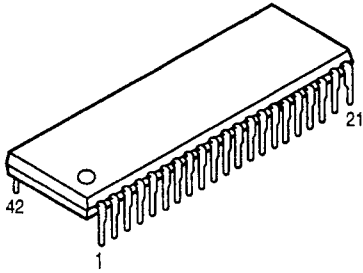



SM5845-AF

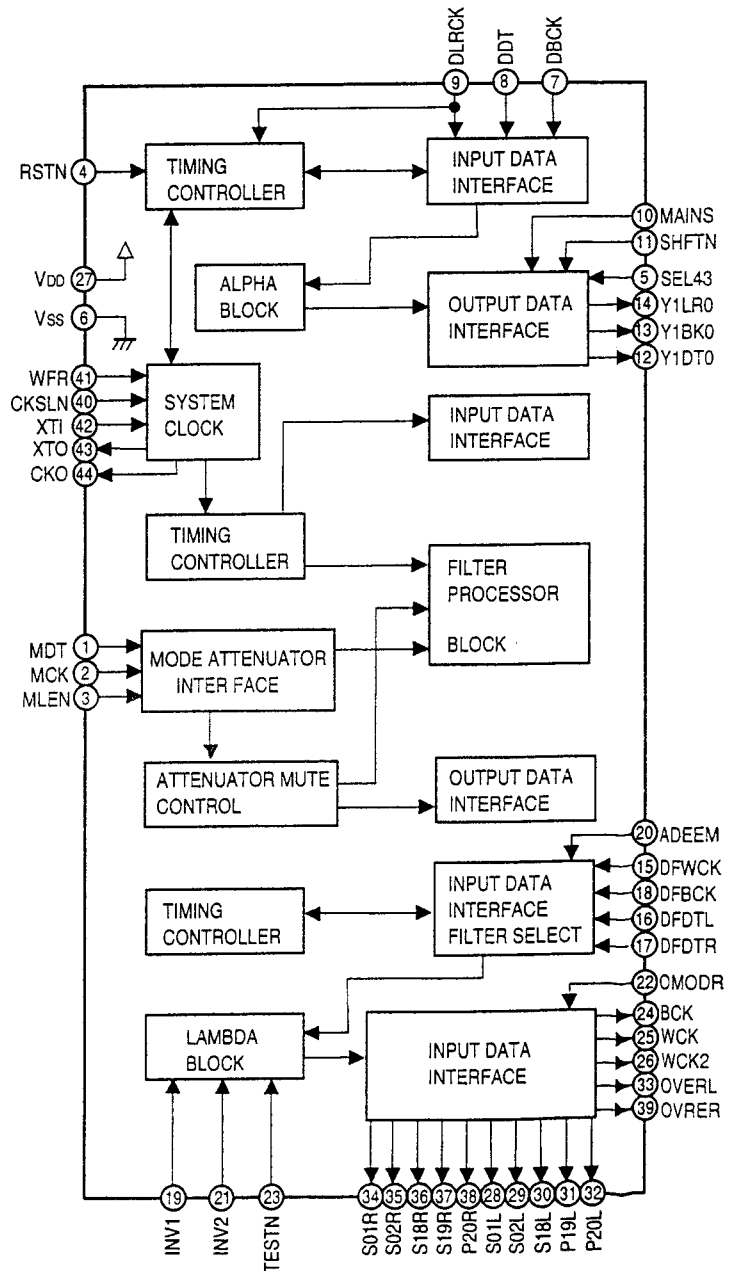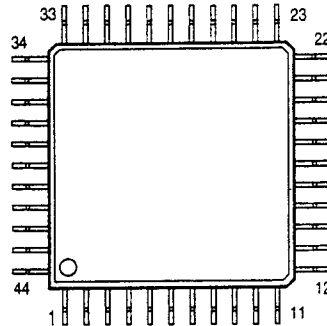



TC74HC4051A

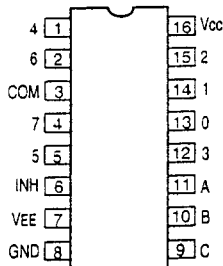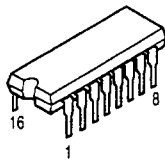



YM3623B

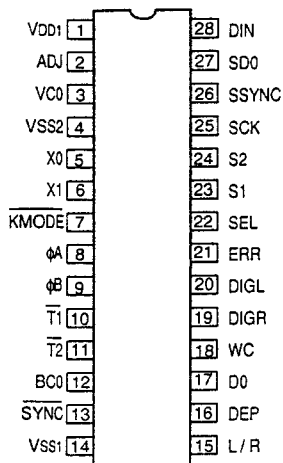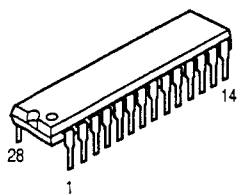



PCM1702P-J

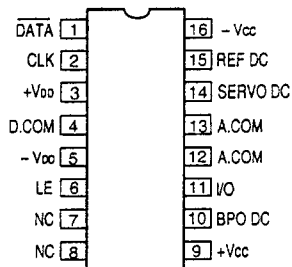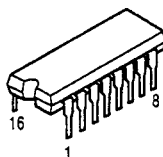



TC74HC123AP

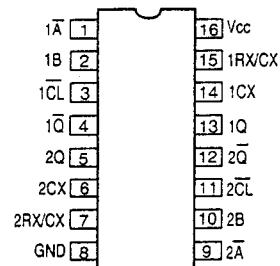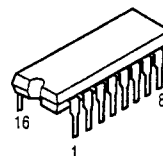



TC74HCU04AP

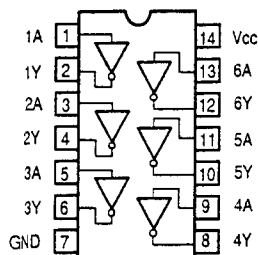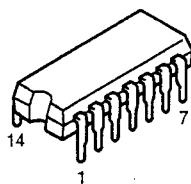

μ PD6253

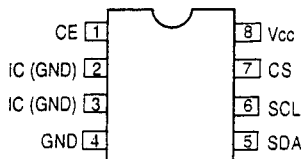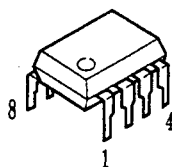


M5218A
 μ PD4570C

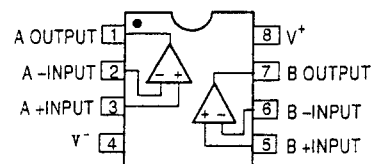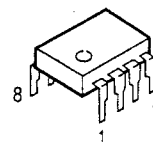


● TRANSISTOR


2SA1048




TA79005S
TA79012S

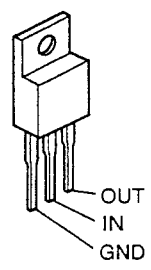


TA7805S
TA7812S

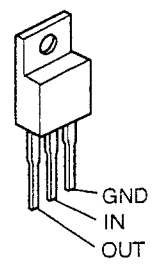


PST520D (RESE IC)

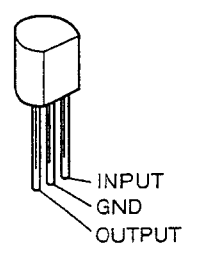


RN1202
RN1204
RN2202




RN1202

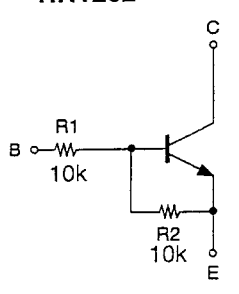

RN1204

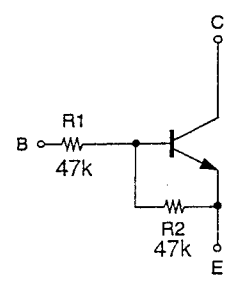


RN2202

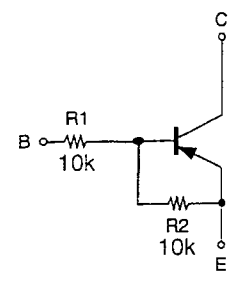


● DIODE

1SS133
1SS270A
1SR35-200A
1N4003
SB10-03A3



● IC PROTECTOR

ICP-F15

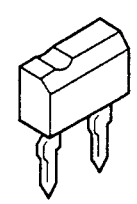

ICP-N15

