
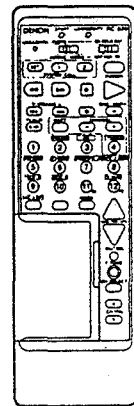


DENON

Hi-Fi AV Surround Amplifier

SERVICE MANUAL MODEL AVC-3800 AV SURROUND AMPLIFIER

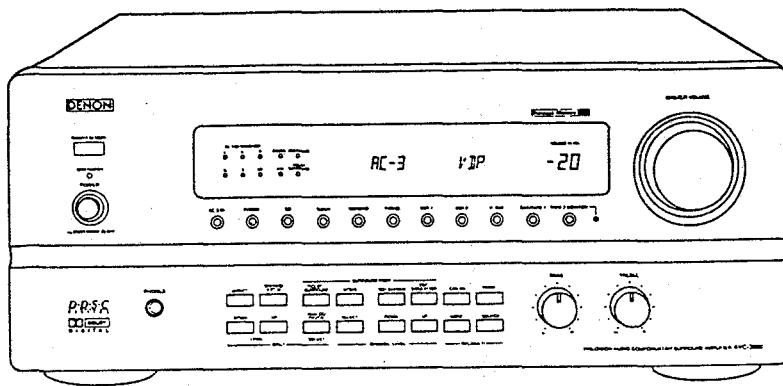

— CONTENTS —

OPERATING INSTRUCTIONS	2-16
WIRE ARRANGEMENT	17
DISASSEMBLY	18-21
LEVEL DIAGRAM	22
ADJUSTMENT	23
FUNCTION OF NEW CIRCUIT	24, 25
SEMICONDUCTORS	26-46
PRINTED WIRING BOARD	47-52
NOTE FOR PARTS LIST	53
PRINTED WIRING BOARD PARTS LIST	54-69
PARTS LIST OF EXPLODED VIEW	70
EXPLODED VIEW OF CHASSIS AND CABINET	71
BLOCK DIAGRAM	72
WIRING DIAGRAM	73
SCHEMATIC DIAGRAM - (1/17-16/17)	74-87
REMOTE CONTROL UNIT (RC-820)	89, 90
SCHEMATIC DIAGRAM	89
PARTS LIST	90

• Some illustrations using in this service manual are slightly different from the actual set.

NIPPON COLUMBIA CO., LTD.

■ We greatly appreciate your purchase of the AVC-3800. To be sure you take maximum advantage of all the features the AVC-3800 has to offer, read these instructions carefully and use the set properly. Be sure to keep this manual for future reference should any questions or problems arise.

TABLE OF CONTENTS

1	Note on Use	2	8	Operations	19-22
2	Before Using	3	9	Using the Surround Function	23-28
3	Cautions on Installation	3	10	Last Function Memory	28
4	Cautions on Handling	3	11	Initialization of the Microprocessor	28
5	Connections	4-8	12	Troubleshooting	29
6	System Setup	9-14	13	Specifications	30
7	Remote Control Unit	14-18			

● **ACCESSORIES**

Check that the following parts are included in addition to the main unit:

①	Operating instructions	1	④	R6P/AA batteries	2
②	Service station list	1	⑤	AC power cord	2
③	Remote control unit (RC-820)	1		(for Asia model)	
				(for Taiwan, R.O.C. model)	1

1 NOTE ON USE

2 BEFORE USING

Pay attention to the following before using this unit:


- **Moving the set**
To prevent short circuits or damaged wires in the connection cords, always unplug the power cord and disconnect the connection cords between all other audio components when moving the set.
- **Store this instructions in a safe place.**
After reading, store this instructions a safe place.
- **Note that the illustrations in this instructions may differ from the actual set for explanation purposes.**

- **Before turning the power switch on**
Check once again that all connections are proper and that there are not problems with the connection cords. Always set the power switch to the standby position before connecting and disconnecting connection cords.

3 CAUTIONS ON INSTALLATION

- Noise or disturbance of the picture may be generated if this unit or any other electronic equipment using microprocessors is used near a tuner or TV.
- If this happens, take the following steps:
 - Install this unit as far as possible from the tuner or TV.
 - Set the antenna wires from the tuner or TV away from this unit's power cord and input/output connection cords.
 - Noise or disturbance tends to occur particularly when using indoor antennas or 300 Ω/ohms feeder wires. We recommend using outdoor antennas and 75 Ω/ohms coaxial cables.

For heat dispersal, leave at least 10 cm of space between the top, back and sides of this unit and the wall or other components.

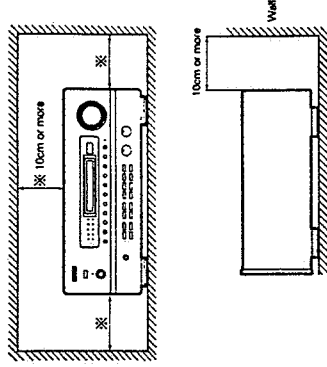


4 CAUTIONS ON HANDLING


- **Switching the input function when input jacks are not connected**
A clicking noise may be produced if the input function is switched when nothing is connected to the input jacks. If this happens, either turn down the MASTER VOLUME control or connect components to the input jacks.
- **Muting of PRE OUT jacks and SPEAKER terminals**
The PRE OUT jacks and SPEAKER terminals include a muting circuit. Because of this, the output signals are greatly reduced for several seconds after the power switch is turned on or input function, surround mode or any other set-up is changed. If the volume is turned up during this time, the output will be very high after the muting circuit stops functioning. Always wait until the muting circuit turns off before adjusting the volume.
- **Whenever the power switch is in the OFF state, the apparatus is still connected on AC line voltage.**
Please be sure to unplug the cord when you leave home for, say, a vacation.

5-5 Connecting the AC power cord and AC OUTLET(S)

ASIA MODEL ONLY

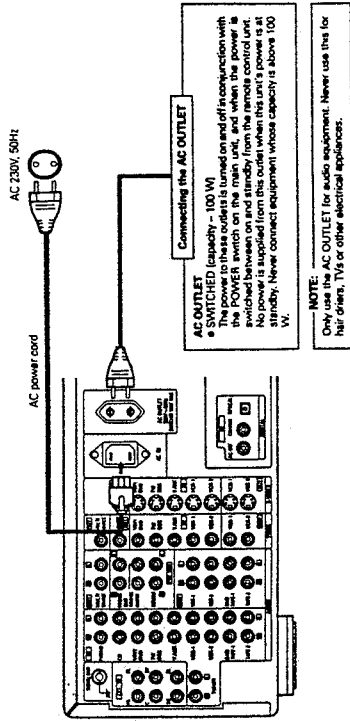


TAIWAN R.O.C. MODEL ONLY

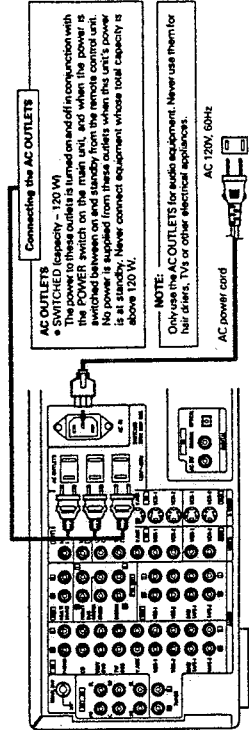


5-6 Speaker system connections

- When the system is used with the subwoofer, the subwoofer must be connected to the subwoofer output terminals (A, B) at the rear panel. If the subwoofer is not connected, the subwoofer will not operate.
- When the subwoofer is not used, the subwoofer output terminals (A, B) must be shorted with a shorting plug. If the subwoofer output terminals (A, B) are not shorted, the subwoofer will lead to damage.
- The protection circuit may operate or damage may occur when speakers with an impedance outside of the above range are used.

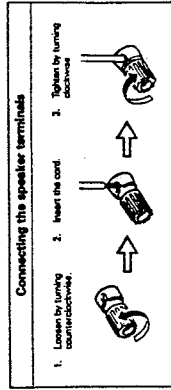

5-3 Connecting the S-video jacks

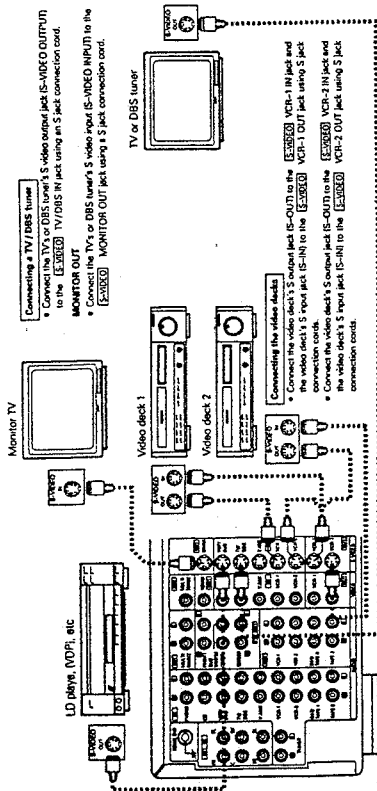

- A note on the S input jacks: The input selectors for the S inputs and pin jack inputs work in conjunction with each other.
- The input selectors for the S inputs and pin jack inputs (input and output) have independent circuit structures, so that video signals input to the S-jacks are only output from the pin jacks and video signals input from the pin jacks are only output from the S-jack outputs. When connecting this unit with equipment that is equipped with S-jacks, keep the above point in mind and make connections according to the equipment's instruction manuals.

5-4 Connecting the EXT. IN jack

- The EXT. IN (EXTERNAL INPUTS) jack is used for the input of multi-channel audio, such as MPEG multi-channel.
1. Select the analog input using the ANALOG/DIGITAL button on the main unit.
 2. Press the STEREO/EXT. IN button on the main unit to set the play mode to "EXT. IN".
- The playback mode switches as follows each time the button is pressed:
 STEREO → EXT. IN → STEREO

- After setting, the input signals connected to the FL (Front Left), FR (Front Right), C (Center), SW (Subwoofer), SL (Surround Left) and SR (Surround Right) input jacks are output directly to the front left and right, center, subwoofer and surround left and right speaker systems without passing through the surround circuit.
- Surround input terminals**
 • If your component has only one surround output terminal, connect it to either the SL (surround left) or SR (surround right) terminal on the AVC-3800. The signals will automatically be divided between the left and right surround channels before being output.
- NOTES:**
- This jack cannot be operated in play modes other than the "EXT. IN" mode. Also, no signals are output from channels not connected to input jacks.
 - The "EXT. IN" mode can be set for any function. To enjoy together with partners, set this mode after selecting a function to which video signals are input.

6 SYSTEM SETUP


After connections with other components have been made, make the various settings on the monitor using this unit's on screen display. These settings must be made in order to complete the AV system in your listening room. Make the six settings described below.

- ① Speaker Configuration
- ② Delay Time
- ③ Channel Level
- ④ Digital Inputs (only when an AV component is connected to the digital input jacks)
- ⑤ AC-3
- ⑥ On Screen Display

NOTES:


- The output from the S MONITOR OUT terminal has priority for the on screen display. If you want to always output the on screen display signals to the video output, do not connect a cable to the S MONITOR OUT terminal.
- The on screen display is not displayed for the MULTI SOURCE OUT terminal.
- This model's on screen function is designed for high resolution monitor displays. Small characters may be difficult to read on small displays or low resolution TVs.

Use the following buttons on the remote control unit to make the settings:

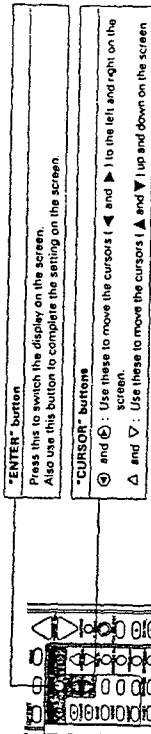

6-1 Before setting up the system


1. Turn on the power and press the ENTER button. The "Menu" screen (screen 1) appears on the monitor.

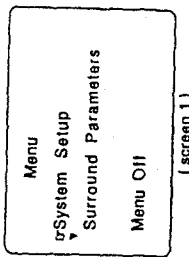

2. Use the CURSOR buttons to specify "System Setup".




3. Press the ENTER button to switch the screen.

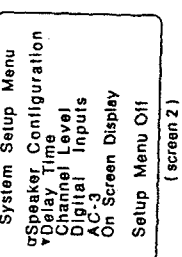

The "System Setup Menu" screen (screen 2) appears on the monitor.


Precautions when connecting speakers
If a speaker is placed near a TV or video monitor, the colors on the screen may be disturbed by the speaker's magnetism. If this should happen, move the speaker away to a position where it does not have this effect.

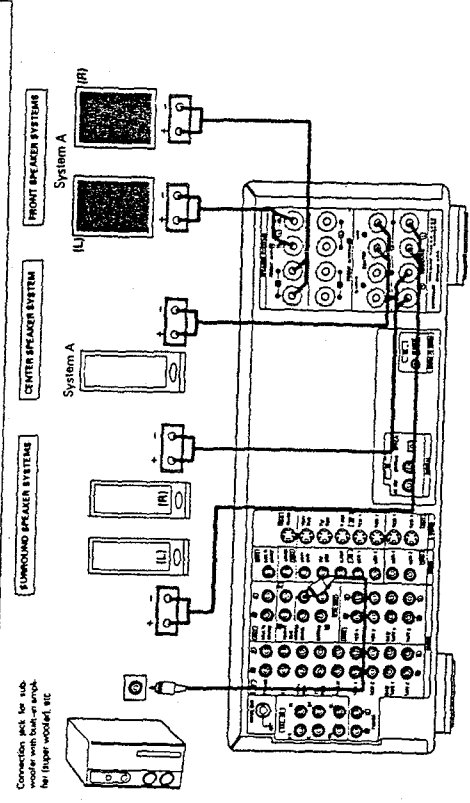

About bi-wiring
If you speakers have bi-wiring terminals, you can achieve higher quality sound by adding cords and using bi-wiring, as shown on the diagram below.

- By connecting speaker systems to both the speaker A and B terminals, you can play the same music source simultaneously in different rooms. (Use speakers with impedances of 16 Ω (ohms).)
- By adding an integrated amplifier, you can use the multi-source terminals to play the other music source simultaneously in different rooms. (See page 21, 22)

Bi-wiring procedure

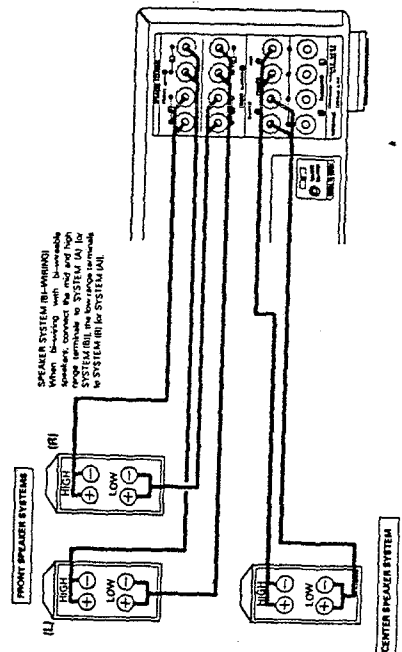

6-2 Setting the speaker configuration

1. Use the CURSOR buttons to specify "Speaker Configuration" from the "System Setup Menu" screen (screen 2).



2. Press the ENTER button.



The "Speaker Configuration" screen (screen 3) appears on the monitor.

3. Use the CURSOR buttons and select the different types of speakers connected and their size parameters.



To select the speakers:
 To select the parameters:
 The selected parameters are highlighted.

Parameters

- Large Select this when using speakers that can fully reproduce low sounds of below 80 Hz.
 - Small Select this when using speakers that cannot reproduce low sounds of below 80 Hz with sufficient volume.
 - None Select this when no speakers are installed.
 - Yes/No Select "Yes" when surround speakers and a subwoofer are installed, "No" when they are not installed.
4. After the above selections are completed, press the ENTER button again.
 The "System Setup Menu" screen reappears.

6-3 Setting the delay time

Input the listening position and the distance of the different speakers.

1. Use the CURSOR buttons to specify "Delay Time" from the "System Setup Menu" screen (screen 4).



2. Press the ENTER button.




The "Delay Time" screen (screen 5) appears on the monitor.


3. Use the CURSOR buttons to specify the unit of distance.



NOTE: The settings are reset to their initial values when switching between meters and feet.

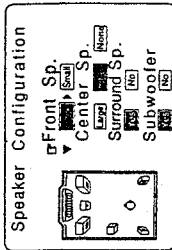

(screen 3)

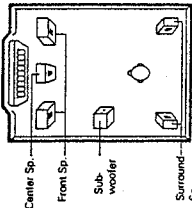

4. Use the CURSOR buttons to input the listening position and the distance of the different speakers. (screen 6-A)

To select the speakers:




To select the distance:





- * Select "Default" to return to the initial settings (refer to page 14).

5. After the above selections are completed, press the ENTER button again.

The "System Setup Menu" screen reappears.
 This procedure automatically sets the optimum surround delay time for the listening room.

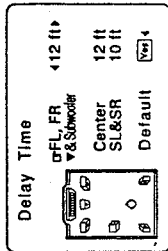

(screen 6-A)

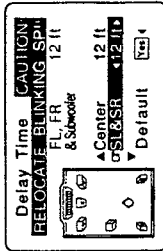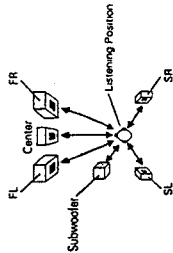

(screen 6-B)

- * If you set an invalid distance, a CAUTION notice, such as screen 6-B will appear. In this case, please relocate the blinking speaker(s) so that its distance is no larger than the value shown in highlighted line. Then press the ENTER button again.

- * Set in such a way that the distance to the center speaker is the same as or up to 5 feet (1.5 meters) shorter than the distance to the front left and front right speakers and the subwoofer.

- * Set in such a way that the distance to the surround left and right speakers is the same as or up to 15 feet (4.5 meters) shorter than the distance to the front left and front right speakers and the subwoofer.

6-4 Setting the channel level

Use test tones to adjust the volume of the different speakers.

1. Use the CURSOR buttons to specify "Channel Level" from the "System Setup Menu" screen. (screen 7)



2. Press the ENTER button.




The "Channel Level" screen (screen 8) appears on the monitor.


3. Use the CURSOR buttons to select "Test Tone Mode", then select "Auto" or "Manual".



4. Use the CURSOR buttons to select "Test Tone Start", then select "Yes".

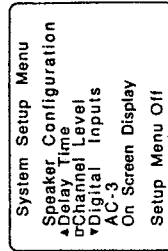


(screen 7)

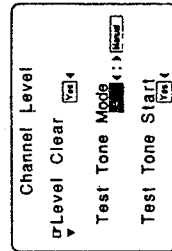

(screen 8)


6. a. If the "Auto" mode is selected:
Test tones are automatically emitted from the different speakers.

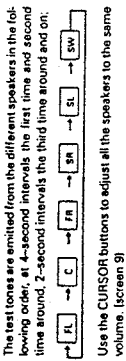


The test tones are emitted from the speaker whose indicator is highlighted.




b. If the "Manual" mode is selected:
Use the cursor buttons to select the speakers from which to emit the test tones and adjust the volume. (Screen 10)



To adjust the volume:
To select the speaker:

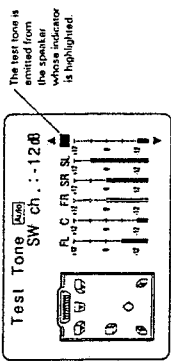

(screen 9)

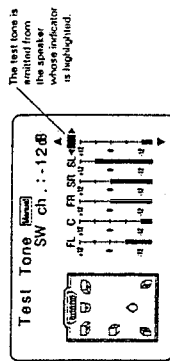

(screen 10)

The level of each channel should be adjusted to 75 dB (C-weighted, slow meter mode) on a sound level meter at the listening position. If a sound level meter is not available, adjust the channels by ear so the sound levels are the same. Because adjusting the subwoofer level first tends to be difficult, use a well-known music selection and adjust for natural balance.
NOTE: When adjusting the level of an active subwoofer system, you may also need to adjust the subwoofer's own volume control.

6. After the above settings are completed, press the ENTER button again.

The "System Setup Menu" screen (Screen 2) appears.

To cancel the settings, select "Level Clear" and "Yes" on the "Channel Level" screen, then make the settings again.

NOTES: ● The output channel levels for all the surround modes are set to the same conditions when the channel level setting on the system setup menu is conducted.
● When the level clear operation is performed, all channel levels for all modes are set to 0 dB.

6-5 Digital Inputs Setup

Input the types of components connected to the digital input terminals.

1. Use the CURSOR buttons to specify "Digital Inputs" from the "System Setup Menu" screen. (Screen 11)



2. Press the ENTER button.



The "Digital Inputs Setup" screen appears. (Screen 12)

3. Use the cursor buttons to input the types of components connected to the digital input terminals.

To select the input terminal:



To select the type of component:



* Select "OFF" if nothing is connected.

Select "Default" to return to the initial settings (refer to page 14).

4. After the above settings are completed, press the ENTER button again.

The "System Setup Menu" screen reappears.

NOTE:
PHONO, TUNER and TAPE-2 cannot be selected at "digital input terminal setting".

6-6 Dolby Digital AC-3

When playing Dolby Digital AC-3 sources, the input level is corrected automatically. Set the dialog normalization function.

1. Use the CURSOR buttons to specify "AC-3" from the "System Setup Menu" screen. (Screen 13)



2. Press the ENTER button.



The "AC-3" screen appears. (Screen 14)

3. Use the CURSOR buttons to select "ON" or "OFF".



4. After the above settings are completed, press the ENTER button again.

The "System Setup Menu" screen reappears.

When playing Dolby Digital AC-3 sources

NOTE: If dialog normalization is set to "OFF", it may not be possible to set the master volume to greater than -5 dB, depending on the number of speakers and the output channel level setting.

6-7 On Screen Display

"ON" or "OFF" can be selected for functions other than the ones on the menu screen.

1. Use the CURSOR buttons to specify "On Screen Display" from the "System Setup Menu" screen. (Screen 15)



2. Press the ENTER button.



The "On Screen Display" screen (Screen 16) appears on the monitor.


3. Use the CURSOR buttons to select "ON" or "OFF".




4. After the above settings are completed, press the ENTER button again.

The "System Setup Menu" screen reappears.


* This completes the system setup operations. Once the system is set up, there is no need to make the settings again unless other components or speakers are connected or the speaker layout is changed.

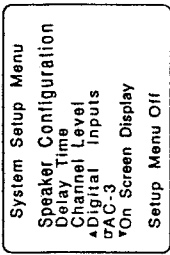


(screen 13)

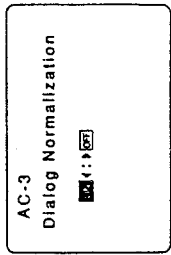

(screen 14)

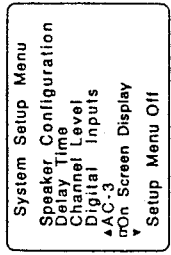


(screen 15)

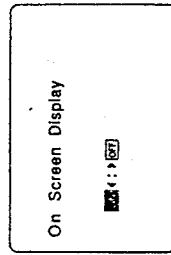

(screen 16)

6-8 Operation after completing system setup

1. Use the CURSOR buttons to specify "Setup Menu Off" from the "System Setup Menu" screen. (Screen 17)
2. Press the ENTER button twice to turn off the on screen display.

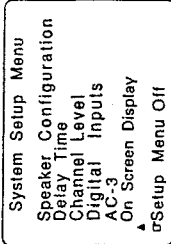

SYSTEM SETUP DEFAULT VALUE


Speaker Configuration	Front SP Small	Center SP Small	Surround SP Yes	Subwoofer Yes
Delay Time	FL & FR 12 ft. (3.6 m)	Center 12 ft. (3.6 m)	SL & SR 10 ft. (3.0 m)	Subwoofer 12 ft. (3.6 m)
Channel Level	FL 0 dB	C 0 dB	SL 0 dB	SR 0 dB
Digital Inputs	COAXIAL, CD			
AC-3	Dolby Normalization: ON			
On Screen Display	ON			

Playback with the above setting is possible upon shipment from the factory and after initializing (refer to page 28).

7 REMOTE CONTROL UNIT

Following the procedure outlined below, insert the batteries before using the remote control unit.

Range of operation of the remote control unit

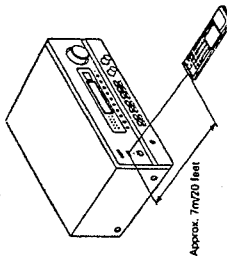


Point the remote control unit at the remote control sensor as shown on the diagram at the left.

NOTES:

- The remote control unit can be used from a straight distance of approximately 7 meters/20 feet, but this distance will shorten or operation will become difficult if there are obstacles between the remote control unit and the remote control sensor; if the remote control sensor is exposed to direct sunlight or other strong light, or if operated from an angle.
- Neon signs or other devices emitting pulse-type noise nearby may result in malfunction; so keep the set as far away from such devices as possible.

Inserting the batteries

1. Open the bottom cover of the remote control unit, and remove the battery cover.

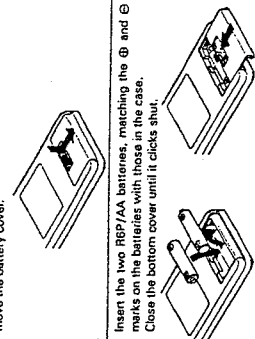

2. Insert the two R6P/AA batteries, matching the ⊕ and ⊖ marks on the batteries with those in the case. Close the bottom cover until it clicks shut.

7-1 System code buttons

DENON remote-controllable audio components can be controlled using this unit's remote control unit. Note that some components, however, cannot be operated with this remote control unit.

1. Set the slide switch to the position for the component to be operated (CD, DECK or DAT). The tuner can be operated in any position.
2. Set the slide switch to the position for the component to be operated (CD, DECK or DAT). The tuner can be operated in any position.
3. Use the buttons shown below to operate the audio component. For details, refer to the respective component's manual.
 - a. For CD players and DATs
 - Manual search (reverse and forward)
 - Stop
 - Play
 - Auto search
 - Disc selection
 - Disc selection (CD changer only)
 - b. For tape decks (DECK)
 - Reverse
 - Forward
 - Stop
 - Forward play
 - Pause
 - A/B
 - Reverse play
 - c. For tuner
 - TUNING : Tuning up/down
 - BAND : AM/FM reception band selection
 - MODE : AUTO/MONO selection
 - MEMORY : Preset memory

*These buttons do not function for the tuner. Refer to the preset memory of the learning function!

7-2 Preset memory

DENON and other makes of components can be operated by setting the preset memory for your make of video component. Operation is not possible for some models, however. In this case, use the learning function (see page 17, 18) to store the remote control signals. For instructions on clearing the presettings stored in the preset memory, see page 18.



1. Set the slide switch to "VIDEO".
2. Set the slide switch to the component to be registered (VCR or TV).
3. Holding in the POWER button, press the button for the corresponding manufacturer in block A. (Refer to table 7-2.)
4. Next, while holding in the POWER button, press the button for the code in block B. (Refer to Table 7-2.) The operation is completed when the LEARNED/TX LED lights.
5. To continue registering other components, repeat steps 2 to 4.



This remote control unit can be used to operate components of other manufacturers without using the learning function by registering the manufacturer of the component as shown on Table 7-2 (refer to page 18).

The LEARNED/TX LED flashes.

7-3 Operation after components are registered

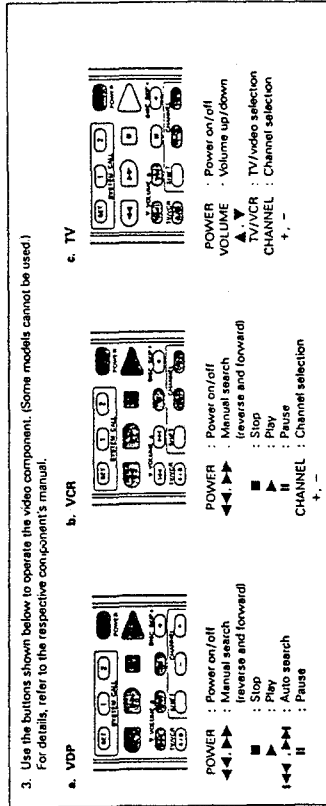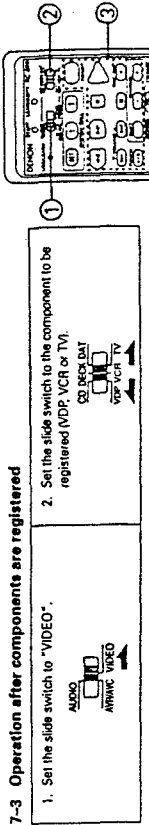

7-4 Remote control unit learning function

If your AV components are not DENON products or if operation is not possible with the preset memory settings, the components' remote control signals can be "learned" to enable remote control operation.

The buttons that can be "learned" are the CD, DAT and DECK system buttons (see page 15) and the VDP, VCR and TV system buttons (see page 17). (For the TV only, the A block buttons can also be "learned".)

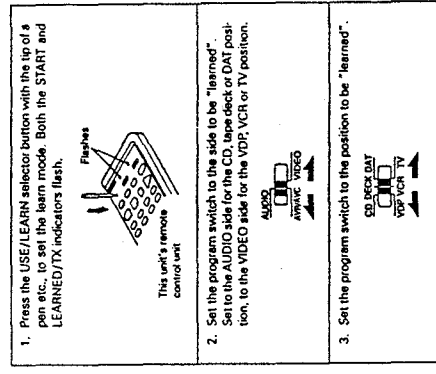


Table 7-2: Combinations of Personal System Codes for Different Manufacturers

"VDP"		"VCR"		"TV"	
A	B	A	B	A	B
① DENON A	① DENON B	① DENON A	① DENON B	① DENON A	① DENON B
② PHONON	② PHONON	② HITACHI A	② HITACHI B	② HITACHI A	② HITACHI B
③ MITSUBISHI	③ MITSUBISHI	③ MITSUBISHI A	③ MITSUBISHI B	③ MITSUBISHI A	③ MITSUBISHI B
④ PANASONIC	④ PANASONIC	④ PANASONIC A	④ PANASONIC B	④ PANASONIC A	④ PANASONIC B
⑤ SONY A	⑤ SONY B	⑤ JVC (VICTOR) A	⑤ JVC (VICTOR) B	⑤ SONY A	⑤ SONY B
⑥ PIONEER	⑥ PIONEER	⑥ PIONEER A	⑥ PIONEER B	⑥ PIONEER A	⑥ PIONEER B
⑦ SANYO A	⑦ SANYO B	⑦ TOSHIBA A	⑦ TOSHIBA B	⑦ TOSHIBA A	⑦ TOSHIBA B
⑧ SHARP	⑧ SHARP	⑧ SANYO A	⑧ SANYO B	⑧ SANYO A	⑧ SANYO B
⑨ PHILIPS	⑨ PHILIPS	⑨ SHARP A	⑨ SHARP B	⑨ SHARP A	⑨ SHARP B
⑩ RCA	⑩ RCA	⑩ NEC A	⑩ NEC B	⑩ NEC A	⑩ NEC B
⑪ MAGNAVOX	⑪ MAGNAVOX	⑪ PHILIPS A	⑪ PHILIPS B	⑪ PHILIPS A	⑪ PHILIPS B
⑫ DENON C	⑫ DENON C	⑫ RCA A	⑫ RCA B	⑫ RCA A	⑫ RCA B
⑬ DENON D	⑬ DENON D	⑬ GENERAL ELECTRIC A	⑬ GENERAL ELECTRIC B	⑬ GENERAL ELECTRIC A	⑬ GENERAL ELECTRIC B
⑭ DENON E	⑭ DENON E	⑭ MAGNAVOX A	⑭ MAGNAVOX B	⑭ MAGNAVOX A	⑭ MAGNAVOX B
⑮ DENON F	⑮ DENON F	⑮ MAGNAVOX C	⑮ MAGNAVOX D	⑮ MAGNAVOX C	⑮ MAGNAVOX D

NOTES:

- The signals for the pressed buttons are emitted while setting the preset memory. To avoid accidental operation, cover the preset memory.
- Some models and pins of manufacturers of components of the manufacturers listed on Table 7-2 cannot be used.

"VDP"		"VCR"		"TV"	
A	B	A	B	A	B
① DENON A	① DENON B	① DENON A	① DENON B	① DENON A	① DENON B
② PHONON	② PHONON	② HITACHI A	② HITACHI B	② HITACHI A	② HITACHI B
③ MITSUBISHI	③ MITSUBISHI	③ MITSUBISHI A	③ MITSUBISHI B	③ MITSUBISHI A	③ MITSUBISHI B
④ PANASONIC	④ PANASONIC	④ JVC (VICTOR) A	④ JVC (VICTOR) B	④ JVC (VICTOR) A	④ JVC (VICTOR) B
⑤ SONY A	⑤ SONY B	⑤ SONY A	⑤ SONY B	⑤ SONY A	⑤ SONY B
⑥ PIONEER	⑥ PIONEER	⑥ PIONEER A	⑥ PIONEER B	⑥ PIONEER A	⑥ PIONEER B
⑦ SANYO A	⑦ SANYO B	⑦ TOSHIBA A	⑦ TOSHIBA B	⑦ TOSHIBA A	⑦ TOSHIBA B
⑧ SHARP	⑧ SHARP	⑧ SANYO A	⑧ SANYO B	⑧ SANYO A	⑧ SANYO B
⑨ PHILIPS	⑨ PHILIPS	⑨ SHARP A	⑨ SHARP B	⑨ SHARP A	⑨ SHARP B
⑩ RCA	⑩ RCA	⑩ NEC A	⑩ NEC B	⑩ NEC A	⑩ NEC B
⑪ MAGNAVOX	⑪ MAGNAVOX	⑪ PHILIPS A	⑪ PHILIPS B	⑪ PHILIPS A	⑪ PHILIPS B
⑫ DENON C	⑫ DENON C	⑫ RCA A	⑫ RCA B	⑫ RCA A	⑫ RCA B
⑬ DENON D	⑬ DENON D	⑬ GENERAL ELECTRIC A	⑬ GENERAL ELECTRIC B	⑬ GENERAL ELECTRIC A	⑬ GENERAL ELECTRIC B
⑭ DENON E	⑭ DENON E	⑭ MAGNAVOX A	⑭ MAGNAVOX B	⑭ MAGNAVOX A	⑭ MAGNAVOX B
⑮ DENON F	⑮ DENON F	⑮ MAGNAVOX C	⑮ MAGNAVOX D	⑮ MAGNAVOX C	⑮ MAGNAVOX D

Continued on page 18.

5. Check that the START LED is lit, then press the button to be "learned" on the other remote control unit.

6. Once the START LED turns off and the LEARNED/TX LED lights, release the button on the other remote control unit.

The two LEDs start flashing again.

NOTES:

- Up to 26 codes can be "learned", but this number may be lower if the codes are long.
- If a non-learnable button is pressed or two or more buttons are pressed at once, the two LEDs will once again light when the button(s) is released.
- If the codes could not be stored, the LEARNED/TX LED does not light after the START LED turns off. For limited number of models, codes cannot be stored in RC-820.
- If the two LEDs start flashing rapidly after the START LED lights, this means that the memory is already full, and the code you have just attempted to store was not stored.
- To "learn" that code, first perform the resetting operation.

7-5 Clearing "learned" remote control signals and the preset memory settings

- Press the USE/LEARN selector button with the tip of a pen, etc., to set the learn mode.
-
- To clear "learned" remote control signals, set the slide switch to the position at which the signals were "learned". To clear the preset memory settings, set the slide switch to "VIDEO".
-
- Set the slide switch to the position at which the signals were "learned" or at which the preset memory settings were set.

- To "learn" other buttons, repeat steps 2 to 6.
 - Once the learning operation is completed, press the USE/LEARN selector button again. The two LEDs stop flashing and the learning mode is cancelled.
-
- Check that the stored codes work properly.

8 OPERATIONS

8-1 Preparations for playback

- Check that all connections are proper.
 - Set to the center position.
-
- Set the remote control unit's slide switch to the AUDIO position. (only when operating with the remote control unit)
-
- Turn on the power. Press the POWER switch (button).
-

ON/STANDBY
The power turns on and "ON/STANDBY" indicator is lit. Several seconds required from the time the power switch is set to the "ON" position until sound is output. This is due to the built-in timing circuit that prevents noise when the power switch is turned on and off.
Set the POWER switch to this position to turn the power on and off from the included remote control unit (RC-820).


8-2 Playing the analog program source

- Press the button for the program source to be played.
EX: CD
-
- Select the ANALOG input.
-
- Check that the "DIGITAL" indicator is off. If it is lit, press the button to switch the mode.
-
- Select the STEREO or EXT. IN mode.
-


The play mode switches in the following order each time the STE. REQ/EXT. IN button on the main unit is pressed:

STEREO → EXT. IN

*** EXT. IN mode**
This mode is for playing the multi-channel audio signals of an MPEG multi-channel decoder, etc., connected to the main unit's EXT. IN jacks. (refer to page 8)
4. For operating instructions, refer to the various components' manuals.

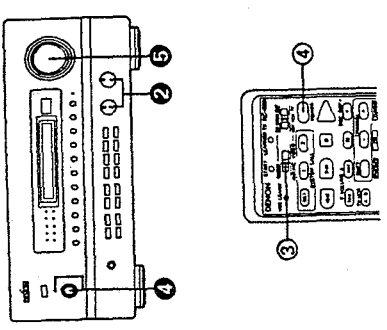

OFF
The power turns off and "ON/STANDBY" indicator is off. In this position, the power cannot be turned on and off from the remote control unit.

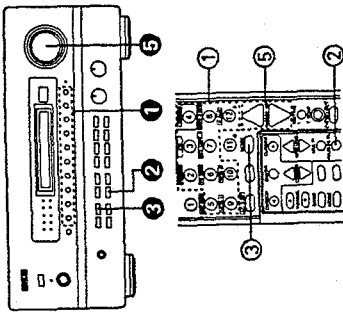


5. Adjust the MASTER VOLUME control.



8-3 Playing the digital program source

1. Press the button for the program source to be played that is connected to the digital input jacks.

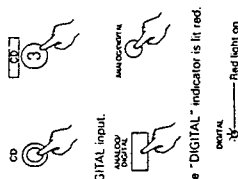

2. Select the DIGITAL input.


3. Check that the "DIGITAL" indicator is lit red.

When digital signals are input properly, the DIGITAL indicator switches from red to green.
 * If the indicator is not lit green, check that the system setup's input setting (refer to page 12) and the connections are proper, that the component's power is turned on, etc.

4. Start playback on the selected component.
 For operating instructions, refer to the various components' manuals.


8-4 Adjusting the TONE control

1. Adjust the BASS and TREBLE.



Turn the control clockwise to increase the bass or treble, counter-clockwise to decrease it.


2. Select the DIRECT mode if there is no need to adjust the sound.



8-5 Simulcast playback

Use this switch to monitor a video source other than the audio source.

1. Press the VIDEO-SELECT button repeatedly until the desired source appears on the display.



- * Cancelling simulcast playback.
- * Select "SOURCE" using the video select button.
- * Switch the program source to the component connected to the video or AC-3RF input.

8-7 Listen with headphones

Connect the headphones to the PHONES jack. The pre-out output (including the speaker output) is automatically turned off when headphones are connected.

NOTE:

To prevent hearing loss, do not raise the volume level excessively when using headphones.

8-8 On screen display


Each time an operation is performed, a description of that operation appears on the display connected to the unit's VIDEO MONITOR OUT terminal. Also, the unit's operating status is displayed during playback by pressing the remote control unit's ON SCREEN button.



Such information as the position of the input selector and the surround parameter settings is output in sequence.

8-9 Front panel display

Descriptions of the unit's operations are also displayed on the front panel display. In addition, the display can be switched to check the unit's operating status while playing a source by pressing the PANEL button.




8-10 Using the dimmer function.

Use this to change the brightness of the display. The display brightness changes in four steps (bright, medium, dim and off) by pressing the remote control unit's DIMMER button repeatedly.




NOTE: If a CD-ROM is played, the "DIGITAL" indicator is lit green but no sound is heard.

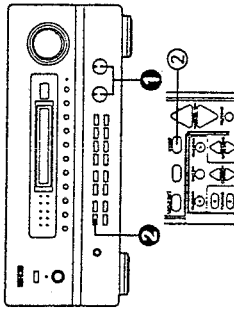

8-6 Using the muting function

Use this to turn off the audio output temporarily.

1. Press the MUTE button.
- * Cancelling MUTE mode.
 - * Press the MUTE button again.





8-11 Multi-source REC OUT recording / playback

While listening to or watching the currently playing program source, you can record another program source (REC OUT mode), or by connecting the input jacks of an amplifier, etc., located away from the AVC-3800 (for example in another room) to the MULTI SOURCE output jacks, you can output the program source to the other location (room) (MULTI mode).

■ Recording a source other than the one currently playing (REC OUT mode)

1. Press the REC/MULTI MODE button until "REC OUT SOURCE" appears on the display.
2. Select the source to be output to the recording output terminal. Press the REC/MULTI SOURCE button repeatedly until the desired source appears on the display.
3. Set to the audio or video recording mode. For operating instructions, refer to the manuals of the components to be used for audio or video recording.
- * REC OUT select is not possible for TAPE-2 monitor REC OUT.
 - * The signals of the source expect the digital input selected with the REC OUT mode are also output from the MULTI SOURCE AUDIO/VIDEO OUT terminals.
 - * Digital input signals cannot be recorded. To record, connect to the analog input terminals.
 - * To cancel the REC OUT mode.
 - * Press the REC/MULTI MODE button or the REC/MULTI SOURCE button repeatedly until "SOURCE" appears on the display.

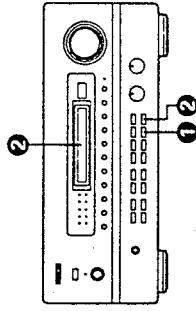

9 USING THE SURROUND FUNCTION

9-1 Dolby Surround

This unit is equipped with digital signal processing sections for decoding and reproducing movie soundtracks the same way as in movie theaters.

1. DOLBY SURROUND PRO LOGIC

When using conventional video tapes, laser discs, TV programs or CDs with the **PRO LOGIC** mark, Dolby Pro Logic provides extremely natural front and rear sound, and positioning, immersing you in the on-screen action. Pro Logic uses a directional emphasis circuit to decode four output channels (front left and right, center and surround) from the two audio channels provided on the software.


2. DOLBY DIGITAL AC-3

When you connect an LD player with an AC-3 RF output and play laser discs with the **AC-3** mark, you can experience improved sound spatiality, positioning, and impact compared with Pro Logic. This is because Dolby Digital AC-3 delivers up to 5 totally discrete, full frequency audio channels (front left and right, center, and surround left and right), plus a bass-only effects channel. Since the signal is digital from the input of the program source unit to the output of this unit, a higher quality and clarity of surround sound results.

Dolby Digital AC-3 (Auto Coding 3) is a system developed by Dolby Laboratories that transmits 5.1 channels of digital signals. The surround system developed for movie theaters using this system is called "Dolby SR-D (Surround Digital)". Whereas the conventional Dolby Pro Logic Surround is an analog matrix system, Dolby SR-D is a digital discrete system in which the different channels are completely independent. This makes it possible to achieve a realistic sound field with a "three-dimensional" feel, giving the sound a sense of distance, movement and relative position, and creating a sound field and powerful sense of presence when playing movie software in AV mode.

There are "5.1 ch" playback channels: three from channels (front left, center and front right), two surround channels (surround left and surround right), plus "0.1 channel" called LFE (Low Frequency Effect) for low bass effect sounds of 120 Hz or less. The signals are recorded on the software in fully discrete fashion, eliminating crosstalk between channels and making it possible to control the sound field in the listening/viewing space with greater precision.

In addition, the frequency range of the five channels extends up to 20 kHz, the same as CDs, resulting in clear sound with greater richness of expression. Also, Dolby Digital AC-3 will be used on DVDs, the next generation AV medium.

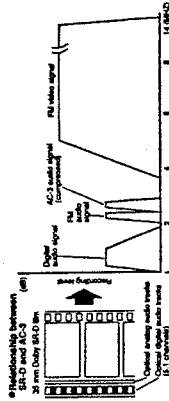

● Dolby Digital AC-3 and Pro Logic


Home surround method	Dolby Digital AC-3	Dolby Pro Logic
No. of channels	5.1 ch	2 ch
No. of discrete channels	5.1 ch	4 ch
Playback channels	L, R, C, S, L and R W	L, R, C, S, SW (surround)
Audio processing	Digital discrete processing (AC-3)	Analog matrix processing (Dolby Pro Logic)
Upper reproduction limit of surround channel	20 kHz	16 kHz

Manufactured under license from Dolby Laboratories Licensing Corporation. "Dolby," "AC-3," "Pro Logic" and the double-D symbol are trademarks of Dolby Laboratories Licensing Corporation. Copyright 1992 Dolby Laboratories, Inc. All rights reserved.

9-2 Before playing with the surround function

Before playing with the surround function, be sure to use the test tones to adjust the playback level from the different speakers. This adjustment can be performed with the system setup (see page 11, 12) or from the remote control unit, as described below. Adjusting levels with the remote control unit using the test tones is only possible in the "Auto" mode and only effective in the Dolby Surround mode. The adjusted levels are automatically stored in the memory.

1. Press the T.TONE button.



2. Test tones are output from the different speakers. Use the channel volume adjust buttons to adjust so that the volume of the test tones is the same for all the speakers.




3. After completing the adjustment, press the T.TONE button again.




■ Playing a source other than the one currently playing in a different room (MULTI mode)

1. Press the REC/MULTI MODE button repeatedly until "M-SOURCE" appears on the display.

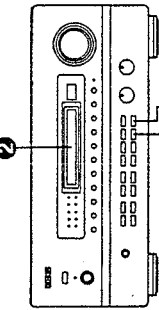

2. Select the source to be output to the MULTI SOURCE output terminal. Press the REC/MULTI SOURCE button repeatedly until the desired source appears on the display. The indicator of the selected program source lights on the display at this time. The "MULTI" indicator lights on the display at this time.

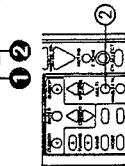

*** When the MULTI button on the remote control unit is pressed, the source to be output from the MULTI SOURCE terminals can be selected. (This cannot be selected when the main unit is in the REC OUT mode.)**

*** The digital signals are not output from the MULTI SOURCE AUDIO/VIDEO OUT terminals.**

*** To cancel the MULTI mode Press the REC/MULTI MODE button or the MULTI button on the remote control unit repeatedly until "SOURCE" appears on the display.**

NOTE: The signals of the source selected in the MULTI mode are also output from the DAT/TAPE-1 and VCR recording output terminals.

Multi-source and multi-zone playback
By connecting another pre-main amplifier, etc., to the MULTI SOURCE OUT jacks, you can listen to a source other than the one in the main room in other room. To connect the video signal, use a 75 Ω/ohms cable designed specifically for video signals. Using an improper cable can result in a drop in sound quality.

8-12 System call (remote control unit)

This function allows you to preset frequently used operation patterns in the remote control unit, then automatically send a series of up to ten remote control codes with a single button.


Presenting

1. Press the SET button.




Recalling

4. Press the SYSTEM CALL button ("1" or "2") at which the desired codes have been stored. The series of codes is now sent.



2. Press the buttons for the codes to be sent, changing the position of the slide switch as necessary. (Up to ten buttons can be set.) Buttons which have been "learned" and buttons which have been preset can also be selected.

3. Press the SYSTEM CALL button ("1" or "2") at which you want to store the codes. The setting is now stored.

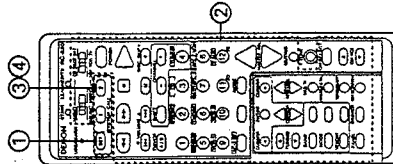


After adjusting using the test tones, adjust the channel levels either according to the playback sources or to suit your tastes, as described below.

1. Press the channel select button to select the speaker to be adjusted.



2. Adjust the level of the selected speaker.



9-3 Using the Dolby Surround Pro Logic mode

1. Set the DOLBY SURROUND mode.



* Conventional program sources will automatically be decoded with Dolby Pro Logic, while Dolby Digital AC-3 program sources will be decoded with Dolby Digital AC-3.

2. If necessary, adjust the input level when analog sources are used to obtain maximum dynamic range without overload.



Set so that the "OVER LOAD" indicator does not light at places where the volume is high.


* For digital input sources, there is no need to adjust the input level. (These buttons will not operate and the indicator will not light.)

3. Play a program source with the mark. For operating instructions, refer to the various components' manuals.

9-4 Using the Dolby Digital AC-3 mode

1. Switch the audio input to AC-3RF input (H or digital input I). The VDP picture is linked to the AC-3RF signals.

2. Select the AC-3 RF input.

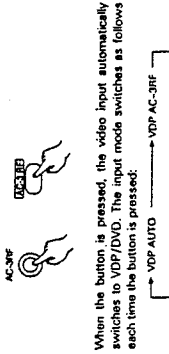

When the button is pressed, the video input automatically switches to VDP/DVD. The input mode switches as follows each time the button is pressed:



This input mode makes it possible to play the Dolby Digital AC-3 audio, digital audio or analog audio signals recorded on the source by switching between the priority and fixed modes for the AC-3RF, digital (optical/coaxial) or analog input jacks with the VDP/DVD function.

- VDP AUTO When AC-3RF signals and digital and analog signals are input from the LD, the signals are automatically selected with the following priority: AC-3RF → digital or analog.
- VDP AC-3 RF AC-3RF fixed input


NOTES:

- In the "VDP AUTO" mode, when an LD with the Dolby Digital AC-3 audio is detected, the decoder switches automatically and the Dolby Digital audio is played. Also, in any mode other than normal LD player playback, no Dolby Digital AC-3 signals are detected, so the mode automatically switches to PCM or analog audio.
- In the "VDP AUTO" mode, when the mode changes from pause, chapter search, etc., to playback during playback of the Dolby Digital AC-3 audio on an LD, the PCM mode sound may be output momentarily before the mode is switched to the Dolby Digital AC-3 audio mode. If this happens, the sound will not be interrupted if you switch to the "VDP AC-3RF" (AC-3RF fixed input) mode.
- The AC-3RF input mode setting is reset to "VDP AUTO" when the power is turned off using the power switch on the remote control unit or on the main unit.


- b. Digital input

Select the digital input. Refer to page 20, 8-3, 1, 2 and 3.

2. Set the DOLBY SURROUND mode.



3. Play a program source with the mark or a program source with Dolby Digital AC-3 formats. The indicators below showing the signals included in the software light. (The number of channels differs according to the software.)








(This only lights when the surround signals are monaural.)

Also, the following indicator lights if the software contains Low Frequency Effect sounds:



- 4-1. Adjust the sound for the program source using the on screen display.

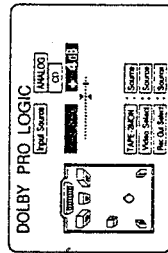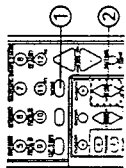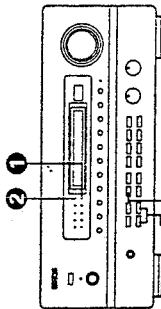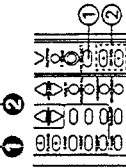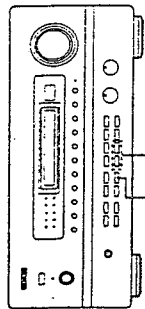

(screen 18)

SPECIFICATIONS

- **Audio section**

- (Power amplifier)

- Rated output:**

- (All properties shown are only for the power amplifier stage.)

- Stereo (2ch driven)

- 110 W × 2 ch (8 Ω / ohms, 20 Hz ~ 20 kHz with 0.05% T.H.D.)
 - 150 W × 2 ch (8 Ω / ohms, EIAJ)

- Surround

- 105 W × 5 ch (8 Ω / ohms, EIAJ)

- Dynamic power:**

- 140 W × 2 ch (8 Ω / ohms)

- 235 W × 2 ch (4 Ω / ohms)

- 280 W × 2 ch (2 Ω / ohms)

- Output terminals:**

- Front / Center: A or B or Bi-wiring 8 to 16 Ω / ohms

- A + B

- 16 Ω / ohms

- Surround: 8 to 16 Ω / ohms

- (Analog)

- Input sensitivity / input impedance:**

- 200 mV / 47 kΩ / kohms

- Frequency response:**

- 10 Hz ~ 100 kHz: +0, -3 dB (DIRECT mode)

- S / N:**

- 105 dB (DIRECT mode)

- Distortion:**

- 0.005% (20 Hz ~ 20 kHz) (DIRECT mode)

- Rated output / maximum output:**

- 1.2 V / 8 V

- Maximum headphones output:**

- 284 mW (8 Ω / ohms)

- Phono equalizer (PHONO input — REC OUT)**

- Input Sensitivity:**

- 2.5 mV

- RIAA deviation:**

- ± 1 dB (20 Hz to 20 kHz)

- Signal-to-noise ratio:**

- 74 dB (A weighting, with 5 mV input)

- Rated output / Maximum output:**

- 150 mV / 8 V

- Distortion factor:**

- 0.03% (1 kHz, 3 V)

- (Digital)

- D / A output:**

- Rated output: 2 V (at 0 dB playback)

- Total harmonic distortion - 0.005% (1 kHz, at 0 dB)

- S/N ratio: 102 dB

- Dynamic range: 96 dB

- Format - Digital audio interface

- Digital input:**

- **Video section**

- (Standard video jacks)

- Input / output level and impedance:**

- 1 Vp-p, 75 Ω / ohms

- Frequency response:**

- 5 Hz ~ 10 MHz +0, -3 dB

- (S-video jacks)

- Input / output level and impedance:**

- Y (brightness) signal: 1 Vp-p, 75 Ω / ohms

- C (color) signal: 0.286 Vp-p, 75 Ω / ohms

- Frequency response:**

- 5 Hz ~ 10 MHz +0, -3 dB

- **General**

- Power supply:**

- AC 230 V, 50 Hz (for Asia model)

- AC 120 V, 60 Hz (for Taiwan R.O.C. model)

- Power consumption:**

- 450 W (for Asia model)

- 390 W (for Taiwan R.O.C. model)

- Maximum external dimensions:**

- 434 (W) × 181 (H) × 486 (D) mm (17-3/32" × 7-1/8" × 19-1/8")

- Weight:**

- 21.5 kg (47 lbs 6 oz)

- **Remote control unit (RC-820)**

- Batteries:**

- R6P/AA Type (two batteries)

- External dimensions:**

- 70 (W) × 215 (H) × 19 (D) mm (2-3/4" × 8-15/32" × 3/4")




- Weight:**

- 180 g (Approx. 6 oz) (including batteries)

* For purposes of improvement, specifications and design are subject to change without notice.

WIRE ARRANGEMENT

In case of wires require unclasping or loosening to move the location to perform adjustment or part replacement, be sure to rearrange them neatly to restore properly in the same location as they were originally placed, or causing to produce a noise may occasionally occur.

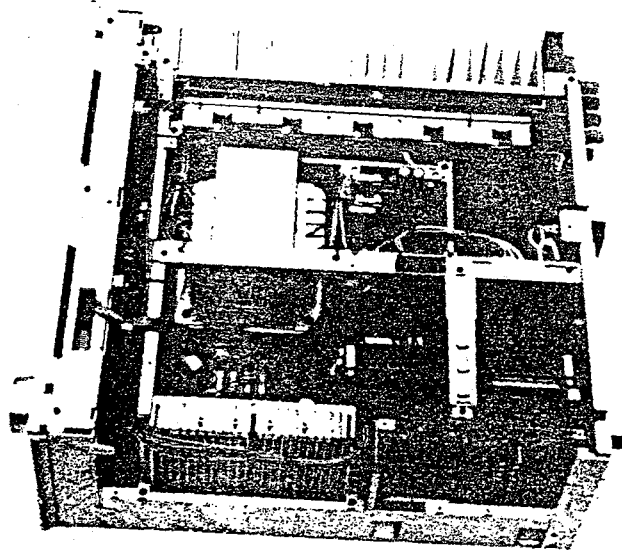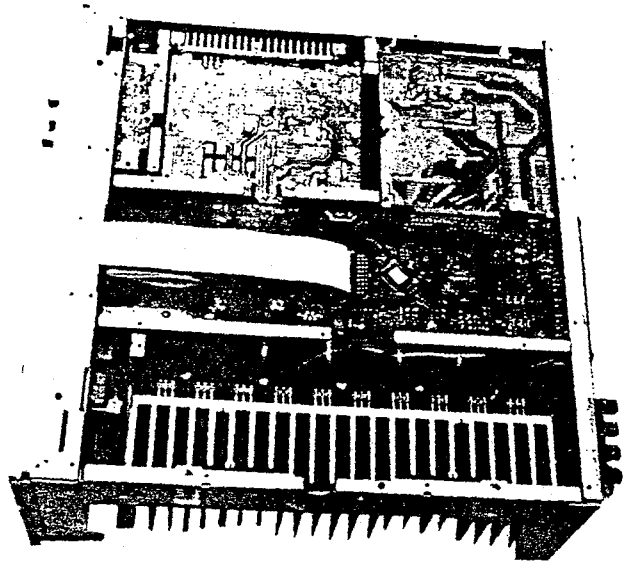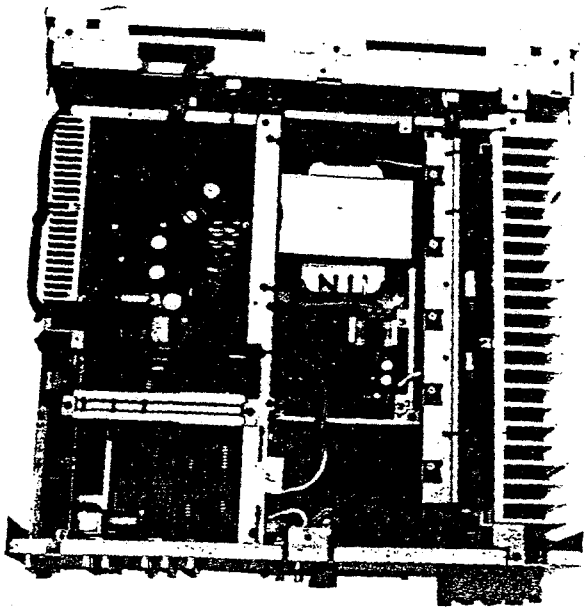


DISASSEMBLY

(To reassemble reverse disassembly)

Note: When detached the Bottom Cover, do not remove the Back Panel except the unit is in the normal putting state.

1. Top Cover


Remove 10 screws (A) fixing the Top Cover and 4 screws (B) mounting the Rear Panel, then detach the Top Cover as shown in the arrow direction.

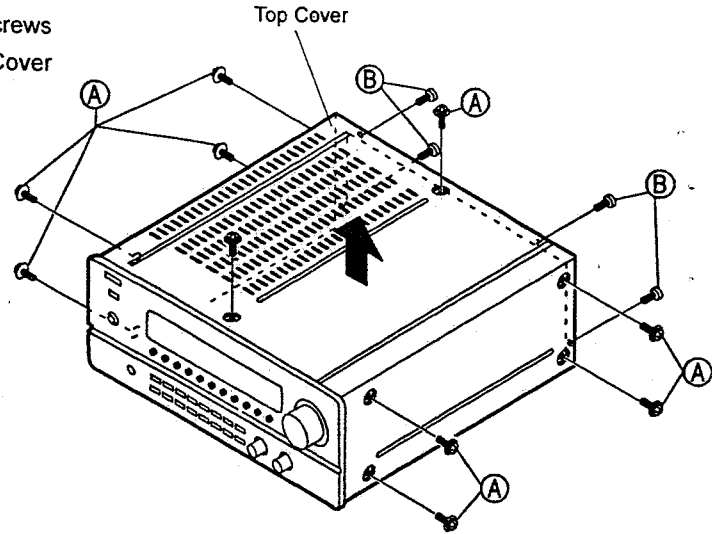

2. Front Panel

Remove 3 upper screws (C) and 2 below screws (D), pull out 2 Tone Knobs.

After removing the Front Panel as shown in the arrow direction, and disconnect FFC cable which connected to the FLD P.W.Board, 5P connector and power switch connector, then detach the Front panel.

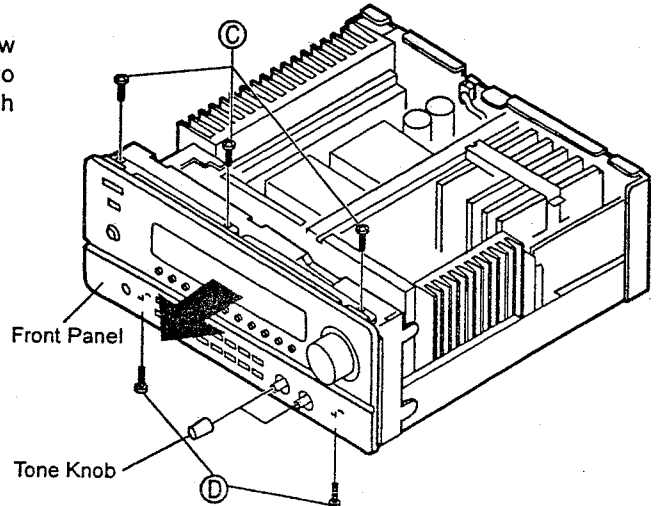


3. Each Front Panel P.W.Board

Pull out the Master VR Knob and remove the Nut. Remove 6 screws (E) mounting the Front Panel and detach the Remocon Unit (1U-2949-3) and the Power SW Unit (1U-2949-11).

Remove 7 screws (F) mounting the Front Panel and detach the switch Unit (1U-2951-5).

Remove a screw (G) and 9 screw (H) mounting the Front Panel, and detach the Master VR Unit (1U-2951-4) and the Display Unit (1U-1951-3) together.

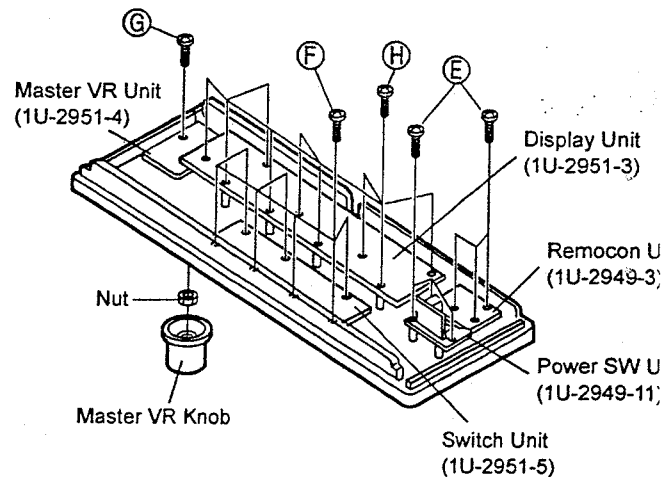


4. MCON Unit (1U-2959-2)

Remove 22 screws ① fixing the Bottom Cover, and detach the Bottom Cover.


Remove 7 screws ② mounting the Back Panel, and detach the Back Plate.

Notes:

- When servicing the unit, do not detach the Back Panel except the unit is in the normal putting state.
- Be careful that when removing 7 screws ② mounting the Back plate and digital input (Coaxial & AC3-RF), the digital coaxial & AC3-RF will not actuate normally.
- When the unit is putted horizontally in the detached bottom cover state, be sure to do not bring pressure forcefully to the P.W.B. Holder of the wiring Unit (1U-2958-2) P.W.B..

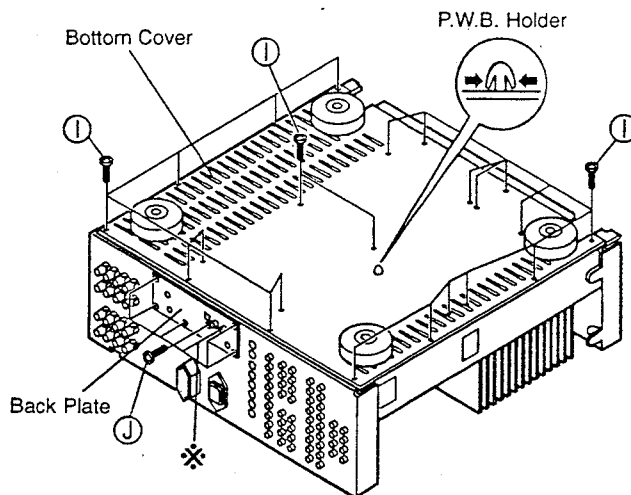


Remove 6 screws ③ fixing the MCON Unit, detach the MCON Unit (1U-2959-2) as shown in the arrow direction, then disconnect a connector and 2 FFC cables.

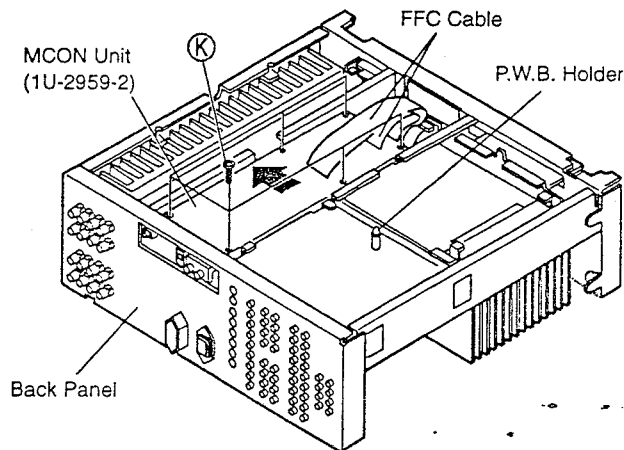


5. Each P.W.Board

5-1 Power Radiator

Remove 2 screws ④ fixing the Power Radiator.

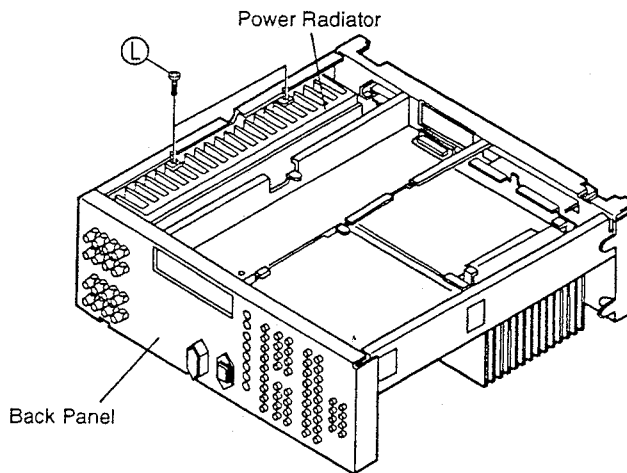


Remove 9 screws (M) fixing the Support Bracket, Support Bracket and shield chassis, and detach them.
 Remove 2 screws (N), then detach the Power Radiator.

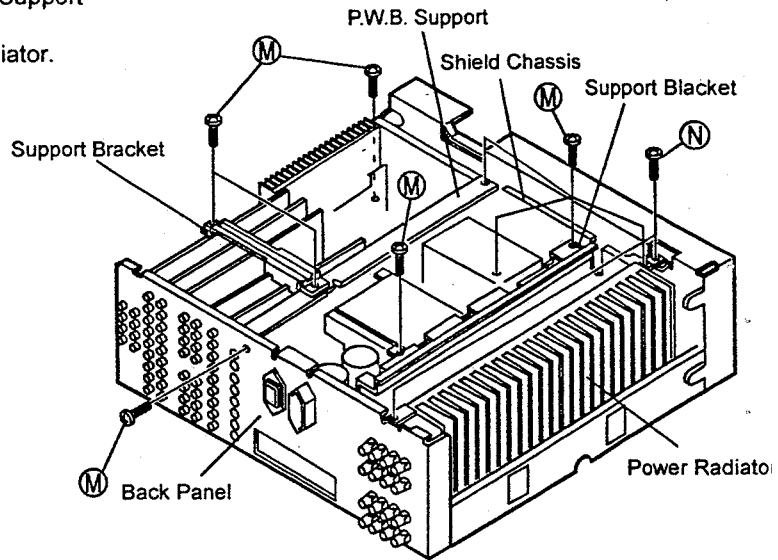

5-2 Each P.W.Board mounting the Back Panel


Remove 4 screws (O) fixing the Back Panel and 18 Screws (P) Fixing the Tuner Unit (1U-2948-2), Audio in Unit (1U-2948-1), Pre Amp Unit (1U-2949-1), C. Video Unit (1U-1951-2), S. Video Unit (1U-2951-1) and Power Unit (1U-2952-4), then detach the each P.W.Board as shown in the arrow direction.

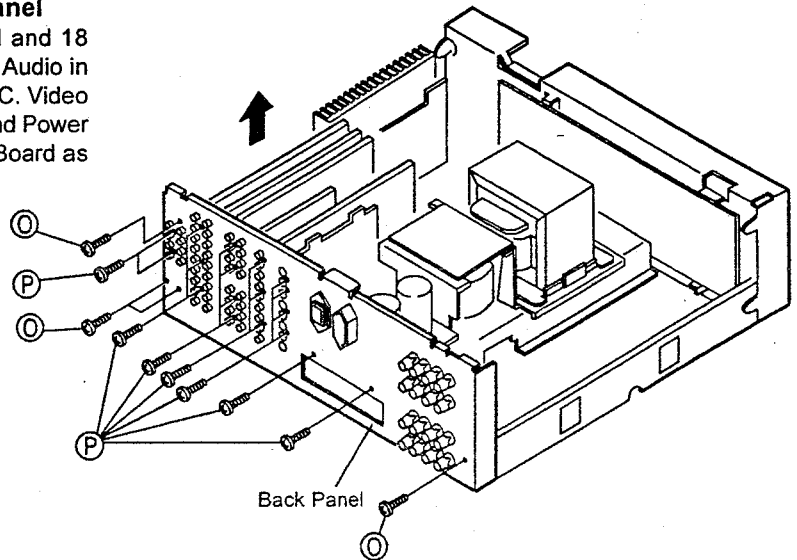

5-3 EXT. IN Unit (1U-2948-3) and Wiring Unit (1U-2958-2)


Remove a screw (Q) fixing the shield Bracket and remove 2 screws (R) fixing the EXT. IN Unit (1U-2948-3), then detach the EXT. IN Unit.

Remove 4 screws (S) fixing the wiring Unit (1U-2958-2), then detach the Wiring Unit.

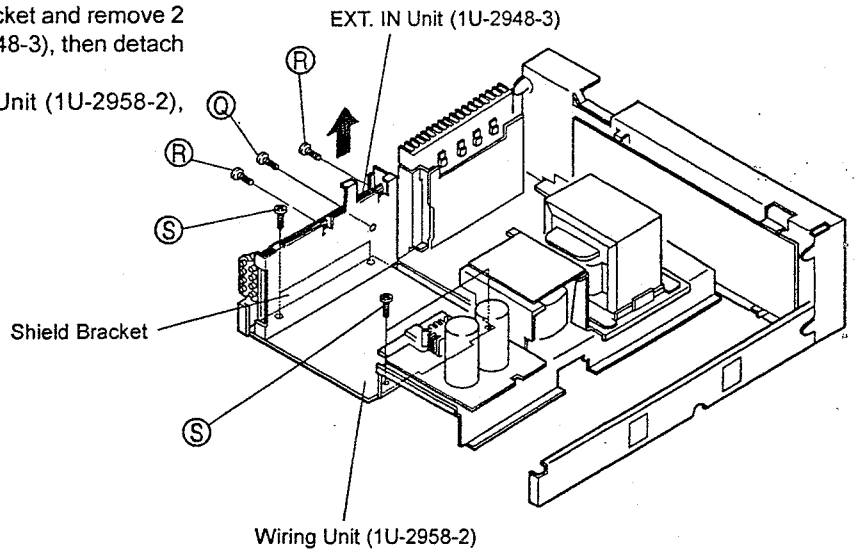


5-4 Radiator SUB Ass'y (P. Supply-2 Unit 1U-2949-2, P. Supply-3 Unit 1U-2958-1)

Remove 2 screws ① fixing the Radiator and remove 2 screws ② fixing the P. Supply-3 Unit (1U-2958-1), then disconnect each connector and detach the Radiator SUB Ass'y as shown in the arrow direction.

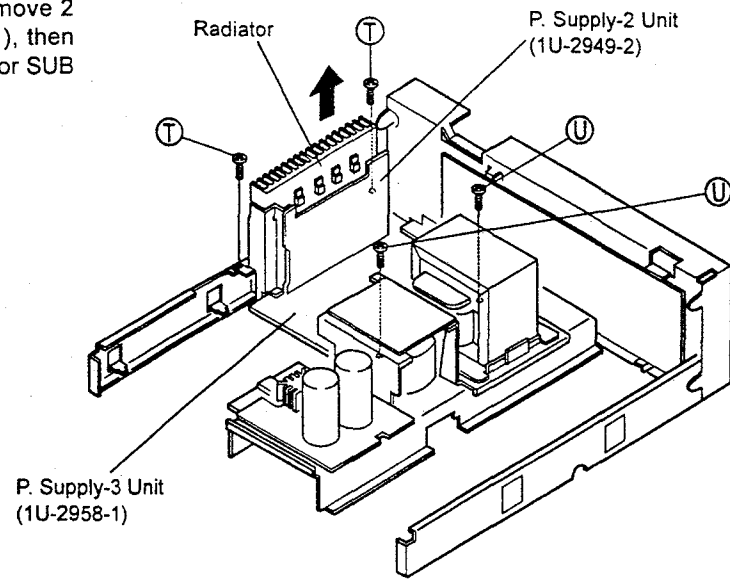

5-6 H/P Unit (1U-2949-4), Tone-2 Unit (1U-2958-3) and DSP Unit (1U-2959-1)


Remove 2 screws ③, then detach the DSP Unit (1U-2959-1).

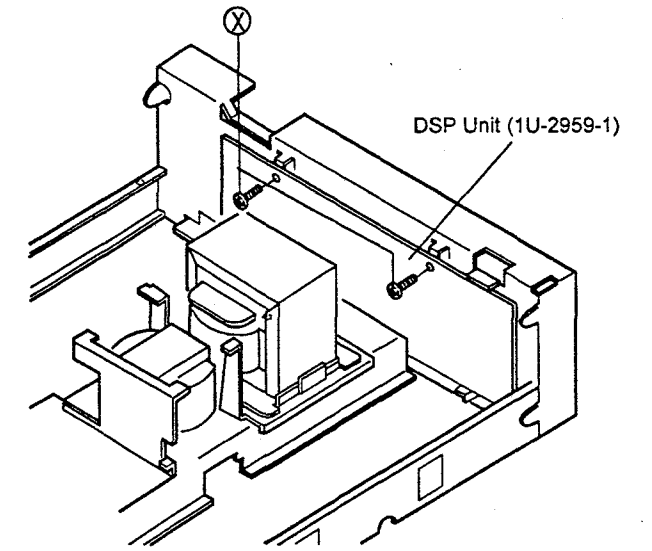


5-5 P. Supply-4 Unit (1U-2949-6) and P. Supply-1 Unit (1U-2952-2)

Remove 4 screws ④ and detach the P. Supply-1 Unit (1U-2952-2).


Remove 4 screws ⑤, then detach the P. Supply-4 Unit (1U-2949-6)

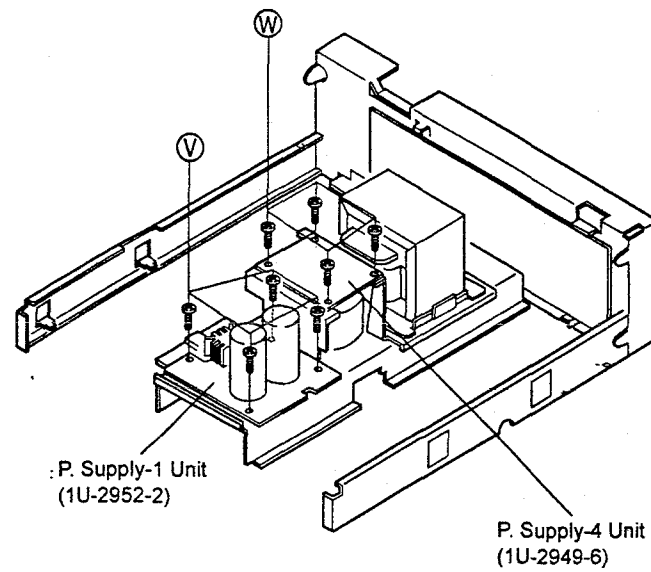

Remove a screw ⑥ and undo a Snap Plate as shown in figure, then detach the H/P Unit (1U-2949-4).
Remove 2 Nuts and detach the Tone-2 Unit (1U-2958-3).

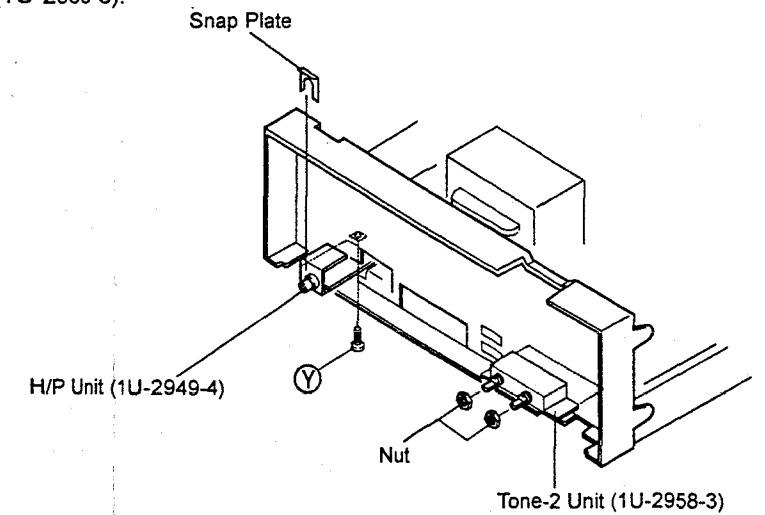










LEVEL DIAGRAM

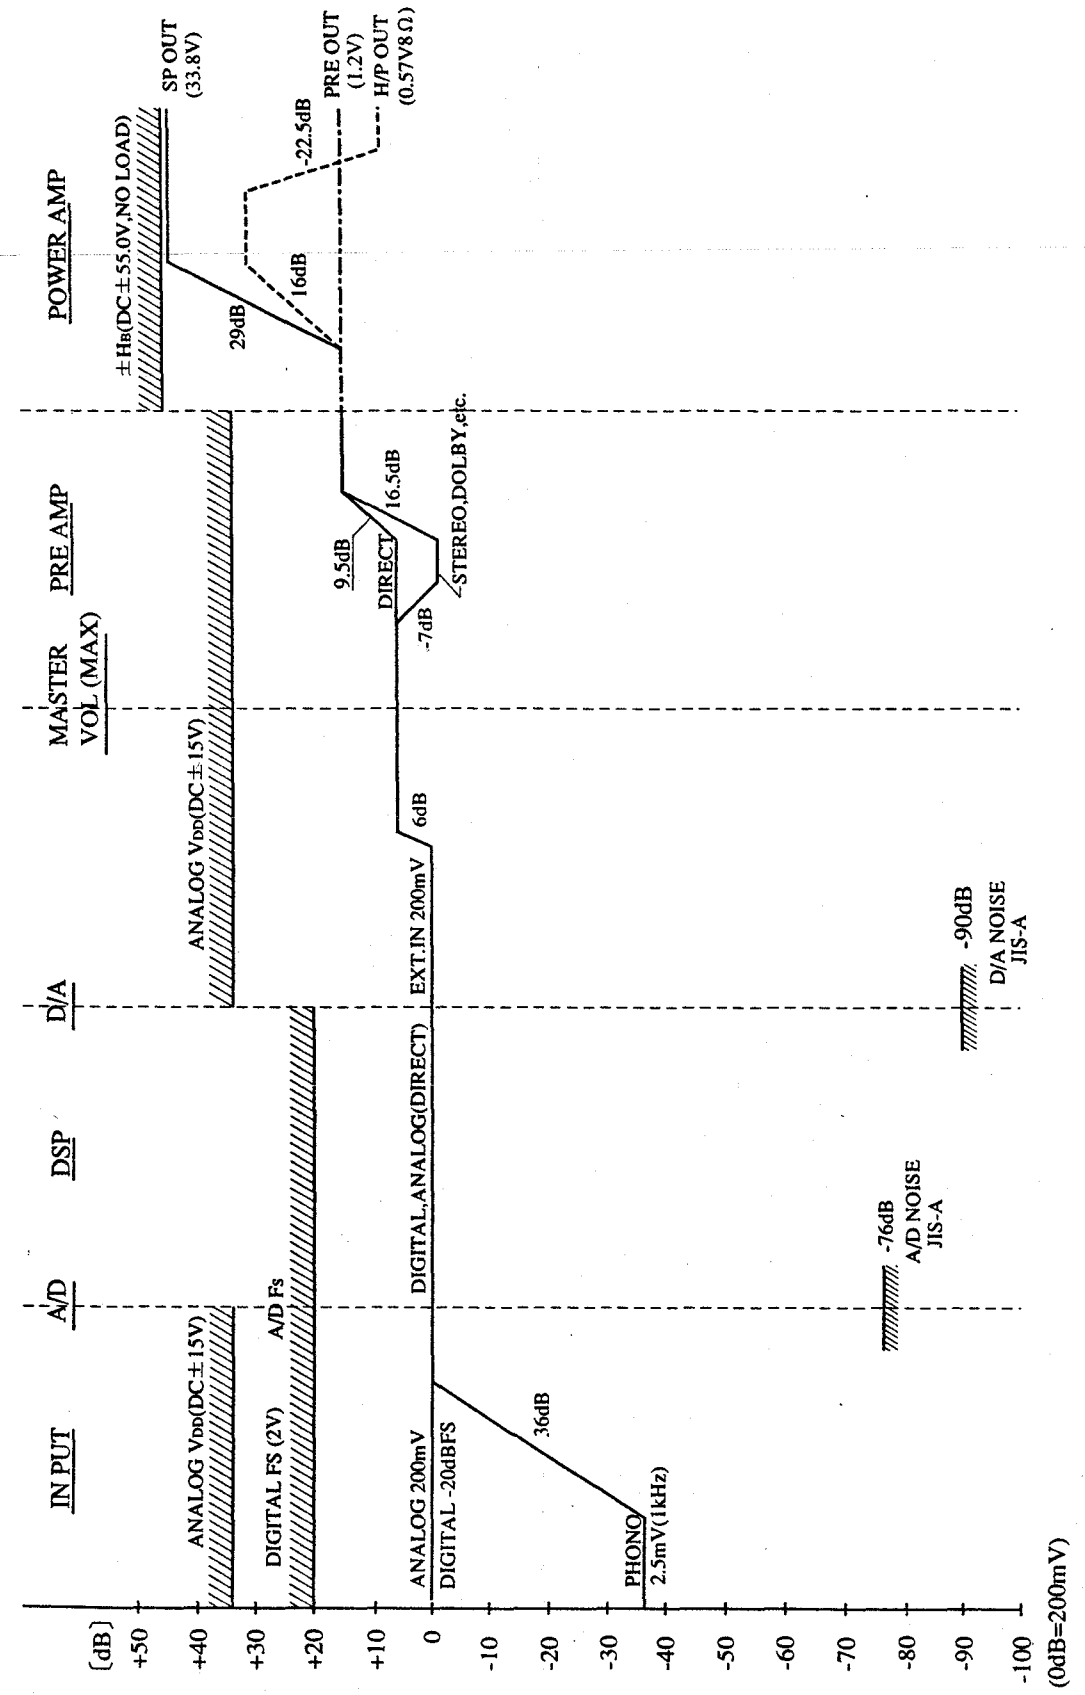

ADJUSTMENT

Confirming for Digital Block (1U-2959-1, 2)

When the unit is in normal operation, the digital signals provide as shown in figure and confirm the test points with corresponding waveforms.

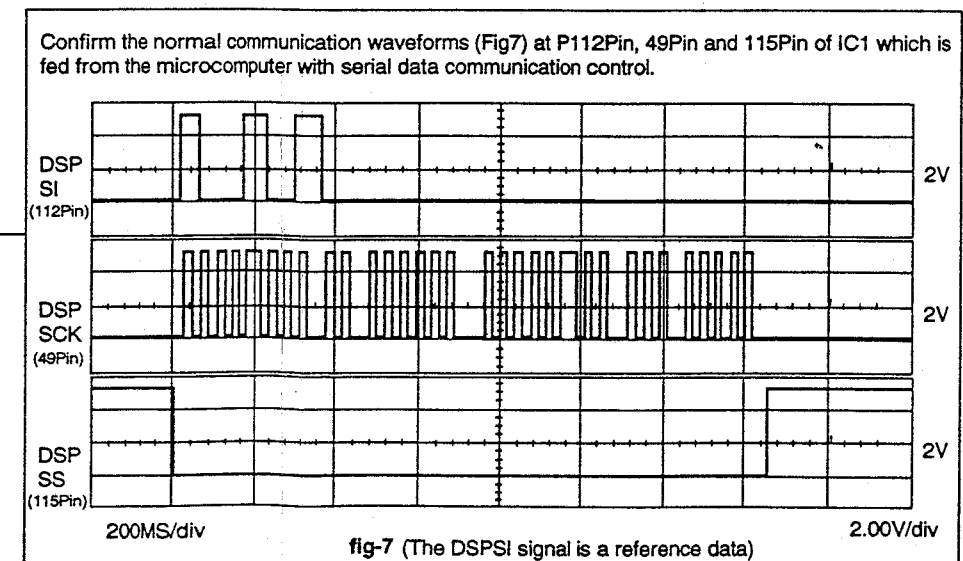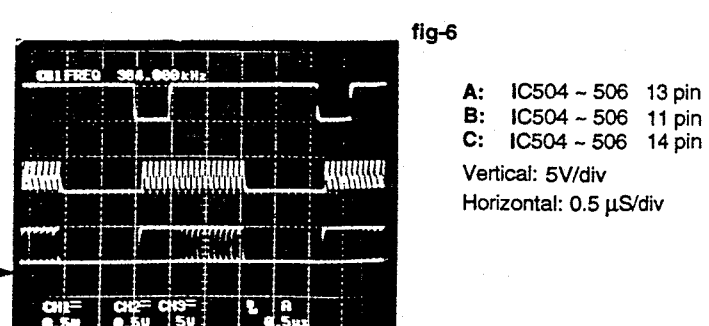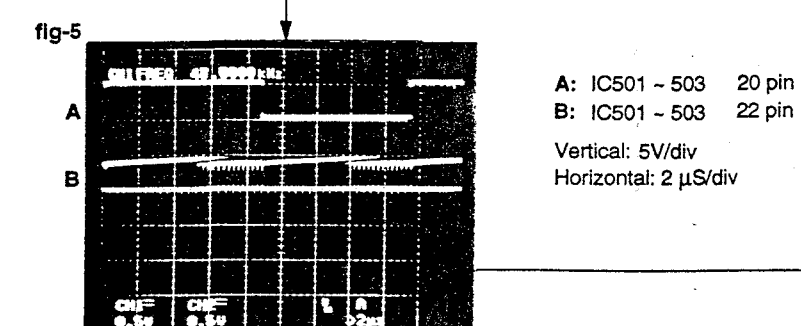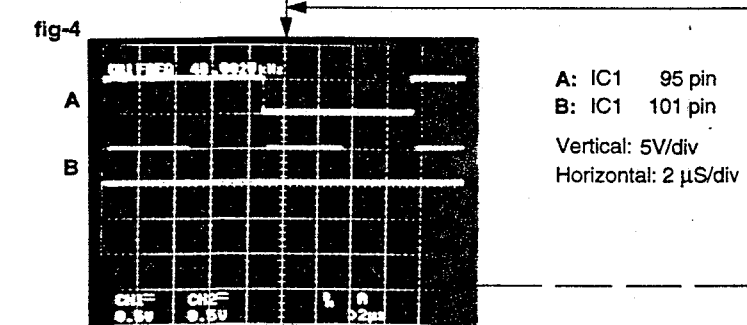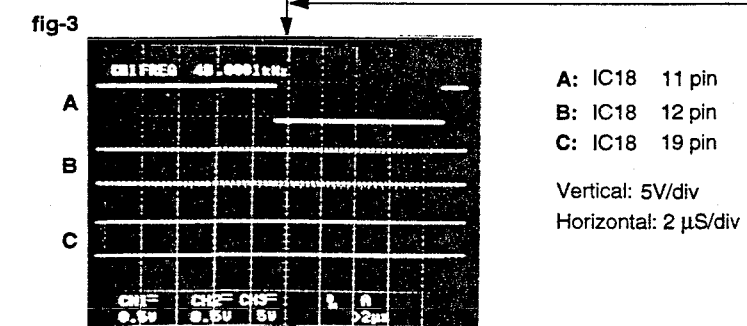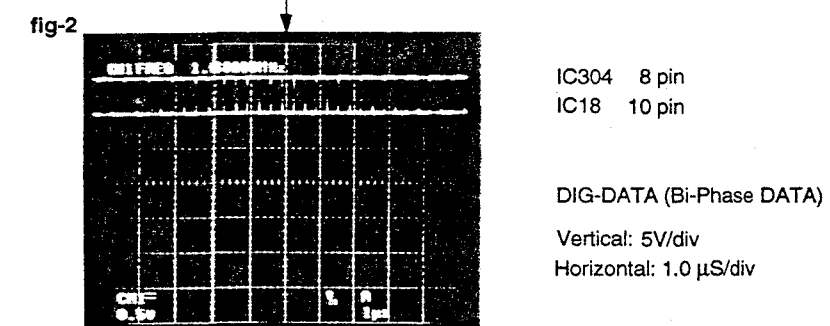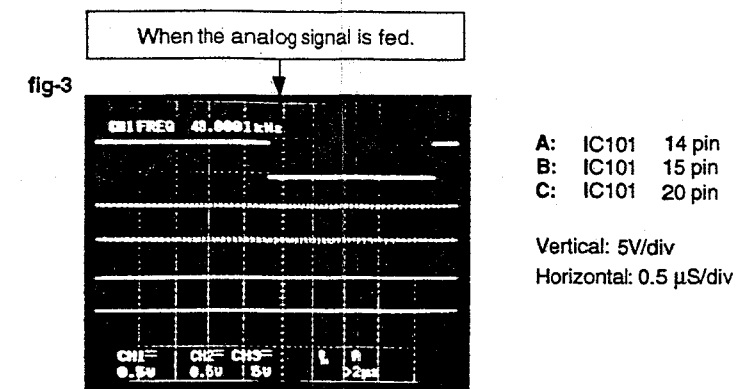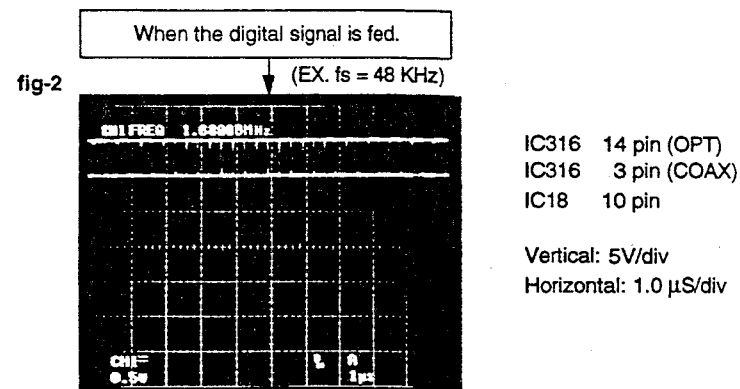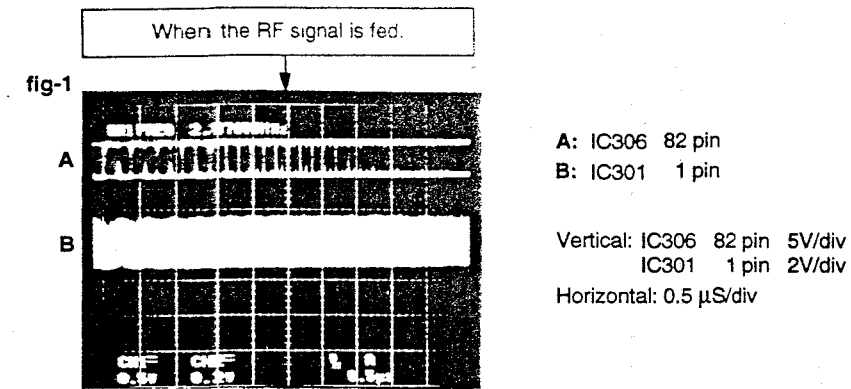

FUNCTION OF NEW CIRCUIT


Circuit Description

DOLBY AC-3

DOLBY AC-3 is a format of new surround signal reproduces maximum 5 channels, i. e. FRONT-LEFT, -RIGHT, CENTER and SURROUND-LEFT, -RIGHT ;plus exclusive subwoofer signal (0.1 ch), totally 5.1 channels from the exclusive digital signal. Following is the featuring points of AC-3.

- (1) Makes surround channel into stereo.
- (2) Provides optimum separation due to independent processing of each channel signal. (AC-3: More than 80 dB, PRO LOGIC: Approx. 25~40 dB)
- (3) Resultant surpassed orientation feeling and movement feeling obtained from. uniform frequency characteristic. (AC-3: 20Hz~20kHz all channels, PRO LOGIC: 20 Hz~20 kHz FRONT, CENTER channels 20 Hz~7 kHz SURROUND channels)
- (4) With the high-efficient signal coding technique, one digital cable permits transmission maintaining the above features.

Comparative Diagram of PRO LOGIC and AC-3

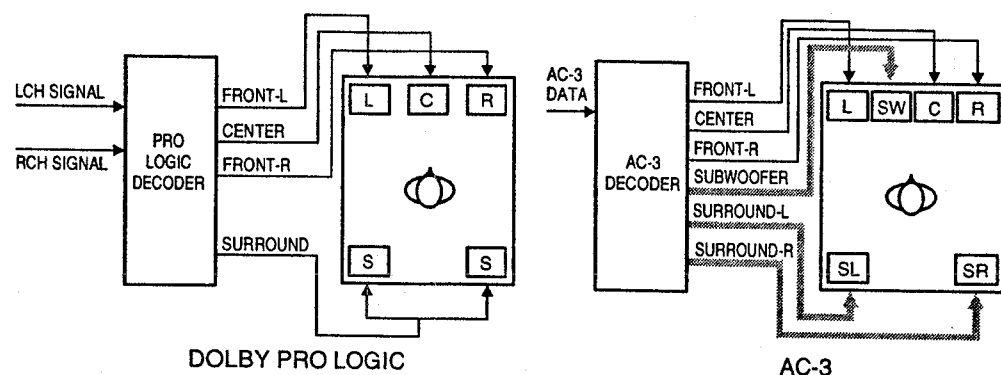


Two kinds of input signals: one corresponds "AC-3RF" signal emitting from LD player; the other is universal optical or coaxial digital format "IEC958" overlapped with "AC-3 exclusive" digital signal. AC-3RF signal is connected via the terminals "AC-3RF OUT" equipped with AC-3 corresponding LD player and "AC-3RF" input of AVC-3800 with a general coaxial digital cable. An applied signal to AVC-3800 goes through demodulator IC(IC305), delivered to DSP (IC1) through input selector (IC315), DIR (IC18) and executed decode processing of AC-3.

The other one is connected in the same way as universal optical or coaxial digital signal. AVC-3800 corresponds with automatic shifting of AC-3 and other signal (PCM) according to input signal.

The signal of each input terminal is delivered to selector (IC315) and applied the same process as to AC-3RF afterward. AC-3 data and PCM data are transmitted with a common line.

DSP (IC1) performs AC-3 decoding process, DOLBY PRO LOGIC process and PCM digital process and PCM digital process by shifting. Decoded signal to each channel is D/A converted and delivered to volume control.

Block Diagram of AC-3, PCM Input Section (1U-2959-1, 1U-2959-2)

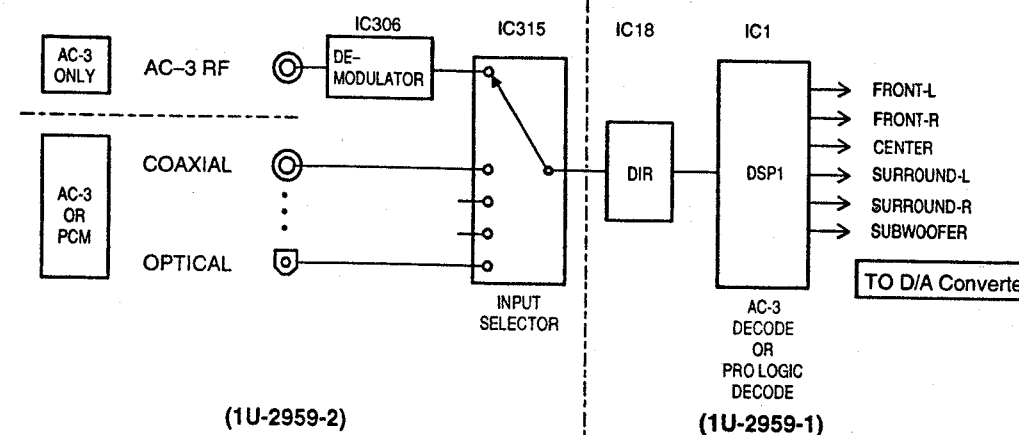

INITIAL SETTING OF EACH MODE

	FRONT L LEV.	FRONT R LEV	CENTER LEVEL	SURROUND L LEV	SURROUND R LEV	S. WOOFER LEVEL	INPUT LEVEL	ROOM SIZE	EFFECT LEVEL	DELAY TIME	CINEMA EQ	DIALOG *1	DYNAMIC *1
DIRECT	0 dB	0 dB	—	—	—	0 dB	—	—	—	—	—	ON	—
STEREO	0 dB	0 dB	—	—	—	0 dB	0 dB	—	—	—	—	ON	—
EXTERNAL INPUTS	0 dB	0 dB	0 dB	0 dB	0 dB	0 dB	—	—	—	—	—	—	—
MONO	—	—	0 dB	—	—	0 dB	0 dB	—	—	—	—	—	—
5CH STEREO	0 dB	0 dB	0 dB	0 dB	0 dB	0 dB	0 dB	—	—	—	—	—	—
DOLBY AC-3 or DOLBY PROLOGIC	0 dB	0 dB	0 dB	0 dB	0 dB	0 dB	0 dB	—	—	—	OFF	ON	OFF
SUPER STADIUM	0 dB	0 dB	0 dB	0 dB	0 dB	0 dB	0 dB	MED	10	—	—	—	—
ROCK ARENA	0 dB	0 dB	0 dB	0 dB	0 dB	0 dB	0 dB	MED	10	—	—	—	—
JAZZ CLUB	0 dB	0 dB	0 dB	0 dB	0 dB	0 dB	0 dB	MED	10	—	—	—	—
CLASSIC CONCERT	0 dB	0 dB	0 dB	0 dB	0 dB	0 dB	0 dB	MED	10	—	—	—	—
MATRIX	0 dB	0 dB	0 dB	0 dB	0 dB	0 dB	—	—	—	30m sec	—	—	—

*1 : Conditions in case for setting AC-3 data to ZR38500.

Others: ● Set MULTI/REC SELECT to SOURCE.

● Set TAPE MONITOR to OFF.

● Set VIDEO SELECT to OFF.

● Set MASTER VOL to - ∞.

● Each input should be set to analog input.

● Set TEST TONE to OFF.

● In case DEFAULT is selected for SURR. PARAMETERS setting menu, sets the appropriate parameter of ROOM SIZE, EFFECT LEVEL, DELAY, CINEMA, D. COMP to the initial value of above table.

CONTROL ADVISABILITY OF EACH MODE

	FRONT L LEV.	FRONT R LEV	CENTER LEVEL	SURROUND L LEV	SURROUND R LEV	S. WOOFER LEVEL	INPUT LEVEL	ROOM SIZE	EFFECT LEVEL	DELAY TIME	CINEMA EQ	D. COMP	TEST TONE
DIRECT	○	○	X	X	X	○*4	X	X	X	X	X	○*7	○*8
STEREO	○	○	X	X	X	○*3	○*6	X	X	X	X	○*7	
EXTERNAL INPUTS	○	○	○*1	○*2	○*2	○*3	X	X	X	X	X	X	
MONO	○*5	○*5	○*5	X	X	○*3	○*6	X	X	X	X	X	
5CH STEREO	○	○	○*1	○*2	○*2	○*3	○*6	X	X	X	X	X	
DOLBY AC-3 or DOLBY PROLOGIC	○	○	○*1	○*2	○*2	○*3	○*6	X	X	X	○	○*7	
SUPER STADIUM	○	○	○*1	○*2	○*2	○*3	○*6	○	○	X	X	X	
ROCK ARENA	○	○	○*1	○*2	○*2	○*3	○*6	○	○	X	X	X	
JAZZ CLUB	○	○	○*1	○*2	○*2	○*3	○*6	○	○	X	X	X	
CLASSIC CONCERT	○	○	○*1	○*2	○*2	○*3	○*6	○	○	X	X	X	
MATRIX	○	○	○*1	○*2	○*2	○*3	○*6	X	X	○	X	X	

○ : Feasible to control

X : Infeasible to control

○*1 : According to the contents of set up menu, when no center speaker is provided, with no controlling and sets - ∞ data to center electronic volume.

○*2 : According to the contents of set up menu, when no surround speaker is provided, with no controlling and sets - ∞ data to surround electronic volume.

○*3 : According to the contents of set up menu, when no woofer is provided, with no controlling and sets - ∞ data to woofer electronic volume.

○*4 : No controlling when front speaker is set to LARGE.

○*5 : According to the contents of set up menu, when no center speaker is provided, controls front L/R and not to control center. And when center speaker is set to SMALL or LARGE, controls center and not to control front L/R.

○*6 : Feasible to control only at analog input. Note that, this function corresponds to each input channel.

○*7 : Feasible to control only at AC-3 input.

○*8 : Feasible to control TEST TONE in all modes of set up menu.

Additional note : Each mode's FRONT/CENTER/SURROUND/S. WOOFER DELAY should be set according to the setting contents of delay time for set up menu.

DIGITAL/ANALOG, SURROUND MODE IN EACH INPUT FUNCTION AND INITIAL SETTING OF DIGITAL FUNCTION

INPUT FUNCTION	DIGITAL/ANALOG	SURROUND MODE	DIGITAL FUNCTION
PHONO	FORCED ANALOG	STEREO	INFEASIBLE TO SET
CD	ANALOG	STEREO	COAXIAL
TUNER	FORCED ANALOG	STEREO	INFEASIBLE TO SET
VDP/DVD	ANALOG	DOLBY PRO LOGIC	OPTICAL
AC-3 RF	AUTO (FORCED DIGITAL)	DOLBY AC-3	AC-3 RF
TV/DBS	ANALOG	STEREO	OFF
V. AUX	ANALOG	STEREO	OFF
VCR-1	ANALOG	DOLBY PRO LOGIC	OFF
VCR-2	ANALOG	STEREO	OFF
DAT/TAPE-1	ANALOG	STEREO	OFF
TAPE-2	FORCED ANALOG	STEREO	INFEASIBLE TO SET



SEMICONDUCTORS

● IC's

Note: Indications before IC numbers denote P.W.B. name.

- AU** : Audio IN. Unit
- VI** : Video P.W.B. Unit
- DS** : DSP P.W.B. Unit
- PS** : Power Supply P.W.B. Unit
- Pr** : Pre Amp P.W.B. Unit

TMP87CS71F-6519 (DS: IC401)
TMP87CP71F-6520 (DS: IC402)

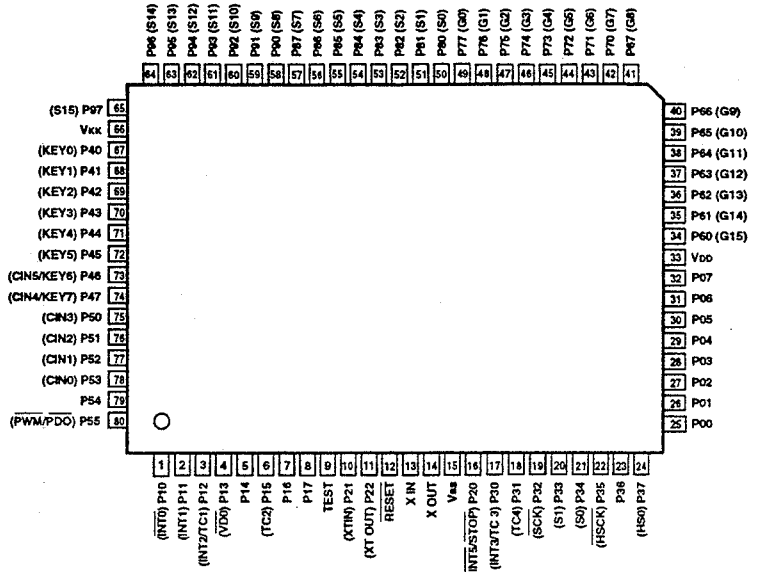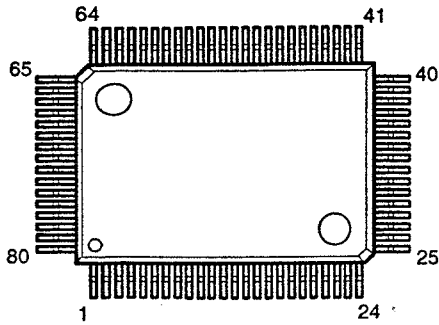

TMP87CS71F-6519 (IC401) Terminal Function

Pin No.	Port Name	Symbol	I/O	Type	Op	Det	Res	Ini	Function
1	P10/INT 0	PROTECTION IN	I	—	Eu	E&L	Z	H	Protection detecting input. (H: Detection)
2	P11/INT 1	DSP CLK IN	I	—	Eu	Ed	Z	H	DSP control terminal.
3	P12/INT 2	NC	O	C	—	—	Z	L	No connection.
4	P13/DVO	NC	O	C	—	—	Z	L	No connection.
5	P14	NC	O	C	—	—	Z	L	No connection.
6	P15/TC2	NC	O	C	—	—	Z	L	No connection.
7	P16	NC	O	C	—	—	Z	L	No connection.
8	P17	NC	O	C	—	—	Z	L	No connection.
9	TEST	TEST	I	—	GND	S	—	—	Connect to ground.
10	P21/X TIN	NC	O	N	—	—	Z	L	No connection.
11	P22/X TO	SCL	O	N	Eu	—	Z	H	MAIN-SUB microcomputer communication control terminal.
12	RESET	RESET	I	—	Eu	Lv	L	—	Reset input.
13	XIN	XIN	I	—	—	—	—	—	Oscillator circuit terminal. (4MHz)
14	XOUT	XOUT	O	—	—	—	—	—	Oscillator circuit terminal. (4MHz)
15	VSS	Vss	I	—	GND	—	—	—	Ground.
16	P20/INT 5	POWER OFF	I	—	Eu	Lv	Z	—	Power OFF detection terminal. (L: Power OFF)
17	P30/INT 3	REMOCON	I	—	Eu	E&L	Z	—	Remote signal input.
18	P31/TC4	SDA	O	N	Eu	S	Z	H	MAIN-SUB microcomputer communication control terminal.
19	P32/SCK	NC	O	N	—	—	Z	L	No connection.
20	P33/SI	NC	O	N	—	—	Z	L	No connection.
21	P34/SO	NC	O	N	—	—	Z	L	No connection.
22	P35/H SCK	OSD CLK	O	N	Eu	S	Z	H	OSD control output. (M35015)
23	P36	OSD CS	O	N	Eu	—	Z	H	OSD control output. (M35015)
24	P37/H SO	OSD DATA	O	N	Eu	S	Z	L	OSD control output. (M35015)
25	P00	OSD RES	O	C	—	—	Z	H	OSD control output. (M35015)
26	P01	FRONT	O	C	—	—	Z	H	Front SP out relay control output. (L: Mute)
27	P02	CENTER	O	C	—	—	Z	H	Center SP out relay control output. (L: Mute)
28	P03	REAR	O	C	—	—	Z	H	Rear SP out relay control output. (L: Mute)
29	P04	LED CK	O	C	—	S	Z	H	LED control terminal. (M66313)
30	P05	LED DATA	O	C	—	S	Z	H	LED control terminal. (M66313)
31	P06	LED LE	O	C	—	—	Z	H	LED control terminal. (M66313)
32	P07	LED OE	O	C	—	—	Z	H	LED control terminal. (M66313)
33	VDD	VDD	I	—	—	—	—	—	Connect to +5V power supply.
34	P60	VOL MUTE	O	P	Id	—	L	L	Control signal at minus infinite of master volume. (H: infinite)
35	P61	AC-3 RF DET.	I	—	—	—	L	L	AC-3 RF signal judgment input. (L: AC-3 data input)
36	P62	E. VOL CE2	O	P	Id	—	L	L	Master volume control output. (LC7536) (Center/Sub woofer, Rear L/R)
37	P63	E. VOL CE1	O	P	Id	—	L	L	Master volume control output. (LC7536) (Front L/R)
38	P64	E. VOL DATA	O	P	Id	—	L	H	Electronic volume control output. (LC7536)
39	P65	E. VOL CK	O	P	Id	—	L	H	Electronic volume control output. (LC7536)
40	P66	IN VOL ST	O	P	Id	—	L	L	Input volume control output. (TC9299)
41	P67	A/D RES	O	P	Id	—	L	L	A/D control terminal. (L: Reset and analog input)
42	P70	SEL	O	P	Id	—	L	H	DIR control terminal. (CS8412) (H: Digital, L: Analog)
43	P71	SELCK	O	P	Id	—	L	H	DIR control terminal. (CS8412)
44	P72	AC-3 MUTE	O	P	Id	—	L	H	Digital mute control terminal. (L: AC-3)
45	P73	FL RES	O	P	Id	—	L	L	Fluorescent display control output. (MSC1937)
46	P74	FL DATA	O	P	Id	S	L	H	Fluorescent display control output. (MSC1937)
47	P75	FL CLK	O	P	Id	S	L	H	Fluorescent display control output. (MSC1937)
48	P76	DSF1	O	P	Id	—	L	H	Emphasis control terminal.
49	P77	NC	O	P	Id	—	L	H	No connection.
50	P80	STANDBY LED	O	P	Id	—	L	H	Standby indication LED drive output. (H: Lighting)
51	P81	FRONT	O	P	Id	—	L	L	Front PRE out relay control output. (L: Mute)
52	P82	CENTER	O	P	Id	—	L	L	Center PRE out relay control output. (L: Mute)
53	P83	REAR	O	P	Id	—	L	L	Rear PRE out relay control output. (L: Mute)
54	P84	MULTI	O	P	Id	—	L	L	MULTI PRE out relay control output. (L: Mute)
55	P85	SUBWOOFER	O	P	Id	—	L	L	MONO PRE out relay control output. (L: Mute)

Pin No.	Port Name	Symbol	I/O	Type	Op	Det	Res	Ini	Function
56	P86	H/P	O	P	Id	—	L	H	H/P PRE out relay control output. (L: Mute)
57	P87	POWER	O	P	Id	—	L	H	Power supply relay control output. (H: ON)
58	P90	OVL	I	—	—	—	L	—	Over load detecting input. (H: Over load)
59	P91	AC-3 DET.	I	—	—	—	L	—	AC-3 decode data input terminal. (L: AC-3 decode)
60	P92	F0	I	—	—	—	L	—	DIR control input terminal. (CS8412)
61	P93	F1	I	—	—	—	L	—	DIR control input terminal. (CS8412)
62	P94	F2	I	—	—	—	L	—	DIR control input terminal. (CS8412) (H: PCM)
63	P95	CSI	I	—	—	—	L	—	DIR control input terminal. (CS8412) (H: ERR)
64	P96	ERR	I	—	—	—	L	—	DIR control input terminal. (CS8412) (H: ERR)
65	P97	DSF2	O	P	Id	—	L	L	Emphasis control terminal.
66	VKK	VKK	I	—	—	—	—	—	Connect to ground.
67	P40/KEY0	S-MONITOR DET.	I	—	Eu	Lv	Z	—	Judgment whether S monitor is connected or not. (L: Connecting)
68	P41/KEY1	S-SIGNAL DET.	I	—	Eu	Lv	Z	—	S signal input control. (H: S signal input)
69	P42/KEY2	OSD SYNC DET.	I	—	Eu	Lv	Z	—	OSD sync switching signal. (H: External sync)
70	P43/KEY3	MVOL SELA	I	—	Eu	Lv	Z	H	Master volume setting signal. (Rotary encode)
71	P44/KEY4	MVOL SELB	I	—	Eu	Lv	Z	H	Master volume setting signal. (Rotary encode)
72	P45/KEY5	H/P DET.	I	—	Eu	Lv	Z	L	H/P input detection signal. (H: Detecting)
73	P46/CIN5	MODE	I	—	Eu	Lv	Z	—	Export country mode switching input.
74	P47/CIN4	KEY5	I	—	Eu	Lv	Z	H	Key input 5.
75	P50/CIN3	KEY4	I	—	Eu	Lv	Z	H	Key input 4.
76	P51/CIN2	KEY3	I	—	Eu	Lv	Z	H	Key input 3.
77	P52/CIN1	KEY2	I	—	Eu	Lv	Z	H	Key input 2.
78	P53/CIN0	KEY1	I	—	Eu	Lv	Z	H	Key input 1.
79	P54	SUB SYNC 1	I	—	Eu	Lv	Z	H	SUB microcomputer sync input.
80	P55/PMW	SO/ZORAN	I	—	Eu	Lv	Z	H	DSP data input terminal. (ZR38500)

NOTE:

- Pin No. : Terminal number of microcomputer.
- Port Name : The name entered in the data sheet of microcomputer.
- Symbol : Symbolized interface function.
- I/O : Input or out of part.
 - "I" = Input port
 - "O" = Output port
- Type : Composition of port in case of output port.
 - "C" = CMOS output
 - "N" = NMOS open drain output
 - "P" = PMOS open drain output
- Op : Pull up/Pull down selection information.
 - "Iu" = Inner microcomputer pull up
 - "Id" = Inner microcomputer pull down
 - "Eu" = External microcomputer pull up
 - "Ed" = External microcomputer pull down
- Det : Indicates judging state of input port. Level detection is "Lv"; Edge detection is "Ed"; Detection by both shifting is "E&L"; Serial data detection is "S" (Serial data output is also "S").
- Res : State at reset.
 - "H" = Outputs High Level at reset
 - "L" = Outputs Low Level at reset
 - "Z" = Becomes High impedance mode at reset
- Ini : Initial output state.
- Function : Function and logical level explanation of signals to be interface.

TMP87CP71AF-6520 (IC402) Terminal Function



Pin No.	Port Name	Symbol	I/O	Type	Op	Det	Res	Ini	Function
1	P10/INT 0	DEMOD RES	O	C	—	—	Z	H	Demodulator reset control terminal. (L: Reset)
2	P11/INT 1	DEMOD POWER	O	C	—	—	Z	L	Demodulator power ON/OFF control terminal. (H: ON)
3	P12/INT 2	A/D POWER	O	C	—	—	Z	H	A/D converter power ON/OFF control terminal. (H: ON)
4	P13/DVO	CINEMA EQ	O	C	—	—	Z	L	Cinema EQ signal. (H: ON)
5	P14	DISCHARGE	O	C	—	—	Z	H	Pop noise prevention control terminal. (H: Power ON)
6	P15/TC2	NC	O	C	—	—	Z	L	No connection
7	P16	NC	O	C	—	—	Z	H	No connection
8	P17	NC	O	C	—	—	Z	L	No connection
9	TEST	TEST	I	—	GND	—	—	—	Connect to ground.
10	P21/X TIN	SUB SYNC1	O	N	Eu	—	Z	H	SUB microcomputer sync output.
11	P22/X TO	tone	O	N	Eu	—	Z	L	Tone control terminal. (L: Direct, test tone ON)
12	RESET	RESET	I	—	Eu	Lv	L	—	Reset input.
13	XIN	XIN	I	—	—	—	—	—	Oscillator circuit terminal. (4 MHz)
14	XOUT	XOUT	O	—	—	—	—	—	Oscillator circuit terminal. (4 MHz)
15	VSS	VSS	I	—	GND	—	—	—	Ground.
16	P20/INT 5	POWER OFF	I	—	Eu	Lv	Z	—	Power OFF detection terminal. (L: Power OFF)
17	P30/INT 3	NC	I	—	Eu	S	Z	L	No connection
18	P31/TC4	CFG ST	O	N	Eu	S	Z	H	Speaker configuration SW (NJU7313AL) control terminal.
19	P32/SCK	SCL	I	—	Eu	S	Z	—	MAIN-SUB microcomputer communication control terminal.
20	P33/SI	SDA	I	—	Eu	S	Z	—	MAIN-SUB microcomputer communication control terminal.
21	P34/SO	CFG DATA	O	N	Eu	S	Z	H	Speaker configuration SW (NJU7313AL) control terminal.
22	P35/H SCK	DSP CLK	O	N	Eu	S	Z	H	DSP control terminal. (ZR38500)
23	P36	ZORAN SS	O	N	Eu	—	Z	H	DSP control terminal. (ZR38500)
24	P37/H SO	DSP DATA	O	N	Eu	S	Z	H	DSP control terminal. (ZR38500)
25	P00	CFG CLK	O	C	—	—	Z	H	Speaker configuration SW (NJU7313AL) control terminal.
26	P01	DSP RES(ZORAN)	O	C	—	—	Z	H	DSP control terminal. (ZORAN) (L: Reset)
27	P02	FUNC ST4	O	C	—	—	Z	L	Function control output (NJU7313AL) Hi-vision.
28	P03	FUNC ST3	O	C	—	—	Z	L	Function control output (TC9273) REC INH.
29	P04	FUNC ST2	O	C	—	—	Z	L	Function control output (TC9273) REC OUT.
30	P05	FUNC ST1	O	C	—	—	Z	L	Function control output (TC9274N) INPUT.
31	P06	FUNC DATA	O	C	—	S	Z	L	Function control output (TC9274N, NJU7313AL).
32	P07	FUNC CK	O	C	—	S	Z	L	Function control output (TC9274N, NJU7313AL).
33	VDD	VDD	I	—	—	—	Z	—	Connect to +5V power supply.
34	P60	VIN A	O	P	ld	—	L	L	Video input control. (TC4051)
35	P61	VIN B	O	P	ld	—	L	L	Video input control. (TC4051)
36	P62	VIN C	O	P	ld	—	L	L	Video input control. (TC4051)
37	P63	VREC A	O	P	ld	—	L	L	Video output control. (TC4051)
38	P64	VREC B	O	P	ld	—	L	L	Video output control. (TC4051)
39	P65	VREC C	O	P	ld	—	L	L	Video output control. (TC4051)
40	P66	VINH 1	O	P	ld	—	L	L	Video output inhibit control. (HD14066)
41	P67	VINH 2	O	P	ld	—	L	L	Video output inhibit control. (HD14066)
42	P70	LIMIT	O	P	ld	—	L	L	Limiter control.
43	P71	S1	O	P	ld	—	L	—	Video signal switching control output.
44	P72	S1	O	P	ld	—	L	—	Video signal switching control output.
45	P73	S2	O	P	ld	—	L	—	Video signal switching control output.
46	P74	NC	O	P	ld	—	L	H	No connection
47	P75	G 2	O	P	ld	—	L	—	LED display digit control signal.
48	P76	G 1	O	P	ld	—	L	—	LED display digit control signal.
49	P77	G 0	O	P	ld	—	L	—	LED display digit control signal.
50	P80	S (a)	O	P	ld	—	L	—	LED display segment control signal.
51	P81	S (b)	O	P	ld	—	L	—	LED display segment control signal.
52	P82	S (c)	O	P	ld	—	L	—	LED display segment control signal.
53	P83	S (d)	O	P	ld	—	L	—	LED display segment control signal.
54	P84	S (e)	O	P	ld	—	L	—	LED display segment control signal.
55	P85	S (f)	O	P	ld	—	L	—	LED display segment control signal.

Pin No.	Port Name	Symbol	I/O	Type	Op	Det	Res	Ini	Function
56	P86	S (g)	O	P	ld	—	L	—	LED display segment control signal.
57	P87	S (h)	O	P	ld	—	L	—	LED display segment control signal.
58	P90	NC	I	—	ld	—	L	L	No connection
59	P91	DSP POWER	O	P	ld	—	L	L	DSP power supply control output. (H: ON)
60	P92	DIN A	O	P	ld	—	L	L	Digital input control terminal. (TC74HC151)
61	P93	DIN B	O	P	ld	—	L	L	Digital input control terminal. (TC74HC151)
62	P94	DIN C	O	P	ld	—	L	L	Digital input control terminal. (TC74HC151)
63	P95	NC	I	—	ld	—	L	L	No connection
64	P96	NC	I	—	ld	—	L	L	No connection
65	P97	NC	I	—	ld	—	L	L	No connection
66	VKK	GND	I	—	—	—	—	—	Connect to ground.
67	P40/KEY0	NC	I	—	—	—	Z	L	No connection
68	P41/KEY1	NC	I	—	—	—	Z	L	No connection
69	P42/KEY2	NC	I	—	—	—	Z	L	No connection
70	P43/KEY3	NC	I	—	—	—	Z	L	No connection
71	P44/KEY4	NC	I	—	—	—	Z	L	No connection
72	P45/KEY5	NC	I	—	—	—	Z	L	No connection
73	P46/CIN5	NC	I	—	—	—	Z	L	No connection
74	P47/CIN4	NC	I	—	—	—	Z	L	No connection
75	P50/CIN3	NC	I	—	—	—	Z	L	No connection
76	P51/CIN2	NC	I	—	—	—	Z	L	No connection
77	P52/CIN1	NC	I	—	—	—	Z	L	No connection
78	P53/CIN0	NC	I	—	—	—	Z	L	No connection
79	P54	NC	I	—	—	—	Z	L	No connection
80	P55/PMW	NC	I	—	—	—	Z	L	No connection

NOTE:

- Pin No. : Terminal number of microcomputer.
- Port Name : The name entered in the data sheet of microcomputer.
- Symbol : Symbolized interface function.
- I/O : Input or out of part.
"I" = Input port
"O" = Output port
- Type : Composition of port in case of output port.
"C" = CMOS output
"N" = NMOS open drain output
"P" = PMOS open drain output
- Op : Pull up/Pull down selection information.
"lu" = Inner microcomputer pull up
"ld" = Inner microcomputer pull down
"Eu" = External microcomputer pull up
"Ed" = External microcomputer pull down
- Det : Indicates judging state of input port. Level detection is "LV"; Edge detection is "Ed"; Detection by both shifting is "E&L"; Serial data detection is "S" (Serial data output is also "S").
- Res : State at reset.
"H" = Outputs High Level at reset
"L" = Outputs Low Level at reset
"Z" = Becomes High impedance mode at reset
- Ini : Initial output state.
- Function : Function and logical level explanation of signals to be interface.



MCM6205D-15
(DS: IC051, 052, 308)

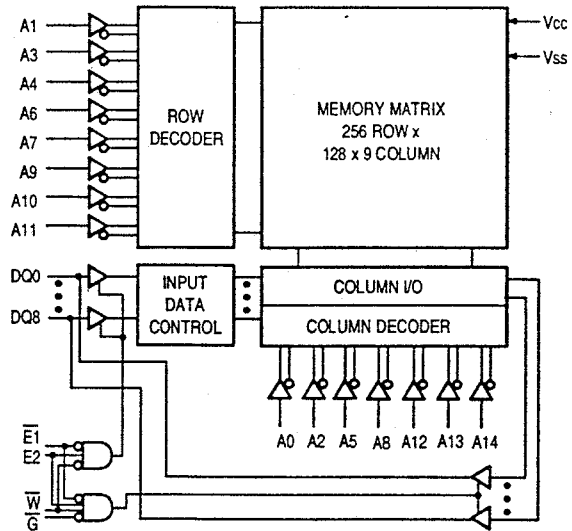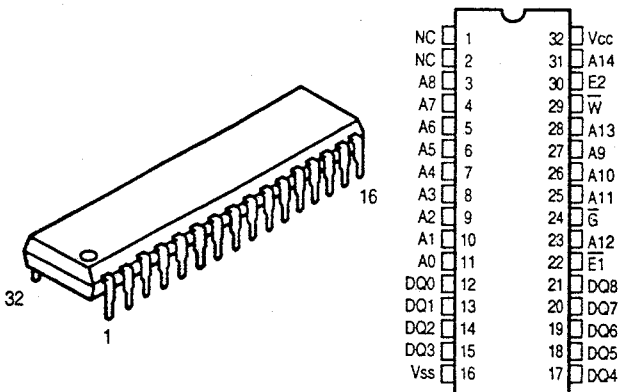

MCM6205D-15 Terminal Function

Pin No.	Symbol	I/O	Function
1	N.C.	-	No connection.
2	N.C.	-	No connection.
3	A8	I	Address 8 input.
4	A7	I	Address 7 input.
5	A6	I	Address 6 input.
6	A5	I	Address 5 input.
7	A4	I	Address 4 input.
8	A3	I	Address 3 input.
9	A2	I	Address 2 input.
10	A1	I	Address 1 input.
11	A0	I	Address 0 input.
12	DQ0	I/O	Data input/output.
13	DQ1	I/O	Data input/output.
14	DQ2	I/O	Data input/output.
15	DQ3	I/O	Data input/output.
16	GND	-	Ground.
17	DQ4	I/O	Data input/output.
18	DQ5	I/O	Data input/output.
19	DQ6	I/O	Data input/output.
20	DQ7	I/O	Data input/output.
21	DQ8	I/O	Data input/output.
22	\bar{E}	I	Chip enable input.
23	A12	I	Address 12 input.
24	\bar{G}	I	Output buffer control input signal.
25	A11	I	Address 11 input.
26	A10	I	Address 10 input.
27	A9	I	Address 9 input.
28	A13	I	Address 13 input.
29	\bar{W}	I	Write enable input.
30	E2	I	Chip enable input.
31	A14	I	Address 14 input.
32	Vcc	-	+5V power supply.



CS8412CS
(DS: IC18)

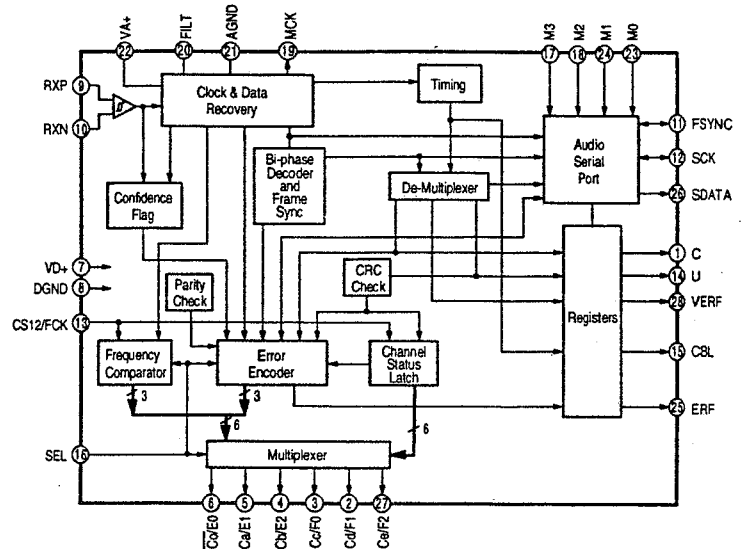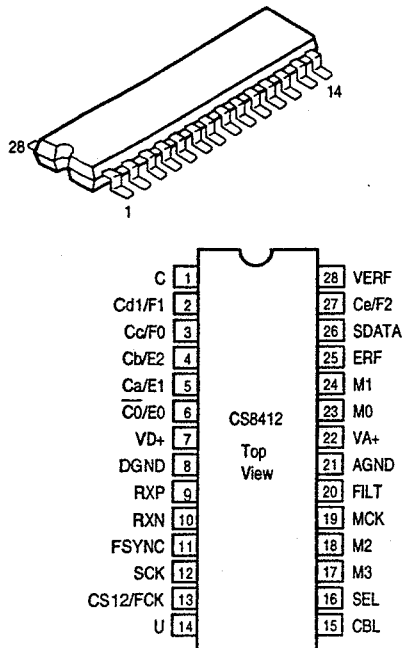

CS8412CS Terminal Function

Pin No.	Symbol	I/O	Function
1	C	I	C.S. bit input.
2	Cd F1	O	C.S. bit output/Frequency indication (H: C.S. bit output, L: Frequency indication).
3	Cc F0		CO="0" in C.S. bit is for professional use, and CO="1" is for general use.
4	Cd E2	O	C.S. bit output/Error indication (H: C.S. bit output, L: Error indication).
5	Ca E1		CO="0" in C.S. bit is for professional use, and CO="1" is for general use.
6	CO/E0		
7	VD+	-	Digital +5V power supply.
8	DGND	-	Connect to digital ground.
9	RXP	I	Differential line receiver signal. Compatible with RS422.
10	RXN		
11	FSYNC	I/O	Frame sync signal.
12	SCK	I/O	Serial clock signal, 32 clock is included with each audio sample in output status.
13	CS12/FCK	I	Channel selection/Reference frequency (H: Channel selection, L: Reference frequency). CS12 selects the channel output to C.S. terminal. "0" is for sub frame 1, and "1" is for sub frame2. Input frequency can be detected by 6.144 MHz clock input to FCK.
14	U	I	User (U) bit terminal.
15	CBL	O	C.S. block output terminal.
16	SEL	I	C.S. F2-F0, E2-E0 selection signal (H: C.S. bit output, L: Frequency/Error indication).
17	M3	I	Serial port mode select signal.
18	M2		
19	MCK	I	Master clock signal (Low jitter clock output with 256 times of receiving frequency).
20	FILT	I	Filter terminal, connect resistor 1kohm and capacitor 0.047 μF between this terminal and AGND.
21	AGND	-	Connect to analog ground.
22	VA+	-	Analog +5V power supply (Noise for this power supply should be minized as lower as possible since it affects jitter's performance of playback clock directly).
23	M0	I	Serial port mode select signal.
24	M1		
25	ERF	O	Error flag aignal.
26	SDATA	O	Serial data signal.
27	Ce F2	O	C.S. bit output/Frequency indication (H: C.S. bit output, L: Frequency indication). CO="0" in C.S. bit is for professional use, and CO="1" is for general use.
28	VERF	O	Parity and Error flag signal.




MSC1937-03RS
(VI: IC102)

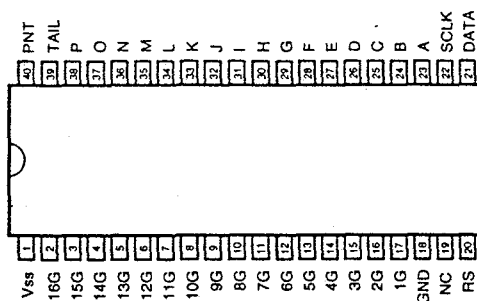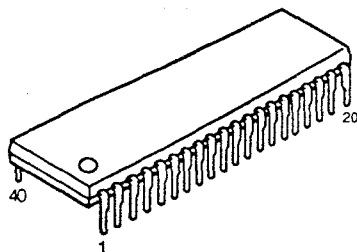

MSC1937-03RS Terminal Function

Pin No.	Symbol	I/O	Function
1	Vss	-	Power supply (+5V).
2	16G	O	Digit 16 output.
3	15G	O	Digit 15 output.
4	14G	O	Digit 14 output.
5	13G	O	Digit 13 output.
6	12G	O	Digit 12 output.
7	11G	O	Digit 11 output.
8	10G	O	Digit 10 output.
9	9G	O	Digit 9 output.
10	8G	O	Digit 8 output.
11	7G	O	Digit 7 output.
12	6G	O	Digit 6 output.
13	5G	O	Digit 5 output.
14	4G	O	Digit 4 output.
15	3G	O	Digit 3 output.
16	2G	O	Digit 2 output.
17	1G	O	Digit 1 output.
18	GND	-	Ground.
19	NC	-	No connection.
20	RS	I	POWER-ON-RESET. (H: RESET)
21	DATA	I	Data input.
22	SCLK	I	Shift clock input.
23	A	O	Segment A output.
24	B	O	Segment B output.
25	C	O	Segment C output.
26	D	O	Segment D output.
27	E	O	Segment E output.
28	F	O	Segment F output.
29	G	O	Segment G output.
30	H	O	Segment H output.
31	I	O	Segment I output.
32	J	O	Segment J output.
33	K	O	Segment K output.
34	L	O	Segment L output.
35	M	O	Segment M output.
36	N	O	Segment N output.
37	O	O	Segment O output.
38	P	O	Segment P output.
39	TAIL	-	No connection.
40	PNT	O	Point output.



LC7536
 (AU: IC503, 504)
 (Pr: IC601, 604)

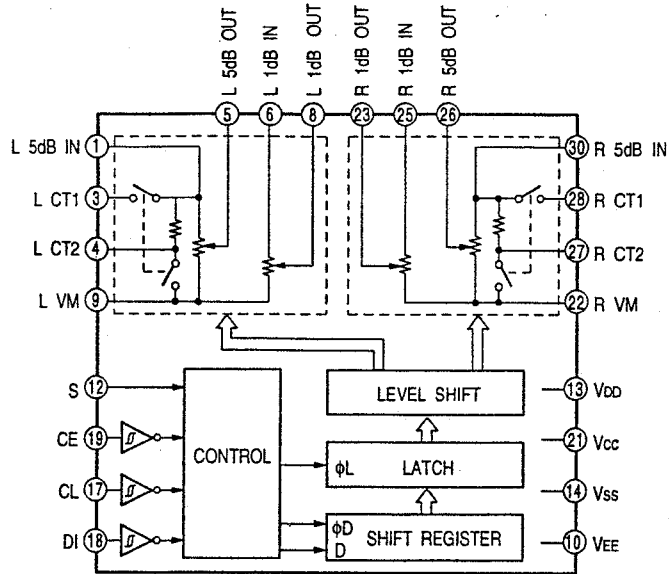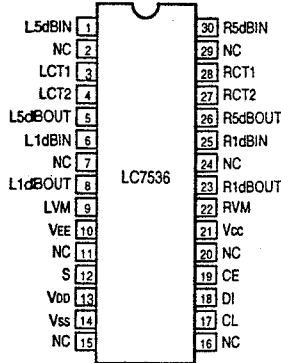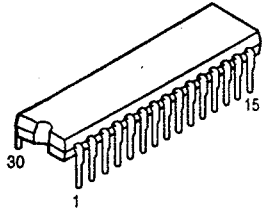

LC7536 Terminal Function

Pin No.	Symbol	I/O	Function
1	L 5dB IN	I	Input terminal for 5dB step attenuator, it should be driven with low impedance path.
2	NC	-	No connection.
3	L CT1	I	For loudness control, connect a capacitor between CT1 and 5dB IN with high frequency compensation, and also connect a capacitor between CT2 and Vm with low frequency compensation.
4	L CT2		
5	L 5dBOUT	O	Output terminal for 5dB step attenuator with approx. 1Mohm load impedance.
6	L 1dB IN	I	Input terminal for 1dB step attenuator, it should be driven with low impedance.
7	NC	-	No connection.
8	L 1dBOUT	O	Output terminal for 1dB step attenuator with approx. 47kohm ~ 1Mohm load impedance.
9	L Vm		Common terminal for volume control.
10	VEE	I	Connect to power supply.
11	NC	-	No connection.
12	S		Selection terminal for address code during data format.
13	VDD	I	Connect to power supply (Pay attention to the rising time so that Vcc does rise up faster than VDD when the power turns).
14	VSS	I	Connect to power supply.
15	NC	-	No connection.
16	NC	-	No connection.
17	CL	I	Input terminal for controlling LC7536 serial data with 0 ~ 5V amplitude.
18	DI		
19	CE		
20	NC	-	No connection.
21	Vcc	I	Connect power supply (Pay attention to the rising time so that Vcc does not rise up faster than VDD when the power turns).
22	R Vm		Common terminal for volume control.
23	R 1dBOUT	O	Output terminal for 1dB step attenuator with approx. 47kohm ~ 1Mohm load impedance.
24	NC	-	No connection.
25	R 1dB IN	I	Input terminal for 1dB step attenuator, it should be driven with low impedance.
26	R 5dBOUT	O	Output terminal for 5dB step attenuator with approx. 1Mohm load impedance.
27	R CT2	I	For loudness control, connect a capacitor between CT1 and 5dB IN with high frequency compensation, and also connect a capacitor between CT2 and Vm with low frequency compensation.
28	R CT1		
29	NC	-	No connection.
30	R SdB IN	I	Input terminal for 5dB step attenuator, it should be driven with low impedance path.

AK5340VS
(DS: IC101)

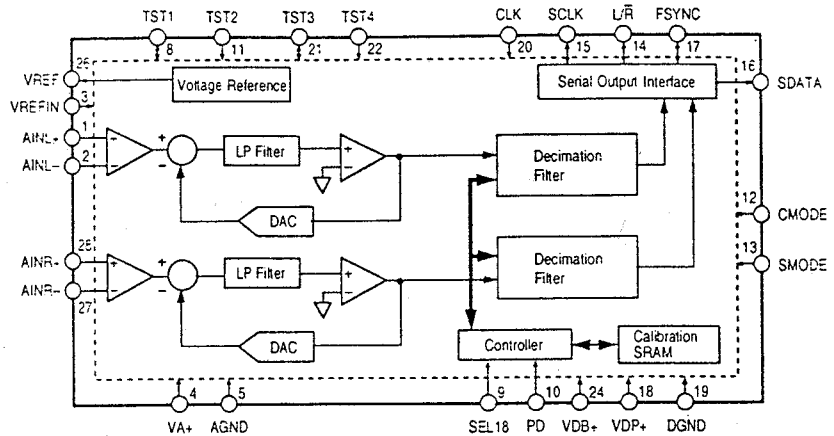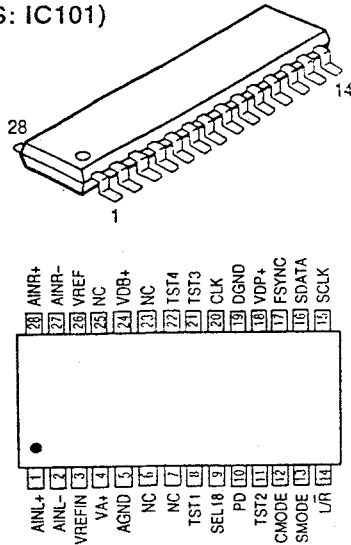


AK5340VS Terminal Function

Pin No.	Symbol	I/O	Function
1	AINL+	I	L ch analog non inverting input.
2	AINL-	I	L ch analog inverting input.
3	VREFIN	I	Reference voltage input.
4	VA+	—	Analog +5V power supply.
5	AGND	—	Analog ground.
6	NC		No connection.
7	NC		No connection.
8	TST1		Test terminal, open or connect to DGND.
9	SEL18	I	Output data length selecting terminal (built in pull down resistance) (L: 16 bit, H: 18 bit).
10	PD	I	Power down signal (H: Power down).
11	TST2		Test terminal, open or connect to DGND.
12	CMODE	I	Master clock selecting terminal. L: CLK = 256fs (12.288MHz @fs = 48kHz) H: CLK = 384fs (18.432MHz @fs = 48kHz)
13	SMODE	I	Interface clock selecting terminal (L: Slave mode, H: Master mode).
14	L/R	I/O	Input channel selecting terminal. Slave mode: fs clock input. Master mode: fs clock output.
15	SCLK	I/O	Serial data clock terminal. Slave mode: 32fs – 64fs clock input. Master mode: 64fs clock output.
16	SDATA	O	Serial data output terminal, data sequence output from MSB with 2's complement.
17	FSYNC	I/O	Frame sync clock terminal. Slave mode: Enable SDATA output at H. Master mode: 2fs clock output.
18	VDP+	—	Digital +5V power supply.
19	DGND	—	Digital ground.
20	CLK	I	Master clock input terminal. CMODE = "H" = 384fs CMODE = "L" = 256fs
21	TST3		Test terminal, open or connect to DGND.
22	TST4		Test terminal, open or connect to DGND.
23	NC		No connection.
24	VDB+	—	Digital +5V power supply.
25	NC		No connection.
26	VREF	O	Reference voltage output.
27	AINR-	I	R ch analog inverting input.
28	AINR+	I	R ch analog non inverting input.

Note: All other terminals except the above are no connection (NC). NC terminals are not bonded internally.



M35015-204SP
(VI: IC414)

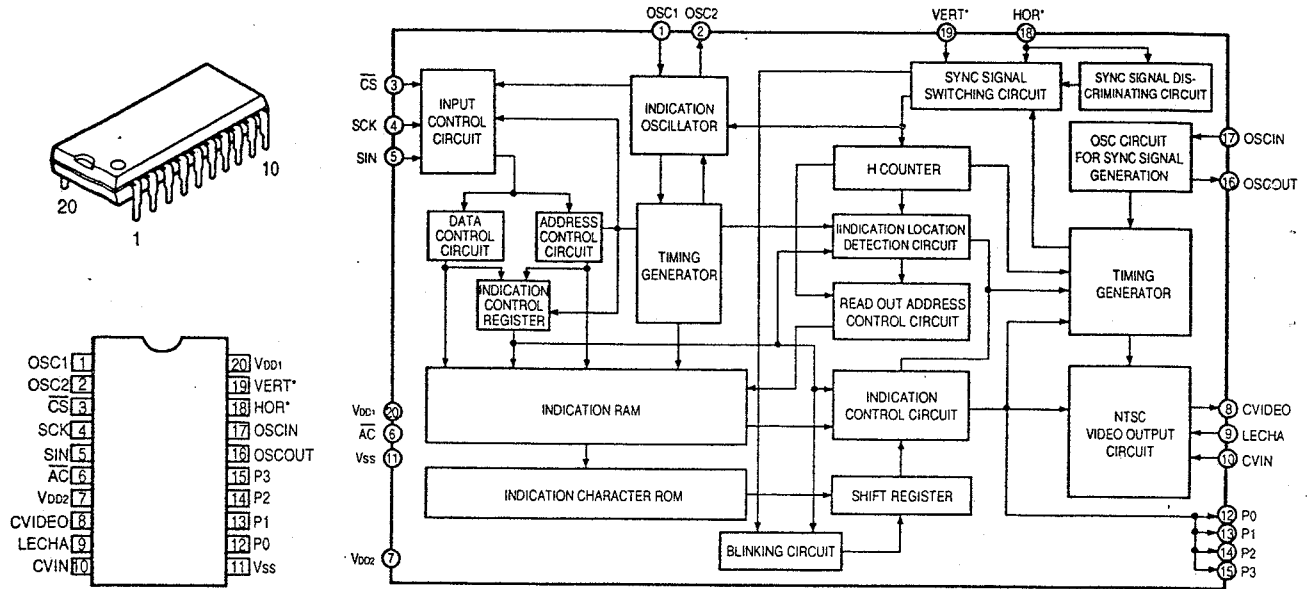




M35015-204SP Terminal Function

Pin No.	Symbol	Name	I/O	Function
1	OSC1	Osc. circuit ext. terminal.	I	External terminal for indication oscillator circuit. Standard OSC. freq. is approx. 7MHz.
2	OSC2		O	With this OSC. freq., decides horizontal indicatin and character width.
3	\overline{CS}	Chip select input	I	Chip select terminal and turns to "L" when transfer serial data. Hysteresis input. Pull up resistor is built-in.
4	SCK	Serial clock input	I	Takes in serial data of SIN at SCK rise when \overline{CS} terminal is in "L". Hysteresis input. Pull up resist is built-in.
5	SIN	Serial data input	I	Serial input of register for indication control and data, and address for indication data memory. Hysteresis input. Pull up resistor is built-in.
6	\overline{AC}	Auto-clear input	I	Resets internal circuit of IC at "L" mode. Hysteresis input. Pull up resistor is built-in.
7	VDD2	Power supply	—	Power supply terminal of analog system. Connect to +5V.
8	CVIDEO	Combined video output	O	Output terminal of combined video signal. Outputs 2Vp-p combined signal. Character output, etc. Overlap CVIN signal and outputs at superimpose.
9	LECHA	Character level input	I	Input terminal deciding character output level in combined video signal. color of character is white.
10	CVIN	Combined video input	I	Input terminal of external combined video signal. Character output etc. overlap this external combined video signal.
11	VSS	Ground	—	Ground terminal. Connect to GND.
12	P0	Output port p0	O	General output or character background signal BL NK1* output is switchable. Polarity can be selected at ROM mask.
13	P1	Output port P1	O	General output or character background signal CO1* output is switchable. Polarity can be selected at ROM mask.
14	P2	Output port P2	O	General output or character background signal BLNK2* output is switchable. Polarity can be selected at ROM mask.
15	P3	Output port P3	O	General output or character background signal CO2* output is switchable. Polarity can be selected at ROM mask.
16	OSCOUT	Ext. terminal for sync sig. OSC. Circuit	O	Terminal for external use of sync signal OSC. circuit. Use the freq.: 14.32MHz at NTSC system, 17.73MHz at PAL. system, 14.30MHz at MPAL system.
17	OSCIN		I	
18	HOR*	Horizontal sync signal	I	Inputs horizontal sync signal. Hysteresis input.
19	VERT*	Vertical sync signal	—	Input vertical sync signal. Hysteresis input. Polarity can be selected at ROM mask.
20	VDD1	Power supply	I	Power supply terminal of digital system. Connect to +5V.



ZR38500 (A3) (DS: IC001)

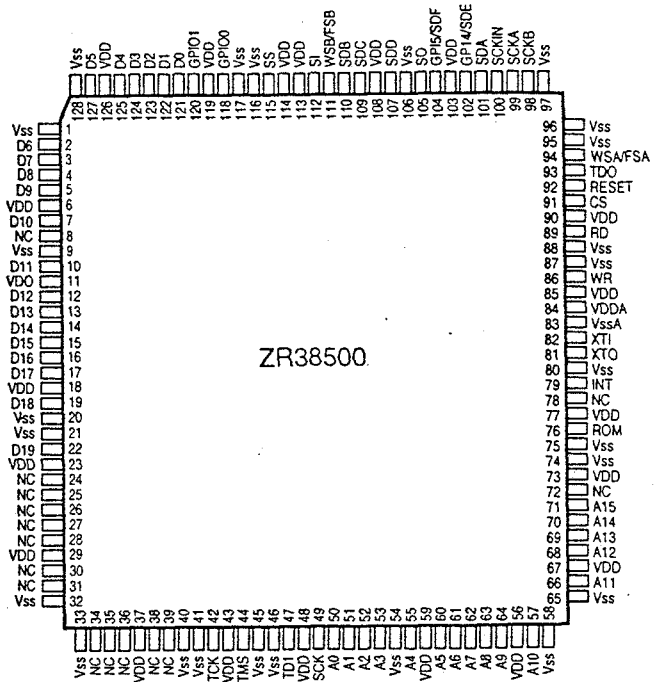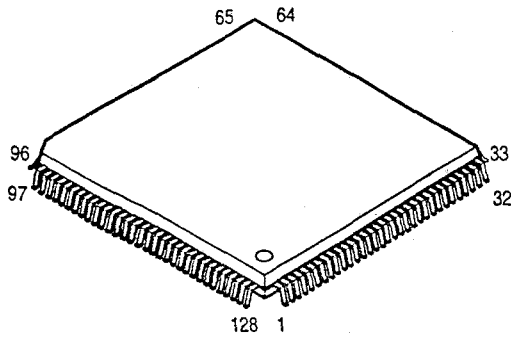

NJU7313AL (DS: IC208) (AU: IC605)

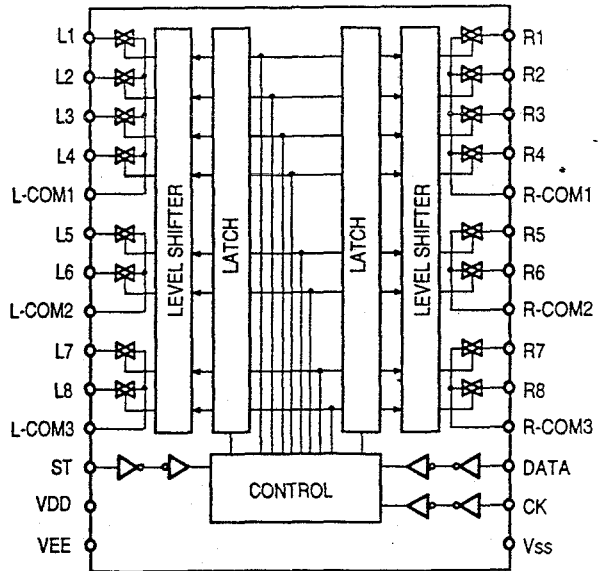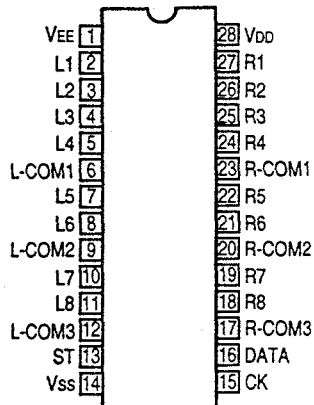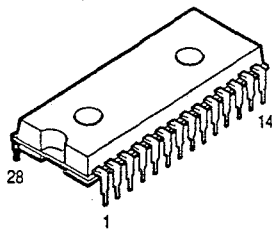

TC9273N-004 (AU: IC111) (Pr: IC751)

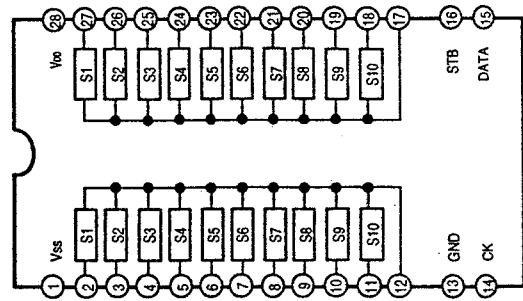
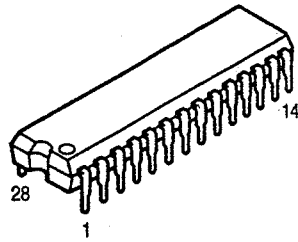


TC9273N-004 Terminal Function

Pin No.	Symbol	I/O	Function
1	Vss	-	Use for double power supply: VDD = 8.0 ~ 17V GND = 0V Vss = -8.0 ~ -17V Use for signal power terminal: VDD = 8.0 ~ 18V Vss = GND = 0V
2-12	S1-10	I	Analog switch input terminal.
13	GND	-	Use for double power supply: VDD = 8.0 ~ 17V GND = 0V Vss = -8.0 ~ -17V Use for signal power terminal: VDD = 8.0 ~ 18V Vss = GND = 0V
14	CK	I	Clock input for data transfer.
15	DATA	I	Serial input for switch setting.
16	STB	I	Strobe input for data reading.
17-27	S1-10	I	Analog switch input terminal.
28	VDD	-	Use for double power supply: VDD = 8.0 ~ 17V GND = 0V Vss = -8.0 ~ -17V Use for signal power terminal: VDD = 8.0 ~ 18V Vss = GND = 0V




PCM69AP

(DS: IC504, 505, 506)

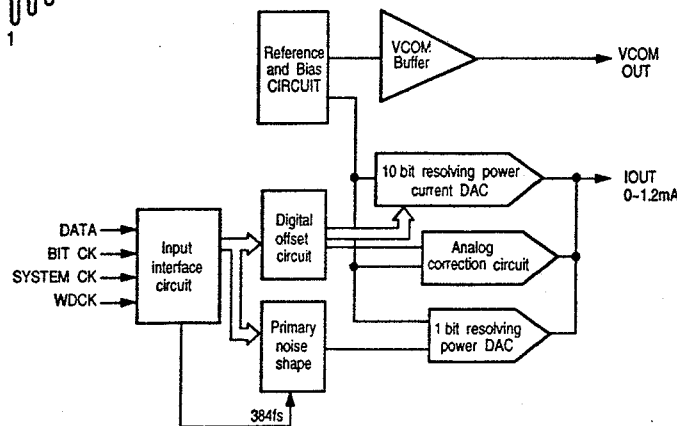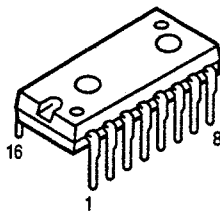





Pin No.	Function
1	+Vcc (Analog power supply)
2	Vcom. Lch
3	Lout. Lch
4	Servo. DC
5	REF. DC
6	Lout. Rch
7	Vcom. Rch
8	A-GND (Analog common)
9	D-GND (Digital common)
10	DATA Rch
11	BCK
12	SYS CLK
13	WDCK
14	DATA Lch
15	TP1
16	+VDD (Digital power supply)

M66310FP
(VI: IC101)

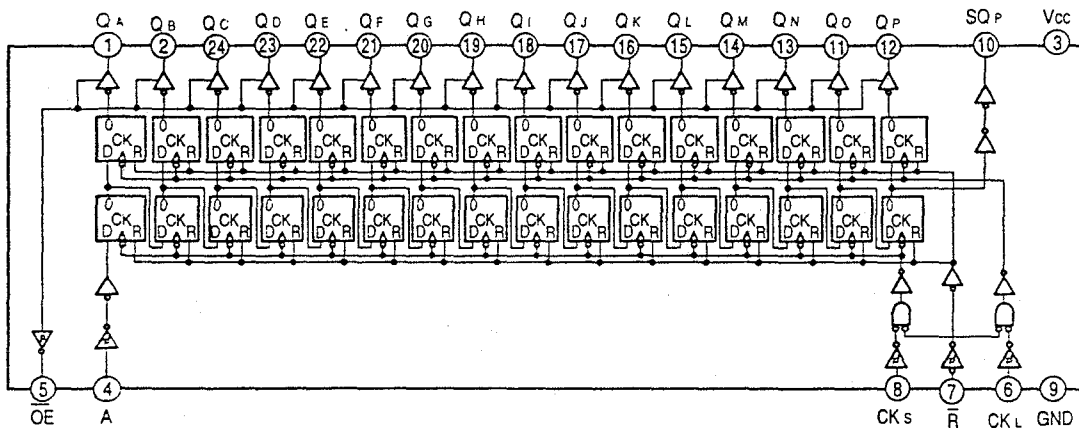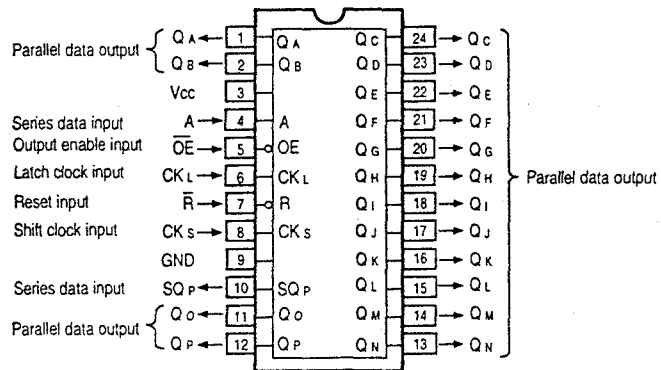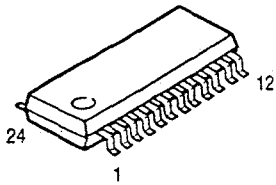






- SG-531PH (33MHz)
(DS: IC003)
- SG-531PH (46.08MHz)
(DS: IC307)
- SG-531PH (12.288MHz)
(DS: IC102)

NJM360M
(DS: IC303)

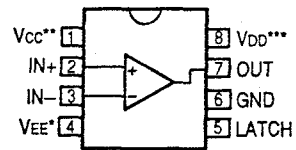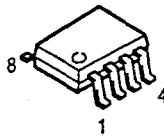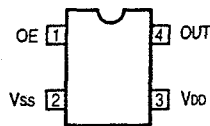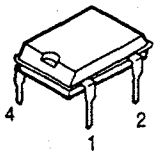


* ANALOG V- AND SUBSTRATE
** ANALOG V+
*** ANALOG V+






HD74HC14FP (DS: IC021)
 HD74HC74FP (DS: IC016)
 TC74HC00AF (DS: IC019)
 TC74HCU04AF (DS: IC304, 309, 314)

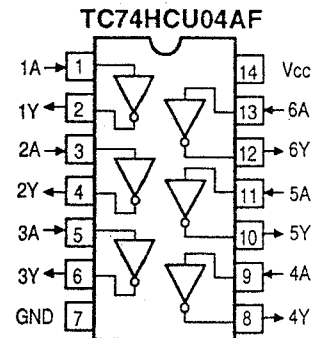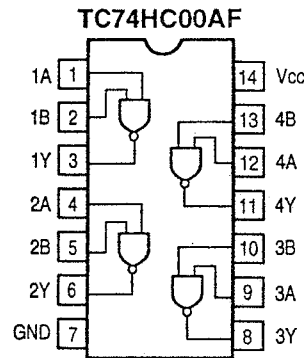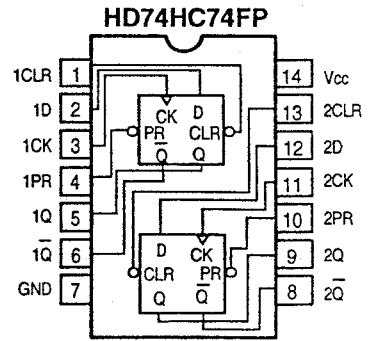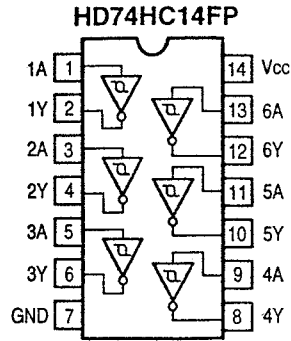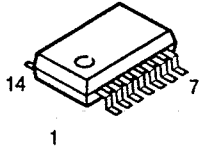




BA4510F (DS: IC103, 104)
 BA10393F (DS: IC105)
 BA15218F (DS: IC302, 305)
 (AU: 104~109)
 NJM5532MD (AU: IC102, 103, 114, 601~604)
 (Pr: IC603, 606)
 NJM2068MD (Pr: IC602, 605)
 (DS: IC154~156, 201~207, 507~509)
 (AU: IC101, 113, 501, 502, 505~508)

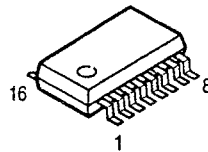



HD74HC157FP (DS: IC017)
 TC74HC123AF (DS: IC020)
 TC74HC151AF (DS: IC315)

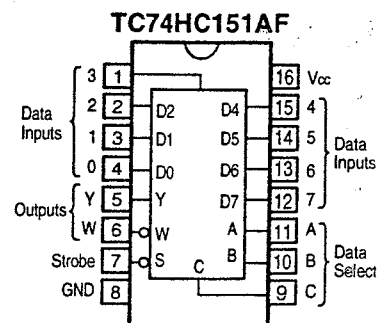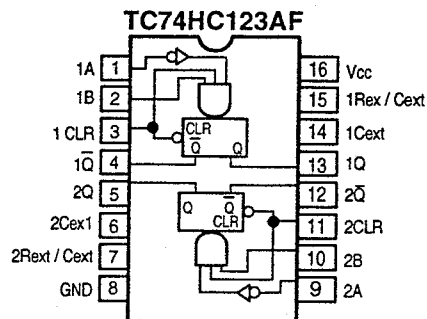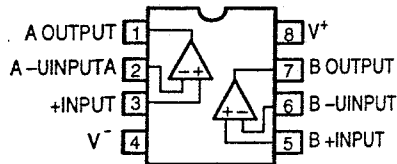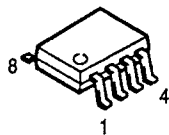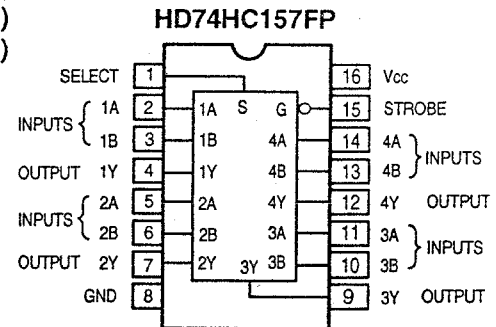

PD4606A
(DS: IC306)

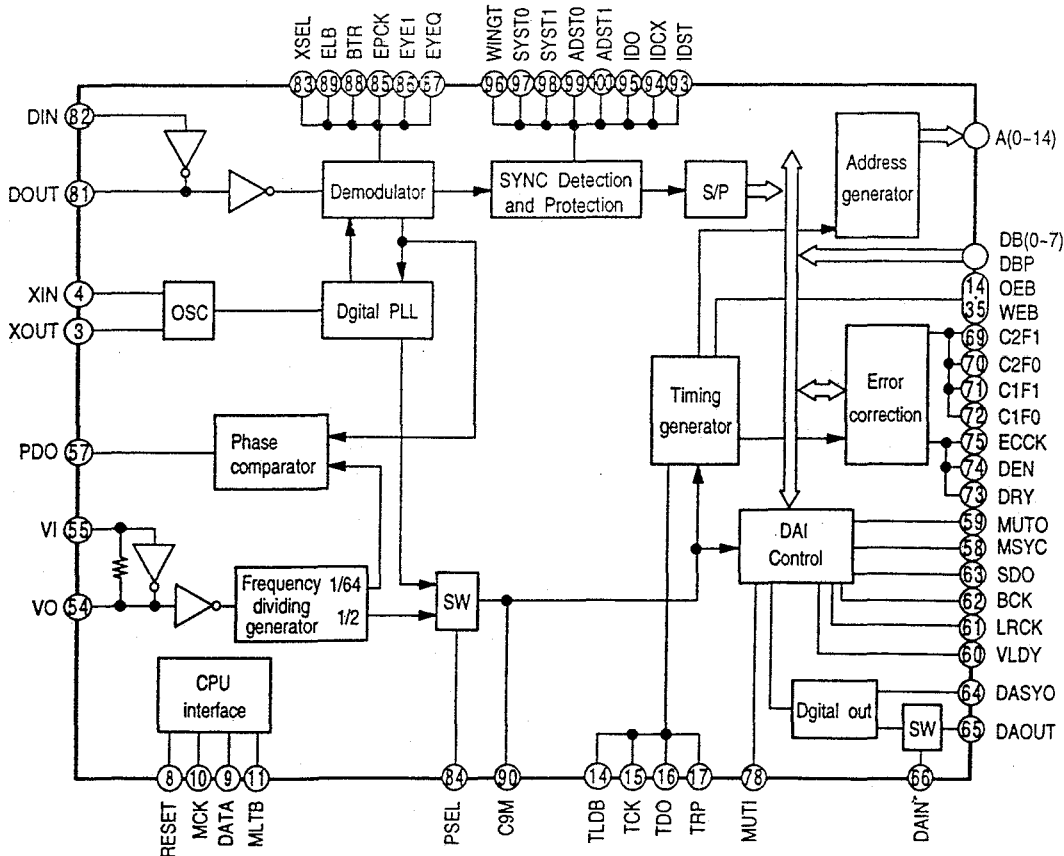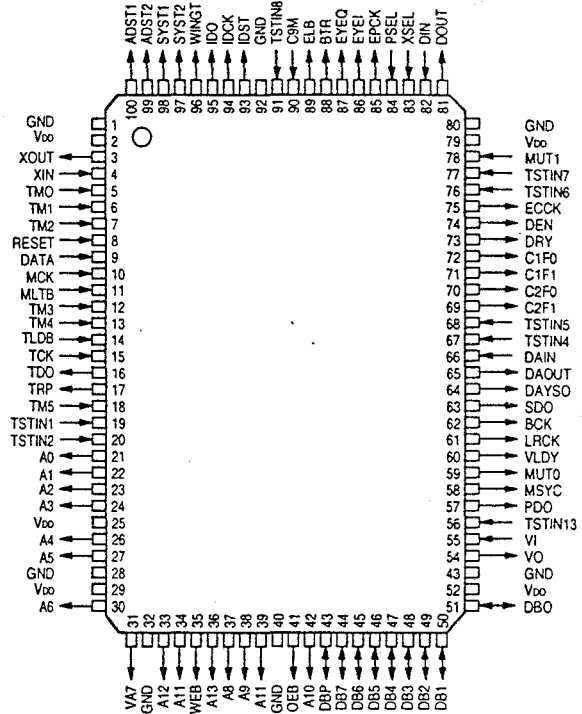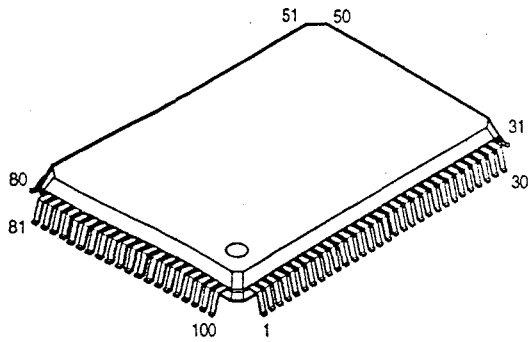



MC74HC4053N
(VI: IC413)

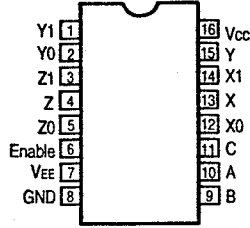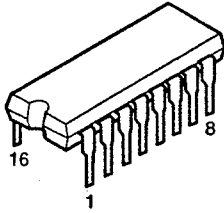



		Control Inputs			ON Switches		
		Select					
Enable		C	B	A	Z0	Y0	X0
		L	L	L	L	Z0	Y0
L	L	L	H	Z0	Y0	X1	
L	L	H	L	Z0	Y1	X0	
L	L	H	H	Z0	Y1	X1	
L	H	L	L	Z1	Y0	X0	
L	H	L	H	Z1	Y0	X1	
L	H	H	L	Z1	Y1	X0	
L	H	H	H	Z1	Y1	X1	
H	X	X	X	None			

X = Don't Care


NJM2229S (VI: IC415)

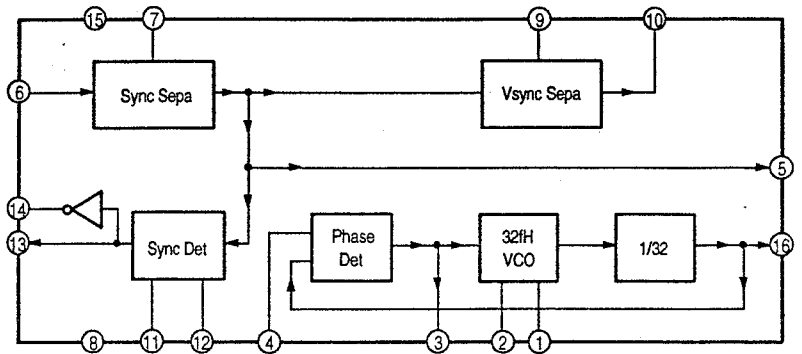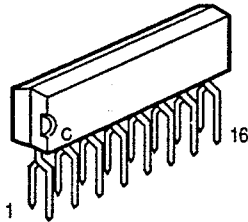


CX20106A
(DS: IC317)

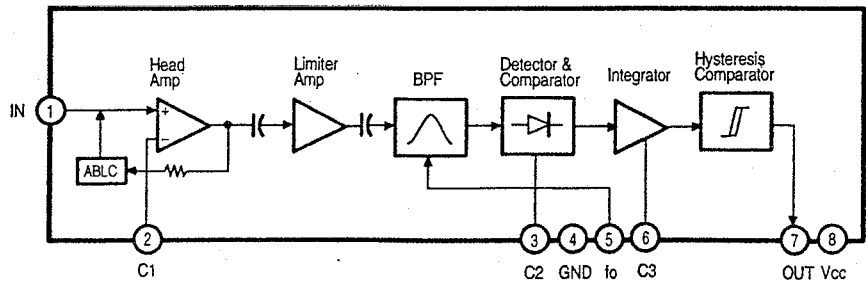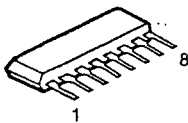


● IC PROTECTOR
ICP-N15 (AU: IC307) (PS: IC401)

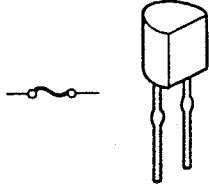



● OPTICAL
INPUT
GP1F32R
(DS: IC310)

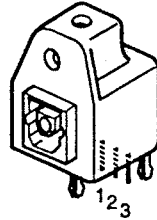

1. Vcc
2. GND
3. Vout

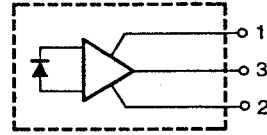


● OTHER
GP1U271X (Remote Control Sensor)
(Pr: IC461)

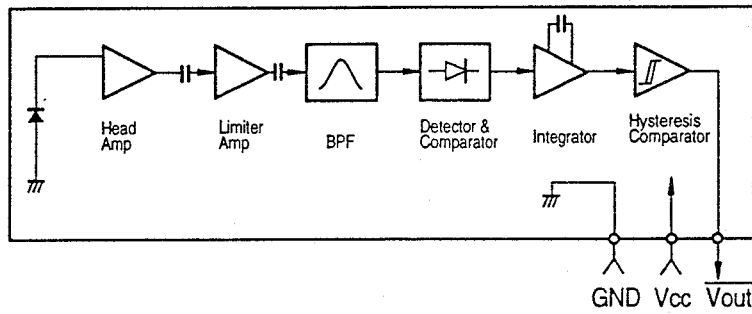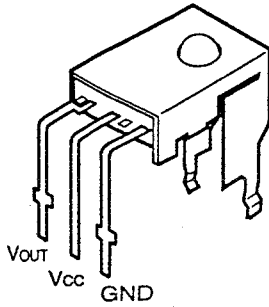


● TRANSISTORS


2SA970 (BL)
 2SA988 (E/F)
 2SC1815 (Y), (BL)
 2SC2878 (A/B)

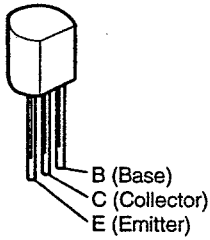


2SA1145 (O)/(Y)
 2SB1041 (R)
 2SC2705 (O)/(Y)
 2SD1292 (R)

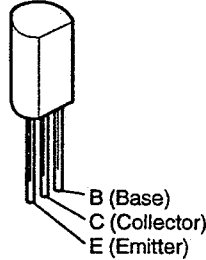


2SB1317 (s)
 2SD1975 (s)

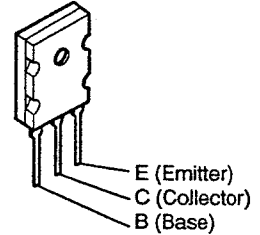

DTA114ES
 DTC143ES
 DTC144ES

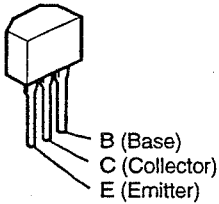


DTA114ES

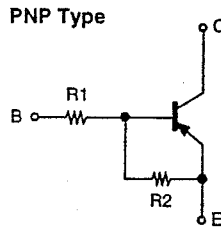


	R1	R2
DTA114ES	10kohm	10kohm

DTC143ES
 DTC144ES

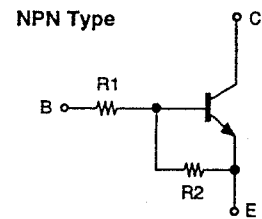


	R1	R2
DTC143ES	4.7kohm	4.7kohm
DTC144ES	47kohm	47kohm

DTA114EK
 DTA124EK
 DTA143EK
 DTA144EK
 DTC114EK
 DTC144EK

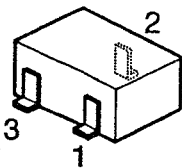


1: GND/Emitter
 2: Out/Collector
 3: In/Base

DTA114EK
 DTA124EK
 DTA143EK
 DTA144EK

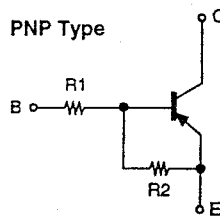


	R1	R2
DTA114EK	10kohm	10kohm
DTA124EK	22kohm	22kohm
DTA143EK	4.7kohm	4.7kohm
DTA144EK	47kohm	47kohm

DTC114EK
 DTC144EK

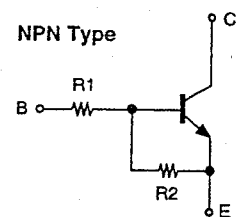


	R1	R2
DTC114EK	10kohm	10kohm
DTC144EK	47kohm	47kohm


2SA933S (S)
2SC1740S (E)

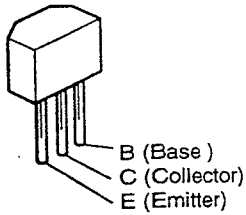


2SK184 (GR)/(BL)

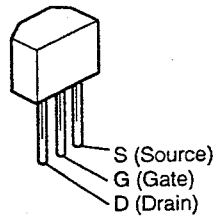


2SK209 (GR)

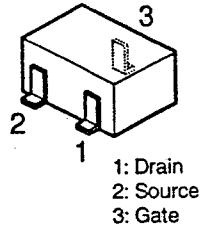


2SA1037K (S/R)
2SC2412K (S)

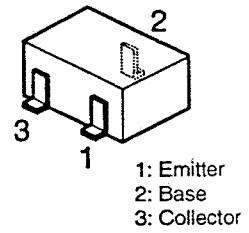

2SB1328 (P/Q)
2SD2004 (P/Q)

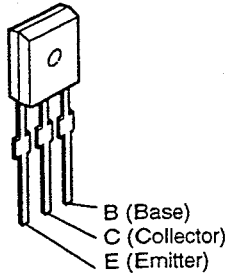


2SA1633F31

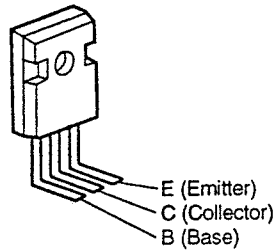


● DIODES (included LED)


1SS270A
1S2076A




MTZJ3.3A MTZJ36A
MTZJ6.2A HZS5A-1
MTZJ7.5A HZS7C-1
MTZJ9.1A HZS12A-1




1SR35-200A

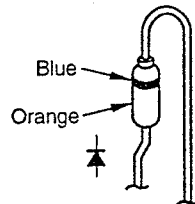


DSM1D2 (Type 3)

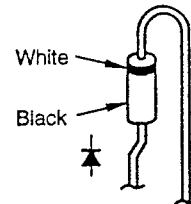


KV1851-TL
(DS: CD301)

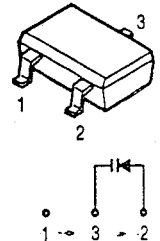


4D4B42(LC1)
(PS: D901)

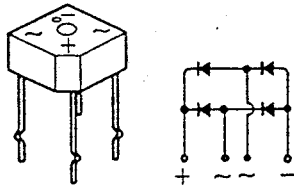


SEL1210S (Red)
(VI: LD101~108,111)
SEL4214S
(Pr: LD461)

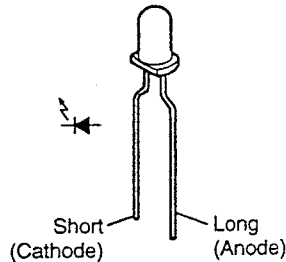


SML1216W
(VI: LD109, 110)

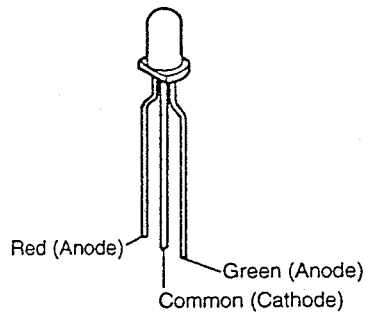

S10VB20F9 (D450)

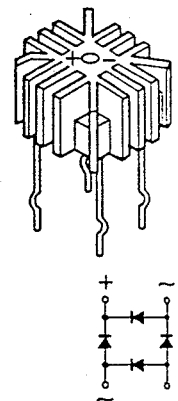


MA151A
(DS: D001~003)

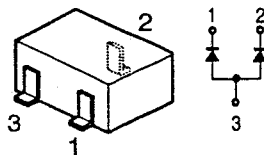

1: Cathode
2: Cathode
3: Anode

● DISPLAY

FL DISPLAY FIP16FM7R (Part No.: 3934156001) (VI: FL101)

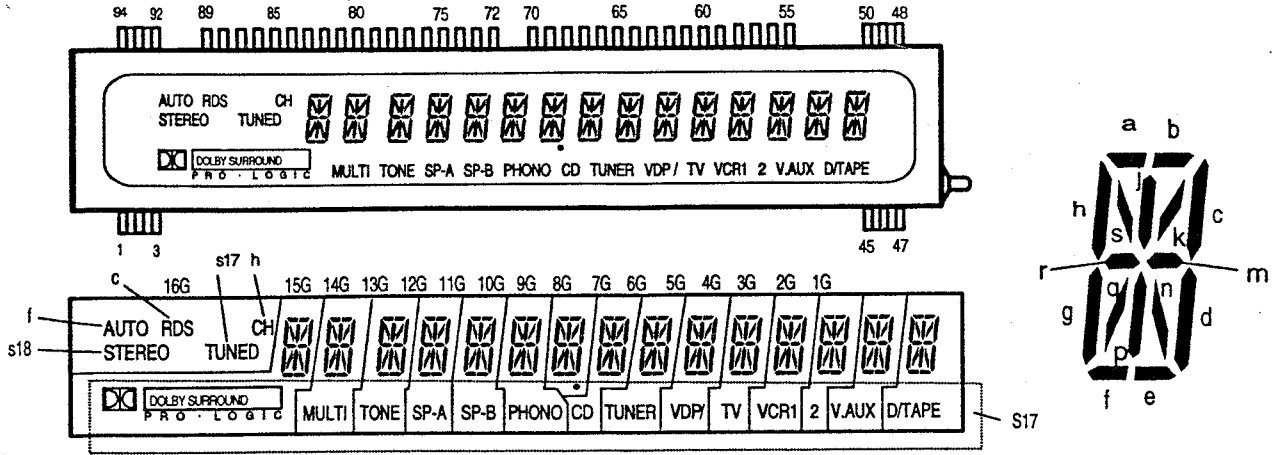

(UPPER)



TERMINAL No.	94	93	92	91	90	89	88	87	86	85	84	83	82	81						
ELECTRODE	F1	F1	F1	NP	NP	P	P	P	P	P	P	P	P	P						
TERMINAL No.	80	79	78	77	76	75	74	73	72	71	70	69	68	67	66	65	64	63	62	61
ELECTRODE	P	P	P	P	P	P	P	P	P	NP	16G	15G	14G	13G	12G	11G	10G	9G	8G	7G
TERMINAL No.								60	59	58	57	56	55	54	53	52	51	50	49	48
ELECTRODE								6G	5G	4G	3G	2G	1G	NP	NP	NP	NP	F2	F2	F2

(LOWER)

TERMINAL No.								35	36	37	38	39	40	41	42	43	44	45	46	47
ELECTRODE								NP	NP	NP	NP	NP	NP	NP	NP	NP	NP	F2	F2	F2
TERMINAL No.	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33	34
ELECTRODE	NP	NP	NP	NP	NP	NP	NP	NP	NP	NP	NP	NP	NP	NP	NP	NP	NP	NP	NP	NP
TERMINAL No.	1	2	3	4	5	6	7	8	9	10	11	12	13	14						
ELECTRODE	F1	F1	F1	NP	NP	NP	NP	NP	NP	NP	NP	NP	NP	NP						

Notes: F: Filament G: Grid A: Anode NP: No Pin

LB-303VA
(VI: LD114)

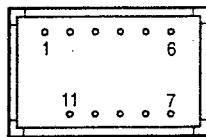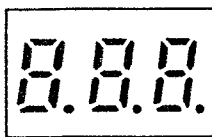


(BOTTOM VIEW)




Pin connection

Pin No.	Function
1	c Segment cathode
2	Digit 1 common anode
3	d Segment cathode
4	Digit 2 common anode
5	Digit 3 common anode
6	D.P cathode
7	b Segment cathode
8	f Segment cathode
9	a Segment cathode
10	e Segment cathode
11	g Segment cathode

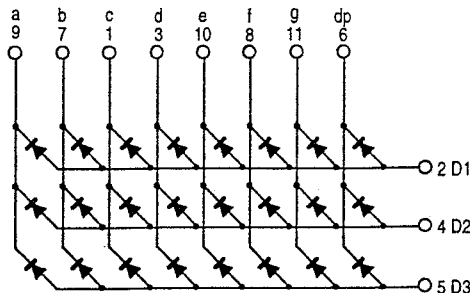

1 2 3 4 5 6 7 8

1U-2948 AUDIO IN UNIT ASS'Y

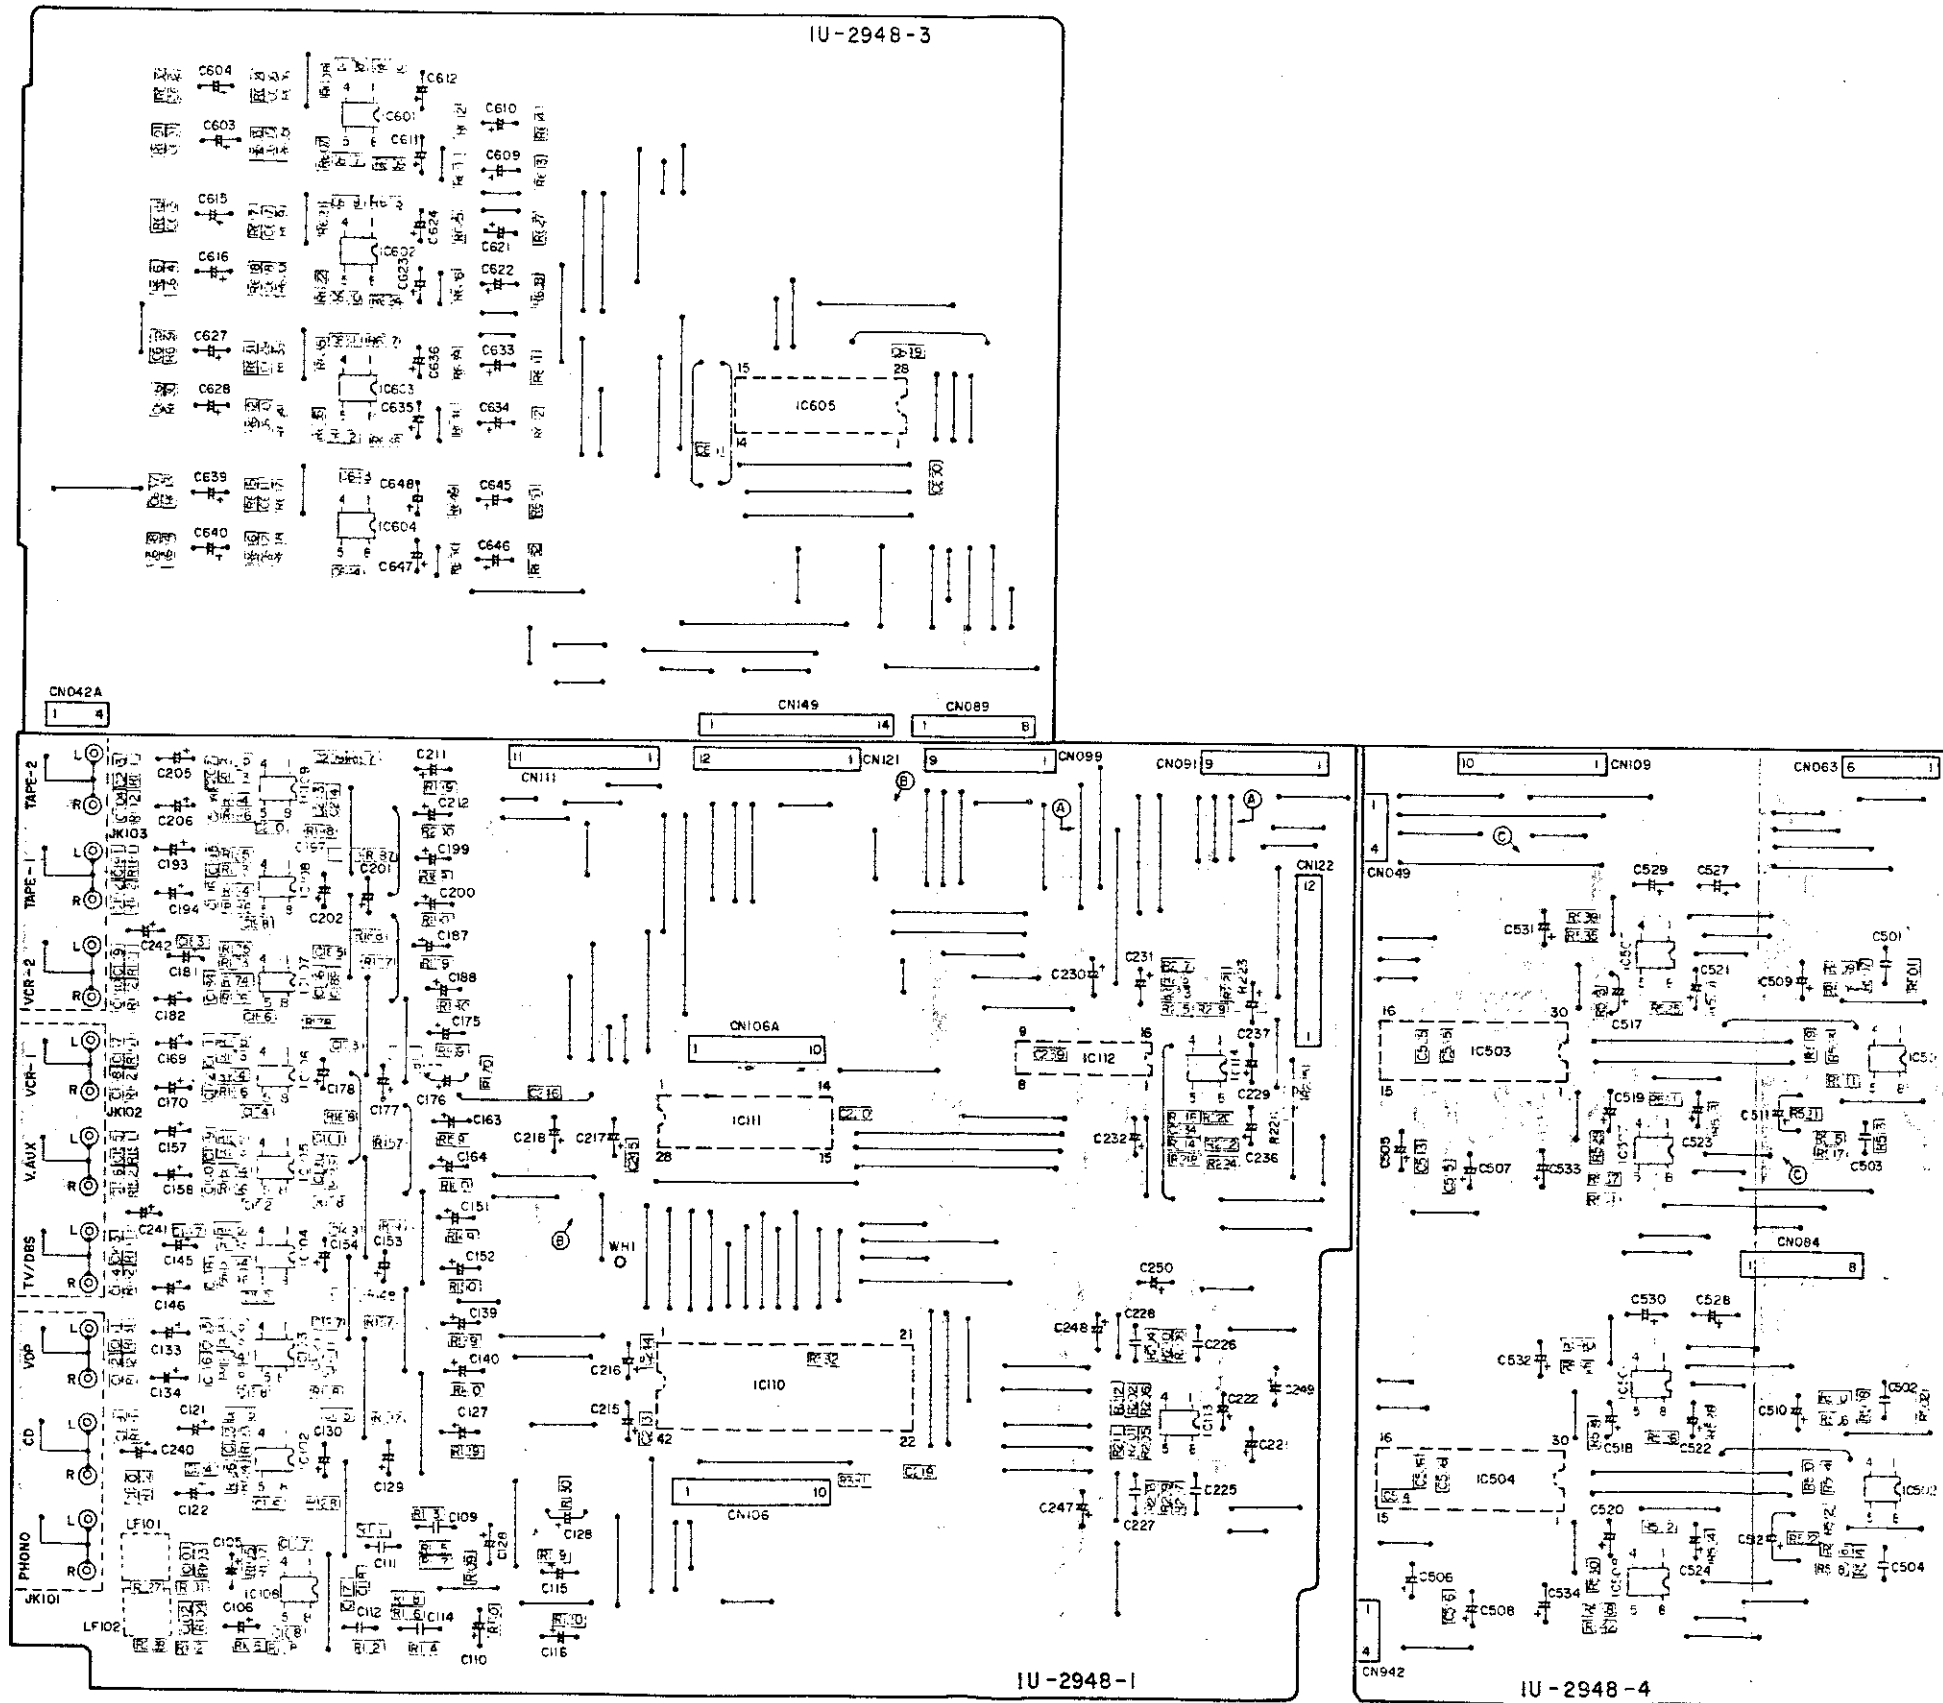

A
B
C
D
E


A

B

C


D

E

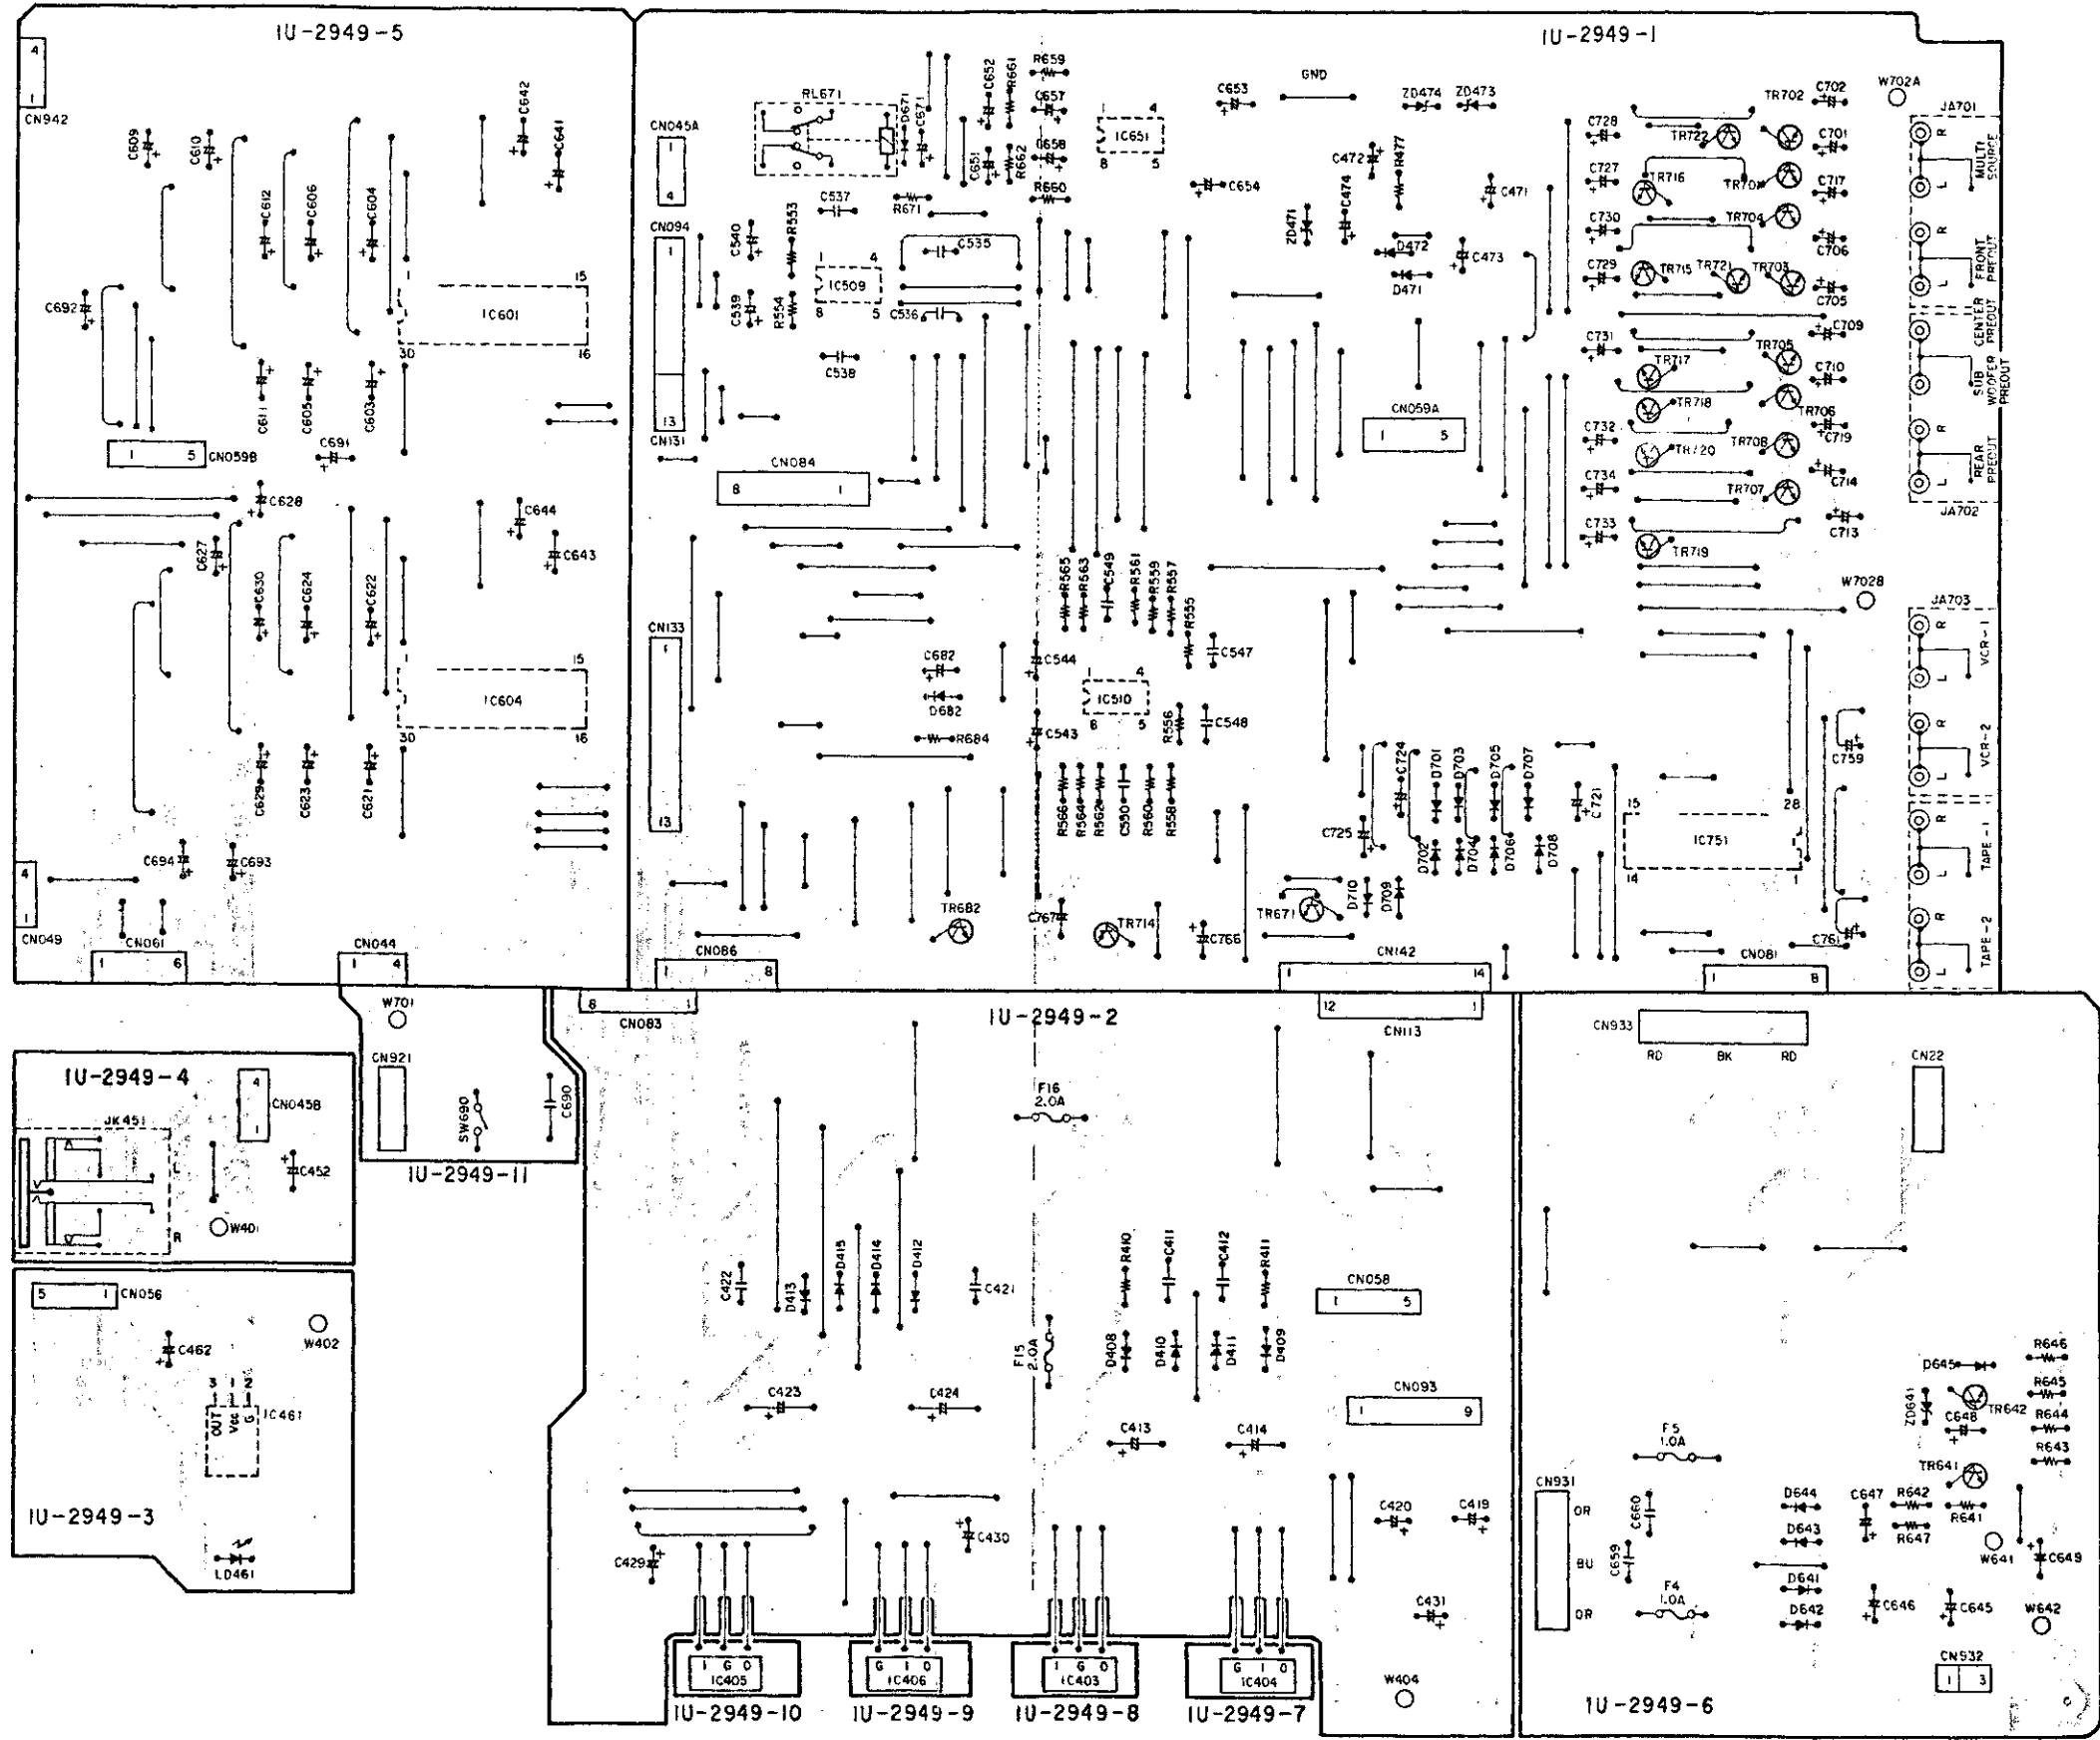

1 2 3 4 5 6 7 8

1U-2951 S-VIDEO UNIT ASS'Y

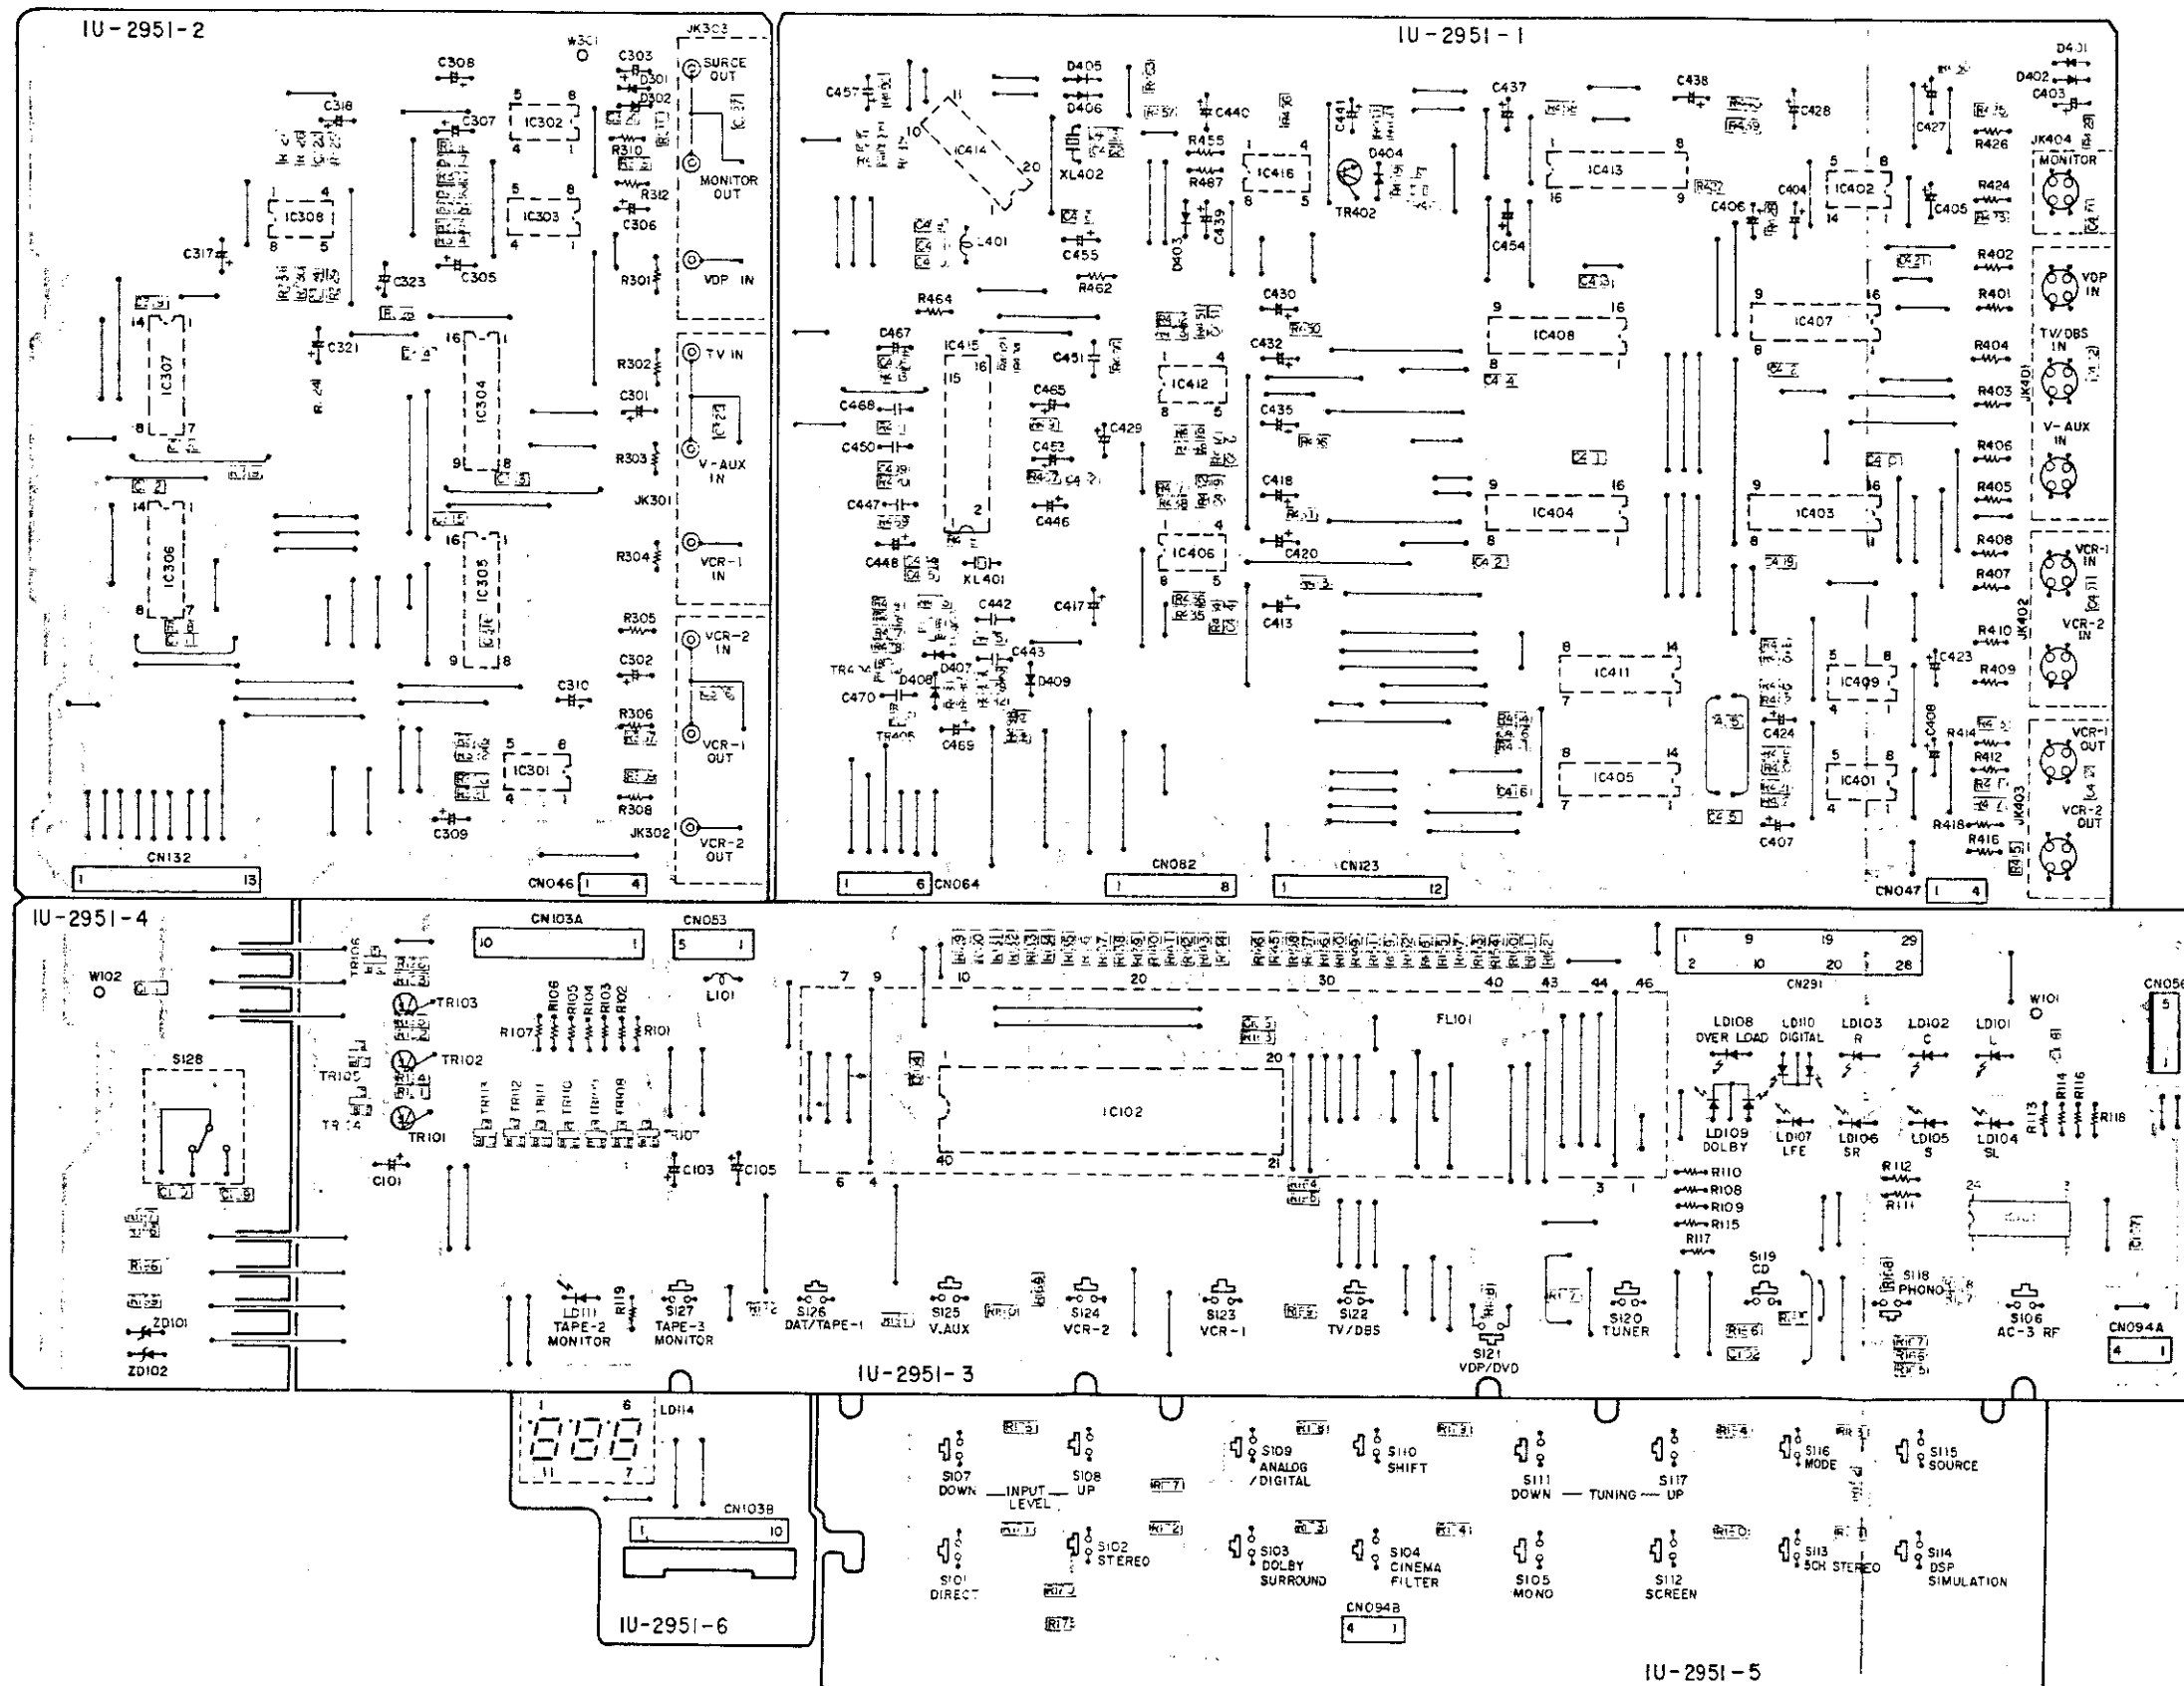

A
B
C
D
E

1 2 3 4 5 6 7 8

1U-2952 POWER AMP.-1 UNIT ASS'Y



A

B

C



D

E

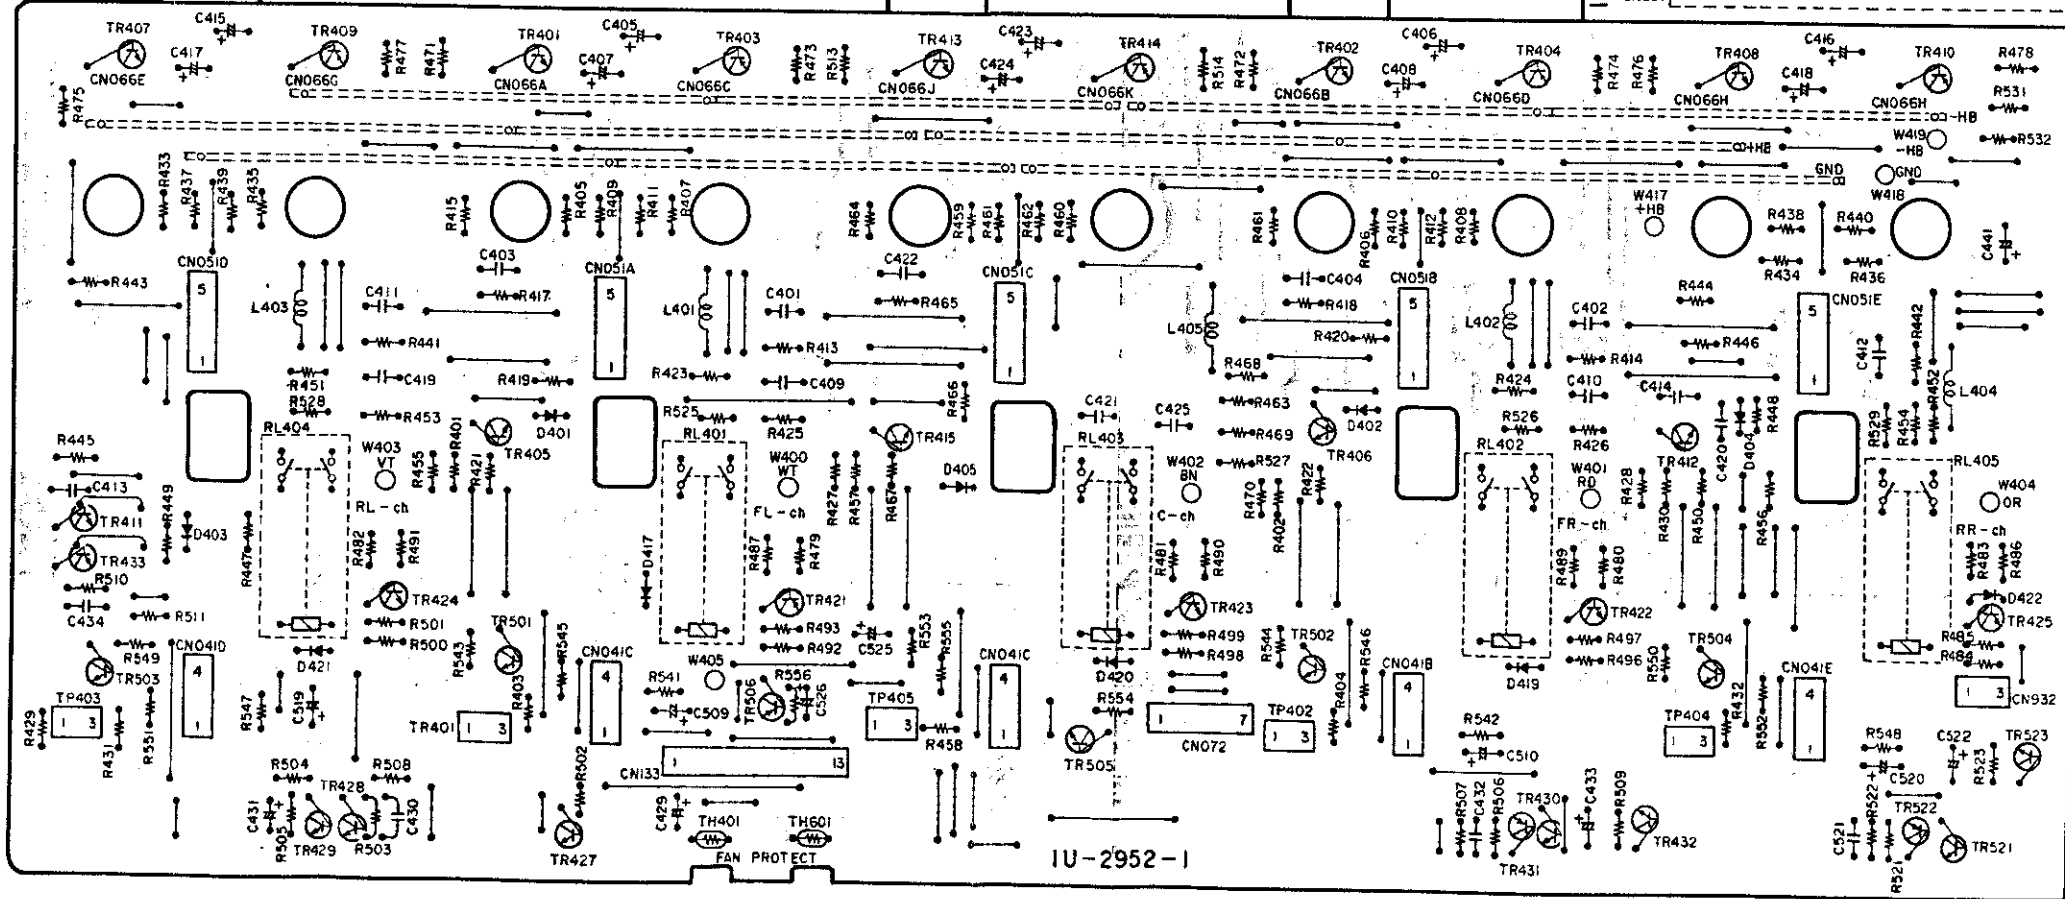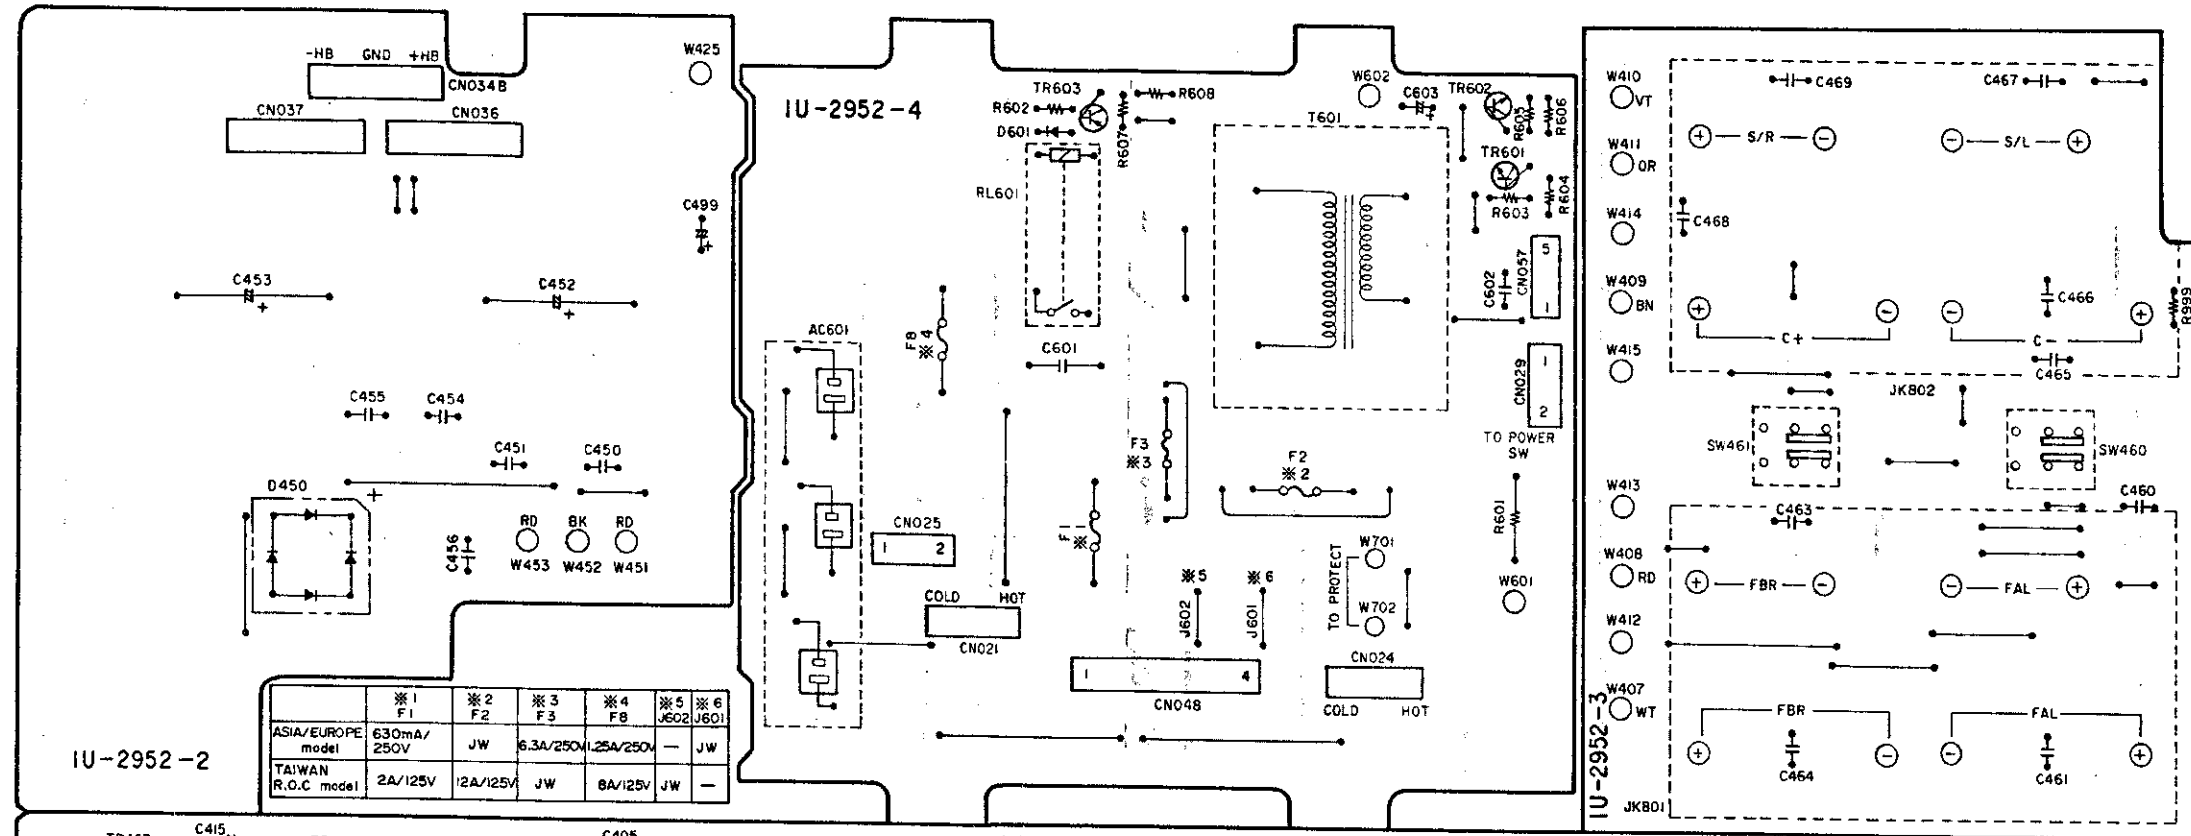


1 2 3 4 5 6 7 8

1U-2958 POWER SUPPLY-3 UNIT ASS'Y

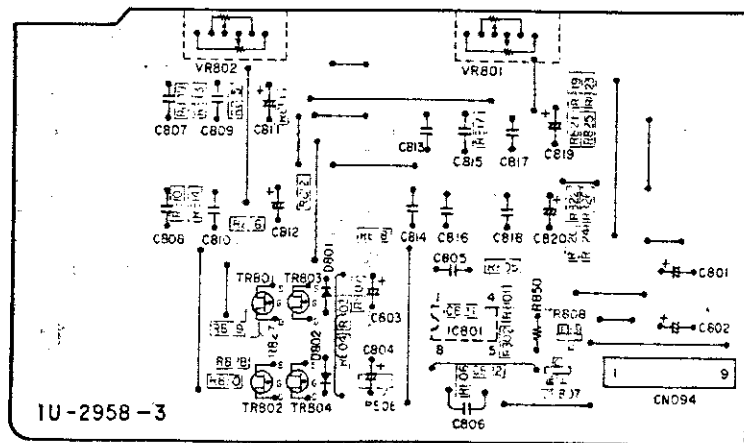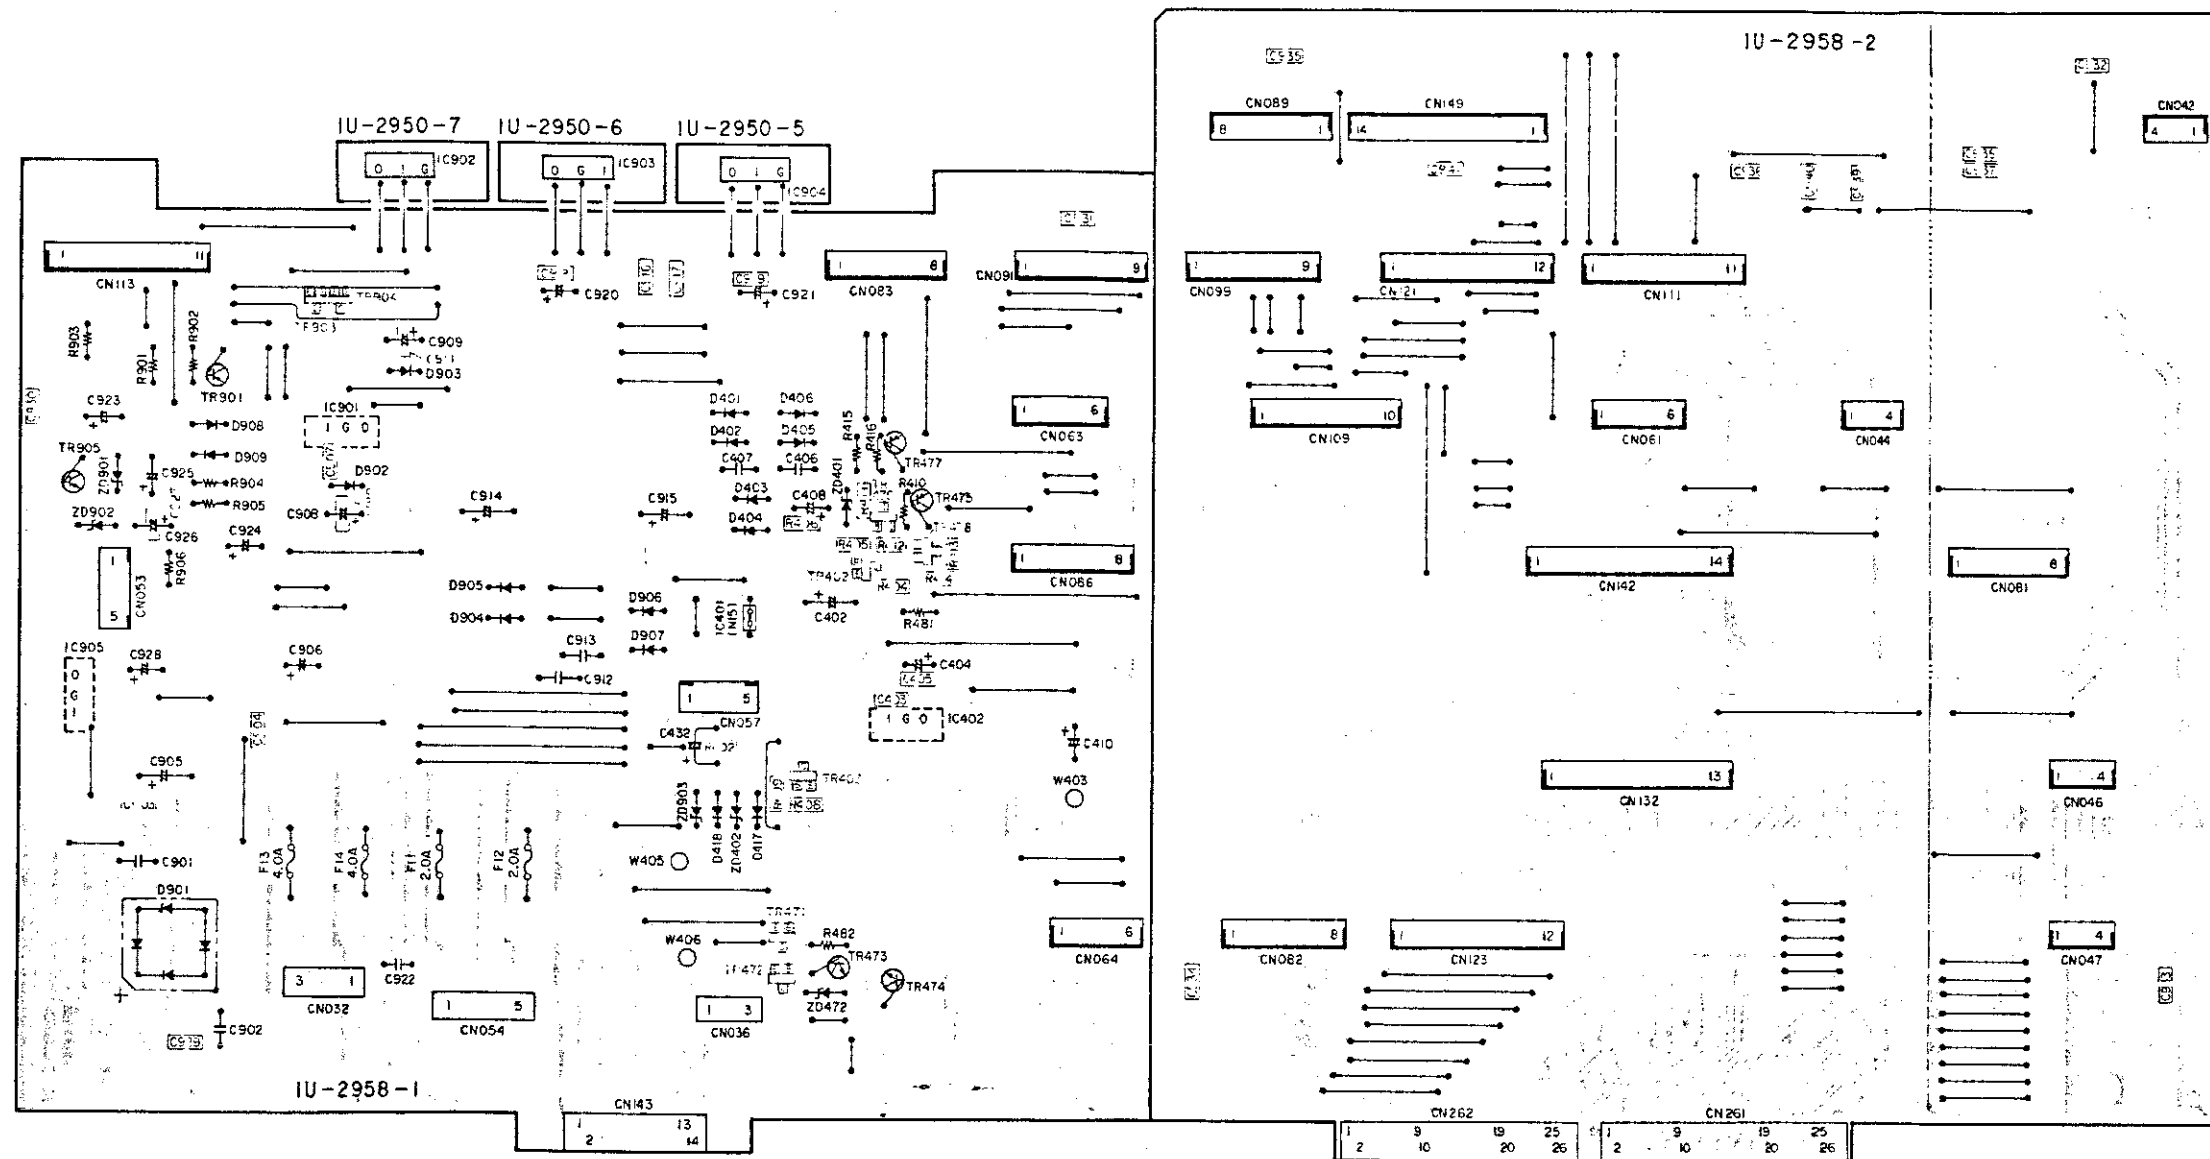

1U-2944 POWER AMP.-2 UNIT ASS'Y

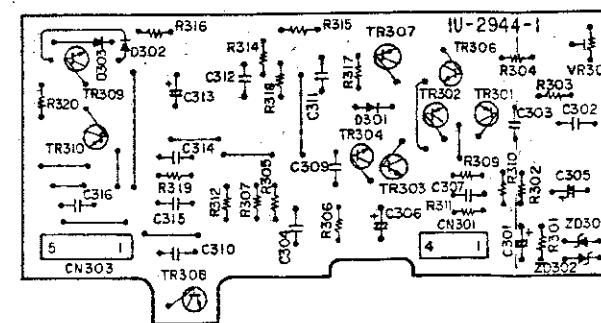

A
B
C
D
E

1

2

3

4

5

6

7

8

1U-2959 DSP UNIT ASS'Y



A

B

C

D

E

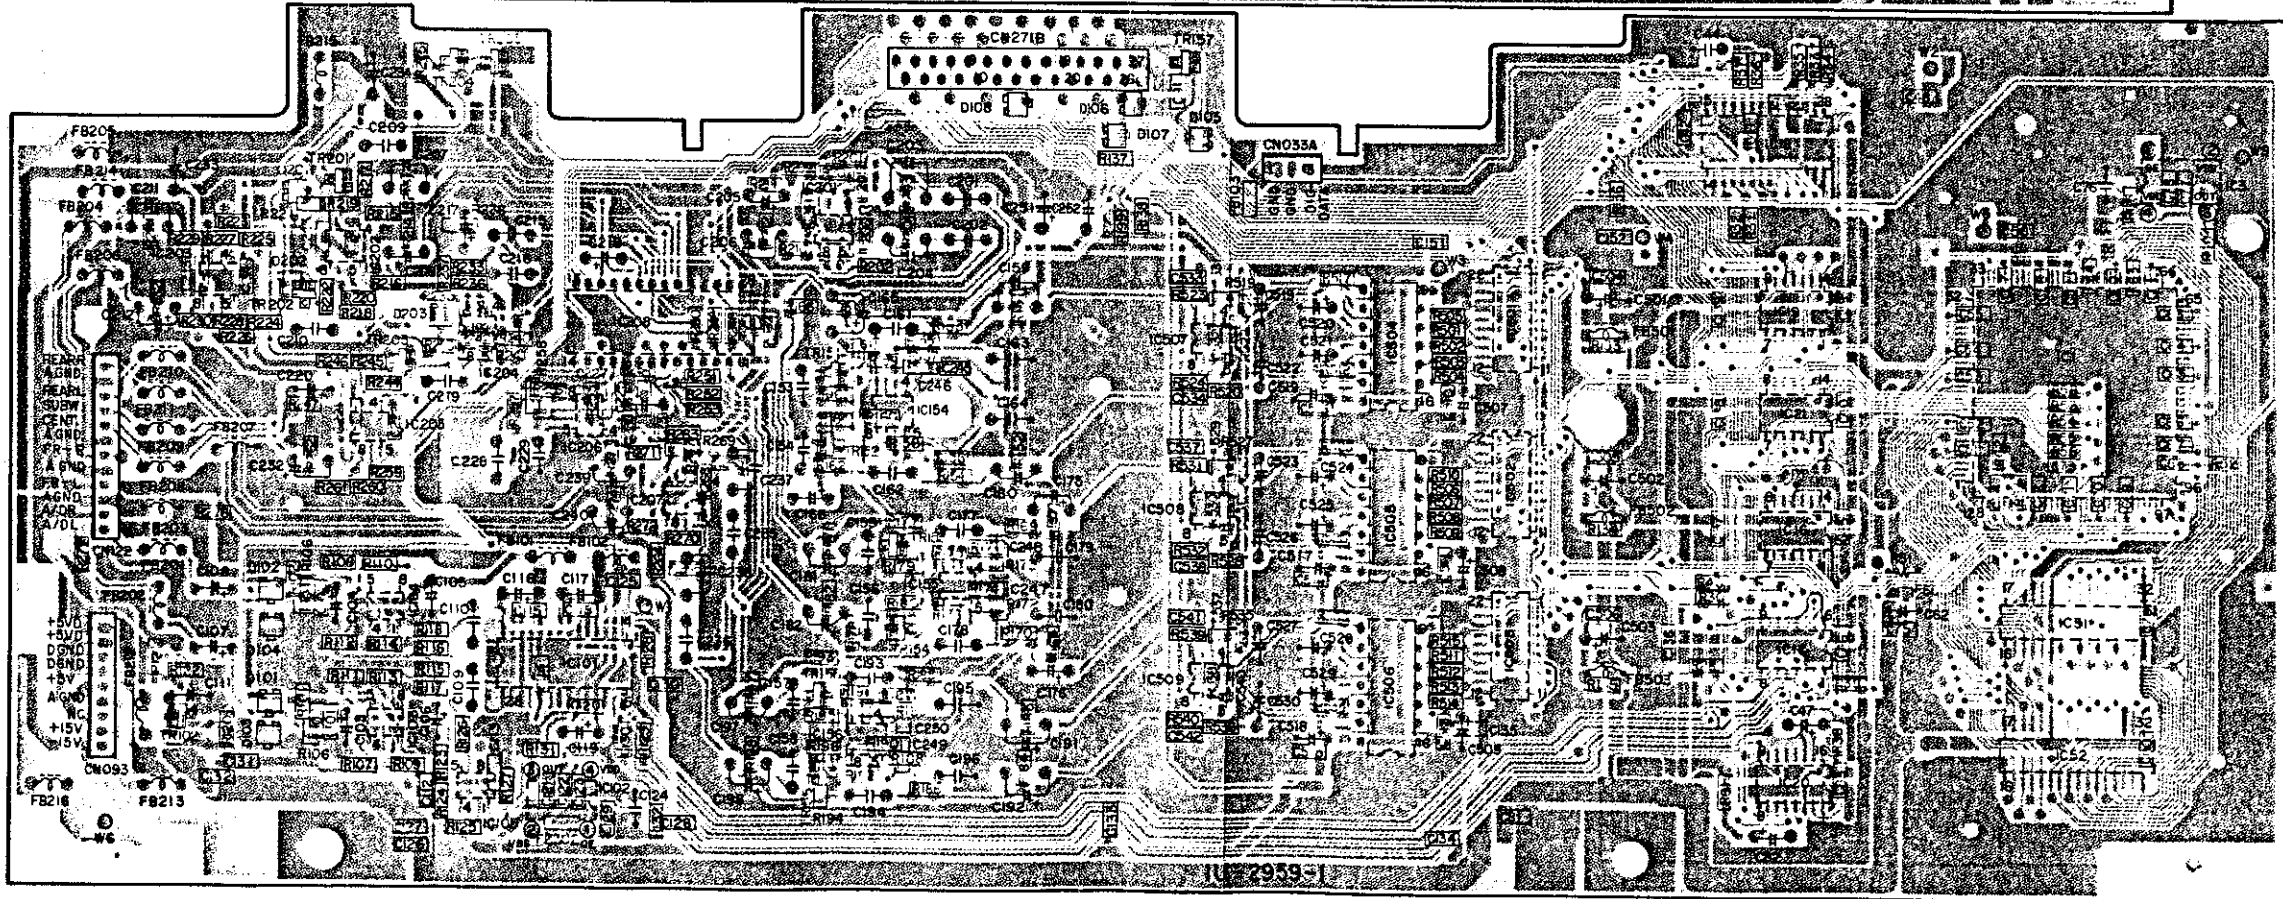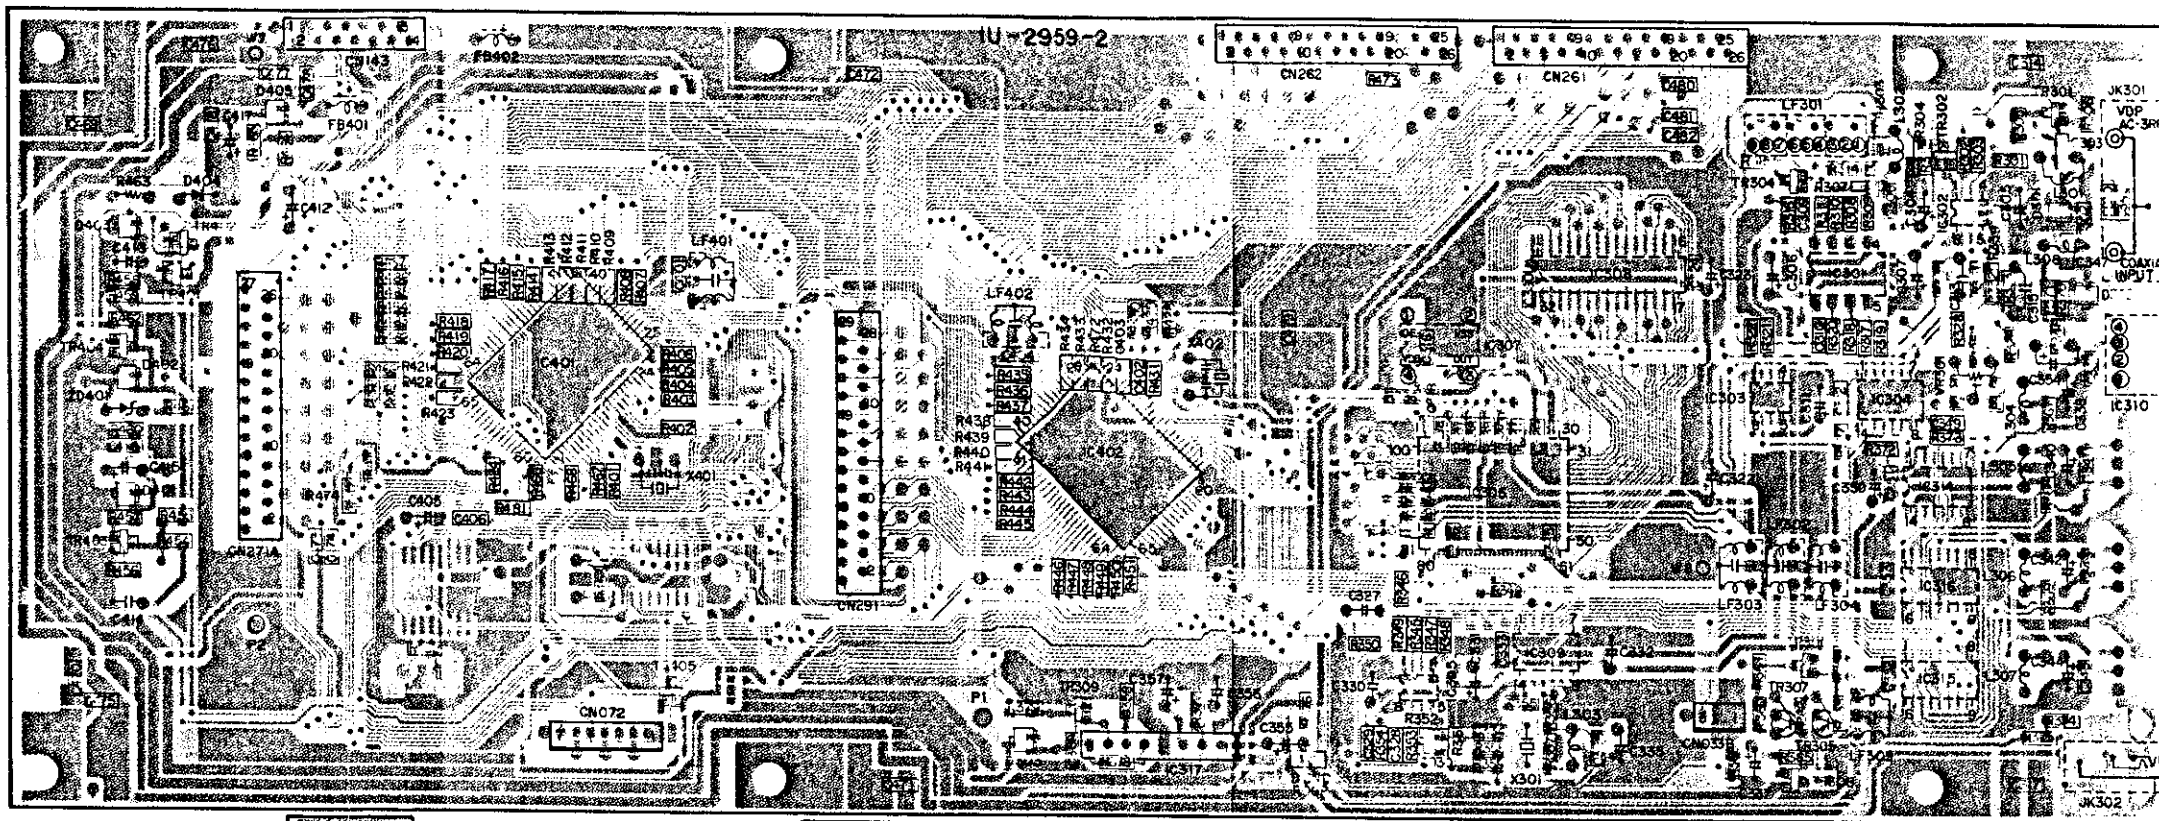

NOTE FOR PARTS LIST

- Part indicated with the mark "⊙" are not always in stock and possibly to take a long period of time for supplying, or in some case supplying of part may be refused.
- When ordering of part, clearly indicate "1" and "I" (i) to avoid mis-supplying.
- Ordering part without stating its part number can not be supplied.
- Part indicated with the mark "★" is not illustrated in the exploded view.
- Not including Carbon Film ±5%, 1/4W Type in the P.W.Board parts list. (Refer to the Schematic Diagram for those parts.)

WARNING:

Parts marked with this symbol have critical characteristics.
Use ONLY replacement parts recommended by the manufacturer.

● **Resistors**

Ex.: RN 14K 2E 182 G FR
 Type Shape Power Resist- Allowable Others
 and performance
 ance error

RD : Carbon	2B : 1/8W	F : ±1%	P : Pulse-resistant type
RC : Composition	2E : 1/4W	G : ±2%	NL : Low noise type
RS : Metal oxide film	2H : 1/2W	J : ±5%	NB : Non-burning type
RW : Winding	3A : 1W	K : ±10%	FR : Fuse-resistor
RN : Metal film	3D : 2W	M : ±20%	F : Lead wire forming
RK : Metal mixture	3H : 5W		

* Resistance

$1 \overset{8}{\text{---}} \overset{2}{\text{---}} = 1800 \text{ ohm} = 1.8 \text{ kohm}$
 Indicates number of zeros after effective number.
 2-digit effective number.

• Units: ohm

$1 \overset{.8}{\text{---}} \overset{2}{\text{---}} = 1.2 \text{ ohm}$
 1-digit effective number.
 2-digit effective number, decimal point indicated by R.

• Units: ohm

● **Capacitors**

Ex.: CE 04W 1H 2R2 M BP
 Type Shape Dielectric Capacity Allowable Others
 and per- strength error

CE : Aluminum foil electrolytic	0J : 6.3V	F : ±1%	HS : High stability type
CA : Aluminum solid electrolytic	1A : 10V	G : ±2%	BP : Non-polar type
CS : Tantalum electrolytic	1C : 16V	J : ±5%	HR : Ripple-resistant type
CQ : Film	1E : 25V	K : ±10%	DL : For charge and discharge
CK : Ceramic	1V : 35V	M : ±20%	HF : For assuring high frequency
CC : Ceramic	1H : 50V	Z : +80%	U : UL part
CP : Oil	2A : 100V	-20%	C : CSA part
CM : Mica	2B : 125V	P : +100%	W : UL-CSA type
CF : Metalized	2C : 160V	-0%	F : Lead wire forming
CH : Metalized	2D : 200V	C : ±0.25pF	
	2E : 250V	D : ±0.5pF	
	2H : 500V	= : Others	
	2J : 630V		

* Capacity (electrolyte only)

$2 \overset{2}{\text{---}} \overset{2}{\text{---}} = 2200\mu\text{F}$
 Indicates number of zeros after effective number.
 2-digit effective number.

• Units: μF.

$2 \overset{.2}{\text{---}} \overset{2}{\text{---}} = 2.2\mu\text{F}$
 1-digit effective number.
 2-digit effective number, decimal point indicated by R.

• Units: μF.

* Capacity (except electrolyte)

$2 \overset{2}{\text{---}} \overset{2}{\text{---}} \overset{2}{\text{---}} = 2200\text{pF} = 0.0022\mu\text{F}$
 (More than 2) — Indicates number of zeros after effective number.
 2-digit effective number.

• Units: pF.

$2 \overset{2}{\text{---}} \overset{1}{\text{---}} = 220\text{pF}$
 (0 or 1) — Indicates number of zeros after effective number.
 2-digit effective number.

• Units: pF.

• When the dielectric strength is indicated in AC, "AC" is included after the dielectric strength value.

Ref. No.	Part No.	Part Name	Remarks	Ref. No.	Part No.	Part Name	Remarks
CAPACITORS GROUP							
C411,412	256 1034 979	Metalized 0.1 μF/50V	CF93A1H104J	C715,716	257 0004 961	Ceramic chip 100 pF/50V	CC73SL1H101J
C413,414	254 4259 700	Electrolytic 2200 μF/35V	CE04W1V222MC	C717	254 4260 948	Electrolytic 1 μF/50V	CE04W1H010M
C415-418	257 0012 966	Ceramic chip 0.01 μF/50V	CK73F1H103Z	C718	257 0012 966	Ceramic chip 0.01 μF/50V	CK73F1H103Z
C419,420	254 4258 947	Electrolytic 47 μF/35V	CE04W1V470M	C719	254 4260 948	Electrolytic 1 μF/50V	CE04W1H010M
C421,422	256 1034 979	Metalized 0.1 μF/50V	CF93A1H104J	C720	257 0012 966	Ceramic chip 0.01 μF/50V	CK73F1H103Z
C423,424	254 4259 700	Electrolytic 2200 μF/35V	CE04W1V222MC	C721	254 4260 948	Electrolytic 1 μF/50V	CE04W1H010M
C425-428	257 0012 966	Ceramic chip 0.01 μF/50V	CK73F1H103Z	C724,725	254 4260 948	Electrolytic 1 μF/50V	CE04W1H010M
C429,430	254 4258 947	Electrolytic 47 μF/35V	CE04W1V470M	C727-734	254 4254 909	Electrolytic 10 μF/16V	CE04W1C100M
C431	254 4260 948	Electrolytic 1 μF/50V	CE04W1H010M	C751-758	257 0004 961	Ceramic chip 100 pF/50V	CC73SL1H101J
C451	257 0012 966	Ceramic chip 0.01 μF/50V	CK73F1H103Z	C759	254 4260 948	Electrolytic 1 μF/50V	CE04W1H010M
C452	254 4260 948	Electrolytic 1 μF/50V	CE04W1H010M	C760	257 0012 966	Ceramic chip 0.01 μF/50V	CK73F1H103Z
C453	257 0012 966	Ceramic chip 0.01 μF/50V	CK73F1H103Z	C761	254 4260 948	Electrolytic 1 μF/50V	CE04W1H010M
C461	257 0014 935	Ceramic chip 0.1 μF/25V	CK73F1E104Z	C762	257 0012 966	Ceramic chip 0.01 μF/50V	CK73F1H103Z
C462	254 4260 948	Electrolytic 1 μF/50V	CE04W1H010M	C763,764	257 0012 982	Ceramic chip 0.022 μF/50V	CK73F1H223Z
C478	257 0012 966	Ceramic chip 0.01 μF/50V	CK73F1H103Z	C766	254 4252 778	Electrolytic 1000 μF/10V	CE04W1A102MC
C479,480	257 0007 900	Ceramic chip 1000 pF/50V	CC73SL1H102J	C767	254 3056 917	Electrolytic 1 μF/50V	CE04D1H010MBP
C535-538	255 4201 968	Mylar film 470 pF/50V	CQ93P1H471J		253 1148 905	Ceramic 0.022 μF/50V	CK45F1H223Z
C539,540	254 4260 948	Electrolytic 1 μF/50V	CE04W1H010M	OTHER PARTS GROUP			
C601,602	257 0012 982	Ceramic chip 0.022 μF/50V	CK73F1H223Z	CN044	205 0885 082	4P connector socket (TUC-P)	1
C603-606	254 4254 909	Electrolytic 10 μF/16V	CE04W1C100M	CN045	205 0355 046	4P KR connector base (L)	1
C608	257 0012 966	Ceramic chip 0.01 μF/50V	CK73F1H103Z	CN049	205 1028 000	4P connector base (9176)	1
C609,610	254 4260 948	Electrolytic 1 μF/50V	CE04W1H010M	CN056	203 8207 077	5P KR-DA connector cord	1
C611,612	254 4254 909	Electrolytic 10 μF/16V	CE04W1C100M	CN058	205 0233 058	5P EH connector base	1
C613-616	257 0004 961	Ceramic chip 100 pF/50V	CC73SL1H101J	CN059	205 0985 034	5P connector socket (TKC-A)	1
C619,620	257 0012 982	Ceramic chip 0.022 μF/50V	CK73F1H223Z	CN059	205 0986 033	5P connector plug (TKC-A)	1
C621-624	254 4254 909	Electrolytic 10 μF/16V	CE04W1C100M	CN061	205 0942 019	6P connector socket (TUC-P)	1
C626	257 0012 966	Ceramic chip 0.01 μF/50V	CK73F1H103Z	CN081	205 0885 095	8P connector socket (TUC-P)	1
C627,628	254 4260 948	Electrolytic 1 μF/50V	CE04W1H010M	CN083	205 0885 095	8P connector socket (TUC-P)	1
C629,630	254 4254 909	Electrolytic 10 μF/16V	CE04W1C100M	CN084	205 0985 005	8P connector socket (TKC-A)	1
C631-634	257 0004 961	Ceramic chip 100 pF/50V	CC73SL1H101J	CN086	205 0885 095	8P connector socket (TUC-P)	1
C637-640	257 0004 961	Ceramic chip 100 pF/50V	CC73SL1H101J	CN093	205 0343 090	9P connector base (KR-PH)	1
C641-644	254 4260 948	Electrolytic 1 μF/50V	CE04W1H010M	CN094	205 0355 091	9P KR connector base (L)	1
C645,646	254 4258 785	Electrolytic 470 μF/35V	CE04W1V471MC	CN113	205 0885 066	11P connector socket (TUC-P)	1
C649	254 4260 948	Electrolytic 1 μF/50V	CE04W1H010M	CN133	205 0480 034	13P KR connector base (L)	1
C651,652	254 4260 948	Electrolytic 1 μF/50V	CE04W1H010M	CN142	205 0885 011	14P connector socket (TUC-P)	1
C653,654	254 4254 909	Electrolytic 10 μF/16V	CE04W1C100M	CN921	205 0581 001	2P VH connector base	1
C655,656	257 0004 961	Ceramic chip 100 pF/50V	CC73SL1H101J	CN931	205 0087 039	3P wrapping terminal	1
C657,658	254 4254 909	Electrolytic 10 μF/16V	CE04W1C100M	CN932	203 5012 061	3P SAN-PH connector cord	1
C671	254 4260 948	Electrolytic 1 μF/50V	CE04W1H010M	CN933	205 0348 037	3P wrapping terminal	1
C690	253 8014 702	Ceramic chip 0.01 μF/400V	CK45F2GAC103MC	CN942	205 1028 000	4P connector base (9176)	1
C691-694	254 4254 909	Electrolytic 10 μF/16V	CE04W1C100M	F004,005	202 0040 909	Fuse clip	2
C701,702	254 4254 909	Electrolytic 10 μF/16V	CE04W1C100M	F015,016	202 0040 909	Fuse clip	2
C703,704	257 0004 961	Ceramic chip 100 pF/50V	CC73SL1H101J	F004,005	206 1015 029	Fuse 1A	Europe/Asia model 2
C705,706	254 4254 909	Electrolytic 10 μF/16V	CE04W1C100M	F004,005	206 1039 034	Fuse 1A	Taiwan model 2
C707,708	257 0004 961	Ceramic chip 100 pF/50V	CC73SL1H101J	F015,016	206 1015 061	Fuse 2A	Europe/Asia model 2
C709,710	254 4254 909	Electrolytic 10 μF/16V	CE04W1C100M	F015,016	206 1039 063	Fuse 2A	Taiwan model 2
C711,712	257 0004 961	Ceramic chip 100 pF/50V	CC73SL1H101J				
C713,714	254 4254 909	Electrolytic 10 μF/16V	CE04W1C100M				

1U-2951 S-VIDEO UNIT ASS'Y

Ref. No.	Part No.	Part Name	Remarks	Q'ty	Ref. No.	Part No.	Part Name	Remarks
JA701-704	204 8540 012	4P pin jack		4	SEMICONDUCTORS GROUP			
JK451	204 8217 031	Head phone jack		1	IC101	262 2302 906	IC M66310FP-200C	
RL671	214 0127 003	Relay (RY-12W)		1	IC102	262 2035 008	IC MSC1937-03RS	
SW690	212 1031 008	Power switch (TV-5)		1	IC301-303	263 1018 003	IC MC14577CP	
W401	203 0526 031	1P contact Ass'y		1	IC304,305	262 1108 004	IC TC4051BP	
	513 2585 003	Fuse label		2	IC306,307	262 0276 005	IC HD14066BP	
	513 2585 032	Fuse label		2	IC308	263 1018 003	IC MC14577CP	
	202 0040 909	Fuse clip		4	IC401,402	263 1018 003	IC MC14577CP	
	513 2585 003	Fuse label		2	IC403,404	262 1108 004	IC TC4051BP	
	513 2585 032	Fuse Label		2	IC405	262 0276 005	IC HD14066BP	
					IC406	263 1018 003	IC MC14577CP	
					IC407,408	262 1108 004	IC TC4051BP	
					IC409	263 1018 003	IC MC14577CP	
					IC411	262 0276 005	IC HD14066BP	
					IC412	263 1018 003	IC MC14577CP	
					IC413	262 2067 005	IC MC74HC4053N	
					IC414	262 2311 007	IC M35015-204SP	
					IC415	263 0682 003	IC NJM2229S	
					IC416	263 1018 003	IC MC14577CP	
					TR101-103	272 0131 901	Transistor 2SB1041(R)	
					TR104-107	269 0082 902	Transistor DTC114EK	
					TR105-111	269 0082 902	Transistor DTC114EK	
					TR112,113	269 0082 902	Transistor DTC114EK	
					TR401	273 0384 900	Transistor 2SC2412K(S)	
					TR402	273 0198 918	Transistor 2SC1815(BL)	
					TR403	271 0238 908	Transistor 2SA1037K(S/R)	
					TR404	273 0384 900	Transistor 2SC2412K(S)	
					TR405	269 0082 902	Transistor DTC114EK	
					D403-408	276 0432 903	Diode 1SS270A	
					ZD101,102	276 0637 902	Zener diode MTZJ6.2A	6.2V
					LD101-108	393 9434 906	LED SEL1210S	
					LD109,110	393 9491 004	LED SML1216W	
					LD111	393 9434 906	LED SEL1210S	
					LD114	393 9549 008	LED LB-303VA	
					RESISTORS GROUP (Not included carbon film $\pm 5\%$ 1/4W)			
					R121-123	247 0009 985	Carbon chip 10 kohm 1/10W	RM73B-103J
					R124-126	247 0007 945	Carbon chip 1 kohm 1/10W	RM73B-102J
					R127,128	247 0009 985	Carbon chip 10 kohm 1/10W	RM73B-103J
					R129-162	247 0011 944	Carbon chip 47 kohm 1/10W	RM73B-473J
					R163,164	247 0009 901	Carbon chip 4.7 kohm 1/10W	RM73B-472J
					R165-169	247 0007 945	Carbon chip 1 kohm 1/10W	RM73B-102J
					R170	247 0005 976	Carbon chip 200 ohm 1/10W	RM73B-201J
					R171	247 0006 917	Carbon chip 300 ohm 1/10W	RM73B-301J

Ref. No.	Part No.	Part Name	Remarks
R172	247 0006 933	Carbon chip 360 ohm 1/10W	RM73B-361J
R173	247 0007 945	Carbon chip 1 kohm 1/10W	RM73B-102J
R174	247 0008 957	Carbon chip 3 kohm 1/10W	RM73B-302J
R175	247 0005 976	Carbon chip 200 ohm 1/10W	RM73B-201J
R176	247 0006 917	Carbon chip 300 ohm 1/10W	RM73B-301J
R177	247 0006 933	Carbon chip 360 ohm 1/10W	RM73B-361J
R178	247 0007 945	Carbon chip 1 kohm 1/10W	RM73B-102J
R179	247 0008 957	Carbon chip 3 kohm 1/10W	RM73B-302J
R180	247 0005 976	Carbon chip 200 ohm 1/10W	RM73B-201J
R181	247 0006 917	Carbon chip 300 ohm 1/10W	RM73B-301J
R182	247 0006 933	Carbon chip 360 ohm 1/10W	RM73B-361J
R183	247 0007 945	Carbon chip 1 kohm 1/10W	RM73B-102J
R184	247 0008 957	Carbon chip 3 kohm 1/10W	RM73B-302J
R185	247 0005 976	Carbon chip 200 ohm 1/10W	RM73B-201J
R186	247 0006 917	Carbon chip 300 ohm 1/10W	RM73B-301J
R187	247 0006 933	Carbon chip 360 ohm 1/10W	RM73B-361J
R188	247 0007 945	Carbon chip 1 kohm 1/10W	RM73B-102J
R189	247 0008 957	Carbon chip 3 kohm 1/10W	RM73B-302J
R190	247 0005 976	Carbon chip 200 ohm 1/10W	RM73B-201J
R191	247 0006 917	Carbon chip 300 ohm 1/10W	RM73B-301J
R192	247 0006 933	Carbon chip 360 ohm 1/10W	RM73B-361J
R195	247 0009 901	Carbon chip 4.7 kohm 1/10W	RM73B-472J
R196,197	247 0011 944	Carbon chip 47 kohm 1/10W	RM73B-473J
R198,199	247 0005 905	Carbon chip 100 ohm 1/10W	RM73B-101J
R307	247 0010 961	Carbon chip 22 kohm 1/10W	RM73B-223J
R309	247 0010 961	Carbon chip 22 kohm 1/10W	RM73B-223J
R311	247 0010 961	Carbon chip 22 kohm 1/10W	RM73B-223J
R313	247 0010 961	Carbon chip 22 kohm 1/10W	RM73B-223J
R314	247 0009 985	Carbon chip 10 kohm 1/10W	RM73B-103J
R315	247 0005 905	Carbon chip 100 ohm 1/10W	RM73B-101J
R316	247 0009 985	Carbon chip 10 kohm 1/10W	RM73B-103J
R317	247 0005 905	Carbon chip 100 ohm 1/10W	RM73B-101J
R318	247 0009 985	Carbon chip 10 kohm 1/10W	RM73B-103J
R319	247 0010 958	Carbon chip 20 kohm 1/10W	RM73B-203J
R320	247 0009 985	Carbon chip 10 kohm 1/10W	RM73B-103J
R321	247 0005 905	Carbon chip 100 ohm 1/10W	RM73B-101J
R322	247 0009 985	Carbon chip 10 kohm 1/10W	RM73B-103J
R323,324	247 0005 905	Carbon chip 100 ohm 1/10W	RM73B-101J
R325	247 0009 985	Carbon chip 10 kohm 1/10W	RM73B-103J
R326	247 0006 975	Carbon chip 510 ohm 1/10W	RM73B-511J
R327	247 0006 988	Carbon chip 560 ohm 1/10W	RM73B-561J
R328	247 0005 905	Carbon chip 100 ohm 1/10W	RM73B-101J
R329	247 0009 985	Carbon chip 10 kohm 1/10W	RM73B-103J
R330	247 0006 975	Carbon chip 510 ohm 1/10W	RM73B-511J
R331	247 0006 991	Carbon chip 620 ohm 1/10W	RM73B-621J
R332	247 0005 905	Carbon chip 100 ohm 1/10W	RM73B-101J
R333	247 0009 985	Carbon chip 10 kohm 1/10W	RM73B-103J
R334	247 0005 905	Carbon chip 100 ohm 1/10W	RM73B-101J
R411	247 0010 961	Carbon chip 22 kohm 1/10W	RM73B-223J
R413	247 0010 961	Carbon chip 22 kohm 1/10W	RM73B-223J

Ref. No.	Part No.	Part Name	Remarks
R415	247 0010 961	Carbon chip 22 kohm 1/10W	RM73B-223J
R417	247 0010 961	Carbon chip 22 kohm 1/10W	RM73B-223J
R419	247 0005 905	Carbon chip 100 ohm 1/10W	RM73B-101J
R420	247 0009 985	Carbon chip 10 kohm 1/10W	RM73B-103J
R421	247 0005 905	Carbon chip 100 ohm 1/10W	RM73B-101J
R422	247 0009 985	Carbon chip 10 kohm 1/10W	RM73B-103J
R423	247 0010 961	Carbon chip 22 kohm 1/10W	RM73B-223J
R425	247 0010 961	Carbon chip 22 kohm 1/10W	RM73B-223J
R427	247 0005 905	Carbon chip 100 ohm 1/10W	RM73B-101J
R428	247 0009 985	Carbon chip 10 kohm 1/10W	RM73B-103J
R429	247 0002 966	Carbon chip 10 ohm 1/10W	RM73B-100J
R430	247 0008 915	Carbon chip 2 kohm 1/10W	RM73B-202J
R431	247 0005 905	Carbon chip 100 ohm 1/10W	RM73B-101J
R432	247 0009 985	Carbon chip 10 kohm 1/10W	RM73B-103J
R433	247 0005 905	Carbon chip 100 ohm 1/10W	RM73B-101J
R434	247 0009 985	Carbon chip 10 kohm 1/10W	RM73B-103J
R435	247 0006 975	Carbon chip 510 ohm 1/10W	RM73B-511J
R436	247 0006 988	Carbon chip 560 ohm 1/10W	RM73B-561J
R437	247 0006 975	Carbon chip 510 ohm 1/10W	RM73B-511J
R438	247 0006 988	Carbon chip 560 ohm 1/10W	RM73B-561J
R439	247 0009 985	Carbon chip 10 kohm 1/10W	RM73B-103J
R440	247 0005 905	Carbon chip 100 ohm 1/10W	RM73B-101J
R441,442	247 0009 985	Carbon chip 10 kohm 1/10W	RM73B-103J
R443	247 0005 905	Carbon chip 100 ohm 1/10W	RM73B-101J
R444	247 0009 985	Carbon chip 10 kohm 1/10W	RM73B-103J
R445,446	247 0005 905	Carbon chip 100 ohm 1/10W	RM73B-101J
R447	247 0009 985	Carbon chip 10 kohm 1/10W	RM73B-103J
R448	247 0006 975	Carbon chip 510 ohm 1/10W	RM73B-511J
R449	247 0006 988	Carbon chip 560 ohm 1/10W	RM73B-561J
R450	247 0005 905	Carbon chip 100 ohm 1/10W	RM73B-101J
R451	247 0009 985	Carbon chip 10 kohm 1/10W	RM73B-103J
R452	247 0006 975	Carbon chip 510 ohm 1/10W	RM73B-511J
R453	247 0006 988	Carbon chip 560 ohm 1/10W	RM73B-561J
R454	247 0010 958	Carbon chip 20 kohm 1/10W	RM73B-203J
R456	247 0009 985	Carbon chip 10 kohm 1/10W	RM73B-103J
R457	247 0005 905	Carbon chip 100 ohm 1/10W	RM73B-101J
R458,459	247 0009 985	Carbon chip 10 kohm 1/10W	RM73B-103J
R460	247 0009 930	Carbon chip 6.2 kohm 1/10W	RM73B-622J
R461	247 0005 976	Carbon chip 200 ohm 1/10W	RM73B-201J
R462	241 2387 908	Carbon film 1 ohm 1/4W (NB)	RD14B2E010JNBS
R463	247 0007 945	Carbon chip 1 kohm 1/10W	RM73B-102J
R464	241 2387 908	Carbon film 1 ohm 1/4W (NB)	RD14B2E010JNBS
R465	247 0002 966	Carbon chip 10 ohm 1/10W	RM73B-100J
R466	247 0007 945	Carbon chip 1 kohm 1/10W	RM73B-102J
R467	247 0013 984	Carbon chip 470 kohm 1/10W	RM73B-474J
R468	247 0006 946	Carbon chip 390 ohm 1/10W	RM73B-391J
R469	247 0007 987	Carbon chip 1.5 kohm 1/10W	RM73B-152J
R470	247 0009 985	Carbon chip 10 kohm 1/10W	RM73B-103J
R471	247 0011 957	Carbon chip 51 kohm 1/10W	RM73B-513J
R472	247 0007 961	Carbon chip 1.2 kohm 1/10W	RM73B-122J
R473	247 0009 969	Carbon chip 8.2 kohm 1/10W	RM73B-822J
R474	247 0011 944	Carbon chip 47 kohm 1/10W	RM73B-473J

Ref. No.	Part No.	Part Name	Remarks	Ref. No.	Part No.	Part Name	Remarks
R475	247 0005 989	Carbon chip 220 ohm 1/10W	RM73B--221J	C435	254 4302 974	Electrolytic 100 μ F/10V	CE04W1A101M
R476	247 0009 969	Carbon chip 8.2 kohm 1/10W	RM73B--822J	C437,438	254 4299 906	Electrolytic 10 μ F/16V	CE04W1C100M
R477	247 0011 944	Carbon chip 47 kohm 1/10W	RM73B--473J	C439	254 4299 964	Electrolytic 47 μ F/16V	CE04W1C470M
R478	247 0010 961	Carbon chip 22 kohm 1/10W	RM73B--223J	C440	254 4302 974	Electrolytic 100 μ F/10V	CE04W1A101M
R479,480	247 0009 901	Carbon chip 4.7 kohm 1/10W	RM73B--472J	C441	254 4299 964	Electrolytic 47 μ F/16V	CE04W1C470M
R481	247 0007 945	Carbon chip 1 kohm 1/10W	RM73B--102J	C442,443	256 1034 937	Metalized 0.047 μ F/50V	CF93A1H473J
R482	247 0008 915	Carbon chip 2 kohm 1/10W	RM73B--202J	C444	257 0009 940	Ceramic chip 3300 pF/50V	CK73B1H332K
R483	247 0009 956	Carbon chip 7.5 kohm 1/10W	RM73B--752J	C445	257 0008 941	Ceramic chip 470 pF/50V	CK73B1H471K
R484	247 0011 902	Carbon chip 33 kohm 1/10W	RM73B--333J	C446	254 4305 968	Electrolytic 1 μ F/50V	CE04W1H010M
R485	247 0007 945	Carbon chip 1 kohm 1/10W	RM73B--102J	C447	256 1034 953	Metalized 0.068 μ F/50V	CF93A1H683J
R486	247 0008 902	Carbon chip 1.8 kohm 1/10W	RM73B--182J	C448	254 4305 968	Electrolytic 1 μ F/50V	CE04W1H010M
R491,492	247 0018 905	Carbon chip 0 kohm 1/10W	RM73B--0R0K	C449	257 0005 902	Ceramic chip 150 pF/50V	CC73SL1H151J
CAPACITORS GROUP				C450	255 1264 911	Mylar film 1200 pF/50V	CQ93M1H122J(B)
C101	254 4252 969	Electrolytic 470 μ F/10V	CE04W1A471M	C451	255 1265 978	Mylar film 0.022 μ F/50V	CQ93M1H223J(B)
C102	257 0014 935	Ceramic chip 0.1 μ F/25V	CK73F1E104Z	C452	257 0004 961	Ceramic chip 100 pF/50V	CC73SL1H101J
C103	254 4261 921	Electrolytic 100 μ F/50V	CE04W1H101M	C453	254 4306 909	Electrolytic 4.7 μ F/50V	CE04W1H4R7M
C104	257 0010 900	Ceramic chip 0.01 μ F/50V	CK73B1H103K	C454	254 4299 906	Electrolytic 10 μ F/16V	CE04W1C100M
C105	254 4250 945	Electrolytic 330 μ F/6.3V	CE04W0J331M	C455	254 4299 964	Electrolytic 47 μ F/16V	CE04W1C470M
C106	257 0004 961	Ceramic chip 100 pF/50V	CC73SL1H101J	C456	257 0012 966	Ceramic chip 0.01 μ F/50V	CK73F1H103Z
C107	257 0008 983	Ceramic chip 1000 pF/50V	CK73B1H102K	C457	254 4299 964	Electrolytic 47 μ F/16V	CE04W1C470M
C109,110	257 0010 900	Ceramic chip 0.01 μ F/50V	CK73B1H103K	C458	257 0012 966	Ceramic chip 0.01 μ F/50V	CK73F1H103Z
C301-303	254 4260 948	Electrolytic 1 μ F/50V	CE04W1H010M	C459-461	257 0003 946	Ceramic chip 33 pF/50V	CC73SL1H330J
C304	257 0014 935	Ceramic chip 0.1 μ F/25V	CK73F1E104Z	C462	257 0002 947	Ceramic chip 12 pF/50V	CC73SL1H120J
C305-310	254 4254 938	Electrolytic 47 μ F/16V	CE04W1C470M	C463	257 0002 921	Ceramic chip 10 pF/50V	CC73SL1H100D
C311-316	257 0012 966	Ceramic chip 0.01 μ F/50V	CK73F1H103Z	C464	257 0009 940	Ceramic chip 3300 pF/50V	CK73B1H332K
C317,318	254 4254 938	Electrolytic 47 μ F/16V	CE04W1C470M	C465	254 4299 906	Electrolytic 10 μ F/16V	CE04W1C100M
C319,320	257 0012 966	Ceramic chip 0.01 μ F/50V	CK73F1H103Z	C466	257 0012 966	Ceramic chip 0.01 μ F/50V	CK73F1H103Z
C321	254 4252 930	Electrolytic 100 μ F/10V	CE04W1A101M	C467	254 4302 974	Electrolytic 100 μ F/10V	CE04W1A101M
C323	254 4252 930	Electrolytic 100 μ F/10V	CE04W1A101M	C468	255 1264 908	Mylar film 1000 pF/50V	CQ93M1H102J(B)
C325-327	257 0014 935	Ceramic chip 0.1 μ F/25V	CK73F1E104Z	C469	254 4305 968	Electrolytic 1 μ F/50V	CE04W1H010M
C401,402	257 0014 935	Ceramic chip 0.1 μ F/25V	CK73F1E104Z	C470	256 1034 937	Metalized 0.047 μ F/50V	CF93A1H473J
C403	254 4305 968	Electrolytic 1 μ F/50V	CE04W1H010M	C471,472	257 0014 935	Ceramic chip 0.1 μ F/25V	CK73F1E104Z
C404,405	254 4299 964	Electrolytic 47 μ F/16V	CE04W1C470M	OTHER PARTS GROUP			
C406	254 4302 974	Electrolytic 100 μ F/10V	CE04W1A101M	CN46,47	205 0885 082	4P connector socket (TUC-P)	2
C407,408	254 4299 964	Electrolytic 47 μ F/16V	CE04W1C470M	CN53	205 0355 059	5P KR connector base (L)	1
C409-412	257 0012 966	Ceramic chip 0.01 μ F/50V	CK73F1H103Z	CN56	205 0343 058	5P connector base (KR-PH)	1
C413	254 4302 974	Electrolytic 100 μ F/10V	CE04W1A101M	CN64	205 0942 019	6P connector socket (TUC-P)	1
C415,416	257 0012 966	Ceramic chip 0.01 μ F/50V	CK73F1H103Z	CN82	205 0885 095	8P connector socket (TUC-P)	1
C417	254 4299 964	Electrolytic 47 μ F/16V	CE04W1C470M	CN94	203 6218 055	4P DA-DA connector cord	1
C418	254 4302 974	Electrolytic 100 μ F/10V	CE04W1A101M	CN103	205 0985 018	10P connector socket (TKC-A)	1
C420	254 4299 964	Electrolytic 47 μ F/16V	CE04W1C470M	CN103	205 0986 017	10P connector plug (TKC-A)	1
C421,422	257 0012 966	Ceramic chip 0.01 μ F/50V	CK73F1H103Z	CN123	205 0885 079	12P connector socket (TUC-P)	1
C423,424	254 4299 964	Electrolytic 47 μ F/16V	CE04W1C470M	CN132	205 0942 006	13P connector socket (TUC-P)	1
C425,426	257 0012 966	Ceramic chip 0.01 μ F/50V	CK73F1H103Z	CN291	205 0702 042	29P FFC connector base (L)	1
C429	254 4299 964	Electrolytic 47 μ F/16V	CE04W1C470M	JK301-303	204 8516 004	3P pin jack (S-GND)	3
C430	254 4302 974	Electrolytic 100 μ F/10V	CE04W1A101M	JK401	204 8415 008	3P S-terminal (AU)	1
C432	254 4299 964	Electrolytic 47 μ F/16V	CE04W1C470M	JK402,403	204 8414 009	2P S-terminal (AU)	2
C433,434	257 0012 966	Ceramic chip 0.01 μ F/50V	CK73F1H103Z	JK404	205 0906 000	1P S-terminal (AU.SW)	1

1U-2952 POWER AMP.-1 UNIT ASS'Y

Ref. No.	Part No.	Part Name	Remarks	Q'ty	Ref. No.	Part No.	Part Name	Remarks
XL401	399 0105 009	Ceramic resonator	CSB503F2	1	SEMICONDUCTORS GROUP			
XL402	399 0153 006	Ceramic resonator	14.32MHZ-12PF	1	TR405,406	273 0235 923	Transistor 2SC1841(E/F)	
S101,102	212 5604 910	Tact switch - TA (ALPS)		2	TR411,412	273 0235 923	Transistor 2SC1841(E/F)	
S103-106	212 5604 910	Tact switch - TA (ALPS)		4	TR415	273 0235 923	Transistor 2SC1841(E/F)	
S107-110	212 5604 910	Tact switch - TA (ALPS)		4	TR421-425	273 0388 906	Transistor 2SC1740S(E)	
S111-114	212 5604 910	Tact switch - TA (ALPS)		4	TR427	273 0388 906	Transistor 2SC1740S(E)	
S115-119	212 5604 910	Tact switch - TA (ALPS)		4	TR428	269 0040 902	Transistor DTC144ES (47K-47K)	
S118	212 5604 910	Tact switch - TA (ALPS)		1	TR429	273 0388 906	Transistor 2SC1740S(E)	
S120-123	212 5604 910	Tact switch - TA (ALPS)		4	TR430	273 0303 910	Transistor 2SC1740S(S)	
S124	212 5604 910	Tact switch - TA (ALPS)		1	TR431	271 0192 905	Transistor 2SA933S(S)	
S125-127	212 5604 910	Tact switch - TA (ALPS)		3	TR432	273 0303 910	Transistor 2SC1740S(S)	
S128	212 0373 000	Rotally encoder - EC16B		1	TR433	271 0131 924	Transistor 2SA988(E/F)	
FL101	393 4156 001	FLD (FIP16FM7R)		1	TR435	272 0107 919	Transistor 2SB1328 (P/Q)	
L101	235 0060 989	Inductor 120 μH		1	TR521	273 0303 910	Transistor 2SC1740S(S)	
L401	235 0060 963	Inductor 150 μH		1	TR522	271 0192 905	Transistor 2SA933S(S)	
					TR523	273 0303 910	Transistor 2SC1740S(S)	
					TR601,602	273 0388 906	Transistor 2SC1740S(E)	
					TR603	271 0192 905	Transistor 2SA933S(S)	
					D401-405	276 0432 903	Diode 1SS270A	
					D417	276 0432 903	Diode 1SS270A	
					D419,422	276 0432 903	Diode 1SS270A	
					D450	276 0371 006	Diode S10VB20F9	
					D601	276 0432 903	Diode 1SS270A	
					RESISTORS GROUP			
					R405-412	244 2043 982	Metal oxide 0.22 ohm 1W	RS14B3AR22JNBS(S)
					R413,414	244 2051 987	Metal oxide 4.7 ohm 1W	RS14B3A4R7JNBS(S)
					R415-418	241 2380 950	Carbon film 2 kohm 1/4W(NB)	RD14B2E202JNBS
					R425,426	244 2043 937	Metal oxide 10 ohm 1W	RS14B3A100JNBS(S)
					R433-440	244 2043 982	Metal oxide 0.22 ohm 1W	RS14B3AR22JNBS(S)
					R441,442	244 2051 987	Metal oxide 4.7 ohm 1W	RS14B3A4R7JNBS(S)
					R443-446	241 2380 950	Carbon film 2 kohm 1/4W(NB)	RD14B2E202JNBS
					R453,454	244 2043 937	Metal oxide 10 ohm 1W	RS14B3A100JNBS(S)
					R459-462	244 2043 982	Metal oxide 0.22 ohm 1W	RS14B3AR22JNBS(S)
					R463	244 2051 987	Metal oxide 4.7 ohm 1W	RS14B3A4R7JNBS(S)
					R464,465	241 2380 950	Carbon film 2 kohm 1/4W(NB)	RD14B2E202JNBS
					R469	244 2043 937	Metal oxide 10 ohm 1W	RS14B3A100JNBS(S)
					R471-478	241 2387 908	Carbon film 1 ohm 1/4W(NB)	RD14B2E010JNBS
					R479-483	244 2050 933	Metal oxide 180 ohm 1W	RS14B3A181JNBS(S)
					R513,514	241 2387 908	Carbon film 1 ohm 1/4W(NB)	RD14B2E010JNBS
					R531,532	241 2387 940	Carbon film 4.7 ohm 1/4W(NB)	RD14B2E4R7JNBS
					R601	242 0073 000	Composition 2.2 Mohm 1/2W	RC05GF2H225K
					R602	241 2375 978	Carbon film 20 ohm 1/4W(NB)	RD14B2E200JNBS

Ref. No.	Part No.	Part Name	Remarks	Ref. No.	Part No.	Part Name	Remarks	Q'ty
CAPACITORS GROUP				F001	206 1036 008	Fuse ST630MA	Europe/Asia model	1
C401,402	255 1265 978	Mylar film 0.022 μ F/50V	CQ93M1H223J(B)	F001	206 1039 063	Fuse (2.0A)	Taiwan model	1
C403,404	253 1146 907	Ceramic 0.01 μ F/50V	CK45F1H103Z	F002	206 1051 009	Fuse (12A)	Taiwan model	1
C405-408	254 4263 987	Electrolytic 10 μ F/100V	CE04W2A100M	F003	206 1036 011	Fuse (6.3A)	Europe/Asia model	1
C409,410	256 1034 979	Metalized 0.1 μ F/50V	CF93A1H104J	F008	206 1015 016	Fuse (1.25A)	Europe/Asia model	1
C411,412	255 1265 978	Mylar film 0.022 μ F/50V	CQ93M1H223J(B)	F008	206 1046 014	Fuse (8A)	Taiwan model	1
C413,414	253 1146 907	Ceramic 0.01 μ F/50V	CK45F1H103Z	JK801,802	205 1027 001	8P SP terminal(V-1)		2
C415-418	254 4263 987	Electrolytic 10 μ F/100V	CE04W2A100M	L401-404	235 0068 004	Inductor(1 μ H)		4
C419,420	256 1034 979	Metalized 0.1 μ F/50V	CF93A1H104J	L405	235 0068 004	Inductor(1 μ H)		1
C421	255 1265 978	Mylar film 0.022 μ F/50V	CQ93M1H223J(B)	RL401-405	214 0154 005	Relay(VB24SMBU)		4
C422	253 1146 907	Ceramic 0.01 μ F/50V	CK45F1H103Z	RL601	214 0188 000	Relay(VS-12MBNR-SM2)(TV-8)		1
C423,424	254 4263 987	Electrolytic 10 μ F/100V	CE04W2A100M	T601	233 6074 009	Power trans(Mini)-ES	Europe/Asia model	1
C425	256 1034 979	Metalized 0.1 μ F/50V	CF93A1H104J	T601	233 5818 004	Power trans(Mini)-EU	Taiwan model	1
C429	254 4254 938	Electrolytic 47 μ F/16V	CE04W1C470M	TP401-404	205 0154 030	3P NH connector base		4
C430	253 9039 906	BC Ceramic cap. 0.1 μ F/25V	CK45=1E104Z	TP405	205 0154 030	3P NH connector base		1
C431	254 4254 938	Electrolytic 47 μ F/16V	CE04W1C470M	W412-415	203 0641 071	1P contact Ass		4
C432	253 9039 906	BC Ceramic cap. 0.1 μ F/25V	CK45=1E104Z	W417	203 0641 055	1P contact Ass		1
C433	254 4250 945	Electrolytic 330 μ F/6.3V	CE04W0J331M	W418	203 0641 042	1P contact Ass		1
C434	253 1181 904	Ceramic 0.01 μ F/50V	CK45F1H103Z	W419	203 0641 068	1P contact Ass		1
C441	254 4264 025	Electrolytic 100 μ F/100V	CE04W2A101M	W451	203 0641 084	1P contact Ass		1
C450,451	256 1042 903	Metalized 0.1 μ F/250V	CF93A2E104K	W452	203 0641 071	1P contact Ass		1
C454-456	256 1042 903	Metalized 0.1 μ F/250V	CF93A2E104K	W453	203 0641 084	1P contact Ass		1
C460,461	255 1265 936	Mylar film 0.01 μ F/50V	CQ93M1H103J(B)		202 0040 909	Fuse clip		4
C463-469	255 1265 936	Mylar film 0.01 μ F/50V	CQ93M1H103J(B)		202 0040 909	Fuse clip		2
C499	254 4260 948	Electrolytic 1 μ F/50V	CE04W1H010M		279 0034 054	Posistor PTH9M04BC222TS2F333		1
C509,510	254 4260 980	Electrolytic 10 μ F/50V	CE04W1H100M		415 0309 026	P.V.C. tube(L=20)		2
C519,520	254 4260 980	Electrolytic 10 μ F/50V	CE04W1H100M		412 4165 005	Bus bar		6
C521	253 9039 906	BC Ceramic cap. 0.1 μ F/25V	CK45=1E104Z		205 1034 007	M3 screw terminal		1
C522	254 4250 945	Electrolytic 330 μ F/6.3V	CE04W0J331M		203 0411 010	Connecting cord Ass		1
C525	254 4260 980	Electrolytic 10 μ F/50V	CE04W1H100M		203 0411 023	Connecting cord Ass		1
C601	253 8014 702	Ceramic 0.01 μ F/400VAC	CK45F2GAC103MC		203 0411 036	Connecting cord Ass		1
C602	256 1034 979	Metalized 0.1 μ F/50V	CF93A1H104J		203 0411 049	Connecting cord Ass		1
C603	254 4260 948	Electrolytic 1 μ F/50V	CE04W1H010M		203 0411 052	Connecting cord Ass		1
OTHER PARTS GROUP								
CN021	205 0442 001	2P Wrapping terminal						1
CN024	205 0606 025	2P Wrapping terminal						1
CN025	205 0581 001	2P VH connector base			513 2585 090	Fuse label	Europe/Asia model	1
CN029	205 0581 001	2P VH connector base			513 2654 002	Fuse label	Europe/Asia model	1
CN034	205 0087 039	3P Wrapping terminal			513 2195 011	Fuse label	Europe/Asia model	1
CN036,037	205 0087 039	3P Wrapping terminal			EP-5870	Fuse holder	Taiwan model	2
CN041	205 0666 049	4P connector base(9130)						5
CN048	205 0581 030	4P VH connector(WHT)						1
CN051	205 0666 052	5P connector(9130)						5
CN057	205 0343 058	5P connector(KR-PH)						1
CN066	205 1037 062	6P pin header (TXX)						10
CN072	205 0343 074	7P connector(KR-PH)						1
CN133	205 0375 039	13P connector(KR-PH)						1
CN932	205 0343 032	3P connector(KR-PH)						1

1U-2958 P. SUPPLY-3 UNIT ASS'Y

Ref. No.	Part No.	Part Name	Remarks	Ref. No.	Part No.	Part Name	Remarks
SEMICONDUCTORS GROUP				CAPACITORS GROUP			
IC401	268 0073 905	IC ICP-N15	IC protector	R807,808	247 0009 985	Carbon chip 10 kohm 1/10W	RM73B--103J
IC402	263 0793 002	IC NJM7806FA(S)		R809,810	247 0007 961	Carbon chip 1.2 kohm 1/10W	RM73B--122J
IC801	263 0680 005	IC NJM5532DD		R811,812	247 0005 989	Carbon chip 220 ohm 1/10W	RM73B--221J
IC901	263 0809 006	IC NJM7805FA(S)		R813,814	247 0009 998	Carbon chip 11 kohm 1/10W	RM73B--113J
IC902	263 0554 005	IC NJM7905FA		R815,816	247 0008 902	Carbon chip 1.8 kohm 1/10W	RM73B--182J
IC903	263 0793 002	IC NJM7806FA(S)		R817,818	247 0002 911	Carbon chip 6.2 ohm 1/10W	RM73B--6R2K
IC904	263 0683 002	IC NJM7906FA		R819,820	247 0005 976	Carbon chip 200 ohm 1/10W	RM73B--201J
IC905	263 0809 006	IC NJM7805FA(S)		R821,822	247 0004 906	Carbon chip 39 ohm 1/10W	RM73B--390J
TR402	273 0384 900	Transistor 2SC2412K(S)		R823,824	247 0005 905	Carbon chip 100 ohm 1/10W	RM73B--101J
TR475	272 0131 901	Transistor 2SB1041(R)		R825,826	247 0012 927	Carbon chip 100 kohm 1/10W	RM73B--104J
TR476	271 0238 908	Transistor 2SA1037K(S/R)		R829,830	247 0013 900	Carbon chip 220 kohm 1/10W	RM73B--224J
TR477	274 0169 908	Transistor 2SD1292(R)		R901	241 2376 919	Carbon film 30 ohm 1/4W (NB)	RD14B2E300JNBS
TR478	273 0384 900	Transistor 2SC2412K(S)		R903	241 2375 907	Carbon film 10 ohm 1/4W (NB)	RD14B2E100JNBS
TR801-804	275 0061 902	Transistor 2SK184(GR)/(BL)		R905	241 2387 940	Carbon film 4.7 ohm 1/4W (NB)	RD14B2E4R7JNBS
TR807	269 0083 901	Transistor DTA114EK		VR801	211 0797 133	Variable resistor 10 kohm	
TR808	269 0082 902	Transistor DTC114EK		VR802	211 0797 117	Variable resistor 30 kohm	
TR903	269 0047 905	Transistor DTA143EK		CAPACITORS GROUP			
TR904	269 0054 901	Transistor DTC144EK		C402	254 4256 790	Electrolytic 2200 μ F/25V	CE04W1E222MC
TR905	271 0131 924	Transistor 2SA988(E/F)		C403	257 0012 966	Ceramic chip 0.01 μ F/50V	CK73F1H103Z
D401-406	276 0553 905	Diode 1SR35-200A		C404	254 4254 909	Electrolytic 10 μ F/16V	CE04W1C100M
D801,802	276 0432 903	Diode 1SS270A		C405	257 0012 966	Ceramic chip 0.01 μ F/50V	CK73F1H103Z
D901	276 0424 005	Diode 4D4B42 (LC1)		C406,407	253 1146 907	Ceramic 0.01 μ F/50V	CK45F1H103Z
D902,903	276 0432 903	Diode 1SS270A		C408	254 4260 948	Electrolytic 1 μ F/50V	CE04W1H010M
D904-907	276 0548 910	Diode DSM1D2		C410	254 4260 948	Electrolytic 1 μ F/50V	CE04W1H010M
D908,909	276 0553 905	Diode 1SR35-200A		C801,802	254 4260 948	Electrolytic 1 μ F/50V	CE04W1H010M
ZD401	276 0644 911	Zener diode MTZJ7.5A	7.5V	C803,804	254 4254 938	Electrolytic 47 μ F/16V	CE04W1C470M
ZD902,903	276 0644 937	Zener diode MTZJ9.1A	9.1V	C805,806	255 4200 901	Mylar film 100 pF/50V	CQ93P1H101J
ZD901	276 0645 978	Zener diode MTZJ36A	36V	C807,808	255 1264 940	Mylar film 2200 pF/50V	CQ93M1H222J(B)
RESISTORS GROUP (Not included carbon film \pm5% 1/4W)				C809,810	256 1035 907	Metalized 0.18 μ F/50V	CF93A1H184J
R402	247 0009 901	Carbon chip 4700 ohm 1/10W	RM73B--472J	C811,812	254 4260 948	Electrolytic 1 μ F/50V	CE04W1H010M
R404	247 0009 901	Carbon chip 4700 ohm 1/10W	RM73B--472J	C815,816	255 1265 949	Mylar film 0.012 μ F/50V	CQ93M1H123J(B)
R405	247 0009 985	Carbon chip 10 kohm 1/10W	RM73B--103J	C817,818	256 1034 940	Metalized 0.056 μ F/50V	CF93A1H563J
R406	247 0010 958	Carbon chip 20 kohm 1/10W	RM73B--203J	C819,820	254 4260 922	Electrolytic 0.03 μ F/50V	CE04W1HR33M
R411	247 0012 927	Carbon chip 100 kohm 1/10W	RM73B--104J	C901,902	253 1146 907	Ceramic 0.01 μ F/50V	CK45F1H103Z
R412-414	247 0009 985	Carbon chip 10 kohm 1/10W	RM73B--103J	C903,904	257 0012 966	Ceramic chip 0.01 μ F/50V	CK73F1H103Z
R801,802	247 0011 973	Carbon chip 62 kohm 1/10W	RM73B--623J	C905	254 4363 706	Electrolytic 8200 μ F/25V	CE04W1E822MC
R803,804	247 0007 987	Carbon chip 1.5 kohm 1/10W	RM73B--152J	C906	254 4256 787	Electrolytic 1000 μ F/25V	CE04W1E102MC
R805,806	247 0011 973	Carbon chip 62 kohm 1/10W	RM73B--623J	C907	257 0012 966	Ceramic chip 0.01 μ F/50V	CK73F1H103Z
				C908,909	254 4258 947	Electrolytic 47 μ F/35V	CE04W1V470M
				C910,911	257 0012 966	Ceramic chip 0.01 μ F/50V	CK73F1H103Z
				C912,913	253 1146 907	Ceramic 0.01 μ F/50V	CK45F1H103Z
				C914,915	254 4257 702	Electrolytic 3300 μ F/25V	CE04W1E332MC
				C916-919	257 0012 966	Ceramic chip 0.01 μ F/50V	CK73F1H103Z
				C920,921	254 4258 947	Electrolytic 47 μ F/35V	CE04W1V470M
				C922	256 1034 979	Metalized 0.1 μ F/50V	CF93A1H104J
				C923,924	254 4261 743	Electrolytic 330 μ F/50V	CE04W1H331MC

1U-2959 DSP UNIT ASS'Y

Ref. No.	Part No.	Part Name	Remarks	Q'ty	Ref. No.	Part No.	Part Name	Remarks
C925,926	254 4260 948	Electrolytic 1 μ F/50V	CE04W1H010M		SEMICONDUCTORS GROUP			
C927	257 0012 966	Ceramic chip 0.01 μ F/50V	CK73F1H103Z		IC001	262 2312 006	IC ZR38500(A3)	
C928	254 4254 909	Electrolytic 10 μ F/16V	CE04W1C100M		IC003	399 0299 009	IC SG-531PH(33MHZ)	
C929-935	257 0014 935	Ceramic chip 0.1 μ F/25V	CK73F1E104Z		IC016	262 1665 903	IC HD74HC74FP-TR	
C936,937	257 0008 983	Ceramic chip 1000 pF/50V	CK73B1H102K		IC017	262 1641 901	IC HD74HC157FP-TR	
C939	257 0008 983	Ceramic chip 1000 pF/50V	CK73B1H102K		IC018	262 2212 902	IC CS8412CS	
OTHER PARTS GROUP					IC019	262 1718 902	IC TC74HC00AF	
CN032	205 0653 036	3P VH connector base		1	IC020	262 1348 903	IC TC74HC123AF	
CN042	205 0884 083	4P connector base (TUC-P)		1	IC021	262 1640 902	IC HD74HC14FP-TR	
CN044	205 0884 083	4P connector base (TUC-P)		1	IC051,052	262 2324 900	IC MCM6205DJ15	
CN046	205 0884 083	4P connector base (TUC-P)		1	IC101	262 2158 901	IC AK5340-VS-E1	
CN047	205 0884 083	4P connector base (TUC-P)		1	IC102	399 0300 008	IC SG-531PH(12.288MHZ)	
CN053	205 0343 058	5P connector base (KR-PH)		1	IC103,104	263 0934 900	IC BA4510F	
CN054	205 0233 058	5P EH connector base		1	IC105	263 0673 902	IC BA10393F	
CN057	205 0343 058	5P connector base (KR-PH)		1	IC154-156	263 0896 909	IC NJM2068MD	
CN061	205 0943 018	6P connector base (TUC-P)		1	IC201-207	263 0896 909	IC NJM2068MD	
CN063,064	205 0943 018	6P connector base (TUC-P)		2	IC208	262 1853 100	IC NJU7313AL	
CN081-083	205 0884 096	8P connector base (TUC-P)		3	IC301	263 1018 003	IC MC14577CP	
CN086	205 0884 096	8P connector base (TUC-P)		1	IC302	263 0615 902	IC BA15218F	
CN089	205 0884 096	8P connector base (TUC-P)		1	IC303	263 1039 901	IC NJM360M	
CN091	205 0884 038	9P connector base (TUC-P)		1	IC304	262 1205 907	IC TC74HCU04AF	
CN094	205 0343 090	9P connector base (KR-PH)		1	IC305	263 0615 902	IC BA15218F	
CN099	205 0884 038	9P connector base (TUC-P)		1	IC306	262 2211 000	IC PD4606A	
CN109	205 0884 054	10P connector base (TUC-P)		1	IC307	399 0298 000	IC SG-531PH(46.08MHZ)	
CN111	205 0884 067	11P connector base (TUC-P)		1	IC308	262 2324 900	IC MCM6205DJ15	
CN113	205 0884 067	11P connector base (TUC-P)		1	IC309	262 1205 907	IC TC74HCU04AF	
CN121	205 0884 070	12P connector base (TUC-P)		1	IC310	269 0097 007	IC GP1F32R	
CN123	205 0884 070	12P connector base (TUC-P)		1	IC314	262 1205 907	IC TC74HCU04AF	
CN132	205 0943 005	13P connector base (TUC-P)		1	IC315	262 2213 901	IC TC74HC151AF	
CN142	205 0884 012	14P connector base (TUC-P)		1	IC317	263 0755 008	IC CX20106A	
CN143	205 1030 014	14P connector socket TRC-X		1	IC401	262 2321 013	IC TMP87CS71F-6519	
CN149	205 0884 012	14P connector base (TUC-P)		1	IC402	262 2322 012	IC TMP87CP71F-6520	
CN261,262	205 1030 001	26P connector socket TRC-X		2	IC501-503	262 2210 904	IC SM5841HS	
F011-014	202 0040 909	Fuse clip		4	IC504-506	262 2145 008	IC PCM69AP	
F011,012	206 1015 061	Fuse 2A	Europe/Asia model	2	IC507-509	263 0896 909	IC NJM2068MD	
F011,012	206 1039 063	Fuse 2A	Taiwan model	2	TR102	273 0384 900	Transistor 2SC2412K(S)	
F013,014	206 1015 067	Fuse 4.0A	Europe/Asia model	2	TR151-156	273 0414 906	Transistor 2SC3326(A/B)	
F013,014	206 1039 092	Fuse 4.0A	Taiwan model	2	TR157	269 0083 901	Transistor DTA114EK	
	202 0040 909	Fuse clip		4	TR201-203	275 0094 908	Transistor 2SK209-GR	
	417 0253 026	Radiator		1	TR204	269 0055 900	Transistor DTA144EK	
	513 2585 032	Fuse label		2	TR205	269 0054 901	Transistor DTC144EK	
	513 2585 058	Fuse label		2	TR301	273 0384 900	Transistor 2SC2412K(S)	
					TR302	269 0119 901	Transistor DTA124EK	
					TR303	273 0384 900	Transistor 2SC2412K(S)	

Ref. No.	Part No.	Part Name	Remarks
TR304	271 0238 908	Transistor 2SA1037K(S/R)	
TR305	272 0131 901	Transistor 2SB1041(R)	
TR306	271 0238 908	Transistor 2SA1037K(S/R)	
TR307	274 0169 908	Transistor 2SD1292(R)	
TR308	273 0384 900	Transistor 2SC2412K(S)	
TR309	269 0083 901	Transistor DTA114EK	
TR401	269 0083 901	Transistor DTA114EK	
TR402	269 0054 901	Transistor DTC144EK	
TR403	273 0384 900	Transistor 2SC2412K(S)	
TR404,405	269 0054 901	Transistor DTC144EK	
D101-106	276 0438 910	Diode MA151A	
D108	276 0438 910	Diode MA151A	
D201-203	276 0438 910	Diode MA151A	
D301-303	276 0438 910	Diode MA151A	
D401-403	276 0438 910	Diode MA151A	
D404	276 0553 905	Diode 1SR35-200A	
CD301	276 0663 905	Diode KV1851-TL	
ZD401	276 0634 905	Zener diode MTZJ3.3A	3.3V
RESISTORS GROUP			
R028	247 0018 905	Carbon chip 0 ohm 1/10W	RM73B--0R0K
R030	247 0006 904	Carbon chip 270 ohm 1/10W	RM73B--271J
R031-033	247 0018 905	Carbon chip 0 ohm 1/10W	RM73B--0R0K
R035	247 0018 905	Carbon chip 0 ohm 1/10W	RM73B--0R0K
R036	247 0007 945	Carbon chip 1 kohm 1/10W	RM73B--102J
R037	247 0018 905	Carbon chip 0 ohm 1/10W	RM73B--0R0K
R038	247 0012 927	Carbon chip 100 kohm 1/10W	RM73B--104J
R039,040	247 0018 905	Carbon chip 0 ohm 1/10W	RM73B--0R0K
R051	244 2043 953	Metal oxide 470 ohm 1W	RS14B3A471JNBS(S)
R052-056	247 0004 922	Carbon chip 47 ohm 1/10W	RM73B--470J
R057	247 0007 945	Carbon chip 1 kohm 1/10W	RM73B--102J
R058	247 0004 922	Carbon chip 47 ohm 1/10W	RM73B--470J
R059	247 0018 905	Carbon chip 0 ohm 1/10W	RM73B--0R0K
R060	247 0004 922	Carbon chip 47 ohm 1/10W	RM73B--470J
R061	247 0012 927	Carbon chip 100 kohm 1/10W	RM73B--104J
R062	247 0009 985	Carbon chip 10 kohm 1/10W	RM73B--103J
R063-065	247 1018 904	Carbon chip 0 ohm 1/10W	RM73B20R0K
R101-104	247 0009 901	Carbon chip 4.7 kohm 1/10W	RM73B--472J
R105,106	247 0011 944	Carbon chip 47 kohm 1/10W	RM73B--473J
R107,108	247 0009 998	Carbon chip 11 kohm 1/10W	RM73B--113J
R109-114	247 0009 901	Carbon chip 4.7 kohm 1/10W	RM73B--472J
R115-118	247 0006 920	Carbon chip 330 kohm 1/10W	RM73B--331J
R120-123	247 0009 901	Carbon chip 4.7 kohm 1/10W	RM73B--472J

Ref. No.	Part No.	Part Name	Remarks
R124	247 0010 903	Carbon chip 12 kohm 1/10W	RM73B--123J
R125-127	247 0009 901	Carbon chip 4.7 kohm 1/10W	RM73B--472J
R128-130	247 0005 905	Carbon chip 100 ohm 1/10W	RM73B--101J
R131-137	247 0018 905	Carbon chip 0 ohm 1/10W	RM73B--0R0K
R151,152	247 0012 927	Carbon chip 100 kohm 1/10W	RM73B--104J
R153-156	247 0009 901	Carbon chip 4.7 kohm 1/10W	RM73B--472J
R159,160	247 0018 905	Carbon chip 0 ohm 1/10W	RM73B--0R0K
R161,162	247 0005 989	Carbon chip 220 ohm 1/10W	RM73B--221J
R163,164	247 0008 960	Carbon chip 3.3 kohm 1/10W	RM73B--332J
R165-168	247 0012 927	Carbon chip 100 kohm 1/10W	RM73B--104J
R169	247 0009 901	Carbon chip 4.7 kohm 1/10W	RM73B--472J
R170	247 0009 943	Carbon chip 6.8 kohm 1/10W	RM73B--682J
R171	247 0009 901	Carbon chip 4.7 kohm 1/10W	RM73B--472J
R172	247 0009 943	Carbon chip 6.8 kohm 1/10W	RM73B--682J
R175,176	247 0018 905	Carbon chip 0 ohm 1/10W	RM73B--0R0K
R177,178	247 0005 989	Carbon chip 220 ohm 1/10W	RM73B--221J
R179,180	247 0008 960	Carbon chip 3.3 kohm 1/10W	RM73B--332J
R181--184	247 0012 927	Carbon chip 100 kohm 1/10W	RM73B--104J
R185-188	247 0009 901	Carbon chip 4.7 kohm 1/10W	RM73B--472J
R191,192	247 0018 905	Carbon chip 0 ohm 1/10W	RM73B--0R0K
R193,194	247 0005 989	Carbon chip 220 ohm 1/10W	RM73B--221J
R195,196	247 0008 960	Carbon chip 3.3 kohm 1/10W	RM73B--332J
R197,198	247 0012 927	Carbon chip 100 kohm 1/10W	RM73B--104J
R201,202	247 0010 961	Carbon chip 22 kohm 1/10W	RM73B--223J
R203,204	247 0010 932	Carbon chip 16 kohm 1/10W	RM73B--163J
R205-208	247 0009 901	Carbon chip 4.7 kohm 1/10W	RM73B--472J
R209,210	247 0007 932	Carbon chip 910 ohm 1/10W	RM73B--911J
R211,212	247 0007 945	Carbon chip 1 kohm 1/10W	RM73B--102J
R213,214	247 0012 927	Carbon chip 100 kohm 1/10W	RM73B--104J
R215,216	247 0009 901	Carbon chip 4.7 kohm 1/10W	RM73B--472J
R217,218	247 0009 930	Carbon chip 6.2 kohm 1/10W	RM73B--622J
R219,220	247 0009 901	Carbon chip 4.7 kohm 1/10W	RM73B--472J
R221,222	247 0011 944	Carbon chip 47 kohm 1/10W	RM73B--473J
R223,224	247 0008 960	Carbon chip 3.3 kohm 1/10W	RM73B--332J
R225,226	247 0009 927	Carbon chip 5.6 kohm 1/10W	RM73B--562J
R227,228	247 0008 960	Carbon chip 3.3 kohm 1/10W	RM73B--332J
R229,230	247 0005 905	Carbon chip 100 ohm 1/10W	RM73B--101J
R231,232	247 0012 927	Carbon chip 100 kohm 1/10W	RM73B--104J
R233	247 0010 961	Carbon chip 22 kohm 1/10W	RM73B--223J
R234	247 0010 932	Carbon chip 16 kohm 1/10W	RM73B--163J
R235,236	247 0009 901	Carbon chip 4.7 kohm 1/10W	RM73B--472J
R237	247 0007 932	Carbon chip 910 ohm 1/10W	RM73B--911J
R238	247 0007 945	Carbon chip 1 kohm 1/10W	RM73B--102J
R239	247 0012 927	Carbon chip 100 kohm 1/10W	RM73B--104J
R240	247 0009 901	Carbon chip 4.7 kohm 1/10W	RM73B--472J
R241	247 0009 930	Carbon chip 6.2 kohm 1/10W	RM73B--622J
R242	247 0009 901	Carbon chip 4.7 kohm 1/10W	RM73B--472J
R243	247 0011 944	Carbon chip 47 kohm 1/10W	RM73B--473J
R244,245	247 0009 901	Carbon chip 4.7 kohm 1/10W	RM73B--472J
R246	247 0005 905	Carbon chip 100 ohm 1/10W	RM73B--101J
R247	247 0012 927	Carbon chip 100 kohm 1/10W	RM73B--104J

Ref. No.	Part No.	Part Name	Remarks	Ref. No.	Part No.	Part Name	Remarks
R248-250	247 0011 944	Carbon chip 47 kohm 1/10W	RM73B-473J	R361	247 0009 901	Carbon chip 4.7 kohm 1/10W	RM73B-472J
R252-255	247 0011 944	Carbon chip 47 kohm 1/10W	RM73B-473J	R362	247 0009 985	Carbon chip 10 kohm 1/10W	RM73B-103J
R256,257	247 0010 974	Carbon chip 24 kohm 1/10W	RM73B-243J	R363	247 0012 927	Carbon chip 100 kohm 1/10W	RM73B-104J
R258	247 0005 905	Carbon chip 100 ohm 1/10W	RM73B-101J	R364-366	247 0009 985	Carbon chip 10 kohm 1/10W	RM73B-103J
R259,260	247 0009 901	Carbon chip 4.2 kohm 1/10W	RM73B-472J	R367-369	247 0009 901	Carbon chip 4.7 kohm 1/10W	RM73B-472J
R261	247 0005 905	Carbon chip 100 ohm 1/10W	RM73B-101J	R370	247 0004 977	Carbon chip 75 ohm 1/10W	RM73B-750J
R262	247 0012 927	Carbon chip 100 kohm 1/10W	RM73B-104J	R371	247 0005 905	Carbon chip 100 ohm 1/10W	RM73B-101J
R264	247 0010 961	Carbon chip 22 kohm 1/10W	RM73B-223J	R372	247 0008 928	Carbon chip 2.2 ohm 1/10W	RM73B-222J
R265,266	247 0010 932	Carbon chip 16 kohm 1/10W	RM73B-163J	R373	247 0011 944	Carbon chip 47 kohm 1/10W	RM73B-473J
R267-270	247 0009 901	Carbon chip 4.7 kohm 1/10W	RM73B-472J	R374	247 0005 905	Carbon chip 100 ohm 1/10W	RM73B-101J
R271,272	247 0007 945	Carbon chip 1 kohm 1/10W	RM73B-102J	R375	247 0011 928	Carbon chip 93 kohm 1/10W	RM73B-393J
R273,274	247 0007 932	Carbon chip 910 ohm 1/10W	RM73B-911J	R376	247 0007 945	Carbon chip 1 kohm 1/10W	RM73B-102J
R275	247 0011 944	Carbon chip 47 kohm 1/10W	RM73B-473J	R377	247 0004 922	Carbon chip 47 ohm 1/10W	RM73B-470J
R276	247 0018 905	Carbon chip 0 ohm 1/10W	RM73B-0R0K	R378	247 0012 972	Carbon chip 160 kohm 1/10W	RM73B-164J
R301-304	247 0009 985	Carbon chip 10 kohm 1/10W	RM73B-103J	R379	247 0005 905	Carbon chip 100 ohm 1/10W	RM73B-101J
R305	247 0006 975	Carbon chip 510 ohm 1/10W	RM73B-511J	R401	247 0009 985	Carbon chip 10 kohm 1/10W	RM73B-103J
R306	247 0004 980	Carbon chip 82 ohm 1/10W	RM73B-820J	R402	247 0012 927	Carbon chip 100 kohm 1/10W	RM73B-104J
R307-309	247 0007 945	Carbon chip 1 kohm 1/10W	RM73B-102J	R403	247 0009 985	Carbon chip 10 kohm 1/10W	RM73B-103J
R310	247 0009 901	Carbon chip 4.7 kohm 1/10W	RM73B-472J	R404-411	247 0009 901	Carbon chip 4.7 kohm 1/10W	RM73B-472J
R311	247 0005 947	Carbon chip 150 ohm 1/10W	RM73B-151J	R412-415	247 0009 985	Carbon chip 10 kohm 1/10W	RM73B-103J
R312	247 0008 928	Carbon chip 2.2 kohm 1/10W	RM73B-222J	R424	247 0009 985	Carbon chip 10 kohm 1/10W	RM73B-103J
R313	247 0006 920	Carbon chip 330 ohm 1/10W	RM73B-331J	R426	247 0006 975	Carbon chip 510 ohm 1/10W	RM73B-511J
R314-316	247 0007 945	Carbon chip 1 kohm 1/10W	RM73B-102J	R427	247 0007 945	Carbon chip 1 kohm 1/10W	RM73B-102J
R317	247 0009 985	Carbon chip 10 kohm 1/10W	RM73B-103J	R429,430	247 0005 905	Carbon chip 100 ohm 1/10W	RM73B-101J
R318,319	247 0007 945	Carbon chip 1 kohm 1/10W	RM73B-102J	R431-434	247 0009 901	Carbon chip 4.7 kohm 1/10W	RM73B-472J
R320	247 0009 985	Carbon chip 10 kohm 1/10W	RM73B-103J	R435-448	247 0009 985	Carbon chip 10 kohm 1/10W	RM73B-103J
R321,322	247 0007 945	Carbon chip 1 kohm 1/10W	RM73B-102J	R454	247 0009 985	Carbon chip 10 kohm 1/10W	RM73B-103J
R323,324	247 0008 944	Carbon chip 2.7 kohm 1/10W	RM73B-272J	R455	247 0013 900	Carbon chip 220 kohm 1/10W	RM73B-224J
R325,326	247 0018 905	Carbon chip 0 ohm 1/10W	RM73B-0R0K	R456	247 0009 985	Carbon chip 10 kohm 1/10W	RM73B-103J
R327	247 0005 905	Carbon chip 100 ohm 1/10W	RM73B-101J	R457	247 0009 901	Carbon chip 4.7 kohm 1/10W	RM73B-472J
R328	247 0011 986	Carbon chip 68 kohm 1/10W	RM73B-683J	R458	247 0009 985	Carbon chip 10 kohm 1/10W	RM73B-103J
R329	247 0004 964	Carbon chip 68 ohm 1/10W	RM73B-680J	R459	247 0007 945	Carbon chip 1 kohm 1/10W	RM73B-102J
R331,332	247 0009 985	Carbon chip 10 kohm 1/10W	RM73B-103J	R460	247 0009 901	Carbon chip 4.7 kohm 1/10W	RM73B-472J
R333,334	247 0013 900	Carbon chip 220 kohm 1/10W	RM73B-224J	R461,462	247 0007 945	Carbon chip 1 kohm 1/10W	RM73B-102J
R335	247 0009 956	Carbon chip 7.5 ohm 1/10W	RM73B-752J	R463	241 2387 940	Carbon film 4.7 ohm 1/4W(NB)	RD14B2E4R7JNBS
R336	247 0005 905	Carbon chip 100 ohm 1/10W	RM73B-101J	R464	247 0018 905	Carbon chip 0 ohm 1/10W	RM73B-0R0K
R337-341	247 0009 985	Carbon chip 10 kohm 1/10W	RM73B-103J	R466	247 0009 985	Carbon chip 10 kohm 1/10W	RM73B-103J
R342	247 0007 945	Carbon chip 1 kohm 1/10W	RM73B-102J	R468,469	247 0009 985	Carbon chip 10 kohm 1/10W	RM73B-103J
R343	247 0012 927	Carbon chip 100 kohm 1/10W	RM73B-104J	R470-472	247 0009 901	Carbon chip 4.7 kohm 1/10W	RM73B-472J
R344	247 0013 900	Carbon chip 220 kohm 1/10W	RM73B-224J	R473	247 0008 928	Carbon chip 2.2 kohm 1/10W	RM73B-222J
R346	247 0012 927	Carbon chip 100 kohm 1/10W	RM73B-104J	R481	247 0009 985	Carbon chip 10 kohm 1/10W	RM73B-103J
R347,348	247 0009 985	Carbon chip 10 kohm 1/10W	RM73B-103J	R482-486	247 0009 901	Carbon chip 4.7 kohm 1/10W	RM73B-472J
R349	247 0011 944	Carbon chip 47 kohm 1/10W	RM73B-473J	R486,487	247 0009 985	Carbon chip 10 kohm 1/10W	RM73B-103J
R350	247 0005 921	Carbon chip 120 ohm 1/10W	RM73B-121J	R501-515	247 0006 920	Carbon chip 330 ohm 1/10W	RM73B-331J
R351-353	247 0009 985	Carbon chip 10 kohm 1/10W	RM73B-103J	R517,518	247 0007 961	Carbon chip 1.2 kohm 1/10W	RM73B-122J
R354	247 0007 945	Carbon chip 1 kohm 1/10W	RM73B-102J	R519,520	247 0006 988	Carbon chip 560 ohm 1/10W	RM73B-561J
R355	247 0014 967	Carbon chip 1 Mohm 1/10W	RM73B-105J	R521-524	247 0009 901	Carbon chip 4.7 kohm 1/10W	RM73B-472J
R356	247 0006 962	Carbon chip 470 ohm 1/10W	RM73B-471J	R525,526	247 0007 961	Carbon chip 1.2 kohm 1/10W	RM73B-122J
R357	247 0012 969	Carbon chip 150 kohm 1/10W	RM73B-154J	R527,528	247 0006 988	Carbon chip 560 ohm 1/10W	RM73B-561J
R358,359	247 0011 944	Carbon chip 47 kohm 1/10W	RM73B-473J	R529-532	247 0009 901	Carbon chip 4.7 kohm 1/10W	RM73B-472J
R360	247 0009 985	Carbon chip 10 kohm 1/10W	RM73B-103J				

Ref. No.	Part No.	Part Name	Remarks	Ref. No.	Part No.	Part Name	Remarks
R533,534	247 0007 961	Carbon chip 1.2 kohm 1/10W	RM73B-122J	C165,166	254 4193 905	Electrolytic 10 μ F/16V	CE04W1C100M (SRA)
R535,536	247 0006 988	Carbon chip 560 ohm 1/10W	RM73B-561J	C175,176	254 4193 905	Electrolytic 10 μ F/16V	CE04W1C100M (SRA)
R537-540	247 0009 901	Carbon chip 4.7 kohm 1/10W	RM73B-472J	C177	255 4202 925	Mylar film 820 pF/50V	CQ93P1H821J
CAPACITORS GROUP				C178	256 1034 979	Metalized 0.1 μ F/50V	CF93A1H104J
C039-042	257 0012 966	Ceramic chip 0.01 μ F/50V	CK73F1H103Z	C179	255 4201 926	Mylar film 330 pF/50V	CQ93P1H331J
C043	257 0014 935	Ceramic chip 0.1 μ F/25V	CK73F1E104Z	C180	256 1034 937	Metalized 0.047 μ F/50V	CF93A1H473J
C044	256 1034 937	Metalized 0.047 μ F/50V	CF93A1H473J	C181,182	254 4193 905	Electrolytic 10 μ F/16V	CE04W1C100M (SRA)
C045,046	257 0012 966	Ceramic chip 0.01 μ F/50V	CK73F1H103Z	C191,192	254 4193 905	Electrolytic 10 μ F/16V	CE04W1C100M (SRA)
C047	254 4196 957	Electrolytic 2.2 μ F/50V	CE04W1H2R2M (SRA)	C193,194	255 4202 925	Mylar film 820 pF/50V	CQ93P1H821J
C048	257 0012 966	Ceramic chip 0.01 μ F/50V	CK73F1H103Z	C195,196	255 4201 926	Mylar film 330 pF/50V	CQ93P1H331J
C051-055	257 0014 935	Ceramic chip 0.1 μ F/25V	CK73F1E104Z	C197,198	254 4193 905	Electrolytic 10 μ F/16V	CE04W1C100M (SRA)
C056	257 0012 966	Ceramic chip 0.01 μ F/50V	CK73F1H103Z	C201,202	256 1034 966	Metalized 0.082 μ F/50V	CF93A1H823J
C057-061	257 0014 935	Ceramic chip 0.1 μ F/25V	CK73F1E104Z	C203,204	256 1034 982	Metalized 0.12 μ F/50V	CF93A1H124J
C062	254 4260 948	Electrolytic 1 μ F/50V	CE04W1H010M	C205-208	254 4193 905	Electrolytic 10 μ F/16V	CE04W1C100M (SRA)
C063-067	257 0014 935	Ceramic chip 0.1 μ F/25V	CK73F1E104Z	C209,210	255 1264 982	Mylar film 4700 pF/50V	CQ93M1H472J(B)
C068	257 0012 966	Ceramic chip 0.01 μ F/50V	CK73F1H103Z	C211,212	254 4252 930	Electrolytic 100 μ F/10V	CE04W1A101M
C069-072	257 0014 935	Ceramic chip 0.1 μ F/25V	CK73F1E104Z	C213,214	257 0014 935	Ceramic chip 0.1 μ F/25V	CK73F1E104Z
C073	257 0008 983	Ceramic chip 1000 pF/50V	CK73B1H102K	C215	256 1034 966	Metalized 0.082 μ F/50V	CF93A1H823J
C074,075	257 0014 935	Ceramic chip 0.1 μ F/25V	CK73F1E104Z	C216	256 1034 982	Metalized 0.12 μ F/50V	CF93A1H124J
C076	256 1034 979	Metalized 0.1 μ F/50V	CF93A1H104J	C217,218	254 4193 905	Electrolytic 10 μ F/16V	CE04W1C100M (SRA)
C077	257 0012 966	Ceramic chip 0.01 μ F/50V	CK73F1H103Z	C219	255 1264 982	Mylar film 4700 pF/50V	CQ93M1H472J(B)
C078	257 0008 983	Ceramic chip 1000 pF/50V	CK73B1H102K	C220	254 4193 905	Electrolytic 10 μ F/16V	CE04W1C100M (SRA)
C079-081	257 0012 966	Ceramic chip 0.01 μ F/50V	CK73F1H103Z	C221,222	257 0014 935	Ceramic chip 0.1 μ F/25V	CK73F1E104Z
C082	254 4196 957	Electrolytic 2.2 μ F/50V	CE04W1H2R2M (SRA)	C223,224	257 0012 982	Ceramic chip 0.022 μ F/50V	CK73F1H223Z
C083	257 0012 966	Ceramic chip 0.01 μ F/50V	CK73F1H103Z	C225	254 4193 905	Electrolytic 10 μ F/16V	CE04W1C100M (SRA)
C101,102	257 0014 935	Ceramic chip 0.1 μ F/25V	CK73F1E104Z	C228	256 1034 982	Metalized 0.12 μ F/50V	CF93A1H124J
C103,104	254 4193 905	Electrolytic 10 μ F/16V	CE04W1C100M (SRA)	C229	256 1034 940	Metalized 0.056 μ F/50V	CF93A1H563J
C105,106	254 4196 944	Electrolytic 1 μ F/50V	CE04W1H010M (SRA)	C230,231	257 0014 935	Ceramic chip 0.1 μ F/25V	CK73F1E104Z
C107,108	254 4193 905	Electrolytic 10 μ F/16V	CE04W1C100M (SRA)	C232	254 4193 905	Electrolytic 10 μ F/16V	CE04W1C100M (SRA)
C109,110	255 1264 924	Mylar film 1500 pF/50V	CQ93M1H152J(B)	C233,234	254 4196 944	Electrolytic 1 μ F/50V	CE04W1H010M (SRA)
C112-115	257 0014 935	Ceramic chip 0.1 μ F/25V	CK73F1E104Z	C235,236	256 1034 966	Metalized 0.082 μ F/50V	CF93A1H823J
C116	254 4193 905	Electrolytic 10 μ F/16V	CE04W1C100M (SRA)	C237,238	256 1034 982	Metalized 0.12 μ F/50V	CF93A1H124J
C118	257 0014 935	Ceramic chip 0.1 μ F/25V	CK73F1E104Z	C239,240	254 4193 905	Electrolytic 10 μ F/16V	CE04W1C100M (SRA)
C119	254 4193 905	Electrolytic 10 μ F/16V	CE04W1C100M (SRA)	C241-250	257 0014 935	Ceramic chip 0.1 μ F/25V	CK73F1E104Z
C120	257 0014 935	Ceramic chip 0.1 μ F/25V	CK73F1E104Z	C251,252	254 4196 944	Electrolytic 1 μ F/50V	CE04W1H010M (SRA)
C122	257 0008 983	Ceramic chip 1000 pF/50V	CK73B1H102K	C303	257 0011 941	Ceramic chip 0.022 μ F/25V	CK73B1E223K
C123	257 0012 966	Ceramic chip 0.01 μ F/50V	CK73F1H103Z	C304-307	254 4260 948	Electrolytic 1 μ F/50V	CE04W1H010M
C124	256 1034 979	Metalized 0.1 μ F/50V	CF93A1H104J	C308	257 0004 932	Ceramic chip 75 pF/50V	CC73SL1H750J
C125	257 0012 966	Ceramic chip 0.01 μ F/50V	CK73F1H103Z	C309,310	257 0010 900	Ceramic chip 0.01 μ F/50V	CK73B1H103K
C126	257 0014 935	Ceramic chip 0.1 μ F/25V	CK73F1E104Z	C311	254 4254 909	Electrolytic 10 μ F/16V	CE04W1C100M
C127	257 0012 966	Ceramic chip 0.01 μ F/50V	CK73F1H103Z	C312	257 0012 966	Ceramic chip 0.01 μ F/50V	CK73F1H103Z
C128	257 0008 983	Ceramic chip 1000 pF/50V	CK73B1H102K	C313	256 1035 952	Metalized 0.47 μ F/50V	CF93A1H474J
C129	257 0004 961	Ceramic chip 100 pF/50V	CC73SL1H101J	C314	257 0008 983	Ceramic chip 1000 pF/50V	CK73B1H102K
C130-139	257 0008 983	Ceramic chip 1000 pF/50V	CK73B1H102K	C315	256 1035 952	Metalized 0.47 μ F/50V	CF93A1H474J
C151,152	257 0012 966	Ceramic chip 0.01 μ F/50V	CK73F1H103Z	C316	257 0014 935	Ceramic chip 0.1 μ F/25V	CK73F1E104Z
C153-158	255 1265 907	Mylar film 6800 pF/50V	CQ93M1H682J(B)	C318-321	257 0012 966	Ceramic chip 0.01 μ F/50V	CK73F1H103Z
C159,160	254 4193 905	Electrolytic 10 μ F/16V	CE04W1C100M (SRA)	C322,323	254 4254 909	Electrolytic 10 μ F/16V	CE04W1C100M
C161,162	255 4202 925	Mylar film 820 pF/50V	CQ93P1H821J	C324-326	257 0012 966	Ceramic chip 0.01 μ F/50V	CK73F1H103Z
C163,164	255 4201 926	Mylar film 330 pF/50V	CQ93P1H331J	C327	254 3053 936	Electrolytic 47 μ F/16V	CE04D1C470MBP
				C328	257 0011 996	Ceramic chip 0.1 μ F/25V	CK73B1E104K

Ref. No.	Part No.	Part Name	Remarks	Ref. No.	Part No.	Part Name	Remarks	Q'ty
C329	257 0010 900	Ceramic chip 0.01 μ F/50V	CK73B1H103K	CN271	205 0815 023	27P FFC base(BTM)		1
C330,331	254 4260 948	Electrolytic 1 μ F/50V	CE04W1H010M	CN271	205 0702 084	27P FFC connector base(L)		1
C332	254 4254 909	Electrolytic 10 μ F/16V	CE04W1C100M	CN291	205 0815 036	29P FFC base(BTM)		1
C333	257 0012 966	Ceramic chip 0.01 μ F/50V	CK73F1H103Z	FB101,102	235 0049 900	Beads inductor		2
C334	257 0010 900	Ceramic chip 0.01 μ F/50V	CK73B1H103K	FB103	235 0106 908	Chip emifil (21A05)		1
C335	254 4252 930	Electrolytic 100 μ F/10V	CE04W1A101M	FB201-203	235 0049 900	Beads inductor		3
C336	257 0002 963	Ceramic chip 15 pF/50V	CC73SL1H150J	FB204-207	235 0049 900	Beads inductor		3
C338	254 4254 938	Electrolytic 47 μ F/16V	CE04W1C470M	FB208-211	235 0049 900	Beads inductor		4
C339	257 0014 935	Ceramic chip 0.1 μ F/25V	CK73F1E104Z	FB212-215	235 0049 900	Beads inductor		4
C346	257 0012 966	Ceramic chip 0.01 μ F/50V	CK73F1H103Z	FB216	235 0049 900	Beads inductor		1
C348	257 0012 966	Ceramic chip 0.01 μ F/50V	CK73F1H103Z	FB301	235 0106 908	Chip emifil (21A05)		1
C349	257 0003 904	Ceramic chip 22 pF/50V	CC73SL1H220J	FB302	235 0106 908	Chip emifil (21A05)		1
C350	254 4254 909	Electrolytic 10 μ F/16V	CE04W1C100M	FB401,402	235 0049 900	Beads inductor		2
C351,352	257 0012 966	Ceramic chip 0.01 μ F/50V	CK73F1H103Z	JK301	204 8357 030	2P pin jack		1
C354	254 4256 923	Electrolytic 33 μ F/25V	CE04W1E330M	JK302	204 8260 004	Mini jack		1
C355,356	254 4260 948	Electrolytic 1 μ F/50V	CE04W1H010M	L301	235 0060 905	Inductor 2.2 μ H		1
C357	254 4260 964	Electrolytic 3.3 μ F/50V	CE04W1H3R3M	L302	235 0070 953	Inductor 68 μ H		1
C358	257 0005 986	Ceramic chip 330 pF/50V	CC73SL1H331J	L303,304	235 0060 918	Inductor 4.7 μ H		2
C359	257 0014 935	Ceramic chip 0.1 μ F/25V	CK73F1E104Z	L308	235 0060 905	Inductor 2.2 μ H		1
C360	257 0012 966	Ceramic chip 0.01 μ F/50V	CK73F1H103Z	LF301	261 0152 003	Band pass filter 2.88M BPF(5VLT)		1
C401	257 0014 935	Ceramic chip 0.1 μ F/25V	CK73F1E104Z	LF302-305	235 0048 901	EMI filter (103)TP		4
C404	257 0014 935	Ceramic chip 0.1 μ F/25V	CK73F1E104Z	LF401,402	235 0048 901	EMI filter (103)TP		2
C412	254 4254 909	Electrolytic 10 μ F/16V	CE04W1C100M	W002	203 0526 073	1P contact Ass		1
C413	254 4250 932	Electrolytic 220 μ F/6.3V	CE04W0J221M	X301	399 0311 000	Crystal (18.432MHZ)		1
C414	256 1034 982	Metalized 0.12 μ F/50V	CF93A1H124J	X401,402	399 0191 903	Ceramic resonator CST4.00MGW-TF01		2
C415	254 4254 909	Electrolytic 10 μ F/16V	CE04W1C100M					
C416	257 0012 966	Ceramic chip 0.01 μ F/50V	CK73F1H103Z					
C417	259 0007 702	Back up cap. 8200 μ F	SB CAP=822=C					
C418	257 0012 966	Ceramic chip 0.01 μ F/50V	CK73F1H103Z					
C472	257 0012 966	Ceramic chip 0.01 μ F/50V	CK73F1H103Z					
C473,474	257 0008 983	Ceramic chip 1000 pF/50V	CK73B1H102K					
C476-482	257 0008 983	Ceramic chip 1000 pF/50V	CK73B1H102K					
C501-503	254 4193 905	Electrolytic 10 μ F/16V	CE04W1C100M (SRA)					
C504,506	257 0012 966	Ceramic chip 0.01 μ F/50V	CK73F1H103Z					
C507-509	254 4193 905	Electrolytic 10 μ F/16V	CE04W1C100M (SRA)					
C510-515	257 0012 966	Ceramic chip 0.01 μ F/50V	CK73F1H103Z					
C516-518	254 4193 905	Electrolytic 10 μ F/16V	CE04W1C100M (SRA)					
C519-530	254 4252 930	Electrolytic 100 μ F/10V	CE04W1A101M					
C531-542	257 0004 961	Ceramic chip 100 pF/50V	CC73SL1H101J					
OTHER PARTS GROUP								
CN033	205 0343 032	3P connector base(KR-PH)						2
CN072	205 0343 074	7P connector base(KR-PH)						1
CN093	205 0343 090	9P connector base(KR-PH)						1
CN122	205 0375 026	12P connector base(KR-PH)						1
CN143	205 1032 012	14P connector plug TRC-X						1
CN261,262	205 1032 009	26P connector plug TRC-X						2

**PARTS LIST OF EXPLODED VIEW
(BLACK MODEL)**

Ref. No.	Part No.	Part Name	Remarks	Q'ty	Ref. No.	Part No.	Part Name	Remarks	Q'ty
1	1U-2944	Power amp.P.W.B. unit-2		1s	35	412 4150 104	P.W.B.support		1
2	1U-2948-1	Audio in P.W.B. unit		1s	36	417 0537 111	Power radiator		1
2-1	1U-2948-3	Ext. in P.W.B. unit		(1)	37	272 0147 005	Transistor 2SB1317(S)		5
2-2	1U-2948-4	Volume-1 P.W.B.unit		(1)	38	274 0184 006	Transistor 2SD1975(S)		5
3	1U-2949-1	Pre amp.P.W.B.unit		1s	39	412 4127 001	P.W.B.bracet (B)		2
3-1	1U-2949-2	Power supply-2 P.W.B.unit		(1)	40	412 4144 107	Radiator bracket (F)		1
3-2	1U-2949-3	Remocon P.W.B.unit		(1)	41	412 4145 106	Radiator bracket (R)		1
3-3	1U-2949-4	Head phone P.W.B.unit		(1)	42	414 0784 208	Shield chassis (D)		1
3-4	1U-2949-5	Volume-2 P.W.B.unit		(1)	43	144 2518 224	Front panel Ass'y		1
3-5	1U-2949-6	Power supply-4 P.W.B. unit		(1)	44	113 1791 009	Selector knob		11
3-6	1U-2949-11	Power switch P.W.B.unit		(1)	45	412 4163 007	Switch bracket		1
4	1U-2951-1	S-video P.W.B.unit		1s	46	113 1464 019	Push knob		2
4-1	1U-2951-2	C-video P.W.B.unit		(1)	47	412 2741 036	P.W.B.holder	H=10	1
4-2	1U-2951-3	Display P.W.B.unit		(1)	48	449 0133 017	P.W.B.holder		1
4-3	1U-2951-4	Master volume P.W.B.unit		(1)	49	105 1207 204	Bottom cover		1
4-4	1U-2951-5	Switch P.W.B.unit		(1)	50	104 0194 205	Foot Ass'y		4
4-5	1U-2951-6	Volume LED P.W.B.unit		(1)	51	—	—		—
5	1U-2952-1	Power amp.P.W.B.unit-2		1s	52	233 6209 007	Power trans (PRE)		1
5-1	1U-2952-2	Power supply-1 P.W.B.unit		(1)	53	412 4157 000	Trans bracket		1
5-2	1U-2952-3	Speaker termial P.W.B.unit		(1)	54	233 6213 006	Power trans (E3)	Taiwan model	1
5-3	1U-2952-4	Power supply-5 P.W.B.unit		(1)	—	233 6214 005	Power trans (E2)	Europe/Asia model	1
6	1U-2958-1	Power supply-3 P.W.B.unit		1s	55	412 4151 006	Support bracket (A)		1
6-1	1U-2958-2	Wiring P.W.B.unit		(1)	56	412 4152 005	Support bracket (B)		1
6-2	1U-2958-3	Tone-2 P.W.B.unit		(1)	57	—	—		—
7	1U-2959-1	DSP P.W.B.unit		1s	58	102 0576 225	Top cover		1
7-1	1U-2959-2	Micon P.W.B.unit		(1)	59	112 0790 008	Knob Ass'y (M)		1
8	411 1350 205	Front chassis		1	60	112 0685 100	Knob (MARU)		2
9	412 4160 000	Phone bracket		1	61	113 1792 008	Power knob Ass'y		1
10	412 4161 106	Volume bracket		1	62	461 0501 005	Rubber sheet		4
11	441 1793 009	Snap plate		1	63	—	Asatate cross tape (360x20)	Sub-material	1
12	412 2741 007	P.W.B.holder	H=8	1	64	461 0539 051	Rubber sheet		1
13	412 2814 002	Card spacer	L=8	1	65	461 0390 038	Rubber sheet		1
14	411 1349 203	Trance chassis		1	66	449 0133 017	P.W.B. holder		1
15	415 9032 006	P.C.B.holder (T)		1	67	415 0680 033	Spacer		2
16	445 0114 005	Wire clip		4	68	414 0797 004	Shield plate(A)		1
17	412 4148 006	P.W.B.bracket		1	69	415 0680 020	Spacer		1
18	411 1351 107	Side chassis (L)		1	70	414 0798 003	Shield plate(B)		1
19	411 1352 106	Side chassis (R)		1	71	461 0315 039	Cushion sheet		1
20	412 2814 028	Card spacer	L=10	3	72	414 0800 108	Shield plate		1
21	417 0538 000	Radiator		1	73	414 0799 109	Shield plate		1
22	415 0234 007	Insulating sheet		1	74	415 0680 046	Spacer(119x85)		2
23	412 4146 008	Radiator support (F)	FRONT	1	75	461 0501 005	Rubber sheet		2
24	412 4147 007	Radiator support (R)	REAR	1	76	445 8004 007	Wire clamper		17
25	412 2814 028	Card spacer	L=10	2	77	203 3942 007	AC Outlet	Europe model	1
26	414 0782 006	Shield bracket (TU)		1	78	203 3970 008	AC Inlet	Europe/Asia model	1
27	412 2814 044	Card spacer	L=6	2	—	203 3962 003	AC Inlet	Taiwan model	1
28	449 0133 004	P.W.B.holder		2	79	477 0096 007	Push rivet	Europe/Asia model	16
29	105 1209 464	Back panel		1	80	—	—		—
30	477 0018 001	Washer (P-87)		1	81	449 0080 021	Edging		1
31	205 0071 016	Terminal Ass'y		1	82	449 0080 063	Edging		2
32	105 1211 012	Back plate		1					


(GOLD MODEL)

Ref. No.	Part No.	Part Name	Remarks	Q'ty	Ref. No.	Part No.	Part Name	Remarks	Q'ty
SCREWS									
101	473 7015 018	Screw 3x8	CBTS (S)-B	71	43	144 2518 337	Front panel Ass'y		1
102	473 7002 018	Screw 3x8	CBTS (S)-Z	54	44	113 1791 012	Selector knob		11
103	473 7500 015	Screw 3x8	CBTS (P)-Z	3	46	113 1464 006	Push knob		2
104	473 7005 002	Screw 3x10	CBTS (S)-Z	7	58	102 0576 238	Top cover		1
105	473 8007 009	Cup screw 3x12		11	59	112 0790 011	Knob Ass'y (M)		1
106	473 7007 000	Screw 4x8	CBTS (S)-B	4	60	112 0685 113	Knob (MARU)		2
107	473 7007 013	Screw 4x10	CBTS (S)-B	8	61	114 0130 017	Power knob Ass'y		1
108	477 0064 107	Fixing screw		24	110	477 0263 018	3P swelling screw		10
109	473 7505 007	Screw 2.6x8	CBTS (P)-Z	20					
110	477 0263 005	3P swelling screw		10					
111	473 7003 017	Screw 3x8	CFTS(S)-B	3					
112	477 0276 018	Earth screw		1					
113	473 7002 034	Screw 3x6	CBTS(S)-B	1					
PACKING & ACCESORIES (Not included EXPLODED VIEW)									
121	GEN3653	Envelope sub. Ass'y		1					
122	505 8006 019	Envelope		1					
123	511 3016 009	Instructions manual	Europe model	1					
123	511 3011 004	Instructions manual	Asia/Taiwan model	1					
124	515 0671 300	Service station list		1					
125	399 0332 005	Remote control	RC-820	1					
126	—	Batteries		—					
127	206 2147 006	AC Cord with conn.	Europe/Asia model only	1					
128	206 2148 005	AC Cord (BS3p)	Asia model only	1					
129	206 2150 103	AC Cord with conn.	Taiwan model only	1					
130	—	—		—					
131	504 9102 029	Styrene paper		1					
132	505 9102 019	Poly cover		1					
133	503 1225 008	Cushion (L)		1					
134	503 1226 007	Cushion (R)		1					
135	501 1932 023	Carton case	Europe model	1					
135	501 1932 010	Carton case	Asia model	1					
135	501 1932 023	Carton case	Taiwan model	1					
136	503 1232 004	Cushion	Asia model	1					
(TAIWAN MODEL)									
					29	105 1209 448	Back panel		1
					78	203 3962 003	AC Inlet		1
					111	473 7002 021	Screw 3x8	CBTS(S)-B	2

BLOCK DIAGRAM


1 2 3 4 5 6 7 8

A

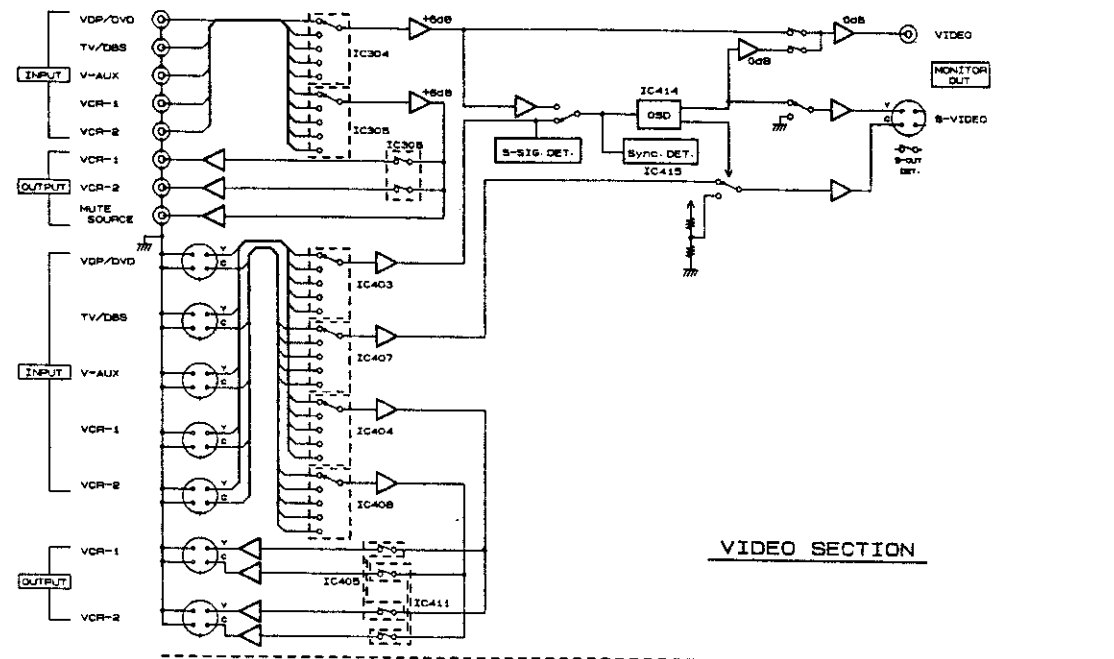


B

C

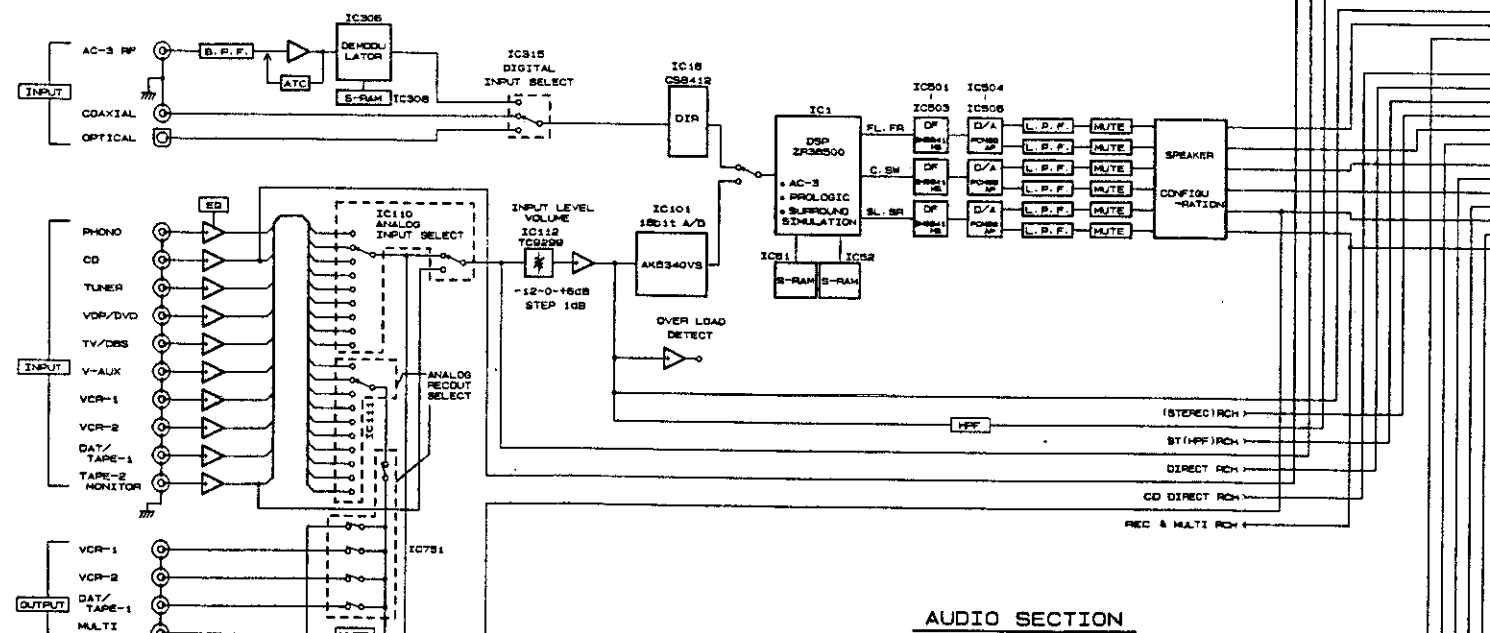


D


E

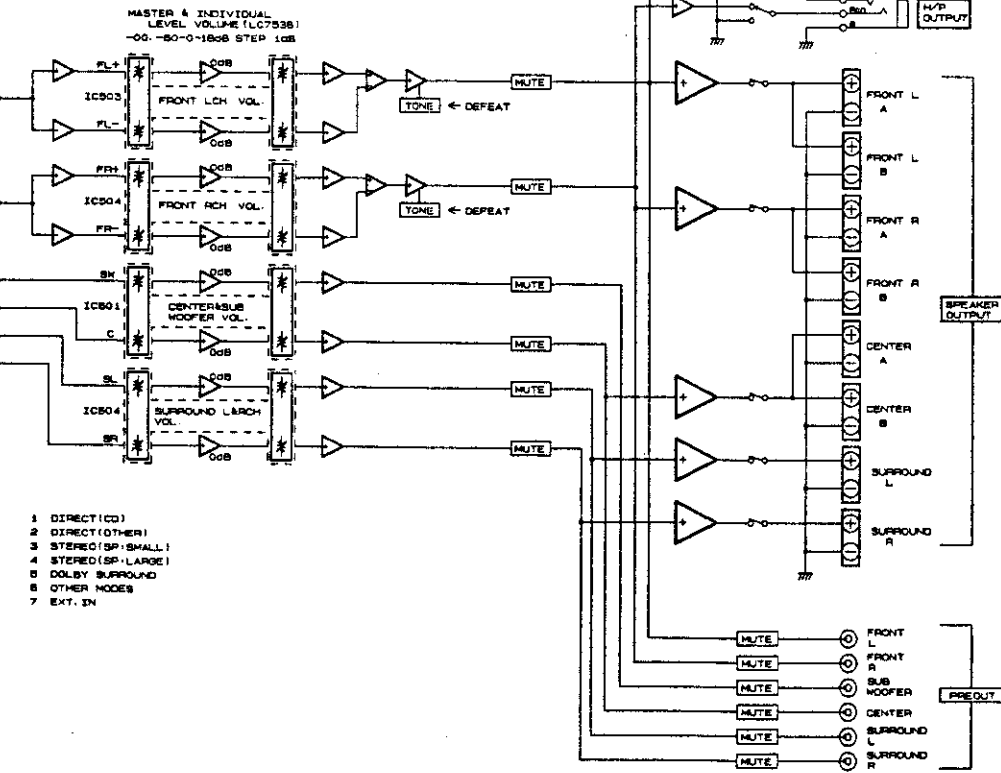

EXPLODED VIEW OF CHASSIS AND CABINET

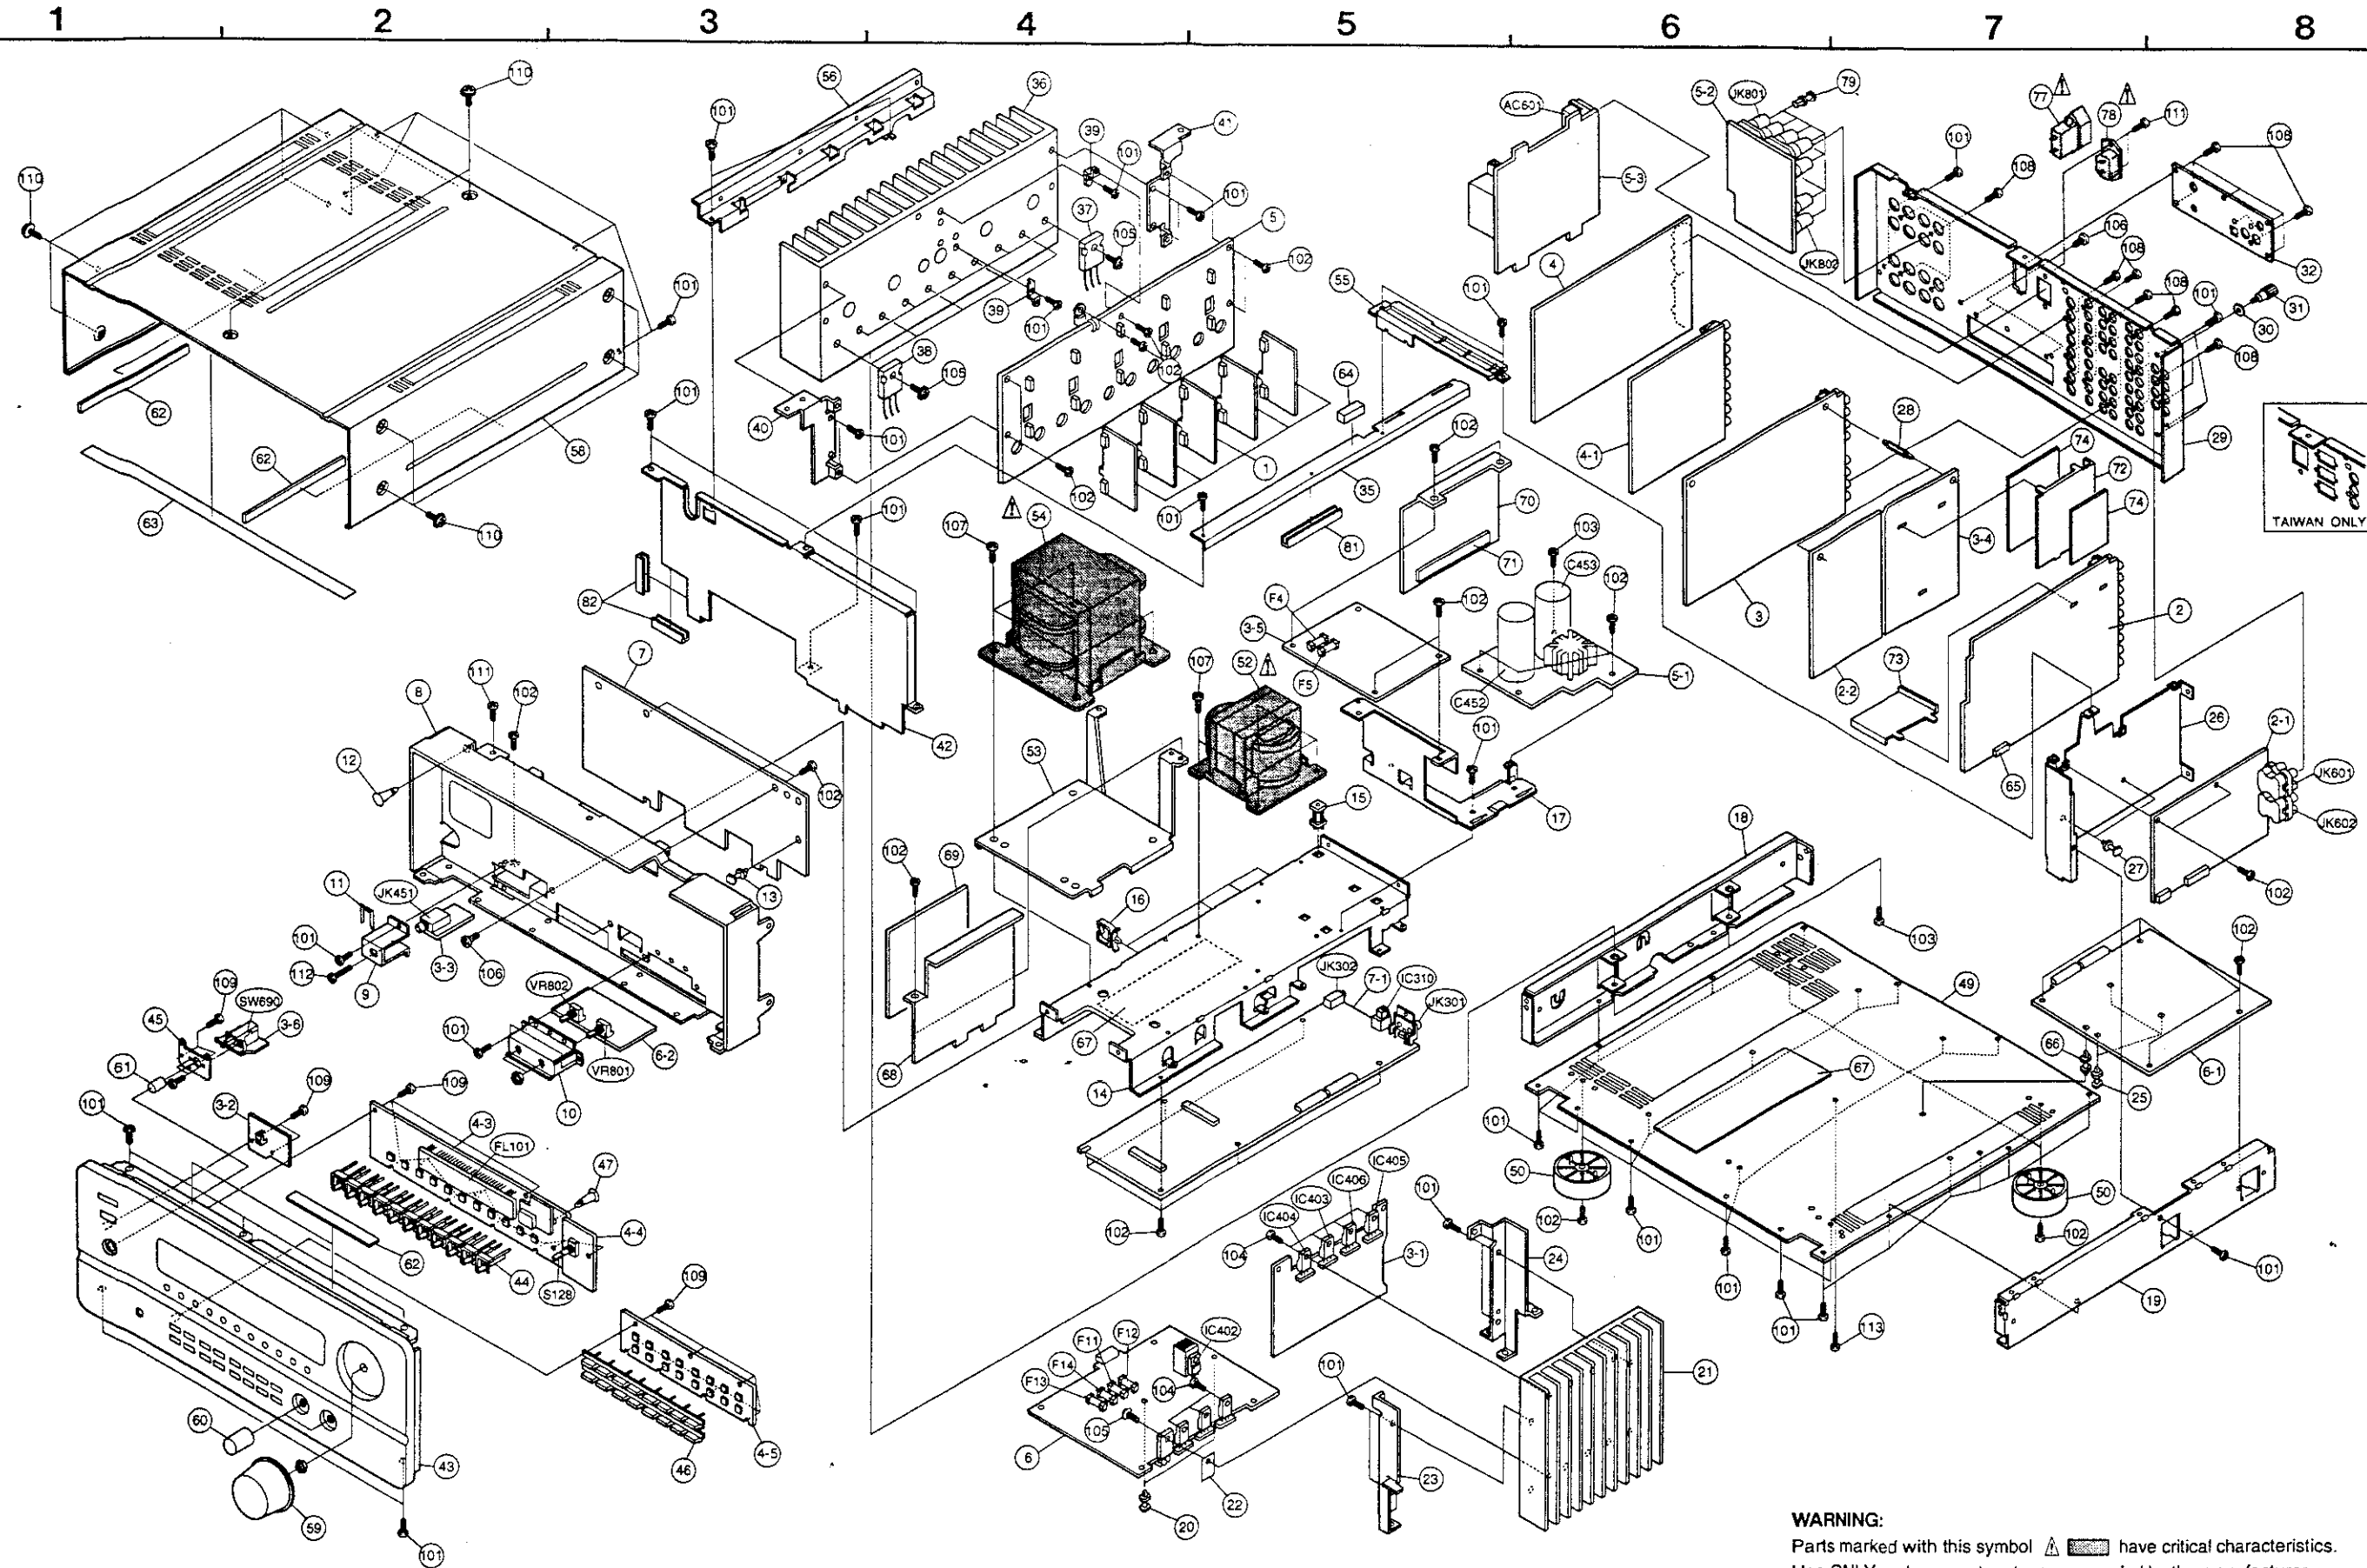

WARNING:
 Parts marked with this symbol  have critical characteristics.
 Use ONLY replacement parts recommended by the manufacturer.

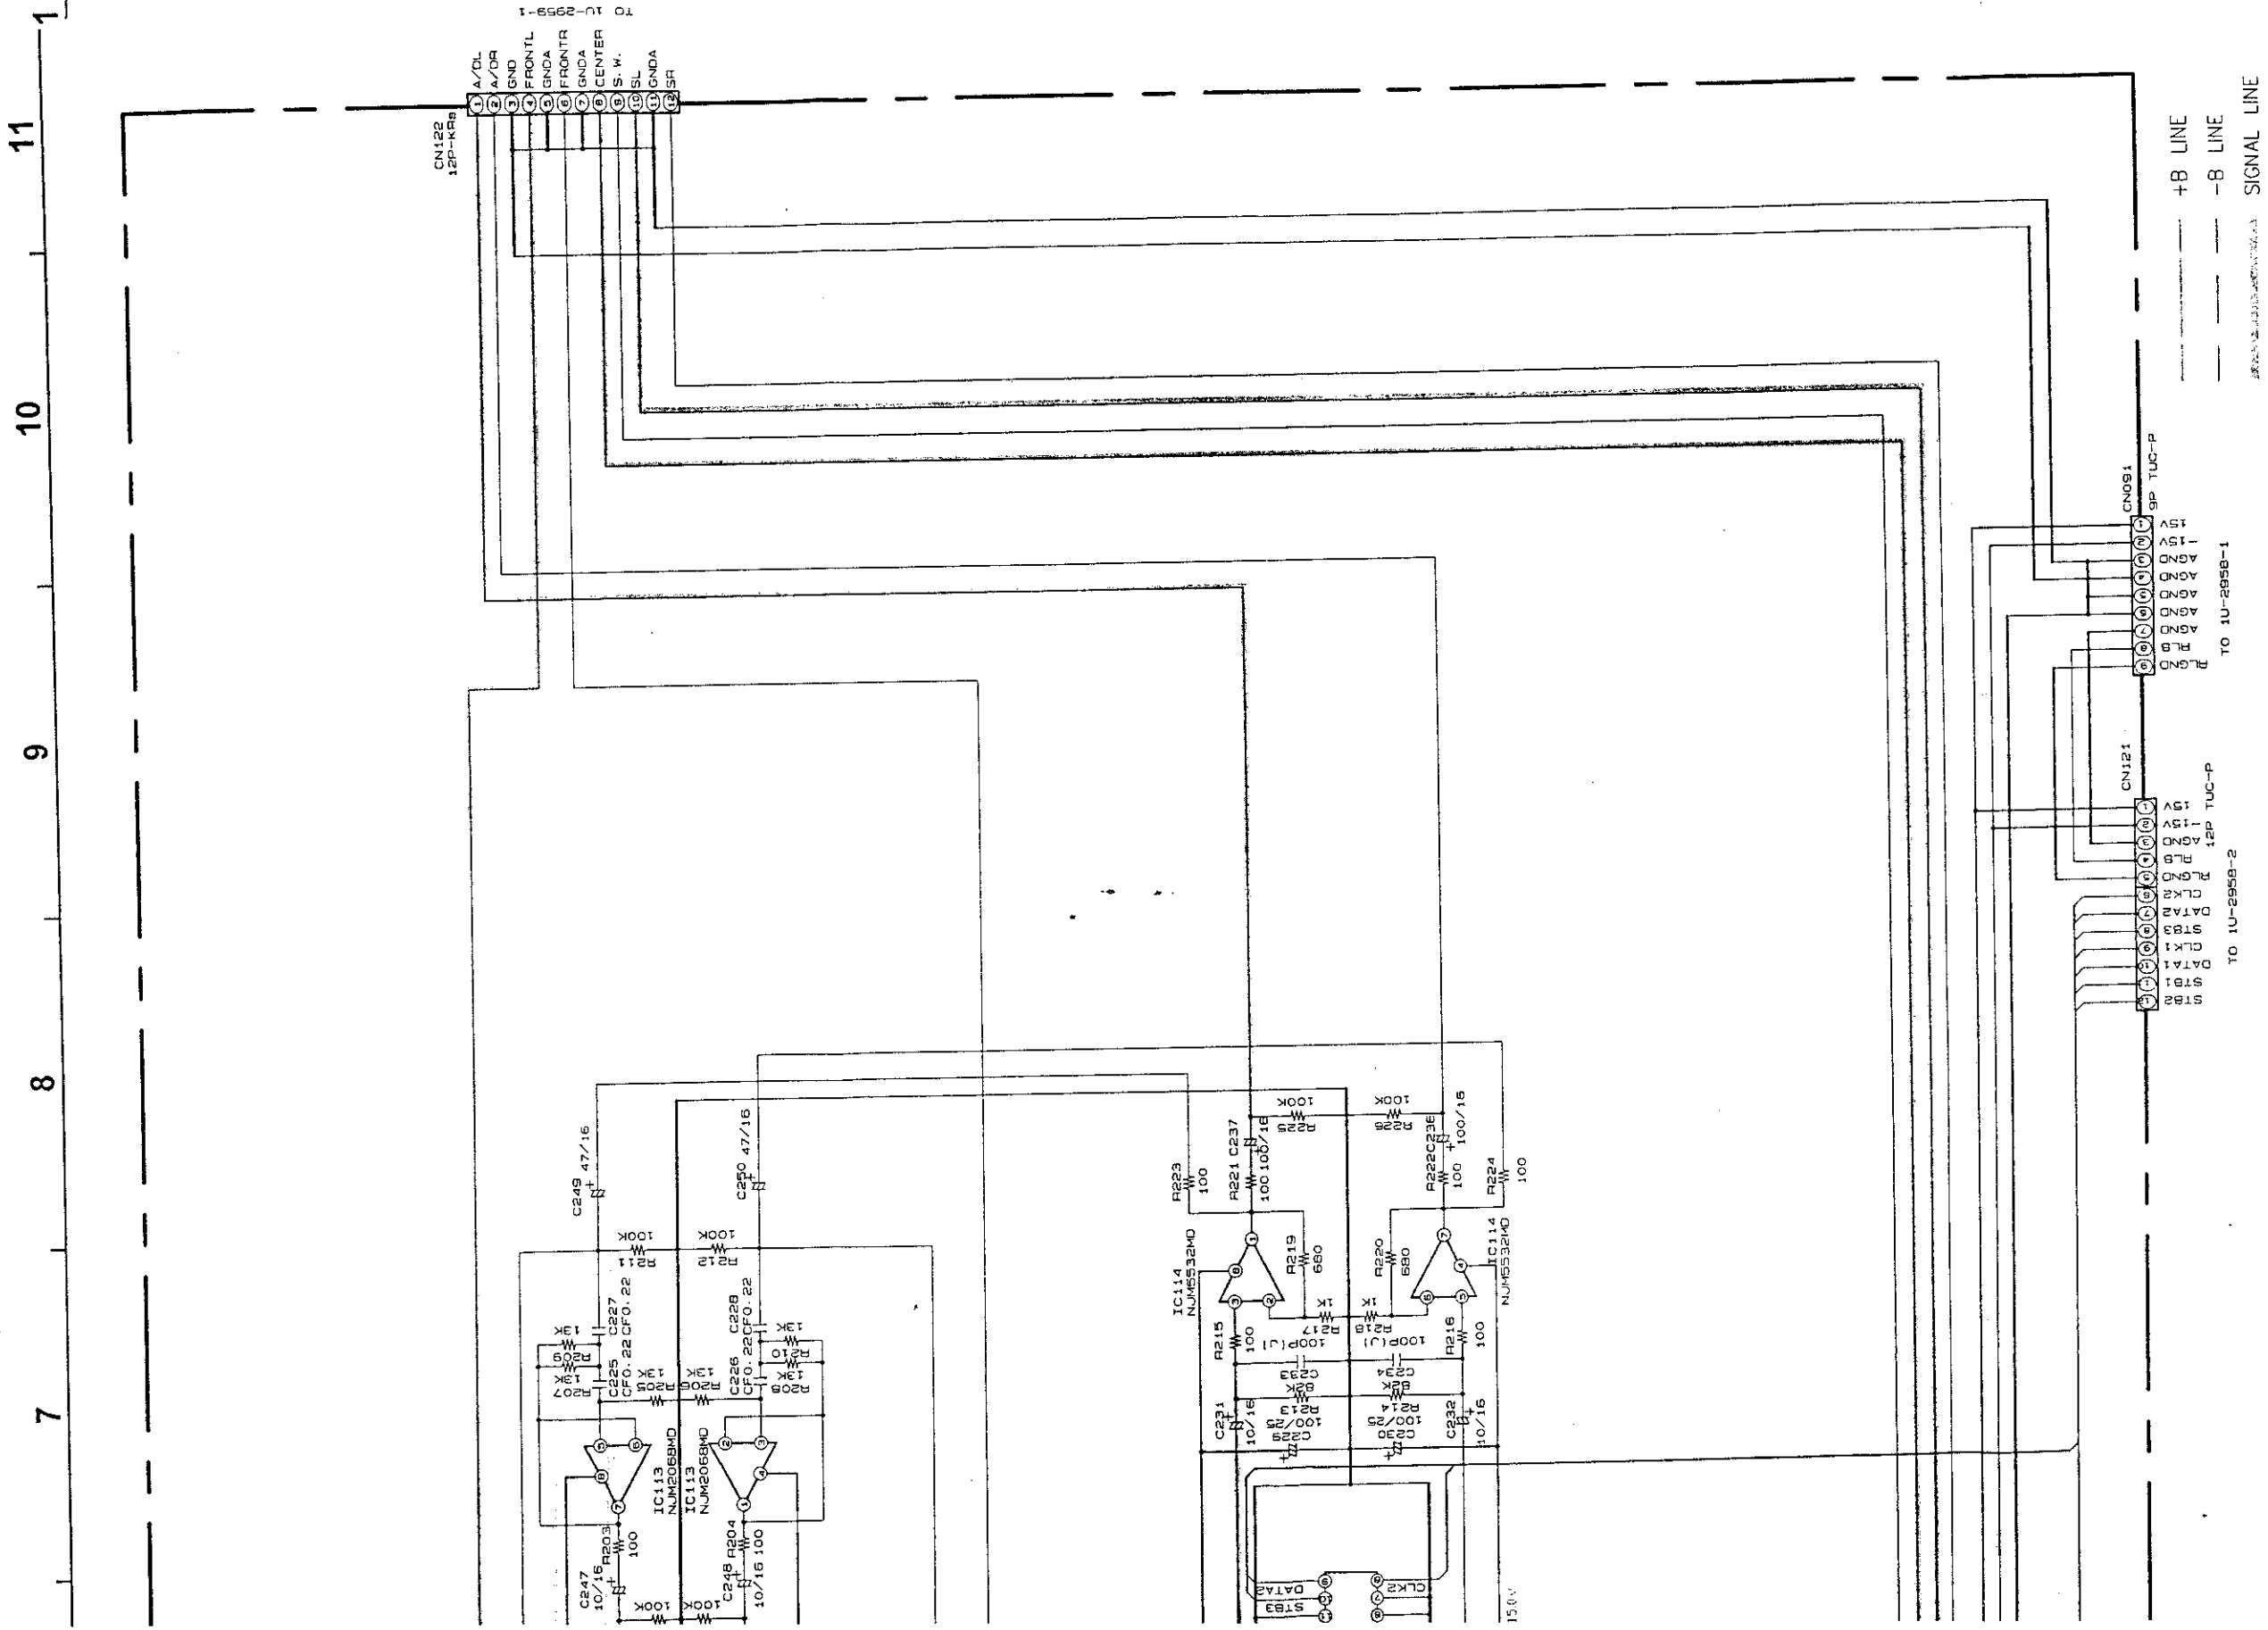

30	*31	*32	*33	*34	*35	*36
74	C185	C186	C197	C198	C209	C210
00P	100P	100P	100P	100P	100P	100P
00P	100P	100P	100P	100P	100P	100P

NOTES
 ALL RESISTANCE VALUES IN OHM. K=1,000 OHM, M=1,000,000 OHM
 ALL CAPACITANCE VALUES IN MICRO FARAD. P=MICRO-MICRO FARAD
 EACH VOLTAGE AND CURRENT ARE MEASURED AT NO SIGNAL INPUT
 CONDITION.
 CIRCUIT AND PARTS ARE SUBJECT TO CHANGE WITHOUT PRIOR
 NOTICE.

WARNING:
 Parts marked with this symbol have critical characteristics. Use ONLY replacement parts recommended by the manufacturer.


CAUTION:
 Before returning the unit to the customer, make sure you make either (1) a leakage current check or (2) a line to chassis resistance check. If the leakage current exceeds 0.5 milliamps, or if the resistance from chassis to either side of the power cord is less than 240 kohms, the unit is defective.

WARNING:
 DO NOT return the unit to the customer until the problem is located and corrected.

TO 1U-2958-2
 TO 1U-2958-1
 +B LINE
 -8 LINE
 SIGNAL LINE

SCHEMATIC DIAGRAM (1U-2948-1 AUDIO P.W.B. UNIT)

1 2 3 4 5

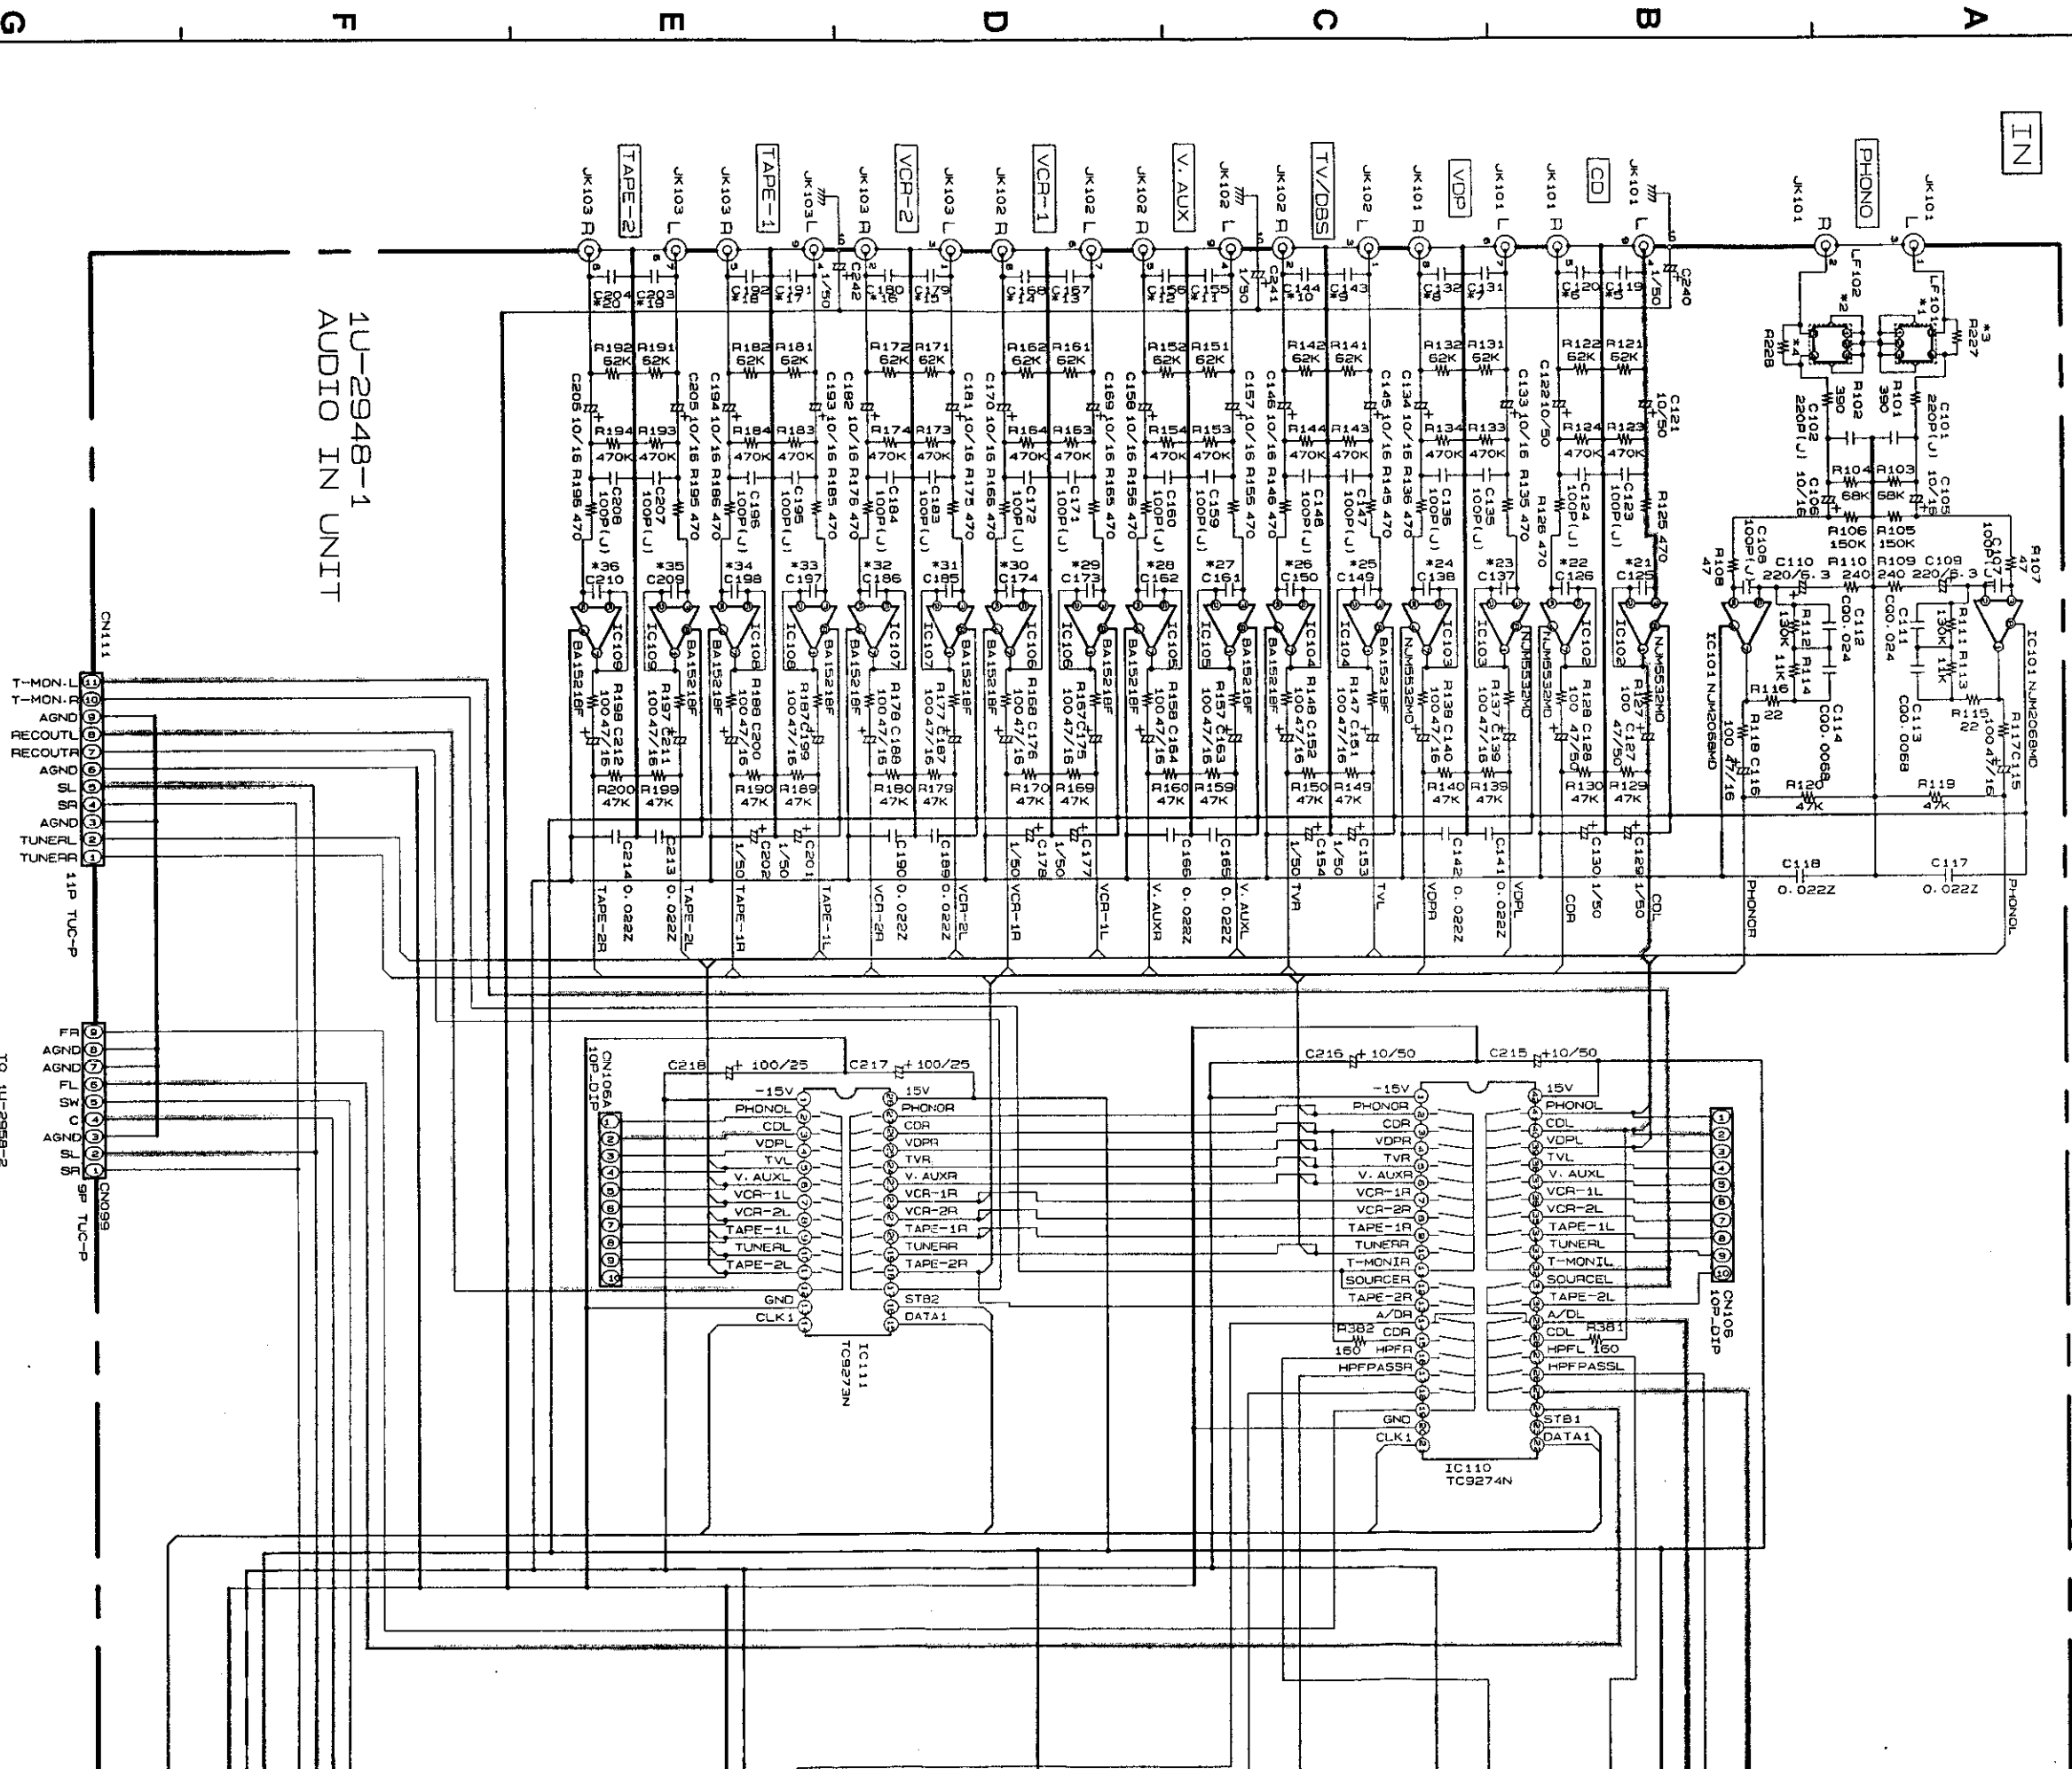

1U-2948-1
AUDIO IN UNIT

ASIA	*1	*2	*3	*4	*5	*6	*7	*8	*9	*10	*11	*12	*13	*14	*15	*16	*17	*18	*19	*20	*21	*22	*23	*24	*25	*26	*27
EUROPE	LF101	LF102	R227	R228	C119	IC120	C131	C132	C143	C144	C155	C156	C167	C168	C179	C180	C191	C192	C203	C204	C125	C126	C137	C138	C149	C150	C161
TAIWAN	250UH	250UH	4.7K	4.7K	330P	330P	330P	330P	330P	330P	330P	330P	330P	330P	330P	330P	330P	330P	330P	330P	100P	100P	100P	100P	100P	100P	100P
R.O.C			0	0																							
JAPAN			0	0																							

TO 1U-2958-2

TO 1U-2958-2

H

G

F

E

D

C

B

A

7

8

9

10

11

A

B

C


D


E

F

G

H

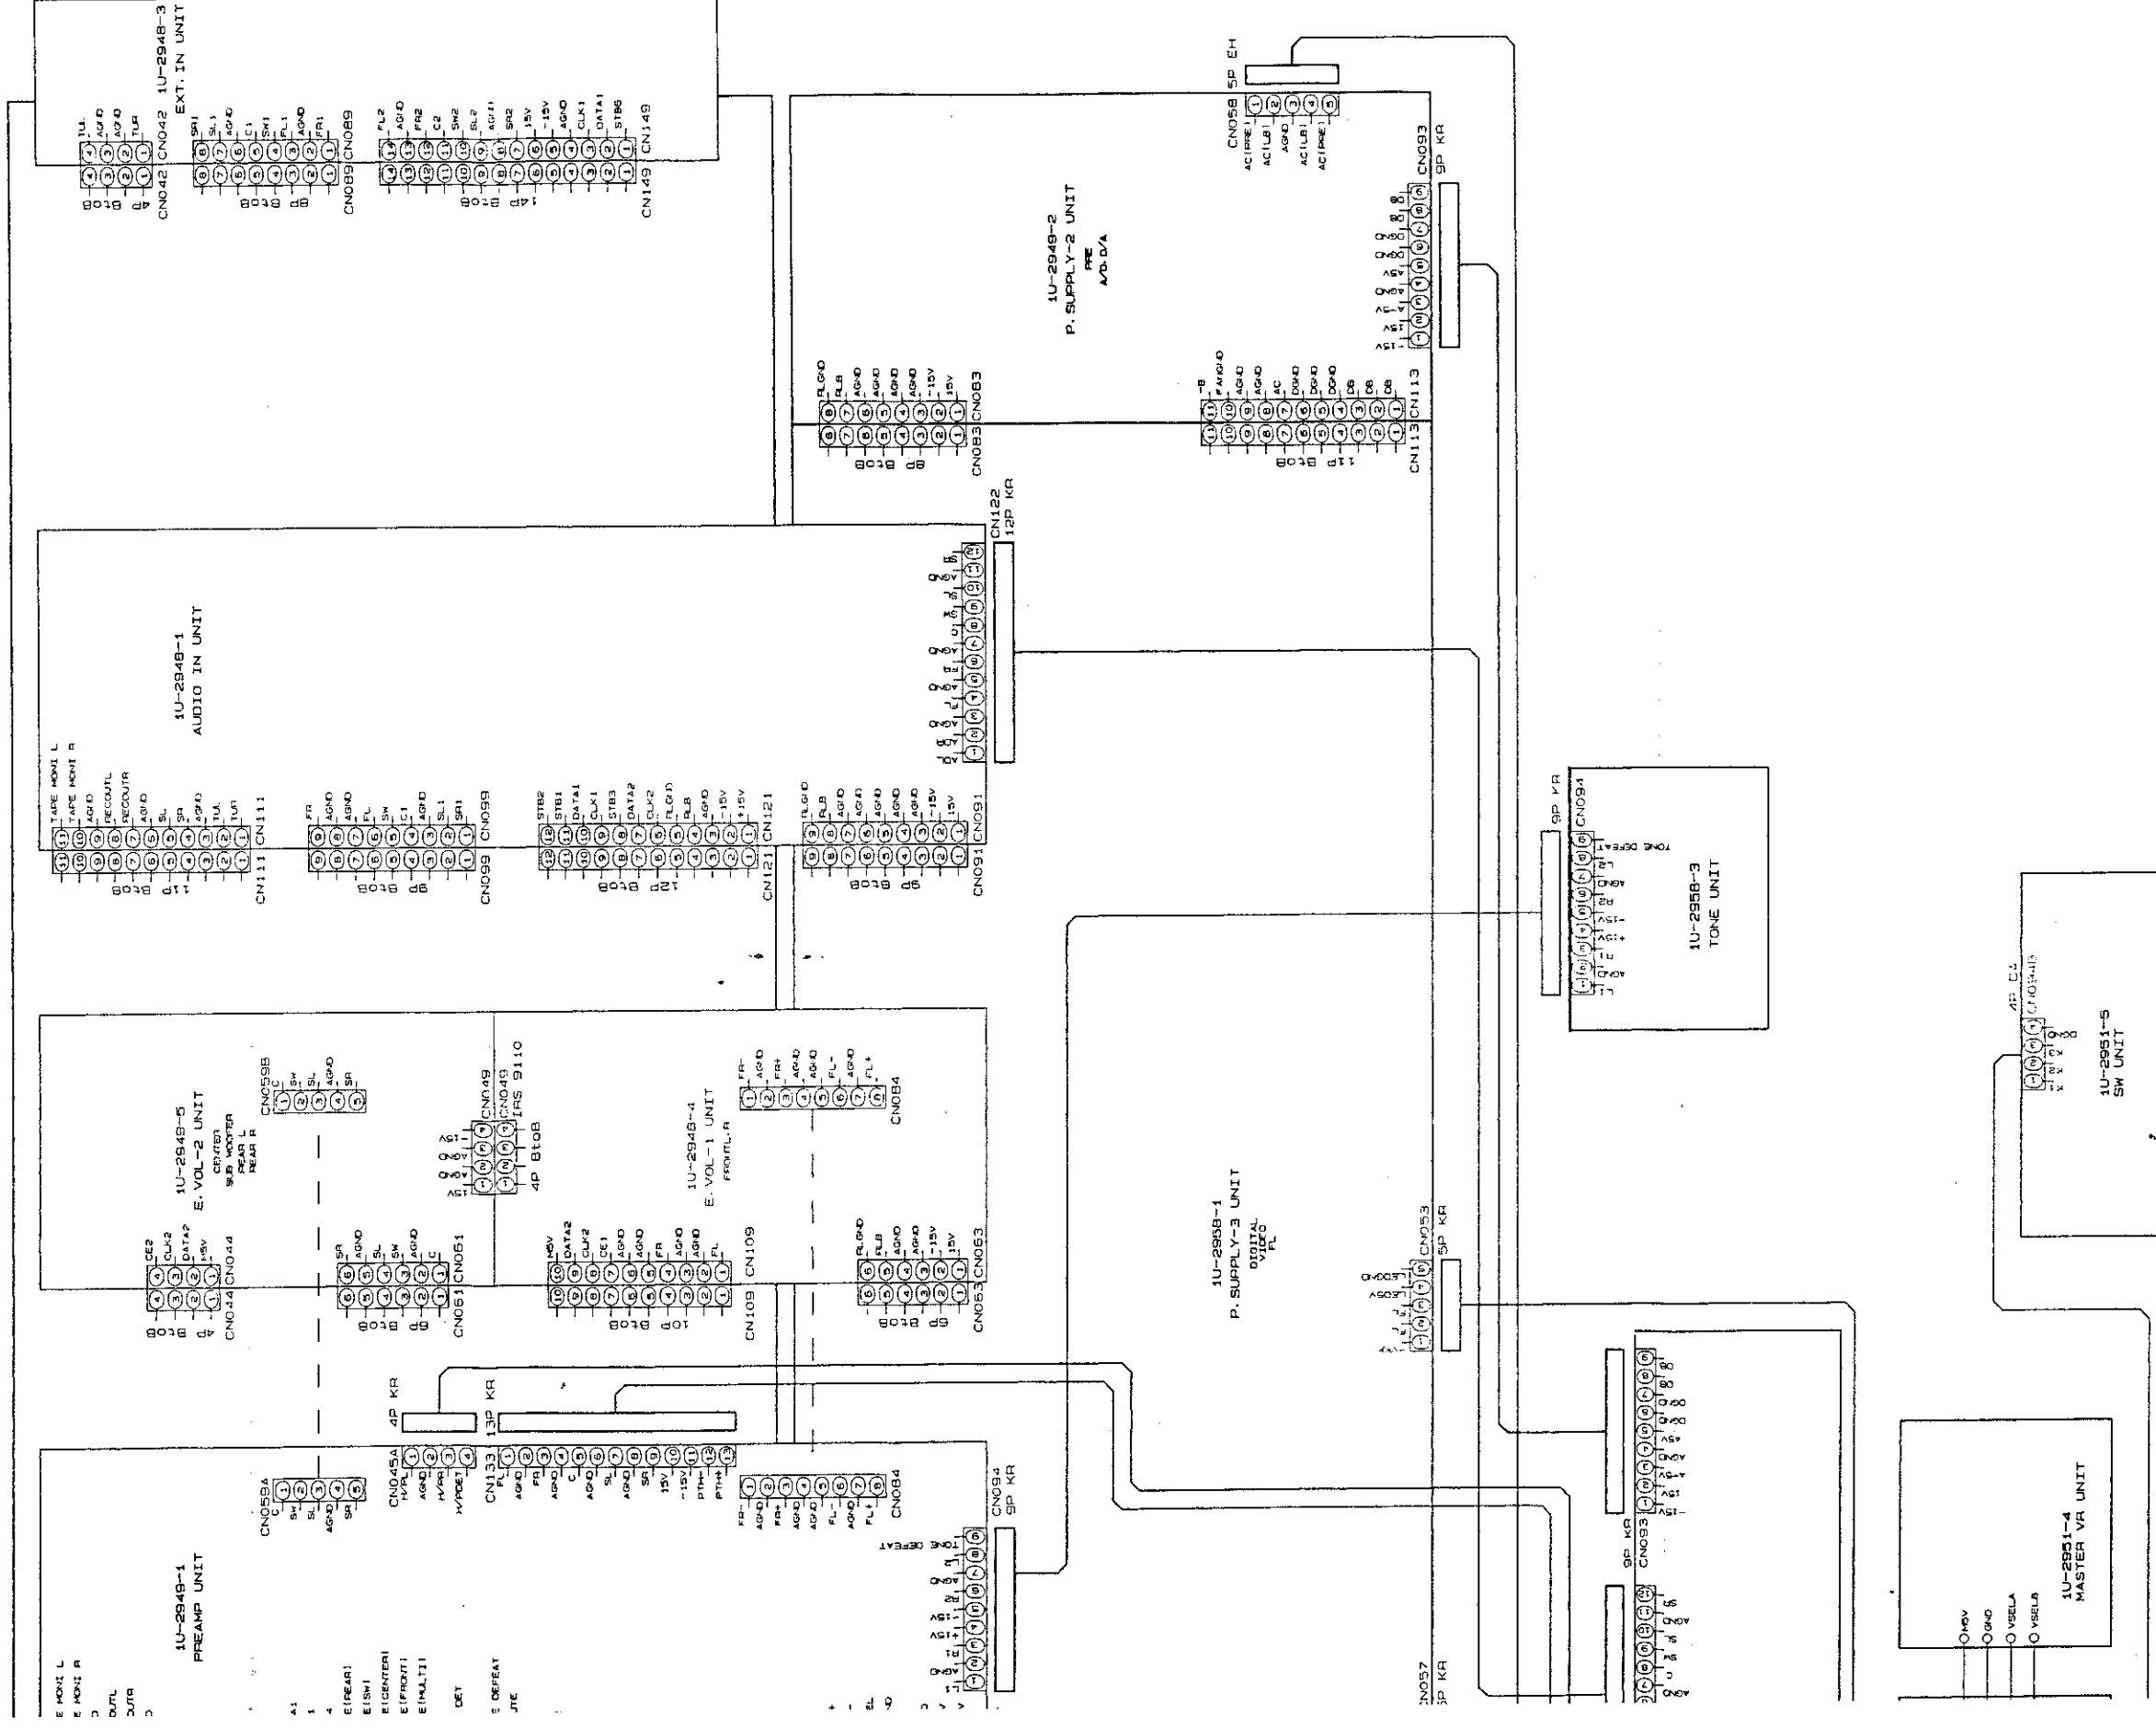

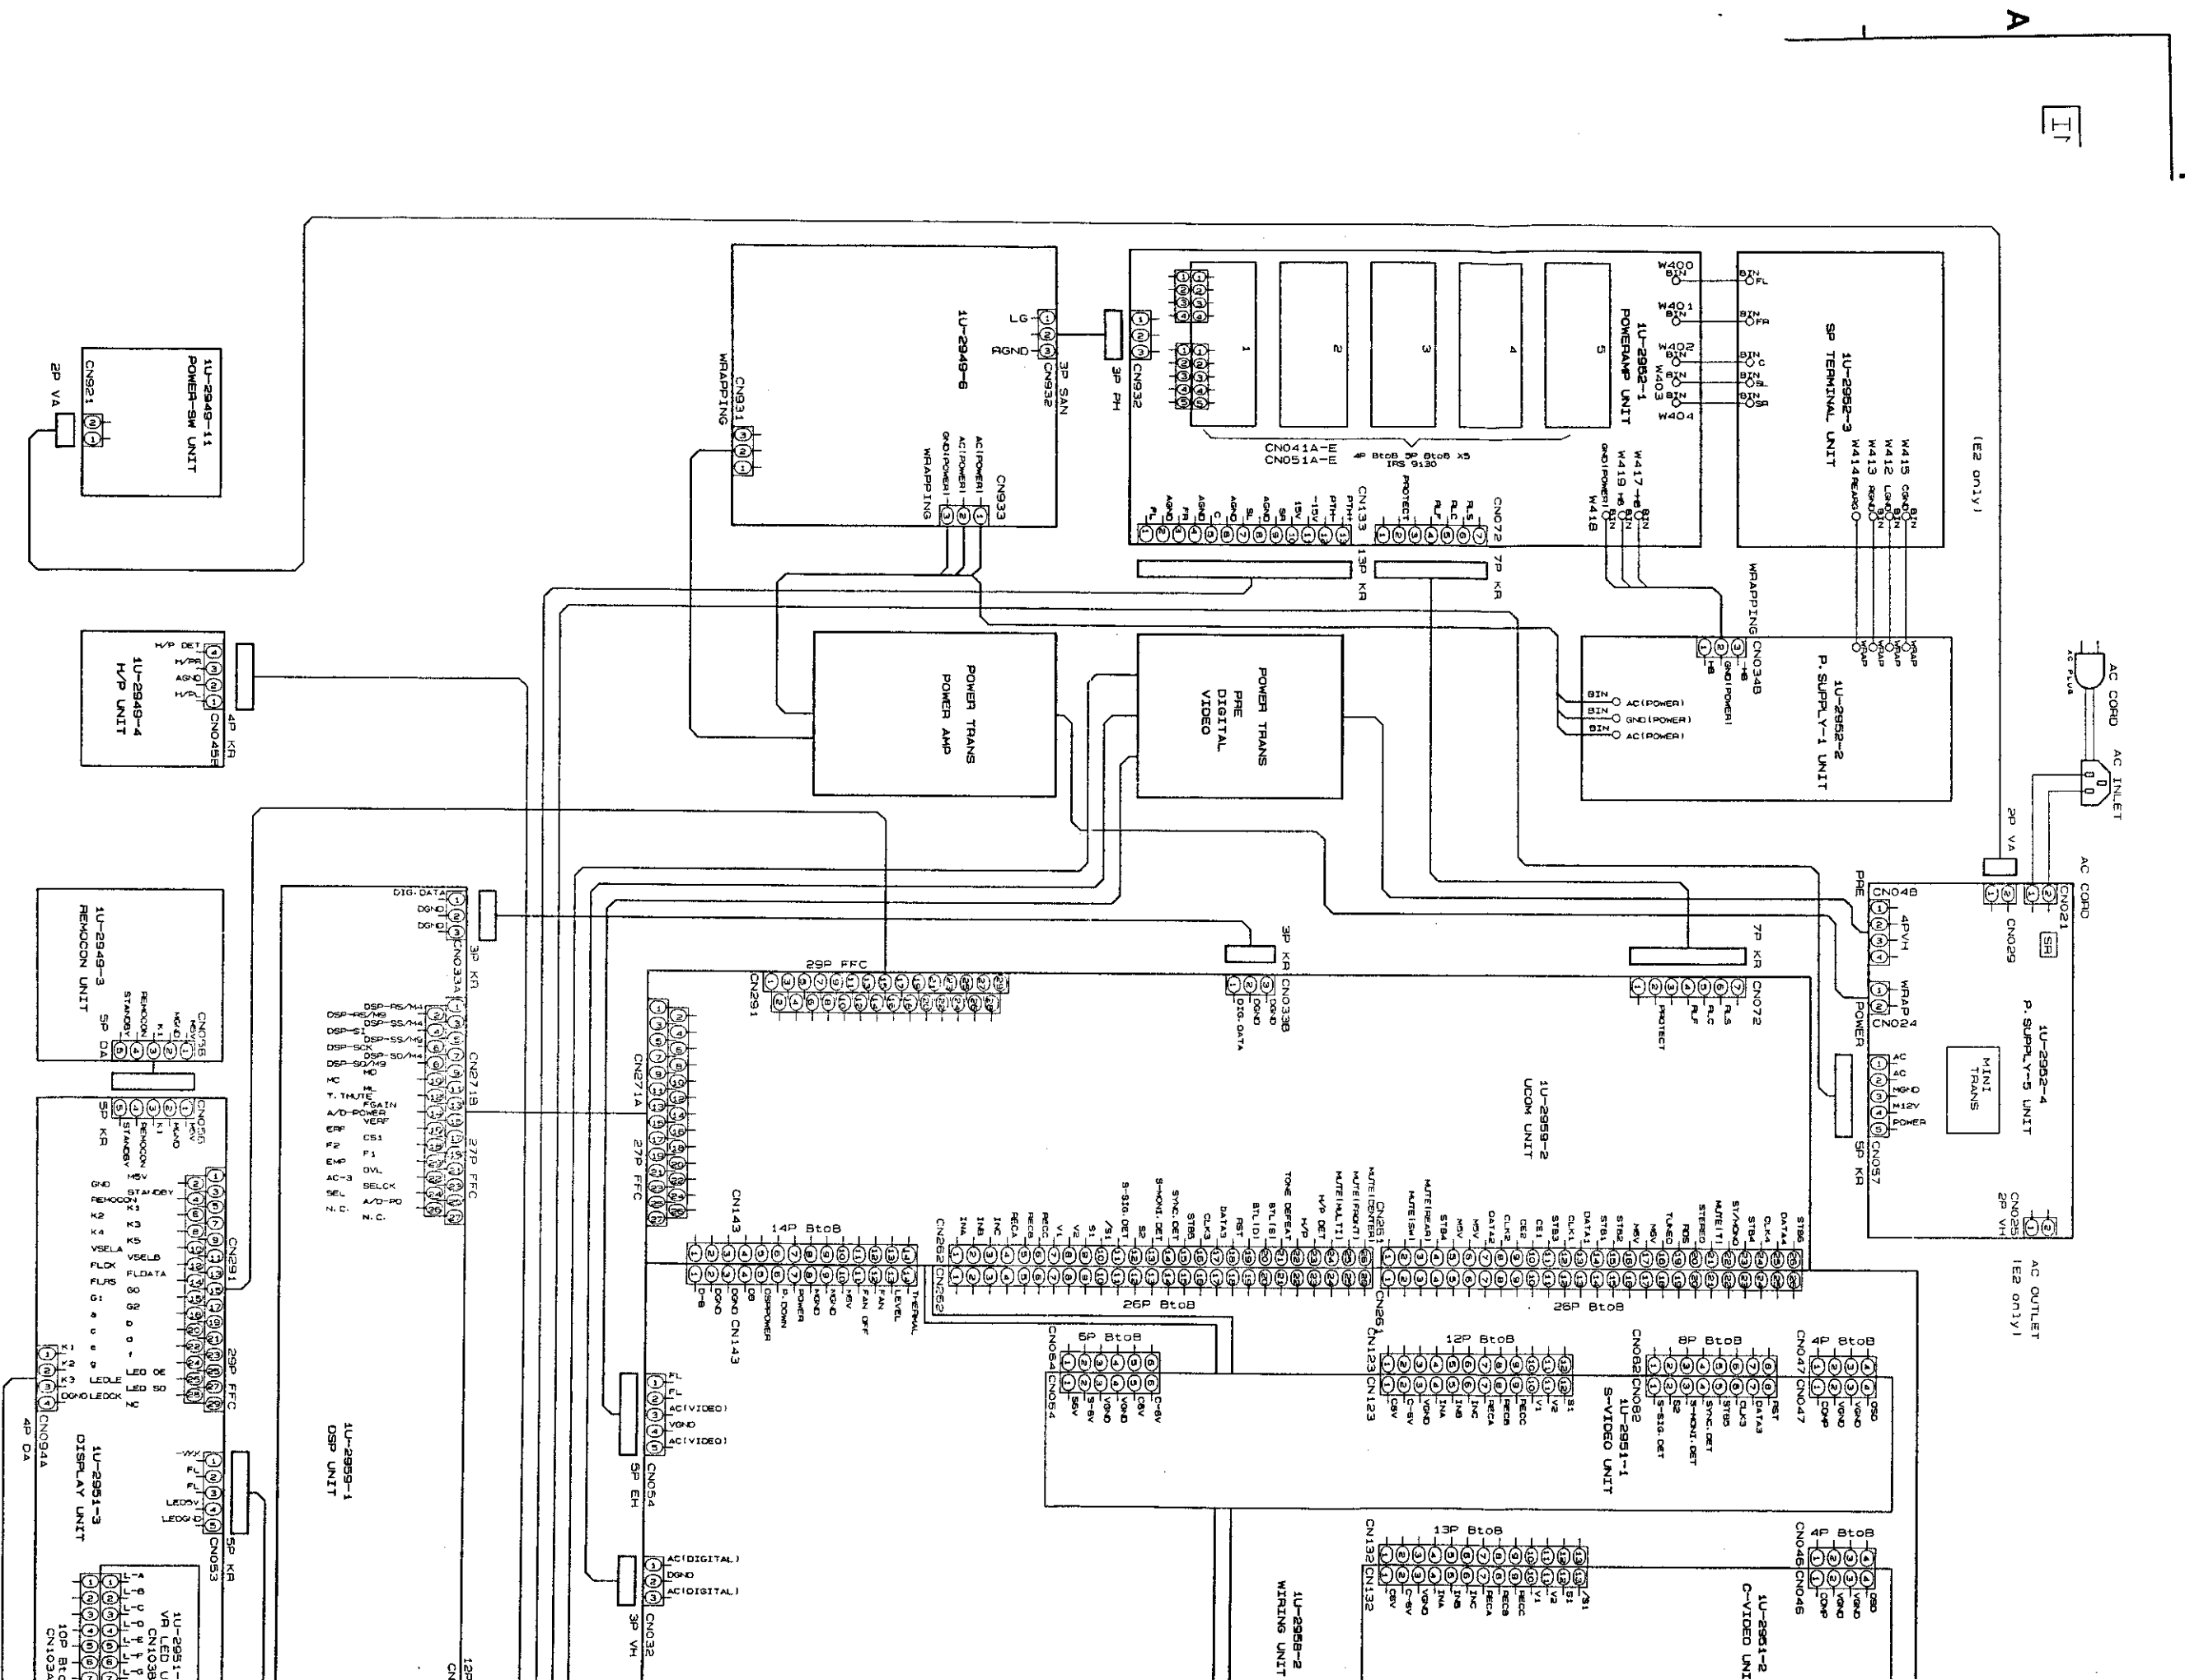

7

8

9

10

11

A

B

C


D

E

F

G

H

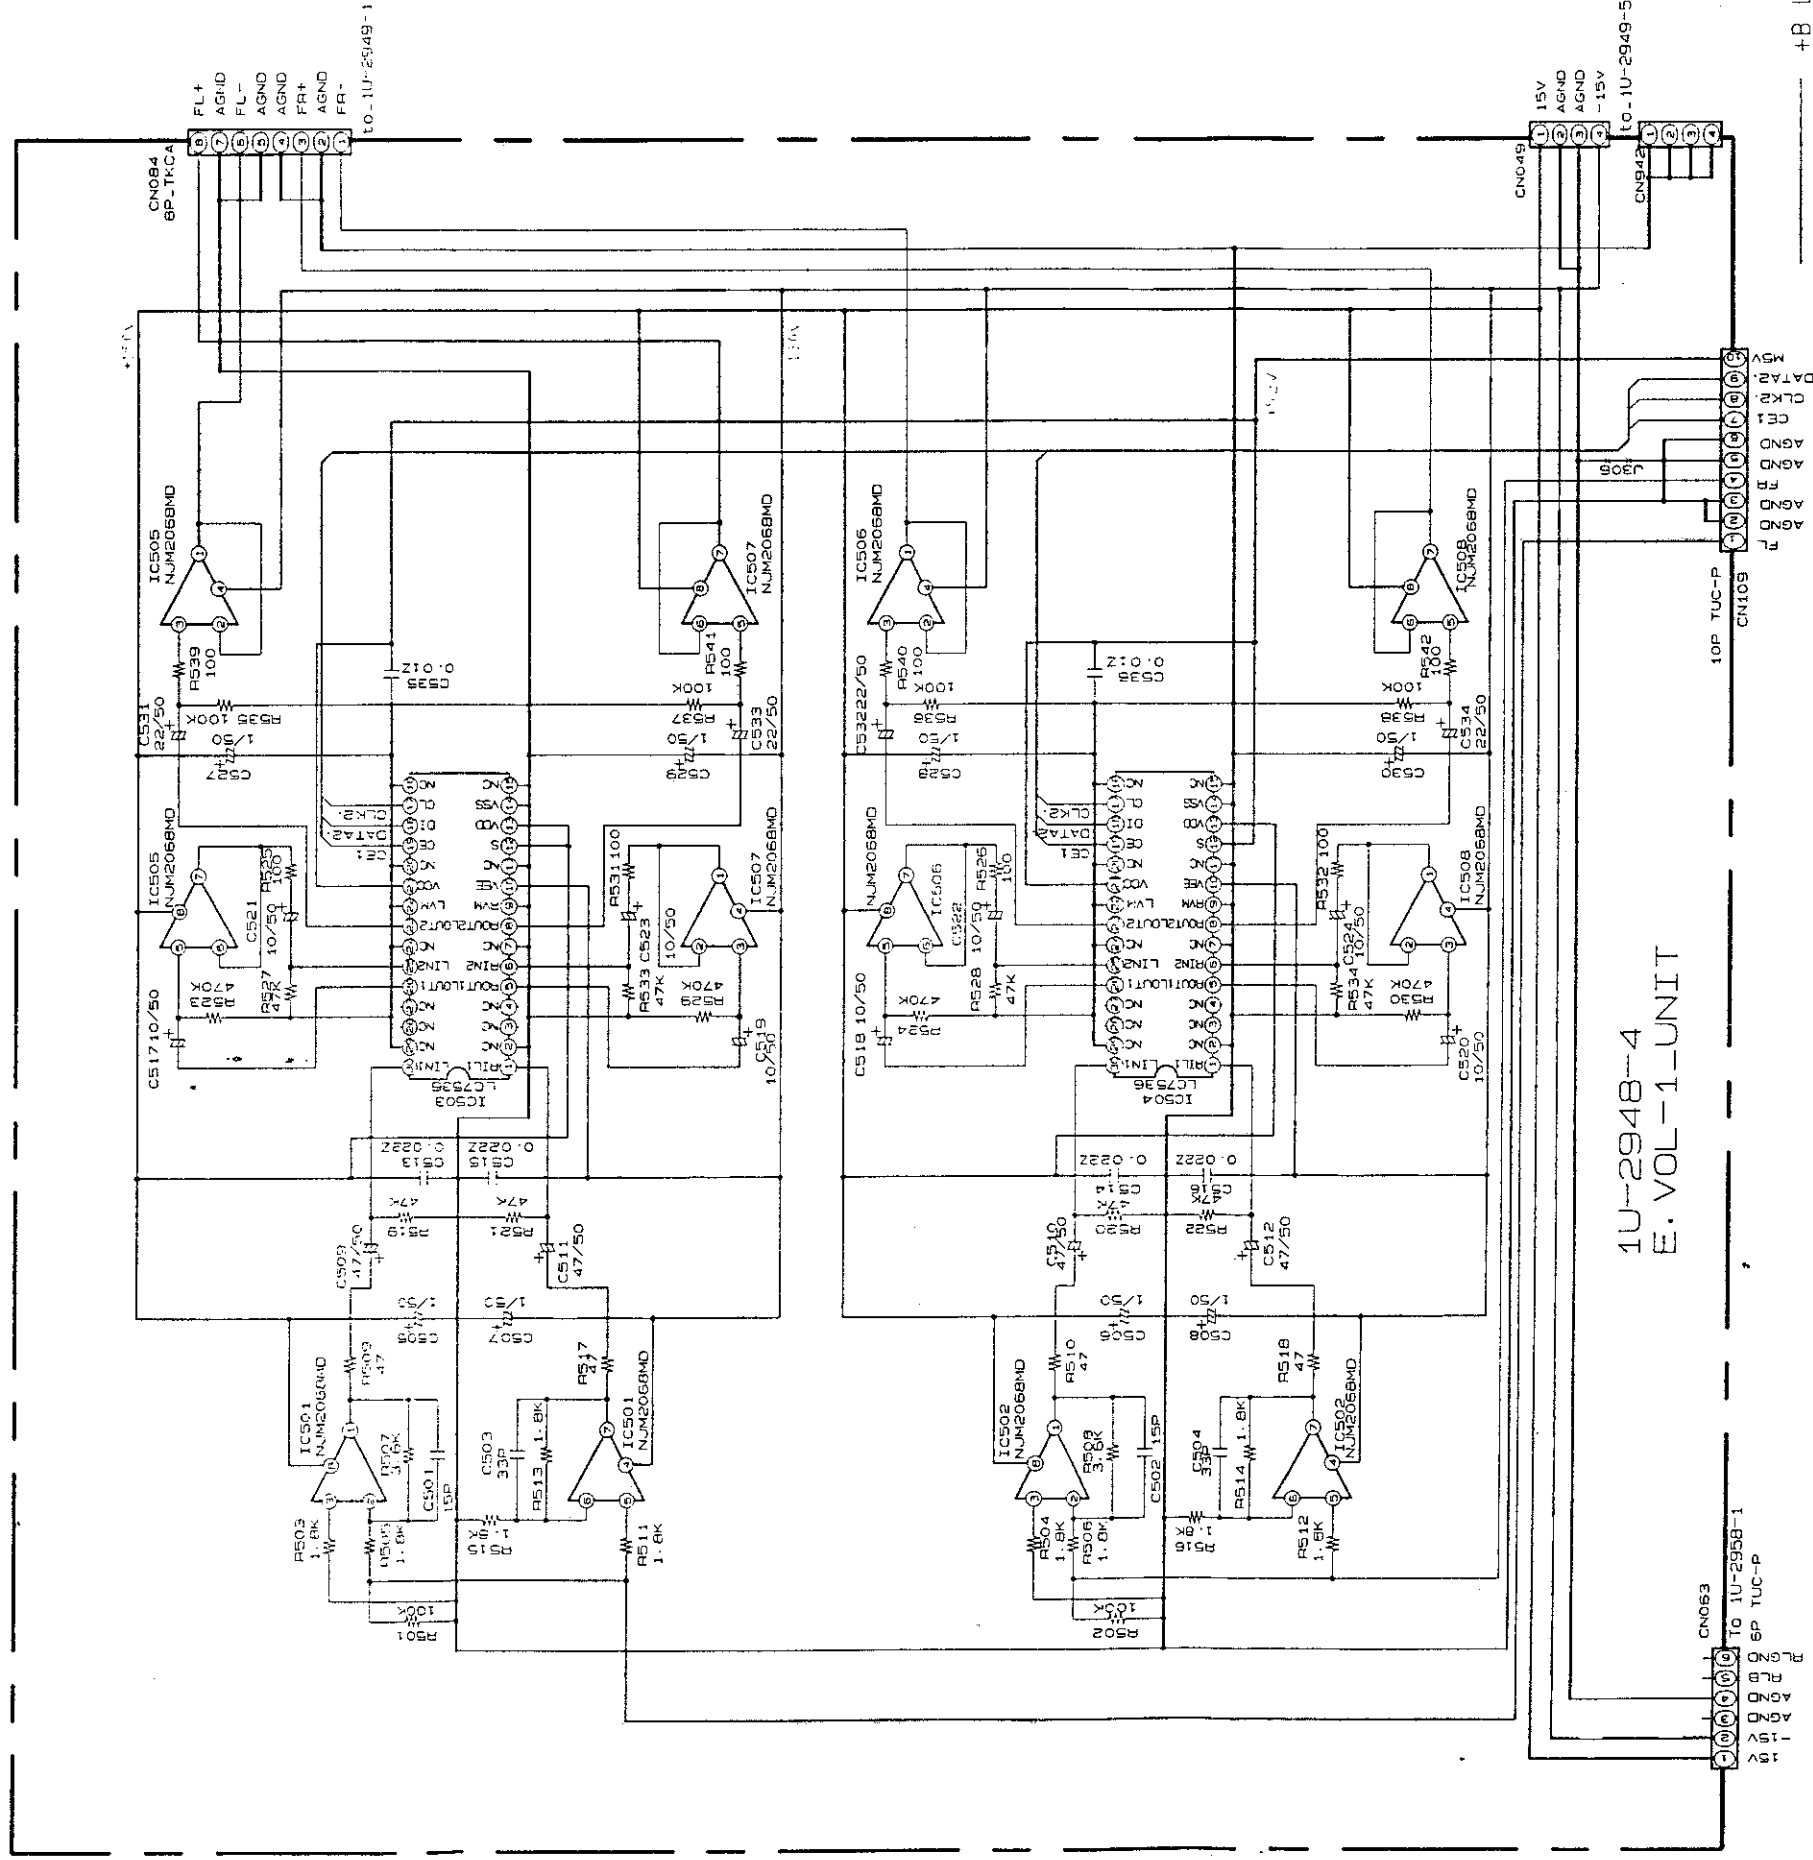

1U-2948-4
E. VOL-1-UNIT

15V
AGND
-15V
to 1U-2949-5

15V
AGND
-15V
to 1U-2949-5

10P TUC-P
CN109

6P TUC-P
CN063


TO 1U-2958-1

TO 1U-2958-2

+B LINE
-B LINE
SIGNAL LINE

SCHEMATIC DIAGRAM (1U-2948-3, 4 EXT. INVOLUME-1 P.W.B. UNIT)

1 2 3 4 5


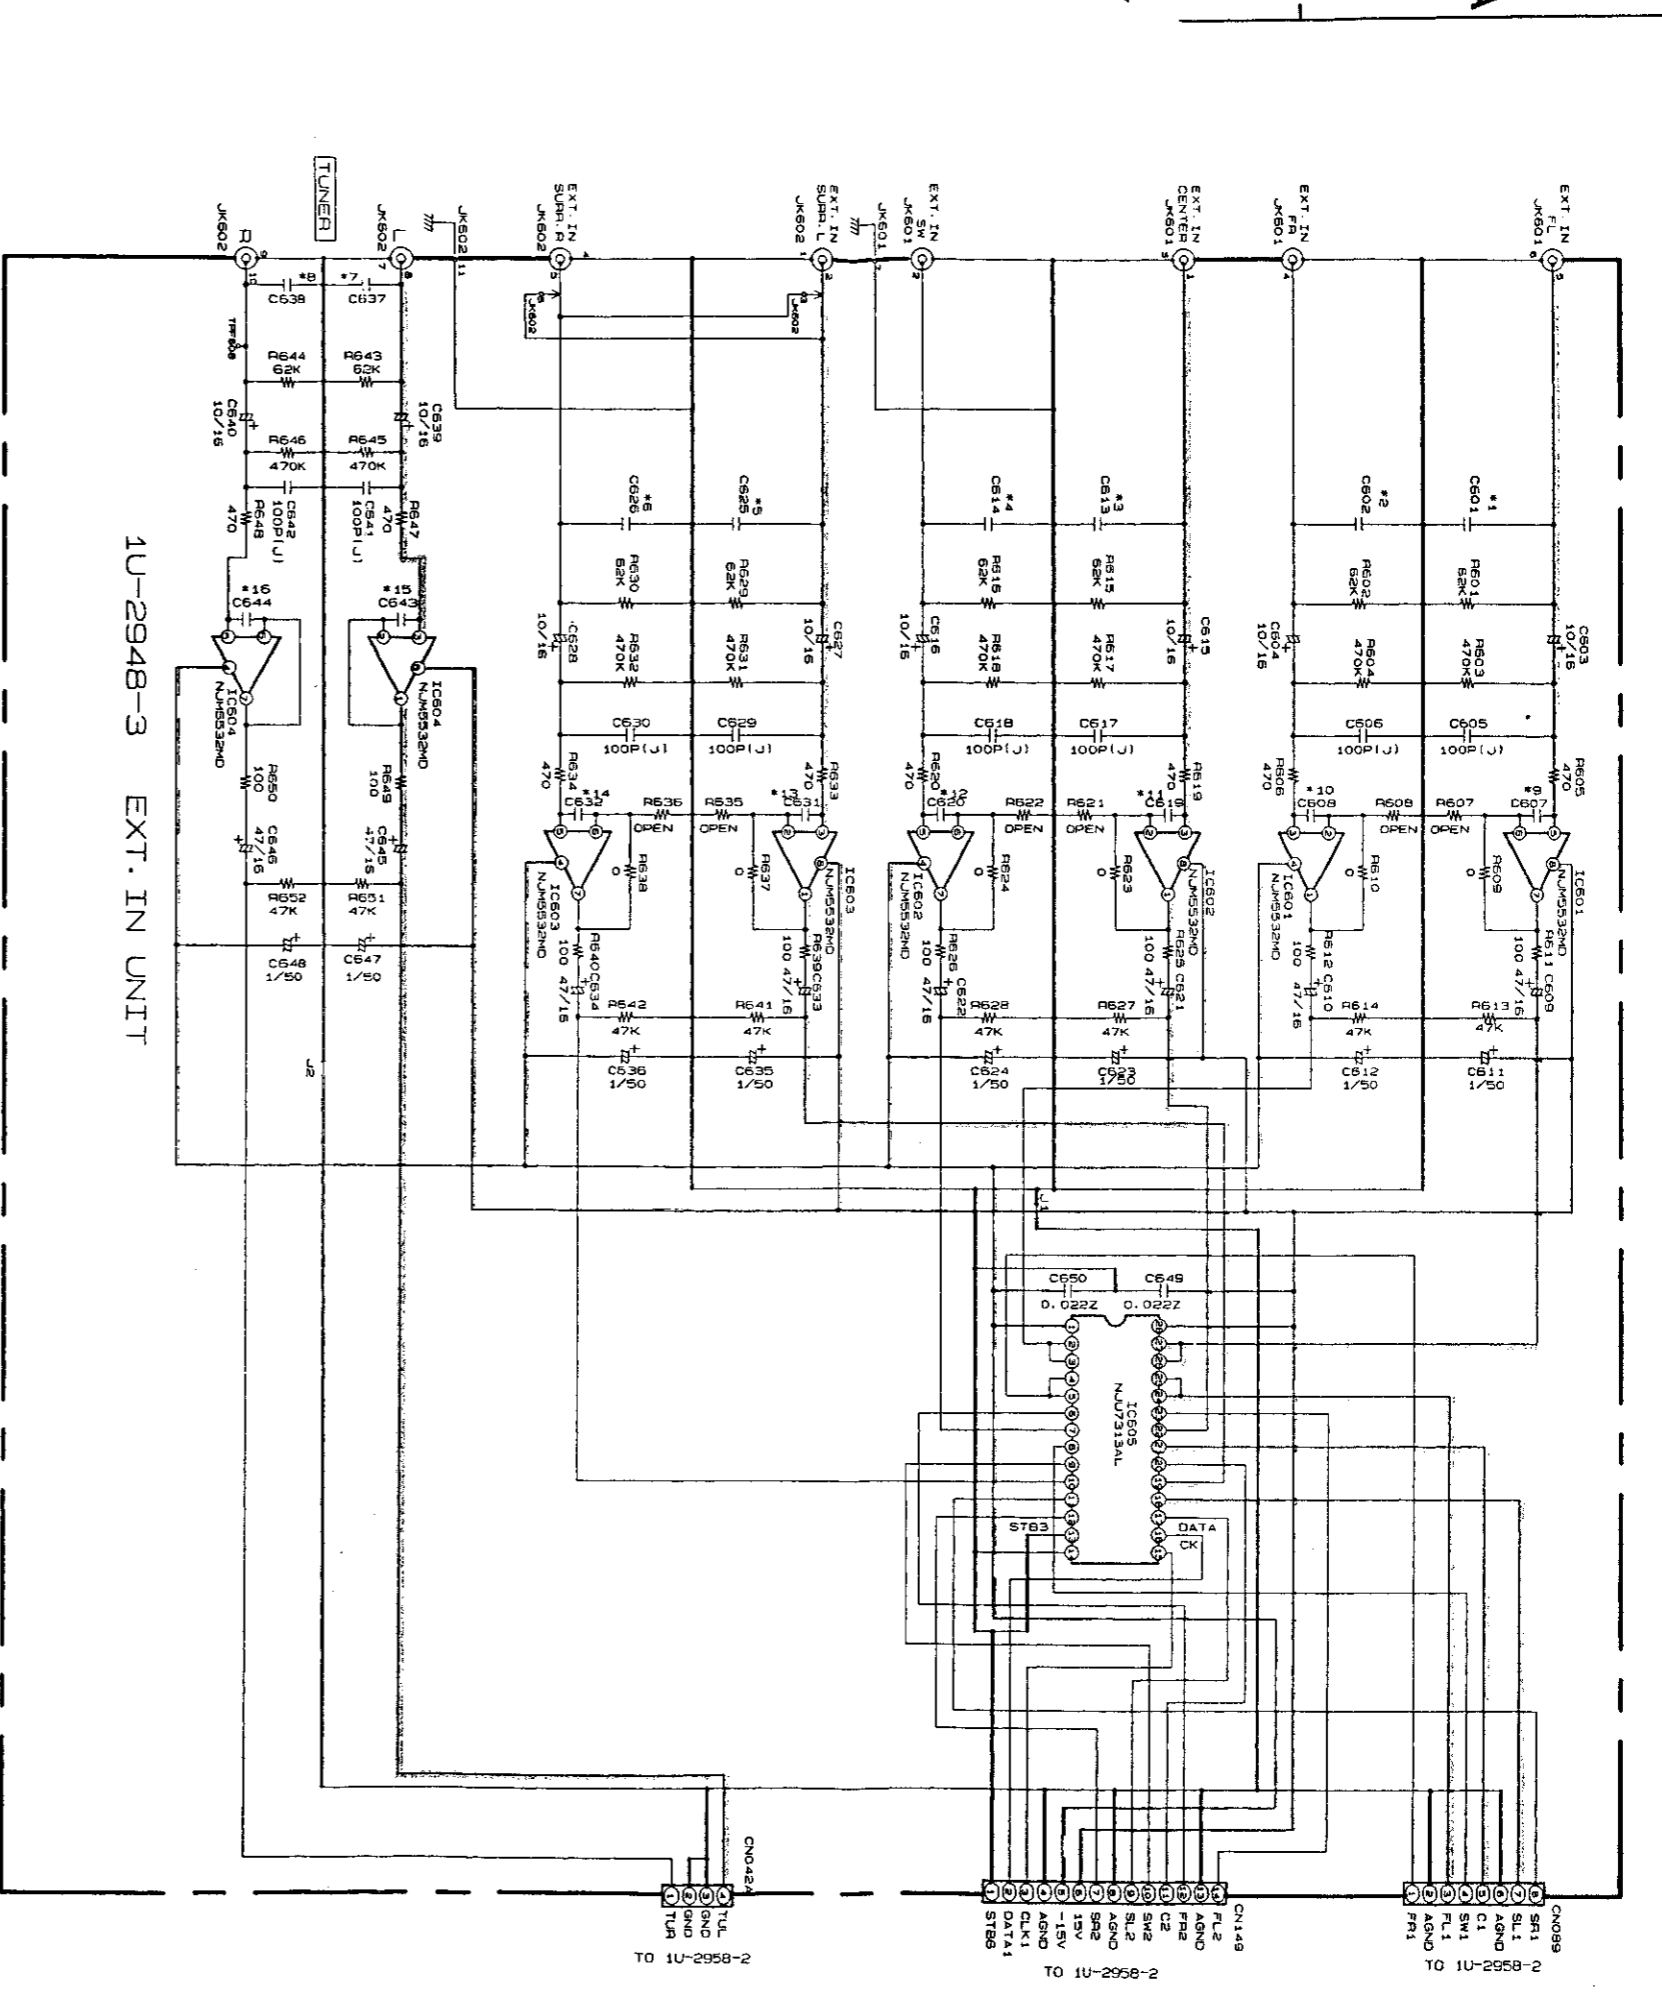


	*1	*2	*3	*4	*5	*6	*7	*8	*9	*10	*11	*12	*13	*14	*15	*16
ASIA	C601	C602	C613	C614	C625	C626	C637	C638	C607	C608	C619	C620	C631	C632	C643	C644
EUROPE	330P	330P	330P	330P	330P	330P	330P	330P	100P	100P	100P	100P	100P	100P	100P	100P
TAIWAN																
R.O.C																
JAPAN																

NOTES
 ALL RESISTANCE VALUES IN OHM. K=1,000 OHM, M=1,000,000 OHM
 ALL CAPACITANCE VALUES IN MICRO FARAD. P=MICRO-MICRO FARAD
 EACH VOLTAGE AND CURRENT ARE MEASURED AT NO SIGNAL INPUT
 CONDITION.
 CIRCUIT AND PARTS ARE SUBJECT TO CHANGE WITHOUT PRIOR
 NOTICE.


WARNING:
 Parts marked with this symbol have critical characteristics.
 Use ONLY replacement parts recommended by the manufacturer.
CAUTION:
 Before returning the unit to the customer, make sure you make either (1) a leakage current check or (2) a line to chassis resistance check. If the leakage current exceeds 0.5 milliamps, or if the resistance from chassis to either side of the power cord is less than 240 Kohms, the unit is defective.
WARNING:
 DO NOT return the unit to the customer until the problem is located and corrected.

+B LINE
 -B LINE
 SIGNAL 1

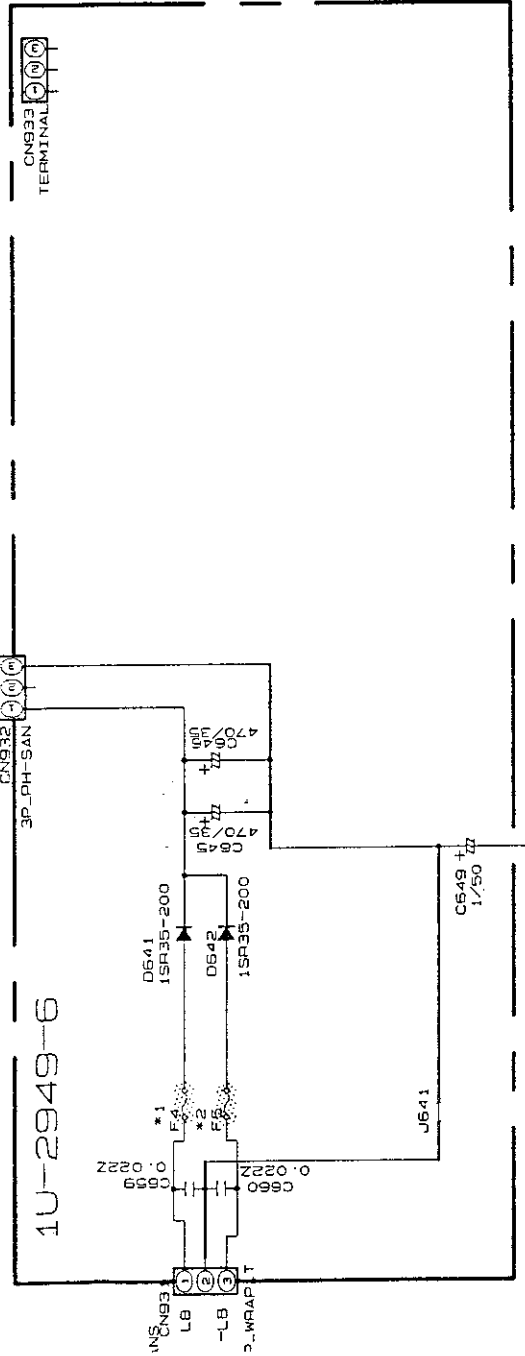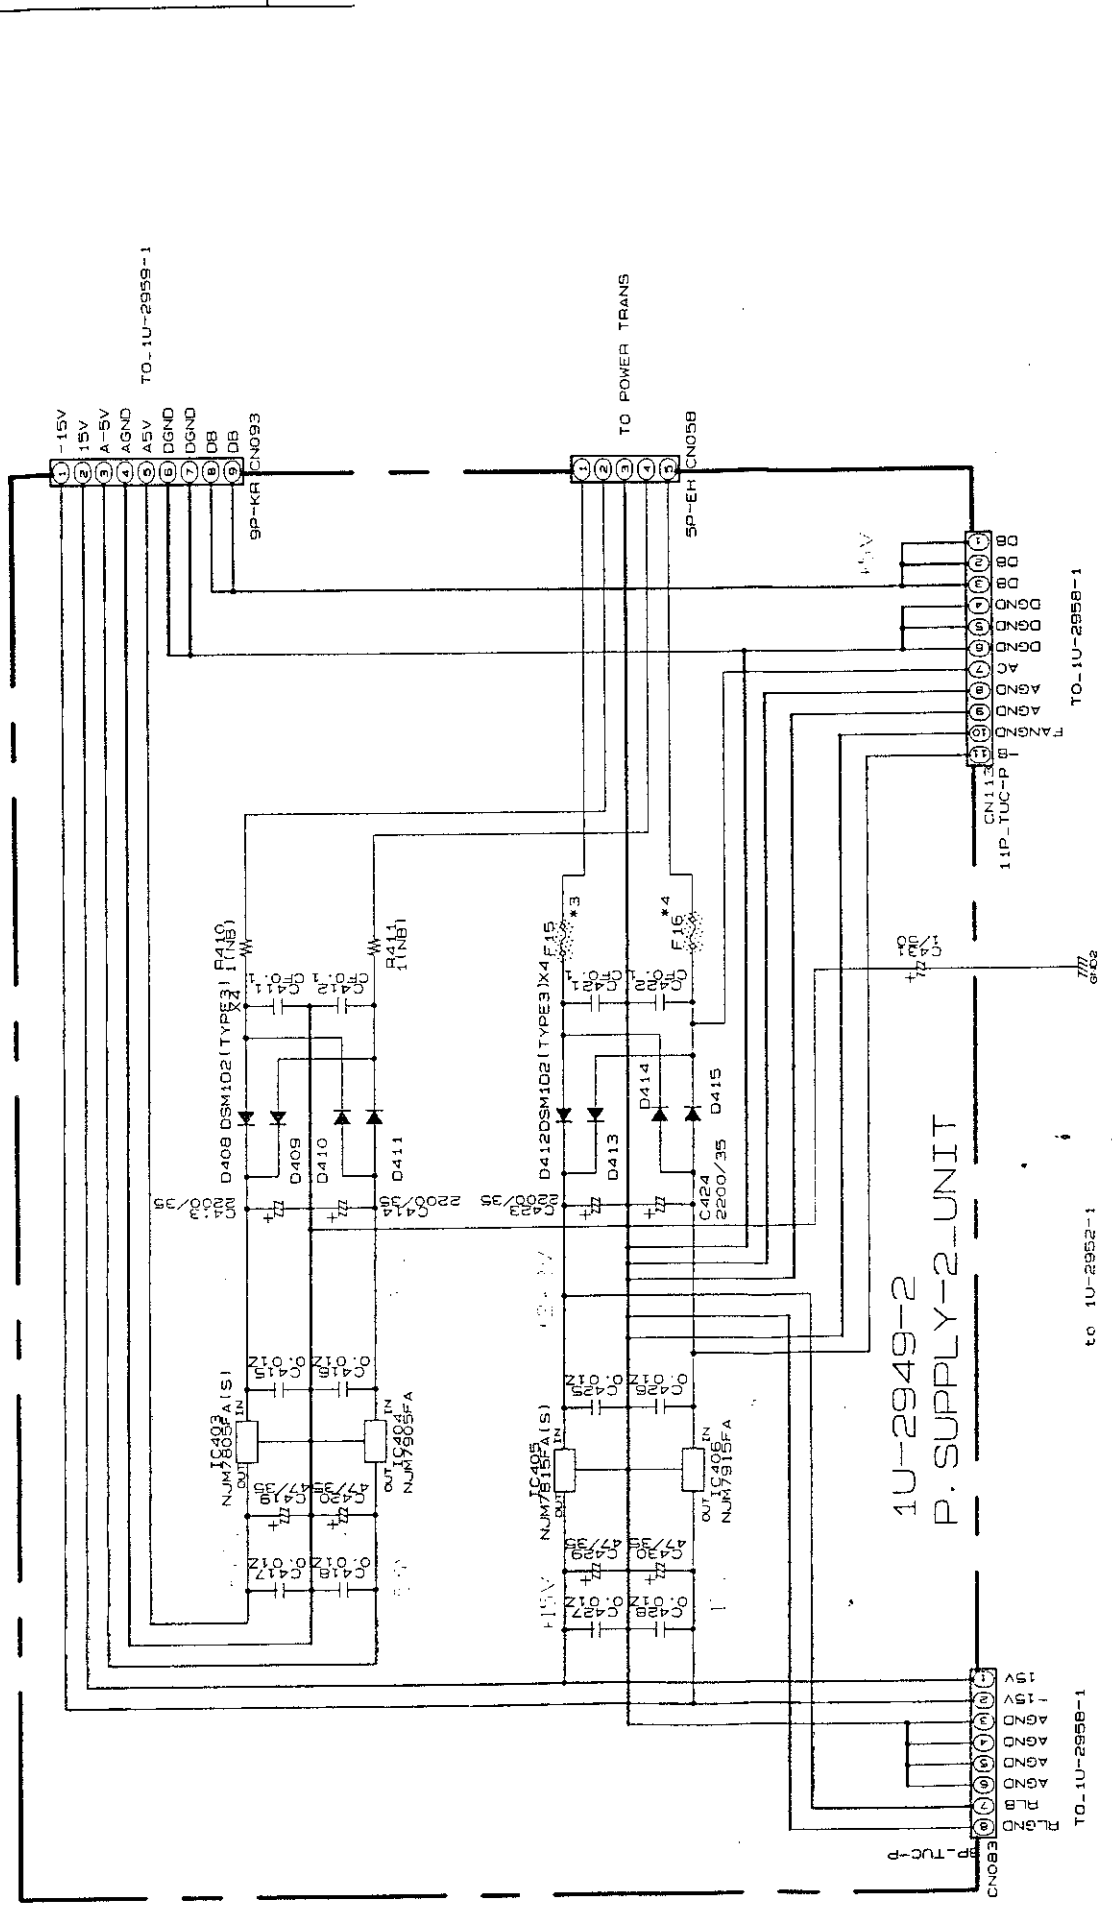

_____ +B LINE
 _____ -B LINE
 _____ SIGNAL LINE

	*1 F4	*2 F5	*3 F15	*4 F16
ASIA	1A/250V 2061015029	1A/250V 2061015029	2A/250V 2061015061	2A/250V 2061015061
EUROPE	1A/250V 2061015029	1A/250V 2061015029	2A/250V 2061015061	2A/250V 2061015061
TAIWAN R. O. C	1A/125V 2061039034	1A/125V 2061039034	2A/125V 2061039063	2A/125V 2061039063
JAPAN	1A/125V 2061053007	1A/125V 2061053007	2A/125V 2061035041	2A/125V 2061035041

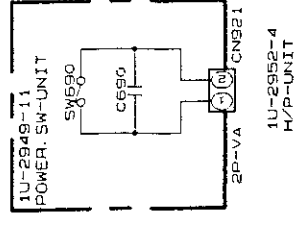

NOTES
 ALL RESISTANCE VALUES IN OHM. k=1,000 OHM, M=1,000,000 OHM
 ALL CAPACITANCE VALUES IN MICRO FARAD. P=MICRO-MICRO FARAD
 EACH VOLTAGE AND CURRENT ARE MEASURED AT NO SIGNAL INPUT
 CONDITION.
 CIRCUIT AND PARTS ARE SUBJECT TO CHANGE WITHOUT PRIOR
 NOTICE.




WARNING:
 Parts marked with this symbol  have critical characteristics.
 Use ONLY replacement parts recommended by the manufacturer.

CAUTION:
 Before returning the unit to the customer, make sure you make either (1) a leakage current check or (2) a line to chassis resistance check. If the leakage current exceeds 0.5 milliamps, or if the resistance from chassis to either side of the power cord is less than 240 kohms, the unit is defective.


WARNING:
 DO NOT return the unit to the customer until the problem is located and corrected.

SCHEMATIC DIAGRAM (1U-2949-2 ~ 6, 11 POWER SUPPLY/REMOCON/HEAD PHONEY/VOLUME-2/POWER S

1 2 3 4 5

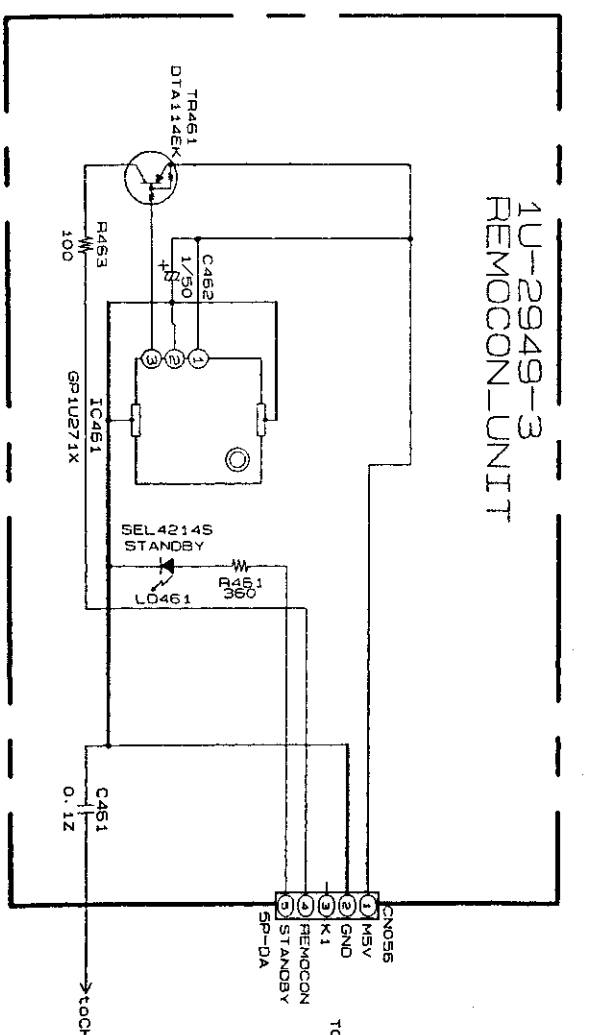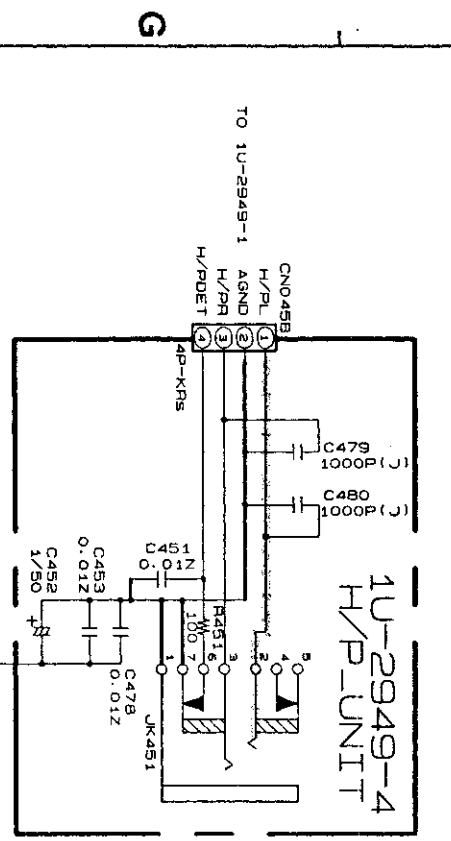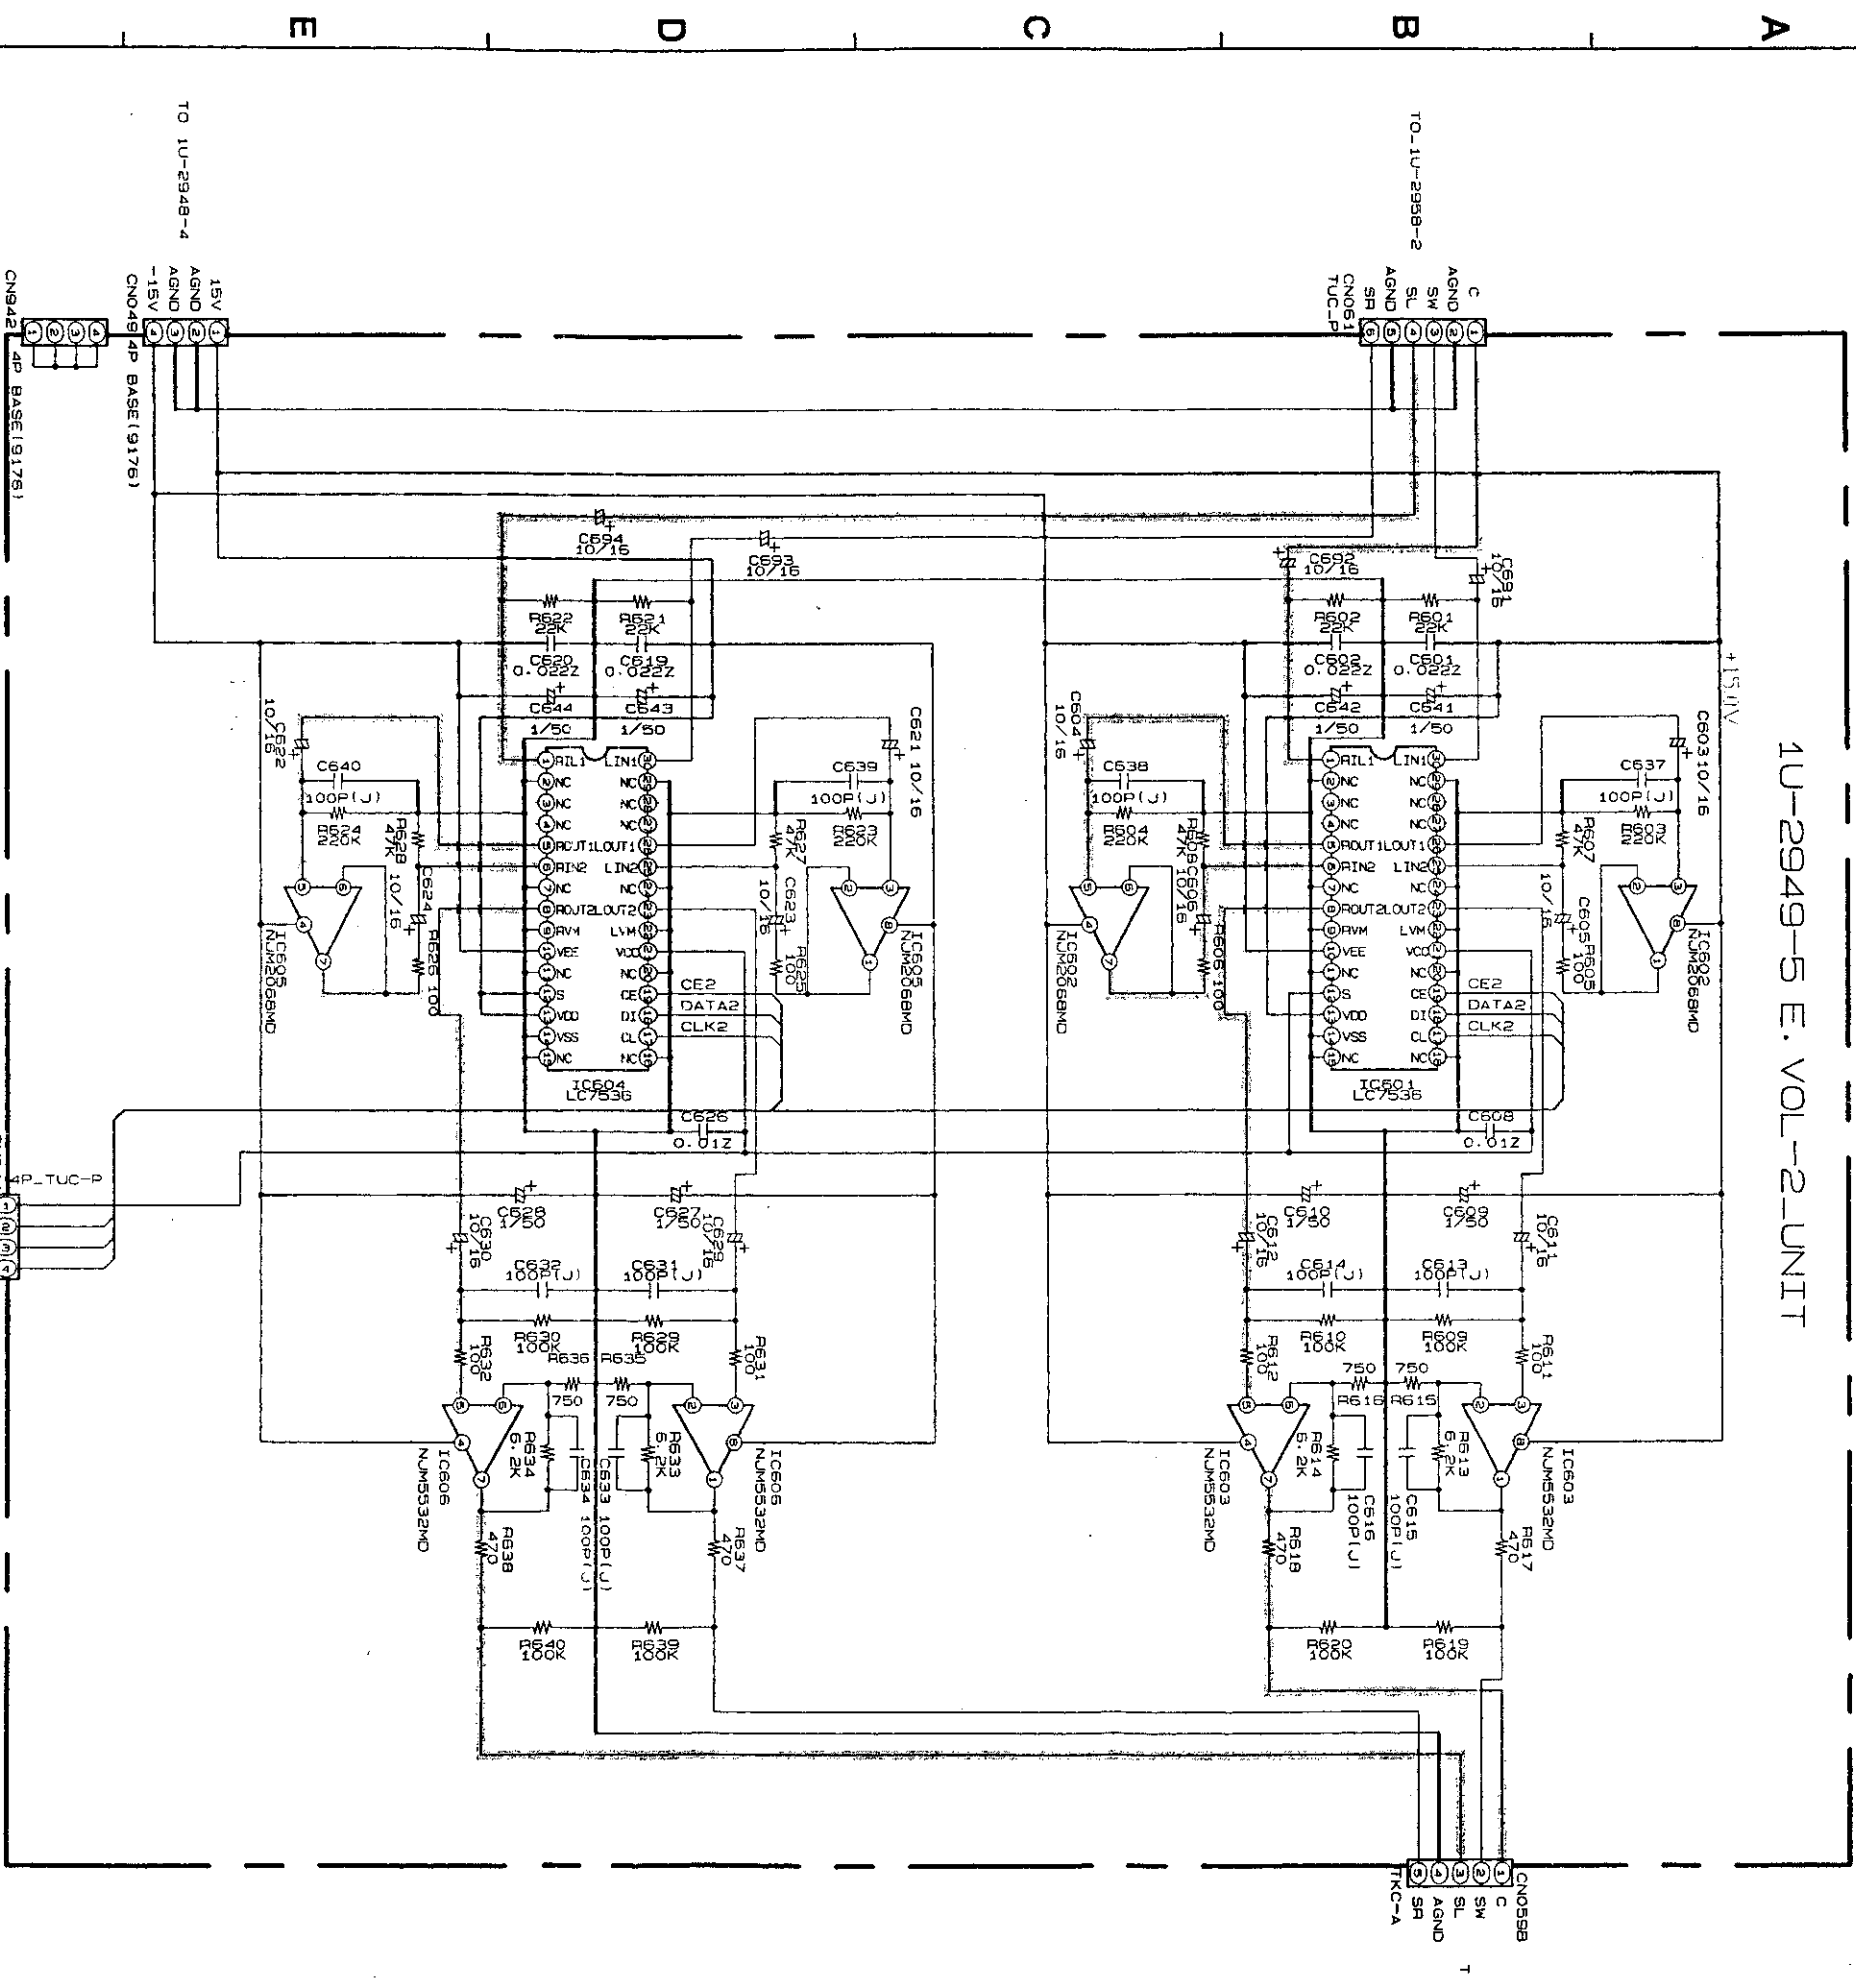

1U-2958-3 TONE UNIT

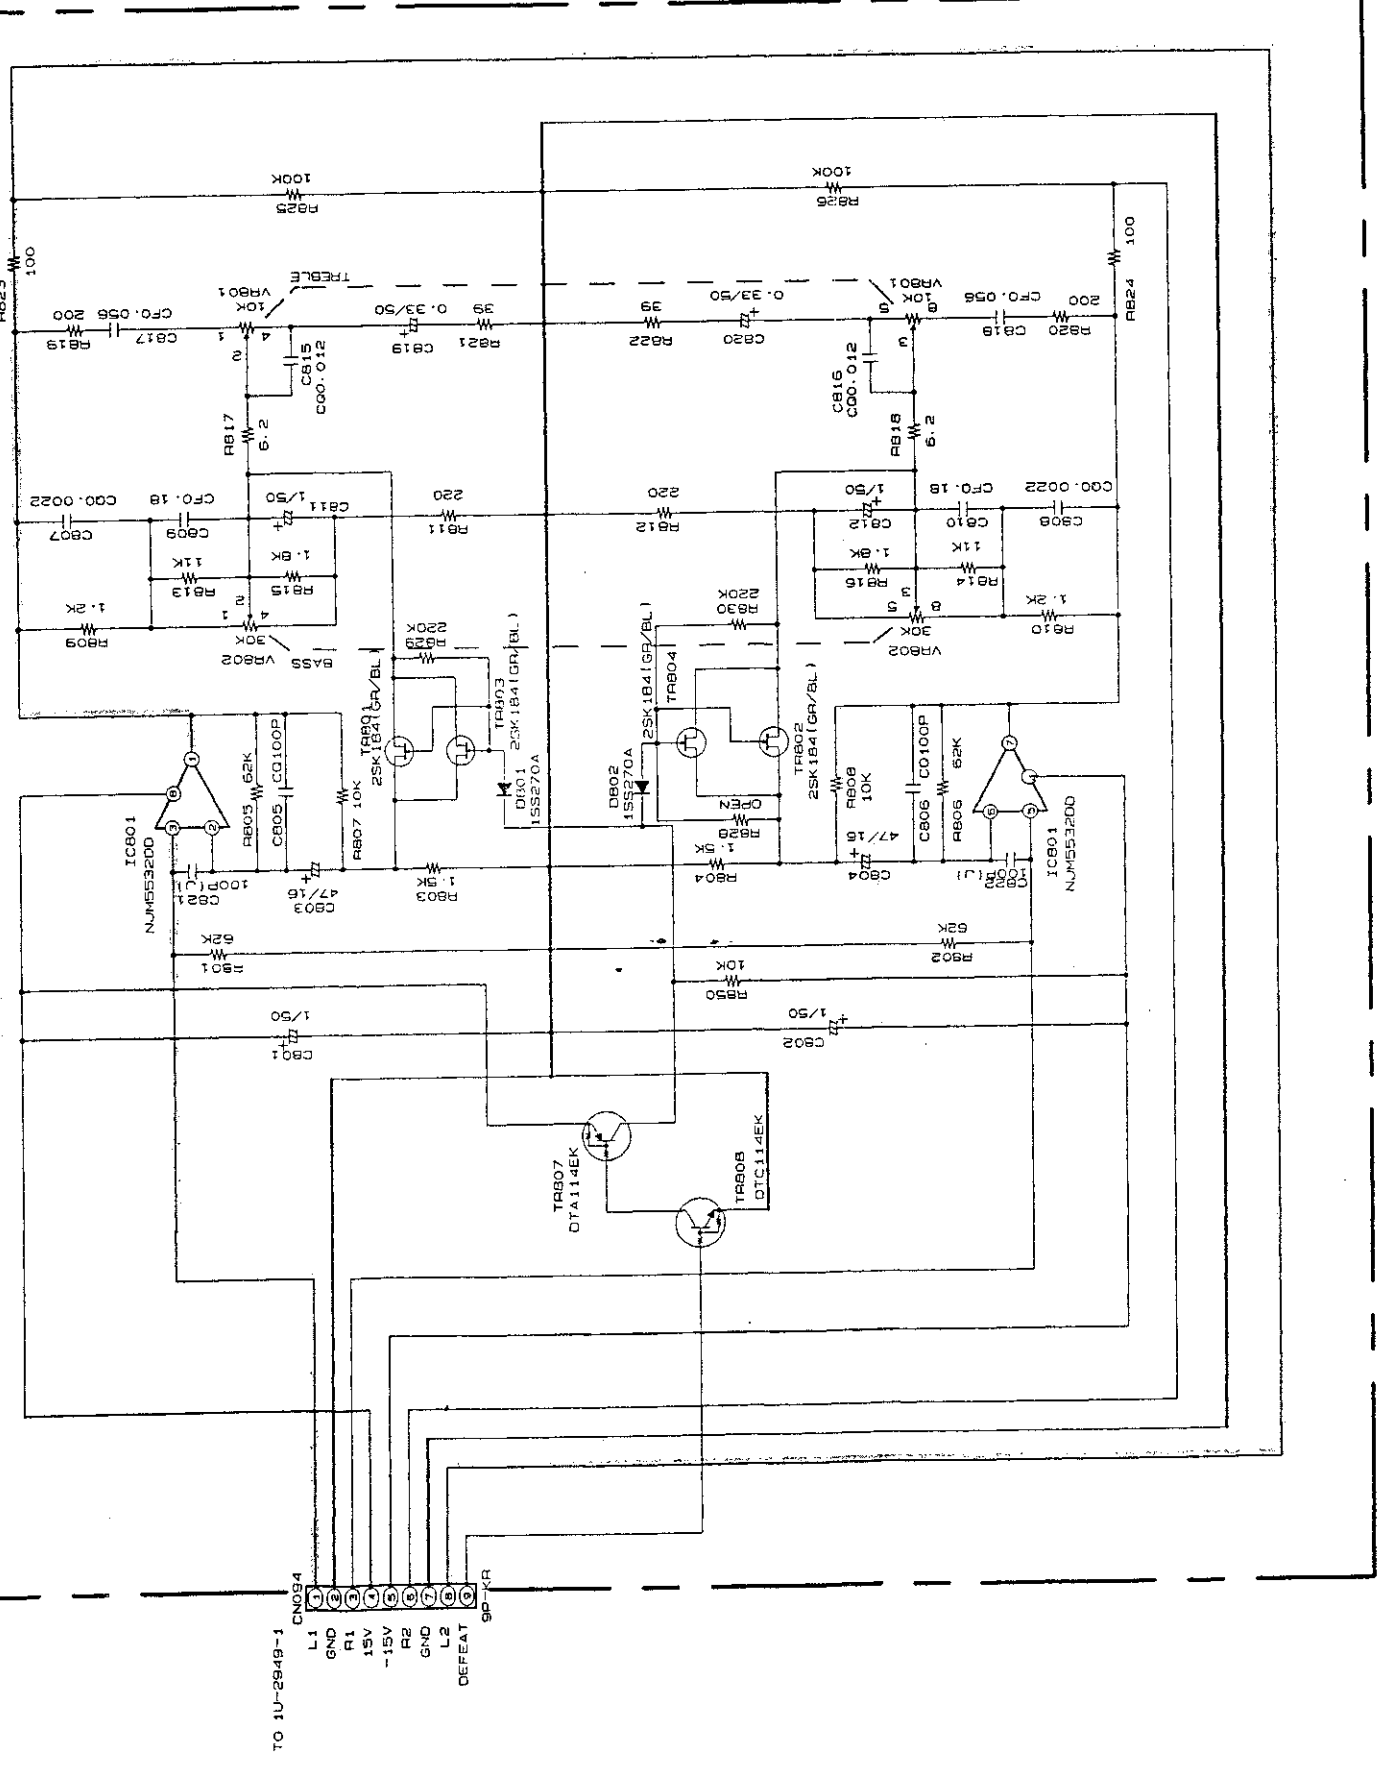

	*1 F11	*2 F12	*3 F13	*4 F16
ASIA	2A/250V 2061015061	2A/250V 2061015061	4A/250V 2061015087	4A/250V 2061015087
EUROPE	2A/250V 2061015061	2A/250V 2061015061	4A/250V 2061015087	4A/250V 2061015087
TAIWAN R. O. C	2A/125V 2061039063	2A/125V 2061039063	4A/125V 2061039092	4A/125V 2061039092
JAPAN	2A/125V 2061035041	2A/125V 2061035041	4A/125V 2061035070	4A/125V 2061035070

_____ +B LINE
 _____ -B LINE
 _____ SIGNAL LINE

NOTES
 ALL RESISTANCE VALUES IN OHM. k=1,000 OHM, M=1,000,000 OHM
 ALL CAPACITANCE VALUES IN MICRO FARAD. P=MICRO-MICRO FARAD
 EACH VOLTAGE AND CURRENT ARE MEASURED AT NO SIGNAL INPUT
 CONDITION.
 CIRCUIT AND PARTS ARE SUBJECT TO CHANGE WITHOUT PRIOR
 NOTICE.

WARNING:
 Parts marked with this symbol have critical characteristics.
 Use ONLY replacement parts recommended by the manufacturer.

CAUTION:
 Before returning the unit to the customer, make sure you make either (1) a
 leakage current check or (2) a line to chassis resistance check. If the leakage
 current exceeds 0.5 milliamperes, or if the resistance from chassis to either side
 of the power cord is less than 240 kohms, the unit is defective.

WARNING:
 DO NOT return the unit to the customer until the problem is located and
 corrected.

SCHEMATIC DIAGRAM (1U-2958-1, 3 POWER SUPPLY-3/TONE-2 P.W.B. UNIT)


1

2

3

4

5

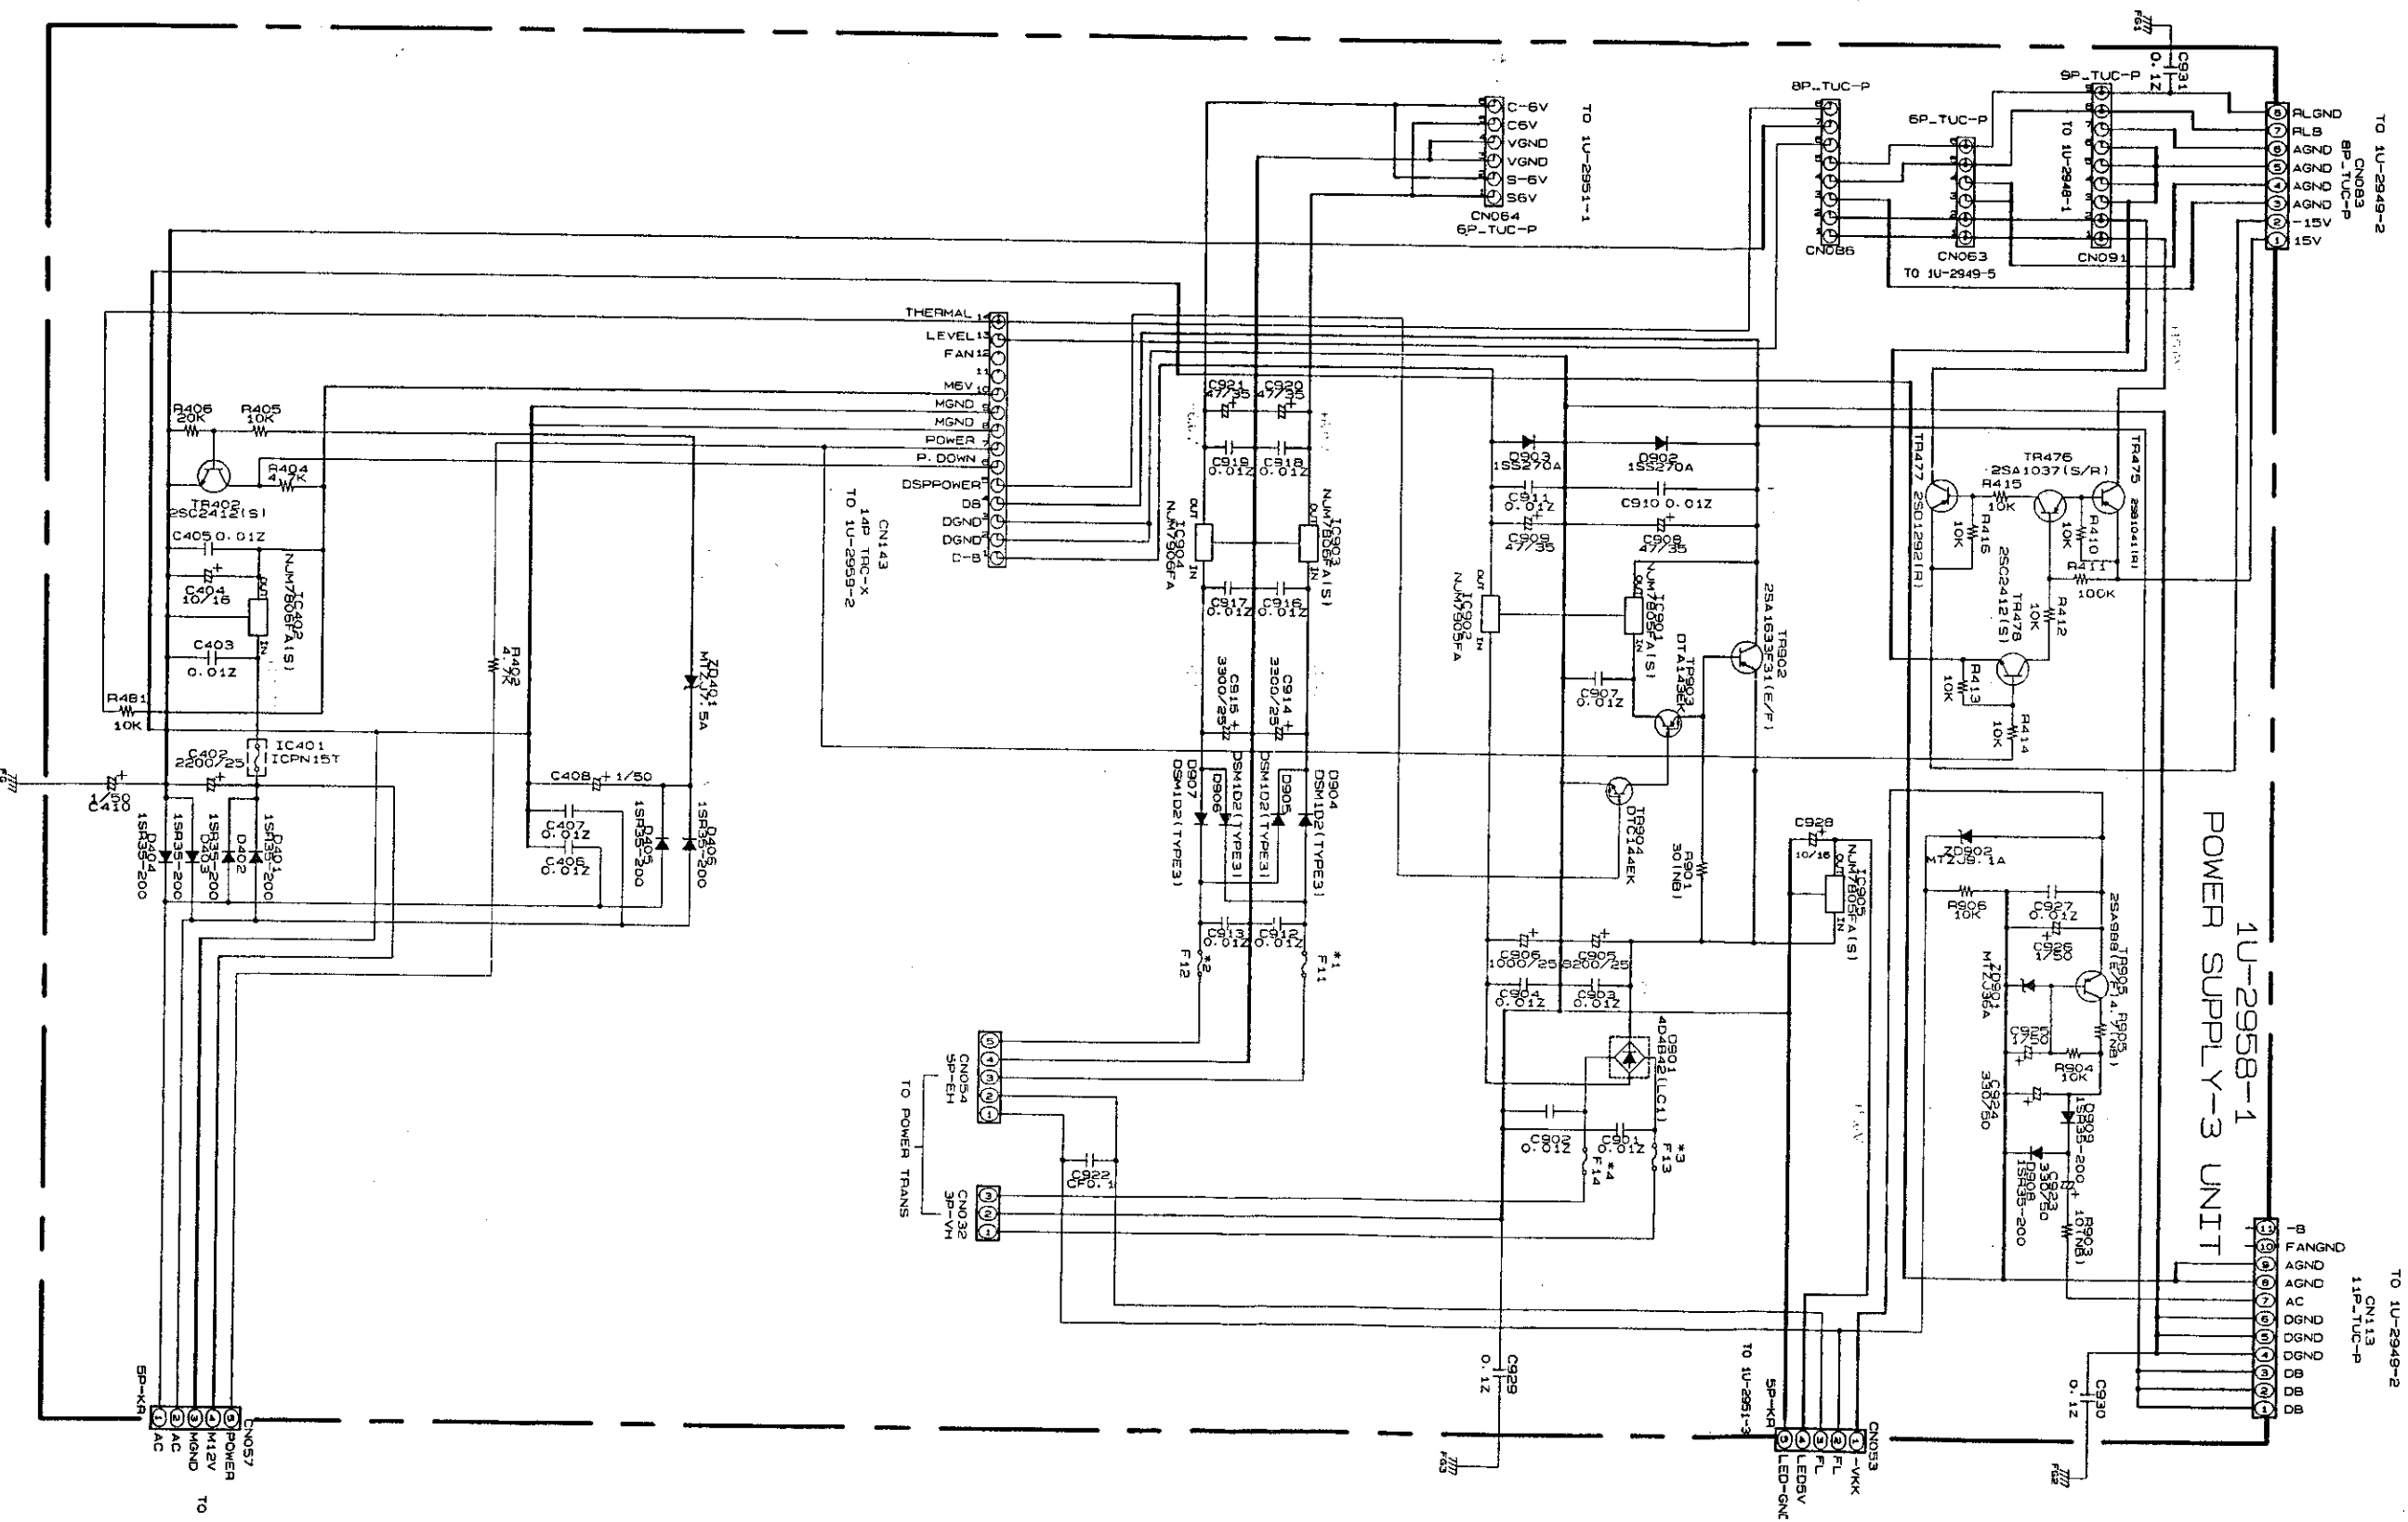

11

10


9

8

7

TO 1U-2952-1

TO 1U-2949-4

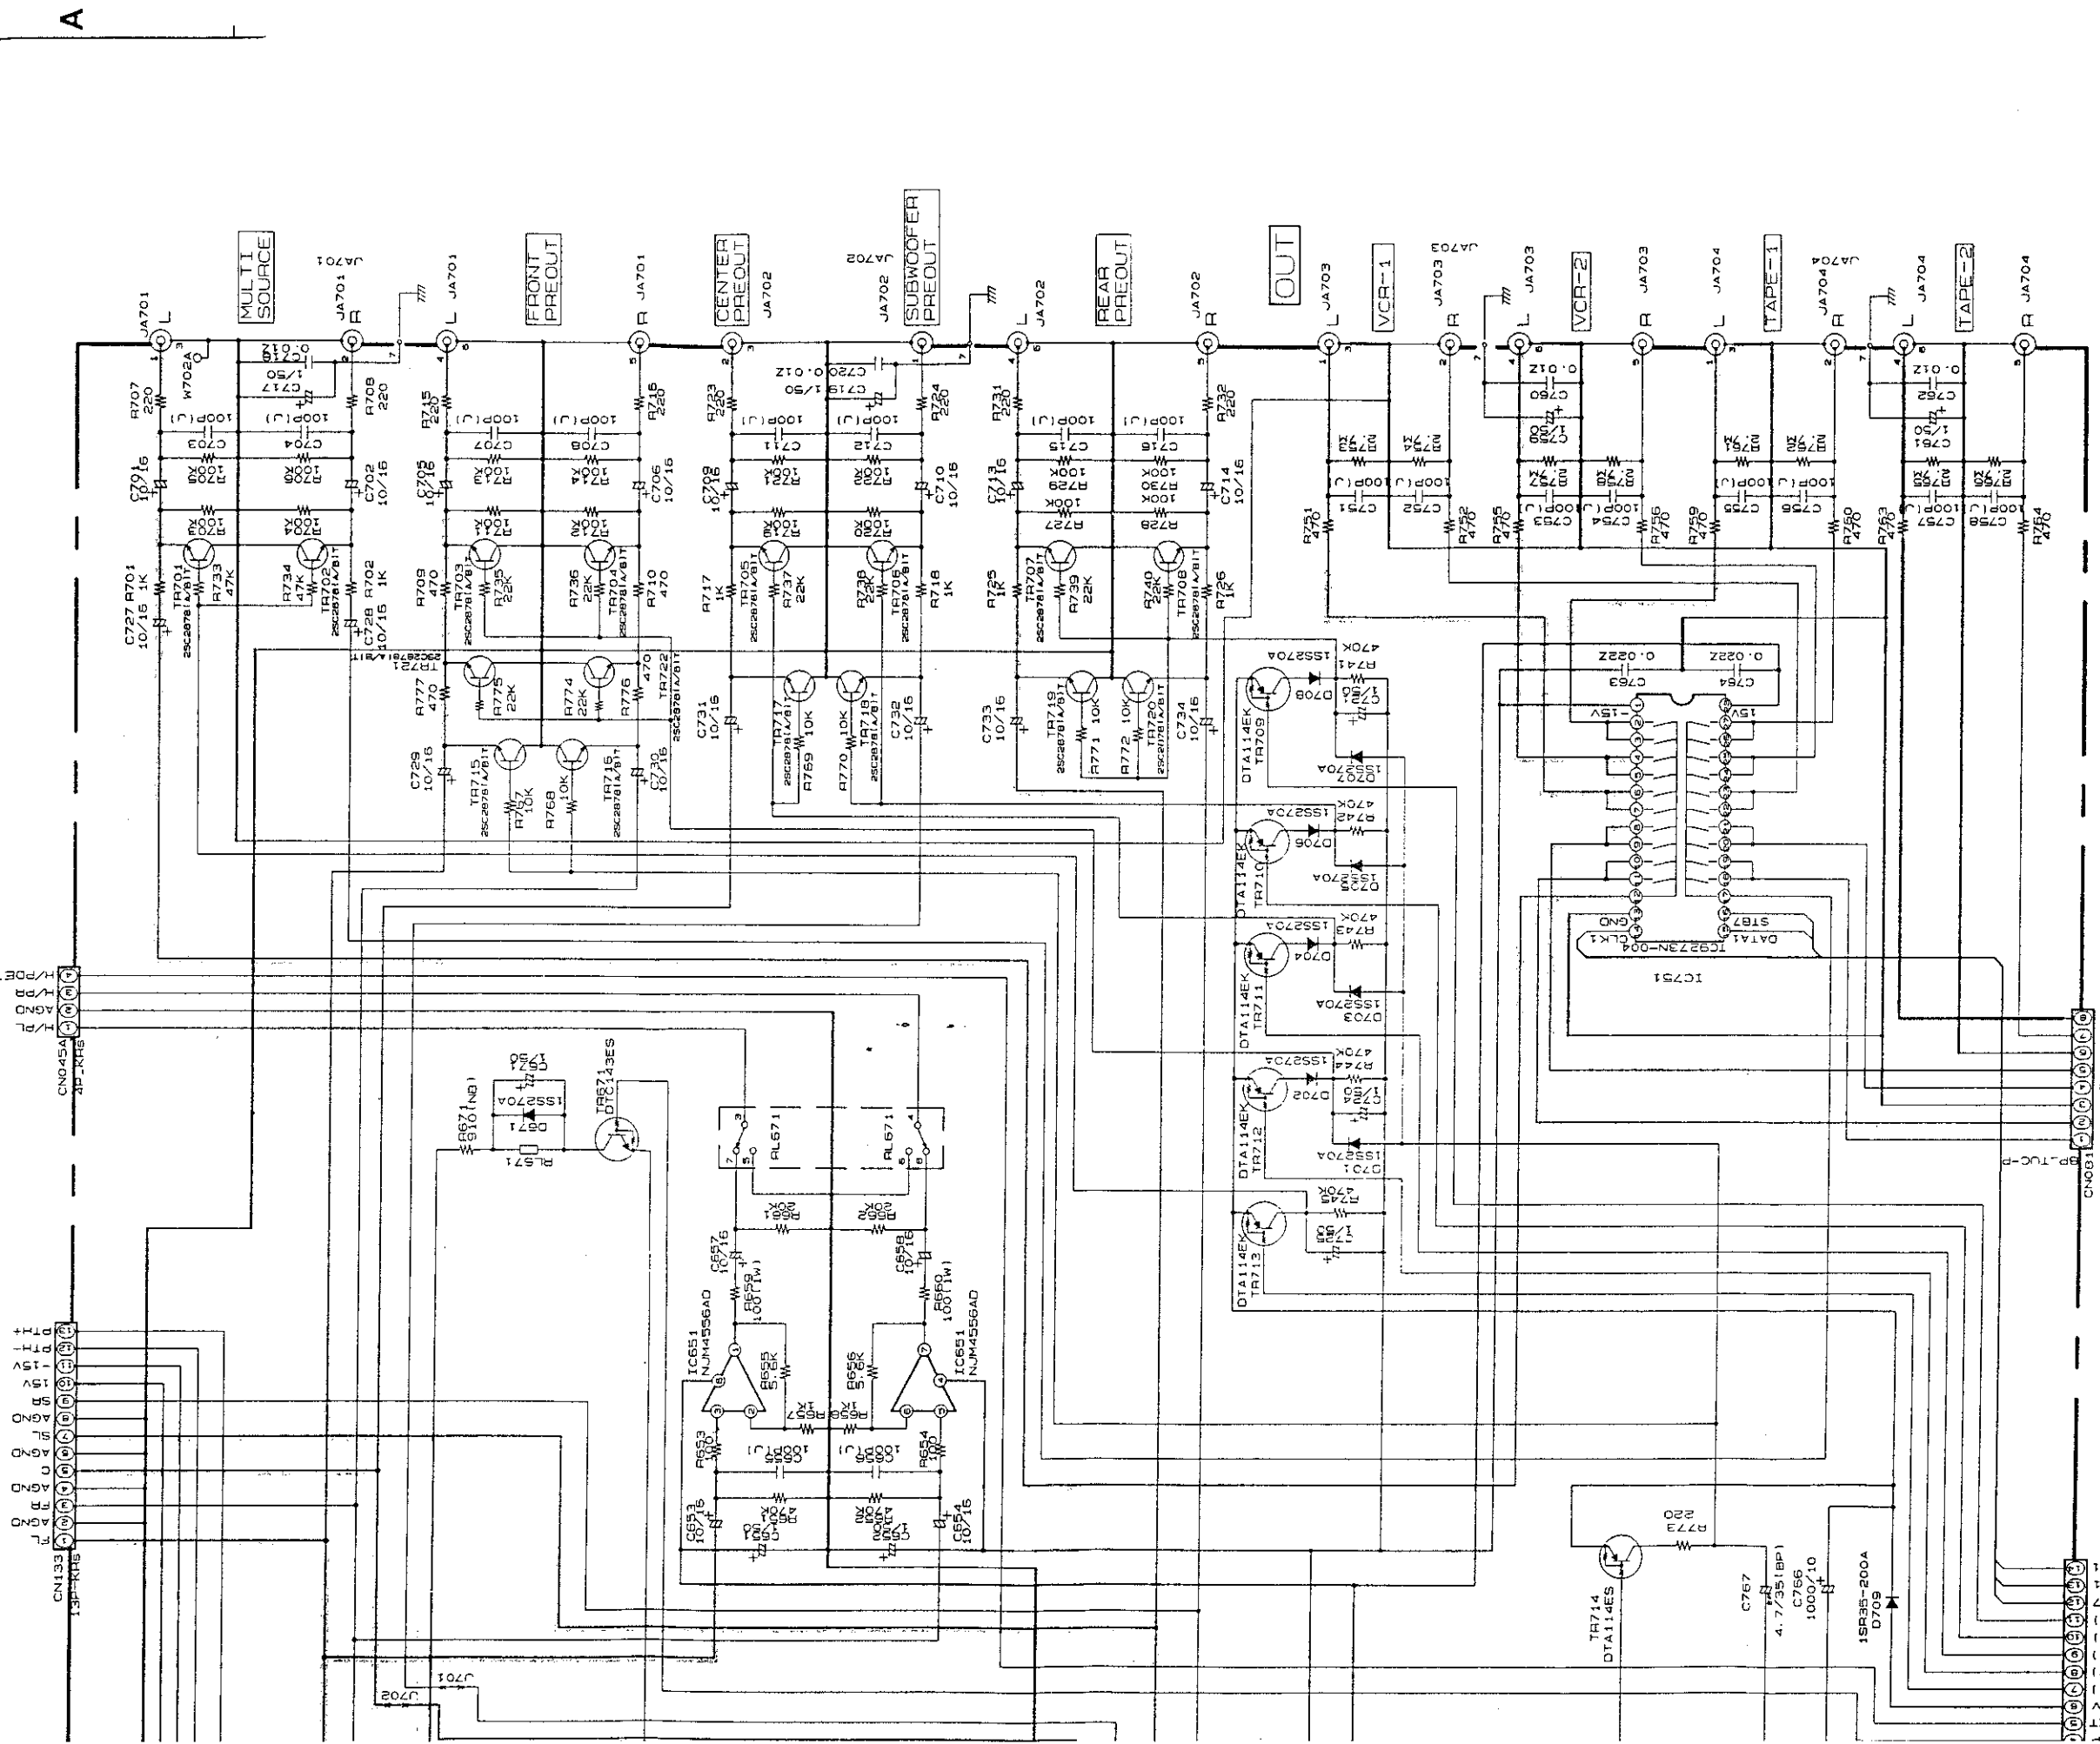


+B LINE
-B LINE
SIGNAL LINE

TO 1U-2958-2

TO 1U-2958-2

SCHEMATIC DIAGRAM (1U-2949-1 PRE-AMP P.W.B. UNIT)

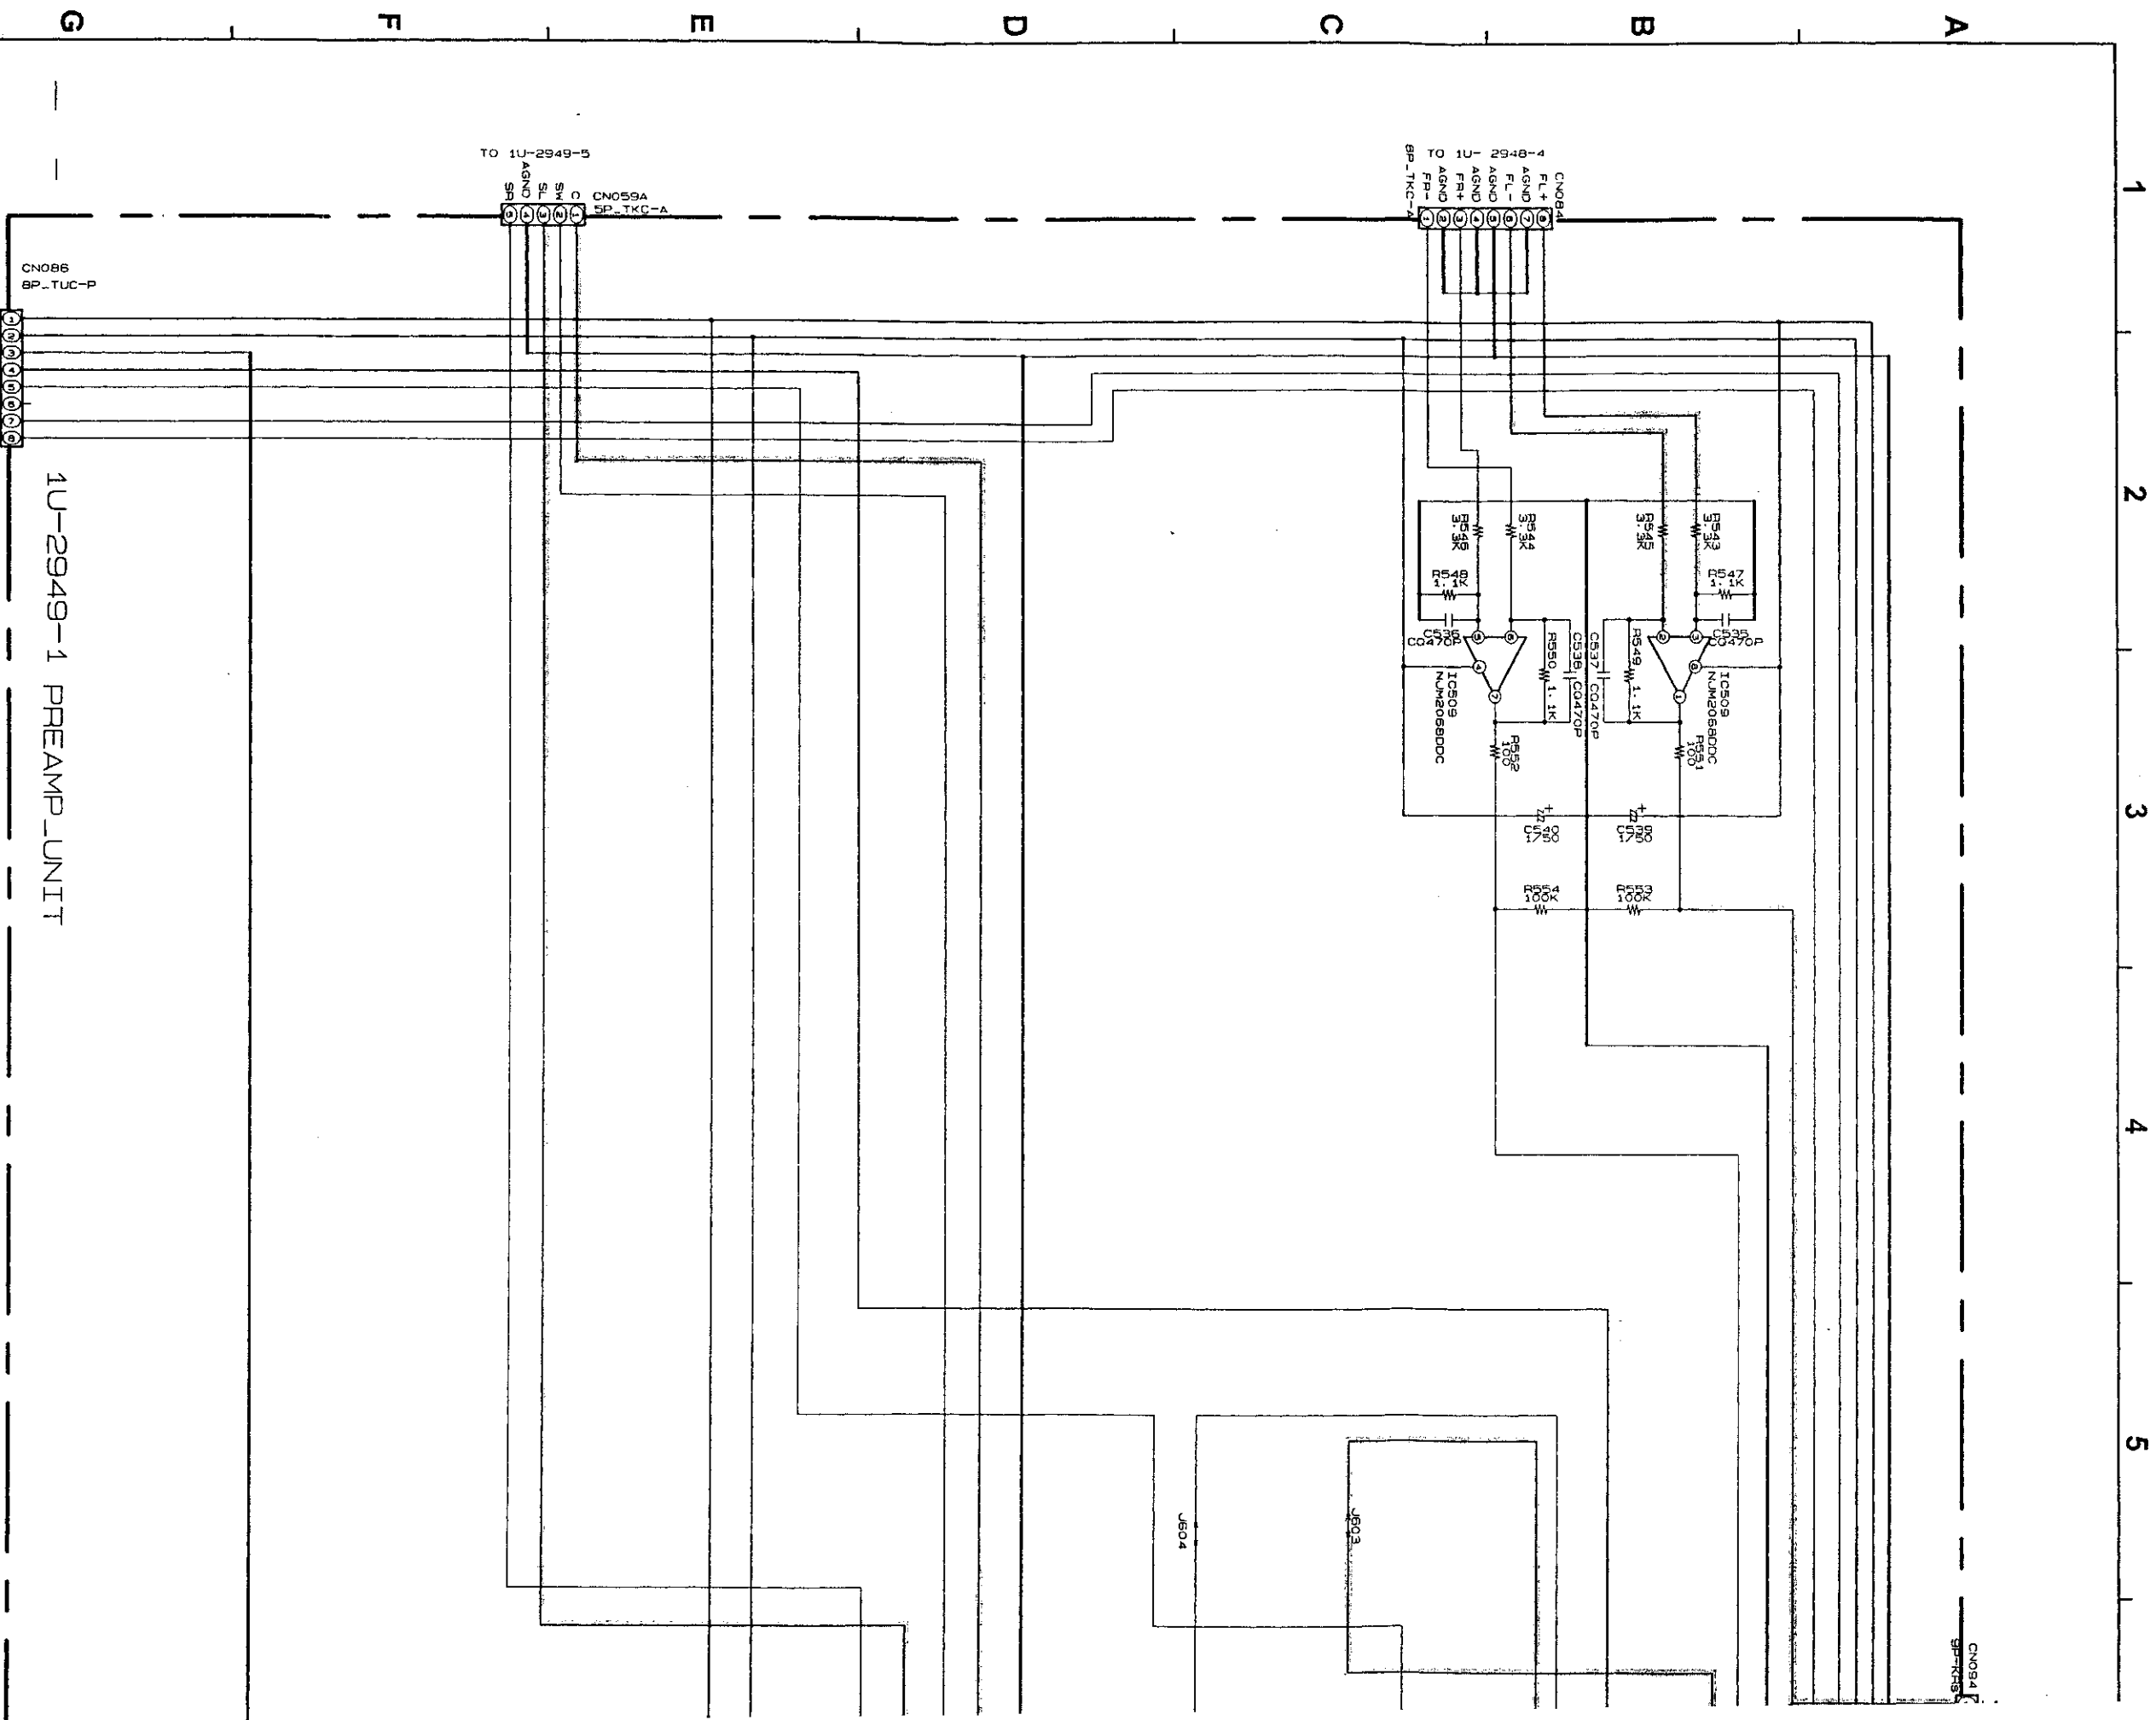

TO-1U-2949-1
 15V
 15V
 AGND
 RL B
 RL GND
 LEVEL
 PTH-
 PTH+

1U-2949-1 PREAMP_UNIT

NOTES

ALL RESISTANCE VALUES IN OHM, K=1,000 OHM, M=1,000,000 OHM
 ALL CAPACITANCE VALUES IN MICRO FARAD, P=MICRO-MICRO FARAD
 EACH VOLTAGE AND CURRENT ARE MEASURED AT NO SIGNAL INPUT
 CONDITION.


CIRCUIT AND PARTS ARE SUBJECT TO CHANGE WITHOUT PRIOR
 NOTICE

WARNING:
 Parts marked with this symbol have critical characteristics.
 Use ONLY replacement parts recommended by the manufacturer.

CAUTION:
 Before returning the unit to the customer, make sure you make either (1) a
 leakage current check or (2) a line to chassis resistance check. If the leakage
 current exceeds 0.5 milliamperes, or if the resistance from chassis to either side
 of the power cord is less than 240 kohms, the unit is defective.

WARNING:
 DO NOT return the unit to the customer until the problem is located and
 corrected.


A B C D E F G H

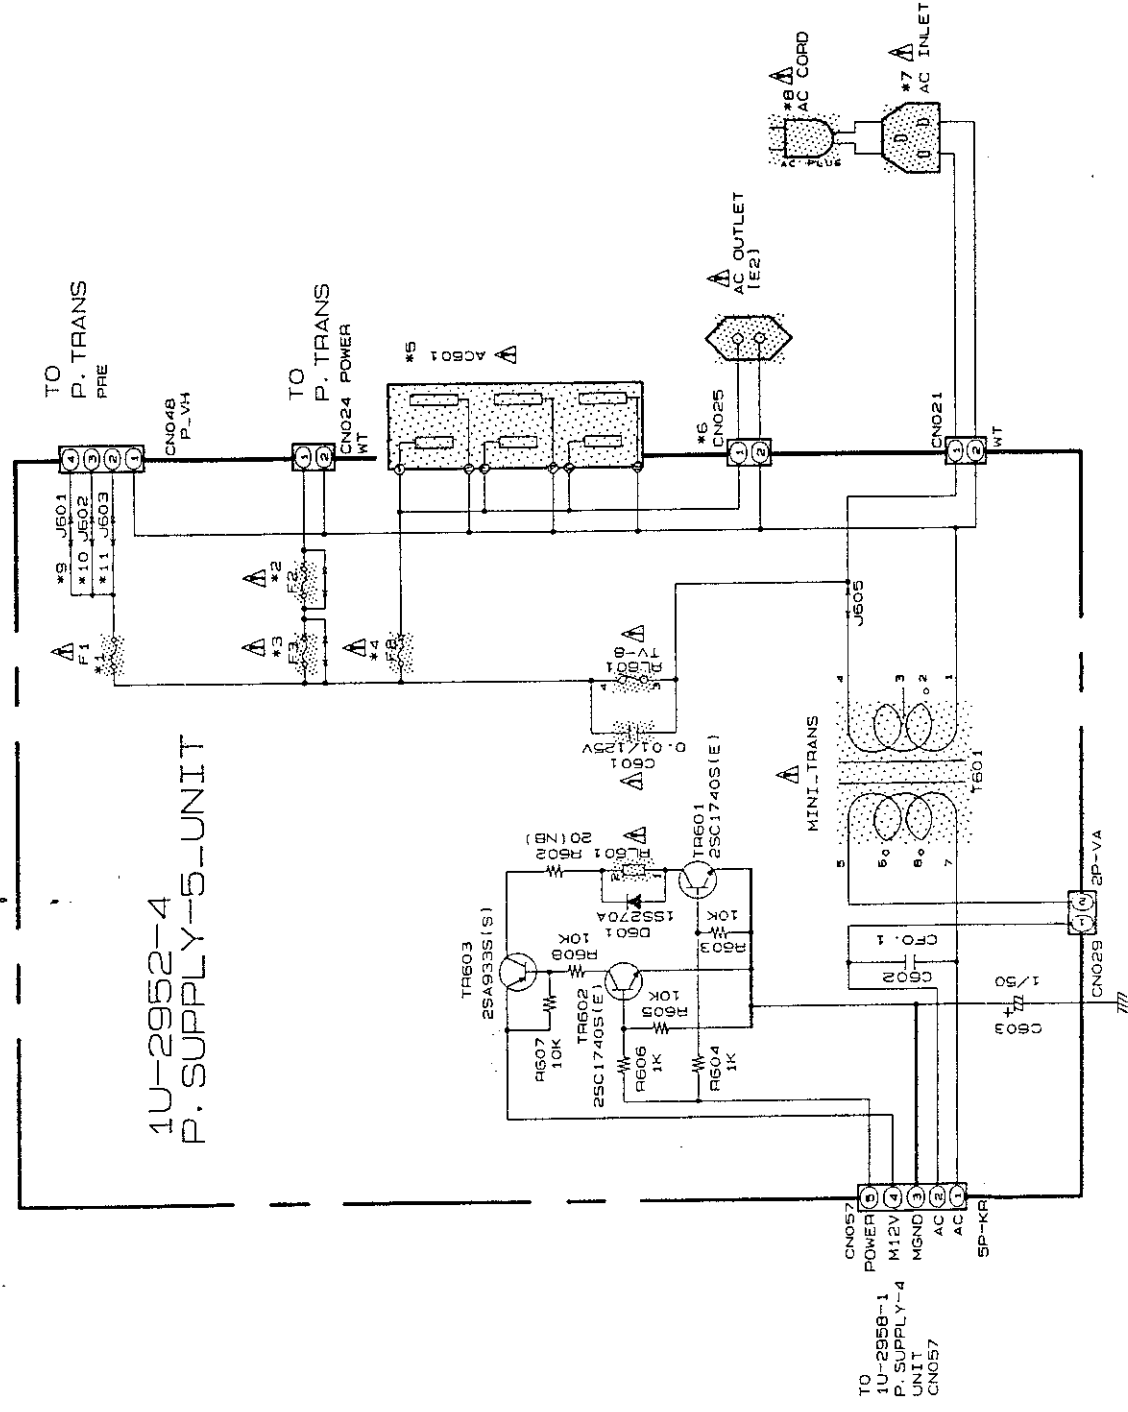


+B LINE

*3 F3	*4 F8	*5 AC601	*6 CN025	*7 AC INLET	*8 AC CORD	*9 J601	*10 J602	*11 J603
6.3A/250V 2061015061	1.25A/250V 2061015016	---	2P VH	2P 2033970008	2062147006	JW	---	---
6.3A/250V 2061015061	1.25A/250V 2061015016	---	2P VH	2P 2033970008	2062147006	JW	---	---
JW	8A/125V 2061046014	3P AC OUTLET	---	3P 2033962003	2062150103	---	JW	---
JW	8A/125V 2061052008	3P AC OUTLET	---	3P 2033962003	2062150103	---	---	JW

SCH1 SCHEMATIC DIAGRAM (1U-2952-4 POWER SUPPLY-5/1U-2944-1 POWER AMP-2 P.W.B. UNIT)

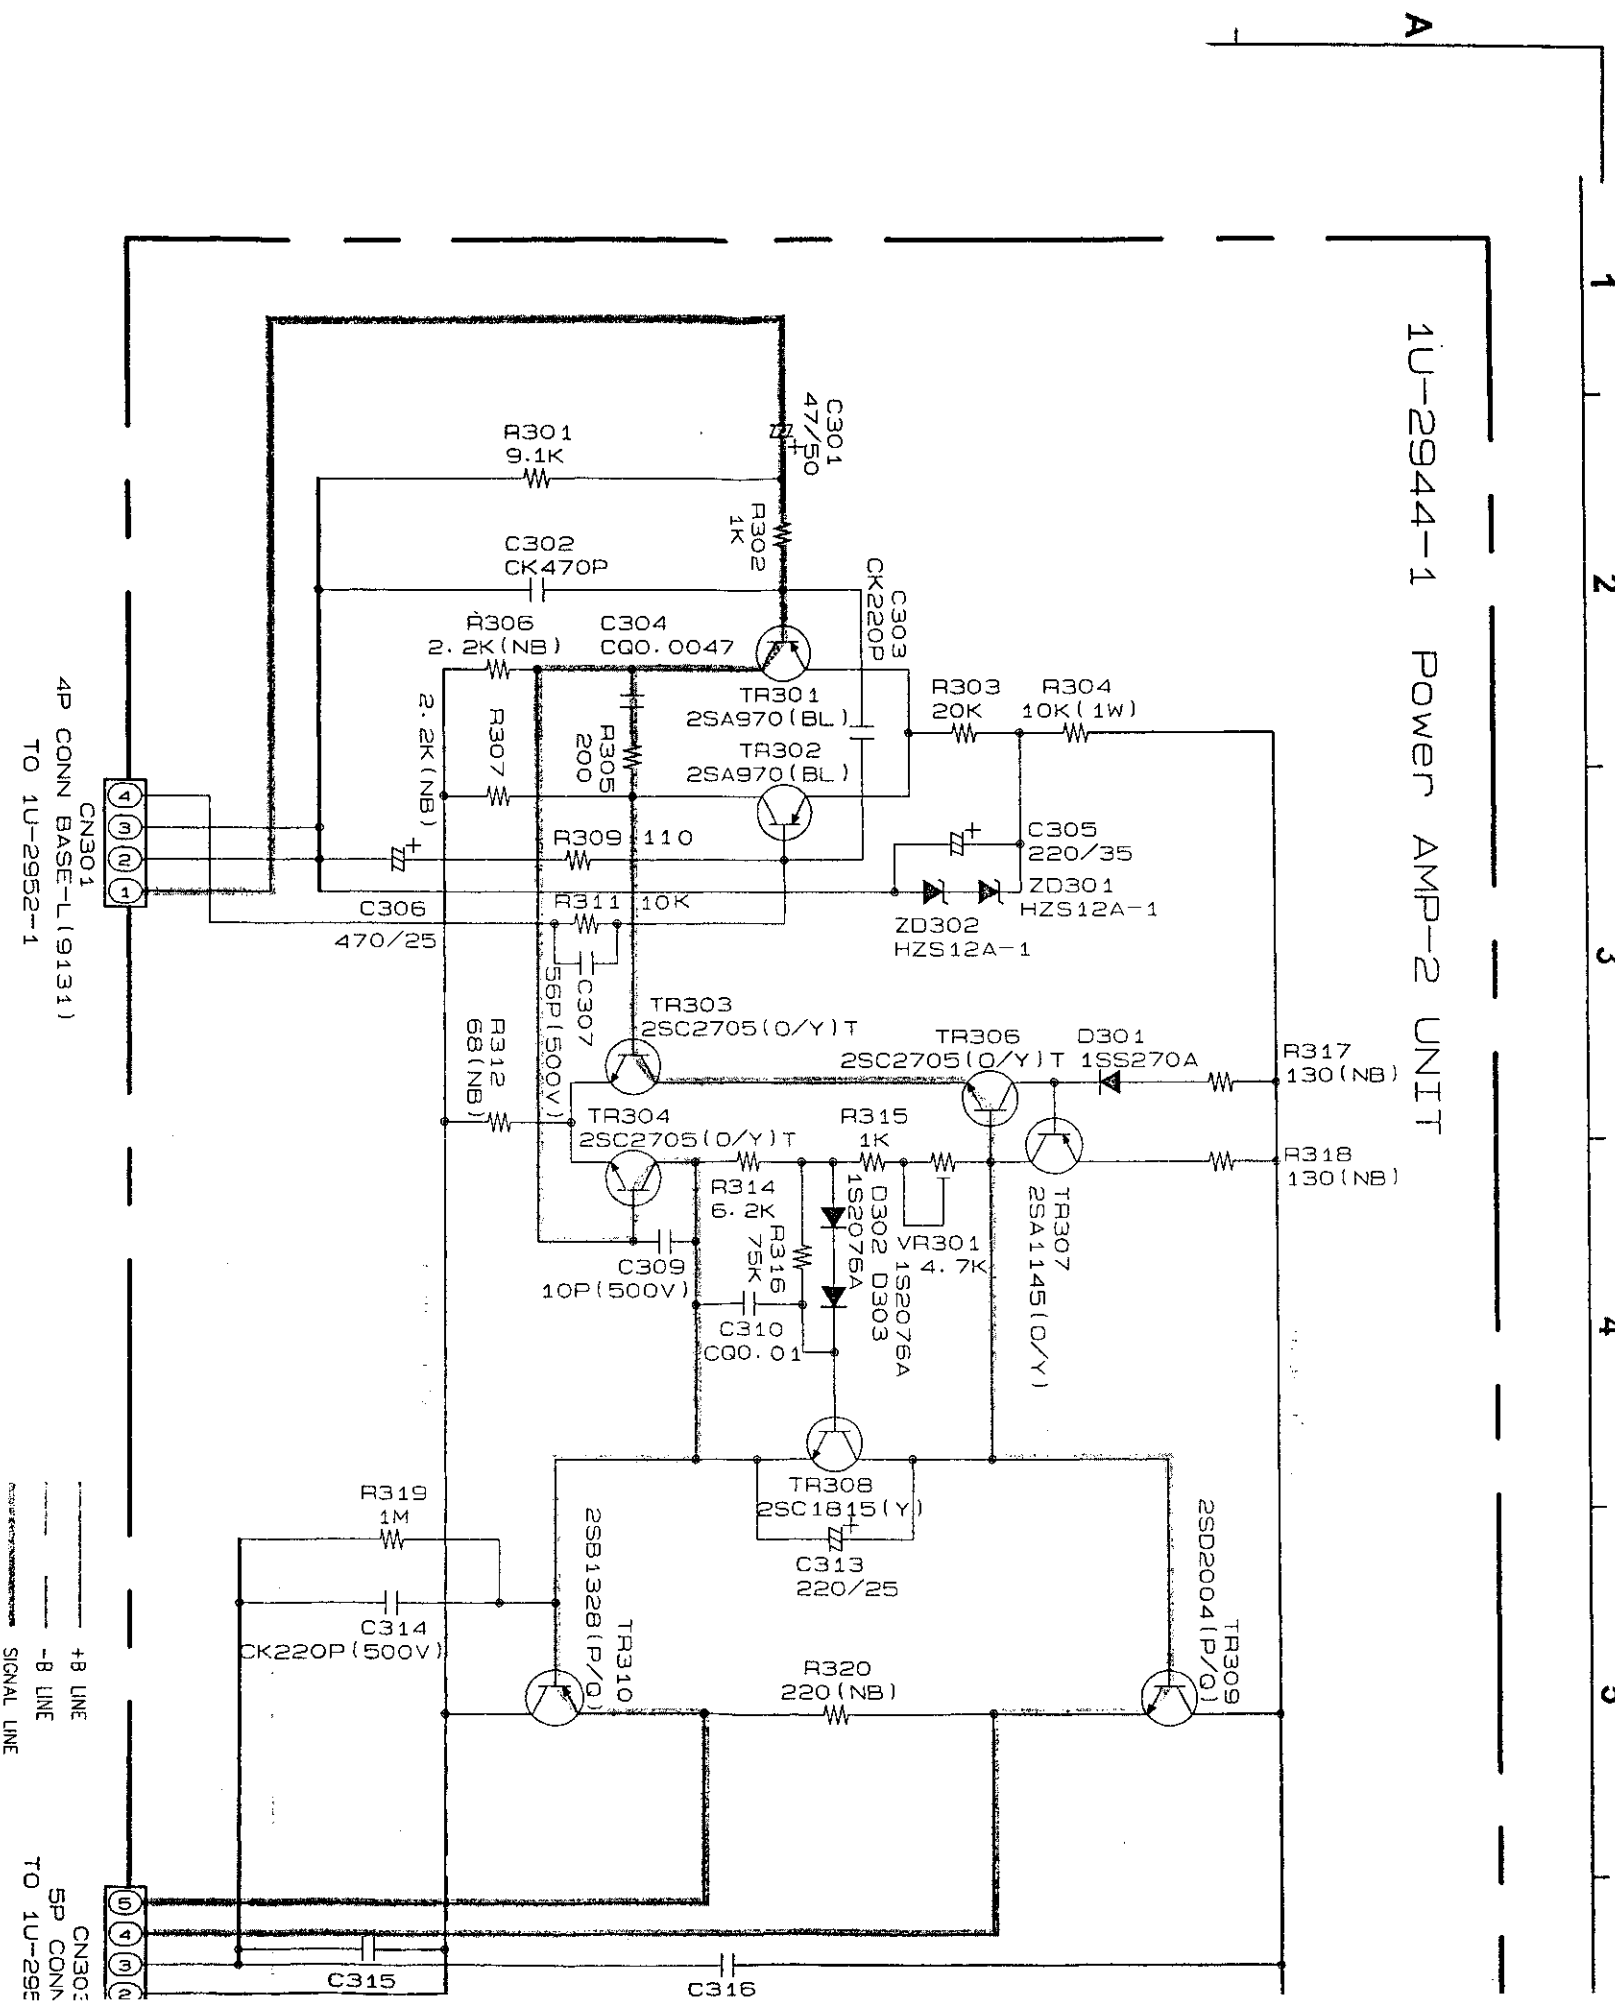

	*1 F1	*
ASIA	630mA/250V 2061036008	
EUROPE	630mA/250V 2061036008	
TAIWAN R.O.C	2A/125V 2061039063	12A/ 2061
JAPAN	2A/125V 2061035041	12A/ 2061

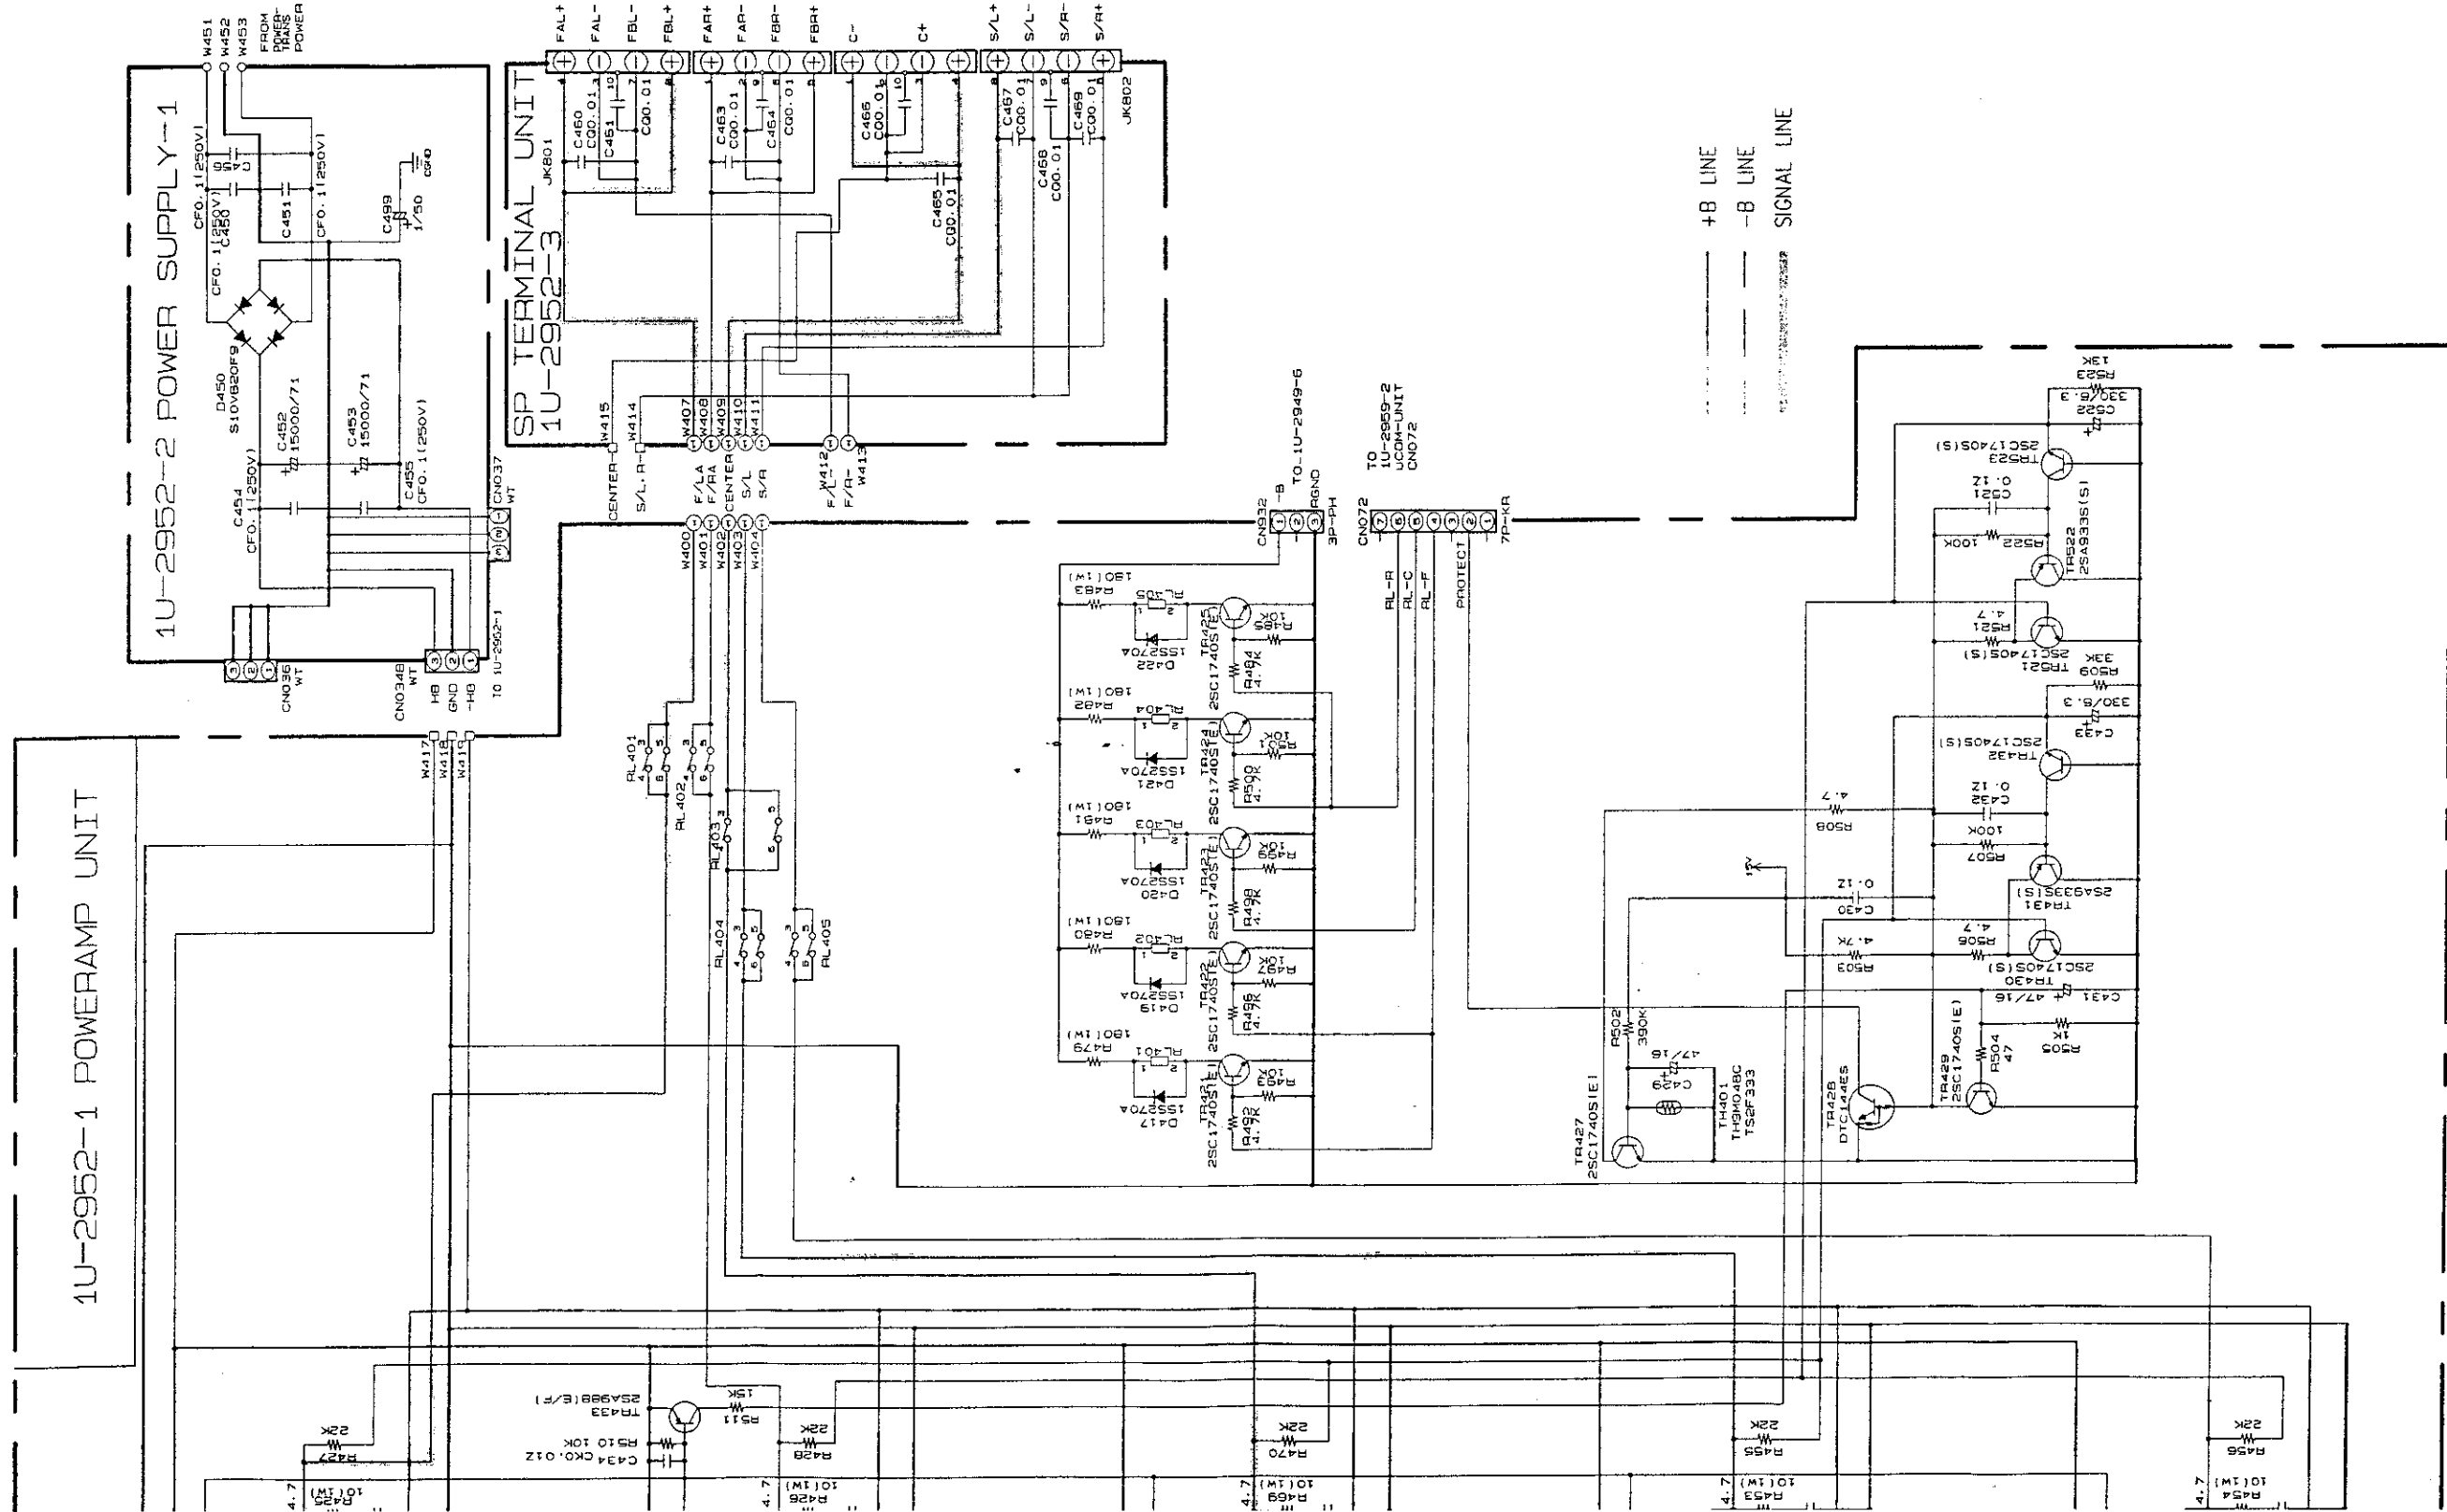


NOTES
 ALL RESISTANCE VALUES IN OHMS. K=1,000 OHMS, M=1,000,000 OHMS
 ALL CAPACITANCE VALUES IN MICRO FARAD. P=MICRO MICRO FARAD
 EACH VOLTAGE AND CURRENT ARE MEASURED AT NO SIGNAL INPUT
 CONDITION.
 CIRCUIT AND PARTS ARE SUBJECT TO CHANGE WITHOUT NOTICE.

WARNING:
 Do NOT return the unit to the customer until the problem is located and corrected.


WARNING:
 Before returning the unit to the customer, make sure you make either (1) a current excursion test or (2) a line to chassis resistance check. If the leakage current exceeds 0.5 mA, the unit is defective. If the resistance from chassis to either side of the power cord is less than 240 kohms, the unit is defective.

CAUTION:
 Use ONLY replacement parts recommended by the manufacturer.

WARNING:
 Parts marked with this symbol  have critical characteristics. Use ONLY replacement parts recommended by the manufacturer.

SCH SCHEMATIC DIAGRAM (1U-2958-2 WIRING P.W.B. UNIT)

1 2 3 4 5

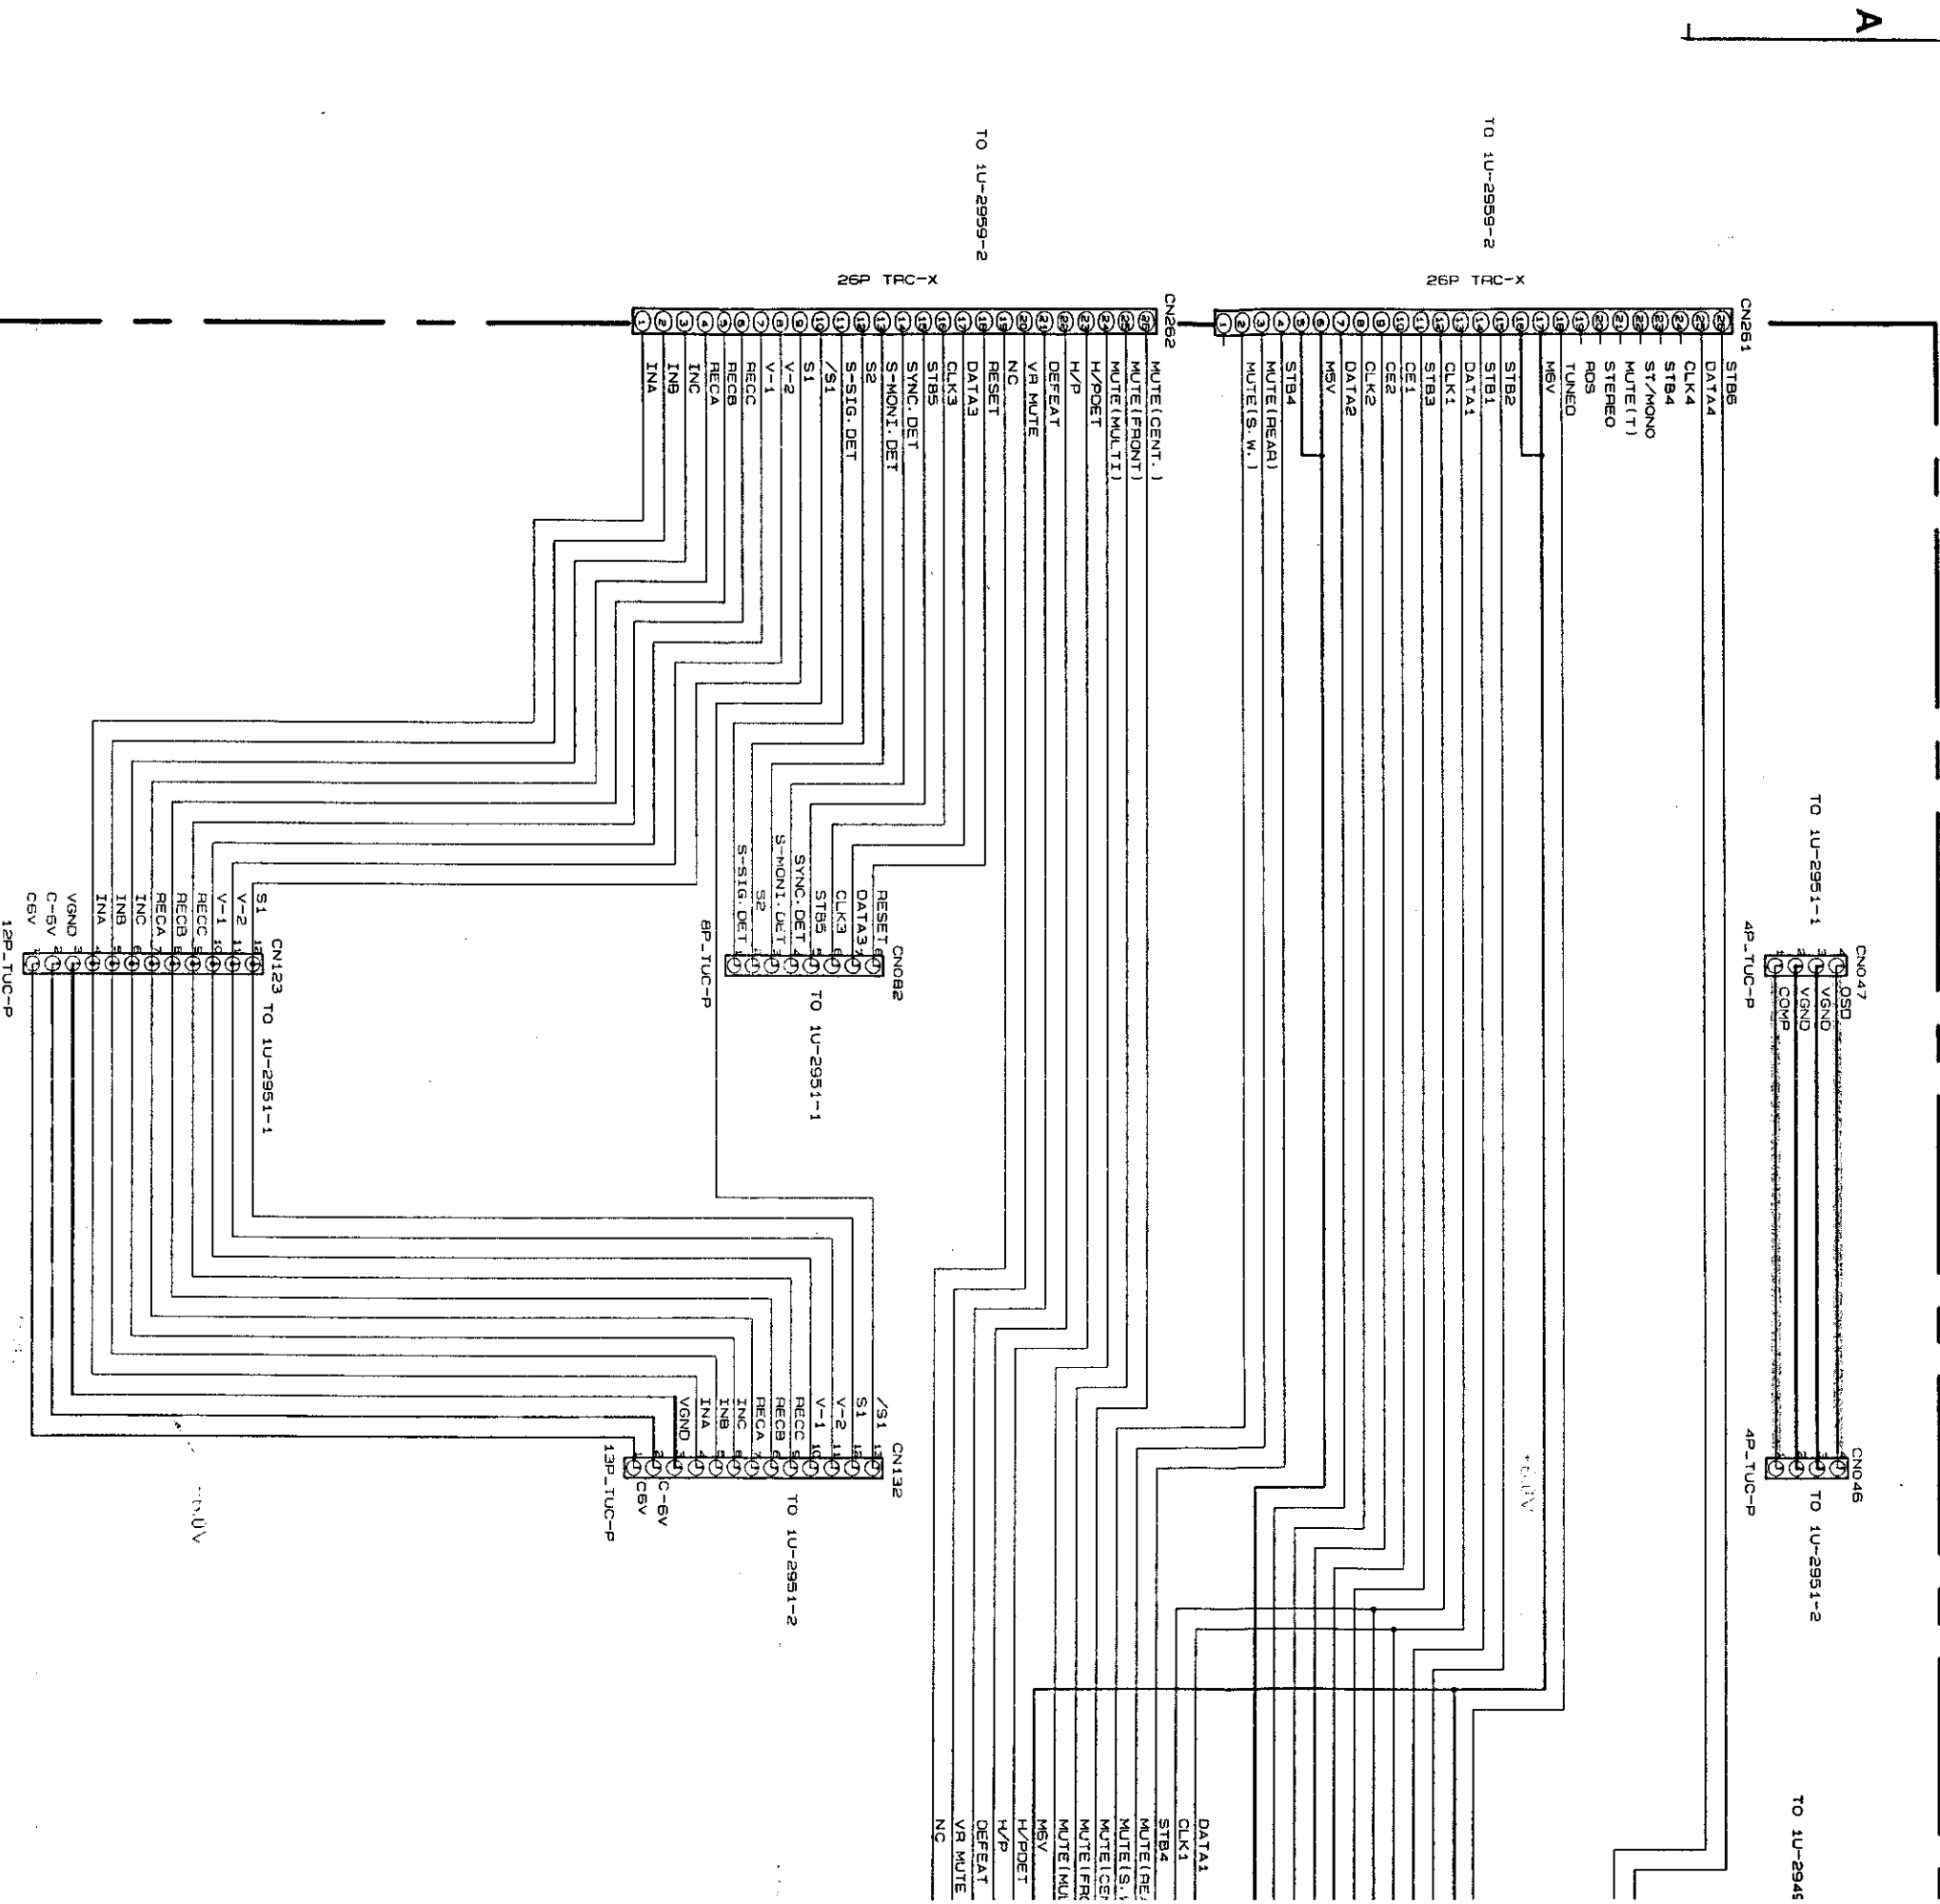


1U-2958-2
WIRING_UNIT

NOTES
ALL RESISTANCE VALUES IN OHM, k=1,000 OHM, M=1,000,000 OHM
ALL CAPACITANCE VALUES IN MICRO FARAD, P=MICRO-MICRO FARAD
EACH VOLTAGE AND CURRENT ARE MEASURED AT NO SIGNAL INPUT
CONDITION.
CIRCUIT AND PARTS ARE SUBJECT TO CHANGE WITHOUT PRIOR
NOTICE.

WARNING:
Parts marked with this symbol have critical Use ONLY replacement parts recommended by the manufacturer.
CAUTION:
Before returning the unit to the customer, make sure leakage current check or (2) a line to chassis resistance current exceeds 0.5 milliamperes, or if the resistance of the power cord is less than 240 kohms, the unit is corrected.
WARNING:
DO NOT return the unit to the customer until the problem is corrected.

A

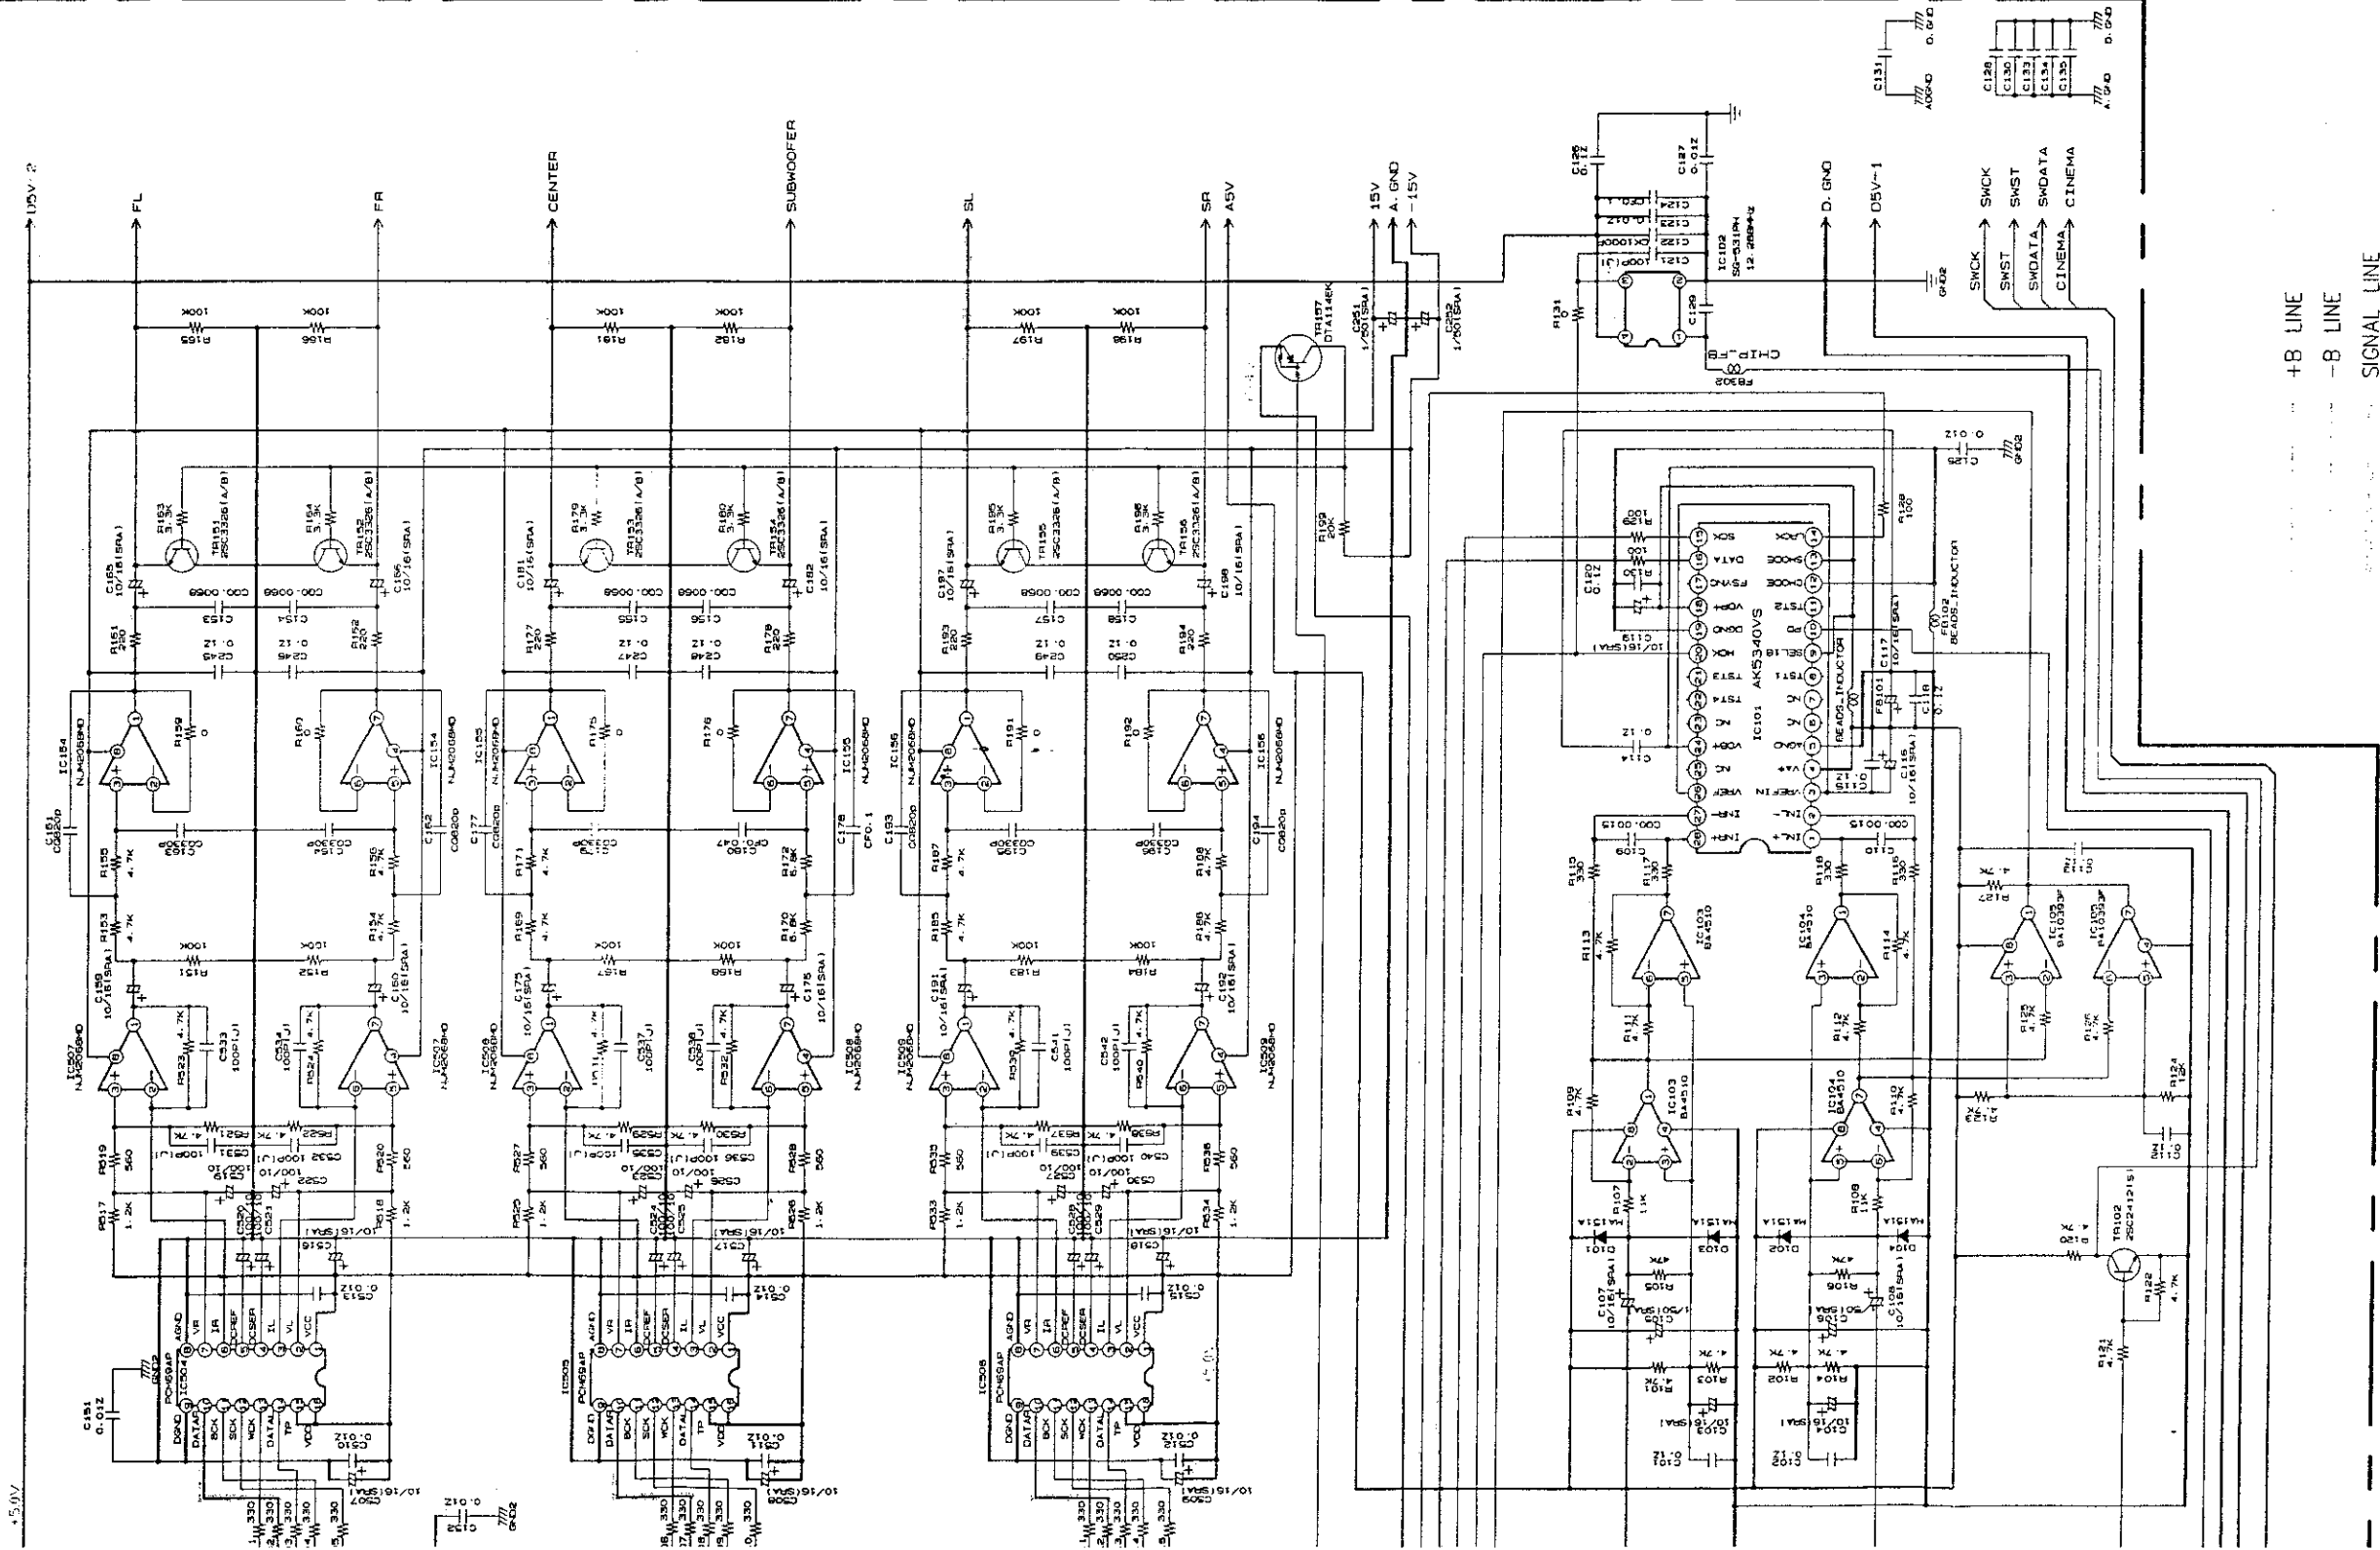

WARNING:
 Parts marked with this symbol  have critical characteristics.
 Use ONLY replacement parts recommended by the manufacturer.

CAUTION:
 Before returning the unit to the customer, make sure you make either (1) a leakage current check or (2) a line to chassis resistance check. If the leakage current exceeds 0.5 milliamperes, or if the resistance from chassis to either side of the power cord is less than 240 kohms, the unit is defective.

WARNING:
 DO NOT return the unit to the customer until the problem is located and corrected.

STANCE VALUES IN OHM. K=1,000 OHM. M=1,000,000 OHM.
 CAPACITANCE VALUES IN MICRO FARAD. P=PICTO-MICRO FARAD
 TAG AND CURRENT ARE MEASURED AT NO SIGNAL INPUT

AND PARTS ARE SUBJECT TO CHANGE WITHOUT PRIOR

+B LINE
 -B LINE
 SIGNAL LINE

SCHEMATIC DIAGRAM (1U-2959-1 DSP. P.W.B. UNIT-1/2)


1

2

3

4

5

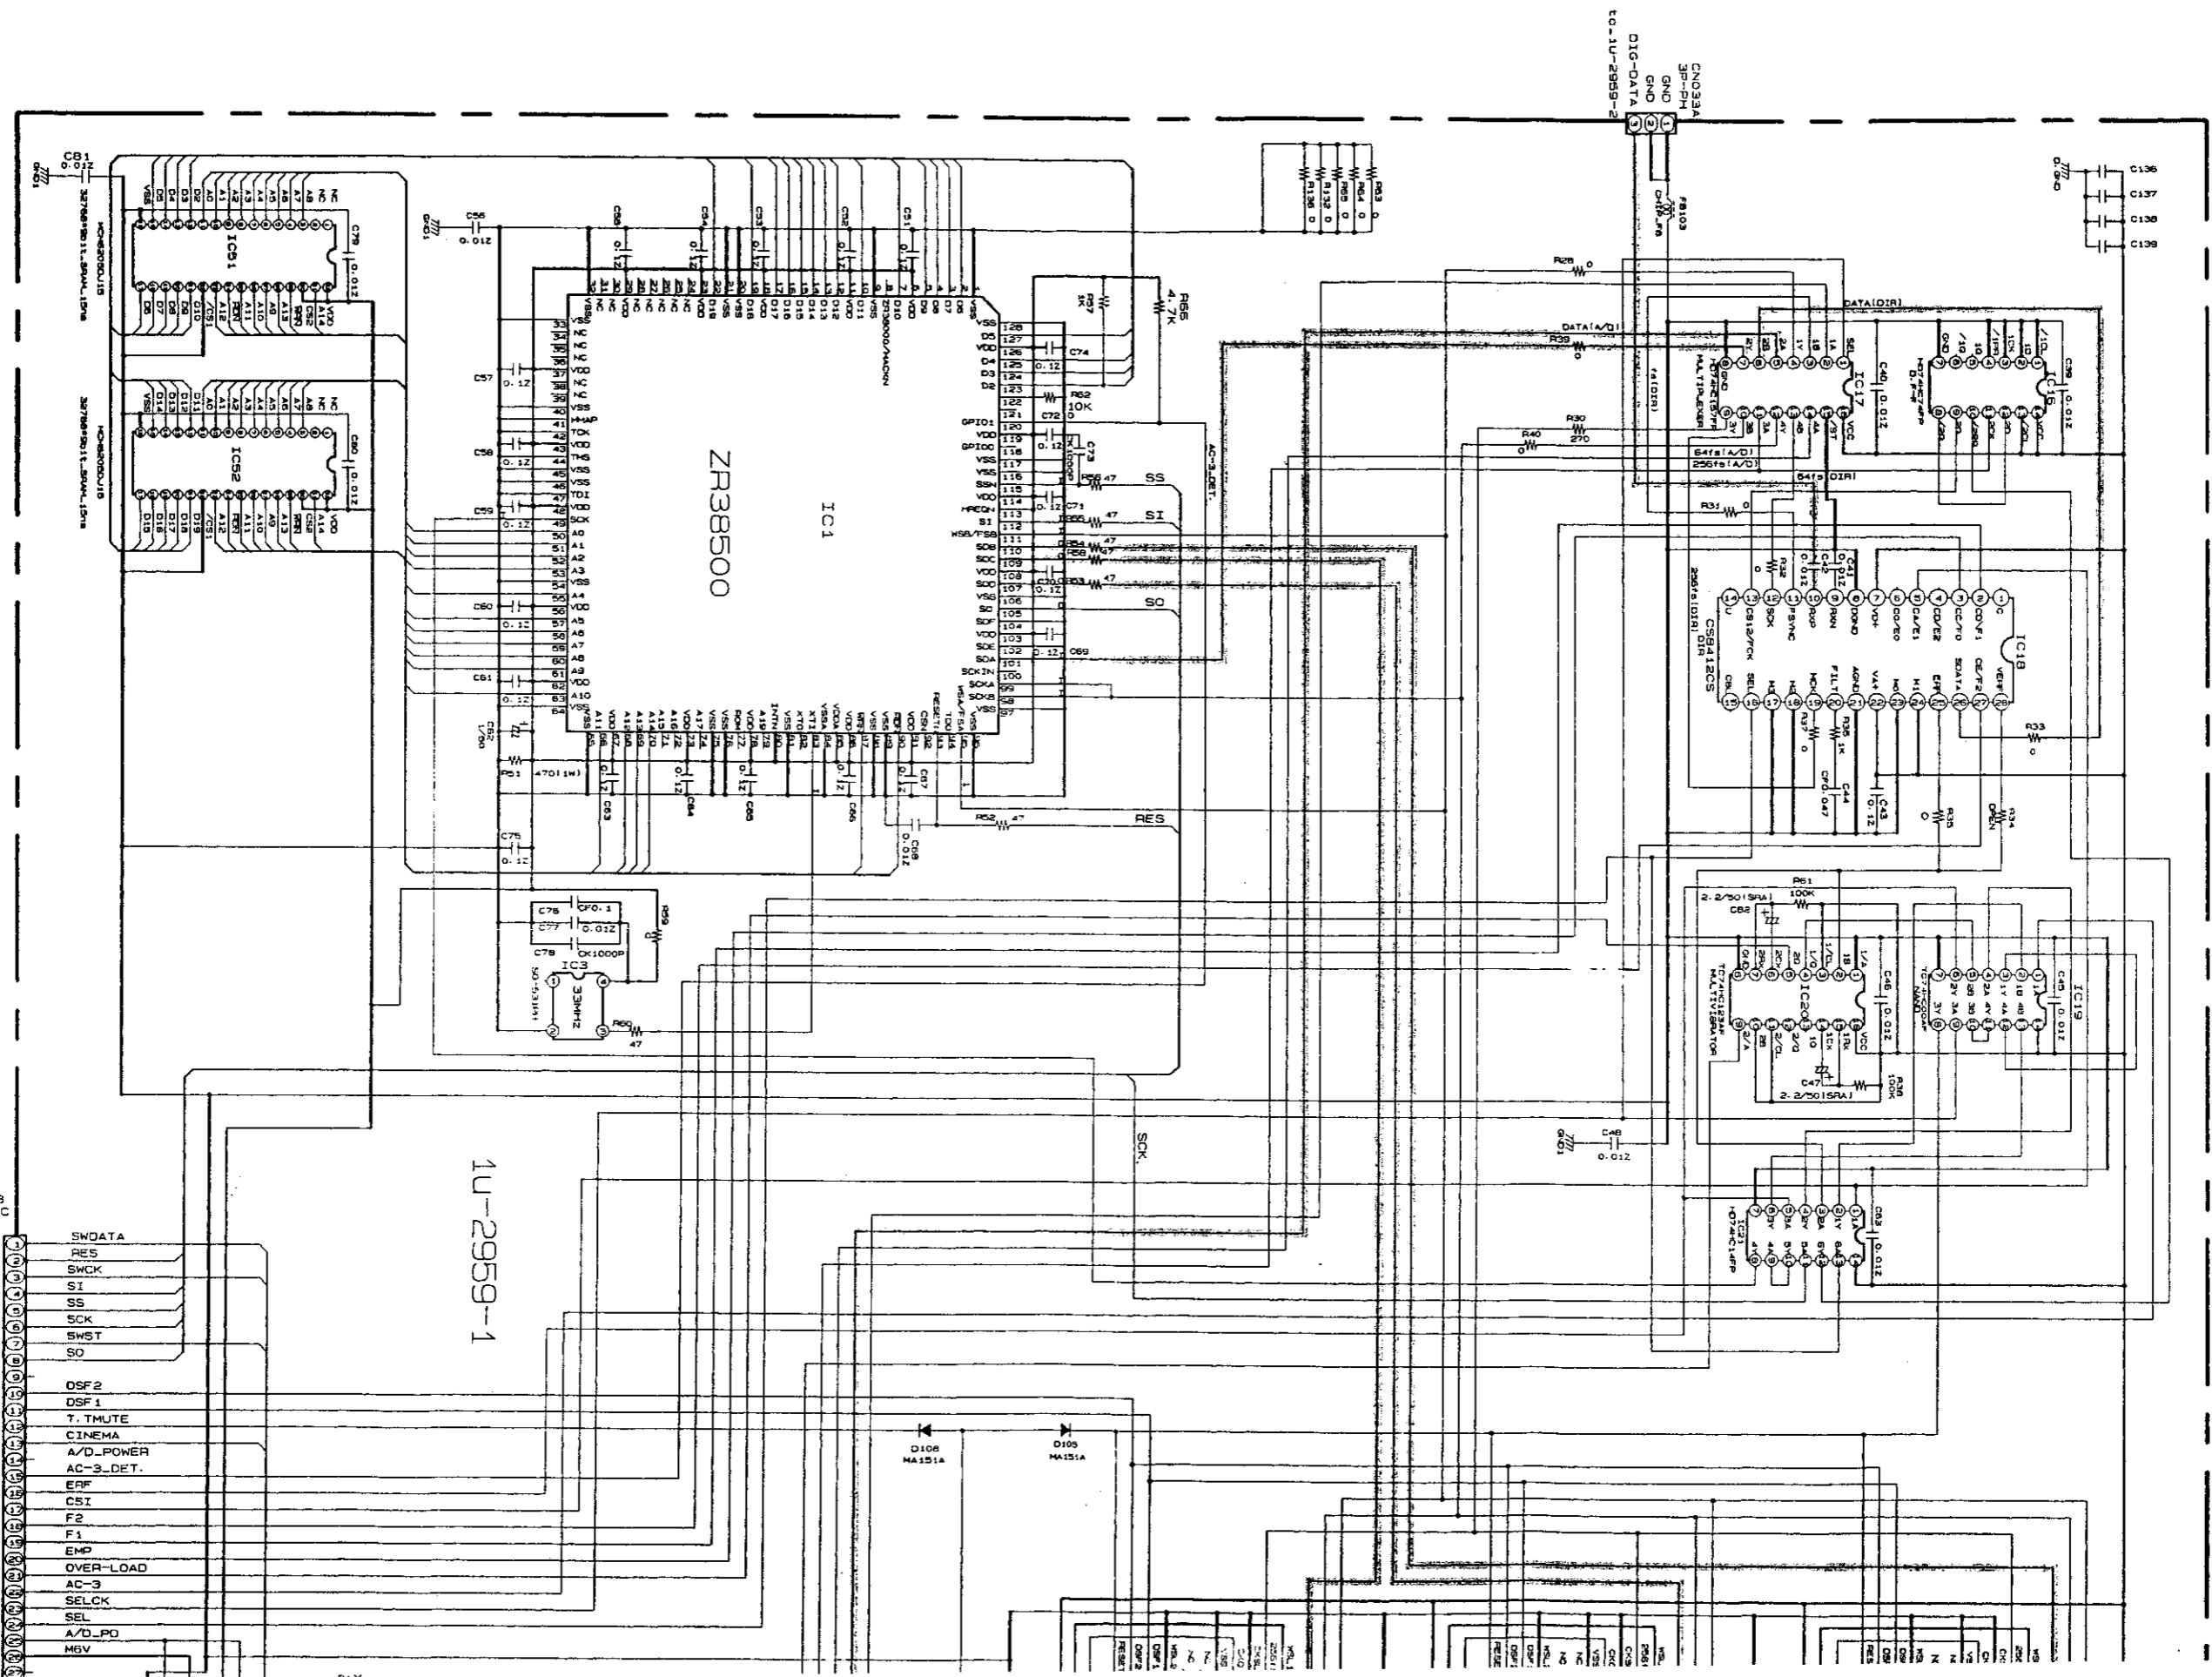

H

G

F

E

D

C

B

A


CN271B
27P-FFC

1U-2959-1

10-1U-2959-2


- SWDATA
- RES
- SWCK
- SI
- SS
- SCK
- SWST
- SO
- DSF2
- DSF1
- T. TMUTE
- CINEMA
- A/D_POWER
- AC-3_DET.
- ERF
- CSI
- F2
- F1
- EMP
- OVER-LOAD
- AC-3
- SELCK
- SEL
- A/D_PO
- MGV

7 8 9 10 11 A B C D E F G H

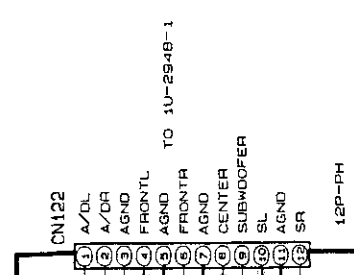

→ CINEMA


NOTES
 ALL RESISTANCE VALUES IN OHM. K=1,000 OHM.
 M=1,000,000 OHM
 ALL CAPACITANCE VALUES IN MICRO FARAD
 P=MICRO-MICRO FARAD
 EACH VOLTAGE AND CURRENT ARE MEASURED AT
 NO SIGNAL INPUT CONDITION.
 CIRCUIT AND PARTS ARE SUBJECT TO CHANGE
 WITHOUT PRIOR NOTICE.

WARNING:
 Parts marked with this symbol  have critical characteristics. Use ONLY replacement parts recommended by the manufacturer.

CAUTION:
 Before returning the unit to the customer, make sure you make either (1) a leakage current check or (2) a line to chassis resistance check. If the leakage current exceeds 0.5 milliamps, or if the resistance from chassis to either side of the power cord is less than 240 kohms, the unit is defective.

WARNING:
 DO NOT return the unit to the customer until the problem is located and corrected.

1U-2959-1

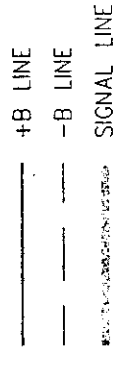


→ TO CHASS.

SCHEMATIC DIAGRAM (1U-2959-1 DSP. P.W.B. UNIT-2/2)

1 2 3 4 5

A

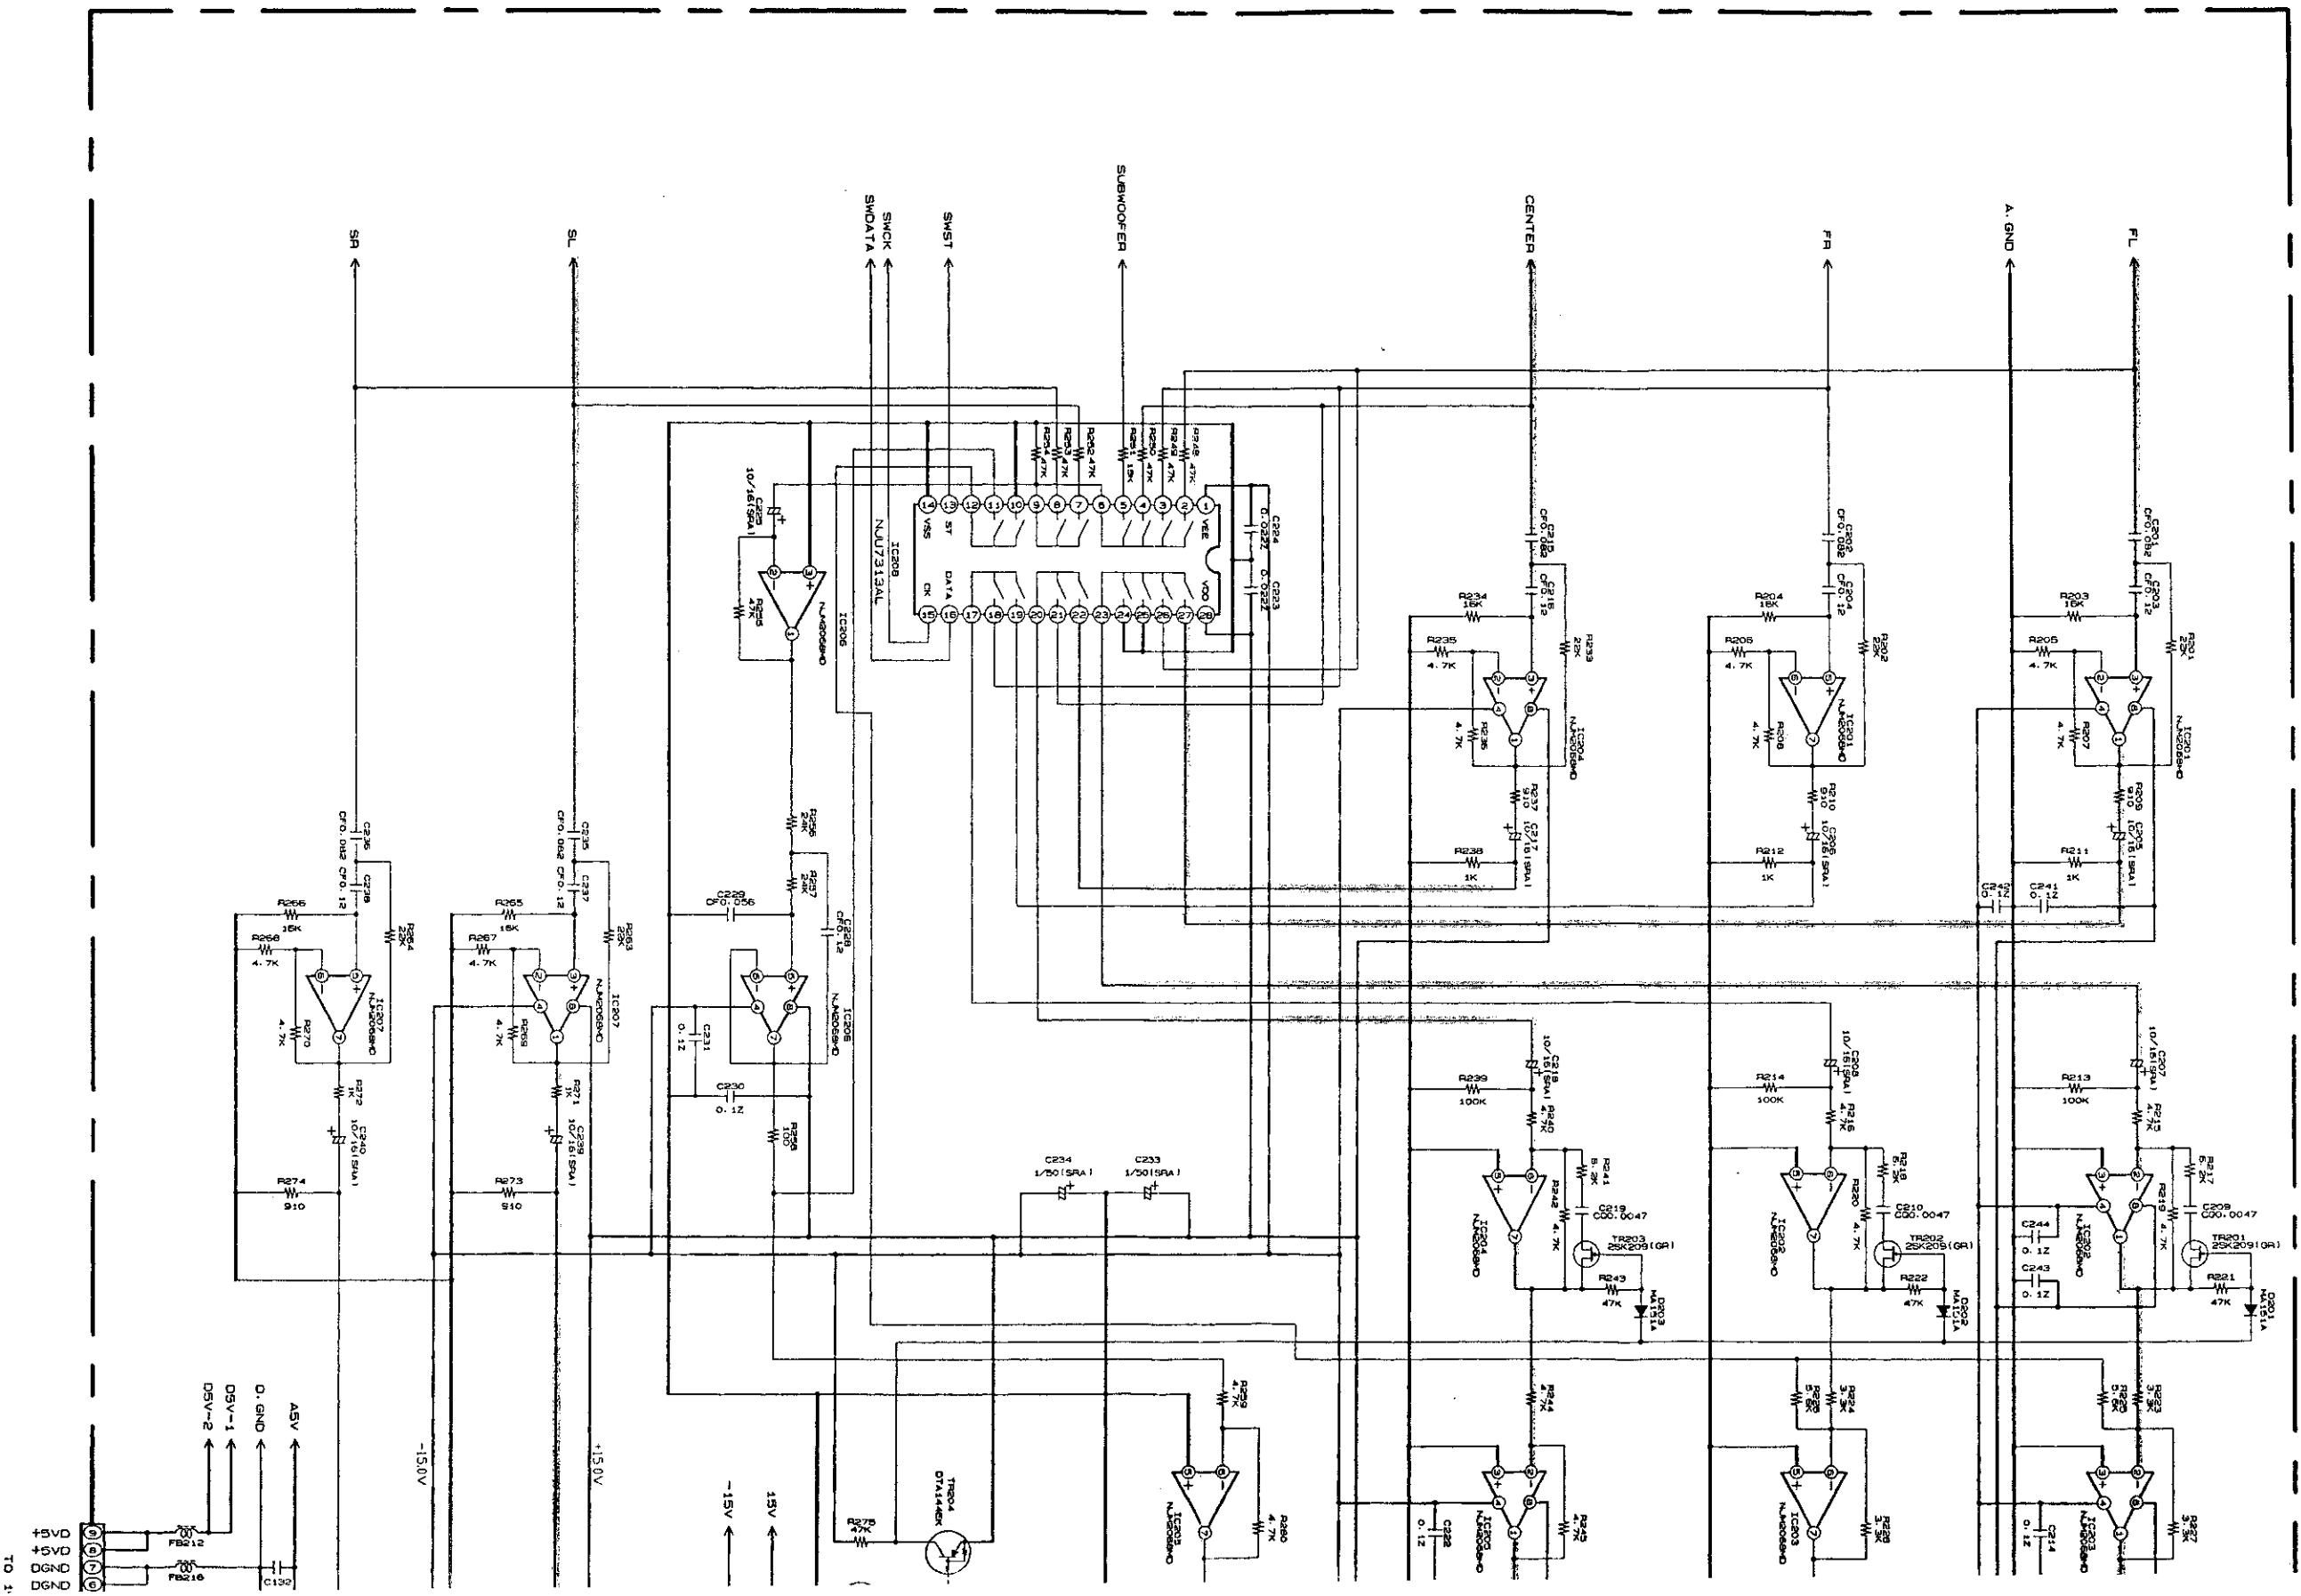

TO 1

7


8

9


10

11

A

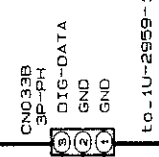


Lo-1U-2959-1

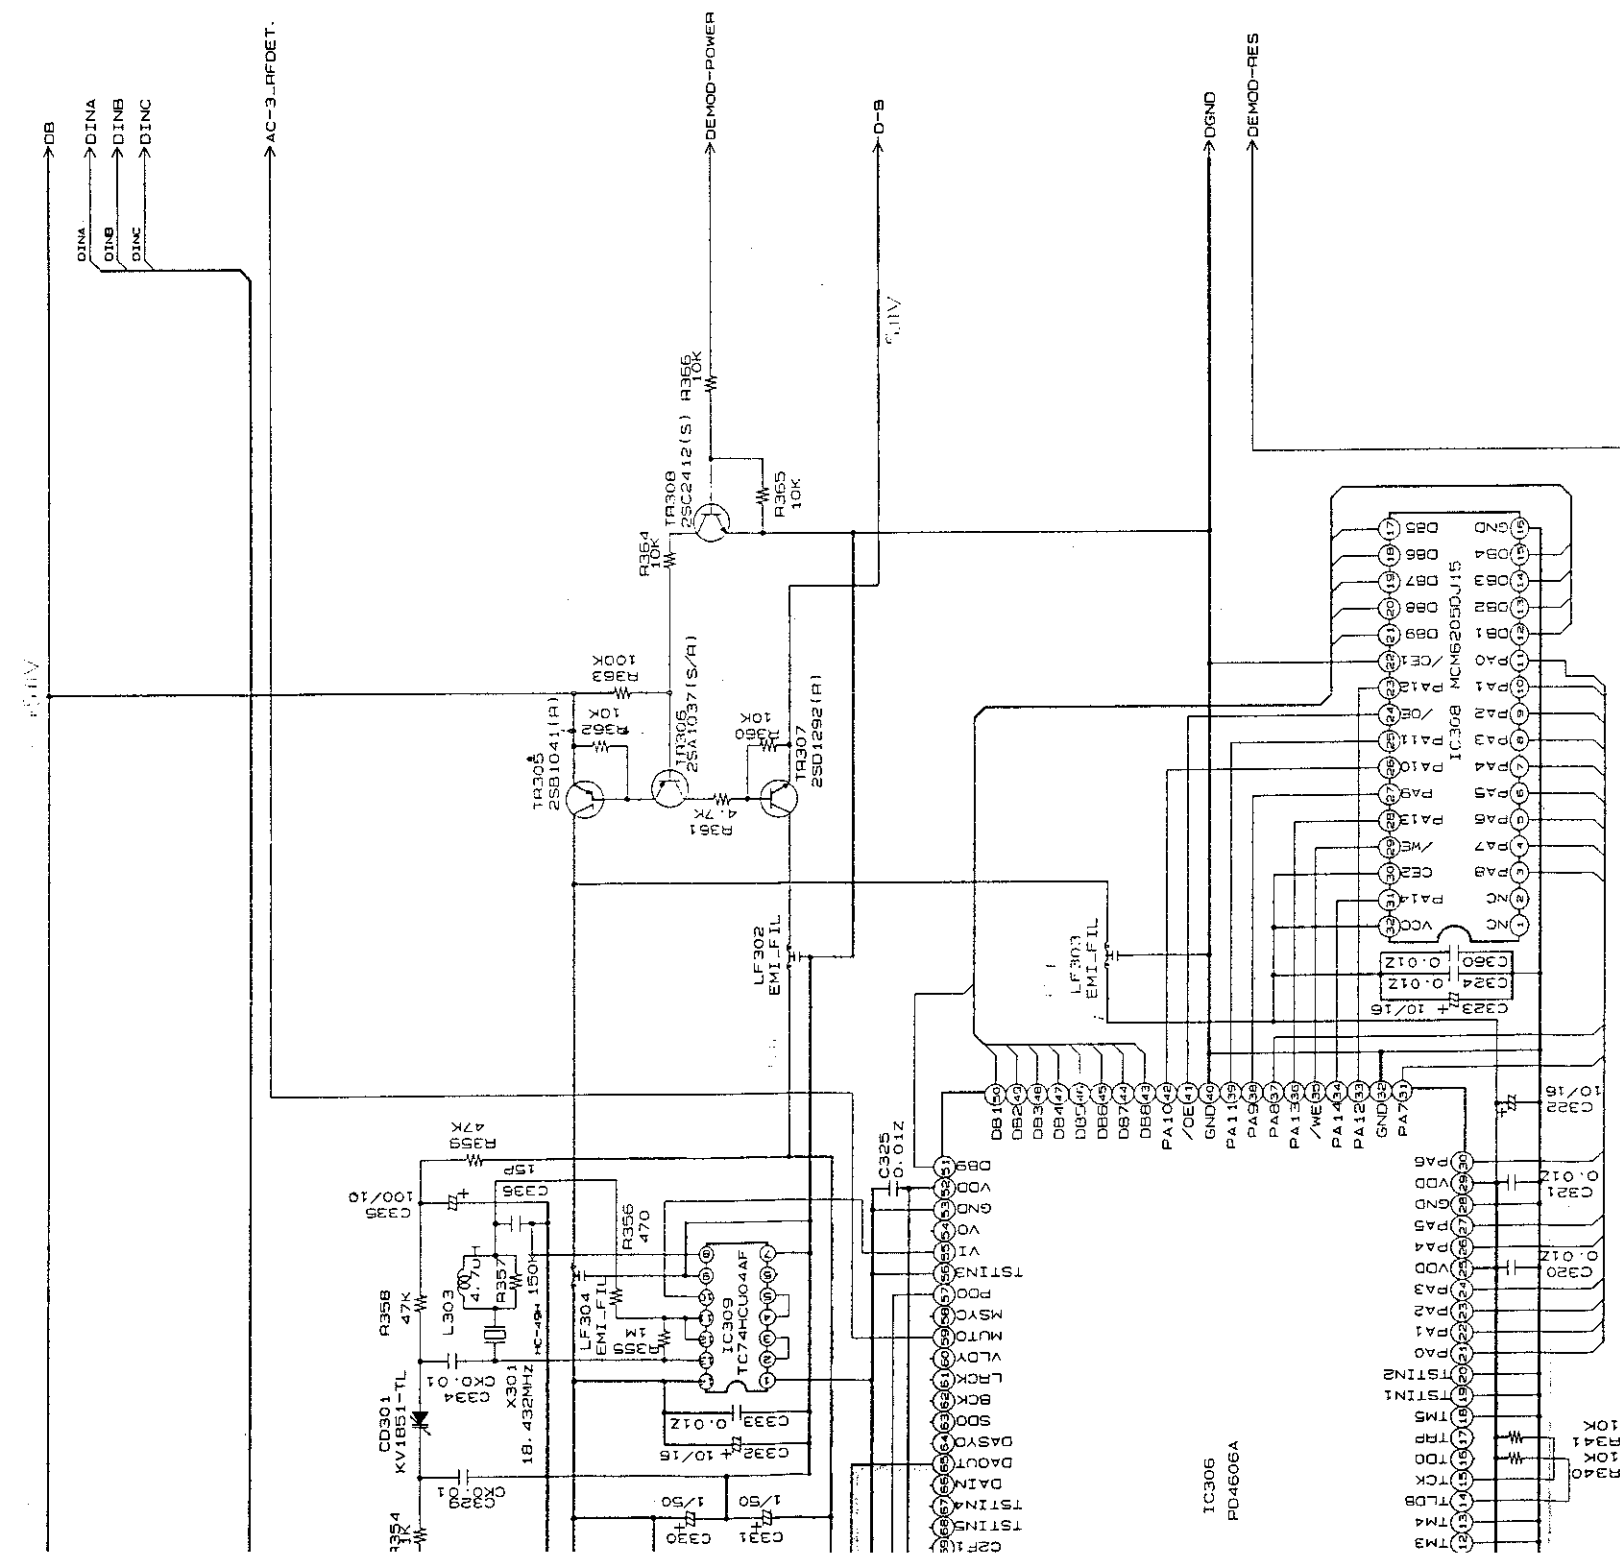


SCHEMATIC DIAGRAM (1U-2959-2 MICON P.W.B. UNIT-1/2)

1 2 3 4 5

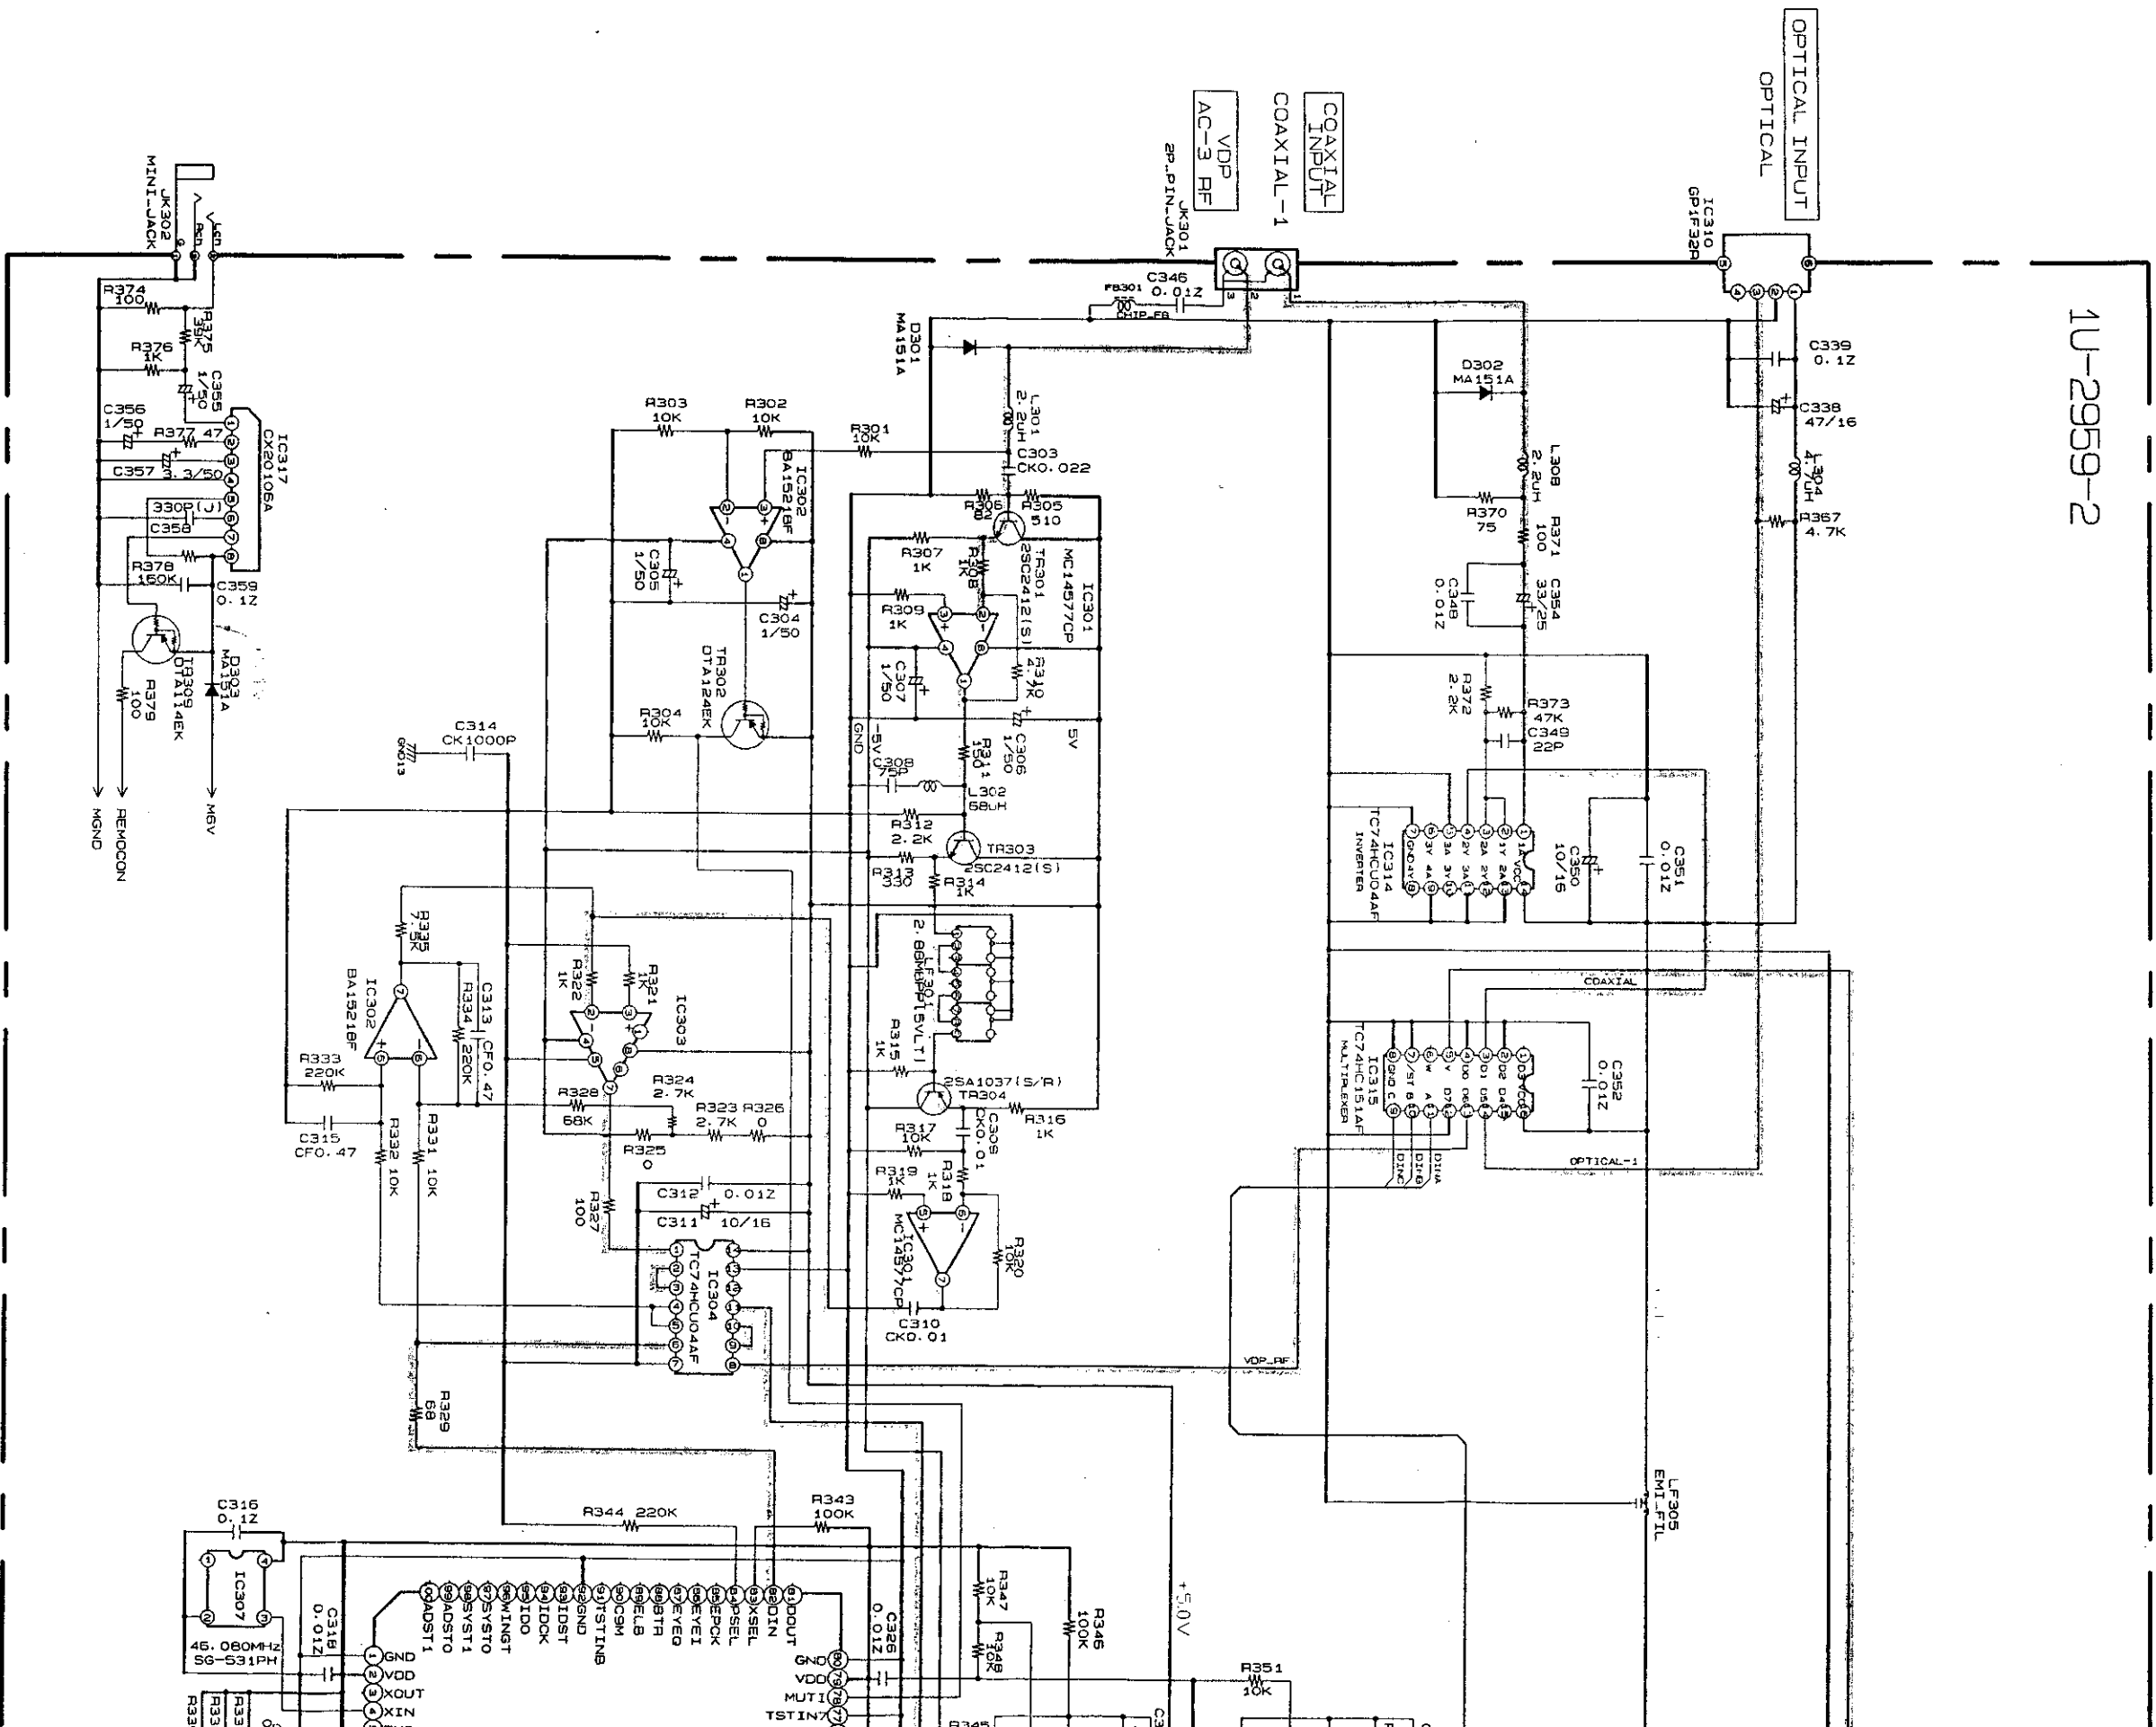


1U-2959-2

NOTES
 ALL RESISTANCE VALUES IN OHM, K=1,000 OHM, M=1,000,000 OHM
 ALL CAPACITANCE VALUES IN MICRO FARAD. P=MICRO-MICRO FARAD
 EACH VOLTAGE AND CURRENT ARE MEASURED AT NO SIGNAL INPUT
 CONDITION.
 CIRCUIT AND PARTS ARE SUBJECT TO CHANGE WITHOUT PRIOR
 NOTICE.

WARNING:
 Parts marked with this symbol  have critical characteristics.
 Use ONLY replacement parts recommended by the manufacturer.

CAUTION:
 Before returning the unit to the customer, make sure you make either (1) a leakage current check or (2) a line to chassis resistance check. If the leakage current exceeds 0.5 milliamps, or if the resistance from chassis to either side of the power cord is less than 240 kohms, the unit is defective.

WARNING:
 DO NOT return the unit to the customer until the problem is located and corrected.

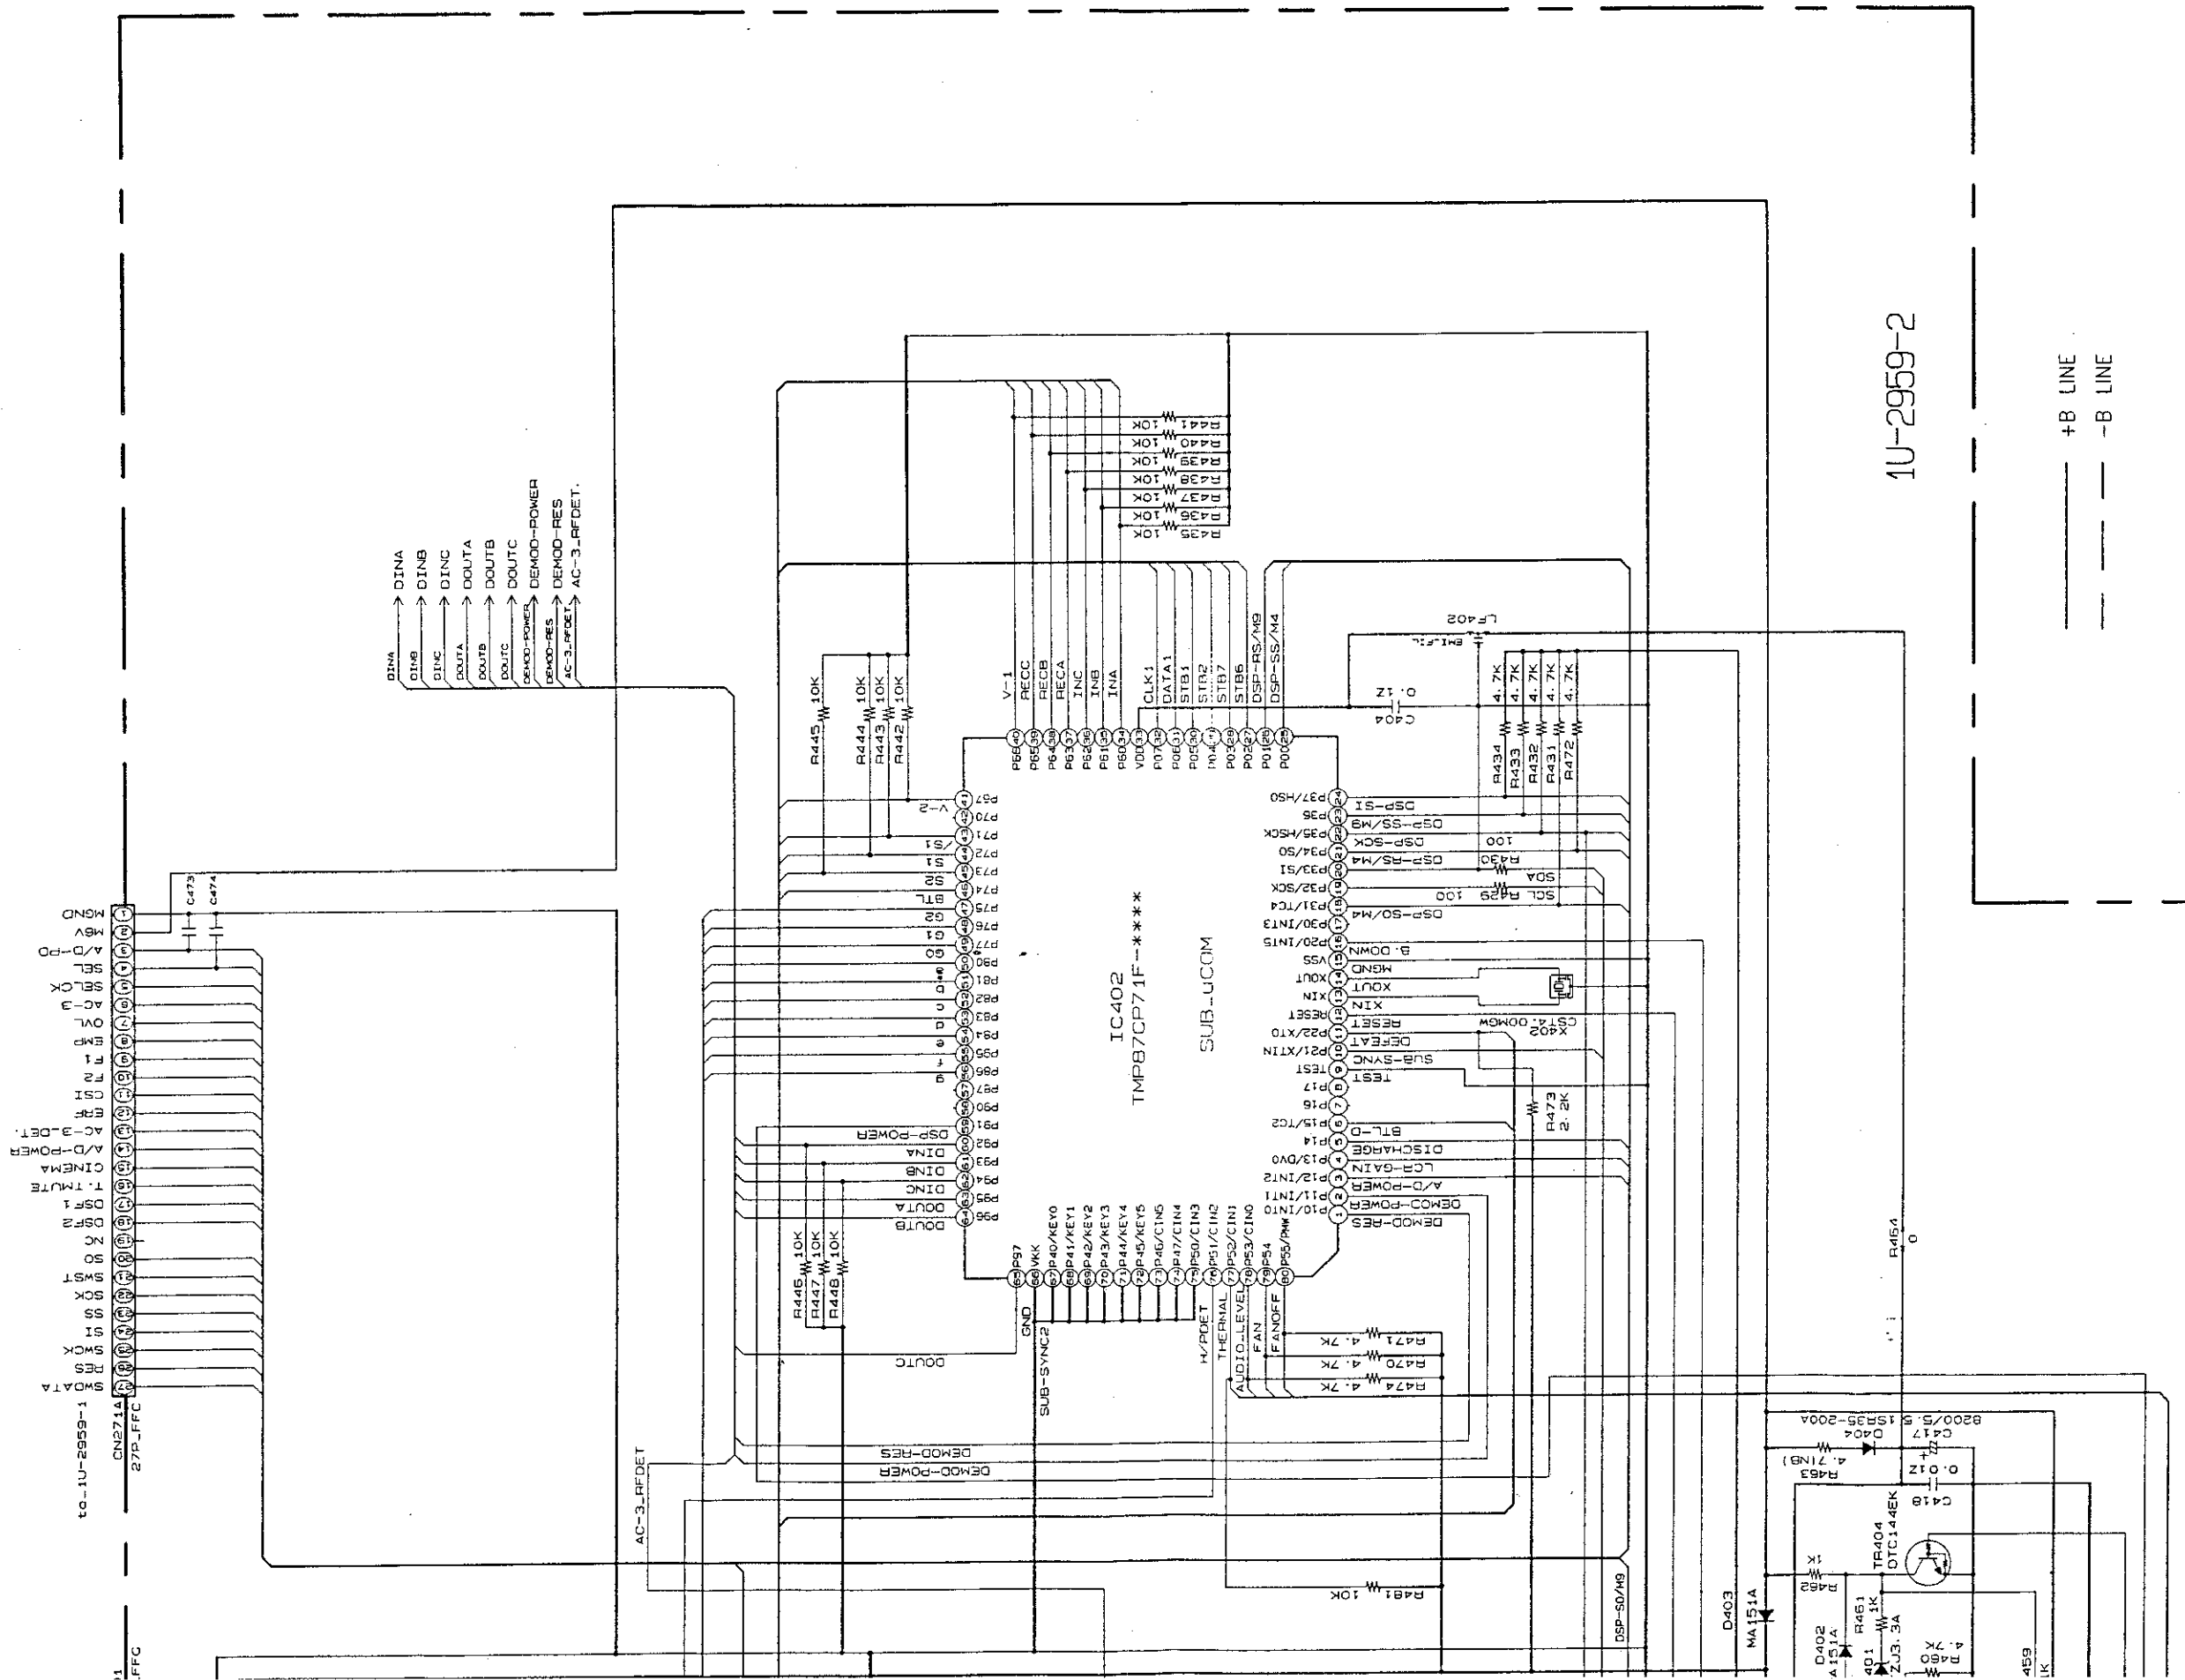

1U-2959-2




WARNING:
 Parts marked with this symbol have critical characteristics.
 Use ONLY replacement parts recommended by the manufacturer.


CAUTION:
 Before returning the unit to the customer, make sure you make either (1) a leakage current check or (2) a line to chassis resistance check. If the leakage current exceeds 0.5 milliamps, or if the resistance from chassis to either side of the power cord is less than 240 kohms, the unit is defective.

WARNING:
 DO NOT return the unit to the customer until the problem is located and corrected.

NOTES
 ALL RESISTANCE VALUES IN OHMS. K=1,000 OHMS. M=1,000,000 OHMS
 ALL CAPACITANCE VALUES IN MICRO FARAD. P=MICRO-MICRO FARAD
 EACH VOLTAGE AND CURRENT ARE MEASURED AT NO SIGNAL INPUT CONDITION.
 CIRCUIT AND PARTS ARE SUBJECT TO CHANGE WITHOUT PRIOR NOTICE.

A

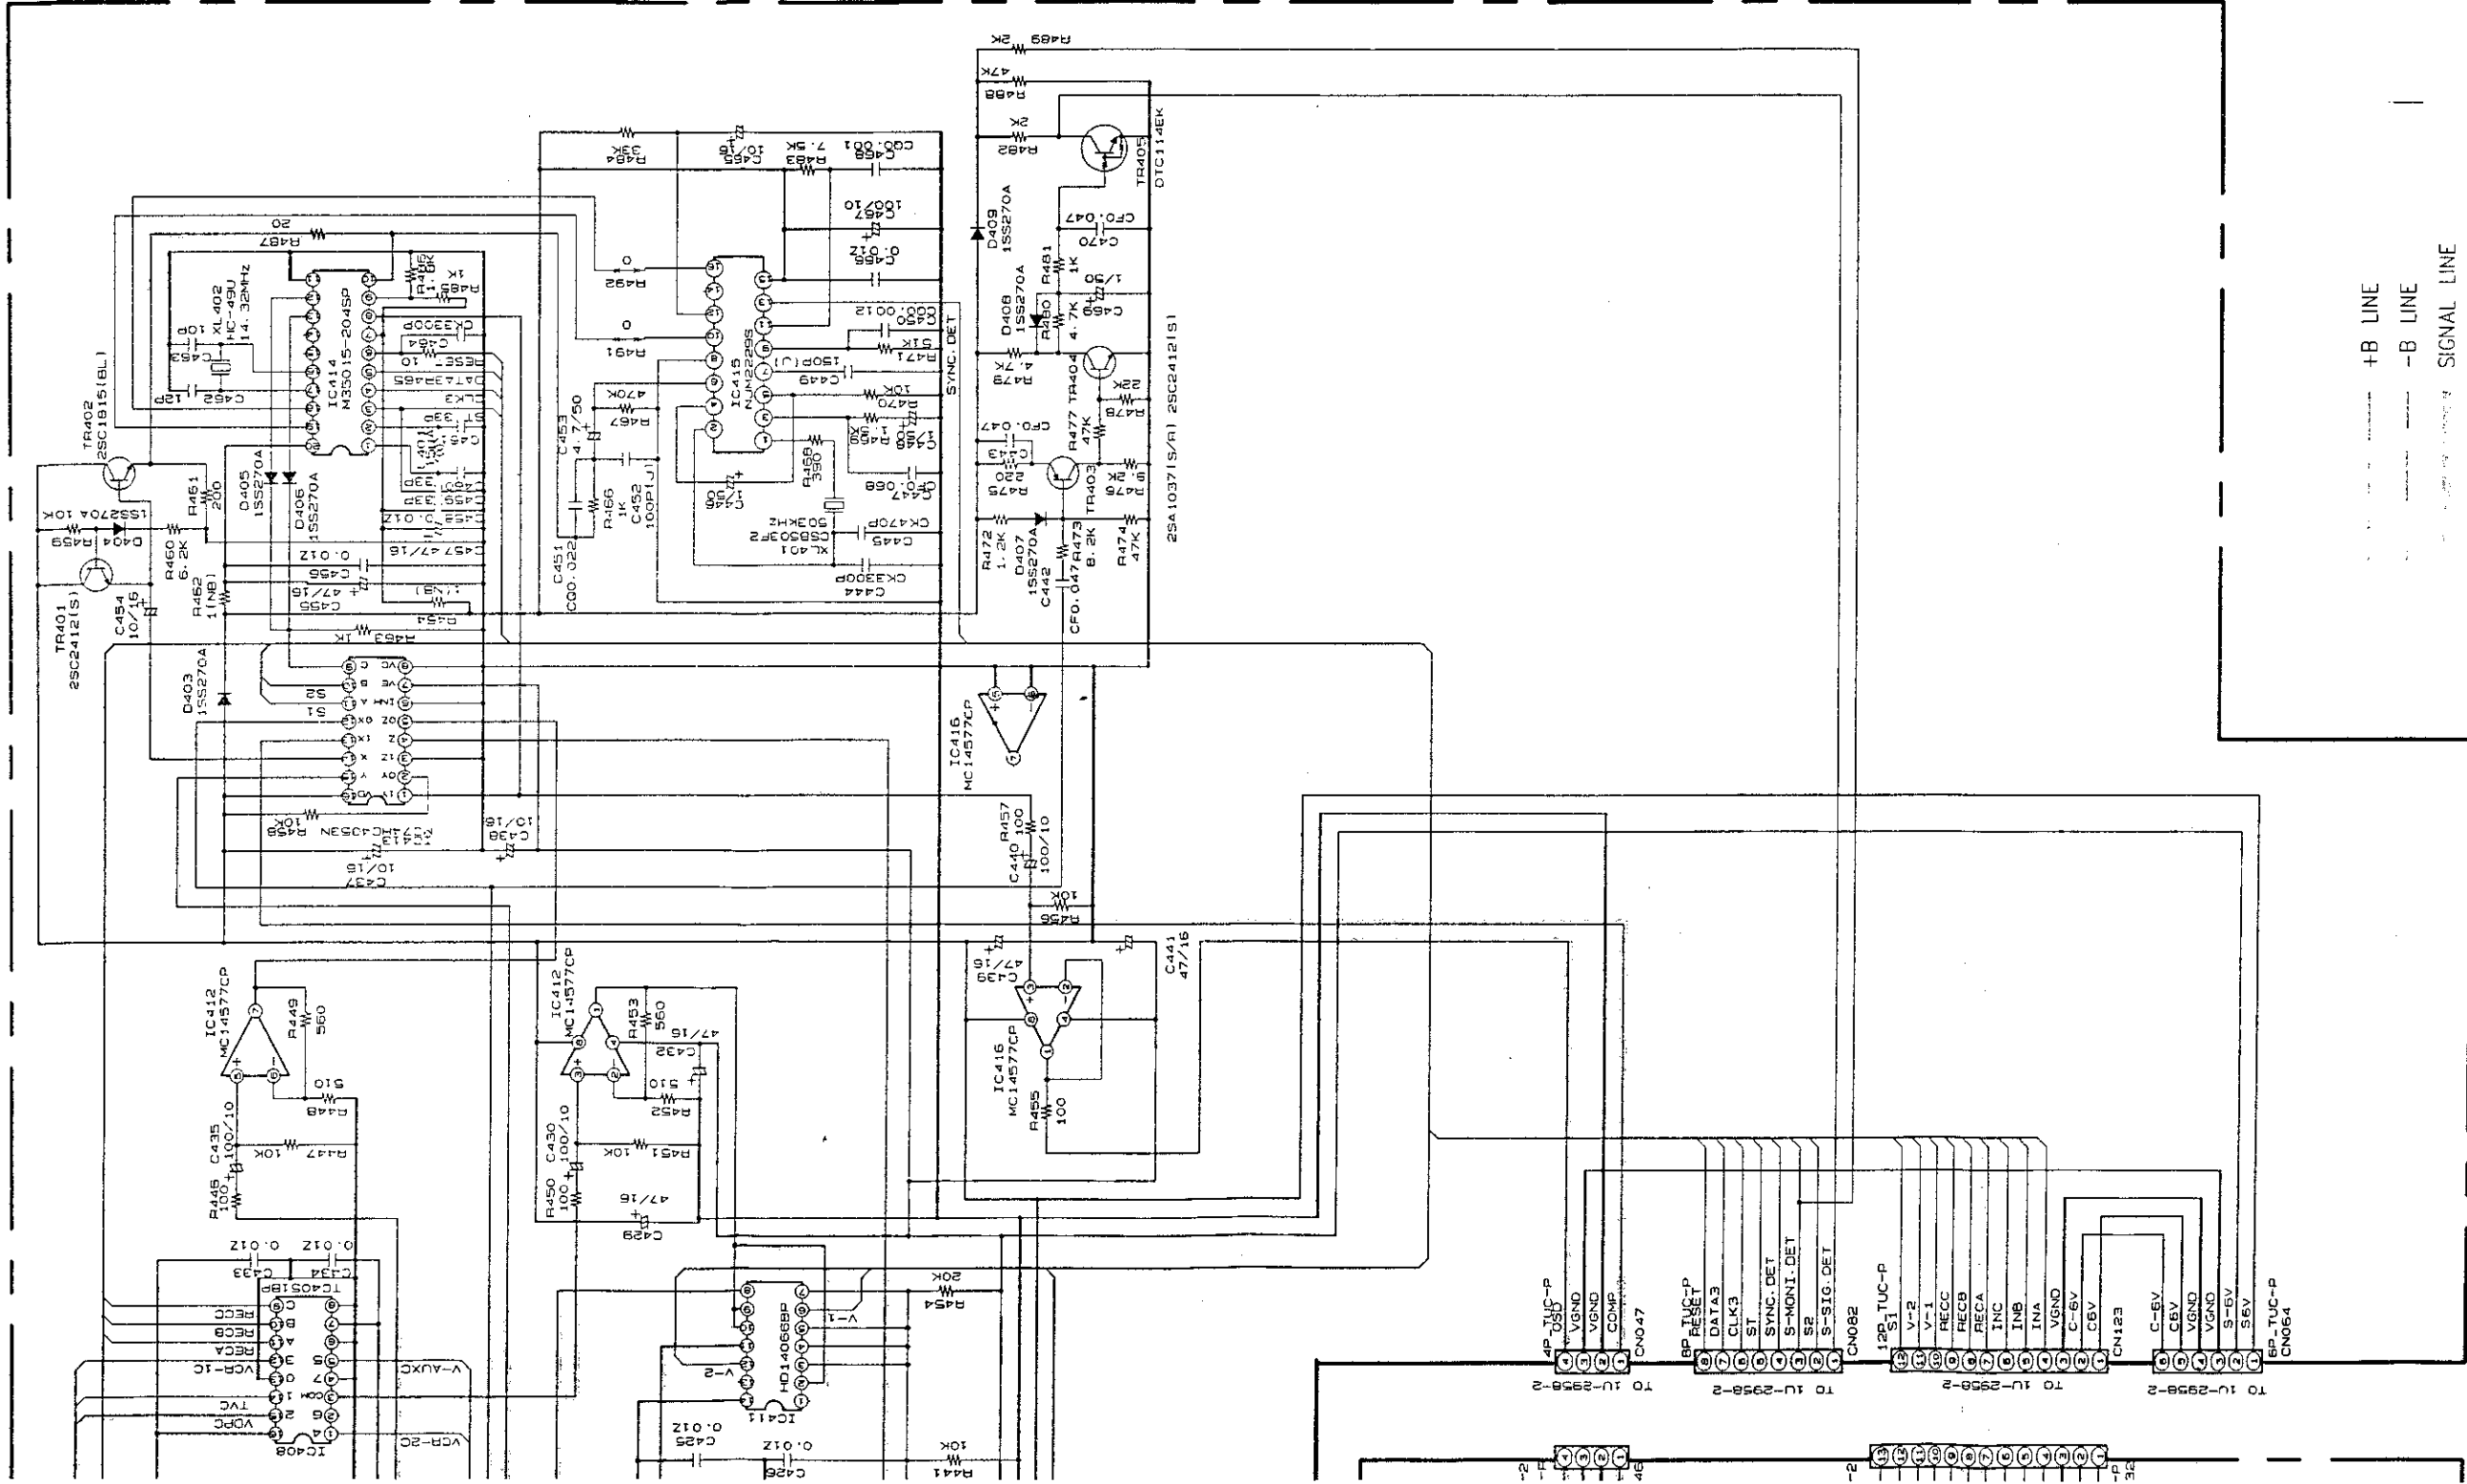

WARNING: Parts marked with this symbol  have critical characteristics. Use ONLY replacement parts recommended by the manufacturer.

CAUTION: Before returning the unit to the customer, make sure you make either (1) a leakage current check (2) a line-to-chassis resistance check. If the leakage current is 0.5 mA or more, or the resistance is less than 200 kilohms, the unit is defective.


WARNING: DO NOT return the unit to the customer until the problem is located and corrected.

NOTES:
 ALL RESISTANCE VALUES IN OHM, K=1,000 OHM, M=1,000,000 OHM
 ALL CAPACITANCE VALUES IN MICRO FARAD, P=MICRO MICRO FARAD
 EACH VOLTAGE AND CURRENT ARE MEASURED AT NO SIGNAL INPUT
 CONDITION.
 CIRCUIT AND PARTS ARE SUBJECT TO CHANGE WITHOUT PRIOR NOTICE.


--- +B LINE
 - - - -B LINE
 SIGNAL LINE

SCHEMATIC DIAGRAM (1U-2951-1, 2 S-VIDEO & C-VIDEO P.W.B. UNIT)

1 2 3 4 5

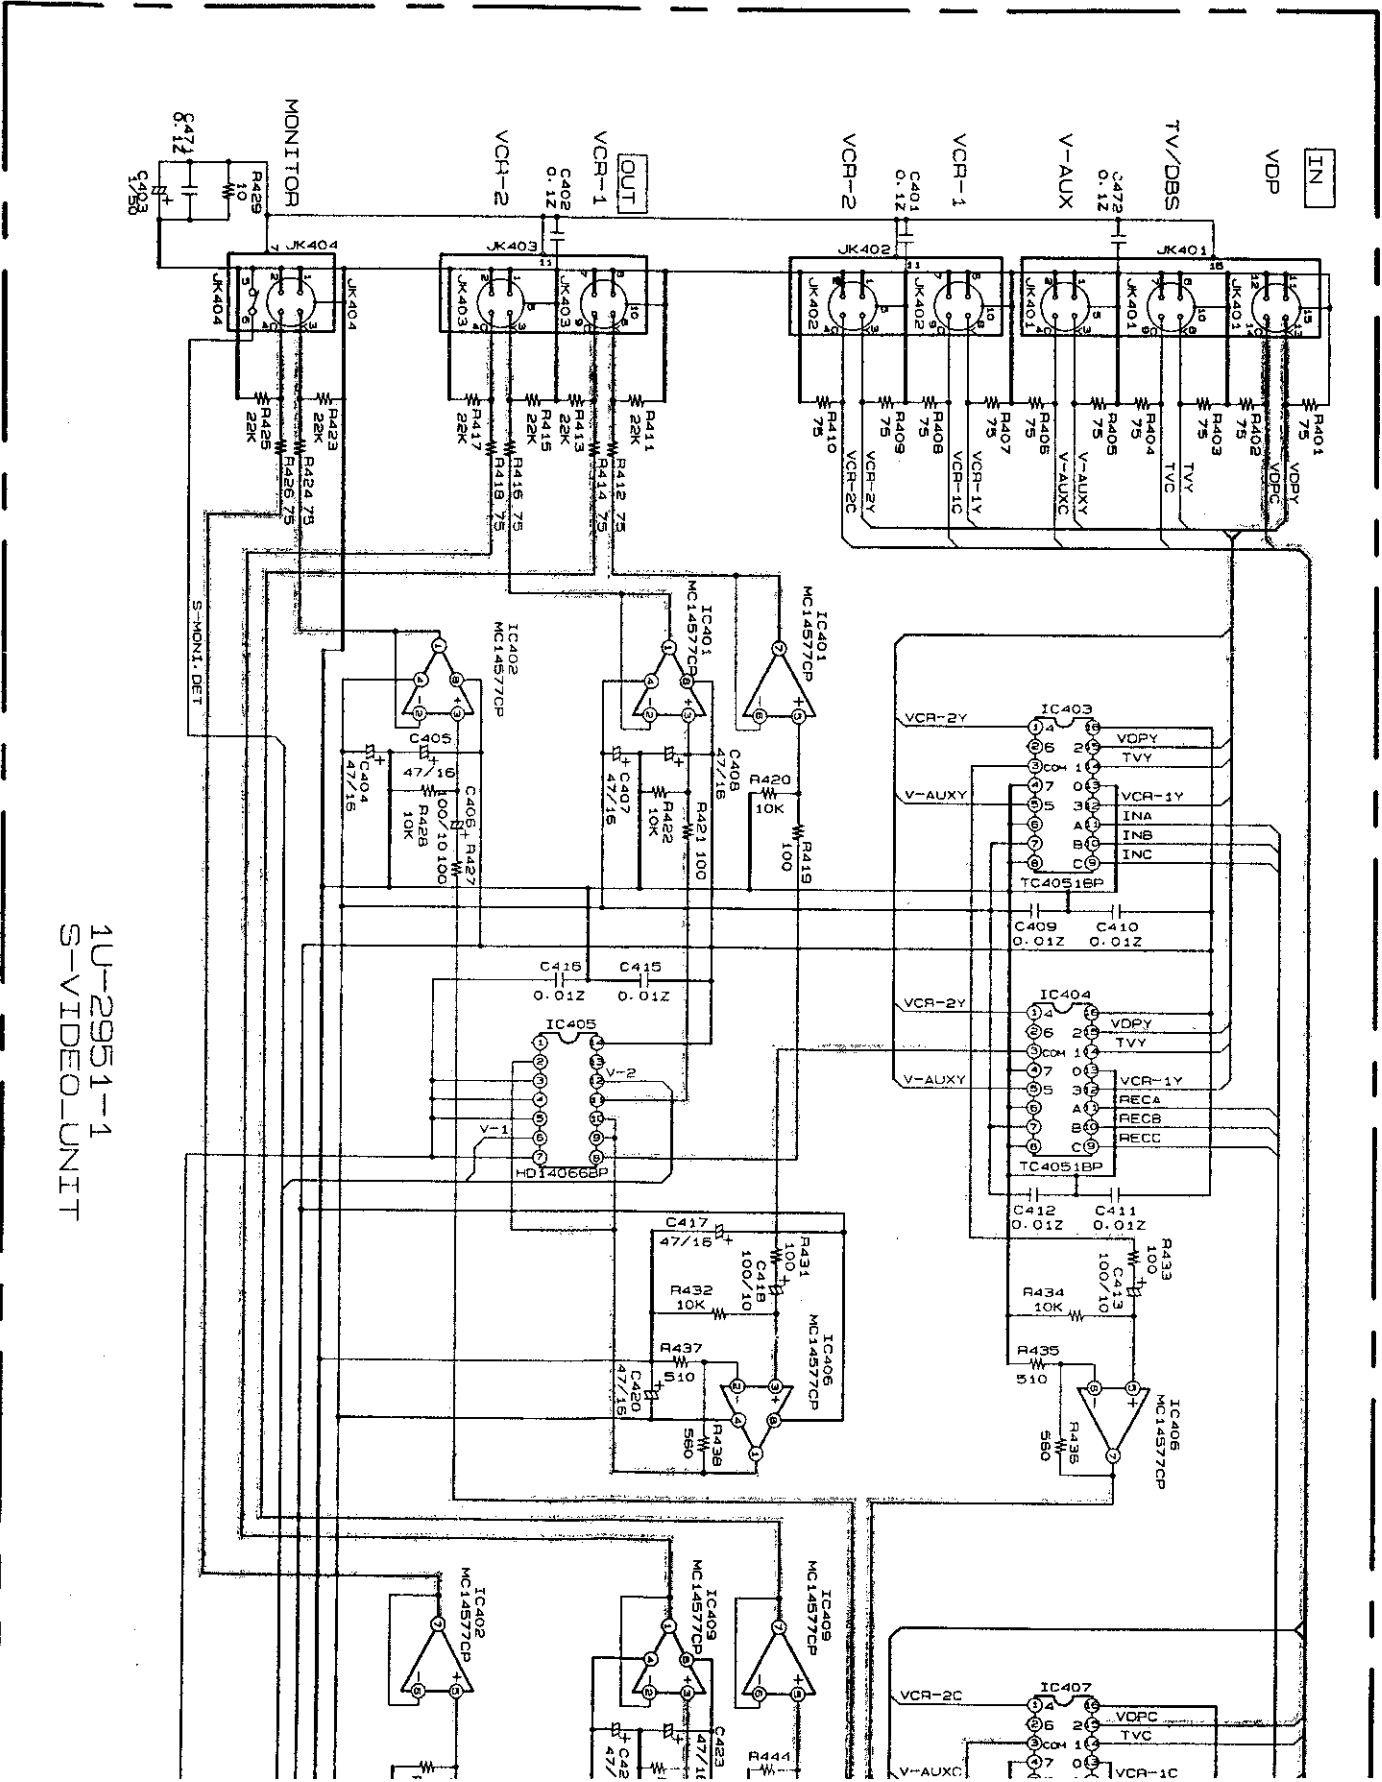

1U-2951-1
S-VIDEO UNIT


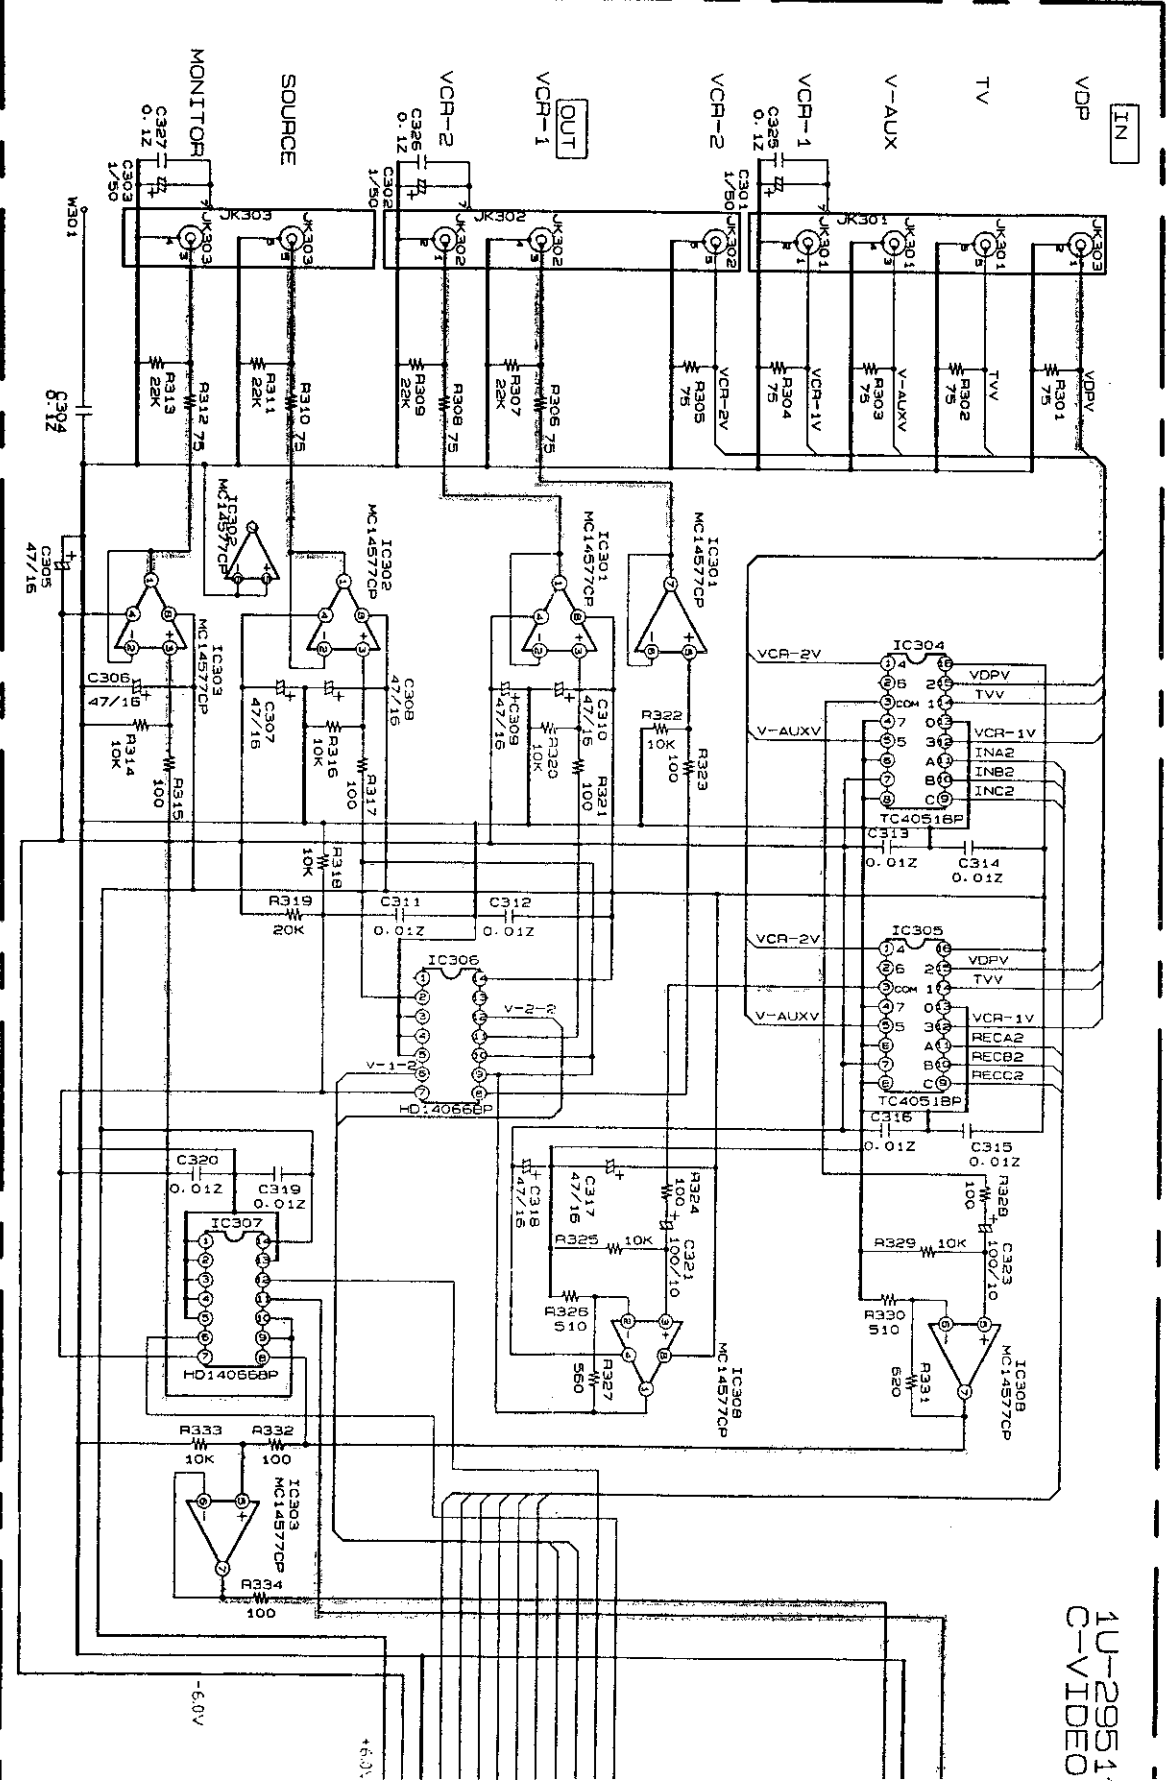


1U-2951-1
C-VIDEO

7 8 9 10 11


A B C D E F G H

0 1U-2951-1
 CN053
 EP-KR

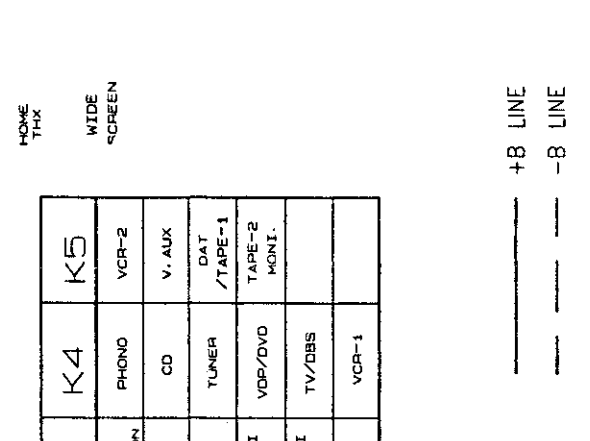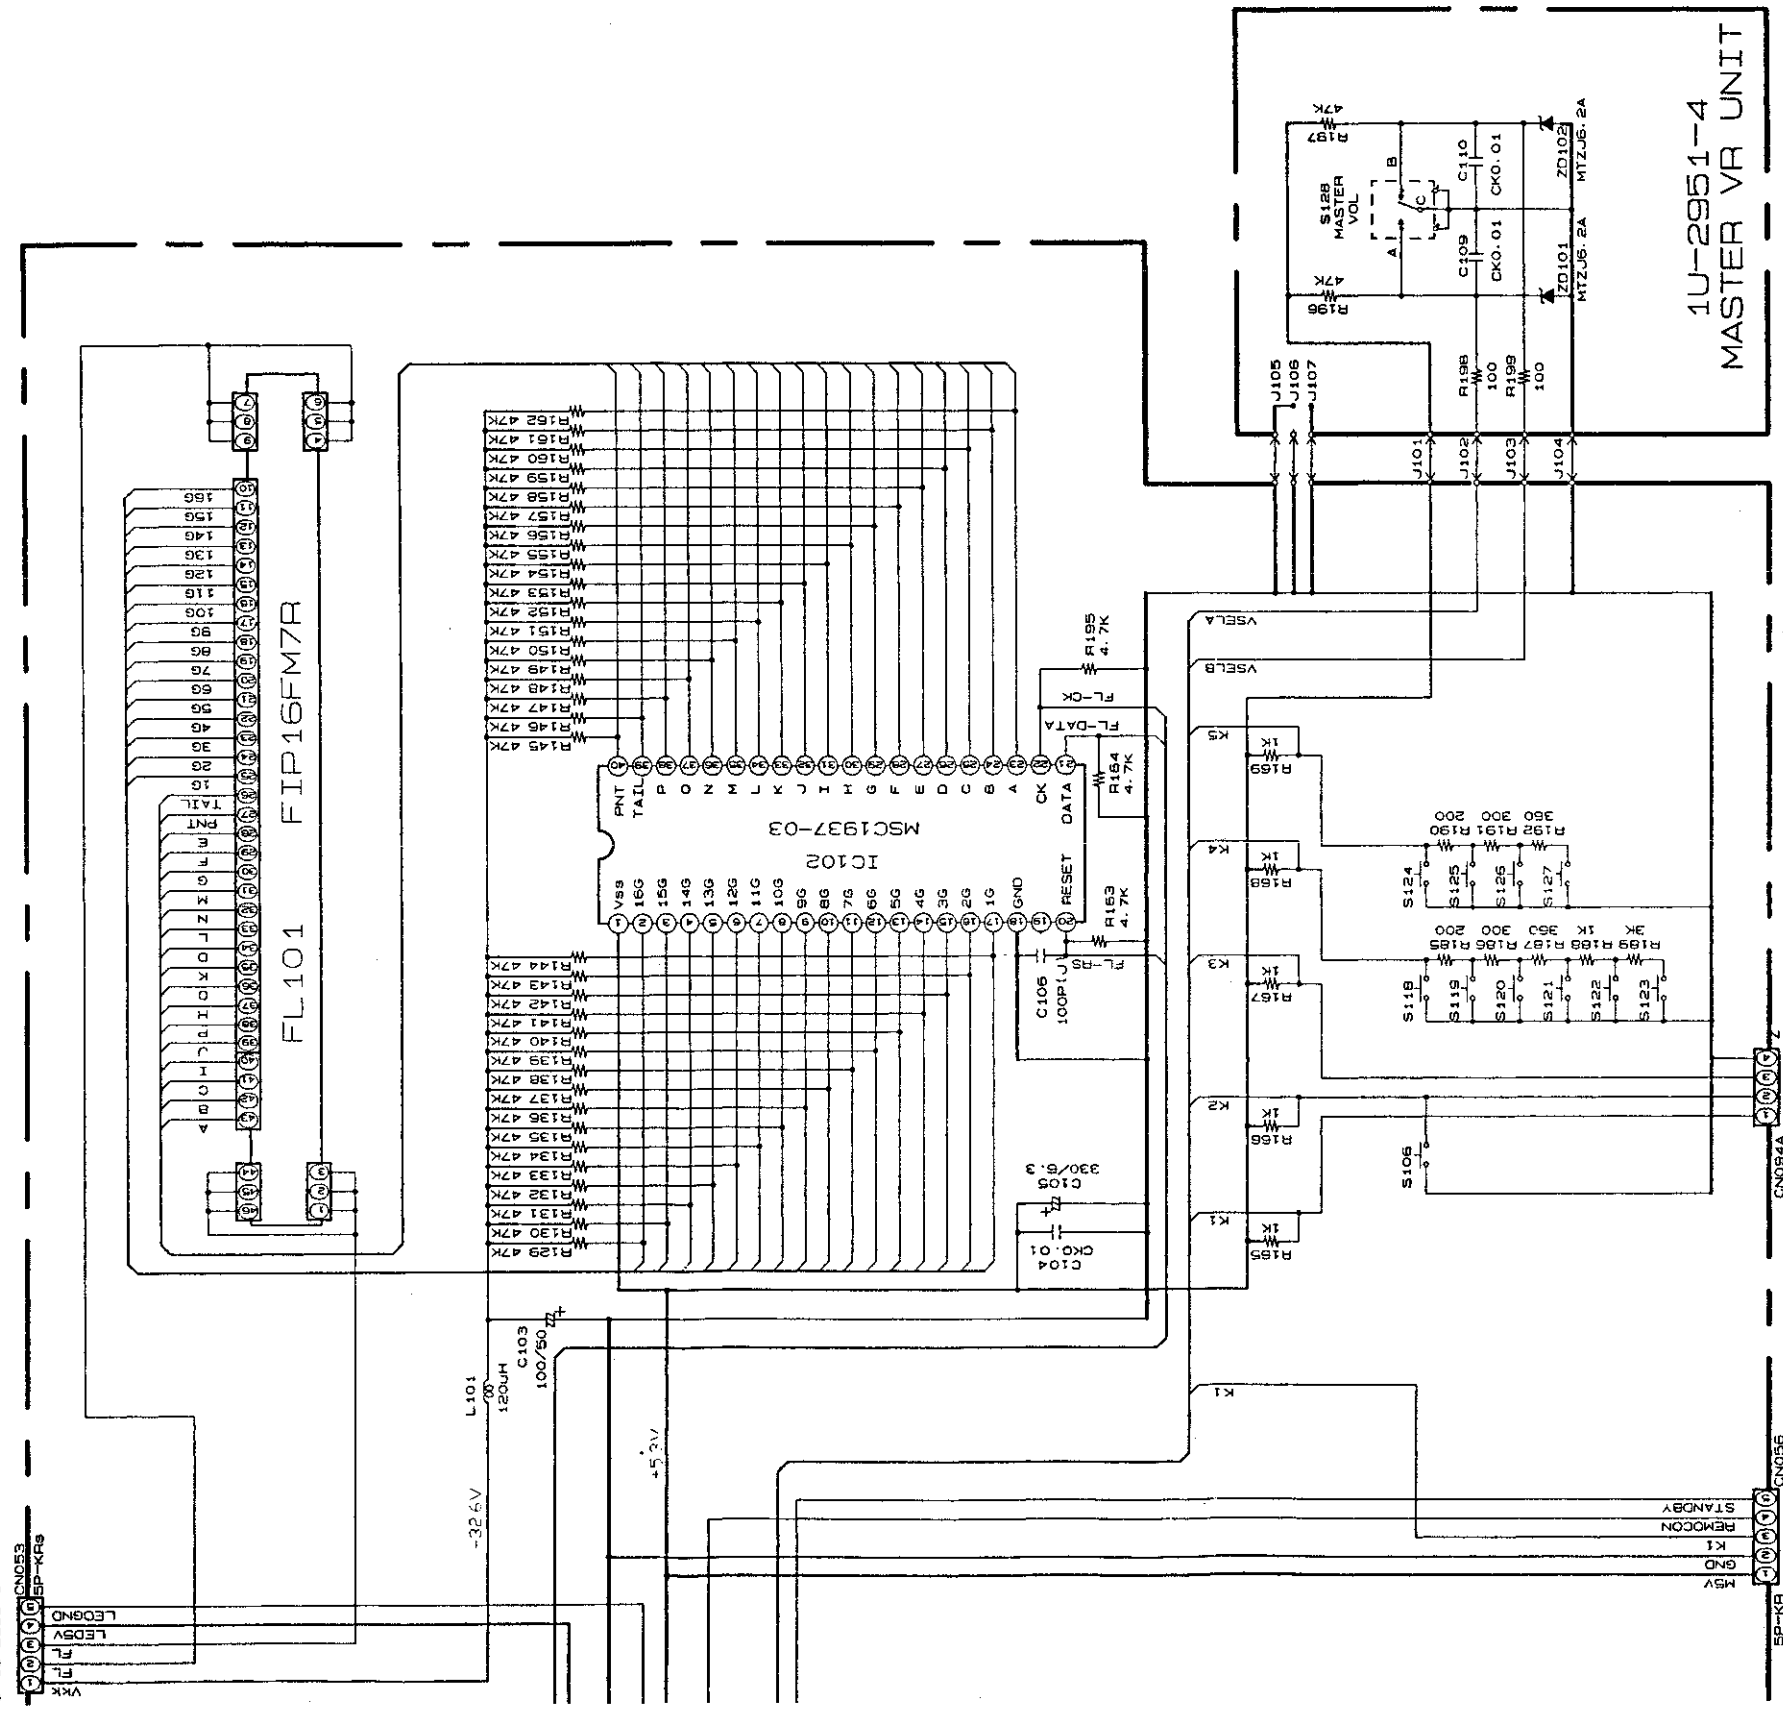

1U-2951-4
MASTER VR UNIT

L1	AC3RF	DSP	K1	K2	K3	K4	K5
L2	TUNER LEVEL DOWN	SIMULATION	L1	L2	L3	L4	L5
L3	INPUT LEVEL UP	CINEMA EQ	K3	K4	K5	K6	K7
L4	DOLBY SURROUND	PANEL	L3	L4	L5	L6	L7
L5	MONO	REC/MULTI SOURCE	K4	K5	K6	K7	K8
L6	2CH STEREO	REC/MULTI MODE	L5	L6	L7	L8	L9
		PRESET UP	K5	K6	K7	K8	K9
		PRESET DOWN	L6	L7	L8	L9	L10
		VCR-1	K6	K7	K8	K9	K10
		VCR-2	L7	L8	L9	L10	L11
		V. AUX	K7	K8	K9	K10	K11
		TUNER /TAPE-1	L8	L9	L10	L11	L12
		TAPE-2	K8	K9	K10	K11	K12
		MONI.	L9	L10	L11	L12	L13

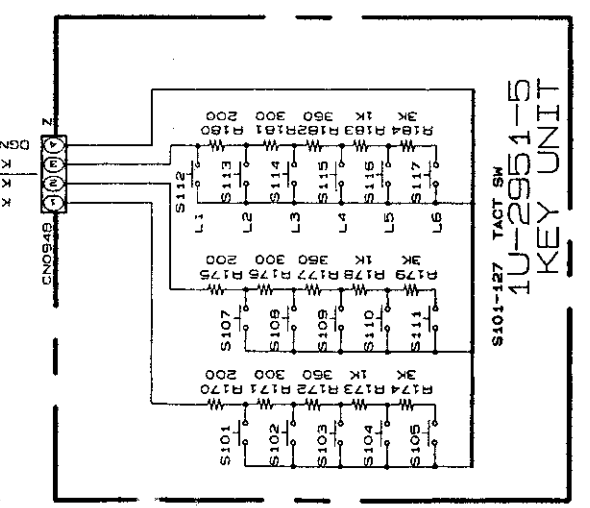

AVC MODEL

K2	K3
L5	L6
CH VR SELECT	CH VR UP
CH VR DOWN	CH VR UP

HOME THX
 WIDE SCREEN

+8 LINE
 -8 LINE

7



8

9

10

11

10-1U-2958-1

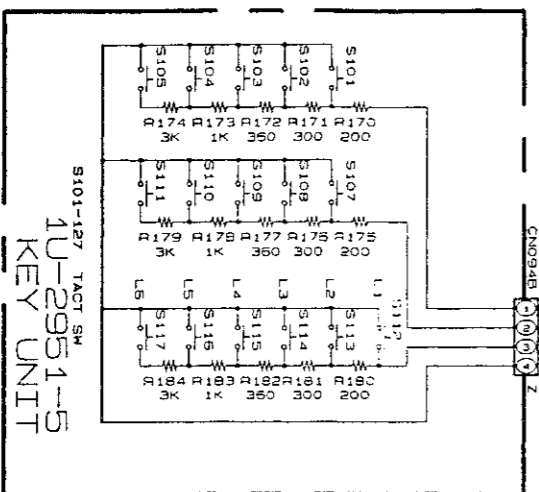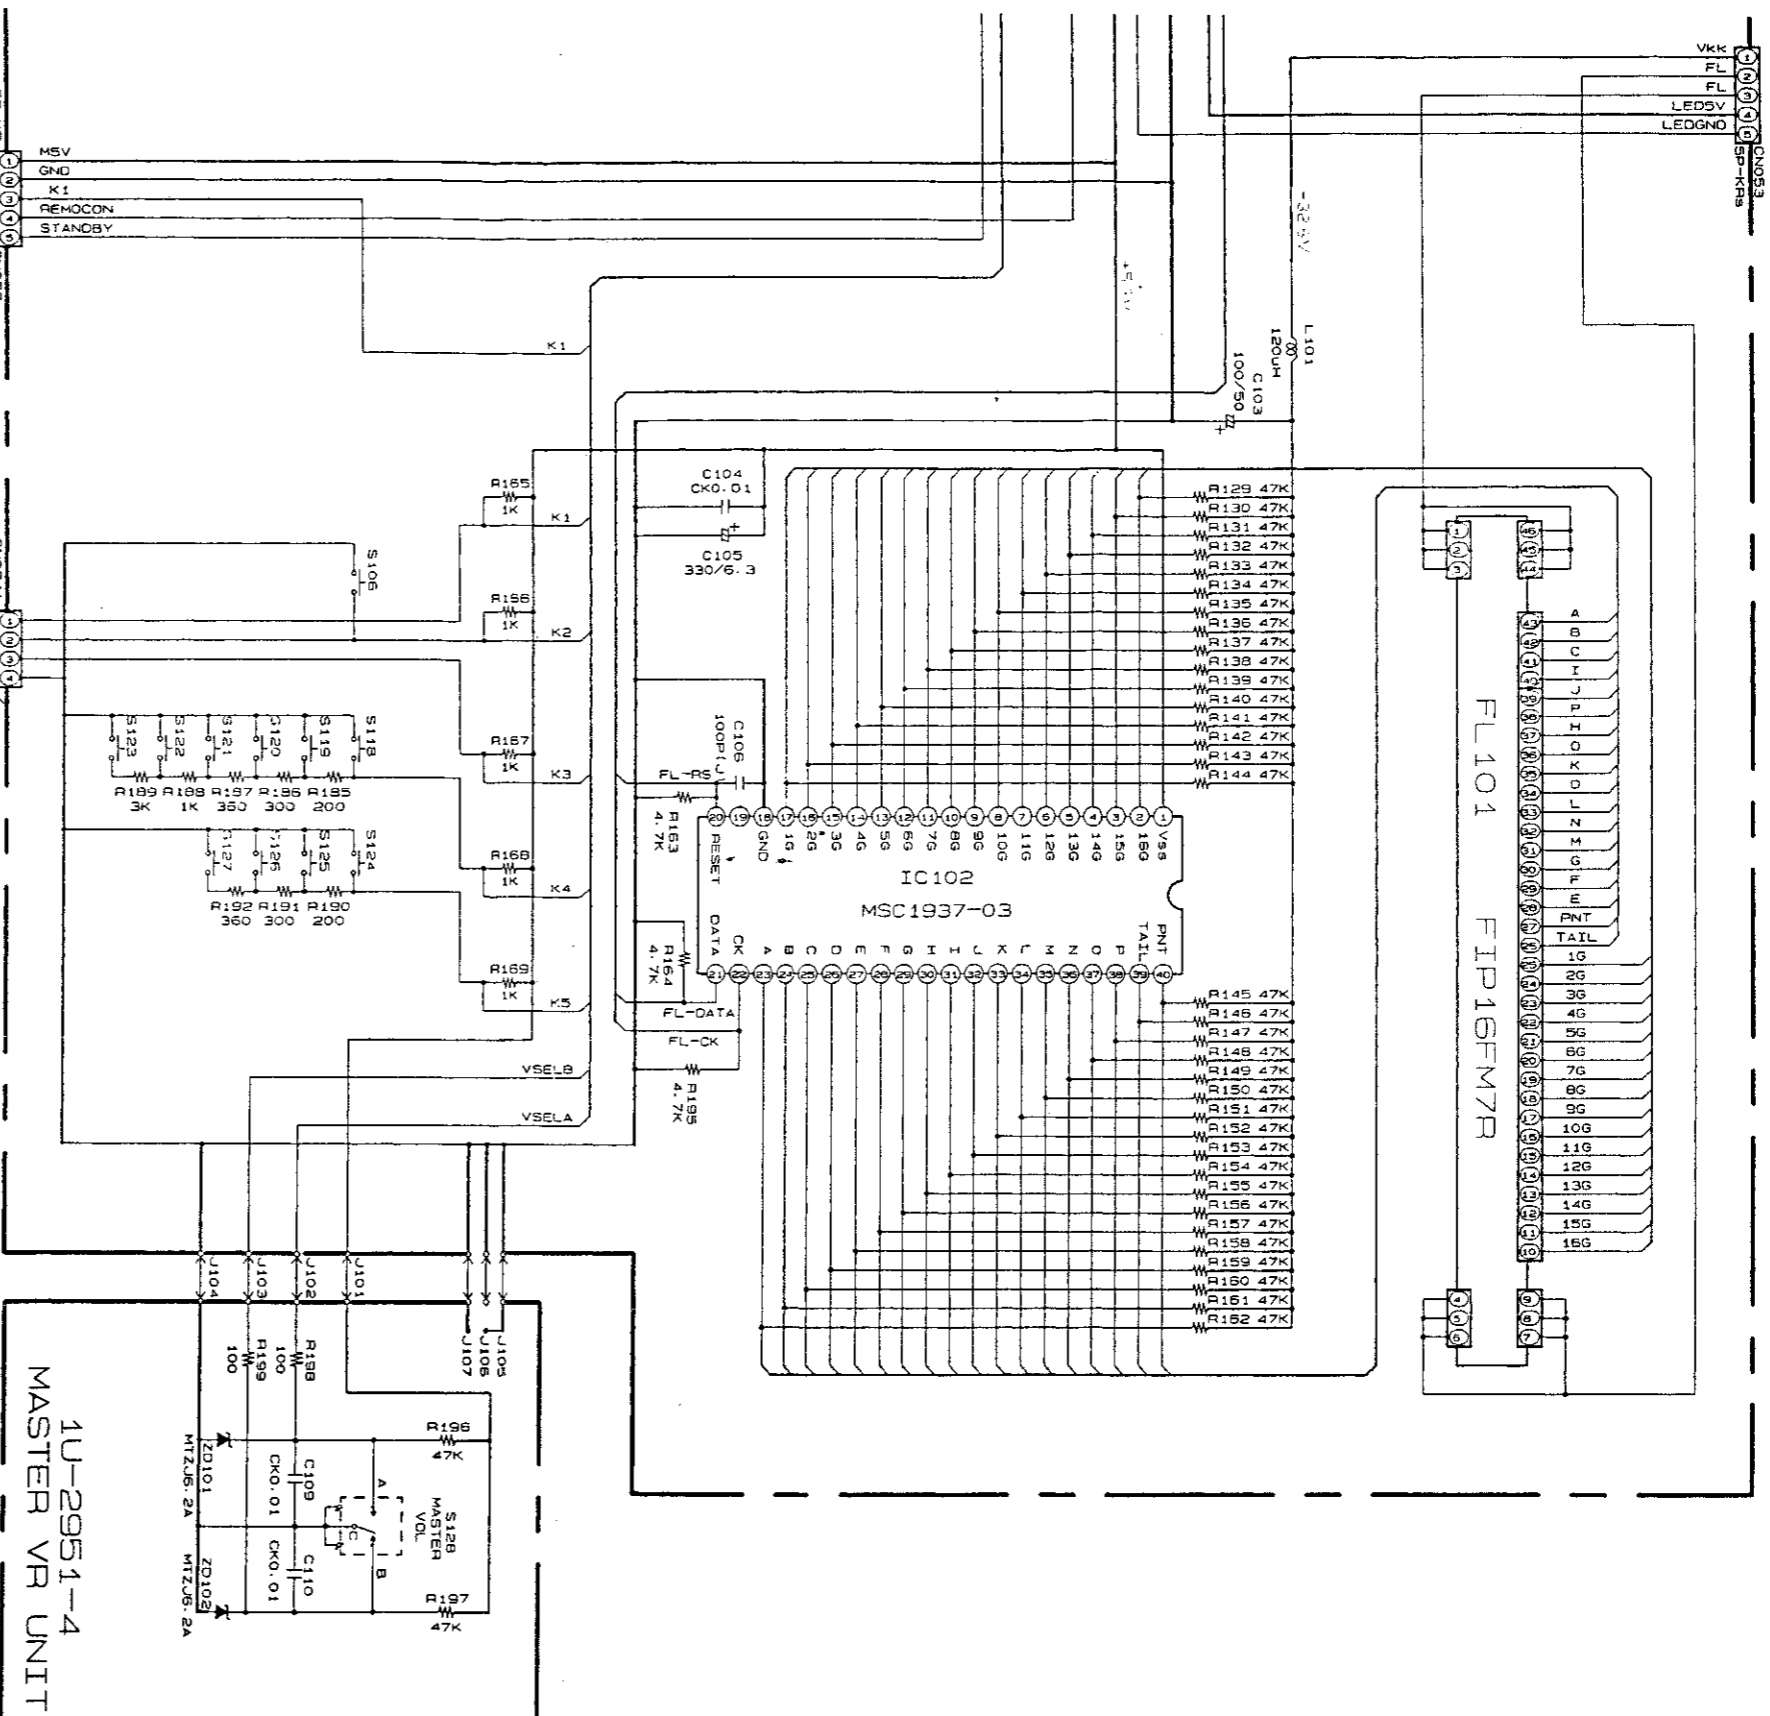

	K1	K2	K3	K4	K5
L1		ACBPF	DSP SIMULATION	PHONO	VCR-2
L2	DIRECT	INPUT LEVEL DOWN	CINEMA EQ	CO	V. AUX
L3	STEREO	LEVEL UP	PANEL	TUNER	DA1 /TAP-1
L4	DOLBY SURROUND	ANALOG/DIGITAL	REC/MULTI SOURCE	VCR/DVD	TAP-2 TAPE-2 MONI.
L5	MONO	PRESET SHIFT	REC/MULTI MODE	TV/D95	
L6	3CH STEREO	PRESET DOWN	PRESET UP	VCR-1	

AVC MODEL


	K2	K3
L5	CH VR SELECT	
L6	CH VR DOWN	CH VR UP

HOME THX
WIDE SCREEN
+B LINE
-B LINE

1U-2951-4
MASTER VR UNIT

REMOTE CONTROL UNIT (RC-820)

1 2 3 4 5 6 7 8

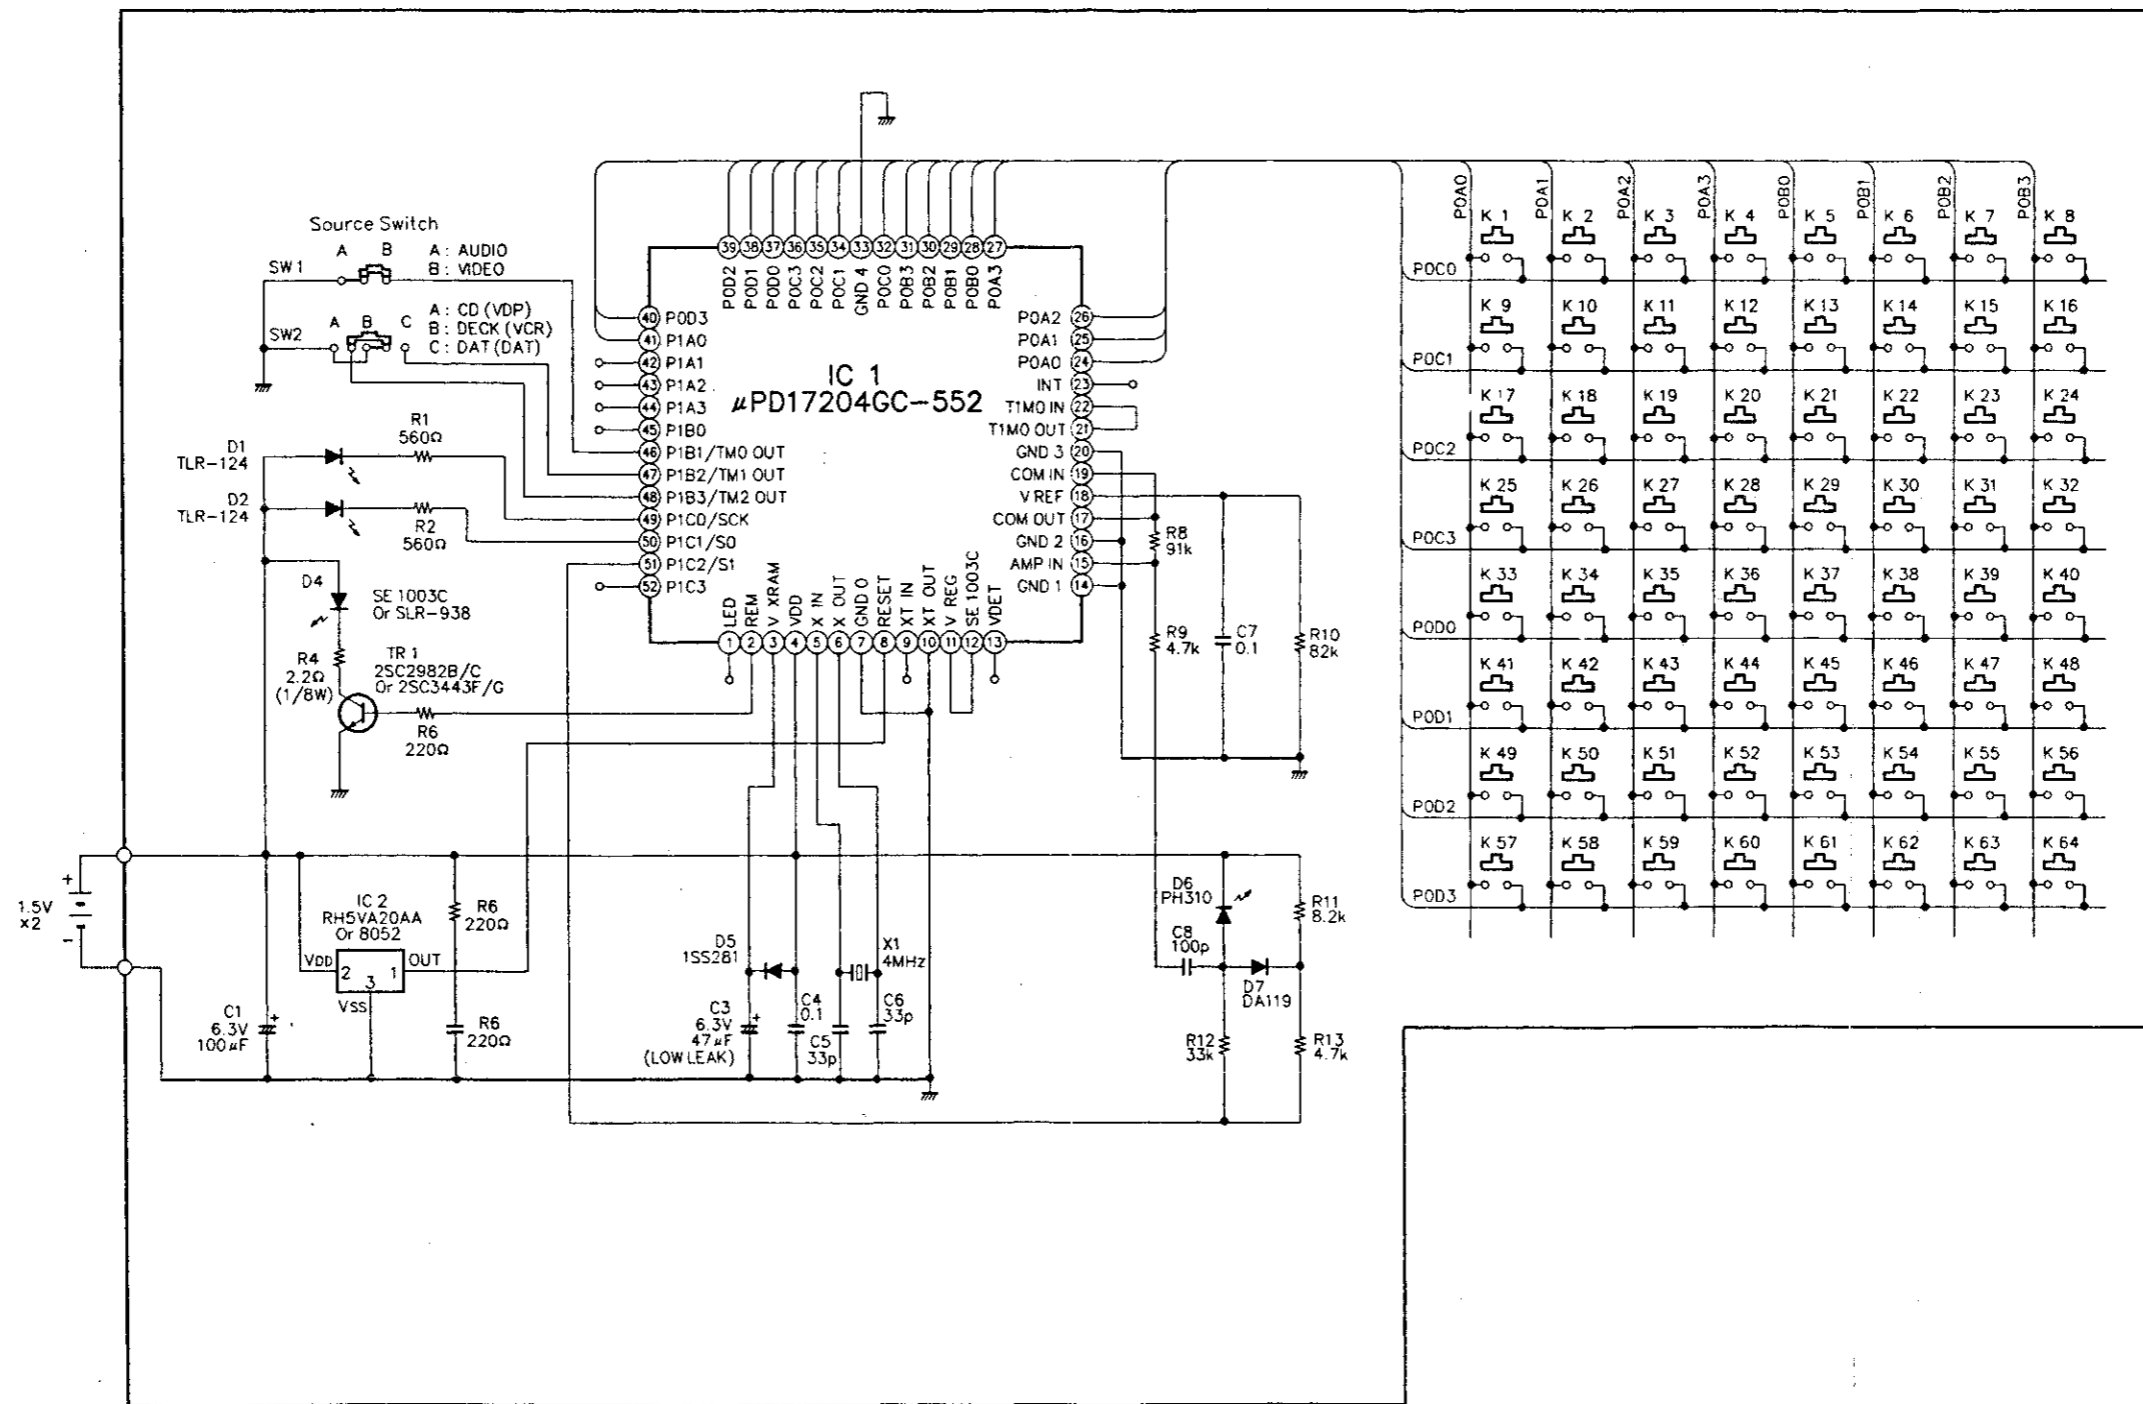


A

B

C

D



E



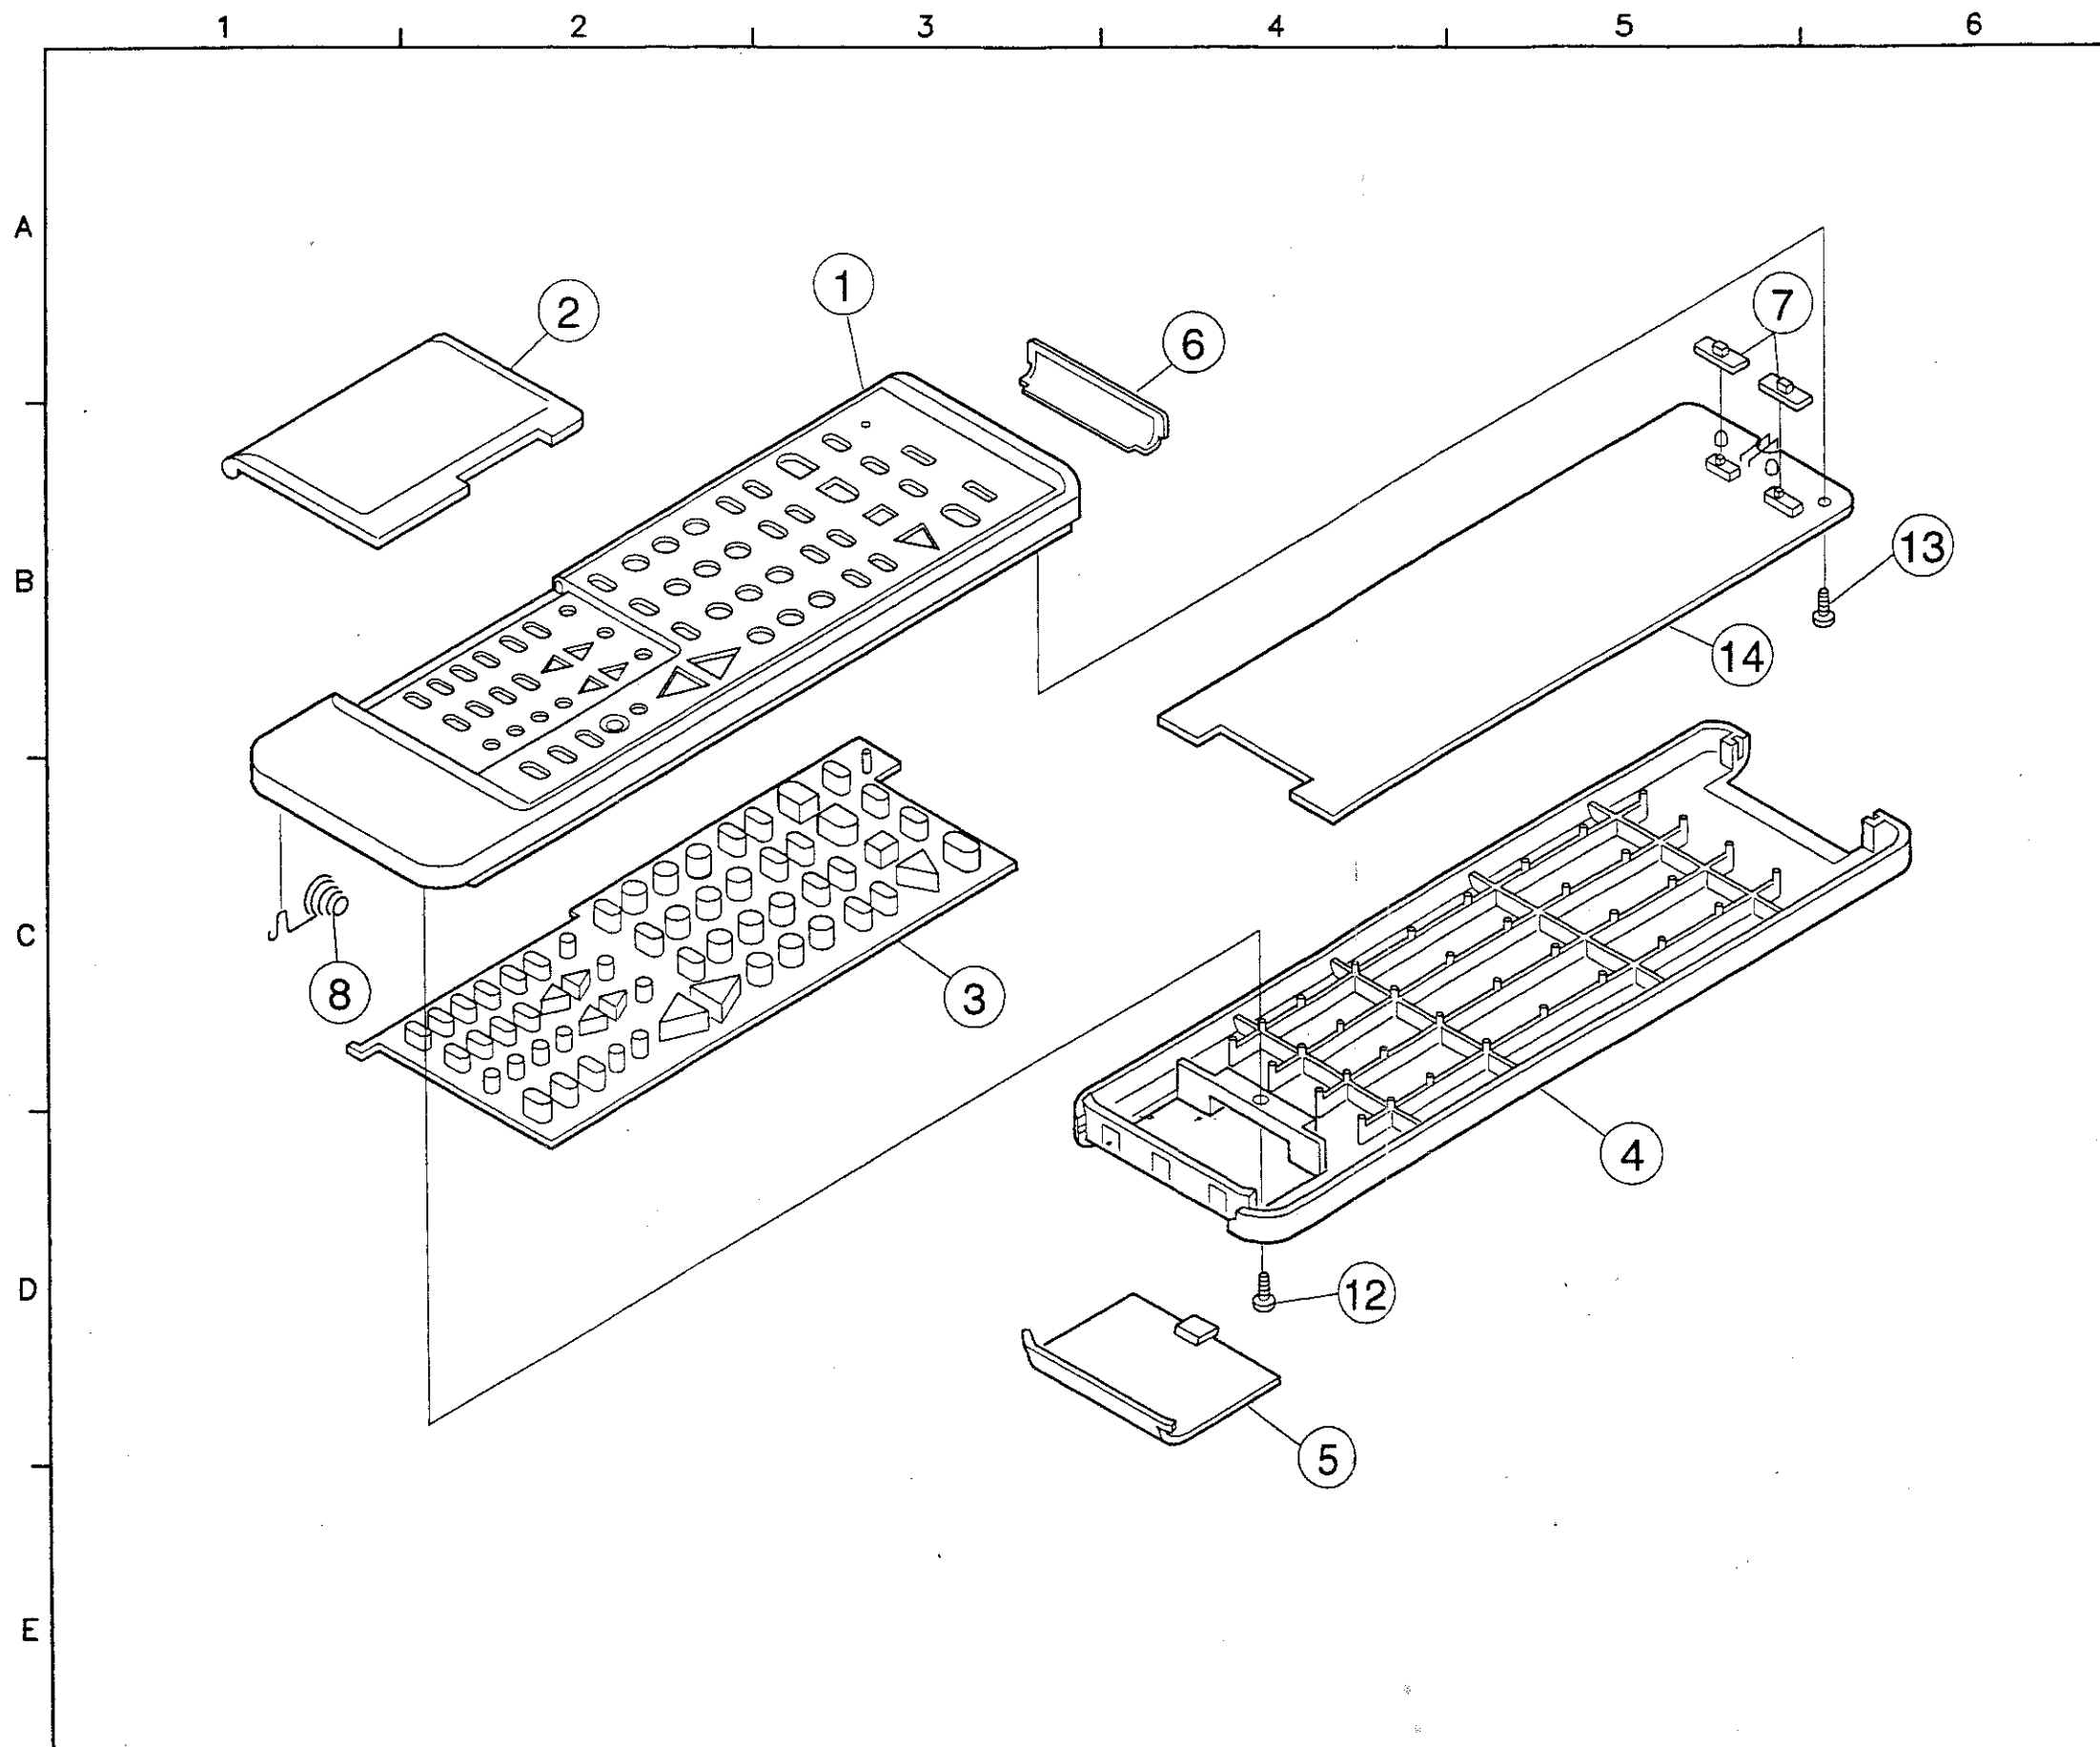


PARTS LIST OF REMOTE CONTROL UNIT (RC-820)


Ref. No.	Part No.	Part Name	Remarks	Q'ty
● 1	9H3 1000 164	Top Case (RC820) Ass'y		1s
● 2	9H3 100 0 168	Cover		1
● 3	9H3 1000 169	Switch Rubber		1
● 4	9H3 1000 166	Bottom Case		1
● 5	9H3 1000 167	Battery Cover		1
● 6	9H3 1000 148	Filter		1
● 7	9H3 1000 150	Slide Knob		2
● 8	9H3 1000 152	Coil Spring		1
9	—	—		
10	—	—		
11	—	—		
12	9H3 1000 154	Tapping Screw 2x6		1
13	9H3 1000 107	Tapping Screw 2x5		1
14	9H3 1000 161	Main P.W.B. Ass'y		1s
IC1	9H3 1000 162	IC μ PD17204GC-552	μ -Com	1
IC2	9H3 1000 158	IC RH5VA10AA	vol. Detector	1
Q1	9H6 1000 070	Transistor 2SC2982	Chip	1
D1,2	9H3 1000 028	LED TLR124	Visible-Red	2
D4	9H3 1000 131	LED SE1003-C	Infrared	1
D5	9H3 1000 087	Diode 1SS2B1		1
D6	9H3 1000 029	Diode PH310	Photo-PIN	1
D7	9H3 1000 071	Diode DA119	Chip	1
X1	9H3 1000 088	Ceramic Resonator	KBR4, 0M503	1
SW1	9H3 1000 089	Slide Switch		1
SW2	9H3 1000 074	Slide Switch		1
C1	254 4213 034	Electrolytic 100 μ F/6.3V	CE04W0J101M	1
C3	254 4213 021	Electrolytic 47 μ F/6.3V	CE04W0J470M	1

1 2 3 4 5 6

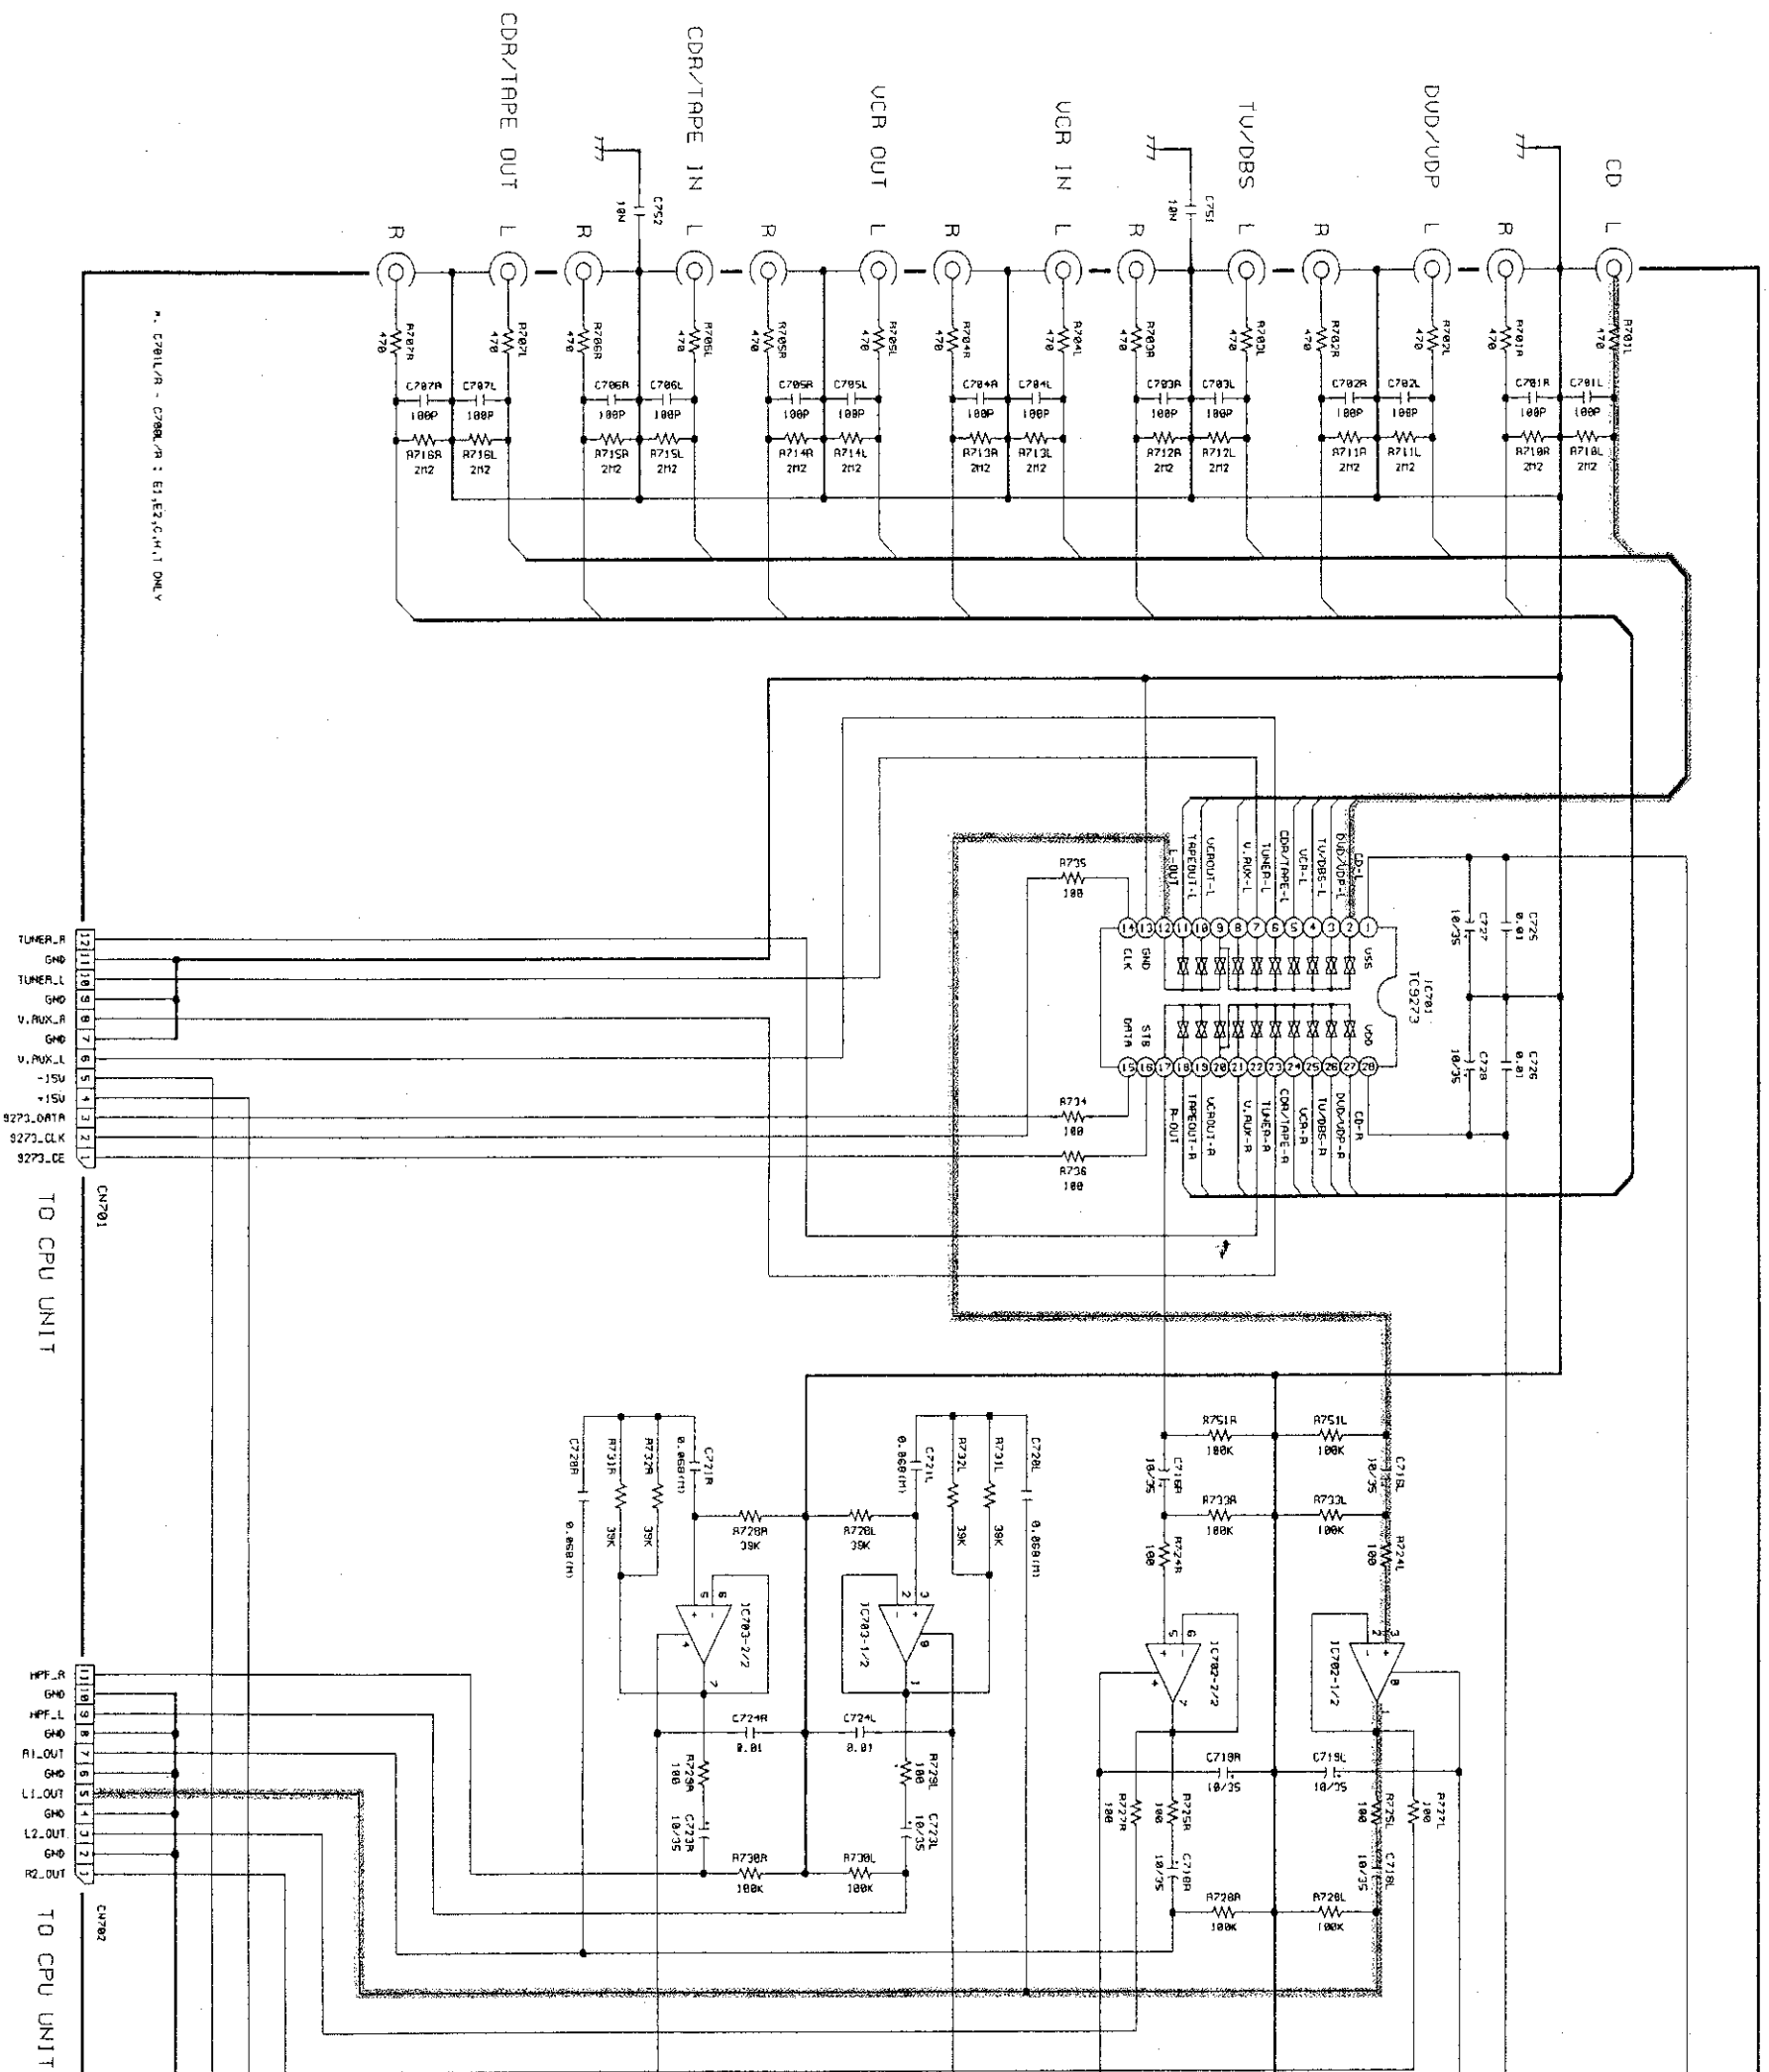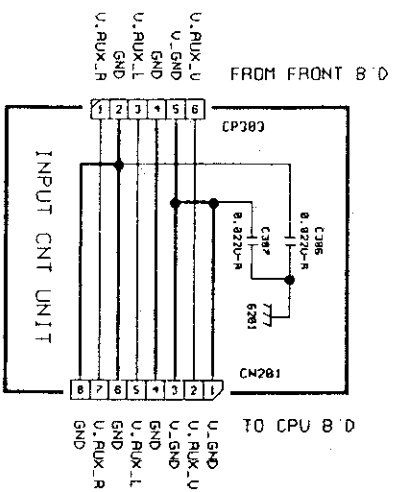

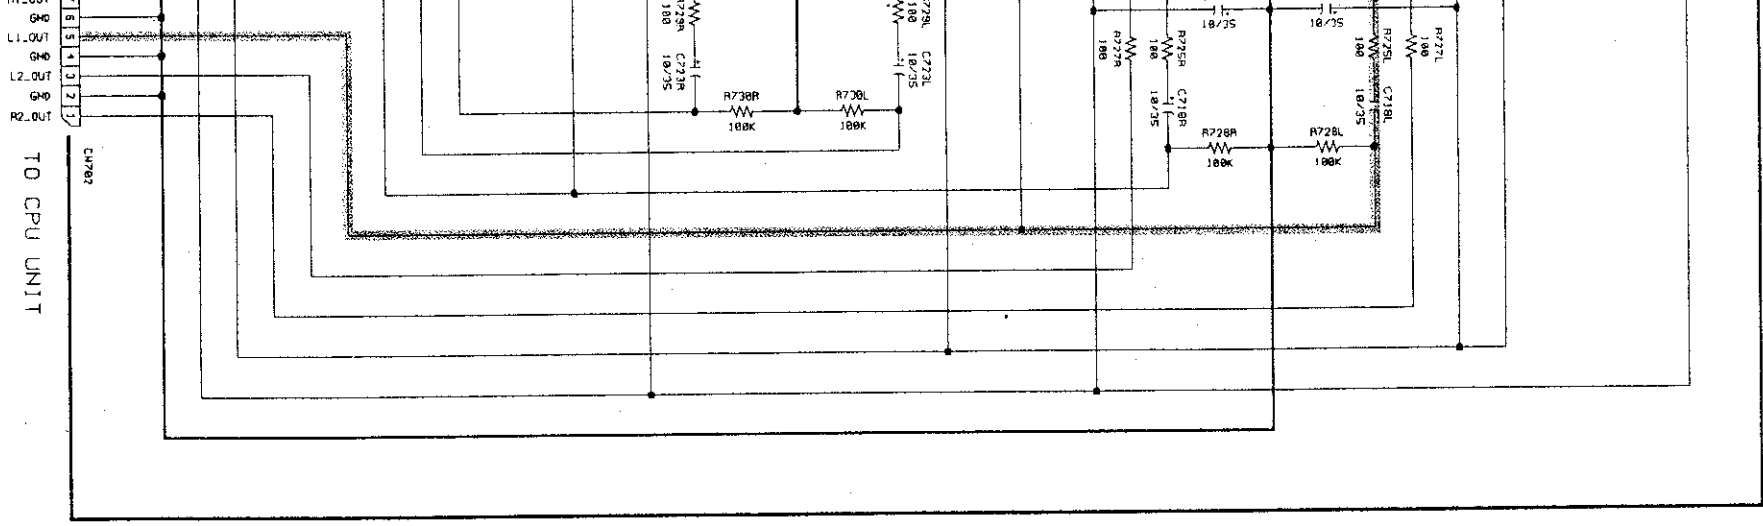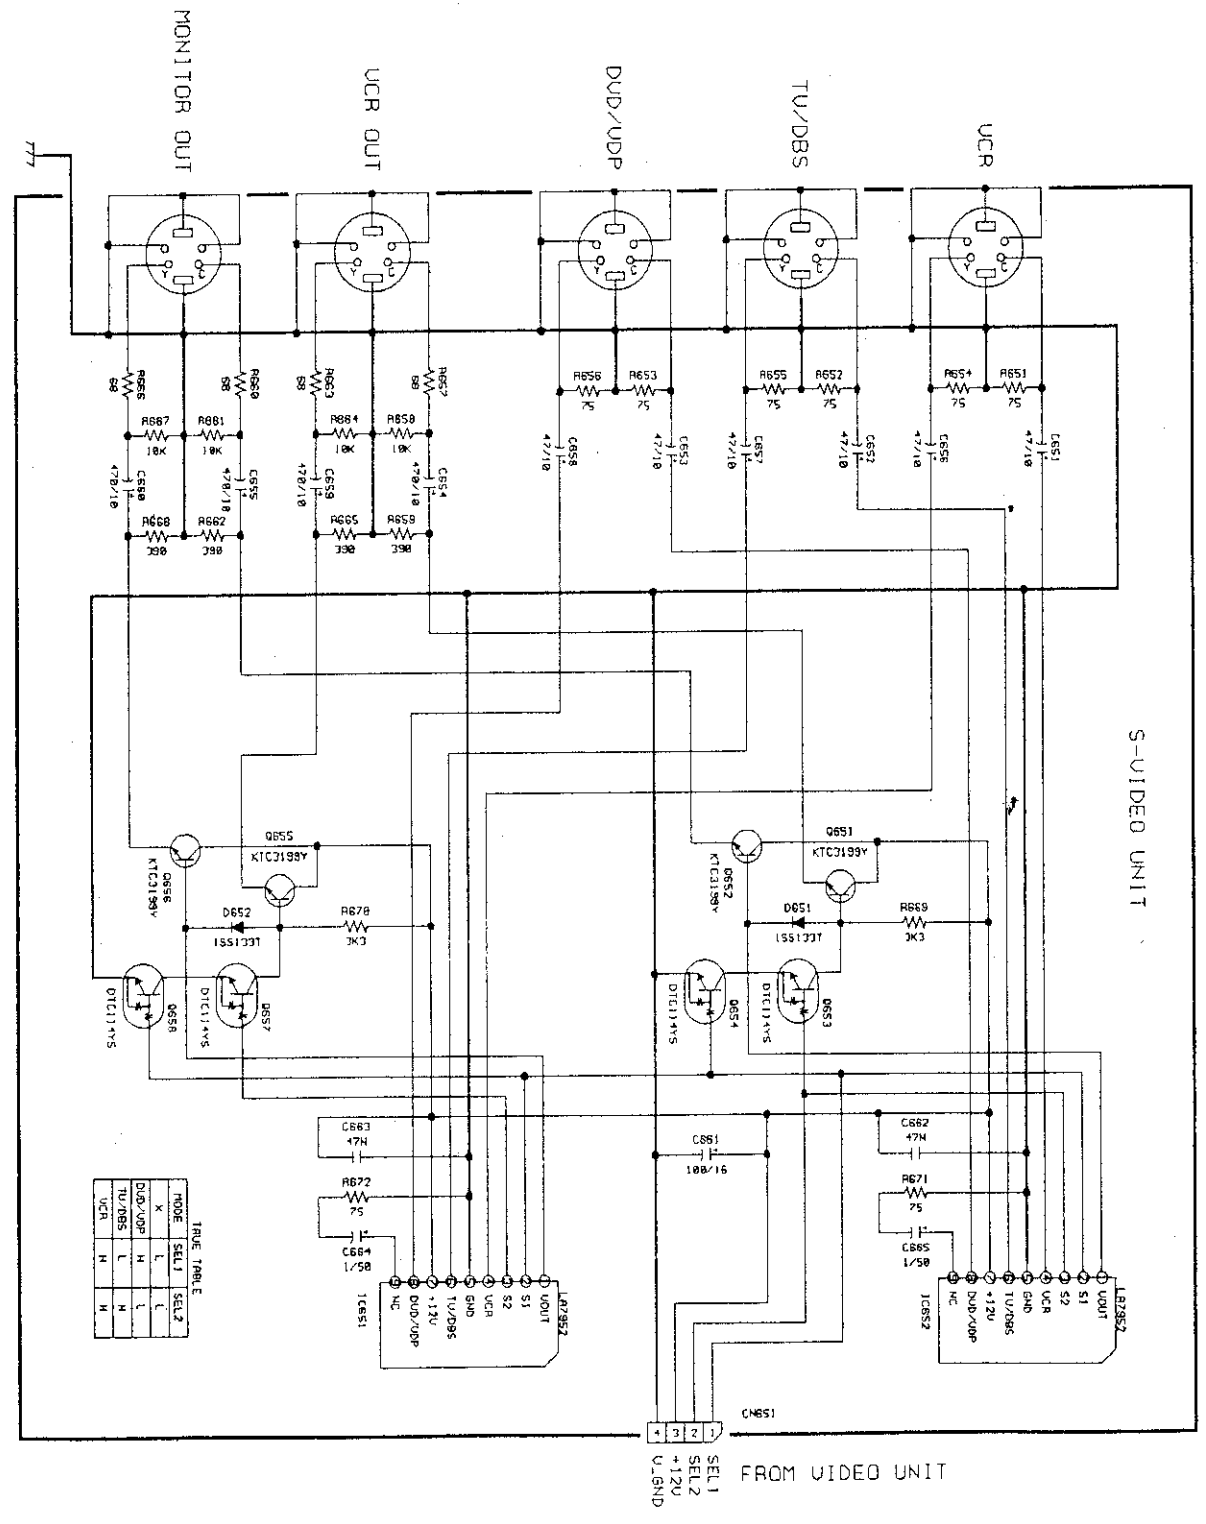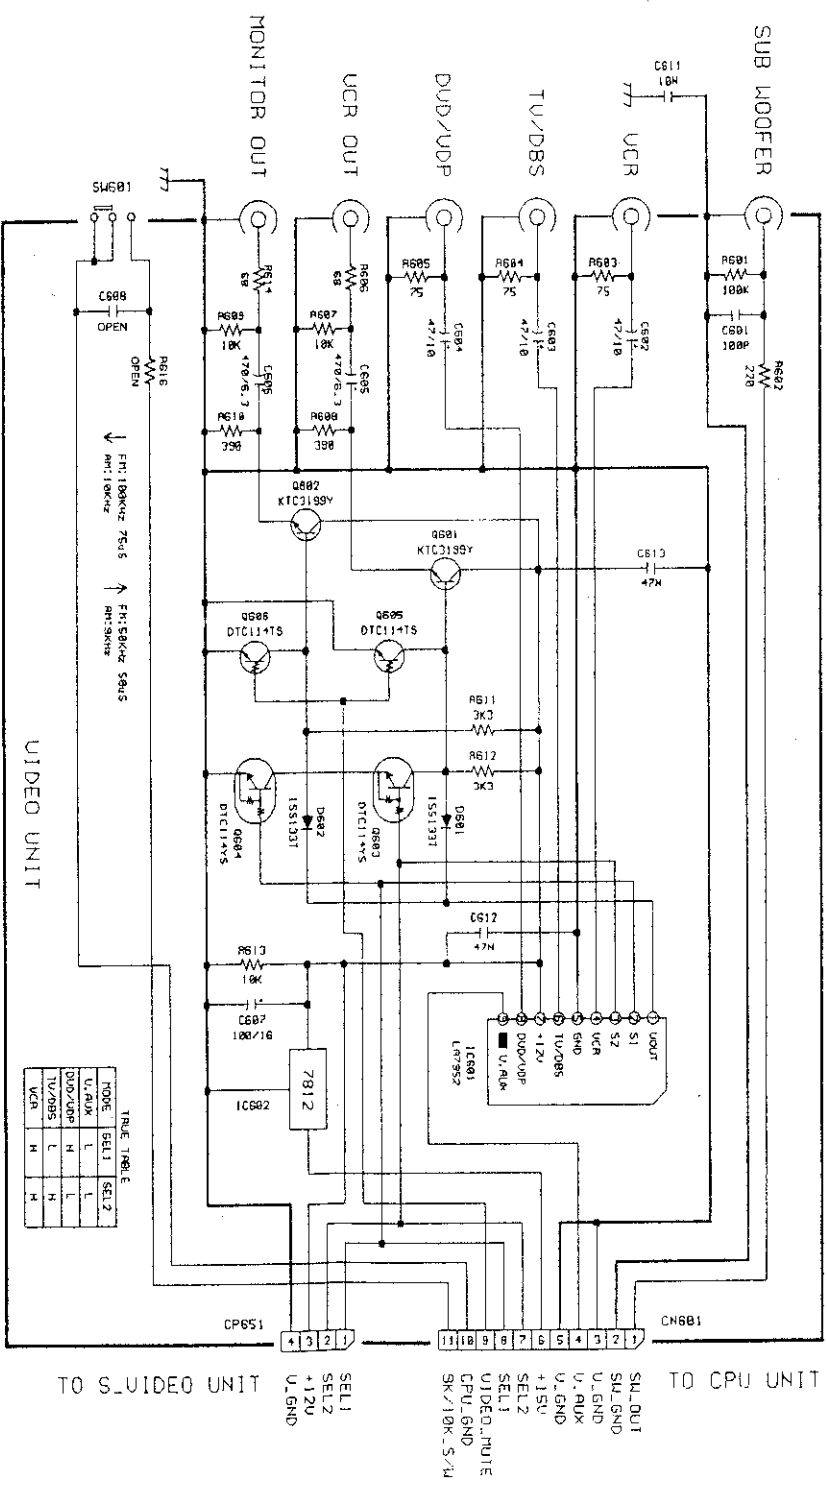


SCHEMATIC DIAGRAMS (1/7)
 INPUT UNIT
 C-VIDEO UNIT
 S-VIDEO UNIT
 INPUT CNT UNIT

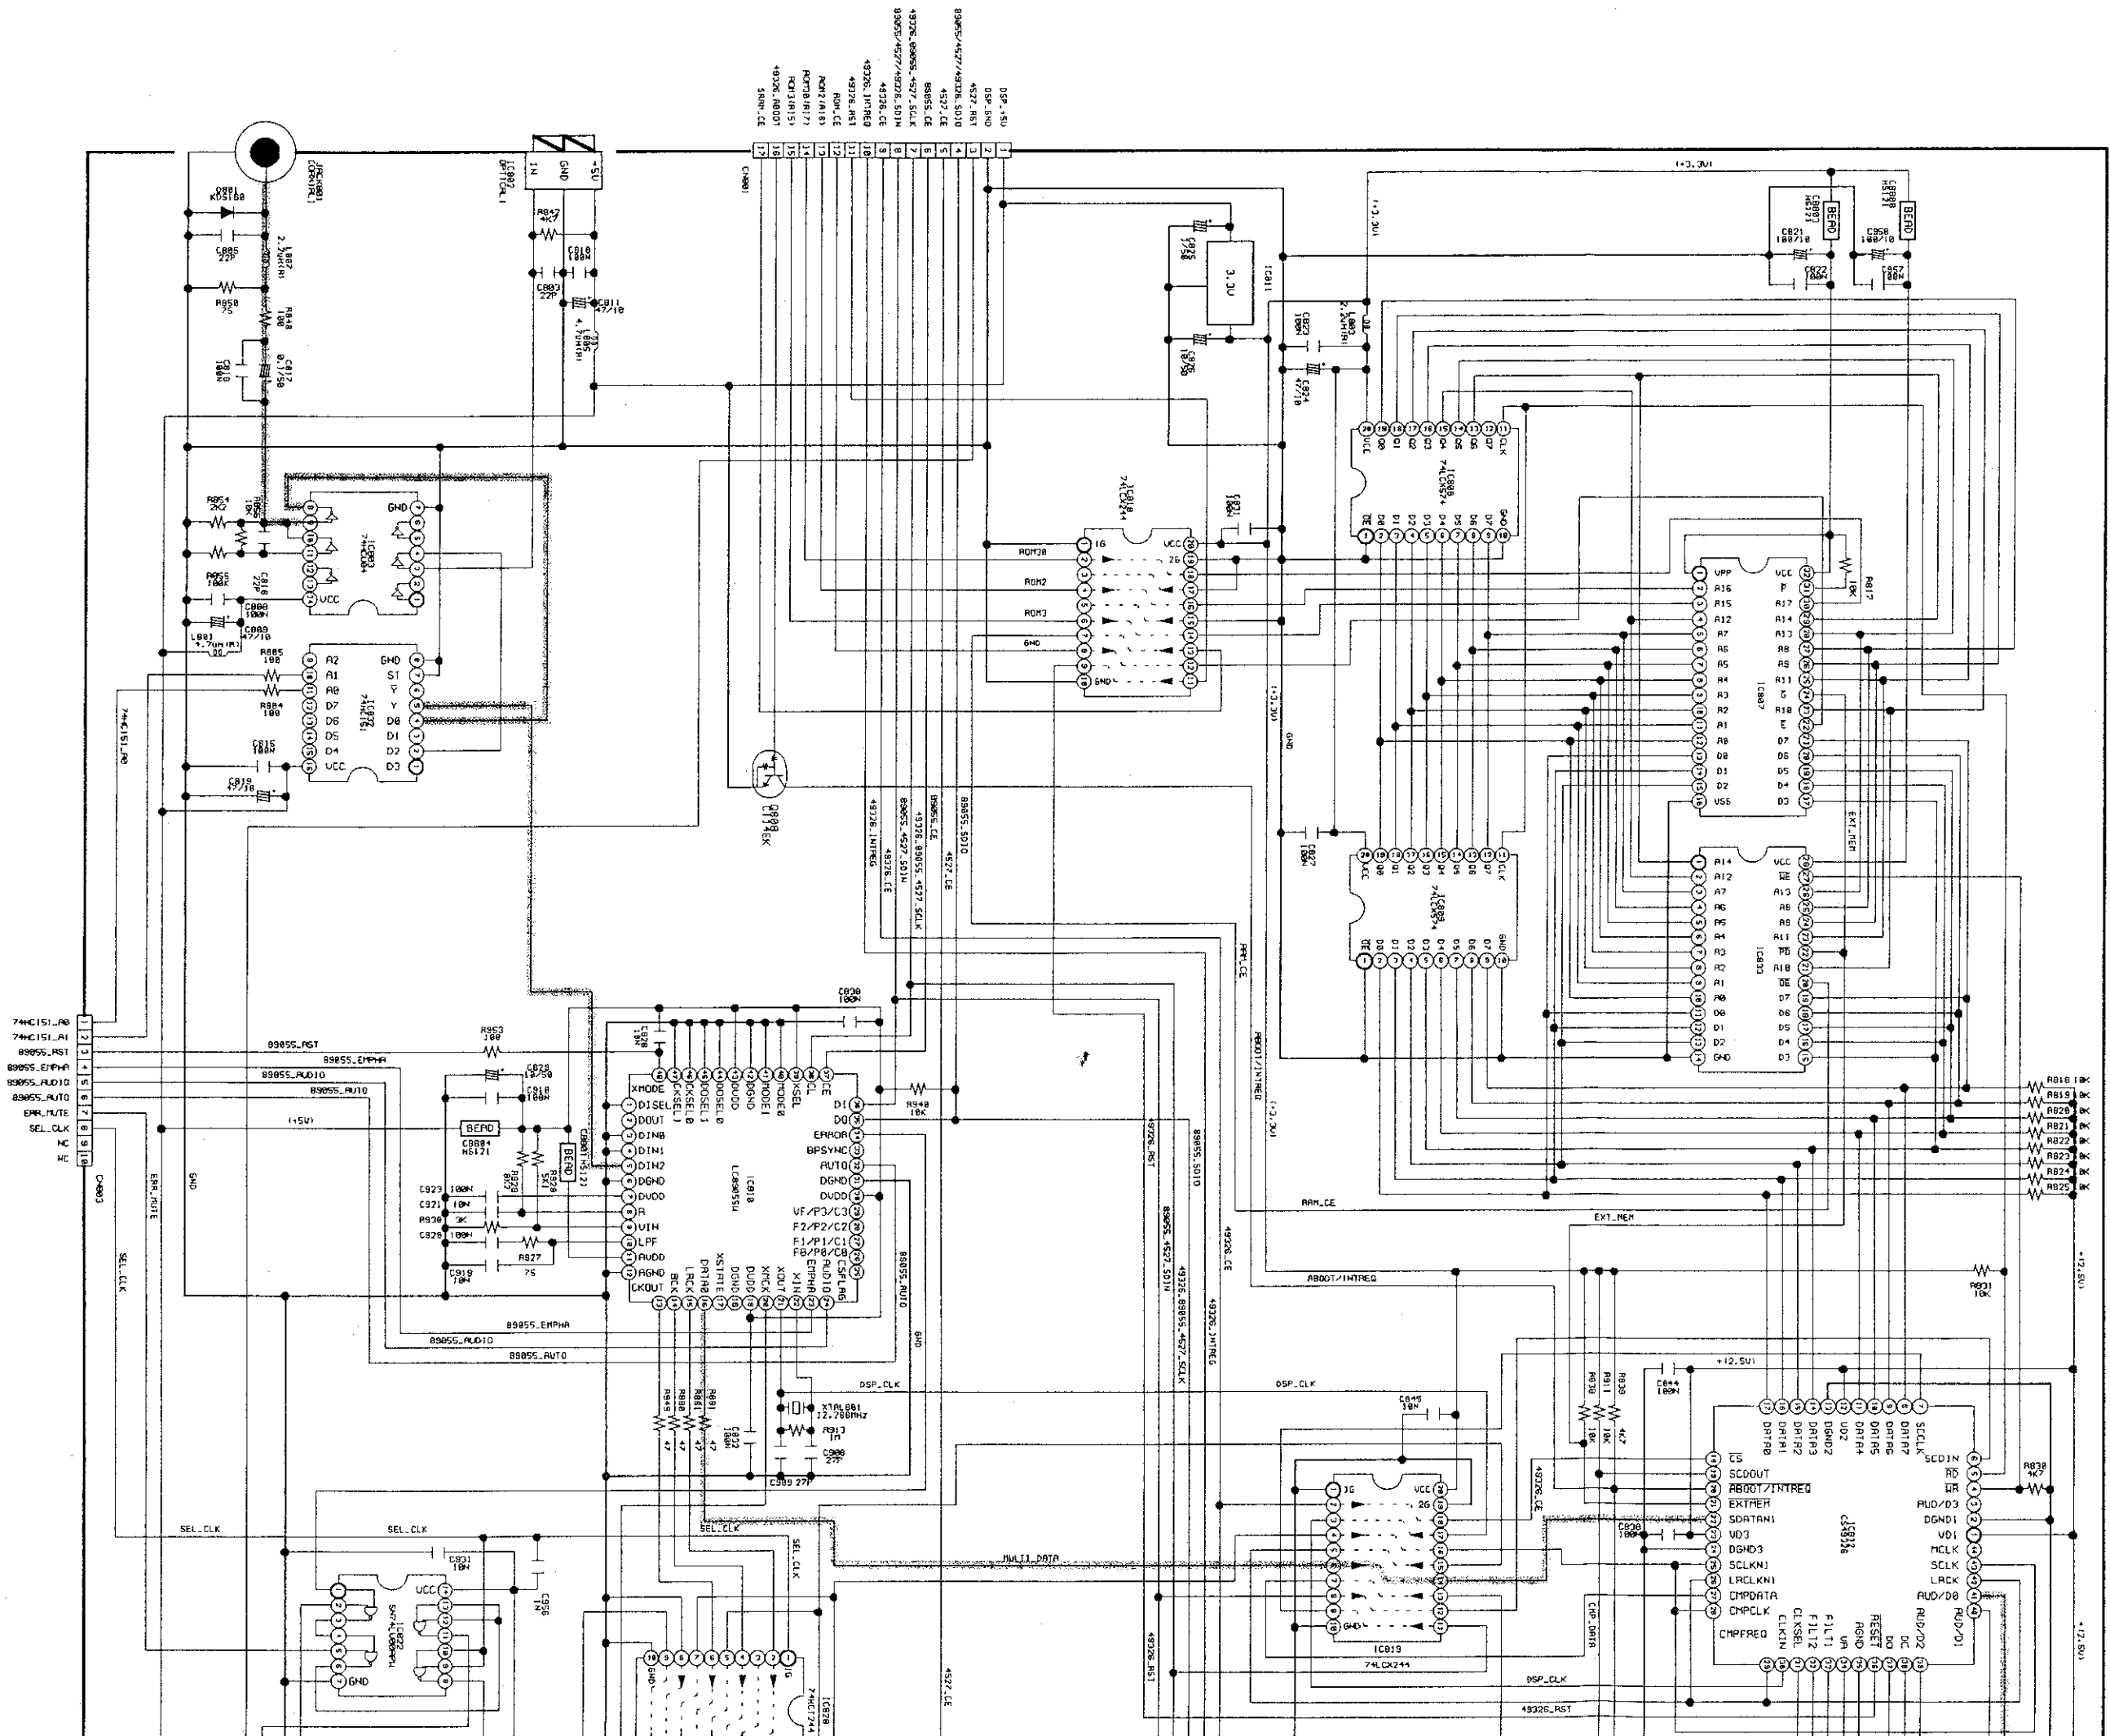

- DSP-450
- DSP-GND
- 4527-RN1
- 89055-4527/4932R-S010
- 4527-CE
- 89055-CE
- 4932R-89055-4527-SCLK
- 89055/4527/4932R-S014
- 4932R-CE
- 4932R-INTREG
- 4932R-RN1
- RND-CE
- RNDV1-RN1
- RNDV2-RN1
- RNDV3-RN1
- 4932R-RN001
- 58N-CE

- 74HC151-LB
- 74HC151-LA
- 89055-RST
- 89055-EMPHA
- 89055-AUD10
- 89055-AUTO
- ERR-INT
- SEL-CLK
- NC
- HE

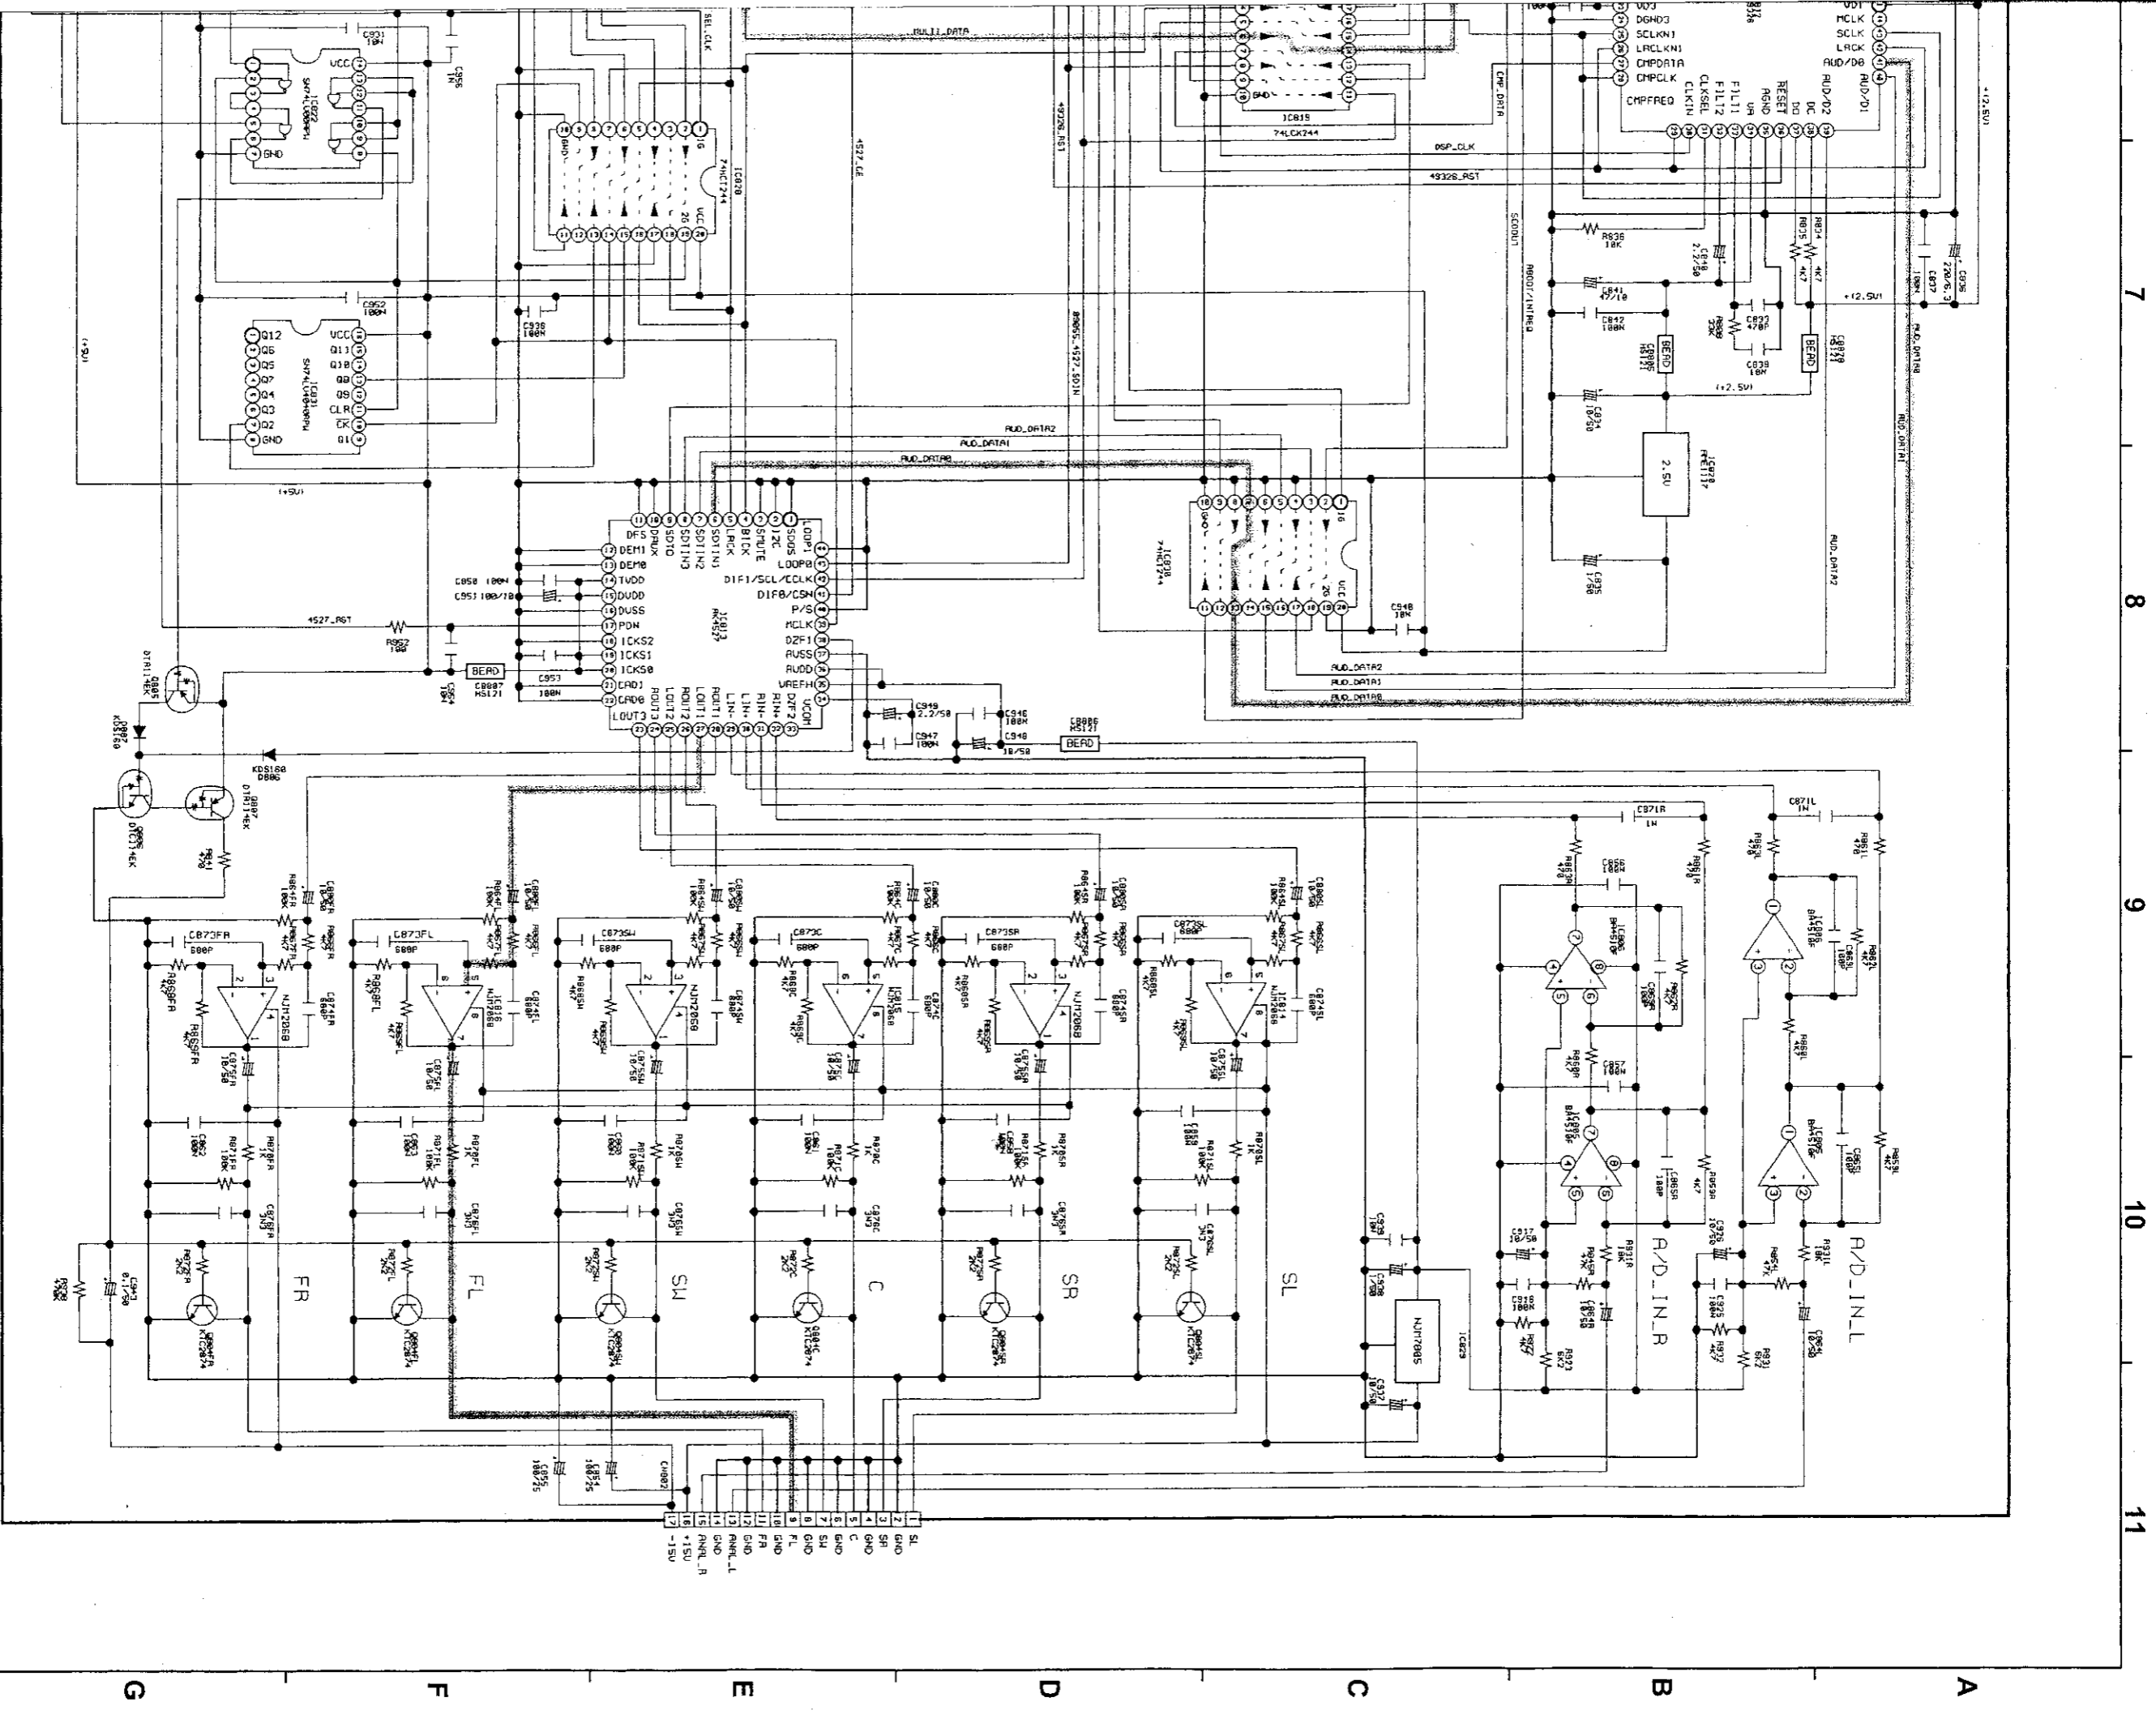

7

8

9

10

11

SIGNAL LINE

SCHEMATIC DIAGRAMS (2/7)
DSP UNIT

H

G

F

E

D

C

B

A

SCHEMATIC DIAGRAMS (3/7)

1


2

3


4

5

6

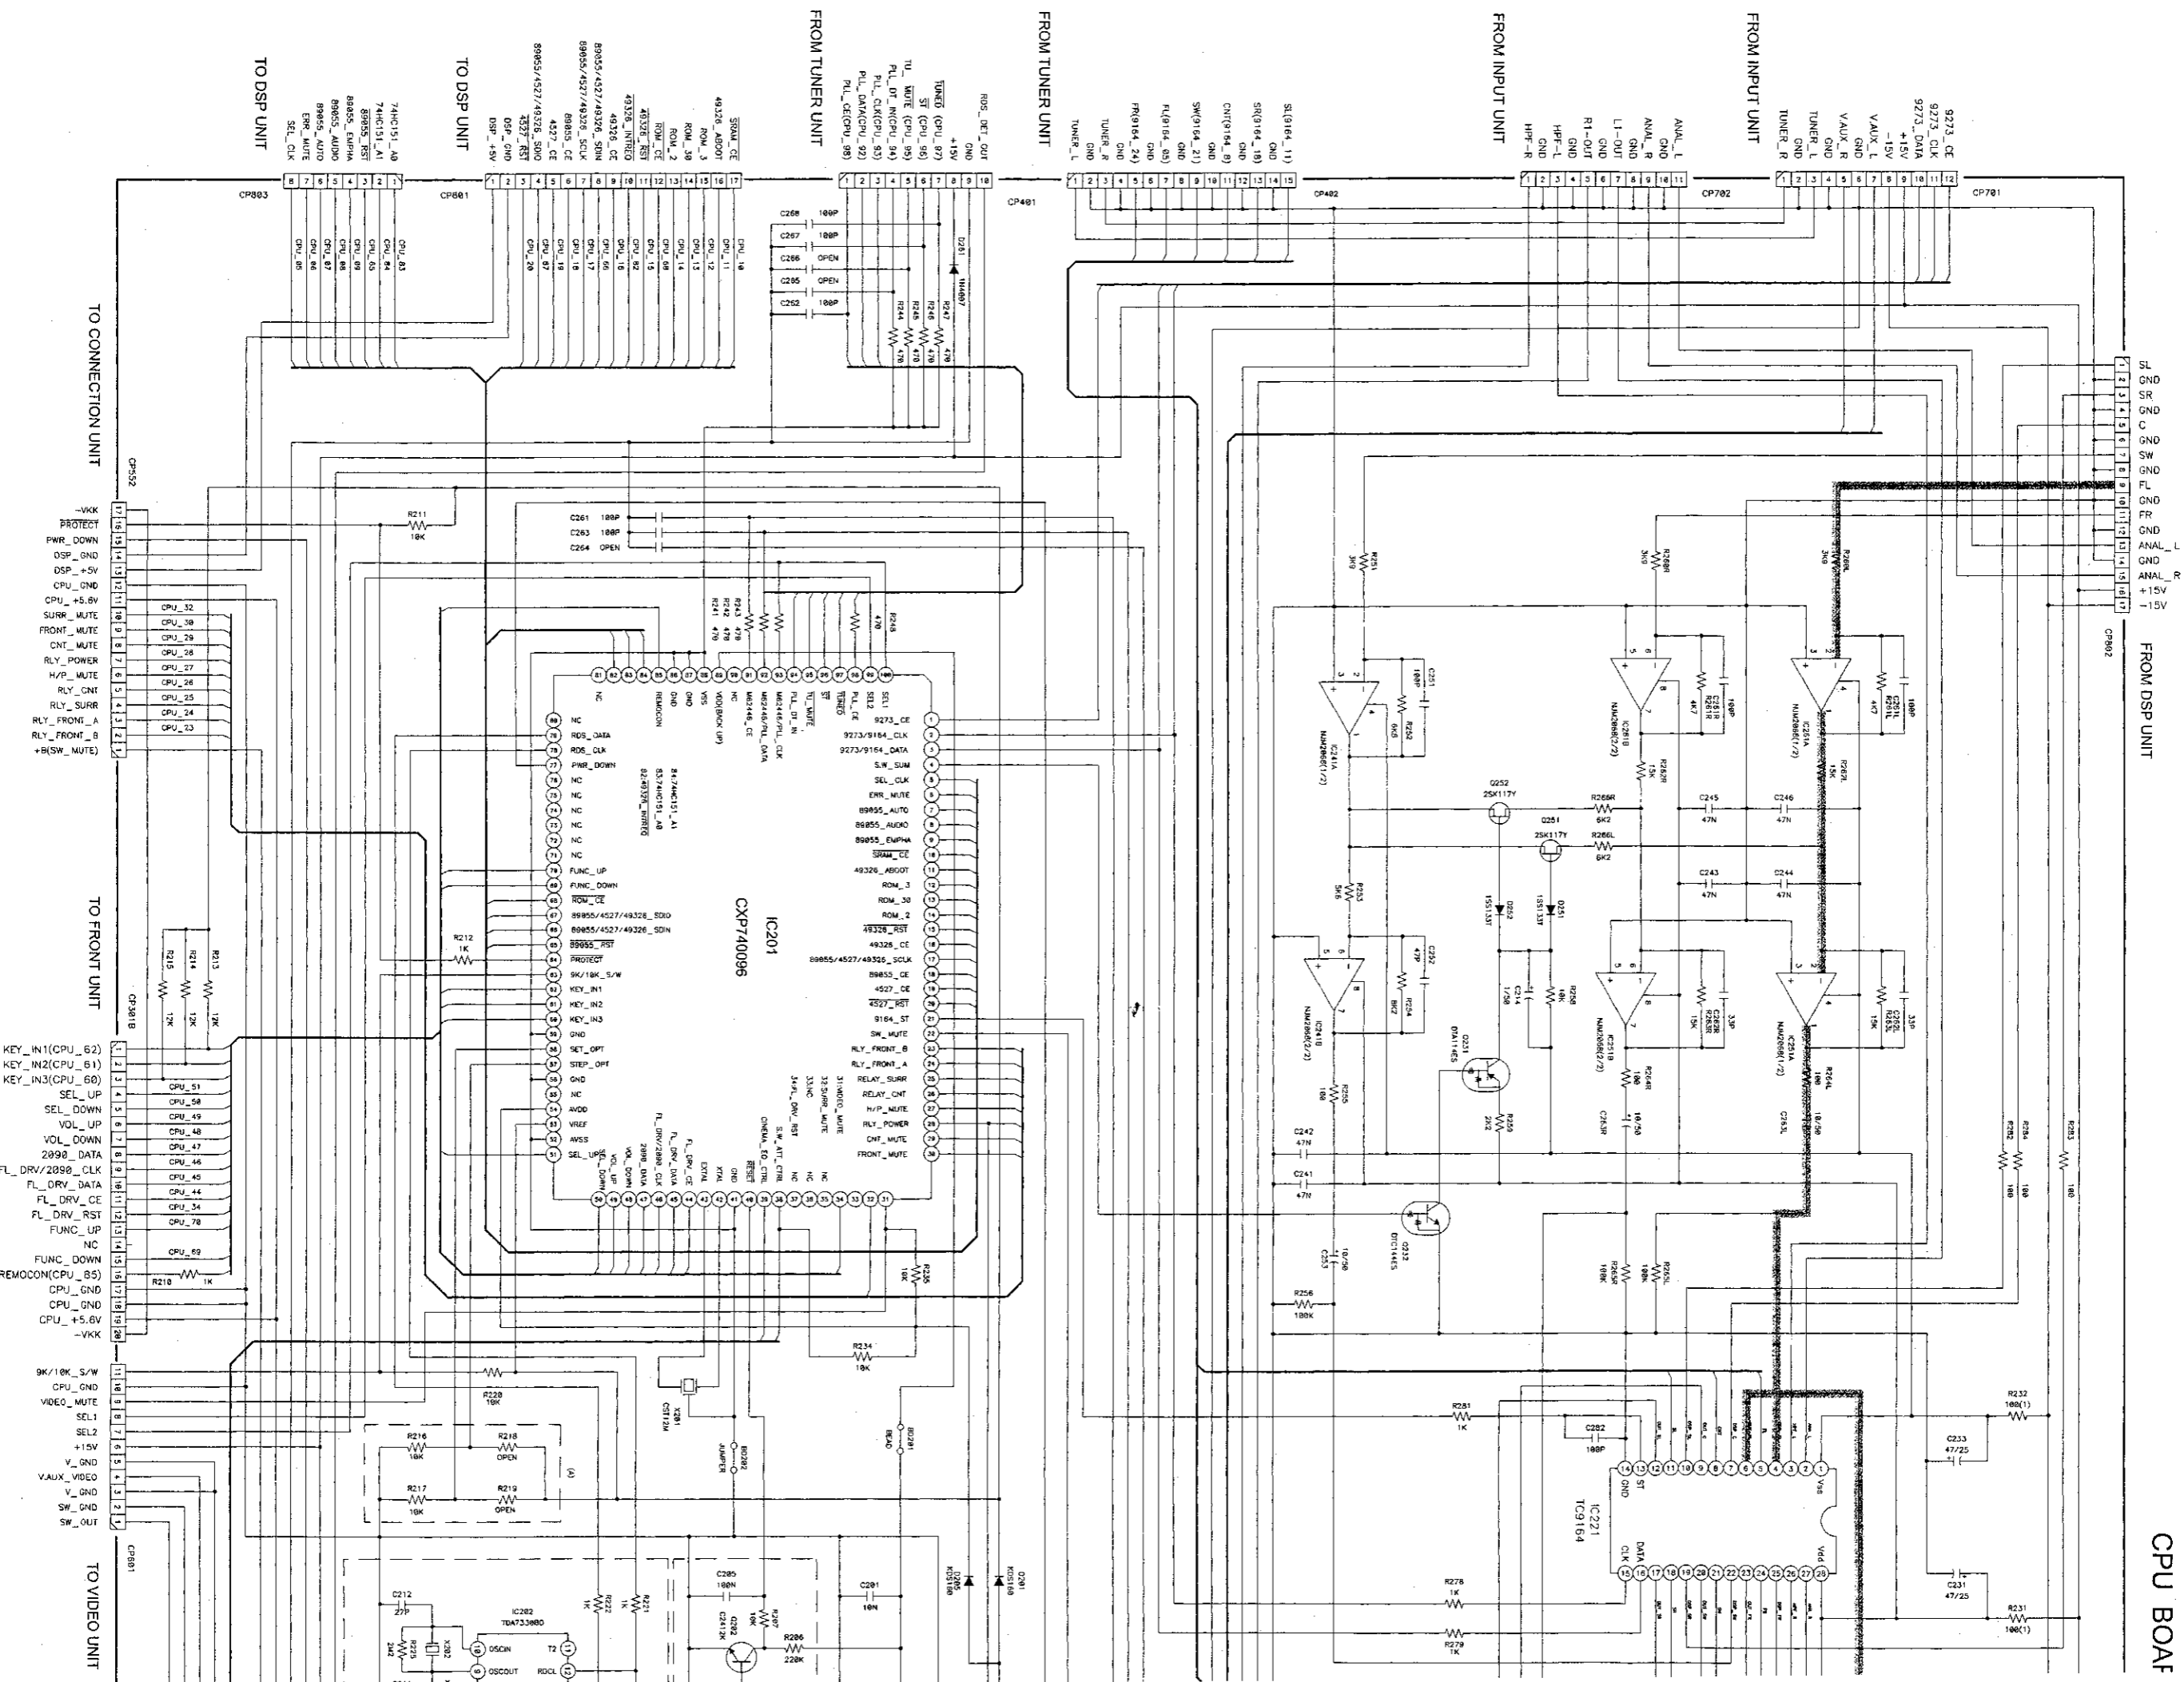

CPU BOARD

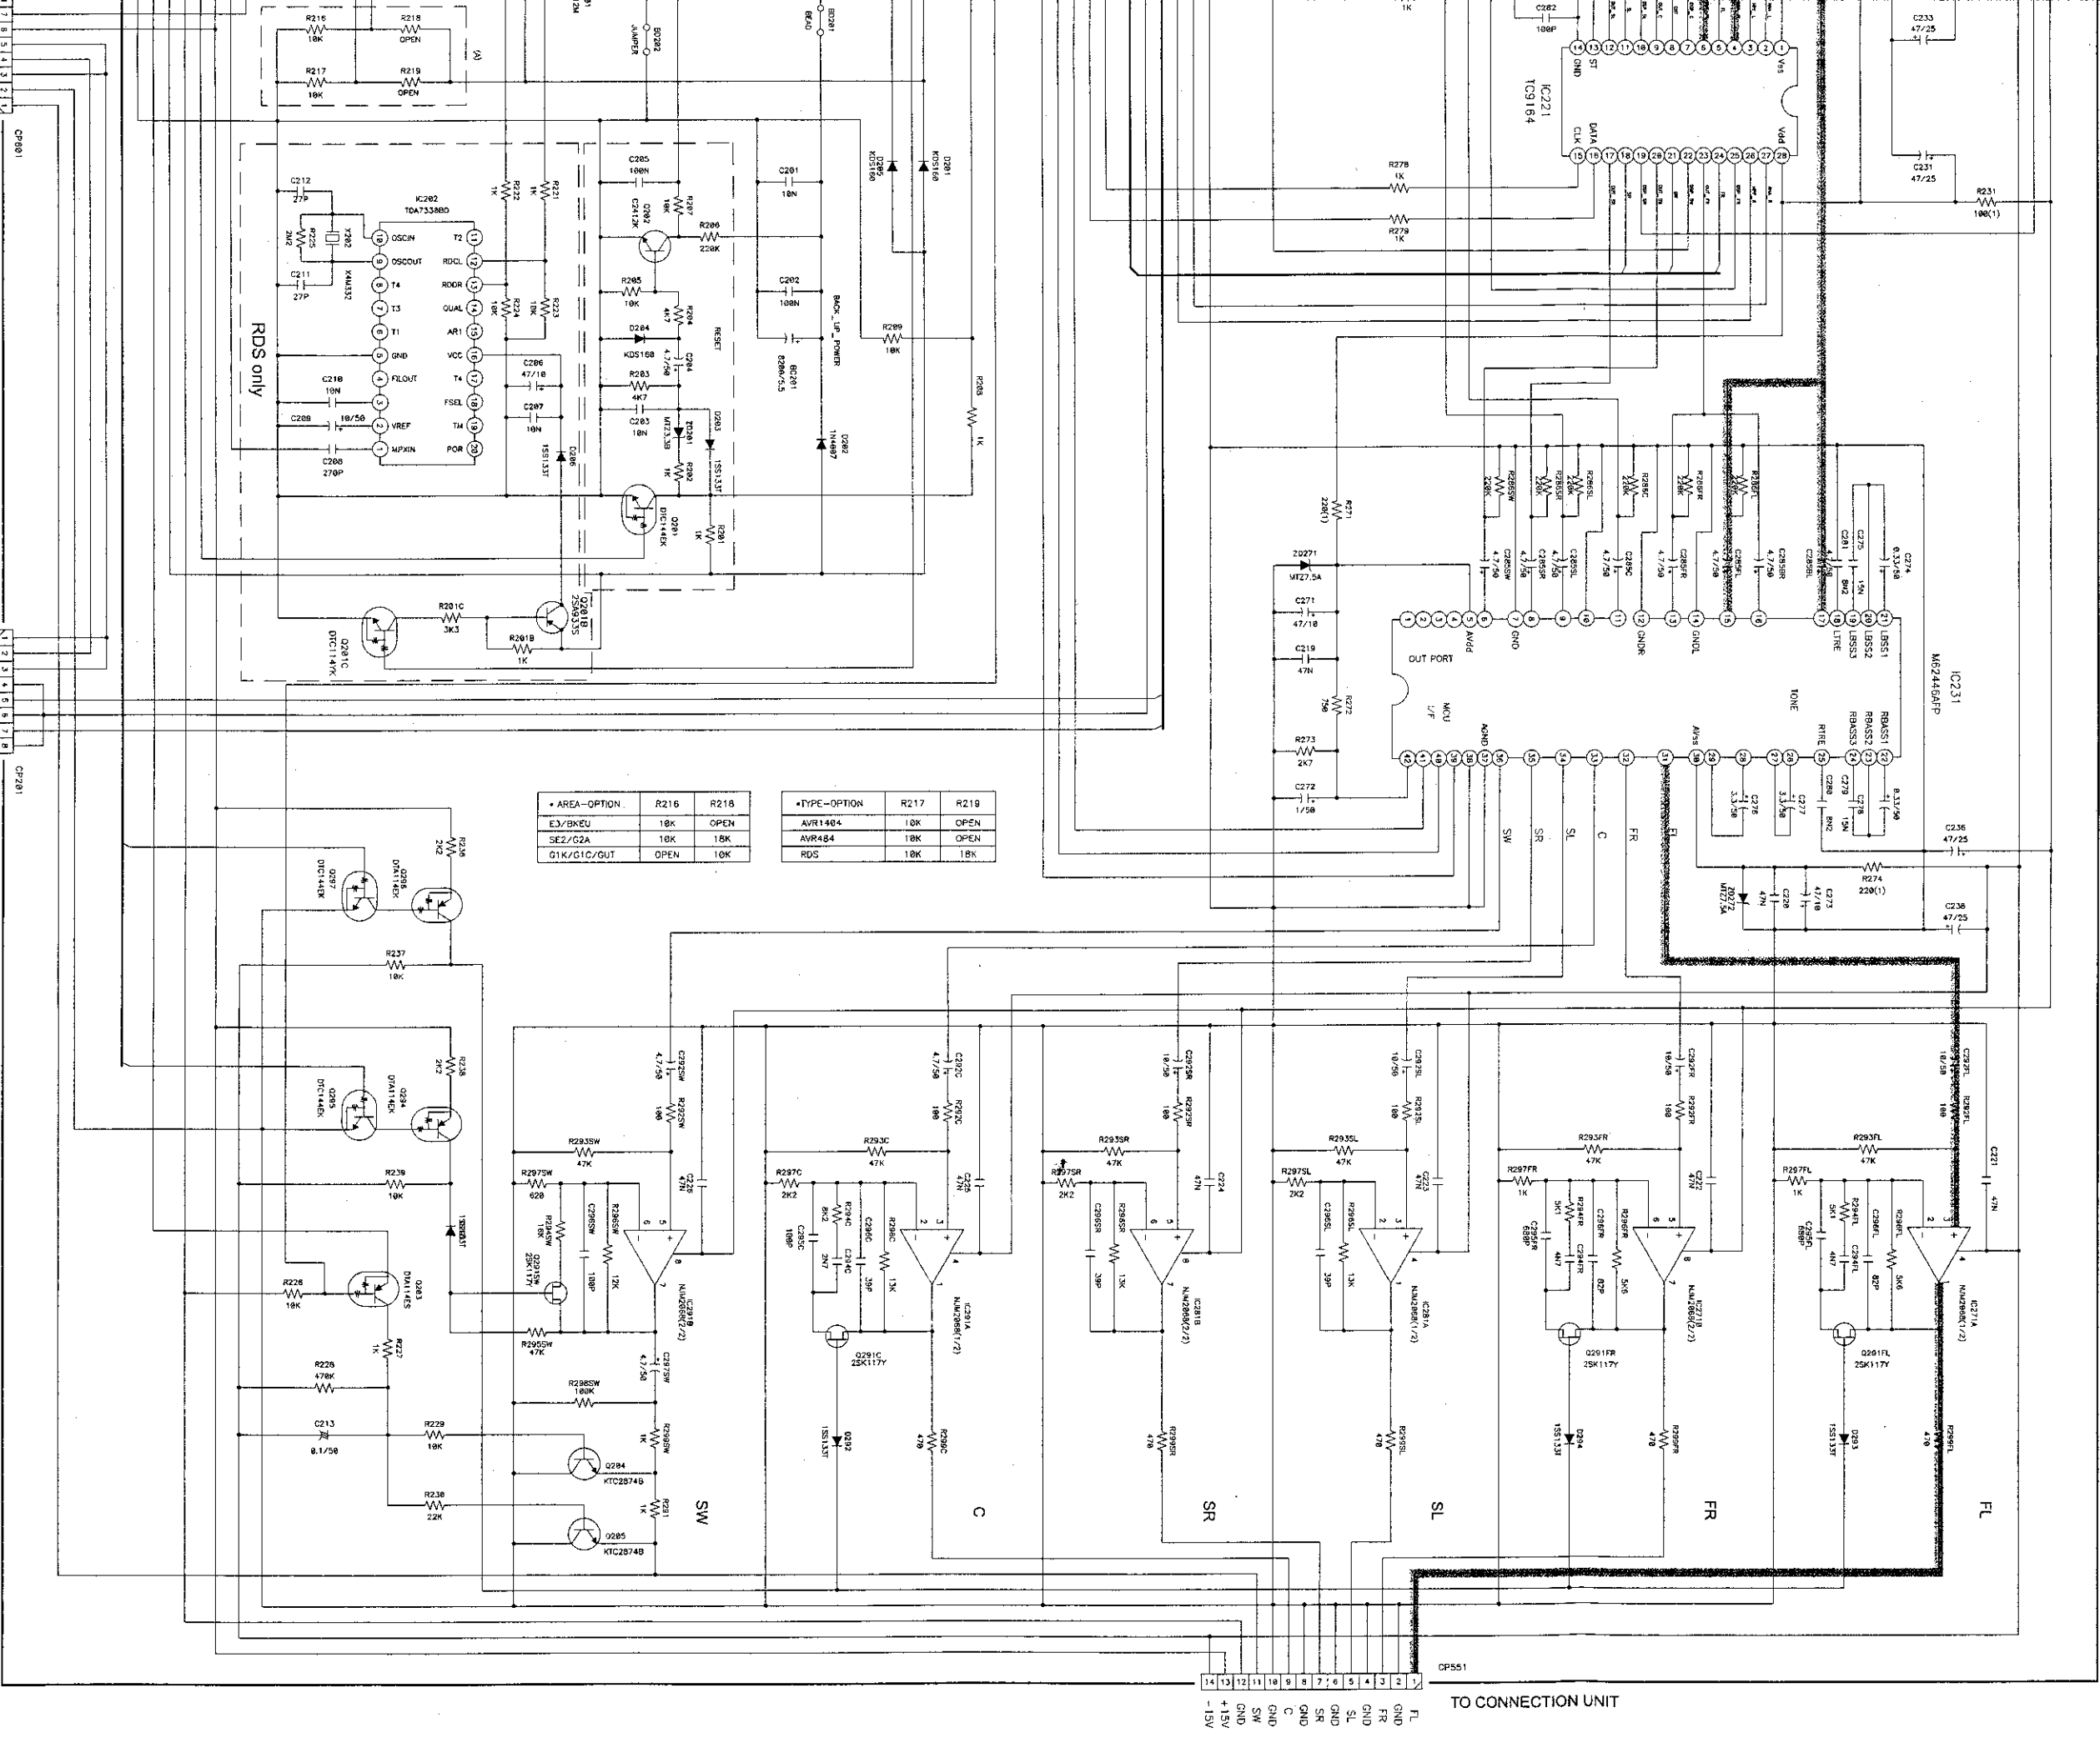


SCHEMATIC DIAGRAMS (3/7)
CPU UNIT


*AREA-OPTION		
E3/BRKU	R216	R218
SE2/G2A	10K	OPEN
G1K/G1C/OUT	OPEN	10K

*TYPE-OPTION		
AVR1404	R217	R219
AVR484	10K	OPEN
RDS	10K	18K

SCHEMATIC

DIAGRAM

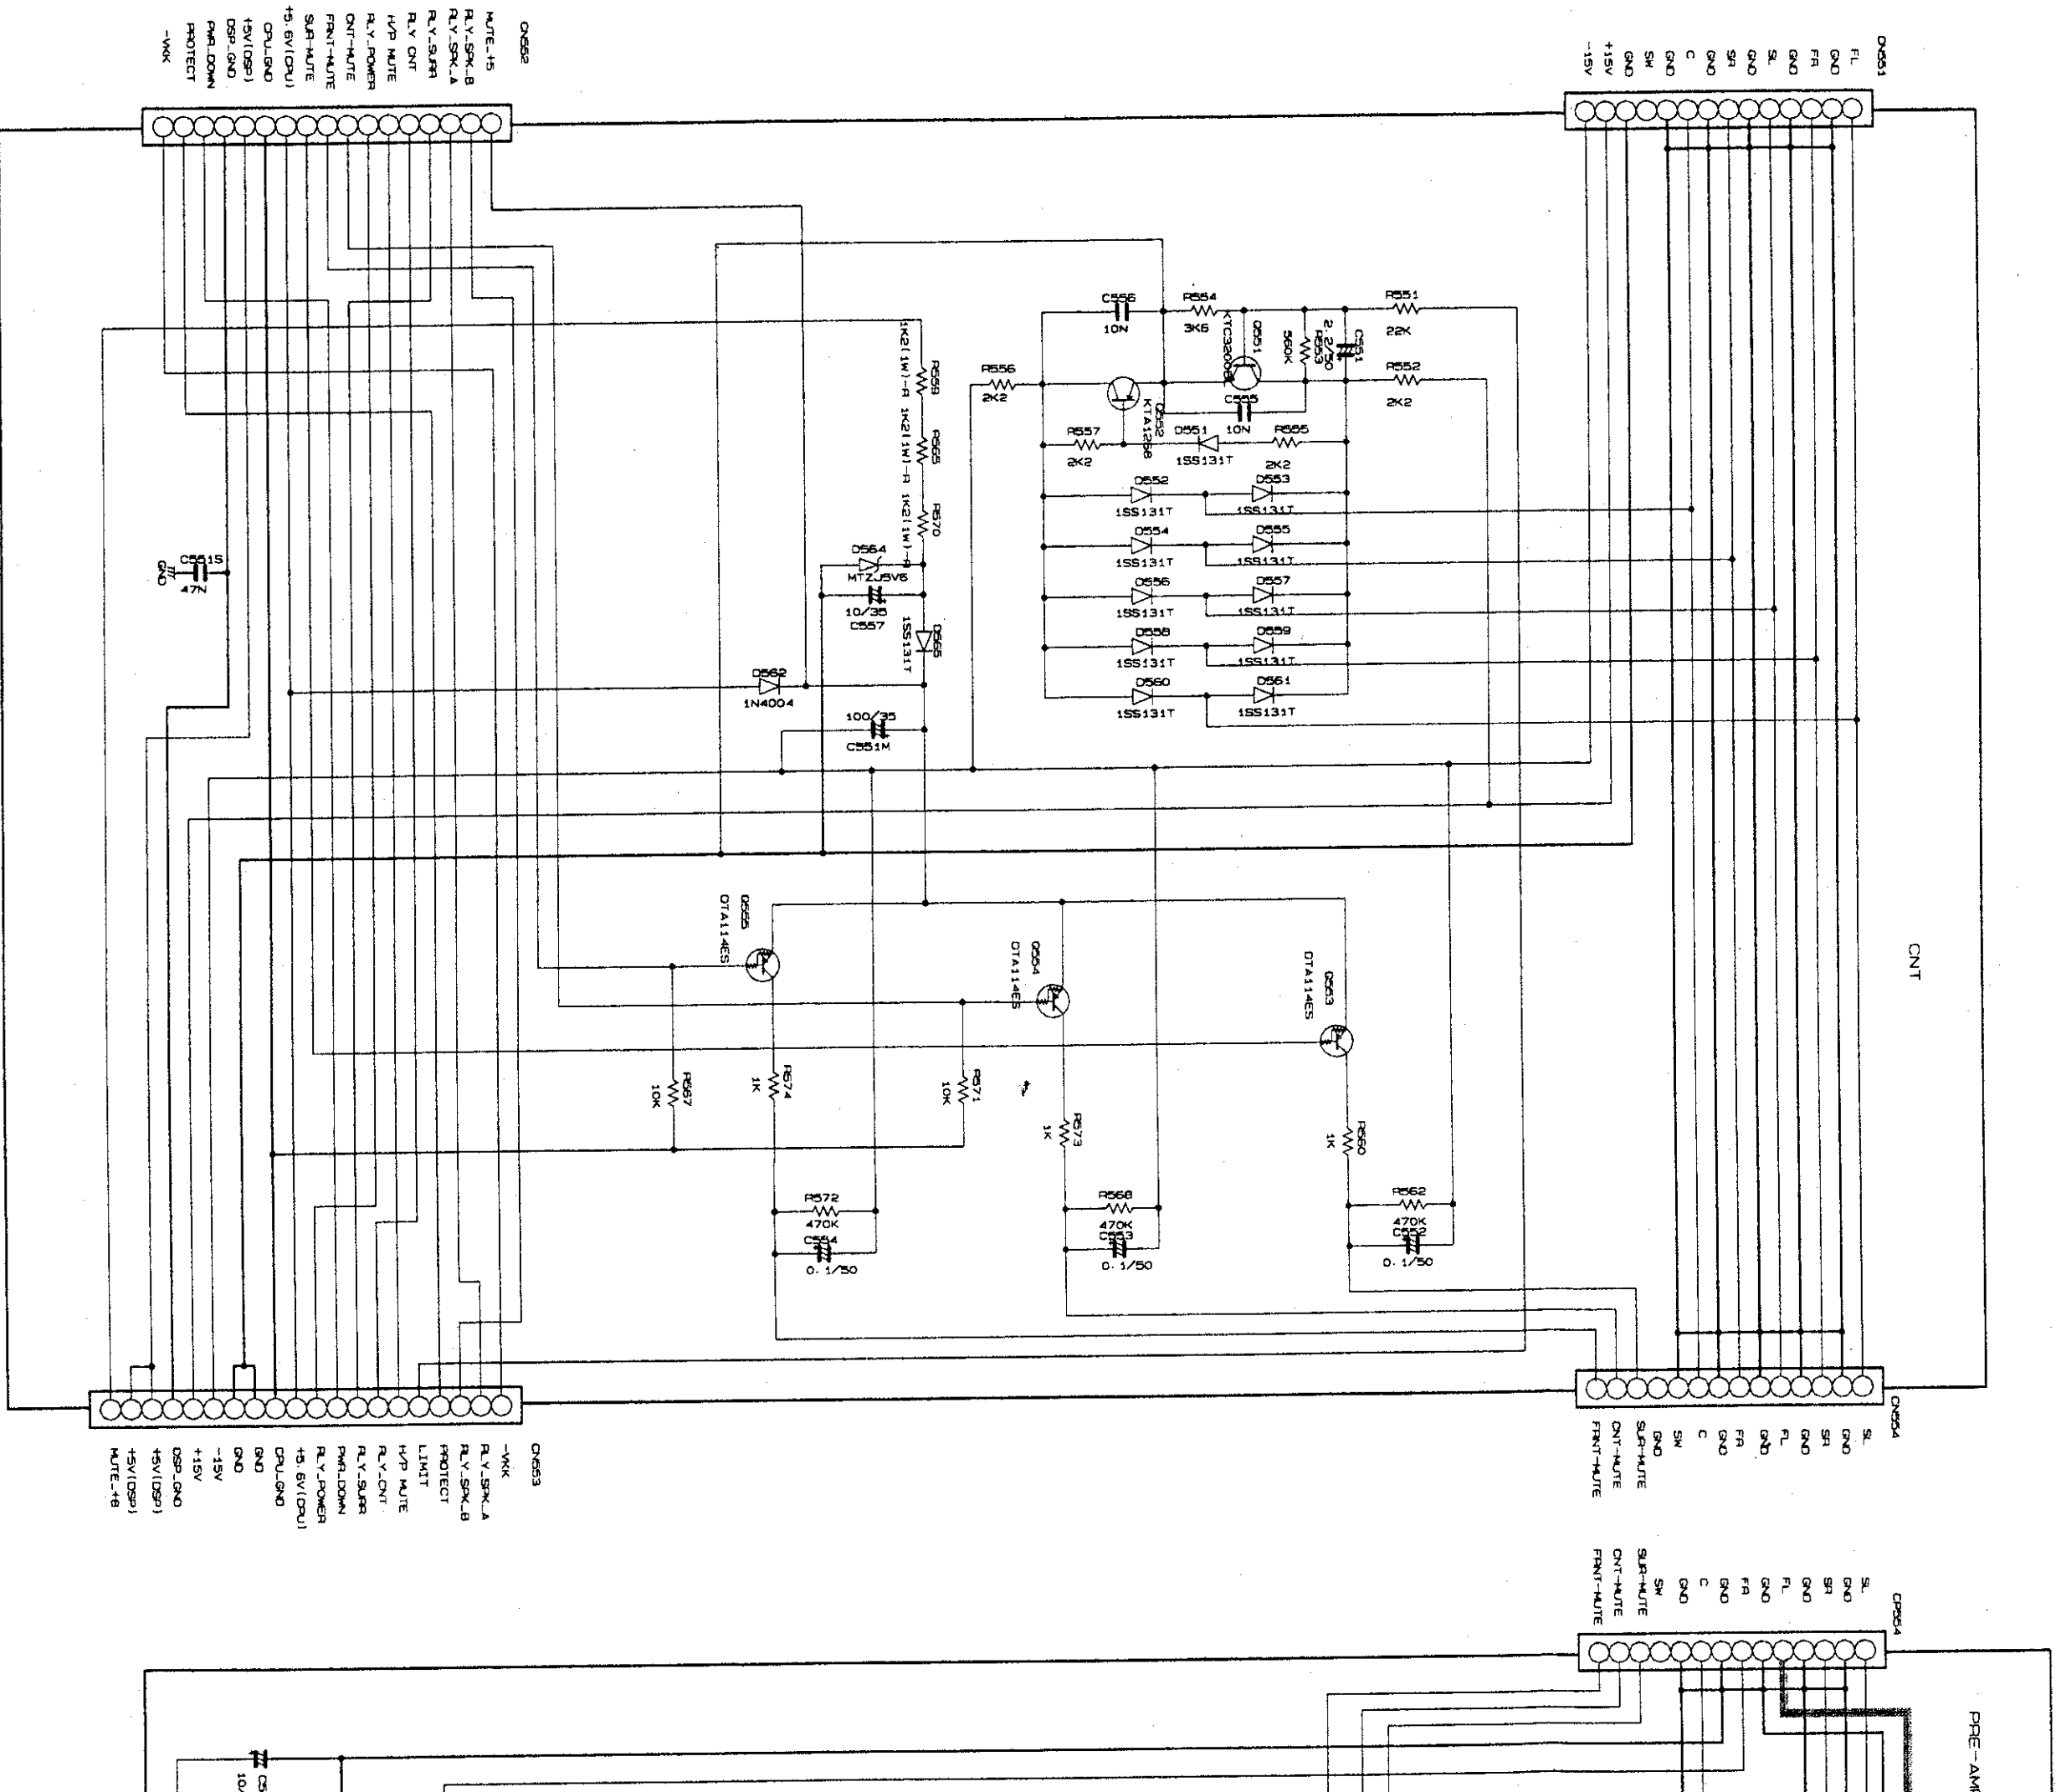

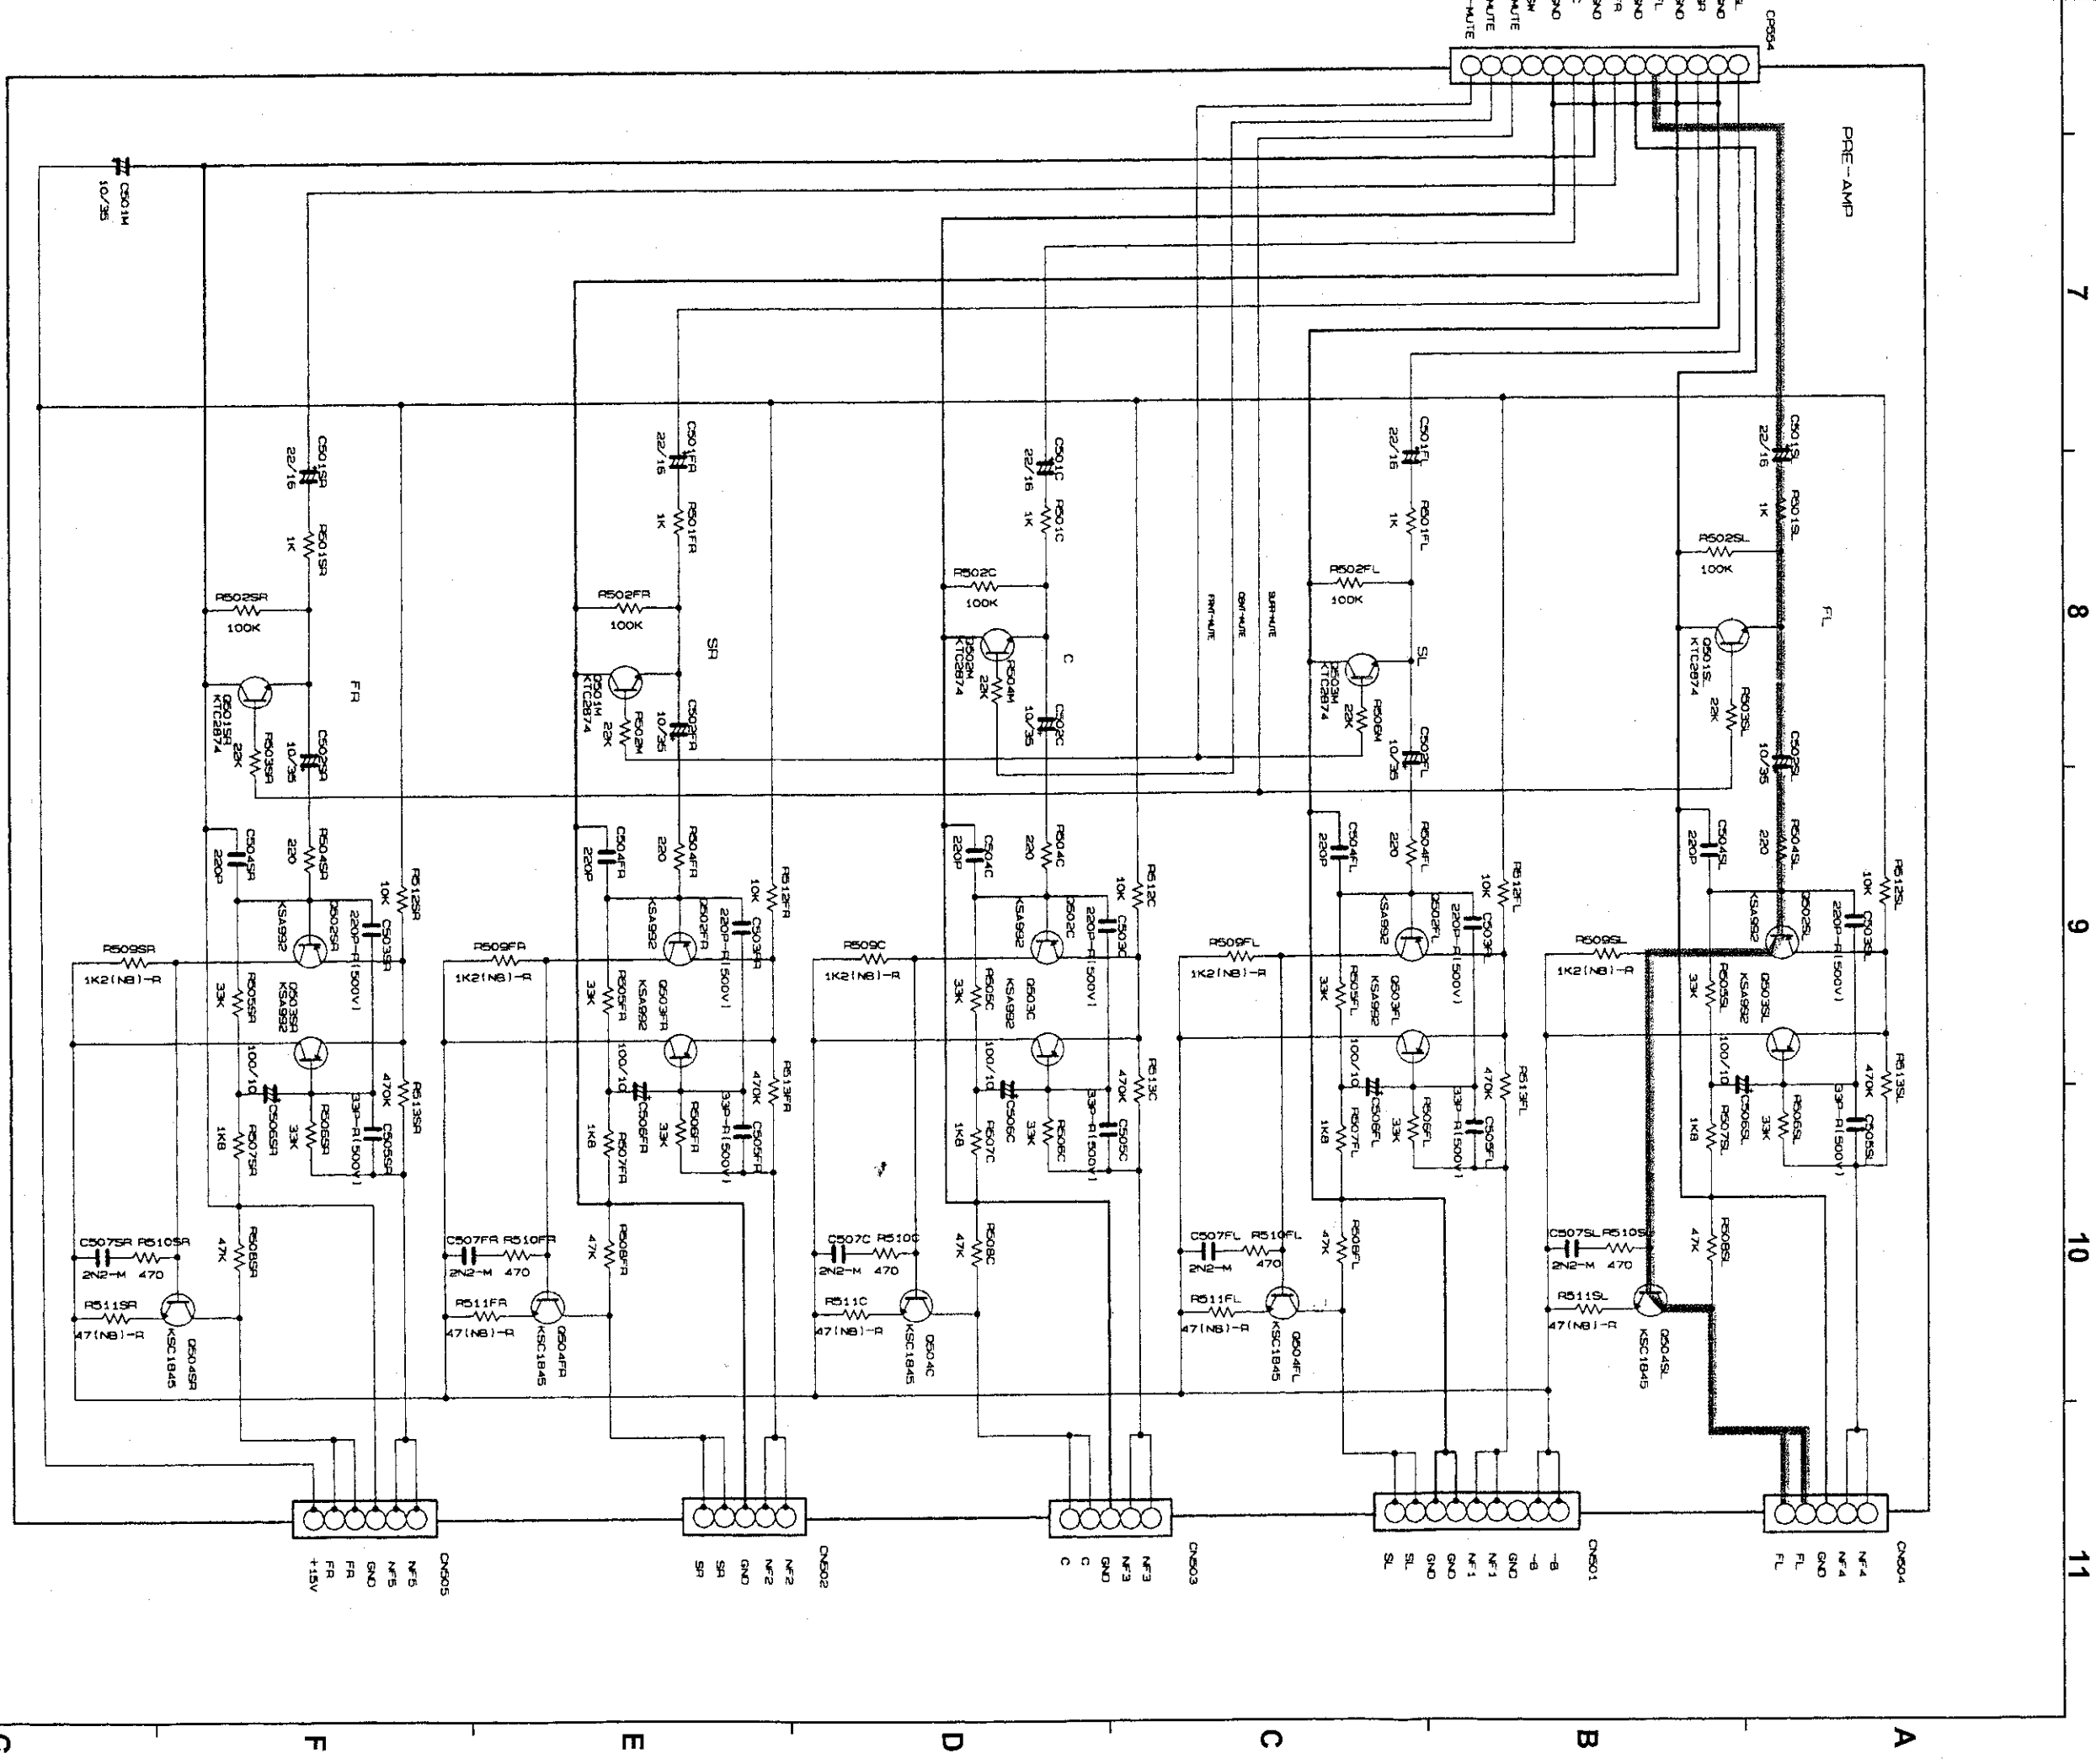

SCHEMATIC DIAGRAMS (4/7)
CNT UNIT
PRE-AMP UNIT

1

2




3

4


5

6

FROM PRE AMP UNIT

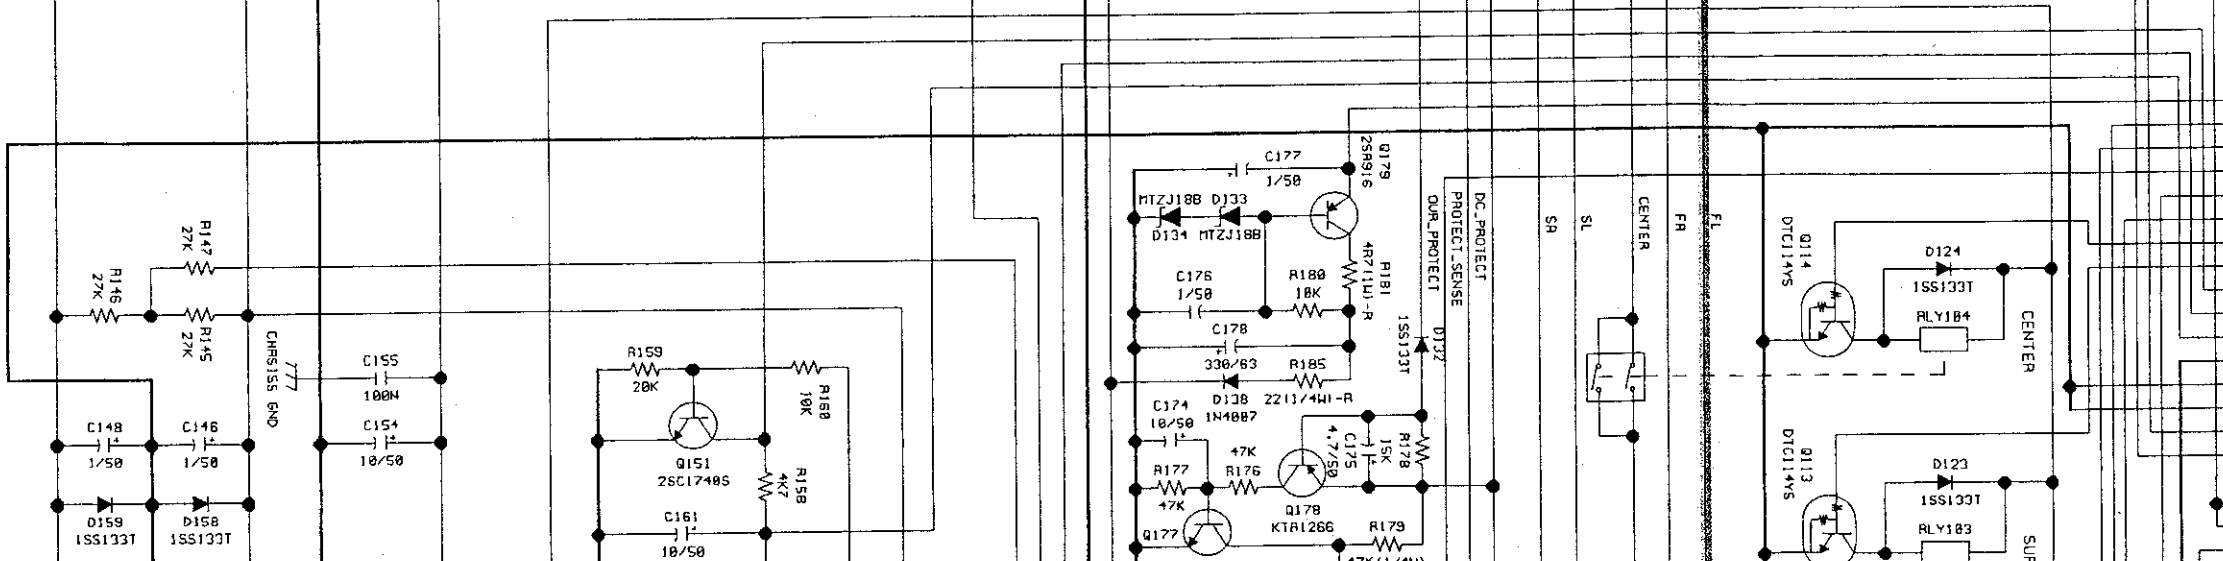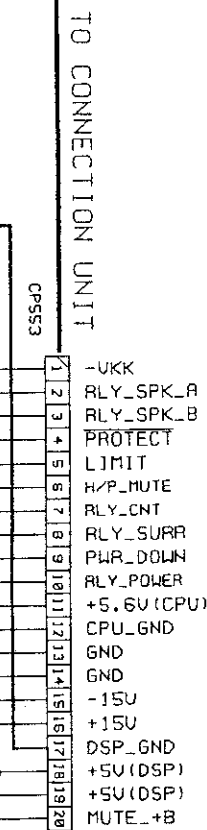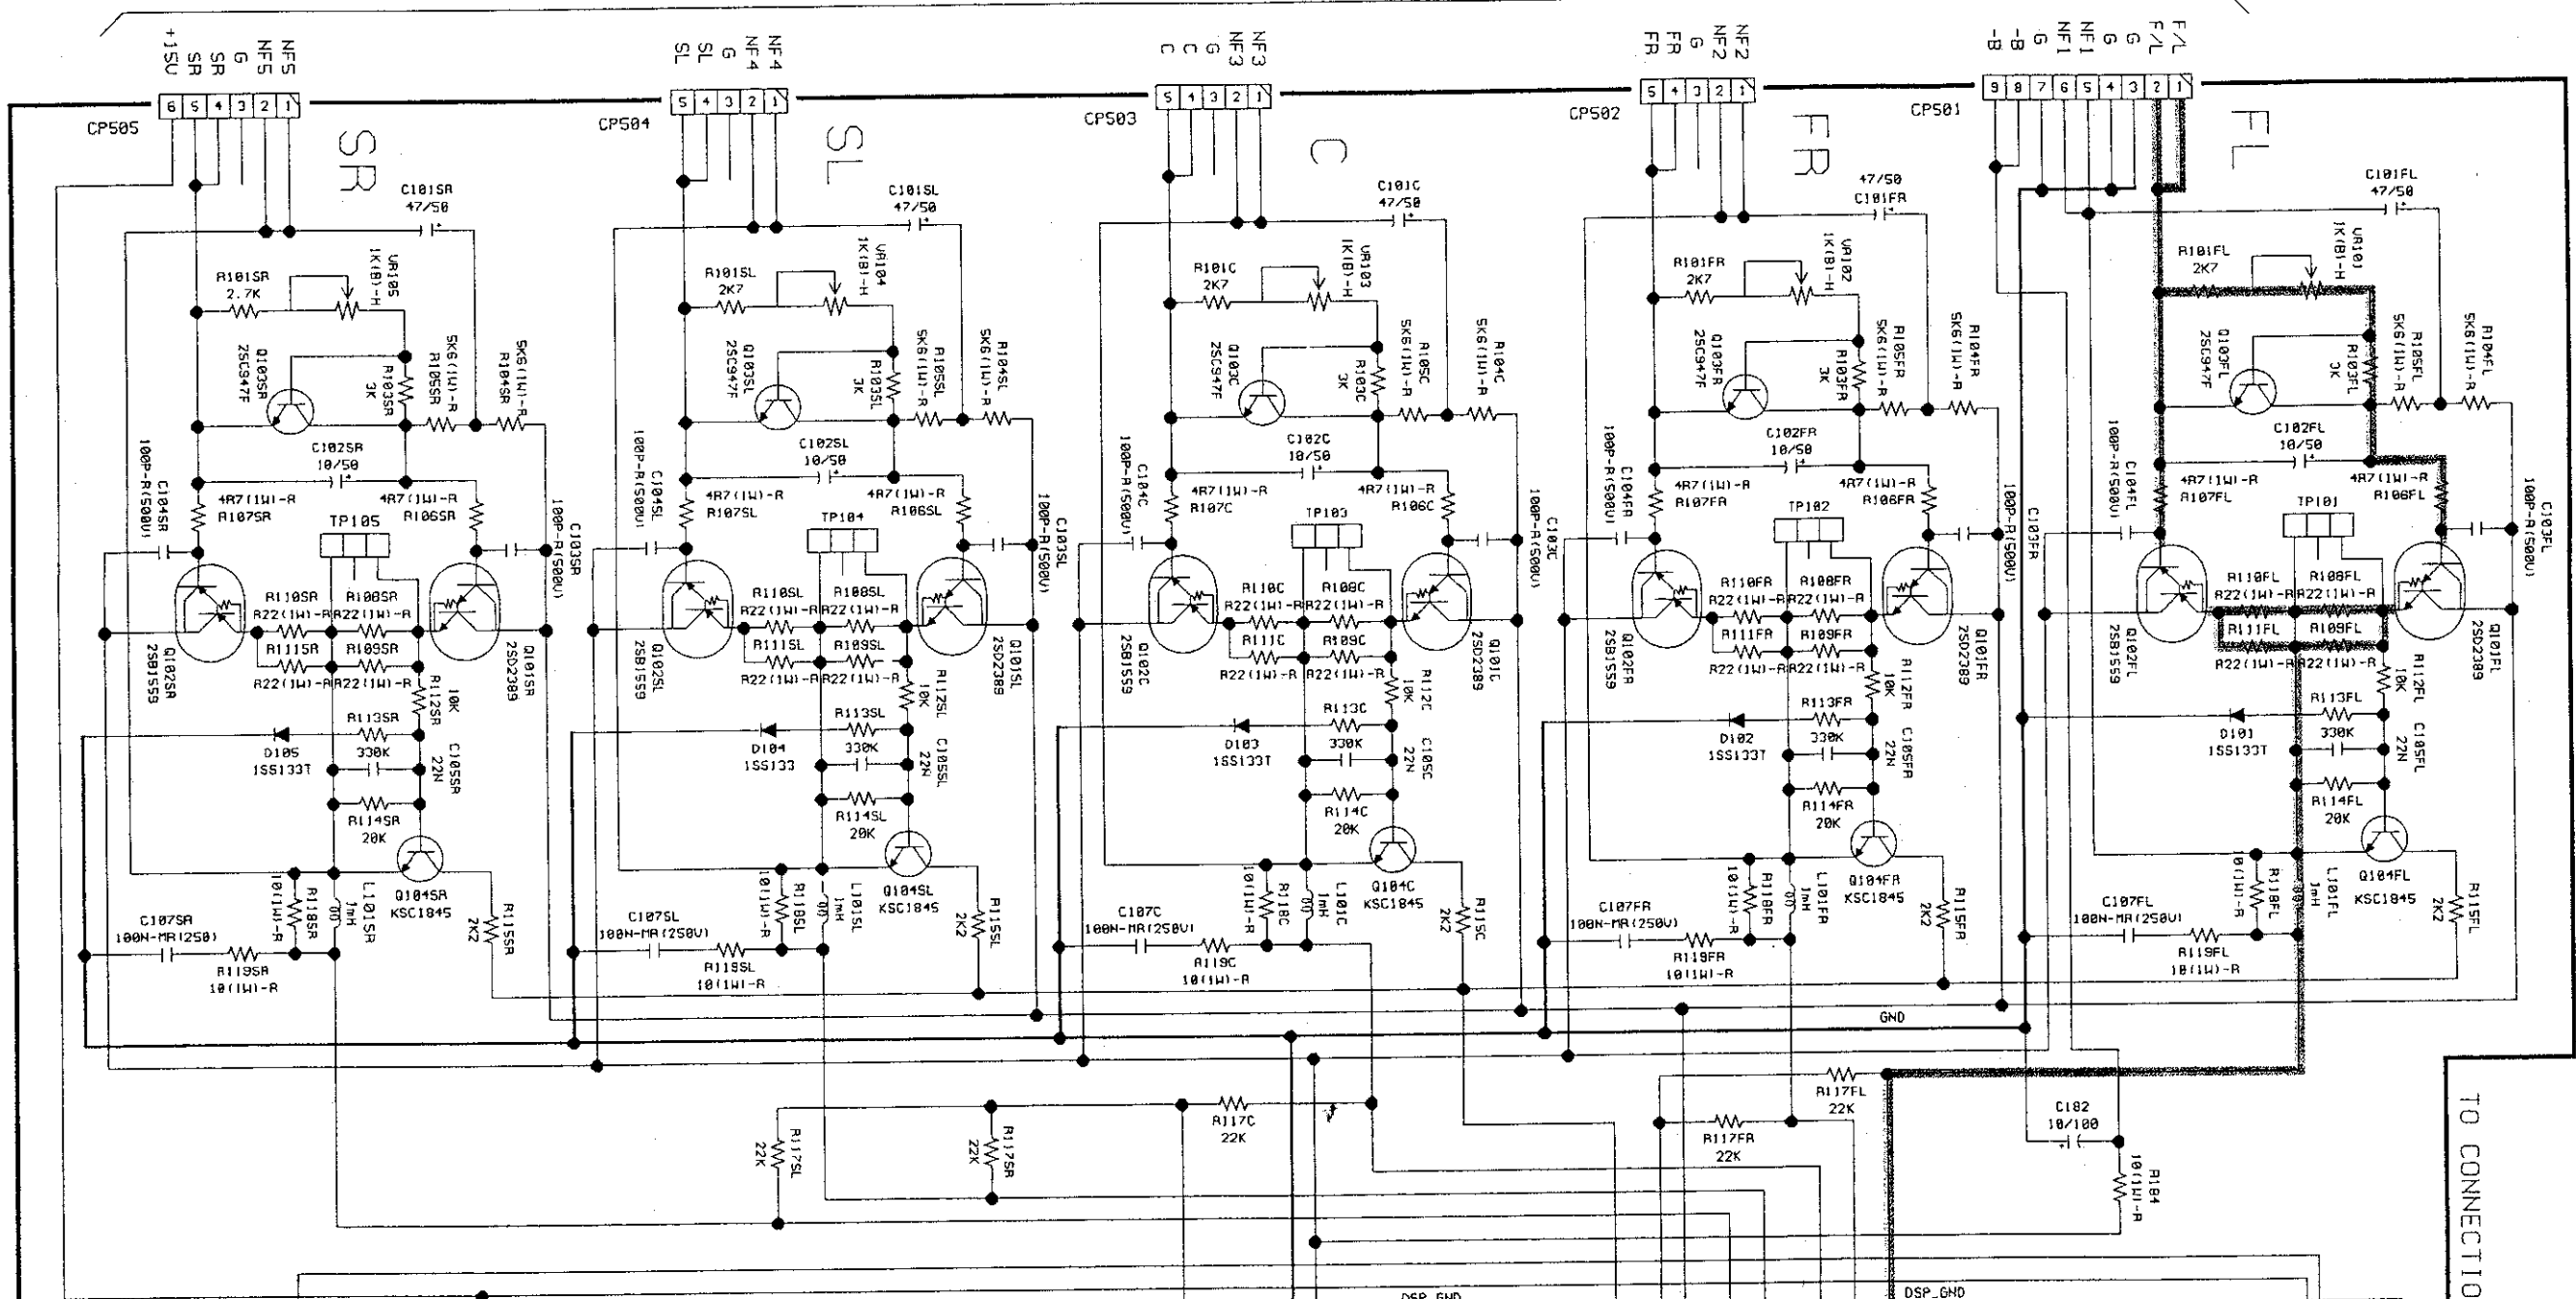

▲ INDICATES SAFETY CRITICAL COMPONENTS TO REDUCE THE RISK OF ELECTRIC SHOCK CURRENT OR RESISTANCE MEASUREMENT CARRIED OUT (EXPOSED PARTS ARE INSULATED FROM THE SUPPLY CIRCUIT THE APPLIANCE RETURNED TO THE CU

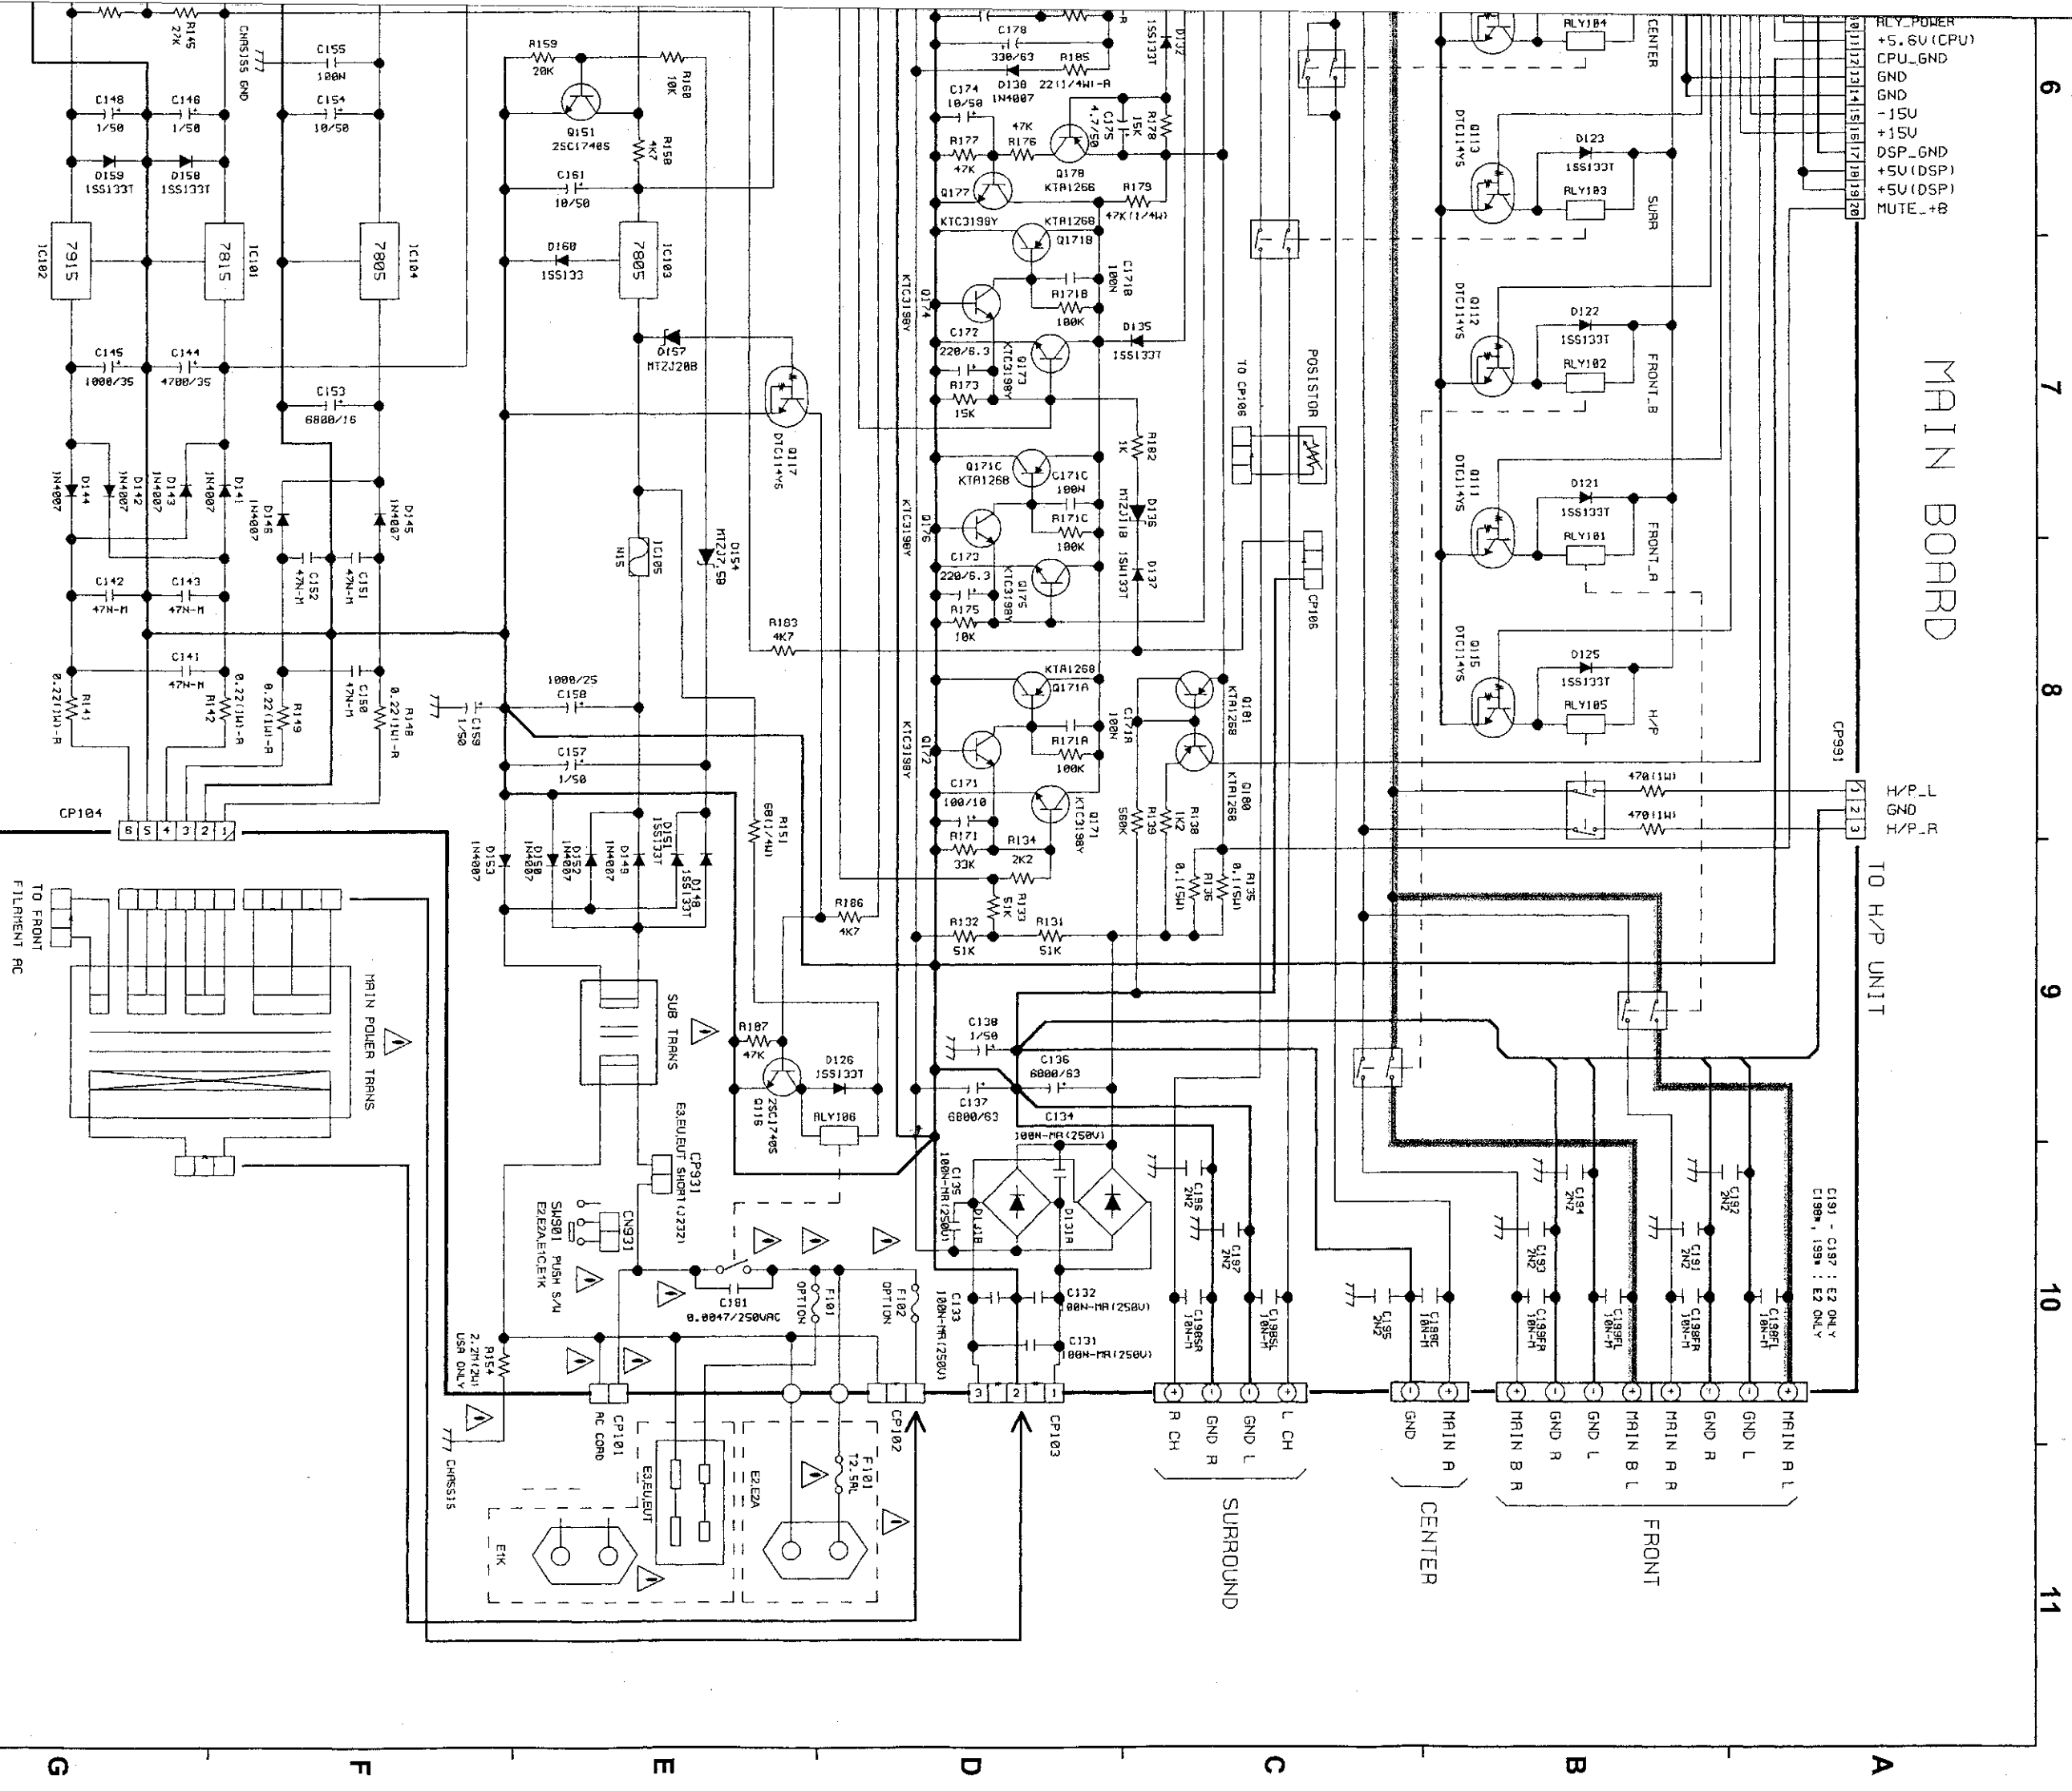

MAIN BOARD

H/P_L
 GND
 H/P_R

TO H/P UNIT

C191 - C197 : E2 ONLY
 C198* , 199* : E2 ONLY


SAFETY CRITICAL COMPONENTS,
 RISK OF ELECTRIC SHOCK, LEAKAGE
 CURRENT, AND/OR HEAT DURING
 OPERATION OF MEASUREMENTS SHALL BE
 CONSIDERED. EXPOSED PARTS ARE ACCEPTABLY
 WITHIN THE SUPPLY CIRCUIT) BEFORE
 RETURNED TO THE CUSTOMER.

AVR-1404	F101	F102
E3/EU/EUT	8R/125U	8R/125U
E2	T2.5RL	T3.15RL
E1G	X	T3.15RL
E2A/E1K	T2.5RL	T3.15RL

SCHEMATIC DIAGRAMS (5/7)
MAIN UNIT

SCHEMATIC DIAGRAMS (617)

1 2 3 4 5 6

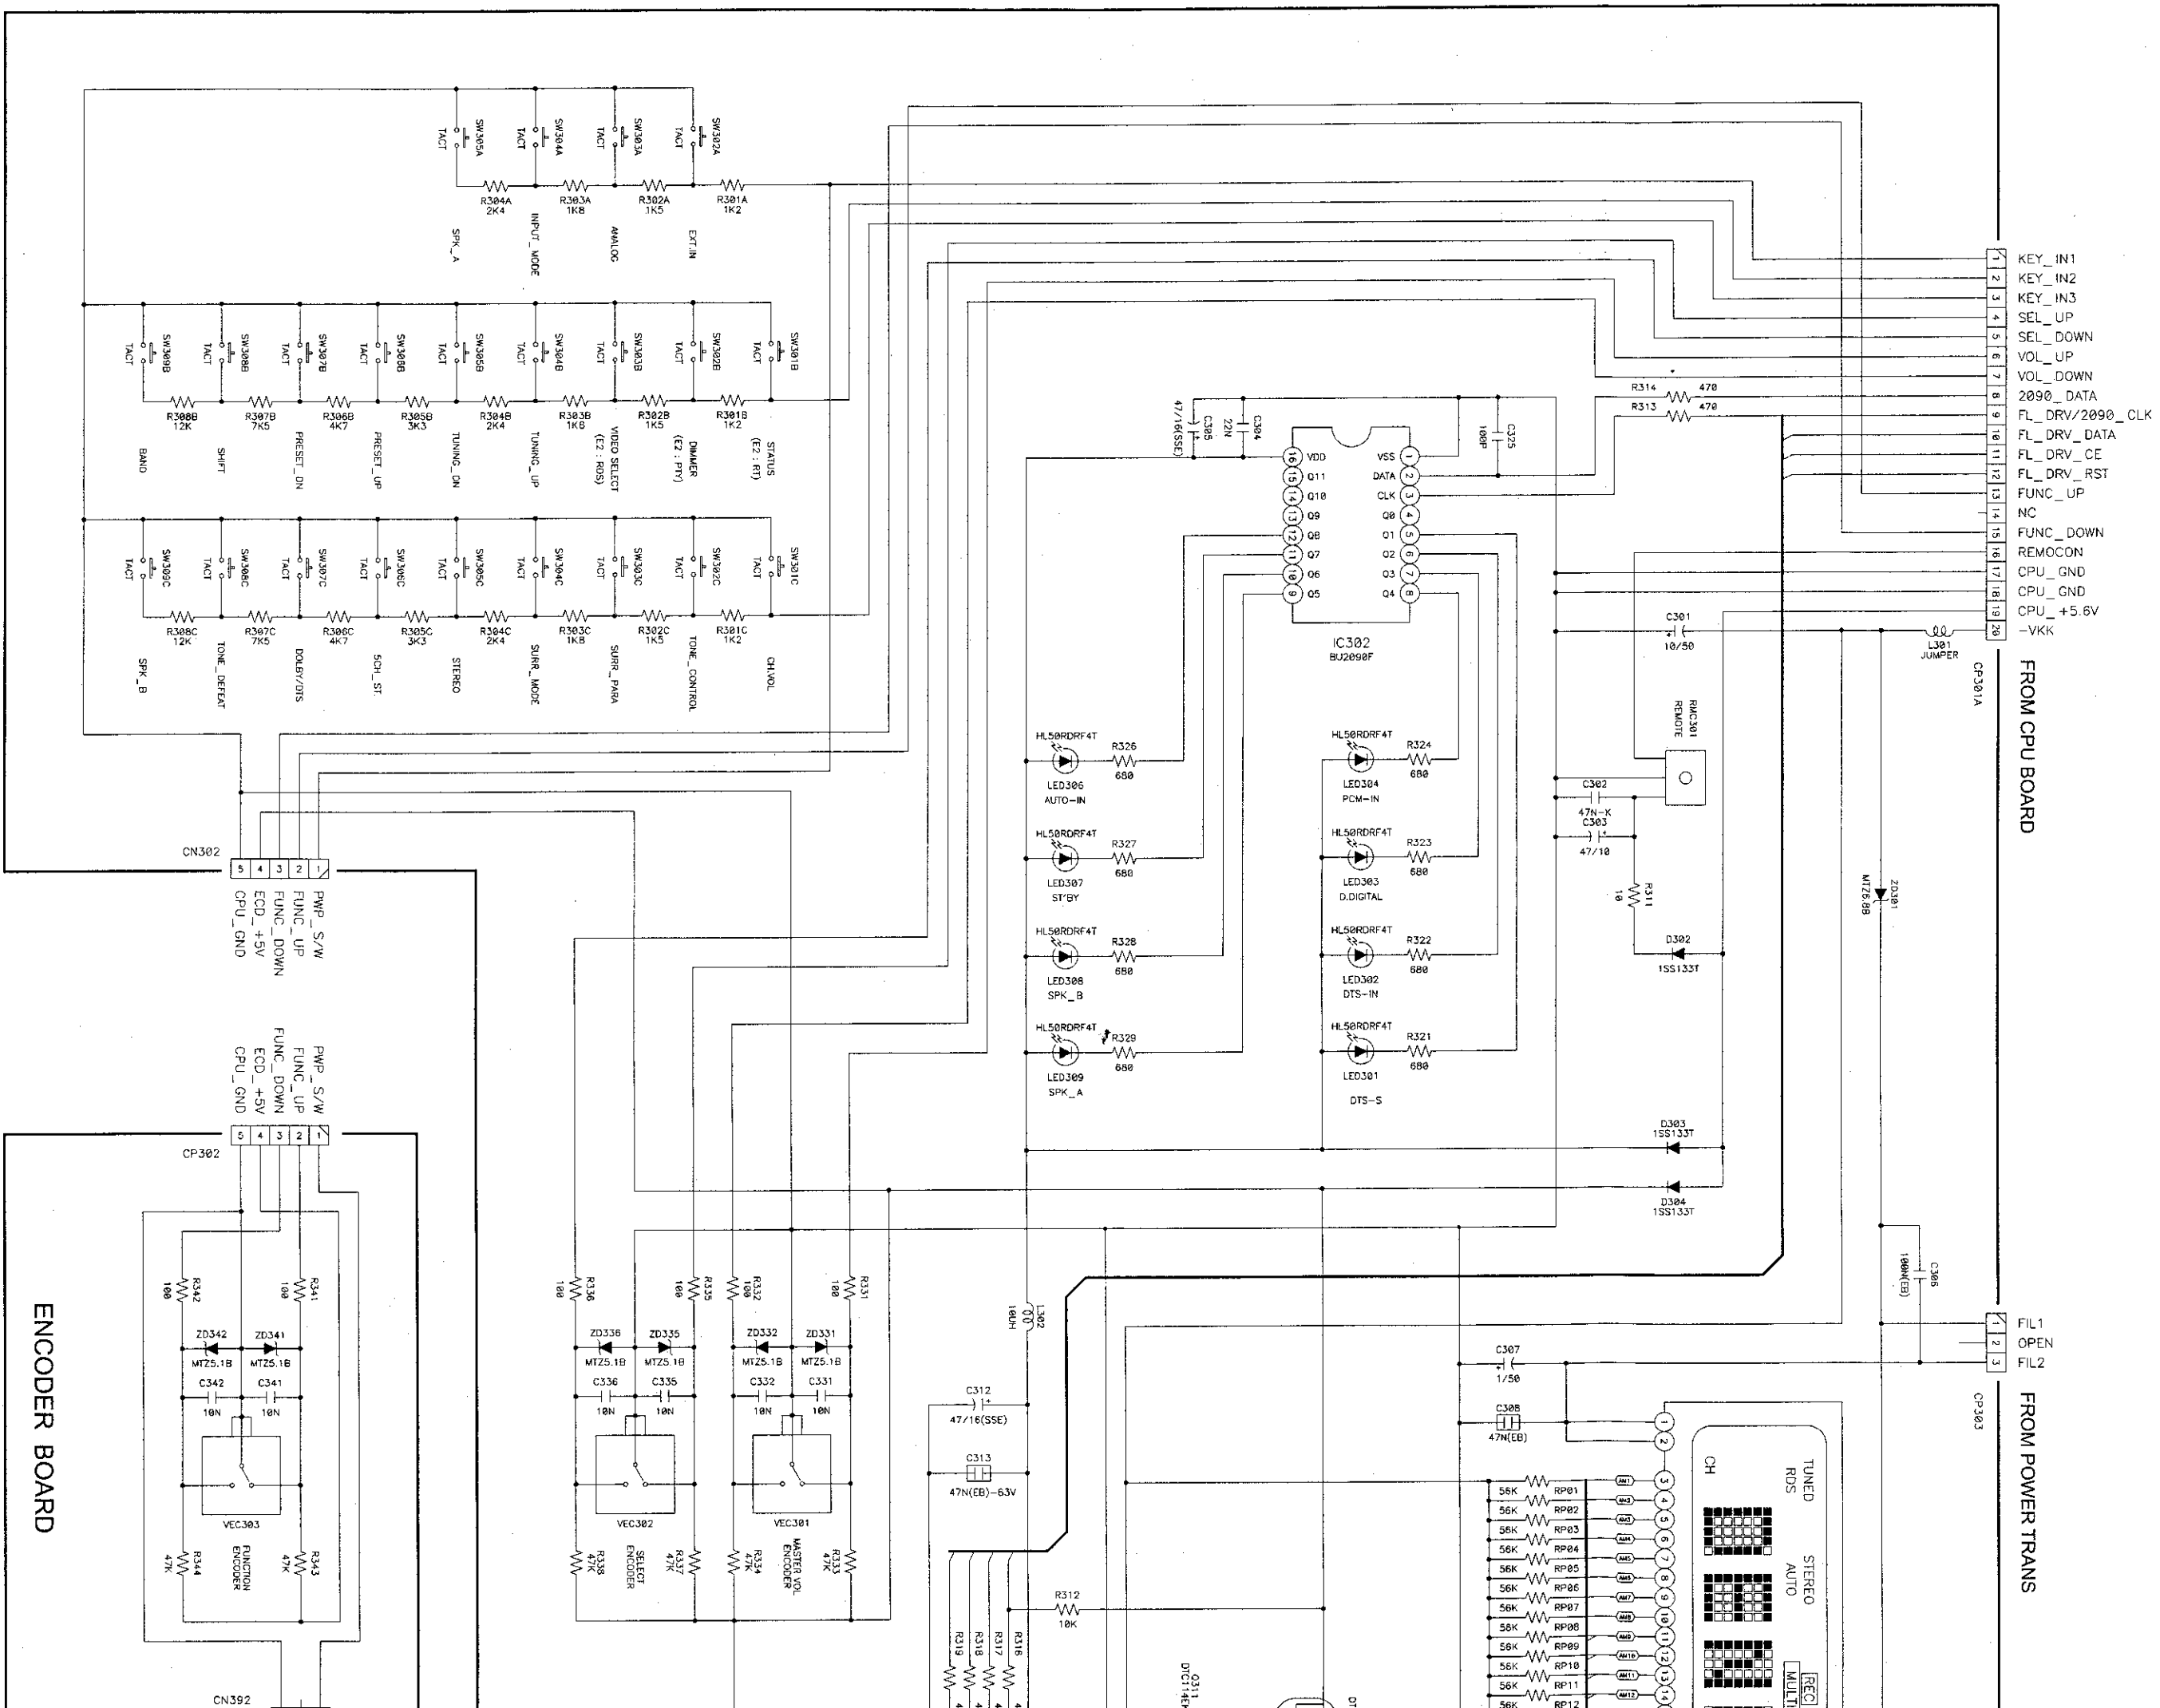

- KEY_IN1
- KEY_IN2
- KEY_IN3
- SEL_UP
- SEL_DOWN
- VOL_UP
- VOL_DOWN
- 2090_DATA
- FL_DRV/2090_CLK
- FL_DRV_DATA
- FL_DRV_CE
- FL_DRV_RST
- FUNC_UP
- NC
- FUNC_DOWN
- REMOCON
- CPU_GND
- CPU_GND
- CPU_+5.6V
- VKK

FROM CPU BOARD

FIL1
OPEN
FIL2

FROM POWER TRANS

ENCODER BOARD

7

8






9

10


11

TRANS

FRONT BOARD

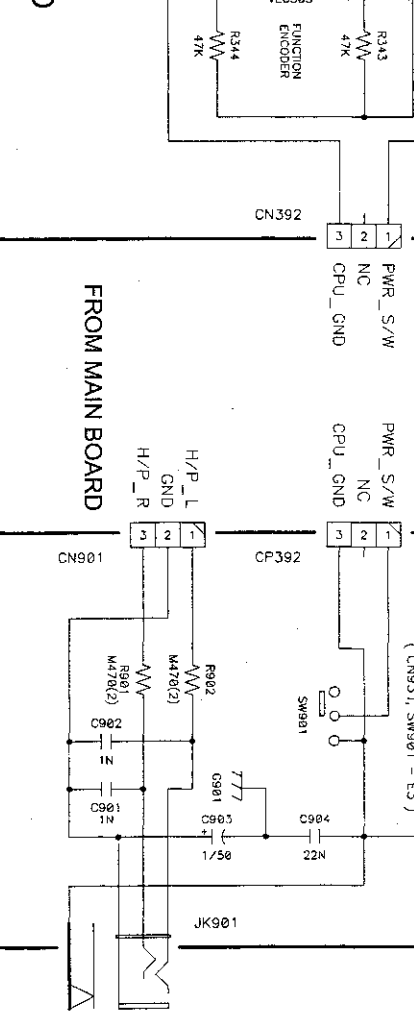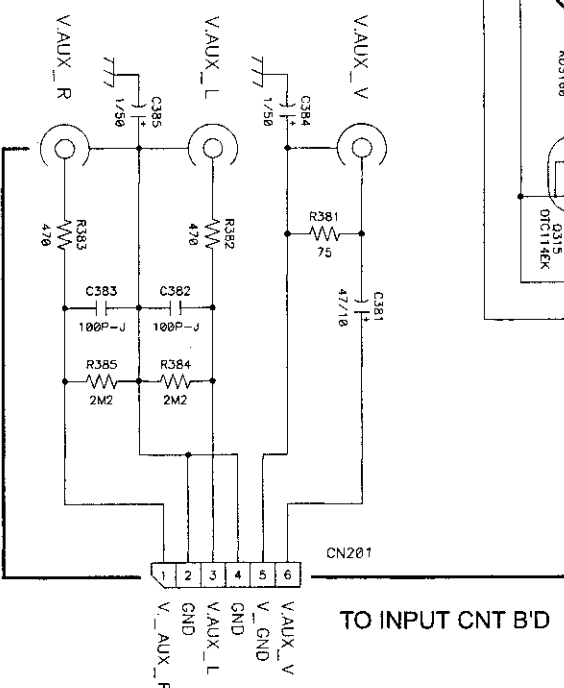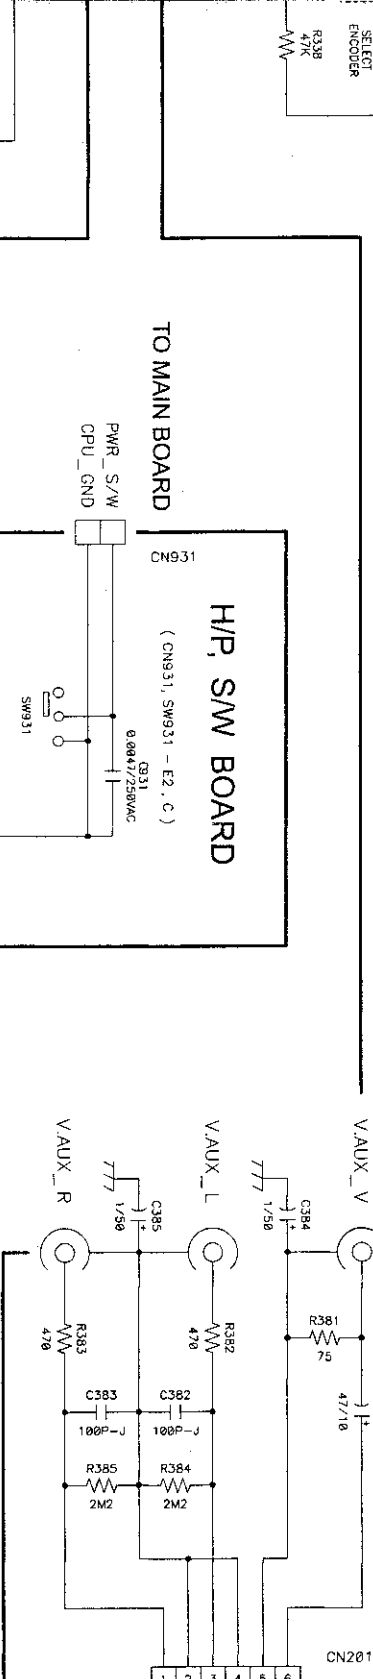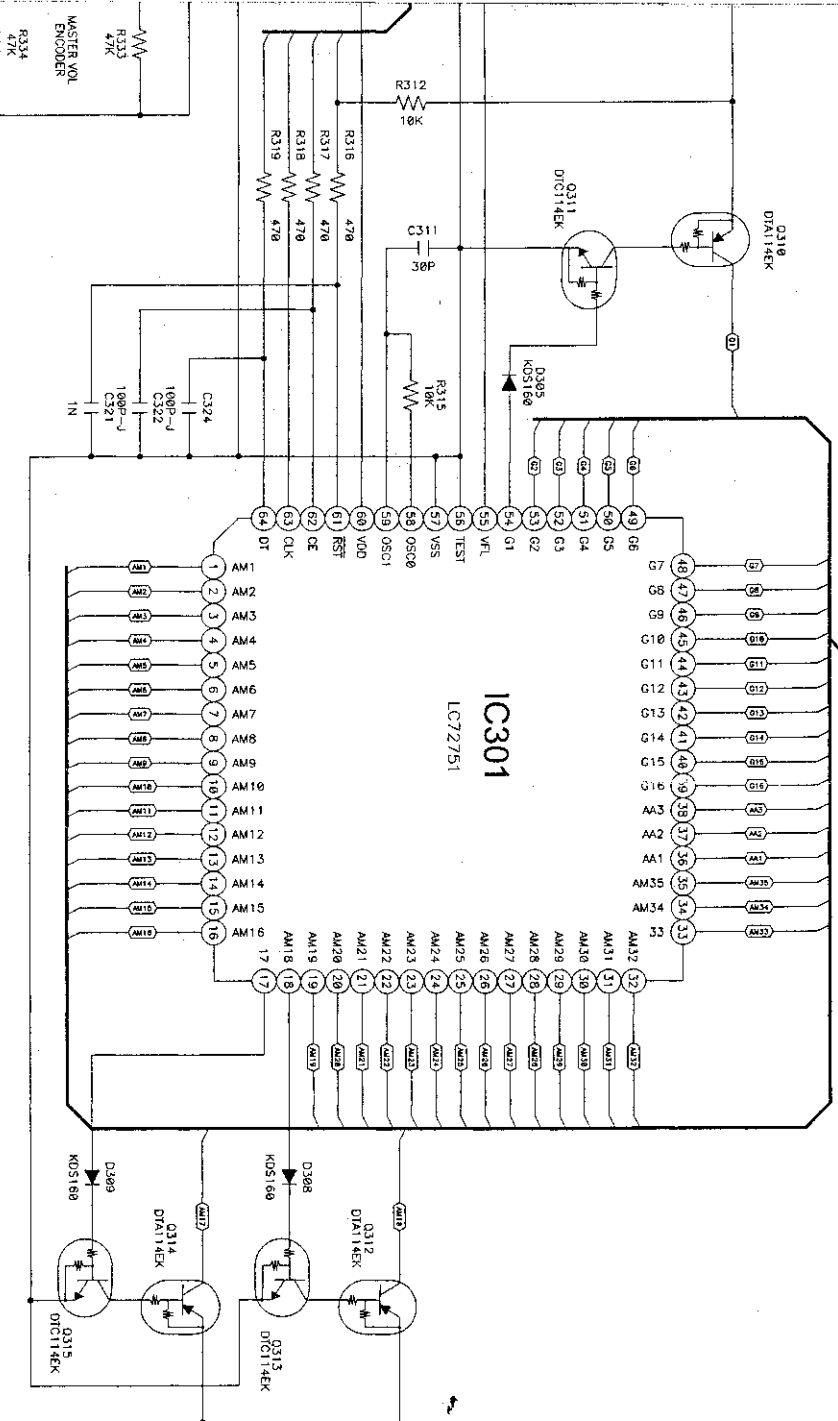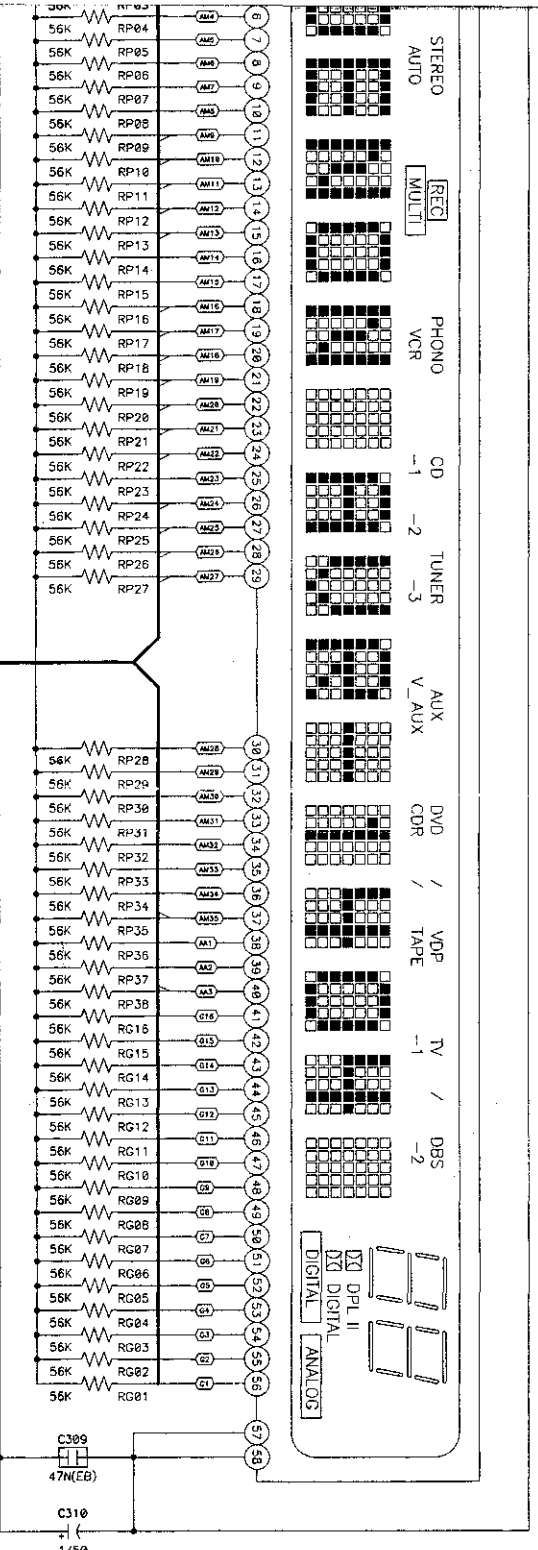

SCHEMATIC DIAGRAMS (6/7)
FRONT UNIT
ENCODER UNIT
H/P & SW UNIT

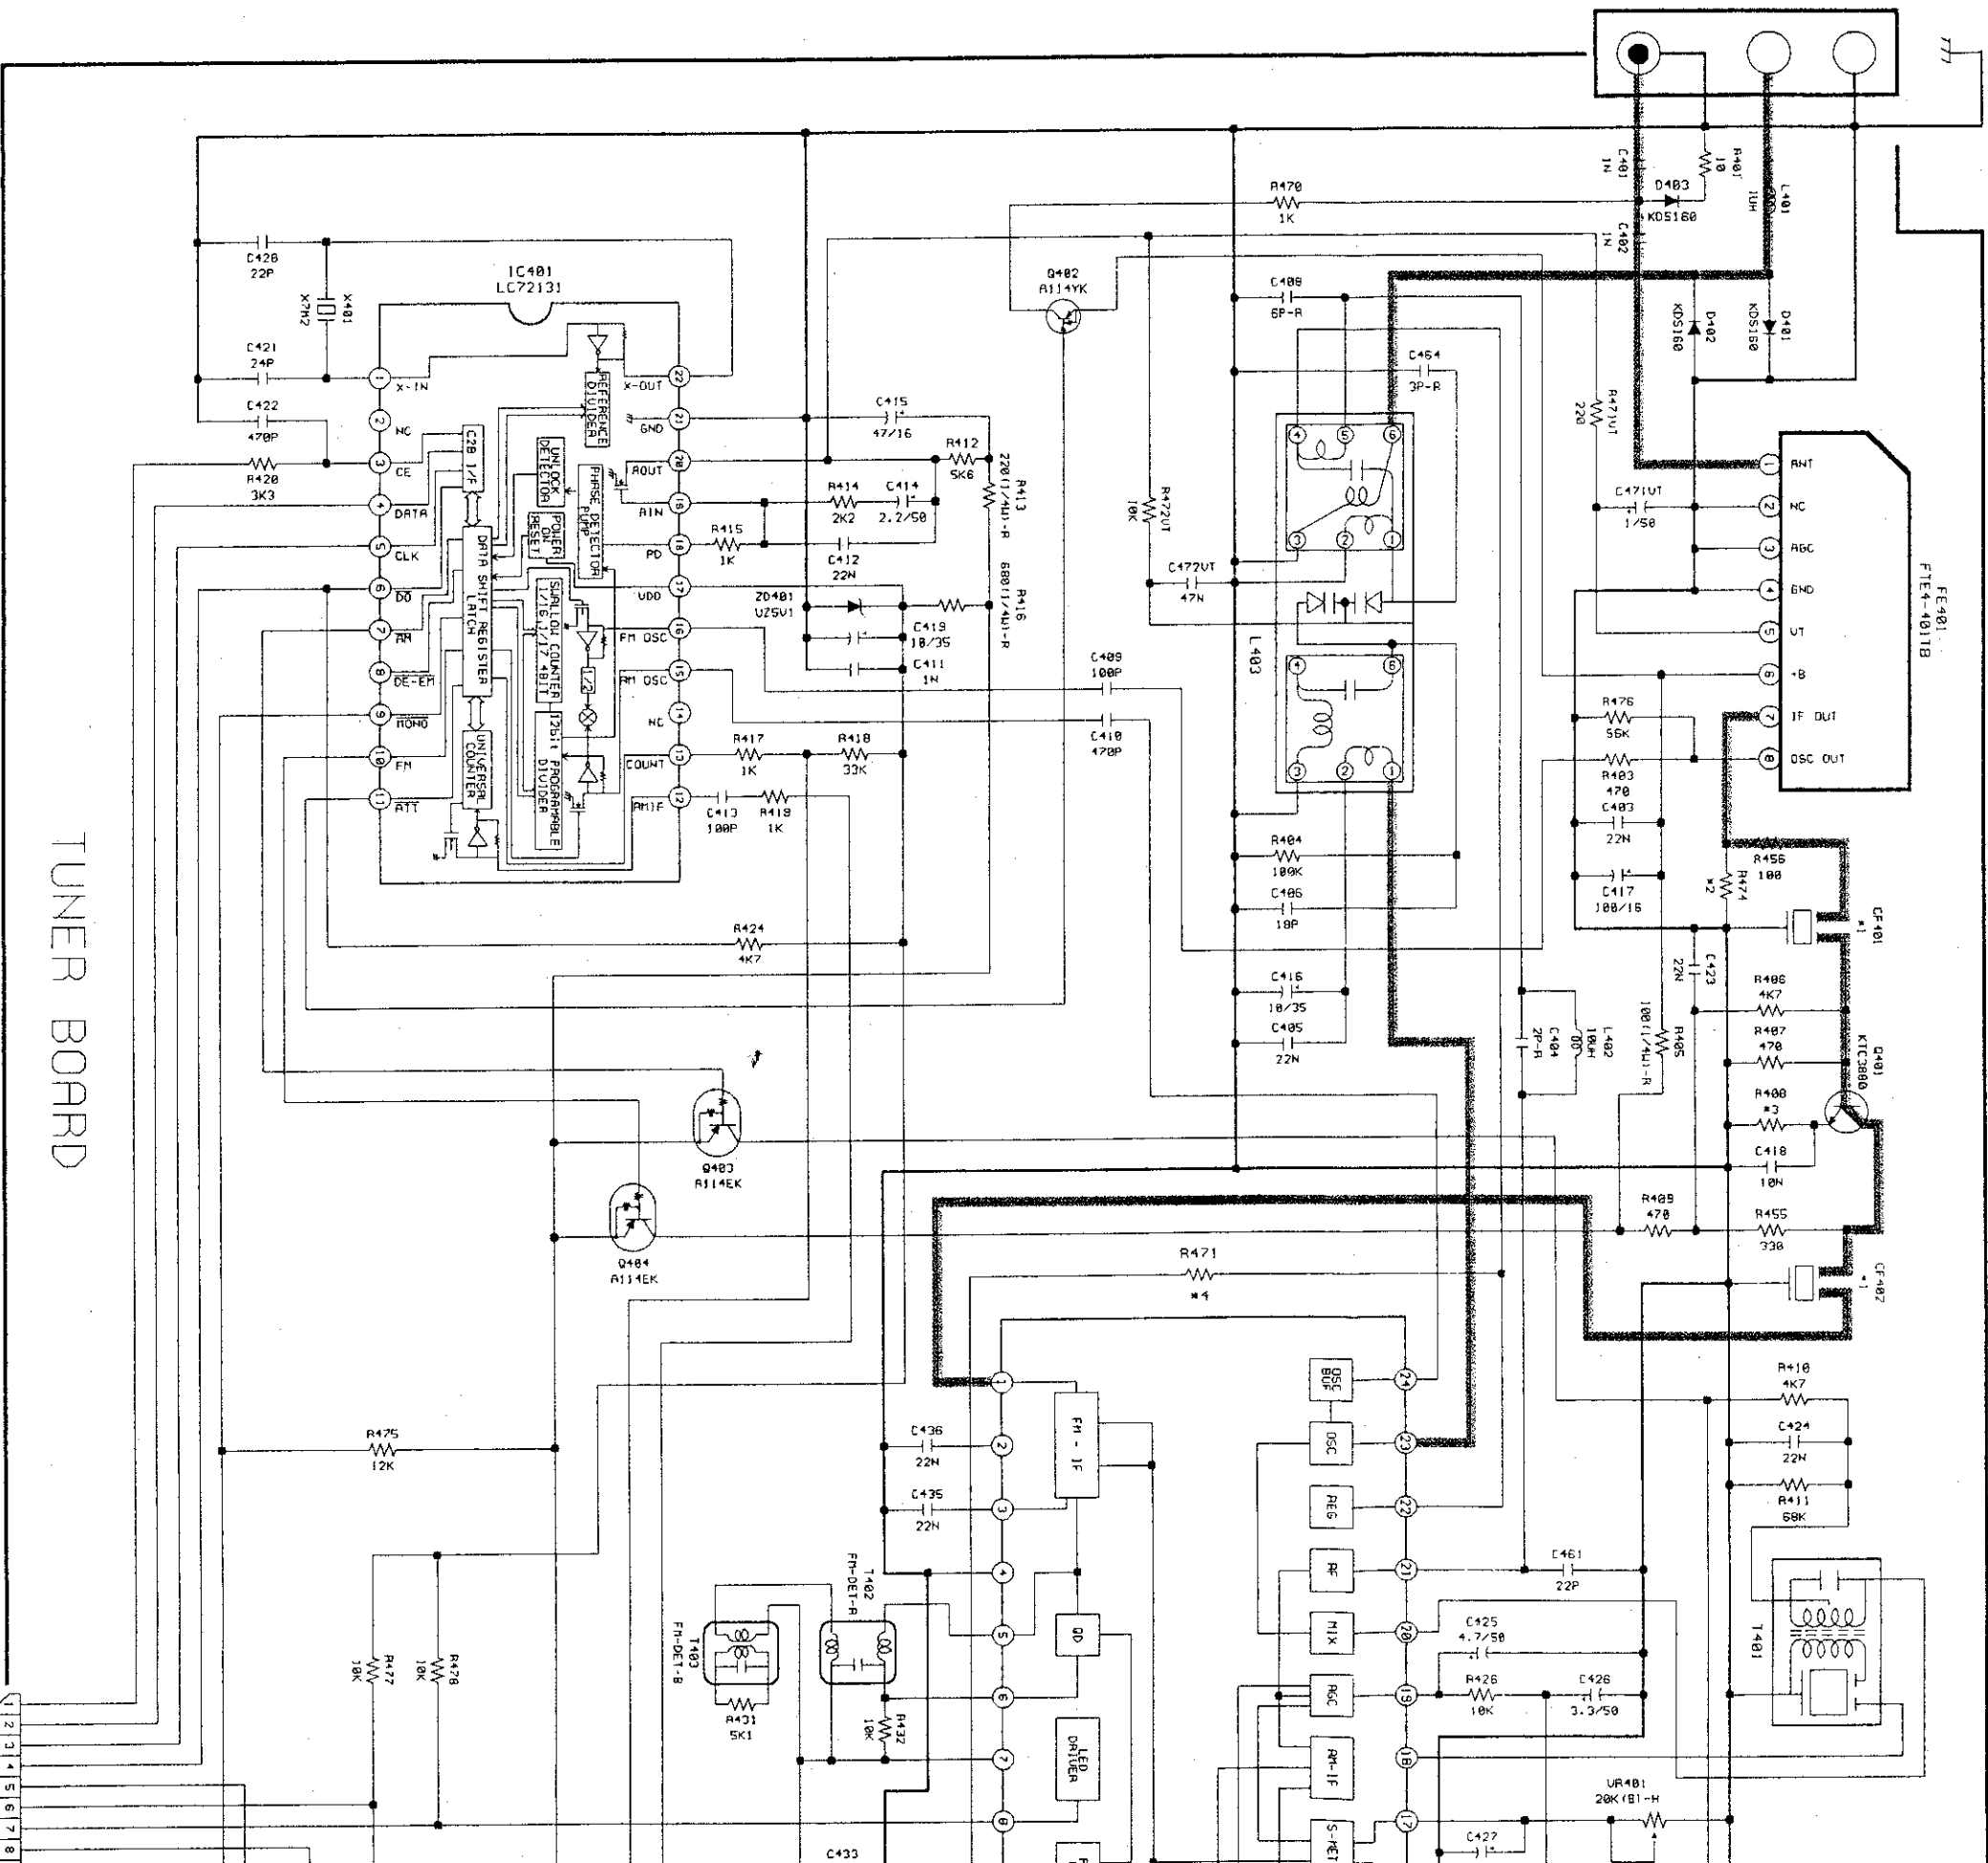


TUNER BOARD

*1	R-NO.	USR(E3)	E2, E2A	E1C, EUT, E1K
*1	CF401/CF402	SFE10, 7MH8	SFE10, 7HS3	10, 7MH8/HS3
*2	R474	-	180	-
*3	R407/R408	470/1.2K	620/680	620/1.2K
*4	R471	18K	39K	39K
*5	UR402	50KB	100KB	50KB
*6	R428	3.3K	10K	6.8K
*7	C434	1/50	0.33/50	0.33/50
*8	R473	-	2.4K	-

*9	R-NO.	USR(E3)	E2, E2A	E1C, EUT, E1K
*9	J442	JUMPER	-	JUMPER
*10	T406	-	RNT1-BJRD1E	-
*11	C462	-	470P	-
*12	R472	-	100	-
*13	Q409	-	K1C3880	-
*14	R449	-	3.9K	-
*15	R450	-	1K	-
*16	R438, R439	100K	150K	100K

1 PLL_CE
 2 PLL_DATA
 3 PLL_CLK
 4 PLL_DT_IN
 5 TU_MUTE
 6 ST
 7 TUNED
 8 +5V

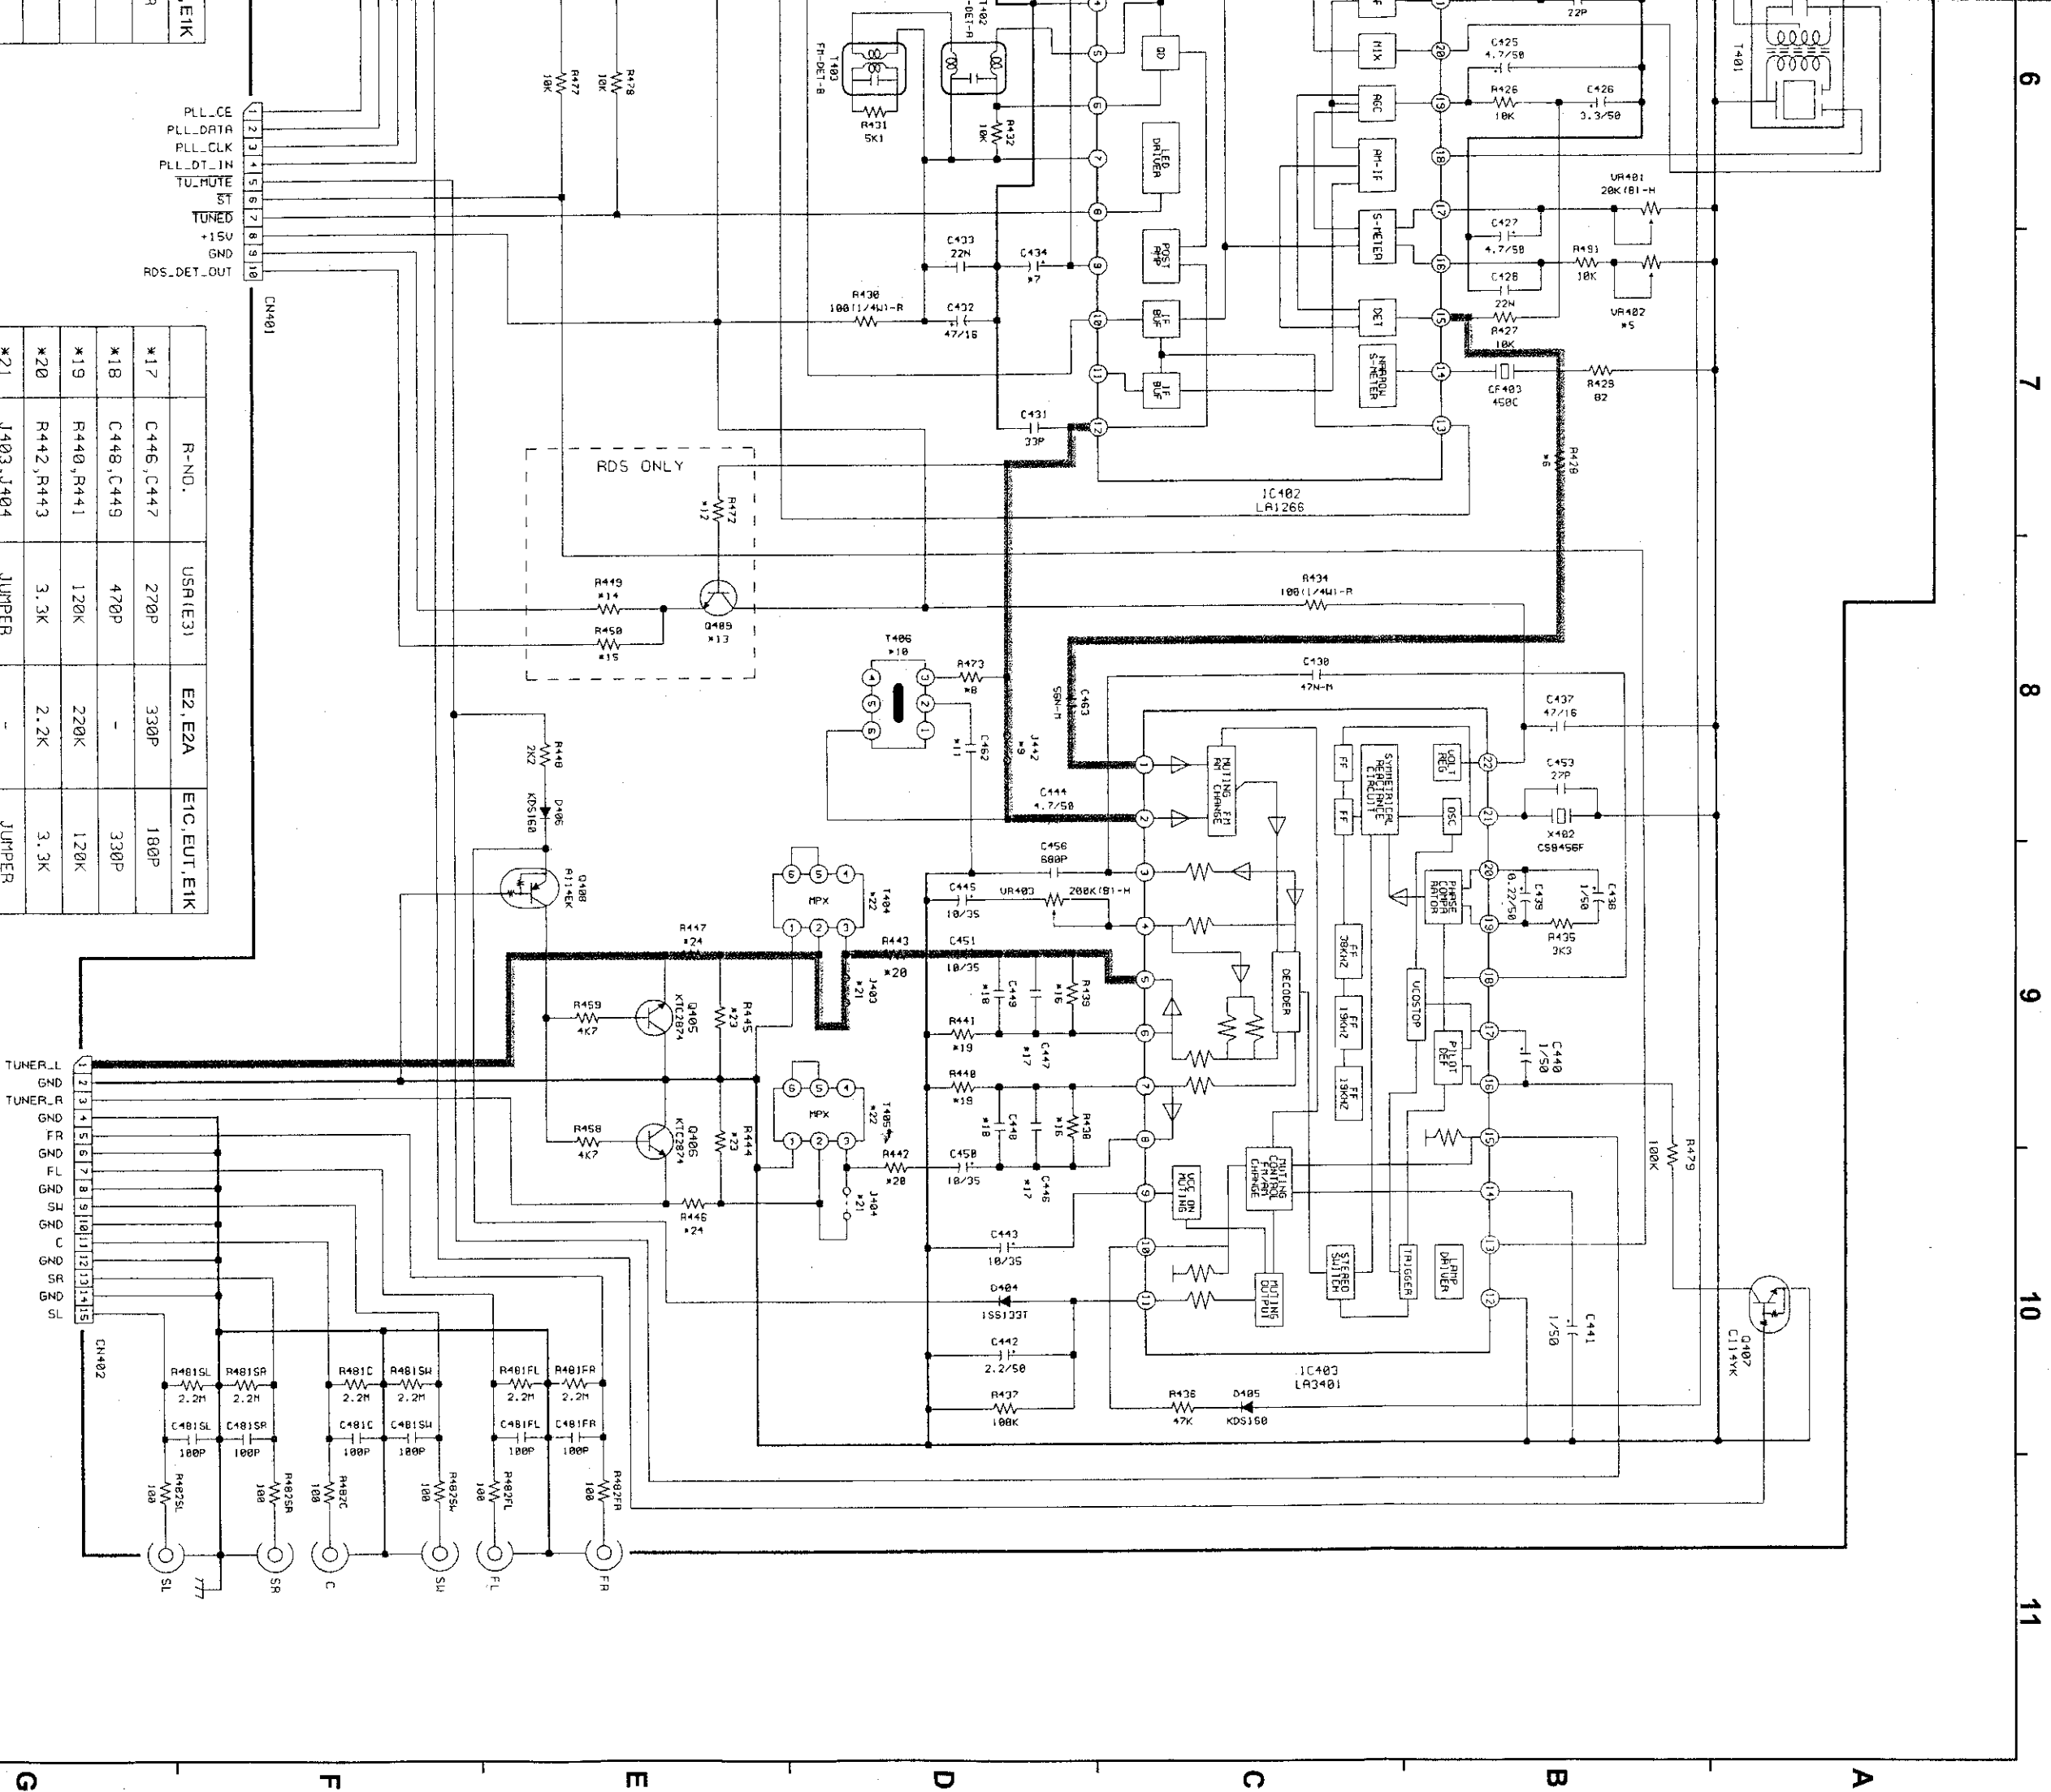

R-NO.	USR1E31	E2,E2A	E1C,EUT,E1K
*17	C446,C447	270P	330P
*18	C448,C449	470P	330P
*19	R440,R441	120K	220K
*20	R442,R443	3.3K	2.2K
*21	J403,J404	JUMPER	JUMPER
*22	T404,T405	-	LPF (HPX)
*23	R444,R445	8.2K	3.3K
*24	R446,R447	JUMPER	JUMPER

PLL_CE
 PLL_DATA
 PLL_CLK
 PLL_DT_IN
 TU_MUTE
 ST
 TUNED
 +15V
 GND
 RDS_DET_OUT

SIGNAL LINE
SCHEMATIC DIAGRAMS (7/7)
TUNER UNIT