


# DENON

Hi-Fi AV Surround Amplifier

## SERVICE MANUAL MODEL AVC-77 AV SURROUND AMPLIFIER

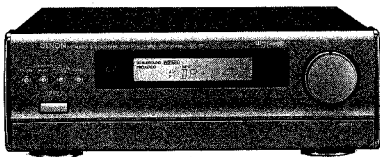

### CONTENTS

OPERATING INSTRUCTIONS .....	2 - 12
DISASSEMBLY .....	13
CIRCUIT DESCRIPTIONS .....	14, 15
SEMICONDUCTORS .....	16 - 23
PRINTED WIRING BOARD .....	24, 25
PRINTED WIRING BOARD PARTS LIST .....	26 - 31
BLOCK DIAGRAM .....	32
SCHEMATIC DIAGRAM .....	33, 34
WIRING DIAGRAM .....	35
EXPLODED VIEW OF CHASSIS AND CABINET .....	36
PARTS LIST OF EXPLODED VIEW .....	37
REMOTE CONTROL (RC-178) .....	38

**NIPPON COLUMBIA CO., LTD.**

## SPECIFICATIONS

- **Audio section**
    - Rated maximum output**  
(All properties shown are only for the power amplifier stage.)
    - Frequency response**
    - Rated input/input impedance**
    - S/N ratio**
    - Speaker impedance**
  - LINE Input sensitivity/impedance**
  - **Video section**
    - Input and output level/impedance**
    - Frequency response**
  - **General**
    - Power source**
    - Power consumption**
    - Maximum external dimensions**
    - Weight**
  - **Remote control unit (RC-178)**
    - Remote control system**
    - Number of buttons**
    - Power supply**
    - Maximum external dimensions**
    - Weight**
- \* Maximum dimensions include controls, jacks, and covers.  
(W) = width, (H) = height, (D) = depth

CENTER (Center 1ch driven)  
30 W (8  $\Omega$ /ohms, 1 kHz with 1.0% THD)  
REAR (rear 2ch driven)  
15 W + 15 W (8  $\Omega$ /ohms, 1 kHz with 1.0% THD)  
40 Hz to 20 kHz  $\pm$ 3 dB  
150 mV/47 k $\Omega$ /ohms  
90 dB  
Center: 8  $\Omega$ /ohms  
Rear: 8  $\Omega$ /ohms  
150 mV/47 k $\Omega$ /ohms

1 Vp-p/75  $\Omega$ /ohms  
2 Hz to 8 MHz +0, -3 dB










AC 230 V, 50 Hz  
135 W  
270 (W)  $\times$  96 (H)  $\times$  313 (D) mm  
(10-5/8"  $\times$  3-25/32"  $\times$  12-21/64")  
4.7 kg (10 lbs 6 oz)

Infrared pulse  
15  
Two DC 1.5V R6P/AA batteries  
48 (W)  $\times$  175 (H)  $\times$  18 (D) mm  
(1-57/64"  $\times$  6-57/64"  $\times$  45/64")  
120g (including batteries) (Approx. 4 oz)

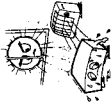\* Specifications are subject to change without notice.

Manufactured under license from Dolby Laboratories Licensing Corporation. Additionally licensed under one or more of the following patents: U.S. numbers 3,632,886, 3,746,792 and 3,959,590; Canadian numbers 1,004,603 and 1,037,877. "Dolby" and the double-D symbol  $\text{DD}$  are trademarks of Dolby Laboratories Licensing Corporation.

# 1 INTRODUCTION / EINFÜHRUNG / INTRODUCTION NOTE ON USE / HINWEISE ZUM GEBRAUCH / OBSERVATIONS RELATIVES A L'UTILISATION

 <ul style="list-style-type: none"> <li>• Avoid high temperatures</li> <li>• Allow for sufficient heat dissipation when installed in a rack</li> <li>• Be certain the rack temperature is within the limits specified in the manual</li> <li>• Do not use the rack for anything other than its intended purpose</li> <li>• Do not use the rack for anything other than its intended purpose</li> <li>• Do not use the rack for anything other than its intended purpose</li> </ul>	 <ul style="list-style-type: none"> <li>• Know the set line from moisture, water, and dust.</li> <li>• Halten Sie das Gerät von Feuchtigkeit, Wasser und Staub fern.</li> <li>• Prévoyez l'appareil contre l'humidité, l'eau et la poussière.</li> </ul>	 <ul style="list-style-type: none"> <li>• Do not let foreign objects in the set.</li> <li>• Keine fremden Gegenstände in das Gerät lassen.</li> <li>• Ne pas laisser des objets étrangers dans l'appareil.</li> </ul>
 <ul style="list-style-type: none"> <li>• Handle the power cord carefully</li> <li>• Do not pull on the power cord</li> <li>• Do not use the power cord for anything other than its intended purpose</li> <li>• Do not use the power cord for anything other than its intended purpose</li> <li>• Do not use the power cord for anything other than its intended purpose</li> </ul>	 <ul style="list-style-type: none"> <li>• Unplug the power cord when not using the set for long periods of time.</li> <li>• Zieh die Leitung des Gerätes bei nicht mehr längerem Gebrauch ab.</li> <li>• Débranchez le câble d'alimentation lorsque l'appareil n'est pas utilisé pendant de longues périodes.</li> </ul>	 <ul style="list-style-type: none"> <li>• Do not let foreign objects, insects, and dust come in contact with the set.</li> <li>• Lassen Sie das Gerät nicht mit Staubkörnern, Insekten oder anderen Fremdkörpern in Kontakt.</li> <li>• Ne pas mettre en contact des poussières, des insectes et d'autres objets étrangers avec l'appareil.</li> </ul>
 <ul style="list-style-type: none"> <li>• Handle the power cord carefully</li> <li>• Do not pull on the power cord</li> <li>• Do not use the power cord for anything other than its intended purpose</li> <li>• Do not use the power cord for anything other than its intended purpose</li> <li>• Do not use the power cord for anything other than its intended purpose</li> </ul>	 <ul style="list-style-type: none"> <li>• Do not connect the ventilation holes.</li> <li>• Do not connect the ventilation holes.</li> <li>• Do not connect the ventilation holes.</li> </ul>	 <ul style="list-style-type: none"> <li>• Never disassemble or modify the set in any way.</li> <li>• Nenn niemals das Gerät auseinander zu nehmen.</li> <li>• N'essayez jamais de modifier l'appareil d'une manière ou d'une autre.</li> </ul>

## CAUTION/VORSICHT/ATTENTION

If the cabinet should receive or produce sparks, immediately cut the power switch to the STANDBY position, unplug the power cord, and contact your store or distributor.

If the cabinet should receive or produce sparks, immediately cut the power switch to the STANDBY position, unplug the power cord, and contact your store or distributor.

If the cabinet should receive or produce sparks, immediately cut the power switch to the STANDBY position, unplug the power cord, and contact your store or distributor.

## "SERIAL NO.

PLEASE RECORD UNIT SERIAL NUMBER ATTACHED TO THE REAR OF THE CABINET FOR FUTURE REFERENCE"

## SAFETY IMPORTANT

**WARNING:**  
TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

## •NUR FÜR EUROPÄISCHE MODELLE


### Konformitätserklärung

Die DENON Electronic GmbH  
Hildebrandstr. 32  
40880 Ratingen

Erklärt, als Hersteller/Importeur, daß das in dieser Bedienungsanleitung beschriebene Gerät den Technischen Vorschriften für Ton- und Fernseh-Rundfunkempfänger nach der Anreizgesetzgebung 86B/1989 (Amtsblatt des Bundesministers für Post- und Telekommunikation vom 31. 8. 1989) entspricht.

## 2 NAMES OF PARTS/BEZEICHNUNG DER TEILE/NOMENCLATURE

(Front Panel/Frontplatte/Panneau avant)

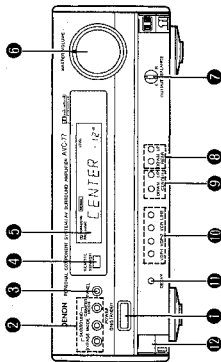


### FÜR ENGLISH READERS

- 1 POWER button
- 2 SURROUND select button
- 3 REMOTE CONTROL SENSOR
- 4 MFD (Multi-Function Display)
- 5 MASTER VOLUME control
- 6 OUTPUT BALANCE control
- 7 CENTER channel level button
- 8 FUNCTION button
- 9 DELAY TIME button
- 10 Trip door

### POUR LES LECTEURS FRANÇAIS

- 1 Touche POWER (illumination)
- 2 Touche de sélection SURROUND (ambiance)
- 3 Détecteur de commande à distance
- 4 MFD (affichage multi-fonction)
- 5 Commande MASTER VOLUME (volume de la gamme entiere)
- 6 Commande OUTPUT BALANCE (équilibre de sonorité)
- 7 Touche CENTER (niveau de canal central)
- 8 Touche FUNCTION (fonction)
- 9 Touche DELAY TIME (temps de retard)
- 10 Trappe

(Rear Panel/Rückseite/Panneau arrière)

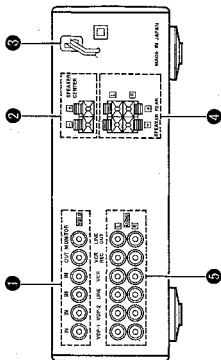

### FÜR ENGLISH READERS

- 1 VIDEO INPUT/OUTPUT (jacks)
- 2 CENTER channel speaker terminals
- 3 AC cord with plug
- 4 AUDIO INPUT/OUTPUT jacks

### POUR LES LECTEURS FRANÇAIS

- 1 Prises VIDEO INPUT/OUTPUT (industrial) vidéo
- 2 Bornes de sélection CENTER (canal central)
- 3 Boite d'insertion avec fiche
- 4 Prises AUDIO INPUT/OUTPUT (entrée/sortie audio)

### FÜR DEUTSCHE LESER

- 1 VIDEO INPUT/OUTPUT-Buchsen
- 2 Mitte-Eingangs/Ausgangs
- 3 Netz-Steckdose
- 4 Audio-Eingangs- und Ausgangsbuchsen

- Read this manual carefully to ensure that you take full advantage of all the features of this surround amplifier. Keep the manual in a safe place for future reference.
- Be sure to check the date of purchase and the store's name of purchase have been filled in properly on the warranty label at your store of purchase.

#### TABLE OF CONTENTS

1	Introduction	2	2	Operation	9
1	• Remote Use	2	3	• Preparations for playback	9
2	• Names of Parts	3	4	• Program source playback	9
3	• Before Using	4	4	• Recording video program sources or making a video copy	9
4	• Installation Precautions	4	5	• Remote Control Unit	10
4	• Handling Precautions	4	6	• Specifications	10
5	• Connections	5	7	• Troubleshooting	11
6	• Dolby Pro Logic Surround	6	8	• Last Function Memory	11
7	• Part Names and Functions	7, 8	28, 29	DENON SERVICE NETWORK	

Check that the following parts are included in the package aside from the main unit:

- ① Operating Instructions
- ② Remote Controller (RC-178)
- ③ RPT/AM Batteries

### 3 BEFORE USING


Read the following cautions carefully before using the amplifier.

- Moving the set  
Be sure to unplug the power cord and disconnect other cords connecting the amplifier to other audio units before moving the amplifier to prevent damaging or short-circuiting the power cord.
- Before turning on the power switch  
Check again to make sure that all connections are correct and that there are no problems with the connection cords. Be sure to turn the power STANDBY before disconnecting or connecting cords.

### 4 INSTALLATION PRECAUTIONS

Using this amplifier or other electronic equipment connected to the power lines may cause electrical equipment connected to the same power lines to malfunction. To prevent this, take the following steps:

- Install the amplifier as far as possible from the tuner or TV.
- Keep the antenna lines of the tuner or TV as far as possible from the amplifier's power cord and connection cables.
- This problem is especially frequent when using indoor antennas or 300 Ω twin lead lines. We recommend using outdoor antennas and 75 Ω twin coaxial cables.

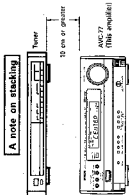

For cooling purposes, do not place another AV component directly on top of the amplifier. Be sure to leave a space of at least 10 cm.

### 5 HANDLING PRECAUTIONS

Switching the input function when the input jacks are unconnected may result in a popping sound or a clicking noise. If this should happen, turn down the MASTER VOLUME or connect a component to the input jacks.

#### • Playback with Dolby Pro Logic

The Dolby Pro Logic position provides optimum effectiveness for sources recorded with Dolby Surround. A different surround mode should be selected when playing back sources other than this type. Note in particular that when playing back mono-recorded receiving sources, the bypass mode or the simulated mode should be used. Other modes will not provide a suitable effect.

#### • Muting of the LINE OUT jacks

An electronic muting circuit has been connected to the LINE OUT jacks. This circuit greatly attenuates the output signal for approximately 9 seconds after the power has been switched on. Raising the volume during this operation will result in an extremely large output once the muting has ended, so volume adjustments should be made only after the completion of muting.

#### • Rear output level while in the surround mode

The rear level will remain small for sources other than Dolby Surround sources. The reason for this is that a rear playback signal is not contained in the signals. When playing back such sources with a surround function, the mode should be set to Dolby Surround. The rear output level may seem small for software having a small rear signal, even Dolby Surround sources.

#### • Opening and closing the door

This amplifier is equipped with a door on the front panel. Press the "PUSH OPEN" position printed at the upper right edge of the door to release and open the door. Likewise, to close the door, press in the same position until a click sound is heard.

**NOTE:**  
The door will close naturally once it has been released, but it may stop before fully opening. This is not a fault; just lightly push the door open.

## 6 CONNECTIONS

### Connecting video decks (VCR)

Connections for video input and output. Connect the video deck's video output jack to the amplifier's VIDEO VCR (yellow) jack and the video deck's VCR IN jack (yellow) and the video deck's video input jack to the amplifier's VCR OUT jack (yellow) using 75 Ω (ohm) video coaxial cable pinning cords.

### Connecting the audio input and output jacks

Connect the video deck's audio output jacks to the amplifier's AUDIO VCR IN jacks and the video deck's audio input jacks to the amplifier's AUDIO VCR OUT jacks using pinning cords.

### Connecting a video disc player (VDP)

Connect the video disc player's video output jack to the amplifier's VIDEO VDP (yellow) jack using a 75 Ω (ohm) video coaxial cable pinning cord. Connect the video disc player's audio output jacks to the amplifier's AUDIO VDP INPUT jacks using pinning cords.

### Connecting a monitor TV

Connect the TV's video input jack to the amplifier's VIDEO MONITOR (blue) jack using a 75 Ω (ohm) video coaxial cable pinning cord.

75 Ω (ohm) video coaxial cable pinning cord

### Connecting the speaker system

A pair of two speakers can be connected to the AVC-77, including a pair of rear speakers and one center speaker. The speaker connections are made to the speaker terminals on the rear panel of the system, making sure that the polarities are matched (+) with (+) and (-) with (-). Make sure that the speaker terminals are connected to the correct audio input, and the same of the speaker terminals are connected to the correct audio output. Make sure that the speaker terminals are connected to the correct audio input, and the same of the speaker terminals are connected to the correct audio output. Make sure that the speaker terminals are connected to the correct audio input, and the same of the speaker terminals are connected to the correct audio output.


### Speaker impedance

The impedances of the front and rear speakers should be 8 Ω (ohms). Use of a system with an impedance other than 8 Ω (ohms) may affect the protection circuit and cause a breakdown.

### Connecting the speaker system




1. Peel the insulation off the tip of the cord.  
2. Twist the conductors.  
3. Press down the layer of the speaker terminal with your finger.  
4. Insert the end of the cord, and release your finger.

Press down the end of the cord, and release your finger.

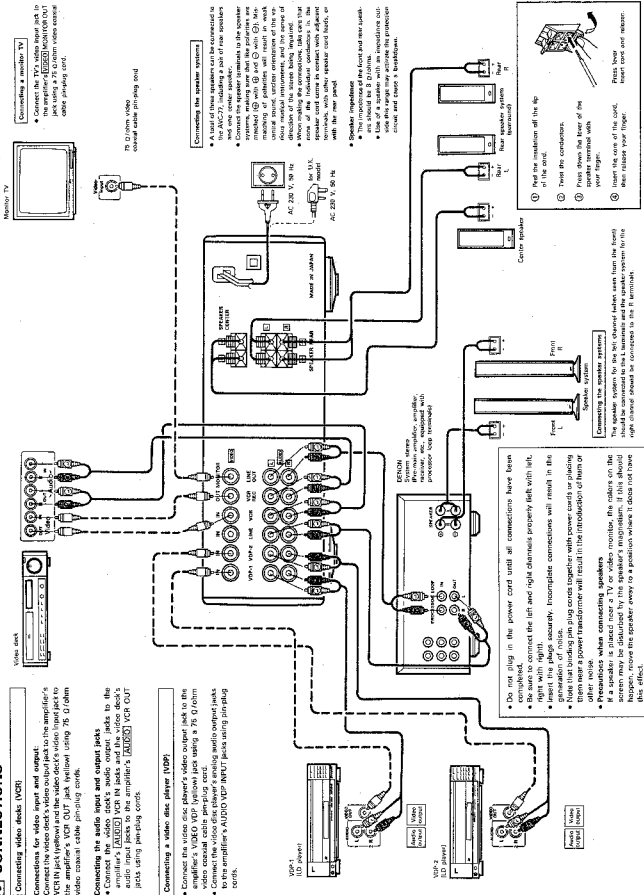

Do not plug in the power cord until all connections have been completed.  
Be sure to connect the left and right channels properly (left with left, right with right).  
Connect the speaker system correctly. Inappropriate connections will result in the reproduction of noise.  
Note that blocking pin plug across together with power cords or plugging them near a power transformer will result in the introduction of hum or other noise.  
Precautions when connecting speakers: When connecting the speakers to the TV, video monitor, the video deck, the video deck's VCR IN jacks and the video deck's VCR OUT jacks using pinning cords. If this should happen, move the speaker away to a position where it does not have this effect.

Connecting the speaker system  
The speaker system for the left channel (seen from the front) is connected to the L terminal and the speaker system for the right channel should be connected to the R terminal.



## 7 DOLBY PRO LOGIC SURROUND


Setting delay time delay time depends on the listening position. Look at the diagram on the right and set the optimum delay time for the size of your room and your sitting position.

For example, your listening position is 4m away from the center channel and 4m from the speakers. The optimum delay time will be 20 msec.


For more information on the delay time variation range, see page 7.

### Adjusting the input balance

This amplifier is equipped with an auto input balance circuit, so there is no input balance adjustment knob.

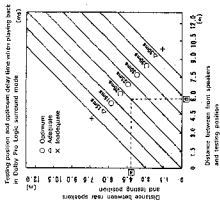


Speaker placements in Dolby Pro Logic surround mode. When playing music in Dolby Pro Logic surround, use of a center speaker will provide the best effect.

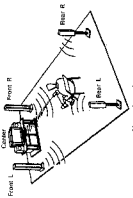

### Normal mode

This is the best mode to use if the center channel is smaller than the speakers on the left and right. Signals of 100 Hz or below, which has almost no effect on orientation, are divided between the left and right channels, so the bass on the left and right channels is deeper.

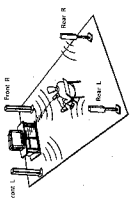


### Phantom mode

This is the mode to use when the center channel playback speaker is not in use. The center channel signal is sent to the left and right channels in the center during playback so that you can enjoy an exciting sound field even without using the center speaker.

### Test tone


The test tone produces a test signal for adjusting the level in each channel in the Dolby Pro Logic surround mode. Before using Dolby Pro Logic surround, position the speaker as shown above, then the test balance for the volume of each speaker, the test tone balance for the volume etc. so that they sound as if they are at the same level.

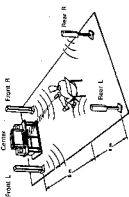

The ON/OFF and delay time setting for the speaker output (FRONT, CENTER, REAR) are different for the rear and center speakers, can be set individually for each surround mode.

### Wide mode

This is the best mode to use when the center channel speaker is of the same grade as the speakers on the left and right. The entire frequency band, from low regions to high regions, is sent to the center channel speaker, giving an exciting sound field for your enjoyment.

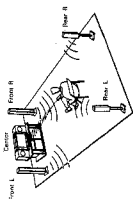

In normal and wide mode, the test tone switches in the following order:

----- Front left -> Center -> Front right -> Rear

Adjust the volume balance using this signal until the optimum balance is reached.

In phantom mode the switching is as follows:

----- Front left -> Front right

----- Rear

Note that on this amplifier, the test tone is produced every 4 seconds after the first 2 seconds.

Use the remote control unit (RC-178) to make adjustments using the test tone.


## 8 PART NAMES AND FUNCTIONS

### Front panel

- 1 POWER switch**  
When this switch is pressed once, the power turns on. Pressing it again will turn the power off. The muting control is activated while "MUTING" is flashing to prevent noise when the POWER switch is operated. After several seconds the muting circuit turns off, the "MUTING" indicator turns off, and the TV returns to the normal operating mode.  
• **STANDBY**  
Press the switch once again to set the standby mode. "OFF" is displayed on the LCD.
- 2 SURROUND buttons**  
Use these buttons to select the surround mode.  
• **BYPASS button**  
When this button is pressed, the surround mode is bypassed and the normal stereo sound is produced.  
• **MODE selector button**  
No signals are output to the rear channel.  
Press this button to select one of the surround modes shown below.
- 3 DD SURROUND PRO LOGIC**  
HALL  
SIMULATED  
LINE
- 4 HALL**  
BYPASS
- 5 DD SURROUND PRO LOGIC**  
HALL  
SIMULATED  
LINE
- 6 DD (Dolby) SURROUND PRO LOGIC**  
Use this mode for video software, etc., recorded in Dolby Surround.  
Select the center mode according to the speaker position of the speakers.  
Set the delay time to between 10 msec and 30 msec, according to the size of the room and the position of the speakers.  
• **HALL surround**  
The delay time can be set to between 5 msec and 30 msec.  
• **SIMULATED**  
No signals are output to the center channel.  
• **LINE**  
Use this mode to create a surround effect with monaural sources.  
No signals are output to the center channel.  
The delay time can be set to between 5 msec and 30 msec.  
• **OFF**  
Use this to create the atmosphere of a live program in a studio.  
The delay time is set at 0 msec.
- 7 OUTPUT BALANCE control**  
Use this to adjust the balance between the left and right outputs to create an effective surround sound.
- 8 REAR speaker volume control buttons**  
Use them to adjust the volume of the rear (surround) speakers.  
• **UP**  
Press this to increase the volume.  
• **DOWN**  
Press this to decrease the volume.  
The volume changes while one of the buttons is pressed. The volume change is displayed on the LCD.  
These buttons do not function when in the bypass mode.
- 9 CENTER speaker volume control buttons**  
• **UP**  
Press this to increase the volume.  
• **DOWN**  
Press this to decrease the volume.  
The volume changes while one of the buttons is pressed, and stops changing when the button is released. The volume change is displayed on the LCD.  
These buttons do not function when in the hall, live, simulated or Dolby Pro Logic playback mode.
- 10 Input selector buttons**  
Use these buttons to select the input audio and video signals.  
• **VDP-1**  
Press this to use the VDP connected to the VDP-1 jacks.  
• **VDP-2**  
Press this to use the VDP connected to the VDP-2 jacks.  
• **VCR**  
Press this to use the video deck connected to the VCR jacks.  
• **LINE**  
Press this when an amplifier or receiver equipped with processor loop terminals is connected to select that component.
- 11 DELAY selector button**  
Press this button to switch the delay time, as shown below.  
• When Dolby Pro Logic is selected with the SURROUND MODE button:  
10sec - 30sec - 50sec - 30sec - 10sec  
• When any other surround mode is selected:  
10sec - 30sec - 50sec - 30sec - 10sec
- 12 TRAP DOOR**  
Press the right edge to open the door.  
To ensure the proper operation, a click is heard to indicate that the door is closed.



## Explanation of the LCD








- Multi-function display**  
Settings are displayed in order each time the PANEL MODE button is pressed.  
Normally the surround mode setting is displayed.
- DI SURROUND PRO LOGIC indicator**  
This is displayed when the surround mode is logic mode. It indicates that the SURROUND MODE button is pressed.
- NORMAL, PHANTOM and WIDE indicators**  
These light in the following order:  
---NORMAL---PHANTOM---WIDE---
- BYPASS indicator**  
This lights when the surround circuit is bypassed by pressing the SURROUND BYPASS button.
- LEVEL indicator**  
This lights with section 6 when the REAR UP and CENTER UP and DOWN buttons are pressed. Adjust the level with the UP and DOWN buttons while watching the display in section 6.  
This level is displayed in steps of 2dB from -48dB (minimum) to 0dB (maximum).
- OFF indicator**  
This lights when the standby mode is set by turning off the POWER switch.
- TEST TONE indicator**  
This lights when the TEST TONE button is pressed. (RC-276)
- DELAY TIME indicator**  
This lights along with section 8 when in the surround mode. Use the DELAY button to set the delay time.

DELAY PRO LOGIC	Displayed in 5ms steps from 15ms to 30ms.
HALL and SIMULATED	Displayed in 5ms steps from 0.5ms to 30ms.
LIVE	Pressed at 0.5ms.

## Examples of Multi Function Display Patterns

The displayed modes indicate the operations performed when the buttons on the front panel of the AVC-77 or on the remote control unit (RC-176) are operated.

- Surround mode display**  
(1) **Dialey Pro Logic modes**  
● SURROUND PRO LOGIC indicator  
↓  
Press the **CD CENTER MODE** button:  
● NORMAL, PHANTOM, or WIDE  
● DELAY TIME  
● DELAY PRO LOGIC — Displayed in 5ms steps from 15ms to 30ms.  
(2) Other surround modes  
● This surround mode is displayed as follows:  
● HALL or SIMULATED — Displayed in 5ms steps from 0.5ms to 30ms.  
● LIVE — fixed at 0ms.  
(3) **BYPASS indicator**  
● Displayed in the bypass mode.
- Center level display**  
● Displayed when CENTER UP or DOWN button is pressed.  
● Displayed in steps of 2dB from -48dB (minimum) to 0dB (maximum).
- Rear level display**  
● Displayed when REAR UP or DOWN button is pressed.  
● Displayed in steps of 2dB from -48dB (minimum) to 0dB (maximum).
- INPUT indicator**  
● The function selected with the input selector buttons is displayed.
- MUTING display**  
This appears when the POWER switch is turned on. "MUTING" flashes until the muting circuit turns off.
- OFF indicator**  
This appears when the POWER switch is turned off.



## 9 OPERATION

### PREPARATIONS FOR PLAYBACK

- Checking connections

  - Check the connection diagrams (pages 5 to 10), and make sure that all connections are correct.
  - Check that the left and right speaker systems, and the surround (S), C, are matched correctly.
  - Check that the speaker terminals are connected to the correct terminals with correct polarity.
  - Check that all cables are securely plugged in.
  - Check that the cables used are of the correct type.
- Checking all knob positions (for numbers, see pages 7 to 8).

  - Put the MASTER VOLUME control knob in the 0 position by turning it as far to the left as it will go.
  - Set the SUTHERLAND BALANCE control knob in the center position.


After making these checks, turn on the power by pressing the POWER switch.  
The "MUTING" indicator flashes on the LCD, then turns off after several seconds, at which point the set is in the normal operating mode.

**Note on operations carried out during playback**  
If the FUNCTION buttons or other buttons are operated during playback, the sound will be interrupted. This is due to the activation of the muting circuit which prevents the generation of noise during muting. It is not a malfunction.

#### Protection circuit ("PROTECTION" display lights)

The purpose of this circuit is to prevent the internal circuit being damaged by the large currents which flow through the inner circuitry of the set when output is sent to a partly disconnected or short-circuited speaker terminal.  
When the protection circuit is activated, the speaker output is automatically cut off, and the message "PROTECTION" is displayed.  
In addition, the set will not operate until the amplifier power cord is disconnected from the speaker terminals, the power cord is plugged back in, and switching the power back on. If the PROTECTION message is still displayed after you have re-checked, contact your dealer or your local Sales Office or Branch Office.

### 1. Program source playback

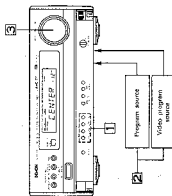


- Press the desired FUNCTION button. The function for the button which was pressed is indicated on the LCD.

Program source	FUNCTION Button
To watch and listen to the programs and scenes on the VHS tapes connected to the VCR-1 jack	VCR-1
To watch and listen to the scenes and sound of the video disc either connected to the VCR-2 jack	VCR-2
To watch and listen to the scenes recorded on the VCR-1 jack	VCR
To watch and listen to the programs and scenes from the amplifier or loop back when the amplifier is connected to the VCR-2 jack with processor loop terminals	LINE

- Start playback of the program source.  
For operating instructions, consult the operating instructions for the relevant components.

- Adjust volume.

- Recording a video program source or making a video copy (If needed or copy the video source currently monitored)

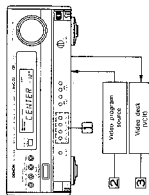

- Press the desired FUNCTION button. The function for the button which was pressed is indicated on the LCD.


Video program source	FUNCTION Button
To record from a video disc player connected to the VCR-1 jack	VCR-1
To record from a video disc player connected to the VCR-2 jack	VCR-2
To watch and listen to the program with processor loop terminals connected to the VCR-2 jack	LINE

- Start playback of the desired video program source.
- Start recording on the video deck.  
For instructions, consult the operating instructions of the component concerned.

## 10 REMOTE CONTROL UNIT

Following the procedure outlined below, insert the batteries before using the remote control unit.

### Range of operation of the remote control unit

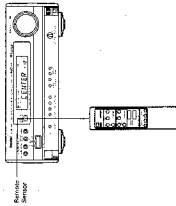


#### NOTES:

- The remote control unit can be used from a straight distance of approximately 7 meters, but this distance will vary according to the conditions of use. There are many obstacles between the remote control unit and the remote control sensor. If the remote control sensor is exposed to direct sunlight or other strong light, or if operated from an angle, edges or other devices emitting pulsed light, action may be abnormal.
- Nearby rays or other devices emitting pulsed light, action nearby may result in malfunctions, so keep this set as far away from such devices as possible.


### Inserting the batteries

1. Open the bottom cover of the remote control unit and remove the battery cover.
2. Insert the two R6P/AA batteries, matching the ⊕ and ⊖ marks on the batteries with those in the cover. Close the bottom cover until it clicks shut.

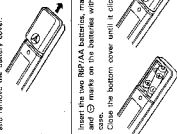

Buttons layout

- POWER button
  - FUNCTION button
  - SURROUND MODE button
  - TEST TONE button
- The test tones to emit test signals for adjusting the level of the different channels in the Dolby Pro Logic Surround mode.
- Before playing software recorded in Dolby Pro Logic Surround, position the speakers, then use the test tones to check the sound level of each speaker. The test tones in the normal and wide modes, the test tones are emitted in the following order:
- Front — Center — Rear — Front-right — Rear-right — Front-left — Rear-left
- REMOTE VOLUME button
  - REAR channel level button
  - CENTER channel level button

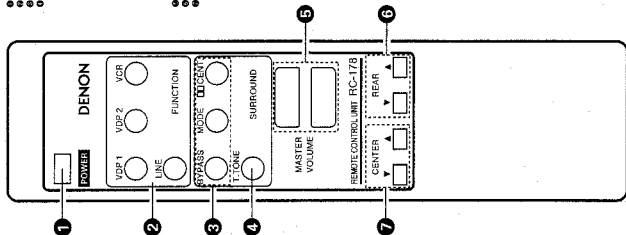

## 11 SPECIFICATIONS

- **Audio section**
- Rated maximum output**  
(All properties shown are only for the power amplifier stage)
- Rated input/output impedance**  
S/N ratio
- Speaker impedance**
- LINE input sensitivity/impedance**
- Video section**
- Input and output level/impedance**  
Frequency response
- **General**
- Power sources**
- Power consumption**
- Maximum external dimensions**
- Weight**
- **Remote control unit (RC-178)**  
Remote control system
- Power supply**
- Maximum external dimensions**
- Weight**

CENTER (Center/16ch/div)†  
30 W (B) (ohms, 1 Hz with 1.0% THD)  
REAR (rear 2ch/div)†  
40 Hz to 20 kHz (A) (ohms, 1 Hz with 1.0% THD)  
40 Hz to 20 kHz (A) (ohms, 1 Hz with 1.0% THD)  
160 mV/0.7 K2/ohms  
90 dB  
Center: 8 D (ohms)  
Rear: 8 D (ohms)  
150 mV/0.7 K2/ohms  
1 Vp-0.7 V (ohms)  
2 Hz to 8 MHz ±0.5 dB  
AC 230 V, 50 Hz  
220 (W) × 96 (H) × 313 (D) mm  
9.1 (W) × 3.8 (H) × 12.3 (D) in.  
4.2 kg (10 lbs 6 oz)  
Infrared pulse  
16  
Two DC 1.5V (HR)/AA batteries  
48 (W) × 178 (H) × 18 (D) mm  
[1.87 (69") × 6.97 (64") × 0.69 (27")]  
120g (minimum net weight) (Approx. 4 oz)  
• Specifications are subject to change without notice.

† Manufactured under license from Dolby Laboratories Licensing Corporation. Additionally licensed under one or more of the following patents: U.S. numbers 2,632,886, 3,746,299 and 3,999,506; Canadian numbers 1,904,892 and 1,207,877. "Dolby" and the double-D symbol (DD) are trademarks of Dolby Laboratories Licensing Corporation.

## 12 TROUBLESHOOTING

- Check these points before you conclude that the amplifier has developed a fault.
- Are the connections correct?
  - Are you operating the equipment correctly, as described in the operating instructions?
  - Are the speakers, turntable, CD player or other components connected properly?
- If the unit does not work properly, make the checks described in the table below. If the fault is not covered in this table, the amplifier has probably developed a fault, and you should switch off all power immediately and contact your dealer or your nearest DENON Service Center or dealership.

Problem	Cause	Remedy	Page
Although the power has been switched on, the LCD is blank and no sound is produced.	• Power cord plug is not securely plugged in. • Speaker and its extension cable are not properly connected. • Volume control knob is in "muting" position. • Volume adjustment knob is turned all the way down.	• Check that power cord plug is properly plugged in. • Connect speaker-cord securely. • Turn muting button in "normal" position. • Turn volume knob up to a suitable level.	5
When the power is switched on, the LCD keeps flashing.	• Speaker jack has short-circuited. • Speaker cord is not securely connected. • Left and right cables are not properly connected. • Left and right sides are not properly disconnected.	• Turn off power switch, connect speakers securely, then turn power switch back on. • Connect speaker cords securely. • Connect left and right cables securely. • Adjust balance to suitable level using balance control knob.	5
When the power is switched on, the LCD shows the battery level and the battery level indicator lamp is lit.	• Left and right cables are not properly connected. • Left and right cables are not properly disconnected. • Batteries have run down.	• Connect speaker-cord securely. • Adjust balance to suitable level using balance control knob. • Remove batteries and replace them with fully charged batteries.	5
When the power is switched on, the LCD shows the battery level and the battery level indicator lamp is lit.	• Remote control unit is too far away from the amplifier. • Something is blocking the way between the remote control unit and the amplifier. • The batteries have been inserted with the wrong polarity. • The batteries are not correctly connected.	• Bring the remote control unit nearer to the amplifier. • Remove whatever is in the way. • Press the correct button. • Take the batteries out and reinsert them with the right polarity. • Turn off power completely, disconnect cables, then reconnect speaker cords securely and turn power switch on.	7-8
When the power is switched on, the LCD shows the battery level and the battery level indicator lamp is lit.	• Speaker cords are not correctly connected.	• Turn off power completely, disconnect cables, then reconnect speaker cords securely and turn power switch on.	9

## 13 LAST FUNCTION MEMORY


- This amplifier has a Last Function Memory which stores the input and output sets immediately before the power is switched off.
- Because of this function, even when the power has been switched off, the memory is stored for about 3 days, so when the power is switched on again, there is no need to carry out complicated settings again.

## DISASSEMBLY


(To reassemble reverse disassembly)

### 1. Removing the top cover and front panel


- (1) Remove the 5 screws ① which fasten the Top Cover.
- (2) Remove the 2 screws ② of the bottom side which fasten the Front Panel.

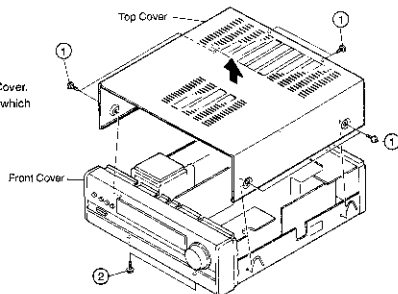

- (3) Disconnect connectors CB6 which is attached to the Video I/O unit, CB22C and CB703 which are attached to the Surround Unit, CN102, CB201, CB7, CB704, CB22B, CB22A and CB20 which are attached to the Main Unit.

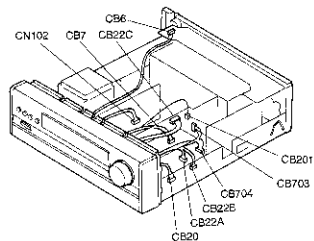

- (4) Remove 2 screws ③ which fasten the Side Plate.
- (5) While detaching in the direction of the arrow the tabs of the side plate and the holes of the Main Chassis (with a flat-bladed screwdriver).
- (6) Use your fingers to push out the hook of the inner panel from the Side Plate in direction of the arrow. Using the same method for the left side, remove the Side Plate, and remove the Front Panel.

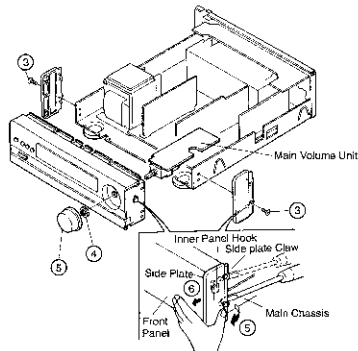

### 2. Removing the Printed Wiring Boards

#### MAIN VOLUME UNIT


- (1) Pull out Master Volume Knob ④.
- (2) Remove nut ⑤, and detach the Main Volume Unit.

#### BALANCE VOLUME UNIT

- (3) Remove the 2 screws ⑥, and detach the Balance Volume Unit.

#### FRONT CPU UNIT / LCD, KEY UNIT

- (4) Remove the 7 screws ⑦ which fasten the Front CPU Unit and LCD, Key Unit, and detach the board in the direction of the arrow.

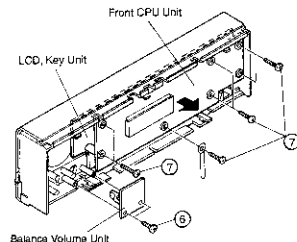

#### AUDIO SELECTOR UNIT


- (5) Detach the Audio Selector Unit in the direction of the arrow.

#### SURROUND UNIT

- (6) Detach the Surround Unit in the direction of the arrow.


#### VIDEO I/O UNIT

- (7) Remove the 5 screws ⑧ and Detach the Video I/O Unit in the direction of the arrow.

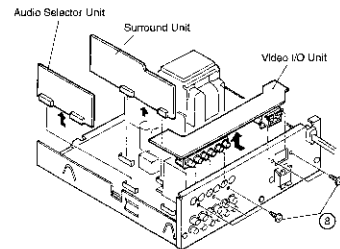

#### MAIN UNIT

- (8) Remove the 4 screws ⑨ (Radiator fixed screw) from bottom side.
- (9) Remove the 8 screws ⑩ which are attached to the Main Unit.
- (10) Detach the Cord Band and AC Cord in the direction of the arrow.
- (11) Detach the Main Unit in the direction of the arrow.

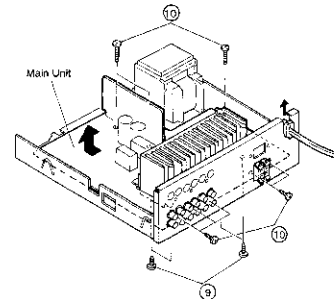

## CIRCUIT DESCRIPTIONS

## SURROUND CIRCUIT

(1) Table below shows output in each surround mode.

MODE		Output signal						Delay Time	Output control			
		FRONT			REAR				SP-A	SP-B	Center	Rear
		Lch	Rch	Center	Lch	Rch						
BYPASS		Lin	Rin	---	---	---	---				x	
DOLBY PRO LOGIC	NORMAL	PRO.FL	PRO.FR	PRO.C	PRO.S		15-30					
	PHANTOM			---					x			
	WIDE			PRO.C								
HALL		Lin	Rin	---	(Lin + Rin) delay		5-30			x		
SIMULATED				---	(Lin-Rin)d	-(Lin+Rin)d				x		
LIVE				Lin + Rin	(Lin-Rin)	(Lin+Rin)	0					

In output control: ( )d means delay signal. x means OFF output.

Table 1

## (2) Surround mode switching motion

MODE		Surround mode change over switching position								Output Control (Speaker and pin)			Delay Time (msec)
		IC405 LC7822 "S" SW NO.								Front	Center	Rear	
SW NO		1	2	3	4	5	6	7	8				
BYPASS		○									x	x	---
DOLBY PRO LOGIC	NORMAL		○			○							15-30
	PHANTOM		○			○		○			x		15-30
	WIDE		○			○		○			x		15-30
HALL		○			○			○			x		5-30
SIMULATED		○			○				○		x		5-30
LIVE											x		0 fixed
		R	PRO.R	---	---	PRO.C	L+R	R	-R	x: Output and Control Inhibit.			
		L	PRO.L	---	L+R	PRO.S	L-R	L	L				
		FRONT SIGNAL				CENTER, REAR SIGNAL				REAR SIGNAL			

Mark ○ is ON position. Mark ■ is OFF position.

Table 2

## (3) Dolby Pro-logic surround circuit

AVC-210 provides **Dolby pro-logic surround** circuit surround decoder which functions same as Dolby surround decoder for professional use. The circuit is also called **active decoder**, and it comprises a different circuit from **passive decoder**, conventionally employed for home use labelled as "Dolby surround." (Figure 1)

**Directional enhancer to produce crisp sound image travel.**

Main feature is **Directional enhancement circuit**. The conventional Dolby surround circuit is designed to control 3 channels (L,R,S), but this circuit provides a new center channel and 4 channels (L,R,C,S.) control, and employs speaker system same as that of a theater to produce the sound effect.

A merit of directional enhancement circuit is greatly improves the front and rear sound separation to provide a sharp and dynamic front and rear sound image travelling. Conventionally the front and rear separation is around 3 db, but the pro-logic provides approximately 26 - 40 db. (Figure 2, 3). The directional enhancement circuit controls left, right, center and surround signals independently, and the sound image is very crisp and clear. With the conventional Dolby surround, the center sound image is nothing but compound of L and R channels, but the pro-logic has an independent center channel to produce the sound image, and achieved approximately 26 - 40 dB L and R channels separation. When the sound image is at center, both L and R channel output are cut down and as the sound image travels to L channel, center and R channel output are cut to enhance the travel of the sound.

**Feature of Pro-Logic mode**

- **NORMAL**: Signals which below 100Hz is cut are applied to center channel, and the signals below 100Hz are applied to L and R front speakers. Employ L and R speakers of a certain grade (as a pointer, use ones better than book-shelf), and use a smaller speaker for the center channel.
- **WIDE**: Normal signal is applied to center channel as it is. Employ speakers of the same grade (better than book-shelf) for center channel as well as L and R speakers.
- **PHANTOM**: Center channel signals are evenly applied to L and R channels. When a center speaker is not available, this mode is employed. Even without the center channel, the directional enhancement circuit functions as it is.
- **TEST TONE**: Used to adjust output level of each channel.

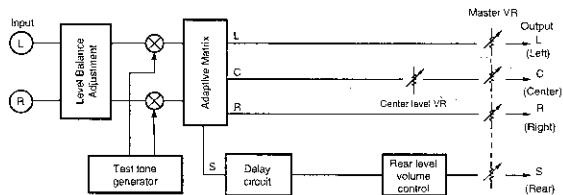


Figure 1




Figure 2


Dolby pro-logic surround decoder  
(Active decoder)

Figure 3

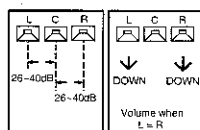
Dolby surround decoder  
(Passive decoder)

Figure 4

Dolby pro-logic surround decoder  
(Active decoder)

### Confirm Pro-logic circuit function

Confirm correct pro-logic circuit function with input signal shown table below.


- Measurement : Apply the correct input signal, and adjust level VR of master, center and rear, so that the level falls approximately within \* level, respectively.

	Input	Output	Mode		
			Normal	Phantom	Wide
Pro-logic	L ch only	L	* 0dB (1 kHz)	→	→
		C	(a) below -20dB		
		R	(Normally approximately -26 ~ -42 dB)		
		S			
	R ch only	L	Same as (a)		
		C			
		R	* 0dB (1 kHz)	→	→
		S	Same as (a)		
	L=R Same phase signal	L	Below -20 dB/approx. -6dB	0 dB	Same as (a)
		C	* 0 dB/approx. -3dB	Same as (a)	0 dB/0 dB
		R	Below -20dB/approx. -6dB	0 dB	Same as (a)
		S	Same as (a)		
L=R Both Chs Reversed phase signal	L	Same as (a)			
	C				
	R				
	S	* 3dB	→	→	

Table 3

## SEMICONDUCTORS

## ● IC's

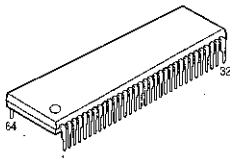HD404019RC52S  
(IC601)

Control Microprocessor HD404019RC52S Terminal Function







Pin	Port Name	Function Name	Function
1	D11	SP RELAY-F OUT	Performs toggle movement synchronizing with SP-A.
2	D12	SP RELAY-C OUT	Performs toggle movement synchronizing with SP-CENTER.
3	D13	SP RELAY-R OUT	Performs toggle movement synchronizing with SP-REAR.
4	D14	POWER RELAY OUT	Performs toggle movement synchronizing with Power Key. Power ON → HIGH, POWER OFF → LOW
5	D15	CENTER OFF OUT	Turns OFF DOLBY CENTER MODE. HIGH → CENTER OFF, LOW → CENTER ON. Default → LOW.
6	R00	LCD DATA OUT	Transfers serial data to LCD driver (IC 7652).
7	R01	LCD CLK OUT	Transfers serial clock to LCD driver 1/2.
8	R02	LCD CE1 OUT	Transfers chip enable to LCD driver 1.
9	R03	LCD INH OUT	Terminal to forcibly put out light of indication of LCD driver 1/2. LOW → Forcibly light put out. HIGH → Indication ON.
10	R10	D.D. DATA OUT	Transfers serial data to DIGITAL DELAY (M50198).
11	R11	D.D. CK OUT	Transfers serial clock to DIGITAL DELAY (M50198).
12	R12	D.D. RESQ OUT	Transfers chip reset to DIGITAL DELAY (M50198).
*13	R13	LCD CE2 OUT	Transfers chip enable to LCD Driver 2.
14	R20	NC	
15	R21	SERIAL SIG OUT	Output terminal for serial communication.
16	R22	VTR-1 REC OUT	Input terminal for VTR-1 VIDEO REC OUT.
17	R23	USA	At "LOW", U.S.A. Model.
18	RA0	PROTECT IN	Speaker protection input terminal.
19	RA1	RE CHECK IN	Receiver connection check terminal. HIGH → Performs serial communication. Does not receive remote control. LOW → Does not perform serial communication. Receives remote control.
20	R30	DM1	Shifting terminal of SSM2120 (Pin 16)
21	R31	DM2	Shifting terminal of SSM2120 (Pin 17)
22	R32/INT0	SERIAL SIG IN	Input terminal for serial communication (ACTIVE → LOW).
23	R33/INT1	REMOCOM IN	Remote control decode signal input terminal (ACTIVE → LOW).
24	H50	DM3	Shifting terminal of SSM2120 (Pin 15)
25	R51	DM4	Shifting terminal of SSM2120 (Pin 18)
26	R52	CM1	Shifting terminal of SSM2120 (Pin 20)
27	R13	CM2	Shifting terminal of SSM2120 (Pin 21)
28	R60	VOL ST-B OUT	Strobe output terminal for REAR VOLUME/BALANCE (TC9176P).
29	R61	LINE OUT	Output terminal for LINE OUT MUTING (ACTIVE → LOW).
30	R62	MASTER VOL UP	Output terminal for MASTER VOLUME UP.
31	R63	MASTER VOL DOWN	Output terminal for MASTER VOLUME DOWN.
32	Vcc	Vcc	Power supply 5V
33	R40/SCK	SCLK OUT	Clock output terminal for O.S.D. (M889323A)
34	R41/VS	SYNC DETECT OUT	Input terminal to detect presence of VIDEO signal. HIGH → VIDEO signal present (VIDEO MODE 1) LOW → No VIDEO signal (VIDEO MODE 2)
35	R42/SO	S1 DATA OUT	Data output terminal for O.S.D. (M889323A)
36	R43	CS OUT	Chip selector output terminal for O.S.D. (M889323A)

Pin	Port Name	Function Name	Function
37	R70	OTHER RESET OUT	External reset pulse output terminal (Low active pulse).
38	R71	OKS OUT	Shift clock output terminal of I/O Expander (M6631P)
39	R72	DATA OUT	Serial data output terminal of I/O Expander (M6631P)
40	R73	CLK OUT	Latch clock output terminal of I/O Expander (M6631P)
41	R80	OE OUT	Output enable output terminal of I/O Expander (M6631P)
42	R81	VOL CK OUT	Clock output terminal for volume (TC9176P)
43	R82	VOL DATA OUT	Data output terminal for volume (TC9176P)
44	R83	VOL ST-A OUT	Strobe output terminal for Front Volume Balance (TC9176P)
45	R90	KP0	Key return input terminal
46	R91	KR1	Key return input terminal
47	R92	KR2	Key return input terminal
48	R93	KR3	Key return input terminal
49	RESET	RESET	Chip reset input terminal
50	TEST	TEST	Pull-up on Vcc
51	OSC1	OSC1	Xta: 4MHz
52	OSC2	OSC2	Xtb: 4MHz
53	GND	GND	GND
54	D0	STANDBY IN	Power breakdown detect terminal (Detects Low width)
55	D1	FUNC CLOCK OUT	Clock output terminal for Function shifting (LC7821/22)
56	D2	FUNC DATA OUT	Data output terminal for Function shifting (LC7821/22)
57	D3	FUNC STROBE OUT	Strobe output terminal for Function shifting (LC7821/22)
58	D4	K5S	Key strobe output terminal
59	C5	K5O	Key strobe output terminal
60	D6	K5I	Key strobe output terminal
61	D7	K5E	Key strobe output terminal
62	D8	K5S	Key strobe output terminal
63	C9	X54	Key strobe output terminal
64	D10	PREOUT MUTE OUT	Output terminal for PREOUT MUTING (ACTIVE=Low)




CONTROL MICROPROCESSOR DIAGRAM

1                      2                      3                      4                      5                      6                      7                      8

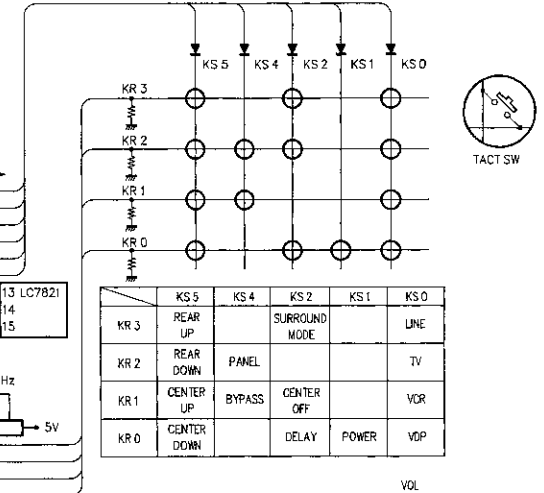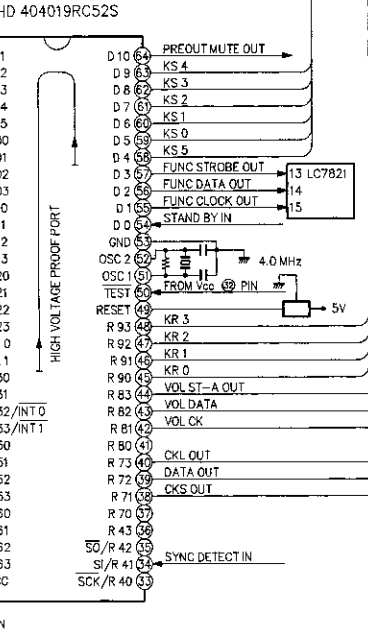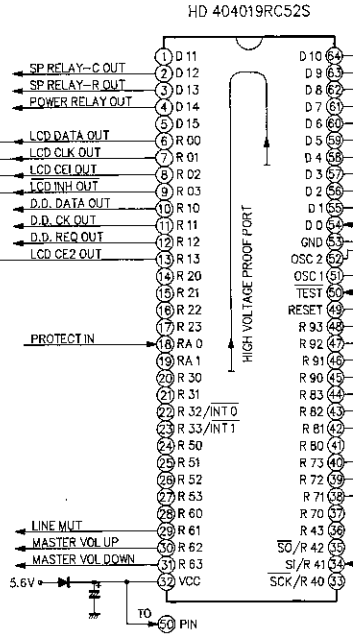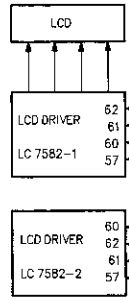


A  
B  
C  
D  
E


LC7821 (IC501)  
LC7822 (IC405)

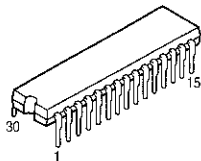


LC7821

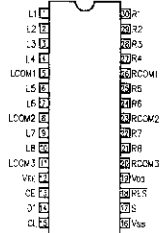

LC7821

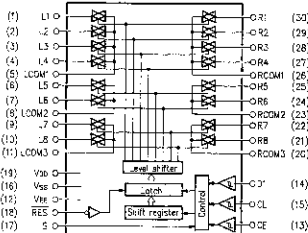

LC7822

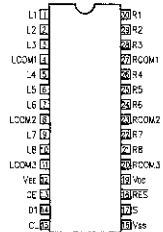

LC7822

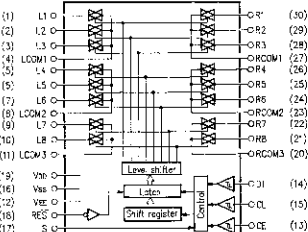



TABLE OF TERMINAL FUNCTION for LC7821, LC7822

Name of Terminal	I/O	Equivalent Internal Circuit	Function of Terminal
V <sub>cc</sub> , V <sub>ss</sub> , V <sub>SE</sub>			Power terminal
L1 - L8, R1 - R8 LCOM1 - LCOM4, RCOM1 - RCOM4		Refer to block diagram	In/Out terminal of analog switch.
CL, DI, CE	I		Serial data input terminal (Schmitt buffer), CL = Clock input terminal, DI = Data input terminal, CE = Chip enable terminal.
S	I		Selection terminal for using of two. Address will be stiched as per below table when switching S terminal to L or H.
RES	I		Reset terminal Condition of analog switch is not fixed at the time of turning on the power. When shift the terminal to L, all analog switches become GNF.

Name of Item	S Terminal	Address			
		A0	A1	A2	A3
LC7821	L	1	0	0	1
	H	1	1	0	1
LC7822	L	0	1	1	1
	H	1	1	1	1


NJM2177AF (IC402)



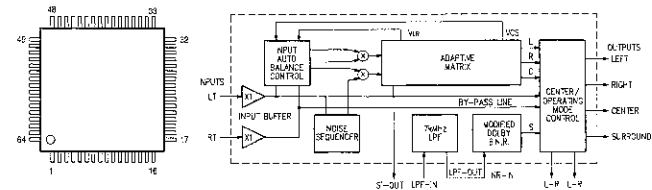NJM2177AF Terminal Function

No.	Pin Name	No.	Pin Name	No.	Pin Name	No.	Pin Name
1	NC	14	R-IN	27	MODE-CNT	40	NR-IN
2	RECT-IC	15	R-AB-OUT	28	L-OUT	41	VREF
3	R-BPF-OUT	16	NC	29	R-OUT	42	VREF
4	R-BPF-IN	17	NC	30	L-R-OUT	43	NR-WT
5	R-RECT-TC	18	R-AB-IN	31	L-R-OUT	44	LFF-OUT
6	GND	19	NOISE-CNT-E	32	NC	45	LFF-INV-IN
7	AB-GATE	20	NOISE-CNT-A	33	NC	46	LFF-MNV-IN
8	AB-HOLD-TC	21	NOISE-CNT-B	34	CENTER-MODE	47	NR-TC
9	L-AB-IN	22	NOISE-REF	35	Vcc	48	NC
10	L-AB-OUT	23	NOISE-NPF	36	C-OUT	48	NC
11	L-IN	24	NOISE-LFF	37	S-OUT	49	VLR-TC3
12	L-INBUF-OUT	25	S-OUT	38	REF	51	VCS-TC3
13	R-INBUF-OUT	26	CENTER-CNT	39	NR-VCF	52	VCS-TC2
						53	VCS-TC1
						54	VLR-TC1
						55	VLR-TC2
						56	S-RECT-OUT
						57	C-RECT-OUT
						58	R-RECT-OUT
						59	S-RECT-TC
						61	C-RECT-TC
						62	L-BPF-OUT
						63	L-RPF-IN



## LC7582E (IC801, 802)

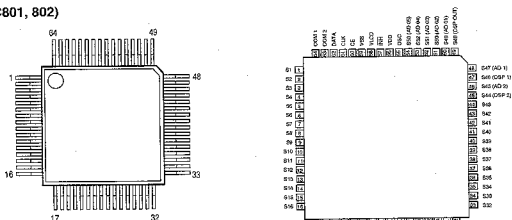


## LC7582E Terminal Function






Symbol	Function
S1 - S43	Segment output terminal.
S46 (DSP1), S44 (DSP2)	Segment output terminal or DSP input terminal.
S47 (AD1), S45 (AD2)	Segment output terminal or AD input terminal.
S48 (DSPOUT)	Segment output terminal or DSP output terminal.
S49 - S53 (ADO1 - 5)	Segment output terminal or AD output terminal.
COM1,2	Common output terminal.
V <sub>lcd</sub>	LCD bias voltage setting terminal.
OSC	Oscillator terminal.
CE, CLK, DATA	Input terminal for panel data transfer.
V <sub>ss</sub> , V <sub>dd</sub>	Power Supply.
INH	Input terminal for unlighting indication. (Effective only for output driver; transfer of serial data during unit is feasible.)
OPEN	No connection.

## M51954AL (IC603)

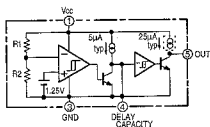


## LB1630 (IC703)


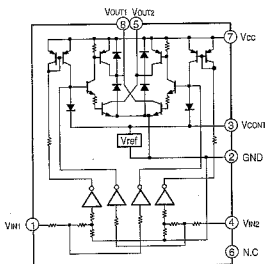


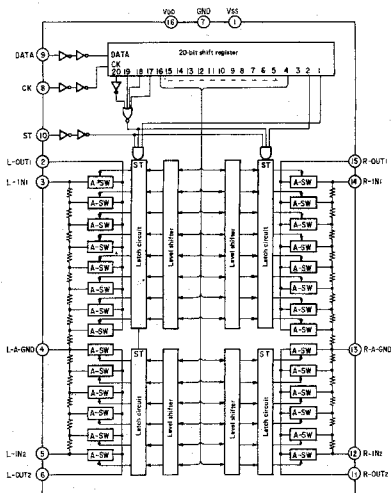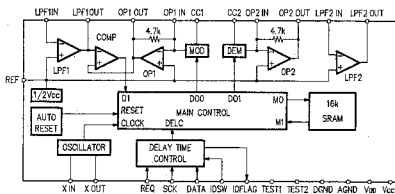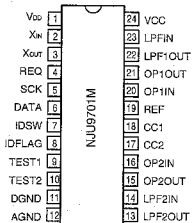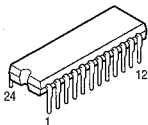TC9176P  
(IC413)NJU9701M  
(IC408)



TC4051BP  
TC4052BP




TC4051BP  
(IC901, 902)

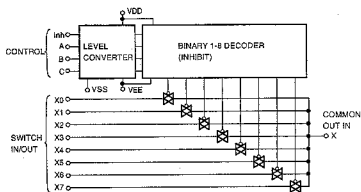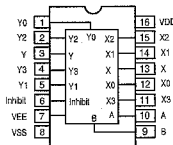


TC4052BP  
(IC502)

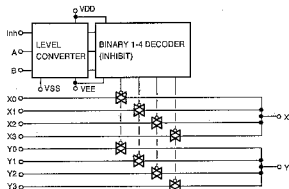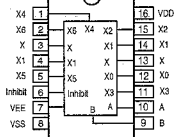


NJM7906FA (IC102, 106)  
NJM7912FA (IC104)



NJM7806FA(S) (IC101, 105)  
NJM7812FA(S) (IC103)



SI-18751  
(IC201, 301, 302)



1. +IN
2. -IN
3. -VEE
4. Output
5. +Vcc

M5218P (IC401, 404, 406, 412, 503, 504, 701, 702)


● IC PROTECTOR

ICP-N15 (IP101, 102)




## ● TRANSISTORS


2SC1815 (BL)  
 2SC1841 (E/F)  
 2SC2878 (A/B)  
 2SD1111  
 2SD1292 (Q)




2SB647A (C)  
 2SD667A (C)




2SA1048 (GR)  
 2SC2458 (BL)




2SD1207



DTC114ES (10k-10k)  
 RN1202 (10k-10k)  
 RN1204 (47k-47k)  
 RN1241 (5.6k)  
 RN2202 (10k-10k)




DTC114ES (10k-10k)  
 RN1202 (10k-10k)  
 RN1204 (47k-47k)




	R1	R2
DTA114ES	10kohm	10kohm
RN1202	10kohm	10kohm
RN1204	47kohm	47kohm

RN1241



	R1
RN1241	5.6kohm

RN2202 (10k-10k)



	R1	R2
RN2202	10kohm	10kohm

● DIODES (Included LED)


HZS5B-2  
HZS6B-1  
HZS9B-1



1SS270A




1SR35-200  
1SR35-200A




	Lead Diameter
1SR35-200	φ 0.8
1SR35-200A	φ 0.6



SFDR3G  
(Thyristor)  
(D110)

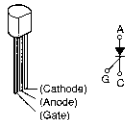

4D4B41  
(D107)





LED Assy (D801) for back light  
Part No.: 393 9470 009

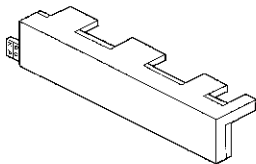





2 in series, 22 parallel = 44 chips

● Remote Control Sensor  
SPS-420-1

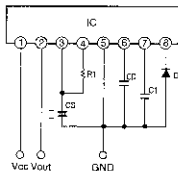

Note:  
C1 = 332 - 103 (472)  
C0 = 103 - 223 (223)  
R1 = 120k - 140k (130k)  
C5 = 22μF

LCD Ass'y (LC801)  
(8195JP) Part No. 393 4121 007

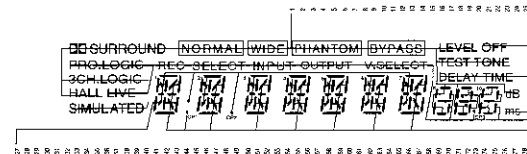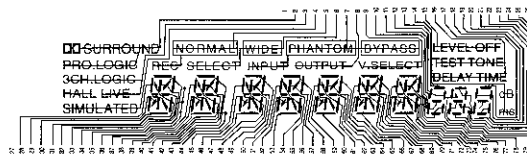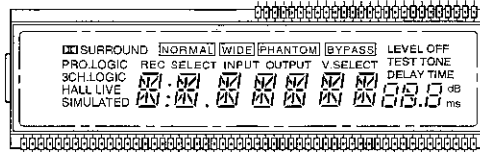

WIRING TABLE

NO.	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26				
SW	—	HD	—	LIVE	—	INHA	—	REC	—	SLEEP	—	NUL	—	DE	—	YTA	—	RC	—	Rq	—	OFF	—	SW	—	100	100	50	50	COM
CM	COM	1	10A	HAL	10A	HAL	10A	HAL	10A	HAL	10A	HAL	10A	HAL	10A	HAL	10A	1.7	10A	1.7	10A	1.7	10A	1.7	10A	1.7	10A	1.7	10A	1.7
NO	27	28	29	30	31	32	33	34	35	36	37	38	39	40	41	42	43	44	45	46	47	48	49	50	51	52	53	54	55	56
CM	COM	1	10A	HAL	10A	HAL	10A	HAL	10A	HAL	10A	HAL	10A	HAL	10A	HAL	10A	1.7	10A	1.7	10A	1.7	10A	1.7	10A	1.7	10A	1.7	10A	1.7
NO	54	55	56	57	58	59	60	61	62	63	64	65	66	67	68	69	70	71	72	73	74	75	76	77	78	79	80	81	82	83
CM	COM	1	10A	HAL	10A	HAL	10A	HAL	10A	HAL	10A	HAL	10A	HAL	10A	HAL	10A	1.7	10A	1.7	10A	1.7	10A	1.7	10A	1.7	10A	1.7	10A	1.7
CM	COM	1	10A	HAL	10A	HAL	10A	HAL	10A	HAL	10A	HAL	10A	HAL	10A	HAL	10A	1.7	10A	1.7	10A	1.7	10A	1.7	10A	1.7	10A	1.7	10A	1.7

PRINTED WIRING BOARD (Pattern Side)

1 2 3 4 5 6 7 8

MAIN UNIT ASS'Y

- | MAIN UNIT ASS'Y |                     |
|-----------------|---------------------|
| ●               | Main Unit           |
| ●               | Audio Selector Unit |
| ●               | Surround Unit       |
| ●               | Main VR Unit        |
| ●               | Balance VR Unit     |
| ●               | Power Trans Unit    |




A

B

C

D

E

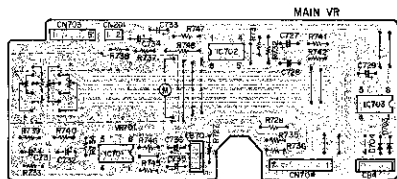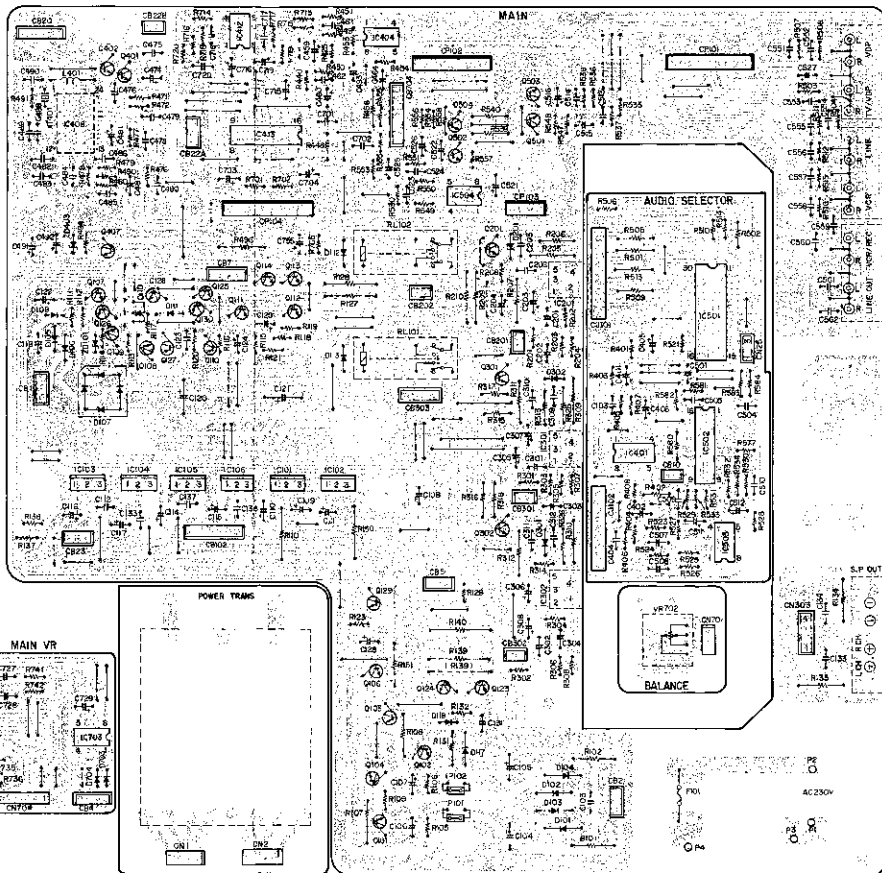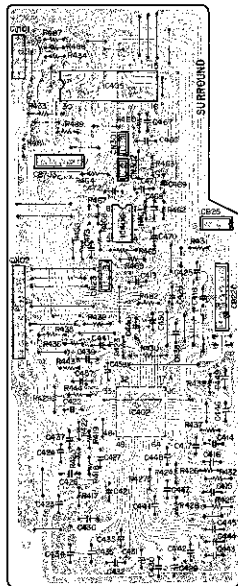




1 2 3 4 5 6 7 8

## SUB UNIT ASS'Y

## SUB UNIT ASS'Y

- Video I/O Unit
- Front CPU Unit
- LCD, Key Unit

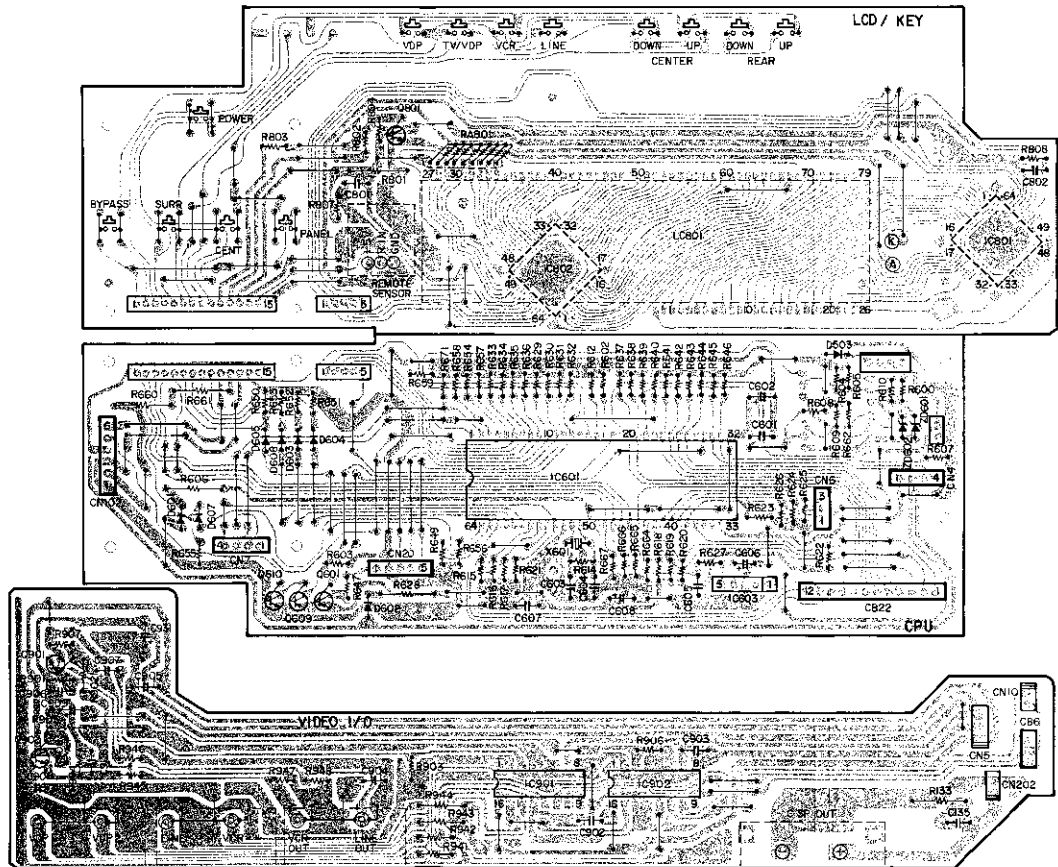

**NOTE FOR PARTS LIST**

- Part indicated with the mark " \* " are not always in stock and possibly to take a long period of time for supplying, or in some case supplying of part may be refused.
  - When ordering of part, clearly indicate "1" and "1" i) to avoid ms-supplying
  - Ordering part without stating its part number can not be supplied.
  - Part indicated with the mark " \* " is not illustrated in the exploded view.
  - Not included Carbon Film ±5%, 1/4W Type in the P.W.Board parts list. (Refer to the Schematic Diagram for those parts.)
- WARNING:**  
Parts marked with this symbol  $\Delta$  have critical characteristics.  
Use ONLY replacement parts recommended by the manufacturer.

**Resistors**

**Capacitors**

Ex: <b>RN</b> Type	<b>14K</b> Range and tolerance	<b>2E</b> Power	<b>18B</b> Resistance and temp. coeff.	<b>C</b> Allowable error	<b>FR</b> Offers
1C Carbon composition	1E 1/8W	1F 1/4W	1G ±1%	1H ±2%	1J 5% (Faded resistance type)
2E Metal trace film	2A 1/2W	2B 1W	2C ±2%	2D ±5%	2E Low loss type
3W Wirewound	3A 1W	3B 2W	3C ±5%	3D ±10%	3E Non-inductive type
7M Metallized	7A 1/2W	7B 1W	7C ±1%	7D ±5%	7E Precision type
8X Metallized	8A 1/2W	8B 1W	8C ±1%	8D ±5%	8E Low inductance

Ex: <b>CE</b> Type	<b>04W</b> Shape and pin-formance	<b>1H</b> Dielectric strength	<b>2RQ</b> Capacity	<b>M</b> Allowable error	<b>BP</b> Offers
1A Aluminum electrolytic	1C 0.2V	1F ±1%	1H High stability type	1P Non-polar type	
1B Anhydrous electrolytic	1E 10V	1G ±2%	1M High resistance type	1N High dielectric loss	
1C Electrolytic	1H 50V	1H ±10%	1N High dielectric loss	1O For charging and discharge	
1D Film	1M 25V	1M ±10%	1O For charging and discharge	1P For assuring high reliability	
1E Electrolytic	1N 50V	1N ±10%	1P For assuring high reliability	1Q Dielectric type	
1F Ceramic	1O 50V	1O ±40%	1Q Dielectric type	1R Lead wire forming	
1G OF	1P 50V	1P ±20%	1R Lead wire forming		
1H Mono	1Q 75V	1Q ±10%			
1J Metalized CF	1R 50V	1R ±5%			
1K Metalized CP	1S 300V	1S ±50%			
1L Metalized	1T 250V	1T ±20%			
1M Metalized	1U 250V	1U ±20%			

- Resistance**  
 $\frac{1}{B} \frac{2}{3} \frac{4}{5} \rightarrow$  indicates a 1.0 ohm  
 increases number of zeros after effective number  
 Units: ohm  
 2-dig effective number
- $\frac{1}{1} \frac{2}{2} \frac{3}{3} =$  1.0 ohm  
 1-dig effective number  
 Units: ohm  
 0-dig effective number, decimal point indicated by R.

- Capacity (electrolytic only)**  
 $\frac{2}{2} \frac{2}{2} \frac{2}{2} \rightarrow$  2000µF  
 indicates number of zeros after effective number.  
 Units: µF  
 2-dig effective number
- $\frac{2}{2} \frac{2}{2} \frac{2}{2} \rightarrow$  2.2µF  
 1-dig effective number, decimal point indicated by R  
 Units: µF
- Capacity (except electrolytic)**  
 $\frac{2}{2} \frac{2}{2} \frac{2}{2} =$  2200pF = 0.0022µF  
 indicates number of zeros after effective number.  
 Units: pF  
 2-dig effective number
- $\frac{2}{2} \frac{2}{2} \frac{2}{2} \frac{1}{1} =$  220pF  
 indicates number of zeros after effective number  
 Units: pF
- When the dielectric strength is indicated in AC, "AC" is included after the dielectric strength value.

**P.W.B. PARTS LIST**  
**MAIN UNIT ASS'Y (Parts No. AVC 7700 191)**

Ref. No.	Parts No.	Parts Name	Remarks
<b>MAIN UNIT</b>			
<b>SEMICONDUCTORS GROUP</b>			
IC101	252 1571 005	:C.NLM7808FA	Regulator +6 V
IC102	263 0623 002	:C.NLM7808FA	Regulator +6 V
IC103	263 0516 001	:C.NLM7815FA	Regulator +12 V
IC104	263 0541 002	:C.NLM7915FA	Regulator +12 V
IC105	262 1071 005	:C.NLM7808FA	Regulator +6 V
IC106	263 0623 002	:C.NLM7808FA	Regulator +6 V
IC201	263 0926 001	:C.S181751	Power Amp
IC301,302	263 0926 001	:C.S181751	Power Amp
IC404	283 0711 000	:C.M5218AP	OP Amp
IC406	262 1874 006	:C.NLJ9701M	Delay
IC412	265 0711 000	:C.M5218AP	OP Amp
IC413	262 0625 009	:C.TC7376P	ATT
IC501	262 0711 000	:C.M5218AP	OP Amp
Q101	272 0073 908	Transistor 2B8474 (C)	
Q102	274 0030 007	Transistor 2SD3674 (C)	
Q103	271 0151 906	Transistor 2SK3445 (G)	
Q104	273 0317 906	Transistor 2SD2458 (B)	
Q106	269 0325 006	Transistor 2RN202	3-dig. r. Resistor
Q107	273 0223 015	Transistor 2SC2878 (A)	
Q108	262 0226 007	Transistor 2RN202	3-dig. r. Resistor
Q109	273 0317 906	Transistor 2SD2458 (B)	
Q110	271 0121 906	Transistor 2SA1048 (G)	
Q111	274 0111 008	Transistor 2SD1111	
Q112	273 0317 906	Transistor 2SD2458 (B)	
Q113,114	269 0025 006	Transistor 2RN202	3-dig. r. Resistor
Q123	273 0223 015	Transistor 2SC2878 (A)	
Q124	269 0025 004	Transistor 2RN204	3-dig. r. Resistor
Q125	269 0025 008	Transistor 2RN1202	3-dig. r. Resistor
Q126	269 0009 004	Transistor 2RN1204	3-dig. r. Resistor
Q127	269 0308 007	Transistor 2R2202	3-dig. r. Resistor
Q128,129	266 0029 004	Transistor 2R1204	3-dig. r. Resistor
Q130	271 0121 906	Transistor 2SA1048 (G)	
Q301,302	273 0225 000	Transistor 2SC1841 (E)	
Q401,402	269 0020 003	Transistor 2TC1-4ES	3-dig. r. Resistor
Q407	274 0169 005	Transistor 2SD1292(E)	
Q501-504	269 0107 900	Transistor 2R1241	3-dig. r. Resistor
D101-74	276 0519 004	Diode 1SR35-200	Forming Type
D105,106	276 0519 004	Diode 1SR35-200A	
D107	276 0432 000	Diode 1SS270A	
D109	276 0432 000	Diode 1SS270A	
D110	AVC 7700 171	Thermistor FOR3G	
D111-113	276 0432 000	Diode 1SS270A	

Ref. No.	Parts No.	Parts Name	Remarks
O117	276 0319 004	Diode 1SR35-200	
O118	276 0432 000	Diode 1SS270A	
Q301	276 0432 000	Diode 1SS270A	
D301,302	276 0432 000	Diode 1SS270A	
ZD101	276 0488 906	Zener Diode HZ39B-1	6 V
ZD102	276 0459 915	Zener Diode FZ35B-2	5 V
ZD403	276 0462 902	Zener Diode FZ20B-1	0 V
IP101,102	269 0073 905	:C.Protector ICF-N15	IC Protector
<b>RESISTORS GROUP (Not Included Carbon Film ±5%, 1/4W Type, Refer to the Schematic Diagram for those Parts.)</b>			
R105,106	241 2402 058	Carbon Film 47ohm 1/8W	RD14B-47J,(5)
R109	241 2401 075	Carbon Film 27ohm 1/8W	RD14B-27J,(5)
R111	241 2401 091	Carbon Film 27ohm 1/8W	RD14B-27J,(5)
R112	241 2402 032	Carbon Film 56ohm 1/8W	RD14B-56J,(5)
R113	241 2403 831	Carbon Film 100ohm 1/8W	RD14B-10J,(5)
R114	241 2402 919	Carbon Film 33ohm 1/8W	RD14B-33J,(5)
R115	241 2398 955	Carbon Film 47ohm 1/8W	RD14B-47J,(5)
R116	241 2402 052	Carbon Film 100ohm 1/8W	RD14B-10J,(5)
R116	241 2404 088	Carbon Film 47ohm 1/8W	RD14B-47J,(5)
R119	241 2402 919	Carbon Film 33ohm 1/8W	RD14B-33J,(5)
R120	241 2400 042	Carbon Film 10ohm 1/8W	RD14B-10J,(5)
R121	241 2398 955	Carbon Film 47ohm 1/8W	RD14B-47J,(5)
R122	241 2398 955	Carbon Film 10ohm 1/8W	RD14B-10J,(5)
R123	241 2400 018	Carbon Film 47ohm 1/8W	RD14B-47J,(5)
R129	241 2401 075	Carbon Film 27ohm 1/8W	RD14B-27J,(5)
R132	241 2402 002	Carbon Film 10ohm 1/8W	RD14B-10J,(5)
R137	241 2400 018	Carbon Film 47ohm 1/8W	RD14B-47J,(5)
R138	241 2400 092	Carbon Film 100ohm 1/8W	RD14B-10J,(5)
R201	241 2405 874	Carbon Film 100ohm 1/8W	RD14B-10J,(5)
R202	241 2421 075	Carbon Film 22ohm 1/8W	RD14B-22J,(5)
R202	241 2398 955	Carbon Film 10ohm 1/8W	RD14B-10J,(5)
R204	241 2401 052	Carbon Film 20ohm 1/8W	RD14B-20J,(5)
R208	241 2401 091	Carbon Film 27ohm 1/8W	RD14B-27J,(5)
R209,210	241 2402 919	Carbon Film 33ohm 1/8W	RD14B-33J,(5)
R301,302	241 2405 874	Carbon Film 100ohm 1/8W	RD14B-10J,(5)
R303,304	241 2421 075	Carbon Film 22ohm 1/8W	RD14B-22J,(5)
R305,306	241 2398 955	Carbon Film 10ohm 1/8W	RD14B-10J,(5)
R307,308	241 2401 052	Carbon Film 20ohm 1/8W	RD14B-20J,(5)
R313,314	241 2401 075	Carbon Film 22ohm 1/8W	RD14B-22J,(5)
R315-316	241 2402 919	Carbon Film 33ohm 1/8W	RD14B-33J,(5)
R425	241 2398 955	Carbon Film 100ohm 1/8W	RD14B-10J,(5)
R440	241 2397 079	Carbon Film 47ohm 1/8W	RD14B-47J,(5)
R448	241 2397 075	Carbon Film 47ohm 1/8W	RD14B-47J,(5)
R449,450	241 2409 934	Carbon Film 20ohm 1/8W	RD14B-20J,(5)
R451	241 2396 125	Carbon Film 10ohm 1/8W	RD14B-10J,(5)
R453,454	241 2398 955	Carbon Film 100ohm 1/8W	RD14B-10J,(5)

Ref. No.	Parts No.	Parts Name	Remarks	Ref. No.	Parts No.	Parts Name	Remarks
R455,456	241 2403 934	Carbon Film 100kohm 1/6W	RD14B-104J(5)	<b>CAPACITORS GROUP</b>			
R471	241 2401 059	Carbon Film 18kohm 1/6W	RD14B-183J(5)	A-C102	RM5 5000 413	Multilayer Cap. 0.01µF/25V	CE93A2E163J(B)
R472	241 2400 034	Carbon Film 5.6kohm 1/6W	RD14B-562J(5)	C103	255 1122 040	Mylar Film Cap. 0.1µF/50 V	CQ93M1H104J
R476	241 2400 063	Carbon Film 7.5kohm 1/6W	RD14B-752J(5)	C104,105	254 4259 001	Electrolytic 220µF/35 V	CE04W1V222M
R477,478	241 2394 959	Carbon Film 20ohm 1/6W	RD14B-200J(5)	C105,107	254 4194 917	Electrolytic 10µF/25 V	CE04W1E100M(SRA)
R479	241 2401 059	Carbon Film 18kohm 1/6W	RD14B-183J(5)	C108,109	254 4196 041	Electrolytic 1µF/50 V	CE04W1H101M(SRA)
R480	241 2401 033	Carbon Film 15kohm 1/6W	RD14B-153J(5)	C110,111	254 4193 002	Electrolytic 10µF/16 V	CE04W1C100M(SRA)
R490	241 2401 033	Carbon Film 15kohm 1/6W	RD14B-153J(5)	C112,113	AVC 7700 173	Ceramic Cap. 0.1µF/50 V	CK14=104AX
R491	241 2405 974	Carbon Film 1kohm 1/6W	RD14B-105J(5)	C114,115	254 4193 002	Electrolytic 10µF/16 V	CE04W1C100M(SRA)
R494	241 2399 955	Carbon Film 1kohm 1/6W	RD14B-102J(5)	C116,117	254 4294 056	Electrolytic 100µF/25 V	CE04W1E101M(SRA)
R501,502	241 2397 079	Carbon Film 470ohm 1/6W	RD14B-471J(5)	C119	254 4206 057	Electrolytic 10µF/50 V	CE04W1H100M
R503,504	241 2405 974	Carbon Film 1Mohm 1/6W	RD14B-105J(5)	C120,121	254 4323 704	Electrolytic 4700µF/50 V	CE04W1H472M
R505,506	241 2397 079	Carbon Film 470ohm 1/6W	RD14B-471J(5)	C122	254 4206 057	Electrolytic 10µF/50 V	CE04W1H100M
R507,508	241 2405 974	Carbon Film 1Mohm 1/6W	RD14B-105J(5)	C123	255 1265 936	Mylar Film Cap. 0.01µF/50 V	CQ93M1H103J(B)
R509,510	241 2397 079	Carbon Film 470ohm 1/6W	RD14B-471J(5)	C124	254 4206 057	Electrolytic 10µF/50 V	CE04W1H100M
R511,512	241 2405 974	Carbon Film 1Mohm 1/6W	RD14B-105J(5)	C125	254 4213 034	Electrolytic 100µF/6.3 V	CE04W1J101M(SRA)
R513,514	241 2397 079	Carbon Film 470ohm 1/6W	RD14B-471J(5)	C126	254 4193 002	Electrolytic 10µF/16 V	CE04W1C100M(SRA)
R515,516	241 2403 015	Carbon Film 82kohm 1/6W	RD14B-823J(5)	C131	254 3056 946	Electrolytic 4.7µF/50 V (Bipolar)	CE04D1H477MBP
R530	241 2403 934	Carbon Film 100kohm 1/6W	RD14B-104J(5)	C133,134	255 1265 978	Mylar Film Cap. 0.022µF/50 V	CQ93M1H223J(B)
R535,536	241 2393 028	Carbon Film 5.6kohm 1/6W	RD14B-566J(5)	C137,138	AVC 7700 173	Ceramic Cap. 0.1µF/50 V	CK14=104AX
R537,538	241 2404 098	Carbon Film 470kohm 1/6W	RD14B-474J(5)	C201	254 3068 918	Electrolytic 2.2µF/50 V (Bipolar)	CE04D1H2R2MBP
R539,540	241 2398 955	Carbon Film 1kohm 1/6W	RD14B-102J(5)	C202	254 3052 908	Electrolytic 22µF/10 V (Bipolar)	CE04D1A220MBP
R547,548	241 2402 058	Carbon Film 47kohm 1/6W	RD14B-471J(5)	C203,204	254 4196 009	Electrolytic 0.1µF/50 V	CE04W1H0R1M(SRA)
R549,550	241 2396 025	Carbon Film 100ohm 1/6W	RD14B-101J(5)	C205	255 1265 936	Mylar Film Cap. 0.01µF/50 V	CQ93M1H103J(B)
R551	241 2403 934	Carbon Film 100kohm 1/6W	RD14B-104J(5)	C301,302	254 3068 918	Electrolytic 2.2µF/50 V (Bipolar)	CE04D1H2R2MBP
R553,554	241 2405 974	Carbon Film 1Mohm 1/6W	RD14B-105J(5)	C303,304	254 3052 908	Electrolytic 22µF/10 V (Bipolar)	CE04D1A220MBP
R555,556	241 2397 079	Carbon Film 470ohm 1/6W	RD14B-471J(5)	C305-308	254 4196 009	Electrolytic 0.1µF/50 V	CE04W1H0R1M(SRA)
R557,559	241 2398 955	Carbon Film 1kohm 1/6W	RD14B-102J(5)	C309	255 1265 936	Mylar Film Cap. 0.01µF/50 V	CQ93M1H103J(B)
R701,702	241 2403 934	Carbon Film 100kohm 1/6W	RD14B-104J(5)	C310,311	255 1122 040	Mylar Film Cap. 0.1µF/50 V	CQ93M1H104J
R713,714	241 2404 014	Carbon Film 220kohm 1/6W	RD14B-224J(5)	C312	255 1265 936	Mylar Film Cap. 0.01µF/50 V	CQ93M1H103J(B)
R715,716	241 2399 022	Carbon Film 2kohm 1/6W	RD14B-202J(5)	C450,460	254 4193 002	Electrolytic 10µF/16 V	CE04W1C100M(SRA)
R717	241 2400 005	Carbon Film 4.3kohm 1/6W	RD14B-432J(5)	C461,462	AVC 7700 146	Ceramic Cap. 100 pF/50 V	CK14=101AX
R718	241 2400 063	Carbon Film 7.5kohm 1/6W	RD14B-752J(5)	C463,464	254 4193 002	Electrolytic 10µF/16 V	CE04W1C100M(SRA)
R719,720	241 2396 025	Carbon Film 100ohm 1/6W	RD14B-101J(5)	C474	254 4193 002	Electrolytic 10µF/16 V	CE04W1C100M(SRA)
R785	241 2405 932	Carbon Film 680kohm 1/6W	RD14B-684J(5)	C475	255 1122 087	Mylar Film Cap. 0.022µF/50 V	CQ93M1H224J
R101,102	244 2048 932	Metal Oxide 0.22ohm 1W (NB)	RS1483AP22J(NB)	C476	255 1249 907	Mylar Film Cap. 470 pF/50 V	CQ93M1H474J
R107,108	244 2044 006	Metal Oxide 1kohm 1W (NB)	RS1483A10J(NB)	C478	255 1120 040	Mylar Film Cap. 0.1µF/50 V	CQ93M1H101J
R110	244 2023 001	Metal Oxide 33ohm 1W (NB)	RS1483A33J(NB)	C479,480	255 1264 995	Mylar Film Cap. 0.005µF/50 V	CQ93M1H562J(B)
R127,128	244 2035 004	Metal Oxide 22ohm 1W (NB)	RS1483A22J(NB)	C481	254 4193 031	Electrolytic 47µF/16 V	CE04W1C470M(SRA)
R134,135	244 2001 709	Metal Oxide 10ohm 1W (NB)	RS1483A10J(NB)	C482,483	255 1122 008	Mylar Film Cap. 0.047µF/50 V	CQ93M1H473J
R139,140	244 2032 008	Metal Oxide 3.3ohm 1W (NB)	RS1483A33J(NB)	C484	255 1120 040	Mylar Film Cap. 0.1µF/50 V	CQ93M1H104J
R146	244 2022 001	Metal Oxide 39ohm 1W (NB)	RS1483A39J(NB)	C485	255 1264 996	Mylar Film Cap. 0.003µF/50 V	CQ93M1H332J(B)
R151	244 2002 002	Metal Oxide 27ohm 1W (NB)	RS1483A27J(NB)	C486	255 1249 907	Mylar Film Cap. 470 pF/10 V	CQ93M1H471J(B)
R205	AVC 7700 175	Cermet Resistor 0.39ohm 2W	RM=30R53	C487	254 4196 041	Electrolytic 1µF/50 V	CE04W1H010M(SRA)
R206	244 2048 347	Metal Oxide 22ohm 1W (NB)	RS1483A22J(NB)	C488,489	AVC 7700 174	Ceramic Cap. 220 pF/50 V (Temp.)	CC45=221NFC
R207	244 2017 004	Metal Oxide 10ohm 1W (NB)	RS1483A10J(NB)	C490	AVC 7700 173	Ceramic Cap. 0.1µF/50 V	CK14=104AX
R309,310	244 2007 176	Cermet Resistor 0.39ohm 2W	RM=30R47	C491	254 4192 935	Electrolytic 100µF/10 V	CE04W1A101M(SRA)
R311,312	244 2017 004	Metal Oxide 10ohm 1W (NB)	RS1483A10J(NB)	C492	254 4193 002	Electrolytic 10µF/16 V	CE04W1C100M(SRA)
R325,326	244 2043 047	Metal Oxide 2.2ohm 1W (NB)	RS1483A22J(NB)				
R458	244 2051 307	Metal Oxide 4.7ohm 1W (NB)	RS1483A47J(NB)				

AUDIO SELECTOR UNIT

Ref. No.	Parts No.	Parts Name	Remarks
C513,514	AVC 7700 146	Ceramic Cap. 100 pF/50 V	CK14==101AX
C515,516	254 4196 041	Electrolytic 1 μF/50 V	CE04W1H010M(SRA)
C521,522	254 4196 041	Electrolytic 1 μF/50 V	CE04W1H010M(SRA)
C523,524	AVC 7700 146	Ceramic Cap. 100 pF/50 V	CK14==101AX
C525-527	254 4196 041	Electrolytic 1 μF/50 V	CE04W1H010M(SRA)
C551-552	AVC 7700 146	Ceramic Cap. 100 pF/50 V	CK14==101AX
C701,702	AVC 7700 147	Ceramic Cap. 0.022μF/50 V	CK14==223AX
C703,704	254 4193 002	Electrolytic 10 μF/16 V	CE04W1C100M(SRA)
C715,716	254 4193 002	Electrolytic 10 μF/16 V	CE04W1C100M(SRA)
C717,718	AVC 7700 146	Ceramic Cap. 100 pF/50 V	CK14==101AX
C719,720	254 4193 002	Electrolytic 10 μF/16 V	CE04W1C100M(SRA)

OTHER GROUP				Q'ty
	—	(P.W.Board)		(1)
RL101,102	214 0154 005	Output Relay VB245TB	or VB245MB	2
	204 8256 008	4 P Pin Jack(S-GND)	White/Red	3
	205 0692 029	4 P Speaker Terminal		1
FL101	205 4031 016	Fuse 1500mA/250V	20 mm	2
	202 0022 008	Fuse Clip		2
XT401	399 0223 907	Ceramic Resonator	CSA 2.00 MHz	1
L401	235 0060 989	Inductor 120 μH		1
	AVC 7700 177	IC Spacer	for IC201,301,302	3
CB22B	AVC 7700 169	2 P EH Conn. Base		1
CB201	AVC 7700 169	2 P EH Conn. Base		1
CB301,302	AVC 7700 169	2 P EH Conn. Base		2
CB302	AVC 7700 192	2 P XH Conn. Base		1
CB002,005	AVC 7700 153	3 P EH Conn. Base		2
CB22A,23	AVC 7700 153	3 P EH Conn. Base		2
CB001	AVC 7700 184	3 P XH Conn. Base		1
CB007	AVC 7700 185	4 P EH Conn. Base		1
CB301	AVC 7700 186	4 P XH Conn. Base		1
CB020	AVC 7700 154	5 P EH Conn. Base		1
CB102	AVC 7700 186	6 P EH Conn. Base		1
CB704	AVC 7700 155	7 P EH Conn. Base		1
	AVC 7700 178	4 P Dip Socket	MSA91308-4	1
	AVC 7700 179	9 P Dip Socket	MSA91308-9	2
	AVC 7700 180	10 P Dip Socket	MSA91308-10	1
	—	Connector Pin	L=10	4

Ref. No.	Parts No.	Parts Name	Remarks
<b>SEMICONDUCTORS GROUP</b>			
IC401	263 0711 000	IC M5218AP	
IC501	262 1227 008	IC LG7821	
IC502	262 1096 006	IC TC4052BP	
IC603	263 0711 000	IC M5216AP	

<b>RESISTORS GROUP (Not included Carbon Film ±5%, 1/4W Type, Refer to the Schematic Diagram for those Parts.)</b>			
R401,402	241 2397 972	Carbon Film 470kohm 1/6W	RD14B-471J(5)
R403,404	241 2403 073	Carbon Film 150kohm 1/6W	RD14B-154J(5)
R405,406	241 2404 099	Carbon Film 470kohm 1/6W	RD14B-474J(5)
R407,408	241 2396 025	Carbon Film 100kohm 1/6W	RD14B-101J(5)
R521	241 2405 039	Carbon Film 680kohm 1/6W	RD14B-684J(5)
R523,524	241 2403 073	Carbon Film 470kohm 1/6W	RD14B-474J(5)
R525-528	241 2396 025	Carbon Film 100kohm 1/6W	RD14B-101J(5)
R529,530	241 2403 934	Carbon Film 100kohm 1/6W	RD14B-104J(5)
R531,532	241 2397 972	Carbon Film 470kohm 1/6W	RD14B-471J(5)
R533,534	241 2405 074	Carbon Film 1Mohm 1/6W	RD14B-105J(5)
R577	241 2399 955	Carbon Film 1kohm 1/6W	RD14B-102J(5)
R580	241 2396 955	Carbon Film 1kohm 1/6W	RD14B-102J(5)
R581	241 2401 017	Carbon Film 12kohm 1/6W	RD14B-123J(5)
R582,583	241 2400 092	Carbon Film 10kohm 1/6W	RD14B-103J(5)
R584	241 2401 017	Carbon Film 12kohm 1/6W	RD14B-123J(5)

<b>CAPACITORS GROUP</b>			
C401,402	254 4193 002	Electrolytic 10 μF/16 V	CE04W1C100M(SRA)
C403,404	AVC 7700 146	Ceramic Cap. 100 pF/50 V	CK14==101AX
C405,406	254 4196 041	Electrolytic 1 μF/50 V	CE04W1H010M(SRA)
C501	AVC 7700 147	Ceramic Cap. 0.022μF/50 V	CK14==223AX
C504,505	AVC 7700 147	Ceramic Cap. 0.022μF/50 V	CK14==223AX
C507,508	254 4193 002	Electrolytic 10 μF/16 V	CE04W1C100M(SRA)
C509,510	AVC 7700 146	Ceramic Cap. 100 pF/50 V	CK14==101AX
C511,512	254 4196 041	Electrolytic 1 μF/50 V	CE04W1H010M(SRA)

OTHER GROUP				Q'ty
	—	(P.W.Board)		(1)
CB025	AVC 7700 169	2 P EH Connector Base		1
CB010	AVC 7700 153	3 P EH Connector Base		1
CJ101,102	AVC 7700 170	9 P Dip Socket	MSA 9131-9L	2

## SURROUND UNIT

Ref. No.	Parts No.	Parts Name	Remarks
<b>SEMICONDUCTORS GROUP</b>			
IC402	263 0906 606	IC NUM1277A	
IC405	262 1228 007	IC LC7822	
IC406	263 0711 000	IC MS216AP	
<b>RESISTORS GROUP (Not included Carbon Film <math>\pm 5\%</math>, 1/4W Type, Refer to the Schematic Diagram for those Parts.)</b>			
R417	241 2404 959	Carbon Film 330kohm 1/6W	RD14B-334J(5)
R418	241 2400 979	Carbon Film 8.2kohm 1/6W	RD14B-822J(5)
R419,420	241 2401 033	Carbon Film 15kohm 1/6W	RD14B-153J(5)
R422	245 2342 000	Metal Film 100kohm 1/6W	RN14K2E104F $\pm 1\%$
R423	241 2403 934	Carbon Film 100kohm 1/6W	RD14B-104J(5)
R424	241 2400 053	Carbon Film 7.5kohm 1/6W	RD14B-752J(5)
R425	241 2401 033	Carbon Film 15kohm 1/6W	RD14B-153J(5)
R426	241 2402 058	Carbon Film 47kohm 1/6W	RD14B-473J(5)
R427	241 2400 053	Carbon Film 7.5kohm 1/6W	RD14B-752J(5)
R428	241 2402 058	Carbon Film 47kohm 1/6W	RD14B-473J(5)
R429	241 2400 979	Carbon Film 8.2kohm 1/6W	RD14B-822J(5)
R430	241 2402 074	Carbon Film 56kohm 1/6W	RD14B-563J(5)
R431	241 2403 934	Carbon Film 100kohm 1/6W	RD14B-104J(5)
R432	241 2401 033	Carbon Film 15kohm 1/6W	RD14B-153J(5)
R433,434	241 2396 025	Carbon Film 100kohm 1/6W	RD14B-101J(5)
R435,436	241 2402 058	Carbon Film 47kohm 1/6W	RD14B-473J(5)
R436	241 2403 934	Carbon Film 100kohm 1/6W	RD14B-104J(5)
R437	AVC 7700 148	Carbon Film 4.7kohm 1/6W	RD14B-475J(5)
R438	241 2402 074	Carbon Film 56kohm 1/6W	RD14B-563J(5)
R439	241 2397 972	Carbon Film 470ohm 1/6W	RD14B-471J(5)
R443,444	241 2400 979	Carbon Film 8.2kohm 1/6W	RD14B-822J(5)
R456	241 2403 934	Carbon Film 100kohm 1/6W	RD14B-104J(5)
R460	AVC 7700 149	Metal Film 680kohm 1/6W	RN14K2E684F $\pm 1\%$
R461	241 2400 092	Carbon Film 10kohm 1/6W	RD14B-103J(5)
R462	241 2397 972	Carbon Film 470ohm 1/6W	RD14B-471J(5)
R464	241 2397 972	Carbon Film 470ohm 1/6W	RD14B-471J(5)
R465	241 2400 092	Carbon Film 10kohm 1/6W	RD14B-103J(5)
R467,468	241 2396 025	Carbon Film 100ohm 1/6W	RD14B-101J(5)
R469	241 2404 098	Carbon Film 470kohm 1/6W	RD14B-474J(5)
R481,482	241 2396 025	Carbon Film 100ohm 1/6W	RD14B-101J(5)
R487-489	241 2399 052	Carbon Film 1kohm 1/6W	RD14B-102J(5)
<b>CAPACITORS GROUP</b>			
C413	254 4193 044	Electrolytic 100 $\mu$ F/16 V	CE04W1C101M(SRA)
C414	AVC 7700 143	Electrolytic 22 $\mu$ F/16 V	CE04W1C220M(LL)
C415	255 1084 007	Mylar Film Cap. 0.1 $\mu$ F/50 V	CQ93M1H104K
C416	255 1249 923	Mylar Film Cap. 690 pF/50 V	CQ93M1H681J(B)
C417	255 1122 008	Mylar Film Cap. 0.047 $\mu$ F/50 V	CQ93M1H473J
C418	254 4193 002	Electrolytic 10 $\mu$ F/16 V	CE04W1C100M(SRA)
C421	254 4252 066	Electrolytic 470 $\mu$ F/10 V	CE04W1A471M
C422	254 4196 041	Electrolytic 1 $\mu$ F/50 V	CE04W1H010M(SRA)
C423	AVC 7700 144	Mylar Film Cap. 0.68 $\mu$ F/50 V	CQ93-1H684J
C424	255 1264 940	Mylar Film Cap. 2200 pF/50 V	CQ93M1H222J(B)
C425	254 4193 002	Electrolytic 10 $\mu$ F/16 V	CE04W1C100M(SRA)
C426	255 1122 008	Mylar Film Cap. 0.047 $\mu$ F/50 V	CQ93M1H473J
C427	255 1249 907	Mylar Film Cap. 470 pF/50 V	CQ93M1H471J(B)
C428	254 4193 002	Electrolytic 10 $\mu$ F/16 V	CE04W1C100M(SRA)

Ref. No.	Parts No.	Parts Name	Remarks
C428,430	255 1084 007	Mylar Film Cap. 0.1 $\mu$ F/50 V	CQ93M1H104K
C431	255 1088 003	Mylar Film Cap. 0.22 $\mu$ F/50 V	CQ93M1H224K
C432,433	254 4196 973	Electrolytic 4.7 $\mu$ F/50 V	CE04W1H477M(SRA)
C434-436	255 1088 003	Mylar Film Cap. 0.22 $\mu$ F/50 V	CQ93M1H224K
C437	255 1264 995	Mylar Film Cap. 5600 pF/50 V	CQ93M1H562J(B)
C438	255 1264 982	Mylar Film Cap. 4700 pF/50 V	CQ93M1H472J(B)
C439	254 4193 002	Electrolytic 10 $\mu$ F/16 V	CE04W1C100M(SRA)
C440	254 4193 015	Electrolytic 22 $\mu$ F/16 V	CE04W1C220M(SRA)
C441	254 4193 002	Electrolytic 10 $\mu$ F/16 V	CE04W1C100M(SRA)
C441-443	255 1084 007	Mylar Film Cap. 0.1 $\mu$ F/50 V	CQ93M1H104K
C444,445	255 1260 012	Mylar Film Cap. 0.022 $\mu$ F/50 V	CQ93M1H223J
C446	255 1084 007	Mylar Film Cap. 0.1 $\mu$ F/50 V	CQ93M1H104K
C447	255 1249 923	Mylar Film Cap. 680 pF/50 V	CQ93M1H681J(B)
C448	255 1122 008	Mylar Film Cap. 0.047 $\mu$ F/50 V	CQ93M1H473J
C449	255 1084 007	Mylar Film Cap. 0.1 $\mu$ F/50 V	CQ93M1H104K
C450	254 4192 935	Electrolytic 100 $\mu$ F/10 V	CE04W1A101M(SRA)
C457,458	254 4196 041	Electrolytic 1 $\mu$ F/50 V	CE04W1H010M(SRA)
C465,467	AVC 7700 147	Ceramic Cap. 0.022 $\mu$ F/50 V	CK14-223AX
C468	AVC 7700 145	Ceramic Cap. 10 pF/50 V	CK14-100AX
C469	254 4193 002	Electrolytic 10 $\mu$ F/16 V	CE04W1C100M(SRA)
O470,471	254 4196 041	Electrolytic 1 $\mu$ F/50 V	CE04W1H010M(SRA)
C472	254 4193 002	Electrolytic 10 $\mu$ F/16 V	CE04W1C100M(SRA)
C473	AVC 7700 146	Ceramic Cap. 100 pF/50 V	CK14-1001AX
<b>OTHER GROUP</b>			
		(P.W.Board)	(1)
CB22A	AVC 7700 153	3 P EH Connector Base	2
CB703	AVC 7700 154	5 P EH Connector Base	1
CB22C	AVC 7700 155	7 P EH Connector Base	1
CN301	AVC 7700 194	3 P Connector	L=150 1
CN302	AVC 7700 195	3 P Connector	L=180 1
CJ103	AVC 7700 150	4 P Dip Socket	MSA 9131-4L 1
CJ104	AVC 7700 151	10 P Dip Socket	MSA 9131-10L 1

## MAIN VR. BALANCE VR UNIT

Ref. No.	Parts No.	Parts Name	Remarks
<b>SEMICONDUCTORS GROUP</b>			
IC701,702 IC703	263 0711 000 AVC 7700 159	IC M5218AP IC LB1630	
D703,704	276 0432 000	Diode 1S5270A	
<b>RESISTORS GROUP (Not included Carbon Film <math>\pm 5\%</math>, 1/4W Type, Refer to the Schematic Diagram for those Parts.)</b>			
R727,728 R731-734 R735-738 R739-742 R745-746	241 2397 972 241 2405 958 241 2403 934 241 2397 972 241 2396 025	Carbon Film 470ohm 1/6W Carbon Film 820kohm 1/6W Carbon Film 100kohm 1/6W Carbon Film 470ohm 1/6W Carbon Film 100ohm 1/6W	RD14B-471J(5) RD14B-824J(5) RD14B-104J(5) RD14B-471J(5) RD14B-101J(5)
VR701 VR702	AVC 7700 160 AVC 7700 161	Variable Resistor 100kohm Variable Resistor 100kohm	Main Balance
<b>CAPACITORS GROUP</b>			
C726,729 C729 C731,732 C733-736	254 4196 041 254 4192 922 254 4196 041 254 4196 967	Electrolytic 1 $\mu$ F/50 V Electrolytic 47 $\mu$ F/10 V Electrolytic 1 $\mu$ F/50 V Electrolytic 2.2 $\mu$ F/50 V	CE04W1H010M(SRA) CE04W1A470M(SRA) CE04W1H010M(SRA) CE04W1H2R2M(SRA)
<b>OTHER GROUP</b>			
		(P.W.Board)	Q'ty
CB701	AVC 7700 153	3 P EH Connector Base	1
CN201 CN701 CN004 CN703 CN704	AVC 7700 193 AVC 7700 136 AVC 7700 135 AVC 7700 137 AVC 7700 138	2 P Connector 3 P Connector 4 P Connector 5 P Connector 7 P Connector	L=300 L=100 L=150 L=200 L=100

## POWER TRANS UNIT

Ref. No.	Parts No.	Parts Name	Remarks	Q'ty
<b>OTHER GROUP</b>				
		(P.W.Board)		(1)

## SUB UNIT ASS'Y (Parts No. AVC 7700 192)

Ref. No.	Parts No.	Parts Name	Remarks	
<b>VIDEO VO UNIT</b>				
<b>SEMICONDUCTORS GROUP</b>				
IC901,902	262 1106 004	IC TC4051BP		
Q901,902	273 0196 015	Transistor 2SC1815 (BL)		
<b>RESISTORS GROUP (Not included Carbon Film <math>\pm 5\%</math>, 1/4W Type, Refer to the Schematic Diagram for those Parts.)</b>				
R901 R902 R903 R904 R905 R906 R907,908 R941-944 R945,946 R947,948	241 2397 053 241 2379 064 241 2403 934 241 2397 053 241 2379 064 241 2403 934 241 2401 062 241 2396 025 241 2396 068 241 2401 075	Carbon Film 360ohm 1/6W Carbon Film 3kohm 1/6W Carbon Film 100kohm 1/6W Carbon Film 360ohm 1/6W Carbon Film 3kohm 1/6W Carbon Film 100kohm 1/6W Carbon Film 20kohm 1/6W Carbon Film 100ohm 1/6W Carbon Film 56ohm 1/6W Carbon Film 22kohm 1/6W	FD14B-361J(5) FD14B-302J(5) FD14B-104J(5) RD14B-361J(5) RD14B-302J(5) RD14B-104J(5) RD14B-203J(5) RD14B-101J(5) RD14B-560J(5) RD14B-223J(5)	
R913	241 2375 907	Carbon Film 10kohm 1/6W	FD14B2E100J(5)	
<b>CAPACITORS GROUP</b>				
C133	255 1260 012	Mylar Film Cap. 0.022 $\mu$ F/50 V	CQ99M1H223J(B)F	
C901 C902,903 C904 C905 C906 C907 C908 C909 C931	254 4196 041 AVC 7700 133 254 4196 041 254 4252 079 AVC 7700 156 254 4192 935 AVC 7700 156 254 4192 935 254 4252 079	Electrolytic 1 $\mu$ F/50 V Ceramic Cap. 0.01 $\mu$ F/50 V Electrolytic 1 $\mu$ F/50 V Electrolytic 1000 $\mu$ F/10 V Ceramic Cap. 470 pF/50 V Electrolytic 100 $\mu$ F/10 V Ceramic Cap. 470 pF/50 V Electrolytic 100 $\mu$ F/10 V Electrolytic 1000 $\mu$ F/10 V	CE04W1H010M(SRA) CK14==103AX CE04W1A101M(SRA) CE04W1A102M CK14==471AX CE04W1A101M(SRA) CK14==471AX CE04W1A101M(SRA) CE04W1A102M	
<b>OTHER GROUP</b>				
		(P.W.Board)	Q'ty	
	204 8360 001 205 0695 007	2 P Pin Jack (S-GND) 2 P Speaker Terminal	Red/Black	3 1
CB006	AVC 7700 153	3 P EH Connector Base		1
CN010 CN005	AVC 7700 164 AVC 7700 162	2 P Connector 3 P Connector	L=280 L=250	1 1
CN201	AVC 7700 193	2 P Connector	L=300	1


## FRONT(CPU) UNIT

Ref. No.	Parts No.	Parts Name	Remarks
<b>SEMICONDUCTORS GROUP</b>			
IC601	282 2914 028	IC HD40419RC52S	μ-com
IC603	AVC 7700 131	IC M61564AL	
CB01	259 0026 007	Transistor RN2202	Built in Resistor
CB02	259 0029 004	Transistor RN1204	Built in Resistor
CB09	259 0026 007	Transistor RN2202	Built in Resistor
CB10	259 0026 008	Transistor RN1202	Built in Resistor
DS01-605	276 0432 009	Diode 1SS270A	
DS07-606	276 0432 009	Diode 1SS270A	
DS10-611	276 0432 009	Diode 1SS270A	
<b>RESISTORS GROUP (Not included Carbon Film ±5%, 1/4W Type, Refer to the Schematic Diagram for those Parts.)</b>			
R600	241 2396 955	Carbon Film 1k $\Omega$ ohm 1/6W	RD14B-102(J)S
R602-603	241 2400 092	Carbon Film 10k $\Omega$ ohm 1/6W	RD14B-103(J)S
R607	241 2400 092	Carbon Film 10k $\Omega$ ohm 1/6W	RD14B-103(J)S
R612	241 2400 092	Carbon Film 10k $\Omega$ ohm 1/6W	RD14B-103(J)S
R615-623	241 2400 092	Carbon Film 10k $\Omega$ ohm 1/6W	RD14B-103(J)S
R627	241 2393 086	Carbon Film 10k $\Omega$ ohm 1/6W	RD14B-103(J)S
R629-645	241 2400 092	Carbon Film 10k $\Omega$ ohm 1/6W	RD14B-103(J)S
R647	241 2400 018	Carbon Film 4.7k $\Omega$ ohm 1/6W	RD14B-472(J)S
R649-655	241 2403 934	Carbon Film 10k $\Omega$ ohm 1/6W	RD14B-104(J)S
R656	241 2400 092	Carbon Film 10k $\Omega$ ohm 1/6W	RD14B-103(J)S
R657-659	241 2403 934	Carbon Film 10k $\Omega$ ohm 1/6W	RD14B-104(J)S
R664-667	241 2402 029	Carbon Film 47k $\Omega$ ohm 1/6W	RD14B-473(J)S
R671	241 2403 934	Carbon Film 10k $\Omega$ ohm 1/6W	RD14B-104(J)S
△ R705	244 3030 001	Metal Oxide 2.2k $\Omega$ 1W(NB)	RS14G3A022J(NES)S
△ R706	244 3030 004	Metal Oxide 2.2k $\Omega$ 1W(NB)	RS14G3A022J(NES)S
△ R603-661	244 3044 034	Metal Oxide 4.7k $\Omega$ 1W(NB)	RS14G3A472J(NES)S
<b>CAPACITORS GROUP</b>			
CS01	AVC 7700 133	Ceramic Cap. 0.01 $\mu$ F/50 V	CK14=103AX
CS02	259 0007 003	Back up Cap. 820 $\Omega$ /F/5.5 V	SB CAP=822
CS03-604	AVC 7700 132	Ceramic Cap. 22 pF/50 V	CC45=220(NPC) (Temp.)
CS05	256 1034 089	Metalized Cap. 0.1 $\mu$ F/50 V	CF93A1H124(ECCV)
CS06	254 4305 939	Electrolytic 0.33 $\mu$ F/50 V	CE0M11H1R33M(SRA)
CS07	AVC 7700 133	Ceramic Cap. 0.01 $\mu$ F/50 V	CK14=103AX
CS08	254 4380 000	Electrolytic 220 $\mu$ F/10 V	CE04W1A221M(SRA)
<b>OTHER GROUP</b>			
		(P.W.Board)	(1)
X101	399 0041 008	Ceramic Resonator	4.00 MHz 1
CN006	AVC 7700 152	3 P Connector	L=300 1

## FRONT(LCD/KEY) UNIT

Ref. No.	Parts No.	Parts Name	Remarks
<b>SEMICONDUCTORS GROUP</b>			
IC801-802	283 0880 009	IC LC7582E	
CB01	274 0097 009	Transistor 2SD1207(TIS)	
DS01	393 9470 909	LED Assy	SPS-420-1
LC801	393 4121 007	LOD Assy (LCD8195 JP)	
	AVC 7700 140	Remoon Sensor	
<b>RESISTORS GROUP (Not included Carbon Film ±5%, 1/4W Type, Refer to the Schematic Diagram for those Parts.)</b>			
R802	241 2401 033	Carbon Film 15k $\Omega$ ohm 1/6W	RD14B-153(J)S
R803	241 2400 905	Carbon Film 10k $\Omega$ ohm 1/6W	RD14B-103(J)S
R804	241 2403 934	Carbon Film 10k $\Omega$ ohm 1/6W	RD14B-104(J)S
R807-808	241 2402 061	Carbon Film 5k $\Omega$ ohm 1/6W	RD14B-513(J)S
△ R809	244 3023 001	Metal Oxide 33k $\Omega$ 1W(NB)	RS14G3A332J(NES)S
R801	AVC 7700 142	Resistor Array 47k $\Omega$ ohm x 8	RK99=473JP8
<b>CAPACITORS GROUP</b>			
CS01-802	AVC 7700 141	Ceramic Cap. 680 pF/50 V	CK14=681AX
<b>OTHER GROUP</b>			
		(P.W.Board)	(1)
	212 4388 004	Tact Switch(SK+H4J)	H=4.3 mm 5
	212 5607 804	Tact Switch(SK+VH8024A)	H=9.5 mm 9

BLOCK DIAGRAM

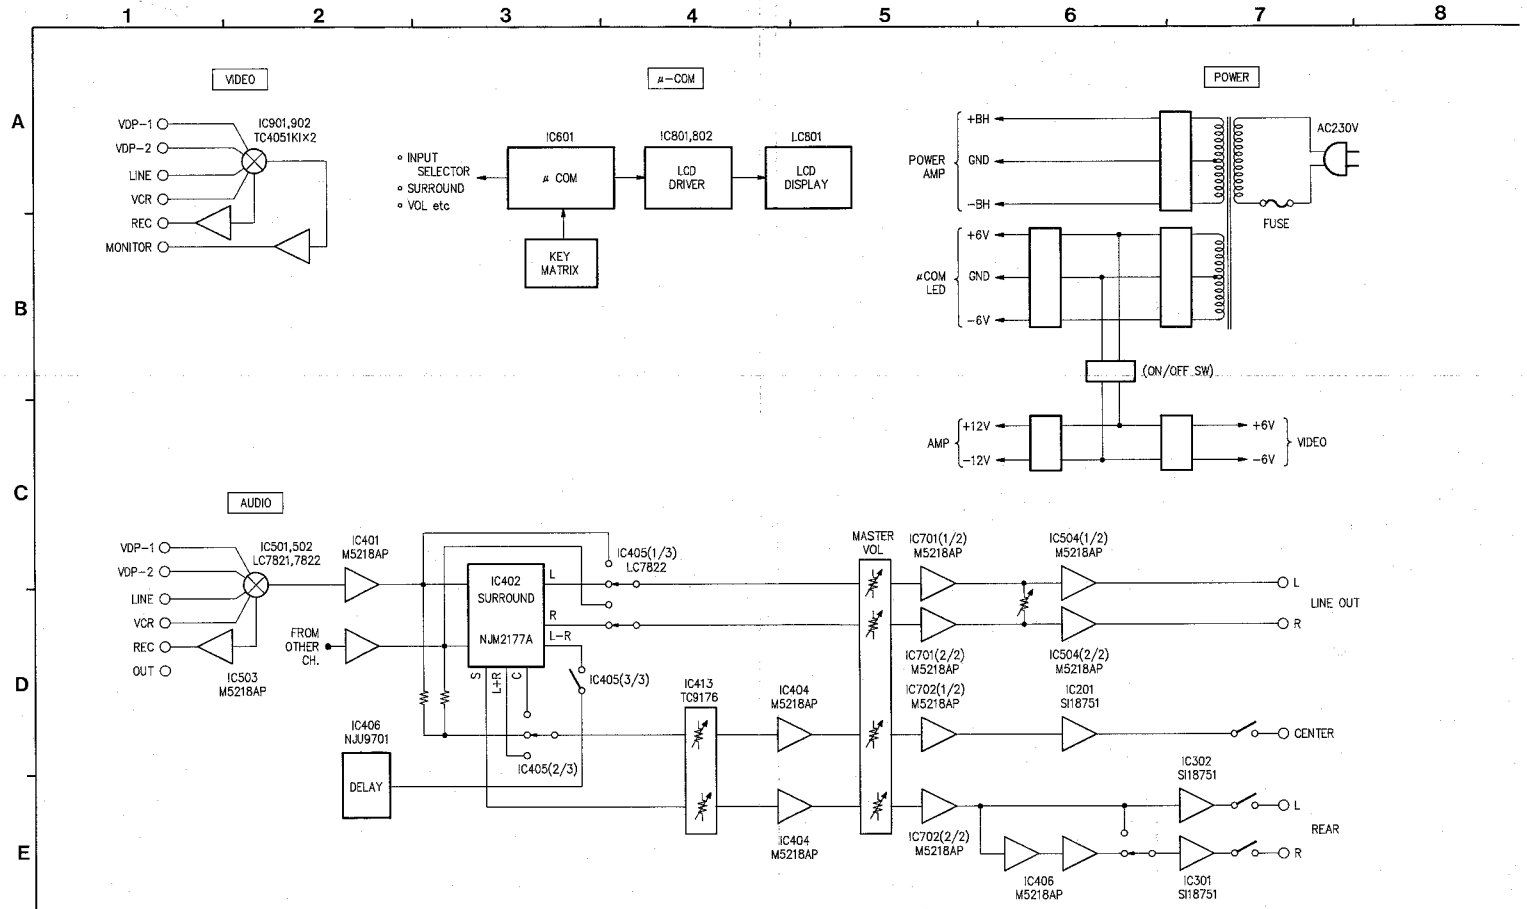



# SCHEMATIC DIAGRAM (1/2)

1


2





3


4

5

6

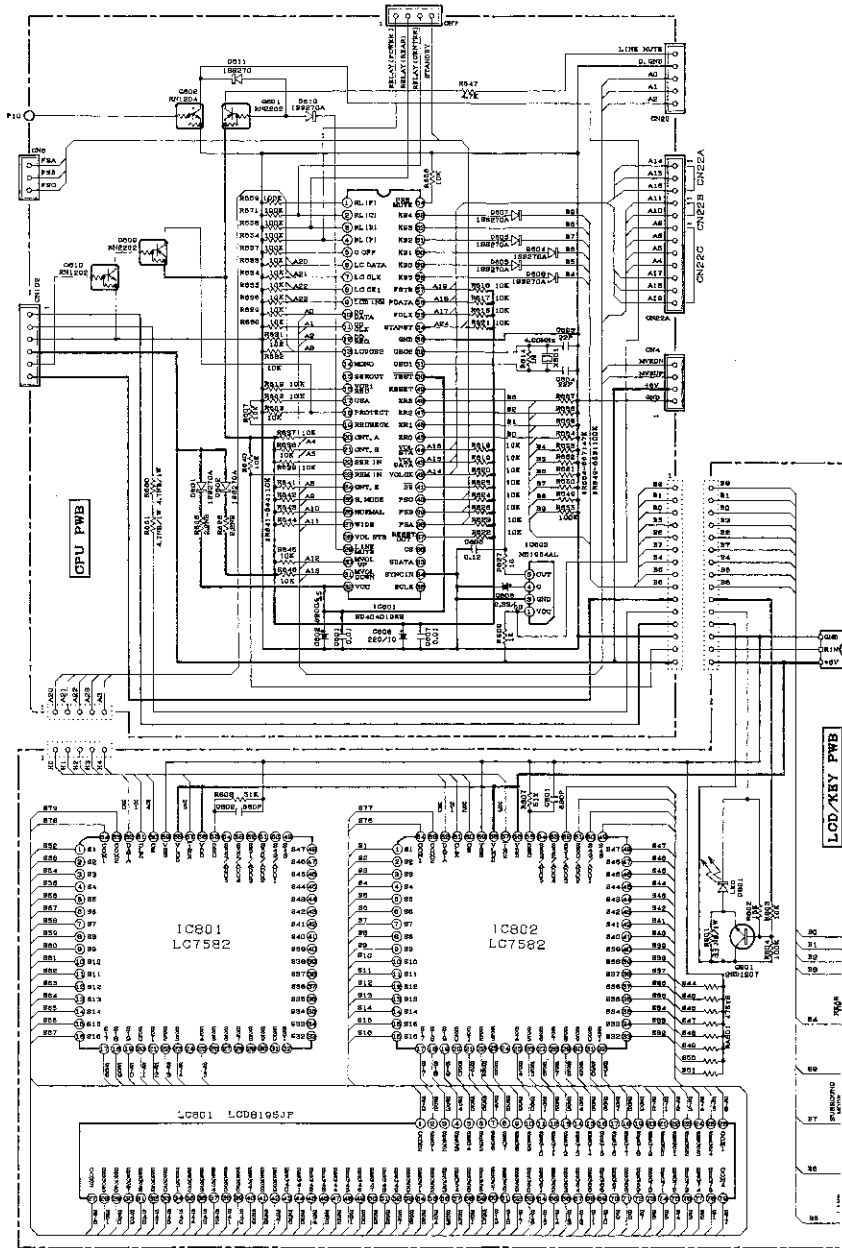

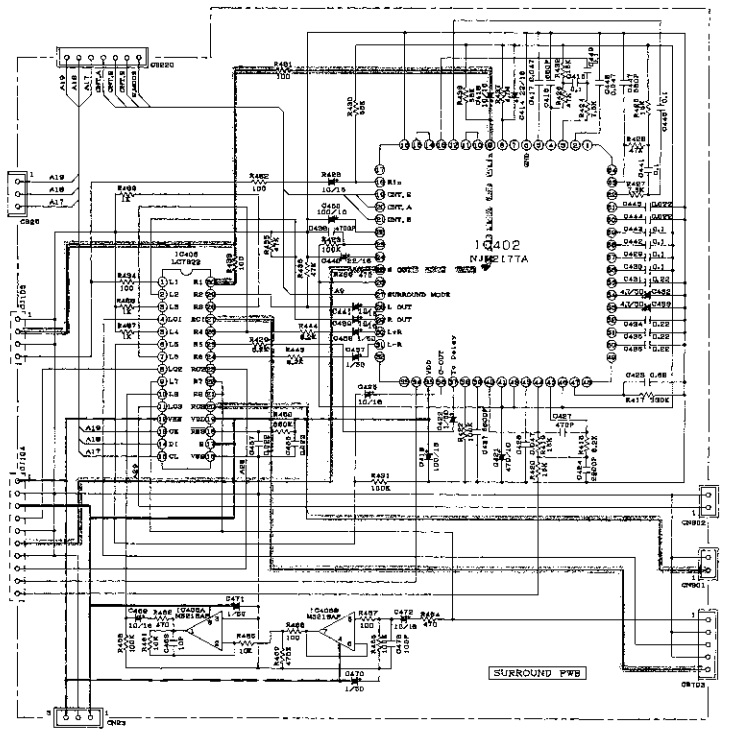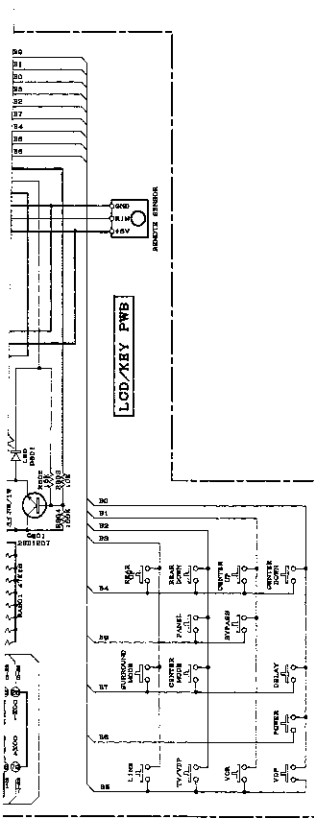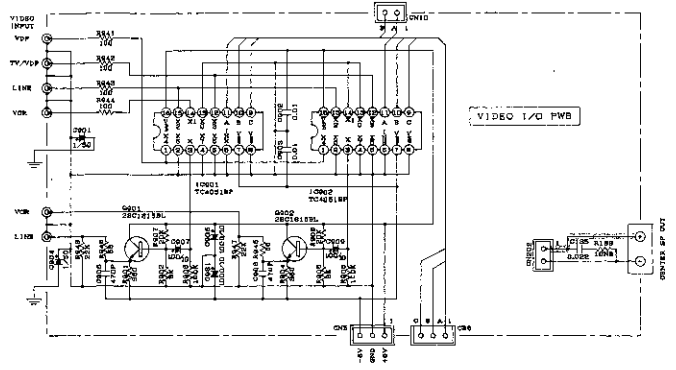


**WARNING:**  
Parts marked with this symbol  have critical characteristics. Use ONLY replacement parts recommended by the manufacturer.


**CAUTION:**  
Before returning the unit to the customer, make sure you make either (1) a leakage current check or (2) a time to charge resistance check. If the leakage current exceeds 0.5 milliamperes, or if the resistance from chassis to either side of the power cord is less than 240 kohms, the unit is defective.

**WARNING:**  
DO NOT return the unit to the customer until the problem is located and corrected.

**NOTES**  
ALL RESISTANCE VALUES IN OHM, K=1,000 OHM, M=1,000,000 OHM  
ALL CAPACITANCE VALUES IN MICRO FARAD, P=MICRO-MICRO FARAD  
EACH VOLTAGE AND CURRENT ARE MEASURED AT NO SIGNAL INPUT CONDITION.  
CIRCUIT AND PARTS ARE SUBJECT TO CHANGE WITHOUT PRIOR NOTICE.


A  
B  
C  
D  
E  
F  
G  
H

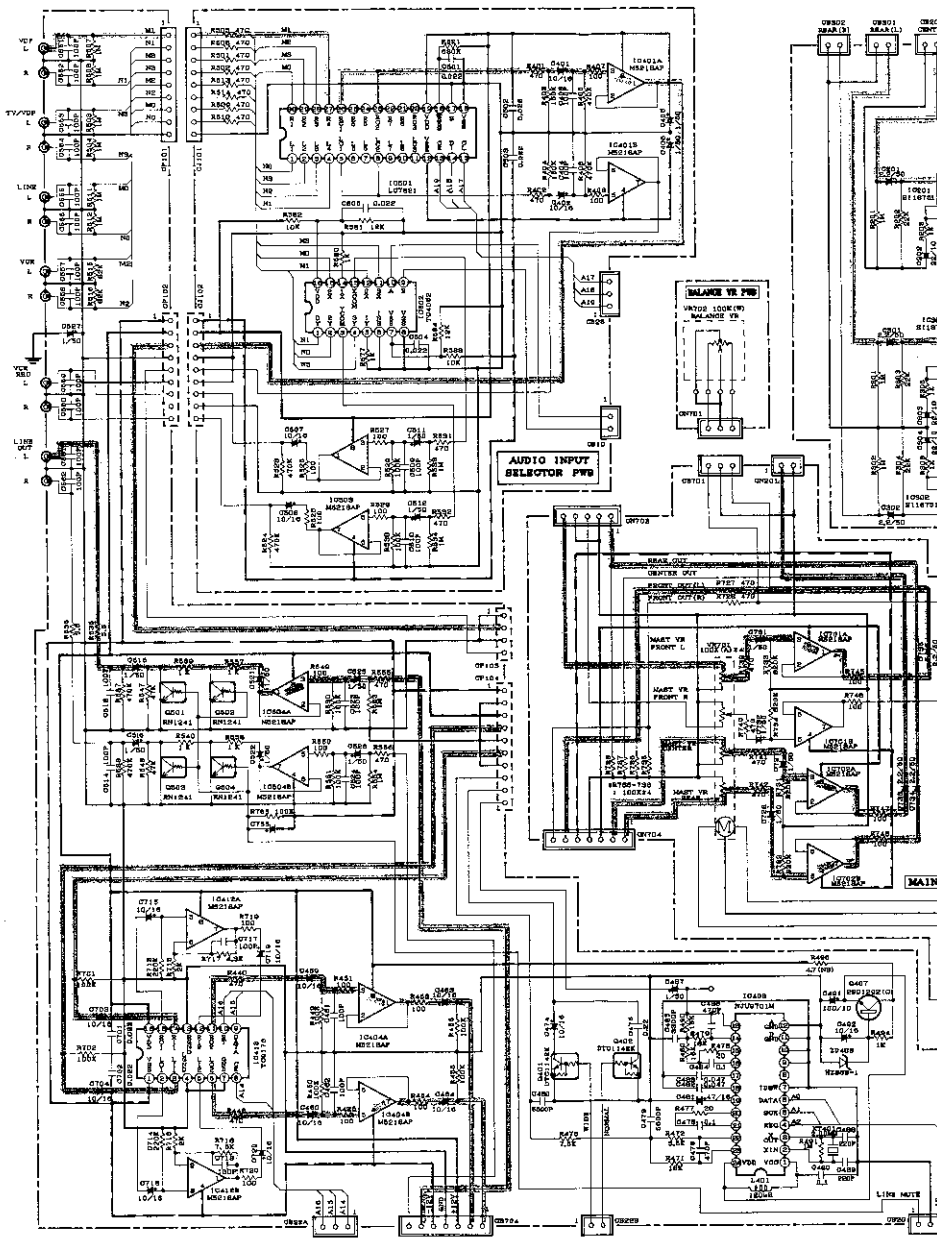

**WARNING:**  
Parts marked with the symbol  have critical characteristics.  
Use ONLY replacement parts recommended by the manufacturer.


**CAUTION:**  
Before returning the unit to the customer, make sure you make either (1) a leakage current check or (2) a line to chassis resistance check. If the leakage current exceeds 5 millamps, or if the resistance from chassis to either side of the power cord is less than 300 k ohms, the unit is defective.

**NOTES**  
ALL RESISTANCE VALUES IN OHMS = 1,000 OHM, M=1,000,000 OHM  
ALL CAPACITANCE VALUES IN MICRO FARAD, P=MICRO-MICRO FARAD  
EACH VOLTAGE AND CURRENT ARE MEASURED AT NO SIGNAL INPUT CONDITION  
CIRCUIT AND PARTS ARE SUBJECT TO CHANGE WITHOUT PRIOR NOTICE.

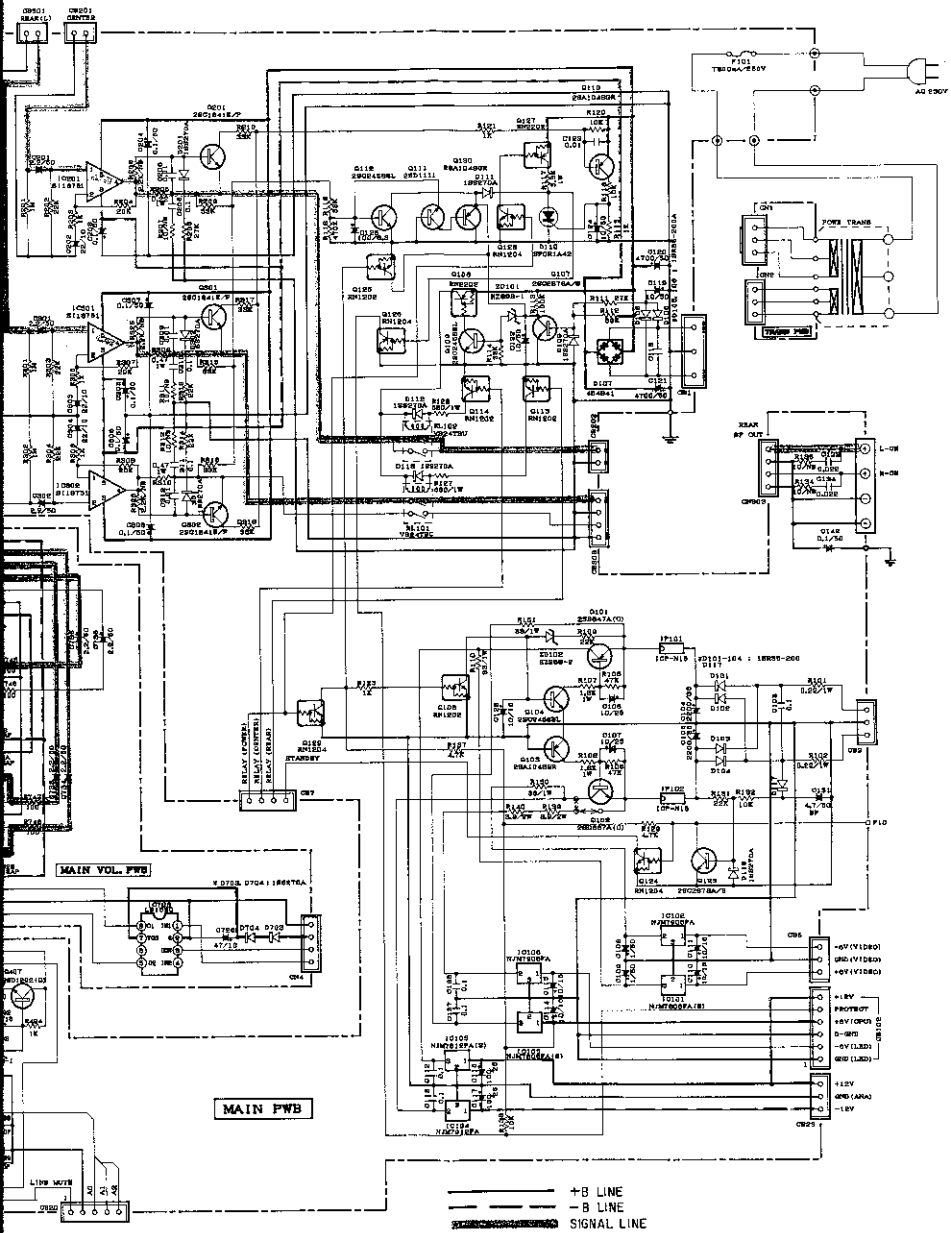


————— +B LINE  
 - - - - - - - -B LINE  
 // // // // // SIGNAL LINE

WIRING DIAGRAM

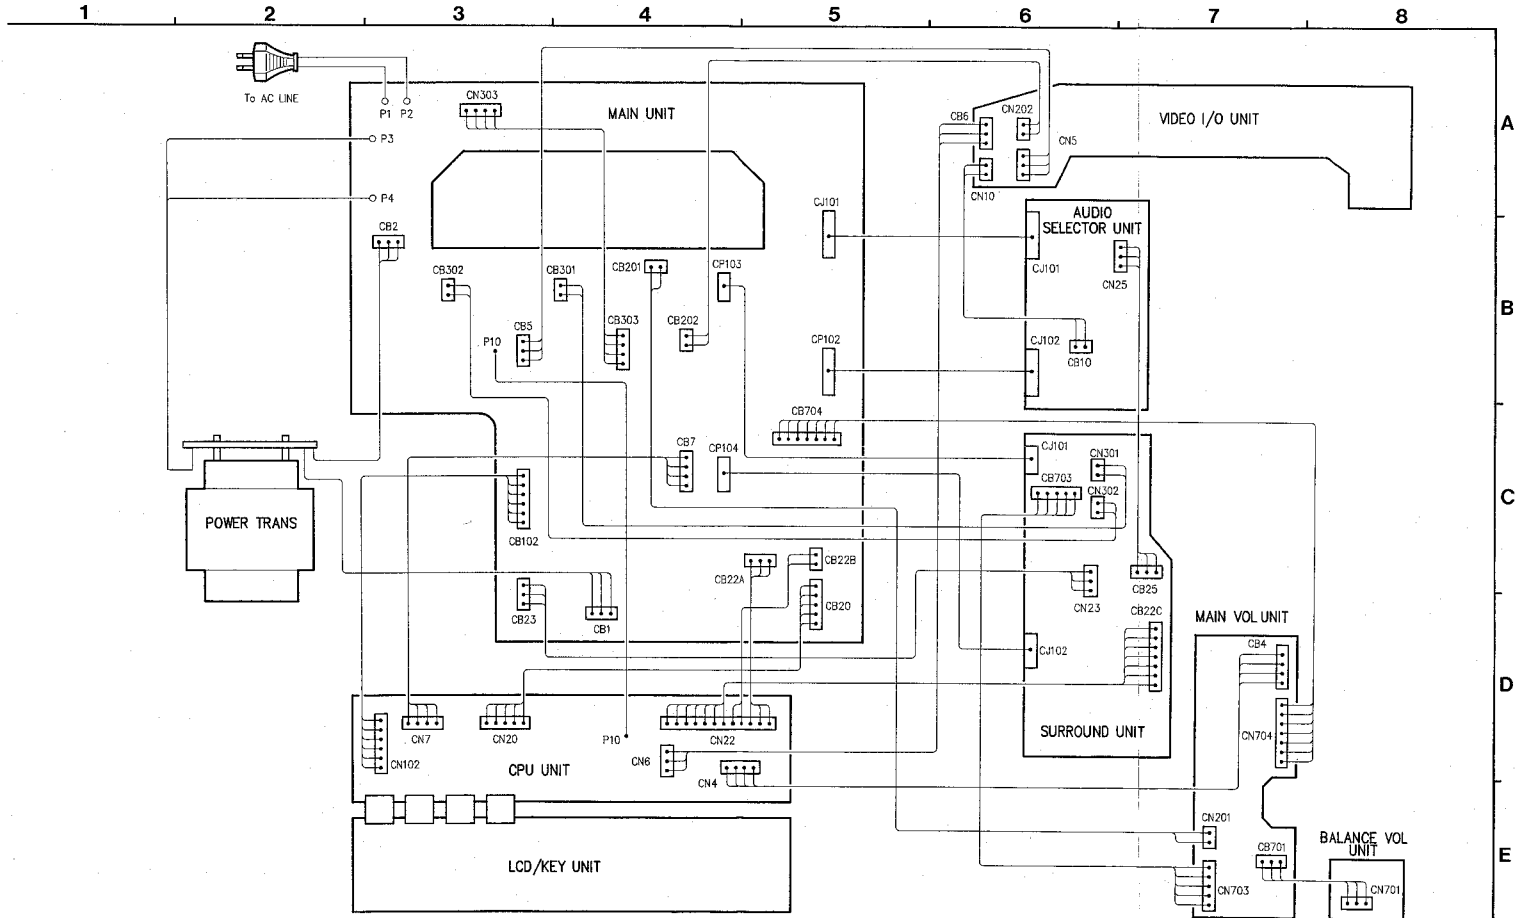

EXPLODED VIEW OF CHASSIS AND CABINET

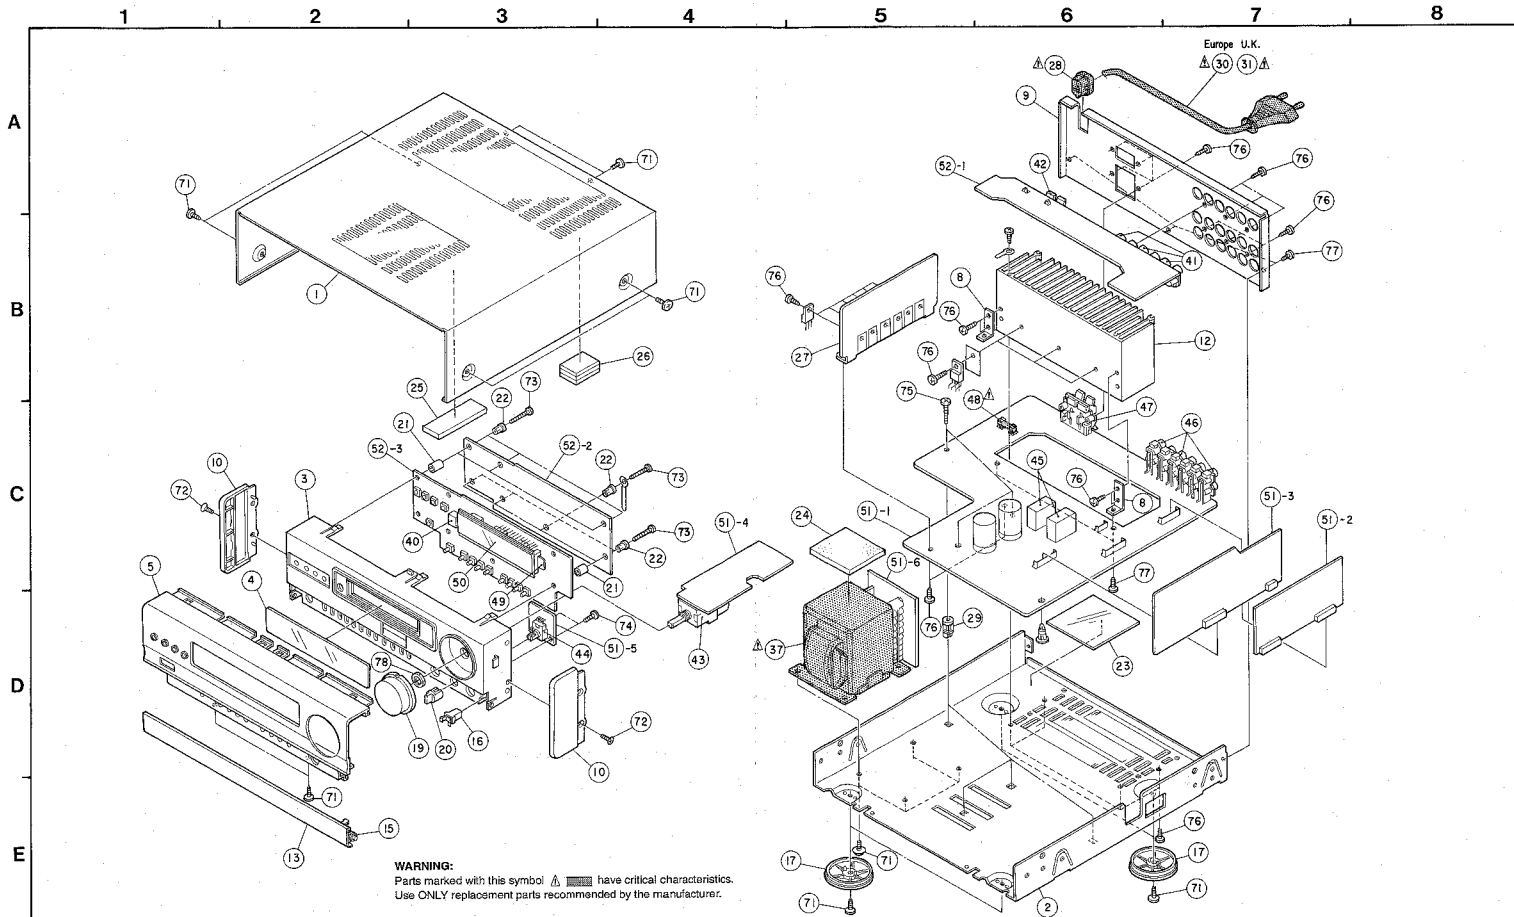

## PARTS LIST OF EXPLODED VIEW

Ref. No.	Parts No.	Parts Name	Remarks	Q'ty	Ref. No.	Parts No.	Parts Name	Remarks	Q'ty
* 1	102.0518.2712	Top Cover		1	* 52	AVC 7700 182	Sub P.W.B. Unit Assy		16
* 2	AVC 7700 101	Main Chassis		1	52-1	—	Video I/O Unit		(1)
* 3	145.8281.304	Inner Panels		1	52-2	—	CPU Unit		(1)
* 4	143.9158.003	Window		1	52-3	—	LCD/Key Unit		(1)
* 5	AVC 7700 103	Front Panel Assy		1	53	—			
6	—	Front Panel		(1)	54	—			
7	—	Knob Guide (Round)		(1)					
8	AVC 7700 104	P.W.B. Bracket		2					
* 9	AVC 7700 105	Rear Panel		1					
10	146.1400.303	Side Plate		2					
11	113.1549.002	Push Button (Round)		1					
12	AVC 7700 106	Power Radiator		1					
13	144.2216.202	Trap Door		1	71	AVC 7700 117	Tapping Screw 3x6	Black	12
14	401.0175.109	Hinge (L)		1	72	AVC 7700 118	FRT Tapping Screw 3x6		2
15	401.0178.108	Hinge (R)		1	73	AVC 7700 119	Tapping Screw 2.6x20		7
16	435.0113.009	Push Latch		1	74	AVC 7700 120	Blind Screw 2.6x8		2
17	104.0237.201	Foot Assy		1	75	AVC 7700 121	Blind Screw 3x18		3
18	113.1469.000	Power Button		1	76	DH8 2030 158	Blind Screw 3x8		27
19	112.9095.102	Volume Knob Assy		1	77	HMA 1000 129	Blind Screw 3x6	Black	10
20	112.0545.165	Knob		1	78	HMA 5000 334	Nut M6 11x22		1
21	AVC 7700 107	Collar Bush (Long)		7	79	AVC 7700 122	Blind Screw 2.6x6		1
22	AVC 7700 108	Collar Bush (Small)		7	80	—			
23	AVC 7700 109	Spacer	59x70x0.3	1					
24	AVC 7700 110	Spacer	40x60x5	1					
25	AVC 7700 111	Spacer	20x60x5	1					
26	AVC 7700 112	Spacer	20x30x15	1					
27	AVC 7700 102	Resistor Plate		1					
28	145.1059.018	Cord Bush		1					
29	AVC 7700 113	P.C.B. Holder		3					
30	AVC 7700 301	AC Cord Assy	Europe model U.K. model	1					
31	AVC 7700 301	AC Cord Assy	U.K. model	1					
32	—	Cord Band	Black	1	* 103	AVC 7700 302	Carton Case	Europe model	1
* 33	445.8004.007	Wire Clamp Band	L=100	13		AVC 7700 202	Carton Case	U.K. model	1
34	—	Serial No. Label	Europe model	1	* 104	AVC 7700 114	Top Plate	350x400	2
35	—	Serial No. Label	U.K. model	1	* 105	S11 2022 009	Inst. Manual		1
36	—	Fuse Label	T800 mA/250 V	1	106	S05 0038 030	Envelope for Inst. Manual	230x340	1
37	AVC 7700 115	Power Filter		1	107	S05 0016 094	Envelope for Set	400x350	1
* 38	—	Cord Holder		1	108	S05 8014 000	Envelope for Cord Plug	200x200	1
39	—	Caution (Fuse Label)		1	109	—	Bar Cord Label	Europe model	1
40	AVC 7700 140	Remoon Sensor	SPS-420-1	1	—	—	Bar Cord Label	U.K. model	1
41	204.8360.001	2 P Pin Jack(S-GND)		3	110	AVC 7700 116	Cushion Plate	155x244x24	1
42	205.0695.007	2 P Speaker Terminal	Red/Black	1	111	399 0244 009	Remote Control	RC-178	1
43	AVC 7700 160	Variable Resistor100k $\Omega$ m	Main	1	112	—	Batteries	R6PIAA	(2)
44	AVC 7700 151	Variable Resistor100k $\Omega$ m	Balance	1					
45	214.0154.005	Relay VB245TB	or VB245MB	2					
46	204.8266.008	4 P Pin Jack(S-GND)		3					
47	205.0592.009	4 P Speaker Terminal	Red/Black	1					
48	206.8131.018	Fuse 800 mA/250 V	T800mA	1					
49	393.9470.009	LED Assy	D901	1					
50	393.4121.007	LCD Assy (LC08195JP)	LC0801	1					
* 51	AVC 7700 191	Main P.W.B. Unit Assy		16					
51-1	—	Main Unit		(1)					
51-2	—	Audio Selector Unit		(1)					
51-3	—	Surround Unit		(1)					
51-4	—	Main VR Unit		(1)					
51-5	—	Balance VR Unit		(1)					
51-6	—	Power Trans Unit		(1)					

## NOTE FOR PARTS LIST

● Part indicated with the mark \* \* are not always in stock and possibly to take a long period of time for supplying, or in some case supplying of part may be refused.

● When ordering of part, clearly indicate "1" and "1" () to avoid mis-supplying.

● Ordering part without stating its part number can not be supplied.

● Part indicated with the mark \* is not illustrated in the exploded view.


● Not including Carbon Film ±5%, 1/6W, 1/4W Type in the P.W.B. board parts list. (Refer to the Schematic Diagram for those parts.)

## WARNING:

Parts marked with this symbol  have critical characteristics.

USE ONLY replacement parts recommended by the manufacturer.

## SCHEMATIC DIAGRAM (RC-178) PARTS No: 399 0244 009

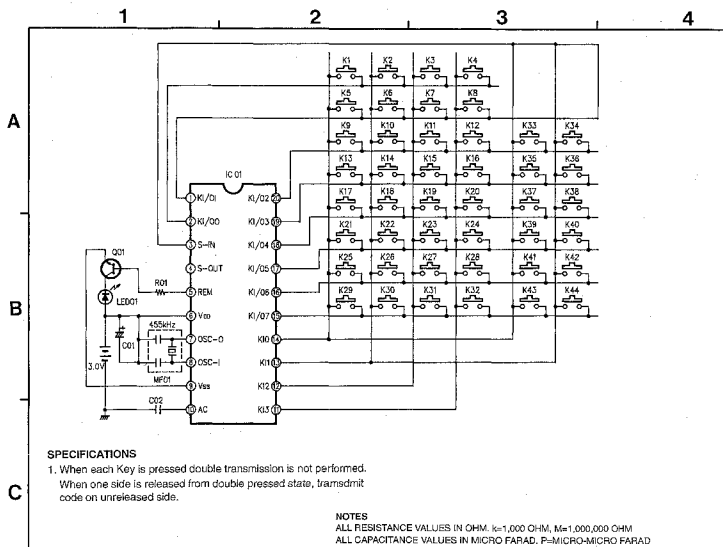

## SPECIFICATIONS

1. When each key is pressed double transmission is not performed.  
When one side is released from double pressed state, transmit code on unreleased side.

## NOTES

ALL RESISTANCE VALUES IN OHM:  $k=1,000$  OHM,  $M=1,000,000$  OHM  
ALL CAPACITANCE VALUES IN MICROFARAD, P=PICTO-MICRO FARAD  
EACH VOLTAGE AND CURRENT ARE MEASURED AT NO SIGNAL INPUT CONDITION.  
CIRCUIT AND PARTS ARE SUBJECT TO CHANGE WITHOUT PRIOR NOTICE.

## REMOTE CONTROL UNIT ASSY

Ref. No.	Part No.	Part Name	Remarks	Q'ty
<b>SEMICONDUCTORS GROUP</b>				
IC01	—	IC $\mu$ P081244CS-004	$\mu$ -Com	1
C01	—	Transistor 2SC3377 (G/R)		1
	or	273 0195 908		
D01	—	LED SE30349F-C	Infrared	1
	—	LED STD1K10CXMLF28	Infrared	
<b>RESISTORS GROUP</b>				
R01	241 2397 901	Carbon Resistor 220 $\Omega$ m, 1/10W	RD1462E221(J)(S)	1
<b>CAPACITORS GROUP</b>				
C01	254 4213 021	Electrolytic 47 $\mu$ F $\pm$ 5%	CE04W0J470M	1
C02	253 1176 003	Ceramic 0.1 $\mu$ F $\pm$ 25%	CK45F1E104Z	
<b>OTHER GROUP</b>				
MF01	—	(P.W. Board)	CSU455P	1
	—	Ceramic Resonator		
	—	Batteries		

## PARTS LIST OF EXPLODED VIEW

Ref. No.	Part No.	Part Name	Remarks	Q'ty
1	—	Case Top Assy		1
2	—	Panel		1
3	—	Switch Rubber		1
4	—	Case Bottom Assy		1
5	—	Cover Battery		1
6	—	Tapping Screw 2.6 $\times$ 12		1
7	—	Spring Coil	for +	1
8	—	Spring Coil	for -	1
9	—	Spring Coil	for Common.	1
10	—	Poly Cover	85 $\times$ 250	1
11	—	P.W.B. Unit Assy		1

## CORDS TABLE

KEY No.	C1	C2	C3	C4	C5	C6	C7	C8	C9	C10	C11	C12	C13	C14	Mask	Judgment	Remarks	Item No.1	Item No.2	Item No.3
1	0	1	0	0	0	1	0	0	0	0	0	1	0	0	0	0	POWER	RC-178		
2	0	1	0	0	0	1	0	0	0	0	1	0	0	0	0	0	VOLUME UP			
3	0	1	0	0	0	0	0	0	0	1	0	0	0	0	0	0	VOLUME DOWN			
4	0	0	1	0	0	0	0	0	0	1	0	0	0	0	0	0	SLEEP			
5	0	1	0	0	0	0	0	0	0	0	1	1	1	0	0	0	MUTING			
6	0	0	1	1	0	1	1	1	1	1	1	1	0	0	0	0	FUNCTION LINE			
7	0	0	1	1	0	0	1	1	1	1	0	1	0	0	0	0	REMOTON/A			
8	0	0	1	1	0	0	0	1	1	0	1	0	0	0	0	0	TUNER			
9	0	0	1	0	0	0	0	1	1	1	1	0	0	0	0	0	F. PLAY (▶)			
10	0	0	1	0	0	1	1	1	0	1	0	1	0	0	0	0	R. PLAY (◀)			
11	0	0	1	0	0	0	1	0	1	1	0	1	0	0	0	0	FF (▶▶)			
12	0	0	1	0	0	1	0	1	0	1	1	0	1	0	0	0	REW (◀◀)			
13	0	0	1	0	0	1	1	1	1	1	0	1	0	0	0	0	RECMUTE ( ●)			
14	0	0	1	0	0	0	1	1	1	1	1	0	1	0	0	0	STOP (■)			
15	0	0	1	0	0	1	1	0	0	1	0	1	0	0	0	0	SELECT AB			
16	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	Not Transmission			
17	0	1	0	0	0	0	1	0	1	0	0	1	1	0	0	0	VDP-1			
18	0	1	0	0	0	0	1	0	1	0	0	0	1	0	0	0	VDP-2			
19	0	1	0	0	0	1	0	1	1	0	0	0	1	0	0	0	VCR-1 (MCH)			
20	0	1	0	0	0	0	1	1	1	0	0	0	1	0	0	0	VCR-2			
21	0	1	0	0	0	0	0	0	0	0	1	1	0	0	0	0	USB			
22	0	1	0	0	0	1	0	0	1	0	0	1	0	0	0	0	TV			
23	0	1	0	0	0	1	1	1	0	0	1	1	1	0	0	0	BYPASS			
24	0	1	0	0	0	0	1	1	0	0	1	1	1	0	0	0	SURROUND MODE			
25	0	1	0	0	0	0	0	0	1	0	0	1	0	0	0	0	CE CENTER			
26	0	1	0	0	0	0	0	0	0	0	1	1	0	0	0	0	T.CONE			
27	0	1	0	0	0	1	1	0	1	0	1	1	1	0	0	0	3CH LOGIC			
28	0	1	0	0	0	1	1	0	0	1	1	1	1	0	0	0	REAR VOL UP			
29	0	1	0	0	0	0	0	1	1	1	1	1	1	0	0	0	REAR VOL DOWN			
30	0	1	0	0	0	1	1	0	1	1	1	1	1	0	0	0	CENTER VOL UP			
31	0	1	0	0	0	0	1	1	0	1	1	1	1	0	0	0	CENTER VOL DOWN			
32	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	Not Transmission			
33	0	0	0	1	0	1	1	1	0	1	0	1	0	0	0	0	DIRECT			
34	0	0	0	1	0	1	1	0	1	0	1	0	1	0	0	0	PROGRAM			
35	0	0	0	1	0	0	0	0	1	0	0	0	0	0	0	0	CANCEL			
36	0	0	0	1	0	0	0	0	0	1	0	1	0	0	0	0	SDB			
37	0	0	0	1	0	0	0	1	1	0	1	0	1	0	0	0	PLAY (▶)			
38	0	0	0	1	0	0	1	0	1	1	0	1	0	0	0	0	STOP (■)			
39	0	0	0	1	0	0	0	0	0	1	1	0	0	0	0	0	A-SEARCH (▶▶)			
40	0	0	0	1	0	0	0	0	1	1	0	1	0	0	0	0	A-SEARCH (◀◀)			
41	0	0	0	1	0	0	0	1	0	1	0	1	0	0	0	0	M-SEARCH (▶▶)			
42	0	0	0	1	0	0	1	0	1	1	0	1	0	0	0	0	M-SEARCH (◀◀)			
43	0	0	0	1	0	0	0	0	1	1	0	0	0	0	0	0	PAUSE (  )			
44	0	0	0	1	0	0	1	1	0	1	0	1	0	0	0	0	DISC SKIP			

## NOTE FOR PARTS LIST

- Part indicated with the mark \* \* are not always in stock and possibly to take a long period of time for supplying, or in some case supplying of part may be refused.
- When ordering of part, clearly indicate "1" and "1" (1) to avoid mis-supplying.
- Ordering part without stating its part number can not be supplied.
- Part indicated with the mark \* \* is not illustrated in the exploded view.

## WARNING:

Parts marked with this symbol  have critical characteristics. Use ONLY replacement parts recommended by the manufacturer.