




Service Manual

PROJECTION TELEVISION
VZ4 CHASSIS

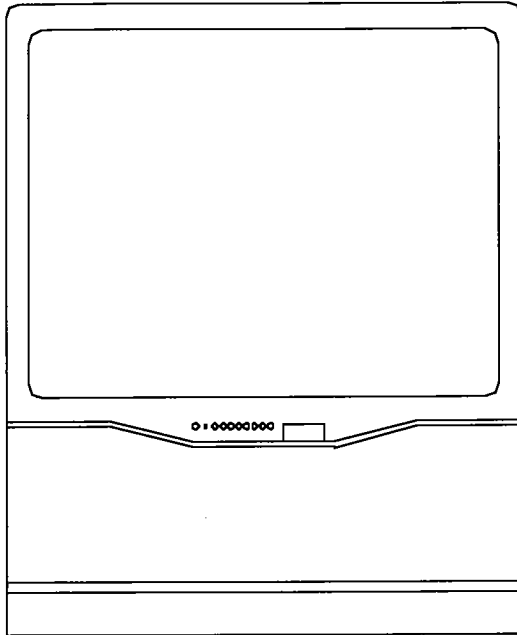

MODEL
VS-45501/VS-45502/VS-45501A
VS-50501/VS-50502/VS-50501A

CAUTION:

Before servicing this chassis, it is important that the service person read the "SAFETY PRECAUTIONS" AND "PRODUCT SAFETY NOTICE" in this manual.

SPECIFICATIONS

- **Power Input** : AC 120V, 60Hz
- **Power Consumption** : 260W
- **Frequency Range** : VHF 54 ~ 470MHz
UHF 470 ~ 806MHz
- **Antenna Input** : VHF/UHF 75 Ω unbalanced
Single axis input
- **CRT** : [VS-45501/45502] [VS-45501A]
180DLB22 (R) 180DLB22 (R)
180DLB22 (G) 180DLB22 (G)
180DLB22 (B) 180DLB22 (B)
- [VS-50501] [VS-50501A]
P16LJK01RJA (R) P16LHV08RJA (R)
P16LJK01HKA (G) P16LHV08HKA (G)
P16LJK01BMB (B) P16LHV09BMB (B)
- [VS-50502]
P16LFM00RFA (R)
P16LFM00HLA (G)
P16LFM00BMB (B)
- **High Voltage** : 32.0kV (at 0A)
- **Speaker** : 4" round type 2 pcs.
- **Cabinet Dimensions** : [VS-45501/ 45502/V45501A]
: 39.5"(W) X 49"(H) X 23.4"(D)
: [VS-50501/50502/50501A]
43.5"(W) X 51.2"(H) X 24.3"(D)
- **Weight** : [VS-45501/45502/45501A] 190 lbs
[VS-50501/50502/50501A] 195.8 lbs
- **Input Level** : VIDEO IN JACK (RCA Type)
1.0Vp-p 75 Ω unbalanced
: AUDIO IN JACK (RCA Type)
-3 dBm 43k Ω unbalanced
: S-VIDEO IN JACK
(Y/C separate type)
Y: 1.0 Vp-p C: 0.286Vp-p(BURST)
75 Ω unbalanced
- **Output Level** : VIDEO OUT JACK (RCA Type)
1.0Vp-p 75 Ω unbalanced
: AUDIO OUT JACK (RCA Type)
-3 dBm 4.7 K Ω unbalanced

- Weight and dimensions shown are approximate.
- Design specifications are subject to change without notice.

MITSUBISHI CONSUMER ELECTRONICS AMERICA, INC.

6100 Atlantic Blvd., Norcross, GA. 30071-1305

Copyright © 1997 Mitsubishi Consumer Electronics America, Inc.

All Rights Reserved

CONTENTS

INTRODUCTION.....	3
SAFETY PRECAUTIONS.....	4
DISASSEMBLY/FRONT AND REAR CABINET COMPONENTS.....	5
SERVICING PCBs.....	6
PCB Locations.....	6
Extension Cord Jigs Table.....	6
SERVICING OF THE LENTICULAR SCREEN AND FRESNEL LENS.....	7
Removal of the Lenticular Screen and Fresnel Lens.....	7
Installation of the Lenticular Screen and Fresnel Lens.....	8
CRT REPLACEMENT.....	10
Removal of the CRT.....	10
Installation of the CRT.....	11
Adjustment procedures after replacing the CRT.....	12
ELECTRICAL ADJUSTMENTS.....	13
Location of Test Points and Adjustments.....	14
Initial Set Up.....	16
Circuit Adjustment Mode.....	18
When Replacing EEPROM (IC701).....	20
List of Adjustment Items.....	20
Adjustment procedures.....	24
Multi Channel Sound Circuit.....	24
High Voltage Control Circuit.....	25
CRT Circuit.....	26
Focus Circuit.....	27
Video Circuit.....	28
Horizontal and Vertical Deflection Circuits.....	29
Raster Correction Circuit.....	30
Screen Character Circuit.....	31
Convergence Circuit.....	31
PIP Circuit.....	34
CHIP PARTS REPLACEMENT.....	36
PARTS LIST.....	37
ELECTRICAL PARTS AND OTHERS.....	37
LEAD DRESS.....	46
SIGNAL PATH DIAGRAMS.....	48
IC BLOCK DIAGRAMS.....	50

INTRODUCTION

This service manual provides service instruction for PTV Models: VS-45501, VS-45502, VS-45501A, VS-50501, VS-50502 and VS-50501A which use the VZ4 Chassis. Service personnel should read this manual thoroughly before servicing this chassis.

This service manual includes:

1. Assembly and disassembly instructions for the front and rear cabinet components
2. Servicing of the lenticular screen and fresnel lens.
3. Servicing printed circuit boards (PCBs).
4. CRT replacement procedure.
5. Electrical adjustments.
6. Chip parts replacement procedures.
7. Lead dress diagram.

The parts list section of this service manual includes:

1. Cabinet and screen parts.
2. Electrical parts.

Schematic and block diagrams of PTV Models: VS-45501, VS-45502, VS-45501A, VS-50501, VS-50502 and VS-50501A are included in this service manual for better understanding of the circuitry. PCB drawings are also included for easy location of parts and test points.

PRODUCT SAFETY NOTICE

Many electrical and mechanical parts in television receivers have special safety related characteristics. These characteristics are often not evident from visual inspection nor can the protection afforded by them necessarily be obtained by using replacement components rated for higher voltage, wattage, etc.

Replacement parts which have special safety characteristics are identified in this service manual.

Electrical components having such features are identified by shading on the schematic diagram and on the parts list of this service manual, and by marking on the supplementary sheet for this chassis to be issued subsequently. Therefore, the replacement for any safety part should be identical in value and characteristics.

SAFETY PRECAUTIONS

NOTICE: Observe all cautions and safety related notes located inside the receiver cabinet and on the receiver chassis.

- WARNING:**
1. Operation of this receiver outside the cabinet or with the cover removed presents a shock hazard from the receiver's power supplies. Work on the receiver should not be attempted by anyone who is not thoroughly familiar with the precautions necessary when working on high voltage equipment.
 2. Do not install, remove or handle the picture tubes in any manner unless shatterproof goggles are worn. People not so equipped should be kept away while the picture tube is being handled. Keep the picture tube away from the body while handling.
 3. When service is required, observe the original lead dress. Extra precaution should be taken to assure correct lead dress in the high voltage area. Where a short-circuit has occurred, replace those components that indicate evidence of overheating.

B. X-radiation warning

The surface of the cathode ray tubes (CRTs) may generate X-Radiation, so take proper precautions when servicing. It is recommended that a lead apron be used for shielding while handling the CRT. Use this method if possible. When replacing the CRTs, use only the designated replacement part since it is a critical component with regard to X-Radiation. As noted above, no high voltage adjustments are provided. The high voltage specification is described on the cover page.

C. Leakage current check

Before returning the receiver to the customer, it is recommended that leakage current be measured according to the following methods.

1. Cold Check

With the alternating current (AC) plug removed from the AC source, place a jumper across the two AC plug prongs. Connect one lead of an ohm meter to the AC plug and touch the other lead to each exposed metal part (i.e. antennas, handle bracket, metal cabinet, screw heads, metal overlay, control shafts, etc.), particularly any exposed metal part that has a return path to the chassis. The resistance of the exposed metal parts having a return path to the chassis should be a minimum of 1Mega Ohm. Any resistance below this value indicates an abnormal condition and requires corrective action.

2. Hot Check

Use the circuit in Figure 1 to perform the hot check test.

1. Keep switch S1 open and connect the receiver to the measuring circuit. Immediately after connection, and with the switching devices of the receiver in their operating positions, measure the leakage current for both positions of switch S2.
2. Close switch S1, energizing the receiver. Immediately after closing switch S1, and with the switching devices of the receiver in their operating positions, measure the leakage current for both positions of switch S2. Repeat the current measurements of items 1 and 2 after the receiver has reached thermal stabilization. The leakage current should not be more than 0.5 milliampere (mA).


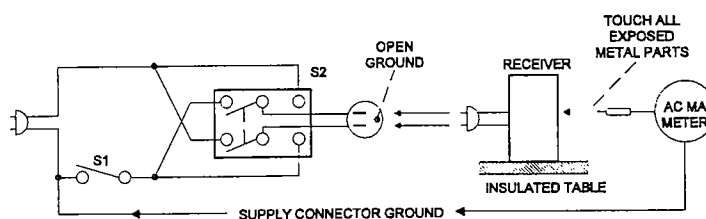


Figure 1

DISASSEMBLY/ FRONT AND REAR CABINET COMPONENTS

*Refer to PARTS LIST for Part Numbers

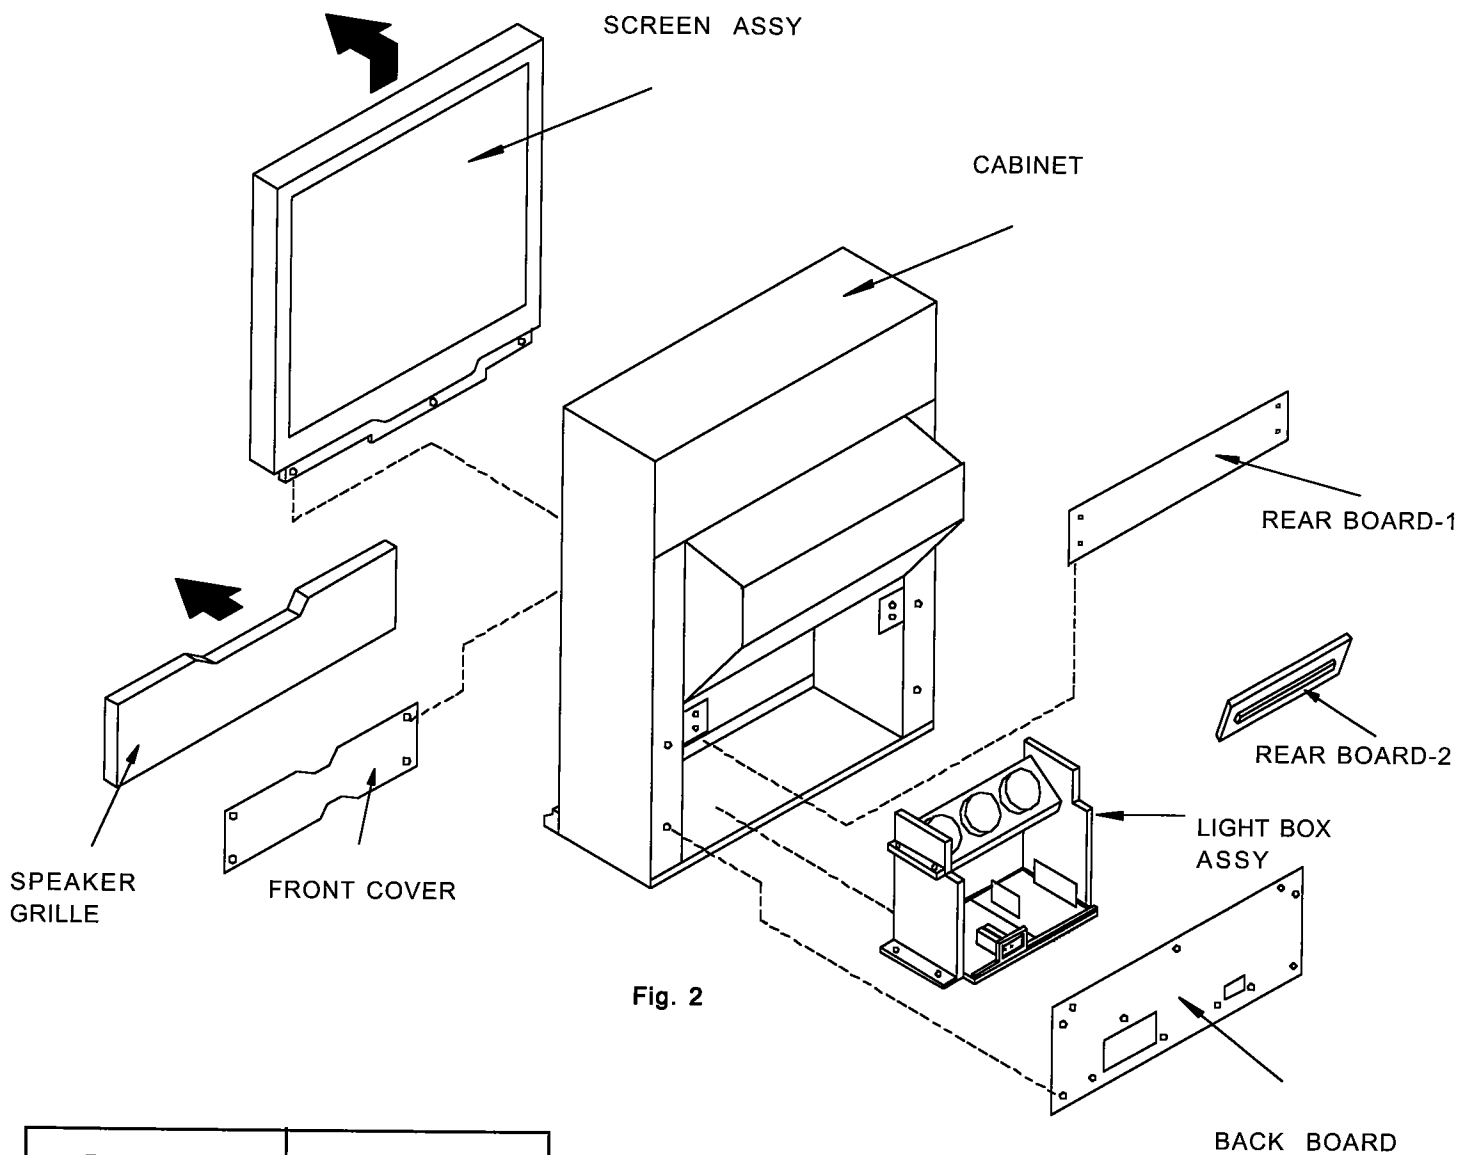

Parts Name	Number of Screws
Screen Assy	3
Front Cover	4
Rear Board-1	4
Rear Board-2	2
Back Board	12
Light Box Assy	8

Table 1-2

SERVICING PCBs

PCB Locations

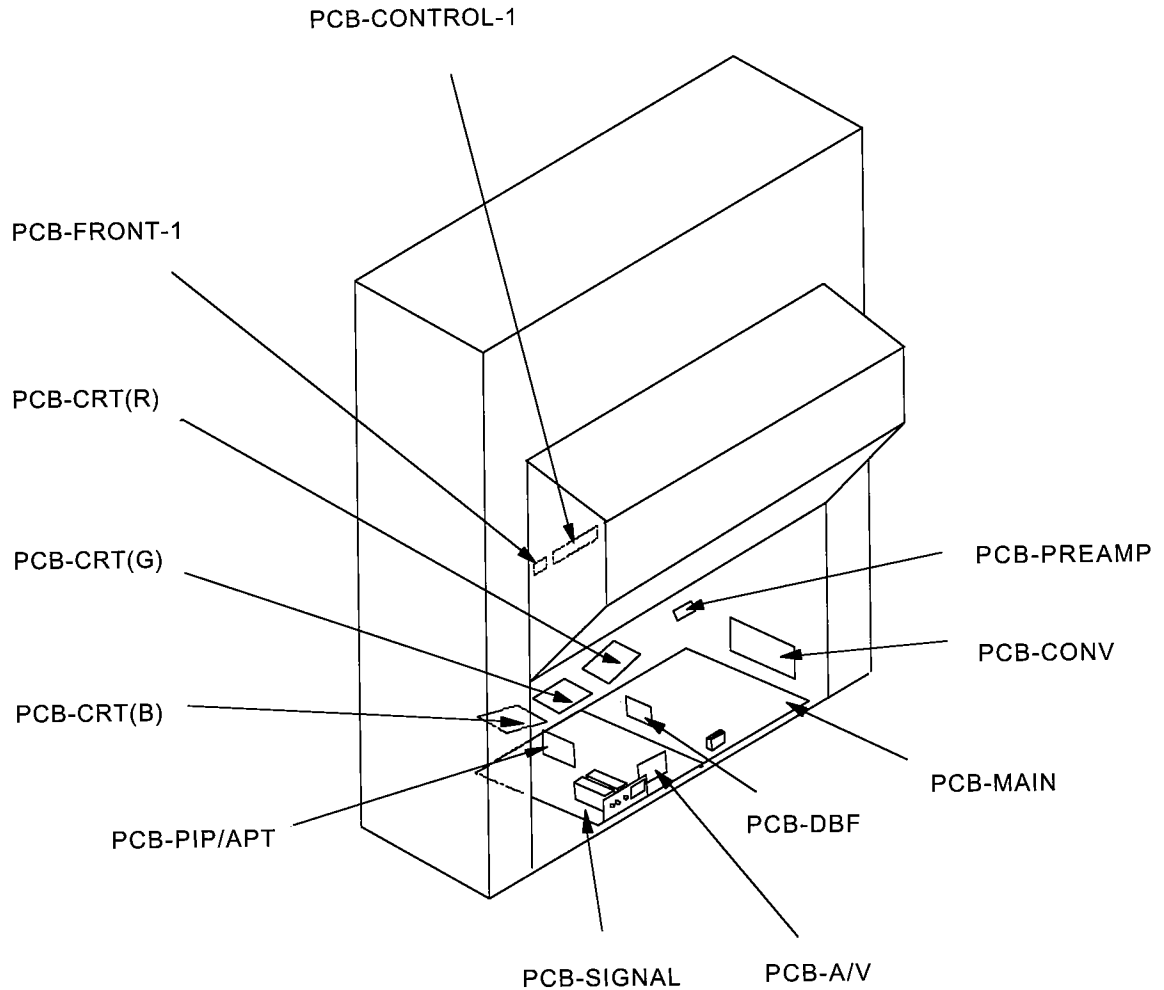


Fig. 3

Extension Cord Jigs Table

When servicing PCBs, use the Extension Cord Jigs for easier access.

PRINTED CIRCUIT BOARD	CONNECTOR	PART NUMBER
DBF	DV (3 PIN)	859C431060
DBF	DW (5 PIN)	859C432060
DBF	DU (7 PIN)	859C431070
PIP	GE (9 PIN), GF (9 PIN)	859C432050
A/V	GB (13 PIN)	859C432030
A/V	GA (11 PIN)	859C432040

* Extension Jigs for servicing of the PCB-Convergence are not listed as the existing leads are of sufficient length.

Table 2

SERVICING OF THE LENTICULAR SCREEN AND FRESNEL LENS

1. Removal of the Lenticular Screen and Fresnel Lens

A. VS-45501/VS-50501

1. Remove the screen assembly as shown in figure 2.
2. Remove Frame Holder by removing 12 screws (a).
3. Remove Screen Holder by removing 6 screws (b).

Note: When separating the Lenticular Screen from the Fresnel Lens, use caution while prying the Screen and Lens apart using a slot type screw driver, and remove the pressure sensitive, double sided tape.

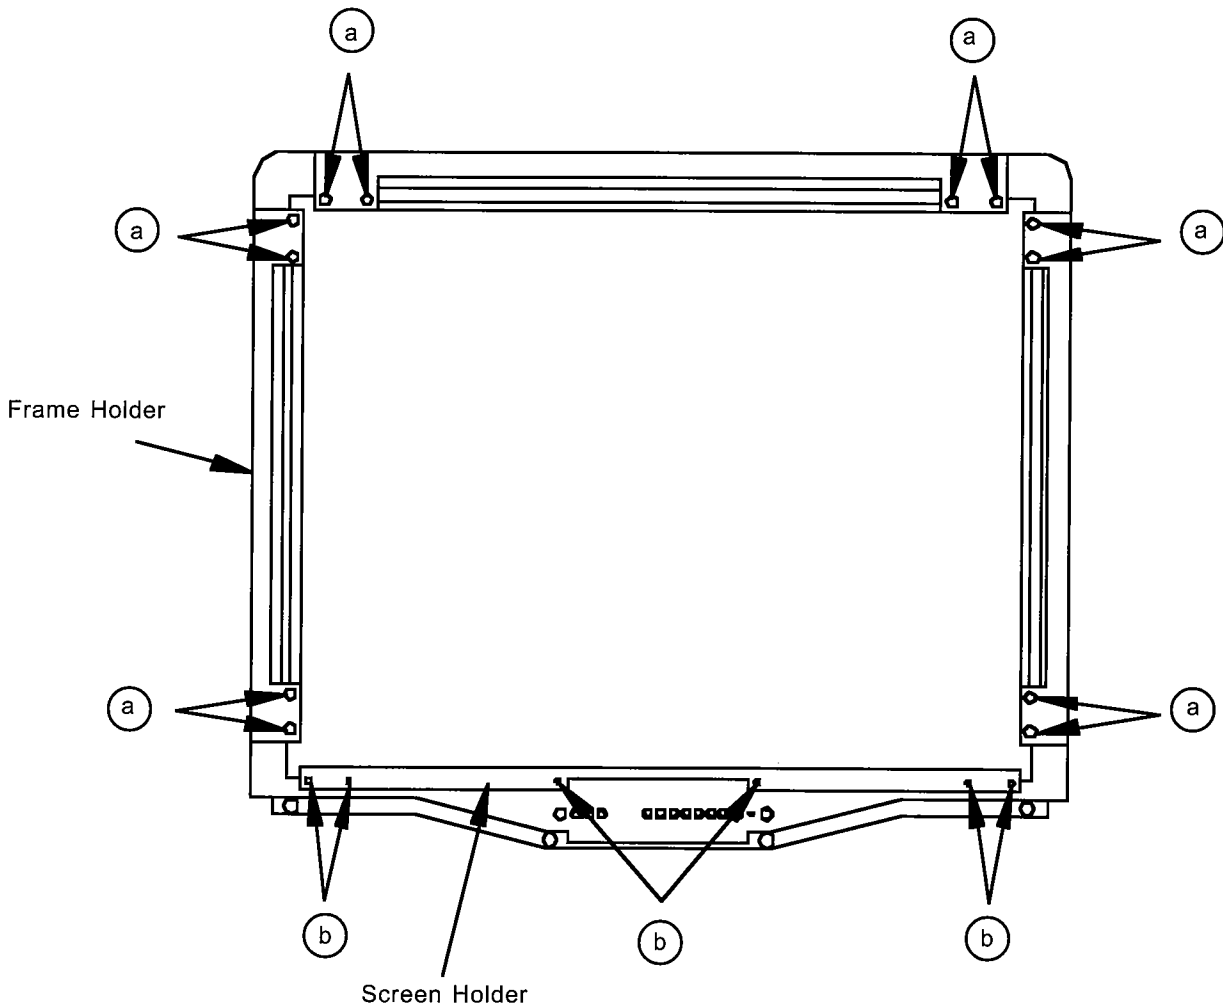


Figure 4-1

2. Installation of the Lenticular Screen and Fresnel Lens

CAUTION: WEAR GLOVES WHEN HANDLING THE LENTICULAR SCREEN AND THE FRESNEL LENS. THIS PREVENTS CUTS AND FINGER PRINTS. DO NOT PLACE THE FRESNEL LENS IN THE SUN. THIS MAY CAUSE FIRE AND HEAT RELATED INJURIES.

Note: Store the Lenticular Screen and Fresnel Lens in a cool dry place. High humidity causes deformation of the Lenticular Screen and Fresnel Lens.

A. VS-45501

1. Apply double coated tape (Part # LENS-TAPE) along the top front edge of the Fresnel Lens as shown in figure 4-2.
2. Place the Fresnel Lens on top of the Lenticular Screen and apply pressure at the top edge to bond them together as shown in figure 4-2.

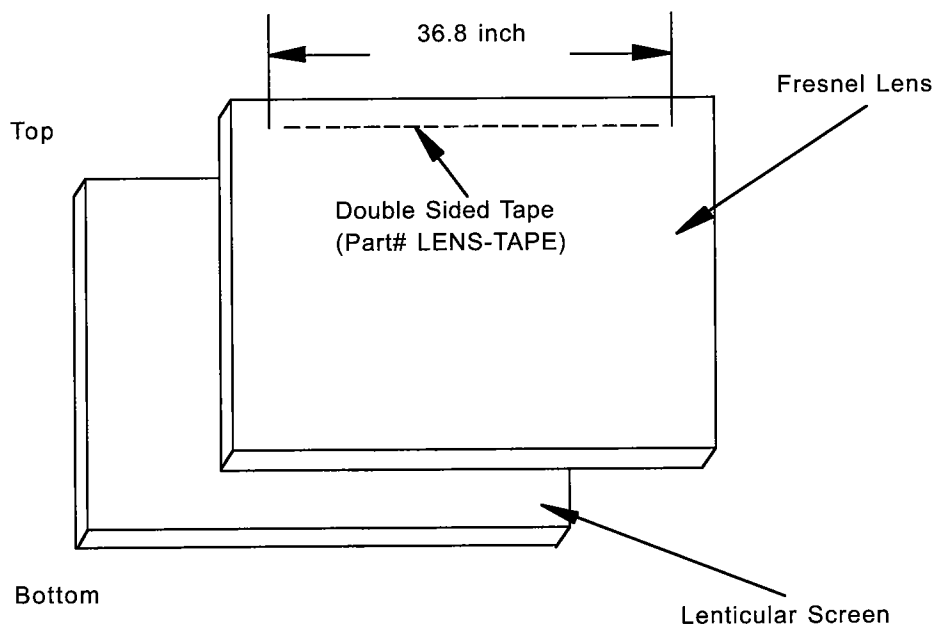


Figure 4-2

3. Installation of the Lenticular Screen and Fresnel Lens

CAUTION: WEAR GLOVES WHEN HANDLING THE LENTICULAR SCREEN AND THE FRESNEL LENS. THIS PREVENTS CUTS AND FINGER PRINTS.
DO NOT PLACE THE FRESNEL LENS IN THE SUN. THIS MAY CAUSE FIRE AND HEAT RELATED INJURIES.

Note: Store the Lenticular Screen and Fresnel Lens in a cool dry place. High humidity causes deformation of the Lenticular Screen and Fresnel Lens.

A. VS-50501

1. Apply double coated tape (Part # LENS-TAPE) along the top front edge of the Fresnel Lens as shown in figure 4-3.
2. Place the Fresnel Lens on top of the Lenticular Screen and apply pressure at the top edge to bond them together as shown in figure 4-3.

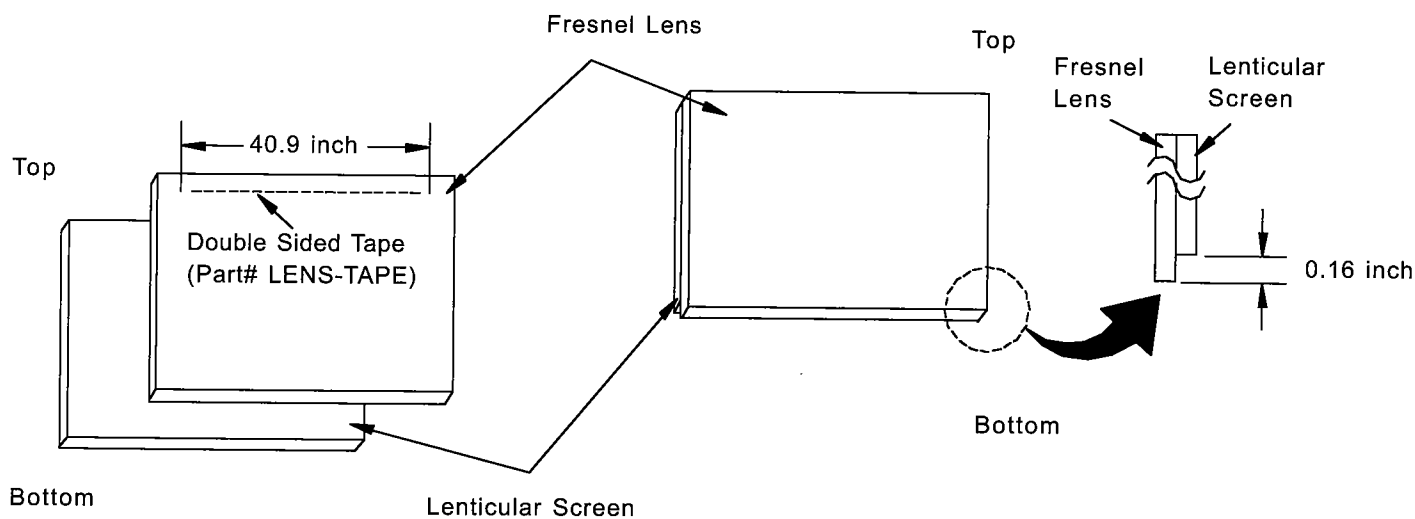


Fig. 4-3

CRT REPLACEMENT**1. Removal of the CRT**



CAUTION! HIGH VOLTAGE SHOULD BE COMPLETELY DISCHARGED PRIOR TO ANODE CAP REMOVAL. SINCE ALL THREE CRTS RECEIVE HIGH VOLTAGE FROM THE FLYBACK TRANSFORMER, DISCHARGE EACH CRT BY SHORTING THE OPEN END OF EACH RESPECTIVE HIGH VOLTAGE CABLE TO CHASSIS GROUND.

Note: Refer to figures 2, and 2-1 when performing steps 1 through 4.

1. Remove the Speaker Grille.
2. Remove the Front Cover.
3. Remove the Screen Assy.
4. Remove the Back Board.
5. Remove the Anode Lead Wire from the Flyback Transformer.
6. Remove the PCB-CRT.
7. Remove 4 hex-screws "a" retaining the Optical Unit. [Fig. 5-1]
8. Remove 4 screws "b" retaining the Lens.

Note: DO NOT loosen the RED screws. Doing so will break the seal between the C-Element and the # 6 Lens, causing leakage of the CRT Coolant.

9. Remove 4 screws "c" retaining the CRT. [Fig. 5-2]
10. Remove the Deflection Yoke from the neck of the CRT. [Fig. 5-7]

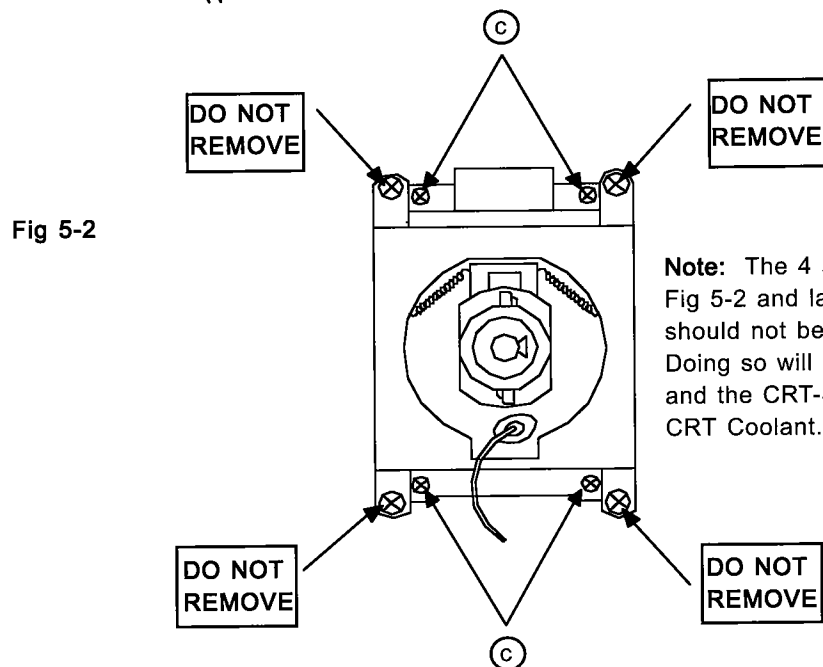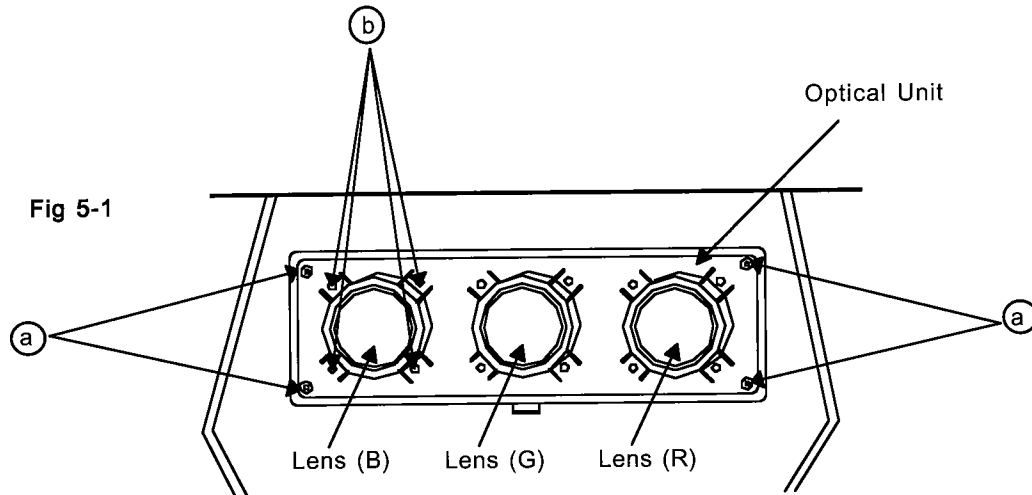

INSTALLATION OF THE CRT

Note: The replacement CRT is supplied as an assembly comprised of the CRT and the Inner Lens with the space between them filled with ethylene glycol. Care should be taken during handling and installation to prevent shock from disrupting the seal or alignment between the CRT and Inner Lens. [Fig. 5-3]

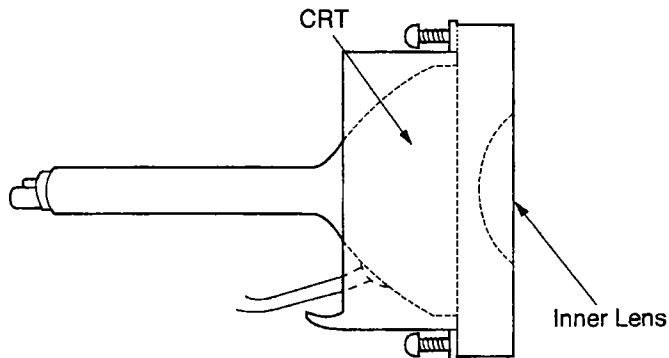


Fig 5-3

Note: The CRT fixing screws should not be loosened nor should they be removed. [Fig. 5-4]

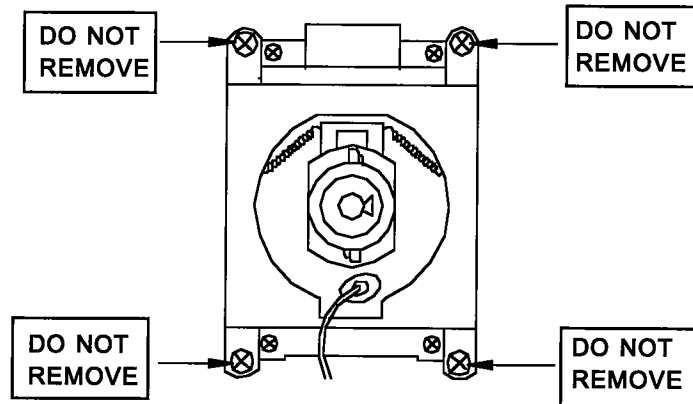


Fig 5-4

1. Carefully position the replacement CRT and fasten in place using 4 screws "d" shown in Fig. 5-6.

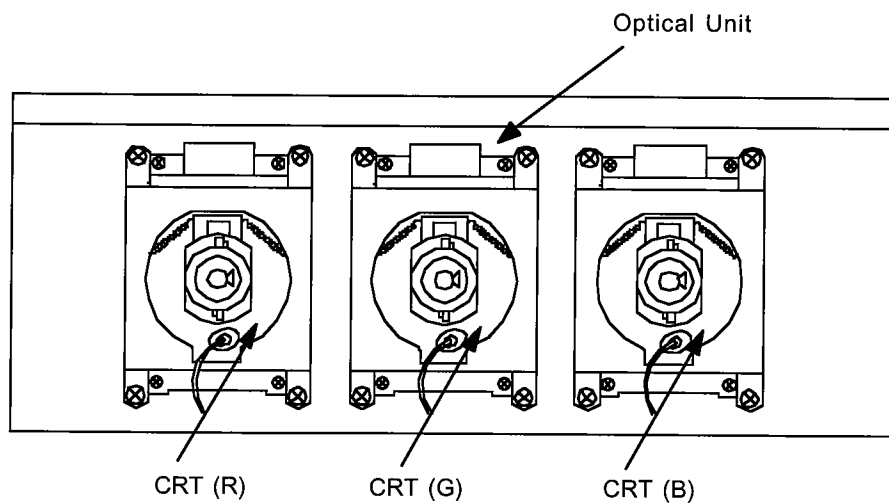


Fig 5-5

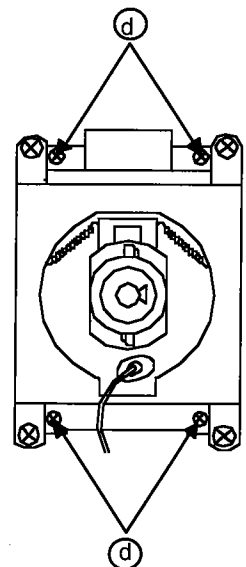


Fig 5-6

2. Install the Deflection Yoke on the CRT neck. [Fig. 5-7]
 3. Install the Lens that was removed in steps 8 and 9 of Removal Of The CRT. [Figs. 5-1 and 5-2]
 - a) Position the Lens so that the Label faces the direction shown in Fig. 5-8.
 - b) Install the mounting screws. Refer to Fig. 5-1.
 4. Install the PCB-CRT.
 5. Insert the Optical Unit into the Light Box Assembly.
 6. Insert the Anode Lead Wire into the Flyback Transformer.
 7. Re-clamp the Lead Wire in its original position.
- Note:** Refer to Lead Dress Diagrams pages 46-47.

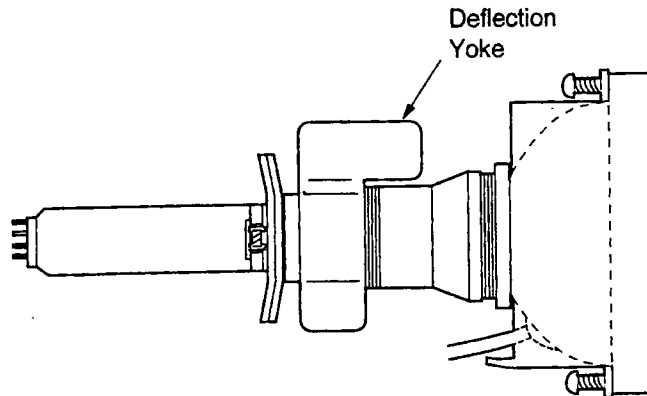


Fig 5-7

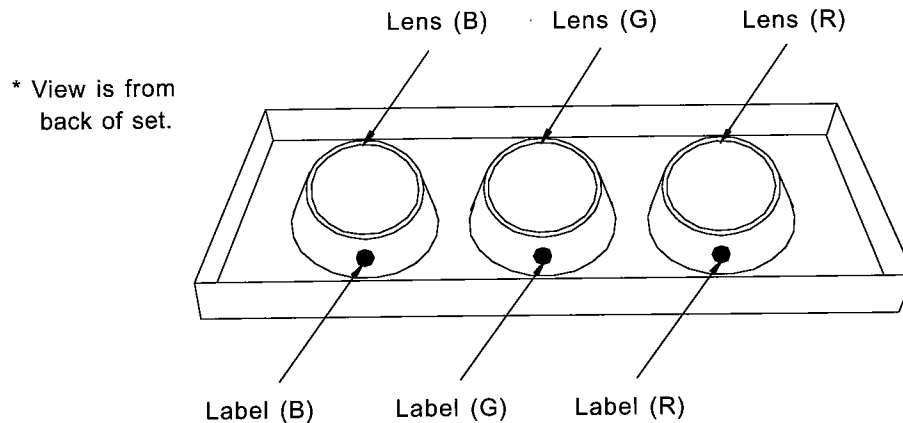


Fig 5-8

Adjustment procedures after replacing the CRT(s)

- CRT Cut Off / White Balance Adjustment
- Static Convergence Adjustment
- Dynamic Convergence Adjustment

ELECTRICAL ADJUSTMENTS

Note: Perform only the adjustments required.
Do not attempt an alignment if proper equipment is not available.


1. Measuring Equipment and Jigs

- * Oscilloscope (Unless otherwise specified, use 10:1 probes)
- * Signal Generator
- * Frequency Counter
- * Direct Current Voltmeter
- * Sweep Generator.
- * Direct Current Power Supply
- * Multiplex Audio Signal Generator
- * Direct Current Ampere Meter

2. Test Signal


A. Monoscope Signal

Note: Connect the unit to a VCR and play an *alignment tape (Monoscope), if you do not have a monoscope signal source for adjustment.
(* Part Number: 859C568020)

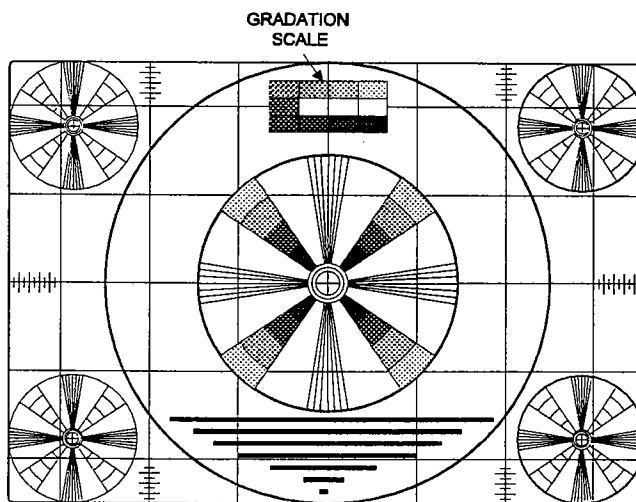

B. Color Bar Signal

Use the color bar signal shown below, unless otherwise specified in this manual.

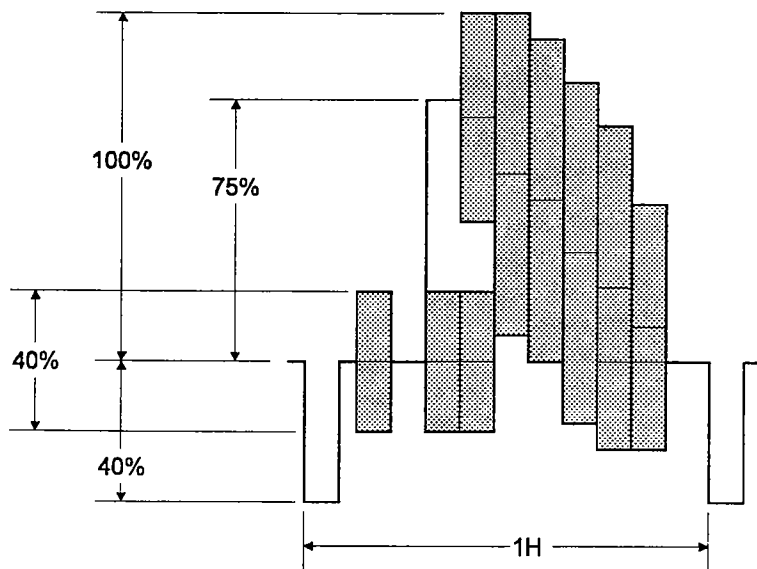


Split-Field Color Bars (100% window)


Monoscope Signal

3. Location of Test Points and Adjustments


PCB-MAIN (COMPONENT SIDE)

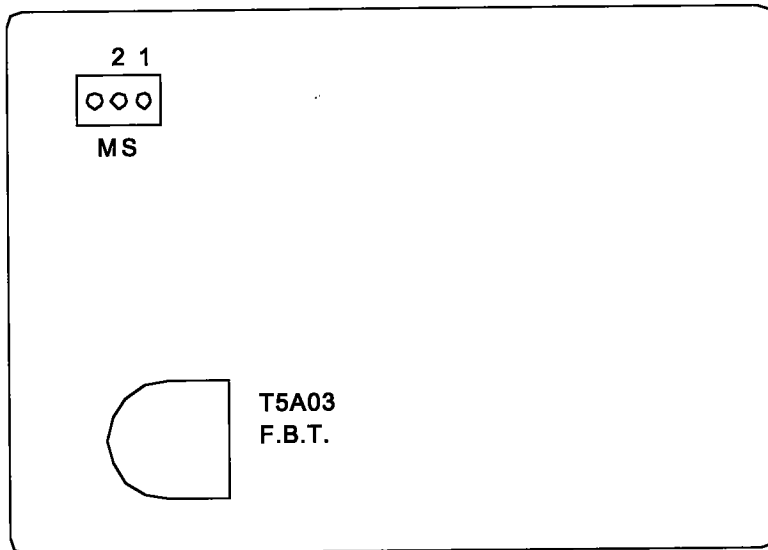


PCB-SIGNAL (COMPONENT SIDE)

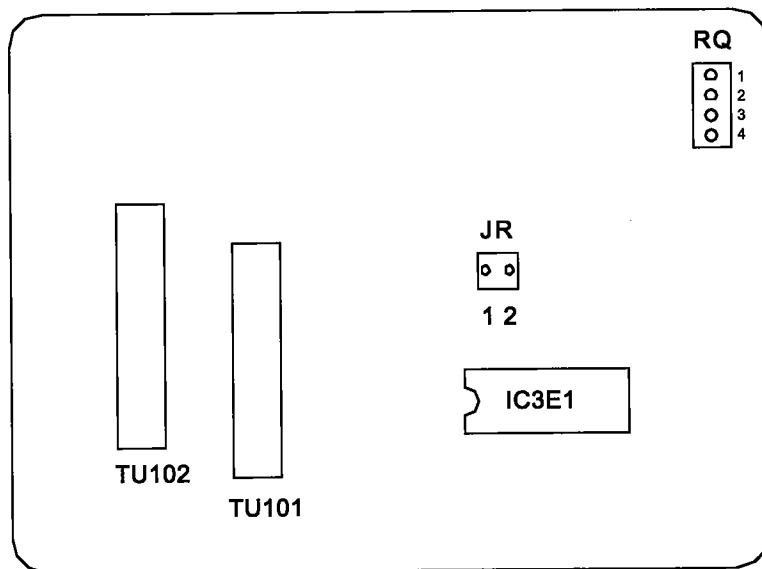


PCB-PIP/APT (COMPONENT SIDE)

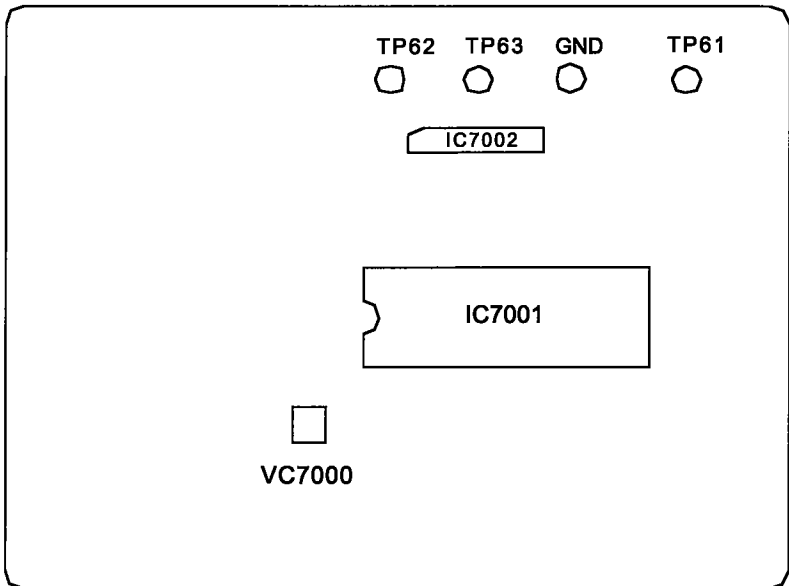


PCB-CRT (R)
(COMPONENT SIDE)

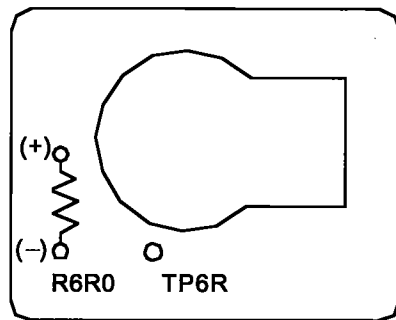

PCB-CRT (G)
(COMPONENT SIDE)

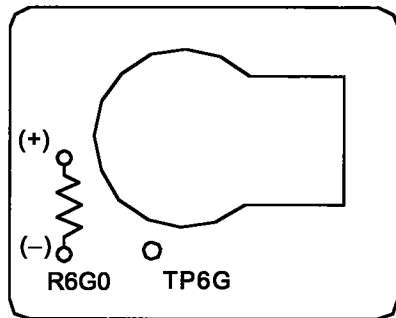

PCB-CRT (B)
(COMPONENT SIDE)

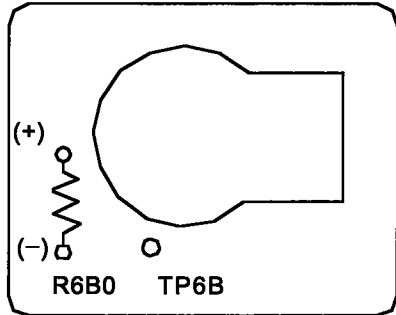

4. Option Menu Set Up

Follow the steps below for the Option Menu set up:

1. Set the receiver to the "TV" mode.
2. Select the "MENU" display by pressing the "MENU" button once.
3. Press the number buttons "2", "3", "5", "8" in sequence to select the "Option Menu" display.
4. Set the "Option Menu" as shown in the table below using the "ADJUST" and "ENTER" buttons.
5. Press the "MENU" button twice to return to normal viewing.

Option Menu

Initial	
Hotel	: OFF
Power Restore	: OFF
Antenna	: 2
Input	: 3
When Muting	: ON
Firmware Version Number	<input type="text"/> <input type="text"/> <input type="text"/>

Initial Settings

Initial Item	Initial Setting	Initial Item	Initial Setting
INPUT	TV	TV CC	When Muting
RECEIVING CH	CH 003	PIP SOURCE	TV
TV / CATV	CATV	PIP POSITION	Lower Right
Q.V.	CH 003	VIDEO MUTE	OFF
CHANNEL MEMORY	ALL CH (0.0)	NAME THE INPUT	ALL LABELS CLEAR
TV Lock	OFF	S.Q.V.	ALL CH CLEAR
Channel Lock	OFF	AUTO CLOCK	ON
LOCK CODE	----	A/V NETWORK	OFF
VOLUME	30%	SELECT LANGUAGE	English
AUDIO FUNCTIONS		NAME THE CHANNEL	ALL LABELS CLEAR
Listen To	STEREO	SELECT MENU TYPE	Standard Menu
Bass	50%	Parental Lock	Cancel
Treble	50%		
Balance	50%		
Surround	OFF		
Speaker	ON		
Monitor Out	Variable		
Level Sound	OFF		
VIDEO FUNCTIONS			
TV IRIS	OFF		
Tint	50%		
Color	50%		
Contrast	100%		
Brightness	50%		
Sharpness	50%		
Color Temp	High		
Background	Gray		
TV Instant Info	ON		

5. Service Menu Set Up

Follow the steps below for the initial set up:

1. Select the "MENU" display by pressing the "MENU" button once.
2. Press the number buttons "1", "3", "7", "0" in sequence to select the "SERVICE MENU" display.
3. Press the "ADJUST" button to select "Initial."
4. Press "ENTER."

NOTE: At this time channel 3 is automatically selected.

CAUTION: DO NOT ACTIVATE E2 RESET AS THIS WILL RESET ALL ALIGNMENT DATA.

Service Menu

Initial			
E2 RESET		3 Dia:	On
Hotel:	Off	Auto Clock:	On
Power Restore:	Off	Guide Plus:	Off
Antenna:	2		
Input:	3		
When Muting:	On		
Firmware Version Number			<input type="text"/> <input type="text"/> <input type="text"/>

5. Circuit Adjustment Mode


Except for the following, all adjustment items must be performed using the remote hand unit.

Adj. Item	Description
6	Lens Focus
7	Electrostatic Focus

A. Activating the Circuit Adjustment Mode

1. Press the "MENU" button on a remote hand unit.
(The "MENU" display will appear.)
2. Press the number buttons "2", "3", "5", "7" in sequence.
(The screen will change to the circuit adjustment mode.)

Note: Repeat steps 1 and 2 if circuit adjustment mode does not appear on screen.

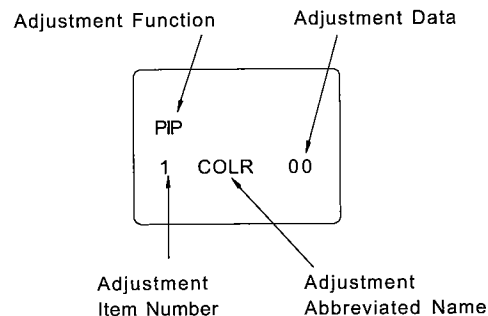


B. Selection of adjustment Functions and Adjustment Items

To select an adjustment item in the circuit adjustment mode, first select the adjustment function that includes the specific adjustment item to be selected. Then, select the adjustment item.

Refer to the following pages for the listing of adjustment functions and adjustment items.


1. Press the "AUDIO" button on a remote hand unit to select an adjustment function. Each time the button is pressed, the adjustment function changes in the following sequence.



2. Press the "VIDEO" button to select a specific adjustment item. The adjustment item number increases each time the "VIDEO" button is pressed.

C. Changing data

After selecting an adjustment item, use the 'ADJUST' button to change the adjustment data.

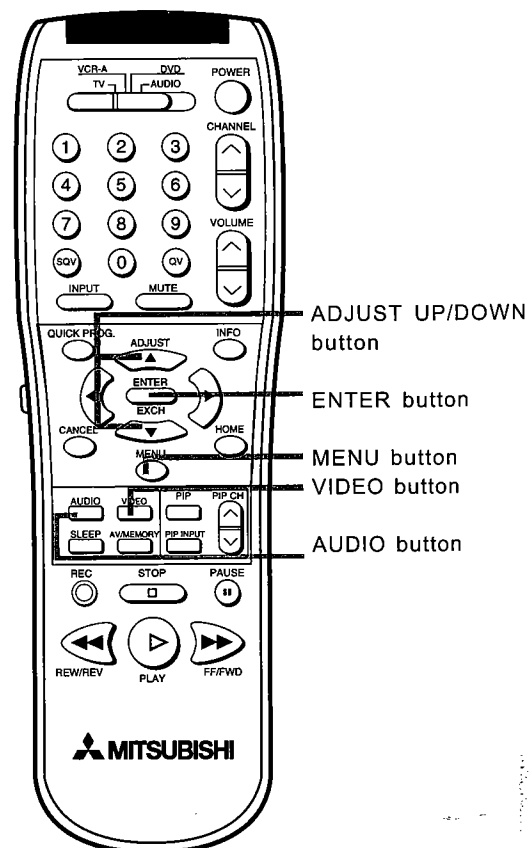

D. Saving Adjustment Data

Press "ENTER" to save the adjustment data in memory. The character display turns red for approximately one second in this step.

Note: If the circuit adjustment mode is terminated without pressing the "ENTER" button, changes in adjustment data are not saved (with the exception of PIP adjustments).

E. Terminating the Circuit Adjustment Mode

Press the "MENU" button on the remote hand unit twice to terminate the circuit adjustment mode.

Note: The circuit adjustment mode can also be terminated by turning the power off.

When Replacing the EEPROM (IC701)

The EEPROM (IC701) stores the adjustment data. After replacing the EEPROM, readjust the data to the values given in the following tables. If good performance is not obtained with these values, perform the Adjustment Procedure(s) given in the Note column.

List of Adjustment Items

Function Display		VCJ				IC200
Item Number	Abbreviated Name	Adjustment Name	Range	Initial Data	Note	
0	CON	PICTURE GAIN CONTROL	0~63	42		
1	TNT	TINT CONTROL 1	0~63	31		
2	COL	COLOR GAIN CONTROL 1	0~63	31		
3	BRT	BRIGHT LEVEL CONTROL 1	0~63	31		
4	SHP	SHARPNESS GAIN CONTROL	0~15	6		
5	CTG	G CUT-OFF ADJ.	0~15	7	#4 (CRT Cut Off, White Balance)	
6	CTB	B CUT-OFF ADJ.	0~15	7	#4 (CRT Cut Off, White Balance)	
7	DRG	G DRIVE GAIN ADJ.	0~63	42	#4 (CRT Cut Off, White Balance)	
8	DRB	B DRIVE GAIN ADJ.	0~63	42	#4 (CRT Cut Off, White Balance)	
9	LDG	LOW GREEN DRIVE GAIN	0~63	20	#4 (CRT Cut Off, White Balance)	
10	LDB	LOW BLUE DRIVE GAIN	0~63	20	#4 (CRT Cut Off, White Balance)	
11	YDL	Y CHROMA TRAP	0~1	0		
12	VM	Y OUTPUT FOR VM	0~1	0		
13	DCT	SW OF DC PROPAGATED RATE	0~1	1		
14	DPC	SW OF BLK LEVEL EXPANSION	0~1	1		
15	TOT	SW OF CHROMA TOT FILTER	0~1	0		
16	AXS	SW OF R-Y, G-Y AXIS	0~1	1		
17	DCO	SW OF DYNAMIC COLOR	0~1	1		
18	ABL	SW OF ABL MODE	0~1	0		
19	DL1	RATIO OF PRE/OVER-SHOOT	0~3	0		
20	DL2	SHARPNESS F0 CONTROL	0~3	1		
21	SCN	CONTRAST GAIN CONTROL	0~15	3		
22	CTA	CHROMA TRAP F0 ADJ.	0~15	7		
23	SCL	COLOR GAIN CONTROL	0~15	2		
24	SHU	TINT CONTROL	0~15	10		
25	SBR	BRIGHT LEVEL CONTROL	0~63	31	#10 (Black Level)	
26	GMG	GAMMA CONTROL	0~3	2		
27	AG1	AGING MODE - WHITE OUTPUT	0~1	0		
28	AG2	AGING MODE - BLACK OUTPUT	0~1	0		
29	RON	R VIDEO OUTPUT	0~1	1		
30	GON	G VIDEO OUTPUT	0~1	1		
31	BON	B VIDEO OUTPUT	0~1	1		
32	PON	RGB VIDEO OUTPUT	0~1	1		
33	VOF	SW OF V-SAW OSCILLATION	0~1	1		
35	CMD	SW OF V COUNTDOWN	0~1	0		
37	VHT	VERTICAL HEIGHT	0~63	21		
40	AFC	AFC LOOP GAIN	0~3	1		
41	VSC	ADJ OF VERT S-CORRECTION	0~15	7	#9 (Vertical Linearity)	
42	VLR	VERT LINEARITY ADJ.	0~15	7	#9 (Vertical Linearity)	
44	RPO	REFERENCE PULSE TIMING	0~3	3		
47	HPS	HORIZ POSITION ADJ.	0~15	5		
51	ABW	VERT BOW CORRECTION	0~15	7		
52	AAG	VERT TILT CORRECTION	0~15	7		
55	HBL	H BLK ON SOFT-FULL MODE	0~1	1		
61	LBK	H BLK OF LEFT SIDE	0~15	9		
62	RBK	H BLK OF RIGHT SIDE	0~15	12		
69	SCT	PICTURE CONTROL	0~63	42	#7 (Sub Contrast)	
70	ESY	*FACTORY SET-UP ONLY*	0~1	0		
71	CD2	*FACTORY SET-UP ONLY*	0~1	0		

Function Display		PIP IC7001			
Item Number	Abbreviated Name	Adjustment Name	Range	Initial Data	Note
0	CONT	CONTRAST	0~127	48	#18 (PIP Contrast) #16 (PIP Chroma Gain) #17 (PIP Sub Tint)
1	COLR	COLOR OUTPUT GAIN	0~127	34	
2	TINT	TINT	0~63	28	
3	BRIT	BRIGHTNESS	0~31	15	
4	EMPH	EMPHASIS	0~1	1	
5	DECD	DECODE	0~1	0	
6	SYNC	SYNC LEVEL	0~3	3	
7	RVS	GREY BACKGROUND	0~1	0	
8	RVHS	FREE RUN CONTROL	0~1	0	
9	BG-Y	BACKGROUND LUMINANCE	0~16	12	
10	BSTB	BURST GAIN BLUE	0~255	76	
11	BSTR	BURST GAIN RED	0~255	145	
12	MVW	MACROVISION	0~255	0	
13	CRTN	FIXED DATA	0~3	3	
14	VXA	VERTICAL POSITION	0~255	145	
15	VXS	VERTICAL SAMPLING POSITION	0~63	41	
16	HXA0	HORIZONTAL POSITION	0~255	97	
17	ADJ	HORIZONTAL DELAY	0~3	4	
18	YDL	SUB Y DELAY	0~255	4	
19	HPX	SAMPLING STARTING POSITION	0~63	3	
20	VYA9	SUB VERTICAL WIDTH (1/9)	0~255	68	
21	HYA9	SUB HORIZONTAL WIDTH (1/9)	0~63	56	
22	VYA6	SUB VERTICAL WIDTH (1/6)	0~255	51	
23	HYA6	SUB HORIZONTAL WIDTH (1/6)	0~63	42	
24	BGBY	B-Y GAIN	0~7	4	
25	BGRY	R-Y GAIN	0~7	4	
26	CHRO	CHROMA ALIGNMENT	0~63	63	
27	EXTP	EXTENSION PORT	0~3	2	
28	BGPM	BURST GATE PULSE	0~1	1	
29	HX	SAMPLING START POSITION	0~63	22	
30	EXSY	ANALOG SYNC SEPARATOR	0~3	2	
31	LPF	LOW PASS FILTER	0~3	2	
32	BHS9	EXT/INT SYNC (1/9)	0~3	3	
33	BHS6	EXT/INT SYNC (1/6)	0~3	3	
34	HADJ	BGP POSITION	0~16	15	
35	BGST	BGP PHASE SETTING	0~63	14	
36	EXHD	EXT HD	0~3	0	
37	EXVD	EXT VD	0~1	0	
38	PN28	PIN 28 OUTPUT	0~63	1	
39	BGPX	BURST GATE PULSE OUTPUT ALIGNMENT	0~63	29	
40	BGPY	COLOR SATURATION ALIGNMENT	0~63	63	
41	BPF1	BANDPASS FILTER	0~3	0	
42	TACC	TEST ACC LEVEL	0~63	0	
43	ACC	ACC LEVEL	0~63	21	
44	FSC	*FACTORY ADJUSTMENT ONLY*	0~3	0	

Function Display	HR			
Adjustment Name	Range	Data	Note	
Character Position	0~25	20	#12 CHR POS.	

Function Display		MCS				IC3E1
Item Number	Abbreviated Name	Adjustment Name	Range	Initial Data	Note	
0	INP	INPUT LEVEL ADJ	0~15	7	#1 (Input Level)	
1	AUT	STEREO ADJ	0~1	0		
2	WDE	SPECTRAL WIDE	0~31	16		
3	SPC	SPECTRAL EXPANSION	0~31	16		
4	ATK	ATTACK TIME FOR AVL	0~3	1	#1 (Input Level)	
5	VZX	ZERO CROSS VOLUME	0~1	1	#1 (Input Level)	
6	MZX	ZERO CROSS MUTE	0~1	1	#1 (Input Level)	

Function Display		VDRV				IC870
Item Number	Abbreviated Name	Adjustment Name	Range	Initial Data	Note	
0	PCON	CONVERGENCE PHASE	0~255	128		
1	PFOC	FOCUS PHASE	0~255	0	DISPLAY ONLY	
2	WCON	CONVERGENCE PULSE WIDTH	0~63	33		
3	WFOC	FOCUS PULSE WIDTH	0~63	44	DISPLAY ONLY	
4	PLL	PLL DIVIDING RATIO	0~15	5	#14 (Dynamic Convergence)	

Function Display		HV				IC8D00
Item Number	Abbreviated Name	Adjustment Name	Range	Initial Data	Note	
0	HV	HIGH VOLTAGE CONTROL	0~254	150	#3 (HV Control)	

Function Display		AI			
Item Number	Abbreviated Name	Adjustment Name	Range	Initial Data	Note
0	OT1	*AUTO IRIS* FACTORY ADJUSTMENT ONLY	0~255	60	
1	IT2		0~255	140	
2	CN0		0~63	02	
3	CN1		0~63	07	
4	CN2		0~63	63	
5	BR0		0~63	28	
6	BR1		0~63	30	
7	BR2		0~63	31	

Function Display		CONV GEO			IC8G00
Item Number	Abbreviated Name	Adjustment Name	Range	Data	Note
0	HWID	HORIZ WIDTH	0~254	127	#10 (Horizontal Width)
1	TILT	TILT	0~254	127	#11 (Raster Correction)
2	VBOW	VERT BOW	0~254	127	#11 (Raster Correction)
3	SKEW	SKEW	0~254	127	#11 (Raster Correction)
4	HBOW	HORIZ BOW	0~254	127	#11 (Raster Correction)
5	TBPC	TOP/BOTTOM PIN CUSHION	0~254	127	#11 (Raster Correction)
6	EWPC	EAST/WEST PIN CUSHION	0~254	127	#11 (Raster Correction)
7	VIPC	VERT INSIDE PIN CUSHION	0~254	127	#11 (Raster Correction)
8	HIPC	HORIZ INSIDE PIN CUSHION	0~254	127	#11 (Raster Correction)
9	HKEY	HORIZ KEYSTONE	0~254	127	#11 (Raster Correction)
10	VKEY	VERT KEYSTONE	0~254	127	#11 (Raster Correction)
11	VSBW	VERT SIDE BOW	0~254	127	#11 (Raster Correction)
12	VSTL	VERT SIDE TILT	0~254	127	#11 (Raster Correction)
13	V3RD	VERT 3RD CORRECTION	0~254	127	#11 (Raster Correction)
14	V4TH	VERT 4TH CORRECTION	0~254	127	#11 (Raster Correction)
15	HSBW	HORIZ SIDE BOW	0~254	127	#11 (Raster Correction)
16	HSKW	HORIZ SIDE SKEW	0~254	127	#11 (Raster Correction)
17	H3RD	HORIZ 3RD CORRECTION	0~254	127	#11 (Raster Correction)
18	HSSS	HORIZ SIDE S CORRECTION	0~254	127	#11 (Raster Correction)
19	HLIN	HORIZ LINEARITY	0~254	127	#11 (Raster Correction)
20	HSLN	HORIZ SIDE LINEARITY	0~254	127	#11 (Raster Correction)

Function Display		CONV			Red: IC8D00 Blue: IC8E00	
Item Number	Abbreviated Name	Adjustment Name	Range	Data	Note	
Red	Blue					
0	30	HSTA	HORIZ STATIC	0~254	127	#14 (Dynamic Convergence)
1	31	VSTA	VERT STATIC	0~254	127	#14 (Dynamic Convergence)
2	32	TILT	VERT TILT	0~254	127	#14 (Dynamic Convergence)
3	33	BOW	VERT BOW	0~254	127	#14 (Dynamic Convergence)
4	34	SKEW	SKEW	0~254	127	#14 (Dynamic Convergence)
5	35	HBOW	HORIZ BOW	0~254	127	#14 (Dynamic Convergence)
6	36	VWID	VERT HEIGHT	0~254	127	#14 (Dynamic Convergence)
7	37	VLIN	VERT LINEARITY	0~254	127	#14 (Dynamic Convergence)
8	38	HWID	HORIZ WIDTH	0~254	127	#14 (Dynamic Convergence)
9	39	HLIN	HORIZ LINEARITY	0~254	127	#14 (Dynamic Convergence)
10	40	HSDL	LEFT HORIZ SIDE	0~254	127	#14 (Dynamic Convergence)
11	41	HSDR	RIGHT HORIZ SIDE	0~254	127	#14 (Dynamic Convergence)
12	42	SLIN	HORIZ LIN MIDDLE (1)	0~254	127	#14 (Dynamic Convergence)
13	43	CLIN	HORIZ LIN MIDDLE (2)	0~254	127	#14 (Dynamic Convergence)
14	44	VKLU	VERT KEYSTONE (L-UPPER)	0~254	127	#14 (Dynamic Convergence)
15	45	HKLU	HORIZ KEYSTONE (L-UPPER)	0~254	127	#14 (Dynamic Convergence)
16	46	VKLL	VERT KEYSTONE (L-LOWER)	0~254	127	#14 (Dynamic Convergence)
17	47	HKLL	HORIZ KEYSTONE (L-LOWER)	0~254	127	#14 (Dynamic Convergence)
18	48	VKRL	VERT KEYSTONE (R-LOWER)	0~254	127	#14 (Dynamic Convergence)
19	49	HKRL	HORIZ KEYSTONE (R-LOWER)	0~254	127	#14 (Dynamic Convergence)
20	50	VKRU	VERTKEYSTONE (R-UPPER)	0~254	127	#14 (Dynamic Convergence)
21	51	HKRU	HORIZ KEYSTONE (R-UPPER)	0~254	127	#14 (Dynamic Convergence)
22	52	LHBW	HORIZ SLOPING ENDS (LEFT)	0~254	127	#14 (Dynamic Convergence)
23	53	RHBW	HORIZ SLOPING ENDS (RIGHT)	0~254	127	#14 (Dynamic Convergence)
24	54	LVBW	VERT SLOPING ENDS (LEFT)	0~254	127	#14 (Dynamic Convergence)
25	55	RVBW	VERT SLOPING ENDS (RIGHT)	0~254	127	#14 (Dynamic Convergence)
-	56	DA42	KEYSTONE OFFSET	0~254	127	#14 (Dynamic Convergence)
27	57	DA50	----	0~254	127	Display Only
28	58	DA51	----	0~254	127	Display Only
29	59	DA52	----	0~254	127	Display Only


[MULTI CHANNEL SOUND CIRCUIT]	Adjustment purpose	Set the level of the input signal for the multi channel sound circuit.
	Symptom when incorrectly adjusted	Distorted sound during an MCS broadcast.

1. Input Level

Measuring Instrument	Oscilloscope
Test Point	Connector "JR" pin 2
Exit Trigger	-----
Measurement range	DIV 50mV TIME 2ms
Input Signal	RF signal (Monaural Sound)
Input Terminal	RF IN terminal

- Supply an RF signal (monaural sound 400Hz 100% MOD).
 - Connect the oscilloscope to connector "JR" pin 2.
 - Press the "MENU" button on a remote hand unit.
 - Press the numerical buttons 2-3-5-7 in sequence to change the screen to the circuit adjustment mode.
 - Set the adjustment function to "MCS" by pressing the "AUDIO" button.
 - Initialize adjustment values to those shown in the table below by pressing the "VIDEO" and "ADJUST" buttons.
 - Select adjustment item "0 INP" using the "VIDEO" button.
 - Set the adjustment data so that the amplitude is 500 ± 20 mVrms (1.41 ± 0.05 Vp-p)
 - Press "ENTER" to write the adjustment data into memory.
 - Press the "MENU" button twice to terminate the circuit adjustment mode.
- Note:** Adjustment item 2 (Stereo Separation) must be performed after this adjustment.

PCB-SIGNAL (COMPONENT SIDE)

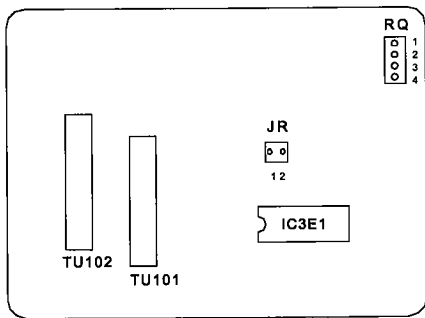

Adjustment Abbreviated Name	Initial Data
0 INP	7
1 AUT	0
2 WDE	16
3 SPC	16
4 ATTK	1
5 VZX	1
6 MZX	1


[MULTI CHANNEL SOUND CIRCUIT]	Adjustment purpose	Adjust right and left separation.
	Symptom when incorrectly adjusted	Poor or no stereo separation.

2. Separation

Measuring Instrument	Oscilloscope
Test Point	Connector "JR" pin 2
Exit Trigger	-----
Measurement range	Division 10mV Time 2ms
Input Signal	RF signal (Stereo Sound)
Input Terminal	RF IN terminal

- Note:** This adjustment must follow item 1 (Input Level)
- Supply an RF signal (L-CH stereo sound 300Hz 30% MOD).
 - Connect the oscilloscope to connector "JR" pin 2.
 - Press the "MENU" button on a remote hand unit.
 - Press the numerical buttons 2-3-5-7 in sequence to change the screen to the circuit adjustment mode.
 - Set the adjustment function to "MCS" by pressing the "AUDIO" button.
 - Make sure that the value of item "3 SPC" is 16.
 - Select adjustment item "2 WDE" using the "VIDEO" button
 - Using the "ADJUST" button, set the adjustment data so that the amplitude of the 300Hz waveform is at minimum.
 - Change the modulation frequency to 3kHz.
 - Select adjustment item "3 SPC" using the "VIDEO" button.
 - Using the "ADJUST" button, set the adjustment data so that the amplitude of the 3kHz waveform is at minimum.
 - Repeat steps 7 and 8.
 - Press "ENTER" to write the adjustment data into memory.
 - Press the "MENU" button twice to terminate the circuit adjustment mode.

PCB-SIGNAL (COMPONENT SIDE)

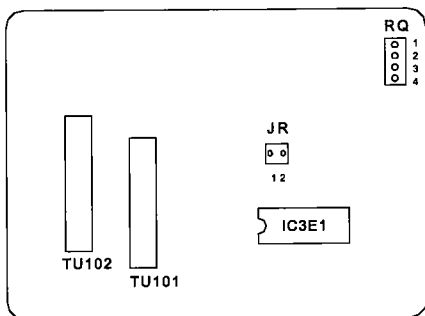


<p>[High Voltage Circuit]</p> <p>3. High Voltage Control</p>	<p>Adjustment purpose CRT anode voltage.</p> <p>Symptom when incorrectly adjusted Too dark picture.</p>
--	---

Measuring Instrument	DC Voltmeter
Test Point	- Lead: pin 1 of connector DQ + Lead: pin 2 of connector DQ
Exit Trigger	----
Measurement range	----
Input Signal	VIDEO signal (Monoscope)
Input Terminal	VIDEO IN terminal

Note: This adjustment must follow item 4 (CRT Cut OFF, White Balance). Set the CONTRAST control to maximum and BRIGHTNESS control to center position..

1. Supply a VIDEO signal (monoscope).
2. Observe the DC voltage between pins 1 and 2 of connector DQ. (positive lead to pin 2).
3. Press the "MENU" button on a remote hand unit.
4. Press the numerical buttons 2-3-5-7 in sequence to change the screen to the circuit adjustment mode.
5. Set the adjustment function to "HV" by pressing the "AUDIO" button.
6. Select the adjustment item "0 HV" using the "VIDEO" button.
7. Set the adjustment data so the DC voltmeter reads $0.15 \pm 0.005V$ using the "ADJUST" button.
8. Press "ENTER" to write the adjustment data into memory.
9. Press the "MENU" button twice to terminate the circuit adjustment mode.
10. Confirm the voltage at DQ pin 2 does not exceed 0.85V.
11. If voltage exceeds this limit, repeat adjustment procedure.

PCB-MAIN (COMPONENT SIDE)


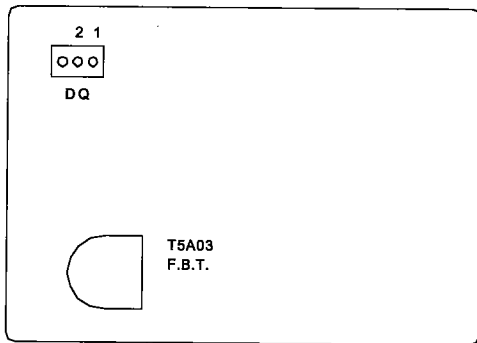


[CRT Circuit]	Adjustment purpose	To set the cut off point of the three CRTs
4. CRT Cut Off, White Balance	Symptom when incorrectly adjusted	Monochrome with color tint, or incorrect brightness.

Measuring Instrument	DC Ammeter Oscilloscope
Test Point	TP6R/G/B
Exit Trigger	-----
Measurement Range	Division 5V Time 2ms
Input Signal	----
Input Terminal	

1. Select the EXT-1 input with no signal supplied.
2. Press the "MENU" button on a remote hand unit.
3. Press the numerical buttons 2-3-5-7 in sequence to change the screen to the circuit adjustment mode.
4. Set the adjustment function "VCJ " by pressing the "AUDIO" button.
5. Set the items shown in the Table to the given data values.
6. Observe the waveform at TP6R.
7. Adjust the SCREEN control (R) so that the voltage is 200V.
8. Observe the waveform at TP6G.
9. Adjust the SCREEN control (G) so that the voltage is 200V.
10. Observe the waveform at TP6B.
11. Adjust the SCREEN control (B) so that the voltage is 200V.

Abbreviated Name	Data
3 BRT	31
5 CTG	7
6 CTB	7
7 DRG	42
8 DRB	42
25 SBR	31

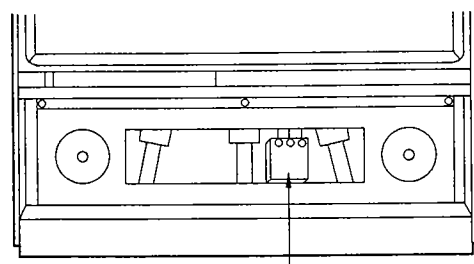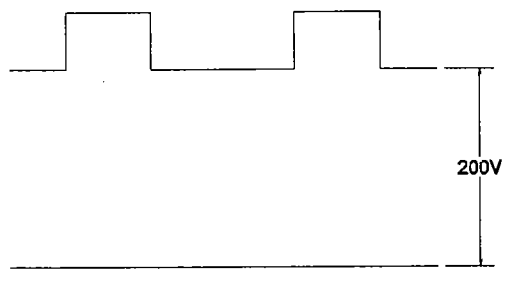

Focus Pack
(SCREEN VR)

FRONT VIEW

12. Supply a VIDEO signal (full white raster)
 13. Set adjustment data of "7 DRG" and "8 DRB" so that the white level is optimum at the center of the screen.
 14. Observe the waveform at "TP6G".
 15. Set the data of "5 CTG" so that the voltage is 200V.
 16. Observe the waveform at "TP6B".
 17. Set the data of "6 CTB" so the the voltage is 200V.
 18. Measure the DC current as indicated in Table 1.
- Note:** The internal resistance of the ammeter must be 30 Ω or less, and the length of the lead wires should be 12 inches or less. Measure the current in the three CRTs at the same time. Make sure that the current in the GREEN and BLUE CRTs does not exceed the values shown in Table 2. If excessive, readjust the current to the approximate values given in Table 3 and repeat steps 1-18.
19. Press "ENTER" to write the adjustment data into memory.
 20. Press the "MENU" button twice to terminate the circuit adjustment mode.

	Connections of Ampere Meter	
	Positive	Negative
R	R6R0 (+ SIDE)	R6R0 (- SIDE)
G	R6G0 (+ SIDE)	R6G0 (- SIDE)
B	R6B0 (+SIDE)	R6B0 (- SIDE)

Table 1

	Maximum Current
G	580μA
B	530μA

Table 2

Current Proportion		
R	G	B
225μA	540μA	485μA


Table 3

[Focus Circuit]	Adjustment purpose The best resolution of the picture.
5. Lens Focus	Symptom when incorrectly adjusted Blurred picture.

Measuring Instrument	----
Test Point	----
Exit Trigger	----
Measurement range	----
Input Signal	VIDEO signal (Monoscope)
Input Terminal	VIDEO IN terminal

Note: This adjustment must follow item 6 (Electrostatic Focus). Perform this adjustment for RED, GREEN, and BLUE monochrome pictures.

1. Supply a VIDEO signal (monoscope).
2. Produce a GREEN monochrome picture.
 - a) Press the "MENU" button on a remote hand unit.
 - b) Press the buttons 2-3-5-9 then press the button specified in the table below to select each color.
3. Adjust the position of the lens for the best picture resolution. **NOTE:** Attach a white paper to the inside center of the screen. During adjustment, observe the picture on the screen from inside for easier adjustment.
4. Display the original picture and press "MENU" twice.

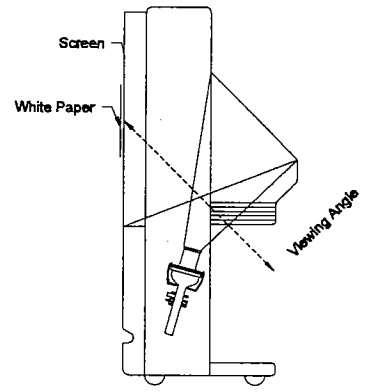


Monochrome Picture	Remote Hand Unit Button
RED	1
GREEN	2
BLUE	3

[Focus Circuit]	Adjustment purpose For best resolution of the picture.
6. Electrostatic Focus	Symptom when incorrectly adjusted Out of focus picture.

Measuring Instrument	----
Test Point	----
Exit Trigger	----
Measurement range	----
Input Signal	VIDEO signal (Monoscope)
Input Terminal	VIDEO IN terminal

Note: This adjustment must follow item 7 (Sub Contrast). If you replace the CRT, this adjustment must follow item 5, (Lens Focus). Perform this adjustment respectively for RED, GREEN, and BLUE monochrome pictures.

1. Supply a VIDEO signal (monoscope).
2. Press the "A/V RESET" button in the control panel to reset all VIDEO FUNCTIONS.
3. Produce a monochrome picture.
 - a) Press the "MENU" button on a remote hand unit.
 - b) Press the buttons 2-3-5-9 then press the button specified in the table below to select each color.
4. Adjust the FOCUS VR on the focus pack so the sharpness of the upper area of the screen is optimum.
5. Display the original picture and press "MENU" twice.

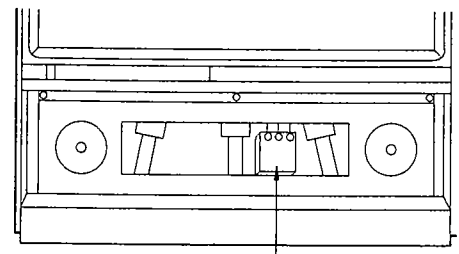

Focus Pack (SCREEN VR)
FRONT VIEW


Monochrome Picture	Remote Hand Unit Button
RED	1
GREEN	2
BLUE	3

[Video Circuit]	Adjustment purpose To set the beam current to its optimum value.
7. Sub Contrast	Symptom when incorrectly adjusted Excessive or insufficient contrast.

Measuring Instrument	DC Milliammeter
Test Point	+ Lead: pin 3 of connector MS - Lead: pin 1 of connector MS
Exit Trigger	----
Measurement range	3mA
Input Signal	RF signal (Gray scale 87.5% MOD)
Input Terminal	RF IN terminal

- Note:** This adjustment must follow item 4 (CRT Cut-Off, White Balance). Preheat the set for two minutes or more.
1. Supply an RF signal (gray scale 87.5% MOD).
 2. Press the "MENU" button on a remote hand unit.
 3. Press the numerical buttons 2-3-5-7 in sequence to change the screen to the circuit adjustment mode.
 4. Set the adjustment function "VCJ " by pressing the "AUDIO" button.
 5. Select the adjustment item "69 SCT" using the "VIDEO" button.
 6. Measure the current at pins 1 and 3 of connector MS (Plus lead to pin 3).
 7. Set the adjustment data so the DC milliammeter reads $725 \pm 25\mu A$.
 8. Press "ENTER" to write the adjustment data into memory.
 9. Press the "MENU" button twice to terminate the circuit adjustment mode.

PCB-MAIN (COMPONENT SIDE)

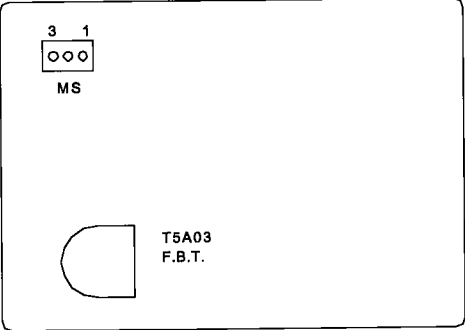


[Video Circuit]	Adjustment purpose Picture Luminance.
8. Black Level	Symptom when incorrectly adjusted Excessive or insufficient brightness.

Measuring Instrument	----
Test Point	----
Exit Trigger	----
Measurement range	----
Input Signal	VIDEO signal (Monoscope)
Input Terminal	VIDEO IN terminal


- Note:** This adjustment must follow item 7 (Sub-Contrast).
1. Supply an VIDEO signal (monoscope).
 2. Press the "MENU" button on a remote hand unit.
 3. Press the numerical buttons 2-3-5-7 in sequence to change the screen to the circuit adjustment mode.
 4. Set the adjustment function "VCJ " by pressing the "AUDIO" button.
 5. Select the adjustment item "25 SBR" using the "VIDEO" button.
 6. Observe the gradation pattern inside a monoscope signal, and set the adjustment data so that both levels, at the 10% and 0% areas of the gradation pattern, are the same (black level 8%) using the "ADJUST" button.
 7. Press "ENTER" to write the adjustment data into memory.
 8. Press the "MENU" button twice to terminate the circuit adjustment mode.

40%	30%	20%	10%
50%	0%	0%	0%
60%	70%	80%	90%

GRADATION SCALE

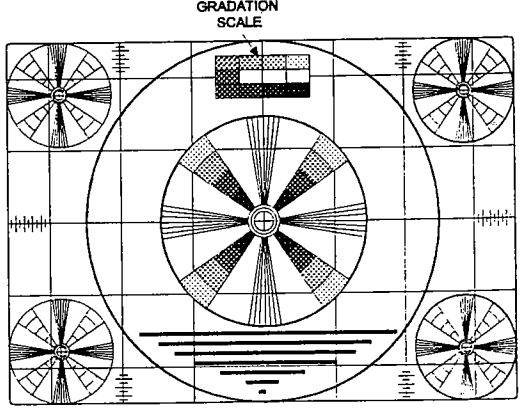


[Deflection Circuit]	Adjustment purpose To set vertical linearity.
9. Vertical Linearity, Height and S-Correction	Symptom when incorrectly adjusted Incorrect vertical height and linearity.
Measuring Instrument	-----
Test Point	-----
Exit Trigger	-----
Measurement range	-----
Input Signal	VIDEO signal (Monoscope)
Input Terminal	VIDEO IN terminal

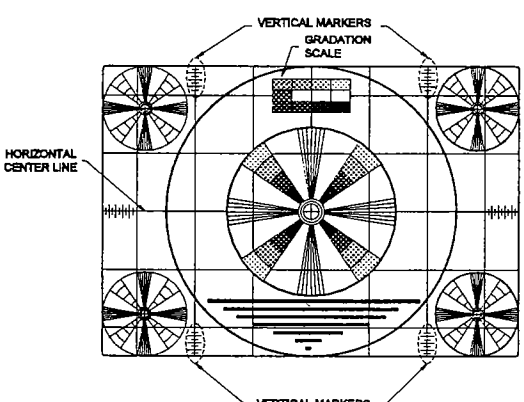

1. Supply a VIDEO signal (monoscope)
2. Press the "MENU" button on a remote hand unit.
3. Press the numerical buttons 2-3-5-7 in sequence to change the screen to the circuit adjustment mode.
4. Set the adjustment function to "VCJ" by pressing the "AUDIO" button.
5. Select adjustment item "47 VHT" using the "VIDEO" button. Adjust so that the vertical markers are equal using the "ADJUST" button.
6. Select the adjustment item "42 VLR" using the "VIDEO" button
7. Set the adjustment data so that the largest circle is round using the "ADJUST" button.
8. Supply a VIDEO signal (crosshatch).
9. Select the adjustment item "41 VSC"(Vertical S) using the "VIDEO" button.
10. Set the adjustment data so that the height of the squares in the cross hatch signal are equal at the top, bottom and middle of the screen using the "ADJUST" button.
11. Press "ENTER" to write the adjustment data into memory.
12. Press the "MENU" button twice to terminate the circuit adjustment mode.

[Deflection Circuit]	Adjustment purpose To set the width of the picture.
10. Horizontal Width	Symptom when incorrectly adjusted Picture compressed or expanded horizontally.
Measuring Instrument	-----
Test Point	-----
Exit Trigger	-----
Measurement range	-----
Input Signal	VIDEO signal (Monoscope)
Input Terminal	VIDEO IN terminal

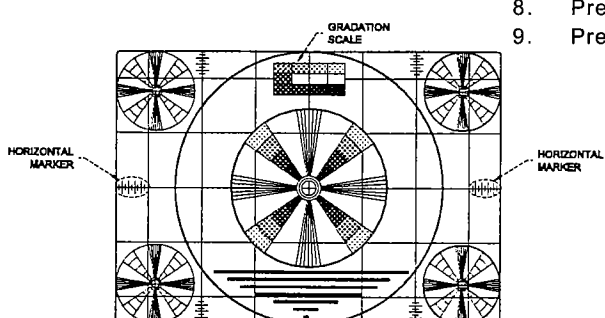

Note: This adjustment must follow item 4 (CRT Cut Off, White Balance) and item 3 (High Voltage Control). Perform this adjustment alternately with item 11 (Raster Distortion Correction).


1. Supply a VIDEO signal (monoscope).
2. Cover the RED and BLUE lenses, producing a GREEN monochrome picture.
3. Press the "MENU" button on a remote hand unit.
4. Press the numerical buttons 2-3-5-7 in sequence to change the screen to the circuit adjustment mode.
5. Set the adjustment function to "CONV GEO" by pressing the "AUDIO" button.
6. Select the adjustment item "0 HWID" using the "VIDEO" button.
7. Set the adjustment data so the sum of the horizontal width markers is 6.0 using the "ADJUST" button.
8. Press "ENTER" to write the adjustment data into memory.
9. Press the "MENU" button twice to terminate the circuit adjustment mode.


<p>[Raster Correction Circuit] 11. Raster Correction</p>	<p>Adjustment purpose To correct picture distortion.</p> <p>Symptom when incorrectly adjusted Distorted picture.</p>
--	--

Measuring Instrument	
Test Point	----
Exit Trigger	----
Measurement Range	----
Input Signal	VIDEO signal (Crosshatch)
Input Terminal	VIDEO IN terminal

1. Supply a VIDEO signal (Crosshatch)
 2. Cover the RED and BLUE lenses, producing a GREEN crosshatch picture.
 3. Press the "MENU" button on a remote hand unit.
 4. Press the buttons 2-3-5-7 in sequence.
(The screen will change to the circuit adjustment mode.)
 5. Set the function to "CONV GEO." ("AUDIO" button)
 6. Set the data of the items below so that all the green horizontal and vertical lines are straight and spacing is linear.
 7. Write the data into memory. (Press "ENTER")
 8. Terminate the circuit adjustment mode. (Press "MENU" twice)
- NOTE:** Adjustment 14 (Dynamic Convergence) must be performed immediately after this adjustment.

<p>0 HWID</p>	<p>6 EWPC</p>	<p>12 VSTL</p>	<p>18 HSSS</p>
<p>1 TILT</p>	<p>7 VIPC</p>	<p>13 V3RD</p>	<p>19 HLIN</p>
<p>2 VBOW</p>	<p>8 HIPC</p>	<p>14 V4TH</p>	<p>20 HSLN</p>
<p>3 SKEW</p>	<p>9 HKEY</p>	<p>15 HSBW</p>	
<p>4 HBOW</p>	<p>10 VKEY</p>	<p>16 HSKW</p>	
<p>5 TBPC</p>	<p>11 VSBW</p>	<p>17 H3RD</p>	

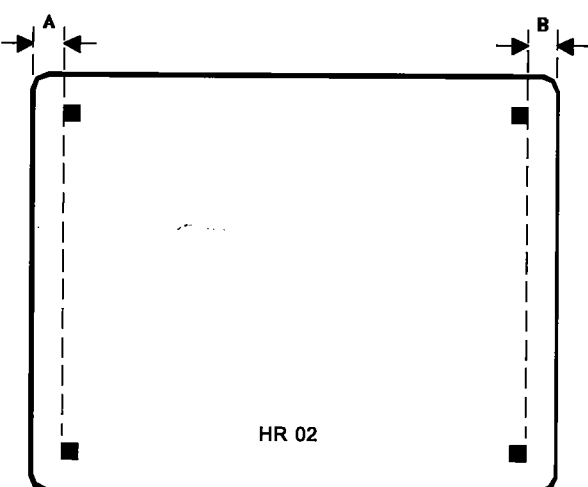[Screen Character Circuit]		Adjustment purpose	To position the character display.
12. Character Position		Symptom when incorrectly adjusted	Incorrect Character position
Measuring Instrument	----	<ol style="list-style-type: none"> 1. Supply a VIDEO signal (Monscope). 2. Press the "MENU" button on a remote hand unit. 3. Press the buttons 2-3-5-7 in sequence. (The screen will change to the circuit adjustment mode.) 4. Set the function to "HR" using the "AUDIO" button. 5. Using the "ADJUST" button, align so that the widths for A and B are equal. 	
Test Point	----		
Exit Trigger	----		
Measurement range	----		
Input Signal	Standard RF Broadcast		
Input Terminal	Antenna A/B		

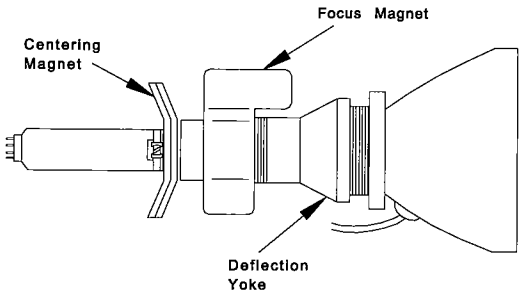[CRT]		Adjustment purpose	To correct convergence caused by installation direction.
13. Static Convergence		Symptom when incorrectly adjusted	Color edging.
Measuring Instrument	----	<ol style="list-style-type: none"> 1. Degauss the shield cover and bracket unit of the CRT assembly and chassis sheet metal. 2. Supply a VIDEO signal (crosshatch). 3. Make sure that the vertical linearity is generally correct. If not, change the adjustment data of "VCJ" item "42 VLR" in the circuit adjustment mode so that the vertical height and linearity is roughly correct. (refer to Adjustment 9). 4. Cover the RED and BLUE lenses with lens caps to produce a GREEN monochrome picture. Rotate the centering magnet attached to the GREEN CRT, so that the center of the displayed crosshatch signal is set at the screen center. 5. Remove lens caps covering the RED and BLUE lenses. 6. Rotate the deflection Yoke and Centering Magnet on the RED CRT, so that the center horizontal line of the displaced RED crosshatch signal is converged on the GREEN signal to produce a yellow horizontal line. 7. Rotate the deflection Yoke and Centering Magnet on the BLUE CRT, so that the center horizontal line of the displaced BLUE crosshatch signal is converged on the GREEN signal to produce a white horizontal line. 	
Test Point	----		
Exit Trigger	----		
Measurement range	----		
Input Signal	VIDEO signal (Crosshatch)		
Input Terminal	VIDEO IN terminal		



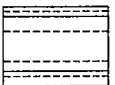
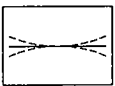
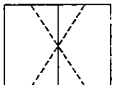
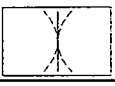
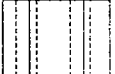
[Convergence Circuit]	Adjustment purpose To correct color misconvergence in RED, GREEN, and BLUE.
14. Dynamic Convergence	Symptom when incorrectly adjusted Colors misconverged.













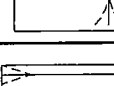

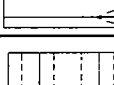

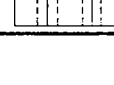
Measuring Instrument	----
Test Point	----
Exit Trigger	----
Measurement Range	----
Input Signal	VIDEO signal (Crosshatch)
Input Terminal	VIDEO IN terminal

- Note:** This adjustment must follow item 13 (Static Convergence). Dynamic convergence should not be attempted until the static convergence has been properly adjusted. (including centering adjustment, if required). Cover the RED or BLUE lens with a lens cap, and adjust the color convergence in GREEN and RED or in GREEN and BLUE.
1. Supply a VIDEO signal (crosshatch).
 2. Press the "MENU" button on a remote hand unit.
 3. Press the numerical buttons 2-3-5-9 in sequence to change the screen to the adjustment mode.
 4. Adjust the convergence according to the steps described below:
 - a. Press the "VIDEO" button to select a specific adjustment item.
 - b. Press the "ADJUST UP/DOWN" button to change adjustment data.
 - c. Press "ENTER" to switch between RED and BLUE.
- Note:** The newly entered data is automatically recorded.
5. Display a red raster and a blue raster. Confirm no black or bright horizontal line appears on the middle of the screen. If a line appears, set the data of the adjustment item "56 DA42" so that the line disappears.
 6. Confirm no misconvergence occurs at the center of the screen. Use the following method to correct center screen misconvergence:
 - a. When in the dynamic convergence adjustment mode, select the items shown in Table A to converge RED and BLUE at the center of the screen.
 7. Press the "MENU" button twice to terminate the dynamic adjustment mode.

Adjustment Item		Description
No.	Abbreviation	
00	HSTA	Red Horizontal Position
01	VSTA	Red Vertical Position
30	HSTA	Blue Horizontal Position
31	VSTA	Blue Vertical Position

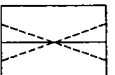Table A

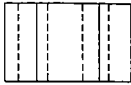RED	BLUE	ITEM	ADJUSTMENT METHOD	PICTURE
2 TILT	32 TILT	Vertical Tilt	Merge horizontal center line with Green Line	
6 VWID	36 VWID	Vertical Height	Merge horizontal lines with GREEN lines	
7 VLIN	37 VLIN	Vertical Linearity	Merge horizontal lines with GREEN lines	
3 BOW	33 BOW	Vertical Bow	Merge horizontal center line with Green Line	
4 SKEW	34 SKEW	Skew	Merge vertical center line with Green Line	
5 HBOW	35 HBOW	Horizontal Bow	Merge vertical center line with Green Line	
8 HWID	38 HWID	Horizontal Width	Merge vertical lines with Green Line	

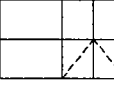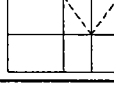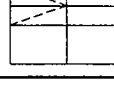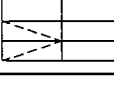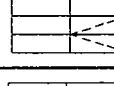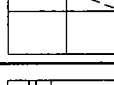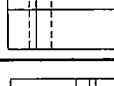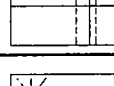RED	BLUE	ITEM	ADJUSTMENT METHOD	PICTURE
9 HLIN	39 HLIN	Horizontal Linearity	Merge Vertical lines with Green Line	
15 HKLU	45 HKLU	Horizontal Keystone	Merge upper left vertical line with GREEN line	
17 VLIN	47 HKLL	Horizontal Keystone	Merge lower left vertical line with GREEN line	
19 HKRL	49 HKRL	Horizontal Keystone	Merge lower right vertical line with GREEN Line	
21 HKRU	51 HKRU	Horizontal Keystone	Merge upper right vertical line with GREEN Line	
14 VKLU	44 VKLU	Vertical Keystone	Merge upper left horizontal line with GREEN Line	
16 VKLL	46 VKLI	Vertical Keystone	Merge lower left horizontal line with GREEN Line	
18 VKRI	48 VKRL	Vertical Keystone	Merge lower right horizontal line with GREEN Line	
20 VKRU	50 VKRU	Vertical Keystone	Merge upper right horizontal line with GREEN Line	
10 HSDL	40 HSDL	Left Horizontal Side	Merge left Vertical line with Green Line	
11 HSDR	41 HSDR	Right Horizontal Side	Merge right Vertical line with Green Line	
22 LHBW	52 LHBW	Horizontal Sloping Ends	Merge upper and lower left vertical line with GREEN Line	
23 RHBW	53 RHBW	Horizontal Sloping Ends	Merge upper and lower right vertical line with GREEN Line	
24 LVBW	53 LVBW	Vertical Sloping Ends	Merge upper and lower left horizontal line with GREEN Line	
25 RVBW	55 RVBW	Vertical Sloping Ends	Merge upper and lower right horizontal line with GREEN Line	
12 SLIN	12 SLIN	Horizontal Width at the Middle (1)	Merge Vertical lines with Green Line	
13 CLIN	39 HLIN	Horizontal linearity at the Middle (2)	Merge Vertical lines with Green Line	

[PIP Circuit]		Adjustment purpose Set the clock frequency of PIP.
15. PIP fsc		Symptom when incorrectly adjusted Interference or no color in the sub picture.
Measuring Instrument	Frequency Counter	<ol style="list-style-type: none"> 1. Supply a Video Color Bar signal input. 2. Select PIP window to display the Color Bar image. 3. Switch INPUT to External signal mode. Do not supply an input signal. 4. Press the numerical buttons 2-3-5-7 in sequence to change the screen to the circuit adjustment mode. 5. Set the adjustment function to "PIP " by pressing the "AUDIO" button. 6. Adjust item #44 FSC from 0 to 2. 7. Observe the frequency at TP61 8. Adjust VC7001 so that the frequency is 3.579545 MHz \pm 50 Hz. 9. Set #44 FSC back to a value of 0. 10. Press "MENU" twice to terminate the circuit adjustment mode.
Test Point	TP61	
Exit Trigger	----	
Measurement range	----	
Input Signal		
Input Terminal		



PCB-PIP/APT (COMPONENT SIDE)

[PIP Circuit]		Adjustment purpose To set the color level between main and sub picture.
16. PIP Chroma Gain		Symptom when incorrectly adjusted Different color level between main and sub picture.
Measuring Instrument	Oscilloscope	<p>Note: Preheat the set for one minute or more.</p> <ol style="list-style-type: none"> 1. Supply a VIDEO signal (color bar). 2. Press the "MENU" button on a remote hand unit. 3. Press the numerical buttons 2-3-5-7 in sequence to change the screen to the circuit adjustment mode. 4. Set the adjustment function to "PIP " by pressing the "AUDIO" button. 5. Set all the items in adjustment function "PIP" to the initial data value (refer to page 21) using the "VIDEO and AUDIO" button. 6. Observe the waveform at TP63 (pin 5 of IC7001). 7. Select adjustment item "1 COLOR" using the "VIDEO" button. 8. Set the adjustment data so that the chroma signal amplitude of sub picture is 90 \pm 5% of main picture using the "ADJUST" button (Fig.7). 9. Press the "ENTER" to write the adjustment data into memory. 10. Press the "MENU" button twice to terminate the circuit adjustment mode. <p>Note: Adjustment item 17 (PIP Sub Tint) must be performed immediately after this adjustment.</p>
Test Point	TP63 (pin 5 of IC7001)	
Exit Trigger	----	
Measurement range	Division 20mV Time 10 μ s	
Input Signal	VIDEO signal (Color Bar)	
Input Terminal	VIDEO IN terminal	

PCB-PIP/APT (COMPONENT SIDE)

Fig. 7

[PIP Circuit]		Adjustment purpose To obtain the same hue in the main and sub picture.
17. PIP Sub Tint		Symptom when incorrectly adjusted Different hue between the main and sub picture, and color smear.
Measuring Instrument	----	Note: Preheat the set for one minute or more. This adjustment must follow item 16 (PIP Chroma Gain)
Test Point	----	
Exit Trigger	----	
Measurement range	----	
Input Signal	VIDEO signal (Color Bar)	
Input Terminal	VIDEO IN terminal	
		1. Supply a VIDEO signal (color bar). 2. Activate PIP and display the same picture on main screen and sub picture screen. 3. Press the "MENU" button on a remote hand unit. 4. Press the numerical buttons 2-3-5-7 in sequence to change the screen to the circuit adjustment mode. 5. Set the adjustment function to "PIP " by pressing the "AUDIO" button. 6. Select adjustment item "2 TINT" using the "VIDEO" button. 7. Set the adjustment data so that the sub picture corresponds to the hue in the main picture using the "ADJUST" button. 8. Press the "ENTER" to write the adjustment data into memory. 9. Press the "MENU" button twice to terminate the circuit adjustment mode.

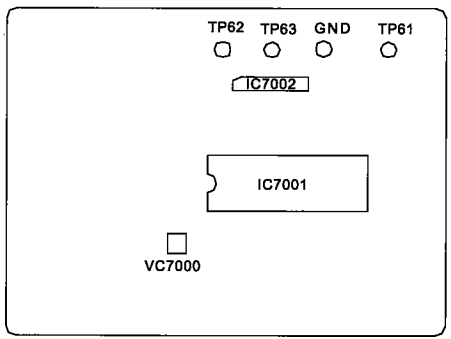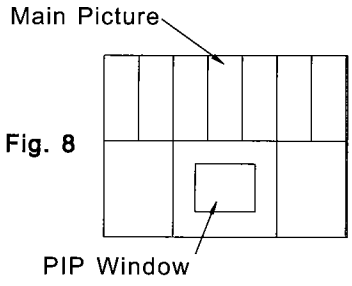[PIP Circuit]		Adjustment purpose To obtain the proper contrast ratio in the sub picture.
18. PIP Contrast		Symptom when incorrectly adjusted Sub picture too light or too dark.
Measuring Instrument	Oscilloscope	1. Apply Color Bar signal to External Input and select this image on both the Main and PIP pictures. 2. Using the PIP position button on a remote hand unit, adjust to place the PIP window as shown in figure 8 . 3. Connect Oscilloscope probe to TP-62 and observe the waveform. 4. Synchronize the waveform on the Oscilloscope as shown in figure 8 . 5. Press the "MENU" button on a remote hand unit. 6. Press the numerical buttons 2-3-5-7 in sequence to enter the circuit adjustment mode. 7. Select the "PIP" function using the "AUDIO" button. 8. Adjust item "0 CONT" using the "ADJUST UP/DOWN" buttons to obtain the waveform ratio shown in figure 7 (Adjustment #16). PIP amplitude should be equal to $90 \pm 5\%$ of Main picture. 9. Press the "ENTER" button to write the adjustment data into memory. 10. Press the "MENU" button twice to terminate the circuit adjustment mode.
Test Point	TP-62	
Exit Trigger		
Measurement range		
Input Signal	VIDEO (Color Bars)	
Input Terminal	VIDEO IN terminal	
PCB-PIP/APT (COMPONENT SIDE) 		

CHIP PARTS REPLACEMENT


Some resistors, shorting jumpers (0 Ohm resistors), ceramic capacitors, transistors and diodes are chip parts. The following precautions should be taken when replacing these parts.

CAUTIONS:

1. Use a fine tipped, well insulated soldering iron (approximately 30 watts), and tweezers.
2. Melt the solder and remove the chip parts carefully so as not to tear the copper foil from the printed circuit board.
3. Discard removed chips; do not reuse them.
4. Do not apply heat for more than 3 (three)seconds to new parts.
5. Avoid using a rubbing stroke when soldering.
6. Take care not to scratch, or damage the chip parts when soldering.
7. Supplementary cementing is not required


1. Removal of Chip Parts (Resistors, Capacitors, etc)

- A. Grasp the part with tweezers. Melt the solder at both sides alternately and remove one side of the part with a twisting motion.
- B. Melt the solder at the other side and remove the part.

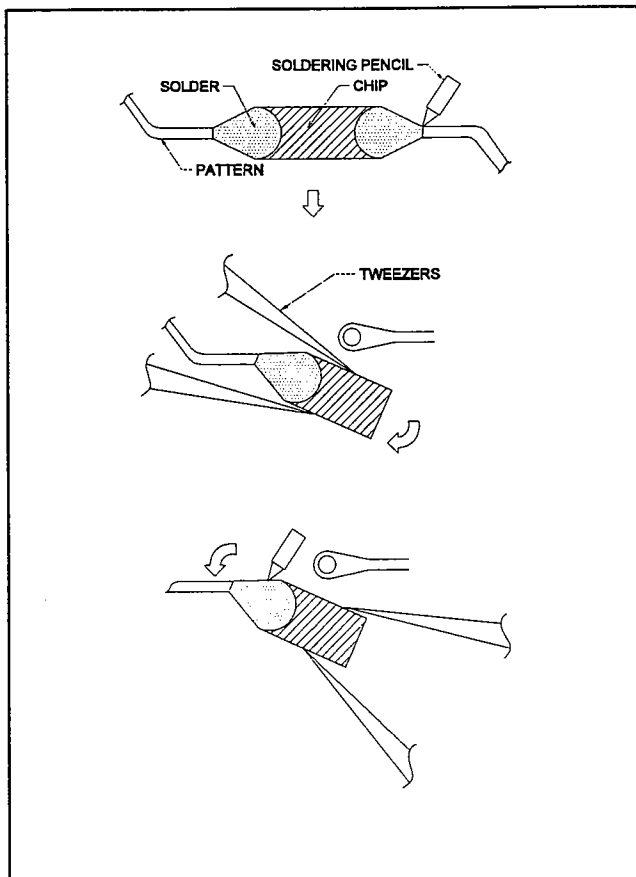


2. Removal of Chip Parts (Transistors)

- A. Melt the solder of one lead and lift the side of that lead upward.
- B. Simultaneously melt the solder of the other two leads and lift the part from the PCB.

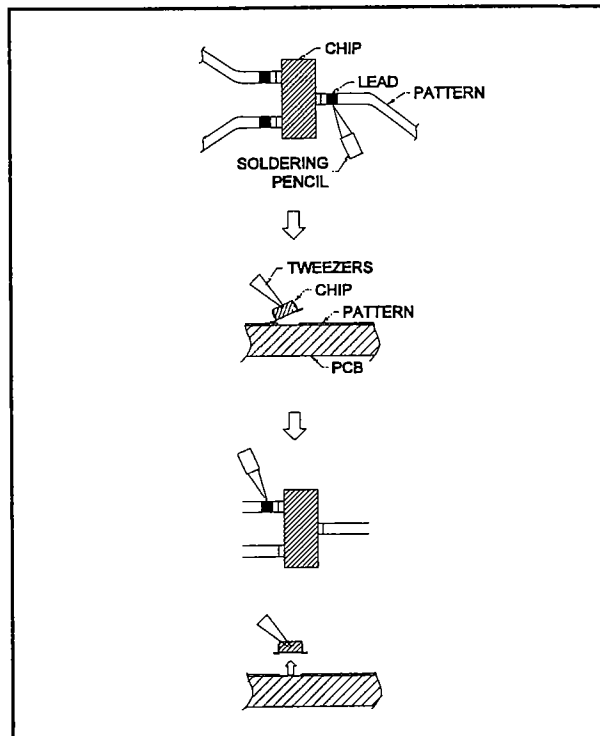

3. Replacement

- A. Presolder the contact points on the circuit pattern.
- B. Press the part downward with tweezers and apply the soldering iron as shown

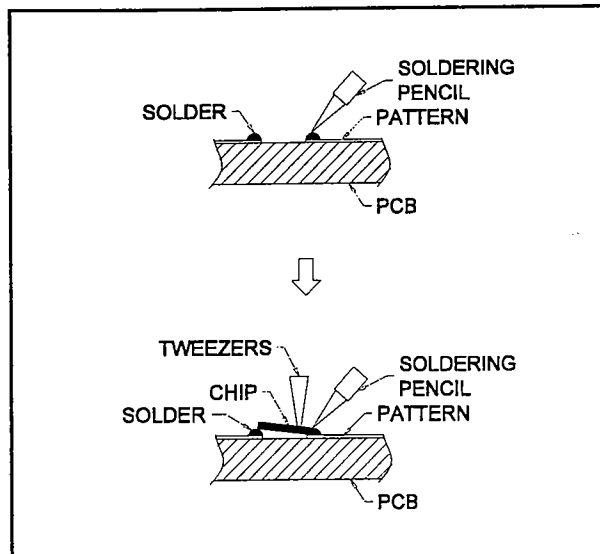

2. Electrical Parts and Others

A. Model : VS-45501/VS-45502/VS-45501A/VS-50501/VS-50502/VS-50501A

In order to expedite delivery of replacement parts orders, specify the following:

1. Model Number/Serial Number
2. Part Number and description
3. Quantity

Note: Unless complete information is supplied, delay in processing of orders will result.

B. Symbol

The electrical parts with shading are critical components, and the parts with * are warranty return items.

 : Critical Components

* : Warranty Items

MARK	B	C	D	F	G	J	K
Tolerance %	±0.1	±0.25	±0.5	±1	±2	±5	±10

MARK	M	N	V	X	Z	P	Q
Tolerance %	±20	±30	+10 -10	+40 -20	+80 -20	+100 -0	+30 -10

MARK	B	C	D	F	G
Tolerance (pF)	±0.1	±0.25	±0.5	±1	±2

C. Abbreviation

[45501]	VS-45501
[45502]	VS-45502
[45501A]	VS-45501A
[50501]	VS-50501
[50502]	VS-50502
[50501A]	VS-50501A

SYMBOL NO.	PARTS NO.	PARTS NAME	DESCRIPTION	SYMBOL NO.	PARTS NO.	PARTS NAME	DESCRIPTION
TUBES				IC903	266P932010	IC	AN7805
*	251C083010	ASSY-CRT	RED-MONOCHROME	TRANSISTORS			
			50501	Q 100	260P560040	TRANSISTOR	2SA933S-S
			50502	Q 101	260P560040	TRANSISTOR	2SA933S-S
*	251C083020	ASSY-CRT	GREEN-MONOCHROME	Q 102	260P560040	TRANSISTOR	2SA933S-S
			50501	Q 103	260P559030	TRANSISTOR	2SC1740S-S
			50502	Q 104	260P560040	TRANSISTOR	2SA933S-S
*	251C083030	ASSY-CRT	BLUE-MONOCHROME	Q 105	260P560040	TRANSISTOR	2SA933S-S
			50501	Q 106	260P560040	TRANSISTOR	2SA933S-S
			50502	Q 107	260P559030	TRANSISTOR	2SC1740S-S
*	251C091010	ASSY-CRT	RED-MONOCHROME	Q 109	260P559030	TRANSISTOR	2SC1740S-S
			50501A	Q 110	260P559030	TRANSISTOR	2SC1740S-S
*	251C091020	ASSY-CRT	GREEN-MONOCHROME	Q 2H04	260P559030	TRANSISTOR	2SC1740S-S
			50501A	Q 2H05	260P559030	TRANSISTOR	2SC1740S-S
*	251C091030	ASSY-CRT	BLUE-MONOCHROME	Q 2H06	260P559030	TRANSISTOR	2SC1740S-S
			50501A	Q 2H07	260P559030	TRANSISTOR	2SC1740S-S
*	251C083040	ASSY-CRT	RED-MONOCHROME	Q 2H08	260P559030	TRANSISTOR	2SC1740S-S
			45501	Q 2H09	260P559030	TRANSISTOR	2SC1740S-S
			45502	Q 2H10	260P560040	TRANSISTOR	2SA933S-S
*	251C083050	ASSY-CRT	GREEN-MONOCHROME	Q 2H11	260P560040	TRANSISTOR	2SA933S-S
			45501	Q 2H12	260P560040	TRANSISTOR	2SA933S-S
			45502	Q 2K0	260P559030	TRANSISTOR	2SC1740S-S
*	251C083060	ASSY-CRT	BLUE-MONOCHROME	Q 2030	260P559050	TRANSISTOR	2SC1740S-E
			45501	Q 2040	260P559050	TRANSISTOR	2SC1740S-E
			45502	Q 2050	260P559050	TRANSISTOR	2SC1740S-E
*	251C091040	ASSY-CRT	RED-MONOCHROME	Q 2051	260P559050	TRANSISTOR	2SC1740S-E
			45501A	Q 2052	260P559050	TRANSISTOR	2SC1740S-E
*	251C091050	ASSY-CRT	GREEN-MONOCHROME	Q 206	260P559030	TRANSISTOR	2SC1740S-S
			45501A	Q 208	260P559030	TRANSISTOR	2SC1740S-S
*	251C091060	ASSY-CRT	BLUE-MONOCHROME	Q 209	260P559030	TRANSISTOR	2SC1740S-S
			45501A	Q 210	260P560040	TRANSISTOR	2SA933S-S
INTEGRATED CIRCUITS				Q 211	260P559030	TRANSISTOR	2SC1740S-S
IC200	270P347030	IC	CXA2095S	Q 212	260P559030	TRANSISTOR	2SC1740S-S
IC2001	274P596020	IC	T90A13N	Q 213	260P559030	TRANSISTOR	2SC1740S-S
IC2002	272P658010	IC	MM1031XS	Q 214	260P559030	TRANSISTOR	2SC1740S-S
IC203	270P210010	IC	AN7809F	Q 215	260P559030	TRANSISTOR	2SC1740S-S
IC204	270P204010	IC	PA0057A	Q 216	260P560040	TRANSISTOR	2SA933S-S
IC3A1	272P440010	IC	LA4282	Q 217	260P559030	TRANSISTOR	2SC1740S-S
IC3E1	270P467010	IC	TDA9855	Q 220	260P385020	TRANSISTOR	2SC2229-Y
IC401	270P064020	IC	LA7845	Q 221	260P385020	TRANSISTOR	2SC2229-Y
IC5A00	272P106030	IC	UPC4570HA	Q 222	260P385020	TRANSISTOR	2SC2229-Y
IC5A01	266P154010	IC	UPC393C	Q 224	260P560040	TRANSISTOR	2SA933S-S
IC700	274P762090	IC-MOS	M37270EFSP	Q 225	260P559030	TRANSISTOR	2SC1740S-S
IC7001	275P039020	IC	M65617SP-A	Q 3A1	260P559030	TRANSISTOR	2SC1740S-S
IC7002	272P761010	IC	MM1041XS	Q 3A2	260P559030	TRANSISTOR	2SC1740S-S
IC7003	272P658010	IC	MM1031XS	Q 3A3	260P559030	TRANSISTOR	2SC1740S-S
IC7004	270P465010	IC	NJM317	Q 3A4	260P560040	TRANSISTOR	2SA933S-S
IC701	274P333010	IC-MOS	24C04A*P	Q 3E01	260P559030	TRANSISTOR	2SC1740S-S
IC702	266P130030	IC	PST520E	Q 3E02	260P603010	TRANSISTOR	UN4112 /2
IC703	275P040090	IC	M38123E6SP	Q 3E03	260P632010	TRANSISTOR	DTC124ES
IC705	263P265010	IC	HD74HC32P	Q 3E04	260P559030	TRANSISTOR	2SC1740S-S
IC706	274P333010	IC-MOS	24C04A*P	Q 5A00	260P797020	TRANSISTOR	2SD2349
IC7601	270P321020	IC	CXA1855S	Q 5A01	260P422010	TRANSISTOR	2SC2482
IC8C00	266P154010	IC	UPC393C	Q 5A02	260P797020	TRANSISTOR	2SD2349
IC8D00	270P202010	IC	CM0001AS	Q 5A03	260P559050	TRANSISTOR	2SC1740S-E
IC8E00	270P202010	IC	CM0001AS	Q 5A04	260P559050	TRANSISTOR	2SC1740S-E
IC8F00	272P106020	IC	UPC4574C	Q 5A05	260P559030	TRANSISTOR	2SC1740S-S
IC8G00	270P357010	IC	PM0002B	Q 5A06	260P560040	TRANSISTOR	2SA933S-S
IC8W00	267P077020	HIC	STK391-020	Q 5A07	260P422010	TRANSISTOR	2SC2482
IC8W01	267P077020	HIC	STK391-020				
IC8W02	267P077020	HIC	STK391-020				
IC800	270P203020	IC	M52336ASP				
IC870	274P713010	IC-MOS	CD0006BD				
IC9A00	270P466020	IC	KIA7809PI				
IC9A01	270P466010	IC	KIA7805PI				
IC9A02	270P466030	IC	KIA7812PI				
IC9A12	270P466010	IC	KIA7805PI				
IC900	267P129010	HIC	STR-M6811				
IC901	267P126010	HIC	SE130N				
IC902	272P240010	IC	M5237L				

MODEL: VS-45501/V5-45502/V5-45501A/V5-50501/V5-50502/V5-50501A

SYMBOL NO.	PARTS NO.	PARTS NAME	DESCRIPTION	SYMBOL NO.	PARTS NO.	PARTS NAME	DESCRIPTION
Q 5A08	260P420020	TRANSISTOR	2SC2073-B,C	Q 800	260P559030	TRANSISTOR	2SC1740S-S
Q 5H03	260P559050	TRANSISTOR	2SC1740S-E	Q 9A00	260P646010	TRANSISTOR	2SC1845-F,E
Q 5H04	260P559050	TRANSISTOR	2SC1740S-E	Q 900	260P559050	TRANSISTOR	2SC1740S-E
Q 5H05	260P559050	TRANSISTOR	2SC1740S-E	Q 904	260P652010	TRANSISTOR	2SA1725
Q 5H06	260P559050	TRANSISTOR	2SC1740S-E				
Q 5H07	260P559050	TRANSISTOR	2SC1740S-E			DIODES	
Q 5H08	260P559050	TRANSISTOR	2SC1740S-E	D 100	264P502010	DIODE	HZ5ALL
Q 5H09	260P559050	TRANSISTOR	2SC1740S-E	D 101	264P502010	DIODE	HZ5ALL
Q 5H10	260P560040	TRANSISTOR	2SA933S-S	D 102	264P488020	DIODE	RD13FB1
Q 5H11	260P573020	TRANSISTOR	2SB940A-P	D 104	264P470040	DIODE	RD33EB1/2
Q 5H12	260P574020	TRANSISTOR	2SD1264A-P	D 2H00	264P045040	DIODE	1S24710M
Q 5H13	260P559050	TRANSISTOR	2SC1740S-E	D 210	264P486050	DIODE	RD9.1FB2
Q 5H14	260P559030	TRANSISTOR	2SC1740S-S	D 211	264P045040	DIODE	1S24710M
Q 5K00	260P664030	TRANSISTOR	2SC4636	D 216	264P483070	DIODE	RD5.1FB1
Q 5K01	260P664030	TRANSISTOR	2SC4636	D 217	264P502020	DIODE	HZ5BLL
Q 5K02	260P559050	TRANSISTOR	2SC1740S-E	D 218	264P045040	DIODE	1S24710M
Q 5K03	260P560040	TRANSISTOR	2SA933S-S	D 219	264P045040	DIODE	1S24710M
Q 5K04	260P559050	TRANSISTOR	2SC1740S-E	D 220	264P483080	DIODE	RD5.1FB2
Q 6B0	261P004010	TRANSISTOR	2SC3271F-N,P	D 221	264P045040	DIODE	1S24710M
Q 6B1	260P469030	TRANSISTOR	2SA1321	D 222	264P045040	DIODE	1S24710M
Q 6B2	260P307020	TRANSISTOR	2SC3334	D 223	264P045040	DIODE	1S24710M
Q 6G0	261P004010	TRANSISTOR	2SC3271F-N,P	D 224	264P045040	DIODE	1S24710M
Q 6G1	260P469030	TRANSISTOR	2SA1321	D 225	264P045040	DIODE	1S24710M
Q 6G2	260P307020	TRANSISTOR	2SC3334	D 226	264P045040	DIODE	1S24710M
Q 6G5	260P560040	TRANSISTOR	2SA933S-S	D 226	264P501050	DIODE	HZ3BLL
Q 6R0	261P004010	TRANSISTOR	2SC3271F-N,P	D 227	264P502030	DIODE	HZ5CLL
Q 6R1	260P469030	TRANSISTOR	2SA1321	D 228	264P045040	DIODE	1S24710M
Q 6R2	260P307020	TRANSISTOR	2SC3334	D 229	264P045040	DIODE	1S24710M
Q 7A00	260P559030	TRANSISTOR	2SC1740S-S	D 230	264P045040	DIODE	1S24710M
Q 7A01	260P560040	TRANSISTOR	2SA933S-S	D 3A3	264P501040	DIODE	HZ3ALL
Q 7C00	260P559030	TRANSISTOR	2SC1740S-S	D 3A4	264P045040	DIODE	1S24710M
Q 7C10	260P559030	TRANSISTOR	2SC1740S-S	D 3A5	264P045040	DIODE	1S24710M
Q 7000	260P559030	TRANSISTOR	2SC1740S-S	D 3A6	264P045040	DIODE	1S24710M
Q 7006	260P559030	TRANSISTOR	2SC1740S-S	D 3A7	264P045040	DIODE	1S24710M
Q 7007	260P559030	TRANSISTOR	2SC1740S-S	D 3E00	264P045040	DIODE	1S24710M
Q 7008	260P559030	TRANSISTOR	2SC1740S-S	D 401	264D056020	DIODE	ERB12-02RK/3
Q 701	260P559030	TRANSISTOR	2SC1740S-S	D 402	264D056020	DIODE	ERB12-02RK/3
Q 7011	260P559030	TRANSISTOR	2SC1740S-S	D 403	264D056020	DIODE	ERB12-02RK/3
Q 7013	260P559030	TRANSISTOR	2SC1740S-S	D 5A00	264P045040	DIODE	1S24710M
Q 7014	260P559030	TRANSISTOR	2SC1740S-S	D 5A02	264P045040	DIODE	1S24710M
Q 7016	260P559030	TRANSISTOR	2SC1740S-S	D 5A03	264P045040	DIODE	1S24710M
Q 7017	260P560040	TRANSISTOR	2SA933S-S	D 5A04	264P045040	DIODE	1S24710M
Q 7018	260P560040	TRANSISTOR	2SA933S-S	D 5A06	264P045040	DIODE	1S24710M
Q 7019	260P559030	TRANSISTOR	2SC1740S-S	D 5A07	264P045040	DIODE	1S24710M
Q 703	260P560040	TRANSISTOR	2SA933S-S	D 5A09	264P244030	DIODE	HZT22-02
Q 704	260P559030	TRANSISTOR	2SC1740S-S	D 5A11	264P045040	DIODE	1S24710M
Q 705	260P560040	TRANSISTOR	2SA933S-S	D 5A20	264P469070	DIODE	RD27EB4/2
Q 706	260P559030	TRANSISTOR	2SC1740S-S	D 5A21	264P045040	DIODE	1S24710M
Q 708	260P559030	TRANSISTOR	2SC1740S-S	D 5A22	264P045040	DIODE	1S24710M
Q 709	260P560040	TRANSISTOR	2SA933S-S	D 5A23	264P045040	DIODE	1S24710M
Q 710	260P560040	TRANSISTOR	2SA933S-S	D 5H00	264P045040	DIODE	1S24710M
Q 711	260P560040	TRANSISTOR	2SA933S-S	D 5H01	264P045040	DIODE	1S24710M
Q 712	260P559030	TRANSISTOR	2SC1740S-S	D 5H02	264P045040	DIODE	1S24710M
Q 713	260P560040	TRANSISTOR	2SA933S-S	D 5H03	264D056020	DIODE	ERB12-02RK/3
Q 714	260P559030	TRANSISTOR	2SC1740S-S	D 5H04	264D056020	DIODE	ERB12-02RK/3
Q 7601	260P559030	TRANSISTOR	2SC1740S-S	D 5H09	264P045040	DIODE	1S24710M
Q 7602	260P559030	TRANSISTOR	2SC1740S-S	D 5K01	264P528030	DIODE	RP 1H
Q 7603	260P560040	TRANSISTOR	2SA933S-S	D 5K02	264P543010	DIODE	EG01
Q 7670	260P559030	TRANSISTOR	2SC1740S-S	D 5K03	264P543010	DIODE	EG01
Q 7671	260P559030	TRANSISTOR	2SC1740S-S	D 5K10	264P528030	DIODE	RP 1H
Q 8F00	260P559030	TRANSISTOR	2SC1740S-S				

MODEL: VS-45501/VS-45502/VS-45501A/VS-50501/VS-50502/VS-50501A

SYMBOL NO.	PARTS NO.	PARTS NAME	DESCRIPTION	SYMBOL NO.	PARTS NO.	PARTS NAME	DESCRIPTION
D 6B0	264P045040	DIODE	1S24710M	D 910	264P722010	DIODE	SF64
D 6B3	264P045040	DIODE	1S24710M	D 912	264P724010	DIODE	STF14
D 6G0	264P045040	DIODE	1S24710M	D 913	264P722010	DIODE	SF64
D 6G3	264P045040	DIODE	1S24710M	D 914	264P718010	DIODE	FR155
D 6R0	264P045040	DIODE	1S24710M				
D 6R3	264P045040	DIODE	1S24710M			FILTERS	
D 600	264P457080	DIODE	RD3.3EB1				
D 7A00	264P212020	LED	LN31GPH	CF200	299P128010	CERAMIC-OSC	CSB500F2
D 7001	264P045040	DIODE	1S24710M			DELAY LINES	
D 7002	264P045040	DIODE	1S24710M				
D 701	264P486020	DIODE	RD8.2FB3	DL201	337P134010	DELAY-LINE	SDL-4256
D 702	264P483070	DIODE	RD5.1FB1	DL5H01	337P147020	DELAY-LINE	
D 703	264P483070	DIODE	RD5.1FB1	DL5H02	337P147020	DELAY-LINE	
D 704	264P483070	DIODE	RD5.1FB1			COILS	
D 706	264P483070	DIODE	RD5.1FB1				
D 707	264P483070	DIODE	RD5.1FB1				
D 708	264P483070	DIODE	RD5.1FB1			330P209040	DEFLECTION YOKE VZ4-7-90
D 709	264P483070	DIODE	RD5.1FB1			338P046010	CPM-ASSY DBV4001M
D 715	264P045040	DIODE	1S24710M	L 100	325C111030	COIL-PEAKING	10MH-K
D 716	264P045040	DIODE	1S24710M	L 101	325C111030	COIL-PEAKING	10MH-K
D 717	264P045040	DIODE	1S24710M	L 102	325C111030	COIL-PEAKING	10MH-K
D 718	264P483070	DIODE	RD5.1FB1	L 103	325C111030	COIL-PEAKING	10MH-K
D 719	264D056020	DIODE	ERB12-02RK/3	L 103	325C111030	COIL-PEAKING	10MH-K
D 720	264P483070	DIODE	RD5.1FB1	L 104	325C111030	COIL-PEAKING	10MH-K
D 721	264P483070	DIODE	RD5.1FB1	L 105	325C168070	COIL-PEAKING	1000MH-J
D 722	264P483070	DIODE	RD5.1FB1	L 106	325C111030	COIL-PEAKING	10MH-K
D 723	264P483070	DIODE	RD5.1FB1	L 107	325C111030	COIL-PEAKING	10MH-K
D 724	264P483070	DIODE	RD5.1FB1	L 108	325C111030	COIL-PEAKING	10MH-K
D 725	264P483070	DIODE	RD5.1FB1	L 109	325C121030	COIL-PEAKING	10MH-K
D 727	264P483070	DIODE	RD5.1FB1	L 110	325C111030	COIL-PEAKING	10MH-K
D 728	264P045040	DIODE	1S24710M	L 111	325C168070	COIL-PEAKING	1000MH-J
D 729	264D056020	DIODE	ERB12-02RK/3	L 112	325C111030	COIL-PEAKING	10MH-K
D 730	264P045040	DIODE	1S24710M	L 201	325C121030	COIL-PEAKING	10MH-K
D 731	264P045040	DIODE	1S24710M	L 2010	325C121030	COIL-PEAKING	10MH-K
D 7601	264P485060	DIODE	RD7.5FB2	L 2011	325C121030	COIL-PEAKING	10MH-K
D 7602	264P485060	DIODE	RD7.5FB2	L 2012	325C121030	COIL-PEAKING	10MH-K
D 7603	264P485060	DIODE	RD7.5FB2	L 2031	325C121080	COIL-PEAKING	27MH-K
D 7604	264P486060	DIODE	RD9.1FB3	L 2040	325C121080	COIL-PEAKING	27MH-K
D 7605	264P486060	DIODE	RD9.1FB3	L 2050	325C121080	COIL-PEAKING	27MH-K
D 7606	264P045040	DIODE	1S24710M	L 2069	325C121030	COIL-PEAKING	10MH-K
D 7607	264P045040	DIODE	1S24710M	L 211	325C122050	COIL-PEAKING	100MH-K
D 7608	264P486060	DIODE	RD9.1FB3	L 212	325C121030	COIL-PEAKING	10MH-K
D 7609	264P486060	DIODE	RD9.1FB3	L 214	325C166070	COIL-PEAKING	22MH-J
D 8C01	264P045040	DIODE	1S24710M	L 215	325C121090	COIL-PEAKING	33MH-K
D 8C02	264P425010	DIODE	ISS88	L 3F01	325C111030	COIL-PEAKING	10MH-K
D 800	264P483080	DIODE	RD5.1FB2	L 401	321C130010	COIL-RF	2.0MH +-15%
D 9A00	264P718020	DIODE	FR156	L 411	325C401030	COIL-PEAKING	10MH-J
D 9A01	264P720010	DIODE	KBP202G	L 412	411P001010	LEAD-FERRITE	
D 9A02	264P470080	DIODE	EQA02-32C/2	L 5A00	351P156020	COIL-CHOKE	YT-4361-1 2.4
D 9A03	264P045040	DIODE	1S24710M	L 5A01	351P156010	COIL-CHOKE	YT-4360-1 3.1
D 9A04	264P045040	DIODE	1S24710M	L 5A02	333P040060	COIL-HORIZ-LINEARITY	
D 9A05	264P045040	DIODE	1S24710M	L 5A03	411P001010	LEAD-FERRITE	
D 9A06	264P825010	DIODE	ERA15-02	L 5A04	411P001010	LEAD-FERRITE	
D 900	264P721010	DIODE	TS6B06G	L 5A05	321C030070	COIL-RF	3.3MH-K
D 901	264P487080	DIODE	RD12FB2	L 5A06	411P001010	LEAD-FERRITE	
D 903	264P522010	DIODE	RU 1P	L 5H00	411D009020	CORE-FERRITE	
D 904	264P724010	DIODE	STF14	L 5K00	411P001040	LEAD-FERRITE	
D 906	264P578010	DIODE	RG 2A	L 6B0	325C402020	COIL-PEAKING	56MH-J
D 907	264P588010	DIODE	FML-G16S	L 6B1	325C402020	COIL-PEAKING	56MH-J
D 908	264P722010	DIODE	SF64	L 6G0	325C402020	COIL-PEAKING	56MH-J
D 909	264P719010	DIODE	FR302	L 6G1	325C402020	COIL-PEAKING	56MH-J


MODEL: VS-45501/VS-45502/VS-45501A/VS-50501/VS-50502/VS-50501A

SYMBOL NO.	PARTS NO.	PARTS NAME	DESCRIPTION	SYMBOL NO.	PARTS NO.	PARTS NAME	DESCRIPTION
L 6R0	325C402020	COIL-PEAKING	56MH-J	T 5A01	336P031010	COIL-HORIZ-DRIVE	
L 6R1	325C402020	COIL-PEAKING	56MH-J	T 5A02	336P031010	COIL-HORIZ-DRIVE	
L 7000	325C110050	COIL-PEAKING	2.2MH-K	TRANSFORMERS			
L 7001	325C110030	COIL-PEAKING	1.5MH-K	T 5A00	349P122080	TRANS-SIDE-PCC	
L 7002	325C121030	COIL-PEAKING	10MH-K	T 5A03	334P246060	TRANS-FLYBACK	
L 7003	325C121030	COIL-PEAKING	10MH-K	T 9A00	350P704010	TRANS-POWER	PEY48-25
L 7004	325C121030	COIL-PEAKING	10MH-K	T 900	350P703010	TRANS-POWER	EE-42
L 7006	325C121030	COIL-PEAKING	10MH-K	T 901	350P405050	TRANS-POWER	
L 7007	325C121030	COIL-PEAKING	10MH-K	VARIABLE RESISTORS			
L 7008	325C121030	COIL-PEAKING	10MH-K	RV900	265P100010	VARISTOR	ERZV10D271 /2
L 701	325C121030	COIL-PEAKING	10MH-K		129P059030	VR-FOCUS	MHF116-50
L 702	325C121030	COIL-PEAKING	10MH-K	RESISTORS			
L 703	325C121030	COIL-PEAKING	10MH-K	R 106	103P331080	R-C	1/4W 270OHM -J
L 704	325C121030	COIL-PEAKING	10MH-K	R 3B8	103P378040	R-FUSE	1/4W 2.2 OHM -J
L 705	325C121030	COIL-PEAKING	10MH-K	R 3B9	103P378040	R-FUSE	1/4W 2.2 OHM -J
L 706	325C121030	COIL-PEAKING	10MH-K	R5A-01	103C190010	R-M	3W 10 OHM -J
L 707	325C165070	COIL-PEAKING	3.3MH-J	R5A02	103P712051	R-C	1/4W 1K
L 708	325C401000	COIL-PEAKING	5.6MH-J	R5A03	103P712081	R-C	1/4W 1.8K-J
L 709	325C121030	COIL-PEAKING	10MH-K	R5A04	103C190090	R-M	3W 47 OHM -J
L 710	325C165070	COIL-PEAKING	3.3MH-J	R5A05	103C190070	R-M	3W 33 OHM -J
L 711	325C166030	COIL-PEAKING	10MH-J	R5A07	103P712PO51	R-C	1/4W 1K -J
L 714	321C114070	COIL-RF	6800MH-J	R5A08	103P714041	R-C	1/4W 39K -J
L 715	325C121030	COIL-PEAKING	10MH-K	R5A09	103P712051	R-C	1/4W 1K -J
L 716	325C121030	COIL-PEAKING	10MH-K	R 5A10	109D074020	R-CE-M	5W 6.8K-K/J
L 7601	325C166030	COIL-PEAKING	10MH-J	R5A11	10P463031	R-M	1/4W 2.2K - F
L 7602	325C166030	COIL-PEAKING	10MH-J	R5A13	103P712071	R-C	1/4W 1.5K -J
L 77A1	325C121030	COIL-PEAKING	10MH-K	R5A17	103P713051	R-C	1/4W 6.8K -J
L 8D01	321C031040	COIL-RF	10MH-K	R5A18	103P713061	R-C	1/4W 8.2K -J
L 8E01	321C031040	COIL-RF	10MH-K	R5A19	103P713071	R-C	1/4W 10K -J
L 8F01	321C031040	COIL-RF	10MH-K	R5A28	103P463041	R-M	1/4W 2.4K - F
L 8F02	321C031040	COIL-RF	10MH-K	R5A29	103P460091	R-M	1/4W 220 OHM - F
L 8W01	321C031040	COIL-RF	10MH-K	R5A30	103P463081	R-M	1/4W 3.6K - F
L 8W02	321C031040	COIL-RF	10MH-K	R5A40	101P101E31	R-COMP	1/4W 100 OHM - K
L 8W03	321C031040	COIL-RF	10MH-K	R5A45	103C391050	R-M-P	3W 150 OHM - J
L 8W04	321C031040	COIL-RF	10MH-K	R 5A47	109D074020	R-CE-M	5W 6.8K-K/J
L 8W05	321C031040	COIL-RF	10MH-K	R 5A50	103P438040	R-FUSE-M	2W 2.2 OHM-K/J
L 8W06	321C031040	COIL-RF	10MH-K	R5A60	103P463021	R-M	1/4W 2K - F
L 800	321C031040	COIL-RF	10MH-K	R5A71	103P714041	R-M	1/4W 39K -J
L 802	321C031040	COIL-RF	10MH-K	R5A75	103P465031	R-M	1/4W 15K - F
L 803	321C031040	COIL-RF	10MH-K	R5A76	103P464091	R-M	1/4W 10K - F
L 900	351P139010	LINE-FILTER	SS35V-30082	R5A81	103P463061	R-M	1/4W 3K - F
L 902	351P155010	COIL	YT-4388-1	R5A82	103P463041	R-M	1/4W 2.4K - F
L 903	351P155010	COIL	YT-4388-1	R 5H02	103P378000	R-FUSE	1/4W 1.0 OHM -J
L 904	351P155010	COIL	YT-4388-1	R 5K09	103P392020	R-FUSE	1/2W 560 OHM -J
L 905	351P155010	COIL	YT-4388-1	R 5K12	103P390060	R-FUSE	1/2W 27 OHM -J
L 907	321C142030	COIL-RF	68MH-K 9X9.5	R 5K34	103P390060	R-FUSE	1/2W 27 OHM -J
L 908	321C142030	COIL-RF	68MH-K 9X9.5	R 901	109D077080	R-CE-W	15W 0.56-K
L 909	411P001010	LEAD-FERRITE		R 902	109D077080	R-CE-W	15W 0.56-K
L 910	411P001010	LEAD-FERRITE		R 909	102P107030	R-WIRE	2W 0.27-K
L 911	411P001010	LEAD-FERRITE		R 910	102P106080	R-WIRE	2W 0.1-J
L 912	411P001060	LEAD-FERRITE		R 918	109D094030	R-CE-M	7W 22K-K
L 913	411D009020	CORE-FERRITE		R 922	103P398090	R-FUSE	1/2W 5.6 OHM -J
L 914	411D009020	CORE-FERRITE					
L 925	411D009020	CORE-FERRITE					
LC2091	409P402030	EMI-FILTER	FZ103N100				
LC2092	409P402030	EMI-FILTER	FZ103N100				
LC701	409P402010	EMI-FILTER	B101M100				
LC702	409P402010	EMI-FILTER	B101M100				
LC703	409P402010	EMI-FILTER	B101M100				
LC704	409P402010	EMI-FILTER	B101M100				

SYMBOL NO.	PARTS NO.	PARTS NAME	DESCRIPTION	SYMBOL NO.	PARTS NO.	PARTS NAME	DESCRIPTION
R 927	109D036030	R-COMP	1/2W 1.0M-K		449C134010	SOCKET-CRT	
R 928	109D036030	R-COMP	1/2W 1.0M-K		480P039010	SPEAKER	A(102-118)FL-1
R 931	109D021070	R-SOLID	1/2W 1.5M-K		AG5K00	224D019040	AIR-GAP 2KV
CAPACITORS AND TRIMMERS					AG900	224D019040	AIR-GAP 2KV
C 408	189P071050	C-M-PP	200V 0.33MF-J		F 900	283D060020	FUSE-UL S5A
C 5A04	172P172070	C-M-PP	1600V 4300PF-J		F 901	283D038070	FUSE-UL S4A
C5A00	172P081080	C-P-PP	200V 0.033MF-K		F 902	283D038070	FUSE-UL S4A
C 5A05	172P172070	C-M-PP	1600V 4300PF-J		K 900	287P049070	RELAY-POWER DJ12D1-0(M)
C5A12	172P330071	C-P	50V 3300PF-J		PC900	268P033010	PHOTO-COUPLER ON3161-R
C 5A13	172P170090	C-M-PP	1600V 4700PF-J		PJ701	451C129010	JACK-MICROPHONE
C 5A14	172P170090	C-M-PP	1600V 4700PF-J		PJ7601	440C323010	PIN JACK BOARD 3PIN
C 5A16	189P081060	C-M-PP	200V 0.15MF-J		PJ7602	440C186020	JACK-BOARD PINX6 & SX2
C 5A17	189P081060	C-M-PP	200V 0.15MF-J		PJ79A0	440C231010	JACK-BOARD PINX3 & SX1
C 5A27	189P071080	C-M-PP	200V 0.47MF-J		PT7A00	264P723010	LED SFH310-3
C5A32	72P262051	C-M-P	50V 0.1MF-J		TU101	295P420030	TUNER ENG26104G
C 5A35	154P264060	C-C	3.15KV 470P-K		TU102	295P420030	TUNER ENG26104G
C 5K00	172P171060	C-M-PP	1600V 0.018MF-J		X 200	285P066010	QUARTZ-CRYSTAL 3.5795MHZ
C 5K01	172P171060	C-M-PP	1600V 0.018MF-J		X 3E1	299P208010	CERAMIC-OSC C5B503F58
C 900	189P153040	C-M-P-AC	AC250V 0.1MF-M		X 7000	285P069020	QUARTZ-CRYSTAL HC-49/U
C 901	189P067060	C-C-AC	B VA1 1000PF-M		X 701	285P039020	QUARTZ-CRYSTAL 8.00MHZ
C 902	189P067060	C-C-AC	B VA1 1000PF-M		X 702	285P326010	QUARTZ-CRYSTAL 6.30MHZ
C 903	189P134080	C-C-AC	F VA1 2200PF-M		Z 7706	939P296060	UNIT-PREAMP HC-437ME
C 904	189P134080	C-C-AC	F VA1 2200PF-M		Z 900	283P039020	FUSE SSFR 6.3A
C 905	189P134080	C-C-AC	F VA1 2200PF-M		Z 901	283P039020	FUSE SSFR 6.3A
C 906	189P134080	C-C-AC	F VA1 2200PF-M		Z 902	283P030090	FUSE SSFR 4A
C 907	185D063030	C-ELE	H180V 820MF-M 105C		Z 903	283P039020	FUSE SSFR 6.3A
C 908	185D063030	C-ELE	H180V 820MF-M 105C		Z 905	283P030060	FUSE SSFR 2A
C 917	185D063020	C-ELE	H180V 470MF-M 105C		PRINTED CIRCUIT BOARDS		
C 920	185D062050	C-ELE	H50V 4700MF-M		*	935D326001	ASSY-PWB-AV
C 928	185D062050	C-ELE	H50V 4700MF-M		*	935D317001	ASSY-PWB-CONTROL
C 931	189P153040	C-M-P-AC	AC250V 0.1MF-M		*	935C747001	ASSY-PWB-CONV 50501
C 938	189P152050	C-M-P-AC	AC125V 4700PF-M		*	935C747002	ASSY-PWB-CONV 45501
C 944	189P152050	C-M-P-AC	AC125V 4700PF-M		*	935C750001	ASSY-PWB-CRT
C 952	189P134080	C-C-AC	F VA1 2200PF-M		*	935D323001	ASSY-PWB-DBF 50501
C 953	189P134080	C-C-AC	F VA1 2200PF-M		*	935D323002	ASSY-PWB-DBF 45501
VC7000	202P109010	C-TRIMMER	3PF-10PF		*	935D321001	ASSY-PWB-FRONT
SWITCHES					*	935C745001	ASSY-PWB-MAIN 50501
S 7A00	432P100010	SW-KEY-BOARD	1-1 H=4.3		*	935C745002	ASSY-PWB-MAIN 45501
S 7A01	432P100010	SW-KEY-BOARD	1-1 H=4.3		*	935D314001	ASSY-PWB-PIP/APT
S 7A02	432P100010	SW-KEY-BOARD	1-1 H=4.3		*	935D316001	ASSY-PWB-PREAMP
S 7A03	432P100010	SW-KEY-BOARD	1-1 H=4.3		*	935C746001	ASSY-PWB-SIGNAL
S 7A04	432P100010	SW-KEY-BOARD	1-1 H=4.3		*	935C746006	ASSY-PWB-SIGNAL 45501A
S 7A05	432P100010	SW-KEY-BOARD	1-1 H=4.3		*	935D354001	ASSY-PWB-SVM
S 7A06	432P100010	SW-KEY-BOARD	1-1 H=4.3		MECHANICAL PARTS		
S 7A07	432P100010	SW-KEY-BOARD	1-1 H=4.3			669D212010	SCREW-TB-BIND 3X12 *10
S 7A08	432P100010	SW-KEY-BOARD	1-1 H=4.3			669D220030	SCREW-TB 3X10 46LA005 *10
TU 103	295P421020	2RF-SW	ENPE624			669D220060	SCREW-TB 3X16 46LA005 *10
MISCELLANEOUS						669D221040	SCREW-TB 4X12 46LA005 *10
	453B027010	CAP-ANODE					
	453B027020	CAP-ANODE					
	767D048030	MIRROR	VS-50501				
	767C048040	MIRROR	VS-45501				

SYMBOL NO.	PARTS NO.	PARTS NAME	DESCRIPTION	SYMBOL NO.	PARTS NO.	PARTS NAME	DESCRIPTION
COSMETIC PARTS				PACKING PARTS AND ACCESSORIES			
246C160020		AC-POWER-CORD		1	802B620010	PACKING CASE	45501
740A365010		CABINET	50501	1	802B620030	PACKING CASE	50501
740A383010		CABINET	45501	2	829D176020	PACKING SHEET	45501/50501
701B360020		FRAME-SCREEN	50501	3	802B610010	PACKING CASE	45501
701B363020		FRAME-SCREEN S	50501	3	802B610030	PACKING CASE	50501
701B360010		FRAME-SCREEN	45501	4	831C060040	PACKING-BAG	45501/50501
701B363010		FRAME-SCREEN S	45501	5	829D126090	PACKING-SHEET	45501/50501
622C53010		HOLDER-SCREEN	50501	6	802B630010	PACKING TRAY	45501
622D539050		CUSHION	50501	6	802B630030	PACKING TRAY	50501
622D673010		CUSHION	50501	7	831D191030	PACKING-BAG	45501/50501
700C245060		BACK BOARD	50501	8	871D223010	IB	50501
622C053020		HOLDER-SCREEN	45501	9	242D266040	CABLE	PLUG-PLUG (3.5)
622D539020		CUSHION	45501	10	290P080020	REMOTE HAND UNIT	50501
622D673020		CUSHION	45501				
700C245080		BACK BOARD	45501				
700C240090		BACK BOARD	45501A				
641D173010		CLIP	AC-PWR-CORD				
761C273010		DOOR-CATCH	45501/50501				
703B024010		DOOR	50501				
720C188010		COVER-FRONT	50501				
702A375020		PANEL-CONTROL	50501				
702A375010		PANEL-CONTROL	45501				
761A102030		GRILLE-SPEAKER	50501				
761A148010		GRILLE-SPEAKER	45501				
490P138010		LENS UNIT	45501/50501				
490P138020		LENS UNIT	45501/50501				
490P138030		LENS UNIT	45501/50501				
490P154010		LENS UNIT	45501/50501				
491P031070		SCREEN-LENTICULAR	50501				
491P043080		LENS-FRESNEL	50501				
491P035050		SCREEN-LENTICULAR	45501				
491P044080		LENS-FRESNEL	45501				
702A377010		SCREEN CAP	45501/50501				
702A377020		SCREEN CAP	45501/50501				


PACKAGING ITEMS

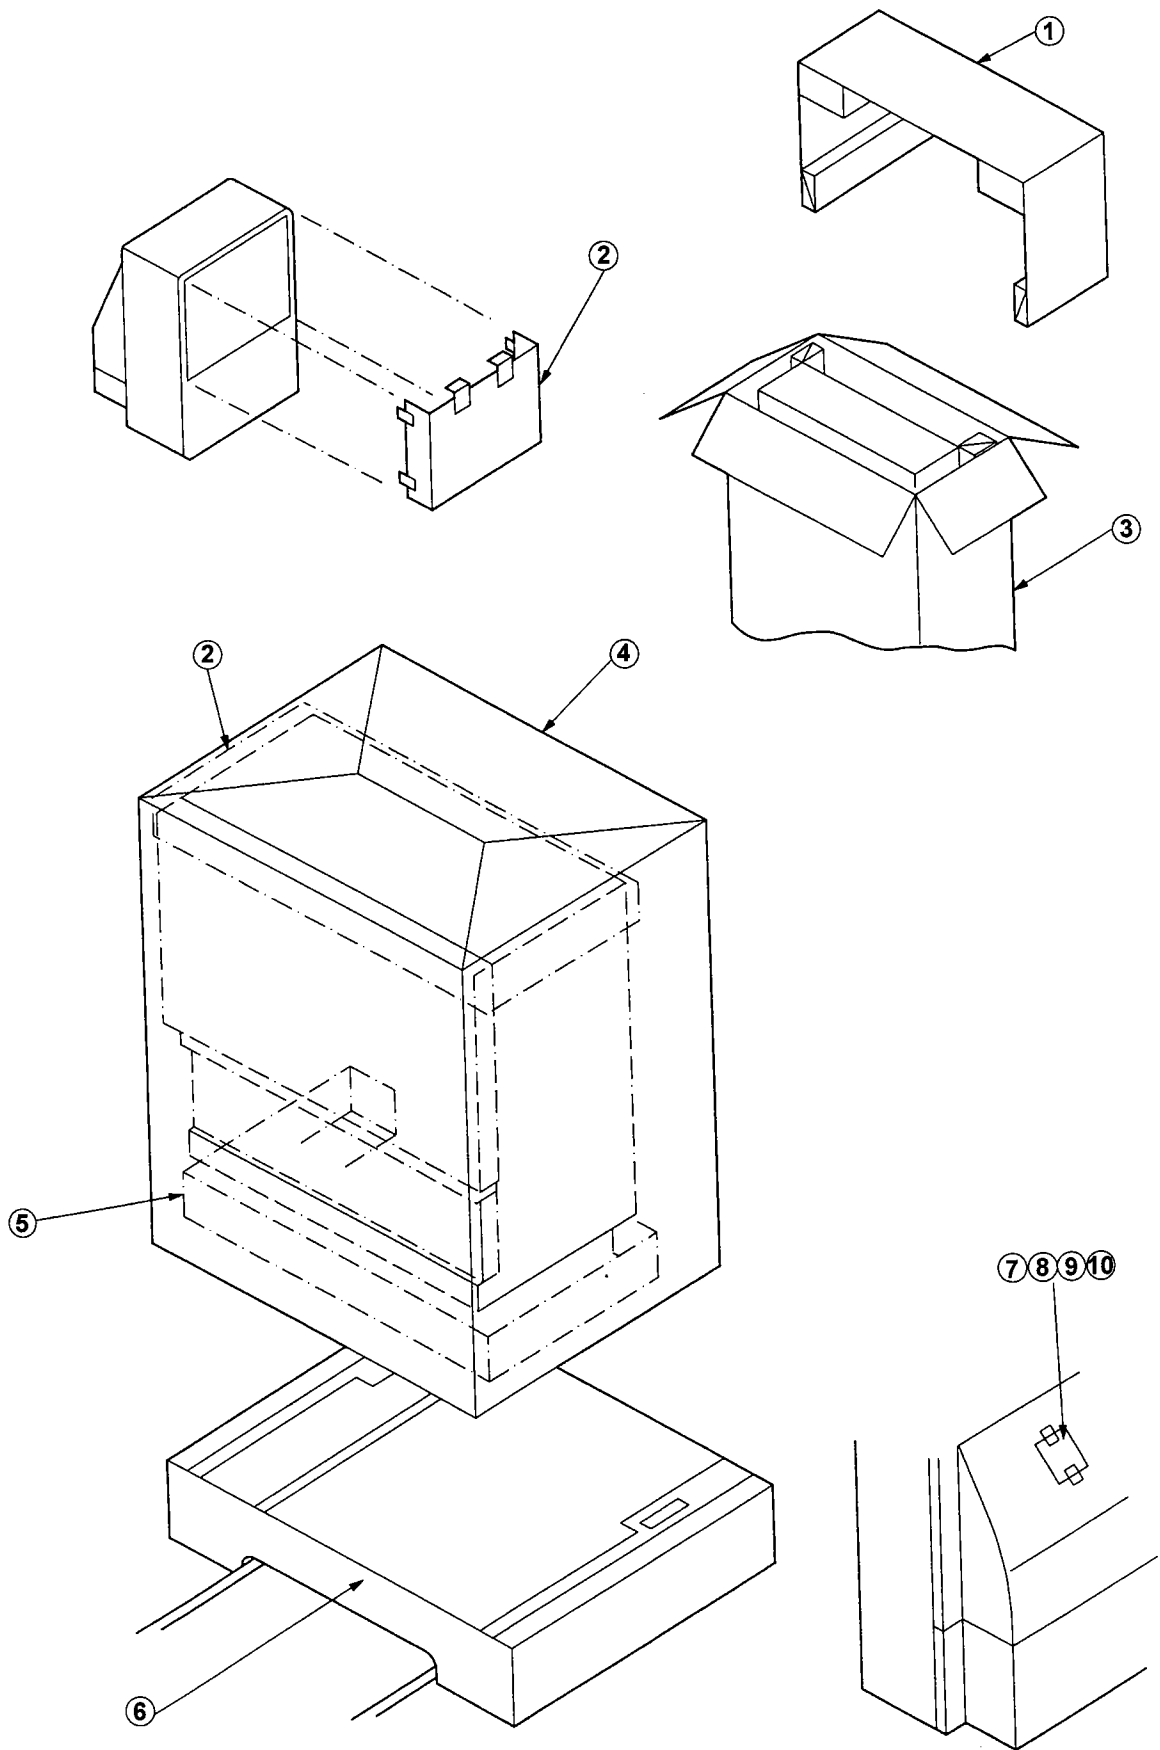


LEAD DRESS

CAUTION: THE INNER WIRES ARE CLAMPED SO THAT THEY DO NOT COME CLOSE TO HEAT GENERATING OR HIGH VOLTAGE PARTS. AFTER SERVICING, ROUTE ALL WIRES IN THEIR ORIGINAL POSITIONS.


Note: The Anode Lead Wires are routed so that no tension is applied to the Anode Caps. If the routes of the Anode Lead Wires are changed during service, return them to their original positions. Clamp the Lead Wires along the clamping path as shown in the figure below. Insure that the Lead Wires are not slack.

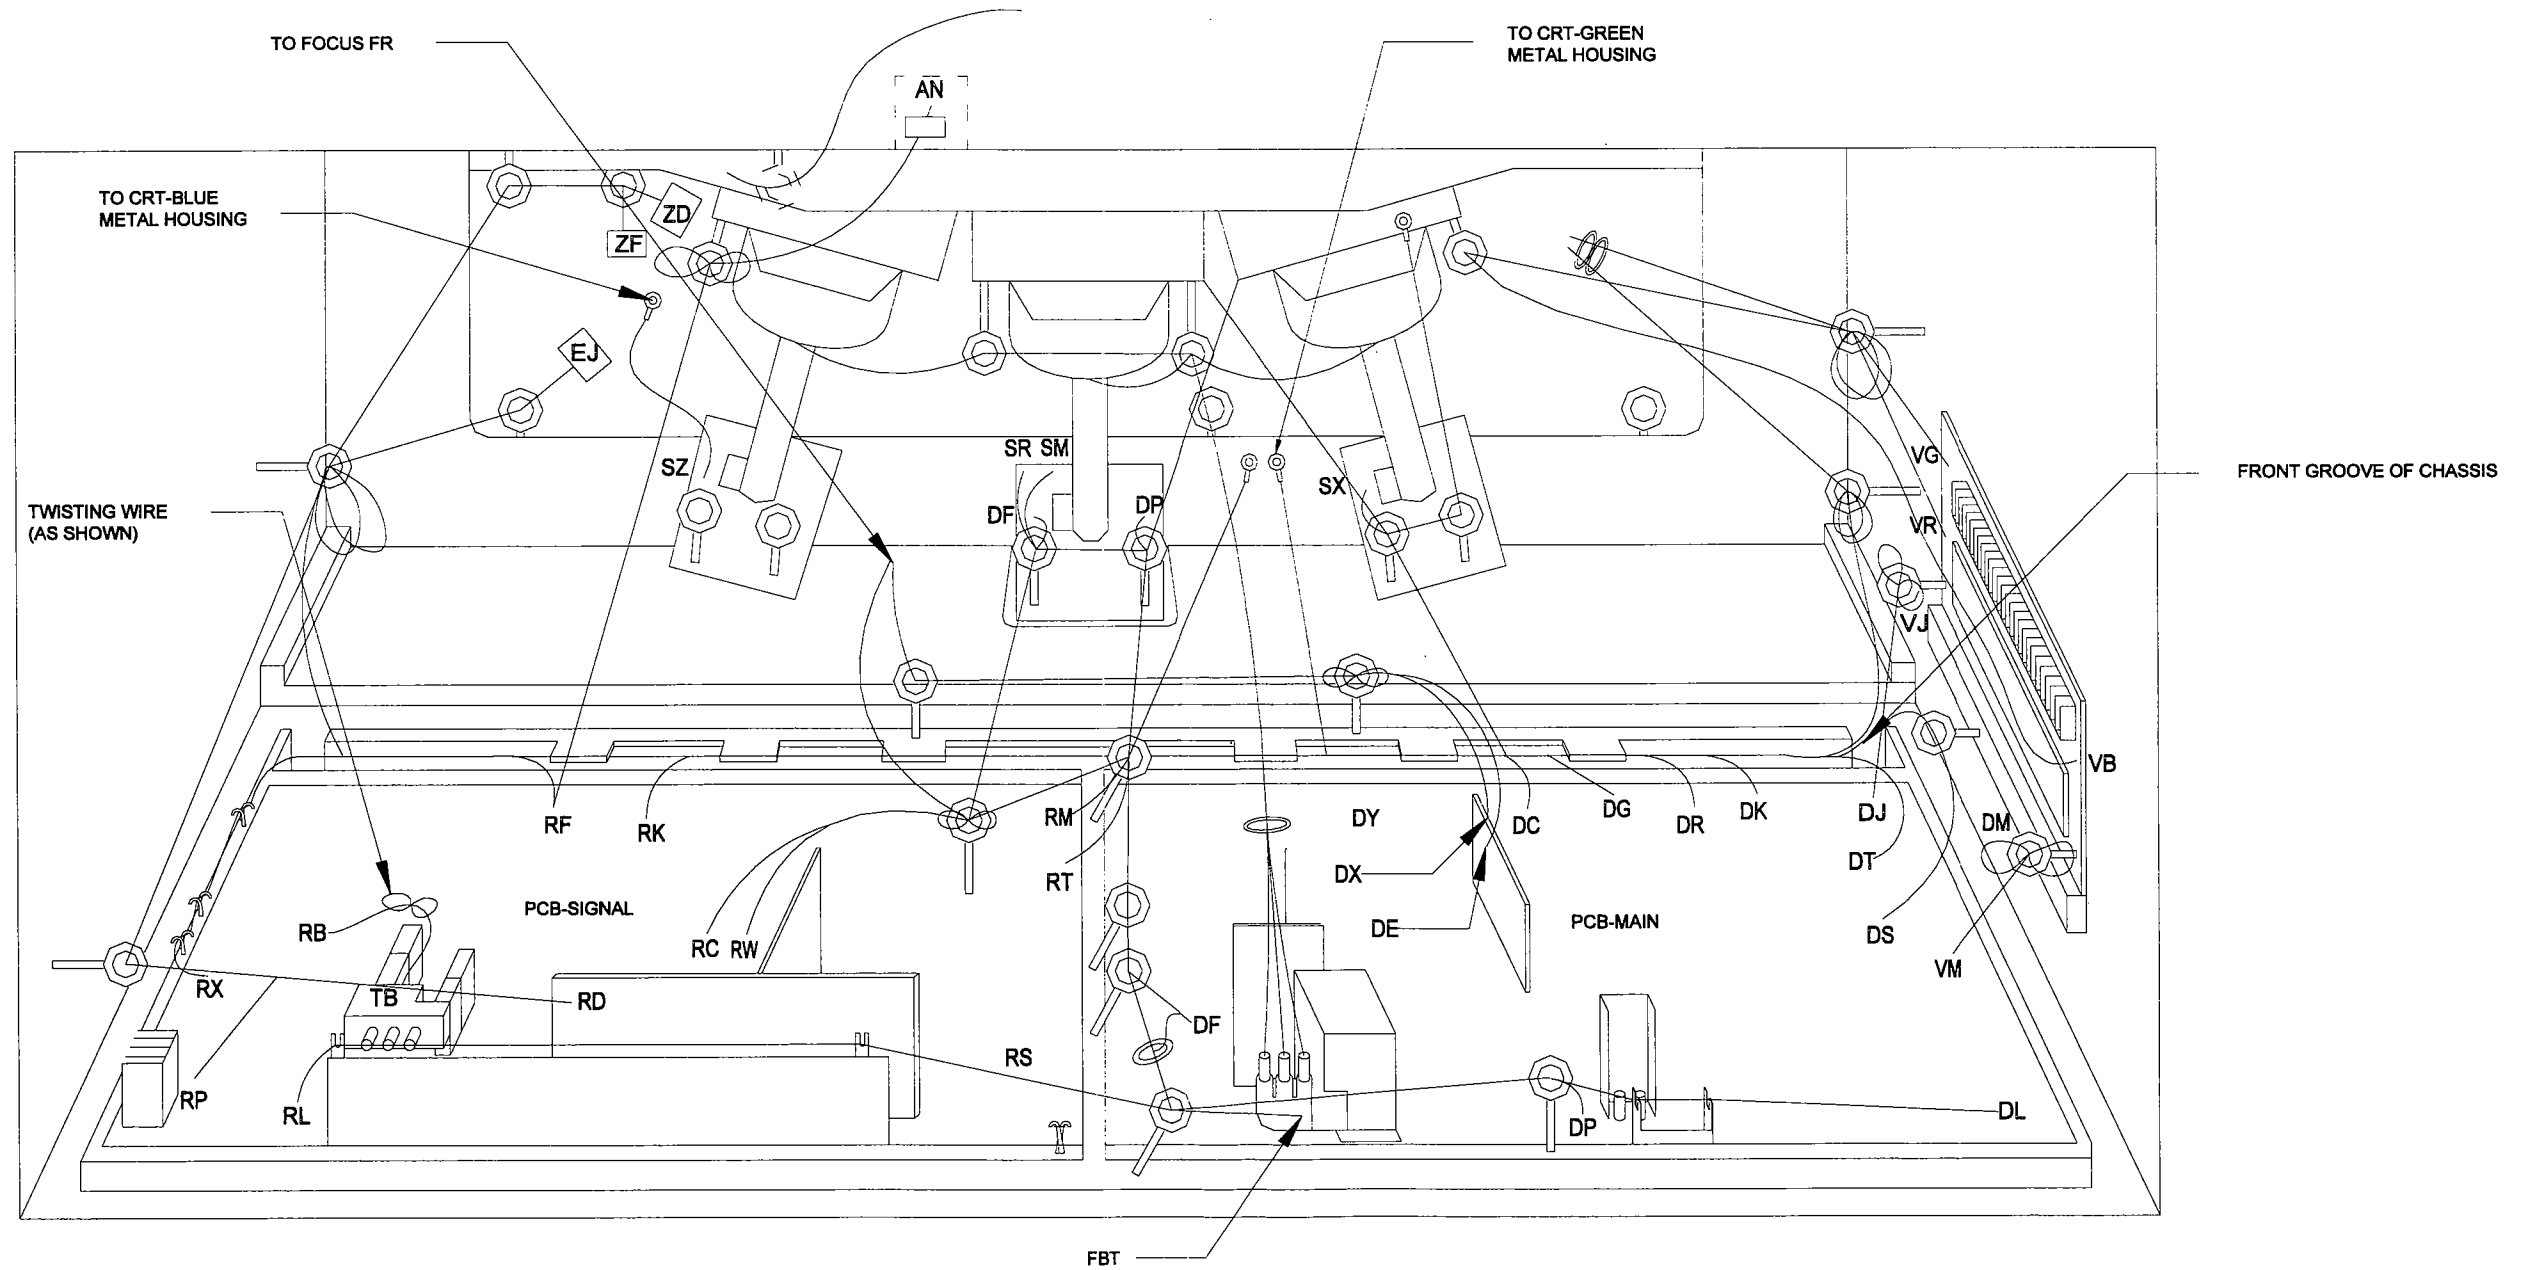

[REAR VIEW]

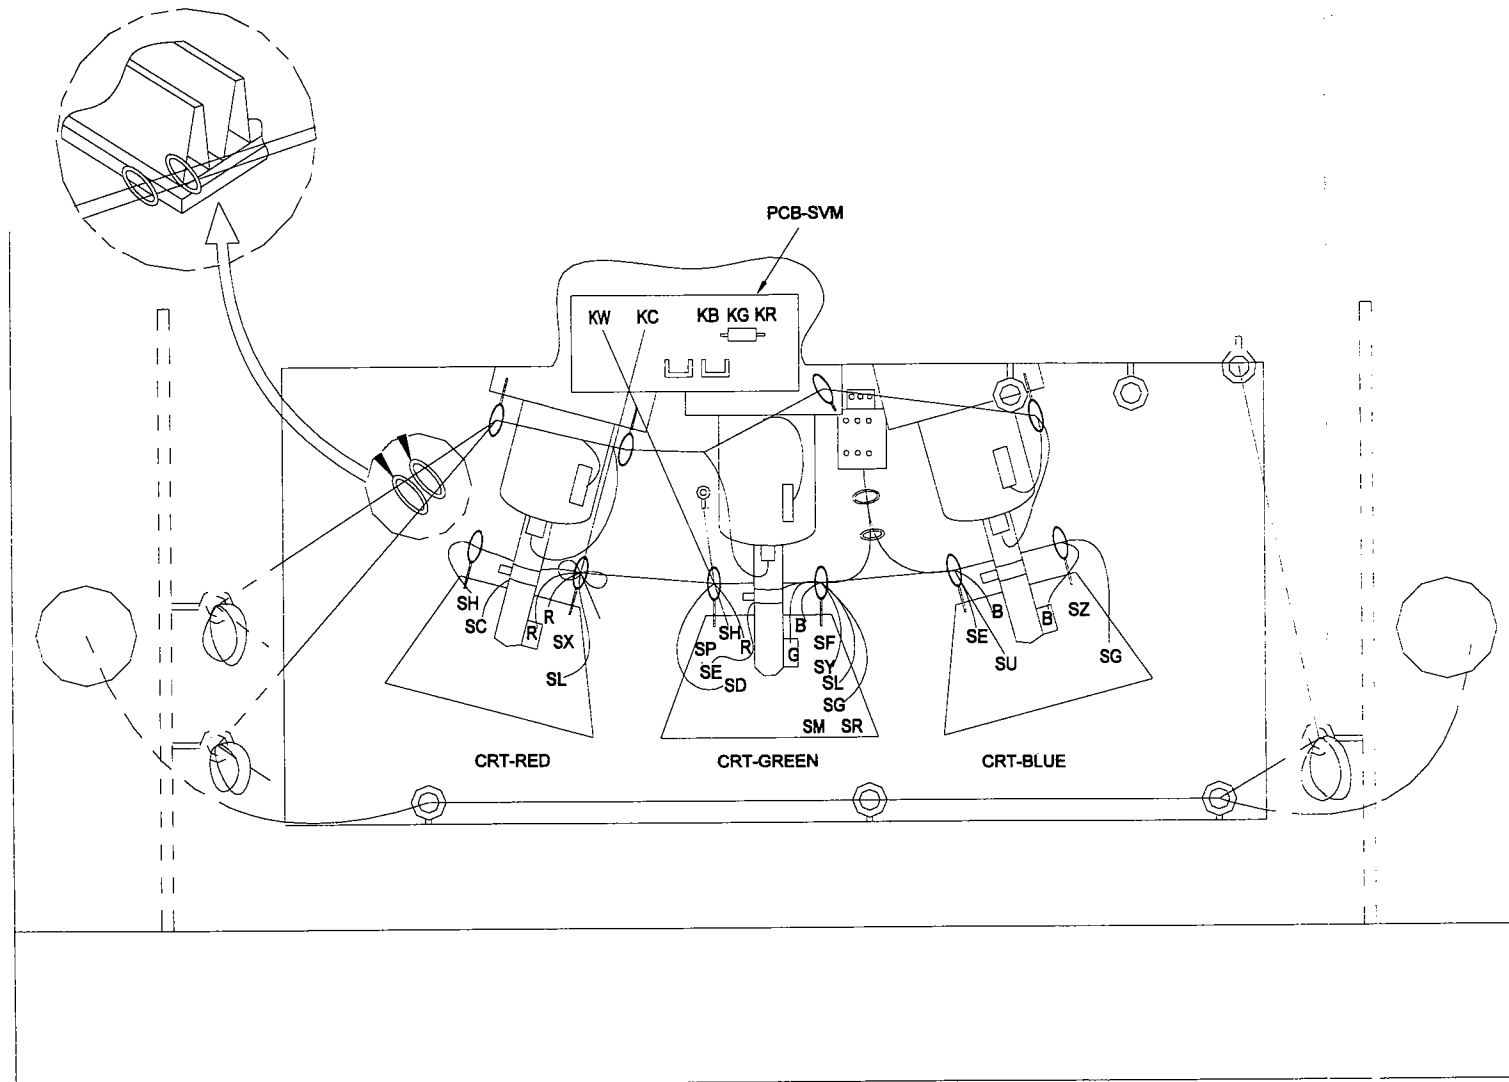

[FRONT VIEW]

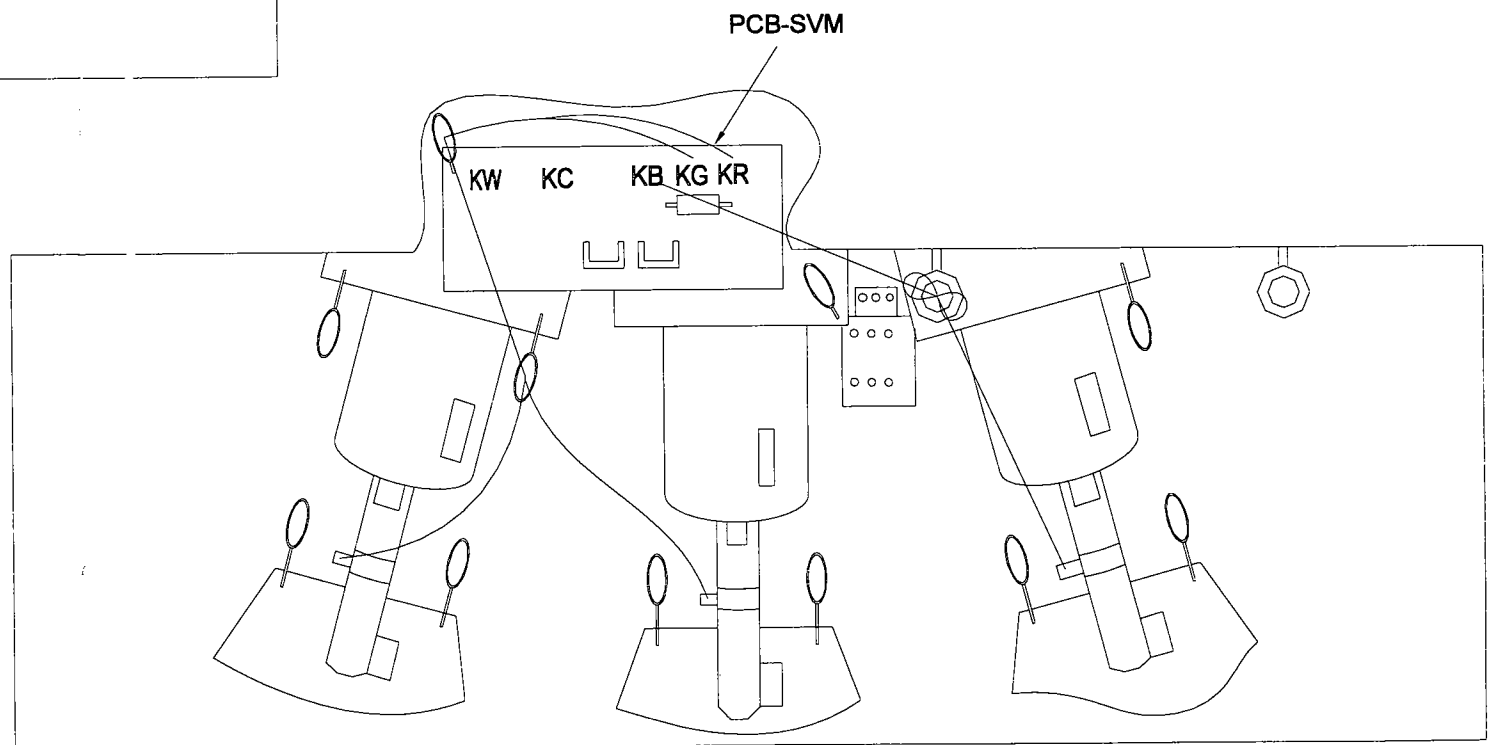


[FRONT VIEW / PCB-SVM]


VZ4 CHASSIS BLOCK DIAGRAM



POWER

DEFLECTION

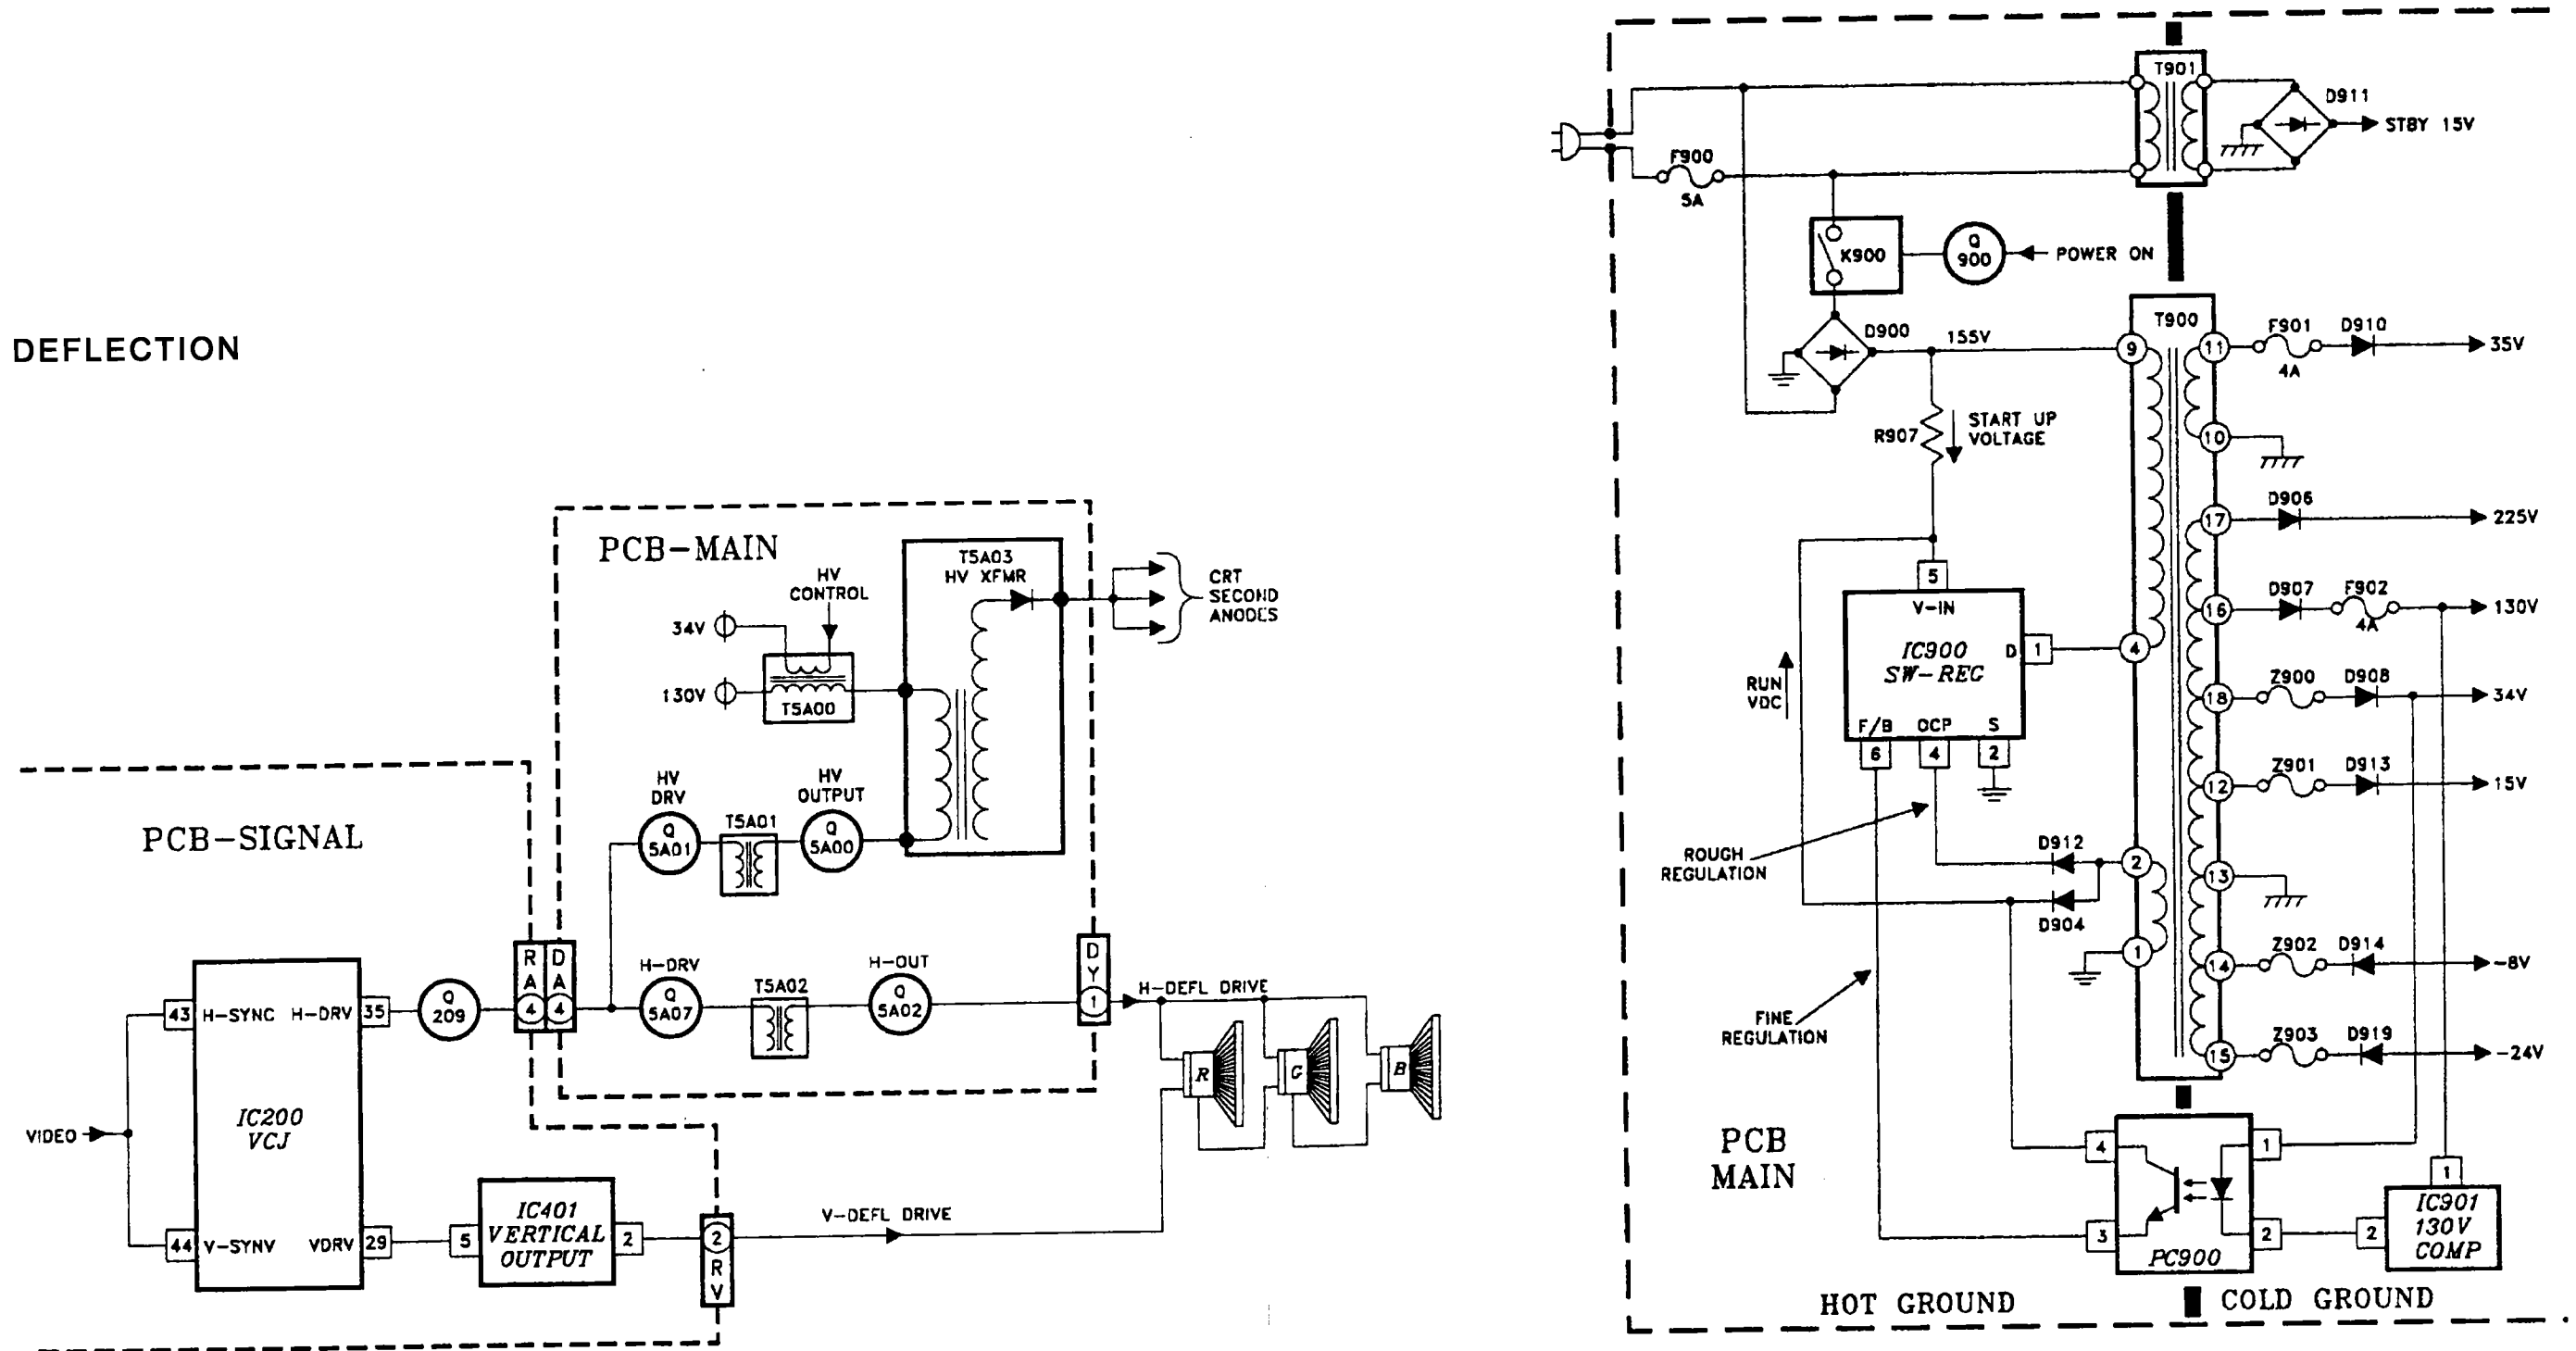


VZ4 CHASSIS SIGNAL PATH DIAGRAM

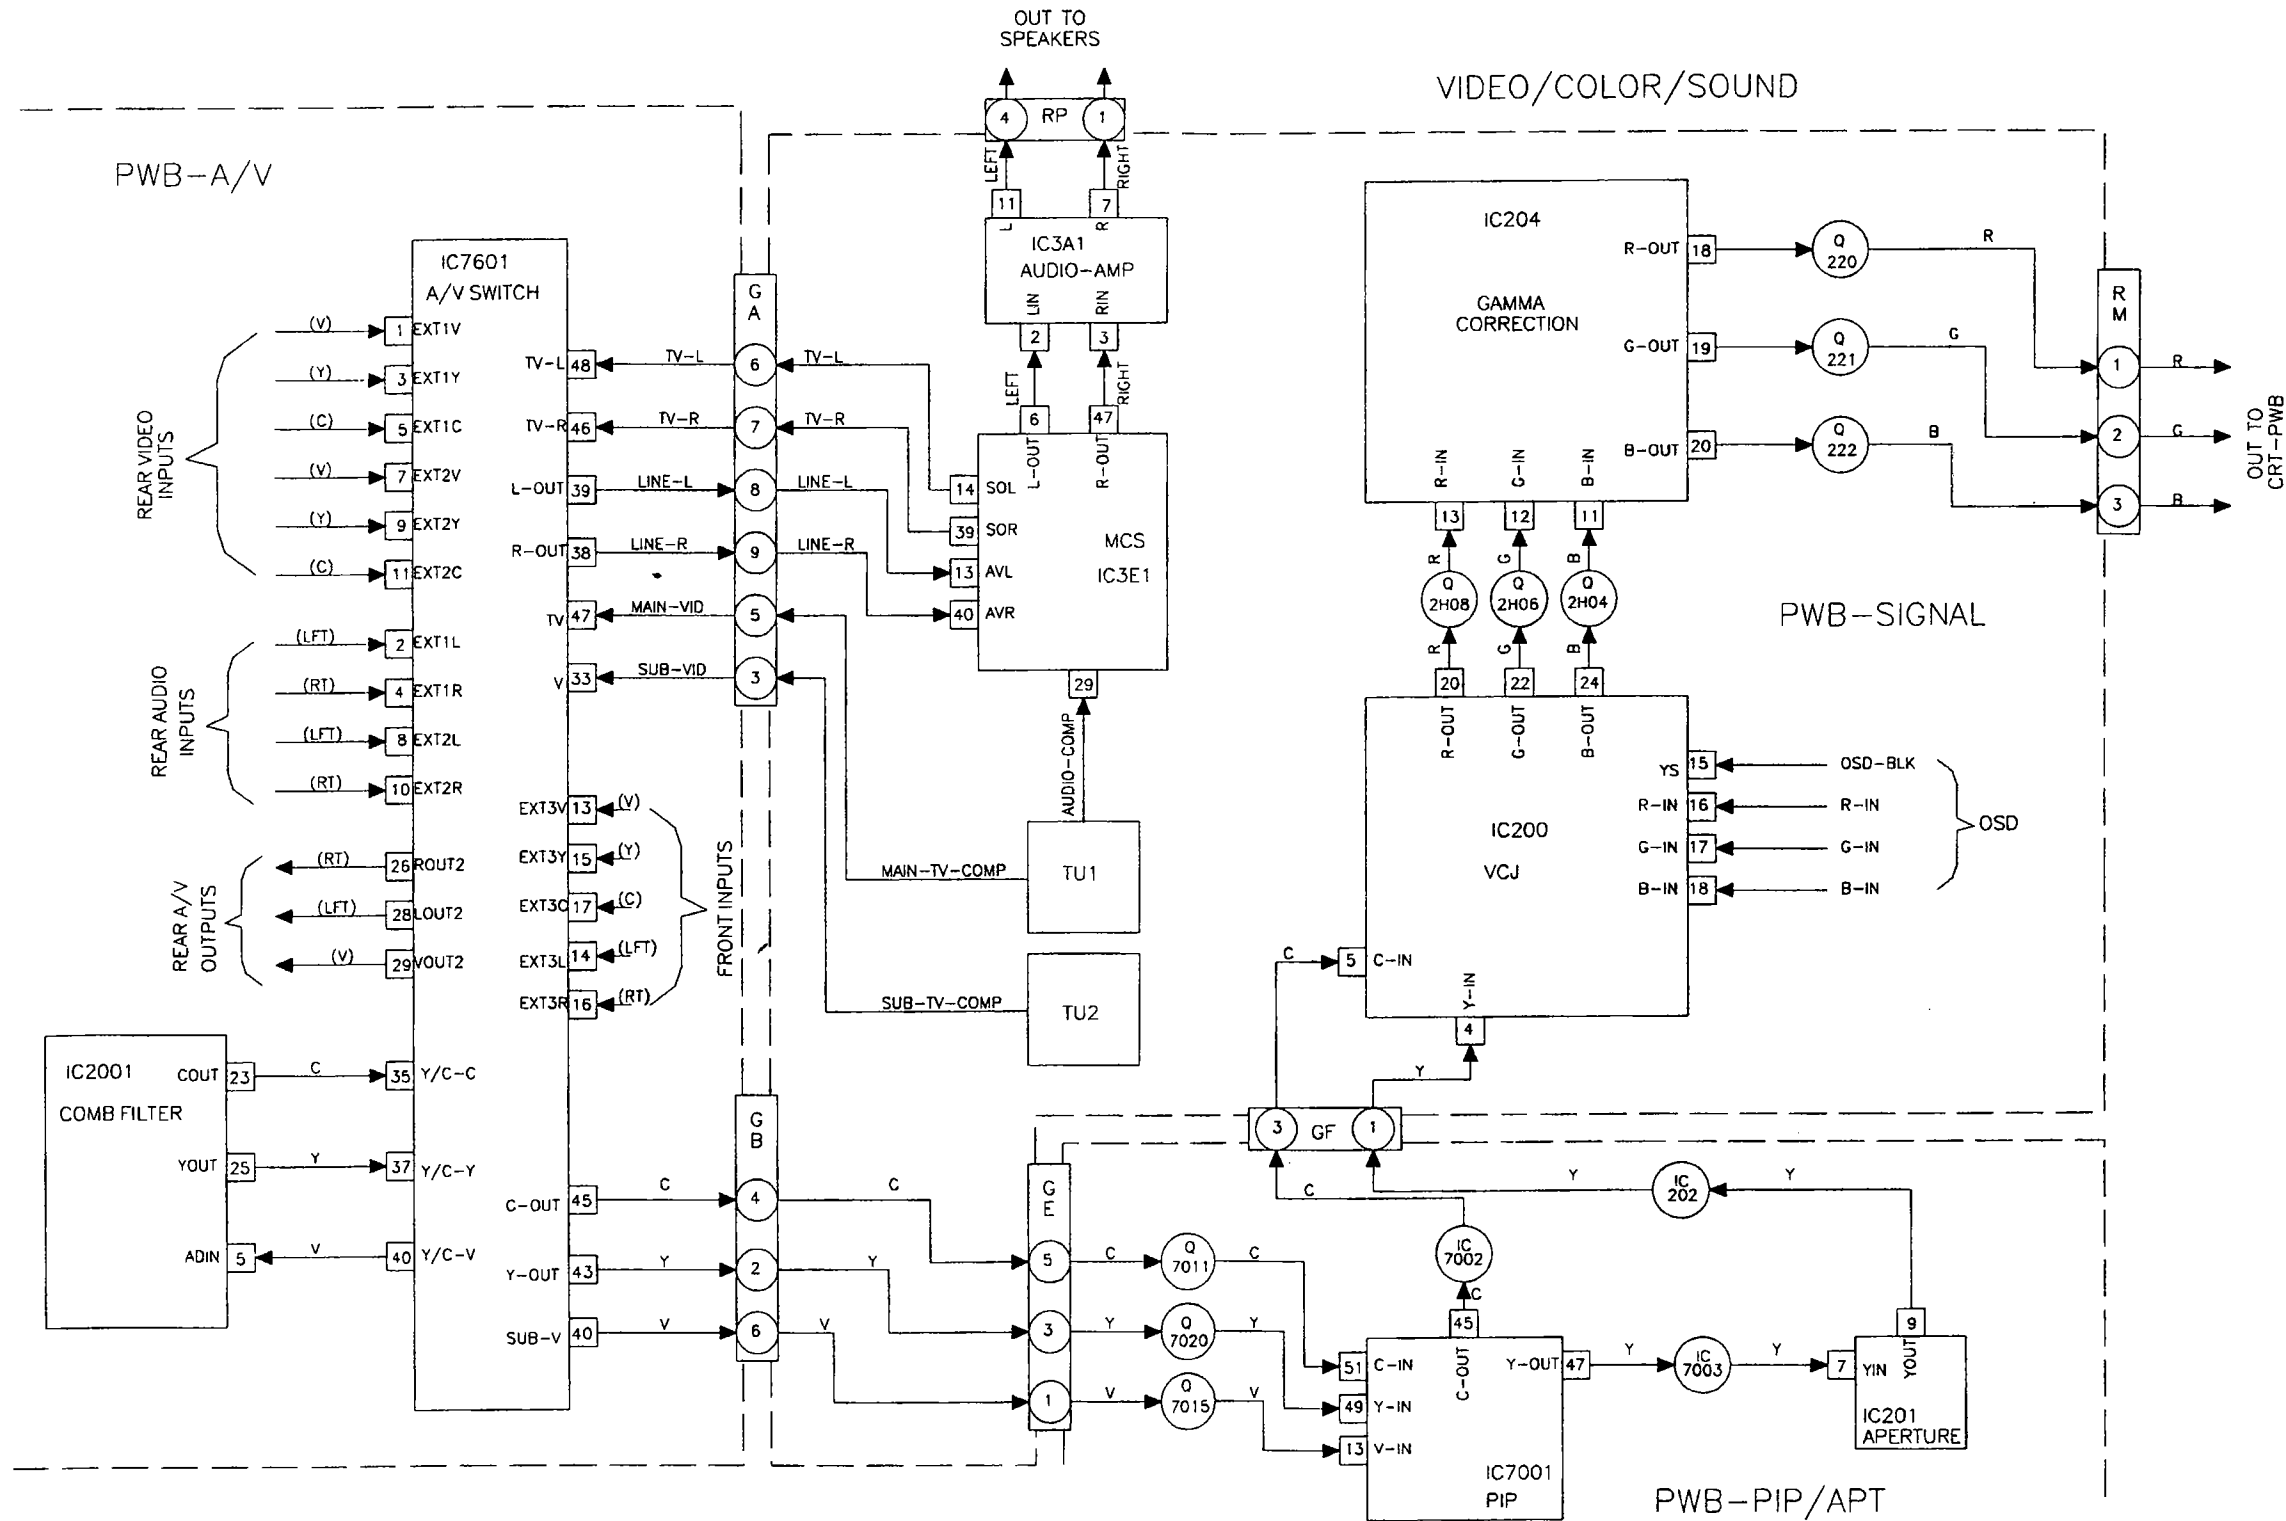

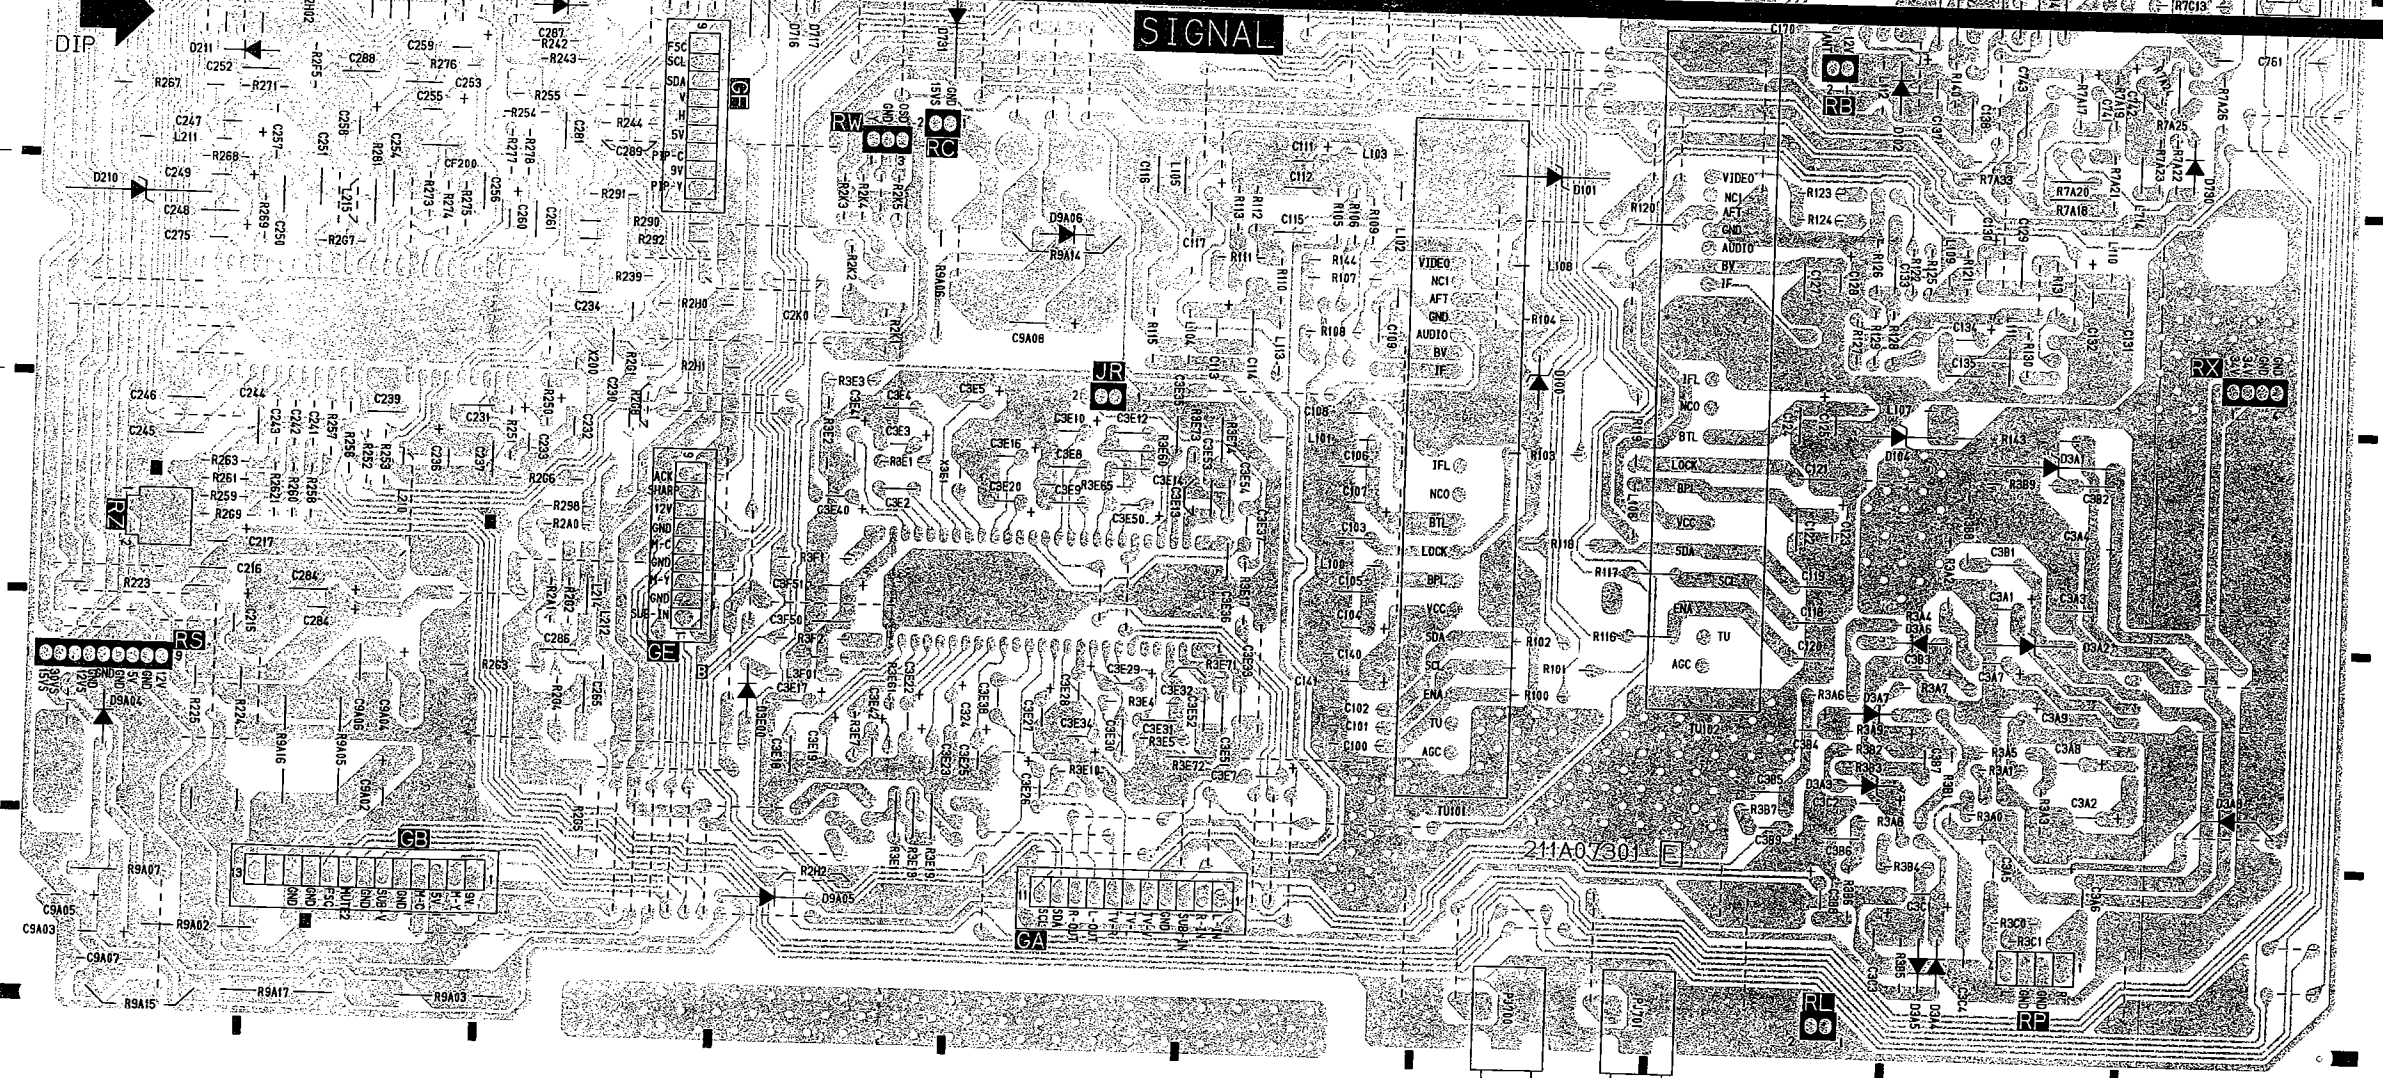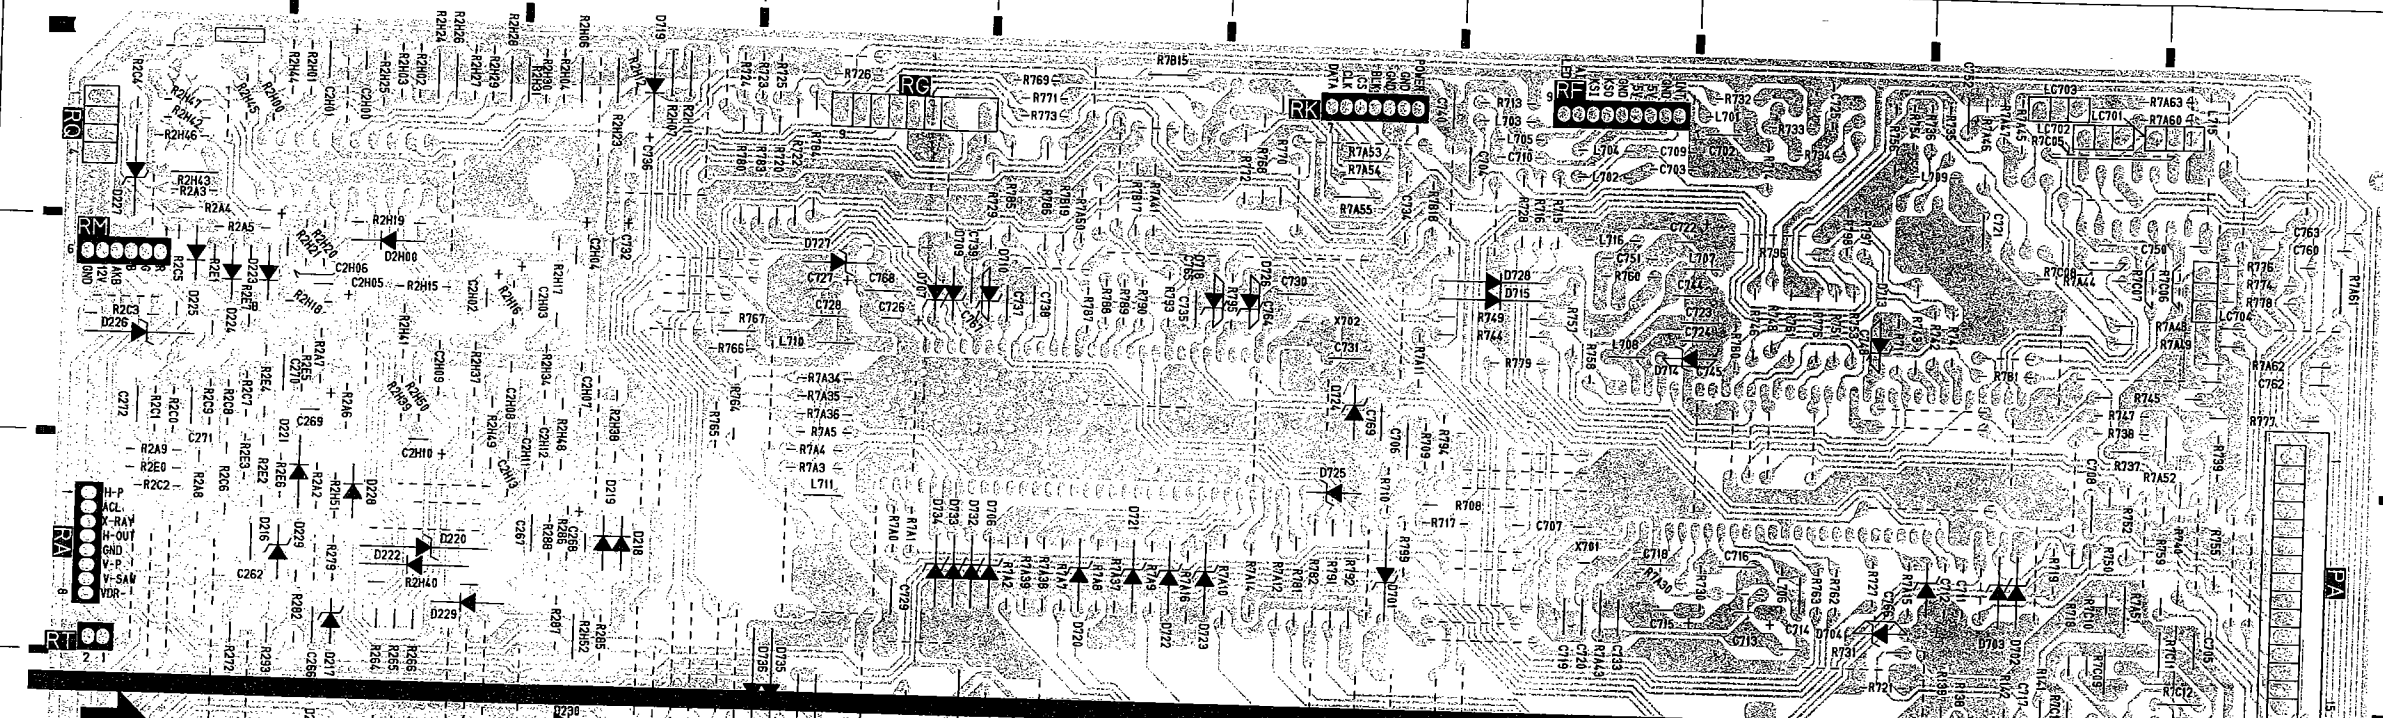


211A0 7301

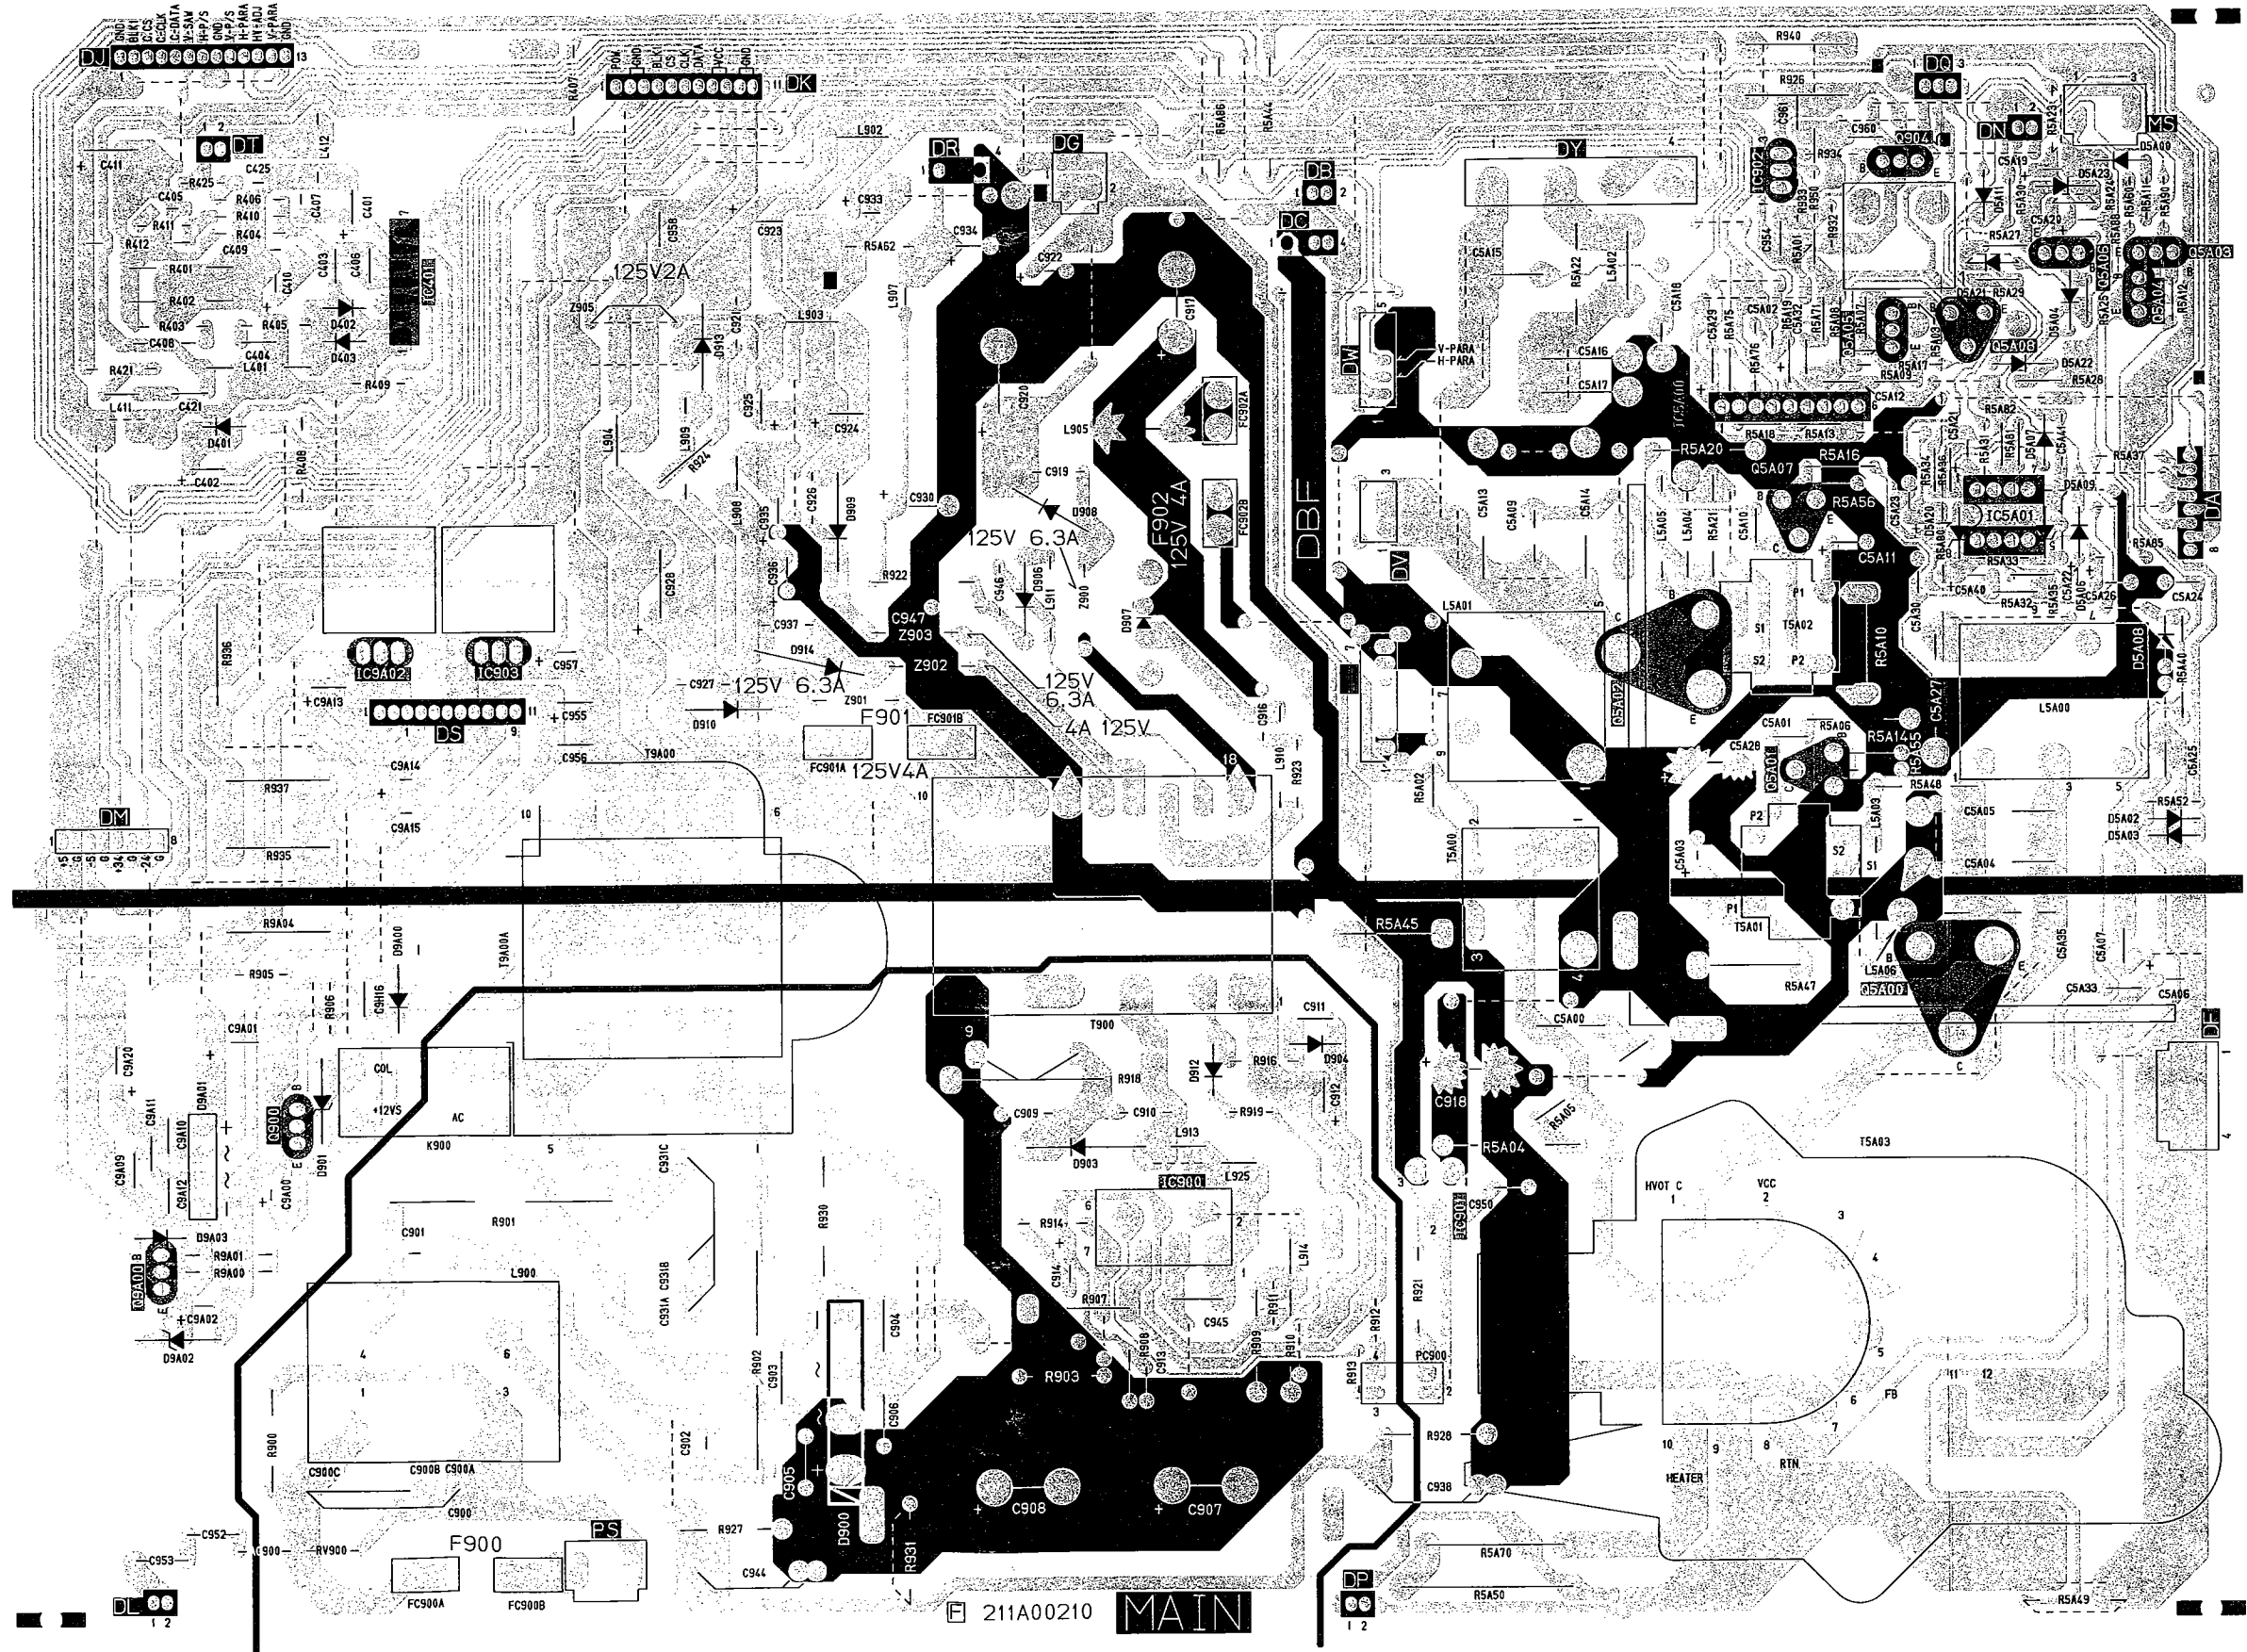


211A00210 MAIN

211A00210

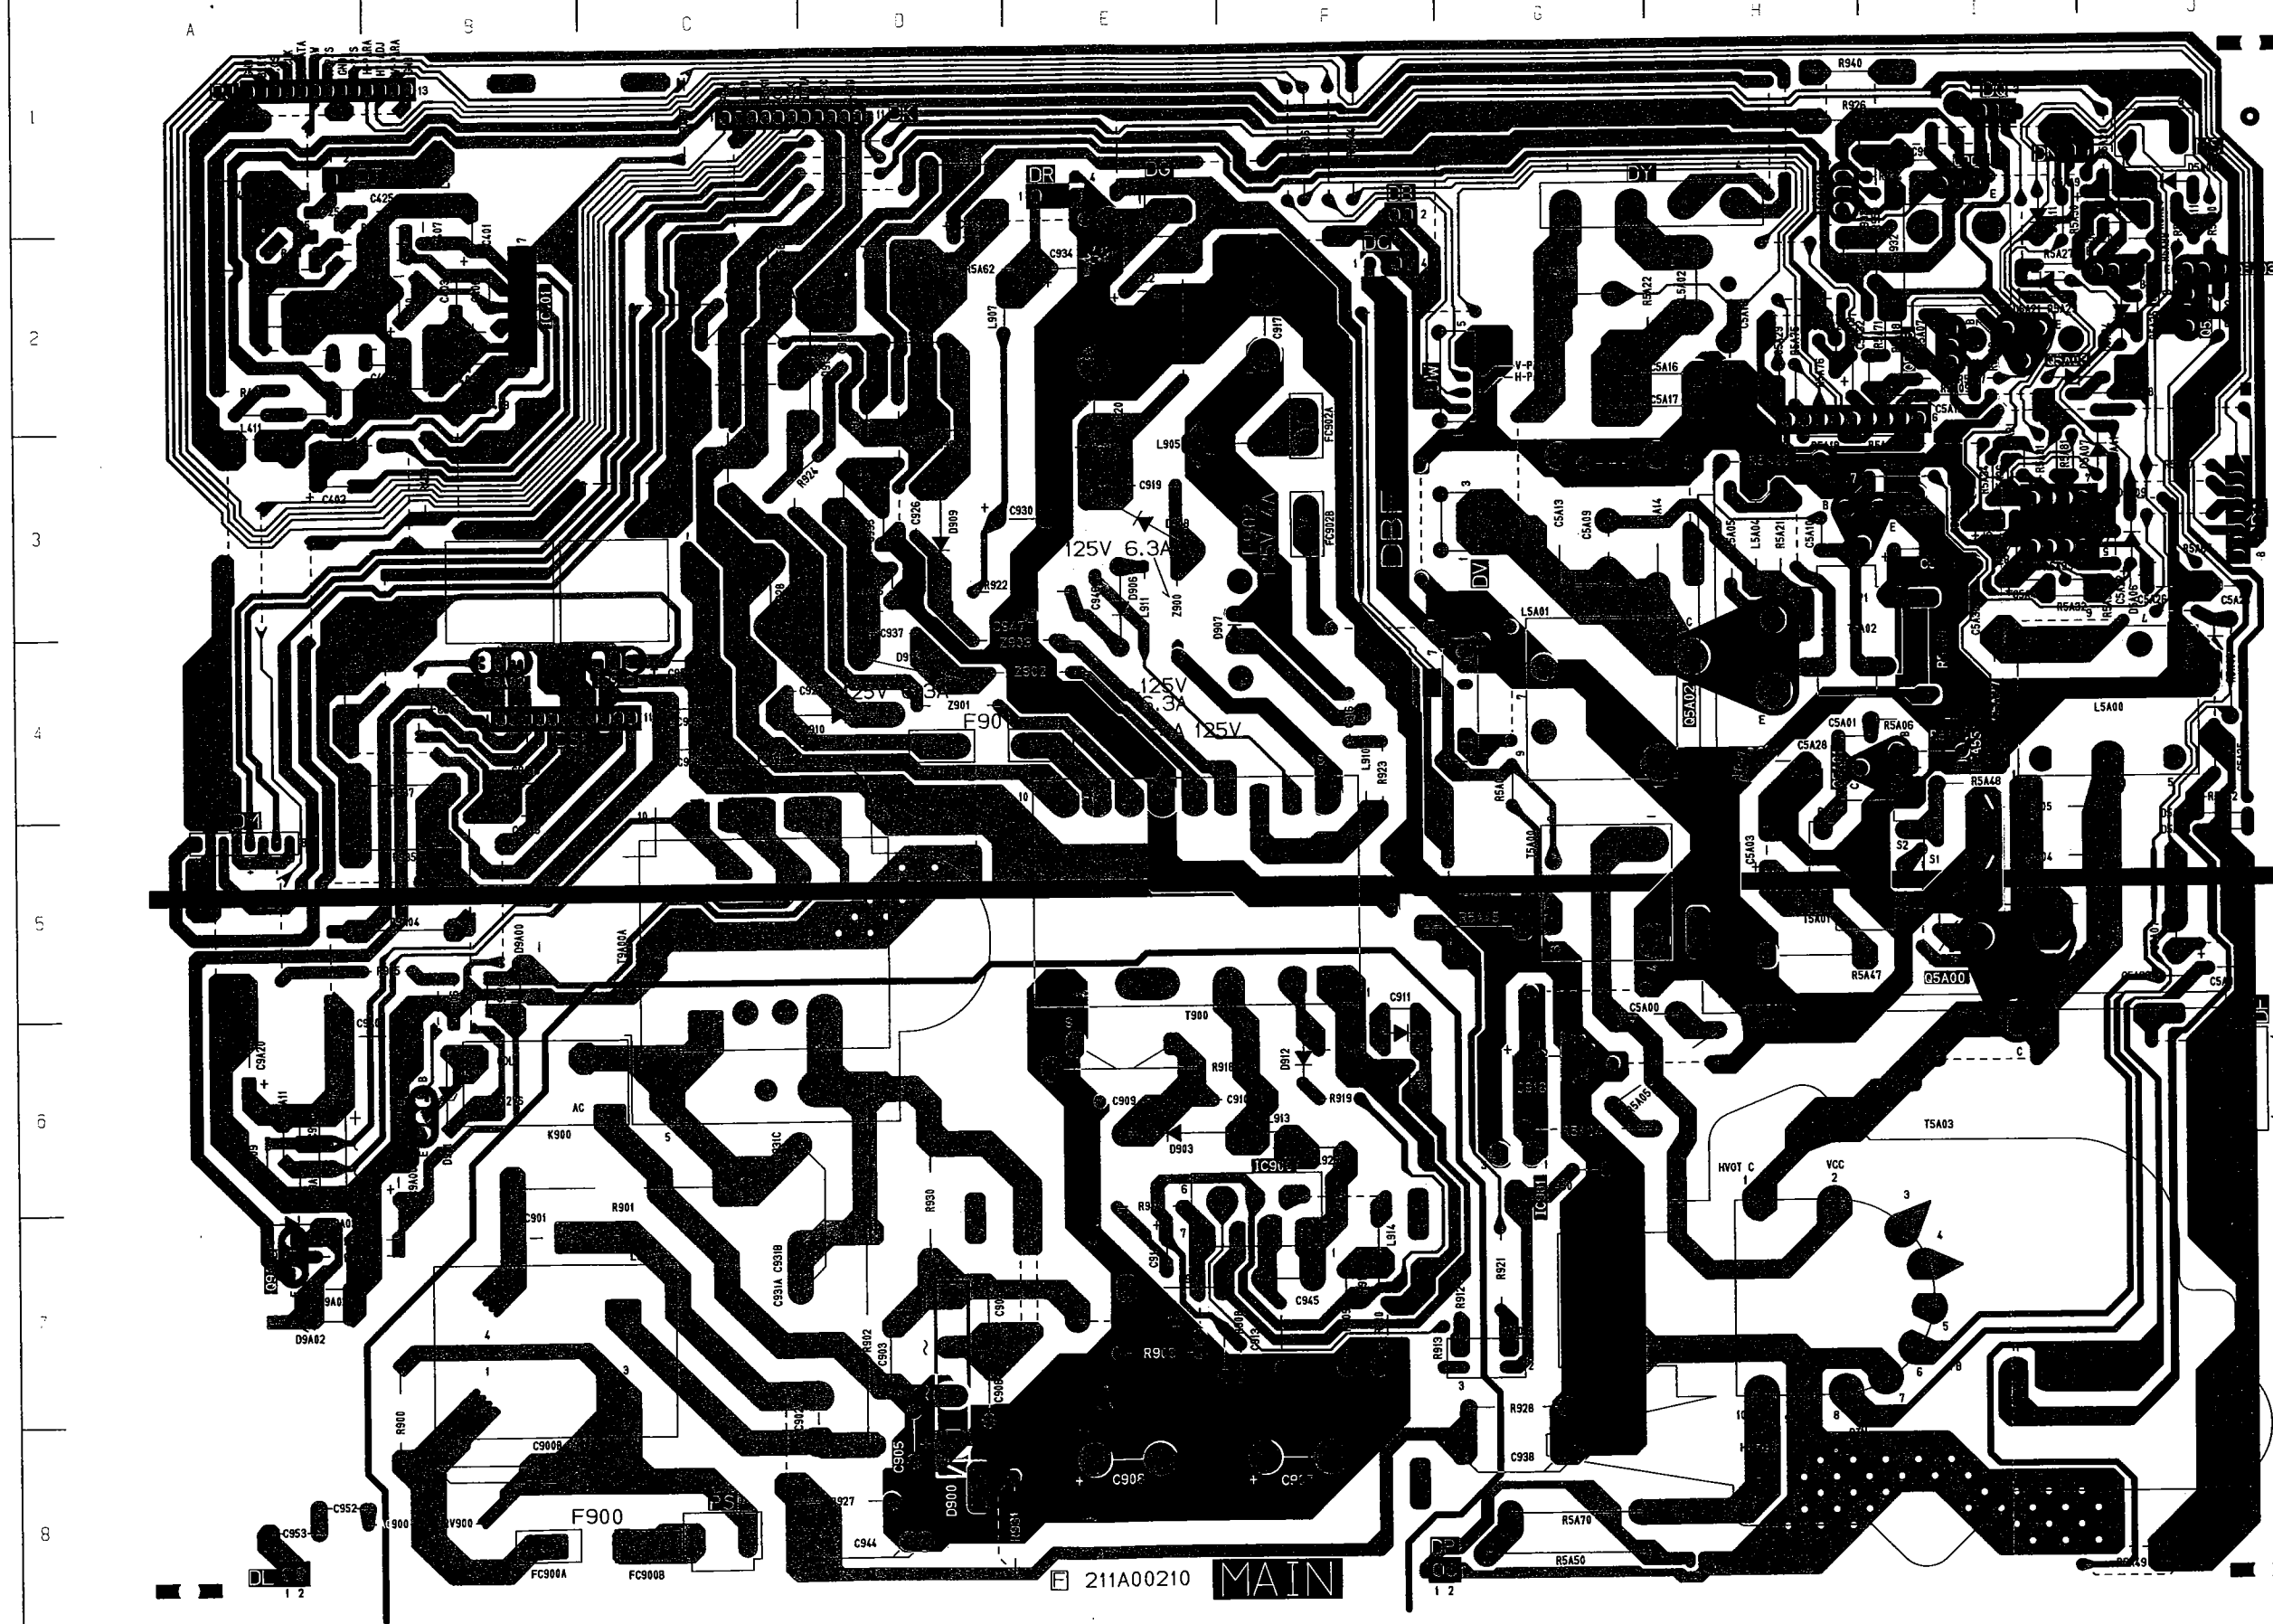


175005E1

211A00210 MAIN

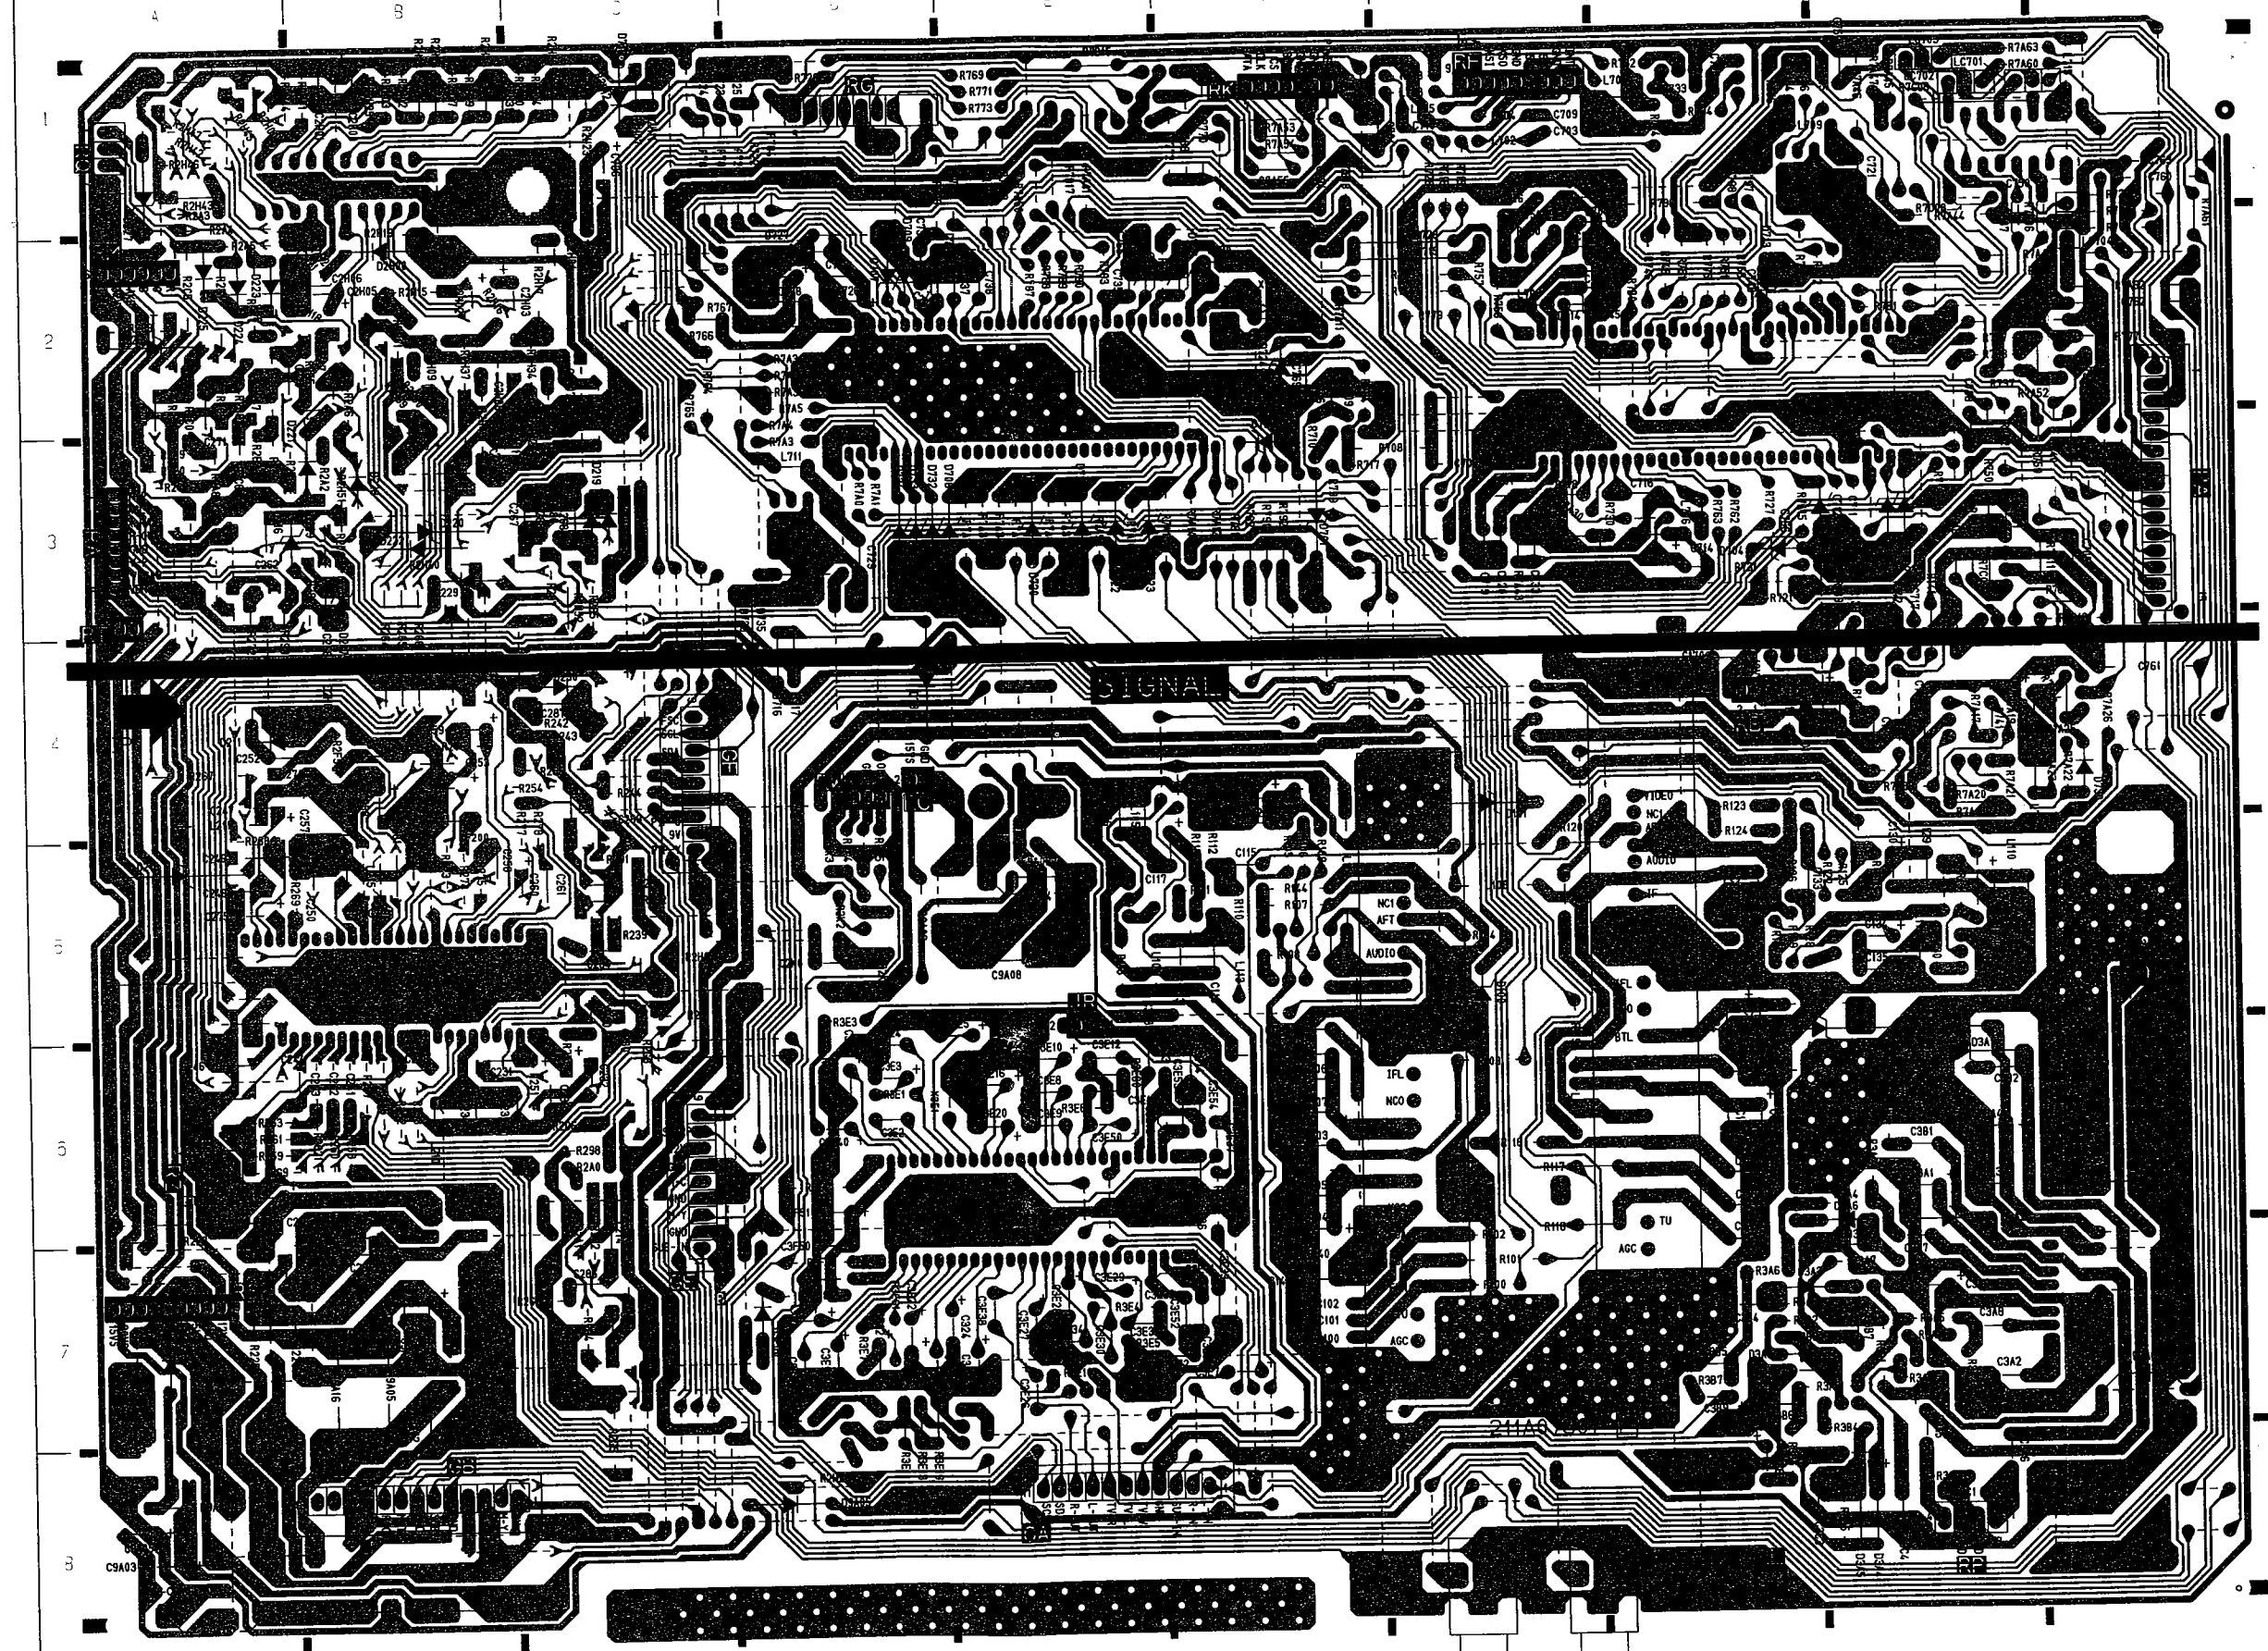


PCB-SIGNAL
SYMBOL NO.

CF200	B
D100	G
D101	G
D102	H
D104	H
D210	A
D211	A
D216	A
D217	B
D218	C
D219	C
D220	B
D223	A
D224	A
D225	A
D227	A
D228	B
D229	B
D230	C
D2-00	B
D2-02	B
D3A1	F
D3A2	F
D3A3	H
D3A4	F
D3A5	F
D3A6	F
D3A7	F
D3A8	F
D3E00	C
D701	F
D702	F
D703	F
D704	F
D706	F
D707	F
D709	C
D710	F
D713	F
D714	F
D716	F
D718	F
D717	F
D718	F
D720	F
D721	F
D722	F
D723	F
D724	F
D725	F
D726	F
D727	F
D728	F
D730	F
D731	F
D732	F
D733	F
D734	F

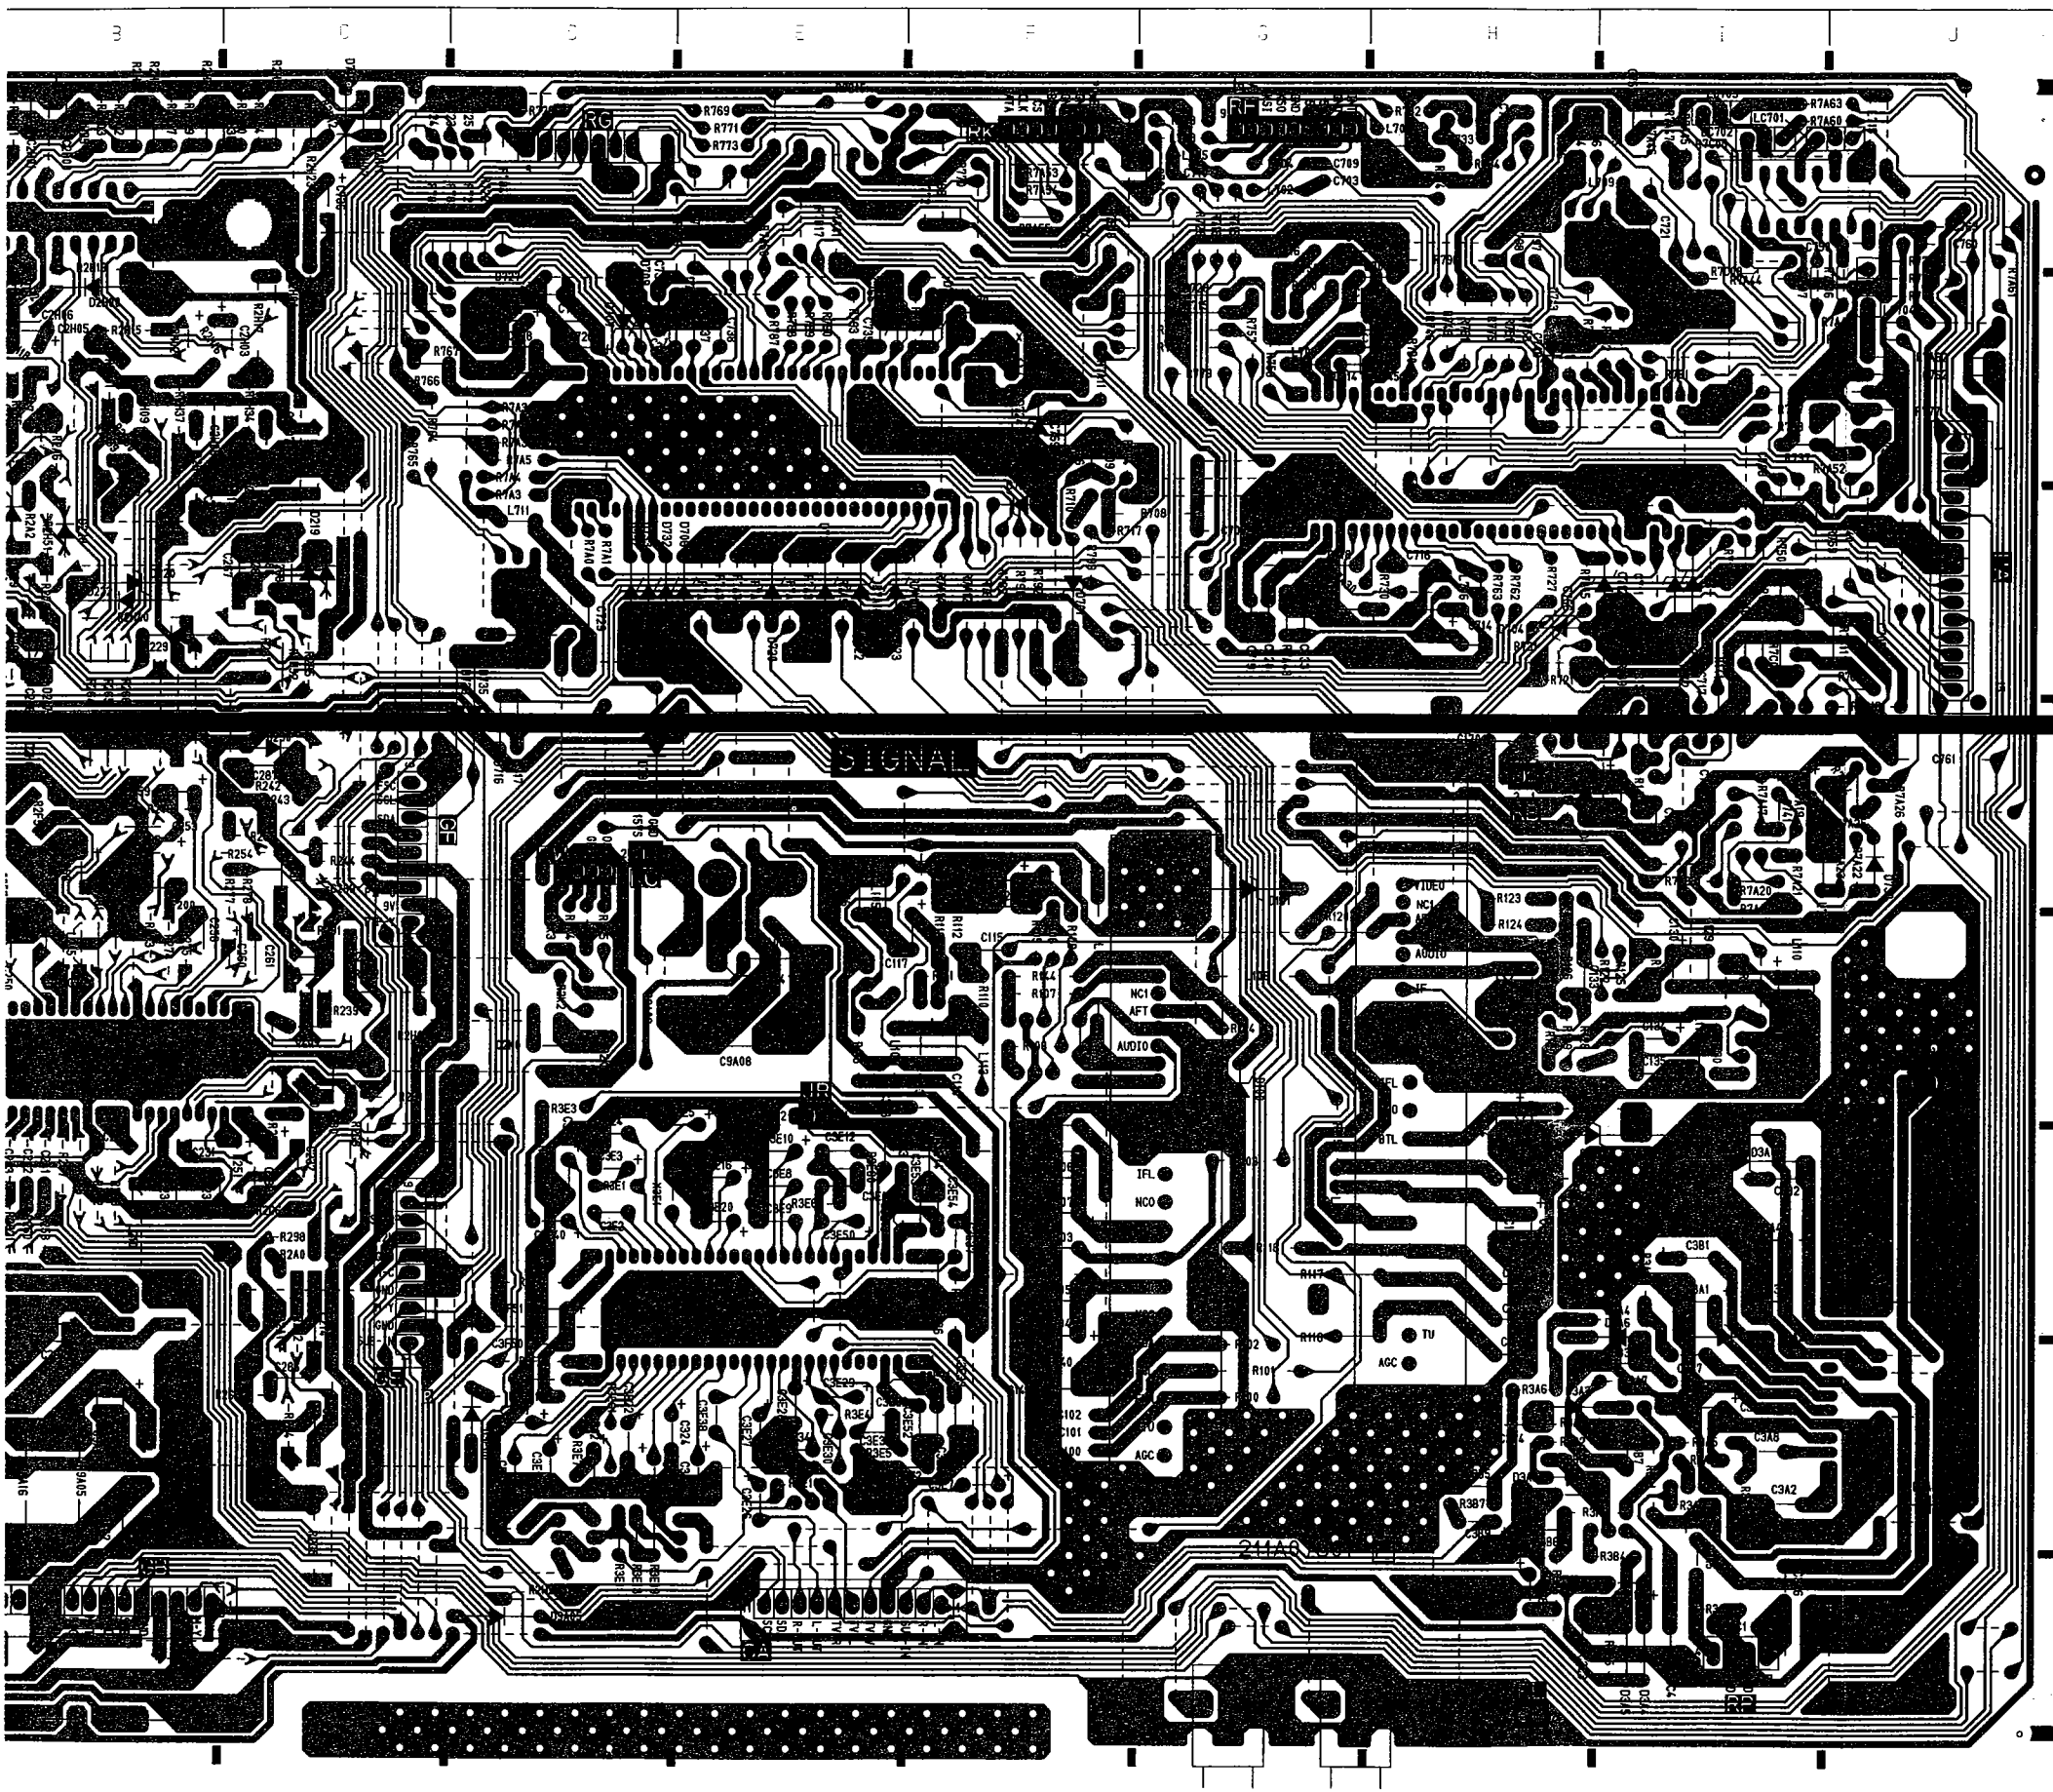


PCB-SIGNAL		SYMBOL ADDRESS		SYMBOL ADDRESS		SYMBOL ADDRESS	
SYMBOL NO.	ADDRESS	SYMBOL NO.	ADDRESS	SYMBOL NO.	ADDRESS	SYMBOL NO.	ADDRESS
CF200	B-4	D735	D-3	PJ701	G-8	TP11	F-5
		D736	D-3			TP11A	H-5
D100	G-5	D9A04	A-7	Q100	F-5		
D101	G-4	D9A05	D-8	Q101	F-5	TU101	G-5
D102	H-4	D9A06	E-5	Q102	F-5	TU102	H-5
D104	H-6			Q103	E-5		
D210	A-5	IC200	B-5	Q104	H-5	X200	C-5
D211	A-4	IC203	B-6	Q105	H-4	X3E1	D-6
D216	A-3	IC204	B-1	Q106	I-5	X701	G-3
D217	B-3	IC3A1	I-7	Q107	I-5	X702	F-2
D218	C-3	IC3E1	E-6	Q109	H-4		
D219	C-3	IC700	H-2	Q110	I-4		
D220	B-3	IC701	D-3	Q206	C-4		
D223	A-2	IC702	G-2	Q209	A-3		
D224	A-2	IC703	E-2	Q210	C-5		
D225	A-2	IC705	I-1	Q211	C-6		
D227	A-1	IC706	H-1	Q212	C-6		
D228	B-3	IC9A00	B-7	Q213	C-4		
D229	B-3	IC9A01	A-7	Q214	C-3		
D230	C-4	IC9A12	E-4	Q215	C-3		
D2H00	B-2			Q216	B-3		
D2H02	B-4	L100	F-6	Q217	B-2		
D3A1	I-6	L101	F-6	Q220	A-2		
D3A2	I-6	L102	F-5	Q221	A-2		
D3A3	H-7	L103	F-4	Q222	A-2		
D3A4	I-8	L104	E-5	Q224	C-5		
D3A5	I-8	L105	E-4	Q225	C-7		
D3A6	I-6	L106	G-6	Q2H04	B-2		
D3A7	H-7	L107	H-5	Q2H05	C-2		
D3A8	J-7	L108	G-5	Q2H06	B-2		
D3E00	D-7	L109	I-5	Q2H07	B-2		
D701	F-3	L110	I-5	Q2H08	B-2		
D702	I-3	L111	I-5	Q2H09	B-2		
D703	I-3	L112	H-4	Q2H10	A-1		
D704	H-3	L113	F-5	Q2H11	A-1		
D706	E-3	L210	B-6	Q2H12	A-1		
D707	D-2	L211	A-4	Q2K0	D-5		
D709	D-2	L212	C-7	Q314	I-7		
D710	D-2	L214	C-6	Q3A1	I-7		
D713	H-2	L215	B-5	Q3A2	H-6		
D714	G-2	L701	H-1	Q3A3	I-7		
D715	G-2	L702	G-1	Q3E01	E-7		
D716	D-4	L703	G-1	Q3E02	D-7		
D717	D-4	L704	G-1	Q3E03	D-7		
D718	E-2	L705	G-1	Q701	F-3		
D719	C-1	L706	H-3	Q705	H-1		
D720	E-3	L707	G-2	Q706	H-1		
D721	E-3	L708	G-2	Q708	J-2		
D722	E-3	L709	H-1	Q709	E-1		
D723	E-3	L710	D-2	Q710	E-1		
D724	F-2	L711	D-3	Q711	E-1		
D725	F-2	L714	I-4	Q712	I-4		
D726	F-3	L715	J-1	Q713	I-4		
D727	D-2	L716	G-1	Q714	J-4		
D728	G-2	LC701	I-1	Q715	I-1		
D730	J-4	LC702	I-1	Q716	I-1		
D731	D-4	LC703	I-1	Q7C00	I-3		
D732	D-3	LC704	J-2	Q7C01	I-4		
D733	D-3						
D734	D-3	PJ700	G-8				

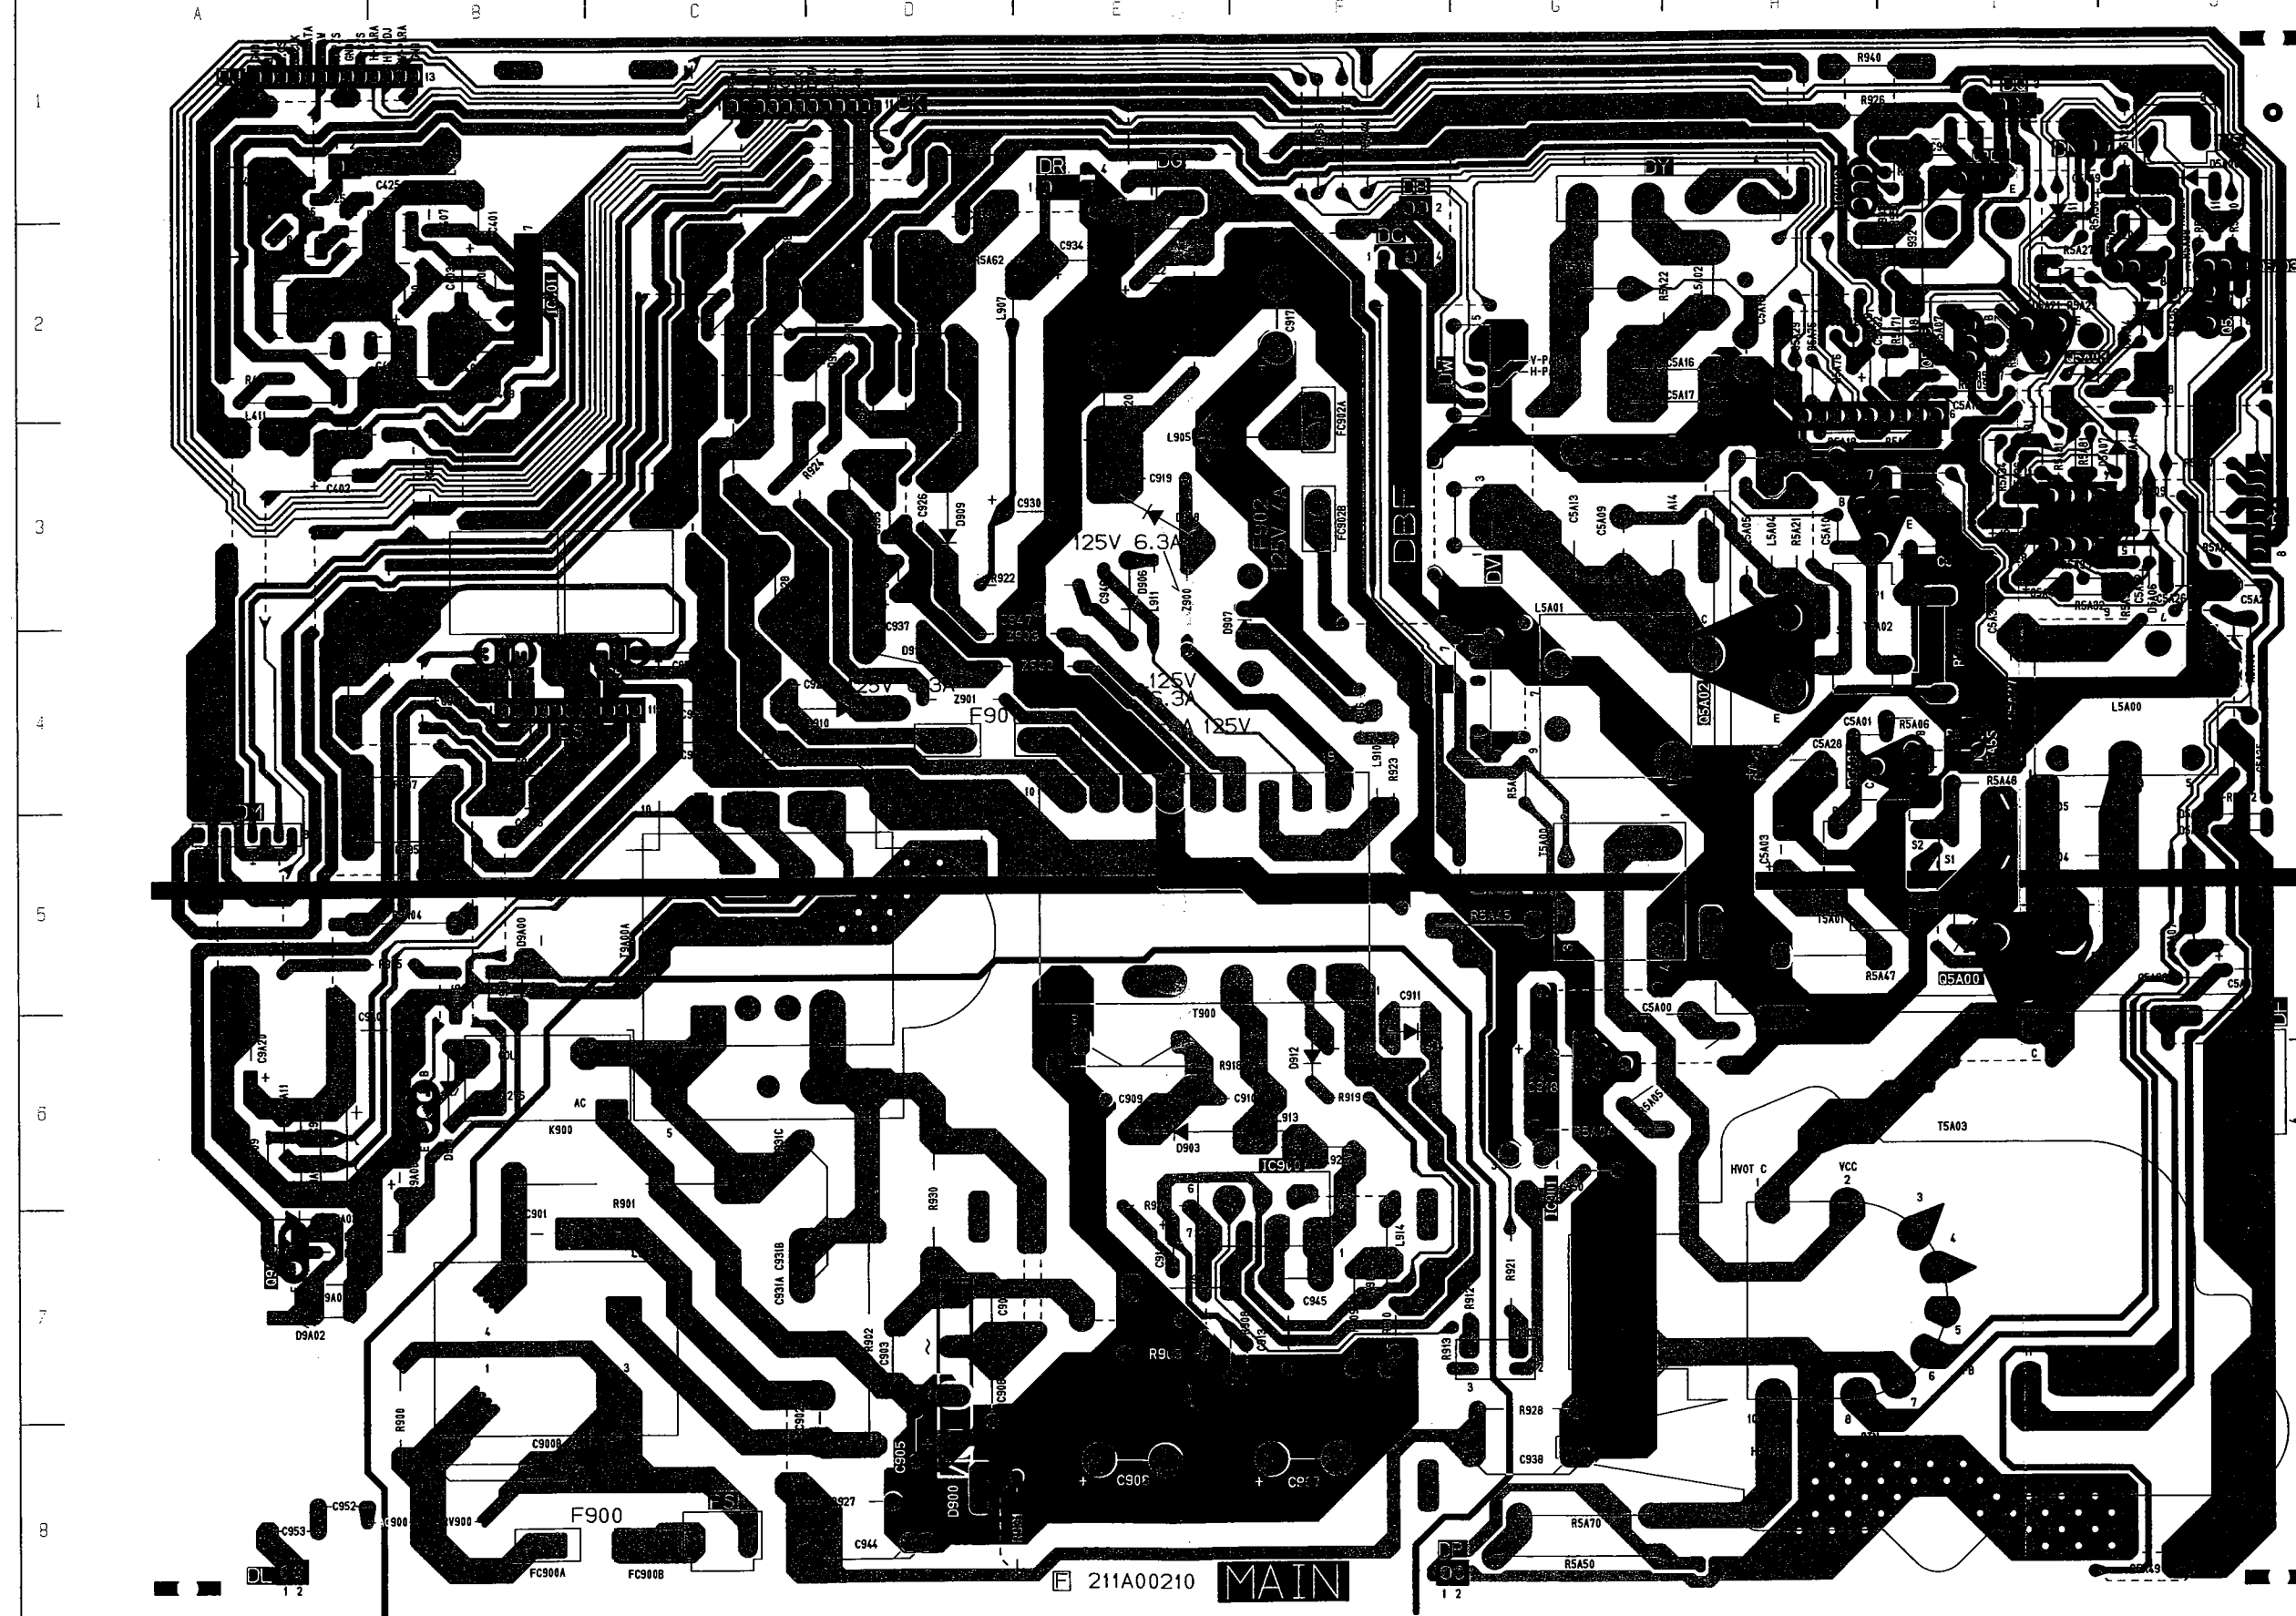




1900A15

SYMBOL	ADDRESS NO.	
AG900	B-8	
D401	A-3	
D402	B-2	
D403	B-2	
D5A00	J-1	
D5A02	J-4	
D5A03	J-1	
D5A04	J-2	
D5A06	J-3	
D5A07	J-3	
D5A08	J-4	
D5A09	J-3	
D5A11	I-1	
D5A20	I-3	
D5A21	I-2	
D5A22	I-2	
D5A23	J-1	
D5A27	I-2	
D900	D-7	
D901	B-6	
D903	E-6	
D904	F-6	
D906	E-3	
D907	F-3	
D908	E-3	
D909	D-3	
D910	D-4	
D912	F-6	
D913	D-2	
D914	D-4	
D9A00	B-5	
D9A01	A-6	
D9A02	A-7	
D9A03	A-7	
F900	B-8	
F901	D-1	
F902	F-3	
FC900A	B-8	
FC900B	C-8	
FC901A	D-4	
FC901B	E-4	
FC902A	F-3	
FC902B	F-3	
IC401	B-2	
IC5A00	H-3	
IC5A01	I-3	
IC900	F-6	
IC901	H-1	
IC902	G-6	
IC903	C-4	
IC9A02	B-4	
K900	B-6	
L401	B-2	
L411	A-2	






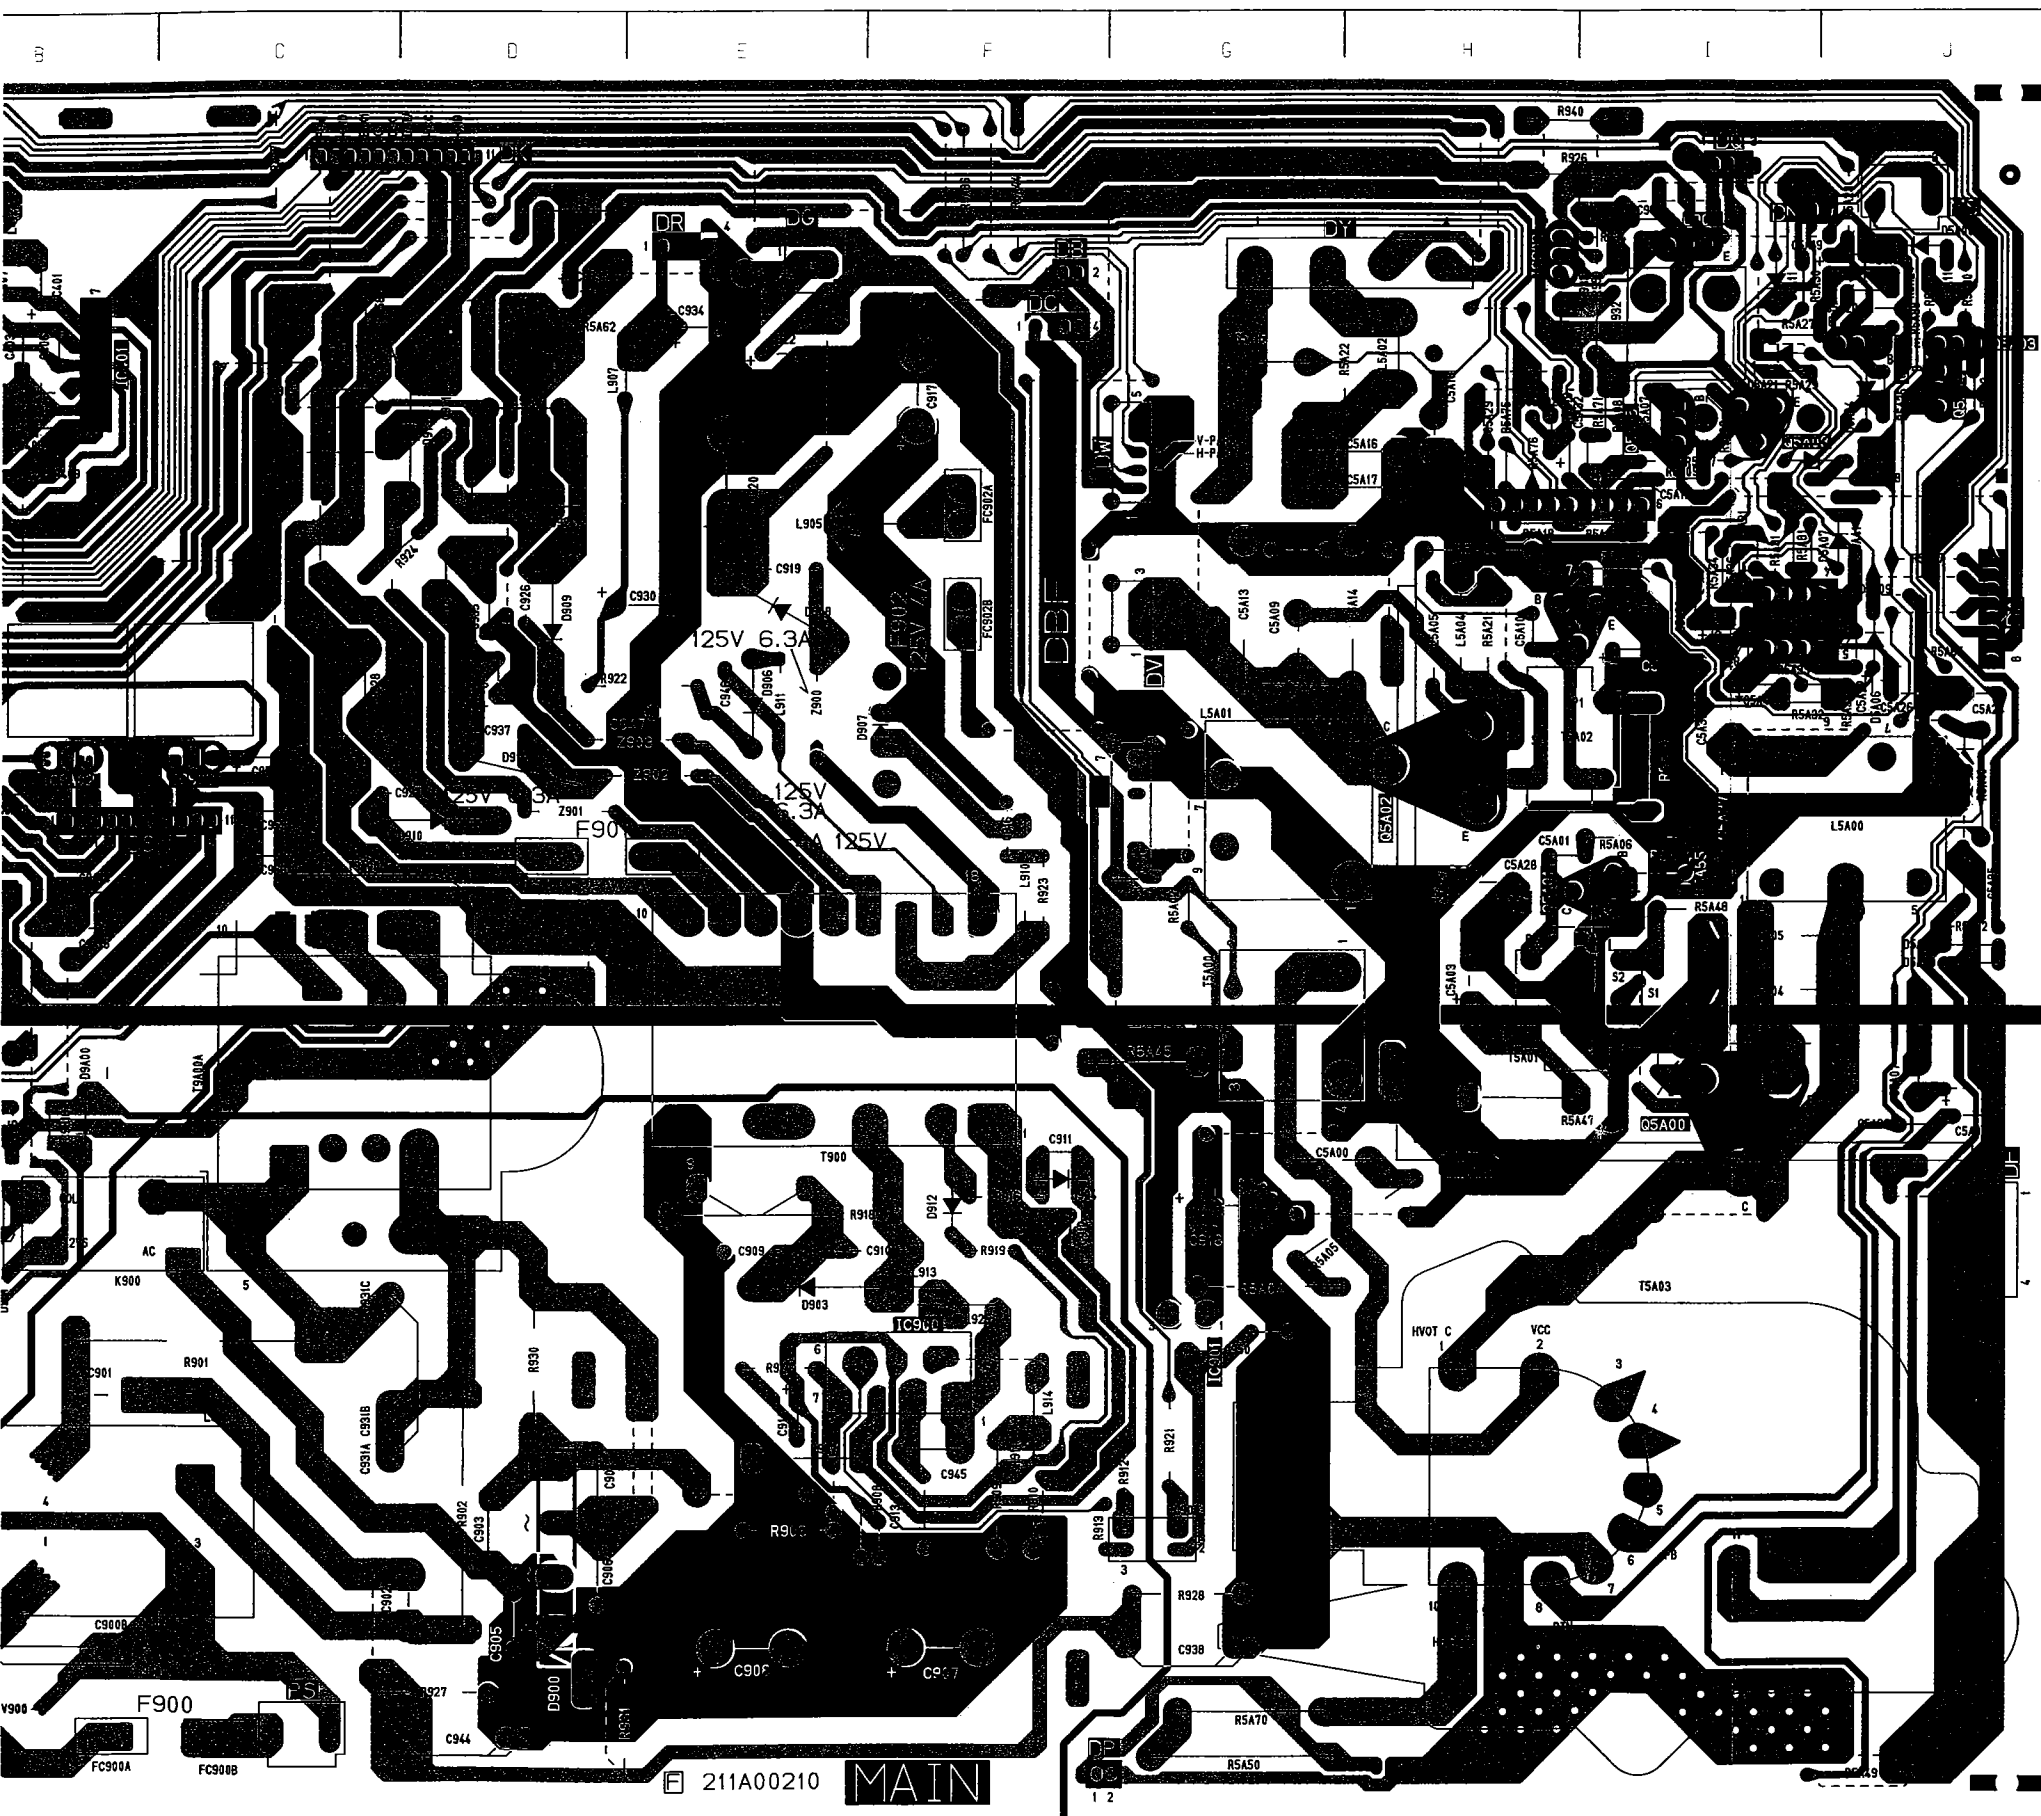


PCB-MAIN




SYMBOL NO.	ADDRESS	SYMBOL NO.	ADDRESS
AG900	B-8	L411	A-3
		L412	B-1
D401	A-3	L5A00	I-4
D402	B-2	L5A01	H-3
D403	B-2	L5A01	G-4
D5A00	J-1	L5A02	H-2
D5A02	J-4	L5A03	I-5
D5A03	J-1	L5A05	H-3
D5A04	J-2	L5A06	I-5
D5A05	J-3	L900	B-6
D5A07	J-3	L902	D-1
D5A08	J-4	L903	D-2
D5A09	J-3	L904	C-3
D5A11	I-1	L905	F-3
D5A20	I-3	L907	D-2
D5A21	I-2	L908	D-3
D5A22	I-2	L909	C-3
D5A23	J-1	L910	F-4
D5A27	I-2	L911	E-3
D900	D-7	L913	F-6
D901	B-6	L914	F-7
D903	E-6	L925	F-6
D904	F-6		
D906	E-3	PC900	G-7
D907	F-3		
D908	E-3	Q5A00	I-5
D909	D-3	Q5A01	I-4
D910	D-4	Q5A02	H-4
D912	F-6	Q5A03	J-2
D913	D-2	Q5A04	J-2
D914	D-4	Q5A05	I-2
D9A00	B-5	Q5A06	J-2
D9A01	A-6	Q5A08	I-2
D9A02	A-7	Q900	B-6
D9A03	A-7	Q904	I-1
		Q9A00	A-7
F900	B-8		
F901	D-4	T5A00	G-5
F902	F-3	T5A01	H-5
		T5A02	H-3
FC900A	B-8	T5A02	H-4
FC900B	C-8	T5A03	H-7
FC901A	D-4	T900	E-5
FC901B	E-4	T900A	C-5
FC902A	F-3		
FC902B	F-3	Z900	E-3
		Z901	D-4
IC401	B-2	Z902	E-4
IC5A00	H-3	Z903	D-4
IC5A01	I-3	Z905	C-2
IC900	F-6		
IC901	H-1		
IC902	G-6		
IC903	C-4		
IC9A02	B-4		
K900	B-6		
L401	B-2		
L411	A-2		

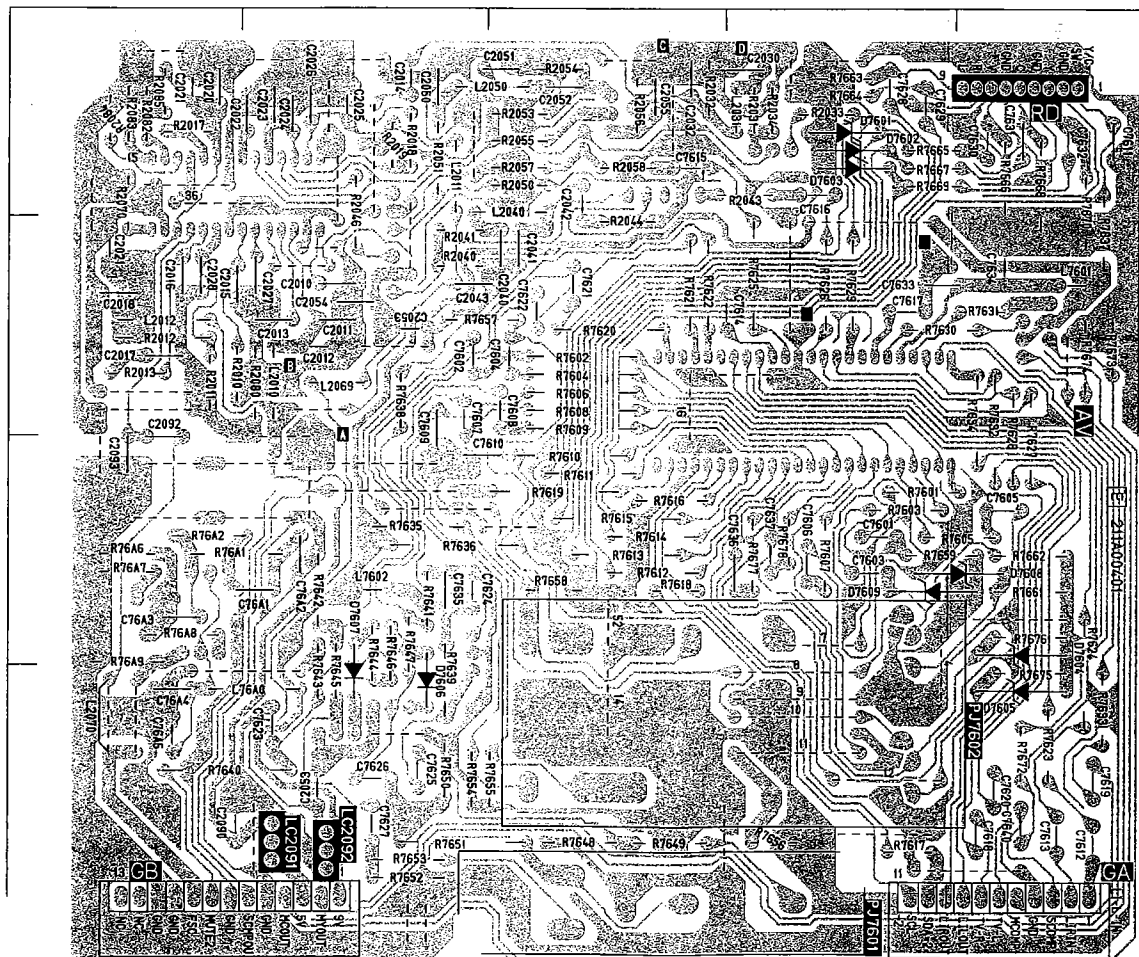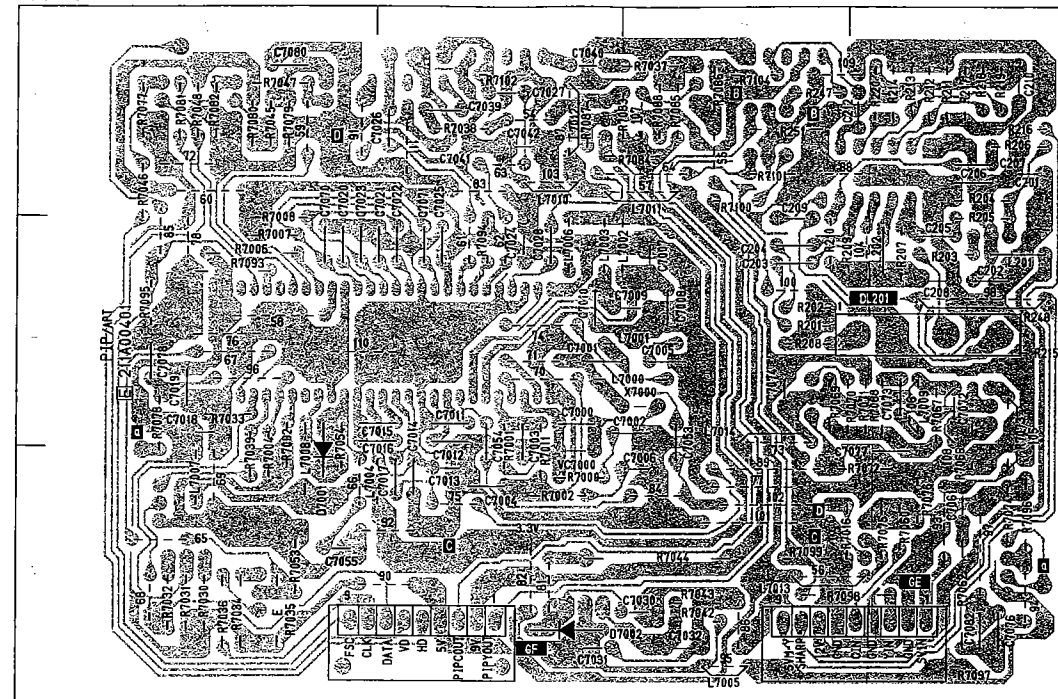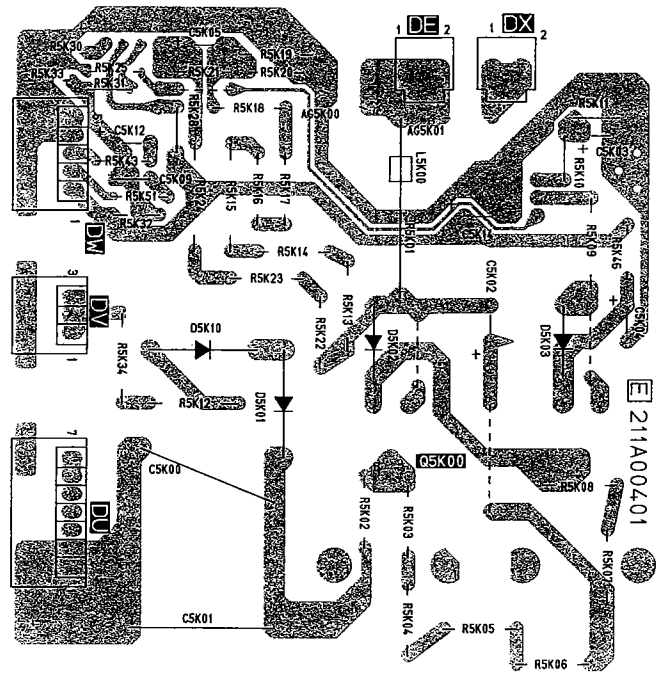

REF	VAL	QTY	UNIT	DESCRIPTION
1	10K	1	RES	RESISTOR
2	10K	1	RES	RESISTOR
3	10K	1	RES	RESISTOR
4	10K	1	RES	RESISTOR
5	10K	1	RES	RESISTOR
6	10K	1	RES	RESISTOR
7	10K	1	RES	RESISTOR
8	10K	1	RES	RESISTOR
9	10K	1	RES	RESISTOR
10	10K	1	RES	RESISTOR
11	10K	1	RES	RESISTOR
12	10K	1	RES	RESISTOR
13	10K	1	RES	RESISTOR
14	10K	1	RES	RESISTOR
15	10K	1	RES	RESISTOR
16	10K	1	RES	RESISTOR
17	10K	1	RES	RESISTOR
18	10K	1	RES	RESISTOR
19	10K	1	RES	RESISTOR
20	10K	1	RES	RESISTOR
21	10K	1	RES	RESISTOR
22	10K	1	RES	RESISTOR
23	10K	1	RES	RESISTOR
24	10K	1	RES	RESISTOR
25	10K	1	RES	RESISTOR
26	10K	1	RES	RESISTOR
27	10K	1	RES	RESISTOR
28	10K	1	RES	RESISTOR
29	10K	1	RES	RESISTOR
30	10K	1	RES	RESISTOR
31	10K	1	RES	RESISTOR
32	10K	1	RES	RESISTOR
33	10K	1	RES	RESISTOR
34	10K	1	RES	RESISTOR
35	10K	1	RES	RESISTOR
36	10K	1	RES	RESISTOR
37	10K	1	RES	RESISTOR
38	10K	1	RES	RESISTOR
39	10K	1	RES	RESISTOR
40	10K	1	RES	RESISTOR
41	10K	1	RES	RESISTOR
42	10K	1	RES	RESISTOR
43	10K	1	RES	RESISTOR
44	10K	1	RES	RESISTOR
45	10K	1	RES	RESISTOR
46	10K	1	RES	RESISTOR
47	10K	1	RES	RESISTOR
48	10K	1	RES	RESISTOR
49	10K	1	RES	RESISTOR
50	10K	1	RES	RESISTOR
51	10K	1	RES	RESISTOR
52	10K	1	RES	RESISTOR
53	10K	1	RES	RESISTOR
54	10K	1	RES	RESISTOR
55	10K	1	RES	RESISTOR
56	10K	1	RES	RESISTOR
57	10K	1	RES	RESISTOR
58	10K	1	RES	RESISTOR
59	10K	1	RES	RESISTOR
60	10K	1	RES	RESISTOR
61	10K	1	RES	RESISTOR
62	10K	1	RES	RESISTOR
63	10K	1	RES	RESISTOR
64	10K	1	RES	RESISTOR
65	10K	1	RES	RESISTOR
66	10K	1	RES	RESISTOR
67	10K	1	RES	RESISTOR
68	10K	1	RES	RESISTOR
69	10K	1	RES	RESISTOR
70	10K	1	RES	RESISTOR
71	10K	1	RES	RESISTOR
72	10K	1	RES	RESISTOR
73	10K	1	RES	RESISTOR
74	10K	1	RES	RESISTOR
75	10K	1	RES	RESISTOR
76	10K	1	RES	RESISTOR
77	10K	1	RES	RESISTOR
78	10K	1	RES	RESISTOR
79	10K	1	RES	RESISTOR
80	10K	1	RES	RESISTOR
81	10K	1	RES	RESISTOR
82	10K	1	RES	RESISTOR
83	10K	1	RES	RESISTOR
84	10K	1	RES	RESISTOR
85	10K	1	RES	RESISTOR
86	10K	1	RES	RESISTOR
87	10K	1	RES	RESISTOR
88	10K	1	RES	RESISTOR
89	10K	1	RES	RESISTOR
90	10K	1	RES	RESISTOR
91	10K	1	RES	RESISTOR
92	10K	1	RES	RESISTOR
93	10K	1	RES	RESISTOR
94	10K	1	RES	RESISTOR
95	10K	1	RES	RESISTOR
96	10K	1	RES	RESISTOR
97	10K	1	RES	RESISTOR
98	10K	1	RES	RESISTOR
99	10K	1	RES	RESISTOR
100	10K	1	RES	RESISTOR

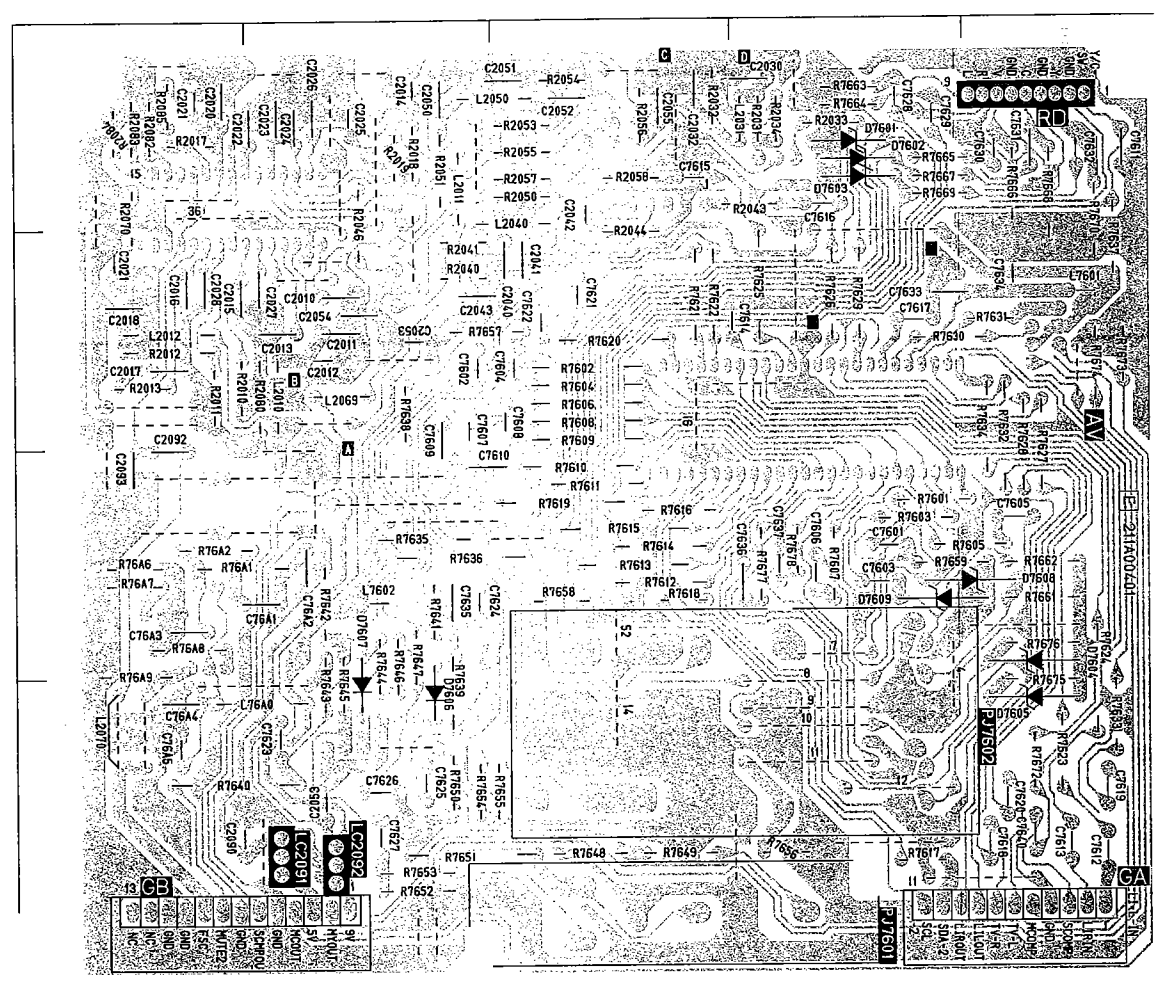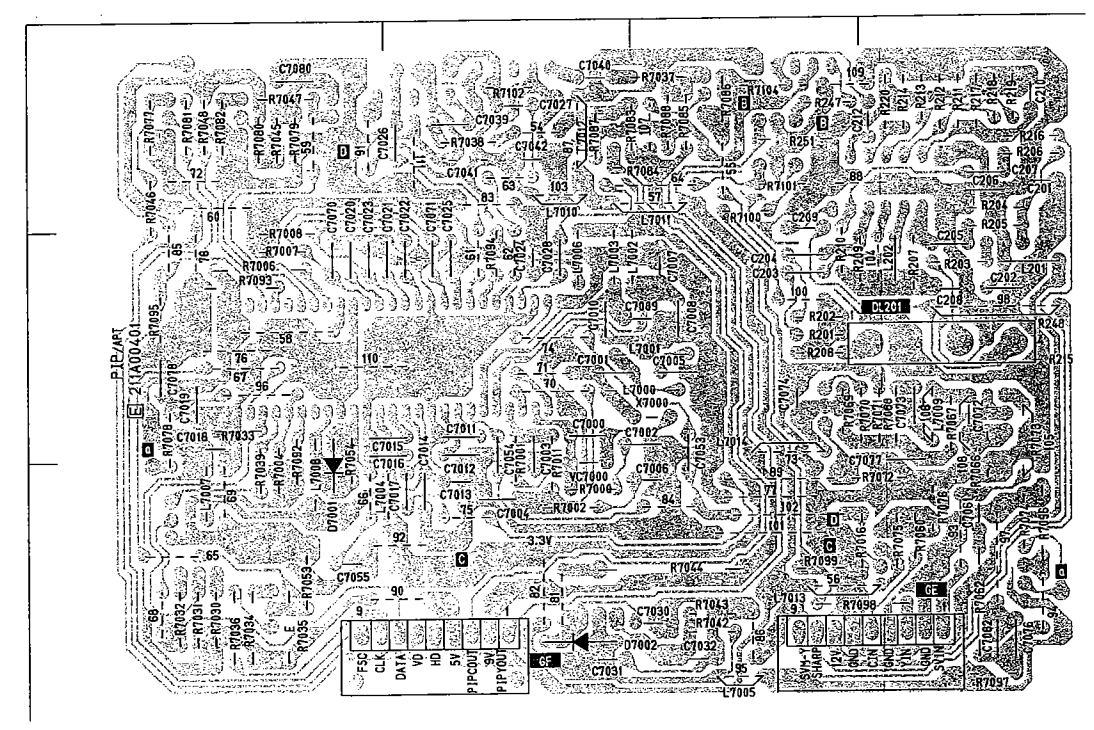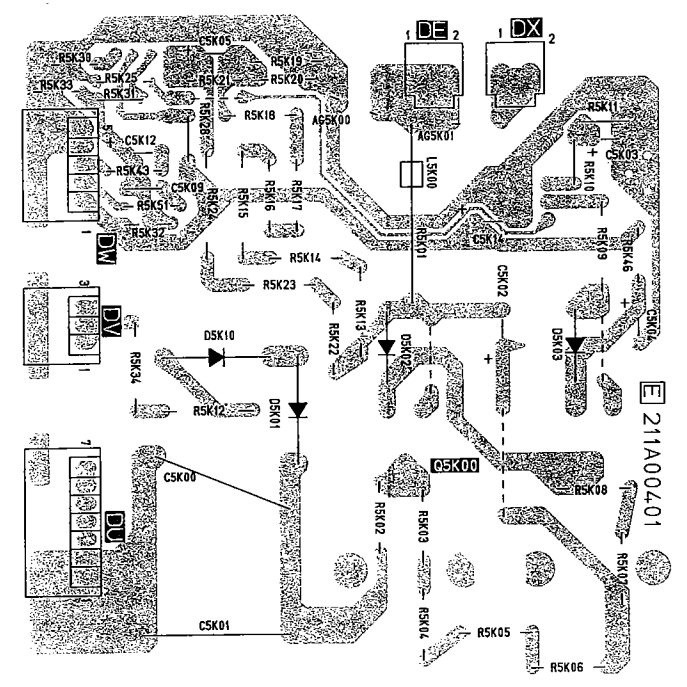
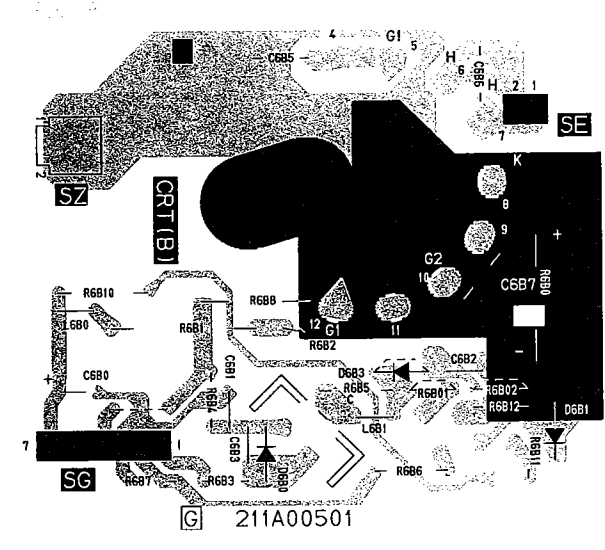
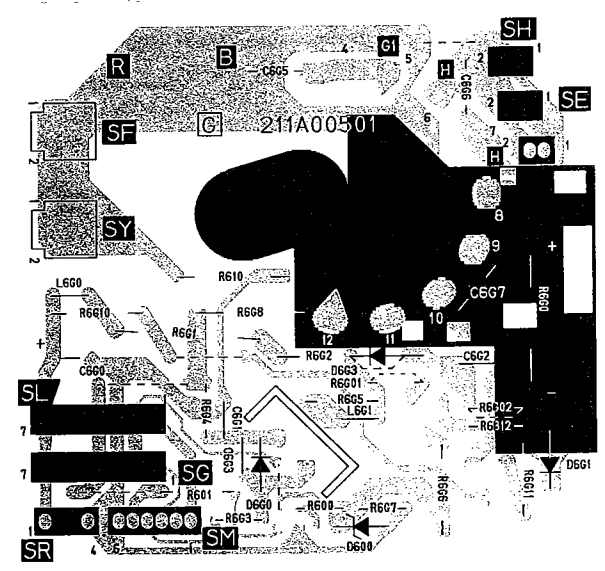
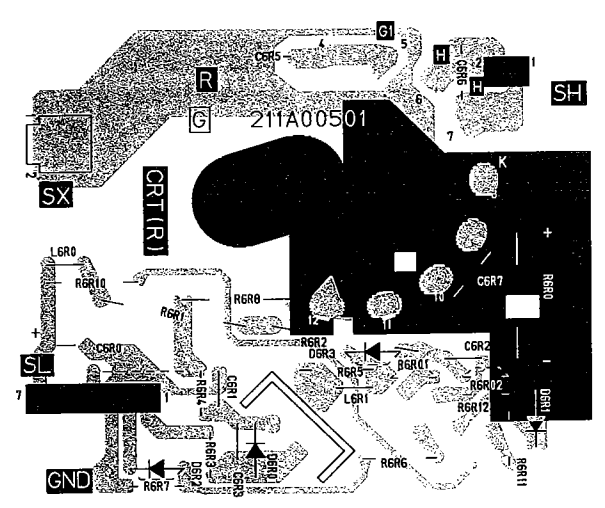


211A00501

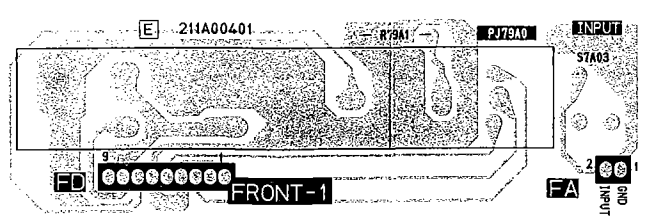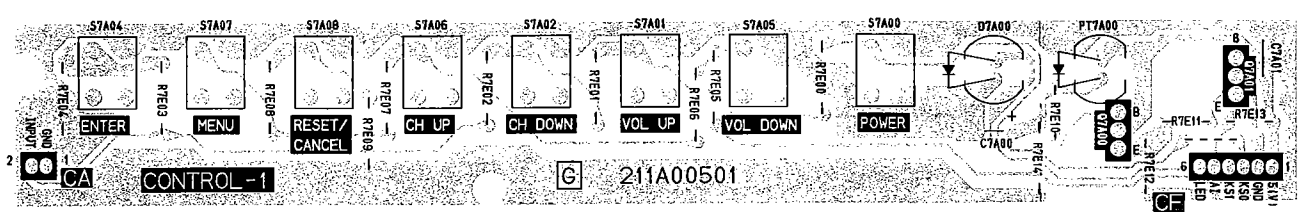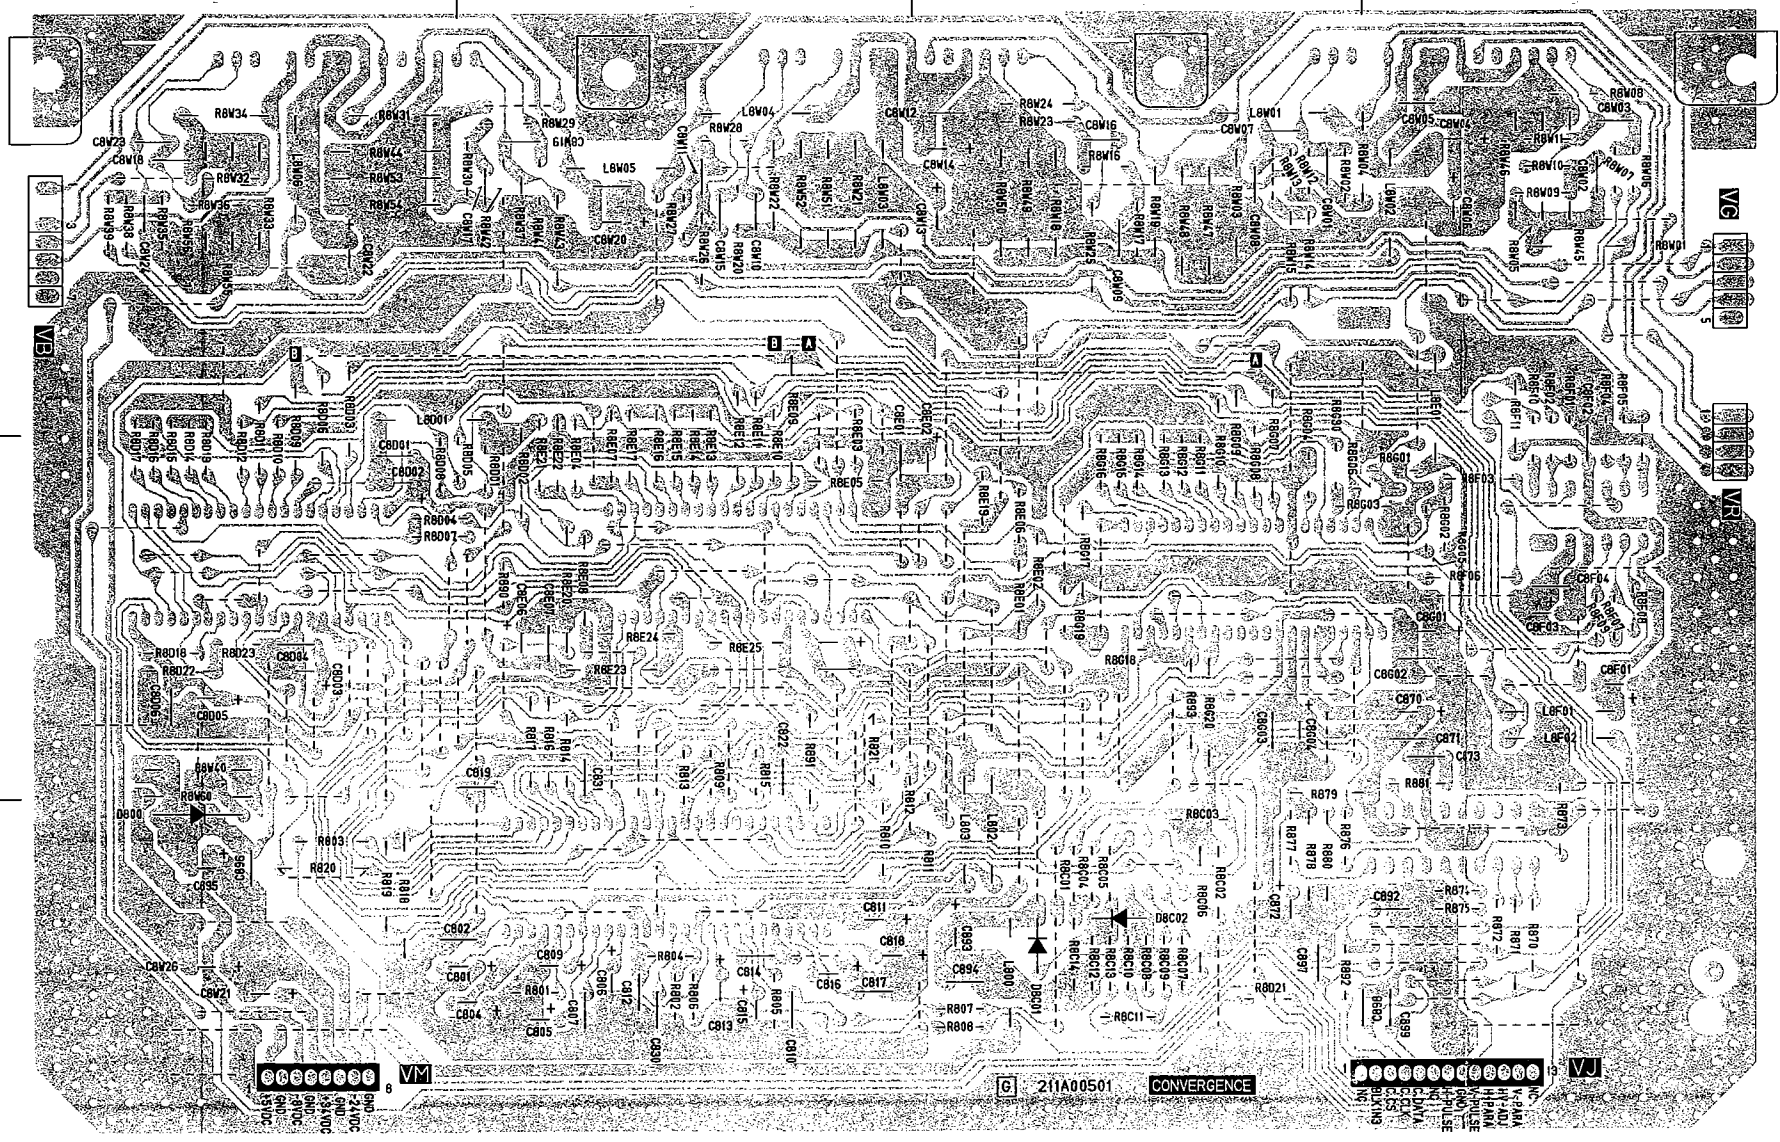

Blank lined area for notes or specifications.



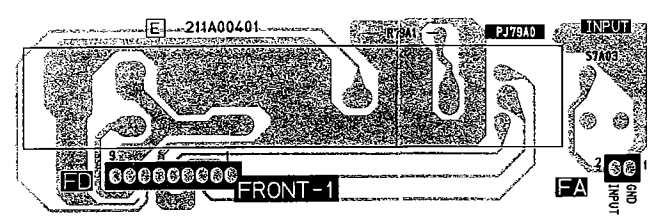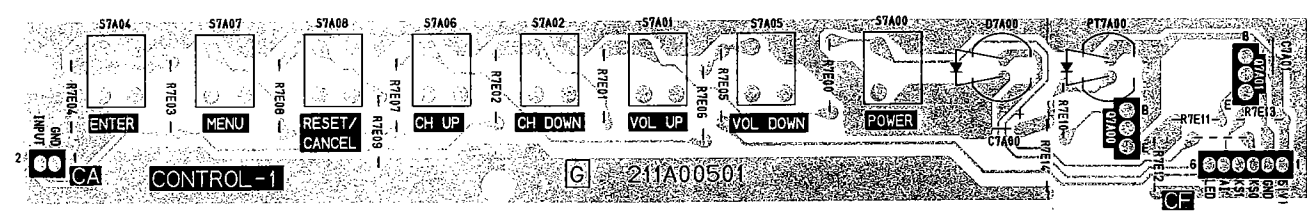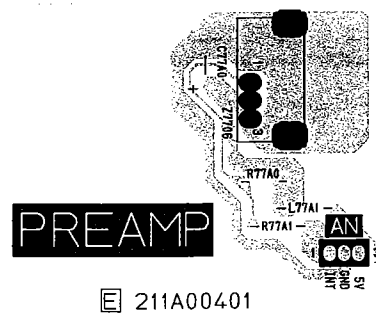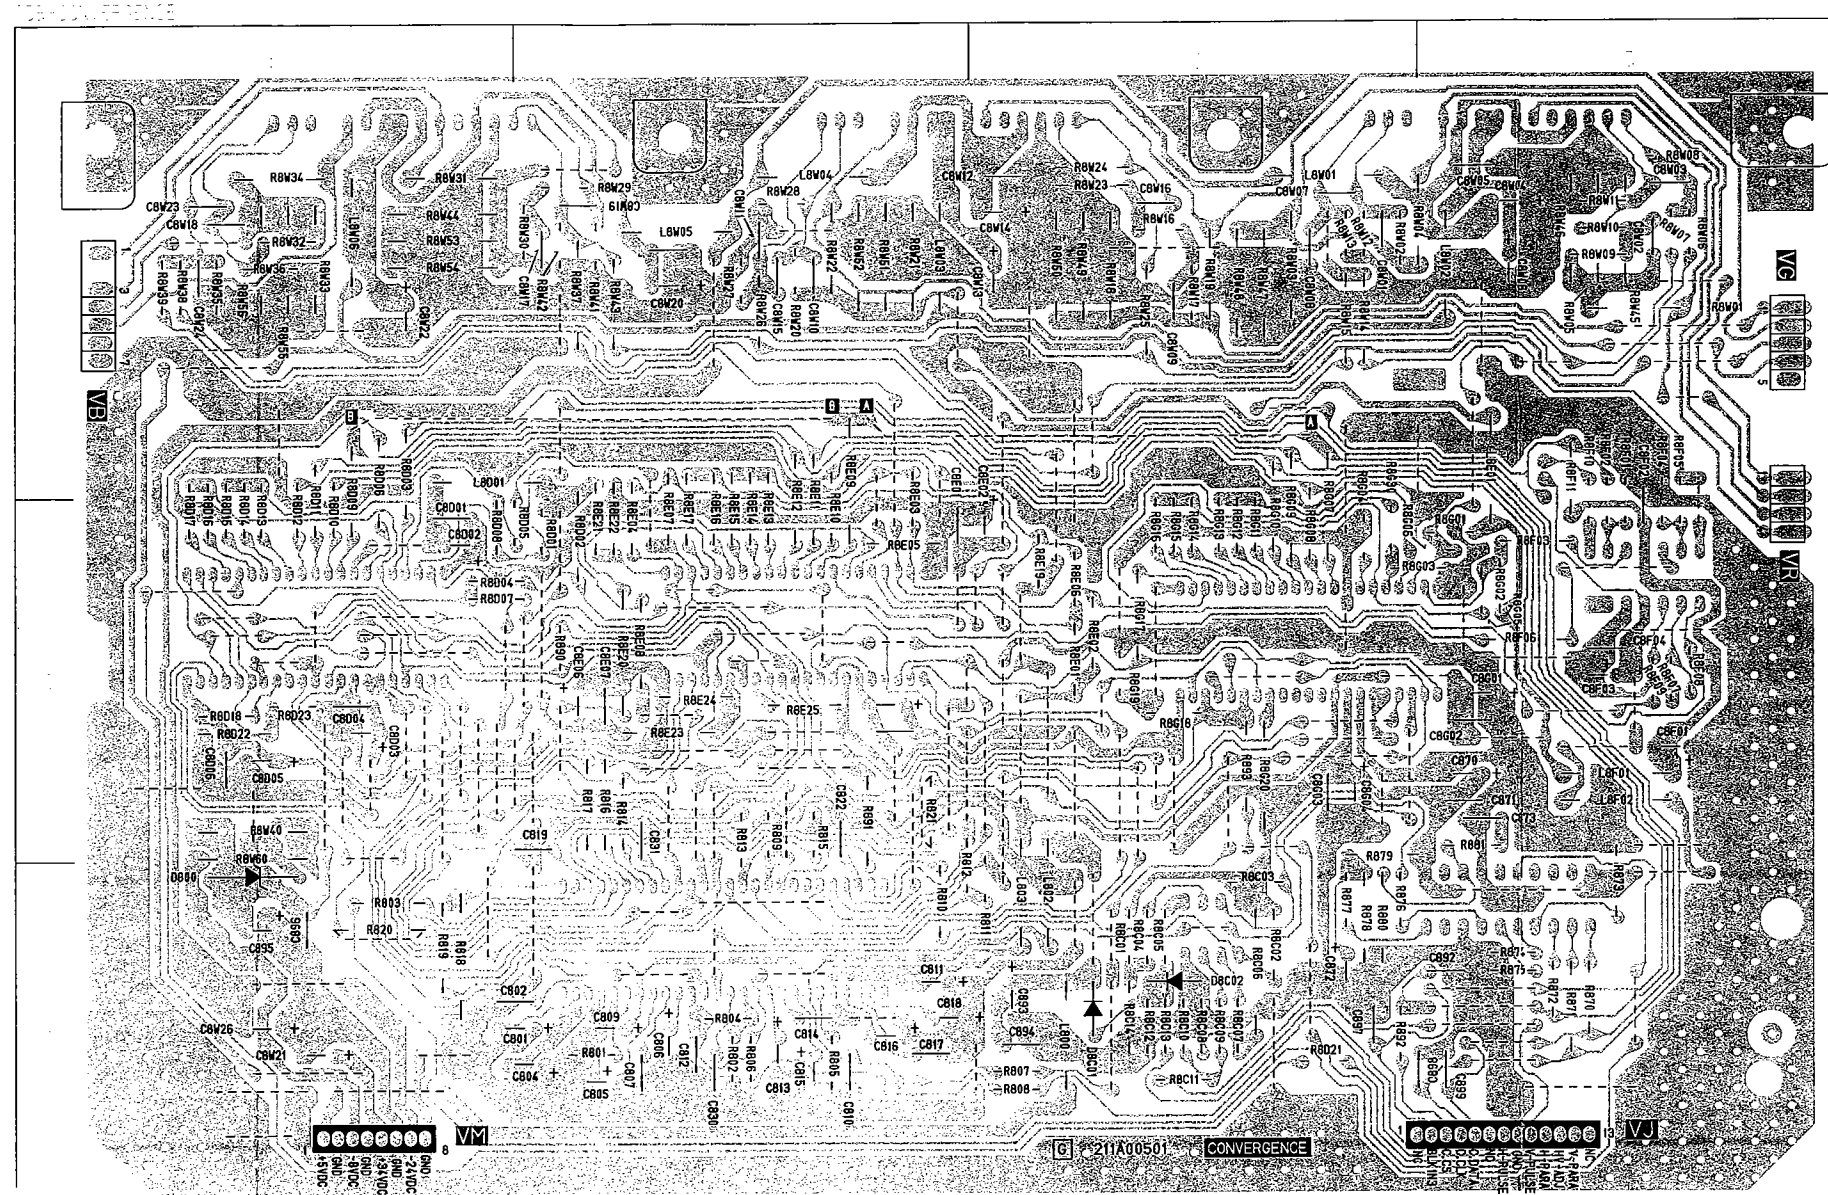

PCB-PIP/APT

SYMBOL NO.	ADDRESS
D7001	A-3
D7002	B-3
DL201	D-2

IC201	D-1
IC202	D-1
IC7001	A-2
IC7002	B-1
IC7003	B-1
IC7004	B-3

L201	D-2
L202	D-2
L7000	D-2
L7001	D-2
L7004	B-3
L7005	D-3
L7007	A-3
L7008	A-3
L7009	D-2

Q201	D-1
Q208	C-1
Q7000	D-3
Q7006	A-3
Q7007	A-3
Q7008	A-3
Q7011	D-3
Q7013	A-1
Q7014	A-1
Q7015	D-2
Q7016	C-2
Q7017	C-1
Q7018	B-1
Q7019	A-1
Q7020	C-1

TP61	A-1
TP62	B-1
TP63	B-1
TPGND	A-1

VC7000	B-2
--------	-----

X7000	C-2
-------	-----

PCB-A/V

SYMBOL NO.	ADDRESS
D7601	D-4
D7602	D-4
D7603	D-4
D7604	E-6
D7606	B-7
D7607	B-7
D7608	E-6
D7609	D-6

IC2001	A-4
IC2002	C-4
IC7601	D-5

L2010	B-5
L2011	B-4
L2012	A-5
L2031	D-4
L2040	C-4
L2050	B-4
L2069	B-5
L2070	A-7
L7601	E-5
L7602	B-6
L76A0	A-7

LC2091	B-7
LC2092	B-7

PJ7601	D-7
PJ7602	D-7

Q2030	D-4
Q2040	B-5
Q2050	B-4
Q2051	C-4
Q2052	C-4
Q7601	B-7
Q7602	B-7
Q7603	B-6
Q7670	E-5
Q7671	E-5
Q76A0	A-6
Q76A1	A-6
Q76A2	A-6

PCB-CONVERGENCE

SYMBOL NO.	ADDRESS
D800	A-3
D8C01	C-3
D8C02	C-3

IC800	B-3
IC870	D-3
IC8C00	C-3
IC8D00	A-2
IC8E00	B-2
IC8F00	D-2
IC8G00	C-2
IC8W00	D-1
IC8W01	B-1
IC8W02	A-1


L800	C-3
L802	C-3
L803	C-3
L8001	A-1
L8E01	D-1
L8F01	D-2
L8F02	D-2
L8W01	C-1
L8W02	D-1

L8W03	B-1
L8W04	B-1
L8W05	B-1
L8W06	A-1


Q800	B-3
Q8F00	D-1

CB-SIGNAL


200 CXA2095S

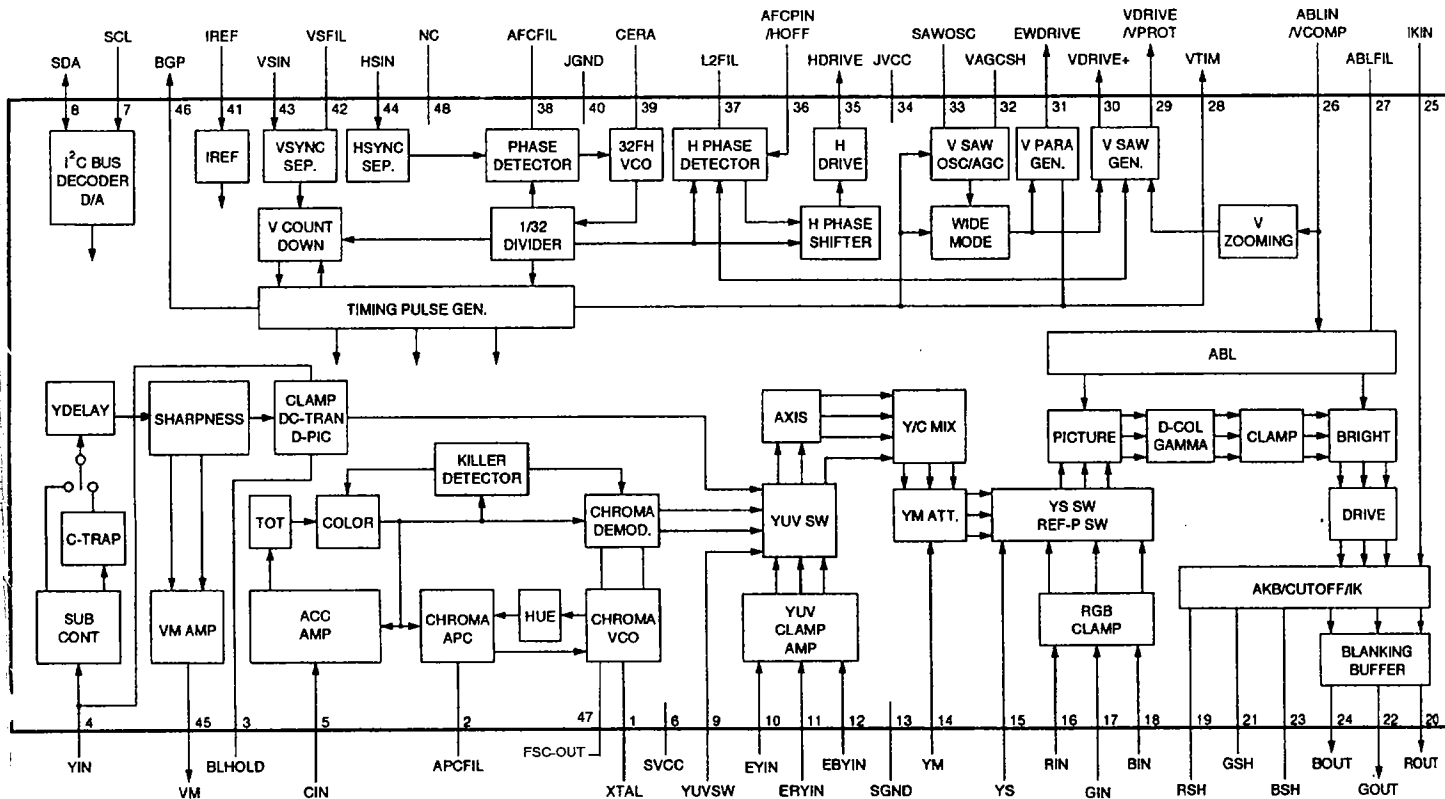


E1 TDA9855

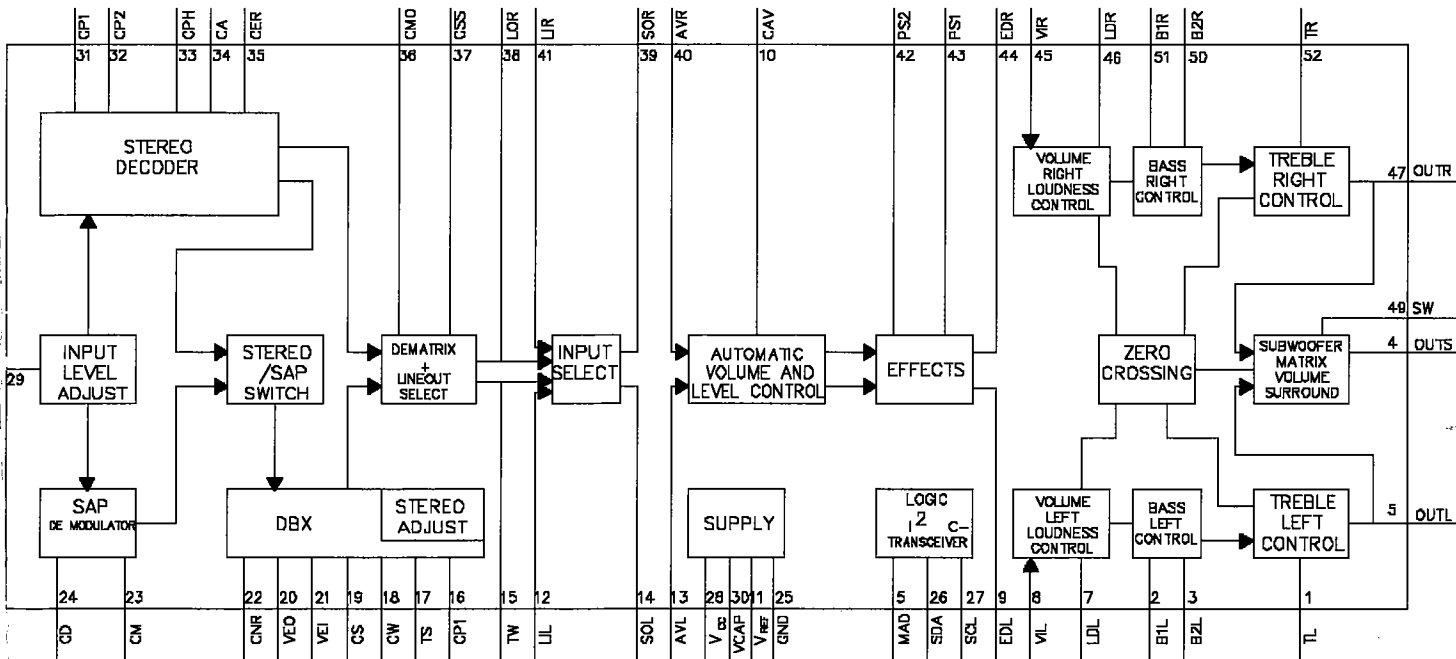


IC700 M37270EFSP

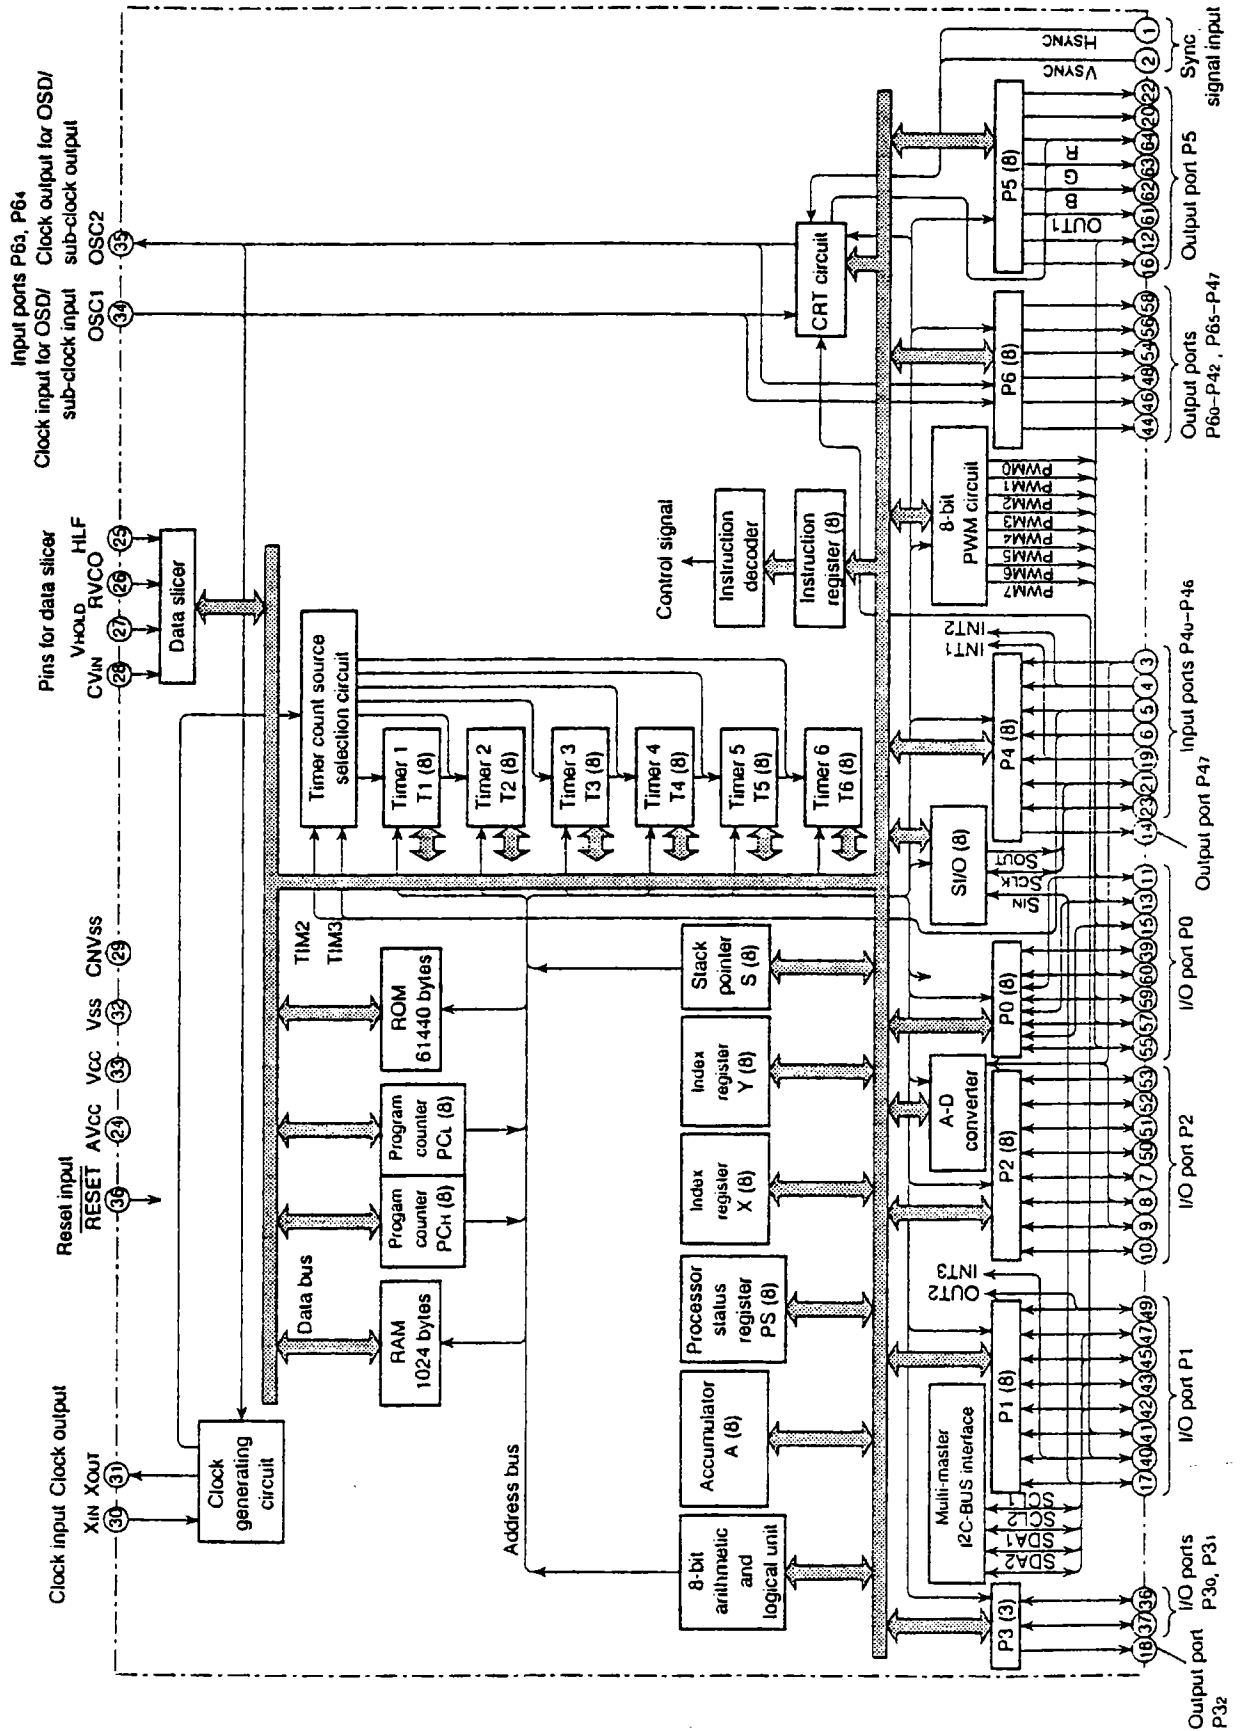


703 M38123E6SP

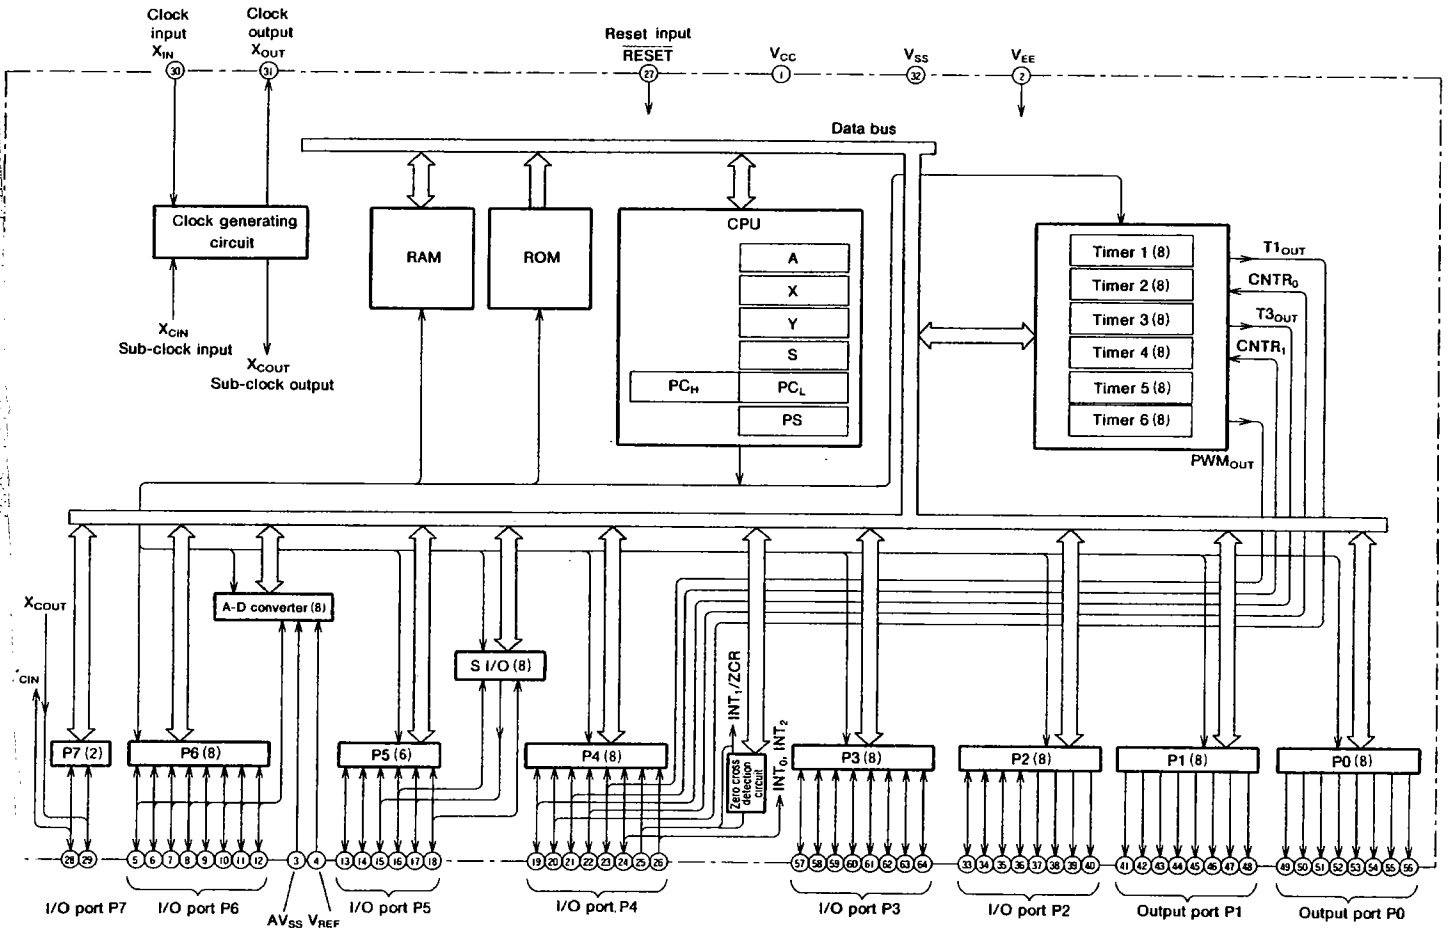

1 24C04A*P

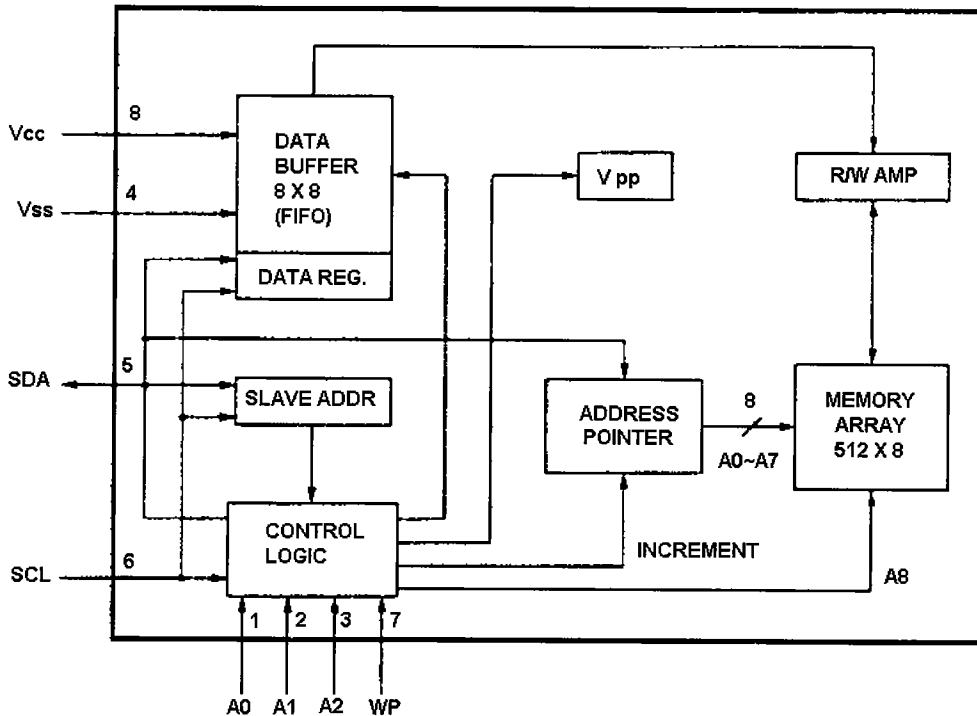


IC204 PA0057A

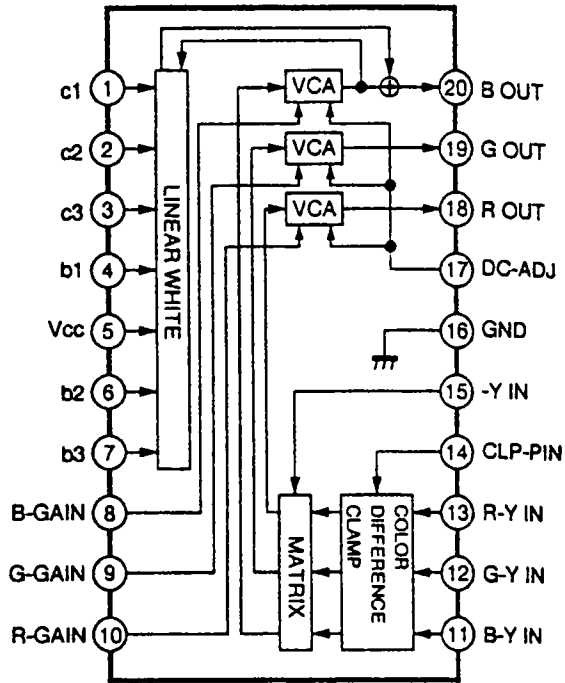


PCB-A/V

IC2001 T90A13N

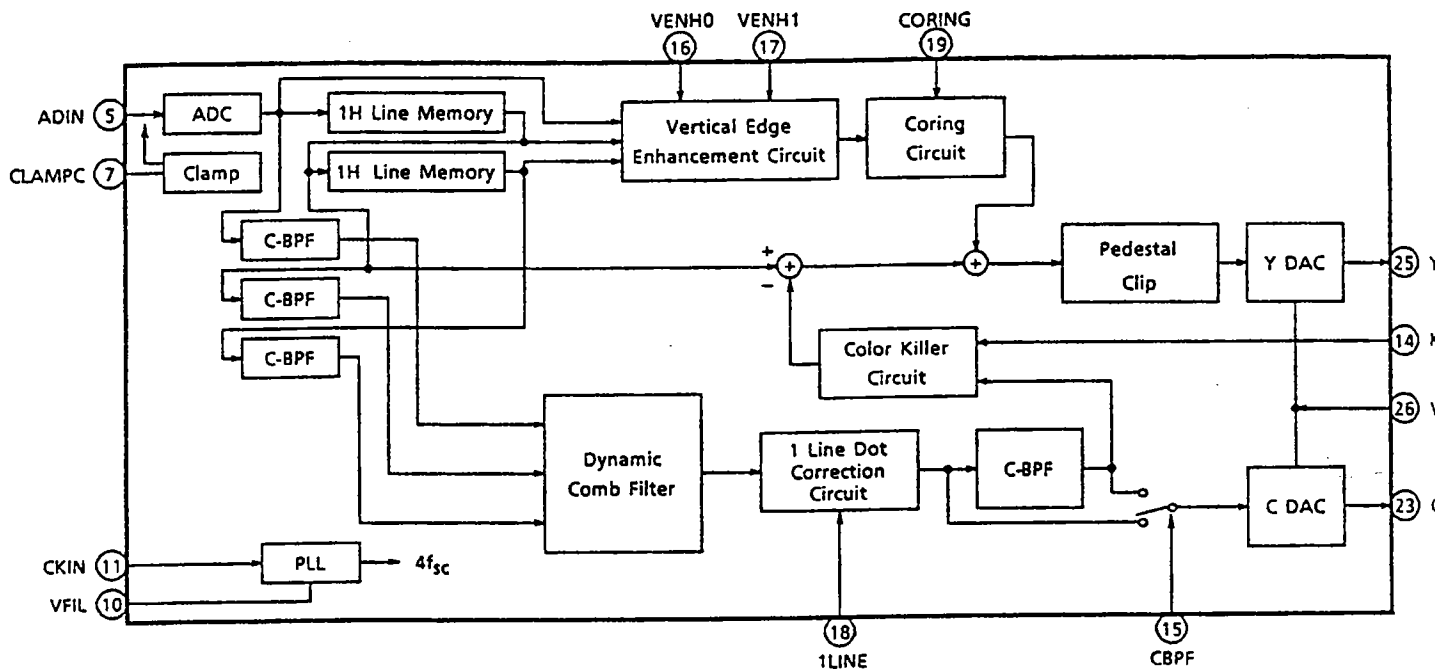


7601 CXA1855S

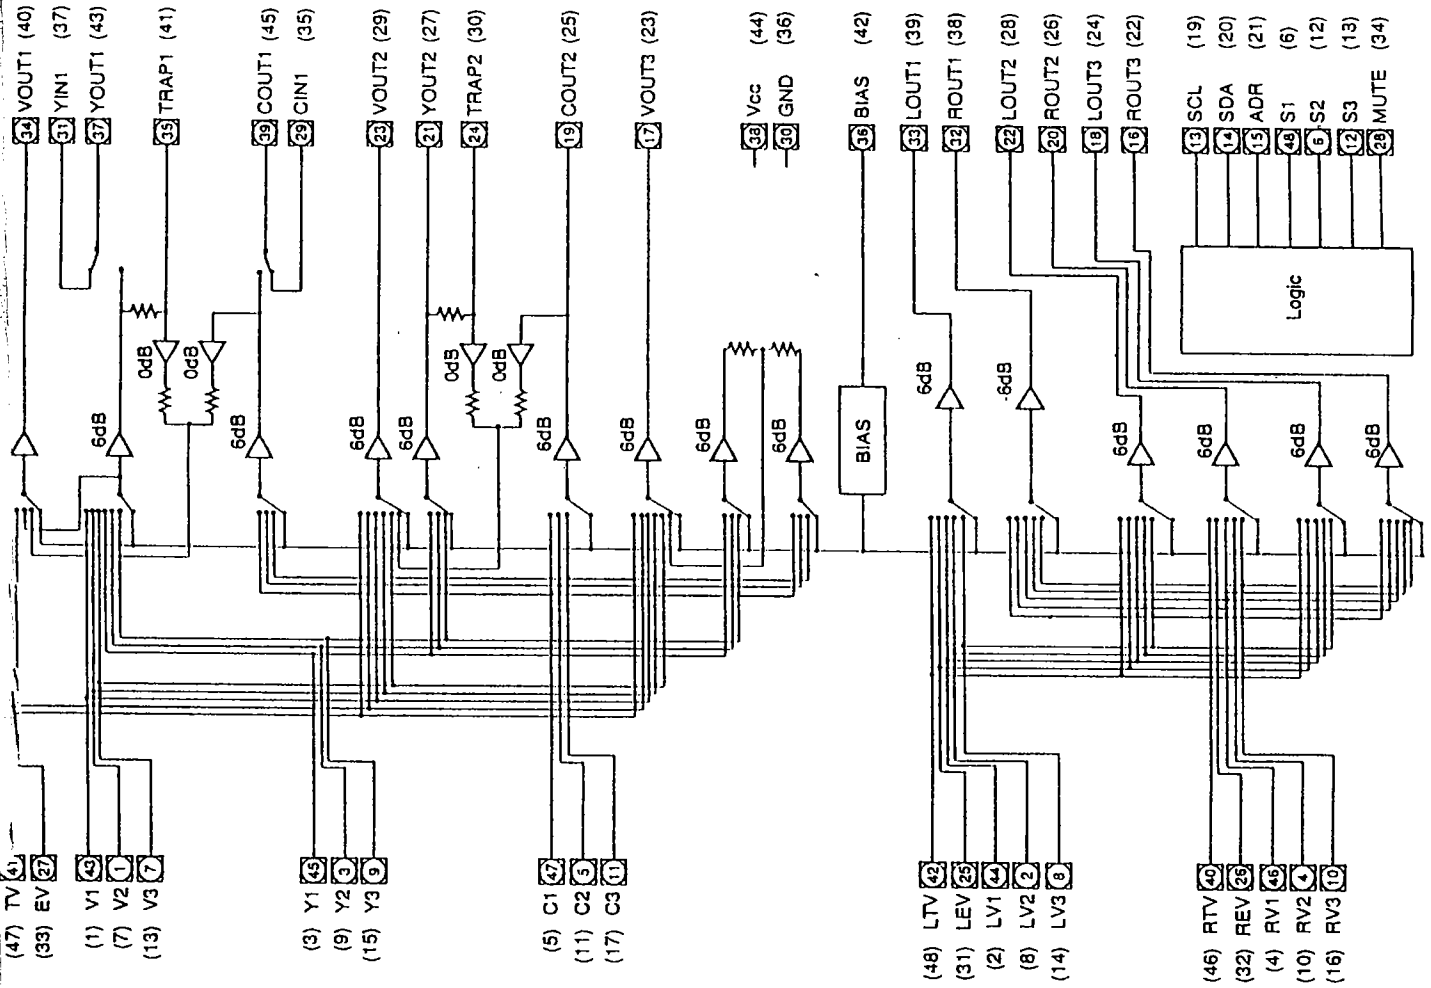


PCB-MAIN

IC401 LA7845

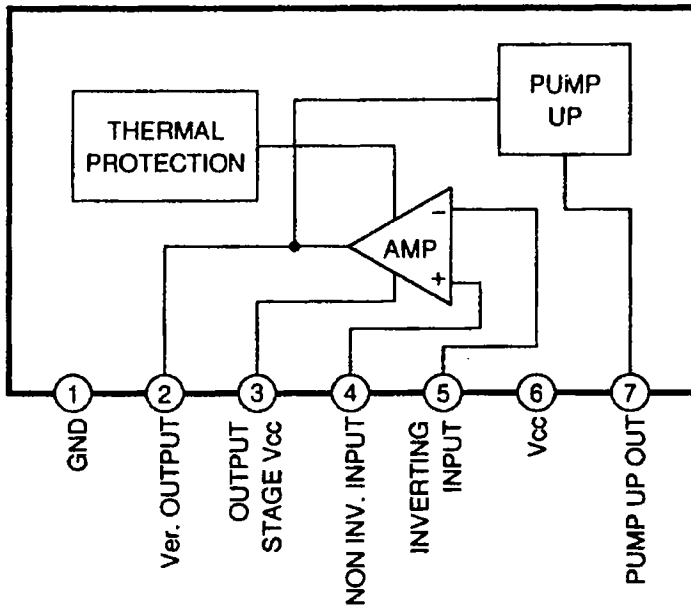


PCB-CONVERGENCE


IC800 M52336AS

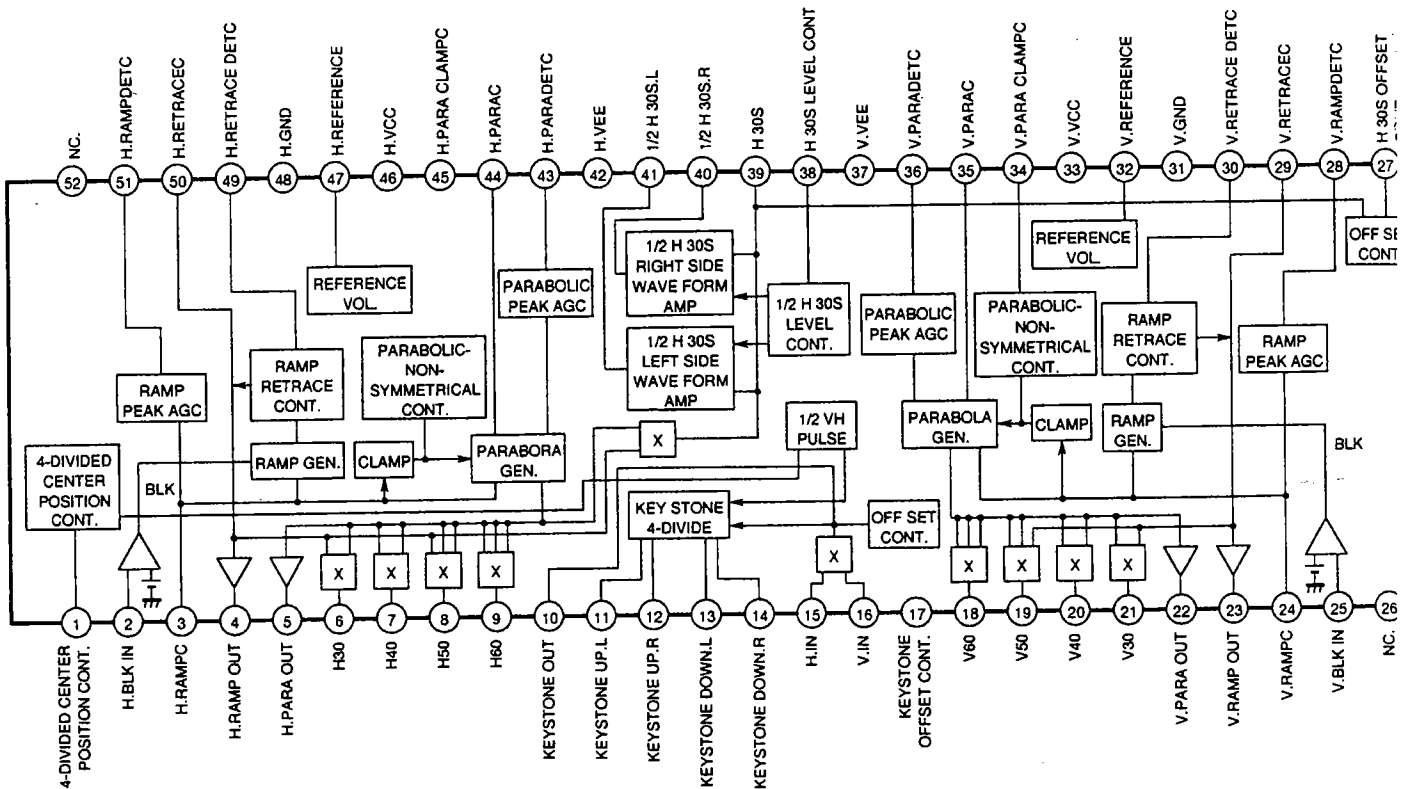

D00 CM0001AS

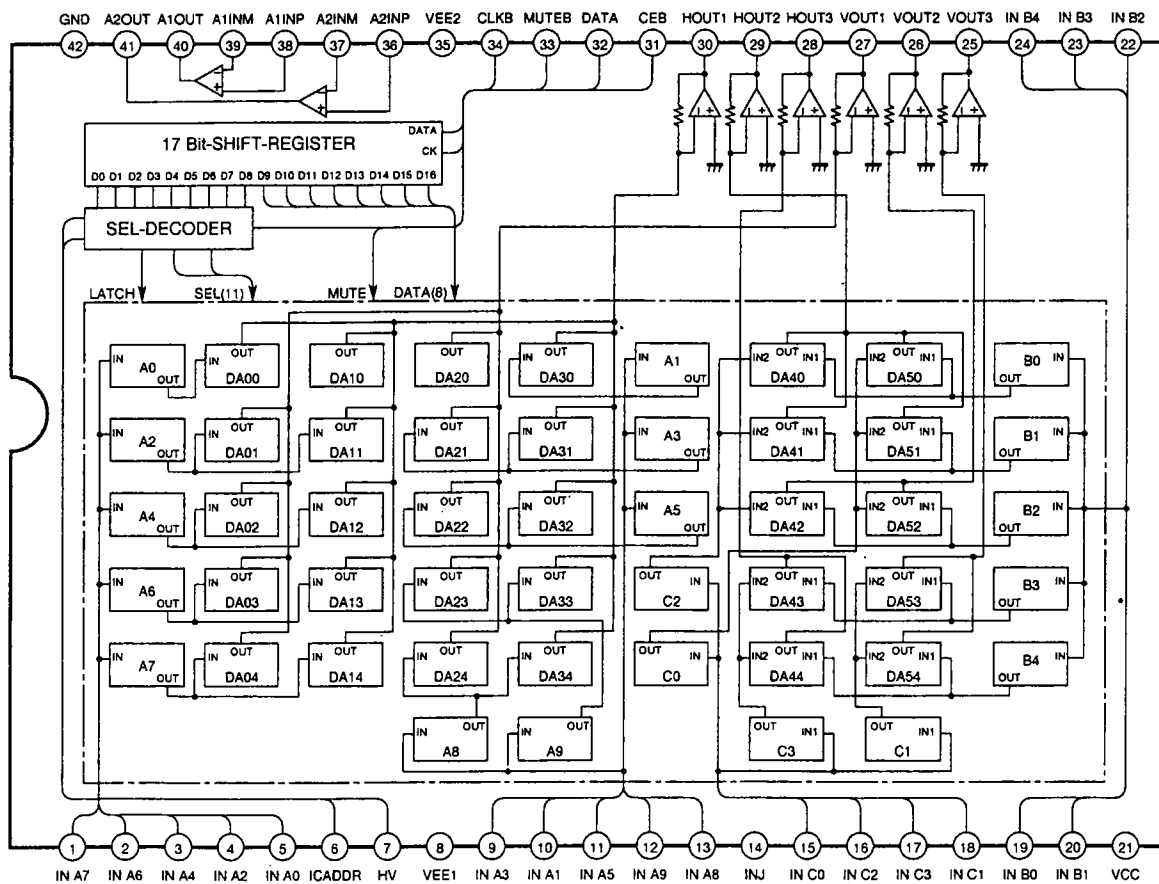


D00 PM0002B

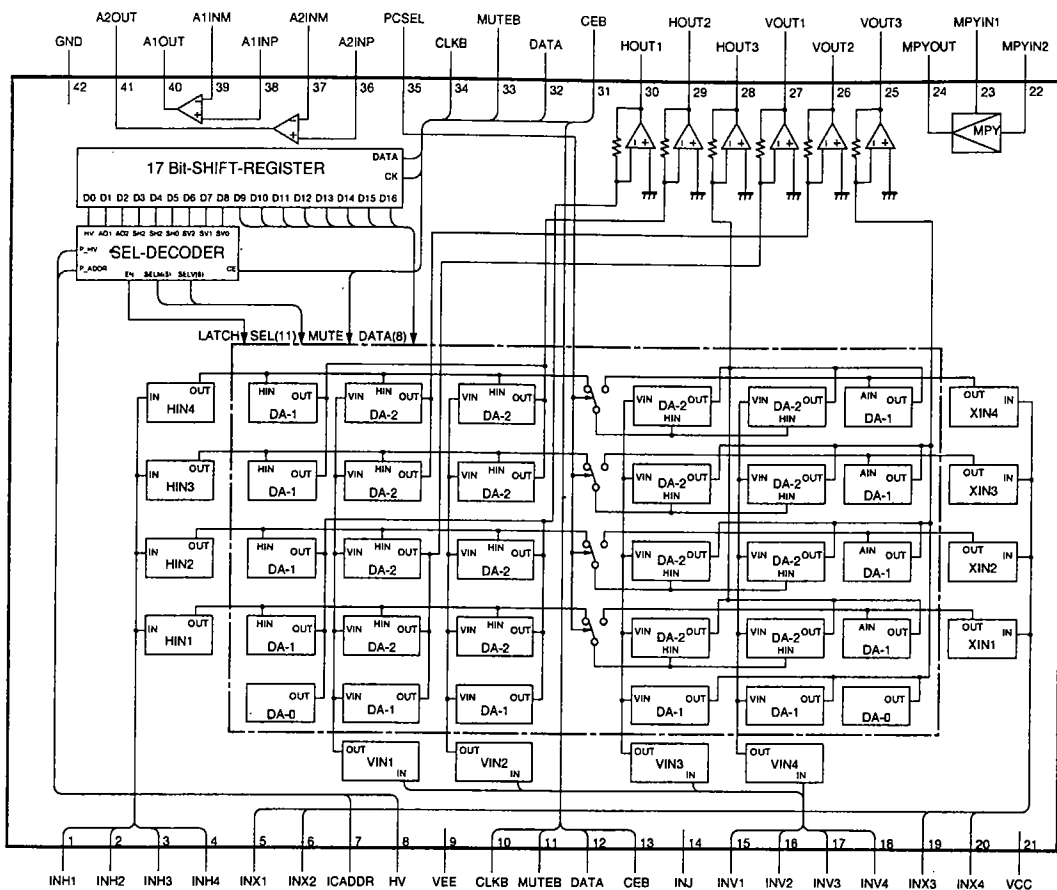


PCB-PIP


IC7001 M65617SP-A

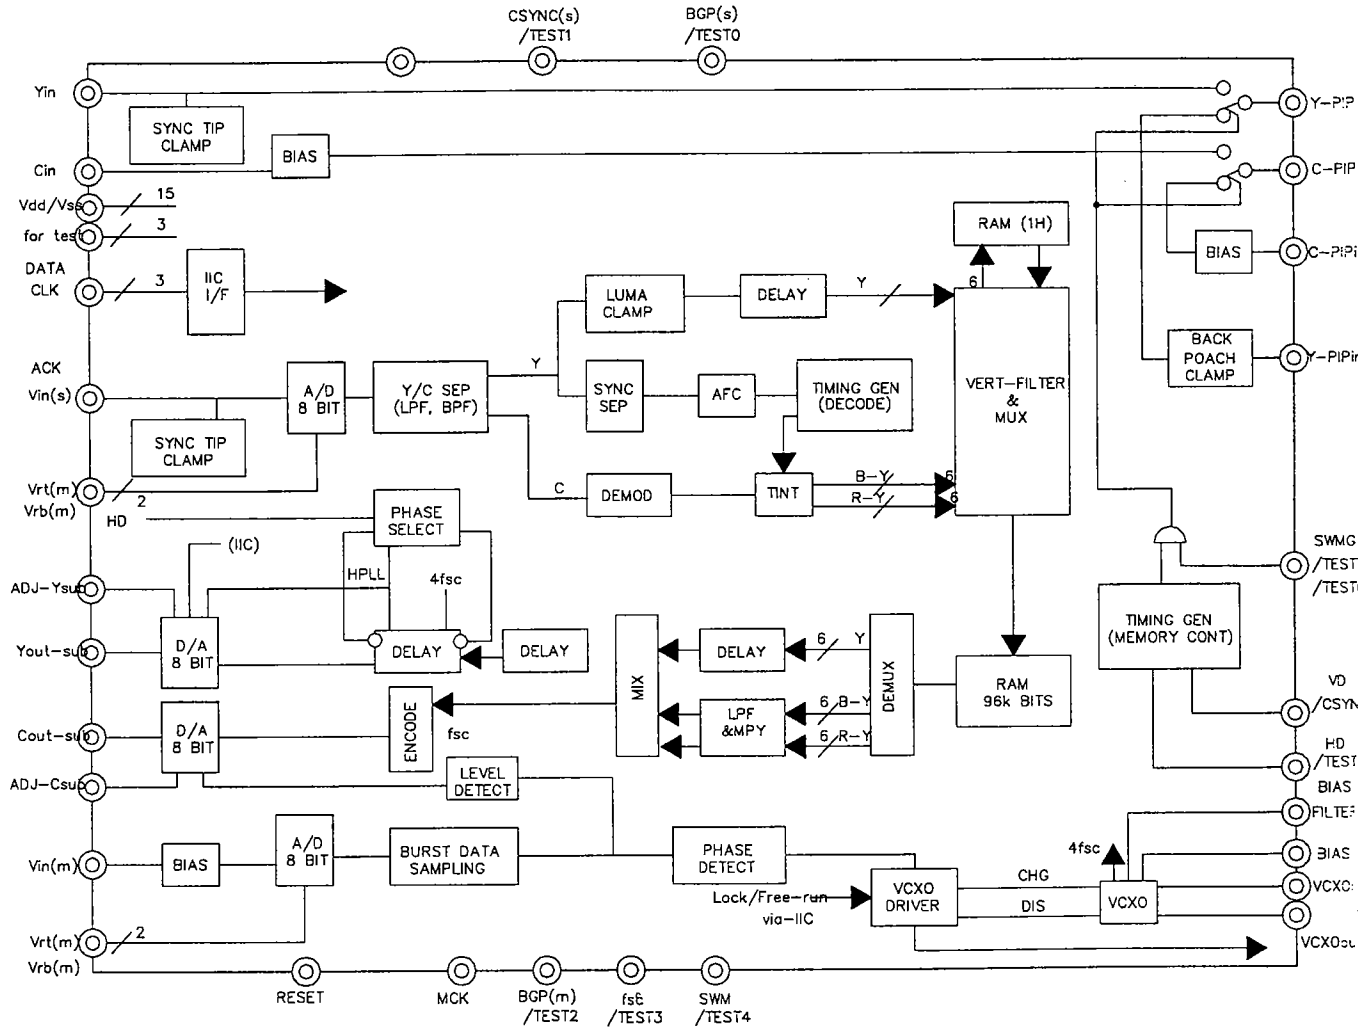


1

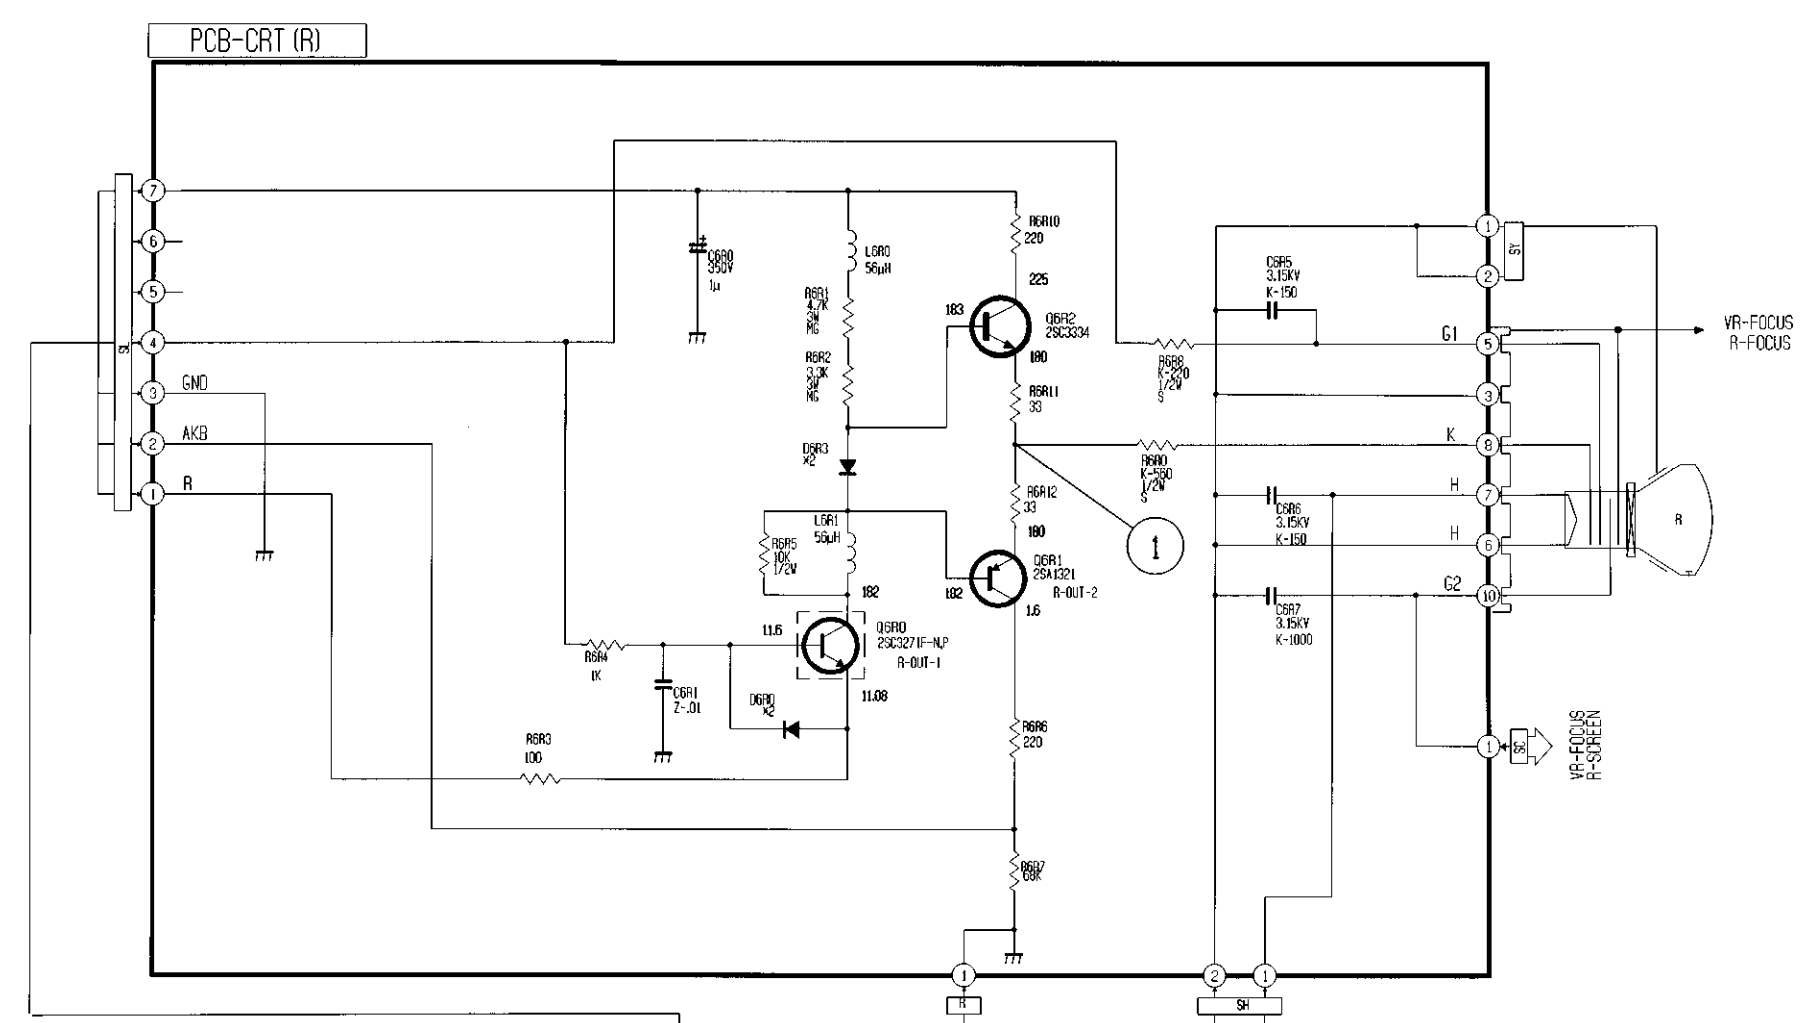


2

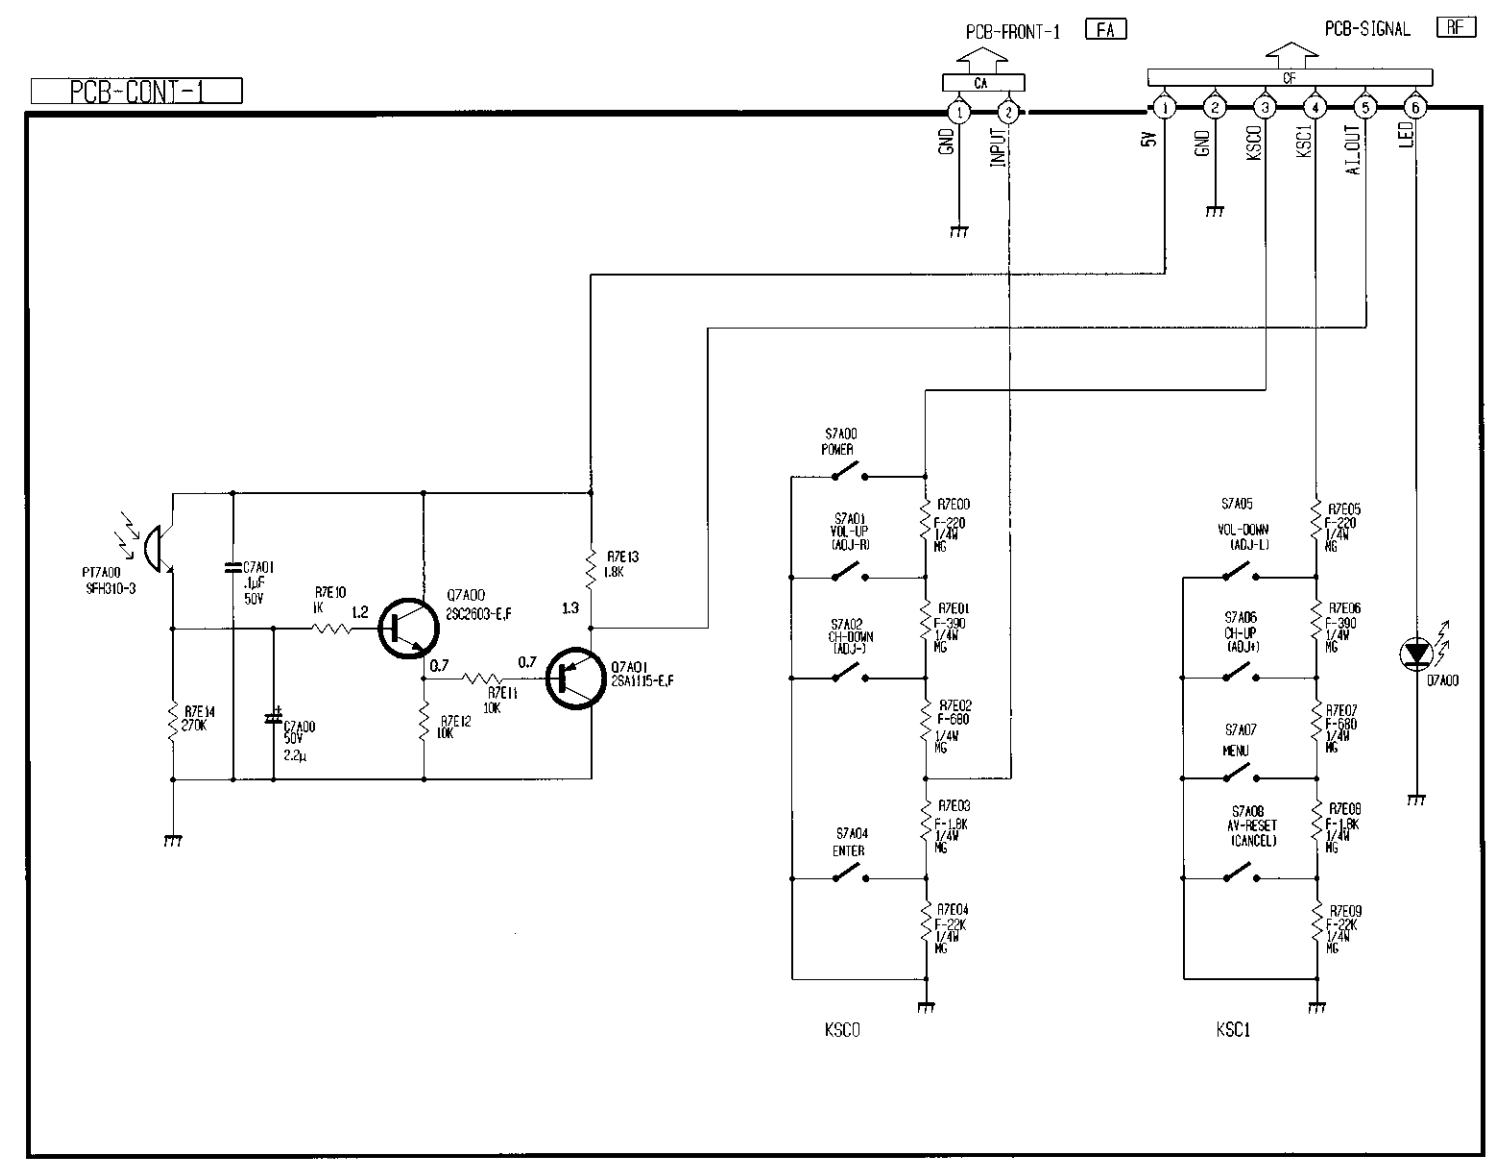


3

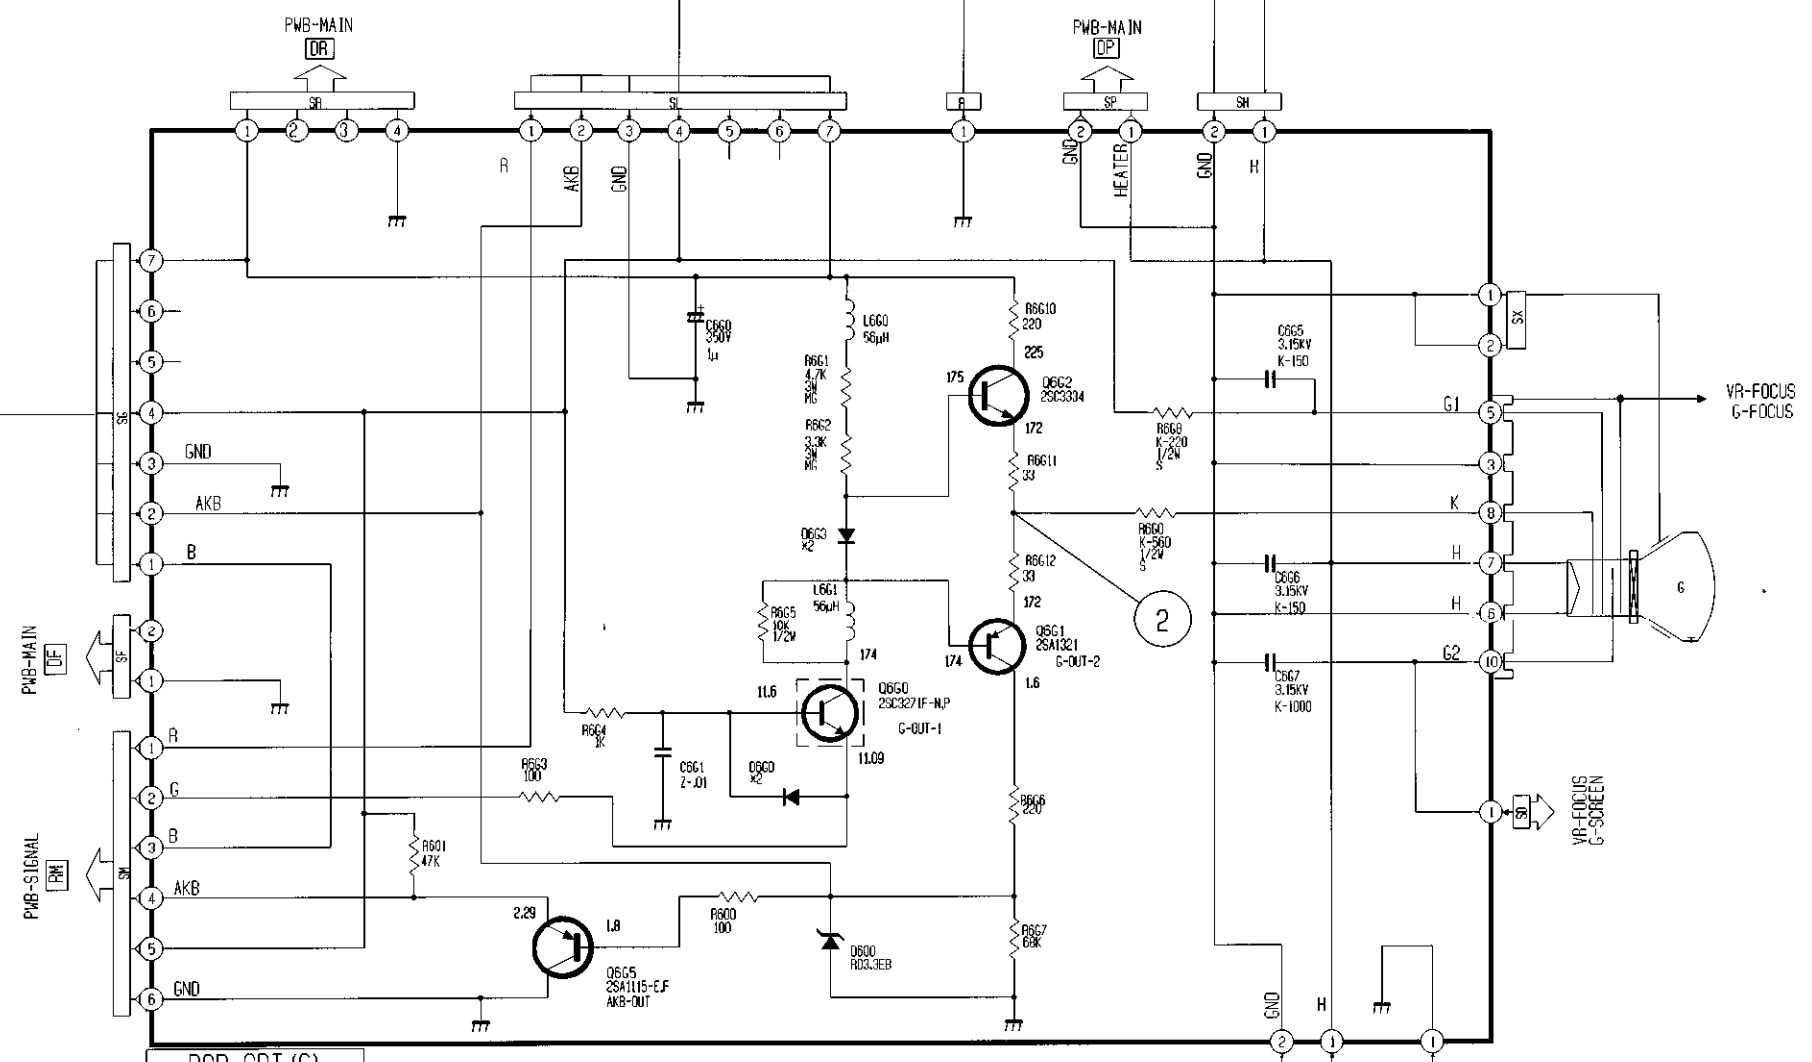



4

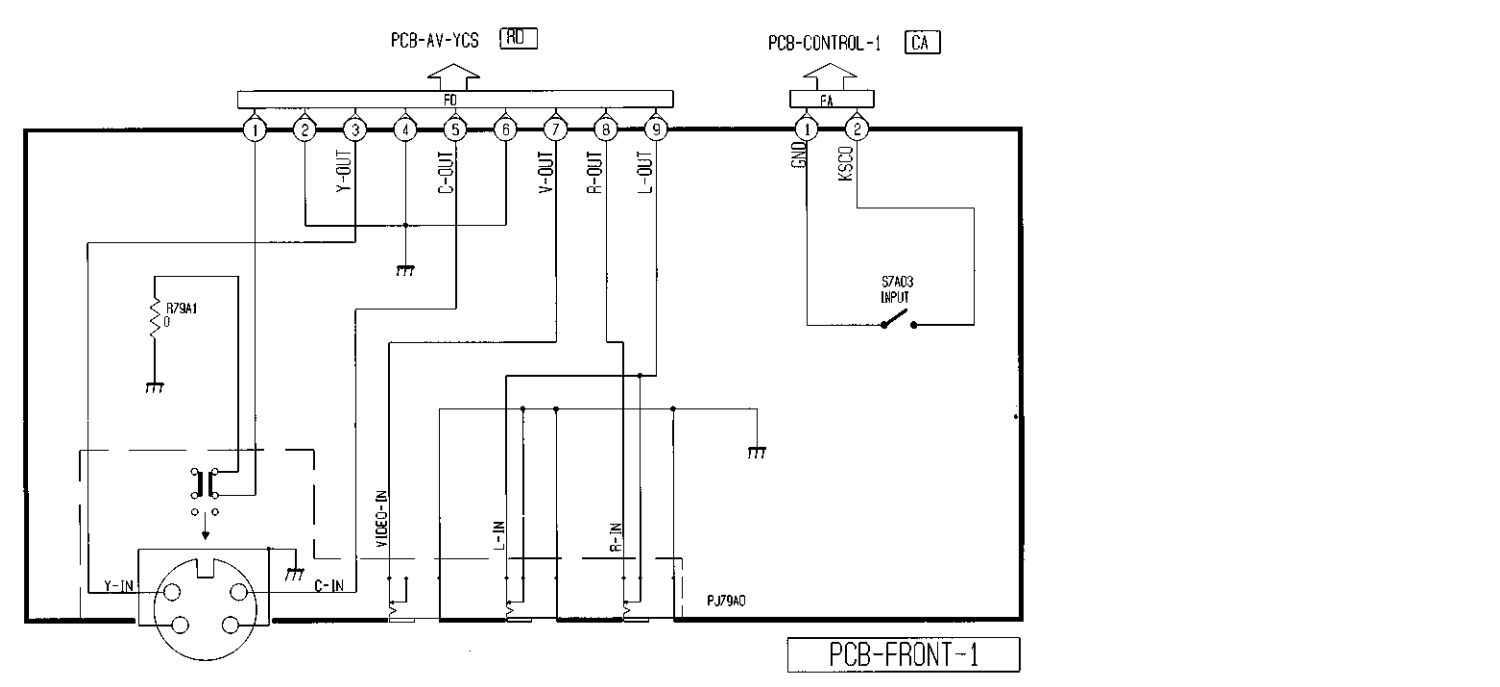

5

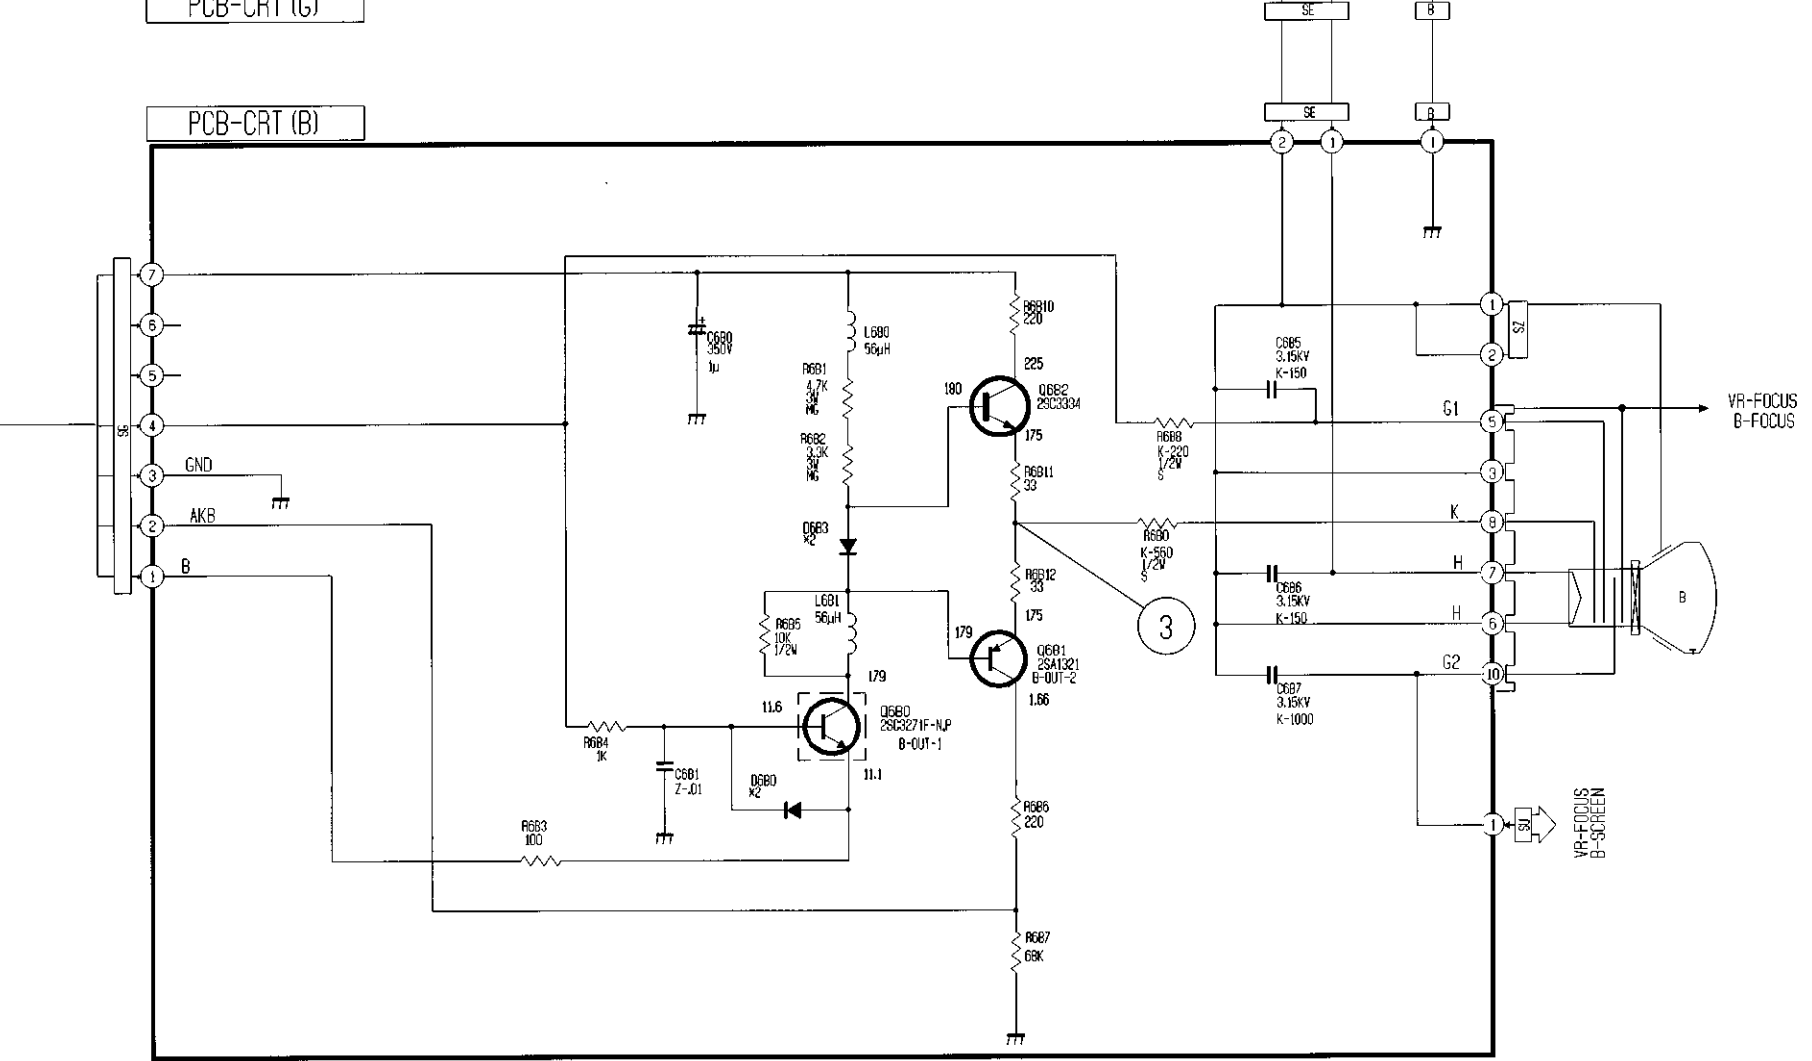

6

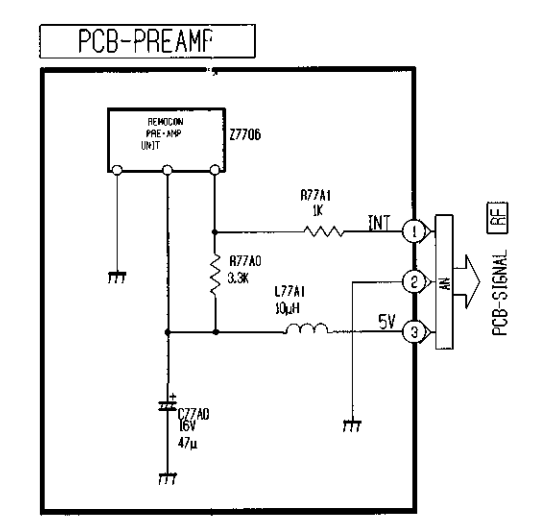
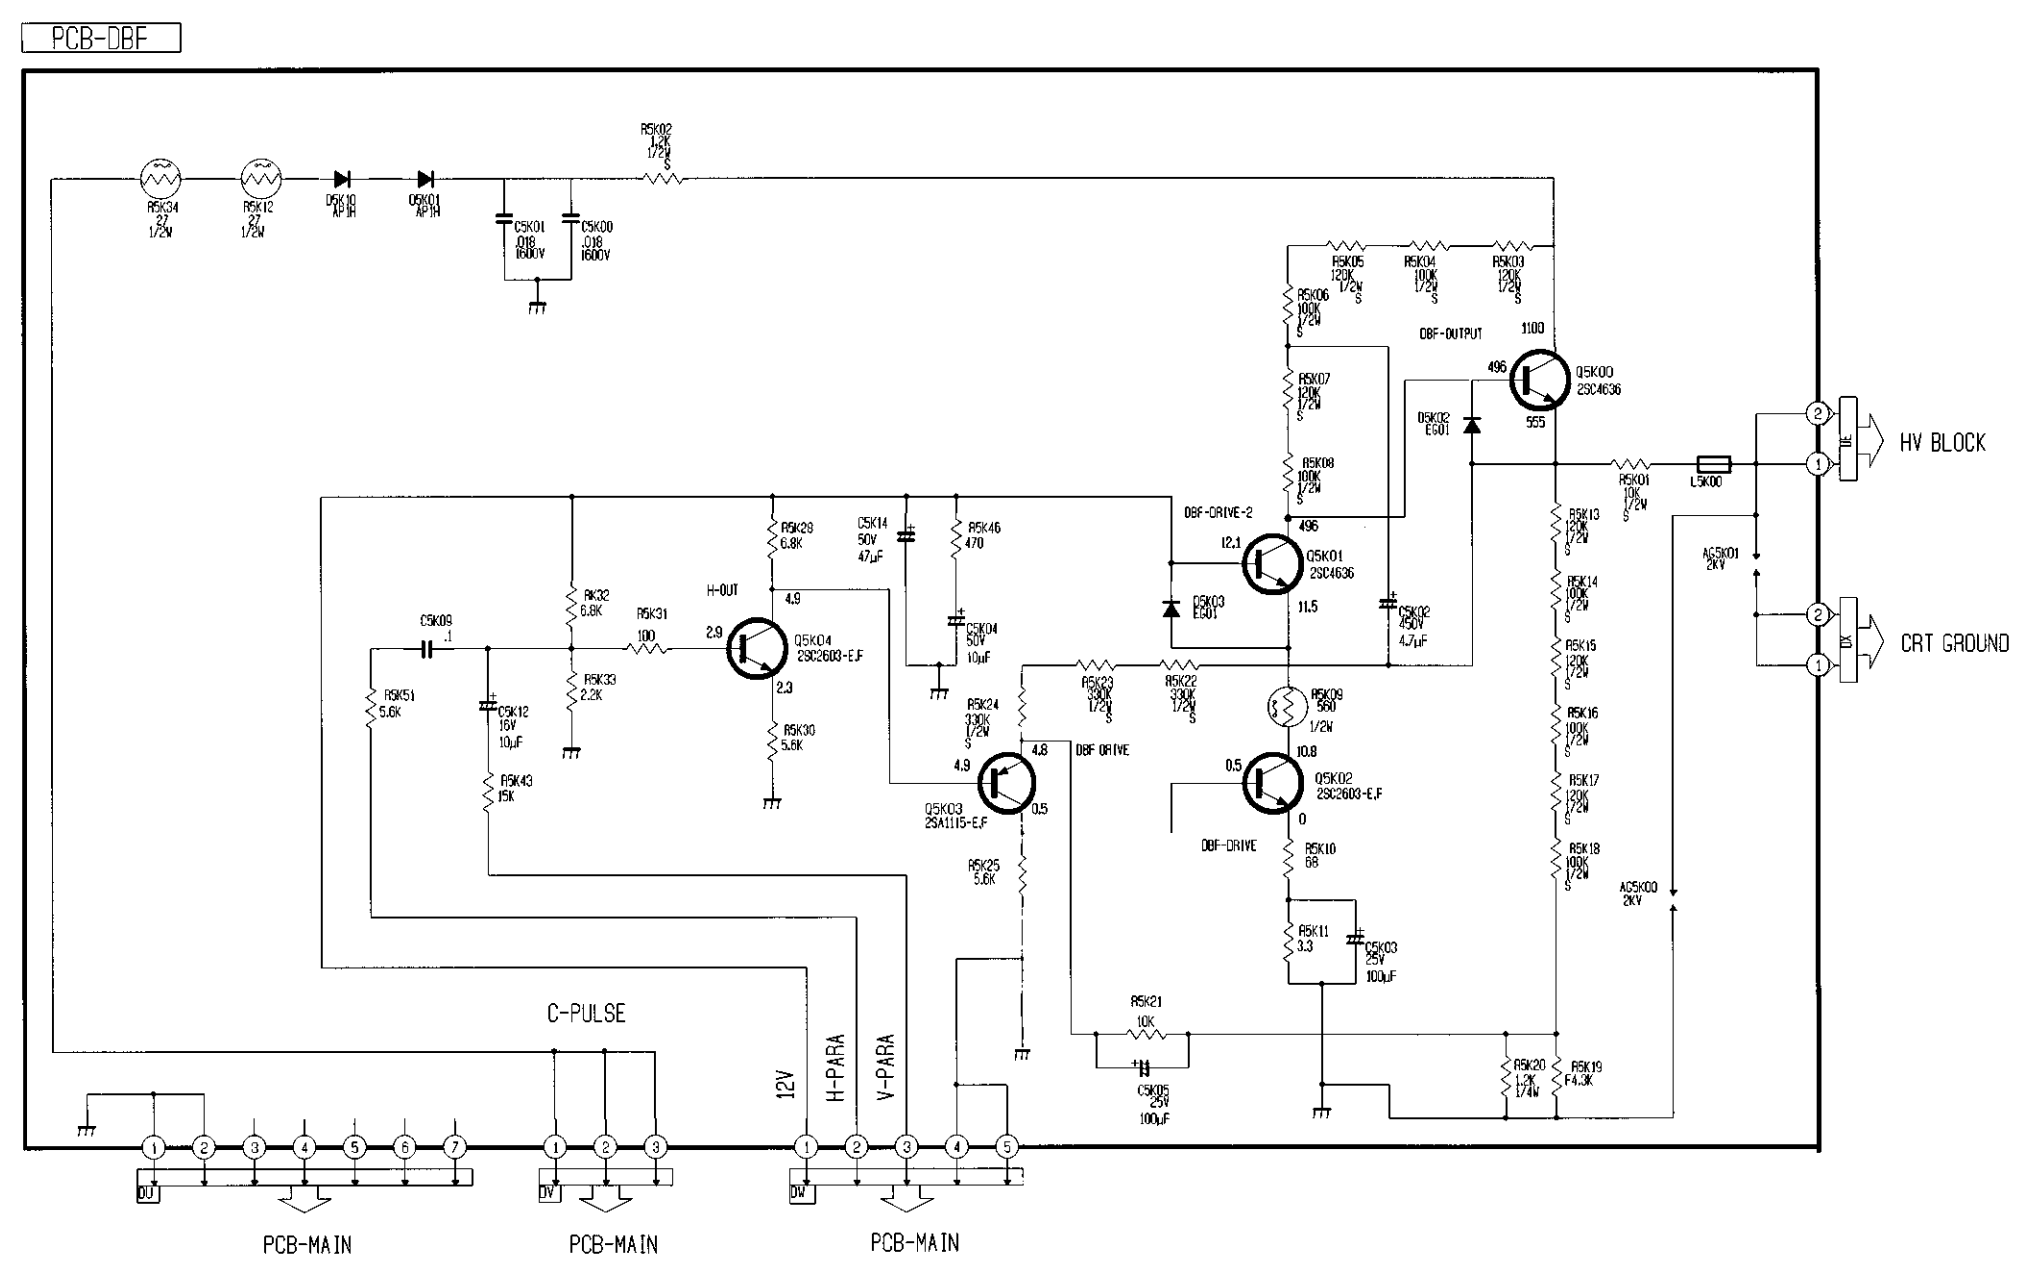


7

0000 KF 555000EN12/8882-028K
K2 152078/152470H

10

VS-45501
VS-45502
VS-45501A
VS-50501
VS-50502
VS-50502A

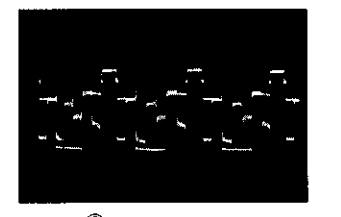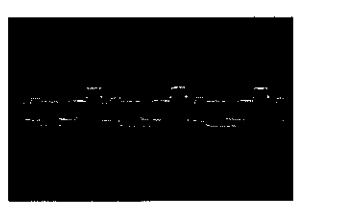

① 90V p-p IH



② 109V p-p IH

③ 114V p-p IH

CONTENTS

- PG. 1....BLOCK DIAGRAM
- PG. 2....MAIN
- PG. 3....SIGNAL
- PG. 4....FS
- PG. 5....HF
- PG. 6....SVM
- PG. 7....AV/YCS
- PG. 8....PJP/APT
- PG. 9....COIN
- PG.10....DBF, CONT-1, FRONT-1, PREAMP
CRT (R), CRT (G), CRT (B)

PCB-HF

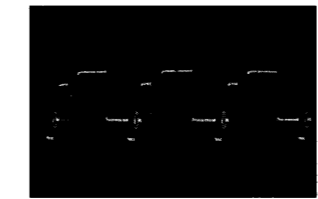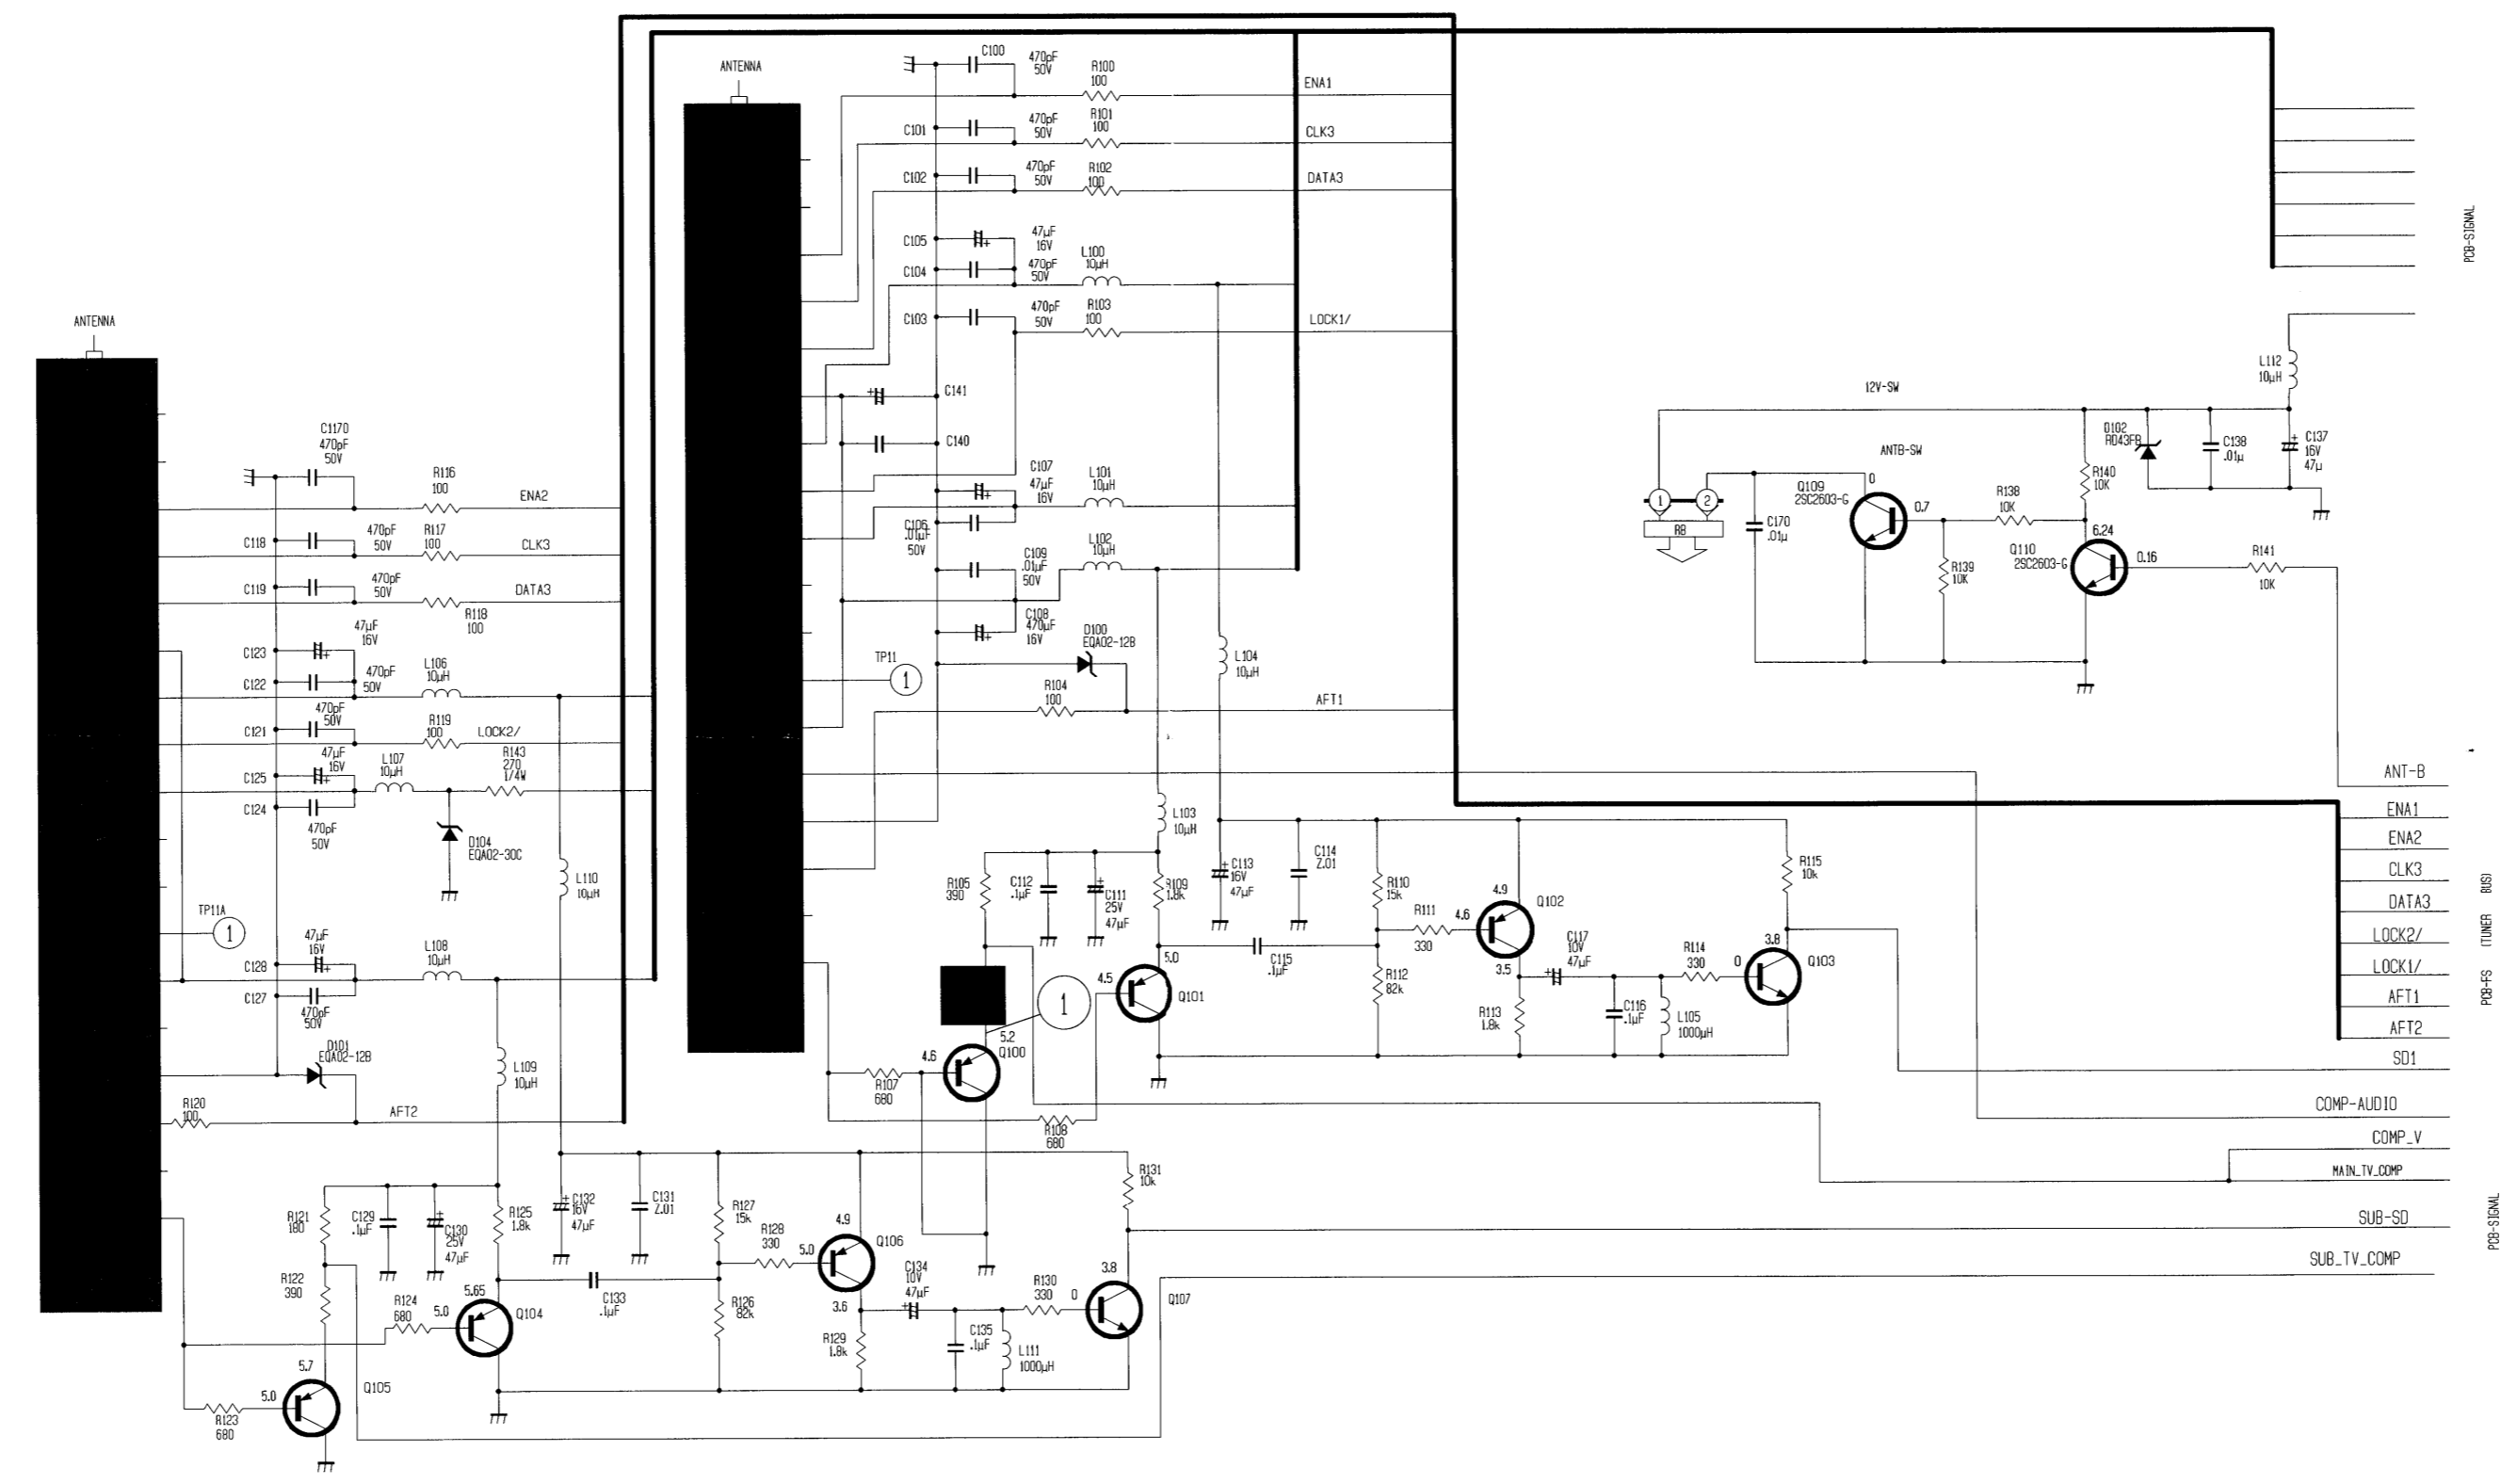


① 1.5V p-p (H)

CONTENTS

- PG.1.....BLOCK DIAGRAM
- PG.2.....MAIN
- PG.3.....SIGNAL
- PG.4.....FS
- PG.5.....HF
- PG.6.....SVM
- PG.7.....AV/YCS
- PG.8.....PIP/APT
- PG.9.....CONV
- PG.10.....DBF, CONT-1, FRONT-1, PREAMP CRT (A), CRT (G), CRT (B)


PCB-SVM

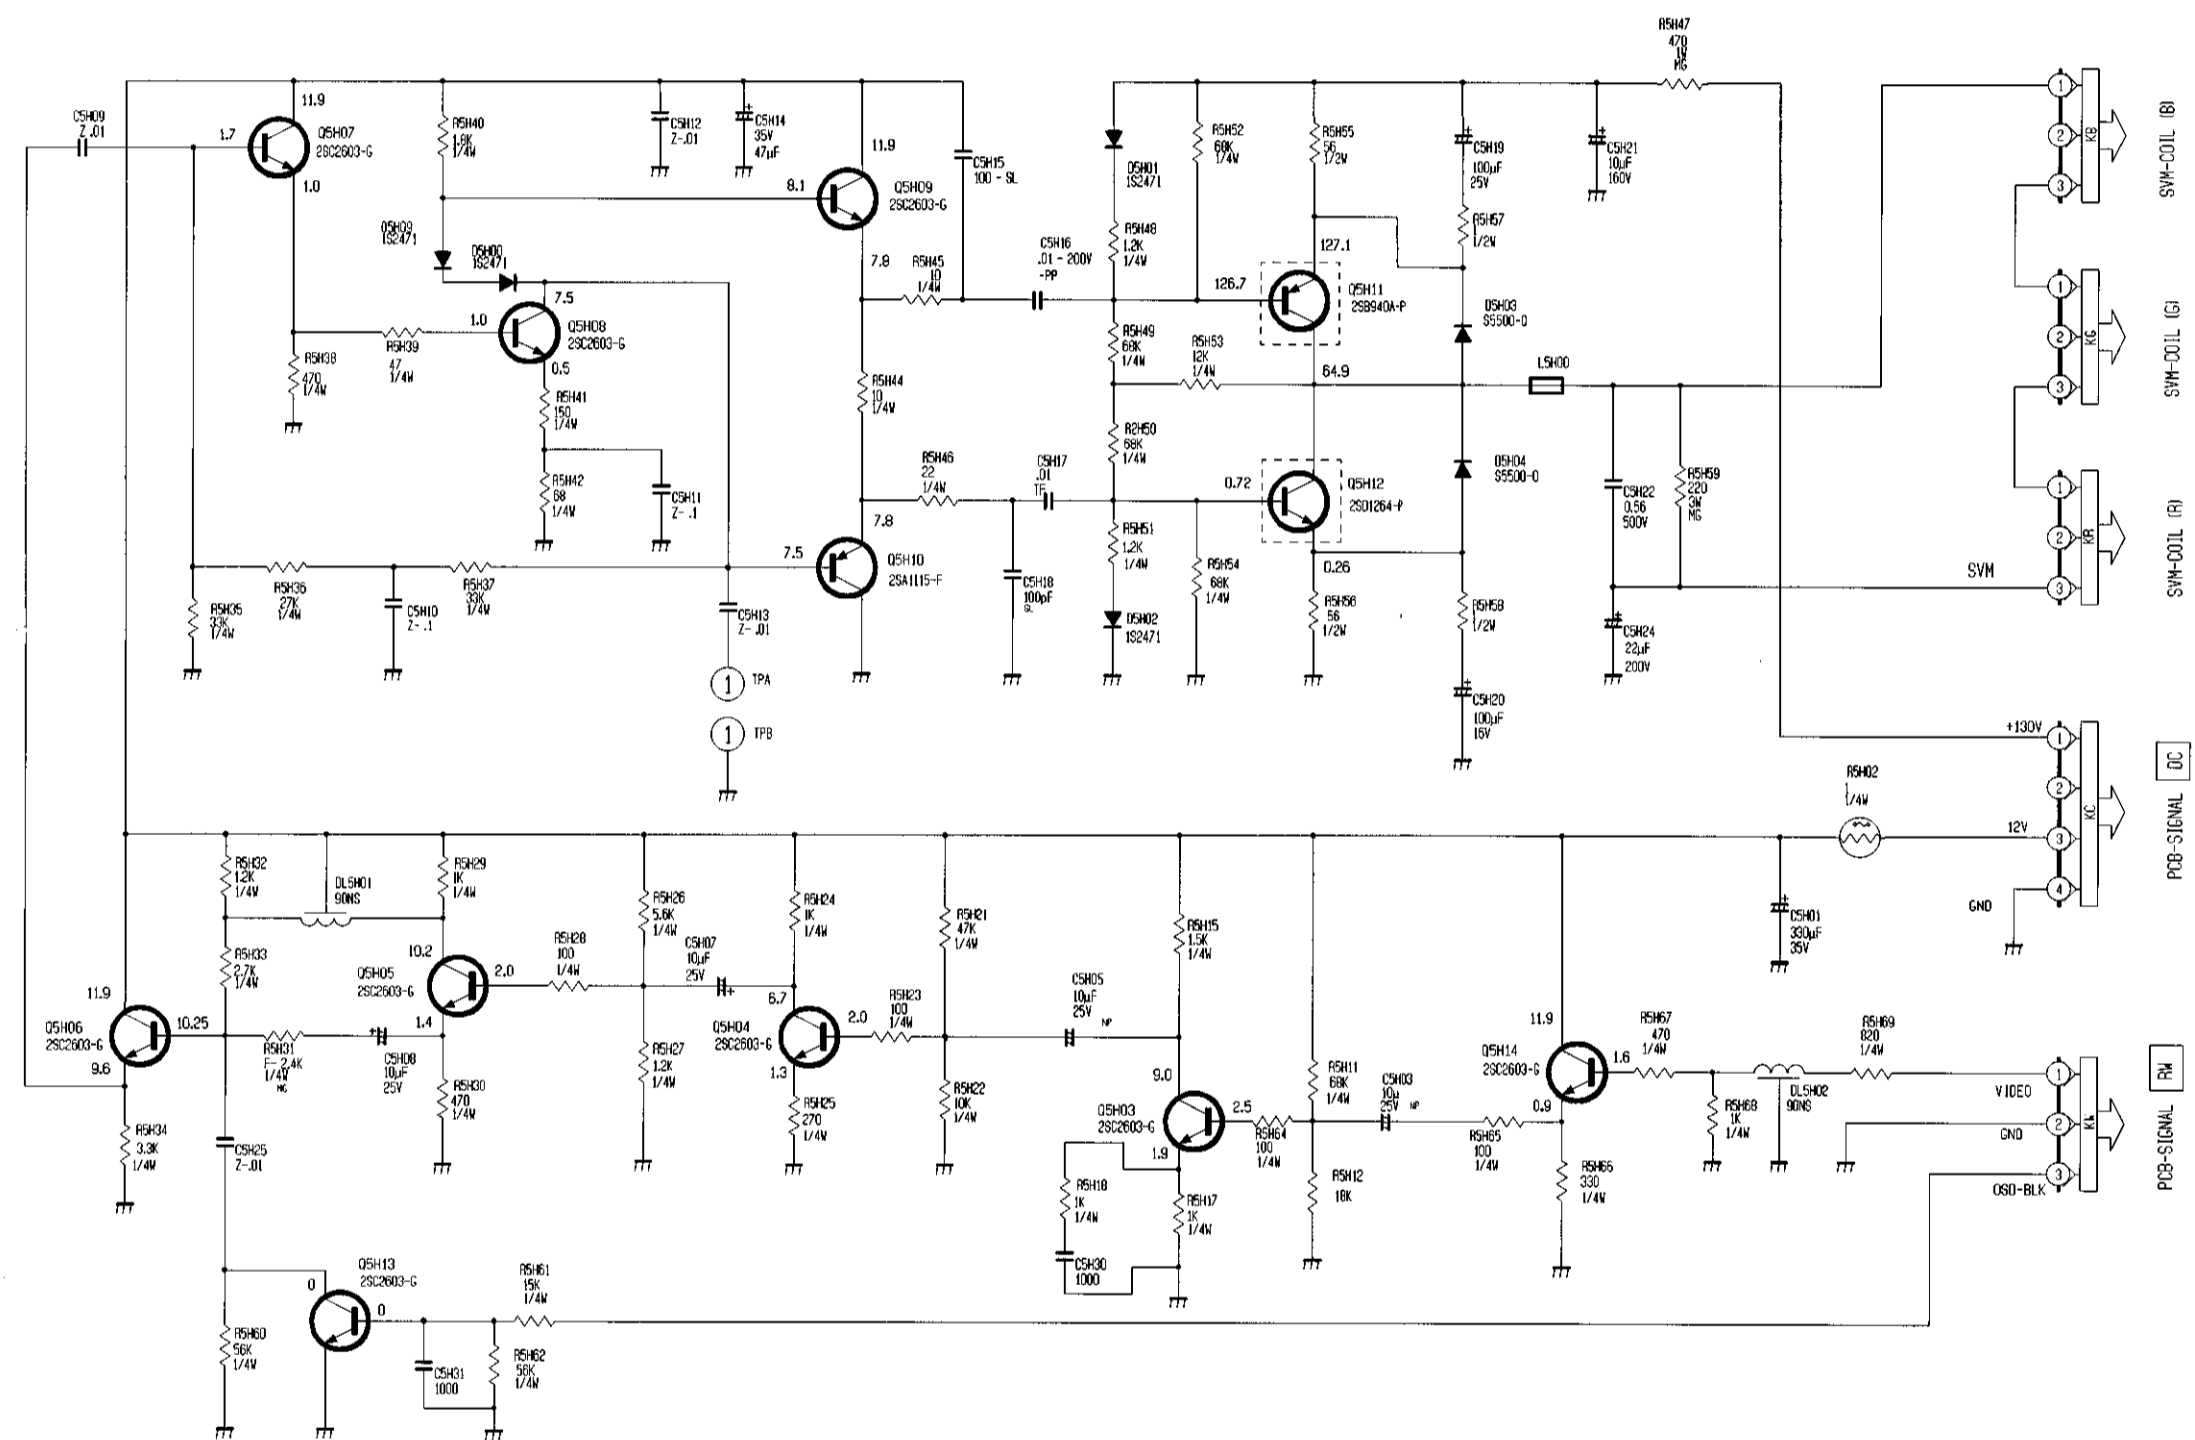

CONTENTS

- PG. 1.....BLOCK DIAGRAM
- PG. 2.....MAIN
- PG. 3.....SIGNAL
- PG. 4.....FS
- PG. 5.....HF
- PG. 6.....SVM
- PG. 7.....AV/YCS
- PG. 8.....PIP/APT
- PG. 9.....CONV
- PG.10.....DBF. CONT-1, FRONT-1, PREAMP
CRT IR, CRT IG, CRT IB

6 VS-45501
VS-45502
VS-45501A
VS-50501
VS-50502
VS-50502A

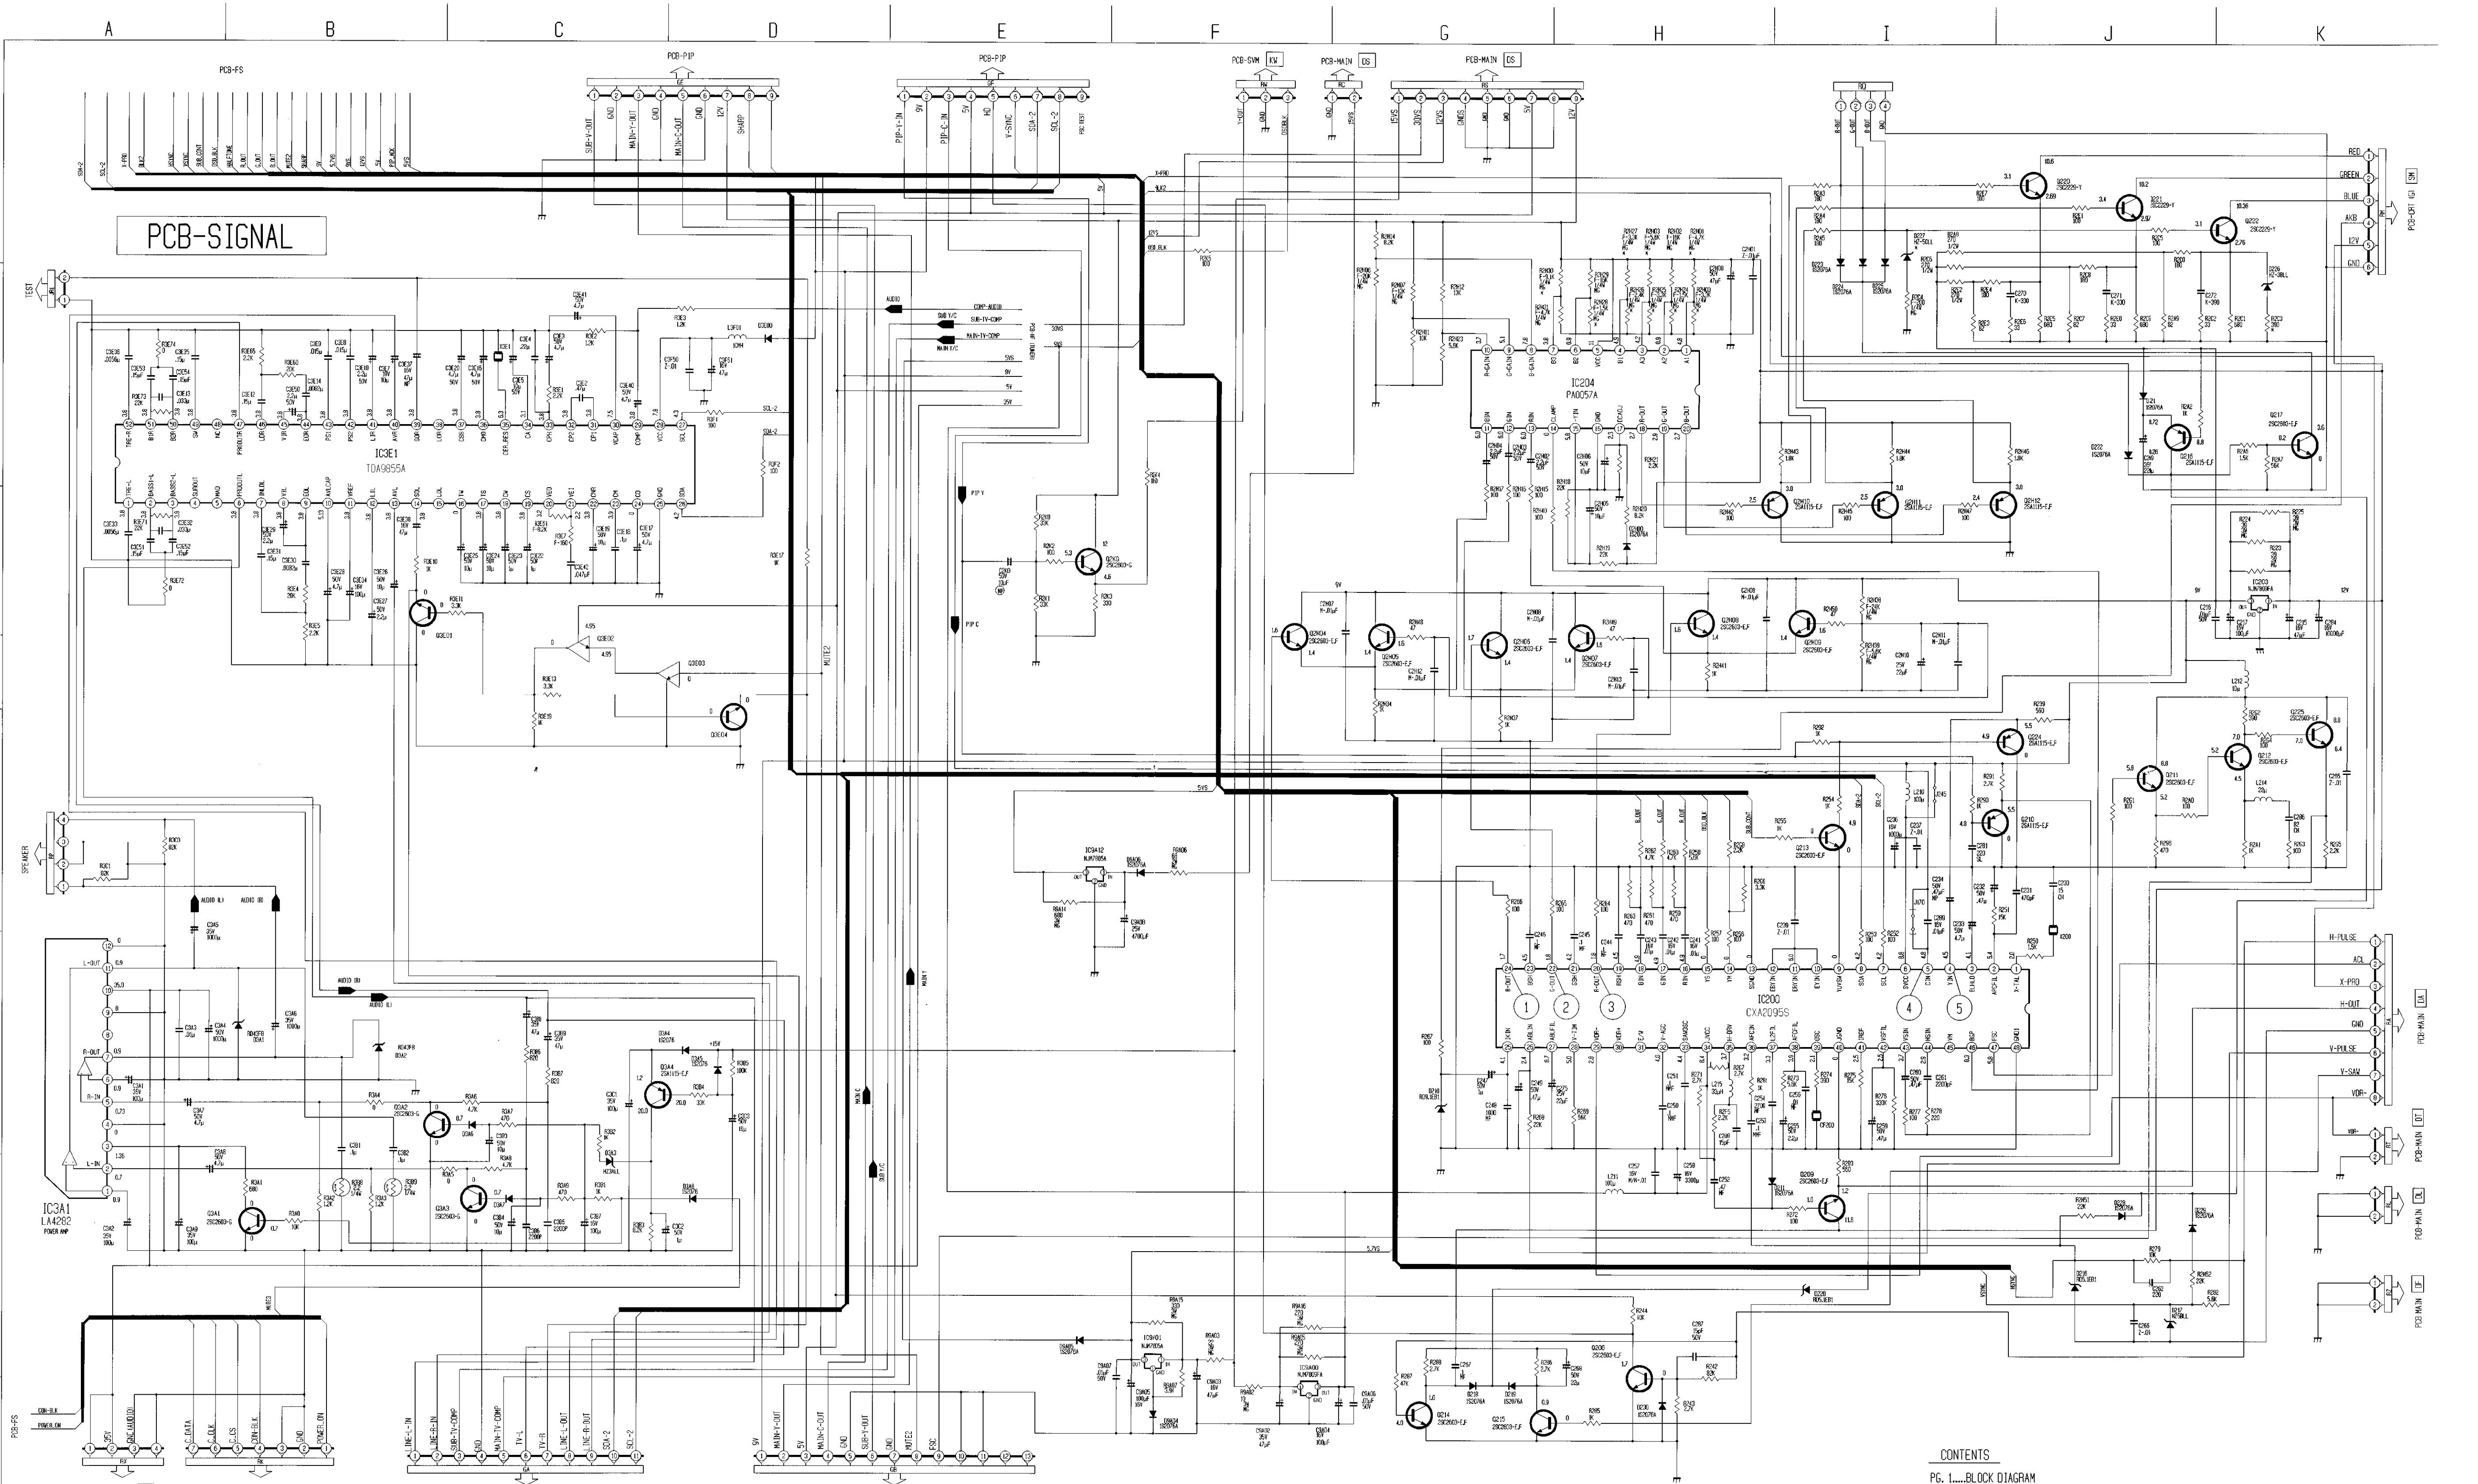


Reference	Description	Quantity	Notes
R007	RES	1	
R008	RES	1	
R009	RES	1	
R010	RES	1	
R011	RES	1	
R012	RES	1	
R013	RES	1	
R014	RES	1	
R015	RES	1	
R016	RES	1	
R017	RES	1	
R018	RES	1	
R019	RES	1	
R020	RES	1	
R021	RES	1	
R022	RES	1	
R023	RES	1	
R024	RES	1	
R025	RES	1	
R026	RES	1	
R027	RES	1	
R028	RES	1	
R029	RES	1	
R030	RES	1	
R031	RES	1	
R032	RES	1	
R033	RES	1	
R034	RES	1	
R035	RES	1	
R036	RES	1	
R037	RES	1	
R038	RES	1	
R039	RES	1	
R040	RES	1	
R041	RES	1	
R042	RES	1	
R043	RES	1	
R044	RES	1	
R045	RES	1	
R046	RES	1	
R047	RES	1	
R048	RES	1	
R049	RES	1	
R050	RES	1	
R051	RES	1	
R052	RES	1	
R053	RES	1	
R054	RES	1	
R055	RES	1	
R056	RES	1	
R057	RES	1	
R058	RES	1	
R059	RES	1	
R060	RES	1	
R061	RES	1	
R062	RES	1	
R063	RES	1	
R064	RES	1	
R065	RES	1	
R066	RES	1	
R067	RES	1	
R068	RES	1	
R069	RES	1	
R070	RES	1	
R071	RES	1	
R072	RES	1	
R073	RES	1	
R074	RES	1	
R075	RES	1	
R076	RES	1	
R077	RES	1	
R078	RES	1	
R079	RES	1	
R080	RES	1	
R081	RES	1	
R082	RES	1	
R083	RES	1	
R084	RES	1	
R085	RES	1	
R086	RES	1	
R087	RES	1	
R088	RES	1	
R089	RES	1	
R090	RES	1	
R091	RES	1	
R092	RES	1	
R093	RES	1	
R094	RES	1	
R095	RES	1	
R096	RES	1	
R097	RES	1	
R098	RES	1	
R099	RES	1	
R100	RES	1	

CONTENTS
 PG. 1...BLOCK DIAGRAM
 PG. 2...MAIN
 PG. 3...SIGNAL
 PG. 4...FS
 PG. 5...HF
 PG. 6...SVM
 PG. 7...AV/YCS
 PG. 8...PIP/APT
 PG. 9...CONV
 PG. 10...DEF. CONT-1, FRONT-1, PREAMP
 CRT (A), CRT (G), CRT (B)

- ① 1.0V p-p (H)
- ② 0.85V p-p (H)
- ③ 1.0V p-p (H)
- ④ 0.95V p-p (H)
- ⑤ 1.69V p-p (H)

PCB-SIGNAL / FS

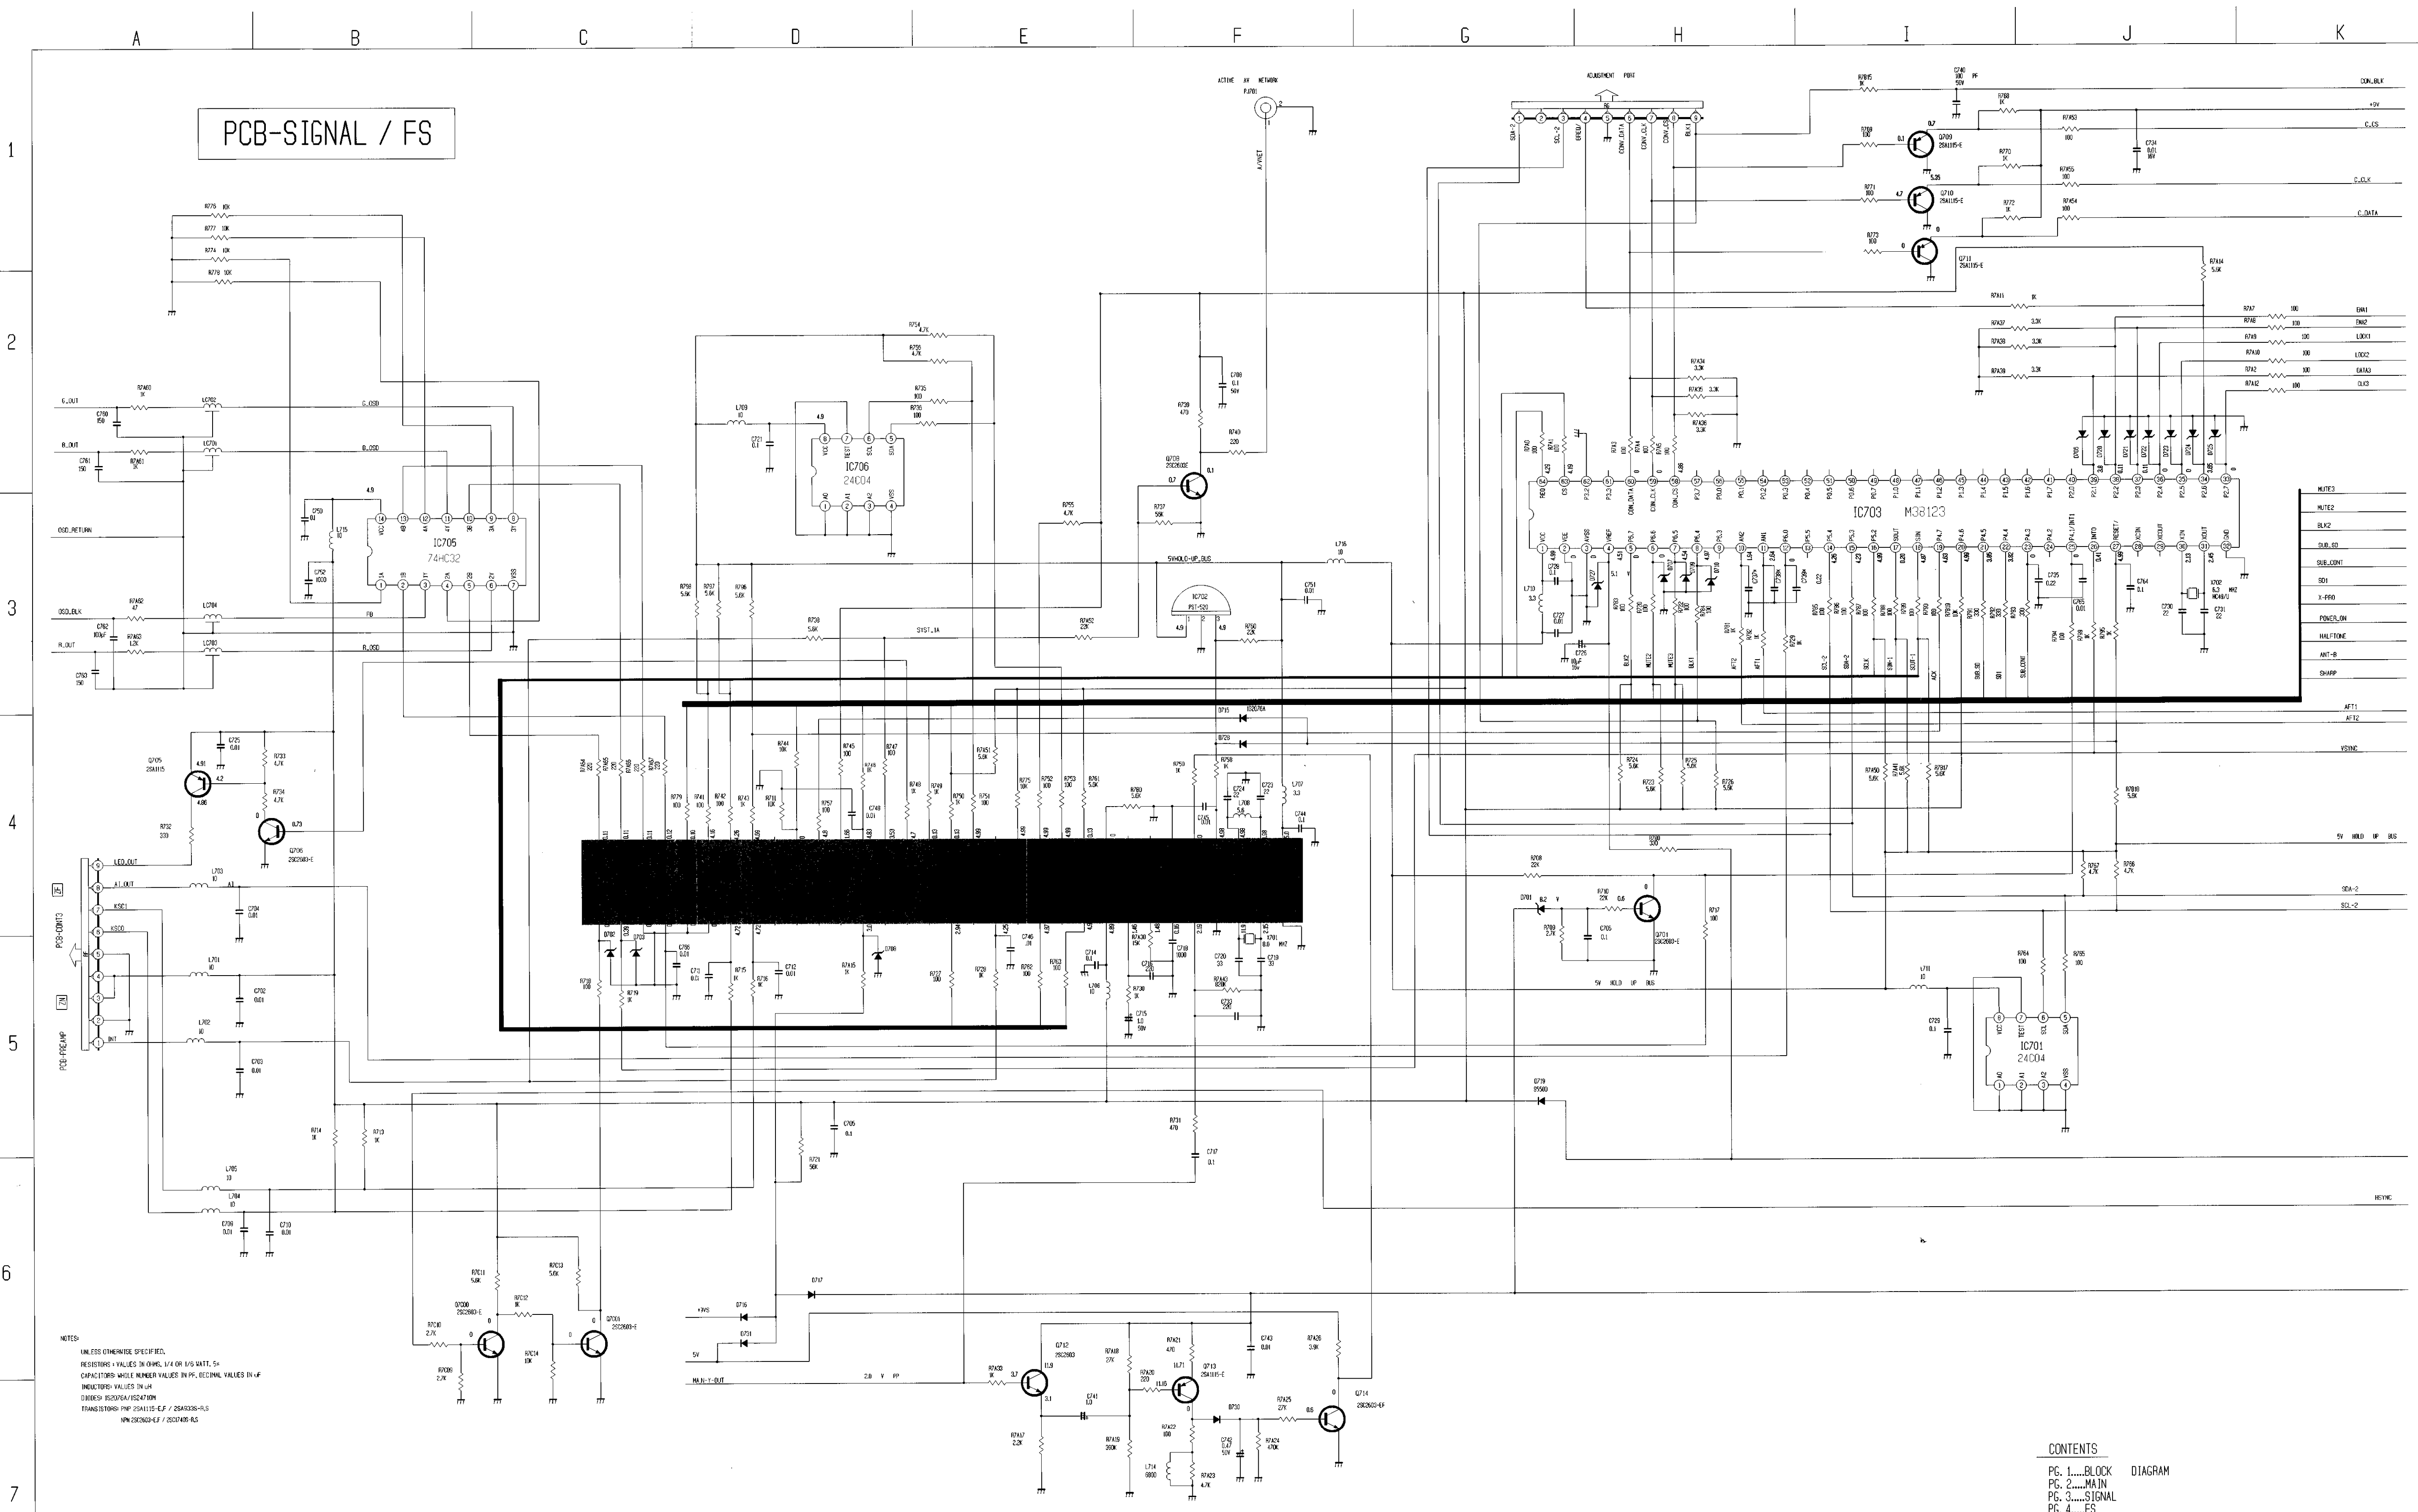

NOTES:
 UNLESS OTHERWISE SPECIFIED,
 RESISTORS: VALUES IN OHMS, 1/4 OR 1/8 WATT, 5%
 CAPACITORS: WHOLE NUMBER VALUES IN P.P., DECIMAL VALUES IN μ F
 INDUCTORS: VALUES IN μ H
 DIODES: 1N5206A/1N5247BOM
 TRANSISTORS: PNP: 2SA1115-E-F / 2SA633B-LS
 NPN: 2SC2630-E-F / 2SC1708-NS

4 VS-45501
 VS-45502
 VS-45501A
 VS-50501
 VS-50502
 VS-50502A

CONTENTS

PG. 1.....BLOCK	DIAGRAM
PG. 2.....MAIN	
PG. 3.....SIGNAL	
PG. 4.....FS	
PG. 5.....HF	
PG. 6.....SVM	
PG. 7.....AV/YCS	
PG. 8.....PJP/APT	
PG. 9.....CONV	
PG.10.....DBF. CONT-1, FRONT-1, PREAMP	
	CRT (R), CRT (G), CRT (B)

MODELS: VS-45501, VS-45502, VS-45502A
VS-50501, VS-50502, VS-50502A

- NOTES
- DC voltages were measured from points indicated to the circuit ground with a high-Z voltmeter.
 - Waveforms were taken with standard color bar signal
 - TP13, etc. show Test Points
 - CAPACITORS

Value	Not indicated	PF, for numbers more than 1 μF, for numbers less than 1
Dielectric Strength	Not indicated : 50V	
Tolerance	Not indicated = ± 10% No tolerance is indicated for electrolytic capacitors and ± 20% G = ± 2% P = + 100% Q = + 30% C = ± 0.25PF J = ± 5% - 0% - 10% D = ± 0.5PF G = ± 10% Z = + 80% T = + 200% F = ± 1PF M = ± 20% - 20% - 0% G = ± 2PF	
Type	I Parts except for chips	Not indicated: Ceramic capacitor (PE) : Polyester capacitor (PP) : Polypropylene film capacitor (ALM) : Aluminum electrolytic capacitor (TF) : Twin film capacitor (SC) : Semiconductor Ceramic capacitor (MP) : Metalized paper (MPP) : Metalized plastic film capacitor (MPE) : Metalized polyester capacitor (MPC) : Polyester polypropylene film capacitor (PS) : Styrol capacitor (TAN or TANT) : Tantalum capacitor (+H) : Electrolytic capacitor (-H) : Non polarized electrolytic capacitor
	II Chip	Not indicated : Ceramic capacitor chip (+H) : Electrolytic capacitor (-H) : Non polarized electrolytic capacitor chip
Characteristic (only ceramic capacitor)	Not indicated	: F or B (high dielectric percentage) : Temperature compensating types


5. RESISTORS

Value		
Wattage	Parts except for chips	Not indicated = 1/4W or 1/6W
	Chips	Not indicated = 1/10W
Tolerance	Not indicated = + 5% D = ± 0.5% J = ± 5% F = ± 1% K = ± 10%	
Type	I Parts except for chips	Not indicated: Carbon resistor (S) : Fixed composition resistor (MO) : Metal oxide film resistor (type B) (C) : Cemented resistor (W) : Wire wound resistor (M) : Metal film resistor (MPC) : Metal plate cement resistor (ML) : Metal liner resistor
	II Chip	Not indicated = Chip resistor

6. This is a basic schematic diagram. Some sets may be subject to modification according to engineering improvement.

SHADED COMPONENTS HAVE SPECIAL CHARACTERISTICS IMPORTANT TO SAFETY. BEFORE REPLACING ANY OF THESE COMPONENTS READ CAREFULLY THE PRODUCT SAFETY NOTICE IN THE SERVICE MANUAL. DO NOT DEGRADE THE SAFETY OF THE RECEIVERS THROUGH IMPROPER SERVICING.


SERVICE TECHNICIAN WARNING
X--RADIATION PRECAUTION
THIS PRODUCT INCLUDES CRITICAL ELECTRICAL AND MECHANICAL PARTS ESSENTIAL FOR X--RADIATION PROTECTION.
TO AVOID POSSIBLE EXPOSURE TO X--RADIATION TAKE X--RADIATION PROTECTIVE MEASURES FOR PERSONNEL DURING SERVICING.
SEE SERVICE INSTRUCTIONS FOR SPECIFIED REPLACEMENT PARTS AND SERVICE ADJUSTMENTS.

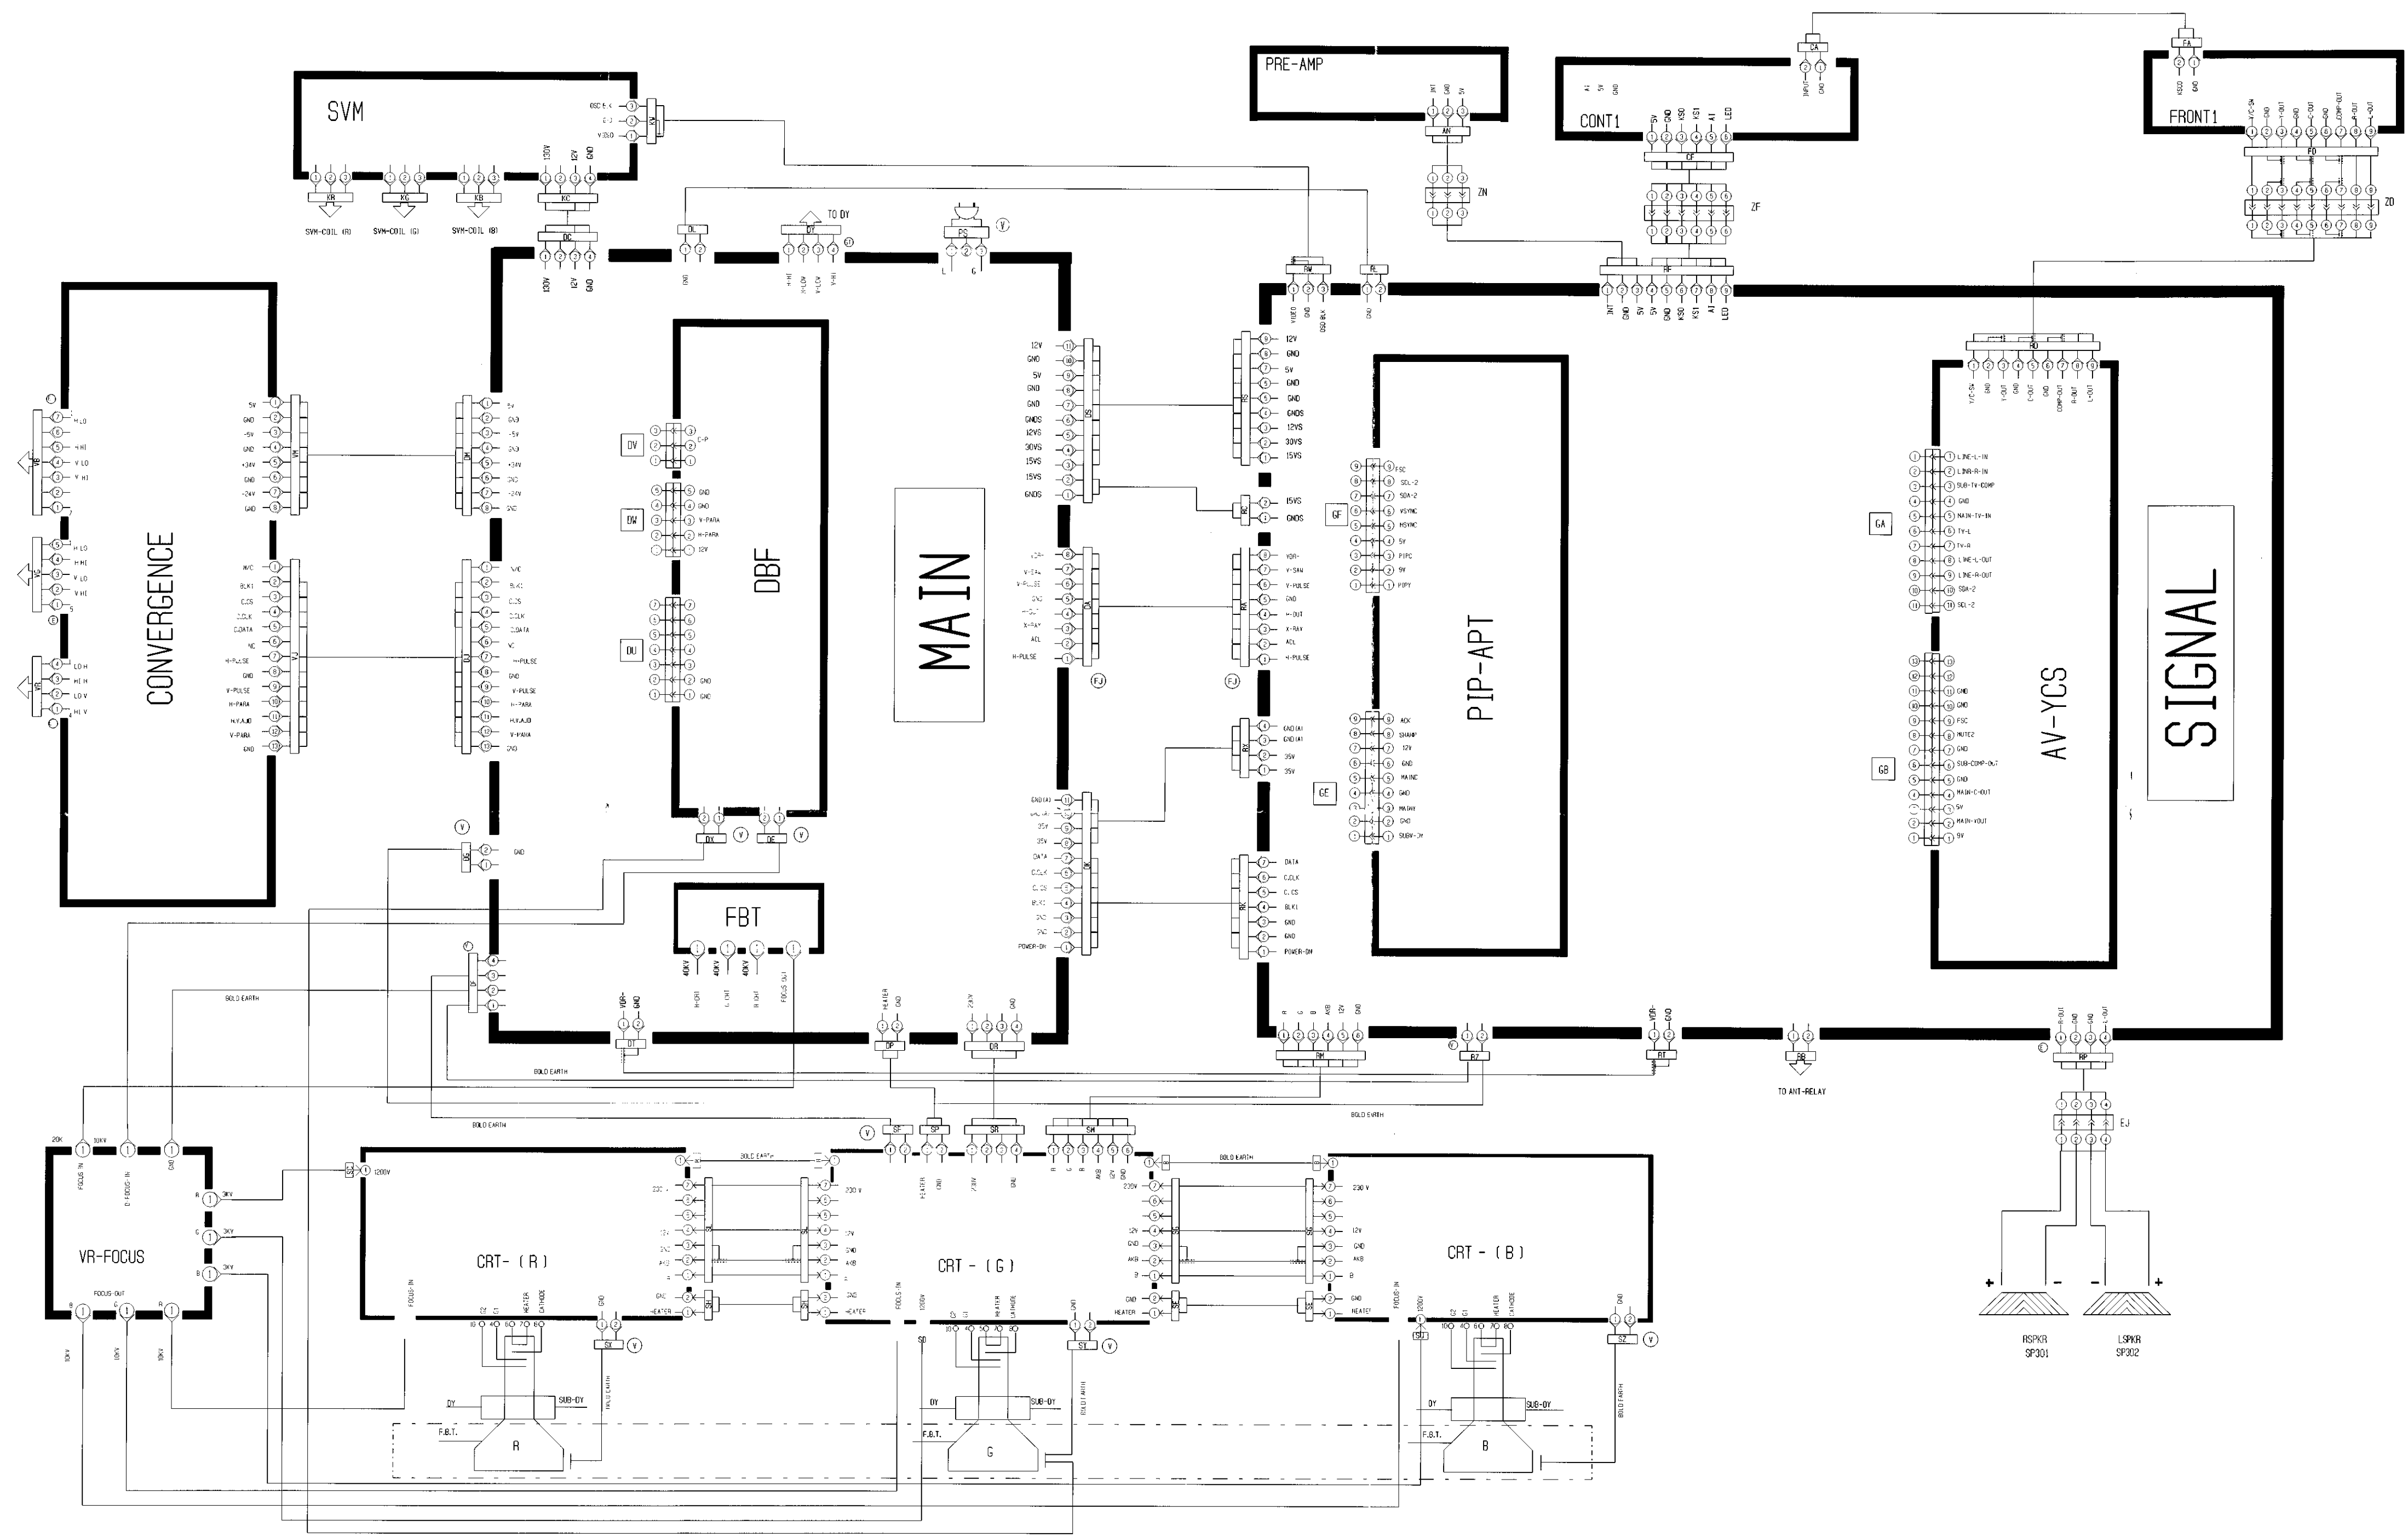

CONTENTS

PG. 1.....BLOCK DIAGRAM
PG. 2.....MAIN
PG. 3.....SIGNAL
PG. 4.....FS
PG. 5.....HF
PG. 6.....SVM
PG. 7.....AV/YCS
PG. 8.....PIP/APT
PG. 9.....CONV
PG.10.....DBF, CONT-1, FRONT-1, PREAMP
CRT (R), CRT (G), CRT (B)


VS-45501
VS-45502
VS-45501A
VS-50501
VS-50502
VS-50502A

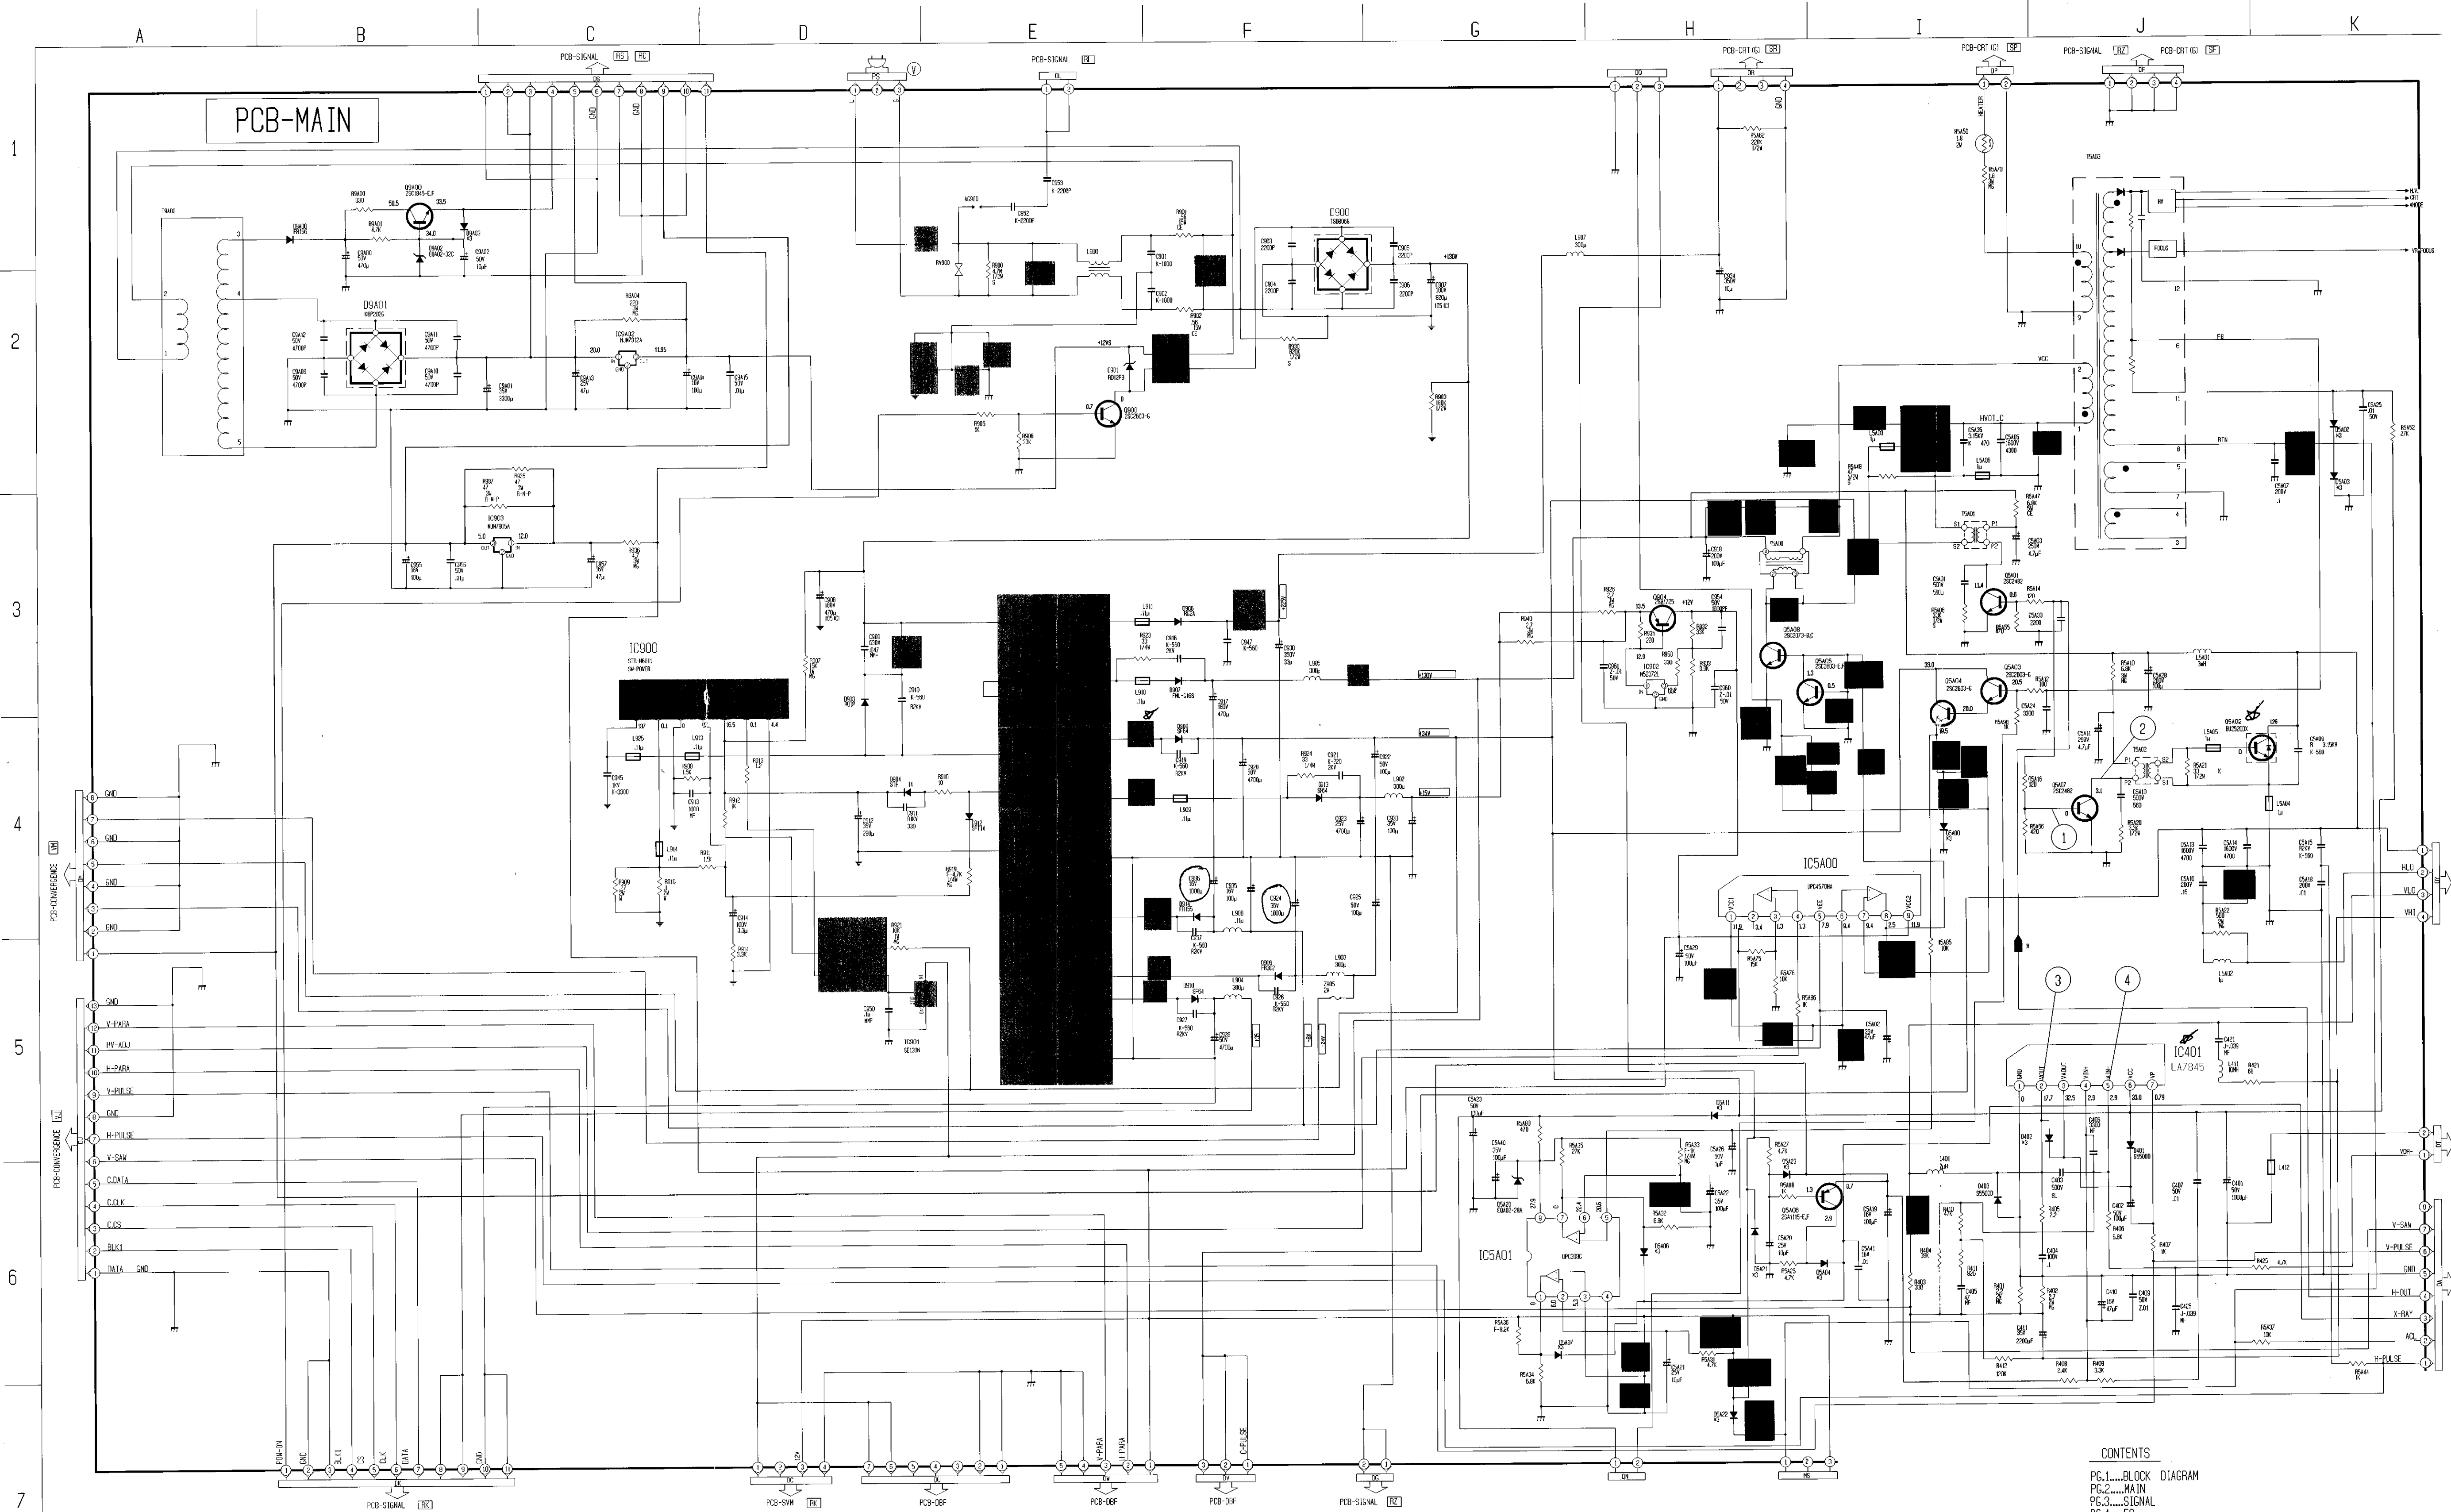

1
2
3
4
5
6
7

2 VS-45501
VS-45502
VS-45501A
VS-50501
VS-50502
VS-50502A

All diodes marked K3 are 1S2076A

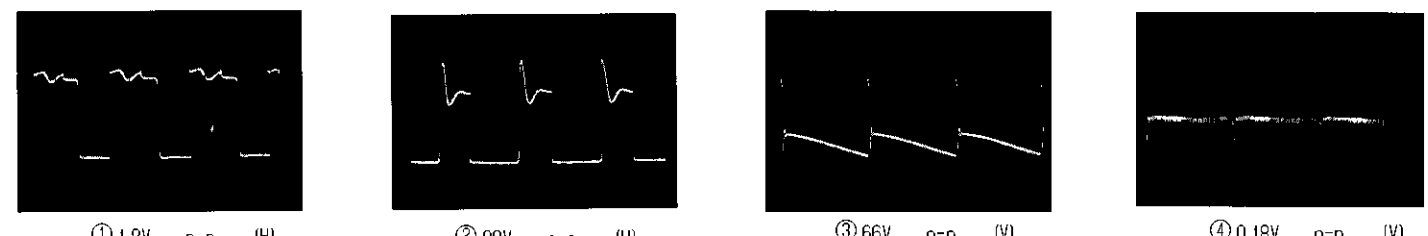


① 1.8V p-p (H) ② 90V p-p (H) ③ 66V p-p (V) ④ 0.18V p-p (V)

CONTENTS

- PG.1...BLOCK DIAGRAM
- PG.2...MAIN
- PG.3...SIGNAL
- PG.4...FS
- PG.5...HF
- PG.6...SVM
- PG.7...AV/YCS
- PG.8...PIP/APT
- PG.9...CONV
- PG.10...DBF, CONT-1, FRONT-1, PREAMP
CRT (A), CRT (G), CRT (B)

PCB-AV/YCS

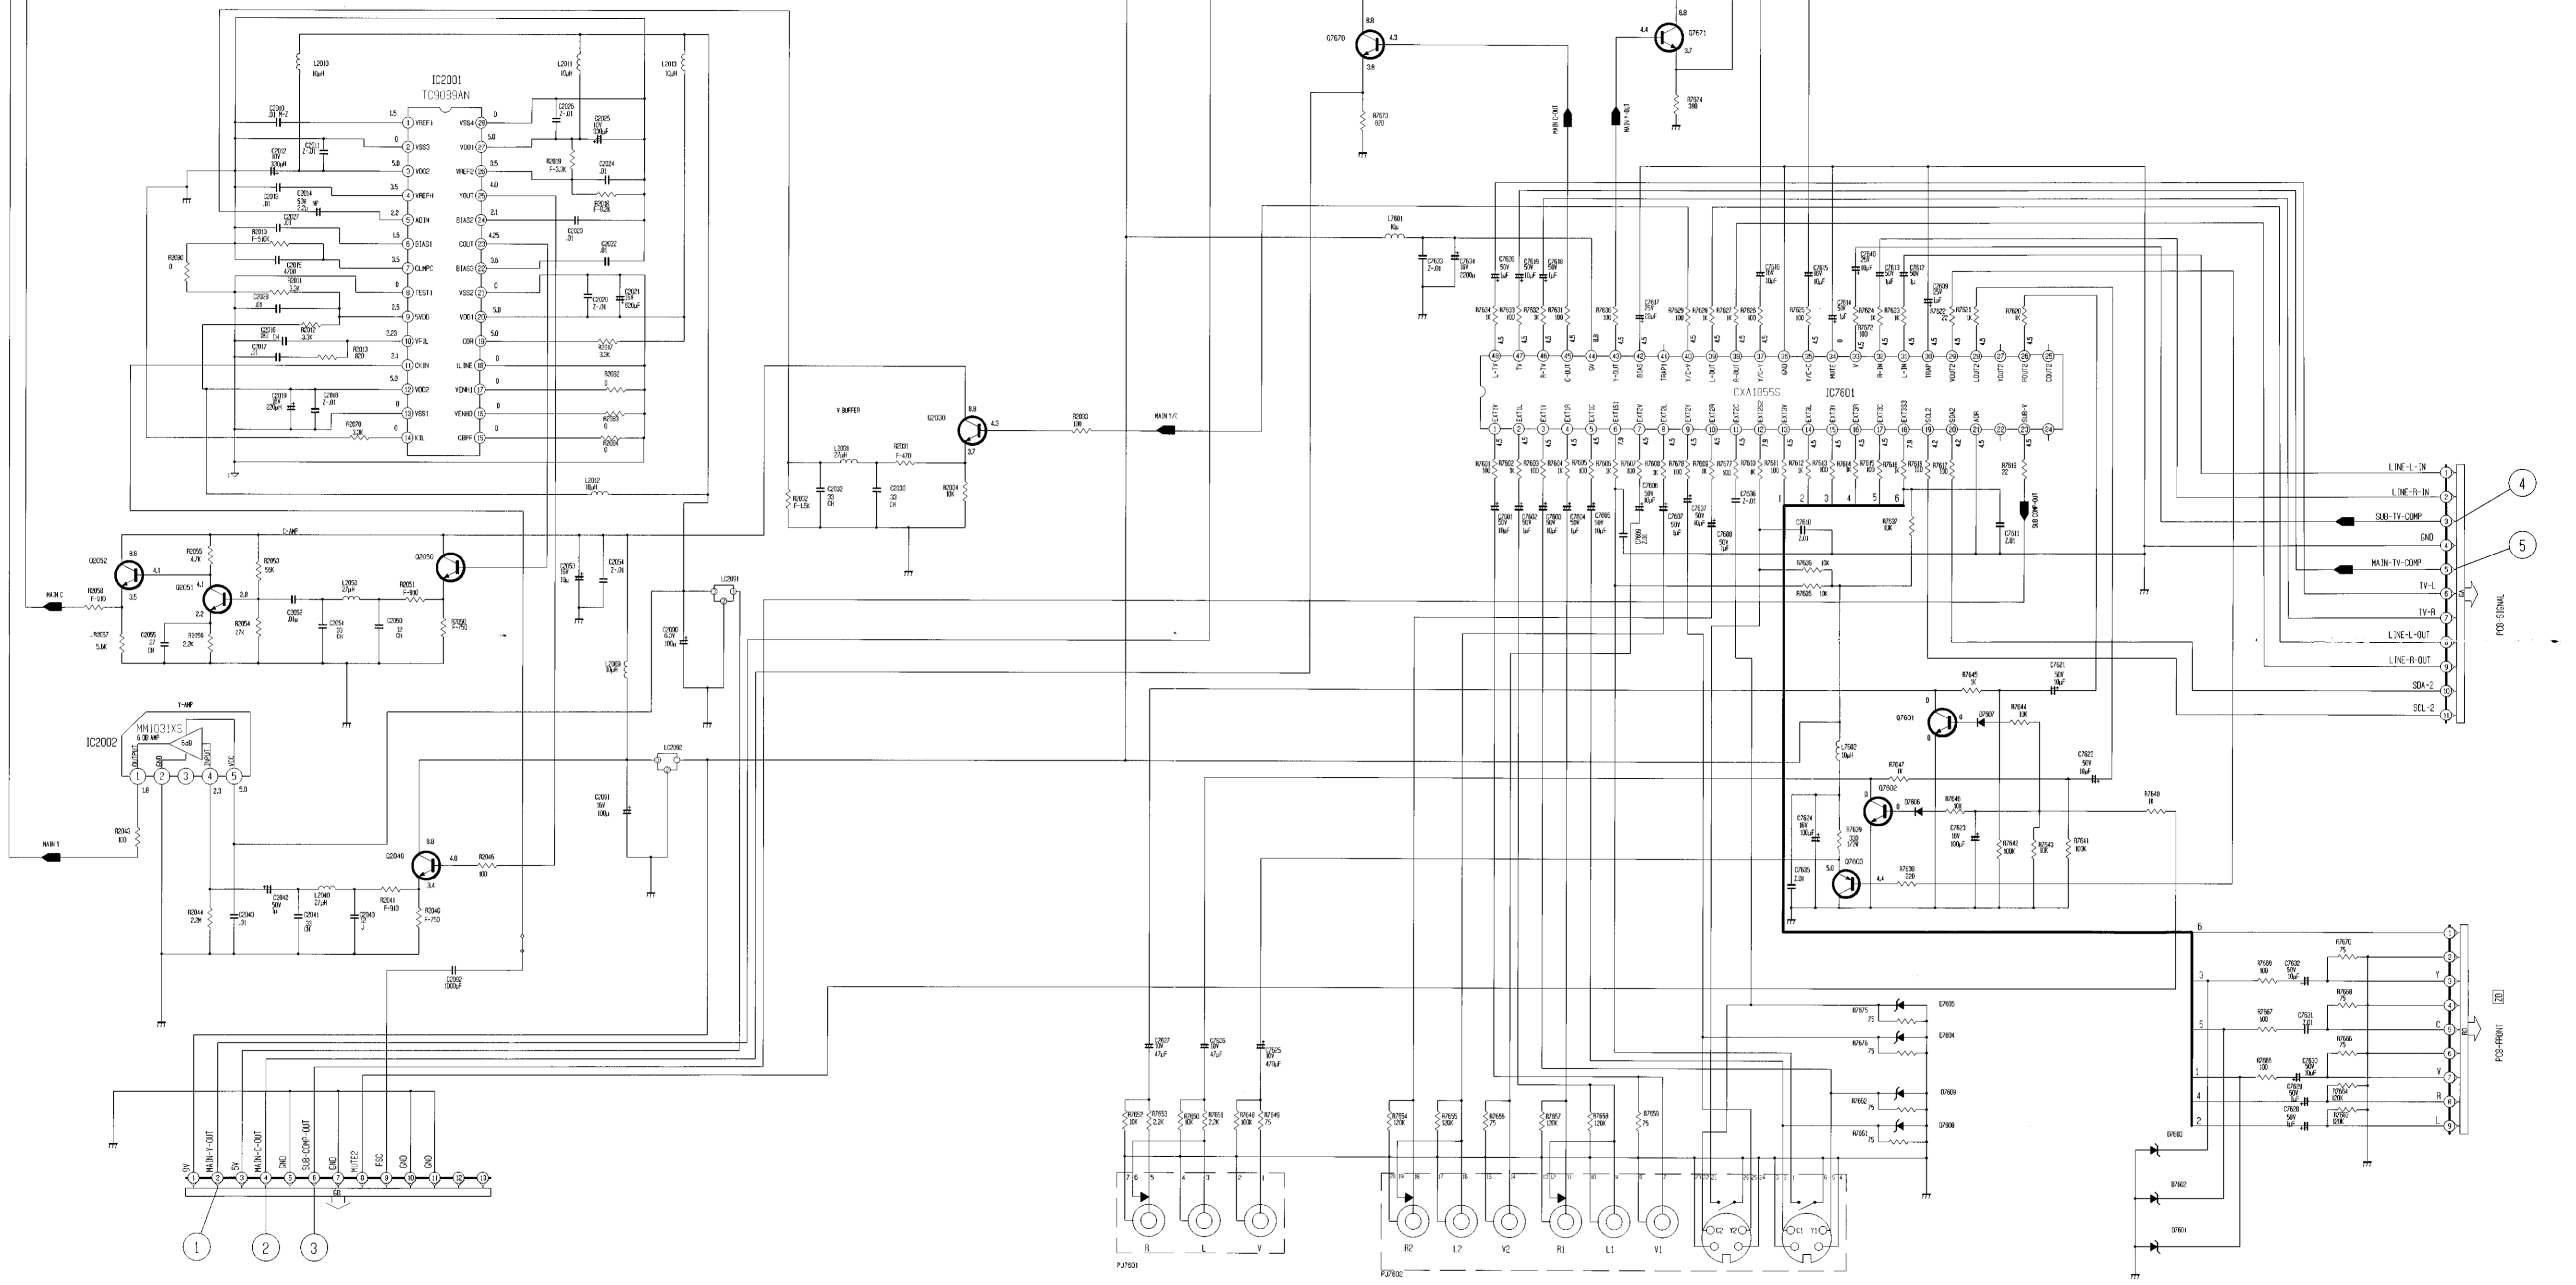


CONTENTS

- PG. 1.....BLOCK DIAGRAM
- PG. 2.....MAIN
- PG. 3.....SIGNAL
- PG. 4.....FS
- PG. 5.....HF
- PG. 6.....SVM
- PG. 7.....AV/YCS
- PG. 8.....PIP/APT
- PG. 9.....CONV
- PG.10.....DBF, CONT-1, FRONT-1, PREAMP
- CRT (R), CRT (G), CRT (B)



① 2.0V p-p ② 1.8V p-p ③ 2.0V p-p ④ 1.0V p-p ⑤ 1.0V p-p


PCB-PIP

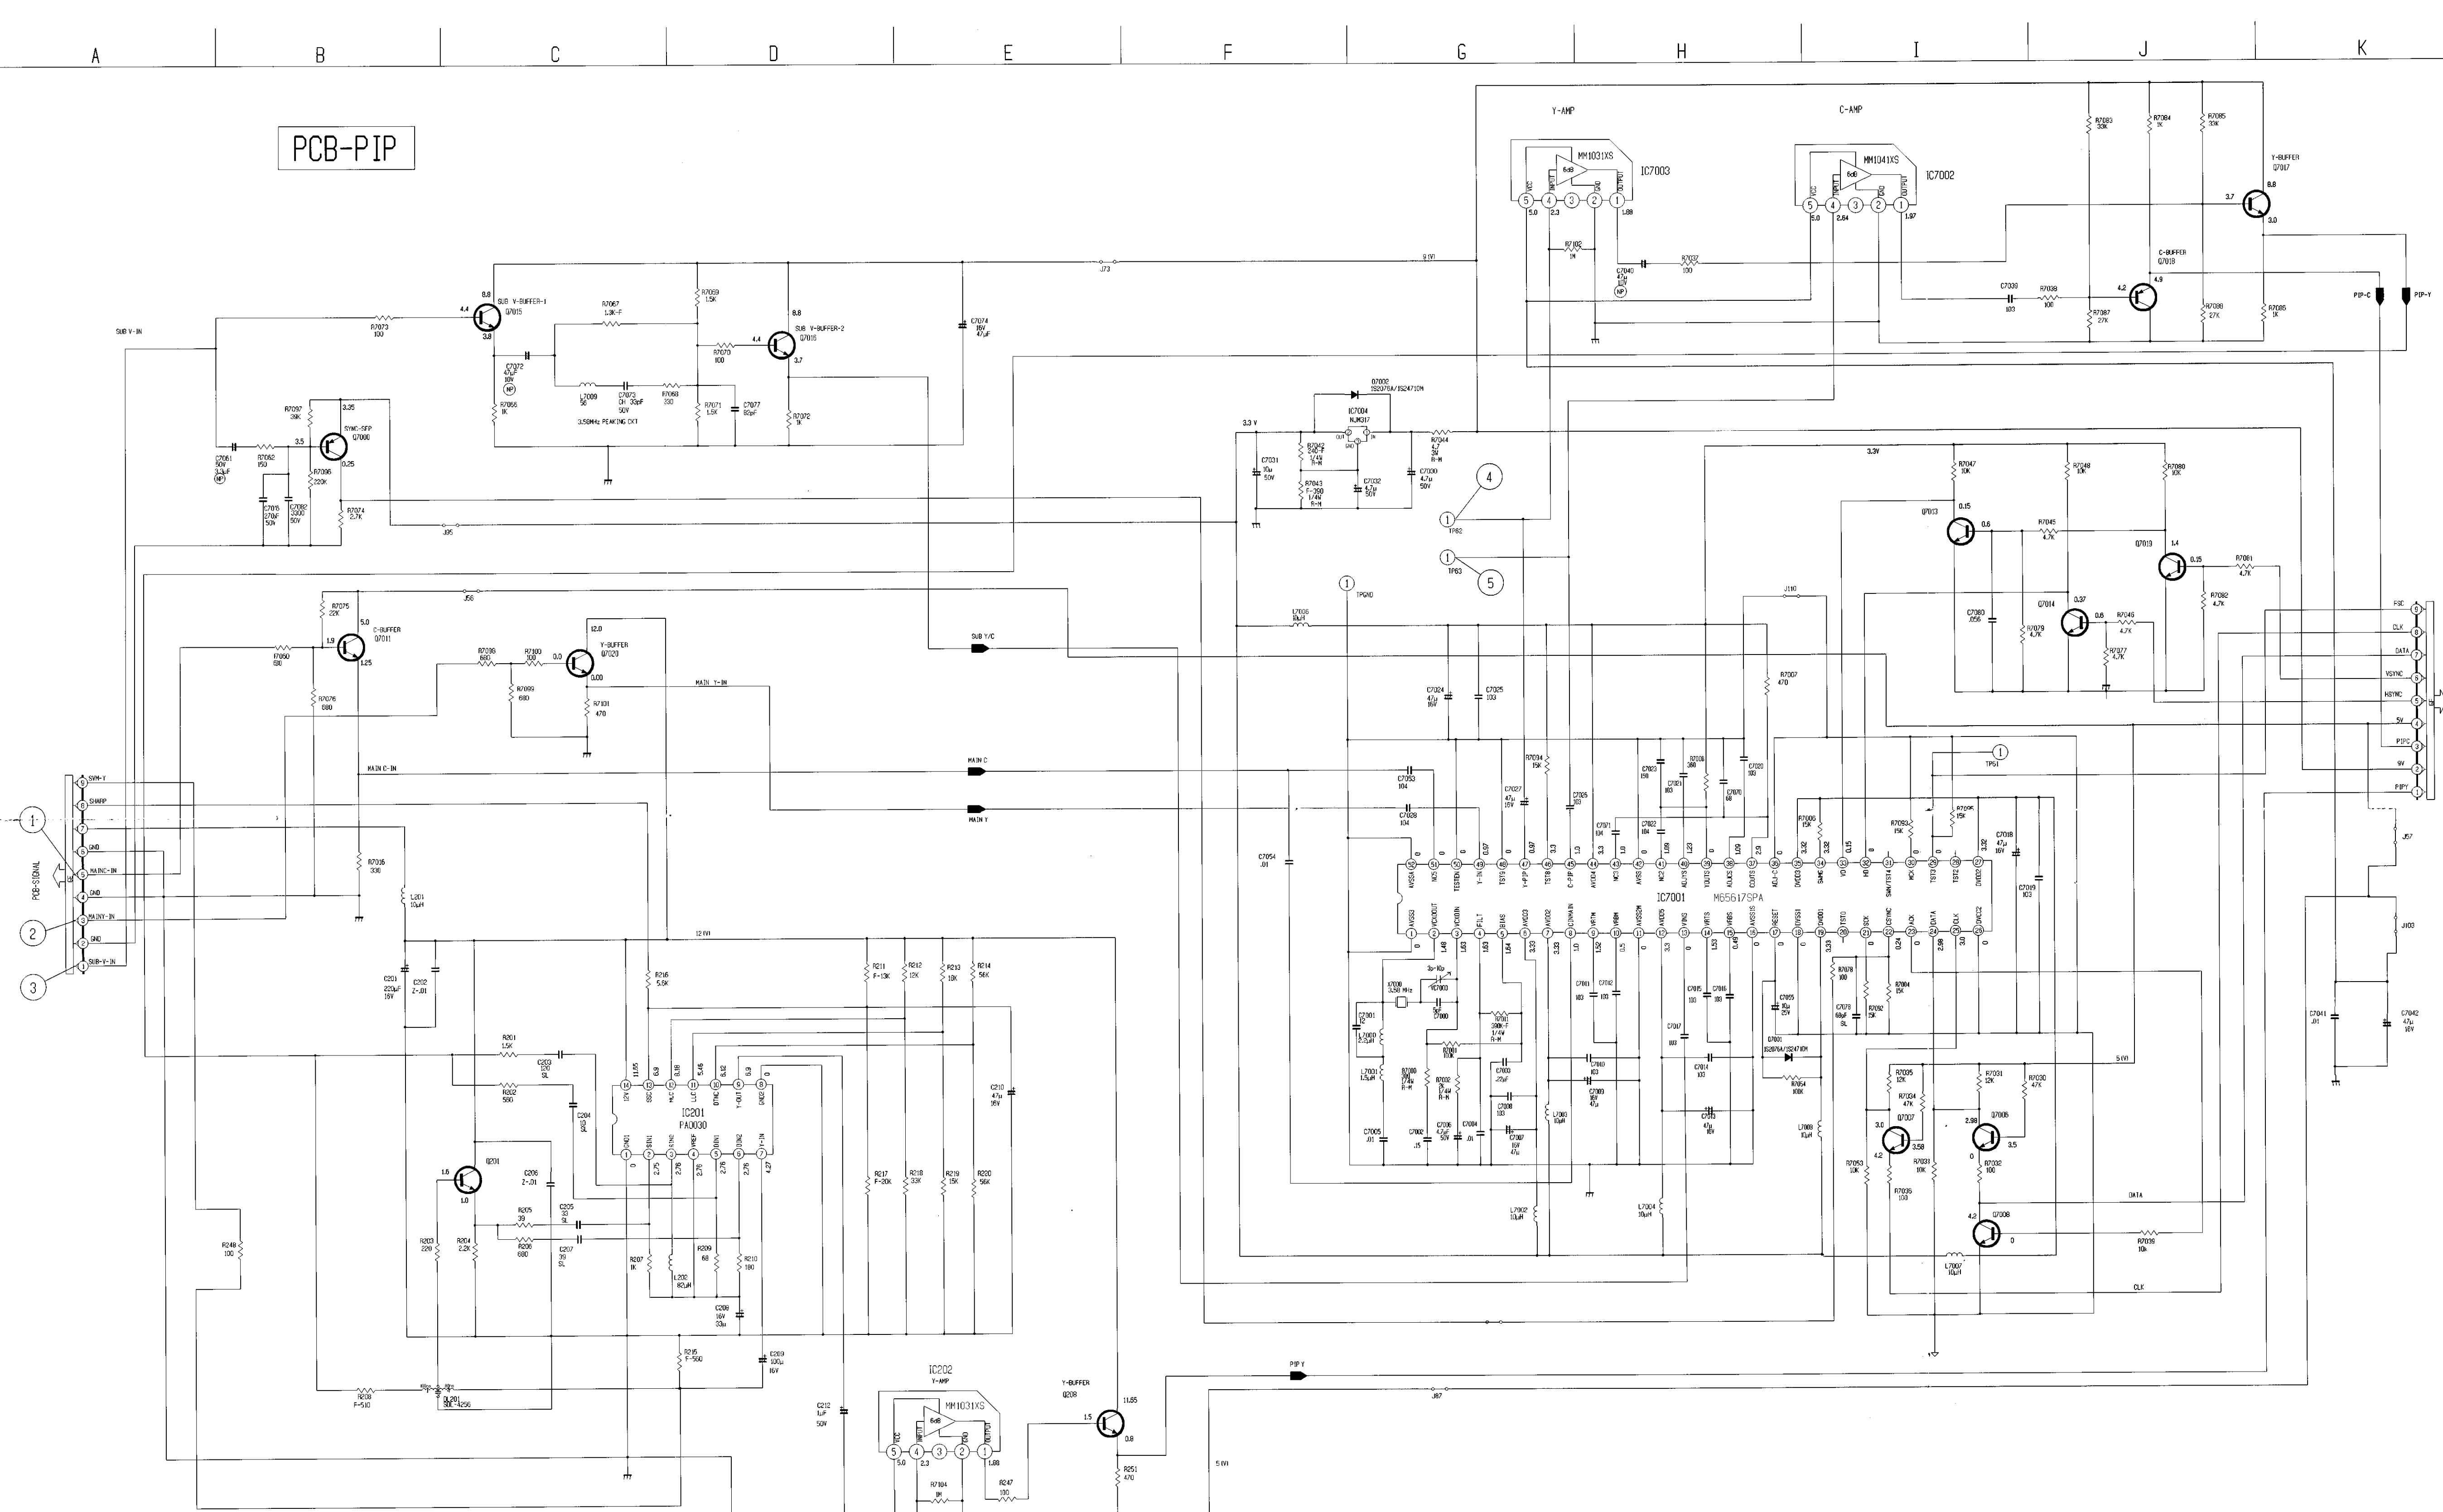


CONTENTS

- PG. 1....BLOCK DIAGRAM
- PG. 2....MAIN
- PG. 3....SIGNAL
- PG. 4....FS
- PG. 5....HF
- PG. 6....SVM
- PG. 7....AV/YCS
- PG. 8....PIP/APT
- PG. 9....CONV
- PG.10....DBF. CONT-1, FRONT-1, PREAMP CRT (R), CRT (G), CRT (B)

MPN	2962003-E7/254835-PLS
PNP	29A1115-EF/254835-PLS

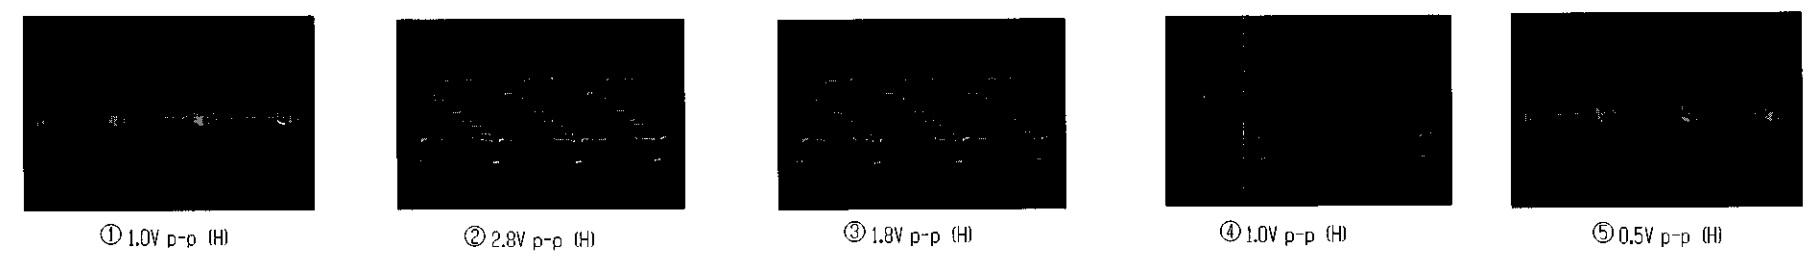

8 VS-45501
VS-45502
VS-45501A
VS-50501
VS-50502
VS-50502A

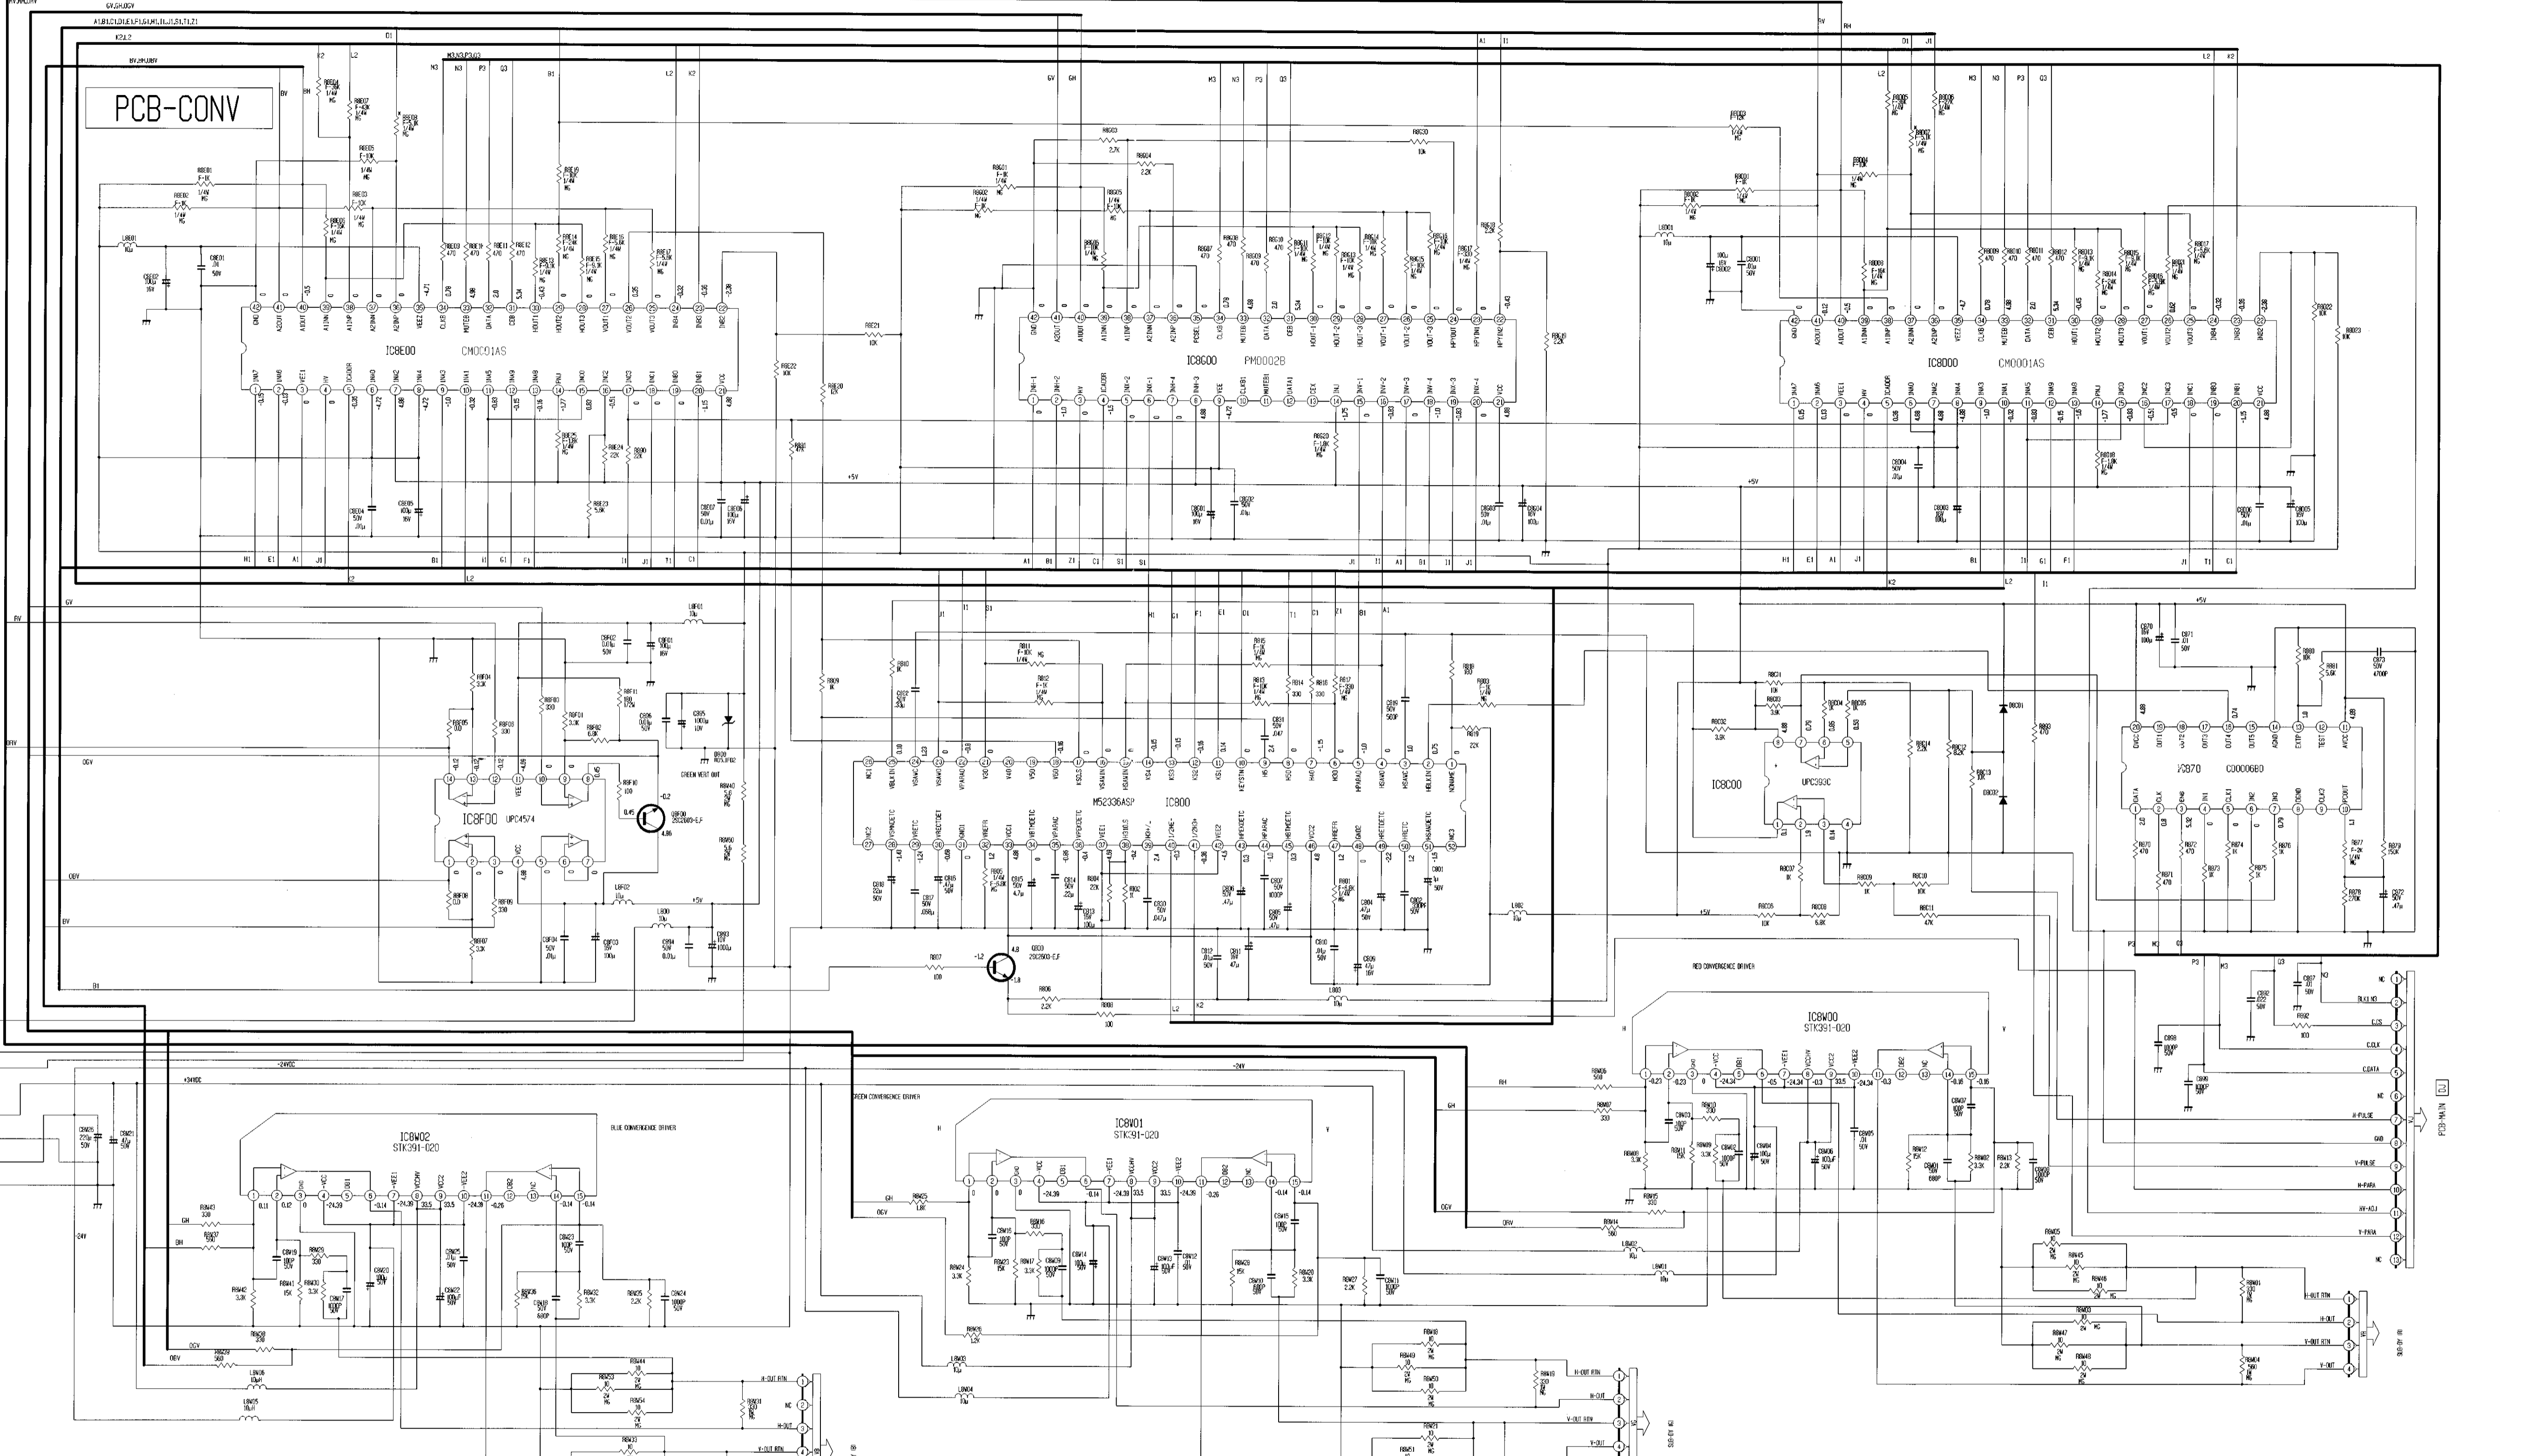

Component list table:

Component	1	2	3	4	5	6	7	8
RESISTOR	1.0K	1.0K	1.0K	1.0K	1.0K	1.0K	1.0K	1.0K
CAPACITOR	100N	100N	100N	100N	100N	100N	100N	100N

CONTENTS

- PG. 1...BLOCK DIAGRAM
- PG. 2...MAIN
- PG. 3...SIGNAL
- PG. 4...FS
- PG. 5...HF
- PG. 6...SVM
- PG. 7...AV/YCS
- PG. 8...PIP/APT
- PG. 9...CONV
- PG.10...DBF, CONT-1, FRONT-1, PREAMP CRT (R), CRT (G), CRT (B)