




**AM/FM STEREO TUNER  
UKW/MW STEREO TUNER  
TUNER STEREO AM/FM**

**MODEL  
MODELL  
MODÈLE**

**FT-920**

**SERVICE MANUAL  
SERVICE ANLEITUNG  
SERVICE MANUAL**

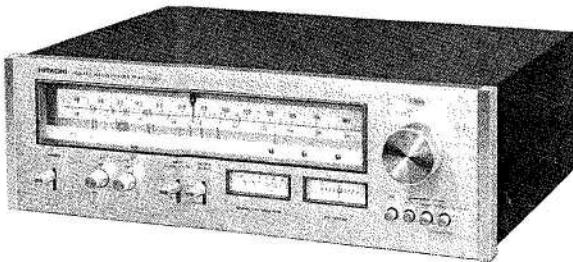

**FT-920**

**1. SPECIFICATIONS, TECHNISCHE DATEN, CARACTERISTIQUES TECHNIQUES**

<b>Circuit</b>	FM: Dual gate MOS FET, RF single stage, 4 interlocked variable condenser, 4-stage differential IF amplifier wide band linear detector, PLL MPX AM: RF single stage, 3 interlocked variable condenser IC: 4 Transistors: 25 (1 FET) Diodes: 25 (1 LED)
<b>Semiconductors</b>	
• <b>FM SECTION</b>	
Frequency range	88-108 MHz
Sensitivity	1.7 $\mu$ V (IHF), 3 $\mu$ V (S/N 50 dB Mono), 32 $\mu$ V (S/N 50 dB Stereo)
Image rejection	more than 75 dB
IF rejection	more than 90 dB
Harmonic distortion	Mono 0.15% (1 kHz), Stereo 0.25% (1 kHz)
Signal-to-noise ratio	72 dB
Selectivity (IHF)	80 dB
Stereo separation	50 dB (1 kHz)
Capture ratio	1.0 dB
Antenna input impedance	300 ohms balanced type, 75 ohms unbalanced type
• <b>AM SECTION</b>	
Frequency range	530-1,605 kHz
Sensitivity (IHF)	18 $\mu$ V
Image rejection	more than 65 dB
IF rejection	more than 85 dB
Selectivity	40 dB
Signal-to-noise ratio	50 dB
• Output voltage/Output impedance	0.65V/less than 6 kohms (Fixed), 0.04-1.2V/less than 1 kohms (Variable)
• Power supply	AC 120V 60 Hz, AC 220-240V 50 Hz
• Power consumption	19 W
• Dimensions	435 (W) $\times$ 144 (H) $\times$ 394 (D) mm
• Weight	7.8 kg
• Accessory circuits	FM tuning meter, Signal/FM multipath meter, FM stereo indicator, FM muting/auto lock switch, Stereo-mono automatic change-over, FM/AM output level adjustment, MPX noise filter switch, FM 4-channel MPX output terminal, FM multipath output terminal, AM bar antenna

Specifications and designs may be changed without notice for improvement.

**MODEL FT-920 SERVICE MANUAL**  
**MODELL FT-920 SERVICE ANLEITUNG**  
**MODELE FT-920 SERVICE MANUAL**

Schaltung	UKW: Dual-Gate MOS FET, RF (einstufig), 4 verriegelte Verstellkondensatoren, 4-stufige Zwischenfrequenz Differentialverstärkung, Breitband-Linieargleichrichtung, PLL MPX MW: RF (abgestimmt, einstufig), 3 verriegelte Verstellkondensatoren 4 ICs, 25 Transistoren (1 FET), 25 Dioden (1 LED)
Bestückung	
• UKW-Empfangsteil	88-108 MHz
Wellenbereich	1.7 µV (IHF), 3 µV (Mono-Geräuschspannungsabstand 50 dB), 32 µV (Stereo-Geräuschspannungsabstand 50 dB)
Empfindlichkeit	mehr als 75 dB mehr als 90 dB
Spiegelselektion	Mono 0.15% (1 kHz) Stereo 0.25% (1 kHz)
ZF – Dämpfung	72 dB 80 dB
Klirrfaktor	50 dB (1 kHz)
Geräuschspannungsabstand	1.0 dB
Selektivität (IHF)	300 Ohm (abgeglichen), 75 Ohm (nicht abgeglichen)
Kanaltrennung	
Einfangverhältnis	
Antennen-Eingangsimpedanz	
• MW-Empfangsteil	530-1,605 kHz
Wellenbereich	18 µV
Empfindlichkeit (IHF)	mehr als 65 dB
Spiegelselektion	mehr als 85 dB
ZF – Dämpfung	40 dB
Selektivität	50 dB
Geräuschspannungsabstand	0.65 V/weniger als 6 kOhm (fest), 0.04 – 1.2 V/weniger als 1 kOhm (einstellbar)
• Ausgangsspannung/Ausgangsimpedanz	Wechselstrom 120 V/60 Hz oder 220–240 V/50 Hz
• Netzspannung	19 W
• Leistungsaufnahme	435 (B) x 144 (H) x 394 (T) mm
• Abmessungen	7.8 kg
• Gewicht	UKW-Abstimm-anzeige, Signal/UKW-MULTIPATH-Meter, UKW-Stereo-Anzeige, UKW-Stillabstimmung, Stereo/Mono-Umschaltautomatik, UKW/MW-Ausgangs-pegele-regelung, MPX-Geräuschfilter, MPX-Ausgangsklemmen für UKW-Quadrofonie (4 Kanal), UKW-MULTIPATH-Ausgangsklemmen, MW-Stabantenne
• Sonstiges	

Änderungen der technischen Daten bleiben im Sinne der ständigen Verbesserung vorbehalten.

Circuit	FM: MOS FET à double porte, RF à simple étage, 4 condensateurs variables solides, amplification IF à quatre étages différentiels, détecteur linéaire de bande passante, PLL MPX AM: RF syntonisé à simple étage, 3 condensateurs variables solides IC: 4 transistors: 25 (1 FET) Diodes: 25 (1 LED)
Semi conducteur	
• Partie FM	88-108 MHz
Bande de fréquence	1.7µV (IHF), 3µV (S/B 50 dB Mono), 32µV (S/N 50 dB Stéréo)
Sensibilité	plus de 75 dB
Rejet image	plus de 90 dB
Rejet MF	Mono 0.15% (1 kHz) Stéréo 0.25% (1 kHz)
Distorsion harmonique	72 dB
Rapport signal/bruit	80 dB
Sélectivité (IHF)	50 dB (1 kHz)
Séparation stéréo	1.0 dB
Rapport de captage	type compensé de 300 ohms, type non compensé de 75 ohms
Impédance d'entrée de l'antenne	
• Partie AM	530-1605 kHz
Bande de fréquence	18 µV
Sensibilité (IHF)	plus de 65 dB
Rejet image	plus de 85 dB
Rejet MF	40 dB
Sélectivité	50 dB
Rapport signal/bruit	0.65 V/moins de 6 kohms (Fixes), 0.04–1.2 V/moins de 1 k ohms (variables)
Voltage de sortie/Impédance de sortie	CA 120 V 60 Hz, CA 220–240 V 50 Hz
• Alimentation	19 W
• Consommation	435 (L) x 144 (H) x 394 (P) mm
• Dimensions	7.8 kg
• Poids	mètreur d'accord FM, mètreur Signal/ FM multipath, indicateur FM stéréo, commutateur atténuateur FM/verrouillage automatique, commutateur automatique stéréo /mono, réglage du niveau de sortie FM/AM, interrupteur du filtre de bruit MPX, borne de sortie MPX des 4 canaux FM, borne de sortie FM Multipath, antenne ferrite AM
• Circuits Accessories	

Les caractéristiques techniques et la présentation peuvent être modifiées sans préavis pour des raisons d'améliorations.

**FEATURES / MERITS / CARACTÉRISTIQUES**

1. The FM tuner intermediate frequency amplifier has excellent limiter characteristics because of the use of 4-stage differential amplification with ICs used throughout and a 3-element ceramic filter with excellent phase characteristics which also greatly improves selectivity. Quadrature detector using ICs extensively makes wider bandwidth and low distortion reception possible.
2. The newly developed PLL (Phase Locked Loop) IC which is the result of Hitachi's advanced technology is used in the FM detector thereby achieving high separation and low distortion combined with excellent reliability which is resistant to changes in temperature and the lapse of time.
3. An auto-lock tuning mechanism is employed which makes the location of the optimum tuning position easy in FM reception. After the selection of the station, the auto-lock tuning mechanism operates immediately after the tuning knob is released, automatically tuning to the optimum frequency to which it is then locked. This mechanism eliminates tuning errors and once tuned outside influences do not affect the tuning.
4. Stable reception possible with optimum separation and minimum distortion.  
The use of reed relays in the FM muting circuit eliminates inter-station noise which occurs in detuning, making listening to broadcasts more enjoyable.

1. Die Verwendung von keramischen Filtern mit großer Flankensteilheit und vierstufiger Differentialverstärkung mit integrierten Bausteinen im Zwischenfrequenzverstärker des UKW-Tuners hat eine Erhöhung der Trennschärfe bewirkt und zu ausgezeichneter Grenzwert-Charakteristik geführt. Ein mit integrierten Schaltungen bestückter Phasenschieberkreis gewährleistet große Bandbreite und sehr geringen Klirrfaktor.
2. Die neu entwickelte, phasenstarre PLL-Schaltung (PLL = Phase Locked Loop) – eine weitere technologische Errungenschaft von HITACHI – im UKW-Demodulator führt zu erhöhter Trennschärfe bei verminderter Verzerrung; ein weiterer Vorteil ist die ausgezeichnete Beständigkeit gegen Temperaturschwankungen und Alterung.
3. Für optimalen UKW-Empfang ist dieser Tuner mit Scharfabstimm-Automatik ausgerüstet. Allein durch das Berühren des Abstimmreglers wird die Scharfabstimm-Automatik für die Dauer der Sendersuche außer Betrieb gesetzt. Nach erfolgter Sender-Einstellung und Loslassen des Abstimmreglers schaltet die Automatik wieder ein, bringt den Sender genau auf Mitte und hält ihn unverrückbar fest.
4. Stabiler Empfang mit optimaler Trennschärfe und geringstem Klirrfaktor.  
Die Verwendung von Zungenrelais in der UKW-Stillabstimmung eliminiert Zwischenstationsrauschen beim Abstimmen und trägt so zu erhöhtem Hörgenuss bei.

1. Le récepteur MF à amplificateur de fréquence intermédiaire a d'excellentes caractéristiques grâce à l'utilisation d'une amplification différentielle à 4 étages avec circuits intégrés exclusivement et un filtre à céramique à trois éléments avec d'excellentes caractéristiques de phase qui améliore aussi grandement la sélectivité. La détection tétraphonique utilisant largement les circuits intégrés augmente la largeur de la bande passante et rend possible une réception à faible distorsion.
2. Le circuit intégré PLL (boucle à blocage de phase) récemment développé et qui est le résultat de la technologie avancée Hitachi, est utilisé dans le détecteur MF parvenant ainsi à une haute précision et à une faible distorsion en même temps qu'à une excellente fiabilité qui résiste aux changements de température ainsi qu'au vieillissement.
3. Un mécanisme auto blocage des stations est employé et il facilite la localisation de la position optimale des stations dans la réception MF. Après la sélection de la station le mécanisme auto blocage entre en jeu immédiatement après que le bouton de sélection est relâché choisissant automatiquement la fréquence optimale à laquelle il se bloque. Ce mécanisme élimine les erreurs de sélection et empêche les influences extérieures d'affecter le réglage une fois qu'elle est opérée.
4. Réception stable possible avec une précision optimale et une distorsion minimale.  
L'utilisation de relais dans le circuit de réglage silencieux élimine les bruits de réglage entre les stations ainsi que ceux qui proviennent dans le changement des stations, rendant votre écoute des programmes plus agréable.

**MODEL FT-920 SERVICE MANUAL**  
**MODELL FT-920 SERVICE ANLEITUNG**  
**MODELE FT-920 SERVICE MANUAL**

**SERVICE POINT AVARIES SPANNING POINTS DE SERVICE**

**1. Removing the control printed wiring board**

Remove the escutcheon, detach the meter lead wire from the control printed wiring board. Then detach the screw shown in Fig. 1.

**2. Replacement of the dial scale illumination lamp**

Detach the lamp printed wiring board. Since the lamp is attached to the printed wiring board as shown in Fig. 2, break the lamp after melting the solder of the lead wire. (Caution: Detaching forcibly by hand can cause injury). A lamp as shown in Fig. 3 is provided for replacement.

**3. Caution on replacing FM ceramic filter**

Filters are classified by color-red, blue, orange-depending on the different characteristics. Match the colors of MF201-203 when replacing.

Remove the screw  
Schraube entfernen  
Enlevez la vis

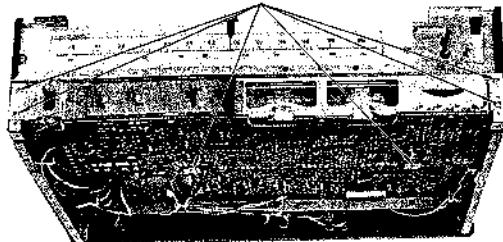


Fig. 1 Abb. 1

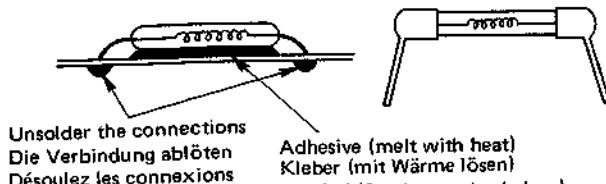


Fig. 2 Abb. 2

Fig. 3 Abb. 3

**1. Ausbau der Regler- Druckplatte**

Das Schild abnehmen und den Instrumenten-Leitungsdräht von der Regler-Druckplatte lösen. Anschließend die in Abbildung 1 gezeigte Schraube entfernen.

**2. Auswechseln der Skalenbeleuchtungslampe**

Die Lampen-Druckplatte ausbauen. Die Lampe ist an der Druckplatte gemäß Abbildung 2 befestigt. Den Leitungsdräht ablöten und danach die Lampe herausbrechen. (Vorsicht: Beim Ausbrechen der Lampe mittels Hand könnten Verletzungen auftreten.) Eine Ersatzlampe ist gemäß Abbildung 3 angebracht.

**3. Auswechseln der FM-Keramikfilter**

Die Keramikfilter sind in Übereinstimmung mit ihren Charakteristiken mit verschiedenem Farbkode (Rot, Blau, Orange) versehen. Beim Austausch daher immer das entsprechende Filter an den Farbkode von MF201-203 anpassen.

**4. Use of ferrite core**

A ferrite core is attached to the second gate of FET101 and the collector of Q101 (transistor) in the FM section, to prevent oscillation.

This ferrite is also attached to the replacement parts.

**5. Since a sensor-touch auto-lock mechanism is employed, the tuning knob is insulated from the chassis earth by washers and spacers. Be sure to install them after repair.**

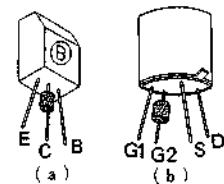


Fig. 4 Abb. 4

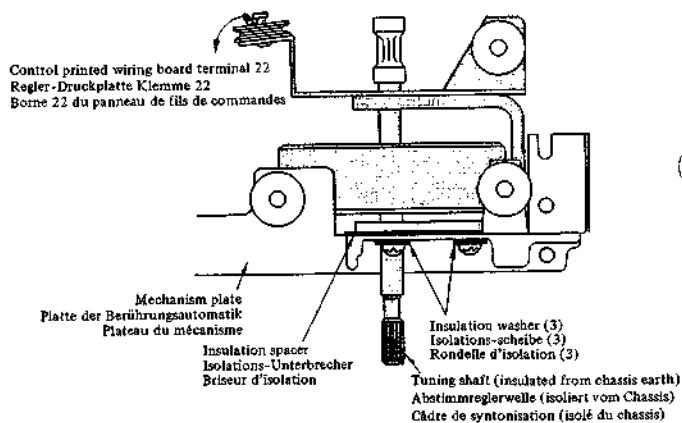


Fig. 5 Abb. 5

**4. Verwendung des Ferritkerns**

Ein Ferritkern ist am zweiten Tor des FET101 und des Kollektors von Q101 (Transistor) des FM-Teiles angebracht, um Schwingungen zu vermeiden. Ein zusätzlicher Ferritkern befindet sich im Ersatzteilsatz.

**5. Da der Abstimmregler mit Berührungsautomatik ausgerüstet ist, ist der Abstimmknopf mittels Unterlegescheiben und Abstandhaltern gegen Massegeschluß mit dem Chassis isoliert. Nach allfälligen Reparaturen sind die genannten Teile unbedingt wieder einzubauen.**

**MODEL FT-920 SERVICE MANUAL**  
**MODELL FT-920 SERVICE ANLEITUNG**  
**MODÈLE FT-920 SERVICE MANUAL**

**MODEL FT-920 SERVICE MANUAL**  
**MODELL FT-920 SERVICE ANLEITUNG**  
**MODÈLE FT-920 SERVICE MANUAL**

**1. Pour enlever le plateau imprimé de commande**

Enlevez l'écusson, détachez le fil de mètre du plateau de commande. Puis détachez la vis montrée sur la figure 1.

**2. Remplacement de la lampe d'éclairage du cadran d'échelle**

Détachez le panneau des fils de lampe. Puis que la lampe est attachée à ce panneau comme le montre la Fig/2, brisez la lampe après avoir fait fondre la soudure du fil conducteur. (Attention: forcer avec la main pourrait provoquer des dégâts). Une lampe est fournie pour le remplacement comme le montre la Fig. 3.

**3. Précautions pour remplacer le filtre céramique FM**


Les filtres sont classés par couleur-rouge, bleu, orange selon leurs caractéristiques. Ajustez les couleurs de MF201-203 quand vous les remplacez.

**4. Utilisation d'un noyau de ferrite**

Un noyau de ferrite est incorporé à la deuxième porte de FET101 et au collecteur de Q101 (transistor) dans la partie MF pour éviter les oscillations.


Cette ferrite est aussi incorporée aux pièces de remplacement.

**5. Puisqu'on utilise un mécanisme de verrouillage automatique de la touche de sensibilité, la commande de syntonisation est isolé du chassis par des rondelles et des isolants. Assurez-vous de bien les installer après la réparation.**

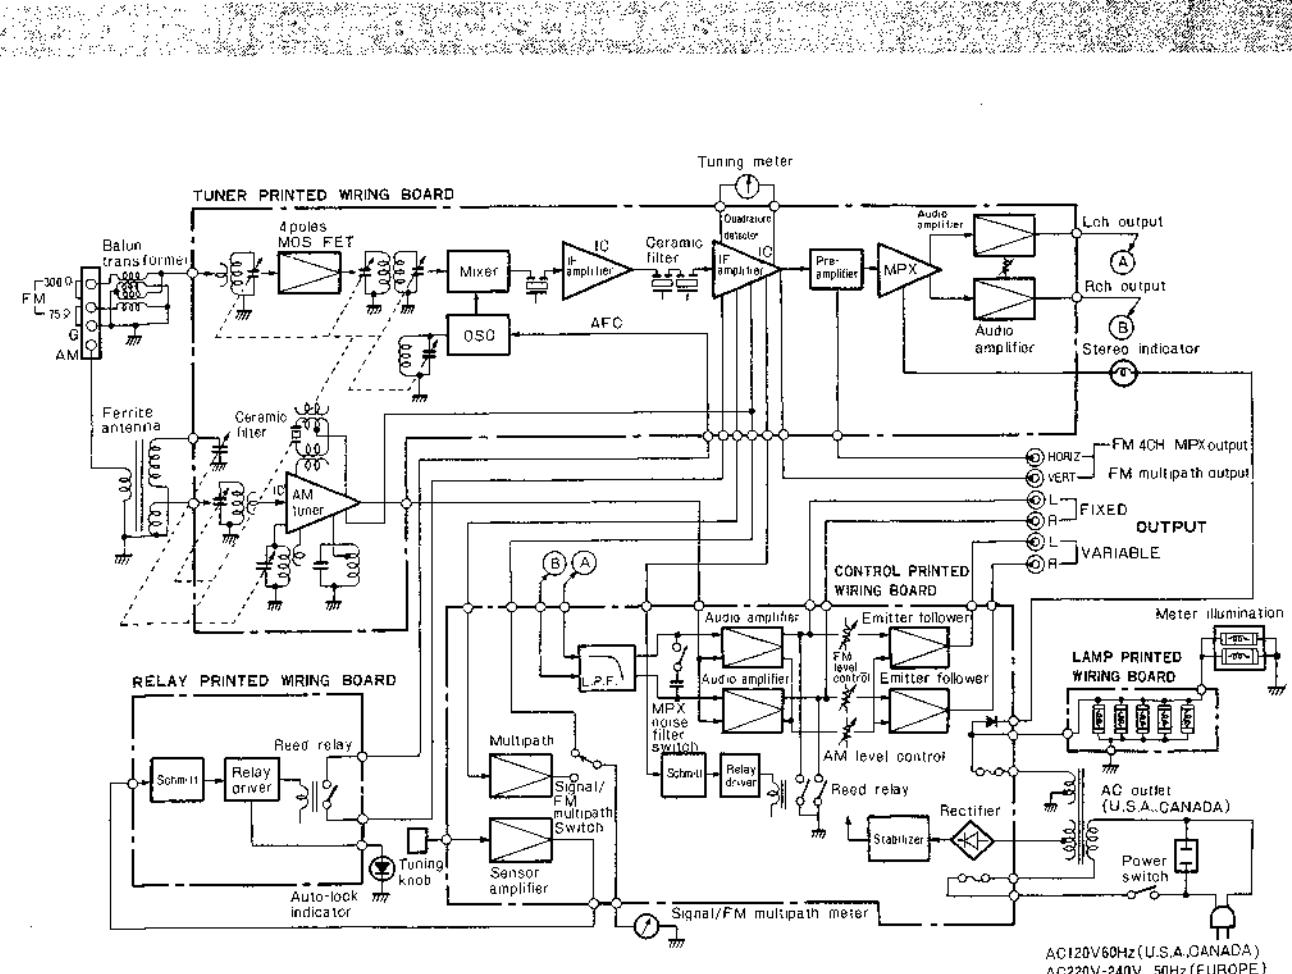

**TUNER PRINTED WIRING BOARD**


The terminal No. shows the stamp on the printed wiring board. This number matches the number in the circuit diagram.

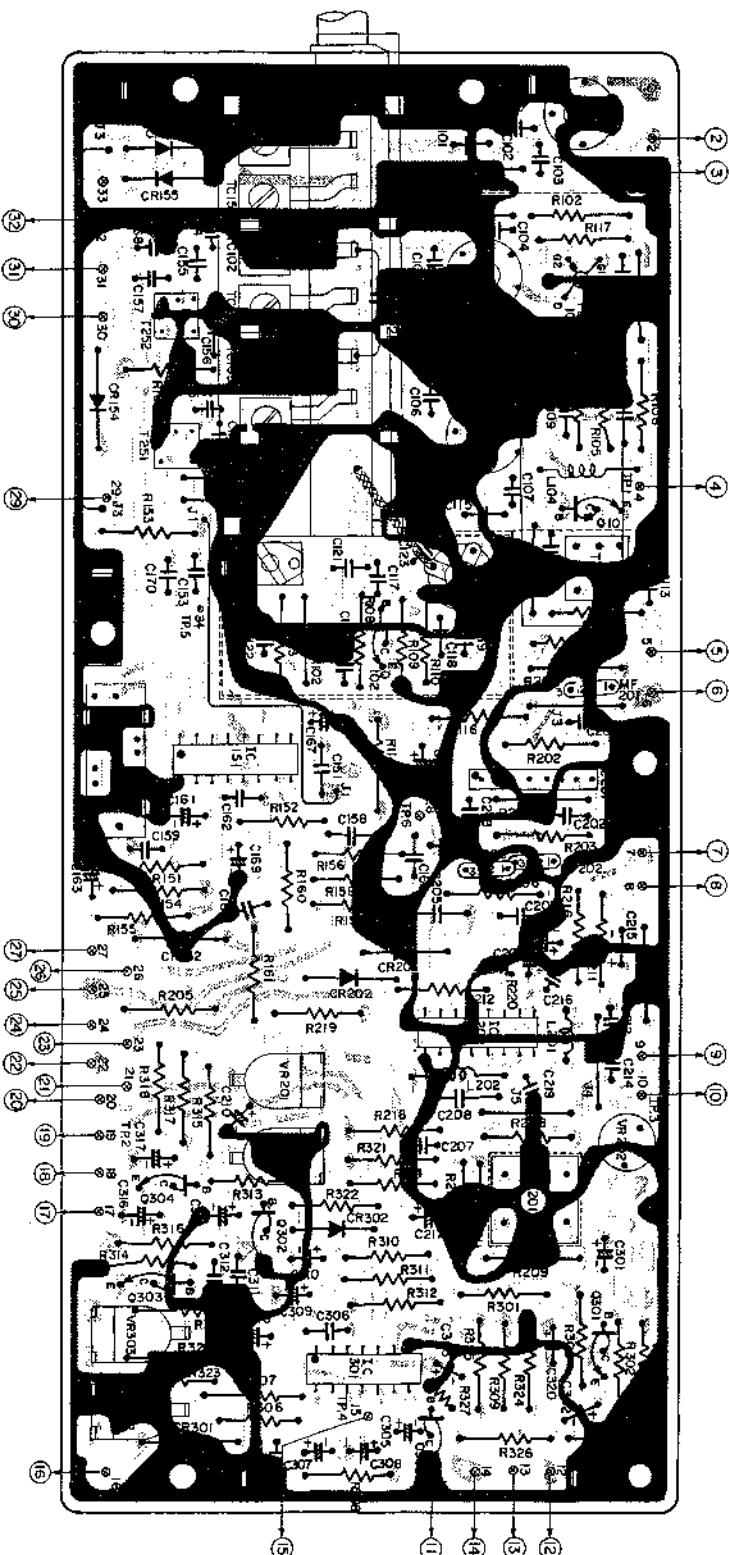


**MODEL FT-920 SERVICE MANUAL  
MODELL FT-920 SERVICE ANLEITUNG  
MODÈLE FT-920 SERVICE MANUAL**

## **CONTROL PRINTED WIRING BOARD**

The terminal No. shows the stamp on the printed wiring board.  
This number matches the number in the circuit diagram.

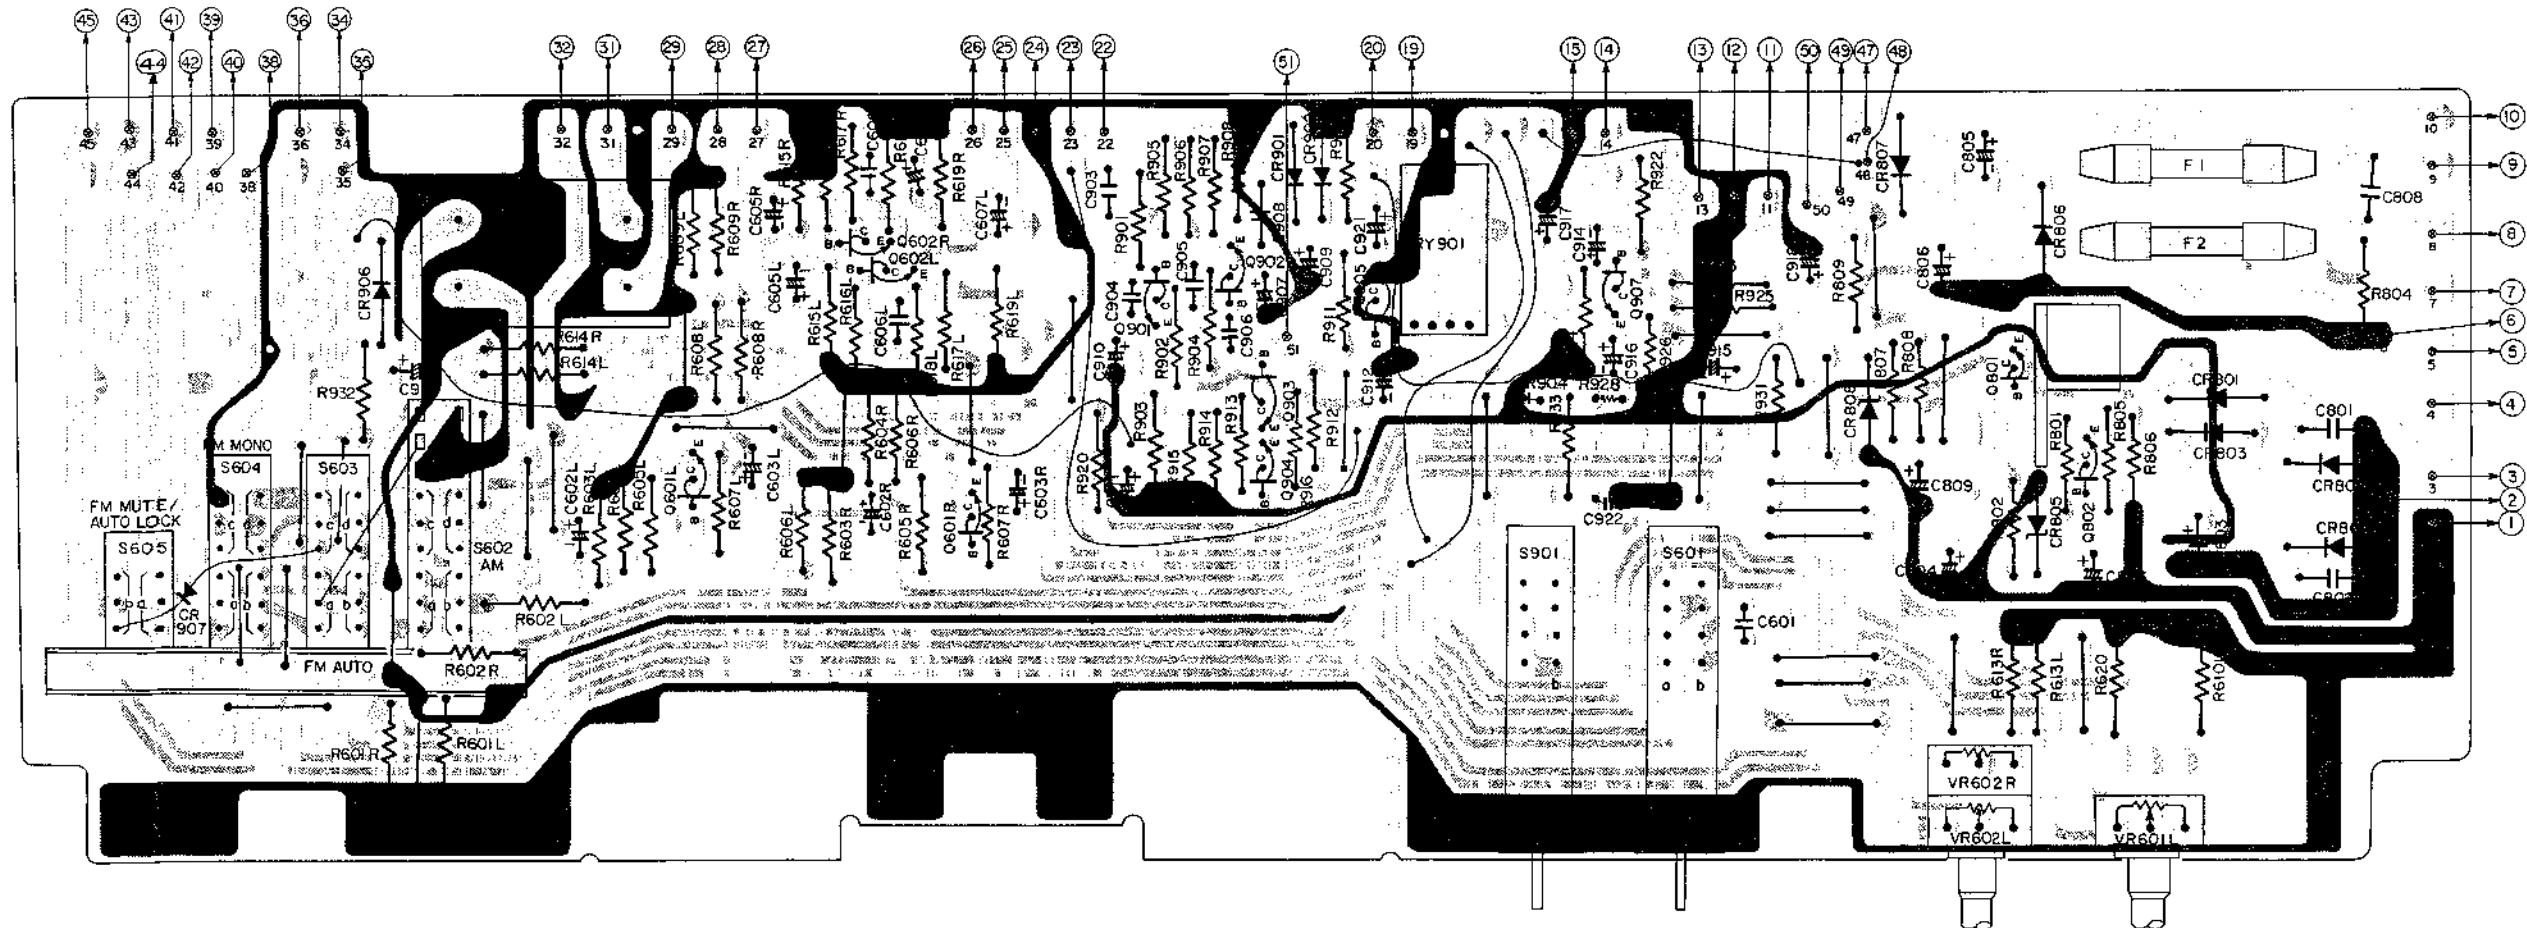


## **RELAY PRINTED WIRING BOARD**

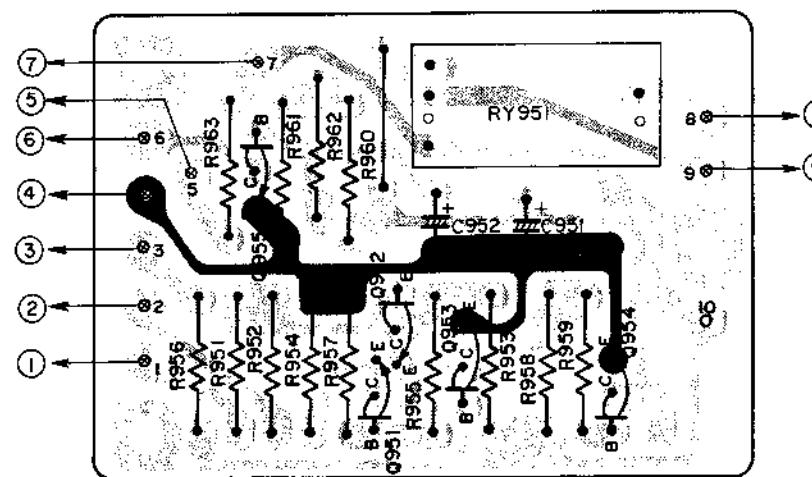


#### DIAL CORD SETTING

Note: The dial pulley shows the position that the variable condenser is turned to the counterclockwise direction.

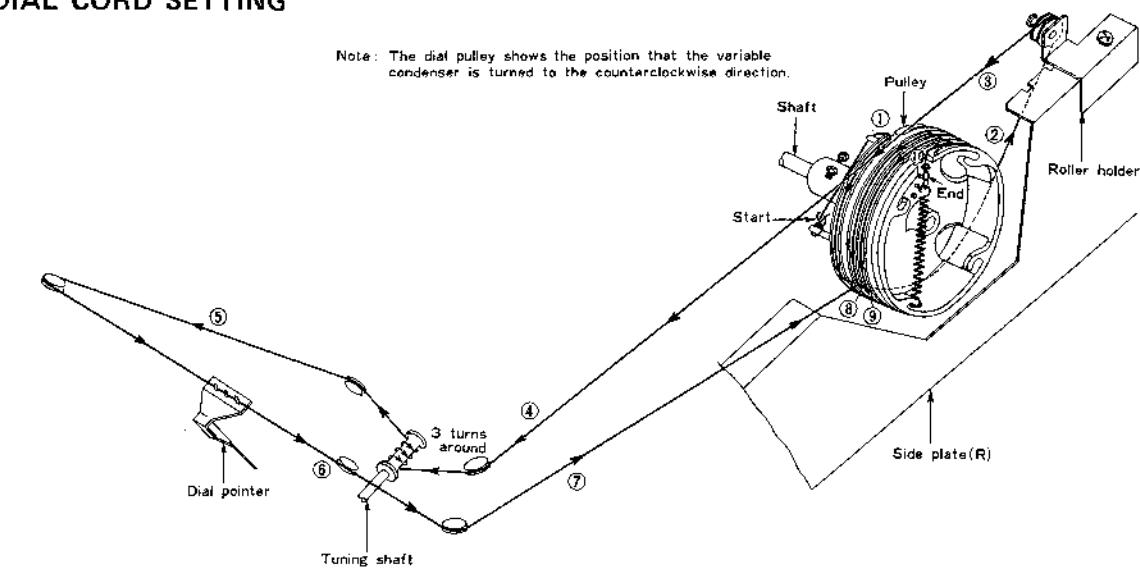

The circuit diagram is subject to change for improvement without notice.

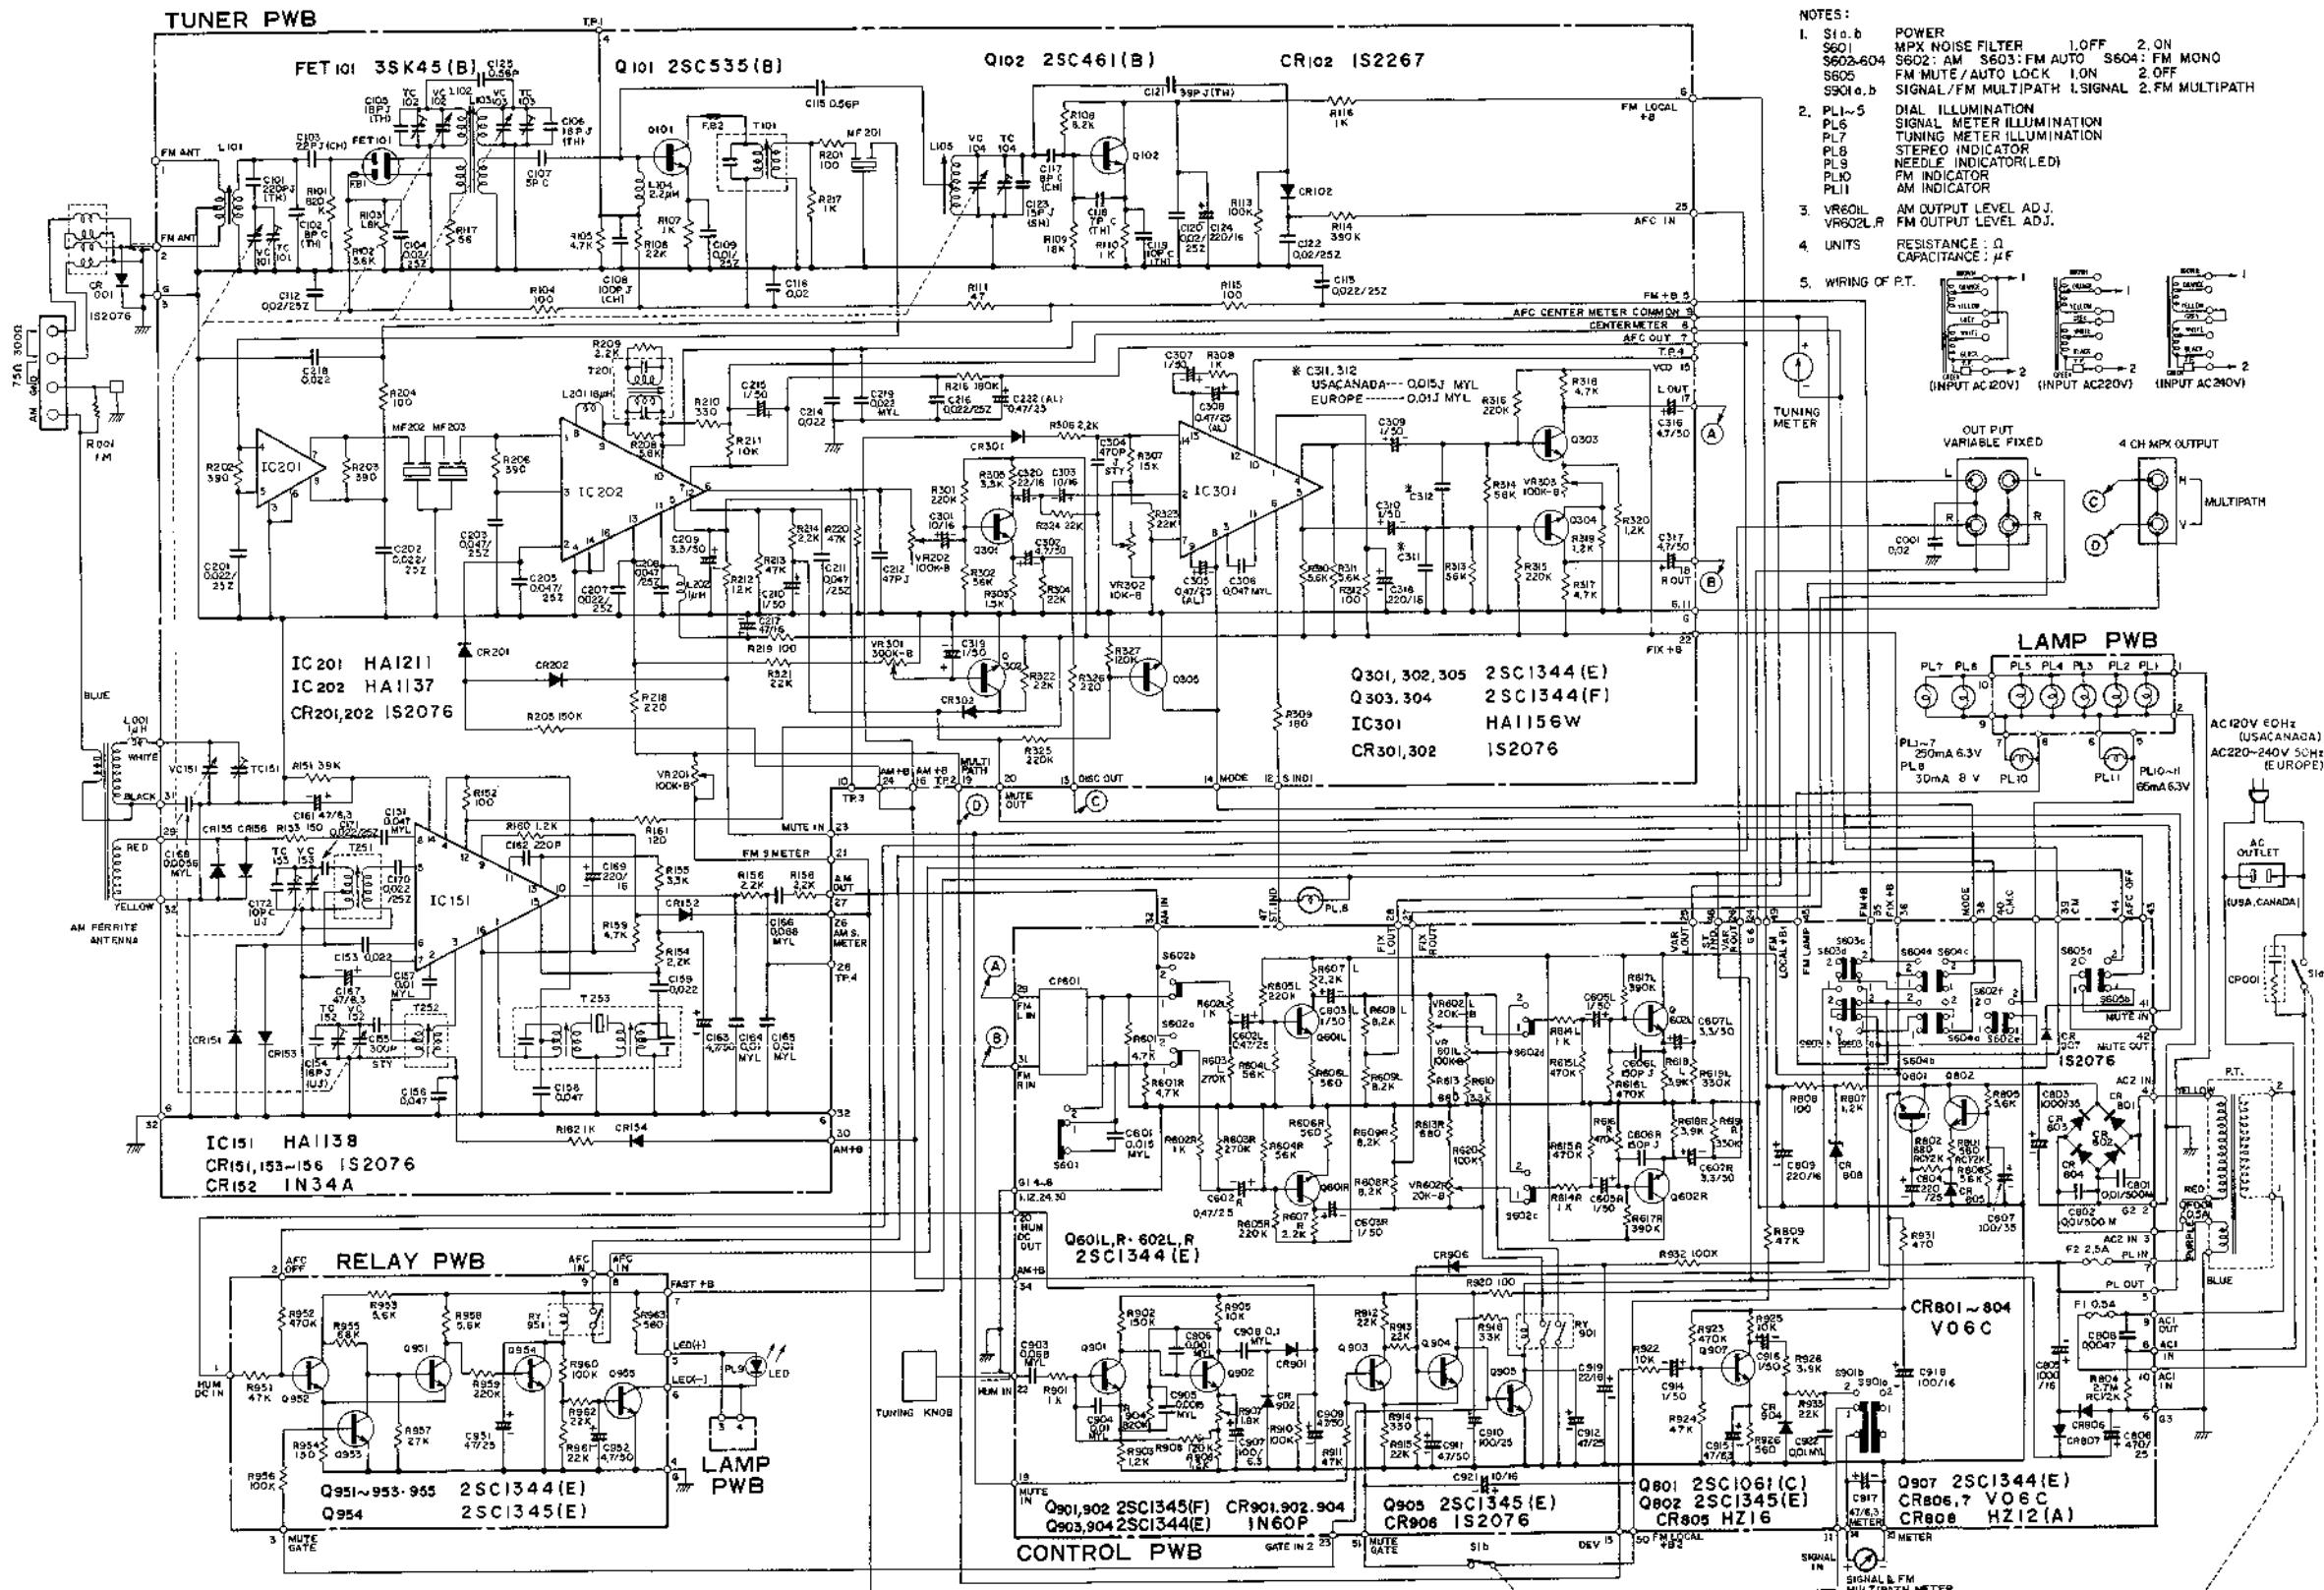

**MODEL FT-920 SERVICE MANUAL**  
**MODELL FT-920 SERVICE ANLEITUNG**  
**MODÈLE FT-920 SERVICE MANUAL**

**MODEL FT-920 SERVICE MANUAL**  
**MODELL FT-920 SERVICE ANLEITUNG**  
**MODÈLE FT-920 SERVICE MANUAL**

SYMBOL NO.	STOCK NO.	DESCRIPTION			SYMBOL NO.	STOCK NO.	DESCRIPTION								
<b>CAPACITORS</b>															
<b>for TUNER PRINTED WIRING BOARD</b>															
C101	0248362	Ceramic, discal	220pF	±5%	50V	C216	0245018	Ceramic, discal	0.022μF	+80% -20%	25V				
C102	0248308	Ceramic, discal	8pF	±0.25pF	50V	C217	0252525	Electrolytic	47μF	16V					
C103	0246448	Ceramic, discal	22pF	±5%	50V	C218	0245018	Ceramic, discal	0.022μF	+80% -20%	25V				
C104	0245018	Ceramic, discal	0.02μF	+80% -20%	25V	C219	0275013	Mylar, film	0.022μF	±10%	50V				
C105	0248335	Ceramic, discal	1.6pF	±5%	50V	C222	0251925	Aluminum solid	0.47μF	±10%	25V				
C106	0248335	Ceramic, discal	1.6pF	±5%	50V	C301	0252521	Electrolytic	10μF	16V					
C107	0248635	Ceramic, discal	59pF	±0.25pF	50V	C302	0252815	Electrolytic	4.7μF	50V					
C108	0246464	Ceramic, discal	100pF	±5%	50V	C303	0252521	Electrolytic	10μF	16V					
C109	0245017	Ceramic, discal	0.01μF	+80% -20%	25V	C304	0221522	Styrol	470pF	±5%	50V				
C112	0245018	Ceramic, discal	0.02μF	+80% -20%	25V	C305	0251925	Aluminum solid	0.47μF	±10%	25V				
C113	0245018	Ceramic, discal	0.022μF	+80% -20%	25V	C306	0275015	Mylar, film	0.047μF	±10%	50V				
C115	0231185	Ceramic, discal	0.56pF	±5%	500V	C307	0252811	Electrolytic	1μF	50V					
C116	0245018	Ceramic, discal	0.02μF	+80% -20%	25V	C308	0251925	Aluminum solid	0.47μF	±10%	25V				
C117	0246418	Ceramic, discal	8pF	±0.25pF	50V	C309	0252811	Electrolytic	1μF	50V					
C118	0248307	Ceramic, discal	7pF	±0.25pF	50V	C310	0252811	Electrolytic	1μF	50V					
C119	0248310	Ceramic, discal	10pF	±0.25pF	50V	C311	0275211	Mylar, film	0.01μF	±5%	50V (for Europe & U.K.) (for Canada)				
C120	0245018	Ceramic, discal	0.02μF	+80% -20%	25V	C311	0275212	Mylar, film	0.015μF	±5%	50V (for Europe & U.K.) (for Canada)				
C121	0248344	Ceramic, discal	39pF	±5%	50V	C312	0275211	Mylar, film	0.014μF	±5%	50V (for Europe & U.K.) (for Canada)				
C122	0245018	Ceramic, discal	0.02μF	+80% -20%	25V	C312	0275212	Mylar, film	0.015μF	±5%	50V (for Europe & U.K.) (for Canada)				
C123	0248174	Ceramic, discal	1.5pF	±5%	50V	<b>for CONTROL PRINTED WIRING BOARD</b>									
C124	0252532	Electrolytic	220μF		16V	C316	0252815	Electrolytic	4.7μF	50V					
C125	0231185	Ceramic, discal	0.56pF	±5%	500V	C317	0252815	Electrolytic	4.7μF	50V					
C151	0275015	Mylar, film	0.047μF	±10%	50V	C318	0252532	Electrolytic	220μF	16V					
C153	0245018	Ceramic, discal	0.022μF	+80% -20%	25V	C319	0252811	Electrolytic	1μF	50V					
C154	0248496	Ceramic, discal	18pF	±5%	50V	C320	0252522	Electrolytic	22μF	16V					
C155	0228322	Styrol	300pF	±5%	50V	<b>for CONTROL PRINTED WIRING BOARD</b>									
C156	0244175	Ceramic, discal	0.047μF	+80% -20%	25V	C601	0275012	Mylar, film	0.015μF	±10%	50V				
C157	0275011	Mylar, film	0.01μF	±10%	50V	C602(L,R)	0251955	Aluminum solid	0.47μF	±10%	25V				
C158	0244175	Ceramic, discal	0.047μF	+80% -20%	25V	C603(L,R)	0252811	Electrolytic	1μF	50V					
C159	0245018	Ceramic, discal	0.022μF	+80% -20%	25V	C605(L,R)	0252811	Electrolytic	1μF	50V					
C161	0252225	Electrolytic	47μF		6.3V	C606(L,R)	0248688	Ceramic, discal	150pF	±5%	50V				
C162	0248692	Ceramic, discal	220pF	±5%	50V	C607(L,R)	0252813	Electrolytic	3.3μF	50V					
C163	0252815	Electrolytic	4.7μF		50V	C801	0245408	Ceramic, discal	0.01μF	±20%	500V				
C164	0275011	Mylar, film	0.01μF	±10%	50V	C802	0245408	Ceramic, discal	0.01μF	±20%	500V				
C165	0275011	Mylar, film	0.01μF	±10%	50V	C803	0252741	Electrolytic	1000μF		35V				
C166	0275016	Mylar, film	0.068μF	±10%	50V	C804	0252632	Electrolytic	220μF		25V				
C167	0252225	Electrolytic	47μF		6.3V	C805	0252541	Electrolytic	1000μF		16V				
C168	0274235	Mylar, film	5600pF	±5%	50V	C806	0252635	Electrolytic	470μF		25V				
C169	0252532	Electrolytic	220μF		16V	C807	0252731	Electrolytic	100μF		35V (for U.S.A. & Canada)				
C170	0245018	Ceramic, discal	0.022μF	+80% -20%	25V	C808	0243873	Ceramic, discal	0.0047μF	+80% -20%	500V (for Europe & U.K.)				
C171	0245018	Ceramic, discal	0.022μF	+80% -20%	25V	C808	0243875	Ceramic, discal	0.0047μF	+80% -20%	250V (for Europe & U.K.)				
C172	0248470	Ceramic, discal	10pF	±0.25pF	50V	C809	0252532	Electrolytic	220μF		16V				
C201	0245018	Ceramic, discal	0.022μF	+80% -20%	25V	C903	0275016	Mylar, film	0.068μF	±10%	50V				
C202	0245018	Ceramic, discal	0.022μF	+80% -20%	25V	C904	0275011	Mylar, film	0.01μF	±10%	50V				
C203	0244175	Ceramic, discal	0.047μF	+80% -20%	25V	C905	0274012	Mylar, film	1500pF	±10%	50V				
C205	0244175	Ceramic, discal	0.047μF	+80% -20%	25V	C906	0274011	Mylar, film	1000μF	±10%	50V				
C207	0245018	Ceramic, discal	0.022μF	+80% -20%	25V	C907	0252231	Electrolytic	100μF		6.3V				
C208	0244175	Ceramic, discal	0.047μF	+80% -20%	25V	C908	0276011	Mylar, film	0.1μF	±10%	50V				
C209	0252813	Electrolytic	3.3μF		50V	C909	0252815	Electrolytic	4.7μF		50V				
C210	0252811	Electrolytic	1μF		50V	C910	0252631	Electrolytic	10μF		25V				
C211	0244175	Ceramic, discal	0.047μF	+80% -20%	25V	C911	0252815	Electrolytic	4.7μF		50V				
C212	0248676	Ceramic, discal	47pF	±5%	50V	C912	0252625	Electrolytic	47μF		25V				
C214	0245018	Ceramic, discal	0.022μF	+80% -20%	25V	C914	0252811	Electrolytic	1μF		50V				
C215	0252811	Electrolytic	1μF		50V	C915	0252225	Electrolytic	47μF		6.3V				
C216	0245018	Ceramic, discal	0.022μF	+80% -20%	25V	C916	0252811	Electrolytic	1μF		50V				
C217	0245018	Ceramic, discal	0.022μF	+80% -20%	25V	C917	0252225	Electrolytic	47μF		6.3V				
C218	0244175	Ceramic, discal	0.047μF	+80% -20%	25V	C918	0252531	Electrolytic	100μF		16V				
C219	0248676	Ceramic, discal	47pF	±5%	50V	C919	0252522	Electrolytic	22μF		16V				
C220	0245018	Ceramic, discal	0.022μF	+80% -20%	25V	C921	0252521	Electrolytic	10μF		16V				
C221	0252811	Electrolytic	1μF		50V	C922	0275011	Mylar, film	0.01μF	±10%	50V				

**MODEL FT-920 SERVICE MANUAL  
MODELL FT-920 SERVICE ANLEITUNG  
MODELE FT-920 SERVICE MANUAL**

SYMBOL NO.	STOCK NO.	DESCRIPTION				SYMBOL NO.	STOCK NO.	DESCRIPTION	
R916	0114213	Carbon film	33kΩ	±5%	SRD%P	Q907	2327443	2SC1344 (E)	
R920	0114131	Carbon film	100Ω	±5%	SRD%P			<b>for RELAY PRINTED WIRING BOARD</b>	
R922	0114201	Carbon film	10kΩ	±5%	SRD%P	Q951	2327443	2SC1344 (E)	
R923	0114297	Carbon film	470kΩ	±5%	SRD%P	Q952	2327443	2SC1344 (E)	
R924	0114217	Carbon film	47kΩ	±5%	SRD%P	Q953	2327443	2SC1344 (E)	
R925	0114201	Carbon film	10kΩ	±5%	SRD%P	Q954	2327363	2SC1345 (E)	
R926	0114149	Carbon film	560Ω	±5%	SRD%P	Q955	2327443	2SC1344 (E)	
R928	0138135	Carbon film	3.9kΩ	±5%	SRD%P			<b>DIODES</b>	
R931	0114147	Carbon film	470Ω	±5%	SRD%P			<b>for TUNER PRINTED WIRING BOARD</b>	
R932	0114281	Carbon film	100kΩ	±5%	SRD%P	CR102	2337141	1S2267	
R933	0114209	Carbon film	22kΩ	±5%	SRD%P	CR151	2337011	1S2076	
<b>for RELAY PRINTED WIRING BOARD</b>									
R951	0114217	Carbon film	47kΩ	±5%	SRD%P	CR152	0575002	1N34A	
R952	0114297	Carbon film	470kΩ	±5%	SRD%P	CR153	2337011	1S2076	
R953	0114179	Carbon film	5.6kΩ	±5%	SRD%P	CR154	2337011	1S2076	
R954	0114135	Carbon film	150Ω	±5%	SRD%P	CR155	2337011	1S2076	
R955	0114221	Carbon film	68kΩ	±5%	SRD%P	CR156	2337011	1S2076	
R956	0114281	Carbon film	100kΩ	±5%	SRD%P	CR201	2337011	1S2076	
R957	0114211	Carbon film	27kΩ	±5%	SRD%P	CR202	2337011	1S2076	
R958	0114179	Carbon film	5.6kΩ	±5%	SRD%P	CR301	2337011	1S2076	
R959	0114289	Carbon film	220kΩ	±5%	SRD%P	CR302	2337011	1S2076	
R960	0114281	Carbon film	100kΩ	±5%	SRD%P			<b>for CONTROL PRINTED WIRING BOARD</b>	
R961	0114209	Carbon film	22kΩ	±5%	SRD%P	CR801	2327041	VO6C	
R962	0114209	Carbon film	22kΩ	±5%	SRD%P	CR802	2327041	VO6C	
R963	0114149	Carbon film	560Ω	±5%	SRD%P	CR803	2327041	VO6C	
<b>for CHASSIS ASSEMBLY</b>									
R001	0139007	Composition	1MΩ	±10%	RC%GF	CR804	2327041	VO6C	
<b>IC &amp; TRANSISTORS</b>									
<b>for TUNER PRINTED WIRING BOARD</b>									
IC201	2367191	HA1211				CR805	2337182	HZ16	
IC202	2367122	HA1137				CR806	2327041	VO6C	
IC301	2367173	HA1156W				CR807	2327041	VO6C	
IC151	2367201	HA1138				CR808	2337101	HZ12(A)	
FET101	2327871	3SK45 (B) BK (With ferrite core)				CR901	0575019	1N60P	
Q101	2327881	2SC535 (B) (With ferrite core)				CR902	0575019	1N60P	
Q102	0573507	2SC461 (B)				CR904	0575019	1N60P	
Q301	2327443	2SC1344 (E)				CR906	2337011	1S2076	
Q302	2327443	2SC1344 (E)				CR907	2337011	1S2076	
Q303	2327444	2SC1344 (F)							
Q304	2327444	2SC1344 (F)							
Q305	2327443	2SC1344 (E)							
<b>for CONTROL PRINTED WIRING BOARD</b>									
Q601(L,R)	2327443	2SC1344 (E)							
Q602(L,R)	2327443	2SC1344 (E)							
Q801	2327153	2SC1061 (C)							
Q802	2327363	2SC1345 (E)							
Q901	2327364	2SC1345 (F)							
Q902	2327364	2SC1345 (F)							
Q903	2327443	2SC1344 (E)							
Q904	2327443	2SC1344 (E)							
Q905	2327363	2SC1345 (E)							
<b>VARIABLE RESISTORS</b>									
<b>for TUNER PRINTED WIRING BOARD</b>									
VR201	0151226	100kΩ-(B)							
VR202	0151254	100kΩ-(B)							
VR301	0151284	300kΩ-(B)							
VR302	0151224	10kΩ-(B)							
VR303	0151226	100kΩ-(B)							
<b>for CONTROL PRINTED WIRING BOARD</b>									
VR601(L)	0151881	100 kΩ-(B)							
VR602(L,R)	0151862	20kΩ-(B)							
<b>COILS &amp; TRANSFORMERS</b>									
<b>for TUNER PRINTED WIRING BOARD</b>									
L101	2134651	FM ANT coil (white)							


**MODEL FT-920 SERVICE MANUAL**  
**MODELL FT-920 SERVICE ANLEITUNG**  
**MODELE FT-920 SERVICE MANUAL**

SYMBOL NO.	STOCK NO.	DESCRIPTION	SYMBOL NO.	STOCK NO.	DESCRIPTION
L102	2134657	FM RF 1 coil (purple)		2748441	AC power cord (for U.S.A. & Canada)
L103	2134658	FM RF 2 coil (red)		2748511	AC power cord (for Europe)
L104	2227201	Choke coil (2.2μH)		2747732	AC power cord (for U.K.)
L105	2134471	FM OSC coil		2687421	4P screw terminal board
L201	2227119	Choke coil (18μH)		2134692	Ferrite antenna
L202	2227081	Choke coil (1μH)		2687361	2P terminal board
T101	2154293	FM IF transformer		4770254	Nut-3φ nut
T201	2154271	FM IF transformer		2727161	Holder-lamp holder
T251	2134446	AM RF coil		4567411	Screw-3φx6 CT bind screw (yellow)
T252	2134445	AM OSC coil		4567413	Screw-3φx10 CT bind screw
T253	2154181	AM IF transformer		4567451	Screw-3φx6 CT bind screw (silver)
		<b>for CHASSIS ASSEMBLY</b>		4567431	Screw-3φx6 CT bind screw (black)
L001	2227081	Choke coil (1μH)		4567422	Screw-4φx8 CT bind screw
	2120871	Balun transformer		4568812	Screw-3φx8 CT screw
				4567453	Screw-3φx10 CT bind screw
				4567433	Screw-3φx10 CT bind screw
			VC101-104	0281180	FM/AM variable capacitor
			151-153		
			TC104	0283123	Trimmer capacitor
				3920661	Cap (for C808)
				4567414	Screw-3φx12 CT bind screw
			F001	2720056	Fuse-wired in fuse (0.5A)
					<b>for FINAL ASSEMBLY</b>
				3243593	Escutcheon assembly (with knob STOCK NO. 3282801)
				3282801	Knob-AM, FM Auto,Mono,Mute/Auto Lock knob
				3283251	Knob-Tuning knob
				3282661	Knob-Level control (AM,FM) knob
				3282981	Knob-Level knob (for power,MPX noise filter Meter select)
				4389912	Bottom board
				3916411	Leg
				4388181	Cover assembly
				4567413	Screw-3φx10 CT bind screw
				4567412	Screw-3φx8 CT bind screw
				4567441	Screw-4φx6 CT bind screw
				4374051	Washer-11.5φ washer
					<b>for DIAL MECHANISM ASSEMBLY</b>
				3386761	Dial pointer
				3199441	Dial scale
				4387073	Dial panel
				3913552	Spot indicator (for AM, FM)
				3913554	Spot indicator (for STEREO)
				3338841	Spring
				0666704	Wire clip
				4567411	Screw-3φx6 CT bind screw
					<b>ACCESSORIES</b>
				2748393	FM antenna
				2748542	Patch cord

**MODEL FT-920 SERVICE MANUAL  
MODELL FT-920 SERVICE ANLEITUNG  
MODÈLE FT-920 SERVICE MANUAL**

FRONT AND REAR PANELS VORDERE UND HINTERE BETRIEBSLEISTUNGSPLÄTZE  
PANNEAUX AVANT ET ARRIÈRE

**FRONT PANEL**

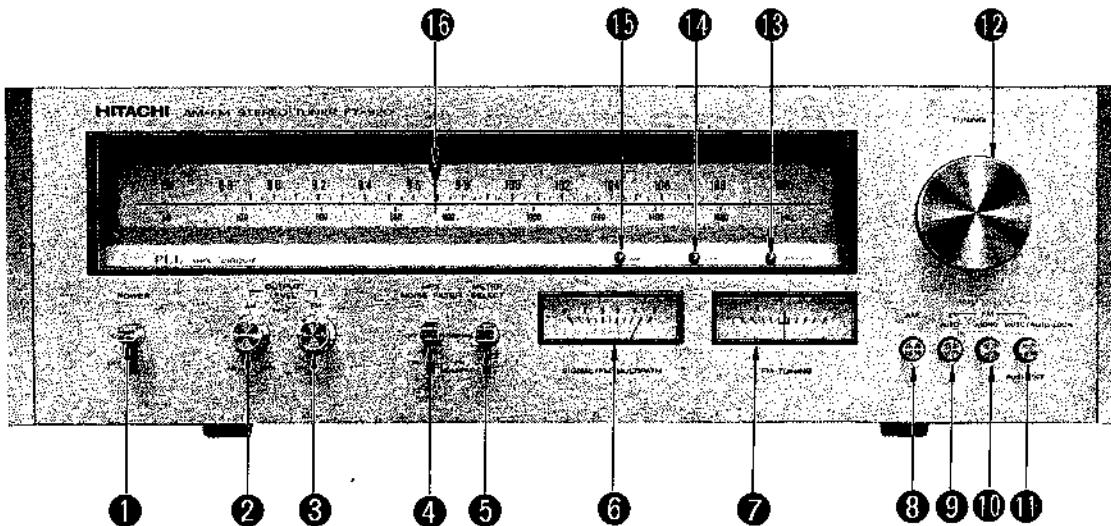


- ① Power switch
- ② AM output level control
- ③ FM output level control
- ④ MPX noise filter switch
- ⑤ Signal/FM multipath switch
- ⑥ Signal/FM multipath meter
- ⑦ Tuning meter
- ⑧ AM switch
- ⑨ FM auto switch
- ⑩ FM mono switch
- ⑪ FM muting/auto-lock switch
- ⑫ Tuning control
- ⑬ FM stereo indicator
- ⑭ FM indicator
- ⑮ AM indicator
- ⑯ Auto-lock indicator

- ① Netzschalter
- ② MW-Ausgangspegelregler
- ③ UKW-Ausgangspegelregler
- ④ MPX-Störschutzfilter
- ⑤ Signalpegel/FM-MULTIPATH-Umschalter
- ⑥ Signalpegel/FM-MULTIPATH-Anzeigegerät
- ⑦ Abstimmmanzeige
- ⑧ Mittwellen
- ⑨ UKW-Stereo-Automatik
- ⑩ UKW-Mono
- ⑪ UKW-Stillabstimmung/Scharfabstimm-Automatik
- ⑫ Abstimmregler
- ⑬ UKW-Stereo-Anzeige
- ⑭ UKW-Anzeige
- ⑮ MW-Anzeige
- ⑯ Anzeige für Scharfabstimm-Automatik

- ① Interrupteur d'alimentation
- ② Réglage du niveau de sortie AM
- ③ Réglage du niveau de sortie FM
- ④ Interrupteur du filtre de bruit MPX
- ⑤ Interrupteur signal/écho MF
- ⑥ Interrupteur signal/métrleur du circuit de réjection
- ⑦ Cadran de mesure de l'accord
- ⑧ Interrupteur AM
- ⑨ Interrupteur MF automatique
- ⑩ Interrupteur MF mono
- ⑪ Interrupteur d'atténuation MF/ auto blocage des stations
- ⑫ Contrôle de l'accord
- ⑬ Indicateur stéréo MF
- ⑭ Indicateur MF
- ⑮ Indicateur AM
- ⑯ Indicateur de l'auto blocage

**MODEL FT-920 SERVICE MANUAL**  
**MODELL FT-920 SERVICE ANLEITUNG**  
**MODÈLE FT-920 SERVICE MANUAL**

**REAR PANEL**

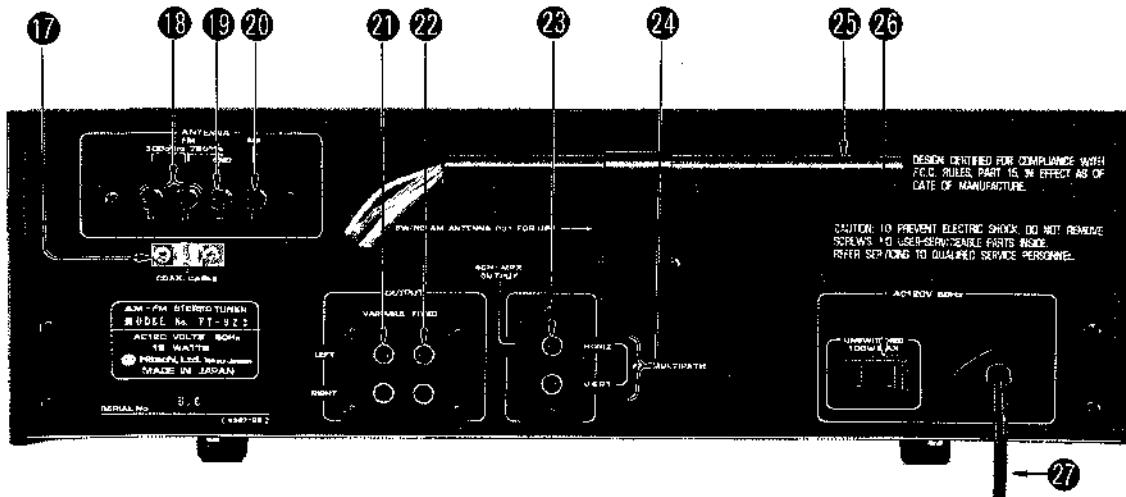

- ⑩ Coaxial cable clamp
- ⑪ FM antenna terminal
- ⑫ Earth terminal
- ⑬ AM antenna terminal
- ⑭ Output terminal (variable)
- ⑮ Output terminal (fixed)
- ⑯ FM 4 CH MPX output terminal
- ⑰ FM multipath output terminal
- ⑱ AM bar antenna
- ⑲ AC outlet (for U.S.A. & Canada set only)
- ⑳ Power cord

- ⑩ Klemme für Koaxial-Kabel
- ⑪ UKW-Antennenbuchse
- ⑫ Erdungsbuchse
- ⑬ MW-Antennenbuchse
- ⑭ Ausgangsbuchse (regelbar)
- ⑮ Ausgangsbuchse (fest)
- ⑯ FM 4 CH MPX Ausgangsbuchse
- ⑰ FM-MULTIPATH Ausgangsbuchse
- ⑱ MW-Ferritstabantenne
- ⑲ Wechselstrom-Anschluß (nur 120V)
- ⑳ Netzkabel

- ⑩ Pince de fixation du câble coaxial
- ⑪ Borne d'antenne MF
- ⑫ Borne de terre
- ⑬ Borne d'antenne AM
- ⑭ Borne de sortie (variable)
- ⑮ Borne de sortie (fixe)
- ⑯ Borne MF MPX à quatre canaux
- ⑰ Borne du circuit de réjection
- ⑱ Antenne AM
- ⑲ Prise auxiliaire (uniquement 120V)
- ⑳ Cordon d'alimentation



Head Office : 5-1, 1-chome, Marunouchi, Chiyoda-ku, Tokyo  
 Tel. : Tokyo (212) 1111 (80 lines)  
 Cable Address : "HITACHY" TOKYO

Geschäftssitz : 5-1, 1-chome, Marunouchi, Chiyoda-ku, Tokio  
 Telefon : Tokio (212) 1111 (80 Amtsleitungen)  
 Telegramme : "HITACHY" TOKYO

Siege Social : 5-1, 1-chome, Marunouchi, Chiyoda-ku, Tokyo  
 Tel. : Tokyo (212) 1111 (80 lignes)  
 Adress Par Cable : "HITACHY" TOKYO, JAPON

Printed in Japan (S)  
 Gedruckt in Japan (S)  
 Imprimé au Japon (S)



# HITACHI

**FT-920**

# **SERVICE MANUAL ( SUPPLEMENT ) No.85-1**

106

## **GENERAL ALIGNMENT INSTRUCTION**

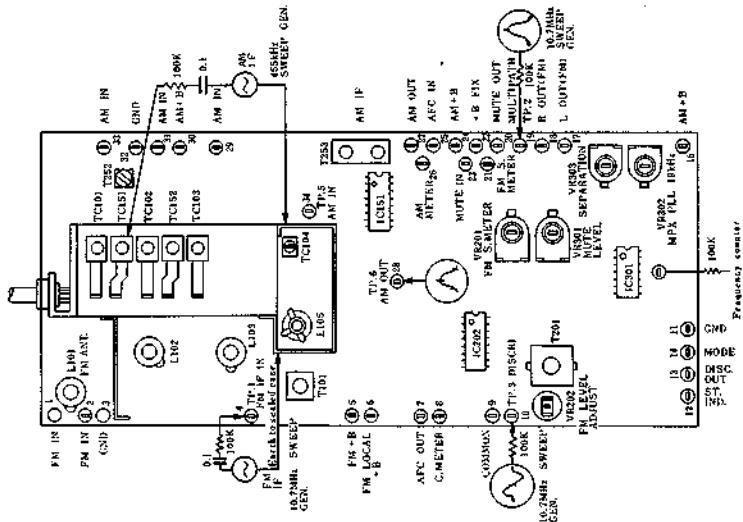


Fig. 1

## **FM TUNER ALIGNMENT**

### Test conditions

Set to the switch positions on the FT-920 as follows.

FUNCTION ..... FM, FM MUTE/AUTO LOCK

**VOLUME .....**      Minimum

POWER ..... ON

Steps	Item	Measuring Instrument	Input Terminal	Output Terminal	Frequency	Adjust	Wave Form
1	(1) IF Amplifier	10.7MHz ± 150kHz Sweep Generator	TP 1	TP 2		T101	CAUTION (1)
	(2) "S" curve		TP 1	TP 3		T201	CAUTION (2)
2	Covering	2.1 FM signal generator 90MHz 400Hz 100% modulated, 60dB at input AC Voltmeter	Antenna terminal	REC OUT (L)	90MHz ( Turn the dial pointer at 90MHz )	L105	Output Max.
		2.2 FM signal generator 106MHz 400Hz 100% modulated, 60dB at input AC Voltmeter			106MHz ( Turn the dial pointer at 106MHz )	TC104	
							Repeat (1) & (2)

# **AM/FM STEREO TUNER**

June 1976

106

## HITACHI FT-920 (SUPPLEMENT)

Steps	Item	Measuring Instrument	Input Terminal	Output Terminal	Frequency	Adjust	Wave form
3	Tracking	3.1 FM signal generator 90MHz 400Hz 100% modulated, 10dB at input AC Voltmeter	Antenna terminal	REC OUT (L)	90MHz	L101, L102 L103	Output Max.
		3.2 FM signal generator 106MHz 400Hz 100% modulated, 10dB at input AC Voltmeter			106MHz	TC101, TC102 TC103	
							Repeat (1) & (2)
4	Discriminate	FM signal generator 98MHz 400Hz 100% modulated, 10dB at input AC Voltmeter	Antenna terminal	REC OUT (L)	98MHz	T201 (lower)	Cut the input signal level of FM signal generator and set the pointer of tuning meter to the center mark.
5	Distortion	FM signal generator 98MHz 400Hz 100% modulated, 60dB at input Distortion meter	Antenna terminal	REC OUT (L)	98MHz	T201 (upper)	Adjust T201 so that distortion will become min.  CAUTION (3)
6	Output	FM signal generator 98MHz 400Hz 30% modulated, 60dB at input AC Voltmeter	Antenna terminal	REC OUT (L)	98MHz	VR202	650mV ± 1dB
7	FM Muting	FM signal generator 98MHz 400Hz 100% modulated, 20dB at input AC Voltmeter	Antenna terminal	REC OUT (L)	98MHz	VR301	Adjust VR301 so that the output signal can occur when the input signal is 24 ± 6dB.
8	Signal Meter	Same as step 4	Antenna terminal	Signal Meter	98MHz	VR201	Adjust VR201 so that the pointer of signal meter will be 4 - 5.

### CAUTION

1. Short-circuit the OSC stage by earthing the live side of the variable capacitor in that stage. Adjust the core of T101 so that the gain will be max. In this case, reduce the level of the input signal of signal generator so that the waveform will be one shown in Fig. 2.
2. Short-circuit the OSC stage as described in Caution 1. Adjust the primary core (lower) of T201 so that the output is like the S curve shown in Fig. 3 with A and B symmetrical with respect to C. Adjust the secondary core (upper) so that the straight line of the S curve can be achieved. At the time of adjustment in Caution 1 and 2, center of the marker will sometimes not correspond to that of the waveform because of the ceramic filters used.

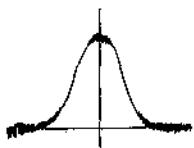


Fig. 2

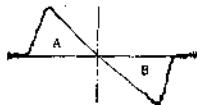


Fig. 3

3. As the result of the adjustment step 5, the best point of adjustment from step 4 will be shifted a bit. Repeat the adjustment of step 4 and 5 until the deterioration becomes minimum and the pointer of the tuning meter is in its center.

## FM MPX ALIGNMENT

### Test conditions

Set to the switch positions on the FT-920 as follows.

**FUNCTION** ..... FM AUTO

**MODE** ..... STEREO

**VOLUME** ..... Minimum

**POWER** ..... ON

Steps	Item	Measuring Instrument	Input Terminal	Output Terminal	Frequency	Adjust	Wave Form
1	19kHz Free Running Frequency	FM signal generator 98MHz non-modulated 60dB at input AC Voltmeter Frequency counter	Antenna terminal	TP 4	98MHz	VR302	Adjust VR302 so that the counter will indicated 19kHz ± 30Hz.
2	(1)	Separation	1. FM signal generator 98MHz, 60dB at input 2. Stereo signal generator Main signal 92% modulated Pilot signal 8% modulated AC Voltmeter	Antenna terminal	REC OUT (L)	98MHz	VR303
							After making the signal of Rch and Pilot, adjust VR303 so that the output wave form of Lch becomes min.
	(2)						Optimize VR303 so that the leak level of the Lch signal is equal to that of the Rch signal.

## AM TUNER ALIGNMENT

### Test conditions

Set to the switch positions on the FT-920 as follows.

**FUNCTION** ..... AM

**VOLUME** ..... Minimum

**POWER** ..... ON

Steps	Item	Measuring Instrument	Input Terminal	Output Terminal	Frequency	Adjust	Wave Form
1	IF Amplifier	Sweep generator 455kHz	TC151	TP6		T253	Gain Max. CAUTION (4)
2	(1)	Covering	AM signal generator 600kHz 400Hz 30% modulated, 50dB at input AC Voltmeter	Ferrite antenna	REC OUT	600kHz	T252
						1400kHz	TC152
							Repeat (1) and (2)
3	(1)	Tracking	AM signal generator 600kHz 400Hz 30% modulated, 50dB at input AC Voltmeter	Ferrite antenna	REC OUT	600kHz	Ferrite antenna T251
						1400kHz	TC151 TC153
							Repeat (1) and (2)

4. In item 1, set the capacitance of the variable capacitor to minimum and adjust red and blue cores of T253 so that the waveform is as shown in Fig. 4. As T253 contains a 455kHz ceramic filter, sometimes the center of the marker will not correspond to that of the waveform.

In this case, neglect the marker. After adjusting as above, increase the output level of the sweep generator and adjust T253 again so that the top of the waveform A (indicated in Fig. 5) will be flat and wide.

5. In items 2 and 3, at the time of first adjustment, set input power at 74dB and adjust obtaining the minimum necessary input power (50dB).

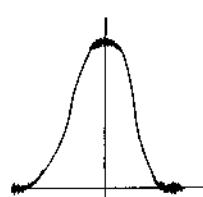


Fig. 4

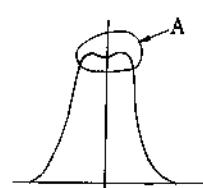


Fig. 5

## HITACHI FT-920 (SUPPLEMENT)

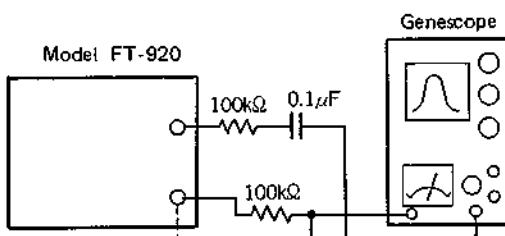


Fig. 6 FM IF Discriminator and AM IF alignments (AM and FM Step. 1)

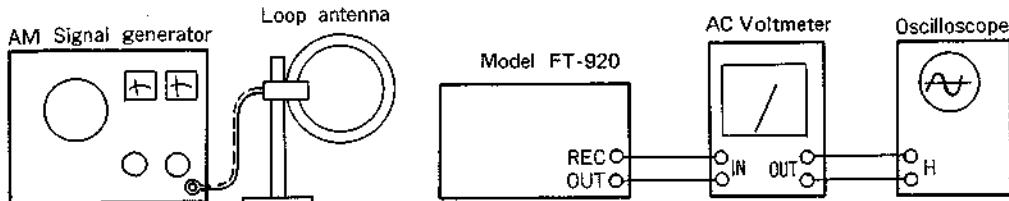


Fig. 7 AM frequency covering and tracking alignments (Step. 2 and 3)

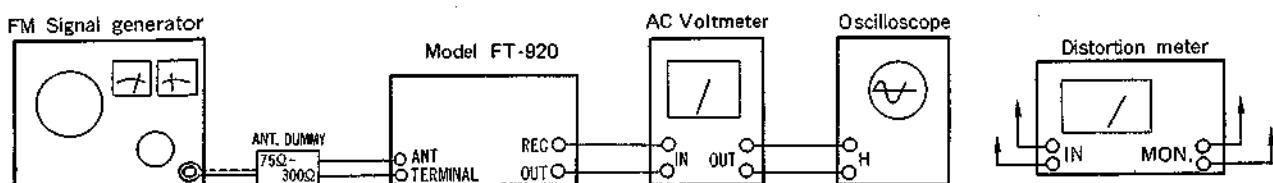


Fig. 8 FM frequency covering, tracking and other alignments (Step. 2 to 8)

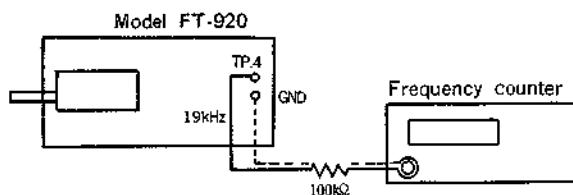


Fig. 9 FM MPX 19kHz adjustment (Step. 1)

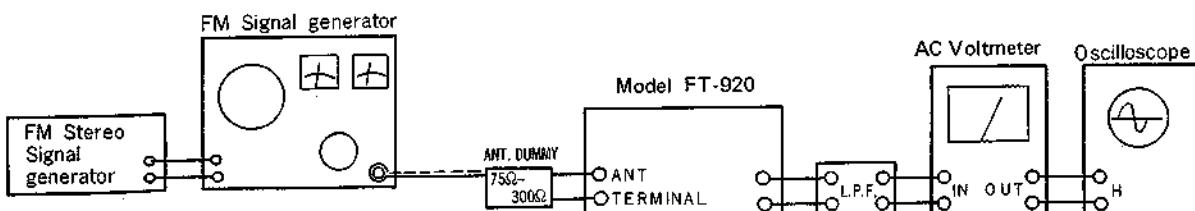


Fig. 10 FM MPX alignments (Step. 2)



**Hitachi, Ltd. Tokyo Japan**

Head Office  
Tel.  
Cable Address

: 5-1, 1-chome, Marunouchi, Chiyoda-ku, Tokyo  
: Tokyo (212) 1111 (80 lines)  
: "HITACHY" TOKYO

Printed in Japan (S)