



In this photo you can see Model TX-680

Service Manual

AM/FM STEREO TUNER

TX-6800

TX-608

 **PIONEER®**

Both Model TX-6800 and TX-608 have the same basic performance. The major difference is in appearance, Model TX-6800 being fitted with wooden side and top panels, while Model TX-608 employs metal.

MODEL TX-6800 COMES IN TWO VERSIONS DISTINGUISHED AS FOLLOWS.

Type	Voltage	Remarks
KU	120V only	U.S.A. model
KC	120V only	Canada model

MODEL TX-608 COMES IN SIX VERSIONS DISTINGUISHED AS FOLLOWS:

Type	Voltage	Remarks
KU	120V only	U.S.A. model
HE	220V and 240V (Switchable)	Europe model
HB	220V and 240V (Switchable)	United Kingdom model
HP	220V and 240V (Switchable)	Oceania model
S	110V, 120V, 220V and 240V (Switchable)	General export model
S/G	110V, 120V, 220V and 240V (Switchable)	U.S. military model

This service manual is applicable to the TX-6800/KU. When repairing the TX-608/KU, please see page 23, and for the other types, please refer to the additional service manuals.

CONTENTS

1. SPECIFICATIONS	3	9. EXPLODED VIEW	
2. FRONT PANEL FACILITIES	4	9.1 Exterior Components	13
3. BLOCK DIAGRAM	5	9.2 Interior Components	14
4. CIRCUIT DESCRIPTIONS		10. SCHEMATIC DIAGRAM, P.C. BOARD PATTERNS AND PARTS LIST	
4.1 AM Tuner	5	10.1 Miscellanea	15
4.2 FM Tuner	6	10.2 Schematic Diagram	16
5. DISASSEMBLY	7	10.3 P.C. Boards Connection Diagram	18
6. PARTS LOCATION	8	10.4 Parts List of P.C. Board Assemblies	21
7. DIAL CORD STRINGING	9	11. PACKING	22
8. ADJUSTMENTS		12. SUPPLEMENTS FOR MODEL TX-608/KU	23
8.1 FM Tuner	10		
8.2 AM Tuner	12		

1. SPECIFICATIONS

Semiconductors

ICs	3
FET	1
Transistors	8
Diodes	15

FM Section

Usable Sensitivity	MONO:	10.8dBf (1.9μV)
50dB Quieting Sensitivity . . .	MONO:	15dBf
	STEREO:	38dBf
Signal-to-Noise Ratio at 65dBf	MONO:	80dB
	STEREO:	74dB
Distortion at 65dBf	MONO:	100Hz 0.1% 1kHz 0.1% 6kHz 0.15%
	STEREO:	100Hz 0.2% 1kHz 0.2% 6kHz 0.25%
Capture Ratio		1.0dB
Alternate Channel Selectivity		60dB
Stereo Separation	1kHz:	40dB
	30Hz to 15kHz:	35dB
Frequency Response		20Hz to 15kHz $^{+0.5}_{-1.0}$ dB
Spurious Response Ratio . . .		70dB
Image Response Ratio		60dB
IF Response Ratio		80dB
AM Suppression Ratio		55dB
Subcarrier Product Ratio . . .		50dB
Muting Threshold		17.2dBf (4.0μV)
De-Emphasis Switch (Switchable)		25μs - 75μs
Antenna Input		300ohms balanced 75ohms unbalanced

AM Section

Sensitivity	
IHF, ferrite antenna	300μV/m
IHF, external antenna	15μV
Selectivity	35dB
Signal-to-Noise Ratio	50dB
Image Response Ratio	40dB
IF Response Ratio	70dB
Antenna	Built-in Ferrite Antenna

Audio Section

Output Level	650mV/4.3kΩ
	(FM 100% MOD.)

Miscellaneous

Power Requirements	120V 60Hz
Power Consumption	14W
Dimensions	451(W) x 151(H) x 284(D) mm 17-3/4(W) x 5-15/16(H) x 11-3/16(D) in
Weight (Without Package) . . .	5.3 kg (11lb 11oz)


Furnished Parts

FM T-type Antenna	1
Connection Cord with Pin Plugs	1
Operating Instructions	1

NOTE:

Specifications and the design subject to possible modification without notice due to improvements.

2. FRONT PANEL FACILITIES

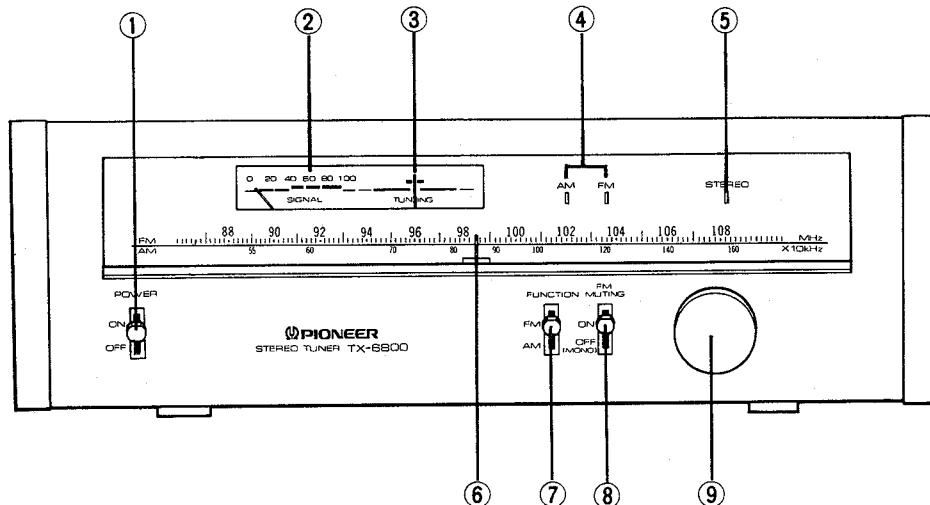

① POWER SWITCH

Set this switch to ON to supply power to the tuner.

② SIGNAL METER

This meter indicates the antenna input level of the AM and FM broadcasting waves. The higher the input level, the more the meter deflects toward right. When selecting the desired station, find the position of the tuning knob which effects the maximum deflection of the meter pointer. When selecting an FM station, also observe the tuning meter to determine the optimum tuning point.

③ TUNING METER

This meter indicates the optimum tuning point irrespective of the field strength when selecting an FM station. With no signal, the pointer remains at the center; as a signal is tuned in, it deflects to the right or left; when the signal is tuned in accurately, the pointer will correctly move to the center of the scale. If the tuning knob is adjusted further, the pointer deflects to the right or left; as the signal moves off completely, the pointer returns to the center position again.

④ FUNCTION INDICATORS

These indicators light up during an FM or AM reception, respectively.

⑤ FM STEREO INDICATOR

This indicator lights up when the tuner is receiving a stereo program if the FM muting/mode switch is set to ON.

⑥ DIAL POINTER

This pointer indicates the broadcasting stations.

⑦ FUNCTION SWITCH

This switch is used to select the type of broadcasting waves.

FM For reception of FM broadcasting
AM For reception of AM broadcasting


⑧ FM MUTING/MODE SWITCH

When this switch is set to ON, unpleasant interstation noise is eliminated, which makes selection of stations easier. However, if the muting switch is set to ON in areas where the field strength is extremely weak, the station being received may also disappear. In such areas, therefore, the muting switch should be turned OFF (MONO). When this switch is set to OFF (MONO), monaural reception will be obtained even though the station is broadcasting a stereo program.

⑨ TUNING KNOB

This knob is used for selecting station. When selecting an AM station, observe the signal meter, and when selecting an FM station, observe both the signal meter and the tuning meter.

3. BLOCK DIAGRAM

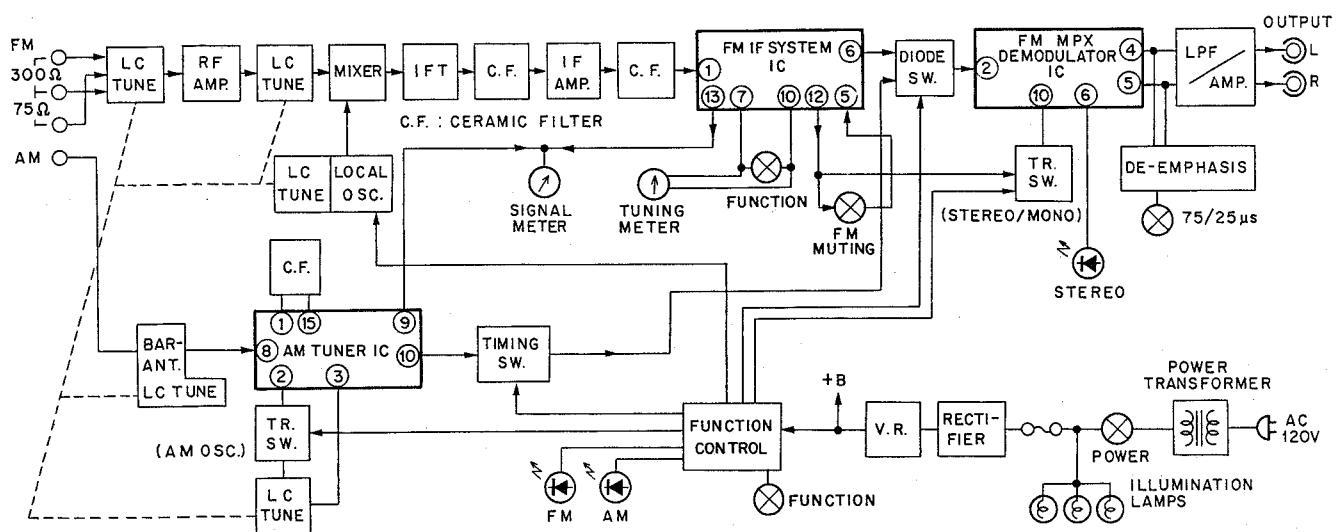

4. CIRCUIT DESCRIPTIONS

4.1 AM TUNER

The AM tuner employs a 2-ganged tuning capacitor, a single-element ceramic filter, and an IC (HA1138) consisting of an RF amplifier, mixer, 2-stage IF amplifier, detector and AGC amplifier. See Fig. 4-1 for the block diagram.

When the FUNCTION switch (S₃) is in the FM position, +B is applied to the emitter of Q₁₁ via R₅₂, R₆₂ and R₆₅. Q₁₁ will turn off, and the local oscillator circuit will be opened.

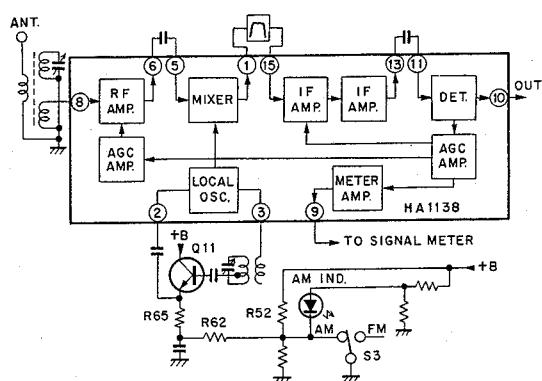


Fig. 4-1 AM tuner

4.2 FM TUNER

Front-End

A frequency linear 3-gang variable capacitor is used with a single stage FET RF amplifier.

The FET possesses high input impedance compared with a transistor, and allows simple coupling with the input tuning circuit, plus a significant advantage in terms of noise.

The local oscillator, Q_3 employs a modified Clapp circuit, thereby reducing the amount of drift caused by changes in time, ambient temperature, and power supply voltage. Also since the oscillator signal is obtained from the tuning circuit, there are far fewer higher harmonics, resulting in a much cleaner waveform with less spurious interference.

The oscillator signal is applied to the base of the mixer transistor Q_2 via low capacity capacitor.

When the FUNCTION switch (S_3) is in the AM position, $+B$ is applied to the cathode of D_1 via R_{34} . D_1 will be cut-off and Q_3 will turn off.

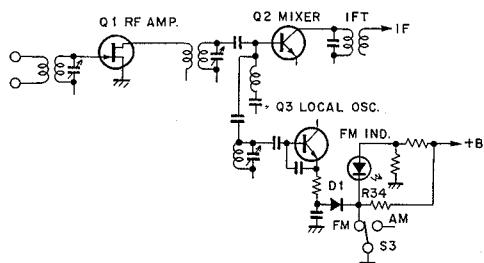


Fig. 4-2 FM front end

IF Amplifier and Detector

This stage includes 2 dual-element ceramic filters, a transistor and an IC (PA3001-A) with a high SN ratio and very little distortion. The transistor inserted between the two ceramic filters is employed for impedance matching purposes as well as to increase the gain.

PA3001-A includes the IF limiter amplifier, FM detector (quadrature detector), AF amplifier, muting circuit and the meter drive circuit.

The muting circuit is turned on when pins 5 and 12 are connected by means of the FM MUTING switch. If the dial pointer is moved approx. $\pm 70\text{kHz}$ away from a station, and the input level is very low (equivalent antenna input less than $4\mu\text{V}$), a 5V DC signal is generated at pin 12, and applied to pin 5, thereby activating the muting circuit within the IC.

FM MPX Stereo Demodulator

The IC (PA1001-A) employed in the FM multiplex stereo demodulator stage also features a high SN ratio and reduced distortion. Due to the incorporation of a pilot auto-canceller circuit, very good frequency characteristics are obtained. Unlike the more conventional pilot signal (19kHz) canceller circuits, which fail to completely remove the pilot signal if it is not at standard level, PA1001-A pilot auto-canceller circuit also includes a pilot signal level detector circuit. Changes in pilot signal level are consequently responded to immediately, resulting in very effective suppression of the pilot signal leak level.

Filter Circuit

Besides eliminating the sub-carrier signals (more than 23kHz), this PNP transistor 18dB/oct. active filter also serves as an amplifier for the low-pass region, and as a crosstalk canceller.

5. DISASSEMBLY

Side Panels and Top Panel


Remove the four screws (A), and remove the side panels.

Bottom Plate

Remove the screw (B).


Front Panel

Pull off all the knobs, and remove the four screws (C).

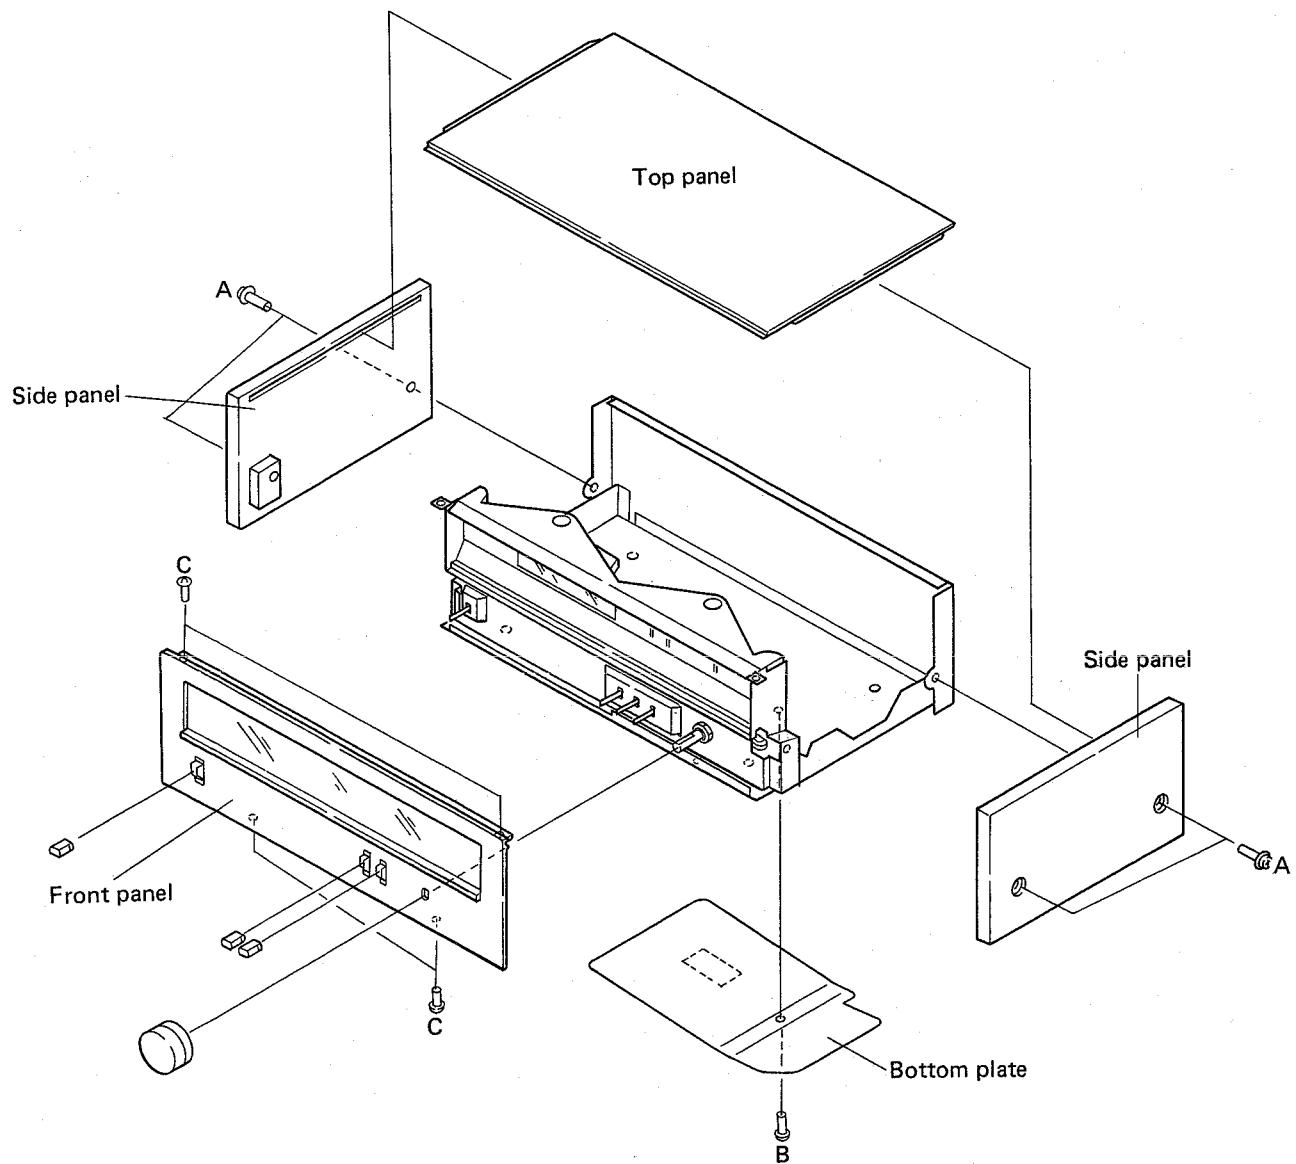


6. PARTS LOCATION


Front Panel View

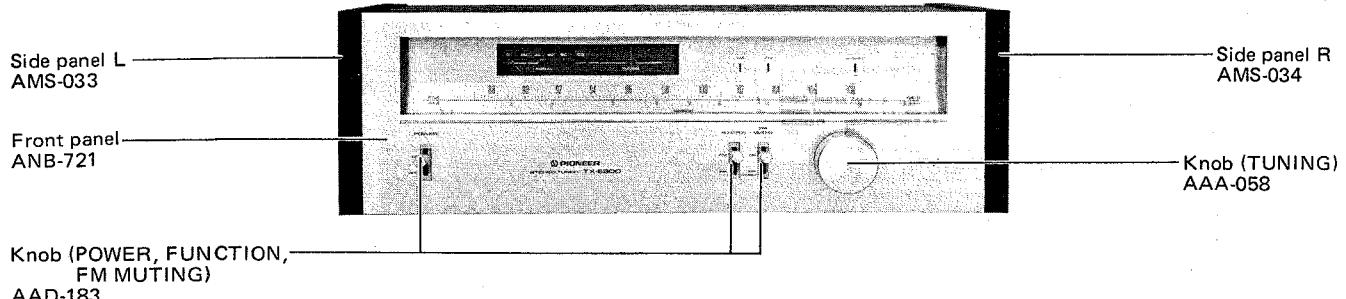


Front View with Panel Removed

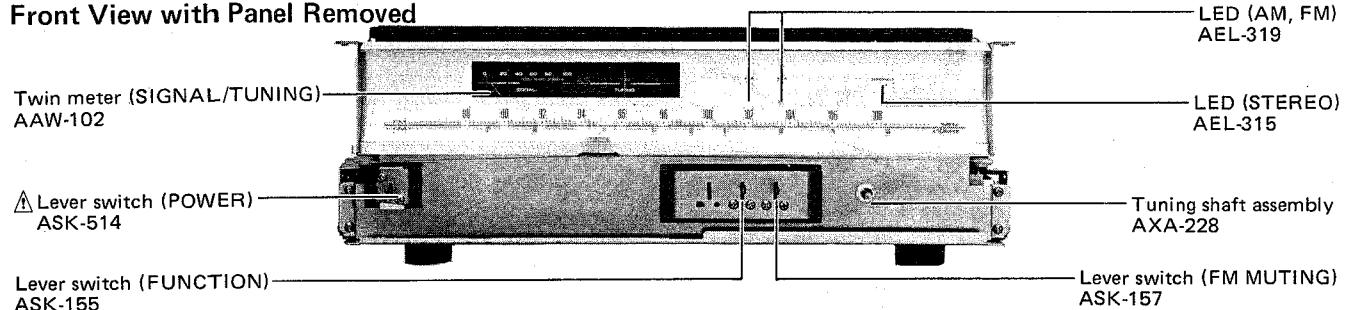

Top View

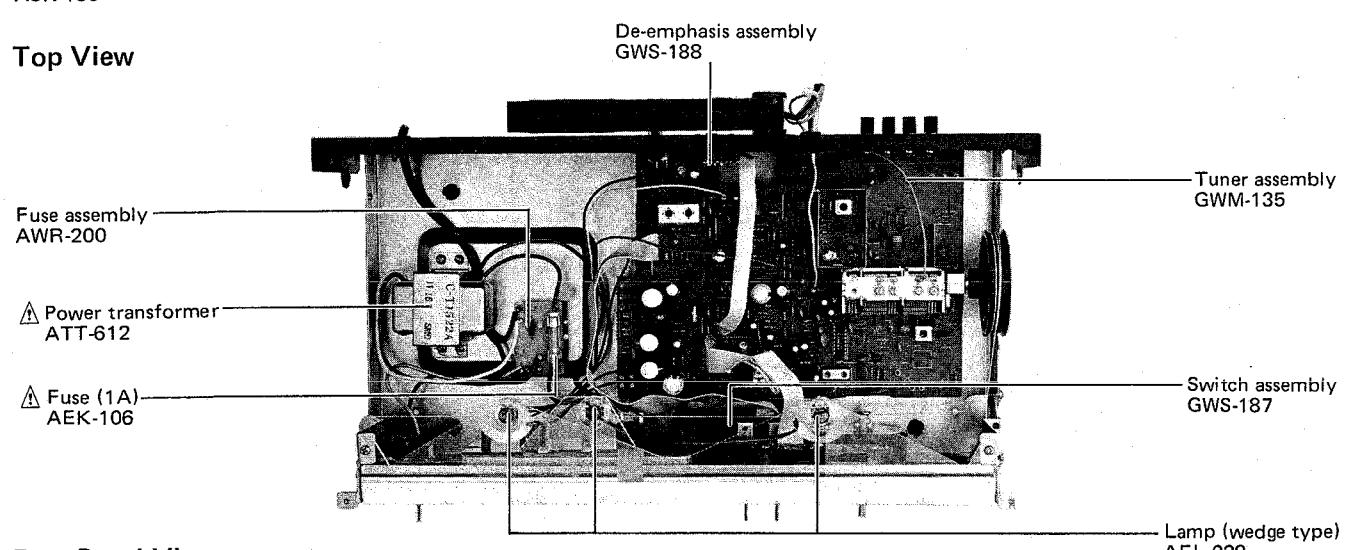


Rear Panel View

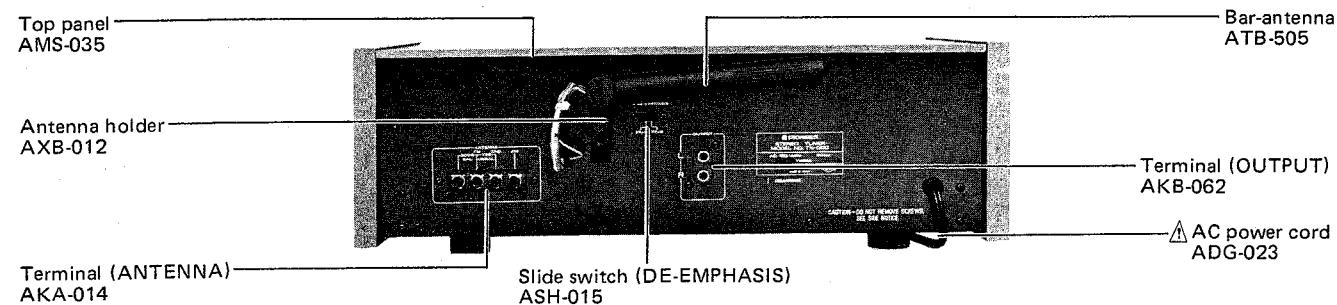

7. DIAL CORD STRINGING

1. Remove the wooden case and front panel as described in the "Disassembly" section on page 7.
2. Turn the tuning capacitor shaft fully clockwise.
3. Fix the tuning drum to the tuning capacitor shaft so that the set-screw is uppermost.
4. Tie one end of the dial cord to the hook on the tuning drum.
5. Pass the cord through the cut-out section in the tuning drum, and then take it over pulleys A, B and C in that sequence.
6. Wind the cord around the tuning shaft 2 times.
7. Pass it over pulley D, wind it around the tuning drum 2 times, and finally tie it to the spring hook so that it is tensioned.
8. Turn the tuning shaft, and check that the cord moves smoothly.
9. Cut off any excess cord.
10. Turn the tuning shaft counter-clockwise as far as it will go.
11. Align the dial pointer with the starting point of the dial scale (second division from the left), and then pass the cord over it.
12. Check that the dial pointer is in line with the starting point of the dial scale.
13. Finally apply the locking paint to the cord securing positions (tuning drum hook and spring hook) and the dial pointer connection.

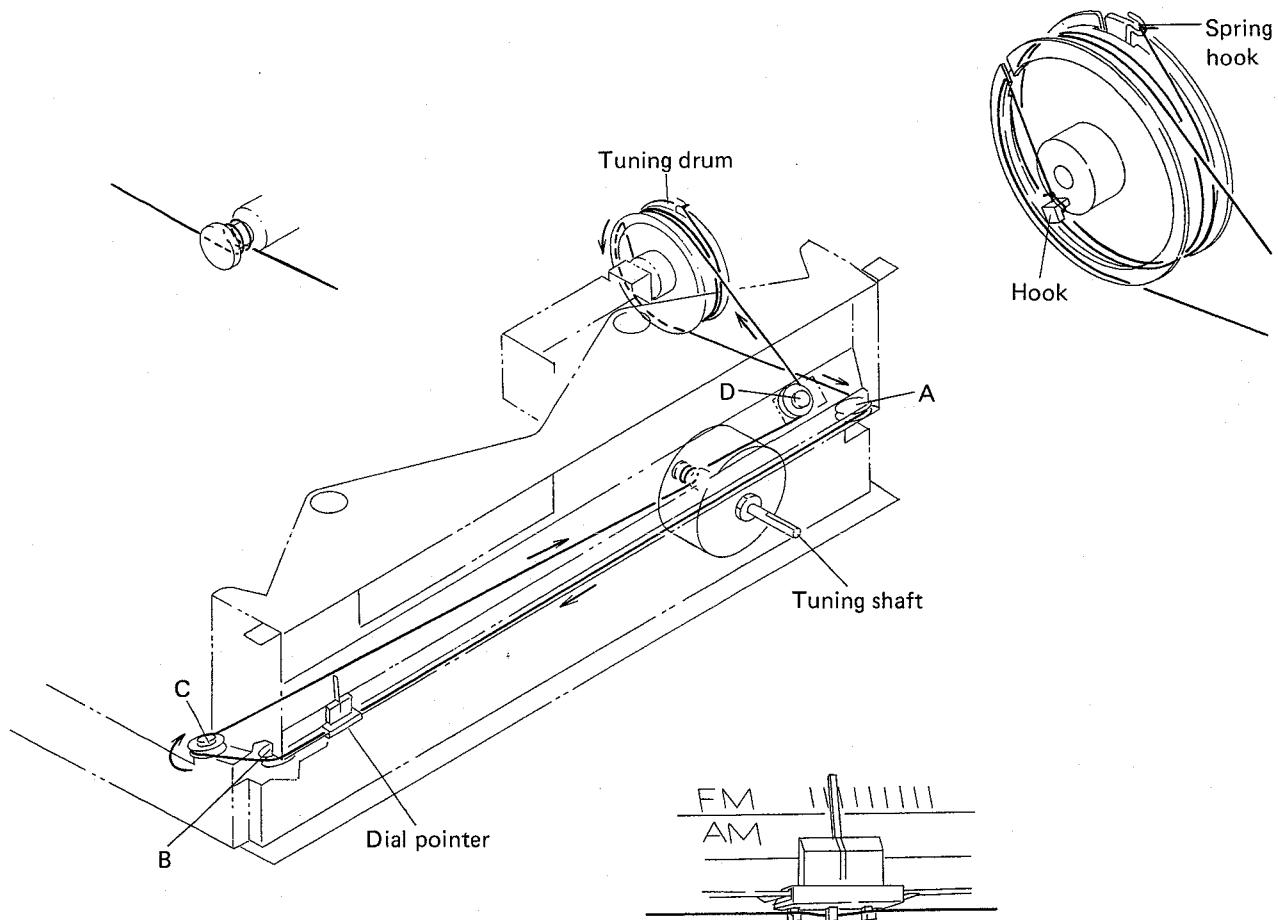

8. ADJUSTMENTS

8.1 FM TUNER

- Connect the FM SG (FM signal generator) to the FM ANTENNA 300Ω terminals via a 300Ω dummy antenna.
- Switch the FUNCTION selector to the FM position, the FM MUTING switch to the OFF position.
- The tuning coils in the FM front end dose not have an adjusting core. Consequently, tracking adjustments at 90MHz are performed by regulating the gap between rotor and stator of the tuning capacitors (VC_1 , VC_3 and VC_5). The expression "adjust VC (VC_1 , VC_3 , VC_5) found in the text means that the two outer rotor blades of each of these tuning capacitors are to be extended outwards with spatula (Part No. GGK-066) as shown in Fig. 8-1.

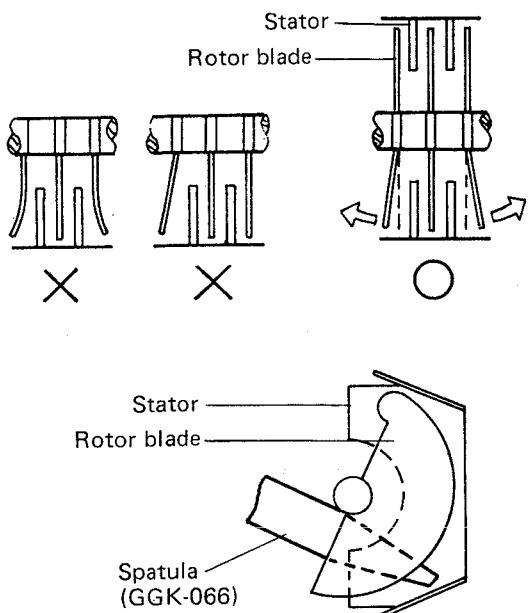


Fig. 8-1 Adjustment of tuning capacitor

1. Set the TX-6800 dial point to a frequency in the 106MHz region so that there will be no input signal.
2. Rotate the N core of T_2 to bring the TUNING meter indicator to dead center.
3. Next tune more accurately to 106MHz, and set the FM SG output to 106MHz, 60 to 80dB (modulation—400Hz, ± 75 kHz deviation).
4. Adjust TC_5 to obtain maximum deflection of the SIGNAL meter indicator, and a dead center reading in the TUNING meter.

5. Then tune the dial pointer to 90MHz, and set the FM SG output frequency to 90MHz.
6. Adjust the VC_5 to obtain maximum deflection in the SIGNAL meter, and a dead center reading in the TUNING meter.
7. Repeat steps 3 to 6 above.
8. Reset the FM SG output level to 20—30dB, and adjust TC_1 and TC_3 at 106MHz, and VC_1 and VC_3 at 90MHz in the same manner as described above in steps 3 to 7. These adjustments will ensure optimum sensitivity in the 90 to 106MHz range, and minimum difference in sensitivity between the two extreme frequencies.
9. Return to a position with no input signal.
10. Rotate the N core of T_2 again to set the TUNING meter indicator to dead center.
11. Set the FM SG output to 98MHz and 66dB (modulation—400Hz, ± 75 kHz deviation), and tune the TX-6800 to this position.
12. Then rotate the D core of T_2 to reduce distortion in the demodulator output (OUTPUT terminal) to a minimum.
13. Repeat steps 9 to 12 above until both specifications (center TUNING meter reading in the absence of input signal, and minimum distortion in demodulator output) are satisfactorily met.

Multiplex Decoder

- Connect the MPX SG (FM multiplex generator) to the FM SG external modulator terminal.
- Set the FM MUTING switch to the ON position.
- 14. Set the FM SG output to 98MHz and 66dB (unmodulated), and tune the TX-6800 to this position.
- 15. Adjust VR_1 to obtain a 76kHz signal at TP terminal.
- 16. Then set the FM SG output level to 86dB, and the modulation mode to external. Then with the MPX SG, set Main to 1kHz, L+R to ± 67.5 kHz deviation, and pilot signal to ± 7.5 kHz deviation.
- 17. Rotate the T_1 core around by up to 90° in either direction to reduce the demodulator output (OUTPUT terminal) distortion to a minimum.

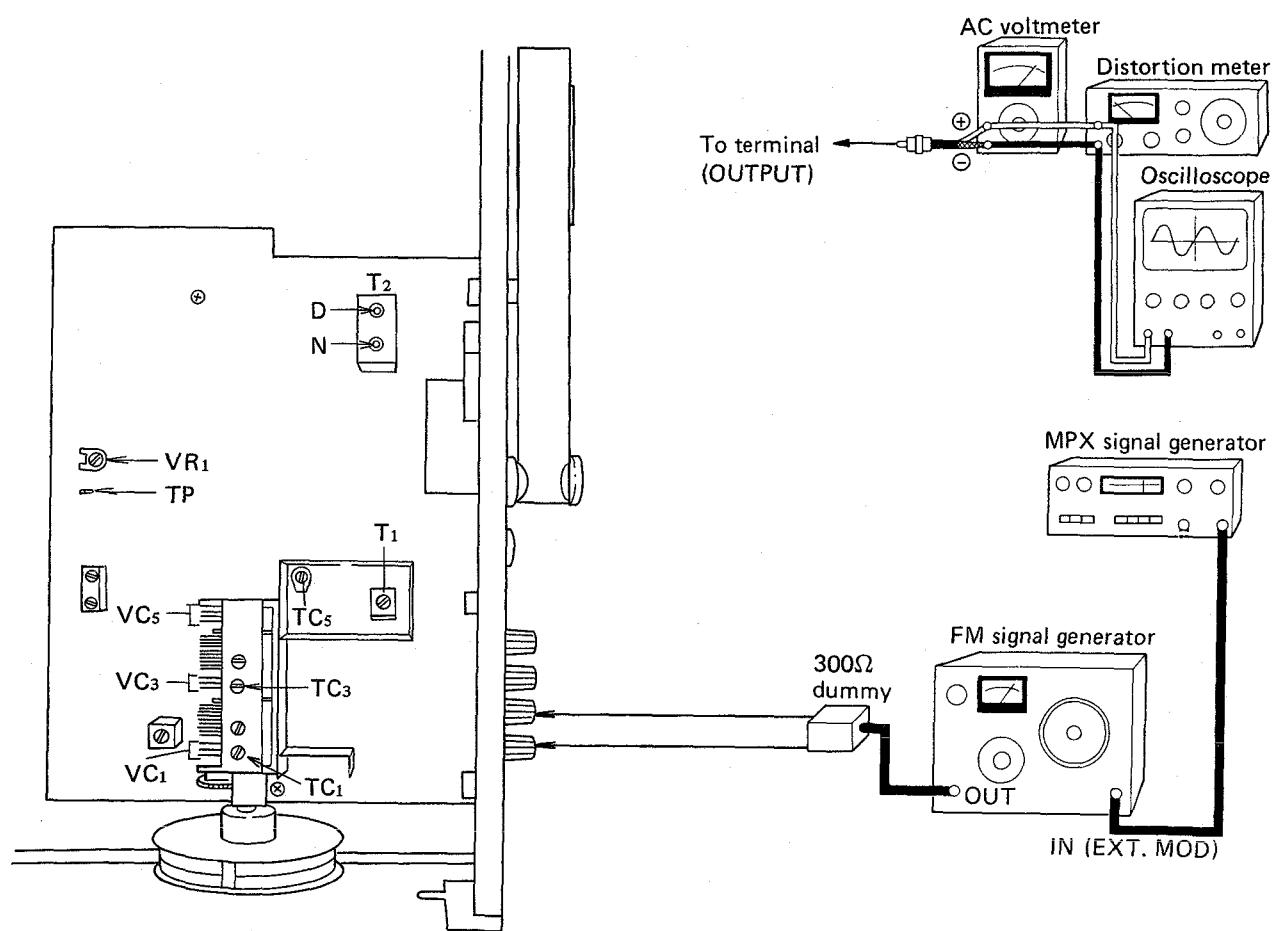


Fig. 8-2 FM tuner adjustments

8.2 AM TUNER

- Connect the AM SG (AM signal generator) to the AM ANTENNA terminal via a $1k\Omega$ resistor.
 - Switch the FUNCTION selector to the AM position.
1. Tune the TX-6800's dial pointer to 600kHz, and the AM SG output to 600kHz, 100dB (modulation 400Hz, 30%).
 2. Adjust the core of T_3 to obtain maximum deflection of the SIGNAL meter indicator.
 3. Then tune to 1400kHz, and set the AM SG output frequency to 1400kHz also.

4. This time adjust TC_4 to obtain maximum SIGNAL meter deflection.
5. Repeat steps 1 to 4 above.
6. Set the AM SG output level to 30dB, adjust the core of the bar-antenna and T_3 at 600kHz, and TC_4 and TC_2 at 1400kHz, in the same manner as described in the above steps. This is the adjustment for optimum sensitivity across the frequency band, and minimum difference in sensitivity at different frequencies.


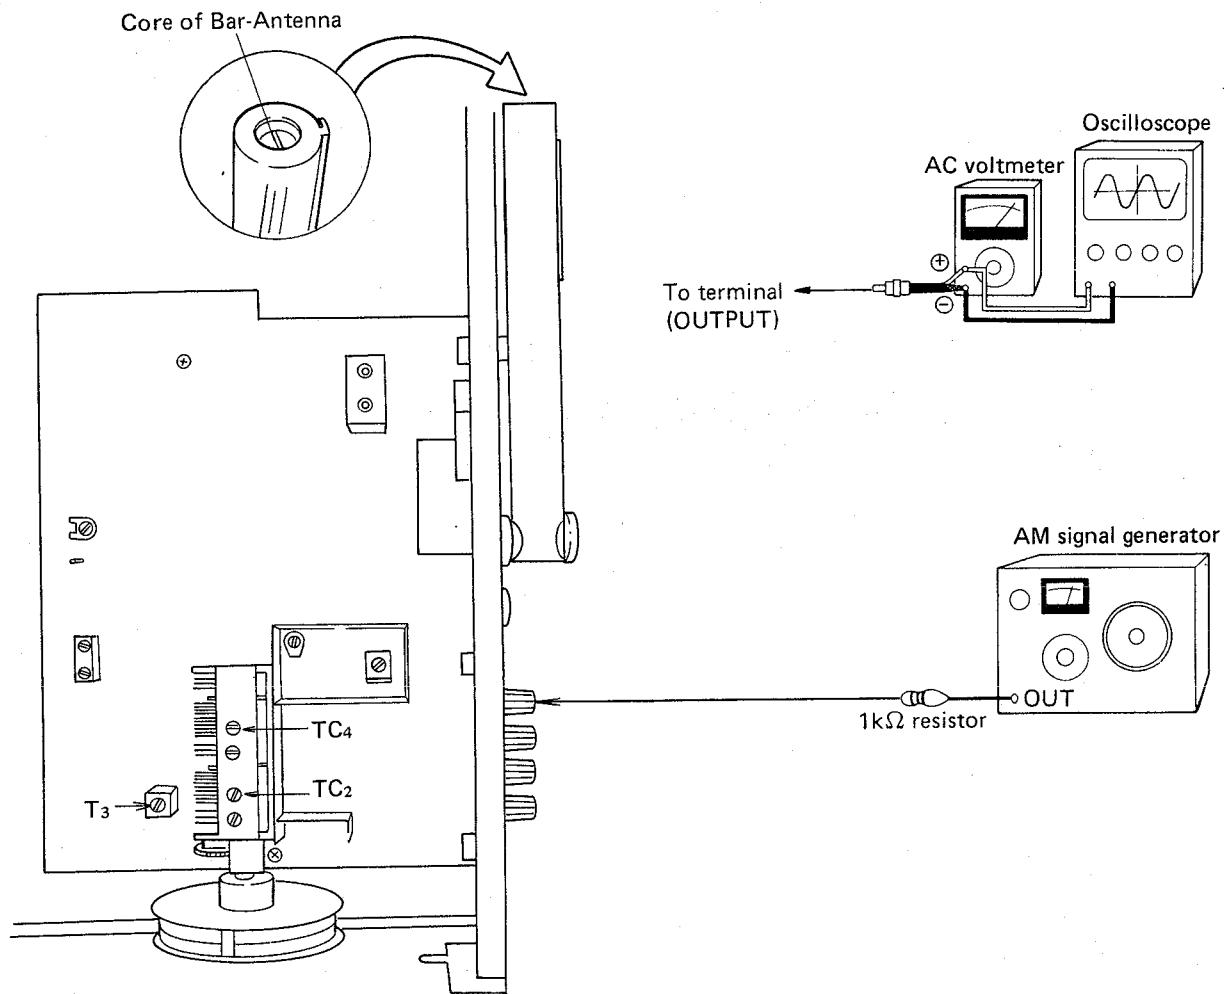


Fig. 8-3 AM tuner adjustments

9. EXPLODED VIEW

9.1 EXTERIOR COMPONENTS

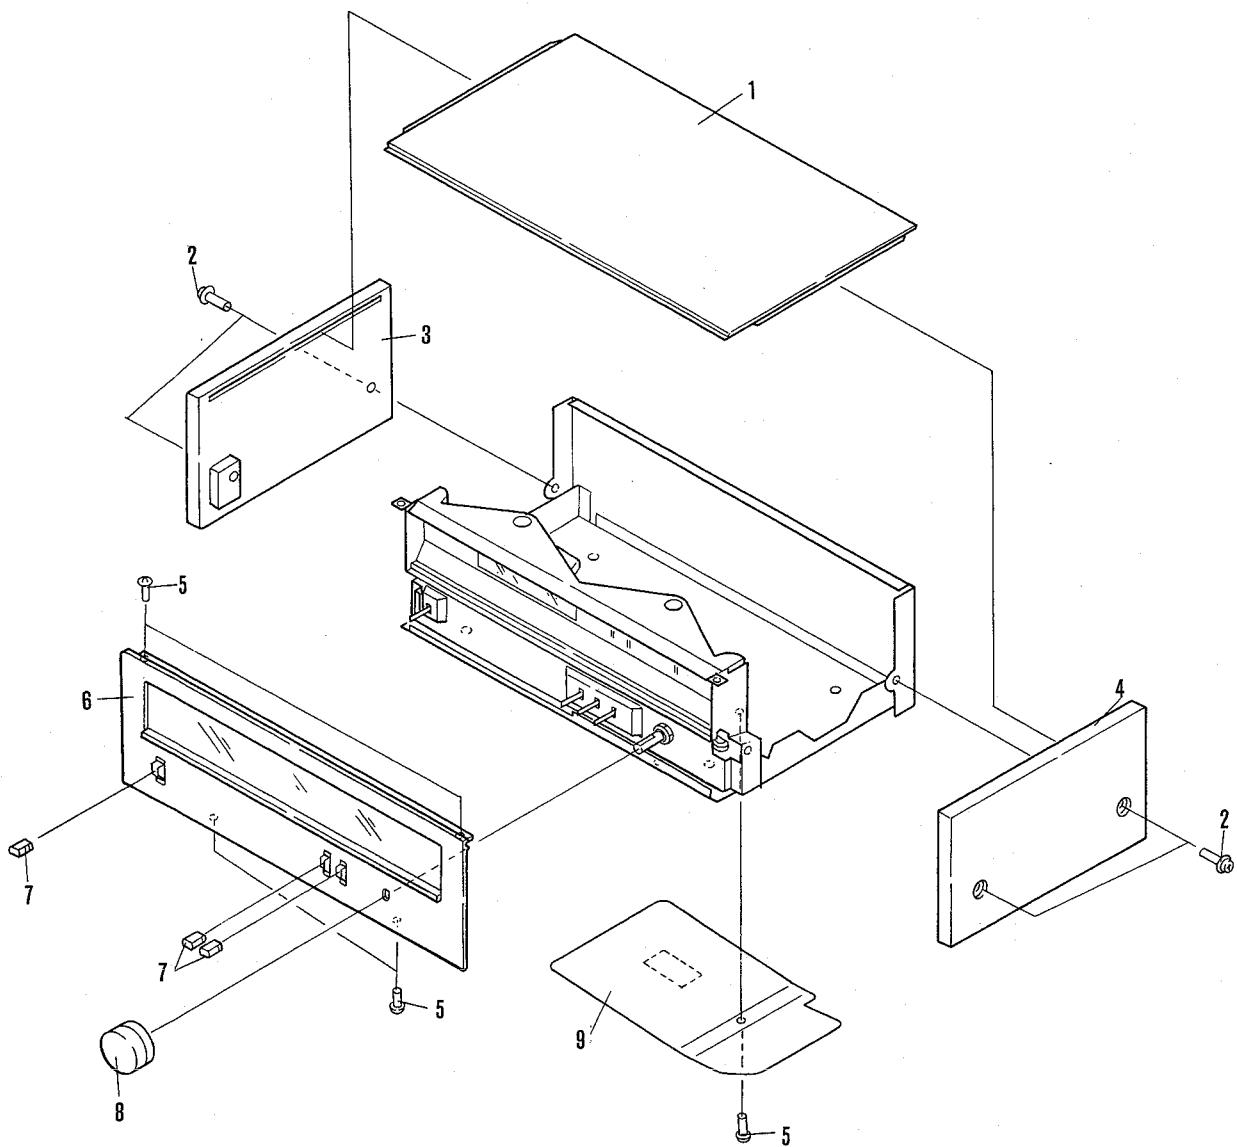


Parts List

• Parts without part number cannot be supplied.

Key No.	Part No.	Description
1.	AMS-035	Top panel
2.	ABA-206	Washerfaced screw 4x25
3.	AMS-033	Side panel L
4.	AMS-034	Side panel R
5.	ABA-048	Screw 3x6
6.	ANB-721	Front panel
7.	AAD-183	Knob (POWER, FUNCTION, MUTING)
8.	AAA-058	Knob (TUNING)
9.		Bottom plate

9.2 INTERIOR COMPONENTS

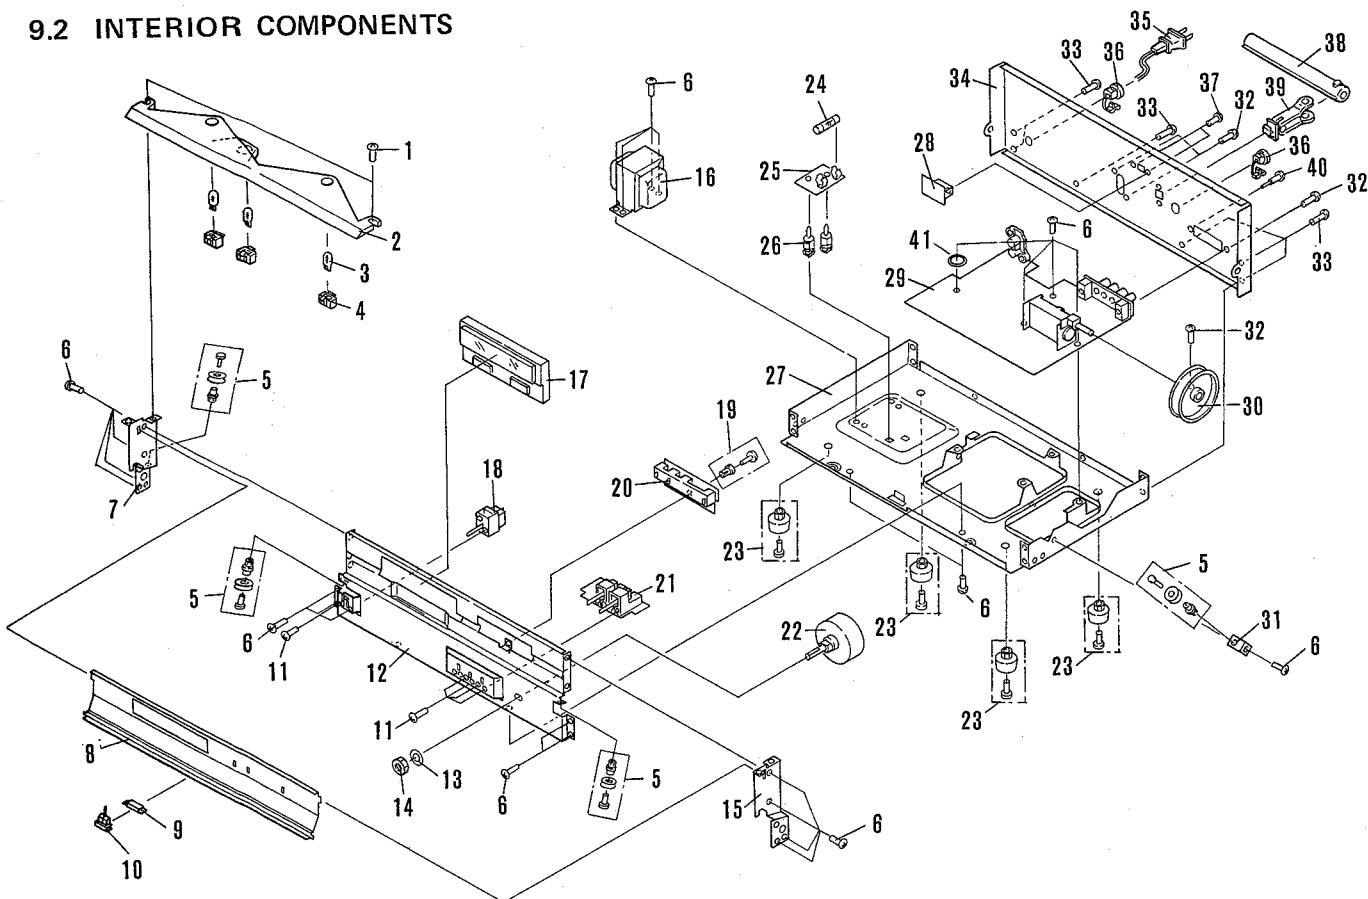

- Parts without part number cannot be supplied.
- The △ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.

Parts List

Key No.	Part No.	Description	Key No.	Part No.	Description
1.	ABA-049	Screw 3x8	21.	GWS-187	Switch assembly
2.		Acrylic board	22.	AXA-228	Tuning shaft assembly
3.	AEL-029	Lamp (wedge type)	23.	AEC-546	Foot assembly
4.	AKK-005	Lamp socket (wedge type)	△24.	AEK-106	Fuse (1A)
5		Pulley assembly	25.	AWR-200	Fuse assembly
6.	ABA-048	Screw 3x6	26.	AEC-554	P.C. board holder
7.		Side plate L	27.		Chassis
8.		Dial scale board	28.	GWS-188	De-emphasis assembly
9.		Smoothen	29.	GWM-135	Tuner assembly
10.		Dial pointer	30.		Tuning drum
11.	ABA-025	Pan head screw 3x4	31.		Angle
12.		Sub-panel	32.	ABA-082	Screw 3x10
13.	B22-018	Flat washer	33.	ABA-228	Screw 3x6
14.	B71-010	Nut 7 φ	34.		Rear panel
15.		Side plate R	△35.	ADG-023	AC power cord
△16.	ATT-612	Power transformer	36.	AEC-327	Strain relief
17.	AAW-102	Twin meter	37.	ABA-034	Pan head screw 3x4
△18.	ASK-514	Lever switch (POWER)	38.	ATB-505	Bar-antenna
19.	AEC-352	Nylon rivet	39.	AXB-012	Antenna holder
20.	GWX-308	LED assembly	40.	ABA-115	Special screw
			41.	ABE-035	Washer

10.4 PARTS LIST OF P.C. BOARD ASSEMBLIES

Tuner Assembly (GWM-135)

COILS AND TRANSFORMERS

Part No.	Symbol & Description
ATE-008	T1 FM IFT
ATE-043	T2 FM det. transformer
ATB-063	T3 AM OSC coil
T24-028	L5 RF choke coil
ATF-049	F1, F2 FM ceramic filter
ATF-074	F3 AM ceramic filter (450kHz)
CAPACITORS	
ACK-012	VC Tuning capacitor
ACM-006	TC5 Trimmer
CCDUJ 090D 50	C1
CGB R47K 500	C9
CCDXL 080F 50	C63
CCDCH 080F 50	C11
CCDUJ 150K 50	C3
CCDRH 150K 50	C10
CCDCH 150K 50	C13
CCDCH 330K 50	C12
CCDSL 060D 50	C4
CCDSL 101K 50	C5, C25
CCDSL 221K 50	C58
CKDYB 391K 50	C76, C77
CKDYB 152K 50	C74, C75
CKDYB 182K 50	C78, C79
CKDYB 472K 50	C40, C41
CKDYB 821K 50	C45
CKDYF 103Z 50	C2, C6, C7, C8, C14, C16, C18, C27, C28, C31, C32, C33, C54, C55, C56, C65, C66, C69, C70, C73, C61
CKDYF 473Z 50	C17, C20, C22, C23, C29, C30, C37, C49, C53, C57, C62, C67, C68, C89
CQSH 331K 50	C64
CQSH 511J 50	C48
CEANL R47M 50	C80, C81
CEANL 010M 50	C44, C46
CEANL 6R8M 25	C47
CEA 010P 50	C19, C24, C26, C43
CEA 100P 16	C36, C38, C50, C51, C52, C71, C72
CEA 102P 16	C82, C83
CEA 2R2P 50	C21
CEA 220P 16	C15
CEA 221P 6	C34
CEA 331P 25	C85
CEA 331P 16	C39
CEA 330P 16	C35

Part No.	Symbol & Description
CEA 4R7P 35	C60
CEA 470P 10	C59
CEA 470P 16	C86
CEA 471P 6	C42
CEA 471P 25	C84

SEMICONDUCTORS

Part No.	Symbol & Description
2SK168	Q1
2SC535	Q2
2SC461	Q3, Q4, Q11
2SA726S-F (2SA750)	Q7, Q8
2SC945A (2SC2575)	Q9
2SD313 (2SD712)	Q12
PA3001-A	Q5
PA1001-A	Q6
HA1138	Q10
1S2076 (1S1555) (1S2473)	D1-D8
▲10E2 ▲(SIB01-02)	D10, D11
MZ-140 (WZ-140)	D12
MZ-081 (WZ-081)	D9

Note: When ordering resistors, convert the resistance value into code form, and then rewrite the part no. as before.

Part No.	Symbol & Description
ACP-079	VR1 Semi-fixed 4.7k-B
RD $\frac{1}{4}$ PM □□□J RN $\frac{1}{4}$ PQ □□□□F	R1-R46, R48-R83, R90, R91 R47

LED Assembly (GWX-308)

Part No.	Symbol & Description
AEL-315	D13 LED (STEREO)
AEL-319	D14, D15 LED (AM, FM)
RD $\frac{1}{4}$ PM 561J RD $\frac{1}{4}$ PM 182J	R84, R86, R88 R85, R87
ABA-082	Screw 3 x 10

Switch Assembly (GWS-187)

Part No.	Symbol & Description
ASK-157	S1 Lever switch (FM MUTING)
ASK-155	S2 Lever switch (FUNCTION)
RD1/PM 104J	R89


Fuse Assembly (AWR-200)

Part No.	Symbol & Description
ACN-029	R1 Carbon composition resistor

De-Emphasis Assembly (GWS-188)

Part No.	Symbol & Description
CQMA 113J 50	C87, C88
ASH-015	S3 Slide switch (DE-EMPHASIS)

11. PACKING

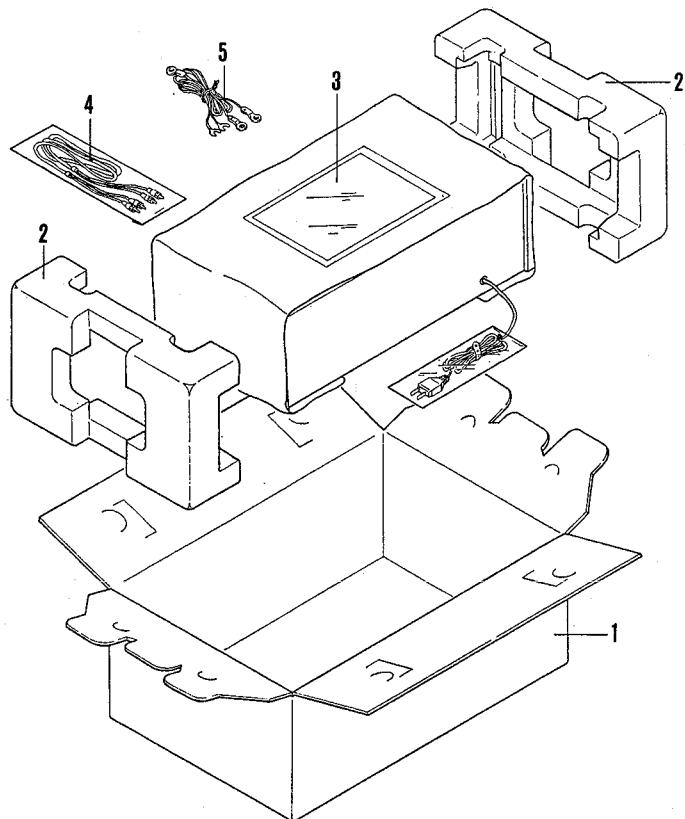

Parts List

Key No.	Part No.	Description
1.	AHD-694	Packing case
2.	AHA-188	Side pad
3.	ARB-319	Operating instructions
4.	ADE-005	Connection cord
5.	ADH-002	T-type FM antenna

12. SUPPLEMENTS FOR MODEL TX-608/KU

Model TX-608/KU is the same as Model TX-6800/KU with exception of descriptions in this supplements.

Contrast of Miscellaneous Parts


Symbol	Description	Part No.		Remarks
		TX-6800/KU	TX-608/KU	
	Front panel	ANB-721	ANB-737	
	Side panel L	AMS-033	
	Side panel R	AMS-034	
	Top panel	AMS-035	
	Bonnet case	ANE-249	
	Screw 4 x 25	ABA-206	for side panels
	Screw 4 x 6	ABA-180	for bonnet case
	Operating instructions	ARB-319	ARB-335	
	Packing case	AHD-694	AHD-705	
	Side pad	AHA-188	AHA-189	

AM/FM STEREO TUNER

TX-6800 TX-608

SERVICE MANUAL

Original

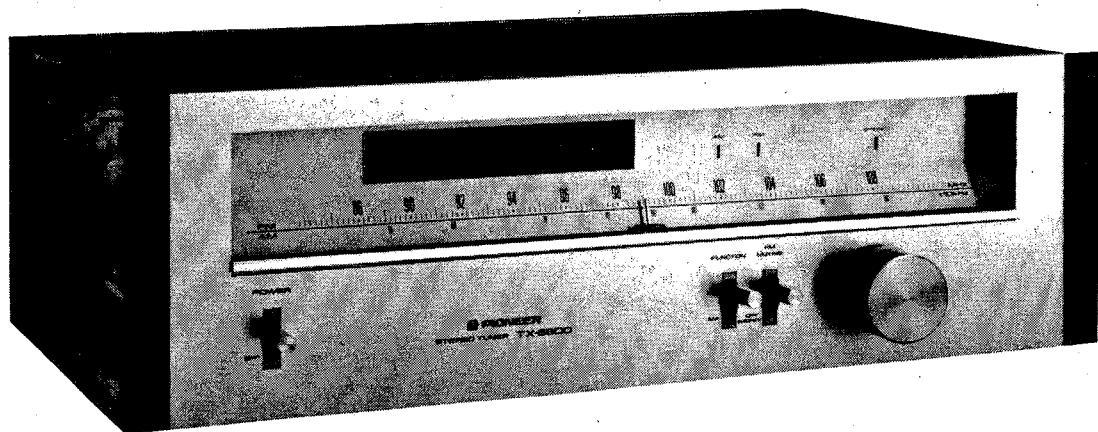


 PIONEER®


PARTS LOCATION

- The mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.


Front Panel View

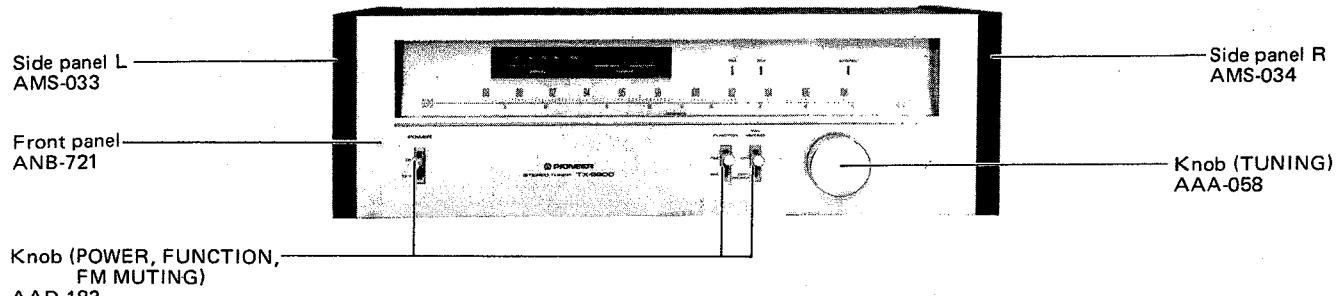


Front View with Panel Removed

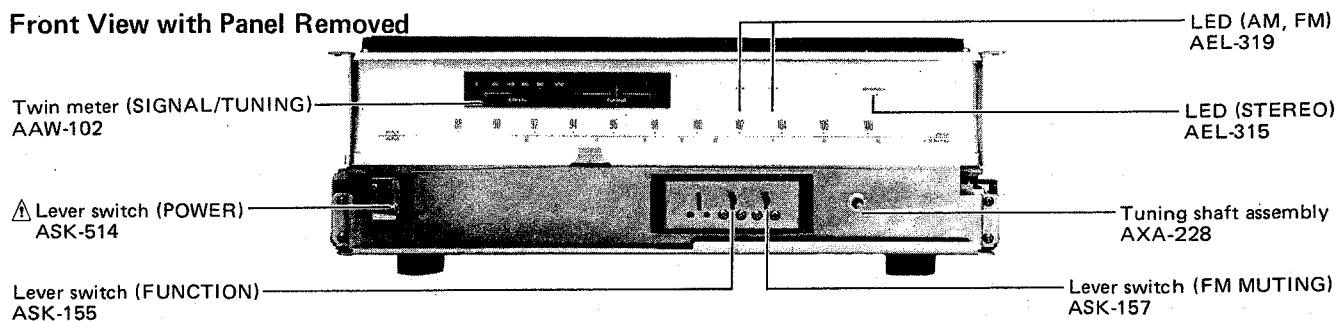

Top View

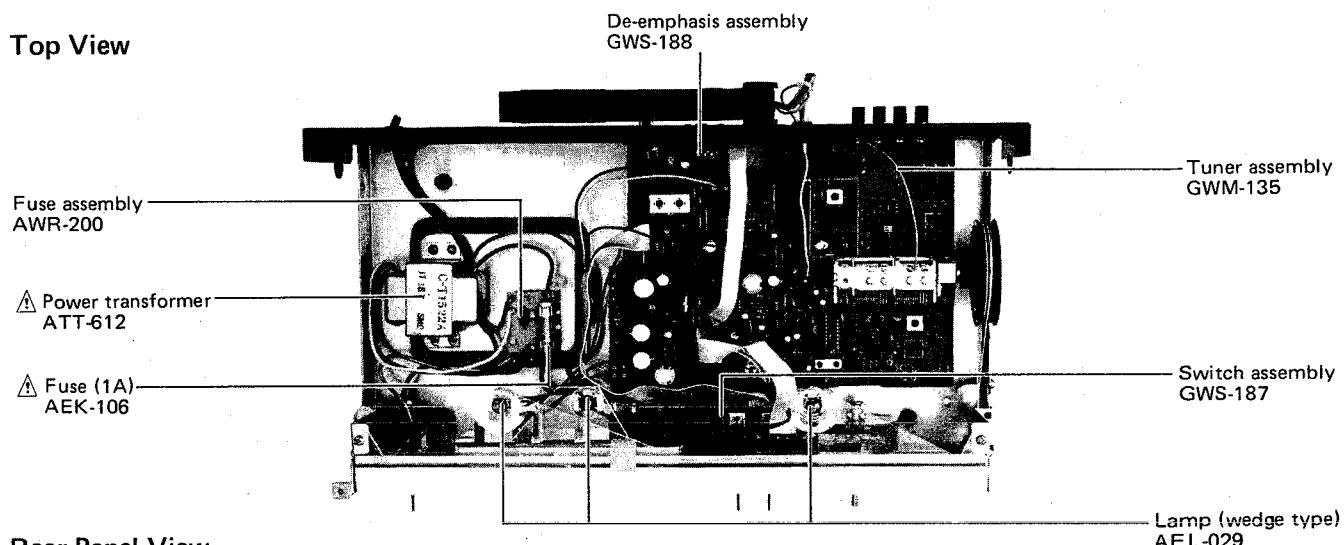


Rear Panel View

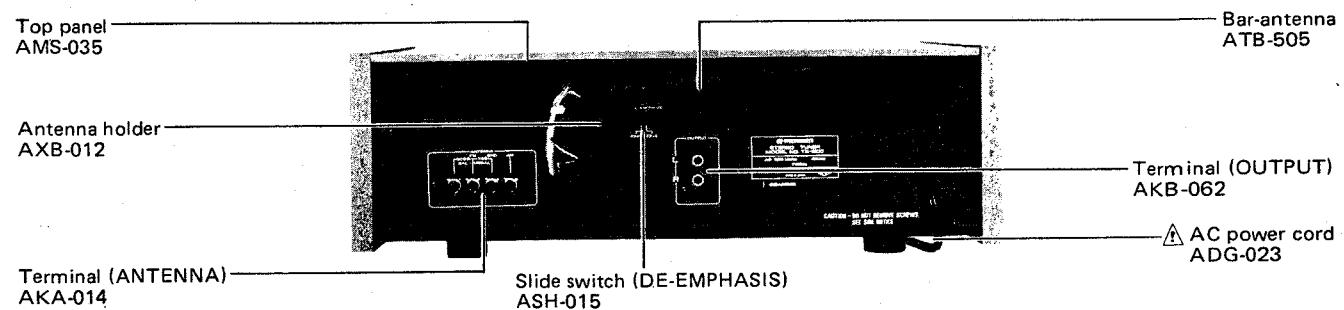


DIAL CORD STRINGING

1. Remove the wooden case and front panel as described in the "Disassembly" section on page 7.
2. Turn the tuning capacitor shaft fully clockwise.
3. Fix the tuning drum to the tuning capacitor shaft so that the set-screw is uppermost.
4. Tie one end of the dial cord to the hook on the tuning drum.
5. Pass the cord through the cut-out section in the tuning drum, and then take it over pulleys A, B and C in that sequence.
6. Wind the cord around the tuning shaft 2 times.
7. Pass it over pulley D, wind it around the tuning drum 2 times, and finally tie it to the spring hook so that it is tensioned.
8. Turn the tuning shaft, and check that the cord moves smoothly.
9. Cut off any excess cord.
10. Turn the tuning shaft counter-clockwise as far as it will go.
11. Align the dial pointer with the starting point of the dial scale (second division from the left), and then pass the cord over it.
12. Check that the dial pointer is in line with the starting point of the dial scale.
13. Finally apply the locking paint to the cord securing positions (tuning drum hook and spring hook) and the dial pointer connection.

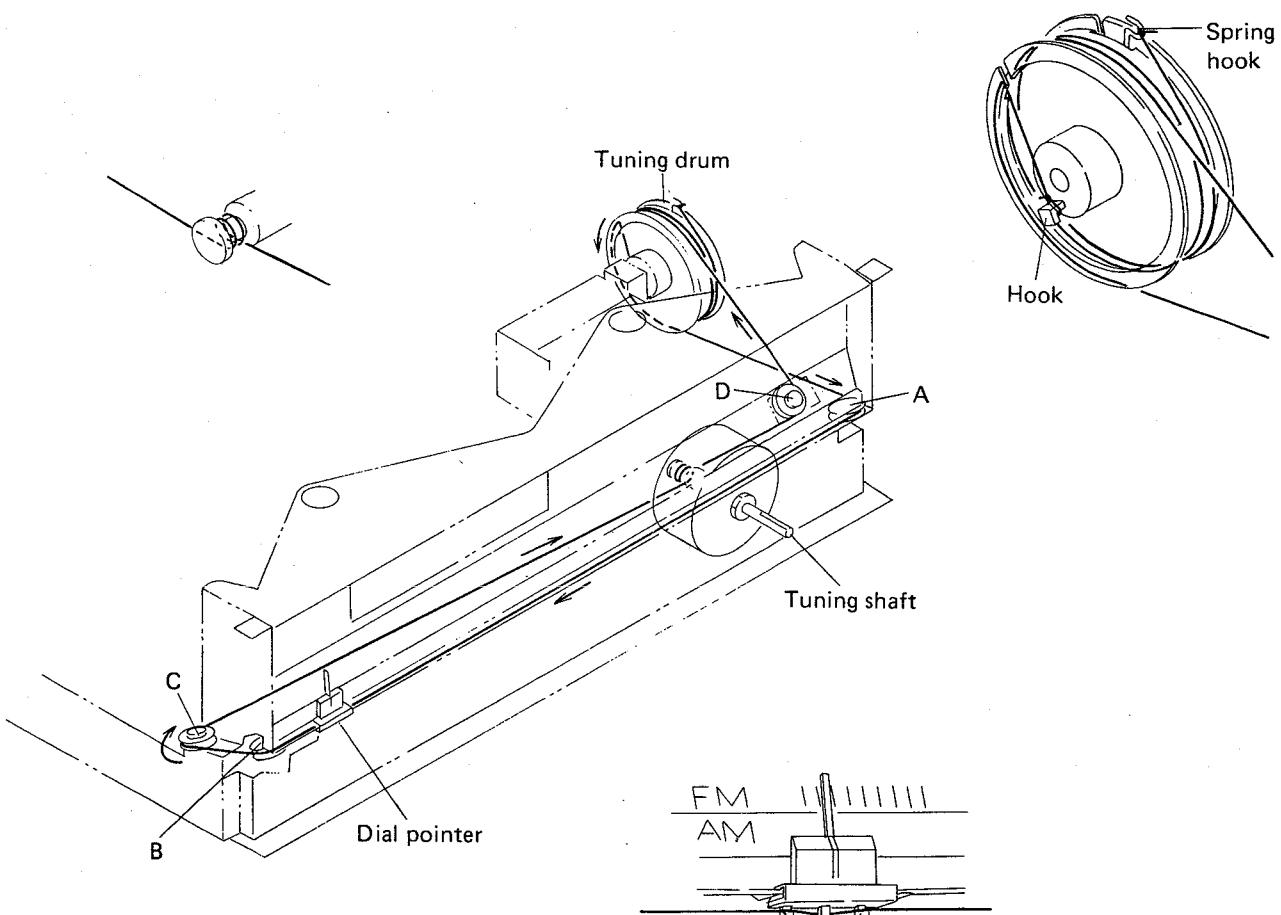

EXPLODED VIEW

9.1 EXTERIOR COMPONENTS

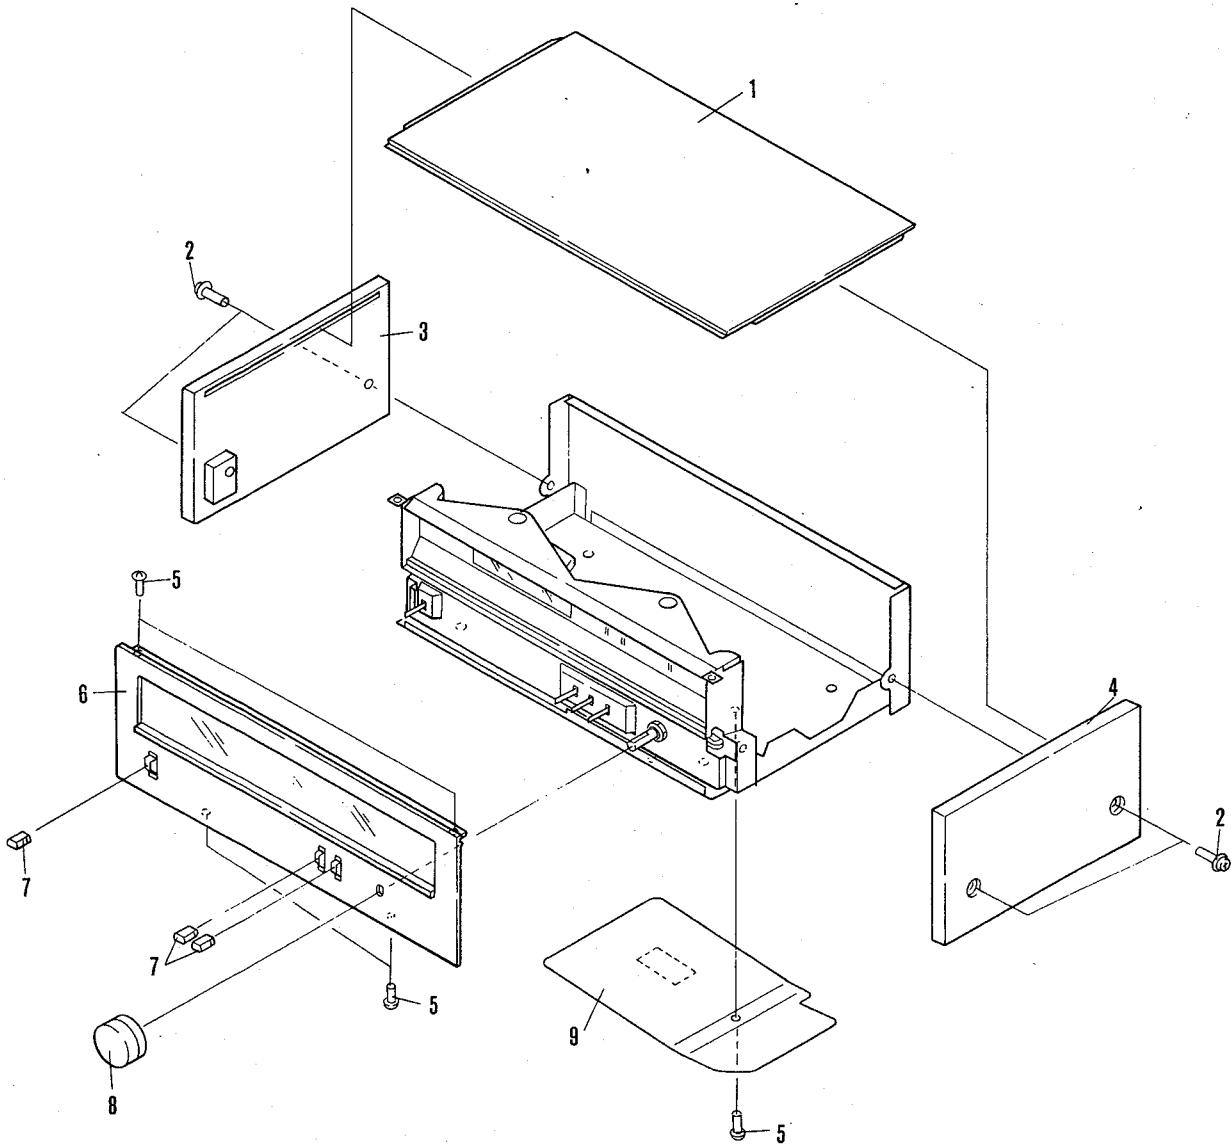


Parts List

• Parts without part number cannot be supplied.

Key No.	Part No.	Description
1.	AMS-035	Top panel
2.	ABA-206	Washerfaced screw 4x25
3.	AMS-033	Side panel L
4.	AMS-034	Side panel R
5.	ABA-048	Screw 3x6
6.	ANB-721	Front panel
7.	AAD-183	Knob (POWER, FUNCTION, MUTING)
8.	AAA-058	Knob (TUNING)
9.		Bottom plate

INTERIOR COMPONENTS

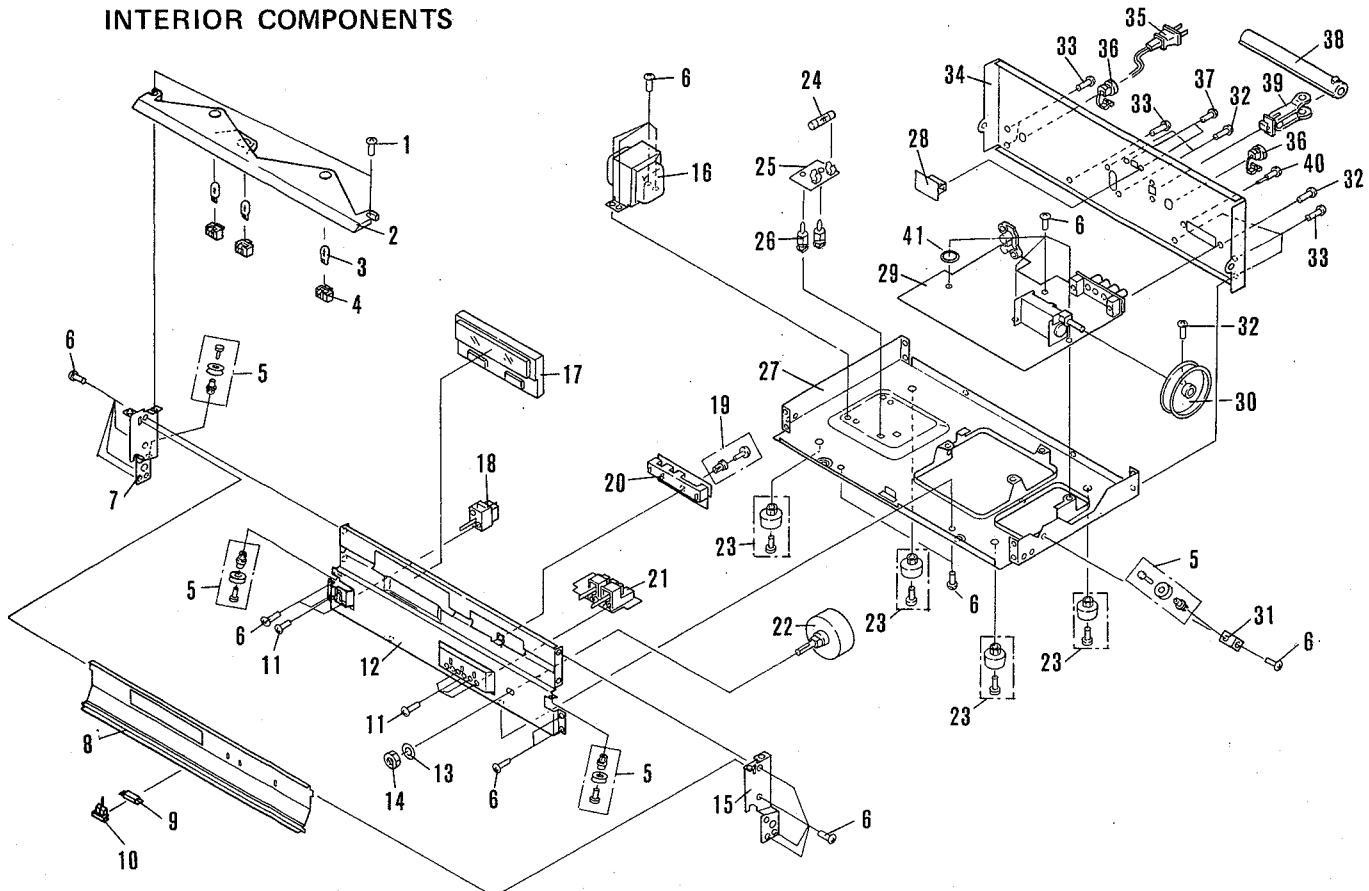

- Parts without part number cannot be supplied.
- The △ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.

Parts List


Key No.	Part No.	Description	Key No.	Part No.	Description
1.	ABA-049	Screw 3x8	21.	GWS-187	Switch assembly
2.		Acrylic board	22.	AXA-228	Tuning shaft assembly
3.	AEL-029	Lamp (wedge type)	23.	AEC-546	Foot assembly
4.	AKK-005	Lamp socket (wedge type)	△24.	AEK-106	Fuse (1A)
5		Pulley assembly	25.	AWR-200	Fuse assembly
6.	ABA-048	Screw 3x6	26.	AEC-554	P.C. board holder
7.		Side plate L	27.		Chassis
8.		Dial scale board	28.	GWS-188	De-emphasis assembly
9.		Smoothen	29.	GWM-135	Tuner assembly
10.		Dial pointer	30.		Tuning drum
11.	ABA-025	Pan head screw 3x4	31.		Angle
12.		Sub-panel	32.	ABA-082	Screw 3x10
13.	B22-018	Flat washer	33.	ABA-228	Screw 3x6
14.	B71-010	Nut 7 φ	34.		Rear panel
15.		Side plate R	△35.	ADG-023	AC power cord
△16.	ATT-612	Power transformer	36.	AEC-327	Strain relief
17.	AAW-102	Twin meter	37.	ABA-034	Pan head screw 3x4
△18.	ASK-514	Lever switch (POWER)	38.	ATB-505	Bar-antenna
19.	AEC-352	Nylon rivet	39.	AXB-012	Antenna holder
20.	GWX-308	LED assembly	40.	ABA-115	Special screw
			41.	ABE-035	Washer

External Appearance of Transistors and ICs


PA3001-A

PA1001-A

HA1138

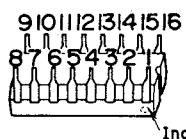


2SK168

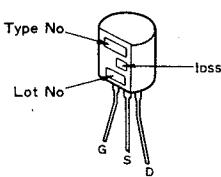


2SC535


2SC461

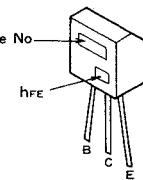


2SC945A

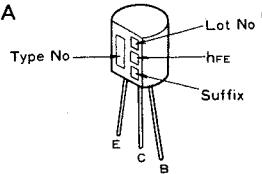


2SA726S-F

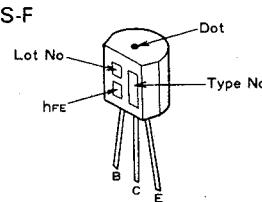



(2SA750)

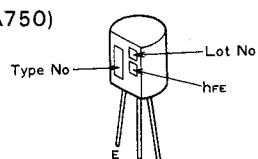

(2SC2575)

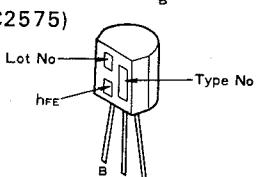

2SD313

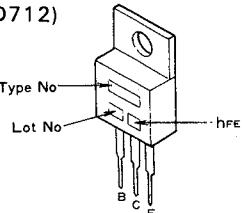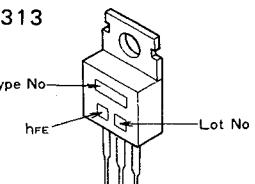

Miscellaneous Parts

LAMPS AND FUSE

Part No.	Symbol & Description
AEL-029 AEK-106	PL1-PL3 Lamp (wedge type) FU1 Fuse (1A)

P.C. BOARD ASSEMBLIES

Part No.	Description
GWM-135	Tuner assembly
GWS-187	Switch assembly
GWS-188	De-emphasis assembly
GWX-308	LED assembly
AWR-200	Fuse assembly

OTHERS

Part No.	Symbol & Description
ATT-612	T1 Power transformer
ATB-505	T2 Bar-antenna
ASK-514	S1 Lever switch (POWER)
AAW-102	Twin meter (SIGNAL/TUNING)
AKK-005	Lamp socket (wedge type)
ADG-023	AC power cord

Switch Assembly (GWS-187)

Part No.	Symbol & Description
ASK-157	S1 Lever switch (FM MUTING)
ASK-155	S2 Lever switch (FUNCTION)
RD%PM 104J	R89


De-Emphasis Assembly (GWS-188)

Part No.	Symbol & Description
CQMA 113J 50	C87, C88
ASH-015	S3 Slide switch (DE-EMPHASIS)

Fuse Assembly (AWR-200)

Part No.	Symbol & Description
ACN-029	R1 Carbon composition resistor

PACKING

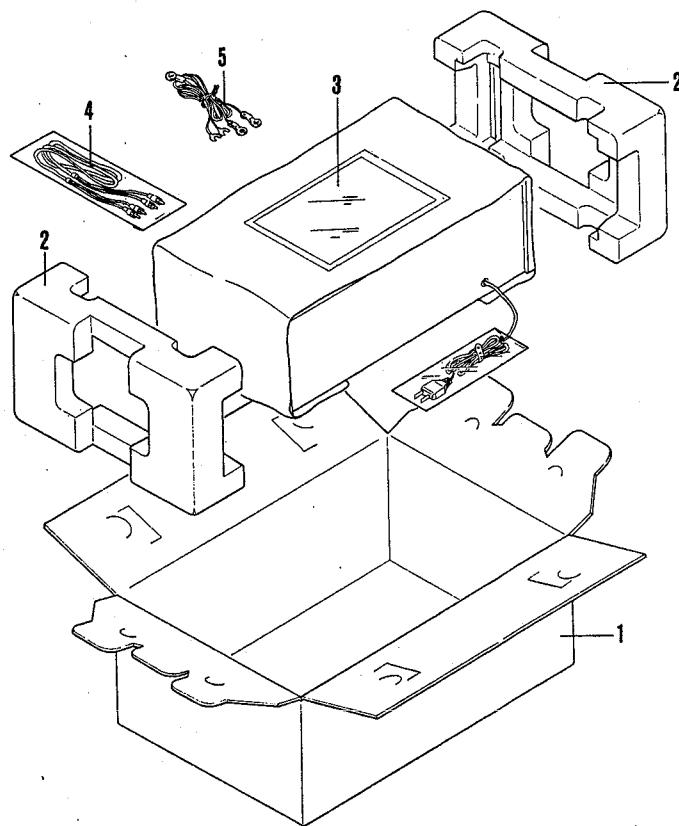

Parts List

Key No.	Part No.	Description
1.	AHD-694	Packing case
2.	AHA-188	Side pad
3.	ARB-319	Operating instructions
4.	ADE-005	Connection cord
5.	ADH-002	T-type FM antenna

PARTS LIST OF P.C. BOARD ASSEMBLIES

Tuner Assembly (GWM-135)

COILS AND TRANSFORMERS

Part No.	Symbol & Description
ATE-008	T1 FM IFT
ATE-043	T2 FM det. transformer
ATB-063	T3 AM OSC coil
T24-028	L5 RF choke coil
ATF-049	F1, F2 FM ceramic filter
ATF-074	F3 AM ceramic filter (450kHz)

CAPACITORS

Part No.	Symbol & Description
ACK-012	VC Tuning capacitor
ACM-006	TC5 Trimmer
CCDUJ 090D 50	C1
CGB R47K 500	C9
CCDXL 080F 50	C63
CCDCH 080F 50	C11
CCDUJ 150K 50	C3
CCDRH 150K 50	C10
CCDCH 150K 50	C13
CCDCH 330K 50	C12
CCDSL 060D 50	C4
CCDSL 101K 50	C5, C25
CCDSL 221K 50	C58
CKDYB 391K 50	C76, C77
CKDYB 152K 50	C74, C75
CKDYB 182K 50	C78, C79
CKDYB 472K 50	C40, C41
CKDYB 821K 50	C45
CKDYF 103Z 50	C2, C6, C7, C8, C14, C16, C18, C27, C28, C31, C32, C33, C54, C55, C56, C65, C66, C69, C70, C73, C61
CKDYF 473Z 50	C17, C20, C22, C23, C29, C30, C37, C49, C53, C57, C62, C67, C68, C89
CQSH 331K 50	C64
CQSH 511J 50	C48
CEANL R47M 50	C80, C81
CEANL 010M 50	C44, C46
CEANL 6R8M 25	C47
CEA 010P 50	C19, C24, C26, C43
CEA 100P 16	C36, C38, C50, C51, C52, C71, C72
CEA 102P 16	C82, C83
CEA 2R2P 50	C21
CEA 220P 16	C15
CEA 221P 6	C34
CEA 331P 25	C85
CEA 331P 16	C39
CEA 330P 16	C35

Part No.	Symbol & Description
CEA 4R7P 35	C60
CEA 470P 10	C59
CEA 470P 16	C86
CEA 471P 6	C42
CEA 471P 25	C84

SEMICONDUCTORS

Part No.	Symbol & Description
2SK168	Q1
2SC535	Q2
2SC461	Q3, Q4, Q11
2SA726S-F (2SA750)	Q7, Q8
2SC945A (2SC2575)	Q9
2SD313 (2SD712)	Q12
PA3001-A	Q5
PA1001-A	Q6
HA1138	Q10
1S2076 (1S1555) (1S2473)	D1-D8
▲10E2 ▲(SIB01-02)	D10, D11
MZ-140 (WZ-140)	D12
MZ-081 (WZ-081)	D9

Note: When ordering resistors, convert the resistance value into code form, and then rewrite the part no. as before.

Part No.	Symbol & Description
ACP-079	VR1 Semi-fixed 4.7k-B
RD1/PM □□□J RN1/□ PQ □□□F	R1-R46, R48-R83, R90, R91 R47

LED Assembly (GWX-308)

Part No.	Symbol & Description
AEL-315	D13 LED (STEREO)
AEL-319	D14, D15 LED (AM, FM)
RD1/PM 561J RD1/PM 182J	R84, R86, R88 R85, R87
ABA-082	Screw 3 x 10

1

2

3


4

5

6

SCHEMATIC DIAGRAM

A

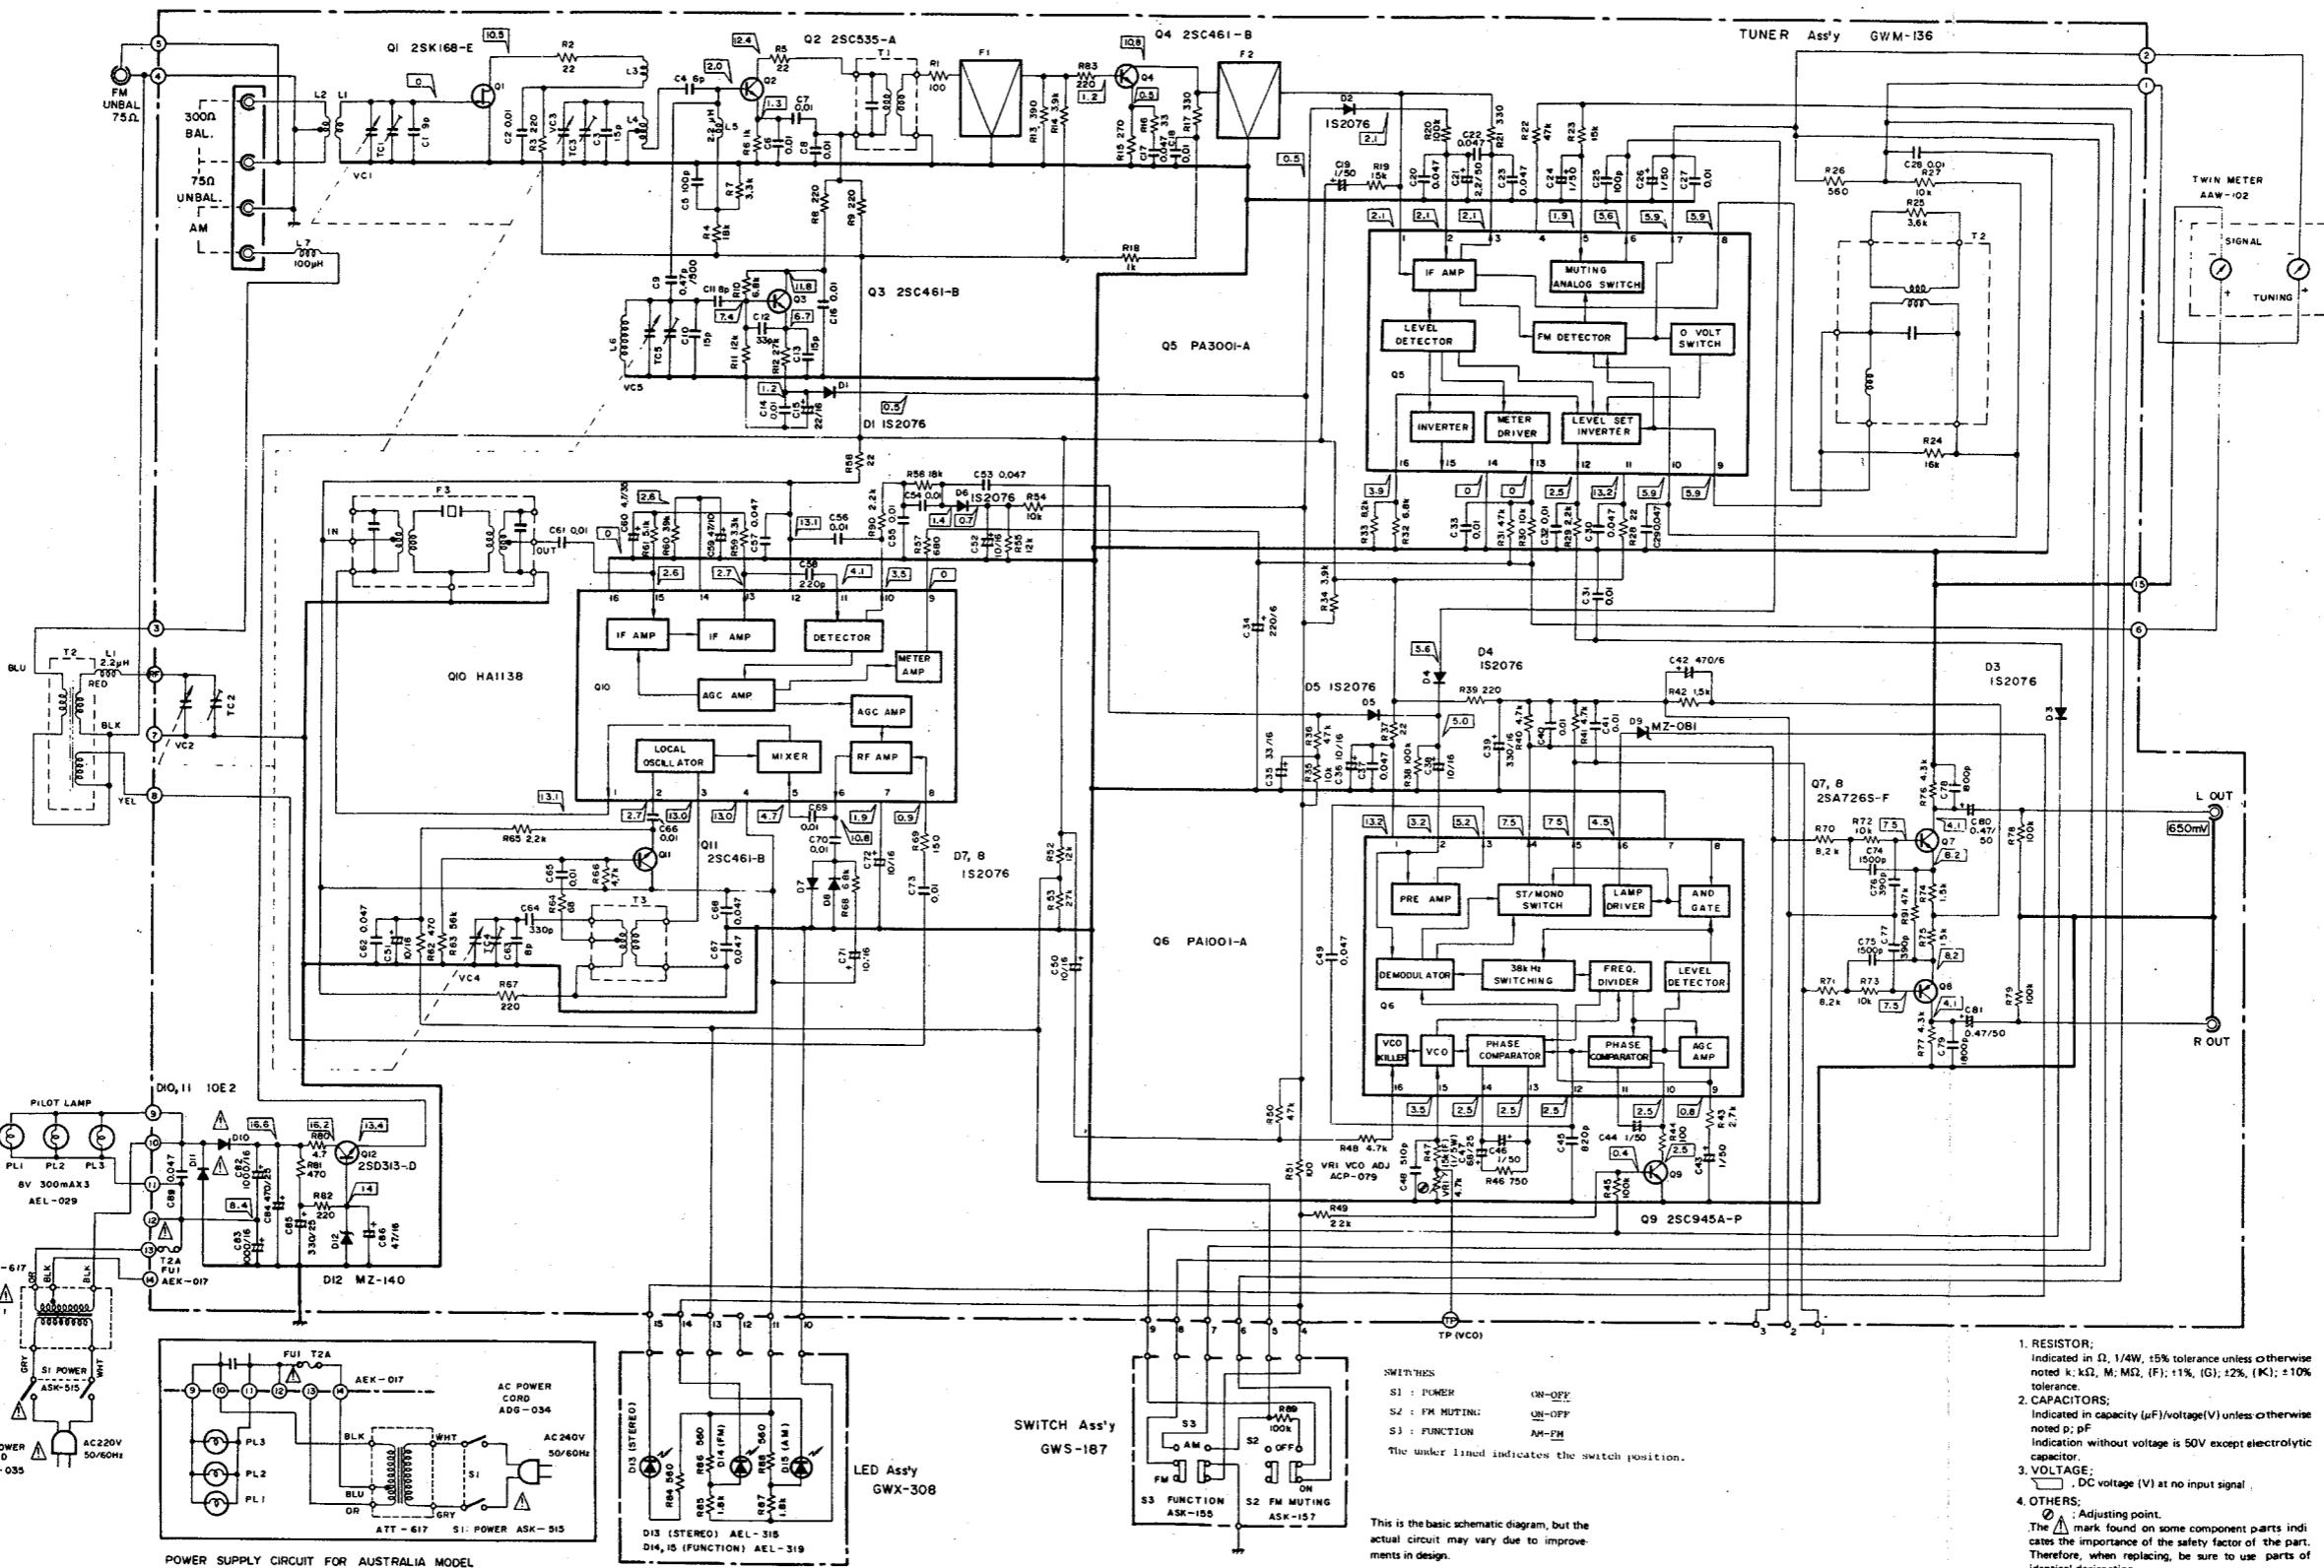

NOTE:

The indicated semiconductors are representative ones only. Other alternative semiconductors may be used and are listed in the parts list.

A

B

C

D

1. RESISTOR:
Indicated in Ω , 1/4W, ±5% tolerance unless otherwise noted k, k Ω , M, M Ω , (F); ±1%, (G); ±2%, (K); ±10%

2. CAPACITOR:
Indicated in capacity (μ F)/voltage(V) unless otherwise noted p, pF.
Indication without voltage is 50V except electrolytic capacitor.

3. VOLTAGE:
DC voltage (V) at no input signal.

4. OTHERS:
Adjusting point.
The \triangle mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.

This is the basic schematic diagram, but the actual circuit may vary due to improvements in design.

1

2

3

4




5

6


TX-608/HE,HP

FUSE Ass'y
AWR-200

SWITCH Ass'y
GWS-187

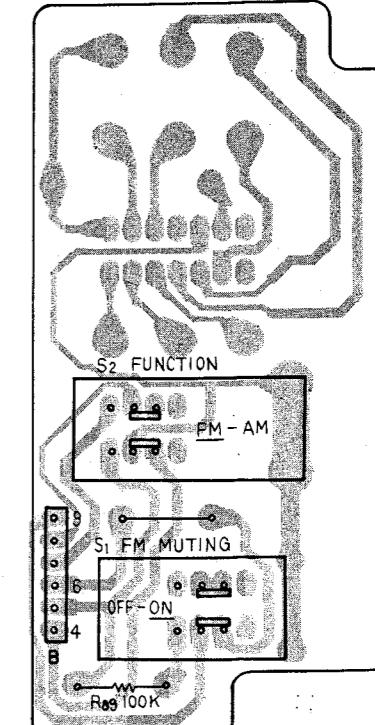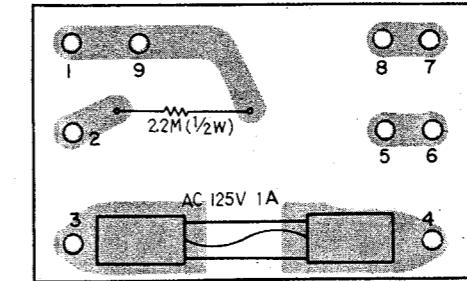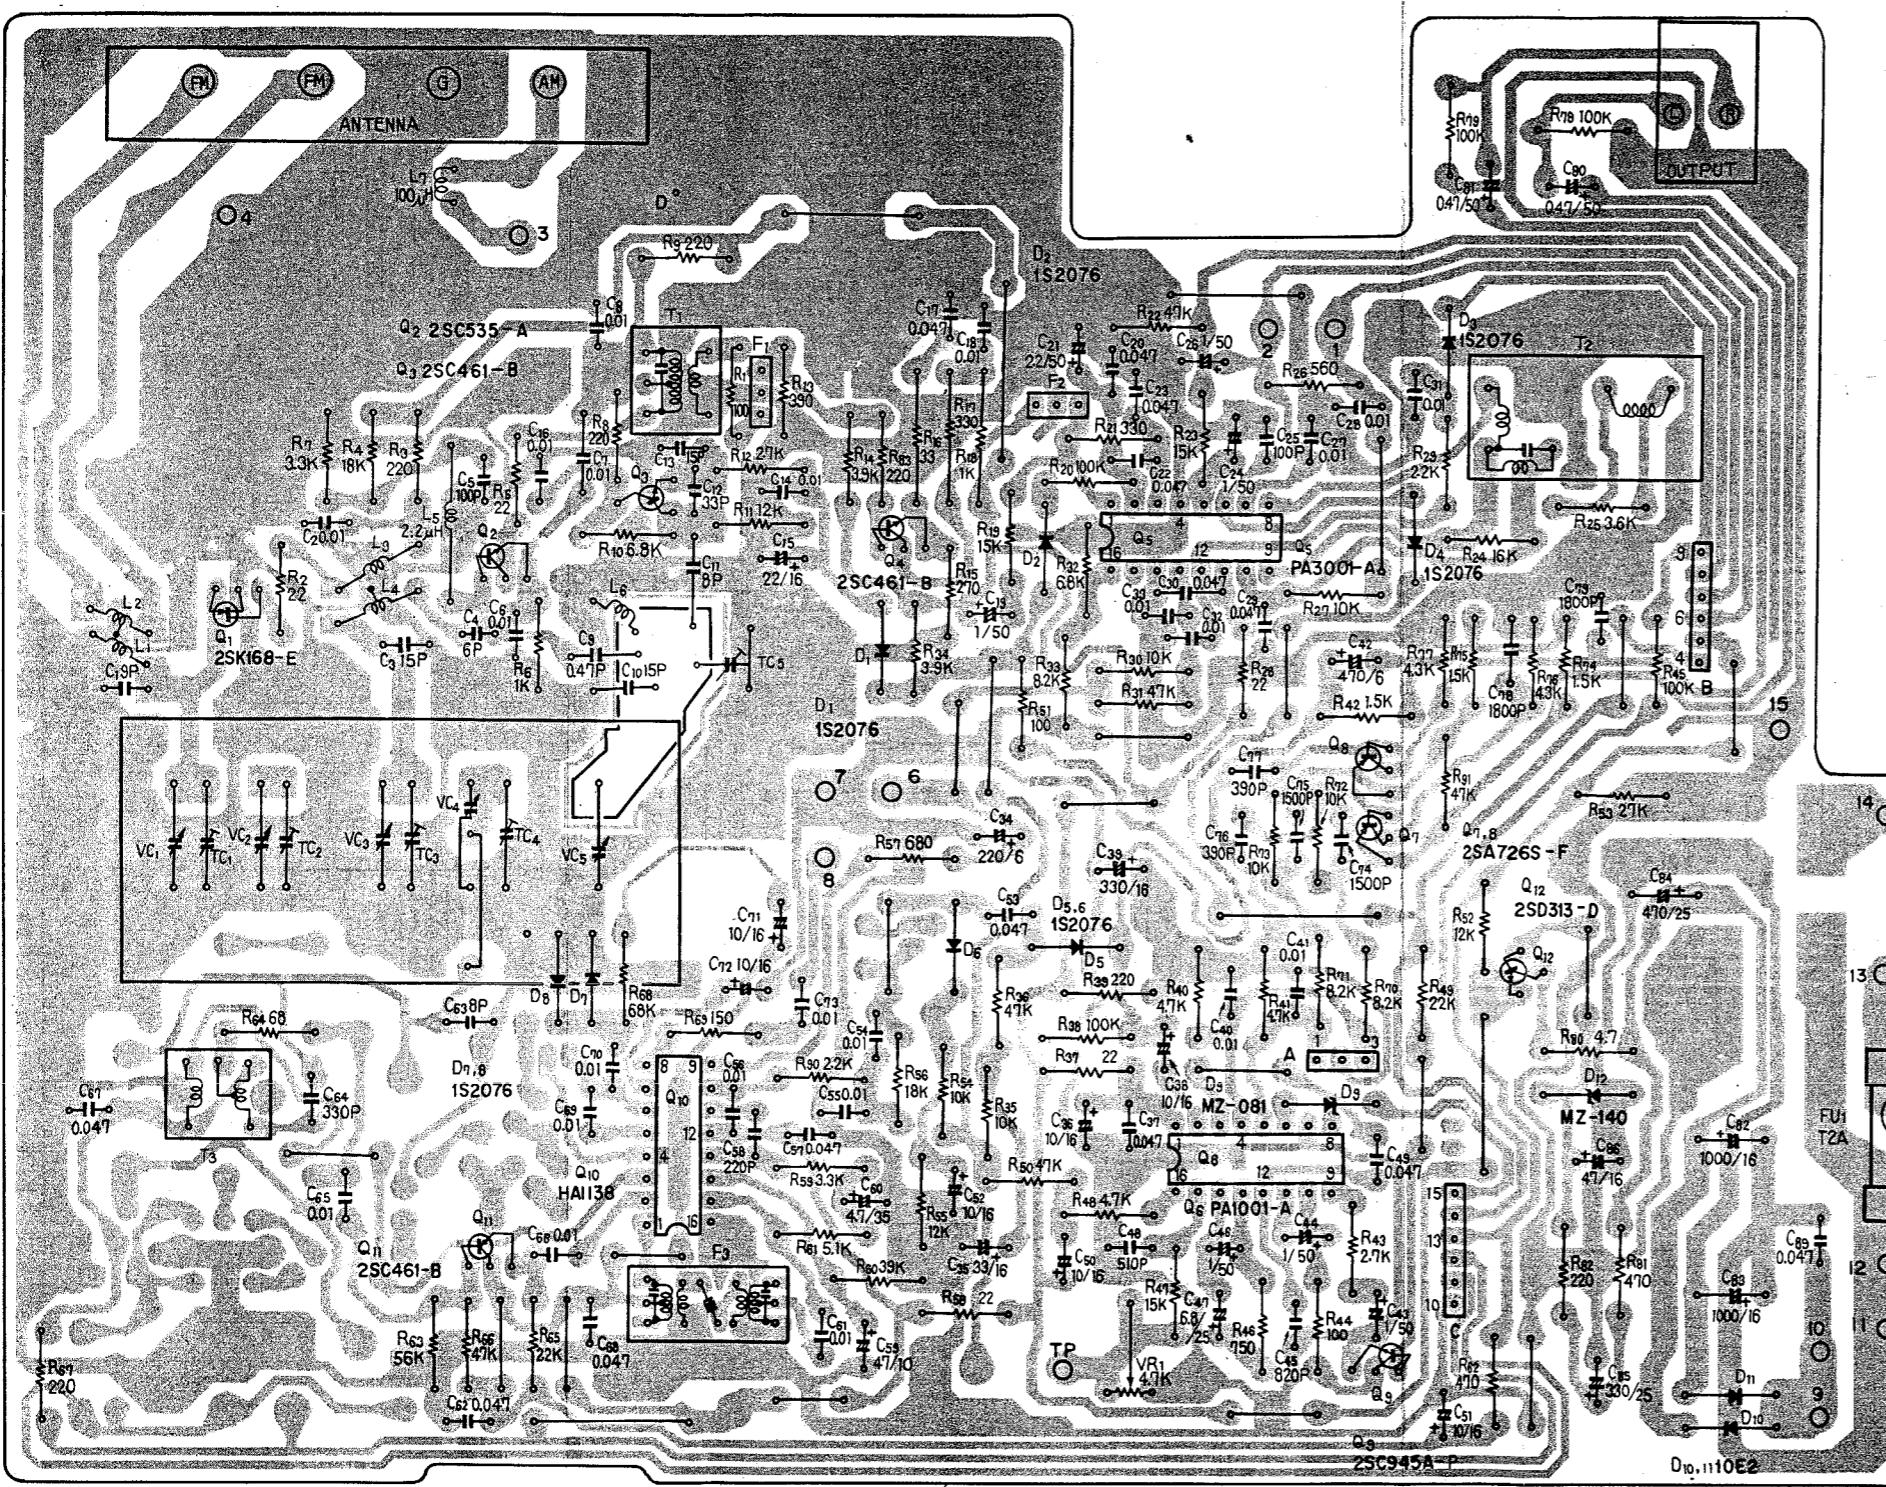

LED Ass'y GWX-308

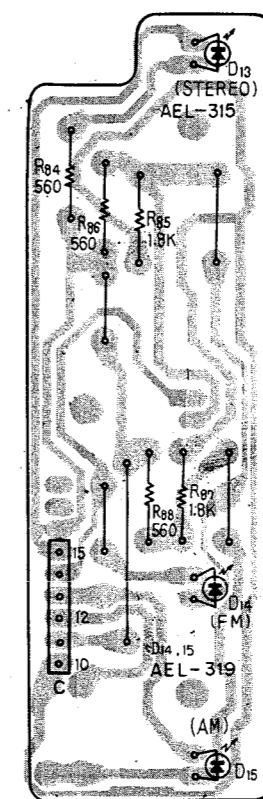

DE-EMPHASIS Ass'y
GWS-188

10. SCHEMATIC DIAGRAM, P.C.BOARD PATTERNS AND PARTS LIST

10.1 MISCELLANEA

NOTE:

- When ordering resistors, first convert resistance values into code form as shown in the following examples.

Ex. 1 When there are 2 effective digits (any digit apart from 0), such as 560 ohm and 47k ohm (tolerance is shown by J = 5%, and K = 10%).

560Ω — 56 × 10¹ — 561 RD^{1/4}PS 561 J

47kΩ — 47 × 10³ — 473 RD^{1/4}PS 473 J

0.5Ω — 0R5 RN2H 0R5 K


1Ω — 010 RS1P 010 K

Ex. 2 When there are 3 effective digits (such as in high precision metal film resistors).

5.62kΩ — 562 × 10¹ — 5621 RN4SR 5621 F

- The △ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.

External Appearance of Transistors and ICs

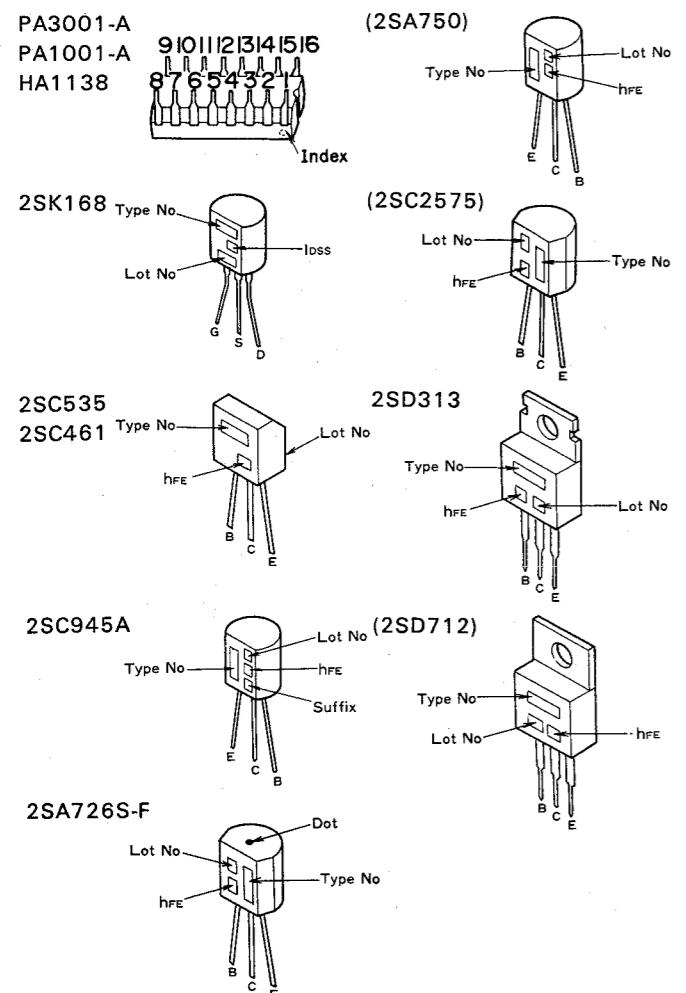

Miscellaneous Parts

LAMPS AND FUSE


Part No.	Symbol & Description
AEL-029	PL1-PL3 Lamp (wedge type)
AEK-106	FU1 Fuse (1A)

P.C. BOARD ASSEMBLIES

Part No.	Description
GWM-135	Tuner assembly
GWS-187	Switch assembly
GWS-188	De-emphasis assembly
GWX-308	LED assembly
AWR-200	Fuse assembly

OTHERS


Part No.	Symbol & Description
ATT-612	T1 Power transformer
ATB-505	T2 Bar-antenna
ASK-514	S1 Lever switch (POWER)
AAW-102	Twin meter (SIGNAL/TUNING)
AKK-005	Lamp socket (wedge type)
ADG-023	AC power cord

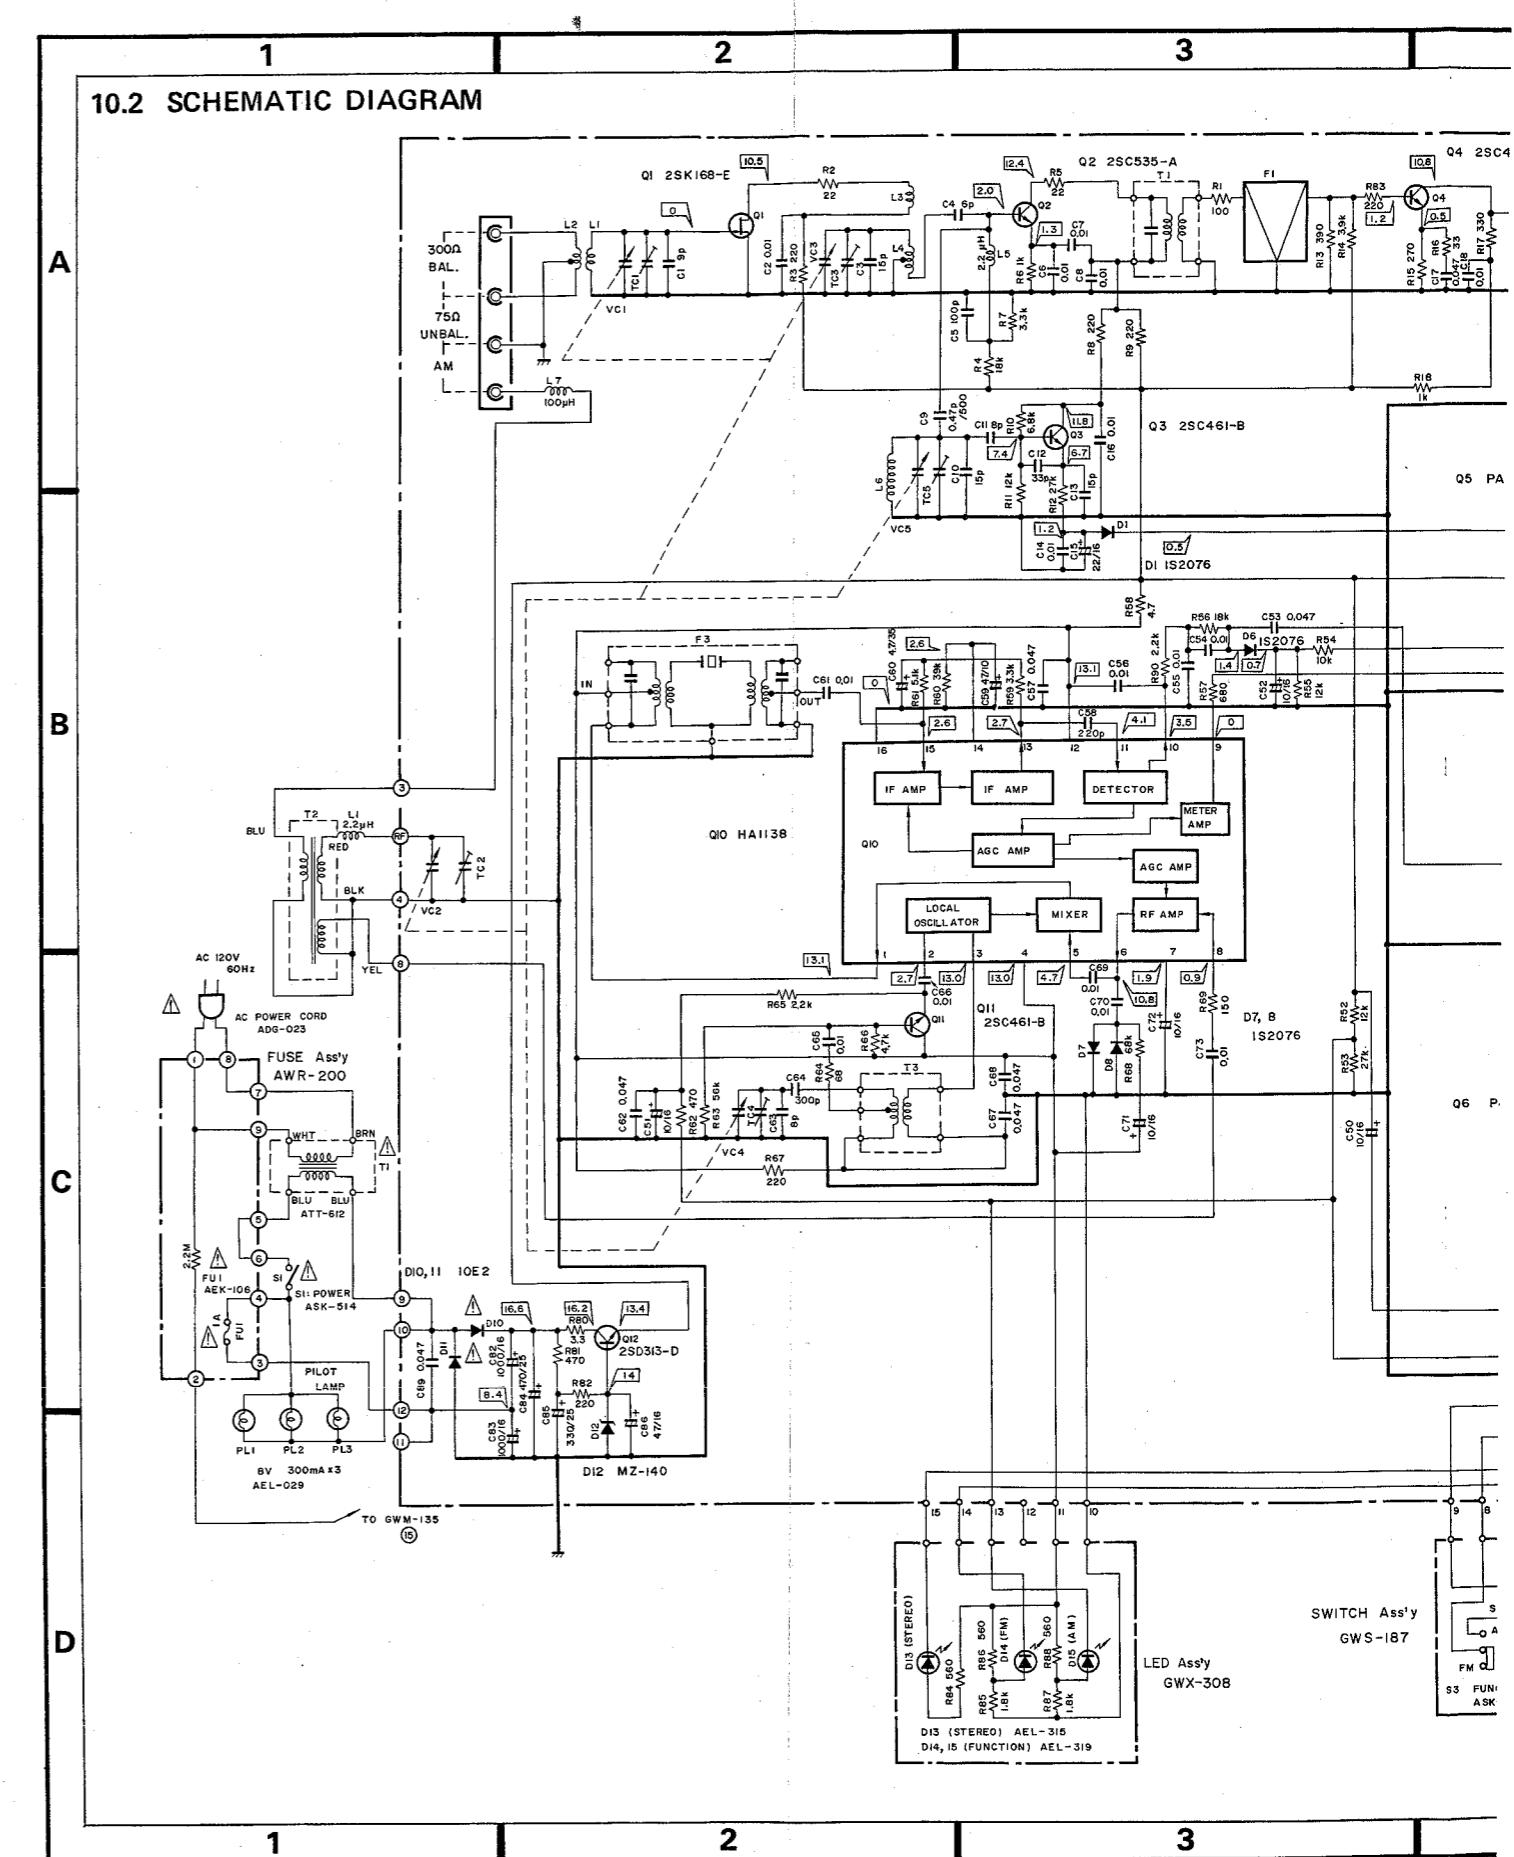

1 2 3 4 5 6

10.2 SCHEMATIC DIAGRAM

A

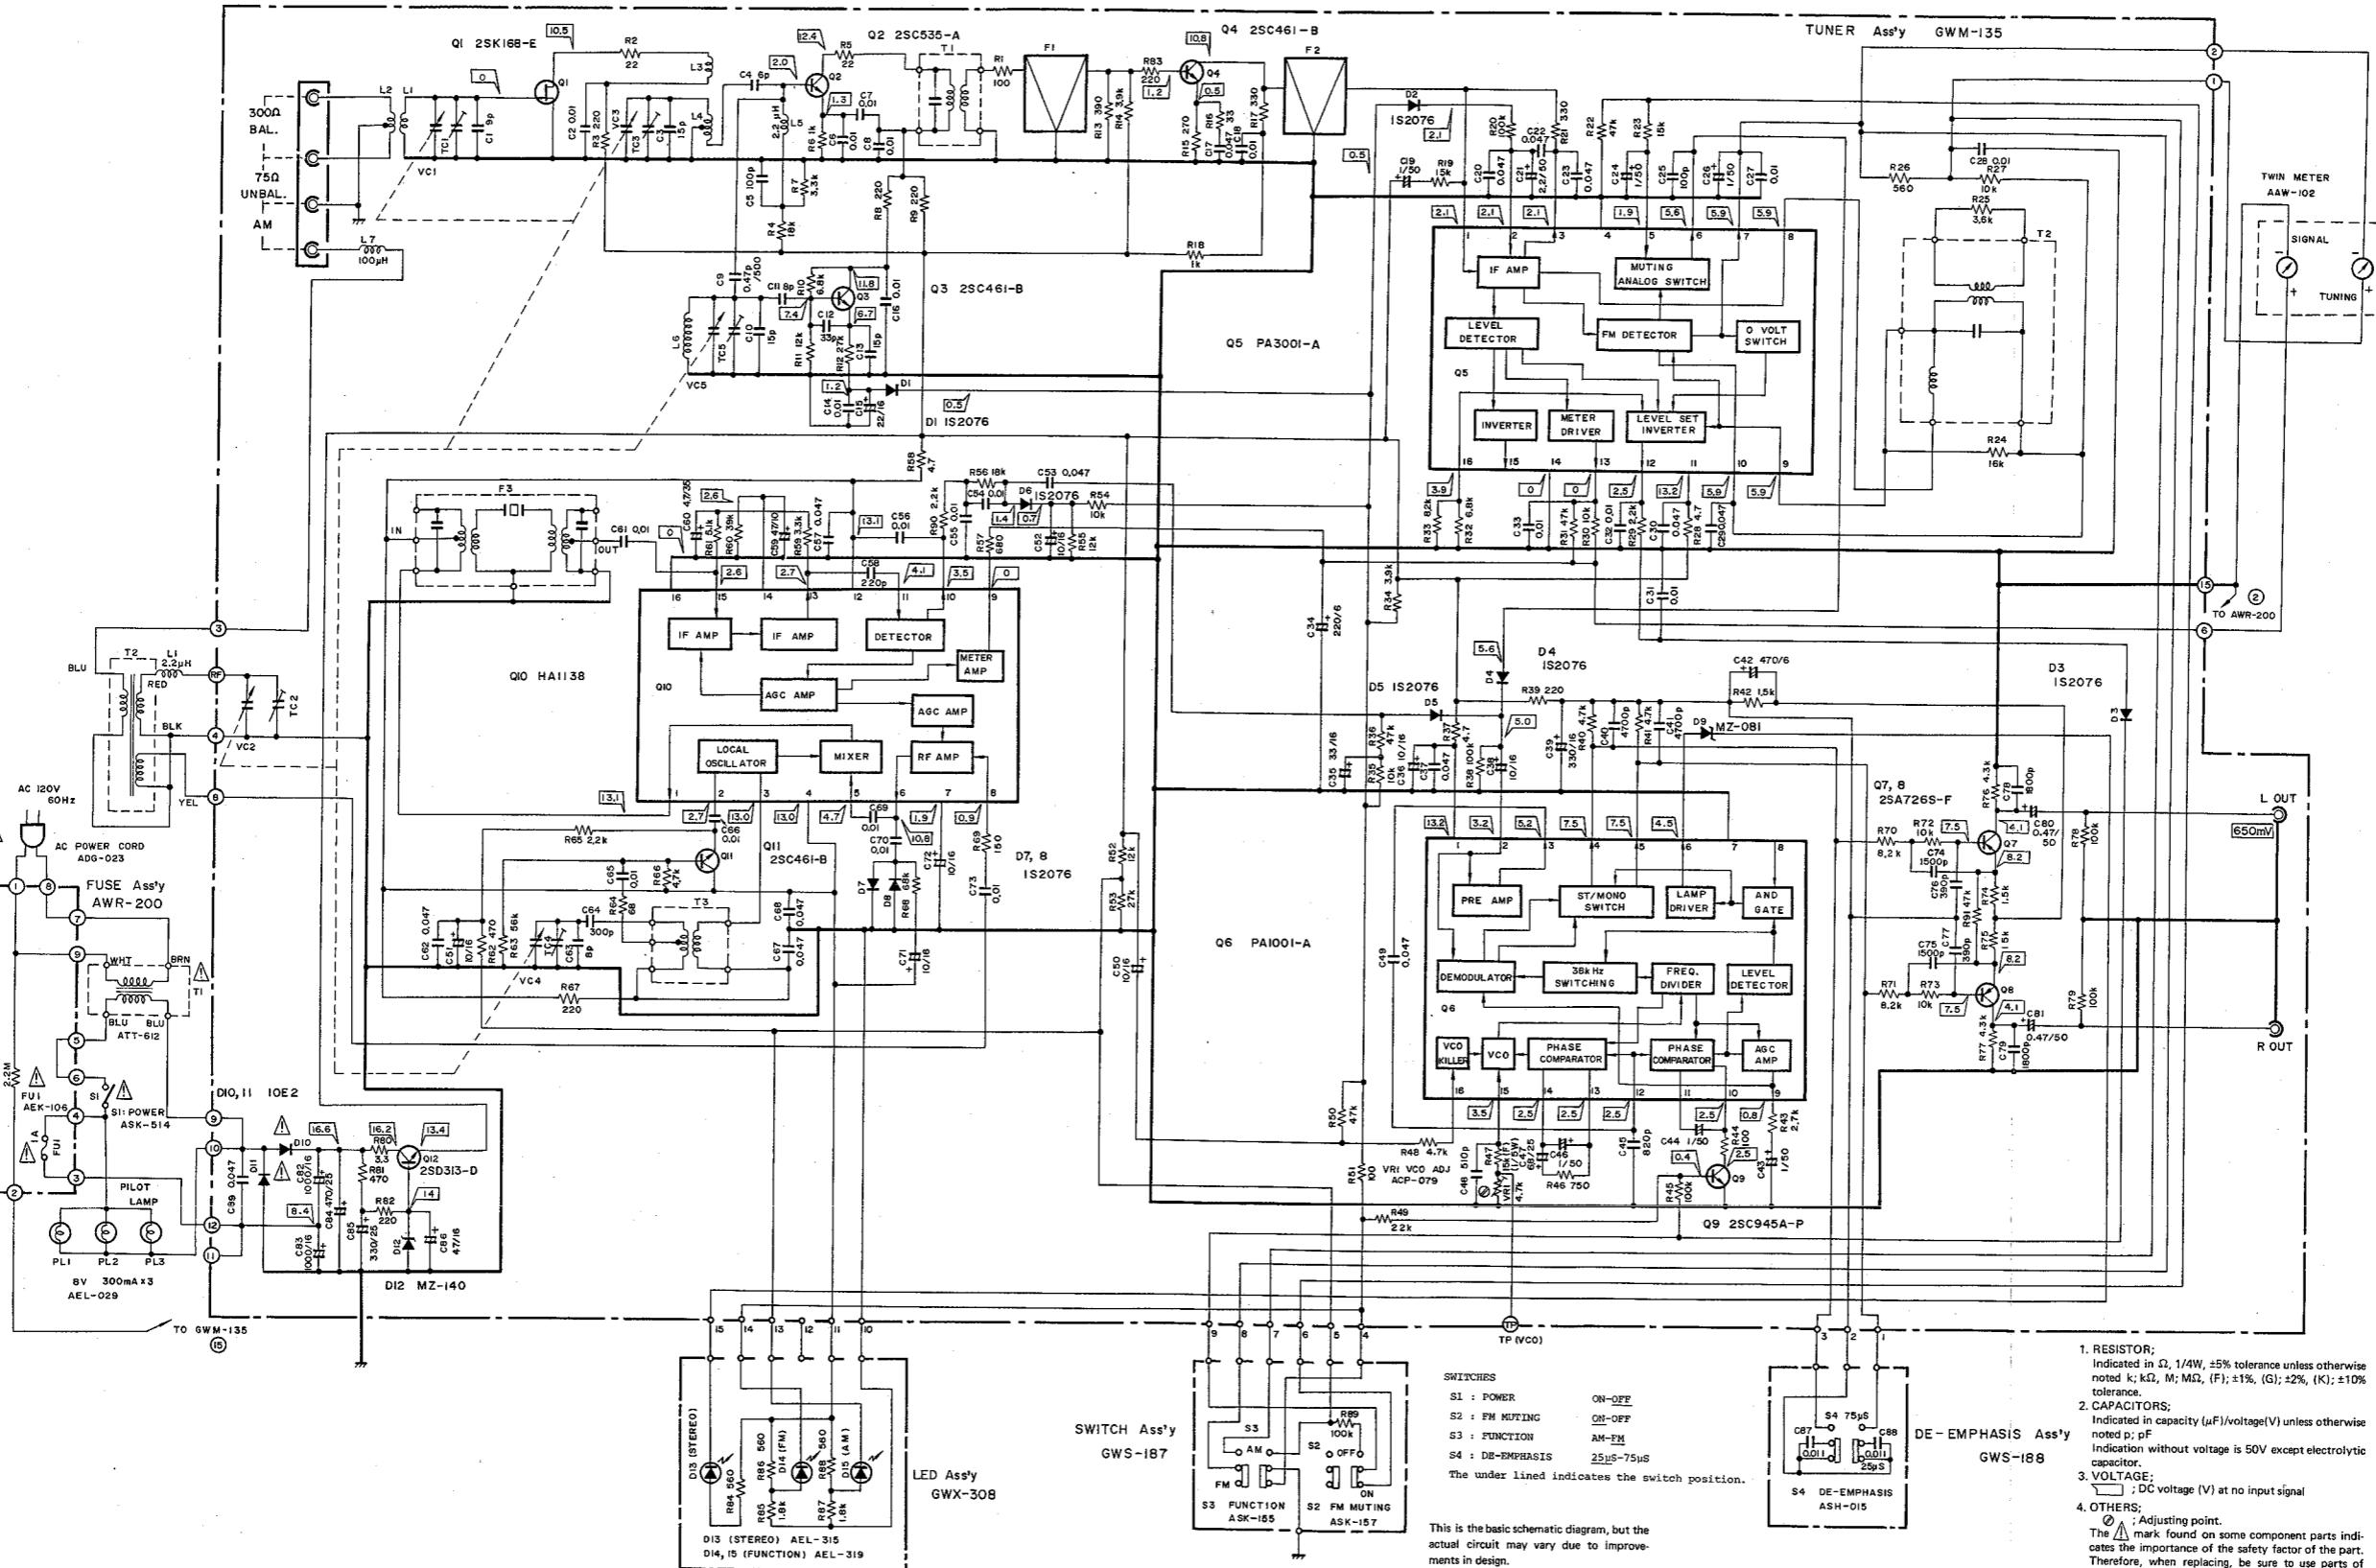

1

2

3

4

5

6

1

2

3

4


5

6


10.3 P.C. BOARDS CONNECTION DIAGRAM

TUNER Ass'y GWM-135


A

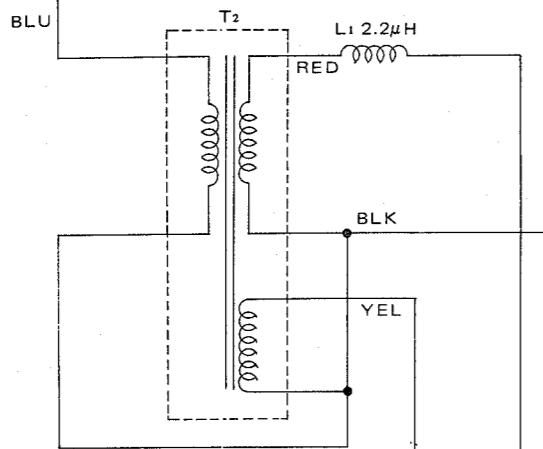


B

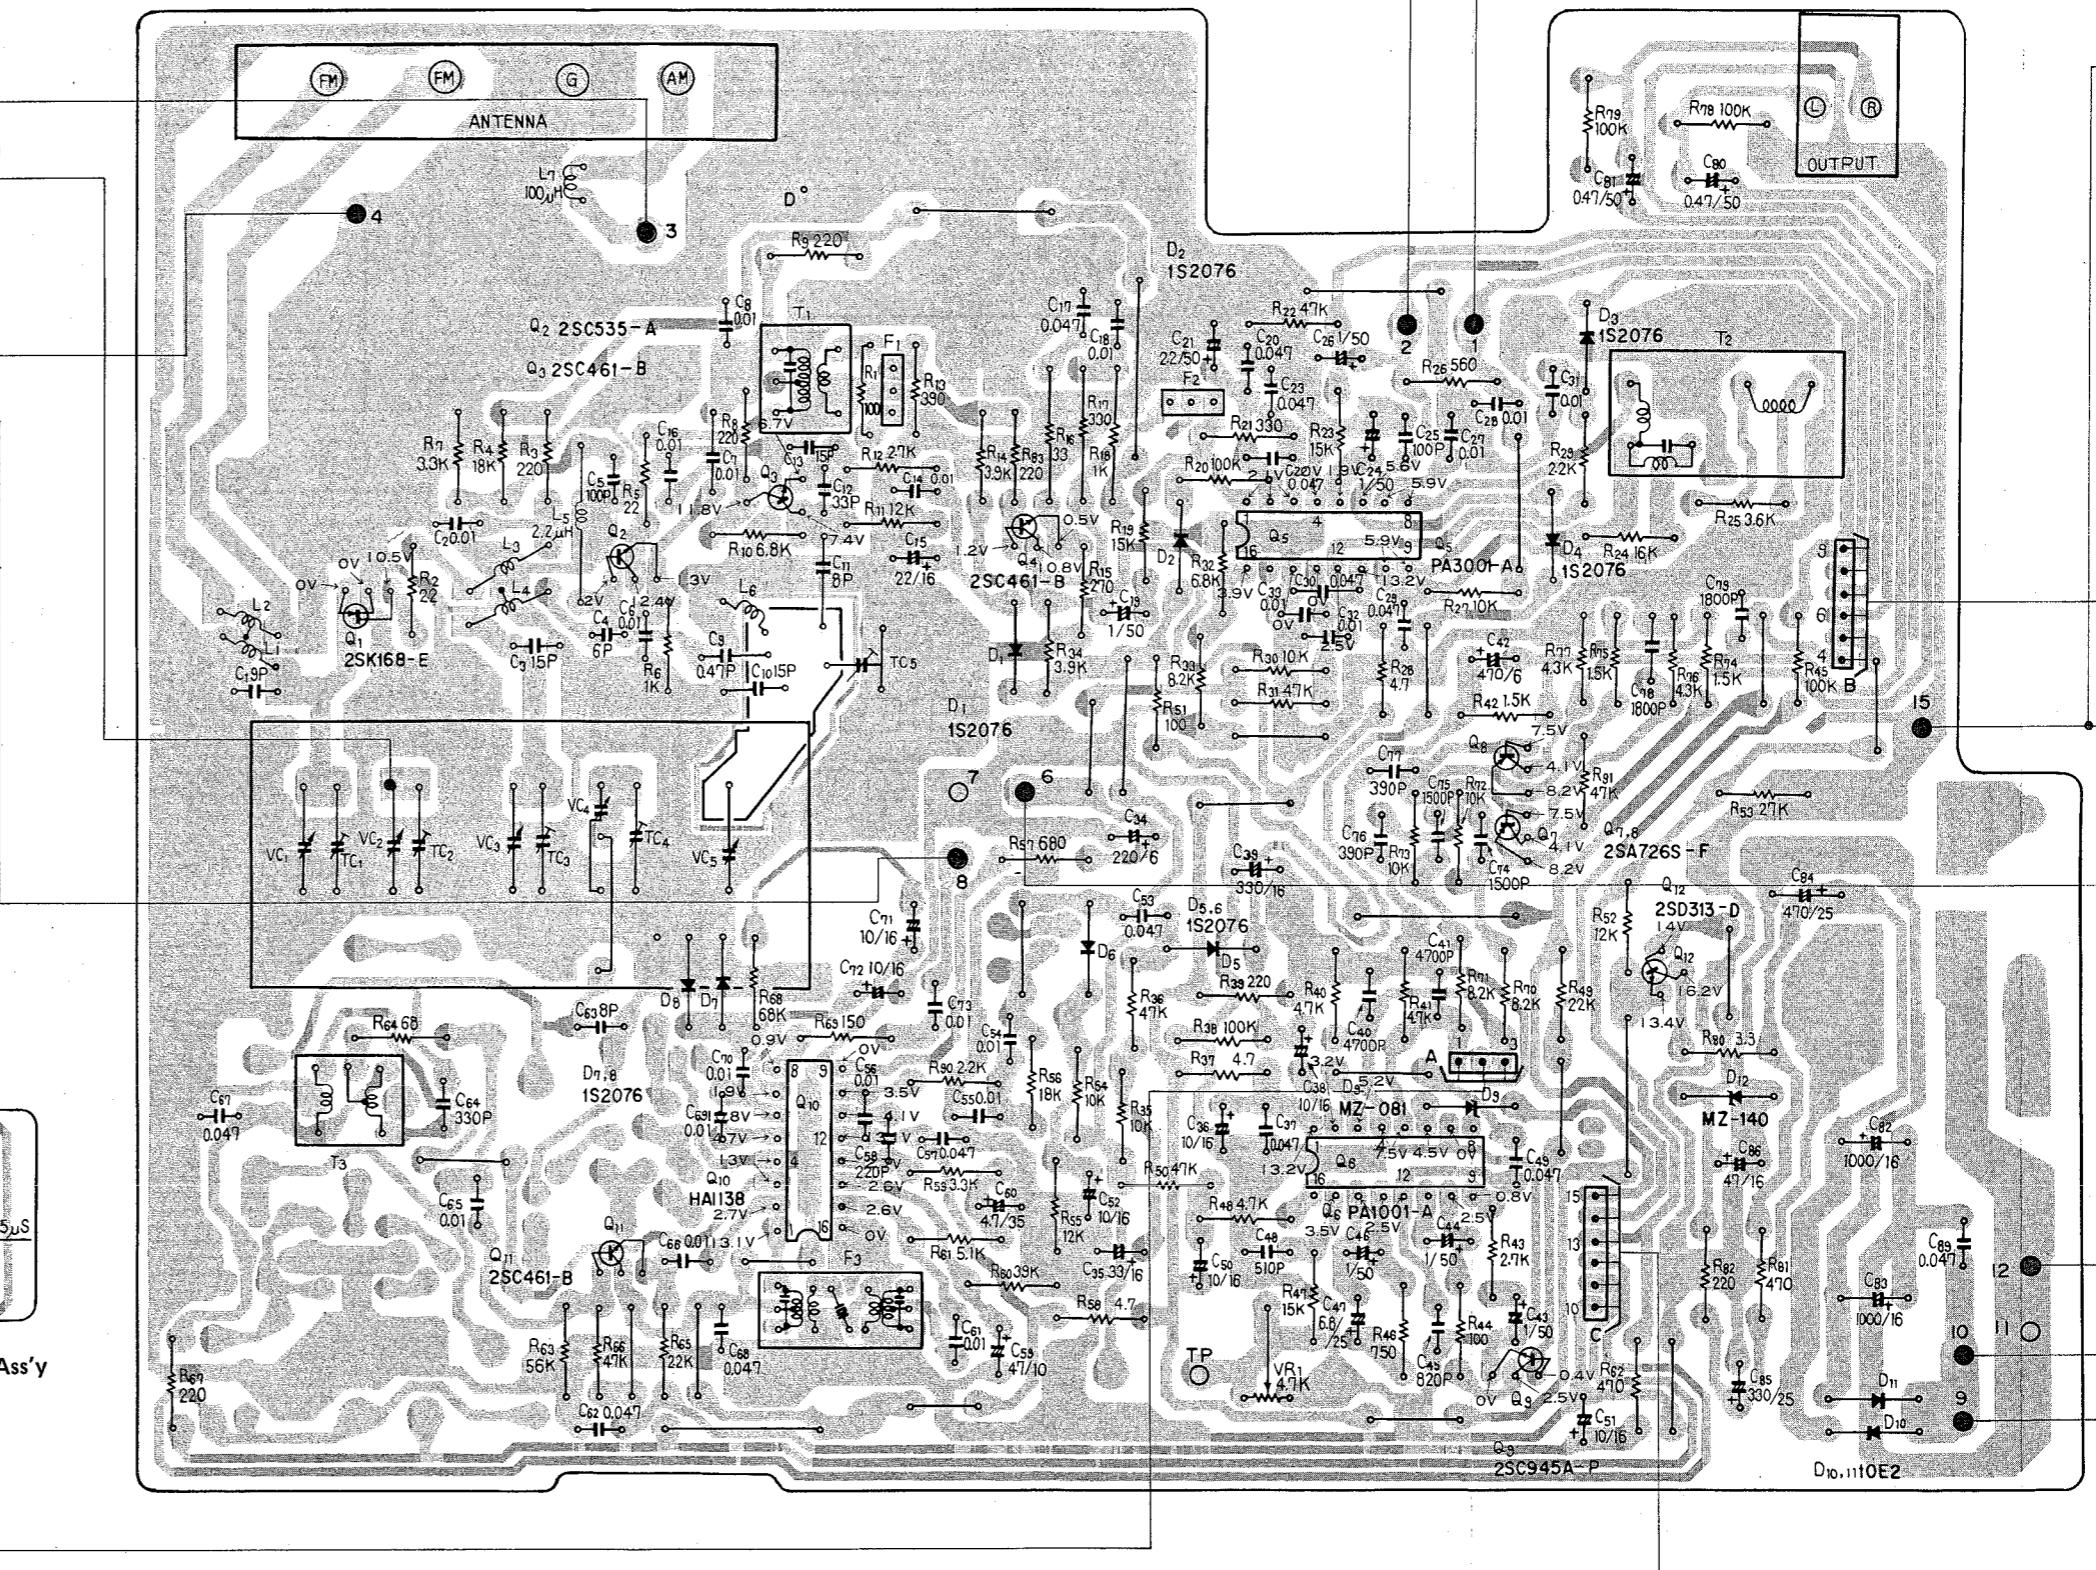


C

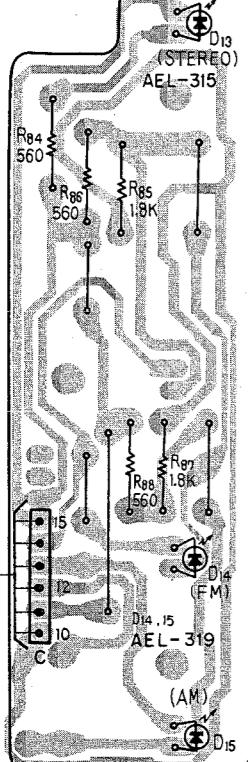

D

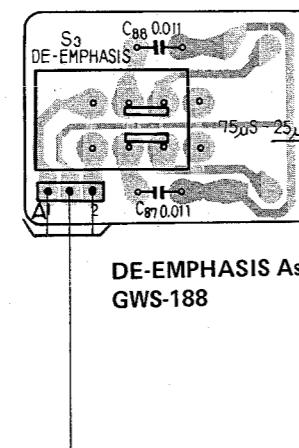

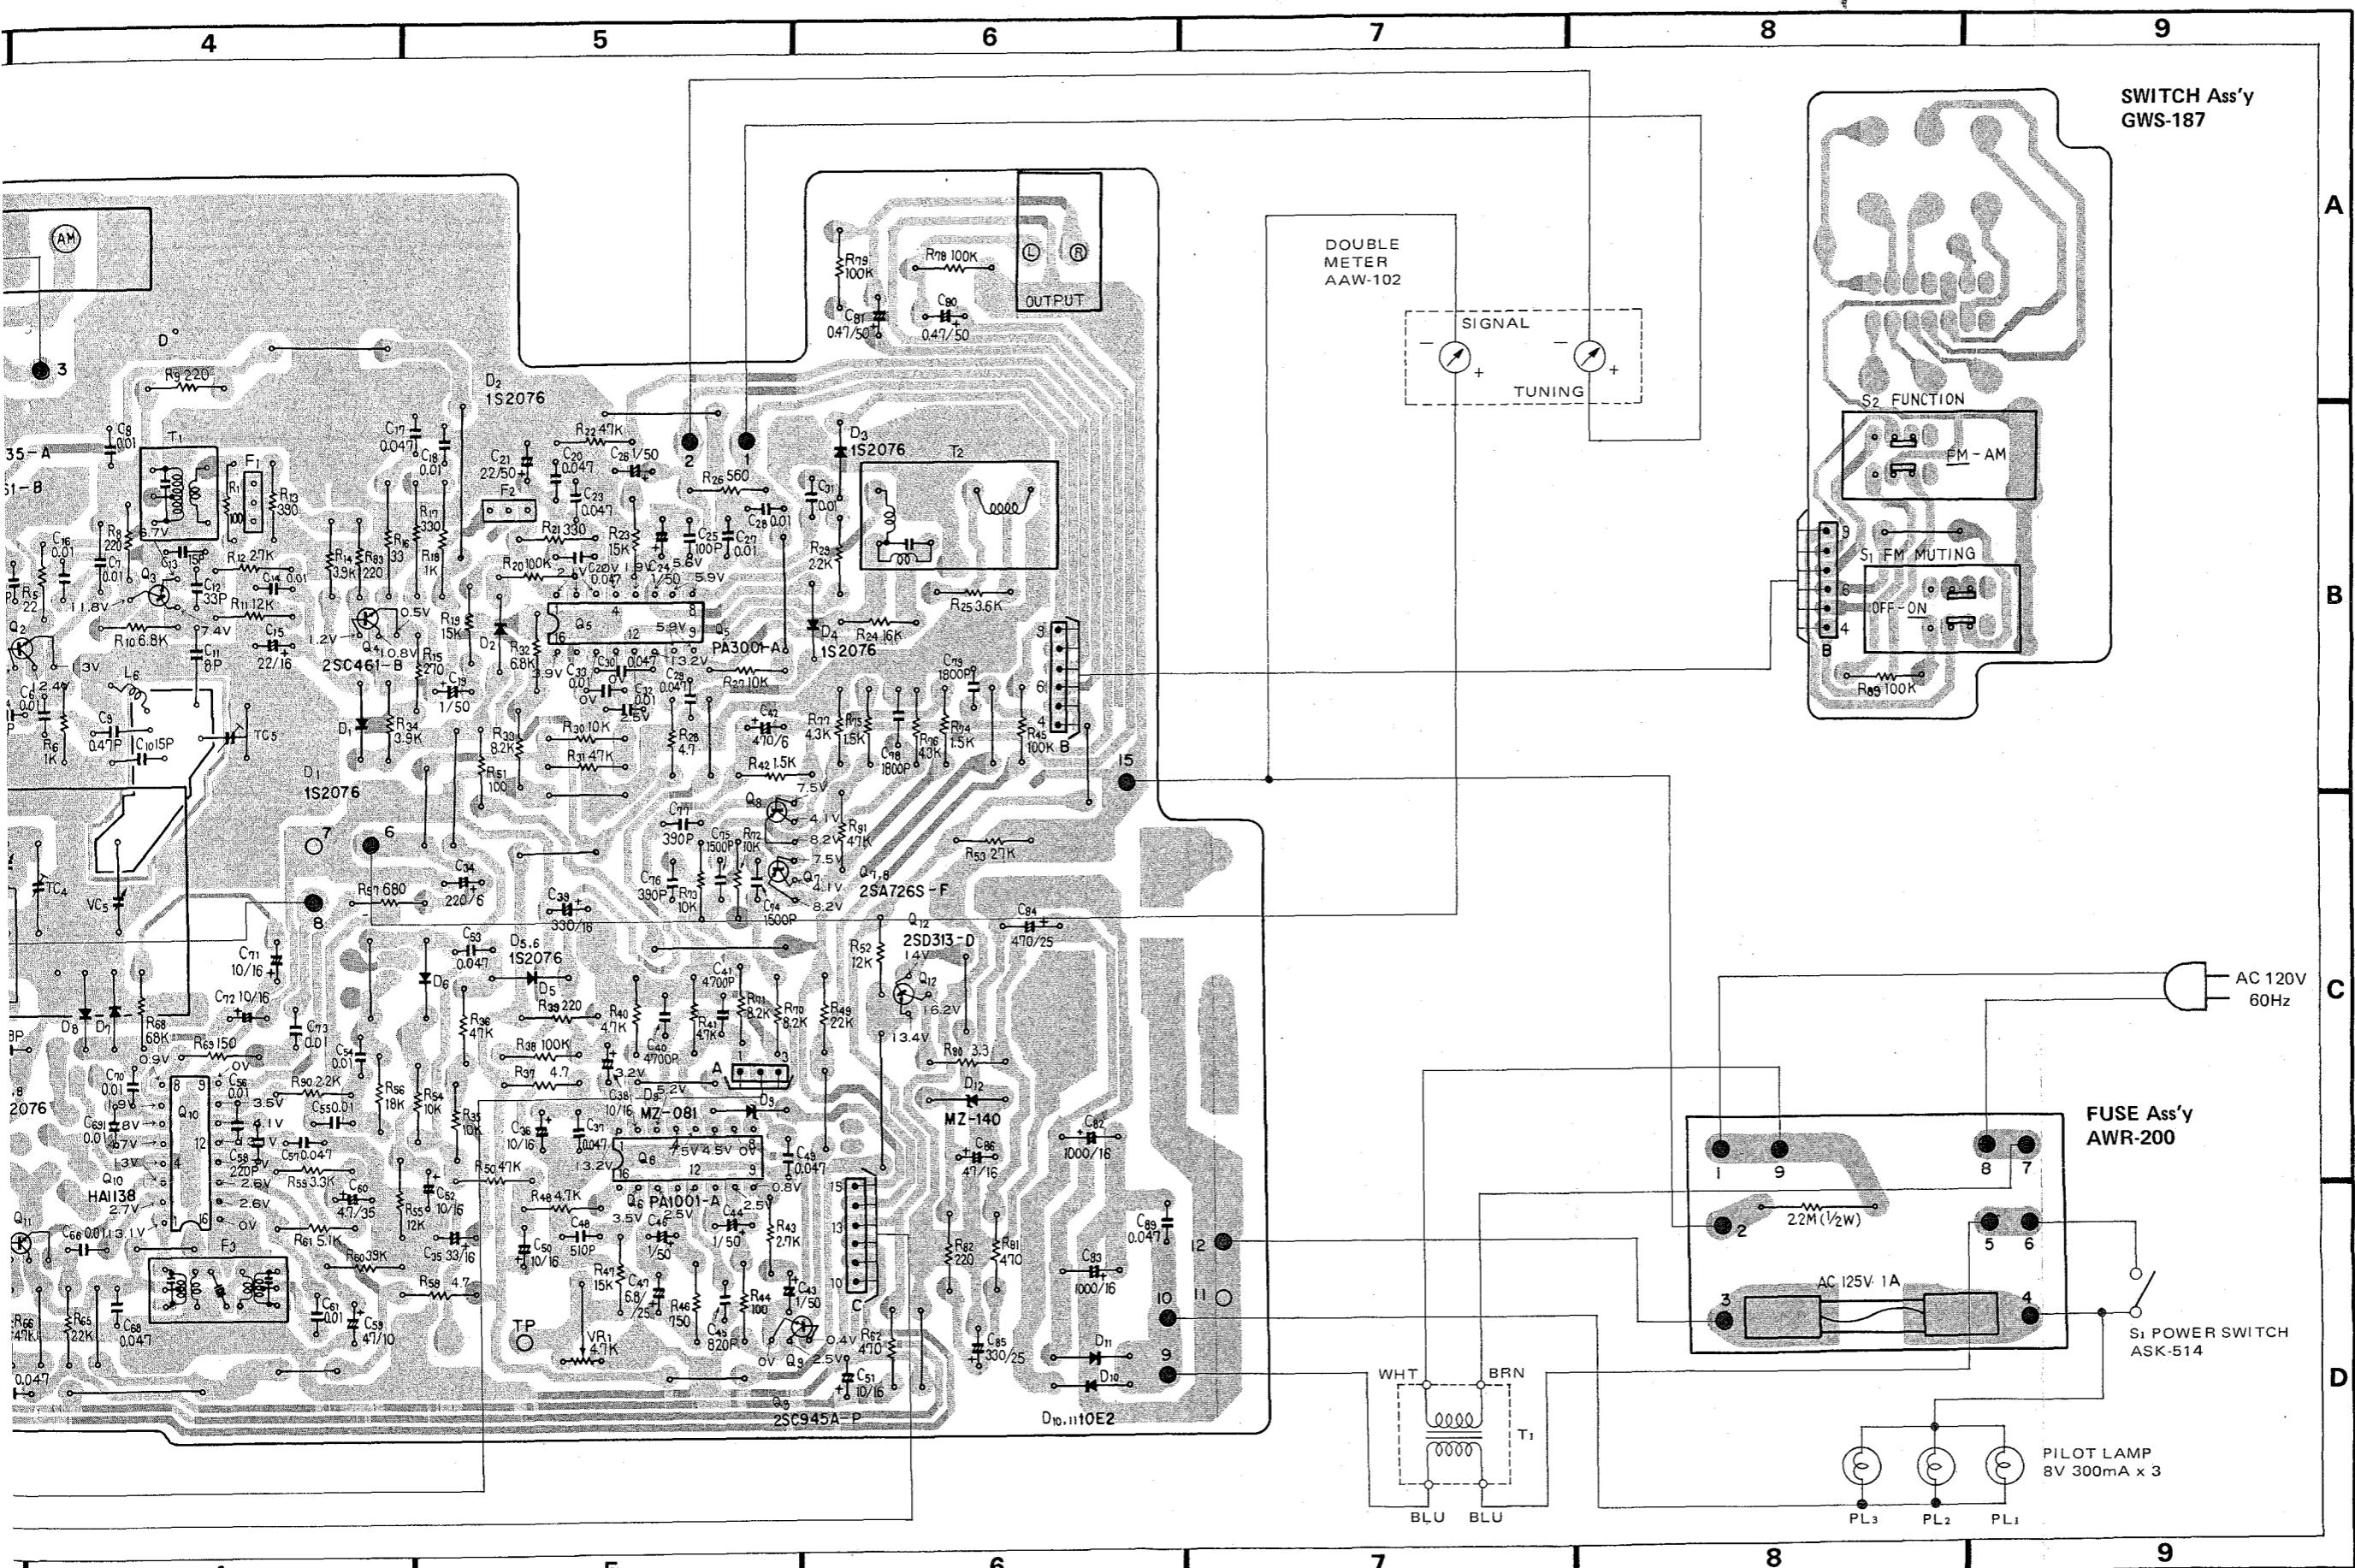

4

5

6

7

8

9

SUPPLEMENTS FOR MODEL TX-608/KU

Model TX-608/KU is the same as Model TX-6800/KU with exception of descriptions in this supplements.

Contrast of Miscellaneous Parts

Symbol	Description	Part No.		Remarks
		TX-6800/KU	TX-608/KU	
	Front panel	ANB-721	ANB-737	
	Side panel L	AMS-033	
	Side panel R	AMS-034	
	Top panel	AMS-035	
	Bonnet case	ANE-249	
	Screw 4 x 25	ABA-206	for side panels
	Screw 4 x 6	ABA-180	for bonnet case
	Operating instructions	ARB-319	ARB-335	
	Packing case	AHD-694	AHD-705	
	Side pad	AHA-188	AHA-189	

ADDITIONAL

PIONEER

Service Manual

AM/FM STEREO TUNER

TX-608

HE
HP

The basic performance of Model TX-608 is the same as Model TX-6800. Model TX-6800 has wooden cover, while Model TX-608 employs metal. This additional service manual is applicable to the TX-608/HE and the TX-608/HP, please refer to the TX-6800/KU service manual (ART-375) with exception of this supplements.

Model TX-608/HE:

For Europe Continent model

Model TX-608/HP:

For Australia (Oceania) model

Specifications

The specifications for HE and HP types are the same as the TX-6800/KU except for following sections;

FM Section

Sensitivity (DIN)

MONO	1.5μV
STEREO	50μV

Signal-to-Noise Ratio (DIN)

MONO	76dB (unweighted)
STEREO	66dB (unweighted)

Miscellaneous

Power Requirement

HE type	220V, 50/60Hz
HP type	240V, 50/60Hz

Dimensions 420(W)x150(H)x284(D)mm

16-9/16(W)x5-7/8(H)x11-3/16(D)in


Weight (Without Package) 5.1kg (11 lb 4 oz)

Line Voltage Selection

Line voltage can be changed as follows:

1. Disconnect the AC power cord.
2. Remove the top cover.
3. Take out the fuse from the P.C.board.
4. Re-install the fuse in the correct voltage indication.
5. Stick the line voltage label on the rear panel.

Description	Part No.
220V label	AAX-193
240V label	AAX-192

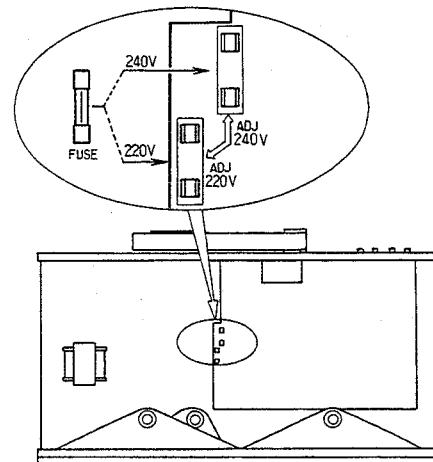

PIONEER ELECTRONIC CORPORATION 4-1, Meguro 1-Chome, Meguro-ku, Tokyo 153, Japan
U.S. PIONEER ELECTRONICS CORPORATION 85 Oxford Drive, Moonachie, New Jersey 07074, U.S.A.
PIONEER ELECTRONIC (EUROPE) N.V. Luitelijn-Haven 9, 2030 Antwerp, Belgium
PIONEER ELECTRONICS AUSTRALIA PTY. LTD. 178-184 Boundary Road, Braeside, Victoria 3195, Australia

<ART-377-0>

F © MAY 1979 Printed in Japan

4948

CONTRAST OF MISCELLANEOUS PARTS

- The  mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.

Symbol	Description	Part No.			Remarks
		TX-6800/KU	TX-608/HE	TX-608/HP	
 T1	Power transformer	ATT-612	ATT-617	ATT-617	
 S1	Lever switch (POWER)	ASK-514	ASK-515	ASK-515	
 FU1	Fuse (1A)	AEK-106	
	Fuse (2A)	AEK-017	AEK-017	
	AC power cord	ADG-023	ADG-035	ADG-034	
	Coaxial connector socket	AKP-016	AKP-016	
	P.C. board holder	AEC-554	
	Tuner assembly	GWM-135	GWM-136	GWM-136	
	Switch assembly	GWS-187	GWS-187	GWS-187	
	LED assembly	GWX-308	GWX-308	GWX-308	
	Fuse assembly	AWR-200	
	De-emphasis assembly	GWS-188	
	Front panel	ANB-721	ANB-737	ANB-737	
	Side panel L	AMS-033	
	Side panel R	AMS-034	
	Top panel	AMS-035	
	Top cover	ANE-249	ANE-249	
	Screw 4x25	ABA-206	For side panels
	Screw 4x6	ABA-180	ABA-180	For top cover
	Operating instructions	ARB-319	ARB-327	ARB-327	English
	Operating instructions	ARD-136	German/French
	Packing case	AHD-694	AHD-705	AHD-705	
	Side pad	AHA-188	AHA-189	AHA-189	

1

2


3

4

5

6

SCHEMATIC DIAGRAM

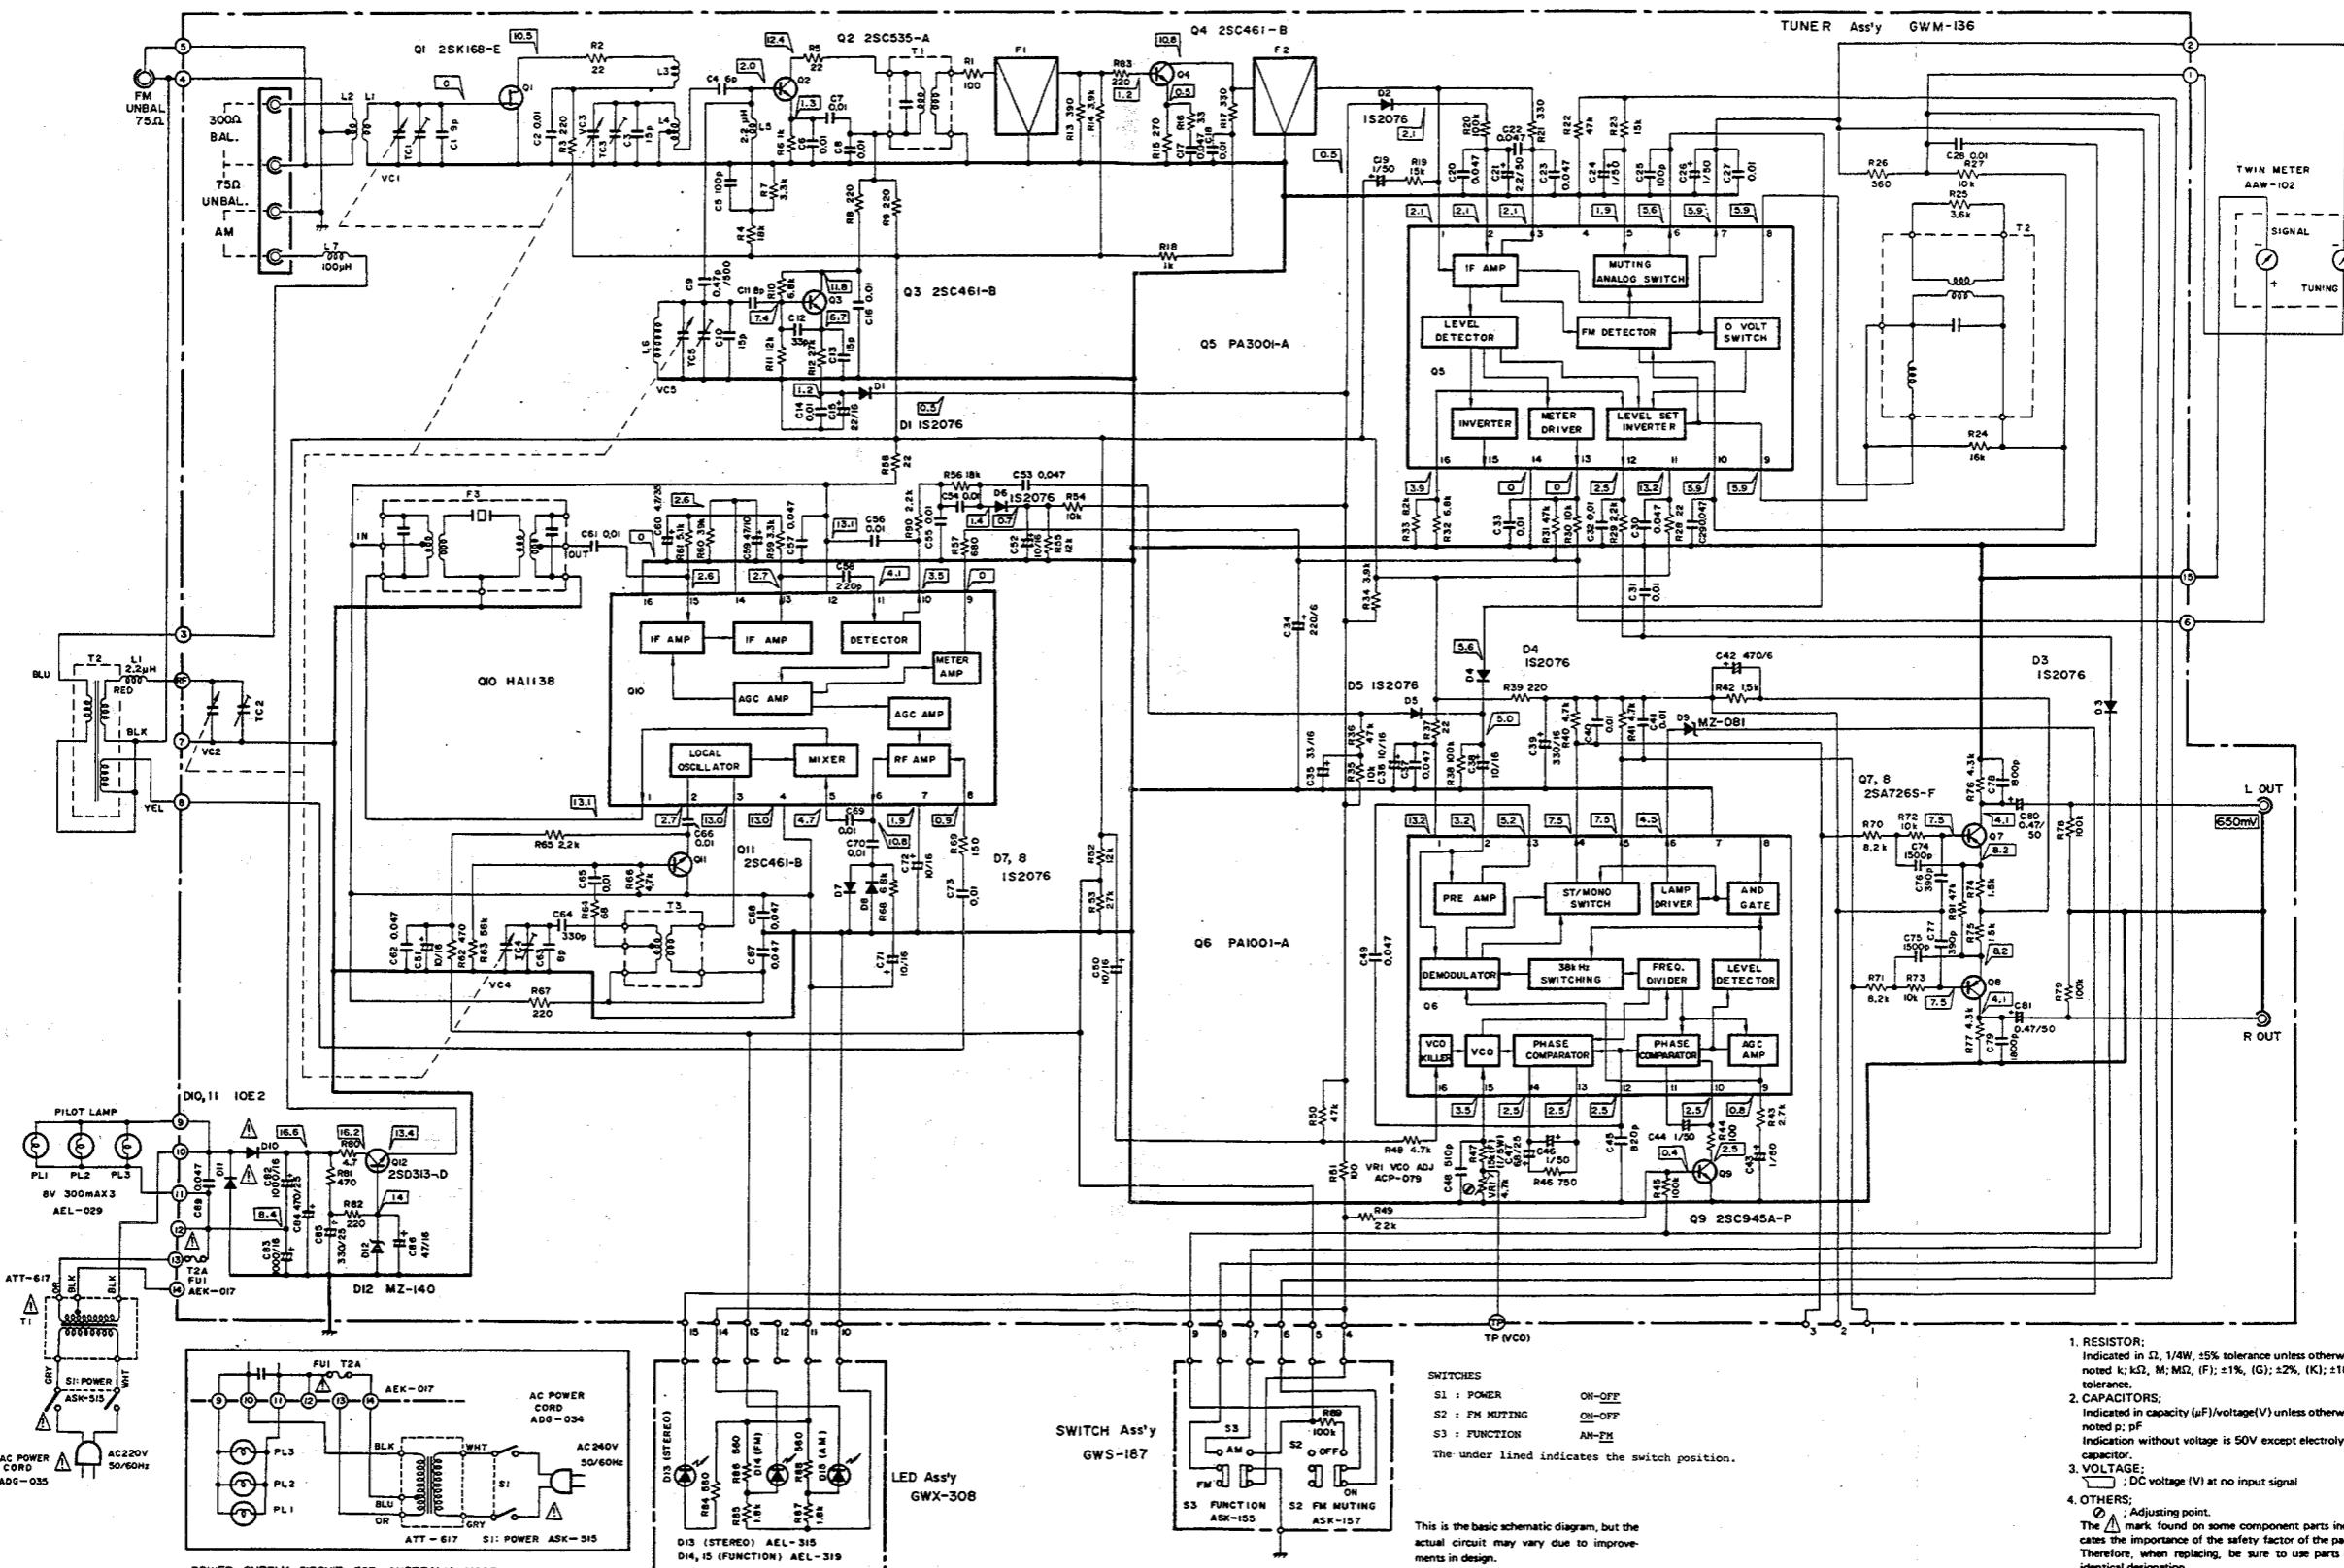

1

2

3

4

5

6

TX-608/HE,HP

TUNER ASSEMBLY (GWM-136)

The parts of tuner assembly (GWM-136) are the same as GWM-135 (for KU type) except for following sections;

Part No.	Symbol & Description
ATF-075	F3 AM ceramic filter (468kHz)
CQMA 103J 50 RD1%PSF 4R7J RD1%PSF 220J	C40, C41 Mylar capacitor R80 Carbon film resistor R28, R37, R58 Carbon film resistor

