

Service Manual

ORDER NO.
ARP2296

STEREO CASSETTE DECK

CT-41 KU/CA CT-900S HEM

- Refer to the service manual ARP2217, CT-777.
- This manual is applicable to the CT-41/KU/CA and CT-900S/HEM types.

1. CONTRAST OF MISCELLANEOUS PARTS

NOTES:

- Parts without part number cannot be supplied.
- The Δ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
- Parts marked by "⊕" are not always kept in stock. Their delivery time may be longer than usual or they may be unavailable.

The CT-41/KU/CA and CT-900S/HEM types are the same as the CT-777/HEM type with the exception of the following sections.

Nos. in "Remark" column correspond to the illustration on page 4.

| Mark | Symbol & Description | Part No. | | | Remarks |
|----------|---|---------------------|----------------------|----------------------|---------|
| | | CT-777/ HEM type | CT-41/ KU/CA type | CT-900S/ HEM type | |
| | Main unit | Non supply | Non supply | Non supply | |
| | Operation unit | Non supply | Non supply | Non supply | |
| | Control unit | Non supply | Non supply | Non supply | |
| | Headphone unit | Non supply | Non supply | Non supply | |
| | Power switch unit | Non supply | Non supply | Non supply | |
| | Dolby S unit | | Non supply | Non supply | Ⓣ |
| Δ | Strain relief | CM-22B | CM-22C | CM-22B | |
| Δ | AC Power cord | PDG1003 | PDG1015 | PDG1003 | |
| Δ | FU701, FU702 Audio fuse (T500mA) | REK-097 | | REK-097 | |
| Δ | FU703, FU704 Fuse (T2A) | REK-103 | | REK-103 | |
| Δ | FU701, FU702 Audio fuse (800mA) | | REK-079 | | |
| Δ | FU703, FU704 Fuse (1.6A) | | REK-074 | | |
| Δ | Power transformer (AC220-230/230-240V) | RTT1171 | | RTT1171 | |
| Δ | Power transformer (AC120V) | | RTT1157 | | |
| | FL filter | RAH1542 | RAH1838 | RAH1542 | |
| | Door lens | RLP1026 | RLP1034 | RLP1034 | |
| | Cord clasper | RNH-184 | | | |
| | Door | RNK1495 | RNK1730 | RNK1730 | |
| | Bonnet | RXX1376 | RXX1128 | RXX1128 | |
| | Front panel assembly | RXX1385 | RXX1384 | RXX1383 | |
| | Door assembly | RXX1417 | RXX1415 | RXX1414 | Ⓣ |
| | PCB spacer | | Non supply | PNY-404 | Ⓣ |
| | Unit holder | | Non supply | Non supply | Ⓣ |
| | Dolby S name plate | | Non supply | Non supply | Ⓣ |
| | Packing case | RHG1279 | RHG1278 | RHG1277 | |
| | Connection cord with mini plug | | PDE-319 | | |
| | Operating instructions (French, Italian, Dutch, Swedish, Spanish, Portuguese) | RRD1109 | | RRD1109 | |
| | Operating instructions (English, German) | RRE1044 | | RRE1044 | |
| | Operating instructions (English) | | RRB1094 | | |

MAIN UNIT

The main units (for CT-41/KU/CA and CT-900S/HEM types) are the same as the main unit (for CT-777/HEM type) with the exception of the following sections.

| Mark | Symbol & Description | Part No. | | | Remarks |
|------|--|---|--|---|---------|
| | | CT-777/ HEM type | CT-41/ KU/CA type | CT-900S/ HEM type | |
| | C391 R303, R304 R382 VR105, VR108 JA41, JA42 Remote control jack | RD1/6PM562J RD1/6PM123J RCP1017 | CKPUYF103Z25 RD1/6PM622J RD1/6PM202J RCP1080 RKN1004 | RD1/6PM622J RD1/6PM202J RCP1080 | |

OPERATION UNIT

The operation units (for CT-41/KU/CA and CT-900S/HEM types) are the same as the operation unit (for CT-777/HEM type) with the exception of the following sections.

| Mark | Symbol & Description | Part No. | | | Remarks |
|------|---|---|--|---|---------|
| | | CT-777/ HEM type | CT-41/ KU/CA type | CT-900S/ HEM type | |
| | D921-D923 S951 R954 R955 V921 | RSB1001 RD1/6PM223J RAW1056 | 1SS254 RSB1003 RD1/6PM274J RD1/6PM102J RAW1069 | RSB1003 RD1/6PM223J RAW1069 | |

CONTROL UNIT


The control units of CT-41/KU/CA and CT-900S/HEM types are the same as that of CT-777/HEM type for the service supply parts.

HEADPHONE UNIT


The headphone units of CT-41/KU/CA and CT-900S/HEM types are the same as that of CT-777/HEM type for the service supply parts.

POWER SWITCH UNIT


The power switch units of CT-41/KU/CA and CT-900S/HEM types are the same as that of CT-777/HEM type for the service supply parts.

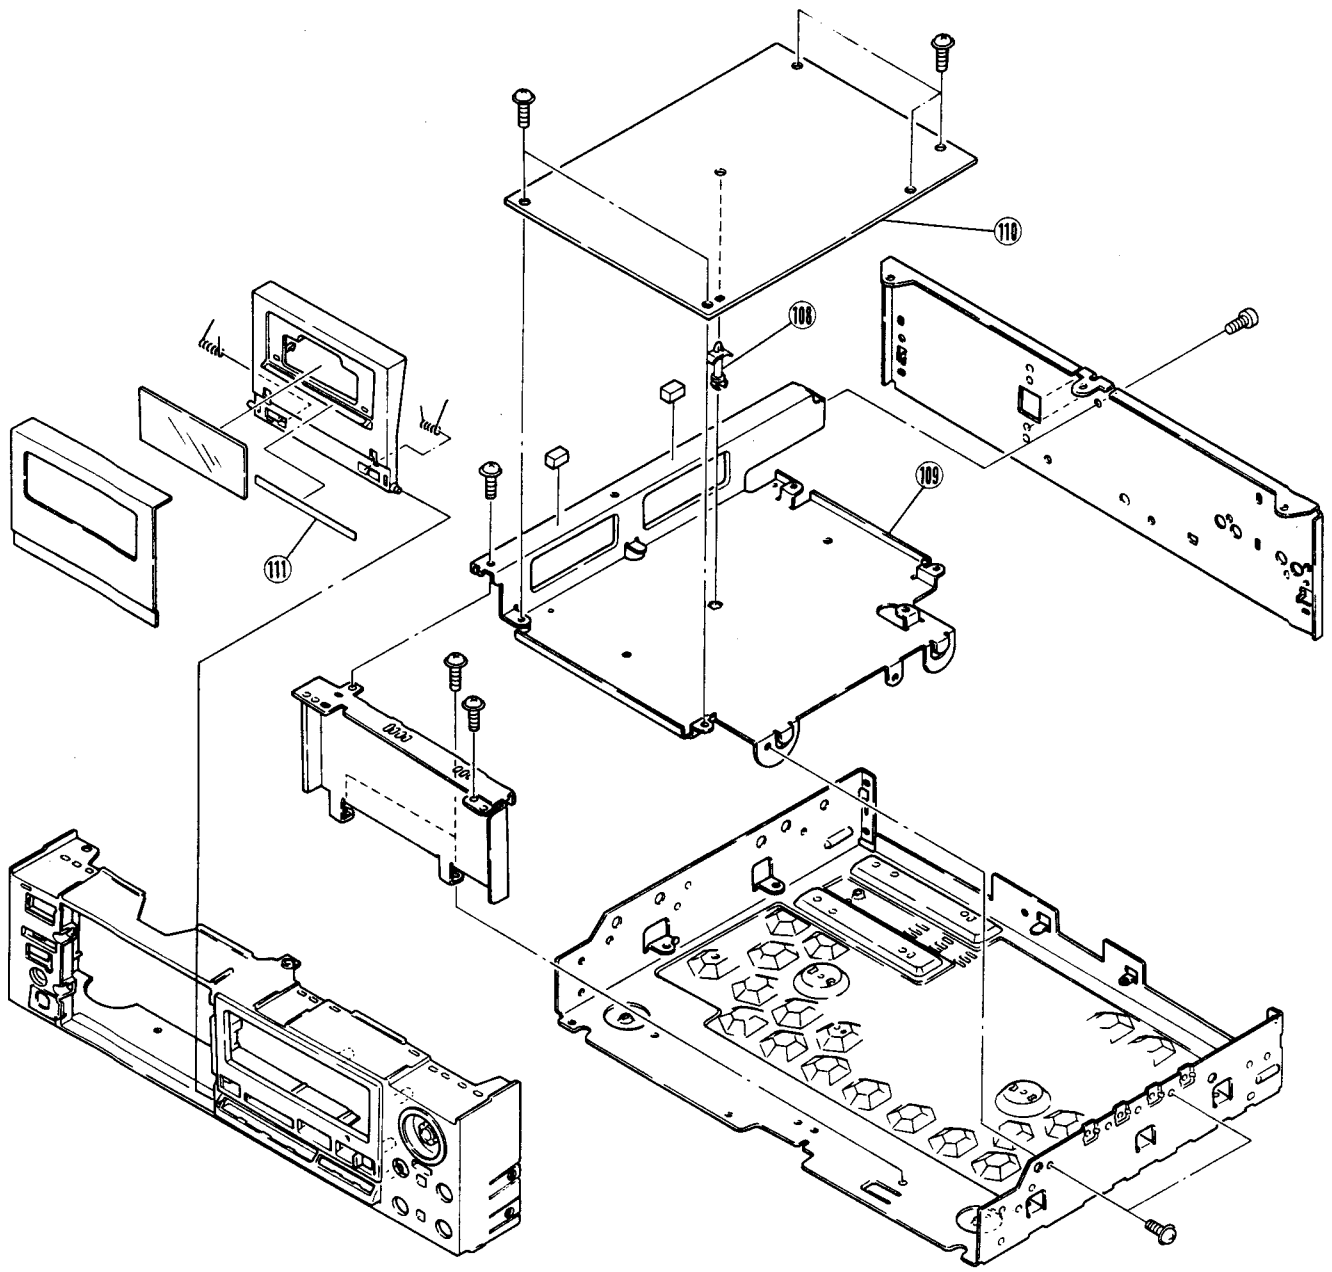

| | | |
|------|-------|-------|
| | KU/CA | HFM |
| 1/2A | 11P1n | 10P1n |

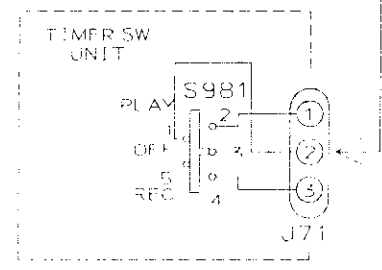

| PARTS | KU/CA | HEM |
|-------|--------|--------|
| R954 | 270K | 22K |
| R955 | 1K | JUMPER |
| Q921 | 1SS254 | X |
| Q922 | 1SS254 | X |
| Q923 | 1SS254 | X |

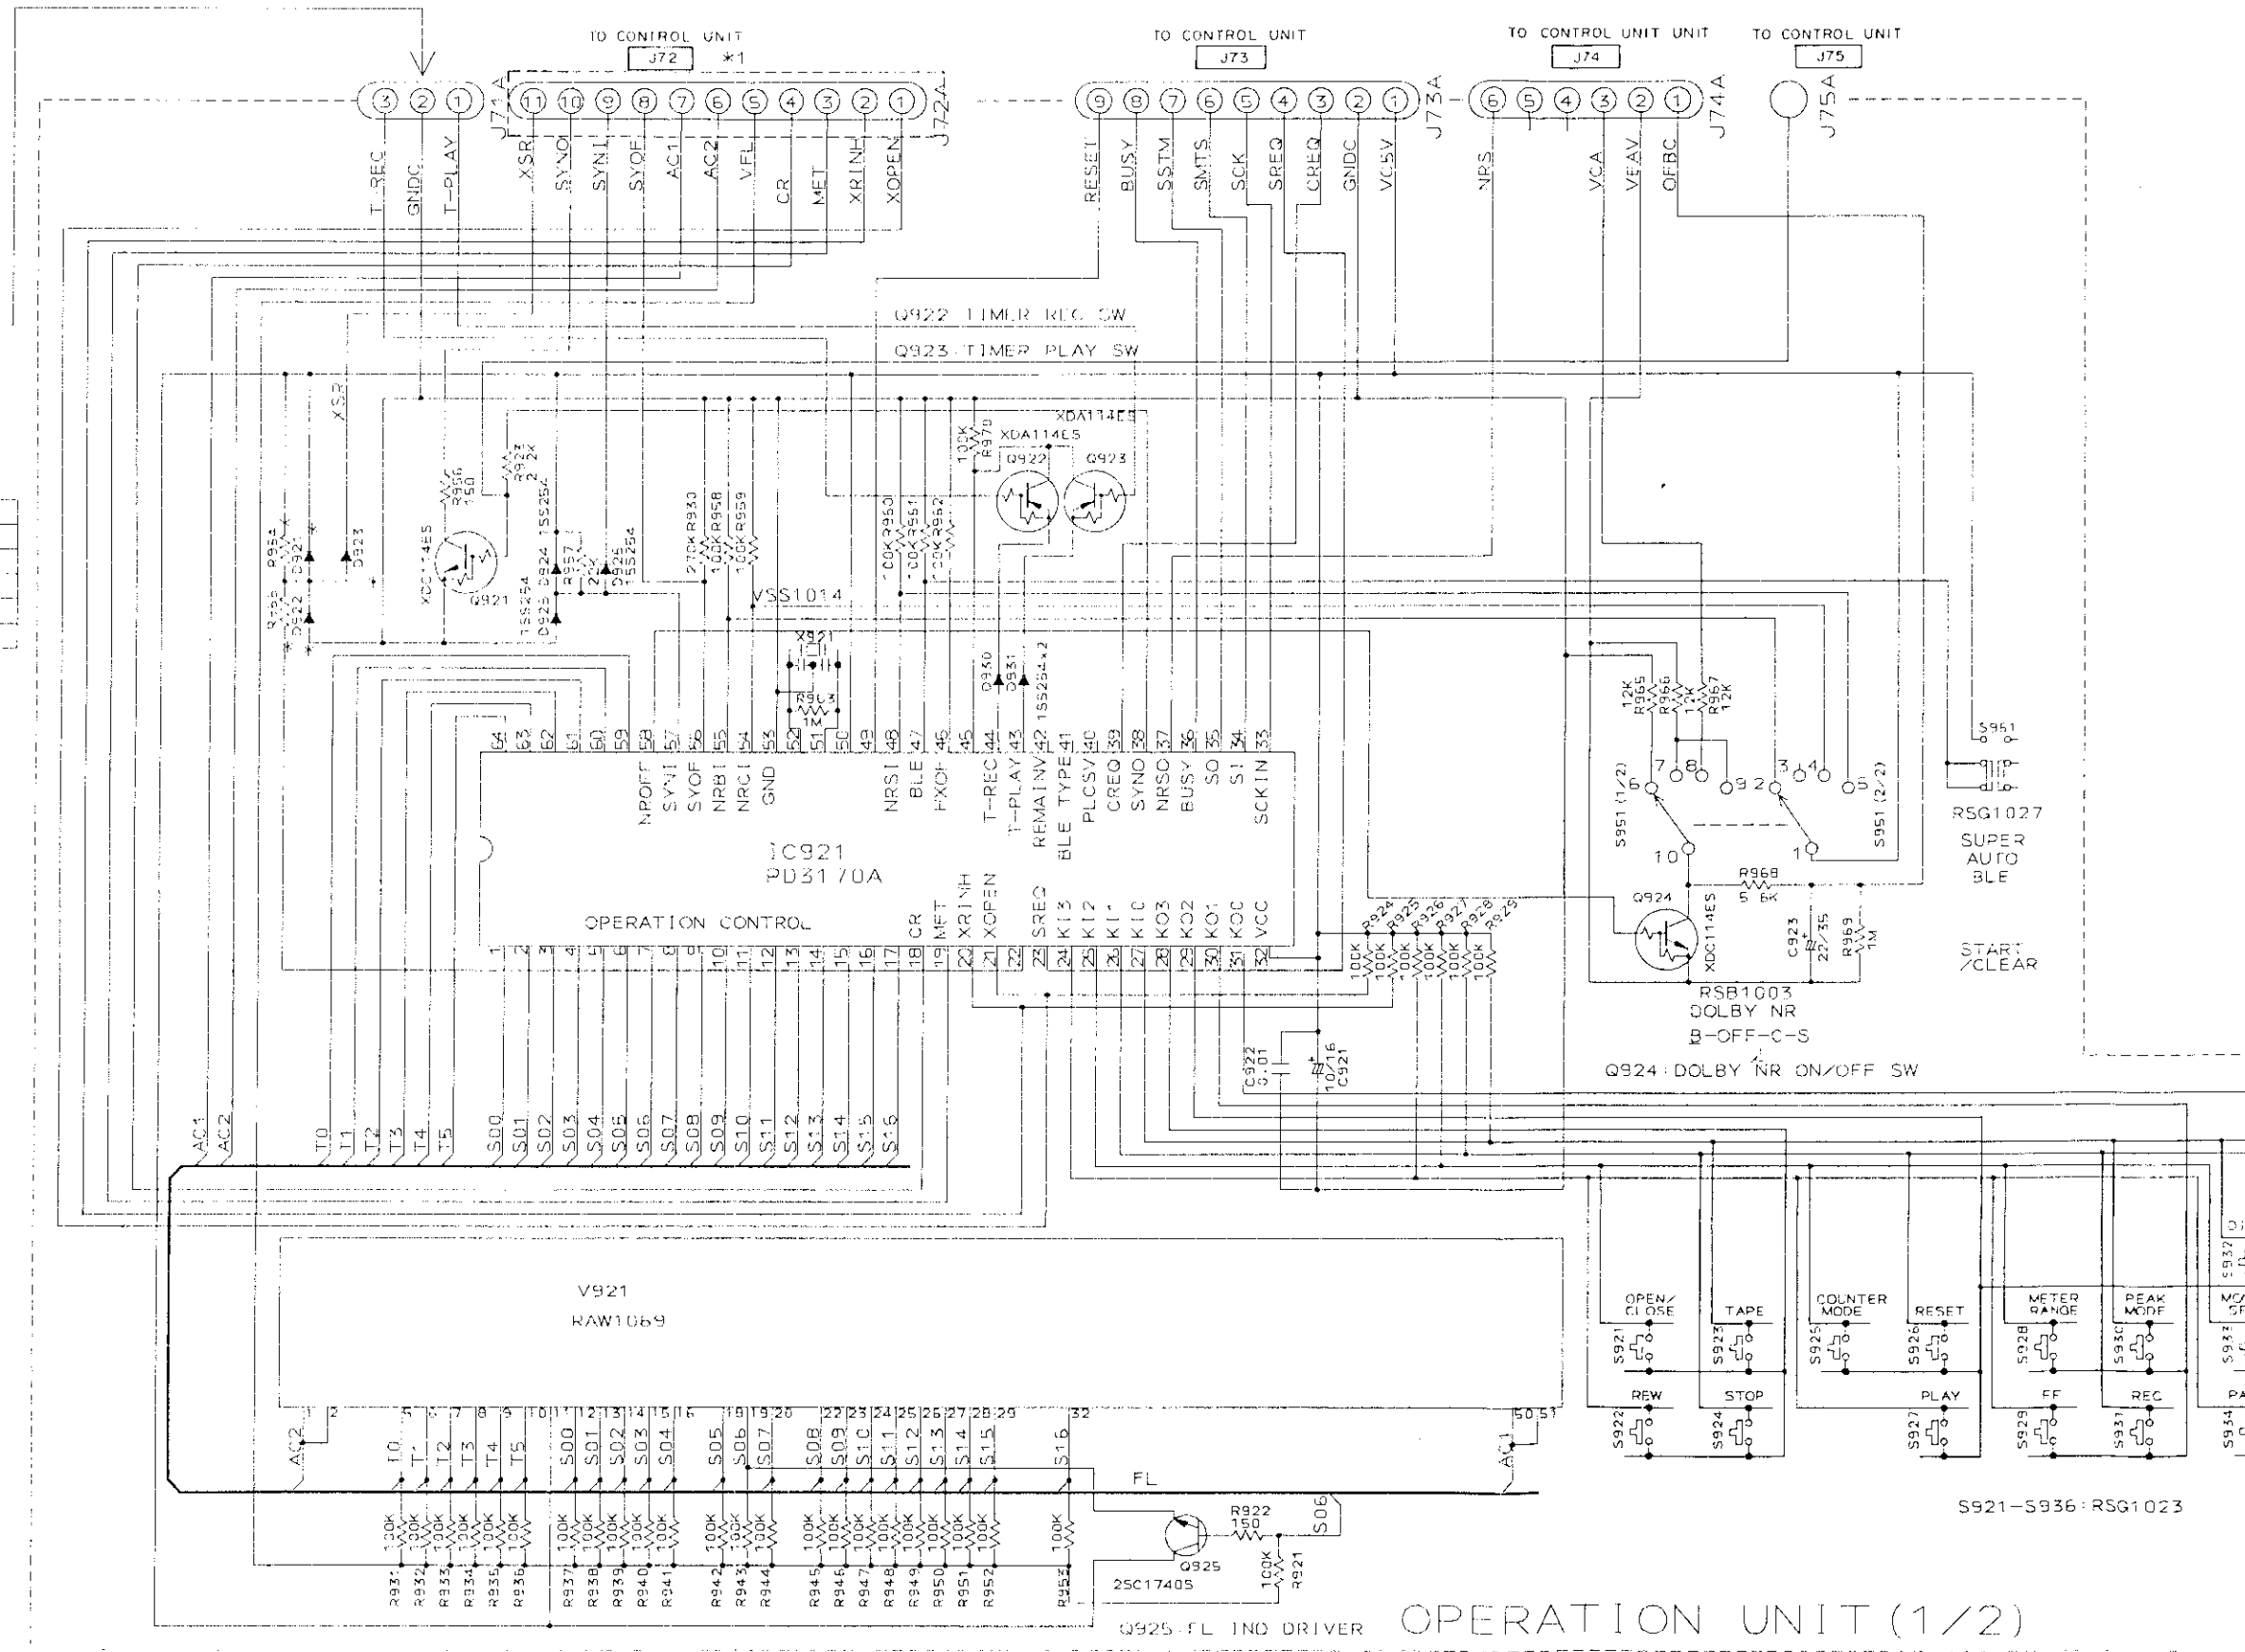

OPERATION CONTROL


OPERATION UNIT (1/2)

A

B

C

D

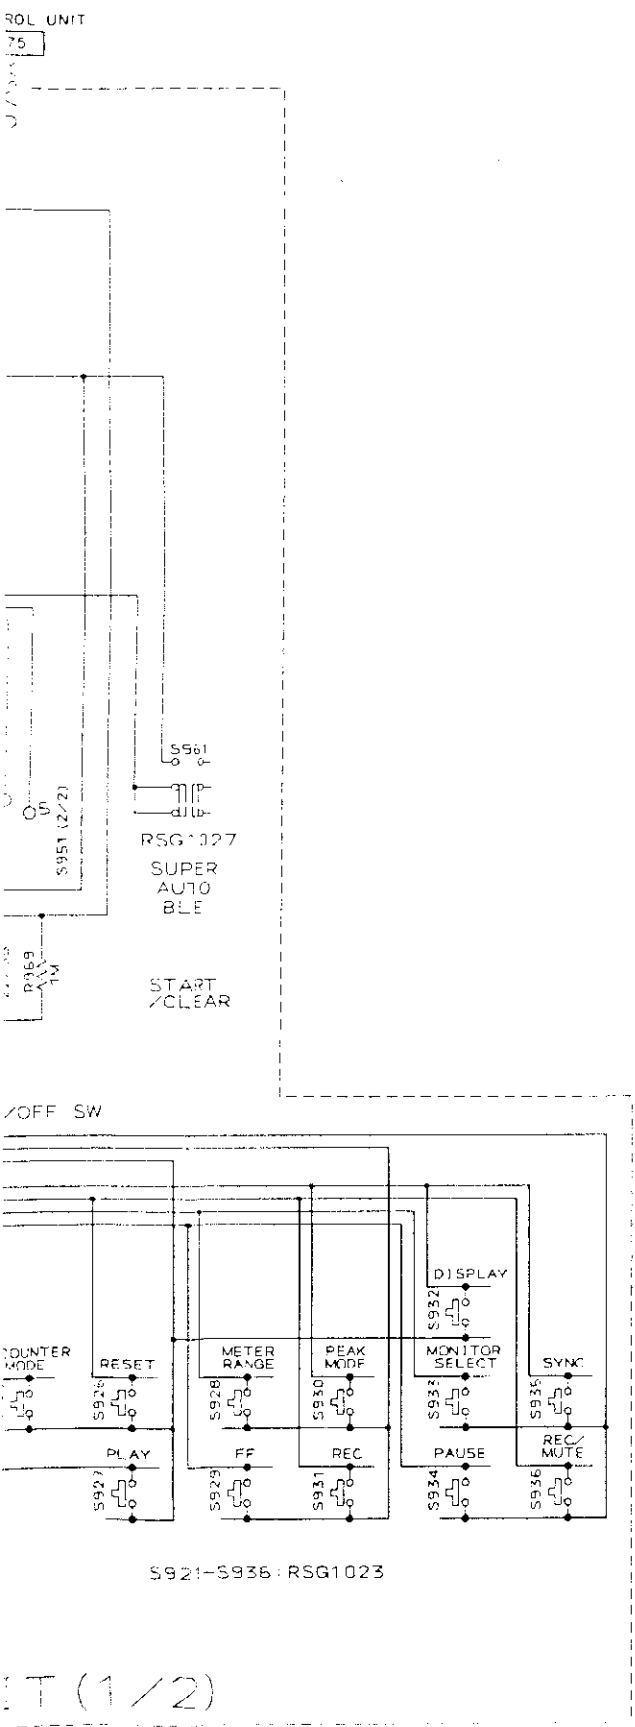

A
—
B
—
C
—
D

MAIN UNIT

HEADPHONE UNIT

RNZ1848

HP AMP

RWZ2121

RWZ1897

RWZ2124

1 2 3 4 5 6 7 8

RWZ2254

RWZ2255

DOLBY HX PRO

RNP1345 B

RNH1300

BIAS OSC

RNH1301

RNZ1983

DIP

RNZ1983

RNZ1983

RNZ1983

RNZ1983

RNZ1983

RNZ1983

RNZ1983

RNZ1983

RNZ1983

RNZ1983

RNZ1983

RNZ1983

RNZ1983

RNZ1983

RNZ1983

RNZ1983

RNZ1983

RNZ1983

RNZ1983

RNZ1983

RNZ1983

RNZ1983

RNZ1983

RNZ1983

RNZ1983

RNZ1983

RNZ1983

RNZ1983

RNZ1983

RNZ1983

RNZ1983

RNZ1983

RNZ1983

RNZ1983

RNZ1983

RNZ1983

RNZ1983

RNZ1983

RNZ1983

RNZ1983

RNZ1983

RNZ1983

RNZ1983

RNZ1983

RNZ1983

RNZ1983

RNZ1983

RNZ1983

RNZ1983

RNZ1983

IC551

VR552

VR551

Q551

Q551

Q552

Q552

VR501

VR502

Q503

Q505

Q511

Q512

Q751

IC731

Q753

IC732

Q752

Q754

Q471

Q473

Q355

Q472

Q474

Q475

Q356

VR552

VR551

VR553

Q476

Q478

Q354

Q477

Q353

VR401

Q433

Q479

Q441

Q427

Q405

Q702

Q439

Q405

Q701

Q437

Q425

Q403

Q423

Q401

Q420

Q421

Q351

IC702

Q419

IC701

Q459

IC402

Q461

IC401

Q455

IC152

Q456

Q420

Q462

Q460

Q422

Q402

Q352

Q438

Q424

Q404

Q601

Q440

Q426

Q406

Q603

Q442

Q408

Q603

Q414

Q408

Q603

Q604

Q602

Q281

IC282

Q103

IC201

Q104



IC281

Q282

Q601

Q283

IC251

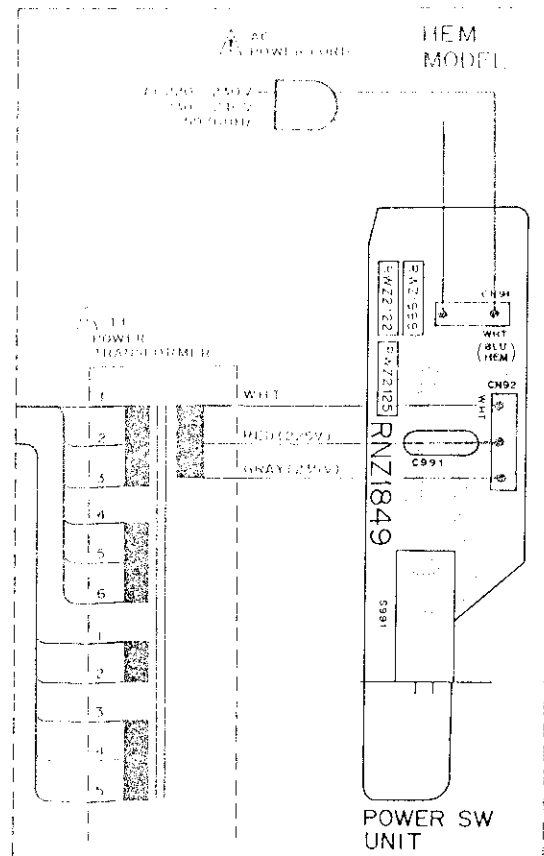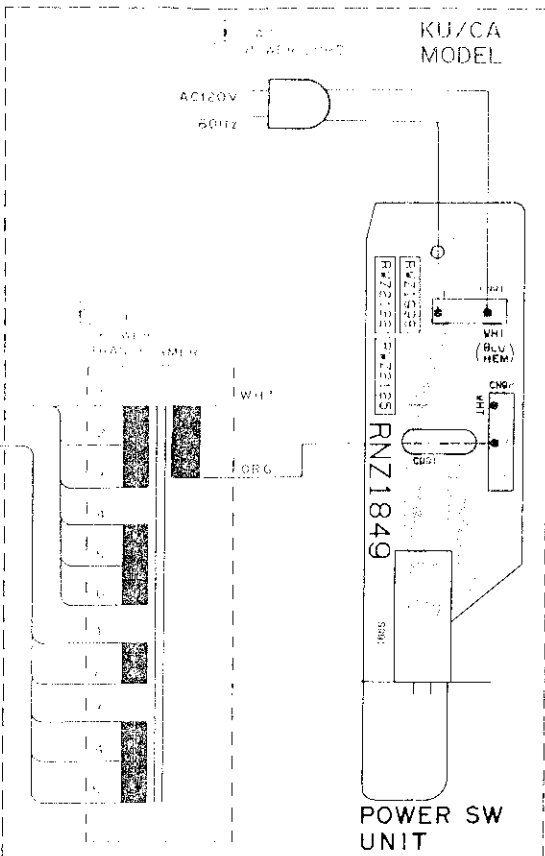

| PCB pattern diagram location | Corresponding part symbol | Part name |
|------------------------------|---------------------------|--------------------------------------|
| [Symbol] | [Symbol] | Transistor |
| [Symbol] | [Symbol] | LED |
| [Symbol] | [Symbol] | Diode |
| [Symbol] | [Symbol] | Zener diode |
| [Symbol] | [Symbol] | ICD |
| [Symbol] | [Symbol] | Variable |
| [Symbol] | [Symbol] | Tact switch |
| [Symbol] | [Symbol] | Inductor |
| [Symbol] | [Symbol] | Cap |
| [Symbol] | [Symbol] | Transformer |
| [Symbol] | [Symbol] | Filter |
| [Symbol] | [Symbol] | Ceramic capacitor |
| [Symbol] | [Symbol] | Micro capacitor |
| [Symbol] | [Symbol] | Siem capacitor |
| [Symbol] | [Symbol] | Electronic capacitor (non polarized) |
| [Symbol] | [Symbol] | Electronic capacitor (polarized) |
| [Symbol] | [Symbol] | Electronic capacitor (polarized) |
| [Symbol] | [Symbol] | Electronic capacitor (polarized) |
| [Symbol] | [Symbol] | Electronic capacitor (polarized) |
| [Symbol] | [Symbol] | Electronic capacitor (polarized) |
| [Symbol] | [Symbol] | Variable resistor |
| [Symbol] | [Symbol] | Resistor array |
| [Symbol] | [Symbol] | Resistor |
| [Symbol] | [Symbol] | Resistor |

- The PCB pattern diagram is shown in a grid from the parts list.
- The parts which have been indicated on the board in the parts list are those shown with the corresponding wiring symbols in the above table.
- The capacitor terminals marked with "1" and "2" show positive terminal.
- For double marked with "1" shows positive side.
- The pin side terminal marked with "1" shows ground.

A

B

C

D

• View from component side


• View from

A


B

C

D

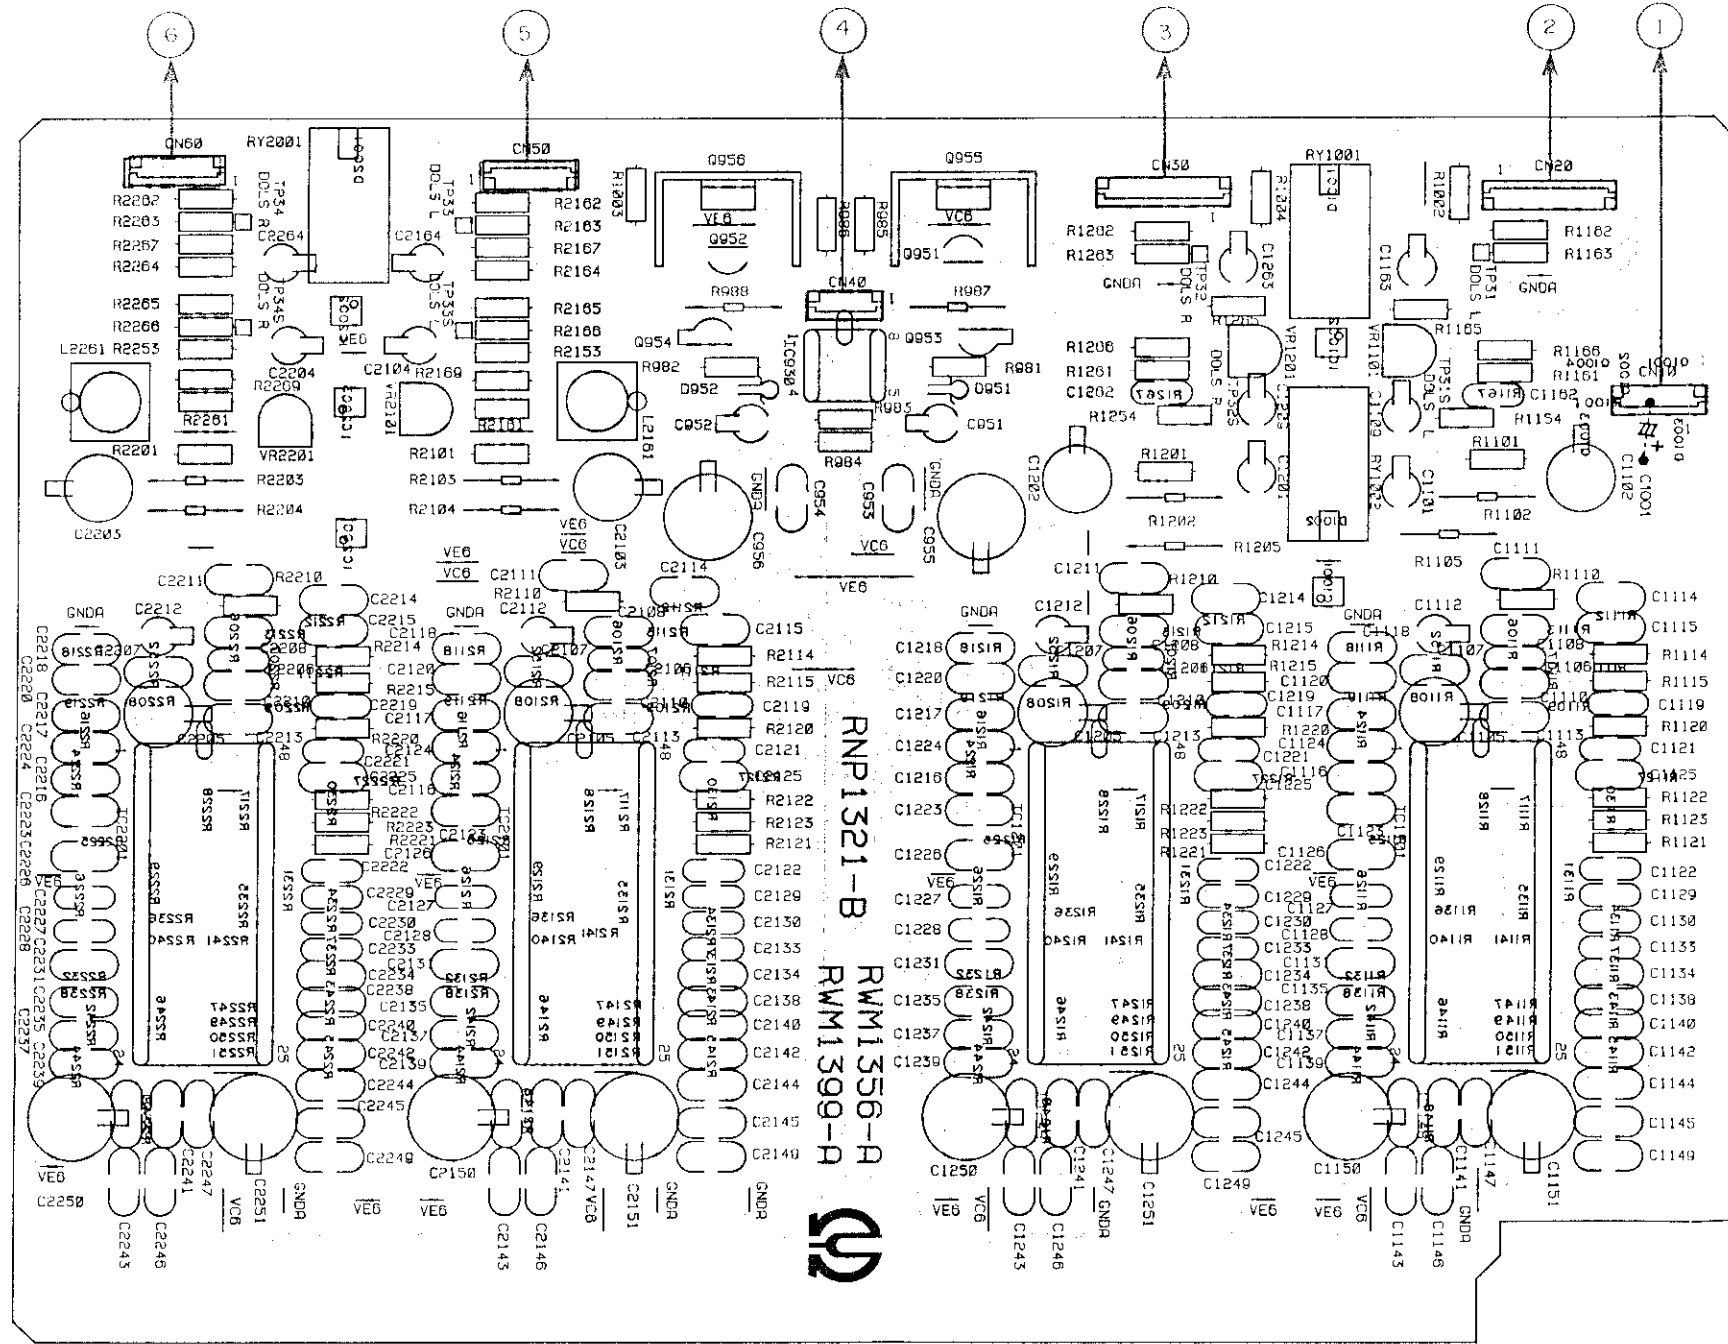

• View from soldering side

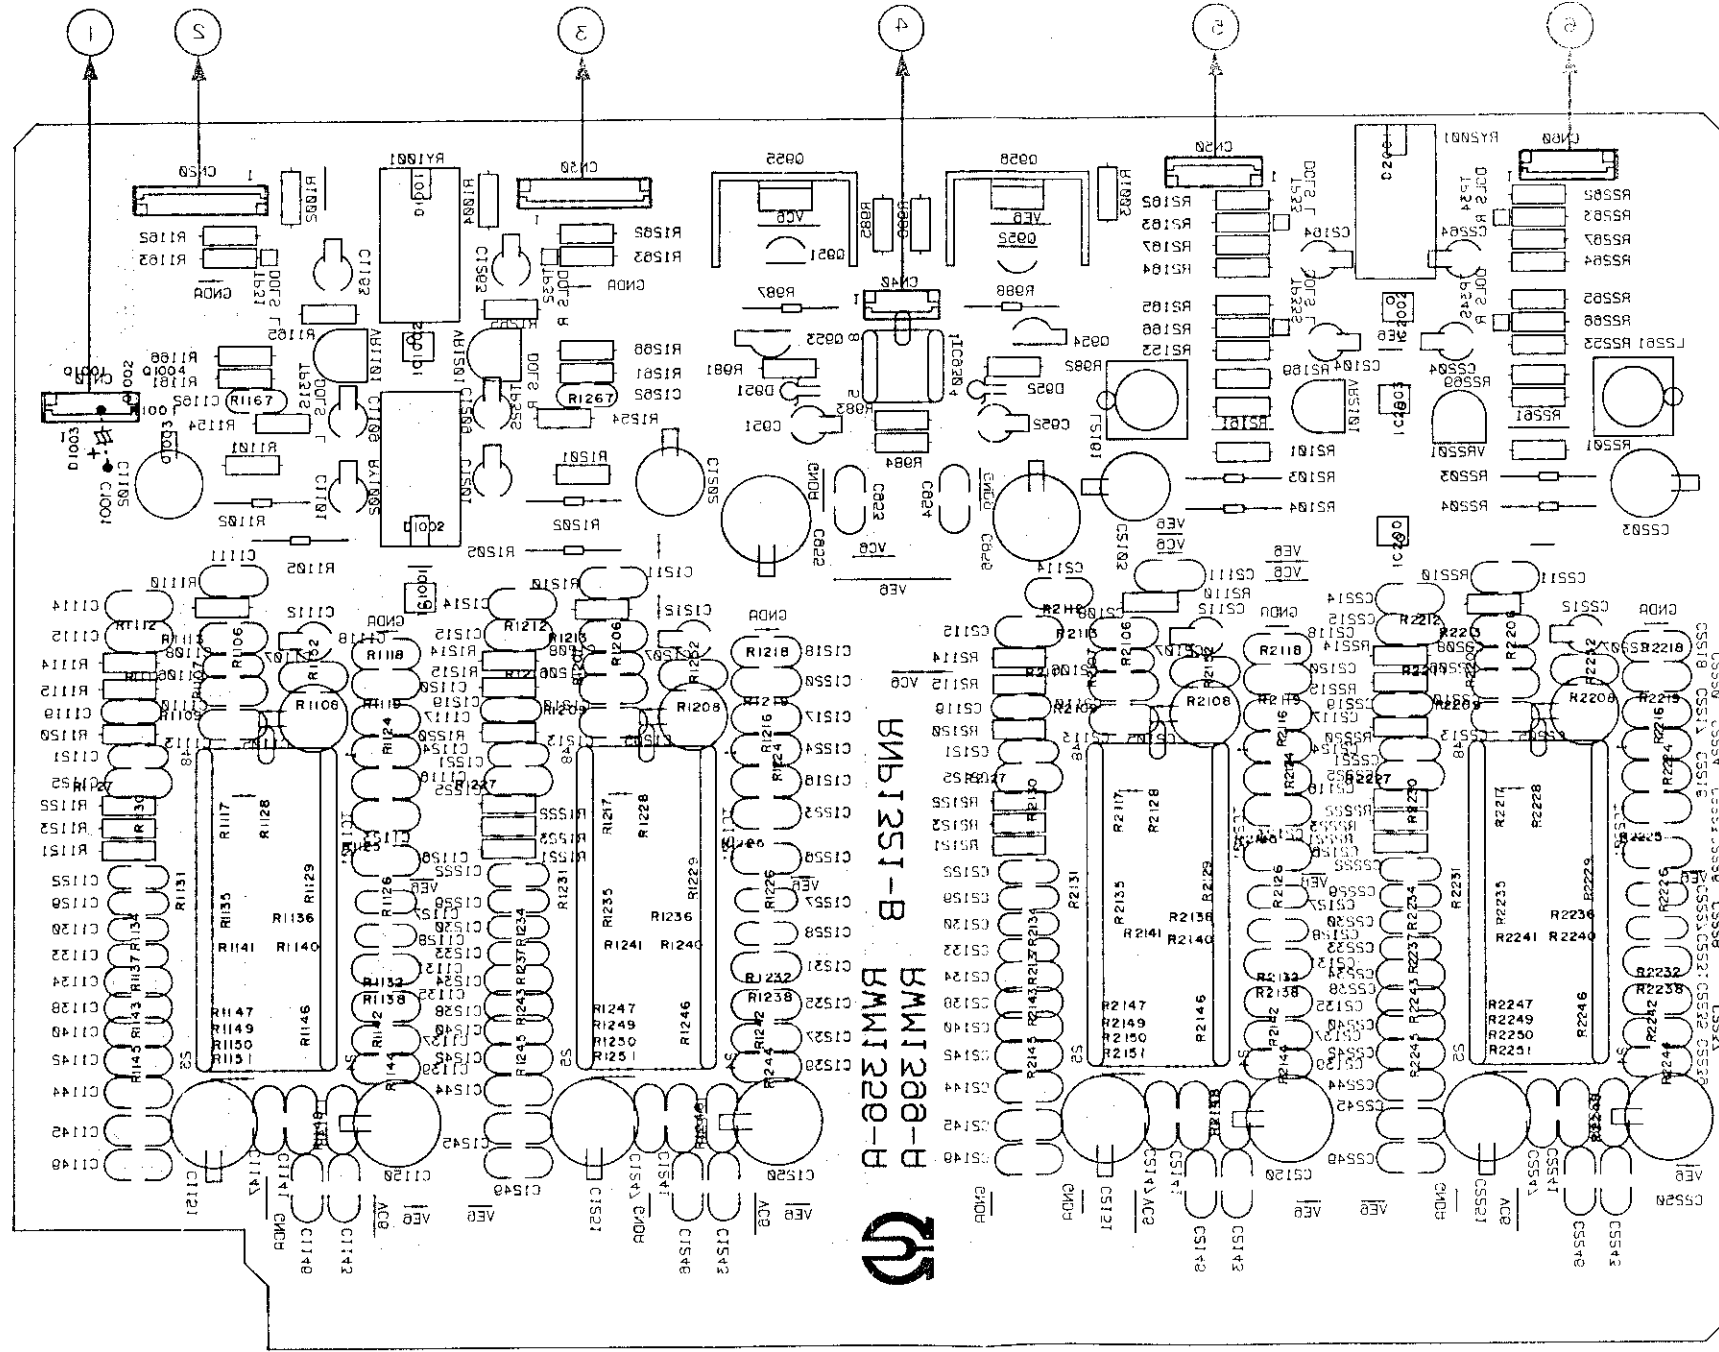


A

B

C

D

2. SCHEMATIC DIAGRAM

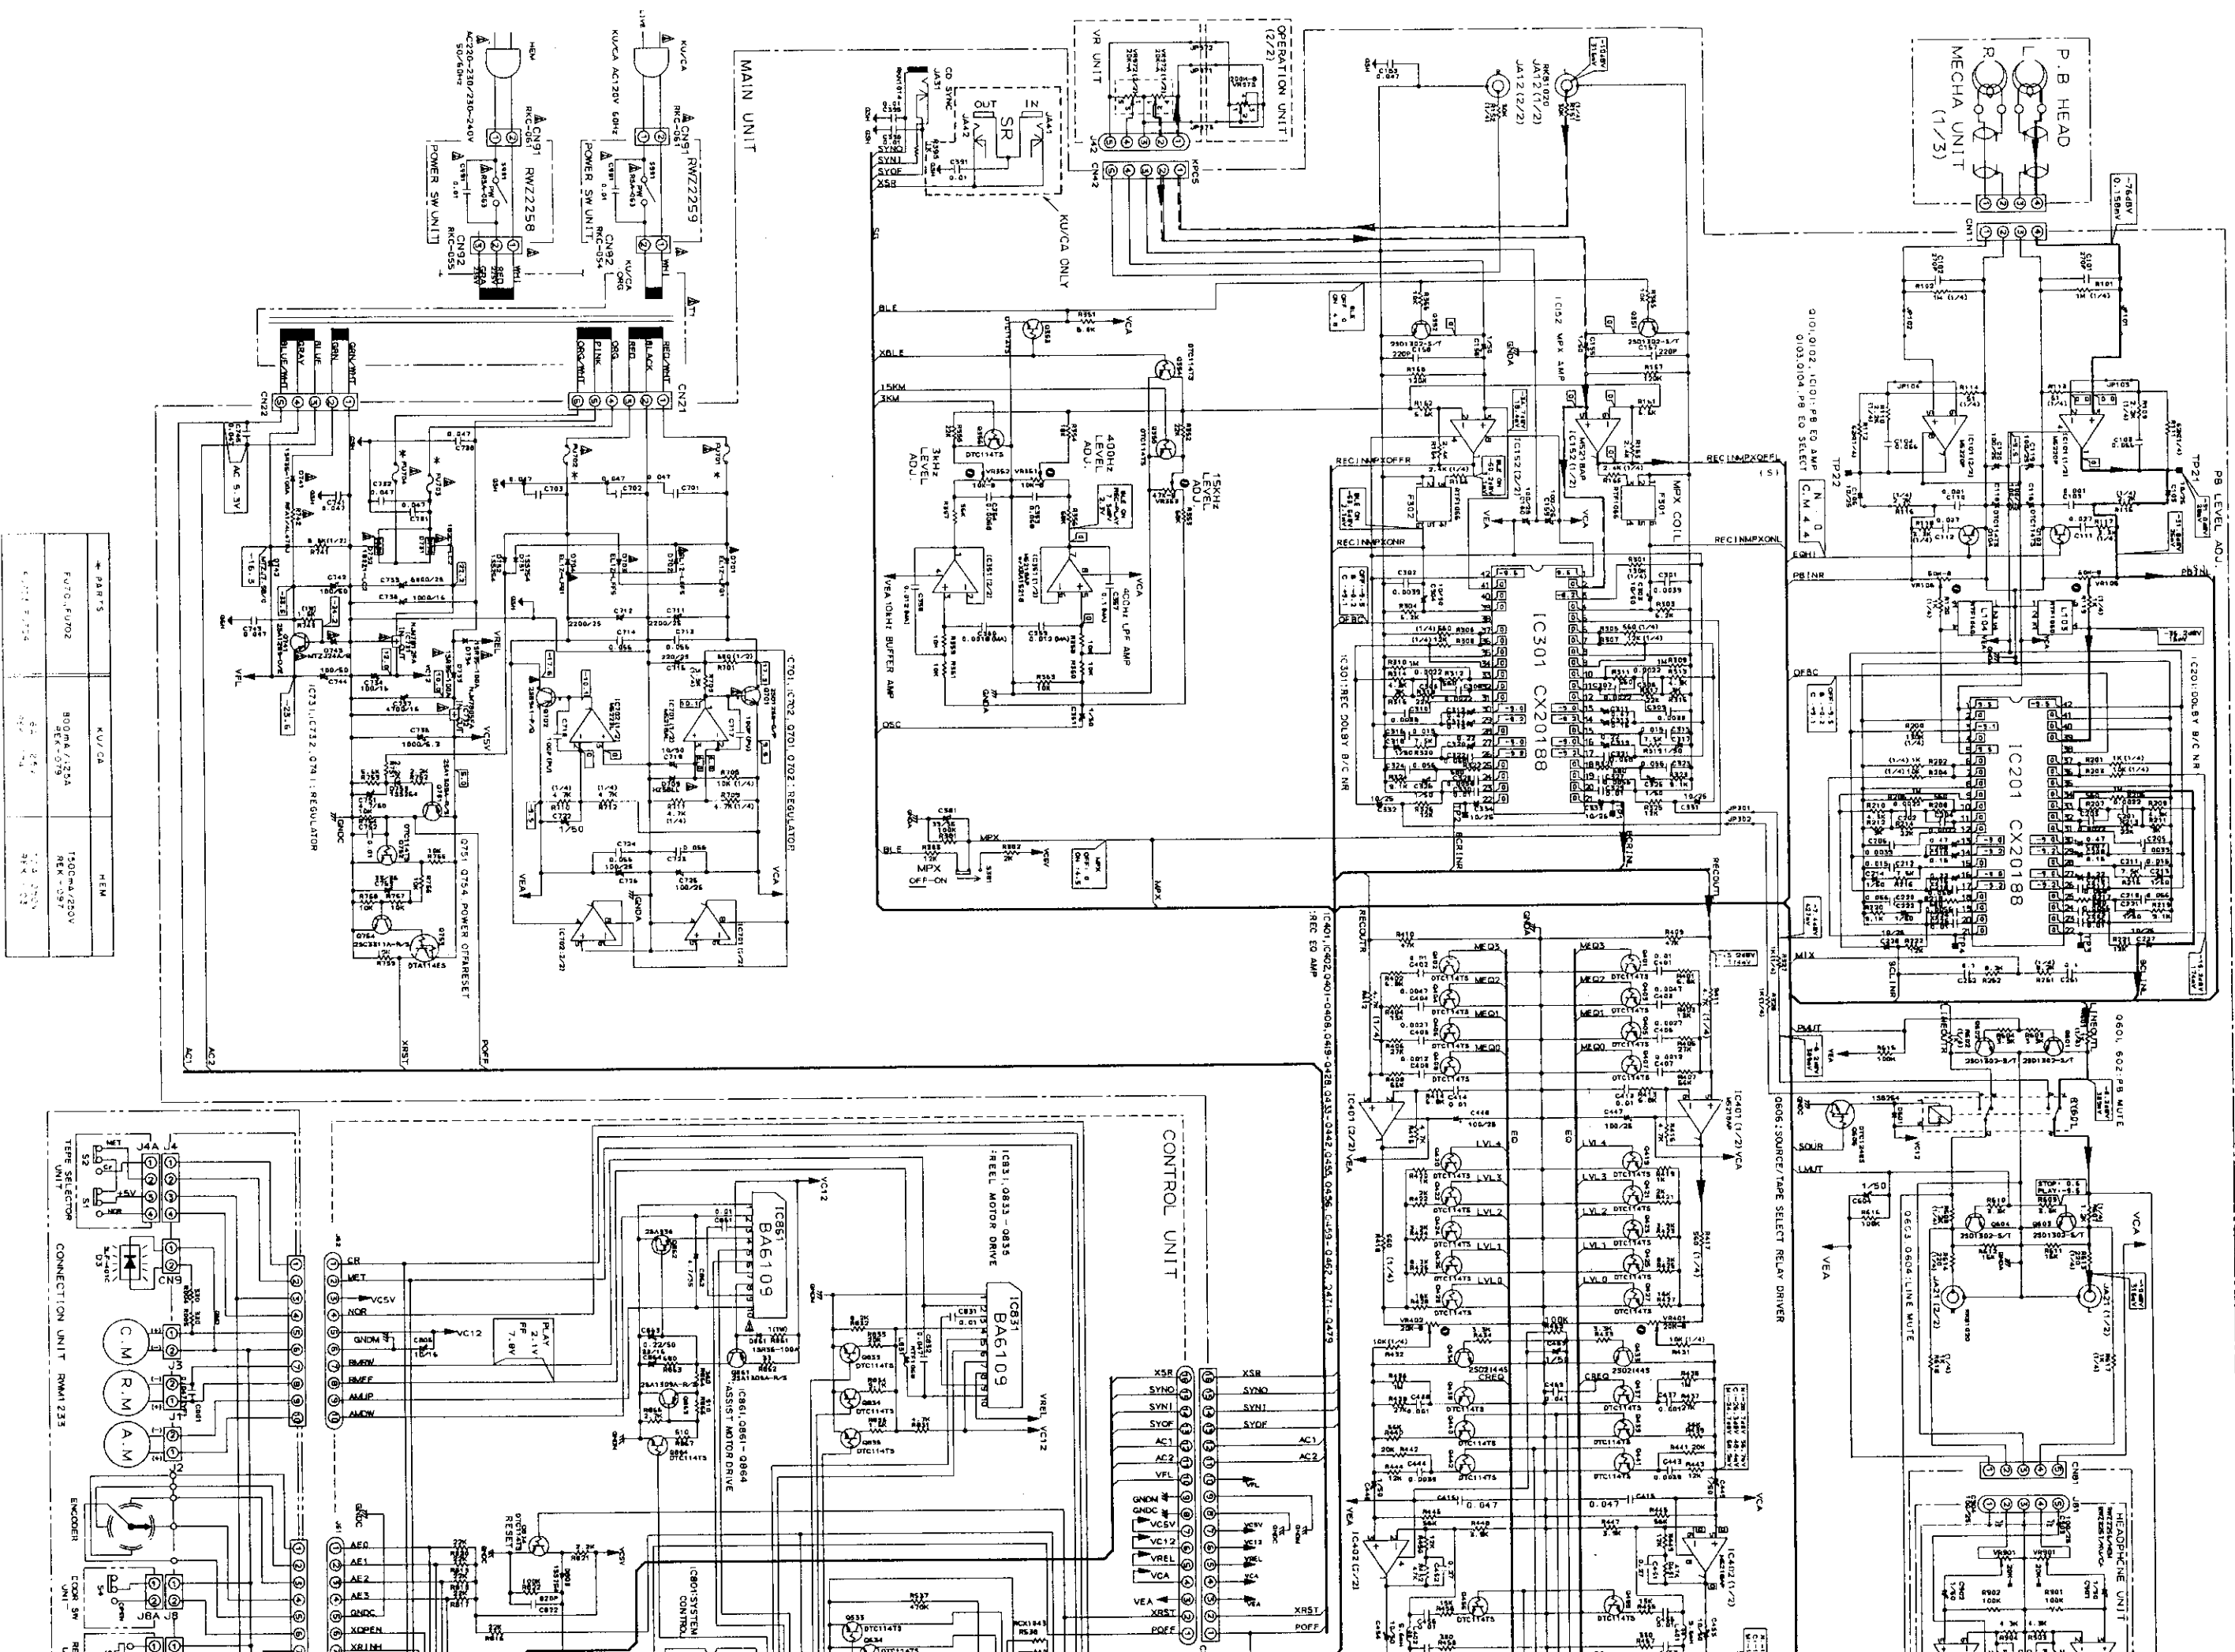

1

2

3

4

5

F

E

D

C

B




1

2


3






4

5

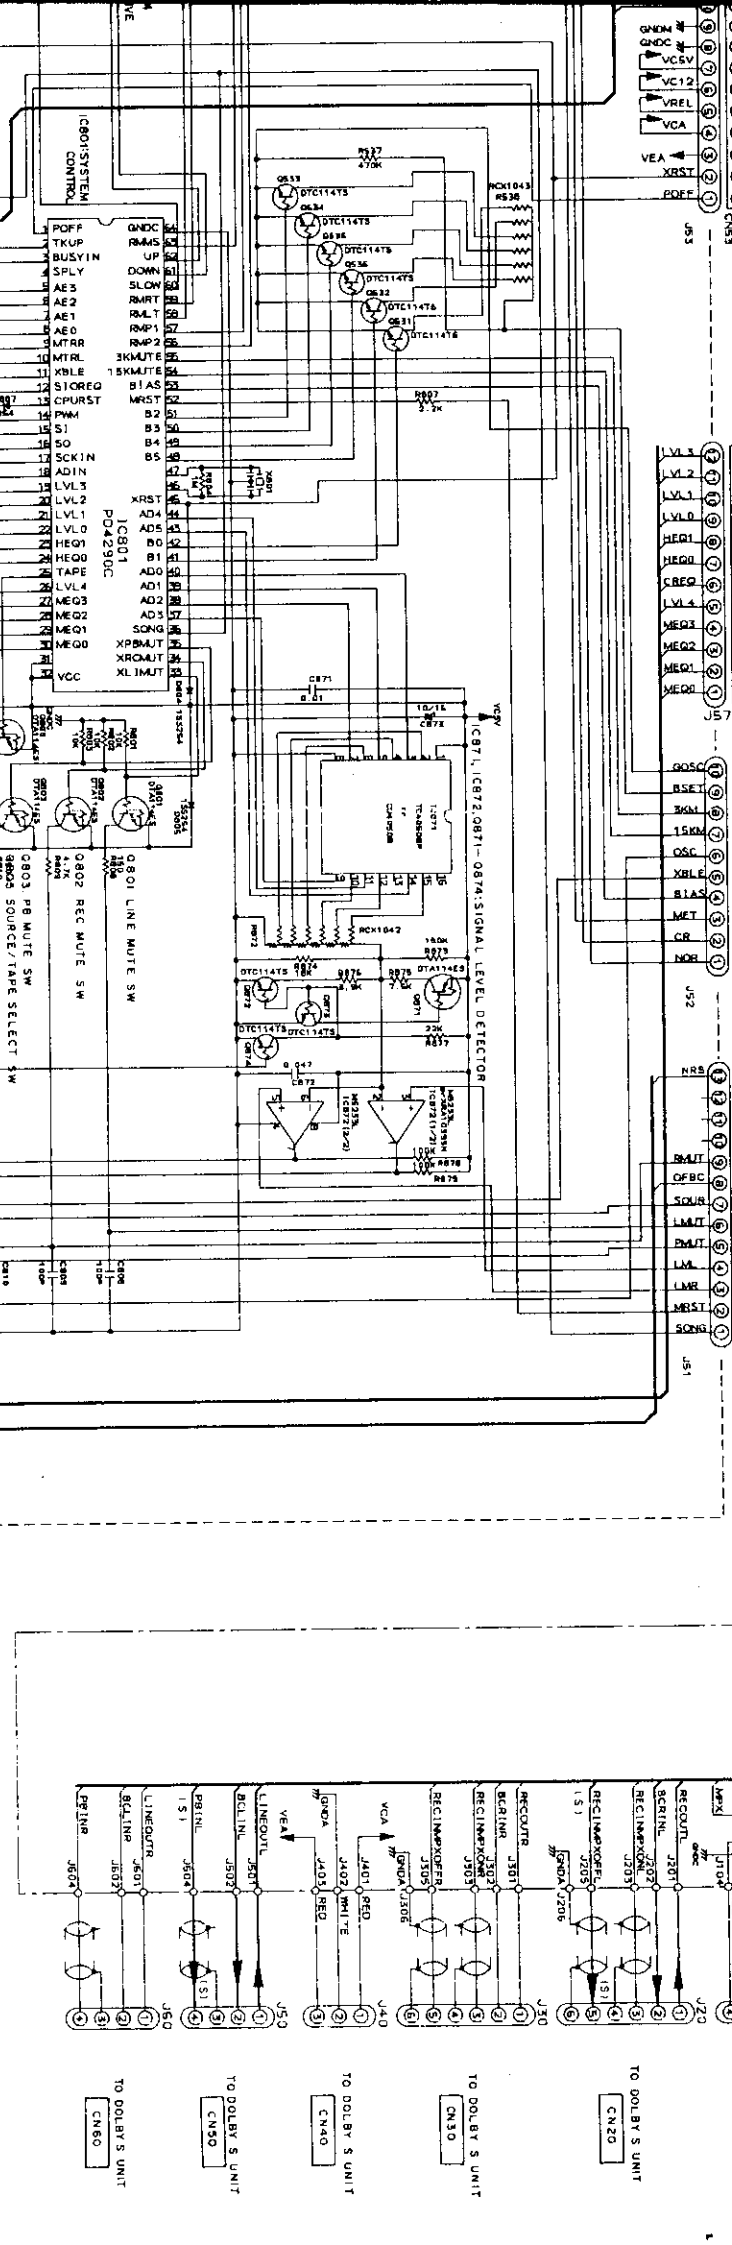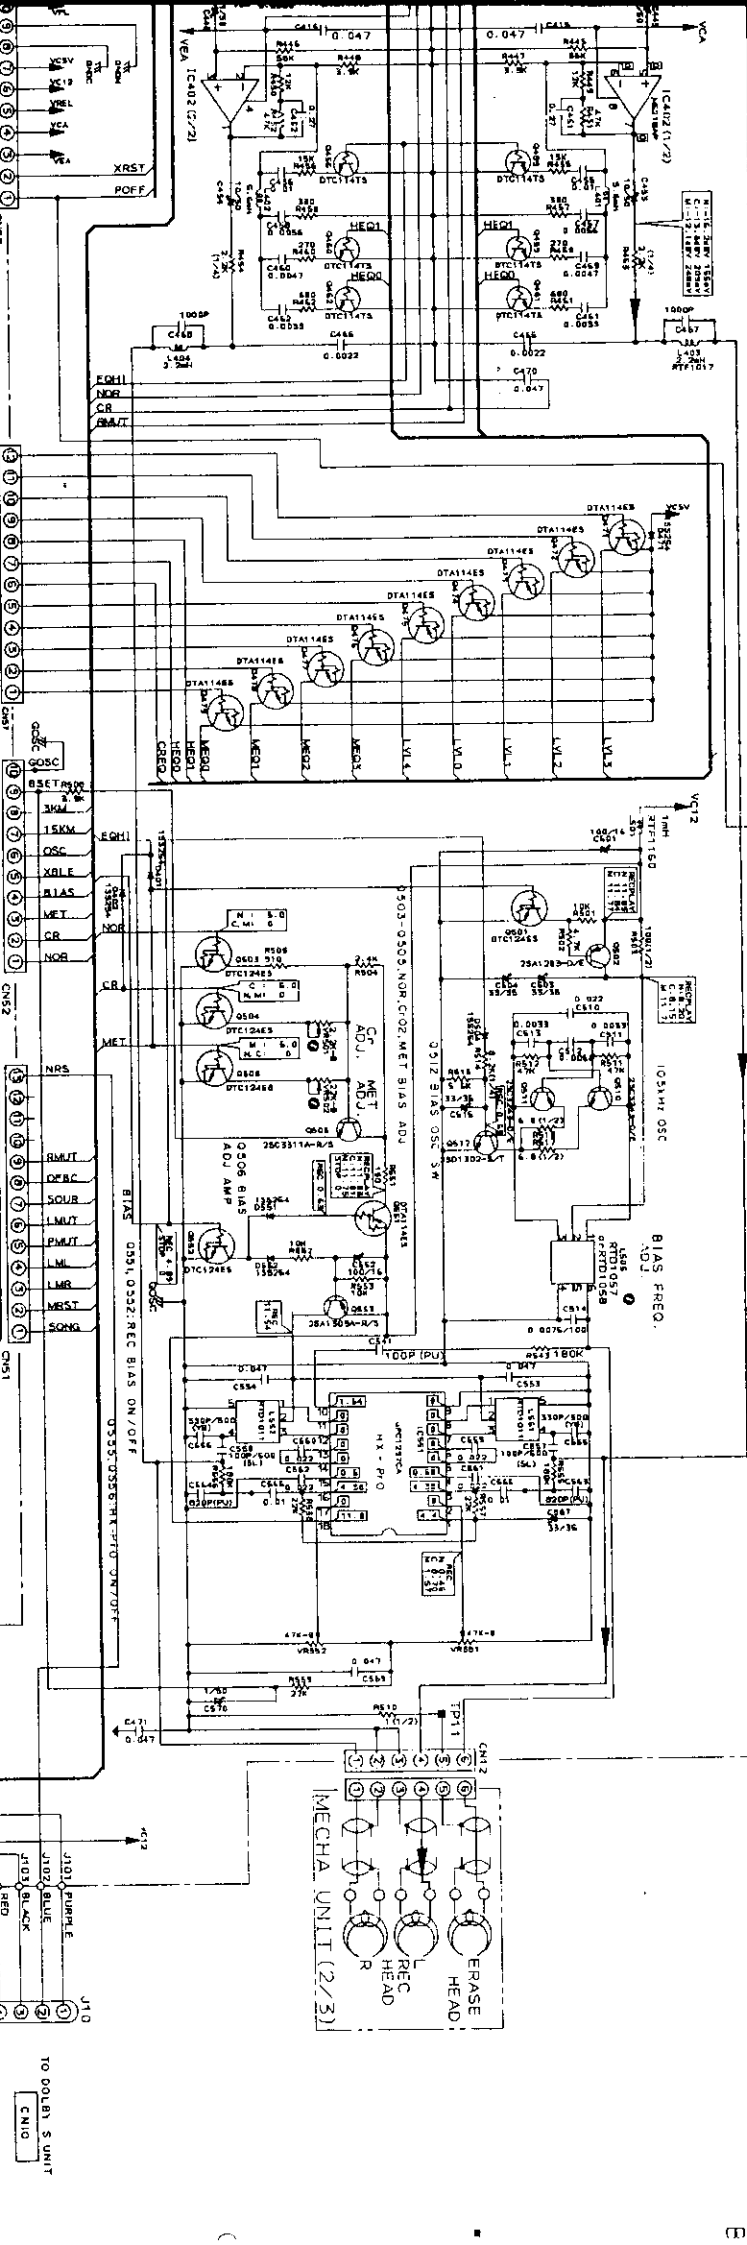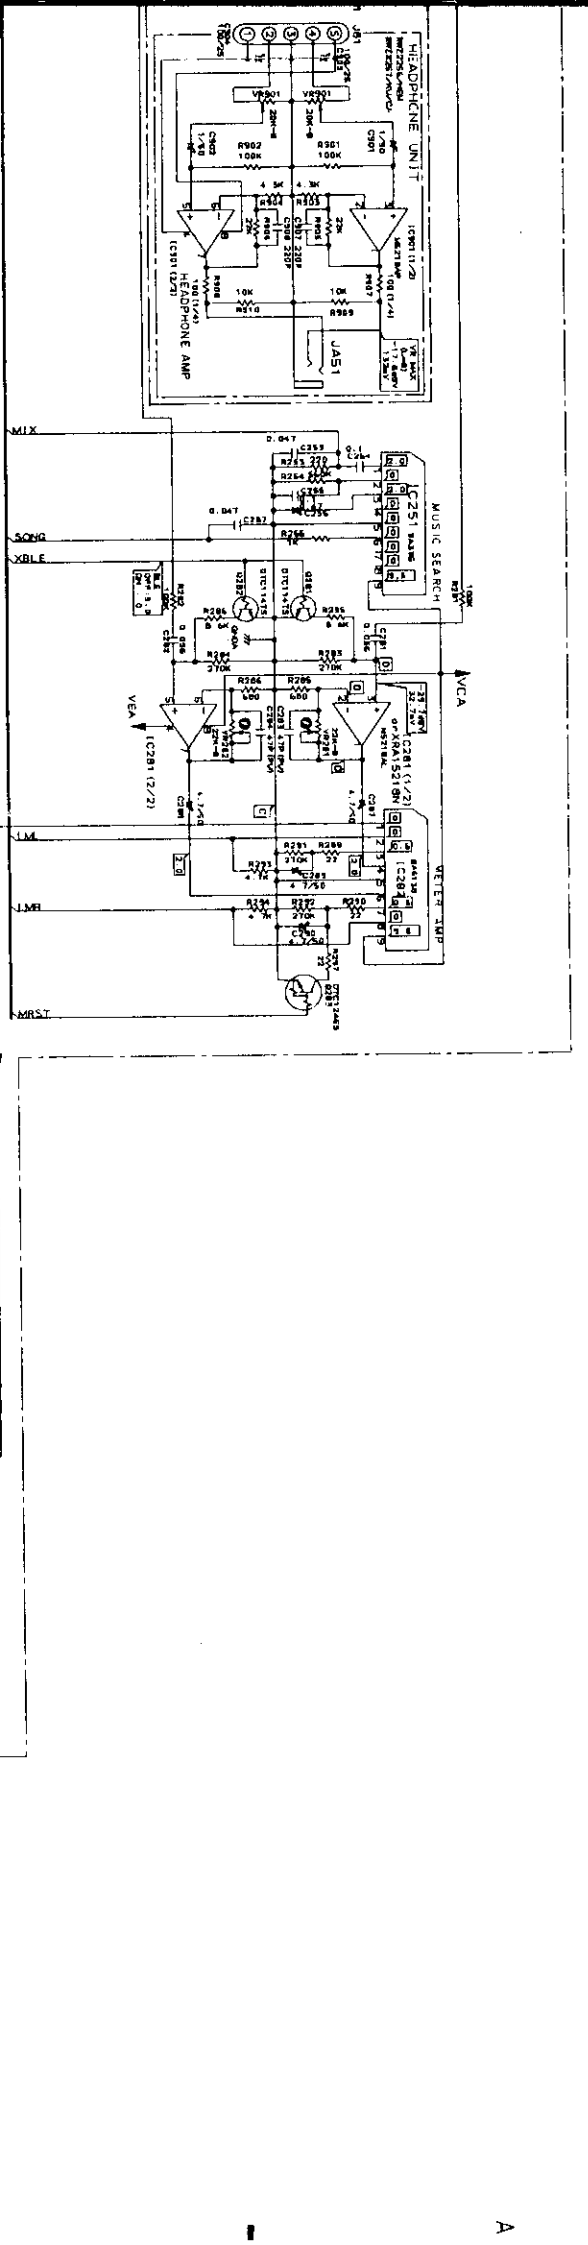

--- PLAYBACK SIGNAL (DOLBY B/C/S or OFF)
 - - - RECORDING SIGNAL (DOLBY B/C/S or OFF)
 - - - PLAYBACK SIGNAL (DOLBY S)
 - - - RECORDING SIGNAL (DOLBY S)

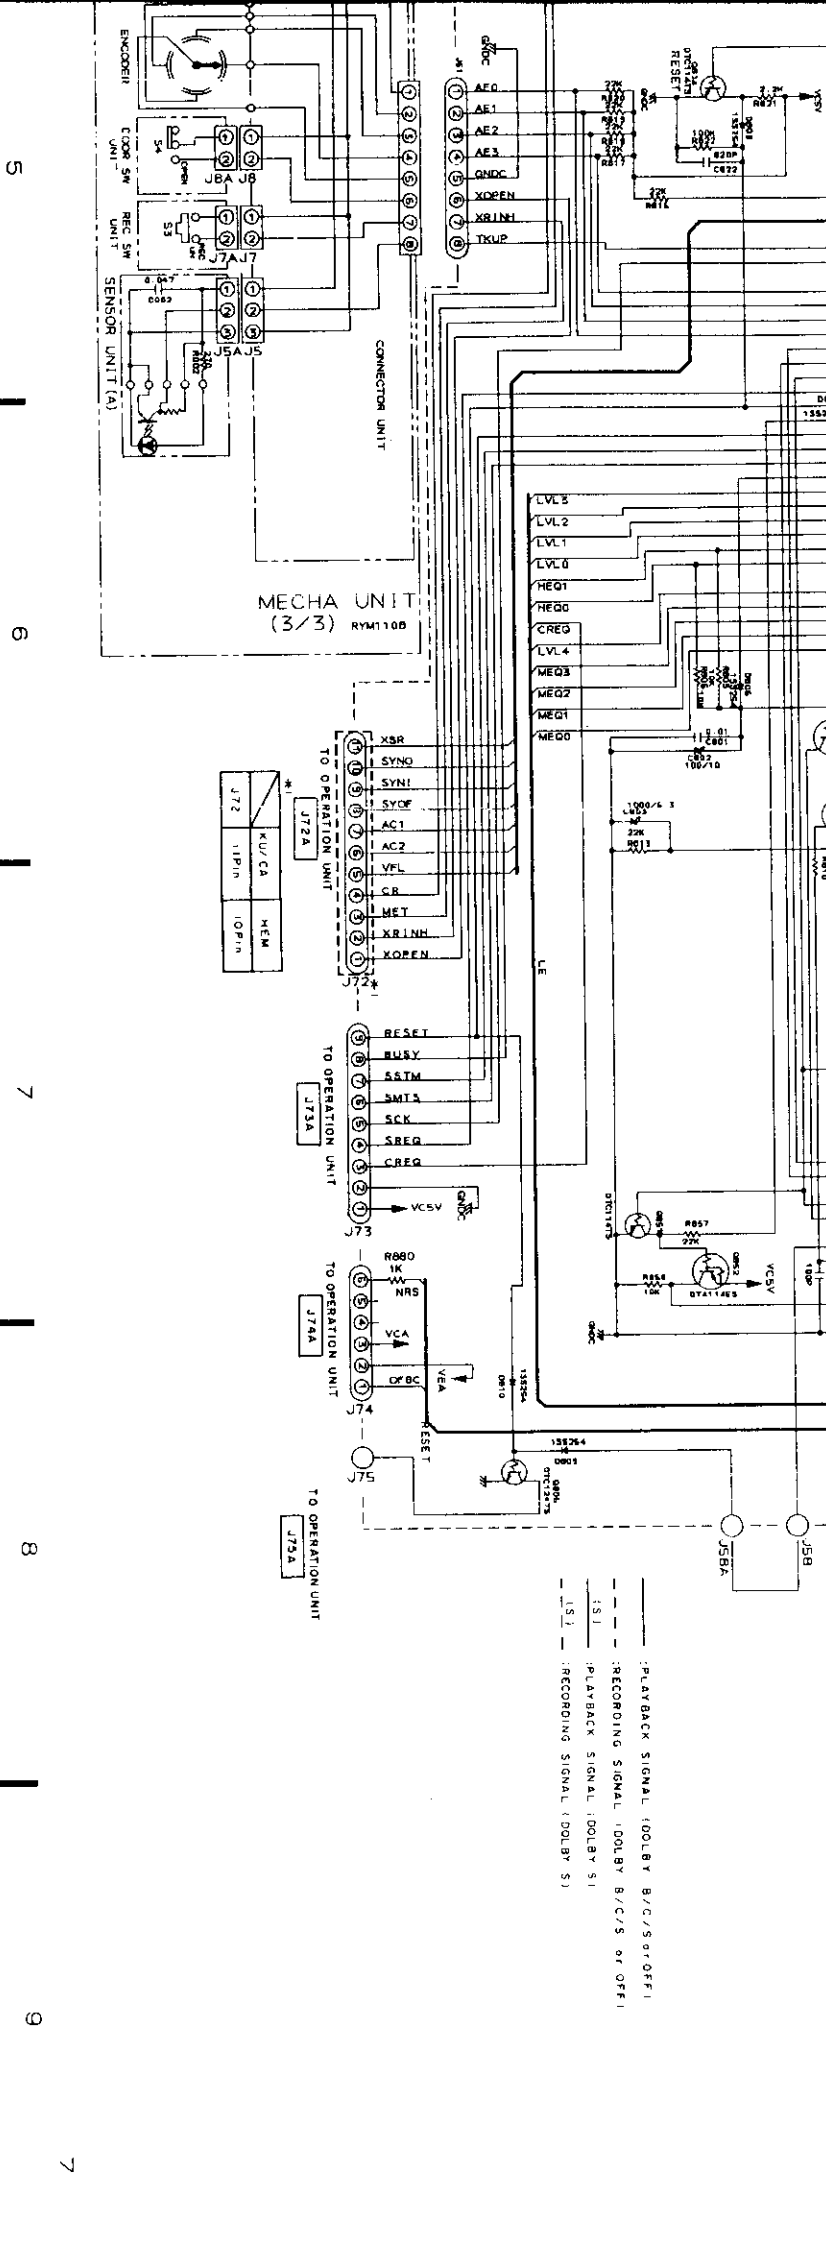

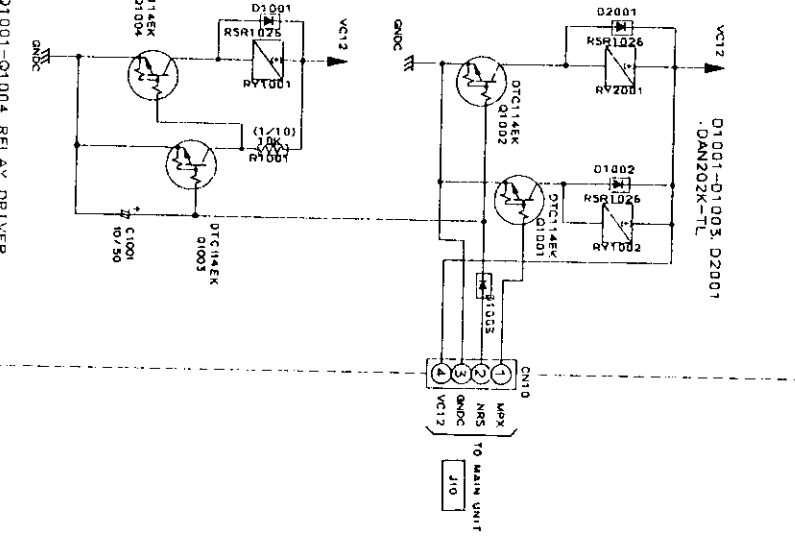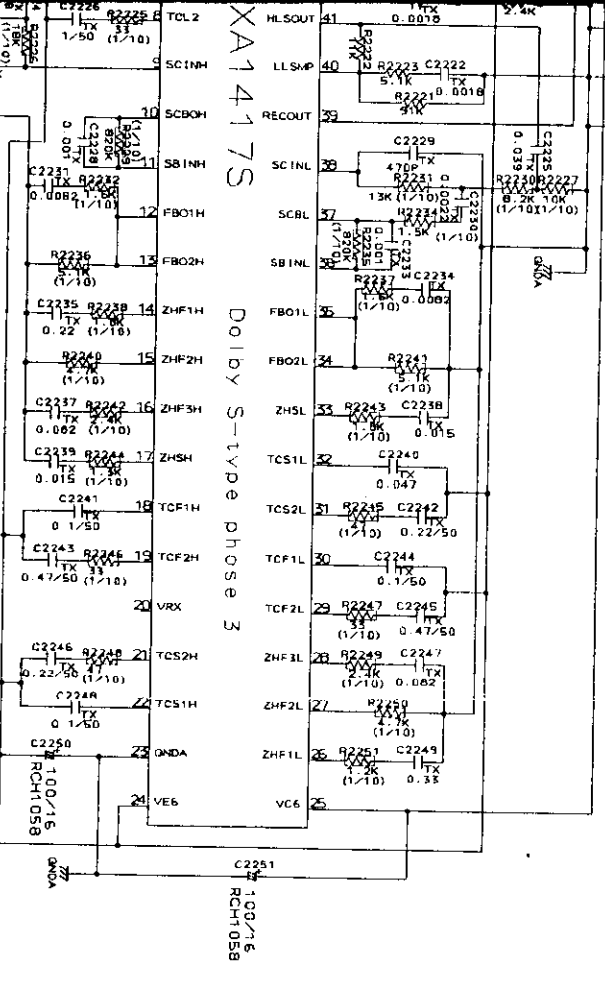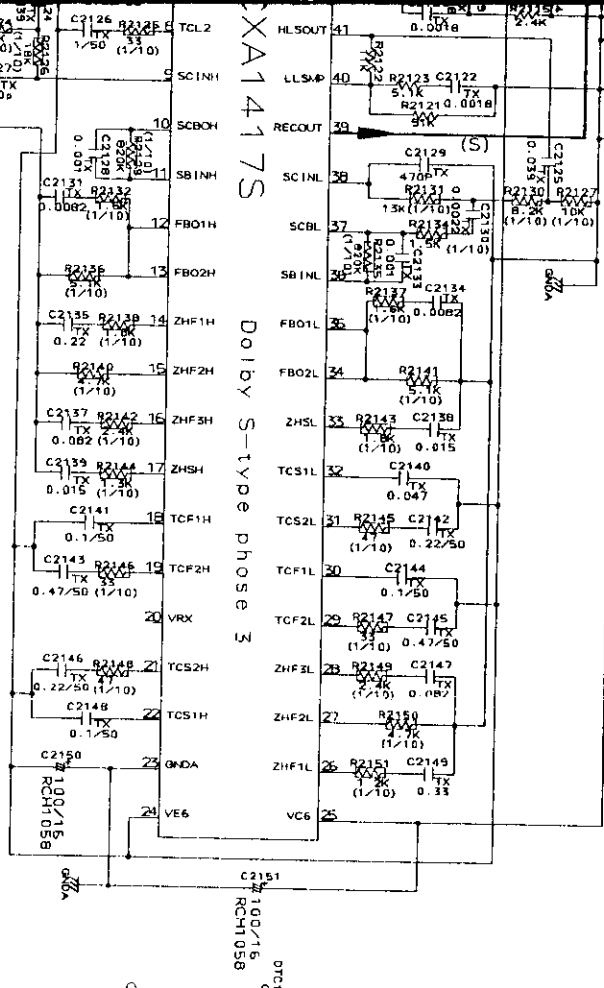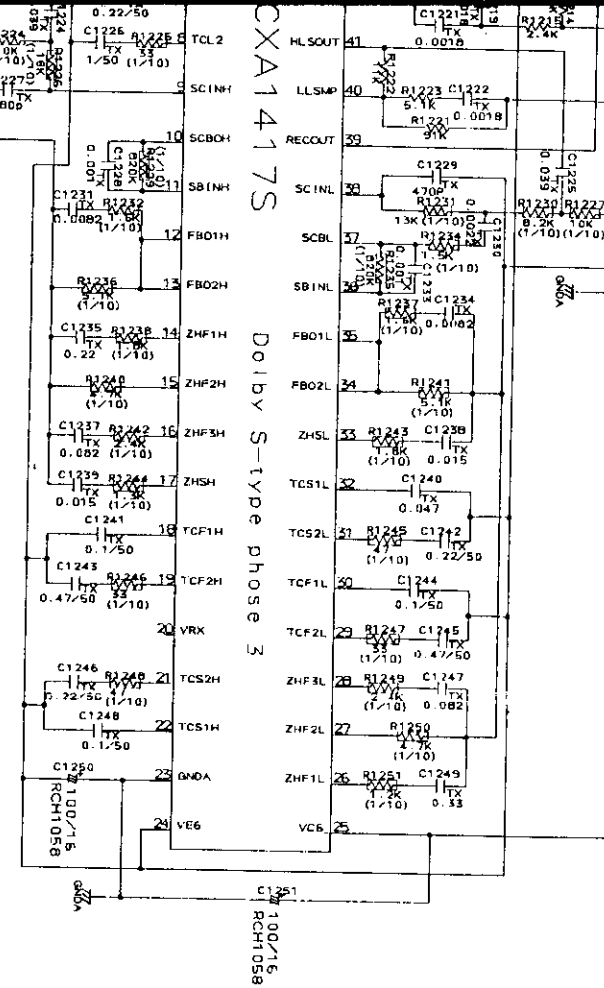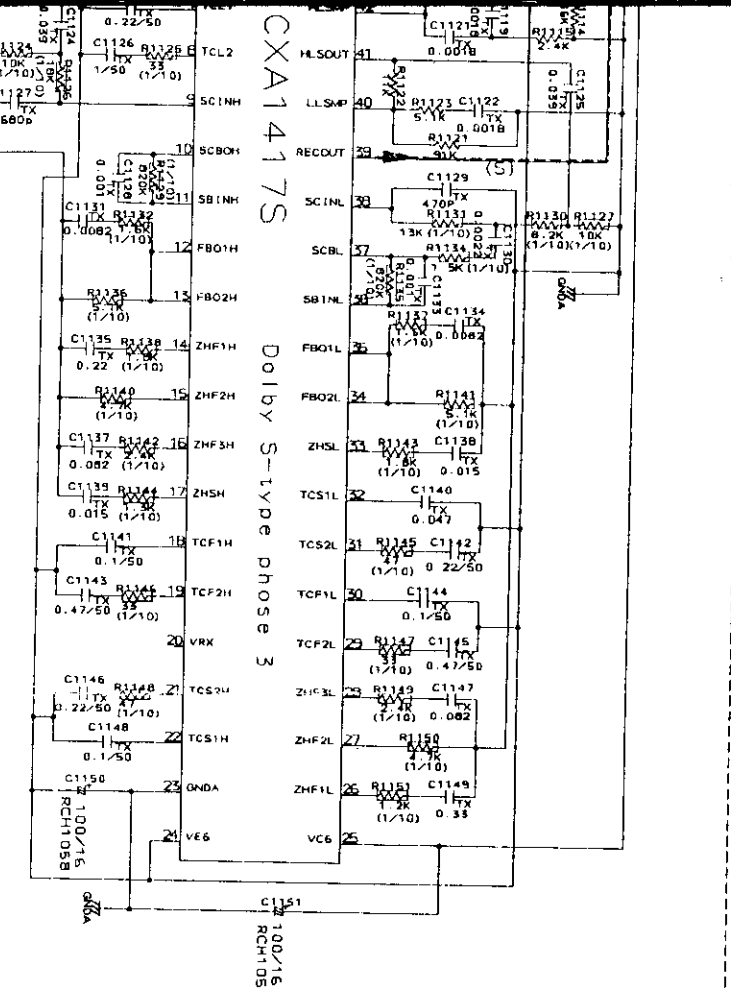


PLYBACK SIGNAL (DOLBY B/C or OFF)
 RECORDING SIGNAL (DOLBY B/C or OFF)
 PLYBACK SIGNAL (DOLBY S)
 RECORDING SIGNAL (DOLBY S)
 CHIP PARTS

6 7 8 9

6 7 8 9

4. BLOCK DIAGRAM

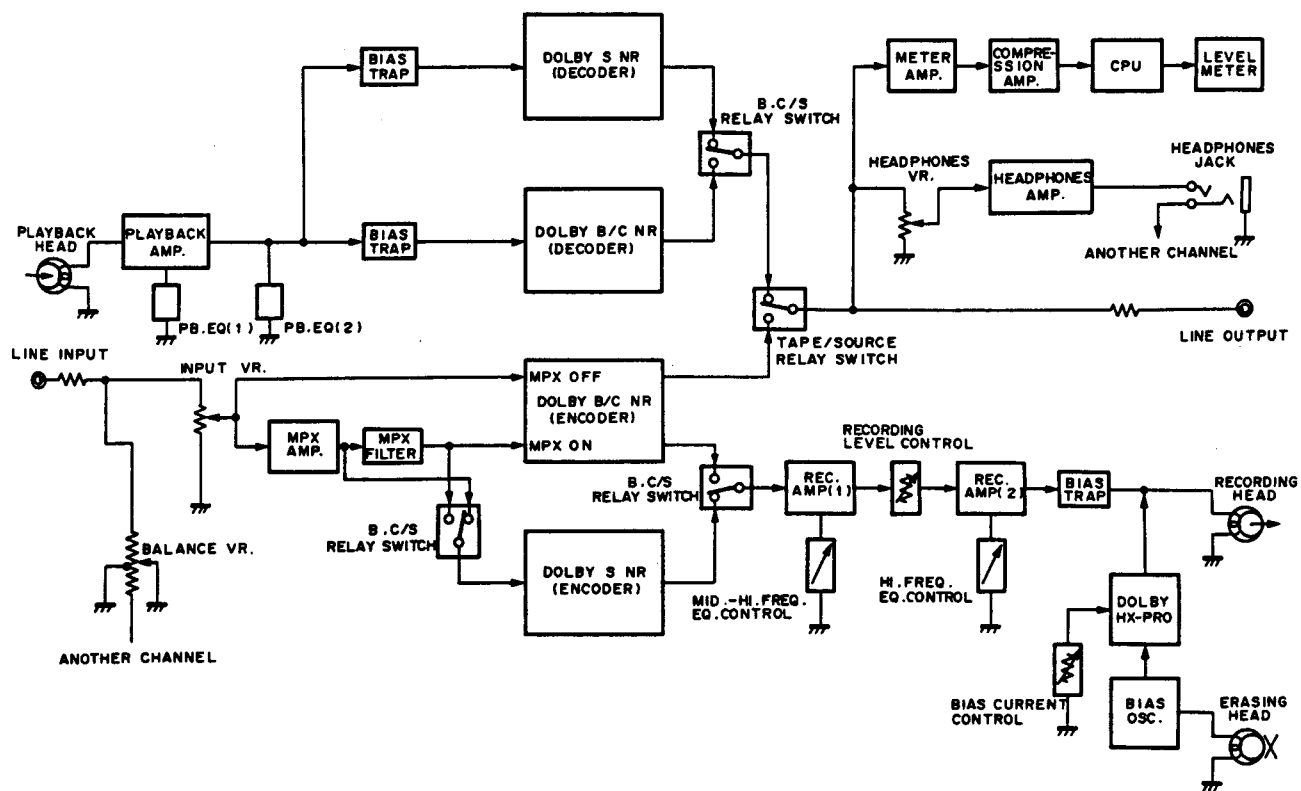

5. P.C.B's PARTS LIST

NOTES:

- Parts without part number cannot be supplied.
- Parts marked by "⊙" are not always kept in stock. Their delivery time may be longer than usual or they may be unavailable.
- The Δ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
- When ordering resistors, first convert resistance values into code form as shown in the following examples.

Ex.1 When there are 2 effective digits (any digit apart from 0), such as 560 ohm and 47k ohm (tolerance is shown by J=5%, and K=10%)

560 Ω → 56 × 10¹ → 561 RD1/4PS

| | | |
|---|---|---|
| 5 | 6 | 1 |
|---|---|---|

 J
 47k Ω → 47 × 10³ → 473 RD1/4PS

| | | |
|---|---|---|
| 4 | 7 | 3 |
|---|---|---|

 J
 0.5 Ω → 0R5 RN2H

| | | |
|---|---|---|
| 0 | R | 5 |
|---|---|---|

 K
 1 Ω → 010 RS1P

| | | |
|---|---|---|
| 0 | 1 | 0 |
|---|---|---|

 K

Ex.2 When there are 3 effective digits (such as in high precision metal film resistors).

5.62k Ω → 562 × 10¹ → 5621 RNI/4SR

| | | | |
|---|---|---|---|
| 5 | 6 | 2 | 1 |
|---|---|---|---|

 F

| Mark | No. | Description | Part No. | Mark | No. | Description | Part No. |
|---|--------------|---------------------------|-------------|-------------|-----|---------------------------|-------------|
| DOLBY S UNIT | | | | C1109 | | ELECTR. CAPACITOR(10/50) | RCH1062 |
| This unit is the exclusive board for CT-41/KU/CA and CT-900S/HEM types. | | | | C1110 | | AUDIO FILM CAPACITOR | CFTXA183J50 |
| SEMICONDUCTORS | | | | C1111 | | AUDIO FILM CAPACITOR | CFTXA104J50 |
| | IC930 | OP-AMP, IC | M5218AP | C1112 | | ELECTR. CAPACITOR | CENA100M50 |
| | IC1001 | | UPC4572G | C1113 | | AUDIO FILM CAPACITOR | CFTXA474J50 |
| | IC1002 | OP-AMP, IC | M5218AFP | C1114 | | AUDIO FILM CAPACITOR | CFTXA223J50 |
| | IC1101 | | CXA1417S | C1115 | | AUDIO FILM CAPACITOR | CFTXA104J50 |
| | IC1201 | | CXA1417S | C1116 | | AUDIO FILM CAPACITOR | CFTXA224J50 |
| | IC2001 | | UPC4572G | C1117 | | AUDIO FILM CAPACITOR | CFTXA104J50 |
| | IC2002, 2003 | OP-AMP, IC | M5218AFP | C1118 | | AUDIO FILM CAPACITOR | CFTXA183J50 |
| | IC2101 | | CXA1417S | C1119 | | AUDIO FILM CAPACITOR | CFTXA182J50 |
| | IC2201 | | CXA1417S | C1120 | | AUDIO FILM CAPACITOR | CFTXA223J50 |
| Δ | Q951, 952 | N-FET | 2SK246 | C1121, 1122 | | AUDIO FILM CAPACITOR | CFTXA182J50 |
| | Q953 | TRANSISTOR | 2SC2240 | C1123 | | AUDIO FILM CAPACITOR | CFTXA224J50 |
| | Q954 | TRANSISTOR | 2SA970 | C1124, 1125 | | AUDIO FILM CAPACITOR | CFTXA393J50 |
| Δ | Q955 | TRANSISTOR | 2SD1266 | C1126 | | AUDIO FILM CAPACITOR | CFTXA105J50 |
| Δ | Q956 | TRANSISTOR | 2SB941 | C1127 | | | CFTXA681J50 |
| | Q1001-1004 | | DTC114EK | C1128 | | | CFTXA102J50 |
| | D951, 952 | ZENER DIODE | HZS6C1L | C1129 | | | CFTXA471J50 |
| | D1001-1003 | CHIP CIODE ARRAY | DAN202K | C1130 | | AUDIO FILM CAPACITOR | CFTXA222J50 |
| | D2001 | CHIP CIODE ARRAY | DAN202K | C1131 | | AUDIO FILM CAPACITOR | CFTXA822J50 |
| | | | | C1133 | | | CFTXA102J50 |
| RELAYS | | | | C1134 | | AUDIO FILM CAPACITOR | CFTXA822J50 |
| | RY1001, 1002 | | RSR1026 | C1135 | | AUDIO FILM CAPACITOR | CFTXA224J50 |
| | RY2001 | | RSR1026 | C1137 | | AUDIO FILM CAPACITOR | CFTXA823J50 |
| COILS/TRANSFORMERS | | | | C1138, 1139 | | AUDIO FILM CAPACITOR | CFTXA153J50 |
| | L2161 | COIL | RTF1060 | C1140 | | AUDIO FILM CAPACITOR | CFTXA473J50 |
| | L2261 | COIL | RTF1060 | C1141 | | AUDIO FILM CAPACITOR | CFTXA104J50 |
| CAPACITORS | | | | C1142 | | AUDIO FILM CAPACITOR | CFTXA224J50 |
| | C951, 952 | ELECTR. CAPACITOR(10/50) | RCH1062 | C1143 | | AUDIO FILM CAPACITOR | CFTXA474J50 |
| | C953, 954 | AUDIO FILM CAPACITOR | CFTXA563J50 | C1144 | | AUDIO FILM CAPACITOR | CFTXA104J50 |
| | C955, 956 | ELECTR. CAPACITOR(470/16) | RCH1056 | C1145 | | AUDIO FILM CAPACITOR | CFTXA474J50 |
| | C1001 | ELECTR. CAPACITOR | CEAS100M50 | C1146 | | AUDIO FILM CAPACITOR | CFTXA224J50 |
| | C1101 | ELECTR. CAPACITOR(10/50) | RCH1062 | C1147 | | AUDIO FILM CAPACITOR | CFTXA823J50 |
| | C1105 | ELECTR. CAPACITOR | CENA220M50 | C1148 | | AUDIO FILM CAPACITOR | CFTXA104J50 |
| | C1106 | AUDIO FILM CAPACITOR | CFTXA182J50 | C1149 | | AUDIO FILM CAPADITOR | CFTXA334J50 |
| | C1107, 1108 | AUDIO FILM CAPACITOR | CFTXA104J50 | C1150, 1151 | | ELECTR. CAPACITOR(100/16) | RCH1058 |

| Mark | No. | Description | Part No. | Mark | No. | Description | Part No. |
|------|-------------|---------------------------|-------------|------|-------------|---------------------------|-------------|
| | C1162 | | CFTXA471J50 | | C2116 | AUDIO FILM CAPACITOR | CFTXA224J50 |
| | C1163 | ELECTR. CAPACITOR(10/50) | RCH1062 | | C2117 | AUDIO FILM CAPACITOR | CFTXA104J50 |
| | C1201 | ELECTR. CAPACITOR(10/50) | RCH1062 | | C2118 | AUDIO FILM CAPACITOR | CFTXA183J50 |
| | C1205 | ELECTR. CAPACITOR | CENA220M50 | | C2119 | AUDIO FILM CAPACITOR | CFTXA182J50 |
| | C1206 | AUDIO FILM CAPACITOR | CFTXA182J50 | | C2120 | AUDIO FILM CAPACITOR | CFTXA223J50 |
| | C1207, 1208 | AUDIO FILM CAPACITOR | CFTXA104J50 | | C2121, 2122 | AUDIO FILM CAPACITOR | CFTXA182J50 |
| | C1209 | ELECTR. CAPACITOR(10/50) | RCH1062 | | C2123 | AUDIO FILM CAPACITOR | CFTXA224J50 |
| | C1210 | AUDIO FILM CAPACITOR | CFTXA183J50 | | C2124, 2125 | AUDIO FILM CAPACITOR | CFTXA393J50 |
| | C1211 | AUDIO FILM CAPACITOR | CFTXA104J50 | | C2126 | AUDIO FILM CAPACITOR | CFTXA105J50 |
| | C1212 | ELECTR. CAPACITOR | CENA100M50 | | C2127 | | CFTXA681J50 |
| | C1213 | AUDIO FILM CAPACITOR | CFTXA474J50 | | C2128 | | CFTXA102J50 |
| | C1214 | AUDIO FILM CAPACITOR | CFTXA223J50 | | C2129 | | CFTXA471J50 |
| | C1215 | AUDIO FILM CAPACITOR | CFTXA104J50 | | C2130 | AUDIO FILM CAPACITOR | CFTXA222J50 |
| | C1216 | AUDIO FILM CAPACITOR | CFTXA224J50 | | C2131 | AUDIO FILM CAPACITOR | CFTXA822J50 |
| | C1217 | AUDIO FILM CAPACITOR | CFTXA104J50 | | C2133 | | CFTXA102J50 |
| | C1218 | AUDIO FILM CAPACITOR | CFTXA183J50 | | C2134 | AUDIO FILM CAPACITOR | CFTXA822J50 |
| | C1219 | AUDIO FILM CAPACITOR | CFTXA182J50 | | C2135 | AUDIO FILM CAPACITOR | CFTXA224J50 |
| | C1220 | AUDIO FILM CAPACITOR | CFTXA223J50 | | C2137 | AUDIO FILM CAPACITOR | CFTXA823J50 |
| | C1221, 1222 | AUDIO FILM CAPACITOR | CFTXA182J50 | | C2138, 2139 | AUDIO FILM CAPACITOR | CFTXA153J50 |
| | C1223 | AUDIO FILM CAPACITOR | CFTXA224J50 | | C2140 | AUDIO FILM CAPACITOR | CFTXA473J50 |
| | C1224, 1225 | AUDIO FILM CAPACITOR | CFTXA393J50 | | C2141 | AUDIO FILM CAPACITOR | CFTXA104J50 |
| | C1226 | AUDIO FILM CAPACITOR | CFTXA105J50 | | C2142 | AUDIO FILM CAPACITOR | CFTXA224J50 |
| | C1227 | | CFTXA681J50 | | C2143 | AUDIO FILM CAPACITOR | CFTXA474J50 |
| | C1228 | | CFTXA102J50 | | C2144 | AUDIO FILM CAPACITOR | CFTXA104J50 |
| | C1229 | | CFTXA471J50 | | C2145 | AUDIO FILM CAPACITOR | CFTXA474J50 |
| | C1230 | AUDIO FILM CAPACITOR | CFTXA222J50 | | C2146 | AUDIO FILM CAPACITOR | CFTXA224J50 |
| | C1231 | AUDIO FILM CAPACITOR | CFTXA822J50 | | C2147 | AUDIO FILM CAPACITOR | CFTXA823J50 |
| | C1233 | | CFTXA102J50 | | C2148 | AUDIO FILM CAPACITOR | CFTXA104J50 |
| | C1234 | AUDIO FILM CAPACITOR | CFTXA822J50 | | C2149 | AUDIO FILM CAPACITOR | CFTXA334J50 |
| | C1235 | AUDIO FILM CAPACITOR | CFTXA224J50 | | C2150, 2151 | ELECTR. CAPACITOR(100/16) | RCH1058 |
| | C1237 | AUDIO FILM CAPACITOR | CFTXA823J50 | | C2164 | ELECTR. CAPACITOR(10/50) | RCH1062 |
| | C1238, 1239 | AUDIO FILM CAPACITOR | CFTXA153J50 | | C2204 | ELECTR. CAPACITOR(10/50) | RCH1062 |
| | C1240 | AUDIO FILM CAPACITOR | CFTXA473J50 | | C2205 | ELECTR. CAPACITOR | CENA220M50 |
| | C1241 | AUDIO FILM CAPACITOR | CFTXA104J50 | | C2206 | AUDIO FILM CAPACITOR | CFTXA182J50 |
| | C1242 | AUDIO FILM CAPACITOR | CFTXA224J50 | | C2207, 2208 | AUDIO FILM CAPACITOR | CFTXA104J50 |
| | C1243 | AUDIO FILM CAPACITOR | CFTXA474J50 | | C2210 | AUDIO FILM CAPACITOR | CFTXA183J50 |
| | C1244 | AUDIO FILM CAPACITOR | CFTXA104J50 | | C2211 | AUDIO FILM CAPACITOR | CFTXA104J50 |
| | C1245 | AUDIO FILM CAPACITOR | CFTXA474J50 | | C2212 | ELECTR. CAPACITOR | CENA100M50 |
| | C1246 | AUDIO FILM CAPACITOR | CFTXA224J50 | | C2213 | AUDIO FILM CAPACITOR | CFTXA474J50 |
| | C1247 | AUDIO FILM CAPACITOR | CFTXA823J50 | | C2214 | AUDIO FILM CAPACITOR | CFTXA223J50 |
| | C1248 | AUDIO FILM CAPACITOR | CFTXA104J50 | | C2215 | AUDIO FILM CAPACITOR | CFTXA104J50 |
| | C1249 | AUDIO FILM CAPACITOR | CFTXA334J50 | | C2216 | AUDIO FILM CAPACITOR | CFTXA224J50 |
| | C1250, 1251 | ELECTR. CAPACITOR(100/16) | RCH1058 | | C2217 | AUDIO FILM CAPACITOR | CFTXA104J50 |
| | C1262 | | CFTXA471J50 | | C2218 | AUDIO FILM CAPACITOR | CFTXA183J50 |
| | C1263 | ELECTR. CAPACITOR(10/50) | RCH1062 | | C2219 | AUDIO FILM CAPACITOR | CFTXA182J50 |
| | C2104 | ELECTR. CAPACITOR(10/50) | RCH1062 | | C2220 | AUDIO FILM CAPACITOR | CFTXA223J50 |
| | C2105 | ELECTR. CAPACITOR | CENA220M50 | | C2221, 2222 | AUDIO FILM CAPACITOR | CFTXA182J50 |
| | C2106 | AUDIO FILM CAPACITOR | CFTXA182J50 | | C2223 | AUDIO FILM CAPACITOR | CFTXA224J50 |
| | C2107, 2108 | AUDIO FILM CAPACITOR | CFTXA104J50 | | C2224, 2225 | AUDIO FILM CAPACITOR | CFTXA393J50 |
| | C2110 | AUDIO FILM CAPACITOR | CFTXA183J50 | | C2226 | AUDIO FILM CAPACITOR | CFTXA105J50 |
| | C2111 | AUDIO FILM CAPACITOR | CFTXA104J50 | | C2227 | | CFTXA681J50 |
| | C2112 | ELECTR. CAPACITOR | CENA100M50 | | C2228 | | CFTXA102J50 |
| | C2113 | AUDIO FILM CAPACITOR | CFTXA474J50 | | C2229 | | CFTXA471J50 |
| | C2114 | AUDIO FILM CAPACITOR | CFTXA223J50 | | C2230 | AUDIO FILM CAPACITOR | CFTXA222J50 |
| | C2115 | AUDIO FILM CAPACITOR | CFTXA104J50 | | C2231 | AUDIO FILM CAPACITOR | CFTXA822J50 |

6. ADJUSTMENTS

PLAYBACK SECTION

Playback Level Adjustment

- This adjustment determines the DOLBY NR level, and must be performed with great care.

| No. | Mode | Input signal & test tape | Adjustment location | | Measuring location | Adjustment value | Remarks |
|-----|------|---|---------------------|------------------------------|--------------------------------|------------------|--|
| 1. | PLAY | Play the 315 Hz/0 dB section of the STD-331B test tape. | Deck | VR105 (Lch) VR106 (Rch) | TP. 3 (Lch) TP. 4 (Rch) | -15.0 dBv | This adjustment must be performed accurately for proper Dolby level setting. |
| 2. | | | DOLBY S | VR2101 (Lch) VR2201 (Rch) | TP. 33S (Lch) TP. 34S (Rch) | -11.7 dBv | |

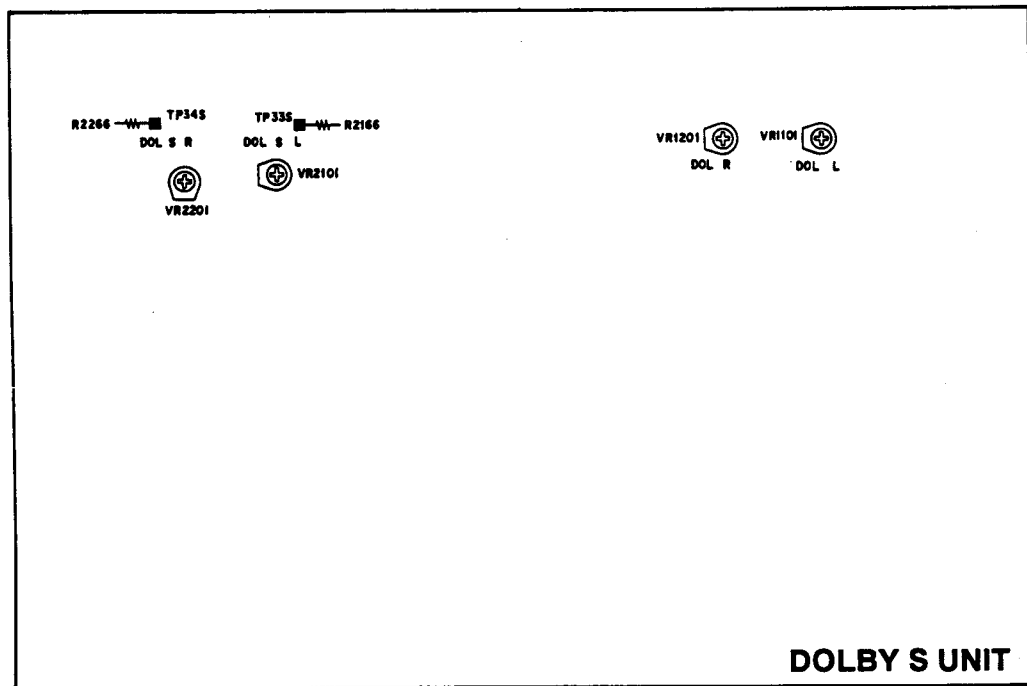


Fig. 6-1 Adjusting points

RECORDING SECTION

Bias Trap Adjustment

| No. | Mode | Input signal & test tape | Adjustment location | | Measuring location | Adjustment value | Remarks |
|-----|-------------------------------|--|---------------------|----------------------------|----------------------------|------------------|---------|
| 1. | REC | Load the STD-610 test tape with no input signal. | Deck | L103 (Lch) L104 (Rch) | TP. 3 (Lch) TP. 4 (Rch) | Minimum output | |
| 2. | Set the Dolby NR switch to S. | | | | | | |
| 3. | REC | Load the STD-610 test tape with no input signal. | DOLBY S | L2161 (Lch) L2261 (Rch) | LINE OUT | Minimum output | |

DOLBY S Encoder Adjustment

- DOLBY S encoder adjustment must be performed before recording bias adjustment.


| No. | Mode | Input signal & test tape | Adjustment location | Measuring location | Adjustment value | Remarks |
|-----|---|--|------------------------------|----------------------------|------------------|---------|
| 1. | Turn OFF the DOLBY NR switch. | | | | | |
| 2. | REC/ PAUSE | Apply the 315 Hz/-10 dBv signal to the line input terminals. | REC level control volume | TP. 1 (Lch) TP. 2 (Rch) | -15.2 dBv | |
| 3. | Turn the DOLBY NR switch to S position. | | | | | |
| 4. | REC/ PAUSE | Apply the 315 Hz/-10 dBv signal to the line input terminals. | VR1101 (Lch) VR1201 (Rch) | TP. 1 (Lch) TP. 2 (Rch) | -14.5 dBv | |

Recording Bias Adjustment

| No. | Mode | Input signal & test tape | Adjustment location | Measuring location | Adjustment value | Remarks | |
|-----|-------------------------------|---|---------------------|------------------------|------------------|---|--------------------|
| 1. | REC/ PAUSE | Apply a 315 Hz/-20 dBv (-20VU meter reading) signal to the line input terminals and insert STD-630. | | | | | |
| 2. | REC → PLAY | Record and play back the 315 Hz signal and a 10 kHz signal at -20 dBv input level. | NOR | VR551 (L) VR552 (R) | LINE OUT | Record and play back repeatedly, comparing the 315 Hz and 10 kHz playback levels, and adjust to 0 ± 0.5 dB. | |
| 3. | | Record the 10 kHz/315 Hz, -20 dBv signal on STD-620 and play back. | CrO2 | VR501 (L/R) | | | 0 dBv \pm 1.0 dB |
| 4. | | Record the 10 kHz/315 Hz, -20 dBv signal on STD-610 and play back. | METAL | VR502 (L/R) | | | 0 dBv \pm 1.0 dB |
| 5. | | Check distortion value after adjustment is completed and confirm that there is no underbias. | | | | | |
| 6. | Set the Dolby NR switch to S. | | | | | | |
| 7. | REC/ PAUSE | Apply a 315 Hz/-20 dBv (-20VU meter reading) signal to the line input terminals and insert STD-630. | | | | | |
| 8. | REC → PLAY | Record and play back the 315 Hz signal and a 10 kHz signal at -20 dBv input level. | NOR | VR551 (L) VR552 (R) | LINE OUT | Record and play back repeatedly, comparing the 315 Hz and 10 kHz playback levels, and adjust to 0 ± 1.0 dB. | |
| 9. | | Record the 10 kHz/315 Hz, -20 dBv signal on STD-620 and play back. | CrO2 | VR501 (L/R) | | | 0 dBv |
| 10. | | Record the 10 kHz/315 Hz, -20 dBv signal on STD-610 and play back. | METAL | VR502 (L/R) | | | 0 dBv |
| 11. | | Check distortion value after adjustment is completed and confirm that there is no underbias. | | | | | |

Service Manual

PIONEER
The Art of Entertainment

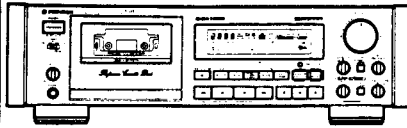

ORDER NO.
ARP2217

STEREO CASSETTE DECK

CT-777

CT-777-S

CT-777 AND CT-777-S HAVE THE FOLLOWING:

| Type | Model | | Power Requirement | Remarks |
|------|--------|----------|---------------------------------------|---------|
| | CT-777 | CT-777-S | | |
| HEM | ○ | - | AC220V-230V, 230V-240V (switchable) * | |
| HEWM | - | ○ | AC220V-230V, 230V-240V (switchable) * | |

* Change the primary wiring of the power transformer.

- This manual is applicable to the CT-777/HEM and CT-777-S/HEWM types.
- As to the CT-777-S/HEWM type, refer to page 48.
- Ce manuel pour le service comprend les explications de réglage en français.
- Este manual de servicio trata del método ajuste escrito en español.

CONTENTS

| | |
|---|----|
| 1. EXPLODED VIEWS AND PARTS LIST | 2 |
| 2. PACKING | 9 |
| 3. SCHEMATIC DIAGRAM..... | 10 |
| 4. P.C. BOARDS CONNECTION DIAGRAM | 17 |
| 5. P.C.B's PARTS LIST | 25 |
| 6. ADJUSTMENTS | 30 |
| 6. RÉGLAGE | 35 |
| 6. AJUSTE | 40 |
| 7. IC DESCRIPTIONS | 45 |
| 8. FOR CT-777-S/HEWM TYPE | 48 |
| 9. SPECIFICATIONS | 49 |
| 10. PANEL FACILITIES..... | 50 |

PIONEER ELECTRONIC CORPORATION 4-1, Meguro 1-Chome, Meguro-ku, Tokyo 153, Japan
PIONEER ELECTRONICS SERVICE INC. P.O. Box 1760, Long Beach, California 90801 U.S.A.
PIONEER ELECTRONICS OF CANADA, INC. 505 Cochrane Drive, Markham, Ontario L3R 8E3 Canada
PIONEER ELECTRONIC [EUROPE] N.V. Keetberglaan 1, 9120 Beveren, Belgium
PIONEER ELECTRONICS AUSTRALIA PTY. LTD. 178-184 Boundary Road, Braeside, Victoria 3195, Australia TEL: [03] 580-9911
 © PIONEER ELECTRONIC CORPORATION 1991

SI APR. 1991 Printed in Japan

1. EXPLODED VIEWS AND PARTS LIST

NOTES:

- Parts without part number cannot be supplied.
- The Δ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
- Parts marked by "⊙" are not always kept in stock. Their delivery time may be longer than usual or they may be unavailable.

1.1 PARTS LIST OF EXTERIOR

| Mark | No. | Description | Part No. | Mark | No. | Description | Part No. |
|----------|-----|----------------------------------|--------------|------|-----|-------------------------|--------------|
| Δ | 1 | Strain relief | CM - 22B | | 46 | Screw | IBZ40P080FCC |
| Δ | 2 | AC power cord | PDG1003 | | 47 | Jack nut | RBN - 006 |
| Δ | 3 | FU703, FU704 Fuse(T2A) | REK - 103 | | 48 | Binder | REC - 371 |
| Δ | 4 | Power transformer (T1) | RTT1171 | | 49 | Cassette plate assembly | RXX1064 |
| | 5 | LED (D3) | SLF - 401C | | 50 | Bonnet | RXX1376 |
| | 6 | Absorber plate (B) | PNB1109 | | 51 | Front panel assembly | RXX1385 |
| | 7 | | | | 52 | Door lens | RLP1026 |
| | 8 | Button spring | RBH1144 | | 53 | Screw | BBT30P080FCU |
| | 9 | Door spring (L) | RBH1222 | | 54 | Screw | BBZ30P080FZK |
| | 10 | Door spring (R) | RBH1223 | | 55 | Screw | PMA30P060FCU |
| | 11 | Cassette plate spring | RBL - 059 | | 56 | | |
| | 12 | Stabilizer B | REB1038 | | 57 | Door cushion | REB1117 |
| Δ | 13 | FU701, FU702 Audio fuse (T500mA) | REK - 097 | | 101 | Main unit | |
| | 14 | | | | 102 | Headphone unit | |
| | 15 | | | | 103 | Power switch unit | |
| | 16 | | | | 104 | Operation unit | |
| | 17 | Leg assembly | AMR1159 | | 105 | Control unit | |
| | 18 | Screw | FBT40P080FZK | | 106 | Timer switch unit | |
| | 19 | | | | 107 | VR unit | |
| | 20 | | | | 108 | | |
| | 21 | Counter reset knob | RAA1009 | | 109 | Rubber spacer (A) | |
| | 22 | Power button | RAC1410 | | 110 | | |
| | 23 | Function knob | RAC1411 | | 111 | | |
| | 24 | Slide SW knob | RAC1562 | | 112 | | |
| | 25 | Push knob | RAC1413 | | 113 | Mechanism sheet (2) | |
| | 26 | Knob (B) | RAC1414 | | 114 | | |
| | 27 | Mode knob | RAC1552 | | 115 | Main chassis | |
| | 28 | FL filter | RAH1542 | | 116 | | |
| | 29 | Side rubber | REB1094 | | 117 | P.C.B base | |
| | 30 | Door sheet | REB1138 | | 118 | Binder | |
| | 31 | Door panel | RAH1844 | | 119 | | |
| | 32 | Door assembly | RXX1417 | | 120 | FL shield plate | |
| | 33 | Screw | BBZ30P100FCC | | 121 | | |
| | 34 | Door | RNK1495 | | 122 | | |
| | 35 | VR knob assembly | RXA1281 | | 123 | P.C.B stad | |
| | 36 | Cord clamber | RNH - 184 | | 124 | Panel stay | RNT1090 |
| | 37 | FL lens | RLP1027 | | 125 | Name plate | |
| | 38 | Rear panel | | | 126 | Cassette plate | |
| | 39 | Screw | ABZ26P080FZK | | 127 | Front panel | |
| | 40 | Screw | BBT30P060FCC | | 128 | Mechanism unit | |
| | 41 | Screw | BBT30P100FZK | | 129 | | |
| | 42 | Screw | BBZ30P100FZK | | 130 | Protector 300 × 10 | RED1020 |
| | 43 | Screw | BBZ30P060FCC | | 131 | | |
| | 44 | Screw | IBZ30P060FCC | | 132 | Acetate tape 10 × 10 | |
| | 45 | Screw | IBZ30P100FCC | | 133 | PS holder | |
| | | | | | 134 | Acetate tape (K) | |


Exterior

A

B

C

D

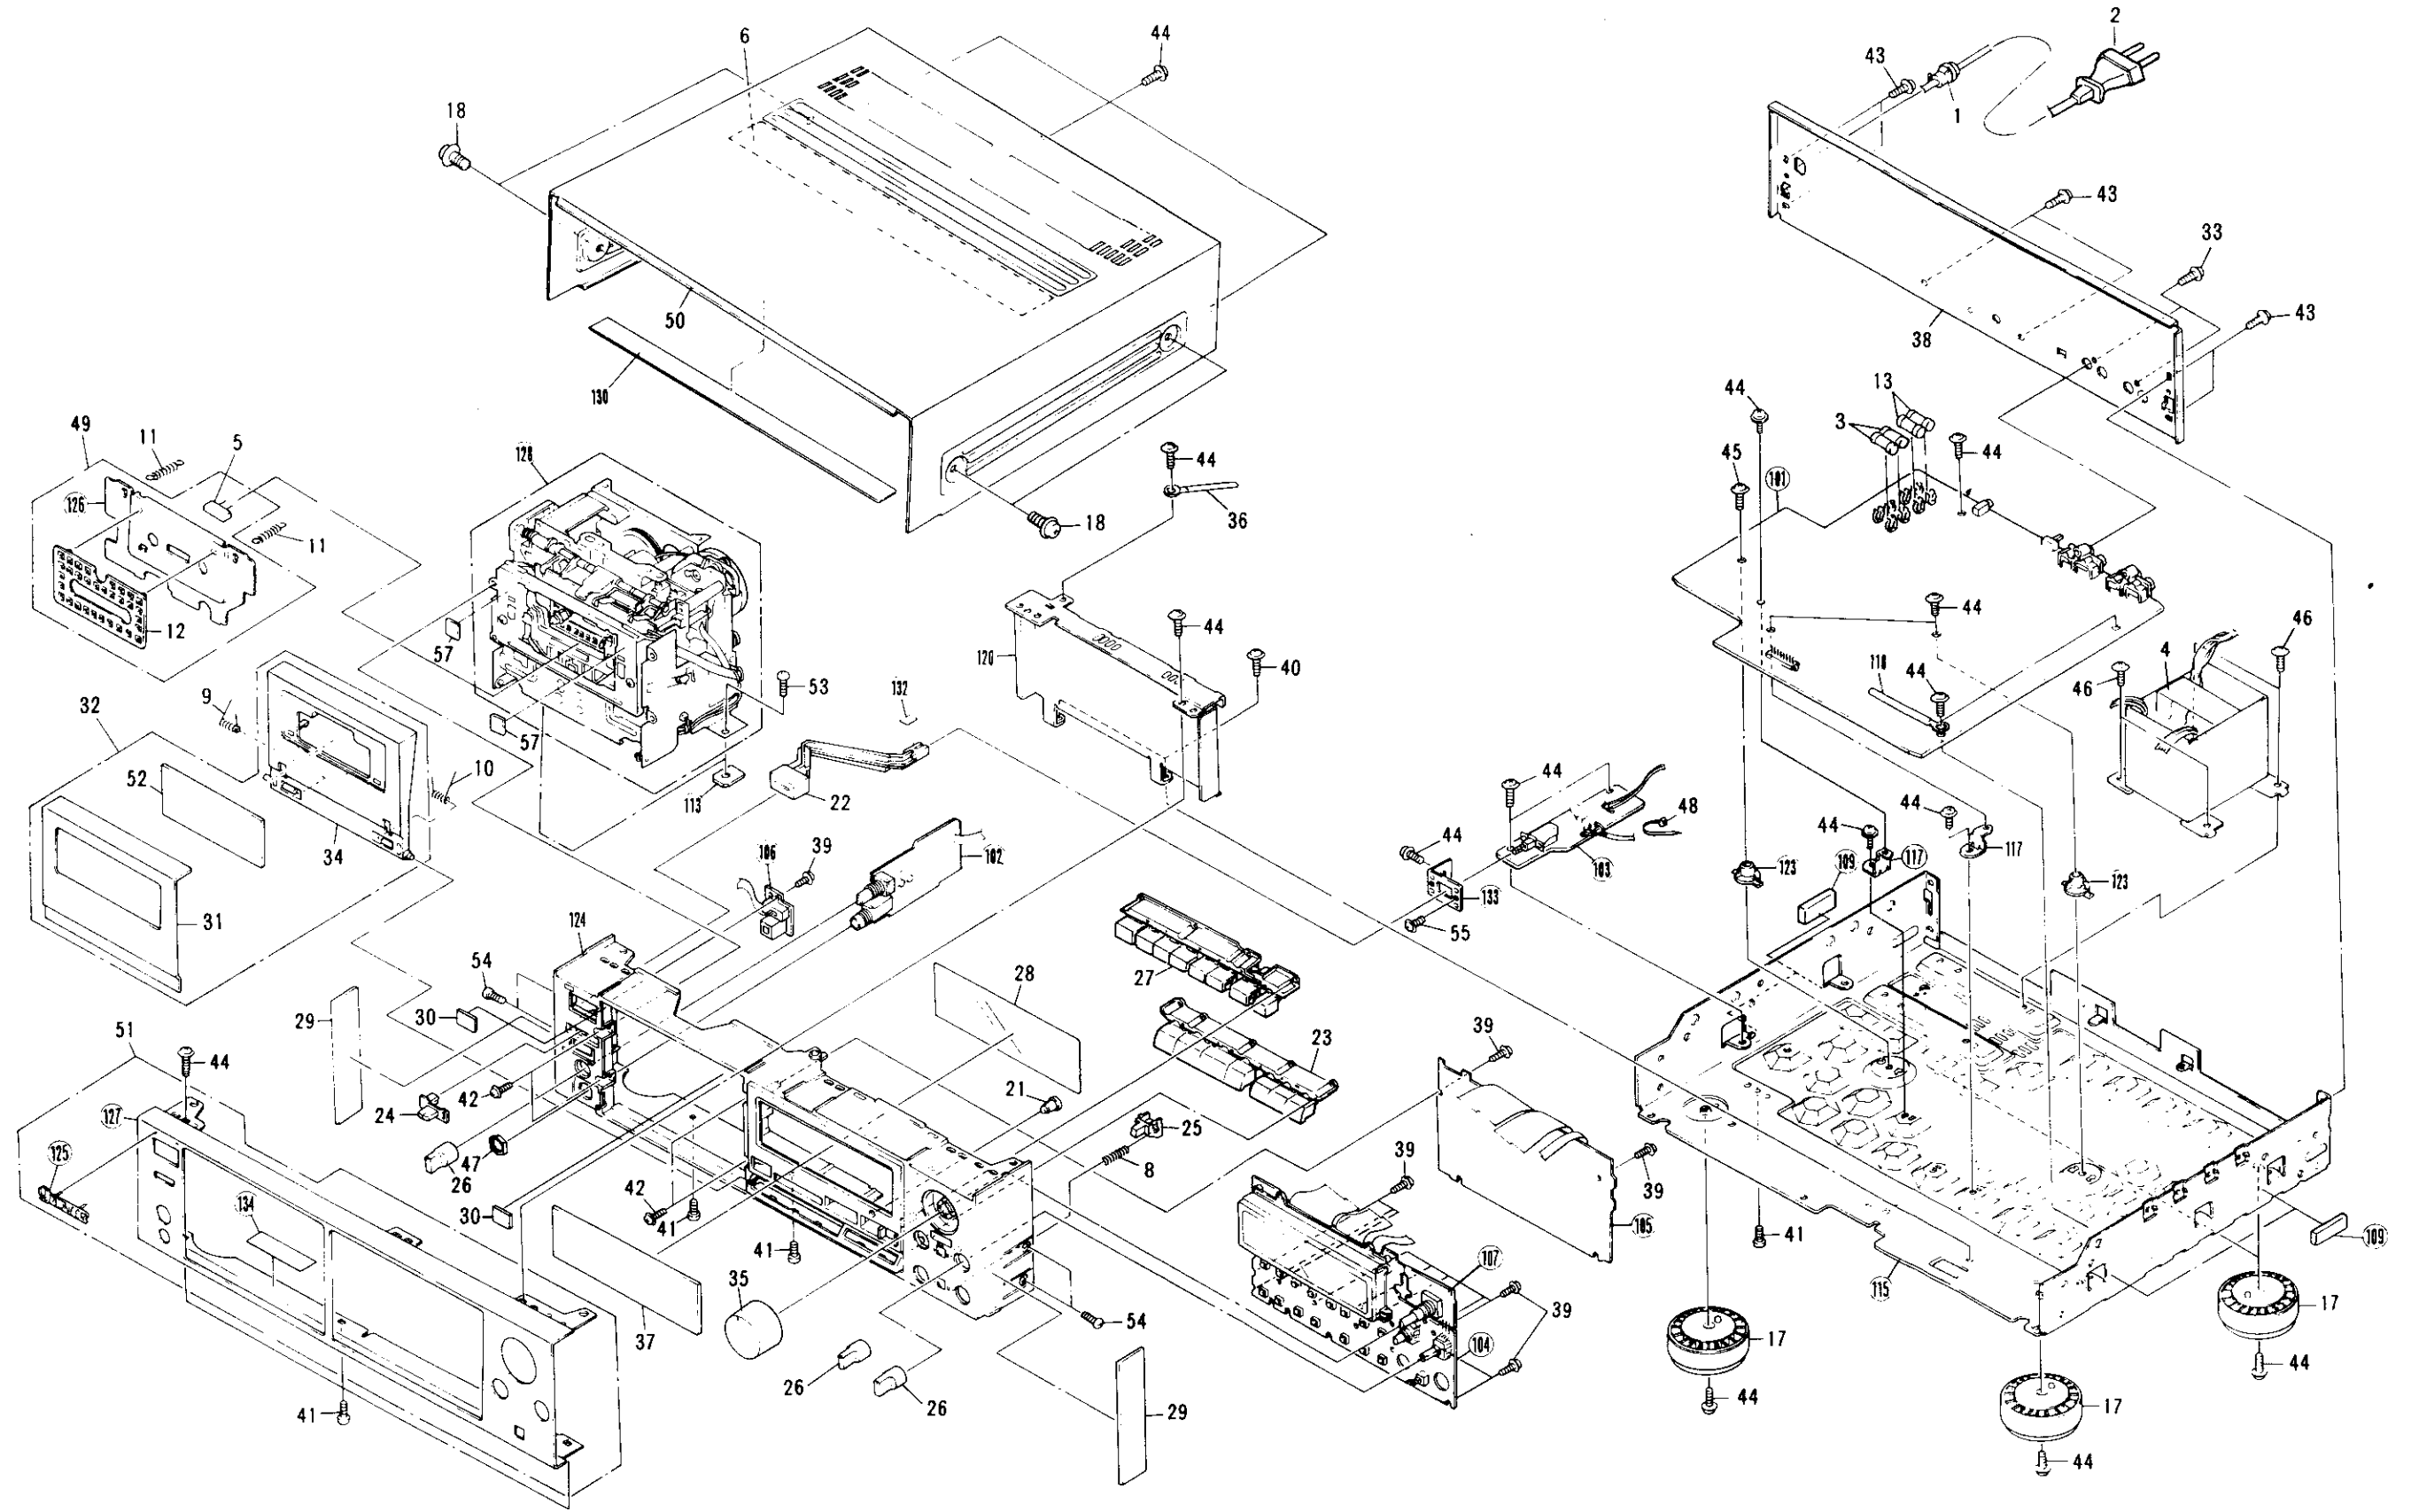

A

B

C

D

1.2 PARTS LIST OF MECHANISM SECTION

| Mark No. | Description | Part No. | Mark No. | Description | Part No. | Mark No. | Description | Part No. |
|----------|-------------------------------|--------------|----------|----------------------------|--------------|----------|-------------------------------------|-----------|
| 1 | Rotary encoder | RSX1004 | | | | 121 | First pulley | |
| 2 | Capstan motor | RXM1036 | 56 | | | 122 | Gear chassis assembly | RXA1171 |
| 3 | Reel motor assembly | RXM1018 | 57 | Screw | BCZ30P060FMC | 123 | Pinch base assembly | RXB - 878 |
| 4 | Step screw | RBA - 064 | 58 | Screw | BMZ26P030FZK | 124 | | |
| 5 | Thrust spring | RBL - 044 | 59 | | | 125 | | |
| | | | 60 | Screw | BMZ26P060FZK | | | |
| 6 | Rubber cushion | REB1125 | | | | 126 | | |
| 7 | Pinch spring | RBL - 028 | 61 | Screw | BMZ30P080FZK | 127 | Cassette plate spring | RBH1227 |
| 8 | Pinch thrust spring | RBL - 030 | 62 | Screw | JGZ20P025FMC | 128 | Position spring | RBL - 045 |
| 9 | Sub - pinch spring | RBL - 098 | 63 | Screw | PMA26P050FZK | 129 | Plate rubber (A) | REB1100 |
| 10 | Capstan belt | REB1143 | 64 | Screw | PMA26P060FZK | 130 | Plate rubber (B) | REB1101 |
| | | | 65 | Screw | PMZ20P080FZK | | | |
| 11 | Capstan belt (A) | REB - 509 | | | | 131 | Door arm | RNE1324 |
| 12 | Tape guide | RNL - 016 | 66 | Washer | RBF - 030 | 132 | Pocket frame | RNE1327 |
| 13 | Flywheel assembly | RXA1374 | 67 | Thrust washer (A) | RBF - 069 | 133 | Eject lever | RNL - 738 |
| 14 | Sub - flywheel assembly | RXA1375 | 68 | Thrust washer (B) | RBF - 070 | 134 | Shift shaft assembly | RXB - 885 |
| 15 | Metal holder assembly(A) | RXA1342 | 69 | Washer | RBF - 076 | 135 | Door frame (R) assembly | RXA1284 |
| | | | 70 | Washer | RBF1040 | | | |
| 16 | Metal holder assembly(B) | RXA1343 | | | | 136 | Door frame (L) assembly | RXA1285 |
| 17 | Pinch roller arm (R) assembly | RXB - 876 | 71 | Binder | REC - 371 | | | |
| | | | 72 | Steel ball (3mm) | REF - 022 | 136 | Door frame | |
| 18 | Pinch roller arm (A) assembly | RXB - 877 | 73 | Steel ball (4mm) | REF - 023 | 137 | Earth lead assembly | |
| | | | 74 | Screw | VCT30P060FZK | 138 | REC switch unit | |
| 19 | BT spring (C) | RBH1213 | 75 | Screw | VCZ26P080FMC | 139 | Tape selector unit | |
| 20 | BT spring (B) | RBL - 032 | | | | 140 | Sensor unit (A) | |
| | | | | | | | | |
| 21 | Idler pressure spring | RBL - 033 | 76 | Washer | WA21D040D013 | 141 | Motor pulley | |
| 22 | Reel shaft cap (B) | RNK - 815 | 77 | Washer | WA26N070W040 | 142 | Door switch unit | |
| 23 | BT disk assembly | RXB - 751 | 78 | Washer | WA32D080D050 | 143 | 2.5mm pitch sidepost (5P)BS5P - SHF | |
| 24 | Reel base assembly | RXB - 874 | 79 | E ring | YE20FUC | | | |
| 25 | Take - up idler assembly | RXB - 875 | 80 | E ring | YE25FUC | | | |
| | | | | | | | | |
| 26 | Washer | RBF - 065 | 81 | E ring | YE30FUC | | | |
| 27 | Head base spring | RBL - 037 | 82 | Snapping | YS24FBT | | | |
| 28 | Brake spring | RBL - 038 | 83 | Power motor assembly | RXX1055 | | | |
| 29 | Drive belt | REB1169 | 84 | Head base assembly | RXX1333 | | | |
| 30 | Brake shoe | REB - 511 | 85 | Mechanism chassis assembly | RXA1366 | | | |
| | | | | | | | | |
| 31 | Brake | RNL - 723 | 86 | Brake lever | RNK1638 | | | |
| 32 | Cam gear | RNK1640 | 87 | Second pulley assembly | RXA1350 | | | |
| 33 | Side cam gear assembly | RXA1349 | 88 | Gear base assembly | RXA1351 | | | |
| 34 | Pocket spring (A) | RBL - 027 | 89 | Pinch lever assembly | RXA1360 | | | |
| 35 | Eject spring | RBL - 039 | 90 | Capstan motor assembly | RXX1334 | | | |
| | | | | | | | | |
| 36 | Half set arm spring | RBL - 040 | 101 | E head | | | | |
| 37 | REC functioning spring | RBL - 041 | 102 | R & P head | | | | |
| 38 | Detection functioning spring | RBL - 042 | 103 | Connector unit | | | | |
| 39 | | | 104 | Power motor | | | | |
| 40 | O ring | REB - 447 | 105 | | | | | |
| | | | | | | | | |
| 41 | Cord clamper | RNH - 184 | 106 | Reel motor mounting plate | RNE1169 | | | |
| 42 | Cassette plate | RNK1498 | 107 | Flywheel holder | RNL - 304 | | | |
| 43 | REC detector arm | RNL - 733 | 108 | | | | | |
| 44 | Chrom detector arm | RNL - 734 | 109 | Thrust holder | RNL - 743 | | | |
| 45 | Metal detector arm | RNL - 735 | 110 | | | | | |
| | | | | | | | | |
| 46 | Piston | RNL - 739 | 111 | Pressure arm (R) | RNL - 725 | | | |
| 47 | Cylinder | RNL - 740 | 112 | Pressure arm (L) | RNL - 726 | | | |
| 48 | | | 113 | Adjustment nut | | | | |
| 49 | Collar | RNL - 742 | 114 | Head base set spring | RBL - 026 | | | |
| 50 | Pocket (L) | RNL - 849 | 115 | Head adjustment spring (C) | | | | |
| | | | | | | | | |
| 51 | Pocket (R) | RNL - 850 | 116 | Hight spring | | | | |
| 52 | Washer | RBF - 057 | 117 | Head base | | | | |
| 53 | Screw | BBZ26P080FZK | 118 | Sub - head base | | | | |
| 54 | | | 119 | E head base | | | | |
| 55 | Screw | BBZ30P080FZK | 120 | | | | | |


Mechanism Unit

A

B

C

D

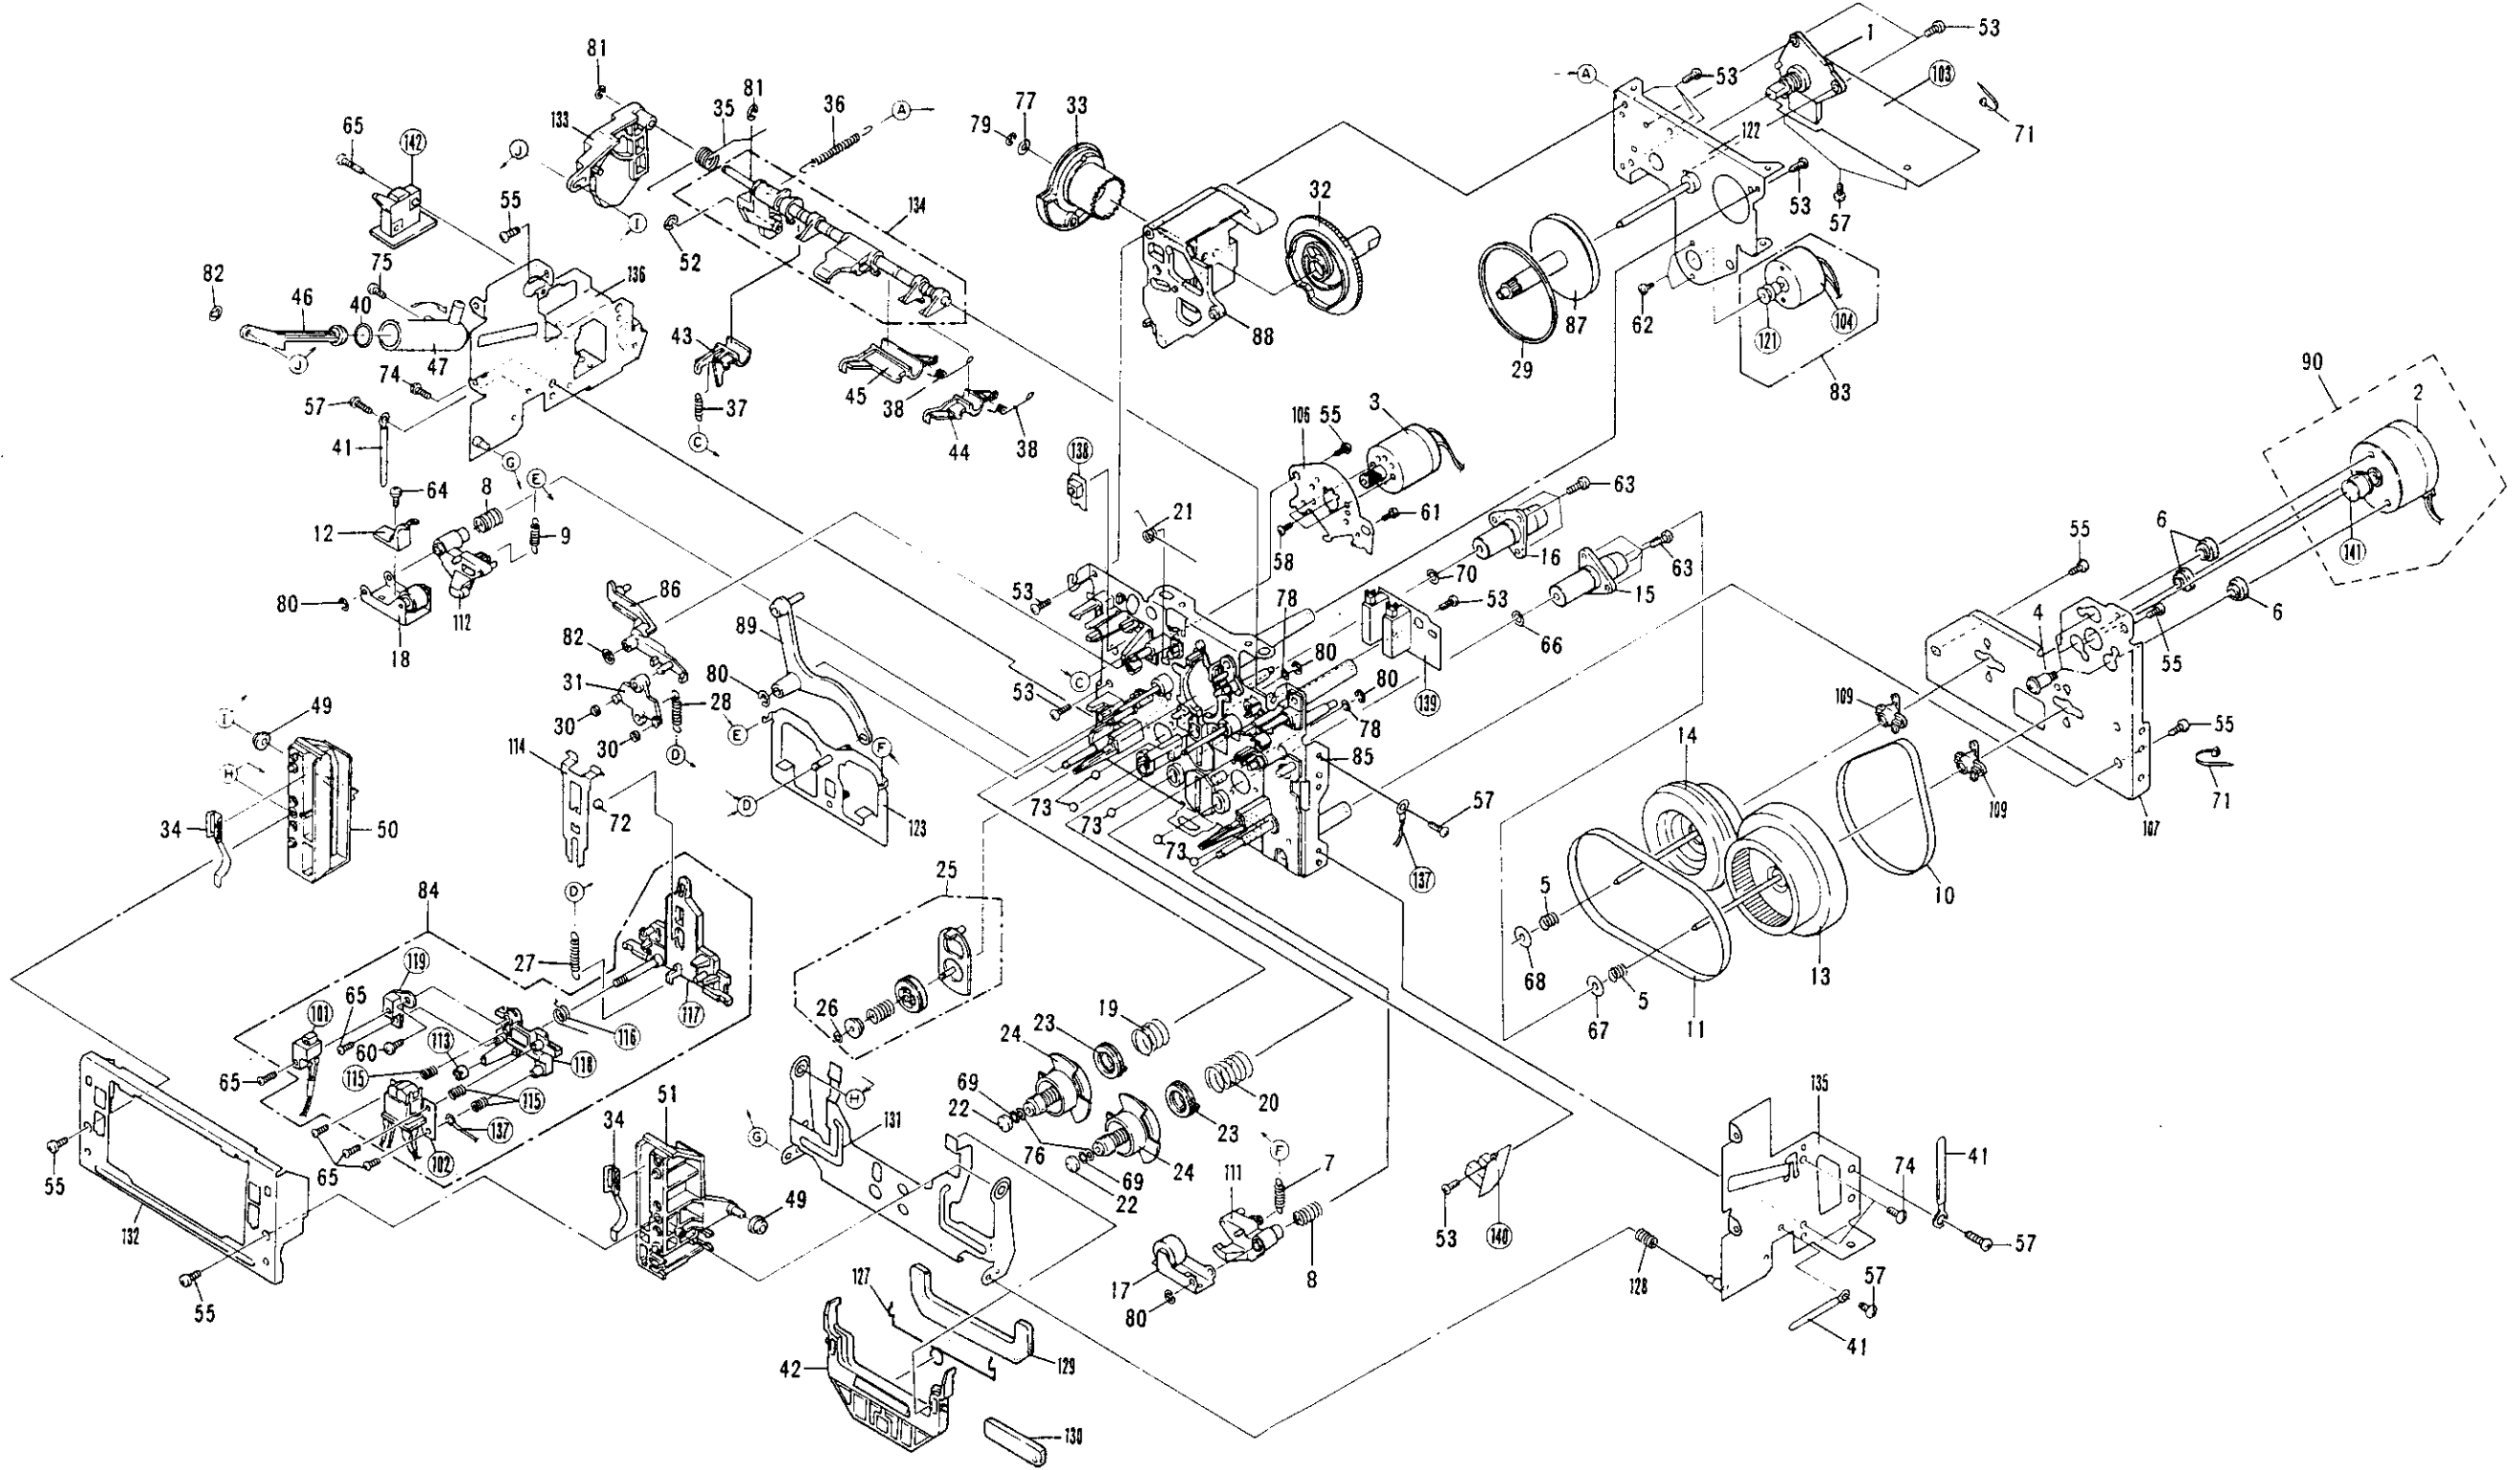

1

2

3

4

5

6


8

2.
Part
Mark

2. PACKING

Parts List

| Mark | No. | Description | Part No. |
|------|-----|---|-----------|
| | 1 | Pad (F) | RHA1021 |
| | 2 | Pad (R) | RHA1022 |
| | 3 | Packing case | RHG1279 |
| | 4 | Sheet | RHX - 034 |
| | 5 | Control cord | RDE1030 |
| | 6 | Connection cord | RDE1002 |
| | 7 | Operating instructions (French, Italian, Dutch, Swedish, Spanish, Portuguese) | RRD1109 |
| | 8 | Operating instructions (English, German) | RRE1044 |
| | 101 | Connection cord assembly | |


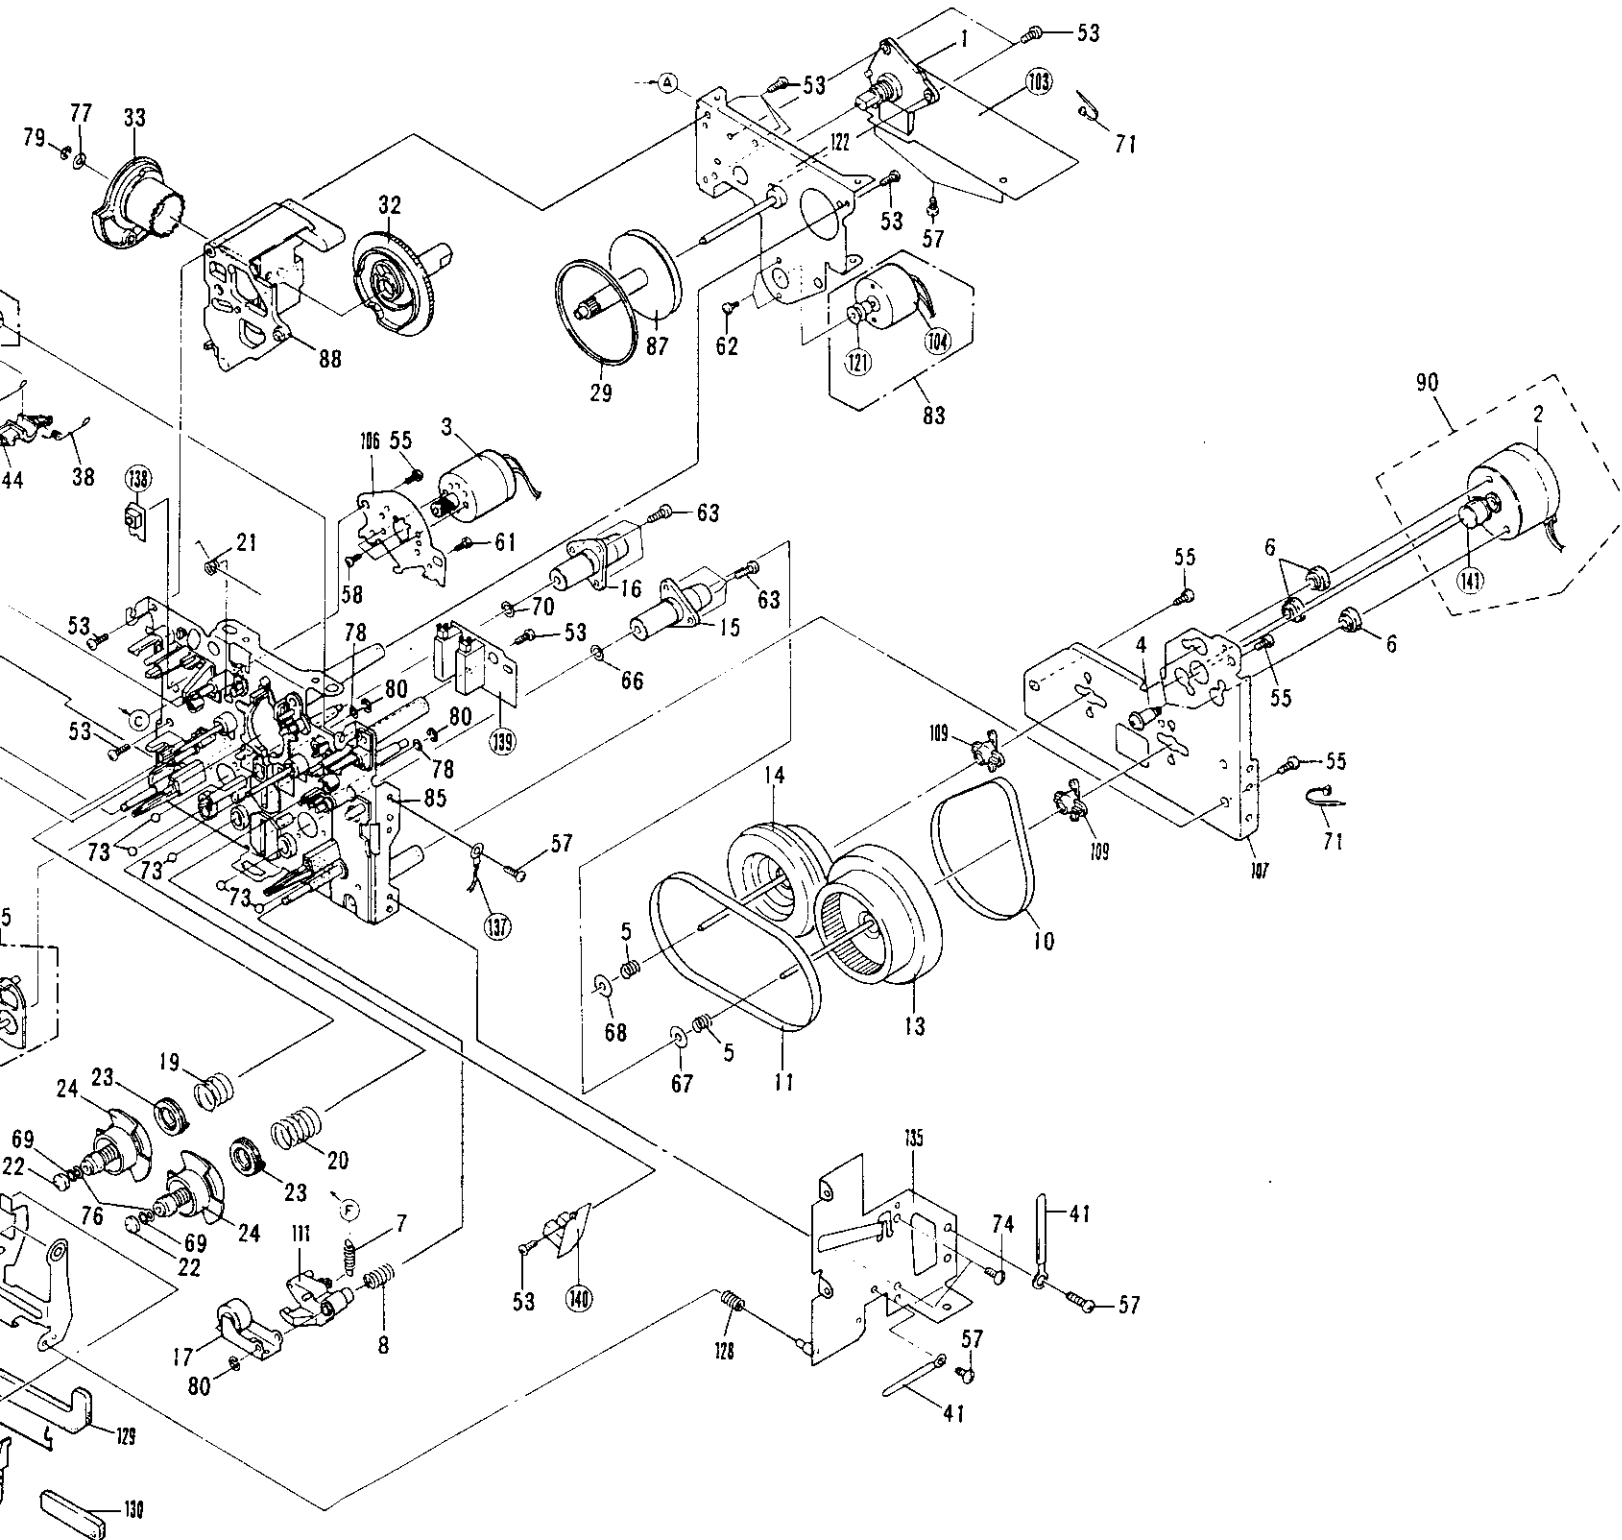


A

B

C

D

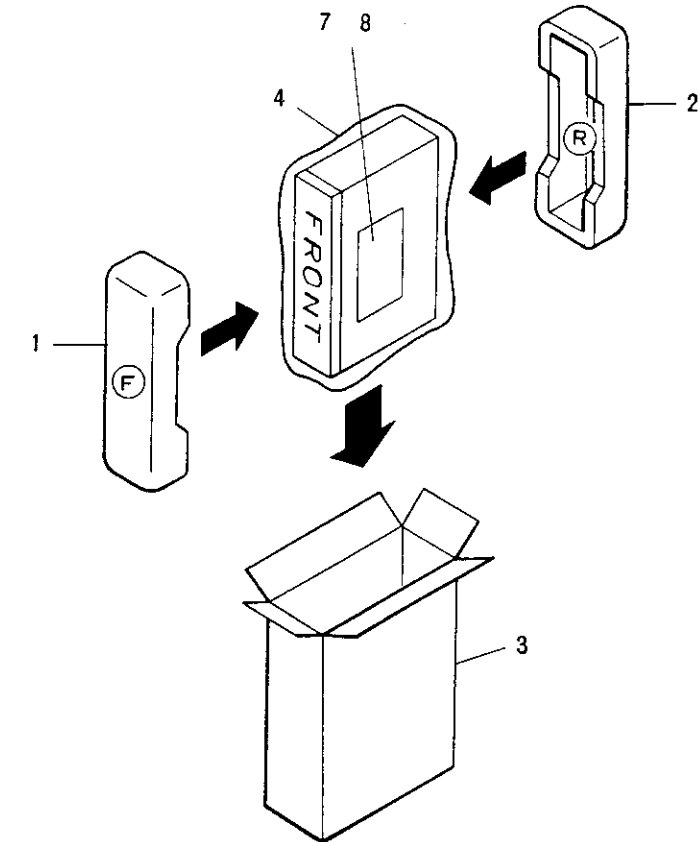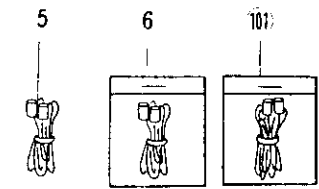


1. RESISTORS :

Indicated in Ω , 1/4W, 1/6W, $\pm 5\%$ tolerance unless otherwise noted k; k Ω , M; M Ω , (F); $\pm 1\%$, (G); $\pm 2\%$, (K); $\pm 10\%$, (M); $\pm 20\%$ tolerance.

2. CAPACITORS :

Indicated in capacity (μ F)/voltage (V) unless otherwise noted p; pF. Indication without voltage is 50V except electrolytic capacitor.

3. VOLTAGE CURRENT :

 : DC voltage (V) at no input signal.
← mA ; DC current at no input signal.

4. OTHERS :

→ ; Signal route.

⊙ ; Adjusting point.

The Δ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.

※ marked capacitors and resistors have parts numbers.

This is the basic schematic diagram, but the actual circuit may vary due to improvements in design.

5. SWITCHES (Underline indicates switch position)

OPERATION UNIT

S921 : OPEN/CLOSE

S922 : REW

S923 : TAPE RETURN

S924 : STOP

S925 : COUNTER

S926 : RESET

S927 : PLAY

S928 : METER RANGE

S929 : FF

S930 : PEAK MODE

S931 : REC

S932 : DISPLAY

S933 : MONITOR SELECT

S934 : PAUSE

S935 : SYNCHRO

S936 : REC/MUTE

S951 : DOLBY NR


B - OFF - C

S961 : SUPER AUTO BLE

POWER SW UNIT


S991 : ON - OFF

3. SCHEMATIC DIAGRAM

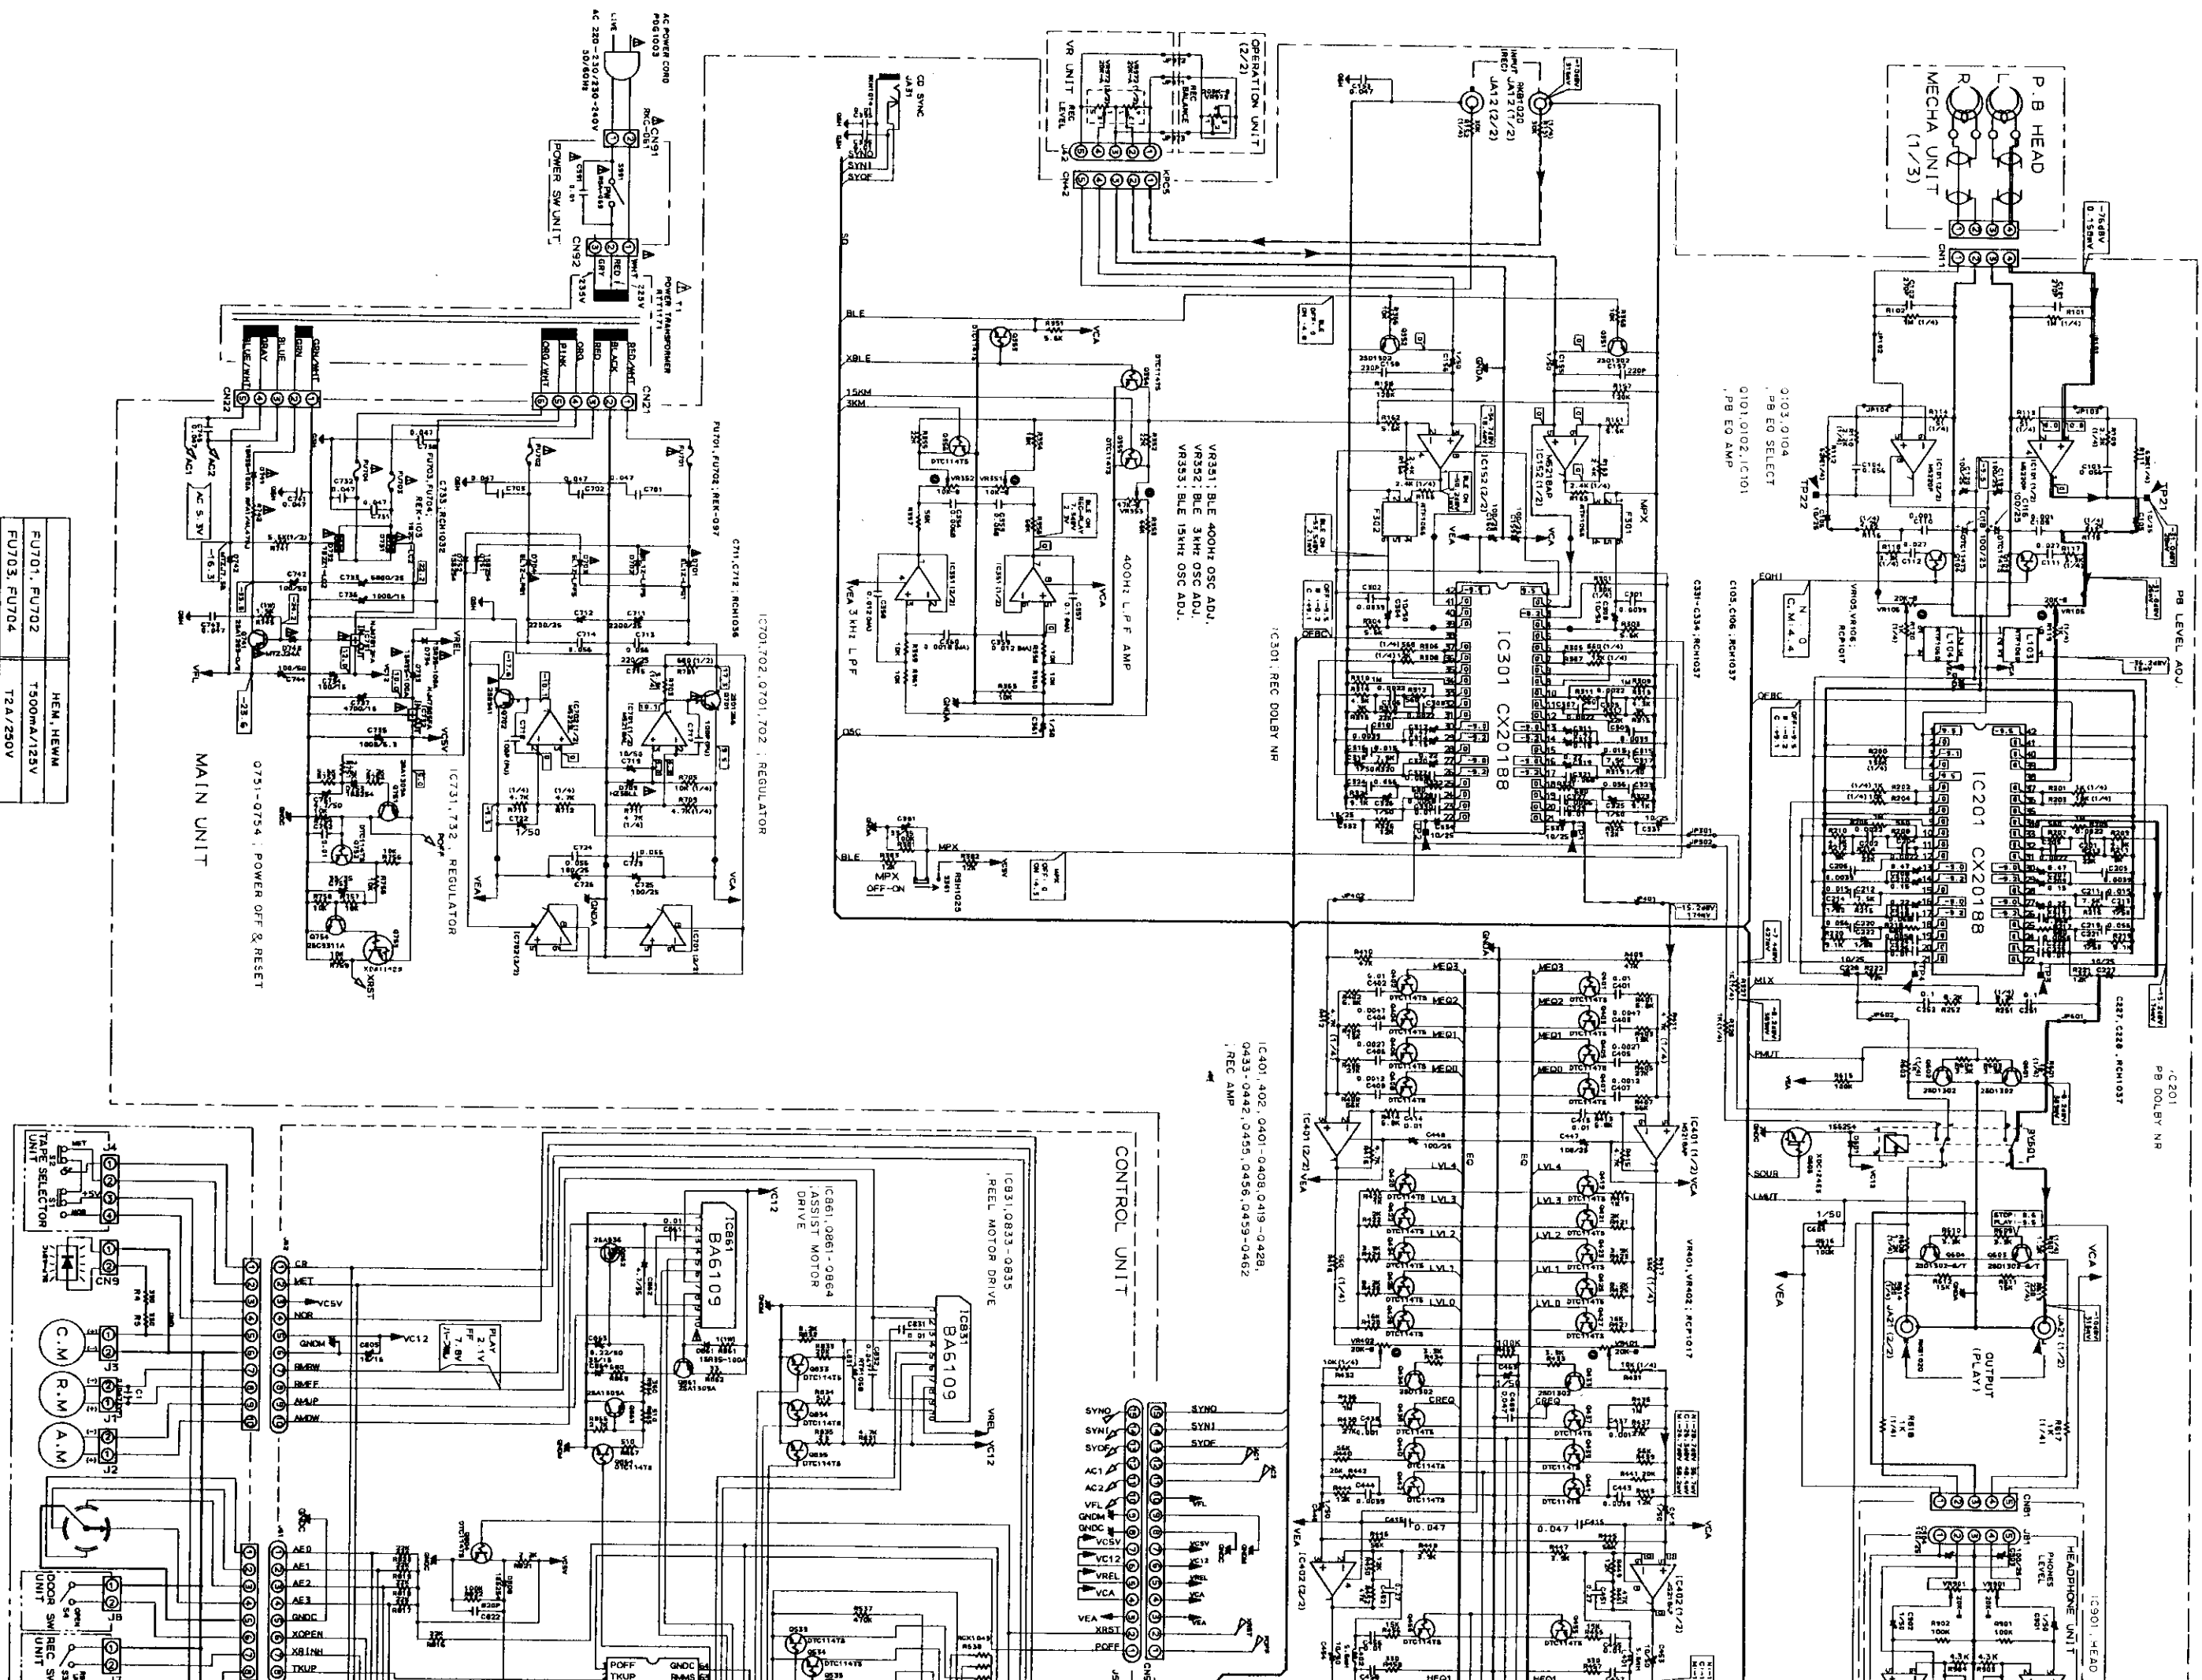


| | |
|--------------|------------|
| FU701, FU702 | HEM, HEWM |
| FU703, FU704 | T500MA/25V |
| | T2A/250V |

TO (1/2)


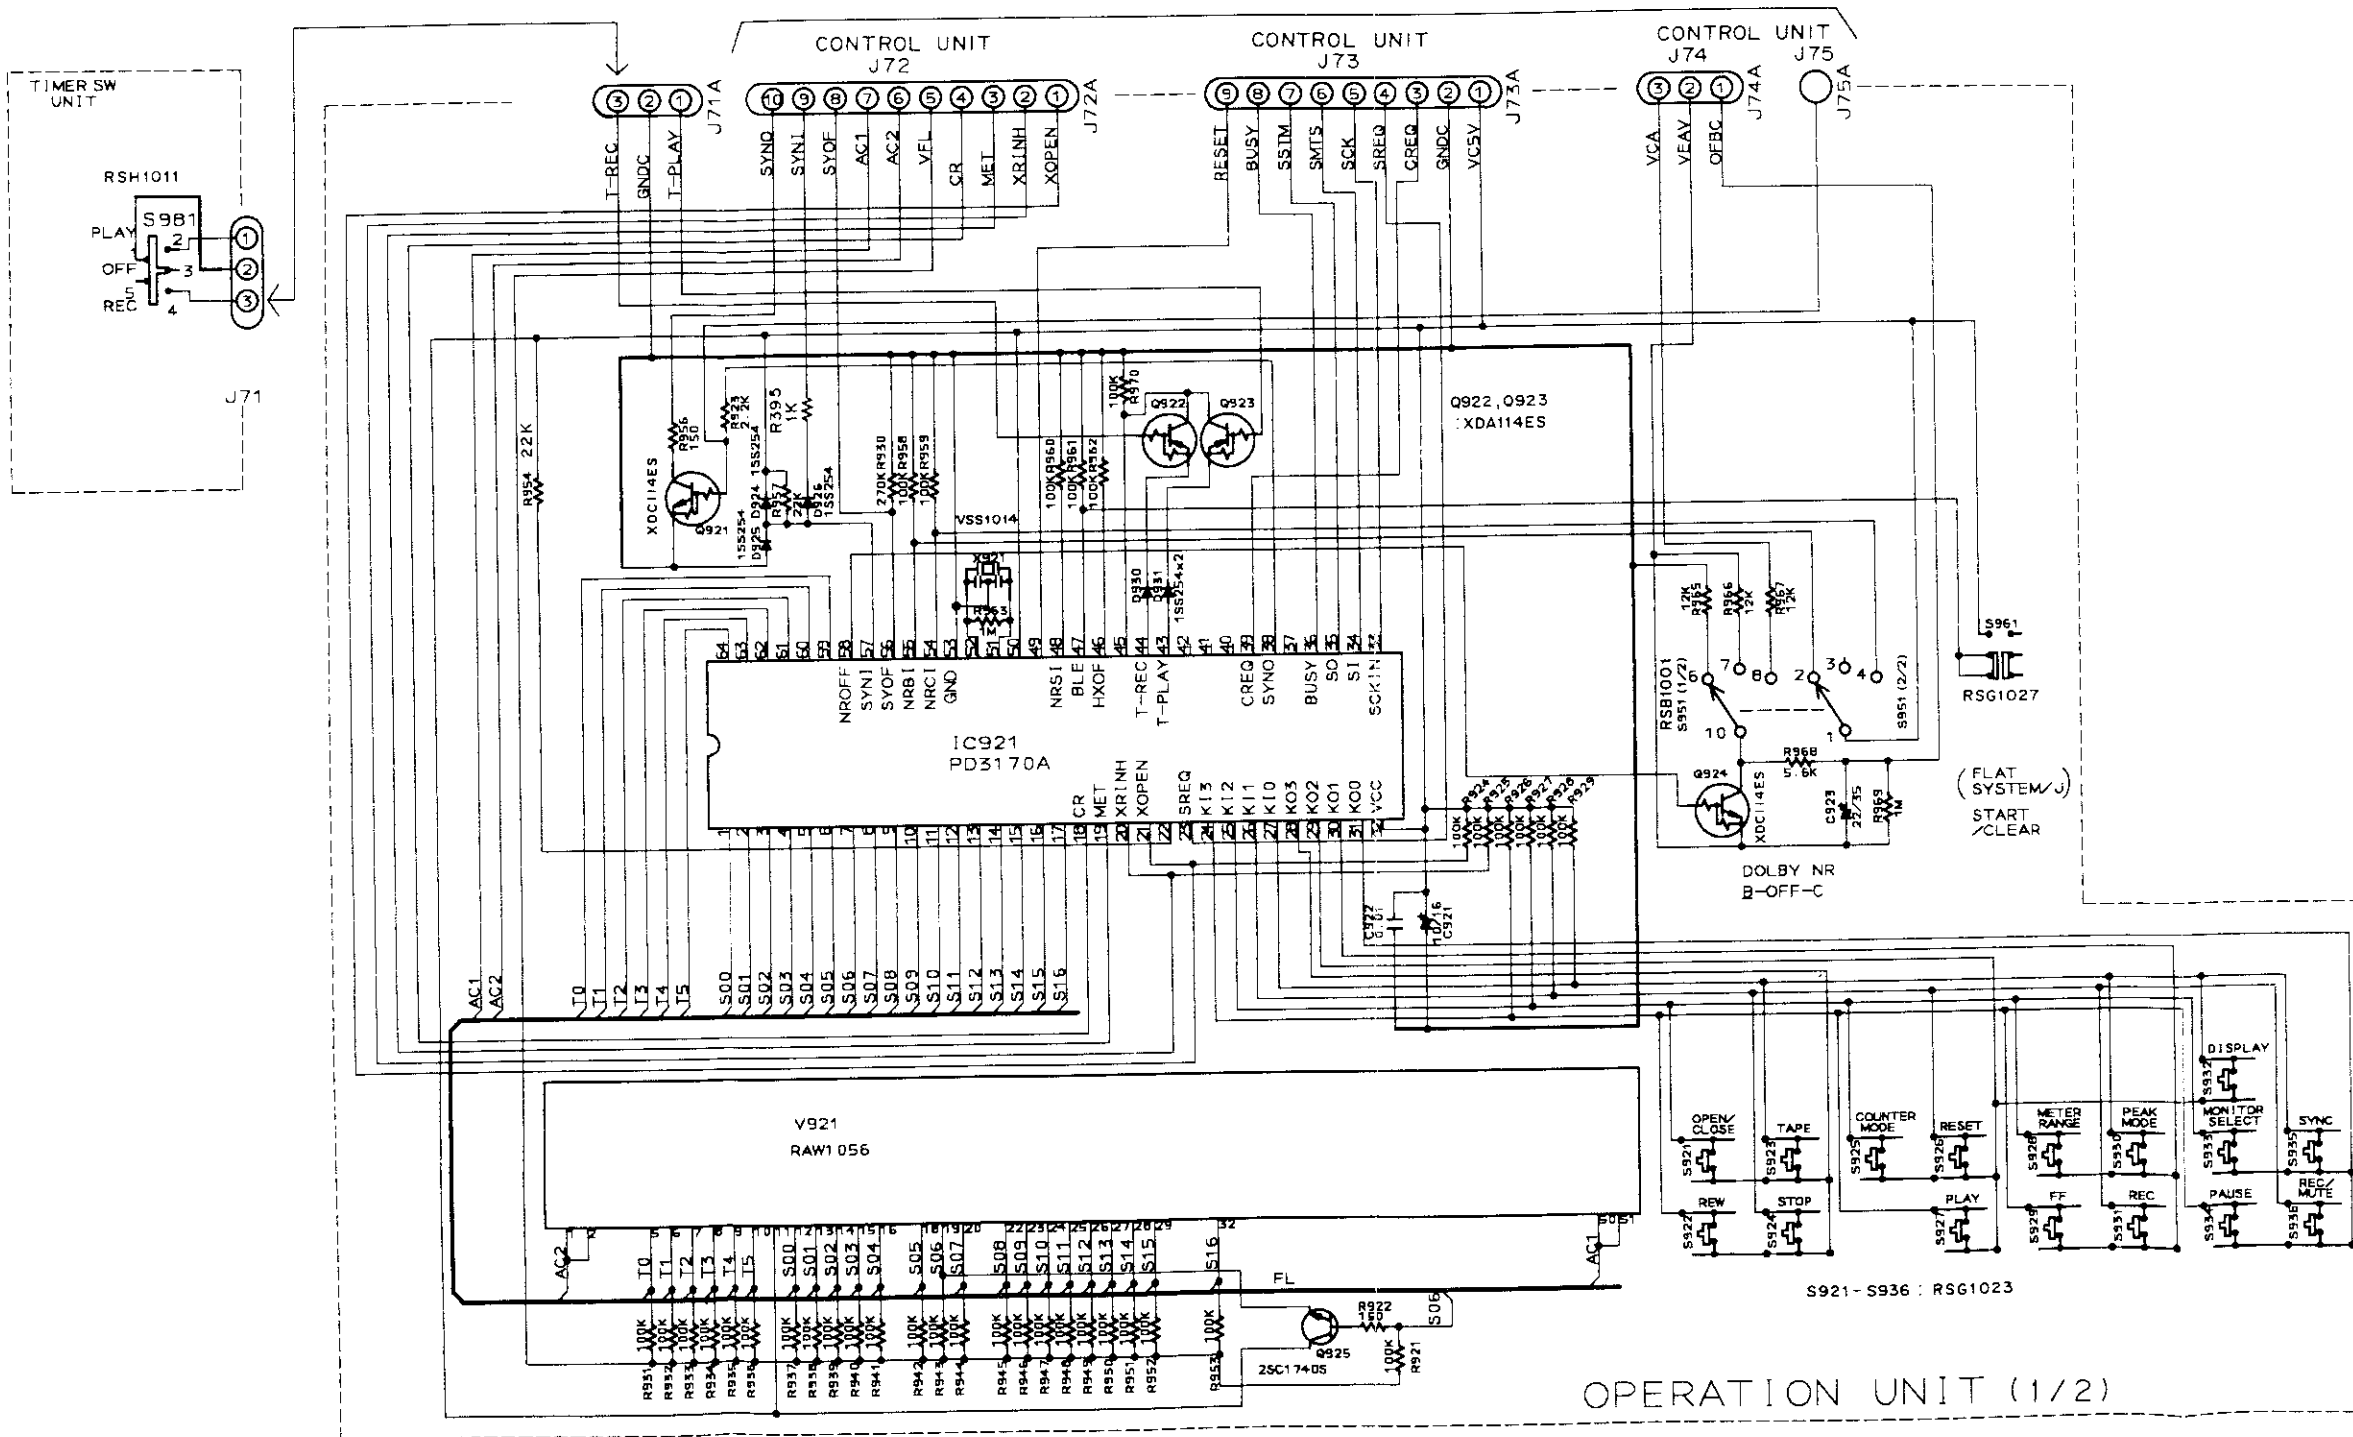


OPERATION UNIT (1/2)

4. P.C. BOARDS CONNECTION DIAGRAM

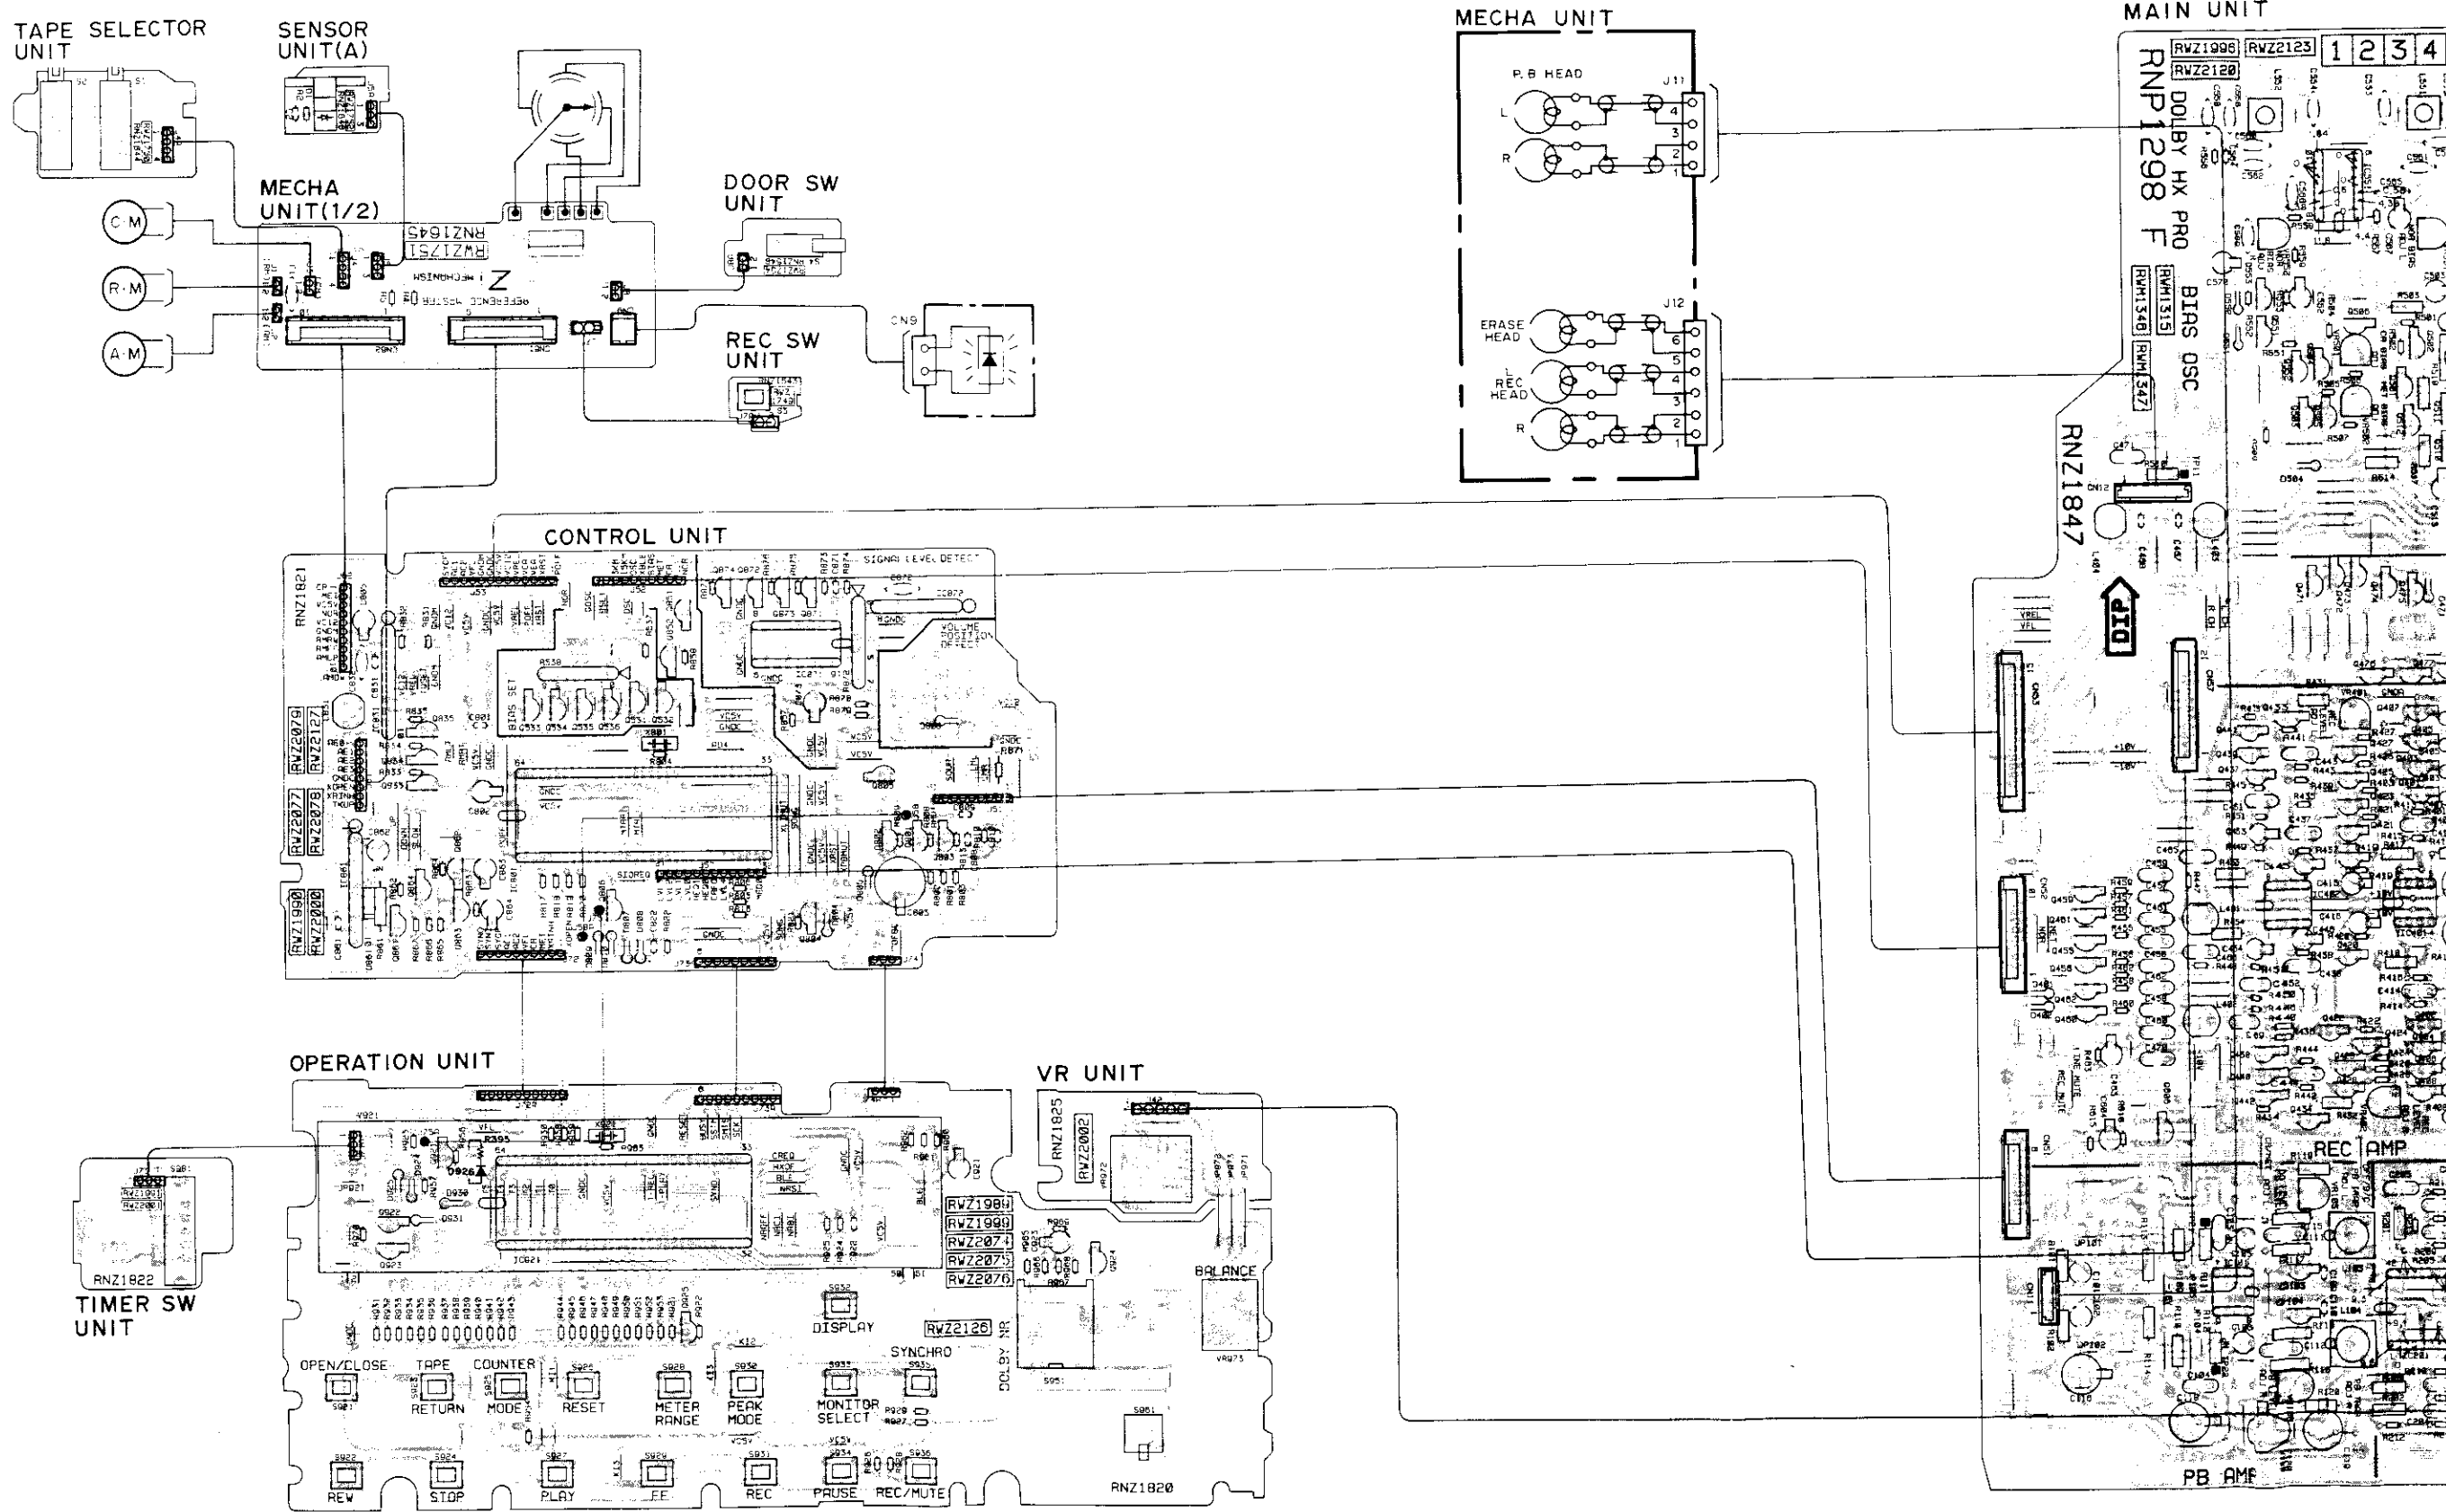

HEADPHONE UNIT

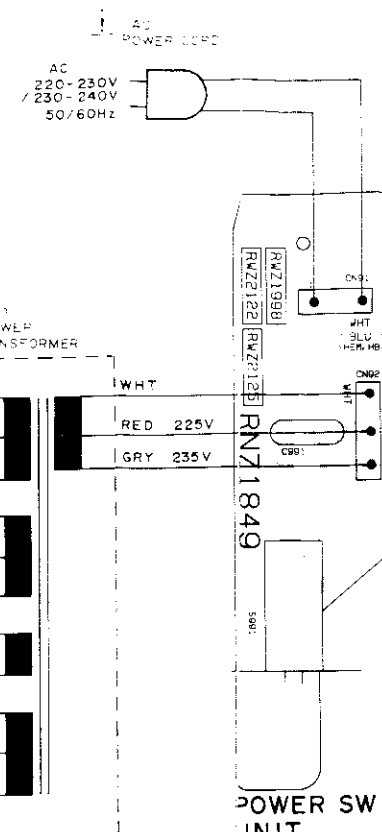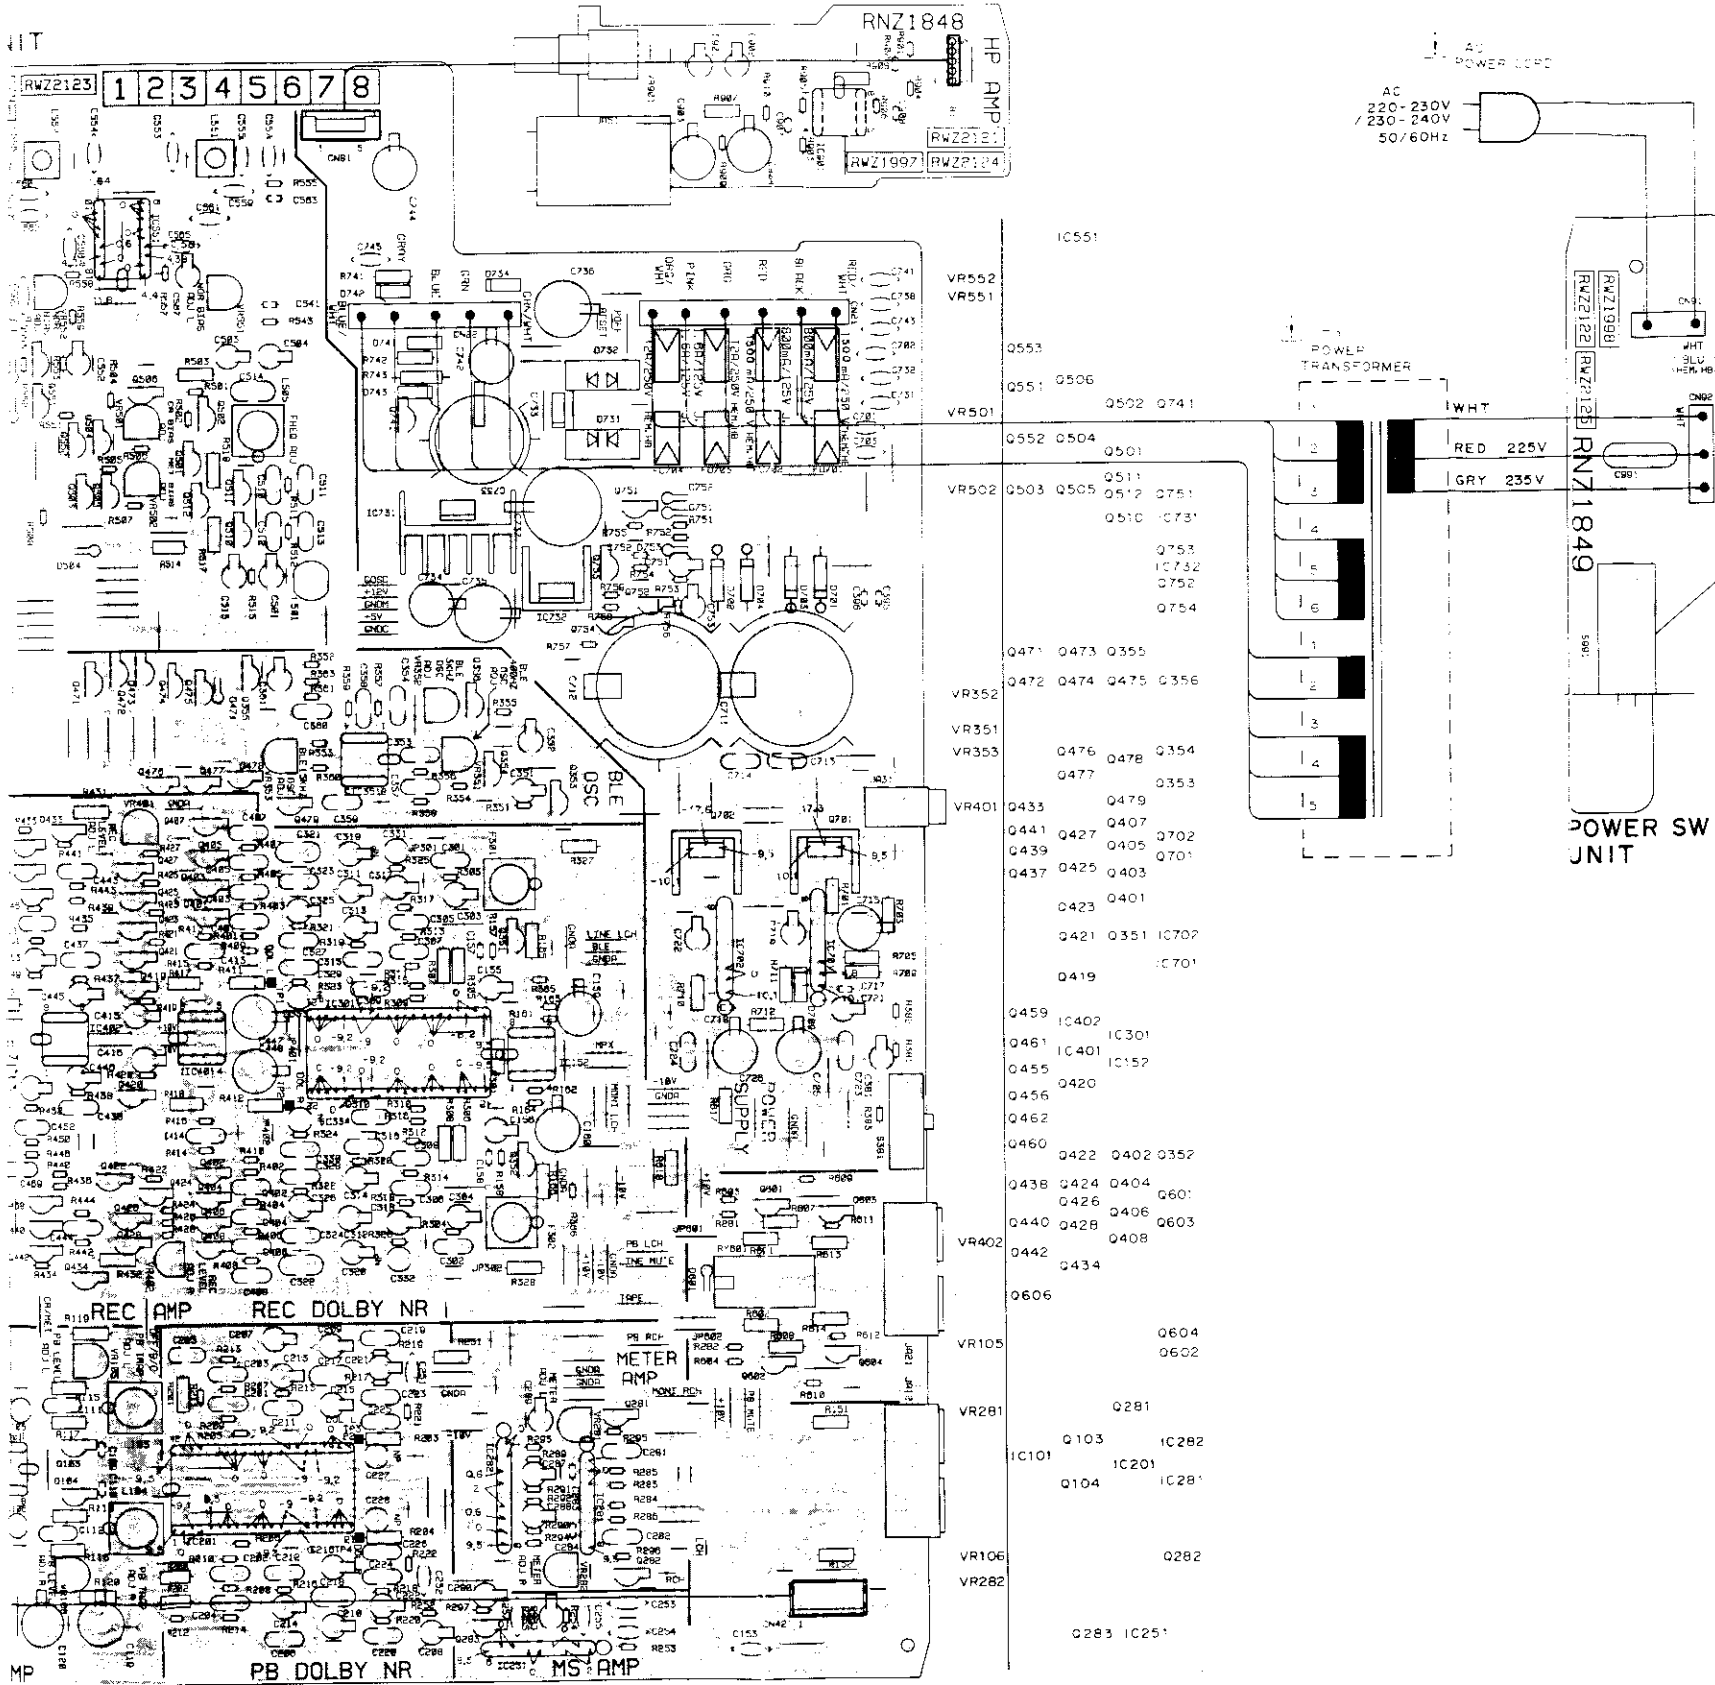

| PCB pattern diagram indication | Corresponding part symbol | Part name |
|--------------------------------|---------------------------|--|
| | | Transistor |
| | | SET |
| | | Diode |
| | | Zener diode |
| | | LED |
| | | Varactor |
| | | Tact switch |
| | | Inductor |
| | | Coil |
| | | Transformer |
| | | Fuse |
| | | Ceramic capacitor |
| | | Mica capacitor |
| | | Styro capacitor |
| | | Electrolytic capacitor (non-polarized) |
| | | Electrolytic capacitor (non-leakless) |
| | | Electrolytic capacitor (Polarized) |
| | | Electrolytic capacitor (Polarized) |
| | | Power capacitor |
| | | Semi-fixed capacitor |
| | | Resistor array |
| | | Resistor |
| | | Resistor |
| | | Thermistor |

1. This PCB connection diagram is viewed from the parts mounted side.
 2. The parts which have been mounted on the board can be replaced with those shown with the corresponding wiring symbols listed in the above Table.
 3. The capacitor terminal marked with shows negative terminal.
 4. The diode marked with shows cathode side.
 5. The transistor terminal marked with shows emitter.

A


B

C

D

4. P.C. BOARDS CONNECTION DIAGRAM

View from soldering side

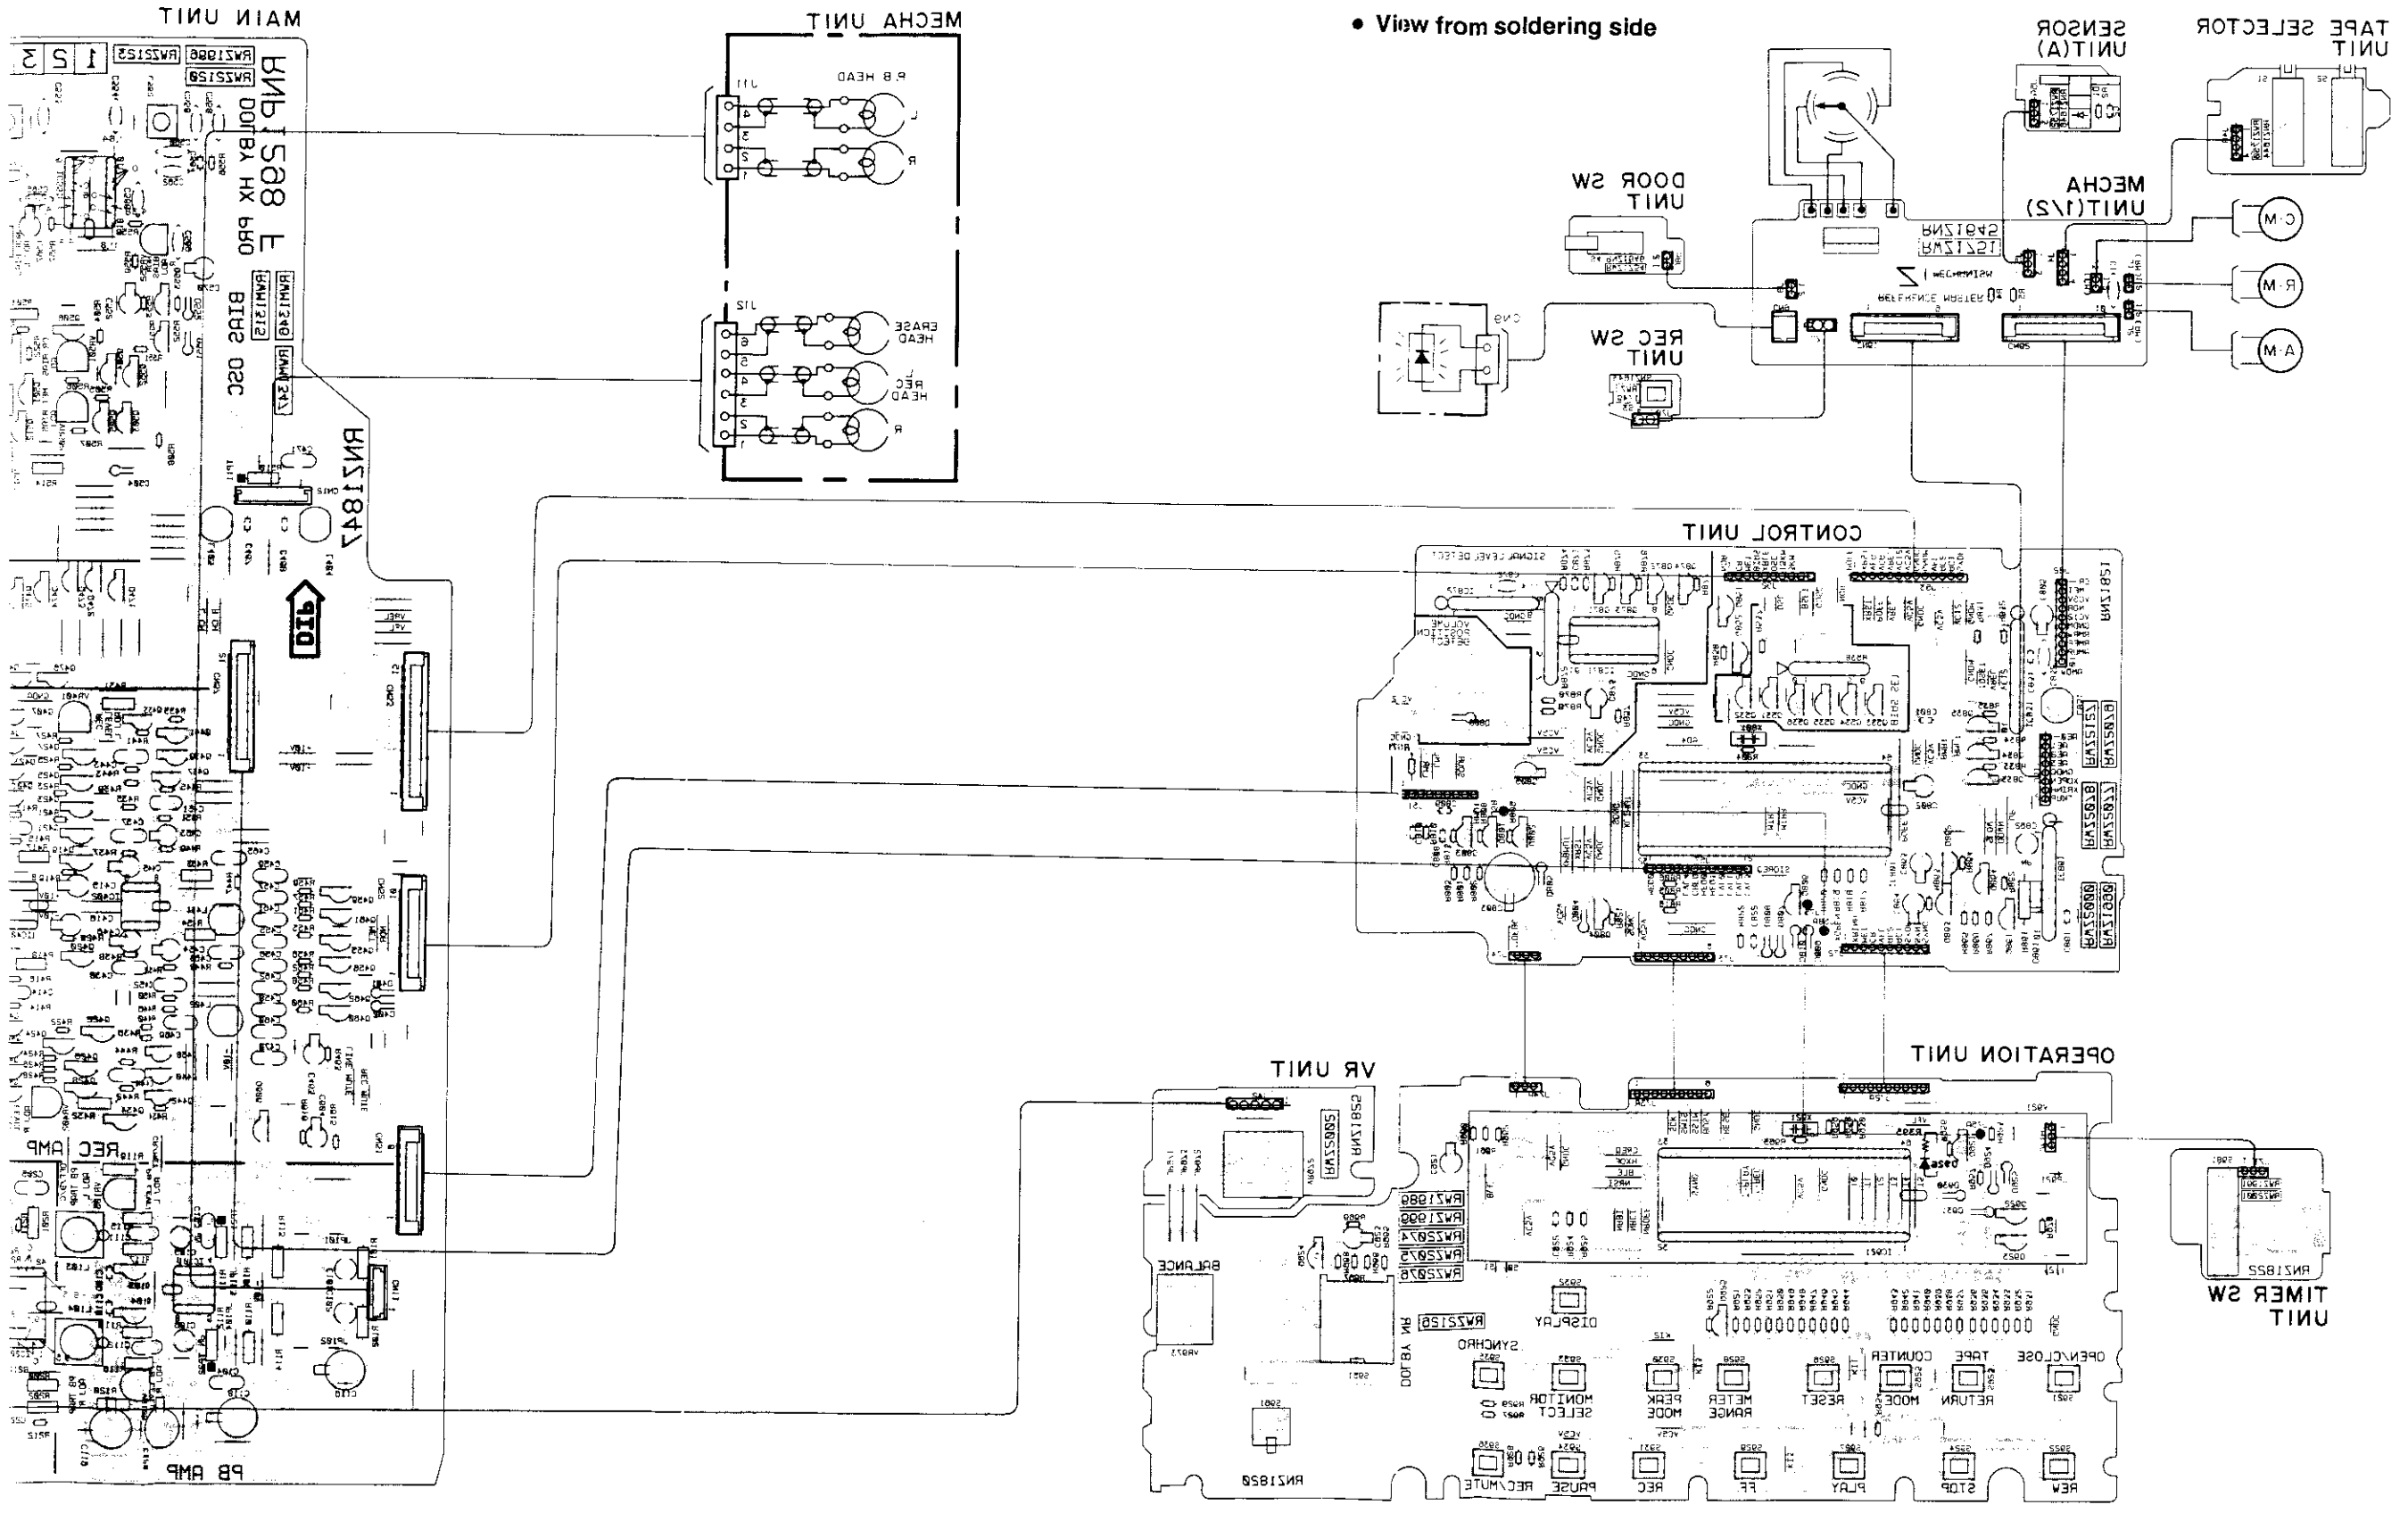

A
B
C
D

5. P.C.B's PARTS LIST

NOTES:

- Parts without part number cannot be supplied.
- Parts marked by "⊙" are not always kept in stock. Their delivery time may be longer than usual or they may be unavailable.
- The Δ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
- When ordering resistors, first convert resistance values into code form as shown in the following examples.

Ex.1 When there are 2 effective digits (any digit apart from 0), such as 560 ohm and 47k ohm (tolerance is shown by J=5%, and K=10%)

560 Ω → 56 × 10¹ → 561 RD1/4PS

| | | |
|---|---|---|
| 5 | 6 | 1 |
|---|---|---|

 J

47k Ω → 47 × 10³ → 473 RD1/4PS

| | | |
|---|---|---|
| 4 | 7 | 3 |
|---|---|---|

 J

0.5 Ω → 0R5 RN2H

| | | |
|---|---|---|
| 0 | R | 5 |
|---|---|---|

 K

1 Ω → 010 RSIP

| | | |
|---|---|---|
| 0 | 1 | 0 |
|---|---|---|

 K

Ex.2 When there are 3 effective digits (such as in high precision metal film resistors).

5.62k Ω → 562 × 10¹ → 5621 RN1/4SR

| | | | |
|---|---|---|---|
| 5 | 6 | 2 | 1 |
|---|---|---|---|

 F

| Mark | No. | Description | Part No. | Mark | No. | Description | Part No. |
|---------------------------|-----------|-------------------------|--------------|--------------------------------|-----|-------------|--------------|
| REC SW UNIT | | | | S951 | | | RSB1001 |
| SWITCHES | | | | S961 SWITCH | | | RSG1027 |
| | S3 | SWITCH | RSG-143 | CAPACITORS | | | |
| TAPE SELECTOR UNIT | | | | C921 ELECTR. CAPACITOR | | | CEAS100M16 |
| SWITCHES | | | | C922 CERAMIC CAPACITOR | | | CKPUYY103N16 |
| | S1, 2 | | RSH-070 | C923 ELECTR. CAPACITOR | | | CEAS220M35 |
| SENSOR UNIT(A) | | | | RESISTORS | | | |
| SEMICONDUCTORS | | | | R395 | | | RD1/6PM□□□J |
| | D1 | | GP1A51HR | R921-954 CARBONFILM RESISTOR | | | RD1/6PM□□□J |
| CAPACITORS | | | | R956-963 CARBONFILM RESISTOR | | | RD1/6PM□□□J |
| | C2 | CERAMIC CAPACITOR | CKPUYY103N16 | R965-970 CARBONFILM RESISTOR | | | RD1/6PM□□□J |
| RESISTORS | | | | VR973 VARIABLE RESISTOR (200K) | | | RCV1046 |
| | R2 | CARBONFILM RESISTOR | RD1/6PM□□□J | OTHERS | | | |
| TIMER SW UNIT) | | | | V921 | | | RAW1056 |
| SWITCHES | | | | X921 CERAMIC RESONATOR | | | VSS1014 |
| | S981 | | RSH1011 | CONTROL UNIT | | | |
| VR UNIT | | | | SEMICONDUCTORS | | | |
| RESISTORS | | | | IC801 MAIN CPU | | | PD4290C |
| | VR972 | VARIABLE RESISTOR (20K) | RCV1058 | IC831 IC | | | BA6109 |
| OPERATION UNIT | | | | IC861 IC | | | BA6109 |
| SEMICONDUCTORS | | | | IC871 LOGIC IC | | | CD4050B |
| | IC921 | | PD3170A | IC872 DUAL-COMPARATOR IC | | | M5233L |
| | Q921 | DIGITAL TRANSISTOR | XDC114ES | Q531-536 DIGITAL TRANSISTOR | | | DTC114TS |
| | Q922, 923 | DIGITAL TRANSISTOR | XDA114ES | Q801-803 DIGITAL TRANSISTOR | | | XDA114ES |
| | Q924 | DIGITAL TRANSISTOR | XDC114ES | Q804 DIGITAL TRANSISTOR | | | DTC114TS |
| | Q925 | TRANSISTOR | 2SC1740S | Q805 DIGITAL TRANSISTOR | | | XDA114ES |
| | | | | Q806 TRANSISTOR | | | DTC124TS |
| | D924-926 | DIODE | 1SS254 | Q833-835 DIGITAL TRANSISTOR | | | DTC114TS |
| | D930, 931 | DIODE | 1SS254 | Q851 DIGITAL TRANSISTOR | | | DTC114TS |
| SWITCHES | | | | Q852 DIGITAL TRANSISTOR | | | XDA114ES |
| | S921-936 | SWITCH | RSG1023 | Q861 TRANSISTOR | | | 2SA1309A |
| | | | | Q862 TRANSISTOR | | | 2SA936 |
| | | | | Q863 TRANSISTOR | | | 2SA1309A |
| | | | | Q864 DIGITAL TRANSISTOR | | | DTC114TS |
| | | | | Q871 DIGITAL TRANSISTOR | | | XDA114ES |
| | | | | Q872-874 DIGITAL TRANSISTOR | | | DTC114TS |

| Mark | No. | Description | Part No. | Mark | No. | Description | Part No. |
|---------------------------|-----|-------------------------------|--------------|------|-----|------------------------------|------------|
| | | D804-810 DIODE | 1SS254 | | | | |
| △ | | D861 RECTIFIER DIODE | 1SR35-100A | | | | |
| COILS/TRANSFORMERS | | | | | | | |
| | | L831 | RTF1068 | | | | |
| CAPACITORS | | | | | | | |
| | | C801 CERAMIC CAPACITOR | CKPUYY103N16 | | | Q281, 282 DIGITAL TRANSISTOR | DTC114TS |
| | | C802 ELECTR. CAPACITOR | CEAS101M10 | | | Q283 TRANSISTOR | XDC124ES |
| | | C803 ELECTR. CAPACITOR | CEAS102M6R3 | | | Q351, 352 TRANSISTOR | 2SD1302 |
| | | C805 ELECTR. CAPACITOR | CEAS100M16 | | | Q353-356 DIGITAL TRANSISTOR | DTC114TS |
| | | C808-810 AXIAL CAPACITOR | CKPUYB101K50 | | | Q401-408 DIGITAL TRANSISTOR | DTC114TS |
| | | C822 AXIAL CAPACITOR | CKPUYB821K50 | | | Q419-428 DIGITAL TRANSISTOR | DTC114TS |
| | | C831 CERAMIC CAPACITOR | CKPUYY103N16 | | | Q433, 434 TRANSISTOR | 2SD1302 |
| | | C832 CERAMIC CAPACITOR | CKCYF473Z50 | | | Q437-442 DIGITAL TRANSISTOR | DTC114TS |
| | | C861 CERAMIC CAPACITOR | CKPUYY103N16 | | | Q455, 456 DIGITAL TRANSISTOR | DTC114TS |
| | | C862 ELECTR. CAPACITOR | CEANP4R7M35 | | | Q459-462 DIGITAL TRANSISTOR | DTC114TS |
| | | C863 ELECTR. CAPACITOR | CEASR22M50 | | | Q471-479 DIGITAL TRANSISTOR | XDA114ES |
| | | C864 ELECTR. CAPACITOR | CEAS330M16 | | | Q501 TRANSISTOR | XDC124ES |
| | | C871 CERAMIC CAPACITOR | CKPUYY103N16 | | | Q502 TRANSISTOR | 2SA1283 |
| | | C872 CERAMIC CAPACITOR | CKCYF473Z50 | | | Q503-505 TRANSISTOR | XDC124ES |
| | | C873 ELECTR. CAPACITOR | CEAS100M16 | | | Q506 TRANSISTOR | 2SC3311A |
| RESISTORS | | | | | | Q510, 511 TRANSISTOR | 2SC3243 |
| | | R537 CARBONFILM RESISTOR | RD1/6PM□□□J | | | Q512 TRANSISTOR | 2SD1302 |
| | | R538 | RCX1043 | △ | | Q551 DIGITAL TRANSISTOR | XDA114ES |
| | | R801-810 CARBONFILM RESISTOR | RD1/6PM□□□J | △ | | Q552 TRANSISTOR | XDC124ES |
| | | R813 CARBONFILM RESISTOR | RD1/6PM□□□J | △ | | Q553 TRANSISTOR | 2SA1309A |
| | | R816-822 CARBONFILM RESISTOR | RD1/6PM□□□J | | | Q601-604 TRANSISTOR | 2SD1302 |
| | | R831-835 CARBONFILM RESISTOR | RD1/6PM□□□J | | | Q606 TRANSISTOR | XDC124ES |
| | | R857, 858 CARBONFILM RESISTOR | RD1/6PM□□□J | | | Q701 TRANSISTOR | 2SD1266 |
| | | R861 METAL OXIDE RESISTOR | RS1LMF□□□J | | | Q702 TRANSISTOR | 2SB941 |
| | | R862-867 CARBONFILM RESISTOR | RD1/6PM□□□J | | | Q741 TRANSISTOR | 2SA1283 |
| | | R872 (10K) | RCX1042 | | | Q751 TRANSISTOR | 2SA1309A |
| | | R873-876 METALFILM RESISTOR | RN1/6PQ□□□□F | | | Q752 DIGITAL TRANSISTOR | DTC114TS |
| | | R877-879 CARBONFILM RESISTOR | RD1/6PM□□□J | | | Q753 DIGITAL TRANSISTOR | XDA114ES |
| OTHERS | | | | | | Q754 TRANSISTOR | 2SC3311A |
| | | X801 CERAMIC RESONATOR | VSS1014 | △ | | D401, 402 DIODE | 1SS254 |
| MAIN UNIT | | | | | | D471 DIODE | 1SS254 |
| SEMICONDUCTORS | | | | | | D504 DIODE | 1SS254 |
| | | IC101 OP-AMP-IC | M5220P | | | D551, 552 DIODE | 1SS254 |
| | | IC152 OP-AMP, IC | M5218AP | | | D601 DIODE | 1SS254 |
| | | IC201 DOLBY-B, C IC | CX20188 | | | D701 DIODE | EL1Z-LFG1 |
| | | IC251 IC | BA335 | | | D702, 703 DIODE | EL1Z-LFF5 |
| | | IC281 OP-AMP IC | XRA15218N | △ | | D704 DIODE | EL1Z-LFG1 |
| | | IC282 | BA6138 | △ | | D709 ZENER DIODE | HZ5BL |
| | | IC301 DOLBY-B, C IC | CX20188 | △ | | D731 POWER DIODE | 1B2C1-LC2 |
| | | IC351 OP-AMP IC | XRA15218 | △ | | D732 POWER DIODE | 1B2Z1-LC2 |
| | | IC401, 402 OP-AMP, IC | M5218AP | | | D733, 734 RECTIFIER DIODE | 1SR35-100A |
| | | IC551 DOLBY HX PRO IC | UPC1297CA | △ | | D741 RECTIFIER DIODE | 1SR35-100A |
| | | IC701 OP-AMP, IC | M5218AL | | | D742 ZENER DIODE | MTZJ7.5B |
| | | IC702 OP-AMP IC | M5223L | | | D743 ZENER DIODE | MTZJ24A |
| △ | | IC731 REGULATOR IC | NJM7812FA | | | D751-753 DIODE | 1SS254 |
| △ | | IC732 REGULATOR IC | NJM7805FA | | | SWITCHES | |
| | | Q103, 104 DIGITAL TRANSISTOR | DTC114TS | | | S381 | RSH1025 |
| | | | | | | RELAYS | |
| | | | | | | RY601 | RSR1016 |
| | | | | | | COILS/TRANSFORMERS | |
| | | | | | | L103, 104 COIL | RTF1060 |
| | | | | | | L401, 402 COIL | RTF1022 |
| | | | | | | L403, 404 | RTF1017 |

| Mark | No. | Description | Part No. | Mark | No. | Description | Part No. |
|-------------------|-----------|----------------------------|--------------|------|-----------|----------------------|--------------|
| | L501 | | RTF1160 | | C358, 359 | MYLOR FILM CAPACITOR | CQMA123J50 |
| | L505 | | RTD1057 | | C360 | MYLOR FILM CAPACITOR | CQMA182J50 |
| | L551, 552 | | RTD1011 | | C361 | ELECTR. CAPACITOR | CEAS010M50 |
| | F301, 302 | FILTER | RTF1066 | | C381 | ELECTR. CAPACITOR | CEAS330M35 |
| | | | | | C395, 396 | CERAMIC CAPACITOR | CKPUYF103Z25 |
| CAPACITORS | | | | | | | |
| | C101, 102 | PL. STYRENE CAPACITOR | CQSF271J50 | | C401, 402 | AUDIO FILM CAPACITOR | CFTXA103J50 |
| | C103, 104 | AUDIO FILM CAPACITOR | CFTXA563J50 | | C403, 404 | AUDIO FILM CAPACITOR | CFTXA472J50 |
| | C105, 106 | (10/25) | RCH1037 | | C405, 406 | AUDIO FILM CAPACITOR | CFTXA272J50 |
| | C109, 110 | CERAMIC CAPACITOR | CKPUYB102K50 | | C407, 408 | AUDIO FILM CAPACITOR | CFTXA122J50 |
| | C111, 112 | AUDIO FILM CAPACITOR | CFTXA273J50 | | C413, 414 | AUDIO FILM CAPACITOR | CFTXA103J50 |
| | C116 | (100/25) | PCH1076 | | C415, 416 | AUDIO FILM CAPACITOR | CFTXA473J50 |
| | C118-120 | (100/25) | PCH1076 | | C437, 438 | AUDIO FILM CAPACITOR | CFTXA102J50 |
| | C153 | CERAMIC CAPACITOR | CKCYF473Z50 | | C443, 444 | AUDIO FILM CAPACITOR | CFTXA392J50 |
| | C155, 156 | ELECTR. CAPACITOR | CEYA010M50 | | C445, 446 | ELECTR. CAPACITOR | CEYA010M50 |
| | C157, 158 | AXIAL CAPACITOR | CKPUYB221K50 | | C447, 448 | (100/25) | PCH1076 |
| | C159, 160 | ELECTR. CAPACITOR (100/25) | PCH1076 | | C451, 452 | AUDIO FILM CAPACITOR | CFTXA274J50 |
| | C201-204 | AUDIO FILM CAPACITOR | CFTXA222J50 | | C453, 454 | ELECTR. CAPACITOR | CEYA100M50 |
| | C205, 206 | AUDIO FILM CAPACITOR | CFTXA392J50 | | C455, 456 | AUDIO FILM CAPACITOR | CFTXA103J50 |
| | C207, 208 | ELECTR. CAPACITOR | CEASR47M50 | | C457, 458 | AUDIO FILM CAPACITOR | CFTXA562J50 |
| | C209, 210 | ELECTR. CAPACITOR | CEASR15M50 | | C459, 460 | AUDIO FILM CAPACITOR | CFTXA472J50 |
| | C211, 212 | AUDIO FILM CAPACITOR | CFTXA153J50 | | C461, 462 | AUDIO FILM CAPACITOR | CFTXA332J50 |
| | C213, 214 | ELECTR. CAPACITOR | CEYA010M50 | | C463 | ELECTR. CAPACITOR | CEAS010M50 |
| | C215, 216 | ELECTR. CAPACITOR | CEASR22M50 | | C465, 466 | AUDIO FILM CAPACITOR | CFTXA222J50 |
| | C217, 218 | AUDIO FILM CAPACITOR | CFTXA683J50 | | C467, 468 | CERAMIC CAPACITOR | CKPUYB102K50 |
| | C219, 220 | AUDIO FILM CAPACITOR | CFTXA563J50 | | C469-471 | AUDIO FILM CAPACITOR | CFTXA473J50 |
| | C221, 222 | ELECTR. CAPACITOR | CEYA010M50 | | C501 | ELECTR. CAPACITOR | CEAS101M16 |
| | C223, 224 | AUDIO FILM CAPACITOR | CFTXA562J50 | | C503, 504 | ELECTR. CAPACITOR | CEAS330M35 |
| | C225, 226 | AUDIO FILM CAPACITOR | CFTXA103J50 | | C510 | AUDIO FILM CAPACITOR | CFTXA223J50 |
| | C227, 228 | (10/25) | RCH1037 | | C511 | AUDIO FILM CAPACITOR | CFTXA332J50 |
| | C251, 252 | AUDIO FILM CAPACITOR | CFTXA104J50 | | C512 | AUDIO FILM CAPACITOR | CFTXA682J50 |
| | C253 | AUDIO FILM CAPACITOR | CFTXA473J50 | | C513 | AUDIO FILM CAPACITOR | CFTXA332J50 |
| | C254, 255 | AUDIO FILM CAPACITOR | CFTXA104J50 | | C514 | CAPACITOR | CQPA752J100 |
| | C256 | ELECTR. CAPACITOR | CEASR47M50 | | C515 | ELECTR. CAPACITOR | CEAS330M35 |
| | C257 | AUDIO FILM CAPACITOR | CFTXA473J50 | | C541 | AXIAL CAPACITOR | CKPUYB101K50 |
| | C281, 282 | AUDIO FILM CAPACITOR | CFTXA563J50 | | C552 | ELECTR. CAPACITOR | CEAS101M16 |
| | C283, 284 | AXIAL CERAMIC C. | CCPUSL470J50 | | C553, 554 | CERAMIC CAPACITOR | CKCYF473Z50 |
| | C287-290 | ELECTR. CAPACITOR | CEAS47M50 | | C555, 556 | (390P/500) | RCG1004 |
| | C301, 302 | AUDIO FILM CAPACITOR | CFTXA392J50 | | C557, 558 | CERAMIC CAPACITOR | CCCSL101K500 |
| | C303, 304 | ELECTR. CAPACITOR | CEYA100M50 | | C559-562 | CERAMIC CAPACITOR | GCYX223K25 |
| | C305-308 | AUDIO FILM CAPACITOR | CFTXA222J50 | | C563, 564 | AXIAL CAPACITOR | CKPUYB821K50 |
| | C309, 310 | AUDIO FILM CAPACITOR | CFTXA392J50 | | C565, 566 | CERAMIC CAPACITOR | GCYX103K25 |
| | C311, 312 | ELECTR. CAPACITOR | CEASR47M50 | | C567 | ELECTR. CAPACITOR | CEAS330M35 |
| | C313, 314 | ELECTR. CAPACITOR | CEASR15M50 | | C569 | CERAMIC CAPACITOR | CKCYF473Z50 |
| | C315, 316 | AUDIO FILM CAPACITOR | CFTXA153J50 | | C570 | ELECTR. CAPACITOR | CEAS010M50 |
| | C317, 318 | ELECTR. CAPACITOR | CEYA010M50 | | C604 | ELECTR. CAPACITOR | CEAS010M50 |
| | C319, 320 | ELECTR. CAPACITOR | CEASR22M50 | | C701-703 | CERAMIC CAPACITOR | CKCYF473Z50 |
| | C321, 322 | AUDIO FILM CAPACITOR | CFTXA683J50 | | C711, 712 | ELECTR. CAPACITOR | RCH1036 |
| | C323, 324 | AUDIO FILM CAPACITOR | CFTXA563J50 | | C713, 714 | AUDIO FILM CAPACITOR | CFTXA563J50 |
| | C325, 326 | ELECTR. CAPACITOR | CEYA010M50 | | C715 | ELECTR. CAPACITOR | CEAS221M25 |
| | C327, 328 | AUDIO FILM CAPACITOR | CFTXA562J50 | | C717, 718 | AXIAL CAPACITOR | CKPUYB101K50 |
| | C329, 330 | AUDIO FILM CAPACITOR | CFTXA103J50 | | C719 | ELECTR. CAPACITOR | CEYA100M50 |
| | C331-334 | (10/25) | RCH1037 | | C722 | ELECTR. CAPACITOR | CEYA010M50 |
| | C353 | AUDIO FILM CAPACITOR | CFTXA683J50 | | C723, 724 | AUDIO FILM CAPACITOR | CFTXA563J50 |
| | C354 | AUDIO FILM CAPACITOR | CFTXA682J50 | | C725, 726 | (100/25) | PCH1076 |
| | C357 | MYLOR FILM CAPACITOR | CQMA104J50 | | C731, 732 | CERAMIC CAPACITOR | CKCYF473Z50 |

| Mark | No. | Description | Part No. | Mark | No. | Description | Part No. |
|------------------|------------------------|---------------------|--------------|------------------------|--------------------|-------------------------|--------------|
| | C733 (6800/25) | | RCH1032 | | R543 | CARBONFILM RESISTOR | RD1/6PM□□□J |
| | C734 ELECTR. CAPACITOR | | CEAS101M16 | | R551-553 | CARBONFILM RESISTOR | RD1/6PM□□□J |
| | C735 ELECTR. CAPACITOR | | CEAS102M6R3 | | R555-559 | CARBONFILM RESISTOR | RD1/6PM□□□J |
| | C736 ELECTR. CAPACITOR | | CEAS102M16 | | R601, 602 | CARBONFILM RESISTOR | RD1/4PM□□□J |
| | C737 ELECTR. CAPACITOR | | CEAS472M16 | | R603, 604 | CARBONFILM RESISTOR | RD1/6PM□□□J |
| | C738 CERAMIC CAPACITOR | | CKCYF473Z50 | | R607, 608 | CARBONFILM RESISTOR | RD1/4PM□□□J |
| | C741 CERAMIC CAPACITOR | | CKCYF473Z50 | | R609-612 | CARBONFILM RESISTOR | RD1/6PM□□□J |
| | C742 ELECTR. CAPACITOR | | CEAS101M50 | | R613, 614 | CARBONFILM RESISTOR | RD1/4PM□□□J |
| | C743 CERAMIC CAPACITOR | | CKCYF473Z50 | | R615, 616 | CARBONFILM RESISTOR | RD1/6PM□□□J |
| | C744 ELECTR. CAPACITOR | | CEAS101M50 | | R617, 618 | CARBONFILM RESISTOR | RD1/4PM□□□J |
| | C745 CERAMIC CAPACITOR | | CKCYF473Z50 | | R701 | CARBONFILM RESISTOR | RD1/2PMF□□□J |
| | C751 ELECTR. CAPACITOR | | CEAS4R7M50 | | R703 | CARBONFILM RESISTOR | RD1/4PM□□□J |
| | C752 CERAMIC CAPACITOR | | CKPUYF103Z25 | | R705 | CARBONFILM RESISTOR | RD1/4PM□□□J |
| | C753 ELECTR. CAPACITOR | | CEAS330M35 | | R709-712 | CARBONFILM RESISTOR | RD1/4PM□□□J |
| | | | | | R741 | CARBONFILM RESISTOR | RD1/2PMF□□□J |
| RESISTORS | | | | | | | |
| | R101, 102 | CARBONFILM RESISTOR | RD1/4PM□□□J | △ | R742 | FUSIBLE RESISTOR | RFA1/4L□□□J |
| | R109-120 | CARBONFILM RESISTOR | RD1/4PM□□□J | | R743 | METAL OXIDE RESISTOR | RS1LMF□□□J |
| | R151, 152 | CARBONFILM RESISTOR | RD1/4PM□□□J | | R751-759 | CARBONFILM RESISTOR | RD1/6PM□□□J |
| | R157, 158 | CARBONFILM RESISTOR | RD1/6PM□□□J | | VR105, 106 (20K) | | RCP1017 |
| | R161-164 | CARBONFILM RESISTOR | RD1/6PM□□□J | | VR281, 282 | VR | VRTB6VS223 |
| | R165, 166 | CARBONFILM RESISTOR | RD1/4PM□□□J | | VR351, 352 | SEMI-FIXED RESISTOR | VRTB6VS103 |
| | R200-204 | CARBONFILM RESISTOR | RD1/4PM□□□J | | VR353 | VR | VRTB6VS473 |
| | R205-222 | CARBONFILM RESISTOR | RD1/6PM□□□J | | VR401, 402 (20K) | | RCP1017 |
| | R251 | CARBONFILM RESISTOR | RD1/4PM□□□J | | VR501 | VR | VRTB6VS222 |
| | R252-255 | CARBONFILM RESISTOR | RD1/6PM□□□J | | VR502 | VR | VRTB6VS223 |
| | R281-286 | CARBONFILM RESISTOR | RD1/6PM□□□J | | VR551, 552 | VR | VRTB6VS473 |
| | R289-297 | CARBONFILM RESISTOR | RD1/6PM□□□J | | | | |
| | R301 | CARBONFILM RESISTOR | RD1/4PM□□□J | OTHERS | | | |
| | R303, 304 | CARBONFILM RESISTOR | RD1/6PM□□□J | | JA12 | JACK | RKB1020 |
| | R305-308 | CARBONFILM RESISTOR | RD1/4PM□□□J | | JA21 | JACK | RKB1020 |
| | R309-326 | CARBONFILM RESISTOR | RD1/6PM□□□J | | JA31 | JACK | RKN1014 |
| | R327, 328 | CARBONFILM RESISTOR | RD1/4PM□□□J | HEAD PHONE UNIT | | | |
| | R351-361 | CARBONFILM RESISTOR | RD1/6PM□□□J | SEMICONDUCTORS | | | |
| | R363 | CARBONFILM RESISTOR | RD1/6PM□□□J | | IC901 | OP-AMP, IC | M5218AP |
| | R365, 366 | CARBONFILM RESISTOR | RD1/6PM□□□J | CAPACITORS | | | |
| | R381-383 | CARBONFILM RESISTOR | RD1/6PM□□□J | | C901, 902 | ELECTR. CAPACITOR | CEYA010M50 |
| | R395 | CARBONFILM RESISTOR | RD1/6PM□□□J | | C903, 904 (100/25) | | PCH1076 |
| | R401-410 | CARBONFILM RESISTOR | RD1/6PM□□□J | | C907, 908 | AXIAL CAPACITOR | CKPUYB221K50 |
| | R411, 412 | CARBONFILM RESISTOR | RD1/4PM□□□J | RESISTORS | | | |
| | R413-416 | CARBONFILM RESISTOR | RD1/6PM□□□J | | R901-906 | CARBONFILM RESISTOR | RD1/6PM□□□J |
| | R417, 418 | CARBONFILM RESISTOR | RD1/4PM□□□J | | R907, 908 | CARBONFILM RESISTOR | RD1/4PM□□□J |
| | R419-428 | CARBONFILM RESISTOR | RD1/6PM□□□J | | R909, 910 | CARBONFILM RESISTOR | RD1/6PM□□□J |
| | R431, 432 | CARBONFILM RESISTOR | RD1/4PM□□□J | | VR901 | VARIABLE RESISTOR (20K) | RCV1043 |
| | R433-452 | CARBONFILM RESISTOR | RD1/6PM□□□J | OTHERS | | | |
| | R453, 454 | CARBONFILM RESISTOR | RD1/4PM□□□J | | JA51 | JACK | RKN1019 |
| | R455-463 | CARBONFILM RESISTOR | RD1/6PM□□□J | POWER SW UNIT | | | |
| | R501, 502 | CARBONFILM RESISTOR | RD1/6PM□□□J | SWITCHES | | | |
| | R503 | CARBONFILM RESISTOR | RD1/2PMF□□□J | | △ S991 | SWITCH | RSA-063 |
| | R504, 505 | CARBONFILM RESISTOR | RD1/6PM□□□J | CAPACITORS | | | |
| | R508 | CARBONFILM RESISTOR | RD1/6PM□□□J | | △ C991 | CAPACITOR (CERAMIC) | VCG-044 |
| | R510 | CARBONFILM RESISTOR | RD1/2LF□□□J | | | | |
| | R511, 512 | CARBONFILM RESISTOR | RD1/6PM□□□J | | | | |
| | R514 | CARBONFILM RESISTOR | RD1/4PM□□□J | | | | |
| | R515 | CARBONFILM RESISTOR | RD1/6PM□□□J | | | | |
| | R517, 518 | CARBONFILM RESISTOR | RD1/2PMF□□□J | | | | |

Mark No. Description Part No.

DOOR SW UNIT

SWITCHES

S4 RSK1002

CONNECTOR UNIT

CAPACITORS

C1 CERAMIC CAPACITOR CKCYF473Z50


RESISTORS

R4, 5 CARBONFILM RESISTOR RD1/6PM331J

6. ADJUSTMENTS

6.1 MECHANISM RELATED ADJUSTMENT

| 1. Tape Speed Adjustment | | |
|--------------------------|--|--|
| Mode | Adjustment Location | Specifications |
| PLAY | Capstan motor adjustment hole (Refer to Fig. 1.) | Adjust so that the playback frequency is 3000 ± 5 Hz at the beginning of winding of test tape STD-301. |
| PLAY | | Playback test tape STD-301 again and confirm that the above specifications are satisfied. |

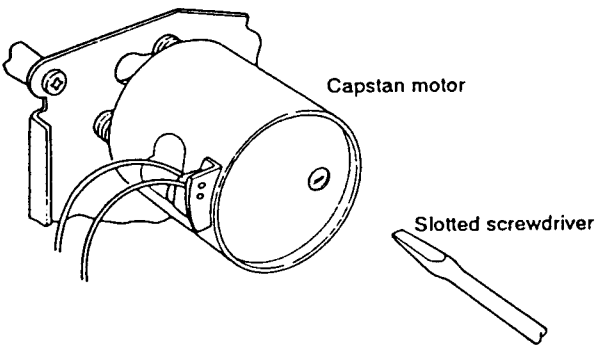


Capstan motor

Slotted screwdriver

Fig. 1

| 2. Adjustment of Door Damper | |
|--|---|
| Adjustment Location | Specifications |
| Cylinder adjustment screw (Refer to Fig. 2.) | Make sure that the door opens smoothly, there is no two-stage motion, and that there is no bounding when it opens completely. (Perform with no cassette half inserted.) |

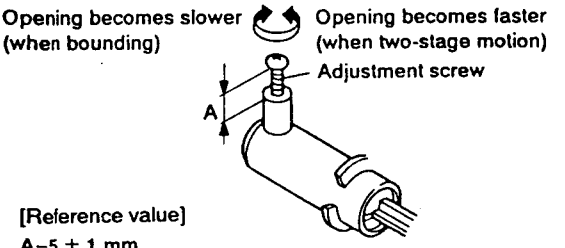

Opening becomes slower (when bounding)

Opening becomes faster (when two-stage motion)


Adjustment screw

A

[Reference value]
A = 5 ± 1 mm

Fig. 2


| 3. Tape running and azimuth adjustment | | | |
|--|--|---|--|
| No. | Mode | Adjustment Location | Specifications |
| 1 | | | Insert half mirror in side A (set screws at front). |
| 2 | PLAY | Height adjustment nut (Refer to Fig. 3.) | Playback the above tape and adjust so that there is no curling of the tape in the guide section of the head. (Refer to Fig. 4.) |
| 3 | PLAY | Azimuth adjustment screw (Refer to Fig. 3.) | Playback test tape STD-331B and adjust so that the 10 kHz output level is maximum and also so that there is no phase difference between L-ch and R-ch. |
| 4 | Check Item 2 above again and adjust again if it does not satisfy the specifications. (Be sure to adjust Item 3 when Item 2 is adjusted.) | | |

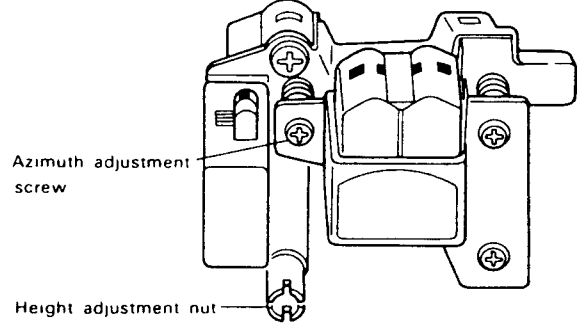

Azimuth adjustment screw

Height adjustment nut

Fig. 3

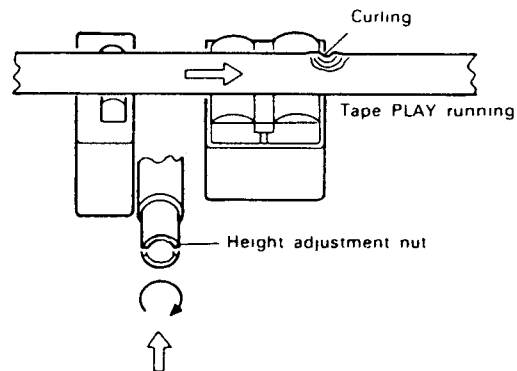

Curling

Tape PLAY running

Height adjustment nut

Fig. 4

6.2 ELECTRICAL ADJUSTMENTS

Adjustment Conditions

1. The mechanical adjustments must be completed first.
2. The head must be cleaned and demagnetized.
3. Turn power on allow the deck to warm up for at least a few minutes before commencing any electrical adjustments.
4. The reference signal is 0 dBV=1 Vrms.
5. Connect a 50 kΩ (or between 47k to 52 kΩ) load resistance to the OUTPUT terminals.
6. Unless otherwise specified, the switches listed below are left in the positions indicated.

DOLBY NR : OFF
 TAPE SELECTOR : NORM

Test Tapes

STD-331B : Playback adjustments
 (See Fig. 6-1)
 STD-630 : NORMAL blank tape
 STD-620 : CrO₂ blank tape
 STD-610 : METAL blank tape

List of Adjustments

Playback sections

1. Head azimuth adjustment.
2. Playback level adjustment.

Recording sections

1. Bias oscillator adjustment.
2. Bias trap adjustment.
3. Recording bias adjustment.
4. Recording level adjustment.
5. Level meter check.
6. AUTO BLE adjustment.

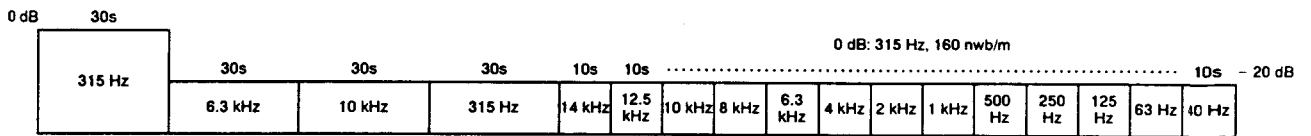


Fig. 6-1 Constants of the test tape STD-331B

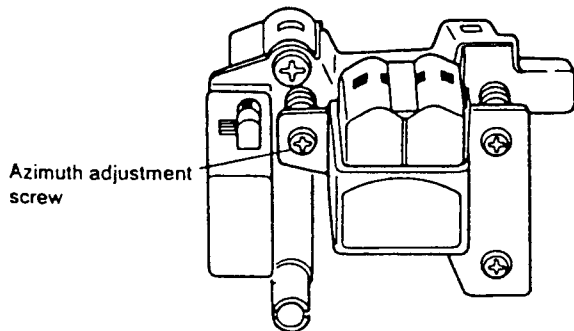


Fig. 6-2 Head azimuth adjustment

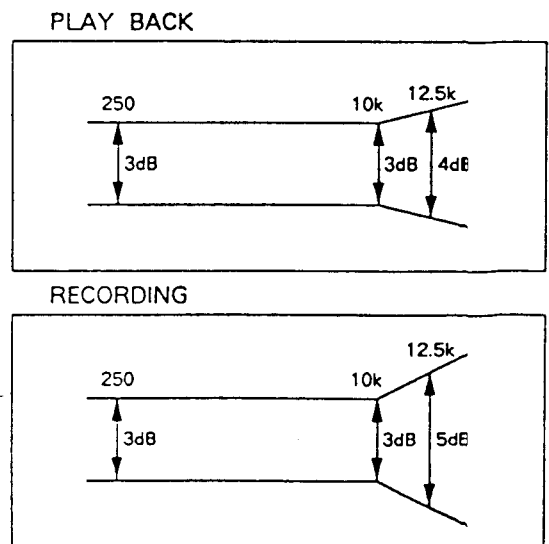


Fig. 6-3 Frequency response zone

PLAYBACK SECTION

1. Head Azimuth Adjustment

- Turn VR105, 106 to mechanical center positions.

| No. | Mode | Input signal & test tape | Adjustment location | Measuring location | Adjustment value | Remarks |
|-----|------|---|--|--------------------|--------------------------------|---------|
| 1. | PLAY | Play the 10 kHz/-20 dB section of STD-331B test tape. | Head azimuth adjustment screw. (See Fig. 6-2) | LINE OUT | Maximum playback signal level. | |
| 2. | STOP | Lock the screw with screw lock after completing adjustment. | | | | |

2. Playback Level Adjustment

- This adjustment determines the DOLBY NR level, and must be performed with great care.

| No. | Mode | Input signal & test tape | Adjustment location | Measuring location | Adjustment value | Remarks |
|-----|------|---|------------------------------------|----------------------------|------------------|--|
| 1. | PLAY | Play the 315 Hz/0 dB section of the STD-331B test tape. | Deck VR105 (Lch) VR106 (Rch) | TP. 3 (Lch) TP. 4 (Rch) | -14.7 dBv | This adjustment must be performed accurately for proper Dolby level setting. |

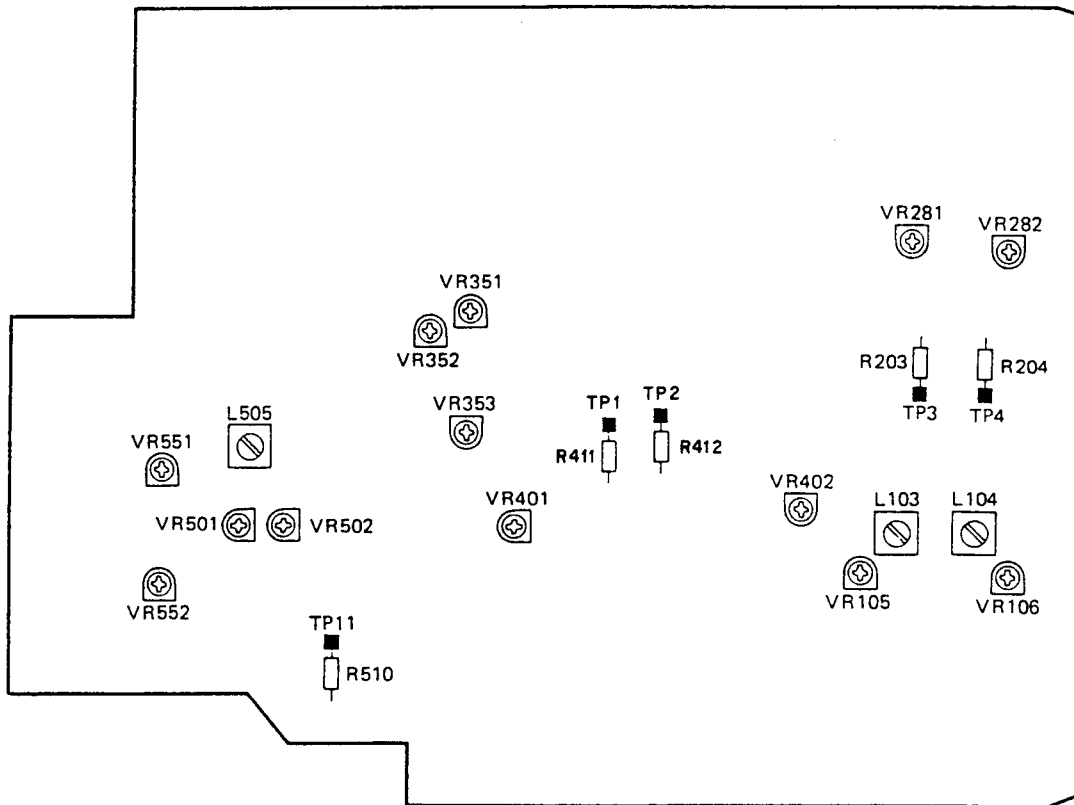


Fig. 6-4 Adjusting points

RECORDING SECTION

1. Bias Oscillator Adjustment

| No. | Mode | Input signal & test tape | Adjustment location | | Measuring location | Adjustment value | Remarks |
|-----|------|--|---------------------|------|--------------------|----------------------|---------|
| 1. | REC | Load the STD-810 test tape with no input signal. | Deck | L505 | TP. 11 | 108 kHz \pm 300 Hz | |

2. Bias Trap Adjustment

| No. | Mode | Input signal & test tape | Adjustment location | | Measuring location | Adjustment value | Remarks |
|-----|------|--|---------------------|--------------------------|----------------------------|------------------|---------|
| 1. | REC | Load the STD-810 test tape with no input signal. | Deck | L103 (Lch) L104 (Rch) | TP. 3 (Lch) TP. 4 (Rch) | Minimum output | |

3. Recording Bias Adjustment

- Turn ON the DOLBY HX PRO switch on the front panel, and set the BIAS control to the center position.

| No. | Mode | Input signal & test tape | Adjustment location | | Measuring location | Adjustment value | Remarks |
|-----|---------------|---|---------------------|------------------------|--------------------|---|---------|
| 1. | REC/ PAUSE | Apply a 315 Hz/-20 dBv (-20VU meter reading) signal to the line input terminals and insert STD-830. | | | LINE OUT | | |
| 2. | | Record and play back the 315 Hz signal and a 10 kHz signal at -20 dBv input level. | NOR | VR551 (L) VR552 (R) | | Record and play back repeatedly, comparing the 315 Hz and 10 kHz playback levels, and adjust to 0 ± 0.5 dB. | |
| 3. | REC → PLAY | Record the 10 kHz/315 Hz, -20 dBv signal on STD-820 and play back. | CrO2 | VR501 (L/R) | | 0 dBv \pm 1.0 dB | |
| 4. | | Record the 10 kHz/315 Hz, -20 dBv signal on STD-810 and play back. | METAL | VR502 (L/R) | | 0 dBv \pm 1.0 dB | |
| 5. | | Check distortion value after adjustment is completed and confirm that there is no underbias. | | | | | |

4. Recording Level Adjustment

- Turn ON the DOLBY NR switch.

| No. | Mode | Input signal & test tape | Adjustment location | | Measuring location | Adjustment value | Remarks |
|-----|---------------|---|--------------------------|----------------------------|----------------------------|--|---|
| 1. | REC/ PAUSE | Apply the 315 Hz/0 dBv signal to the line input, and load STD-830 (NORM). | REC level control volume | | TP. 3 (Lch) TP. 4 (Rch) | -15.2 dBv | |
| 2. | REC → PLAY | Record and play back the 315 Hz/0 dBv signal. | Deck | VR401 (Lch) VR402 (Rch) | TP. 3 (Lch) TP. 4 (Rch) | Repeatedly record, playback and adjust so that the playback signal level becomes -15.2 dB. | Recording bias adjustment and recording level adjustment with STD-830 must be performed accurately as reference for BLE adjustment. |
| 3. | REC → PLAY | Record the 315 Hz/0 dBv signal on STD-820 (CrO2), and play it back. | Check | | | -15.2 dBv \pm 1 dB | |
| 4. | REC → PLAY | Record the 315 Hz/0 dBv signal on STD-810 (METAL), and play it back. | Check | | | -15.2 dBv \pm 1 dB | |

5. Level Meter Adjustment

| No. | Mode | Input signal & test tape | Adjustment location | Measuring location | Adjustment value | Remarks |
|-----|---------------|---|----------------------------|----------------------------|---|---|
| 1. | REC/ PAUSE | Apply a 315 Hz/-10 dBv (316 mV) signal to the line input terminals. | VR281 (Lch) VR282 (Rch) | TP. 1 (Lch) TP. 2 (Rch) | Always set the enlarged mode when adjusting. Adjust so that the 0 dB segment lights at a level of -15.2 ± 0.5 dBv (-15.2 ± 1.0 dBv in the normal mode). | Adjust by turning clockwise until the lamp lights up. |

6. AUTO BLE Adjustment

- BLE Adjustment must be performed after all other adjustments are completed.
- This adjustment should be performed in the test mode.
- Entering the test mode

Press the MODE (COUNTER), RANGE and MONITOR keys on the front panel simultaneously, with the power ON. The unit enters the test mode and oscillates a 400 Hz signal.


Thereafter, each time the START/CLEAR key is pressed, the oscillation frequency changes as follows: 3 kHz oscillation → 15 kHz oscillation → Release

| No. | Mode | Input signal & test tape | Adjustment location | Measuring location | Adjustment value | Remarks |
|-----|---|---|---------------------|--------------------|---|-------------------|
| 1. | | REC LEVEL VR MIN or no signal input. | - | - | - | |
| 2. | - | Press the three keys MODE (COUNTER), RANGE and MONITOR on the front panel simultaneously. | VR351 | Level meter Rch | Adjust so that -3 dB on the level meter lights. | 400 Hz adjustment |
| 3. | | Press the START/CLEAR key once. | VR352 | | Adjust so that -1 dB on the level meter lights. | 3 kHz adjustment |
| 4. | | Press the START/CLEAR key once. | VR353 | | Adjust so that -1 dB on the level meter lights. | 15 kHz adjustment |
| 5. | When the START/CLEAR key is pressed again, the test mode is released. | | | | | |

7. IC DESCRIPTIONS

7.1 PD4290C

7.1.1 Main CPU Port Arrangement PD4290C (BLE & Main Control)

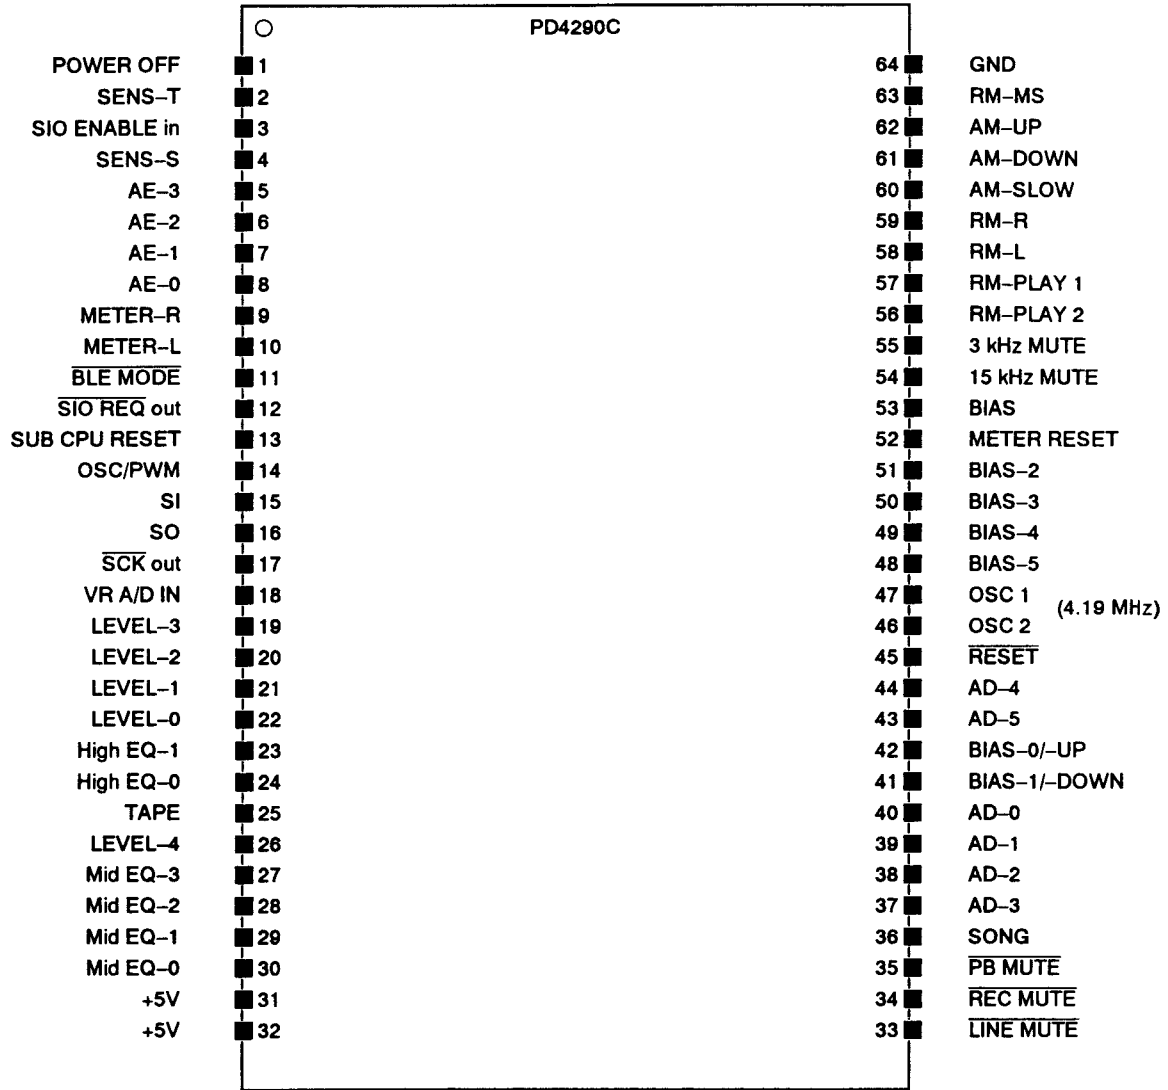

7.1.2 I/O Matrix Table

| | CrO ₂ (in) (Sub CPU) | METAL (in) (Sub CPU) | High EQ-1 (out) (Main CPU) | High EQ-0 (out) (Main CPU) |
|------------------------|---------------------------------|----------------------|----------------------------|----------------------------|
| TAPE: NORMAL | L | L | 1 | 0 |
| TAPE: CrO ₂ | H | L | 1 | 0 |
| TAPE: METAL | L | H | 0 | 1 |

- Output standard value for setting
 LEVEL (5bit) : 01111
 Mid EQ (4bit) : 0111
 High EQ (2bit) : According to the table above.

7.1.3 PD4290C Pin Functions

| Pin No. | I/O | Name | Function | | |
|---------|---------|--|--|------------|-----------------------|
| 1 | I | POWER OFF | POWER OFF trigger input and rising edge input when power is OFF. Normally "L". | | |
| 2 | | SENS-T | Rotation pulse input for the take-up side reel base. The tape end is detected when the signal change stops. Also, ATLC operation is based on the signal change. | | |
| 3 | | SIO ENABLE in | When this signal from the sub CPU becomes "H", the main CPU starts communication with the sub CPU. | | |
| 4 | | SENS-S | Rotation pulse input for the supply side reel base. When Ver REMAIN is ON, the operation for the remain function is performed by this signal. Also, when the signal change stops for 5 minutes with Ver REMAIN ON, PLAY or REC/PLAY mode changes to STOP mode. | | |
| 5 | | AE-3 | 4-bit encoder input for position detection of the mechanism. | | |
| 6 | | AE-2 | | | |
| 7 | | AE-1 | | | |
| 8 | | AE-0 | | 4-bit data | Mechanism mode |
| | | | | 0000 | PLAY, REC/PLAY |
| | | | | 0010 | PLAY/PAUSE, REC/PAUSE |
| | | 0111 | CUE, REVIEW | | |
| | | 0100 | STOP, PAUSE | | |
| | | 1101 | FF. REW | | |
| | | 1001 | EJECT | | |
| 9 | METER-R | Input of results from comparison of 6-bit output (AD-0 through AD-5) with both R and L channels. | | | |
| 10 | METER-L | | | | |
| 11 | O | BLE MODE | "L" is output during BLE tuning mode and test mode, and "H" is output at other times. | | |
| 12 | | SIO REQ out | "L" is output when main CPU requests communication with sub CPU, and "H" is output at other times. | | |
| 13 | | SUB CPU RESET | Reset output for resetting of sub CPU when power is turned ON/OFF and when the communication between main CPU and sub CPU is interrupted for a certain duration. | | |
| 14 | | OSC/PWM | Tuning oscillator output in BLE mode, and at other times PWM output for position detection of the input volume. | | |
| 15 | I | SI | Serial input for communication with sub CPU. | | |
| 16 | O | SO | Serial output for communication with sub CPU. | | |
| 17 | | SCK out | Clock pulse output for communication with sub CPU. | | |
| 18 | I | VR A/D IN | Input of results from comparison of PWM smoothed level signal and position detection level signal of the input volume. | | |
| 26 | O | LEVEL-4 | BLE 5-bit LEVEL output. | | |
| 19 | | LEVEL-3 | | | |
| 20 | | LEVEL-2 | | | |
| 21 | | LEVEL-1 | | | |
| 22 | | LEVEL-0 | | | |
| 23 | | High EQ-1 | BLE 2-bit High EQ output. | | |
| 24 | | High EQ-0 | | | |
| 25 | | TAPE | Tape monitor output. Tape when "H", source when "L". | | |
| 27 | | Mid EQ-3 | BLE 4-bit Mid EQ output. | | |
| 28 | | Mid EQ-2 | | | |
| 29 | | Mid EQ-1 | | | |
| 30 | | Mid EQ-0 | | | |
| 33 | | LINE MUTE | Mute control output for LINE OUT. Muting is ON when "L". | | |
| 34 | | REC MUTE | Mute control output for recording signal. Muting is ON when "L". | | |
| 35 | PB MUTE | Mute control output for playback signal. Muting is ON when "L". | | | |

| Pin No. | I/O | Name | Function | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
|------------------------------------|---------|---|--|--|--------|--------|----|---|---|----|---|---|---|---|---|-----|---|---|---|---|---|-----|---|---|---|---|---|--------|---|---|---|---|---|---------------|---|---|---|---|---|---------------|---|---|---|---|---|------------------------------------|---|---|---|---|---|
| 36 | I | SONG | Blank detection signal input. Blank when "L". | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 43 | | AD-5 | 6-bit compensation level signal output for meter A/D. | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 44 | | AD-4 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 37 | | AD-3 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 38 | | AD-2 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 39 | | AD-1 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 40 | | AD-0 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 41 | | BIAS-DOWN | | Control output for BLE power drive bias volume when Ver VR-BLE is ON. When DOWN is "L" and UP is "H", the volume rotates clockwise and the bias current increases. When DOWN is "H" and UP is "L", the volume rotates counterclockwise and the bias current decreases. The power drive bias volume stops when the output status is "L", "L" or "H", "H". | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 42 | BIAS-UP | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 45 | I | RESET | Reset input for main CPU. Reset when "L"; programming starts when "L" → "H". | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 48 | O | BIAS-5 | Not used when Ver VR-BLE is ON. | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 49 | | BIAS-4 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 50 | | BIAS-3 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 51 | | BIAS-2 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 52 | | METER RESET | Used to speed up A/D operation in BLE mode. Meter circuit is discharged when "H". | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 53 | | BIAS | Control output for bias ON/OFF during recording. Bias is ON when "H". | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 54 | | 15 kHz MUTE | Used in accordance with the test signal for BLE tuning. Muting is ON when "H". Both are ON when the signal is 400 Hz. Only 15 kHz MUTE is ON when the signal is 3 kHz. Both are OFF when the signal is 15 kHz. | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 55 | | 3 kHz MUTE | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 56 | | RM-PLAY 2 | For PLAY and REC (L) mode, PLAY torque is lowered only for the first 5 to 15 minutes of tape winding. During tape return and BLE rewind, tape speed is varied using the control lines of PLAY-2, PLAY-1 and MS. | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 57 | | RM-PLAY 1 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 63 | | RM-MS | <table border="1"> <thead> <tr> <th>Mechanism mode</th> <th>PLAY-2</th> <th>PLAY-1</th> <th>MS</th> <th>L</th> <th>R</th> </tr> </thead> <tbody> <tr> <td>FF</td> <td>L</td> <td>L</td> <td>L</td> <td>L</td> <td>H</td> </tr> <tr> <td>REW</td> <td>L</td> <td>L</td> <td>L</td> <td>H</td> <td>L</td> </tr> <tr> <td>CUE</td> <td>L</td> <td>L</td> <td>H</td> <td>L</td> <td>H</td> </tr> <tr> <td>REVIEW</td> <td>L</td> <td>L</td> <td>H</td> <td>H</td> <td>L</td> </tr> <tr> <td>PLAY, REC (H)</td> <td>H</td> <td>L</td> <td>L</td> <td>L</td> <td>H</td> </tr> <tr> <td>PLAY, REC (L)</td> <td>H</td> <td>H</td> <td>L</td> <td>L</td> <td>H</td> </tr> <tr> <td>STOP, PAUSE, PLAY/PAUSE, REC/PAUSE</td> <td>-</td> <td>-</td> <td>-</td> <td>H</td> <td>H</td> </tr> </tbody> </table> | Mechanism mode | PLAY-2 | PLAY-1 | MS | L | R | FF | L | L | L | L | H | REW | L | L | L | H | L | CUE | L | L | H | L | H | REVIEW | L | L | H | H | L | PLAY, REC (H) | H | L | L | L | H | PLAY, REC (L) | H | H | L | L | H | STOP, PAUSE, PLAY/PAUSE, REC/PAUSE | - | - | - | H | H |
| Mechanism mode | | PLAY-2 | | PLAY-1 | MS | L | R | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| FF | | L | | L | L | L | H | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| REW | | L | | L | L | H | L | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| CUE | | L | | L | H | L | H | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| REVIEW | L | L | | H | H | L | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| PLAY, REC (H) | H | L | | L | L | H | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| PLAY, REC (L) | H | H | L | L | H | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| STOP, PAUSE, PLAY/PAUSE, REC/PAUSE | - | - | - | H | H | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 58 | RM-L | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 59 | RM-R | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 60 | AM-SLOW | Assist motor control output. When DOWN is "L" and UP is "H", the mechanism raises the head base, and when DOWN is "H" and UP is "L" it lowers the head base for ejection of the tape. SLOW output is set to "H" only during the servo operation after one assist motor operation and during the assist motor operation between the EJECT and STOP mode. | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 61 | AM-DOWN | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 62 | AM-UP | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |

8. FOR CT-777-S/HEWM TYPE

CONTRAST OF MISCELLANEOUS PARTS

NOTES:

- Parts without part number cannot be supplied.
- The Δ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
- Parts marked by "⊙" are not always kept in stock. Their delivery time may be longer than usual or they may be unavailable.

The CT-777-S/HEWM type is the same as the CT-777/HEM type with the exception of the following sections.

| Mark | Symbol & Description | Part No. | | Remarks |
|------|--|---------------------|------------------------|---------|
| | | CT-777/ HEM type | CT-777-S/ HEWM type | |
| | Panel stay | RNT1090 | RNT1110 | |
| | Power button | RAC1410 | RAC1503 | |
| | Function knob | RAC1411 | RAC1502 | |
| | Push knob | RAC1413 | RAC1505 | |
| | Knob (B) | RAC1414 | RAC1492 | |
| | Mode knob | RAC1552 | RAC1611 | |
| | Slide SW knob | RAC1562 | RAC1522 | |
| | Side rubber | REB1094 | REB1128 | |
| | Door | RNK1495 | RNK1731 | |
| | VR knob assembly | RXA1281 | | |
| | VR knob | | RAC1496 | |
| | Door panel | RAH1844 | RAH1845 | |
| | Bonnet | RXX1376 | RXX1377 | |
| | Front panel assembly | RXX1385 | RXX1386 | |
| | Operating instructions (Dutch, Spanish, Portuguese, Swedish) | RRD1109 | | |
| | Packing case | RHG1279 | RHG1280 | |
| | Door assembly | RXX1417 | RXX1418 | |

9. SPECIFICATIONS

| | |
|--|--|
| System | 4 track, 2-channel stereo |
| Heads | |
| Recording and playback head: | |
| [CT-900S, CT-777] | |
| Hard permalloy playback head and Hard permalloy recording head combination × 1 | |
| Erasing head: Ferrite head with sendust gurd × 1 | |
| Motor | DC servo capstan motor × 1 |
| | DC reel motor × 1 |
| | DC auxiliary motor × 1 |
| Wow and Flutter | |
| [CT-900S, CT-777] | No more than 0.023%(WRMS) |
| | No more than ±0.056% (DIN) |
| Fast Winding Time | Approximately 75 seconds (C-60 tape) |
| Frequency Response | |
| - 20 dB recording: | |
| [CT-900S, CT-777] | |
| Metal tape | 15 to 22,000 Hz |
| Chrome tape | 15 to 21,000 Hz |
| Normal tape | 15 to 21,000 Hz |
| Signal-to-Noise Ratio (Dolby NR off) | |
| [CT-900S, CT-777] | More than 60 dB |
| Noise Reduction Effect | |
| Dolby B-type NR ON | More than 10 dB (at 5 kHz) |
| Dolby C-type NR ON | More than 19 dB (at 5 kHz) |
| Dolby S-type NR ON (CT-93, CT-900S) | More than 22 dB (at 5 kHz) |
| Harmonic Distortion | No more than 0.6% (0 dB) |
| Input (Sensitivity) | |
| LINE (INPUT) | 60 mV (Input impedance 47 kΩ) |
| Output (Reference level) | |
| LINE (OUTPUT) | 316 mV (Output impedance 1.8 kΩ) |
| Headphone | 2.3 mW (Load impedance 8 Ω, PHONES LEVEL control max.) |

Subfunctions

- Super AUTO BLE system
- Dolby B-type and C-type noise reduction systems
- MPX filter
- Level meter with 2 modes peak hold selection (16 + 1 segments)
- Level meter range selection (wide/expanded)
- 4-digit electronic tape counter with mode selection (CT-900S, CT-777: Normal/Time)
- Auto monitor selection (Tape/Source)
- Display off
- Music search (over ± 15 selections)
- Automatic Tape Loose Canceller (ATLC)
- Tape return/Return play
- Auto space recording mute
- Auto tape selector
- Playback/recording timer start function
- CD•DECK SYNCHRO recording
- Headphones jack with level control
- Power eject (Open/Close)
- Repeat playback

Miscellaneous

| | |
|---------------------------------|---|
| Power Requirements | |
| European model | AC 220–230 Volts – , 50/60 Hz |
| U.K. model | AC 230–240 Volts – , 50/60 Hz |
| Multi-voltage model | AC 110/120–127/220/240 V (switchable), 50/60 Hz |
| Power Consumption | |
| [CT-777] | 19W |
| Dimensions | |
| [CT-979, CT-900S, CT-777] | 420(W) × 135(H) × 370(D) mm |
| Weight (without package) | |
| [CT-777] | 7.6 kg |


Accessories

| | |
|--------------------------------------|---|
| Operating instructions | 1 |
| Connection cord with pin plugs | 2 |
| CD•DECK SYNCHRO control cord | 1 |

NOTE:

Specifications and design subject to possible modifications without notice, due to improvements.

10. PANEL FACILITIES

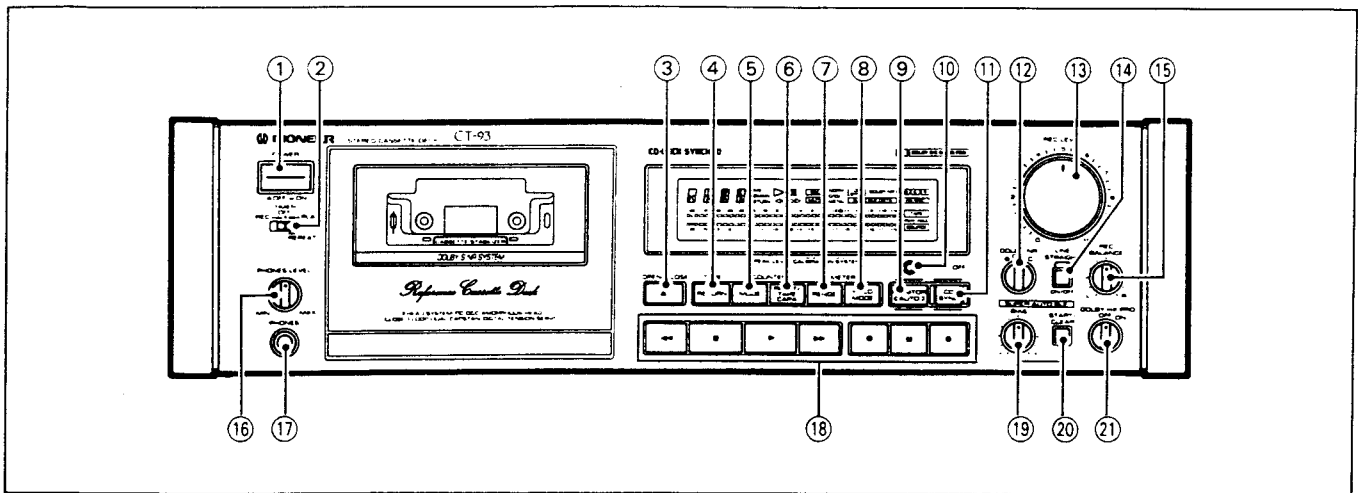

① **Power switch (POWER \blacksquare OFF/ \blacktriangle ON)**

② **Timer mode/repeat play switch (TIMER REC/OFF/PLAY-REPEAT)**

③ **Open/close button (OPEN/CLOSE \blacktriangle)**

Press this button to open or close the cassette door. Whenever inserting or removing a cassette tape, be sure that the power is turned ON.

NOTE:

If the cassette door is closed while the unit is turned OFF, and the power is then turned ON, the cassette door may open and close after pressing one of the operation buttons. This occurs when the microprocessor resets the door mechanism to its initial state and does not indicate any malfunctioning of the unit.

④ **Tape return button (TAPE RETURN)**

This button is used in the normal tape counter mode to fast forward or rewind the tape to a point near the counter reading "0000."

⑤ **Counter mode button (COUNTER MODE) [CT-900S, CT-777]**

Each time this button is pressed, one of the two mode (Normal tape counter/Time counter) is set in sequence.

⑥ **Counter reset button (COUNTER RESET) [CT-900S, CT-777]**

Reset the counter indication to "0000."

⑦ **Level meter range selector button (METER RANGE)**

Selects wide or expanded range for the level meter.

⑧ **Level meter hold mode button (METER HOLD MODE)**

Selects the display mode of the peak level. When press this button so that the HOLD indicator lights up, the level meter holds the maximum level indications of the signal. To erase the maximum level indications, press this button again. When the HOLD indicator goes off, the level meter holds peak indications for about 1.2 second.

⑨ **Monitor selector button (MONITOR [AUTO])**

Used to monitor the source sound or just recorded sound during recording.

- When the unit is set to record or playback mode, the TAPE indicator light up and the monitor mode is automatically selected.

⑩ **Display off button (DISPLAY OFF)**

Press this button to turn off the function display.

⑪ **CD•DECK SYNCHRO recording button (CD SYNC)**

⑫ **DOLBY* NR switch**

[CT-979, CT-777]

3-position (B/OFF/C)

*

- *Dolby noise reduction and HX Pro headroom extension manufactured under license from Dolby Laboratories Licensing Corporation. HX Pro originated by Bang & Olufsen.*
- "DOLBY", the double-D symbol \square and "HX PRO" are trademarks of Dolby Laboratories Licensing Corporation.

⑬ **Recording level control (REC LEVEL)**

⑭ **[CT-93, CT-979 only]**

Line straight button/indicator (LINE STRAIGHT)

When press this button so that the indicator lights up, the signal is passed the REC BALANCE control circuits.

⑮ **Recording balance control (REC BALANCE)**

⑯ **Headphones level control (PHONES LEVEL)**

⑰ **Headphones jack (PHONES)**

⑱ **Operation buttons**

◀◀: Rewind/music search

■: Stop

▶▶: Playback

▶▶▶▶: Fast forward/music search

●: Recording

▬▬: Pause

○: Recording mute

⑲ **[CT-93, CT-979 only]**

Recording bias control/indicator (BIAS)

If you desire, you can readjust the recording bias condition after the AUTO BLE tuning.

⑳ **SUPER AUTO BLE button (START/CLEAR)**

㉑ **[CT-93, CT-979 only]**

DOLBY HX PRO switch (OFF/ON)