

# Service Manual

**PIONEER®**  
The Art of Entertainment

CD CDV LD PLAYER

# CLD-V820

KUC/CA

- Refer to the service manuals ARP2316 (CLD-2590K) and ARP2334 (CLD-V820).
- This manual is applicable to CLD-V820/KUC/CA.
- File this manual with the two manuals above.

## CONTRAST OF MISCELLANEOUS PARTS

### NOTES:

- Part without part number cannot be supplied.
- The  $\Delta$  mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
- Parts marked by "●" are not always kept in stock. Their delivery time may be longer than usual or they may be unavailable.

CLD-V820/KUC and CLD-V820/KUC/CA have the same construction except for the following:

Mark	Symbol & Description	Part No.		Remarks
		CLD-V820/KUC	CLD-V820/KUC/CA	
	Packing case	VHG1190	VHG1217	
	Operating instructions (French)	.....	VRC1008	

**PIONEER ELECTRONIC CORPORATION** 4-1, Meguro 1-Chome, Meguro-ku, Tokyo 153, Japan  
**PIONEER ELECTRONICS SERVICE INC.** P.O. Box 1760, Long Beach, California 90801 U.S.A.  
**PIONEER ELECTRONICS OF CANADA, INC.** 505 Cochrane Drive, Markham, Ontario L3R 8E3 Canada  
**PIONEER ELECTRONIC [EUROPE] N.V.** Haven 1087 Keetberglaan 1, 9120 Melsele, Belgium  
**PIONEER ELECTRONICS AUSTRALIA PTY. LTD.** 178-184 Boundary Road, Braeside, Victoria 3195, Australia TEL: [03] 580-9911  
 © PIONEER ELECTRONIC CORPORATION 1991

FO DEC. 1991 Printed in Japan

 **PIONEER®**  
The Art of Entertainment

4027

# Service Manual

ORDER NO.  
ARP2334

CD CDV LD PLAYER

# CLD-V820 KUC

- Refer to attached service manual ARP2316, CLD-2590K.
- This manual is applicable to the KUC type.

**PIONEER ELECTRONIC CORPORATION** 4-1, Meguro 1-Chome, Meguro-ku, Tokyo 153, Japan  
**PIONEER ELECTRONICS SERVICE INC.** P.O. Box 1760, Long Beach, California 90801 U.S.A.  
**PIONEER ELECTRONICS OF CANADA, INC.** 505 Cochrane Drive, Markham, Ontario L3R 8E3 Canada  
**PIONEER ELECTRONIC [EUROPE] N.V.** Haven 1087 Keetberglaan 1, 9120 Melsele, Belgium  
**PIONEER ELECTRONICS AUSTRALIA PTY. LTD.** 178-184 Boundary Road, Braeside, Victoria 3195, Australia TEL: [03] 580-9911  
© **PIONEER ELECTRONIC CORPORATION 1991**

SO SEPT. 1991 Printed in Japan

4027

This service manual is intended for qualified service technicians; it is not meant for the casual do-it-yourselfer. Qualified technicians have the necessary test equipment and tools, and have been trained to properly and safely repair complex products such as those covered by this manual.

Improperly performed repairs can adversely affect the safety and reliability of the product and may void the warranty. If you are not qualified to perform the repair of this product properly and safely, you should not risk trying to do so and refer the repair to a qualified service technician.

**WARNING**

Lead in solder used in this product is listed by the California Health and Welfare agency as a known reproductive toxicant which may cause birth defects or other reproductive harm (California Health & Safety Code, Section 25249.5).

When servicing or handling circuit boards and other components which contain lead in solder, avoid unprotected skin contact with the solder. Also, when soldering do not inhale any smoke or fumes produced.

# 1. SAFETY INFORMATION


(FOR USA MODEL ONLY)

## 1. SAFETY PRECAUTIONS

The following check should be performed for the continued protection of the customer and service technician.

### LEAKAGE CURRENT CHECK

Measure leakage current to a known earth ground (water pipe, conduit, etc.) by connecting a leakage current tester such as Simpson Model 229-2 or equivalent between the earth ground and all exposed metal parts of the appliance (input/output terminals, screwheads, metal overlays, control shaft, etc.). Plug the AC line cord of the appliance directly into a 120V AC 60Hz outlet and turn the AC power switch on. Any current measured must not exceed 0.5mA.

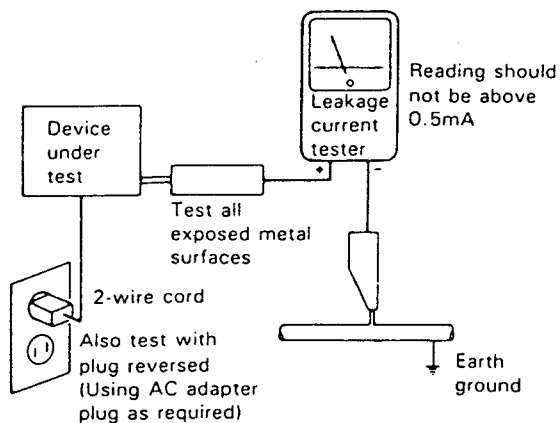

AC Leakage Test

ANY MEASUREMENTS NOT WITHIN THE LIMITS OUTLINED ABOVE ARE INDICATIVE OF A POTENTIAL SHOCK HAZARD AND MUST BE CORRECTED BEFORE RETURNING THE APPLIANCE TO THE CUSTOMER.

## 2. PRODUCT SAFETY NOTICE

Many electrical and mechanical parts in the appliance have special safety related characteristics. These are often not evident from visual inspection nor the protection afforded by them necessarily can be obtained by using replacement components rated for voltage, wattage, etc. Replacement parts which have these special safety characteristics are identified in this Service Manual.

Electrical components having such features are identified by marking with a  $\Delta$  on the schematics and on the parts list in this Service Manual.

The use of a substitute replacement component which does not have the same safety characteristics as the PIONEER recommended replacement one, shown in the parts list in this Service Manual, may create shock, fire, or other hazards.

Product Safety is continuously under review and new instructions are issued from time to time. For the latest information, always consult the current PIONEER Service Manual. A subscription to, or additional copies of, PIONEER Service Manual may be obtained at a nominal charge from PIONEER.

## 2. CONTRAST OF MISCELLANEOUS PARTS

**NOTES:**

- Parts without part number cannot be supplied.
- The  $\Delta$  mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
- Parts marked by "⊙" are not always kept in stock. Their delivery time may be longer than usual or they may be unavailable.

The CLD-V820/KUC type is the same as the CLD-2590K/R type with the exception of the following sections.

Mark	Symbol & Description	Part No.		Remarks
		CLD-2590K/R type	CLD-V820/KUC type	
⊙	MOTHER assembly MAIN assembly Power supply board assembly	VWM1223 Non supply VWR1109	VWM1240 Non supply VWR1098	
$\Delta$	Strain relief	CM-22	CM-22C	
$\Delta$	AC power cord	VDG1034	PDG1015	
$\Delta$	Voltage selector Front panel assembly-S Front door assembly-S Packing case Operating instructions (Spanish)	VSB1005 VXX1834 VXX1837 VHG1187 VRK1002	..... VXX1875 VXX1876 VHG1190 .....	

**MAIN ASSEMBLY**

The MAIN assembly of CLD-V820/KUC type is the same as the MAIN assembly of CLD-2590K/R type with the exception of the following sections.

Mark	Symbol & Description	Part No.		Remarks
		CLD-2590K/R type	CLD-V820/KUC type	
	D203, D204 C214 C305 C289 R207	..... CCSQCH050C50 ..... ..... RS1/10S221J	1SS254 CCSQCH270J50 CEAS100M50 CFTXA383J50 RS1/10S102J	
	R291, R292 R293 R588 L205 JA6 RF pin jack	..... ..... ..... ..... .....	RS1/10S123J RS1/10S472J RS1/10S750J LAU4R7K VKB1029	

**● P.C.B's PARTS LIST**

**NOTES:**

- Parts without part number cannot be supplied.
- Parts marked by "⊙" are not always kept in stock. Their delivery time may be longer than usual or they may be unavailable.
- The  $\Delta$  mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
- When ordering resistors, first convert resistance values into code form as shown in the following examples.

Ex.1 When there are 2 effective digits (any digit apart from 0), such as 560 ohm and 47k ohm (tolerance is shown by J=5%, and K=10%)

560  $\Omega$   $\rightarrow$  56  $\times$  10<sup>1</sup>  $\rightarrow$  561 ..... RD1/4PS 5 6 1 J

47k  $\Omega$   $\rightarrow$  47  $\times$  10<sup>3</sup>  $\rightarrow$  473 ..... RD1/4PS 4 7 3 J

0.5  $\Omega$   $\rightarrow$  0R5 ..... RN2H 0 R 5 K

1  $\Omega$   $\rightarrow$  010 ..... RS1P 0 1 0 K

Ex.2 When there are 3 effective digits (such as in high precision metal film resistors).

5.62k  $\Omega$   $\rightarrow$  562  $\times$  10<sup>1</sup>  $\rightarrow$  5621 ..... RN1/4SR 5 6 2 1 F

Mark No. Description Part No.

**POWER SUPPLY BOARD ASSEMBLY (VWR1098)**

**SEMICONDUCTORS**

IC202	TH5P4
IC213, 214 IC PROTECTOR	ICP-N50
IC215 IC PROTECTOR	ICP-N38
Q201 TRANSISTOR	2SB1331
Q202	DTC114ES
D201, 202 DIODE	S3LA20
D203 DIODE	S3S4M
D204 DIODE	ERB83-006
D205 DIODE	D1NL20
D206 ZENER DIODE	MTZ7.5B
D207 ZENER DIODE	MTZ6.2B
D209, 210 DIODE	D1NL20
D213-215 DIODE	D1NL20

**COILS/TRANSFORMERS**

L203 FILTER	VTL1008
-------------	---------

**OTHERS**

FU211, 212 MICRO FUSE	PT0.5A
-----------------------	--------

● SCHEMATIC AND P.C. BOARDS DIAGRAM  
OVERALL WIRING DIAGRAM

- RESISTORS:**  
Indicated in Ω, 1/4W, 1/8W and 1/8W, ± 5% tolerance unless otherwise noted k k Ω, M, M Ω, (F), ± 1%, (G), ± 2%, (K), ± 10%, (M), ± 20% tolerance.
- CAPACITORS:**  
Indicated in capacity ( μF ) / voltage(V) unless otherwise noted p,pF. Indication without voltage is 50V except electrolytic capacitor.
- VOLTAGE, CURRENT:**  
□ :DC voltage (V) at no input signal.  
Value in ( ) is DC voltage at rated power.  
⇨ mA :DC current at no input signal.


- OTHERS:**  
⇨ :Signal route.  
⊙ :Adjusting point.  
The Δ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.  
※ marked capacitors and resistors have parts numbers.  
  
This is the basic schematic diagram, but the actual circuit may vary due to improvements in design.

**MAIN ASSEMBLY**

- FTS Section (⇨ P31, P32)
- VIDEO Section (⇨ P37, P38)
- TBC Section (⇨ P41, P42)
- CONT Section (⇨ P43, P44)
- AFM Section (⇨ P45, P46)
- D. AUDIO Section (⇨ P11, P12)


Note:

- (⇨): Indicates pages of the service manual, CLD-2590K/R.
- Refer to the comparative tables, as these assemblies may have different parts.
- (⇨): Indicates pages of this service manual.

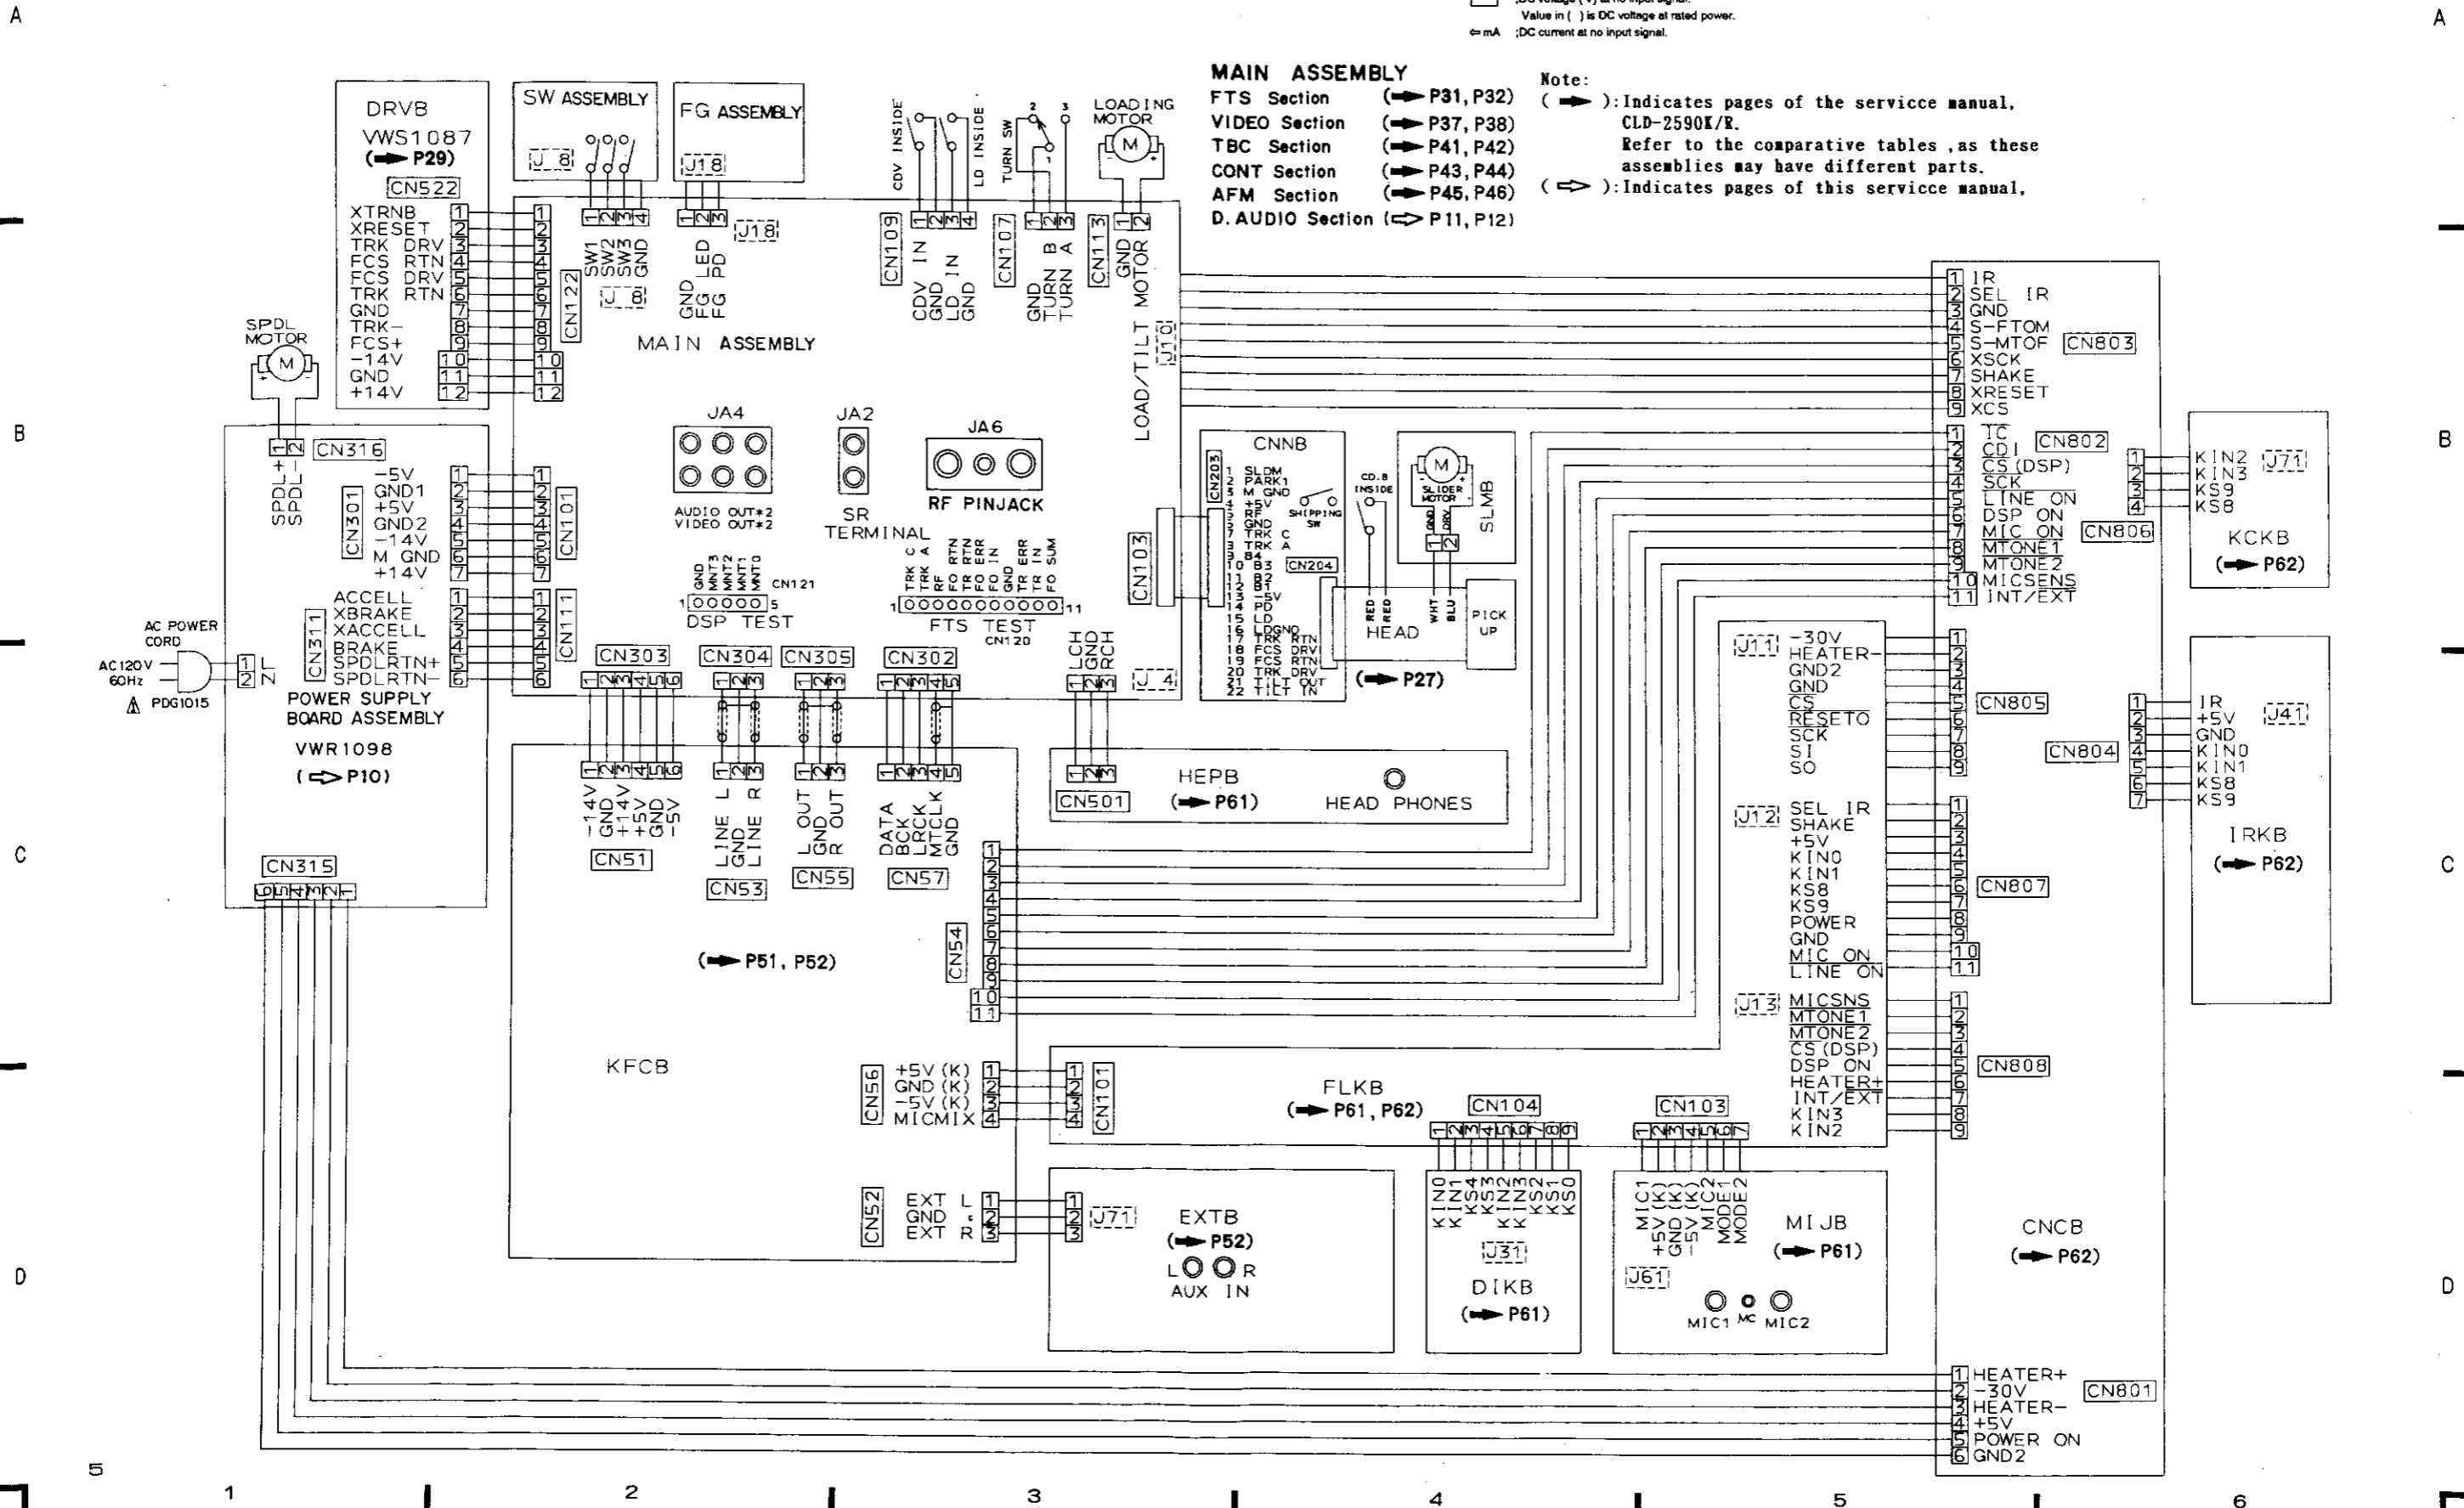

• View from component side

## POWER SUPPLY BOARD ASSEMBLY (VWR1098)

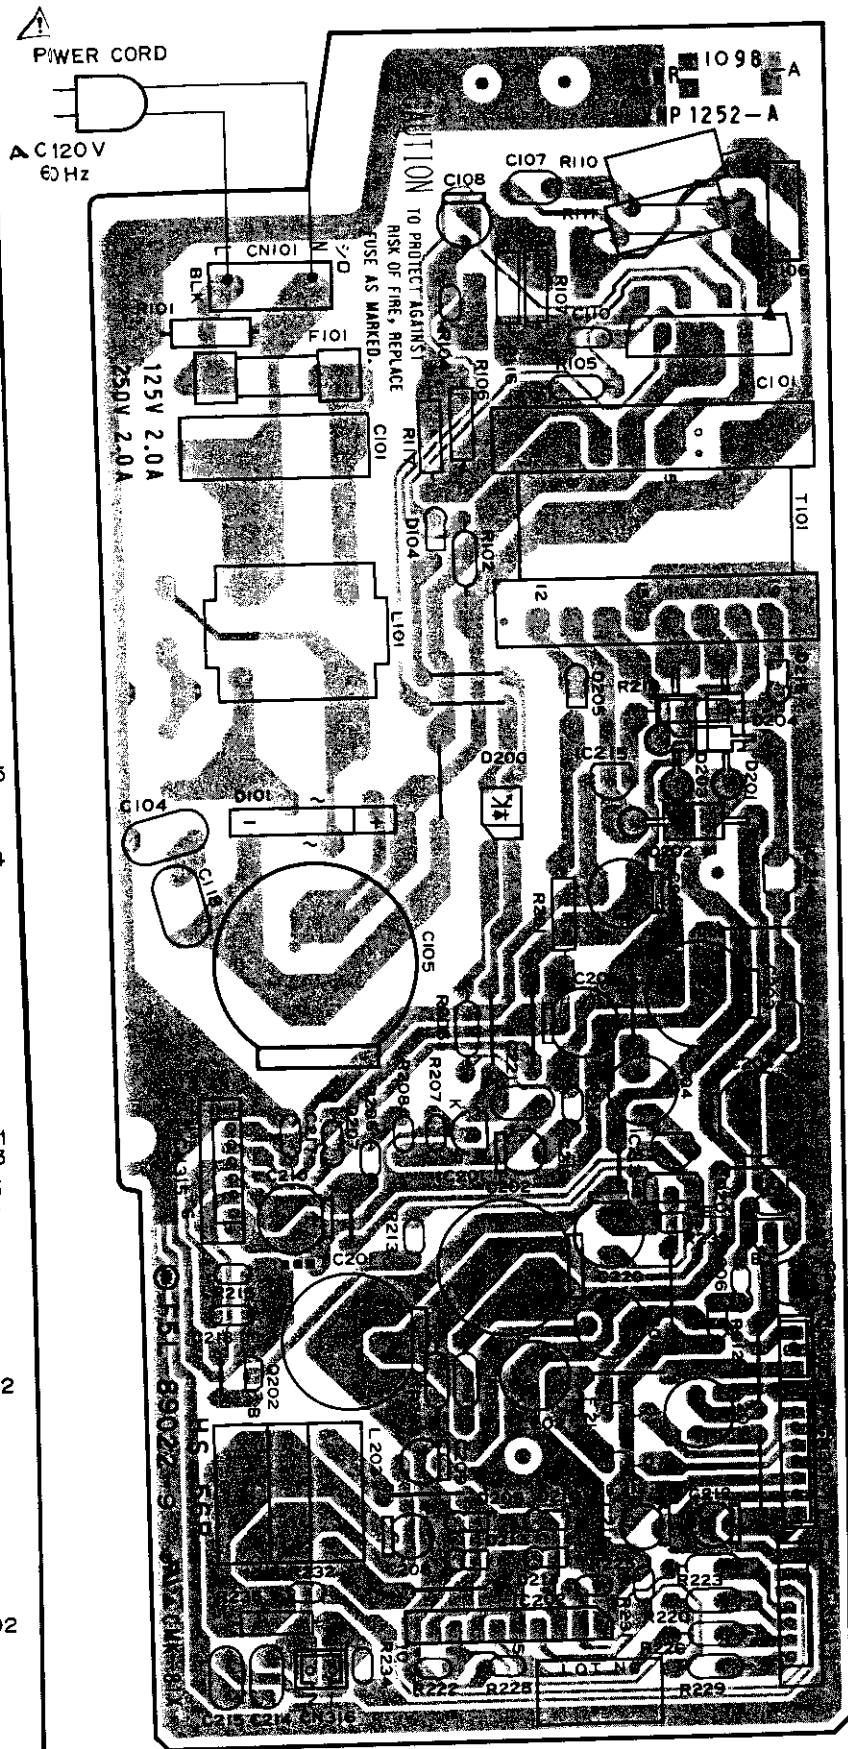

PCB patterns diagram indication	Corresponding part symbol	Part name
		Transformer
		FET
		Diode
		Zener diode
		LED
		Varactor
		Tact switch
		Inductor
		Coil
		Transformer
		Filter
		Ceramic capacitor
		Mylar capacitor
		Styrol capacitor
		Electrolytic capacitor (Non polarized)
		Electrolytic capacitor (Nonpolar)
		Electrolytic capacitor (Polarized)
		Electrolytic capacitor (Polarized)
		Power capacitor
		Semi-fixed resistor
		Resistor array
		Resistor
		Resonator
		Thermistor

- This PCB connection diagram is viewed from the parts mounted side.
- The parts which have been mounted on the board can be replaced with those shown with the corresponding wiring symbols listed in the above table.
- The capacitor terminal marked with shows negative terminal.
- The diode marked with shows cathode side.
- The transistor terminal marked with shows emitter.

A

B

C

D

A

B

C

D

8


1

2

3

• View from soldering side

POWER SUPPLY BOARD ASSEMBLY (VWR108)

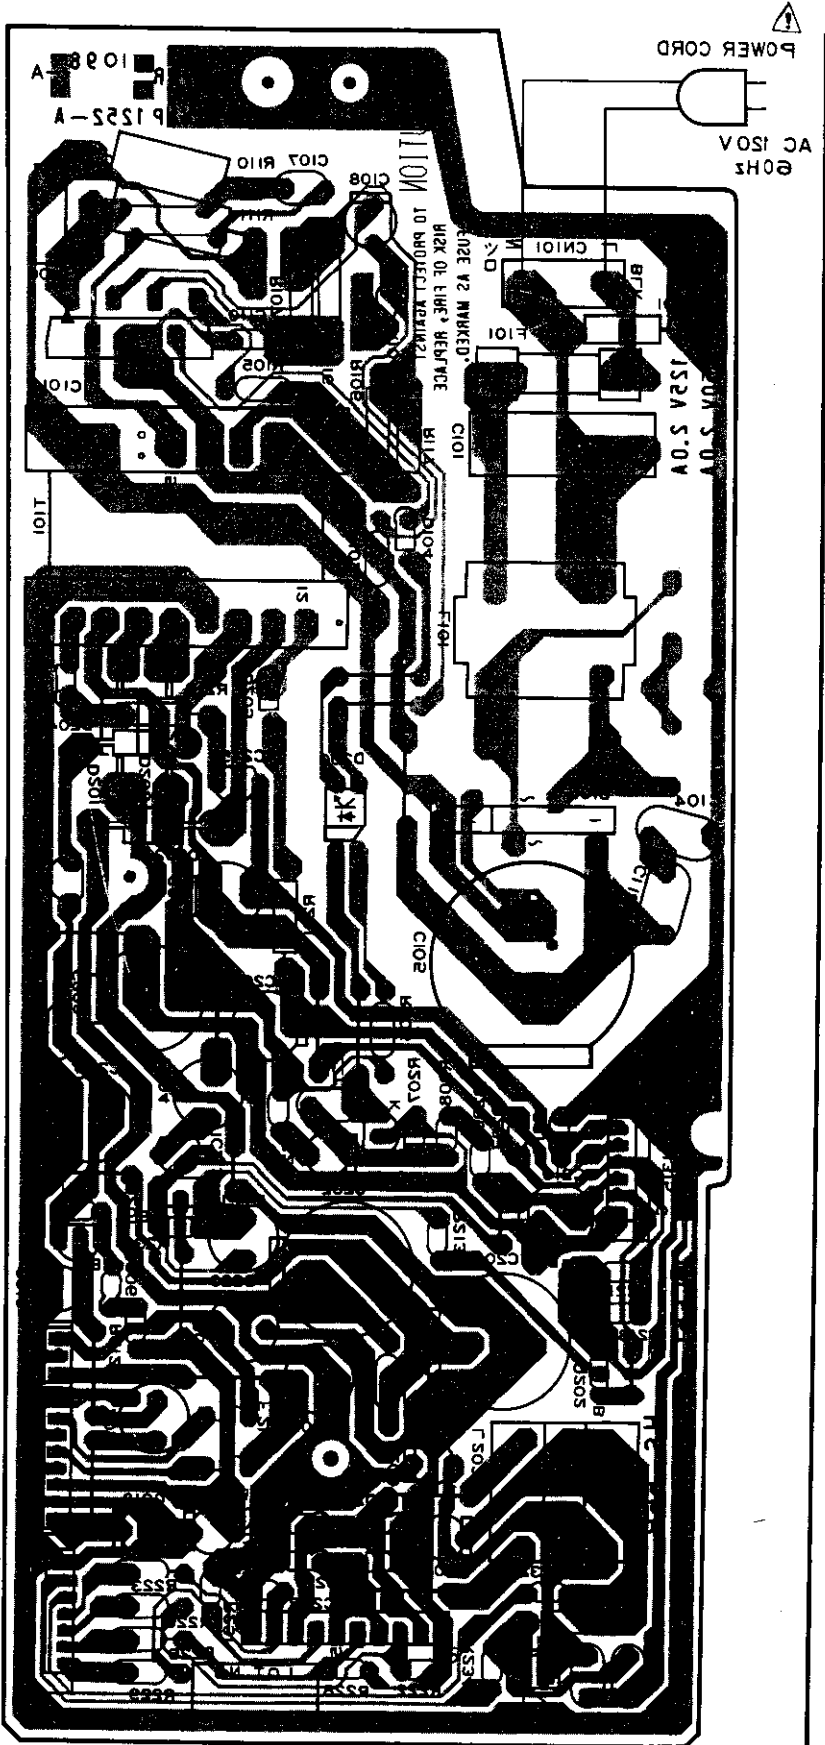

- A
- B
- C
- D
- IC101
- IC102
- IC103
- IC104
- IC105
- IC106
- IC107
- IC108
- IC109
- IC110
- IC111
- IC112
- IC113
- IC114
- IC115
- IC116
- IC117
- IC118
- IC119
- IC120
- IC121
- IC122
- IC123
- IC124
- IC125
- IC126
- IC127
- IC128
- IC129
- IC130
- IC131
- IC132
- IC133
- IC134
- IC135
- IC136
- IC137
- IC138
- IC139
- IC140
- IC141
- IC142
- IC143
- IC144
- IC145
- IC146
- IC147
- IC148
- IC149
- IC150
- IC151
- IC152
- IC153
- IC154
- IC155
- IC156
- IC157
- IC158
- IC159
- IC160
- IC161
- IC162
- IC163
- IC164
- IC165
- IC166
- IC167
- IC168
- IC169
- IC170
- IC171
- IC172
- IC173
- IC174
- IC175
- IC176
- IC177
- IC178
- IC179
- IC180
- IC181
- IC182
- IC183
- IC184
- IC185
- IC186
- IC187
- IC188
- IC189
- IC190
- IC191
- IC192
- IC193
- IC194
- IC195
- IC196
- IC197
- IC198
- IC199
- IC200

A


B

C

D

• View from soldering side

POWER SUPPLY BOARD ASSEMBLY  
(VWR108)

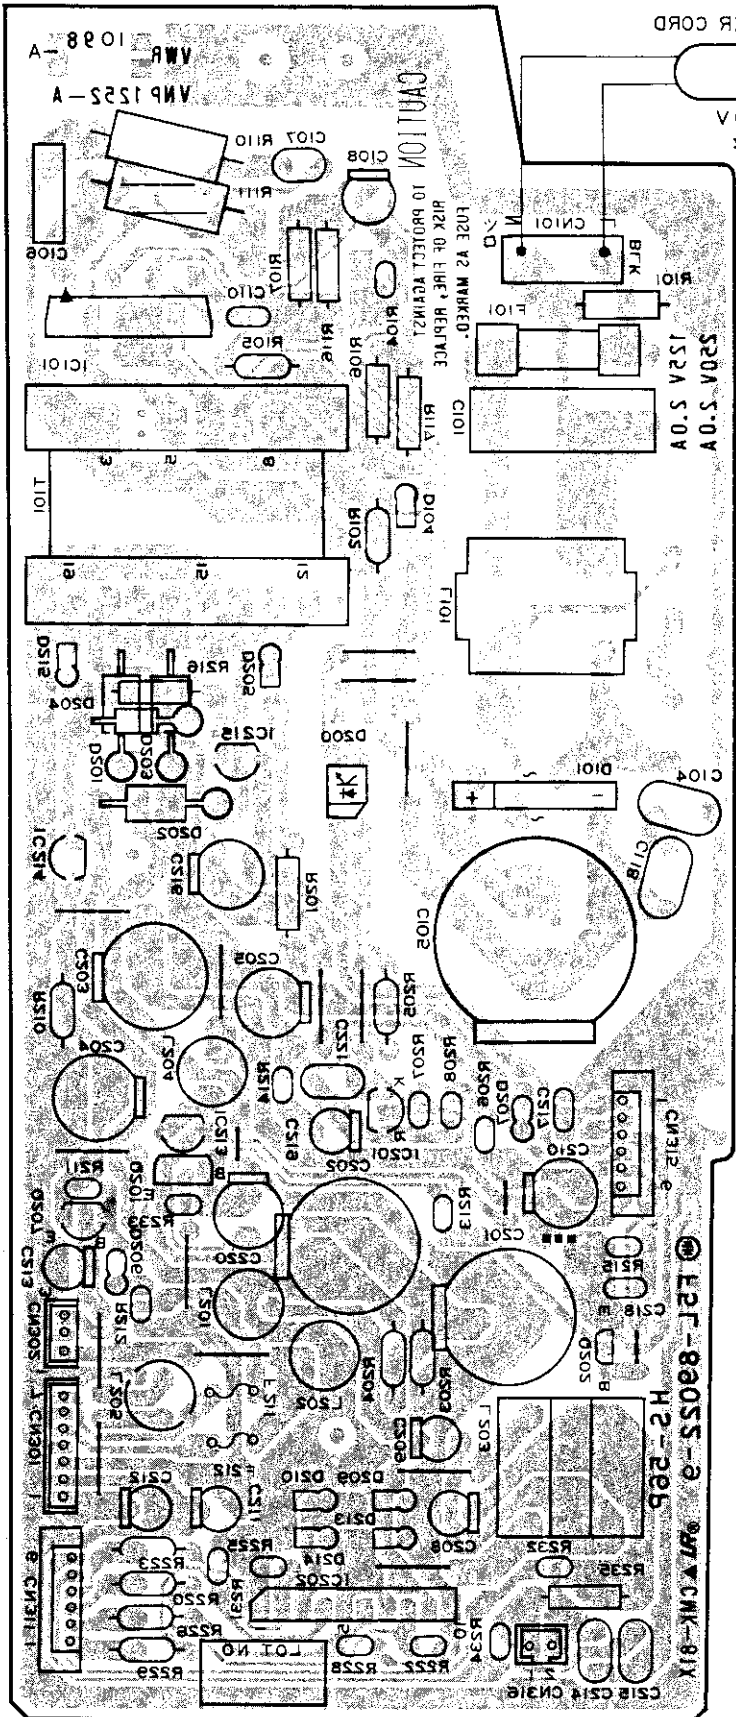


IC101  
IC102  
IC103  
IC104  
IC105  
Q501  
Q502  
Q503  
Q504  
Q505  
Q506  
Q507  
Q508  
Q509  
Q510  
Q511  
Q512  
Q513  
Q514  
Q515  
Q516  
Q517  
Q518  
Q519  
Q520  
Q521  
Q522  
Q523  
Q524  
Q525  
Q526  
Q527  
Q528  
Q529  
Q530  
Q531  
Q532  
Q533  
Q534  
Q535  
Q536  
Q537  
Q538  
Q539  
Q540  
Q541  
Q542  
Q543  
Q544  
Q545  
Q546  
Q547  
Q548  
Q549  
Q550  
Q551  
Q552  
Q553  
Q554  
Q555  
Q556  
Q557  
Q558  
Q559  
Q560  
Q561  
Q562  
Q563  
Q564  
Q565  
Q566  
Q567  
Q568  
Q569  
Q570  
Q571  
Q572  
Q573  
Q574  
Q575  
Q576  
Q577  
Q578  
Q579  
Q580  
Q581  
Q582  
Q583  
Q584  
Q585  
Q586  
Q587  
Q588  
Q589  
Q590  
Q591  
Q592  
Q593  
Q594  
Q595  
Q596  
Q597  
Q598  
Q599  
Q600

A  
B  
C  
D



• View From component side

POWER SUPPLY BOARD ASSEMBLY  
(VWR1098)

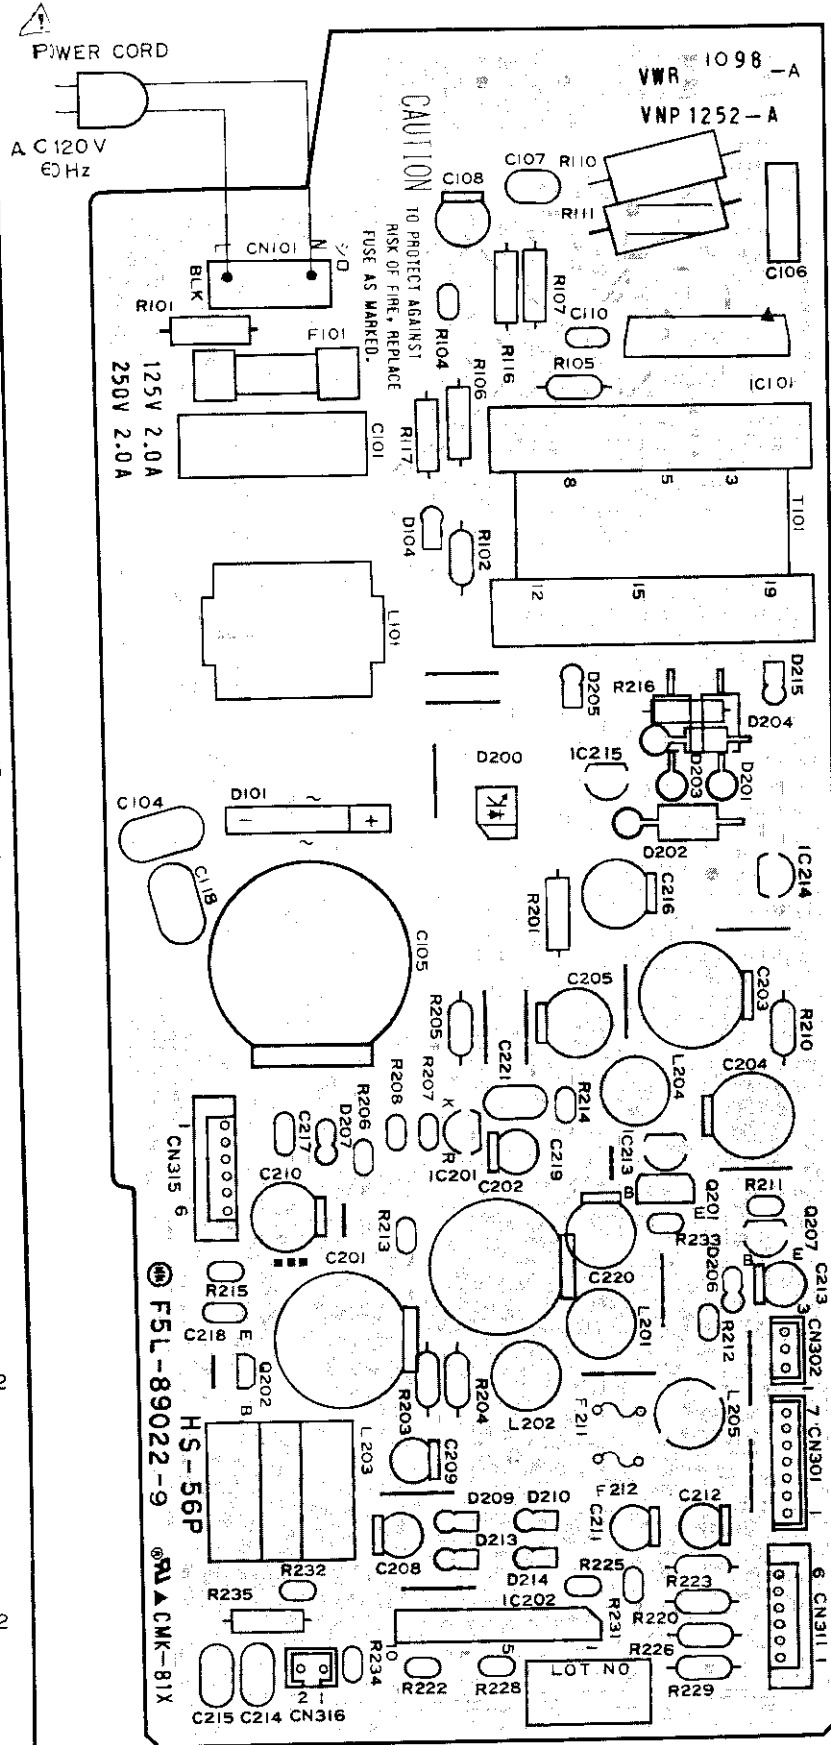


P.C.B. pattern diagram indication	Corresponding part symbol	Part name
		Transistor
		FET
		Diode
		Zener diode
		LED
		Varactor
		Tact switch
		Inductor
		Coil
		Transformer
		Fuse
		Ceramic capacitor
		Mylar capacitor
		Styror capacitor
		Electrolytic capacitor (Non polarized)
		Electrolytic capacitor (Noiseless)
		Electrolytic capacitor (Polarized)
		Electrolytic capacitor (Polarized)
		Power capacitor
		Semi-fixed reactor
		Resistor array
		Resistor
		Resonator
		Thermistor

1. This P.C.B. connection diagram is viewed from the parts mounted side.
2. The parts which have been mounted on the board can be replaced with those shown with the corresponding wiring symbols listed in the above Table.
3. The capacitor terminal marked with shows negative terminal.
4. The diode marked with shows cathode side.
5. The transistor terminal marked with shows emitter.

POWER SUPPLY BOARD ASSEMBLY (VWR1098)

IC202	TH5P4	D201,202	S3LA20	D205,209, D1N120
IC213,214	ICP-N50	D203	S3S4M	D210, D213-215
IC215	ICP-N38	D204	ERB83-006	
F211, 212	PT0.5A	D206	MTZ7.5B	
Q201	2SB1331	D207	MTZ6.2B	
Q202	DTC114ES			

POWER SUPPLY BOARD ASSEMBLY (VWR1098)

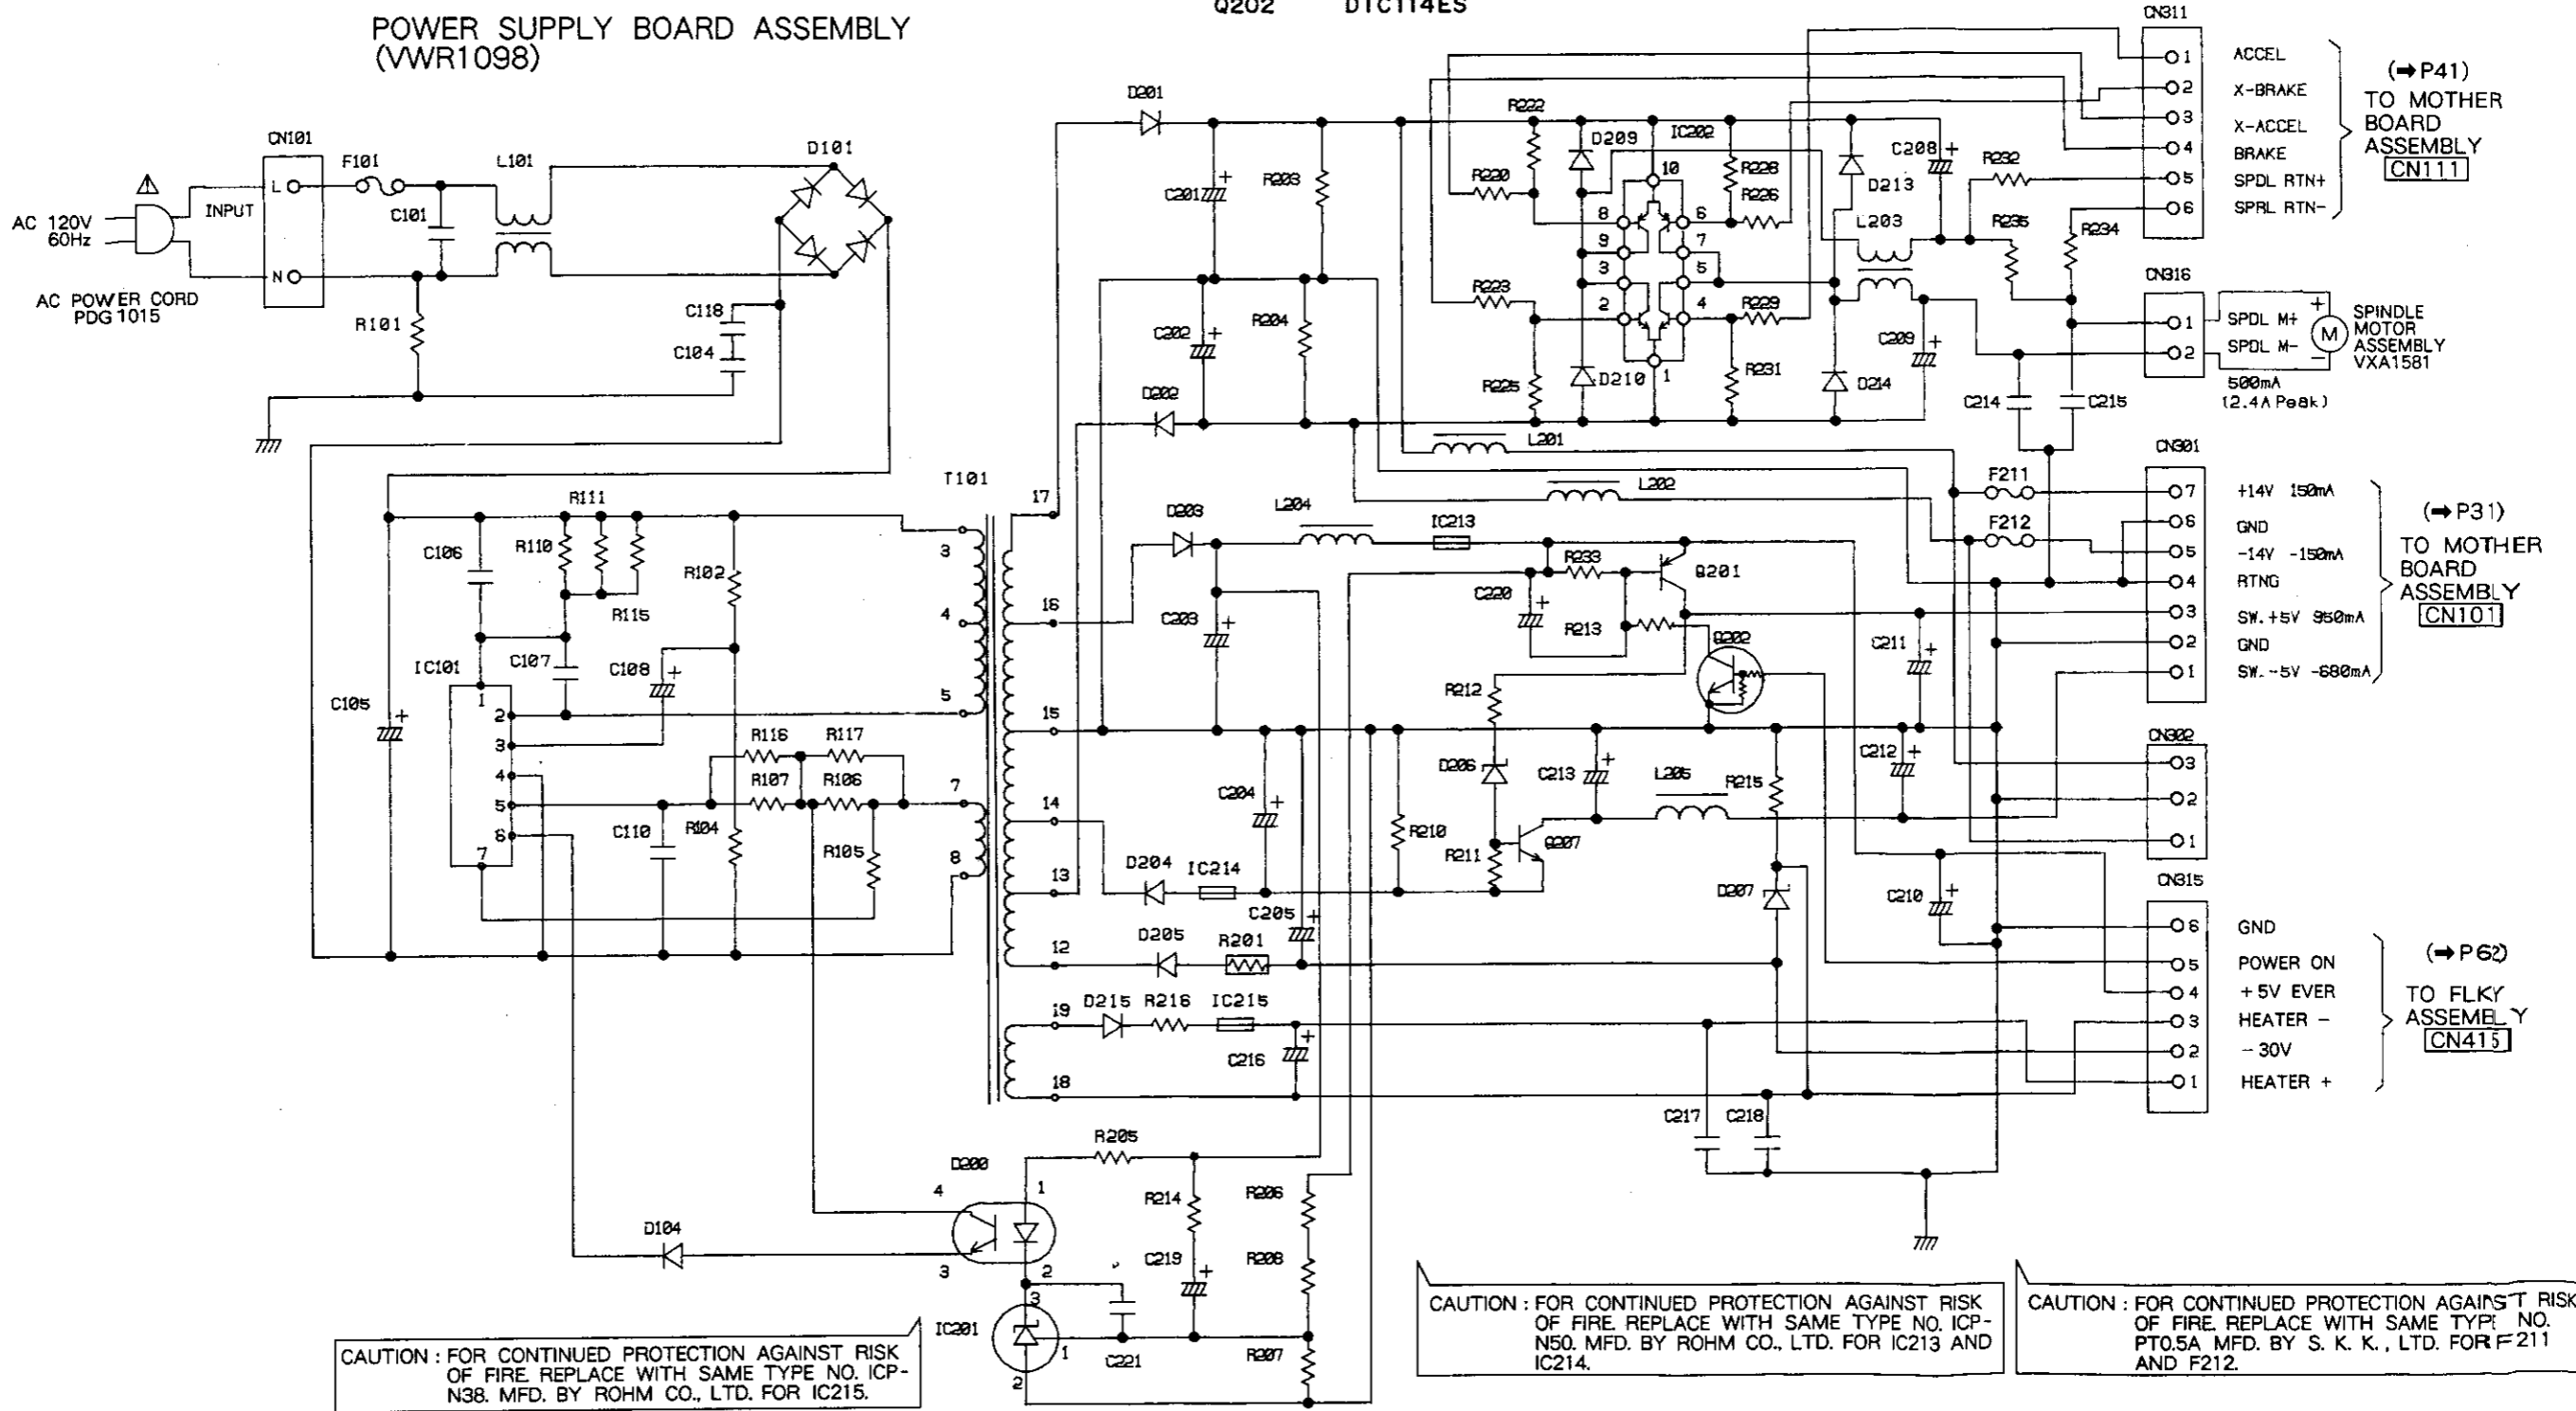

CAUTION : FOR CONTINUED PROTECTION AGAINST RISK OF FIRE REPLACE WITH SAME TYPE NO. ICP-N38. MFD. BY ROHM CO., LTD. FOR IC215.

CAUTION : FOR CONTINUED PROTECTION AGAINST RISK OF FIRE REPLACE WITH SAME TYPE NO. ICP-N50. MFD. BY ROHM CO., LTD. FOR IC213 AND IC214.


CAUTION : FOR CONTINUED PROTECTION AGAINST RISK OF FIRE REPLACE WITH SAME TYPE NO. PT0.5A MFD. BY S. K. K., LTD. FOR F211 AND F212.

A  
B  
C  
D


1 | 2 | 3 | 4 | 5 | 6

MAIN ASSEMBLY (D. AUDIO SECTION)

MAIN ASSEMBLY (D. AUDIO SECTION)


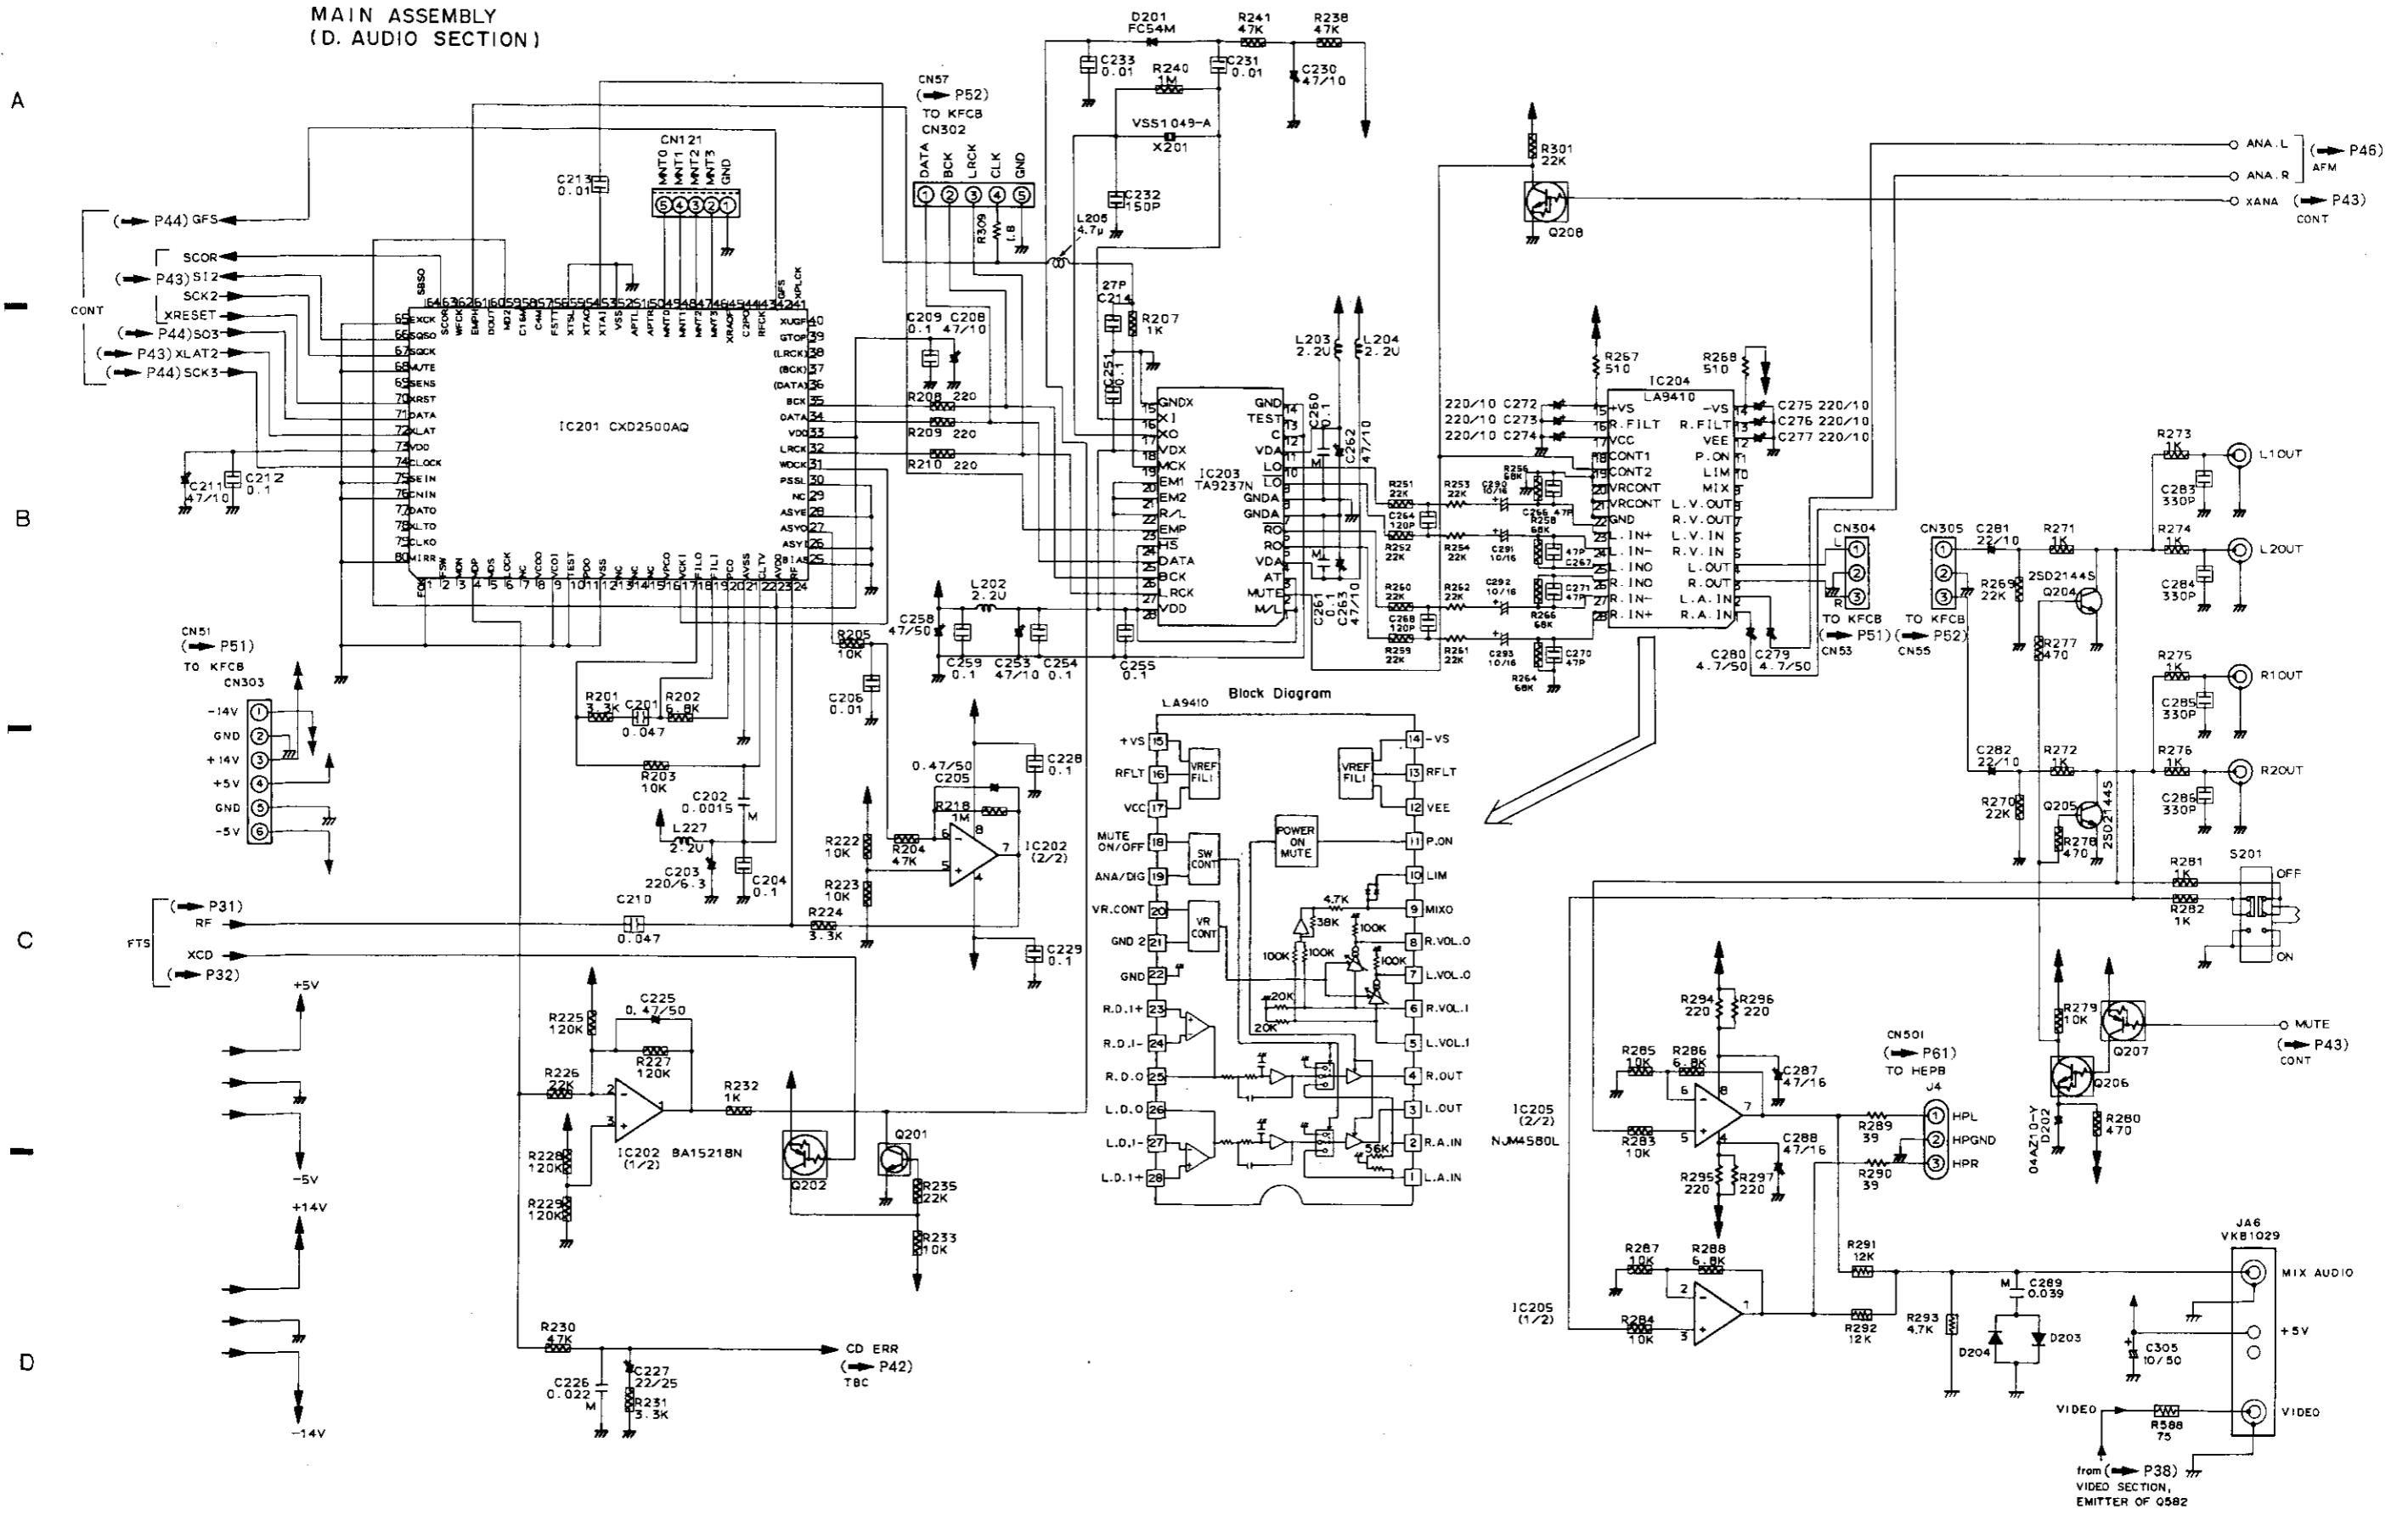


● View from component side

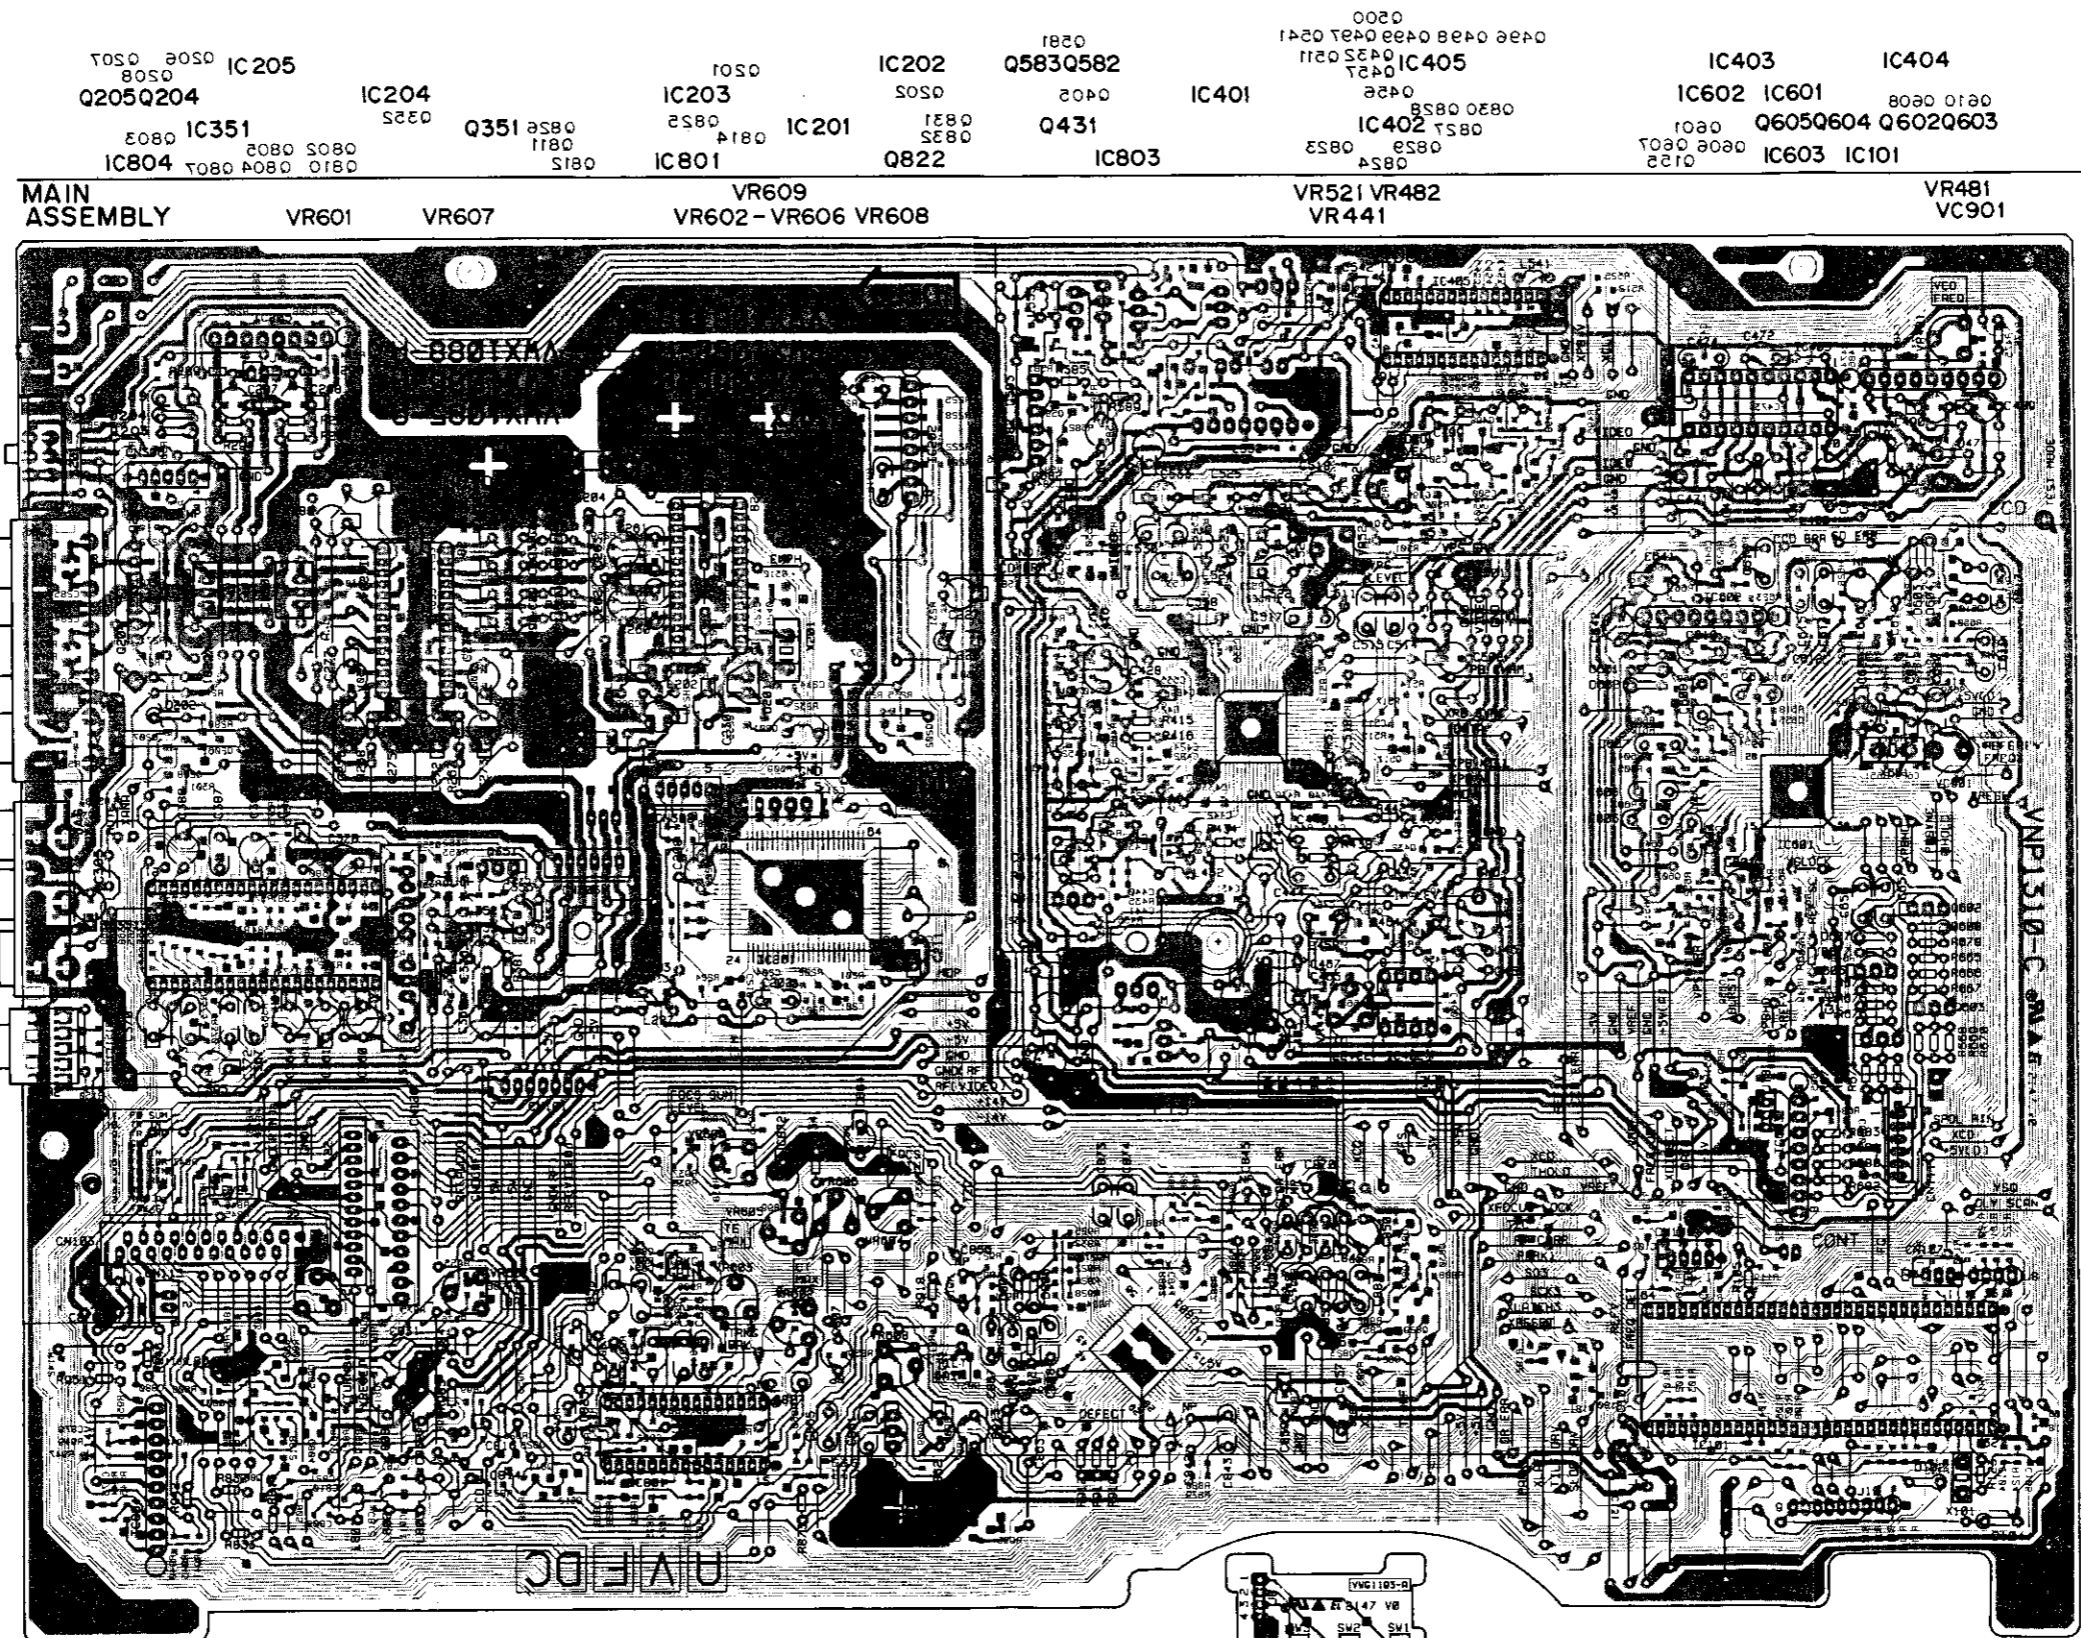

MAIN ASSEMBLY VR601 VR607 VR609 VR602 - VR606 VR608 VR521 VR482 VR441 VR481 VC901

FG ASSEMBLY

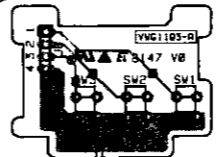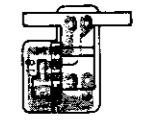

SW ASSEMBLY

1

2

3

4

5

A

B

C

D

1

2

3

4

5




6

A

B

C

D

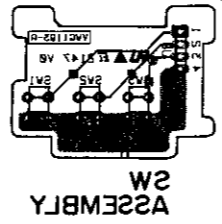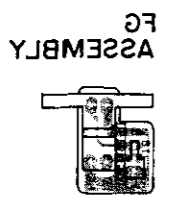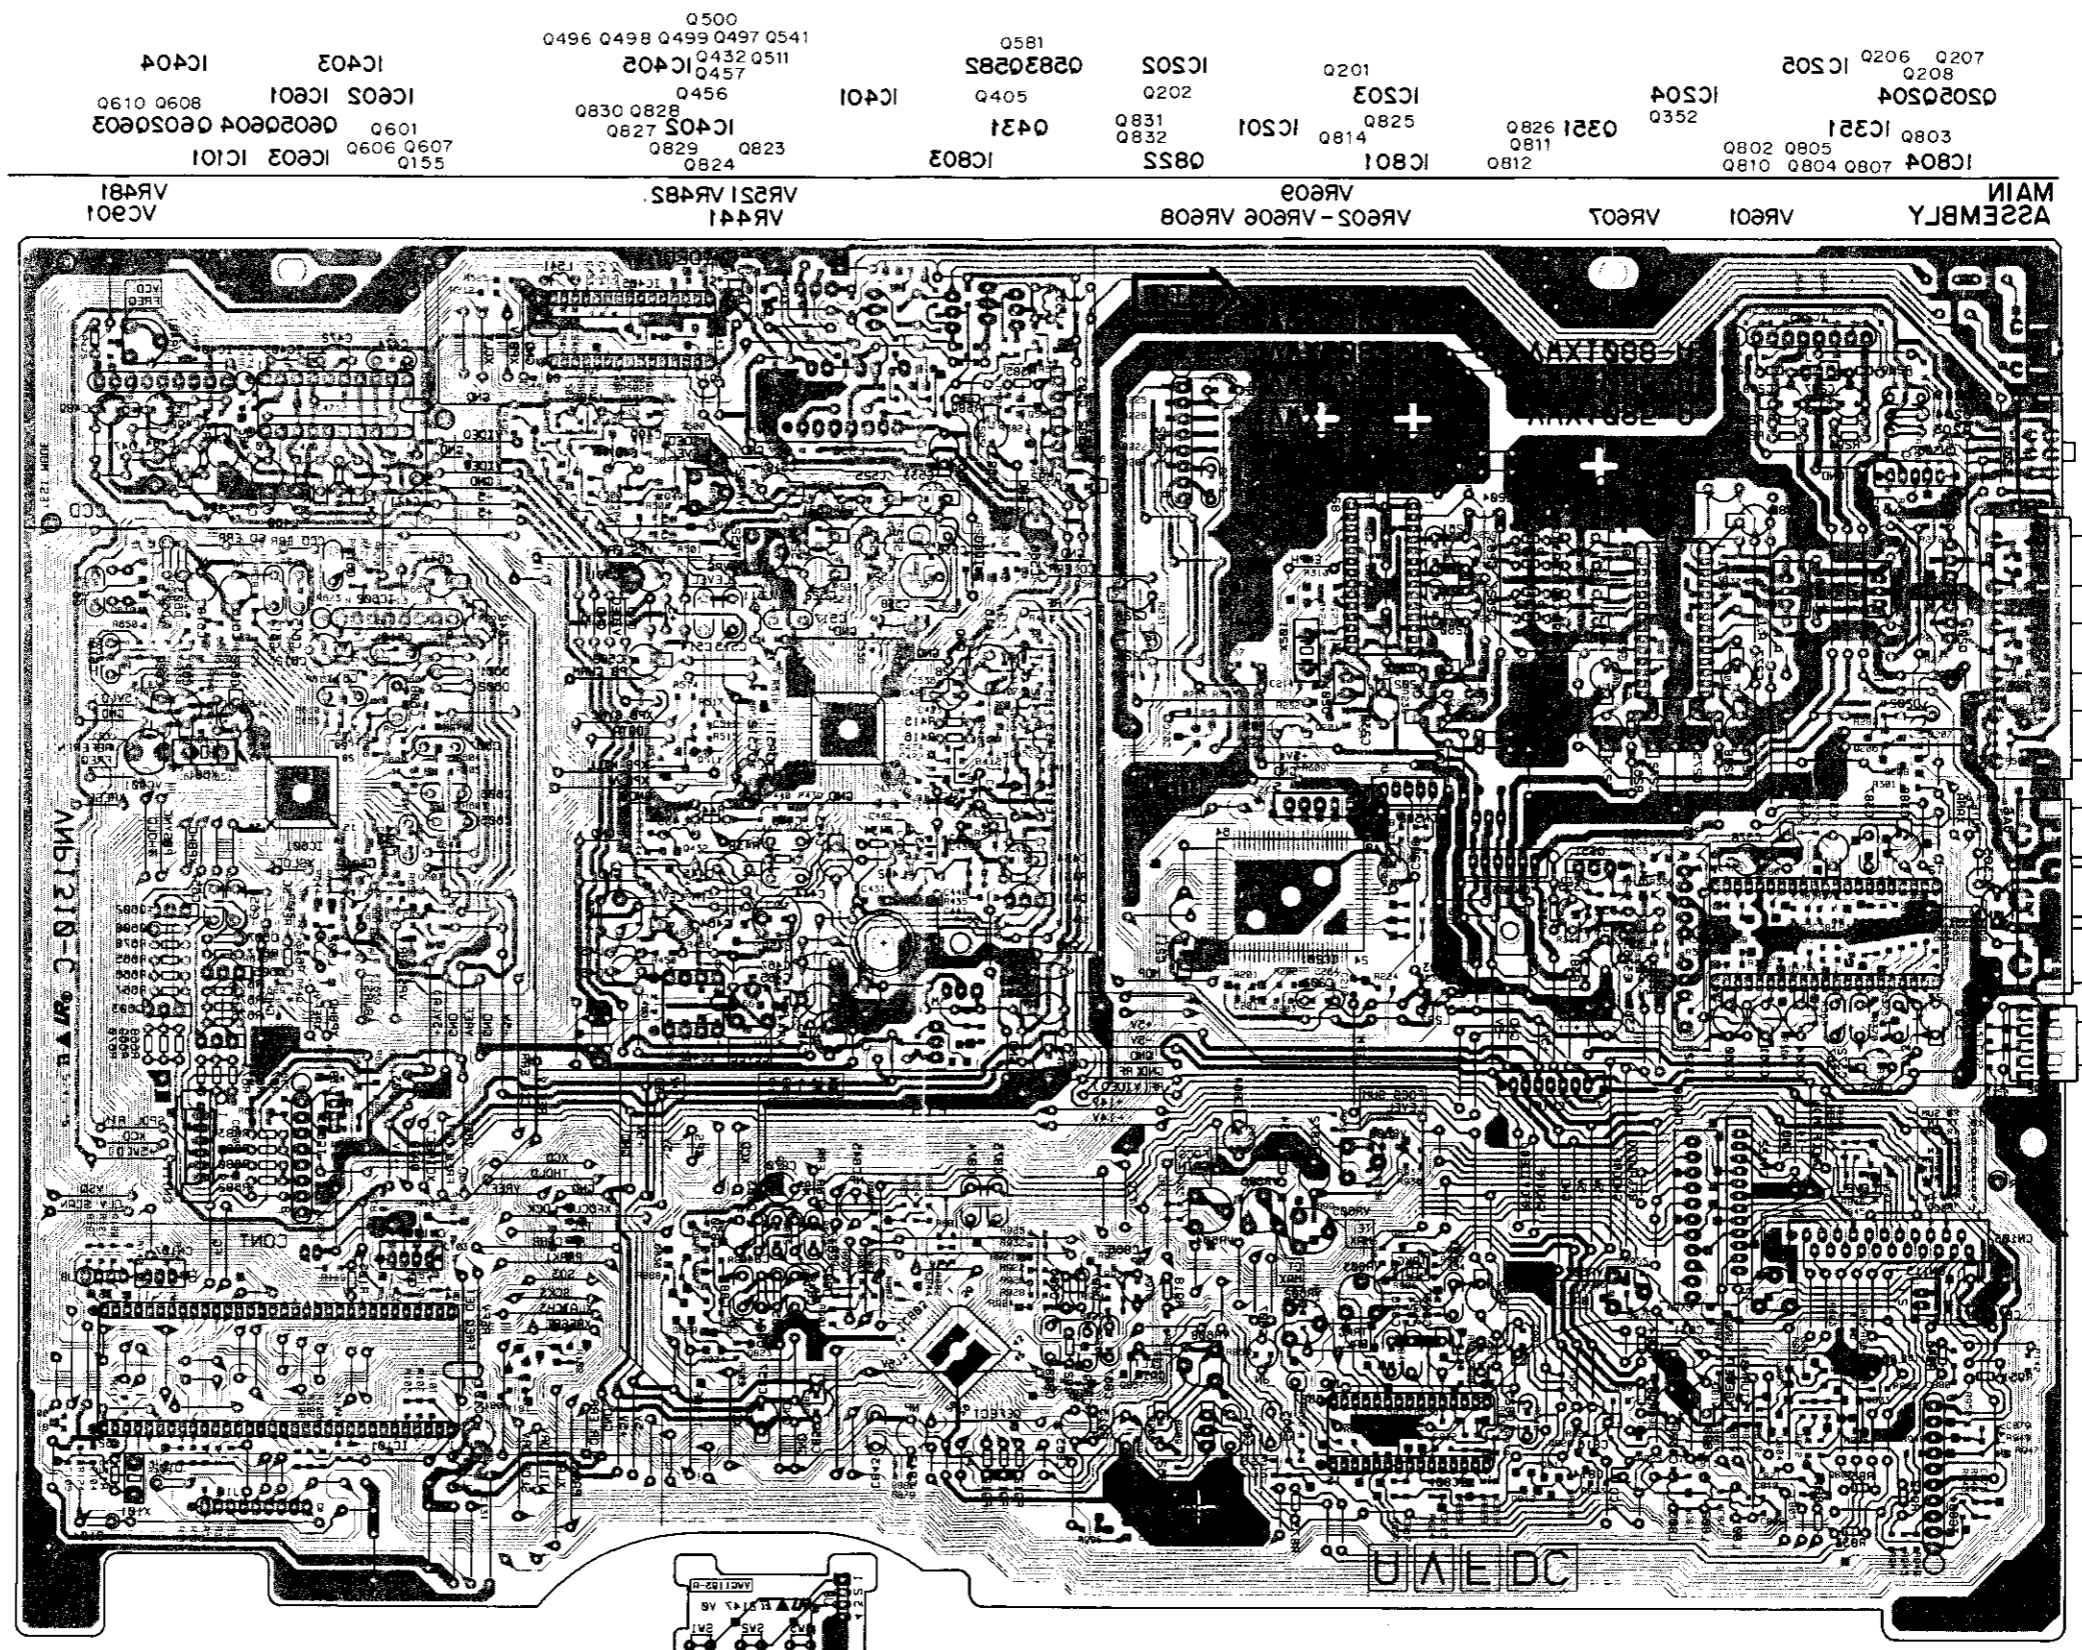

A

B

C

D


● View from component side

A


B

C

D

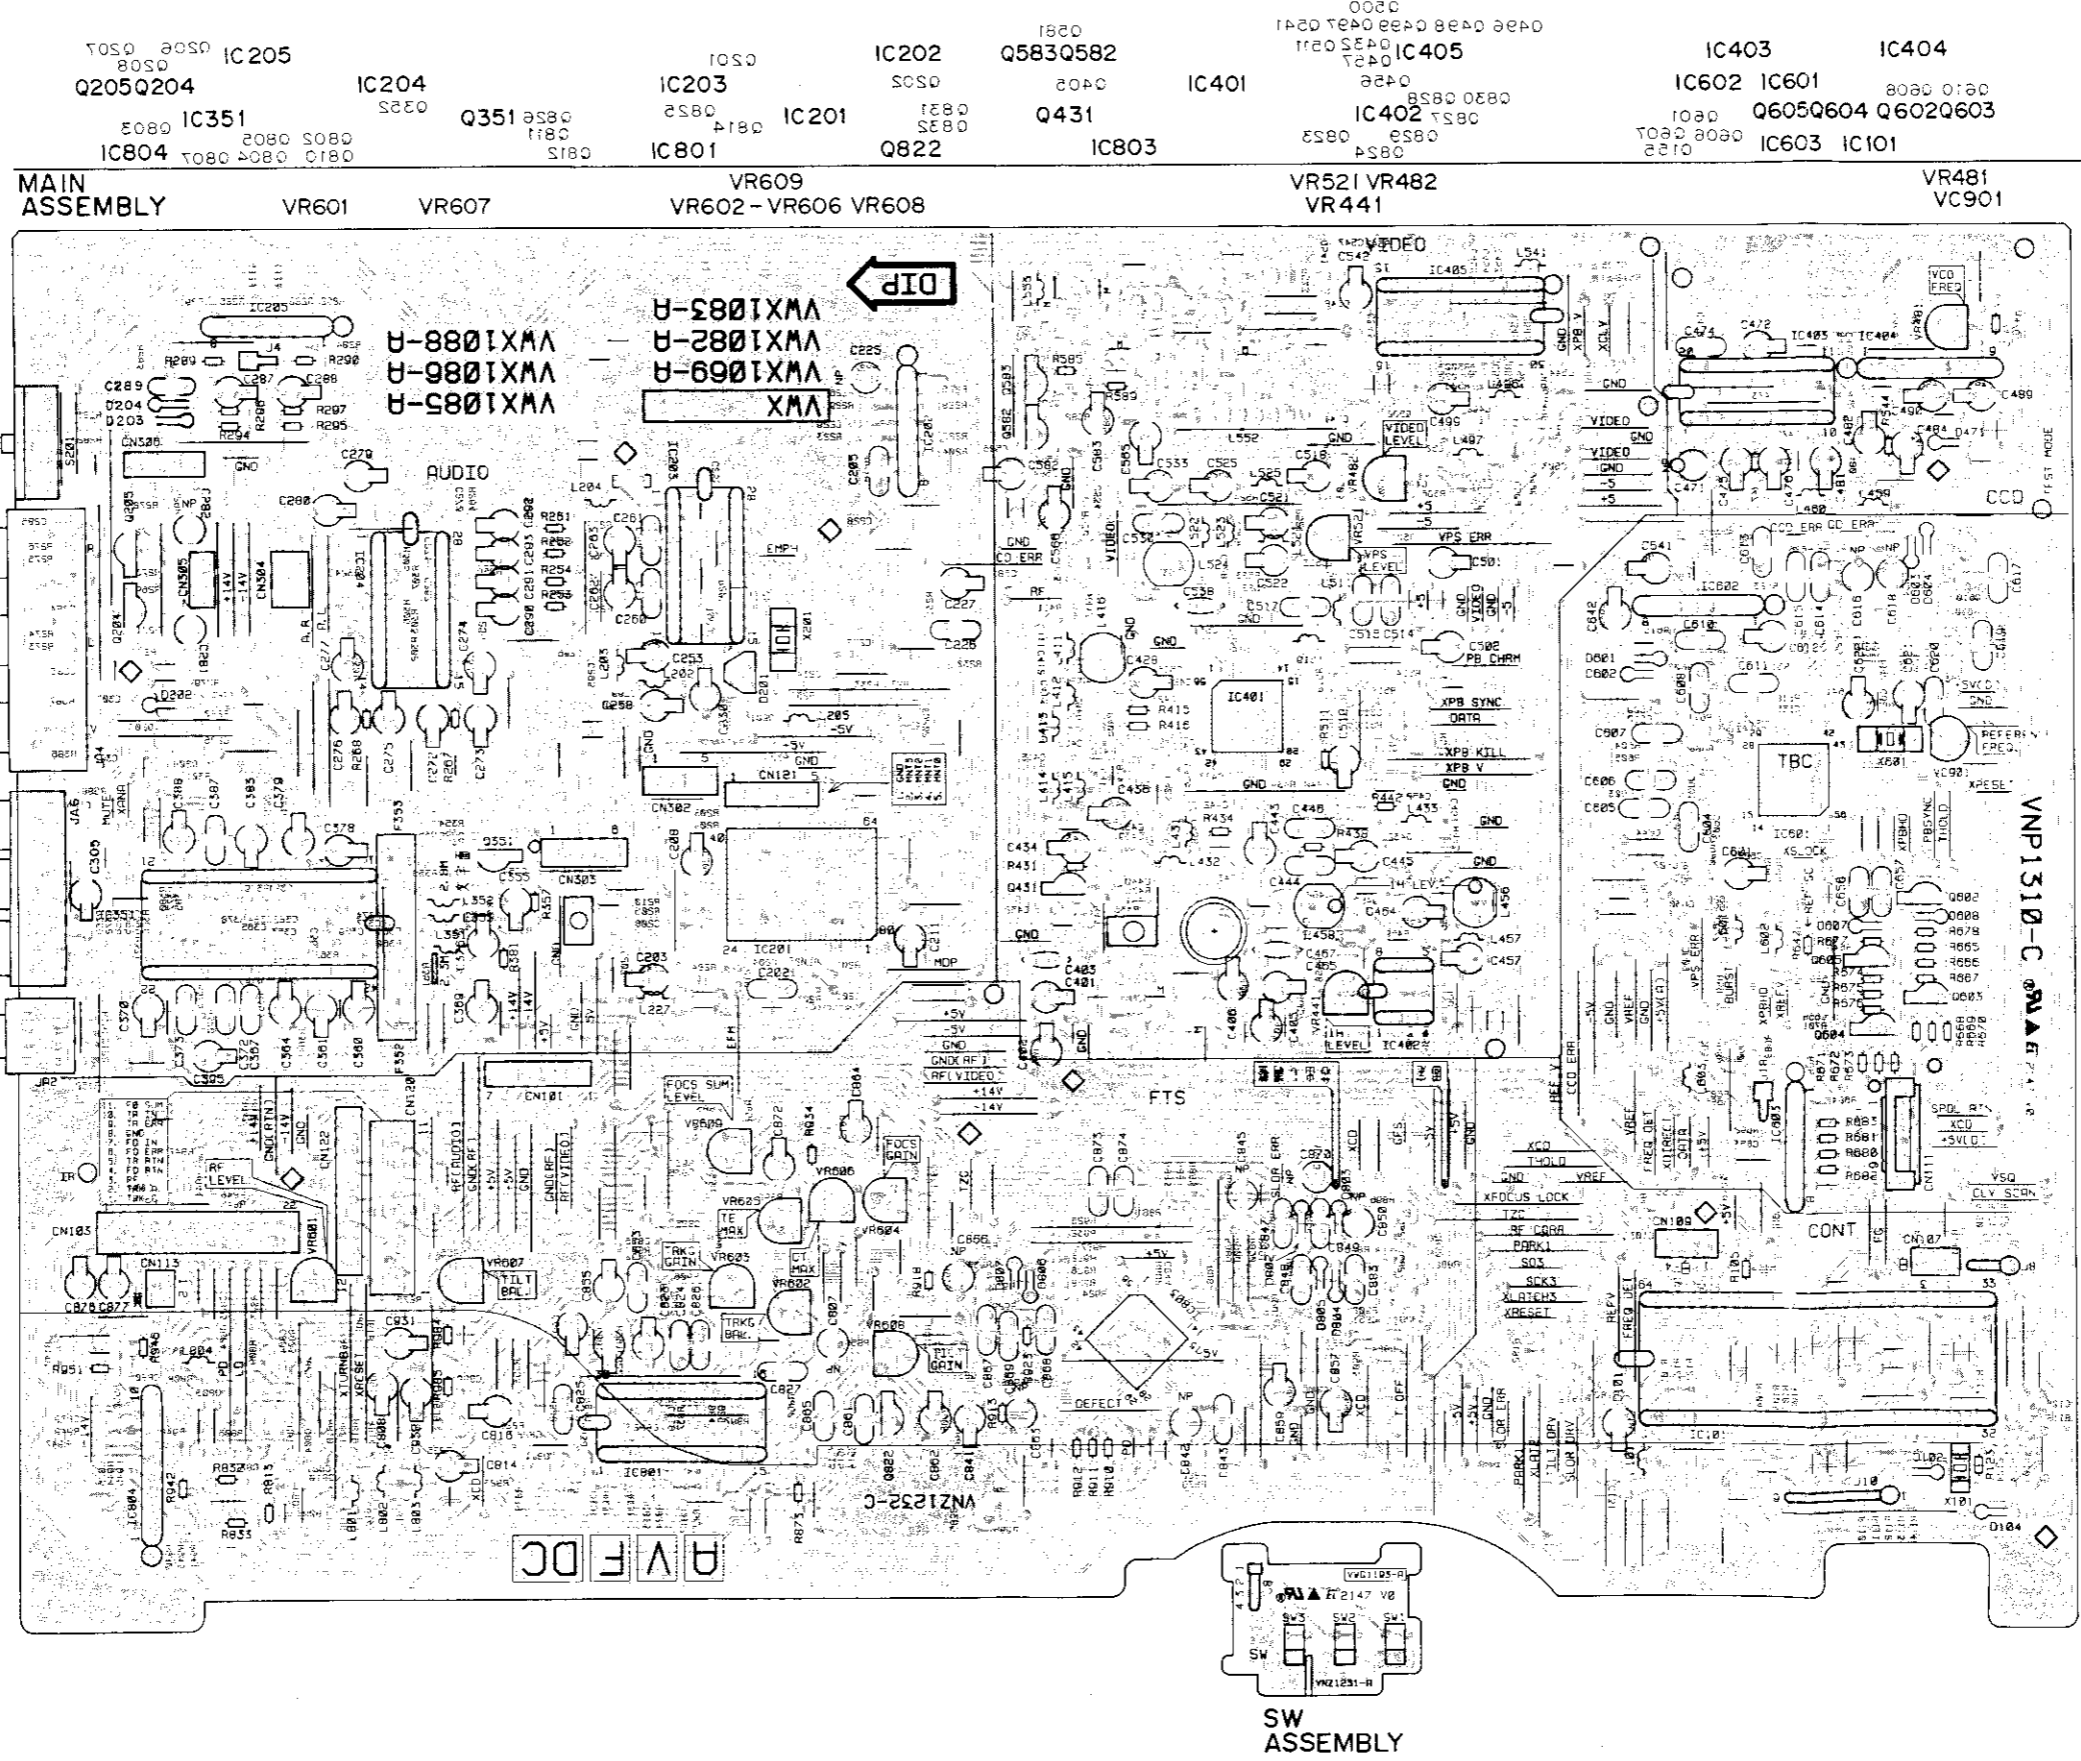


FG ASSEMBLY

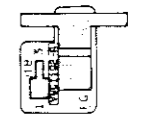

SW ASSEMBLY

• View from soldering side

CFLD-A850KNC

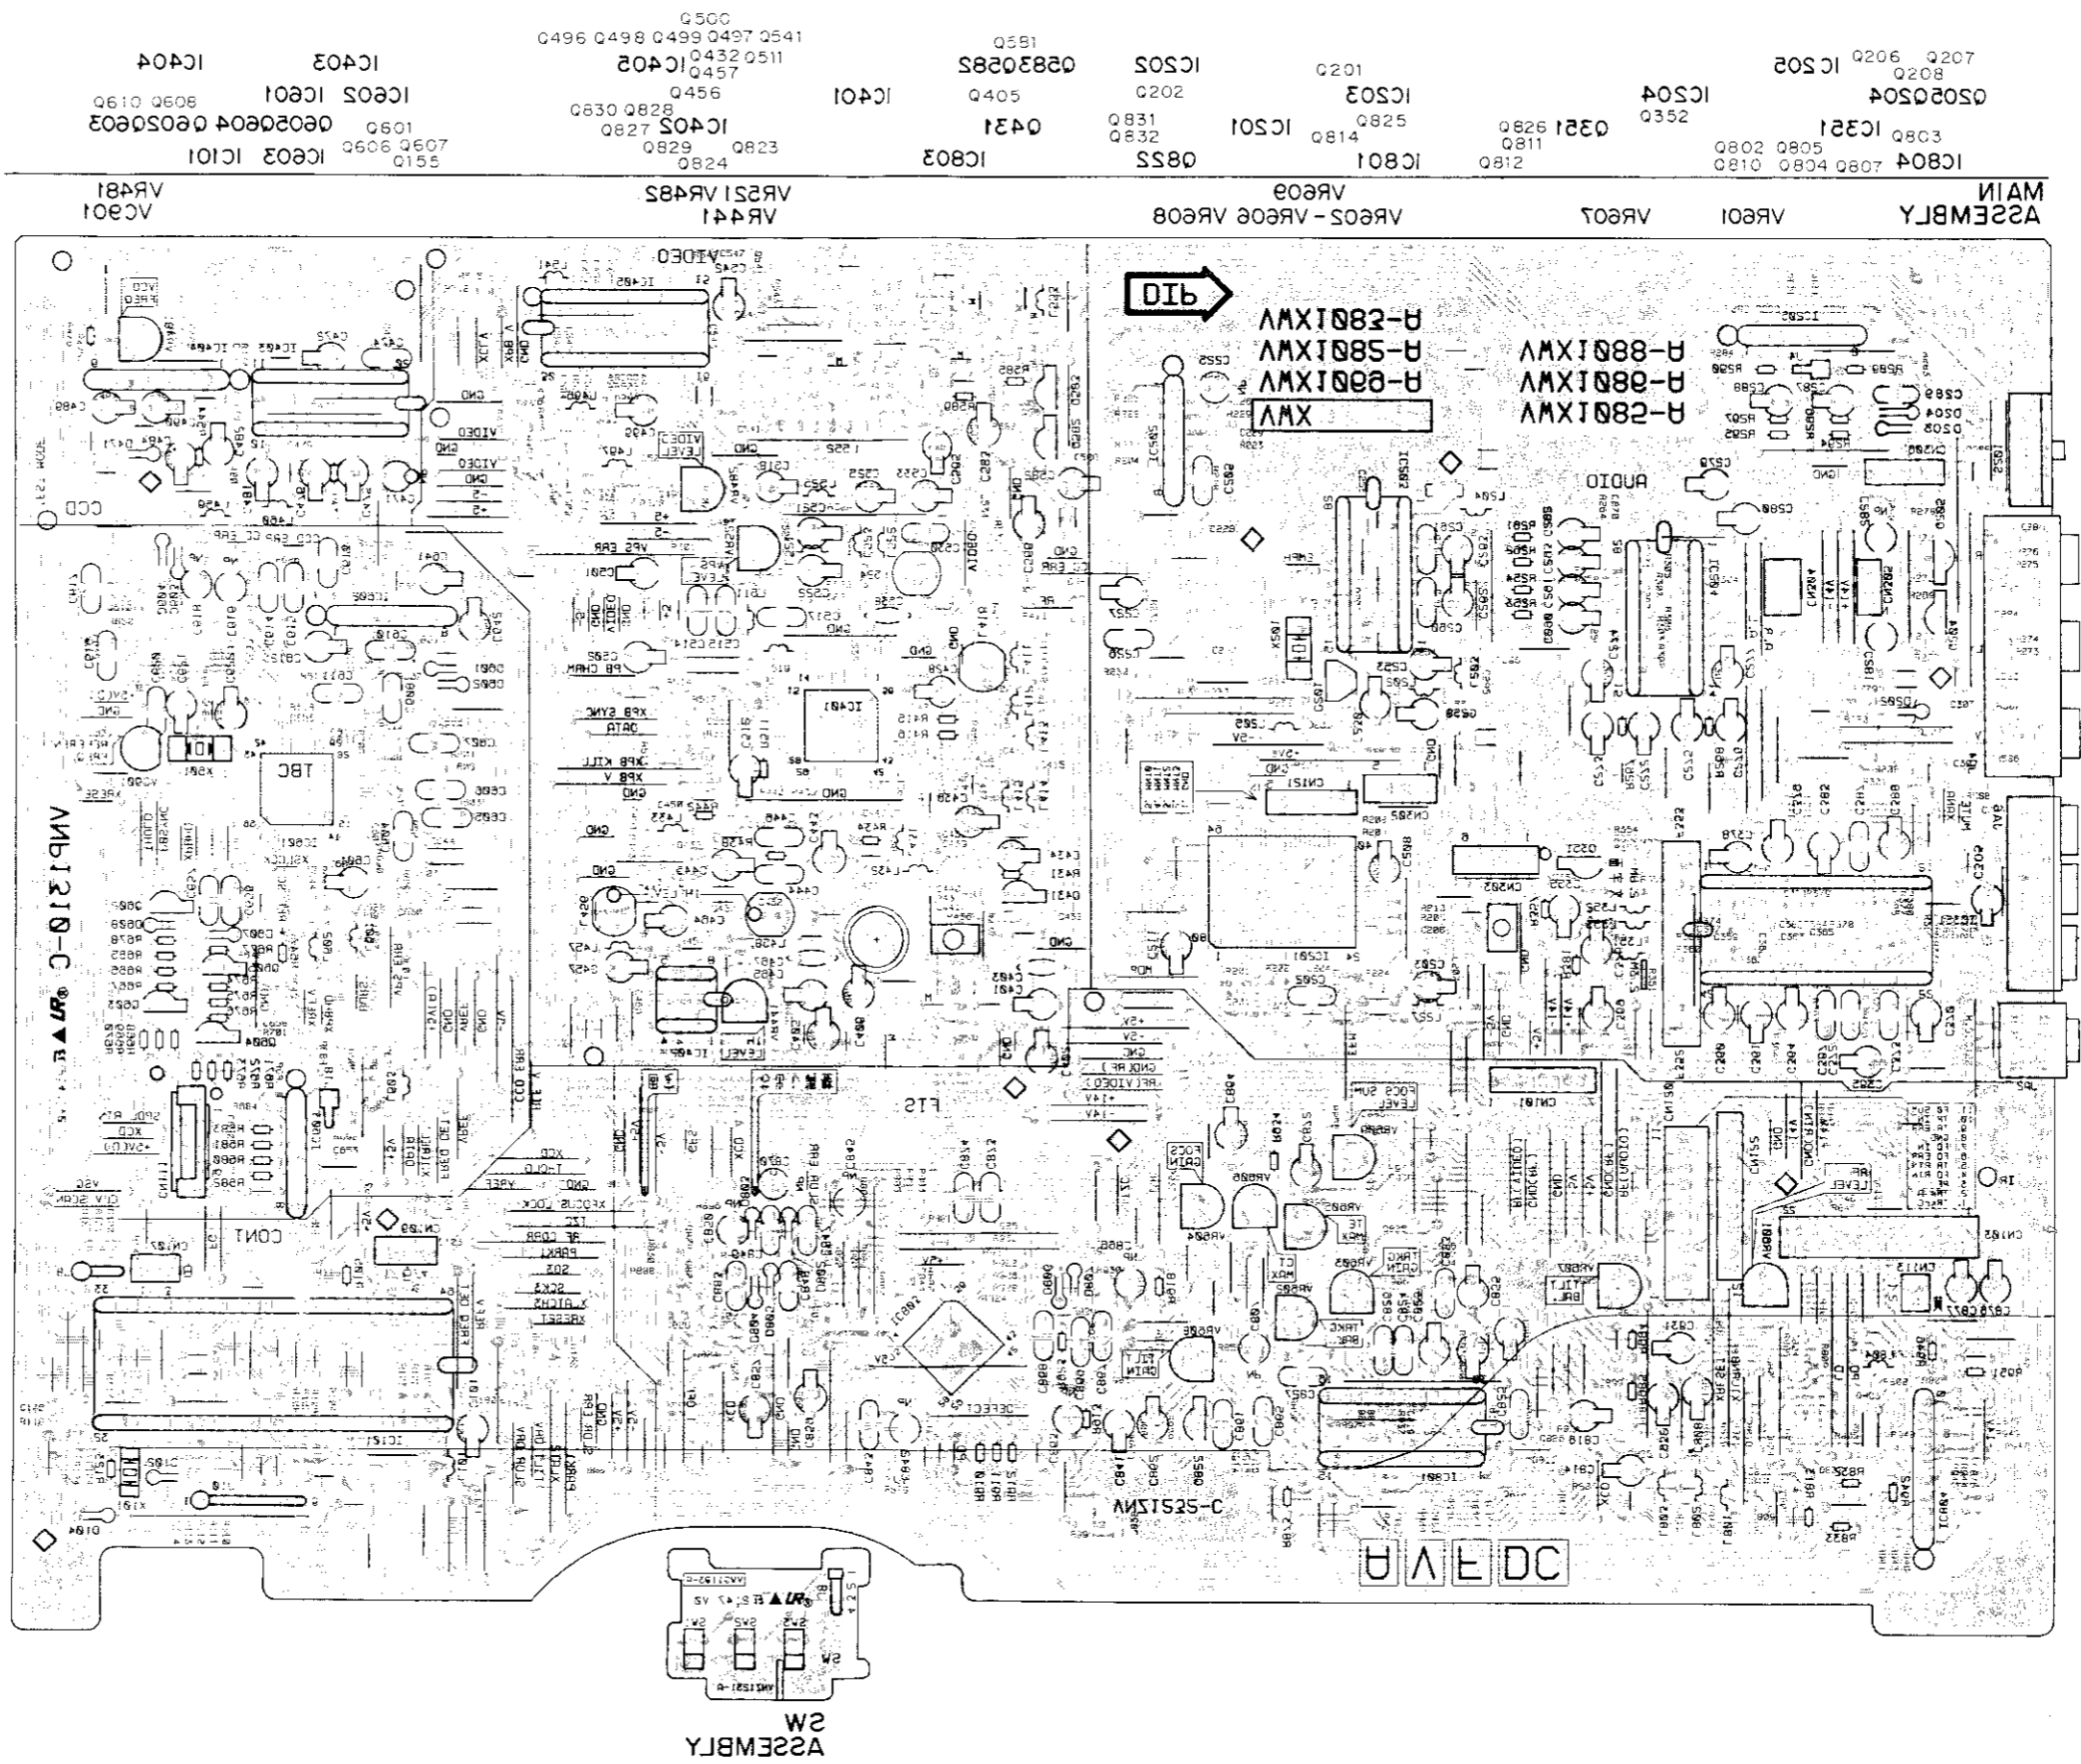

**SERVICE INFORMATION FOR CNCB ASSEMBLY**


- The CNCB assembly of CLD-V820/KUC is the same as that of CLD-2590K/R.
- R803 (RD1/6PM331J) is an addition to CNCB assembly for CLD-V820/KUC and CLD-2590K/R.

A


B

C

D

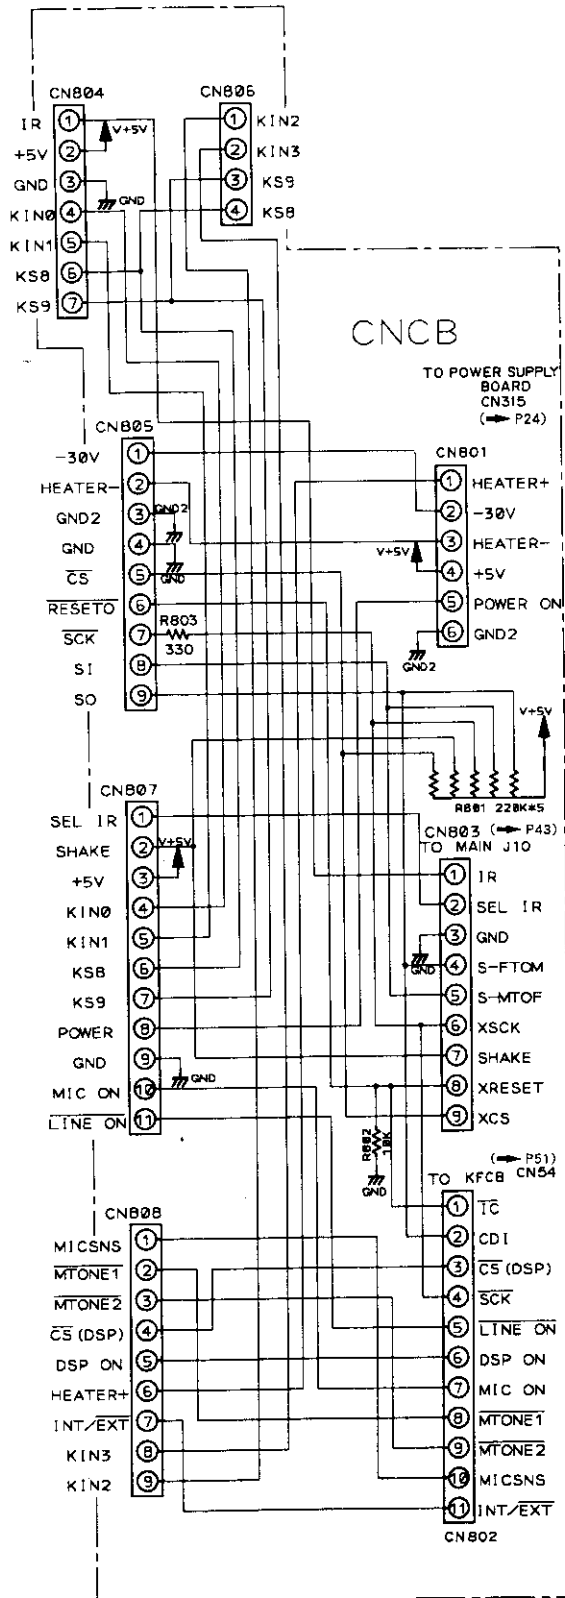


● View from component side

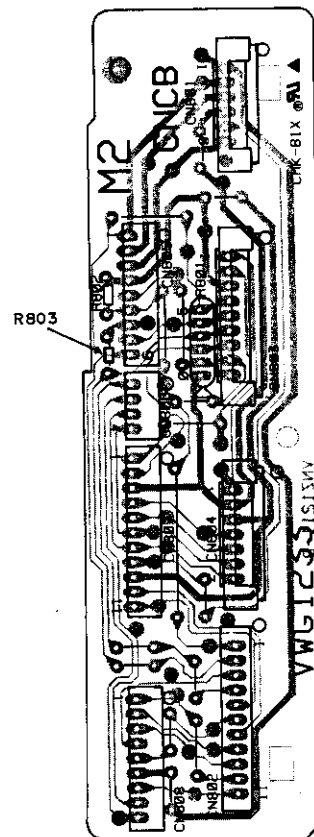




**SERVICE INFORMATION FOR KFCB ASSEMBLY**

- The KFCB assembly of CLD-V820 is the same as that of CLD-2590K/R.
- R121 (RD1/6PM225J) and C116 (CKPUYY103N16) are addition to KFCB assembly and IC18 (TC74HCU04AF) and C115 (CKPUYY103N16) are deletion from KFCB assembly for CLD-V820/KUC and CLD-2590K/R.

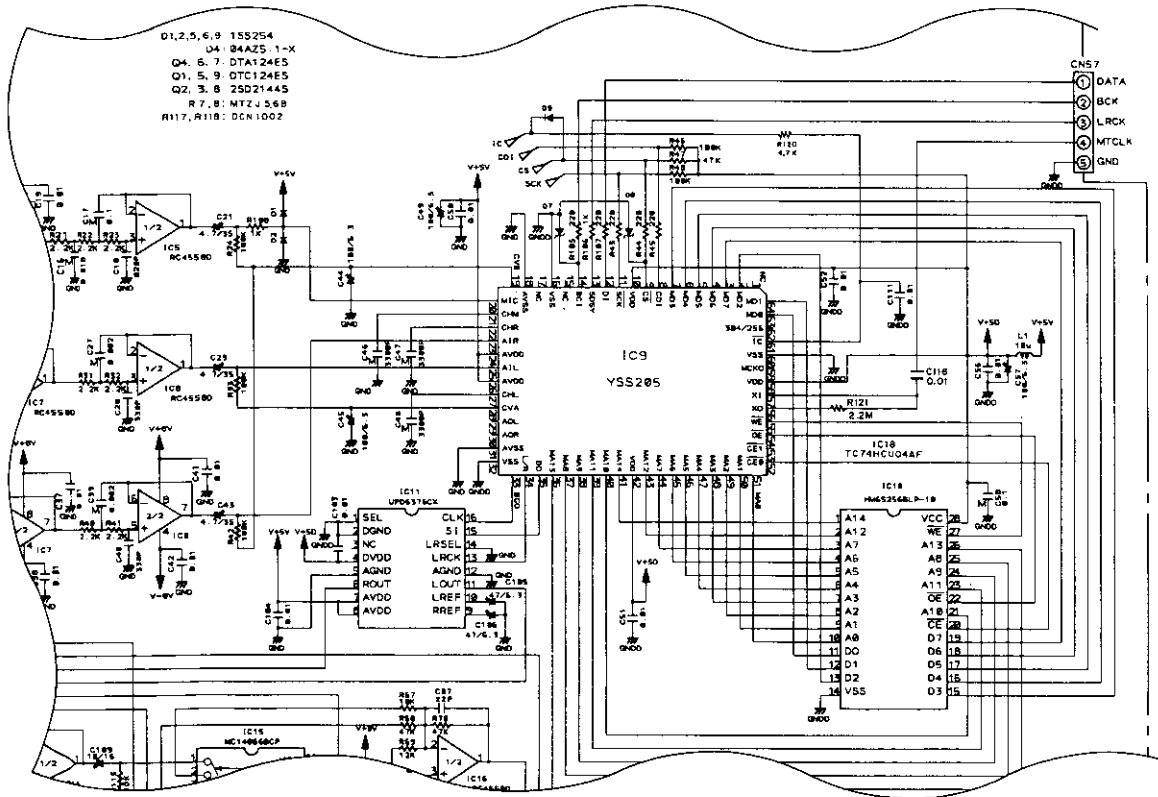

- View from component side

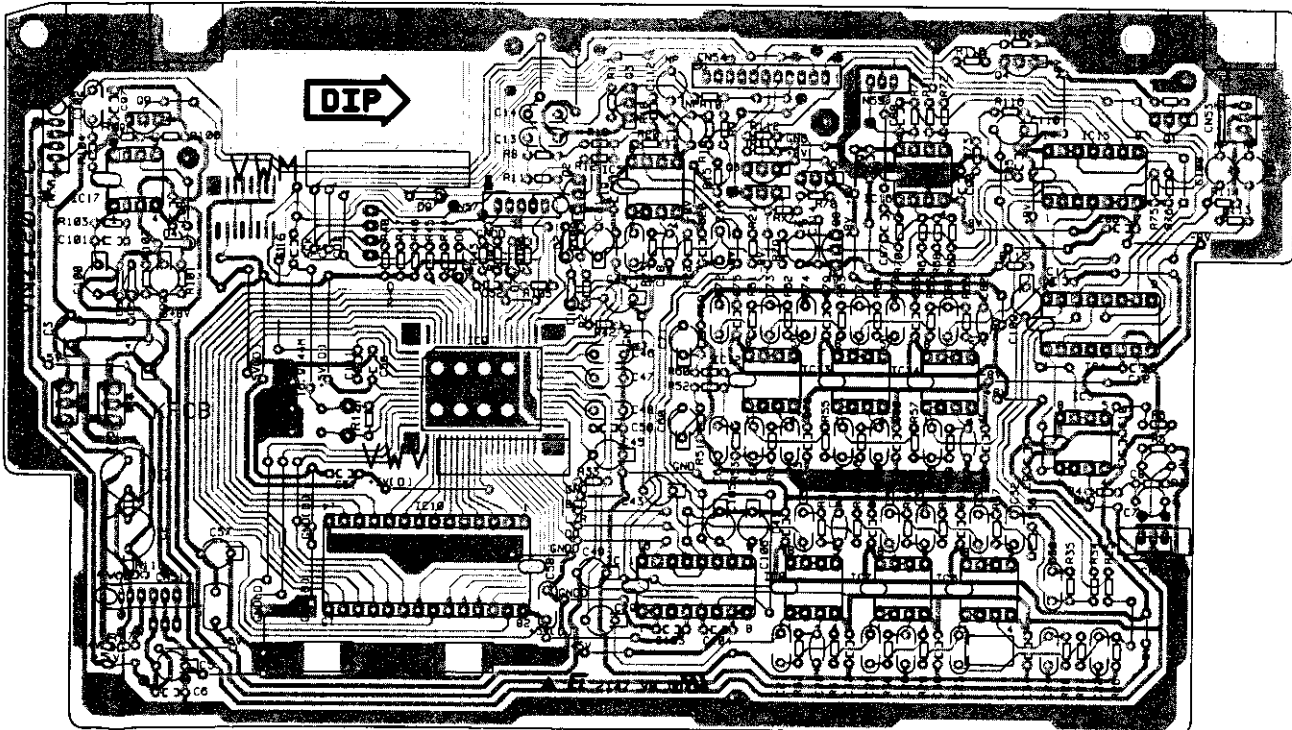

**SERVICE INFORMATION FOR CNCB ASSEMBLY**


- The CNCB assembly of CLD-V820/KUC is the same as that of CLD-2590K/R.
- R803 (RD1/6PM331J) is an addition to CNCB assembly for CLD-V820/KUC and CLD-2590K/R.

A


B

C

D

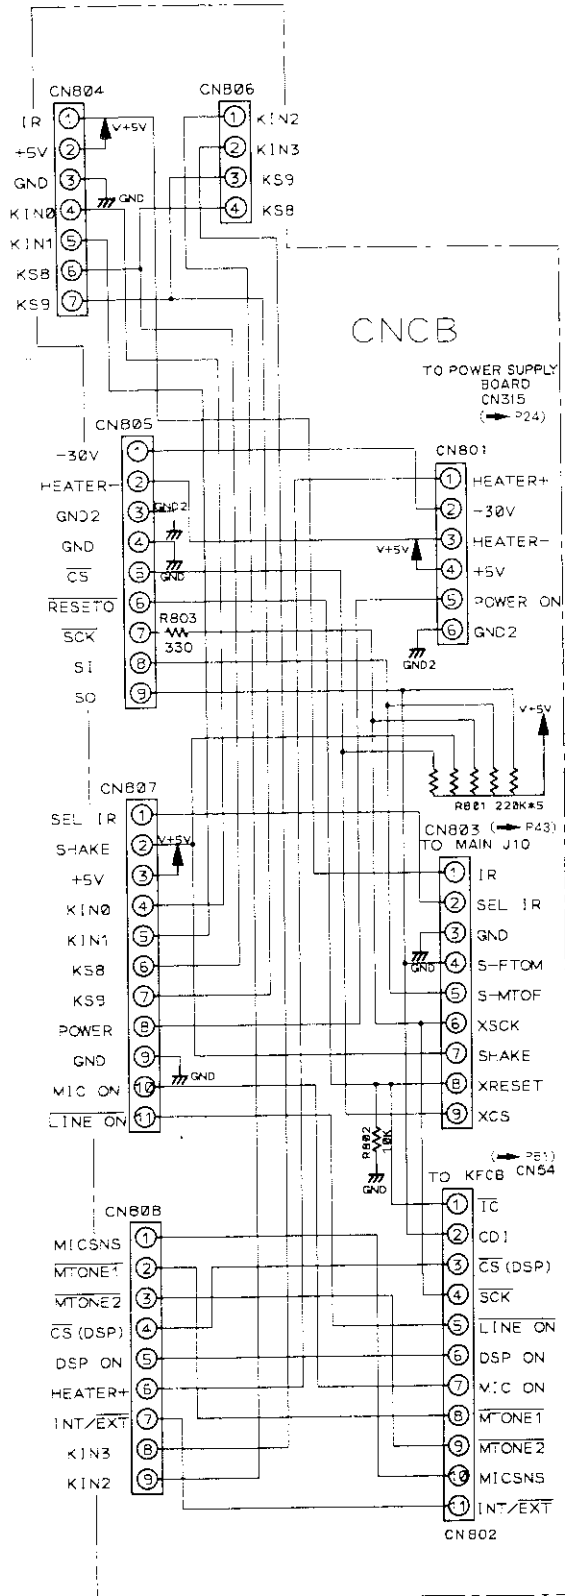


- View from component side

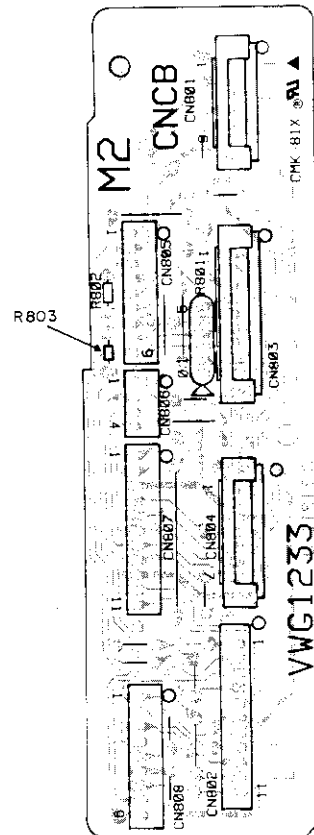


**SERVICE INFORMATION FOR KFCB ASSEMBLY**

- The KFCB assembly of CLD-V820 is the same as that of CLD-2590K/R.
- R121 (RD1/6PM225J) and C116 (CKPUYY103N16) are addition to KFCB assembly and IC18 (TC74HCU04AF) and C115 (CKPUYY103N16) are delection from KFCB assembly for CLD-V820/KUC and CLD-2590K/R.

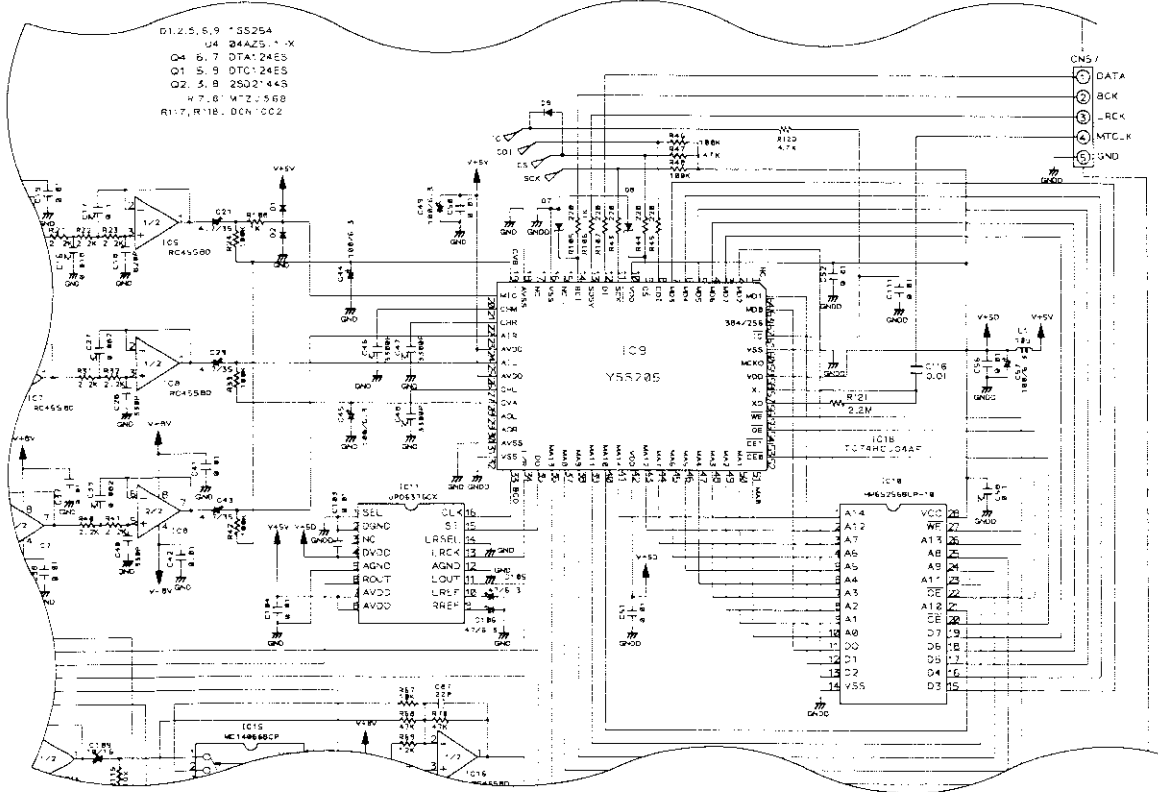


• View from component side

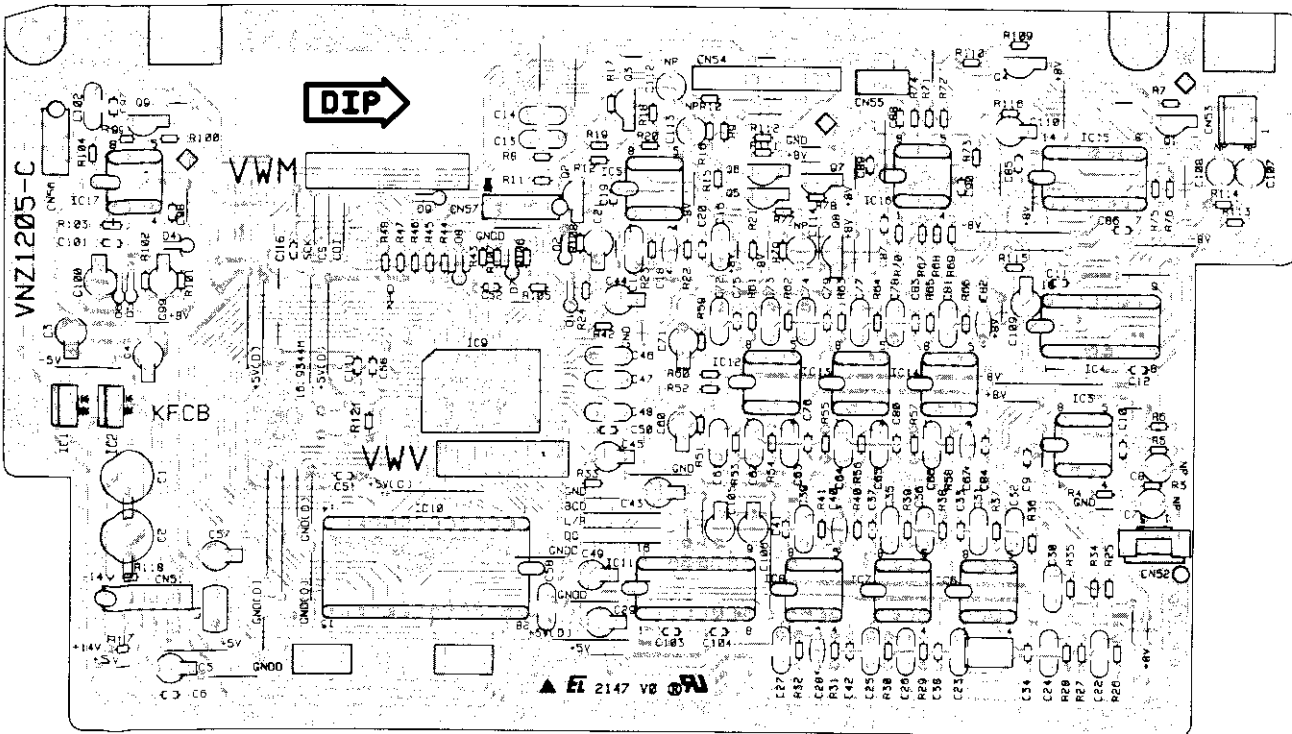

3565

**PIONEER®**  
The Art of Entertainment

# Service Manual

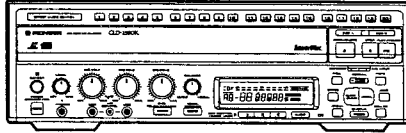

ORDER NO.  
ARP2316

CD CDV LD PLAYER

# CLD-2590K

● This manual is applicable to the R type.

## CONTENTS

1. PACKING .....	2
2. EXPLODED VIEWS AND PARTS LIST .....	3
3. P.C. BOARDS LOCATION .....	19
4. SCHEMATIC AND P.C. BOARDS DIAGRAM .....	20
5. P.C.B's PARTS LIST .....	63
6. ADJUSTMENTS .....	72
7. DISASSEMBLY .....	101
8. ABBREVIATIONS TABLE.....	104
9. CIRCUIT DESCRIPTION.....	105
10. PANEL FACILITIES.....	108
11. CONNECTIONS .....	111
12. SPECIFICATIONS .....	113

**PIONEER ELECTRONIC CORPORATION** 4-1, Meguro 1-Chome, Meguro-ku, Tokyo 153, Japan  
**PIONEER ELECTRONICS SERVICE INC.** P.O. Box 1760, Long Beach, California 90801 U.S.A.  
**PIONEER ELECTRONICS OF CANADA, INC.** 505 Cochrane Drive, Markham, Ontario L3R 8E3 Canada  
**PIONEER ELECTRONIC [EUROPE] N.V.** Keetberglaan 1, 9120 Beveren, Belgium  
**PIONEER ELECTRONICS AUSTRALIA PTY. LTD.** 178-184 Boundary Road, Braeside, Victoria 319, Australia TEL: [03] 580-9911  
 © PIONEER ELECTRONIC CORPORATION 1991


3565

SO AUG. 1991 Printed in Japan

# 1. PACKING

## Parts List

Mark No.	Description	Part No.	Mark No.	Description	Part No.
1	Connection cord	VDE - 055	51	Dry cell battery (R03, AAA)	VEM - 022
2	Video cable	VDE - 056	52	Vinyl bag	VHL - 014
3	Operating instructions (English)	VRB1062	53	Caution card	VRR1009
4	Remote control unit (CU - CLD047)	VXX1604	54	Caution card (UC)	VRM1026
5	Pad (R)	VHA1083	55	Tac card	VRW1200
6	Pad (L)	VHA1082			
7	Packing case	VHG1187			
8	Mirror mat	VHL1012			
9	Battery cover	VNK1293			
10	.....				
11	Operating instructions	VRK1002			
12	Washer	WT36D072D025			
13	Screw	VLL1358			

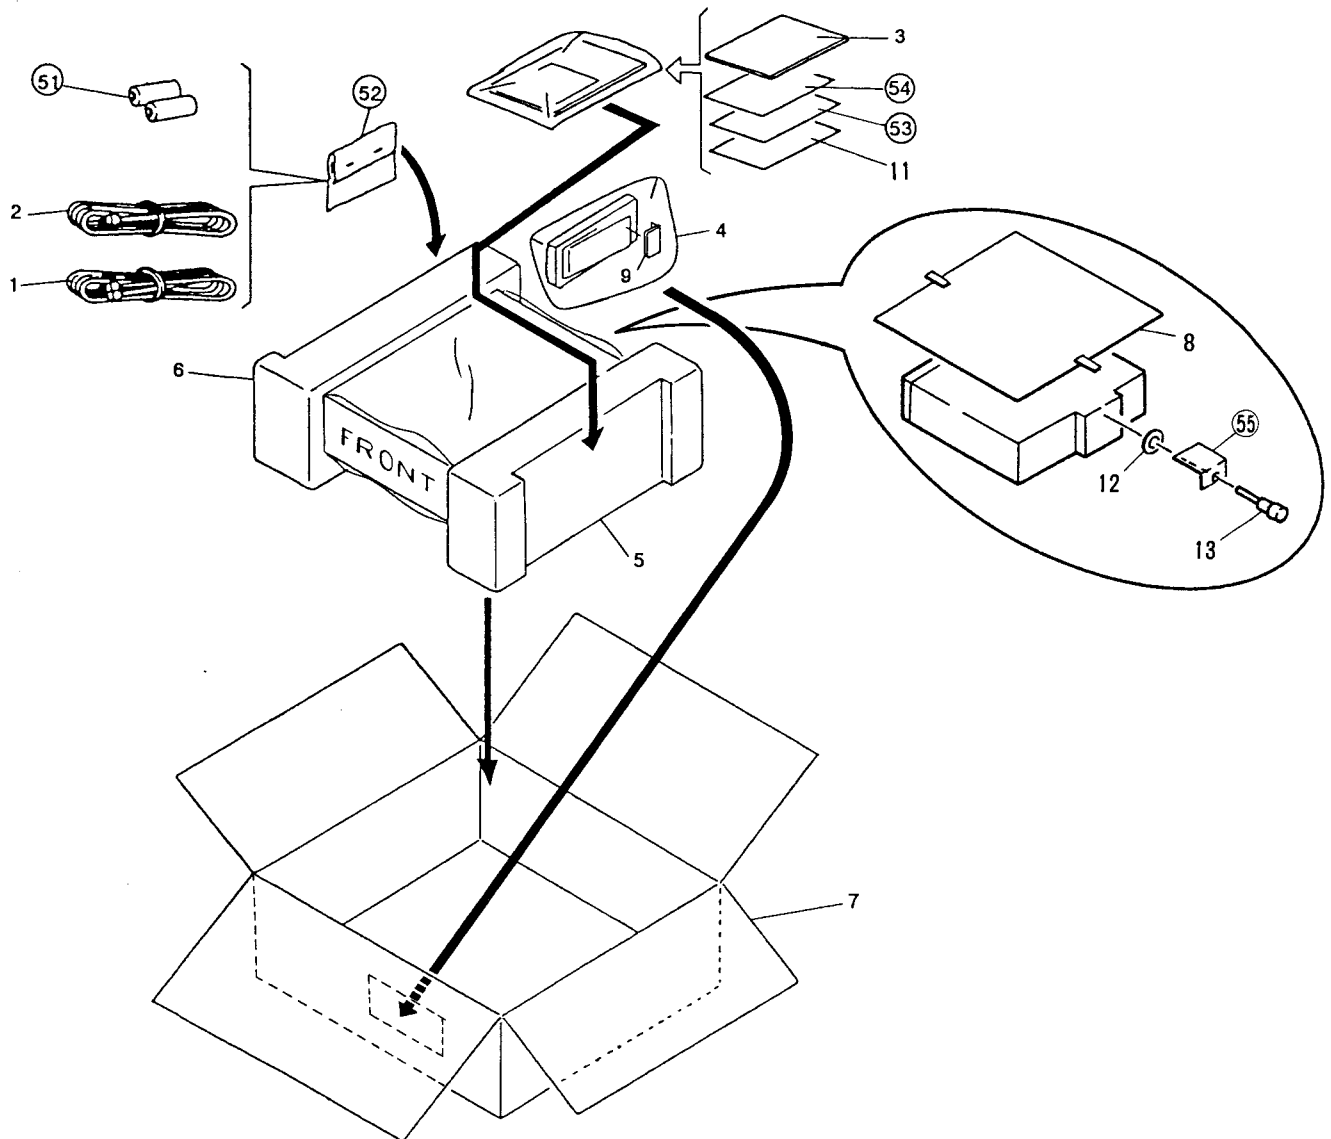


## 2. EXPLODED VIEWS AND PARTS LIST

### 2.1 EXTERIOR SECTION

Mark	No.	Description	Part No.	Mark	No.	Description	Part No.
	1	Bonnet - S	VXX1535		101	Tray	VNK1672
	2	Tray assembly - S	VXX1534		102	Carry label	VRW1058
	3	Tray rubber	VEB1089		103	Cushion	VEC1092
	4	Disc pad (L)	VEC1191		104	Cushion	VEC1004
	5	Disc pad (B)	VEC1379		105	Cushion	VEC1104
	6	Disc pad (C)	VEC1380		106	Reinforced plate angle	VNE1673
	7	Screw	VCZ30P120FMC		107	Reinforced plate	VNE1679
	8	Screw	BBT30P060FCC		108	Cushion	VEC1493
	9	Screw	BCZ40P060FZK				
	10	Screw	IBZ30P060FCC				
	11	Screw	BPZ30P080FCU				
	12	CD pad	VEC1252				

- The parts with an encircled number are generally unavailable because they are not in our Master Spare Parts List.
- The  $\Delta$  mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
- Parts marked by "⊙" are not always kept in stock. Their delivery time may be longer than usual or they may be unavailable.

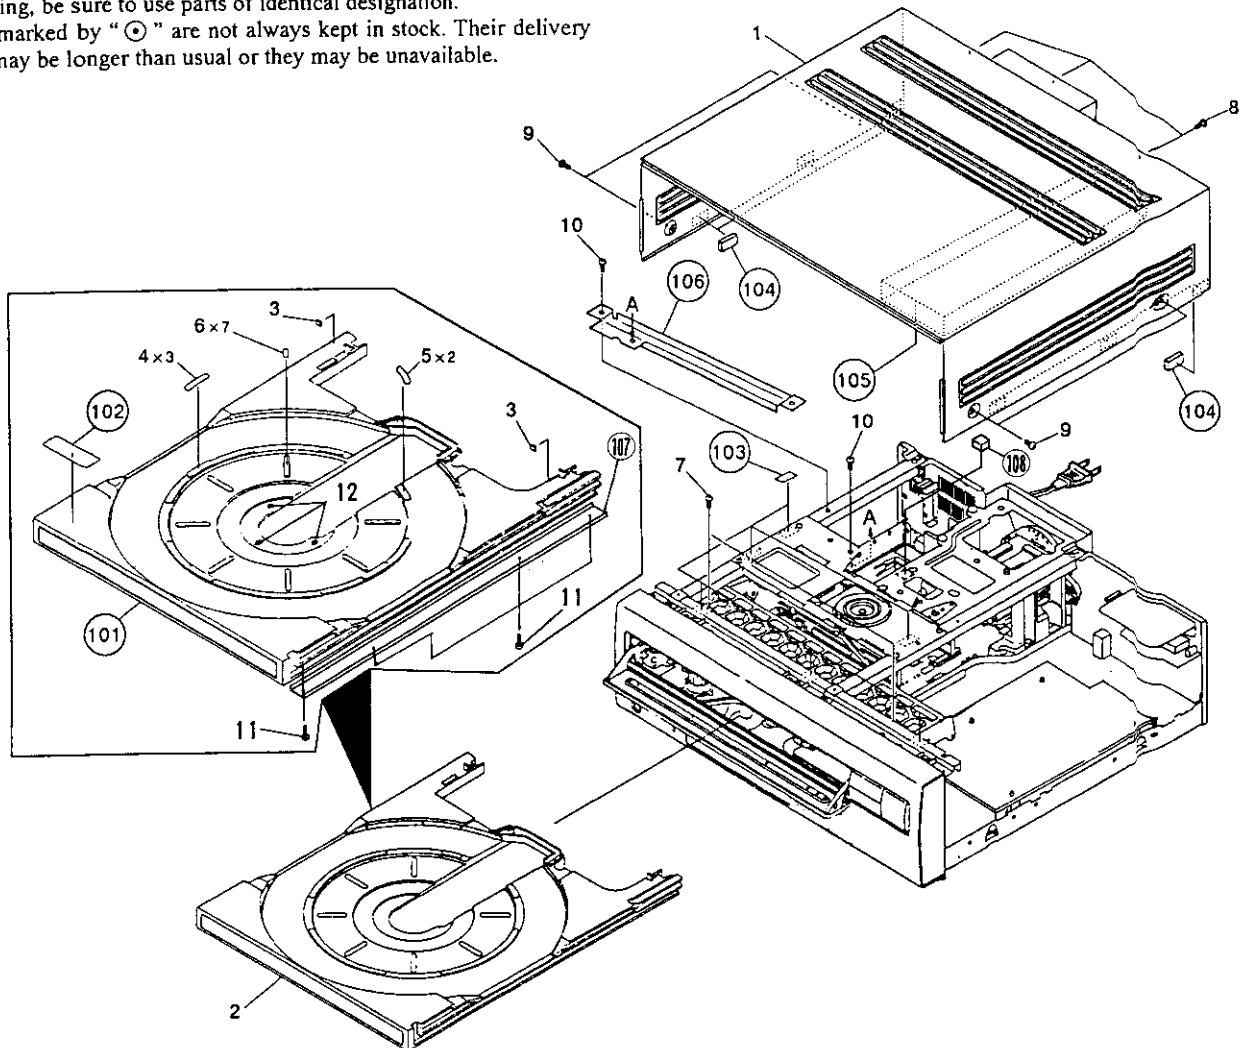

**2.2 FRONT PANEL SECTION**

**Parts List**

Mark	No.	Description	Part No.	Mark	No.	Description	Part No.
	1	Front panel assembly - S	VXX1634		26	.....	
	2	Front door assembly - S	VXX1637		27	Select button assembly	VXA1773
	3	FL panel	VNK1854		28	Snap plate	VNE1102
	4	FL filter	VNK1855		29	LED spacer	VEB1173
	5	Door plate	VNE1482		30	Screw	BPZ26P060FCU
	6	Door dump rubber	VEB1141		31	Screw	BPZ26P080FMC
	7	Sub panel	VNK1863		101	IRKB assembly	VWG1282
	8	Key control button	VNK1859		102	.....	
	9	Door spring	VBH1140		103	HEPB assembly	VWV1205
	10	Screw	BPZ26P060FCU		104	MIJB assembly	VWV1231
	11	Screw	IPZ26P060FMC		105	Insulation sheet	VEC1465
	12	PW button	VNK1856		106	CNCB assembly	VWG1233
	13	Plastic rivet	VEC - 143		107	FLKB assembly	VWG1284
	14	Back panel (L)	VNK1864		108	DIKB assembly	VWG1234
	15	Back panel (R)	VNK1865		109	KCKB assembly	VWG1232
	16	Screw	BPZ20P040FZK		110	Front door assembly	VXA1695
	17	Ten key (A)	VNK1860		111	Jack holder (S)	VNE1643
	18	Ten key (B)	VNK1861		112	Jack holder (L)	VNE1644
	19	Dumper assembly	VXA1053		113	Shield sheet	VEF1037
	20	Change knob	VNK1862		114	Insulation sheet B	VEC1499
	21	Vocal button assembly	VXA1694				
	22	VOL knob (S)	VNK1857				
	23	VOL knob (L)	VNK1858				
	24	HP knob	VNK1920				
	25	.....					

FRONT PANEL SECTION

A

B

C


D

A

B

C

D

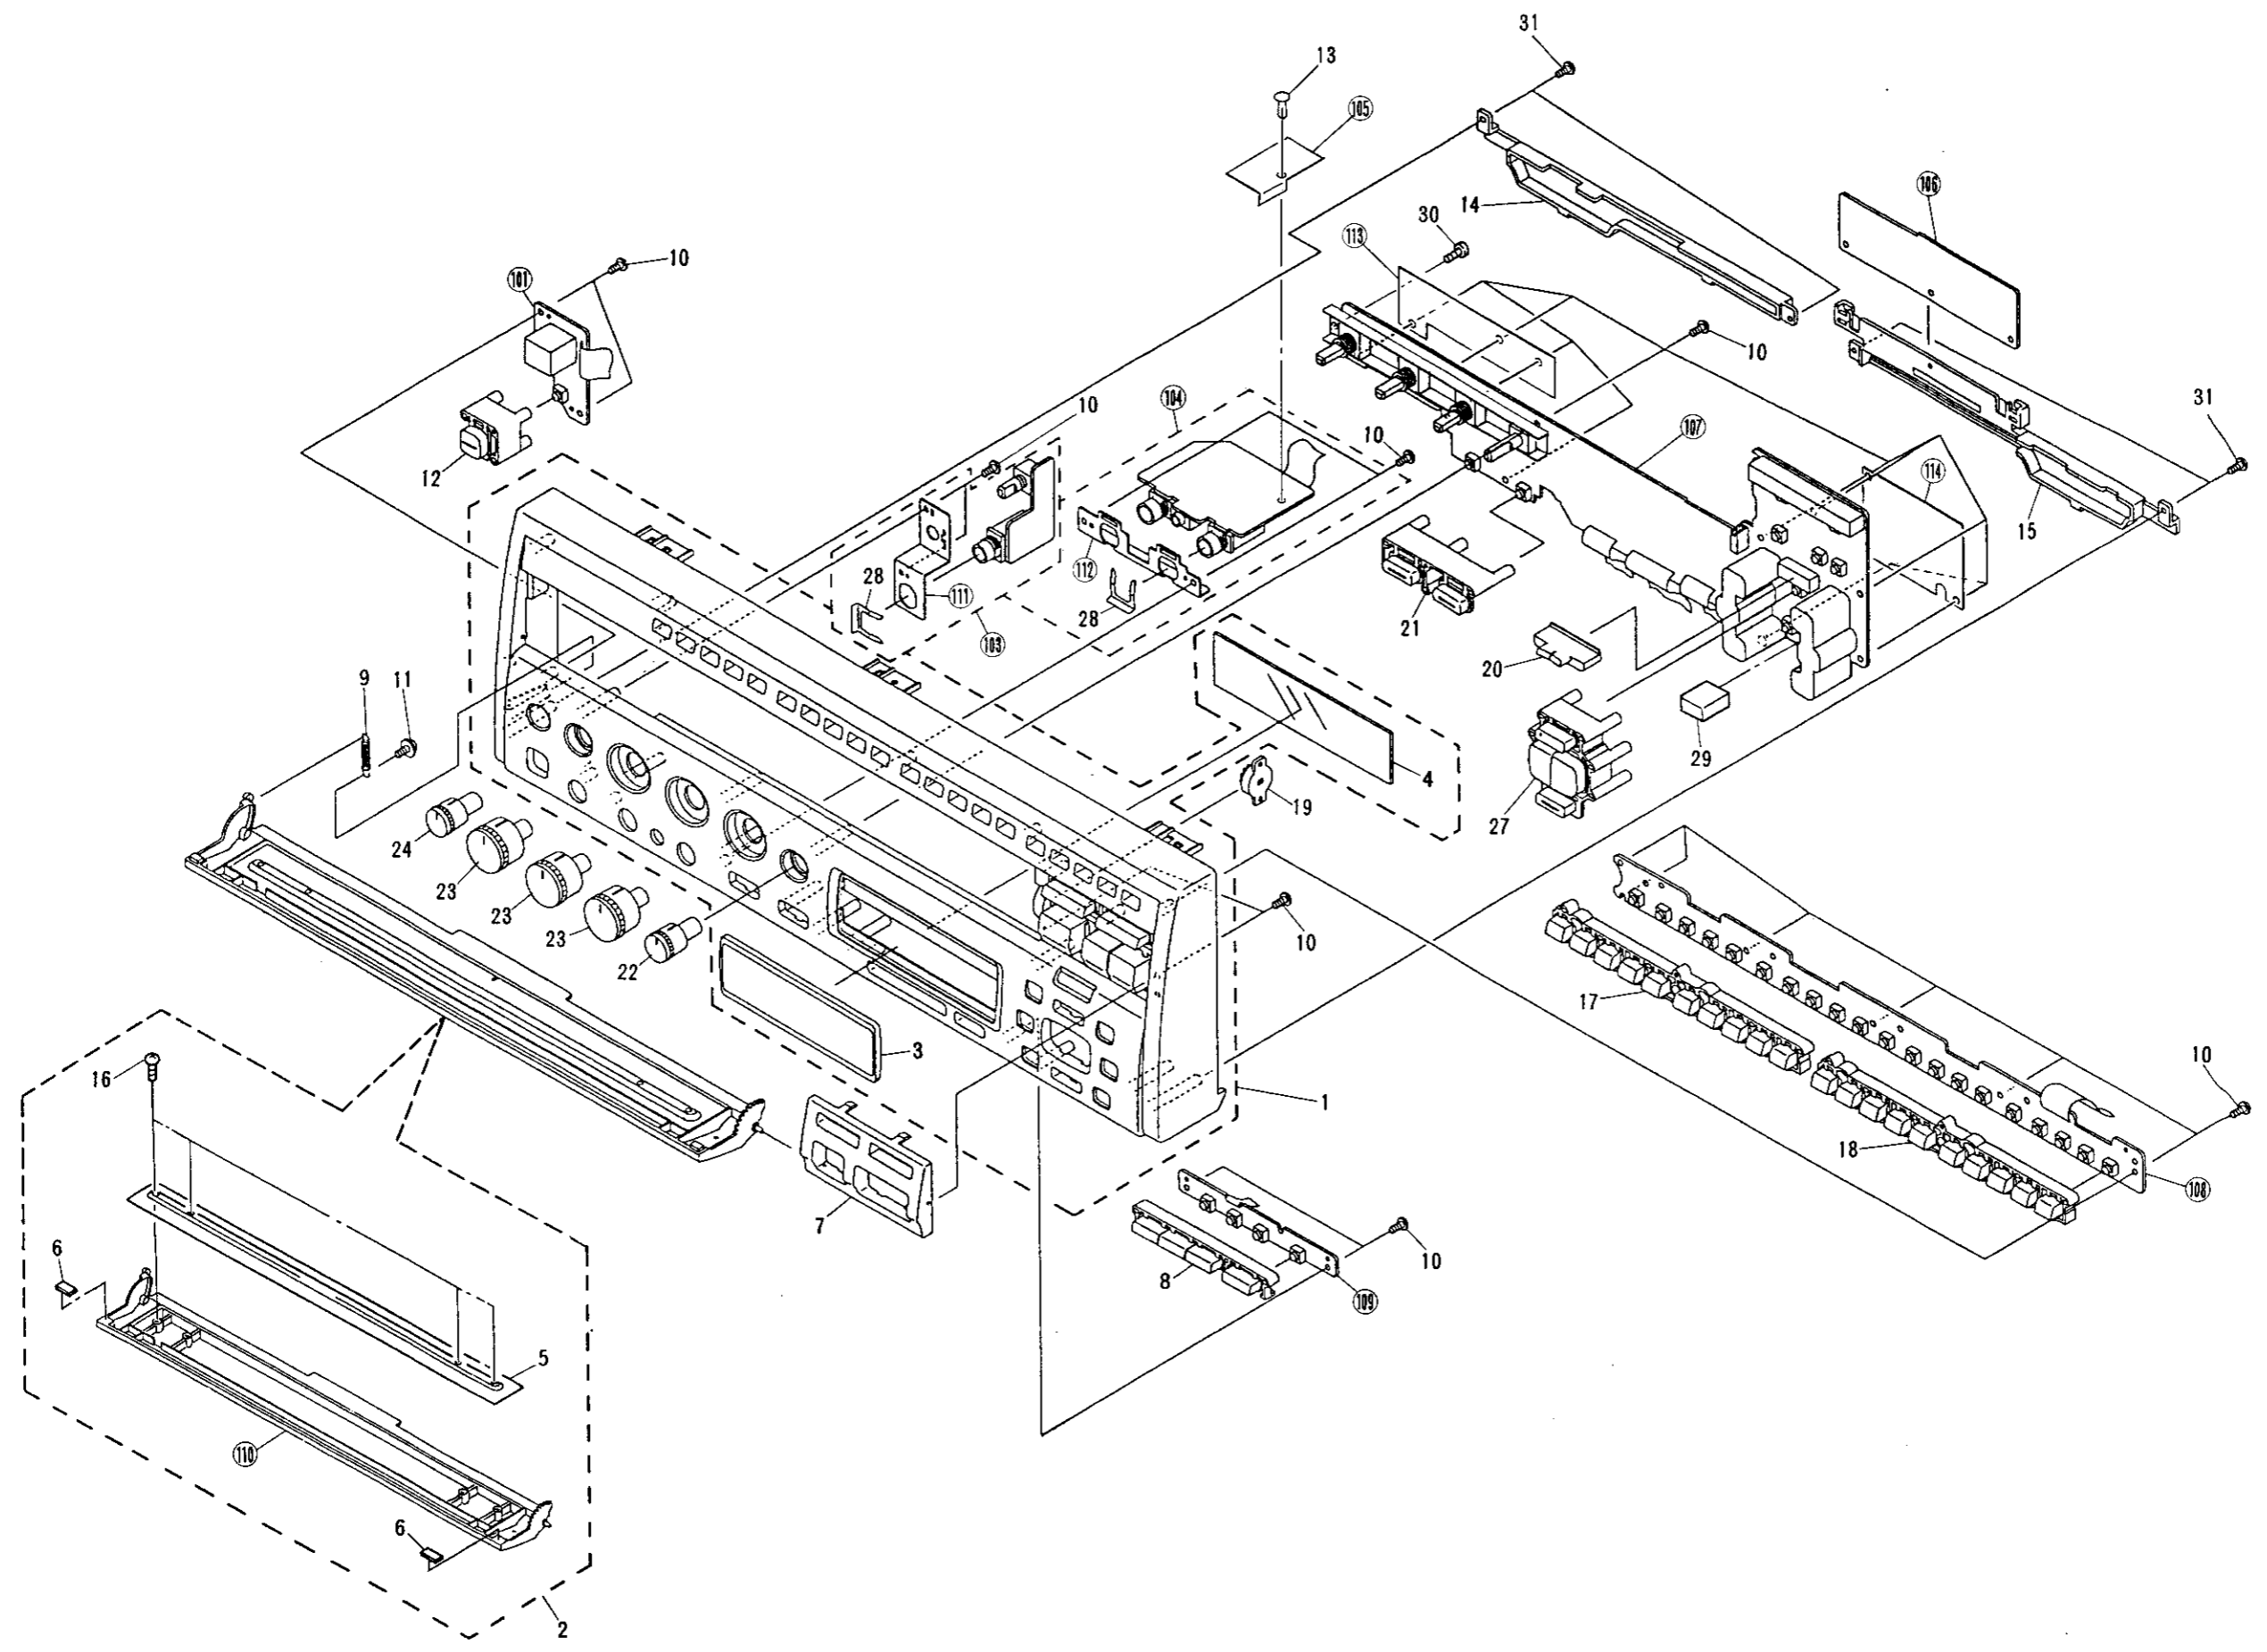




2.3 TOP VIEW SECTION

Parts List


Mark No.	Description	Part No.	Mark No.	Description	Part No.
1	Screw (B)	VBA1008	101	Front angle	VNE1543
2	Arm spring	VBH1093	102	Center angle	VNE1678
3	Tray guide assembly	VXA1576	103	Side stay (L)	VNE1545
4	Screw	BBZ30P060FCC			
5	Screw	IBZ30P060FCC			
6	Door lever (W)	VNL1398			
7	Stopper rubber	VEB1119			
8	Screw	BSZ30P200FMC			
9	Tray push plate	VBK1029			

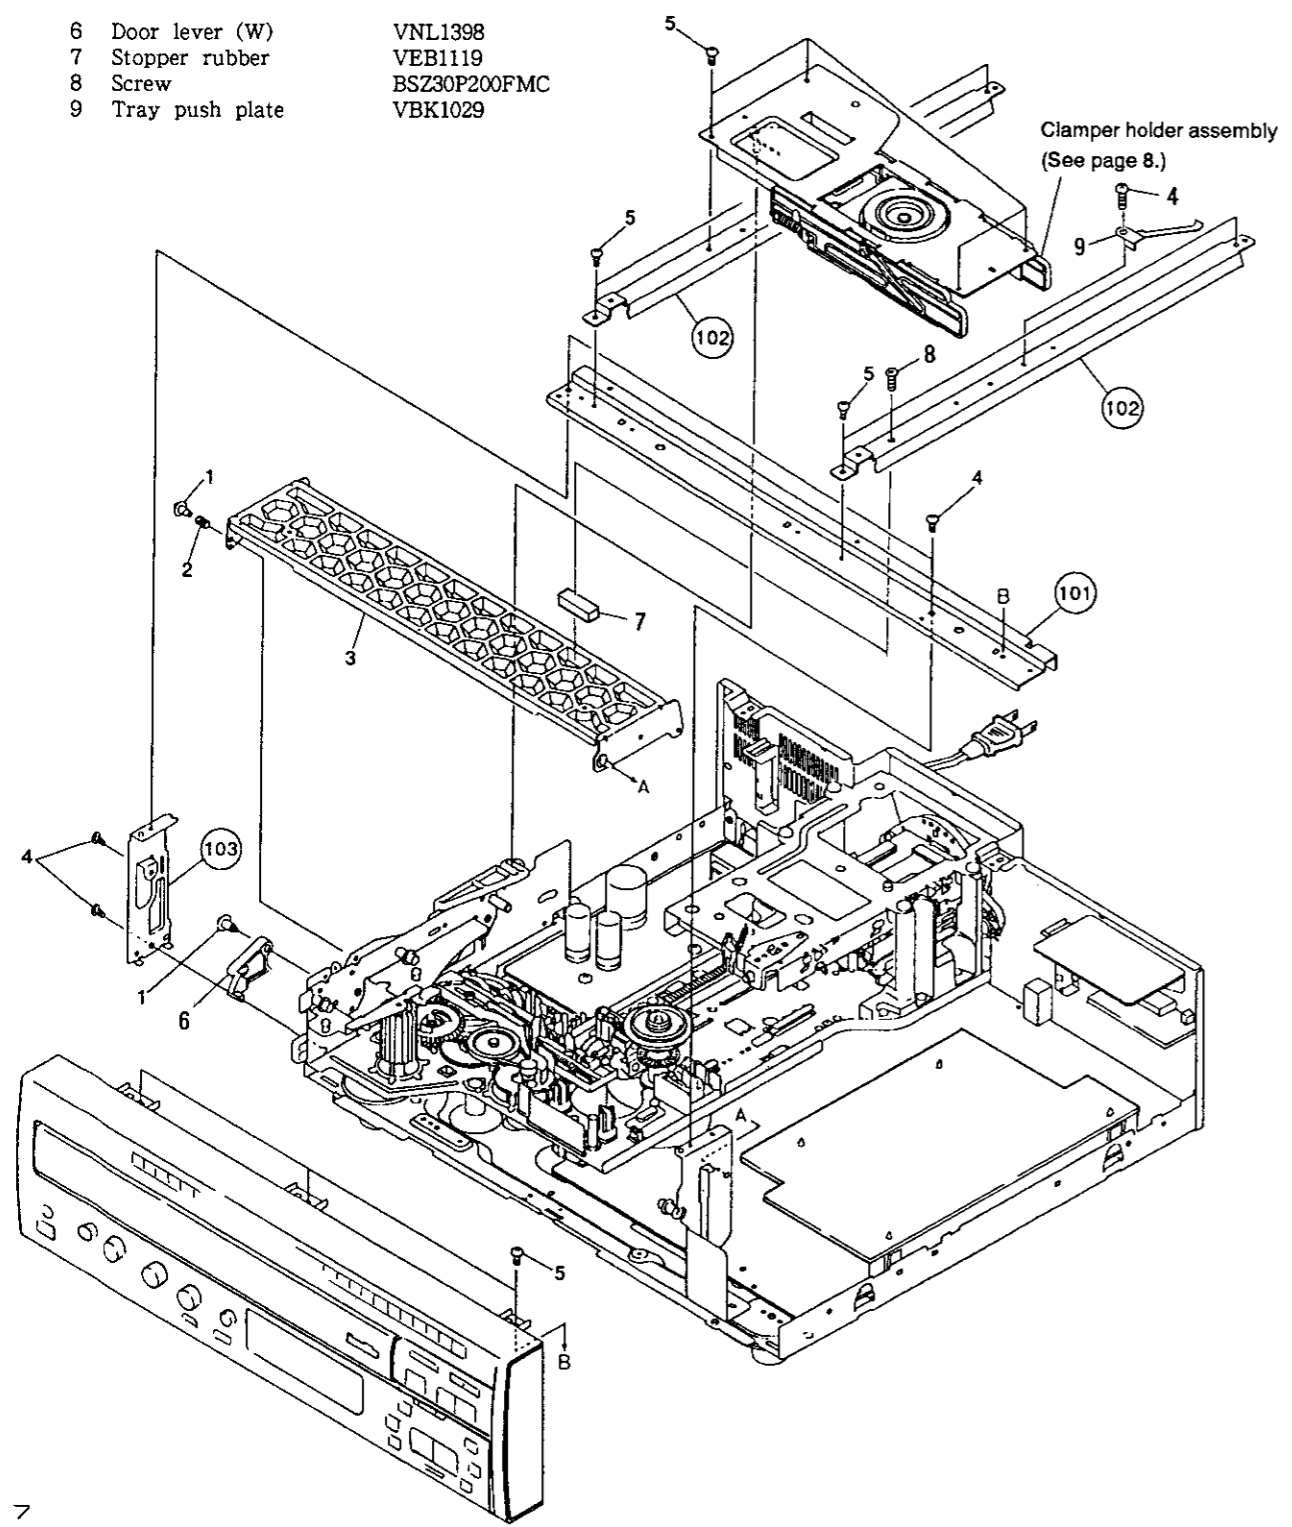

2.4 CLAMPER SECTION

Parts List

Mark No.	Description	Part No.	Mark No.	Description	Part No.
1	Pivot screw	VBA1022	101	Center plate assembly	VXA1506
2	Clamp cam	VNL1306	102	Lever (B) assembly	VXA1504
3	Limiter spring	VBH1168	103	Lever (A) assembly	VXA1503
4	Clamper holder	VNL1305	104	Clamp shaft	VLL1299
5	Washer	WT26D060D050	105	Limiter plate	VNE1551
6	E ring	YE40FUC	106	Slide plate	VNE1551
7	Screw	IPZ30P060FMC	107	Lever (C) assembly	VXA1505
8	Screw	IMZ30P060FMC	108	Clamper head	VNE1546

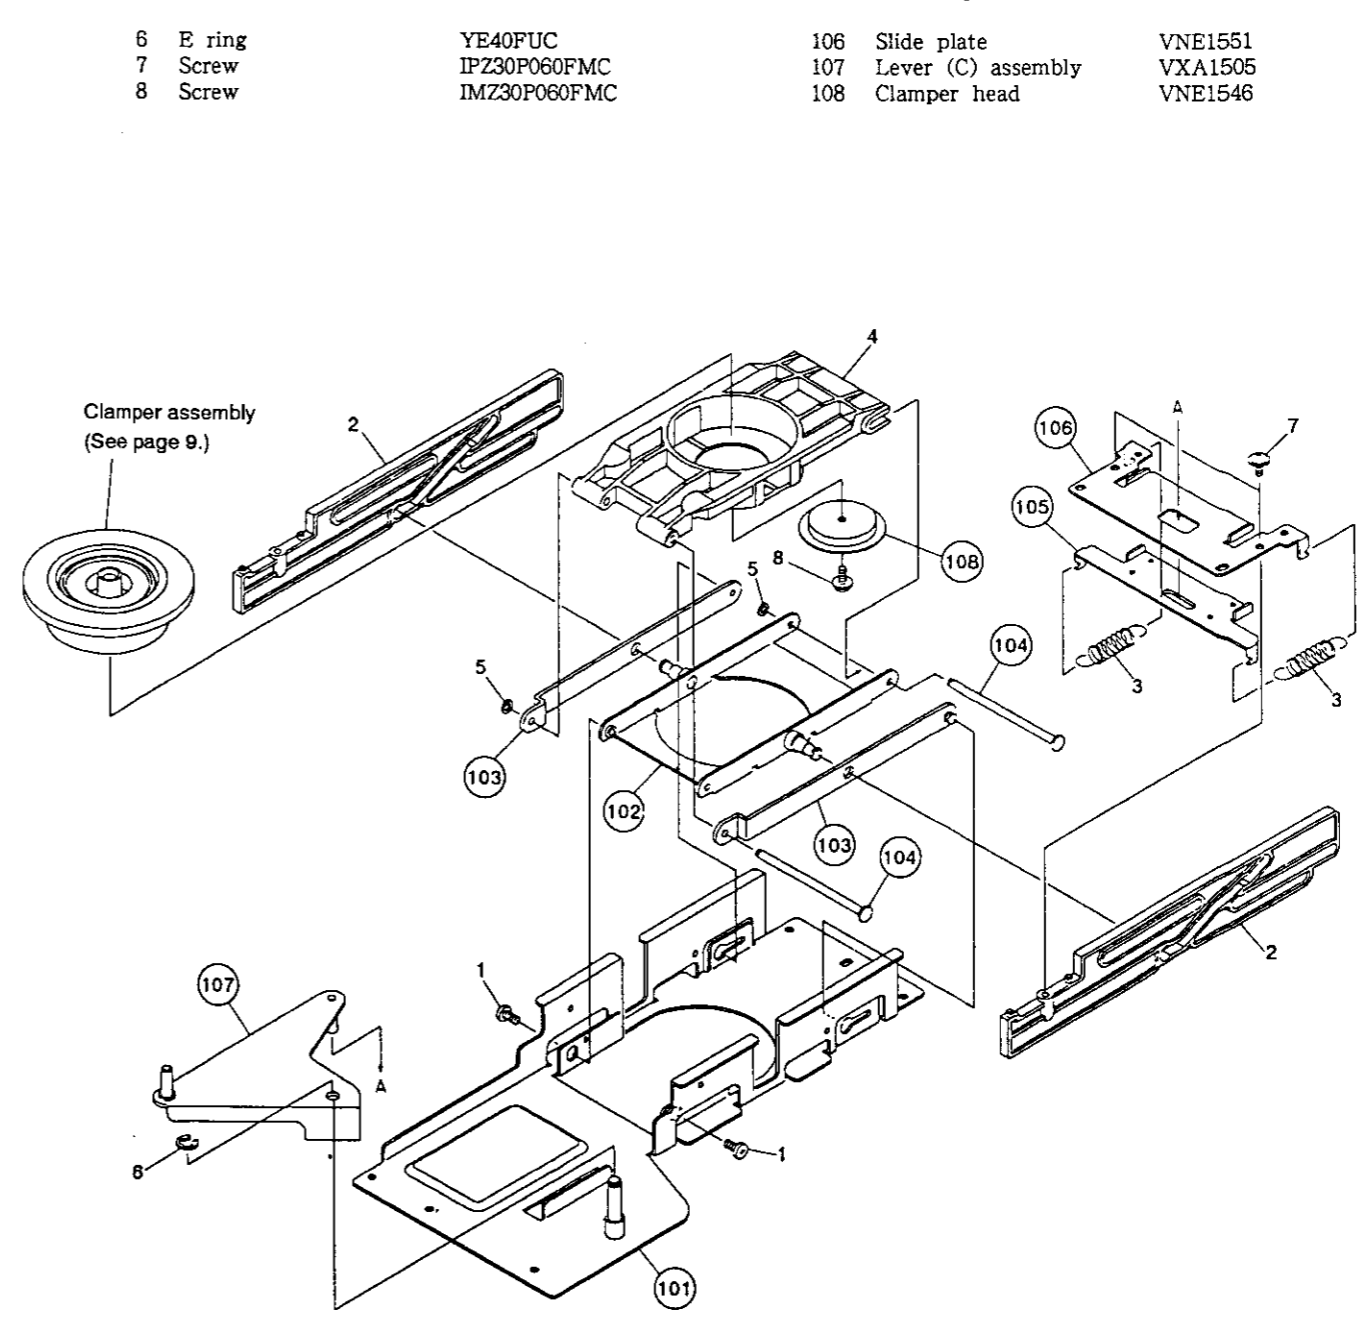


A  
B  
C  
D

## 2.5 CLAMPER ASSEMBLY

### Parts List


Mark	No.	Description	Part No.	Mark	No.	Description	Part No.
	1	Magnet assembly - S	VXX1475		101	Magnet	VMG1010
	2	Disc clamber	VNL1362		102	Gap sheet	VEC1058
	3	Clamber spring	VBH1153		103	Clamber plate	VNE1549
	4	Clamber base	VNL1364		104	Absorber rubber (A)	VEB1146
	5	Centering hub (B)	VNL1435				
	6	Steel ball	VNX1006				
	7	Centering spring (B)	VBH1130				
	8	Clamber cover	VNL1363				
	9	Screw	AMZ20P040FMC				
	10	Washer	WA60F115M160				

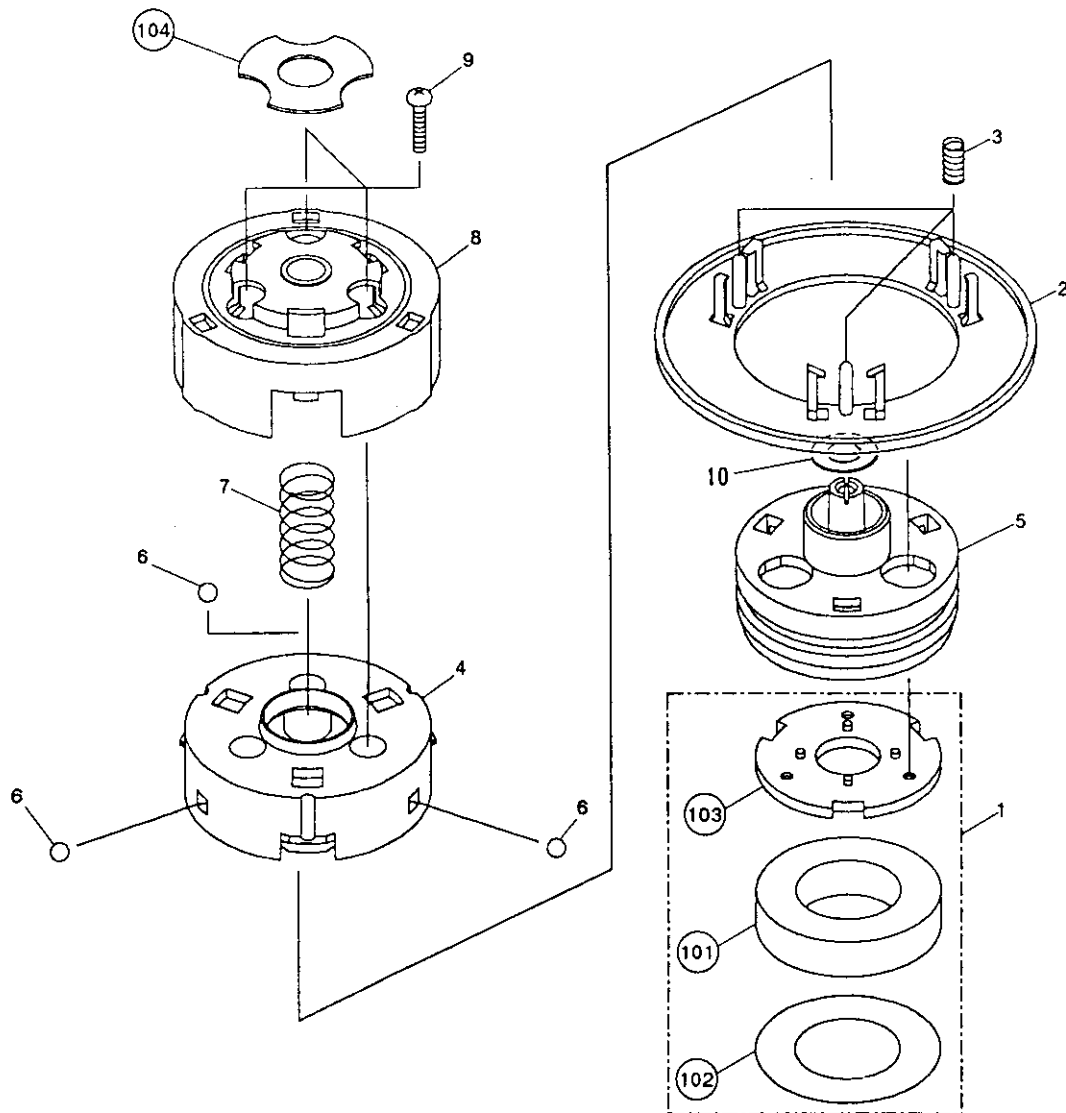

2.6 BASE SECTION (1)

Parts List


Mark No.	Description	Part No.	Mark No.	Description	Part No.
1	Tray stopper	VNL1202	11	Synchro spring	VBH1139
2	Door dump rubber	VEB1033	12	Synchro gear assembly	VXA1627
3	Side stay (R) assembly	VXA1690	13	Synchro holder	VNL1334
4	Base spring	VBH1145	14	Screw	BBZ30P080FCC
5	DRVB assembly	VWS1087			
6	Screw	BBT30P060FCC	101	FG assembly	VWG1192
7	Screw	BPZ30P080FCU	102	SW assembly	VWG1193
8	Screw	BBZ30P060FCC	103	Rear panel	VNA1228
9	Screw (B)	VBA1023	104	Mechanism assembly	VWT1074
10	Voltage selector	VSB1005	105	.....	
			106	TB holder	VNE1612
			107	6P earth plate	VNE1674
			108	EXTB assembly	VWG1229
			109	Wire clamp	VEC1237

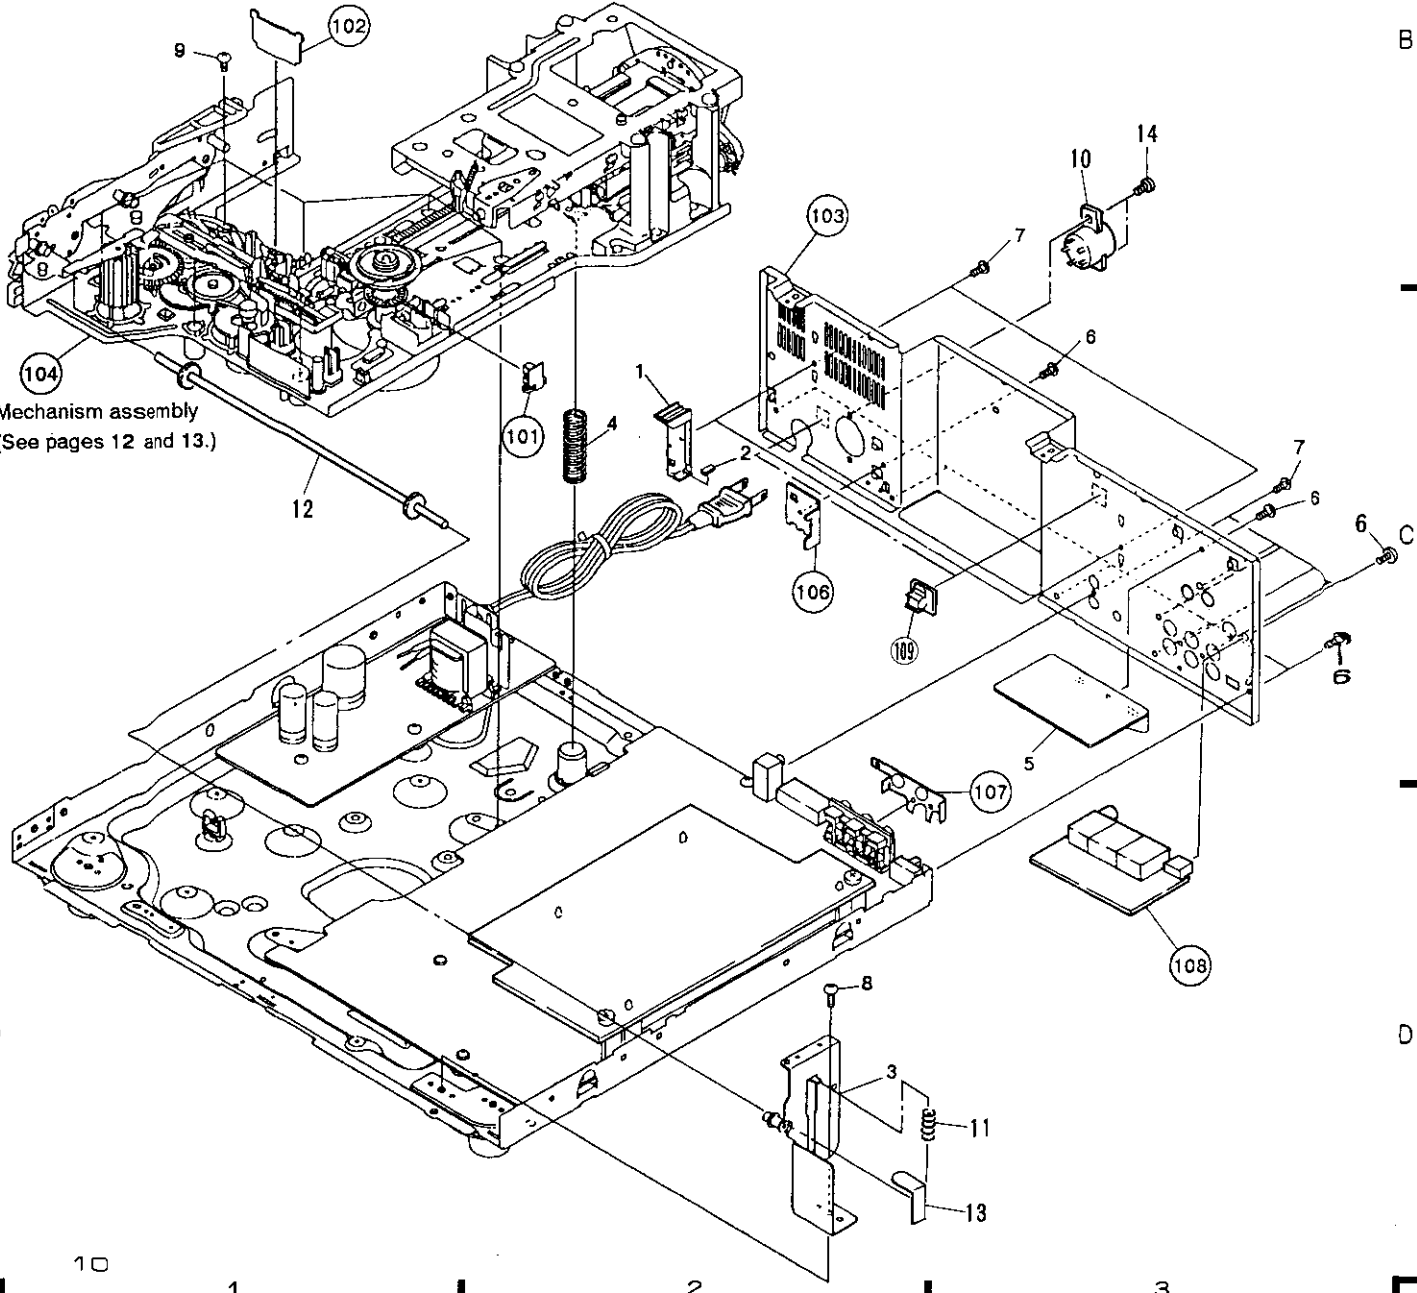

2.7 BASE SECTION (2)

Parts List

Mark	No.	Description	Part No.	Mark	No.	Description	Part No.
△	1	AC power cord	VDG1034	106	Base chassis	VNA1226	
△	2	Strain relief	CM - 22	107	Spring guide	VNL1343	
	3	Power supply board assembly	VWR1109	108	PCB spacer	PNY - 404	
	4	Insulator assembly	VXA1660	109	.....		
	5	Insulator assembly	VXA1661	110	PC support	VEC1282	
	6	Code holder	VNF - 069	111	PCB holder (A)	VNE1394	
	7	Screw	BBZ30P060FCC	112	PCB hinge	VEC - 169	
	8	Screw	BBZ30P180FMC	113	KFCB assembly	VWV1230	
	9	Screw	IBZ30P060FCC	114	Power insulator sheet	VEC1492	
	10	Screw	IPZ30P160FMC				
	11	Screw	BBZ30P100FMC				
	101	MAIN assembly	VWX1088				
	102	.....					
	103	Earth plate	VNE1642				
	104	P plate holder	PNY - 405				
	105	Wire clip	VEC1012				

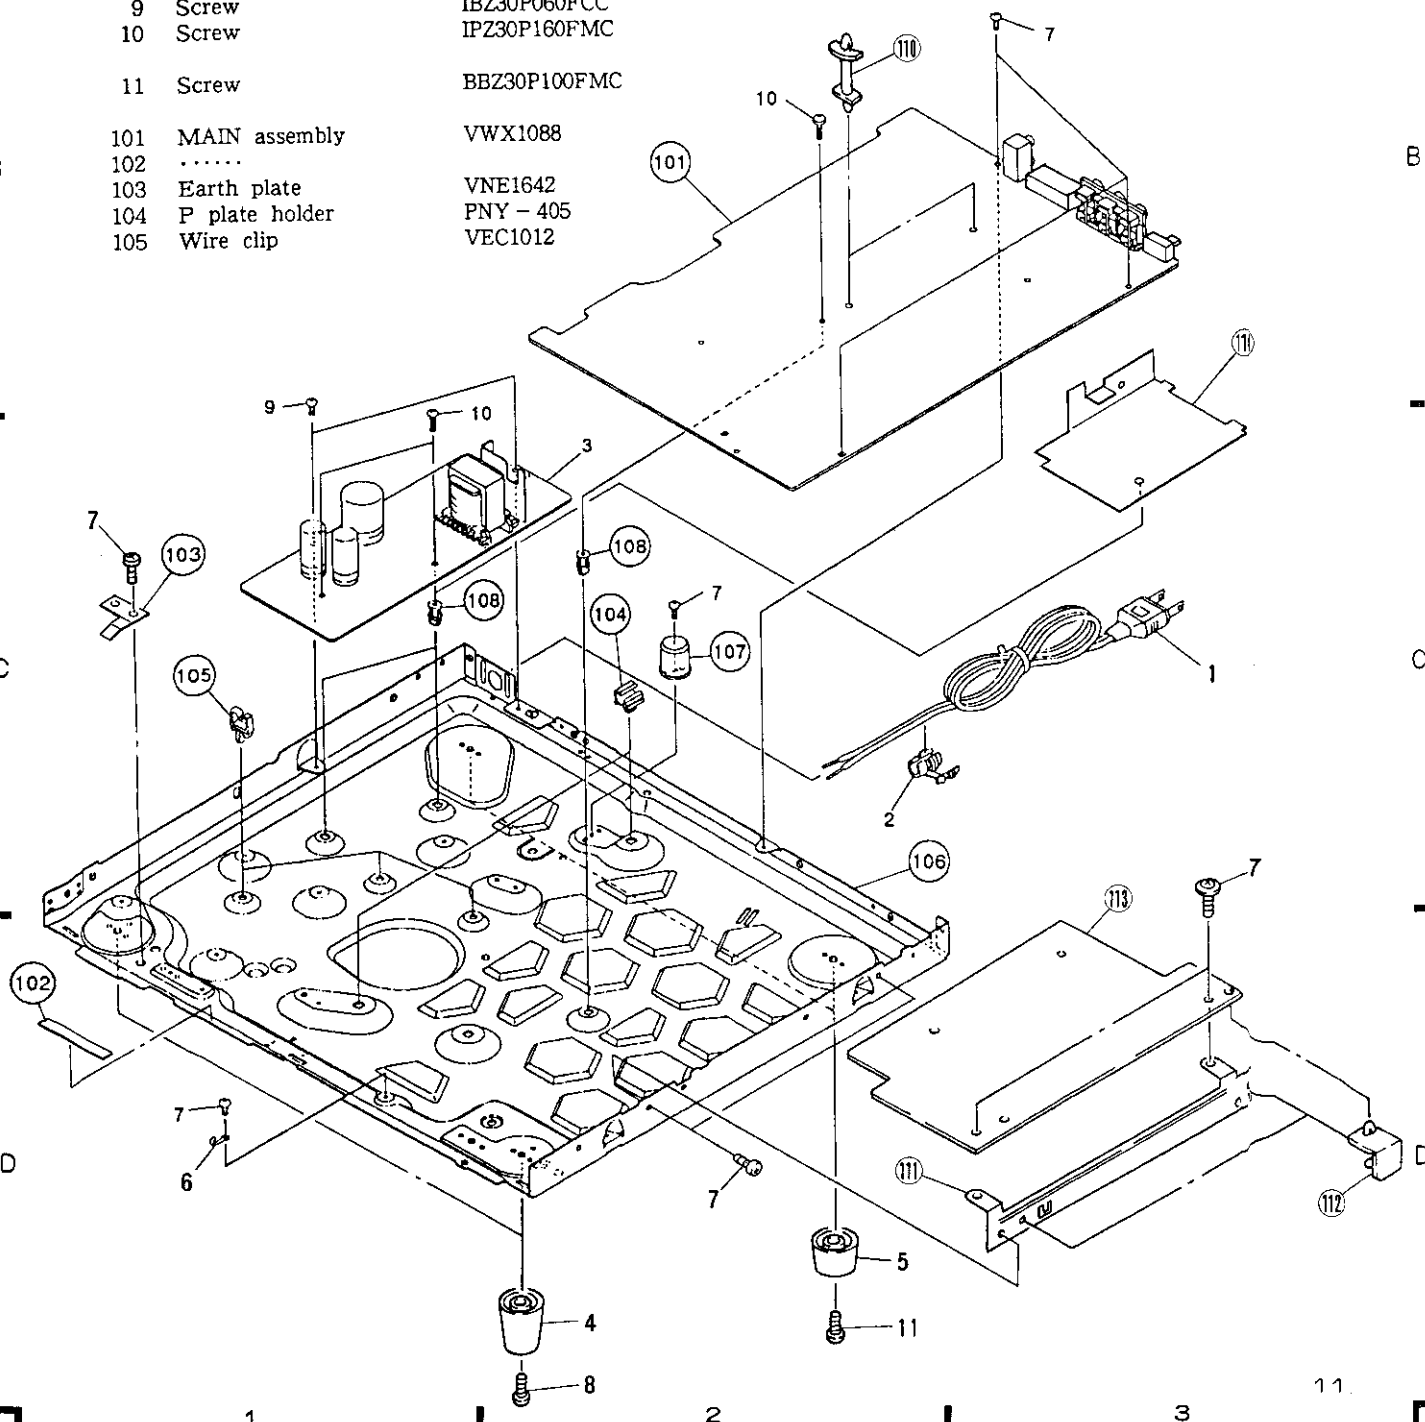

**2.8 MECHANISM ASSEMBLY**

**Parts List**

Mark	No.	Description	Part No.	Mark	No.	Description	Part No.
	1	Tilt shaft	VLL1326		11	Screw	ABZ26P050FMC
	2	Plate spring	VBK1013		12	Screw	IBZ30P100FMC
	3	Tilt spring	VBH1146		13	Screw	IPZ30P100FCU
	4	Thrust spring	VBH1163		14	Radial spring	VBH1164
	5	Post (L)	VNL1347				
	6	Post (R)	VNL1348		101	Housing assembly (3P)	VKP1856
⊙	7	Carriage assembly	VWT1068				
	8	Flexible cable (22P)	VDA1329				
	9	Belt	PEB1013				
	10	Lever switch (TURN SW)	DSK1003				


MECHANISM ASSEMBLY

A

B

C


D

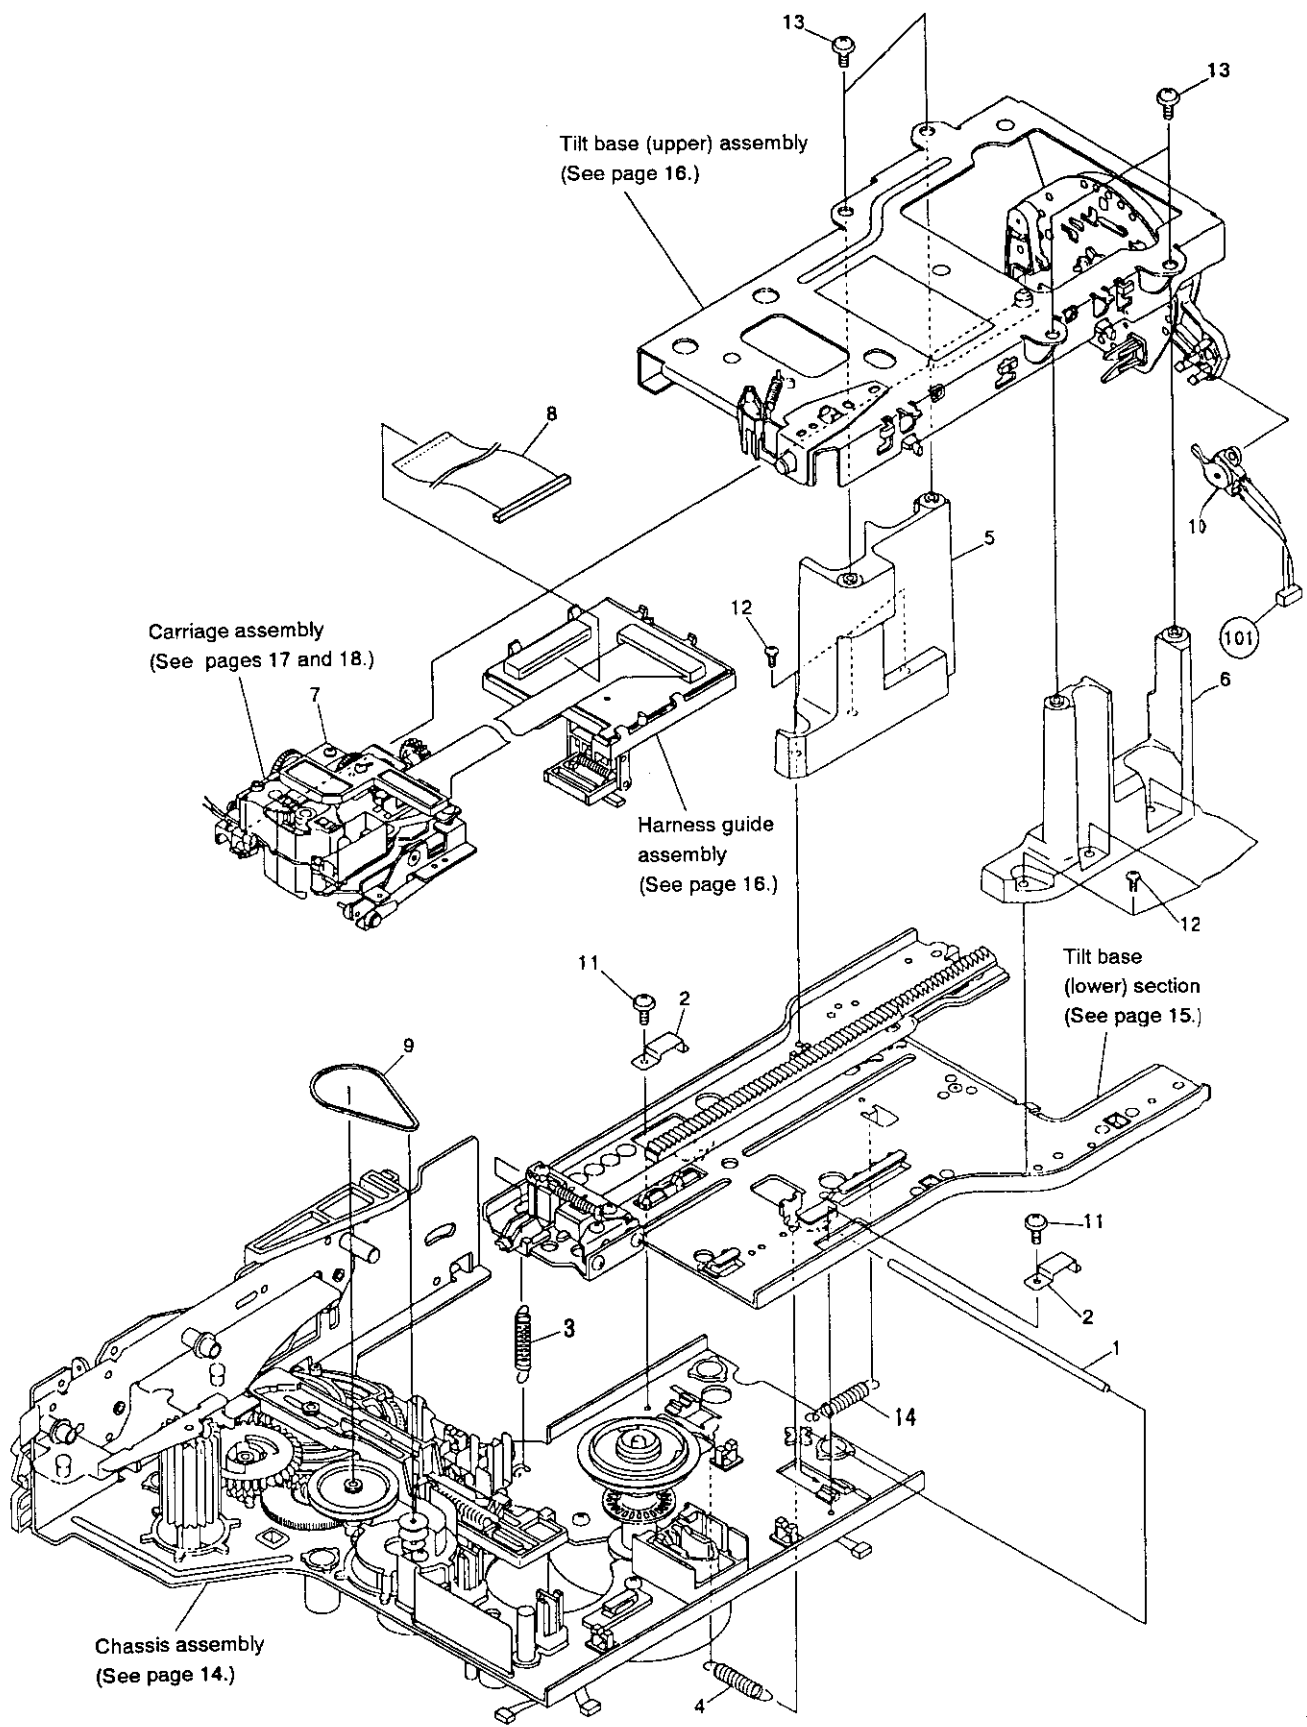

2.9 MECHANISM CHASSIS SECTION

Parts List


Mark	No.	Description	Part No.	Mark	No.	Description	Part No.
⊙	1	Chassis assembly	VXA1577	21	Nylon washer	WA32N080W050	
	2	Rubber bushing	VEB1138	22	Washer	WT26D047D025	
	3	Loading motor assembly	VXX1262	23	Screw	PMZ30P040FCU	
	4	Spindle motor assembly	VXA1761	24	Screw	PMA30P050FCU	
	5	Centering spring	VBH1024	25	E ring 2, 3	YE23FUC	
	6	Sheet	VEC1510	26	.....		
	7	Yoke plate A	VNE1360	27	Screw	CPZ20P080FMC	
	8	Centering hub (A)	VNL1296	28	Loading motor	VXM1034	
	9	Two stair gear	VNL1326				
	10	Gear pulley	VNL1249	101	.....		
	11	Cam gear	VNL1350	102	Motor pulley	VLL1176	
	12	Follow gear	VNL1317	103	Oil stopped washer	VBF1002	
	13	Spring slanting cam	VNL1316	104	Rubber sheet	VEB1135	
	14	Cam spring	VBH1082	105	Housing assembly	VKP1566	
	15	Radial spring	VBH1164	106	Turn table assembly	VXA1760	
	16	Roller plate assembly	VXA1770	107	Spindle motor	VXM1046	
	17	Slide cam	VNL1304				
	18	Screw (B)	VBA1008				
	19	Screw (C)	VBA1015				
	20	Return spring	VBH1129				

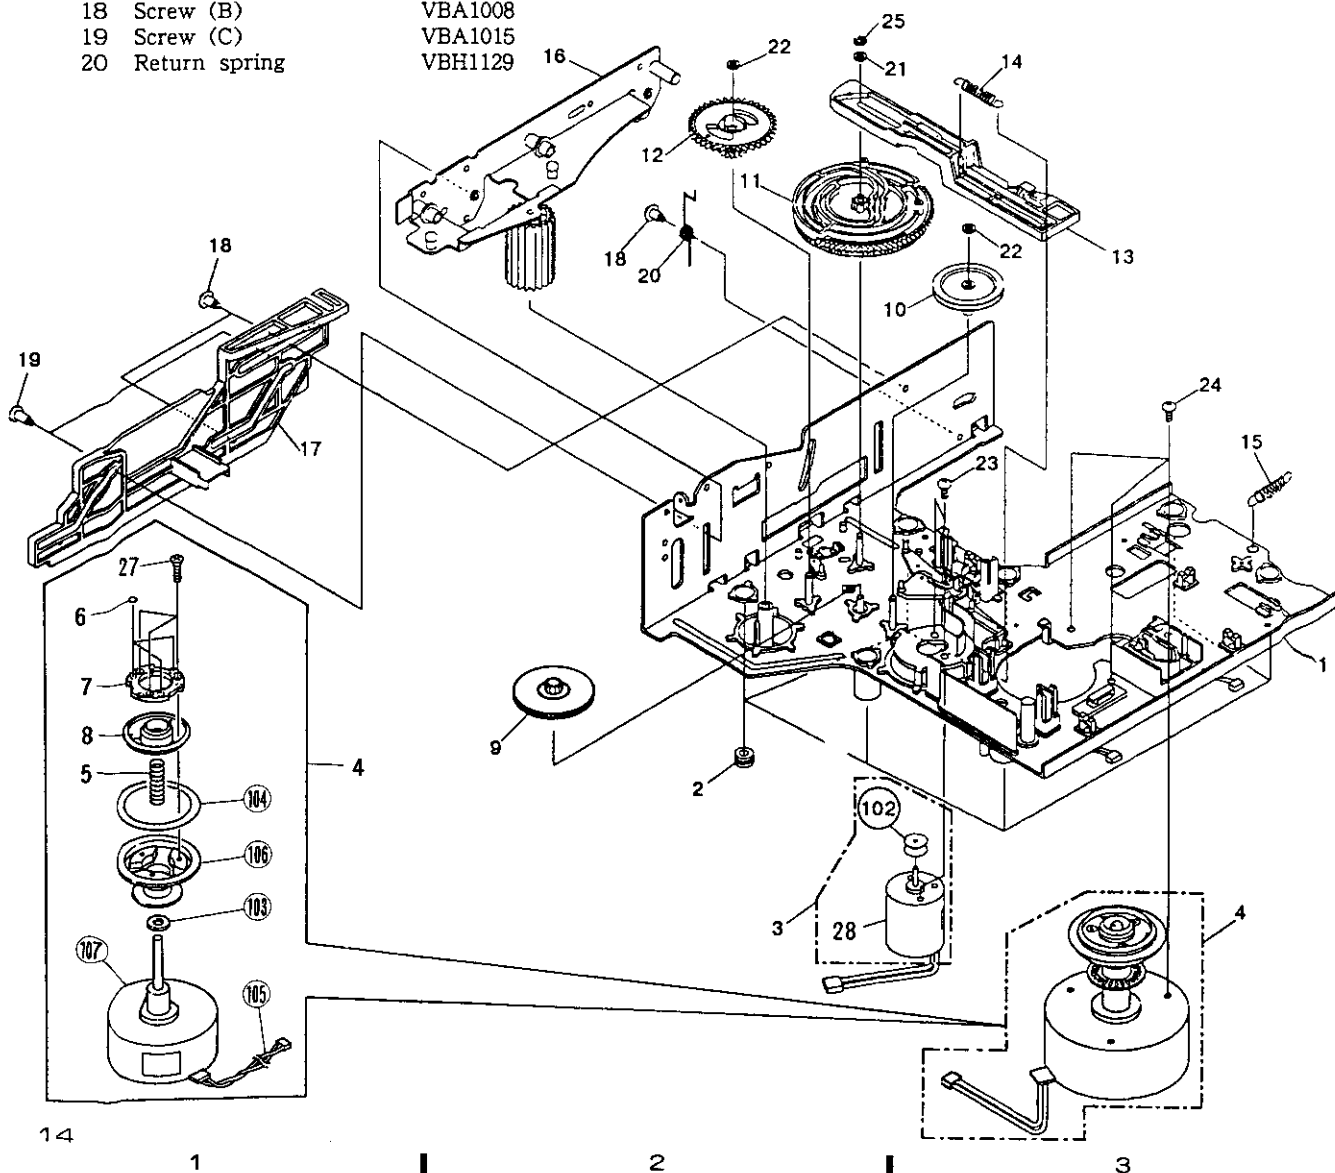

2.10 TILT BASE (LOWER) SECTION

Parts List

Mark	No.	Description	Part No.	Mark	No.	Description	Part No.
⊙	1	Tilt base (lower) assembly	VXA1578	11	Screw	IPZ26P060FMC	
	2	Slide switch (LD, CDV INSIDE)	OSH1001	12	Screw	BMZ26P100FMC	
	3	Rack spring	VBH1133	13	Screw	PMZ20P060FMC	
	4	Rack gear (lower)	VNL1346	14	Screw	PMZ20P030FMC	
	5	Carriage shaft (lower)	VLL1325	101	SW holder	VNE1620	
	6	Shaft plate (lower) assembly	VXA1626	102	Housing assembly	VKP1851	
	7	S plate spring	VBH1149	103	Roller shaft holder	VNE1666	
	8	.....		104	S plate holder	VNE1621	
	9	Screw	BBZ30P060FCC				
	10	Screw	PPZ20P120FMC				

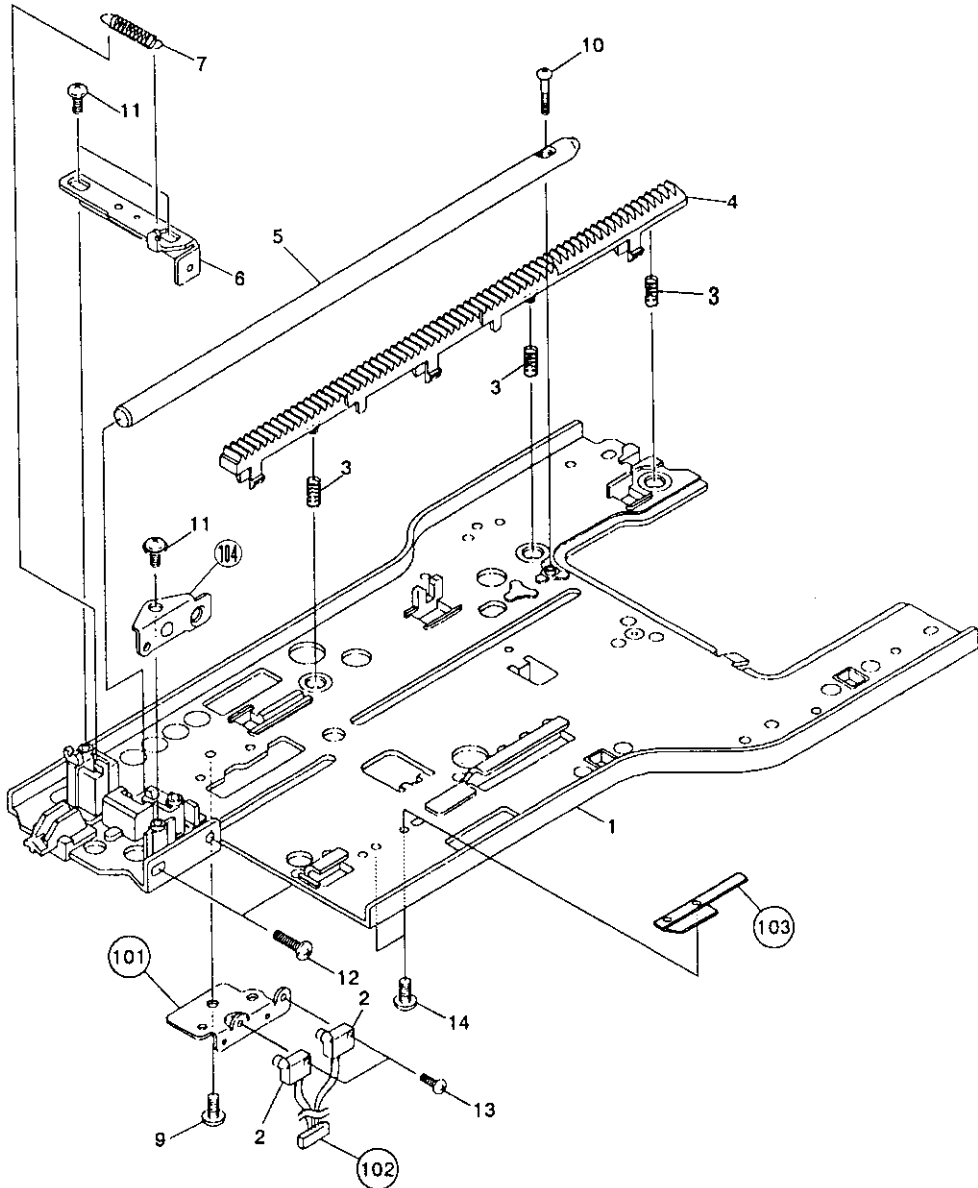




2.11 TILT BASE (UPPER) SECTION

Parts List


Mark	No.	Description	Part No.	Mark	No.	Description	Part No.
	1	Tilt base (upper) assembly	VXA1580		11	Guide spring (B)	VBH1155
	2	SW lever	VNL1359		12	Harness guide (B)	VNL1408
	3	SW lever spring	VBH1150		13	Guide spring (A)	VBH1166
	4	Carriage shaft (upper)	VLL1324		14	Harness guide (A)	VNL1349
	5	Rack gear (upper)	VNL1345		15	Washer	WT16D032D025
	6	Internal gear assembly	VXA1491		16	Washer	WT36D072D050
⊙	7	R plate assembly	VXA1579		17	Screw	PMZ20P120FMC
	8	Lock lever	VNL1351	⊙	18	Screw	BBZ26P050FCC
	9	Lever spring	VBH1127		19	Carriage assembly	VWT1068
	10	Harness guide (C)	VNL1361		20	Rock plate	VBK1026
					21	Screw	IBZ20P040FCC
				101	CNNB assembly	VWG1194	

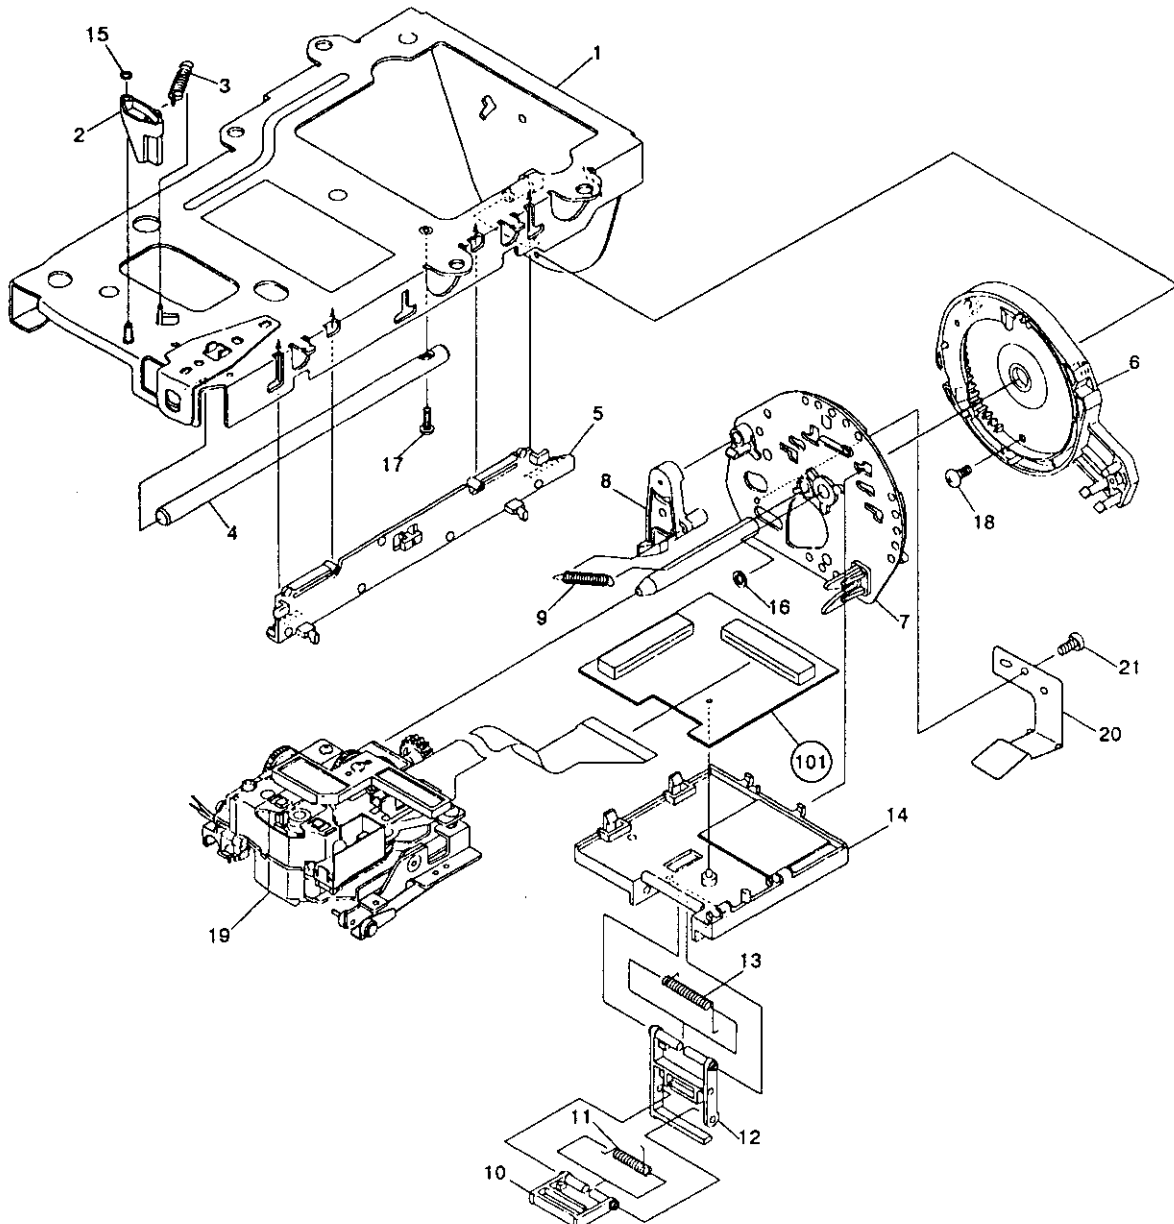


2.12 CARRIAGE ASSEMBLY

Parts List

Mark	No.	Description	Part No.
	1	Flexible holder	VNL1358
	2	PU base	VNT1037
	3	Housing assembly (1.5MP2P)	VKP1852
	4	Bolt 2.6 x 10	VLL1192
	5	TAN base assembly	VXA1752
	6	TAN spring	VBH1151
	7	Slide switch (CD, B INSIDE)	VSK1008
	8	TRKG spring	VBH1152
	9	SL shaft (B)	VLL1334
	10	Gear (F)	VNL1356
	11	Carriage shaft holder	VNT1039
	12	Gear (E)	VNL1355
	13	PU plate assembly	VXA1583
	14	Screw 4	VLL-183
	15	Spring washer φ 4	VEF-027
	16	Pickup assembly - S	VXX1553
	17	Carriage motor assembly - S	VXX1537
	18	SL gear (A)	VNL1250
	19	SL shaft (C)	VLL1289
	20	Gear (G)	VNL1365
	21	Motor holder assembly	VXA1751
	22	Gear (H)	VNL1357
	23	Gear (C)	VNL1353
	24	SL shaft (A)	VLL1333
	25	Gear (B)	VNL1352
	26	Gear (D)	VNL1354
	27	E ring	YE12FUC
	28	Washer	WT17D034D050
	29	Screw	JGZ20P022FMC
	30	Screw	PMZ26P100FMC
	31	Screw	BMZ26P080FMC
	32	Screw	PMA20P040FMC
	33	Screw	PBZ26P040FMC
	34	Screw	PBZ20P070FCC
	35	Screw	BBZ26P050FMC
	36	Actuator assembly	VXX1551
	37	Sensor assembly	VEX1018
	38	Pre-pickup assembly	VXX1554
	39	Sensor assembly	VNH1024
	40	Screw	PMA20P060FMC
	41	Screw	PMA20P080FMC
	42	Screw	PMA20P140FMC
	43	Screw	BMZ20P060FMC
	44	Sensor spring	VBH1087
101		Slide motor	VXM1027
102		SLMB assembly	VNP1295

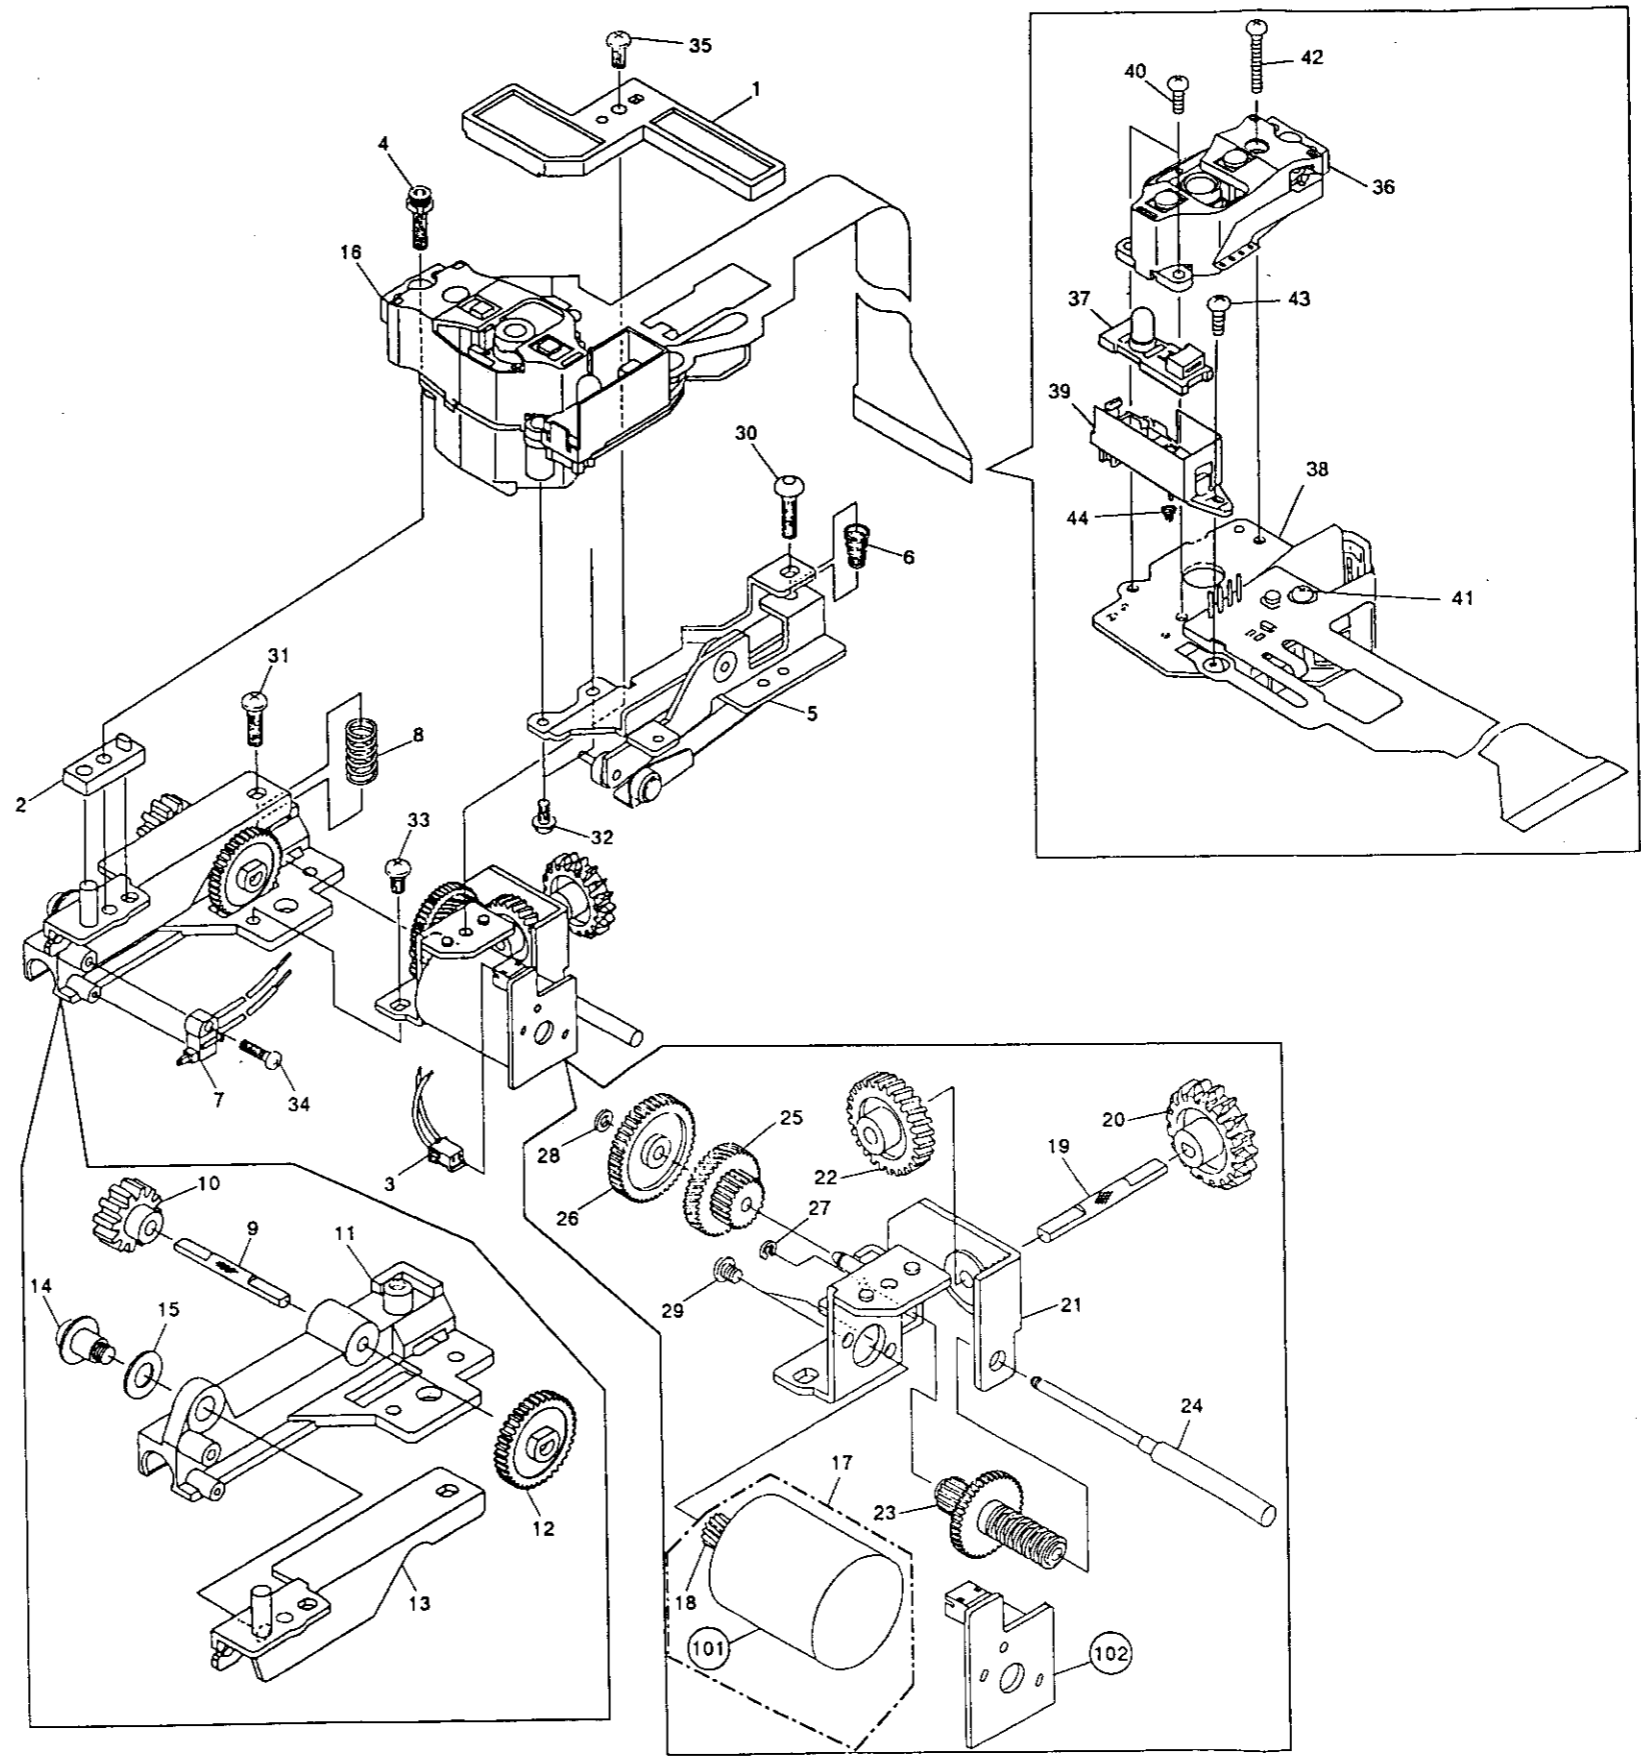

### 3. P.C. BOARDS LOCATION

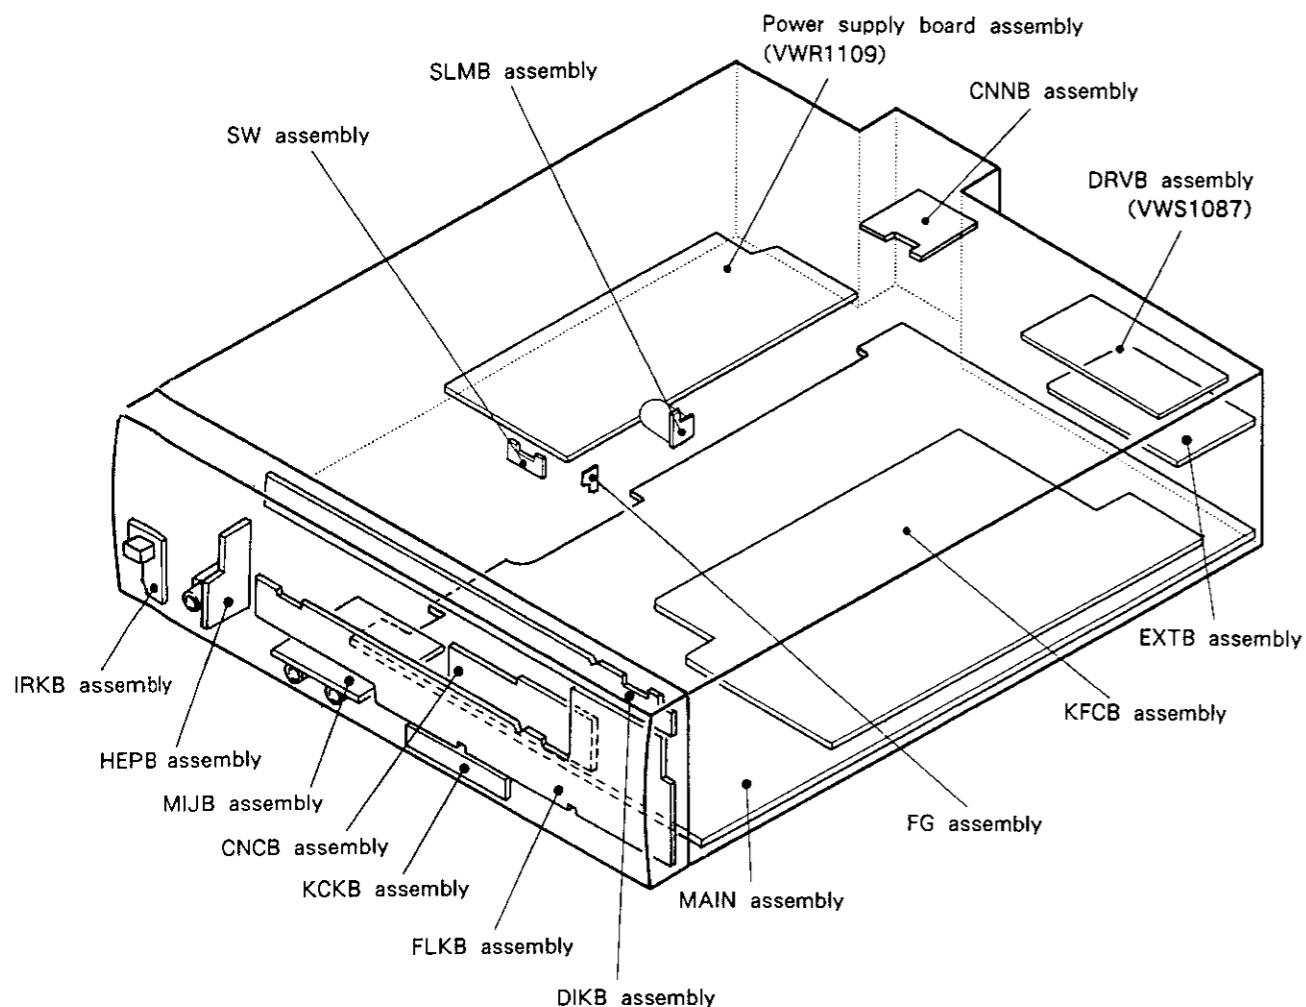

#### MOTHER ASSEMBLY (VWM1223)

MOTHER assembly is composed of the MAIN, FG and SW assemblies.

#### FRPB ASSEMBLY (VWM1225)

FRPB assembly is composed of the IRKB, KCKB, DIKB, FLKB, CNCB, MIJB and HEPB assemblies.

#### KRAB ASSEMBLY (VWM1221)

KRAB assembly is composed of the EXTb and KFCB assemblies

- MAIN : MAIN BOARD
- FG : FG COUNTER BOARD
- SW : SW BOARD
- FLKB : FL KEY BOARD
- DIKB : DIRECT KEY BOARD
- IRKB : IR KEY BOARD
- HEPB : HEADPHONE BOARD
- MIJB : MIC JACK BOARD
- KCKB : KEY CONTROL KEY BOARD
- CNCB : CONNECTOR BOARD
- EXTb : EXTRA BOARD
- KFCB : KARAOKE FUNCTION BOARD

### 4. SCHEMATIC AND P.C. BOARDS DIAGRAM

#### 1. RESISTORS:

Indicated in  $\Omega$ , 1/4W, 1/6W and 1/8W,  $\pm 5\%$  tolerance unless otherwise noted k; $\Omega$ , M;M  $\Omega$ , (F);  $\pm 1\%$ , (G);  $\pm 2\%$ , (K);  $\pm 10\%$ , (M);  $\pm 20\%$  tolerance.

#### 2. CAPACITORS:

Indicated in capacity ( $\mu F$ ) /voltage(V) unless otherwise noted p;pF. Indication without voltage is 50V except electrolytic capacitor.

#### 3. VOLTAGE, CURRENT:


$\square$  ;DC voltage (V) at no input signal.  
 Value in ( ) is DC voltage at rated power.  
 $\Leftrightarrow$  mA ;DC current at no input signal.

#### 4. OTHERS:

$\rightarrow$  ;Signal route.  
 $\otimes$  ;Adjusting point.  
 The  $\Delta$  mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.  
 \* marked capacitors and resistors have parts numbers.


This is the basic schematic diagram, but the actual circuit may vary due to improvements in design.

4.1 OVERALL WIRING DIAGRAM

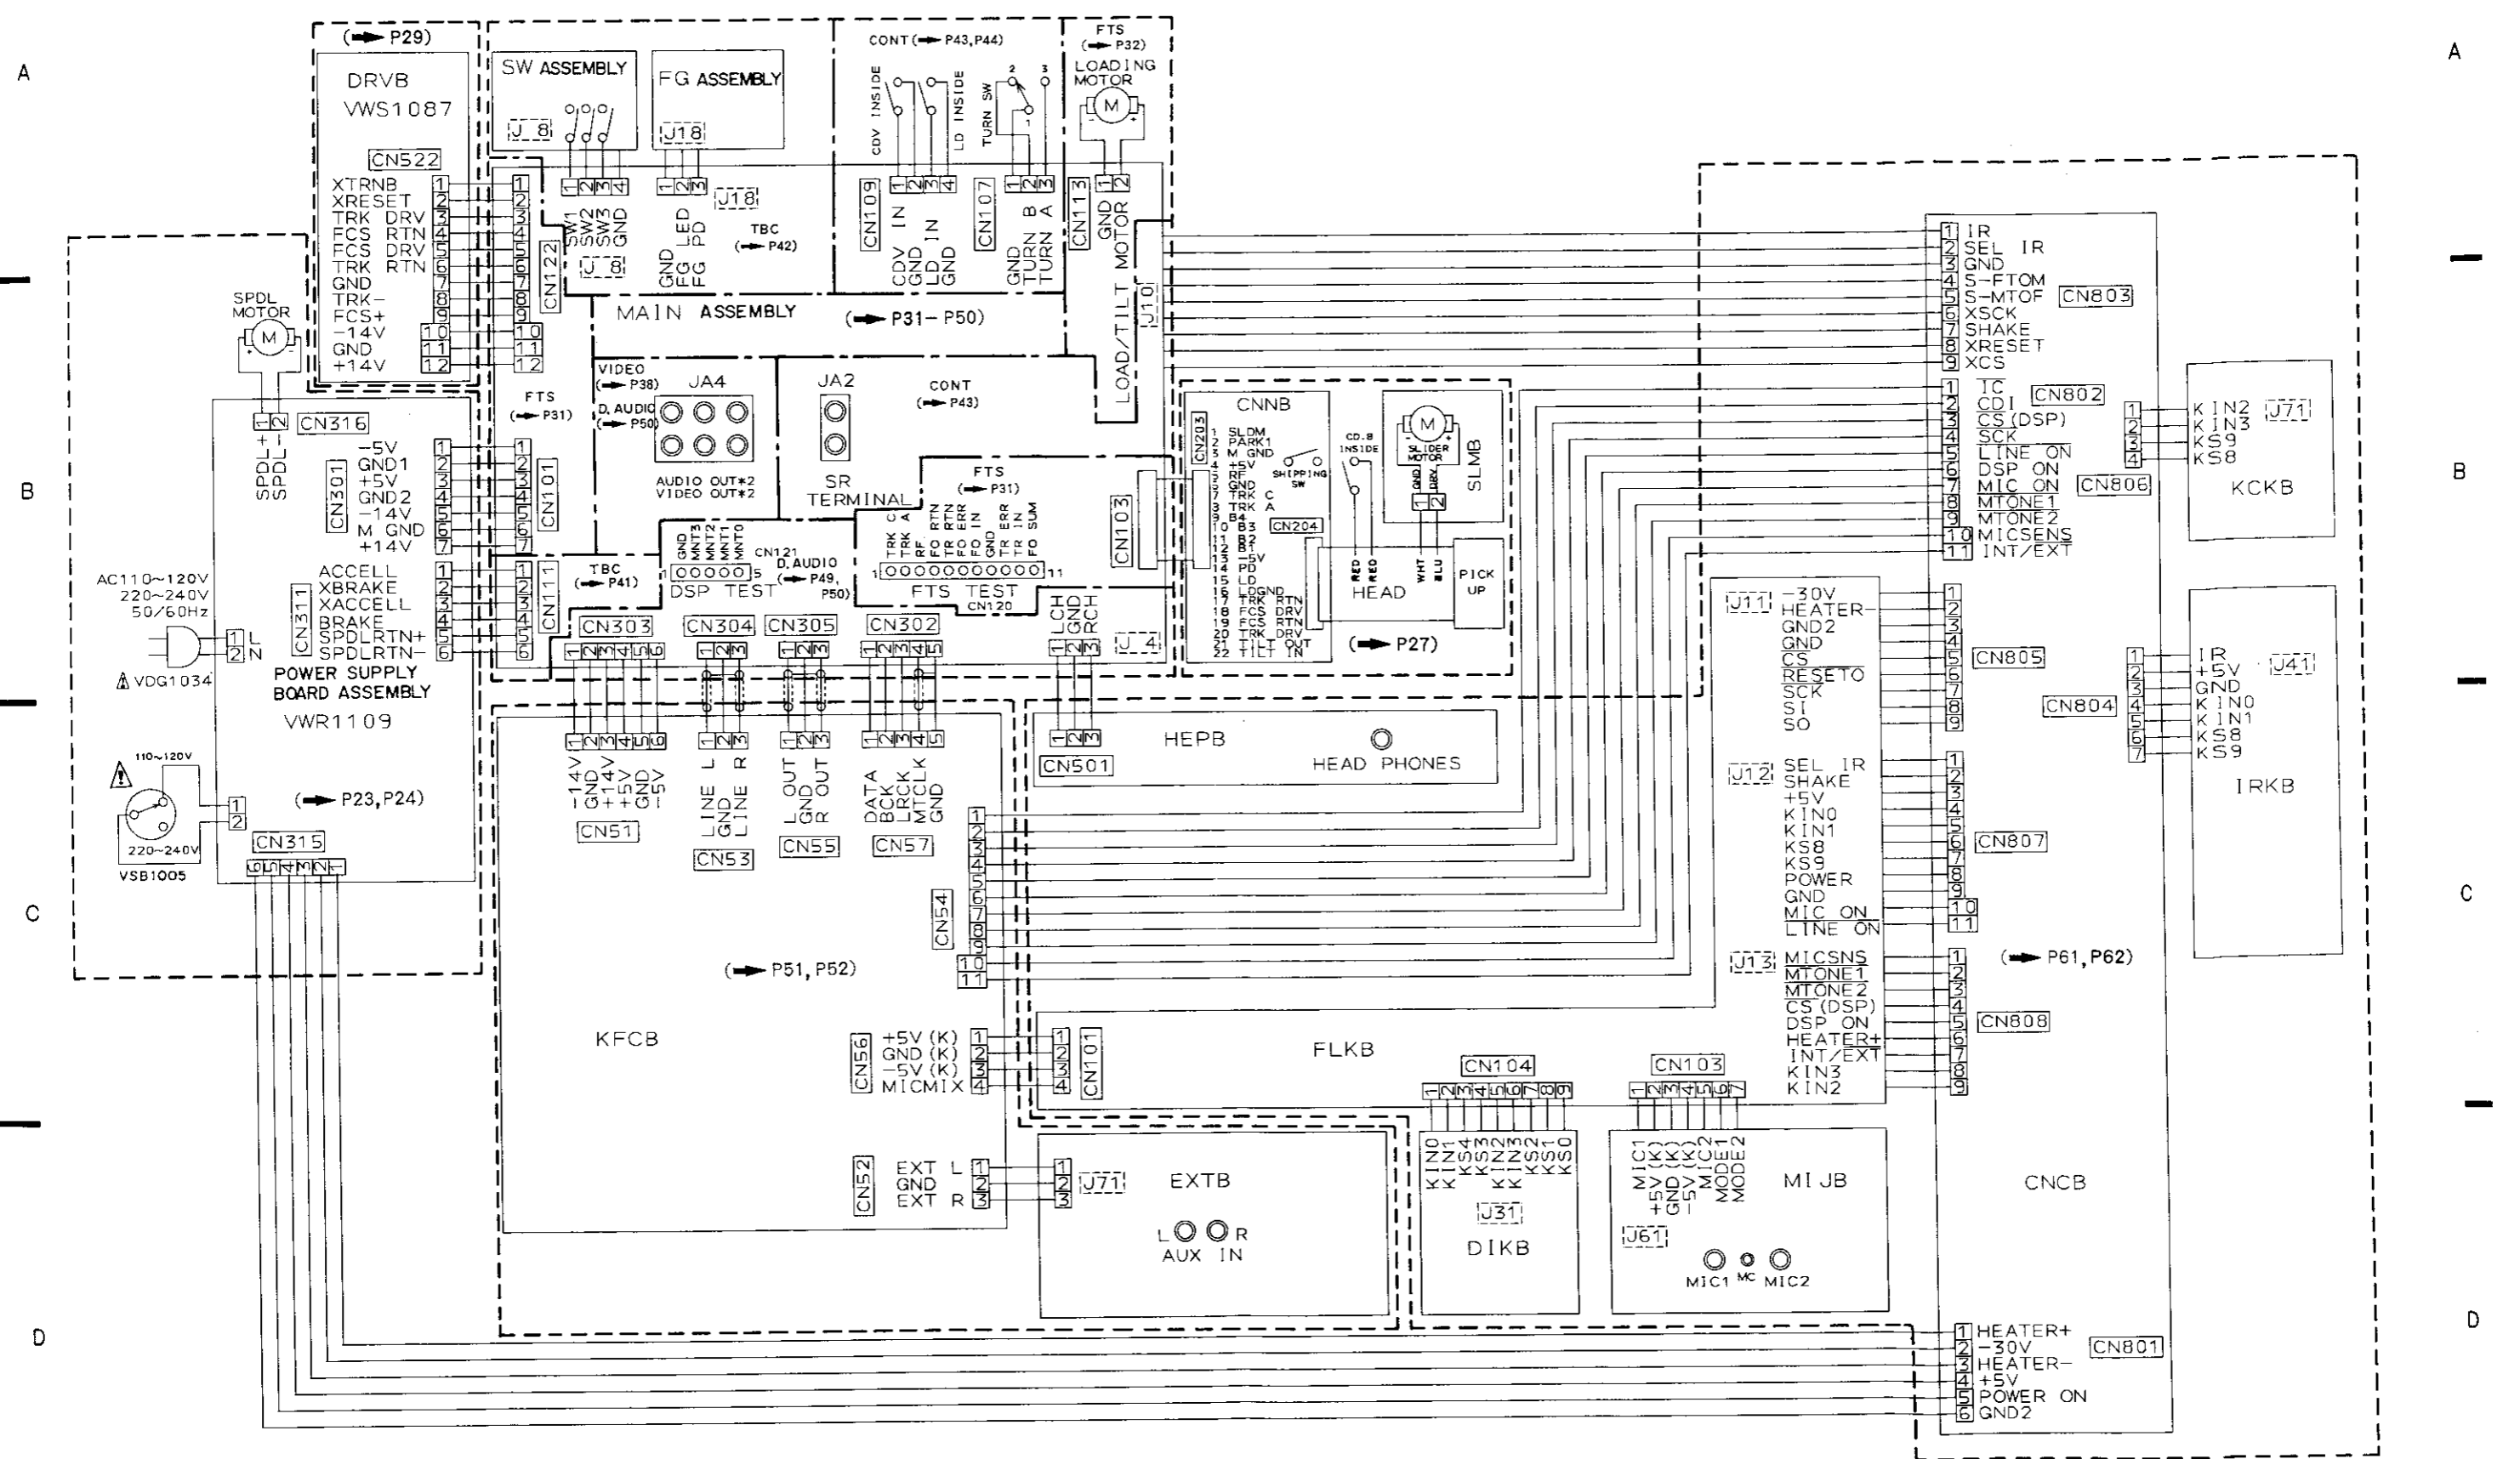

4.2 POWER SUPPLY BOARD ASSEMBLY

POWER SUPPLY BOARD ASSEMBLY (VWR1109)

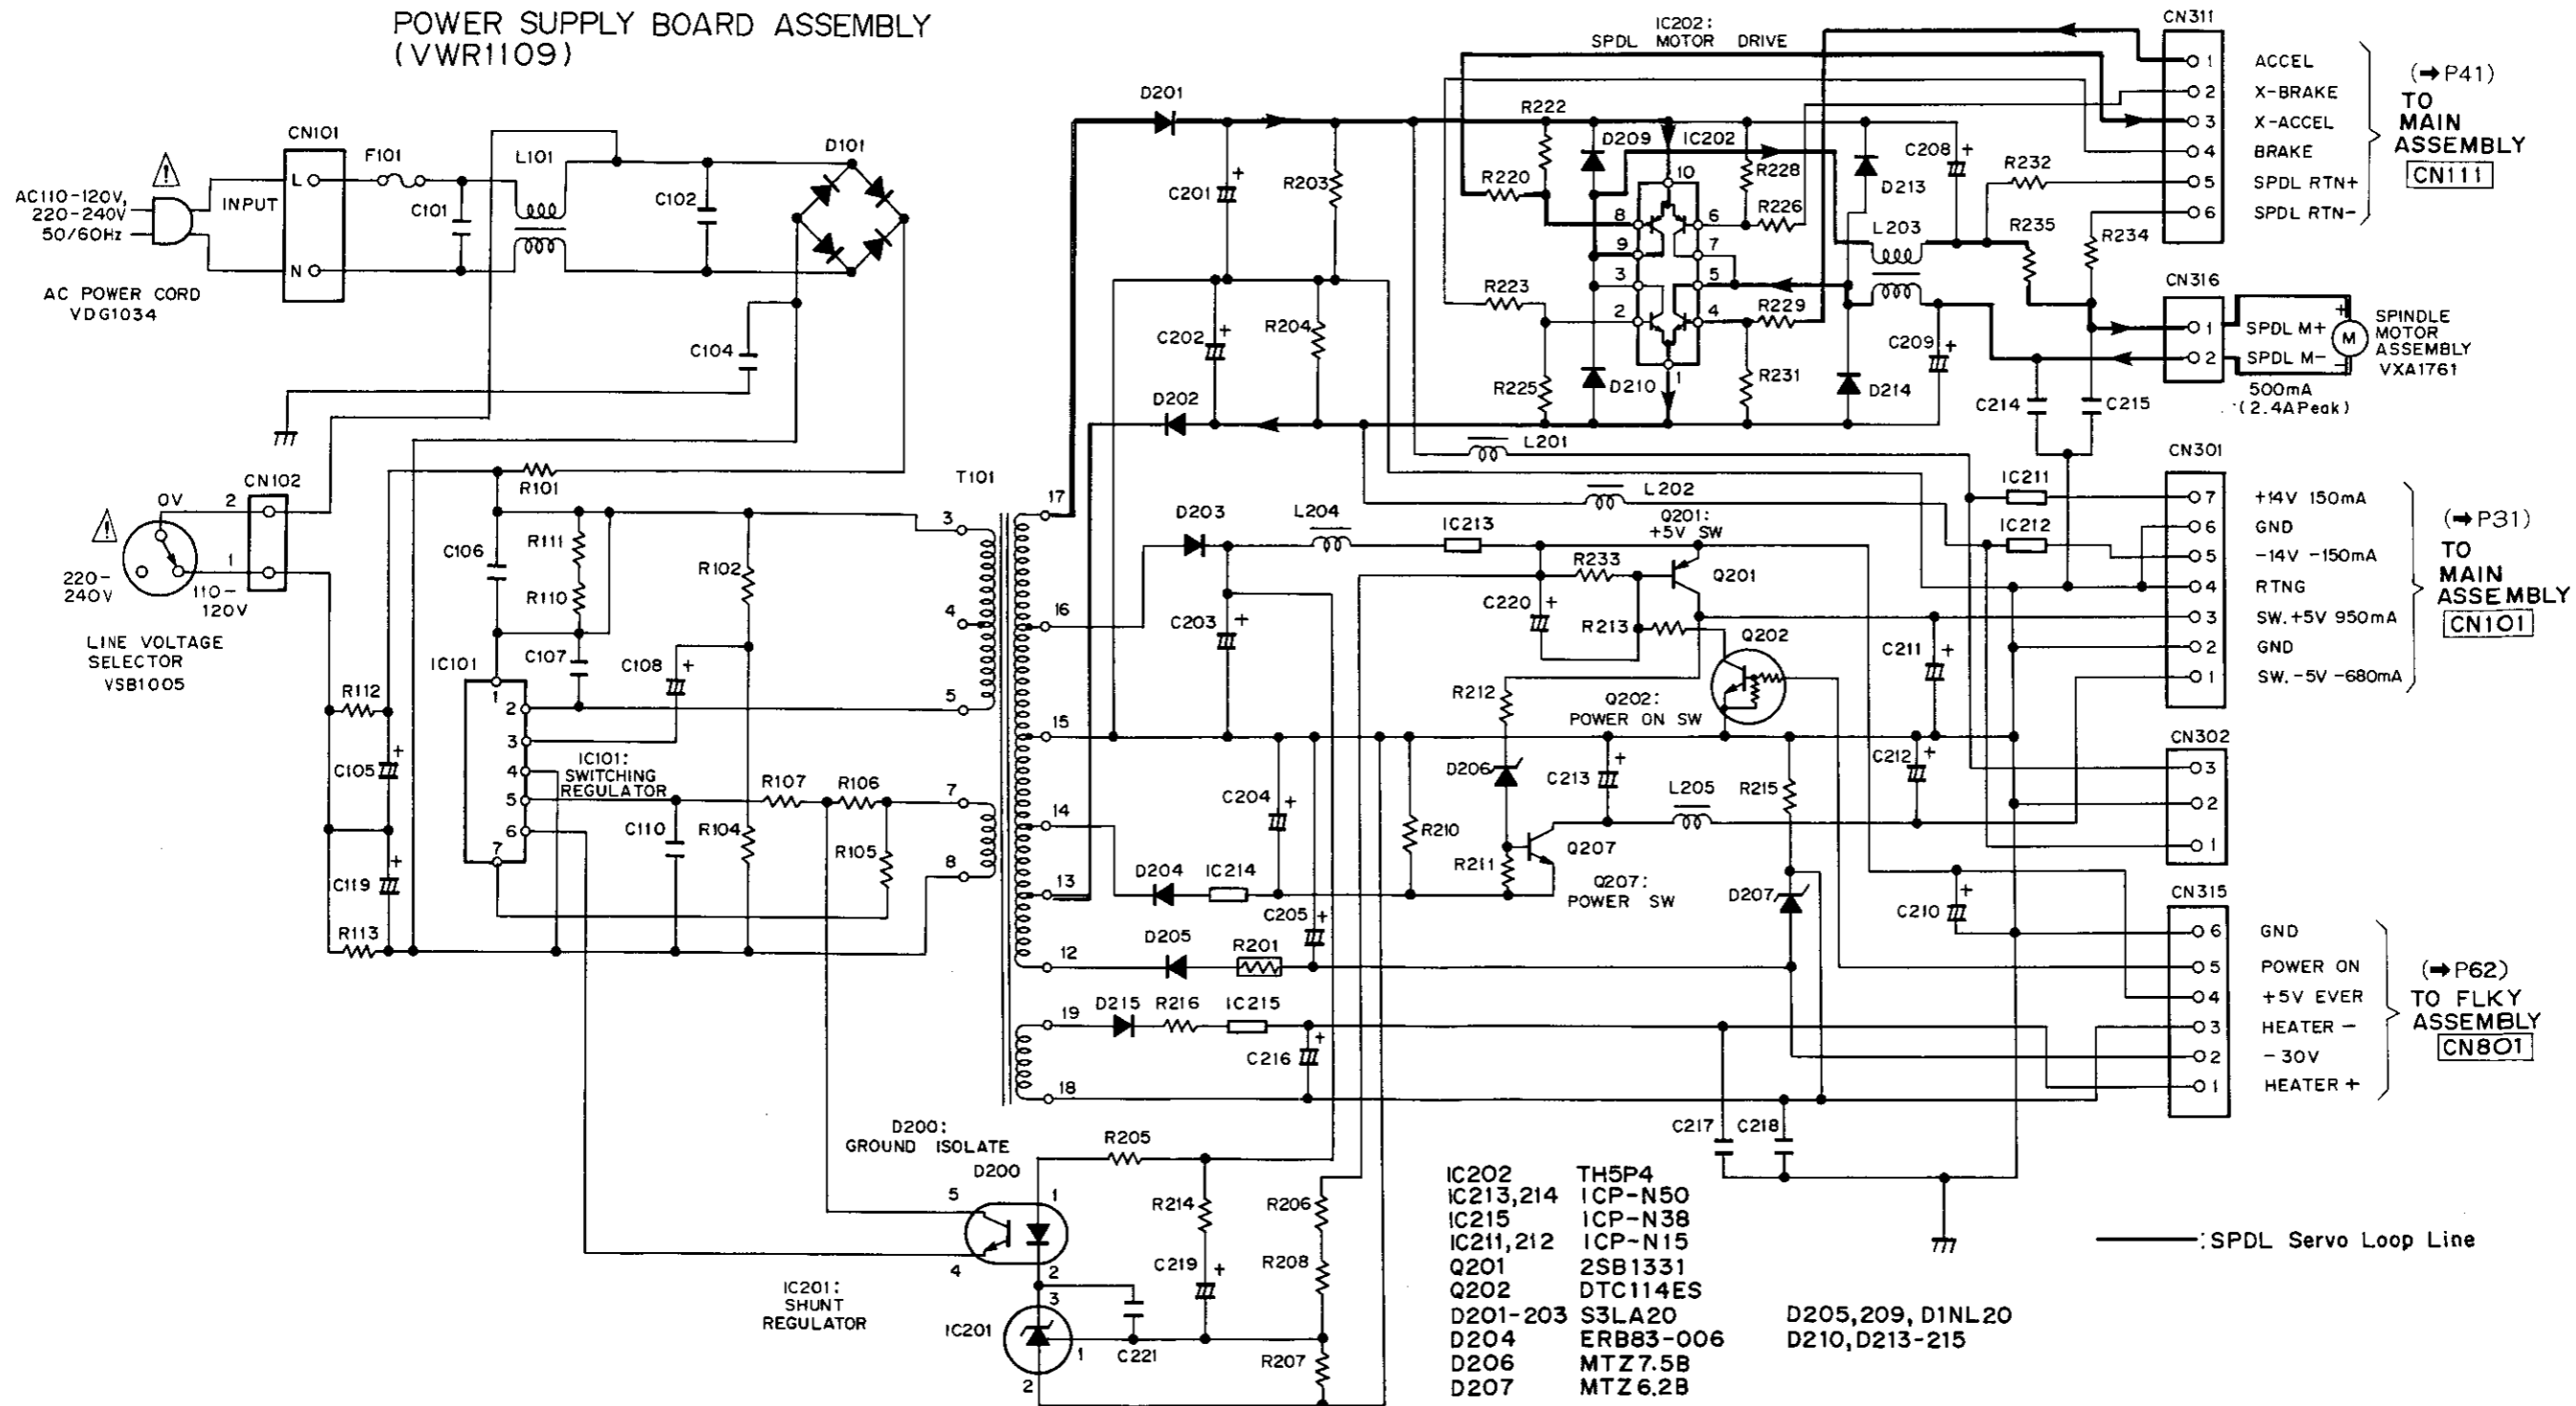

- IC202 TH5P4
- IC213,214 ICP-N50
- IC215 ICP-N38
- IC211,212 ICP-N15
- Q201 2SB1331
- Q202 DTC114ES
- D201-203 S3LA20
- D204 ERB83-006
- D206 MTZ7.5B
- D207 MTZ6.2B

- D205,209, D1NL20
- D210, D213-215

— SPDL Servo Loop Line

(→P41)  
TO MAIN ASSEMBLY  
CN111

(→P31)  
TO MAIN ASSEMBLY  
CN101

(→P62)  
TO FLKY ASSEMBLY  
CN801

ACCEL  
X-BRAKE  
X-ACCEL  
BRAKE  
SPDL RTN+  
SPDL RTN-

SPINDLE MOTOR ASSEMBLY VXA1761  
500mA  
(2.4A Peak)

+14V 150mA  
GND  
-14V -150mA  
RTNG  
SW. +5V 950mA  
GND  
SW. -5V -680mA

GND  
POWER ON  
+5V EVER  
HEATER -  
-30V  
HEATER +


• View from component side

A

B

C



D

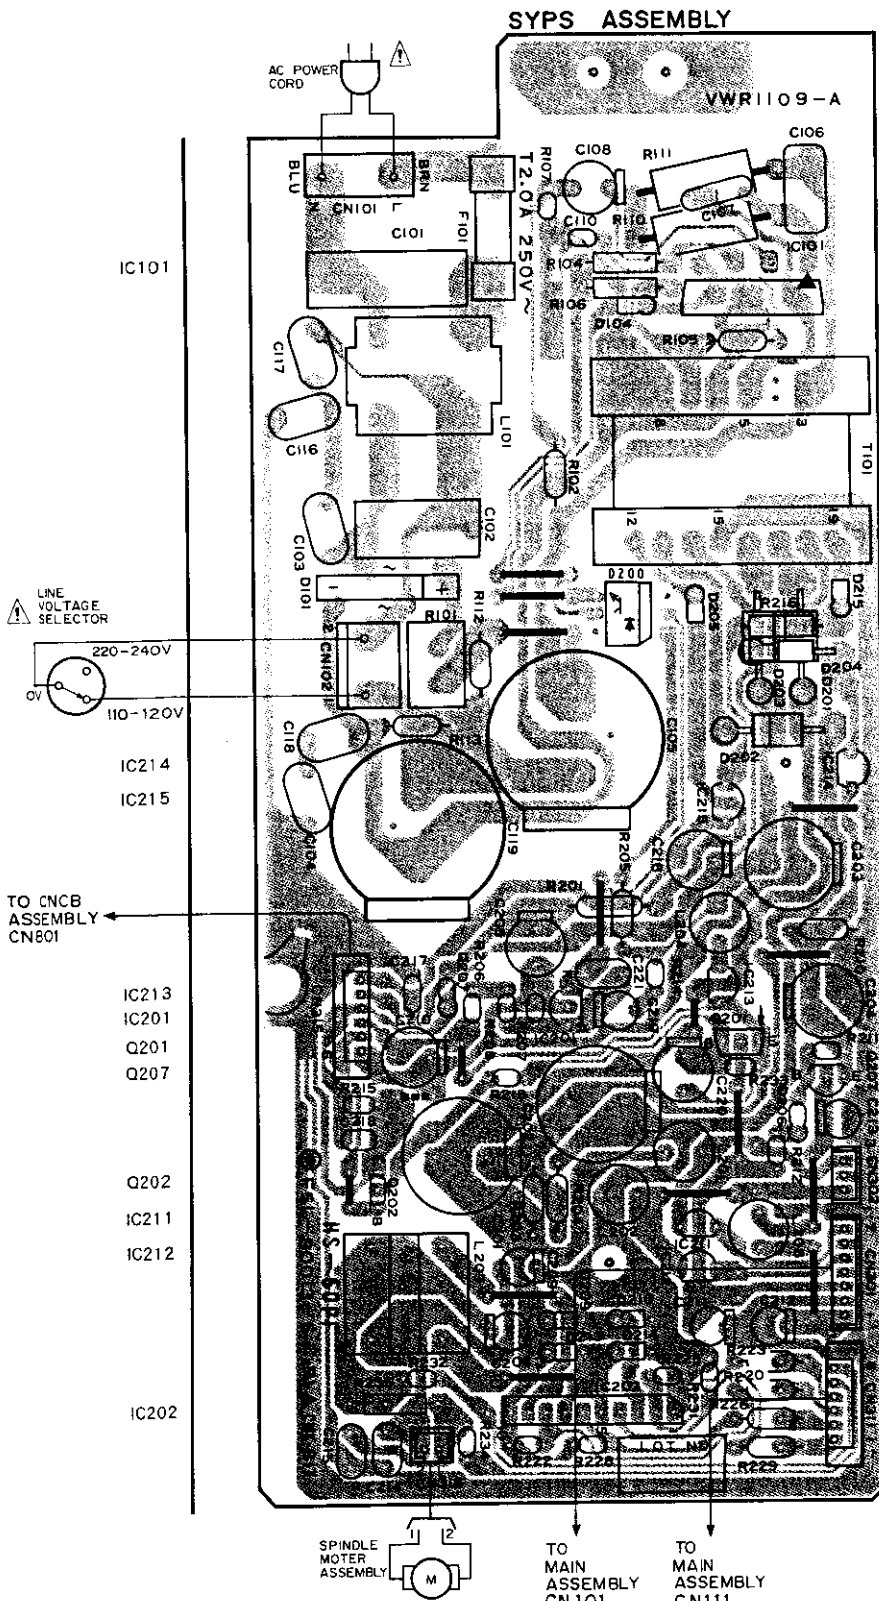

P.C.B. pattern diagram indication	Corresponding part symbol	Part name
		Transistor
		FET
		Diode
		Zener diode
		LED
		Varactor
		Tact switch
		Inductor
		Coil
		T transformer
		Filter
		Ceramic capacitor
		Mylar capacitor
		Styro capacitor
		Electrolytic capacitor (Non polarized)
		Electrolytic capacitor (Noiseless)
		Electrolytic capacitor (Polarized)
		Electrolytic capacitor (Polarized)
		Power capacitor
		Semi-fixed resistor
		Resistor array
		Resistor
		Resonator
		Thermistor

- This P.C.B. connection diagram is viewed from the parts mounted side.
- The parts which have been mounted on the board can be replaced with those shown with the corresponding wiring symbols listed in the above Table.
- The capacitor terminal marked with shows the negative terminal.
- The diode marked with shows cathode side.
- The transistor terminal marked with shows emitter.

• View from soldering side

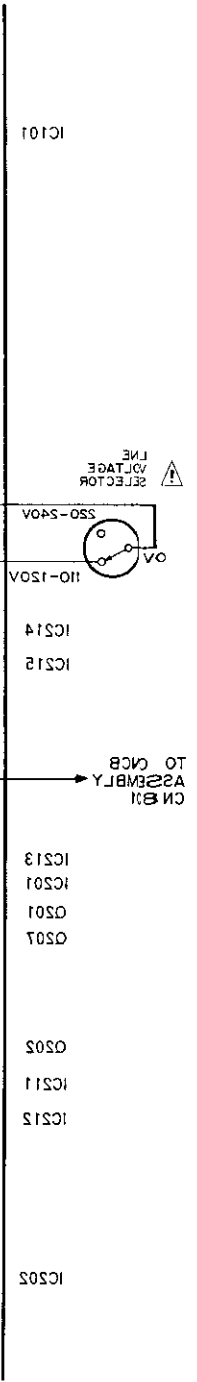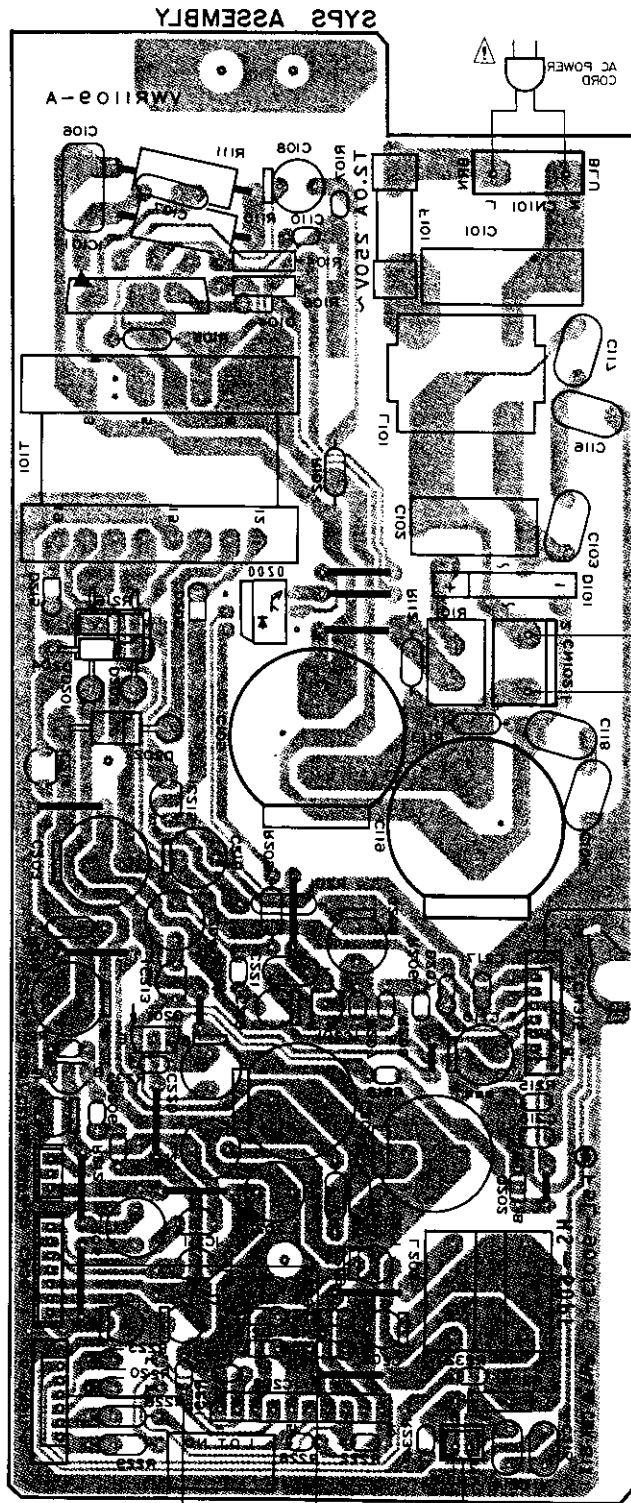


A  
B  
C  
D

A  
B  
C  
D

• View from component side

SYPS ASSEMBLY


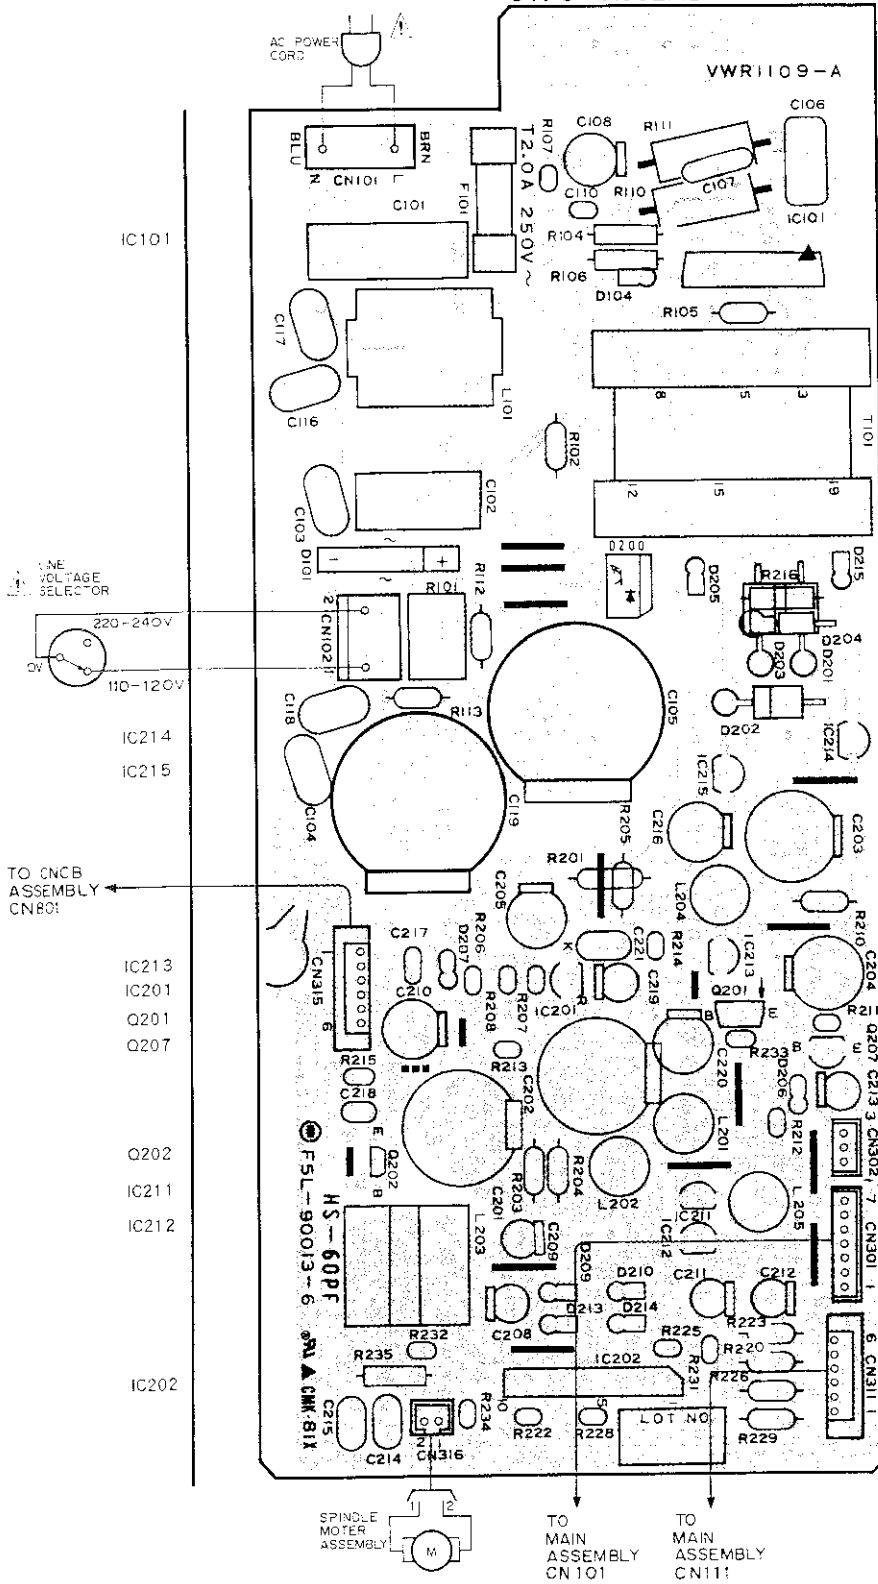


P.C.B. pattern diagram indication	Corresponding part symbol	Part name
		Transistor
		FET
		Diode
		Zener diode
		LED
		Varactor
		Tact switch
		Inductor
		Coil
		T Transformer
		Filter
		Ceramic capacitor
		Mylar capacitor
		Styrol capacitor
		Electrolytic capacitor (Non polarized)
		Electrolytic capacitor (Noiseless)
		Electrolytic capacitor (Polarized)
		Electrolytic capacitor (Polarized)
		Power capacitor
		5mm I-fixed resistor
		Resistor array
		Resistor
		Resonator
		Thermistor

1. This P.C.B. connection diagram is viewed from the parts mounted side.
2. The parts which have been mounted on the board can be replaced with those shown with the corresponding wiring symbols listed in the above Table.
3. The capacitor terminal marked with shows negative terminal.
4. The diode marked with shows cathode side.
5. The transistor terminal marked with shows emitter.





• View from soldering side

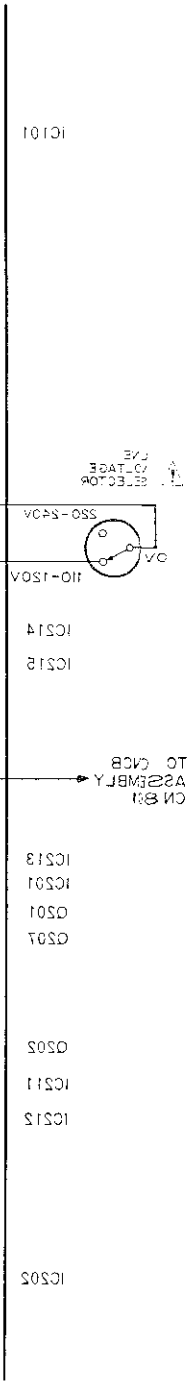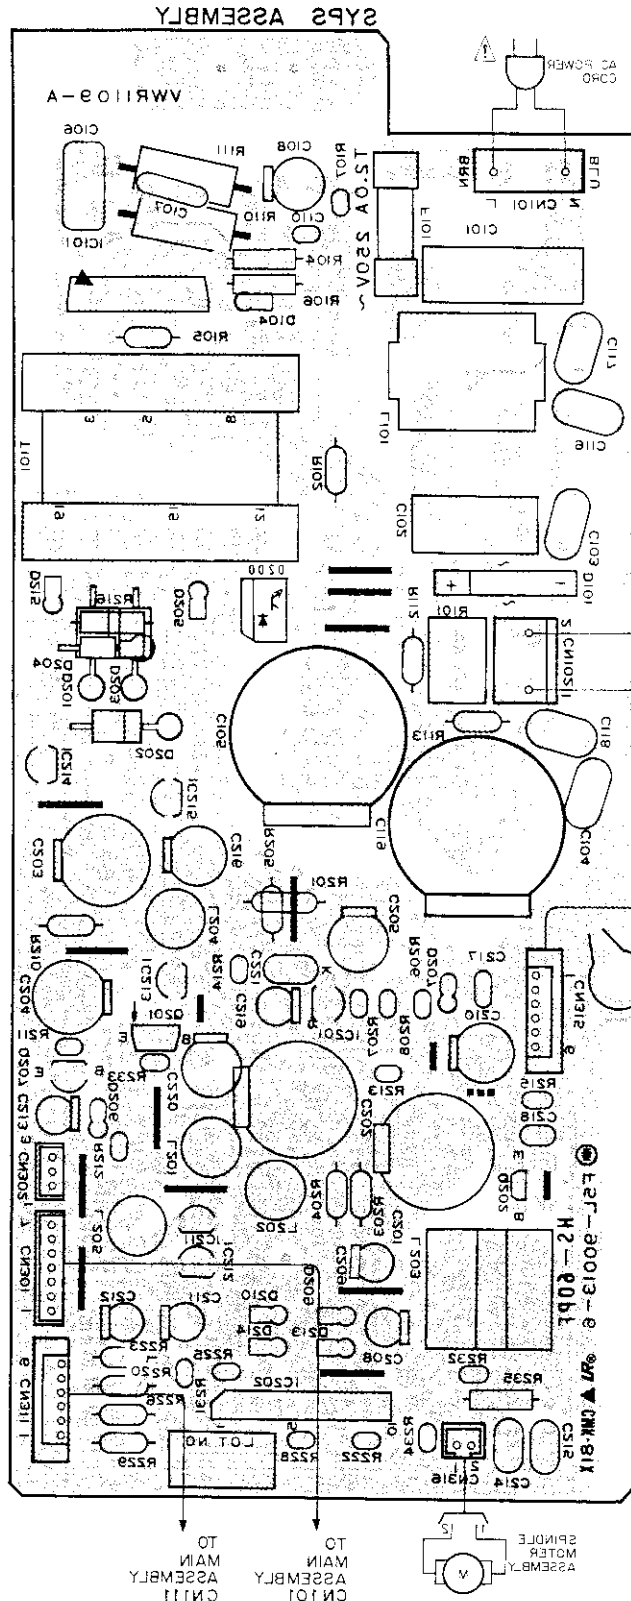

A  
B  
C  
D


A  
B  
C  
D

4.3 PICKUP AND CNNB ASSEMBLY

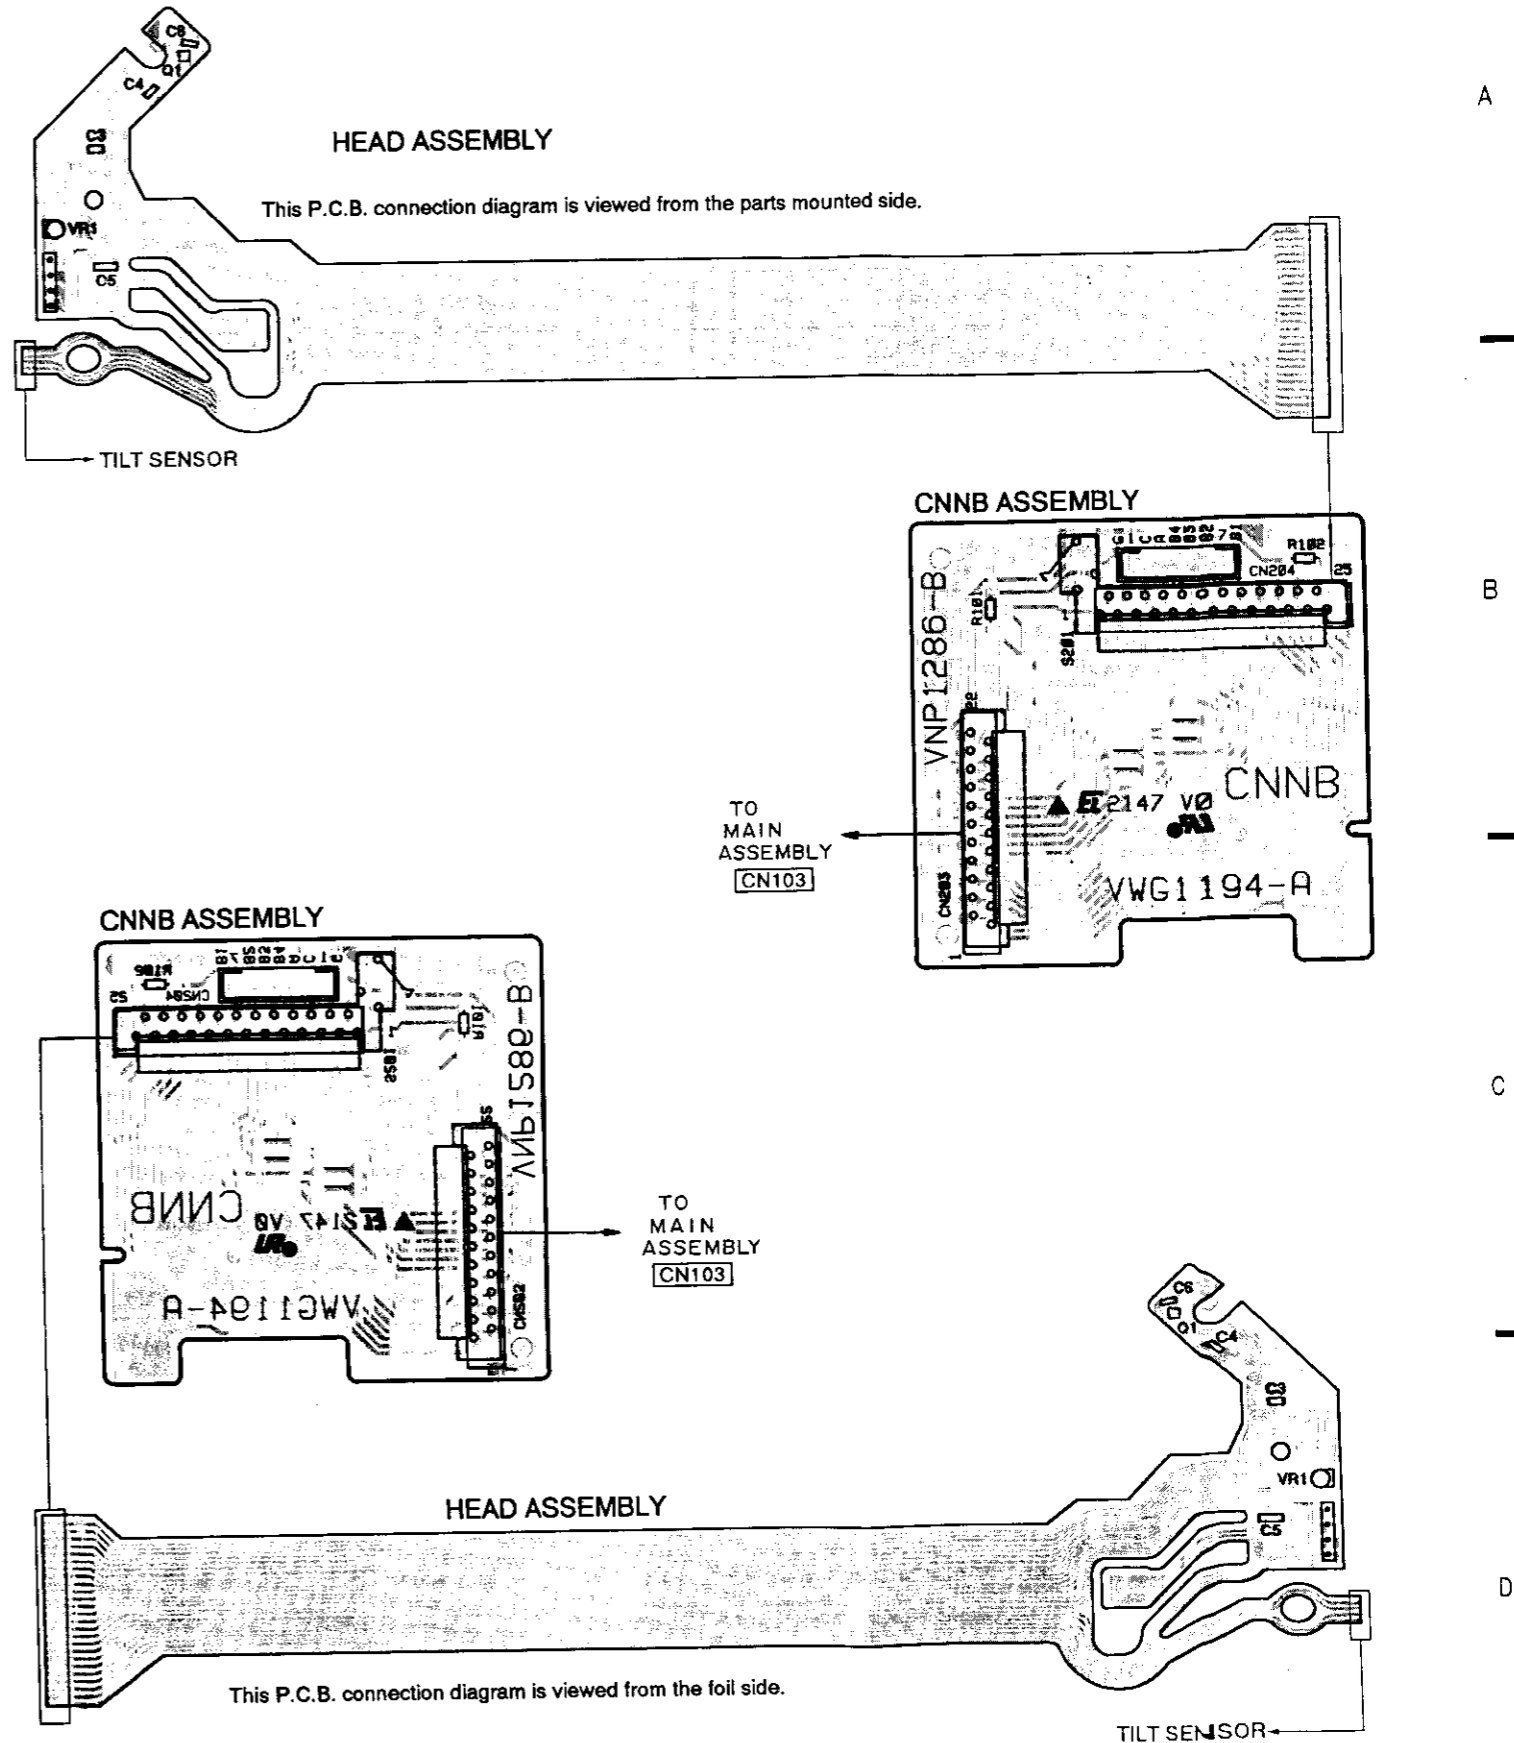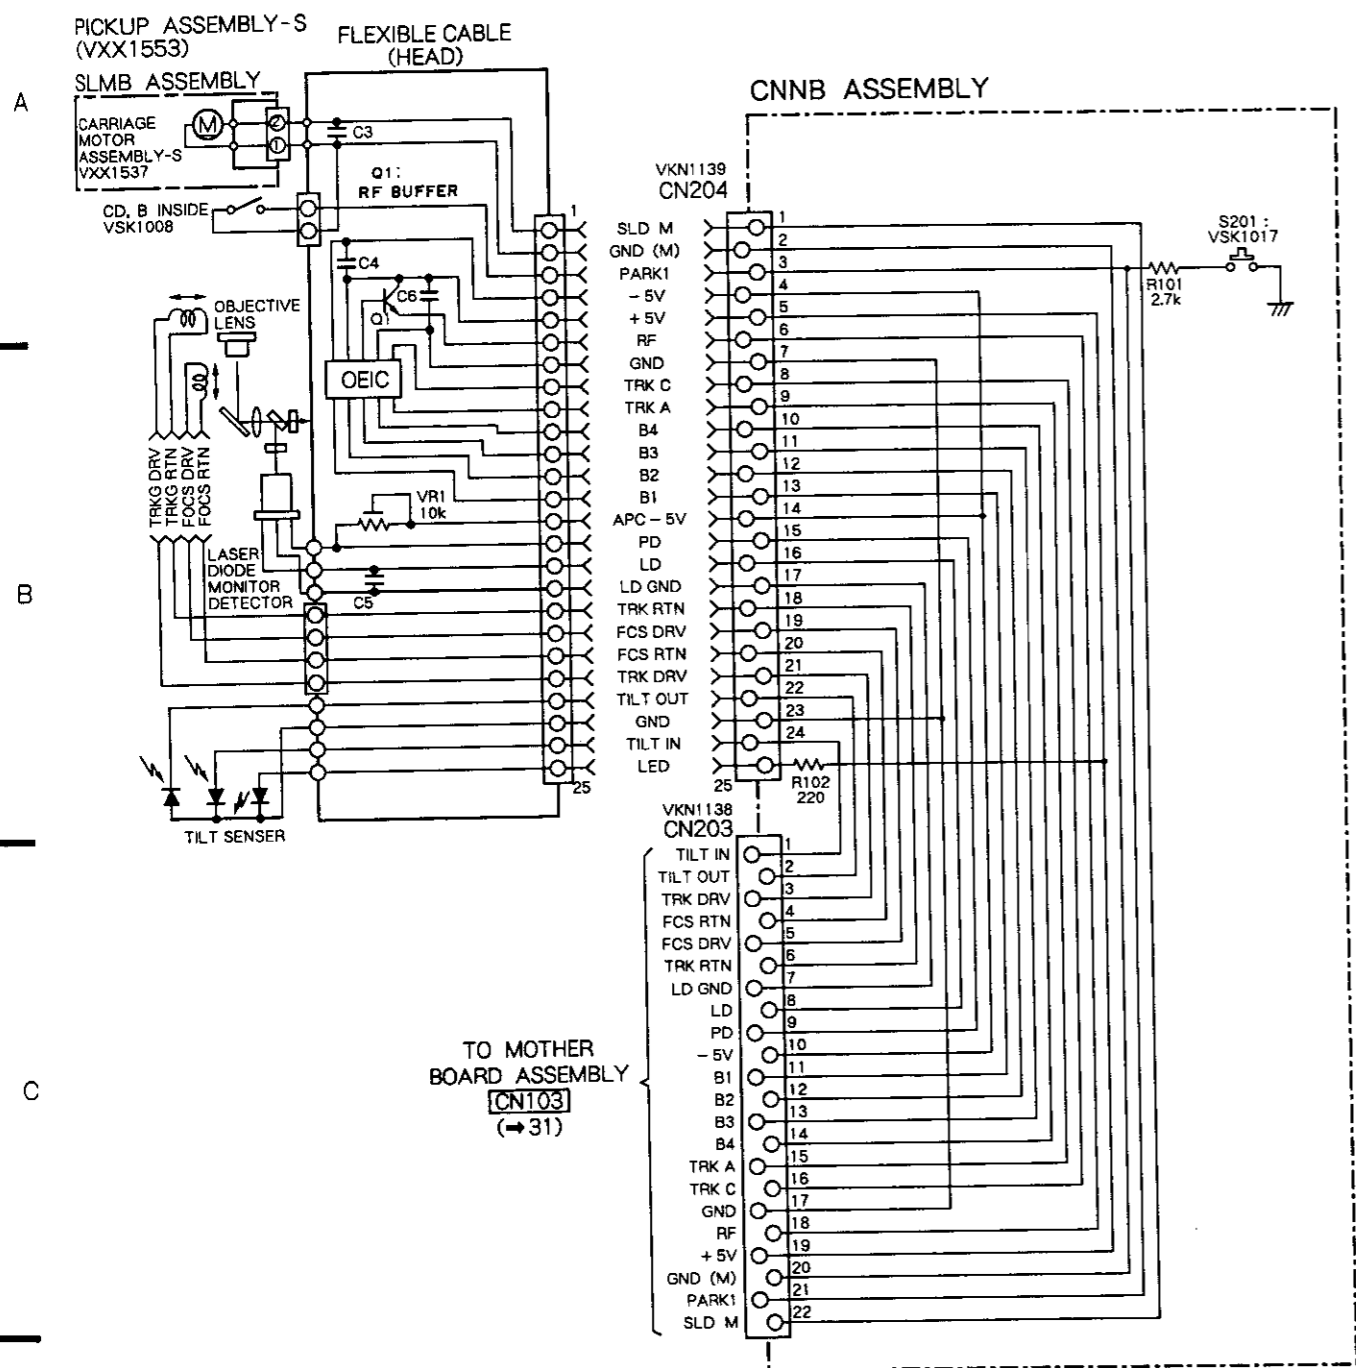


4.4 DRVB ASSEMBLY


DRVB ASSEMBLY (VWS1087)

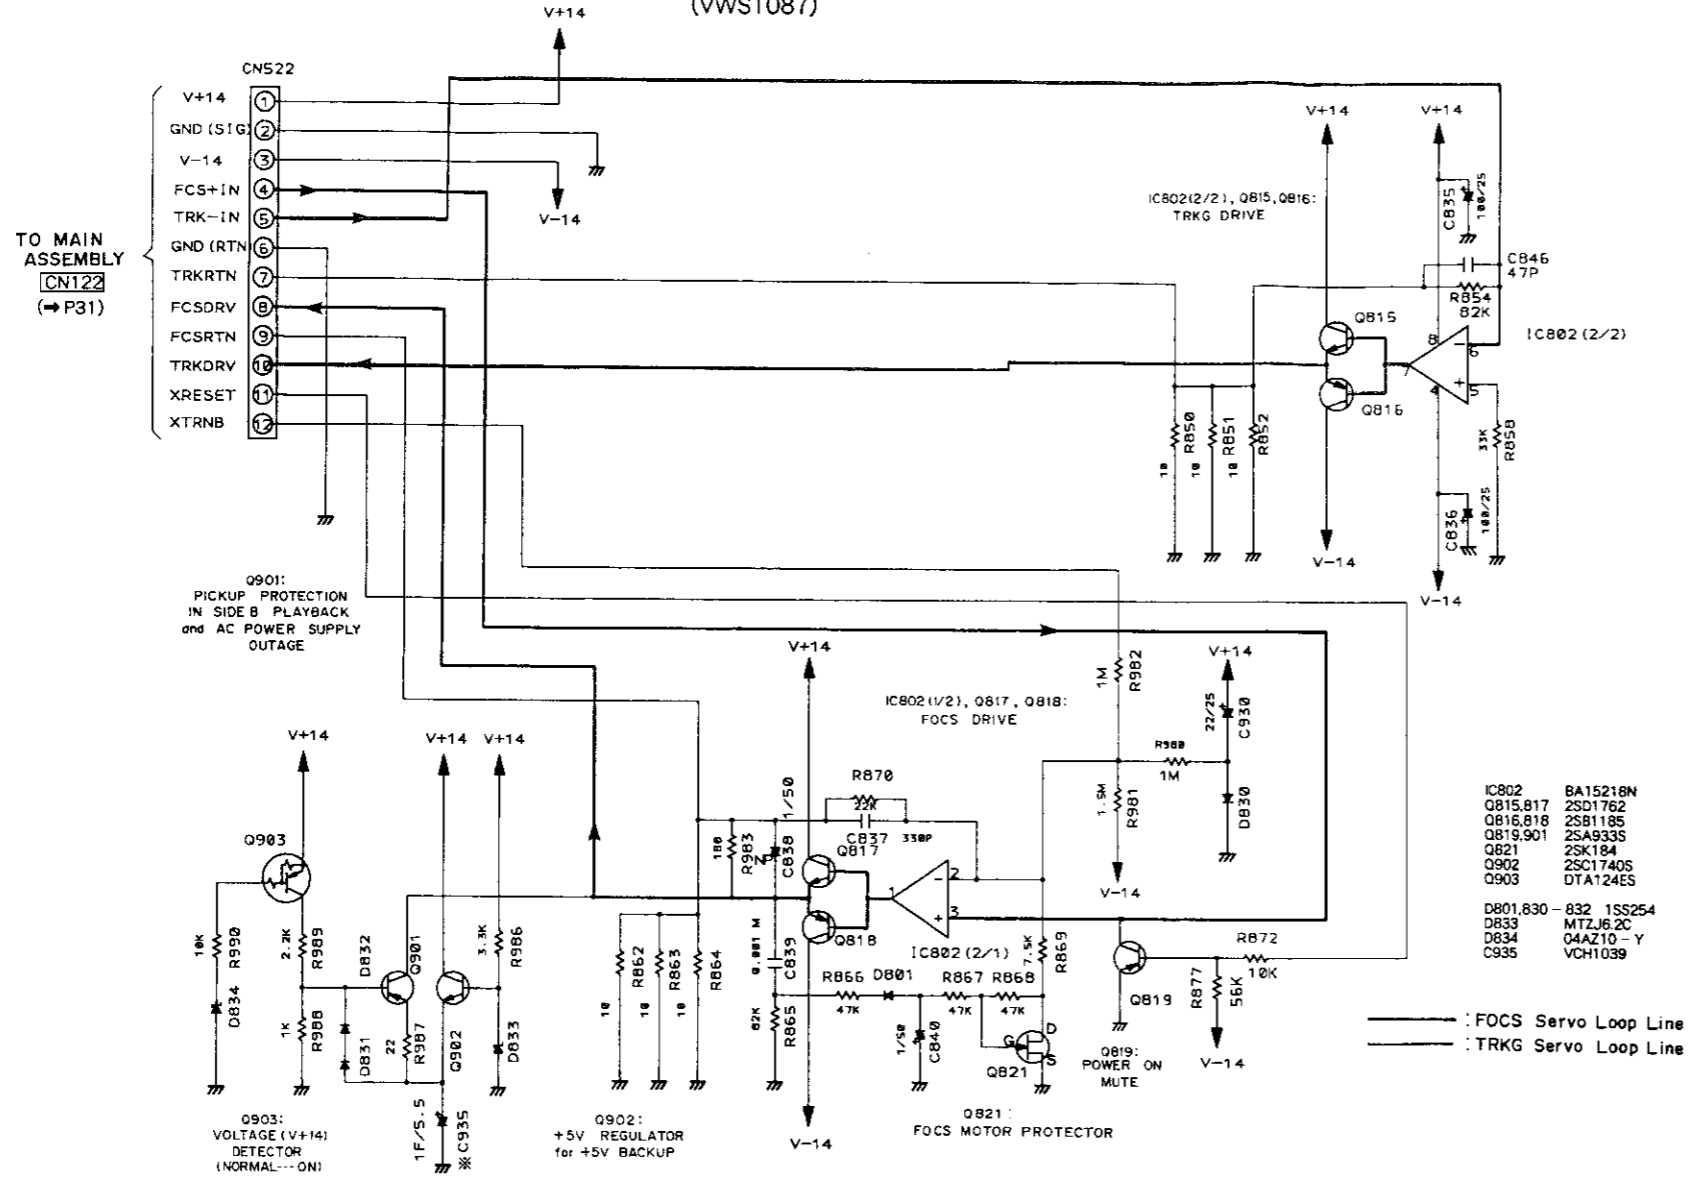


WAVEFORMS OF THE FTS SECTION

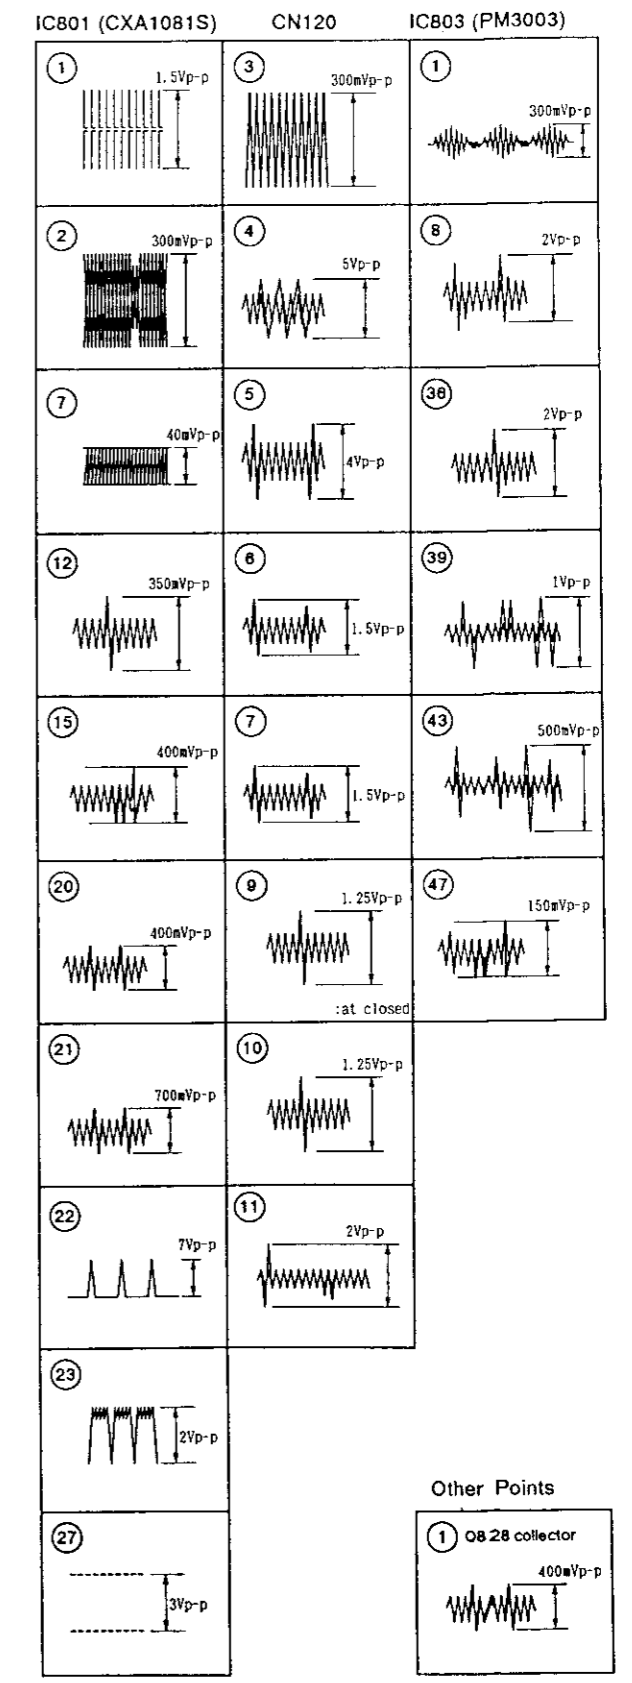

• View from component side

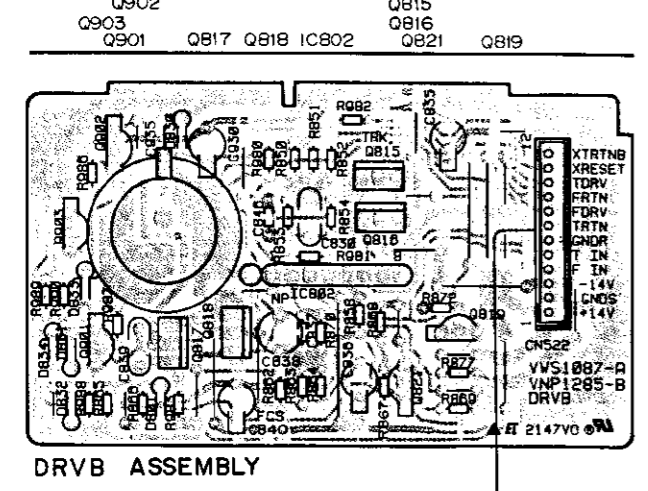



• View from soldering side

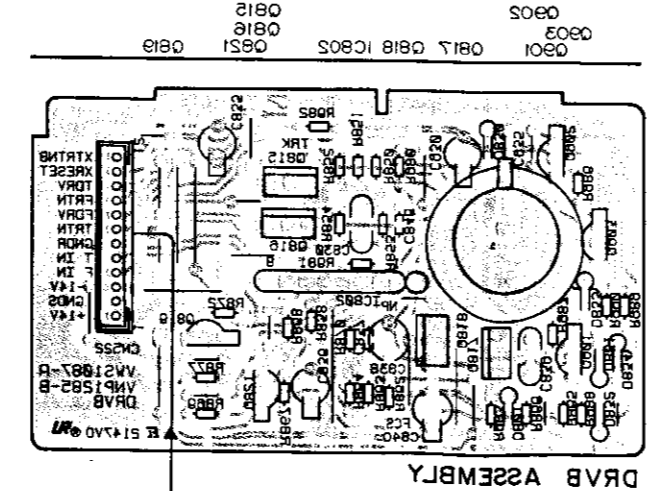

TO MAIN ASSEMBLY  
CN122


TO MAIN ASSEMBLY  
CN122

4.3 PICKUP AND CNNB ASSEMBLY

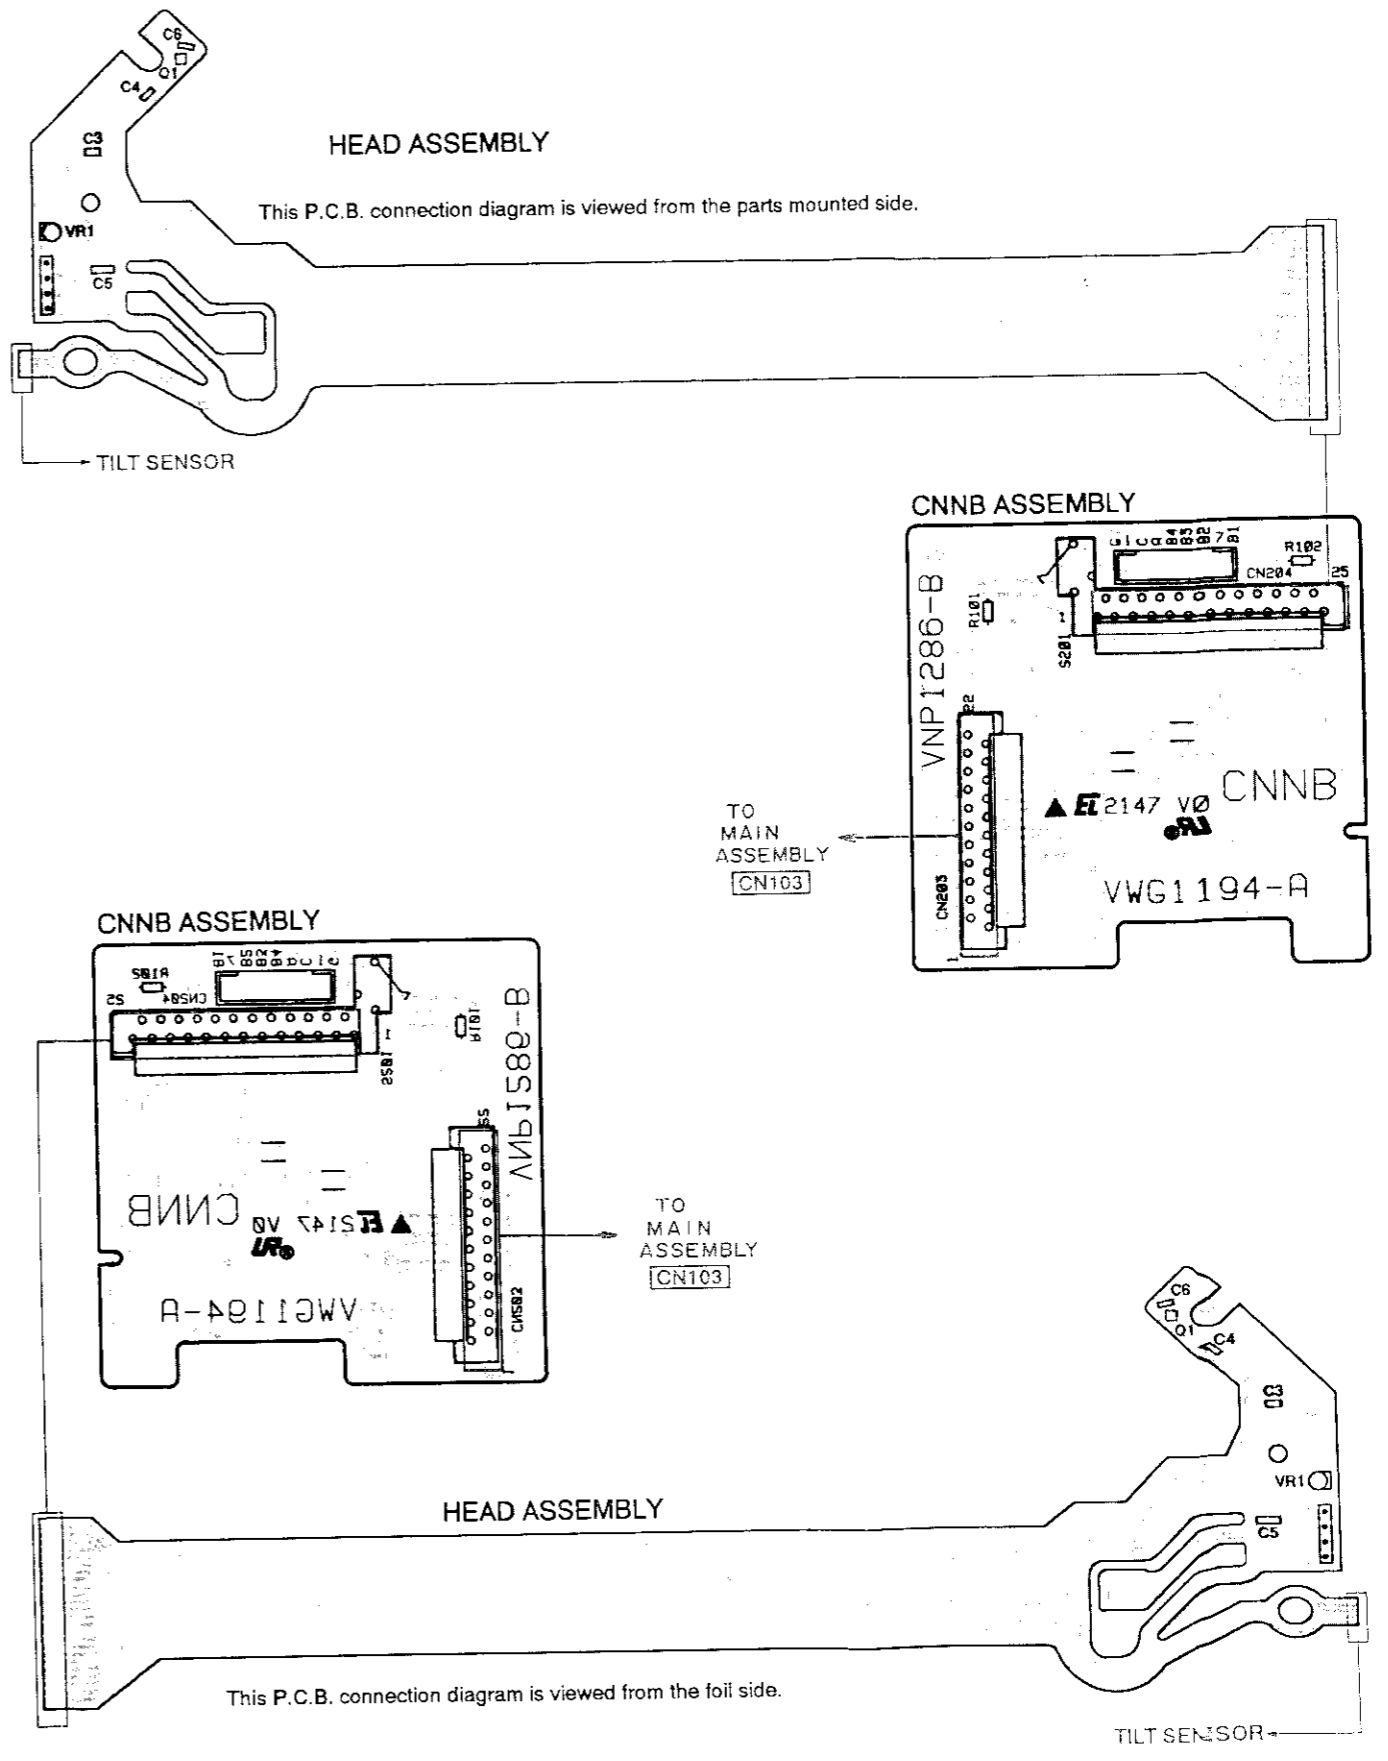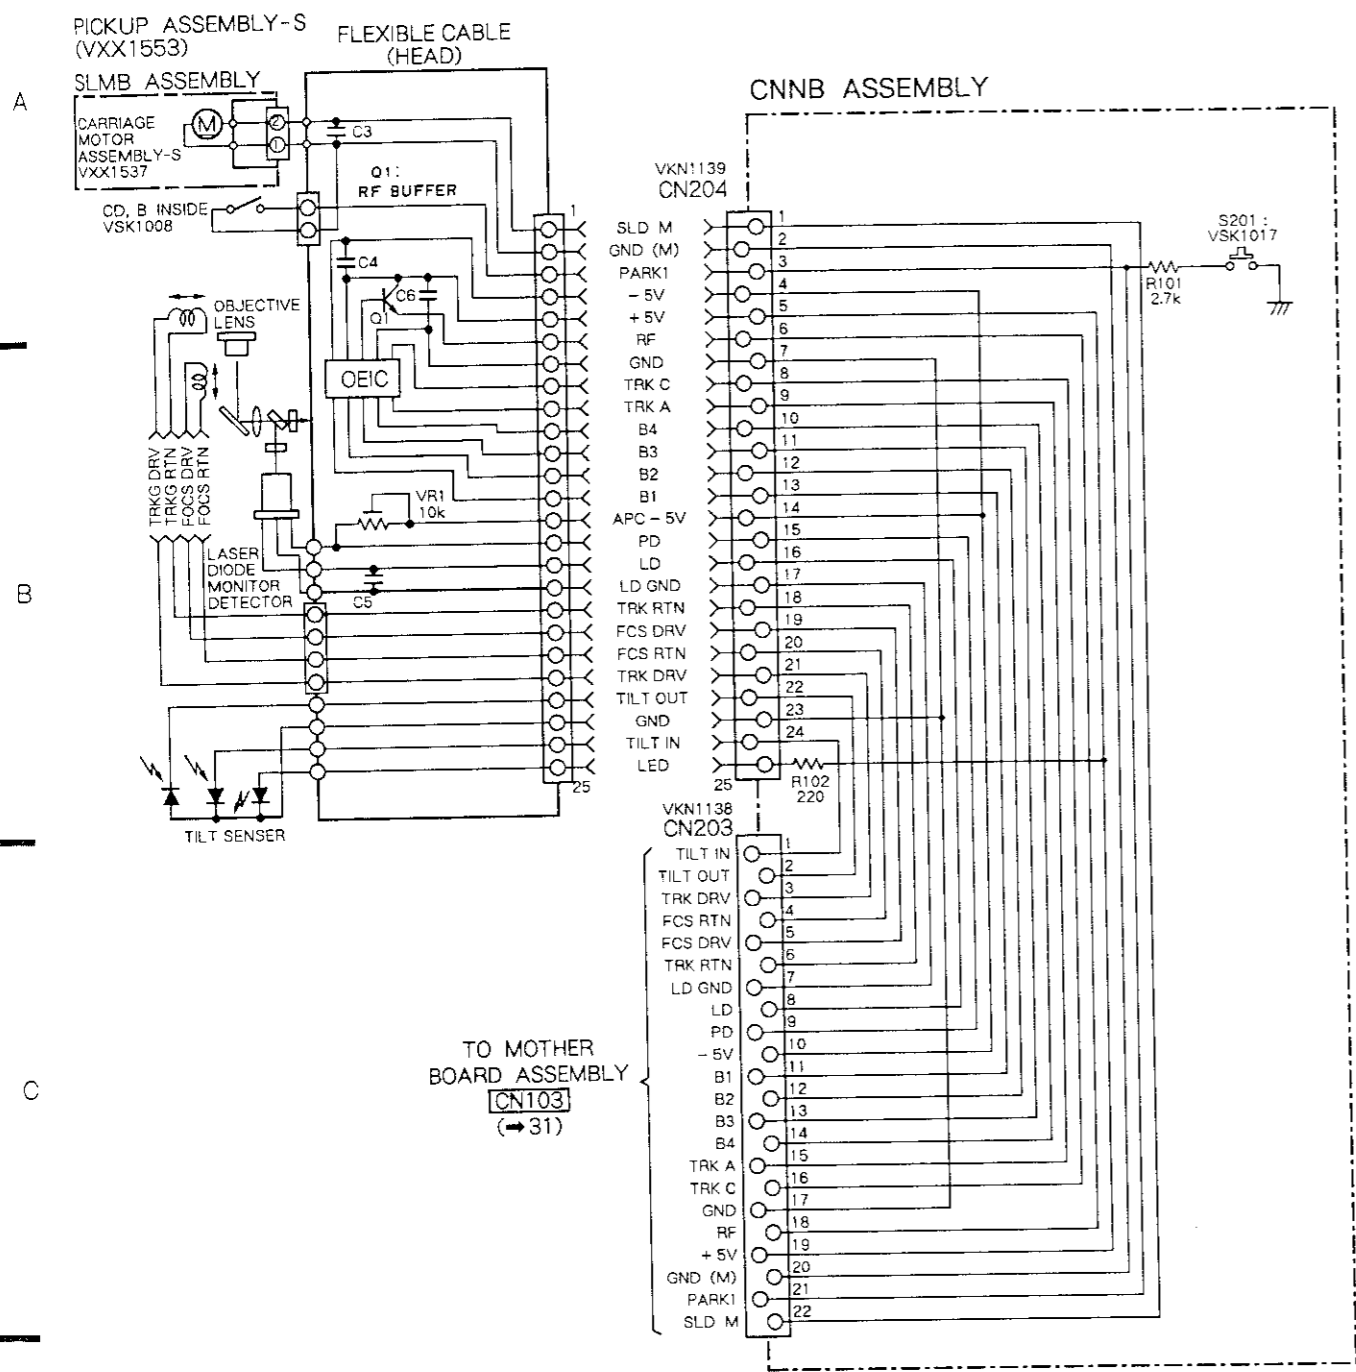

4.4 DRVB ASSEMBLY


DRVB ASSEMBLY (VWS1087)

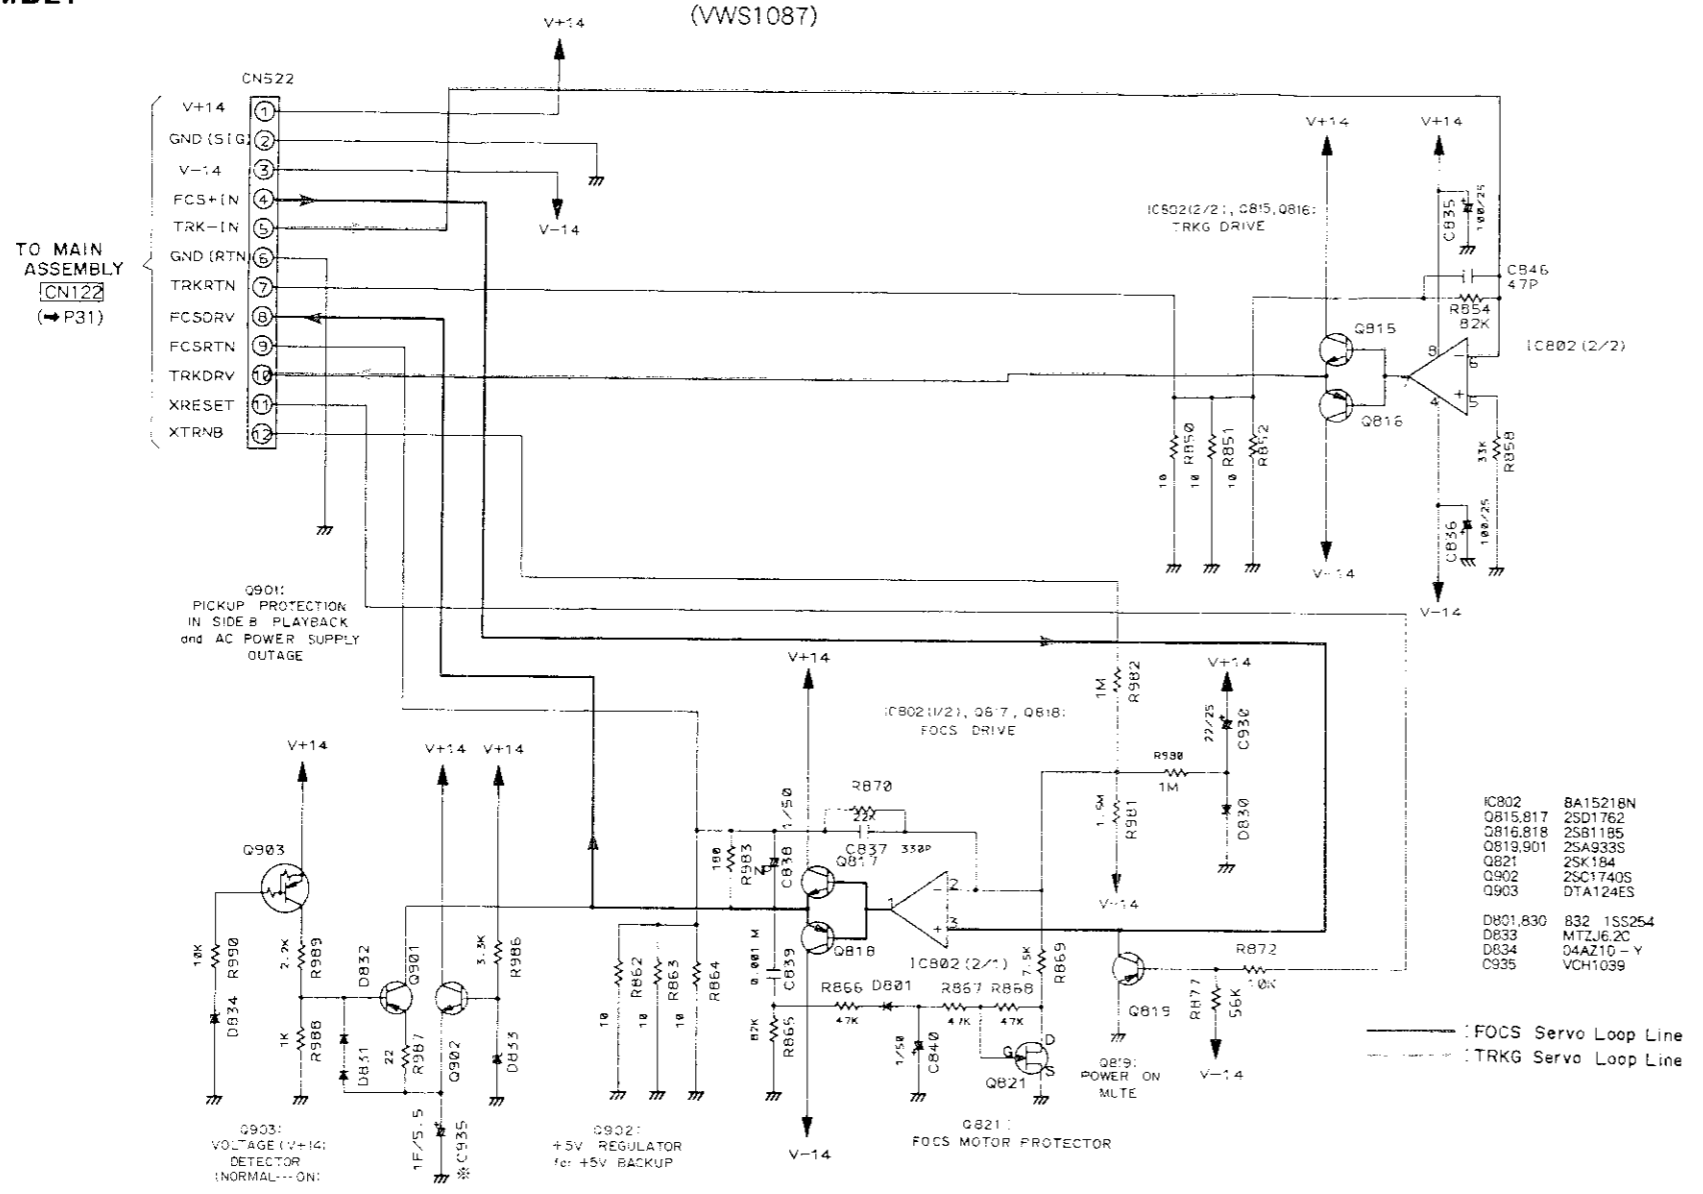

- IC802 8A15218N
- Q815,817 2SD1762
- Q816,818 2SB1185
- Q819,901 2SA933S
- Q821 2SK184
- Q902 2SC1740S
- Q903 DTA124ES
- D801,830 832 1SS254
- D833 MTZJ6.2C
- D834 34AZ10-Y
- C935 VCH1039


---: FOCUS Servo Loop Line  
 - - - : TRKG Servo Loop Line

WAVEFORMS OF THE FTS SECTION

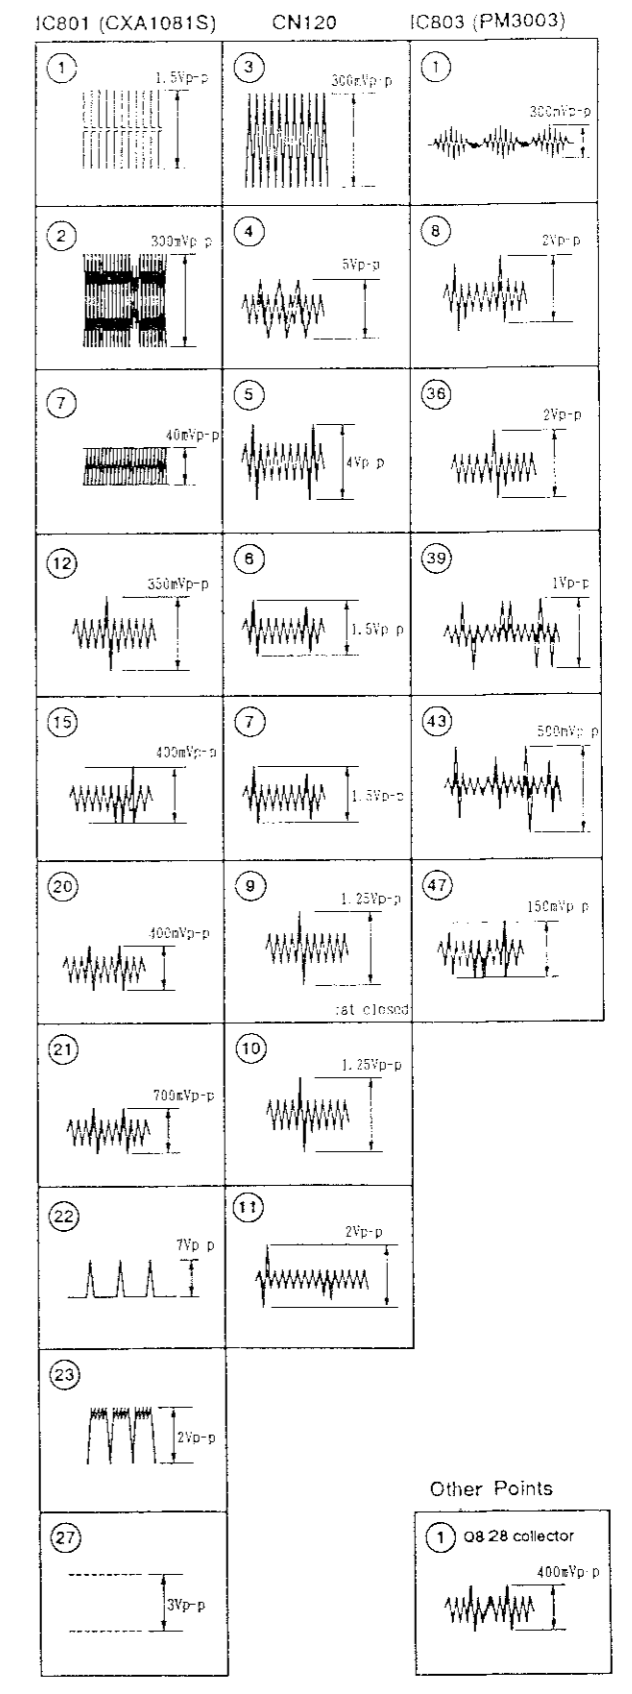


Other Points  
 ① Q828 collector  
 400mVp-p

• View from component side

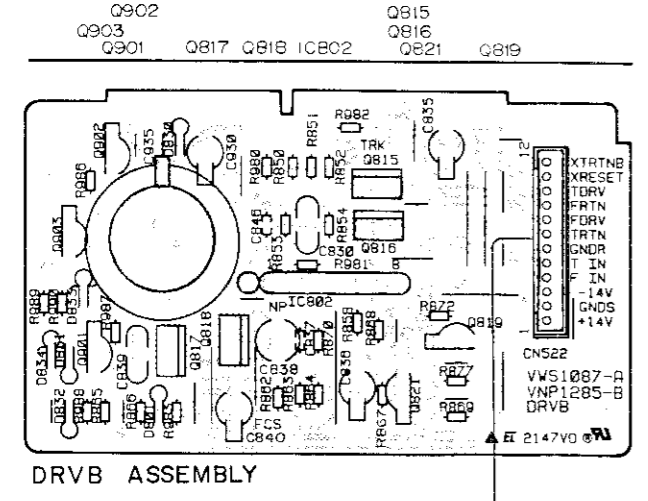

• View from soldering side

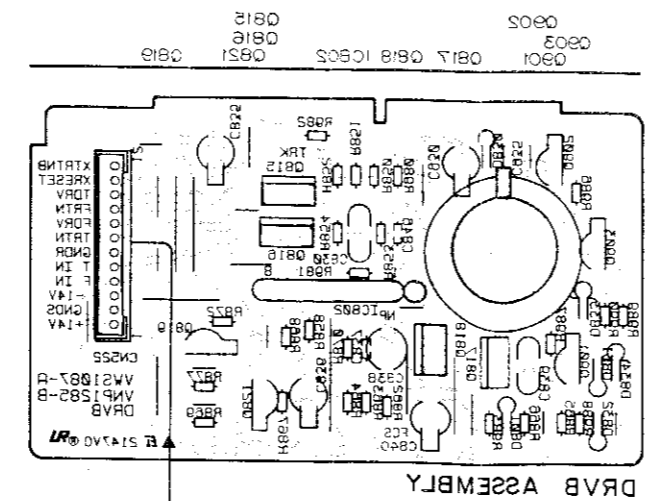

MAIN ASSEMBLY (FTS SECTION)


(P24)  
TO POWER SUPPLY BOARD ASSEMBLY [CN301]

-5V  
GND  
+5V  
GND (MOT)  
-14V  
GND (RTN)  
+14V  
Q826: INVERTER BUFFER

TRK C  
TRK A  
RF  
FO RTN  
TR RTN  
FO ERR  
FO IN  
GND  
TR ERR  
TR IN  
FO SUM

(P27)  
TO CNNB ASSEMBLY [CN203]

SLD M  
PARK1  
M GND  
+5V  
RF  
GND  
TRK C  
TRK A  
B4  
B3  
B2  
B1  
-5V  
PD  
LD  
GND (LD)  
TRK RTN  
FCS DRV  
FCS RTN  
TRK DRV  
TILT OUT  
TILT IN

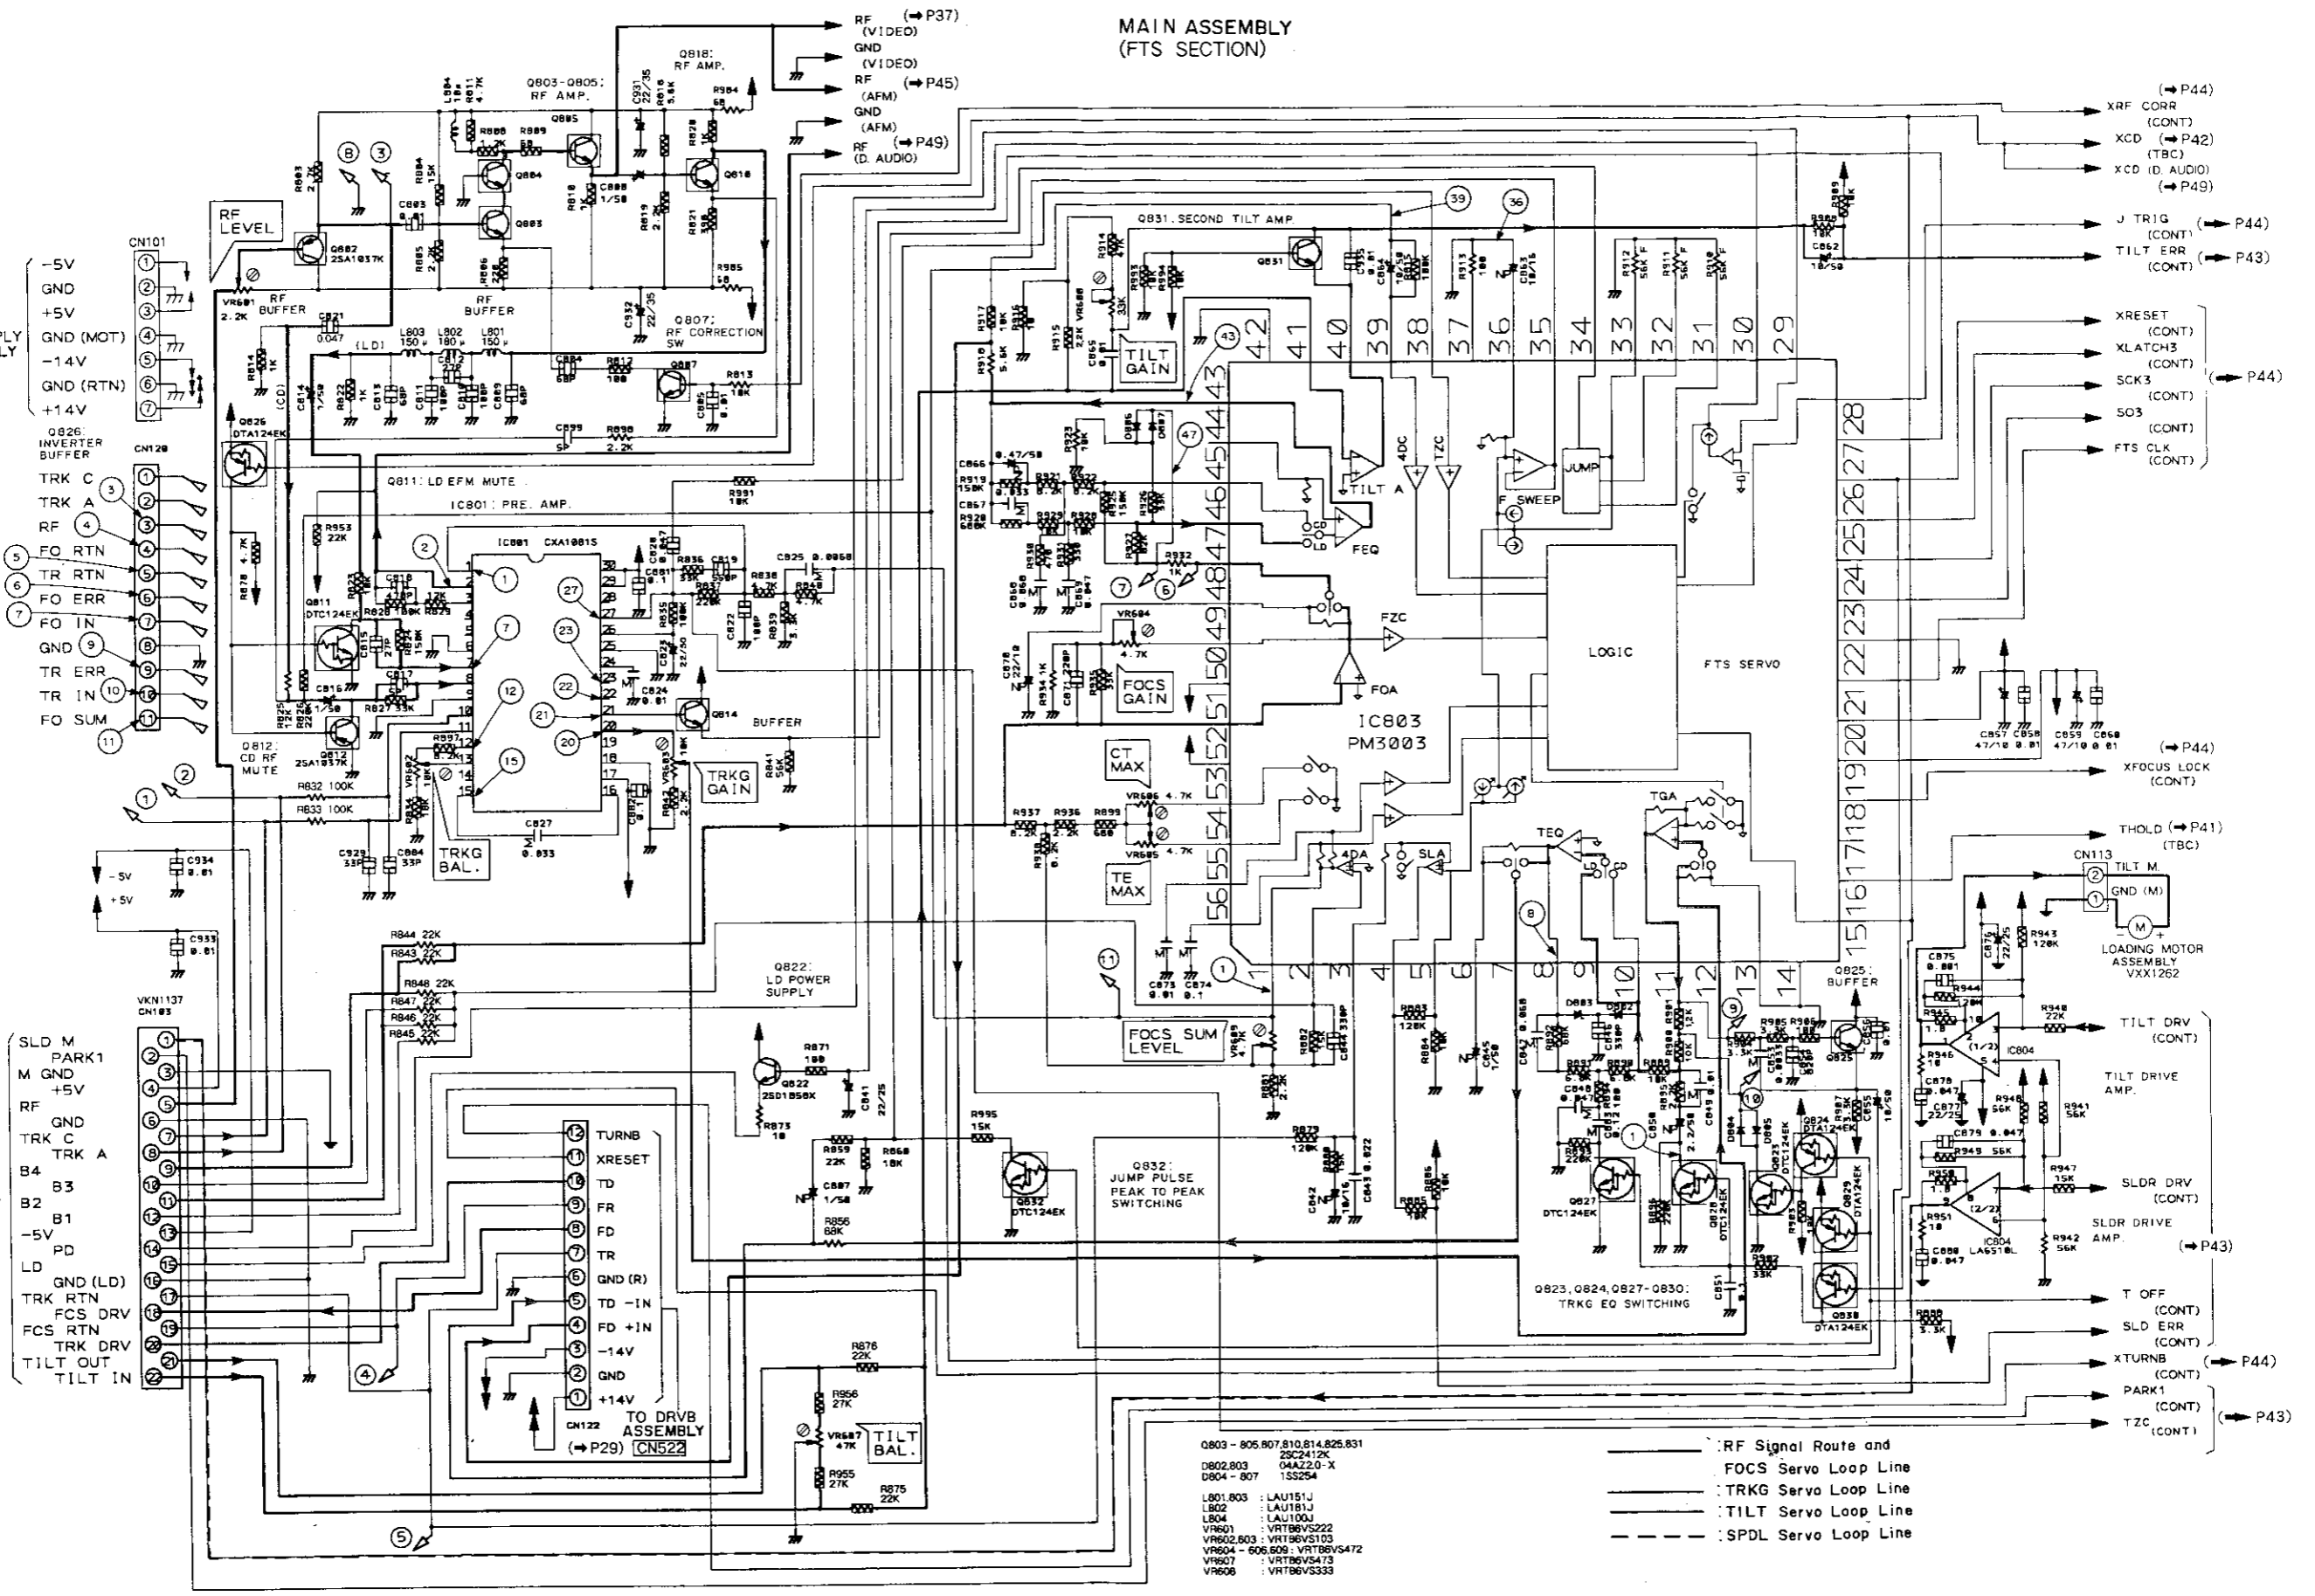

(P44)  
XRF CORR (CONT)  
XCD (P42) (TBC)  
XCD (D. AUDIO) (P49)  
J TRIG (CONT) (P44)  
TILT ERR (CONT) (P43)

XRESET (CONT)  
XLATCH3 (CONT)  
SCK3 (CONT) (P44)  
SOS (CONT)  
FTS CLK (CONT)

TO ASS. CNE  
TO ASS. CNE  
TO ASS. CNE

TO ASS. CNE  
TO ASS. CNE  
TO ASS. CNE

TO ASS. CNE  
TO ASS. CNE  
TO ASS. CNE

TO ASS. CNE  
TO ASS. CNE  
TO ASS. CNE


LOADING MOTOR  
T OFF (CONT)  
SLD ERR (CONT)  
XTURNB (CONT) (P44)  
PARK1 (CONT)  
T ZC (CONT) (P43)

- Q803 - 805, 807, 810, 814, 825, 831
- D802, 803 : 04AZ2.0-X
- D804 - 807 : 1SS254
- L801, 803 : LAU151J
- L802 : LAU181J
- L804 : LAU100J
- VR601 : VRT86VS222
- VR602, 603 : VRT86VS103
- VR604 - 606, 609 : VRT86VS472
- VR607 : VRT86VS473
- VR608 : VRT86VS333

- RF Signal Route and
- FOCUS Servo Loop Line
- TRKG Servo Loop Line
- TILT Servo Loop Line
- - - SPDL Servo Loop Line


View from component side

- (→ P44)
- XRF CORR (CONT)
- XCD (→ P42) (TBC)
- XCD (D AUDIO) (→ P49)
- J TRIG (CONT) (→ P44)
- TILT ERR (CONT) (→ P43)
- XRESET (CONT)
- XLATCH3 (CONT)
- SCK3 (CONT) (→ P44)
- SOS (CONT)
- FTS CLK (CONT)
- XFOCUS LOCK (CONT) (→ P44)
- THOLD (→ P41) (TBC)
- TILT M GND (M)
- LOADING MOTOR ASSEMBLY VXX1262
- TILT DRV (CONT)
- TILT DRIVE AMP.
- SLDR DRV (CONT)
- SLDR DRIVE AMP. (→ P43)
- T OFF (CONT)
- SLD ERR (CONT)
- XTURNB (CONT) (→ P44)
- PARK1 (CONT)
- TZC (CONT) (→ P43)

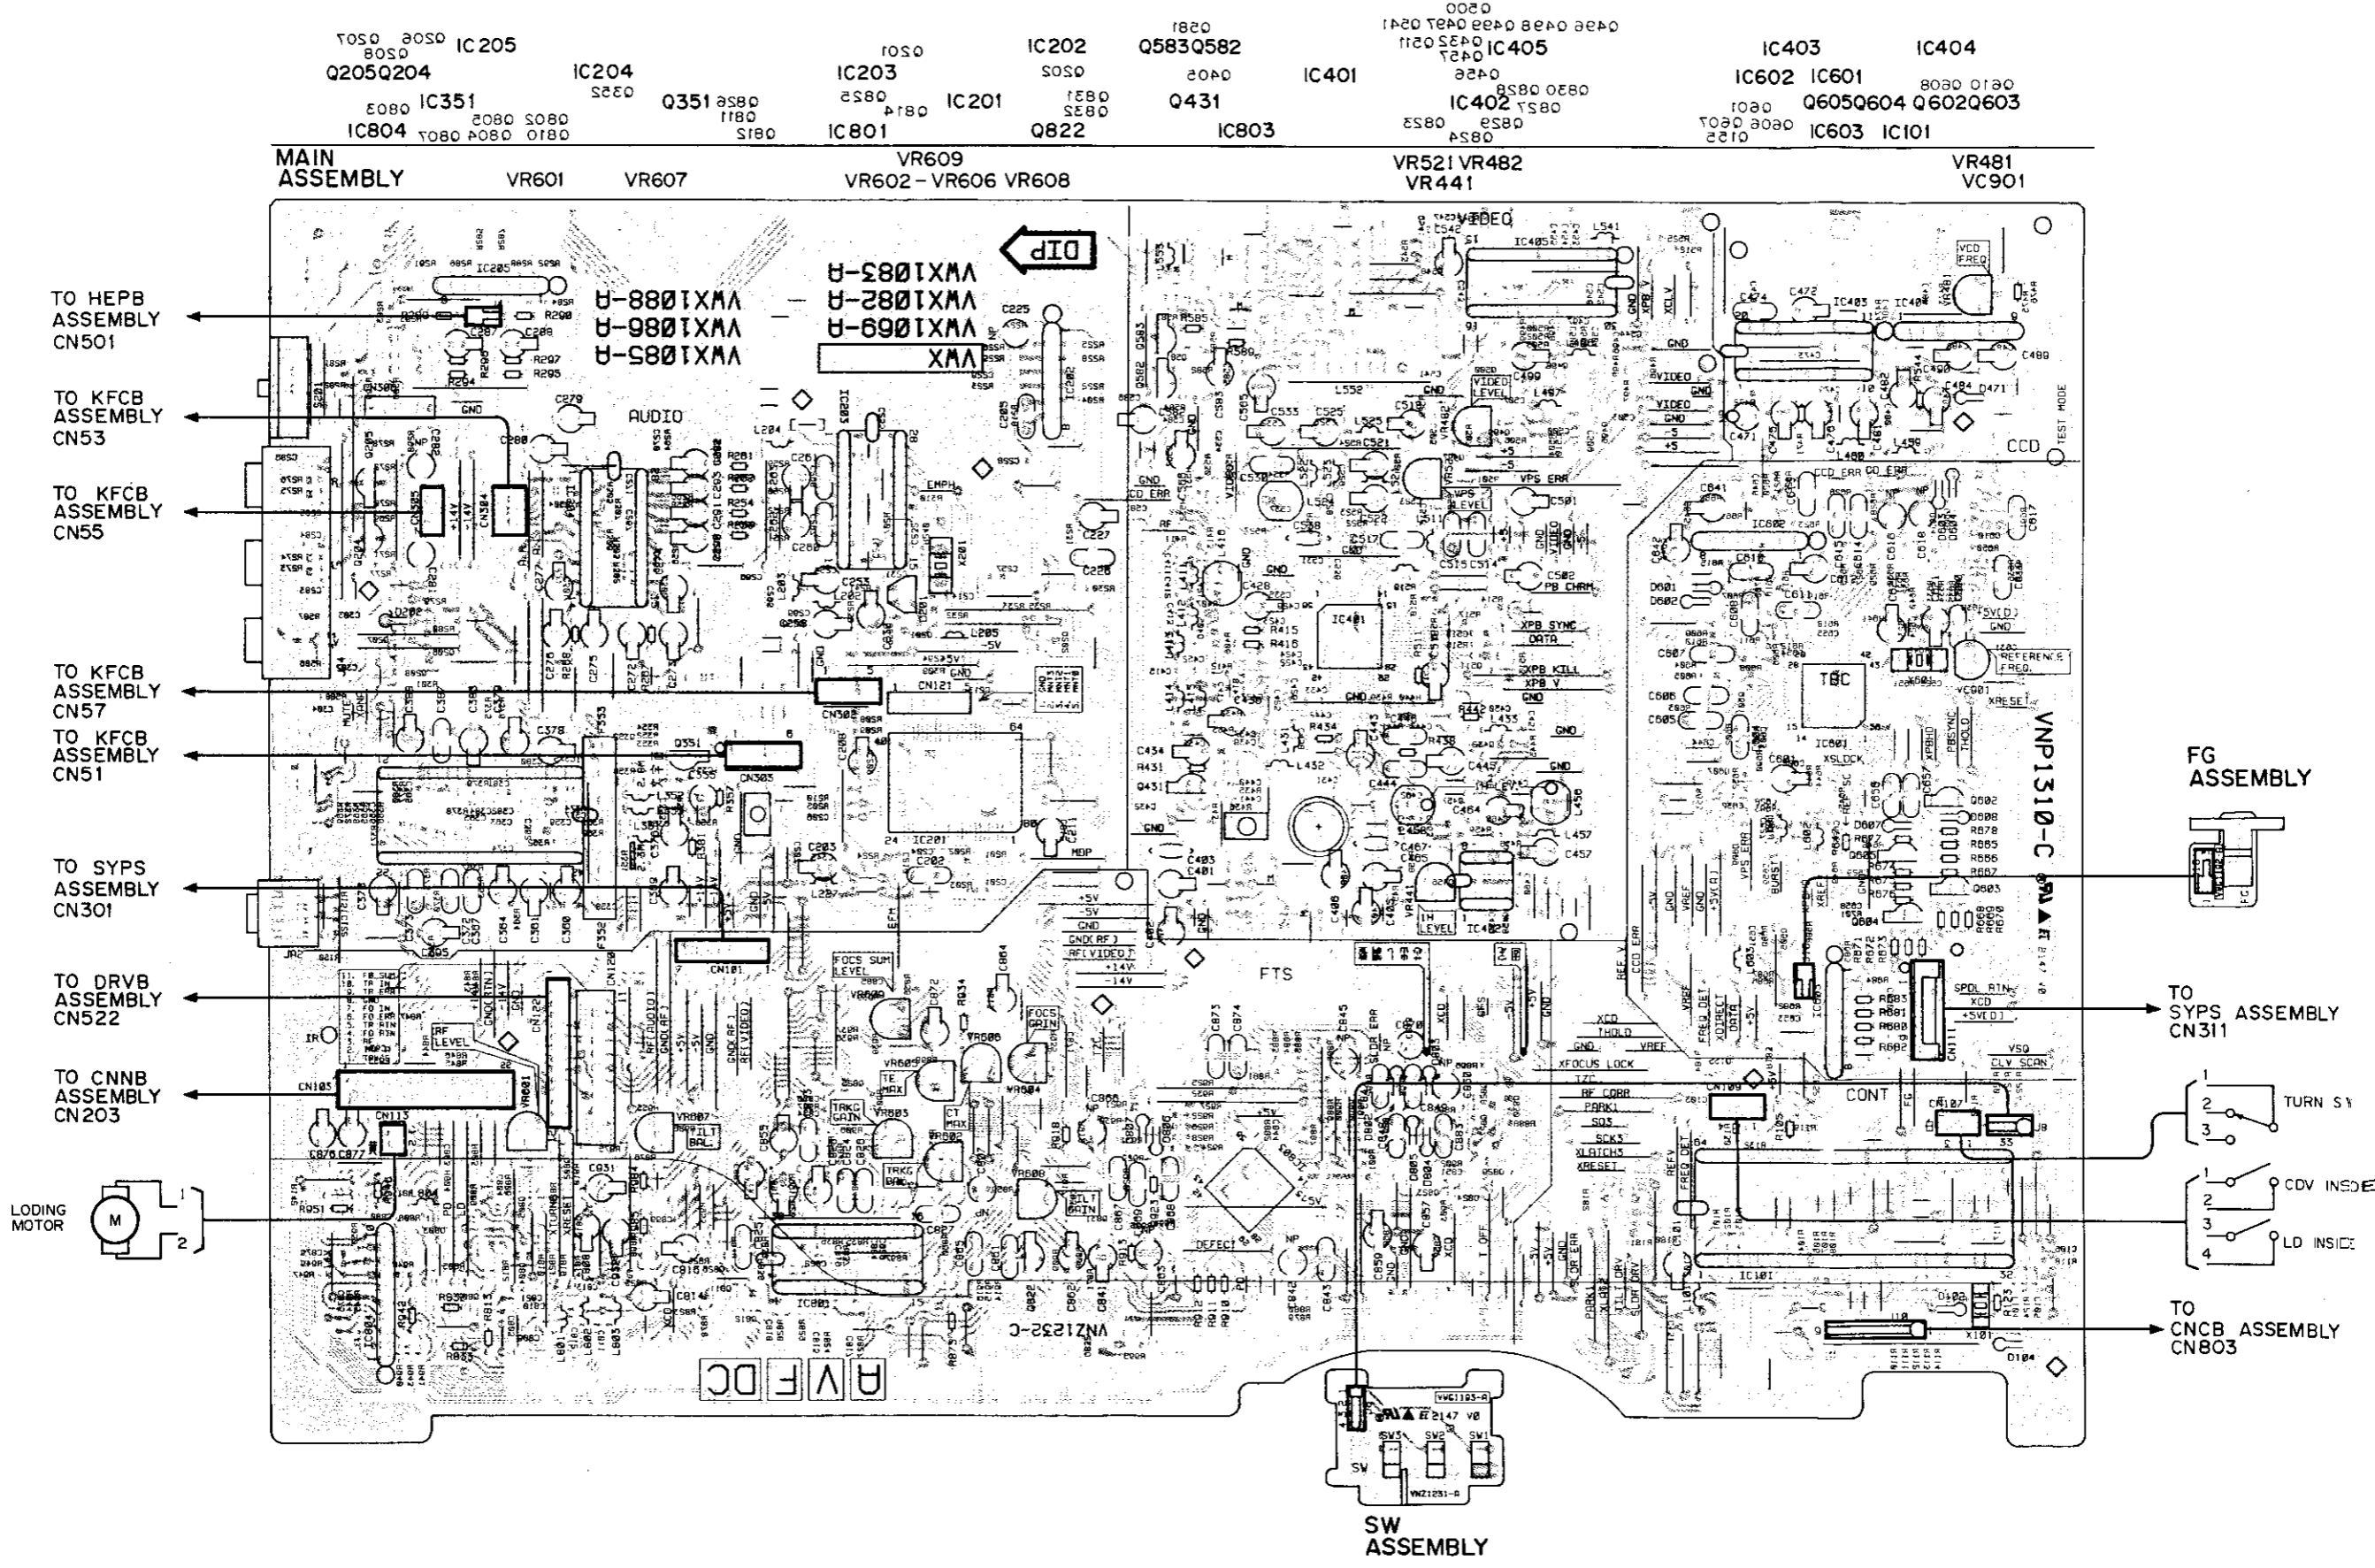


A  
B  
C  
D

● View from component side

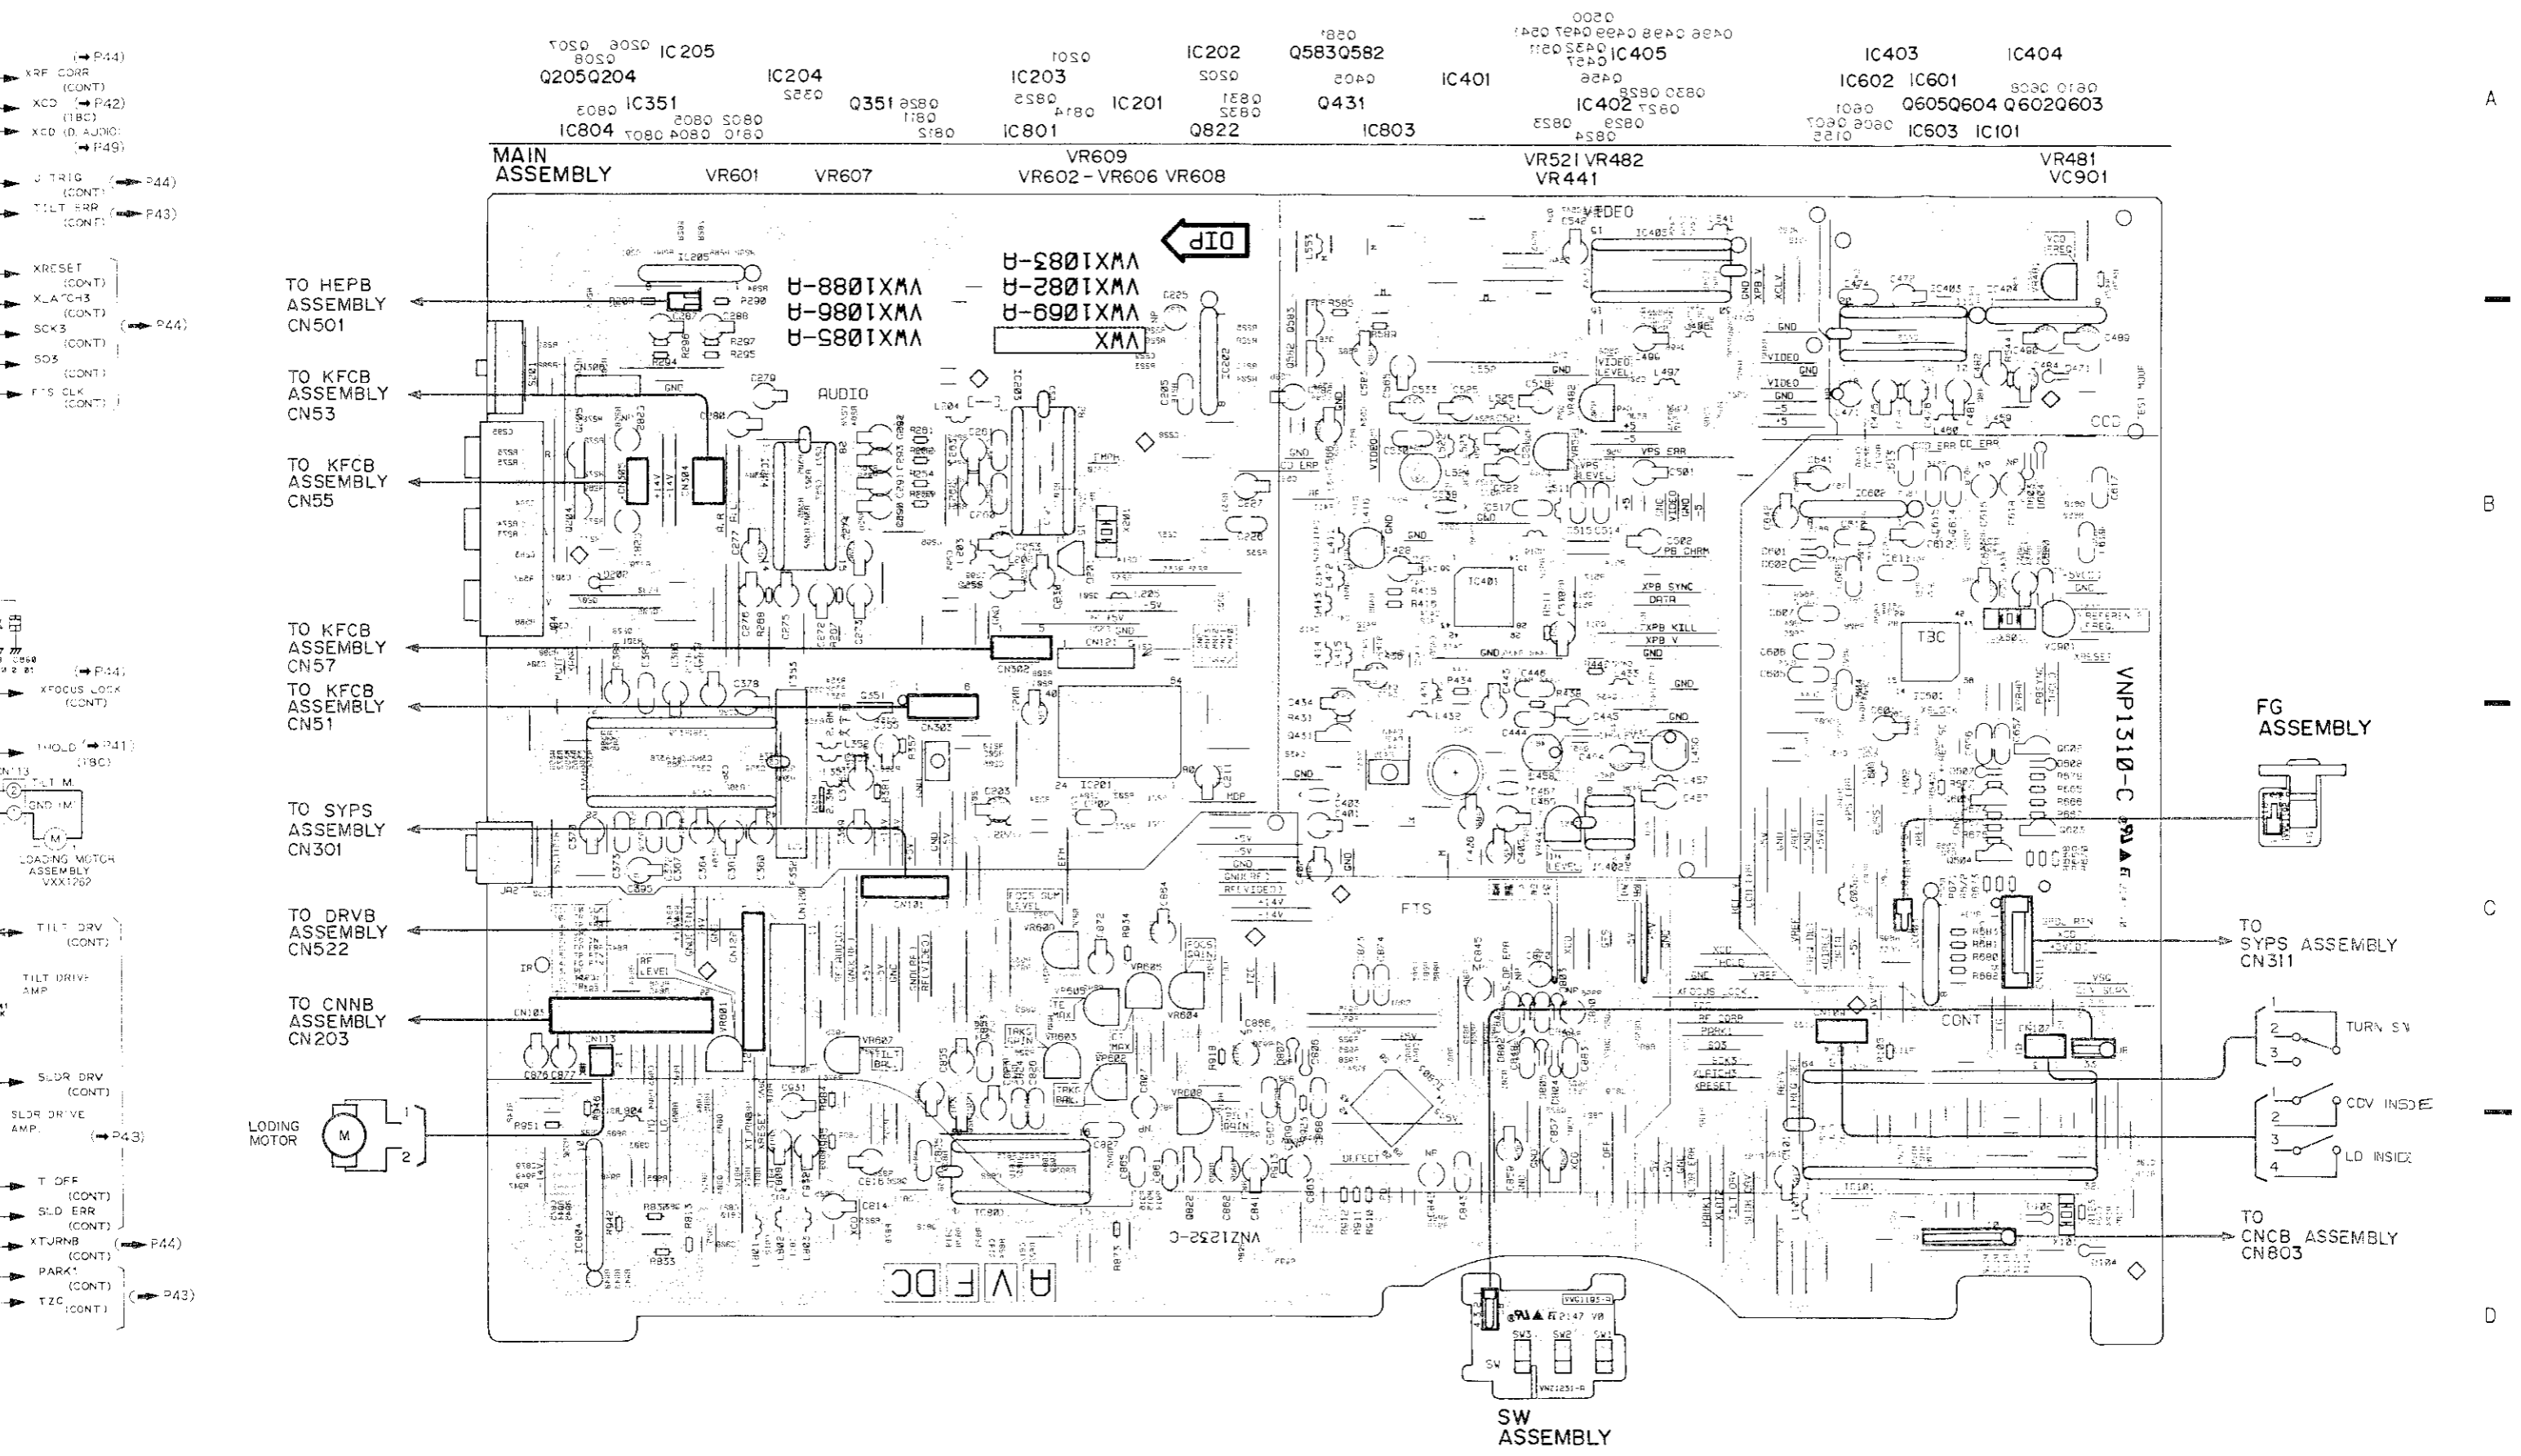




View from soldering side

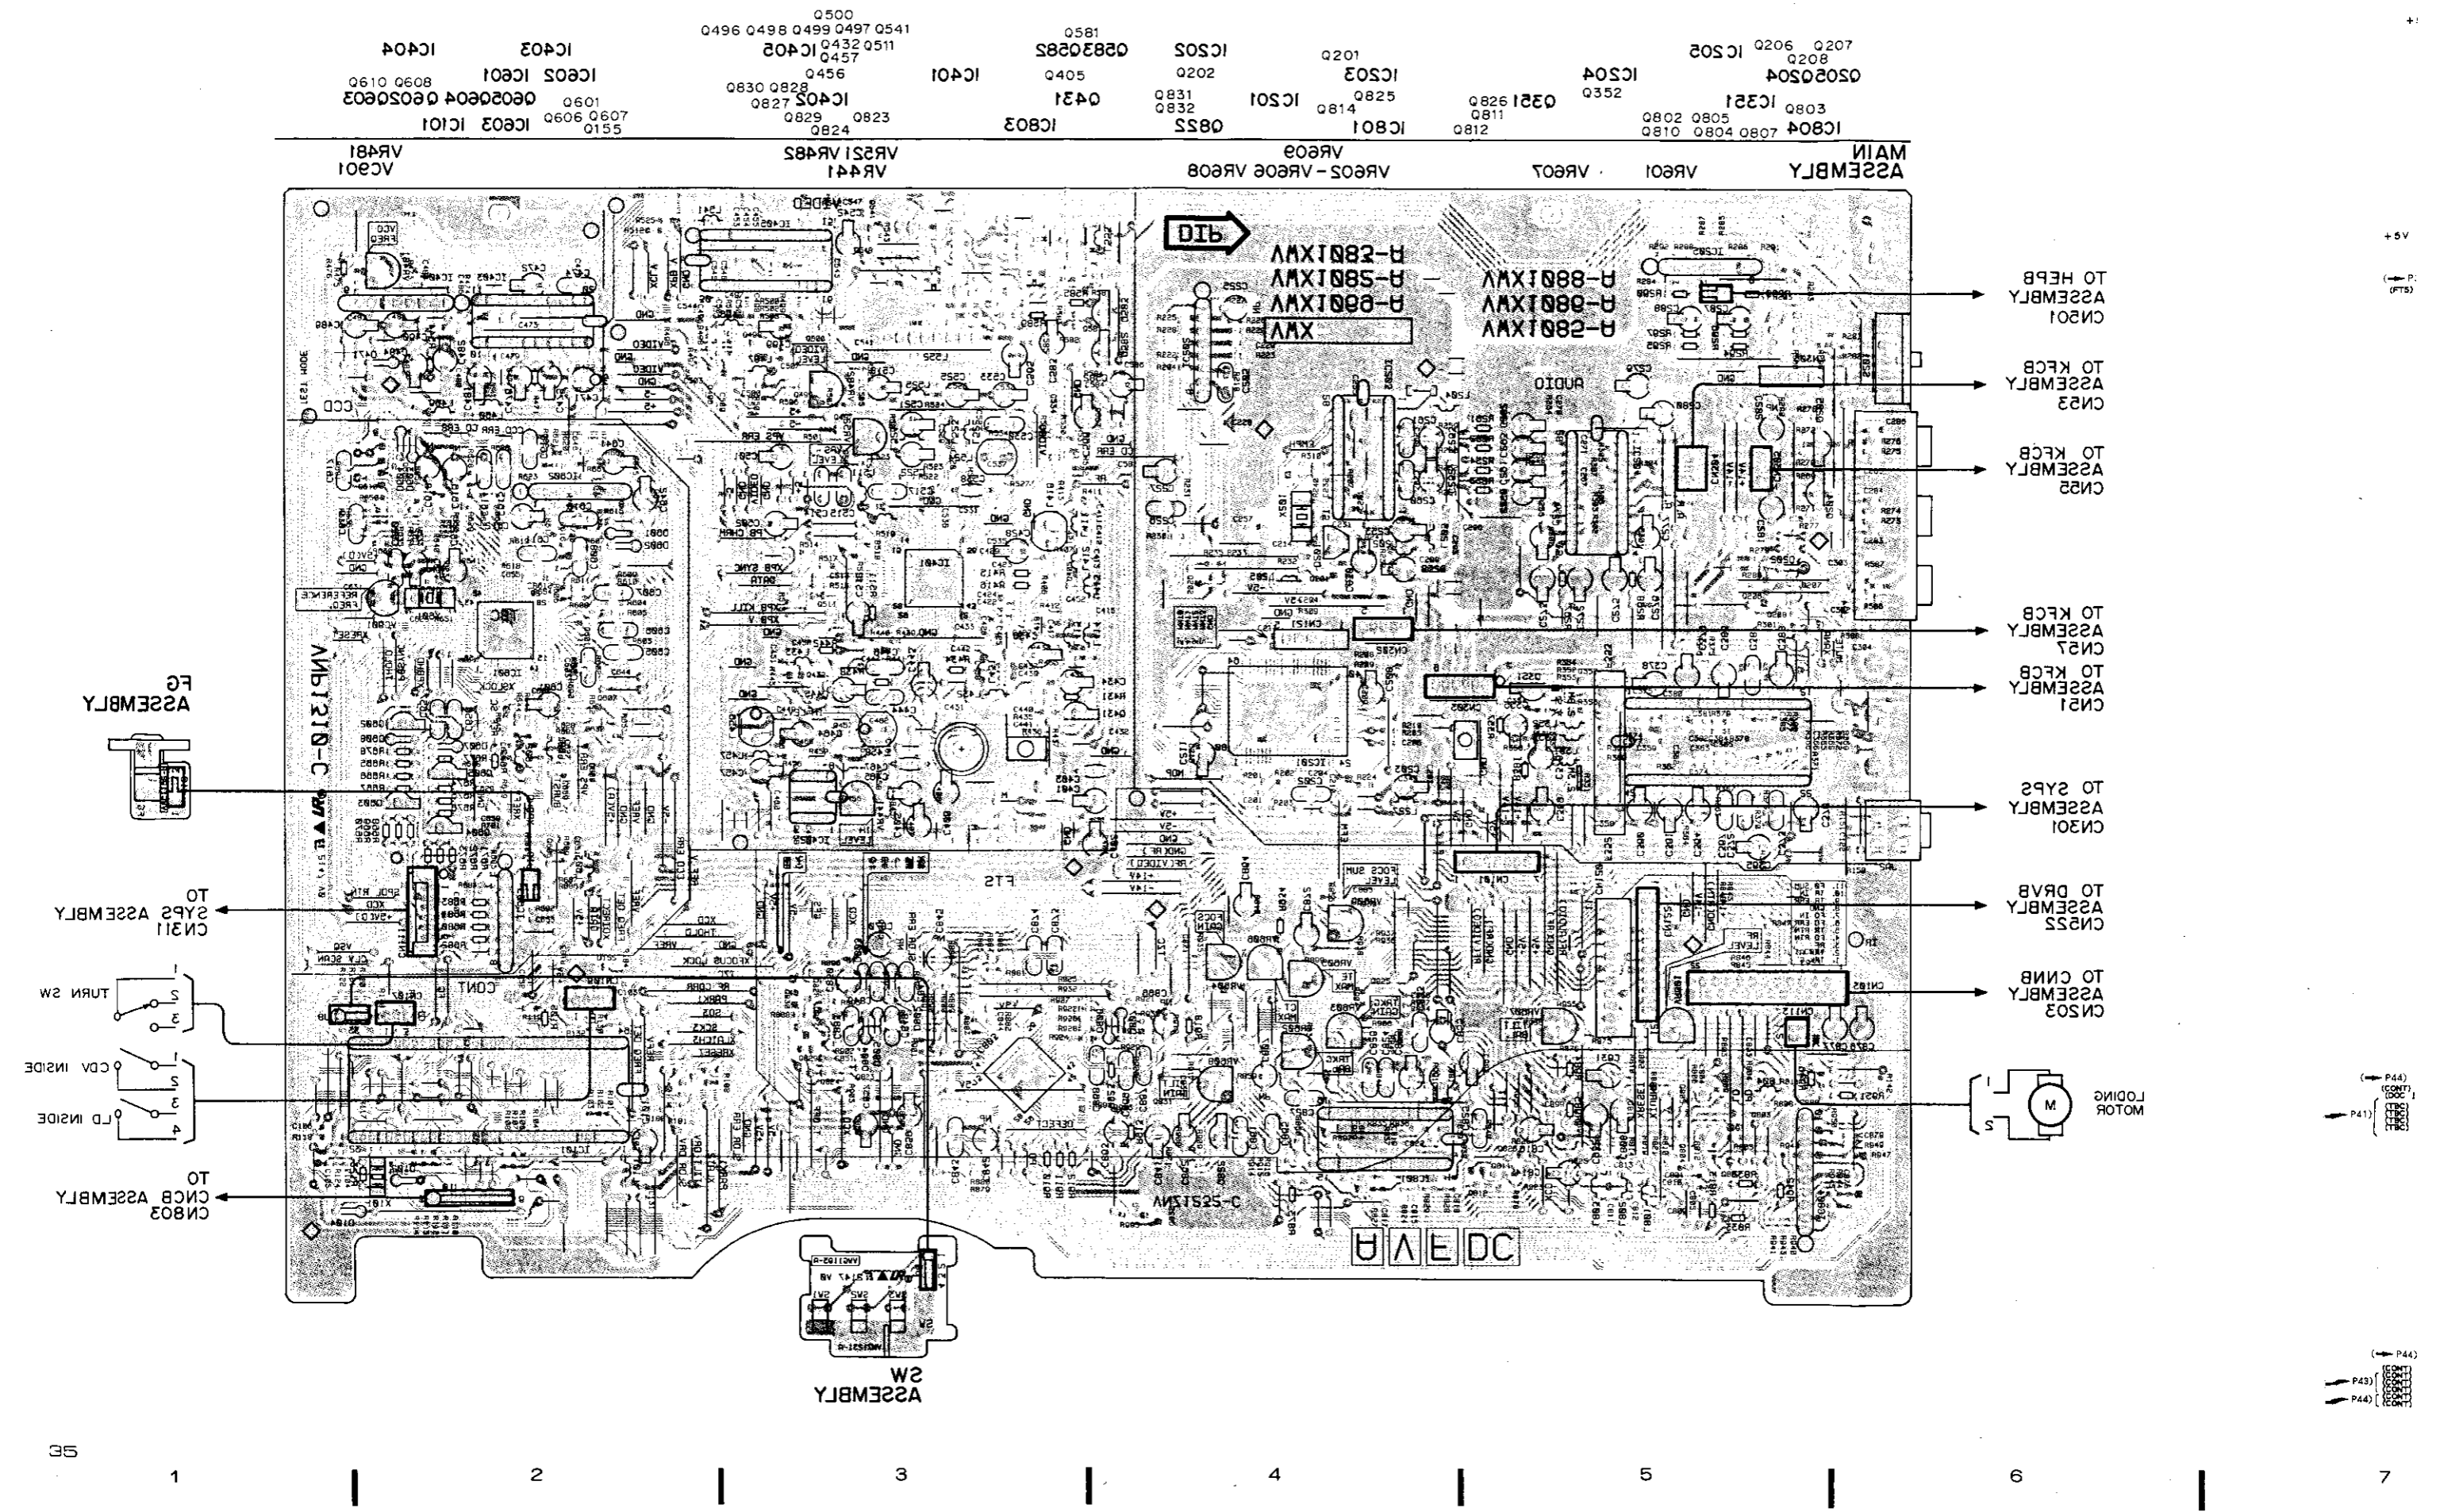


View from soldering side

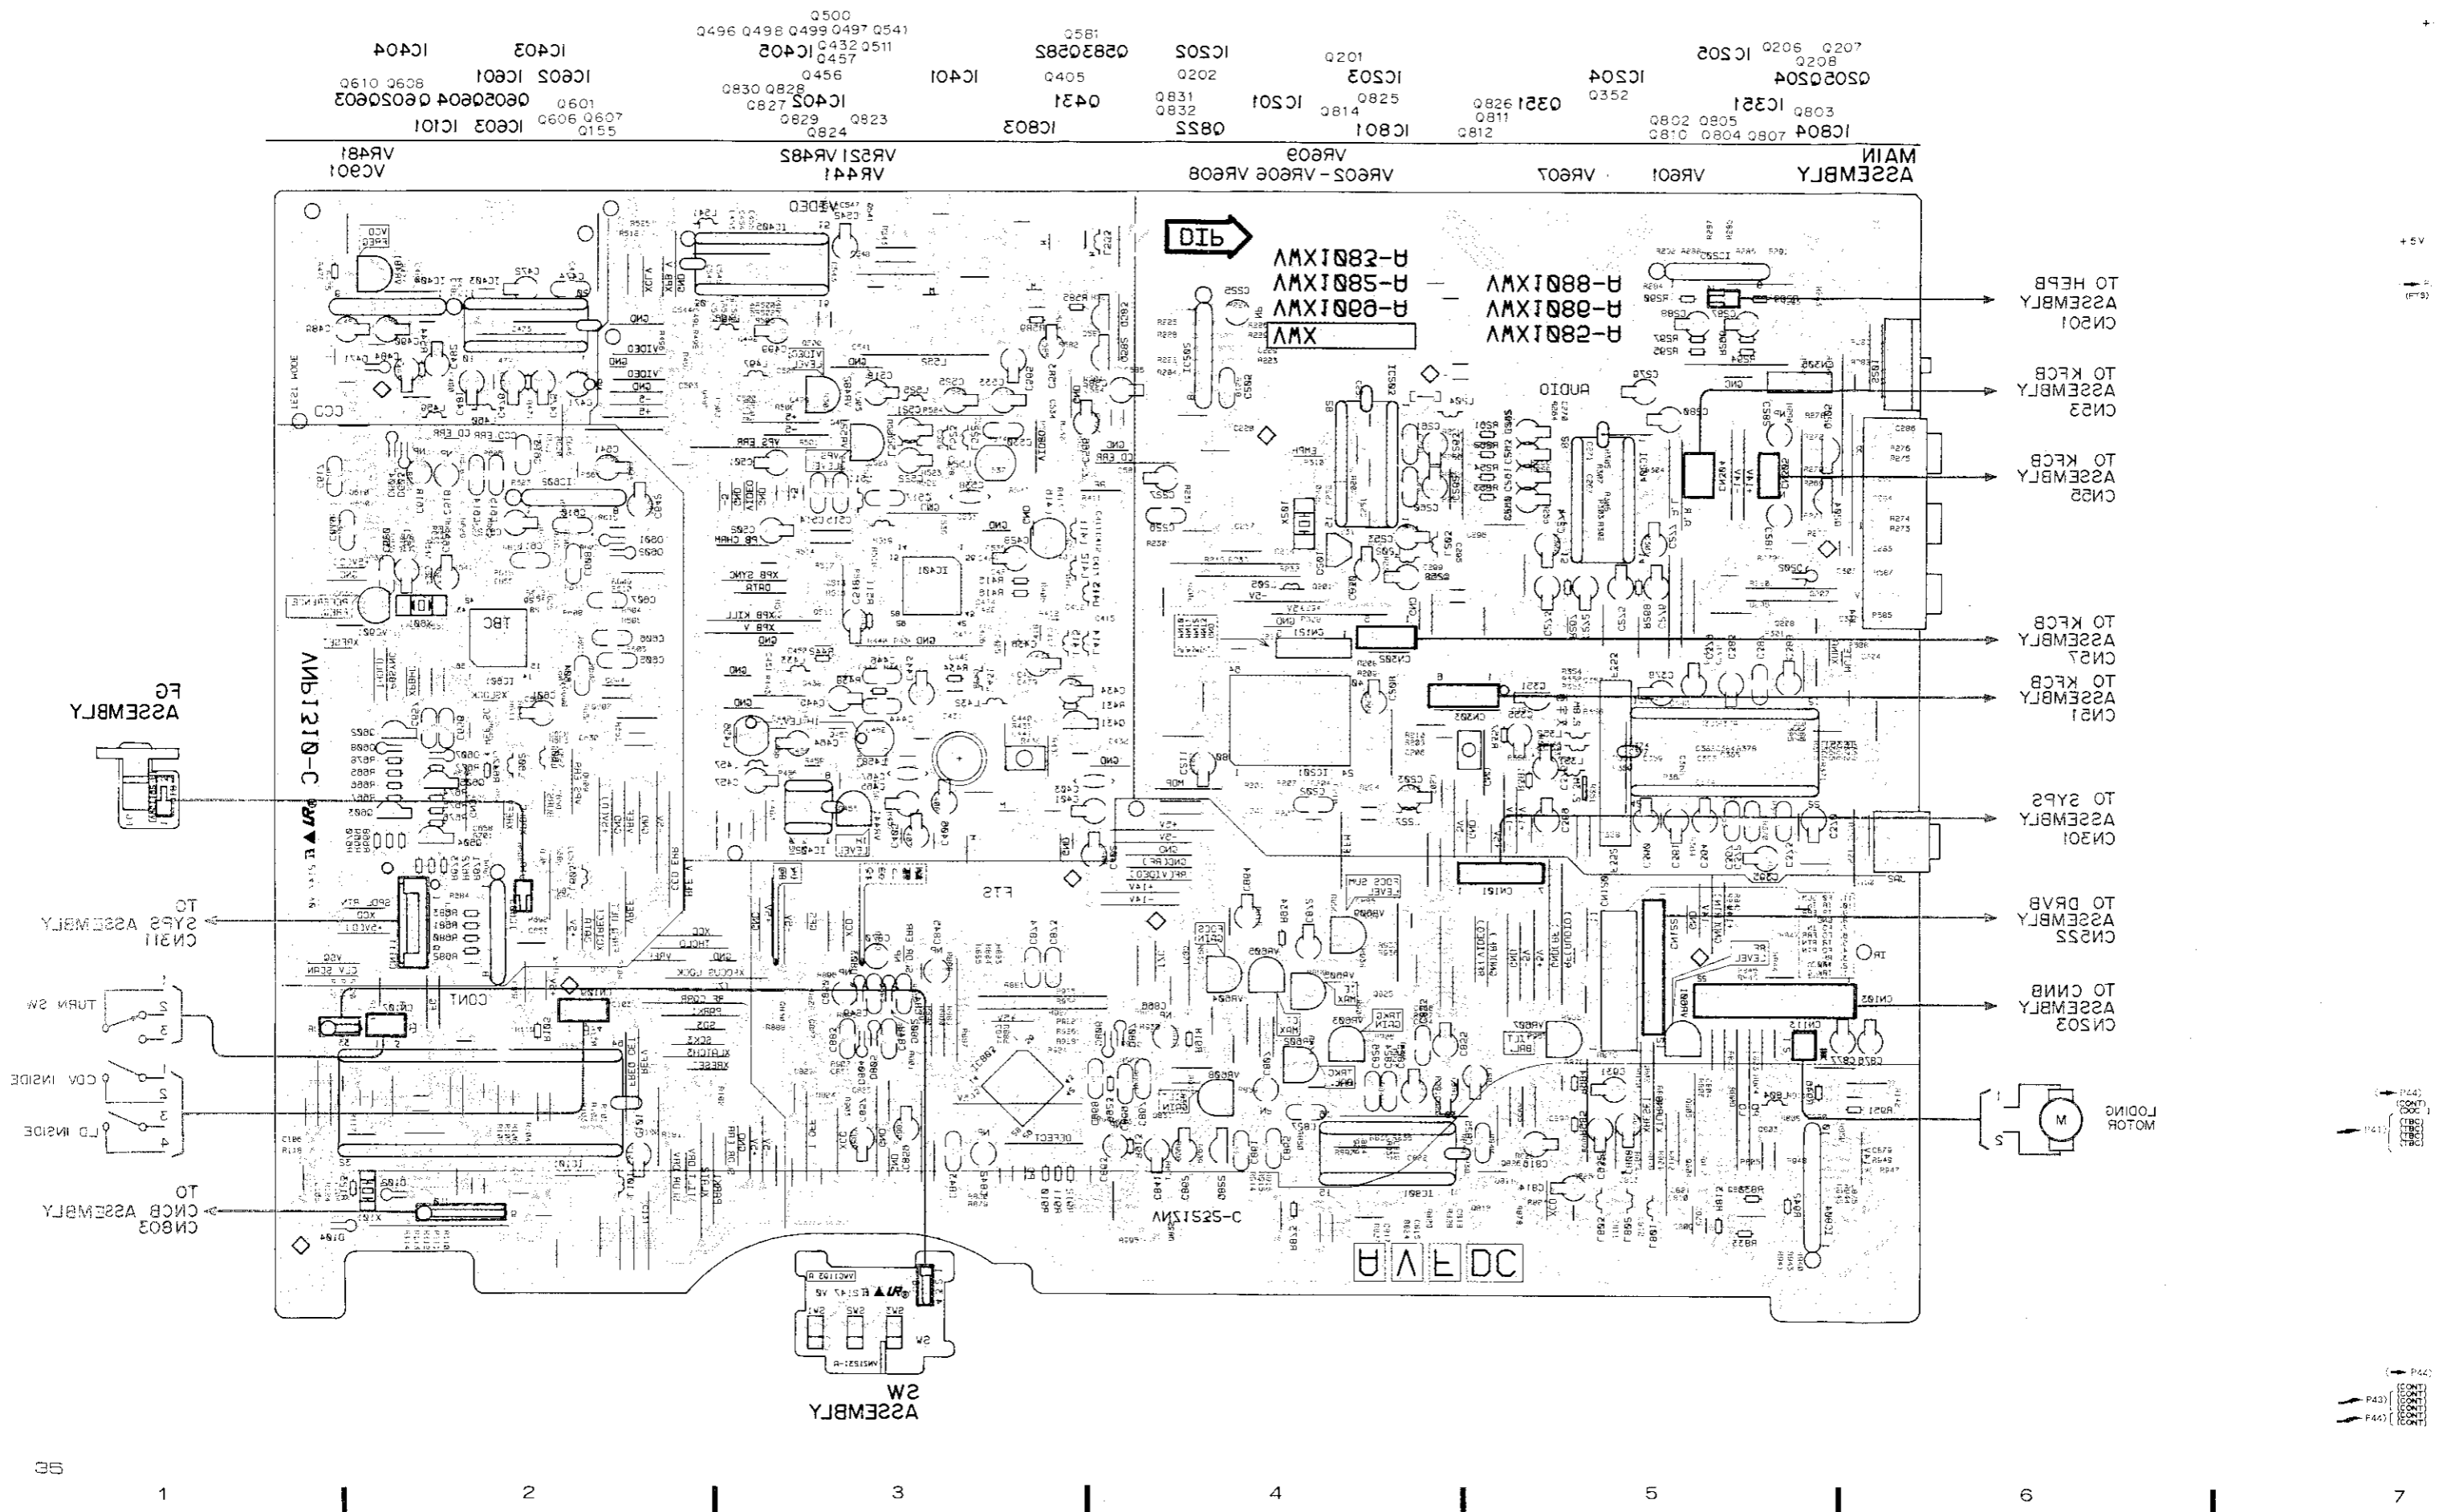

4.6 MAIN ASSEMBLY (VIDEO SECTION)

MAIN ASSEMBLY  
(VIDEO SECTION)

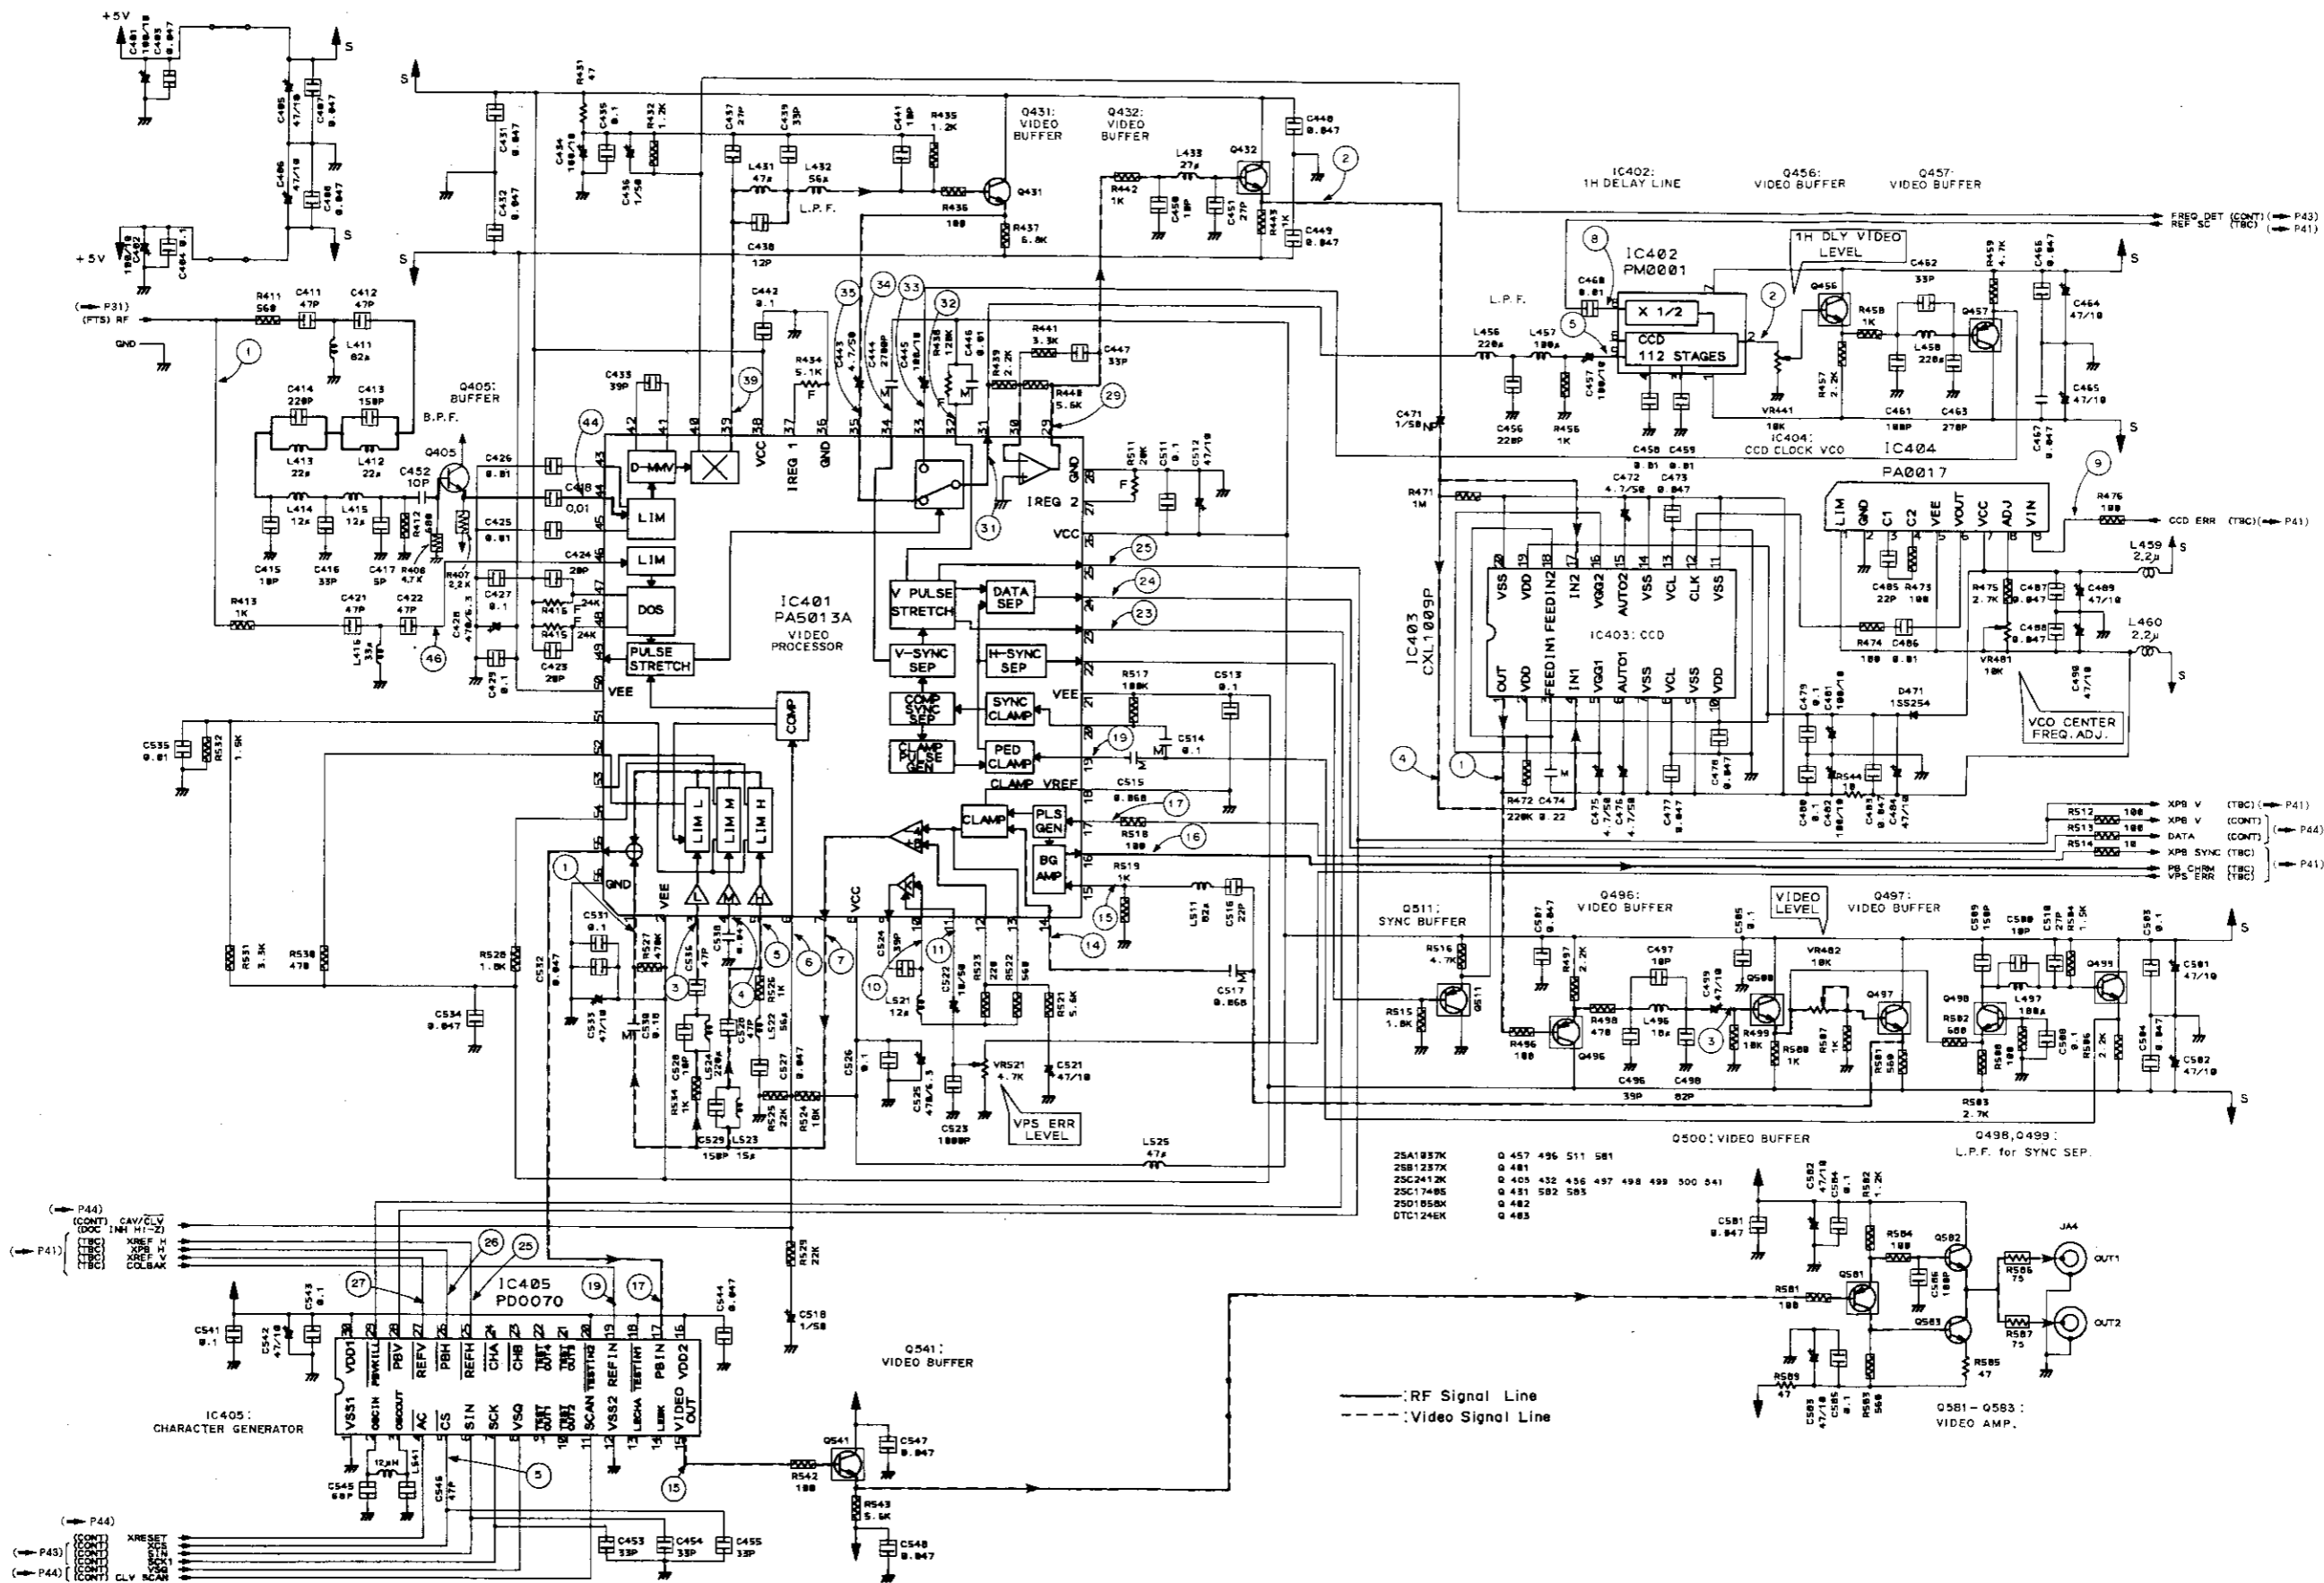

A

B


C

D


WAVEFORMS OF THE VIDEO SECTION

IC401 (PA5013A)

IC404 (PA0017)

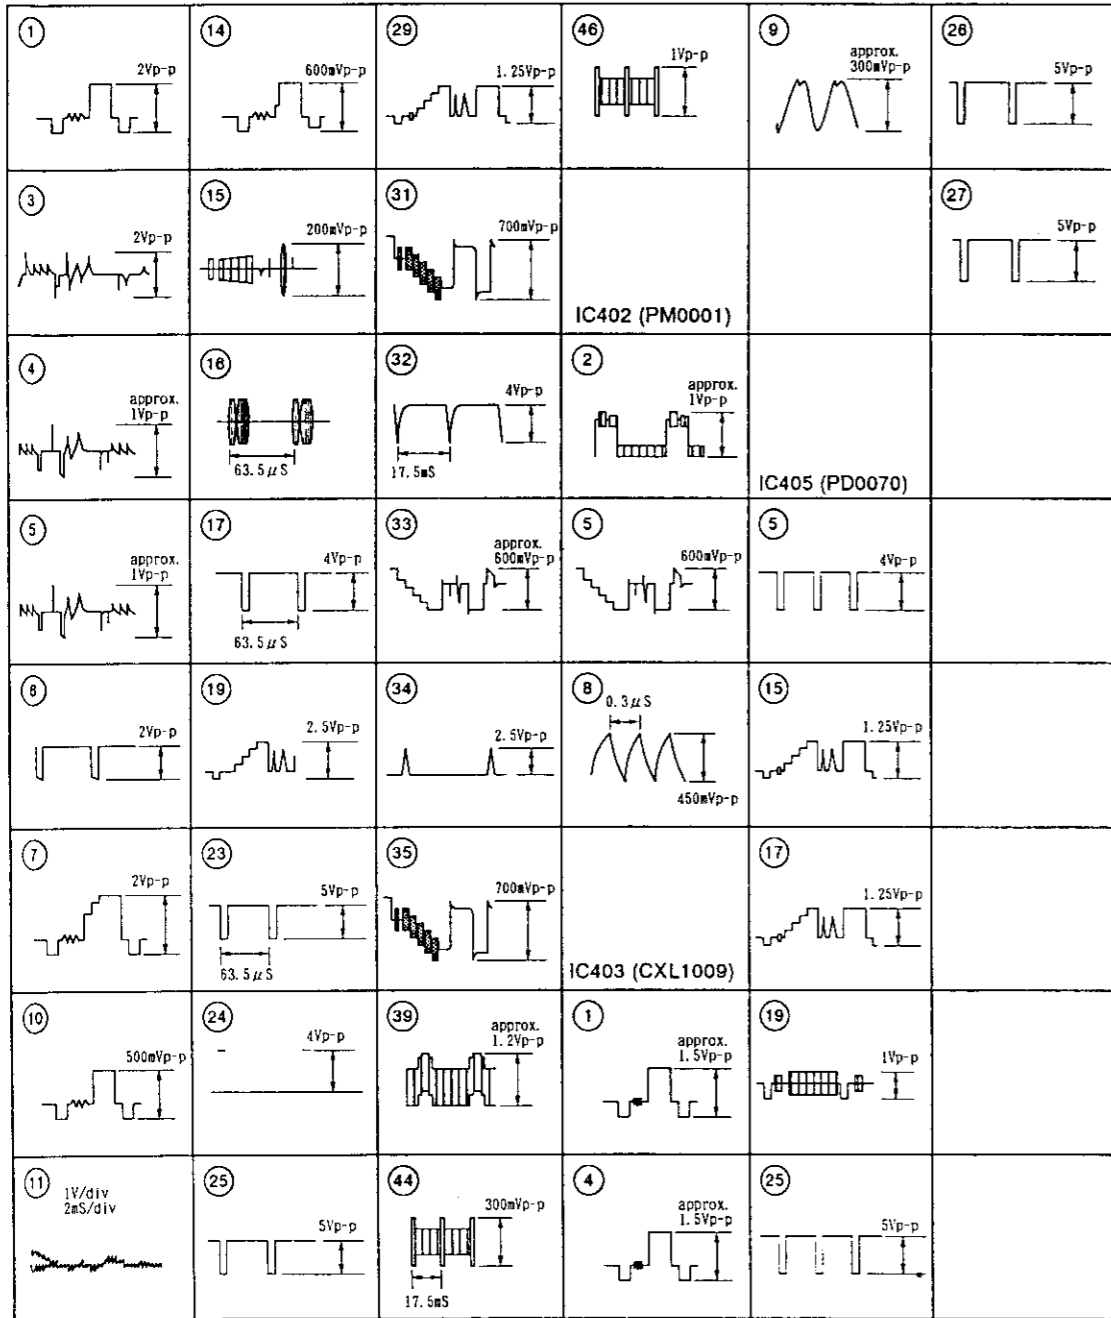


4.7 MAIN ASSEMBLY (TBC SECTION) AND FG ASSEMBLY

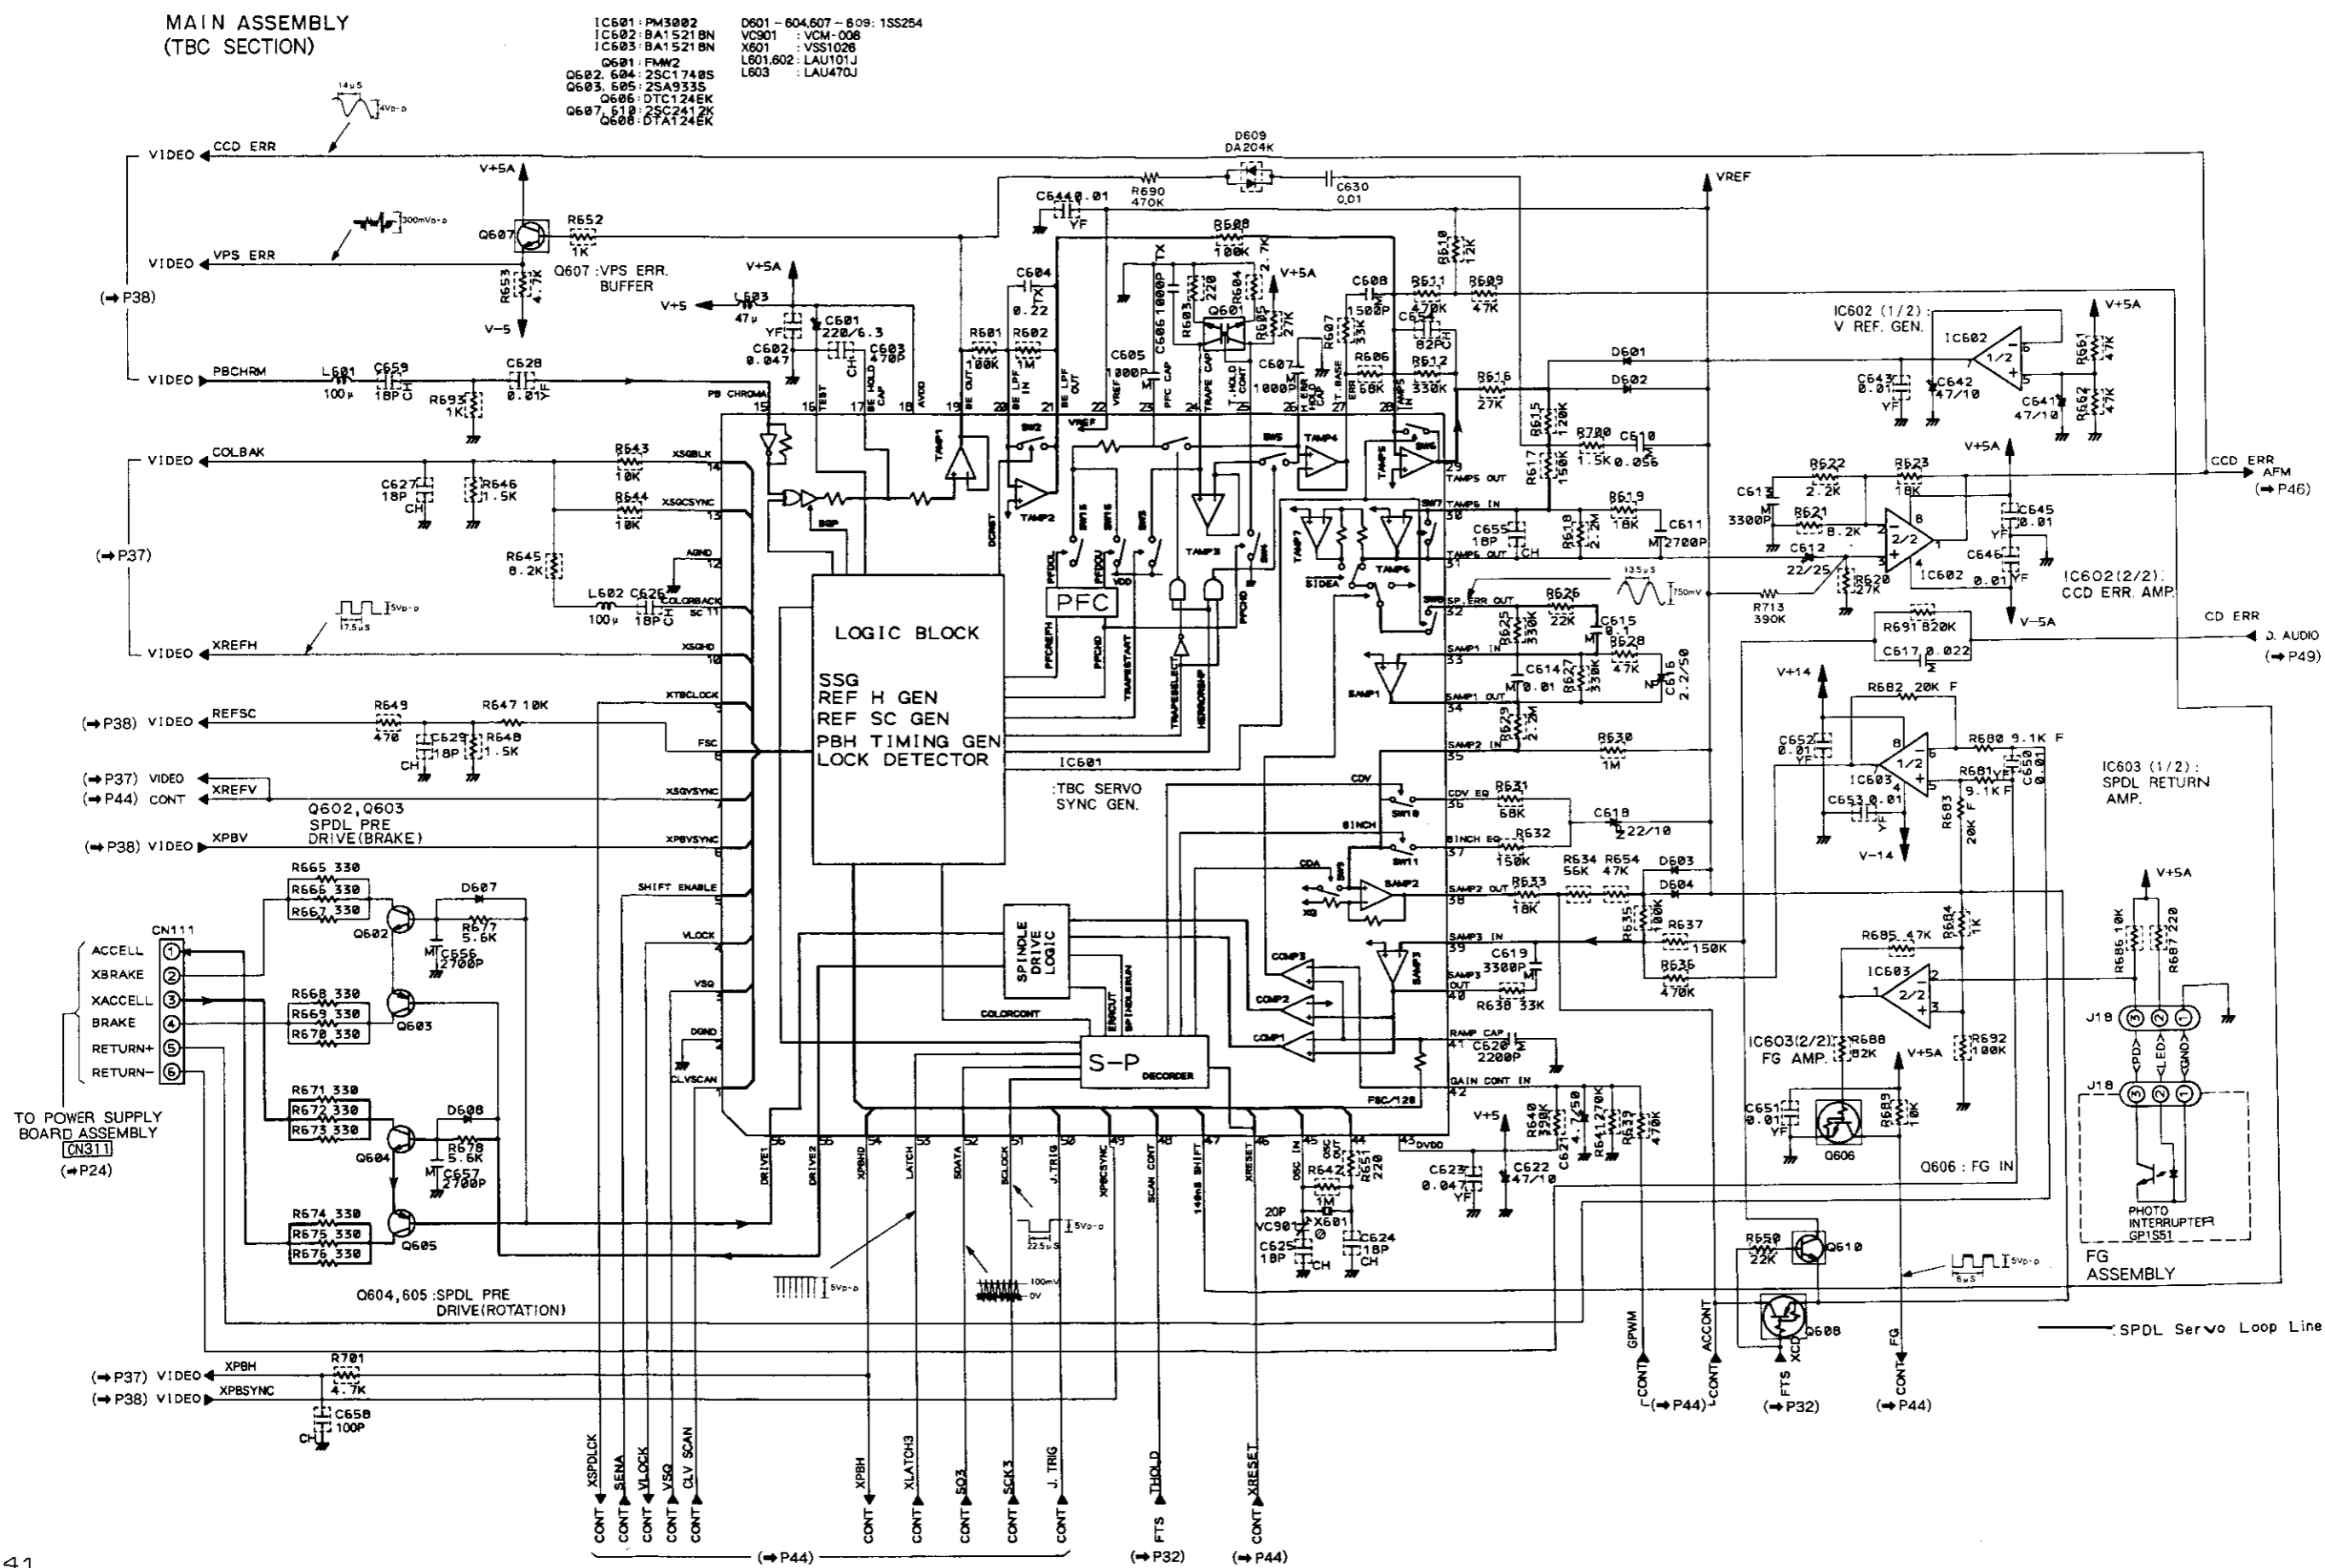


A  
B  
C  
D

4.8 MAIN ASSEMBLY (CONT SECTION) AND SW ASSEMBLY

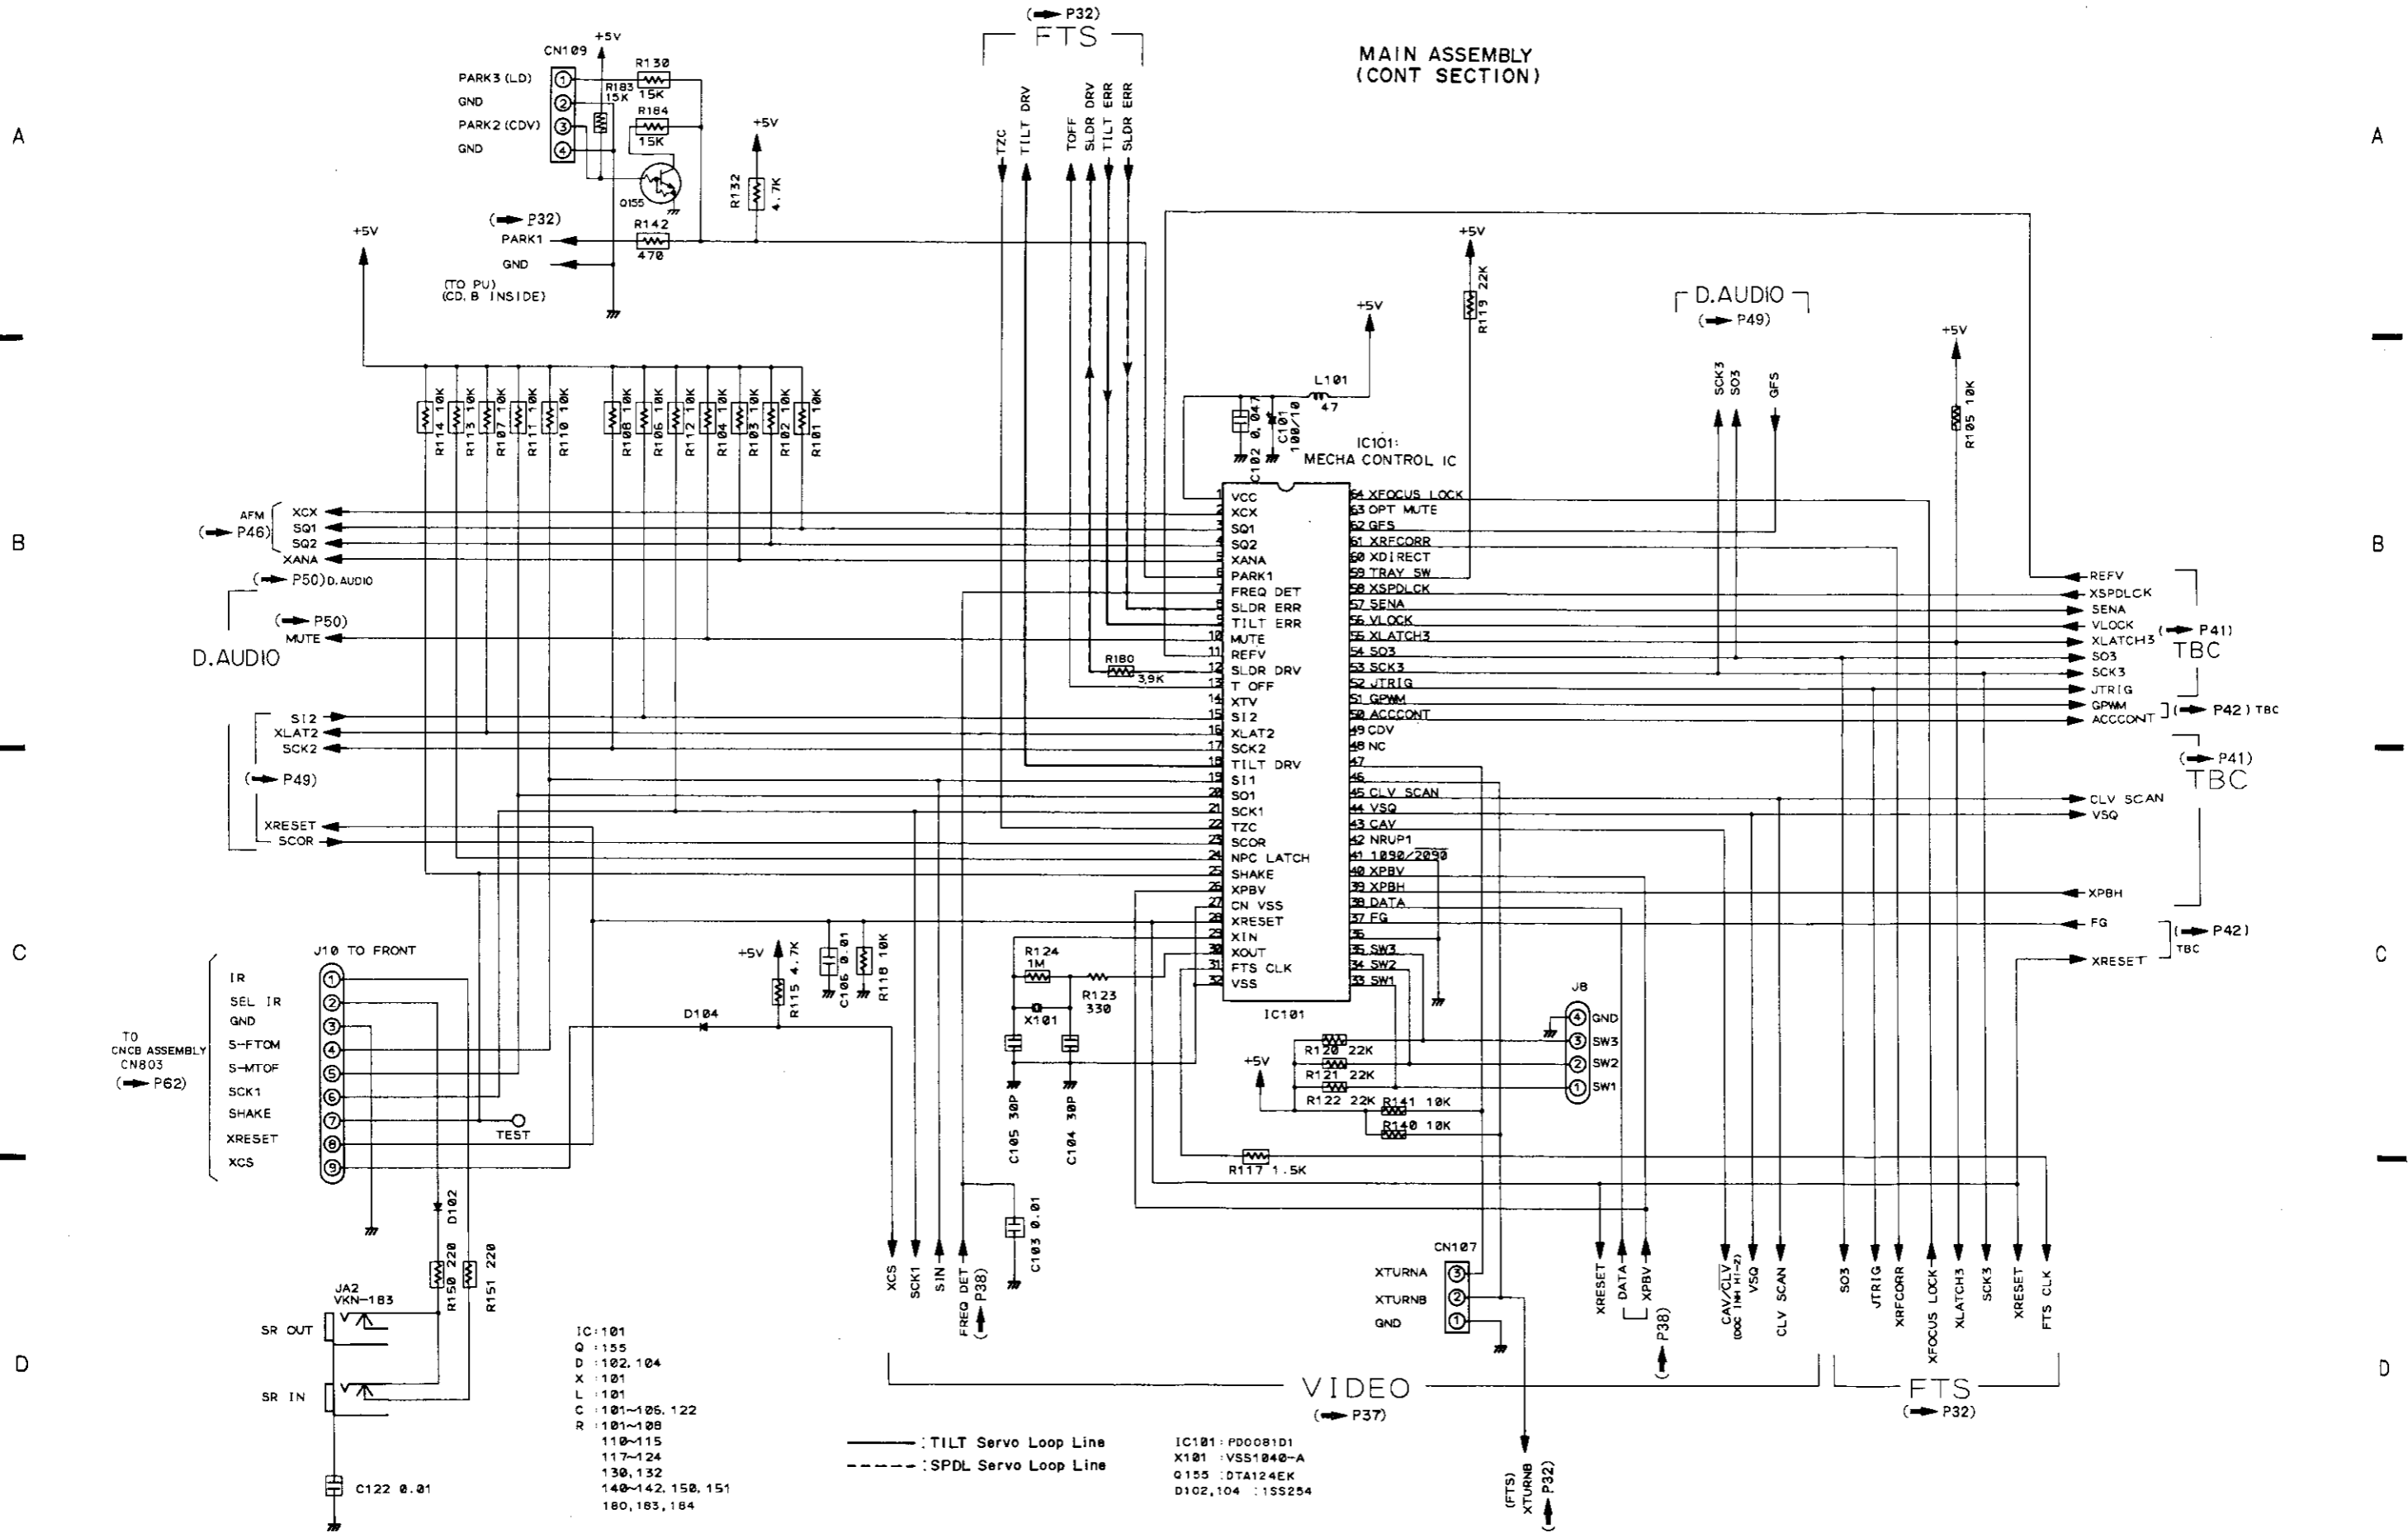

4.9 MAIN ASSEMBLY (AFM SECTION)

MAIN ASSEMBLY (AFM SECTION)

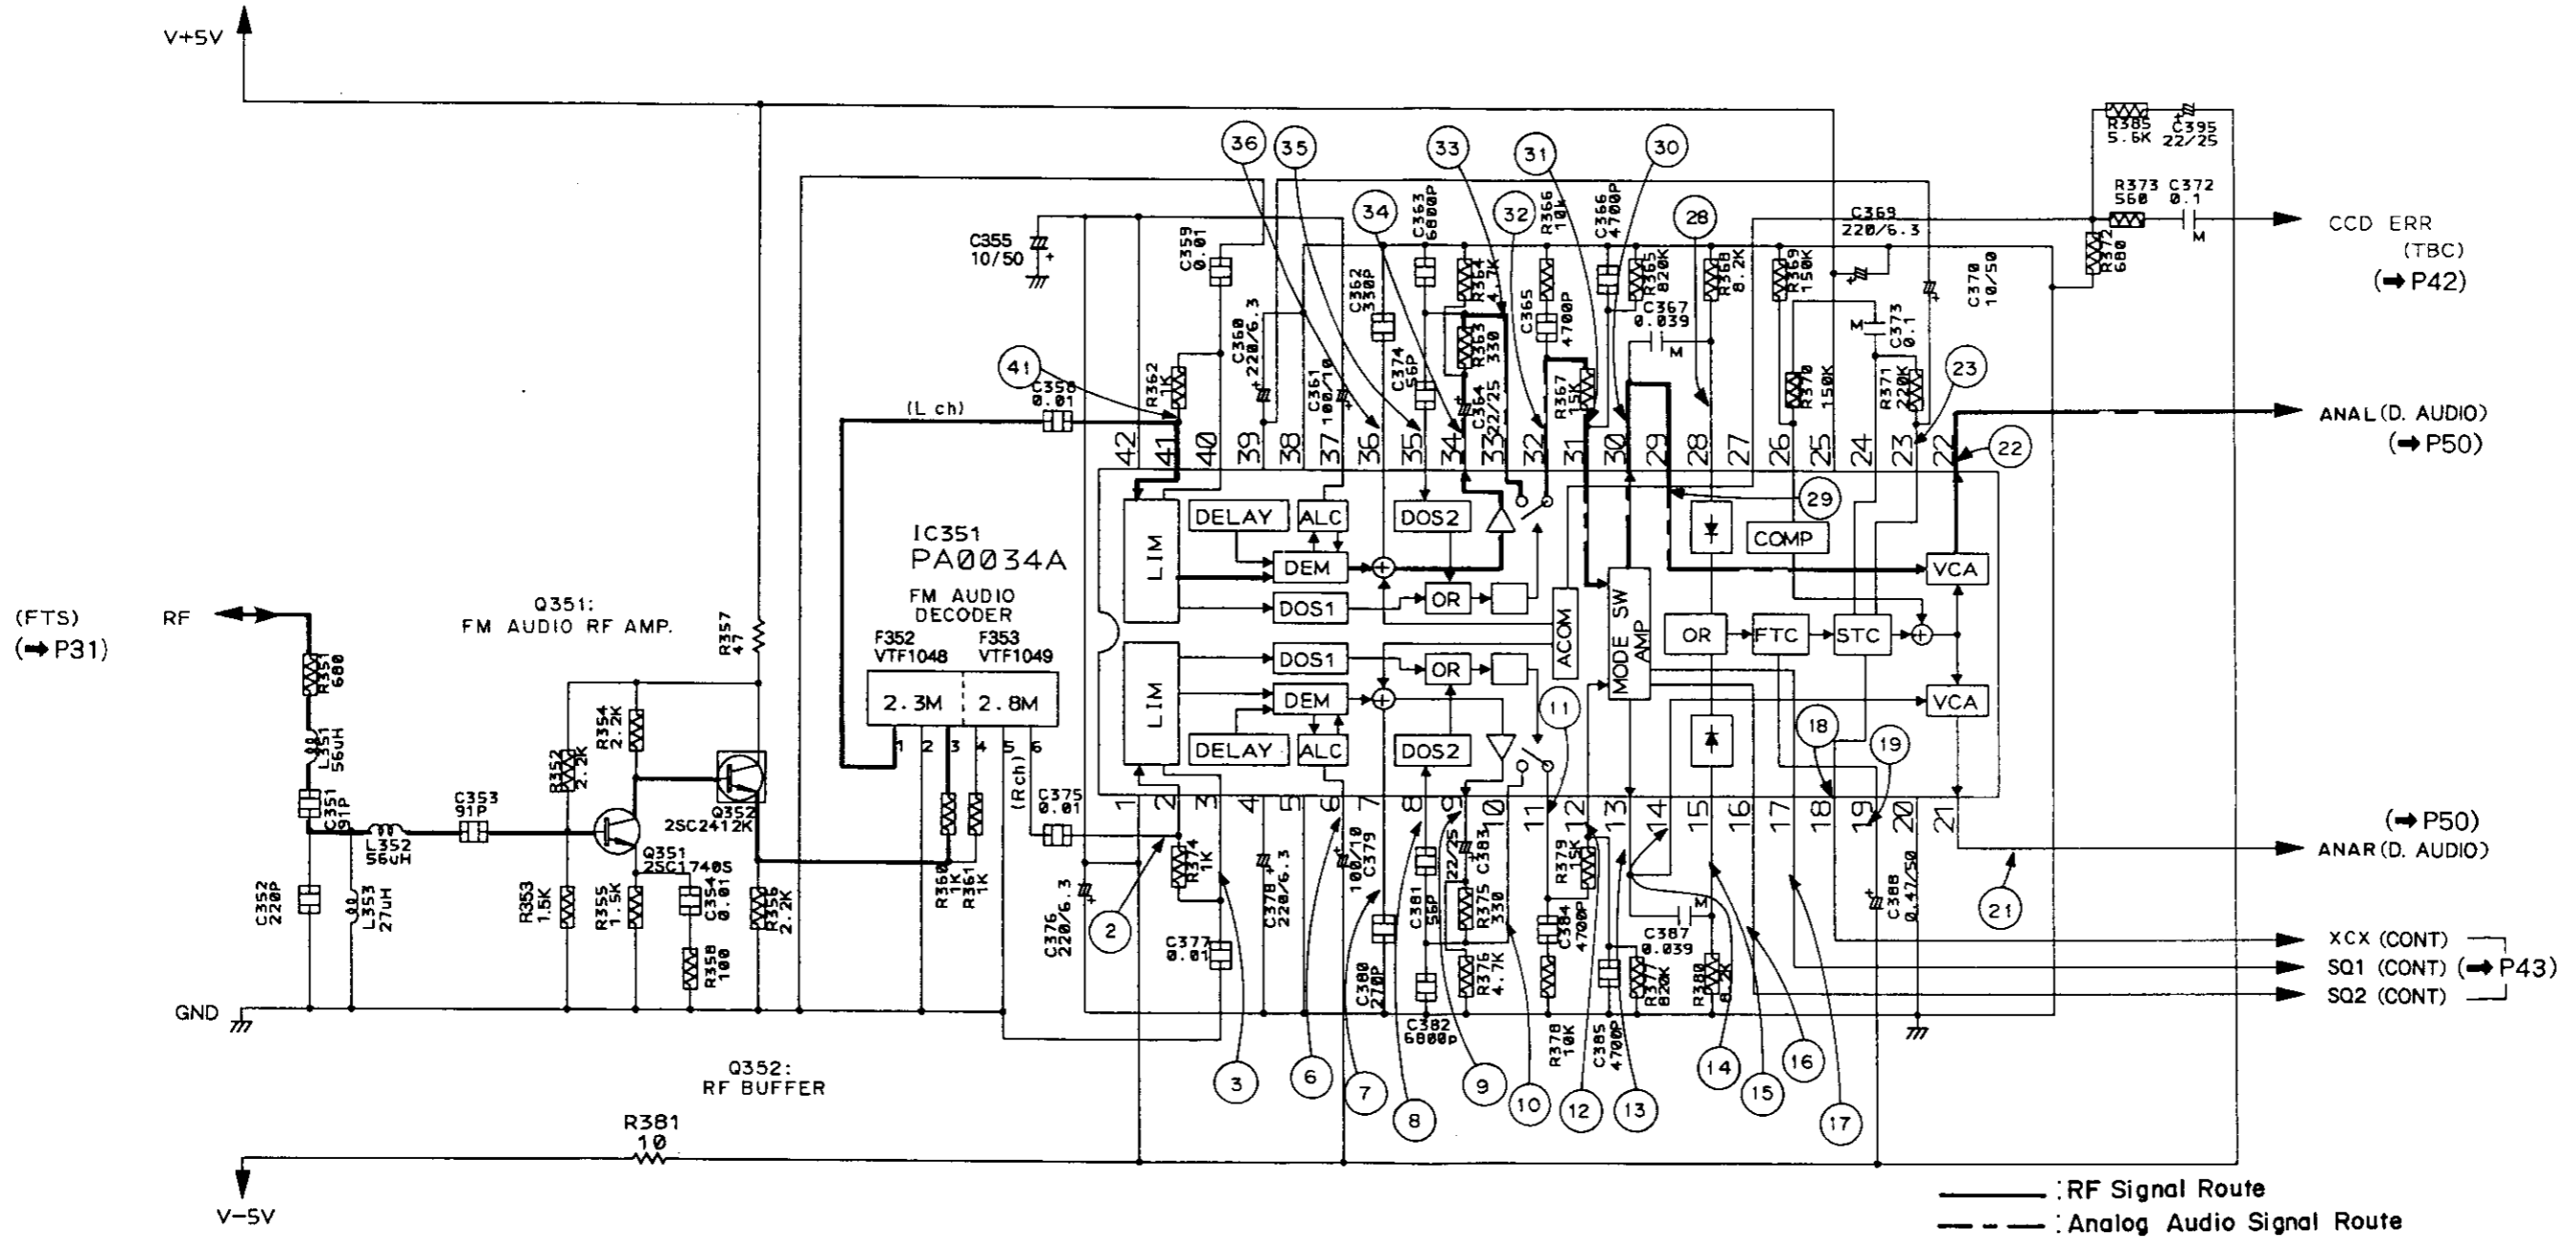


Note: Waveforms and voltages are at the PLAY state.

IC351 (PA0034A)

Pin No.	Voltage	Pin No.	Voltage	Pin No.	Voltage
1	-5V	15	*	29	*
2	*	16	*	30	*
3	*	17	*	31	*
4	—	18	*	32	*
5	—	19	*	33	*
6	*	20	0	34	*
7	*	21	*	35	*
8	*	22	*	36	*
9	*	23	*	37	—
10	*	24	0	38	—
11	*	25	5V	39	—
12	*	26	0	40	—
13	*	27	0	41	*
14	*	28	*	42	-5V

\*: Refer to Waveforms

● IC351 (PA0034A)

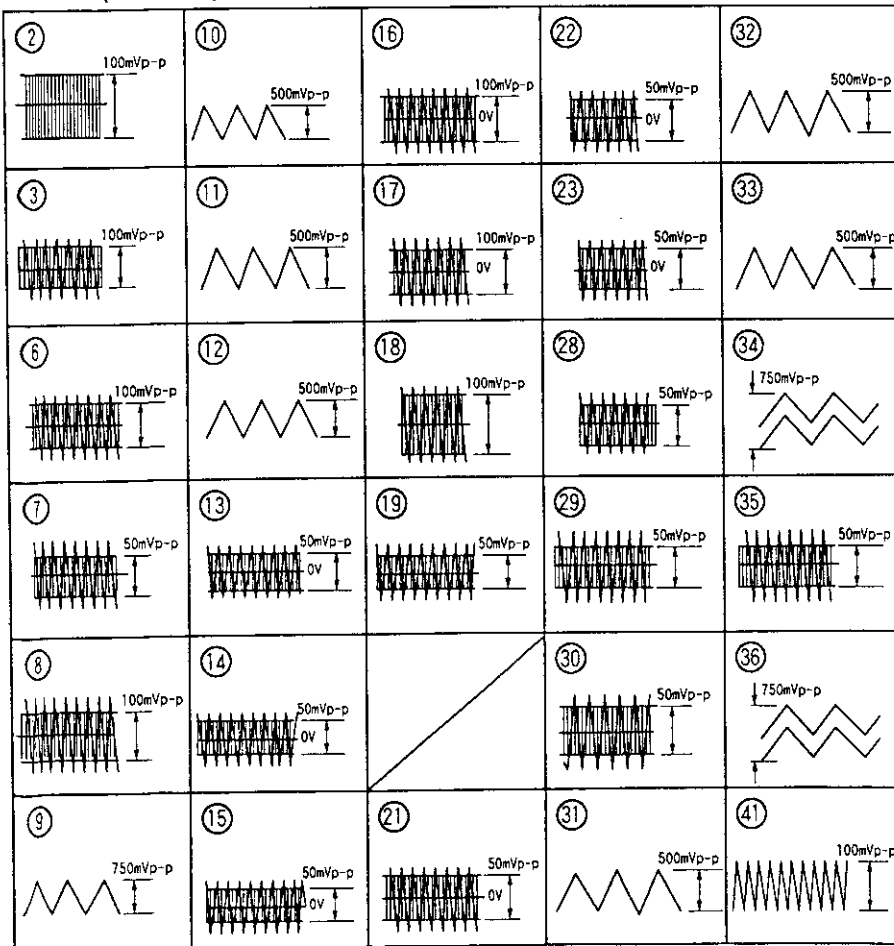




# CLD-2590K

Note: Waveforms and voltages are at the PLAY  
IC201 (CXD2500AQ)

Pin No.	Voltage	Pin No.	Voltage	Pin No.	Voltage	Pin No.	Voltage	Pin No.	Voltage	Pin No.	Voltage
1	0	15	0	29	0	43	*	57	*	71	*
2	0	18	4.8	30	0	44	0	58	*	72	5
3	0	17	0	31	*	45	4.8	59	5	73	5
4	*	18	*	32	*	46	*	60	*	74	*
5	0	19	2.4	33	4.8	47	*	61	5	75	0
6	4.8	20	*	34	*	48	*	62	*	76	0
7	0	21	0	35	*	49	*	63	*	77	*
8	4.8	22	2.3	38	*	50	*	64	*	78	*
9	0	23	4.8	37	*	51	*	65	0	79	*
10	0	24	*	38	*	52	0	66	*	80	0
11	0	25	0	39	0	53	*	67	*		
12	0	26	0	40	4.8	54	*	68	0		
13	0	27	*	41	*	55	0	69	*		
14	0	28	0	42	*	56	*	70	5		


\*: Refer to Waveforms

IC201 (CXD2500AQ)

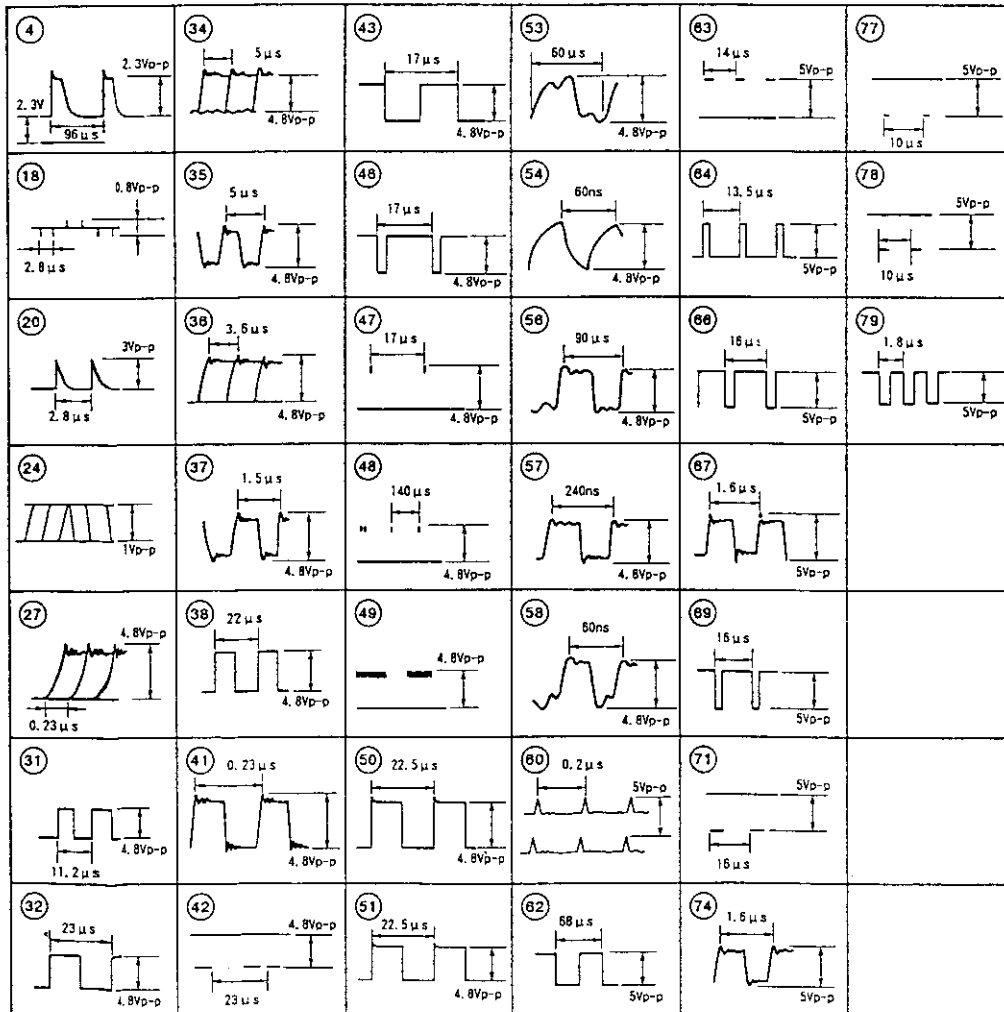

4.10 MAIN ASSEMBLY (D. AUDIO SECTION)


MAIN ASSEMBLY (D. AUDIO SECTION)

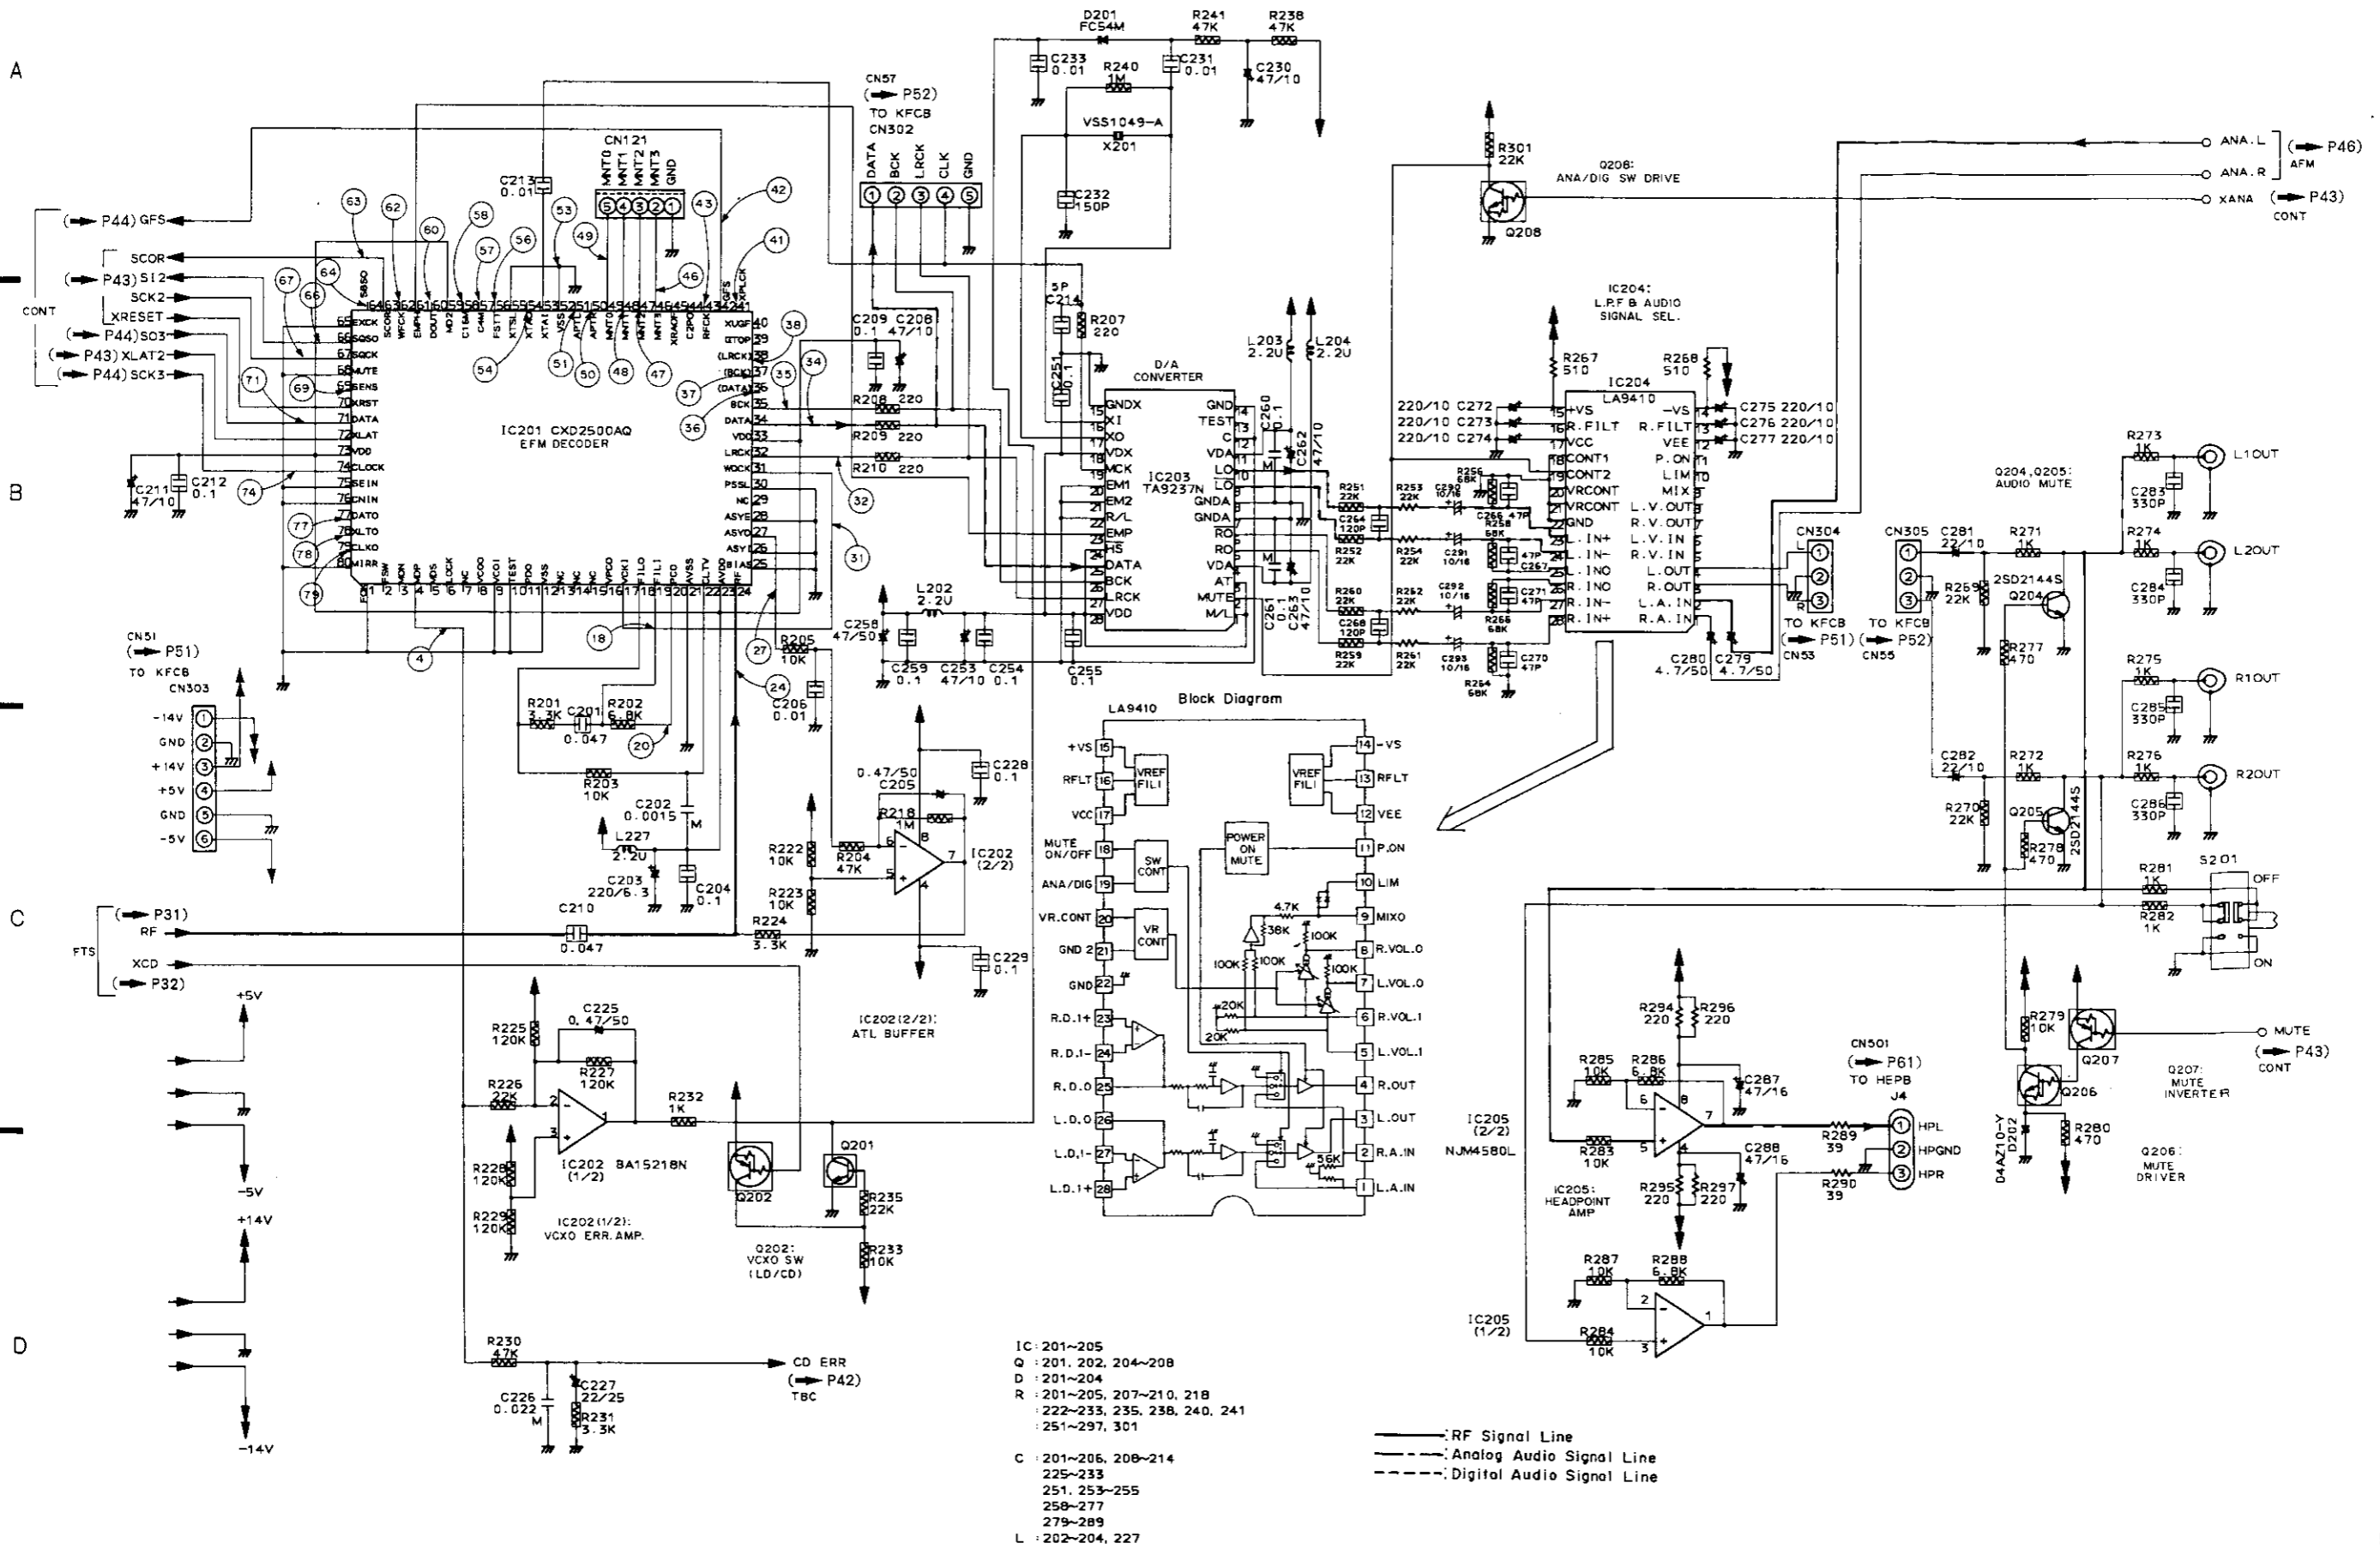

- IC: 201~205
- Q: 201, 202, 204~208
- D: 201~204
- R: 201~205, 207~210, 218
- 222~233, 235, 238, 240, 241
- 251~297, 301
- C: 201~206, 208~214
- 225~233
- 251, 253~255
- 258~277
- 279~289
- L: 202~204, 227

—: RF Signal Line  
 - - - : Analog Audio Signal Line  
 - · - · : Digital Audio Signal Line

4.11 EXTB AND KFCB ASSEMBLY

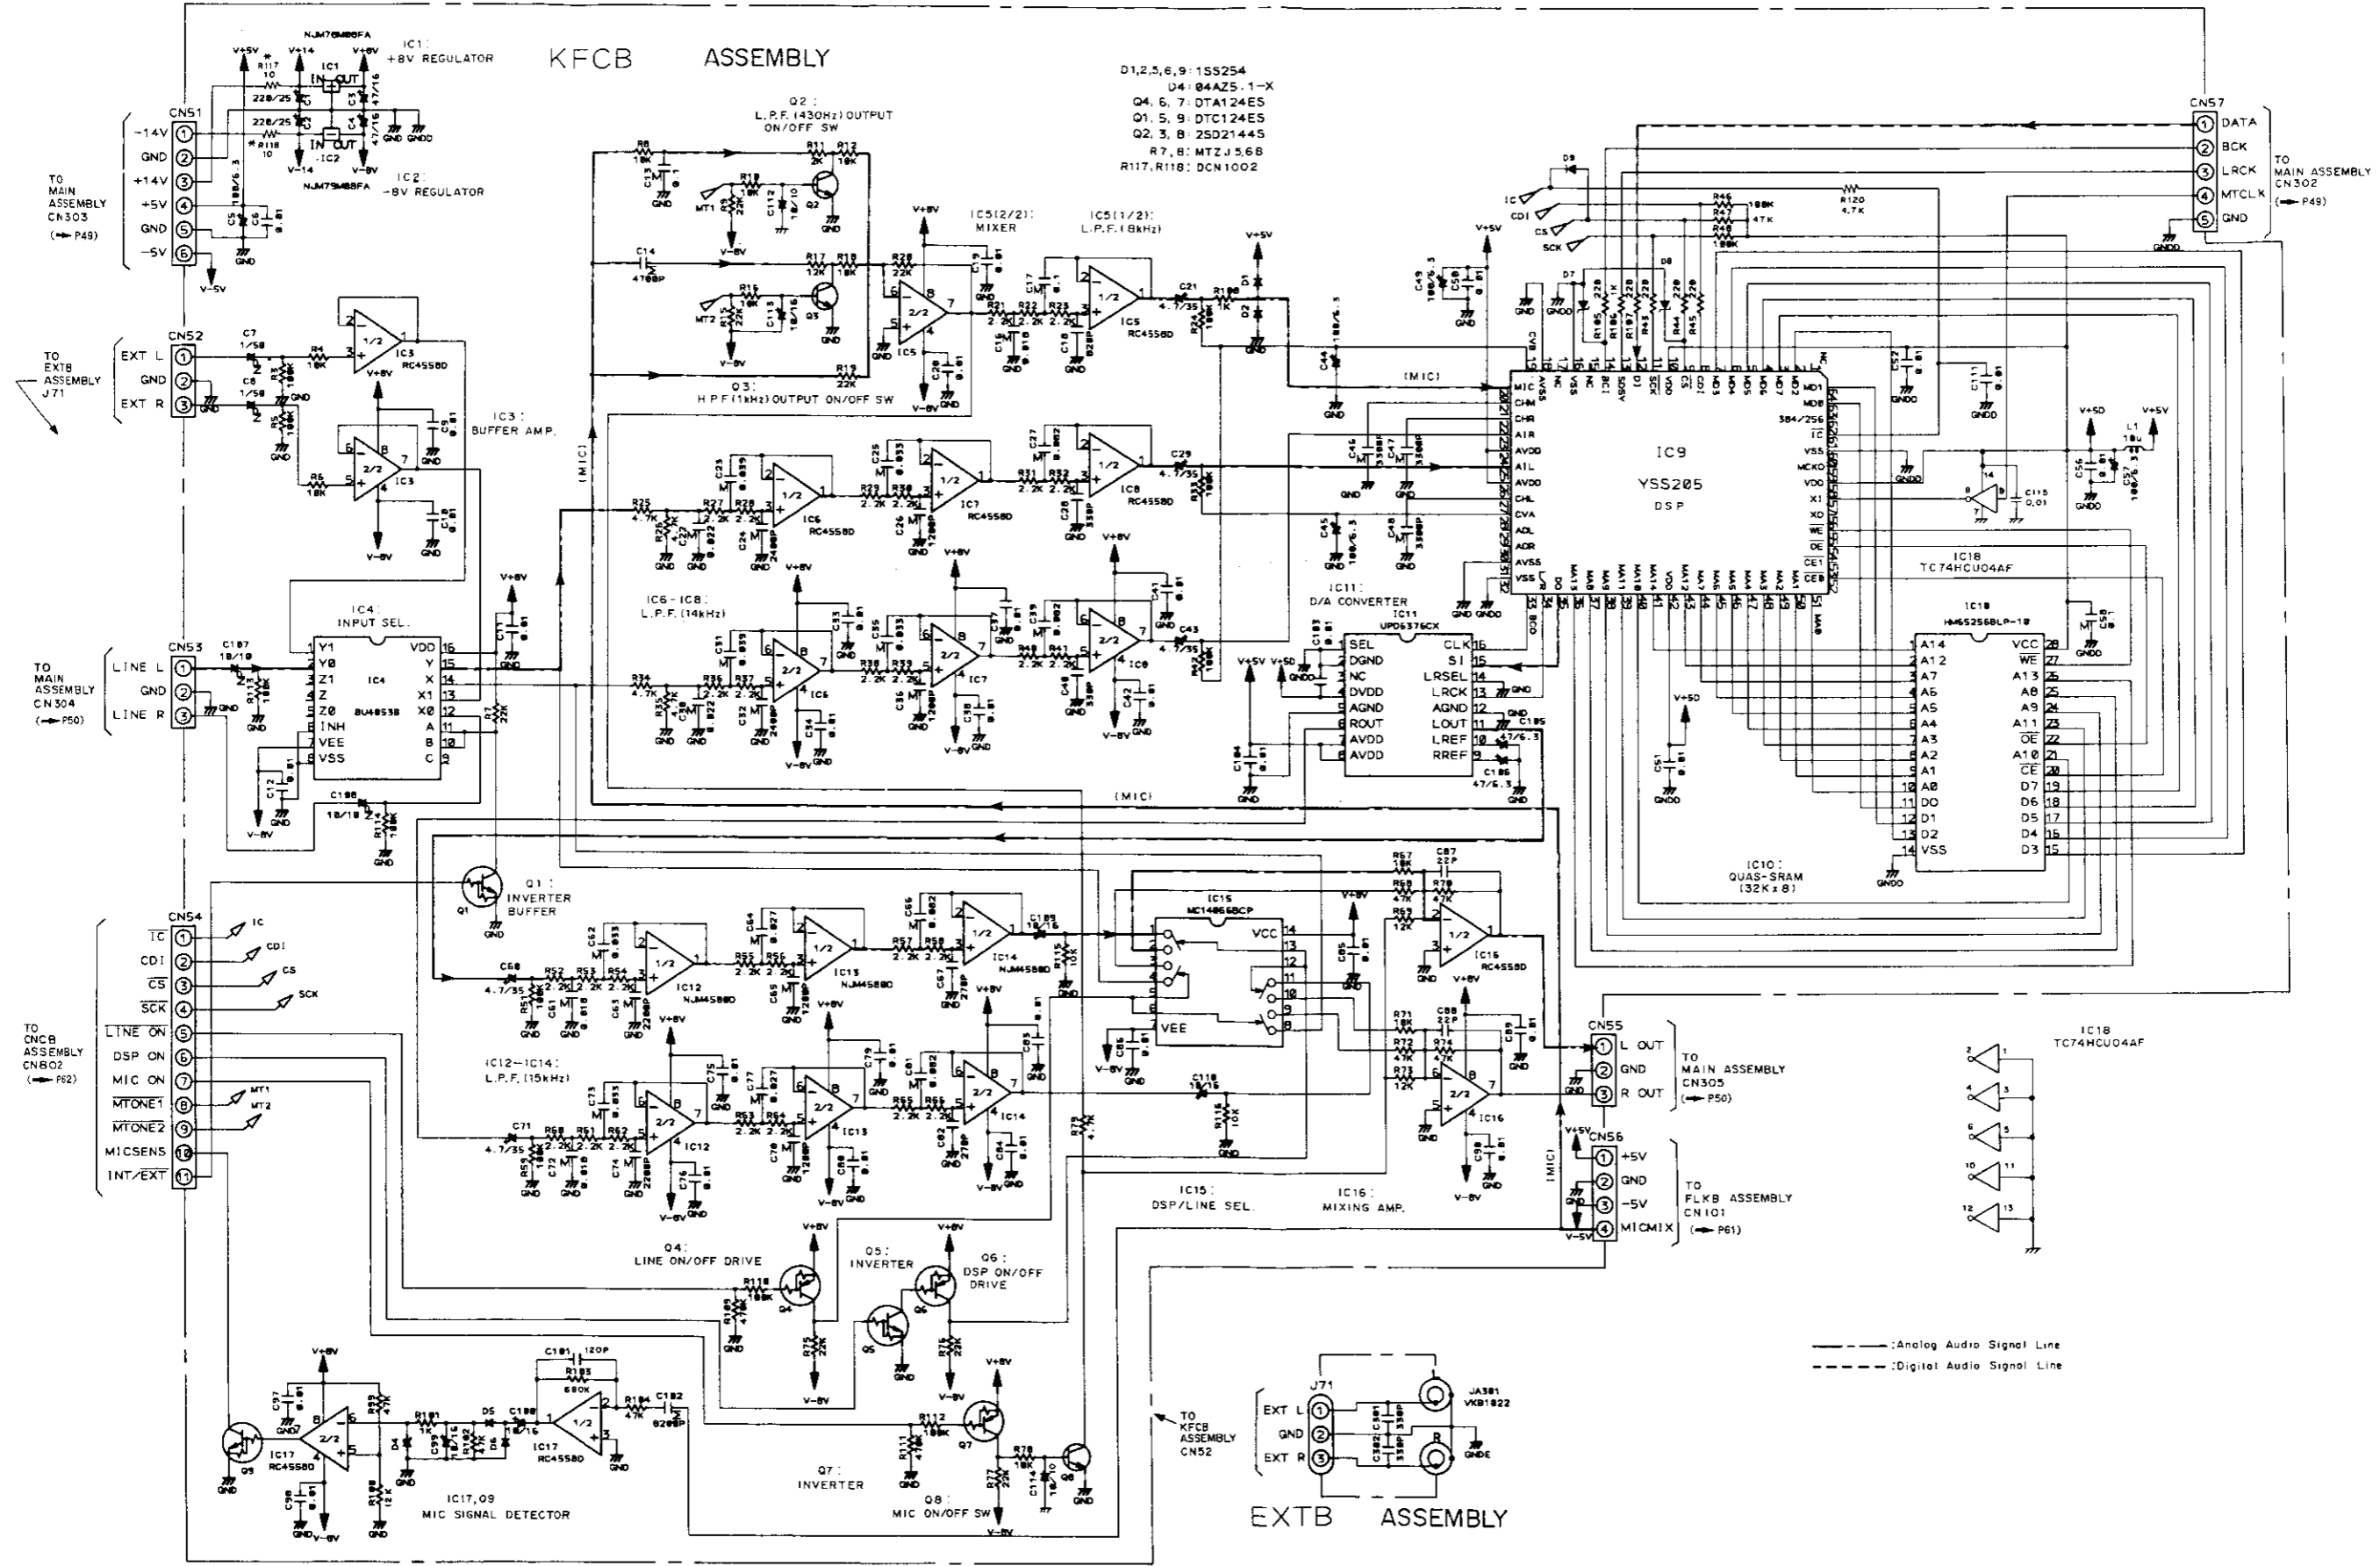


• View from component side

1 2 3 4 5

A

A

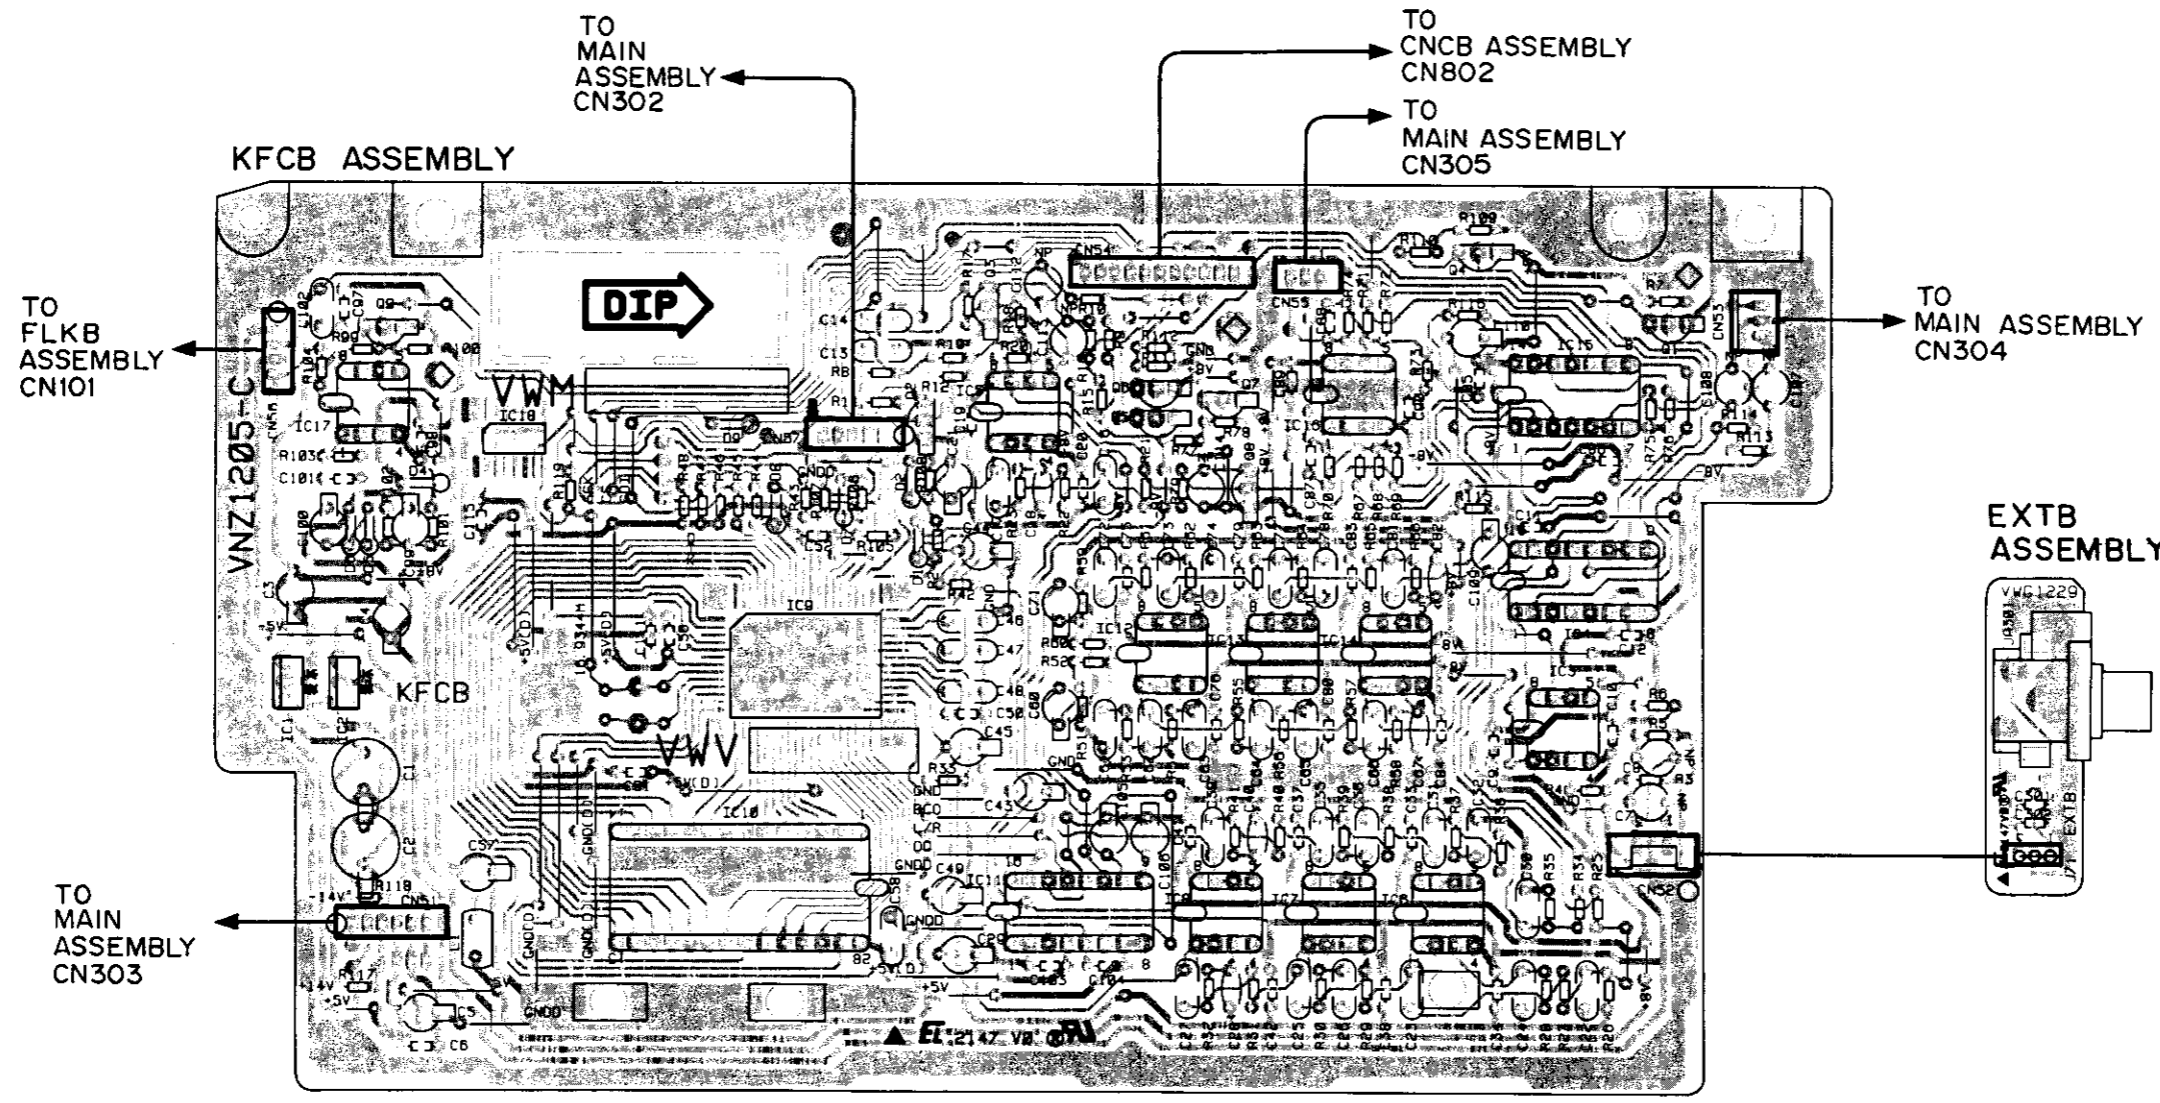

B

B

C


C

- |      |      |      |    |      |     |      |      |      |    |      |    |
|------|------|------|----|------|-----|------|------|------|----|------|----|
| Q9   | IC18 |      | Q2 | Q3   | IC5 | Q6   | Q7   | IC16 | Q4 | IC15 | Q1 |
| IC17 |      | IC9  |    |      |     | Q5   | Q8   |      |    | IC4  |    |
| IC1  | IC2  |      |    |      |     | IC12 | IC13 | IC14 |    | IC3  |    |
|      |      | IC10 |    | IC11 |     | IC8  | IC7  | IC6  |    |      |    |

D

D

1 2 3 4 5 6

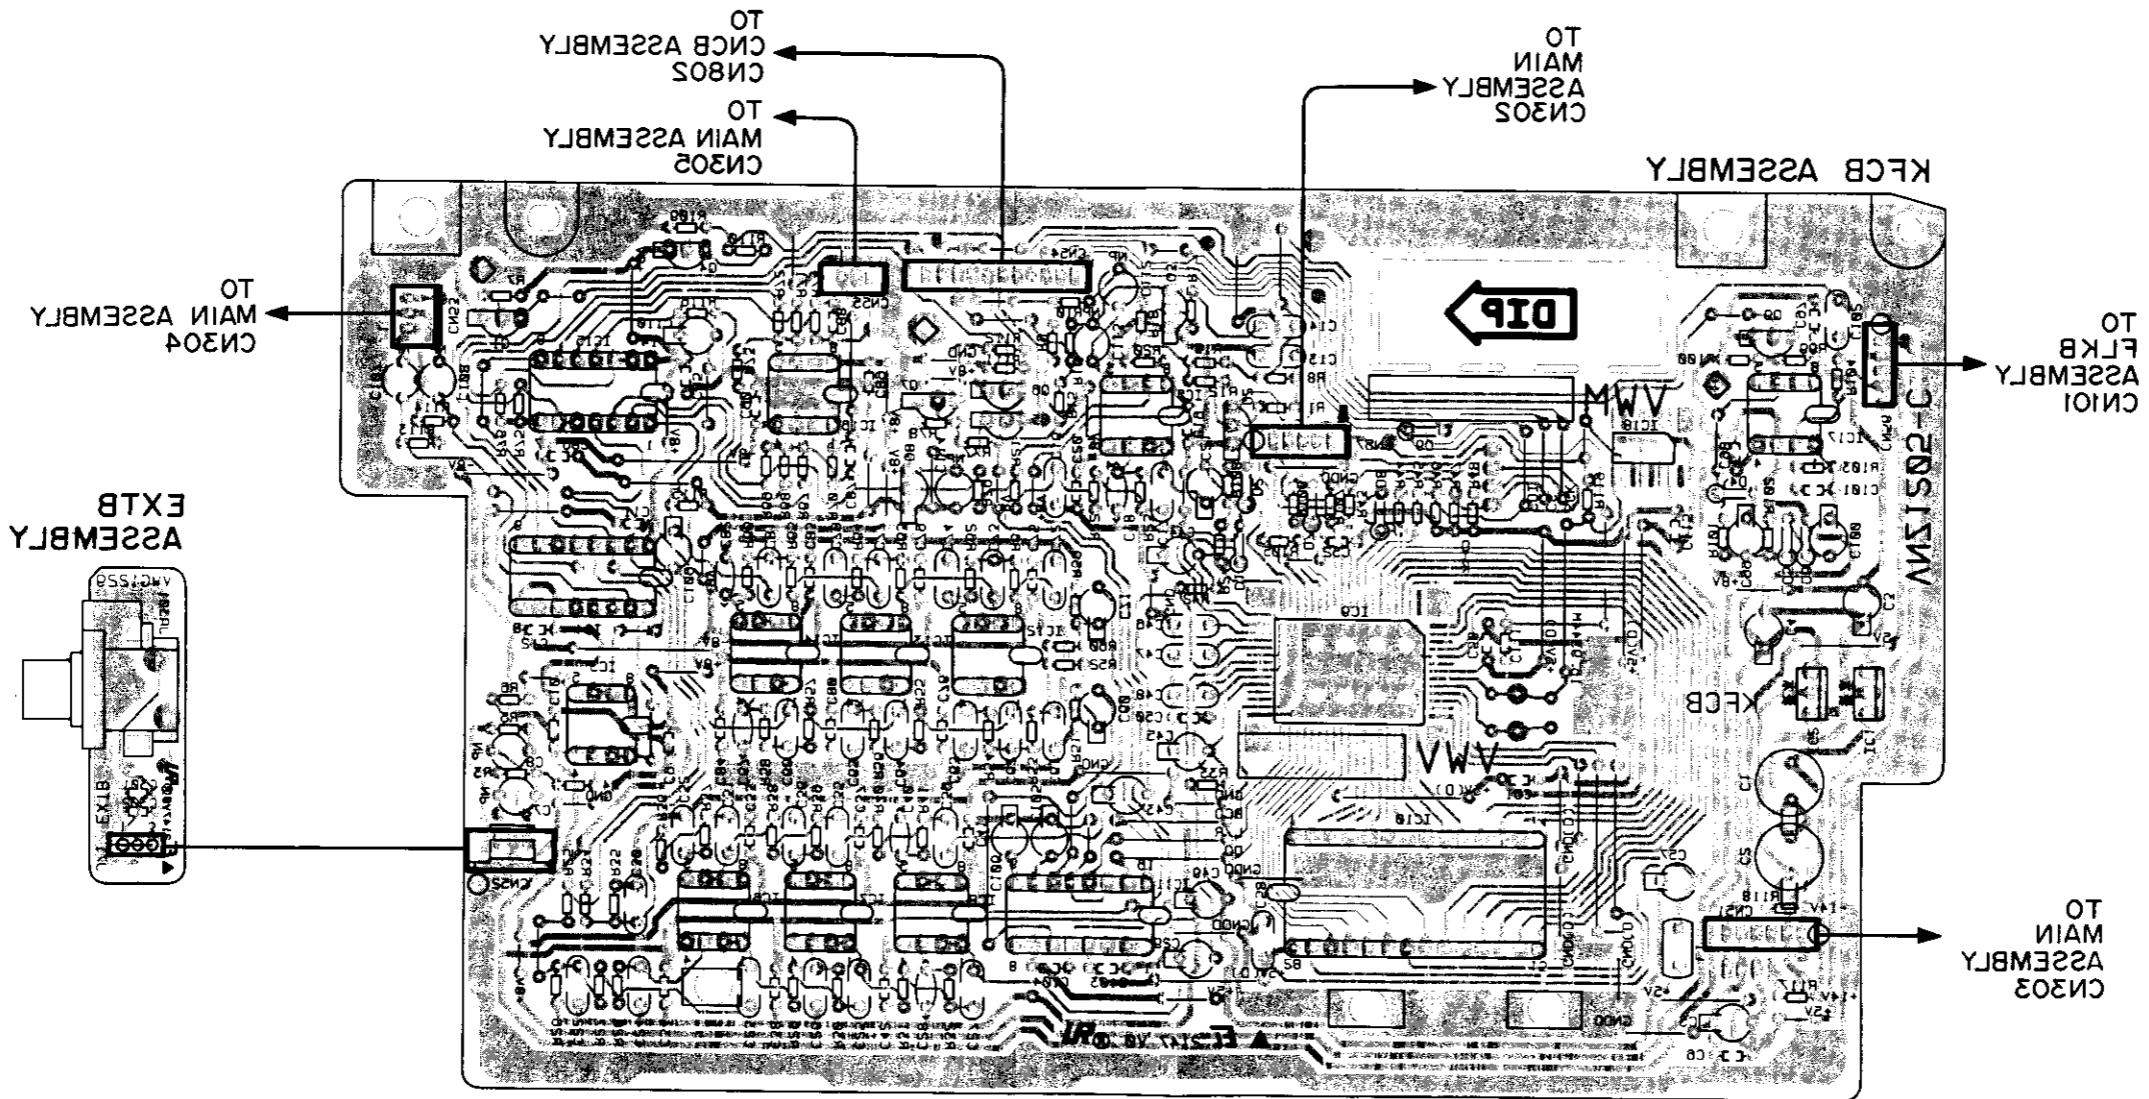

- IC1 IC3
- IC11 IC8
- IC12 IC7
- IC13 IC6
- IC14 IC5
- IC15 IC4
- IC16 IC3
- IC17 IC2
- IC18 IC1
- IC19 IC0
- IC20 IC0
- IC21 IC0
- IC22 IC0
- IC23 IC0
- IC24 IC0
- IC25 IC0
- IC26 IC0
- IC27 IC0
- IC28 IC0
- IC29 IC0
- IC30 IC0
- IC31 IC0
- IC32 IC0
- IC33 IC0
- IC34 IC0
- IC35 IC0
- IC36 IC0
- IC37 IC0
- IC38 IC0
- IC39 IC0
- IC40 IC0
- IC41 IC0
- IC42 IC0
- IC43 IC0
- IC44 IC0
- IC45 IC0
- IC46 IC0
- IC47 IC0
- IC48 IC0
- IC49 IC0
- IC50 IC0
- IC51 IC0
- IC52 IC0
- IC53 IC0
- IC54 IC0
- IC55 IC0
- IC56 IC0
- IC57 IC0
- IC58 IC0
- IC59 IC0
- IC60 IC0
- IC61 IC0
- IC62 IC0
- IC63 IC0
- IC64 IC0
- IC65 IC0
- IC66 IC0
- IC67 IC0
- IC68 IC0
- IC69 IC0
- IC70 IC0
- IC71 IC0
- IC72 IC0
- IC73 IC0
- IC74 IC0
- IC75 IC0
- IC76 IC0
- IC77 IC0
- IC78 IC0
- IC79 IC0
- IC80 IC0
- IC81 IC0
- IC82 IC0
- IC83 IC0
- IC84 IC0
- IC85 IC0
- IC86 IC0
- IC87 IC0
- IC88 IC0
- IC89 IC0
- IC90 IC0
- IC91 IC0
- IC92 IC0
- IC93 IC0
- IC94 IC0
- IC95 IC0
- IC96 IC0
- IC97 IC0
- IC98 IC0
- IC99 IC0
- IC100 IC0

A

A

B


B

C

C

D

D

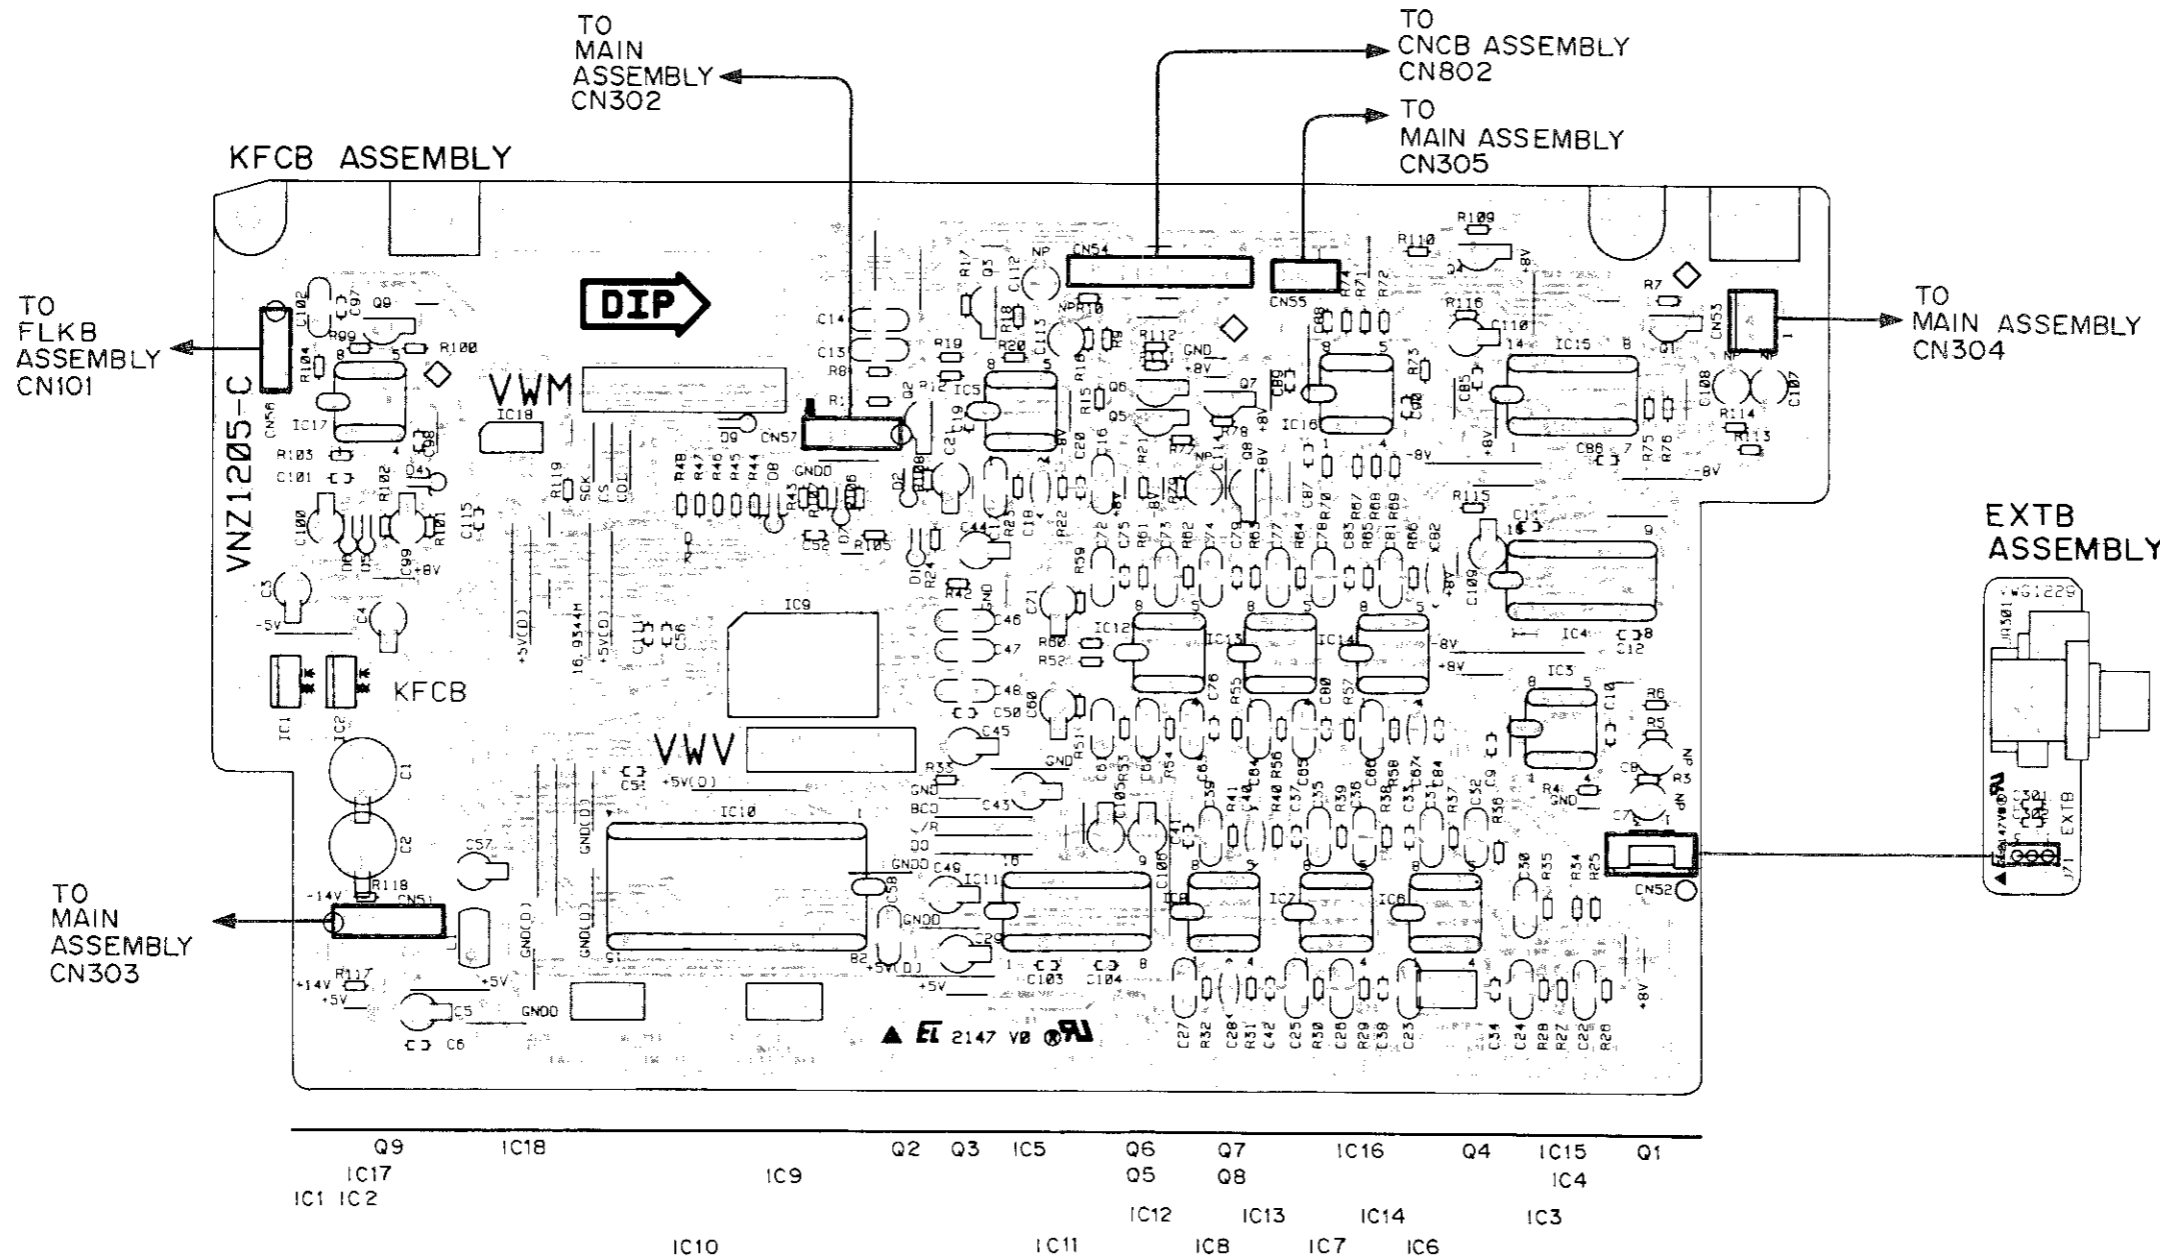

1

2

3

4

5

1

2

3


4

5

6

• View from soldering side

CLD-5280K

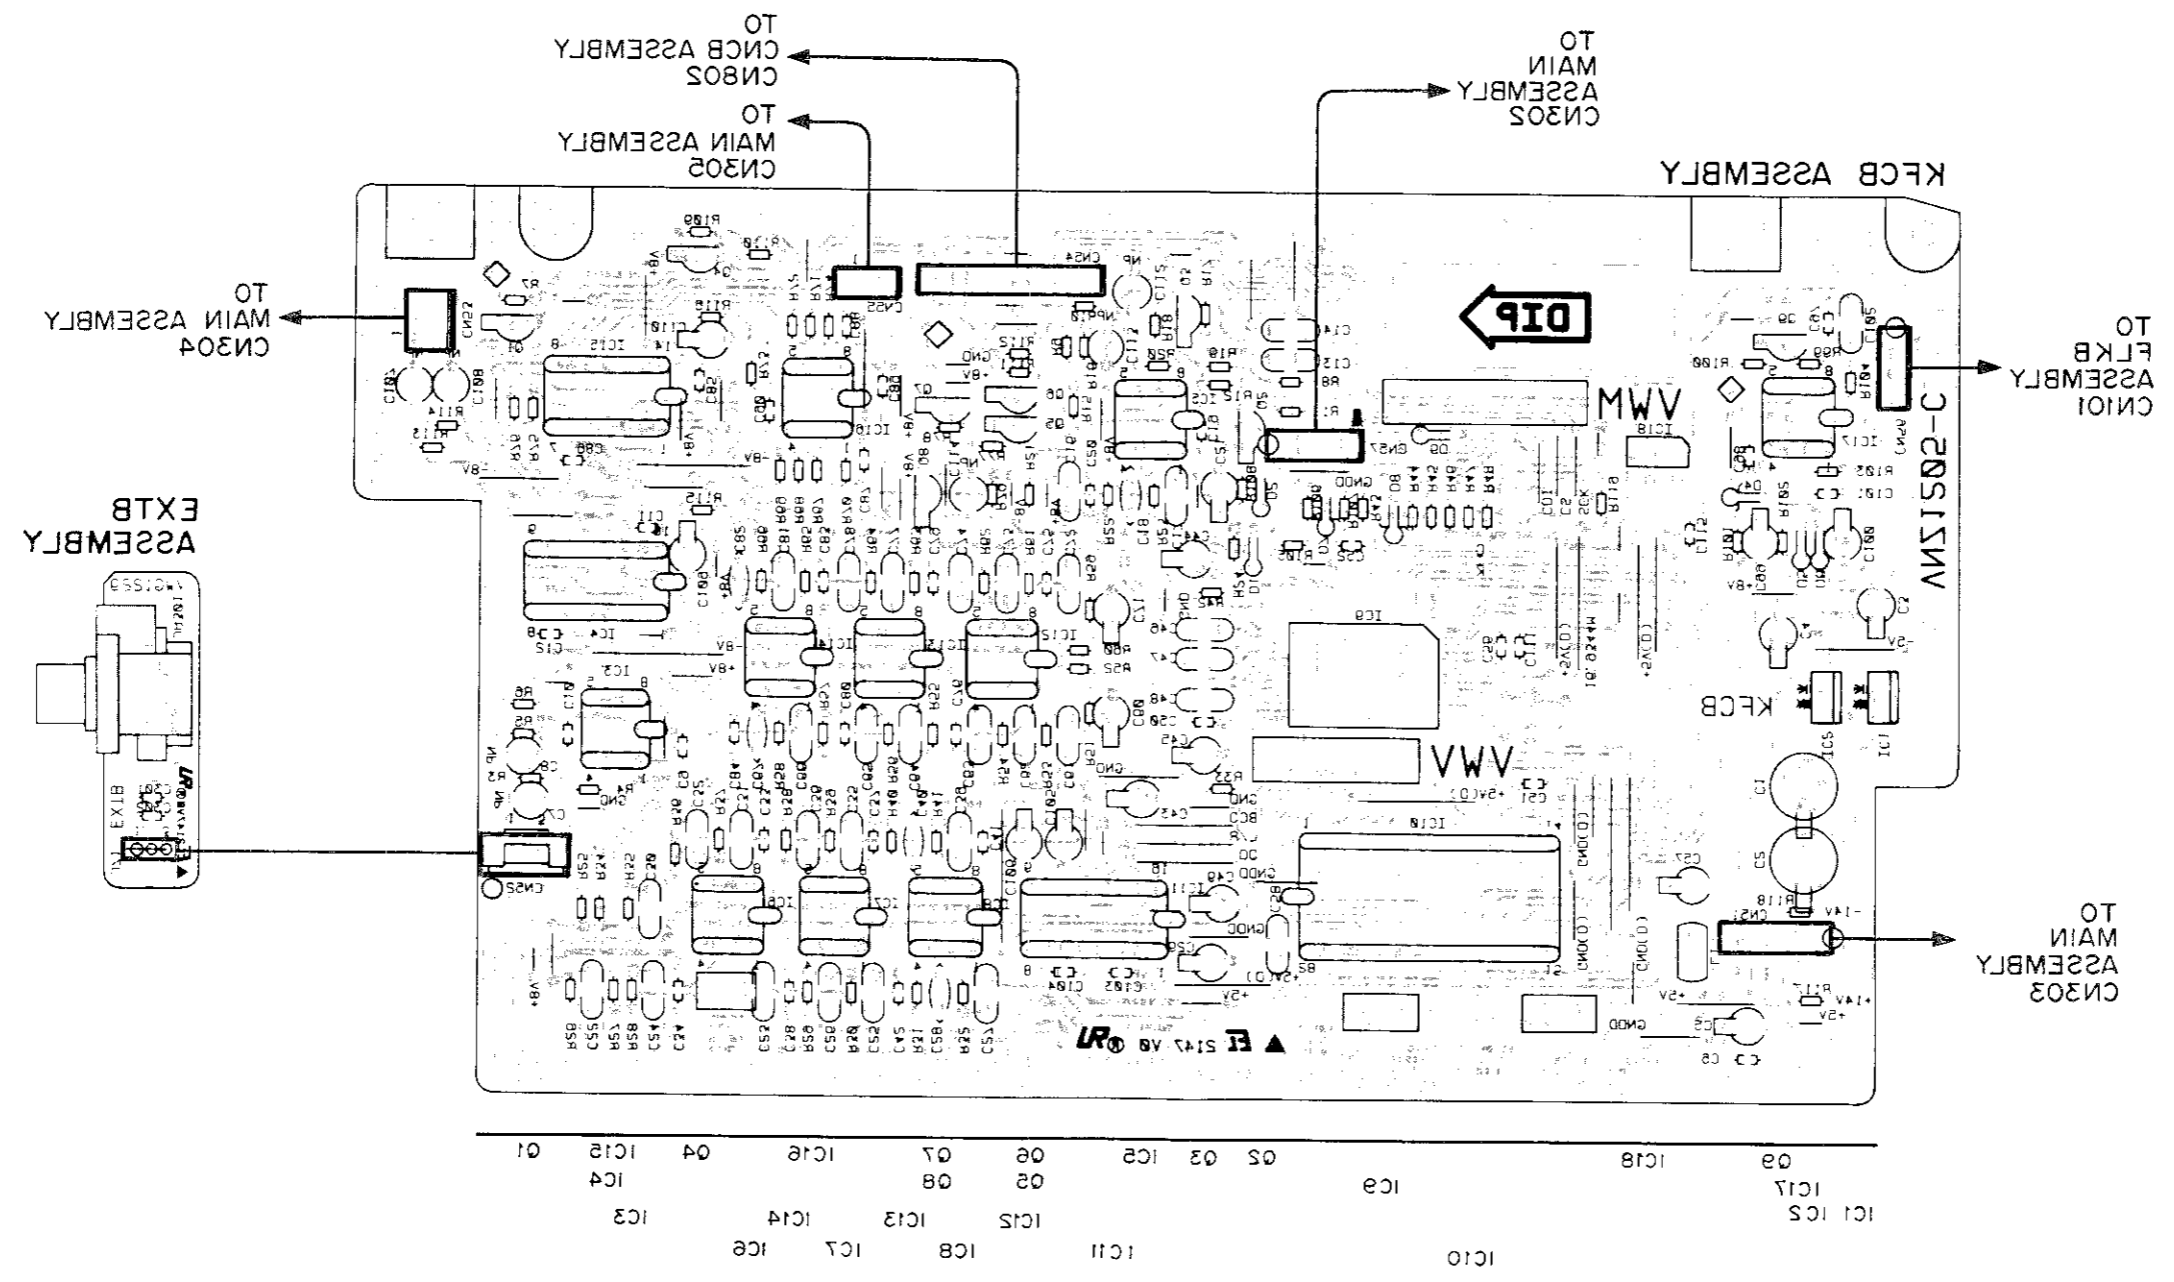

A

A

B

B

C

C

D


D






• View from component side

HEPB ASSEMBLY

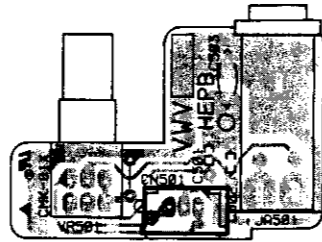


TO MAIN ASSEMBLY  
J4

FLKB ASSEMBLY

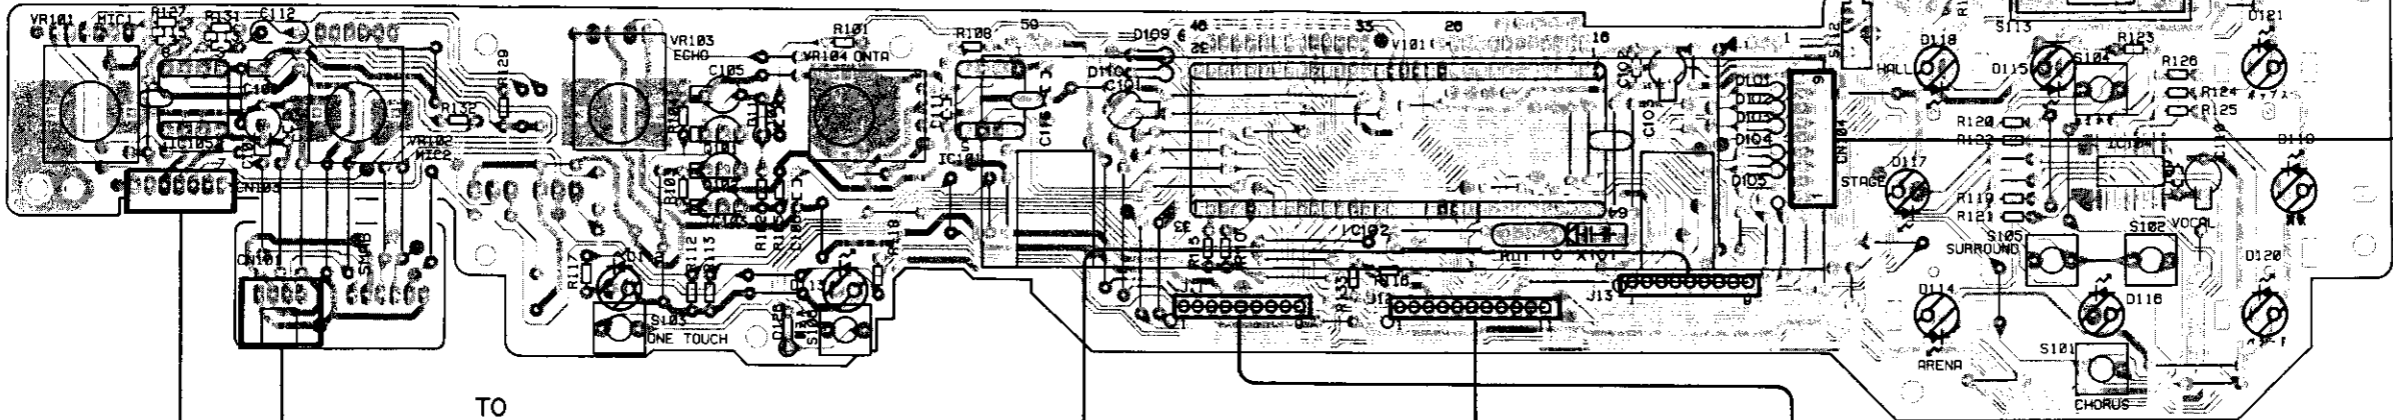


TO KFCB ASSEMBLY  
CN56

CNCB ASSEMBLY

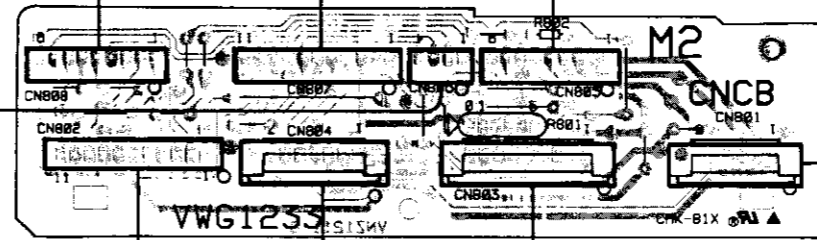



TO SYPS ASSEMBLY  
CN315

TO MAIN ASSEMBLY  
J10

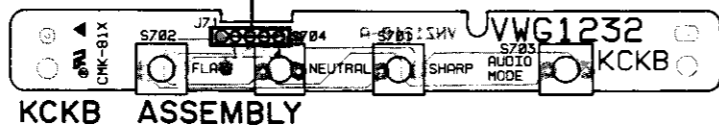


TO KFCB ASSEMBLY  
CN54

IRKB ASSEMBLY

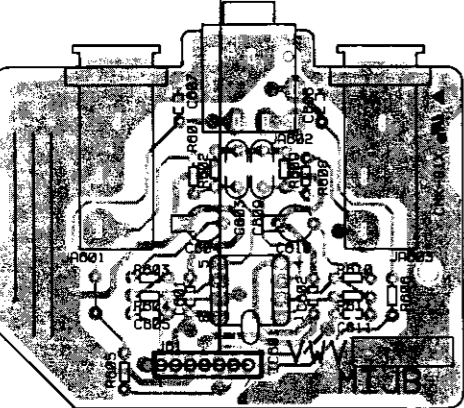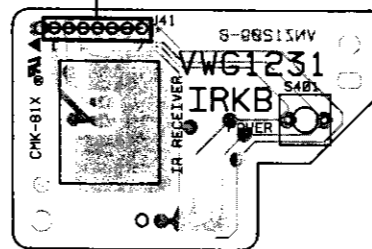


MIJB ASSEMBLY

DIKB ASSEMBLY

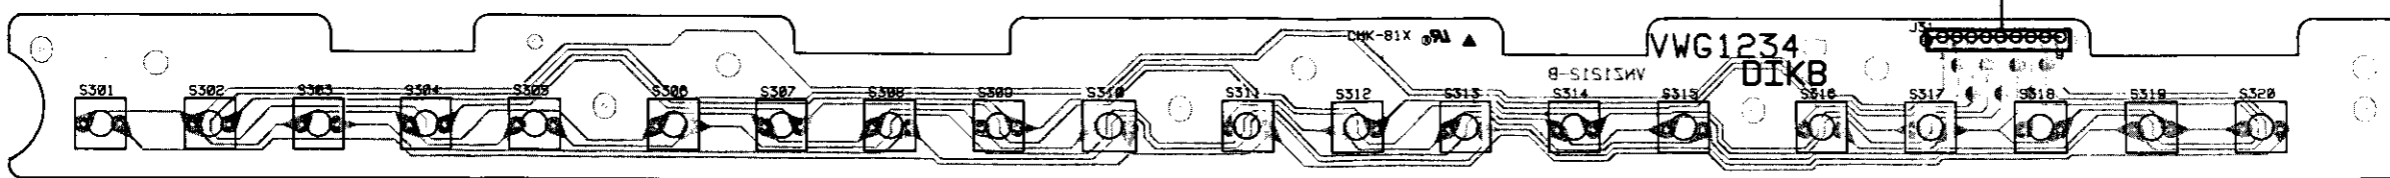

• View from soldering side

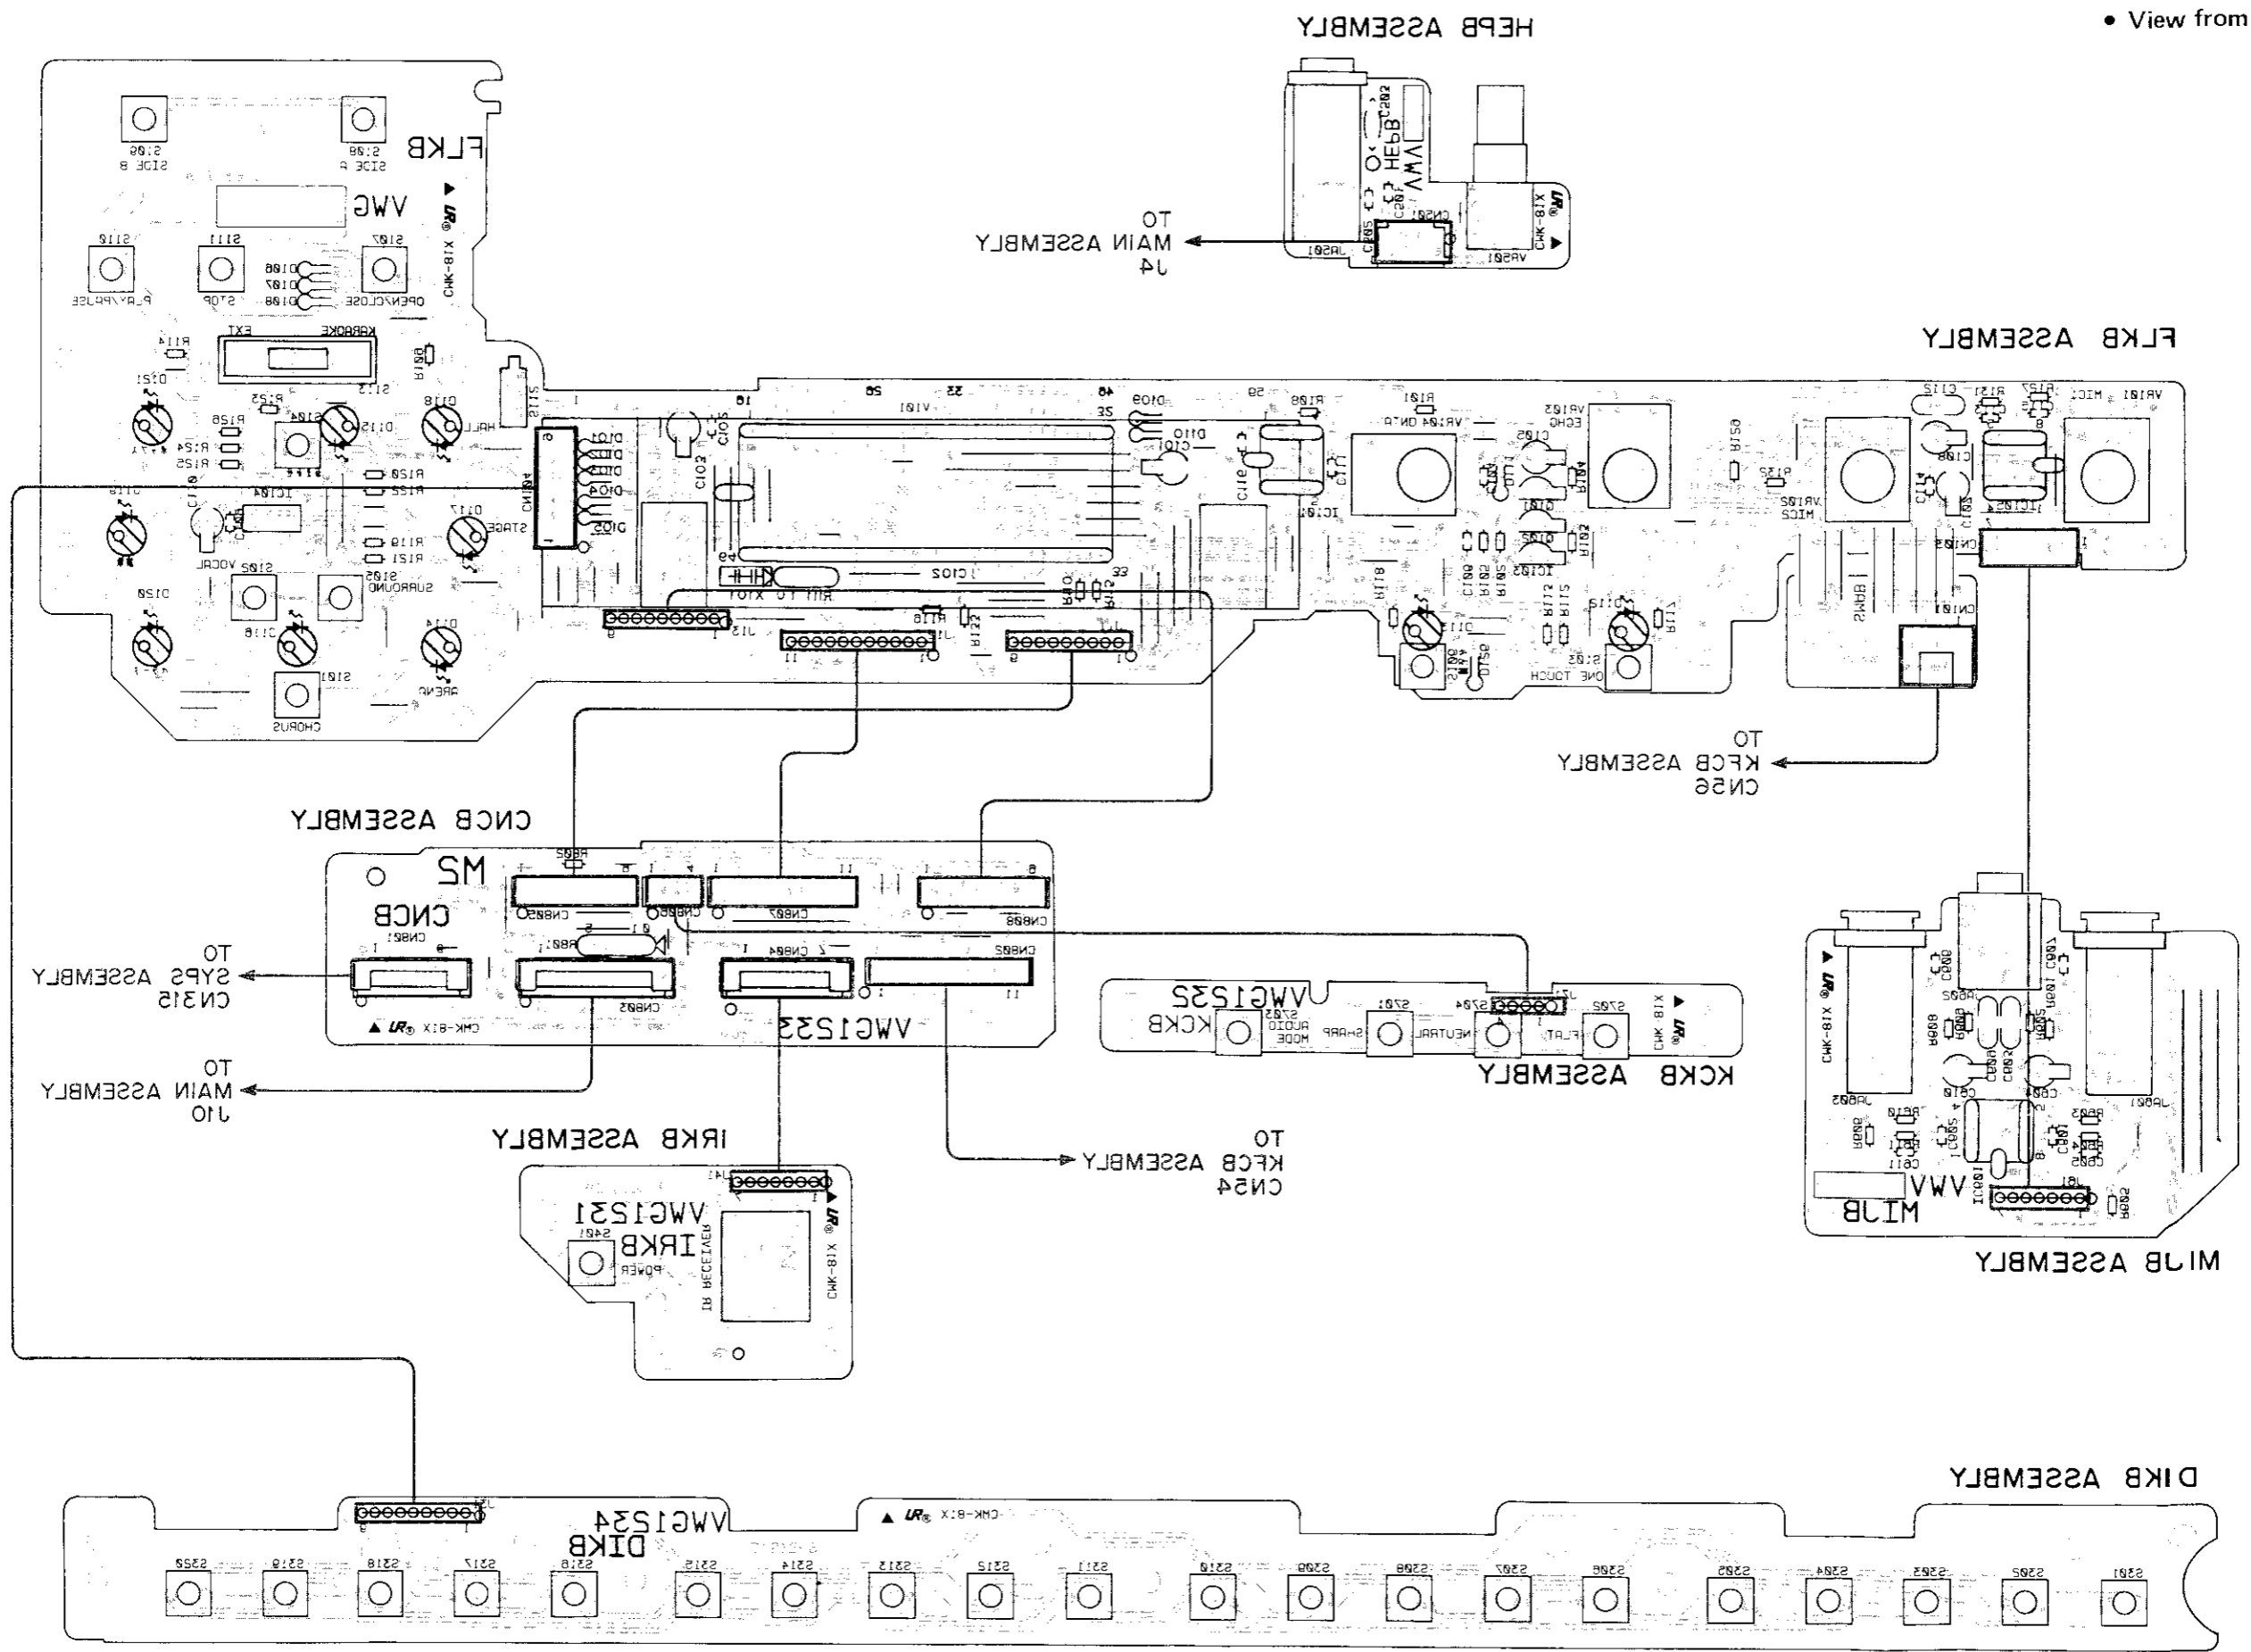

A

B

C

D

A

B

C

D

e

e

4

3

5

e

e


4

3


5

• View from component side

HEPB ASSEMBLY

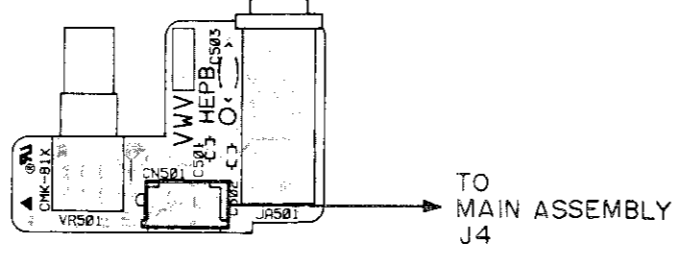


FLKB ASSEMBLY

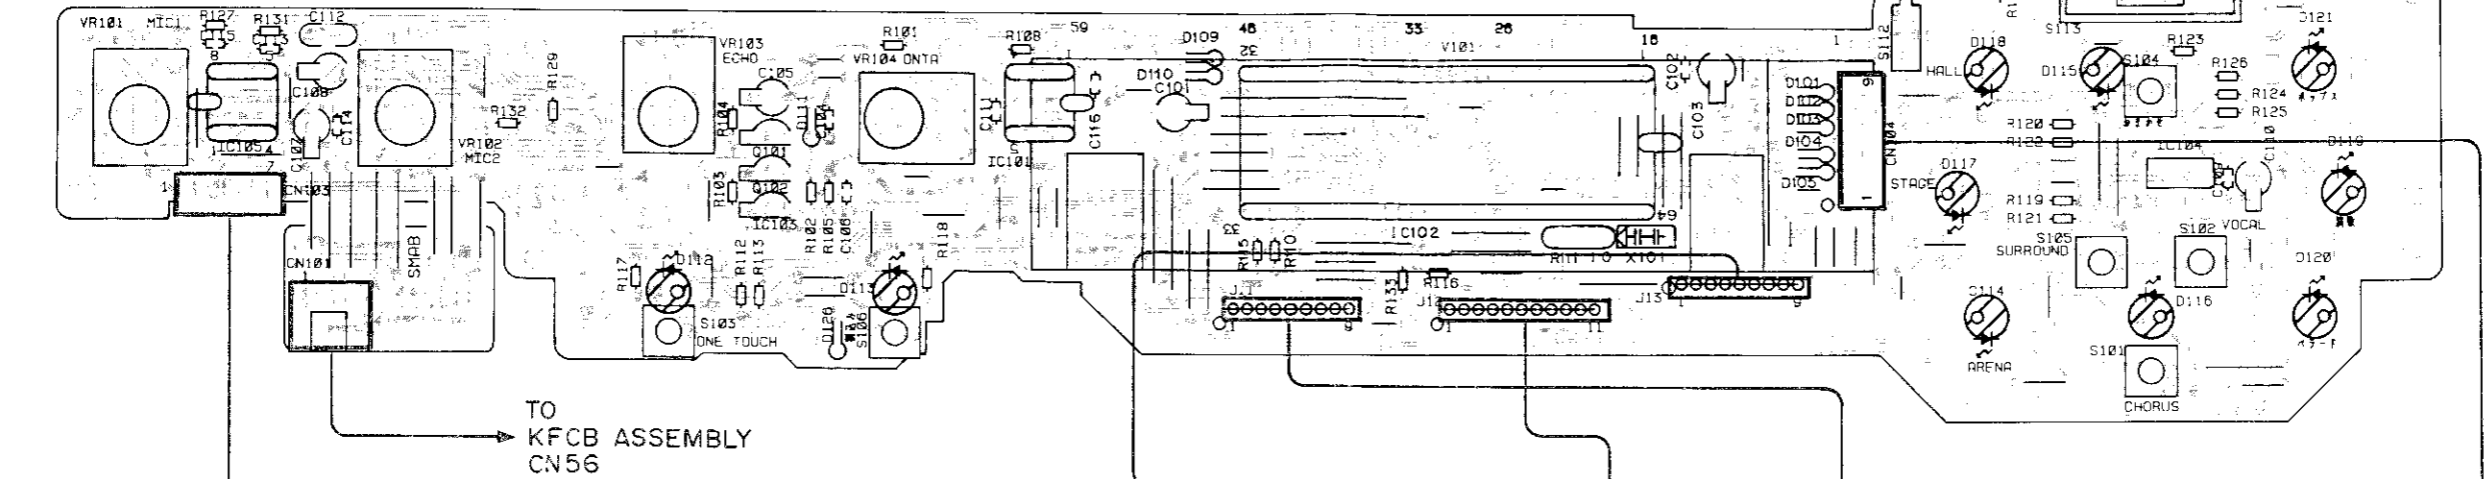

TO KFCB ASSEMBLY CN56

FLKB

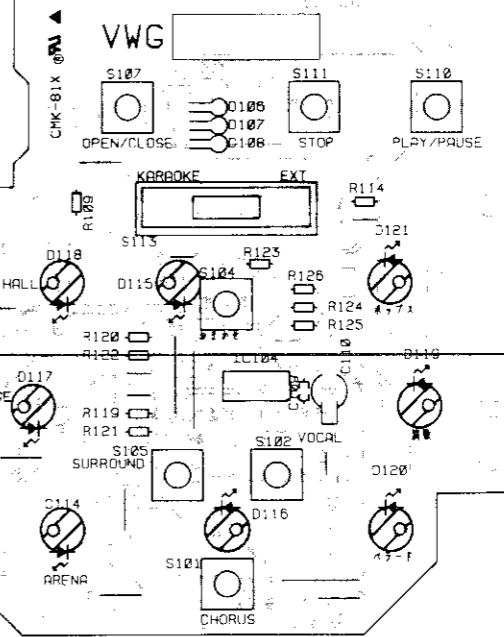


A


B

C

D

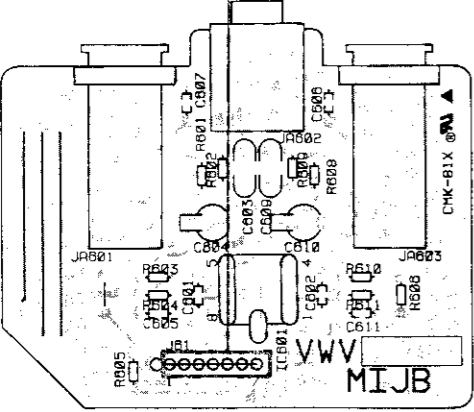


MIJB ASSEMBLY

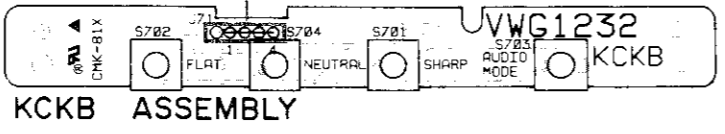

KCKB ASSEMBLY


TO KFCB ASSEMBLY CN54

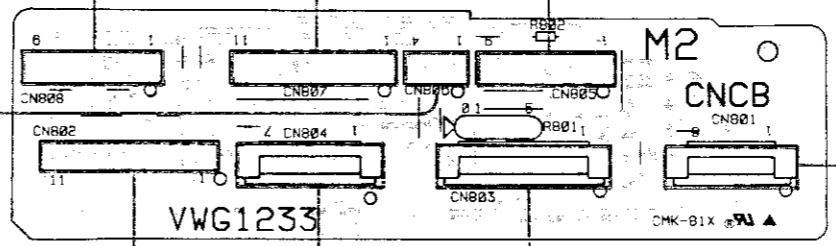

CNCB ASSEMBLY


TO SYPS ASSEMBLY CN315

TO MAIN ASSEMBLY J10

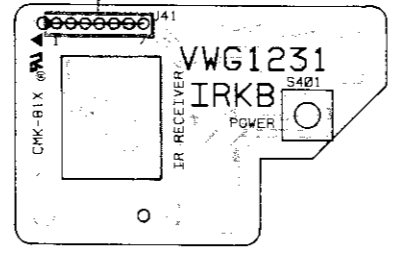


IRKB ASSEMBLY

DIKB ASSEMBLY

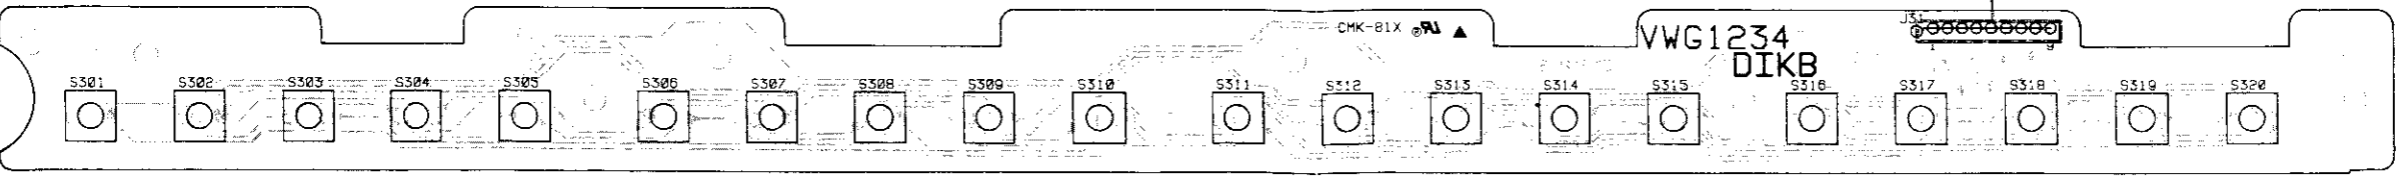

4.12 FLKB, DIKB, HEPB, MIJB, IRKB, KCKB AND CNCB ASSEMBLY

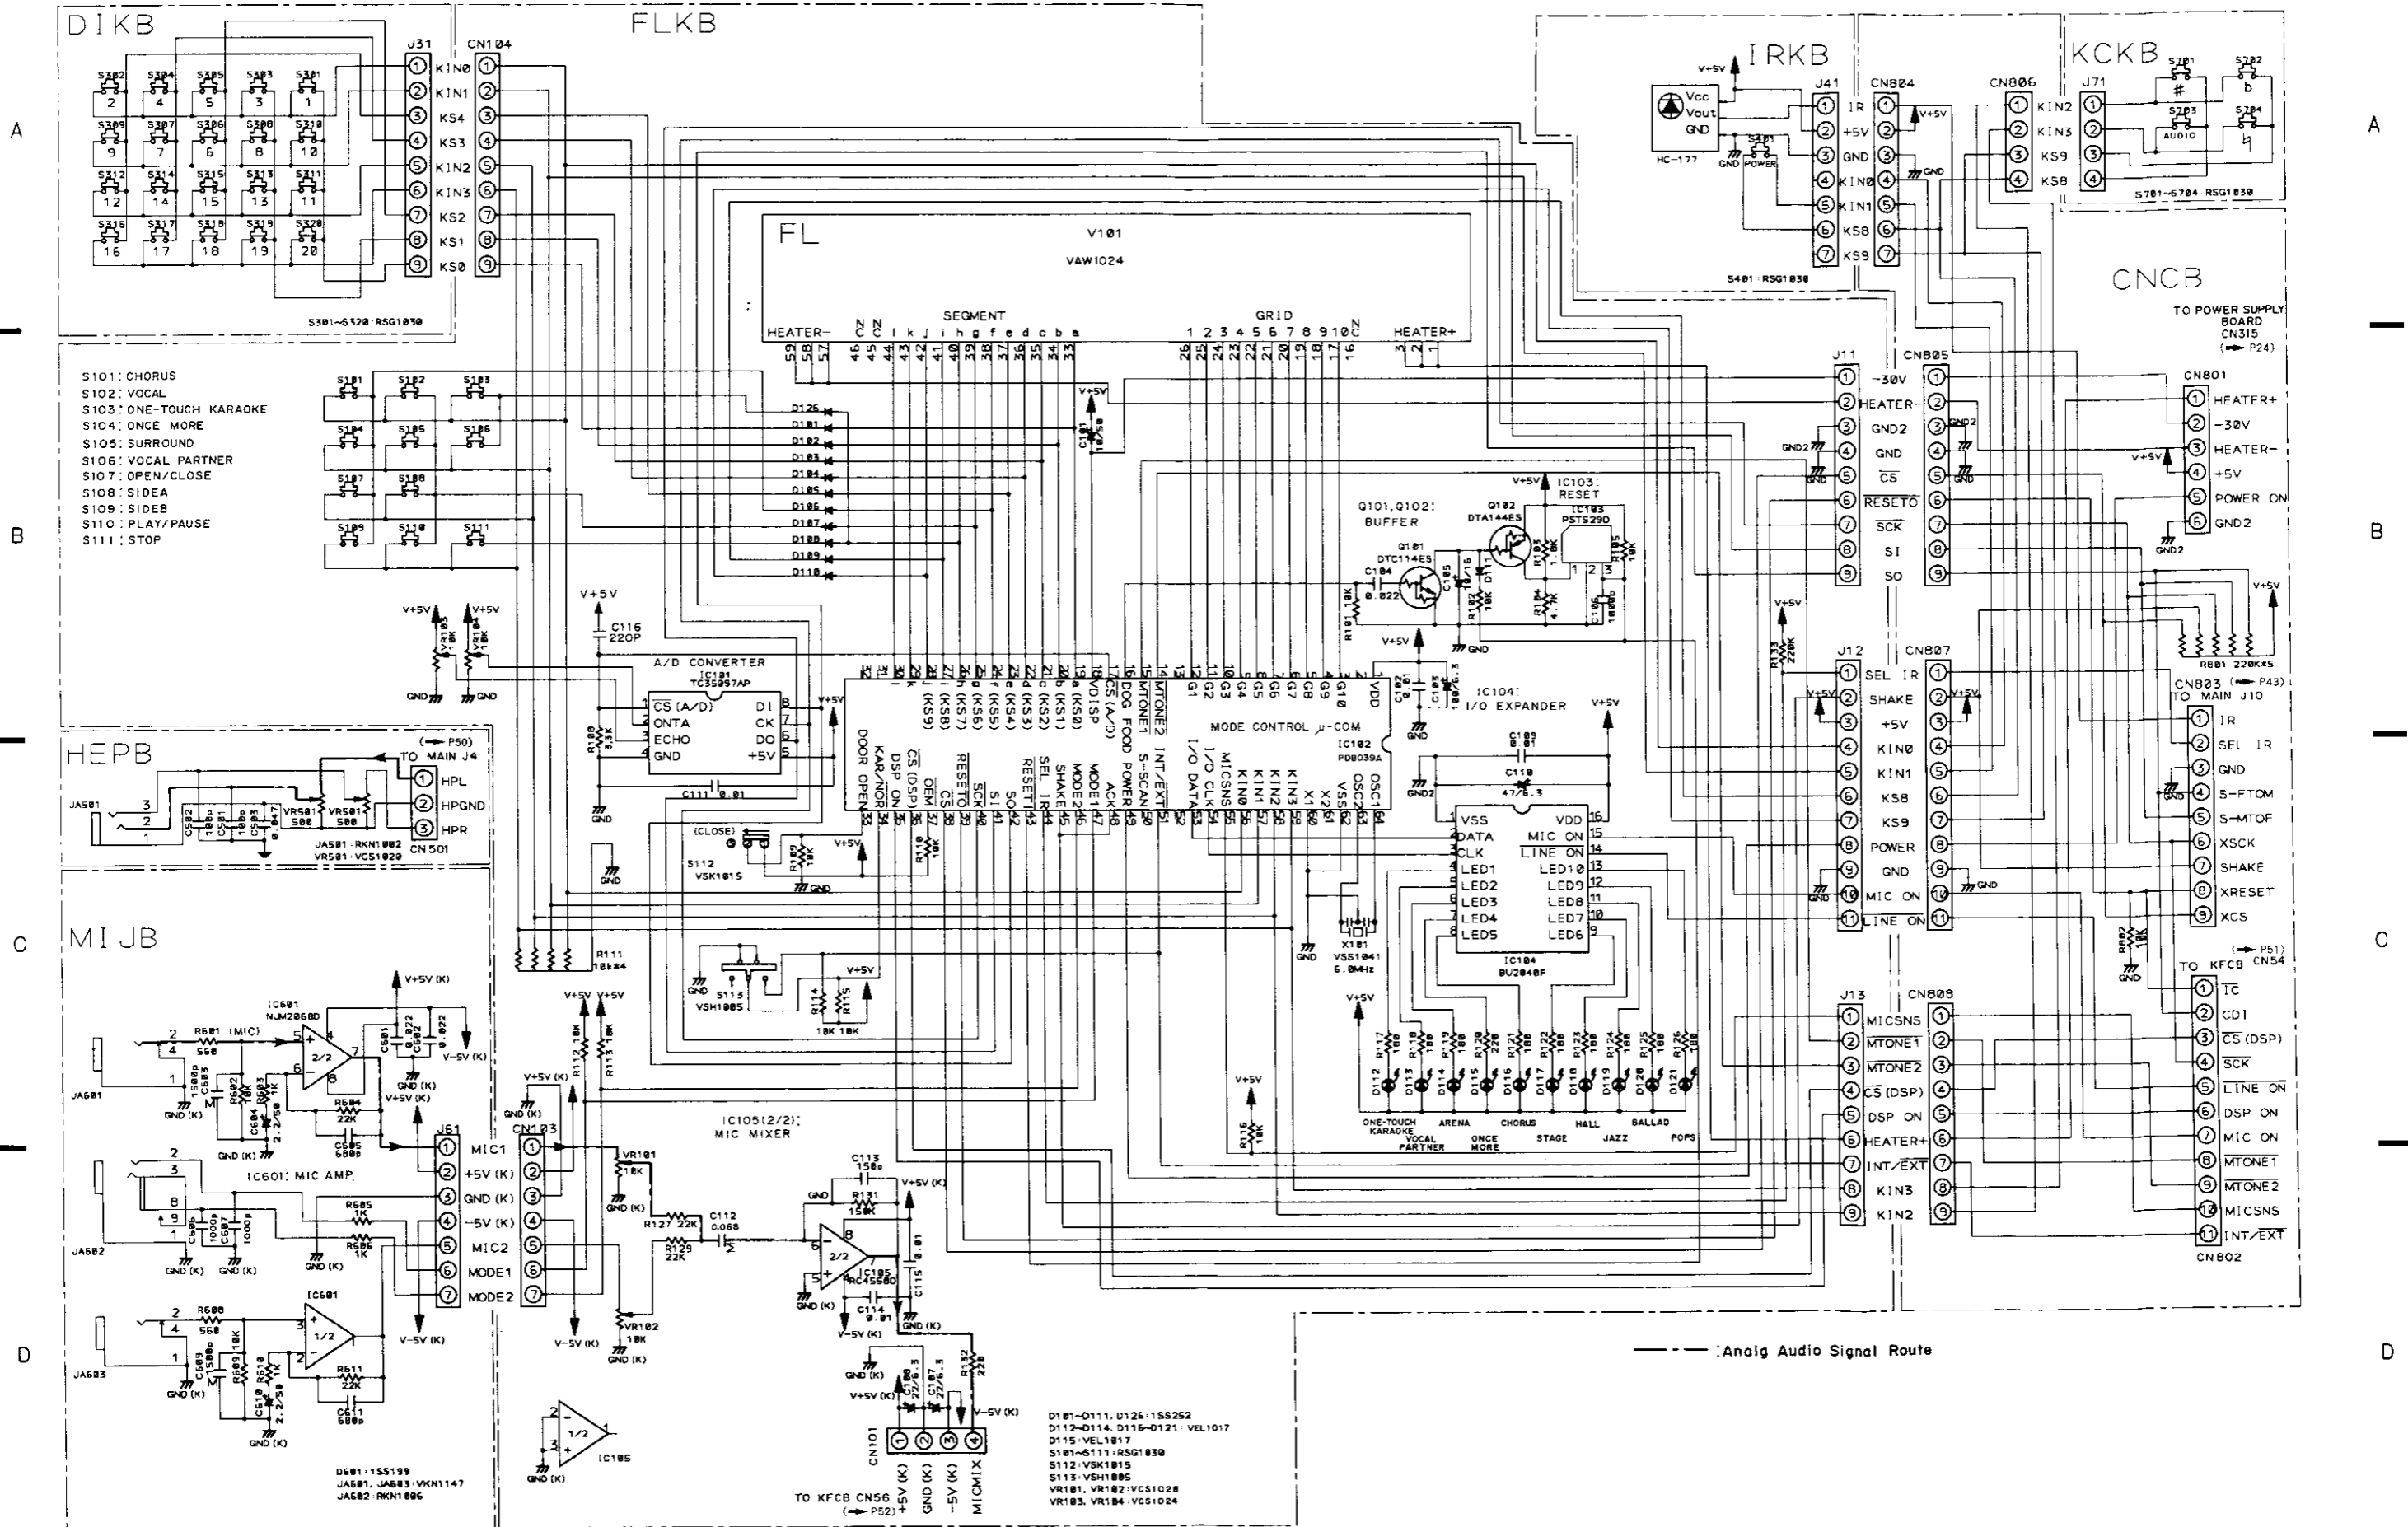

## 5. P.C.B's PARTS LIST

### NOTES:

- Parts without part number cannot be supplied.
- Parts marked by "⊙" are not always kept in stock. Their delivery time may be longer than usual or they may be unavailable.
- The  $\Delta$  mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
- When ordering resistors, first convert resistance values into code form as shown in the following examples.

Ex.1 When there are 2 effective digits (any digit apart from 0), such as 560 ohm and 47k ohm (tolerance is shown by J=5%, and K=10%)

560  $\Omega$   $\rightarrow$  56  $\times 10^1 \rightarrow$  561 ..... RD1/4PS  $\begin{bmatrix} 5 & 6 & 1 \end{bmatrix}$  J  
 47k  $\Omega$   $\rightarrow$  47  $\times 10^3 \rightarrow$  473 ..... RD1/4PS  $\begin{bmatrix} 4 & 7 & 3 \end{bmatrix}$  J  
 0.5  $\Omega$   $\rightarrow$  OR5 ..... RN2H  $\begin{bmatrix} 0 & R & 5 \end{bmatrix}$  K  
 1  $\Omega$   $\rightarrow$  010 ..... RS1P  $\begin{bmatrix} 0 & 1 & 0 \end{bmatrix}$  K

Ex.2 When there are 3 effective digits (such as in high precision metal film resistors).

5.62k  $\Omega \rightarrow$  562  $\times 10^1 \rightarrow$  5621 ..... RN1/4SR  $\begin{bmatrix} 5 & 6 & 2 & 1 \end{bmatrix}$  F

Mark No.	Description	Part No.	Mark No.	Description	Part No.
----------	-------------	----------	----------	-------------	----------

### P.C. BOARDS CONSTRUCTION

⊙	MOTHER ASSEMBLY	VWM1223			
	└ MAIN ASSEMBLY				
	└ FG ASSEMBLY				
	└ SW ASSEMBLY				
⊙	KRAB ASSEMBLY	VWM1221			
	└ EXT B ASSEMBLY				
	└ KFCB ASSEMBLY				
⊙	FRPB ASSEMBLY	VWM1225			
	└ FLKB ASSEMBLY				
	└ IRKB ASSEMBLY				
	└ KCKB ASSEMBLY				
	└ CNCB ASSEMBLY				
	└ DIKB ASSEMBLY				
	└ MIJB ASSEMBLY				
	└ HEPB ASSEMBLY				
⊙	DRVB ASSEMBLY	VWS1087			
	POWER SUPPLY BOARD ASSEMBLY	VWR1109			
	CNNB ASSEMBLY				
	HEAD ASSEMBLY				

### ⊙ MOTHER ASSEMBLY (VWM1223)

MOTHER assembly is composed of the MAIN, FG and SW assemblies.

### MAIN ASSEMBLY

#### SEMICONDUCTORS

IC101 MECHANISM CONT. MCU	PD0081D1
IC201 EFM DEMODULATION IC	CXD2500AQ
IC202 IC	BA15218N
IC203	TC9237N
IC204 AUDIO IC	LA9410
IC205 OP-AMP IC	NJM4580L
IC351	PA0034A
IC401 VIDEO IC	PA5013A
IC402 CDD DELAY LINE	PM0001
IC403 IC	CXL1009P
IC404	PA0017
IC405 CHARACTER GENE IC	PD0070
IC601 TBC IC	PM3002
IC602, 603 IC	BA15218N
IC801 PRE AMP IC	CXA1081S
IC803 FTS IC	PM3003
IC804 POWER OP AMP	LA6510L
Q155	DTC124EK
Q201 CHIP TRANSISTOR	2SC2412K
Q202 DIGITAL TRANSISTOR	DTA124EK
Q204, 205 TRANSISTOR	2SD2144S
Q206	DTC124EK
Q207 DIGITAL TRANSISTOR	DTA124EK
Q208	DTC124EK
Q351 TRANSISTOR	2SC1740S
Q352 CHIP TRANSISTOR	2SC2412K
Q405 CHIP TRANSISTOR	2SC2412K
Q431 TRANSISTOR	2SC1740S
Q432 CHIP TRANSISTOR	2SC2412K
Q456 CHIP TRANSISTOR	2SC2412K
Q457 CHIP TRANSISTOR	2SA1037K
Q496 CHIP TRANSISTOR	2SA1037K

Mark No.	Description	Part No.
Q497-500	CHIP TRANSISTOR	2SC2412K
Q511	CHIP TRANSISTOR	2SA1037K
Q541	CHIP TRANSISTOR	2SC2412K
Q581	CHIP TRANSISTOR	2SA1037K
Q582, 583	TRANSISTOR	2SC1740S
Q601		FMW2
Q602	TRANSISTOR	2SC1740S
Q603	TRANSISTOR	2SA933S
Q604	TRANSISTOR	2SC1740S
Q605	TRANSISTOR	2SA933S
Q606		DTC124EK
Q607	CHIP TRANSISTOR	2SC2412K
Q608	DIGITAL TRANSISTOR	DTA124EK
Q610	CHIP TRANSISTOR	2SC2412K
Q802	CHIP TRANSISTOR	2SA1037K
Q803-805	CHIP TRANSISTOR	2SC2412K
Q807	CHIP TRANSISTOR	2SC2412K
Q810	CHIP TRANSISTOR	2SC2412K
Q811		DTC124EK
Q812	CHIP TRANSISTOR	2SA1037K
Q814	CHIP TRANSISTOR	2SC2412K
Q822	TRANSISTOR	2SD1858X
Q823		DTC124EK
Q824	DIGITAL TRANSISTOR	DTA124EK
Q825	CHIP TRANSISTOR	2SC2412K
Q826	DIGITAL TRANSISTOR	DTA124EK
Q827, 828		DTC124EK
Q829, 830	DIGITAL TRANSISTOR	DTA124EK
Q831	CHIP TRANSISTOR	2SC2412K
Q832		DTC124EK
D102	DIODE	1SS254
D104	DIODE	1SS254
D201	VARI-CAP	FC54M
D202	ZENER DIODE	04AZ10-Y
D471	DIODE	1SS254
D601-604	DIODE	1SS254
D607, 608	DIODE	1SS254
D609		DA204K
D802, 803	ZENER DIODE	04AZ2.0-X
D804-807	DIODE	1SS254
	<b>SWITCHES</b>	
	S201 SLIDE SWITCH	VSH1007
	<b>COILS/TRANSFORMERS</b>	
L101	AXIAL INDUCTOR	LAU470J
L202-204	AXIAL INDUCTOR	LAU2R2M
L227	AXIAL INDUCTOR	LAU2R2M
L351, 352	AXIAL INDUCTOR	LAU560J
L353	AXIAL INDUCTOR	LAU270J
L411	AXIAL INDUCTOR	LAU820J
L412, 413	AXIAL INDUCTOR	LAU220J
L414, 415	AXIAL INDUCTOR	LAU120J
L416	RADIAL INDUCTOR	LFA330J
L431	AXIAL INDUCTOR	LAU470J

Mark No.	Description	Part No.
L432	AXIAL INDUCTOR	LAU560J
L433	AXIAL INDUCTOR	LAU270J
L456	RADIAL INDUCTOR	LRA221J
L457	AXIAL INDUCTOR	LAU101J
L458	RADIAL INDUCTOR	LRA221J
L459, 460	AXIAL INDUCTOR	LAU2R2M
L496	AXIAL INDUCTOR	LAU180J
L497	AXIAL INDUCTOR	LAU181J
L511	AXIAL INDUCTOR	LAU820J
L521	AXIAL INDUCTOR	LAU120J
L522	AXIAL INDUCTOR	LAU560J
L523	AXIAL INDUCTOR	LAU150J
L524	RADIAL INDUCTOR	LRA221J
L525	AXIAL INDUCTOR	LAU470J
L541	AXIAL INDUCTOR	LAU120J
L601, 602	AXIAL INDUCTOR	LAU101J
L603	AXIAL INDUCTOR	LAU470J
L801	AXIAL INDUCTOR	LAU151J
L802	AXIAL INDUCTOR	LAU181J
L803	AXIAL INDUCTOR	LAU151J
L804	AXIAL INDUCTOR	LAU100J
F352		VTF1048
F353		VTF1049
	<b>CAPACITORS</b>	
C101	ELECTR. CAPACITOR	CEAS101M10
C102	CERAMIC CAPACITOR	CKSQYF473Z25
C103	CHIP CAPACITOR	CKSQYF103Z50
C104, 105	CHIP CERAMIC C.	CCSQCH300J50
C106	CHIP CAPACITOR	CKSQYF103Z50
C122	CHIP CAPACITOR	CKSQYF103Z50
C201	CERAMIC CAPACITOR	CKSQYF473Z25
C202		CFTXA152J50
C203	ELECTR. CAPACITOR	CEAS221M6R3
C204	CERAMIC CAPACITOR	CKSQYF104Z25
C205	ELECTR. CAPACITOR	CEANPR47M50
C206	CHIP CAPACITOR	CKSQYF103Z50
C208	ELECTR. CAPACITOR	CEAS470M10
C209	CERAMIC CAPACITOR	CKSQYF104Z25
C210	CERAMIC CAPACITOR	CKSQYF473Z25
C211	ELECTR. CAPACITOR	CEAS470M10
C212	CERAMIC CAPACITOR	CKSQYF104Z25
C213	CHIP CAPACITOR	CKSQYF103Z50
C214	CHIP CAPACITOR	CCSQCH050C50
C225	ELECTR. CAPACITOR	CEANPR47M50
C226	FILM CAPACITOR	CFTNA223J50
C227	ELECTR. CAPACITOR	CEAS220M25
C228, 229	CERAMIC CAPACITOR	CKSQYF104Z25
C230	ELECTR. CAPACITOR	CEAS470M10
C231	CHIP CAPACITOR	CKSQYF103Z50
C232	CERAMIC CAPACITOR	CCSQCH151J50
C233	CHIP CAPACITOR	CKSQYF103Z50
C251	CERAMIC CAPACITOR	CKSQYF104Z25
C253	ELECTR. CAPACITOR	CEAS470M10
C254, 255	CERAMIC CAPACITOR	CKSQYF104Z25

Mark	No.	Description	Part No.	Mark	No.	Description	Part No.
	C258	ELECTR. CAPACITOR	CEAS470M10		C418	CHIP CAPACITOR	CKSQYF103Z50
	C259	CERAMIC CAPACITOR	CKSQYF104Z25		C421, 422	CERAMIC CAPACITOR	CCSQCH470J50
	C260, 261	FILM CAPACITOR	CFTNA104J50		C423, 424	CHIP CERAMIC C.	CCSQCH200J50
	C262, 263	ELECTR. CAPACITOR	CEAS470M10		C425, 426	CHIP CAPACITOR	CKSQYF103Z50
	C264	CHIP CAPACITOR	CCSQCH121J50		C427	CERAMIC CAPACITOR	CKSQYF104Z25
	C266, 267	CERAMIC CAPACITOR	CCSQCH470J50		C428	ELECTR. CAPACITOR	CEAS471M6R3
	C268	CHIP CAPACITOR	CCSQCH121J50		C429	CERAMIC CAPACITOR	CKSQYF104Z25
	C270, 271	CERAMIC CAPACITOR	CCSQCH470J50		C431, 432	CERAMIC CAPACITOR	CKSQYF473Z25
	C272-277	ELECTR. CAPACITOR	CEAS221M10		C433	CERAMIC CAPACITOR	CCSQCH390J50
	C279, 280	ELECTR. CAPACITOR	CEAS4R7M50		C434	ELECTR. CAPACITOR	CEAS101M10
	C281, 282	ELECTR. CAPACITOR	CEANP220M10		C435	CERAMIC CAPACITOR	CKSQYF104Z25
	C283-286	CERAMIC CAPACITOR	CCSQL331J50		C436	ELECTR. CAPACITOR	CEAS010M50
	C287, 288	ELECTR. CAPACITOR	CEAS470M16		C437	CERAMIC CAPACITOR	CCSQCH270J50
	C290-293	ELECTR. CAPACITOR	CEJA100M16		C438	CERAMIC CAPACITOR	CCSQCH120J50
	C351	CHIP CAPACITOR	CCSQCH910J50		C439	CHIP CAPACITOR	CCSQCH330J50
	C352	CHIP CERAMIC C.	CCSQCH221J50		C441	CHIP CAPACITOR	CCSQCH100D50
	C353	CHIP CAPACITOR	CCSQCH910J50		C442	CERAMIC CAPACITOR	CKSQYF104Z25
	C354	CHIP CAPACITOR	CKSQYF103Z50		C443	ELECTR. CAPACITOR	CEAS4R7M50
	C355	ELECTR. CAPACITOR	CEAS100M50		C444	MYLOR FILM CAPACITOR	QOMA272J50
	C358, 359	CHIP CAPACITOR	CKSQYF103Z50		C445	ELECTR. CAPACITOR	CEAS101M10
	C360	ELECTR. CAPACITOR	CEAS221M6R3		C446	FILM CAPACITOR	CFTNA103J50
	C361	ELECTR. CAPACITOR	CEAS101M10		C447	CHIP CAPACITOR	CCSQCH330J50
	C362	CERAMIC CAPACITOR	CCSQL331J50		C448, 449	CERAMIC CAPACITOR	CKSQYF473Z25
	C363	CHIP CAPACITOR	CKSQYB682K50		C450	CHIP CAPACITOR	CCSQCH100D50
	C364	ELECTR. CAPACITOR	CEAS220M25		C451	CERAMIC CAPACITOR	CCSQCH270J50
	C365, 366	CERAMIC CAPACITOR	CKSQYB472K50		C452	CHIP CAPACITOR	CCSQCH100D50
	C367	FILM CAPACITOR	CFTNA393J50		C453-455	CHIP CAPACITOR	CCSQCH330J50
	C369	ELECTR. CAPACITOR	CEAS221M6R3		C456	CHIP CERAMIC C.	CCSQCH21J50
	C370	ELECTR. CAPACITOR	CEAS100M50		C457	ELECTR. CAPACITOR	CEAS101M10
	C372, 373	FILM CAPACITOR	CFTNA104J50		C458-460	CHIP CAPACITOR	CKSQYF113Z50
	C374	CERAMIC CAPACITOR	CCSQCH560J50		C461	CHIP CAPACITOR	CCSQCH111J50
	C375	CHIP CAPACITOR	CKSQYF103Z50		C462	CHIP CAPACITOR	CCSQCH330J50
	C376	ELECTR. CAPACITOR	CEAS221M6R3		C463	CHIP CERAMIC C.	CCSQCH21J50
	C377	CHIP CAPACITOR	CKSQYF103Z50		C464, 465	ELECTR. CAPACITOR	CEAS470M10
	C378	ELECTR. CAPACITOR	CEAS221M6R3		C466	CERAMIC CAPACITOR	CKSQYF473Z25
	C379	ELECTR. CAPACITOR	CEAS101M10		C467	CERAMIC CAPACITOR	CGCYX473K25
	C380	CHIP CERAMIC C.	CCSQCH271J50		C471	ELECTR. CAPACITOR	CEANP01M50
	C381	CERAMIC CAPACITOR	CCSQCH560J50		C472	ELECTR. CAPACITOR	CEAS4R7M50
	C382	CHIP CAPACITOR	CKSQYB682K50		C473	CERAMIC CAPACITOR	CKSQYF473Z25
	C383	ELECTR. CAPACITOR	CEAS220M25		C474	AUDIO FILM CAPACITOR	CFTXA22J50
	C384, 385	CERAMIC CAPACITOR	CKSQYB472K50		C475, 476	ELECTR. CAPACITOR	CEAS4R7M50
	C387	FILM CAPACITOR	CFTNA393J50		C477, 478	CERAMIC CAPACITOR	CKSQYF473Z25
	C388	ELECTR. CAPACITOR	CEASR47M50		C479, 480	CERAMIC CAPACITOR	CKSQYF114Z25
	C395	ELECTR. CAPACITOR	CEAS220M25		C481, 482	ELECTR. CAPACITOR	CEAS101M10
	C401, 402	ELECTR. CAPACITOR	CEAS101M10		C483	CERAMIC CAPACITOR	CKSQYF473Z25
	C403	CERAMIC CAPACITOR	CGCYX473K25		C484	ELECTR. CAPACITOR	CEAS470M10
	C404	CERAMIC CAPACITOR	CKSQYF104Z25		C485	CHIP CERAMIC C.	CCSQCH210J50
	C405, 406	ELECTR. CAPACITOR	CEAS470M10		C486	CHIP CAPACITOR	CKSQYF113Z50
	C407, 408	CERAMIC CAPACITOR	CKSQYF473Z25		C487, 488	CERAMIC CAPACITOR	CKSQYF473Z25
	C411, 412	CERAMIC CAPACITOR	CCSQCH470J50		C489, 490	ELECTR. CAPACITOR	CEAS470M10
	C413	CERAMIC CAPACITOR	CCSQCH151J50		C496	CERAMIC CAPACITOR	CCSQCH330J50
	C414	CHIP CERAMIC C.	CCSQCH221J50		C497	CHIP CAPACITOR	CCSQCH100D50
	C415	CHIP CAPACITOR	CCSQCH100D50		C498	CERAMIC CAPACITOR	CCSQCH330J50
	C416	CHIP CAPACITOR	CCSQCH330J50		C499	ELECTR. CAPACITOR	CEAS470M10
	C417	CHIP CAPACITOR	CCSQCH050C50		C500	CHIP CAPACITOR	CCSQCH100D50

Mark	No.	Description	Part No.	Mark	No.	Description	Part No.
C501, 502		ELECTR. CAPACITOR	CEAS470M10	C612		ELECTR. CAPACITOR	CEAS220M25
C503		CERAMIC CAPACITOR	CKSQYF104Z25	C613		MYLOR FILM CAPACITOR	CQMA332J50
C504		CERAMIC CAPACITOR	CKSQYF473Z25	C614		FILM CAPACITOR	CFTNA103J50
C505, 506		CERAMIC CAPACITOR	CKSQYF104Z25	C615		FILM CAPACITOR	CFTNA104J50
C507		CERAMIC CAPACITOR	CKSQYF473Z25	C616		ELECTR. CAPACITOR	CEANP2R2M50
C508		CERAMIC CAPACITOR	CKSQYF104Z25	C617		FILM CAPACITOR	CFTNA223J50
C509		CERAMIC CAPACITOR	CCSQCH151J50	C618		ELECTR. CAPACITOR	CEANP220M10
C510		CERAMIC CAPACITOR	CCSQCH270J50	C619		MYLOR FILM CAPACITOR	CQMA332J50
C511		CERAMIC CAPACITOR	CKSQYF104Z25	C620		MYLOR FILM CAPACITOR	CQMA222J50
C512		ELECTR. CAPACITOR	CEAS470M10	C621		ELECTR. CAPACITOR	CEAS4R7M50
C513		CERAMIC CAPACITOR	CKSQYF104Z25	C622		ELECTR. CAPACITOR	CEAS470M10
C514		FILM CAPACITOR	CFTNA104J50	C623		CERAMIC CAPACITOR	CKSQYF473Z25
C515		FILM CAPACITOR	CFTNA683J50	C624-627		CHIP CAPACITOR	CCSQCH180J50
C516		CHIP CERAMIC C.	CCSQCH220J50	C628		CHIP CAPACITOR	CKSQYF103Z50
C517		FILM CAPACITOR	CFTNA683J50	C629		CHIP CAPACITOR	CCSQCH180J50
C518		ELECTR. CAPACITOR	CEAS010M50	C630		CHIP CAPACITOR	CKSQYF103Z50
C521		ELECTR. CAPACITOR	CEAS470M10	C631		CERAMIC CAPACITOR	CCSQL331J50
C522		ELECTR. CAPACITOR	CEAS100M50	C641, 642		ELECTR. CAPACITOR	CEAS470M10
C523		CHIP CAPACITOR	CKSQYB102K50	C643-646		CHIP CAPACITOR	CKSQYF103Z50
C524		CERAMIC CAPACITOR	CCSQCH390J50	C650-653		CHIP CAPACITOR	CKSQYF103Z50
C525		ELECTR. CAPACITOR	CEAS471M6R3	C654		CERAMIC CAPACITOR	CCSQCH820J50
C526		CERAMIC CAPACITOR	CKSQYF104Z25	C655		CHIP CAPACITOR	CCSQCH180J50
C527		CERAMIC CAPACITOR	CKSQYF473Z25	C656, 657		MYLOR FILM CAPACITOR	CQMA272J50
C528		CERAMIC CAPACITOR	CCSQCH470J50	C658		CHIP CAPACITOR	CCSQCH101J50
C529		CERAMIC CAPACITOR	CCSQCH151J50	C659		CHIP CAPACITOR	CCSQCH180J50
C530		FILM CAPACITOR	CFTNA184J50	C803		CHIP CAPACITOR	CKSQYF103Z50
C531		CERAMIC CAPACITOR	CKSQYF104Z25	C804		CHIP CAPACITOR	CCSQCH680J50
C532		CERAMIC CAPACITOR	CKSQYF473Z25	C805		CHIP CAPACITOR	CKSQYF103Z50
C533		ELECTR. CAPACITOR	CEAS470M10	C807		ELECTR. CAPACITOR	CEANP010M50
C534		CERAMIC CAPACITOR	CKSQYF473Z25	C808		ELECTR. CAPACITOR	CEAL010M50
C535		CHIP CAPACITOR	CKSQYF103Z50	C809		CHIP CAPACITOR	CCSQCH680J50
C536		CERAMIC CAPACITOR	CCSQCH470J50	C810, 811		CHIP CAPACITOR	CCSQCH101J50
C537		CHIP CAPACITOR	CCSQCH100D50	C812		CERAMIC CAPACITOR	CCSQCH270J50
C538		CERAMIC CAPACITOR	CGCYX473K25	C813		CHIP CAPACITOR	CCSQCH680J50
C541		CERAMIC CAPACITOR	CKSQYF104Z25	C814		ELECTR. CAPACITOR	CEAL010M50
C542		ELECTR. CAPACITOR	CEAS470M10	C815		CERAMIC CAPACITOR	CCSQCH270J50
C543		CERAMIC CAPACITOR	CKSQYF104Z25	C816		ELECTR. CAPACITOR	CEAL010M50
C544		CERAMIC CAPACITOR	CKSQYF473Z25	C817		CHIP CAPACITOR	CCSQCH050C50
C545		CHIP CAPACITOR	CCSQCH680J50	C818		CHIP CAPACITOR	CCSQL471J50
C546		CERAMIC CAPACITOR	CCSQCH470J50	C819		CHIP CAPACITOR	CCSQL561J50
C547, 548		CERAMIC CAPACITOR	CKSQYF473Z25	C820, 821		CERAMIC CAPACITOR	CKSQYF473Z25
C565, 566		ELECTR. CAPACITOR	CEAS101M10	C822		CHIP CAPACITOR	CCSQCH101J50
C567		CERAMIC CAPACITOR	CKSQYF473Z25	C823		ELECTR. CAPACITOR	CEAS220M25
C581		CERAMIC CAPACITOR	CKSQYF473Z25	C824		FILM CAPACITOR	CFTNA103J50
C582, 583		ELECTR. CAPACITOR	CEAS470M10	C825		AUDIO FILM CAPACITOR	CFTXA682J50
C584, 585		CERAMIC CAPACITOR	CKSQYF104Z25	C827		FILM CAPACITOR	CFTNA333J50
C586		CHIP CAPACITOR	CCSQCH101J50	C841		ELECTR. CAPACITOR	CEAS220M25
C601		ELECTR. CAPACITOR	CEAS221M6R3	C842		ELECTR. CAPACITOR	CEANP100M16
C602		CERAMIC CAPACITOR	CKSQYF473Z25	C843		FILM CAPACITOR	CFTNA223J50
C603		CHIP CAPACITOR	CCSQL471J50	C844		CERAMIC CAPACITOR	CCSQL331J50
C604		AUDIO FILM CAPACITOR	CFTXA224J50	C845		ELECTR. CAPACITOR	CEANP010M50
C605-607			CFTXA102J50	C846		CERAMIC CAPACITOR	CCSQL331J50
C608			CFTXA152J50	C847		FILM CAPACITOR	CFTNA683J50
C610		FILM CAPACITOR	CFTNA563J50	C848		FILM CAPACITOR	CFTNA473J50
C611		MYLOR FILM CAPACITOR	CQMA272J50	C849		FILM CAPACITOR	CFTNA103J50

Mark	No.	Description	Part No.	Mark	No.	Description	Part No.
C850		ELECTR. CAPACITOR	CEANP2R2M50	R251, 252		CHIP RESISTOR	RS1/10S□□□J
C851		CERAMIC CAPACITOR	CKSQYF104Z25	R253, 254		CARBONFILM RESISTOR	RD1/6PM□□□J
C853		MYLOR FILM CAPACITOR	CQMA332J50	R256		CHIP RESISTOR	RS1/10S□□□J
C854		CERAMIC CAPACITOR	CKSQYB821K50	R256-260		CHIP RESISTOR	RS1/10S□□□J
C855		ELECTR. CAPACITOR	CEAS100M50	R261, 262		CARBONFILM RESISTOR	RD1/6PM□□□J
C856		CHIP CAPACITOR	CKSQYF103Z50	R264		CHIP RESISTOR	RS1/10S□□□J
C857		ELECTR. CAPACITOR	CEAS470M10	R266		CHIP RESISTOR	RS1/10S□□□J
C858		CHIP CAPACITOR	CKSQYF103Z50	R267, 268		CARBONFILM RESISTOR	RD1/6PM□□□J
C859		ELECTR. CAPACITOR	CEAS470M10	R269-288		CHIP RESISTOR	RS1/10S□□□J
C860		CHIP CAPACITOR	CKSQYF103Z50	R289, 290		CARBONFILM RESISTOR	RD1/6PM□□□J
C861		FILM CAPACITOR	CFTNA103J50	R294-297		CARBONFILM RESISTOR	RD1/6PM□□□J
C862		ELECTR. CAPACITOR	CEAS100M50	R301		CHIP RESISTOR	RS1/10S□□□J
C863		ELECTR. CAPACITOR	CEANP100M16	R309			RS1/10S□□□J
C864		ELECTR. CAPACITOR	CEAS100M50	R351-356		CHIP RESISTOR	RS1/10S□□□J
C865		FILM CAPACITOR	CFTNA103J50	R357		CARBONFILM RESISTOR	RD1/6PM□□□J
C866		ELECTR. CAPACITOR	CEANPR47M50	R358		CHIP RESISTOR	RS1/10S□□□J
C867		FILM CAPACITOR	CFTNA333J50	R360-380		CHIP RESISTOR	RS1/10S□□□J
C868		FILM CAPACITOR	CFTNA683J50	R381		CARBONFILM RESISTOR	RD1/6PM□□□J
C869		FILM CAPACITOR	CFTNA473J50	R385		CHIP RESISTOR	RS1/10S□□□J
C870		ELECTR. CAPACITOR	CEANP220M10	R406, 407		CHIP RESISTOR	RS1/10S□□□J
C871		CHIP CERAMIC C.	CCSQCH221J50	R411-413		CHIP RESISTOR	RS1/10S□□□J
C873		FILM CAPACITOR	CFTNA103J50	R415, 416		METALFILM RESISTOR	RN1/6PQ□□□□F
C874		FILM CAPACITOR	CFTNA104J50	R431		CARBONFILM RESISTOR	RD1/6PM□□□J
C875		CHIP CAPACITOR	CKSQYB102K50	R432		CHIP RESISTOR	RS1/10S□□□J
C876, 877		ELECTR. CAPACITOR	CEAS220M25	R434		METALFILM RESISTOR	RN1/6PQ□□□□F
C878-880		CERAMIC CAPACITOR	CKSQYF473Z25	R435-437		CHIP RESISTOR	RS1/10S□□□J
C881, 882		CERAMIC CAPACITOR	CKSQYF104Z25	R438		METALFILM RESISTOR	RN1/6PQ□□□□F
C883		AUDIO FILM CAPACITOR	CFTXA124J50	R439-441		CHIP RESISTOR	RS1/10S□□□J
C884		CHIP CAPACITOR	CCSQCH330J50	R442		CARBONFILM RESISTOR	RD1/6PM□□□J
C899		CHIP CAPACITOR	CCSQCH050C50	R443		CHIP RESISTOR	RS1/10S□□□J
C929		CHIP CAPACITOR	CCSQCH330J50	R456-459		CHIP RESISTOR	RS1/10S□□□J
C931, 932		ELECTR. CAPACITOR	CEAL220M35	R471-476		CHIP RESISTOR	RS1/10S□□□J
C933-935		CHIP CAPACITOR	CKSQYF103Z50	R496-504		CHIP RESISTOR	RS1/10S□□□J
				R506-508		CHIP RESISTOR	RS1/10S□□□J
				R511		METALFILM RESISTOR	RN1/6PQ□□□□F
				R512-519		CHIP RESISTOR	RS1/10S□□□J
				R521-532		CHIP RESISTOR	RS1/10S□□□J
				R534		CHIP RESISTOR	RS1/10S□□□J
				R542, 543		CHIP RESISTOR	RS1/10S□□□J
				R544		CARBONFILM RESISTOR	RD1/6PM□□□J
				R581-584		CHIP RESISTOR	RS1/10S□□□J
				R585		CARBONFILM RESISTOR	RD1/6PM□□□J
				R586, 587			RS1/10S□□□J
				R589		CARBONFILM RESISTOR	RD1/6PM□□□J
				R601-612			RS1/10S□□□J
				R615-623		CHIP RESISTOR	RS1/10S□□□J
				R625-646		CHIP RESISTOR	RS1/10S□□□J
				R647		CARBONFILM RESISTOR	RD1/6PM□□□J
				R648-654		CHIP RESISTOR	RS1/10S□□□J
				R661, 662		CHIP RESISTOR	RS1/10S□□□J
				R665-678		CARBONFILM RESISTOR	RD1/6PM□□□J
				R680-683		METALFILM RESISTOR	RN1/6PQ□□□□F
				R684-693		CHIP RESISTOR	RS1/10S□□□J
				R700, 701		CHIP RESISTOR	RS1/10S□□□J
				R713			RS1/10S□□□J
<b>RESISTORS</b>							
		R101-104	CHIP RESISTOR	RS1/10S□□□J			
		R105	CARBONFILM RESISTOR	RD1/6PM□□□J			
		R106-108	CHIP RESISTOR	RS1/10S□□□J			
		R110-115	CHIP RESISTOR	RS1/10S□□□J			
		R117-122	CHIP RESISTOR	RS1/10S□□□J			
		R123	CARBONFILM RESISTOR	RD1/6PM□□□J			
		R124	CHIP RESISTOR	RS1/10S□□□J			
		R130	CHIP RESISTOR	RS1/10S□□□J			
		R132	CHIP RESISTOR	RS1/10S□□□J			
		R140-142	CHIP RESISTOR	RS1/10S□□□J			
		R150, 151	CHIP RESISTOR	RS1/10S□□□J			
		R180	CHIP RESISTOR	RS1/10S□□□J			
		R183, 184	CHIP RESISTOR	RS1/10S□□□J			
		R201-205	CHIP RESISTOR	RS1/10S□□□J			
		R207-210	CHIP RESISTOR	RS1/10S□□□J			
		R218	CHIP RESISTOR	RS1/10S□□□J			
		R222-233	CHIP RESISTOR	RS1/10S□□□J			
		R235	CHIP RESISTOR	RS1/10S□□□J			
		R238	CHIP RESISTOR	RS1/10S□□□J			
		R240, 241	CHIP RESISTOR	RS1/10S□□□J			



Mark No.	Description	Part No.
R803-806	CHIP RESISTOR	RS1/10S□□□J
R808-812	CHIP RESISTOR	RS1/10S□□□J
R813	CARBONFILM RESISTOR	RD1/6PM□□□J
R814, 815	CHIP RESISTOR	RS1/10S□□□J
R818-829	CHIP RESISTOR	RS1/10S□□□J
R832, 833	CARBONFILM RESISTOR	RD1/6PM□□□J
R834-848	CHIP RESISTOR	RS1/10S□□□J
R856	CHIP RESISTOR	RS1/10S□□□J
R859, 860	CHIP RESISTOR	RS1/10S□□□J
R871	CHIP RESISTOR	RS1/10S□□□J
R873	CARBONFILM RESISTOR	RD1/6PM□□□J
R875, 876	CHIP RESISTOR	RS1/10S□□□J
R878-886	CHIP RESISTOR	RS1/10S□□□J
R888-909	CHIP RESISTOR	RS1/10S□□□J
R910-913	CARBONFILM RESISTOR	RD1/6PM□□□J
R914-917	CHIP RESISTOR	RS1/10S□□□J
R918	CARBONFILM RESISTOR	RD1/6PM□□□J
R919-922	CHIP RESISTOR	RS1/10S□□□J
R923	CARBONFILM RESISTOR	RD1/6PM□□□J
R925-932	CHIP RESISTOR	RS1/10S□□□J
R934	CARBONFILM RESISTOR	RD1/6PM□□□J
R935-938	CHIP RESISTOR	RS1/10S□□□J
R940, 941		RS1/10S□□□J
R942	CARBONFILM RESISTOR	RD1/6PM□□□J
R943-945		RS1/10S□□□J
R946	CARBONFILM RESISTOR	RD1/6PM□□□J
R947-950		RS1/10S□□□J
R951	CARBONFILM RESISTOR	RD1/6PM□□□J
R953	CHIP RESISTOR	RS1/10S□□□J
R955, 956	CHIP RESISTOR	RS1/10S□□□J
R984, 985	CARBONFILM RESISTOR	RD1/6PM□□□J
R991	CHIP RESISTOR	RS1/10S□□□J
R993-995	CHIP RESISTOR	RS1/10S□□□J
VR441	SEMI-FIXED RESISTOR	VRTB6VS103
VR481	SEMI-FIXED RESISTOR	VRTB6VS103
VR482 VR		VRTB6VS472
VR521 VR		VRTB6VS472
VR601 VR		VRTB6VS222
VR602, 603	SEMI-FIXED RESISTOR	VRTB6VS103
VR604-606 VR		VRTB6VS472
VR607 VR		VRTB6VS473
VR608	VARIABLE RESISTOR	VRTB6VS333
VR609 VR		VRTB6VS472
<b>OTHERS</b>		
CN103		VKN1137
CN121		B5P-SHF-1AA
JA2	JACK	VKN-183
VC901	VARIABLE CAPACITOR	VCM-008
X101	CERAMIC RESONATOR	VSS1040
X201	CRYSTAL RESONATOR	VSS1049
X601	CRYSTAL RESONATOR	VSS1026
JA4	JACK	VKB1035

Mark No.	Description	Part No.
<b>FG ASSEMBLY</b>		
<b>OTHERS</b>		
D		GP1S51
<b>SW ASSEMBLY</b>		
<b>SWITCHES</b>		
S101-103	PUSH SWITCH	DSG1015
<b>⊙ KRAB ASSEMBLY (VWM1221)</b>		
KRAB assembly is composed of the EXTB and KFCB assemblies.		
<b>EXTB ASSEMBLY</b>		
<b>CAPACITORS</b>		
C301, 302	CERAMIC CAPACITOR	CKPUYB331K50
<b>OTHERS</b>		
JA301	JACK	VKB1022
<b>KFCB ASSEMBLY</b>		
<b>SEMICONDUCTORS</b>		
IC1	REGULATOR IC	NJM78M08FA
IC2	REGULATOR IC	NJM79M08FA
IC3	OP-AMP IC	RC4558D
IC4	LOGIC IC	BU4053B
IC5-8	OP-AMP IC	RC4558D
IC9		YSS205
IC10		HM65256BLP-10
IC11		UPD6376CX
IC12-14	OP-AMP IC	NJM4580D
IC15	LOGIC IC	MC14066BCP
IC16, 17	OP-AMP IC	RC4558D
IC18	HEX INVERTER	TC74HCU04AF
Q1	TRANSISTOR	DTC124ES
Q2, 3	TRANSISTOR	2SD2144S
Q4	TRANSISTOR	DTA124ES
Q5	TRANSISTOR	DTC124ES
Q6, 7	TRANSISTOR	DTA124ES
Q8	TRANSISTOR	2SD2144S
Q9	TRANSISTOR	DTC124ES
D1, 2	DIODE	ISS254
D4	ZENER DIODE	04A25. 1-X
D5, 6	DIODE	ISS254
D7, 8	ZENER DIODE	MTZJ5. 6B
D9	DIODE	ISS254
<b>COILS/TRANSFORMERS</b>		
L1	RADIAL INDUCTOR	LFA100K
L2, 3	AXIAL INDUCTOR	LAU100J
<b>CAPACITORS</b>		
C1, 2	ELECTR. CAPACITOR	CEAS221M25
C3, 4	ELECTR. CAPACITOR	CEJA470M16
C5	ELECTR. CAPACITOR	CEJA101M6R3
C6	CERAMIC CAPACITOR	CKPUYY103N16
C7, 8	ELECTR. CAPACITOR	CEJANP010M50

Mark	No.	Description	Part No.	Mark	No.	Description	Part No.
	C9-12	CERAMIC CAPACITOR	CKPUYY103N16		C97, 98	CERAMIC CAPACITOR	CKPUYY103N16
	C13	FILM CAPACITOR	CFTNA104J50		C99, 100	ELECTR. CAPACITOR	CEJA100M16
	C14	MYLOR FILM CAPACITOR	CQMA472J50		C101	CERAMIC CAPACITOR	CKPUYB121K50
	C16	MYLOR FILM CAPACITOR	CQMA183J50		C102	MYLOR FILM CAPACITOR	CQMA822J50
	C17	FILM CAPACITOR	CFTNA104J50		C103, 104	CERAMIC CAPACITOR	CKPUYY103N16
	C18	CERAMIC CAPACITOR	CKCYB821K50		C105, 106	ELECTR. CAPACITOR	CEJA470M6R3
	C19, 20	CERAMIC CAPACITOR	CKPUYY103N16		C107, 108	ELECTR. CAPACITOR	CEJANP100M10
	C21	ELECTR. CAPACITOR	CEJA4R7M35		C109, 110	ELECTR. CAPACITOR	CEJA100M16
	C22	MYLOR FILM CAPACITOR	CQMA223J50		C111	CERAMIC CAPACITOR	CKPUYY103N16
	C23	MYLOR FILM CAPACITOR	CQMA393J50		C112-114	ELECTR. CAPACITOR	CEJANP100M10
	C24	MYLOR FILM CAPACITOR	CQMA242J50		C116	CERAMIC CAPACITOR	CKPUYY103N16
	C25	MYLOR FILM CAPACITOR	CQMA333J50	<b>RESISTORS</b>			
	C26	MYLOR FILM CAPACITOR	CQMA122J50		R3-12	CARBONFILM RESISTOR	RD1/6PM□□□J
	C27	FILM CAPACITOR	CFTNA823J50		R15-48	CARBONFILM RESISTOR	RD1/6PM□□□J
	C28	CERAMIC CAPACITOR	CKPUYB331K50		R51-79	CARBONFILM RESISTOR	RD1/6PM□□□J
	C29	ELECTR. CAPACITOR	CEJA4R7M35		R99-116	CARBONFILM RESISTOR	RD1/6PM□□□J
	C30	MYLOR FILM CAPACITOR	CQMA223J50		R117, 118	FUSE RESISTOR	DCN1002
	C31	MYLOR FILM CAPACITOR	CQMA393J50		R120, 121	CARBONFILM RESISTOR	RD1/6PM□□□J
	C32	MYLOR FILM CAPACITOR	CQMA242J50	<b>◎ FRPB ASSEMBLY (VWM1225)</b>			
	C33, 34	CERAMIC CAPACITOR	CKPUYY103N16	FRPB assembly is composed of the FLKB, IRKB, KCKB, CNCB, DIKB, MIJB and HEPB assemblies.			
	C35	MYLOR FILM CAPACITOR	CQMA333J50	<b>FLKB ASSEMBLY</b>			
	C36	MYLOR FILM CAPACITOR	CQMA122J50	<b>SEMICONDUCTORS</b>			
	C37, 38	CERAMIC CAPACITOR	CKPUYY103N16		IC101	IC	TC35097AP
	C39	FILM CAPACITOR	CFTNA823J50		IC102	MODE CONTROL MCU	PDB039A
	C40	CERAMIC CAPACITOR	CKPUYB331K50		IC103	RESET IC	PST529D
	C41, 42	CERAMIC CAPACITOR	CKPUYY103N16		IC104	I/O EXPANDER IC	BU2040F
	C43	ELECTR. CAPACITOR	CEJA4R7M35		IC105	OP-AMP IC	RC4558D
	C44, 45	ELECTR. CAPACITOR	CEJA101M6R3		Q101	TRANSISTOR	DTC114ES
	C46-48	MYLOR FILM CAPACITOR	CQMA332J50		Q102	TRANSISTOR	DTA144ES
	C49	ELECTR. CAPACITOR	CEJA101M6R3		D101-111	DIODE	ISS252
	C50-52	CERAMIC CAPACITOR	CKPUYY103N16		D112-121	LED	VEL1017
	C56	CERAMIC CAPACITOR	CKPUYY103N16		D126	DIODE	1SS252
	C57	ELECTR. CAPACITOR	CEJA101M6R3	<b>SWITCHES</b>			
	C58	FILM CAPACITOR	CFTNA104J50		S101-111	SWITCH	RSG1030
	C60	ELECTR. CAPACITOR	CEJA4R7M35		S112	DOOR SWITCH	VSK1015
	C61	MYLOR FILM CAPACITOR	CQMA183J50		S113	SLIDE SWITCH	VSH1005
	C62	MYLOR FILM CAPACITOR	CQMA333J50	<b>CAPACITORS</b>			
	C63	MYLOR FILM CAPACITOR	CQMA222J50		C101	ELECTR. CAPACITOR	CEJA100M50
	C64	MYLOR FILM CAPACITOR	CQMA273J50		C102	CERAMIC CAPACITOR	CKPUYY103N16
	C65	MYLOR FILM CAPACITOR	CQMA122J50		C103	ELECTR. CAPACITOR	CEJA101M6R3
	C66	FILM CAPACITOR	CFTNA823J50		C104	CERAMIC CAPACITOR	CKPUYF223Z25
	C67	AXIAL CAPACITOR	CKPUYB271K50		C105	ELECTR. CAPACITOR	CEJA100M16
	C71	ELECTR. CAPACITOR	CEJA4R7M35		C106	CERAMIC CAPACITOR	CKPUYB102K50
	C72	MYLOR FILM CAPACITOR	CQMA183J50		C107, 108	ELECTR. CAPACITOR	CEJA220M6R3
	C73	MYLOR FILM CAPACITOR	CQMA333J50		C109	CERAMIC CAPACITOR	CKPUYY103N16
	C74	MYLOR FILM CAPACITOR	CQMA222J50		C110	ELECTR. CAPACITOR	CEJA470M6R3
	C75, 76	CERAMIC CAPACITOR	CKPUYY103N16		C111	CERAMIC CAPACITOR	CKPUYY103N16
	C77	MYLOR FILM CAPACITOR	CQMA273J50		C112	FILM CAPACITOR	CFTNA683J50
	C78	MYLOR FILM CAPACITOR	CQMA122J50		C113	CERAMIC CAPACITOR	CKPUYB151K50
	C79, 80	CERAMIC CAPACITOR	CKPUYY103N16		C114, 115	CERAMIC CAPACITOR	CKPUYY103N16
	C81	FILM CAPACITOR	CFTNA823J50		C116	AXIAL CAPACITOR	CKPUYB221K50
	C82	AXIAL CAPACITOR	CKPUYB271K50				
	C83-86	CERAMIC CAPACITOR	CKPUYY103N16				
	C87, 88	AXIAL CERAMIC C.	CCPUSL220J50				
	C89, 90	CERAMIC CAPACITOR	CKPUYY103N16				

Mark No.	Description	Part No.
<b>RESISTORS</b>		
R101-105	CARBONFILM RESISTOR	RD1/6PM□□□J
R108-110	CARBONFILM RESISTOR	RD1/6PM□□□J
R111	RESISTOR ARRAY (10K)	RA4T□□□J
R112-127	CARBONFILM RESISTOR	RD1/6PM□□□J
R129	CARBONFILM RESISTOR	RD1/6PM□□□J
R131-133	CARBONFILM RESISTOR	RD1/6PM□□□J
VR101, 102	ROTARY VR	VCS1028
VR103, 104	ROTARY VR	VCS1024
<b>OTHERS</b>		
CN103		VEB1159
CN104		BTMK07S-1S
V101	FL TUBE	BTMK09S-1S
X101	CERAMIC RESONATOR	VAW1024
		VSS1041
<b>IRKB ASSEMBLY</b>		
<b>SWITCHES</b>		
S401	SWITCH	RSG1030
<b>OTHERS</b>		
	REMOTE SENSOR	HC-177
<b>KCKB ASSEMBLY</b>		
<b>SWITCHES</b>		
S701-704	SWITCH	RSG1030
<b>CNCB ASSEMBLY</b>		
<b>RESISTORS</b>		
R801	RESISTOR ARRAY 100K	RA5T□□□J
R802	CARBONFILM RESISTOR	RD1/6PM□□□J
<b>DIKB ASSEMBLY</b>		
<b>SWITCHES</b>		
S301-320	SWITCH	RSG1030
<b>MIJB ASSEMBLY</b>		
<b>SEMICONDUCTORS</b>		
IC601		NJM2068D
<b>CAPACITORS</b>		
C601, 602	CERAMIC CAPACITOR	CKPUYF223Z25
C603	MYLOR FILM CAPACITOR	CQMA152J50
C604	ELECTR. CAPACITOR	CEJA2R2M50
C605	AXIAL CAPACITOR	CKPUYB681K50
C606, 607	CERAMIC CAPACITOR	CKPUYB102K50
C609	MYLOR FILM CAPACITOR	CQMA152J50
C610	ELECTR. CAPACITOR	CEJA2R2M50
C611	AXIAL CAPACITOR	CKPUYB681K50
<b>RESISTORS</b>		
R601-606	CARBONFILM RESISTOR	RD1/6PM□□□J
R608-611	CARBONFILM RESISTOR	RD1/6PM□□□J
<b>OTHERS</b>		
JA601	MIC JACK	VNE1102
		VKN1147

Mark No.	Description	Part No.
JA602	HEADPHONE JACK	RKN1006
JA603	MIC JACK	VKN1147
<b>HEPB ASSEMBLY</b>		
<b>CAPACITORS</b>		
C501, 502	AXIAL CAPACITOR	CKPUYB101K50
C503	CERAMIC CAPACITOR	CGCYX473K25
<b>RESISTORS</b>		
VR501	ROTARY VR	VCS1020
<b>OTHERS</b>		
JA501	JACK	VNE1102
		RKN1002
<b>⊙ DRVB ASSEMBLY (VWS1087)</b>		
<b>SEMICONDUCTORS</b>		
IC802		BA15218N
Q903		DTA124ES
Q819, 901		2SA933S
Q816, 818		2SB1185
Q902		2SC1740S
Q815, 817		2SD1762
Q821		2SK184
D833		MTZJ6. 2C
D834		04AZ10-Y
D801, 830-832		1SS254
<b>CAPACITORS</b>		
C935 (1F/5. 5V)		VCH1039
C846		CCPUSL470J50
C838		CEANP010M50
C840		CEAS010M50
C835, 836		CEAS101M25
C837		CKPUYB331K50
C839		CQMA102J50
<b>RESISTORS</b>		
ALL RESISTORS		RD1/6PM□□□J
<b>POWER SUPPLY BOARD ASSEMBLY (VWR1109)</b>		
<b>SEMICONDUCTORS</b>		
IC202		TH5P4
IC211, 212	IC PROTECTOR	ICP-N15
IC213, 214	IC PROTECTOR	ICP-N50
IC215	IC PROTECTOR	ICP-N38
Q201	TRANSISTOR	2SB1331
Q202		DTC114ES
D201-203	DIODE	S3LA20
D204	DIODE	ERB83-006
D205	DIODE	D1NL20
D206	ZENER DIODE	MTZ7. 5B
D207	ZENER DIODE	MTZ6. 2B
D209, 210	DIODE	D1NL20
D213-215	DIODE	D1NL20

<u>Mark</u>	<u>No.</u>	<u>Description</u>	<u>Part No.</u>	<u>Mark</u>	<u>No.</u>	<u>Description</u>	<u>Part No.</u>
<b>COILS/TRANSFORMERS</b>							
		L203 FILTER	VTL1008				
<b>CNNB ASSEMBLY</b>							
<b>SWITCHES</b>							
	S201		VSK1017				
	CN203		VKN1138				
<b>RESISTORS</b>							
		R101, 102 CARBONFILM RESISTOR	RD1/6PM□□□J				
<b>OTHERS</b>							
	CN204		VKN1139				
<b>HEAD ASSEMBLY</b>							
<b>SEMICONDUCTORS</b>							
		Q1 TRANSISTOR	2SC4081				
<b>CAPACITORS</b>							
		C4, 6 CERAMIC CAPACITOR	CKSQYF104Z25				
		C3 CHIP CAPACITOR	CKSQYF223Z50				
		C5 CAPACITOR	CKSYF105Z16				
<b>RESISTORS</b>							
		VR1 VARIABLE RESISTOR	VCP1025				

## 6. ADJUSTMENTS

### 6.1 JIGS AND INSTRUMENTS REQUIRED FOR ADJUSTMENT

- Small screwdriver (about 10cm long)
- Small Phillips screwdriver
- Phillips screwdriver
- Dual-trace oscilloscope (with delay)
- AF oscillator
- Frequency counter
- LD test disc (GGV1003)
- CD test disc (YEDS-7)
- Digital voltmeter
- Shorting clip
- L-shaped eccentric screwdriver (GGV-129)
- TV monitor
- Resistor (47kΩ , 10kΩ × 2)
- Low-pass filter (47kΩ +1 μF)

### 6.2 TEST MODE


The player has a test mode function which allows the servicer to check the player's status on the TV screen by executing the respective key operation.

Also, since the TRKG servo opens and closes easily, the test mode is especially useful for mechanical adjustments.

#### 6.2.1 TEST MODE INITIATION

[Procedure]

1. Remove the bonnet and disc tray.
2. Connect the TEST MODE (TP) to GND. (See Fig. 1)
3. Turn on the power switch.
4. Disconnect the TEST MODE (TP) from GND.

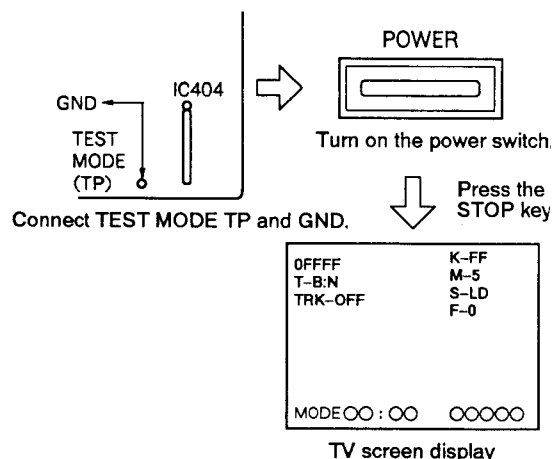



*Note: When using the remote control unit (GGF1067) for the test mode.*

- Press the **TEST** key after pressing the **ESC** key.

#### 6.2.2 TEST MODE CANCELLATION

Turn off the power switch.

**6.2.3 TV SCREEN AND FL DISPLAYS IN THE TEST MODE**

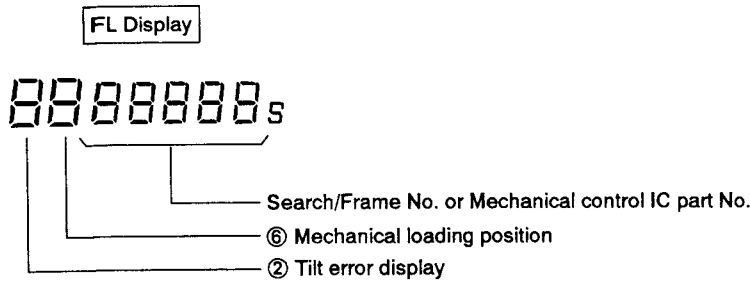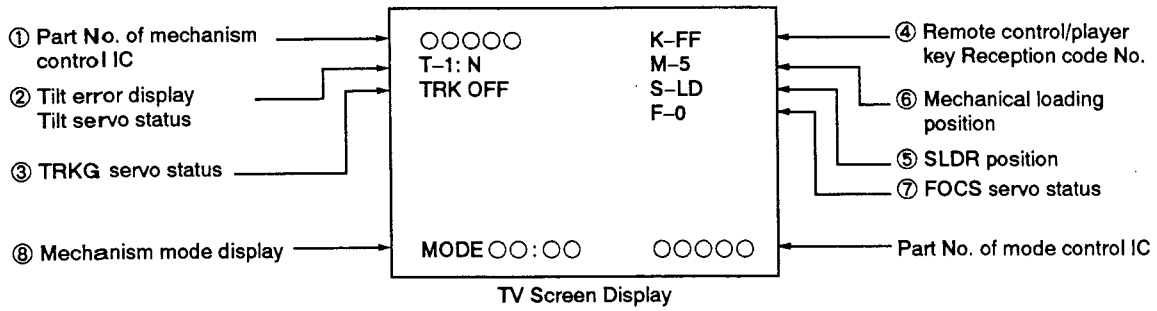


① The Mechanical Control IC Part No. will be Displayed.

Example: PD0081A1 → 00810  
 PD0081B1 → 0081B


④ Remote Control / Player Key Reception Code No.

TV screen display  
 K-○○  
 ↑ See table 1.

② Tilt Servo Status / Tilt Error Display

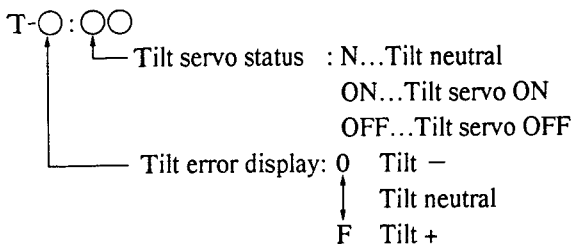

③ TRKG Servo Status

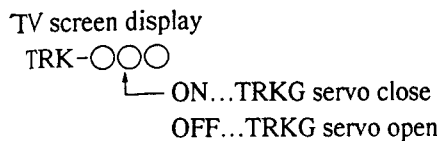

Code	Function	Code	Function	Code	Function	Code	Function
00	0	20	F JOG0	40	(CHAP / TRK)	60	
01	1	21	F JOG1	41	(FRAM / TIM)	61	
02	2	22	F JOG2	42	(SEARCH)	62	
⋮	⋮	⋮	⋮	⋮	⋮	⋮	
1C	POW ON/OFF	3C		5C			
1D	EDIT	3D		5D			
1E	AUDIO	3E		5E	RNDM (TEST)		
1F	+10	3F		5F	(ESC)		

Table 1. Example of Code

⑤ **SLDR Position**

TV screen display	FL display	Mode
S-○○○ └─┬ IN	—	CD inside SW ON
CD	CD	CD active area
CDV	CDV	CDV active area
LD	LD	LD active area
B IN	—	LD B inside SW ON

⑥ **Mechanical Loading Position**

TV screen display

- M-○  
└─┬ 0... Tray open  
1... Loading  
2... Standby  
3... Clamped  
5... Tilt minus  
7... Tilt plus  
8... Tilt limit  
9... B side clamped (two sides)

⑦ **Focus offset VR Status**

TV screen display


- F-○  
└─┬ 0... Normal state  
TRKG close : VR606(CT MAX)  
TRKG open : VR605(TE MAX)  
1... VR606 is activated when opening the TRKG.

⑧ As to the mode indication, refer to the CLD-2090 service guide (ARP2234).

6.2.4 KEY OPERATION IN THE TEST MODE

Function	Player Status	Key Operation	Remarks
Open Tray	STOP mode	▲	
Close Tray	Tray open	▲	
Stop	PLAY mode	■	
Play	Disc placement and tray closed.	▶	<ul style="list-style-type: none"> <li>Start play with the TRKG servo open.</li> <li>Raise up with tilt neutral.</li> <li>The disc type (LD/CD/CDV) is determined when playback starts at the SLDR position during start play.</li> </ul>
TRKG Servo Open/Close	PLAY mode	▶	<ul style="list-style-type: none"> <li>Each time the PLAY button (▶) is pressed, the TRKG servo will open or close alternately.</li> </ul>
Still	PLAY mode TRKG servo closed.	▣ (Remote control unit key)	<ul style="list-style-type: none"> <li>Each time the STILL button (▣) is pressed, the player will switch between the PLAY and STILL modes alternately.</li> </ul>
SLDR REV SCAN	PLAY mode	◀◀	<ul style="list-style-type: none"> <li>Press and hold down the key.</li> <li>With the TRKG servo open, the pickup can be damaged if the SLDR moves further inward than the lead-in area on the disc. Do not allow the SLDR to move further inward than the lead-in area.</li> </ul>
SLDR FWD SCAN	PLAY mode	▶▶	<ul style="list-style-type: none"> <li>Press and hold down the key.</li> <li>With the TRKG servo open, the pickup can be damaged if the SLDR moves further outward than the lead-in area on the disc. Do not allow the SLDR to move further outward than the lead-in area.</li> </ul>
TILT Neutral	POWER switch ON	* ¼ (KEY CONTROL key)	
TILT Servo ON	PLAY mode	* # (KEY CONTROL key)	
TILT Minus TILT Servo OFF	PLAY mode	◀◀	<ul style="list-style-type: none"> <li>Press and hold down the keys.</li> </ul>
TILT Plus TILT Servo OFF	PLAY mode	▶▶	<ul style="list-style-type: none"> <li>Press and hold down the keys.</li> </ul>
Screen Display ON / OFF	POWER switch ON	PGM key	
Frame search	PLAY mode	+10 key ↓ 0-9 key ↓ ▶	<ul style="list-style-type: none"> <li>In the PLAY mode, press the +10 key. (The player will standby for the frame No. entry.)</li> <li>Use the numeric keys(0—9) to enter the frame No.. Then press the player's PLAY key to search.</li> <li>After the search is completed, the player will return to the operation mode before the search was performed.</li> </ul>
Loading Motor Rotation Clockwise Counterclockwise	Tray open	▶▶ ◀◀	<ul style="list-style-type: none"> <li>FWD: Unloading</li> <li>REV: Loading</li> </ul>
Focus Offset (CT MAX) for Checking VR606	PLAY mode TRKG servo open	* 6 (KEY CONTROL key) (toggle)	<p>VR606 and VR605 : For check</p> <p>F-0 : Normal state - - - - - TRKG close : VR606 (CT BEST) TRKG open : VR605 (TE MAX)</p> <p>F-1 : VR606 is activated when opening the TRKG.</p>

\* Perform key operation by setting the KARAOKE/NORMAL/AUX INPUT selector switch, on the front panel, to the KARAOKE position.

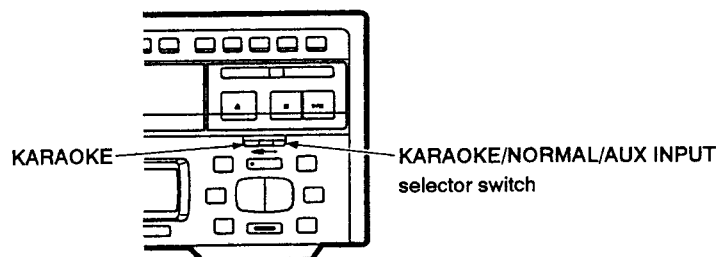




## 6.2.5 PLAYER OPERATION IN THE TEST MODE


Operate the player by selecting a test mode function with the keys on the player or on the remote control unit.

### • CD PLAYBACK

- ① Place the CD disc on the turn table.  
(Clamper is already lifted up.)

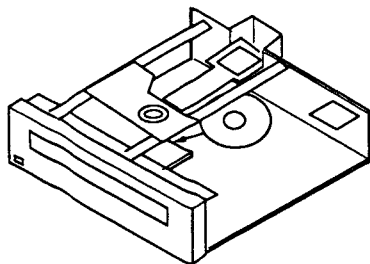

- ② Press the or keys to appear "S-CD" on the TV screen display.

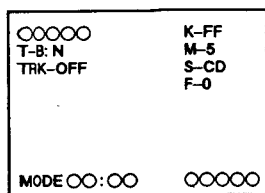


TV screen display


- ③ Clamp the disc by pressing the PLAY () key once. Then, press the PLAY () key twice, disc will be normal playbacked.

### • LD PLAYBACK

- ① Place the LD disc on the turn table.  
(Clamper is already lifted up.)

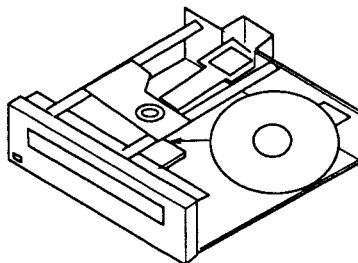

- ② Press the or keys to appear "S-LD" on the TV screen display.

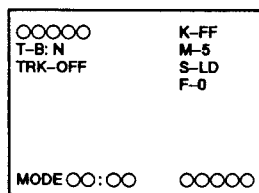

TV screen display

- ③ Clamp the disc by pressing the PLAY () key once. Then, press the PLAY () key twice, disc will be normal playbacked.

### 6.3 PREPARATIONS FOR ADJUSTMENT AND PRECAUTIONS

**1) When replacing the pickup assembly, adjust in the following way:**

**– Carriage assembly in forward state –**


1. Tilt servo gain adjustment
2. Coarse grating adjustment, tracking balance adjustment
3. Slider shaft horizontal
4. Pickup inclination adjustment
5. TRKG error best / crosstalk best adjustment
6. FOCS SUM level adjustment
7. Tilt sensor inclination/tilt balance adjustment
8. Spindle motor centering check
9. Spindle motor centering adjustment
10. Fine grating adjustment
11. RF gain adjustment
12. FOCS servo loop gain adjustment
13. TRKG servo loop gain adjustment

**– Carriage assembly in reverse state –**


14. Centering adjustment for side B play
15. Pickup tangential direction angle adjustment for side B play
16. Fine centering adjustment for side B play

*Note : The forward status of carriage assembly is when the carriage assembly is in the position to play side A of the disc. The reverse status is when it is in the position to play side B of the disc.*

Carriage assembly forward state

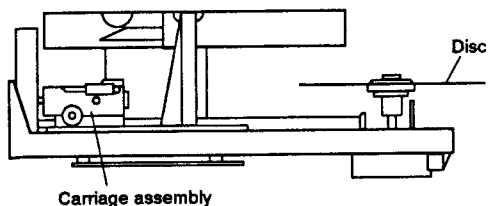

Carriage assembly reverse state

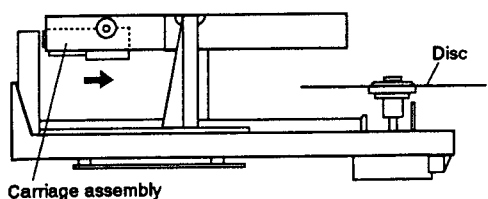


**2) Side B play**

Direct side B play is possible by pressing the SIDE B key of the front panel.

**3) Where to insert the screwdriver when adjusting the pickup assembly**

**– Carriage assembly in forward state –**

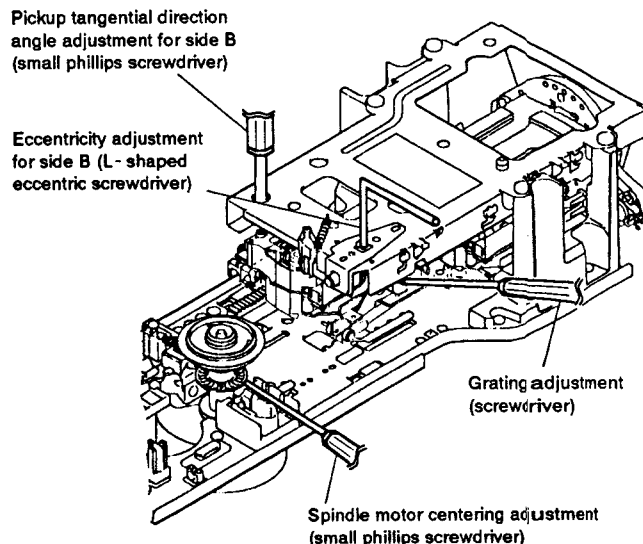

6.4 MAIN ASSEMBLY ADJUSTMENT SUMMARY

	ADJUSTMENT	Adjusting Point	Measurement equipment Connecting Point	Player Condition	Adjusting Specification
1	Tilt Servo Gain Adjustment	VR808	None	• Power OFF	• Making of Tilt gain VR position Red: Turn to right Clear: Center Blue: Turn to left
2	Coarse Grating and Tracking Balance Adjustment	Grating and VR602	CN120-9 (TRKG ERR)	• Test mode #8,500 still TRKG servo open Tilt servo OFF	• Null point → TRKG error MAX • Adjust VR602 so that the TRKG error waveform amplitude's positive and negative level become equal.
3	Slide Shaft Horizontal Adjustment	Player SKIP key	CN120-4 (FOCS RTN)	• #9,800 still #25,000 still TRKG servo open Tilt servo OFF	• Adjust that the FOCS RTN voltage becomes $0 \pm 20mV$ .
4	Pickup Inclination Adjustment	Pickup assembly TAN/TRK inclination adjustment screw	CN120-3 (RF)	• Test mode #2,701 still TRKG servo open/close Tilt servo OFF	• RF waveform's amplitude MAX (Pickup TAN and TRKG adjustment screw) • Minimized crosstalk.
5	TRKG Error Best / Crosstalk Best Adjustment	VR605 (TE MAX) VR606 (CT MAX)	CN120-3 (RF) CN120-9 (TRKG ERR)	• Test mode TRKG servo close / open Tilt servo OFF	• TRKG error MAX (VR605) RF MAX (VR606)
6	FOCS SUM Level Adjustment	VR609	CN120-11 (FOCS SUM)	• Play mode	• Adjust VR609 so that the voltage becomes 1.5V DC.
7	Tilt Sensor Inclination/ Tilt Balance Adjustment	Tilt sensor inclination adjustment screw VR607 (TILT BAL.)	TV monitor Test mode screen	• Test mode #16,200/#115 still TRKG servo loop close • TILT servo OFF	• Set VR607 to the center. • Adjust the adjustment screw so that the tilt error display code is 6, 7, or 8. • Adjust VR607 so that the tilt error display becomes 7.
8	Spindle Motor Centering Check	Check the lissajous figure.	CH1: CN120-9 (TRKG ERR) CH2: CN120-1, 2 (TRKG A+C)	• Test mode #100 and #25,000 TRKG servo open	• Check that the amplitude of the lissajous figure of the frame #100 is the same as that of the frame #25,000.
9	Spindle Motor Centering Adjustment	Spindle motor centering adjustment screw.	CH1: CN120-9 (TRKG ERR) CH2: CN120-1, 2 (TRKG A+C)	• Test mode #100 and #25,000 TRKG servo open / close	• Adjust the centering adjustment screw so that the lissajous figures of #100 and #25,000 are the same.
10	Fine Grating Adjustment	Grating	CH1: CN120-9 (TRKG ERR) CH2: CN120-1, 2 (TRK A+C)	• Test mode #8,500 still TRKG servo open	• Minimize the Y direction of the lissajous figure. • Level of the X direction of the lissajous figure are equal.
11	RF Gain Adjustment	VR601	CH1: CN120-3 (RF)	• Test mode #15,000 still TRKG servo close	• Adjust VR601 so that the RF level becomes $300mV \pm 50mV$ .
12	FOCS Servo Loop Gain Adjustment	VR604	CH1: CN120-8 (FOCS ERR) CH2: CN120-7 (FOCS IN)	• Test mode #15,000 still TRKG servo close	• Adjust VR604 so that the lissajous figure is symmetrical with respect to the X and Y axes.
13	TRKG Servo Loop Gain Adjustment	VR603	CH1: CN120-9 (TRKG ERR) CH2: CN120-10 (TRKG A+C)	• Test mode #15,000 still TRKG servo close	• Adjust VR603 so that the lissajous figure is symmetrical with respect to the X and Y axes.
14	Centering Adjustment for Side B Play	Centering adjustment plate for side B.	CH1: CN120-9 (TRKG ERR) CH2: CN120-1, 2 (TRKG A+C)	• Test mode #100 play TRKG servo open / close	• Adjust that the X-axis amplitude of the lissajous figure becomes maximum.
15	Pickup Tangential Direction Angle Adjustment for Side B Play	Pickup tangential direction angle adjustment screw.	TV monitor	• Test mode #115 still	• Adjust that the crosstalk is minimized.
16	Fine Centering Adjustment for Side B Play	Centering adjustment plate for side B	CH1: CN120-9 (TRKG ERR) CH2: CN120-1, 2 (TRKG A+C)	• Test mode #100 play TRKG servo open	• Adjust that the X-axis amplitude of the lissajous figure becomes maximum.
17	Reference Frequency Adjustment	VC901	R647 lead wire	• Stop mode (blueback screen)	• Adjust VC901 so that the frequency becomes 3.579545 MHz.
18	VCO Centering Frequency Adjustment	VR481	CH1: C471 lead wire CH2: C499 lead wire	• #5,100 still	• The center of CH1's video signal jitter is delayed by $71 \mu S$ with CH2's video signal.
19	Output Video Level Adjustment	VR482	VIDEO OUT terminal	• #19,900 still	• Adjust VR482 so that the voltage between the sync tip and the white peak becomes $1V \pm 5\%$ .
20	1H Delay Video Level Adjustment	VR441	CH1: L458 lead wire CH2: L456 lead wire	• #3,800 still	• The 1H delay video level becomes the same as the main line video level.
21	Color Tint Error Signal Level Adjustment	VR521	TV monitor	• #8,000 still	• Color irregularity on the magenta screen is minimized.

6.5 ADJUSTMENT POINTS OF THE MAIN ASSEMBLY

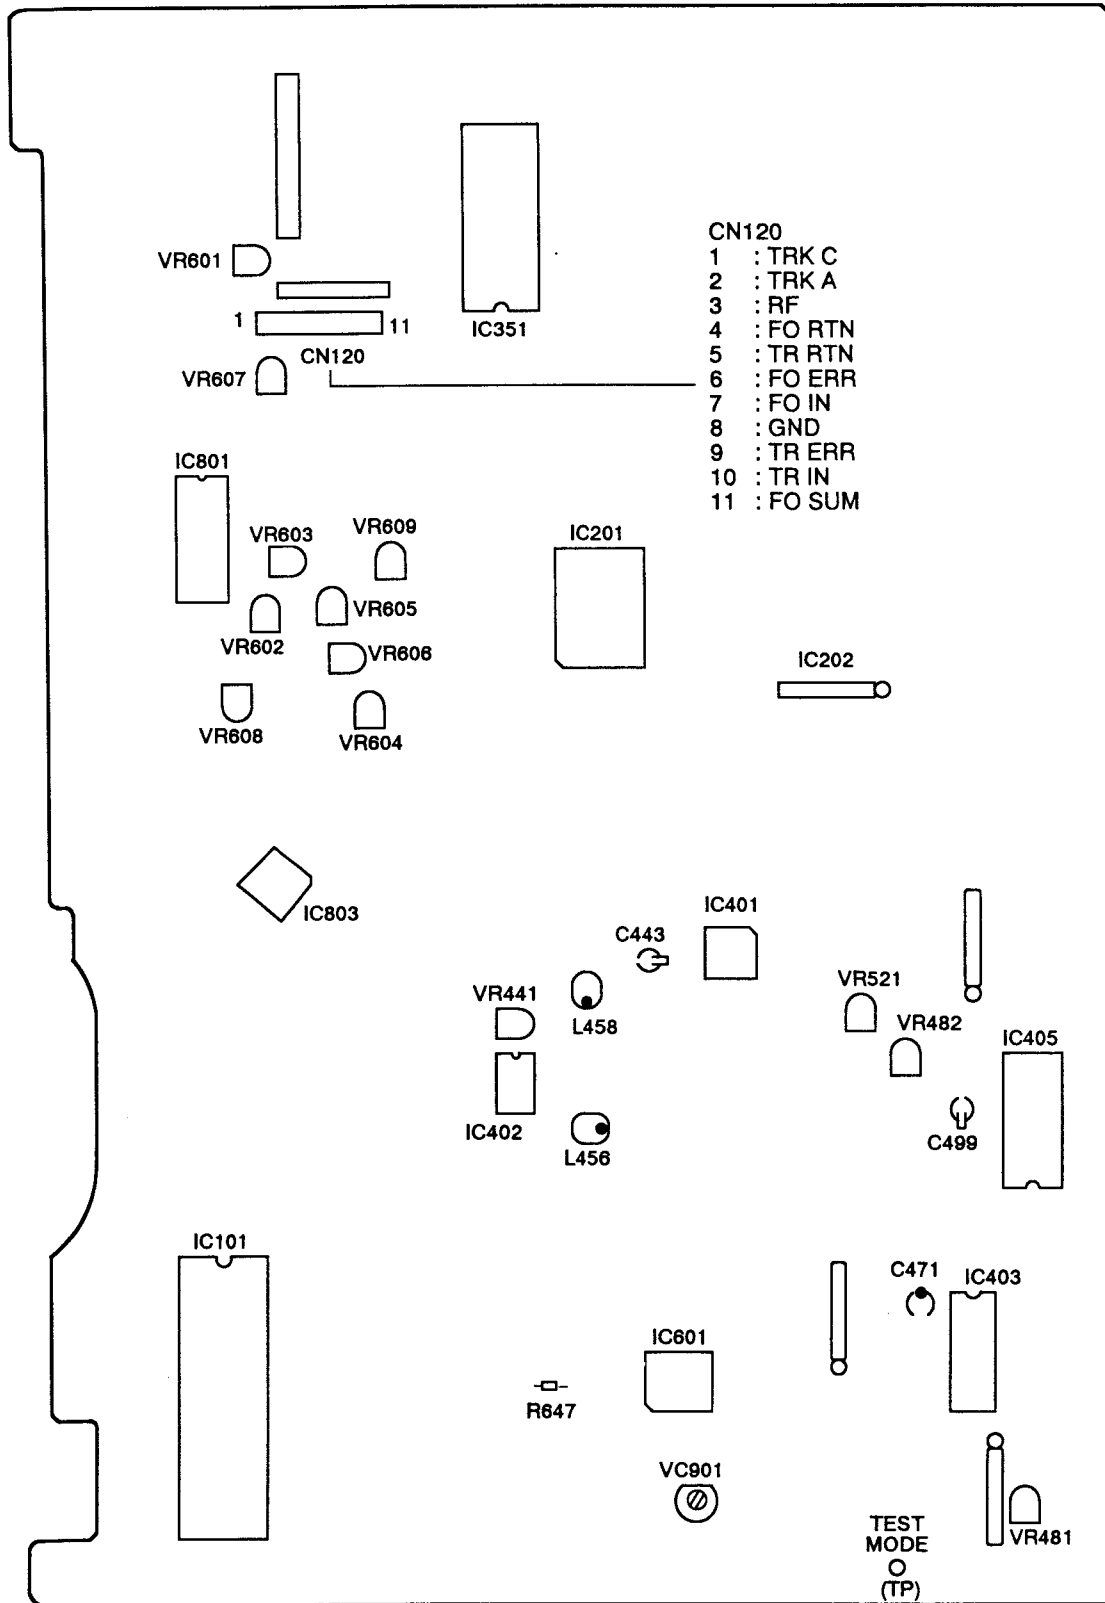


Fig.1 Adjustment Locations

## 6.6 MECHANICAL ADJUSTMENT

### 1. TILT SERVO GAIN ADJUSTMENT

Mechanical Adjustment

- Purpose: Adjustment of the tilt servo's gain according to the tilt sensor's sensitivity rank.
- When not properly adjusted: Increased tilt servo hunting and increased crosstalk.


Measurement equipment & jigs	Measurement equipment connecting points	Player condition	Adjusting point
<ul style="list-style-type: none"> <li>• Small screwdriver</li> </ul>		<ul style="list-style-type: none"> <li>• Stop mode</li> </ul>	<ul style="list-style-type: none"> <li>• VR608 (TILT GAIN)</li> </ul>

#### Adjustment Procedure

1. Use a screwdriver to adjust the angle of VR608 according to the rank indicator's color.

Rank	Color	VR Angle
A	Red	Clockwise all the way
B	Clear	Mechanical center
C	Blue	Counterclockwise all the way

#### Connection diagram

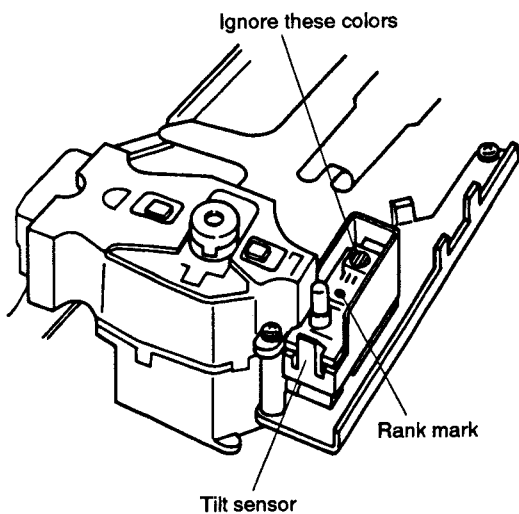

2. COARSE GRATING AND TRACKING (TRKG) BALANCE ADJUSTMENT

Mechanical Adjustment

- Purpose: To adjust the laser beam which is divided into three by the grating to the optimum position on the track. Set the TRKG servo offset voltage to 0V.
- When not properly adjusted: Disc playback will be impossible. During play, tracks may be skipped.

Measurement equipment & jigs	Measurement equipment connecting points	Player condition	Adjusting point
<ul style="list-style-type: none"> <li>• Small screwdriver</li> <li>• Oscilloscope</li> <li>• 8-inch LD test disc (GGV1003)</li> </ul>	<ul style="list-style-type: none"> <li>• CN120-9 (TRKG ERR)</li> </ul>	<ul style="list-style-type: none"> <li>• Test mode</li> <li>• Still mode (#6,500)</li> <li>• TRKG servo: Open</li> <li>• Tilt servo OFF</li> <li>• The carriage assembly should be in the forward state.</li> </ul>	<ul style="list-style-type: none"> <li>• Grating</li> <li>• VR602 (TRKG BAL)</li> </ul>

Adjustment Procedure

<Coarse Grating Adjustment>

1. Play the LD test disc.
2. Search around for frame #6,500.
3. Open the TRKG servo.
4. Connect an oscilloscope to CN120-9 and observe the waveform.
5. Insert the small screwdriver into the grating adjustment hole. Turning the grating will allow you to vary the amplitude of the TRKG error waveform. Find the position where the waveform amplitude becomes minimum with a smooth envelope. (Fig. 2) (This indicates that the 3-way split laser beams are directed onto the track. This is called the "on-track" position.)
6. Slowly turn the grating counterclockwise from the on track position until the waveform amplitude becomes maximum. (Fig. 3)




7. Close the TRKG servo and check that a normal picture is displayed on the TV screen.

<TRKG Balance Adjustment>

1. Align the oscilloscope GND so that it comes to the center of the oscilloscope screen.
2. Adjust VR602 so that the positive and negative amplitude of the TRKG error waveform become equal. (Fig. 3)

Note: If adjustment of VR602 fails to disturb the tracking, perform the adjustment after set VR607 to the mechanical center.

Connection diagram

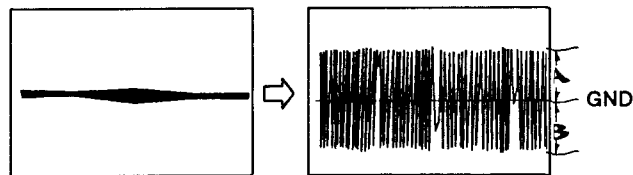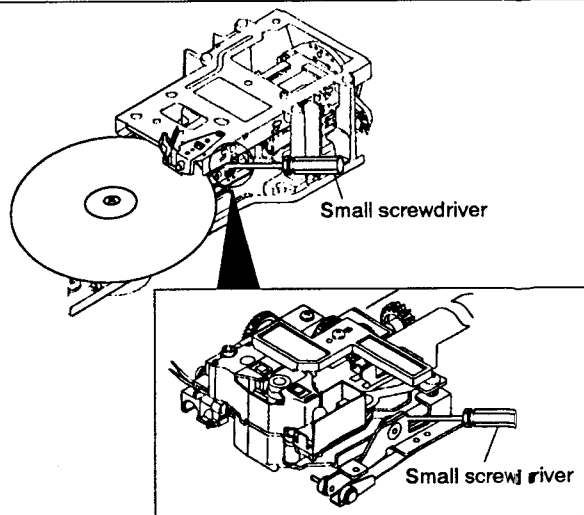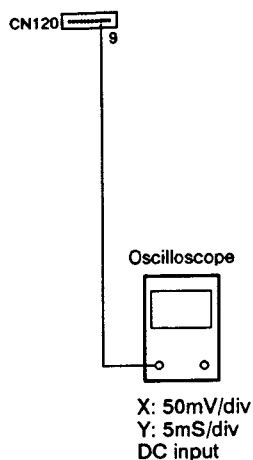

## 3. SLIDER SHAFT HORIZONTAL ADJUSTMENT

Mechanical Adjustment

- Purpose: Setting the slider shaft horizontally to enable the pickup to move over the disc horizontally.
- When not properly adjusted: With a warped disc, the FOCS servo does not function at the inner or outer periphery.

Measurement equipment & jigs	Measurement equipment connecting points	Player condition	Adjusting point
<ul style="list-style-type: none"> <li>• Oscilloscope</li> <li>• Low-pass filter (47kΩ + 1 μF)</li> <li>• 8-inch LD test disc (GGV1003)</li> <li>• Digital voltmeter</li> </ul>	<ul style="list-style-type: none"> <li>• CN120-4 (FOCS RTN) and GND</li> </ul>	<ul style="list-style-type: none"> <li>• Test mode</li> <li>• Still mode (#9,800, #25,000)</li> <li>• TRKG servo: Open</li> <li>• Tilt servo OFF</li> </ul>	<ul style="list-style-type: none"> <li>• SKIP key (◀◀ or ▶▶) (During test mode)</li> </ul>

### Adjustment Procedure

1. Use the SCAN (◀◀ or ▶▶) key to send the slider to frame #9,800 or thereabouts (tilt fulcrum) on the test disc. Open the TRKG servo.
2. Connect the oscilloscope to CN120-4 through L.P.F. and match the center of the waveform with the oscilloscope's GND.
3. Search for frame #25,000 and use the SKIP (◀◀ or ▶▶) key to adjust the center of the waveform to 0V ± 20mV.


*Note: This adjustment is critical in that it will affect the adjustments following.*

### WHEN USING DIGITAL VOLTMETER

*Note: In this adjustment, it is not necessary to use L.P.F. (47kΩ + 1 μF).*

1. Connect a digital voltmeter to CN120-4.
2. Open the TRKG servo, and search around for frame #9,800.
3. Check the voltage.
4. Search around for frame #25,000 and check that the voltage is same as the frame #9,800. If not, adjust the SKIP key so that the voltage is same as the frame #9,800.

### Connection diagram

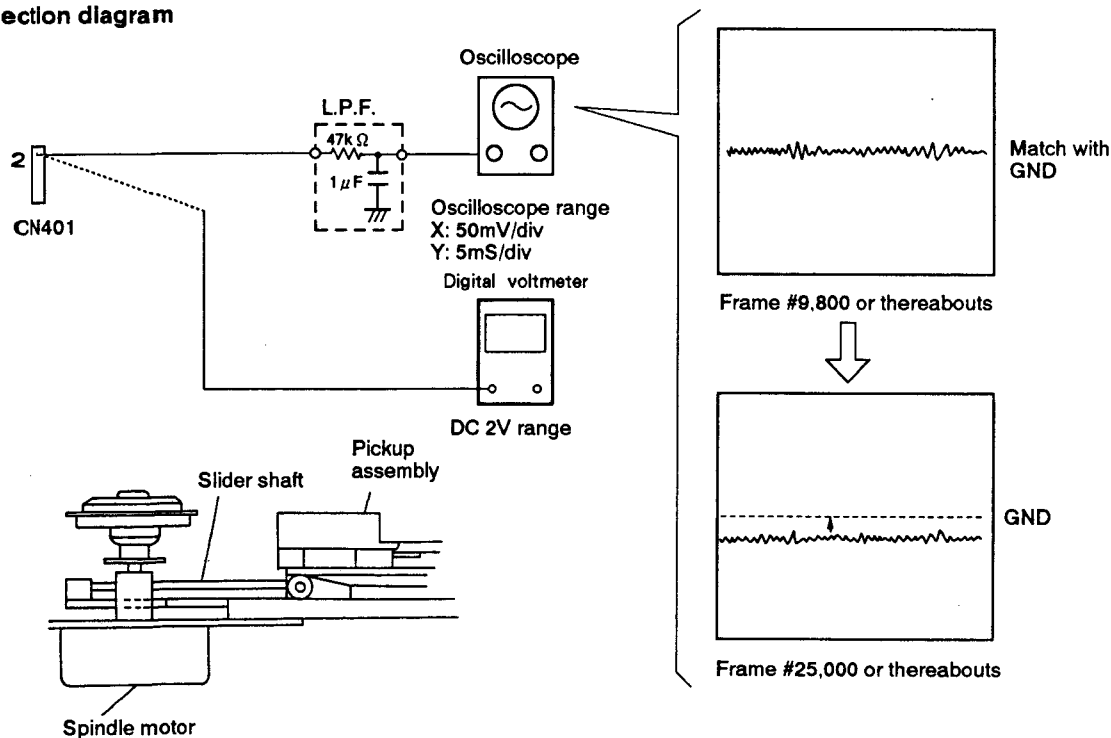

4. PICKUP INCLINATION ADJUSTMENT

Mechanical Adjustment

- Purpose: Adjustment of the pickup inclination to direct the laser beam vertically with respect to the disc.
- When not properly adjusted: Crosstalk will be generated.

Measurement equipment & Jigs	Measurement equipment connecting points	Player condition	Adjusting point
<ul style="list-style-type: none"> <li>• TV monitor</li> <li>• Phillips screwdriver</li> <li>• Oscilloscope</li> <li>• 8-inch LD test disc (GGV1003)</li> </ul>	<ul style="list-style-type: none"> <li>• CN120-3 (RF)</li> </ul>	<ul style="list-style-type: none"> <li>• Test mode</li> <li>• Still mode [#2,701 (black screen)]</li> <li>• Tilt servo OFF</li> </ul>	<ul style="list-style-type: none"> <li>• Pickup assembly TRKG</li> <li>• Tangential direction inclination adjustment screws</li> </ul>

Adjustment Procedure



1. Connect the oscilloscope to CN120-3.
2. Search for #2,701 and observe the RF waveform. (Fig. 4)
3. Adjust the pickup's TRKG/Tangential direction inclination adjustment screw to maximize the waveform's amplitude.
4. Look at the TV screen and make sure there is no crosstalk.

*Note : If there is crosstalk on the TV screen even when the RF level is at the maximum, perform next steps.*

Connection diagram



TRKG direction inclination adjustment      Tangential direction inclination adjustment

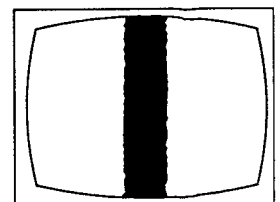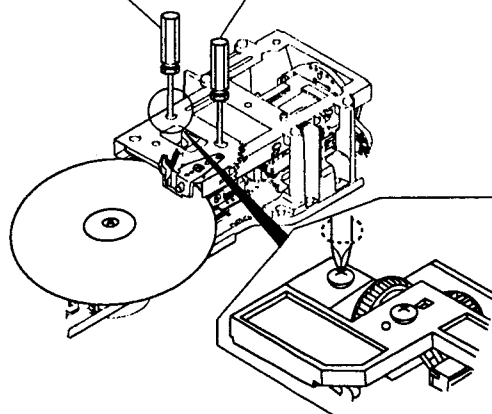

Minimum crosstalk on the screen

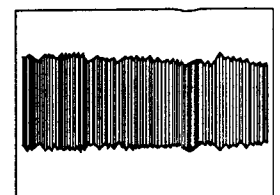


Fig. 4 RF waveform



**5. TRKG ERROR BEST/CROSSTALK BEST ADJUSTMENT**

**Mechanical Adjustment**

- Purpose: To set the FOCS servo to the optimum state when playing the normal playback and track jump (search),
- When not properly adjusted: Crosstalk will be generated.

Measurement equipment & Jigs	Measurement equipment connecting points	Player condition	Adjusting point
<ul style="list-style-type: none"> <li>• TV monitor</li> <li>• Oscilloscope</li> <li>• 8-inch LD test disc (GGV1003)</li> </ul>	<ul style="list-style-type: none"> <li>• CN120-3 (RF)</li> <li>• CN120-9 (TRKG ERR)</li> <li>• Player's VIDEO OUT terminal</li> </ul>	<ul style="list-style-type: none"> <li>• Test mode</li> <li>• TRKG servo close/open</li> <li>• Tilt servo OFF</li> </ul>	<ul style="list-style-type: none"> <li>• VR605 (TE MAX)</li> <li>• VR606 (CT MAX)</li> </ul>

**Adjustment Procedure**


*Note : Perform this adjustment when there is still noticeable crosstalk on the TV screen in section "3. Pickup Tangential Direction Angle Adjustment".*

1. Connect the oscilloscope to CN120-9.
2. Open the TRKG servo .
3. Confirm that the test mode screen display is F-0.  
If not, set to F-0 with " b " button of KEY CONTROL.
4. Adjust VR605 so that the amplitude of the TRKG error waveform becomes maximum.
5. Close the TRKG servo.


6. Connect the oscilloscope to CN120-3.
7. Press the " b " button of KEY CONTROL to display "F-1" on the TV screen.
8. Search frame #2,701 and adjust VR606 so that the amplitude of the RF waveform becomes maximum.
9. Confirm that the crosstalk on the TV screen becomes minimum at frame #115.

*Note : After adjustment is complete, be sure to perform "6. FOCS SUM Level Adjustment".*


**Connection diagram**

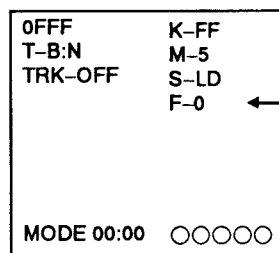


Screen display of test mode

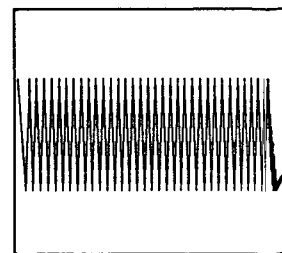

Set to maximum RF amplitude at frame #2,701.

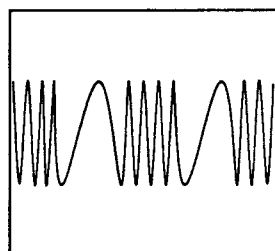

Maximize the TRKG error.

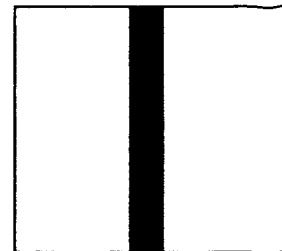

#115 crosstalk minimum

6. FOCUS SUM LEVEL ADJUSTMENT

Mechanical Adjustment

- Purpose: To set the sum level (FOCS A+B) of B1—B4 to the optimum value for activating the FOCUS servo.
- When not properly adjusted: Playability is poor.


Measurement equipment & jigs	Measurement equipment connecting points	Player condition	Adjusting point
<ul style="list-style-type: none"> <li>• TV monitor</li> <li>• Oscilloscope</li> <li>• 8-inch LD test disc (GGV1003)</li> </ul>	<ul style="list-style-type: none"> <li>• CN120-11 (FOCS SUM)</li> </ul>	<ul style="list-style-type: none"> <li>• Test mode</li> <li>• Still mode (#15,000)</li> <li>• TRKG servo: Close</li> <li>• Tilt servo: Neutral</li> </ul>	<ul style="list-style-type: none"> <li>• VR609 (FOCS SUM LEVEL)</li> </ul>

Adjustment Procedure

*Note : Perform this adjustment after perform the "5. TRKG Error Best / Crosstalk Best Adjustment".*

1. Connect the oscilloscope to CN120-11.
2. Adjust VR609 so that the voltage becomes 1.5V DC.

Connection diagram

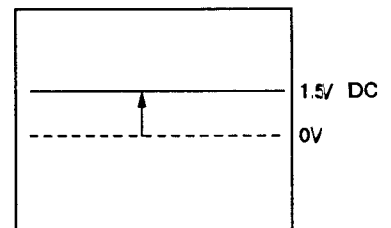

## 7. TILT SENSOR INCLINATION/TILT BALANCE ADJUSTMENT


Mechanical Adjustment

- Purpose: Adjustment of the tilt sensor's inclination to direct the tilt sensor's LED vertically with respect to the disc. Also, compensation for the sensitivity difference between the two sensors.
- When not properly adjusted: Crosstalk will be generated.

Measurement equipment & Jigs	Measurement equipment connecting points	Player condition	Adjusting point
<ul style="list-style-type: none"> <li>• TV monitor</li> <li>• Small phillips screwdriver</li> <li>• 8-inch LD test disc (GGV1003)</li> </ul>	<ul style="list-style-type: none"> <li>• Player's VIDEO OUT terminal</li> </ul>	<ul style="list-style-type: none"> <li>• Test mode</li> <li>• Still mode (#16,200, #115)</li> <li>• TRKG servo closed</li> <li>• Tilt servo OFF</li> </ul>	<ul style="list-style-type: none"> <li>• Tilt sensor inclination adjustment screw</li> <li>• VR607 (TILT BAL)</li> </ul>

### Adjustment Procedure

1. Search for frame #16,200 on the test disc.
2. Set VR607 to the mechanical center.
3. Adjust the tilt sensor inclination adjustment screw so that the tilt status display code is 6, 7, or 8 on the TV monitor.
4. Search for frame #115.
5. Adjust VR607 so that the tilt error display becomes 7.

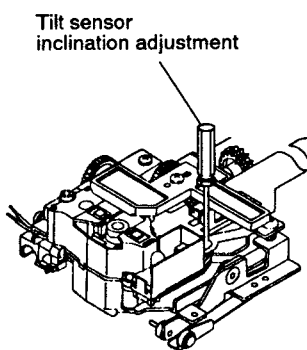

0FFF	K-FF
T-1:N	M-5
TRK-OFF	S-LD
	F-0
Tilt status indication	
MODE 00:00 ○○○○	

TV screen display

Note: This display indicates the tilt error display's location. Other displays may differ slightly from the actual.

8. SPINDLE MOTOR CENTERING CHECK

Mechanical Adjustment

- Purpose: To check that the center of the spindle motor is on the orbit of the laser beam.

Measurement equipment & Jigs	Measurement equipment connecting points	Player condition	Adjusting point
<ul style="list-style-type: none"> <li>• Oscilloscope</li> <li>• Resistor (10kΩ × 2)</li> <li>• 8-inch LD test disc (GGV1003)</li> <li>• CD test disc (YEDS-7)</li> </ul>	<ul style="list-style-type: none"> <li>• CN120-9 (TRKG ERR), CN120-1 (TRKG C) and CN120-2 (TRKG A)</li> </ul>	<ul style="list-style-type: none"> <li>• Play mode</li> <li>• Test mode</li> <li>• TRKG servo: Open</li> <li>• Tilt servo ON</li> <li>• The carriage assembly should be in the forward state.</li> </ul>	<ul style="list-style-type: none"> <li>• Check the Lissajous figure</li> </ul>

Checking Procedure

1. Play the 8-inch LD test disc.
2. Move the pickup to frame #25,000 by scanning or searching, then open the TRKG servo.
3. Connect the X-input (CH-1) of the oscilloscope to CN120-9 and the Y-input (CH-2) to CN120-1 and 2. Set the oscilloscope to the X-Y mode and observe the Lissajous figures of the TRKG error signal and the TRKG (A+C) signal. Write down the Y-axis amplitudes of the Lissajous figures. (Fig. 6)
5. Close the TRKG servo and search frame #100, then open the TRKG servo again to observe the Lissajous figure. At this time, check that the Y-axis amplitude of the Lissajous figure is the same as that noted in step 4. (Fig. 7)

6. Remove the 8-inch LD test disc from the player, then load the CD test disc and repeat the checking procedures steps 1 to 5. However, it is not necessary to specify the inner or outer track positions of the disc. If the Y-axis amplitude of the Lissajous figure is different for the inner and outer tracks, perform "9. Spindle Motor Centering Adjustment".

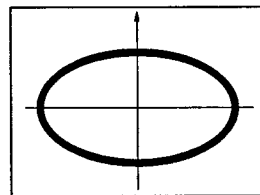


Fig. 5 Lissajous figure when not properly adjusted

Connection diagram

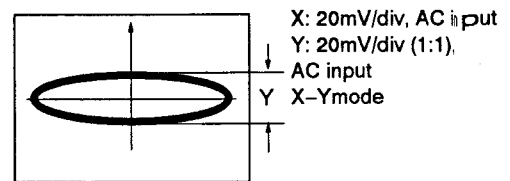
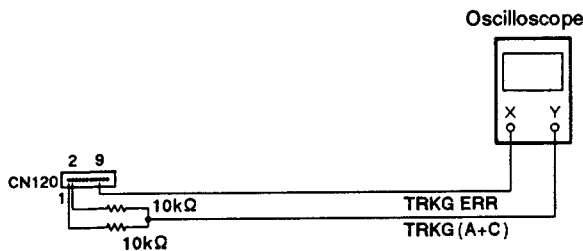


Fig. 6 Lissajous figure of the inner track of the disc (CD)

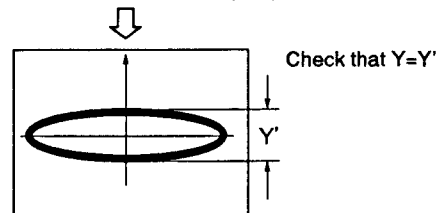


Fig. 7 Lissajous figure of the outer track of the disc (CD)

**9. SPINDLE MOTOR CENTERING ADJUSTMENT**

**Mechanical Adjustment**

- Purpose: To adjust so that the center of the spindle motor is on the orbit of the laser beam.
- When not properly adjusted: Track skips, or searching takes too long.

Measurement equipment & Jigs	Measurement equipment connecting points	Player condition	Adjusting point
<ul style="list-style-type: none"> <li>• Small phillips screwdriver</li> <li>• Oscilloscope</li> <li>• Resistor (10kΩ × 2)</li> <li>• 8-inch LD test disc (GGV1003)</li> <li>• CD test disc (YEDS-7)</li> </ul>	<ul style="list-style-type: none"> <li>• CN120-9 (TRKG ERR), CN120-1 (TRKG C) and CN120-2 (TRKG A)</li> </ul>	<ul style="list-style-type: none"> <li>• Test mode</li> <li>• Play mode</li> <li>• TRKG servo: Open/Close</li> <li>• Tilt servo ON</li> <li>• The carriage assembly should be in the forward state.</li> </ul>	<ul style="list-style-type: none"> <li>• Spindle motor centering adjustment screw</li> </ul>

**Adjustment Procedure**

1. Connect the X-input (CH-1) of the oscilloscope to CN120-9 and the Y-input (CH-2) to CN120-1 and 2.
2. Play the 8-inch LD test disc and search frame #25,000.
3. Open the TRKG servo and observe the Lissajous figures of the TRKG error signal and the TRKG sum signal.
4. Fine-adjust the grating so that the Y-axis amplitude of the Lissajous figure is minimized. (Fig. 9)
5. Close the TRKG servo and search frame #100.
6. Open the TRKG servo again and observe the Lissajous figure and write the values down. (Fig. 8)
7. Loosen a locking screw and insert the small phillips head screwdriver from the adjusting hole, and turn the centering adjustment screw slowly so that the Y-axis amplitude of the Lissajous figure is reduced. After the Y-axis amplitude of the Lissajous figure is minimized, turn the adjusting screw further until the amplitude becomes the same shape as that observed in procedure 6. (Fig. 8—10)
8. Close the TRKG servo, and move the pickup assembly to the outer track of the disc (#25,000), then perform the adjustments in steps 4 to 6 again.
9. Re-open the TRKG servo and observe the Lissajous figure to check that the Y-axis amplitude is minimum. (Fig. 9)  
If the Y-axis amplitude of the Lissajous figure is larger than specified, repeat the adjustment procedures from steps 5 to 8.
10. After adjustment is complete, perform the adjustment in "8. Spindle Motor Centering Check" item 6.
11. Tighter the locking screw.

**Connection diagram**

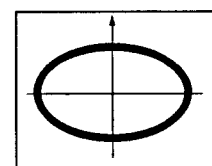
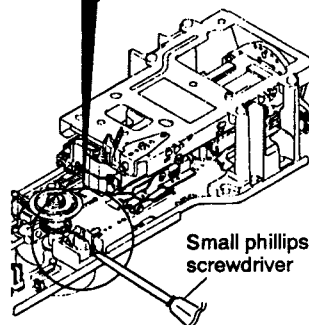
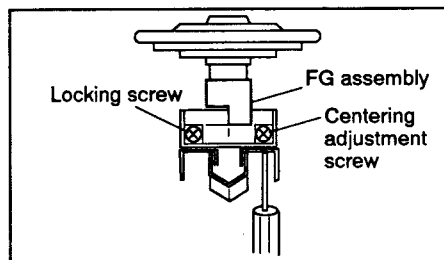
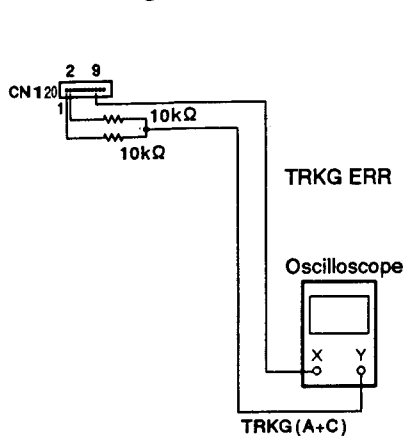


Fig. 8

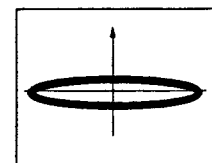


Fig. 9

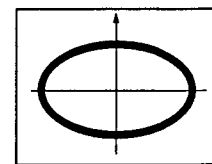


Fig. 10

Lissajous figure.

10. FINE GRATING ADJUSTMENT

Mechanical Adjustment

- Purpose: To fine adjust the grating so that the two tracking beams for the TRKG servo are projected in the optimum positions on the tracks being played. Set the TRKG servo loop offset voltage to 0V.
- When not properly adjusted: During play, tracks may be skipped.

Measurement equipment & jigs	Measurement equipment connecting points	Player condition	Adjusting point
<ul style="list-style-type: none"> <li>• Oscilloscope</li> <li>• Small screwdriver</li> <li>• Resistor (10kΩ × 2)</li> <li>• 8-inch LD test disc (GGV1003)</li> </ul>	<ul style="list-style-type: none"> <li>• CN120-9 (TRKG ERR), CN120-1 (TRKG C) and CN120-2 (TRKG A)</li> </ul>	<ul style="list-style-type: none"> <li>• Test mode</li> <li>• Still mode (#6,500)</li> <li>• TRKG servo: Open</li> <li>• Tilt servo ON</li> <li>• The carriage assembly should be in the forward state.</li> </ul>	<ul style="list-style-type: none"> <li>• Grating</li> </ul>

Adjustment Procedure

1. Play the LD test disc and search frame #6,500, then open the TRKG servo.
2. Connect the X-input (CH-1) of the oscilloscope to CN120-9 and the Y-input (CH2) to CN120-1 and 2. Set the oscilloscope to the X-Y mode and observe the Lissajous figures of the TRKG error signal and the TRKG sum signal.
3. Insert the small screwdriver into the grating adjustment hole, and fine-adjust the grating so that the Y-axis amplitude of the Lissajous figures is minimized. (Fig. 11)  
If the grating is turned too much and the optimum position can no longer be found, repeat the "2. Coarse Grating Adjustment".
4. Select the oscilloscope's X-input (CH-1) and check that the positive and negative amplitudes of the TRKG error signal are equal. (Fig. 12)  
If they are not, repeat the "2. Tracking Balance Adjustment".
5. Close the TRKG servo and check that the picture (image) on the TV screen is normal.

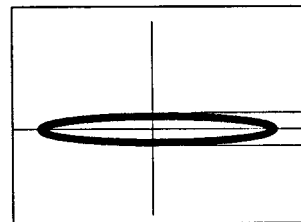


Fig. 11  
Fine grating adjustment

Y-axis amplitude of Lissajous figure becomes minimum.



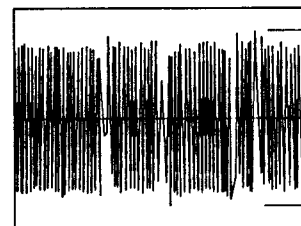


Fig. 12  
TRKG balance

Connection diagram

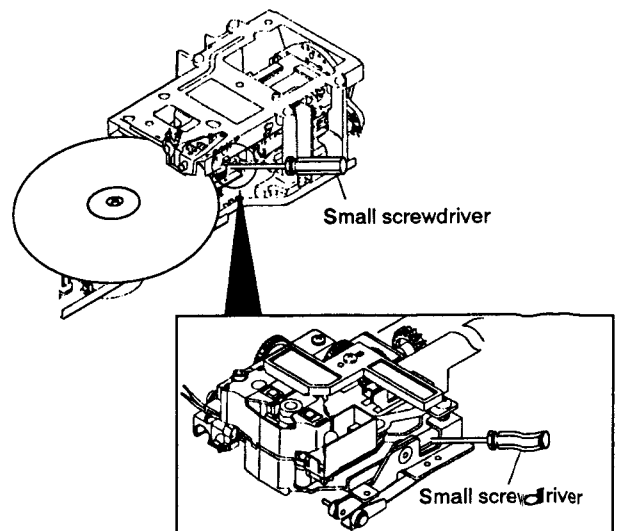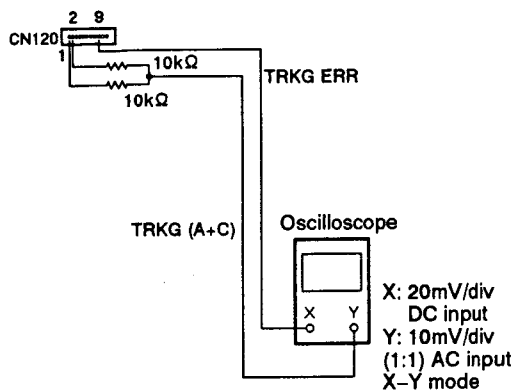

**11. RF GAIN ADJUSTMENT**

**Mechanical Adjustment**

- Purpose: To adjust the RF signal amplitude to the optimum value.
- When not properly adjusted: Dropout occurs frequently.

Measurement equipment & jigs	Measurement equipment connecting points	Player condition	Adjusting point
<ul style="list-style-type: none"> <li>• Oscilloscope</li> <li>• 8-inch LD test disc (GGV1003)</li> </ul>	<ul style="list-style-type: none"> <li>• CN120-3 (RF signal)</li> </ul>	<ul style="list-style-type: none"> <li>• Test mode</li> <li>• Still mode (#15,000)</li> <li>• TRKG servo: Close</li> <li>• Tilt servo: ON</li> <li>• The carriage assembly should be in the forward state.</li> </ul>	<ul style="list-style-type: none"> <li>• VR601 (RF LEVEL)</li> </ul>

**Adjustment Procedure**

1. Play the LD test disc and search frame #15,000.
2. Connect an oscilloscope to CN120-3 (RF signal) and observe the RF signal.
3. Adjust VR601 so that the amplitude of the RF signal becomes  $300\text{mV} \pm 50\text{mV}$ . (Fig. 13)

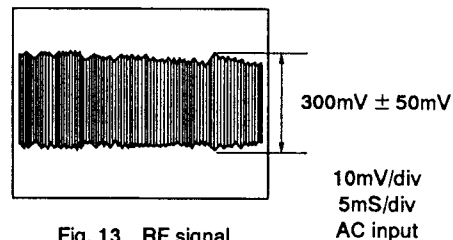


Fig. 13 RF signal

**Connection diagram**



12. FOCUS SERVO LOOP GAIN ADJUSTMENT

Mechanical Adjustment

- Purpose: To set the loop gain of the FOCS servo to the optimum value.
- When not properly adjusted: Performance deteriorates.

Measurement equipment & jigs	Measurement equipment connecting points	Player condition	Adjusting point
<ul style="list-style-type: none"> <li>• Oscilloscope</li> <li>• AF oscillator</li> <li>• Resistor (47kΩ)</li> <li>• 8-inch LD test disc (GGV1003)</li> </ul>	<ul style="list-style-type: none"> <li>• CN120-6 (FOCS ERR) and CN120-7 (FOCS IN)</li> </ul>	<ul style="list-style-type: none"> <li>• Test mode</li> <li>• Still mode (#15,000)</li> <li>• TRKG servo: Close</li> <li>• Tilt servo: ON</li> <li>• The carriage assembly should be in the forward state.</li> </ul>	<ul style="list-style-type: none"> <li>• VR604 (FOCS GAIN)</li> </ul>

Adjustment Procedure

1. Connect the oscilloscope's X-input (CH-1) via the resistor and AF oscillator to CN120-6, and the Y-input (CH-2) to CN120-7, as shown in the connection diagram.
2. Set the AF oscillator output to 1.7kHz/6Vp-p for GGV1003, according to the test disc used.
3. Play the 8-inch LD test disc and search frame #15,000.
4. Set the oscilloscope to the X-Y mode and observe the Lissajous figure.
5. Adjust VR604 so that the Lissajous figure is symmetrical on both the X-axis and Y-axis of the oscilloscope. (Fig. 14)

*Note: If the AF oscillator output does not exceed 6Vp-p, reduce the value of the resistor (47kΩ) in the connection diagram, for easier observation of the Lissajous figure. (not below 33kΩ)*

Connection diagram


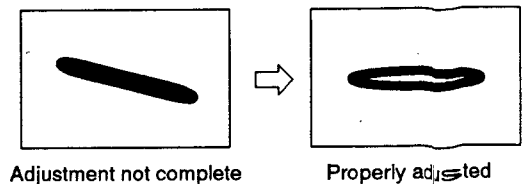


Fig. 14

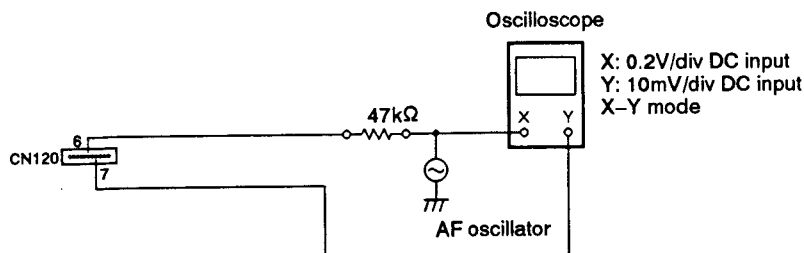

13. TRKG SERVO LOOP GAIN ADJUSTMENT

Mechanical Adjustment

- Purpose: To set the loop gain of the TRKG servo to the optimum value.
- When not properly adjusted: Performance deteriorates

Measurement equipment & Jigs	Measurement equipment connecting points	Player condition	Adjusting point
<ul style="list-style-type: none"> <li>• Oscilloscope</li> <li>• Resistor (47kΩ)</li> <li>• AF oscillator</li> <li>• 8-inch LD test disc (GGV1003)</li> </ul>	<ul style="list-style-type: none"> <li>• CN120-9 (TRKG ERR),</li> <li>• CN120-10 (TRKG IN)</li> </ul>	<ul style="list-style-type: none"> <li>• Test mode</li> <li>• Still mode (#15,000)</li> <li>• TRKG servo: Close</li> <li>• Tilt servo: ON</li> <li>• The carriage assembly should be in the forward state.</li> </ul>	<ul style="list-style-type: none"> <li>• VR603 (TRKG GAIN)</li> </ul>


Adjustment Procedure

1. Connect the oscilloscope's X-input (CH-1) via the resistor and AF oscillator to CN120-9, and the Y-input (CH-2) to CN120-10, as shown in the connection diagram.
2. Set the AF oscillator output to 3.0kHz/6Vp-p for GGV1003, according to the test disc used.
3. Set the oscilloscope to the X-Y mode and observe the Lissajous figure.
4. Play the LD test disc and search frame #15,000.
5. Adjust VR603 so that the Lissajous figure is symmetrical on both the X-axis and Y-axis of the oscilloscope. (Fig. 15)

*Note : If the AF oscillator output does not exceed 6Vp-p, reduce the value of the resistor (47kΩ) in the connection diagram, for easier observation of the Lissajous figure. (not below 33kΩ)*




Adjustment not complete

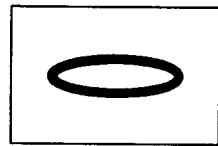

Properly adjusted

Fig. 15

Connection diagram

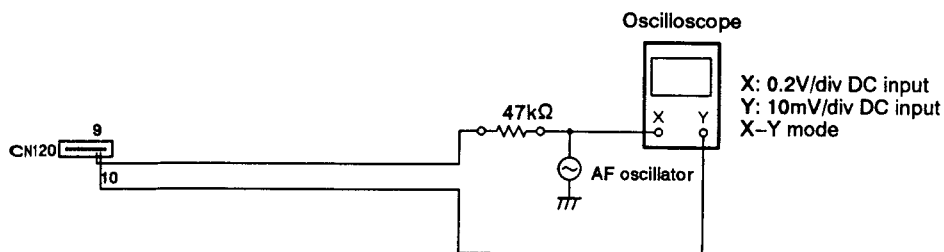

14. CENTERING ADJUSTMENT FOR SIDE B PLAY

Mechanical Adjustment

- Purpose: To check that the position check at the start play and to set the center of the spindle motor on the path of the laser beam when playing the side B of the disc.
- When not properly adjusted: Tracks skipped, longer searching time or searching is impossible when playing side B of the disc.

Measurement equipment & Jigs	Measurement equipment connecting points	Player condition	Adjusting point
<ul style="list-style-type: none"> <li>• L-shaped eccentric screwdriver (GGV-129)</li> <li>• Oscilloscope</li> <li>• Resistor (10kΩ)</li> <li>• 8-inch LD test disc (GGV1003)</li> </ul>	<ul style="list-style-type: none"> <li>• CN120-9 (TRKG ERR), CN120-1 (TRKG C) and CN120-2 (TRKG A)</li> </ul>	<ul style="list-style-type: none"> <li>• Test mode</li> <li>• Play mode</li> <li>• TRKG servo: Open/Close</li> <li>• Tilt servo ON</li> <li>• The carriage assembly should be in the reverse state.</li> </ul>	<ul style="list-style-type: none"> <li>• Centering adjustment plate for side B</li> </ul>

Adjustment Procedure




1. Turn the LD test disc upside-down (change from side A to side B). The start play position from side A to B should be within frame #3,500.
2. Set the oscilloscope to the X-Y mode, and connect the oscilloscope's X-input (CH-1) to CN120-9 (TRKG ERR) and the Y-input (CH-2) to CN120-1 and 2 (TRKG A+C).
3. Play the LD test disc and search frame #100, then open the tracking servo.

*Note: If the center is too eccentric on side B of the disc, since searching will be impossible on side B, open the TRKG servo when the carriage assembly moves to the side B play position and searches around frame #100.*

4. While observing the Lissajous figure on the oscilloscope, insert the eccentric screwdriver into the centering adjustment hole for side B and adjust it so that the X-axis amplitude of the Lissajous figure is minimized (on-track position). Then turn the eccentric screwdriver clockwise further until the X-axis amplitude of the Lissajous figure becomes maximum. (Fig. 16)

*Note: When "4. Pickup inclination Angle Adjustment is performed with the pickup in the forward state, perform "15. Pickup Tangential Direction Angle Adjustment for Side B Play" and "16. Fine Centering Adjustment for Side B play".*

Connection diagram

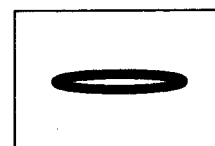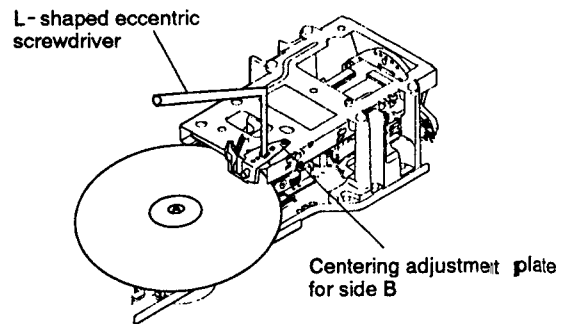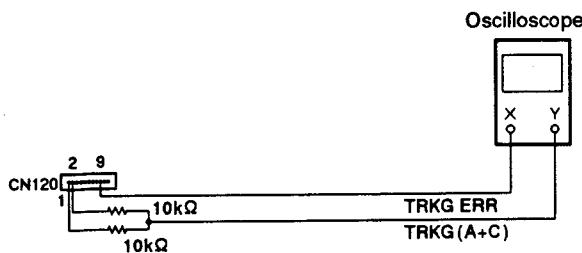

Properly adjusted (X: maximum).

**15. PICKUP TANGENTIAL DIRECTION ANGLE ADJUSTMENT FOR SIDE B PLAY**      **Mechanical Adjustment**

- Purpose: To adjust the crosstalk to become minimum in the tangential direction angle of the pickup assembly when playing side B of the disc.
- When not properly adjusted: Crosstalk is significant.



Measurement equipment & jigs	Measurement equipment connecting points	Player condition	Adjusting point
<ul style="list-style-type: none"> <li>• TV monitor</li> <li>• Small Phillips screwdriver</li> <li>• 8-inch LD test disc (GGV1003)</li> </ul>	<ul style="list-style-type: none"> <li>• Monitor screen</li> </ul>	<ul style="list-style-type: none"> <li>• Test mode</li> <li>• Still mode (#115)</li> <li>• TRKG servo: Close</li> <li>• Tilt servo ON</li> <li>• The carriage assembly should be in the reverse state.</li> </ul>	<ul style="list-style-type: none"> <li>• Pickup tangential direction angle adjustment screw</li> </ul>

**Adjustment Procedure**

1. Play the LD test disc and search frame #115.
2. Check if crosstalk appears on the screen of the TV monitor, and adjust the pickup tangential direction angle adjustment screw so that the crosstalk is minimized.
3. After steps 1 and 2 have been completed, perform "14. Centering Adjustment for Side B Play" again.

*Note: When the pickup tangential direction angle for side B play is varied by this adjustment, the center of the disc for side B may be shifted slightly. As a countermeasure, perform the centering adjustment again.*

**Connection diagram**

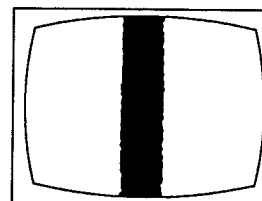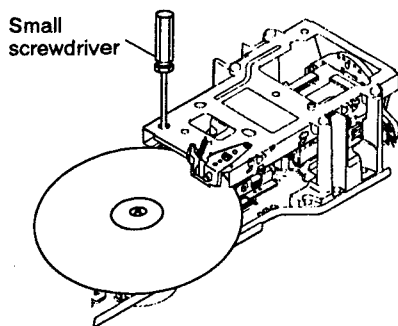

**2. Minimum crosstalk**

16. FINE CENTERING ADJUSTMENT FOR SIDE B PLAY

Mechanical Adjustment

- Purpose: To set the center of the spindle motor on the track of the laser beam when playing the side B of the disc.
- When not properly adjusted: Tracks skipped when playing side B of the disc.

Measurement equipment & jigs	Measurement equipment connecting points	Player condition	Adjusting point
<ul style="list-style-type: none"> <li>• Oscilloscope</li> <li>• L-Shaped eccentric screwdriver (GGV-129)</li> <li>• Resistor (10kΩ × 2)</li> <li>• 8-inch LD test disc (GGV1003)</li> </ul>	<ul style="list-style-type: none"> <li>• CN120-9 (TRKG ERR), CN120-1 (TRKG C) and CN120-2 (TRKG A)</li> </ul>	<ul style="list-style-type: none"> <li>• Test mode</li> <li>• Play mode</li> <li>• TRKG servo: Open</li> <li>• Tilt servo ON</li> <li>• The carriage assembly should be in the reverse state.</li> </ul>	<ul style="list-style-type: none"> <li>• Centering adjustment plate for side B</li> </ul>

Adjustment Procedure

1. Set the oscilloscope to the X-Y mode, and connect the oscilloscope's X-input (CH-1) to CN120-9 (TRKG ERR) and the Y-input (CH-2) to CN120-1 and 2 (TRKG A+C).
2. Play the LD test disc and search frame #100.
3. Open the TRKG servo.
4. While observing the Lissajous figure on the oscilloscope, insert the eccentric screwdriver into the centering adjustment hole for side B and adjust it so that the X-axis amplitude of the Lissajous figure becomes maximum. (Fig. 17)
5. Turn the power OFF.
6. Fixing and locking the screws as follows;
  - Spindle motor centering adjustment screw
  - Pickup tangential direction angle adjustment screw
  - Centering adjustment plate for side B
  - Tilt sensor screw

Connection diagram

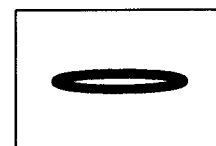
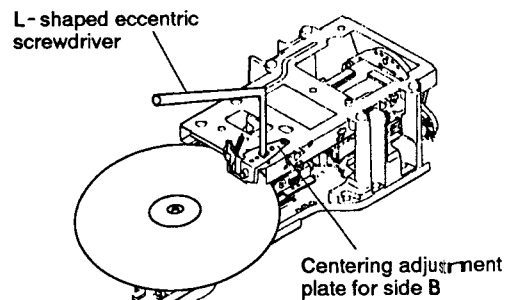
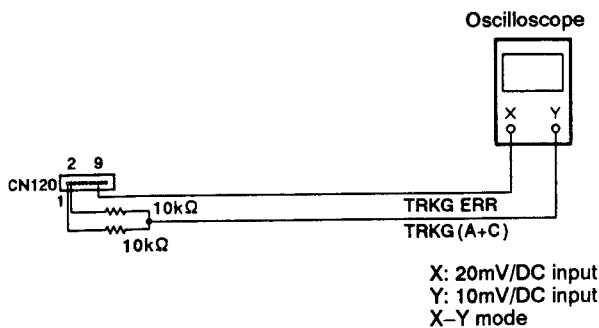


Fig. 17

X-axis of Lissajous figure maximum.

6.7 ELECTRICAL ADJUSTMENT

17. REFERENCE FREQUENCY ADJUSTMENT

Electrical Adjustment

- Purpose: Adjustment of the standard clock frequency.
- When not properly adjusted: Incorrect color tint. No TV color lock. VCXO cannot be adjusted during LDD playback.


Measurement equipment & jigs	Measurement equipment connecting points	Player condition	Adjusting point
<ul style="list-style-type: none"> <li>• Frequency counter</li> <li>• Oscilloscope 10:1 probe</li> </ul>	<ul style="list-style-type: none"> <li>• Lead wire of R647</li> </ul>	<ul style="list-style-type: none"> <li>• Normal mode</li> <li>• Stop mode (Blueback screen)</li> </ul>	<ul style="list-style-type: none"> <li>• VC901 (REF FREQ.)</li> </ul>

Adjustment Procedure

1. Adjust VC901 so that the frequency of the lead wire of R647 becomes 3.579545MHz in the stop mode (blueback screen).

*Note : The frequency counter probe should be an oscilloscope 10 : 1 probe.*

Connection diagram

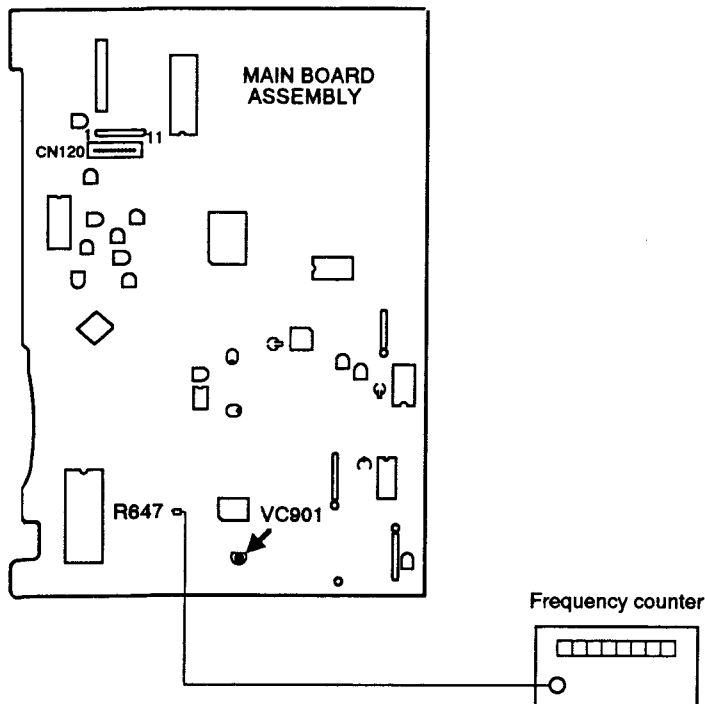

18. VCO CENTERING FREQUENCY ADJUSTMENT

Electrical Adjustment

- Purpose: Setting the optimum delay time for the time axis error compensation CCD.
- When not properly adjusted: It is difficult to color lock, there is color lock delay after a search, and there is flicker on the white screen.

Measurement equipment & jigs	Measurement equipment connecting points	Player condition	Adjusting point
<ul style="list-style-type: none"> <li>• Oscilloscope</li> <li>• 8-inch LD test disc (GGV1003)</li> </ul>	<ul style="list-style-type: none"> <li>• CH1: lead wire of C471.</li> <li>• CH2: + side lead wire of C499.</li> </ul>	<ul style="list-style-type: none"> <li>• Normal mode</li> <li>• Still mode (#5,100)</li> </ul>	<ul style="list-style-type: none"> <li>• VR481 (VCO FREQ.)</li> </ul>


Adjustment Procedure

1. Connect the lead wire of C471 and the + side lead wire of C499 to CH 1 and CH 2 of the oscilloscope respectively.  
 CH 1 : Video signal before time axis error compensation.  
 CH 2 : Video signal after time axis error compensation.


2. Search for frame #5,100 on the test disc. Adjust VR481 so that the center of CH 1's video signal jitter is delayed by  $71\mu s$  ( $1H + 7.5\mu s$ ) with respect to the CH 2's video signal.

Note : Do not confuse CH 1 and CH 2.

Connection diagram

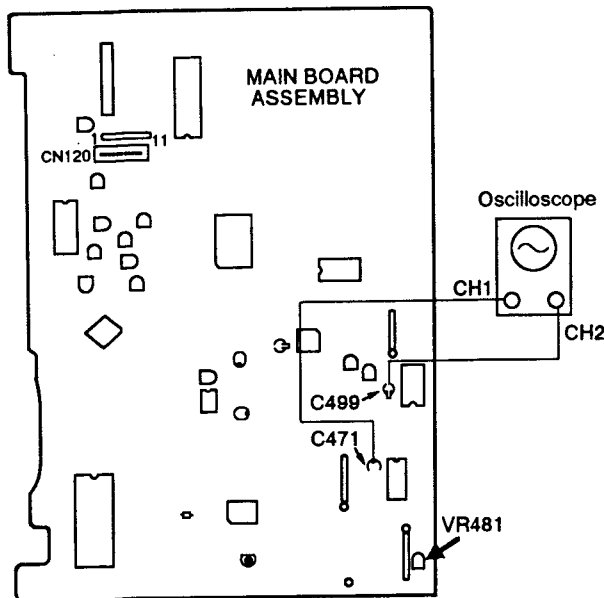

Oscilloscope range AC  
 CH1: 20mV/div 10  $\mu s$ /div (trigger)  
 CH2: 20mV/div

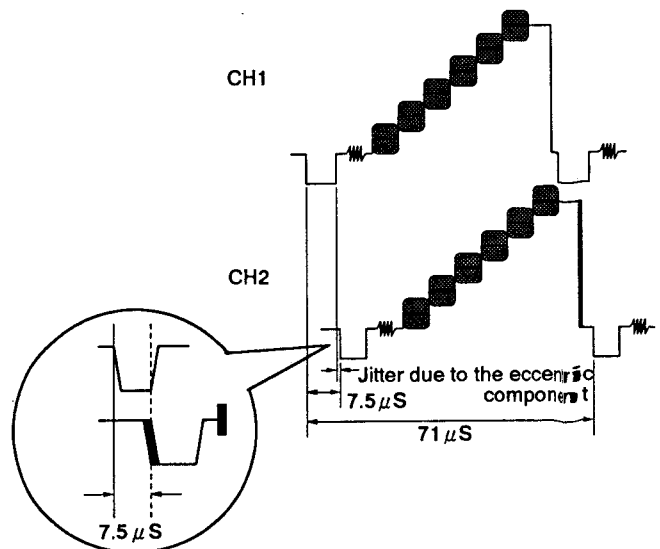

**19. OUTPUT VIDEO LEVEL ADJUSTMENT**

**Electrical Adjustment**

- Purpose: Setting the video signal level to 1V<sub>p-p</sub> (75 Ω termination).
- When not properly adjusted: The player starts up midway without reading the data. The screen is too bright or too dark.


Measurement equipment & Jigs	Measurement equipment connecting points	Player condition	Adjusting point
<ul style="list-style-type: none"> <li>• Oscilloscope</li> <li>• 8-inch LD test disc (GGV1003)</li> </ul>	<ul style="list-style-type: none"> <li>• Player's VIDEO OUT terminal</li> </ul>	<ul style="list-style-type: none"> <li>• Normal mode</li> <li>• Still mode (#19,900)</li> </ul>	<ul style="list-style-type: none"> <li>• VR482 (VIDEO LEVEL)</li> </ul>

**Adjustment Procedure**

*Note: Connect an oscilloscope to the VIDEO OUT terminal terminating with 75Ω.*

1. Search for frame #19,900 on the test disc.
2. Adjust VR482 so that the white level becomes 1V<sub>p-p</sub> ± 5% from the video signal's sync tip level.

**Connection diagram**

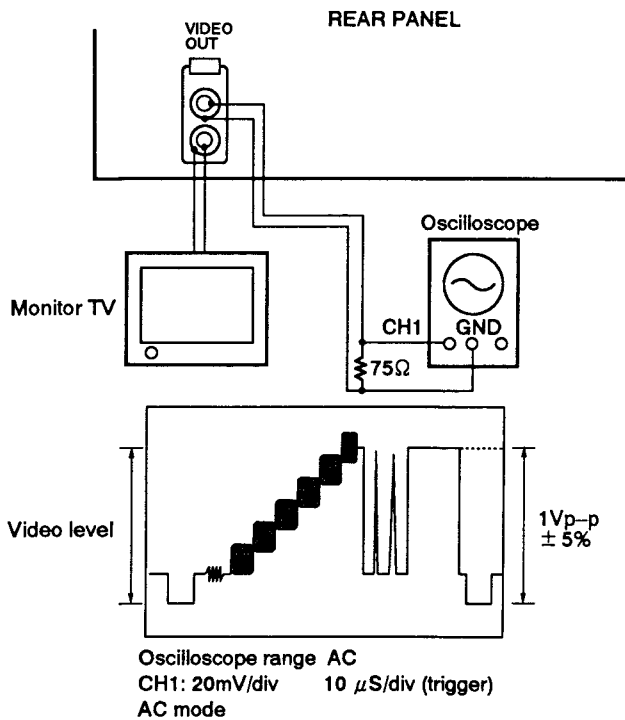

20. 1H DELAY VIDEO LEVEL ADJUSTMENT

Electrical Adjustment

- Purpose: Equalization of the video levels of the 1H delay video signal and the main line video signal.
- When not properly adjusted: If the 1H delay video signal level is high, white dropout will be noticeable and there will be H shifting. (Horizontal stripes across the screen.)

Measurement equipment & jigs	Measurement equipment connecting points	Player condition	Adjusting point
<ul style="list-style-type: none"> <li>• Oscilloscope</li> <li>• 8-inch LD test disc (GGV1003)</li> </ul>	<ul style="list-style-type: none"> <li>• CH1: lead wire of L458</li> <li>• CH2: lead wire of L456</li> </ul>	<ul style="list-style-type: none"> <li>• Normal mode</li> <li>• Still mode (#3,800)</li> </ul>	<ul style="list-style-type: none"> <li>• VR441 (1H LEVEL)</li> </ul>

Adjustment Procedure

1. Connect lead wire of L458 to the oscilloscope's CH 1 and lead wire of L456 to the CH 2.
2. Search for frame #3,800 on the test disc.
3. Adjust VR441 so that the 1H delay video level (CH 1) becomes the same as the main line video level (CH 2). (See Fig. 18)

Note : The video level is the level between the SYNC tip and the white peak.

Connection diagram

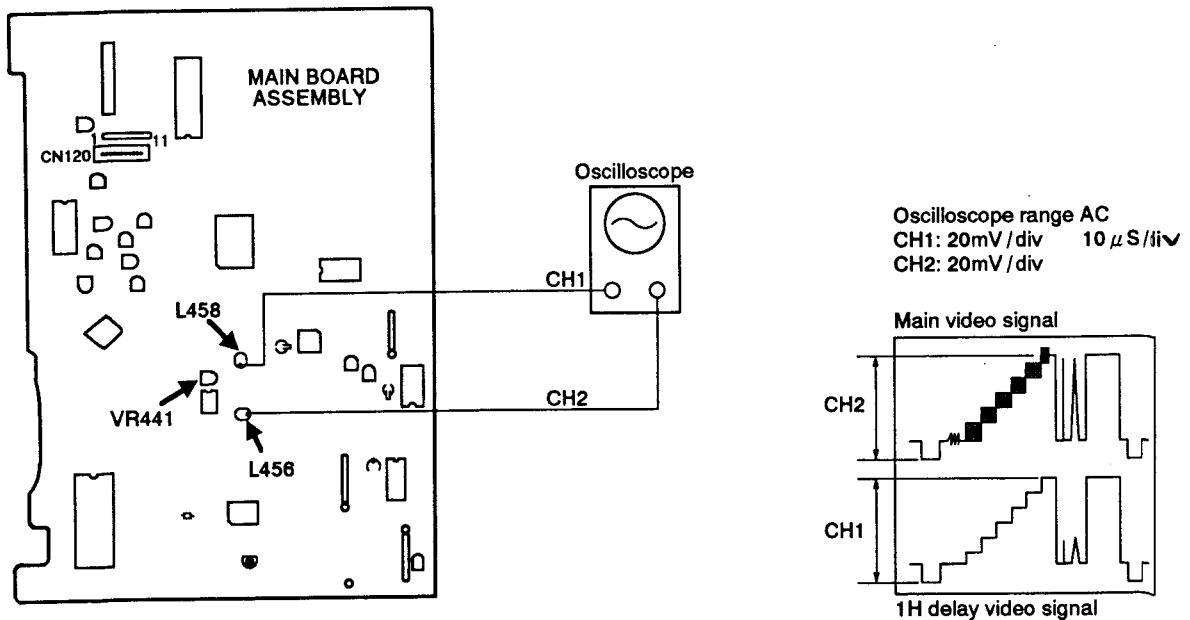


Fig. 18



**21. COLOR TINT ERROR SIGNAL LEVEL ADJUSTMENT**


**Electrical Adjustment**

- Purpose: Optimization of the color tint compensation section's error signal level.
- When not properly adjusted: There is substantial color irregularity. (especially for CDV.)

Measurement equipment & Jigs	Measurement equipment connecting points	Player condition	Adjusting point
<ul style="list-style-type: none"> <li>• TV monitor</li> <li>• 8-inch LD test disc (GGV1003)</li> </ul>		<ul style="list-style-type: none"> <li>• Normal mode</li> <li>• Still mode (#8,000)</li> </ul>	<ul style="list-style-type: none"> <li>• VR521 (VPS LEVEL)</li> </ul>

**Adjustment Procedure**

1. Search for frame #8,000 on the test disc. (Magenta screen)
2. Adjust VR521 until the color irregularity on the magenta screen is minimized.

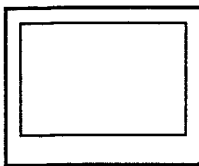

Color irregularity on the magenta screen is minimized.

## 7. DISASSEMBLY

### 1. Disc Tray

- ① Turn the power switch on and press the EJECT button then pull the tray out from the player.
- ② Remove two tray stopper screws (A).
- ③ Pull out the tray toward the front.

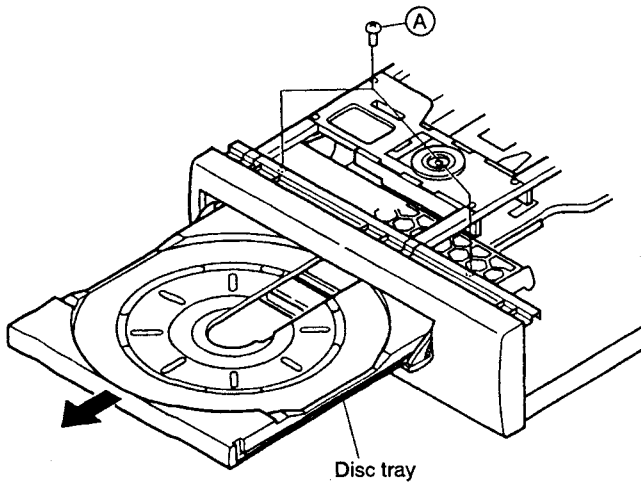


Fig. 1

### 2. Positioning the Tray

- ① Set the player with the tray open.
- ② Set the roller plate gear so that the roller plate line intersects with the mid - point of missing tooth of the roller plate gear.  
(At this time, adjust the position by the method shown in Fig. 2, or turn the power ON and use the SKIP (|◀◀, ▶▶|) buttons in the direction of OUT tilt it stops as shown in Fig. 2)
- ③ Insert the tray.  
At this time, the tray can be inserted only when the first missing tooth of the tray gear is engaged with the missing tooth section of the roller plate gear, as shown in the figure. (Fig. 2)


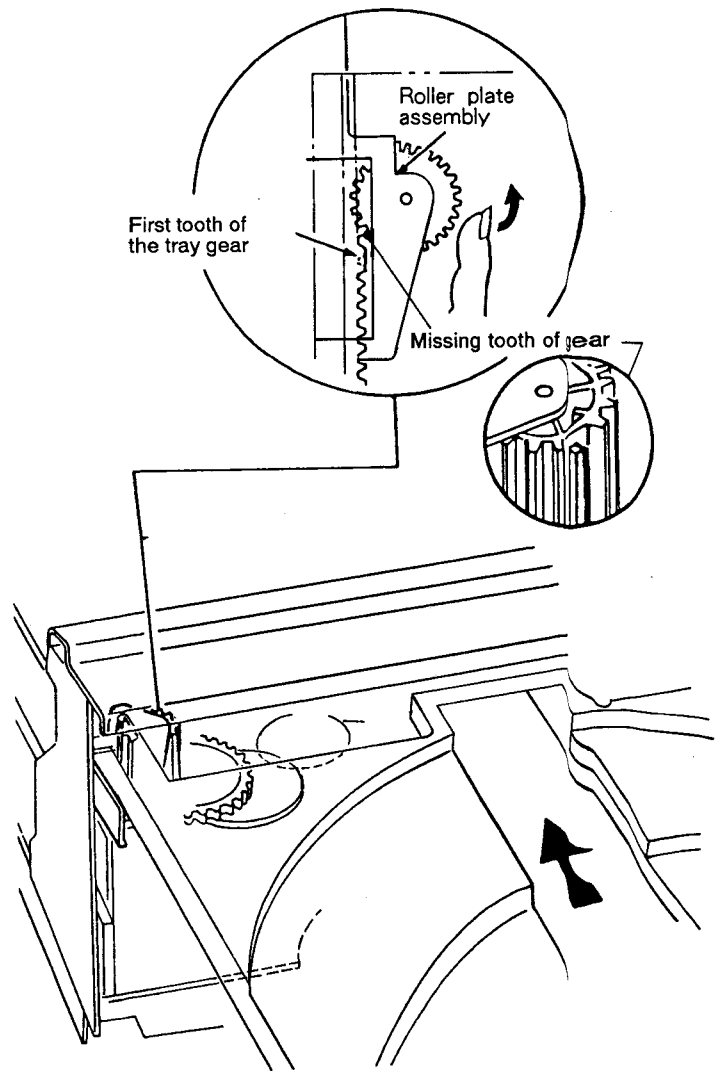


Fig. 2


### 3. Positioning the Gears and the Grease

#### Apply Points


1. Apply a grease to the spring bus cam.

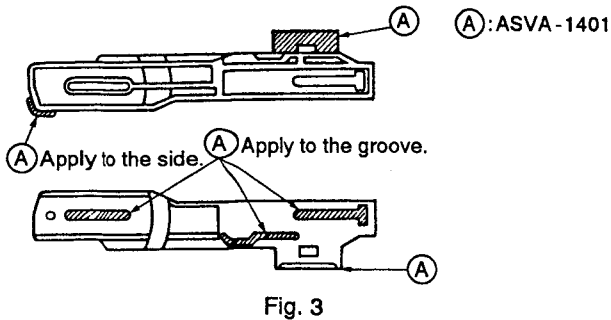

2. Apply a grease to the cam gear.

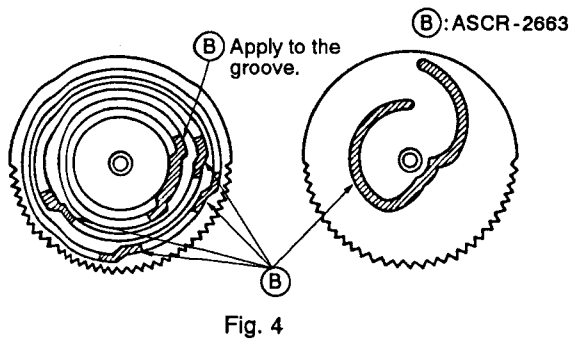


3. Apply a grease to the follow gear.

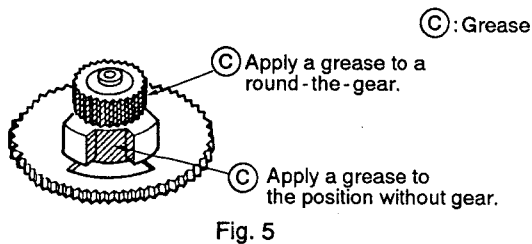



4. Positioning the cam gear.

- ① Move two cams in the direction of arrow.
- ② Move this cam in the direction of arrow.
- ③ Insert the cam gear so that the end of the cam gear comes to the position nearest to the shaft.
- ④ Confirm that two cams are moved when turning the came gear to the shaft in the direction of arrow.
- ⑤ Confirm that the cam is turned when pressing the direct SW.

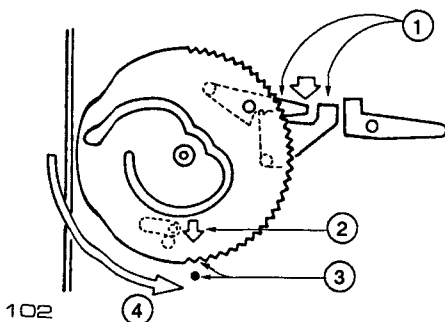


5. Mount the spring slanting cam


- ① Set the cam gear as shown in the Fig. 7 and take down the SW.
- ② Engage the (a) of the spring slanting cam with (a)'.
- ③ Set the position of the projection tipped of the tilt base is on the edge of the spring slanting cam. And slide the spring slanting cam in the direction of arrow. (See Fig. 8)

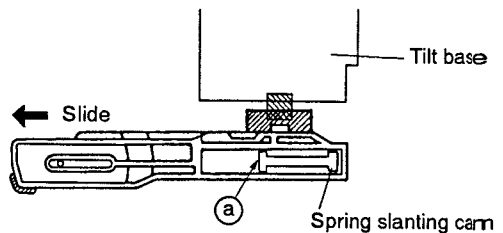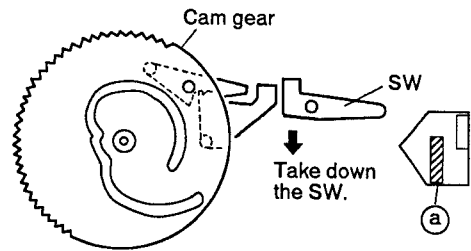

6. Positioning the roller plate assembly (slide gear).

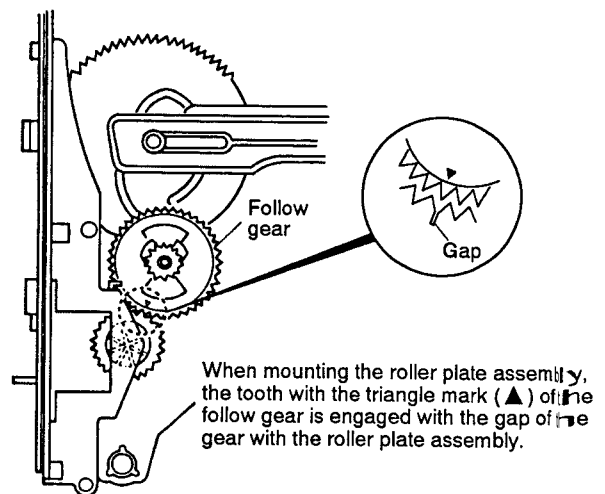


• How to replace the flexible cable

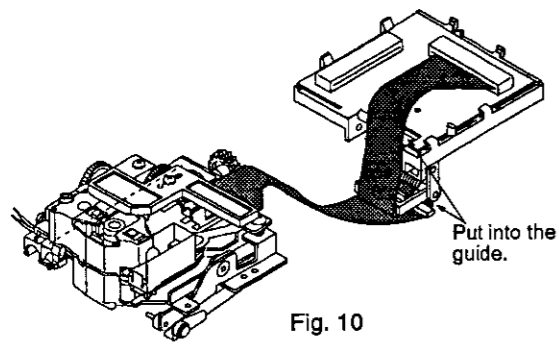


**4. Carriage Assembly**


① Slide the carriage assembly to the shaft of the turn plate by hand.

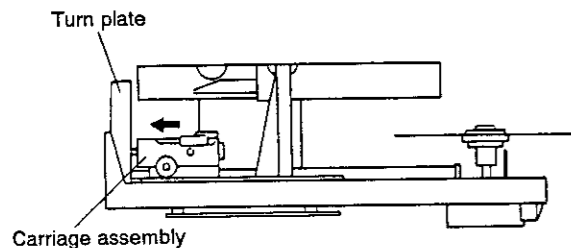

- ② Disconnect two connectors (B) and (C) from the CNNB assembly to remove the flexible cable.
- ③ Remove six screws (A) from the post(L) and (R) to remove the tilt base.
- ④ Pull out the carriage assembly by setting the tilt base (upper) toward the upper.
- ⑤ Unhook two stoppers and remove a SW.

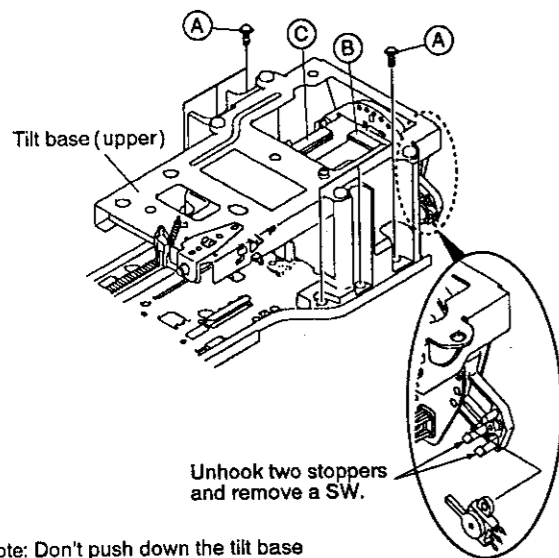


Note: Don't push down the tilt base while removing screws.

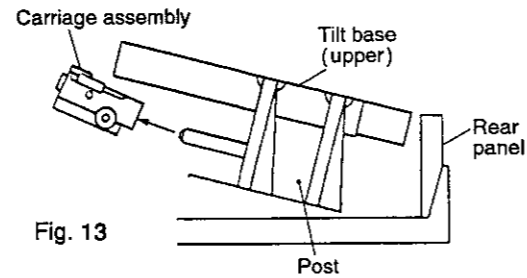


**5. Power Supply Board Assembly**

① Insert a screwdriver into the chassis hole near a strain relief through the back of the base chassis and remove the strain relief stop ring.

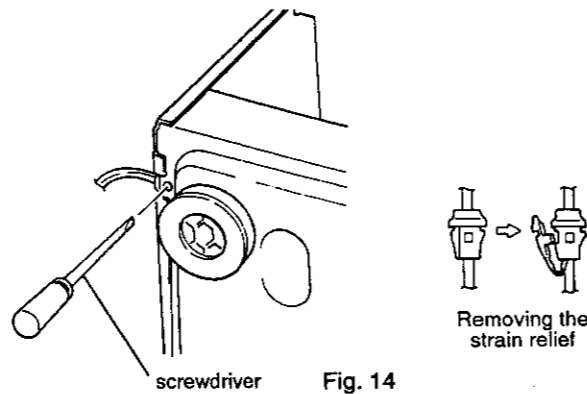

② Remove four screws (A) and raise the power supply board assembly. Then the power supply board assembly can be diagnosed for component replacement through the foil side.

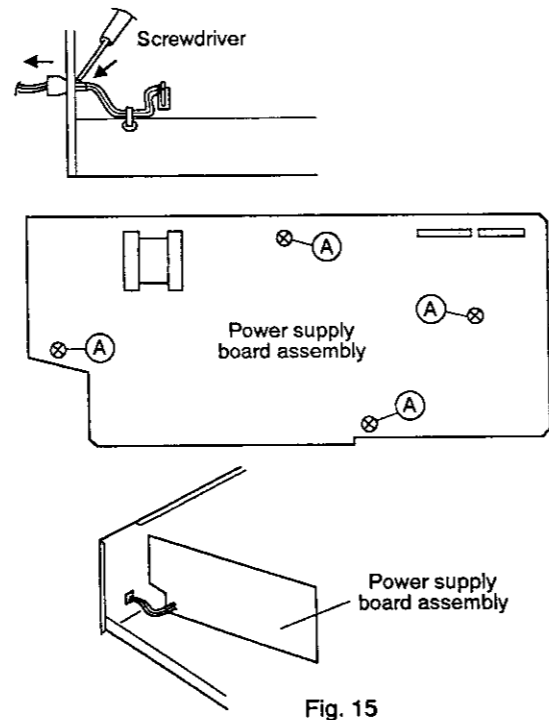


**8. ABBREVIATIONS TABLE**

<b>A</b>	ACCEL ACOM AF AFM AGC ALC ANT ATC	ACCELERATE AUDIO COMPENSATOR AUDIO FREQUENCY ANALOGUE FM AUDIO AUTOMATIC GAIN CONTROL AUTOMATIC LEVEL CONTROL ANTENNA AUTOMATIC THRESHOLD CONTROL	<b>M</b>	MTR μCOM	MOTOR MICROCOMPUTER
<b>B</b>	BAL	BALANCE	<b>P</b>	PD PB PLL P-ON	PHOTO DETECTOR PLAYBACK PHASE LOCKED LOOP POWER ON
<b>C</b>	CAV CLV CCD CD CK CONT CS C-SYNC CX	CONSTANT ANGULAR VELOCITY CONSTANT LINEAR VELOCITY CHARGE COUPLED DEVICE COMPACT DISC CLOCK CONTROL CHIP SELECT COMPOSITE SYNCHRONIZATION AFM NOISE REDUCTION	<b>R</b>	R-CH RTN RFMD RST REV RF-CORR	RIGHT CHANNEL RETURN RADIO FREQUENCY MODULATOR RESET REVERSE RF CORRECTION
<b>D</b>	DEM DIG/ANA DL DSP DOS DRV	DEMODULATOR DIGITAL/ANALOGUE DELAY LINE DIGITAL SIGNAL PROCESSOR DROP OUT SENSE DRIVER	<b>S</b>	SPDL SLD SO SI SCK SYPS SW S/H SENS SQ	SPINDLE SLIDER SERIAL OUTPUT SERIAL INPUT SERIAL CLOCK SYSTEM POWER SUPPLY SWITCH SAMPLE & HOLD SENSITIVITY SQUELCH
<b>E</b>	EFM ERR EQ EXT	EIGHT TO FOURTEEN MODULATION ERROR EQUALIZER EXTERNAL	<b>T</b>	TRK or TRKG TP TBC TGL	TRACKING TEST POINT TIME BASE CORRECTION TOGGLE
<b>F</b>	FCS or FOCS FG FL FTS Fsc FWD	FOCUS FREQUENCY GENERATOR FLUORESCENT LAMP FOCUS TRACKING SLIDER CHROMINANCE SUBCARRIER FREQUENCY FORWARD	<b>U</b>	UNREG	UNREGULATED
<b>G</b>	GFS GND	GET FRAME SYNC LOCK GROUND	<b>V</b>	V-SYNC VSQ VPS VDEM VHF VCA VCO	VERTICAL SYNCHRONIZATION VIDEO SQUELCH VIDEO PHASE SHIFTER VIDEO DEMODULATOR VERY HIGH FREQUENCY VOLTAGE CONTROLLED AMPLIFIER VOLTAGE CONTROLLED OSCILLATOR
<b>H</b>	HLD H SYNC	HOLD HORIZONTAL SYNCHRONIZATION	<b>X</b>	X...	ACTIVATED WHEN LOW VOLTAGE
<b>I</b>	INT IR	INTERNAL INFRARED RAYS			
<b>L</b>	L-CH LAT LD LPF LIM	LEFT CHANNEL LATCH LASER DIODE LOW PASS FILTER LIMITER			

# 9. CIRCUIT DESCRIPTION

## KARAOKE SECTION BLOCK DIAGRAM

KFCB assembly

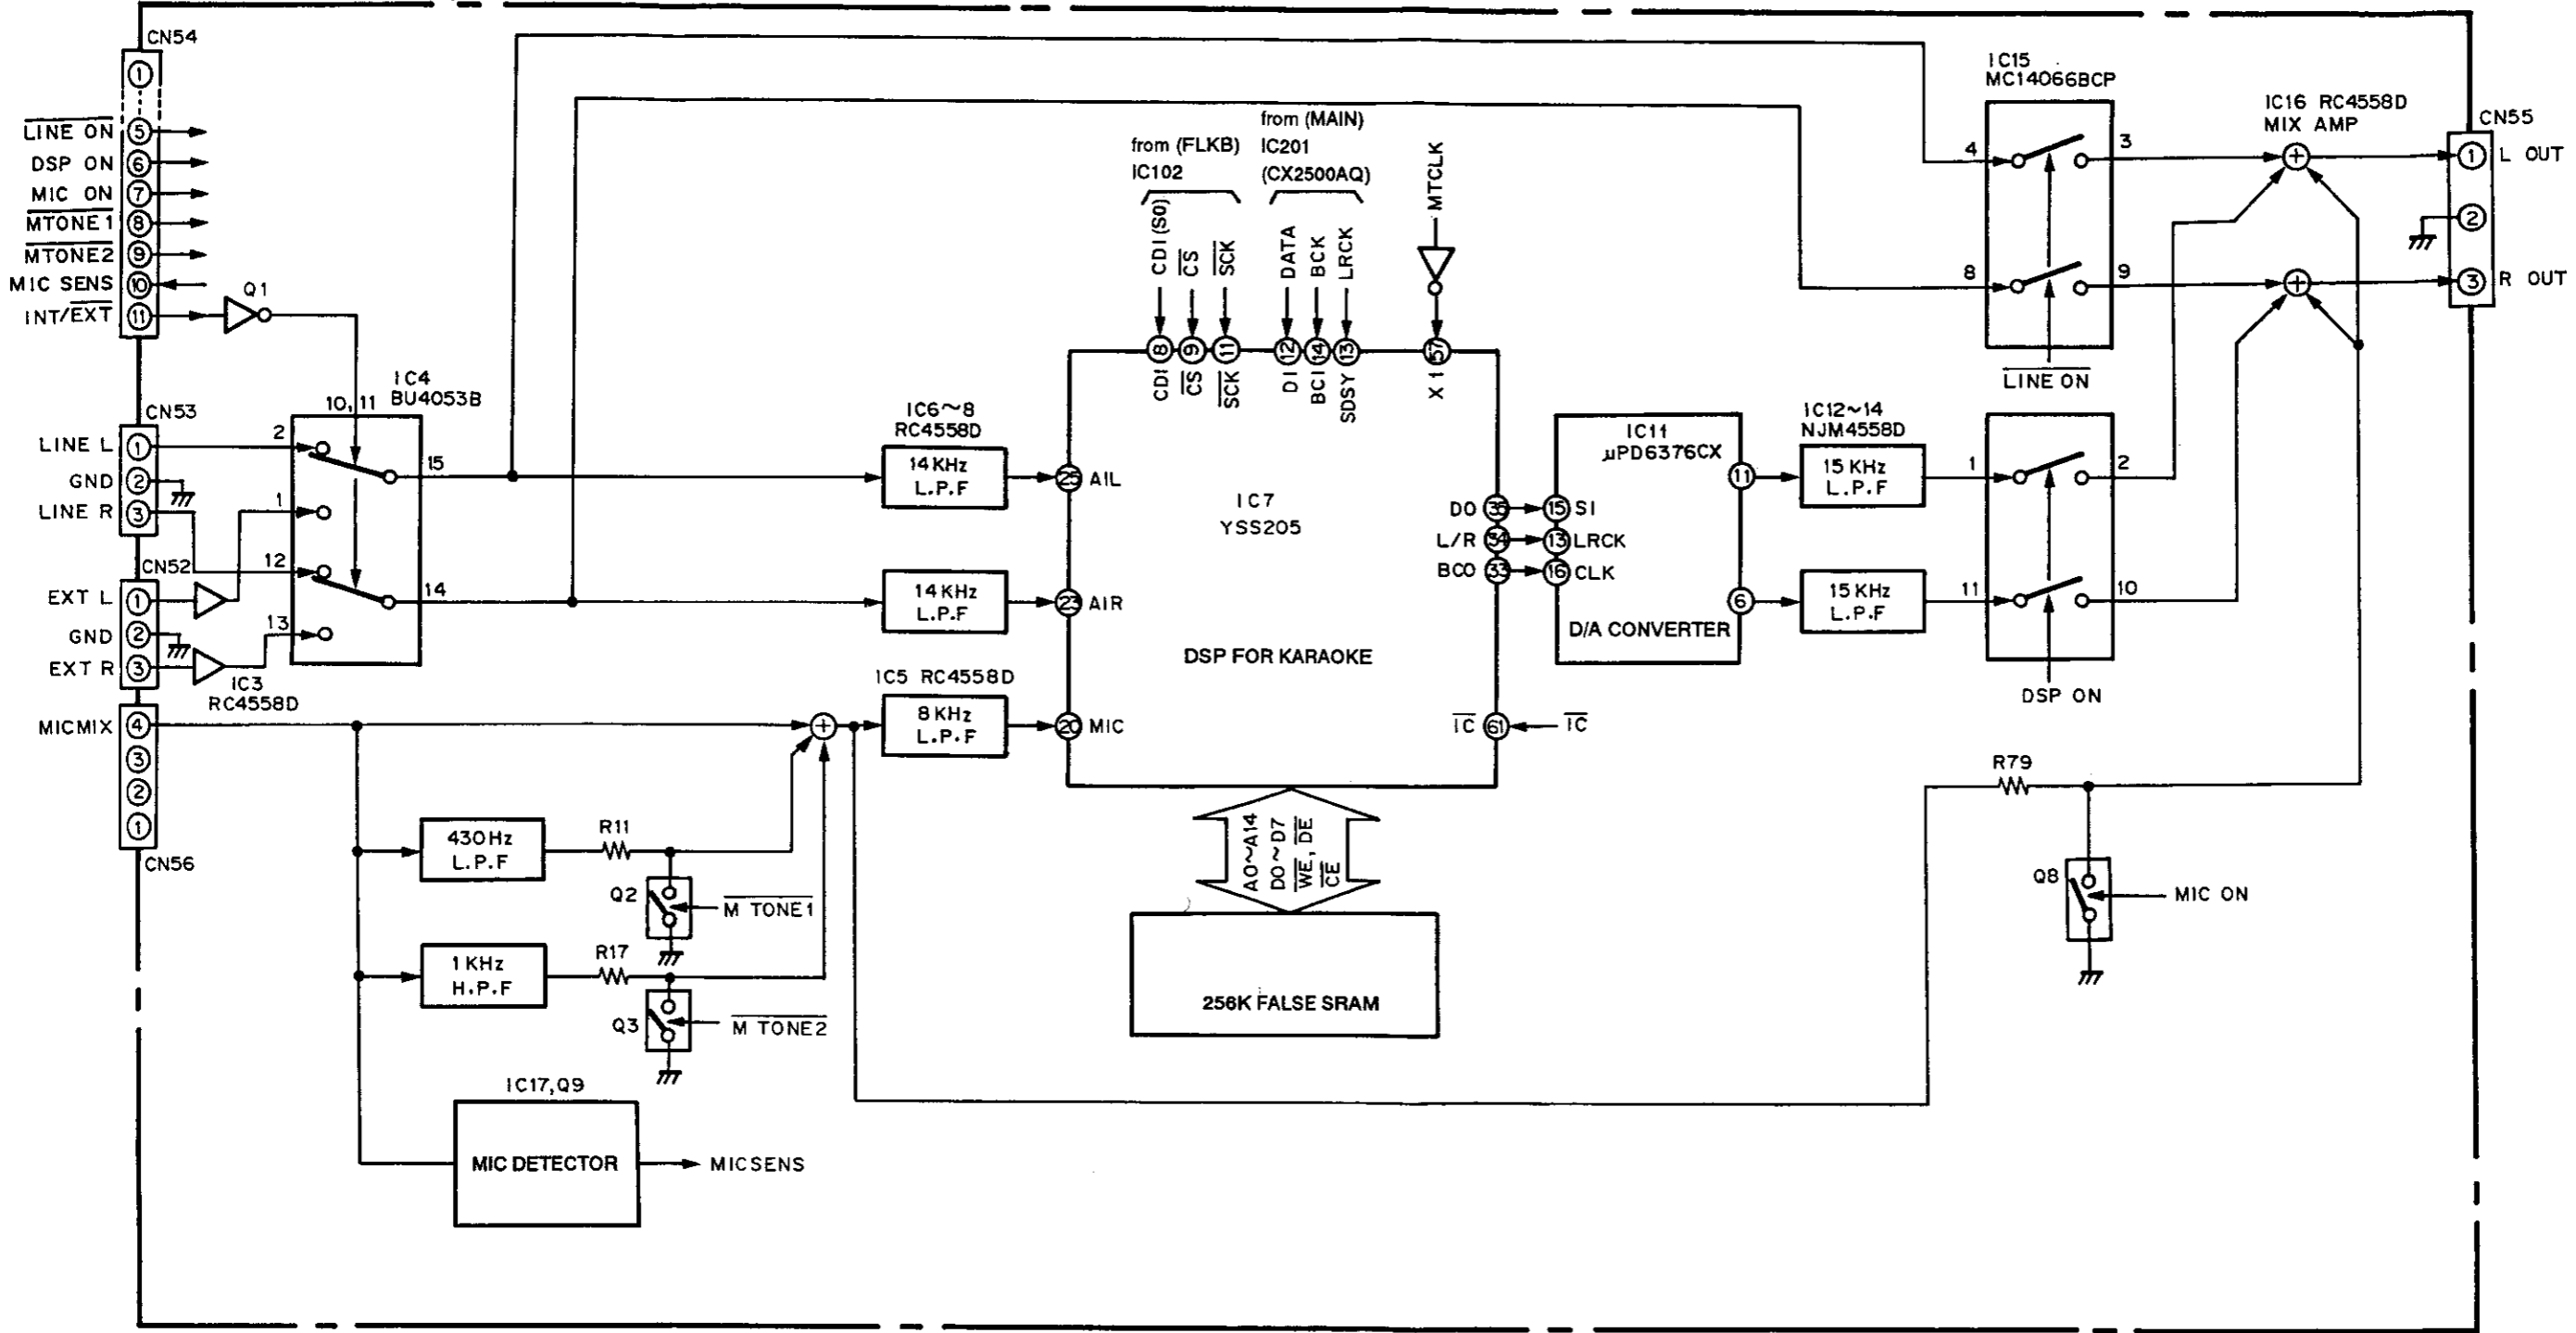

## KARAOKE section

This system features KARAOKE functions such as key control, digital echo, one touch KARAOKE, MUSIC/VOCAL balance by digital signal processing using DSP (YSS205) for KARAOKE. Additionally, more functions, surround, vocal effect and chorus are realized.

IC9 (YSS205) is controlled by signals from the mode control microprocessor (IC102 in FLKB) to the terminals of Pin ⑧ (CDI), Pin ⑨ ( $\overline{\text{CS}}$ ) and Pin ⑪ (SCK).

Voice processing is also made by IC9 with 256K false SRAM of IC10 (HM65256BLP-10) externally mounted. Three lines of digital, analogue and microphone sound are input to YSS205. Digital sound is input from Pin ⑫ (DI), Pin ⑬ (SDSY) and Pin ⑭ (BCI). Analogue sound is input from Pin ⑮ (AIL) and Pin ⑯ (AIR) through LPF of 14 kHz consisting of IC6 to IC8. Microphone sound is input from Pin ⑰ (MIC) through LPF of 8 kHz consisting of IC5. Analogue and microphone sound are converted into digital signal by the built-in A/D converter. This sound signal is processed in digital signal form. The signal is output from Pin ⑳ (BCO), Pin ㉑ (L/R) and Pin ㉒ (DO) and input to D/A converter of IC11 ( $\mu$ PD6376CX). The output of D/A converter passes through LPF of 15 kHz consisting of IC12 to IC14 and input to IC15 (MC14066BCP) as DSP signal. DSP signal is the addition of disc and microphone sound with signal processed. The LINE signal is also input from CN53 to IC15, and a signal to be output is selected by the control signal from Pin ⑤ ( $\overline{\text{LINE ON}}$ ) and Pin ⑥ (DSP ON) of CN54. The LINE signal is added with microphone signal (signal not applied with echo) selected by MIC ON at IC16 and become sound output. The theories of LINE ON, DSP ON, MIC ON in each mode are as follows.


- LINE ON ... L: when NORMAL mode. H: when ONE-TOUCH KARAOKE mode.
- DSP ON .... H: when KARAOKE and AUX INPUT mode.  
H: when surround and ONE-TOUCH KARAOKE even in normal mode.
- MIC ON .... H: when KARAOKE and AUX INPUT mode.  
L: when MAGIC VOICE and MUSIC VOCAL.

As for the amount of digital echo and MUSIC/VOCAL balance, the output of VR103 and VR104 are converted into digital signal in FLKB by A/D converter of IC101 (TC35097AP), then input to the mode control microprocessor (IC102). This information is sent to IC9 (YSS205) and controlled by digital signal.


There are three surround modes, hall, stage and arena. This is realized by combing delay time and amount. Additionally, there are three types of vocal effect, POPS, JAZZ and BALLAD. This is realized by changing the frequency characteristics of microphone sound and by combing delay time and amount. The frequency of microphone sound is compensated in high range for pops, in low range for jazz and is flat for ballad. These are controlled by  $\overline{\text{MTONE 1}}$  and  $\overline{\text{MTONE 2}}$ . For pops,  $\overline{\text{MTONE 2}}$  becomes L and for jazz,  $\overline{\text{MTONE 1}}$  becomes L. Others than above become H. For "ONCE MORE", HALL and JAZZ are selected. For CHORUS, the microphone sound in which key has been changed into two ways is added to the original microphone sound.


## 10. PANEL FACILITIES

- Most of the buttons on the front panel are used for Karaoke play.
- A detailed description is provided on the indicated page(s).

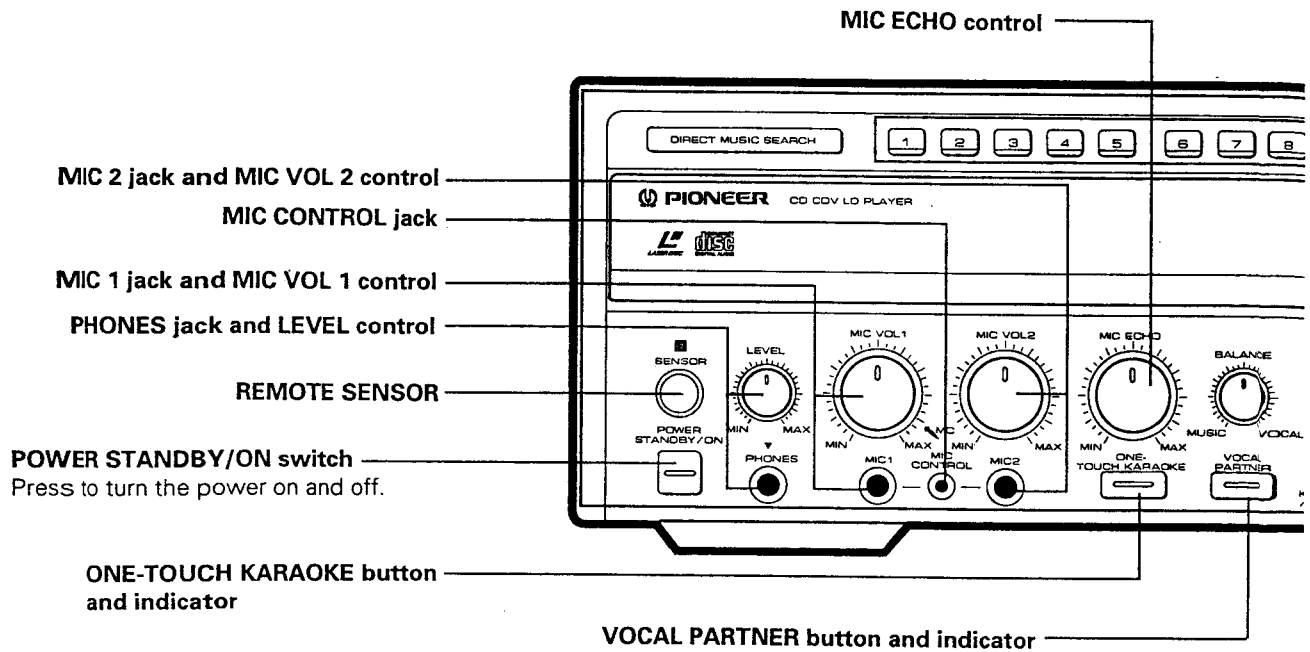


### Display window

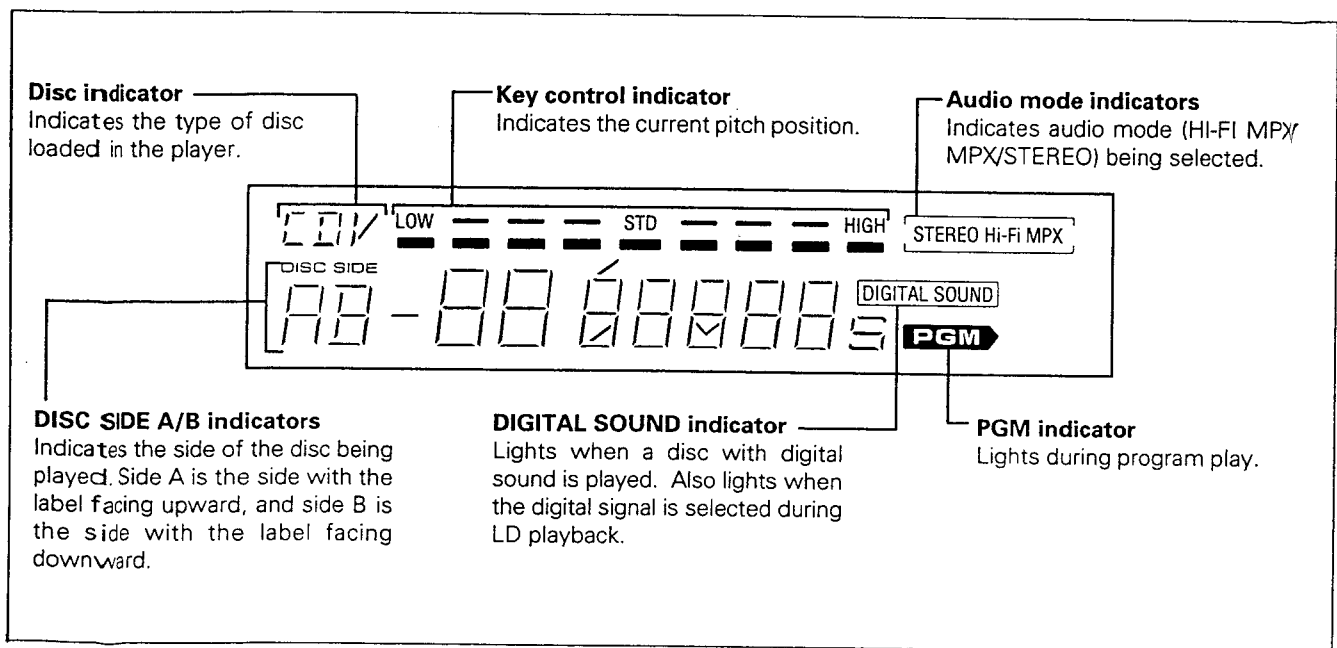

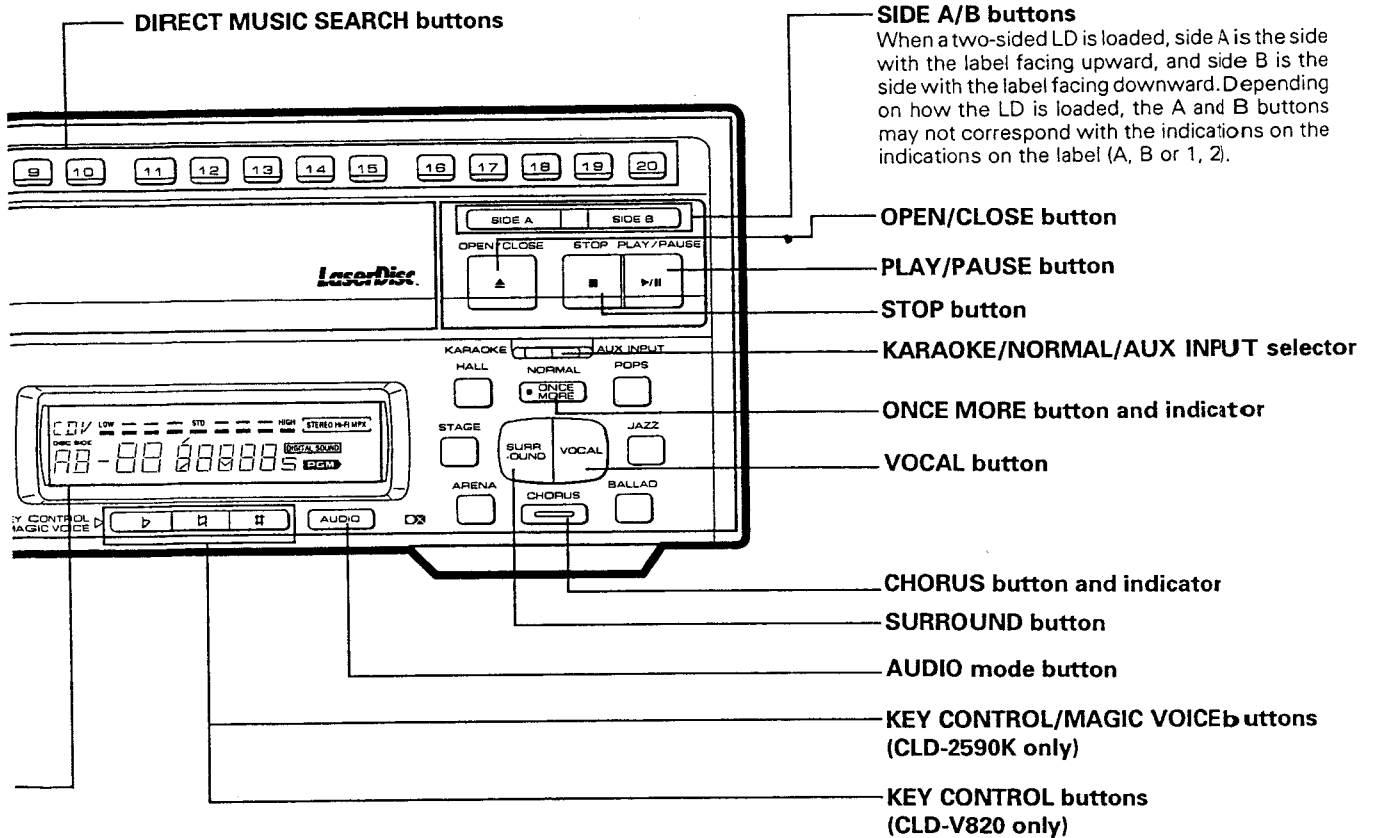




- A detailed description is provided on the indicated page(s).
- Remote control buttons with the same names or marks as buttons on the front panel of the player control the same operations as the corresponding front panel buttons.

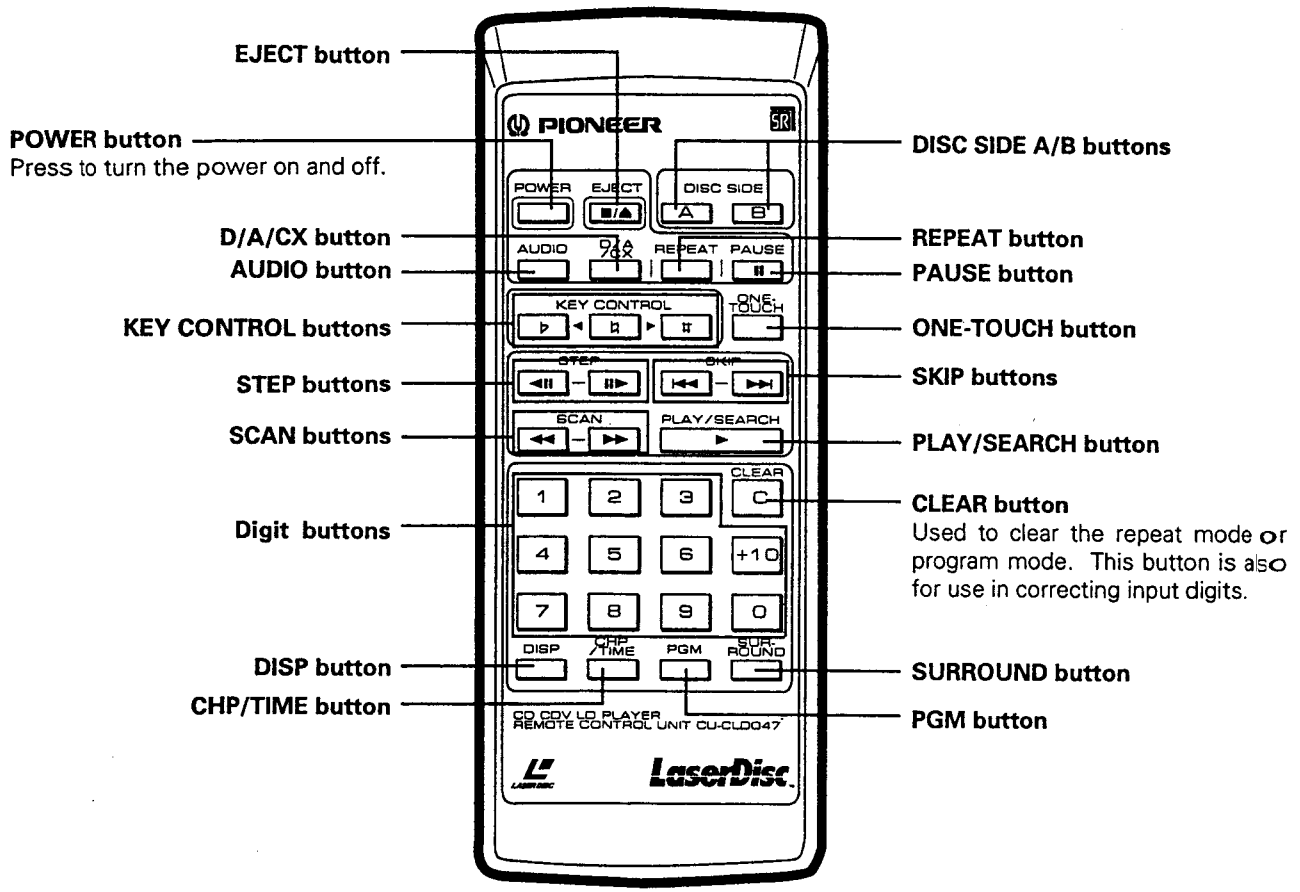

# 11. CONNECTIONS

## USING TELEVISION WITH AUDIO AND VIDEO JACKS

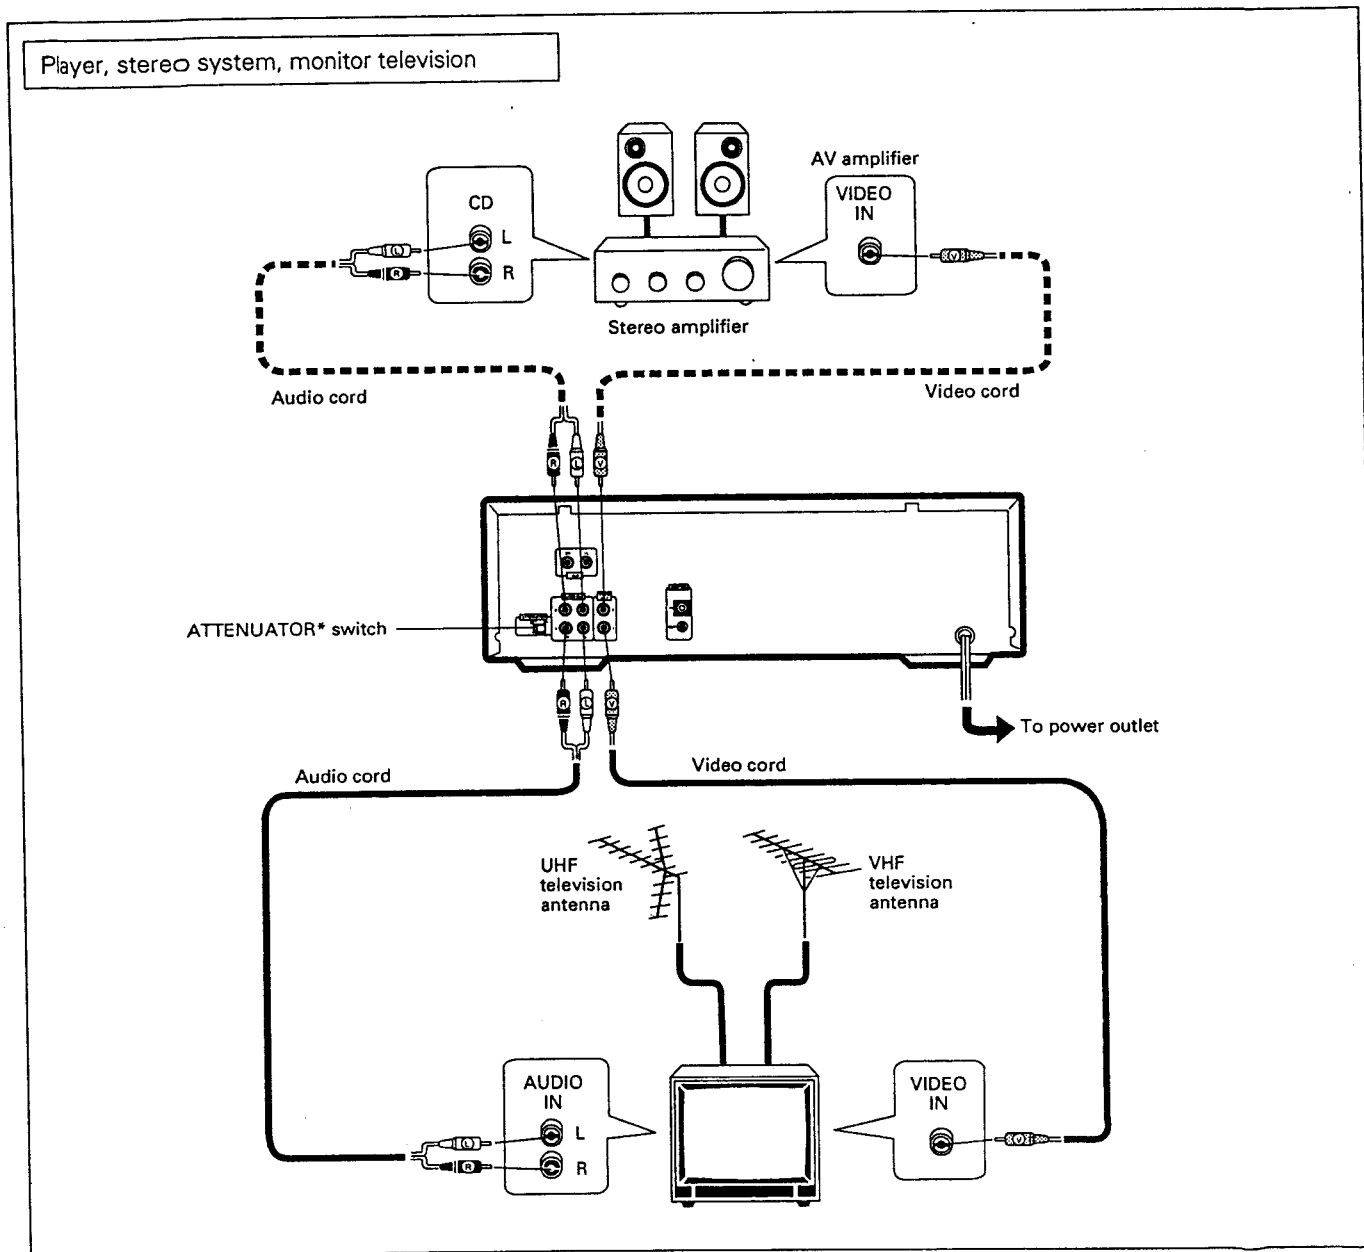


- Connect the VIDEO OUT jack of the player to the video input jack of the monitor television.
- Connect the AUDIO OUT jacks to the stereo amplifier AUX, CD, LD, VDP or other jacks, except the PHONO input jacks. The television speakers can also be used by connecting the television audio input jacks and the player AUDIO OUT jacks, however connection to a stereo amplifier is recommended to obtain superior audio playback quality for Compact Discs and LaserDiscs. Do not change the television antenna and VCR connections.
- Connect the power cord to an AC wall outlet.
- Combined system control is possible when a Pioneer television and audio/video stereo receiver are connected.

**\*ATTENUATOR switch**

When the television speakers are used, the sound may be distorted. In this case, set ATTENUATOR to **ON** to reduce the distortion.

## USING TELEVISION WITHOUT AUDIO AND VIDEO JACKS (WITH OPTIONAL RF MODULATOR JA-RF3L) (CLD-V820 only)

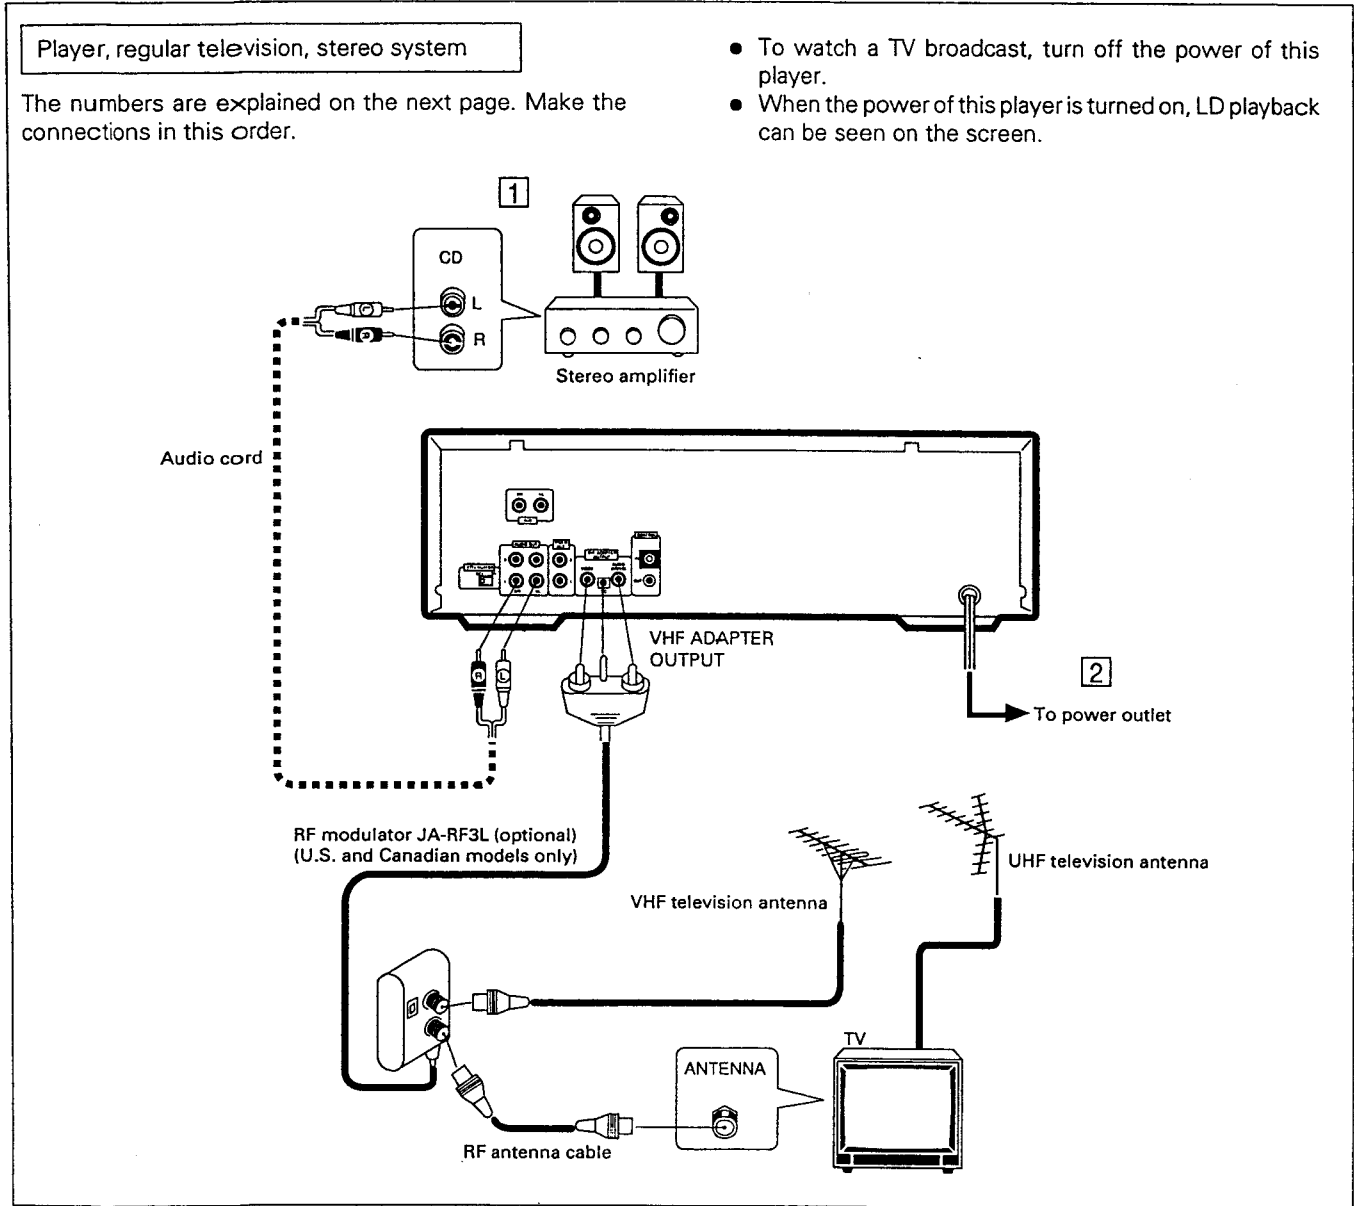

1. Detach the VHF antenna cable from the VHF antenna terminal of your TV set, and connect the cable to the VHF IN terminal of the RF modulator JA-RF3L (optional).
2. Connect the VHF OUT terminal of the RF modulator to the VHF antenna terminal of your TV set with the supplied RF cable.
3. Connect the socket (3-pin) of the RF modulator to the VHF ADAPTER OUTPUT jacks.

**NOTES:**

- Push the plug in firmly. If the plug is not properly inserted, it may result in snow on the screen or noise.

When the sound from a LaserDisc or Compact Disc is output from a television speaker it becomes monaural sound. (This is the same as stereo television).

**NOTE:**

- Stripe patterns may appear when a LaserDisc is played on a television. Move the antenna cable away from the power cord to avoid this.
- Be sure to turn off the power of this player when you watch a TV broadcast.

## 12. SPECIFICATIONS

### 1. General

System .....	LaserVision Disc system and Compact Disc digital audio system
Laser .....	Semiconductor laser wavelength 780 nm
Power requirements	
CLD-V820 .....	AC 120V, 60 Hz
CLD-2590K .....	AC 110 - 120V/220 - 240V (Switchable), 50/60 Hz
Power consumption	
CLD-V820 .....	46 W
CLD-2590K .....	36 W
Weight .....	8.7 kg (19 lbs 3 oz)
Dimensions .....	420 (W) x 441 (D) x 139 (H) mm
	16-9/16 (W) x 17-3/8 (D) x 5-1/2 (H) in
Operating temperature .....	+5°C ~ +35°C (41°F - 95°F)
Operating humidity .....	5% ~ 90%
	(There should be no condensation of moisture.)

### 2. Disc

#### LaserVision Discs

*Maximum playing times	
12-inch standard play disc .....	1 hour/both sides
12-inch extended play disc .....	2 hours/both sides
8-inch standard play disc .....	28 min/both sides
	14 min/one side
8-inch extended play disc .....	40 min/both sides
	20 min/one side
Spindle motor speed	
Standard play disc .....	1,800 rpm
Extended play disc .....	1,800 rpm (inner circumference) to 600 rpm (outer circumference)
	(For a 12-inch disc)

#### Compact Discs

DISC .....	Diameter: 5-inch, 3-inch, Thickness: 1.2 mm
Rotation direction (pickup side) .....	Counterclockwise
Liner speed .....	1.2 ~ 1.4m/sec
*Maximum playing time	
	74 min. 5-inch discs
	20 min. 3-inch discs
	(For stereo playback)

#### Compact Discs with Video

Disc .....	Diameter: 5-inch, Thickness: 1.2 mm
Rotation direction (pickup side) .....	Counterclockwise
Liner speed .....	Audio portion: 1.2 ~ 1.4m/sec
	Video portion: 11 ~ 12m/sec
*Maximum playing time .....	Video portion: 5 min. (CLV)
	Audio portion: 20 min. (Digital)

\* Actual playback time differs for each disc.

### 3. Video characteristics (two pairs)

Format .....	NTSC specifications
Video output	
Level .....	1 Vp-p nominal, sync. negative, terminated
Impedance .....	75Ω unbalanced
Jack .....	RCA jack

### 4. Audio characteristics (two pairs)

Output level	
During analog audio output .....	200 mVrms (1 kHz, 40%)
During digital audio output .....	200 mVrms (1 kHz, -20 dB)
Jacks .....	Both RCA jacks
Number of channels .....	2

### 5. Other Terminals

Control input/output .....	Both miniature jacks
AUX .....	RCA jacks
Number of channels .....	2
VHF adapter output (Video/Audio) .....	Both RCA jacks (CLD-V820 only) with DC jack

### 6. Accessories


Remote control unit (CU-CLD047) .....	1
Size "AAA" (IEC R03) dry cell batteries .....	2
Video cord .....	1
Audio cord .....	1
Operating instructions .....	1
Warranty card .....	1

## 7. Functions

Remote control unit operations (CU-CLD047)

	Function	Standard play Disc (CAV)	Extended play Disc (CLV)	Compact Disc with Video	Compact Disc
Basic Functions	Two-side play	YES	YES	NO	NO
	Single-side play	YES	YES	YES	YES
	Pause	YES	YES	YES	YES
	Stop	YES	YES	YES	YES
	Eject	YES	YES	YES	YES
Search	Fast forward (forward and reverse)	YES	YES	YES	YES
	Chapter/Track skip	YES	YES	YES	YES
	Direct chapter/Track number search	YES	YES	YES	YES
	Frame number search	YES	NO	NO	NO
	Time number search	NO	YES	YES	YES
	Absolute time search	NO	NO	NO	YES
Program	Chapter/Track program play	YES	YES	YES	YES
	Program correction	YES	YES	YES	YES
Repeat	Chapter/Track repeat	YES	YES	YES	YES
	One-side repeat	YES	YES	YES	YES
	Two-side repeat	YES	YES	NO	NO
	Program repeat	YES	YES	YES	YES
Trick play	Still/Step	YES	NO	NO	NO
Time display	Elapsed time display	NO	YES	YES	YES
	Absolute time display	YES*1	NO	NO	YES
	Remaining track time display	NO	NO	YES	YES
	Remaining total time display	YES*1	YES*1	YES	YES
	Total number of selections, total time display	YES*1	YES*1	YES	YES
Others	CX system ON/OFF	YES*2	YES*2	NO	NO
	AUTO DIGITAL/ANALOG switch	YES*3	YES*3	NO	NO
	Audio channel selection (Stereo, 1/L, 2/R)*4	YES	YES	YES	YES

\*1 Only discs with TOC

\*2 Valid for analog sound playing a disc with the  mark.

\*3 Can only be used with discs with digital sound tracks.

\*4 Only NORMAL mode

**NOTE:**

*The specifications and design of this product are subject to change without notice, due to improvement.*