

4188



# Service Manual

ORDER NO.  
RRV1057

CD CDV LD PLAYER

# CLD-900 CLD-900S

- Refer to the service manual ARP2543 for CLD-1700/HEZ and CLD-700/HEZ.

**THIS MANUAL IS APPLICABLE TO THE FOLLOWING MODEL(S) AND TYPE(S).**

Type	Model		Power Requirement	The voltage can be converted by the following method.
	CLD-900	CLD-900S		
HEZ	○	—	AC220-230V	AC240V, *
HB	○	—	AC240V	AC220-230V, *
HEZW/SP	—	○	AC220-230V	AC240V, *

\* : Alter the wiring of the Power-supply block at the primary winding of Power transformer referring to the "Line Voltage Selection" described in Service Manual.

4188

## CONTRAST OF MISCELLANEOUS PARTS

**NOTES:**

- Parts marked by "NSP" are generally unavailable because they are not in our Master Spare Parts List.
- The  $\Delta$  mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
- Parts marked by "⊙" are not always kept in stock. Their delivery time may be longer than usual or they may be unavailable.
- When ordering resistors, first convert resistance values into code form as shown in the following examples.
  - Ex.1 When there are 2 effective digits (any digit apart from 0), such as 560 ohm and 47k ohm (tolerance is shown by J=5%, and K=10%).
    - 560  $\Omega$   $\rightarrow$   $56 \times 10^1 \rightarrow 561$  ..... RD1/8PM  $\boxed{5}\boxed{6}\boxed{1}J$
    - 47k  $\Omega$   $\rightarrow$   $47 \times 10^3 \rightarrow 473$  ..... RD1/4PS  $\boxed{4}\boxed{7}\boxed{3}J$
    - 0.5  $\Omega$   $\rightarrow$  0R5 ..... RN2H  $\boxed{0}\boxed{R}\boxed{5}K$
    - 1  $\Omega$   $\rightarrow$  010 ..... RSIP  $\boxed{0}\boxed{1}\boxed{0}K$
  - Ex.2 When there are 3 effective digits (such as in high precision metal film resistors).
    - 5.62k  $\Omega$   $\rightarrow$   $562 \times 10^1 \rightarrow 5621$  ..... RN1/4PC  $\boxed{5}\boxed{6}\boxed{2}\boxed{1}F$

CLD-900/HEZ, HB, CLD-900S/HEZW/SP and CLD-1700/HEZ have the same construction except for the following :

Mark	Symbol & Description	Part No.				Remarks
		CLD-1700/ HEZ	CLD-900/ HEZ	CLD-900/ HB	CLD-900S/ HEZW/SP	
⊙ NSP	MOTHER assy	VWM1396	VWM1458	VWM1458	VWM1458	
	MAIN assy	VWX1182	.....	.....	.....	
	MAIN assy	.....	VWX1207	VWX1207	VWX1207	
NSP	AUDIO assy	VWX1124	.....	.....	.....	
	AUDIO assy	.....	VWX1208	VWX1208	VWX1208	
⊙ NSP	SCRB assy	VWV1248	.....	.....	.....	
	SCRB assy	.....	VWV1352	VWV1352	VWV1352	No. 1
⊙ NSP	FLKB assy	VWM1278	.....	.....	.....	
	FLKB assy	.....	VWM1472	VWM1472	VWM1472	
NSP	FLKY assy	VWG1336	.....	.....	.....	
	FLKY assy	.....	VWG1523	VWG1523	VWG1523	No. 25
NSP	PSWB assy	VWG1315	.....	.....	.....	
NSP	PWSB assy	.....	VWG1526	VWG1526	VWG1526	No. 26
NSP	HEPB assy	VWV1254	.....	.....	.....	
⊙	SYPS assy	VWR1146	.....	.....	.....	
	SYPS assy	.....	VWR1177	VWR1178	VWR1177	No. 2
	Door spring	VBH1202	VBH1223	VBH1223	VBH1223	No. 27
	Connection cord	VDE-055	.....	.....	.....	
	Euro scart cable (21P)	VDE1027	.....	.....	.....	
$\Delta$	AC power cord	VDG1028	.....	.....	.....	
$\Delta$	AC power cord HE	.....	PDG1003	.....	PDG1003	No. 3
$\Delta$	AC power cord HB plug	.....	.....	PDG1055	.....	
	Disc pad	VEC1191	VEC1657	VEC1657	VEC1657	
	Disc pad (C)	VEC1380	VEC1658	VEC1658	VEC1658	
	FL lens	VEC1568	VEC1631	VEC1631	VEC1631	No. 37
	Cushion	VEC1578	.....	.....	.....	
NSP	PC support	VEC1584	.....	.....	.....	
	Pad (F)	VHA1105	.....	.....	.....	
	Pad (R)	VHA1106	.....	.....	.....	
	Protector A	.....	VHB1004	VHB1004	VHB1004	No. 4

Note : The numbers in the remarks column correspond to the numbers on the exploded diagram. Refer to "EXPLODED VIEWS".

Mark	Symbol & Description	Part No.				Remarks
		CLD-1700/ HEZ	CLD-900/ HEZ	CLD-900/ HB	CLD-900S/ HEZW/SP	
	Protector B	.....	VHB1005	VHB1005	VHB1005	No. 5
	Insulator	PNW1912	PNW1912	PNW1912	.....	For front
	Insulator assy	.....	.....	.....	DXA1490	For front
	Insulator assy	VXA1881	VXA1881	VXA1881	DXA1491	For rear
	LED lens	.....	PNW2019	PNW2019	PNW2019	No. 6
NSP	Laser disc badge	.....	VAM1029	VAM1029	VAM1029	No. 7
	Name plate	.....	VAM1032	VAM1032	VAM1032	No. 8
	Packing case	VHG1260	VHG1341	VHG1342	VHG1348	
NSP	Rear panel	VNA1278	VNA1410	VNA1411	.....	
	Rear panel	.....	.....	.....	VNA1428	
	Snap plate	VNE1102	.....	.....	.....	
	Jack holder	VNE1811	.....	.....	.....	
	Door holder	VNE1812	VNE1905	VNE1905	VNE1905	No. 28
	FL filter	VNK1694	.....	.....	.....	
	PW button	VNK2002	VNK2329	VNK2329	VNK2329	No. 29
	Volume knob	VNK2003	.....	.....	.....	
	Tray panel	VNK2032	.....	.....	.....	
NSP	Tray panel	.....	VNK2319	VNK2319	VNK2319	No. 30
NSP	CD door	VNK2033	.....	.....	.....	
	CD door	.....	VNK2320	VNK2320	VNK2320	No. 31
	Sub panel	VNK2034	VNK2648	VNK2648	VNK2648	No. 32
	Main key	VNK2035	VNK2324	VNK2324	VNK2324	No. 33
	Ten key	VNK2036	VNK2331	VNK2331	VNK2331	No. 34
	Mode key	VNK2037	.....	.....	.....	
	CD button	VNK2038	.....	.....	.....	
	Shuttle knob	VNK2039	VNK2321	VNK2321	VNK2321	No. 35
NSP	Center panel	VNK2085	.....	.....	.....	
	Skip key L	.....	VNK2322	VNK2322	VNK2322	No. 9
	Skip key R	.....	VNK2323	VNK2323	VNK2323	No. 10
	LED lens A	.....	VNK2325	VNK2325	VNK2325	No. 11
	Tray assy-S	VXX1729	VXX2066	VXX2066	VXX2066	
NSP	LD tray	VNK1991	VNK2550	VNK2550	VNK2550	
	Operating instructions (English/French/German/Italian)	VRE1010	VRE1020	VRE1020	.....	No. 12
	Operating instructions (Dutch/Swedish/Spanish/Portuguese)	VRF1017	VRF1026	.....	.....	No. 13
	Operating instructions (Spanish)	.....	.....	.....	VRD1018	No. 14
NSP	Front panel	.....	VNK2646	VNK2646	VNK2710	No. 15
NSP	Caution card (EW)	VRM1027	VRM1027	.....	VRM1027	No. 16
NSP	Caution card	VRR1009	VRR1009	.....	.....	No. 17
NSP	Caution card (UC)	.....	.....	VRR1020	.....	No. 18
NSP	Caution card (UC)	VRM1039	.....	.....	.....	
	Front panel assy	VXA1867	.....	.....	.....	
	Front panel assy-S	.....	VXX2034	VXX2034	VXX2050	No. 19
	CD door assy-S	VXX1728	.....	.....	.....	
	Center panel assy-S	VXX1757	.....	.....	.....	
	Tray panel assy-S	.....	VXX1931	VXX1931	VXX1931	No. 20
	Damper assy	.....	VXA1999	VXA1999	VXA1999	No. 21
	Remote control unit (CU-CLD077)	VXX1758	.....	.....	.....	
	Remote control unit (CU-CLD072)	.....	VXX2016	VXX2016	VXX2016	
	Battery cover	VNK1293	PZN1010	PZN1010	PZN1010	

Note : The numbers in the remarks column correspond to the numbers on the exploded diagram. Refer to "EXPLODED VIEWS".

# CLD - 900, CLD - 900S

Mark	Symbol & Description	Part No.				Remarks
		CLD-1700/ HEZ	CLD-900/ HEZ	CLD-900/ HB	CLD-900S/ HEZW/SP	
NSP	Caution label	VRW1094	VRW1094	.....	VRW1094	* 1
	Caution label	.....	.....	PRW1018	.....	* 1
	Caution label HE	VRW1297	VRW1297	.....	VRW1297	* 1
	Service telephone list	.....	.....	.....	VRR1021	No. 22
	Connection diagram	.....	.....	.....	VRR1022	No. 23
NSP	Telephone number card (For service information)	.....	.....	.....	VRR1023	No. 24
NSP	Polyethylene bag	Z21-029	.....	.....	.....	

\* 1 : Refer to the SAFETY INFORMATION in the service manual ARP2543 for CLD- 1700 and CLD- 700.

Note : The numbers in the remarks column correspond to the numbers on the exploded diagram. Refer to "EXPLODED VIEWS".

## LIST OF ASSEMBLIES (FOR CLD- 900 AND CLD- 900S)

MOTHER assy

- MAIN assy
- AUDIO assy
- SCRIB assy

FLKB assy

- FLKY assy
- PWSB assy

## MAIN ASSY

VWX1207 and VWX1116 of CLD - 700/HEZ have the same construction except for the following :

Mark	Symbol & Description	Part No.		Remarks
		VWX1116	VWX1207	
	IC101	PD0135B	PD0135C	
	C446, C618	CQMA103J50	CFTXA103J50	
	C567	CEAS470M16	.....	
	C580	.....	CKSQYF103Z50	
	R852, R853	RS1/10S823J	RS1/10S563J	
	R868	RS1/10S222J	RS1/10S182J	
	R871	RS1/10S223J	RS1/10S203J	

## AUDIO ASSY

VWX1208 and VWX1117 of CLD - 700/HEZ have the same construction except for the following :

Mark	Symbol & Description	Part No.		Remarks
		VWX1117	VWX1208	
	IC201	CXD2500AQ	CXD2500BQ	
	Q222, Q223	2SA1037K	.....	
	L201, L202, L204, L205	LAU010K	LAU1R0J	
	C284, C285	CEAS100M50	.....	
	C325, C326	CKSQYF104Z25	.....	
	R320, R321	RS1/10S101J	.....	
	R322, R323	RS1/10S472J	.....	
	R324, R325	RS1/10S224J	.....	

## SYPS ASSY

VWR1177, VWR1178 and VWR1146 of CLD - 700/HEZ have the same construction except for the following :

Mark	Symbol & Description	Part No.			Remarks
		VWR1146	VWR1177	VWR1178	
	L2	.....	VTL-004	VTL-004	


● PCB PARTS LIST

Mark No.	Description	Part No.	Mark No.	Description	Part No.
<b>FLKY ASSY</b>			<b>SCRB ASSY</b>		
<b>SEMICONDUCTORS</b>			<b>SEMICONDUCTOR</b>		
IC201		PD3275A	Q701		2SC1740S
IC202		S-806D			
Q203		DTA144ES	<b>CAPACITORS</b>		
Q202		DTC114ES	C703,C704		CCSQCH271J50
Q201,Q204		DTC124ES	C701,C702		CEAS470M16
			C706		CEAS471M10
D203- D206		1SS252	C705		CKSQYF104Z25
D201		1SS254	<b>RESISTORS</b>		
D210		PG3361X	R705		DCN1003
<b>SWITCHES</b>			R709		RD1/6PM103J
S201- S204,S206,S210,S214		RSG1030	R704		RD1/6PM391J
S217- S225		RSG1030	R706		RD1/6PM680J
S205,S207- S209,S211- S213		RSG1034	Other Resistors		RS1/10S □□□J
S215,S216		RSG1034	<b>OTHERS</b>		
S228		VSD1008	JA9	7P CABLE HOLDER	51048-0700
<b>CAPACITORS</b>				RGB CONNECTOR	VKB1037
C204		CEAL100M16			
C201		CEAL101M6R3			
C206		CEAL2R2M50			
C207		CEAS100M16			
C205		CKPUYF103Z25			
C202,C203		CKPUYF223Z25			
<b>RESISTORS</b>					
R230		RAST104J			
Other Resistors		RD1/6PM □□□J			
<b>OTHERS</b>					
X201	CERAMIC RESONATOR (8.00MHz)	EFOEC8004A4			
	REMOTE CONTROL SENSOR UNIT	GP1U58X			
V201	FL TUBE	VAW1033			
J21	CORD (4P)	VDA1440			
	SPACER	VEC1599			
	FL HOLDER	VNF1078			
<b>PWSB ASSY</b>					
<b>SEMICONDUCTOR</b>					
D211		SLH34VCF04			
<b>SWITCH</b>					
S226		RSG1030			
<b>RESISTORS</b>					
All Resistors		RD1/6PM □□□J			


● EXPLODED VIEWS

Note :  
The numbers on the exploded diagram correspond to the numbers in the remarks column of the comparative table. Refer to "CONTRAST OF MISCELLANEOUS PARTS".

● Tray panel section

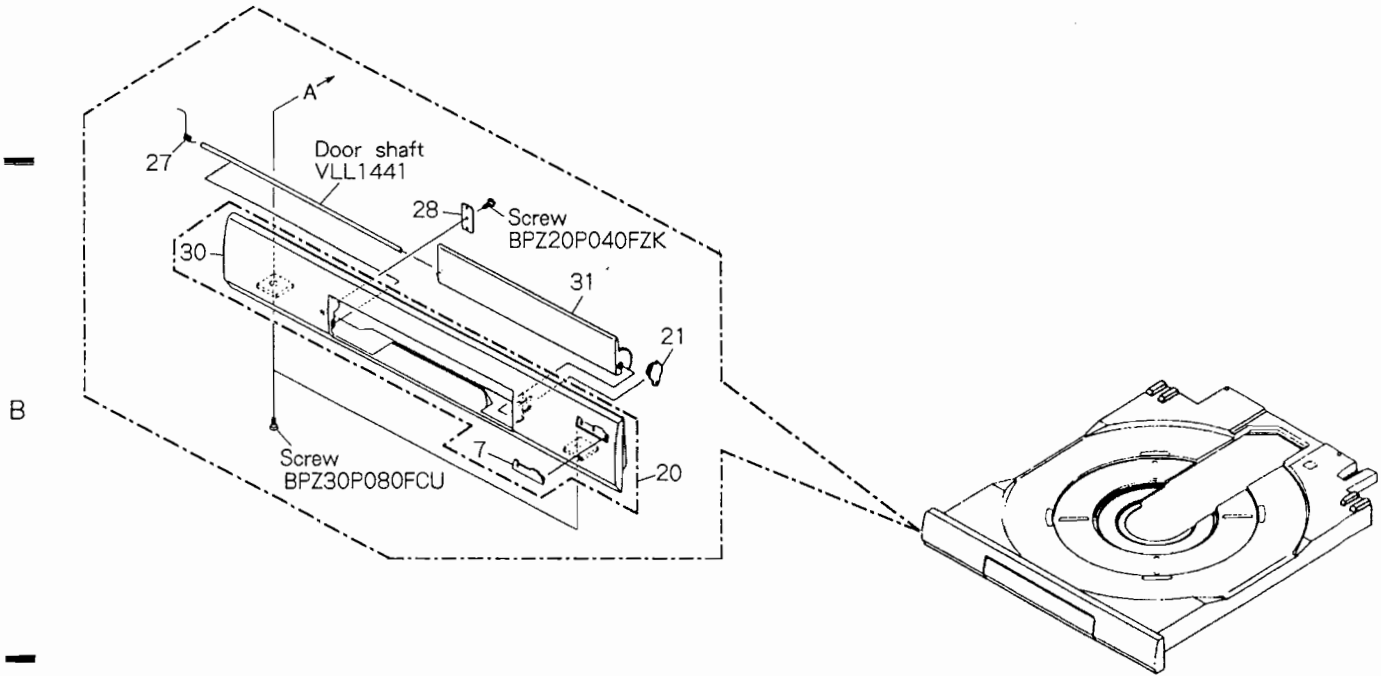


● Front panel section

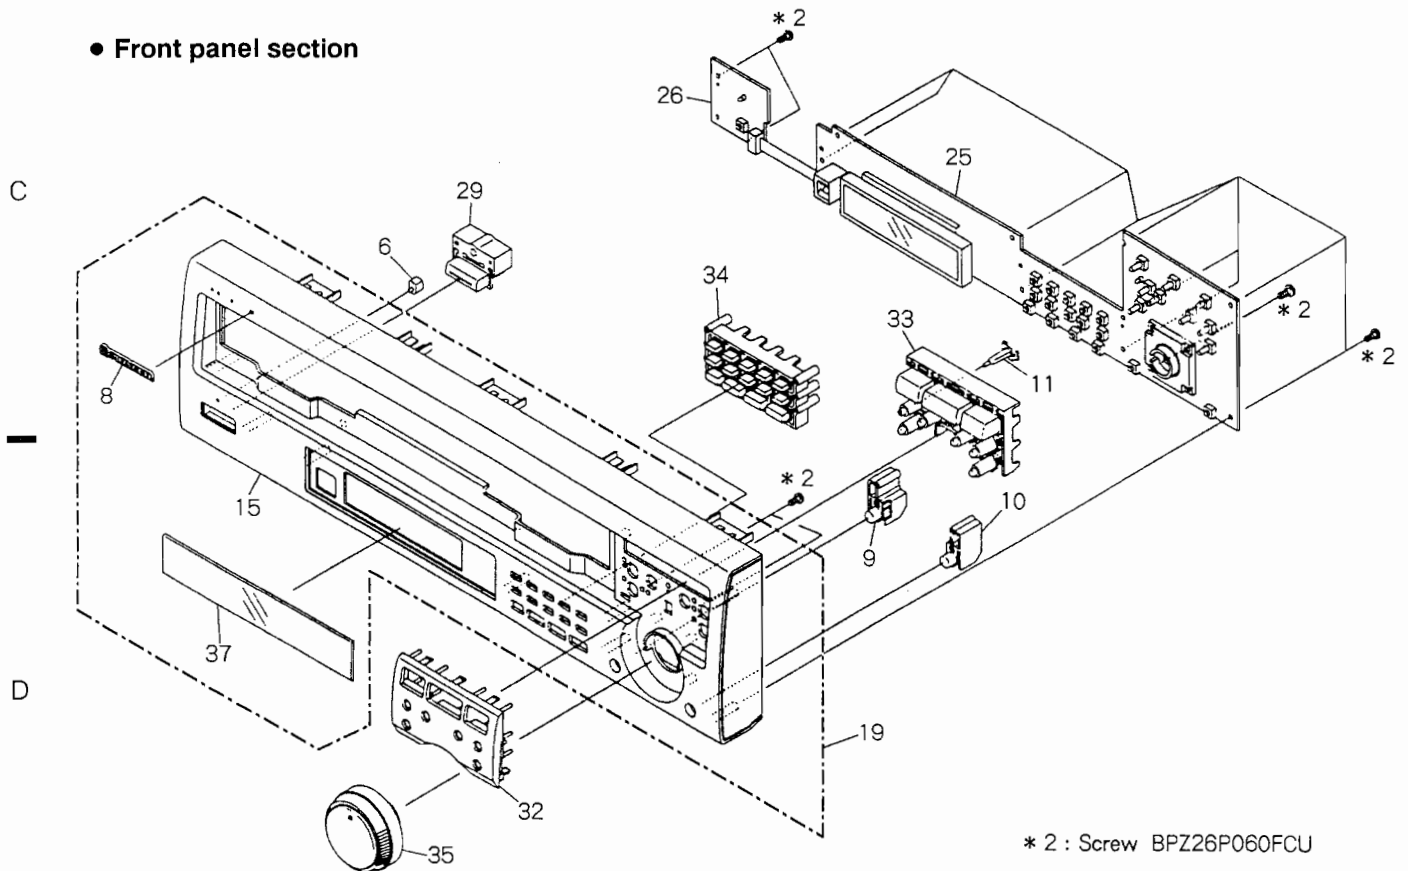


\* 2 : Screw BPZ26P060FCU


● Base section

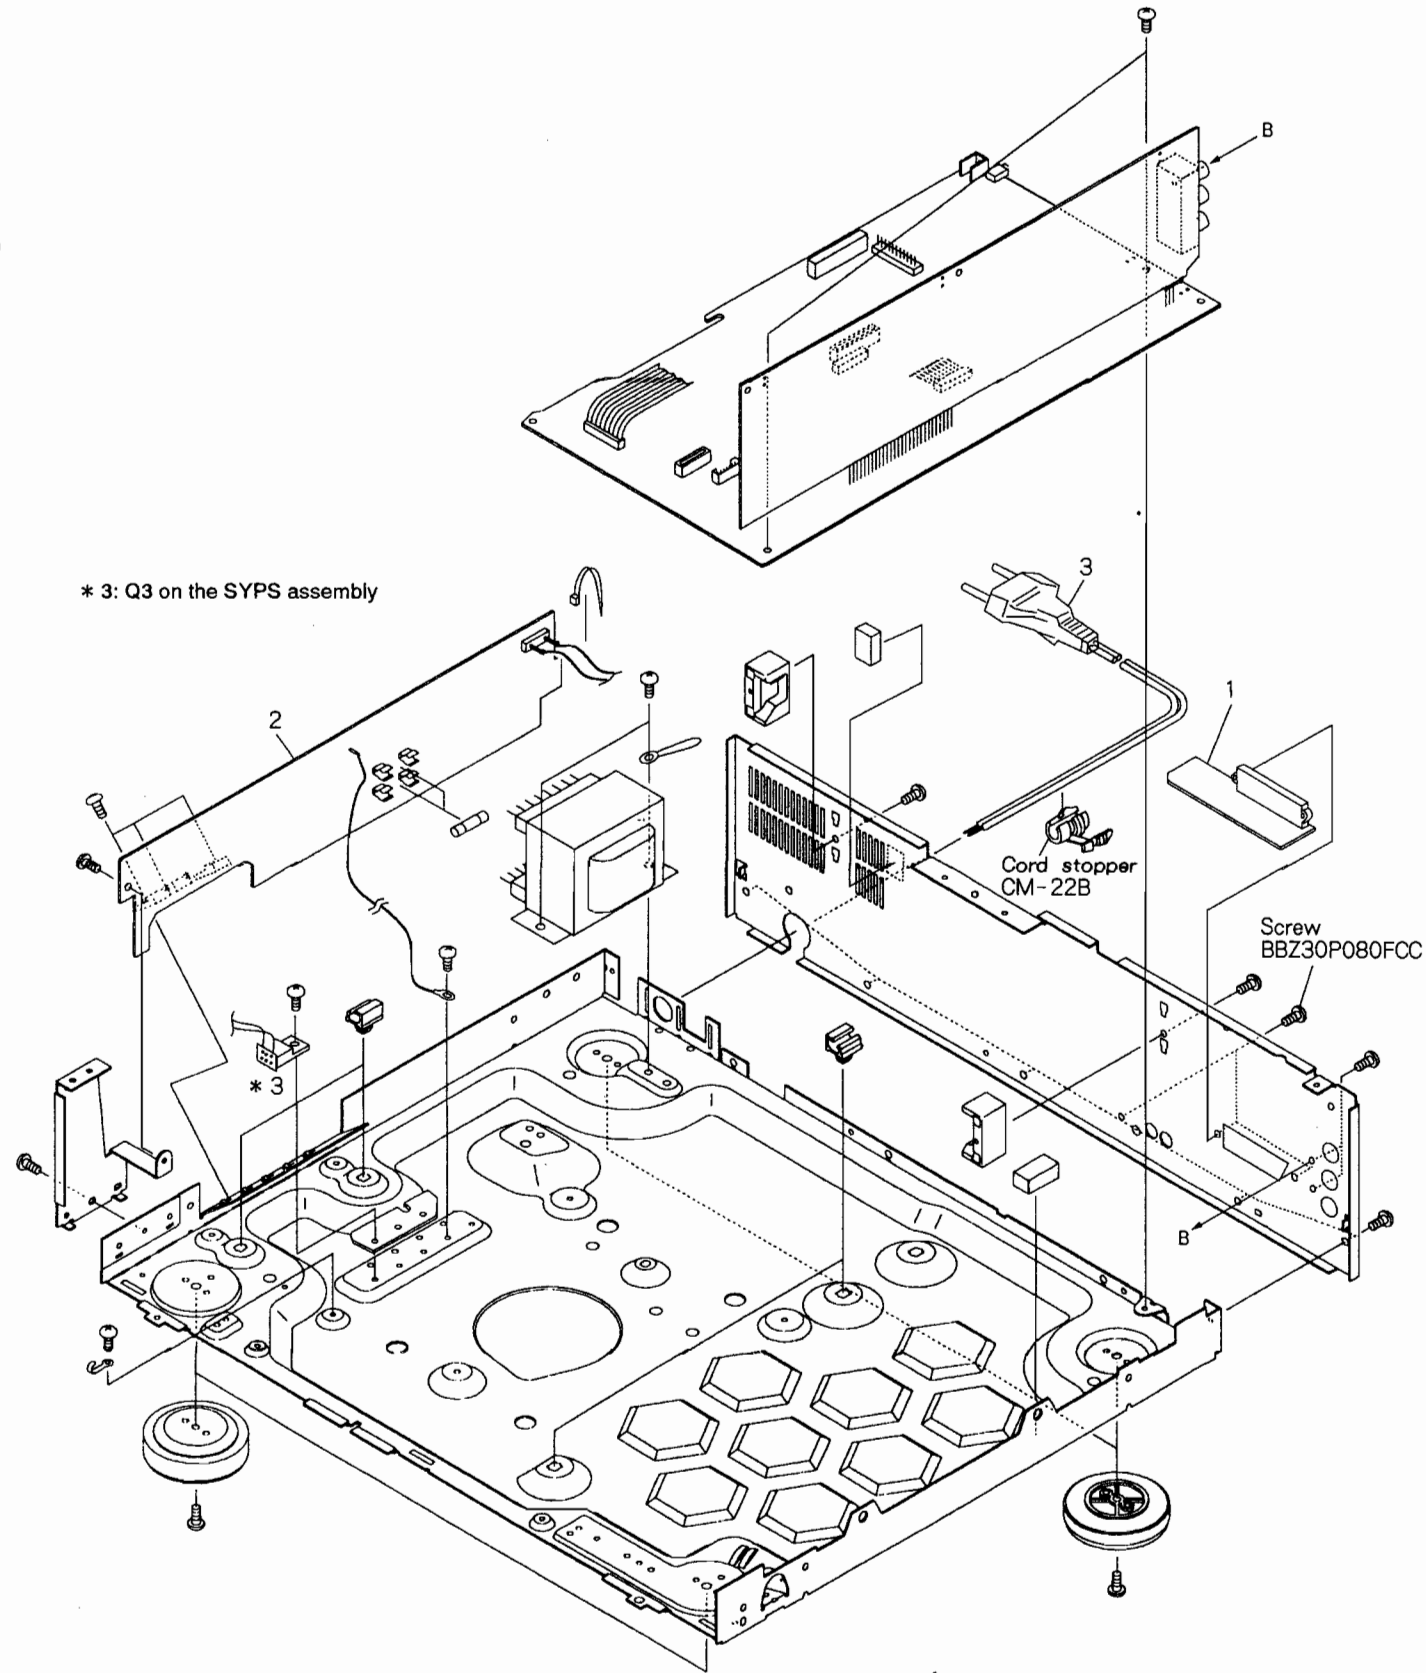

● Packing

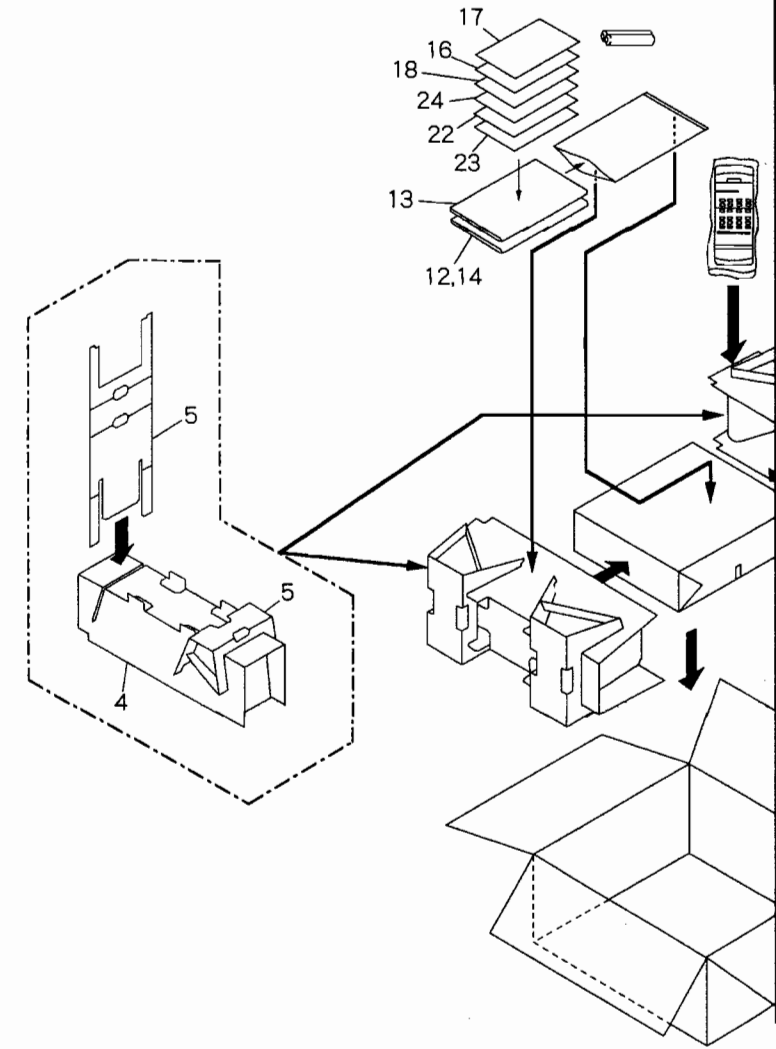

● Packing

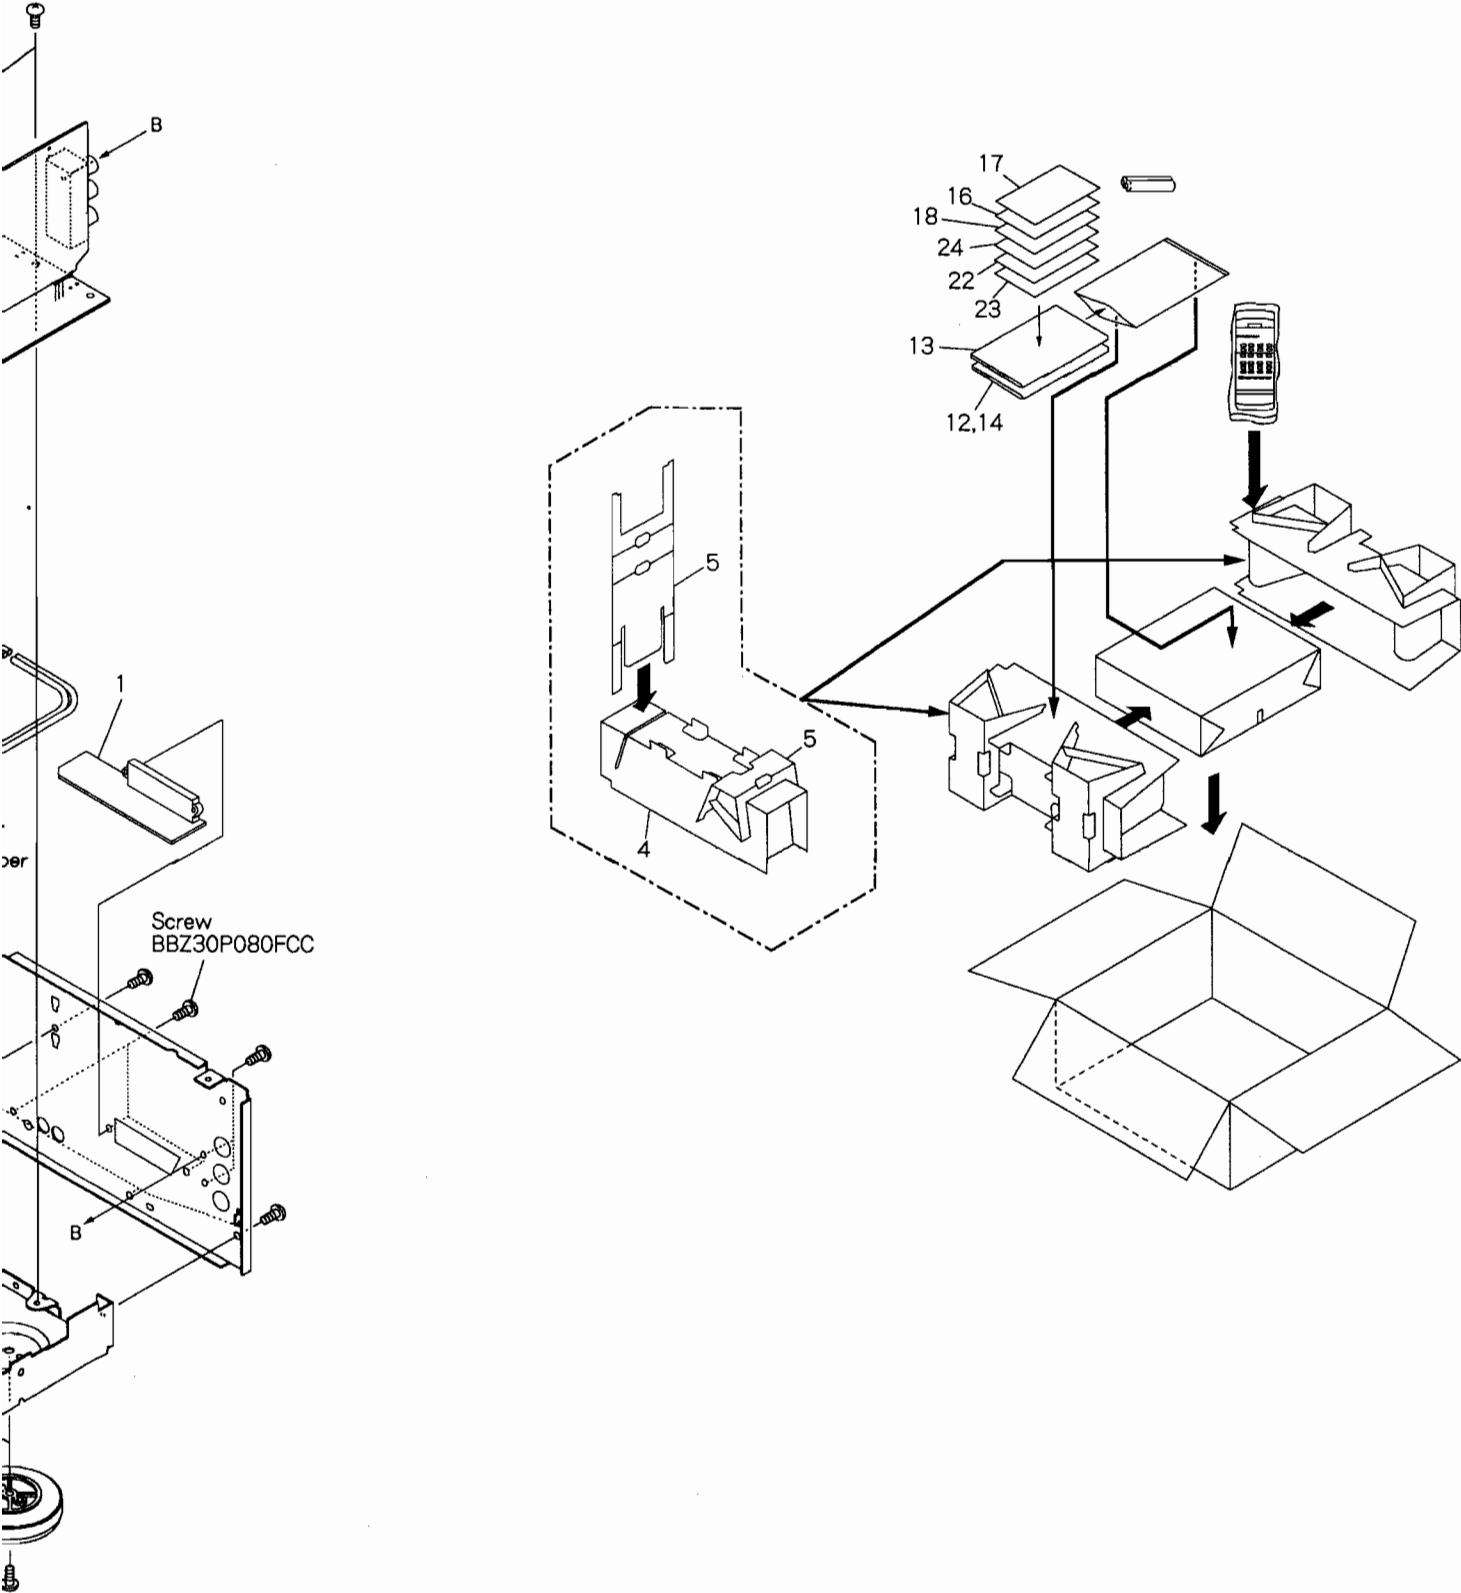

● SCHEMATIC DIAGRAM AND PCB PATTERNS

NOTE FOR SCHEMATIC DIAGRAMS (Type 4A)

1. When ordering service parts, be sure to refer to "PARTS LIST of EXPLODED VIEWS" or "PCB PARTS LIST".

2. Since these are basic circuits, some parts of them or the values of some components may be changed for improvement.

3. RESISTORS:  
Unit: k:kΩ, M:MΩ, or Ω unless otherwise noted.  
Rated power: 1/4W, 1/8W, 1/10W unless otherwise noted.  
Tolerance:(F):±1%, (G):±2%, (K):±10%, (M):±20% or ±5% unless otherwise noted.

4. CAPACITORS:  
Unit: p:pF or μF unless otherwise noted.  
Ratings: capacitor (μF) / voltage (V) unless otherwise noted.  
Rated voltage: 50V except for electrolytic capacitors.

5. COILS:  
Unit: m:mH or μH unless otherwise noted.

6. VOLTAGE AND CURRENT:  
□ or ←V: DC voltage (V) in PLAY mode unless otherwise noted.  
⇄mA or ←mA: DC current in PLAY mode unless otherwise noted.  
Value in ( ) is DC current in STOP mode.

7. OTHERS:  
● or ⊙: Adjusting point.  
◀: Measurement point.  
● The Δ mark found on some component parts indicates the importance of the safety factor of the parts. Therefore, when replacing, be sure to use parts of identical designation.

8. SCH - □ ON THE SCHEMATIC DIAGRAM:  
● SCH-□ indicates the drawing number of the schematic diagram. (SCH stands for schematic diagram.)

9. SWITCHES (Underline indicates switch position):  
PWSB ASSY  
S226 : POWER (STANDBY/ON)

- FLKY ASSY  
S201 : 1  
S202 : 7  
S203 : ▷▷  
S204 : ◁◁  
S205 : Δ  
S206 : 8  
S207 : ▷/||  
S208 : □  
S209 : DIRECT CD  
S210 : 9  
S211 : CHP/TIME  
S212 : HILITE/INTRO  
S213 : D-LEVEL CONTROL  
S214 : 0  
S215 : RANDOM PLAY  
S216 : LANGUAGE  
S217 : 5  
S218 : 3  
S219 : CLEAR  
S220 : PGM  
S221 : 4  
S222 : 2  
S223 : +10  
S224 : EDIT  
S225 : 6  
S228 : SCAN

NOTE FOR PCB DIAGRAMS:

1. Part numbers in PCB diagrams match those in the schematic diagrams.  
2. A comparison between main parts of PCB and schematic diagrams is shown below.



Symbol in PCB Diagrams	Symbol in Schematic Diagrams	Part Name
		Transistor
		Diode
		Capacitor (Polarized)

3. The transistor terminal marked with E or □ shows the emitter.  
4. The diode terminal marked with ⊙ or ◁ shows cathode side.  
5. The capacitor terminal marked with ⊙ or □ shows negative terminal.

1. Part numbers in PCB diagrams match those in the schematic diagrams.  
2. A comparison between main parts of PCB and schematic diagrams is shown below.

Symbol in PCB Diagrams	Symbol in Schematic Diagrams	Part Name
		Transistor
		Transistor with resistor
		Field effect transistor
		Resistor array
		3-terminal regulator



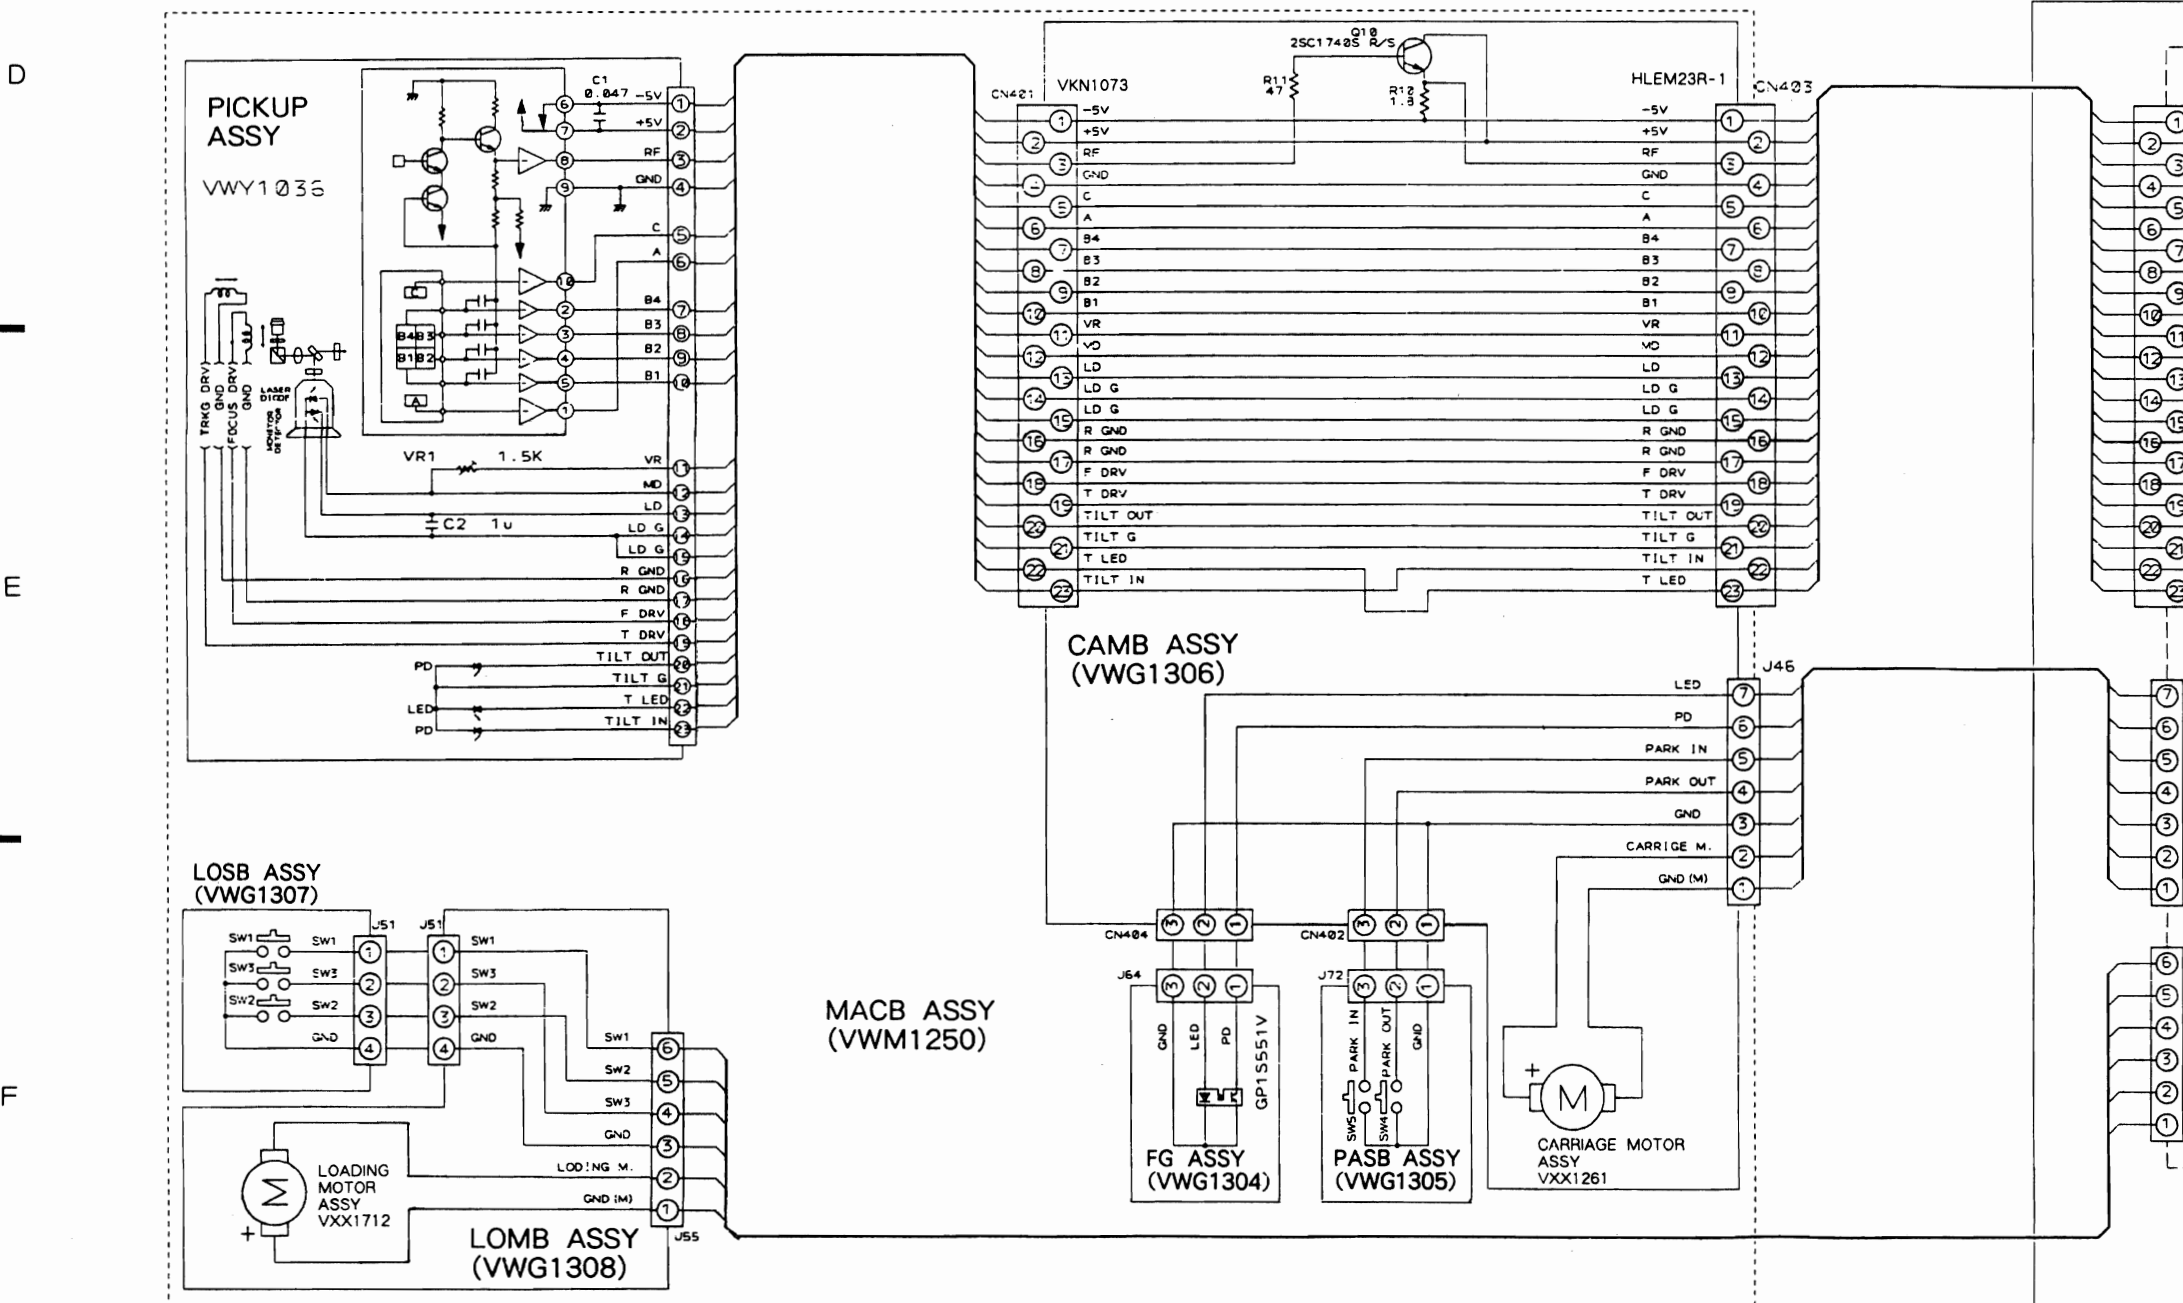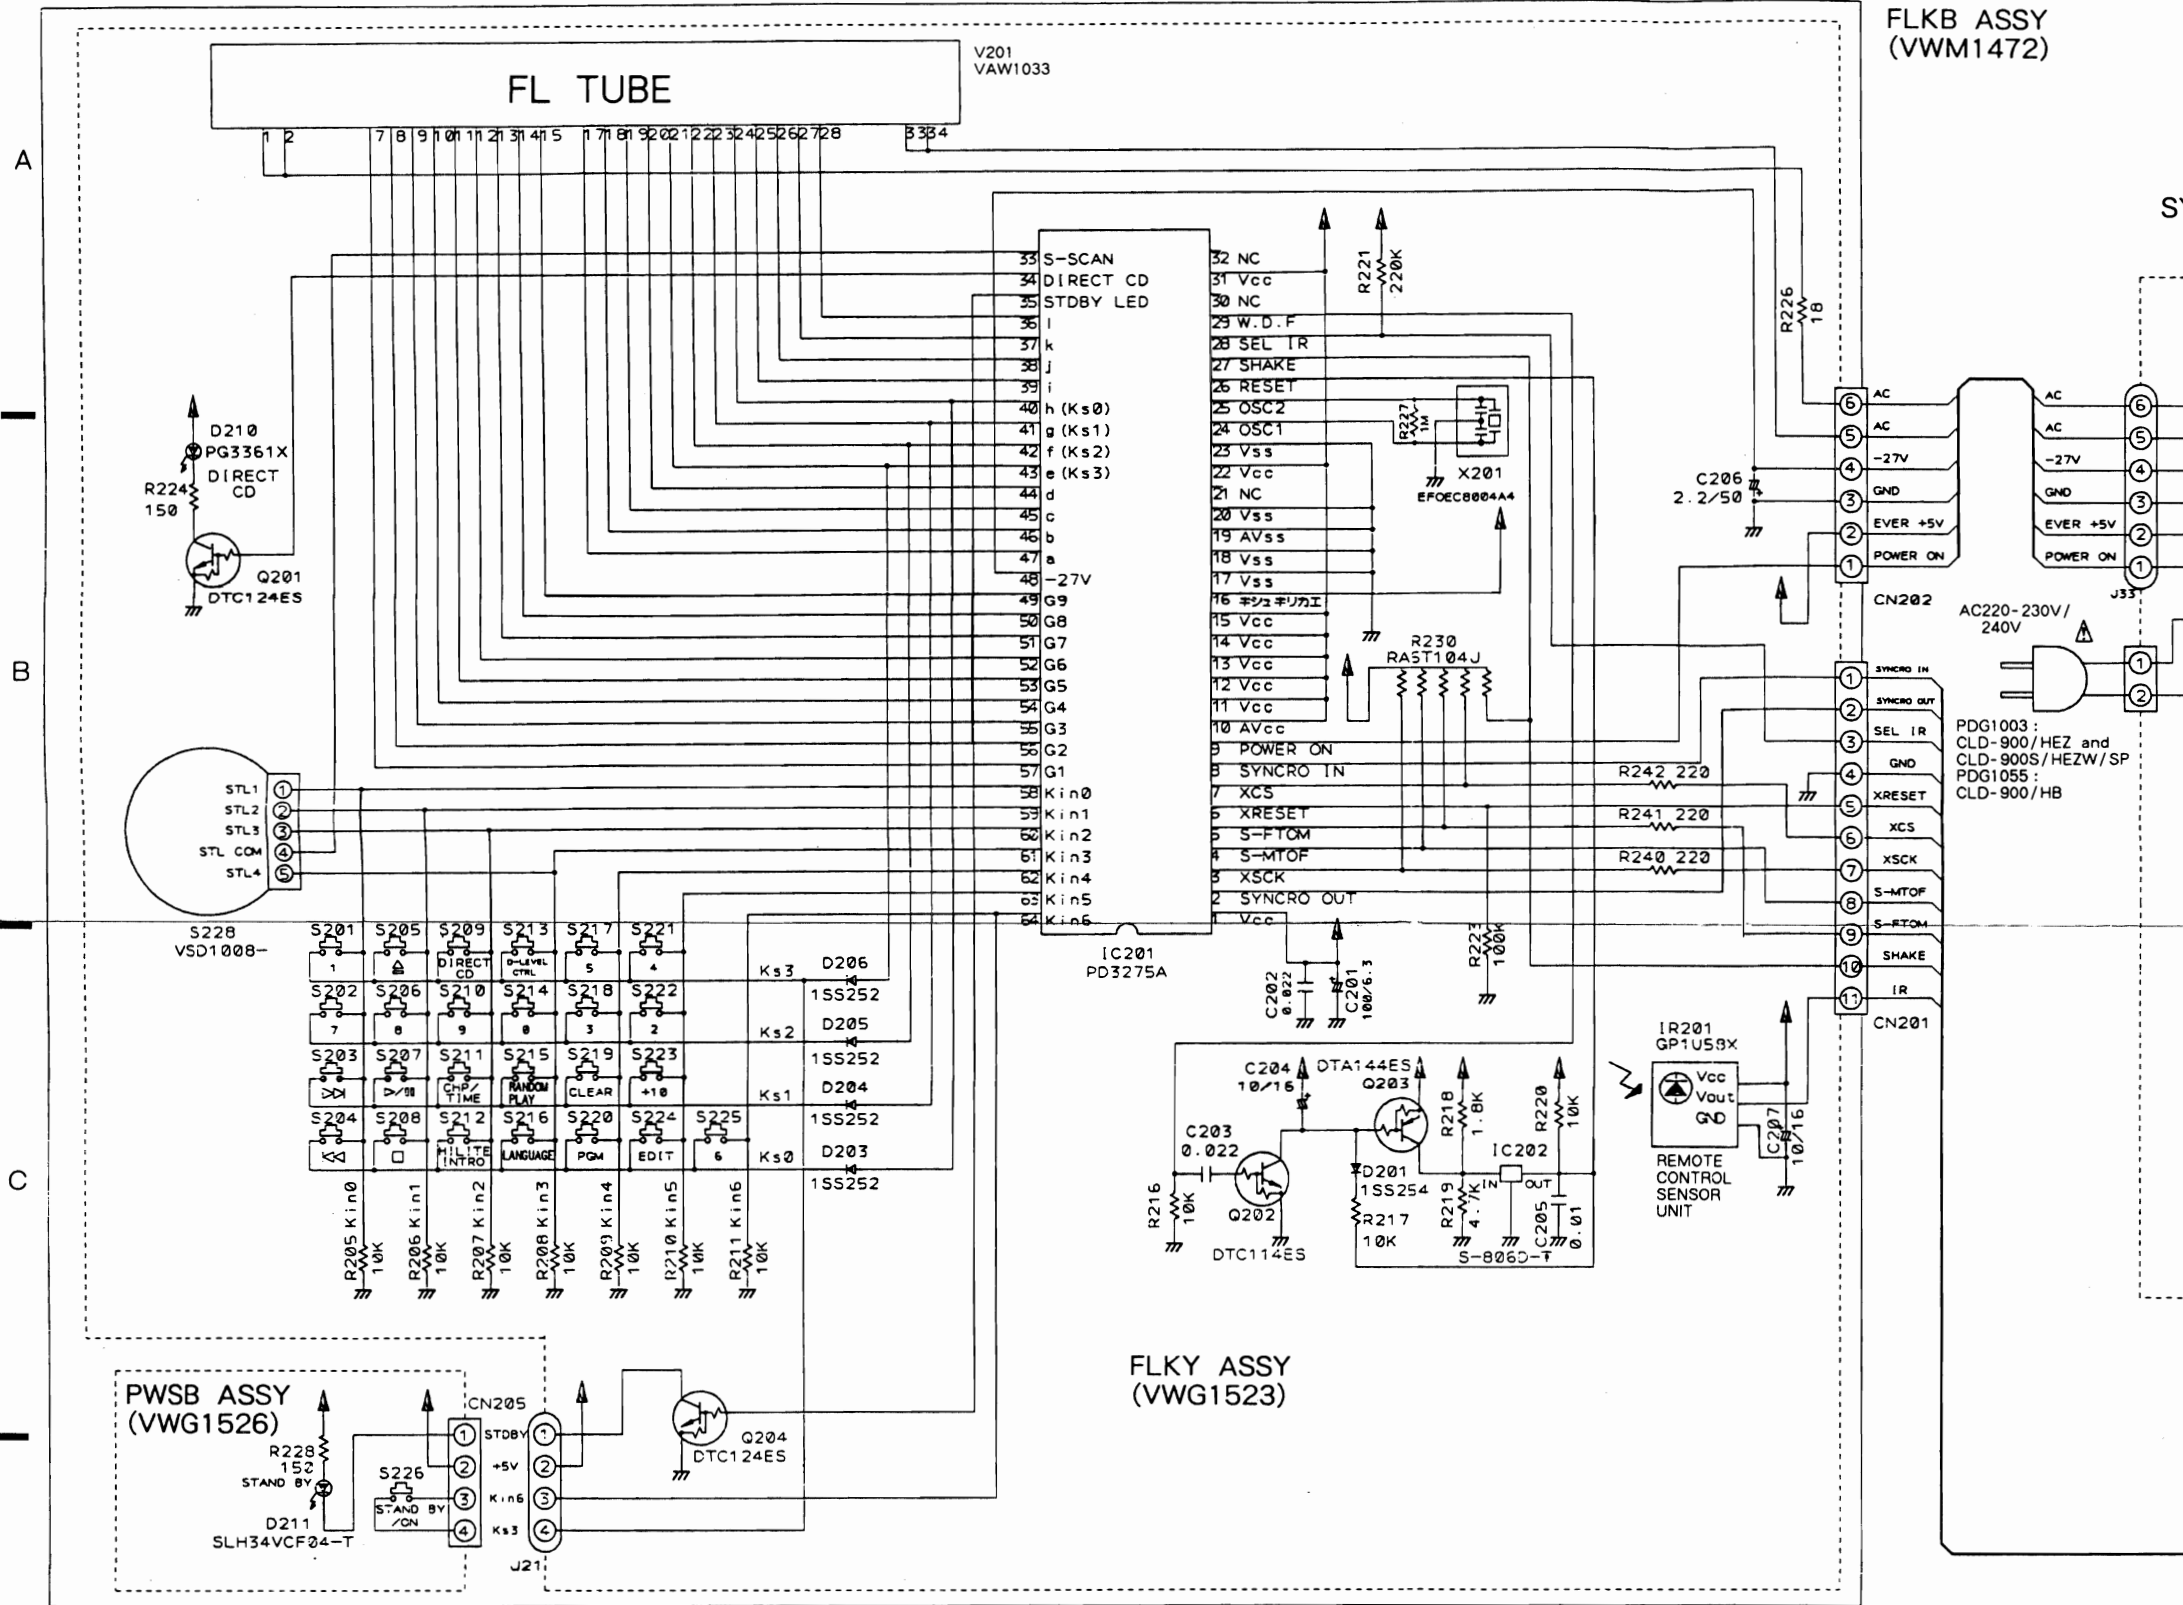
















SYPS ASSY (VWR1177 : CLD-900/HEZ and CLD-900S/HEZW/SP)  
(VWR1178 : CLD-900/HB)

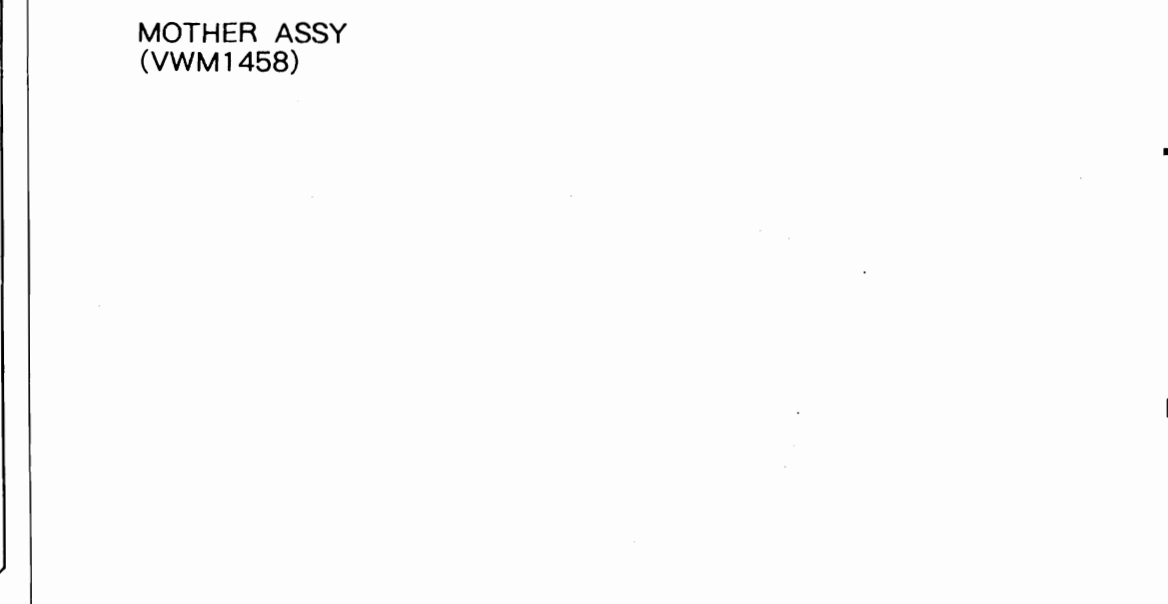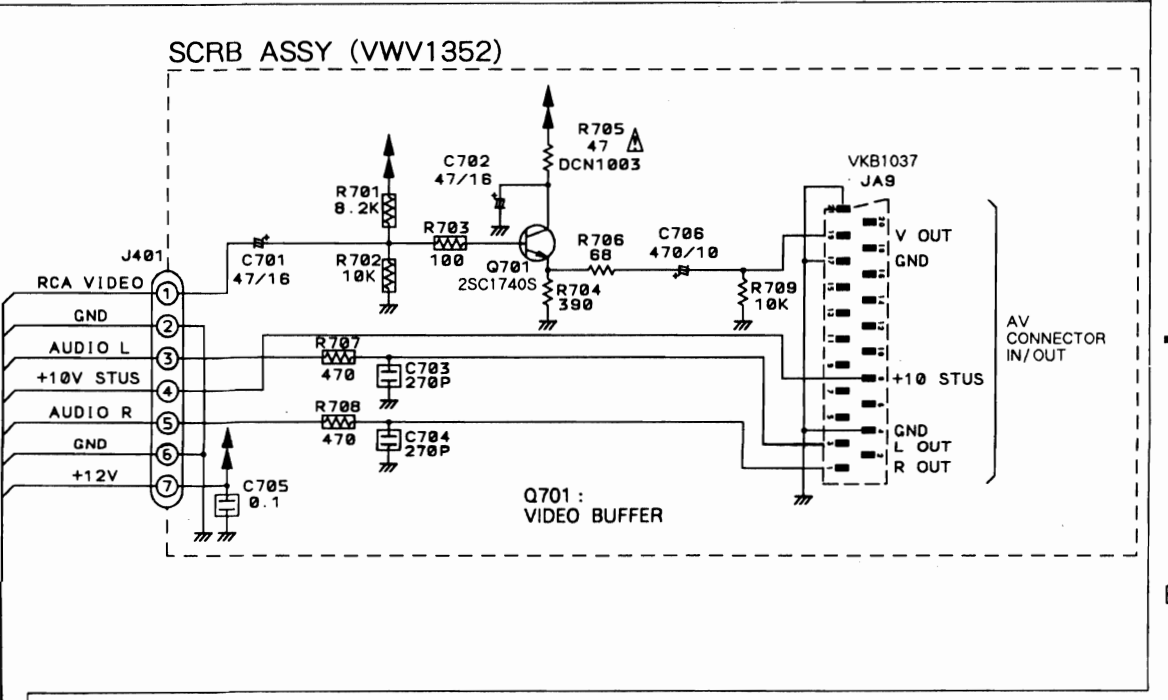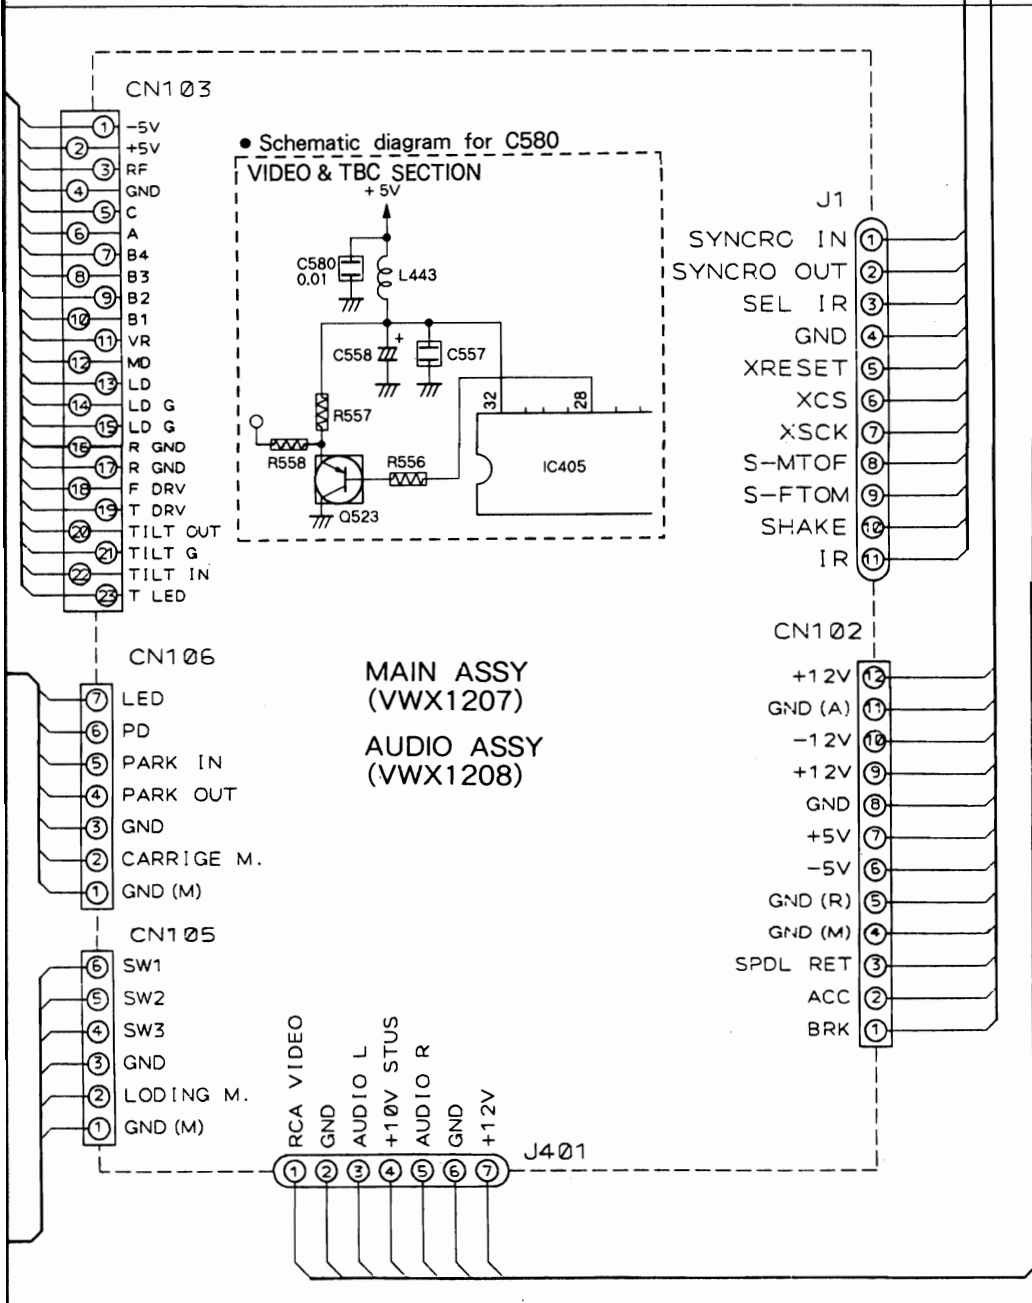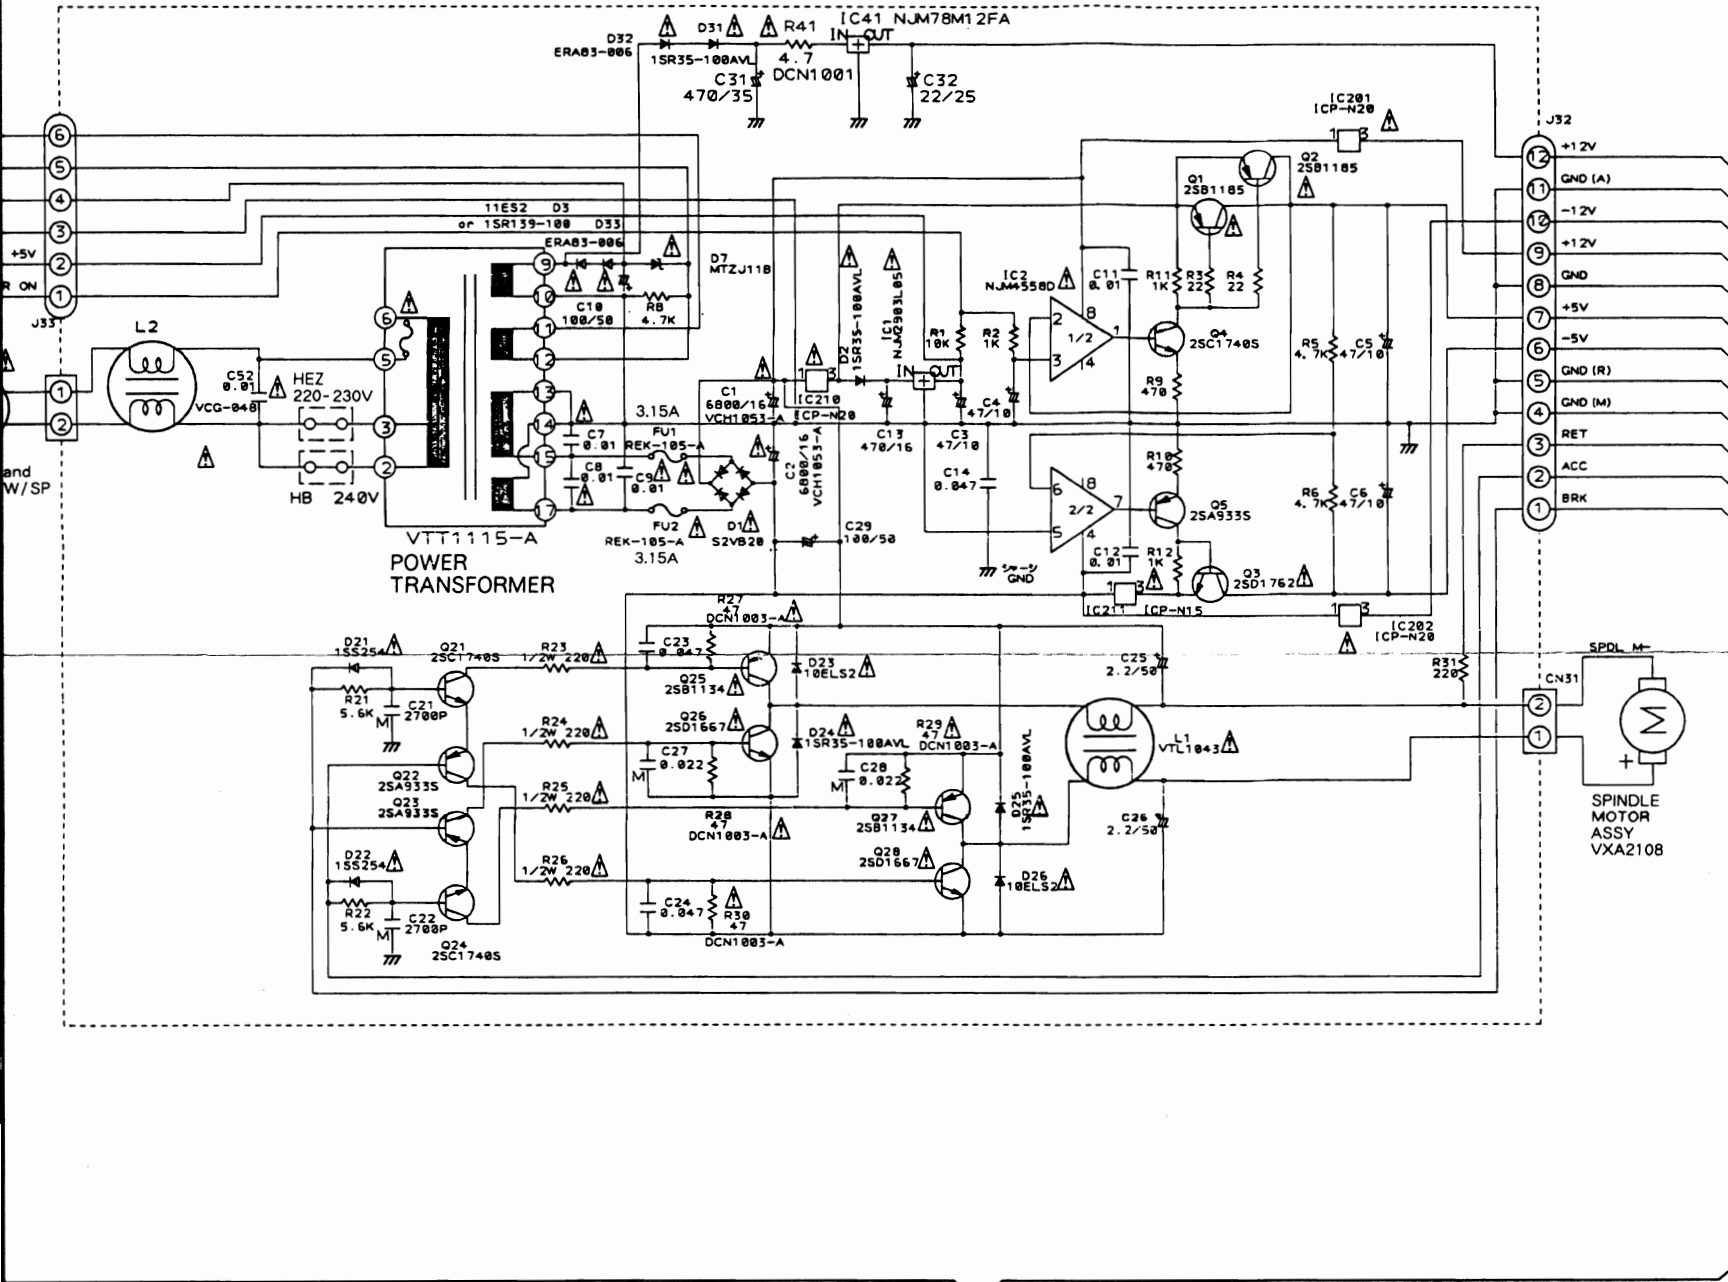

# Service Manual

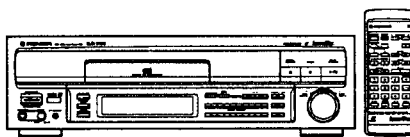

ORDER NO.  
ARP2543

CD CDV LD PLAYER

# CLD-1700

## CLD-700

CLD-1700 AND CLD-700 HAVE THE FOLLOWING :

Type	Model		Power Requirement	Remarks
	CLD-1700	CLD-700		
HEZ	○	○	AC220-230V, 240V (switchable) *	
HB	-	○	AC220-230V, 240V (switchable) *	

\*Change the connection of the power transformer's primary wiring.

- This manual is applicable to the following : CLD-1700/HEZ; CLD-700/HEZ and HB.
- For CLD-700/HEZ and HB, refer to page 82.
- Ce manuel pour le service comprend les explications de réglage en français.
- Este manual de servicio trata del método ajuste escrito en español.

## CONTENTS

1. SAFETY INFORMATION .....	2	5. ADJUSTMENTS .....	50
2. EXPLODED VIEWS, PACKING AND PARTS LIST .....	3	REGLAGES .....	59
3. SCHEMATIC AND PCB CONNECTIONS DIAGRAMS .....	16	AJUSTES .....	68
4. PCB PARTS LIST .....	43	6. IC INFORMATION .....	77
		7. FOR CLD-700/HEZ AND HB .....	82
		8. CONNECTIONS .....	85
		9. PANEL FACILITIES .....	87
		10. SPECIFICATIONS .....	90

# 1. SAFETY INFORMATION

(FOR EUROPEAN MODEL ONLY)

VARO!

AVATTAESSA JA SUOJALUKITUS OHITETTAESSA OLET ALTTIINA NÄKYMÄTTÖMÄLLE LASERSÄTEILYLLE. ÄLÄ KATSO SÄTEESEEN.



LASER  
Kuva 1  
Lasersäteilyn  
varoituserkki

WARNING!

DEVICE INCLUDES LASER DIODE WHICH EMITS INVISIBLE INFRARED RADIATION WHICH IS DANGEROUS TO EYES. THERE IS A WARNING SIGN ACCORDING TO PICTURE 1 INSIDE THE DEVICE CLOSE TO THE LASER DIODE.



LASER  
Picture 1  
Warning sign for  
laser radiation

ADVERSEL:

USYNLIG LASERSTRÅLING VED ÅBNING NÅR SIKKERHEDSAFBRYDERE ER UDE AF FUNKTION UNDGÅ UDSAETTELSE FOR STRÅLING.

VARNING!

OSYNLIG LASERSTRÅLING NÅR DENNA DEL ÄR ÖPPNAD OCH SPÄRREN ÄR URKOPPLAD. BETRakta EJ STRÅLEN.

IMPORTANT

THIS PIONEER APPARATUS CONTAINS LASER OF CLASS 1. SERVICING OPERATION OF THE APPARATUS SHOULD BE DONE BY A SPECIALLY INSTRUCTED PERSON.

LASER DIODE CHARACTERISTICS


MAXIMUM OUTPUT POWER: 5 mw  
WAVELENGTH: 780-785 nm

## LABEL CHECK

HB model




HEZ model

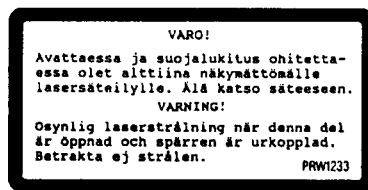

HEZ and HB model




HEZ model

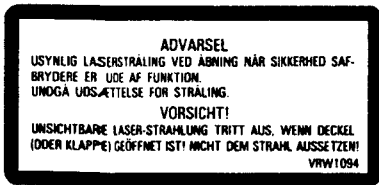

HEZ and HB models

FRONT

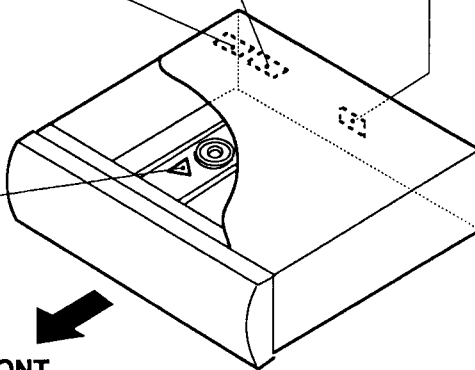

Additional Laser Caution

1. The ON/OFF statuses of the slider - position detection switches (PARK INNER, PARK OUTER on the PKSB assembly), loading - status detection switches (SW 1, 2 and 3 on PKSB assembly) are detected by the microprocessor (IC101 in the MAIN assembly). To permit the laser diode to oscillate, it is required to set the slider - position detection switch for the LD ACTIVE status (PARK INNER: OFF, PARK OUTER: OFF), and to set the loading - status detection switch for clamped state (SW1: OFF, SW2: ON, SW3: ON). As long as these requirements are not satisfied, the laser diode will not oscillate. When the requirements are met in any way, the laser diode can oscillate. The laser diode oscillation will continue if pin 29 of IC801 is shorted to GND or the emitter and collector of Q809 are shorted each other (fault condition) in MAIN assembly.  
In test mode (see page 51), the laser diode oscillates when microprocessor detects a PLAY signal or when the PLAY key is pressed (S223: ON in the FLKY assembly), with the above requirements satisfied.
2. When the cover is open, close viewing through the objective lens with the naked eye will cause exposure to a Class 1 laser beam.

## 2. EXPLODED VIEWS, PACKING AND PARTS LIST


**NOTES:**

- Parts marked by "NSP" are generally unavailable because they are not in our Master Spare Parts List.
- The  $\Delta$  mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
- Parts marked by "⊙" are not always kept in stock. Their delivery time may be longer than usual or they may be unavailable.

### (1) EXTERIOR SECTION

**Parts List**

Mark	No.	Description	Part No.	Mark	No.	Description	Part No.
	1	Guide plate (L)	VNE1805		16	Tray panel	VNK2032
	2	Guide plate (R)	VNE1806		17	Door holder	VNE1812
	3	Lock plate spring	VBH1188		18	Door shaft	VLL1441
	4	Lock plate	VNL1513		19	.....	
	5	CD tray	VNK1992	NSP	20	Spacer	VEC1585
	6	Tray assembly - S	VXX1729	NSP	21	Damp cushion	VEC1110
NSP	7	LD tray	VNK1991	NSP	22	PCB holder	VNE1830
	8	Disc pad	VEC1191		23	Screw	BPZ30P060FCU
	9	Disc pad (C)	VEC1380		24	Screw	IPZ26P060FMC
NSP	10	Label	VRW1289		25	Screw	BBZ30P080FCC
	11	Bonnet S	VXX1726		26	Screw	BCZ40P060FZK
	12	Door spring	VBH1202		27	Screw	IPZ20P050FMC
	13	CD door assembly - S	VXX1728		28	Screw	VBA1032
	14	Cushion	VEC1578		29	Tray rubber	VEB1091
NSP	15	CD door	VNK2033				

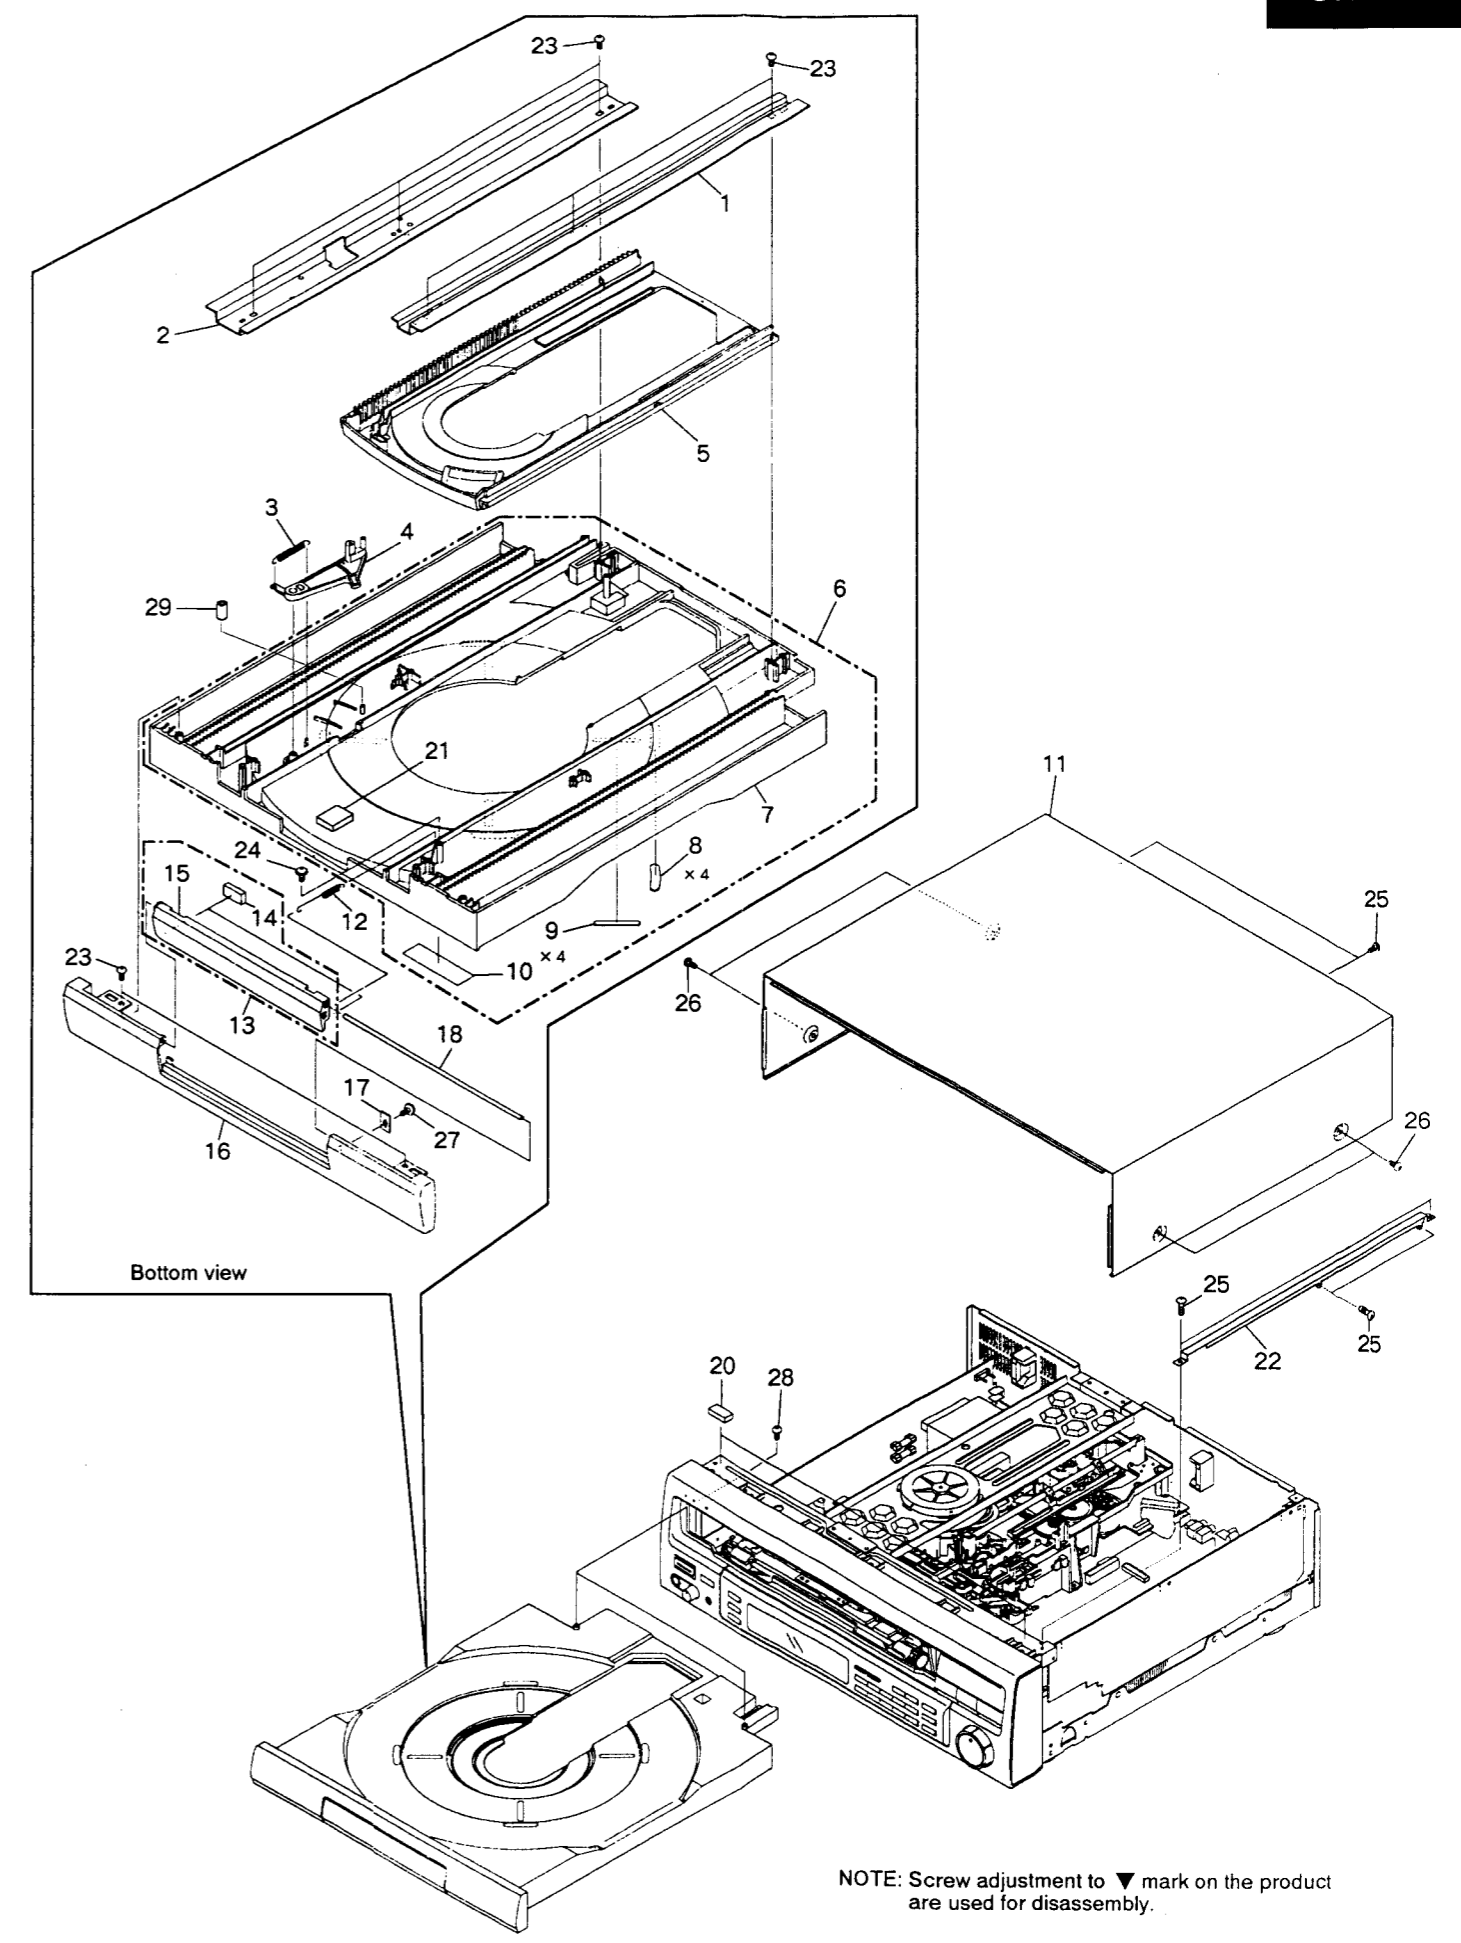


NOTE: Screw adjustment to ▼ mark on the product are used for disassembly.

(2) TOP VIEW SECTION

Parts List

Mark	No.	Description	Part No.
A	1	Clamper holder	VNL1514
	2	Rubber sheet	VEB1114
	3	Thrust holder	VNL1289
	4	Clamper head	VNL1516
	5	Clamper	VNL1515
	6	Clamper spring	VBH1192
	7	Clamper arm	VNE1804
	8	Stabilizer	VNE1807
	9	Rack assembly	VWT1080
	10	Carriage shaft	VLL1434
NSP	11	Side stay (R)	VNE1810
NSP	12	Front angle	VNE1808
	13	Screw	CPZ20P050FMC
	14	Screw	BBZ30P080FCC
	15	Screw	IBZ30P060FCC
B	16	Screw	IPZ30P060FMC
	17	Screw	PCZ30P060FMC
	18	Earth plate	VNE1518

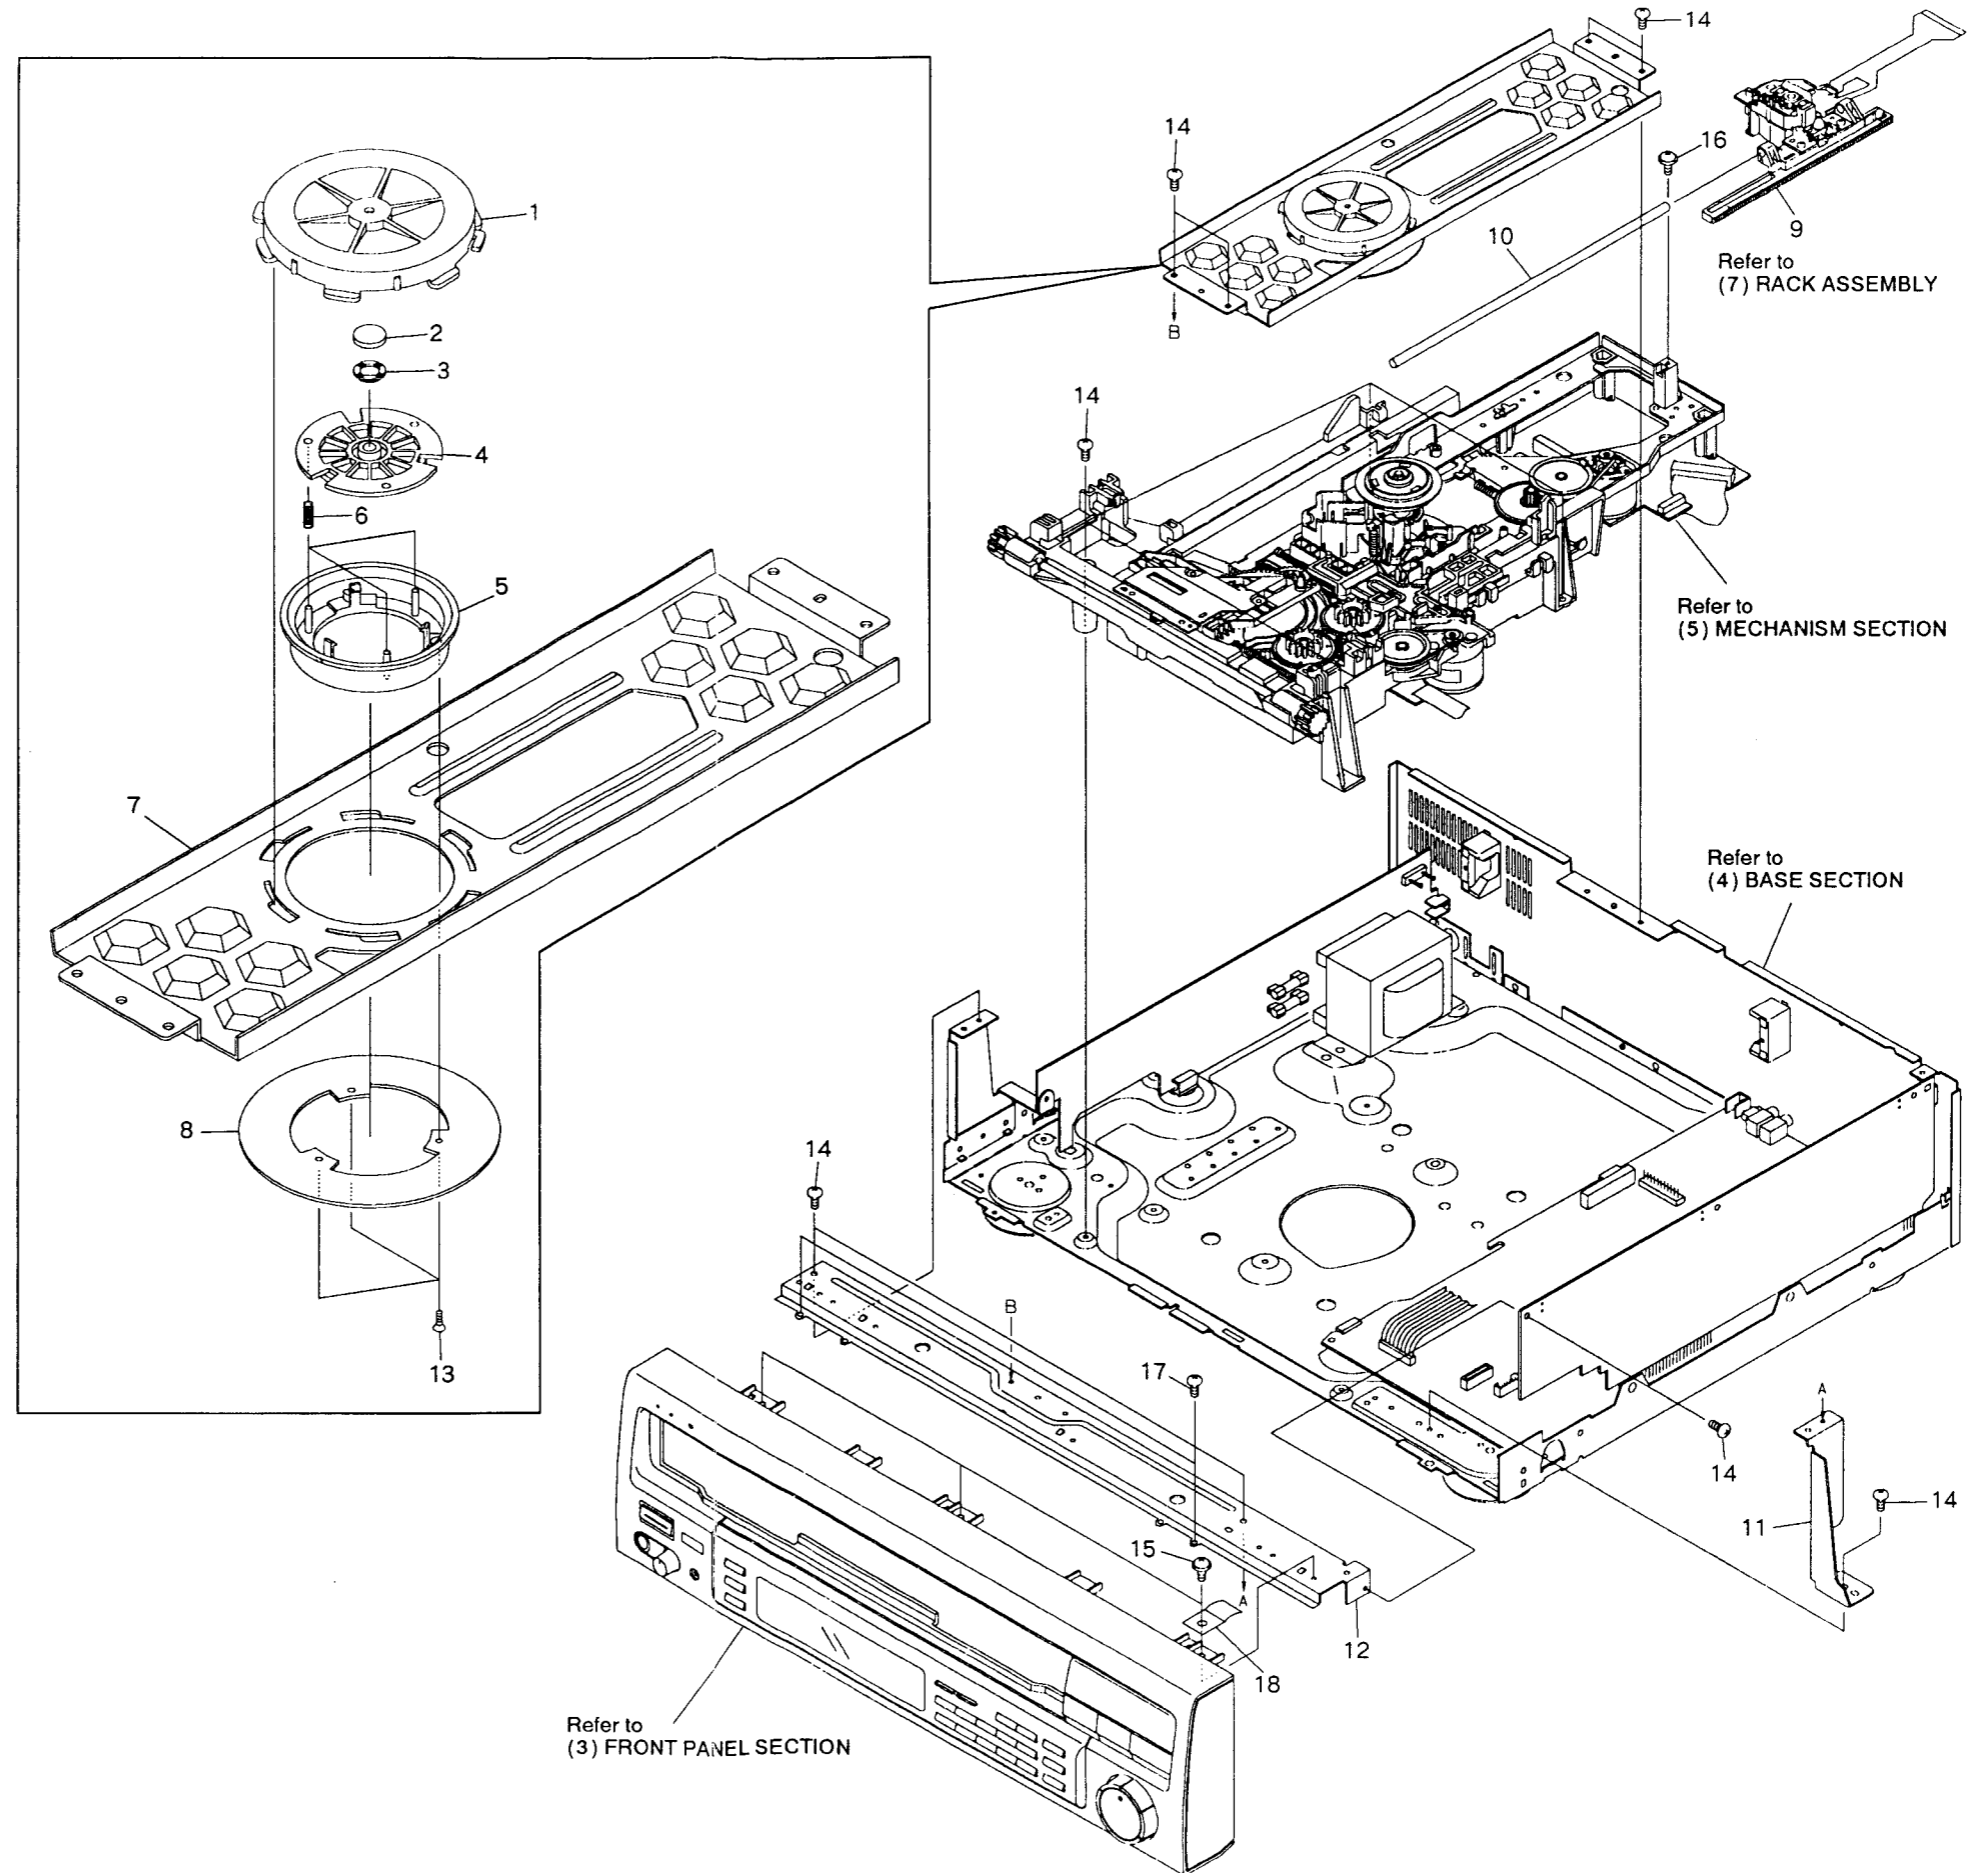




(3) FRONT PANEL SECTION

Parts List

Mark No.	Description	Part No.	Mark No.	Description	Part No.
NSP 1	PSWB assembly	VWG1315	NSP 11	Center panel	VNK2085
2	PW button	VNK2002	12	FL lens	VEC1568
3	Mode key	VNK2037	13	FL filter	VNK1694
NSP 4	FLKY assembly	VWG1336	14	Center panel assembly - S	VXX1757
5	CD button	VNK2038	15	Screw	BPZ26P060FCU
6	Ten key	VNK2036	NSP 16	HEPB assembly	VWV1254
7	Main key	VNK2035	17	Jack holder	VNE1811
8	Front panel assembly	VXA1867	18	Snap plate	VNE1102
9	Shuttle knob	VNK2039	19	Volume knob	VNK2003
10	Sub panel	VNK2034			

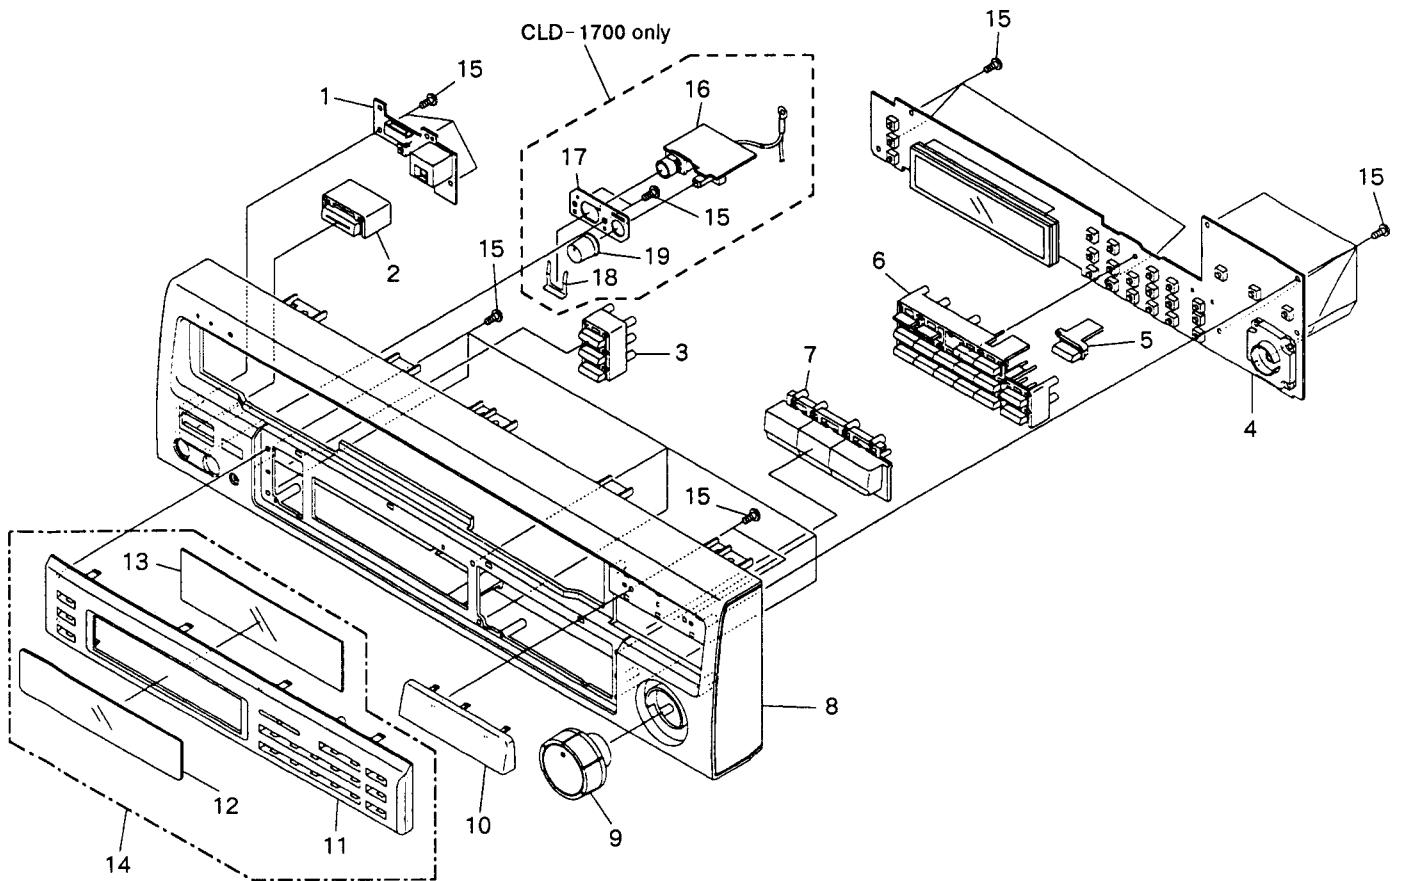

**(4) BASE SECTION**

**Parts List**

<b>Mark</b>	<b>No.</b>	<b>Description</b>	<b>Part No.</b>
NSP	1	MAIN assembly	VWX1123
NSP	2	AUDIO assembly	VWX1124
⊙	3	SYPS assembly	VWR1146
	4	Tray stopper	VNL1519
△	5	AC power cord	VDG1028
	6	Cord stopper	CM-22B
NSP	7	Rear panel	VNA1278
	8	PCB cushion	VEC1573
NSP	9	Cord clamber	VNF-005
NSP	10	PCB hinge	VEC1174

<b>Mark</b>	<b>No.</b>	<b>Description</b>	<b>Part No.</b>
△	11	Power transformer	VTI1115
△	12	Fuse (FU1, FU2) (3.15A)	REK-105
NSP	13	P. plate holder	PNY-405
NSP	14	Side stay (L)	VNE1809
	15	Cord clamber	VNF-069
	16	Insulator	PNW1912
NSP	17	Base chassis	VNA1255
	18	Insulator assembly	VXA1881
	19	Screw	BBZ30P080FCC
	20	Screw	BBZ30P040FMC
	21	Screw	BCZ40P060FZK
	22	Screw	BCZ30P080FCC
⊙	23	SCRB assembly	VWV1248
NSP	24	Support cushion	VEC1601
NSP	25	PC suport	VEC1584
NSP	26	Plate	VNE1854
	27	Binder	VEC-067

A


B

C

D

\* 1: Q3 on the SYPS assembly


\* 2: CLD-1700 only

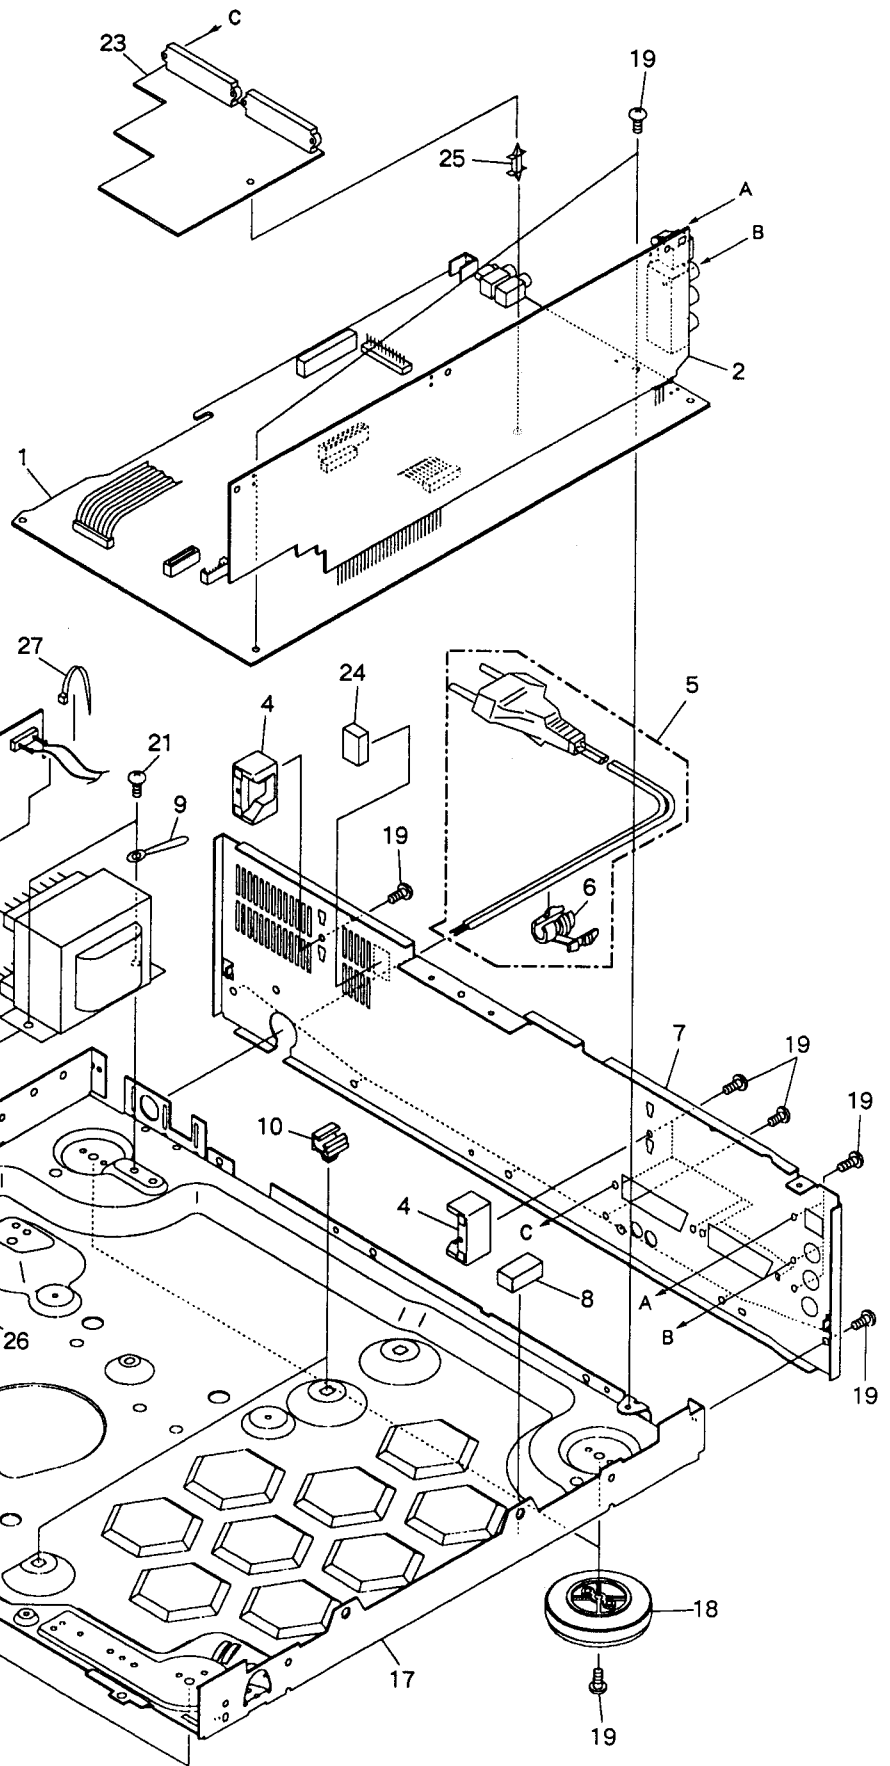

**(5) MECHANISM SECTION**

**Parts List**

<u>Mark</u>	<u>No.</u>	<u>Description</u>	<u>Part No.</u>	<u>Mark</u>	<u>No.</u>	<u>Description</u>	<u>Part No.</u>
	1	Mechanism base	VNK1990		14	L-SW lever	VNL1504
	2	Flexible cable	VDA1409		15	C-SW lever	VNL1505
	3	Clamp cam	VNL1500		16	R-SW lever	VNL1506
	4	Shaft holder	VNE1817		17	LOSB ASS'Y	VWG1307
	5	Cam plate	VNL1511	NSP	18	Synchro gear ASS'Y	VXA1822
	6	CAS spring	VBH1190		19	Roller	VNL1042
	7	Cam gear	VNL1507	NSP	20	LOMB ASS'Y	VWG1308
	8	CD plate	VNL1512		21	Loading motor ASS'Y	VXX1712
	9	CDP spring	VBH1191		22	Slider motor	VXM1033
	10	Rubber belt	VEB1184	NSP	23	Motor pulley	PNW1643
	11	Gear pulley	VNL1510		24	Screw	Z39-019
	12	Twin gear	VNL1508		25	Screw	BMZ26P040FMC
	13	Center gear	VNL1509				

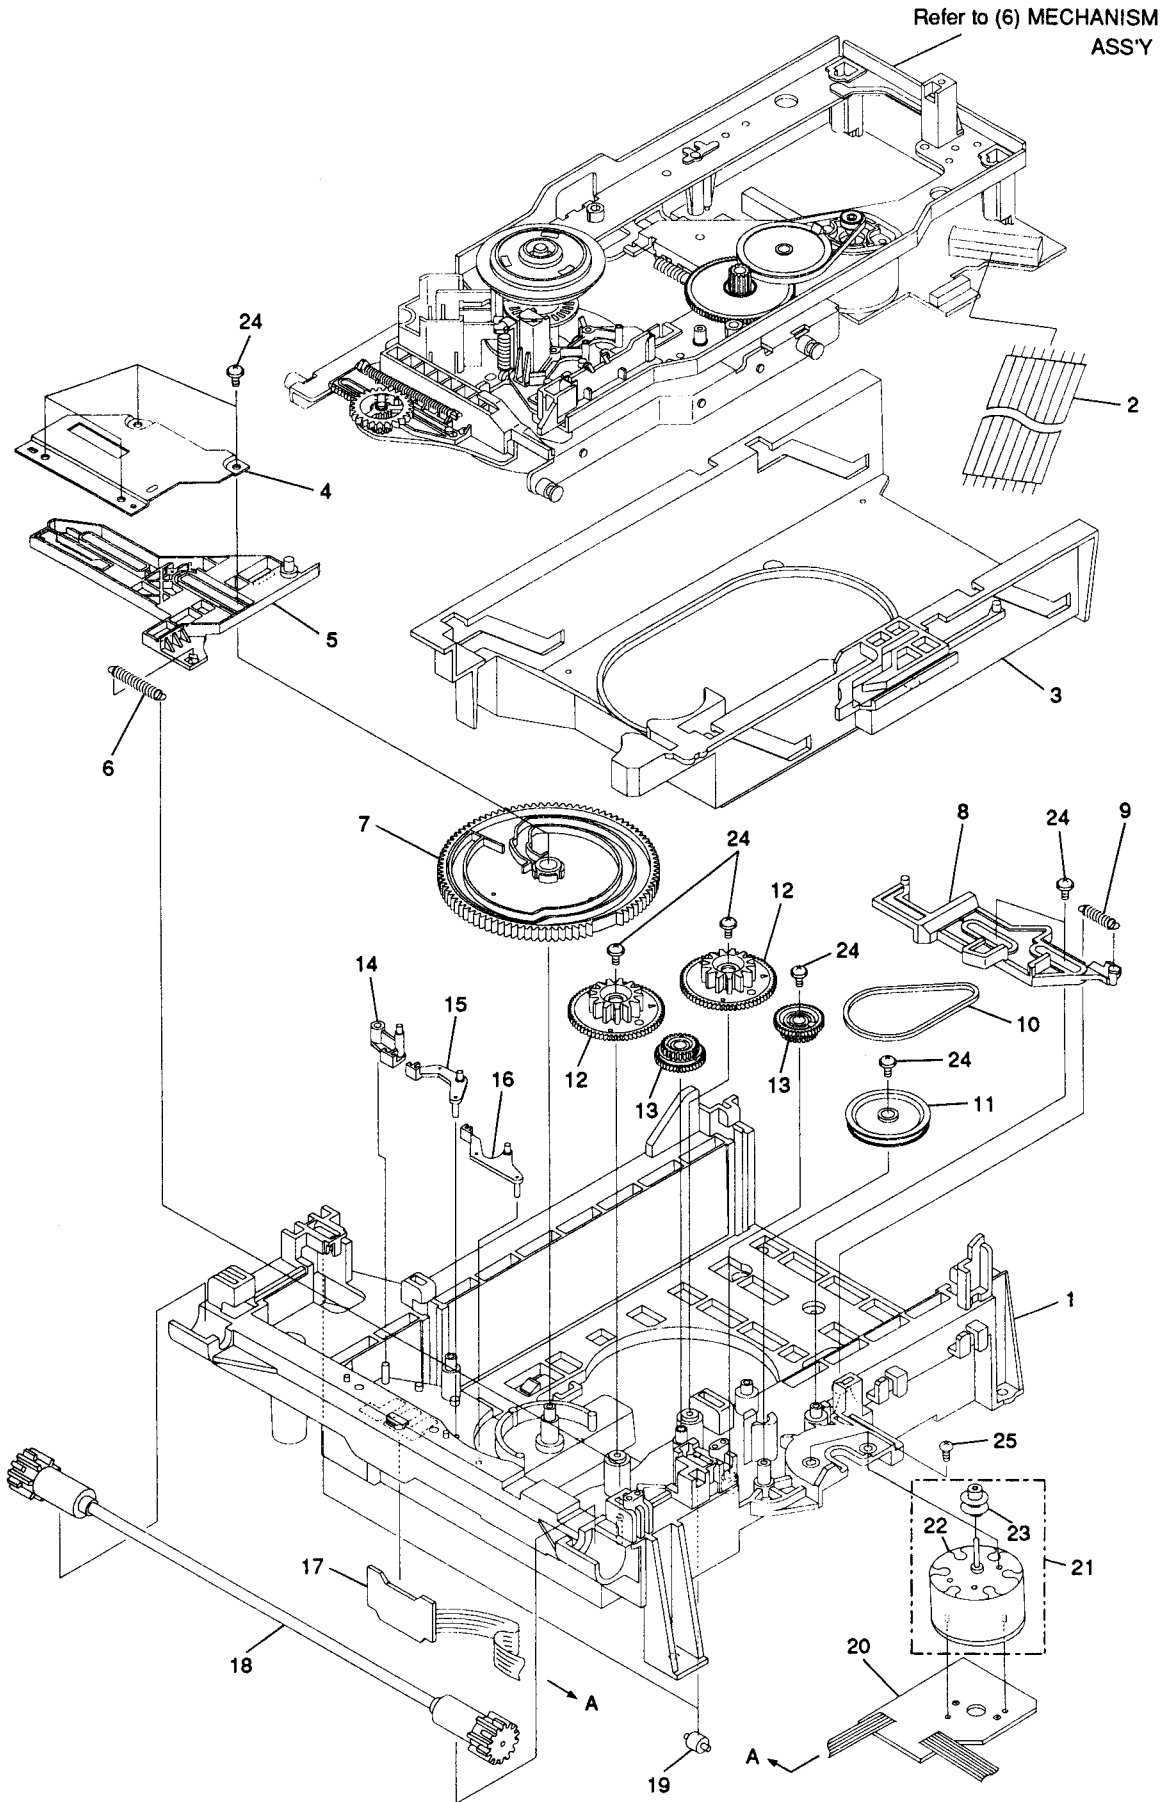

**(6) MECHANISM ASS'Y**

**Parts List**


<b>Mark</b>	<b>No.</b>	<b>Description</b>	<b>Part No.</b>	<b>Mark</b>	<b>No.</b>	<b>Description</b>	<b>Part No.</b>
	1	CA belt	VEB1077		16	Y gear	VNL1501
	2	CA pulley	VNL1496		17	Tilt cam spring	VBH1189
	3	CA gear	VNL1497		18	Tilt cam	VNL1502
	4	Tilt base	VNL1499		19	Spindle motor ASS'Y	VXA1825
	5	CA-SW lever	VNL1498		20	Centering hab	VNL1174
NSP	6	CAMB ASS'Y	VWG1306		21	Centering spring	VBH1083
	7	CRG motor ASS'Y	VXX1261	NSP	22	Rubber sheet	VEB1103
NSP	8	Slider motor	VXM1033	NSP	23	Turn table ASS'Y	VXA1283
	9	CA pulley (1)	VNL1197	NSP	24	Oil stopper	VBH1002
NSP	10	PKSB ASS'Y	VWG1305	NSP	25	Spindle motor	VXM1050
	11	Radial spring	VBH1201		26	Motor base	VNE1803
	12	Thrust spring	VBH1200		27	Screw	BMZ26P040FMC
	13	Tilt tension	VBH1187		28	Screw	ABZ30P300FMC
NSP	14	FG ASS'Y	VWG1304		29	Screw	PMA30P050FMC
	15	FG base	VNL1503		30	Washer	WT26D060D025

C

D

E

F

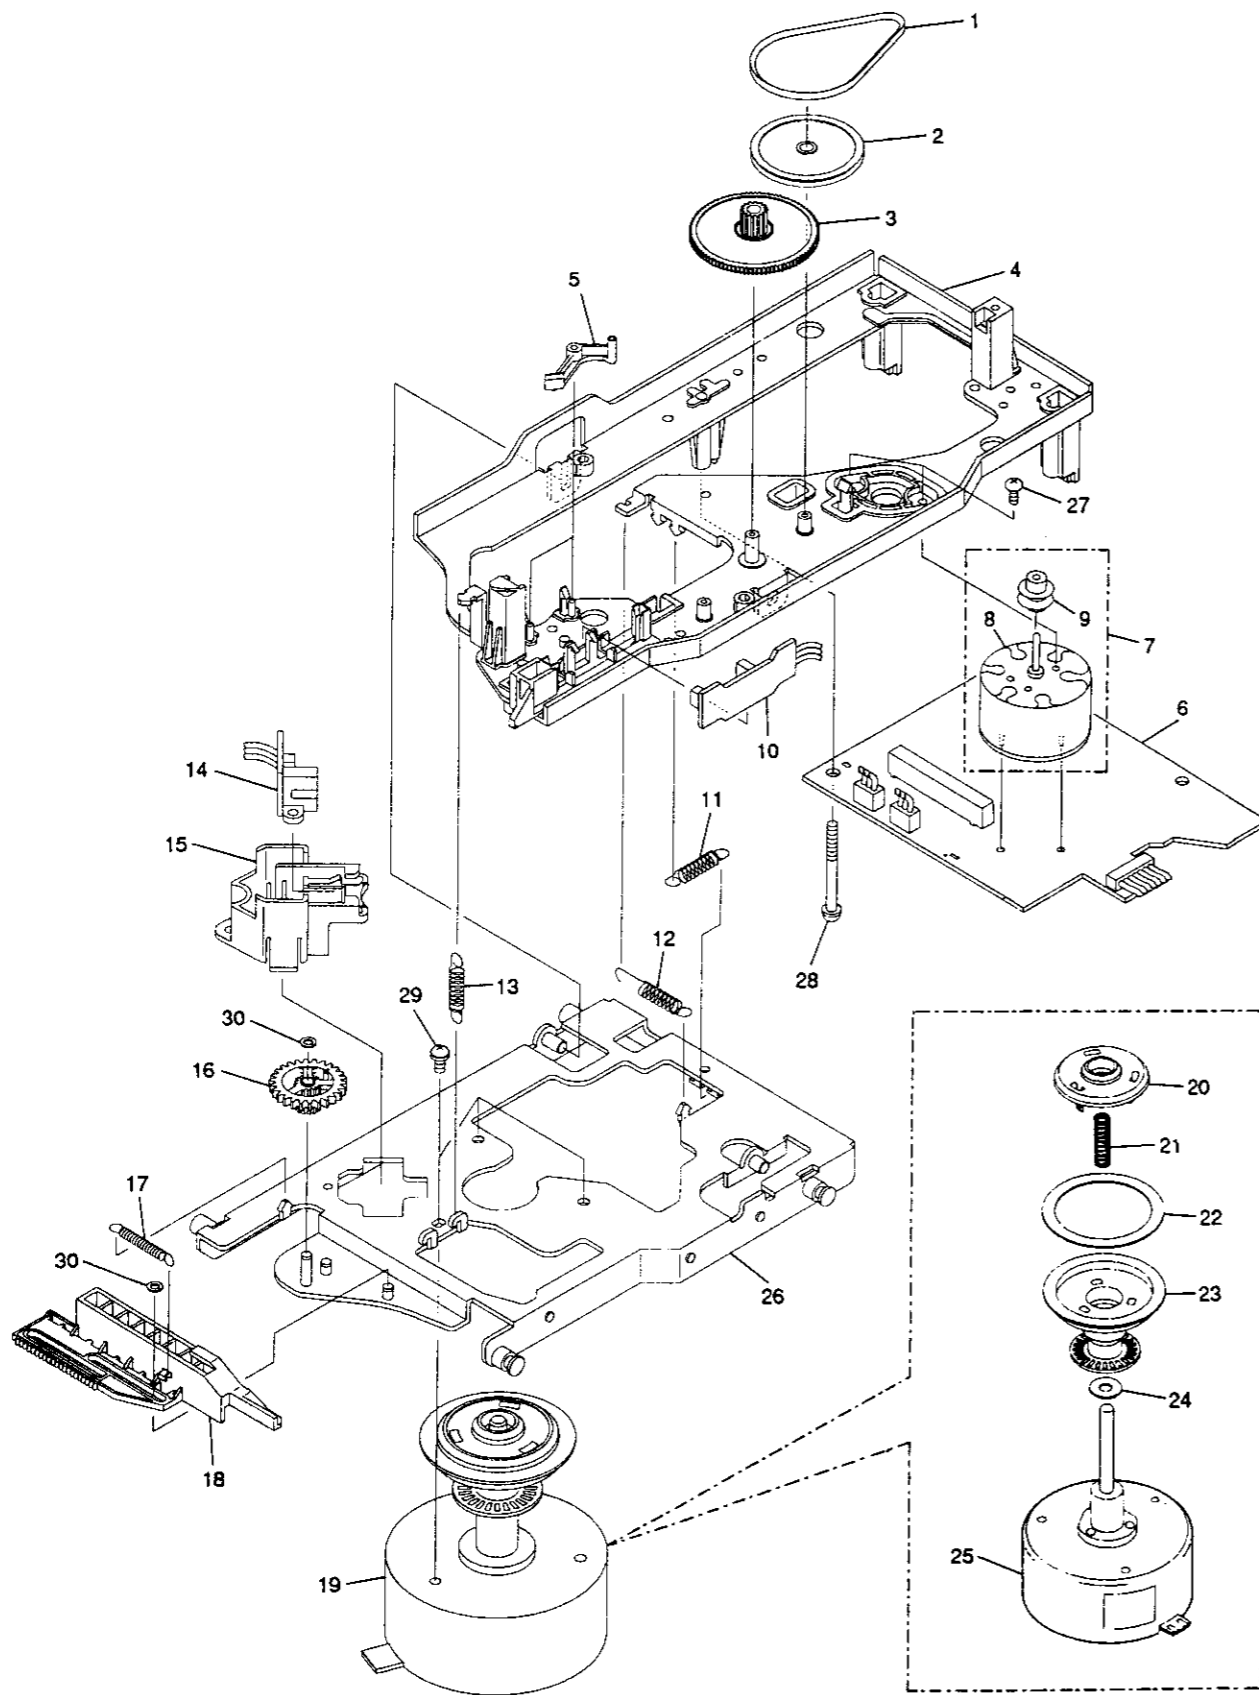

1


2

3

### (7) RACK ASS'Y

#### Parts List

Mark	No.	Description	Part No.
NSP	1	Sensor stay	VBK1036
NSP	2	Tilt sensor	SG-302
NSP	3	Pick up ASS'Y	VWY1030
	4	Rack	VNL1495
	5	Tan. base	VNL1494
	6	Screw	PBB26P080FMC
	7	Screw	PMA20P060FMC
	8	Screw	PMA20P080FMC
	9	Screw	PMH20P040FMC
	10	Screw	SMZ20H120FZK

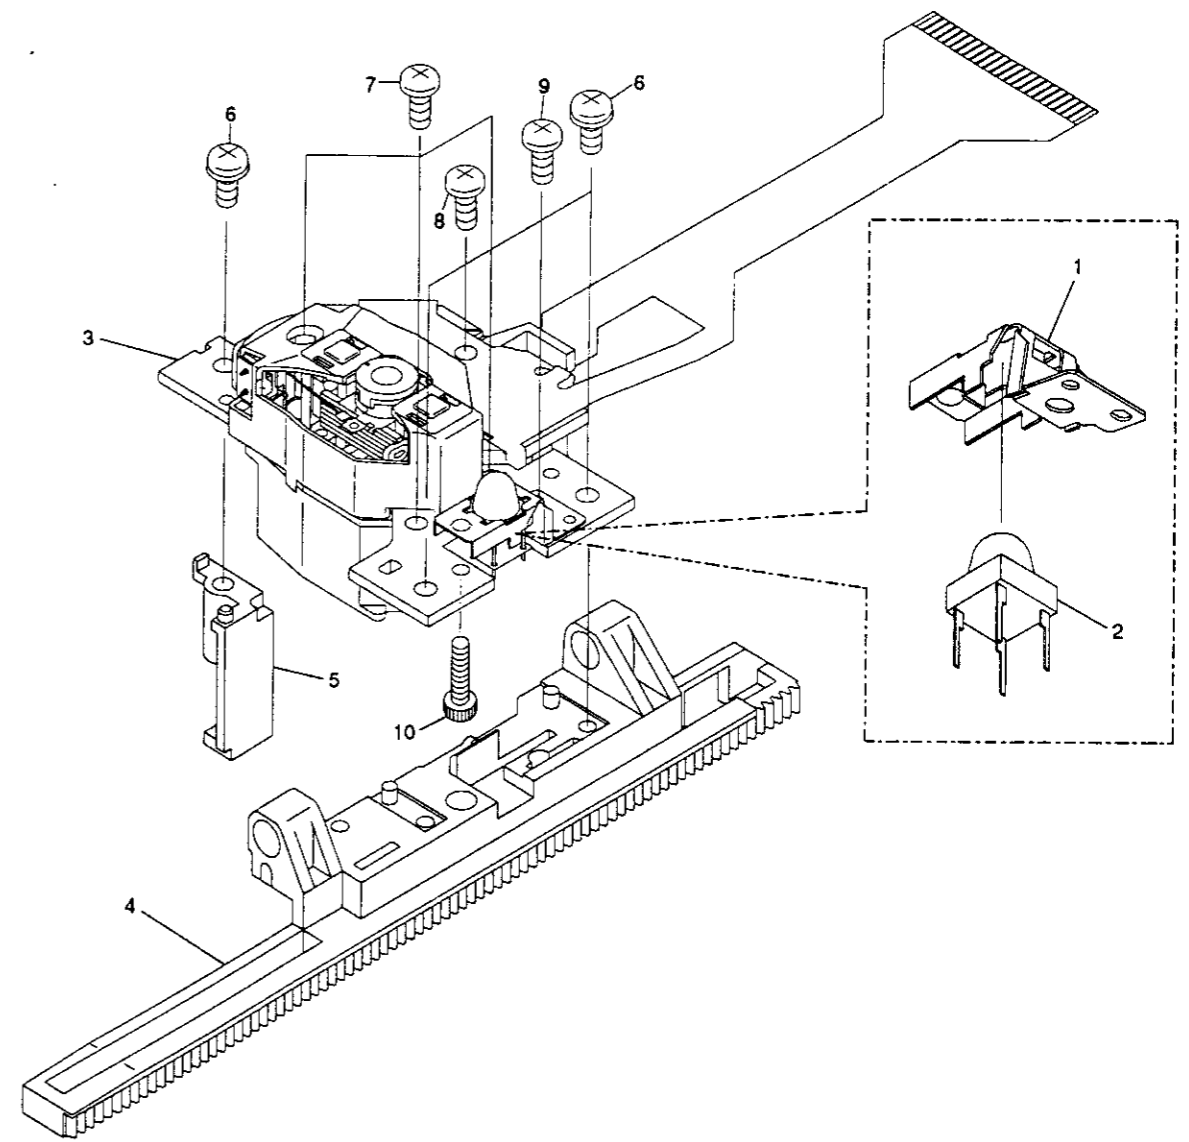

4

5

6

### (8) P

#### Parts

#### Mark

NSP

NSP


NSP

NSP

## (7) RACK ASS'Y

### Parts List


Mark No.	Description	Part No.
NSP 1	Sensor stay	VBK1036
NSP 2	Tilt sensor	SG-302
NSP 3	Pick up ASS'Y	VWY1030
4	Rack	VNL1495
5	Tan. base	VNL1494
6	Screw	PBB26P080FMC
7	Screw	PMA20P060FMC
8	Screw	PMA20P080FMC
9	Screw	PMH20P040FMC
10	Screw	SMZ20H120FZK

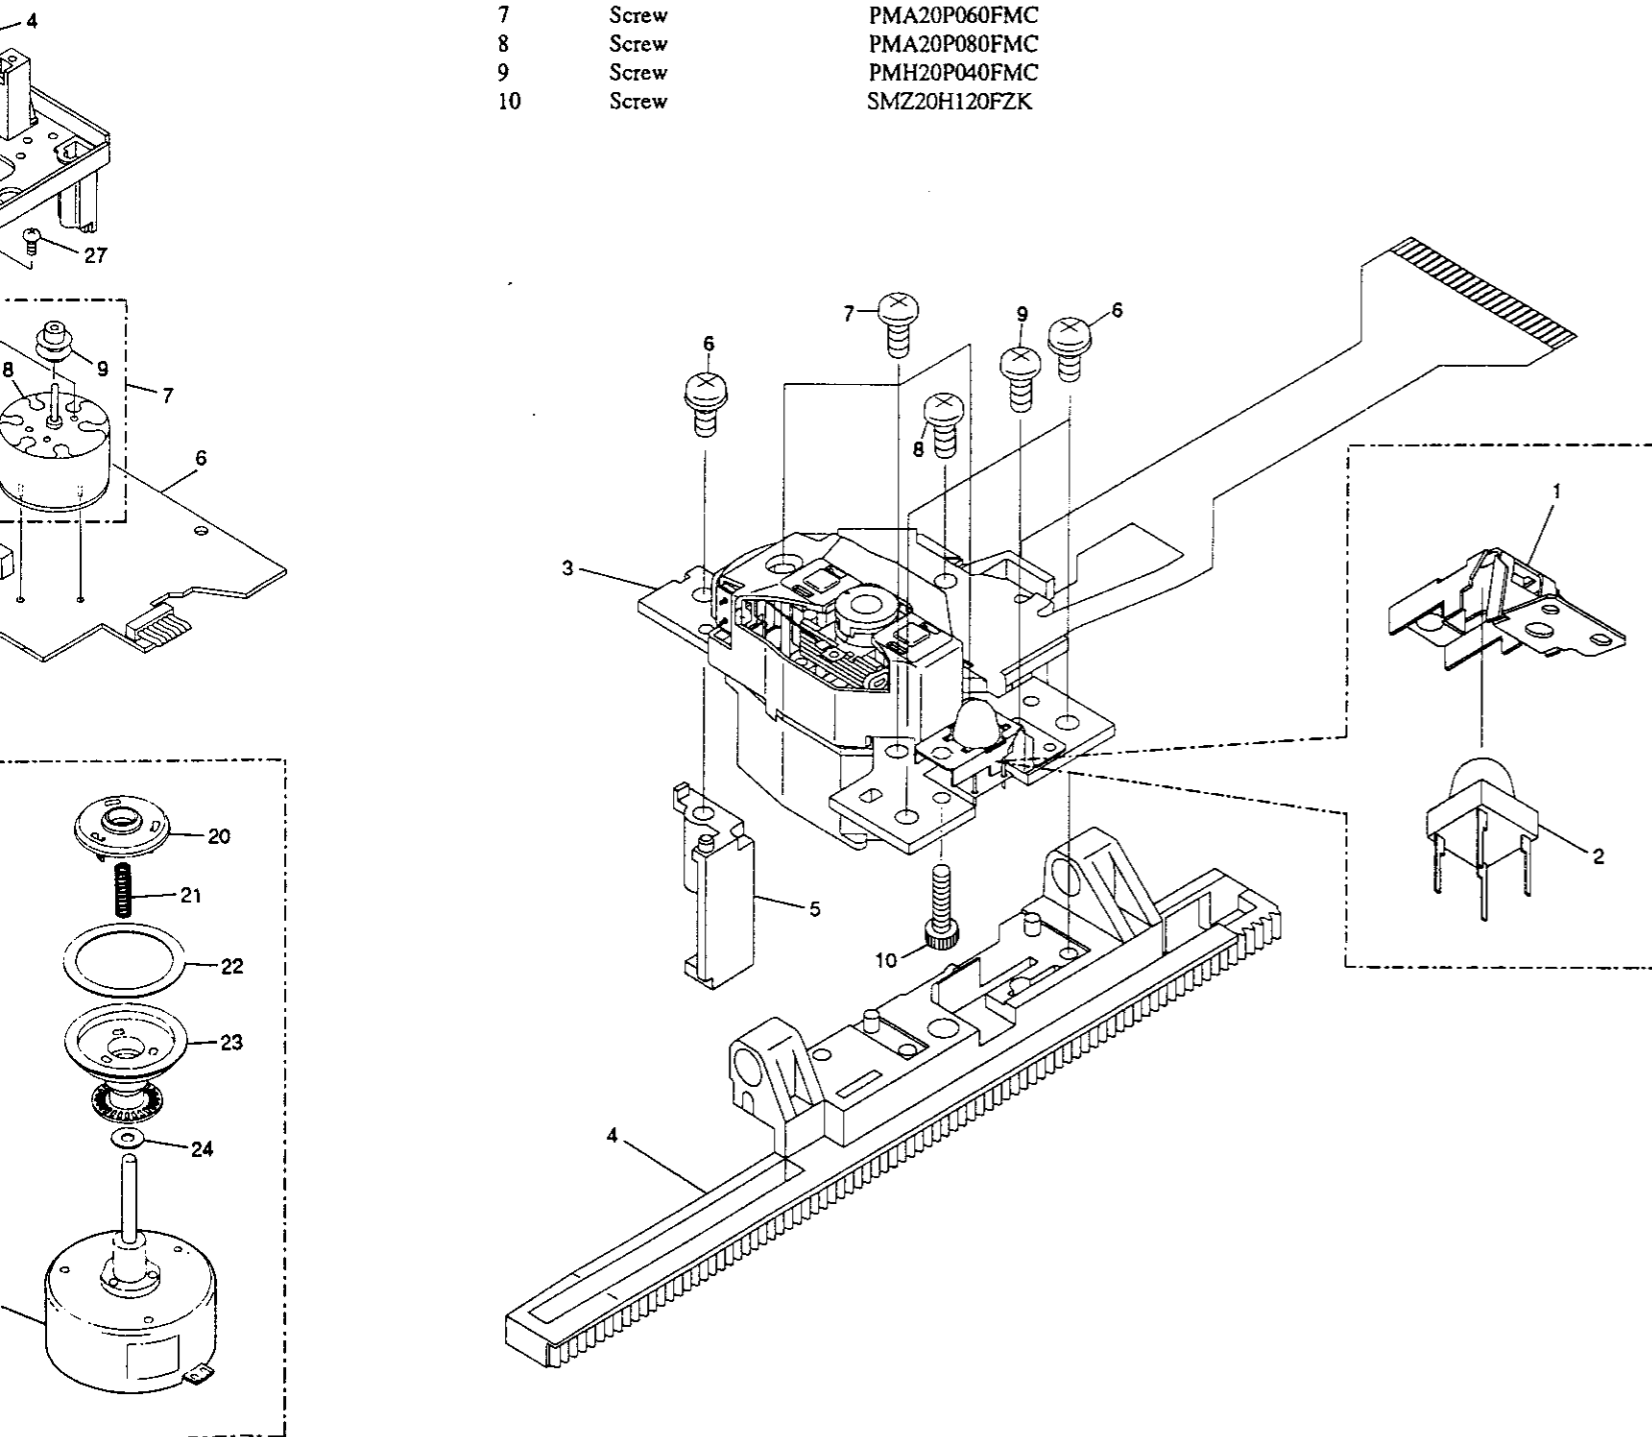

## (8) PACKING

### Parts List

Mark No.	Description	Part No.	Mark No.	Description	Part No.
NSP 1	Warranty card	ARW-088	NSP 9	Caution card (UC)	VRM1039
2	Connection cord	VDE-055	NSP 10	Caution card	VRR1009
3	Euro scart cable (21P)	VDE1027	11	Remote control unit (CU-CLD077)	VXX1758
NSP 4	Battery (R03, AAA)	VEM-022	12	Battery cover	VNK1293
NSP 5	Polyethylene bag	VHL-014			
6	Operating instructions (English/French/German/Italian)	VRE1010	NSP 13	Polyethylene bag	Z21-029
7	Operating instructions (Dutch/Swedish/Spanish/Portuguese)	VRF1017	14	Pad (F)	VHA1105
NSP 8	Caution card (EW)	VRM1027	15	Pad (R)	VHA1106
			16	Packing case	VHG1228
			17	Mirror mat	VHL1006


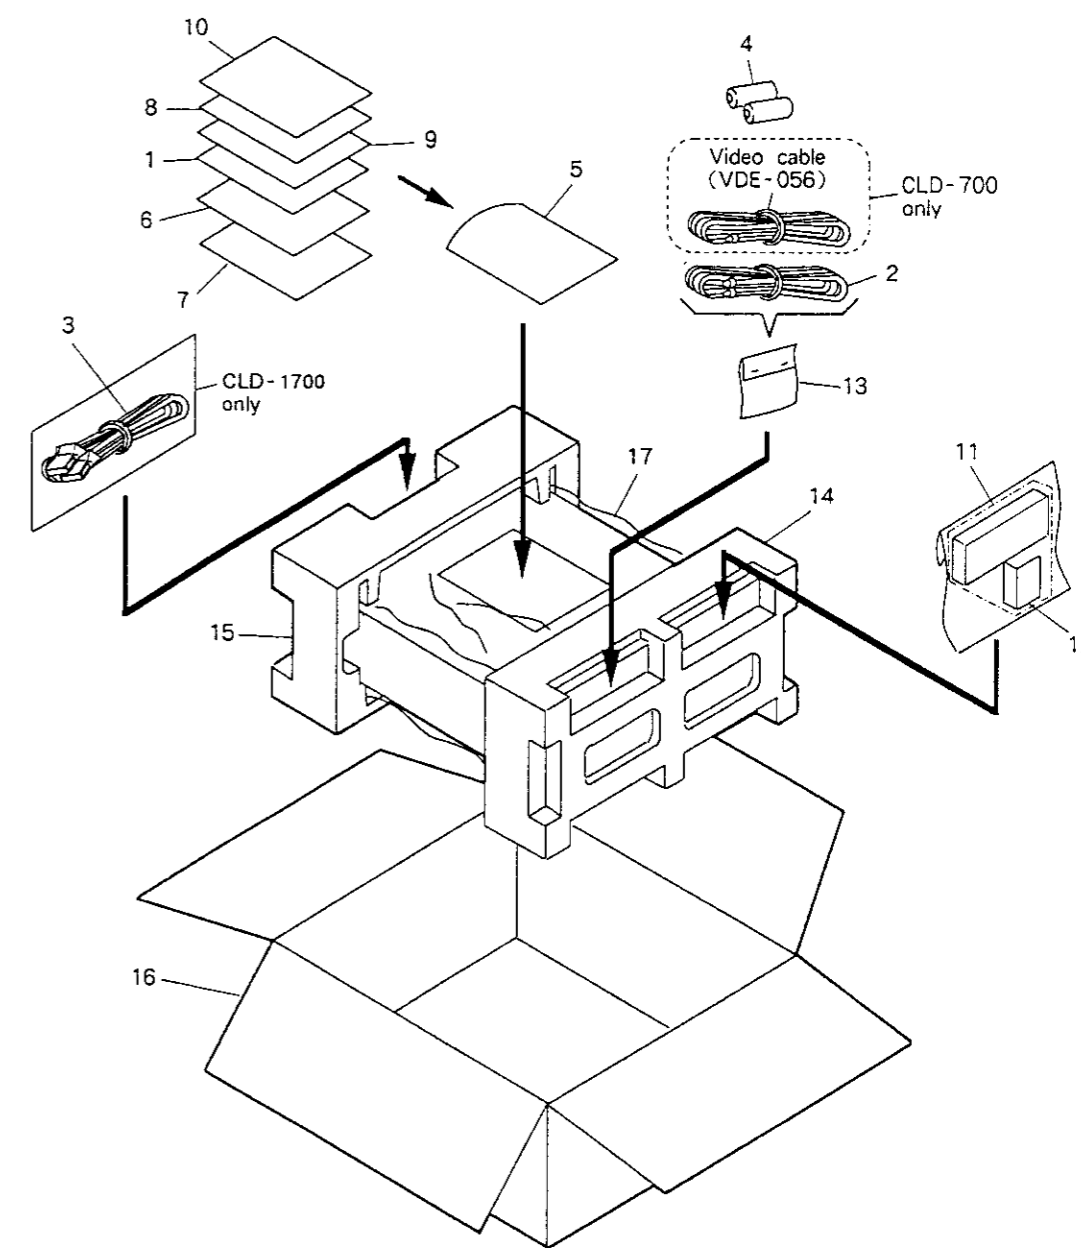





### 3. SCHEMATIC AND PCB CONNECTIONS DIAGRAMS

#### 3.1 FLKY, PSWB, HEPB, SYPS, CAMB, LOSB, LOMB, FG, PKSB, PICKUP ASSEMBLIES AND OVERALL WIRING DIAGRAM

FLKB ASSEMBLY (VWM1278 : CLD-1700) (VWM1277 : CLD-700)

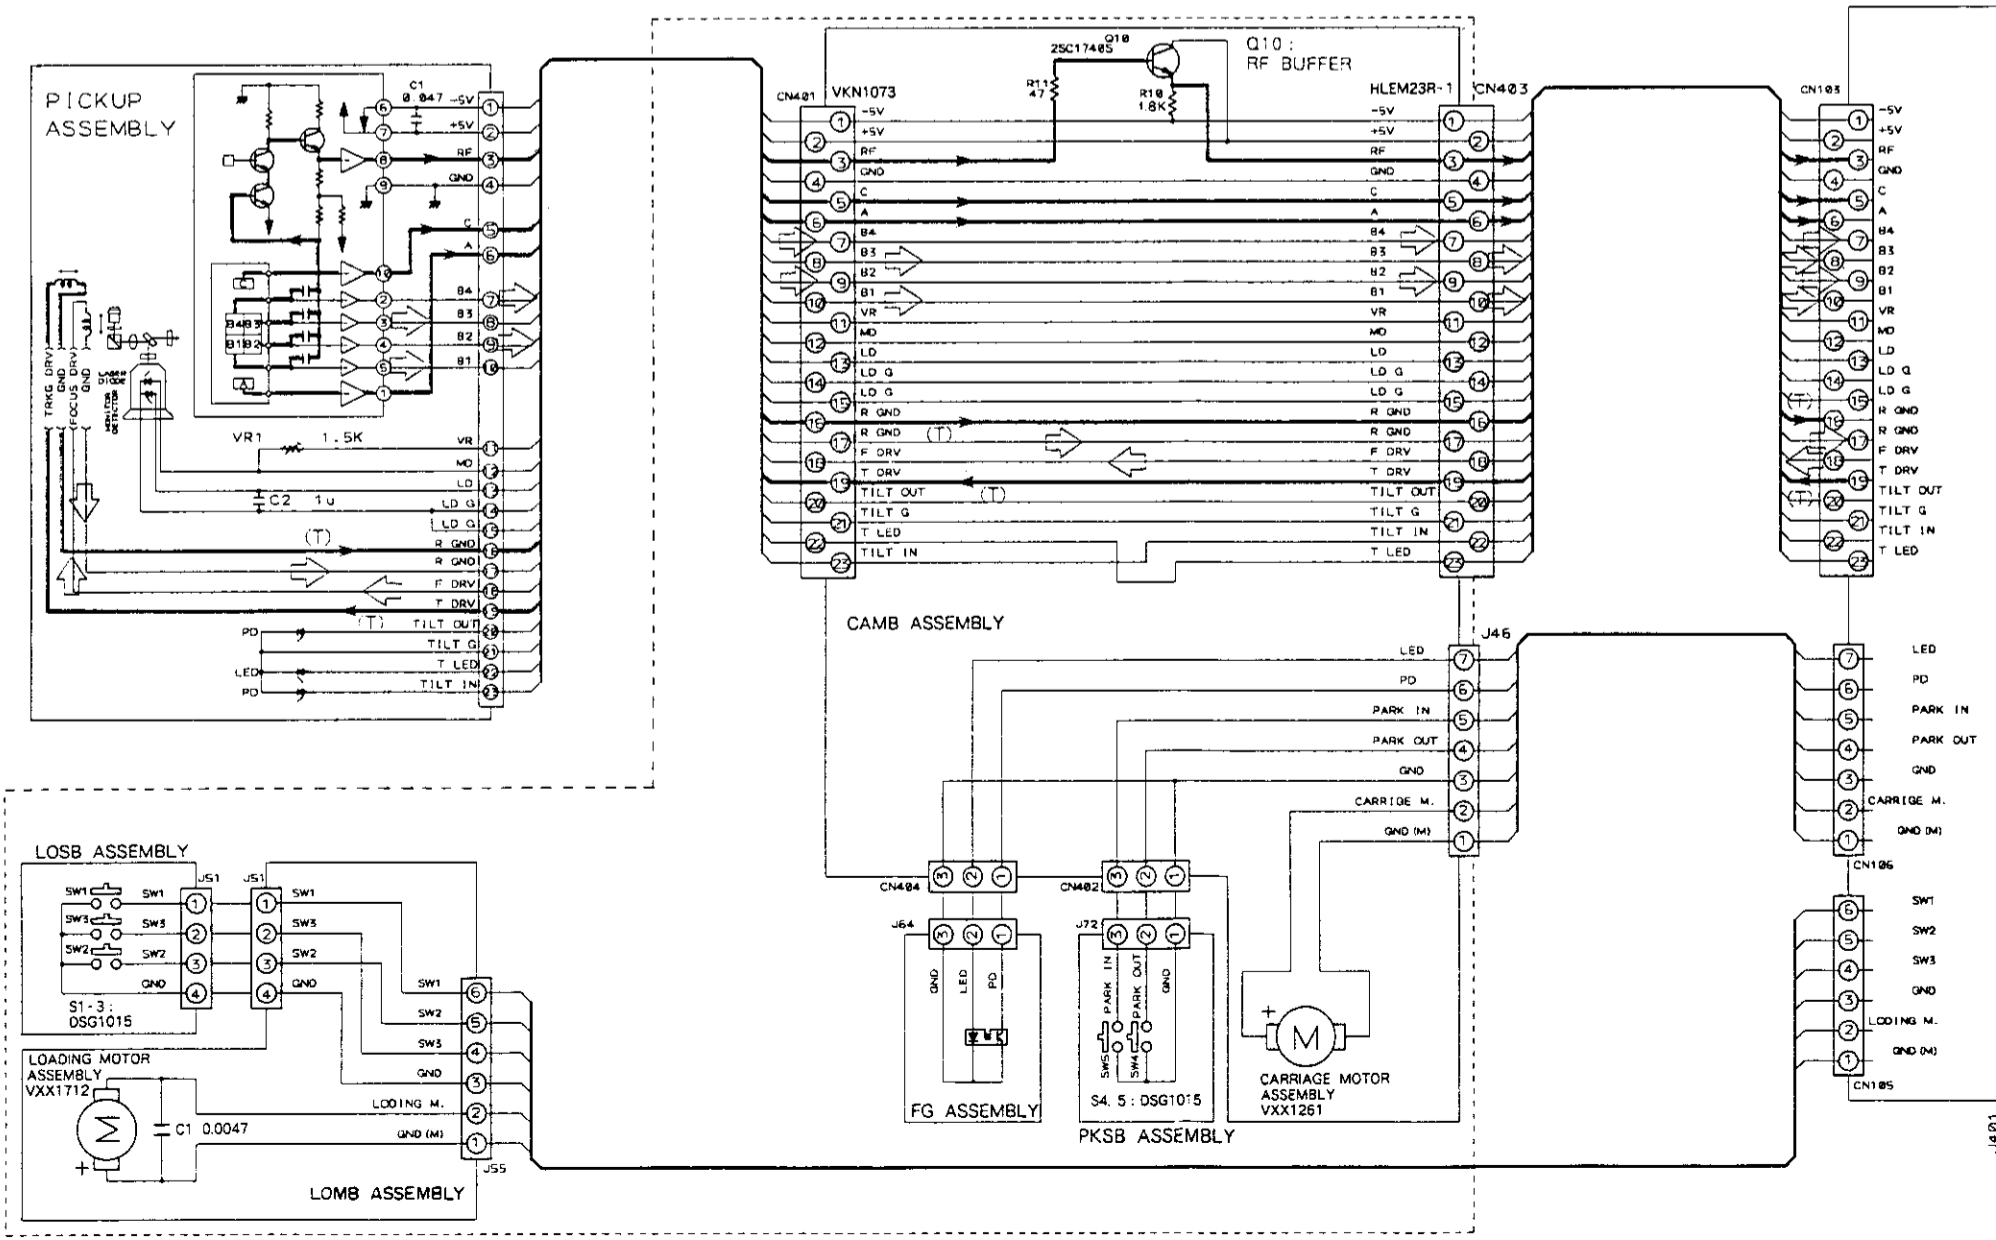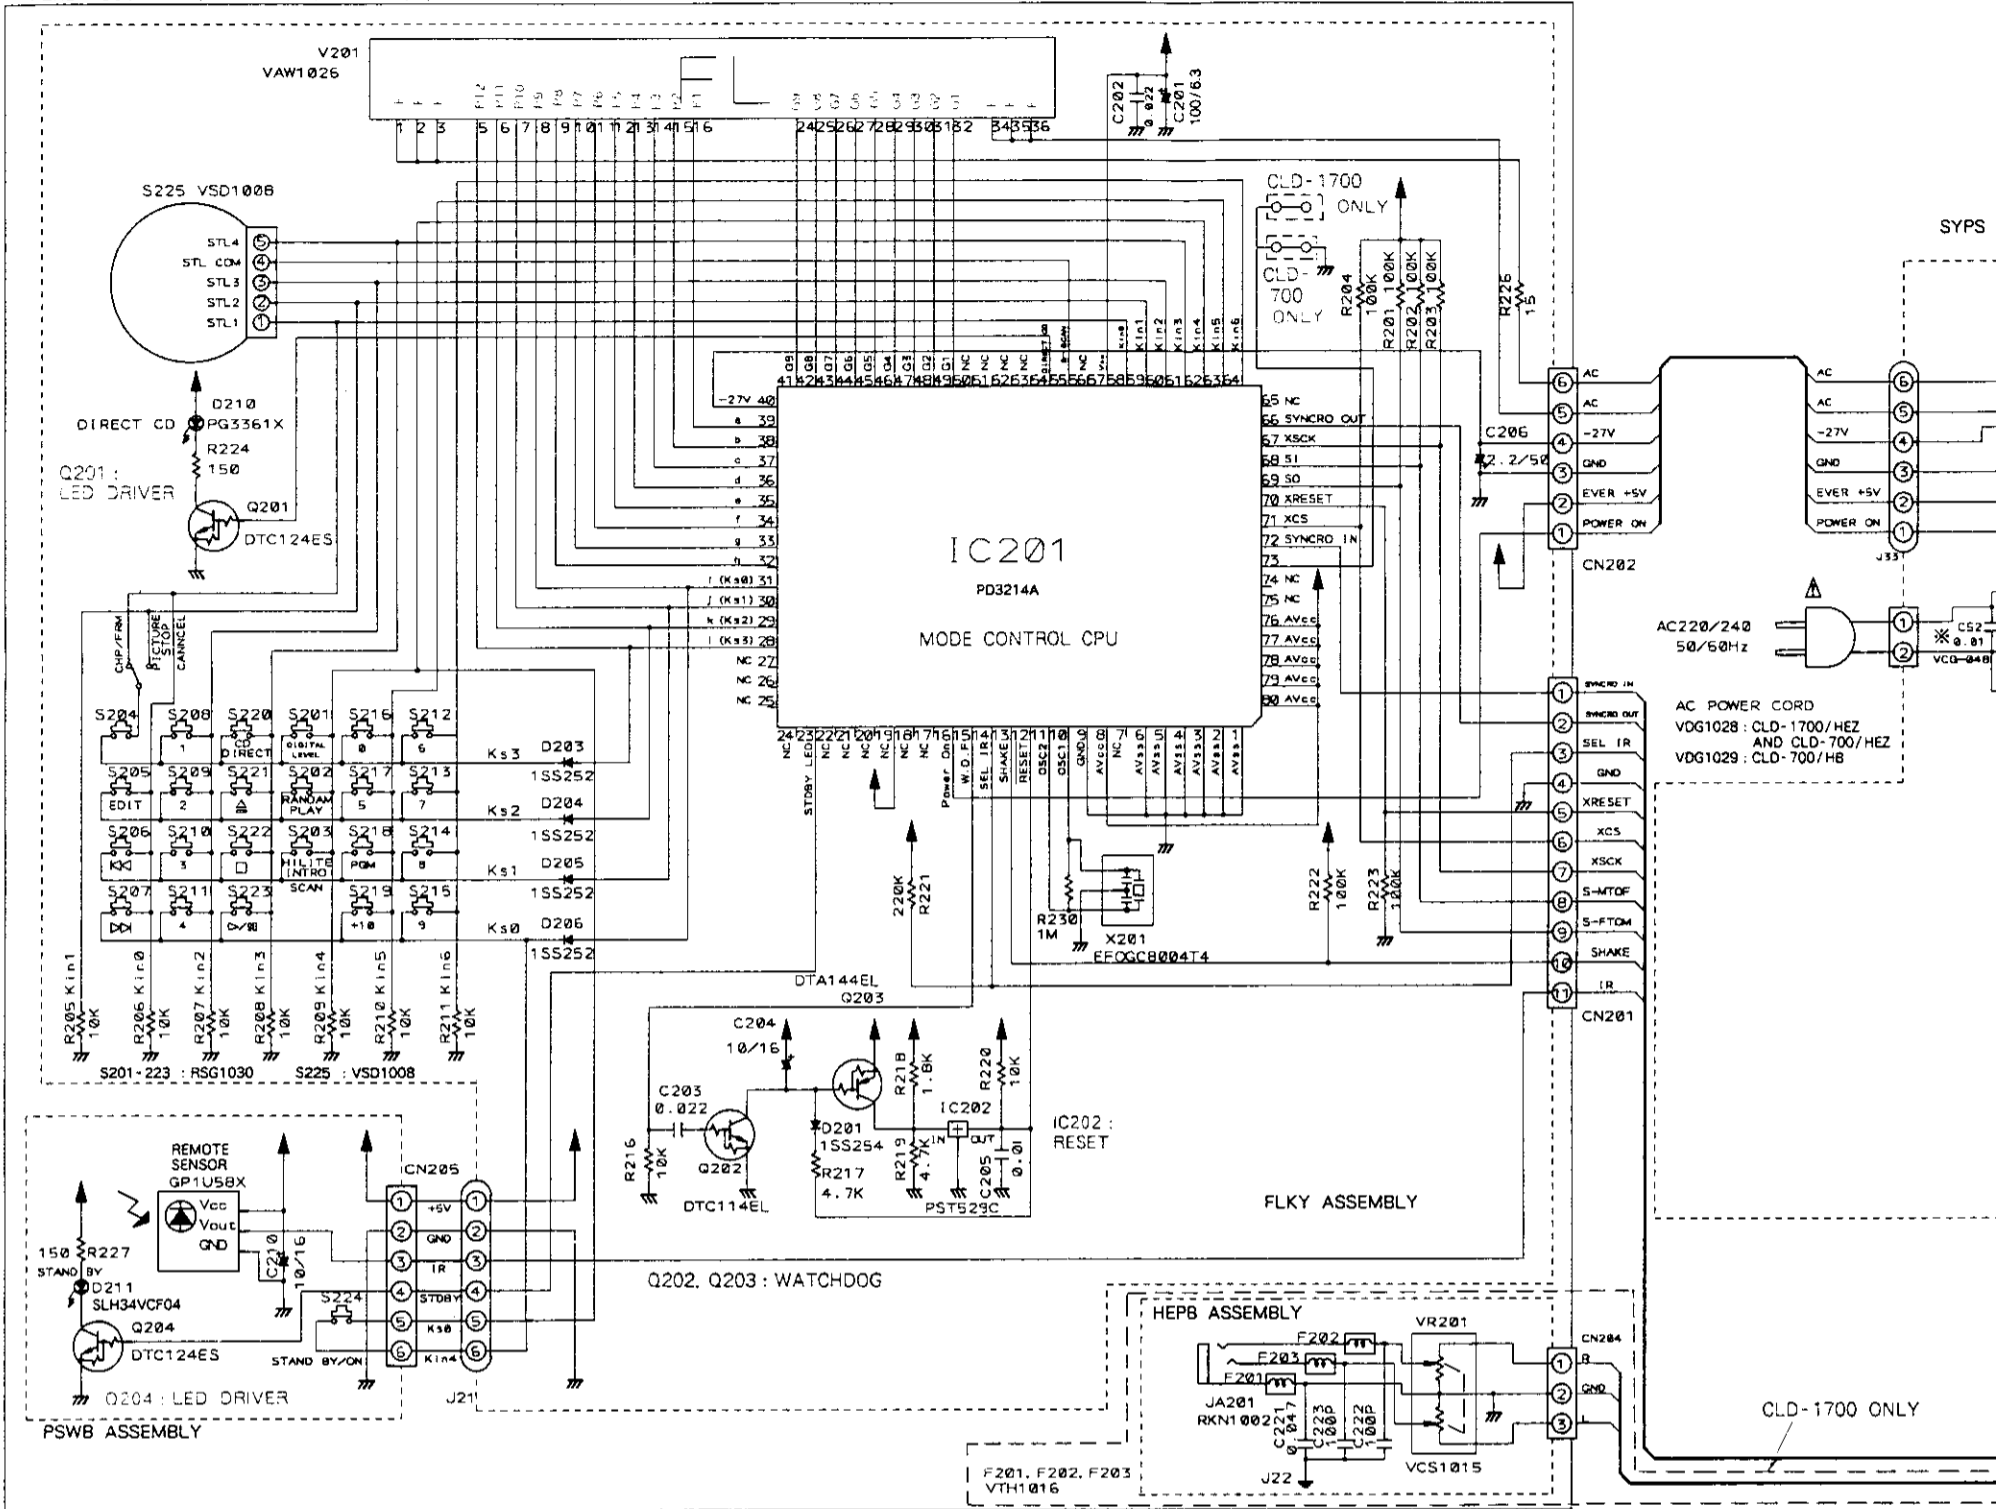

MACB ASSEMBLY (VWM1250)

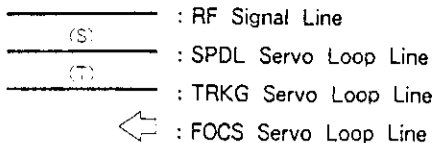

Note: (Type 4)  
 1. When ordering service parts, be sure to refer to "PARTS LIST of EXPLODED VIEWS" or "PCB PARTS LIST".

2. Since these are basic circuits, some parts of them or the values of some components may be changed for improvement.

3. RESISTORS:  
 Unit: kΩ, MΩ, or Ω unless otherwise noted.  
 Rated power: 1/4W, 1/6W, 1/8W, 1/10W unless otherwise noted.  
 Tolerance: (F): ±1%, (G): ±2%, (K): ±10%, (M): ±20% or ±5% unless otherwise noted.

4. CAPACITORS:  
 Unit: pF or μF unless otherwise noted.  
 Ratings: capacitor (μF) / voltage (V) unless otherwise noted.  
 Rated voltage: 50V except for electrolytic capacitors.

5. COILS:  
 Unit: mH or μH unless otherwise noted.

6. VOLTAGE AND CURRENT:  
 □ : DC voltage (V) in PLAY mode unless otherwise noted.  
 ⊖mA or ⊕mA : DC current in PLAY mode unless otherwise noted.  
 Value in ( ) is DC current in STOP mode.

7. OTHERS  
 ● : Signal route.  
 ⊕ : Adjustment point.  
 ● (Red) : Measurement point.  
 ● The Δ mark found on some component parts indicates the importance of the safety factor of the parts. Therefore, when replacing, be sure to use parts of identical designation.

8. SWITCHES (Underline indicates switch position):  
 PKSB ASSEMBLY  
 S224 : POWER (STANDBY/ON)


PKSB ASSEMBLY  
 S4 : PARK OUT  
 S5 : PARK IN

LOSB ASSEMBLY  
 S1 : TILT LOADING 1  
 S2 : TILT LOADING 2  
 S3 : TILT LOADING 3

FLKY ASSEMBLY  
 S201 : LANGUAGE  
 S202 : RANDOM PLAY  
 S203 : HILITE/INTRO SCAN  
 S204 : CHP/TIME  
 S205 : PGM EDIT  
 S206 : SKIP (⏮) (⏪)  
 S207 : SKIP (⏩) (⏭)  
 S208 : 1  
 S209 : 2  
 S210 : 3  
 S211 : 4  
 S212 : 6  
 S213 : 7  
 S214 : 8  
 S215 : 9  
 S216 : 0  
 S217 : 5  
 S218 : PGM  
 S219 : +10  
 S220 : DIRECT CD (CD)  
 S221 : OPEN/CLOSE (⏮) (⏭)  
 S222 : STOP (■)  
 S223 : PLAY/PAUSE (⏩) (⏮)  
 S225 : ROTARY ENCODER

SYPS ASSEMBLY (VWR1146 : CLD-1700/HEZ AND CLD-700/HEZ)  
 (VWR1147 : CLD-700/HB)


IC41 : +12V REGULATOR

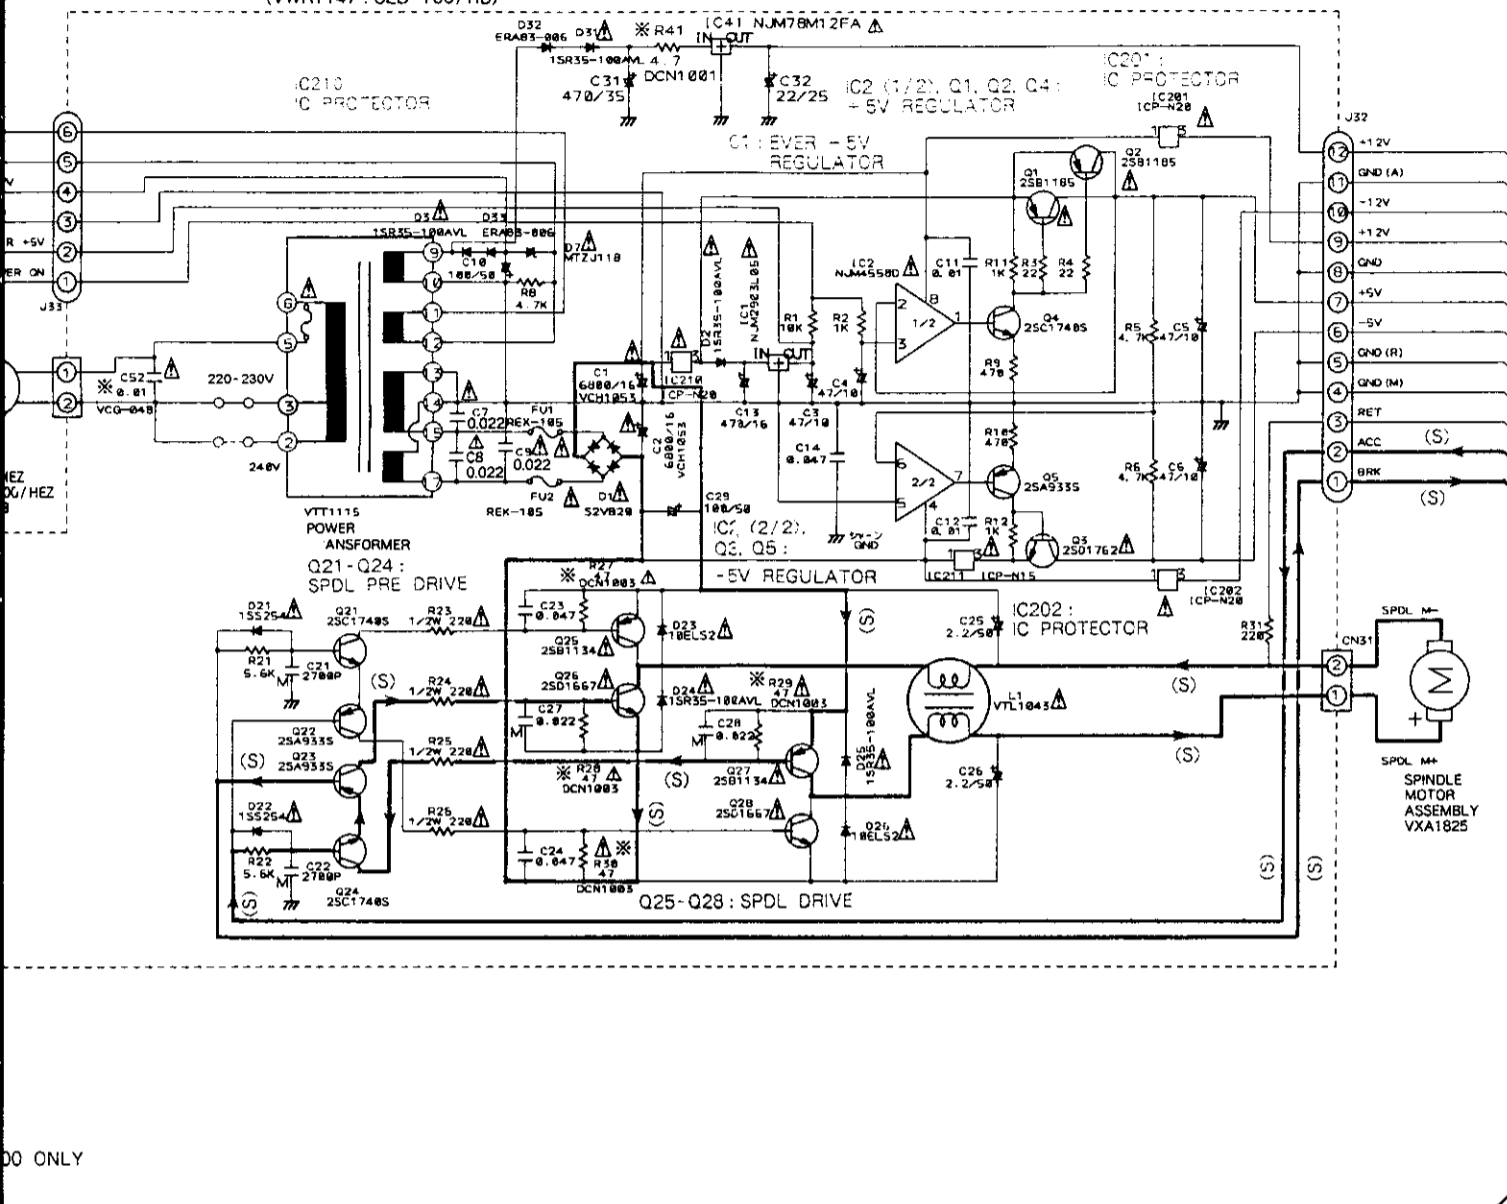

00 ONLY


MOTHER ASSEMBLY  
 (VWM1276 : CLD-1700)  
 (VWM1264 : CLD-700)

(MAIN ASSEMBLY)  
 AUDIO ASSEMBLY  
 (⇒ P25-P30)

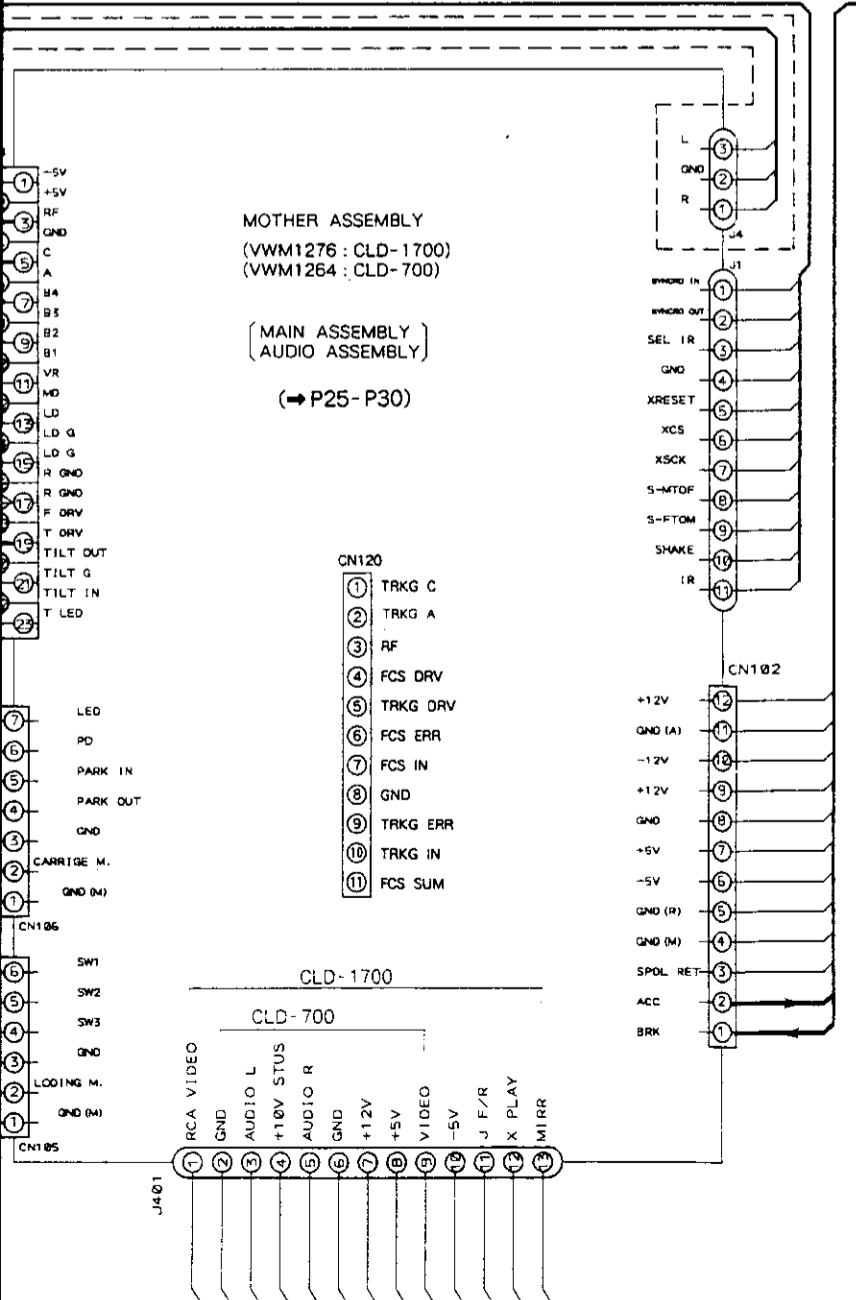


SCRB ASSEMBLY  
 (VWV1248 : CLD-1700)  
 (VWV1255 : CLD-700)

(⇒ P41-P42)

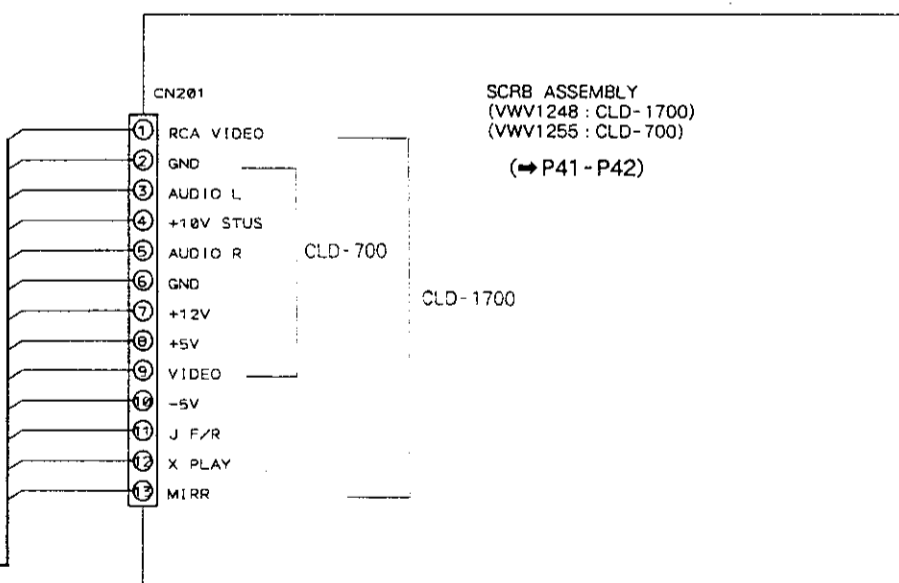

FL Display (V201 : VAW 1026)


• ANODE GRID ASSIGNMENT


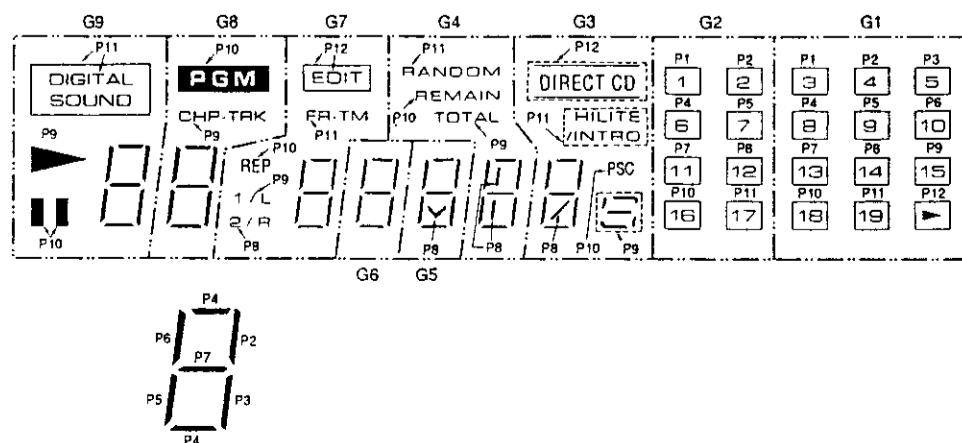


P.C.B. pattern diagram indication	Corresponding part symbol	Part name	P.C.B. pattern diagram indication	Corresponding part symbol	Part name
		Transistor			Ceramic capacitor
		FET			Mylar capacitor
		Diode			Styrol capacitor
		Zener diode			Electrolytic capacitor (Non polarized)
		LED			Electrolytic capacitor (Noiseless)
		Varactor			Electrolytic capacitor (Polarized)
		Tact switch			Power capacitor
		Inductor			Semi-fixed resistor
		Coil			Resistor array
		Transformer			Resistor
		Filter			Resonator
					Thermistor

1. This P.C.B. connection diagram is viewed from the parts mounted side.
2. The parts which have been mounted on the board can be replaced with those shown with the corresponding wiring symbols listed in the above Table.
3. The capacitor terminal marked with shows negative terminal.
4. The diode marked with shows cathode side.
5. The transistor terminal marked with shows emitter.

### PSWB ASSEMBLY

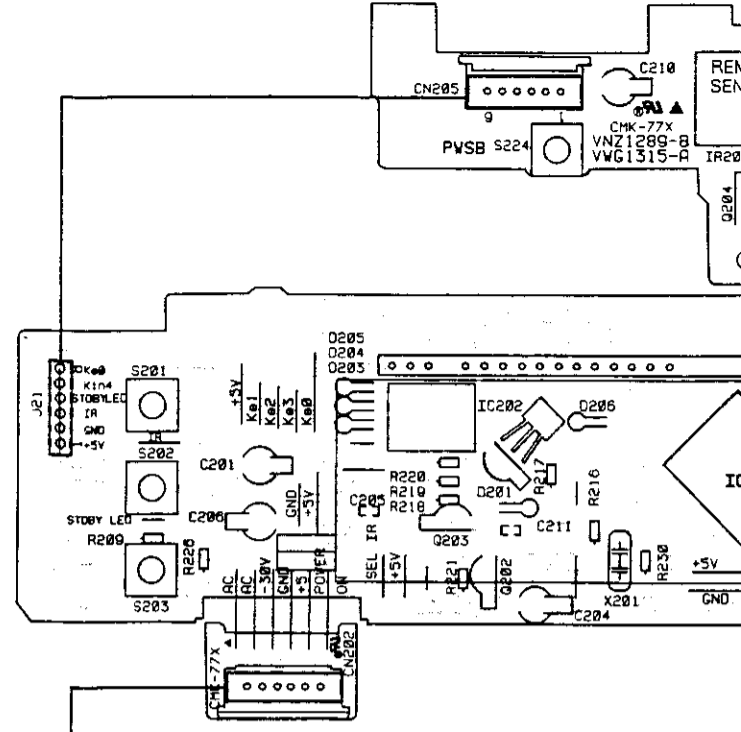

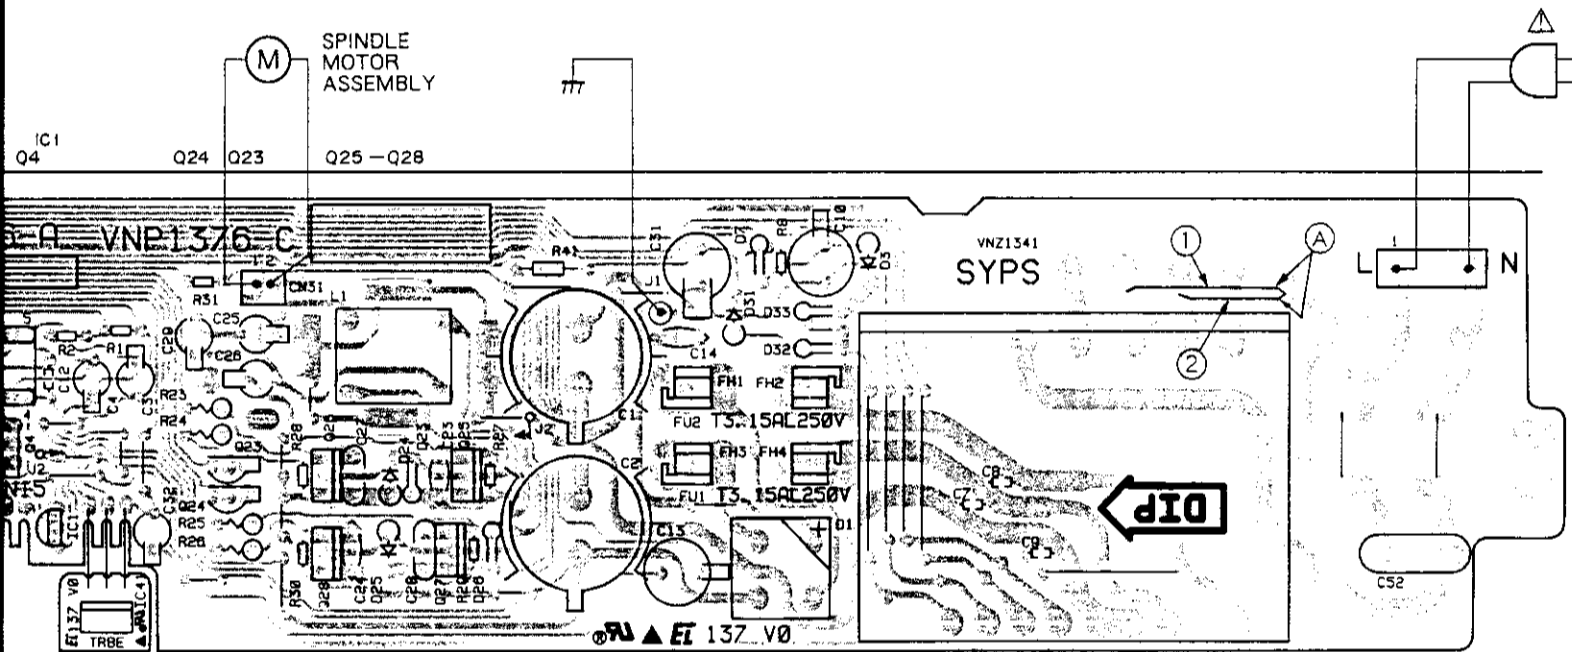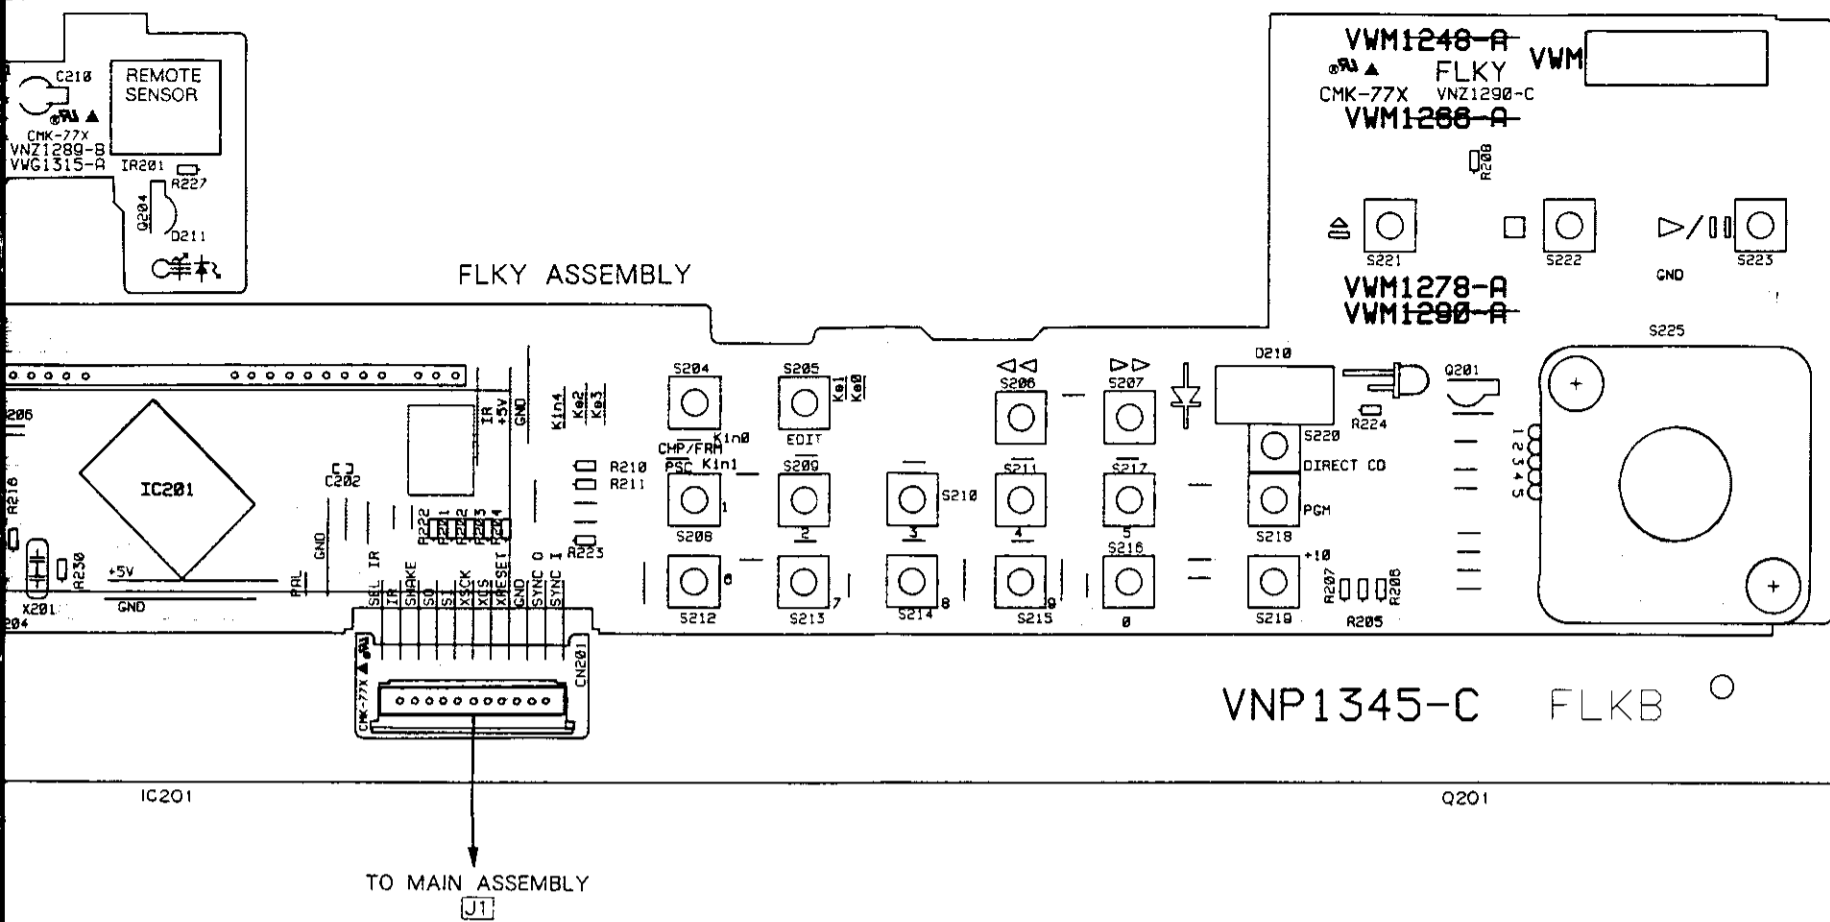



Line voltage selection



1. Disconnect the AC power cord.
2. Remove the cover.
3. Change the position of the jumper wire Ⓐ as follows.

Voltage	jumper wire Ⓐ position
220V-230V	①
240V	②

4. Stick the line voltage label on the rear panel.

Part No.	Description
AAX-193	220V label
AAX-192	240V label

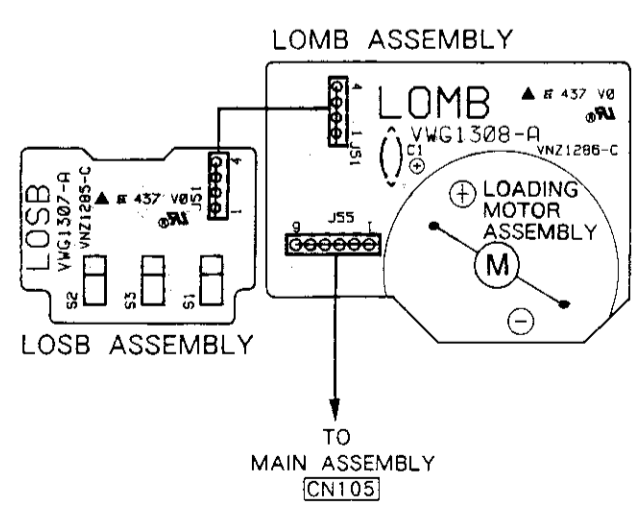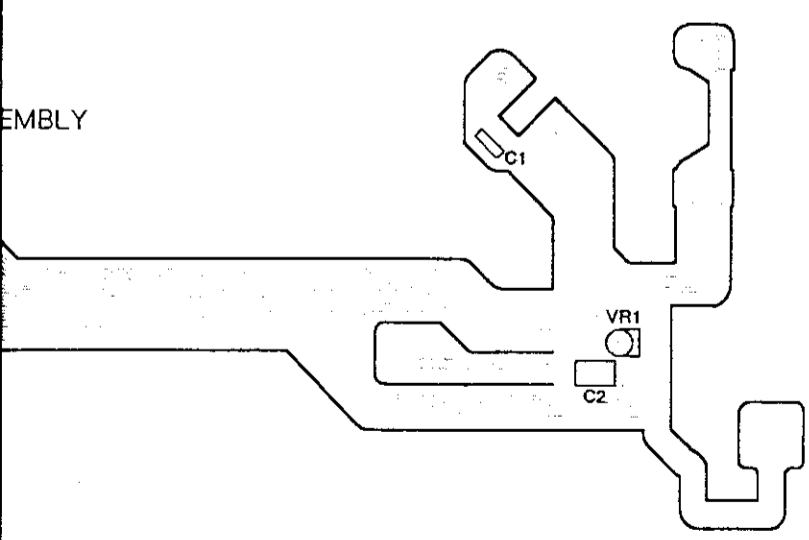

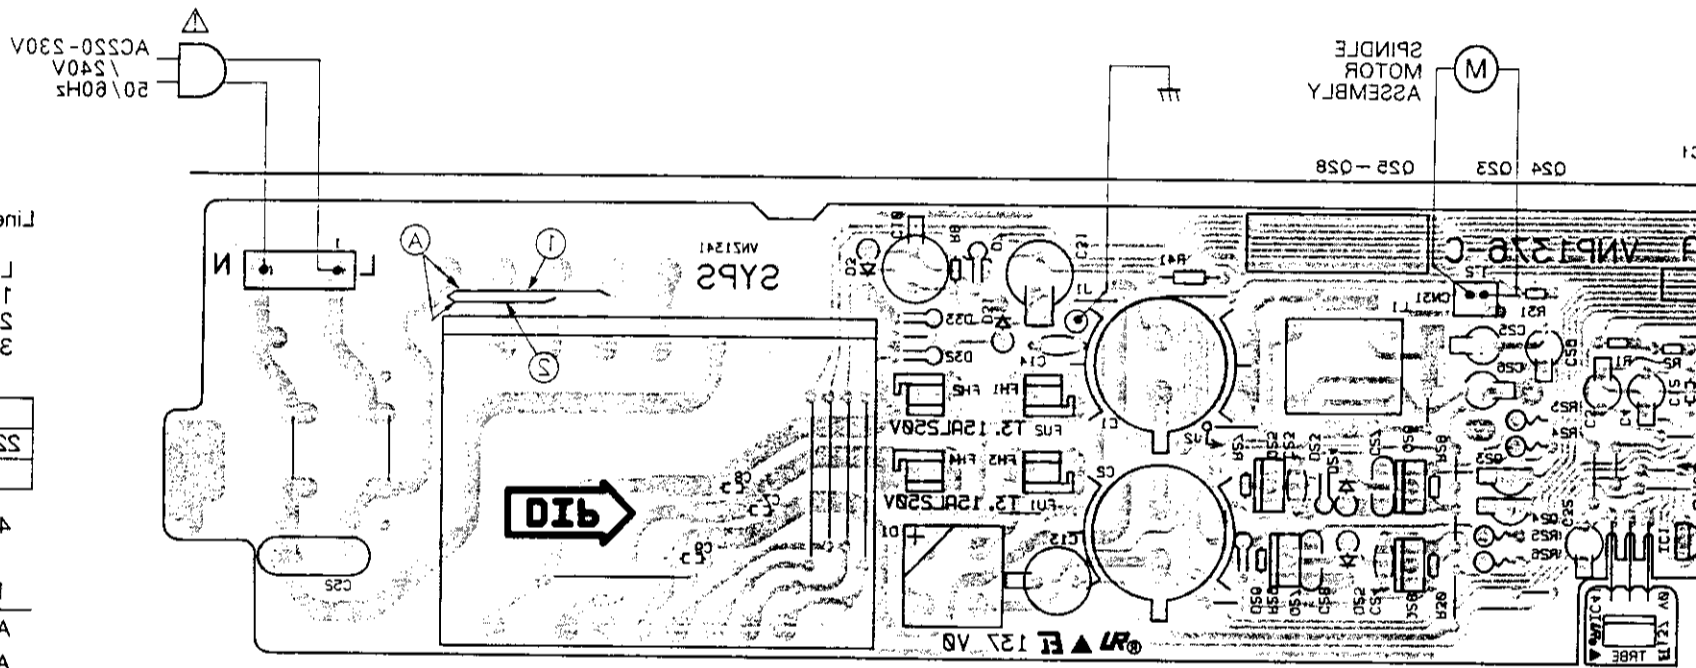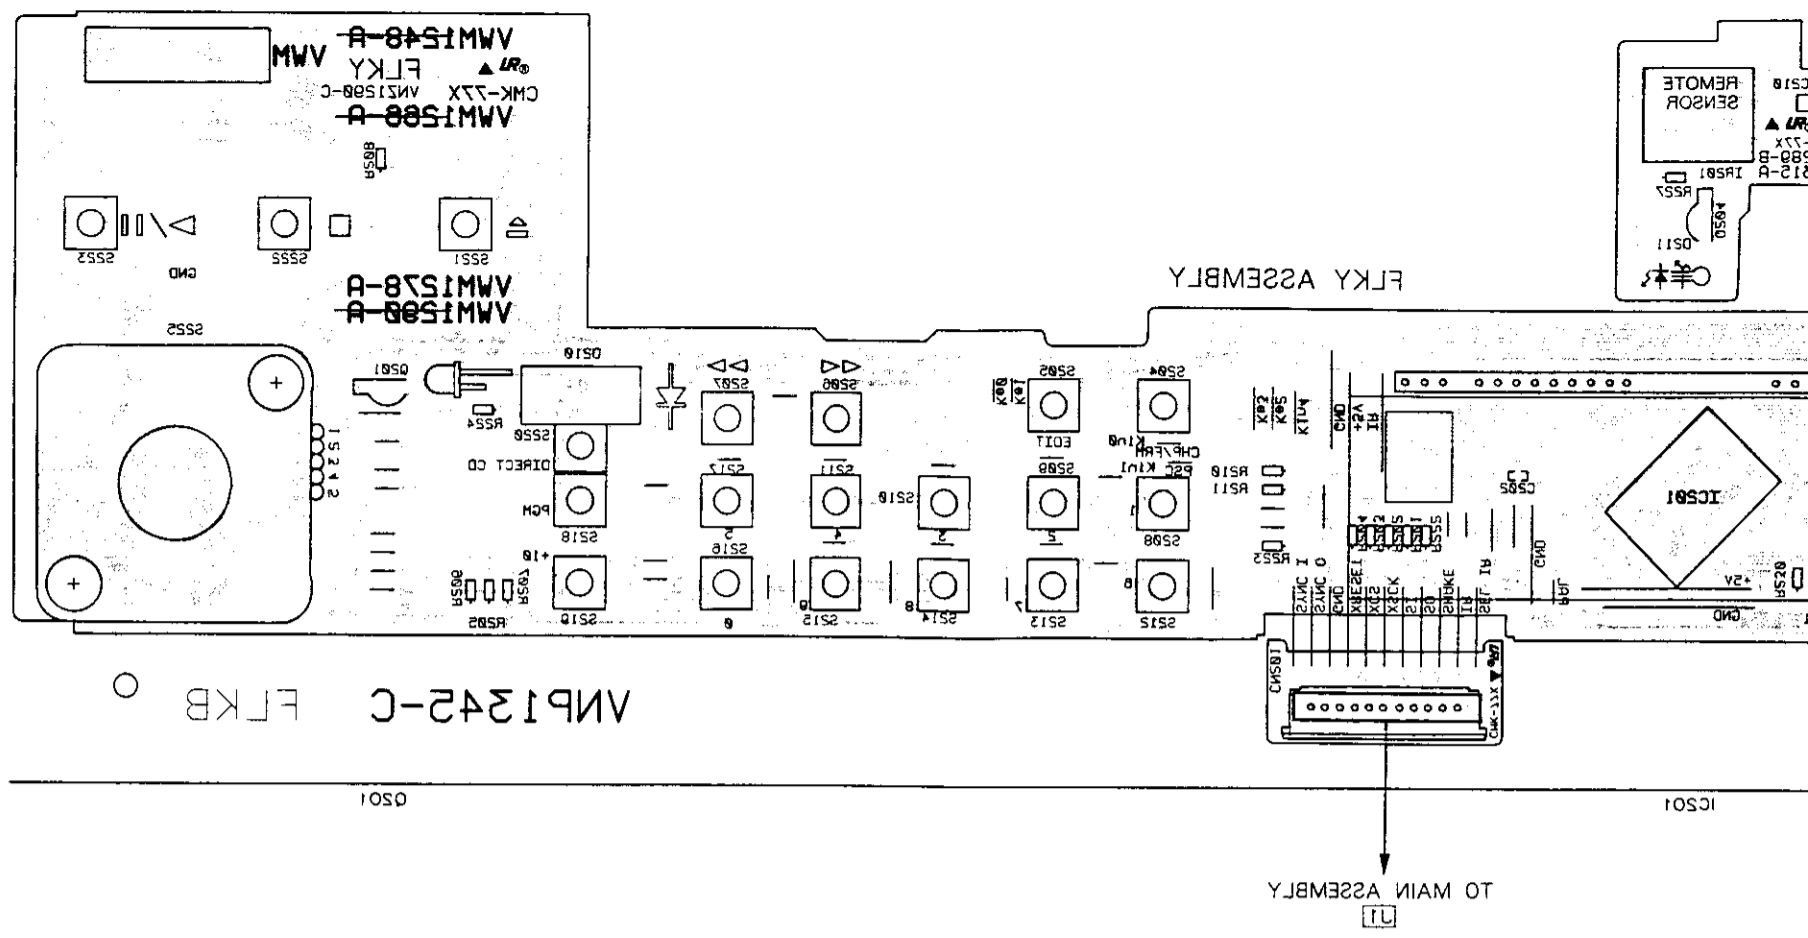

Line voltage selection



Line voltage can be changed as follows:

1. Disconnect the AC power cord.
2. Remove the cover.
3. Change the position of the jumper wire as follows.

Voltage	Jumper wire (A) position
220V-230V	①
240V	②

4. Stick the line voltage label on the rear panel.


Part No.	Description
AAX-193	220V label
AAX-192	240V label

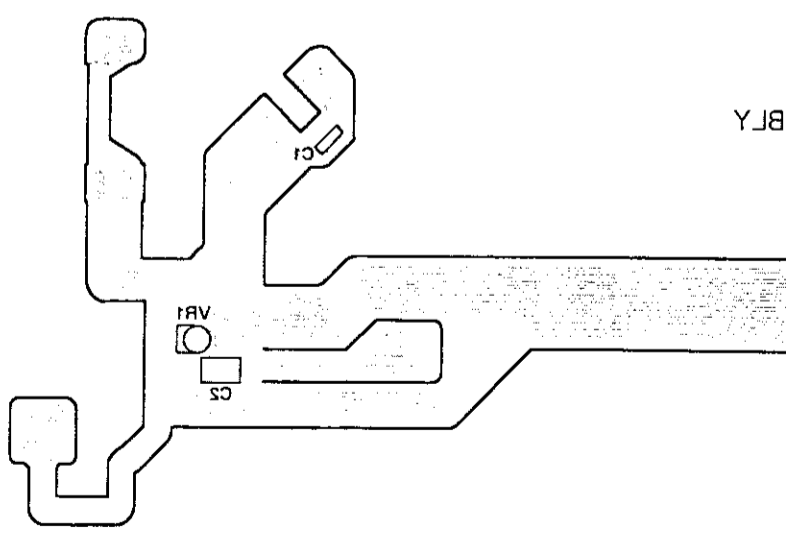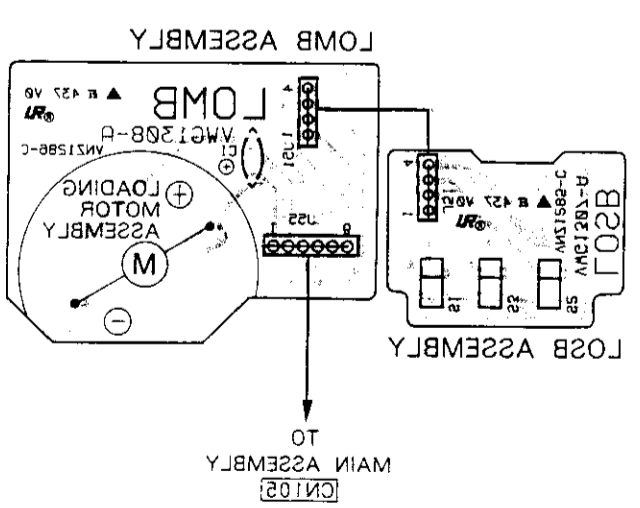



# 3.2 MAIN ASSEMBLY (1/2)

MAIN ASSEMBLY  
• VIDEO AND TB

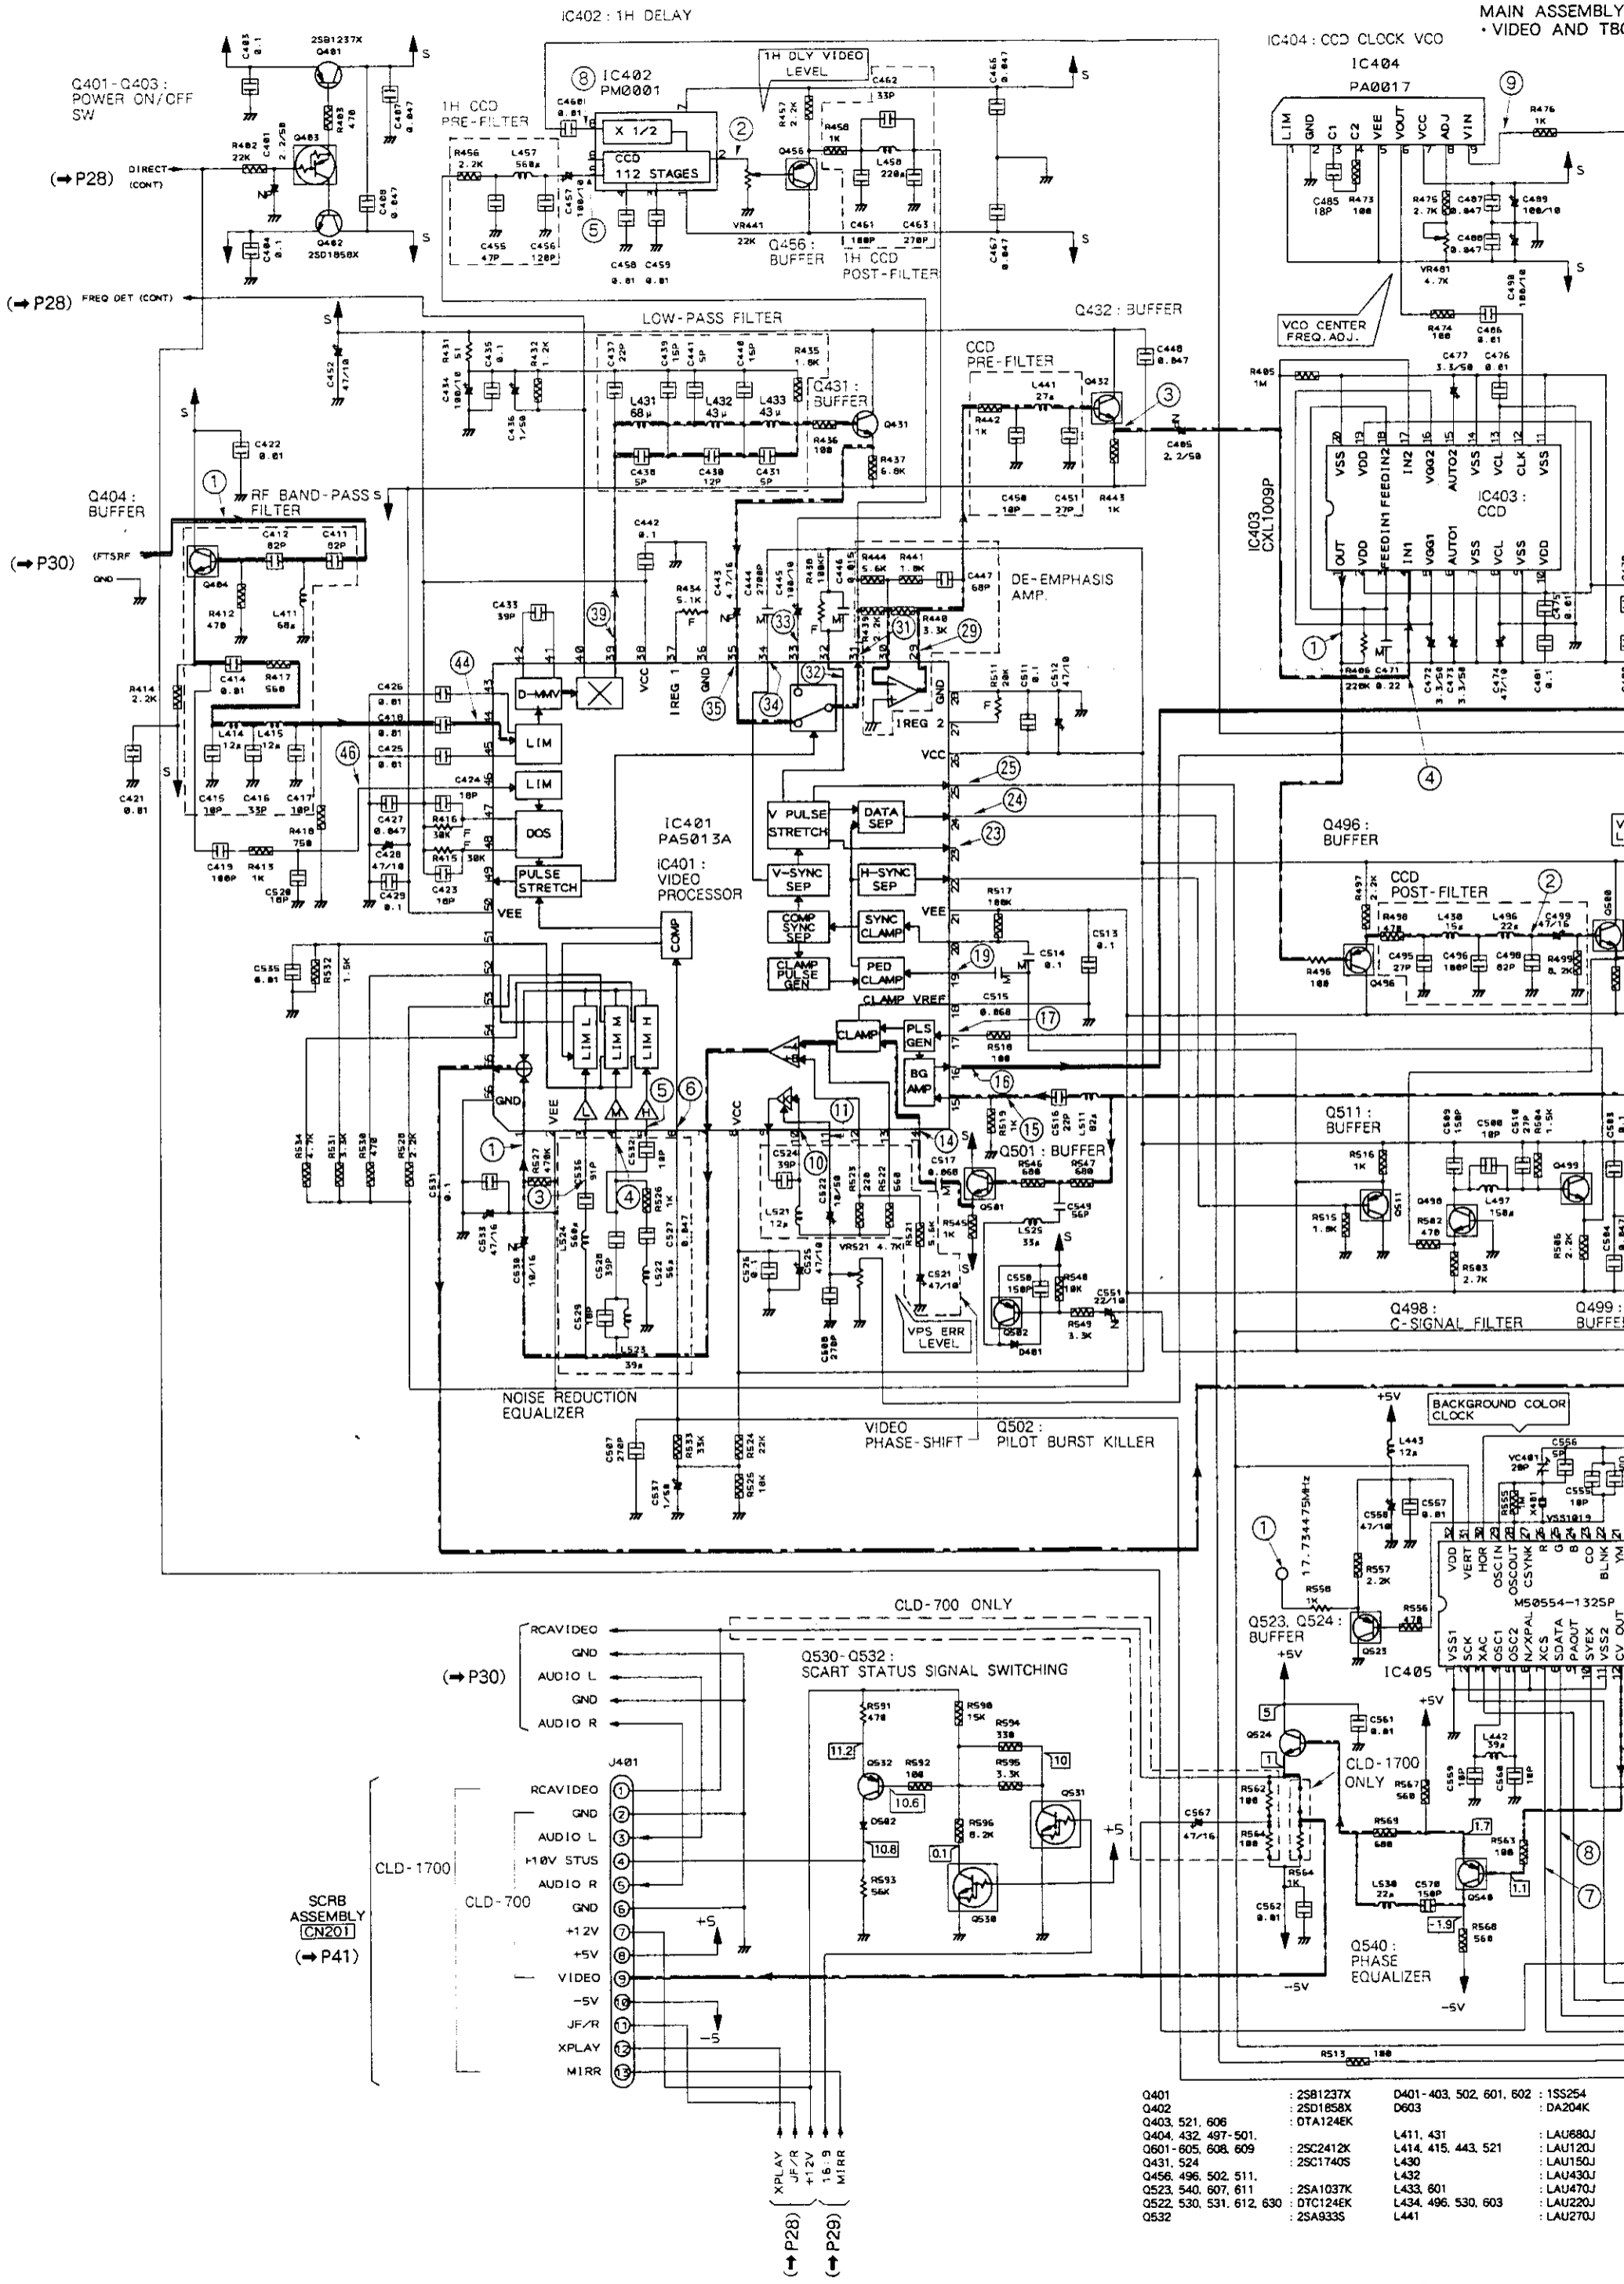

Q401	: 2S81237X	Q401-403, 502, 601, 602	: 1SS254
Q402	: 2SD1858X	D603	: DA204K
Q403, 521, 606	: OTA124EK		
Q404, 432, 497-501,		L411, 431	: LAU680J
Q601-605, 608, 609	: 2SC2412X	L414, 415, 443, 521	: LAU120J
Q431, 524	: 2SC1740S	L430	: LAU150J
Q456, 496, 502, 511,		L432	: LAU430J
Q523, 540, 607, 611	: 2SA1037K	L433, 601	: LAU470J
Q522, 530, 531, 612, 630	: DTC124EK	L434, 496, 530, 603	: LAU220J
Q532	: 2SA933S	L441	: LAU270J

B  
C  
D  
E  
F






3.3 MAIN ASSEMBLY (2/2) AND AUDIO ASSEMBLY


MAIN ASSEMBLY (2/2) - FTS SECTION

AUDIO ASSEMBLY

CLD-1700 ONLY

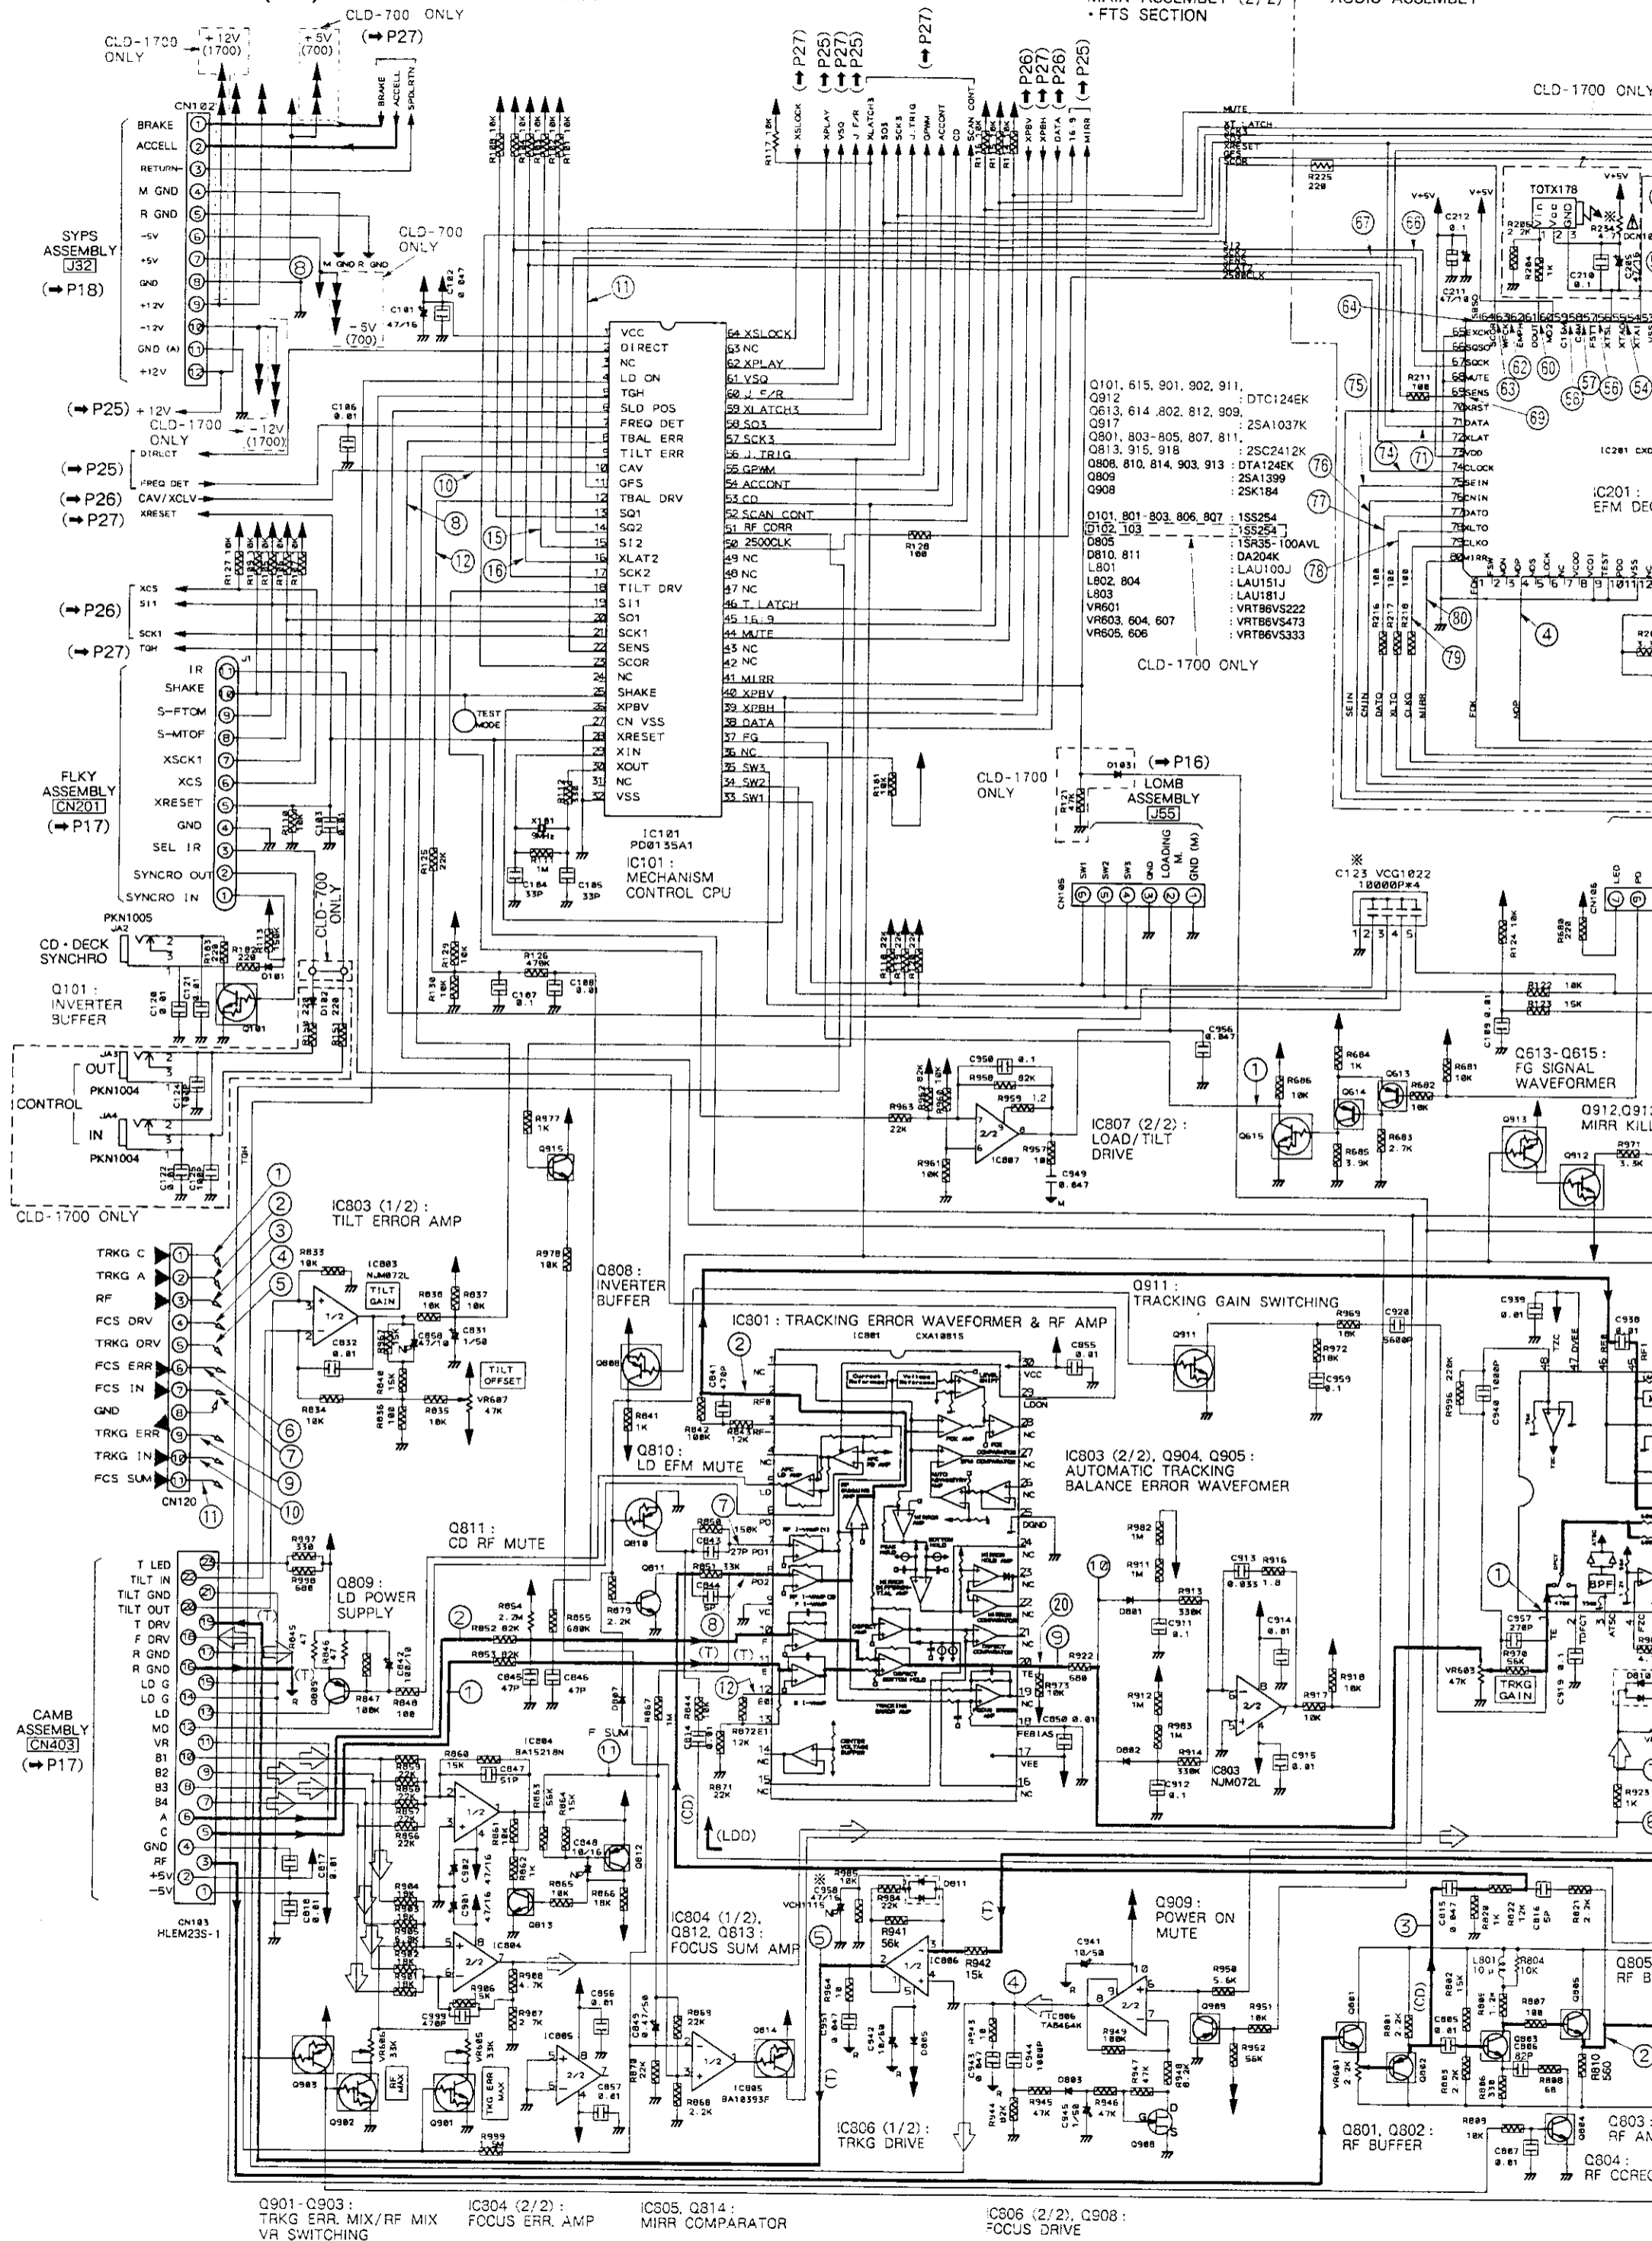

Q901-Q903: TRKG ERR. MIX/RF MIX VR SWITCHING  
 IC804 (2/2): FOCUS ERR. AMP  
 IC805, Q814: MIRR COMPARATOR  
 IC806 (2/2), Q908: FOCUS DRIVE

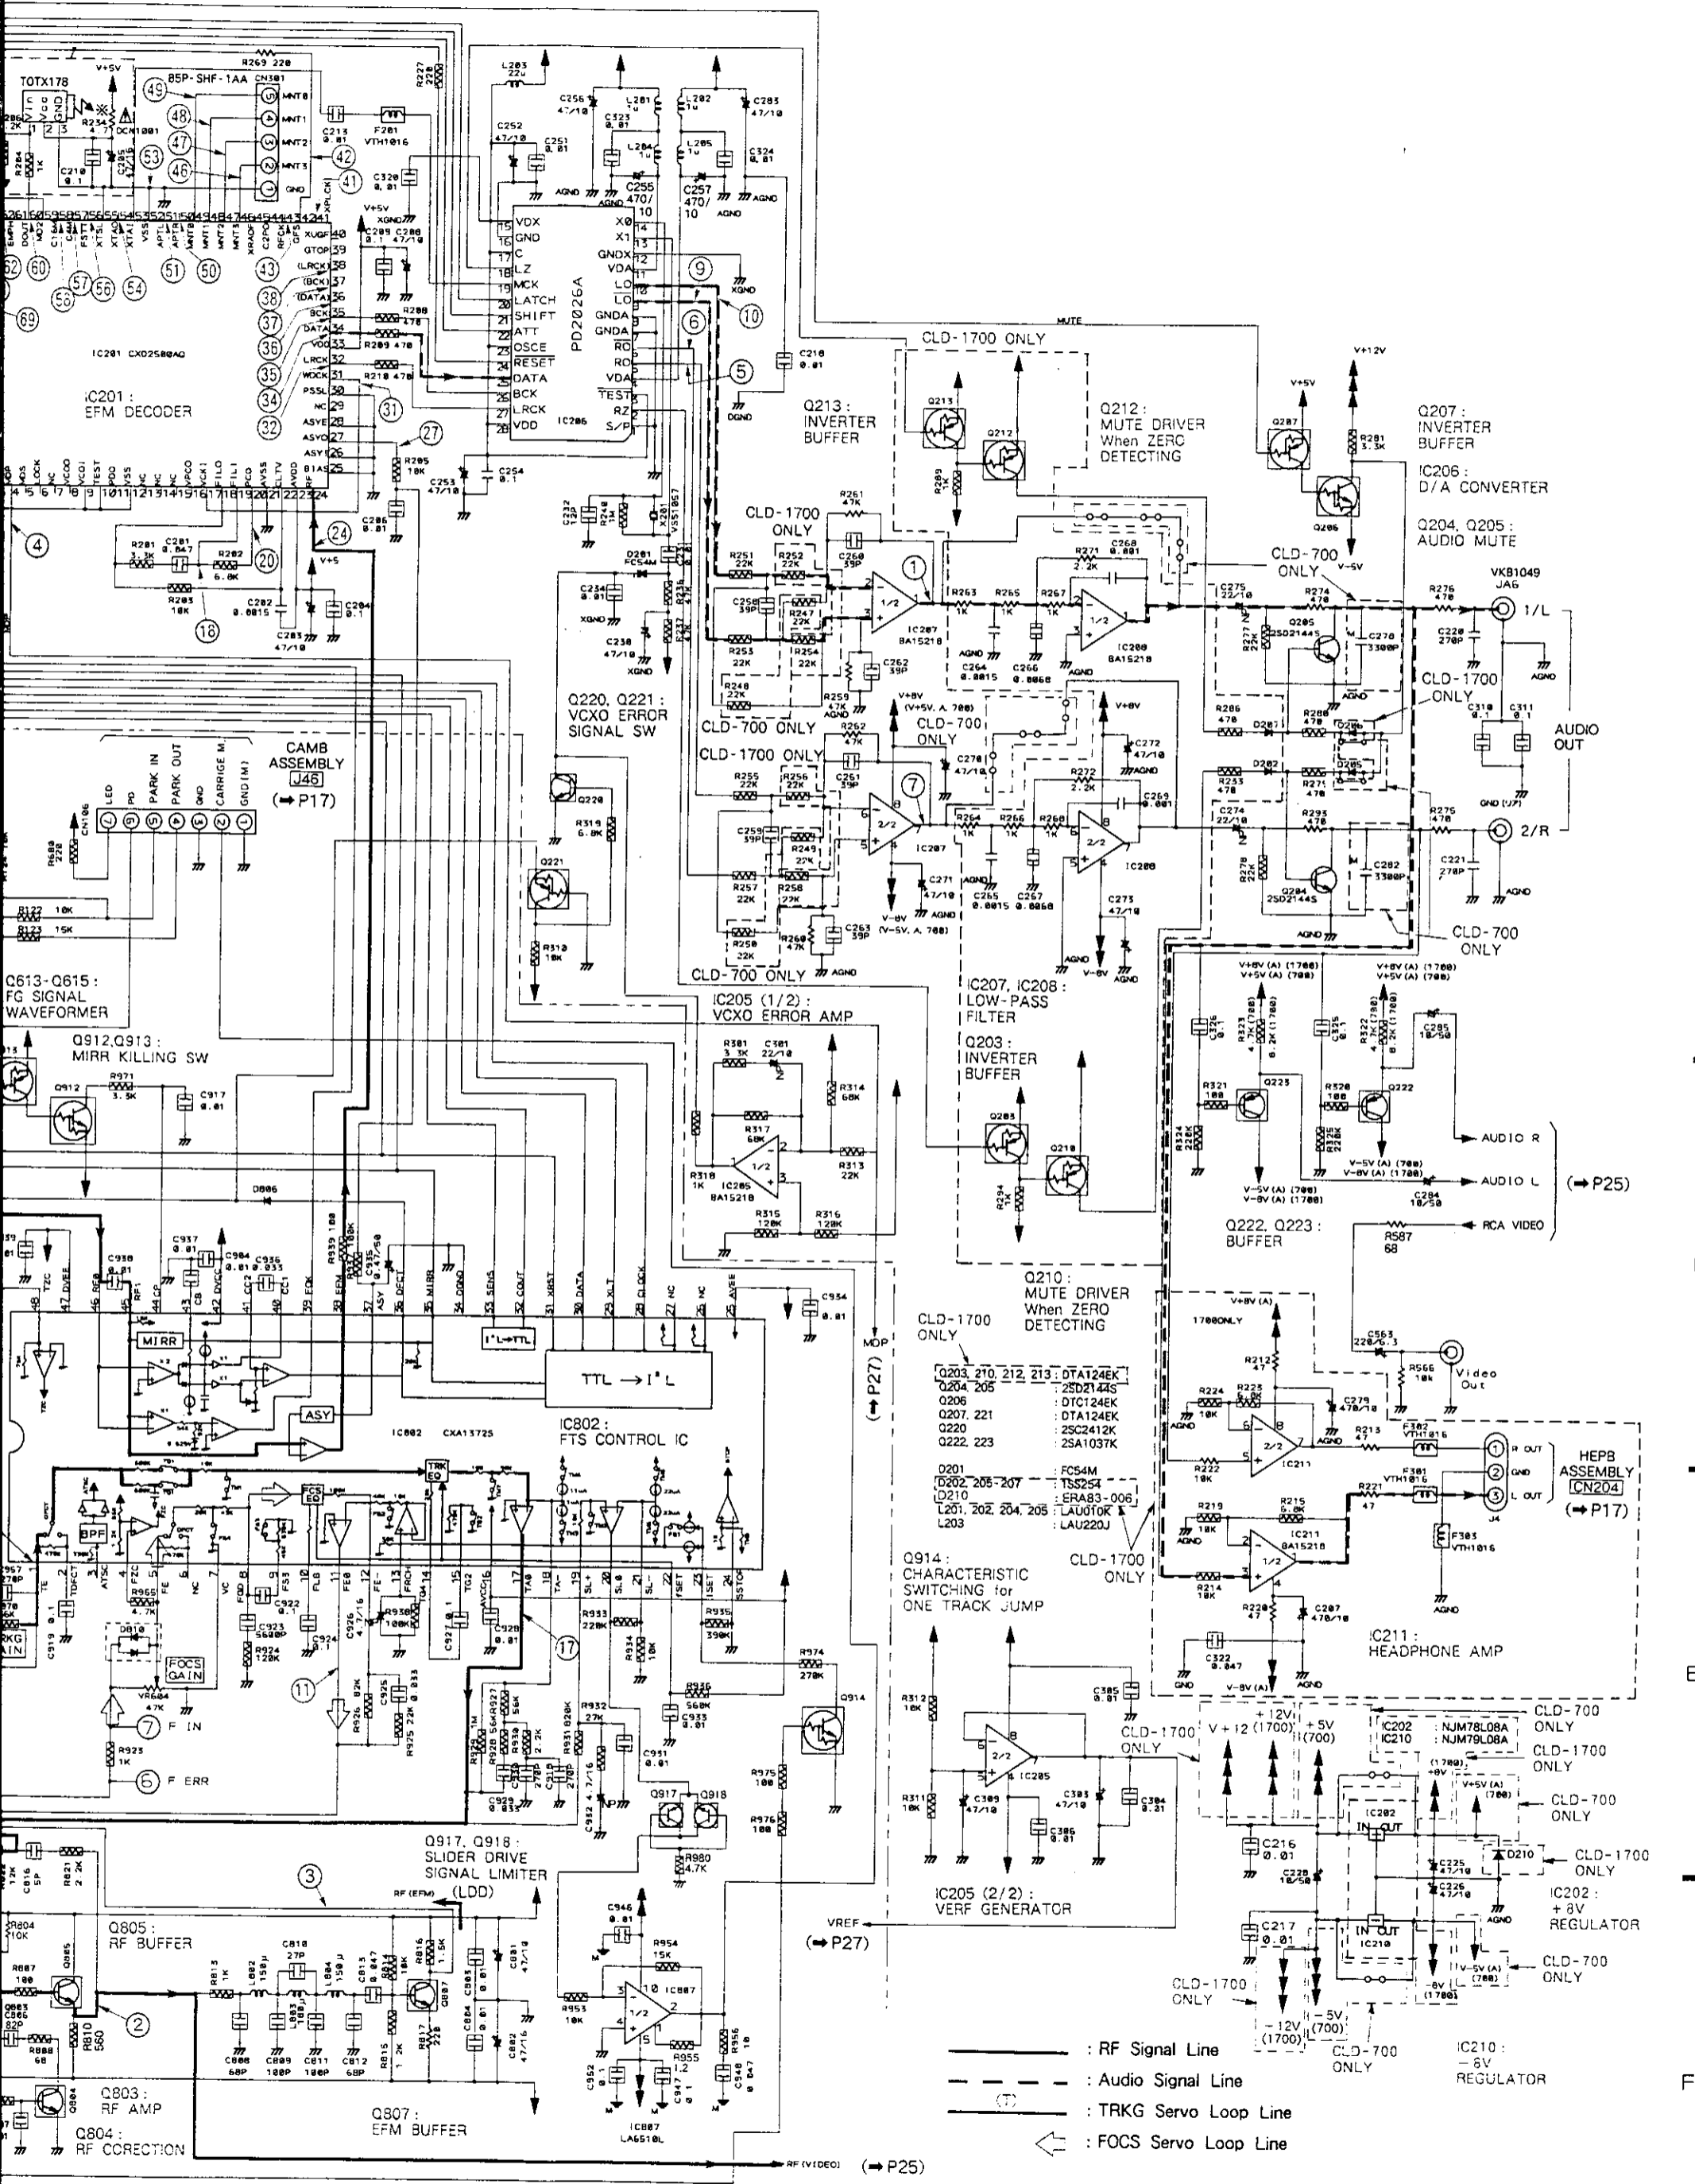

- Q203, 210, 212, 213 : DTA124EK
- Q204, 205 : 2SD2144S
- Q206 : DTC124EK
- Q207, 221 : DTA124EK
- Q220 : 2SC2412K
- Q222, 223 : 2SA1037K

- Q201 : FCS4M
- Q202, 205-207 : TSS254
- Q210 : ERA83-006
- L201, 202, 204, 205 : LAU010K
- L203 : LAU220J


- IC202 : NJM78L08A
- IC210 : NJM79L08A

- : RF Signal Line
- - - : Audio Signal Line
- · · : TRKG Servo Loop Line
- · - : FOCUS Servo Loop Line

B  
C  
D  
E  
F

**WAVEFORMS AND VOLTAGES  
VIDEO AND TBC SECTION**

Note: (No.) in the table correspond to the pin number.

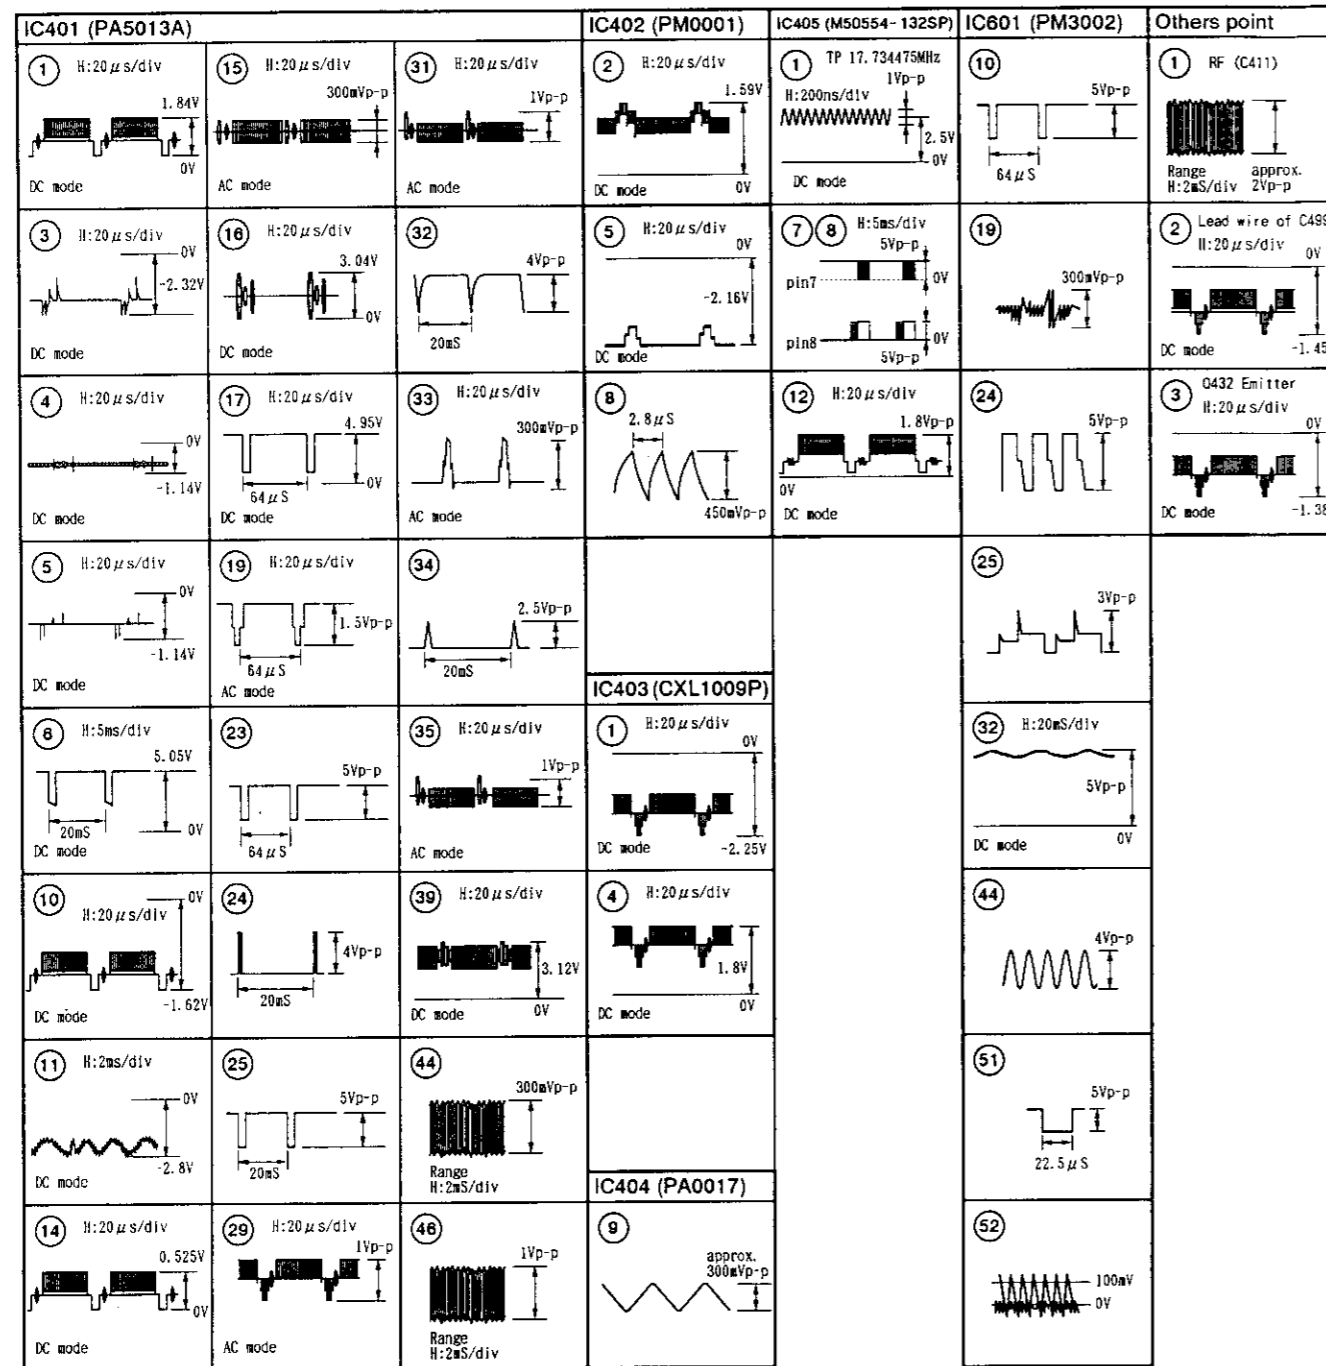


Note: Waveforms and voltages are at the PLAY mode.

**IC405 (M50554-132SP)**


Pin No.	Voltage	Pin No.	Voltage	Pin No.	Voltage	Pin No.	Voltage
1	0	9	-	17	0.8	25	-
2	5	10	5	18	-	26	-
3	5	11	0	19	0	27	-
4	2.4	12	1.1	20	0	28	2.3
5	2.4	13	1.1	21	-	29	2.3
6	0	14	-	22	-	30	-
7	5	15	1.8	23	-	31	4.8
8	0.4	16	0.6	24	-	32	-

**FTS AND AUDIO SECTION**

Note: (No.) in the table correspond to the pin number.

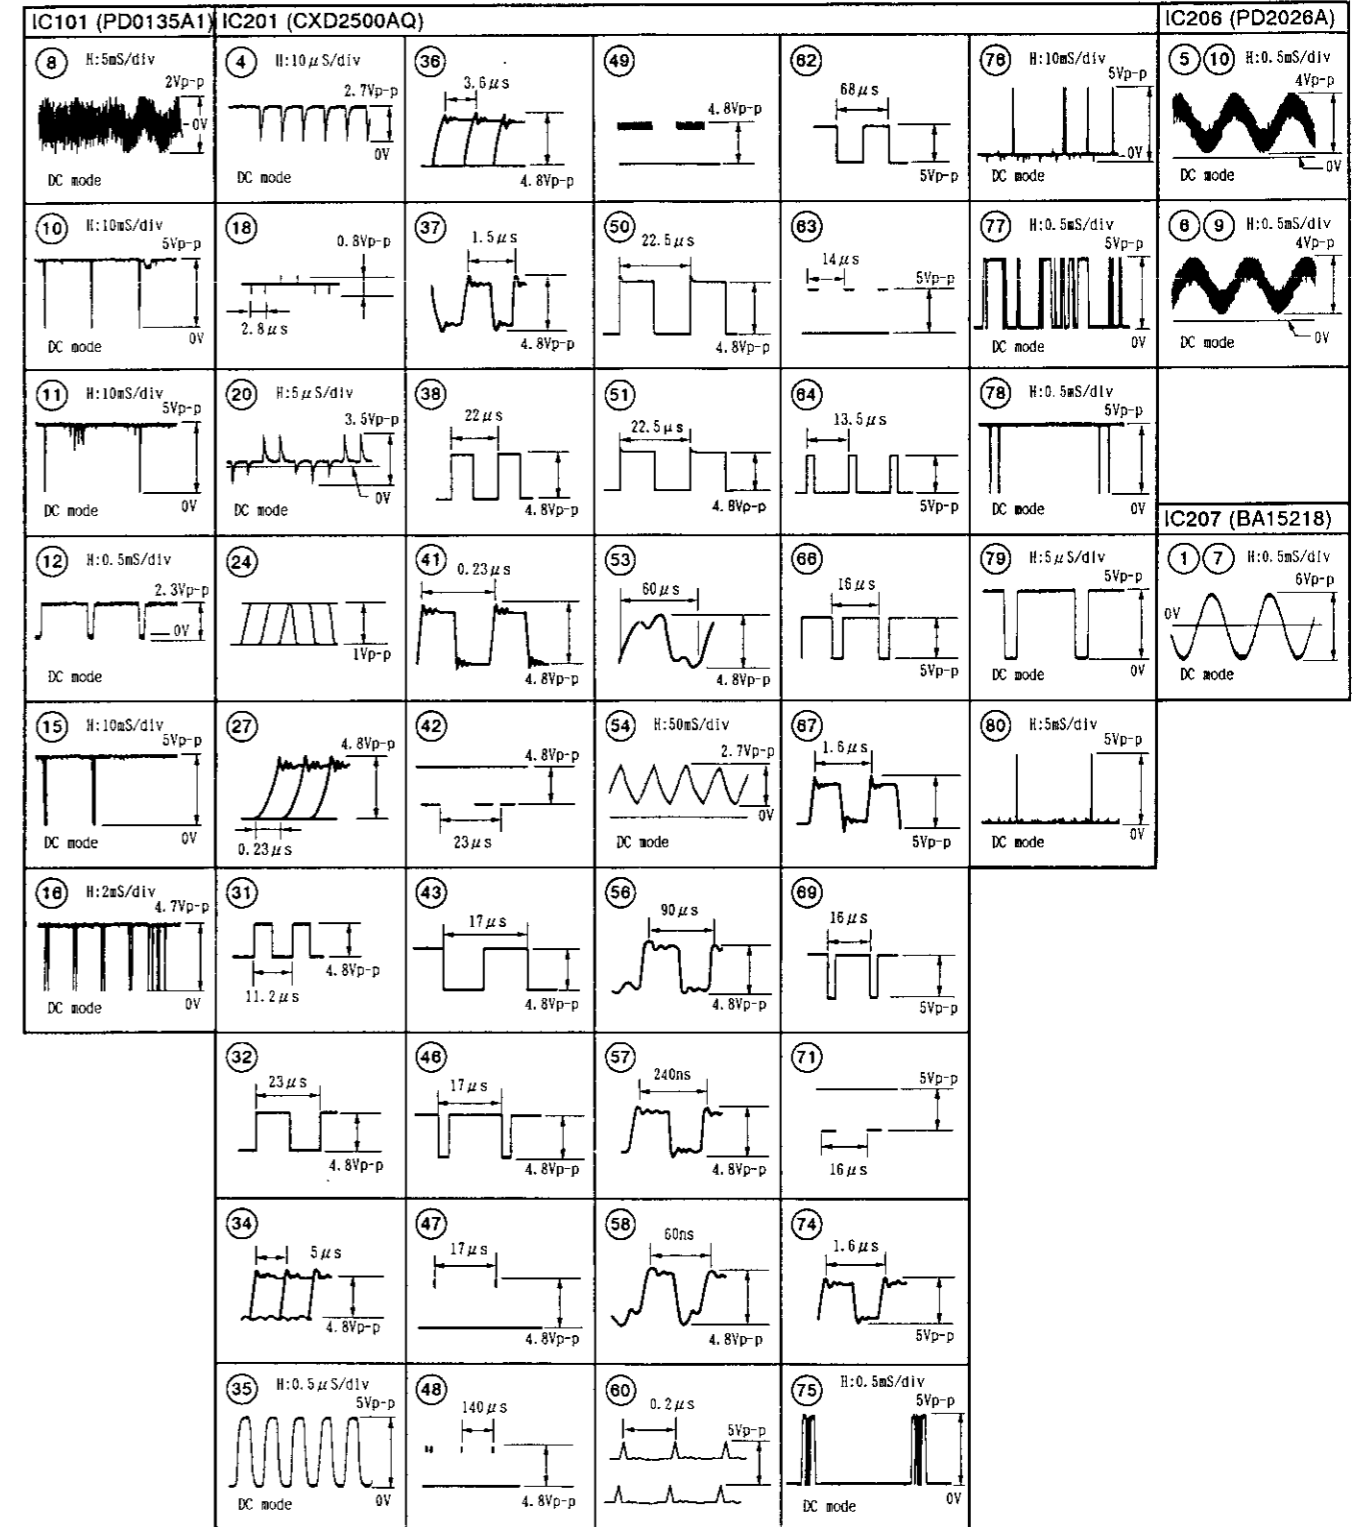

Note: (No.) in the table correspond to the pin number.

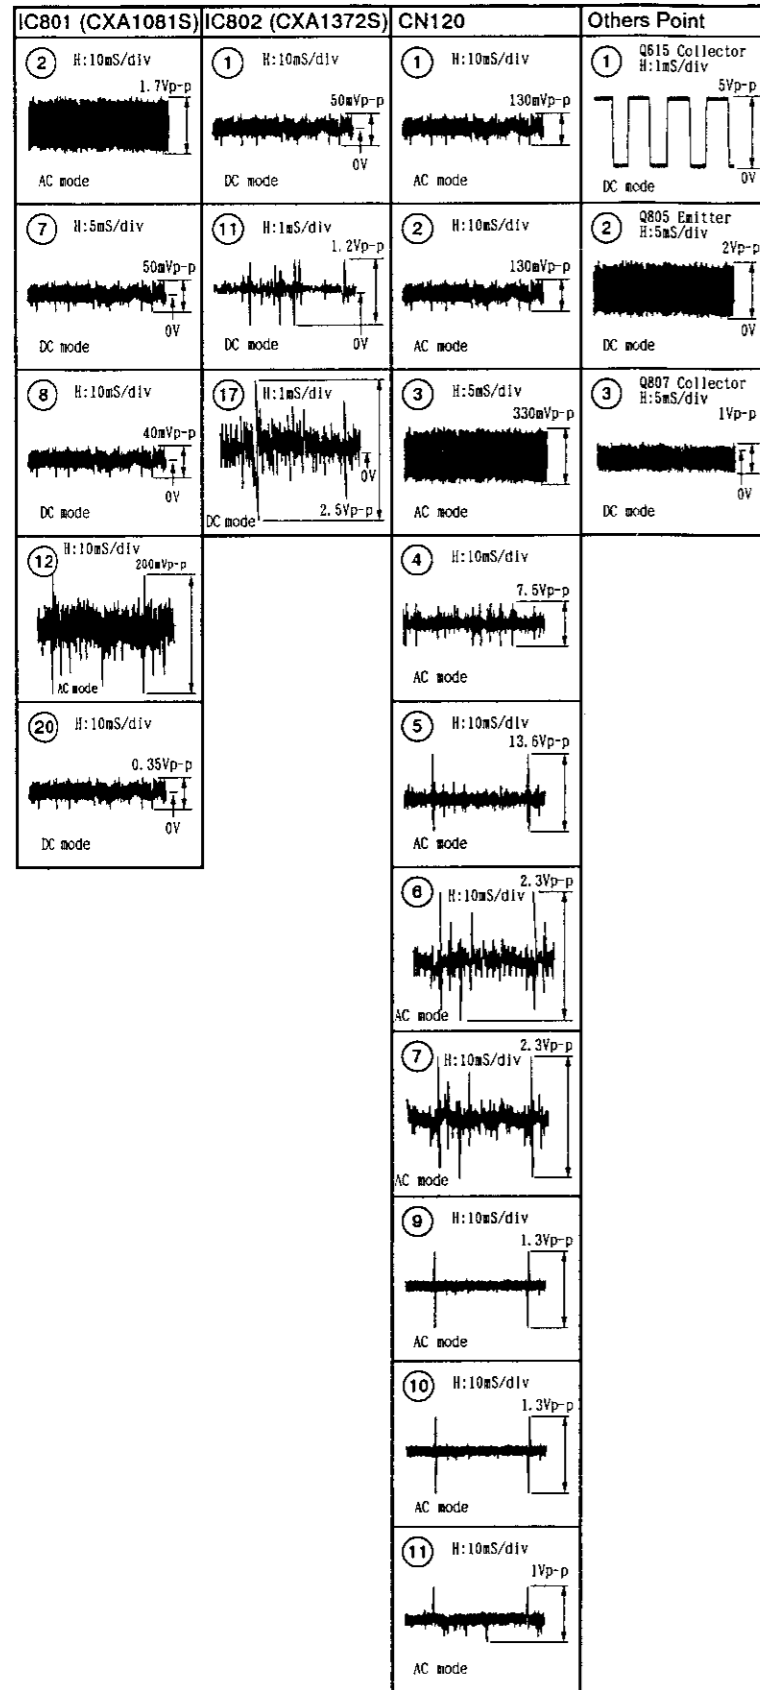


Note : Waveforms and voltages are at the PLAY mode.

IC201 (CXD2500AQ)

Pin No.	Voltage	Pin No.	Voltage	Pin No.	Voltage	Pin No.	Voltage	Pin No.	Voltage
1	4.8	17	0	33	4.8	49	*	65	0
2	0	18	*	34	*	50	*	66	*
3	0	19	2.4	35	*	51	*	67	*
4	*	20	*	36	*	52	0	68	0
5	0	21	0	37	*	53	*	69	*
6	4.8	22	2.3	38	*	54	*	70	5
7	-	23	4.8	39	0	55	0	71	*
8	4.8	24	*	40	4.8	56	*	72	5
9	0	25	0	41	*	57	*	73	5
10	0	26	0	42	*	58	*	74	*
11	0	27	*	43	*	59	5	75	*
12	0	28	0	44	0	60	*	76	*
13	0	29	0	45	4.8	61	5	77	*
14	0	30	0	46	*	62	*	78	*
15	0	31	*	47	*	63	*	79	*
16	4.8	32	*	48	*	64	*	80	*

\* : Refer to waveform

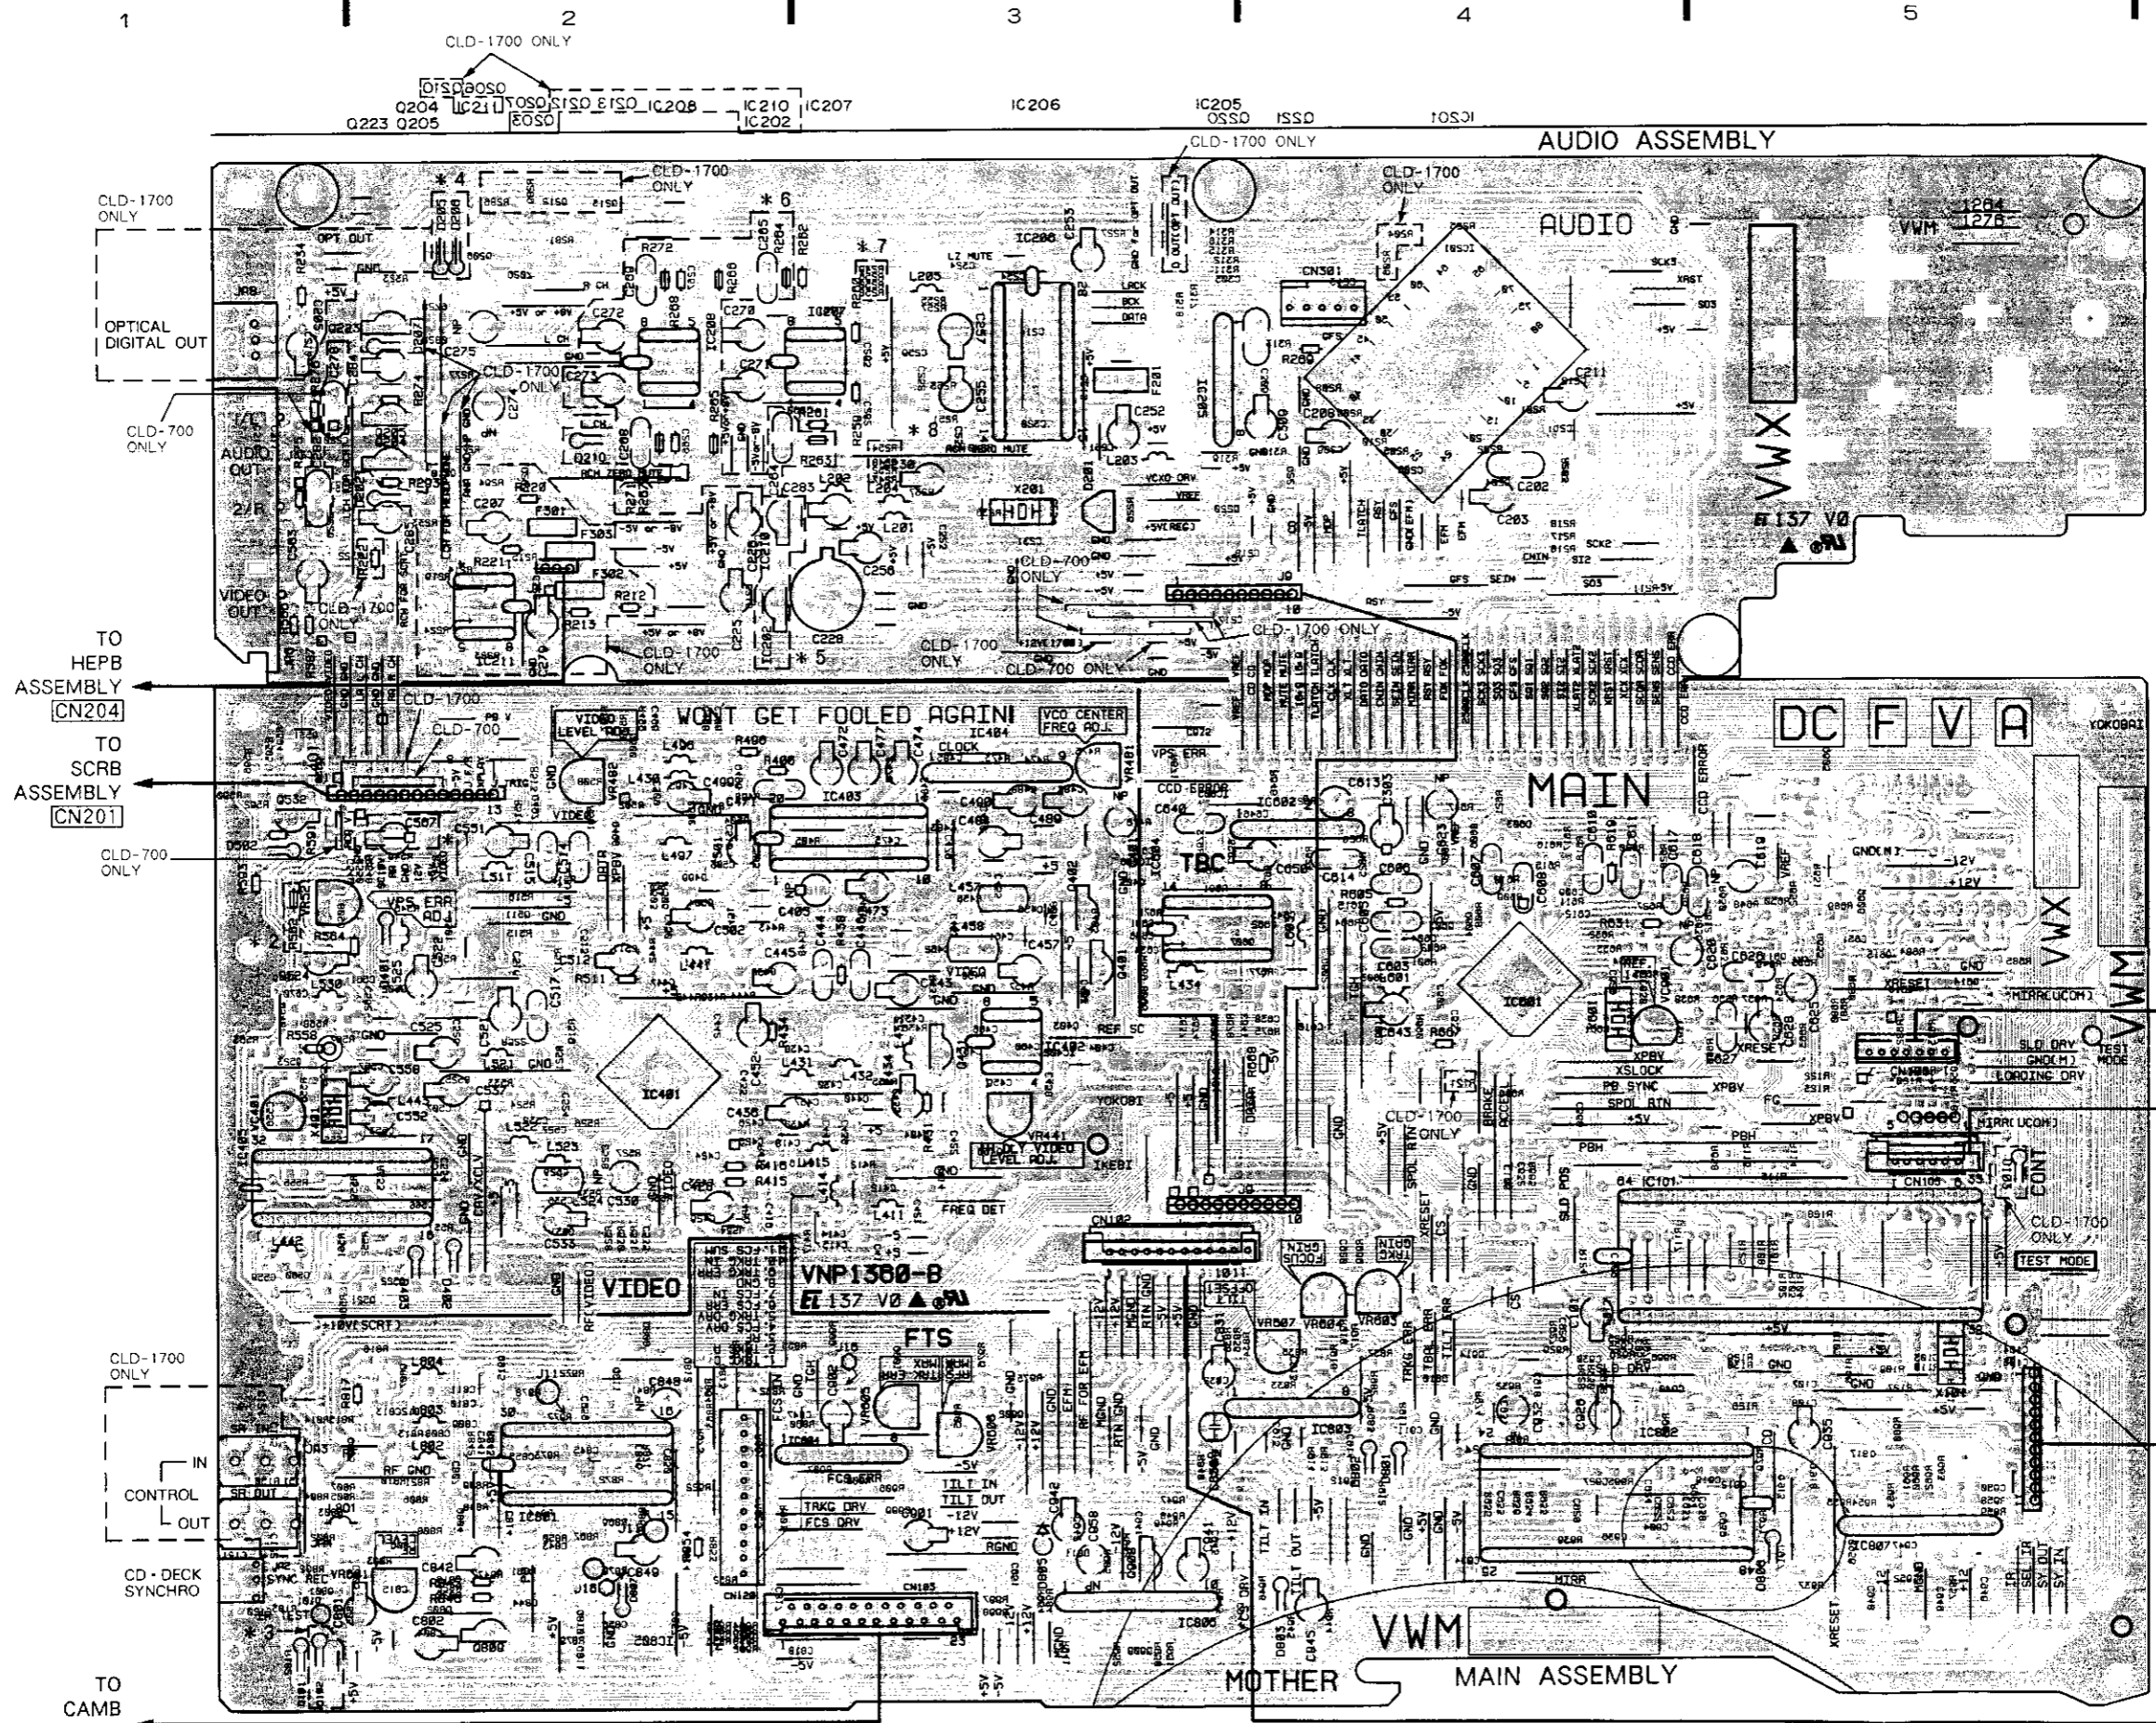

\* 1

CLD-1700	C567
CLD-700	JUMPER

\* 2

CLD-1700	JUMPER
CLD-700	R562

\* 3

	D102	JUMPER
CLD-1700	USED	OPEN
CLD-700	OPEN	USED

\* 4

CLD-1700	D205, 206
CLD-700	JUMPER

\* 5

	IC202, 210	JUMPER
CLD-1700	USED	OPEN
CLD-700	OPEN	USED

\* 6

CLD-1700	R263-266, 271, 272	OTHER PARTS
CLD-700	JUMPER	OPEN

\* 7

CLD-1700	R256, 258	OPEN
CLD-700	OPEN	R249, 250

\* 8

CLD-1700	R252, 254	OPEN
CLD-700	OPEN	R247, 248

TO CAMB ASSEMBLY [J46]

TO LOMB ASSEMBLY [J55]

TO FLKY ASSEMBLY [CN201]

TO HEPB ASSEMBLY [CN204]

TO SCRB ASSEMBLY [CN201]

TO CAMB ASSEMBLY [CN403]


TO SYPS ASSEMBLY [J32]

VC401	VR521	VR601	VR482	VR605	VR606	VR441	VR481	VR607	VR604	VR603	VC901	
Q532	Q809	IC801	IC801	IC804	IC403	IC404	IC402	IC602	IC603	IC802	IC101	IC807
IC405	Q524	IC801	IC801	IC804	IC403	IC404	IC402	IC602	IC603	IC802	IC101	IC807
Q532	Q809	IC801	IC801	IC804	IC403	IC404	IC402	IC602	IC603	IC802	IC101	IC807
Q532	Q809	IC801	IC801	IC804	IC403	IC404	IC402	IC602	IC603	IC802	IC101	IC807







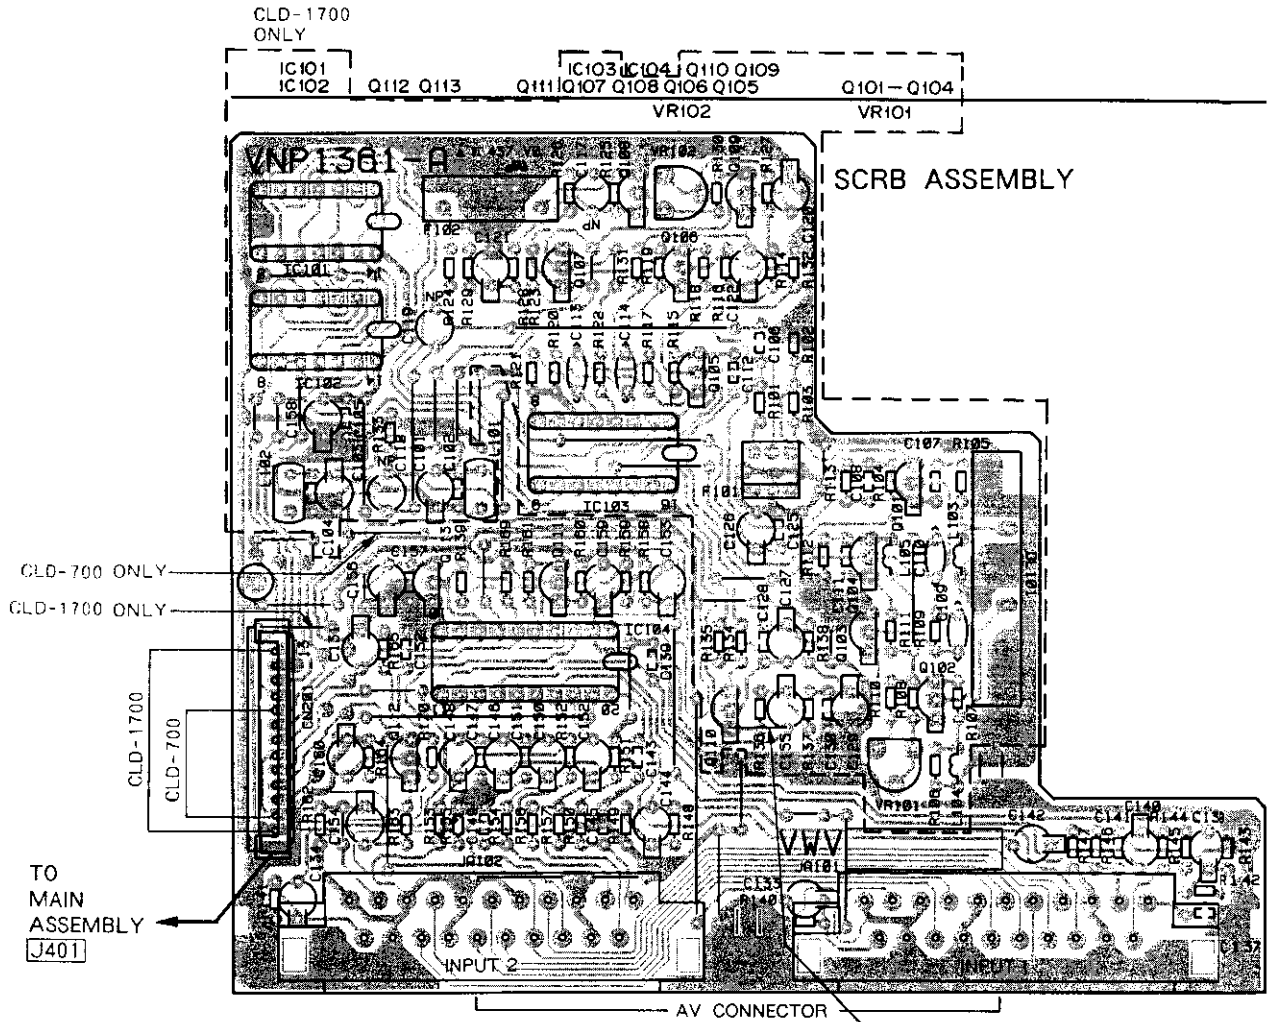

**SCRIB ASSEMBLY**

Note: (No.) in the table correspond to the pin number.

IC103 (BU4053B)		Others Point	
<p>(3) (5) H:5mS/div 320mVp-p</p> <p>pin3  0V</p> <p>pin5  0V</p> <p>DC mode 280mVp-p</p>	<p>(12) (13) H:5mS/div 280mVp-p</p> <p>pin12  0V</p> <p>pin13  0V</p> <p>DC mode 450mVp-p</p>	<p>(6) Q109 Emitter 1.4Vp-p</p> <p> 0V</p> <p>DC mode H:20μS/div</p>	<p>(7) Q101 Emitter H:20μS/div</p> <p> 0V</p> <p>DC mode 280mVp-p</p>





## 4. PCB PARTS LIST

**NOTES:**

- Parts marked by "NSP" are generally unavailable because they are not in our Master Spare Parts List.
- The  $\Delta$  mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
- Parts marked by "⊙" are not always kept in stock. Their delivery time may be longer than usual or they may be unavailable.
- When ordering resistors, first convert resistance values into code form as shown in the following examples.  
 Ex.1 When there are 2 effective digits(any digit apart from 0), such as 560 ohm and 47k ohm(tolerance is shown by J=5%, and K=10%).  
 $560 \Omega \rightarrow 56 \times 10^1 \rightarrow 561$ ..... RD1/8PM  $\begin{matrix} 5 & 6 & 1 \\ | & | & | \\ \hline \end{matrix}$  J  
 $47k \Omega \rightarrow 47 \times 10^3 \rightarrow 473$ ..... RD1/4PS  $\begin{matrix} 4 & 7 & 3 \\ | & | & | \\ \hline \end{matrix}$  J  
 $0.5 \Omega \rightarrow 0R5$ ..... RN2H  $\begin{matrix} 0 & R & 5 \\ | & | & | \\ \hline \end{matrix}$  K  
 $1 \Omega \rightarrow 010$ ..... RS1P  $\begin{matrix} 0 & 1 & 0 \\ | & | & | \\ \hline \end{matrix}$  K  
 Ex.2 When there are 3 effective digits(such as in high precision metal film resistors).  
 $5.62k \Omega \rightarrow 562 \times 10^1 \rightarrow 5621$ ..... RN1/4PC  $\begin{matrix} 5 & 6 & 2 & 1 \\ | & | & | & | \\ \hline \end{matrix}$  F

Mark	No.	Description	Part No.	Mark	No.	Description	Part No.
<b>LIST OF ASSEMBLIES</b>							
⊙		MOTHER ASSEMBLY	VWM1276	<b>CAMB ASSEMBLY</b>			
NSP		└ MAIN ASSEMBLY	VWX1123	<b>SEMICONDUCTORS</b>			
NSP		└ AUDIO ASSEMBLY	VWX1124	Q10		TRANSISTOR	2SC1740S
⊙		FLKB ASSEMBLY	VWM1278	<b>RESISTORS</b>			
NSP		└ PSWB ASSEMBLY	VWG1315	R10		CARBON FILM RESISTOR	RD1/6PM182J
NSP		└ FLKY ASSEMBLY	VWG1336	R11		CARBON FILM RESISTOR	RD1/6PM470J
NSP		└ HEPB ASSEMBLY	VWV1254	<b>OTHERS</b>			
⊙		SYPS ASSEMBLY	VWR1146	CN401		CONNECTOR (23P)	VKN1073
⊙		SCRB ASSEMBLY	VWV1248	CN403		CONNECTOR (23P)	HLEM23R-1
⊙		MACB ASSEMBLY	VWM1250	<b>LOMB ASSEMBLY</b>			
NSP		└ FG ASSEMBLY	VWG1304	<b>CAPACITOR</b>			
NSP		└ PKSB ASSEMBLY	VWG1305	C1		CERAMIC CAPACITOR	CGCYX473M25
NSP		└ CAMB ASSEMBLY	VWG1306	<b>PSWB ASSEMBLY</b>			
NSP		└ LOSB ASSEMBLY	VWG1307	<b>SEMICONDUCTORS</b>			
NSP		└ LOMB ASSEMBLY	VWG1308	Q204		TRANSISTOR	DTC124ES
<b>FG ASSEMBLY</b>							
<b>SEMICONDUCTOR</b>							
	D1		GP1S51	D211		LED	SLH34VCF04
<b>PKSB ASSEMBLY</b>							
<b>SWITCHES</b>							
	S4, 5	PUSH SWITCH	DSG1015	<b>SWITCH</b>			
				S224		SWITCH	RSG1030
<b>LOSB ASSEMBLY</b>							
<b>SWITCHES</b>							
	S1-3	PUSH SWITCH	DSG1015	<b>CAPACITOR</b>			
				C210		ELECT. CAPACITOR	CEAS100M16
<b>RESISTOR</b>							
				R227		CARBON FILM RESISTOR	RD1/6PM151J
<b>OTHERS</b>							
						REMOTE CONTROL SENSOR UNIT	GPIU58X

Mark	No.	Description	Part No.	Mark	No.	Description	Part No.
<b>FLKY ASSEMBLY</b>							
<b>SEMICONDUCTORS</b>							
	IC201	MODE CONTROL MCU	PD3214A	$\Delta$	D23	DIODE	10ELS2
	IC202	RESET IC	PST529C	$\Delta$	D24, 25	DIODE	1SR35-100AVL
	Q201	TRANSISTOR	DTC124ES	$\Delta$	D26	DIODE	10ELS2
	Q202	TRANSISTOR	DTC114EL	$\Delta$	D3, 31	DIODE	1SR35-100AVL
	Q203	TRANSISTOR	DTA144EL	$\Delta$	D32, 33	SCHOTTKY DIODE	ERA83-006
				$\Delta$	D7	ZENER DIODE	MTZJ11B
<b>COIL</b>							
				$\Delta$	L1	SPDL CHORK COIL	VTL1043
<b>CAPACITORS</b>							
				$\Delta$	C1	ELECTR. CAPACITOR (6800/16)	VCH1053
					C10	ELECT. CAPACITOR	CEAS101M50
					C11, 12	CERAMIC CAPACITOR	CKPUYF103Z25
					C13	ELECT. CAPACITOR	CEAS471M16
					C14	CERAMIC CAPACITOR	CGCYX473M25
				$\Delta$	C2	ELECTR. CAPACITOR (6800/16)	VCH1053
					C21, 22	MYLAR FILM CAPACITOR	CQMA272J50
					C23, 24	CERAMIC CAPACITOR	CGCYX473M25
					C25, 26	ELECT. CAPACITOR	CEAS2R2M50
					C27, 28	MYLAR FILM CAPACITOR	CQMA223J50
					C29	ELECT. CAPACITOR	CEAS101M50
					C3	ELECT. CAPACITOR	CEAS470M10
					C31	ELECT. CAPACITOR	CEAS471M35
					C32	ELECT. CAPACITOR	CEAS220M25
					C4, 5	ELECT. CAPACITOR	CEAS470M10
				$\Delta$	C52	CAPACITOR (CERAMIC) (0.01)	VCG-048
				$\Delta$	C6	ELECT. CAPACITOR	CEAS470M10
				$\Delta$	C7-9	CERAMIC CAPACITOR	CKPUYF223Z25
<b>RESISTORS</b>							
				$\Delta$	R23-26	CARBON FILM RESISTOR	RD1/2VM221J
				$\Delta$	R27-30	RESISTOR(27 $\Omega$ )	DCN1003
					R41	RESISTOR(4.7 $\Omega$ )	DCN1001
						OTHER RESISTORS	RD1/6PM□□□J
<b>OTHERS</b>							
		FL SPACER	VEB1125				
		LED HOLDER	VNL1522				
	V201	FL TUBE	VAW1026				
	X201	CERAMIC RESONATOR	EFOGC8004T4				
<b>SYPS ASSEMBLY</b>							
<b>SEMICONDUCTORS</b>							
$\Delta$	IC1	REGULATOR IC	NJM2930L05				
$\Delta$	IC2	LINEAR IC	NJM4558D				
$\Delta$	IC201, 202	IC PROTECTOR	ICP-N20				
$\Delta$	IC210	IC PROTECTOR	ICP-N20				
$\Delta$	IC211	IC PROTECTOR	ICP-N15				
$\Delta$	IC41	REGULATOR IC	NJM78M12FA				
$\Delta$	Q1, 2	TRANSISTOR	2SB1185				
	Q21	TRANSISTOR	2SC1740S				
	Q22, 23	TRANSISTOR	2SA933S				
	Q24	TRANSISTOR	2SC1740S				
$\Delta$	Q25	TRANSISTOR	2SB1134				
$\Delta$	Q26	TRANSISTOR	2SD1667				
$\Delta$	Q27	TRANSISTOR	2SB1134				
$\Delta$	Q28	TRANSISTOR	2SD1667				
$\Delta$	Q3	TRANSISTOR	2SD1762				
	Q4	TRANSISTOR	2SC1740S				
	Q5	TRANSISTOR	2SA933S				
$\Delta$	D1		S2VB20-F1				
$\Delta$	D2	DIODE	1SR35-100AVL				
$\Delta$	D21, 22	DIODE	1SS254				
<b>SCRB ASSEMBLY</b>							
<b>SEMICONDUCTORS</b>							
	IC101	LOGIC IC	TC74HC74AP				
	IC102	LOGIC IC	TC74HC00AP				
	IC103	LOGIC IC	BU4053B				
	IC104	IC	LA7955				
	Q101-112	TRANSISTOR	2SC1740S				
	Q113	TRANSISTOR	DTC124ES				
<b>COILS AND FILTERS</b>							
	L101, 102	RADIAL INDUCTOR	LFA120K				
	L103, 104	AXIAL INDUCTOR	LAU8R2J				
	L105	AXIAL INDUCTOR	LAU330J				
	F101	FILTER(4.43MHz)	VTF1034				
	F102	FILTER(3.2MHz)	VTF1011				
<b>CAPACITORS</b>							
	C101	ELECT. CAPACITOR	CEAS470M10				
	C102	CERAMIC CAPACITOR	CKPUY103N16				
	C103	ELECT. CAPACITOR	CEAS470M10				
	C104-108	CERAMIC CAPACITOR	CKPUY103N16				
	C109	CERAMIC CAPACITOR	CCCCH100D50				

Mark	No.	Description	Part No.
	C110	CERAMIC CAPACITOR	CCCCH270J50
	C111, 112	CERAMIC CAPACITOR	CKPUYY103N16
	C113, 114	CERAMIC CAPACITOR	CKCYB681K50
	C117-119	ELECT. CAPACITOR	CEANP220M10
	C120-122	ELECT. CAPACITOR	CEAS470M10
	C125	CERAMIC CAPACITOR	CKPUYY103N16
	C126, 127	ELECT. CAPACITOR	CEAS470M10
	C128	CERAMIC CAPACITOR	CKPUYY103N16
	C129	ELECT. CAPACITOR	CEAS470M10
	C130	CERAMIC CAPACITOR	CKPUYY103N16
	C131	ELECT. CAPACITOR	CEAS100M50
	C132	CERAMIC CAPACITOR	CKPUYY103N16
	C133, 134	ELECT. CAPACITOR	CEAS100M50
	C137	AXIAL CAPACITOR	CKPUYB101K50
	C138	ELECT. CAPACITOR	CEAS100M50
	C139	AXIAL CAPACITOR	CKPUYB221K50
	C140	ELECT. CAPACITOR	CEAS100M50
	C141	AXIAL CAPACITOR	CKPUYB101K50
	C142	ELECT. CAPACITOR	CEAS100M50
	C143	AXIAL CAPACITOR	CKPUYB221K50
	C144	ELECT. CAPACITOR	CEAS100M50
	C145	AXIAL CAPACITOR	CKPUYB101K50
	C146	ELECT. CAPACITOR	CEAS100M50
	C147	AXIAL CAPACITOR	CKPUYB221K50
	C148	ELECT. CAPACITOR	CEAS100M50
	C149	AXIAL CAPACITOR	CKPUYB101K50
	C150	ELECT. CAPACITOR	CEAS100M50
	C151	AXIAL CAPACITOR	CKPUYB221K50
	C152	ELECT. CAPACITOR	CEAS100M50
	C153, 154	ELECT. CAPACITOR	CEAS221M10
	C155	ELECT. CAPACITOR	CEAS100M50
	C156	ELECT. CAPACITOR	CEAS470M10
	C157	CERAMIC CAPACITOR	CKPUYY103N16
	C158	ELECT. CAPACITOR	CEAS470M10
	C159, 160	ELECT. CAPACITOR	CEAS470M16

**RESISTORS**

	VR101	SEMI-FIXED VR (470Ω)	VRTB6VS471
	VR102	SEMI-FIXED VR (4.7kΩ)	VRTB6VS472
△	R169, 170	RESISTOR (27Ω)	DCN1003
		OTHER RESISTORS	RD1/6PM□□□J

**OTHERS**

	DL101	DELAY LINE	DTF1033
	JA101, 102	CONNECTOR	VKB1037

**HEPB ASSEMBLY**

**FILTERS**

	F201-203	COIL	VTH1016
--	----------	------	---------

**CAPACITORS**

	C221	CERAMIC CAPACITOR	CGCYF473Z25
	C222, 223	AXIAL CAPACITOR	CKPUYB101K50

**RESISTOR**

	VR201	VR	VCS1015
--	-------	----	---------

Mark	No.	Description	Part No.
<b>OTHERS</b>			
	JA201	JACK (PHONES)	RKN1002

**MAIN ASSEMBLY**

**SEMICONDUCTORS**

	IC101	MECHANISM CONT. MCU	PD0135A1
	IC401	VIDEO IC	PA5013A
	IC402	CDD DELAY LINE	PM0001
	IC403	IC	CXL1009P
	IC404	IC	PA0017
	IC405	CHARACTER IC	M50554-132SP
	IC601	TBC IC	PM3002
	IC602	IC	BA15218N
	IC604	LOGIC IC	TC74HC86AP
	IC605	LOGIC IC	TC4S66F
	IC606	LOGIC IC	TC7SU04F
	IC801	PRE AMP IC	CXA1081S
	IC802	SERVO IC	CXA1372S
	IC803	OP-AMP IC	NJM072L
	IC804	IC	BA15218N
	IC805	COMPARATOR	BA10393F
	IC806	OP AMP	TA8464K
	IC807	POWER OP AMP	LA6510L
	Q101	DIGITAL TRANSISTOR	DTQ24EK
	Q401	TRANSISTOR	2SA1237X
	Q402	TRANSISTOR	2SA1858X
	Q403	DIGITAL TRANSISTOR	DTA124EK
	Q404	CHIP TRANSISTOR	2SC2412K
	Q431	TRANSISTOR	2SC1740S
	Q432	CHIP TRANSISTOR	2SC2412K
	Q456, 496	CHIP TRANSISTOR	2SA1037K
	Q497-501	CHIP TRANSISTOR	2SC2412K
	Q502, 511	CHIP TRANSISTOR	2SA1037K
	Q521	DIGITAL TRANSISTOR	DTA124EK
	Q522	DIGITAL TRANSISTOR	DTQ24EK
	Q523	CHIP TRANSISTOR	2SA1037K
	Q524	TRANSISTOR	2SC1740S
	Q530, 531	DIGITAL TRANSISTOR	DTQ24EK
	Q532	TRANSISTOR	2SA933S
	Q540	CHIP TRANSISTOR	2SA1037K
	Q601-605	CHIP TRANSISTOR	2SC2412K
	Q606	DIGITAL TRANSISTOR	DTA124EK
	Q607	CHIP TRANSISTOR	2SA1037K
	Q608, 609	CHIP TRANSISTOR	2SC2412K
	Q611	CHIP TRANSISTOR	2SA1037K
	Q612	DIGITAL TRANSISTOR	DTQ24EK
	Q613, 614	CHIP TRANSISTOR	2SA1037K
	Q615	DIGITAL TRANSISTOR	DTQ24EK
	Q801	CHIP TRANSISTOR	2SC2412K
	Q802	CHIP TRANSISTOR	2SA1037K
	Q803-805	CHIP TRANSISTOR	2SC2412K
	Q807	CHIP TRANSISTOR	2SC2412K
	Q808	DIGITAL TRANSISTOR	DTA124EK
	Q809	TRANSISTOR	2SA399
	Q810	DIGITAL TRANSISTOR	DTA124EK

Mark	No.	Description	Part No.
Q811		CHIP TRANSISTOR	2SC2412K
Q812		CHIP TRANSISTOR	2SA1037K
Q813		CHIP TRANSISTOR	2SC2412K
Q814		DIGITAL TRANSISTOR	DTA124EK
Q901.902		DIGITAL TRANSISTOR	DTC124EK
Q903		DIGITAL TRANSISTOR	DTA124EK
Q908		N-FET	2SK184
Q909		CHIP TRANSISTOR	2SA1037K
Q911.912		DIGITAL TRANSISTOR	DTC124EK
Q913		DIGITAL TRANSISTOR	DTA124EK
Q914		DIGITAL TRANSISTOR	DTC124EK
Q915		CHIP TRANSISTOR	2SC2412K
Q917		CHIP TRANSISTOR	2SA1037K
Q918		CHIP TRANSISTOR	2SC2412K
D101-103		DIODE	1SS254
D401-403		DIODE	1SS254
D502		DIODE	1SS254
D603		DIODE	DA204K
D801-803		DIODE	1SS254
D805		DIODE	1SR35-100AVL
D806.807		DIODE	1SS254
D810.811		DIODE	DA204K

**COILS**

L411		AXIAL INDUCTOR	LAU680J
L414.415		AXIAL INDUCTOR	LAU120J
L430		AXIAL INDUCTOR	LAU150J
L431		AXIAL INDUCTOR	LAU680J
L432		AXIAL INDUCTOR	LAU430J
L433		AXIAL INDUCTOR	LAU470J
L434		AXIAL INDUCTOR	LAU220J
L441		AXIAL INDUCTOR	LAU270J
L442		AXIAL INDUCTOR	LAU390J
L443		AXIAL INDUCTOR	LAU120J
L457		RADIAL INDUCTOR	LFA561J
L458		RADIAL INDUCTOR	LFA221J
L496		AXIAL INDUCTOR	LAU220J
L497		AXIAL INDUCTOR	LAU151J
L511		AXIAL INDUCTOR	LAU820J
L521		AXIAL INDUCTOR	LAU120J
L522		AXIAL INDUCTOR	LAU560J
L523		AXIAL INDUCTOR	LAU390J
L524		RADIAL INDUCTOR	LFA561J
L525		AXIAL INDUCTOR	LAU330J
L530		AXIAL INDUCTOR	LAU220J
L601		AXIAL INDUCTOR	LAU470J
L603		AXIAL INDUCTOR	LAU220J
L801		AXIAL INDUCTOR	LAU100J
L802		AXIAL INDUCTOR	LAU151J
L803		AXIAL INDUCTOR	LAU181J
L804		AXIAL INDUCTOR	LAU151J

**CAPACITORS**

VC401.901		VARIABLE CAPACITOR(20P)	VCM-008
C101		ELECT. CAPACITOR	CEAS470M16
C102		CERAMIC CAPACITOR	CKSQYF473Z25
C103		CHIP CAPACITOR	CKSQYF103Z50
C104.105		CHIP CAPACITOR	CCSQCH330J50

Mark	No.	Description	Part No.
C106		CHIP CAPACITOR	CKSQYF103Z50
C107		CERAMIC CAPACITOR	CKSQYF104Z25
C108.109		CHIP CAPACITOR	CKSQYF103Z50
C120-122		CHIP CAPACITOR	CKSQYF103Z50
C123		CAPACITOR ARRAY (100P×4)	VCG1022
C124.125		CHIP CAPACITOR	CCSQCH101J50
C401		ELECT. CAPACITOR	CEANP2R2M50
C403.404		CERAMIC CAPACITOR	CKSQYF104Z25
C405		ELECT. CAPACITOR	CEANP2R2M50
C407.408		CERAMIC CAPACITOR	CKSQYF473Z25
C411.412		CHIP CAPACITOR	CCSQCH820J50
C414		CHIP CAPACITOR	CKSQYF103Z50
C415		CHIP CAPACITOR	CCSQCH100D50
C416		CHIP CAPACITOR	CCSQCH330J50
C417		CHIP CAPACITOR	CCSQCH100D50
C418		CHIP CAPACITOR	CKSQYF103Z50
C419		CHIP CAPACITOR	CCSQCH101J50
C421.422		CHIP CAPACITOR	CKSQYF103Z50
C423.424		CHIP CAPACITOR	CCSQCH180J50
C425.426		CHIP CAPACITOR	CKSQYF103Z50
C427		CERAMIC CAPACITOR	CKSQYF473Z25
C428		ELECT. CAPACITOR	CEAS470M10
C429		CERAMIC CAPACITOR	CKSQYF104Z25
C430		CHIP CAPACITOR	CCSQCH120J50
C431		CHIP CAPACITOR	CCSQCH050C50
C433		CHIP CAPACITOR	CCSQCH390J50
C434		ELECT. CAPACITOR	CEAS101M10
C435		CERAMIC CAPACITOR	CKSQYF104Z25
C436		ELECT. CAPACITOR	CEAS010M50
C437		CHIP CERAMIC C.	CCSQCH220J50
C438		CHIP CAPACITOR	CCSQCH050C50
C439.440		CHIP CERAMIC C.	CCSQCH150J50
C441		CHIP CAPACITOR	CCSQCH050C50
C442		CERAMIC CAPACITOR	CKSQYF104Z25
C443		ELECT. CAPACITOR	CEJANP4R7M16
C444		MYLAR FILM CAPACITOR	QMA272J50
C445		ELECT. CAPACITOR	CEAS101M10
C446		MYLAR FILM CAPACITOR	QMA153J50
C447		CHIP CAPACITOR	CCSQCH680J50
C448		CERAMIC CAPACITOR	CKSQYF473Z25
C450		CHIP CAPACITOR	CCSQCH100D50
C451		CHIP CAPACITOR	CCSQCH270J50
C452		ELECT. CAPACITOR	CEAS470M10
C455		CHIP CAPACITOR	CCSQCH470J50
C456		CHIP CAPACITOR	CCSQCH121J50
C457		ELECT. CAPACITOR	CEAS101M10
C458-460		CHIP CAPACITOR	CKSQYF103Z50
C461		CHIP CAPACITOR	CCSQCH101J50
C462		CHIP CAPACITOR	CCSQCH330J50
C463		CHIP CERAMIC C.	CCSQCH271J50
C466.467		CERAMIC CAPACITOR	CKSQYF473Z25
C471		AUDIO FILM CAPACITOR	CFTXA224J50
C472.473		ELECT. CAPACITOR	CEAS3R3M50
C474		ELECT. CAPACITOR	CEAS470M10
C475.476		CHIP CAPACITOR	CKSQYF103Z50

Mark	No.	Description	Part No.	Mark	No.	Description	Part No.
	C477	ELECT. CAPACITOR	CEAS3R3M50		C566	CHIP CAPACITOR	CKSQYF103Z50
	C479-481	CERAMIC CAPACITOR	CKSQYF104Z25		C570	CHIP CAPACITOR	CCSQCH151J50
	C483	CERAMIC CAPACITOR	CKSQYF473Z25		C601	CERAMIC CAPACITOR	CKSQYF473Z25
	C484	ELECT. CAPACITOR	CEAS470M16		C602	CHIP CAPACITOR	CKSQYF103Z50
	C485	CHIP CERAMIC C.	CCSQCH180J50		C603	AUDIO FILM CAPACITOR	CFTXA224J50
	C486	CHIP CAPACITOR	CKSQYF103Z50		C604	CHIP CAPACITOR	CKSQYF103Z50
	C487, 488	CERAMIC CAPACITOR	CKSQYF473Z25		C605-607	AUDIO FILM CAPACITOR	CFTXA102J50
	C489, 490	ELECT. CAPACITOR	CEAS101M10		C608	AUDIO FILM CAPACITOR	CFTXA152J50
	C495	CHIP CAPACITOR	CCSQCH270J50		C609	CHIP CAPACITOR	CCSQCH820J50
	C496	CHIP CAPACITOR	CCSQCH101J50		C610	AUDIO FILM CAPACITOR	CFTXA563J50
	C498	CHIP CAPACITOR	CCSQCH820J50		C611	MYLAR FILM CAPACITOR	CQMA272J50
	C499	ELECT. CAPACITOR	CEAS470M16		C612	CHIP CAPACITOR	CCSQCH180J50
	C500	CHIP CAPACITOR	CCSQCH100D50		C613	ELECT. CAPACITOR	CEANP220M10
	C501, 502	ELECT. CAPACITOR	CEAS470M10		C614	AUDIO FILM CAPACITOR	CFTXA332J50
	C503	CERAMIC CAPACITOR	CKSQYF104Z25		C615, 616	CHIP CAPACITOR	CKSQYF103Z50
	C504	CERAMIC CAPACITOR	CKSQYF473Z25		C617	AUDIO FILM CAPACITOR	CFTXA563J50
	C505, 506	CERAMIC CAPACITOR	CKSQYF104Z25		C618	MYLAR FILM CAPACITOR	CQMA103J50
	C507, 508	CHIP CERAMIC C.	CCSQCH271J50		C619	ELECT. CAPACITOR	CEANP2R2M50
	C509	CHIP CAPACITOR	CCSQCH151J50		C620, 623	ELECT. CAPACITOR	CEANP220M10
	C510	CHIP CAPACITOR	CCSQCH270J50		C625	ELECT. CAPACITOR	CEJANP4R7M16
	C511	CERAMIC CAPACITOR	CKSQYF104Z25		C626	AUDIO FILM CAPACITOR	CFTXA332J50
	C512	ELECT. CAPACITOR	CEAS470M10		C627	MYLAR FILM CAPACITOR	CQMA222J50
	C513	CERAMIC CAPACITOR	CKSQYF104Z25		C628	ELECT. CAPACITOR	CEJANP4R7M16
	C514	AUDIO FILM CAPACITOR	CFTXA104J50		C629	CERAMIC CAPACITOR	CKSQYF473Z25
	C515	AUDIO FILM CAPACITOR	CFTXA683J50		C630	CHIP CAPACITOR	CCSQCH270J50
	C516	CHIP CERAMIC C.	CCSQCH220J50		C631	CHIP CAPACITOR	CCSQCH100D50
	C517	AUDIO FILM CAPACITOR	CFTXA683J50		C632	CHIP CAPACITOR	CCSQCH101J50
	C520	CHIP CAPACITOR	CCSQCH180J50		C633	CHIP CAPACITOR	CCSQCH180J50
	C521	ELECT. CAPACITOR	CEAS470M10		C634	CHIP CAPACITOR	CCSQCH121J50
	C522	ELECT. CAPACITOR	CEAS100M50		C635	CERAMIC CAPACITOR	CKSQYF104Z25
	C524	CHIP CAPACITOR	CCSQCH390J50		C636	CHIP CAPACITOR	CCSQCH121J50
	C525	ELECT. CAPACITOR	CEAS470M10		C637, 638	CHIP CAPACITOR	CCSQSL471J50
	C526	CERAMIC CAPACITOR	CKSQYF104Z25		C639	CHIP CERAMIC C.	CCSQCH221J50
	C527	CERAMIC CAPACITOR	CKSQYF473Z25		C640	AUDIO FILM CAPACITOR	CFTXA102J50
	C528	CHIP CAPACITOR	CCSQCH390J50		C641	CHIP CAPACITOR	CCSQCH151J50
	C529	CHIP CAPACITOR	CCSQCH180J50		C642	CHIP CAPACITOR	CKSQYF103Z50
	C530	ELECT. CAPACITOR	CEANP100M16		C643	ELECT. CAPACITOR	CEAS470M10
	C531	CERAMIC CAPACITOR	CKSQYF104Z25		C645, 646	CHIP CAPACITOR	CKSQYF103Z50
	C532	CHIP CAPACITOR	CCSQCH100D50		C650	ELECT. CAPACITOR	CEAS470M10
	C533	ELECT. CAPACITOR	CEAS470M16		C651	CHIP CAPACITOR	CKSQYF103Z50
	C535	CHIP CAPACITOR	CKSQYF103Z50		C660	CHIP CERAMIC C.	CCSQCH221J50
	C536	CHIP CAPACITOR	CCSQCH910J50		C661, 662	CHIP CAPACITOR	CKSQYF103Z50
	C537	ELECT. CAPACITOR	CEAS010M50		C801	ELECT. CAPACITOR	CEAS470M10
	C549	CERAMIC CAPACITOR	CCSQCH560J50		C802	ELECT. CAPACITOR	CEAS470M16
	C550	CHIP CAPACITOR	CCSQCH151J50		C803-805	CHIP CAPACITOR	CKSQYF103Z50
	C551	ELECT. CAPACITOR	CEANP220M10		C806	CHIP CAPACITOR	CCSQCH820J50
	C552	ELECT. CAPACITOR	CEAS470M10		C807	CHIP CAPACITOR	CKSQYF103Z50
	C553, 554	CHIP CAPACITOR	CKSQYF103Z50		C808	CHIP CAPACITOR	CCSQCH680J50
	C555	CHIP CAPACITOR	CCSQCH100D50		C809	CHIP CAPACITOR	CCSQCH101J50
	C556	CHIP CAPACITOR	CCSQCH050C50		C810	CHIP CAPACITOR	CCSQCH270J50
	C557	CHIP CAPACITOR	CKSQYF103Z50		C811	CHIP CAPACITOR	CCSQCH101J50
	C558	ELECT. CAPACITOR	CEAS470M10		C812	CHIP CAPACITOR	CCSQCH680J50
	C559, 560	CHIP CAPACITOR	CCSQCH100D50		C813	CERAMIC CAPACITOR	CKSQYF473Z25
	C561, 562	CHIP CAPACITOR	CKSQYF103Z50		C814	CHIP CAPACITOR	CKSQYF103Z50
	C565	CHIP CAPACITOR	CCSQCH050C50		C815	CERAMIC CAPACITOR	CKSQYF473Z25

Mark	No.	Description	Part No.
	C816	CHIP CAPACITOR	CCSQCH050C50
	C817, 818	CHIP CAPACITOR	CKSQYF103Z50
	C831	ELECT. CAPACITOR	CEAS010M50
	C832	CHIP CAPACITOR	CKSQYF103Z50
	C841	CHIP CERAMIC C.	CCSQCH471J50
	C842	ELECT. CAPACITOR	CEAS101M10
	C843	CHIP CAPACITOR	CCSQCH270J50
	C844	CHIP CAPACITOR	CCSQCH050C50
	C845, 846	CHIP CAPACITOR	CCSQCH470J50
	C847	CERAMIC CAPACITOR	CCSQCH510J50
	C848	ELECT. CAPACITOR	CEANP100M16
	C849	ELECT. CAPACITOR	CEJAR47M50
	C850, 855	CHIP CAPACITOR	CKSQYF103Z50
	C856, 857	CHIP CAPACITOR	CKSQYF103Z50
	C858	ELECT. CAPACITOR	CEANP470M10
	C901, 902	ELECT. CAPACITOR	CEAS470M16
	C904	CHIP CAPACITOR	CKSQYF103Z50
	C911, 912	CERAMIC CAPACITOR	CKSQYF104Z25
	C913	CERAMIC CAPACITOR	CKSQYB333K25
	C914, 915	CHIP CAPACITOR	CKSQYF103Z50
	C917	CHIP CAPACITOR	CKSQYF103Z50
	C918	CHIP CERAMIC C.	CCSQCH271J50
	C919	CERAMIC CAPACITOR	CKSQYF104Z25
	C920	CERAMIC CAPACITOR	CKSQYB562K50
	C922	CERAMIC CAPACITOR	CKSQYF104Z25
	C923	CERAMIC CAPACITOR	CKSQYB562K50
	C924	CERAMIC CAPACITOR	CKSQYF104Z25
	C925	CERAMIC CAPACITOR	CKSQYB333K25
	C926	ELECT. CAPACITOR	CEJANP4R7M16
	C927	CERAMIC CAPACITOR	CKSQYF104Z25
	C928	CHIP CAPACITOR	CKSQYF103Z50
	C929	CERAMIC CAPACITOR	CKSQYB333K25
	C930	CHIP CERAMIC C.	CCSQCH271J50
	C931	CHIP CAPACITOR	CKSQYF103Z50
	C932	ELECT. CAPACITOR	CEJANP4R7M16
	C933, 934	CHIP CAPACITOR	CKSQYF103Z50
	C935	ELECT. CAPACITOR	CEJAR47M50
	C936	CERAMIC CAPACITOR	CKSQYB333K25
	C937-939	CHIP CAPACITOR	CKSQYF103Z50
	C940	CHIP CAPACITOR	CKSQYB102K50
	C941, 942	ELECT. CAPACITOR	CEHAQ100M50
	C943	CERAMIC CAPACITOR	CKSQYF473Z25
	C944	CHIP CAPACITOR	CKSQYB102K50
	C945	ELECT. CAPACITOR	CEAS010M50
	C946	CHIP CAPACITOR	CKSQYF103Z50
	C947	CERAMIC CAPACITOR	CKSQYF104Z25
	C948, 949	CERAMIC CAPACITOR	CKSQYF473Z25
	C950	CERAMIC CAPACITOR	CKSQYF104Z25
	C951	CERAMIC CAPACITOR	CKSQYF473Z25
	C952	CERAMIC CAPACITOR	CKSQYF104Z25
	C956	CERAMIC CAPACITOR	CKSQYF473Z25
	C957	CHIP CERAMIC C.	CCSQCH271J50
	C958	CAPACITOR (ALUMINUM) (47 $\mu$ /16V)	VCH1115
	C959	CERAMIC CAPACITOR	CKSQYF104Z25
	C999	CHIP CERAMIC C.	CCSQCH471J50

Mark	No.	Description	Part No.
<b>RESISTORS</b>			
	VR441	SEMI-FIXED VR(22k $\Omega$ )	VRTB6VS223
	VR481, 482	SEMI-FIXED VR(4.7k $\Omega$ )	VRTB6VS472
	VR521	SEMI-FIXED VR(4.7k $\Omega$ )	VRTB6VS472
	VR601	SEMI-FIXED VR(2.2k $\Omega$ )	VRTB6VS222
	VR603, 604	SEMI-FIXED VR(47k $\Omega$ )	VRTB6VS473
	VR605, 606	SEMI-FIXED VR(33k $\Omega$ )	VRTB6VS333
	VR607	SEMI-FIXED VR(47k $\Omega$ )	VRTB6VS473
	R406	CARBON FILM RESISTOR	RD1/6PM224J
	R415, 416	METALFILM RESISTOR	RN1/6PQ3002F
	R431	CARBON FILM RESISTOR	RD1/6PM510J
	R434, 438	METALFILM RESISTOR	RN1/6PQ□□□□F
	R496	CARBON FILM RESISTOR	RD1/6PM101J
	R511	METALFILM RESISTOR	RN1/6PQ2002F
	R558, 564	CARBON FILM RESISTOR	RD1/6PM102J
	R591, 593	CARBON FILM RESISTOR	RD1/6PM□□□J
	R605, 619	CARBON FILM RESISTOR	RD1/6PM□□□J
	R631, 667	CARBON FILM RESISTOR	RD1/6PM□□□J
	R668, 817	CARBON FILM RESISTOR	RD1/6PM□□□J
	R845, 846	CARBON FILM RESISTOR	RD1/6PM470J
	R854	CARBON FILM RESISTOR	RD1/6PM225J
	OTHER RESISTORS		RS1/10S□□□J

**OTHERS**

Mark	No.	Description	Part No.
		TERMINAL	VNE1841
	CN103	CONNECTOR (23P)	HLEM23S-1
	JA2	JACK	PKN1005
	JA3, 4	JACK/12V	PKN1004
	X101	CERAMIC RESONATOR (9MHz)	VSS1040
	X401	CRYSTAL RESONATOR (17.734MHz)	VSS1019
	X601	CRYSTAL RESONATOR (14.22MHz)	VSS1053

**AUDIO ASSEMBLY**

**SEMICONDUCTORS**

Mark	No.	Description	Part No.
	IC201	EFM DEMODULATION IC	CXD2500AQ
	IC202	REGULATOR IC	NJM78L08A
	IC205	IC	BA15218N
	IC206	D/A CONVERTER IC	PD2026A
	IC207, 208	OP-AMP IC	BA15218
	IC210	REGULATOR IC	NJM79L08A
	IC211	OP-AMP IC	BA15218
	Q203	DIGITAL TRANSISTOR	DTA124EK
	Q204, 205	TRANSISTOR	2SD2144S
	Q206	DIGITAL TRANSISTOR	DTC124EK
	Q207, 210	DIGITAL TRANSISTOR	DTA124EK
	Q212, 213	DIGITAL TRANSISTOR	DTA124EK
	Q220	CHIP TRANSISTOR	2SC2412K
	Q221	DIGITAL TRANSISTOR	DTA124EK
	Q222, 223	CHIP TRANSISTOR	2SA1037K
	D201	VARI-CAP	FC54M
	D202, 205	DIODE	1SS254
	D206, 207	DIODE	1SS254
	D210	SCHOTTKY DIODE	ERA83-006

Mark	No.	Description	Part No.	Mark	No.	Description	Part No.
<b>COILS AND FILTERS</b>				<b>RESISTORS</b>			
L201, 202		AXIAL INDUCTOR	LAU010K	R212, 213		CARBON FILM RESISTOR	RD1/6PM470J
L203		AXIAL INDUCTOR	LAU220J	R220-222		CARBON FILM RESISTOR	RD1/6PM□□□J
L204, 205		AXIAL INDUCTOR	LAU010K	△ R234		RESISTOR (4.7Ω)	DCN1001
F201, 301		COIL	VTH1016	R259-269		CARBON FILM RESISTOR	RD1/6PM□□□J
F302, 303		COIL	VTH1016	R271, 272		CARBON FILM RESISTOR	RD1/6PM222J
<b>CAPACITORS</b>				R274-276		CARBON FILM RESISTOR	RD1/6PM471J
C201		CERAMIC CAPACITOR	CKSQYF473Z25	R293		CARBON FILM RESISTOR	RD1/6PM471J
C202		AUDIO FILM CAPACITOR	CFTXA152J50	R566, 587		CARBON FILM RESISTOR	RD1/6PM□□□J
C203		ELECT. CAPACITOR	CEAS470M10	<b>OTHERS</b>			
C204		CERAMIC CAPACITOR	CKSQYF104Z25	TERMINAL			VNE1841
C205		ELECT. CAPACITOR	CEAS470M16	CN301		5P TOP POST (NH)	BSP-SHF-1AA
C206		CHIP CAPACITOR	CKSQYF103Z50	JA6		JACK (3P)	VKB1049
C207		ELECT. CAPACITOR	CEAS471M10	JA8		OPTICAL OUTPUT JACK	TOTX178
C208		ELECT. CAPACITOR	CEAS470M10	X201		CRYSTAL RESONATOR(16MHz)	VSS1057
C209, 210		CERAMIC CAPACITOR	CKSQYF104Z25				
C211		ELECT. CAPACITOR	CEAS470M10				
C212		CERAMIC CAPACITOR	CKSQYF104Z25				
C213, 216		CHIP CAPACITOR	CKSQYF103Z50				
C217, 218		CHIP CAPACITOR	CKSQYF103Z50				
C219		CERAMIC CAPACITOR	CKSQYF104Z25				
C220, 221		CHIP CERAMIC C.	CCSQCH271J50				
C225, 226		ELECT. CAPACITOR	CEAS470M10				
C228		ELECT. CAPACITOR	CEAS100M50				
C230		ELECT. CAPACITOR	CEAS470M10				
C231		CHIP CAPACITOR	CKSQYF103Z50				
C232		CHIP CAPACITOR	CCSQCH120J50				
C234, 251		CHIP CAPACITOR	CKSQYF103Z50				
C252, 253		ELECT. CAPACITOR	CEAS470M10				
C254		CERAMIC CAPACITOR	CKSQYF104Z25				
C255		ELECT. CAPACITOR	CEAS471M10				
C256		ELECT. CAPACITOR	CEAS470M10				
C257		ELECT. CAPACITOR	CEAS471M10				
C258-263		CHIP CAPACITOR	CCSQCH390J50				
C264, 265		AUDIO FILM CAPACITOR	CFTXA152J50				
C266, 267		CHIP CAPACITOR	CKSQYB682K50				
C268, 269		AUDIO FILM CAPACITOR	CFTXA102J50				
C270-273		ELECT. CAPACITOR	CEAS470M10				
C274, 275		ELECT. CAPACITOR	CEANP220M10				
C279		ELECT. CAPACITOR	CEAS471M10				
C283		ELECT. CAPACITOR	CEAS470M10				
C284, 285		ELECT. CAPACITOR	CEAS100M50				
C301		ELECT. CAPACITOR	CEANP220M10				
C303		ELECT. CAPACITOR	CEAS470M10				
C304-306		CHIP CAPACITOR	CKSQYF103Z50				
C309		ELECT. CAPACITOR	CEAS470M10				
C310, 311		CERAMIC CAPACITOR	CKSQYF104Z25				
C320		CHIP CAPACITOR	CKSQYF103Z50				
C322		CERAMIC CAPACITOR	CKSQYF473Z25				
C323, 324		CHIP CAPACITOR	CKSQYF103Z50				
C325, 326		CERAMIC CAPACITOR	CKSQYF104Z25				
C563		ELECT. CAPACITOR	CEAS221M6R3				


## 5. ADJUSTMENTS

### 5.1 PRELIMINARIES

#### ● Jigs for Adjustment

- CD test disc (STD - 901 or STD - 902)
- LD test disc (GGV1003 and GGV1007)
- (-) screwdriver (medium)
- (-) screwdriver (small)
- Hexagonal wrench driver (straight type, size: 3mm)
- Resistors (10kΩ × 2, 47kΩ)
- Dual - trace oscilloscope (with delay)
- AF oscillator
- Frequency counter
- TV monitor
- Low-pass filter

Use the low-pass filters below in the coarse centering adjustment 2. and fine centering adjustment 6. when the S/N of the waveform is hard to observe.

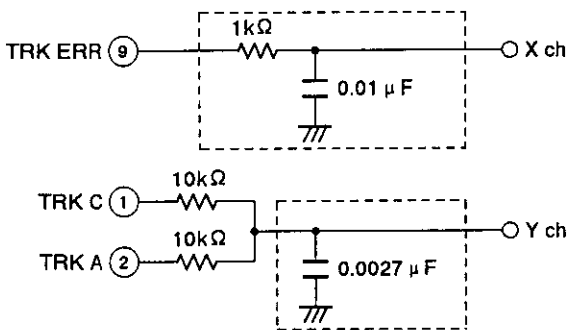

#### ● Rack Assembly During Centering Adjustment

The S - IN position (without hitting the mechanism stopper) of the rack assembly during centering adjustment is indicated below.

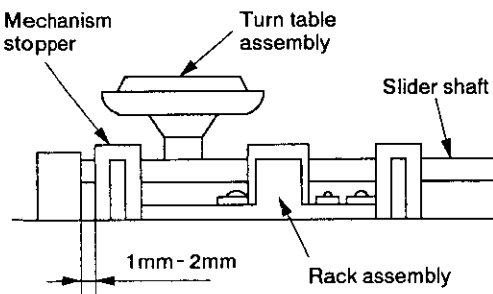


Fig. 1 Right side view

#### ● Adjustment Locations


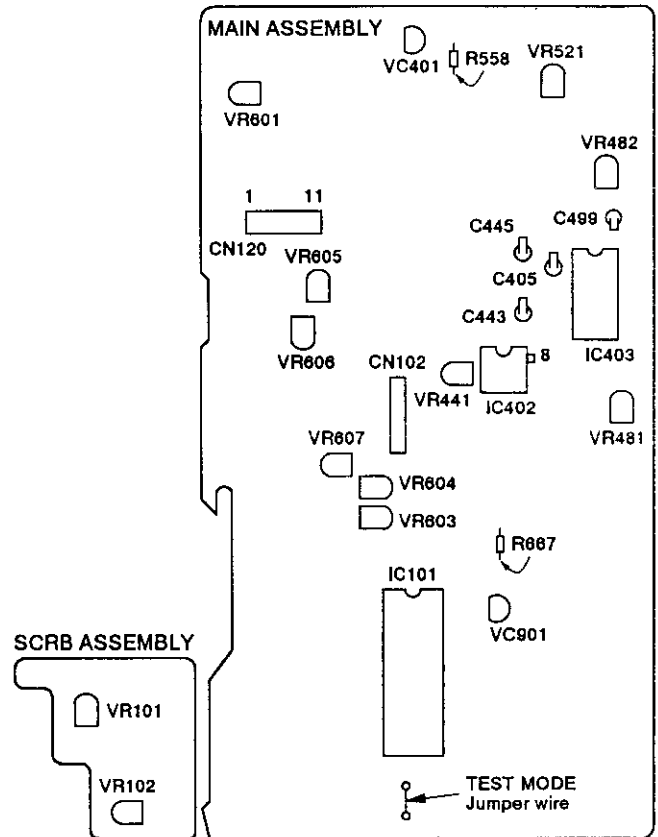


Fig. 2 MAIN and SCRB assemblies section

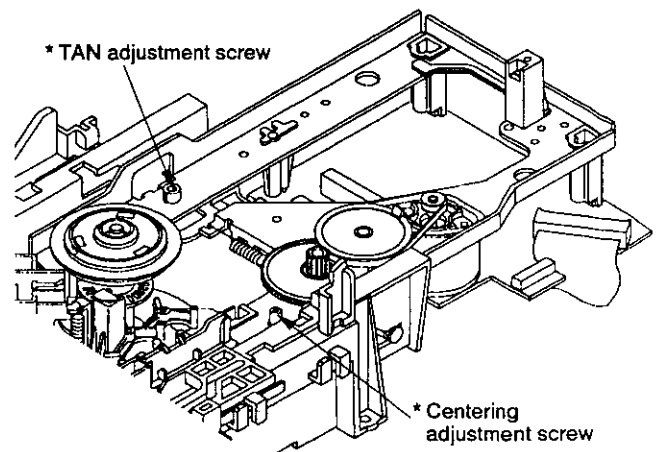

\* : As the adjustment range of both the TAN and centering adjustment screws is only ± 90° form the center, do not turn the screws beyond this range.

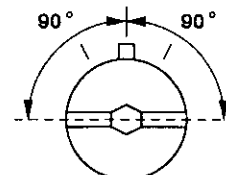


Fig. 3 TILT base section



● Test Mode

1) Activating the Test Mode

1. While power is ON, connect the Test mode jumper wire ( Fig. 2 ) to the GND for about one second.
2. After checking whether the FL display device is fully lit, disconnect the Test mode jumper wire from GND.

2) Canceling the Test Mode

1. Turn the power OFF.

● Key operation in the Test mode

Player Status	Key Operation	Function	Remarks
Tray Open	◀◀/▶▶  SKIP ( Refer to Note 1 )	◀◀: Shifts the tray in the closed direction and also raises the turn table while it is held down. ▶▶: Shifts the tray in the open direction and also lowers the turn table while it is held down.	
Tray Open	▶ Play	Clamps	
Clamp	▶ Play	Turns the disc through TRK Servo Open	TRK - OFF
TRK Servo Open	▶ Play	TRK Servo Close	TRK - ON
TILT Neutral	+MULTI - SPEED	TILT Servo Close	T-□:ON
TILT ON	- MULTI - SPEED	TILT Neutral	T-□:N
TILT Neutral or ON	◀◀/▶▶  SKIP	Setting TILT Servo to OFF, can force TILT to move.	T - 1 to T - E
Clamp	◀◀/▶▶ SCAN	Can force the slider to move	S - LD S - CDV S - CD S - IN
Play	PAUSE	Still	
Play	■ STOP	Stop	
Stop	▲ OPEN	Open	
Play	<div style="text-align: center;"> <span style="border: 1px solid black; padding: 2px;">+10</span>  ↓  <span style="border: 1px solid black; padding: 2px;">0</span> to <span style="border: 1px solid black; padding: 2px;">9</span>  ↓  ▶ PLAY </div>	Set to SEARCH lead address input mode.  Designates the SEARCH lead address through keys 0 to 9. Press the CLEAR <span style="border: 1px solid black; padding: 2px;">C</span> key if the designated address is incorrect.  Searches the designated address upon pressing the PLAY key.	


Note 1: Press SKIP ( |◀◀/▶▶| ) keys after the tray is set to open state by pressing OPEN ( ▲ ) key.  
In tray open state, pressing PLAY ( ▶ ) key causes is to TILT control state and SKIP keys cannot function properly.

● **Player Operation in the Test Mode**

Operate the player by selecting a test mode function with the keys on the player or on the remote control unit.

● **CD PLAYBACK**

- ① Place the CD disc on the turn table.

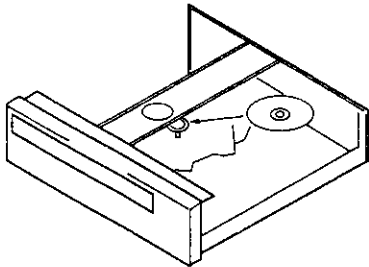

- ② Press the PLAY (▶) key once.  
(Twin gear starts to move.)
- ③ Push the cam plate (Fig. 4) in the direction of the arrow and wait until the CD disc is clamped.


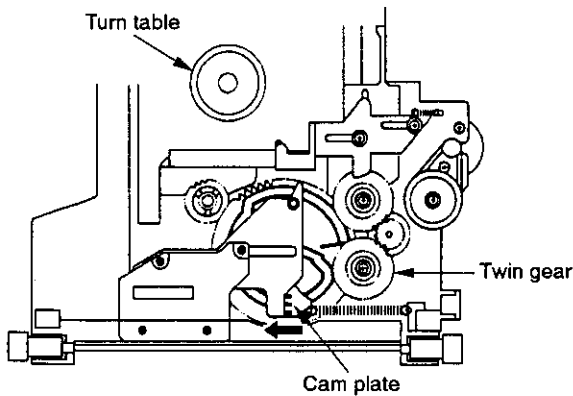


Fig. 4


- ④ Press the ◀◀ or ▶▶ keys to appear "S - CD" on the TV screen display.

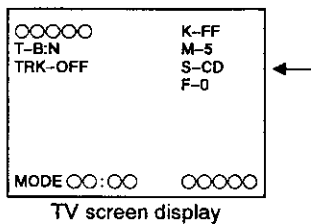


- ⑤ Press the PLAY (▶) key twice, disc will be normally playbacked.

● **LD PLAYBACK**

- ① Place the LD disc on the turn table.

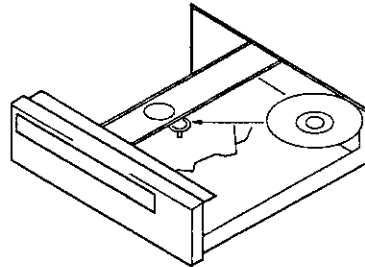

- ② Press the PLAY (▶) key once. (Twin gear starts to move.)
- ③ Press the SKIP REV (◀◀) key to raise the turn table (spindle motor section) while pressing the cam plate (Fig. 4) in the direction of the arrow.  
Raise it to the position where the LD disc can be easily placed on the turn table.  
If the turn table is raised too high, lower it with the SKIP FWD (▶▶) key.
- ④ Place the LD disc on the turn table and press the PLAY (▶) key once to clamp the disc.
- ⑤ Press the ◀◀ or ▶▶ keys to appear "S - LD" on the TV screen display.







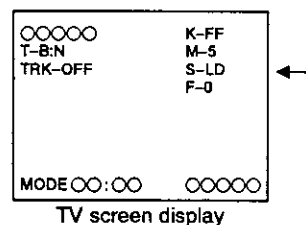


- ⑥ Press the PLAY (▶) key twice, disc will be normally playbacked.

5.2 ADJUSTMENT TABLE

Adjustment name	Adjustment point	Measuring equipment and jigs	Measurement point	Player condition	Adjustment procedure	Waveform and connection diagram
1 Tilt Offset Check and Adjustment	VR607	• TV monitor	Tilt indication on Test mode screen	• Power ON • Test mode • Disc not installed	1. Check if the tilt indication on the Test mode screen is at T-6 to T-8. 2. If the tilt indication is not at T-6 to T-8, adjust VR607 until the tilt indication reaches T-6 to T-8.	
2 Coarse centering adjustment	Tilt base centering adjustment screw	• Oscilloscope • STD-901 or STD-902 • MIX resistor 	CN120 X: ⑨ Pin ( TRK ERR ) Y: ①+② Pin ( TRK SUM )	• Test mode TRK Servo Open Tilt Servo ON • Innermost track of STD-901 or STD-902 which does not come in contact with the mechanical stopper.	1. Move the slider until it does not come in contact with the mechanical stopper at the slider position indication S-IN. 2. Observe TRK ERR ( Xch ) and TRK SUM ( Ych ) at the X-Y mode during TRK Servo Open. 3. Turn the centering adjustment screw until the Lissajous figure is horizontal.	
3 FCS balance adjustment ( 1 ) TRK ERR MAX	VR605	• Oscilloscope • STD-901 or STD-902	CN120 ⑨ Pin ( TRK ERR )	• Test mode TRK Servo Open Tilt Servo ON • Inner track of STD-901 or STD-902	1. Observe TRK ERR at CH1 of the oscilloscope during TRK Servo Open. 2. Adjust VR605 until the amplitude of the waveform reaches its maximum.	
4 FCS balance adjustment ( 2 ) RF MAX	VR606	• Oscilloscope • STD-901 or STD-902	CN120 ③ Pin ( RF )	• Test mode TRK Servo Close Tilt Servo ON • Inner track of STD-901 or STD-902	1. Close the TRK Servo and observe RF at CH1 of the oscilloscope. 2. Adjust VR606 until the amplitude of the waveform reaches its maximum and the envelope is very clear.	
5 Tangential direction angle adjustment	Tilt base TAN adjustment screw	• Oscilloscope • STD-901 or STD-902	CN120 ③ Pin ( RF )	• Test mode TRK Servo Close Tilt Servo ON • Inner track of STD-901 or STD-902	1. Observe RF at CH1 of the oscilloscope during TRK Servo Close. 2. Adjust the TAN adjustment screw until the amplitude of the waveform reaches its maximum and the envelope is very clear.	
6 Fine centering adjustment	Tilt base Centering adjustment screw	• Oscilloscope • STD-901 or STD-902	CN120 X: ⑨ Pin ( TRK ERR ) Y: ①+② Pin ( TRK SUM )	• Test mode TRK Servo Open Tilt Servo ON • Innermost track of STD-901 or STD-902 which does not come in contact with the mechanical stopper.	Perform fine centering adjustment by following the same procedure as in "(2) Coarse centering adjustment".	
Crosstalk check and Tilt offset adjustment	VR607	• TV monitor • GGV1003	Crosstalk check screen	• Test mode TRK Servo Close Tilt Servo ON • GGV1003 #115 STILL	1. Search for address 115 of GGV1003 and still the address. 2. Check the crosstalk . If the crosstalk is pronounced, adjust VR607 until the crosstalk is not noticeable.	
7	When the crosstalk is still noticeable in spite of the adjustment in ( 7 ), use a hexagonal wrench driver ( straight type, size: 3 mm ) to adjust the TAN adjustment screw on the bottom side of the player through the GGV1003 #115 STILL screen. Afterwards, perform the adjustment procedures from ( 6 ).					

Adjustment name	Adjustment point	Measuring equipment and jigs	Measurement point	Player condition	Adjustment procedure	Waveform and connection diagram
8 FCS Servo loop gain adjustment	VR604	<ul style="list-style-type: none"> <li>Oscilloscope</li> <li>GGV1003</li> <li>AF Oscillator</li> <li>Resistor (47kΩ)</li> </ul>	CN120 X: ⑦ Pin ( FCS IN ) Y: ⑥ Pin ( FCS ERR )	<ul style="list-style-type: none"> <li>Test mode</li> <li>TRK Servo Close</li> <li>Tilt Servo ON</li> <li>GGV1003</li> <li>#15,000 STILL</li> </ul>	<ol style="list-style-type: none"> <li>Search for address 15,000 of GGV1003 and still the address.</li> <li>Xch: Connect the resistor (47kΩ) to the channel and connect to FCS IN. Ych: Connect to FCS ERR.</li> <li>Connect the AF oscillator between Xch and the 47kΩ resistor, and adjust VR604 until the Lissajous figure is symmetrical.</li> </ol>	<p>Adjust until the Lissajous figure is symmetrical.</p>
9 TRK Servo loop gain adjustment	VR601	<ul style="list-style-type: none"> <li>Oscilloscope</li> <li>GGV1003</li> <li>AF Oscillator</li> <li>Resistor (47kΩ)</li> </ul>	CN120 X: ⑩ Pin ( TRK IN ) Y: ⑨ Pin ( TRK ERR )	<ul style="list-style-type: none"> <li>Test mode</li> <li>Stop mode or TRK Servo Close</li> <li>Tilt Servo ON</li> <li>GGV1003</li> <li>#15,000 STILL</li> </ul>	<ol style="list-style-type: none"> <li>Xch: Connect the 47kΩ resistor to channel and connect to TRK IN. Ych: Connect to TRK ERR.</li> <li>Connect the AF oscillator between Xch and the 47kΩ resistor and note the tilt angle against the horizon with the disc in the stopped state.</li> <li>Search for address 15,000 of GGV1003 and still the address.</li> <li>Set the disc PLAY mode (TRK servo closed, TILT on). Adjust VR603 so that the tilt angle of the waveform will be the same as the tilt angle noted in step 3.</li> </ol>	<p>Adjust until the Lissajous figure is symmetrical.</p>
10 RF level adjustment	VR601	<ul style="list-style-type: none"> <li>Oscilloscope</li> <li>GGV1003</li> </ul>	CN120 ③ Pin ( RF )	<ul style="list-style-type: none"> <li>Test mode</li> <li>TRK Servo Close</li> <li>Tilt Servo ON</li> <li>GGV1003</li> <li>#15,000 STILL</li> </ul>	<ol style="list-style-type: none"> <li>Search for address 15,000 of GGV1003 and still the address. Observe RF at CH1 of the oscilloscope.</li> <li>Adjust VR601 until the RF amplitude is 300mV ± 50mVp-p.</li> </ol>	
11 Synchronizing signal generator clock adjustment	VC401	<ul style="list-style-type: none"> <li>Frequency counter</li> </ul>	R558 lead wire ( No connection side )	<ul style="list-style-type: none"> <li>Power ON</li> <li>Stop mode</li> </ul>	Adjust clock frequency ( 17.734475MHz ) ± 100Hz.	
12 REF-H adjustment	VC901	<ul style="list-style-type: none"> <li>Frequency counter</li> </ul>	R667 lead wire ( IC601 ( PM3002 ) ⑧ Pin side )	<ul style="list-style-type: none"> <li>Power ON</li> <li>Stop mode</li> </ul>	Adjust FCS ( 3.5546875 MHz ) ± 25Hz.	
13 VCO center frequency adjustment	VR481	<ul style="list-style-type: none"> <li>Oscilloscope</li> <li>GGV1007</li> </ul>	CH1: C405 lead wire CH2: C499 lead wire	<ul style="list-style-type: none"> <li>Normal mode</li> <li>GGV1007</li> <li>#15,000 STILL</li> </ul>	Place a trigger in CH1 and adjust until the center of the CH2 video signal jitter is 75 μsec ( 1H + 11 μsec ) ± 2 μsec compared to the CH1 video signal.	
14 Video level adjustment	VR482	<ul style="list-style-type: none"> <li>TV monitor</li> <li>Oscilloscope</li> <li>GGV1007</li> </ul>	Video output terminal	<ul style="list-style-type: none"> <li>Normal mode</li> <li>GGV1007</li> <li>#5,251 to #6,000 PLAY</li> </ul>	Connect a 75Ω resistor to the VIDEO output terminal ( possibly by connecting to the monitor ) and adjust until the sync tip to 100% white level is 1Vp-p ± 5% at the white ( 100% ) signal.	<p>Oscilloscope range V:20mV/div 10 μsec/div ( Trigger ) AC mode</p>

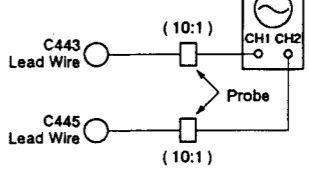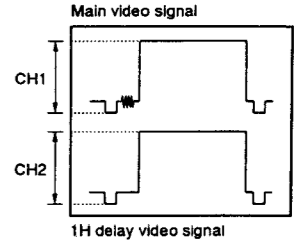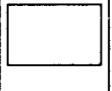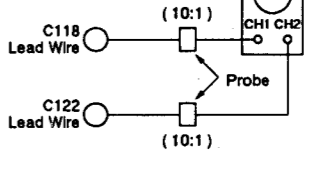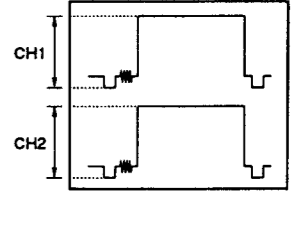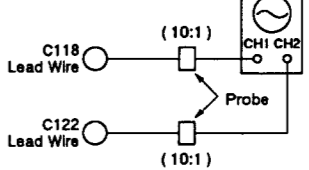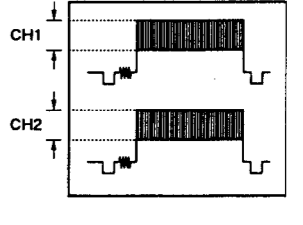	Adjustment name	Adjustment point	Measuring equipment and jigs	Measurement point	Player condition	Adjustment procedure	Waveform and connection diagram
15	1H DLY video level adjustment	VR441	<ul style="list-style-type: none"> <li>Oscilloscope</li> <li>GGV1007</li> </ul>	CH1: C443 lead wire CH2: C445 lead wire	<ul style="list-style-type: none"> <li>Normal mode</li> <li>GGV1007</li> <li>#5,300 STILL</li> </ul>	Adjust until the sync tip to 100% white level at the white ( 100% ) signal is the same as in CH1 and CH2.	V:20mV/div ( CH1 ) 20mV/div ( CH2 ) H:10 $\mu$ sec/div ( Trigger ) AC mode  
16	VPS error level adjustment	VR521	<ul style="list-style-type: none"> <li>TV monitor</li> <li>GGV1007</li> </ul>	TV monitor	<ul style="list-style-type: none"> <li>Normal mode</li> <li>GGV1007</li> <li>#6,001 to #6,750 PLAY ( Magenta screen )</li> </ul>	Adjust until the color irregularity on the magenta screen is minimized.	 Color irregularity on the magenta screen is minimized.
17	MOD video level adjustment	VR102	<ul style="list-style-type: none"> <li>Oscilloscope</li> <li>GGV1007</li> </ul>	CH1: C118 lead wire CH2: C122 lead wire	<ul style="list-style-type: none"> <li>Normal mode</li> <li>GGV1007</li> <li>#5,300 STILL</li> </ul>	Adjust until the sync tip to 100% white level at the white ( 100% ) signal is the same as in CH1 and CH2.	V:20mV/div ( CH1 ) 20mV/div ( CH2 ) H:10 $\mu$ sec/div AC mode  
18	1H delay sub carrier adjustment	VR101	<ul style="list-style-type: none"> <li>Oscilloscope</li> <li>GGV1007</li> </ul>	CH1: C118 lead wire CH2: C122 lead wire	<ul style="list-style-type: none"> <li>Normal mode</li> <li>GGV1007</li> <li>#5,100 STILL</li> </ul>	Adjust until the chroma signal level at the magenta signal is the same as in CH1 and CH2.	V:20mV/div ( CH1 ) 20mV/div ( CH2 ) H:10 $\mu$ sec/div ( Trigger ) AC mode  


## 5. REGLAGES

### 5.1 PREPARATIFS

#### ● Instruments Pour Reglage

- Disque d'essai pour CD (STD - 901 ou STD - 902)
- Disque d'essai pour LD (GGV1003 ou GGV1007)
- (-) Tournevis à tête plate (taille moyenne)
- (-) Tournevis à tête plate (petit)
- Clé hexagonale (type droit, taille: 3mm)
- Résistances (10kΩ × 2, 47 kΩ)
- Oscilloscope à double traces (avec retard)
- Oscillateur audiofréquence (AF)
- Compteur de fréquence
- Moniteur TV
- Filtre passe-bas

Utiliser les filtres passe-bas ci - dessous pour le réglage approximatif de centrage 2 et le réglage fin de centrage 6 si la forme d'onde du S/B est difficile à observer.

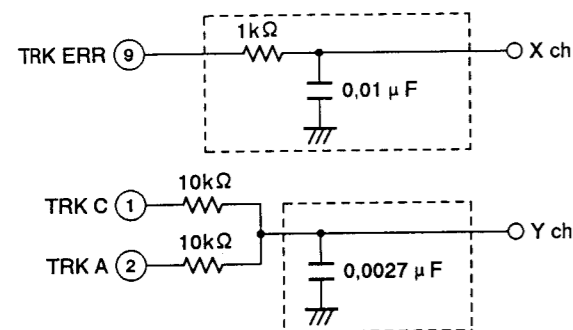

#### ● Ensemble de Rack Pour le Reglage de Centrage

La position S - IN (la position où la butée de mécanisme n'est pas cognée) du rack pour le réglage de centrage est indiquée ci - dessous.

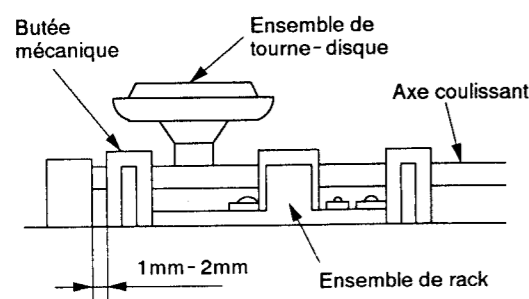


Fig. 1 Vue de la côté droite

#### ● Points de Regrave


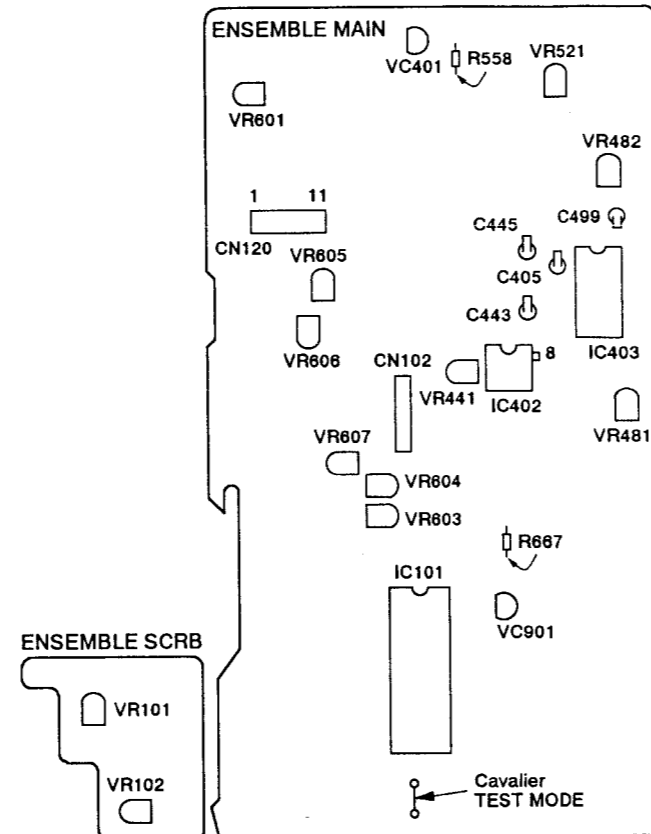


Fig. 2 Ensembles MAIN et SCRB

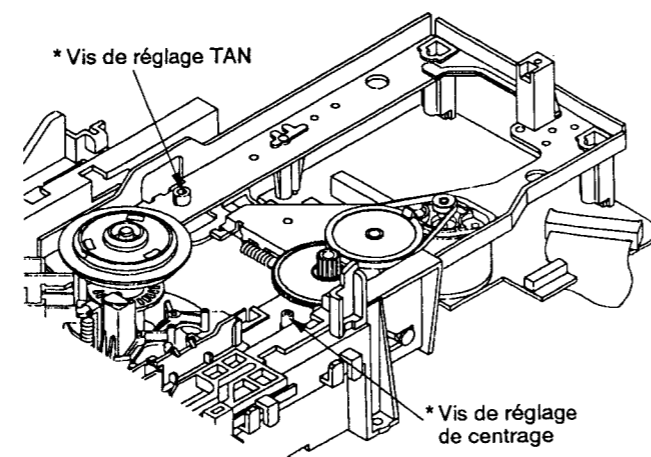

\* : Ne pas tourner les vis de réglage TAN et de centrage au - delà de la gamme de réglage, c'est - à - dire, ± 90° du centre.

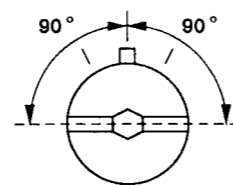


Fig. 3 Base TILT

#### ● Mode D'essai

##### 1) Lancement du mode d'essai

1. Après la mise en marche de l'appareil, connecter le cavalier du mode d'essai (Fig. 2) à GND pendant environ une seconde.
2. Après avoir confirmé que l'affichage FL est allumé à fond, débrancher le cavalier du mode d'essai de GND.

##### 2) Annulation du mode d'essai

1. Mettre l'appareil hors tension.

#### ● Fonction des touches en mode d'essai

Etat de lecteur	Touche à déclencher	Fonction	Remarques
Plateau ouvert	◀◀/▶▶  SKIP (Se reporter à la Remarque 1.)	◀◀: Déplace le plateau à la direction de fermeture et élève le tourne - disque pendant que la touche est enfoncée. ▶▶: Déplace le plateau à la direction de ouverture et baisse le tourne - disque pendant que la touche est enfoncée.	
Plateau ouvert	▶ Play	Verrouille.	
Verrouillé	▶ Play	Tourner le disque par la commande TRK SERVO OPEN.	TRK - OFF
Asservissement TRK ouvert	▶ Play	Asservissement TRK fermé.	TRK - ON
TILT en neutre	+MULTI - SPEED	Asservissement TILT fermé.	T-□:ON
TILT ON	- MULTI - SPEED	TILT en neutre	T-□:N
TILT en neutre ou ON	◀◀/▶▶  SKIP	En plaçant l'asservissement TILT sur OFF, il est possible de mouvoir TILT.	T - 1 à T - E
Verrouillé	◀◀/▶▶ SCAN	Il est possible de faire le coulisseau déplacer.	S - LD S - CDV S - CD S - IN
Lecture	PAUSE	Arrêt sur image	
Lecture	■ STOP	Arrête	
Arrêt	▲ OPEN	Ouvrir	
Lecture	+10 ↓ [0] à [9] ↓ ▶ PLAY	Placer sur le mode entrée de recherche d'adresse d'amorçage. Designier l'adresse d'amorçage à rechercher avec les touches 0 à 9. Appuyer sur la touche CLEAR [C] si l'adresse désignée est incorrecte. L'appareil commence à rechercher l'adresse désignée quand la touche PLAY est appuyée.	


Remarque 1: Appuyer sur les touche SKIP (|◀◀/▶▶|) après que le plateau est placé en mode ouverture par la touche OPEN (▲).  
En état ouverture de plateau, une poussée sur la touche PLAY (▶) rend l'appareil en état d'inclinaison et les touches SKIP ne fonctionnent pas correctement.

● **Fonctionnement du Lecteur en Mode D'essai**

Manipuler le lecteur en choisissant le mode d'essai avec les touches du lecteur ou celles de la télécommande.

• **LECTURE DE CD**

- ① Placer le disque CD sur le tourne - disque.

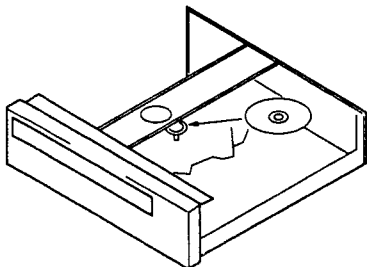

- ② Appuyer une fois sur la touche PLAY (▶).
- (Une paire d'engrenage commence à mouvoir.)
- ③ Enfoncer la came à plaque (Fig. 4) dans la direction de la flèche, et attendre que le disque CD soit verrouillé.


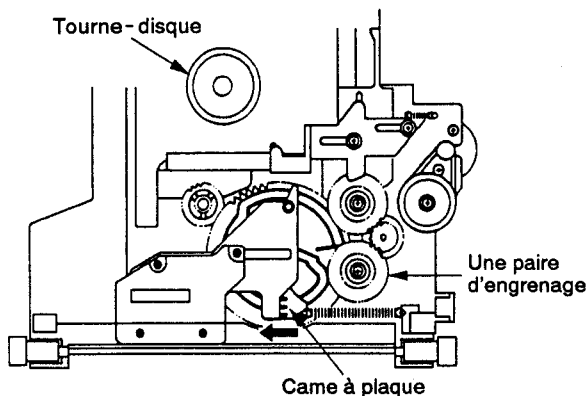


Fig. 4

- ④ Appuyer sur la touche ◀◀ ou ▶▶ pour faire apparaître "S - CD" sur l'écran du moniteur TV.

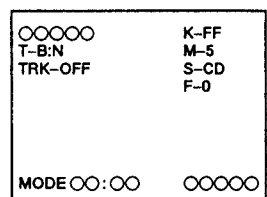


Affichage sur le moniteur TV


- ⑤ Appuyer deux fois sur la touche PLAY (▶). Le disque sera reproduit normalement.

• **LECTURE DE LD**

- ① Placer le disque LD sur le tourne - disque.

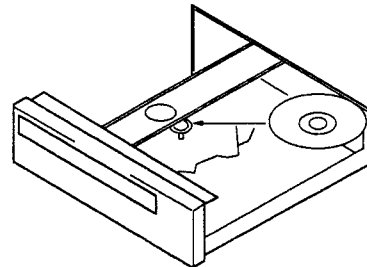


- ② Appuyer une fois sur la touche PLAY (▶).
- (Une paire d'engrenage commence à mouvoir.)
- ③ Appuyer sur la touche SKIP REV (◀◀) tout en appuyant sur la came à plaque (Fig. 4) dans la direction de la flèche pour faire élever le tourne - disque (section moteur de broche). Elever le tourne - disque de sorte que le disque LD peut être placé facilement sur le tourne - disque. Si le tourne - disque est trop élevé, l'abaisser avec la touche SKP FWD (▶▶).
- ④ Placer le disque LD sur le tourne - disque et appuyer une fois sur la touche PLAY (▶) pour verrouiller le disque.
- ⑤ Appuyer sur la touche ◀◀ ou ▶▶ pour faire apparaître "S - LD" sur l'écran du moniteur TV.

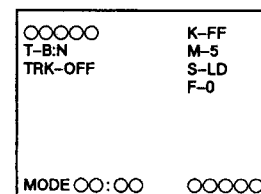








Affichage sur le moniteur TV

- ⑥ Appuyer deux fois sur la touche PLAY (▶). Le disque sera reproduit normalement.








5.2 SOMMAIRE DES REGLAGE

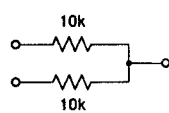	Réglage	Point de réglage	Equipement de mesure et calibre	Point de mesure	Etat du lecteur
1	Vérification et réglage de correction d'inclinaison	VR607	• Moniteur TV	Indication d'inclinaison sur l'écran du mode d'essai	• Alimentation sur ON • Mode d'essai • Pas de disque installé
2	Réglage approximatif de centrage	Vis de réglage de centrage sur la base d'inclinaison	• Oscilloscope • STD-901 ou STD-902 • Resistance MIX 	CN120 X: Broche ⑨ ( TRK ERR ) Y: Broche ①+② ( TRK SUM )	• Mode d'essai Asservissement d'alignement ouvert Asservissement d'inclinaison ON • La piste la plus intérieure de STD-901 ou STD-902, qui n'est pas en contact avec la butée mécanique.
3	Réglage de balance de mise au point (1) TRK ERR MAX	VR605	• Oscilloscope • STD-901 ou STD-902	CN120 Broche ⑨ ( TRK ERR )	• Mode d'essai Asservissement d'alignement ouvert Asservissement d'inclinaison ON • La piste intérieure de STD-901 ou STD-902
4	Réglage de balance de mise au point (2) RF MAX	VR606	• Oscilloscope • STD-901 ou STD-902	CN120 Broche ③ ( RF )	• Mode d'essai Asservissement d'alignement fermé Asservissement d'inclinaison ON • La piste intérieure de STD-901 ou STD-902
5	Réglage d'angle de direction tangentielle	Vis de réglage TAN sur la base d'inclinaison	• Oscilloscope • STD-901 ou STD-902	CN120 Broche ③ ( RF )	• Mode d'essai Asservissement d'alignement fermé Asservissement d'inclinaison ON • La piste intérieure de STD-901 ou STD-902
6	Réglage fin de centrage	Vis de réglage de centrage sur la base d'inclinaison	• Oscilloscope • STD-901 ou STD-902	CN120 X: Broche ⑨ ( TRK ERR ) Y: Broche ①+② ( TRK SUM )	• Mode d'essai Asservissement d'alignement ouvert Asservissement d'inclinaison ON • La piste la plus intérieure de STD-901 ou STD-902, qui n'est pas en contact avec la butée mécanique.
7	Vérification de diaphonie et réglage de correction d'inclinaison	VR607	• Moniteur TV • GGV1003	Ecran de vérification de diaphonie	• Mode d'essai Asservissement d'alignement fermé Asservissement d'inclinaison ON • GGV1003 #115 STILL
	Si la diaphonie est encore apparente après le réglage indiqué dans (7), régler la vis de réglage TAN situé sur le fond de la lecteur à l'aide de la clé hexagonale (type droit, taille: 3 mm) en observant l'arrêt sur image du GGV1003#115 sur l'écran. Ensuite, procédez au réglage dans (6).				

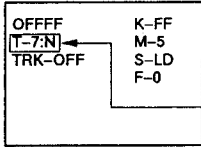
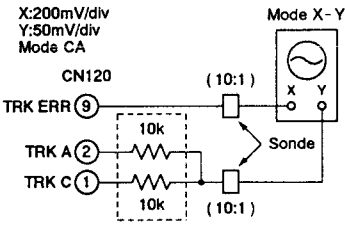
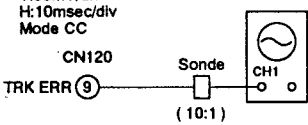
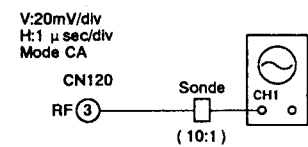
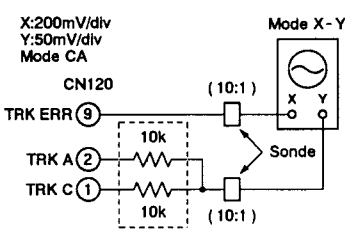
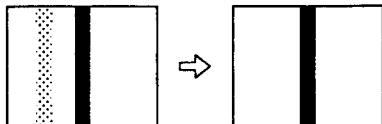
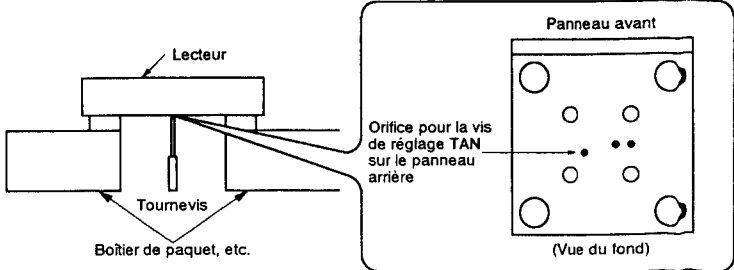


Procédure de réglage	Forme d'onde et schéma de connexion
<ol style="list-style-type: none"> <li>Vérifier que l'indication d'inclinaison sur l'écran du mode d'essai est entre T-6 et T-8.</li> <li>Si l'indication d'inclinaison n'est pas entre T-6 et T-8, Régler VR607 jusqu'à ce que l'indication soit entre T-6 et T-8.</li> </ol>	 <p>Régler VR607 tout en observant la figure sur l'écran du mode d'essai.</p>
<ol style="list-style-type: none"> <li>Faire glisser le coulisseau pour qu'il n'est pas en contact avec la butée mécanique située sur la position de l'indication S-IN pour le clisseau.</li> <li>Observer TRK ERR (Xch) et TRK SUM (Ych) en mode X-Y avec l'asservissement TRK ouvert.</li> <li>Tourner la vis de réglage de centrage jusqu'à ce que la figure de Lissajous soit horizontale.</li> </ol>	 <p>Régler de manière que la figure Lissajous soit horizontale.</p>
<ol style="list-style-type: none"> <li>Observer TRK ERR du CH1 sur l'oscilloscope avec l'asservissement TRK ouvert.</li> <li>Régler VR605 jusqu'à ce que l'amplitude de la forme d'onde soit maximum.</li> </ol>	 <p>Régler de manière que l'amplitude soit maximum.</p>
<ol style="list-style-type: none"> <li>Fermer l'asservissement TRK et observer RF du CH1 sur l'oscilloscope.</li> <li>Régler VR606 jusqu'à ce que l'amplitude de la forme d'onde soit maximum et que l'enveloppe soit très claire.</li> </ol>	 <p>Régler de manière que l'amplitude soit maximum et que l'enveloppe soit très claire.</p>
<p>Effectuer les réglage fin de centrage en suivant la même procédure que dans "(2) Réglage approximatif de centrage".</p>	 <p>Régler de manière que la figure Lissajous soit horizontale.</p>
<ol style="list-style-type: none"> <li>Rechercher l'adresse 115 de GGV1003 et geler l'image.</li> <li>Vérifier la diaphonie. Si la diaphonie apparaît, régler VR607 jusqu'à ce que la diaphonie soit peut apparent.</li> </ol>	 <p>Si la diaphonie apparaît, régler jusqu'à ce que la diaphonie soit peut apparente.</p>
 <p>Panneau avant</p> <p>Lecteur</p> <p>Tournevis</p> <p>Boîtier de paquet, etc.</p> <p>Orifice pour la vis de réglage TAN sur le panneau arrière</p> <p>(Vue du fond)</p>	

	Réglage	Point de réglage	Equipement de mesure et calibre	Point de mesure	Etat du lecteur
8	Réglage de gain de boucle d'asservissement de mise au point	VR604	<ul style="list-style-type: none"> <li>Oscilloscope</li> <li>GGV1003</li> <li>Oscillateur AF</li> <li>Resistance ( 47k<math>\Omega</math> )</li> </ul>	CN120 X: Broche ⑦ ( FCS IN ) Y: Broche ⑥ ( FCS ERR )	<ul style="list-style-type: none"> <li>Mode d'essai</li> <li>Asservissement TRK fermé</li> <li>Asservissement d'inclinaison ON</li> <li>GGV1003</li> <li>#15,000 STILL</li> </ul>
9	Réglage de gain de boucle d'asservissement d'alignement	VR601	<ul style="list-style-type: none"> <li>Oscilloscope</li> <li>GGV1003</li> <li>Oscillateur AF</li> <li>Resistance ( 47k<math>\Omega</math> )</li> </ul>	CN120 X: Broche ⑩ ( TRK IN ) Y: Broche ⑨ ( TRK ERR )	<ul style="list-style-type: none"> <li>Mode d'essai</li> <li>Mode arrêt ou l'asservissement TRK fermé</li> <li>Asservissement d'inclinaison ON</li> <li>GGV1003</li> <li>#15,000 STILL</li> </ul>
10	Réglage de niveau RF	VR601	<ul style="list-style-type: none"> <li>Oscilloscope</li> <li>GGV1003</li> </ul>	CN120 Broche ③ ( RF )	<ul style="list-style-type: none"> <li>Mode d'essai</li> <li>Asservissement TRK fermé</li> <li>Asservissement d'inclinaison ON</li> <li>GGV1003</li> <li>#15,000 STILL</li> </ul>
11	Réglage de rythme de générateur synchronisation	VC401	<ul style="list-style-type: none"> <li>Compteur de fréquence</li> </ul>	Câble R558 (Pas de côté de connexion)	<ul style="list-style-type: none"> <li>Alimentation ON</li> <li>Mode arrêt</li> </ul>
12	Réglage de REF-H	VC901	<ul style="list-style-type: none"> <li>Compteur de fréquence</li> </ul>	Câble R667 ( IC601 (PM3002), côté de la broche ⑧ )	<ul style="list-style-type: none"> <li>Alimentation ON</li> <li>Mode arrêt</li> </ul>
13	Réglage de fréquence central VCO	VR481	<ul style="list-style-type: none"> <li>Oscilloscope</li> <li>GGV1007</li> </ul>	CH1: Câble C405 CH2: Câble C499	<ul style="list-style-type: none"> <li>Mode normal</li> <li>GGV1007</li> <li>#15,000 STILL</li> </ul>
14	Réglage de niveau vidéo	VR482	<ul style="list-style-type: none"> <li>Moniteur TV</li> <li>Oscilloscope</li> <li>GGV1007</li> </ul>	Borne de sortie vidéo	<ul style="list-style-type: none"> <li>Mode normal</li> <li>GGV1007</li> <li>#5,251 à #6,000 PLAY</li> </ul>

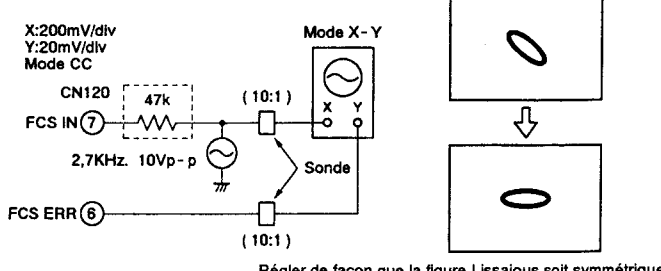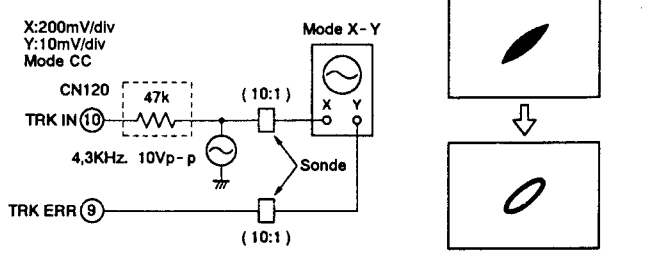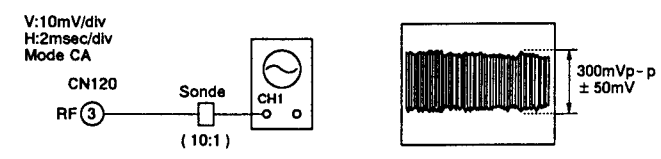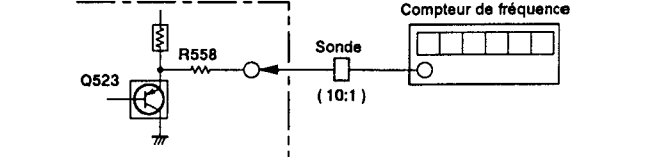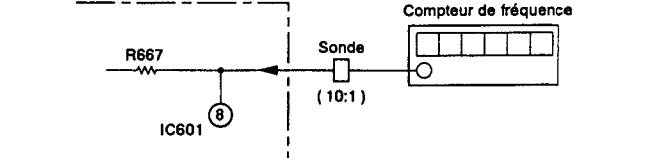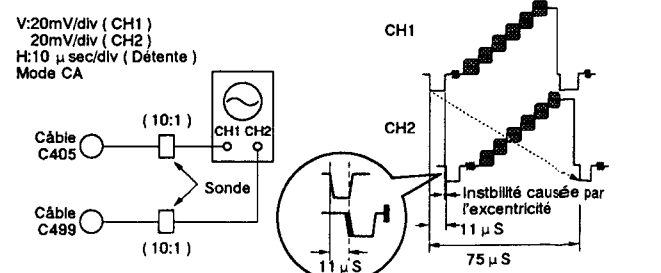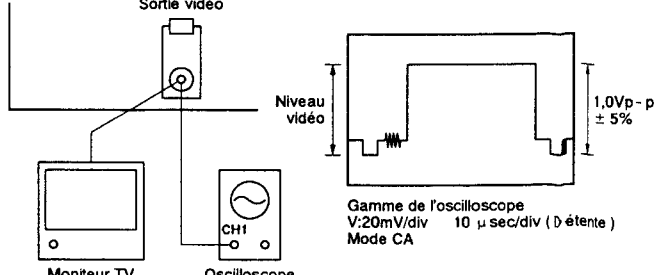Procédure de réglage	Forme d'onde et schéma de connexion
<ol style="list-style-type: none"> <li>1. Rechercher l'adresse 15,000 de GGV1003 et geler l'image.</li> <li>2. Xch: Connecter la résistance (47 kΩ) au canal et FCS IN. Ych: Connecter à FCS ERR.</li> <li>3. Connecter l'oscillateur AF entre Xch et la résistance de 47 kΩ, et régler VR604 pour que la figure Lissajous soit symétrique.</li> </ol>	 <p>Régler de façon que la figure Lissajous soit symétrique.</p>
<ol style="list-style-type: none"> <li>1. Xch: Connecter la résistance de 47 kΩ au canal et TRK IN. Ych: Connecter à TRK ERR.</li> <li>2. Connecter l'oscillateur AF entre Xch et la résistance de 47 kΩ. Noter l'angle d'inclinaison par rapport à la ligne horizontale avec le disque en mode arrêt.</li> <li>3. Rechercher l'adresse 15,000 de GGV1003 et geler l'image.</li> <li>4. Placer en mode de lecture (avec l'asservissement TRK fermé, l'inclinaison ON). Régler VR603 de pour que l'angle d'inclinaison de la forme d'onde soit la même que l'angle notée à l'étape 3.</li> </ol>	 <p>Régler de façon que la figure Lissajous soit symétrique.</p>
<ol style="list-style-type: none"> <li>1. Rechercher l'adresse 15,000 de GGV1003 et geler l'image. Observer RF du CH1 sur l'oscilloscope.</li> <li>2. Régler VR601 pour que l'amplitude RF soit 300mV ± 50mVc-c.</li> </ol>	
<p>Régler la fréquence de l'horloge (17,734475 MHz) ± 100Hz.</p>	
<p>Régler la mise au point sur 3,5546875 MHz ± 25Hz.</p>	
<p>Placer la détente dans le CH1 et régler de façon que le centre d'instabilité (jitter) de signal vidéo du CH2 soit 75 μsec (1H + 11 μsec) ± 2 μsec par rapport au signal vidéo du CH2.</p>	
<p>Connecter la résistance de 75 Ω à la borne de sortie vidéo (peut-être en connectant au moniteur) et régler de façon que la pointe de synchronization du niveau du signal blanc de 100% soit 1Vc-c ± 5%.</p>	

	Réglage	Point de réglage	Equipement de mesure et calibre	Point de mesure	Etat du lecteur
15	Réglage du niveau vidéo avec retard 1H	VR441	<ul style="list-style-type: none"> <li>• Oscilloscope</li> <li>• GGV1007</li> </ul>	CH1: Câble C443 CH2: Câble C445	<ul style="list-style-type: none"> <li>• Mode normal</li> <li>• GGV1007</li> <li>#5,300 STILL</li> </ul>
16	Réglage du niveau d'erreur VPS	VR521	<ul style="list-style-type: none"> <li>• Moniteur TV</li> <li>• GGV1007</li> </ul>	Moniteur TV	<ul style="list-style-type: none"> <li>• Mode normal</li> <li>• GGV1007</li> <li>#6,100 à #6,750 PLAY (Ecran magenta)</li> </ul>
17	Réglage du niveau vidéo MOD	VR102	<ul style="list-style-type: none"> <li>• Oscilloscope</li> <li>• GGV1007</li> </ul>	CH1: Câble C118 CH2: Câble C122	<ul style="list-style-type: none"> <li>• Mode normal</li> <li>• GGV1007</li> <li>#5,300 STILL</li> </ul>
18	Réglage du sous-porteuse avec retard 1H	VR101	<ul style="list-style-type: none"> <li>• Oscilloscope</li> <li>• GGV1007</li> </ul>	CH1: Câble C118 CH2: Câble C122	<ul style="list-style-type: none"> <li>• Mode normal</li> <li>• GGV1007</li> <li>#5,100 STILL</li> </ul>

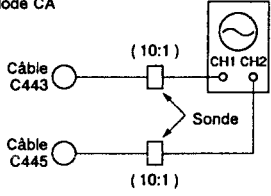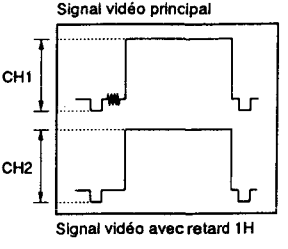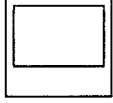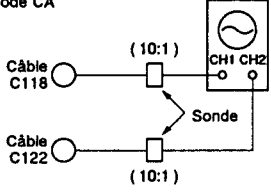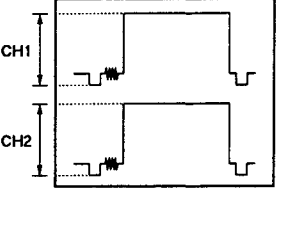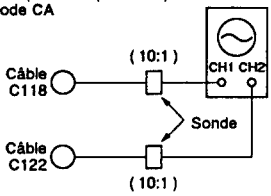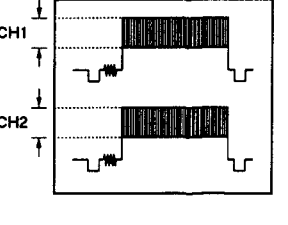Procédure de réglage	Forme d'onde et schéma de connexion
<p>Régler de façon que les niveaux de la pointe de synchronisation du niveau du signal blanc (100%) pour les CH1 et CH2 soient les mêmes.</p>	<p>V:20mV/div (CH1) 20mV/div (CH2) H:10 μsec/div (Trigger) Mode CA</p>  
<p>Régler de façon que l'irrégularité sur l'écran magenta soit minimisée.</p>	 <p>L'irrégularité sur l'écran magenta est minimisée.</p>
<p>Régler de façon que les niveaux de la pointe de synchronisation du signal de blanc (100%) pour les CH1 et CH2 soient les mêmes.</p>	<p>V:20mV/div (CH1) 20mV/div (CH2) H:10 μsec/div Mode CA</p>  
<p>Régler de façon que les niveaux du signal chroma du signal magenta pour les CH1 et CH2 soient les mêmes.</p>	<p>V:20mV/div (CH1) 20mV/div (CH2) H:10 μsec/div (Défente) Mode CA</p>  


## 5. AJUSTES

### 5.1 PRELIMINARIOS

#### ● Instrumentos de Los Ajustes

- Disco de prueba de CD (STD - 901 o STD - 902)
- Disco de prueba de LD (GGV1003 o GGV1007)
- Destornillador con la cabeza de (-) (medio)
- Destornillador con la cabeza de (-) (pequeño)
- Llave inglesa hexagonal (tipo recto, tamaño: 3mm)
- Resistores ( $10k\Omega \times 2$ ,  $47k\Omega$ )
- Osciloscopio de traza doble (con retraso)
- Oscilador de AF
- Contador de frecuencia
- Monitor de TV
- Filtro de paso bajo

Use los filtros de paso bajo como se ven abajo en el procedimiento de ajuste aproximado del centrado 2., y en el procedimiento de ajuste fino del centrado 6., cuando es difícil observar la forma de onda del señal y ruido.

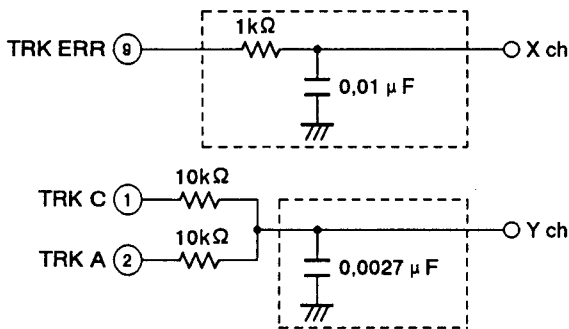

#### ● Montaje de Armario Durante el Ajuste del Centrado

La posición de S - IN (sin golpear el taponador) del montaje de armario durante el ajuste del centrado se ilustra abajo.

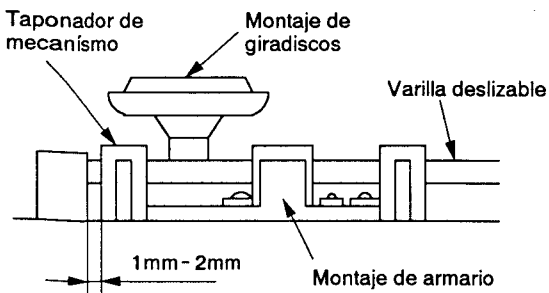


Fig. 1 Vista desde el lado derecho

#### ● Puntos de Ajuste


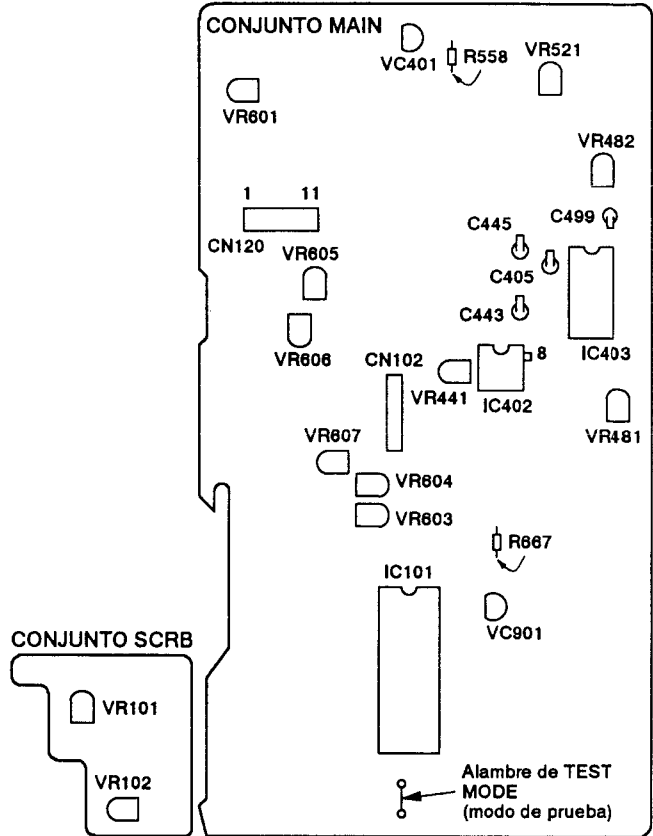


Fig. 2 Sección de los conjuntos MAIN y SCRB

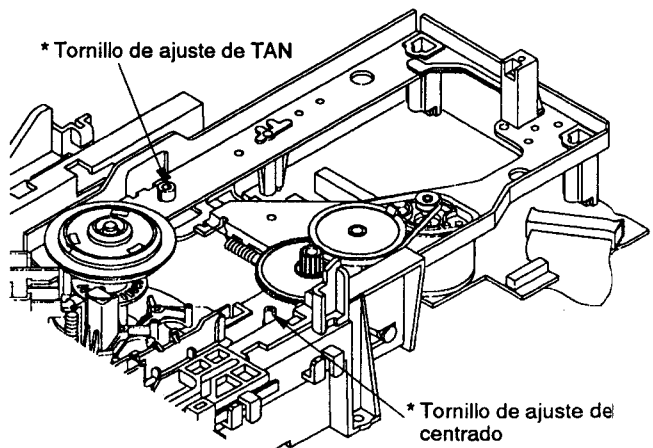

\* : Porque la gama de ajuste de los tornillos de TAN y del centrado es solamente  $\pm 90$  grados. No haga girar los tornillos más allá de esta gama desde el centro.

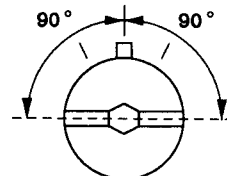


Fig. 3 Sección de la base de inclinación

## ● Modo de Prueba

### 1) Para activar el modo de prueba

1. Mientras que se alimenta, conecte el alambre (Figura 2) a GND por aproximadamente 1 segundo.
2. Después de comprobar que la pantalla está completamente encendida, desconecte el alambre desde GND.

### 2) Para cancelar el modo de prueba

1. Desconecte la alimentación.

## ● Operaciones de las teclas en el modo de prueba

Condición del reproductor	Operación de las teclas	Funcionamiento	Notas
La bandeja abierta	◀◀/▶▶  SKIP ( Refiérase a nota 1. )	◀◀: Mueve la bandeja en la dirección cerrada y levanta el giradiscos cuando está bajado. ▶▶: Mueve la bandeja en la dirección abierta y baja el giradiscos cuando está bajado.	
La bandeja abierta	▶ Avance	Sujetador	
Sujetador	▶ Avance	Haga girar el disco a través del servo TRK Abierto	TRK - OFF
El servo de TRK abierto	▶ Avance	Servo TRK Cerrado	TRK - ON
La inclinación neutral	+MULTI - SPEED	Servo TILT Cerrado	T-□:ON
TILT ON	- MULTI - SPEED	Neutral TILT	T-□:N
TILT Neutral u ON	◀◀/▶▶  SKIP	Ponga el servo TILT en OFF, y se moverá TILT.	T - 1 a T - E
Sujetador	◀◀/▶▶ SCAN	Puede forzar el sujetador a mover.	S - LD S - CDV S - CD S - IN
Avance	PAUSE	Pausa	
Avance	■ STOP	Parada	
Parada	▲ OPEN	Abierto	
Avance	<div style="text-align: center;"> <span style="border: 1px solid black; padding: 2px;">+10</span>            ↓  <span style="border: 1px solid black; padding: 2px;">0</span> a <span style="border: 1px solid black; padding: 2px;">9</span>            ↓  <span style="border: 1px solid black; padding: 2px;">▶ PLAY</span> </div>	Ponga en el modo de entrada de domicilio de SEARCH.  Indique el alambre de domicilio de SEARCH con las teclas 0 a 9. Presione la tecla <span style="border: 1px solid black; padding: 2px;">C</span> CLEAR si es incorrecto el domicilio designado.  Busca el domicilio designado al presionar la tecla PLAY.	


Nota 1: Presione las teclas SKIP (|◀◀/▶▶|) después de que la bandeja esté en el estado abierto por presionando la tecla OPEN (▲). En el estado abierto de la bandeja, si se presiona la tecla PLAY (▶) se cambia en el estado del control de TILT y las teclas SKIP no funcionan correctamente.

● **Operacion del Reproductor en el Modo de Prueba**

Después de seleccionar el modo de prueba, maneje las teclas sobre el reproductor o sobre la unidad de control remoto.

● **REPRODUCCION DE UN DISCO COMPACTO**

- ① Ponga un disco compacto sobre el giradiscos.

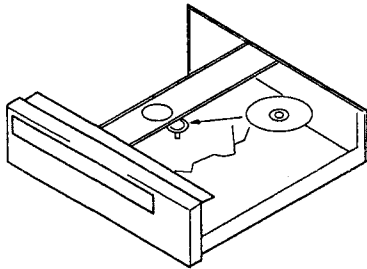

- ② Presione la tecla PLAY (▶) una vez.  
(El piñon gemelo se pone en marcha.)
- ③ Empuje el plato de leva en la dirección de la flecha y espere hasta que se enganche el disco compacto.


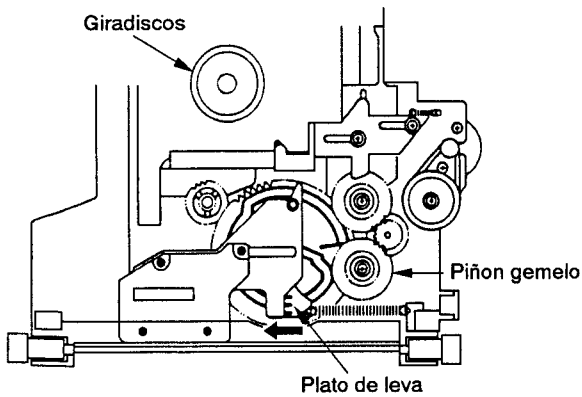


Fig. 4


- ④ Presione la tecla ◀◀ o ▶▶ hasta que se muestre la visualización "S - CD" en la pantalla.
- ⑤ Presione la tecla PLAY (▶) y el disco se reproducirá normalmente.

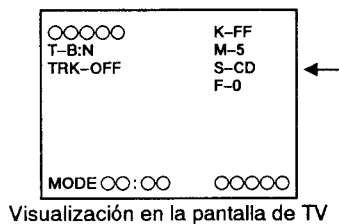


Visualización en la pantalla de TV

● **REPRODUCCION DE UN DISCO LASERICO**

- ① Ponga un disco lasérico sobre el giradiscos.

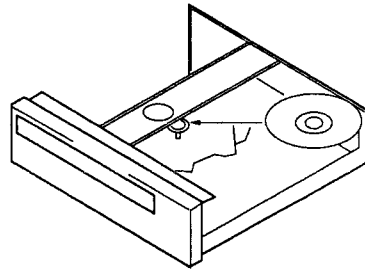

- ② Presione la tecla PLAY (▶) una vez.  
(El piñon gemelo se pone en marcha.)
- ③ Presione la tecla SKIP REV (◀◀) para levantar el giradiscos (sección del motor de eje) mientras que presiona el plato de leva (Fig. 4) en la dirección de la flecha. Levántelo en la posición en la que se pone el disco fácilmente sobre el giradiscos.  
Si se pone el giradiscos demasiado arriba, rebájelo con la tecla SKIP FWD (▶▶).
- ④ Ponga el disco lasérico sobre el giradiscos y presione la tecla PLAY (▶) una vez para enganchar el disco.
- ⑤ Presione la tecla ◀◀ o ▶▶ hasta que la visualización "S - LD" se muestre en la pantalla.









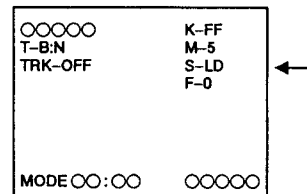


Visualización en la pantalla de TV

- ⑥ Presione la tecla PLAY (▶) dos veces, y el disco se reproducirá normalmente.



5.2 TABLA DE LOS AJUSTES

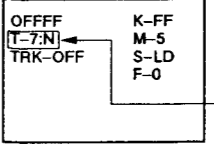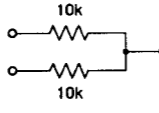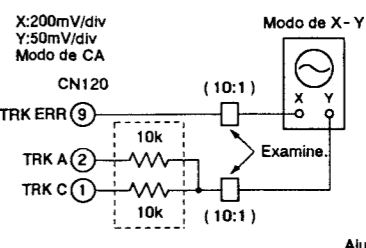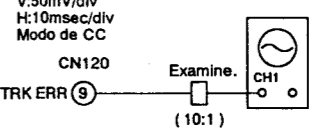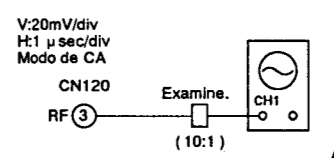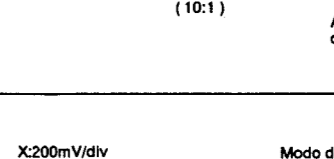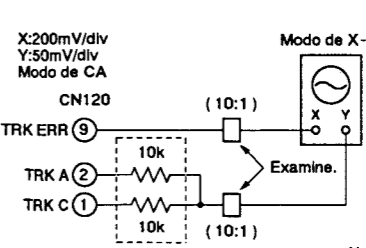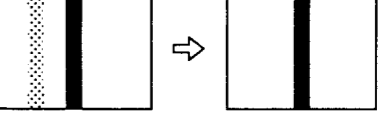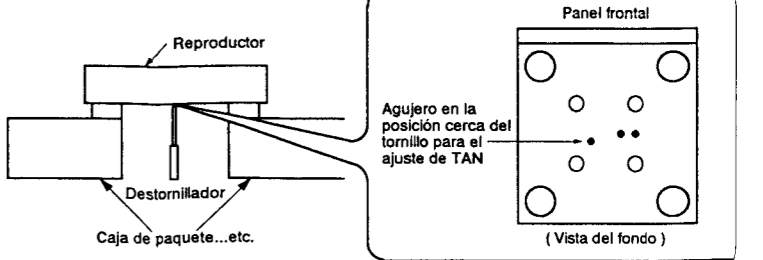	Nombre de ajuste	Punto de ajuste	Equipo y instrumento de medida	Punto de medida	Estado del giradiscos	Procedimiento de ajuste	Forma de onda y diagrama de conexión
1	Comprobación y ajuste de desviación de inclinación	VR607	• Monitor de TV	Indicación de inclinación en la pantalla del modo de prueba	• Alimentación ON • Modo de prueba • No se instala el disco.	<ol style="list-style-type: none"> <li>1. Compruebe que la indicación sobre la pantalla del modo de prueba está en T-6 a T-8.</li> <li>2. Si la indicación no se quede en T-6 a T-8, ajuste VR607 hasta que la indicación de inclinación alcance a T-6 a T-8.</li> </ol>	
2	Ajuste aproximado del centrado	Tornillo de ajuste del centrado de base de inclinación	<ul style="list-style-type: none"> <li>• Osciloscopio</li> <li>• STD-901 o STD-902</li> <li>• Resistor de MIX</li> </ul> 	CN120 X: ③ Clavija ( TRK ERR ) Y: ① + ② Clavija ( TRK SUM )	<ul style="list-style-type: none"> <li>• Modo de comprobación</li> <li>• Servo de TRK: Abierto</li> <li>• Servo de inclinación: ON</li> <li>• Pista más interior de STD-901 o STD-902 que no se toca al taponador</li> </ul>	<ol style="list-style-type: none"> <li>1. Mueva el deslizador hasta que no toque al taponador mecánico en la posición indicada como S-IN.</li> <li>2. Observe TRK ERR (canal X) y TRK SUM (canal Y) en el modo de X-Y mientras que está abierto el servo de TRK.</li> <li>3. Haga girar el tornillo para el ajuste del centrado hasta que la figura de Lissajous esté horizontal.</li> </ol>	 <p>Ajuste hasta que la figura de Lissajous esté horizontal.</p>
3	Ajuste de equilibrio de foco (1) TRK ERR MAX	VR605	<ul style="list-style-type: none"> <li>• Osciloscopio</li> <li>• STD-901 o STD-902</li> </ul>	CN120 ③ Clavija ( TRK ERR )	<ul style="list-style-type: none"> <li>• Modo de prueba</li> <li>• Servo de TRK: Abierto</li> <li>• Servo de inclinación: ON</li> <li>• Pista más interior de STD-901 o STD-902</li> </ul>	<ol style="list-style-type: none"> <li>1. Observe TRK ERR en CH1 del osciloscopio mientras que está abierto el servo de TRK.</li> <li>2. Ajuste VR605 hasta que la forma de onda de la amplitud alcance a su máxima.</li> </ol>	 <p>Ajuste hasta que la amplitud alcance a su máxima.</p>
4	Ajuste de equilibrio de foco (2) RF MAX	VR606	<ul style="list-style-type: none"> <li>• Osciloscopio</li> <li>• STD-901 o STD-902</li> </ul>	CN120 ③ Clavija ( RF )	<ul style="list-style-type: none"> <li>• Modo de prueba</li> <li>• Servo de TRK: Cerrado</li> <li>• Servo de inclinación: ON</li> <li>• Pista más interior de STD-901 o STD-902</li> </ul>	<ol style="list-style-type: none"> <li>1. Cierre el servo de TRK y observe RF en CH1 del osciloscopio.</li> <li>2. Ajuste VR606 hasta que la forma de onda de la amplitud alcance a su máxima y se quede muy clara la cubierta.</li> </ol>	 <p>Ajuste hasta que la amplitud alcance y la cubierta se quede muy clara.</p>
5	Ajuste del ángulo del sentido tangencial	Tornillo de ajuste de TAN de la base de inclinación	<ul style="list-style-type: none"> <li>• Osciloscopio</li> <li>• STD-901 o STD-902</li> </ul>	CN120 ③ Clavija ( RF )	<ul style="list-style-type: none"> <li>• Modo de prueba</li> <li>• Servo de TRK: Cerrado</li> <li>• Servo de inclinación: ON</li> <li>• Pista más interior de STD-901 o STD-902</li> </ul>	<ol style="list-style-type: none"> <li>1. Observe RF en CH1 del osciloscopio mientras que está cerrado el servo de TRK.</li> <li>2. Ajuste el tornillo para el ajuste de TAN hasta que la forma de onda de la amplitud alcance a su máxima y se quede muy clara la cubierta.</li> </ol>	 <p>Ajuste hasta que la amplitud alcance y la cubierta se quede muy clara.</p>
6	Ajuste fino del centrado	Tornillo de ajuste del centrado de base de inclinación	<ul style="list-style-type: none"> <li>• Osciloscopio</li> <li>• STD-901 o STD-902</li> </ul>	CN120 X: ③ Clavija ( TRK ERR ) Y: ① + ② Clavija ( TRK SUM )	<ul style="list-style-type: none"> <li>• Modo de prueba</li> <li>• Servo de TRK: Abierto</li> <li>• Servo de inclinación: ON</li> <li>• Pista más interior de STD-901 o STD-902 que no toca al taponador</li> </ul>	<p>Haga el ajuste fino del centrado siguiendo el procedimiento mismo que se explica en la sección "(2) Ajuste aproximado del centrado".</p>	 <p>Ajuste hasta que la figura de Lisajous esté horizontal.</p>
7	Comprobación de diafonía y ajuste de desviación de inclinación	VR607	<ul style="list-style-type: none"> <li>• Monitor de TV</li> <li>• GGV1003</li> </ul>	Pantalla de comprobación de diafonía	<ul style="list-style-type: none"> <li>• Modo de prueba</li> <li>• Servo de TRK: Cerrado</li> <li>• Servo de inclinación: ON</li> <li>• GGV1003</li> <li>• Número 115 STILL</li> </ul>	<ol style="list-style-type: none"> <li>1. Busque el domicilio 115 de GGV1003 y establézcalo.</li> <li>2. Compruebe la diafonía. Si la diafonía está pronunciada, ajuste VR607 hasta que la diafonía no esté notable.</li> </ol>	 <p>Si la diafonía está pronunciada, ajústela hasta que no esté notable.</p>
7	<p>Cuando la diafonía todavía está notable aun después del ajuste en (7), use una llave inglesa hexagonal (tipo recto, tamaño: 3mm) para ajustar el tornillo para el ajuste de TAN situado en el fondo del reproductor observando la pantalla de GGV1003 número 115 STILL. Después, haga los procedimientos desde (6).</p>					 <p>Reproductor Destornillador Caja de paquete...etc. Panel frontal Agujero en la posición cerca del tornillo para el ajuste de TAN ( Vista del fondo )</p>	

	Nombre de ajuste	Punto de ajuste	Equipo y instrumento de medida	Punto de medida	Estado del giradiscos	Procedimiento de ajuste	Forma de onda y diagrama de conexión
8	Ajuste de la ganancia del bucle de servo de foco	VR604	<ul style="list-style-type: none"> <li>Osciloscopio</li> <li>GGV1003</li> <li>Oscilador de AF</li> <li>Resistor (47kΩ)</li> </ul>	CN120 X: ⑦ Clavija ( FCS IN ) Y: ⑥ Clavija ( FCS ERR )	<ul style="list-style-type: none"> <li>Modo de prueba</li> <li>Servo de TRK: Cerrado</li> <li>Servo de inclinación: ON</li> <li>GGV1003</li> <li>Número 15000 STILL</li> </ul>	<ol style="list-style-type: none"> <li>Busque el domicilio 15000 de GGV1003 y establézcalo.</li> <li>Canal X: Conecte el resistor (47 kΩ) al canal y a FCS IN. Canal Y: Conecte a FCS ERR.</li> <li>Conecte el oscilador AF entre el canal X y el resistor de 47 kΩ, y ajuste VR604 hasta que la figura de Lissajous esté simétrica.</li> </ol>	<p>X:200mV/div Y:20mV/div Modo de CC</p> <p>Modo de X-Y</p> <p>Ajuste hasta que la figura de Lissajous esté simétrica.</p>
9	Ajuste de la ganancia del bucle de servo de seguimiento	VR601	<ul style="list-style-type: none"> <li>Osciloscopio</li> <li>GGV1003</li> <li>Oscilador de AF</li> <li>Resistor (47kΩ)</li> </ul>	CN120 X: ⑩ Clavija ( TRK IN ) Y: ⑨ Clavija ( TRK ERR )	<ul style="list-style-type: none"> <li>Modo de prueba</li> <li>Modo de parada o Servo de TRK: Cerrado</li> <li>Servo de inclinación: ON</li> <li>GGV1003</li> <li>Número 15000 STILL</li> </ul>	<ol style="list-style-type: none"> <li>Canal X: Conecte el resistor de 47 kΩ y a TRK IN. Canal Y: Conecte a TRK ERR.</li> <li>Conecte el oscilador de AF entre el canal X y el resistor de 47 kΩ y anote el ángulo de inclinación hasta la línea horizontal en el estado de parada.</li> <li>Busque el domicilio 15000 de GGV1003 y establézcalo.</li> <li>Ponga en el modo de PLAY (Servo de TRK cerrado, y TILT ON.) Ajuste VR603 para que el ángulo de inclinación de la forma de onda esté mismo que el ángulo de inclinación anotado en el procedimiento 3.</li> </ol>	<p>X:200mV/div Y:10mV/div Modo de CC</p> <p>Modo de X-Y</p> <p>Ajuste hasta que la figura de Lissajous esté simétrica.</p>
10	Ajuste del nivel de RF	VR601	<ul style="list-style-type: none"> <li>Osciloscopio</li> <li>GGV1003</li> </ul>	CN120 ③ Clavija ( RF )	<ul style="list-style-type: none"> <li>Modo de prueba</li> <li>Servo de TRK: Cerrado</li> <li>Servo de inclinación: ON</li> <li>GGV1003</li> <li>Número 15000 STILL</li> </ul>	<ol style="list-style-type: none"> <li>Busque el domicilio 15000 de GGV1003 y establézcalo. Observe RF en CH1 del osciloscopio.</li> <li>Ajuste VR601 hasta que la amplitud de RF esté 300 mV ± 50mVp-p.</li> </ol>	<p>V:10mV/div H:2msec/div Modo de CA</p> <p>300mVp-p ± 50mV</p>
11	Ajuste del reloj degenerador para la señal sincrónica	VC401	<ul style="list-style-type: none"> <li>Contador de frecuencia</li> </ul>	R558 Alambre de conducción (No el lado de conexión)	<ul style="list-style-type: none"> <li>Alimentación ON</li> <li>Modo de parada</li> </ul>	Ajuste la frecuencia del reloj ( 17.734475MHz ) ± 100Hz.	<p>Contador de frecuencia</p>
12	Ajuste de REF-H	VC901	<ul style="list-style-type: none"> <li>Contador de frecuencia</li> </ul>	R667 Alambre de conducción ( IC601 ( PM3002 ) ⑧ Lado de clavija )	<ul style="list-style-type: none"> <li>Alimentación ON</li> <li>Modo de parada</li> </ul>	Ajuste FCS (3.5546875 MHz) ± 25 Hz.	<p>Contador de frecuencia</p>
13	Ajuste de frecuencia central de VCO	VR481	<ul style="list-style-type: none"> <li>Osciloscopio</li> <li>GGV1007</li> </ul>	CH1: C405 Alambre de conducción CH2: C499 Alambre de conducción	<ul style="list-style-type: none"> <li>Modo normal</li> <li>GGV1007</li> <li>Número 15000 STILL</li> </ul>	Ponga un gatillo en el canal 1 y ajuste hasta que el centro de la fluctuación de la señal del canal 2 esté 75 μ segundo (1H + 11 ± segundo) ± 2 μ segundo comparado con la señal de video del canal 1.	<p>V:20mV/div ( CH1 ) 20mV/div ( CH2 ) H:10 μ sec/div ( Gatillo ) Modo de CA</p> <p>11 μ S 75 μ S</p> <p>"Jitter" causado por excentricidad</p>
14	Ajuste del nivel de video	VR482	<ul style="list-style-type: none"> <li>Monitor de TV</li> <li>Osciloscopio</li> <li>GGV1007</li> </ul>	Terminal de la salida de video	<ul style="list-style-type: none"> <li>Modo normal</li> <li>GGV1007</li> <li>Números 5251 a 6000 PLAY</li> </ul>	Conecte un resistor de 75 Ω al terminal de salida de VIDEO (posible por conectando al monitor) y ajuste hasta que la microplaqueta sincrónica al nivel blanco de 100 % esté 1 Vp-p 5 % a la señal blanca (100 %).	<p>Salida de video</p> <p>Nivel de video</p> <p>Osciloscopio</p> <p>1.0Vp-p ± 5%</p> <p>Gama de osciloscopio V:20mV/div 10 μ sec/div ( Gatillo ) Modo CA</p> <p>Visualización en la pantalla de TV</p>

	Nombre de ajuste	Punto de ajuste	Equipo y instrumento de medida	Punto de medida	Estado del giradiscos	Procedimiento de ajuste	Forma de onda y diagrama de conexión
15	Ajuste del nivel de video 1H DLY	VR441	<ul style="list-style-type: none"> <li>Osciloscopio</li> <li>GGV1007</li> </ul>	CH1: C443 Alambre de conducción CH2: C445 Alambre de conducción	<ul style="list-style-type: none"> <li>Modo normal</li> <li>GGV1007</li> <li>Número 5300 STILL</li> </ul>	Ajuste hasta que la microplaqueta sincrónica al nivel blanco de 100 % en la señal blanca (100%) esté la misma que en CH1 y CH2.	<p>V:20mV/div ( CH1 )                      20mV/div ( CH2 )                      H:10 μ sec/div ( Gatillo )                      Modo de CA</p>
16	Ajuste del nivel de error de VPS	VR521	<ul style="list-style-type: none"> <li>Monitor de TV</li> <li>GGV1007</li> </ul>	Monitor de TV	<ul style="list-style-type: none"> <li>Modo normal</li> <li>GGV1007</li> <li>Números 6001 a 6750 PLAY (Pantalla majenta)</li> </ul>	Ajuste hasta que la irregularidad en color en la pantalla majenta se disminuya.	<p>La irregularidad en color se disminuya.</p>
17	Ajuste del nivel de video de MOD	VR102	<ul style="list-style-type: none"> <li>Osciloscopio</li> <li>GGV1007</li> </ul>	CH1: C118 Alambre de conducción CH2: C122 Alambre de conducción	<ul style="list-style-type: none"> <li>Modo normal</li> <li>GGV1007</li> <li>Número 5300 STILL</li> </ul>	Ajuste hasta que la microplaqueta sincrónica al nivel blanco de 100% en la señal blanca (100%) esté la misma que en CH1 y CH2.	<p>V:20mV/div ( CH1 )                      20mV/div ( CH2 )                      H:10 μ sec/div                      Modo de CA</p>
18	Ajuste de sub portador con retraso de 1H (hora)	VR101	<ul style="list-style-type: none"> <li>Osciloscopio</li> <li>GGV1007</li> </ul>	CH1: C118 Alambre de conducción CH2: C122 Alambre de conducción	<ul style="list-style-type: none"> <li>Modo normal</li> <li>GGV1007</li> <li>Número 5100 STILL</li> </ul>	Ajuste hasta que la señal de croma en la señal majenta esté misma en CH1 y CH2.	<p>V:20mV/div ( CH1 )                      20mV/div ( CH2 )                      H:10 μ sec/div ( Gatillo )                      Modo de CA</p>

## 6. IC INFORMATION

- The information shown in the list is basic information and may not correspond exactly to that shown in the schematic diagrams.

### 6.1 PD0135A1 (IC101)

#### • Mechanism control IC

#### ● Pin Function

No.	Pin Name	I/O	Function
1	VCC	—	Power supply connection pin. Set to 5V ± 10%.
2	DIRECT	O	CD DIRECT video system power OFF signal output pin "H"=video system power OFF, "L"=ON
3	N.C.	—	Not used.
4	LD ON	O	Laser video ON/OFF switching signal output H: ON, L: OFF
5	TGH	O	Tracking operation control signal output pin The control signal supports ON/OFF of the tracking servo - mechanism operation. "H"=OFF, "L"=ON
6	SLDR POS	I	Pickup position detection switch input pin ( analog signal ) Divides the resistance among the switches, reads the value of the A/D input, and detects the position.
7	FREQ DET	I	RF detection signal input pin ( analog signal ) Inputs the A/D conversion of the RF detection output and is used in the spindle luff servo - mechanism. Voltage and frequency are proportional.
8	TBAL ERR	I	Tracking balance error signal input pin ( analog signal ) Signal is A/D converted and is input as the tracking offset control.
9	TILT ERR	I	Tilt sensor output signal input pin ( analog signal ) Inputs ( 0 to 5V ) the tilt sensor output amplified to a 40 to 50dB signal. The signal is A/D converted and is input as the tilt sensor control. Controls the tilt motor until the signal is 2.5V.
10	CAV	O	CAV/CLV switching signal output pin "H"=CAV, "L"=CLV Connected to pin 6 of PA5013A and used as a VIDEO NR switching signal.
11	GFS	I	CD ( EFM signal ) frame lock signal input pin Connected to pin 12 of the EFM decoder IC: CXD2500AQ. "H"=Lock, "L"=Unlock GFS is an abbreviation for Good Frame Sync.
12	TBAL DRV	O	Tracking offset control signal output pin Outputs the tracking offset after PWM and is used in auto tracking offset. Cycle: 910 μ sec; 3 - value control H, L, Z.
13	SQ2	O	Analog audio switching signal output pin 2/R Squelch: H
14	SQ1	O	Analog audio switching signal output pin 1/L Squelch: H When in digital audio mode, the signal is output through the control of the EFM decoder IC: CXD2500AQ.
15	SI2	I	EFM decoder IC: CXD2500AQ subcode input pin Reads the subcodes of SCK2 and the signal.
16	XLAT2	O	EFM decoder IC: CXD2500AQ control latch signal output pin Sends the control command using SO3 and 2500CLK.
17	SCK2	O	EFM decoder IC: CXD2500AQ subcode read clock signal output pin Sets the clock to 96 and reads the subcode.
18	TILT DRV	O	Tilt control signal output pin Outputs the tilt drive after PWM and is used in tilt servo - mechanism.
19	S-FTOM	I	Input pin of data from the mode control IC Serial Used with the data signal to the carriage generating IC.
20	S-MTOM	O	Serial data output to the mode control IC Serial



No.	Pin Name	I/O	Function
21	SCK1	I/O	Clock for serial communication with the mode control IC In the input mode except during serial communication with the mode control IC Used with the clock signal to the carriage generating IC
22	SENS	I	SENS signal input pin All of the following signals from 2500 are switched and are output to the signal: SEIN, FZC, A.S, TZC, XBUSY, FOK, GFS, COMP, COUT and OV64.
23	SCOR	I	Subcode SYNC signal input pin Inputs the subcode signal from the EFM decoder IC: CXD2500AQ when the signal is "H". Supervises the disc playback depending on the presence of the signal.
24	N.C.	—	Not used.
25	SHAKE	I/O	Pin of hand shake signal for data communication with the mode control IC This pin is a bi-directional data path which sends the data transfer timing through the I/O mode switching of the respective microcomputers.
26	XPBV	I	LD/CDV playback V - SYNC signal input pin IC basically operates in sync hronization ( rising and leading edges ) with the signal. Setting the signal as standard in the special CAV playback mode, generates jump timing. "L"=V - SYNC ongoing
27	CN VSS	—	GND for A/D conversion
28	XRESET	I	Reset signal input pin "L"=Reset, "H"=Cancel reset
29	XTAL IN	I	9MHz clock generation input pin
30	XTAL OUT	O	9MHz clock generation output pin
31	FTS CLK	O	φ external clock output pin Outputs a clock which is one-fourth of the master clock ( 9MHz ) used in the FTS IC: PM3003. 2.25MHz Does not output when using an FTS IC other than PM3003
32	VSS	—	GND
33	SW1	I	Loading/tilt position detection switch input pin
34	SW2	I	Loading/tilt position detection switch input pin
35	SW3	I	Loading/tilt position detection switch input pin
36	N.C.	I	Not used Processing needed when used for input
37	FG	I	Spindle motor - FG signal input pin 24 pulses per signal Divided into thirds and used inside the microcomputer.
38	DATA	I	Input pin for Phillips code decoder in the mechanism controller
39	XPBH	I	Playback H - SYNC input for Phillips code decoder
40	XPBV	I	Playback V - SYNC input for Phillips code decoder
41	GI. MIRR	O	False MIRR signal output pin to jump 1 track for LD.
42	N.C.	—	Not used
43	N.C.	—	Not used
44	MUTE	O	Audio system audio mute control output pin "H"=MUTE ON, "L"=MUTE OFF
45	16:9	O	16:9 switching signal output pin 16:9 "H", 4.3 ( Nomal ) "L"
46	T LATCH	O	DAC & Digital PD2026 serial control latch signal output pin
47	N.C.	—	Not used
48	N.C.	—	Not used
49	N.C.	—	Not used
50	2500CLK	O	2500 command clock signal output pin The commands for 2500 are the following: 2500CLK; SO3 and XLAT2.
51	RFCORR	O	RF correction switching signal output pin "H"=gain up. Increases gain ( # 8000 to # 8100 ) within the CAV.

No.	Pin Name	I/O	Function
52	SCAN CONT	O	TBC control signal output pin H: multi-track jump ongoing, L: others
53	CD	O	CD/LD switching signal output pin H: CD, CDV-A, L: LD, CDV-V
54	ACC CONT	O	Spindle acceleration signal output pin H=acceleration, L=deceleration, Z=CD, stop and play
55	GPWM	O	Spindle gain switching duty pulse signal output pin CLV inner circumference: L, outer circumference: H, CAV: L, CDV: H
56	J. TRIG	O	Track jump signal output pin Used for single track jump H: start of track, L: others, Width of "H": approx. 20 $\mu$ sec
57	SCK3	O	Serial 3 clock signal output pin Reads the leading edge "H"=within 2 $\mu$ sec, "L"=within 20 $\mu$ sec
58	SO3	O	Serial 3 data signal output pin With the serial signal as the common signal, divides the signals into three types of latch signals ( XLAT3, XLAT2 and T LATCH ). LSB first
59	XLATCH3	O	Spindle servo-mechanism IC latch signal output pin
60	J F/R	O	CLV V-SYNC scan mode signal output pin
61	VSQ	O	Video output switching signal output pin "H"=squelch, "L"=playback video
62	XPLAY	I	Usually, held "L" in PLAY mode.
63	N.C.	-	Not used.
64	XSPLOCK	I	Spindle lock signal input pin L: lock, H: unlock

6.2 PD3214A (IC201)

• Mode control IC

● Pin Function

No.	Pin Name	Signal name	I/O	Function
1	PO4/AN4	N.C.	I	Not used
2	PO5/AN5	N.C.	I	Not used
3	PO6/AN6	N.C.	I	Not used
4	PO7/AN7	N.C.	I	Not used
5	AVss	AVss	-	Connected to standard power supply ( Vss ) for A/D conversion
6	TEST	TEST	I	Test pin Connected to Vss
7	X2	X2	O	Subclock Release
8	X1	X1	I	Subclock Connected to Vcc
9	Vss	Vss	-	Ground
10	OSC1	OSC1	I	System clock Connects 8MHz ceramic lock
11	OSC2	OSC2	I	System clock Connects 8MHz ceramic lock
12	$\overline{\text{RESET}}$	$\overline{\text{RESET}}$	I	Reset
13	P10/IRQ0	SHAKE	I/O	Communication timing clock with mechanism control
14	P11/ $\overline{\text{IRP1}}$	SEL IR	I	Remote control signal ( including SR )
15	P12/ $\overline{\text{IRQ2}}$	W.D.F	O	For watchdog timer pulse output 
16	P13/ $\overline{\text{IRQ3}}$	POWER On	O	Power ON  Power OFF
17	P14/IRQ4	N.C.	O	Not used
18	P15/ $\overline{\text{IRQ5}}$	N.C.	O	Not used
19	P16/EVENT	N.C.	I	Not used
20	P33/FS27	N.C.	O	Not used
21	P32/FS26	N.C.	O	Not used
22	P31/FS25	N.C.	O	Not used
23	P30/FS24	STANDBY LED	O	Standby LED drive output
24	P47/FS23	N.C.	O	Not used
25	P46/FS22	N.C.	O	Not used
26	P45/FS21	N.C.	O	Not used
27	P44/FS20	N.C.	O	Not used
28	P43/FS19	seg l/KS3	O	FL segment l output and key scan 3 output
29	P42/FS18	seg k/KS2	O	FL segment k output and key scan 2 output
30	P41/FS17	seg j/KS1	O	FL segment j output and key scan 1 output
31	P40/FS16	seg i/KS0	O	FL segment i output and key scan 0 output
32	P50/FS15	seg h	O	FL segment h output
33	P51/FS14	seg g	O	FL segment g output
34	P52/FS13	seg f	O	FL segment f output
35	P53/FS12	seg e	O	FL segment e output

No.	Pin Name	Signal name	I/O	Function
36	P54/FS11	seg d	O	FL segment d output
37	P55/FS10	seg c	O	FL segment c output
38	P56/FS9	seg b	O	FL segment b output
39	P57/FS8	seg a	O	FL segment a output
40	P17/Vdisp	-30V	-	FL drive power supply
41	P60/FD0/FS7	G9	O	FL grid 9 output
42	P61/FD1/FS6	G8	O	FL grid 8 output
43	P62/FD2/FS5	G7	O	FL grid 7 output
44	P63/FD3/FS4	G6	O	FL grid 6 output
45	P64/FD4/FS3	G5	O	FL grid 5 output
46	P65/FD5/FS2	G4	O	FL grid 4 output
47	P66/FD6/FS1	G3	O	FL grid 3 output
48	P67/FD7/FS0	G2	O	FL grid 2 output
49	P70/FD8	G1	O	FL grid 1 output
50	P71/FD9	N.C.	O	Not used
51	P72/FD10	N.C.	O	Not used
52	P73/FD11	N.C.	O	Not used
53	P74/FD12	N.C.	O	Not used
54	P75/FD13	D.CD LED	O	DIRECT CD LED drive output
55	P76/FD14	S-SCAN	I/O	SHUTTER SCAN output
56	P77/FS15	N.C.	O	Not used
57	Vcc	Vcc	-	Power supply
58	P80	KIN0	I	Key input 0
59	P81	KIN1	I	Key input 1
60	P82	KIN2	I	Key input 2
61	P83	KIN3	I	Key input 3
62	P84	KIN4	I	Key input 4
63	P85	KIN5	I	Key input 5
64	P86	KIN6	I	Key input 6
65	P87	N.C.	-	Not used
66	P90/PWM	SYNCHRO OUT	O	SYNCHRO REC output
67	P91/SCK1	XSCK	I/O	Communication clock with mechanism control/OSD
68	P92/SI1	SI	I	Receive data from mechanism control
69	P93/SO1	SO	O	Send data to mechanism control/OSD
70	P94/SCK2	XRESET	O	RESET output from other than mechanism control/OSD
71	P95/S12/CS	XSC	O	OSD chip select
72	P96/SO2	SYNCHRO IN	I	SYNCHRO REC input
73	P97/UD	1700/700	I	Switching input for 1700/700 H: 1700, L: 700
74	PA0	N.C.	O	Not used
75	PA1	N.C.	O	Not used
76	AVcc	AVcc	-	Connection to Vcc of standard power supply for A/D conversion
77	P00/AN0	N.C.	O	Not used
78	P01/AN1	N.C.	O	Not used
79	P02//AN2	N.C.	O	Not used
80	P03/AN3	N.C.	O	Not used

## 7. FOR CLD - 700 / HEZ AND HB

**NOTES:**

- Parts marked by "NSP" are generally unavailable because they are not in our Master Spare Parts List.
- The  $\Delta$  mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
- Parts marked by "⊙" are not always kept in stock. Their delivery time may be longer than usual or they may be unavailable.

### CONTRAST OF MISCELLANEOUS PARTS

CLD - 700 / HEZ, HB and CLD - 1700 / HEZ have the same construction except for the following:

Mark	Symbol & Description	Part No.			Remarks
		CLD - 1700 / HEZ	CLD - 700 / HEZ	CLD - 700 / HB	
⊙	MOTHER assembly	VWM1276	VWM1264	VWM1264	
NSP	MAIN assembly	VWX1123	VWX1116	VWX1116	
NSP	AUDIO assembly	VWX1124	VWX1117	VWX1117	
⊙	FLKB assembly	VWM1278	VWM1277	VWM1277	
NSP	FLKY assembly	VWG1336	VWG1335	VWG1335	
NSP	HEPB assembly	VWV1254	.....	.....	
⊙	SYPS assembly	VWR1146	VWR1146	VWR1147	
⊙	SCRB assembly	VWV1248	VWV1255	VWV1255	
$\Delta$	AC power cord	VDG1028	VDG1028	VDG1029	
	Euro scart cable	VDE1027	.....	.....	
	Video cable	.....	VDE-056	VDE-056	
NSP	Packing case	VHG1228	VHG1226	VHG1226	
	Rear panel	VNA1278	VNA1276	VNA1277	
	Snap plate	VNE1102	.....	.....	
	Jack holder	VNE1811	.....	.....	
	Volume knob	VNK2003	.....	.....	
	Operating instructions ( English / French / German / Italian )	VRE1010	VRE1011	.....	
	Operating instructions ( Dutch / Swedish / Spanish / Portuguese )	VRF1017	VRF1018	.....	
	Operating instructions ( English )	.....	.....	VRB1071	
	Front panel assembly	VXA1867	VXA1866	VXA1866	
	Remote control unit (CU-CLD077)	VXX1758	.....	.....	
	Remote control unit (CU-CLD072)	.....	VXX1751	VXX1751	
	Battery cover	VNK1293	PZN1010	PZN1010	
NSP	Caution card ( UC )	.....	.....	VRM1026	
NSP	Caution card ( EW )	VRM1027	VRM1027	.....	

### LIST OF ASSEMBLIES (FOR CLD-700/HEZ AND HB)

- FLKB assembly
  - └ PSWB assembly
  - └ FLKY assembly





**SCRB assembly**

VW1255 and VW1248 have the same construction except for the following:

Mark	Symbol & Description	Part No.		Remarks
		VW1248	VW1255	
	IC101	TC74HC74AP	.....	
	IC102	TC74HC00AP	.....	
	IC103	BU4053B	.....	
	Q101-Q110	2SC1740S	.....	
	L101, L102	LFA120K	.....	
	L103, L104	LAU8R2J	.....	
	L105	LAU330J	.....	
	F101	VTF1034	.....	
	F102	VTF1011	.....	
	C101, C103, C120-C123, C126, C127, C129, C158	CEAS470M10	.....	
	C102, C104-C108, C111, C112, C125, C128, C130	CKPUYY103N16	.....	
	C109	CCCCH100D50	.....	
	C110	CCCCH270J50	.....	
	C113, C114	CKCYB681K50	.....	
	C117-C119	CEANP220M10	.....	
	C155	CEAS100M50	.....	
	VR101	VRTB6VS471	.....	
	VR102	VRTB6VS472	.....	
	R101, R102, R124, R125, R127	RD1/6PM102J	.....	
	R103, R107, R118, R122, R130	RD1/6PM101J	.....	
	R104, R108, R110, R111, R119, R123, R131	RD1/6PM222J	.....	
	R105, R106	RD1/6PM391J	.....	
	R109	RD1/6PM122J	.....	
	R112, R113, R120, R121	RD1/6PM223J	.....	
	R114	RD1/6PM333J	.....	
	R115	RD1/6PM153J	.....	
	R116, R117	RD1/6PM471J	.....	
	R126	RD1/6PM561J	.....	
	R128, R132-R134	RD1/6PM472J	.....	
	R129	RD1/6PM221J	.....	
	R135	RD1/6PM470J	.....	
	R136, R137	RD1/6PM121J	.....	
	R138	RD1/6PM2R2J	.....	
	DL101	DTF1033	.....	

**FLKY assembly**


Although VWG1335 and VWG1336 are different in part number, they consist of the same components.

**SYPS assembly**

Although VWR1147 and VWR1146 are different in part number, they consist of the same components.


## 8. CONNECTIONS

### USING TELEVISION WITH AUDIO AND VIDEO JACKS

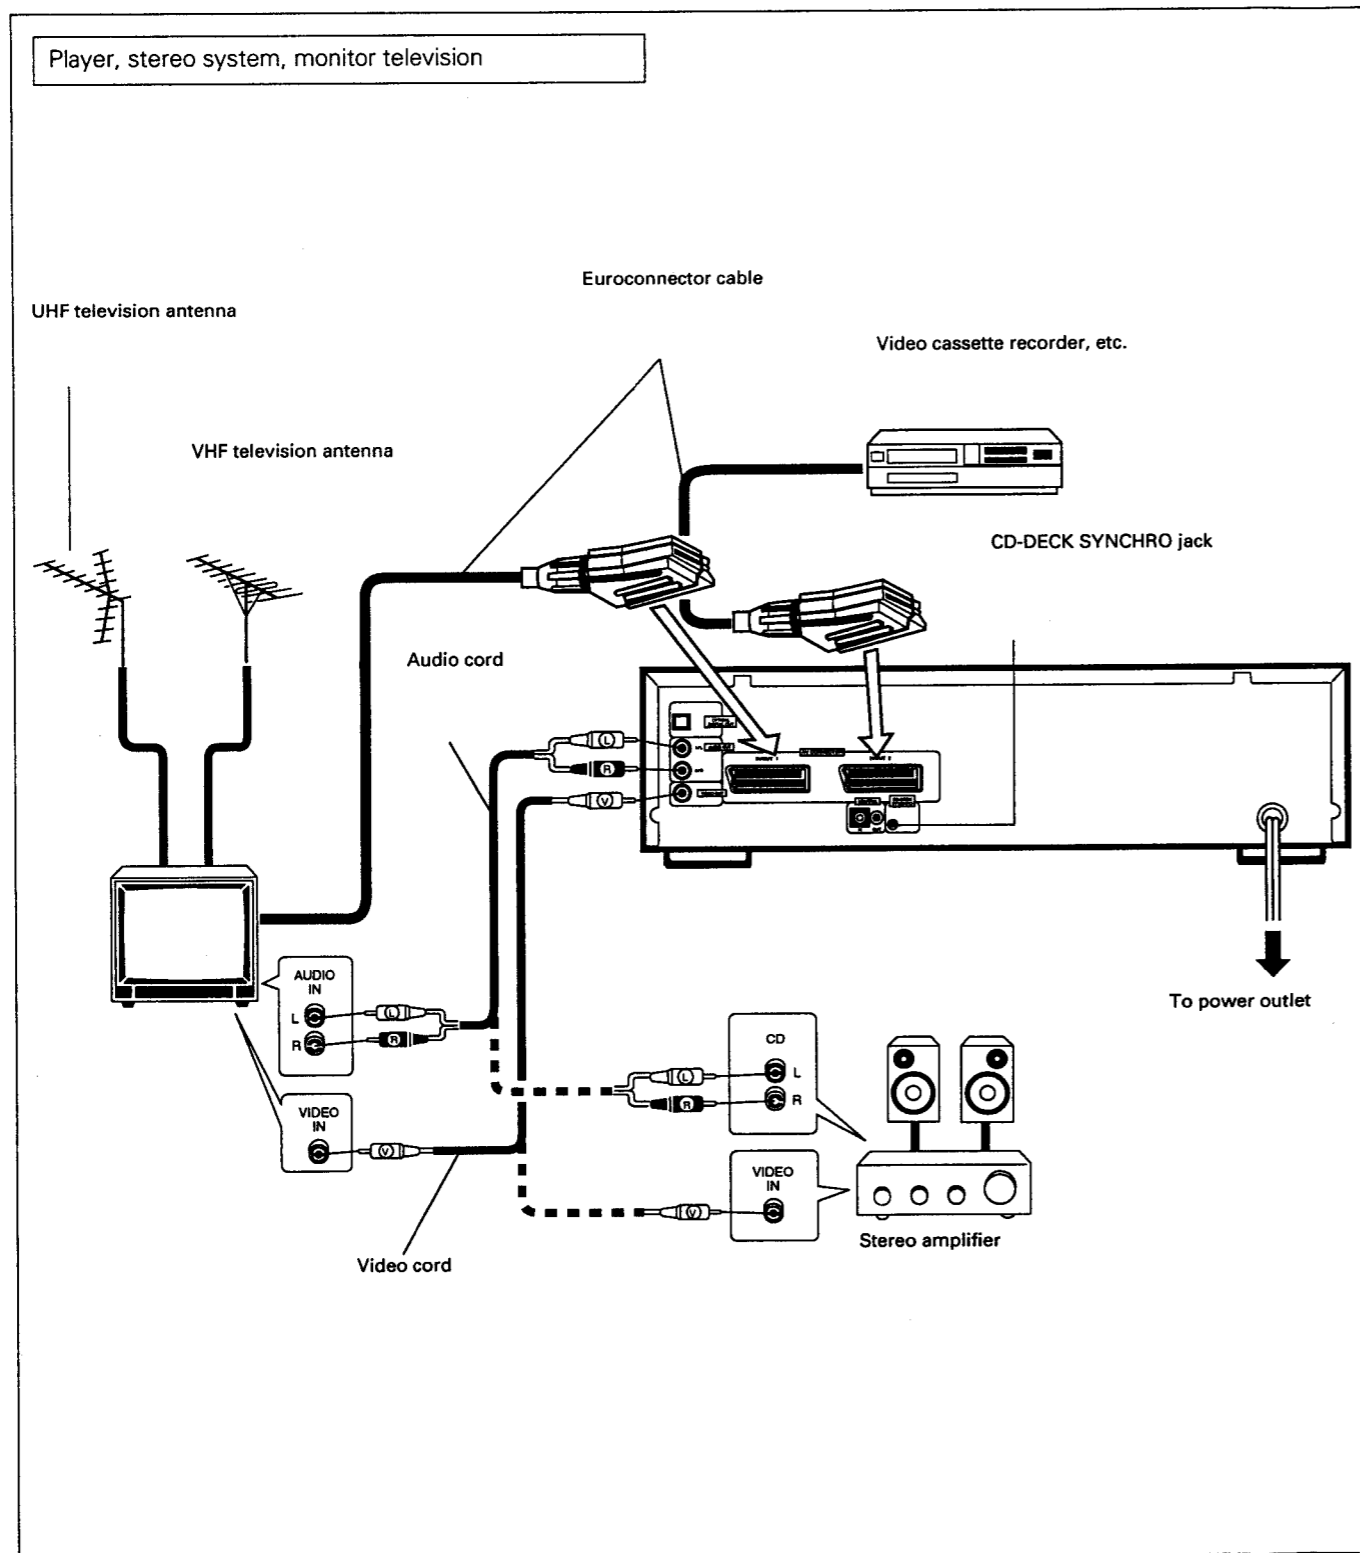


- Connect the VIDEO OUT jack of the player to the video input jack of the monitor television.
- Connect the AUDIO OUT jacks to the stereo amplifier AUX, CD, LD, VDP or other jacks, except the PHONO input jacks. The television speakers can also be used by connecting the television audio input jacks and the player AUDIO OUT jacks, however connection to a stereo amplifier is recommended to obtain superior audio playback quality for Compact Discs and LaserVision Discs. Do not change the television antenna connections.
- When using a video TV monitor (or TV) with AV CONNECTOR terminal, connect the AV CONNECTOR terminal to the AV CONNECTOR IN/OUT terminal of the player. Use supplied Euroconnector cable.
- Connect the power cord to an AC wall outlet.
- Combined system control is possible when a Pioneer television and audio/video stereo receiver are connected. Refer to page 28 for an explanation of the connection procedure.
- When making connections to stereo amplifier equipped with a built-in D/A converter and an optical digital jack, refer to the connection instructions.
- When using a video cassette recorder with AV CONNECTOR terminal, connect the AV CONNECTOR terminal to the AV CONNECTOR IN/OUT terminal of the player. When a TV has been connected to the player using the AV CONNECTOR terminal and the power cord is plugged to an AC outlet, signals from the video cassette recorder are fed to the TV set via the player while the player is turned off.
- When using wide aspect type TV (16:9), be sure to connect the AV CONNECTOR terminal to the AV CONNECTOR IN/OUT terminal of the player.

## 9. PANEL FACILITIES

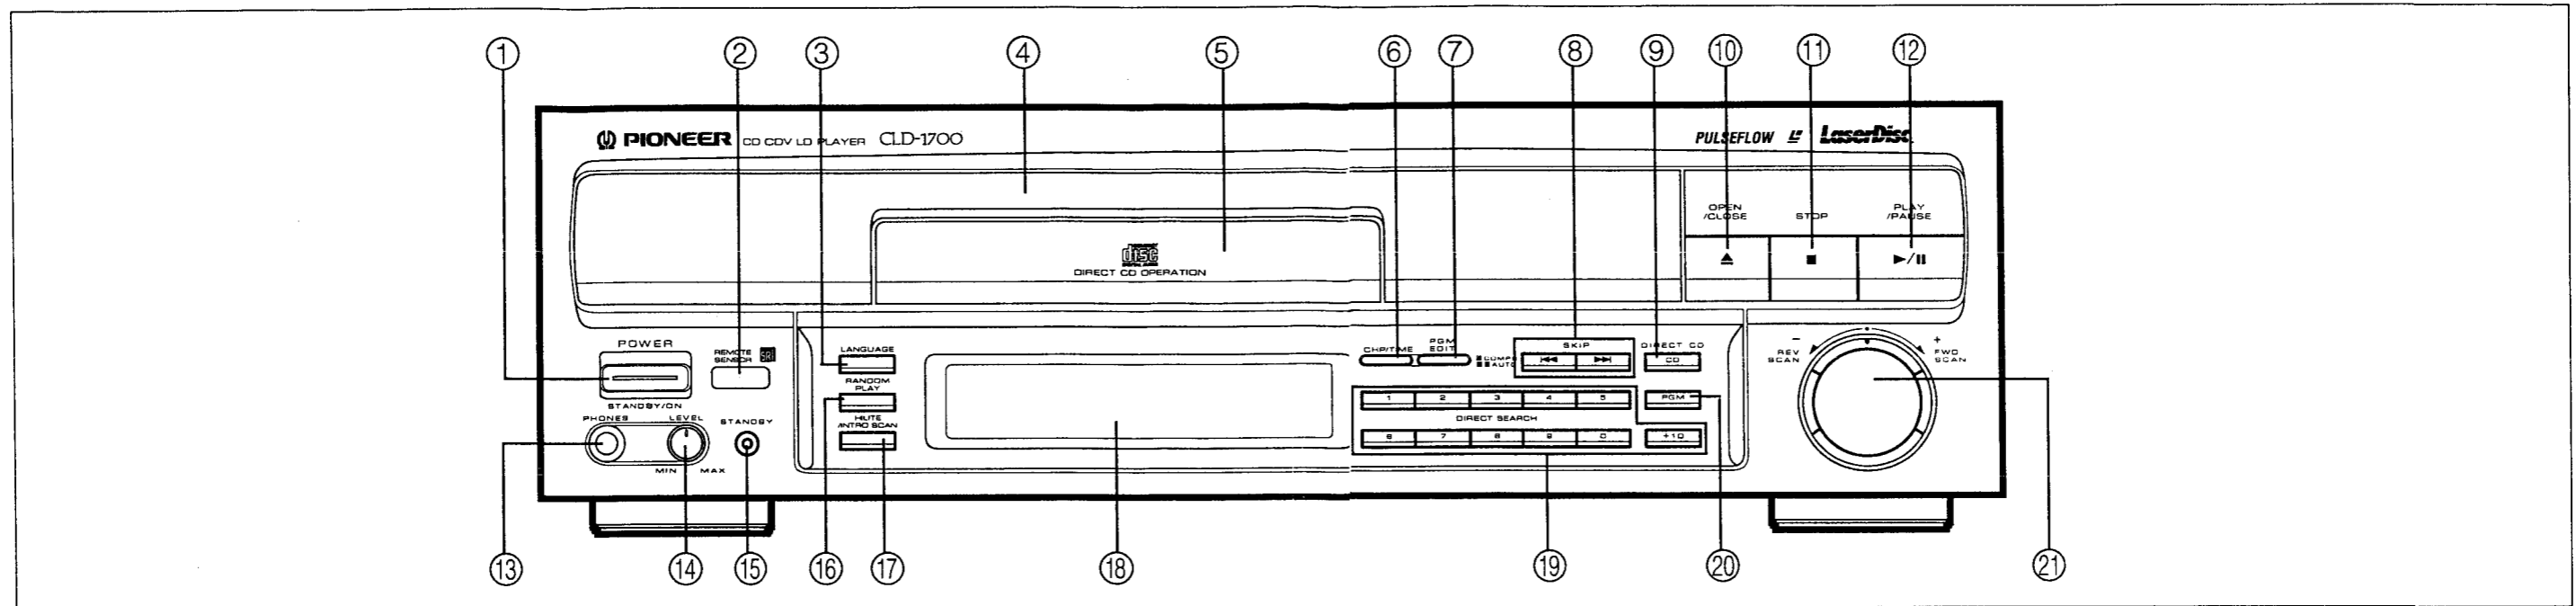


- ① **POWER STANDBY/ON switch**  
Press to turn the power on and off.
- ② **REMOTE SENSOR**
- ③ **LANGUAGE button**
- ④ **Disc table**
- ⑤ **CD disc table**
- ⑥ **CHP/TIME button**
- ⑦ **PGM EDIT button**
- ⑧ **SKIP buttons**
- ⑨ **DIRECT CD button**
- ⑩ **OPEN/CLOSE button**
- ⑪ **STOP button**
- ⑫ **PLAY/PAUSE button**
- ⑬ **PHONES jack**
- ⑭ **PHONES LEVEL control**  
Turn this control in the "MAX" direction to increase the output level from the PHONES jack. Turn this control in the "MIN" direction to decrease the output level from the PHONES jack.
- ⑮ **STANDBY indicator**
- ⑯ **RANDOM PLAY button**
- ⑰ **HILITE/INTRO SCAN button**
- ⑱ **Display window**
- ⑲ **DIRECT SEARCH/Digit buttons**
- ⑳ **PGM (program) button**
- ㉑ **SCAN control**

### Display window

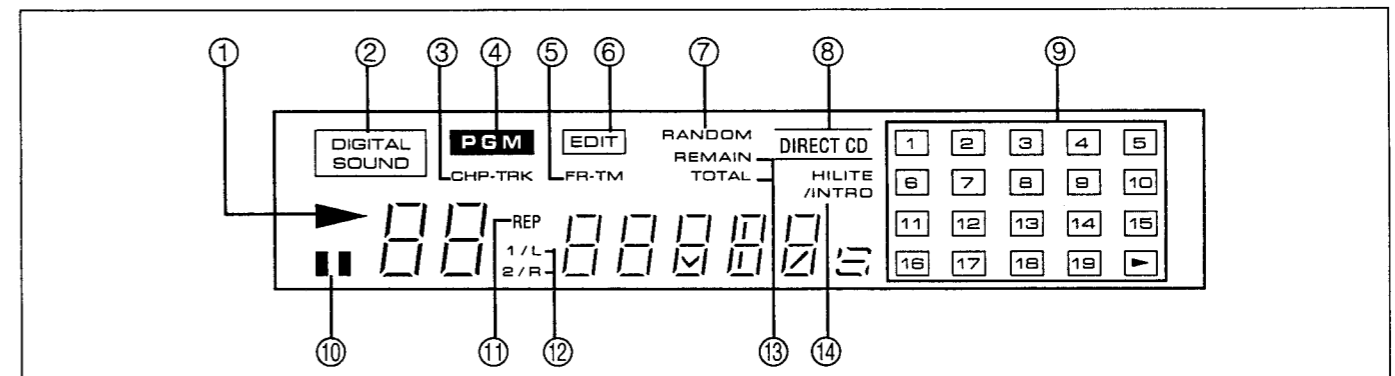

- ① **▶ play indicator**  
Lights during play. Blinks during search.
- ② **DIGITAL SOUND indicator**  
Lights when the power is turned on. When an analog audio disc is played back, the indicator goes out.
- ③ **CHP-TRK indicator**  
Indicates the CHP (chapter) number or TRK (track) number.
- ④ **PGM indicator**  
Lights during program play and programming.
- ⑤ **FR-TM indicator**  
Indicates the FR (frame) number or TM (time).
- ⑥ **EDIT indicator**  
Lights when editing is performed.
- ⑦ **RANDOM indicator**  
Lights during random play.
- ⑧ **DIRECT CD indicator**
- ⑨ **Visual calendar**  
When a disc is loaded, all of the chapter/track numbers recorded on the disc light up on the display. If the disc contains more than 19 chapters/tracks, the ▶ indicator lights.  
During program play, only the programmed chapter/track numbers light. When a disc without a TOC section is played, only the selection number being played lights. When a CDV disc is loaded, the track numbers of the video part light followed by the track numbers of the audio part. After a chapter/track is finished playing, the corresponding number goes out.
- ⑩ **|| pause indicator**  
Lights when the player is in pause mode.
- ⑪ **REP indicator**  
Lights during repeat play.
- ⑫ **1/L, 2/R indicator**  
Indicates the audio output channel.
- ⑬ **REMAIN/TOTAL indicator**  
Indicates the REMAIN TIME (remaining play time) or TOTAL TIME (total play time).
- ⑭ **HILITE/INTRO indicator**  
Lights during Hi-Lite Scan or Intro Scan mode.

Remote control buttons with the same names or marks as buttons on the front panel of the player control the same operations as the corresponding front panel buttons.

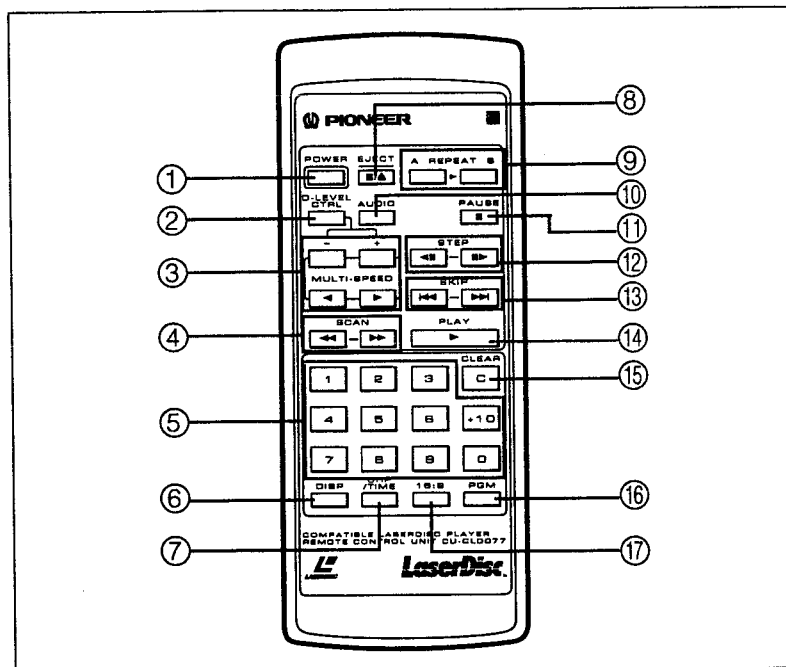

- ① **POWER button**  
Press to turn the power on and off.
- ② **D-LEVEL CTRL button**
- ③ **MULTI-SPEED buttons**
- ④ **SCAN buttons**
- ⑤ **Direct search/Digit buttons**
- ⑥ **DISP button**
- ⑦ **CHP/TIME button**
- ⑧ **EJECT button**
- ⑨ **REPEAT A/B buttons**
- ⑩ **AUDIO button**
- ⑪ **PAUSE button**
- ⑫ **STEP buttons**
- ⑬ **SKIP buttons**
- ⑭ **PLAY button**
- ⑮ **CLEAR button**  
Used to clear the repeat mode, program mode, random play mode or hi-lite scan/intro scan mode. This button is also for use in correcting input digits.
- ⑯ **PGM (program) button**
- ⑰ **16:9 button**



## 7. Functions

Remote control unit operations (CU-CLD077)

	Function	Active play Disc (CAV)	Long play Disc (CLV)	Compact Disc with Video	Compact Disc
Basic Functions	Single-side play	YES	YES	YES	YES
	Pause	YES	YES	YES	YES
	Stop	YES	YES	YES	YES
Search	Fast forward (forward and reverse)	YES	YES	YES	YES
	Chapter/Track skip	YES	YES	YES	YES
	Direct chapter/Track number search	YES	YES	YES	YES
	Frame number search	YES	NO	NO	NO
	Time number search	NO	YES	YES	YES
	Absolute time search	NO	NO	NO	YES
Program	Chapter/Track program play	YES	YES	YES	YES
	Program correction	YES	YES	YES	YES
Repeat	Repeat between 2 points	YES	YES	YES	YES
	Memory repeat	YES	YES	YES	YES
	Chapter/Track repeat	YES	YES	YES	YES
	One-side repeat	YES	YES	YES	YES
	Program repeat	YES	YES	YES	YES
	Random repeat	YES*1	YES*1	YES	YES
Program random repeat	YES	YES	YES	YES	
Trick play	Still/Step	YES	NO	NO	NO
	Multi-speed (Forward/reverse 9-level variable)	YES	NO	NO	NO
Time display	Elapsed time display	NO	YES	YES	YES
	Absolute time display	YES*1	NO	NO	YES
	Remaining track time display	NO	NO	YES	YES
	Remaining total time display	YES*1	YES*1	YES	YES
	Total number of selections, total time display	YES*1	YES*1	YES	YES
Others	Compu program/Auto program edit	YES*1	YES*1	YES	YES
	Hi-Lite scan	NO	NO	YES*3	YES
	Intro scan	YES	YES	YES*4	NO
	Digital level control	YES*2	YES*2	YES	YES
	Audio channel selection (Stereo, 1/L, 2/R)	YES	YES	YES	YES

\*1 Only discs with TOC

\*2 Can only be used with discs with digital audio signal tracks.

\*3 Audio part only

\*4 Video part only

### NOTE:

*The specifications and design of this product are subject to change without notice, due to improvement.*

### PLAYER FUNCTIONS

- Display, Visual Calendar Display
- Intro Scan, Hi-Lite Scan, Direct CD, Digital Level Control, Random Playback, Program Random Playback and Compu Program/Auto Program Edit
- Digital Audio Signal for LaserVision Discs
- Last Memory