


# Service Manual

**PIONEER**  
The Art of Entertainment

CDX-FM637S/X1N/EW

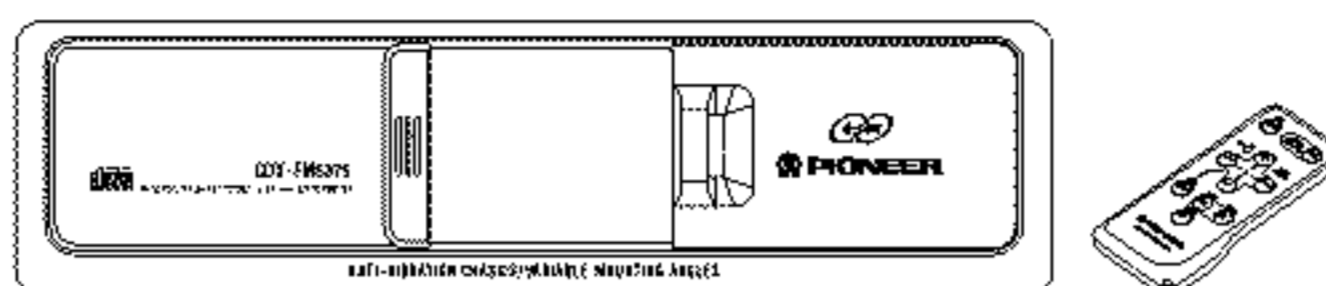

ORDER NO.  
**CRT2091**

UNIVERSAL MULTI-CD SYSTEM

# CDX-FM637S

# CDX-FM637S

**X1N/EW**

**X1N/ES**

**COMPACT**  
**disc**  
**DIGITAL AUDIO**

- See the separate manual CX-652(CRT1857) for the CD mechanism description, disassembly and circuit description.
- The CD mechanism employed in this model is one of C5 series.

## CONTENTS

1. SAFETY INFORMATION .....	2	7. GENERAL INFORMATION .....	50
2. EXPLODED VIEWS AND PARTS LIST .....	3	7.1 PARTS .....	50
3. SCHEMATIC DIAGRAM .....	14	7.1.1 IC.....	50
4. PCB CONNECTION DIAGRAM .....	30	7.1.2 DISPLAY .....	54
5. ELECTRICAL PARTS LIST .....	40	7.2 DIAGNOSIS .....	55
6. ADJUSTMENT.....	44	7.2.1 DISASSEMBLY .....	55
		7.2.2 TEST MODE .....	56
		7.3 BLOCK DIAGRAM .....	60
		8. OPERATIONS AND SPECIFICATIONS.....	62

**PIONEER ELECTRONIC CORPORATION** 4-1, Meguro 1-Chome, Meguro-ku, Tokyo 153, Japan  
**PIONEER ELECTRONICS SERVICE INC.** P.O.Box 1760, Long Beach, CA 90801-1760 U.S.A.  
**PIONEER ELECTRONIC [EUROPE] N.V.** Haven 1087 Keetberglaan 1, 9120 Melsele, Belgium  
**PIONEER ELECTRONICS ASIACENTRE PTE.LTD.** 501 Orchard Road, #10-00, Wheelock Place, Singapore 238880

© PIONEER ELECTRONIC CORPORATION 1997

K-FED. OCT. 1997 Printed in Belgium

*MC-Service*

# CDX-FM637S

## ● CD Player Service Precautions


1. For pickup unit(Service)(CXX1235) handling, please refer to "Disassembly"(CX-652 Service Manual CRT1857).

During replacement, handling precautions shall be taken to prevent an electrostatic discharge(Protection by a short pin).

2. During disassembly, be sure to turn the power off since an internal IC might be destroyed when a connector is plugged or unplugged.

3. Please check the grating after changing the pickup unit(See page 45).

4. Since these screws protect the mechanism during transport, be sure to affix it when it is transported for repair, etc.

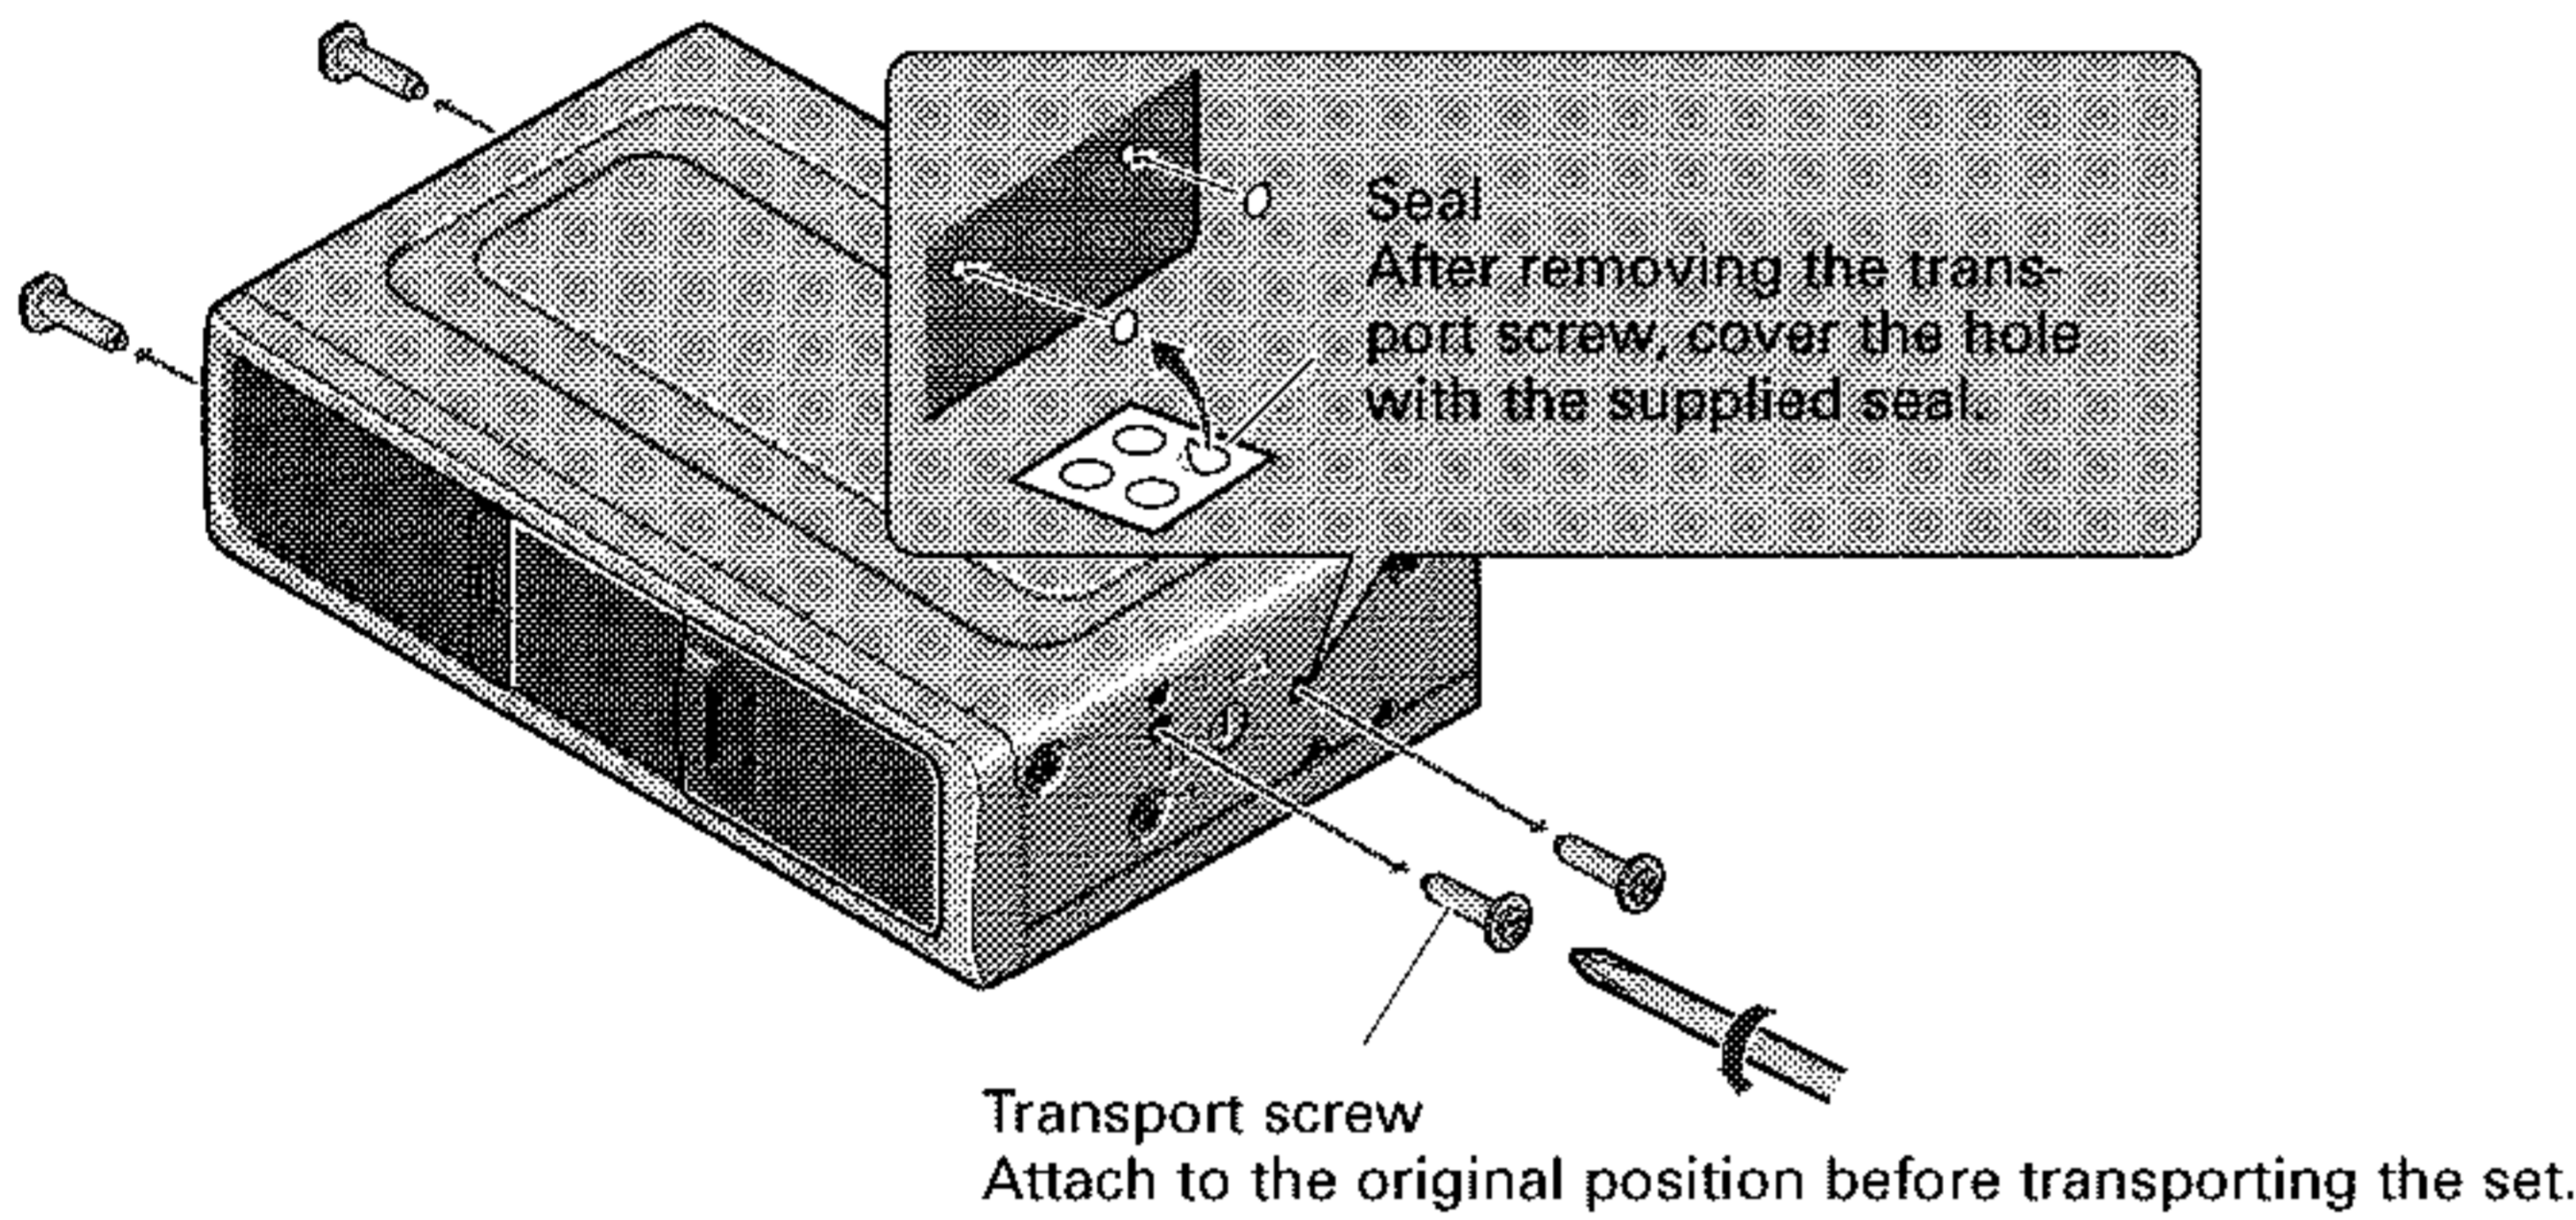

A transport screw has been attached to the set in order to protect it during transportation. After removing the transport screw, cover the hole with the supplied seal.

Be sure to remove the transport screw before mounting the set. The removed transport screw should be retained in the accessory bag for use the next time the set is transported.

## 1. SAFETY INFORMATION

### 1.1 CDX-FM637S/X1N/EW

1. Safety Precautions for those who Service this Unit.


- Follow the adjustment steps (see pages 44 through 49) in the service manual when servicing this unit. When checking or adjusting the emitting power of the laser diode exercise caution in order to get safe, reliable results.

Caution:

1. During repair or tests, minimum distance of 13cm from the focus lens must be kept.
2. During repair or tests, do not view laser beam for 10 seconds or longer.

2. A "CLASS 1 LASER PRODUCT" label is affixed to the rear of the player.

3. The triangular label is attached to the mechanism unit frame.

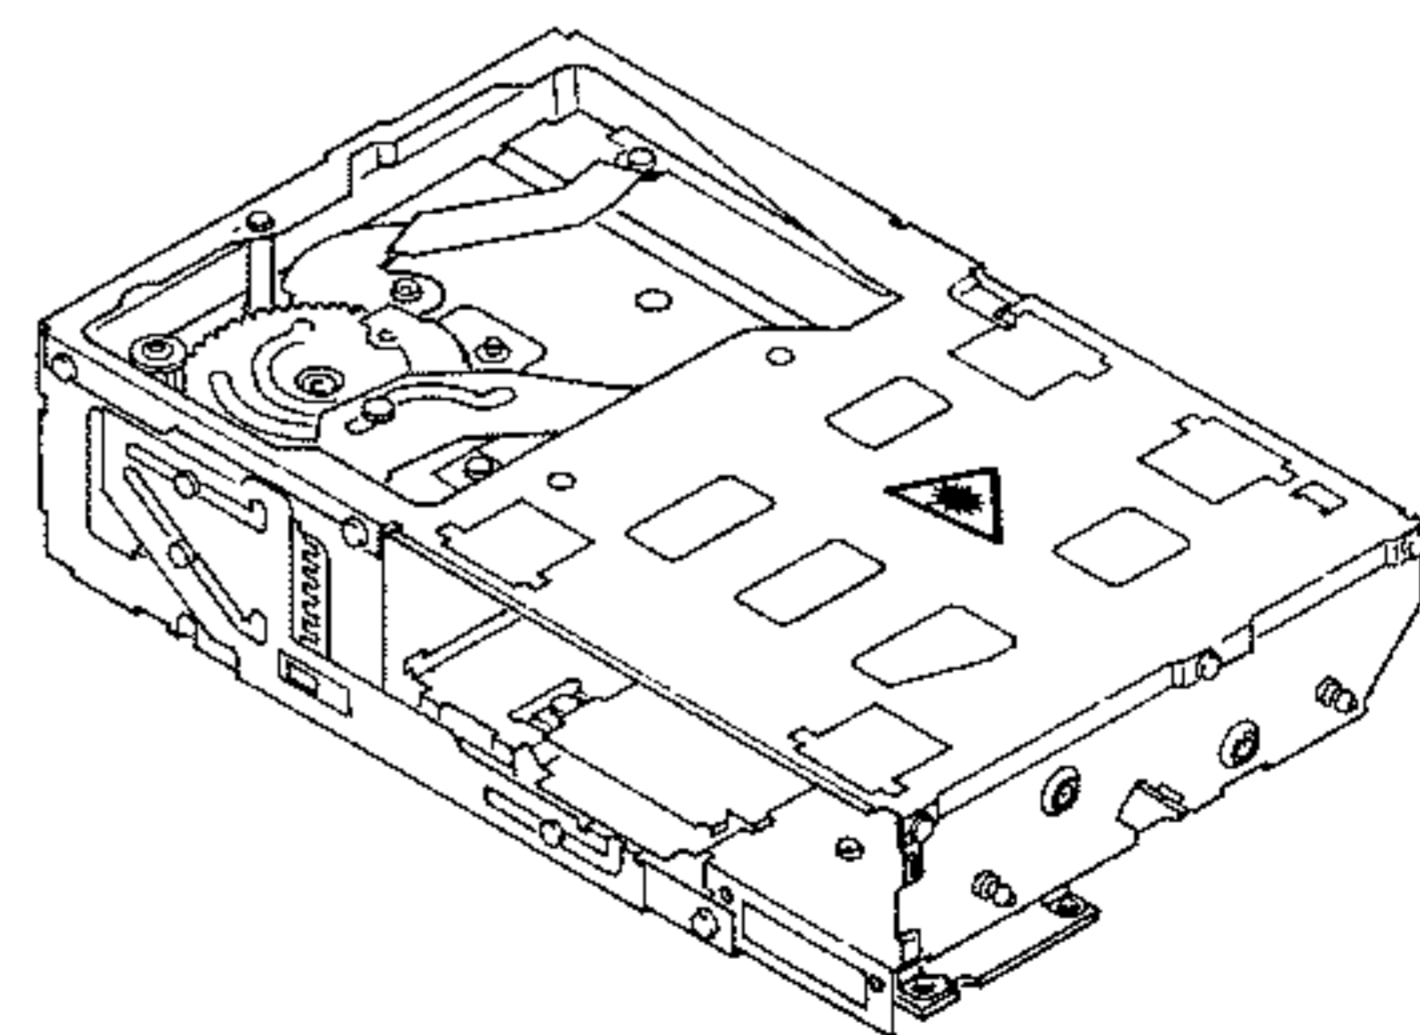

### 4. Specifications of Laser Diode

Specifications of laser radiation fields to which human access is possible during service.

Wavelength = 800 nanometers

## 2. EXPLODED VIEWS AND PARTS LIST

### 2.1 PACKING

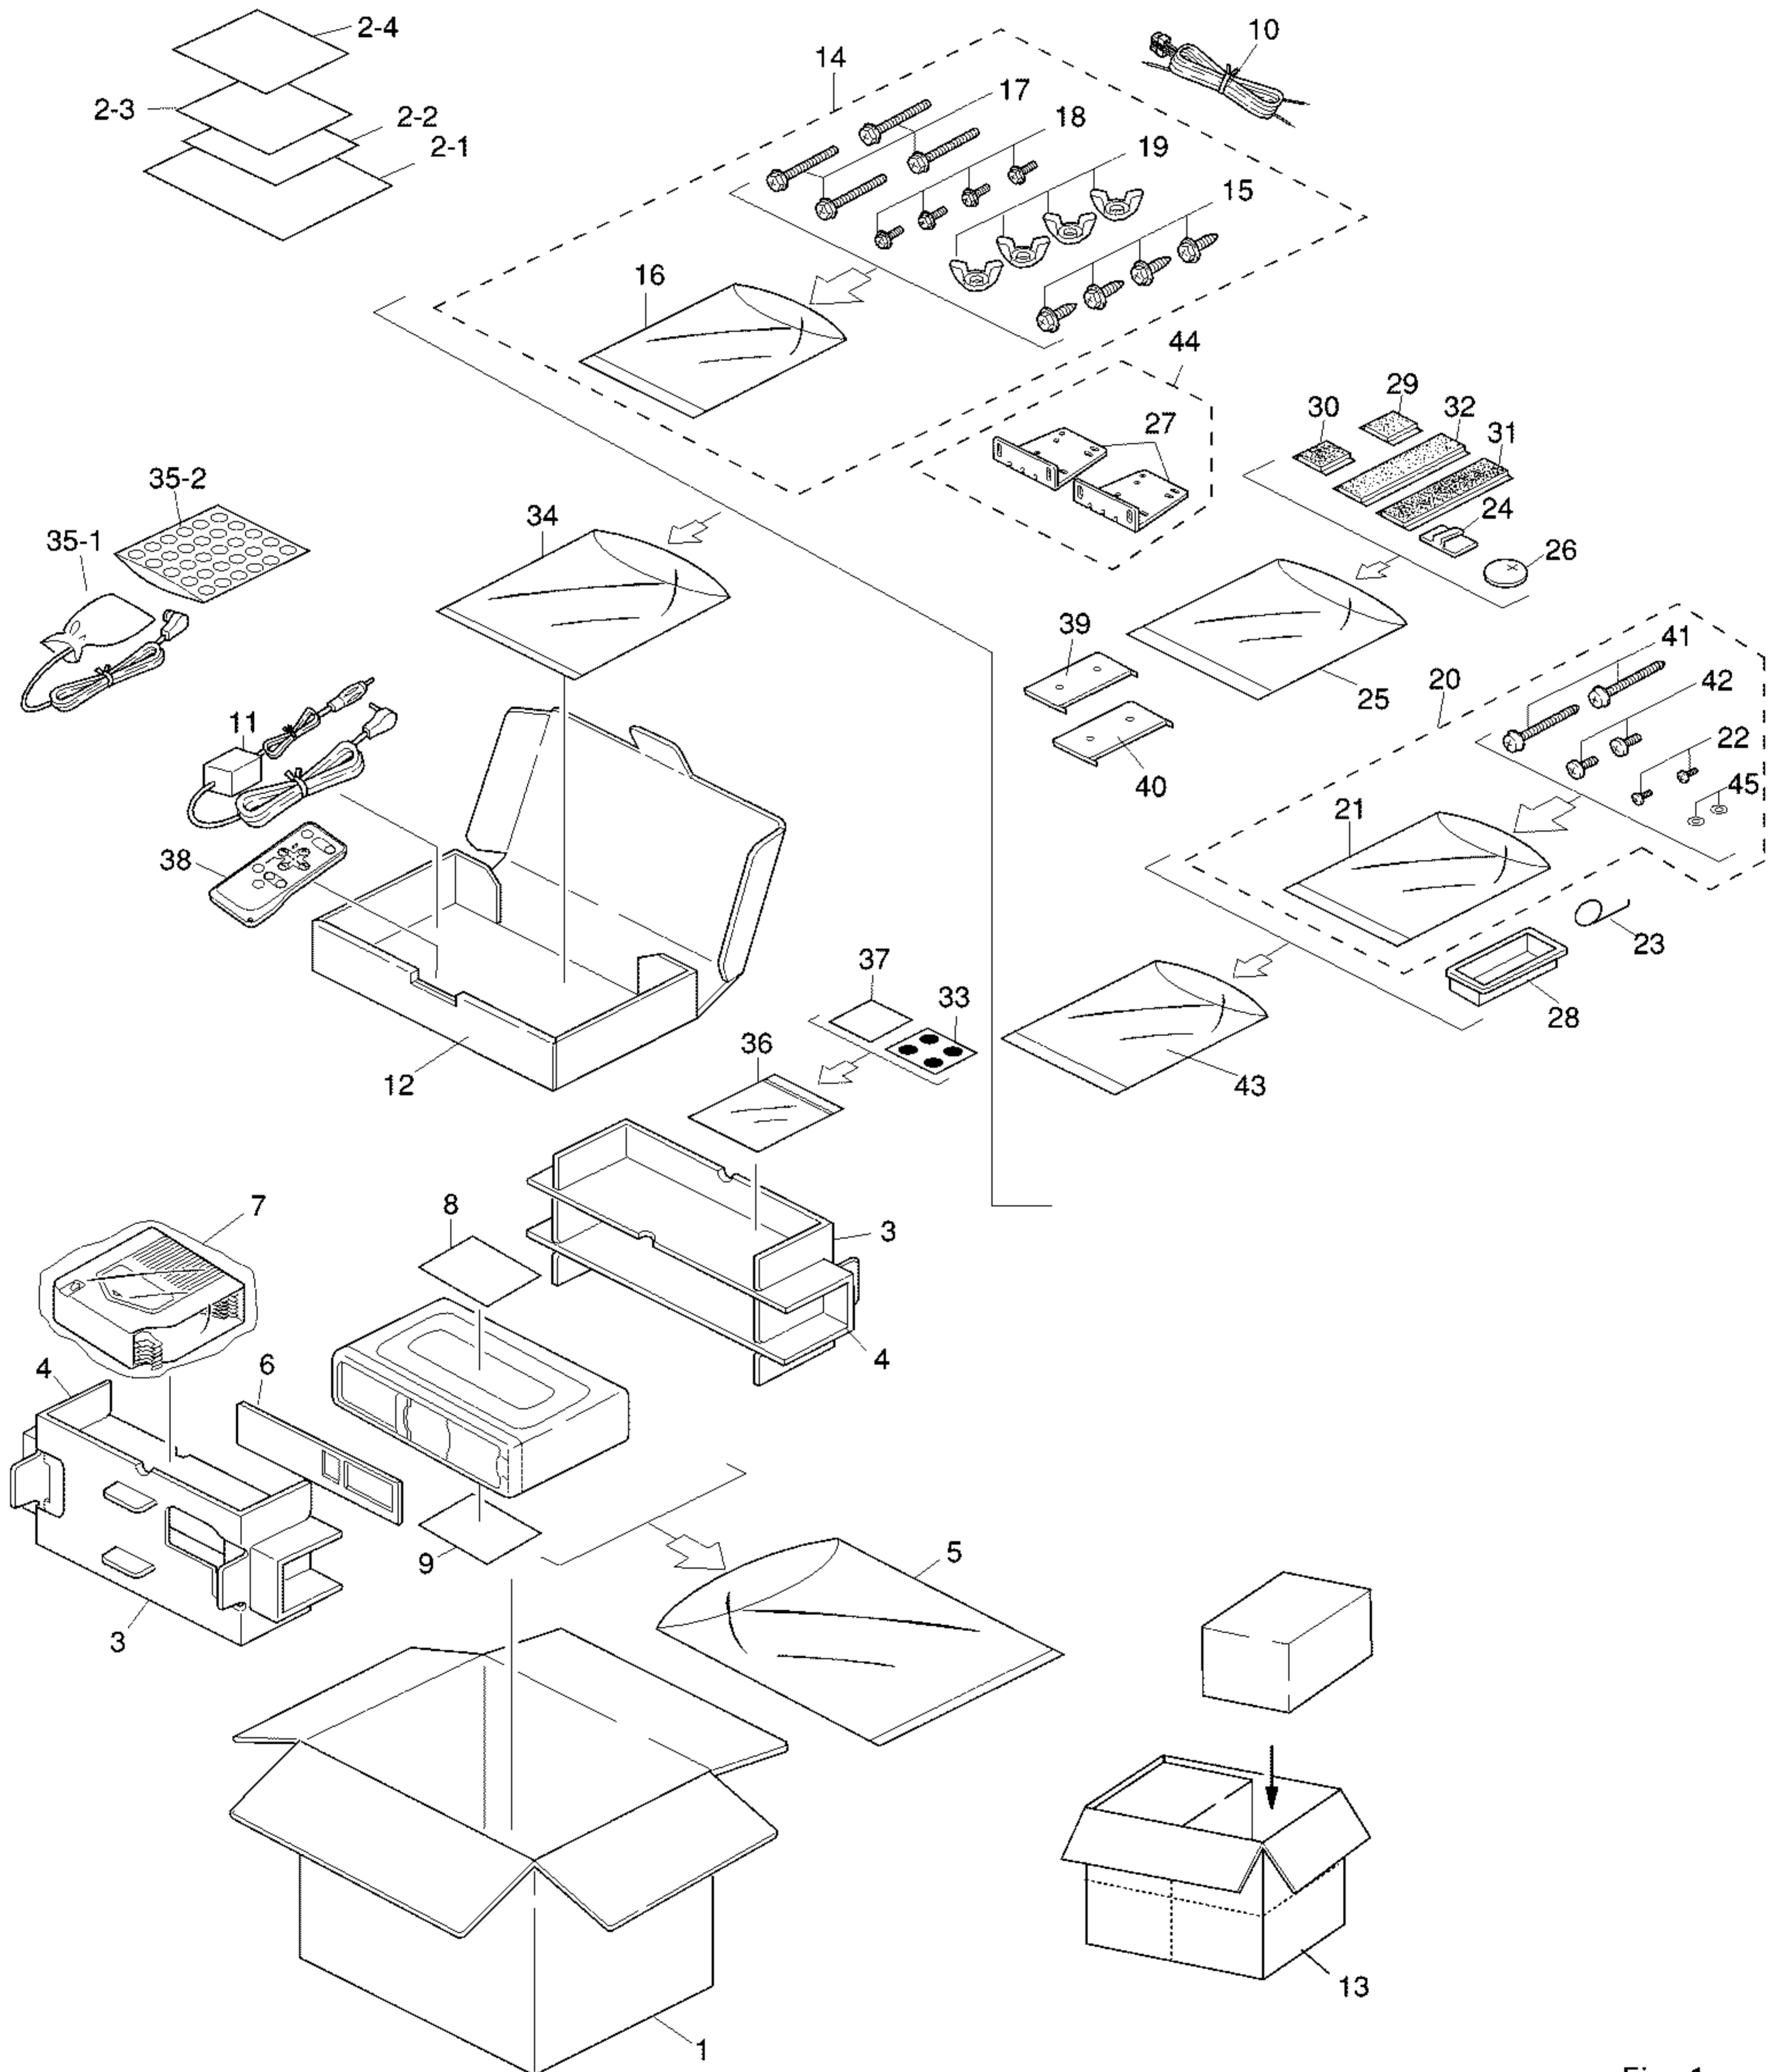


Fig. 1

# CDX-FM637S

## NOTE:

- Parts marked by "\*" are generally unavailable because they are not in our Master Spare Parts List.
- Screws adjacent to ∇ mark on the product are used for disassembly.

## ● PACKING SECTION PARTS LIST

Mark No.	Description	Part No.	
		CDX-FM637S/X1N/EW	CDX-FM637S/X1N/ES
1	Carton	CHG3400	CHG3401
2-1	Owner's Manual	CRD2519	CRD2517
2-2	Owner's Manual	CRD2520	Not used
2-3	Installation Manual	CRD2521	CRD2518
* 2-4	Warranty Card	CRY1087	Not used
3	Protector	CHP1820	CHP1820
4	Protector	CHP1817	CHP1817
5	Polyethylene Bag	CEG1042	CEG1042
6	Spacer	CHW1528	CHW1528
7	Magazine Assy	CXA9156	CXA9156
* 8	Caution Card	CRP1164	CRP1164
* 9	Caution Card	CRP1165	CRP1165
10	Cord	CDE5125	CDE5124
11	Antenna Select Assy	CWM5606	CWM5606
12	Sub Carton	CHG3402	CHG3403
13	Contain Box	CHL3400	CHL3401
14	Screw Assy	CEA1962	CEA1962
15	Screw	CBA1295	CBA1295
* 16	Polyethylene Sheet	CNM5158	CNM5158
17	Screw	HMB60P500FMC	HMB60P500FMC
18	Screw	HMF40P080FZK	HMF40P080FZK
19	Nut	NF60FMC	NF60FMC
20	Screw Assy	CEA1964	CEA1965
* 21	Polyethylene Bag	CEG-127	CEG-127
22	Screw	BPZ30P050FZK	IMS30P050FZK
23	Spring	Not used	CBH-865
24	Clamper	CEF1010	CEF1010
* 25	Polyethylene Bag	CEG-158	CEG-158
26	Battery	CEX1030	CEX1030
27	Angle	CNB2019	CNB2019
28-1	Bracket	Not used	CNS3313
28-2	Bracket	Not used	CNC5116
28-3	Cushion	Not used	CNM3182
29	.....		
30	.....		
31	Fastener(Soft)	CNM3872	CNM3872
32	Fastener(Rough)	CNM4041	CNM4041
33	Seal	CNM5599	CNM5599
* 34	Polyethylene Bag	E36-622	E36-622
35-1	Cover	CEG1062	CEG1062
35-2	Air Cushioned Bag	CEG1055	CEG1055
* 36	Polyethylene Bag	CEG1099	CEG1099
* 37	Caution Card	CRP1090	CRP1090
38	Remote Control Unit	CXB2053	CXB2053
39	Bracket(Small)	CNC5114	Not used
40	Bracket(Large)	CNC5115	Not used
41	Screw	BNC40P120FZK	Not used
42	Screw	BMZ40P060FZK	Not used
* 43	Polyethylene Bag	Not used	CEG-158
44	Angle Assy	CXA9655	CXA9655
45	Washer	WG40FZK	Not used

● **Owner's Manual**

Model	Part No.	Language
CDX-FM637S/X1N/EW	CRD2519	English, Italian, French
	CRD2520	German, Dutch, Spanish
CDX-FM637S/X1N/ES	CRD2517	English, Spanish, Portuguese, Arabic

● **Installation Manual**

Model	Part No.	Language
CDX-FM637S/X1N/EW	CRD2521	English, Italian, French, German, Dutch, Spanish
CDX-FM637S/X1N/ES	CRD2518	English, Spanish, Portuguese, Arabic



**(1) EXTERIOR SECTION PARTS LIST**

Mark No.	Description	Part No.	Mark No.	Description	Part No.
1	Screw	BMZ20P040FMC	41	Grille	CNS4715
2	Screw	BMZ26P040FMC	42	Panel	CNS4749
3	Screw	BMZ30P040FZK	43	Plug(CN502)(White)	CKS1222
4	Button	CAC4632	44	Plug(CN501)(Red)	CKS2812
5	Screw	CBA1352	45	Antenna Jack(CN503)	CKX1006
6	Spring	CBH1859	46	Transistor(Q801)	2SD2396
7	Upper Case	CNB2078	47	Screw	HMF40P080FZK
8	Insulator	CNM4640	48	.....	
9	PCB	CNP4972	49	Angle	CNB2019
10	Panel	CNS3867	50	.....	
11	Damper	CNV4501	51	Cord	CDE5480
12	Antenna Select Assy	CWM5606	52	Plug(CN901)	CKS-785
13	System Unit	See Contrast table(2)	53	Holder	CNC5621
14	Arm Unit	CXA8606	54	Housing	CNV4019
15	Display Assy	See Contrast table(2)	55	Lens	CNV4020
16	Grille Assy	CXB2081	56	Remote Control Unit	CXB2053
17	Lower Case Unit	CXA9322	57	Cover	CNS4139
18	CD Mechanism Module(C5)	CXK4430	58	Spring	See Contrast table(2)
19	Screw	IMS20P035FZK	59	Case	CNS3279
20	Screw	IMS26P040FMC	60	Grille Unit	See Contrast table(2)
21	.....		61	LCD(LCD901)	CAW1273
22	.....		62	IC(IC902)	SBX8035-H
23	Cord	See Contrast table(2)	63	Bracket	See Contrast table(2)
24	Cap	CNS1472	64	Bracket	See Contrast table(2)
25	Resistor	RS1/2PMF102J	65	Bracket	See Contrast table(2)
26	Antenna Cable	CDH1207	66	Screw	See Contrast table(2)
27	Cord	CDE5482	67	Screw	See Contrast table(2)
28	Chassis	CNA1555	68	Screw	See Contrast table(2)
29	Case	CNB1764	69	Washer	See Contrast table(2)
30	Antenna Select Unit	CWX2200	70	Screw	See Contrast table(2)
31	Screw	BMZ26P060FMC	71	Bracket	See Contrast table(2)
32	Plug(CN801)	CKS-460	72	Cushion	See Contrast table(2)
33	Connector(CN201)	CKS2233			
34	Jack(CN401)	CKS2310			
35	Connector(CN601)	CKS3195			
36	Holder	CNC6313			
37	Holder	CNC6339			
38	Screw	BPZ26P080FMC			
39	Door	CAT1919			
40	Door	CAT1908			

# CDX-FM637S

## (2) CONTRAST TABLE

CDX-FM637S/X1N/EW and CDX-FM637S/X1N/ES are constructed the same except for the following:

Mark No.	Symbol and Description	Part No.	
		CDX-FM637S/X1N/EW	CDX-FM637S/X1N/ES
13	System Unit	CWX2199	CWX2198
15	Display Assy	CXB1904	CXB1903
23	Cord	CDE5125	CDE5124
58	Spring	Not used	CBH-865
60	Grille Unit	CXB2043	CXB2044
63	Bracket	CNC5114	Not used
64	Bracket	CNC5115	Not used
65	Bracket	Not used	CNC5116
66	Screw	BMZ40P060FZK	Not used
67	Screw	BNC40P120FZK	Not used
68	Screw	BPZ30P050FZK	Not used
69	Washer	WG40FZK	Not used
70	Screw	Not used	IMS30P050FZK
71	Bracket	Not used	CNS3313
72	Cushion	Not used	CNM3182





# CDX-FM637S

## ● CD MECHANISM MODULE SECTION PARTS LIST

Mark No.	Description	Part No.	Mark No.	Description	Part No.
1	Screw	CBA1369	46	Gear	CNV4406
2	CD Core Unit	CWX2175	47	Cover	CNV4411
3	Pickup Unit(Service)	CXX1235	48	Holder	CNV4412
4	Screw	JFZ17P020FNI	49	Gear	CNV4416
5	Screw	IMS26P040FMC	50	Gear	CNV4417
6	Screw(M2×2.5)	CBA1037	51	Rail(White)	CNV4419
7	Screw(M2×2.5)	CBA1077	52	Rail(Black)	CNV4420
8	Screw(M2×2.5)	CBA1085	53	Clamper	CNV4421
9	Screw(M2×6)	CBA1229	54	Lever	CNV4422
10	Screw(M2×4)	CBA1176	55	Gear	CNV4423
11	Screw(M2×6)	CBA1166	56	Gear	CNV4424
12	Screw(M2×4)	CBA1362	57	Rack	CNV4828
13	Washer	CBF1002	58	Arm	CNV4426
14	Spring	CBH1822	59	Guide	CNV4597
15	.....		60	Arm	CNV4670
16	Spring	CBH1826	61	Motor Unit(M851)(Spindle)	CXA9371
17	Spring	CBH1827	62	Screw	CLA2786
18	Spring	CBH1828	63	Motor Unit(M854)(Carriage)	CXA9131
19	Spring	CBH1829	64	Chassis Unit	CXB2245
20	Spring	CBH1830	65	Bracket Unit	CXB2261
21	Spring	CBH1919	66	Chassis Unit	CXB2259
22	Spring	CBL1241	67	Plate Unit	CXB2262
23	Spring	CBL1242	68	Motor Unit(M853)(Tray)	CXA9139
24	Spring	CBL1249	69	Damper Unit	CXA7714
25	Spring	CBH2070	70	Lever Unit	CXA9141
26	Shaft	CLA2803	71	Magazine Holder Unit	CXB2264
27	Arm	CNC6181	72	Frame Unit	CXB2265
28	Lever	CNC7713	73	Frame	CNC6943
29	Lever	CNC6194	74	Motor Unit(M852)(ELV)	CXA9146
30	Bracket	CNC6292	75	Lever Unit	CXB2266
31	Lever	CNC6534	76	Screw	JFZ17P020FNI
32	Lever	CNC6535	77	Screw	JFZ20P025FNI
33	Lever	CNC6536	78	Connector(CN701)	CKS1968
34	Holder	CNC7448	79	Connector(CN801)	CKS3484
35	Cover	CNC7452	80	Connector(CN101)	CKS3486
36	Spacer	CNM4879	81	Photo Transistor(Q851)	PT4800
37	Sheet	CNM5118	82	LED(D851)	CN504-2
38	PCB	CNP4205	83	Arm	CNC6799
*	39 PCB	CNP4537	84	Switch(S853)	CSN1012
	40 PCB	CNP4382	85	Screw	CBA1041
41	Bearing	CNR1415	86	Volume(VR801)	CCW1021
42	Belt	CNT1053	87	Switch(S851,852)	CSN1033
43	Plate	CNV4761	88	Guide	CNV4722
44	Gear	CNV4403	89	Spring	CBH1930
45	Gear	CNV4404	90	Holder	CNC6819

Mark No.	Description	Part No.
91	Holder	CNC6827
92	Holder	CNM5020
93	Spring	CBH1931
94	Washer	CBF1038
95	Screw(M2×2)	CBA1250
96	Screw(M2×2)	CBA1250
97	Plate	CNC7015
98	Ball	CNR1189
99	Guide	CNV5193
100	Holder	CNV4761
101	Spring	CBH1948
102	Screw(M2×1.4)	CBA1387
103	Spring	CBL1314
104	Pulley	CNV4405

*MC-Service*

2.4 MAGAZINE ASSY

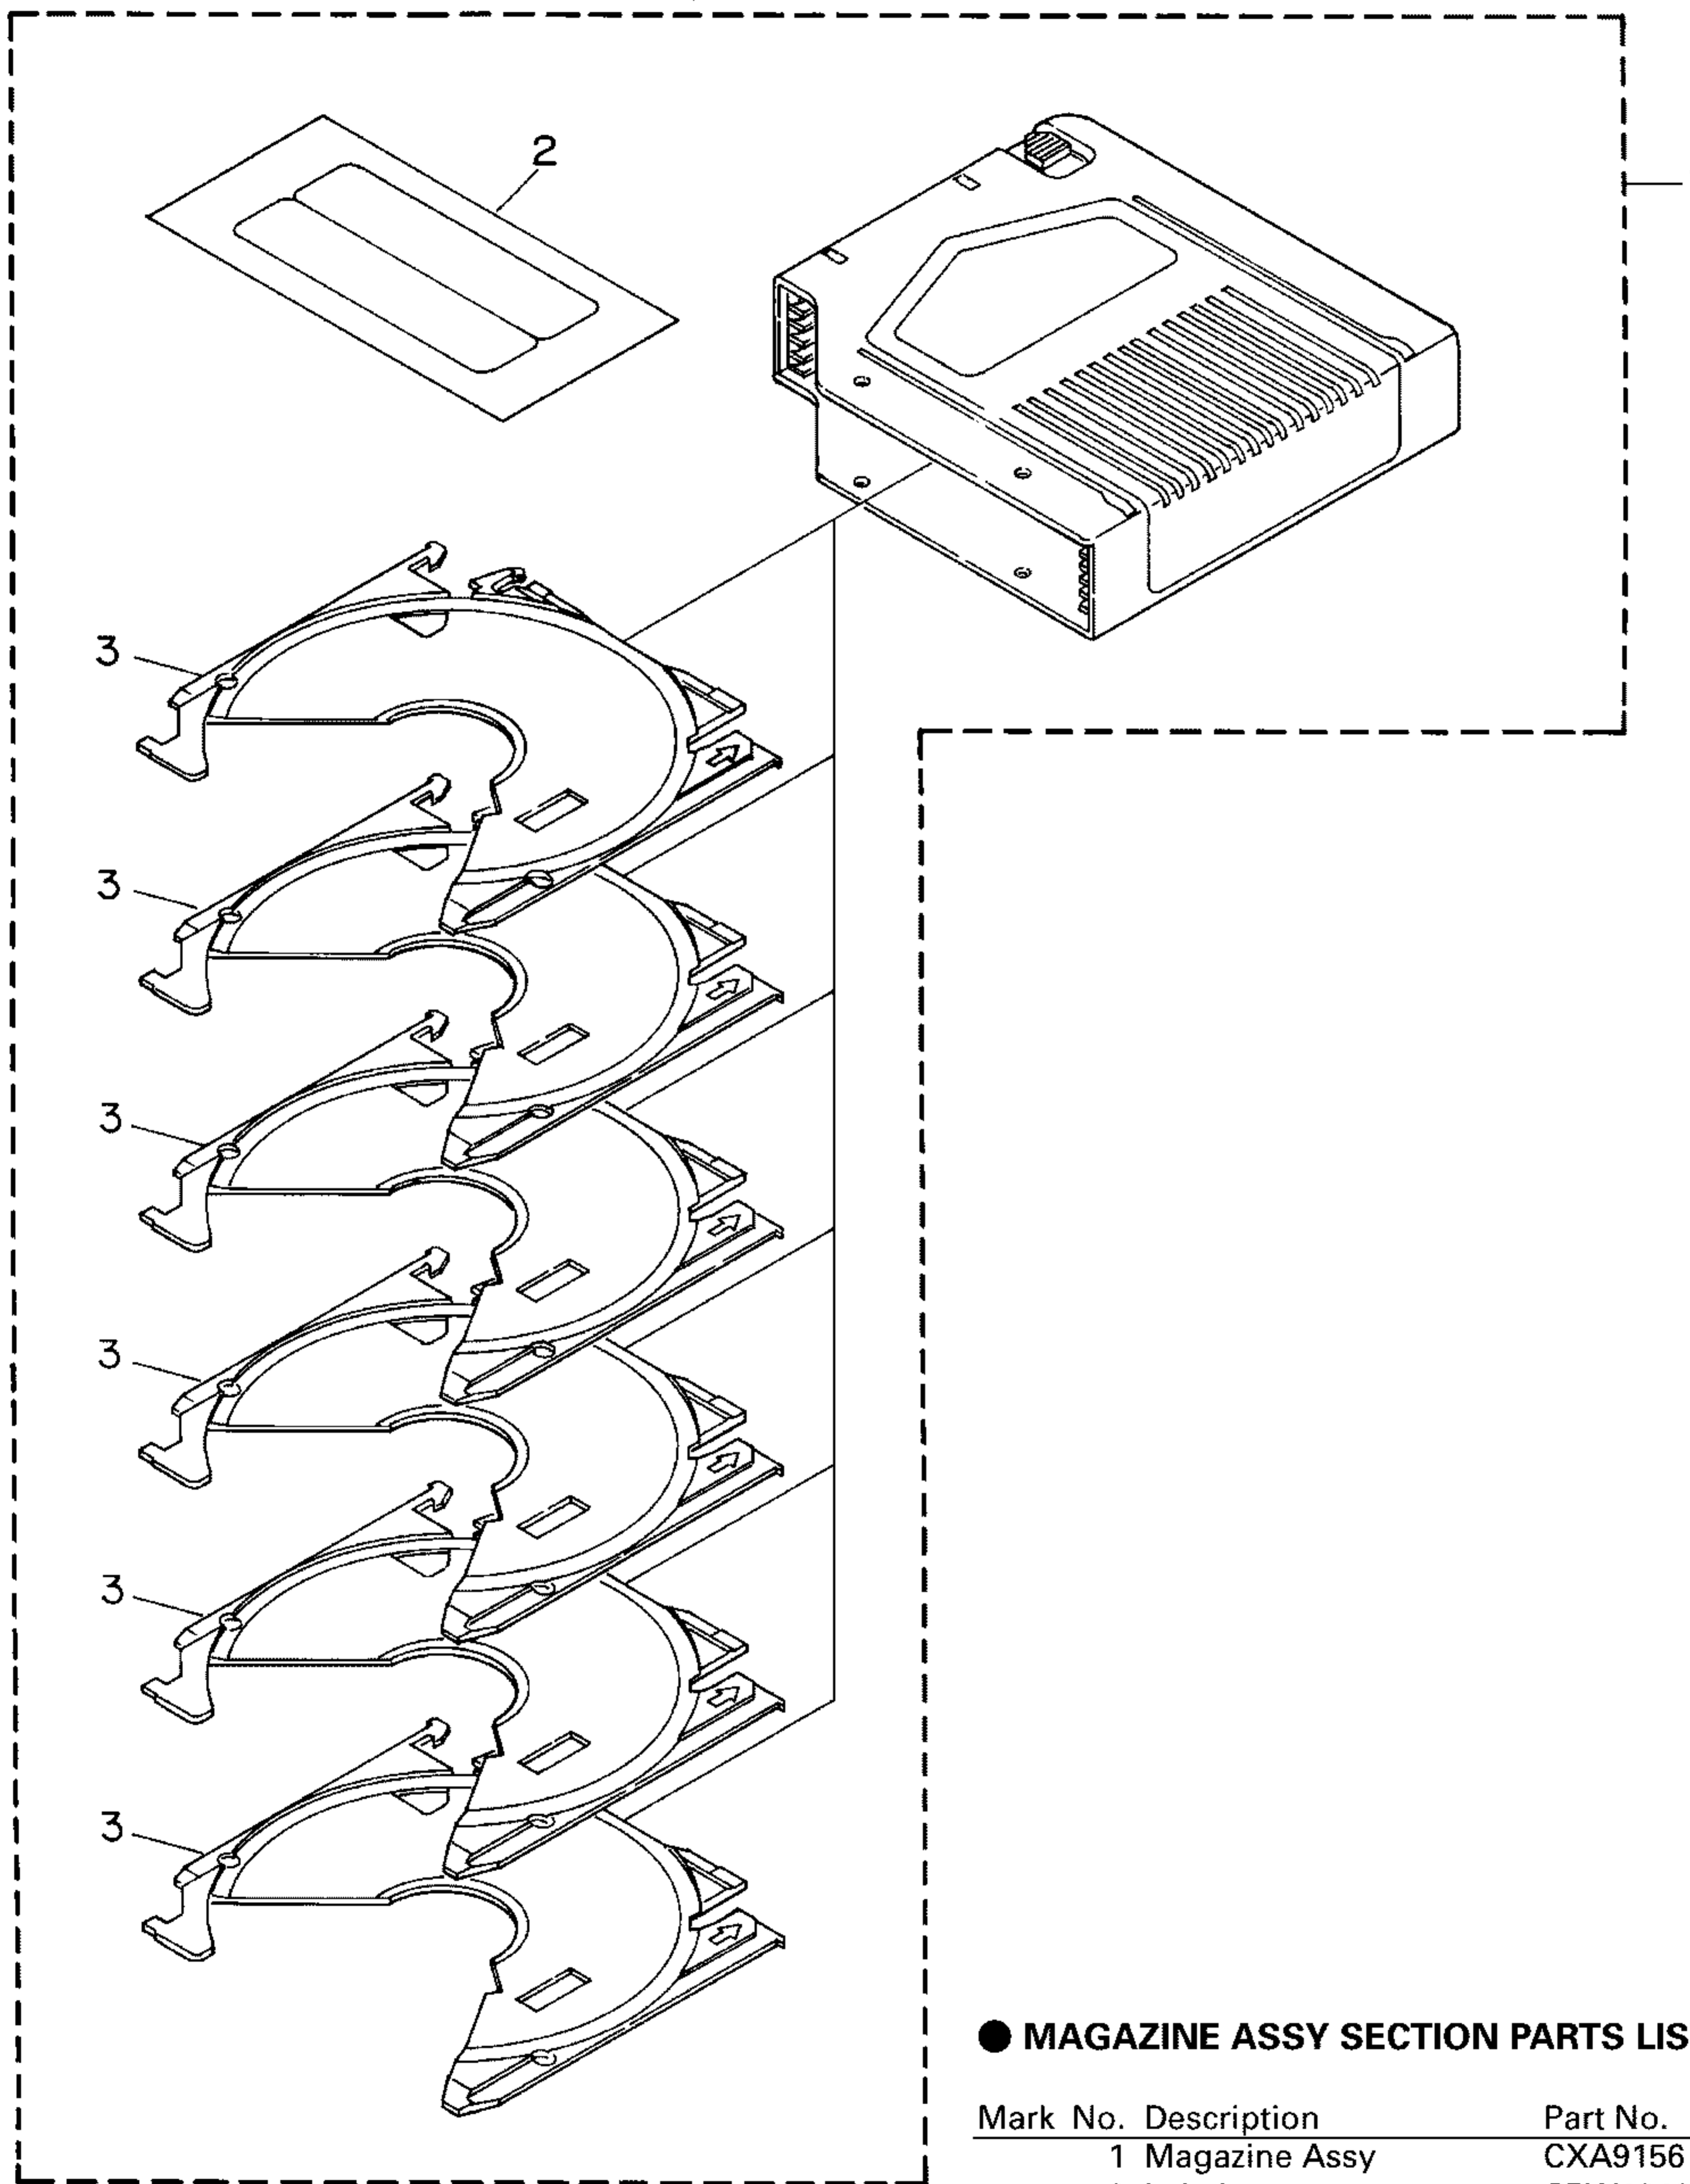



Fig. 4

● MAGAZINE ASSY SECTION PARTS LIST

Mark No.	Description	Part No.
1	Magazine Assy	CXA9156
2	Label	CRW1348
3	Tray	CNV4900



# B-b

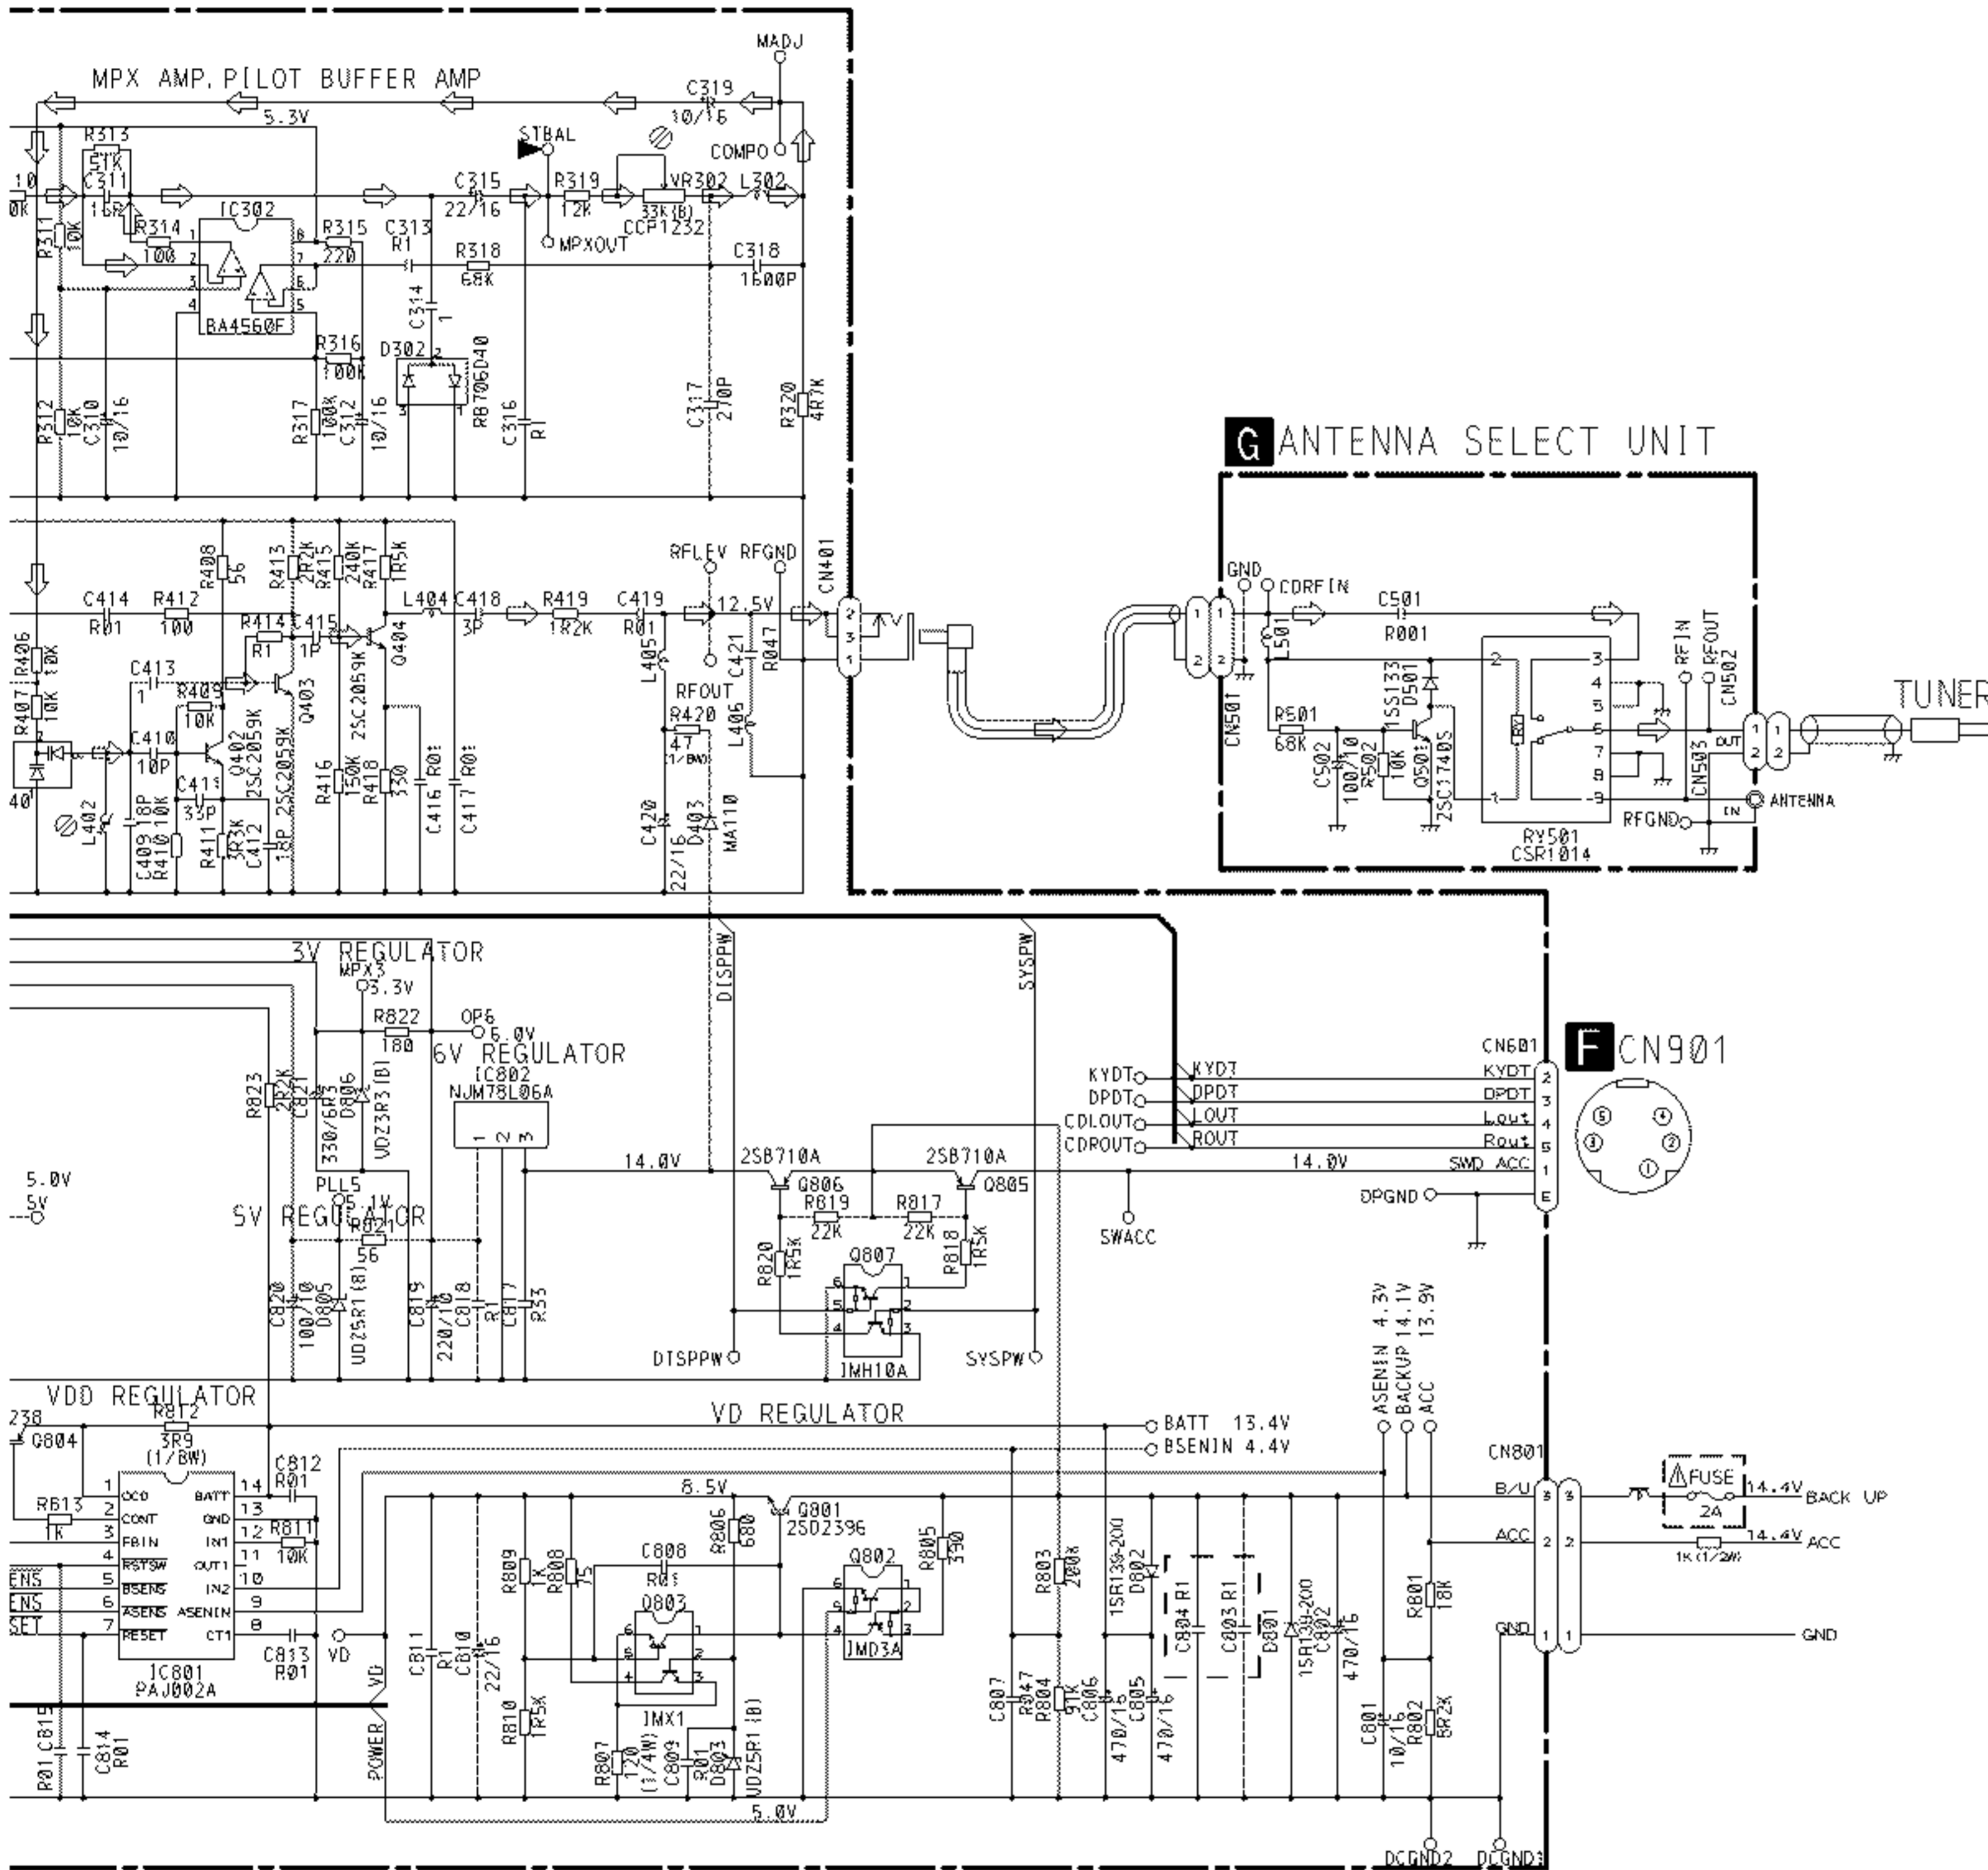

istor.  
made between chip resistors and  
actor.  
made between chip capacitors and  
ponent parts indicates  
by factor of the part.  
be sure to use parts of

Decimal points for resistor  
and capacitor fixed values  
are expressed as:  
2.2-2R2  
0.022-R022

	CDX-FM637S/X1N/EW	CDX-FM637S/X1N/ES
C205,206	2700P	3900P
C207,208	2200P	3300P
C803	Not used	R1
C804	R1	Not used
△ FUSE(2A)	CEK1063	CEK1048


Fig. 5

MC-Service

B-a B-b

MC-Service

16 B-a

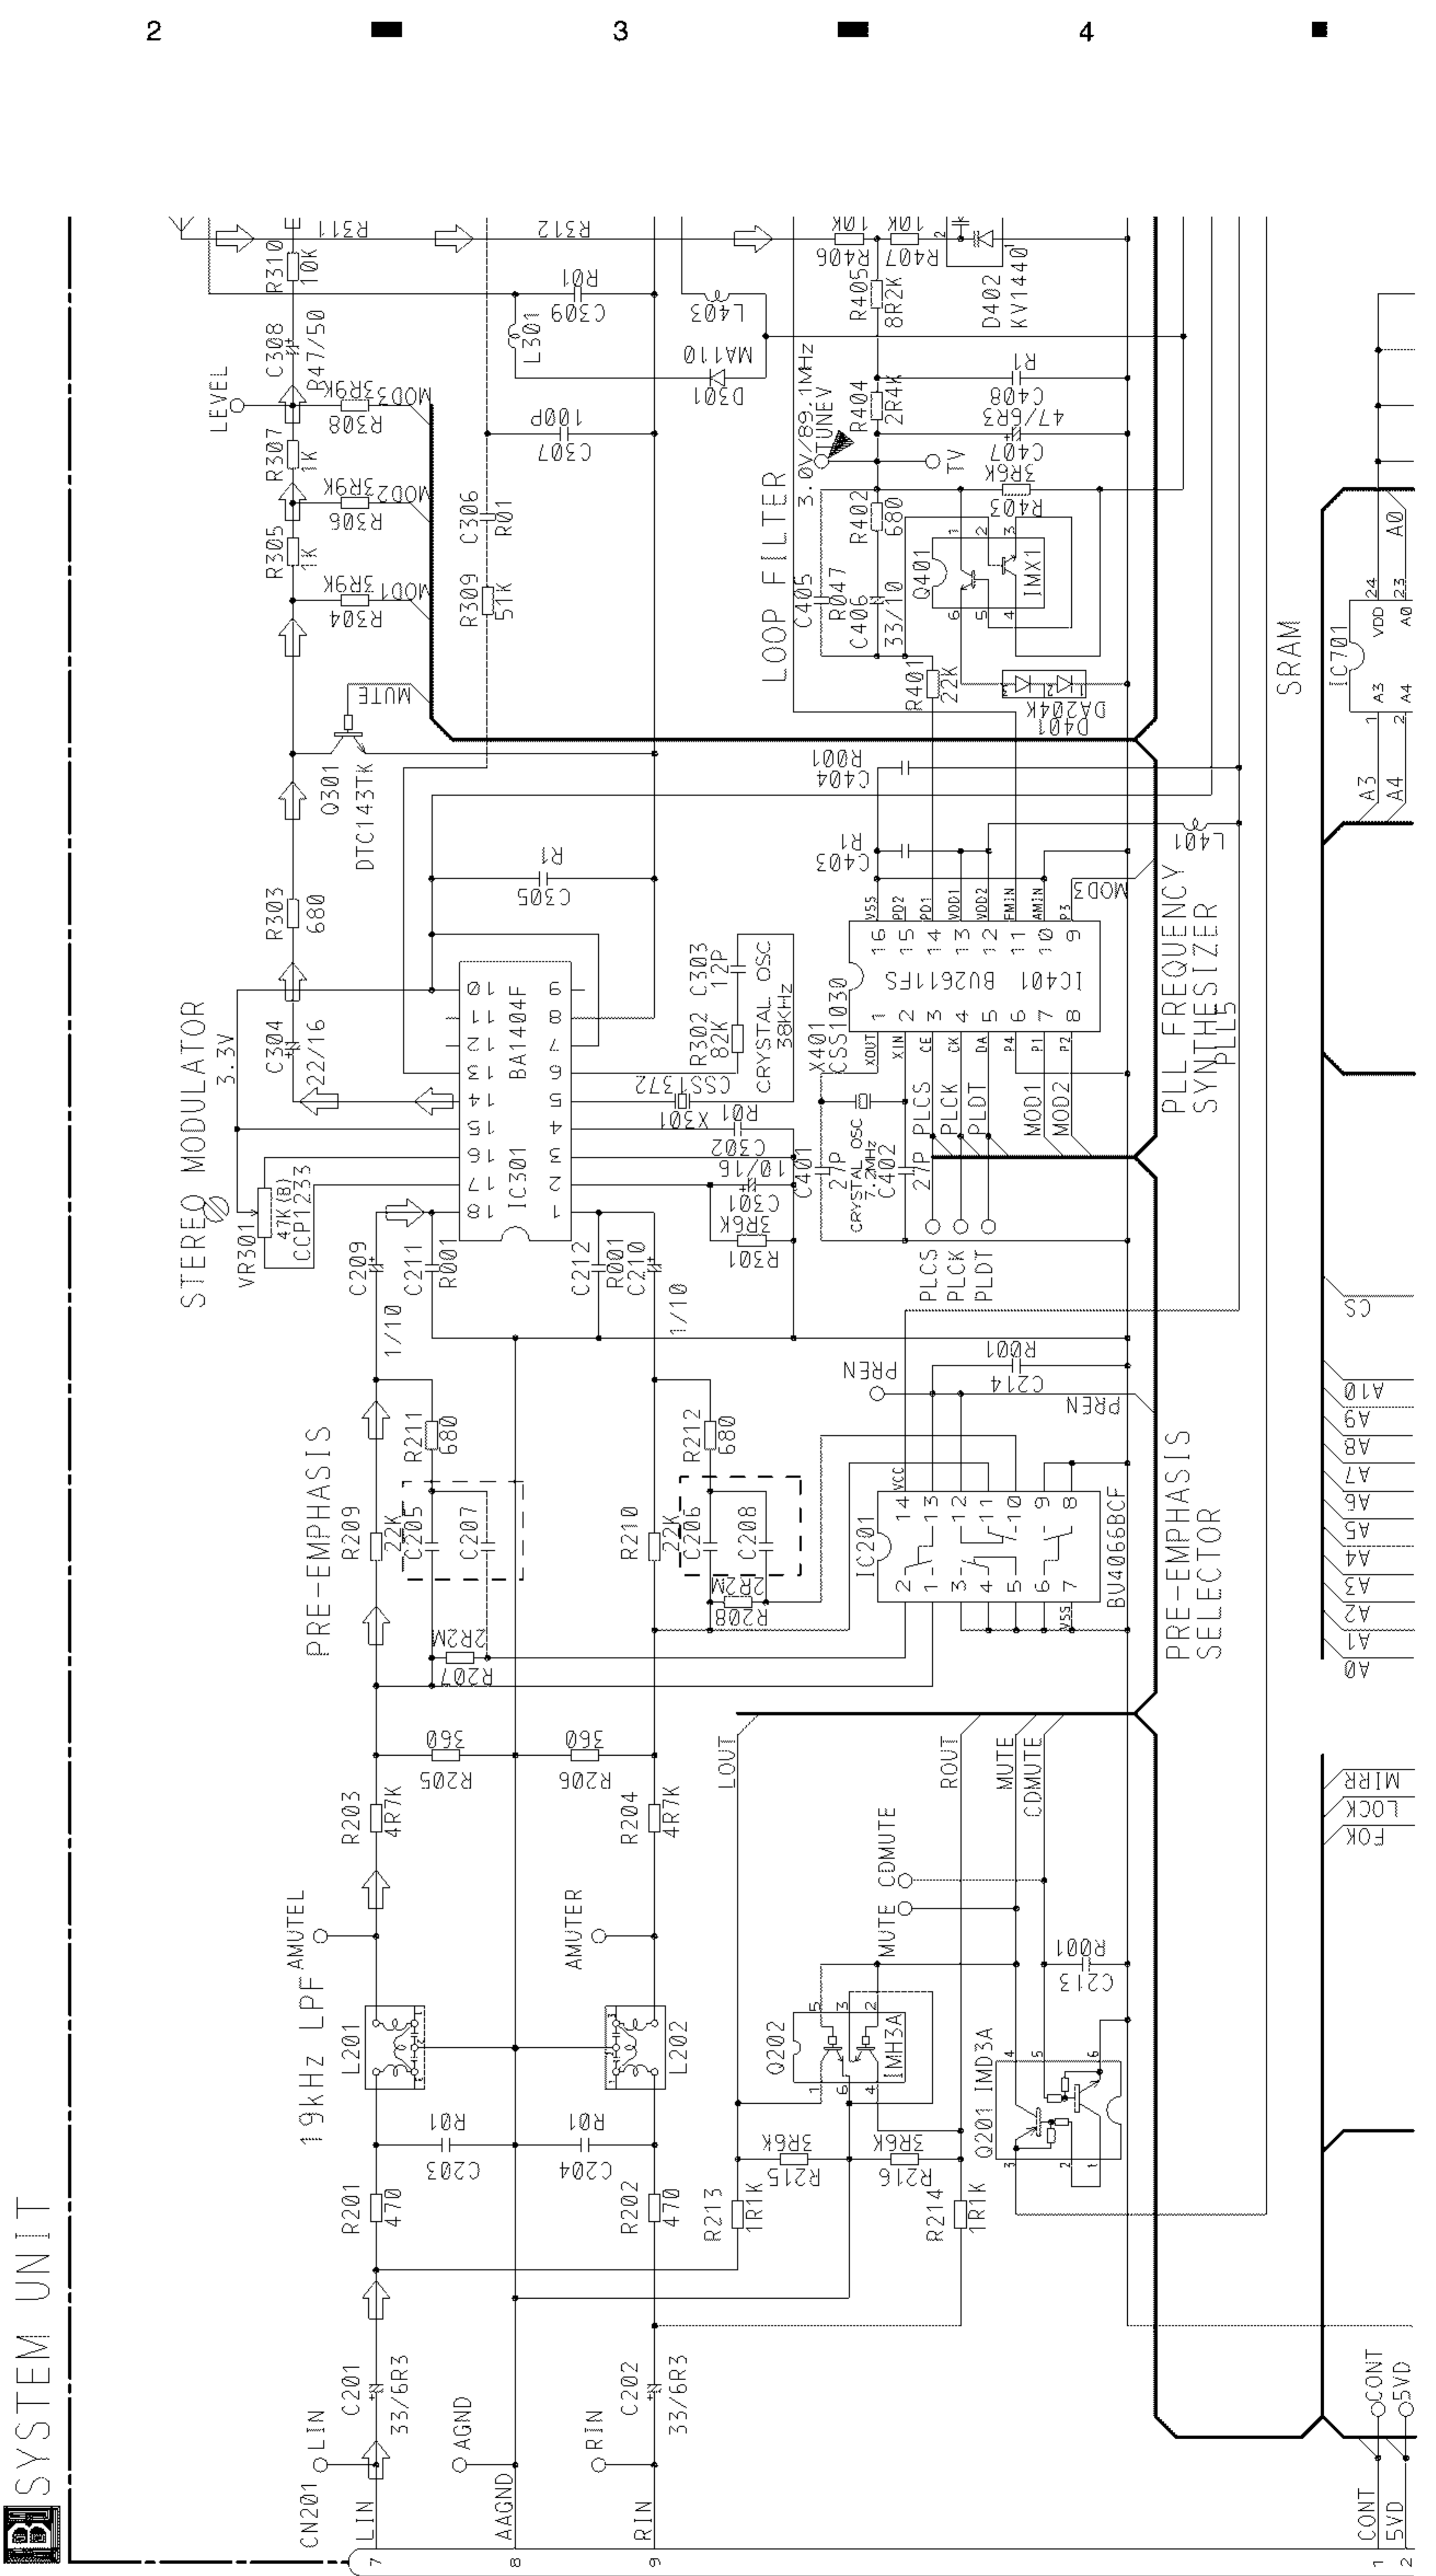

CN701

A

B

C

D

2

3

4

2

3

4

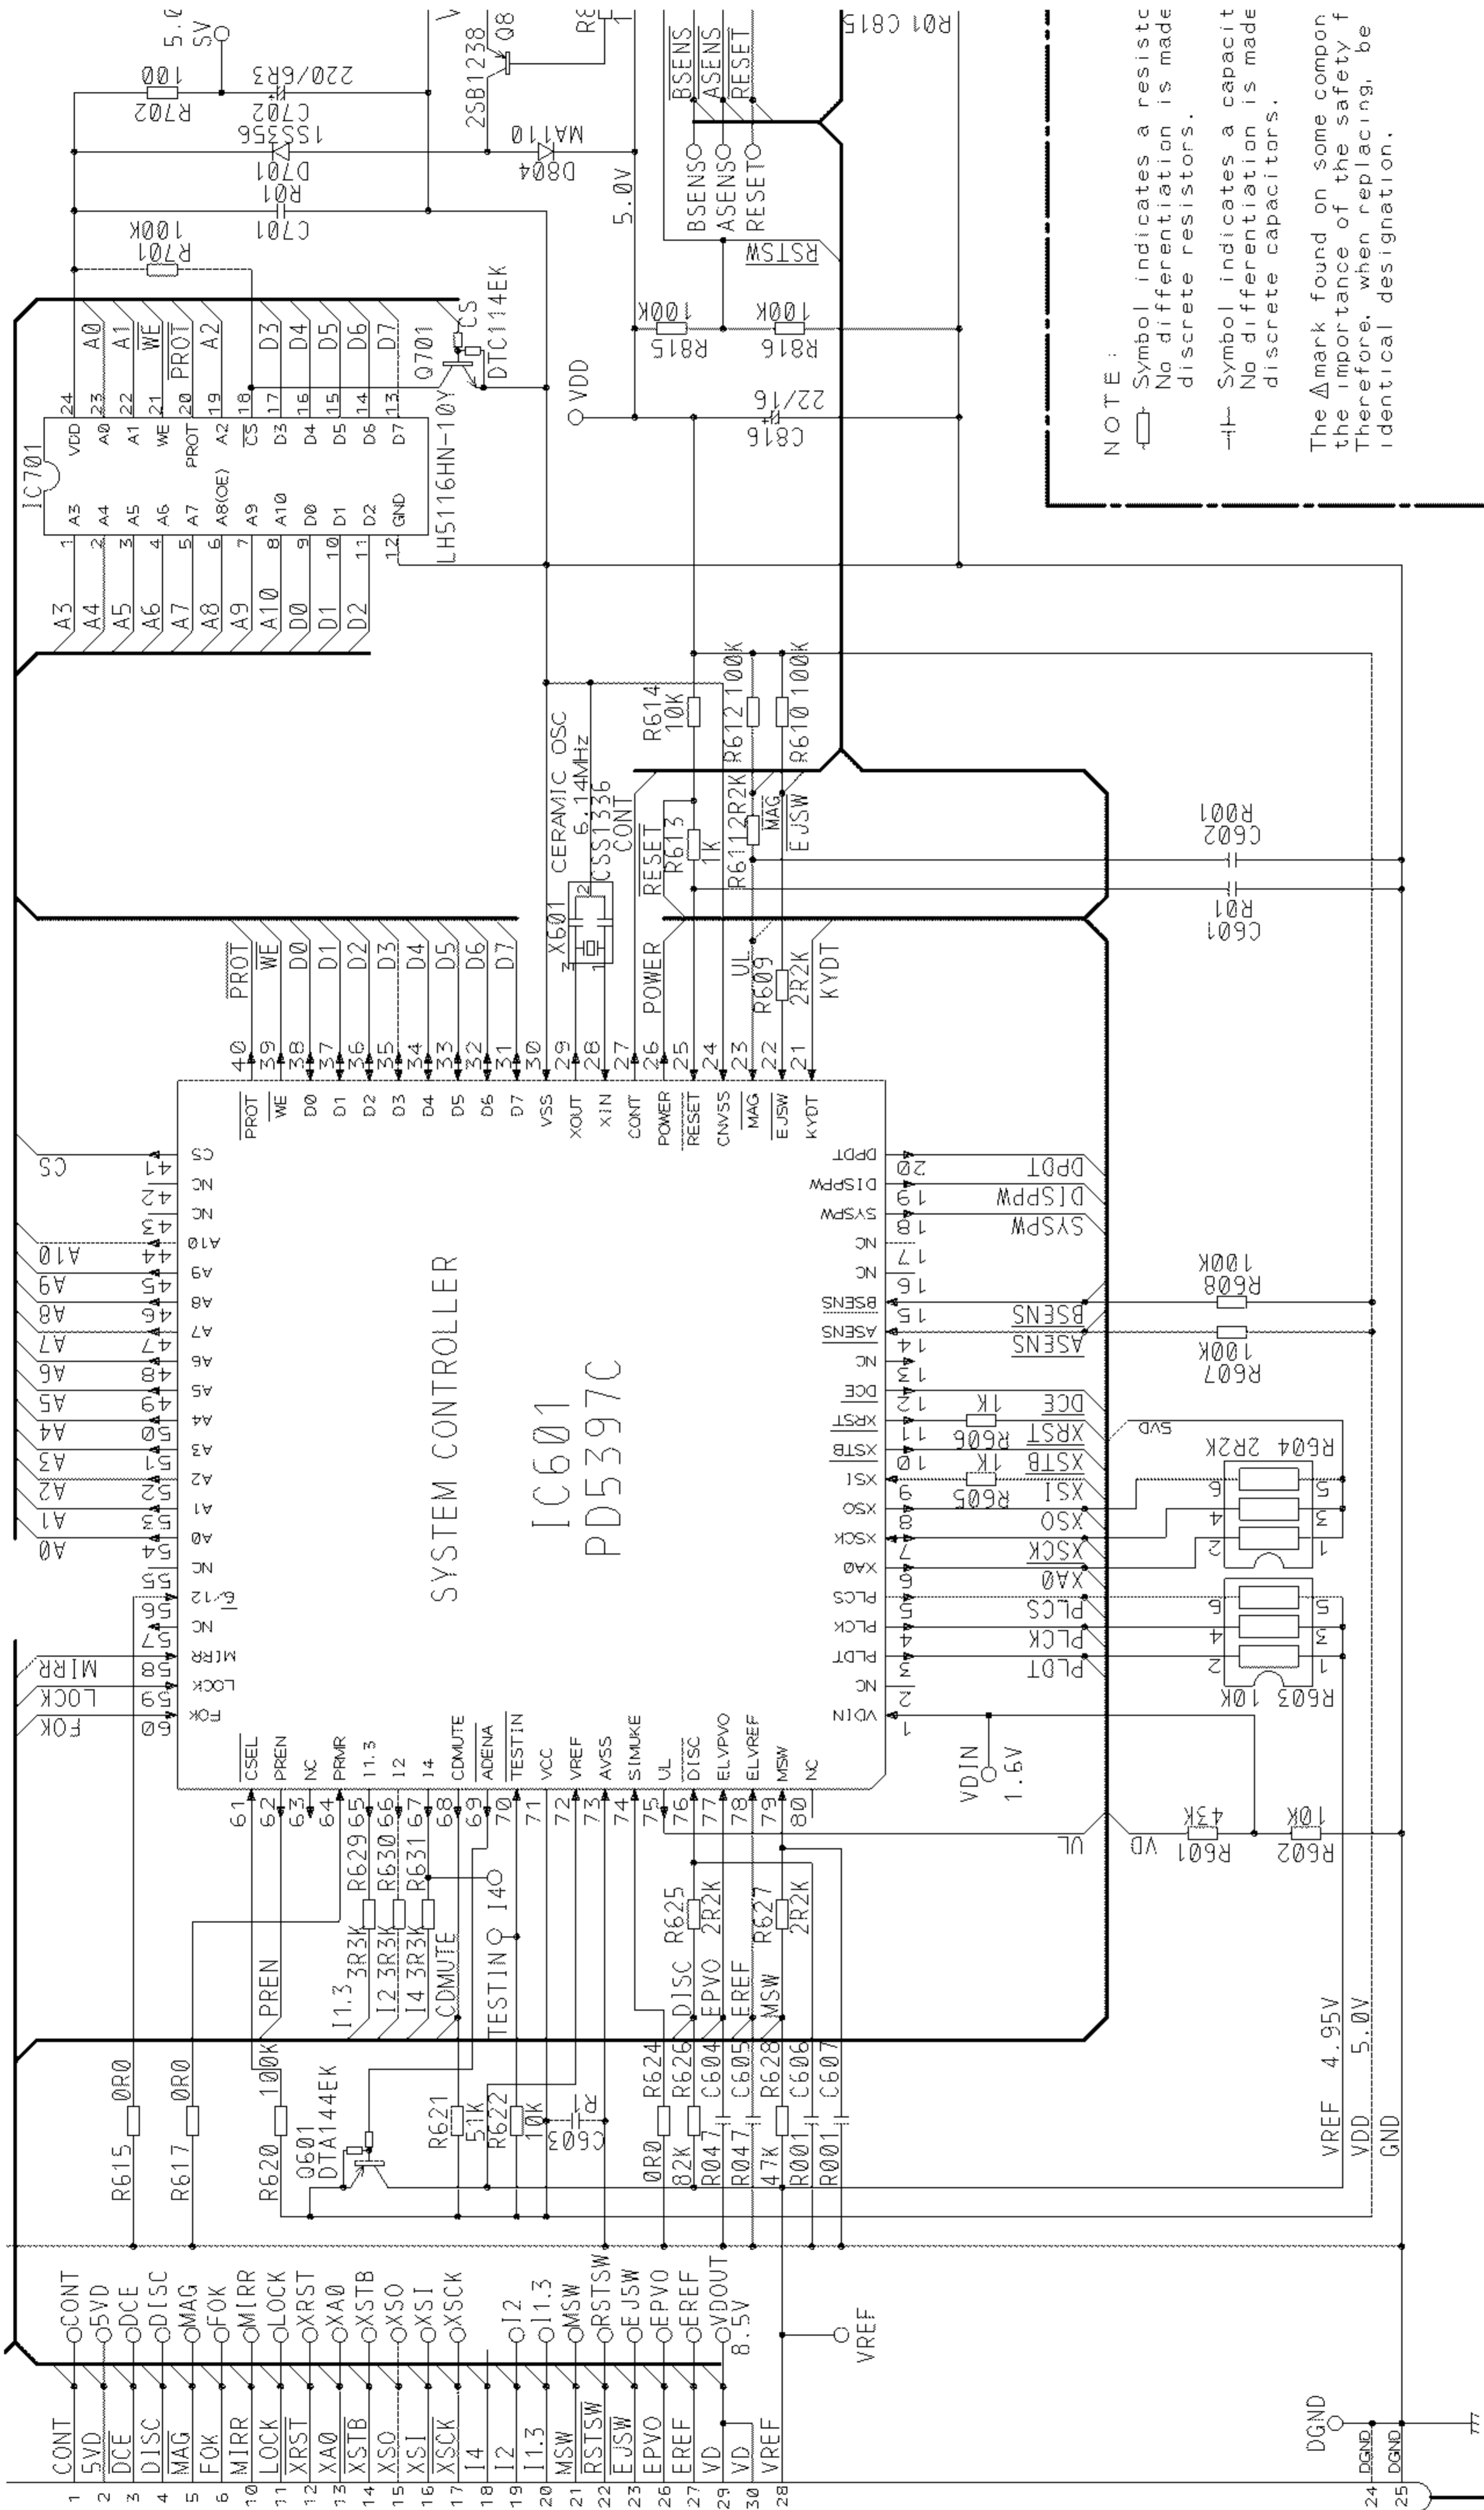


Fig. 6

MC-Service



A


B-a B-b


B

MC-Service

C

D

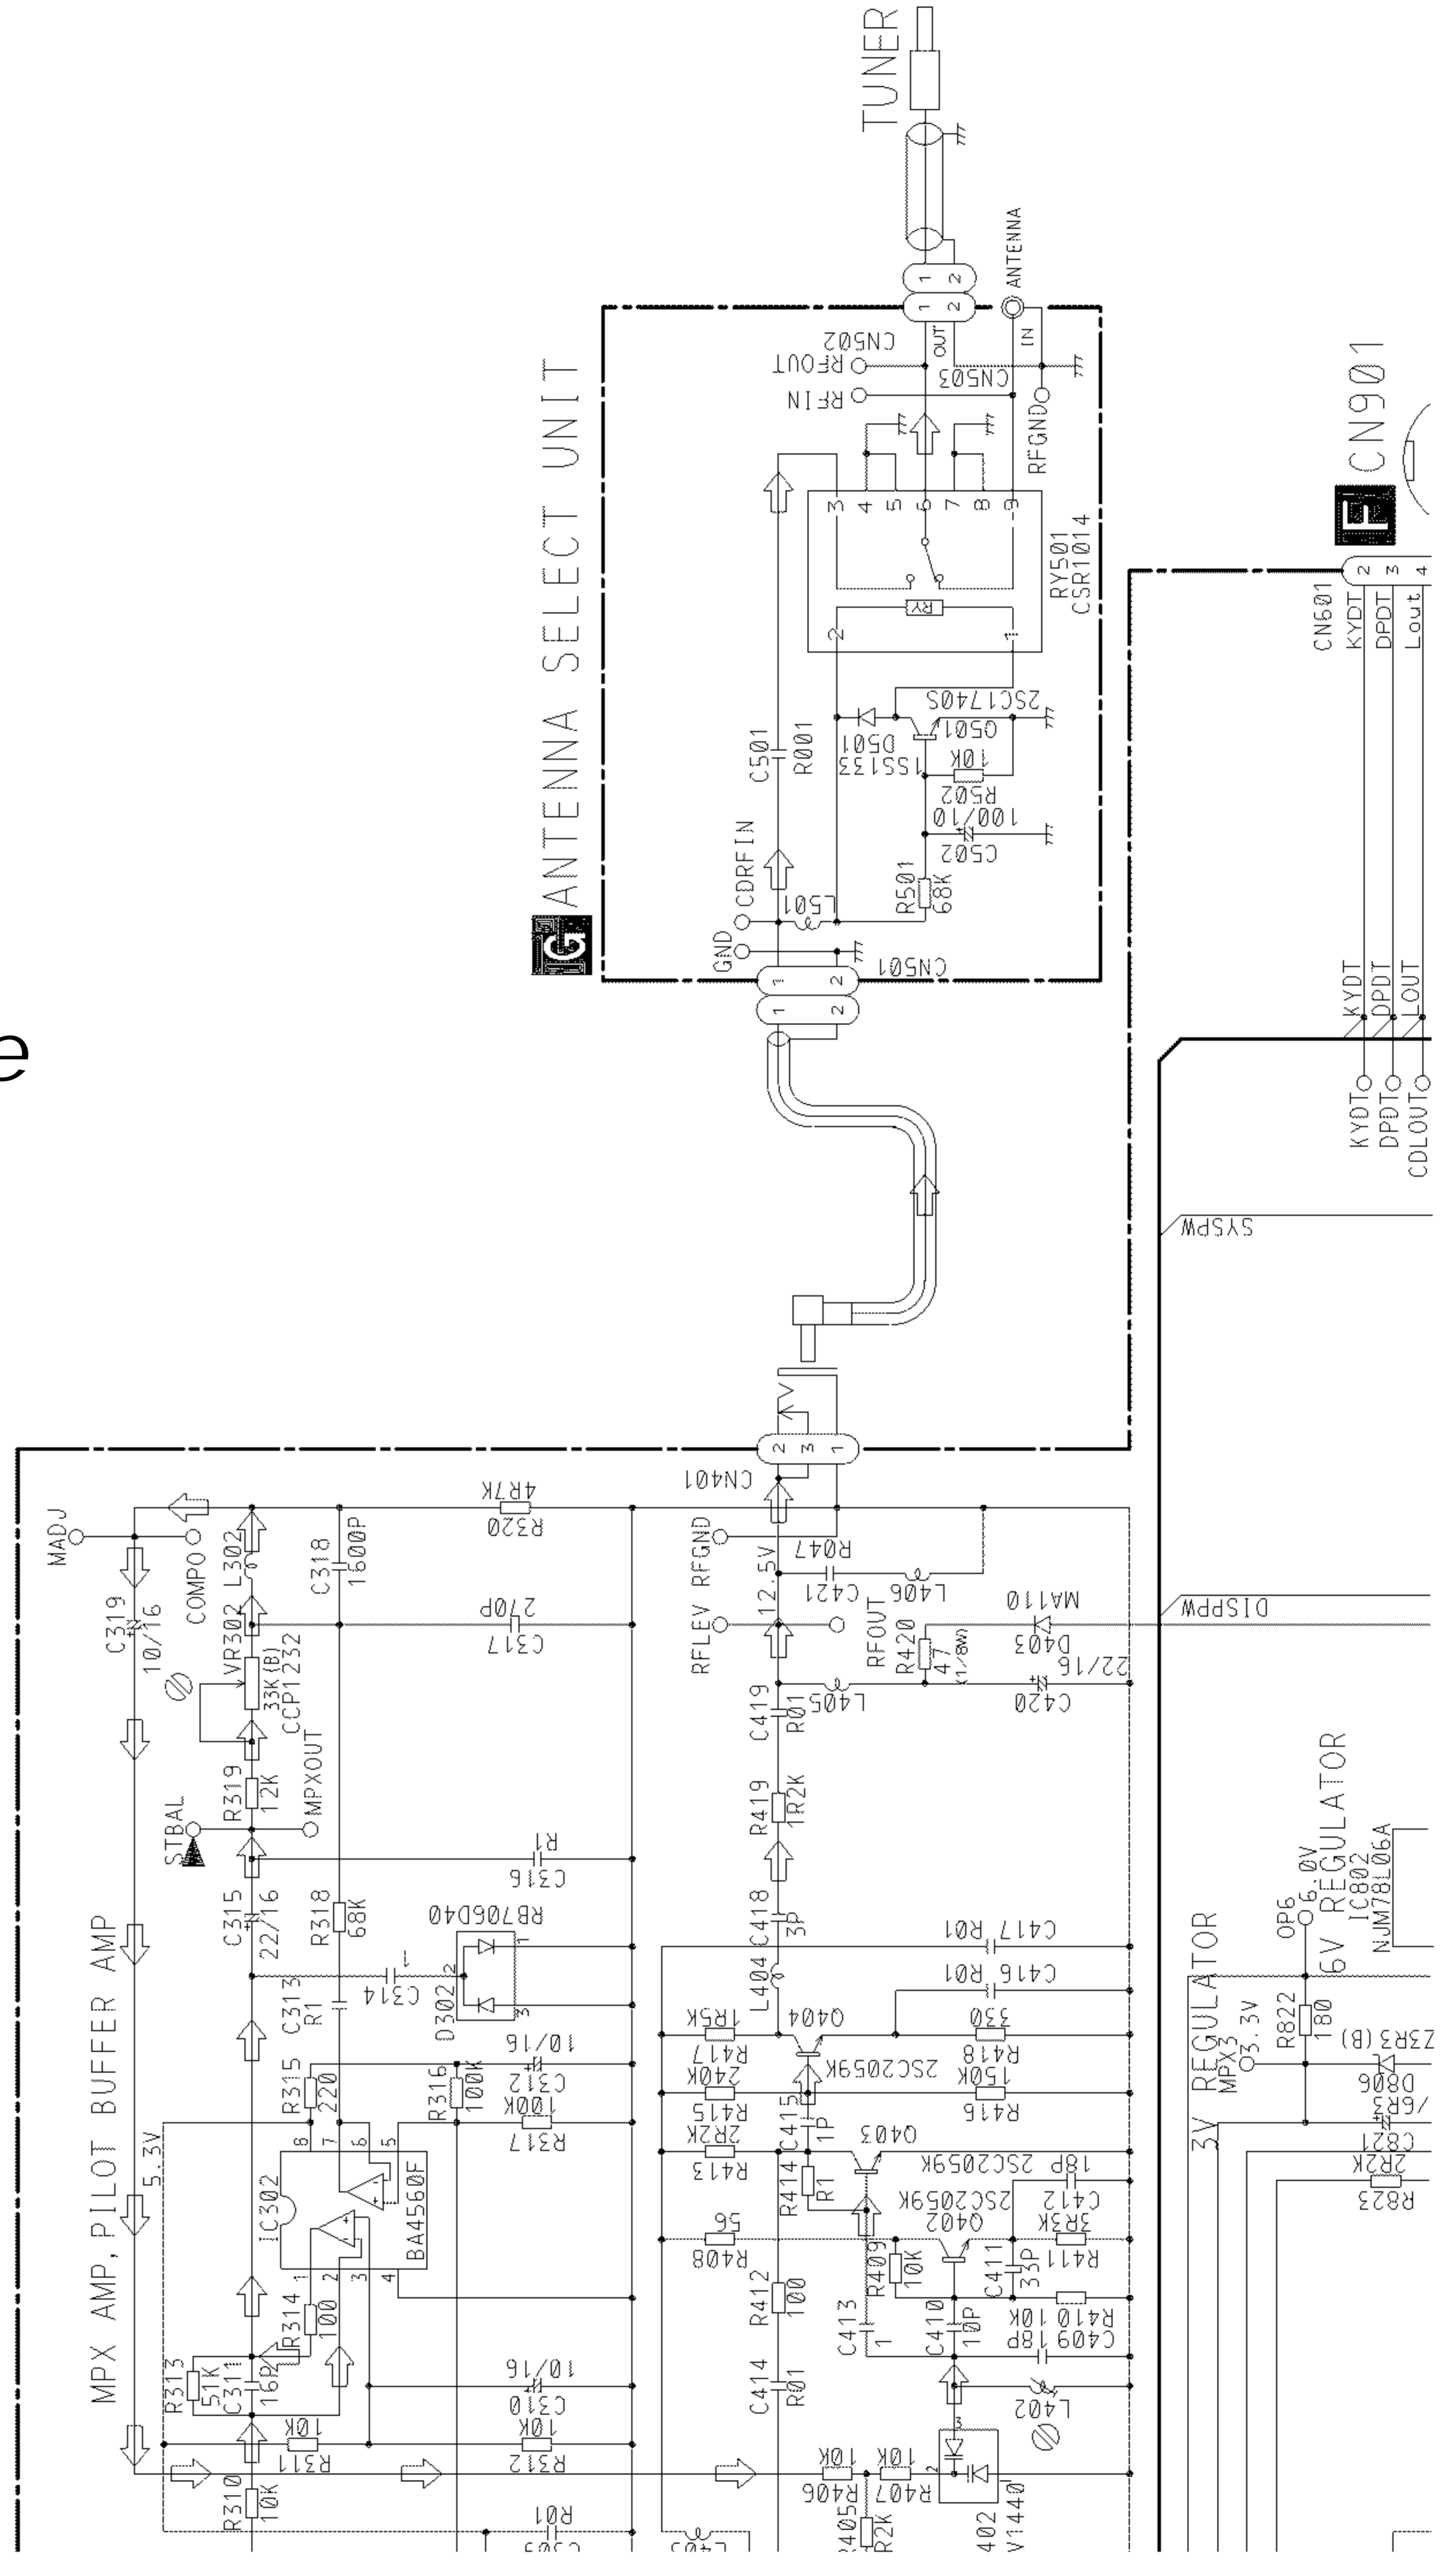

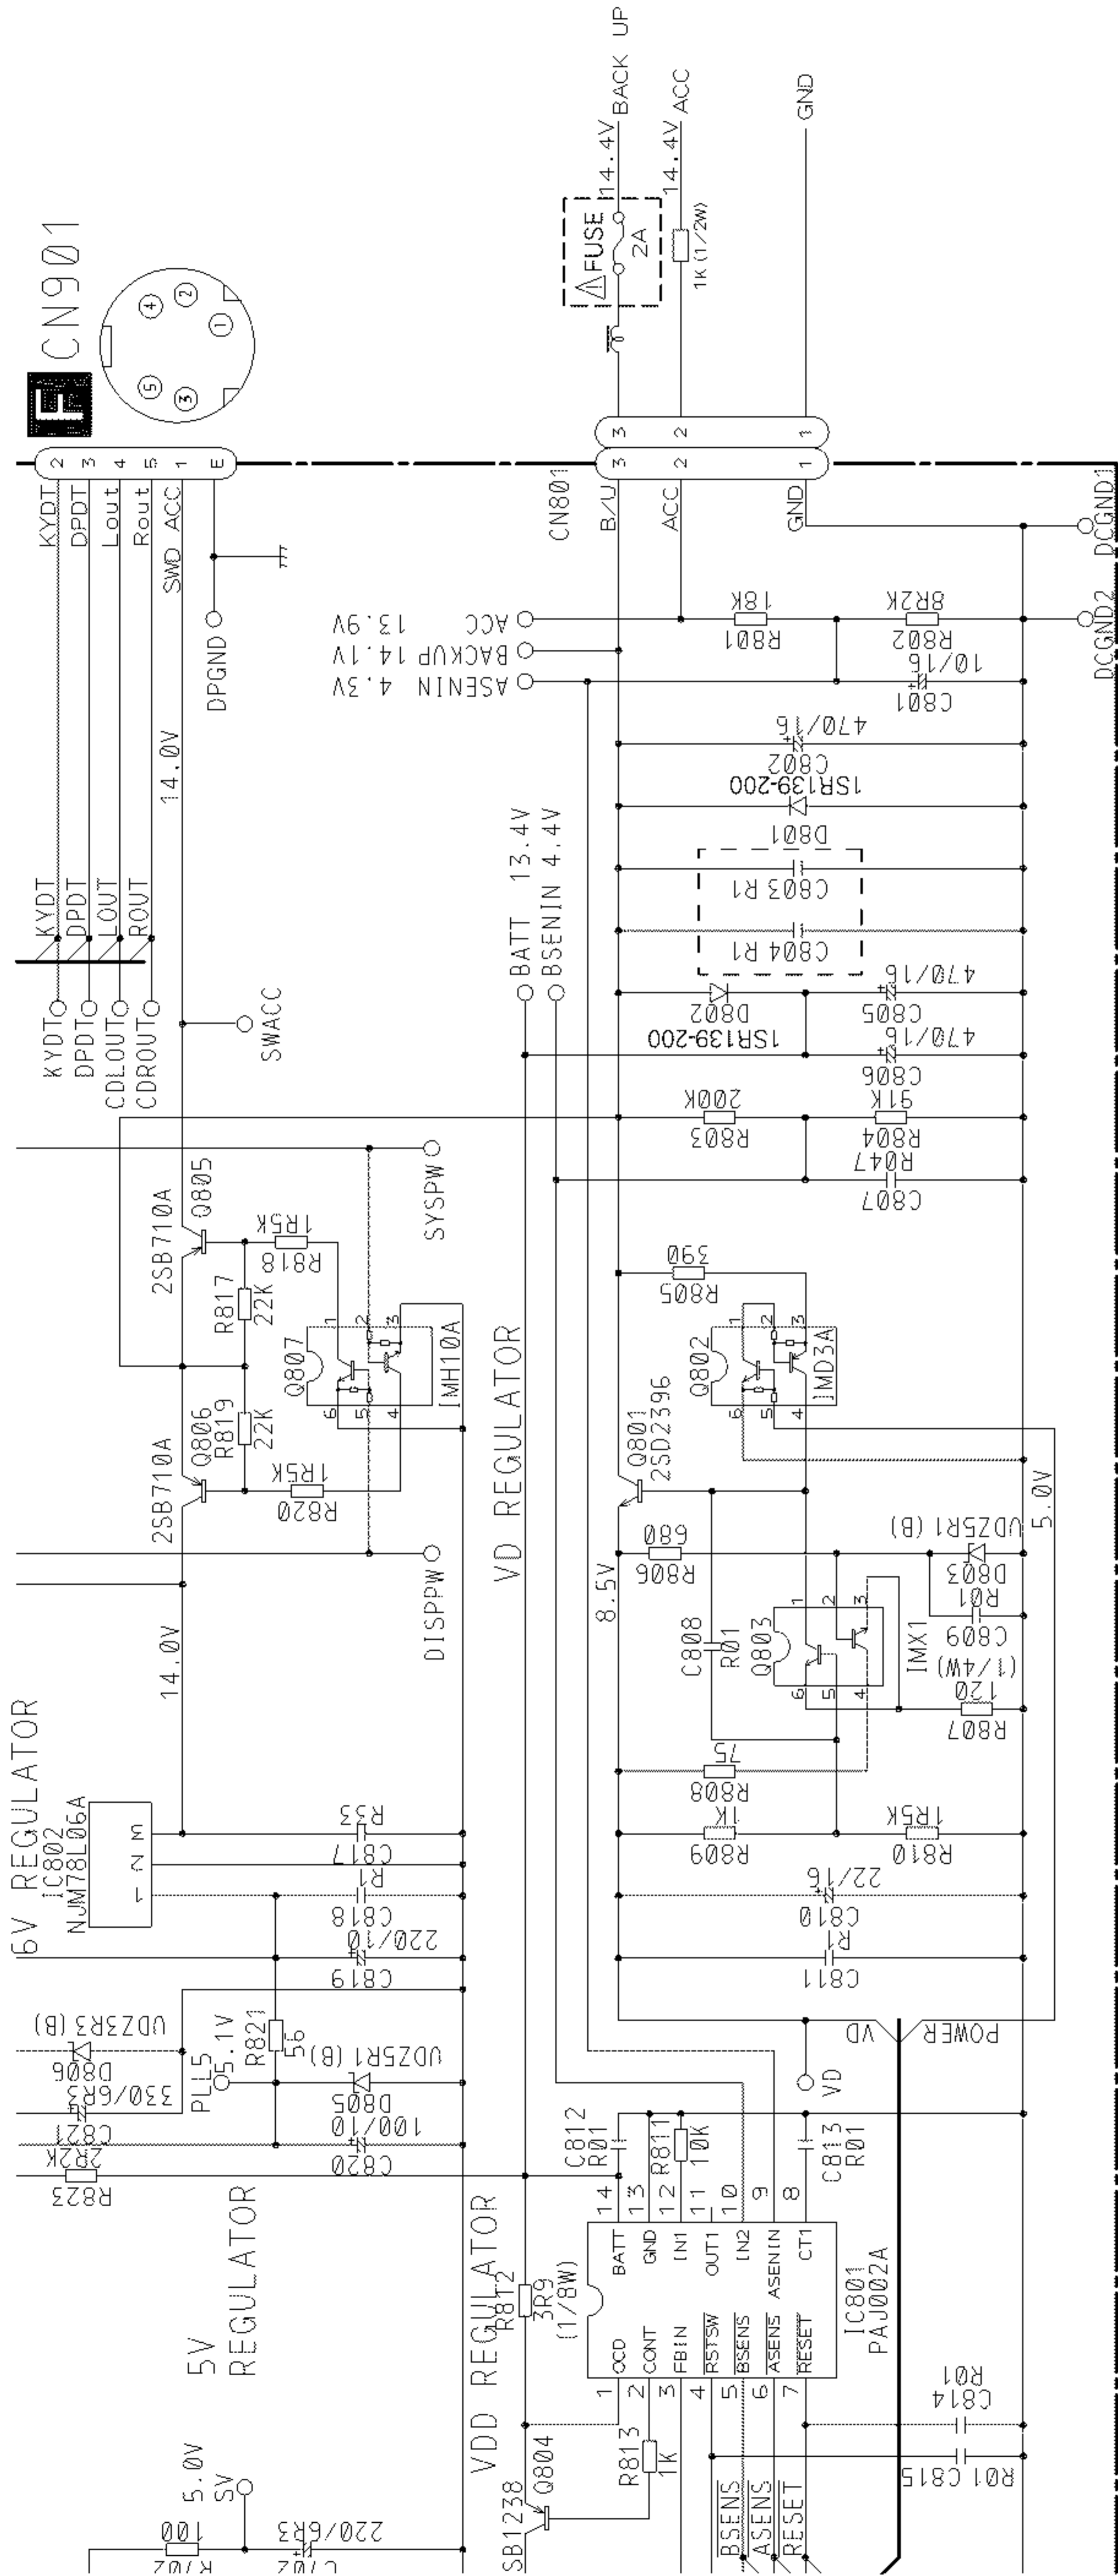

	CDX-FM637S/X1N/EW	CDX-FM637S/X1N/ES
C205,206	2700P	3900P
C207,208	2200P	3300P
C803	Not used	R1
C804	R1	Not used
△ FUSE(2A)	CEK1063	CEK1048



resistor. is made between chip resistors and capacitor. is made between chip capacitors and component parts indicates safety factor of the part. ng, be sure to use parts of

Decimal points for resistor and capacitor fixed values are expressed as:  
 2.2→2R2  
 0.022→R022

Fig. 7


**3.2 CD MECHANISM MODULE(GUIDE PAGE)**

A

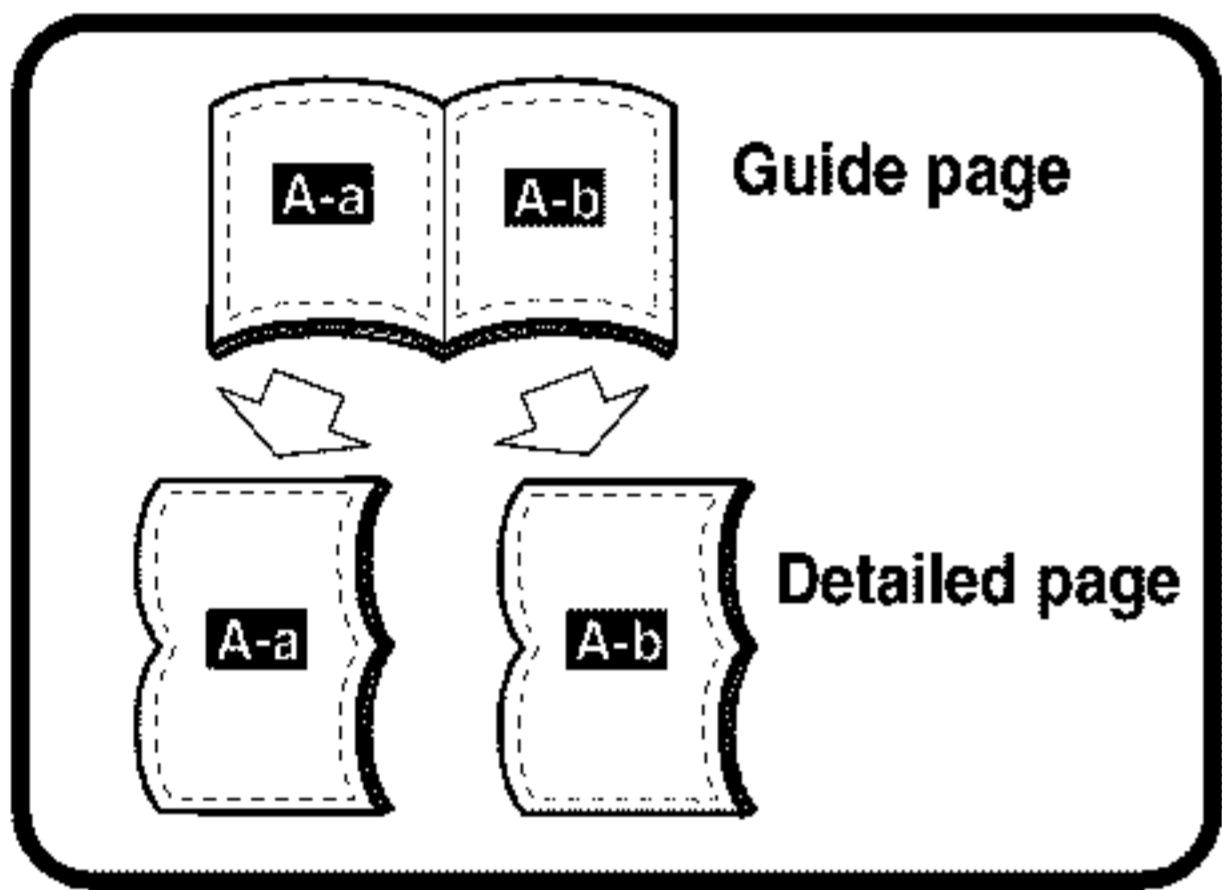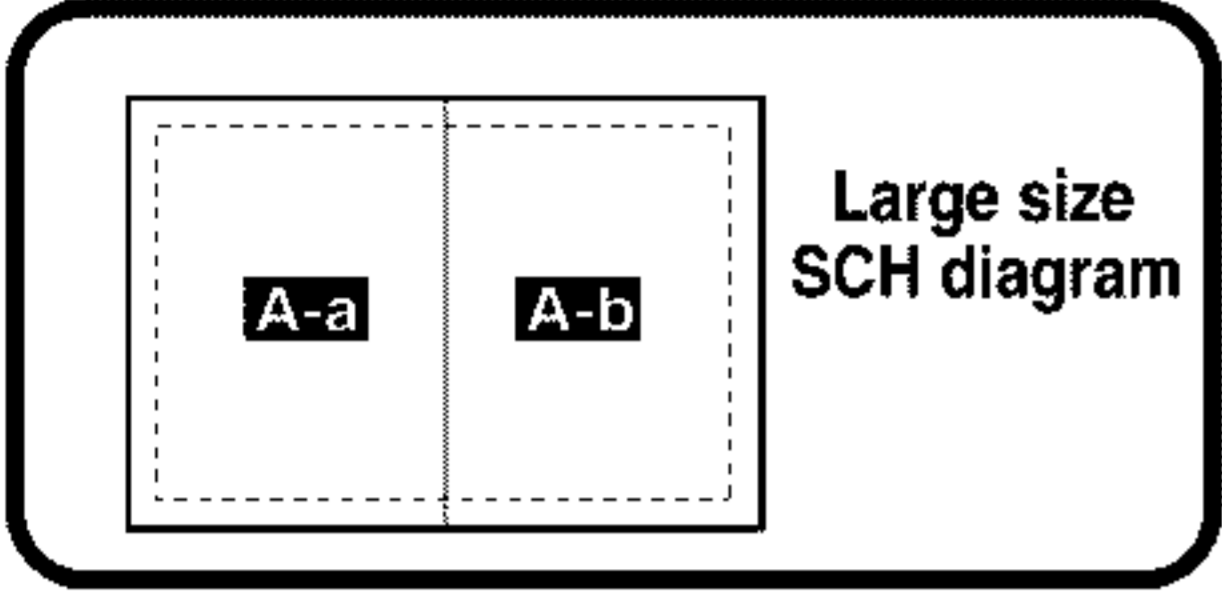

**A-a**

B

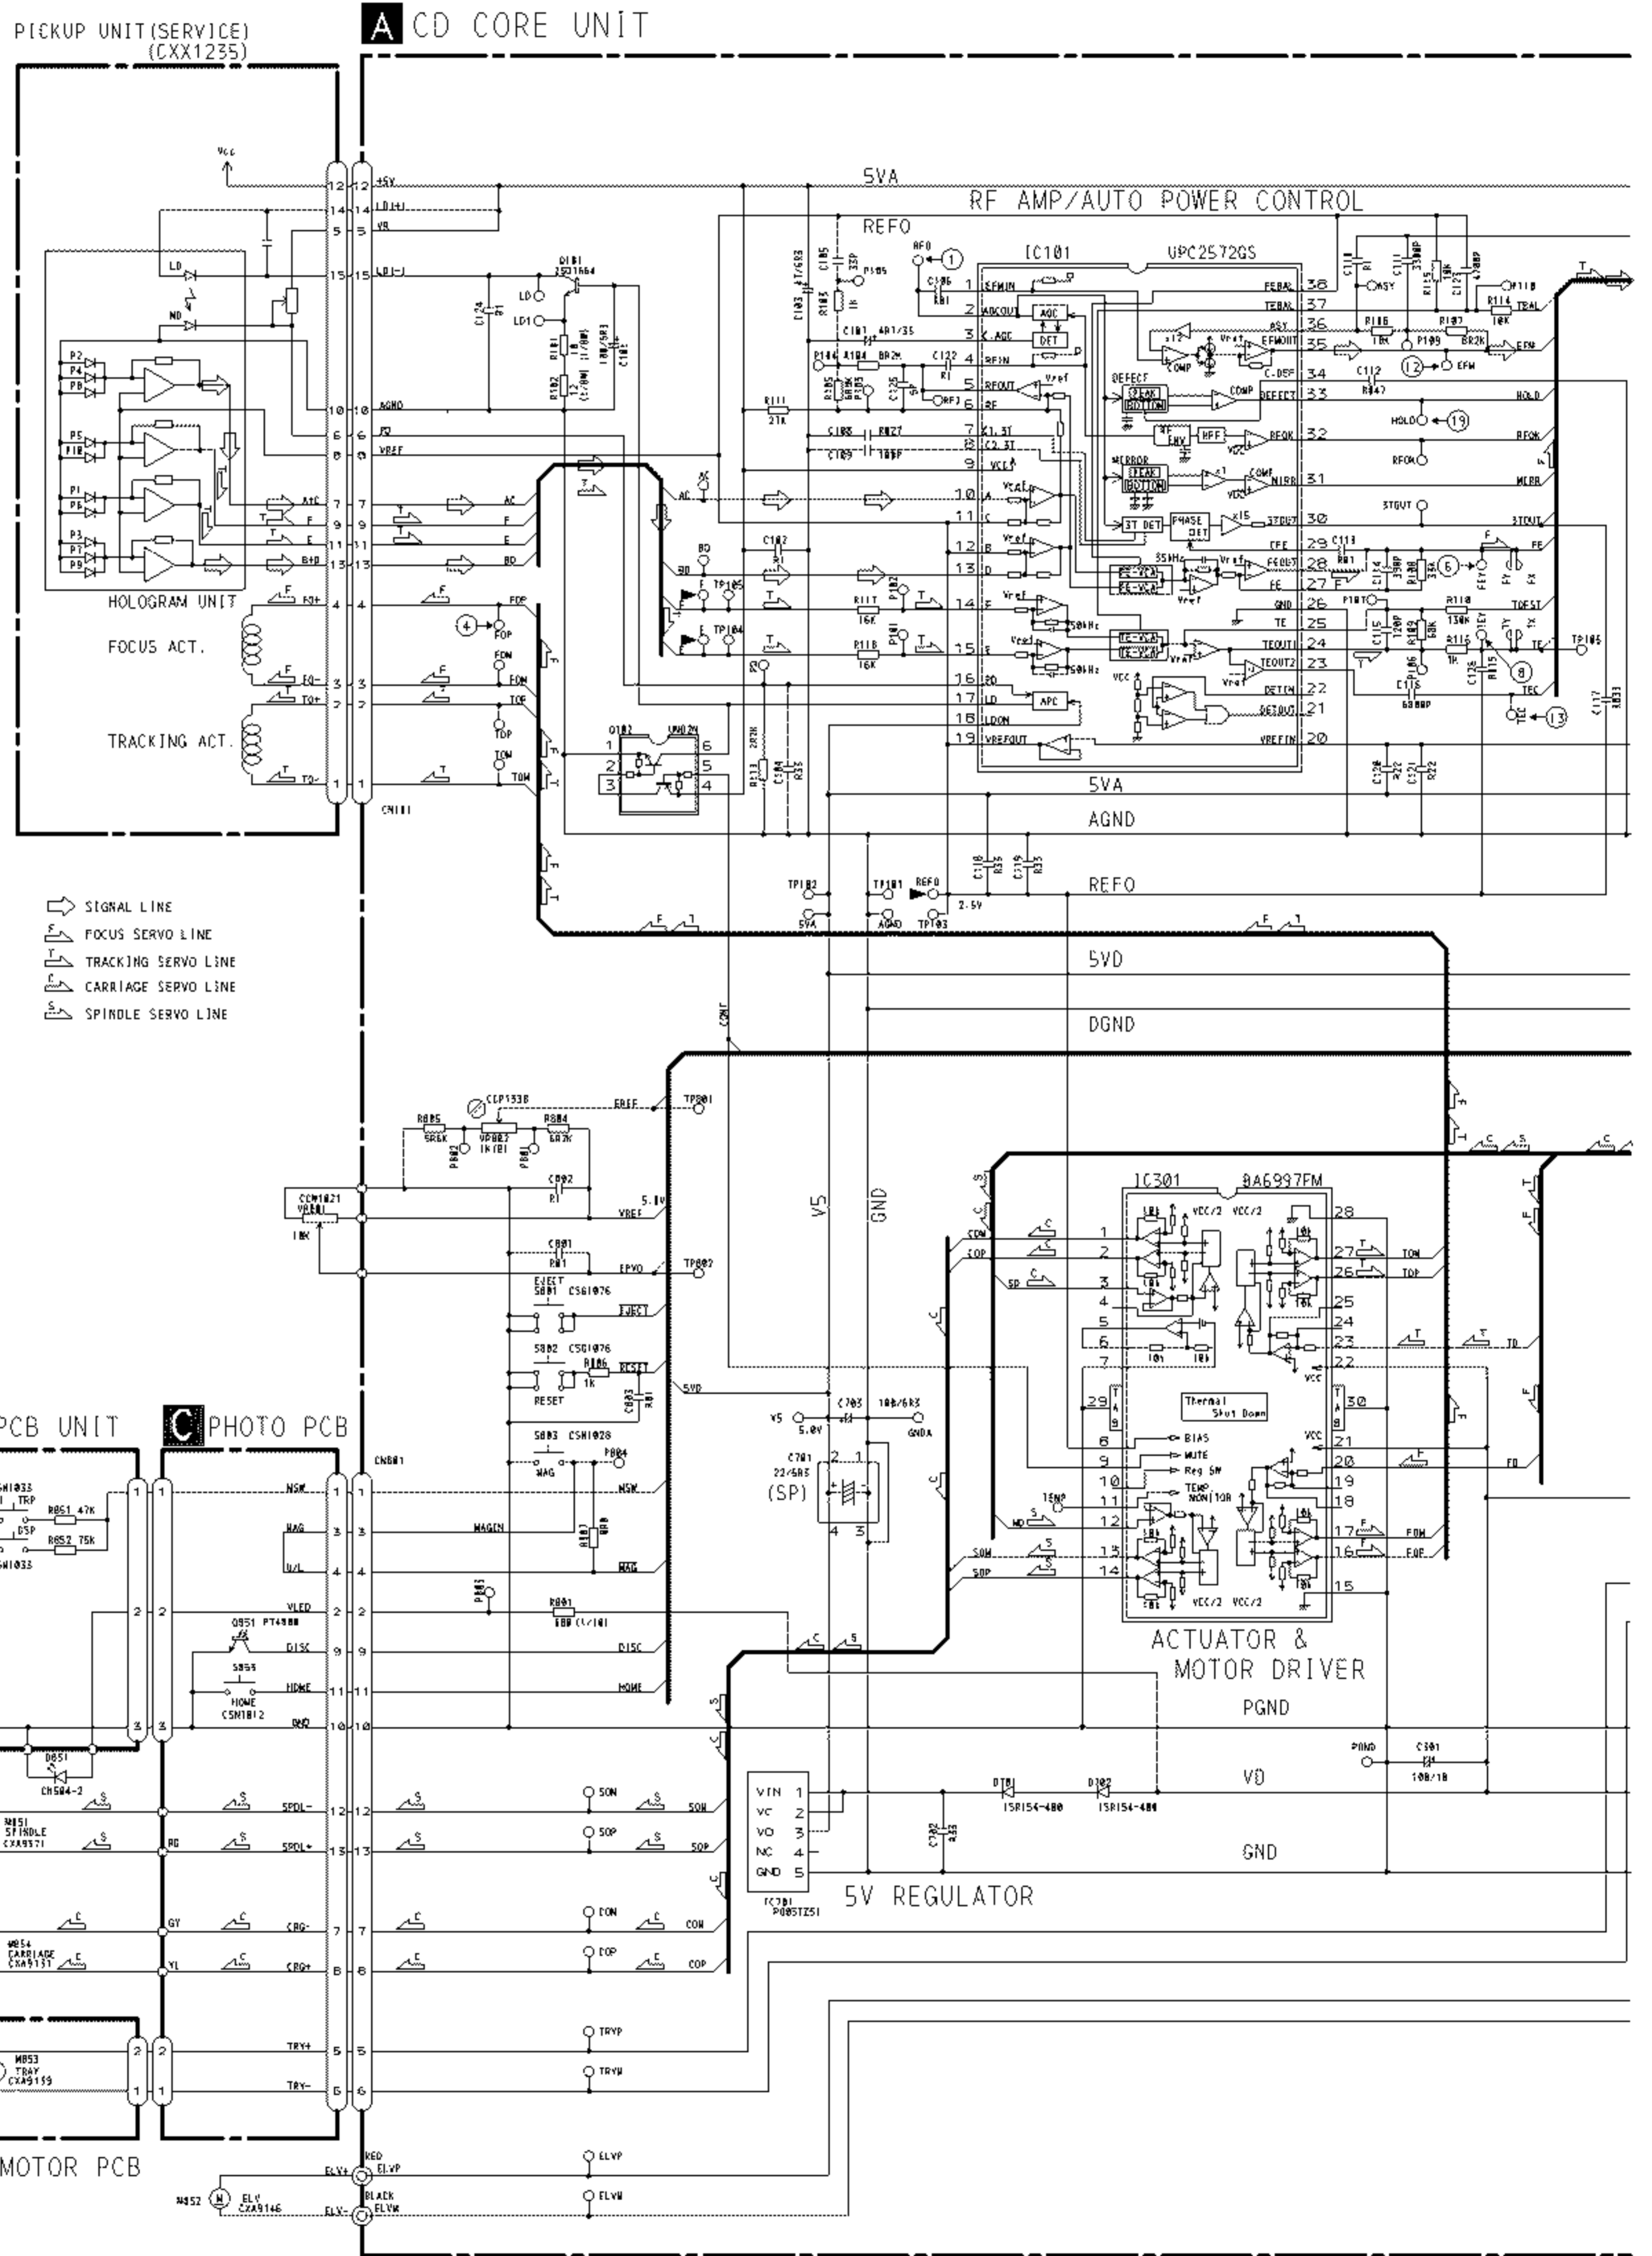

C

MC-Service

D

# MC-Service

## A-b


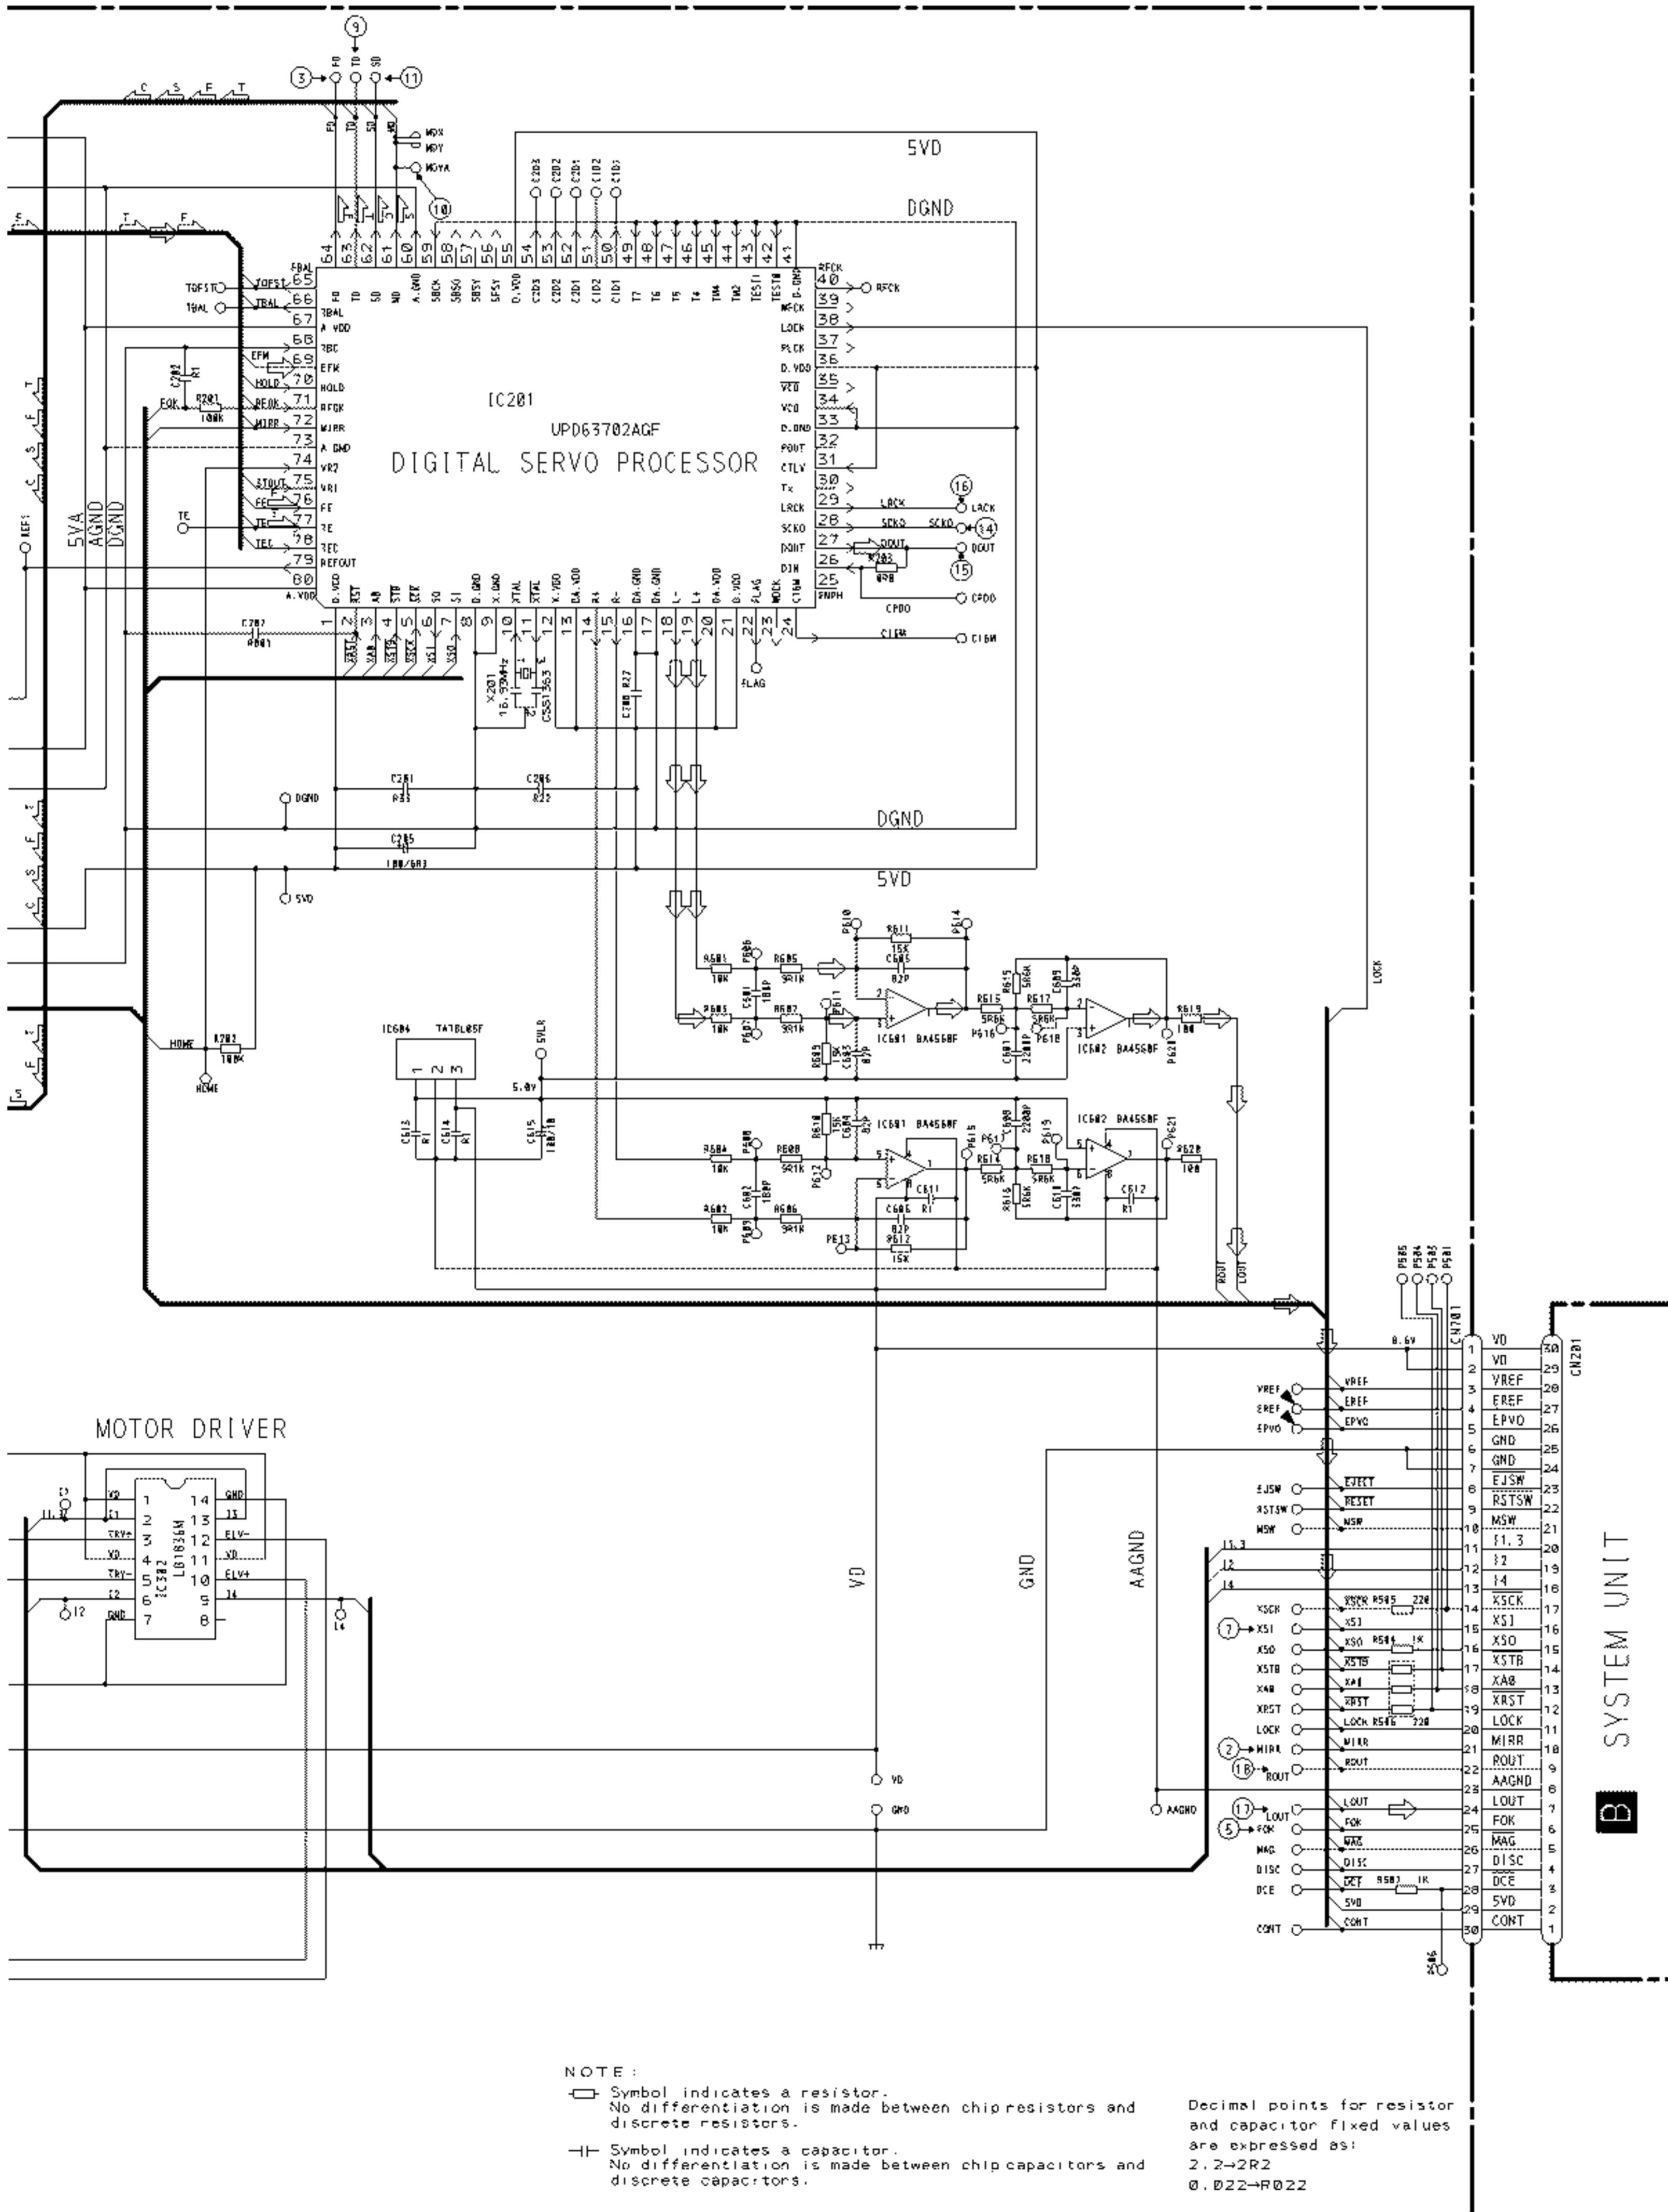


Fig. 8

A-B A-b


CD CORE UNIT

PICKUP UNIT (SERVICE)  
(CXX1235)

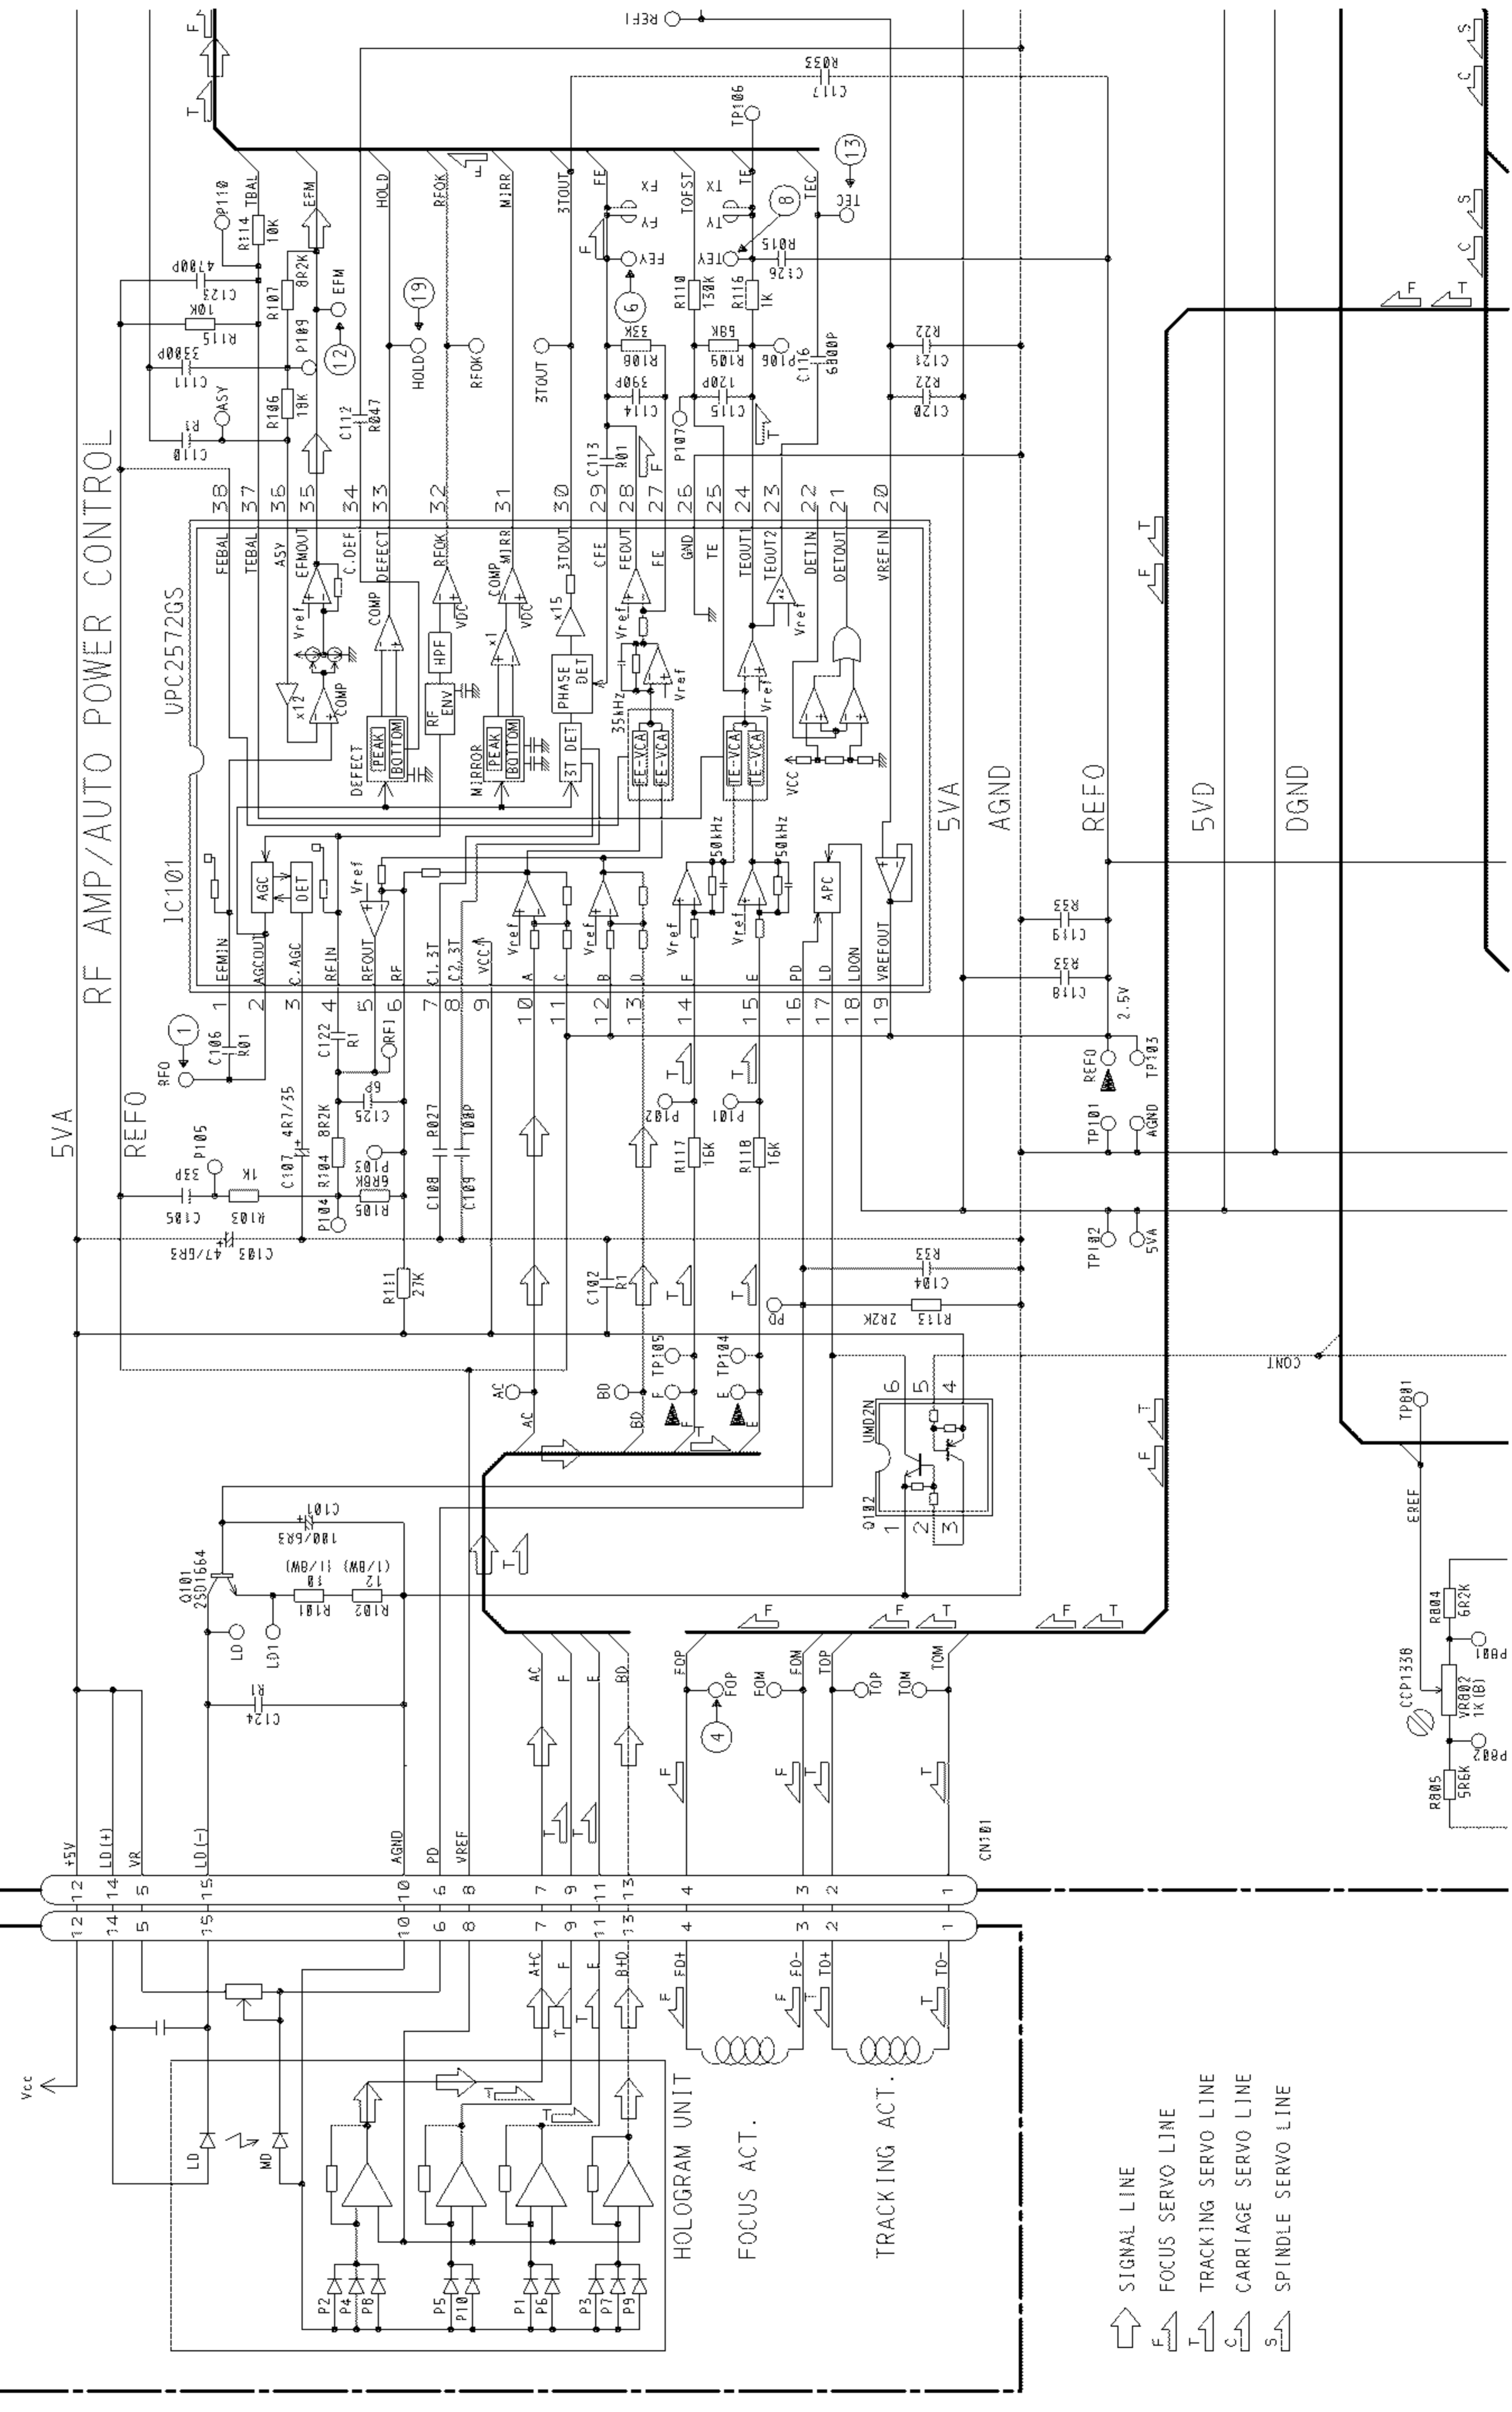

- ↑ SIGNAL LINE
- F FOCUS SERVO LINE
- T TRACKING SERVO LINE
- C CARRIAGE SERVO LINE
- S SPINDLE SERVO LINE

A-a

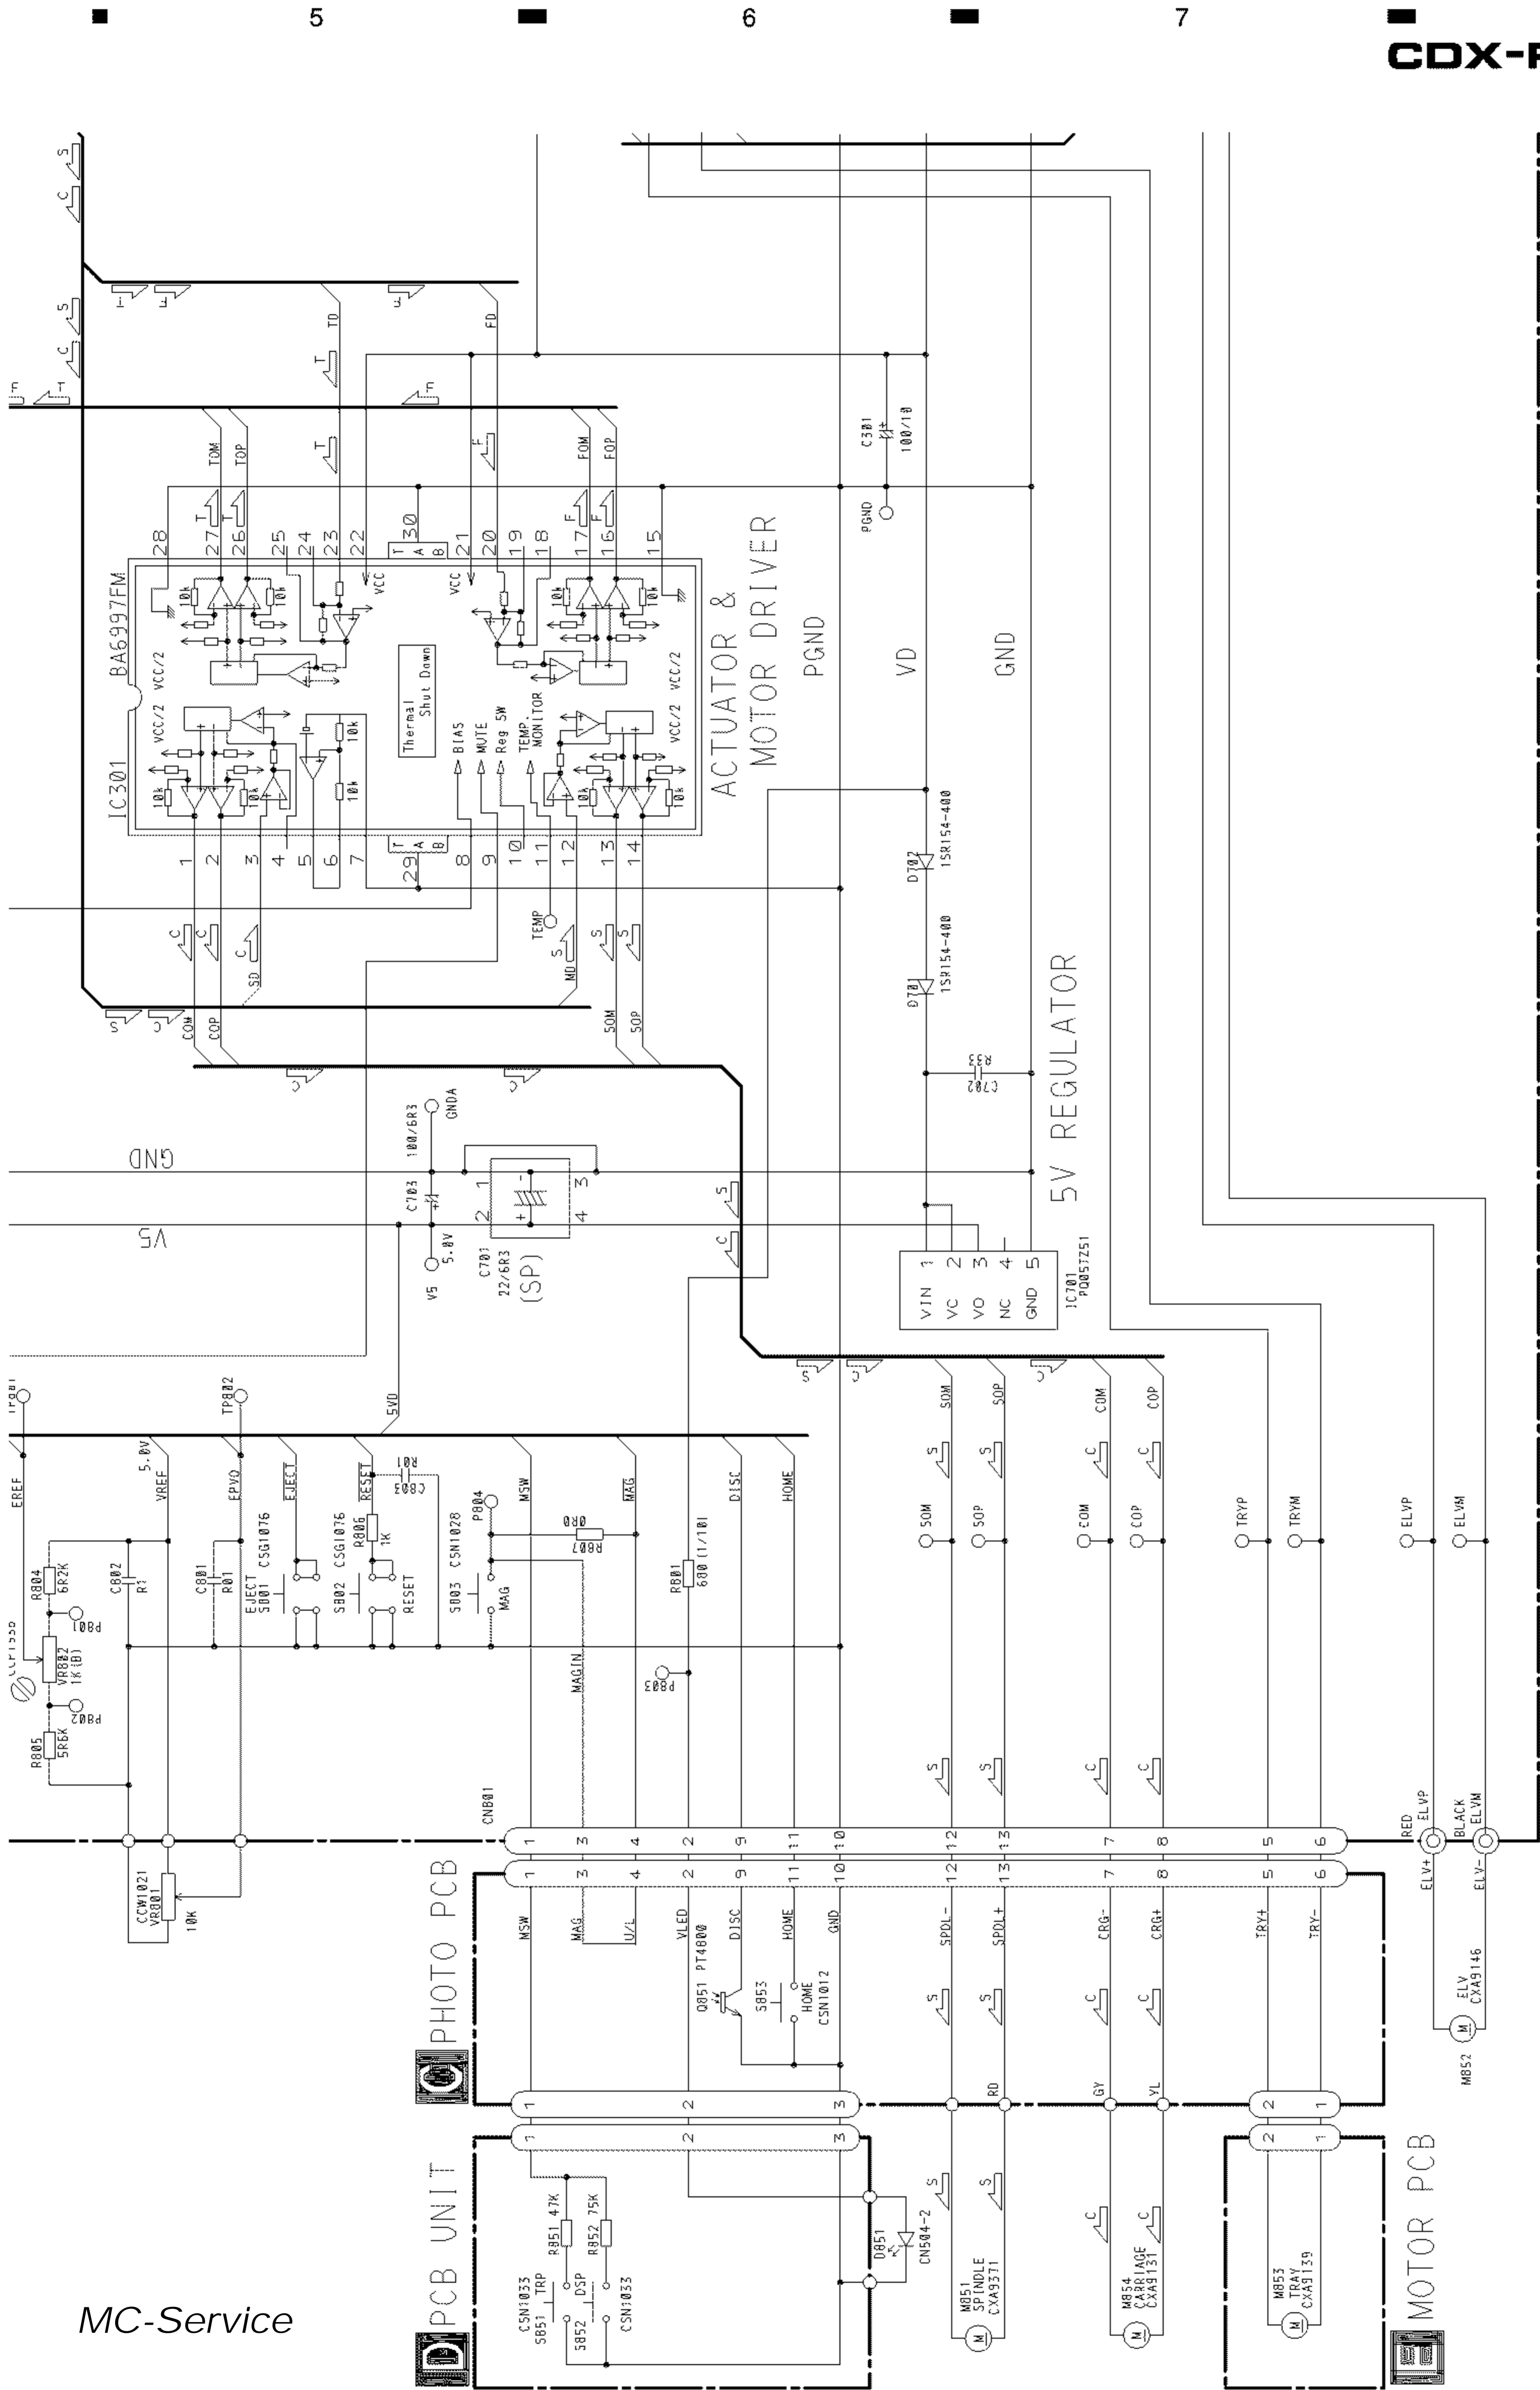


MC-Service

Fig. 9

**A-a C D E**



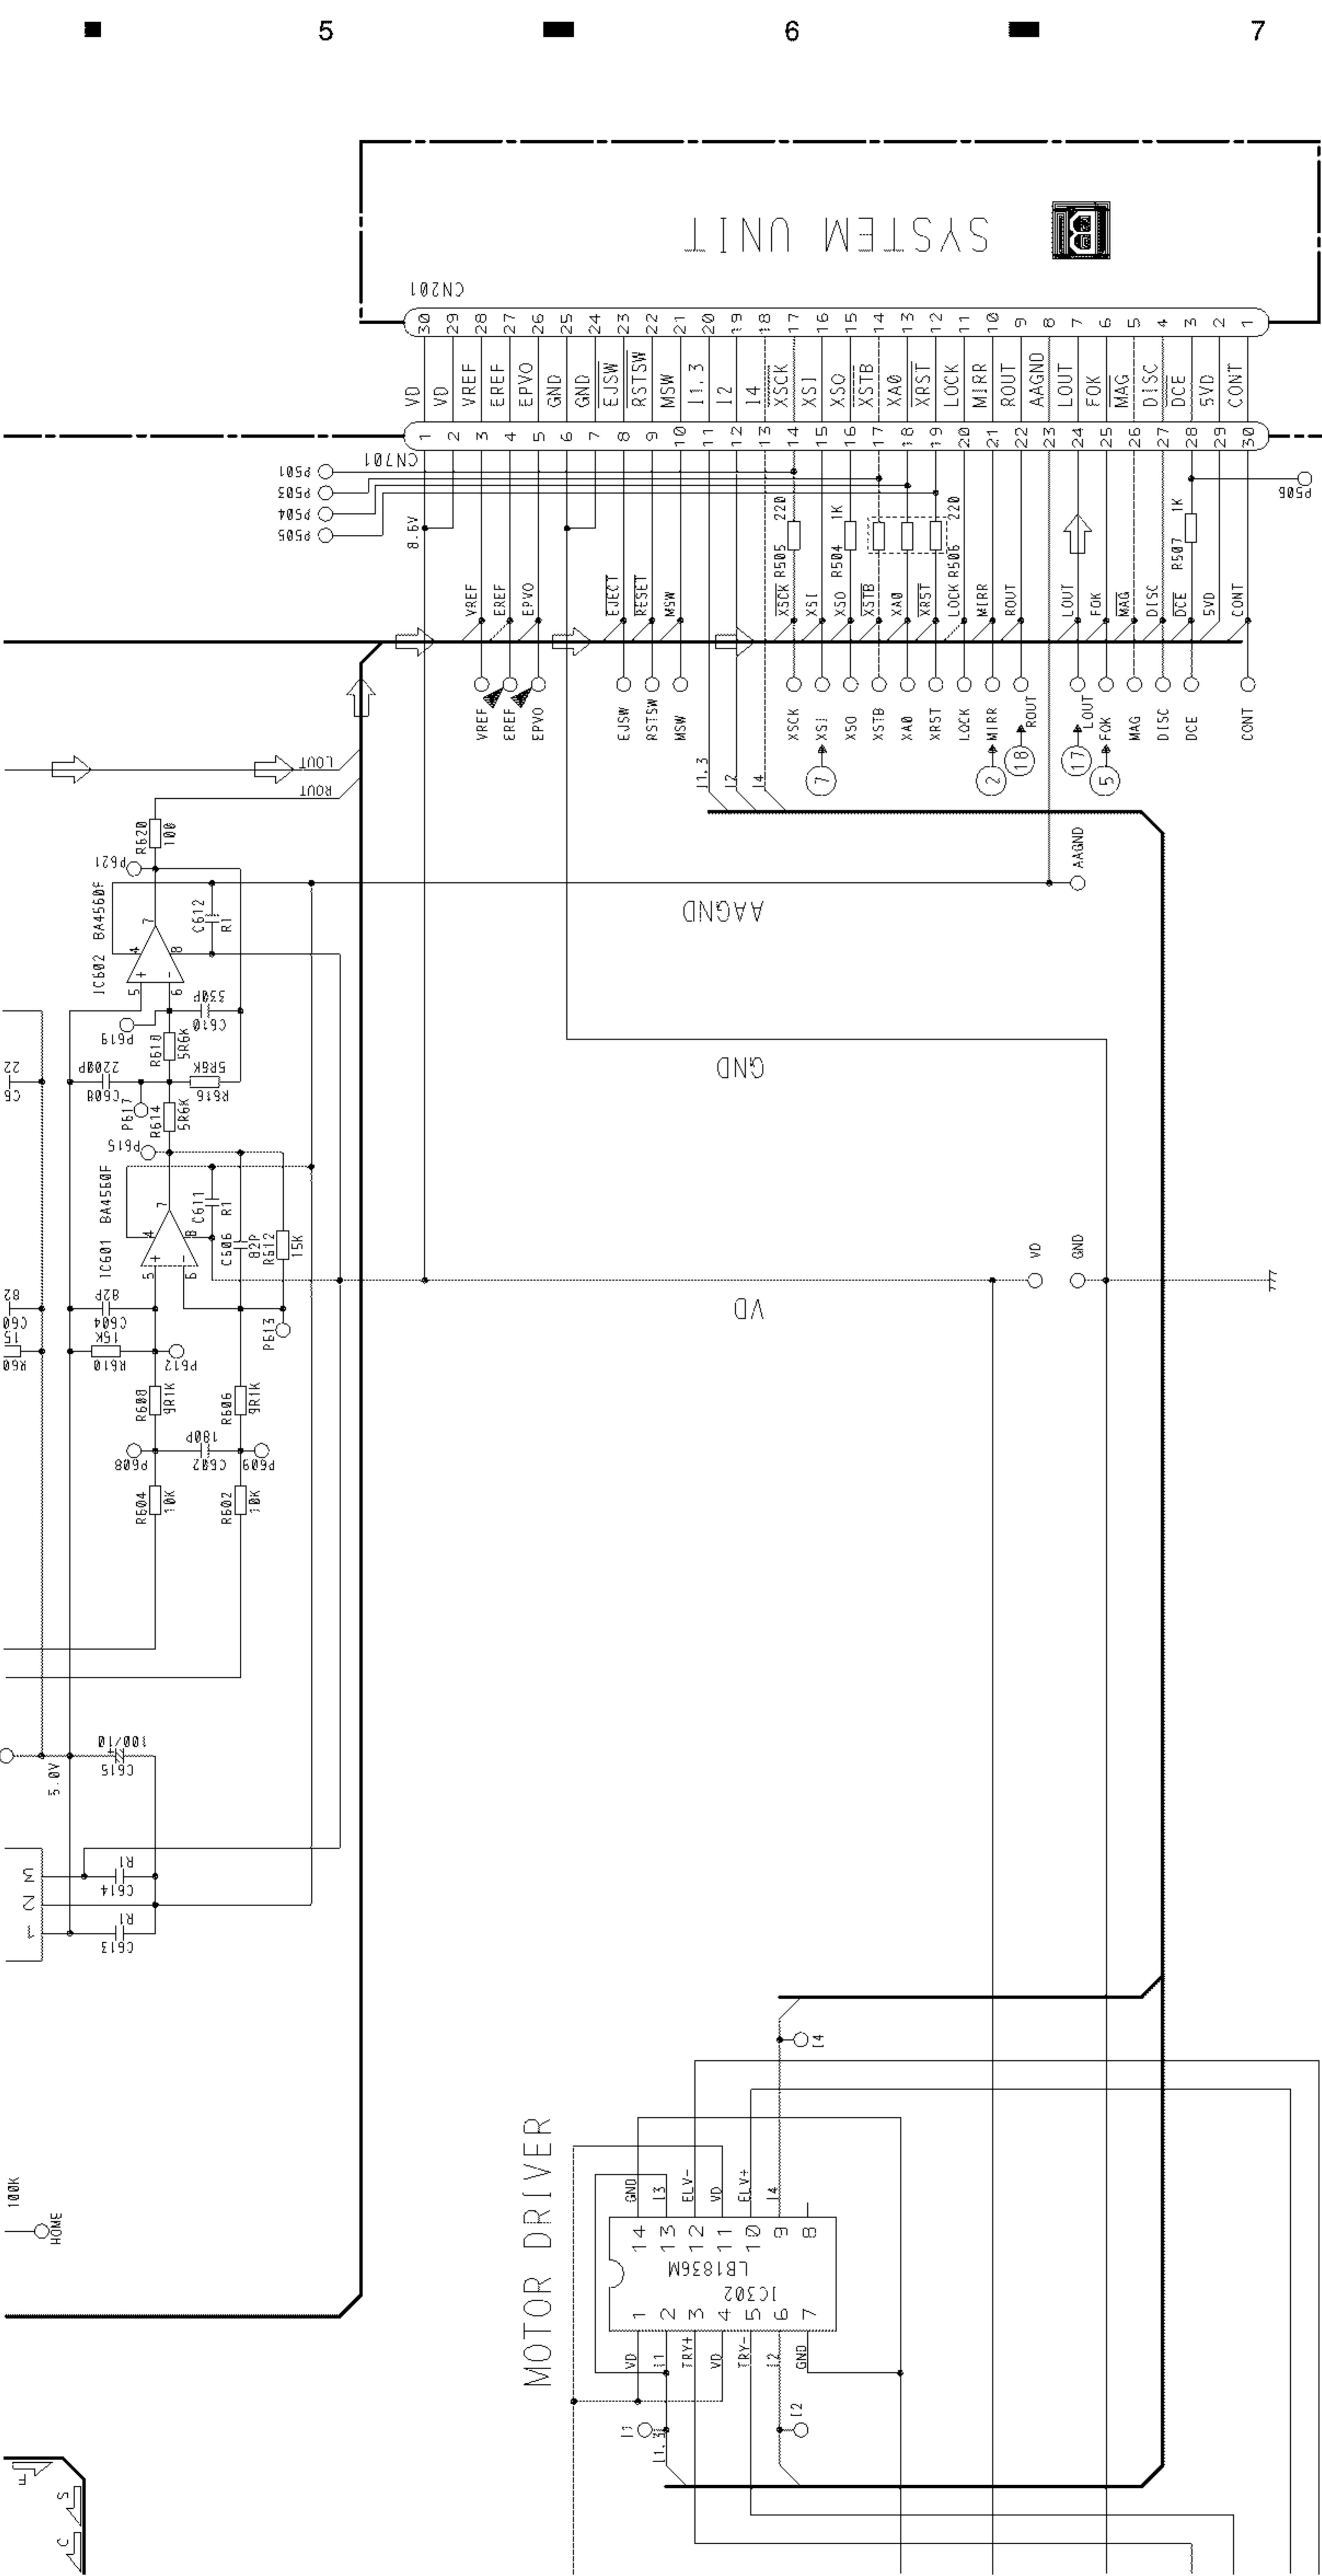

NOTE :

- Symbol indicates a resistor. No differentiation is made between chip resistors and discrete resistors.
- ||- Symbol indicates a capacitor. No differentiation is made between chip capacitors and discrete capacitors.

Decimal points for resistor and capacitor fixed values are expressed as:  
 2.2→2R2  
 0.022→R022


A-a A-b


Fig. 10






Note:1. The encircled numbers denote measuring pointes in the circuit diagram.  
 2. Reference voltage REFO:2.5V

● **Waveforms**

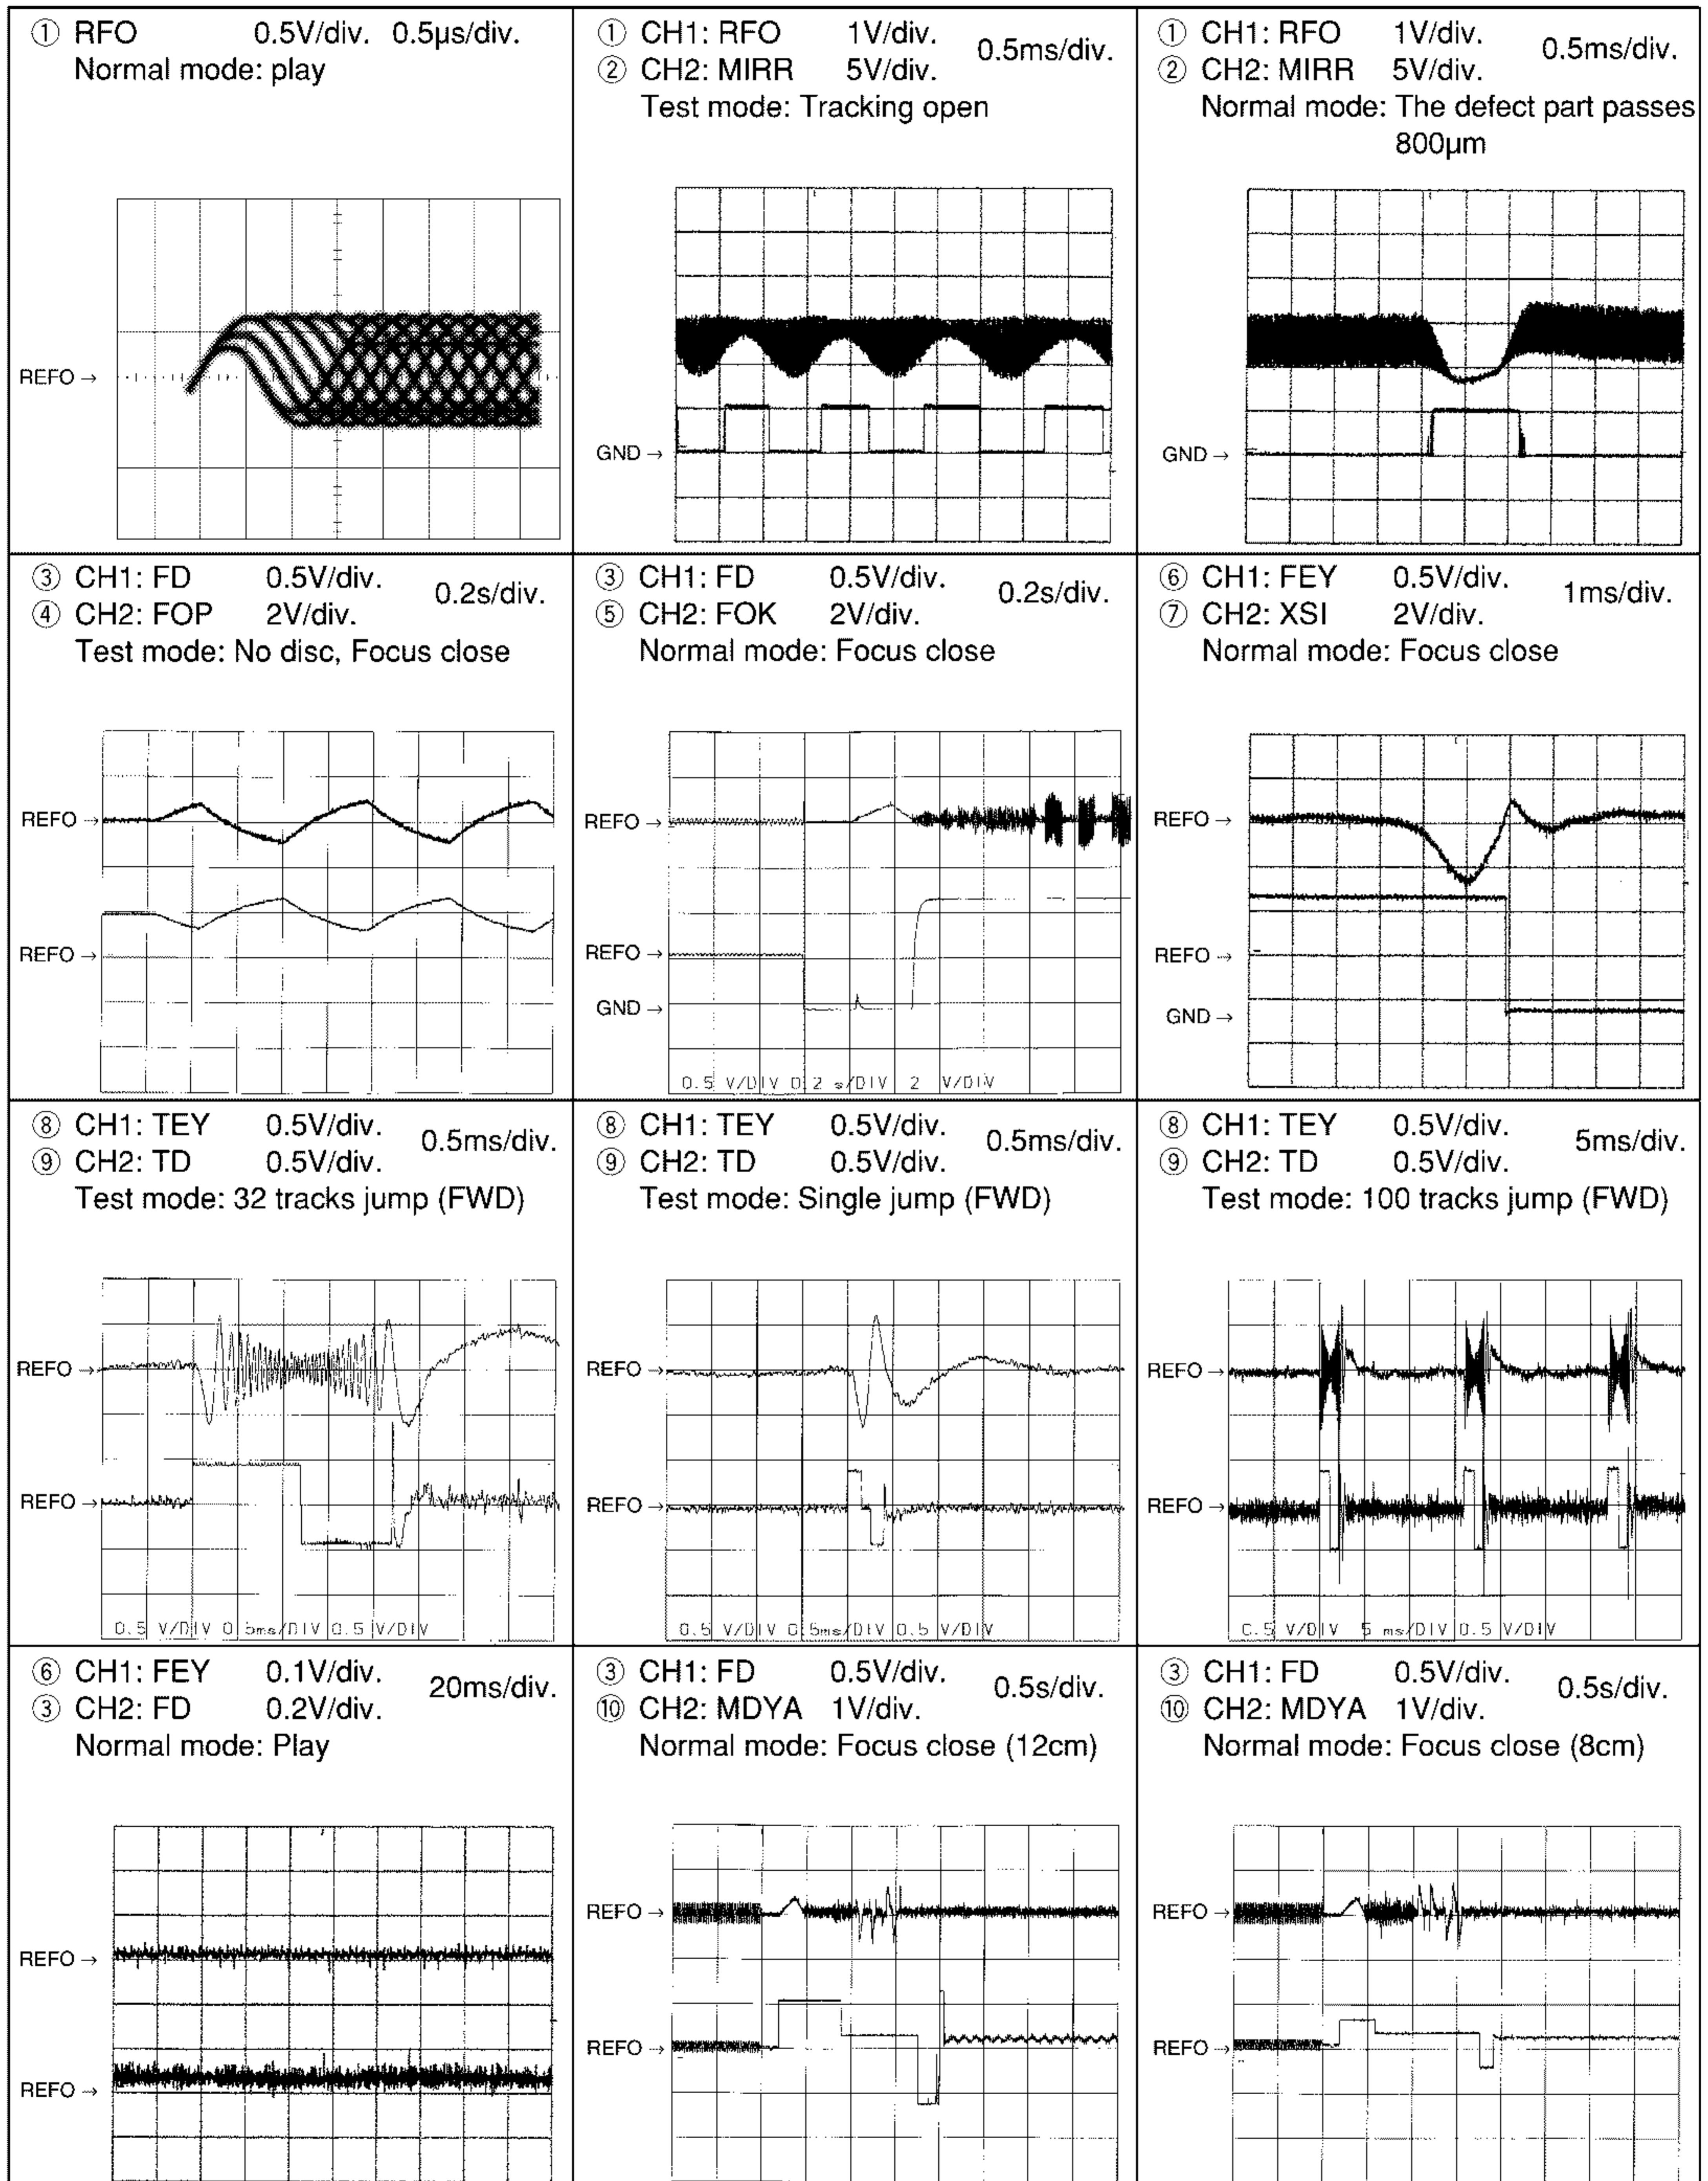

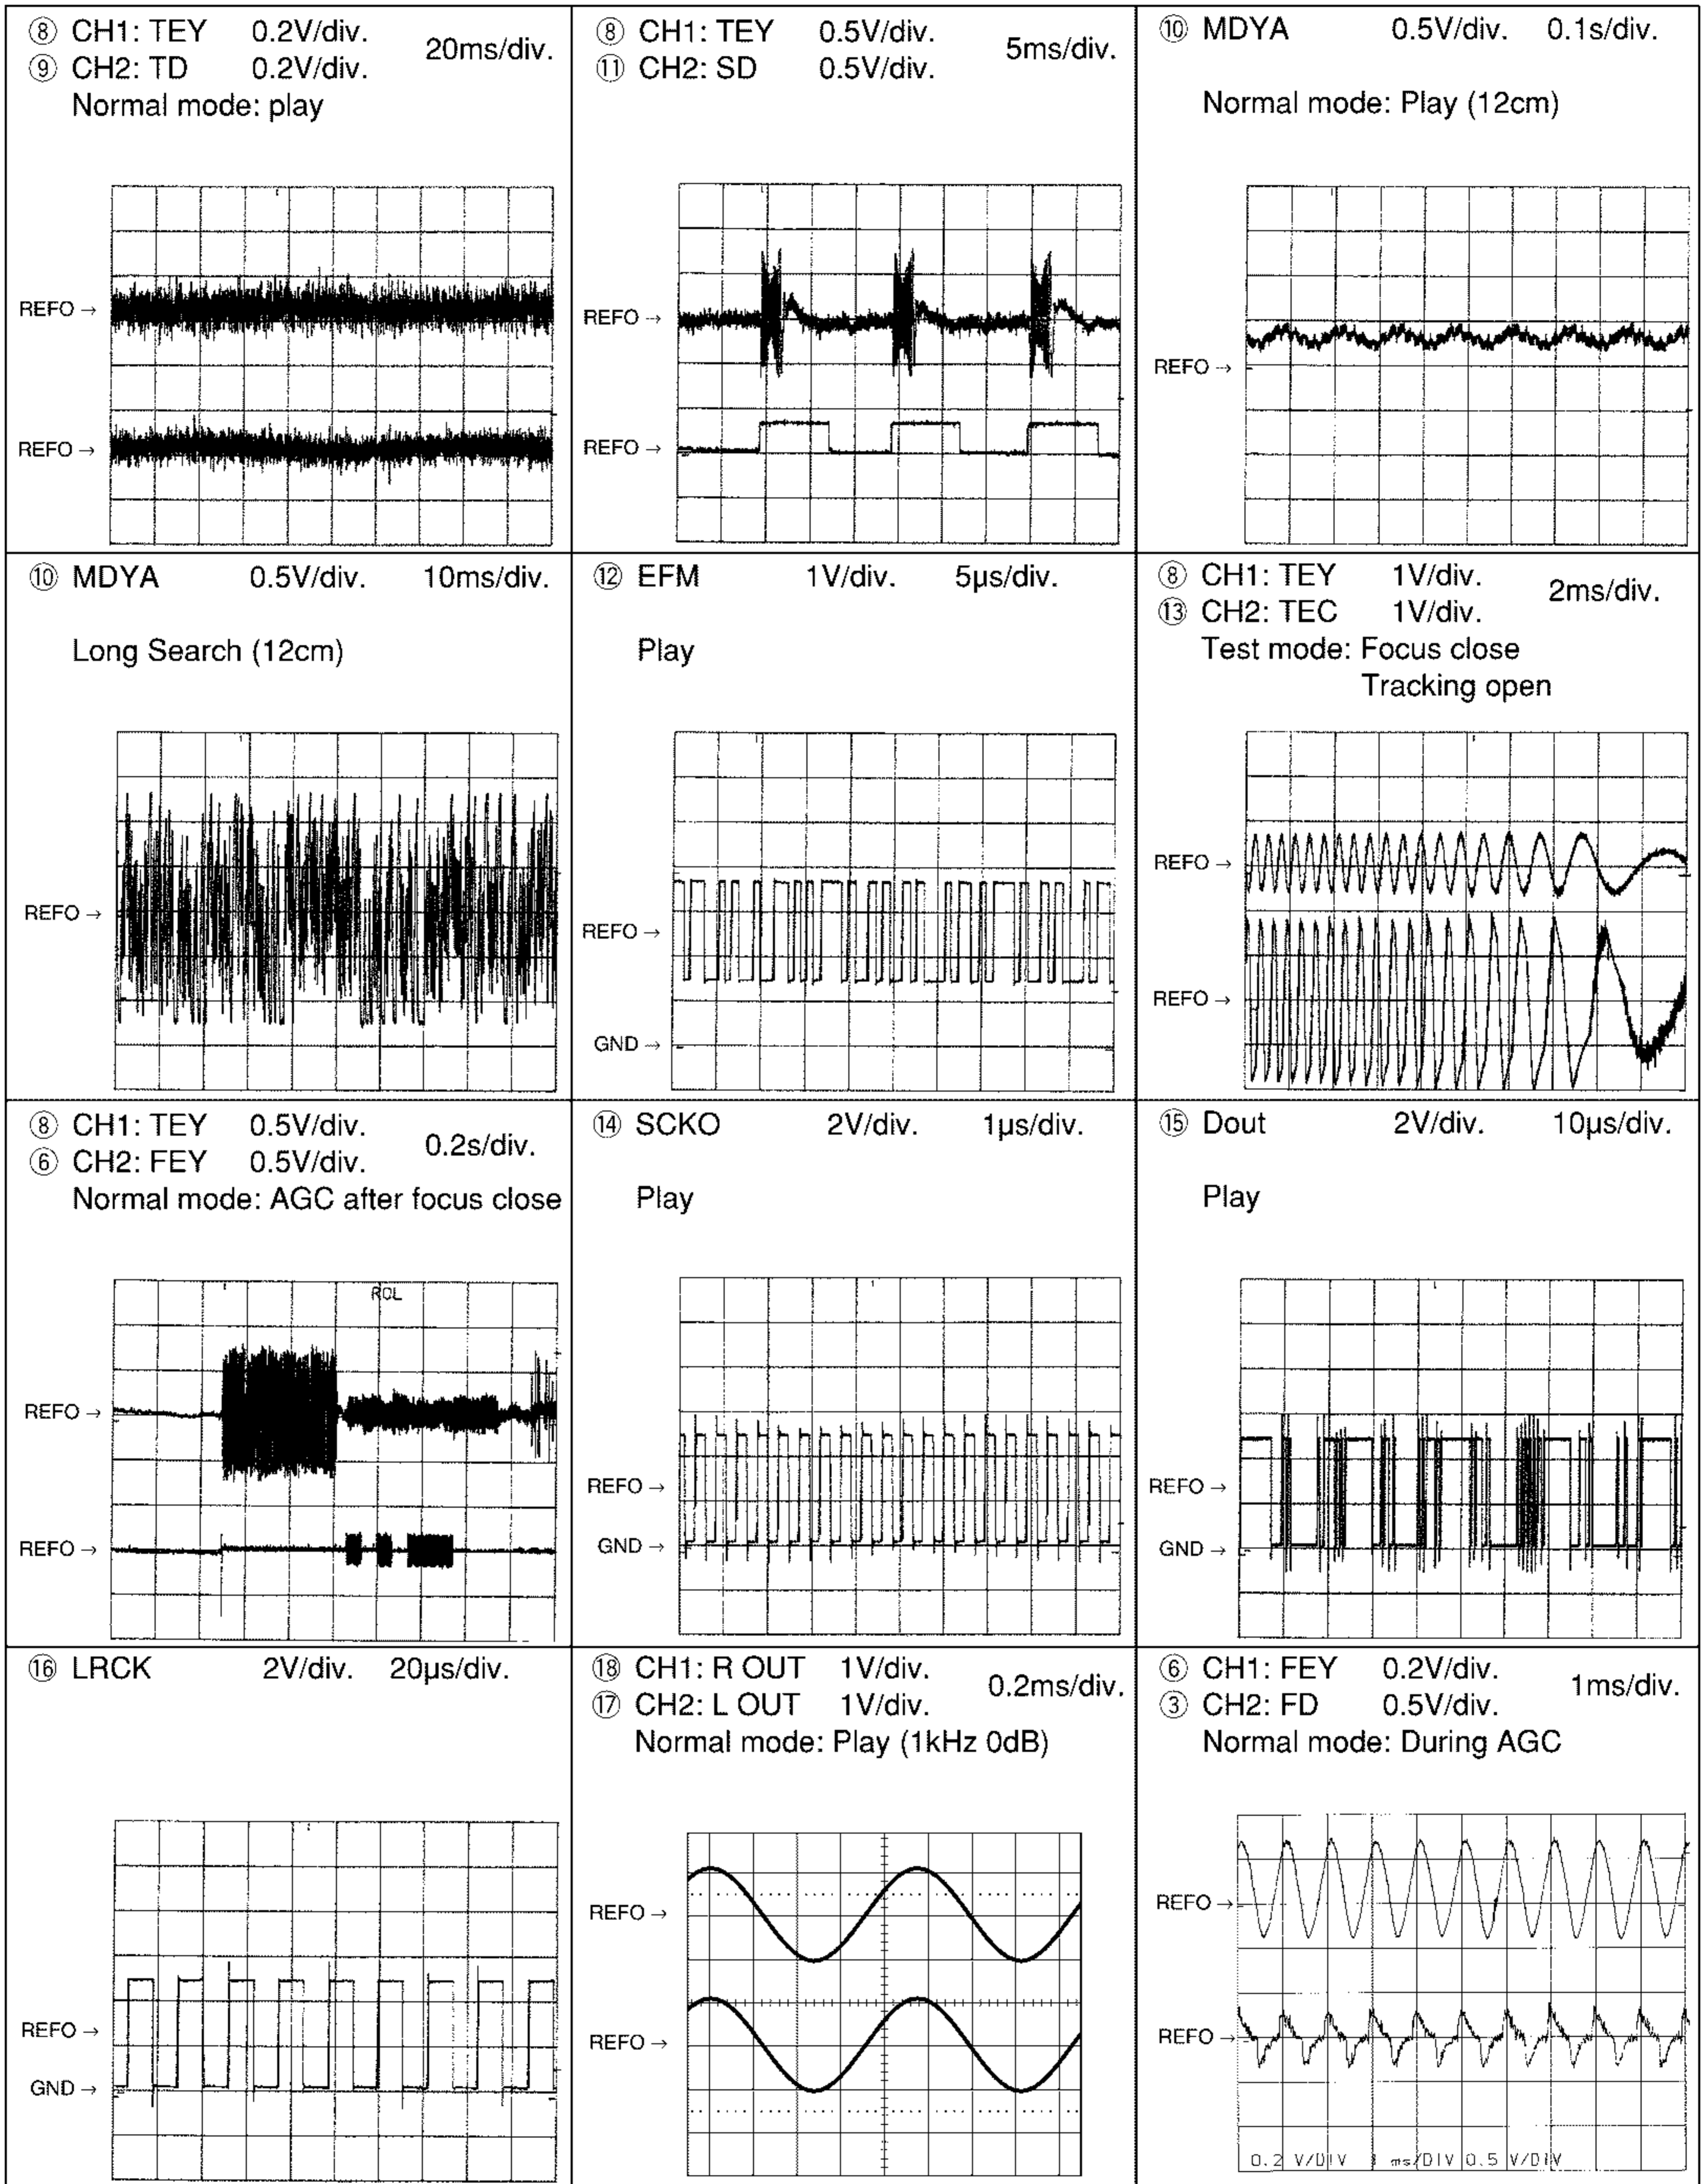

# CDX-FM637S
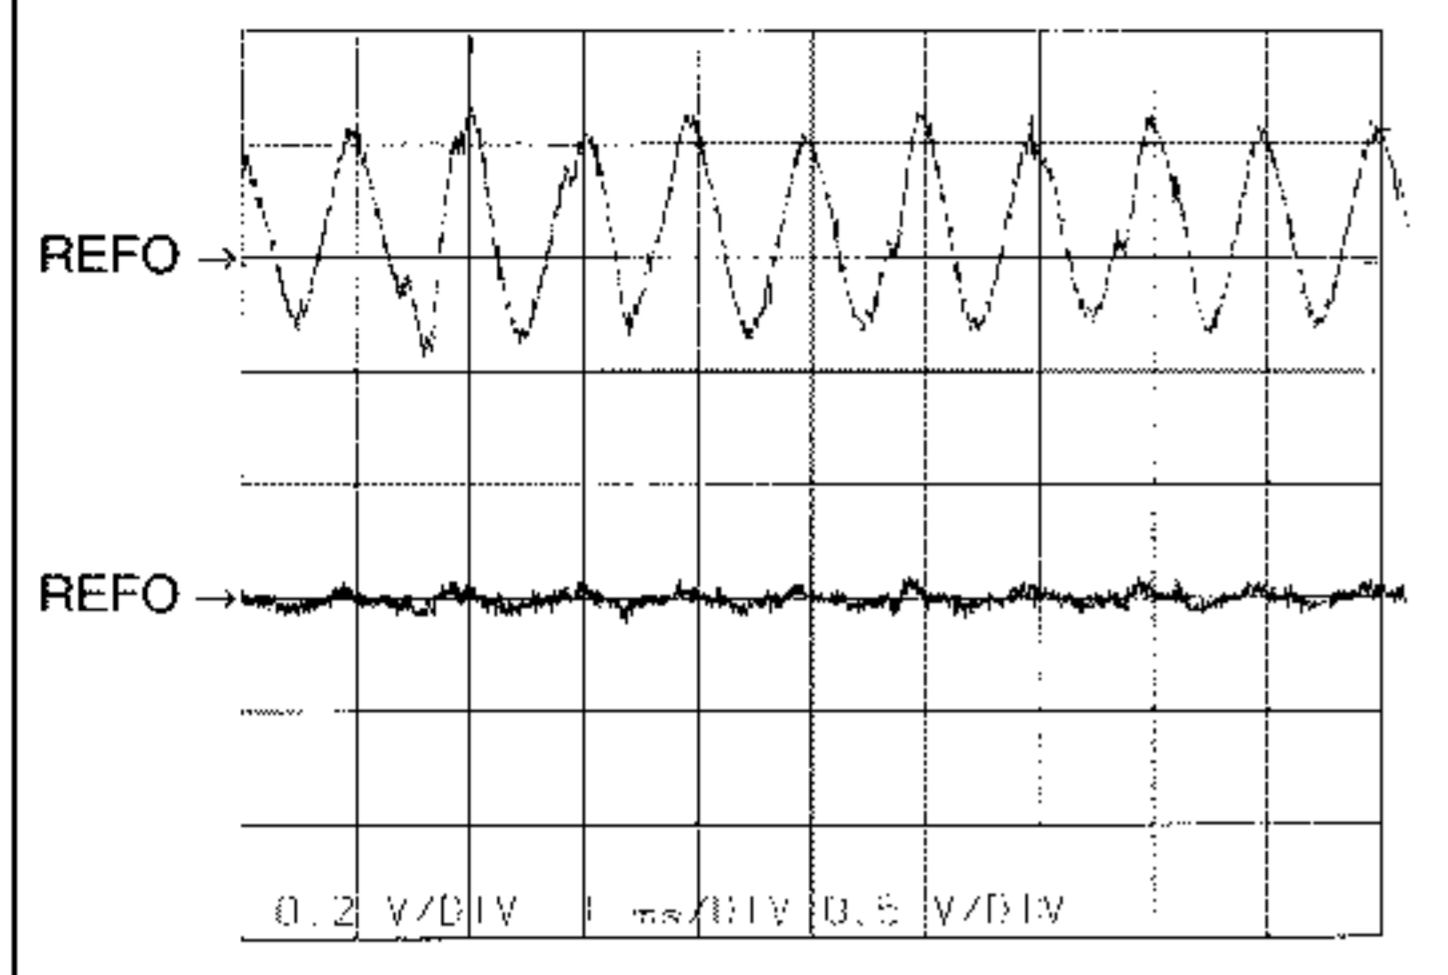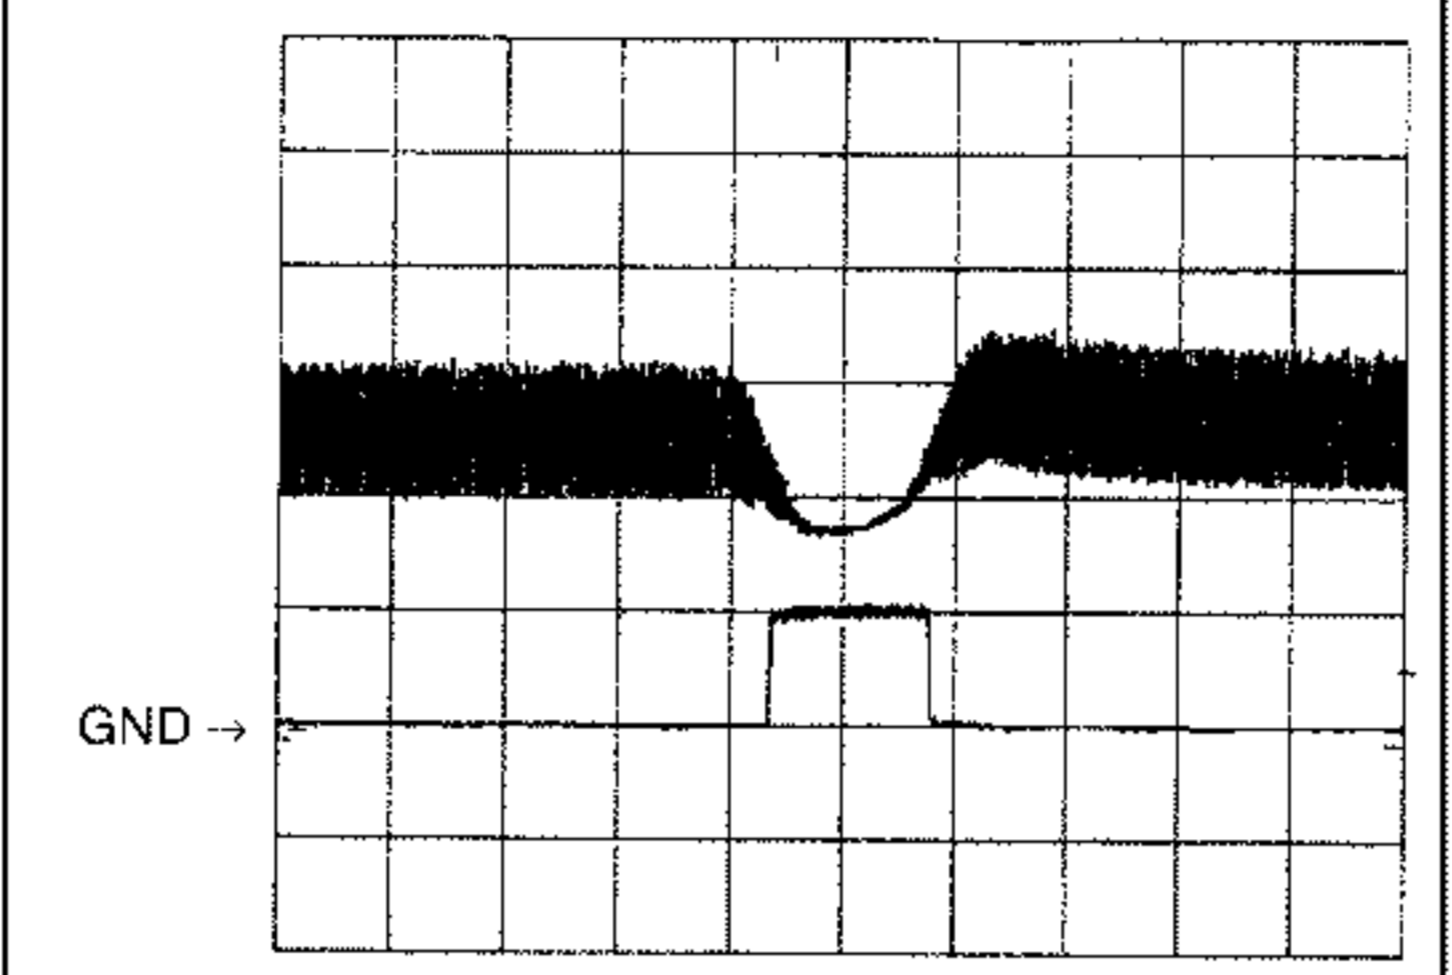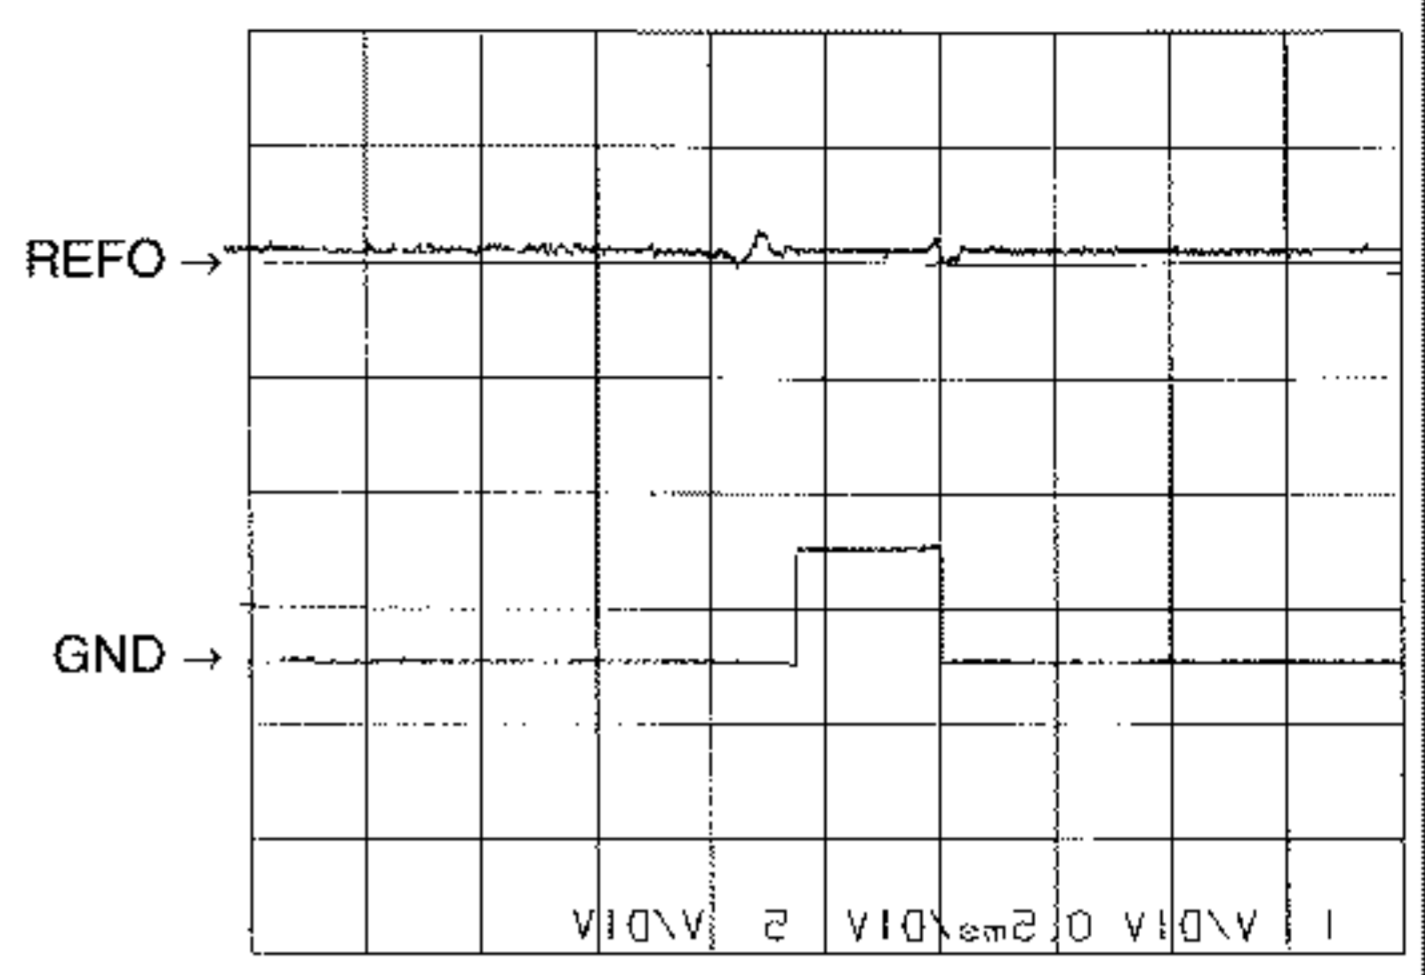
<p>⑧ CH1: TEY 0.2V/div. 1ms/div.          ⑨ CH2: TD 0.5V/div.          Normal mode: During AGC</p> 	<p>① CH1: RFO 1V/div. 0.5ms/div.          ⑱ CH2: HOLD 5V/div.          Normal mode: The defect part passes 800μm</p> 	<p>③ CH1: FD 1V/div. 0.5ms/div.          ⑲ CH2: HOLD 5V/div.          Normal mode: The defect part passes 800μm</p> 





## 4. PCB CONNECTION DIAGRAM

### 4.1 SYSTEM UNIT

#### NOTE FOR PCB DIAGRAMS

- The parts mounted on this PCB include all necessary parts for several destination.
- For further information for respective destinations, be sure to check with the schematic diagram.

#### 2. Viewpoint of PCB diagrams

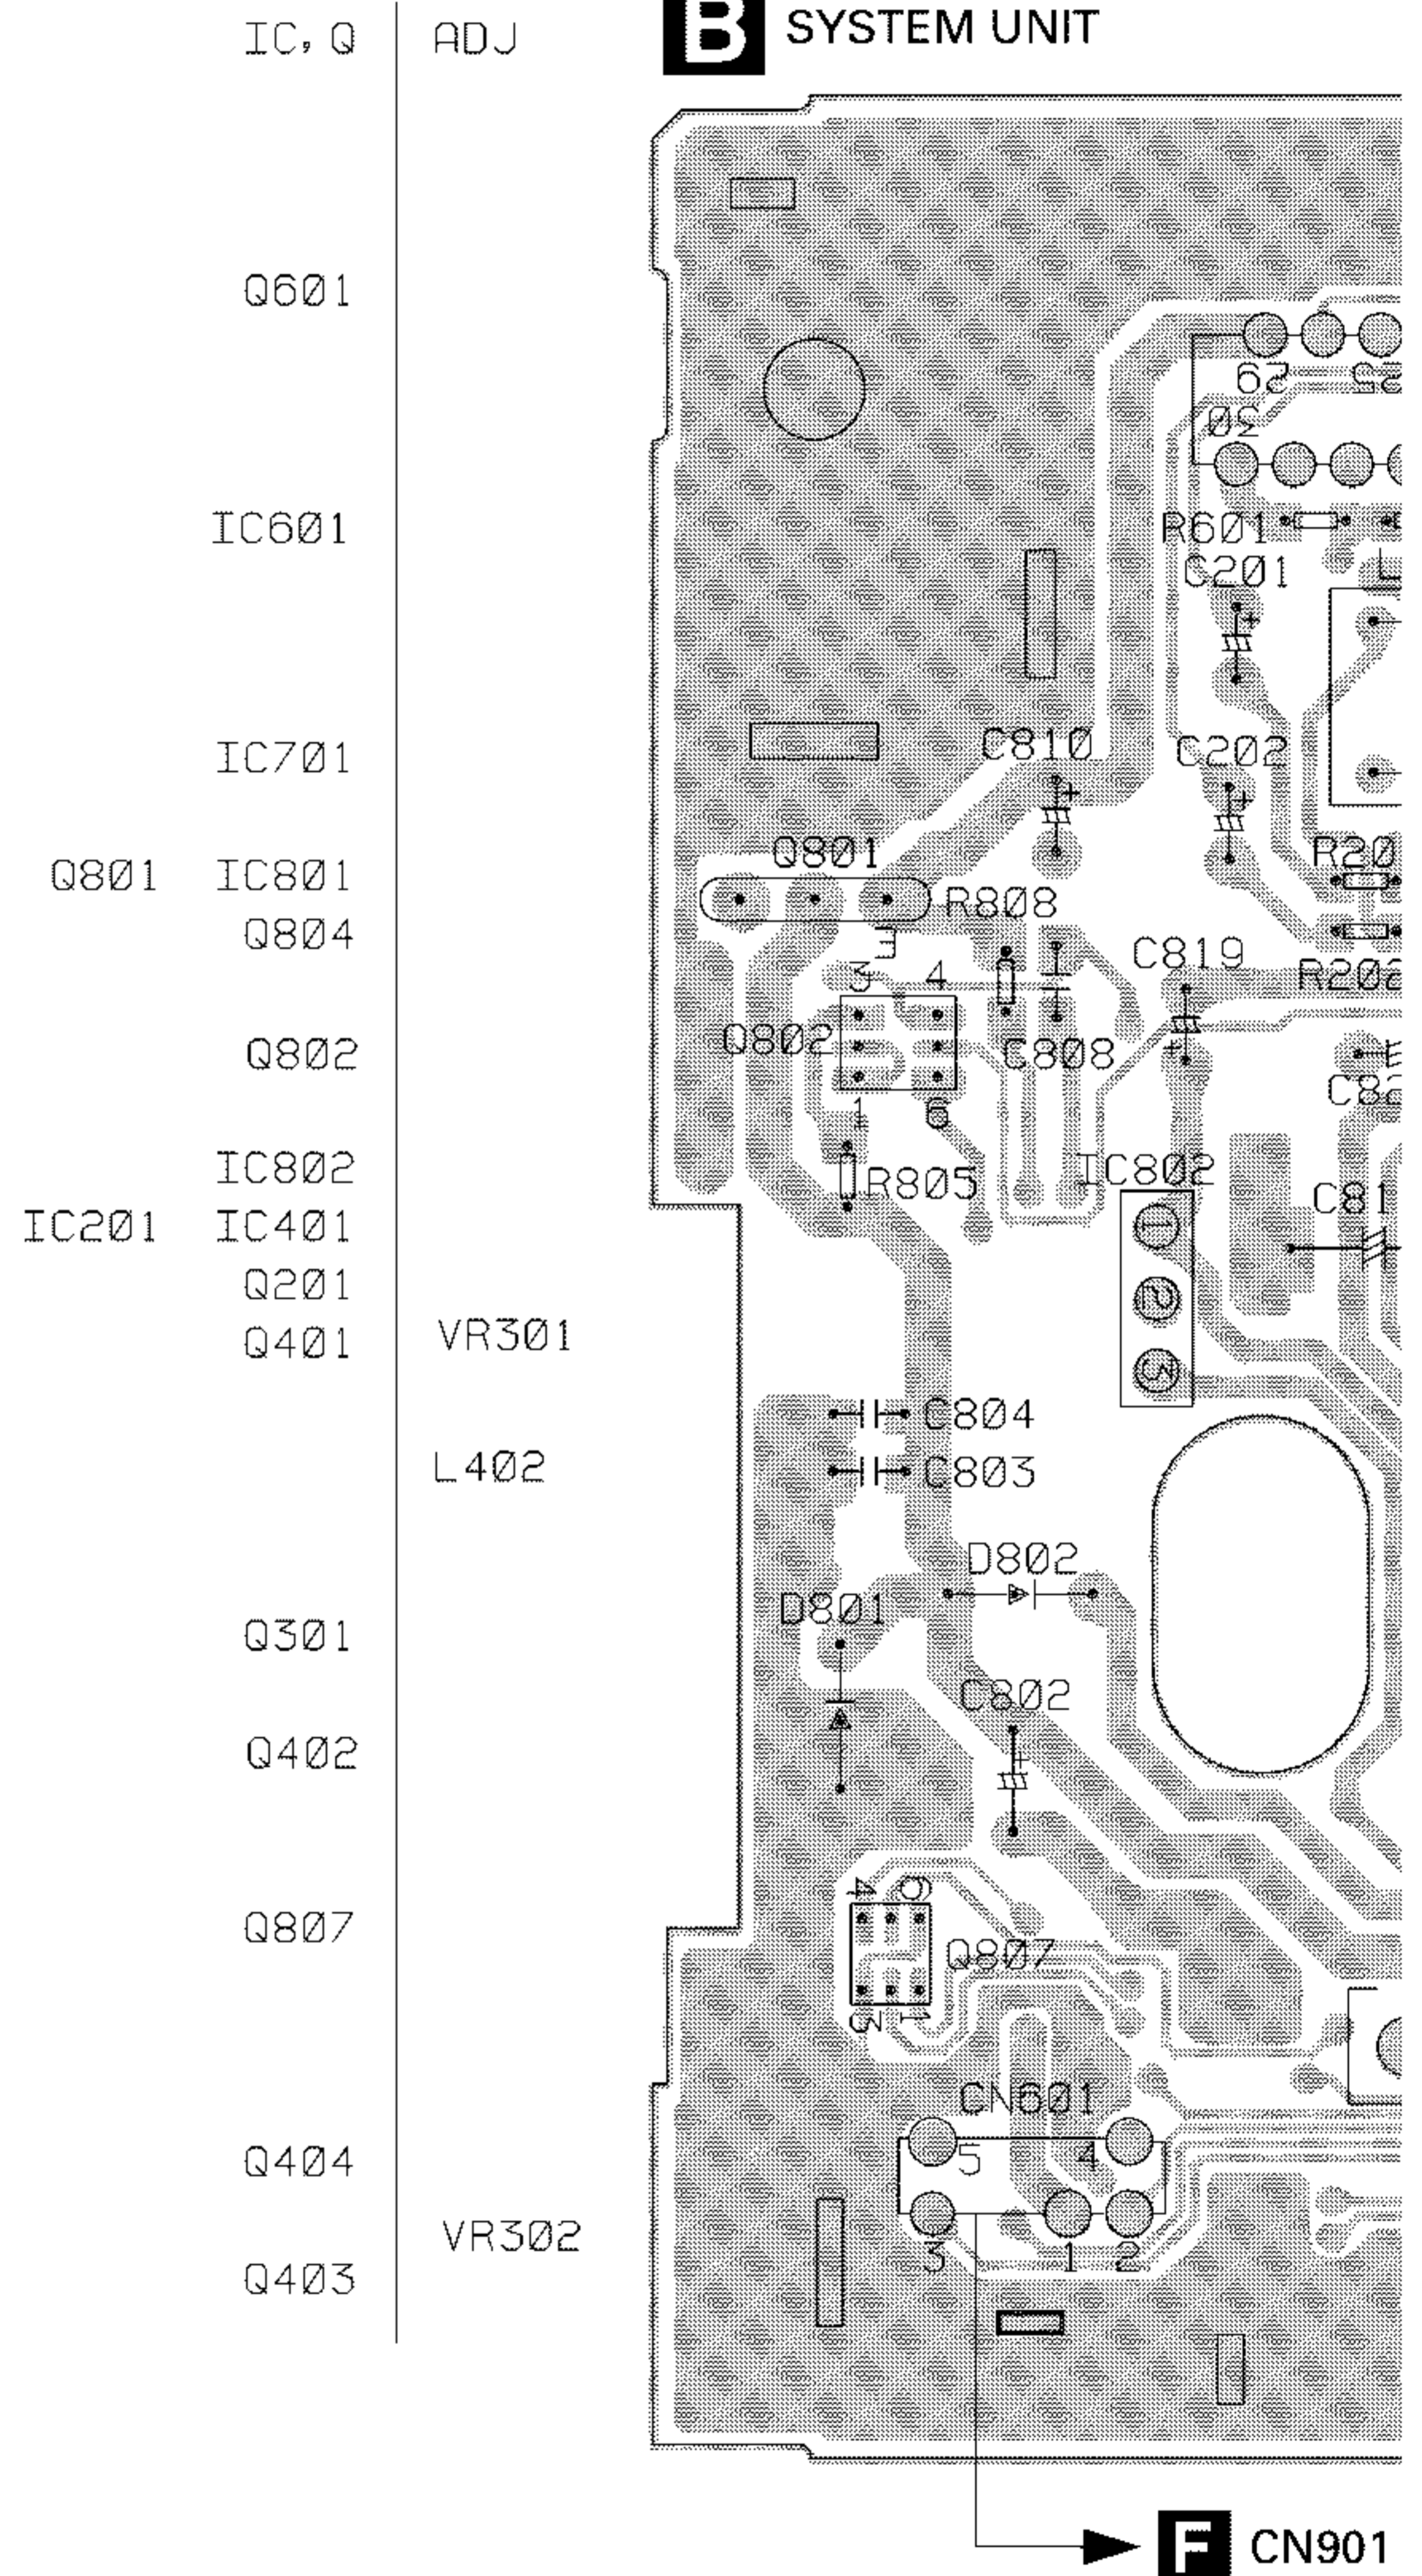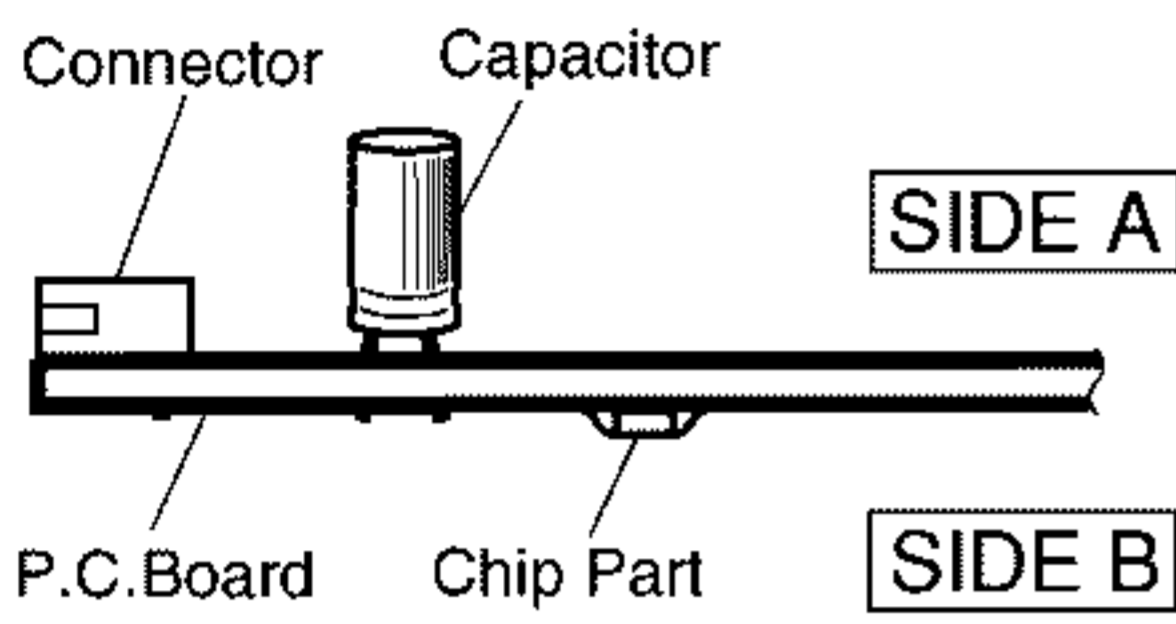

SIDE A

MC-Service

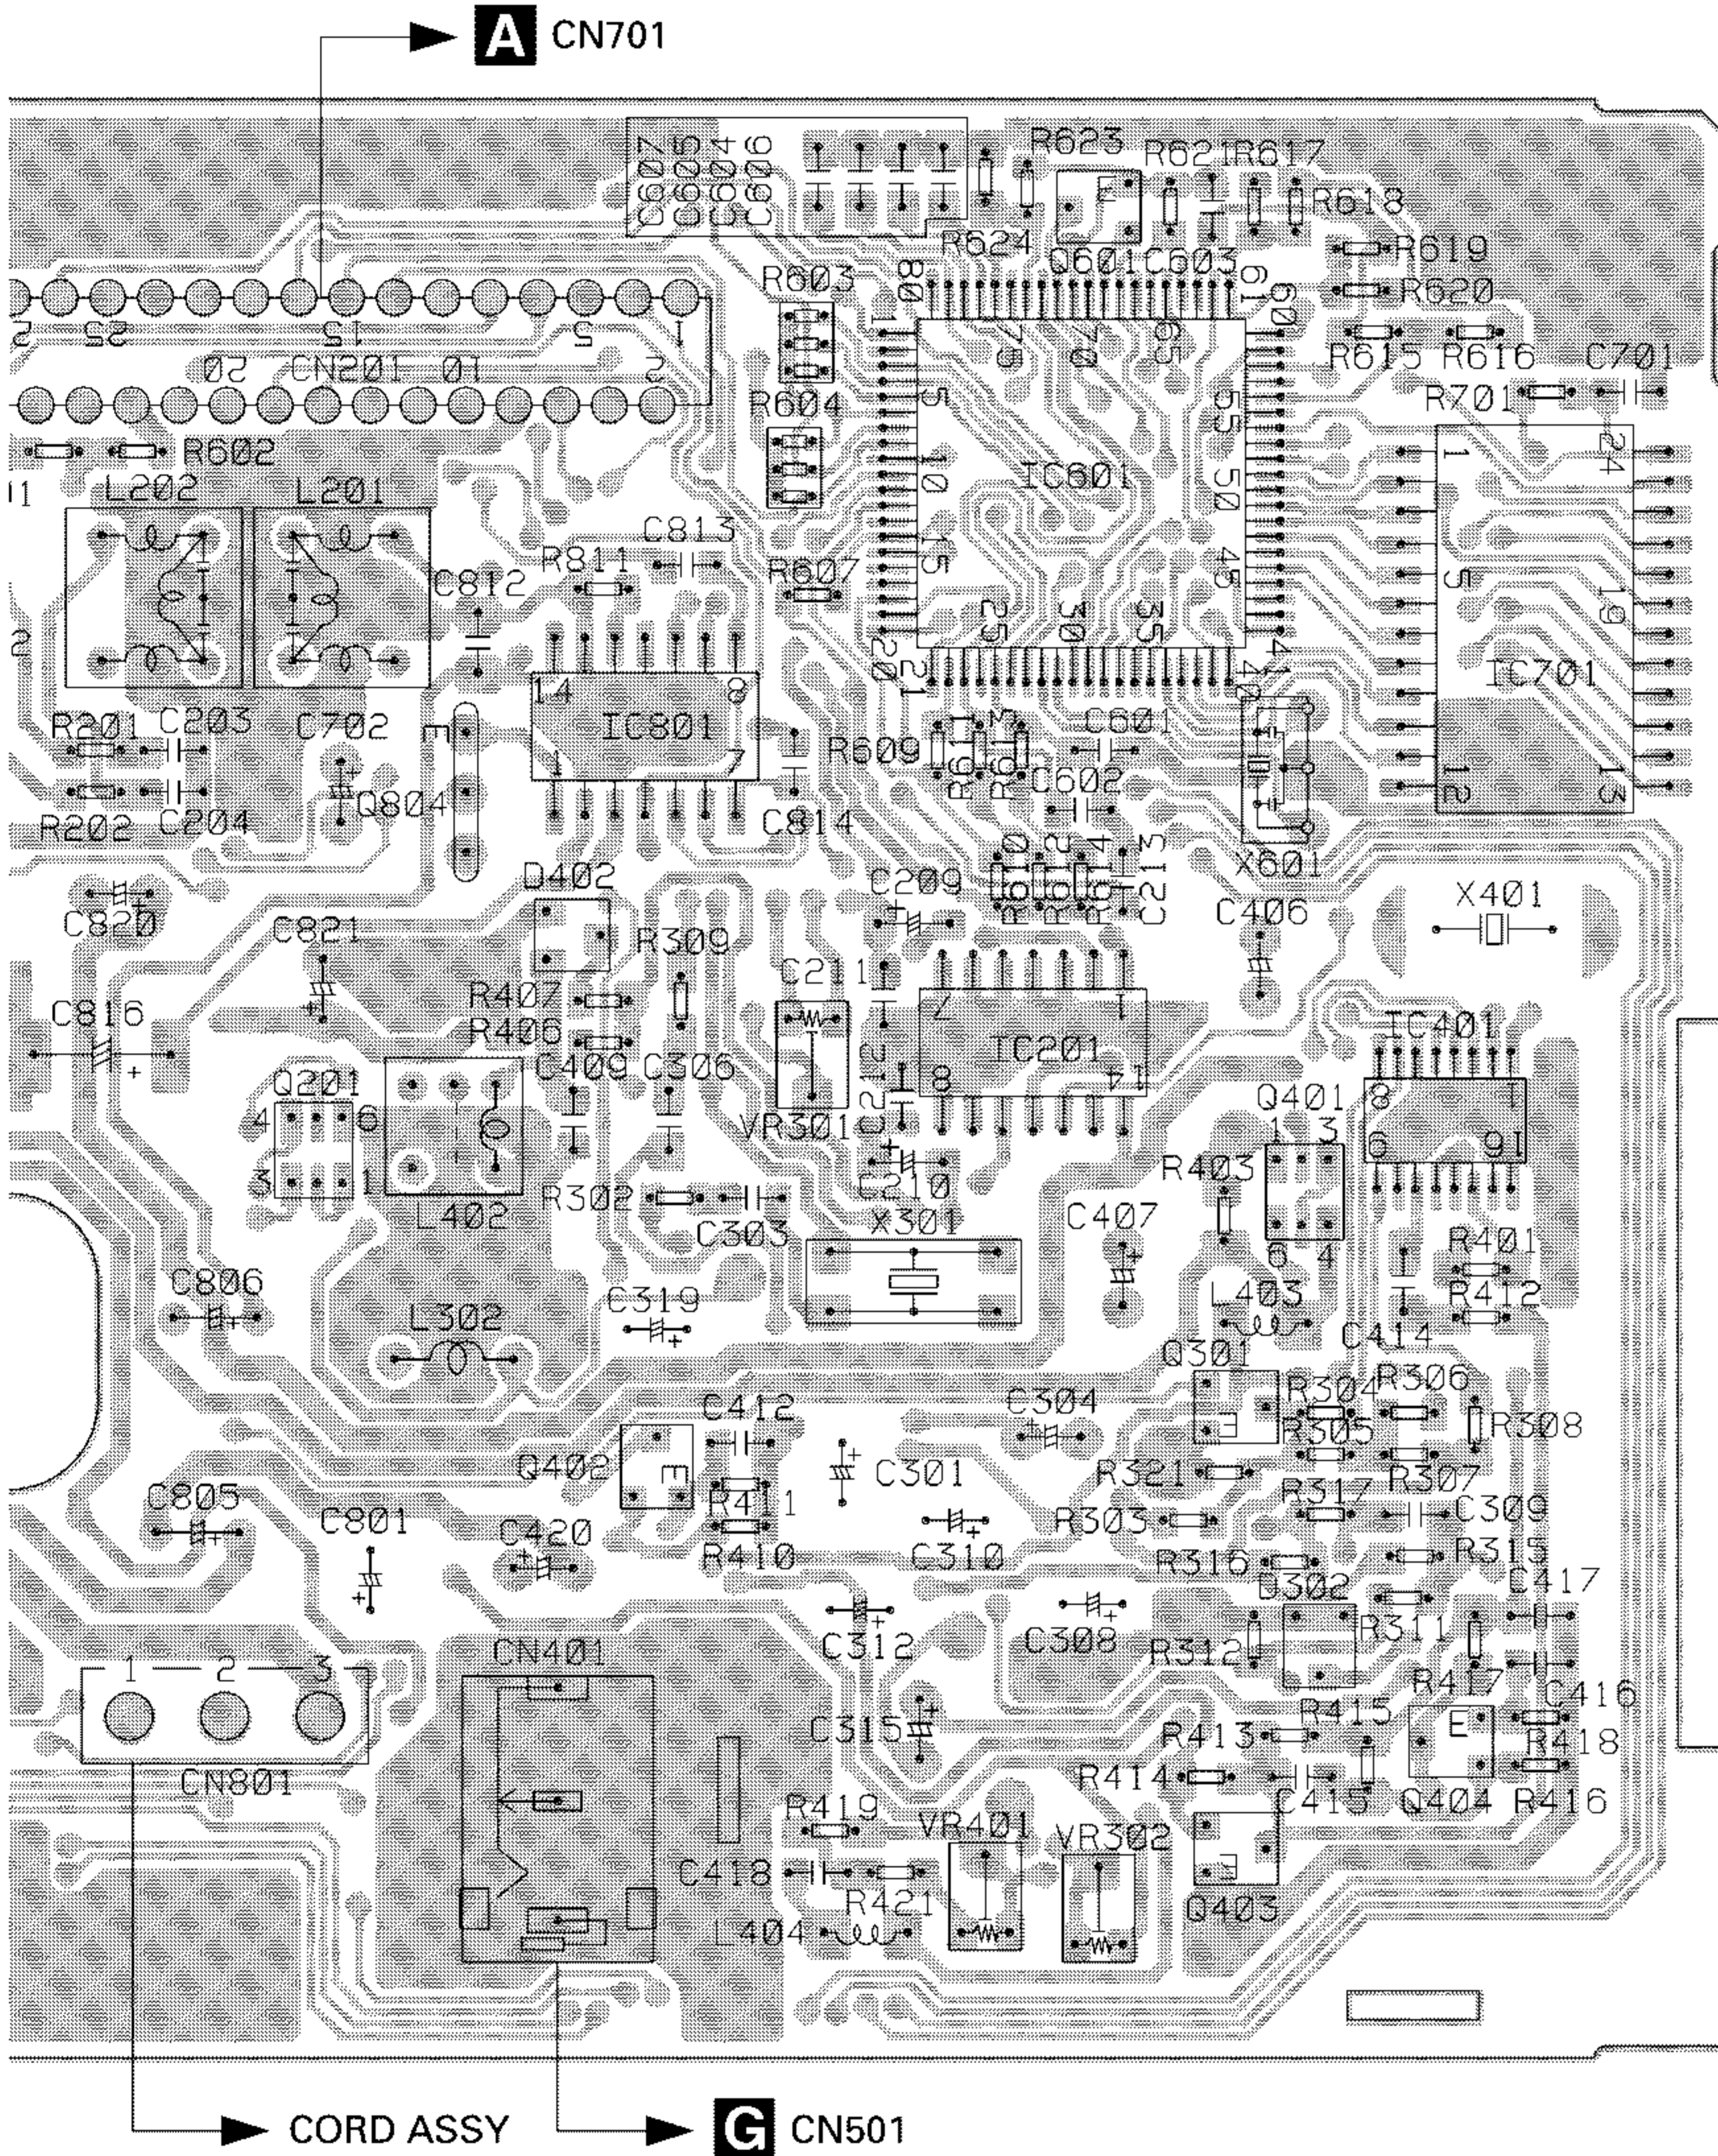


Fig. 12

**B**

A


B

C

D


*MC-Service*

**B** SYSTEM UNIT

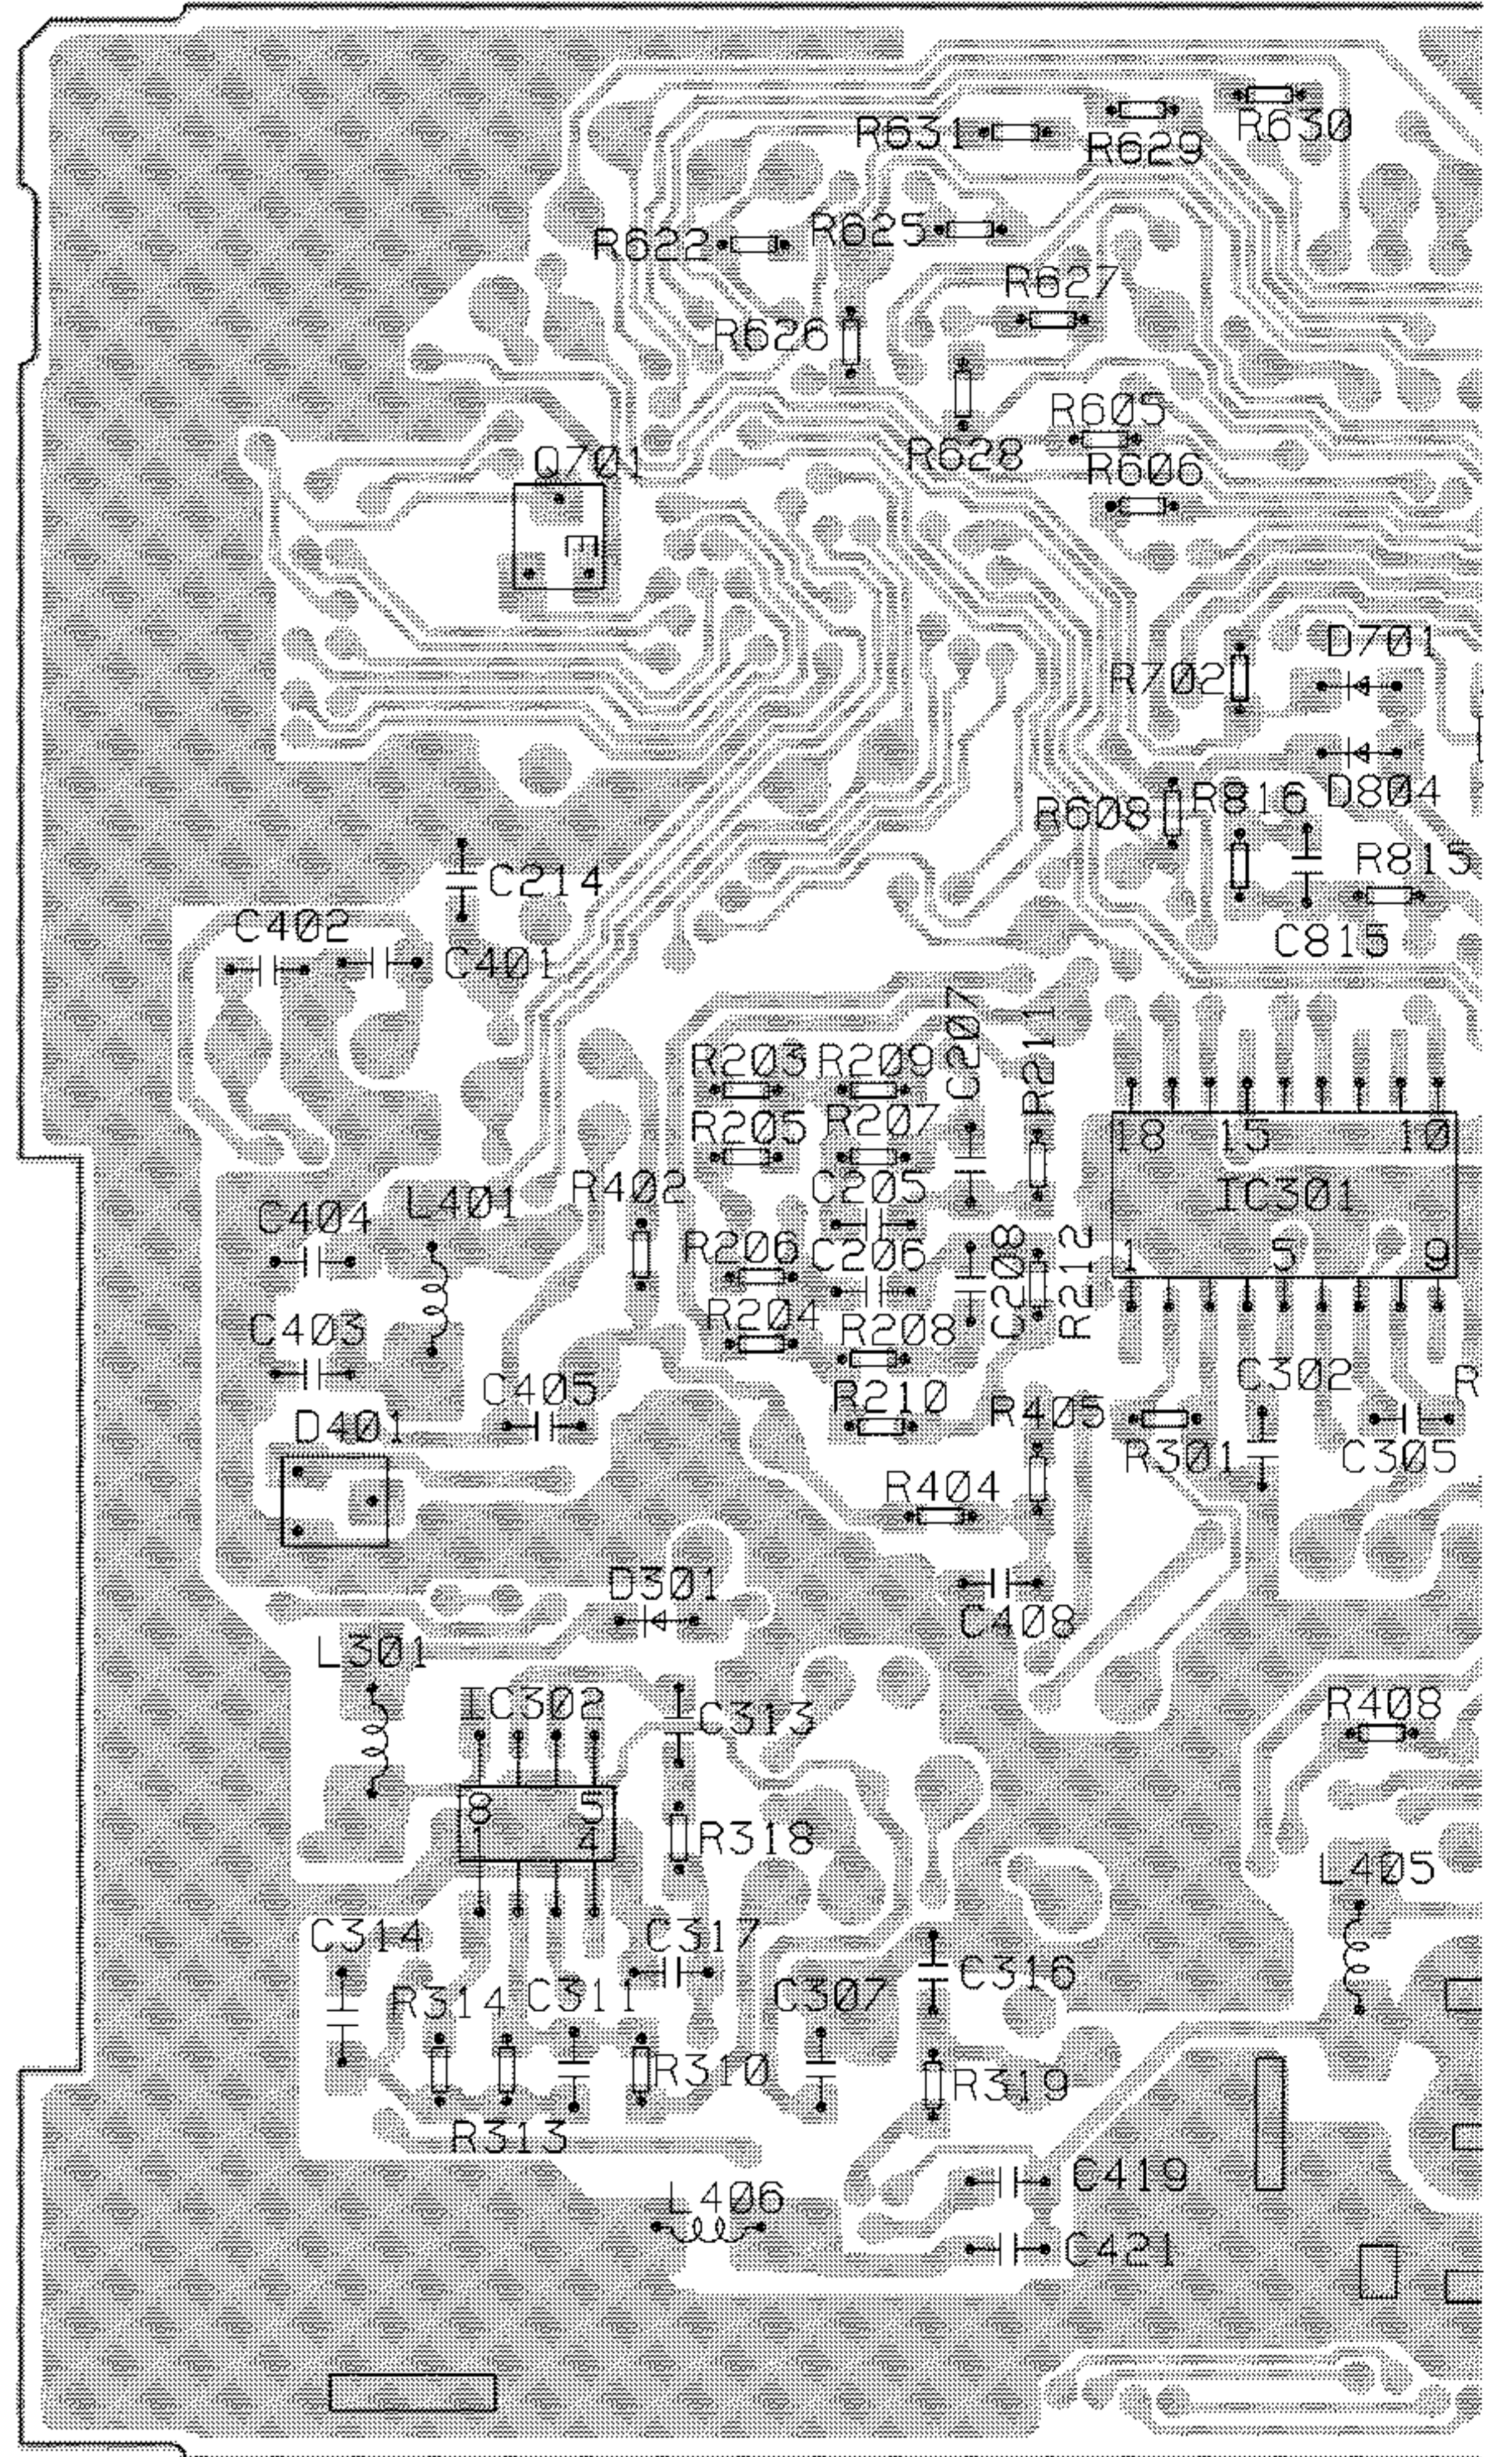

# MC-Service

SIDE B

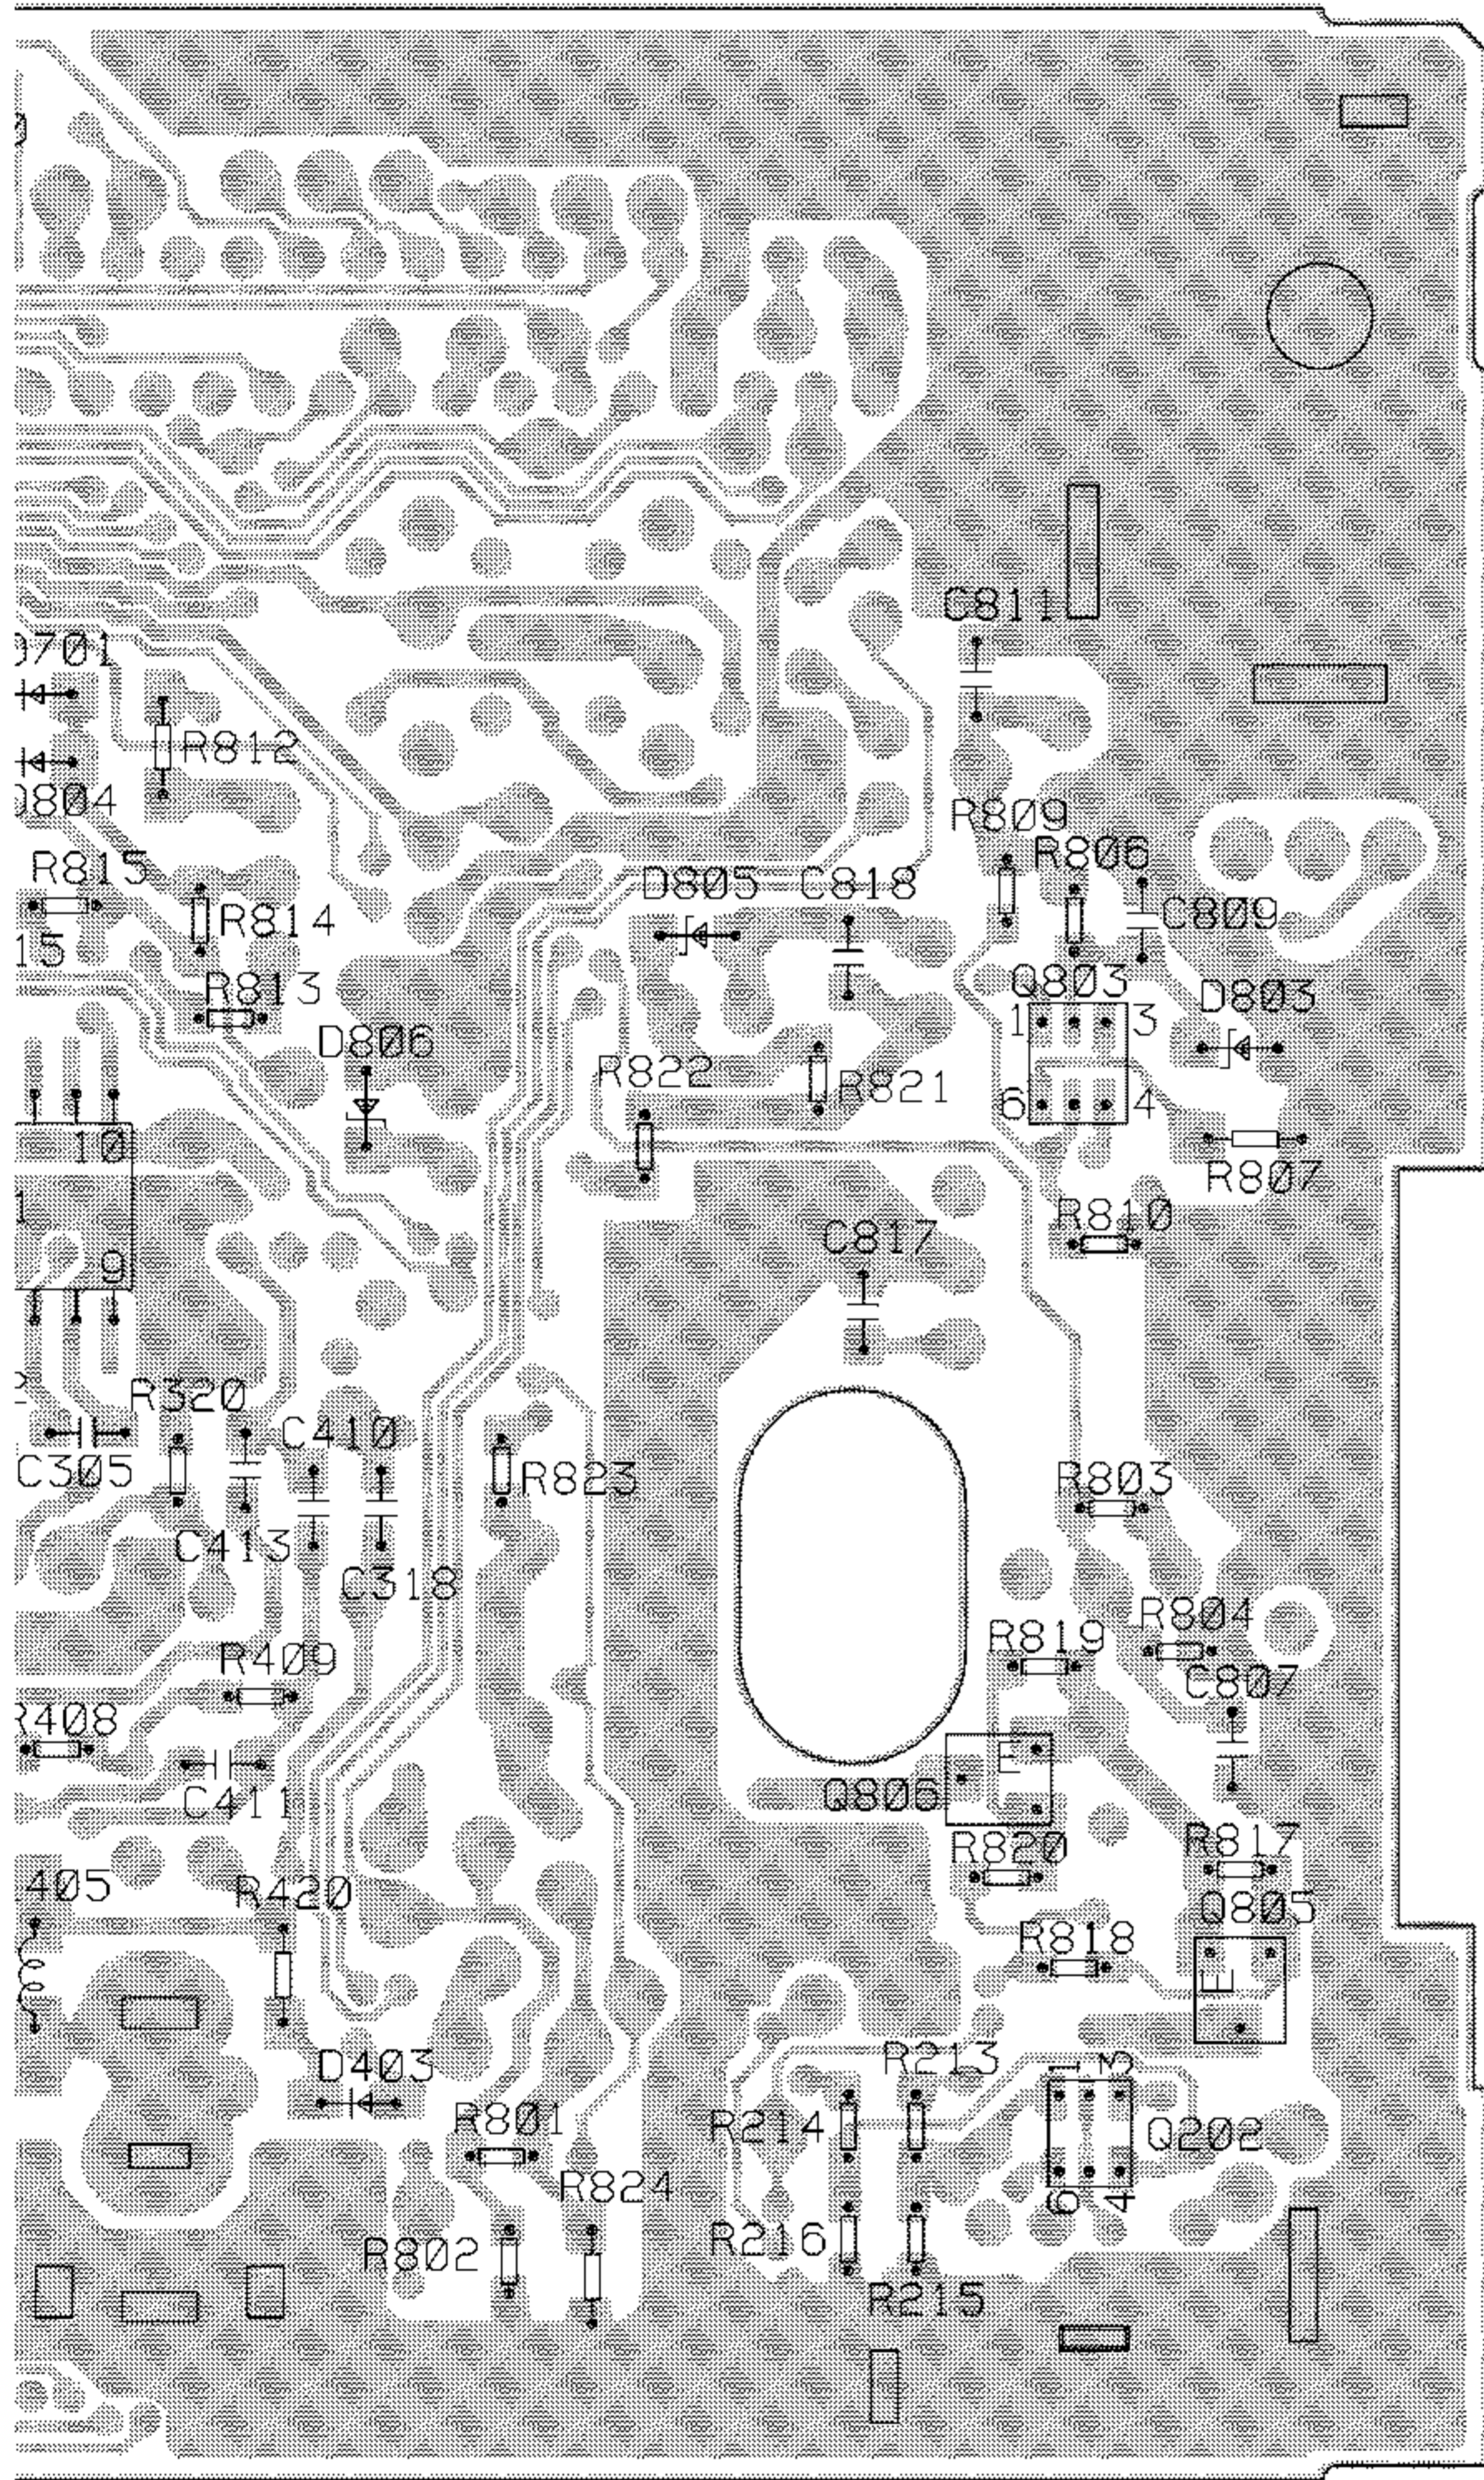

IC. Q

Q701

Q803

IC301

Q806  
IC302

Q805


Q202

Fig. 13



4.2 CD CORE UNIT

SIDE A

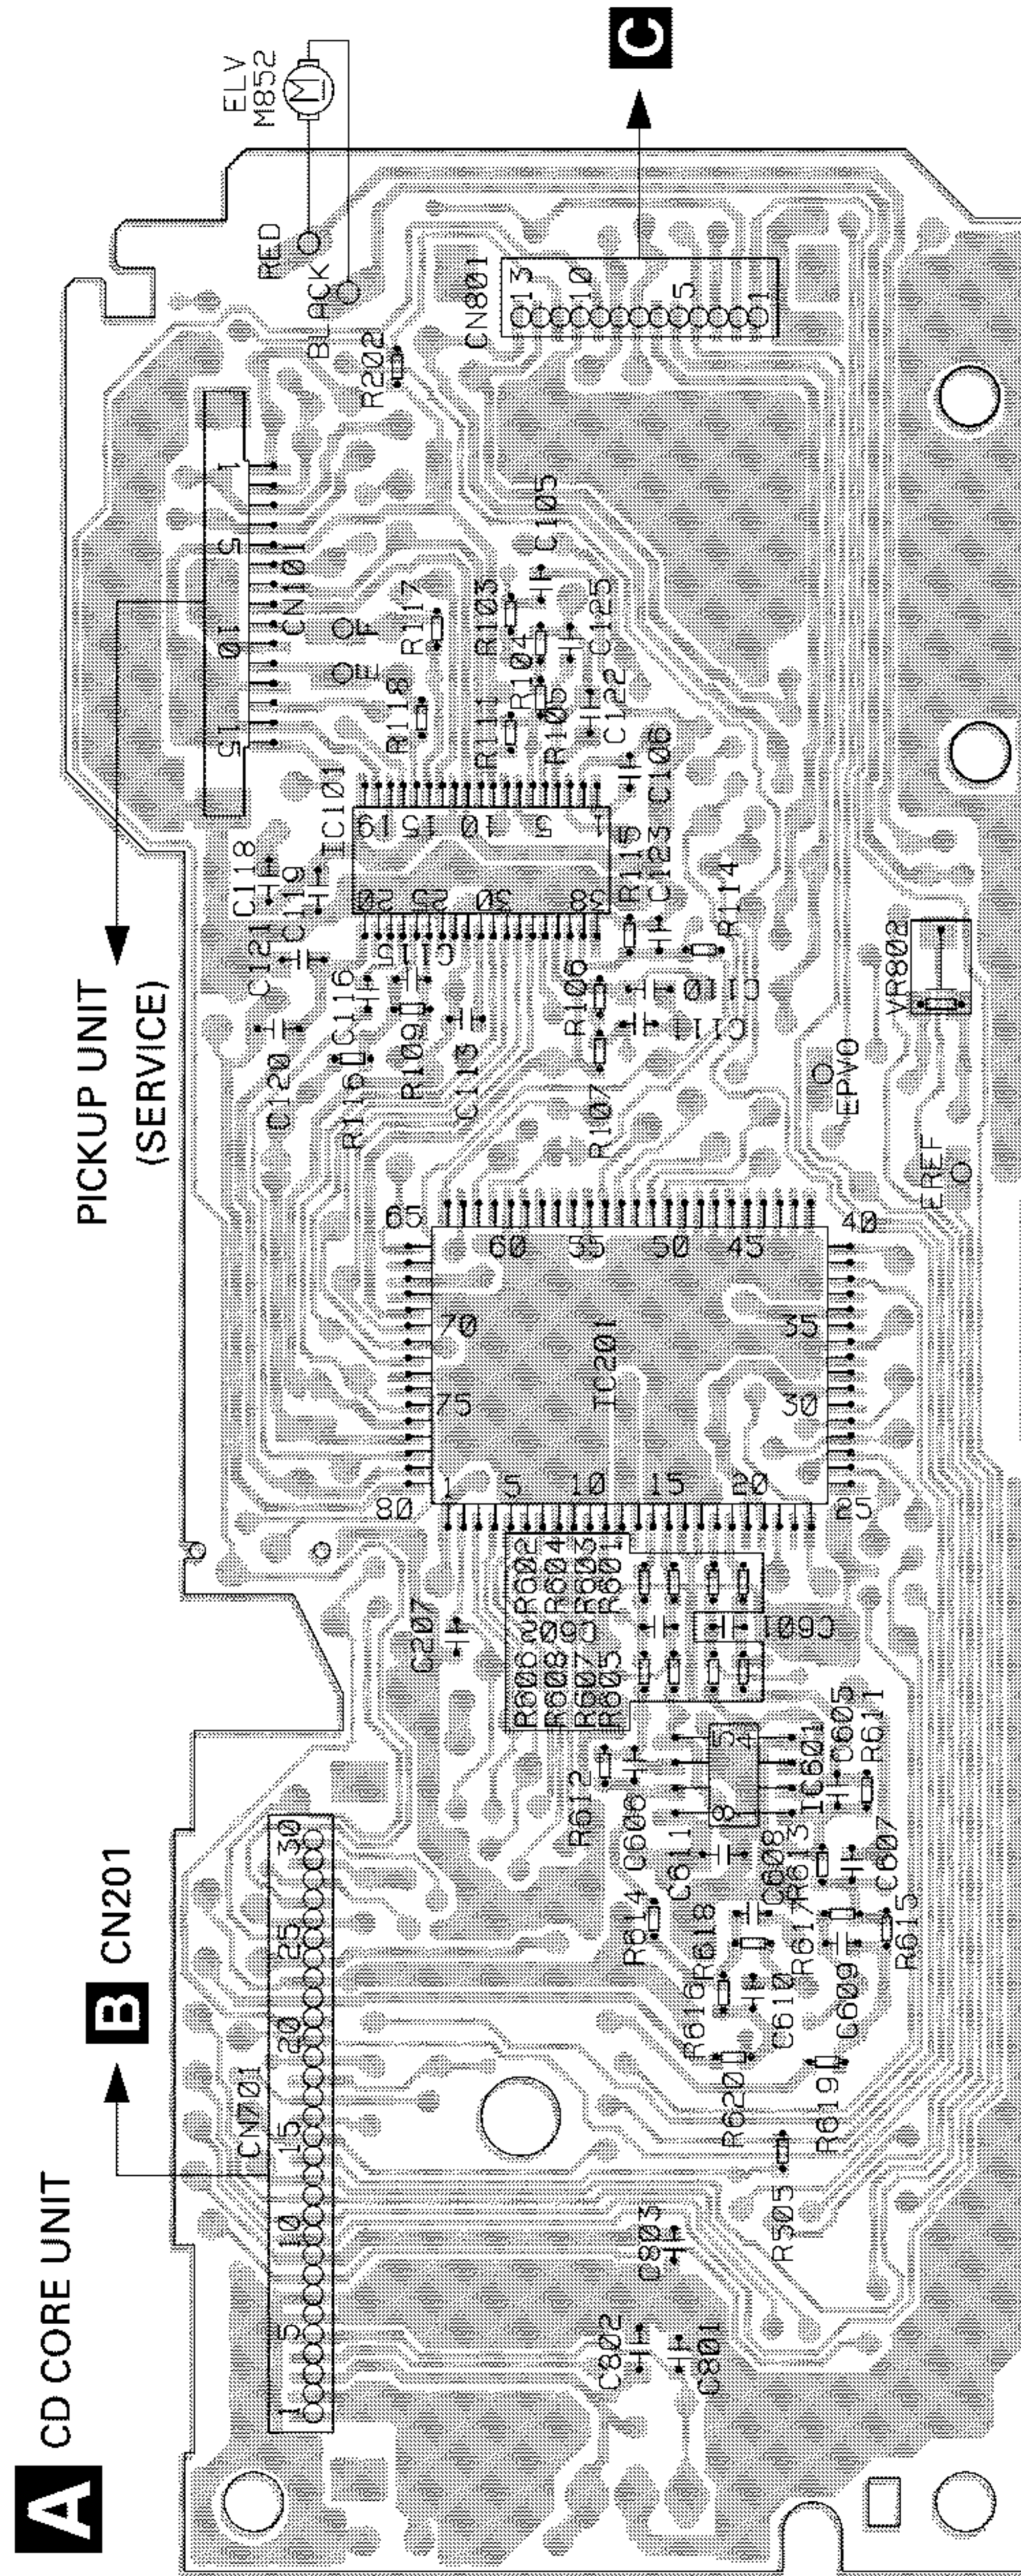

MC-Service

IC, Q	ADJ
IC101	
IC201	
Q102	
IC601	
	VR802

Fig. 14



**4.3 ANTENNA SELECT UNIT**

**SIDE A**

A

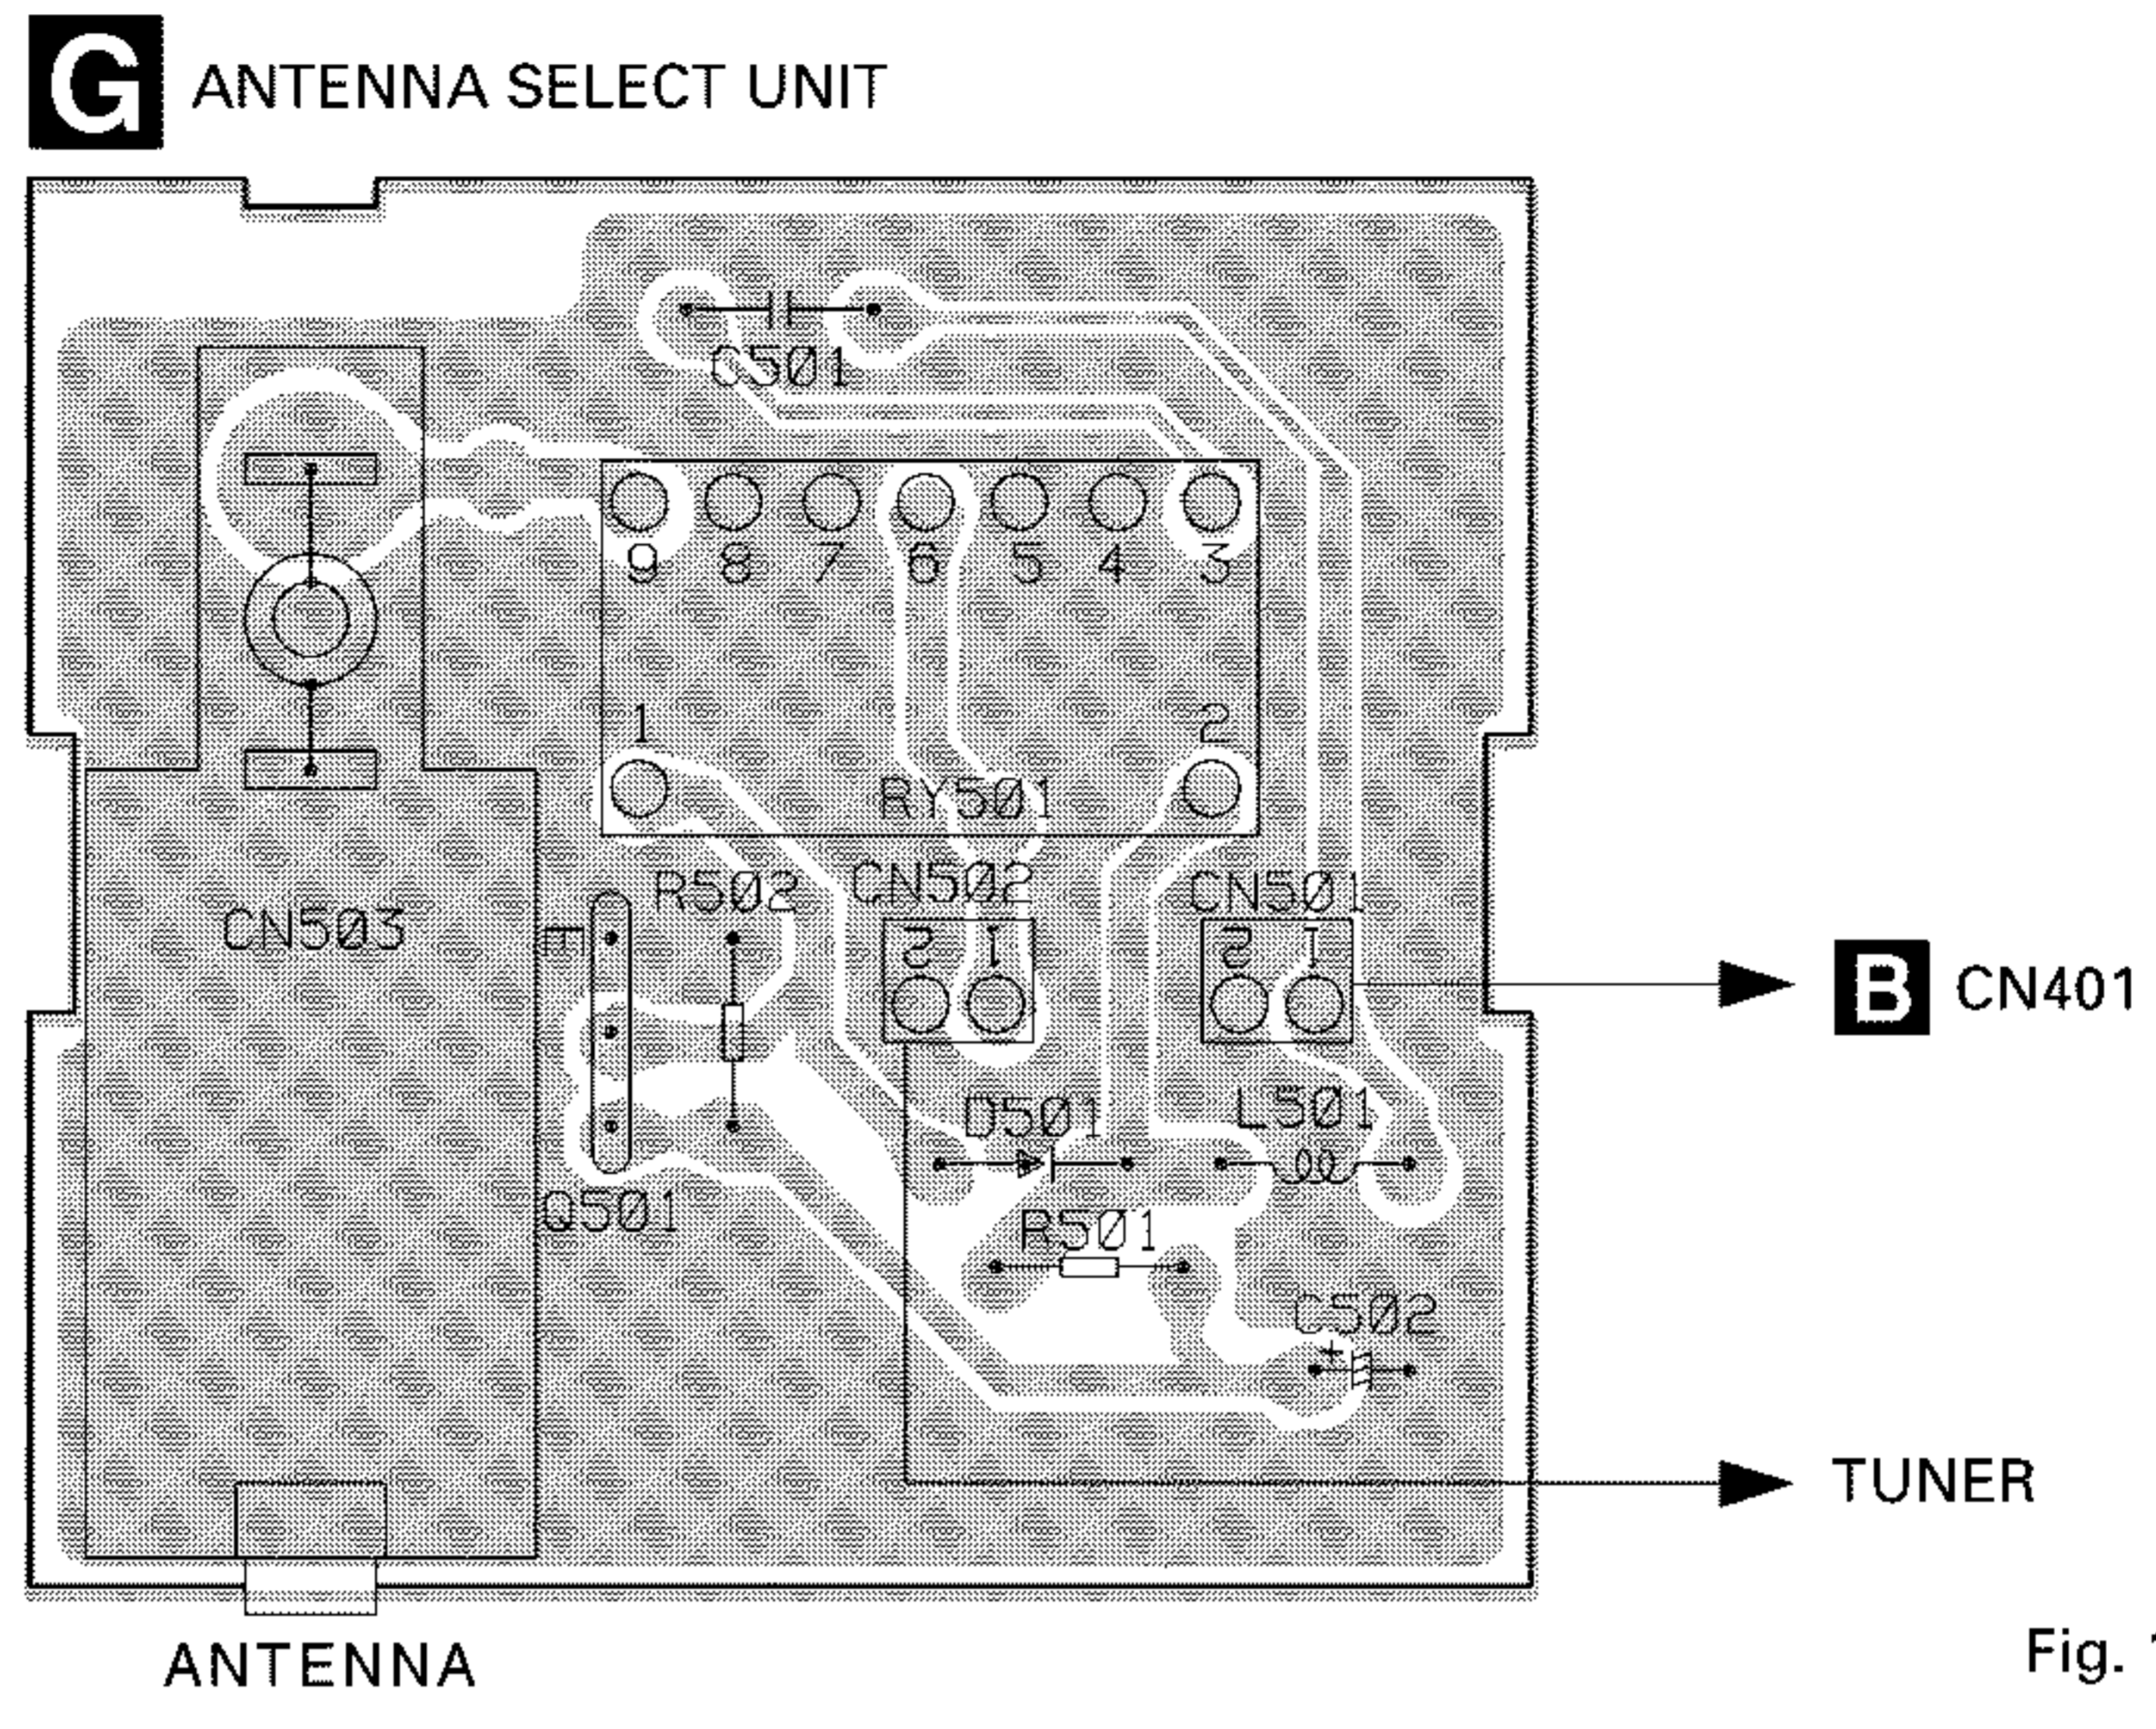


Fig. 16

**4.4 PHOTO PCB**

C

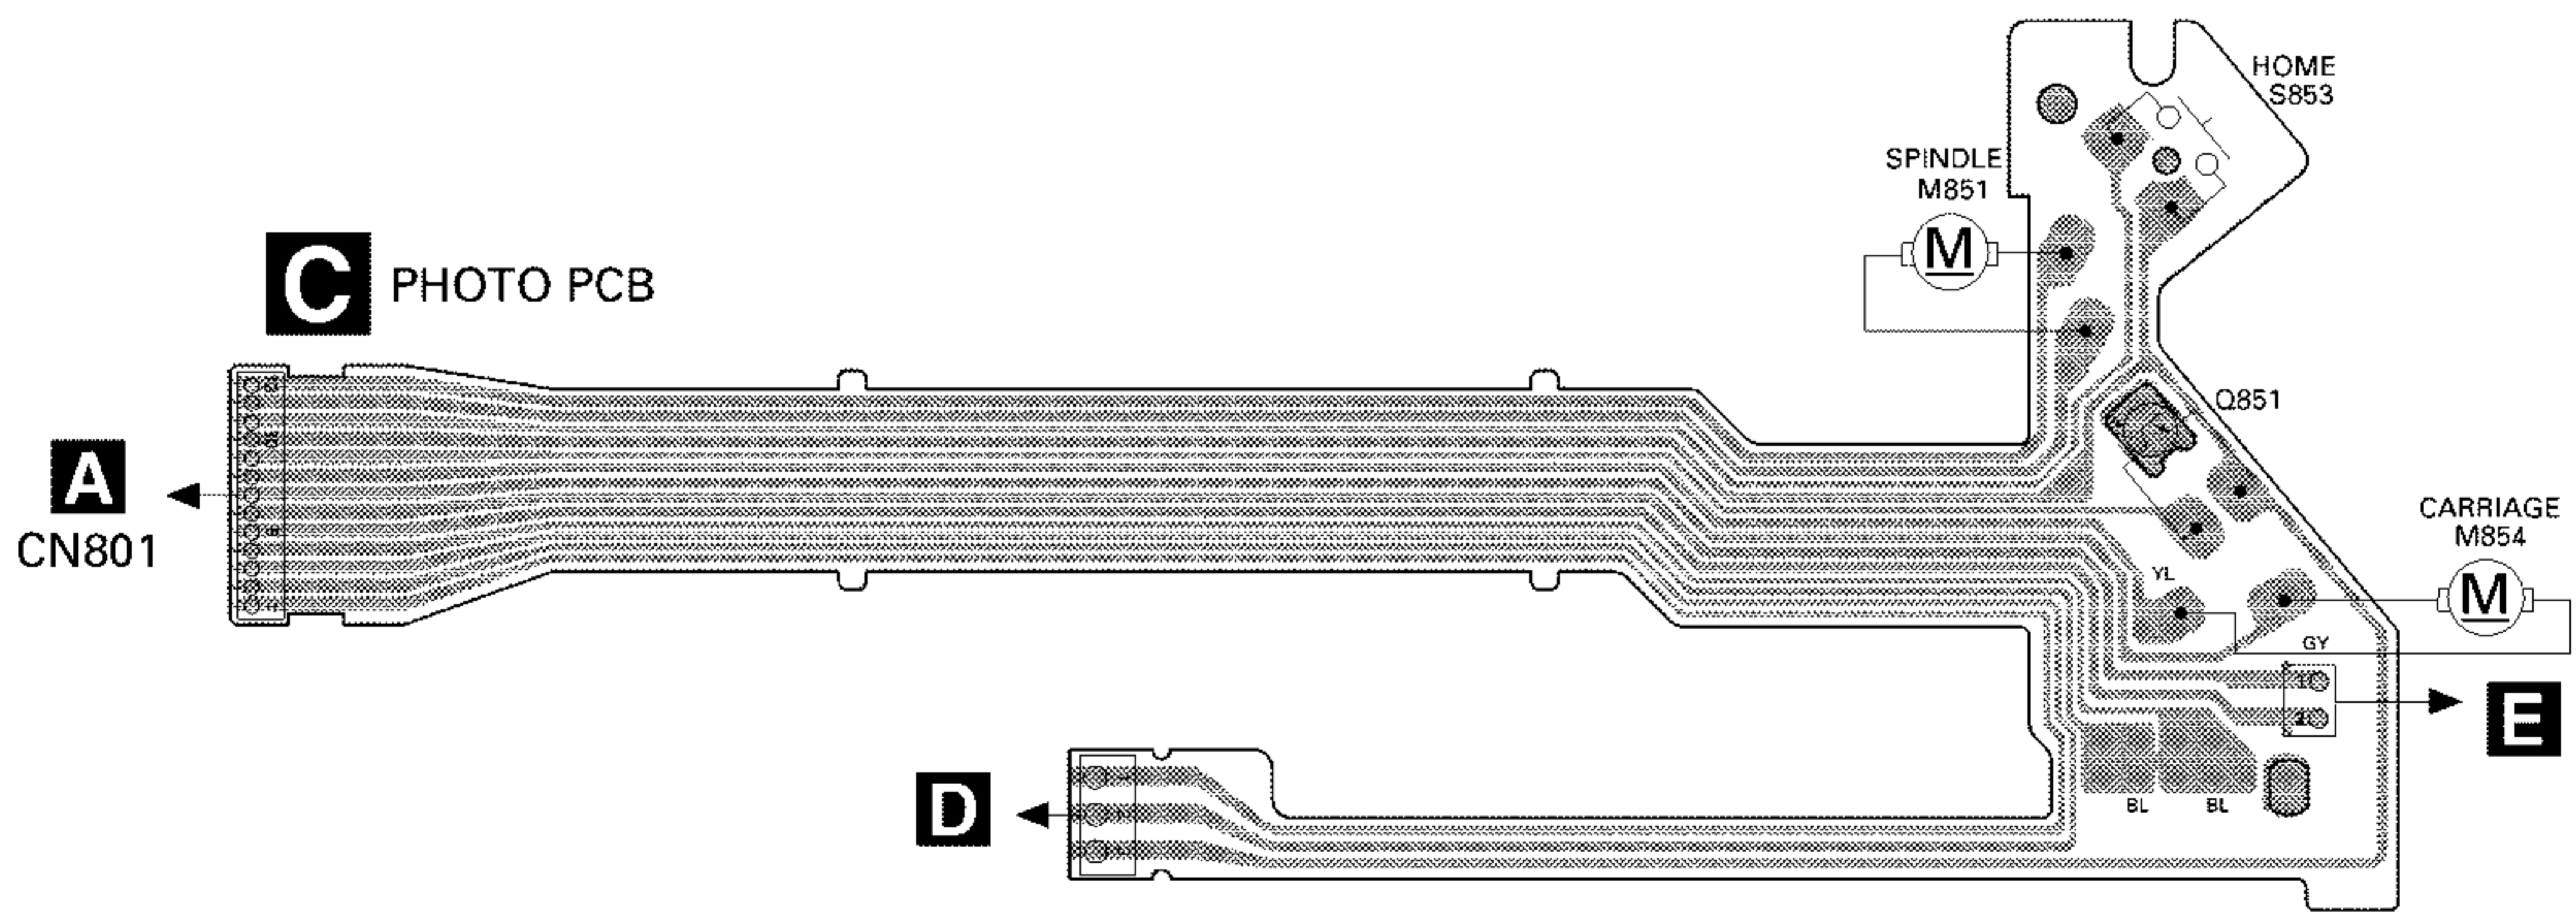


Fig. 17

D

### 4.5 PCB UNIT

SIDE A

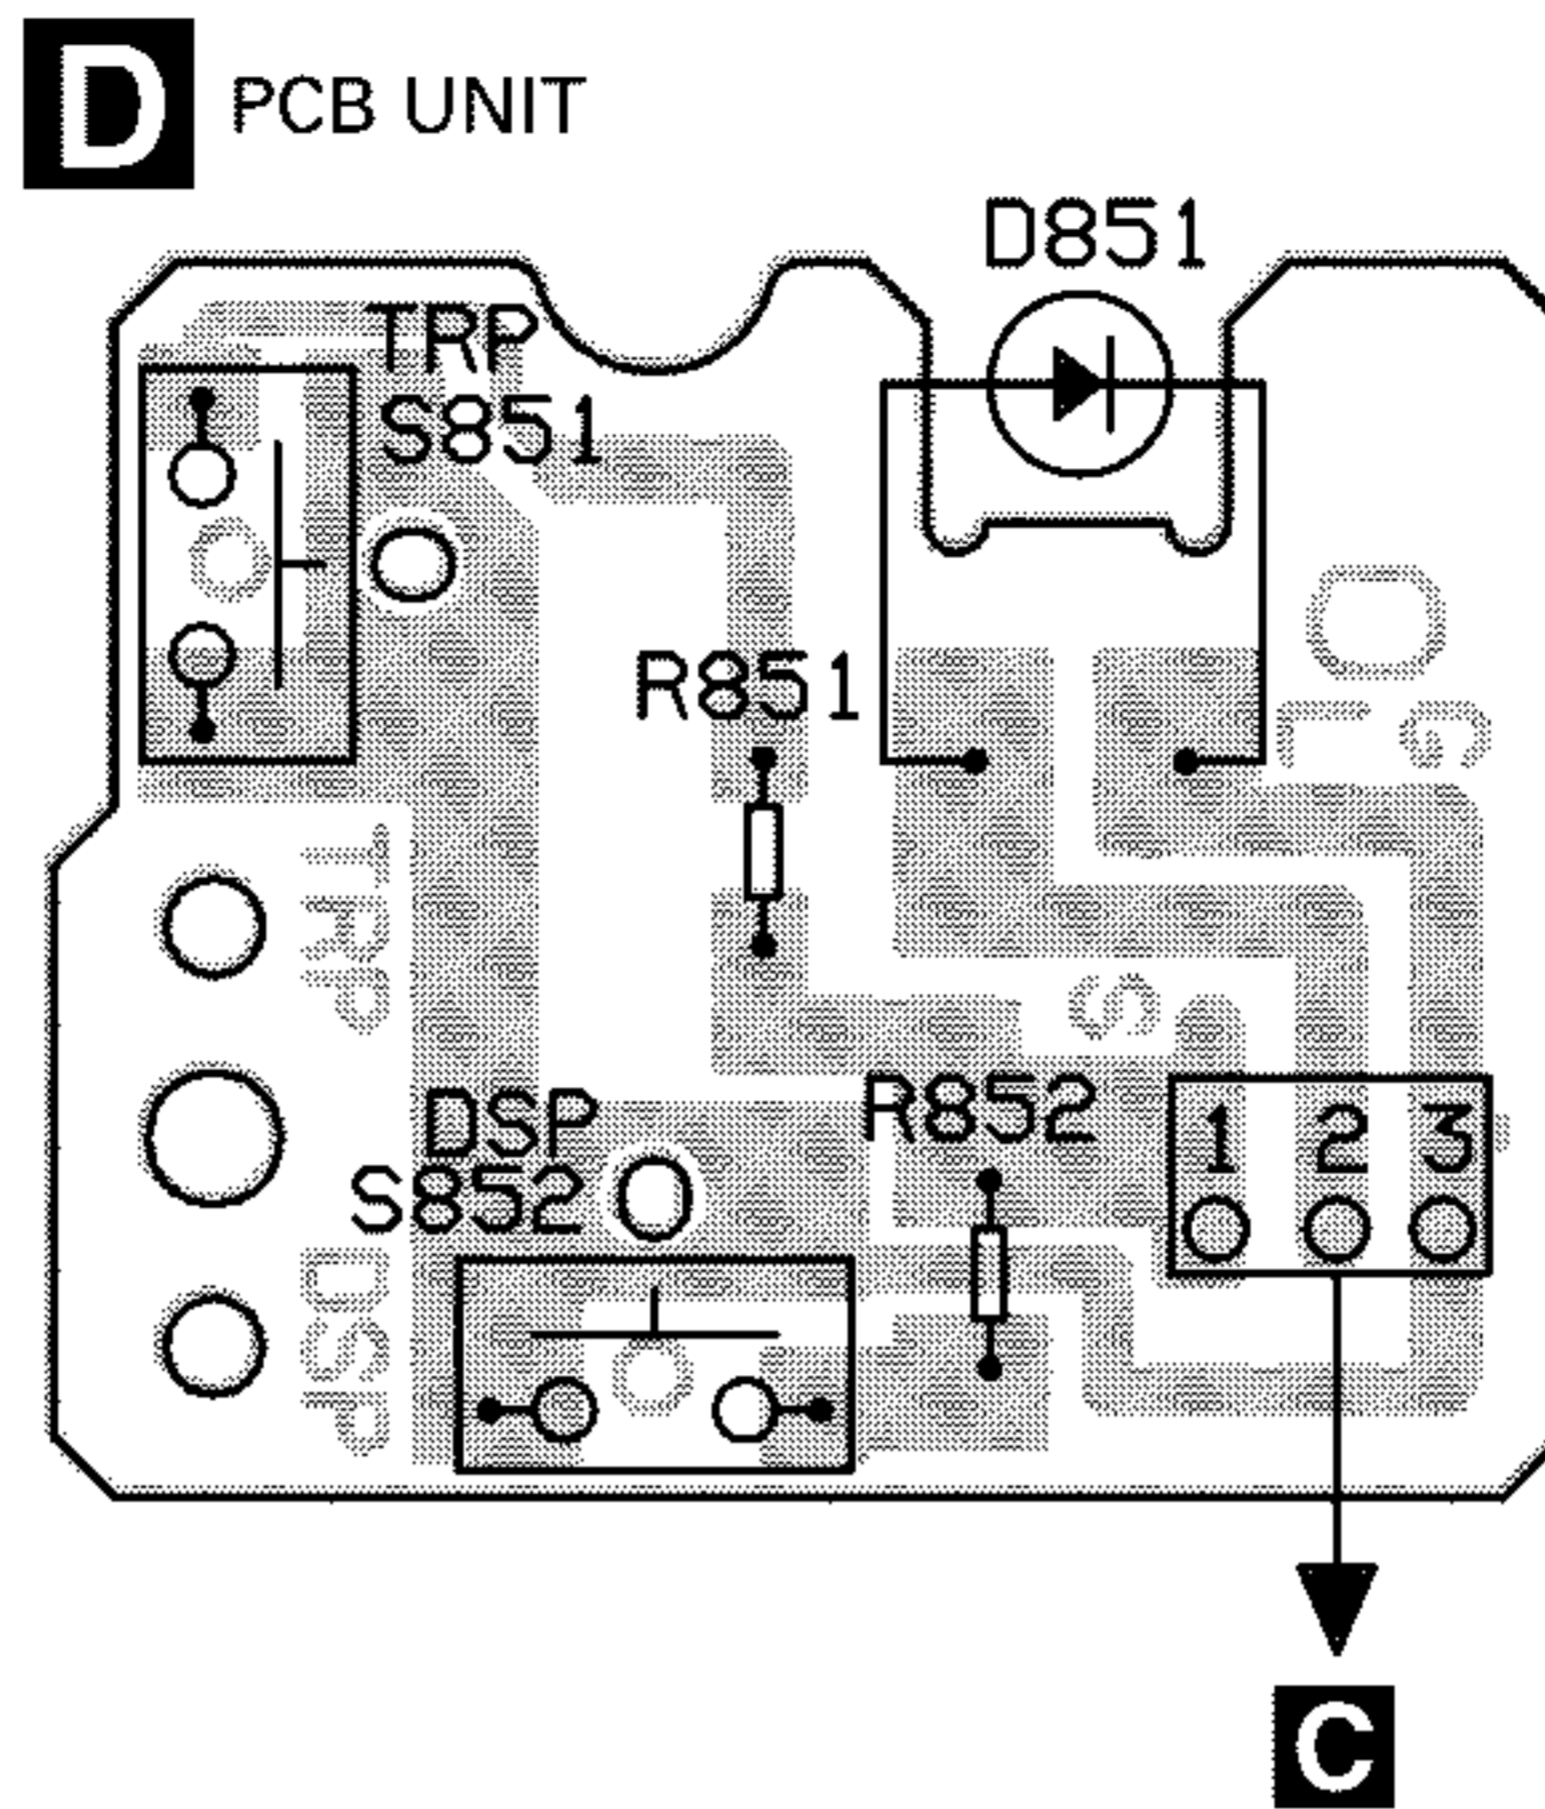


Fig. 18

### 4.6 MOTOR PCB

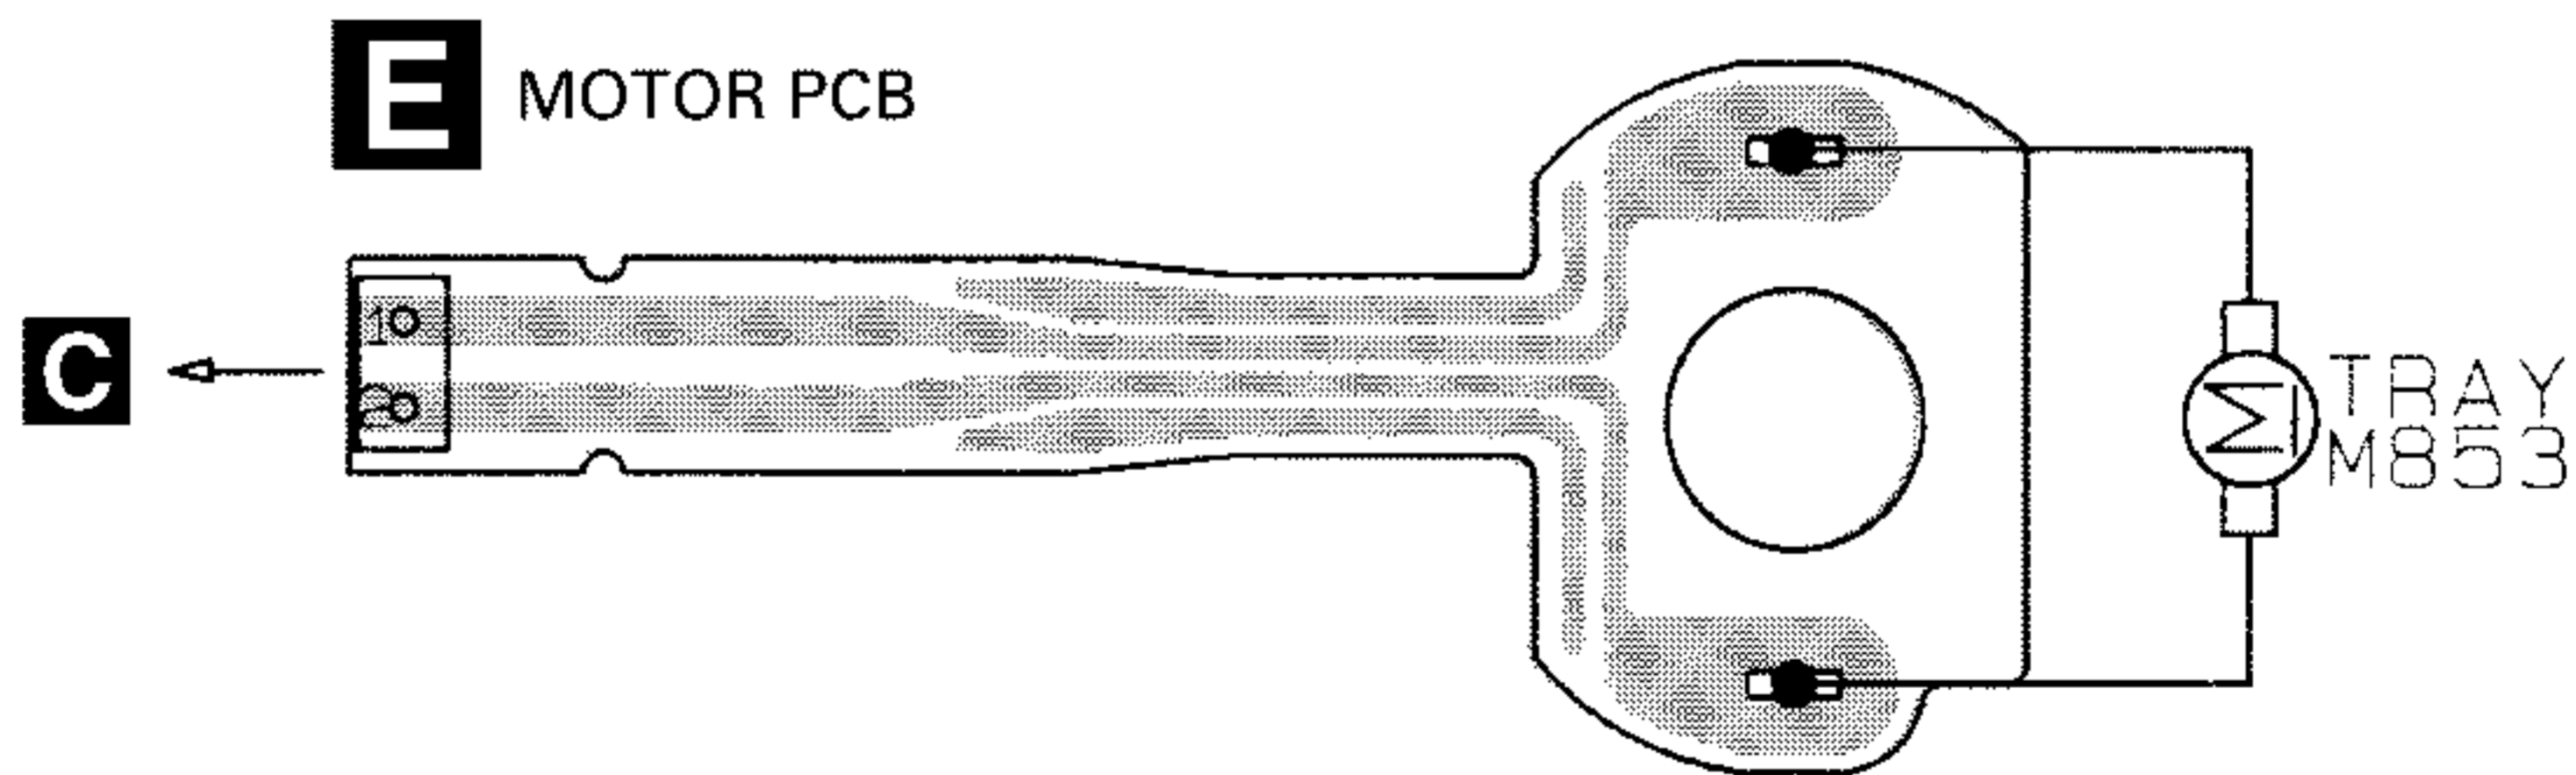


Fig. 19

MC-Service

**4.7 DISPLAY UNIT**


**SIDE A**

A

B

C

D

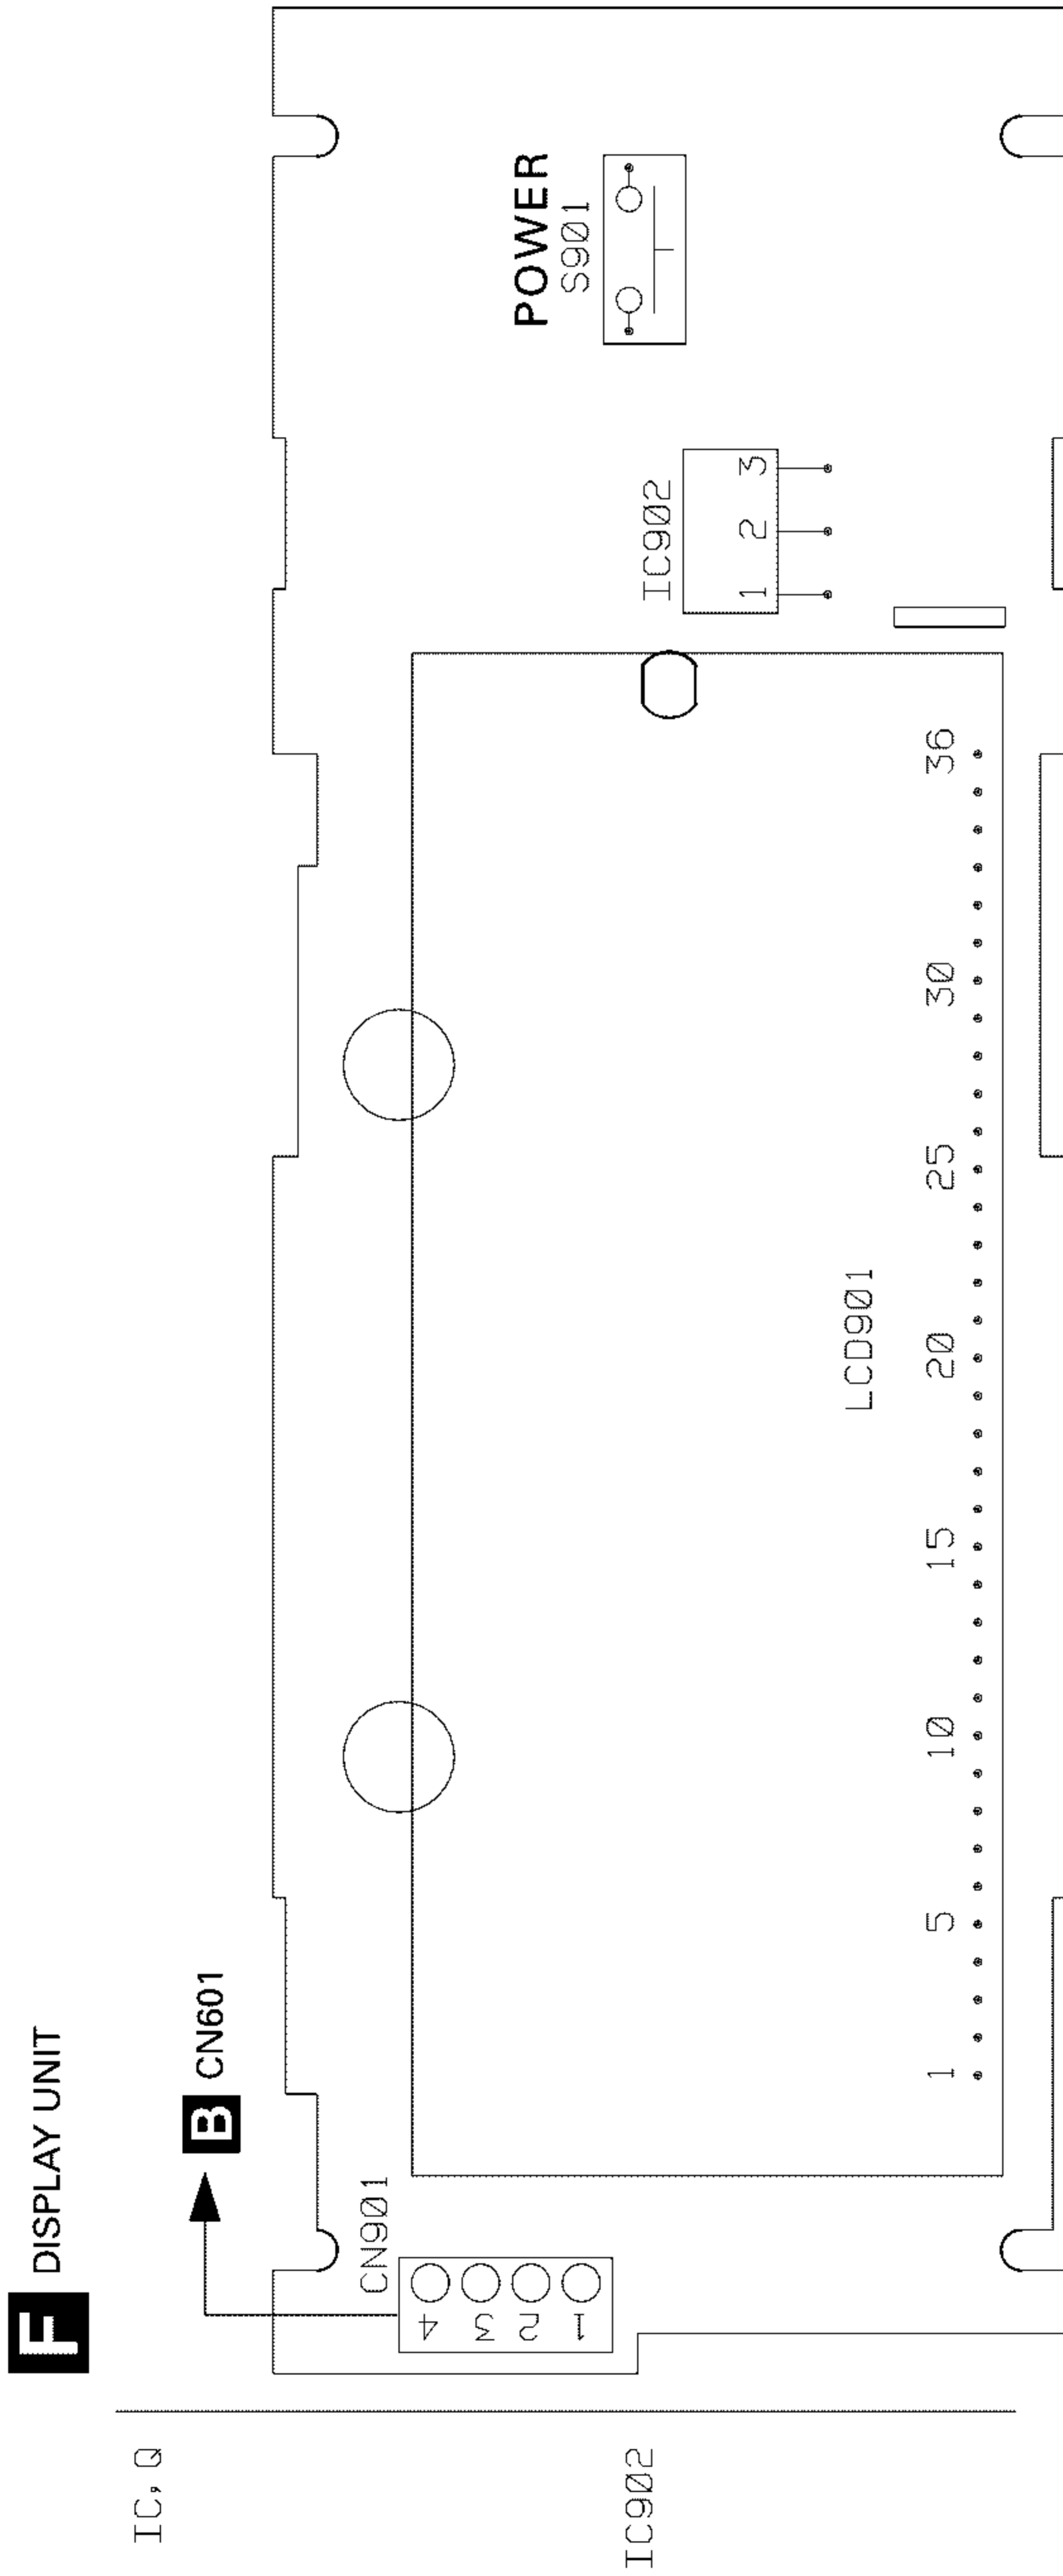

*MC-Service*

Fig. 20

IC, Q  
 Q902  
 Q903  
 IC901  
 Q901

SIDE B

**F** DISPLAY UNIT

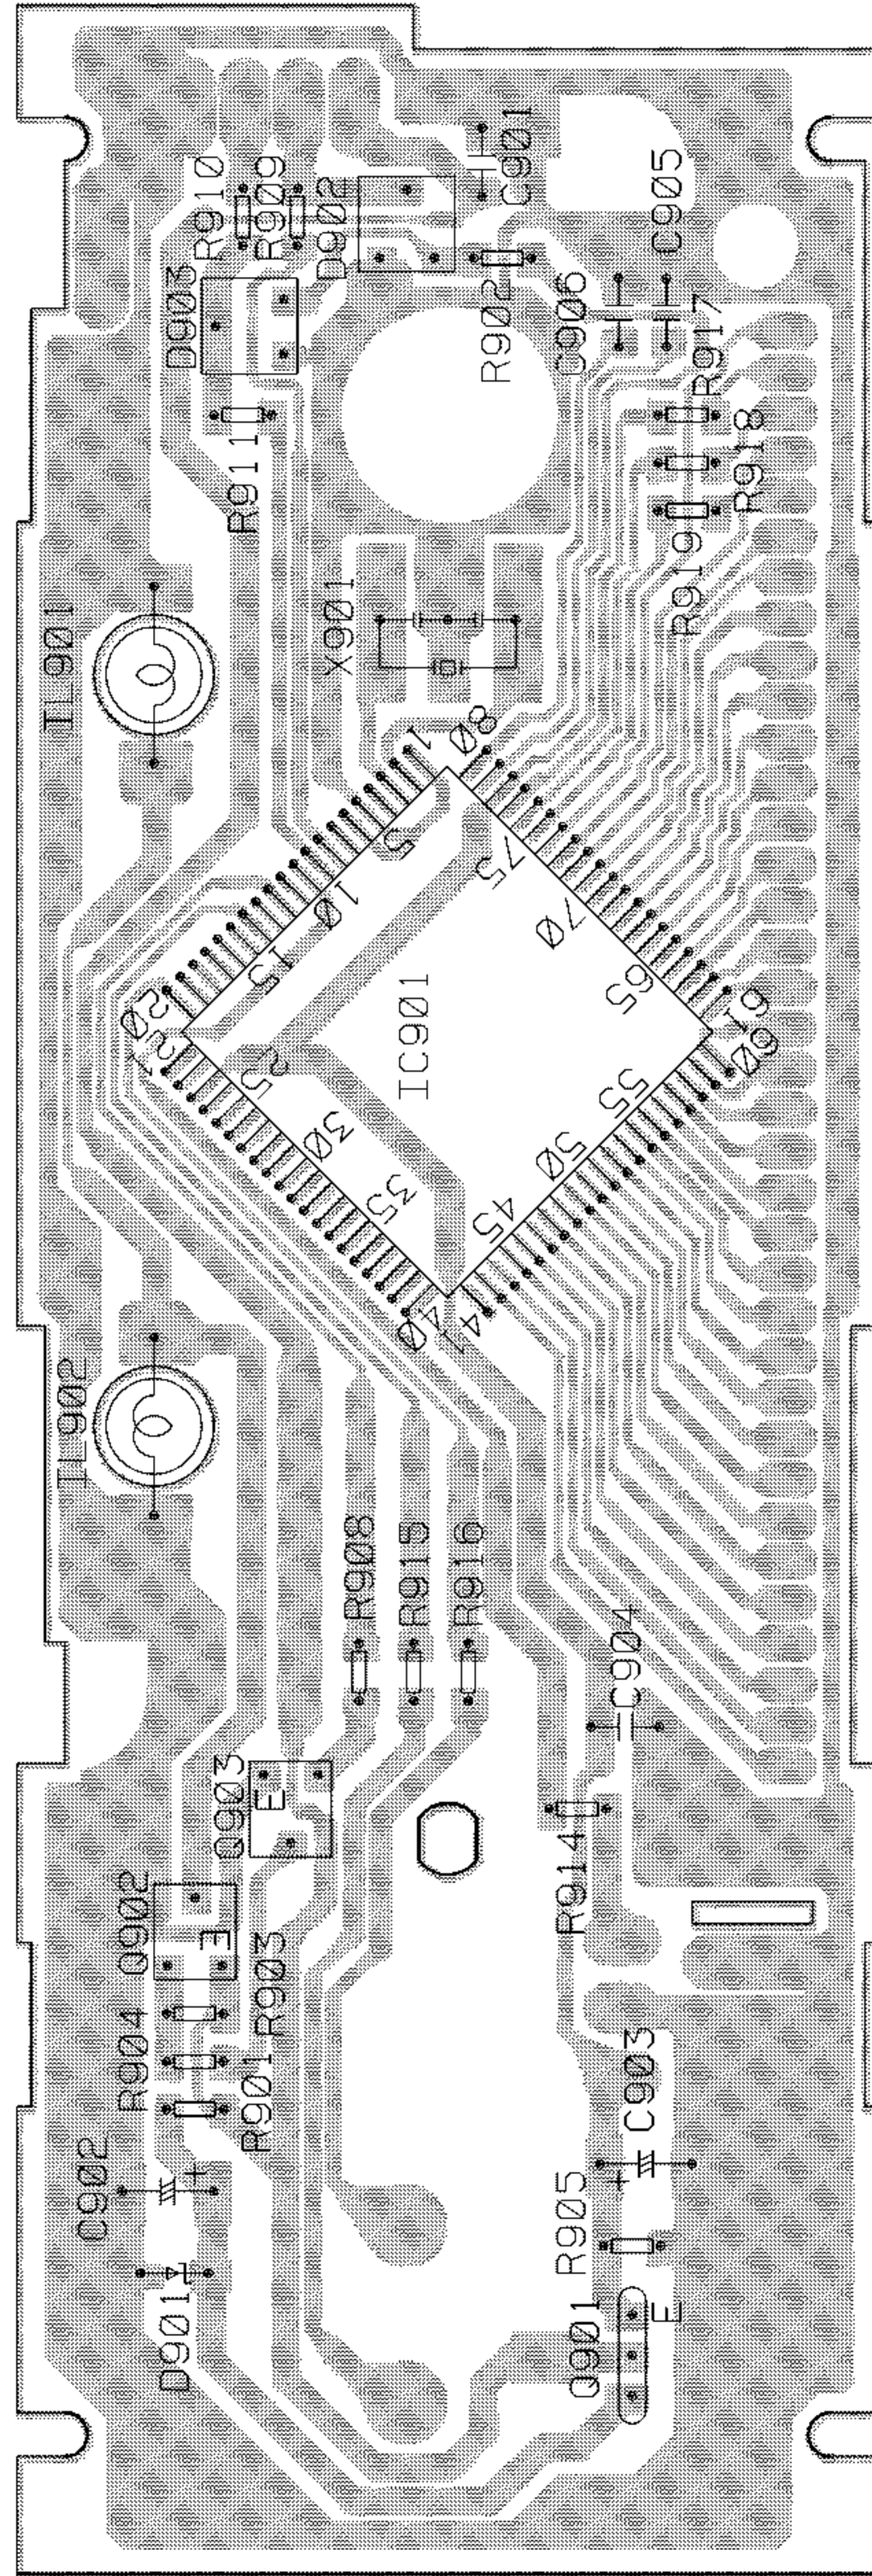


Fig. 21

**F**

**5. ELECTRICAL PARTS LIST**

**NOTE:**

- Parts whose parts numbers are omitted are subject to being not supplied.
- The part numbers shown below indicate chip components.

Chip Resistor

RS1/OSOOOJ,RS1/OOSOOOJ

Chip Capacitor (except for CQS.....)

CKS....., CCS....., CSZS.....

====Circuit Symbol and No.====Part Name	Part No.	====Circuit Symbol and No.====Part Name	Part No.
<b>A</b> Unit Number : CWX2175 Unit Name : CD Core Unit		R 607	RS1/16S912J
		R 608	RS1/16S912J
		R 609	RS1/16S153J
		R 610	RS1/16S153J
		R 611	RS1/16S153J
<b>MISCELLANEOUS</b>			
IC 101 IC	UPC2572GS	R 612	RS1/16S153J
IC 201 IC	UPD63702AGF	R 613	RN1/16SK5601D
IC 301 IC	BA6997FM	R 614	RN1/16SK5601D
IC 302 IC	LB1836M	R 615	RN1/16SK5601D
IC 601 IC	BA4560F	R 616	RN1/16SK5601D
IC 602 IC	BA4560F		
IC 604 IC	TA78L05F	R 617	RS1/16S562J
IC 701 IC	PQ05TZ51	R 618	RS1/16S562J
Q 101 Transistor	2SD1664	R 619	RS1/16S101J
Q 102 Transistor	UMD2N	R 620	RS1/16S101J
		R 801	RS1/10S681J
D 701 Diode	1SR154-400		
D 702 Diode	1SR154-400	R 804	RS1/16S622J
X 201 Ceramic Resonator 16.93MHz	CSS1363	R 805	RS1/16S562J
S 801 Switch(EJECT)	CSG1076	R 806	RS1/16S102J
S 802 Switch(RESET)	CSG1076	R 807	RS1/16S0R0J
S 803 Switch(MAG)	CSN1028		
VR 802 Semi-fixed 1kΩ(B)	CCP1338		
<b>RESISTORS</b>		<b>CAPACITORS</b>	
R 101	RS1/8S100J	C 101	CEV101M6R3
R 102	RS1/8S120J	C 102	CKSQYB104K16
R 103	RS1/16S102J	C 103	CEV470M6R3
R 104	RS1/16S822J	C 104	CKSQYB334K16
R 105	RS1/16S682J	C 105	CCSRCH330J50
R 106	RS1/16S183J	C 106	CKSRYB103K25
R 107	RS1/16S822J	C 107	CEV4R7M35
R 108	RS1/16S333J	C 108	CKSQYB273K25
R 109	RS1/16S683J	C 109	CCSRCH101J50
R 110	RS1/16S134J	C 110	CKSQYB104K16
R 111	RS1/16S273J	C 111	CKSRYB332K50
R 113	RS1/16S222J	C 112	CKSQYB473K25
R 114	RS1/16S103J	C 113	CKSRYB103K25
R 115	RS1/16S103J	C 114	CKSRYB391K50
R 116	RS1/16S102J	C 115	CCSRCH121J50
R 117	RS1/16S163J	C 116	CKSRYB682K25
R 118	RS1/16S163J	C 117	CKSQYB333K25
R 201	RS1/16S104J	C 118	CKSQYB334K16
R 202	RS1/16S104J	C 119	CKSQYB334K16
R 203	RS1/16S0R0J	C 120	CKSQYB224K16
R 504	RS1/16S102J	C 121	CKSQYB224K16
R 505	RS1/16S221J	C 122	CKSQYB104K16
R 506	RA3C221J	C 123	CKSRYB472K50
R 507	RS1/16S102J	C 124	CKSQYB104K16
R 601	RS1/16S103J	C 125	CCSRCH6R0D50
R 602	RS1/16S103J	C 126	CKSRYB153K25
R 603	RS1/16S103J	C 201	CKSQYB334K16
R 604	RS1/16S103J	C 202	CKSQYB104K16
R 605	RS1/16S912J	C 205	CEV101M6R3
R 606	RS1/16S912J	C 206	CKSQYB224K16

====Circuit Symbol and No.====Part Name	Part No.	====Circuit Symbol and No.====Part Name	Part No.
C 207	CKSRYP102K50	L 401	LCTA2R2J3225
C 208	CKSQYB224K16	L 402	Coil CTC1079
C 301	CEV101M10	L 403	Inductor LCTA2R2J3225
C 601	CCSRCH181J50	L 404	Inductor LCTA1R0J3225
C 602	CCSRCH181J50	L 405	Inductor LCTA101J3225
C 603	CCSRCH820J50	L 406	Inductor LCTAR68J3225
C 604	CCSRCH820J50	X 301	Resonator 38.000kHz CSS1372
C 605	CCSRCH820J50	X 401	Crystal Resonator 7.2MHz CSS1030
C 606	CCSRCH820J50	X 601	Resonator 6.14MHz CSS1336
C 607	CKSRYP222K50	VR 301	Semi-fixed 47kΩ(B) CCP1233
C 608	CKSRYP222K50	VR 302	Semi-fixed 33kΩ(B) CCP1232
C 609	CCSRCH331J50		
C 610	CCSRCH331J50		
C 611	CKSQYB104K16		
C 612	CKSQYB104K16		
C 613	CKSQYB104K16		
C 614	CKSQYB104K16		
C 615	CEV101M10		
C 701	22μF/6.3V CCH1233		
C 702	CKSQYB334K16		
C 703	CEV101M6R3		
C 801	CKSRYP103K25		
C 802	CKSQYB104K16		
C 803	CKSRYP103K25		
<b>B</b> Unit Number : CWX2199(CDX-FM637S/X1N/EW)			
Unit Number : CWX2198(CDX-FM637S/X1N/ES)			
Unit Name : System Unit			
<b>MISCELLANEOUS</b>			
IC 201	IC BU4066BCF	R 201	RS1/10S471J
IC 301	IC BA1404F	R 202	RS1/10S471J
IC 302	IC BA4560F	R 203	RS1/10S472J
IC 401	IC BU2611FS	R 204	RS1/10S472J
IC 601	IC PD5397C	R 205	RS1/10S361J
IC 701	IC LH5116HN-10Y	R 206	RS1/10S361J
IC 801	IC PAJ002A	R 207	RS1/10S225J
IC 802	IC NJM78L06A	R 208	RS1/10S225J
Q 201	Transistor IMD3A	R 209	RS1/10S223J
Q 202	Transistor IMH3A	R 210	RS1/10S223J
Q 301	Transistor DTC143TK	R 211	RS1/10S681J
Q 401	Transistor IMX1	R 212	RS1/10S681J
Q 402	Transistor 2SC2059K	R 213	RS1/10S112J
Q 403	Transistor 2SC2059K	R 214	RS1/10S112J
Q 404	Transistor 2SC2059K	R 215	RS1/10S362J
Q 601	Transistor DTA144EK	R 216	RS1/10S362J
Q 701	Transistor DTC114EK	R 301	RS1/10S362J
Q 801	Transistor 2SD2396	R 302	RS1/10S823J
Q 802	Transistor IMD3A	R 303	RS1/10S681J
Q 803	Transistor IMX1	R 304	RS1/10S392J
Q 804	Transistor 2SB1238	R 305	RS1/10S102J
Q 805	Transistor 2SB710A	R 306	RS1/10S392J
Q 806	Transistor 2SB710A	R 307	RS1/10S102J
Q 807	Transistor IMH10A	R 308	RS1/10S392J
D 301	Diode MA110	R 309	RS1/10S513J
D 302	Diode RB706D40	R 310	RS1/10S103J
D 401	Diode DA204K	R 311	RS1/10S103J
D 402	Diode KV1440	R 312	RS1/10S103J
D 403	Diode MA110	R 313	RS1/10S513J
D 701	Diode 1SS356	R 314	RS1/10S101J
D 801	Diode 1SR139-200	R 315	RS1/10S221J
D 802	Diode 1SR139-200	R 316	RS1/10S221J
D 803	Diode UDZ5R1(B)	R 317	RS1/10S104J
D 804	Diode MA110	R 318	RS1/10S104J
D 805	Diode UDZ5R1(B)	R 319	RS1/10S683J
D 806	Diode UDZ3R3(B)	R 320	RS1/10S123J
L 201	Filter CTF1333	R 321	RS1/10S472J
L 202	Filter CTF1333	R 322	RS1/10S393J
L 301	Inductor LCTA2R2J3225	R 401	RS1/10S223J
L 302	Inductor CTF1302	R 402	RS1/10S681J
		R 403	RS1/10S362J
		R 404	RS1/10S242J
		R 405	RS1/10S822J
		R 406	RS1/10S103J
		R 407	RS1/10S103J
		R 408	RS1/10S560J
		R 409	RS1/10S103J
		R 410	RS1/10S103J
		R 411	RS1/10S332J
		R 412	RS1/10S101J
		R 413	RS1/10S222J
		R 414	RS1/10S104J
		R 415	RS1/10S244J
		R 416	RS1/10S154J
		R 417	RS1/10S152J
		R 418	RS1/10S331J



# CDX-FM637S

====Circuit Symbol and No.====Part Name	Part No.	====Circuit Symbol and No.====Part Name	Part No.
R 419	RS1/10S122J	C 211	CKSQYB102K50
R 420	RS1/8S470J	C 212	CKSQYB102K50
R 601	RS1/10S433J	C 213	CKSQYB102K50
R 602	RS1/10S103J	C 214	CKSQYB102K50
R 603	RA3C103J	C 301	CEAL100M16
R 604	RA3C222J	C 302	CKSQYB103K50
R 605	RS1/10S102J	C 303	CCSQCH120J50
R 606	RS1/10S102J	C 304	CEAL220M16
R 607	RS1/10S104J	C 305	CKSQYB104K16
R 608	RS1/10S104J	C 306	CKSQYB103K50
R 609	RS1/10S222J	C 307	CCSQCH101J50
R 610	RS1/10S104J	C 308	CEALR47M50
R 611	RS1/10S222J	C 309	CKSQYB103K50
R 612	RS1/10S104J	C 310	CEAL100M16
R 613	RS1/10S102J	C 311	CCSQCH160J50
R 614	RS1/10S103J	C 312	CEAL100M16
R 615	RS1/10S0R0J	C 313	CKSQYB104K16
R 617	RS1/10S0R0J	C 314	CKSYB105K16
R 620	RS1/10S104J	C 315	CEAL220M16
R 621	RS1/10S513J	C 316	CKSQYB104K16
R 622	RS1/10S103J	C 317	CCSQCH271J50
R 624	RS1/10S0R0J	C 318	CCSQCH162J50
R 625	RS1/10S222J	C 319	CEJA100M16
R 626	RS1/10S823J	C 401	CCSQCH270J50
R 627	RS1/10S222J	C 402	CCSQCH270J50
R 628	RS1/10S473J	C 403	CKSQYB104K16
R 629	RS1/10S332J	C 404	CKSQYB102K50
R 630	RS1/10S332J	C 405	CKSQYB473K16
R 631	RS1/10S332J	C 406	CEALNP330M10
R 701	RS1/10S104J	C 407	CEAL470M6R3
R 702	RS1/10S101J	C 408	CKSQYB104K16
R 801	RS1/10S183J	C 409	CCSQCH180J50
R 802	RS1/10S822J	C 410	CCSQCH100D50
R 803	RS1/10S204J	C 411	CCSQCH330J50
R 804	RS1/10S913J	C 412	CCSQCH180J50
R 805	RS1/10S391J	C 413	CCSQCH1R0C50
R 806	RS1/10S681J	C 414	CKSQYB103K50
R 807	RS1/4S121J	C 415	CCSQCH1R0C50
R 808	RS1/10S750J	C 416	CKSQYB103K50
R 809	RS1/10S102J	C 417	CKSQYB103K50
R 810	RS1/10S152J	C 418	CCSQCH3R0C50
R 811	RS1/10S103J	C 419	CKSQYB103K50
R 812	RS1/8S3R9J	C 420	CEJA220M16
R 813	RS1/10S102J	C 421	CKSQYB473K50
R 815	RS1/10S104J	C 601	CKSQYB103K50
R 816	RS1/10S104J	C 602	CKSQYB102K50
R 817	RS1/10S223J	C 603	CKSQYB104K16
R 818	RS1/10S152J	C 604	CKSQYB473K16
R 819	RS1/10S223J	C 605	CKSQYB473K16
R 820	RS1/10S152J	C 606	CKSQYB102K50
R 821	RS1/10S560J	C 607	CKSQYB102K50
R 822	RS1/10S181J	C 701	CKSQYB103K50
R 823	RS1/10S222J	C 702	CEJA221M6R3
		C 801	CEJA100M16
		C 802	CCH1183
CAPACITORS			
C 201	CEJA330M6R3	C 803	See Contrast table
C 202	CEJA330M6R3	C 804	See Contrast table
C 203	CKSQYB103K50	C 805	470µF/16V
C 204	CKSQYB103K50	C 806	470µF/16V
C 205	See Contrast table	C 807	CCH1183
		C 808	CKSQYB473K16
C 206	See Contrast table	C 809	CKSQYB103K50
C 207	See Contrast table	C 810	CKSQYB103K50
C 208	See Contrast table	C 811	CEJA220M16
C 209	CSZS1R0M10	C 812	CKSQYB104K16
C 210	CSZS1R0M10		CKSQYB103K50

====Circuit Symbol and No.====	Part Name	Part No.
C 813		CKSQYB103K50
C 814		CKSQYB103K50
C 815		CKSQYB103K50
C 816		CSZST220M16
C 817		CKSQYB334K16
C 818		CKSQYB104K16
C 819		CEAS221M10
C 820		CEJA101M10
C 821		CEAS331M6R3

**CONTRAST TABLE of SYSTEM UNIT  
CDX-FM637S/X1N/EW and CDX-FM637S/X1N/ES  
are constructed the same except for the follow-  
ing:**

Circuit Symbol and Description	FM637S/X1N/EW	FM637S/X1N/ES
C205	CKSQYB272K50	CKSQYB392K50
C206	CKSQYB272K50	CKSQYB392K50
C207	CKSQYB222K50	CKSQYB332K50
C208	CKSQYB222K50	CKSQYB332K50
C803	Not used	CKSQYB104K50
C804	CKSQYB104K50	Not used

**F** Unit Number :  
Unit Name : Display Unit

**MISCELLANEOUS**

IC 901	IC	PD6122A
IC 902	IC	SBX8035-H
Q 901	Transistor	2SD1767
Q 902	Transistor	2SB710A
Q 903	Transistor	DTC114EK
D 901	Diode	UDZ5R6(B)
D 902	Diode	MA153
D 903	Diode	MA153
X 901	Ceramic Resonator 4.9152MHz	CSS1084
S 901	Switch(POWER)	CSG-253
IL 901	Lamp 14V 40mA	See Contrast table
IL 902	Lamp 14V 40mA	See Contrast table
LCD 901	LCD	CAW1273

**RESISTORS**

R 901	RS1/10S102J
R 902	RS1/10S0R0J
R 903	RS1/10S223J
R 904	RS1/10S332J
R 905	RS1/10S332J
R 908	RS1/10S0R0J
R 909	RS1/10S471J
R 910	RS1/10S0R0J
R 911	RS1/10S471J
R 914	RS1/10S0R0J
R 915	RS1/10S471J
R 916	RS1/10S471J
R 917	RS1/10S0R0J
R 918	RS1/10S0R0J
R 919	RS1/10S0R0J

**CAPACITORS**

C 901	CKSQYB473K50
C 902	CSZSR100M6R3
C 903	CSZSR100M6R3
C 904	CKSQYB104K16
C 905	CKSQYB104K16
C 906	CKSQYB104K16

====Circuit Symbol and No.====Part Name Part No.  
**CONTRAST TABLE of DISPLAY UNIT  
CDX-FM637S/X1N/EW and CDX-FM637S/X1N/ES  
are constructed the same except for the follow-  
ing:**

Circuit Symbol and Description	FM637S/X1N/EW	FM637S/X1N/ES
IL901	Lamp	CEL1539
IL902	Lamp	CEL1539

**G** Unit Number : CWX2200  
Unit Name : Antenna Select Unit

**MISCELLANEOUS**

Q 501	Transistor	2SC1740S
D 501	Diode	1SS133
L 501	Ferri-Inductor	LAU4R7K
RY 501		CSR1014

**RESISTORS**

R 501	RD1/4PU683J
R 502	RD1/4PU103J

**CAPACITORS**

C 501	CKCYB102K50
C 502	CEAL101M10

**C** Unit Number :  
Unit Name : Photo PCB

Q 851	Photo-transistor	PT4800
S 853	Switch(HOME)	CSN1012

**D** Unit Number :  
Unit Name : PCB Unit

S 851	Switch(TRP)	CSN1033
S 852	Switch(DSP)	CSN1033
R 851		RS1/8S473J
R 852		RS1/8S753J

**E** Unit Number :  
Unit Name : Motor PCB

M 853	Motor Unit(TRAY)	CXA9139
-------	------------------	---------

**Miscellaneous Parts List**

D 851	LED	CN504-2
M 851	Motor Unit(SPINDLE)	CXA9371
M 852	Motor Unit(ELV)	CXA9146
M 854	Motor Unit(CARRIAGE)	CXA9131
VR 801	Volume 10kΩ	CCW1021
Pickup Unit(Service)		CXX1235

## 6. ADJUSTMENT

### 6.1 MODULATOR ADJUSTMENT

● Connection Diagram

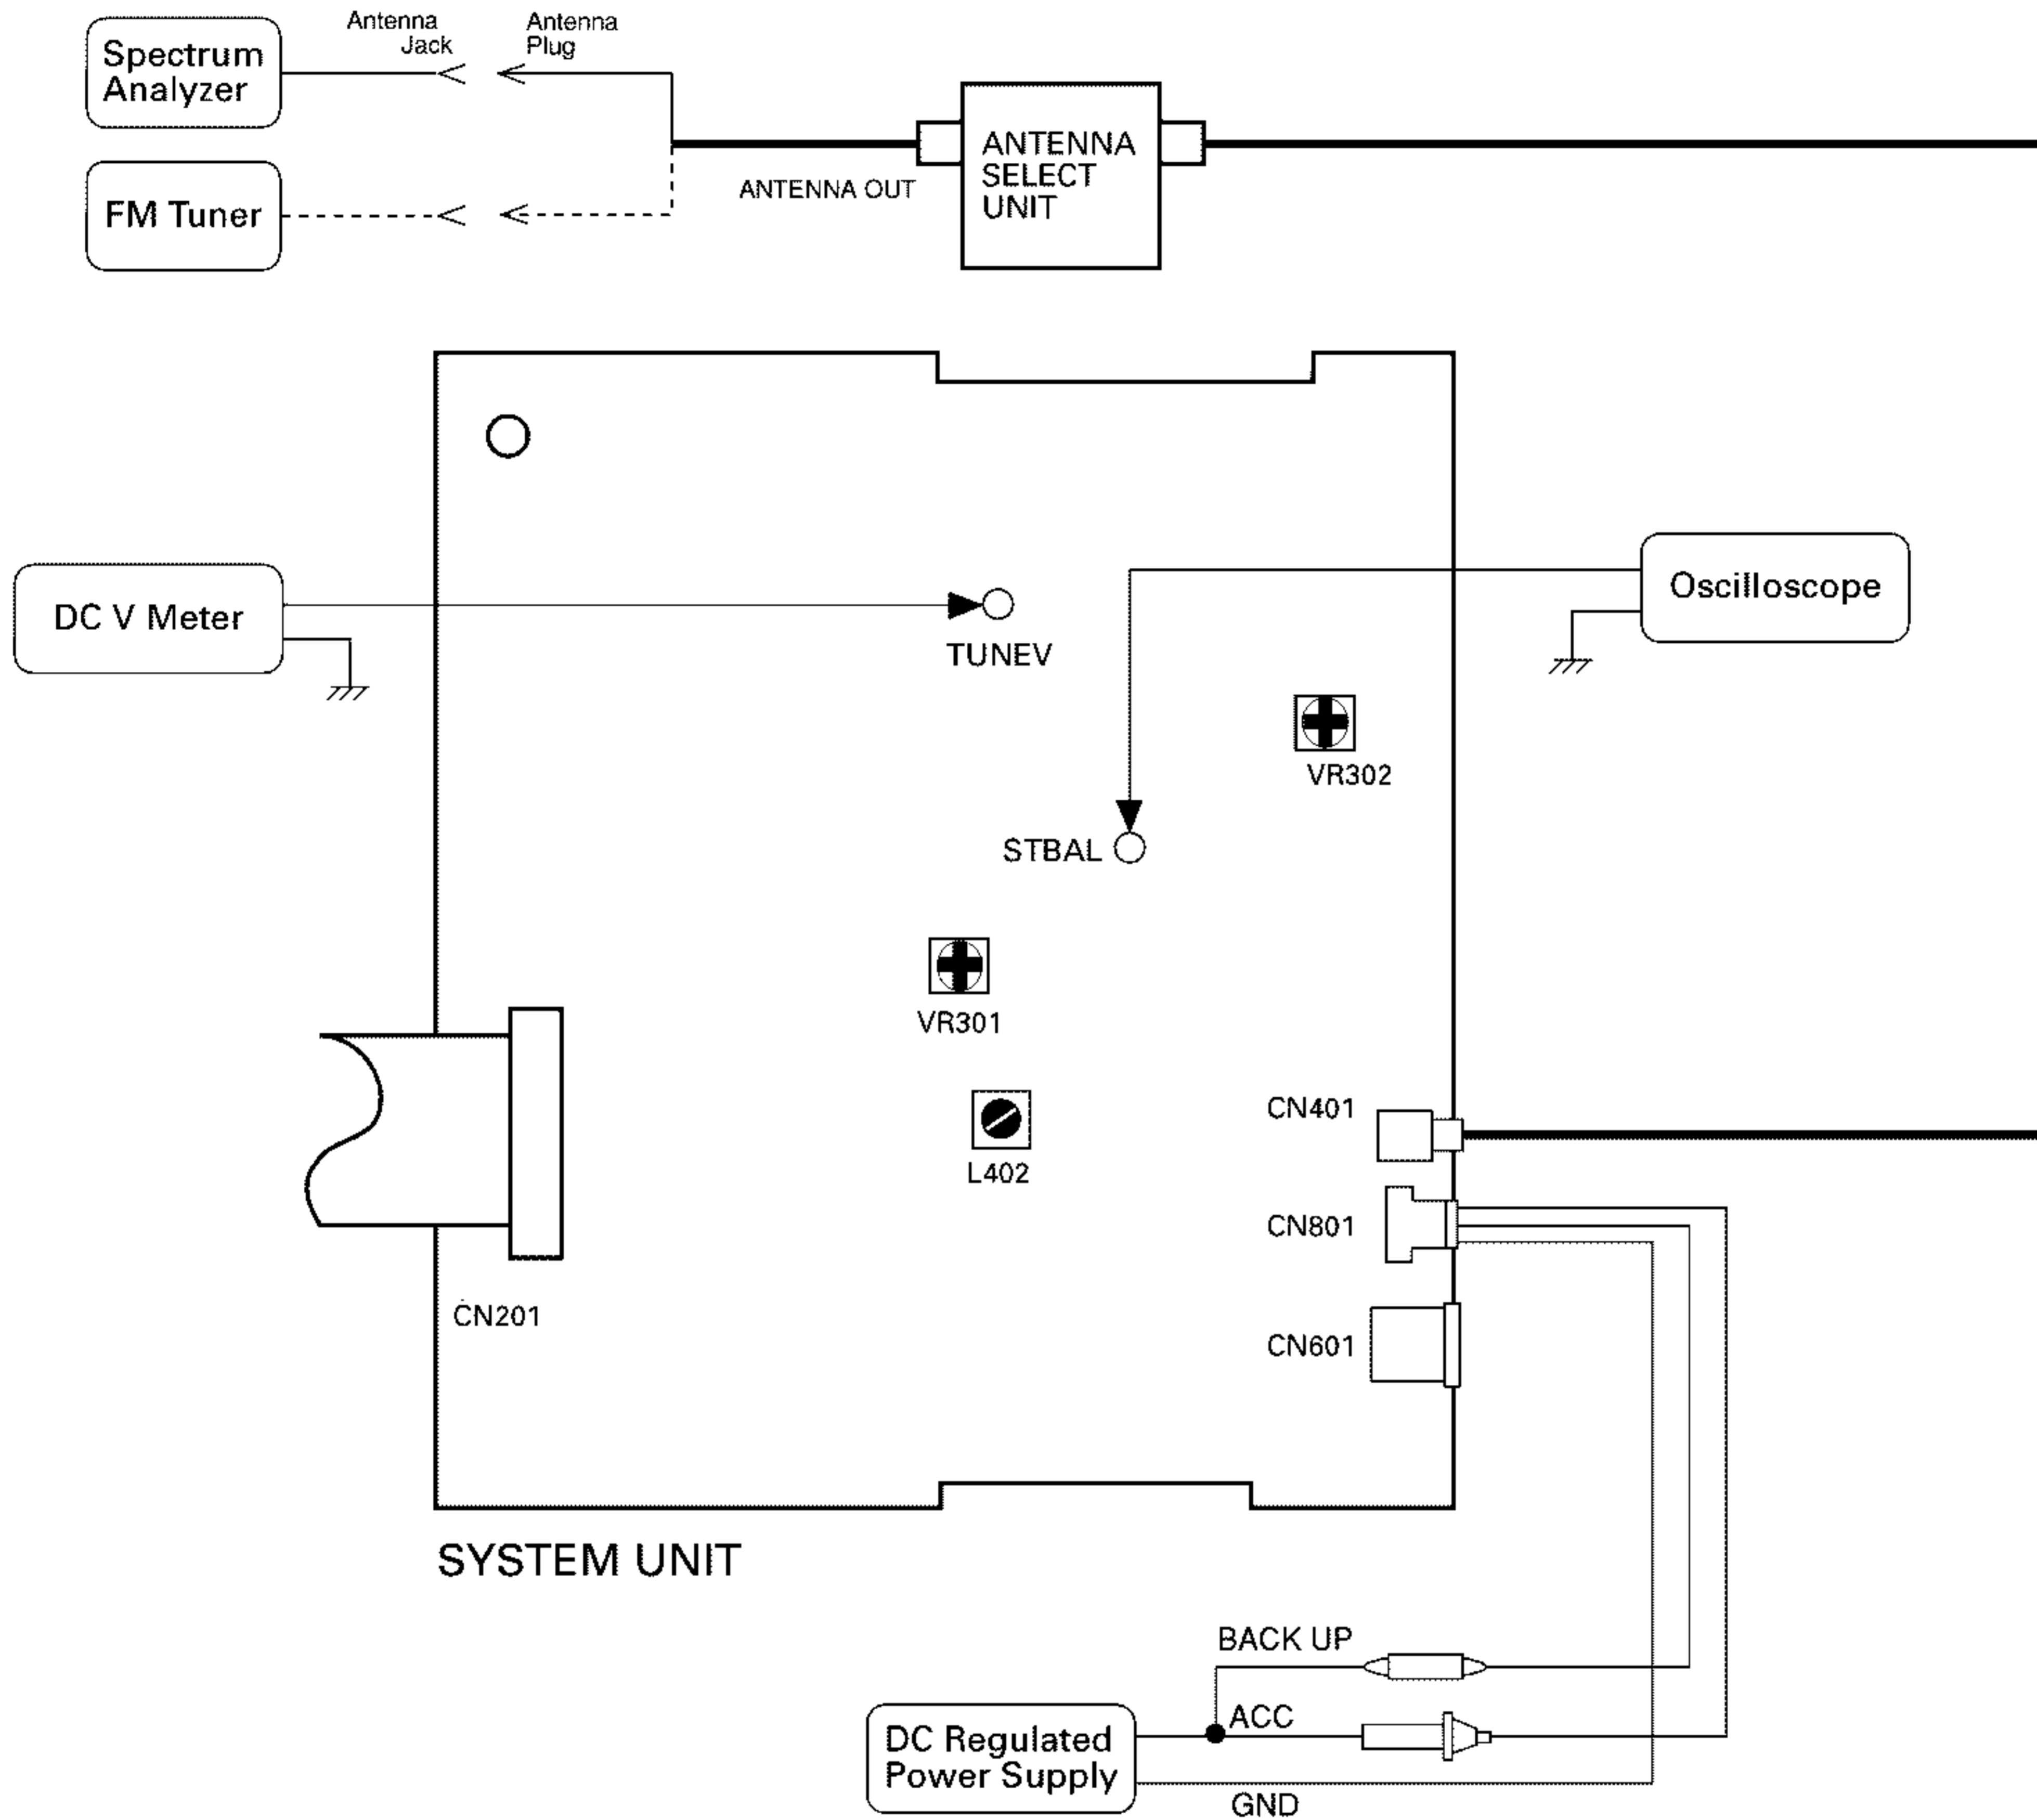


Fig. 22

● Adjustment

	CD Output	Adjusting Point	Adjustment Method (Switch Position)
Tuning Voltage Adjustment	No signal	L402	DC V Meter: 3.0V±0.1V
Balance Adjustment	No signal	VR301	Oscilloscope: 38kHz signal becomes minimum
Modulation Adjustment	400Hz 0dB	VR302	Spectrum Analyzer : 135±5kHz (Modulation Level : 7)
RF Level Adjustment	No signal	—	Spectrum Analyzer: 70dB $\mu$ V±5dB

## 6.2 CHECKING THE GRATING

### ● Checking the Grating After Changing the Pickup Unit

**·Note :**

Unlike previous CD mechanism modules the grating angle of the pickup unit cannot be adjusted after the pickup unit is changed. The pickup unit in the CD mechanism module is adjusted on the production line to match the CD mechanism module and is thus the best adjusted pickup unit for the CD mechanism module. Changing the pickup unit is thus best considered as a last resort. However, if the pickup unit must be changed, the grating should be checked using the procedure below.

**·Purpose :**

To check that the grating is within an acceptable range.


**·Symptoms of Mal-adjustment :**

If the grating is off by a large amount symptoms such as being unable to close tracking, being unable to perform track search operations, or track searching taking a long time, may appear.

**·Method :**

- |                      |                           |
|----------------------|---------------------------|
| ·Measuring Equipment | ·Oscilloscope, Two L.P.F. |
| ·Measuring Points    | ·E, F, REFOUT             |
| ·Disc                | ·ABEX TCD-784             |
| ·Mode                | ·TEST MODE                |

CD CORE UNIT

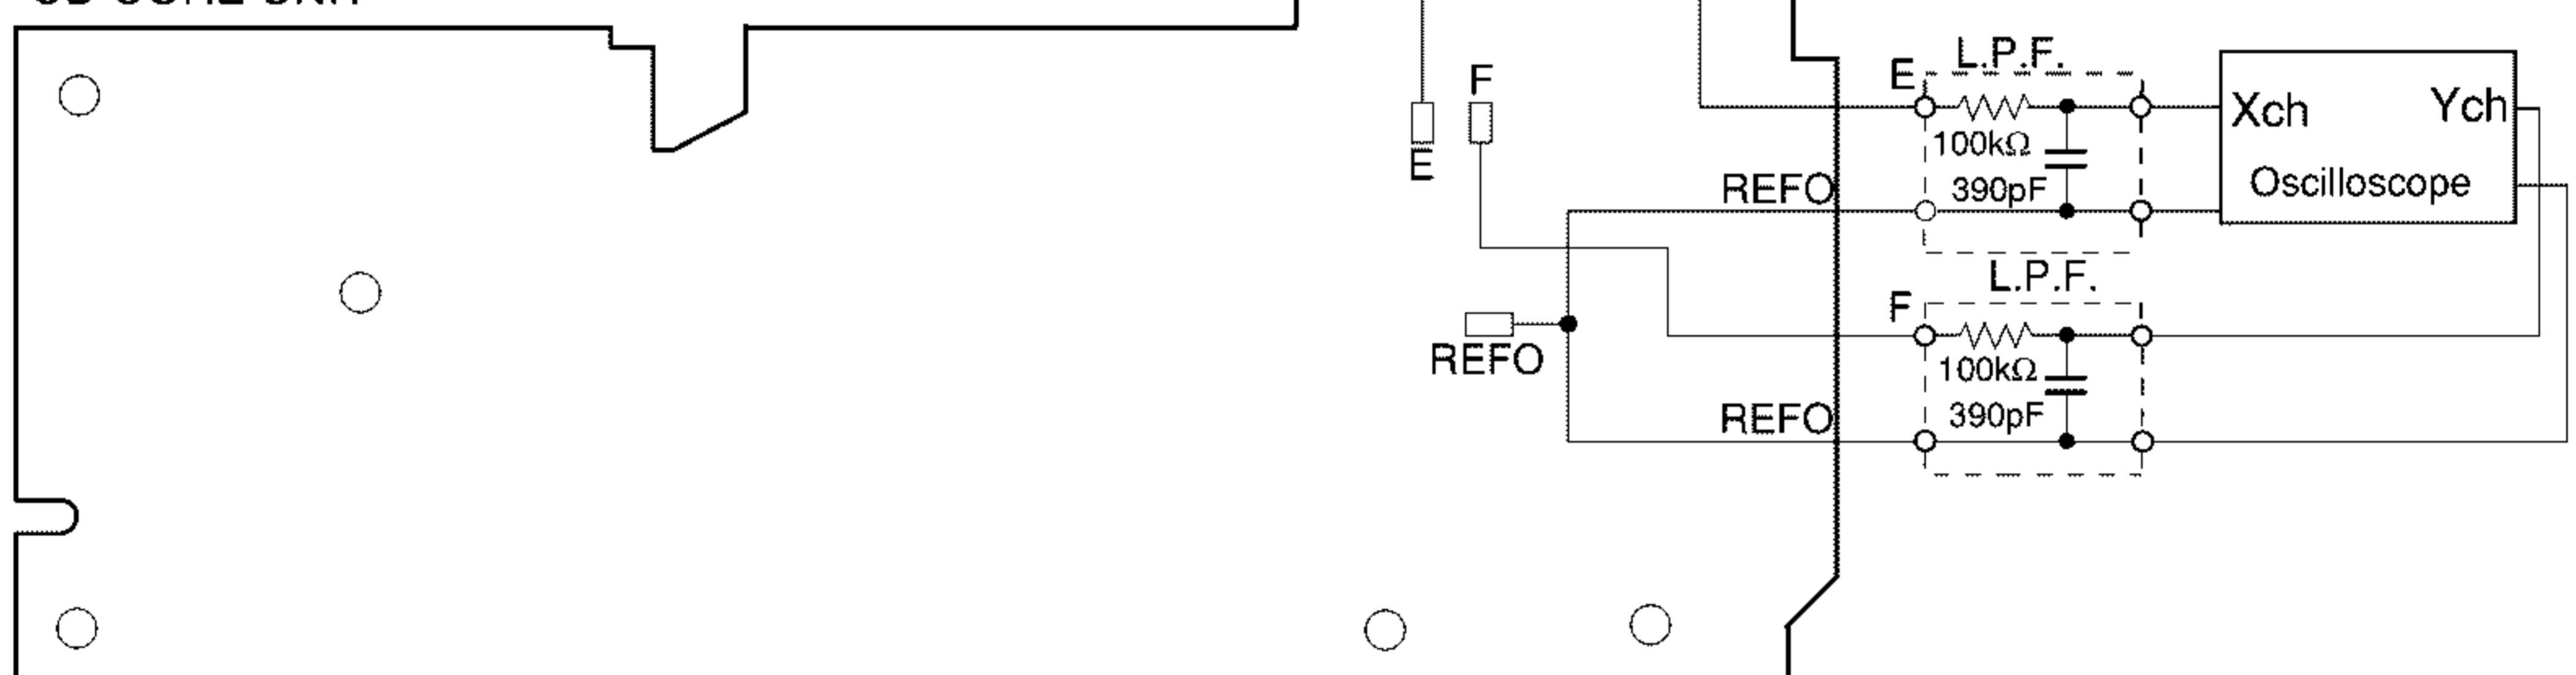

**·Checking Procedure**

1. In test mode, load the disc and switch the 5V regulator on.
2. Using the **TRACK UP** and **TRACK DOWN** buttons, move the pickup unit to the innermost track.
3. Press key **ITS** to close focus, the display should read "91". Press key **PAUSE** to implement the tracking balance adjustment the display should now read "81". Press key **ITS** 4 times. The display will change, returning to "81" on the fourth press.
4. As shown in the diagram above, monitor the LPF outputs using the oscilloscope and check that the phase difference is within  $75^\circ$ . Refer to the photographs supplied to determine the phase angle.
5. If the phase difference is determined to be greater than  $75^\circ$  try changing the pickup unit to see if there is any improvement. If, after trying this a number of times, the grating angle does not become less than  $75^\circ$  then the mechanism should be judged to be at fault.

**·Note**

Because of eccentricity in the disc and a slight misalignment of the clamping center the grating waveform may be seen to "wobble" ( the phase difference changes as the disc rotates). The angle specified above indicates the average angle.

**·Hint**


Reloading the disc changes the clamp position and may decrease the "wobble".

# CDX-FM637S


## Grating waveform

Ech → Xch 20mV/div, AC  
Fch → Ych 20mV/div, AC


0°

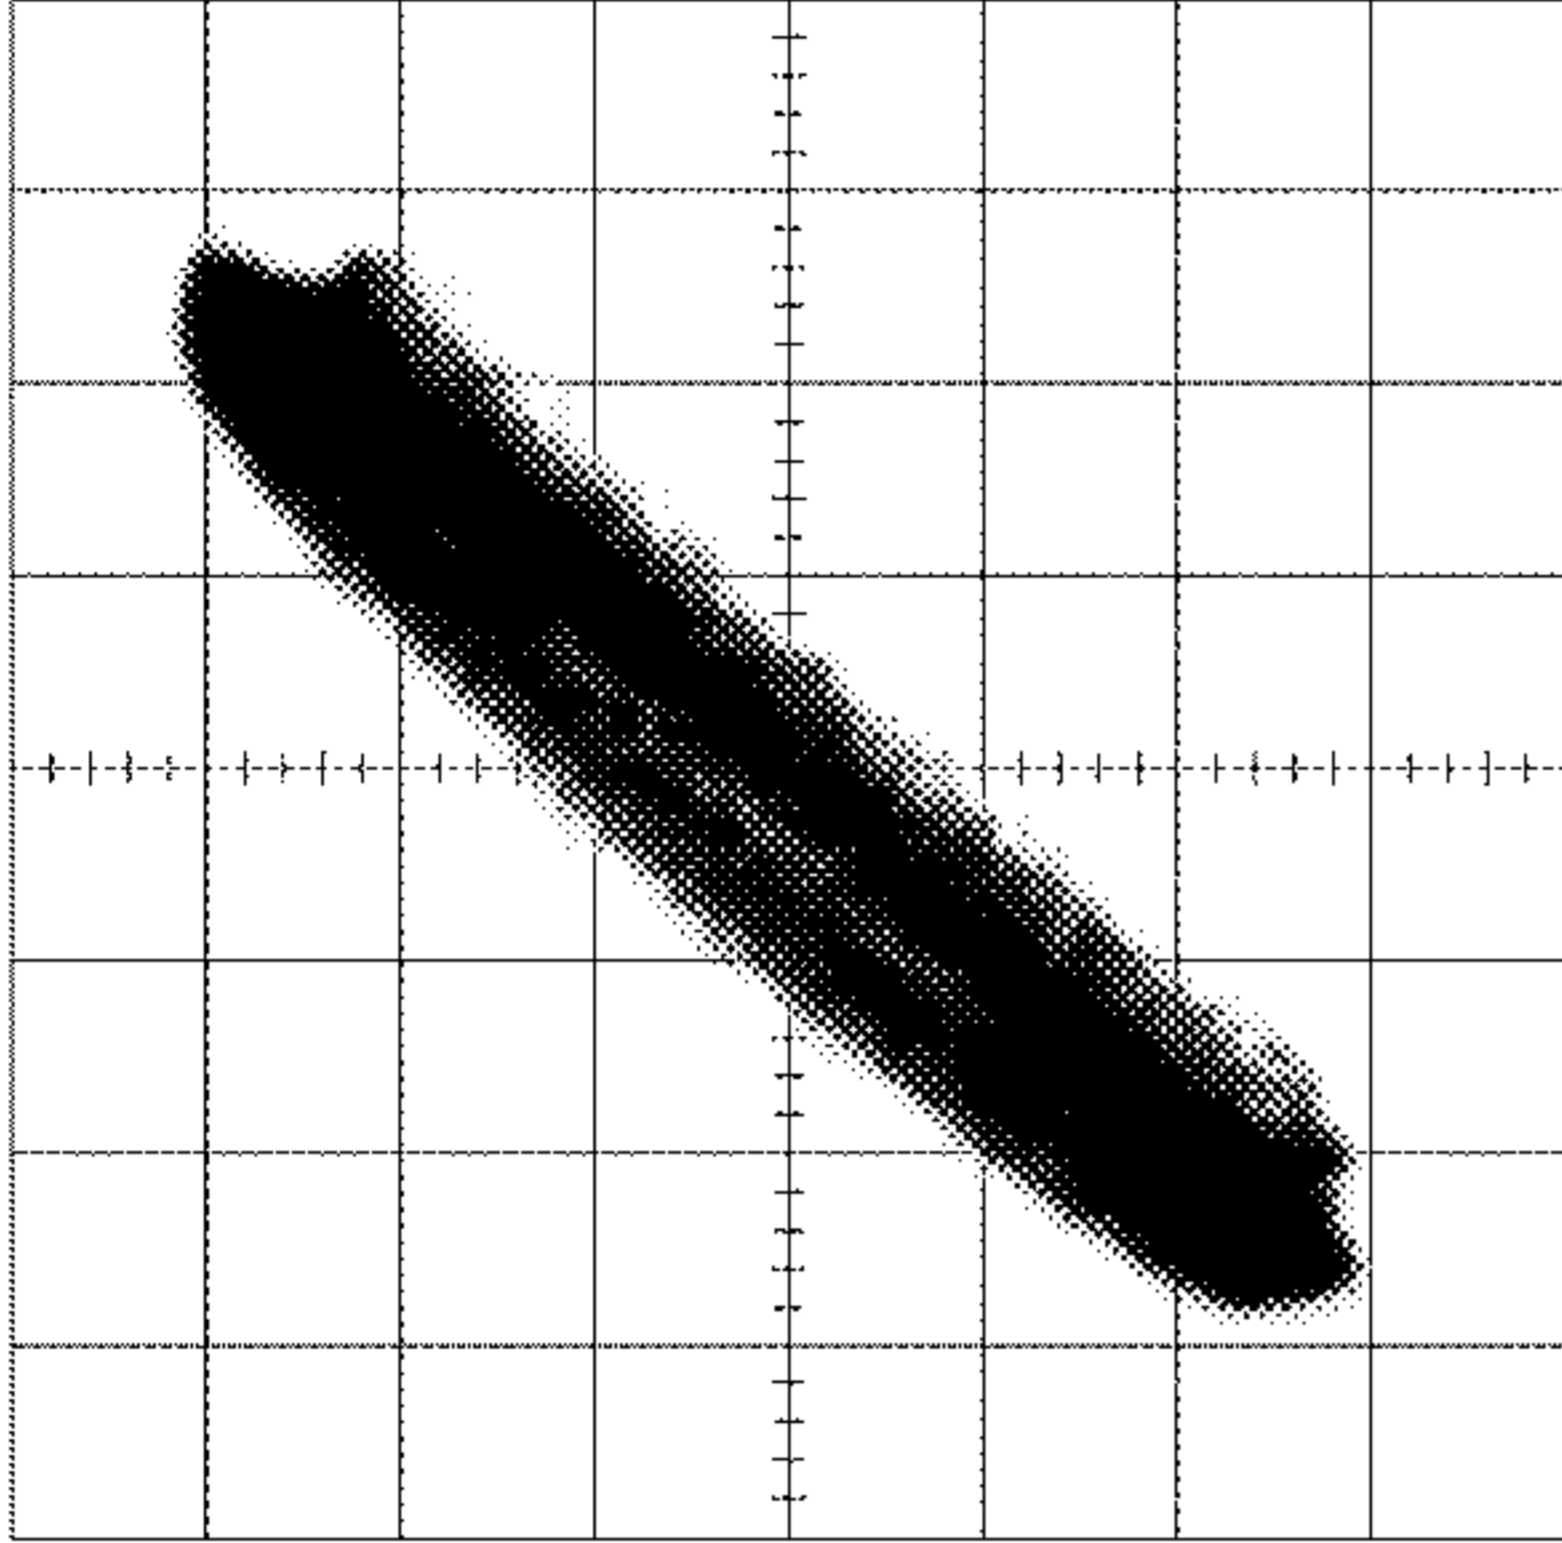


30°

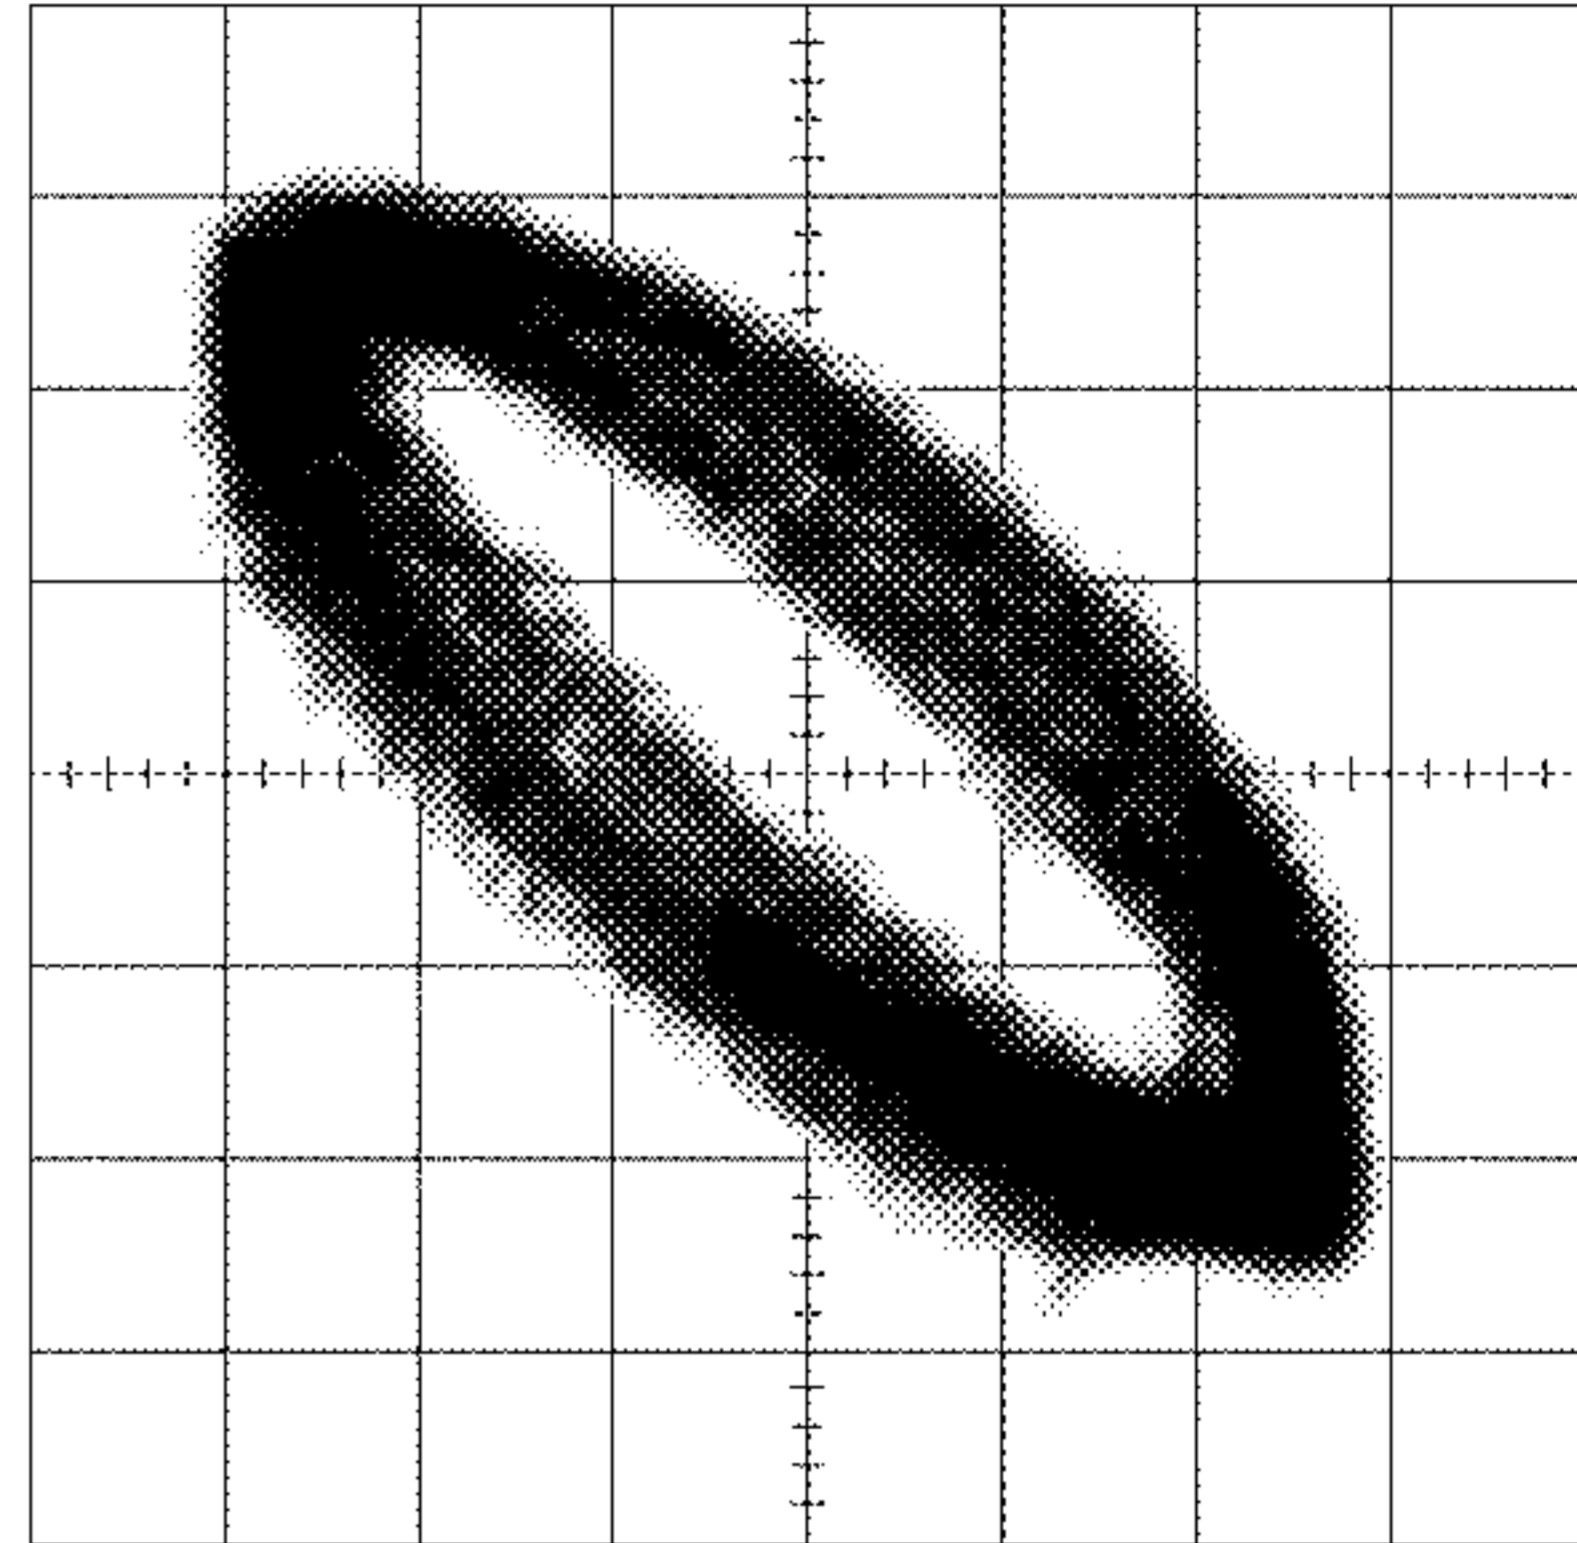


45°

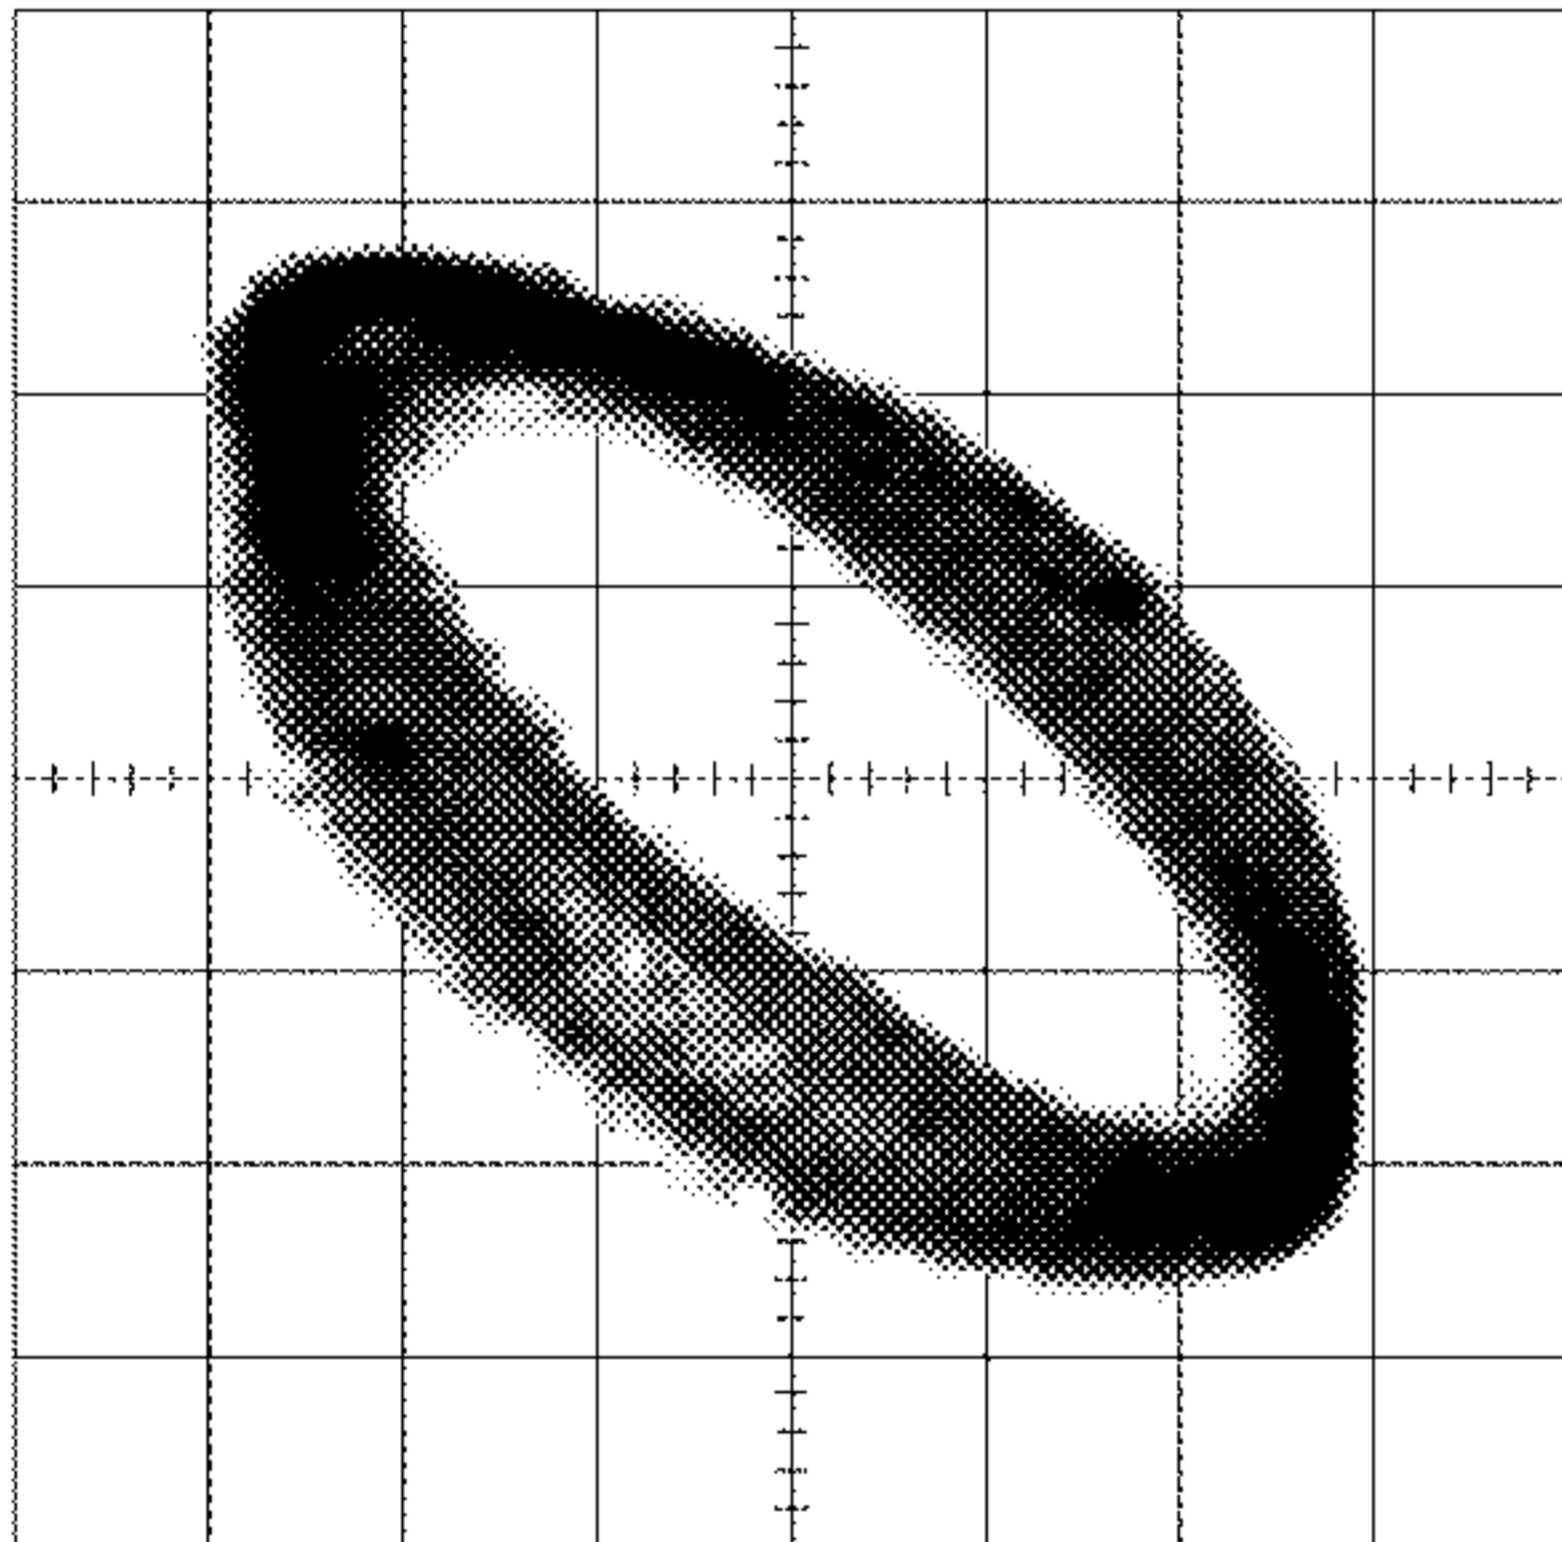


60°

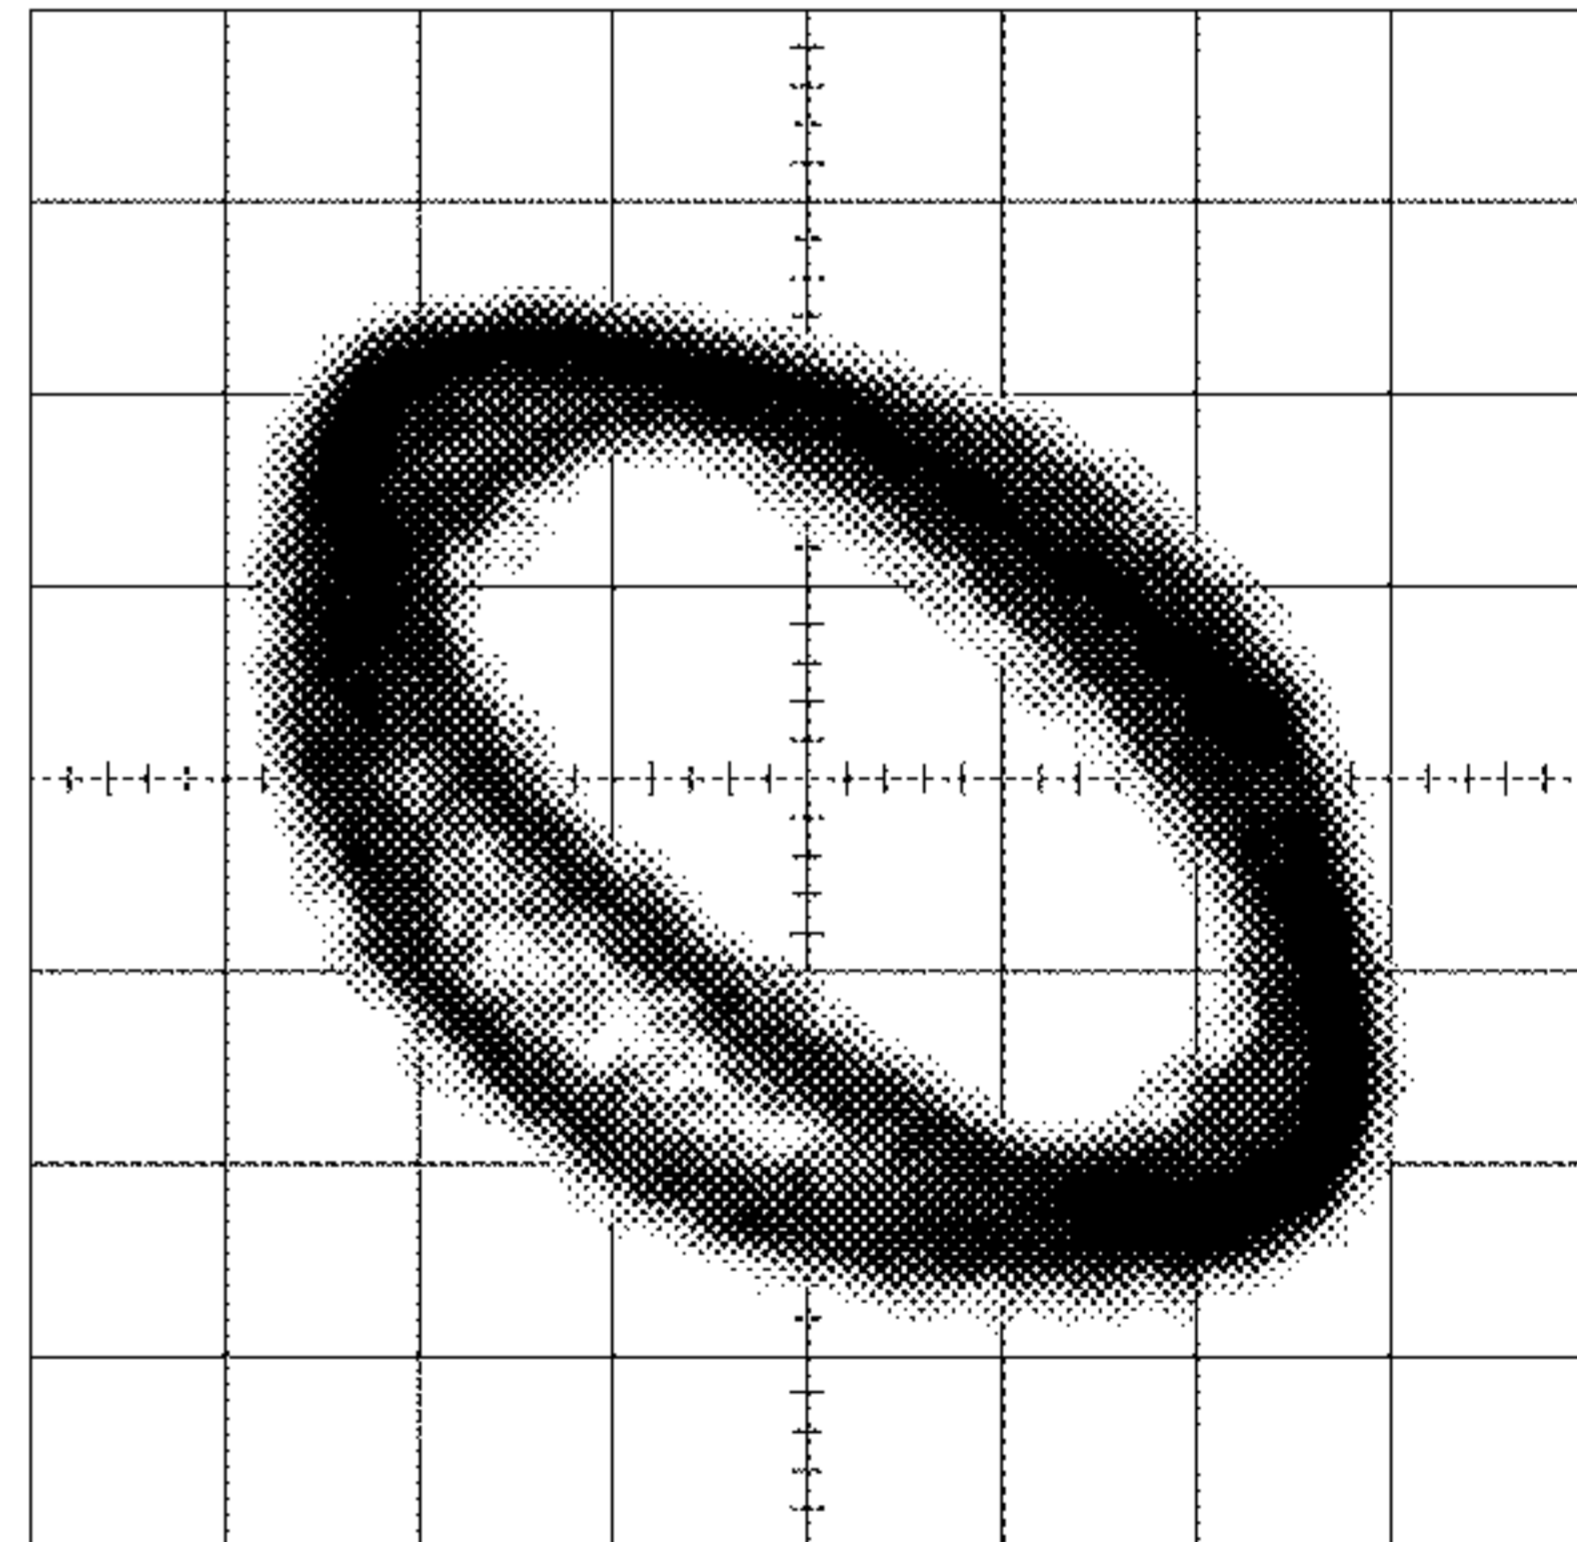

75°

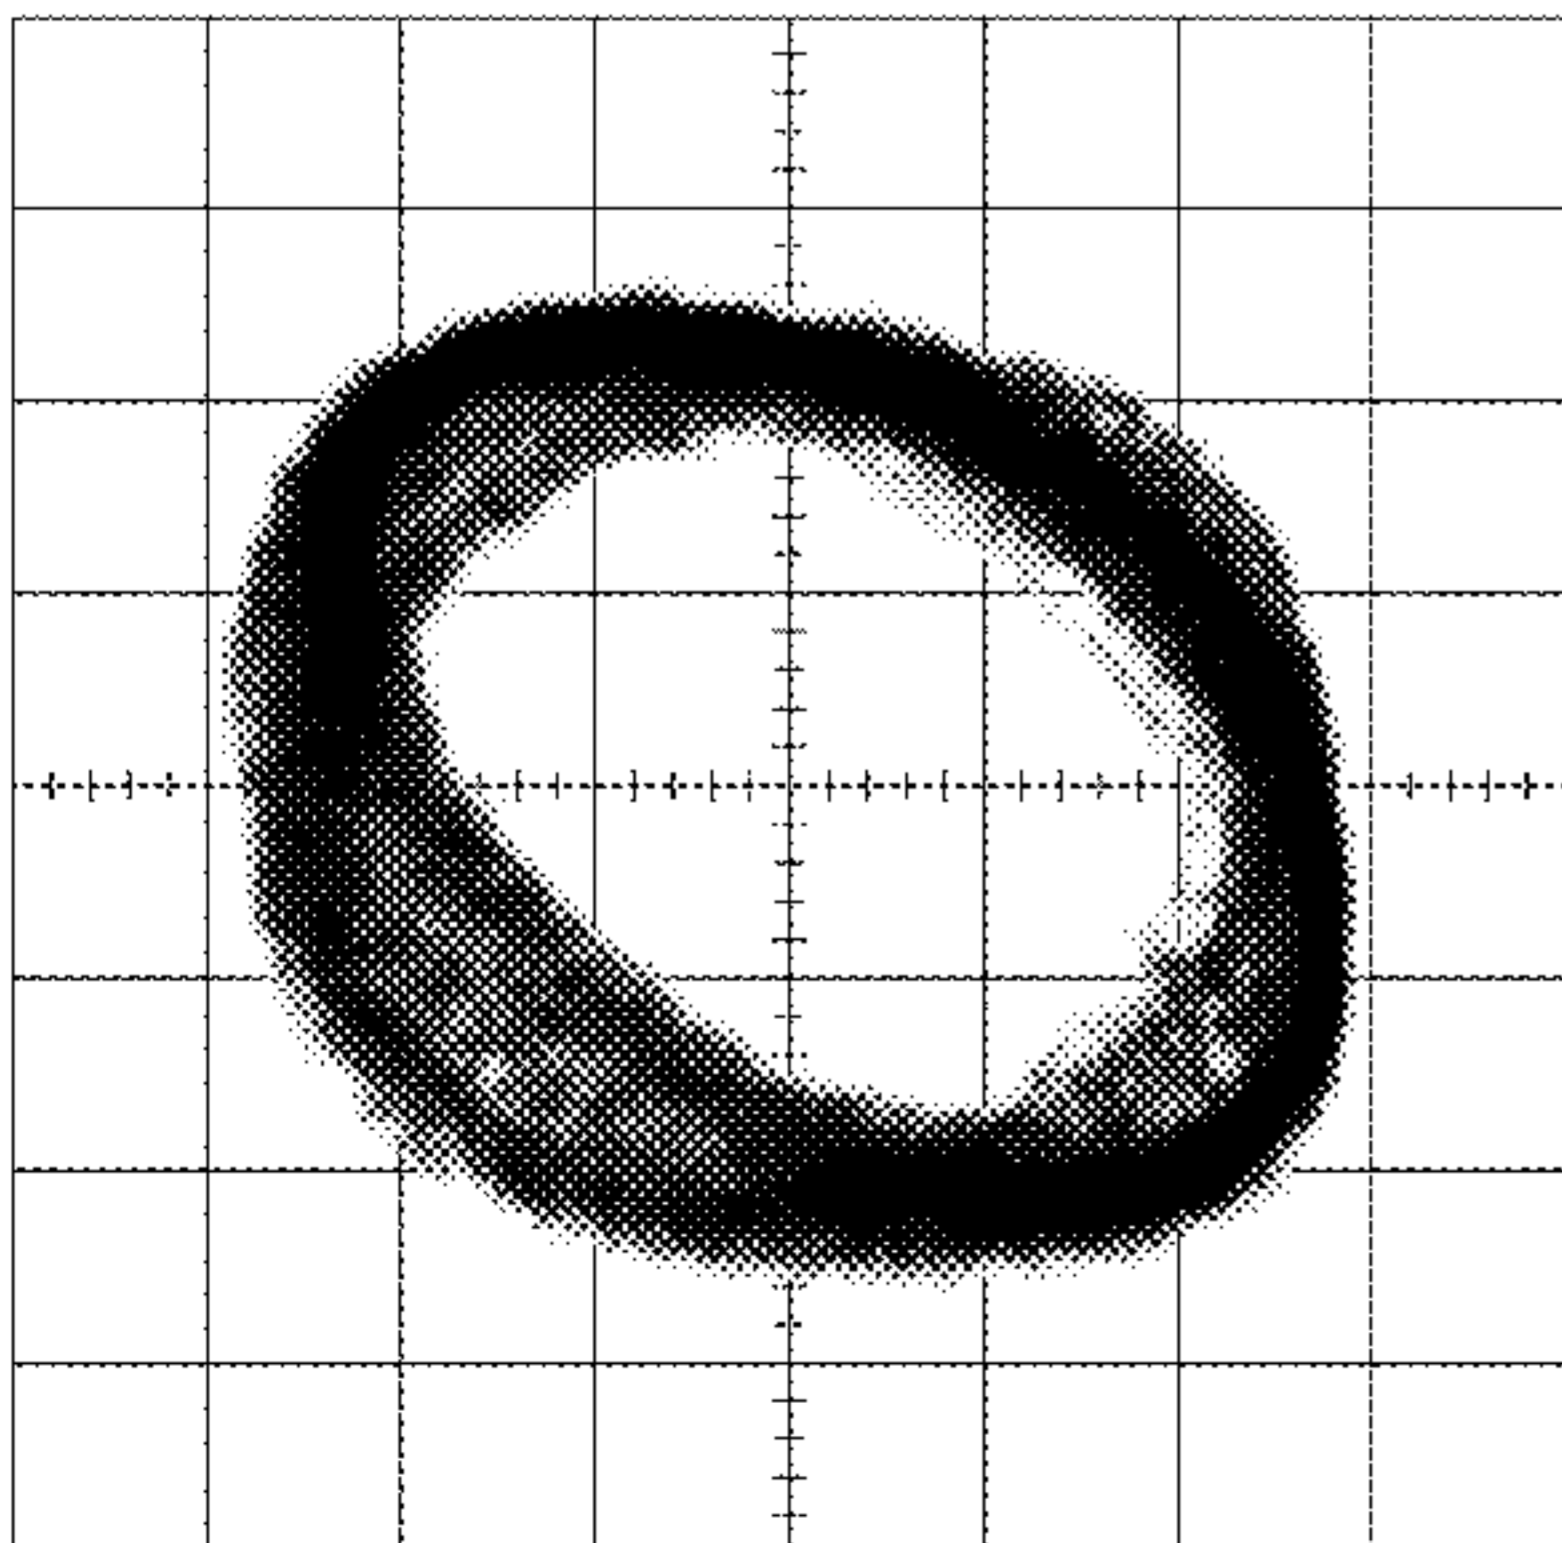

90°

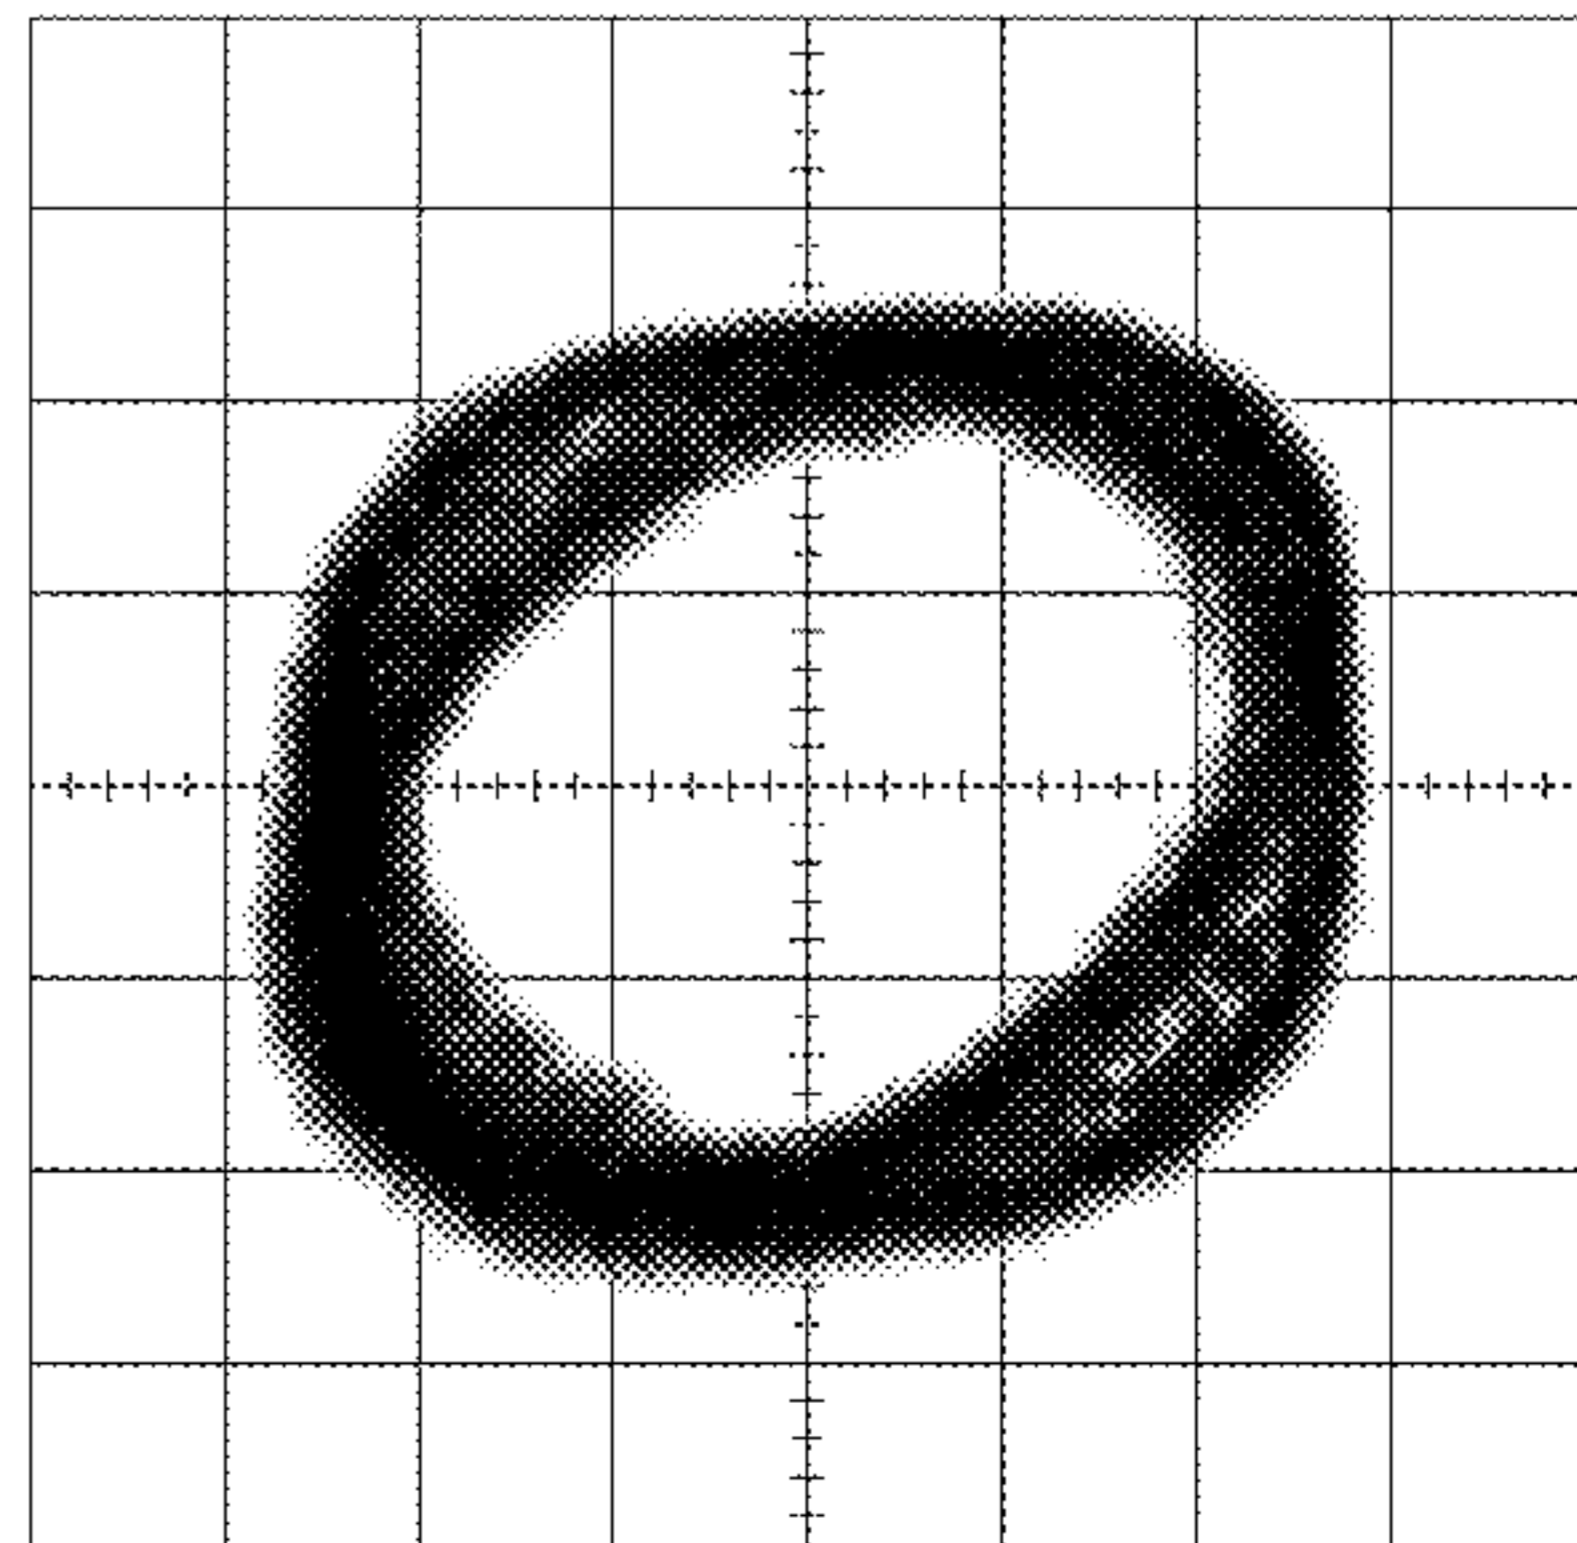


### 6.3 ADJUSTMENT OF ELEVATION WHEN THE CD CORE UNIT HAS BEEN REMOVED FOR MAINTENANCE

● Adjustment when Error Code 60 is Displayed because of Malfunctioning Elevation

**·Note :**  
 Unlike the conventional mechanisms, the new mechanism detects the height of the stage using slide-variable resistance.  
 To absorb dislocation of the stage height caused by differences in the mechanism and the CD core unit, adjustment must be made for each CD-mechanism module using a variable resistor.  
 Normally, readjustment is not needed, as this has been adjusted at the factory. However, adjustment of elevation is required according to the procedure explained below if an elevation error has occurred or if the CD core unit has been removed.

**·Purpose :**  
 To adjust and confirm whether or not elevation operates correctly.


**·Adjustment method :**  
 ·Measuring equipment: Millivoltmeter  
 ·Measuring points : EREF, EPVO  
 ·Setting : Without a magazine in Test mode  
 With the mechanism placed upside-down (Place the CD mechanism module so that the CD core unit is above.)

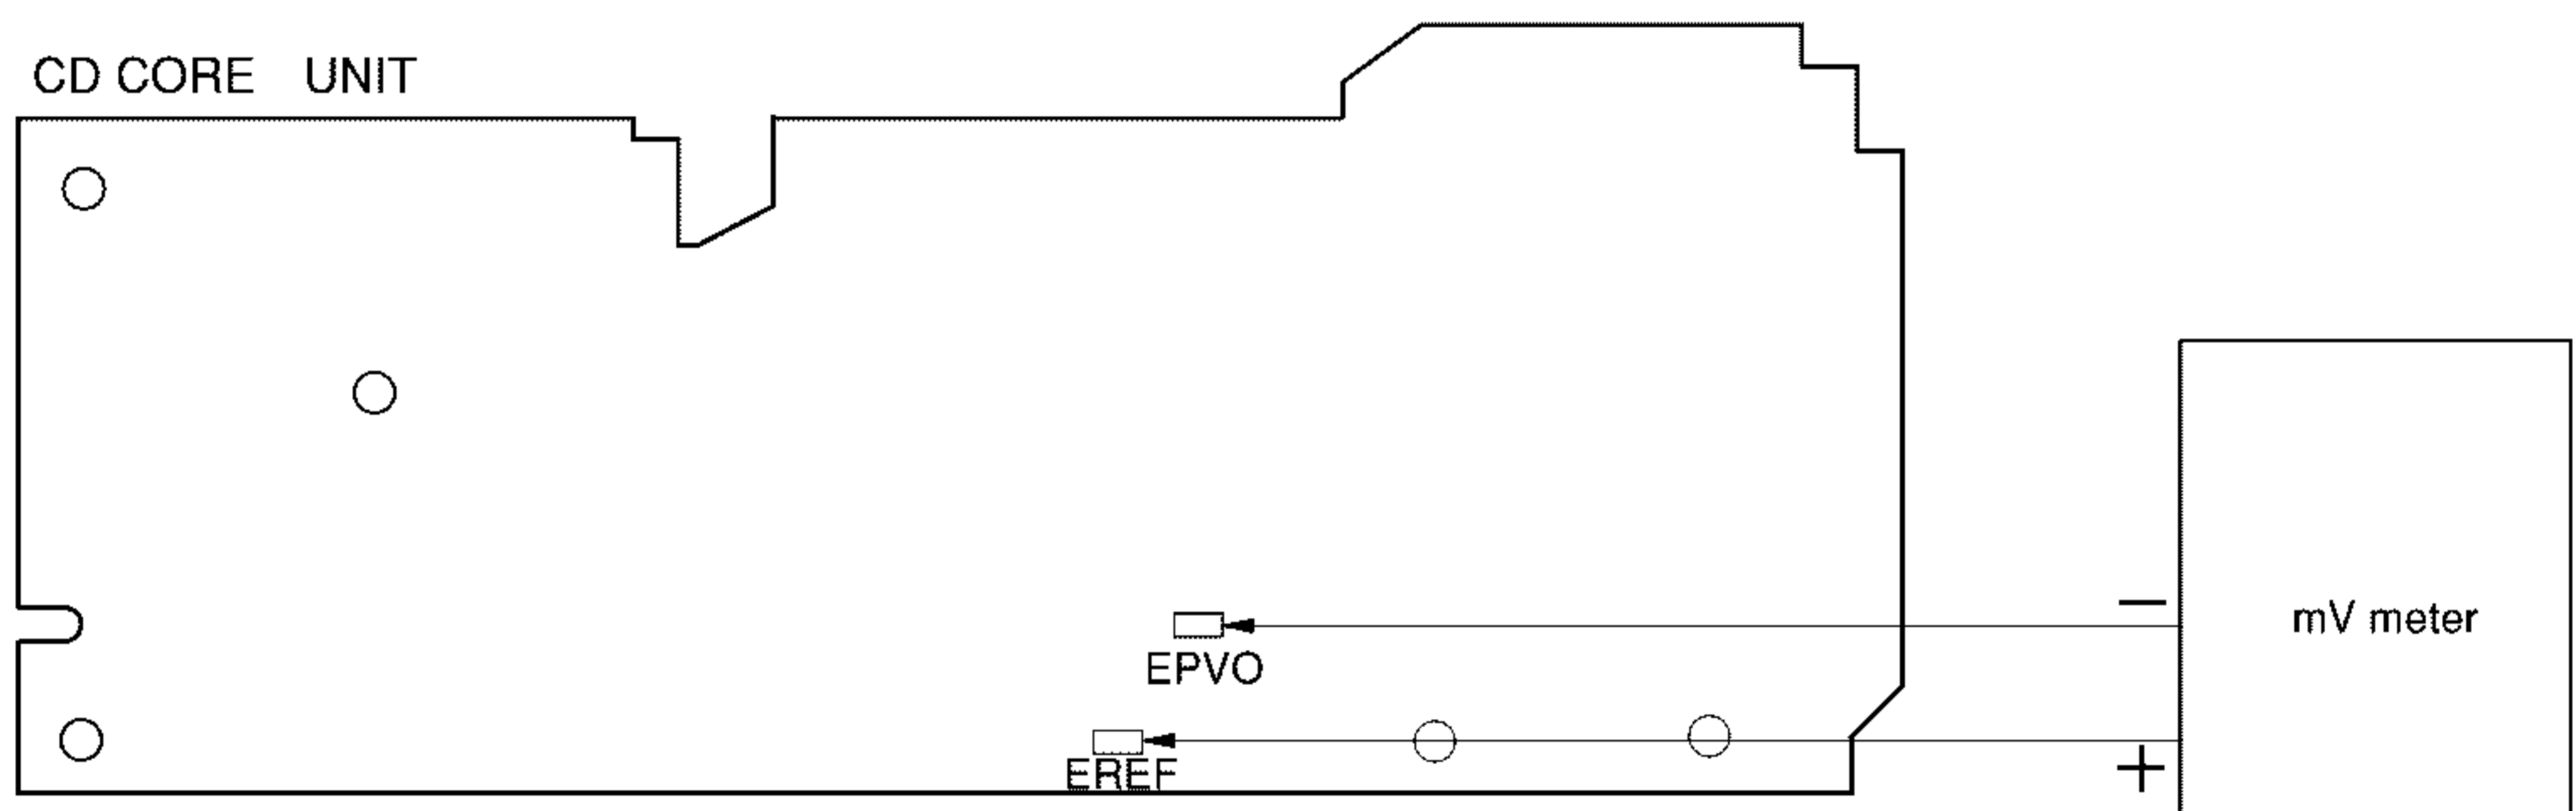





**·Confirmation procedure**

1. Enter Test mode, then select Multi-CD player.
2. Press key **MODE** to enter Mechanism Test mode.
3. Press key **MANUAL** twice to specify the amount of movement.

Examples of display

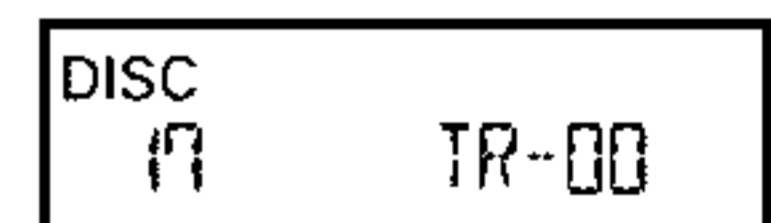

The amount of movement changes each time key **MANUAL** is pressed.

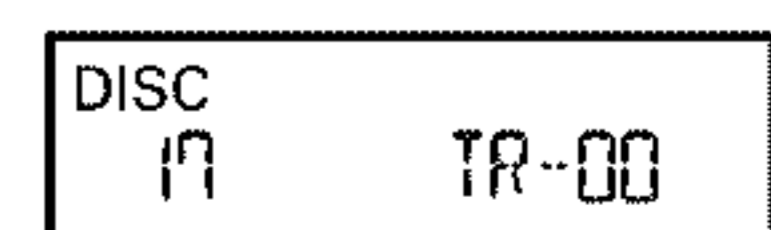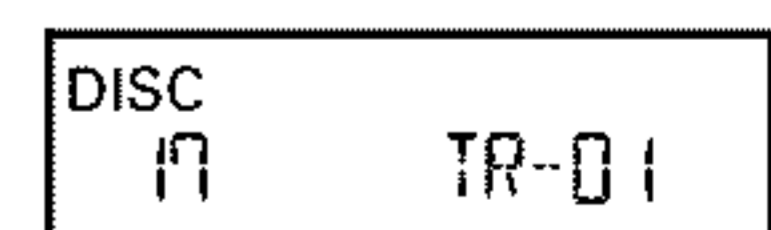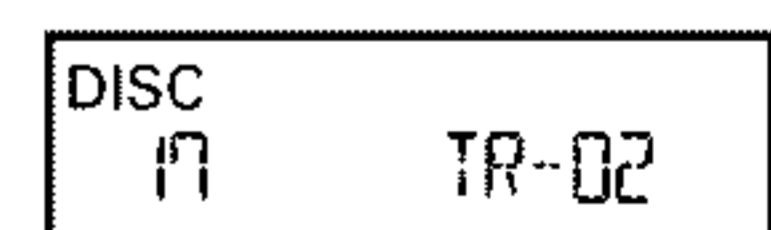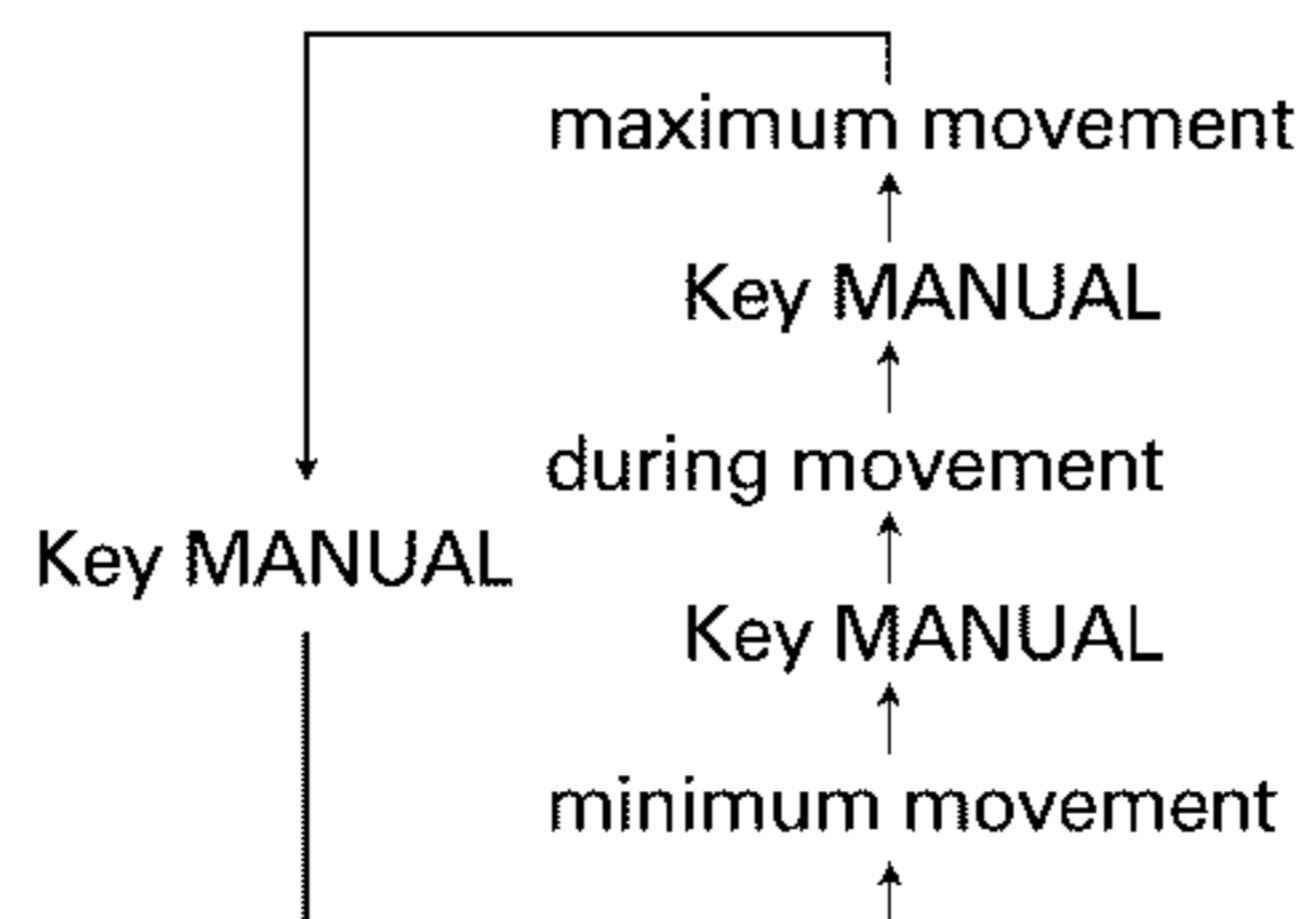

4. Press key **ITS** to set ELV/TRAY mode to TRAY.
5. Press key **TRACK UP** to release the clamp and return the tray to the magazine.
6. Press key **ITS** to enter Elevation Move mode.
7. Use key **TRACK UP/TRACK DOWN** to operate elevation and set it to the graduation of the fourth step (Fig. 23).
8. Make the adjustment.  
Use VR802 to adjust the difference in potential between EREF and EPVO to  $0 \pm 20$  mV.
9. When adjustment is completed, press key **LIST** to exit Mechanism Test mode.
10. Confirm operation of the mechanism.  
Place the mechanism horizontally (CD core unit below). Take care not to short-circuit the P.C.B.
11. Confirm the height of the stage. Use the DISC UP/DOWN key to select disc No.4.  
  
Check if the stopper bend of the clamp lever is engaged in the groove of the frame stopper (Fig. 24-26).

Examples of display

DISC	TR-
17	12

Release the clamp

DISC	TR-
17	02

DISC	TR-
04	

DISC	TR-
04	

**Note :**

The stopper bend will be pressed downward into the groove for final clamping. Confirm the engagement position of the stopper bend.

- If the stopper bend is engaged in the center and pressed downward, adjustment is completed. Go to step 15.
- If the stopper bend is dislocated, check the amount of dislocation by following steps 12 to 14.


12. To see the amount of dislocation, place the mechanism upside-down.  
If the stopper bend has been dislocated in the direction of the first CD, turn VR802 to the left(Fig. 24).




To lower the stage toward the sixth step by 0.1 mm, reduce the voltage of EREF (adjusted in step 8) by 20 mV.

If the stopper bend has been dislocated in the direction of the sixth CD, turn VR802 to the right(Fig. 26).

To raise the stage toward the first step by 0.1 mm, increase the voltage of EREF (adjusted in step 8) by 20 mV.

13. Place the mechanism horizontal. Go back to step 11 to reconfirm the stage height.
14. When adjustment of the stage height is completed, proceed as follows:
15. Press the **EJECT** switch.
16. Once operation of the mechanism has stopped, turn the power OFF.
17. Wait more than one minute after the power is turned off, then turn the power ON and insert a magazine.
18. Check if the mechanism operates correctly with the first and fourth CDs.
19. If the mechanism operates properly, adjustment is completed. If the mechanism operates improperly, make the adjustment again.

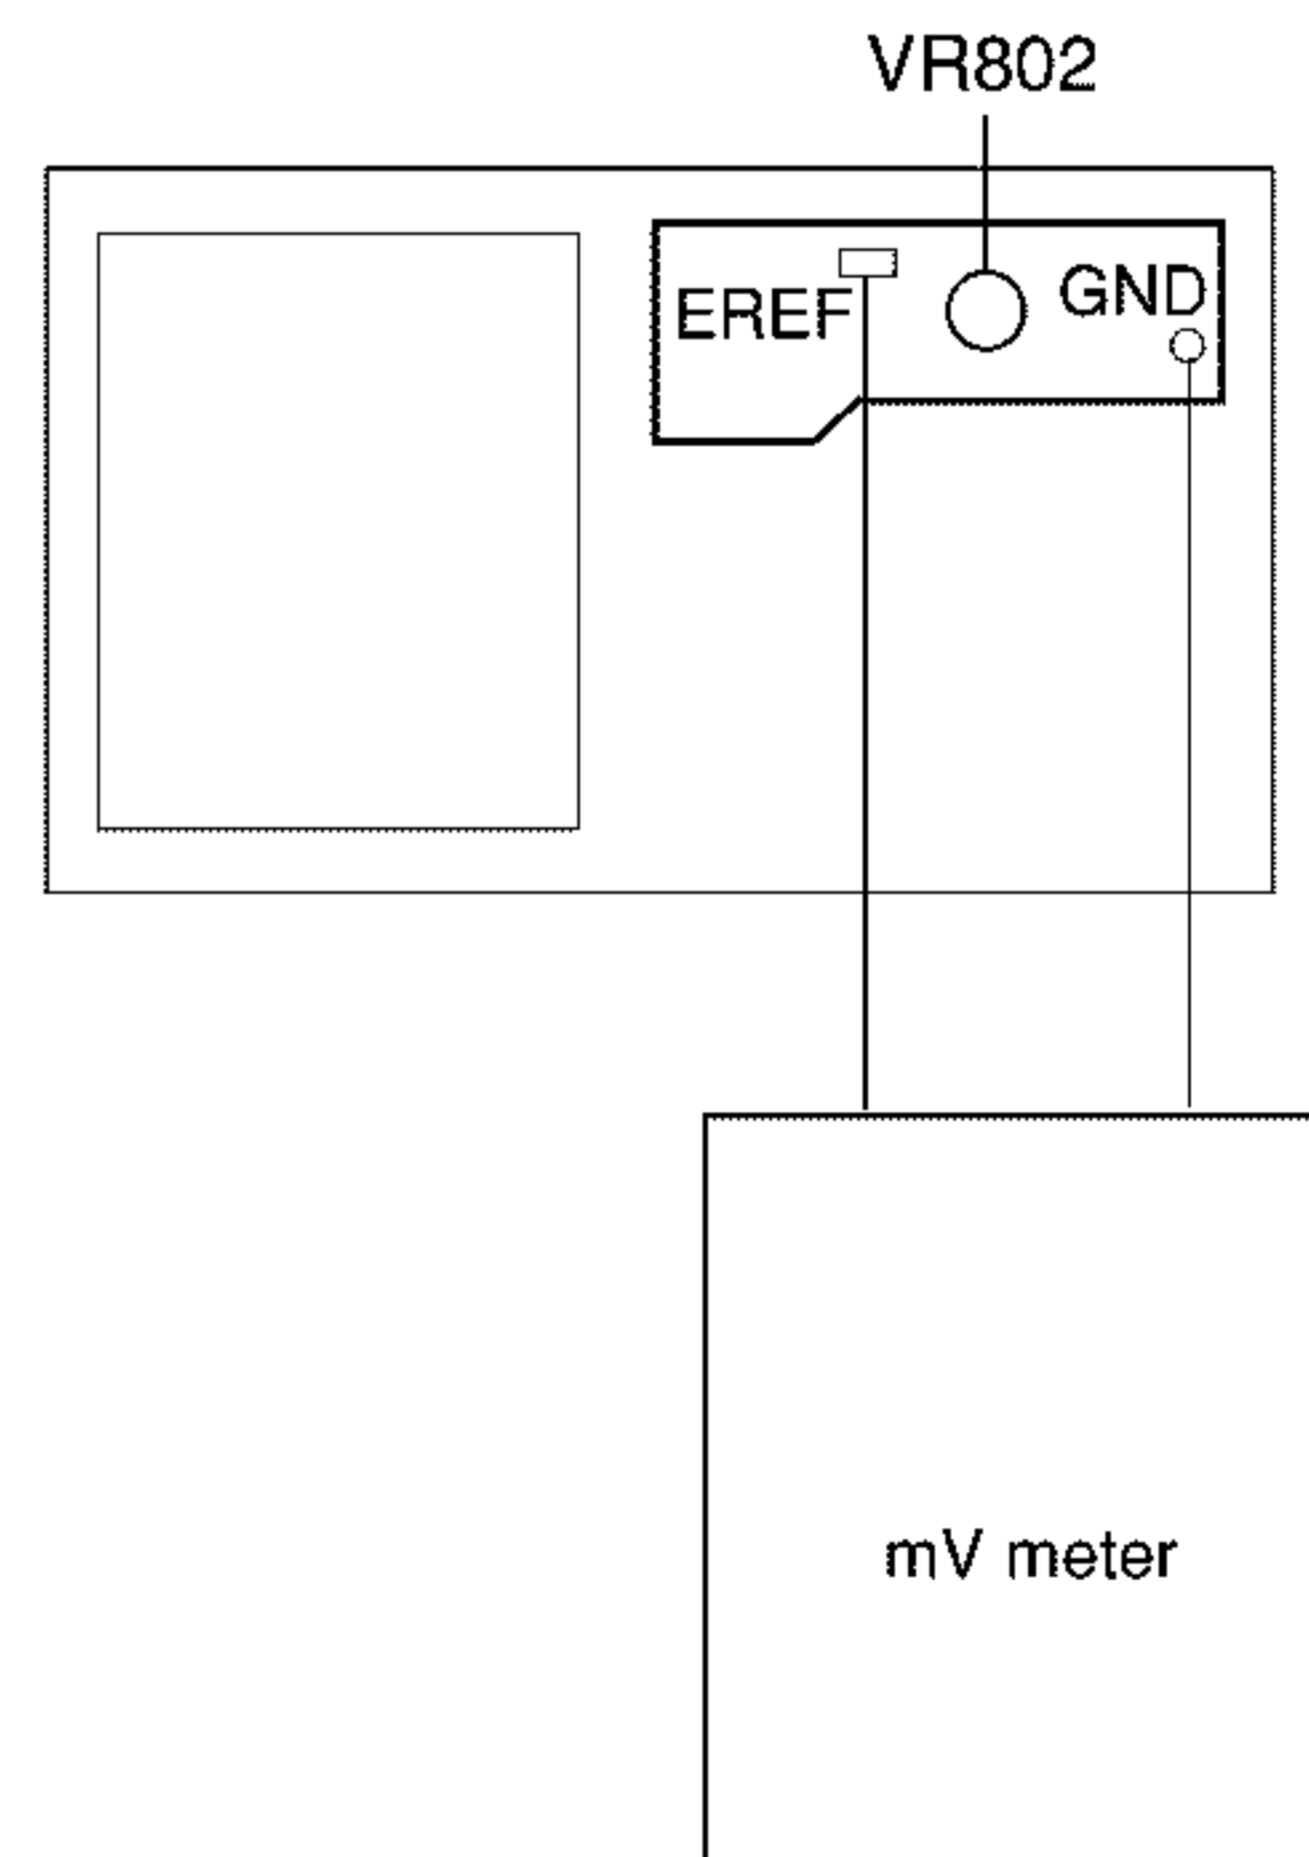

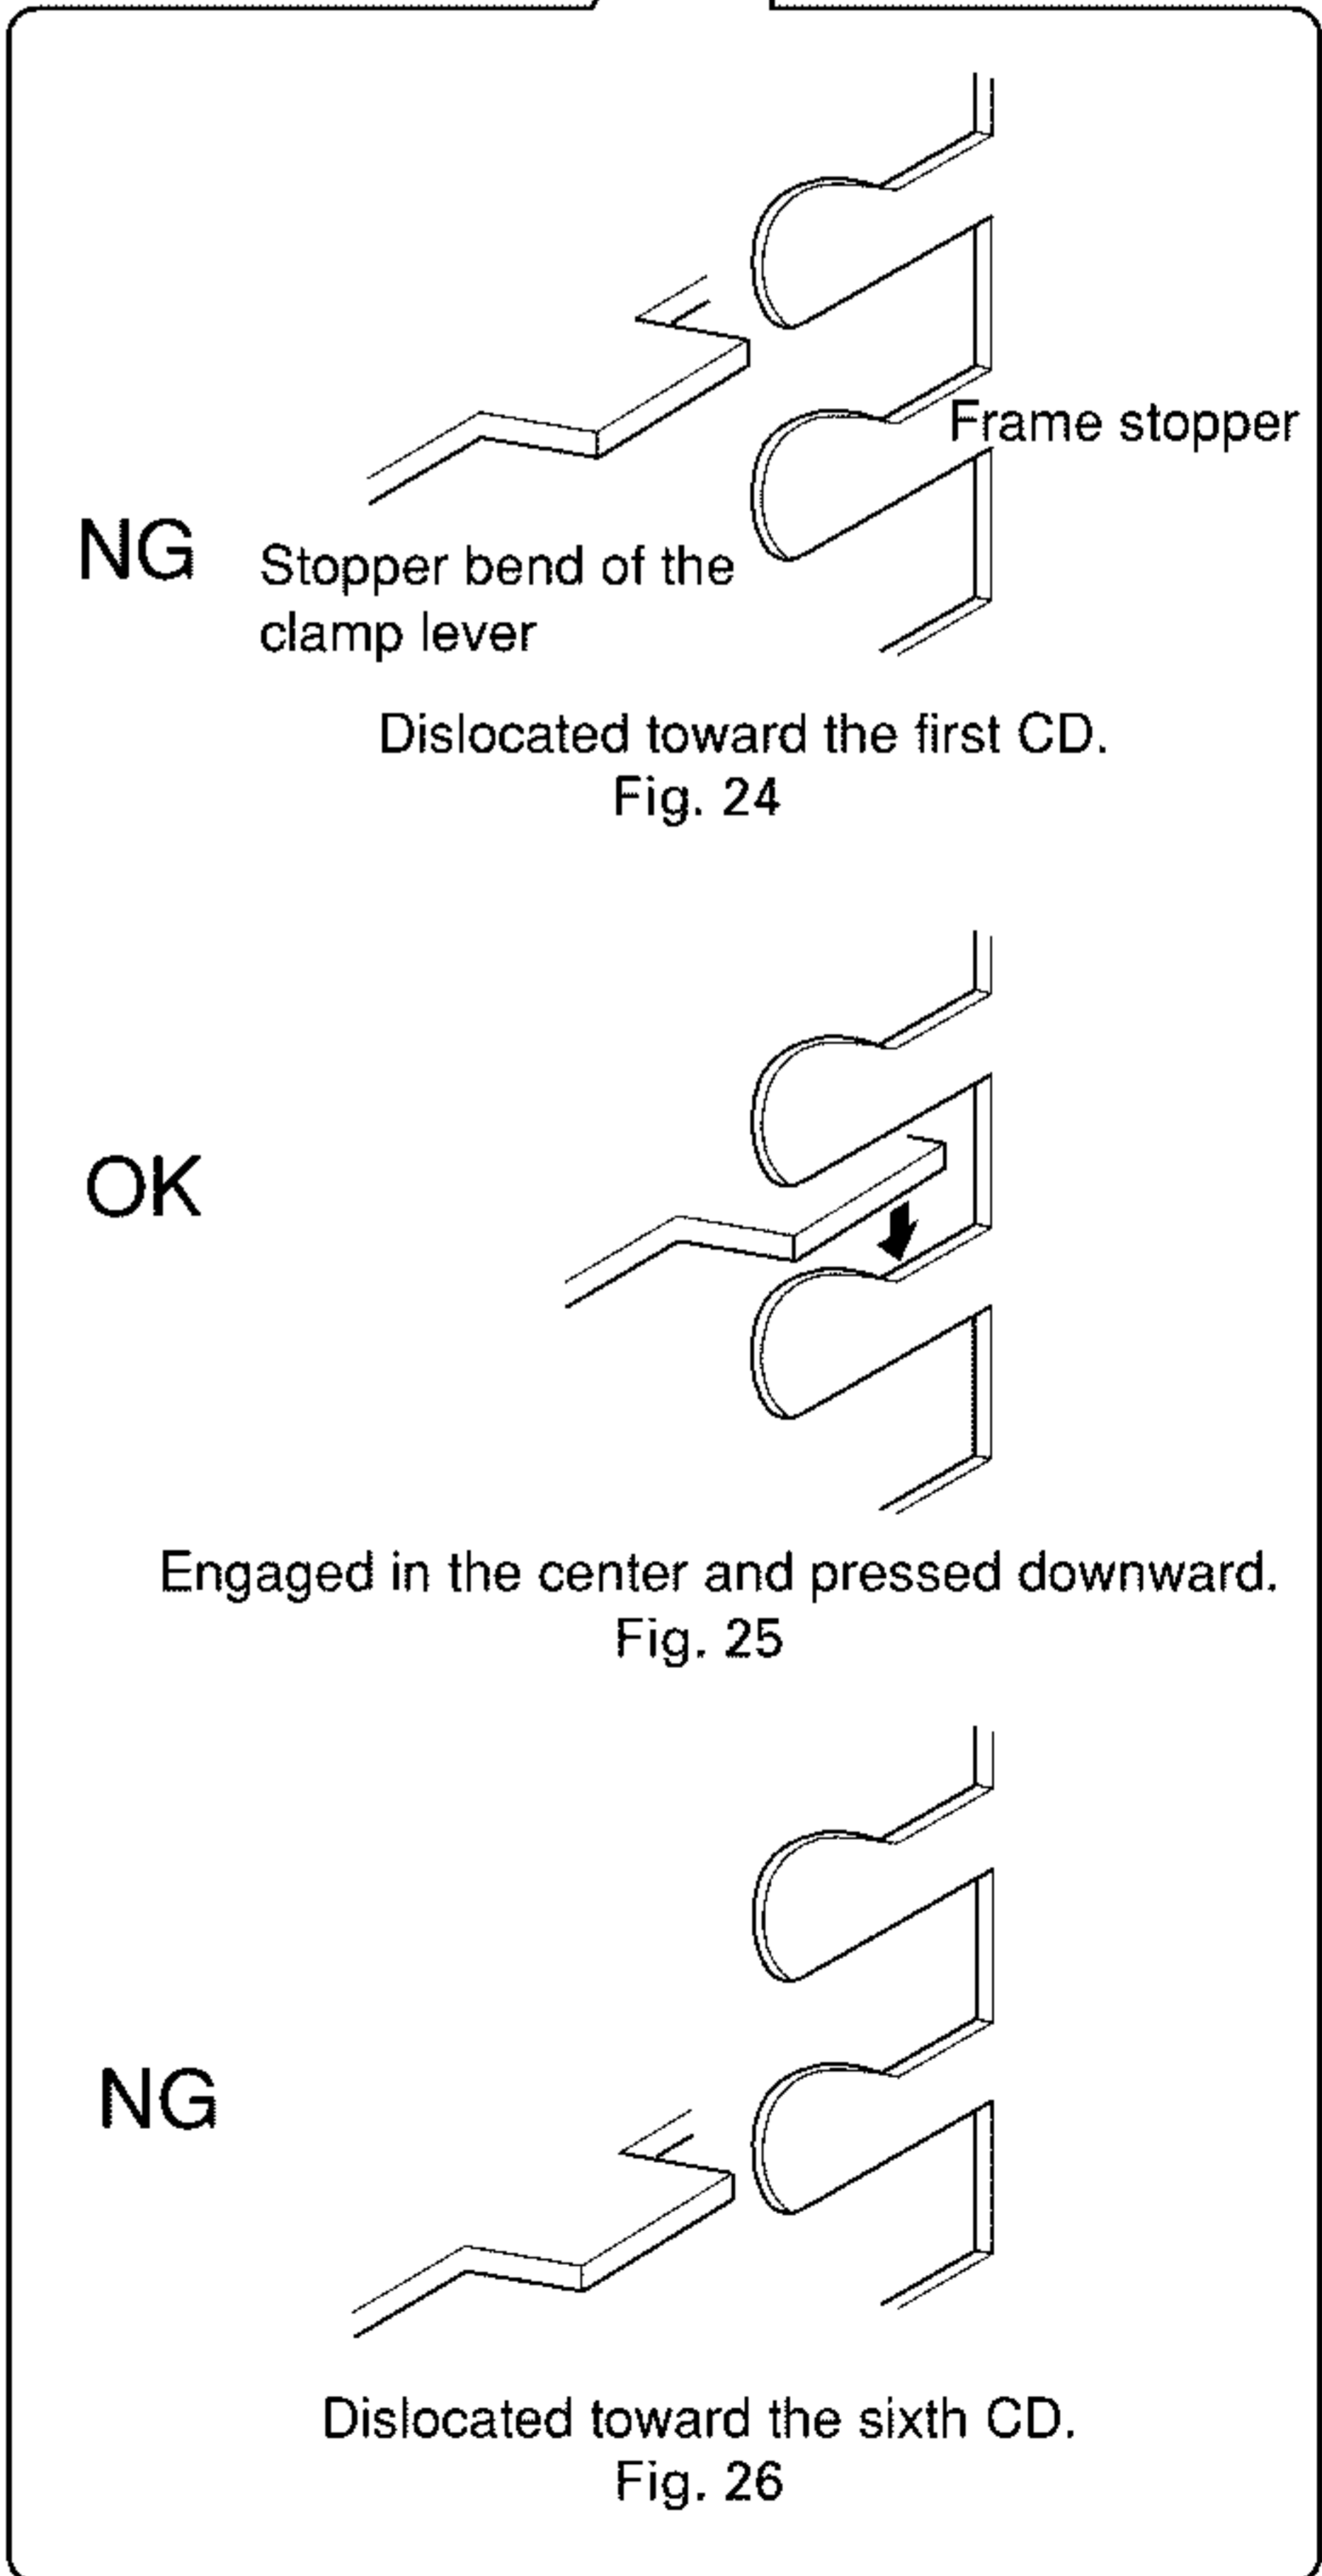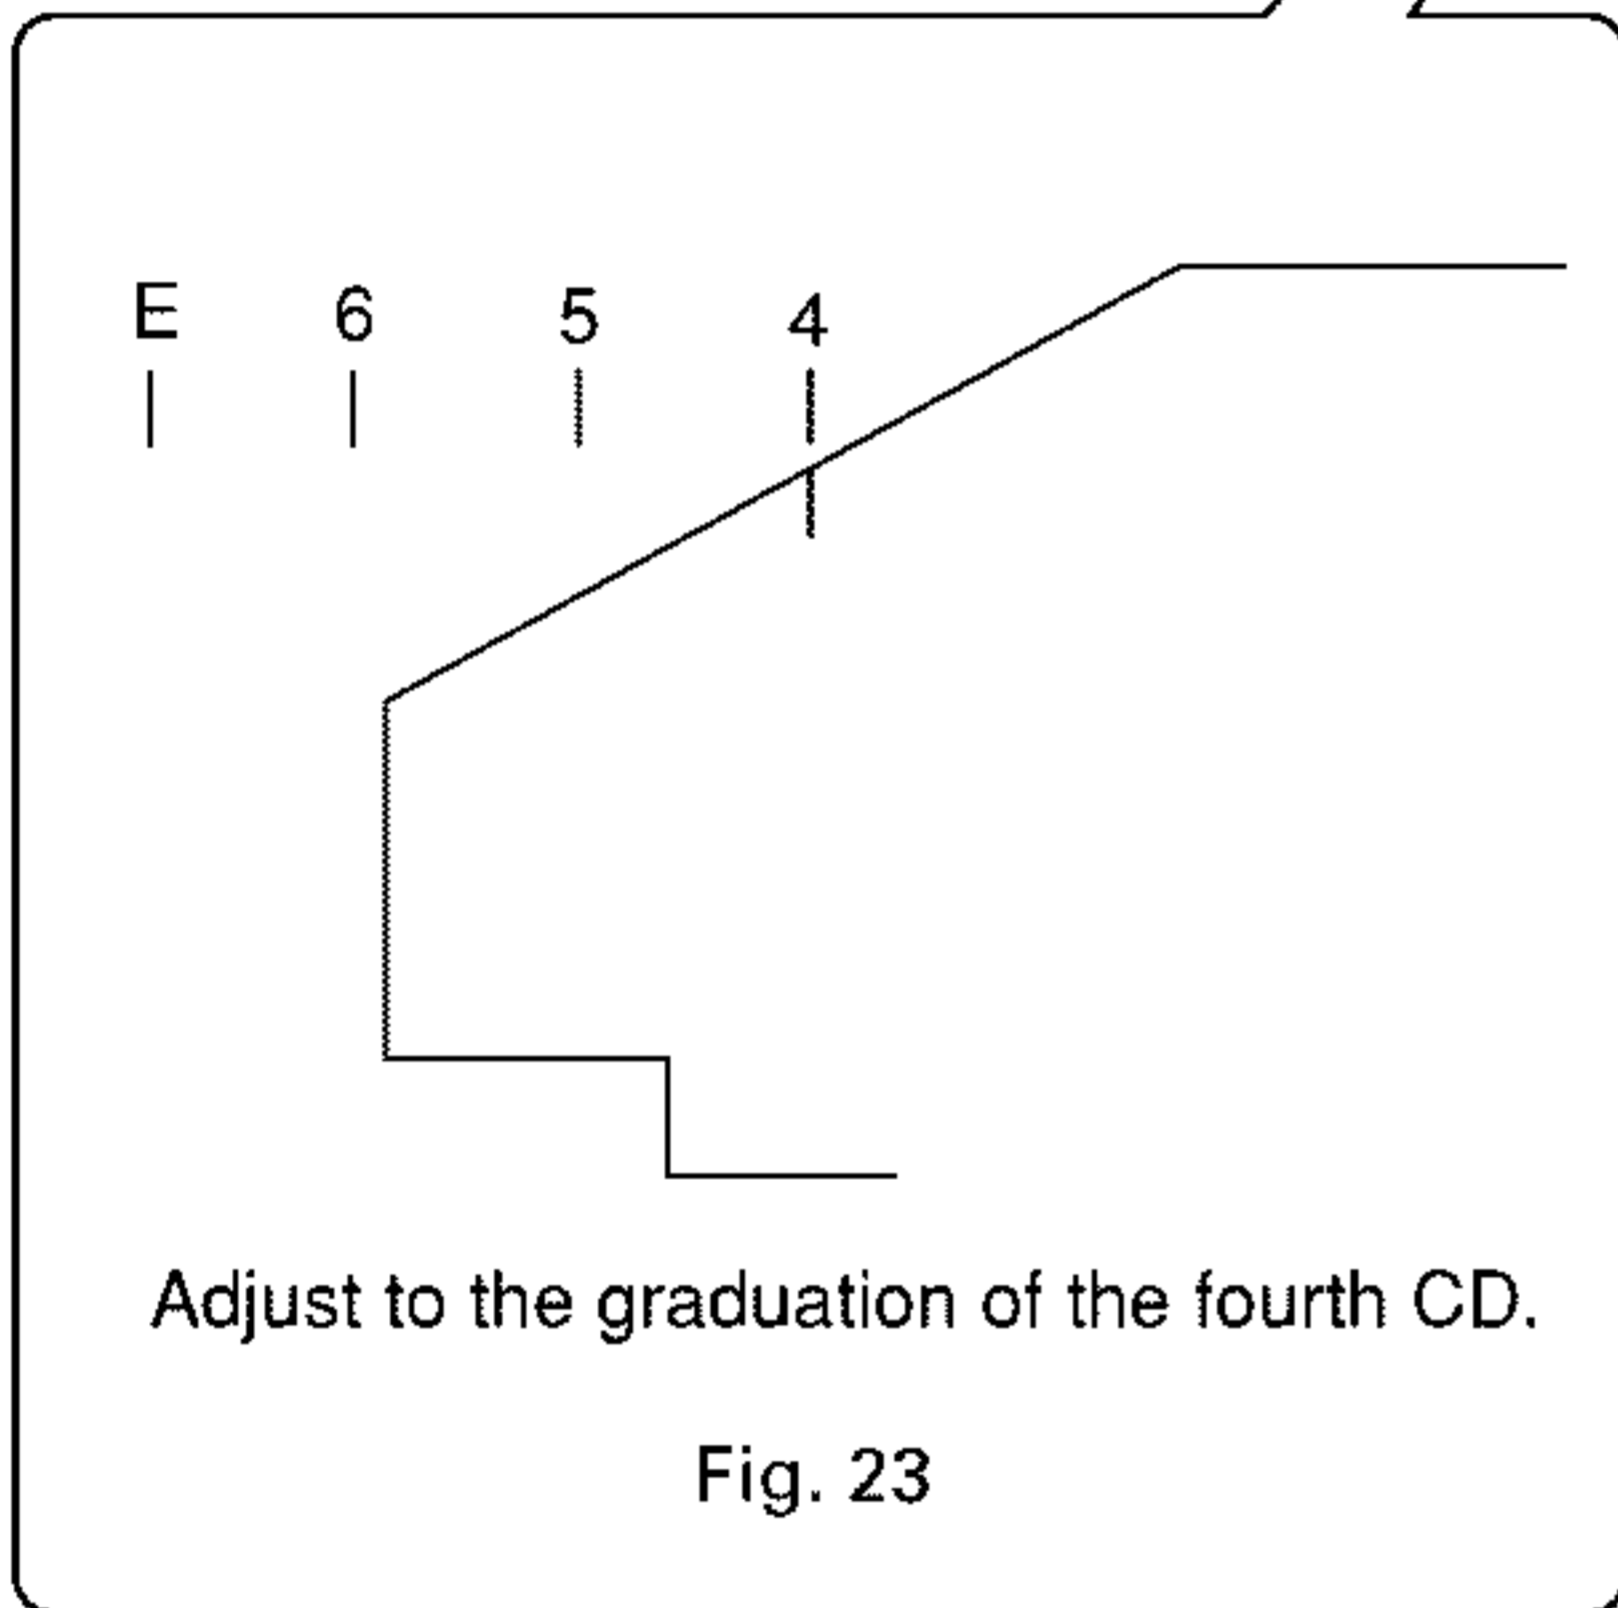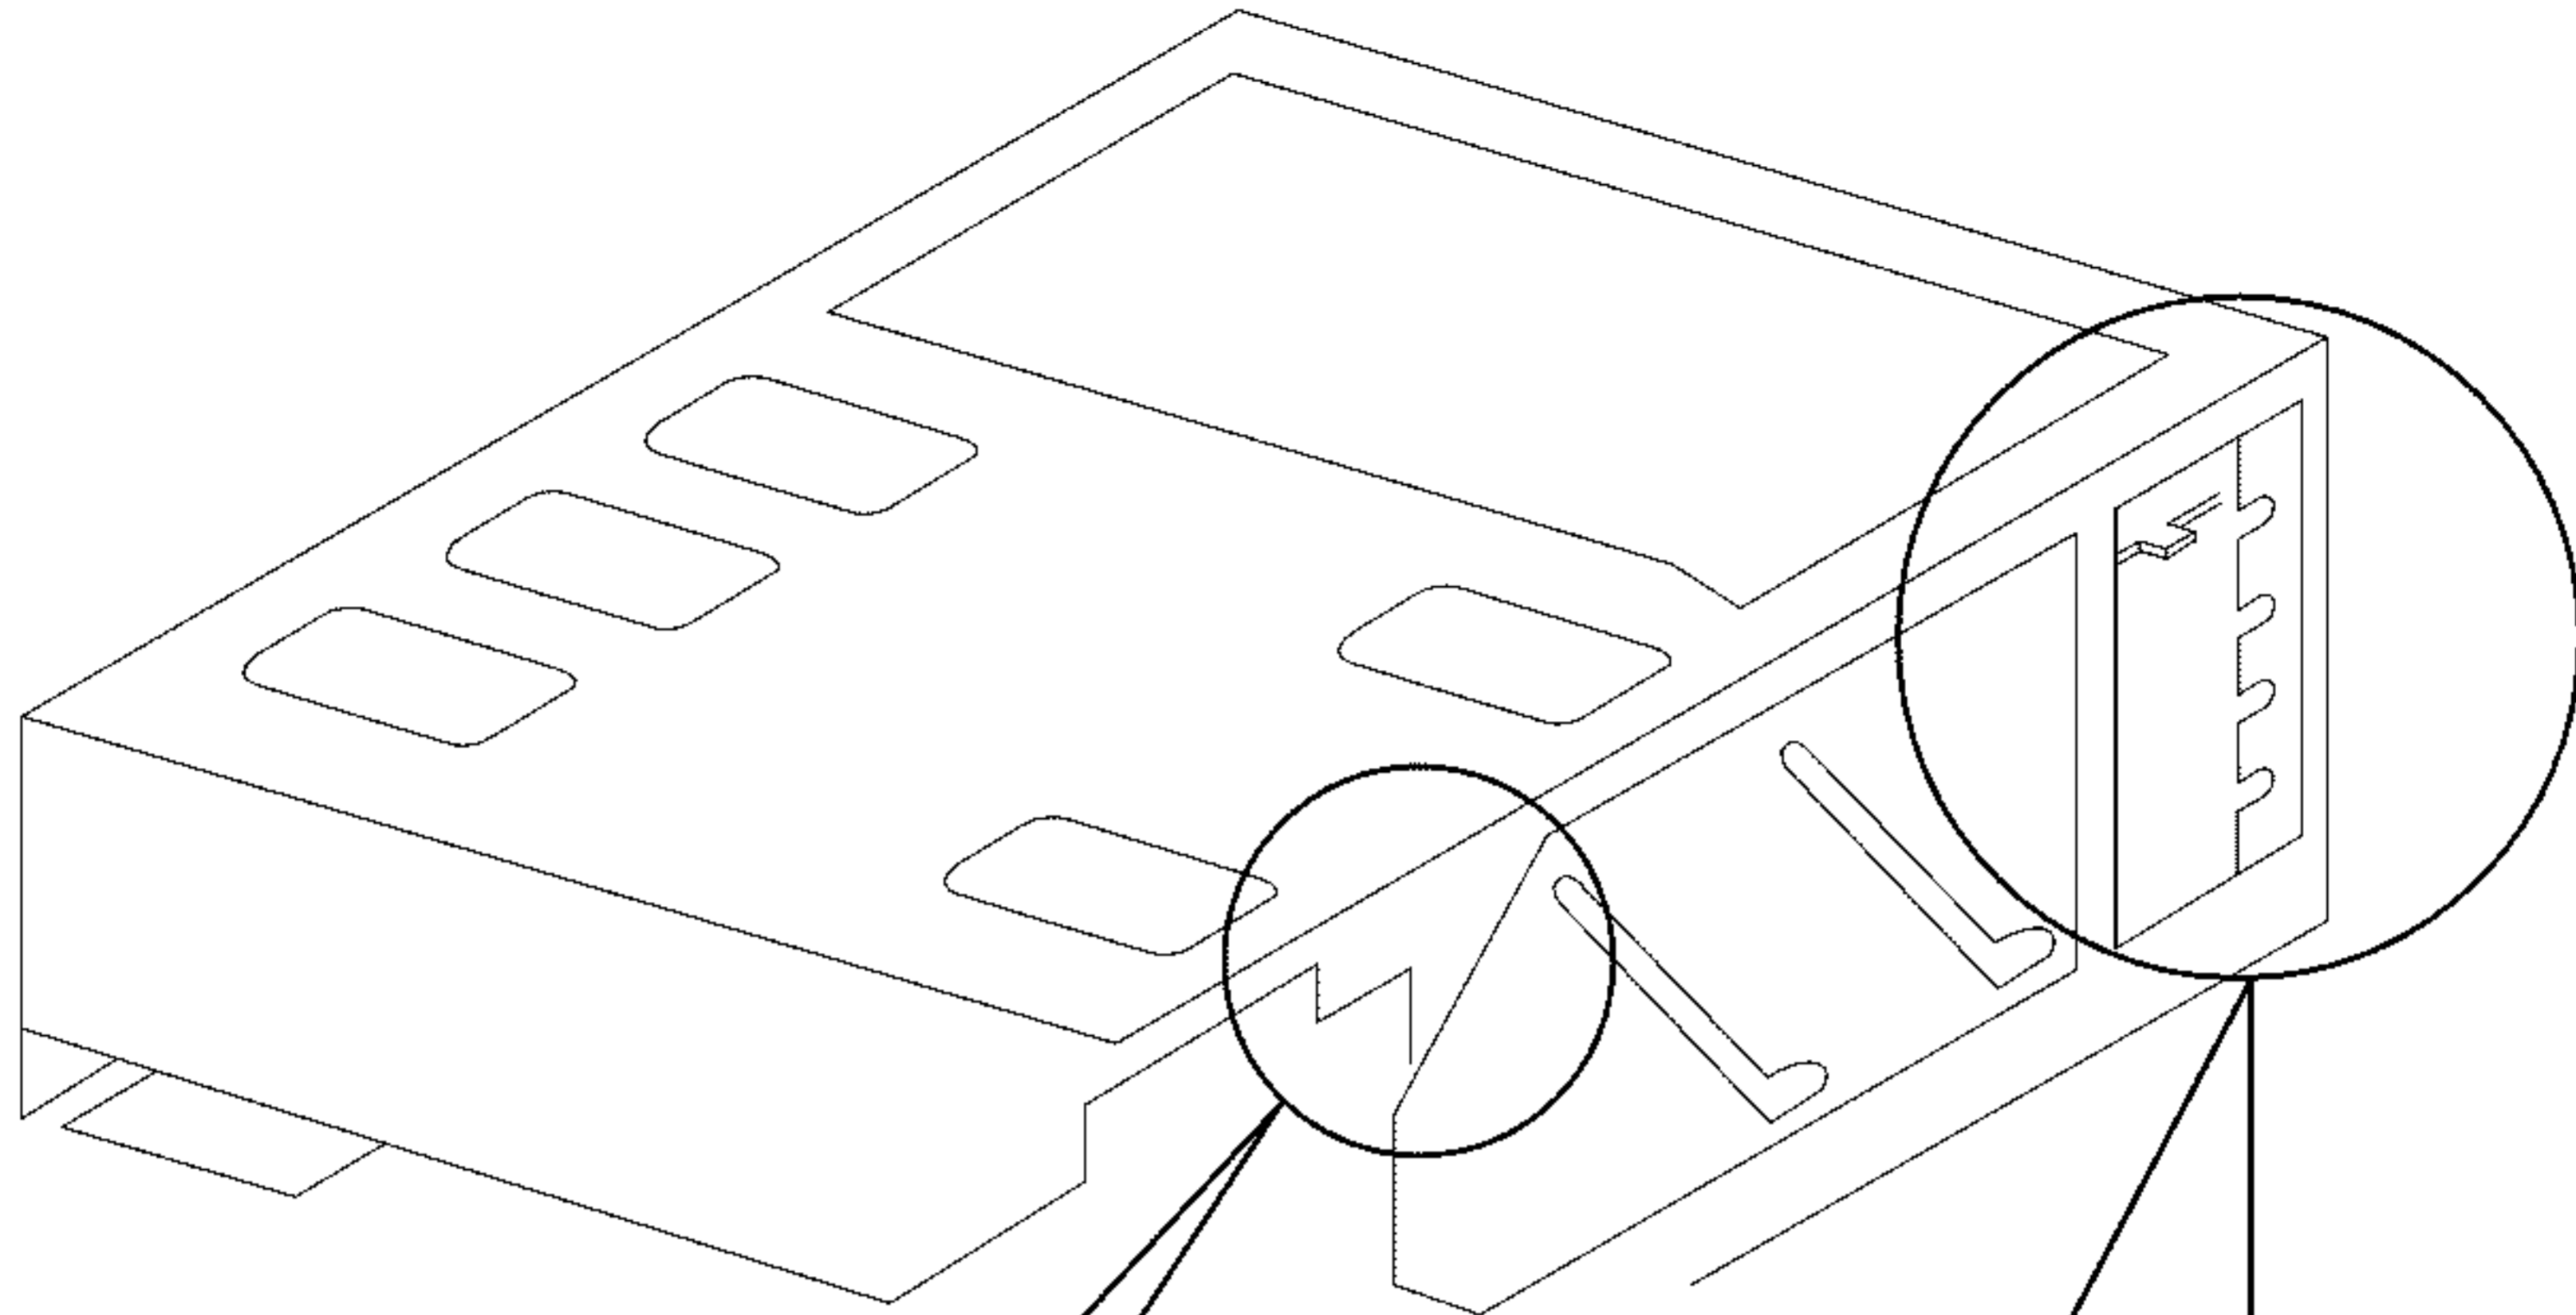



## 7. GENERAL INFORMATION

### 7.1 PARTS

#### 7.1.1 IC

##### ● Pin Functions (UPD63702AGF)



Pin No.	Pin Name	I/O	Function and Operation
1	D.VDD		Supplies current of positive voltage to the logic circuits
2	RST	I	System reset input pin
3	AO	I	Microcomputer interface AO="L": STB active and set to address register AO="H": STB active and set to parameter
4	STB	I	Signal to latch serial data within the LSI
5	SCK	I	Clock input pin to input and output serial data
6	SO	O	Outputs serial data and status signal
7	SI	I	Serial data input pin
8	D.GND		Logic circuit GND
9	X.GND		Crystal oscillation circuit GND
10	XTAL	I	Crystal oscillator connection pin
11	XTAL	O	Crystal oscillator connection pin
12	X.VDD		Supplies current of positive voltage to the crystal oscillation circuit
13	DA.VDD		Supplies current of positive voltage to the D/A converter
14	R+	O	Right channel analog audio data output pin
15	R-	O	Right channel analog audio data output pin
16,17	DA.GND		D/A converter GND
18	L-	O	Left channel analog audio data output pin
19	L+	O	Left channel analog audio data output pin
20	DA.VDD		Supplies current of positive voltage to the D/A converter
21	D.VDD		Supplies current of positive voltage to logic circuit
22	FLAG	O	Flag output pin to indicate that audio data currently being output consists of noncorrectable data
23	WDCK	O	Pin to output double the frequency of LRCK
24	C16M	O	Pin to output the clock
25	EMPH	O	Output pin for the pre-emphasis data in the sub-Q code
26	DIN	I	Input pin for serial audio data
27	DOUT	O	Output pin for the serial audio data
28	SCKO	O	Output pin for the clock for the serial audio data
29	LRCK	O	Signals to distinguish the right and left channels of the audio data output from DOUT. Frequency is 44.1kHz at 50% duty at normal regeneration
30	TX	O	Output pin for the digital audio interface data
31	CTLV	I	Oscillation control pin for high-frequency clock generation VCO used for the digital PLL upon regeneration at fast speed of 2- or 4-fold
32	POUT	O	Output point for phase comparison
33	D.GND		GND for the logic circuit
34	VCO	I	Input pin for the inverter
35	VCO	O	Output pin for the inverter
36	D.VDD		Supplies current of positive voltage to the logic circuit
37	PLCK	O	Pin for monitoring the bit clock
38	LOCK	O	Indicates "H" when the synchronized pattern detection signal matches the frame counter output at the EFM recovery modulation, and "L" when they don't match
39	WFCK	O	Minute-cycle signal for the bit clock, the signal indicates the cycle of 1 frame (approx. 7.35kHz)
40	RFCK	O	Minute-cycle signal for the clock, the signal indicates cycle of 1 frame (approx. 7.35kHz)
41	D.GND		GND for the logic circuit
42,43	TEST0,1	I	Test pins
44,45	TM2, TM4	I	Pins for controlling regeneration at fast speed of 2- or 4-fold
46-49	T4-T7	I	Test pins
50,51	C1D1,C1D2	O	Output pin for indicating the C1 error correction results


Pin No.	Pin Name	I/O	Function and Operation
52-54	C2D1-C2D3	O	Output pin for indicating the C2 error correction results
55	D.VDD		Supplies current of positive voltage to the logic circuit
56	SFSY	O	Outputs 1 word of the subcode. Generally, 1 cycle is approx 136 micro seconds
57	SBSY	O	The signal indicates the beginning of the subcode block. The SFSY signal is output at high level every 98 times
58	SBSO	O	Output pin for the subcode data
59	SBCK	I	Input pin for the clock signal for read-out of the subcode data
60	A.GND		GND for the analog circuit
61	MD	O	Output pin for the spindle drive
62	SD	O	Output pin for the sled drive
63	TD	O	Output pin for the tracking drive
64	FD	O	Output pin for the focus drive
65	FBAL	O	Output pin for the focus balance control
66	TBAL	O	Output pin for the tracking balance control
67	A.VDD		Supplies current of positive voltage to the analog circuit
68	TBC	I	Switches coefficient banks for the tracking filter
69	EFM	I	Input pin for the EFM signal
70	HOLD	I	Input pin for the hold control signal
71	RFOK	I	Input pin for the RFOK signal
72	MIRR	I	Input pin for the MIRR signal
73	A.GND		GND for the analog circuit
74,75	VR2,1	I	The signal input through these pins is digitized to 8-bit by the A/D converter, which by operation of the assigned register, can be read into the microcomputer
76	FE	I	Inputs a focus-error signal from the RF amplifier
77	TE	I	Inputs a tracking-error signal from the RF amplifier
78	TEC	I	Input pin for the tracking comparator
79	REFOUT	O	Output point for midpoint potential for the A/D converter for the LSI portion
80	A.VDD		Supplies current of accurate voltage to the analog circuit

\*UPD63702AGF

IC's marked by\* are MOS type.

Be careful in handling them because they are very liable to be damaged by electrostatic induc-

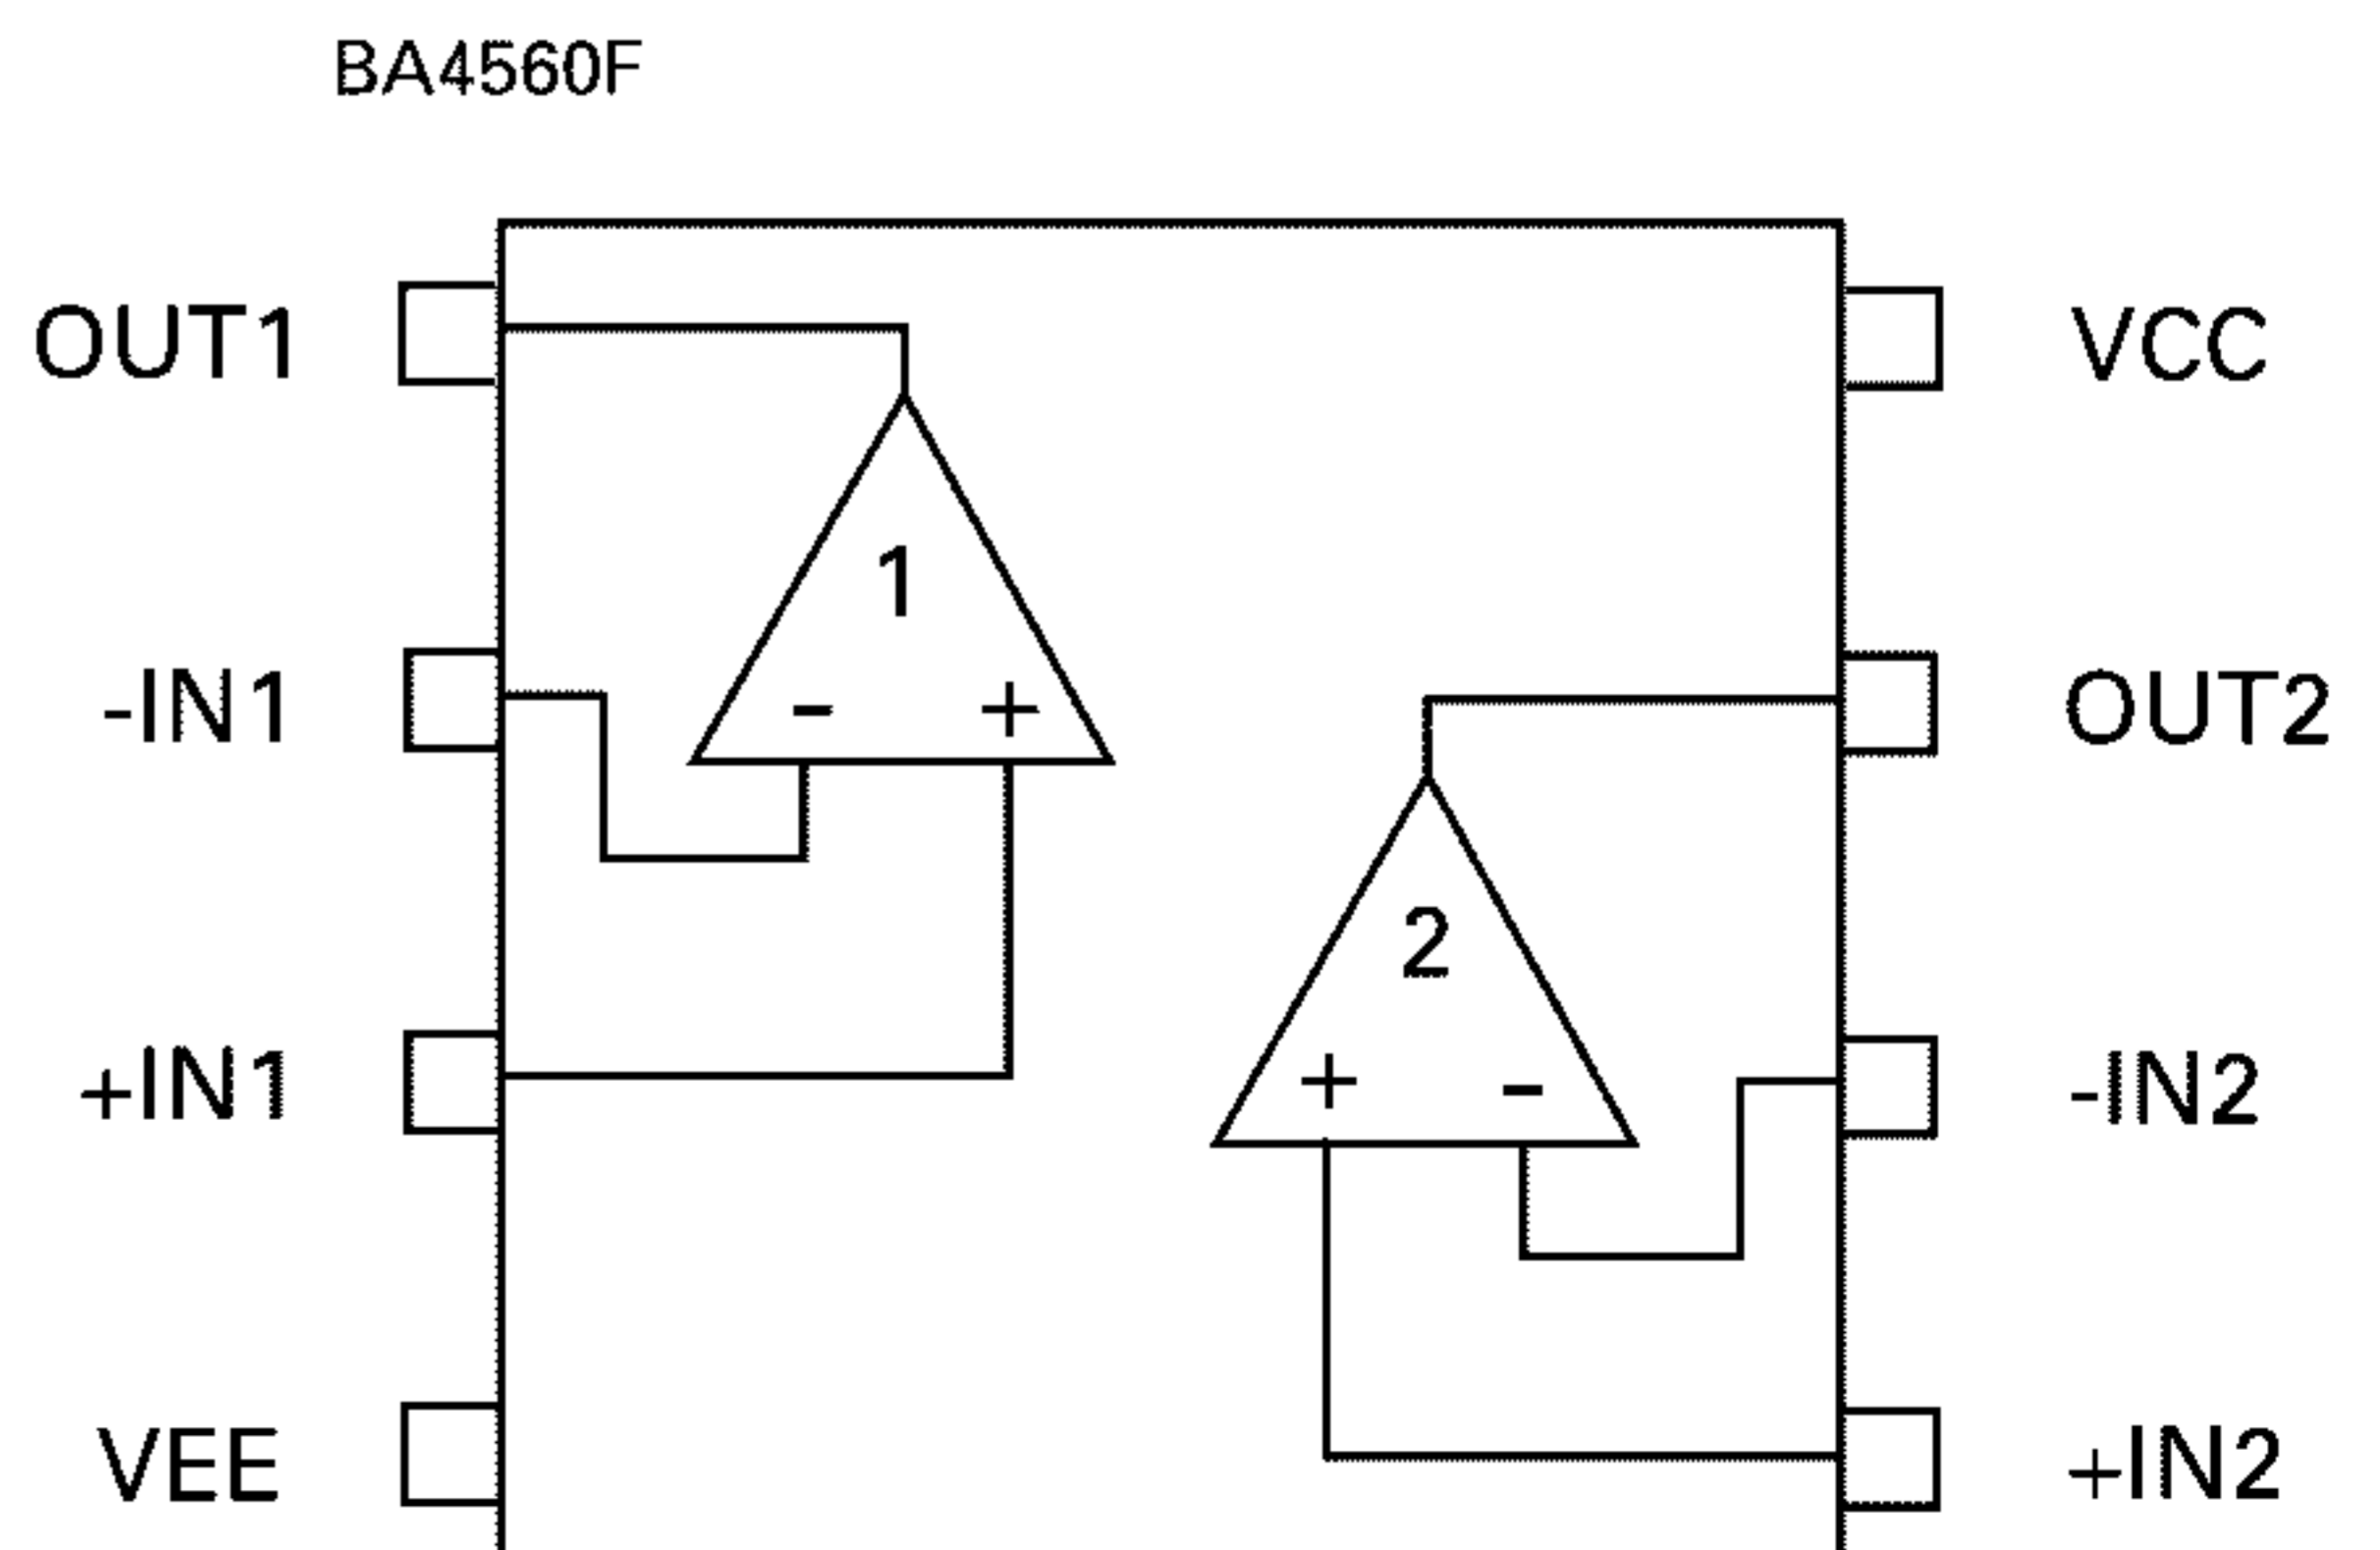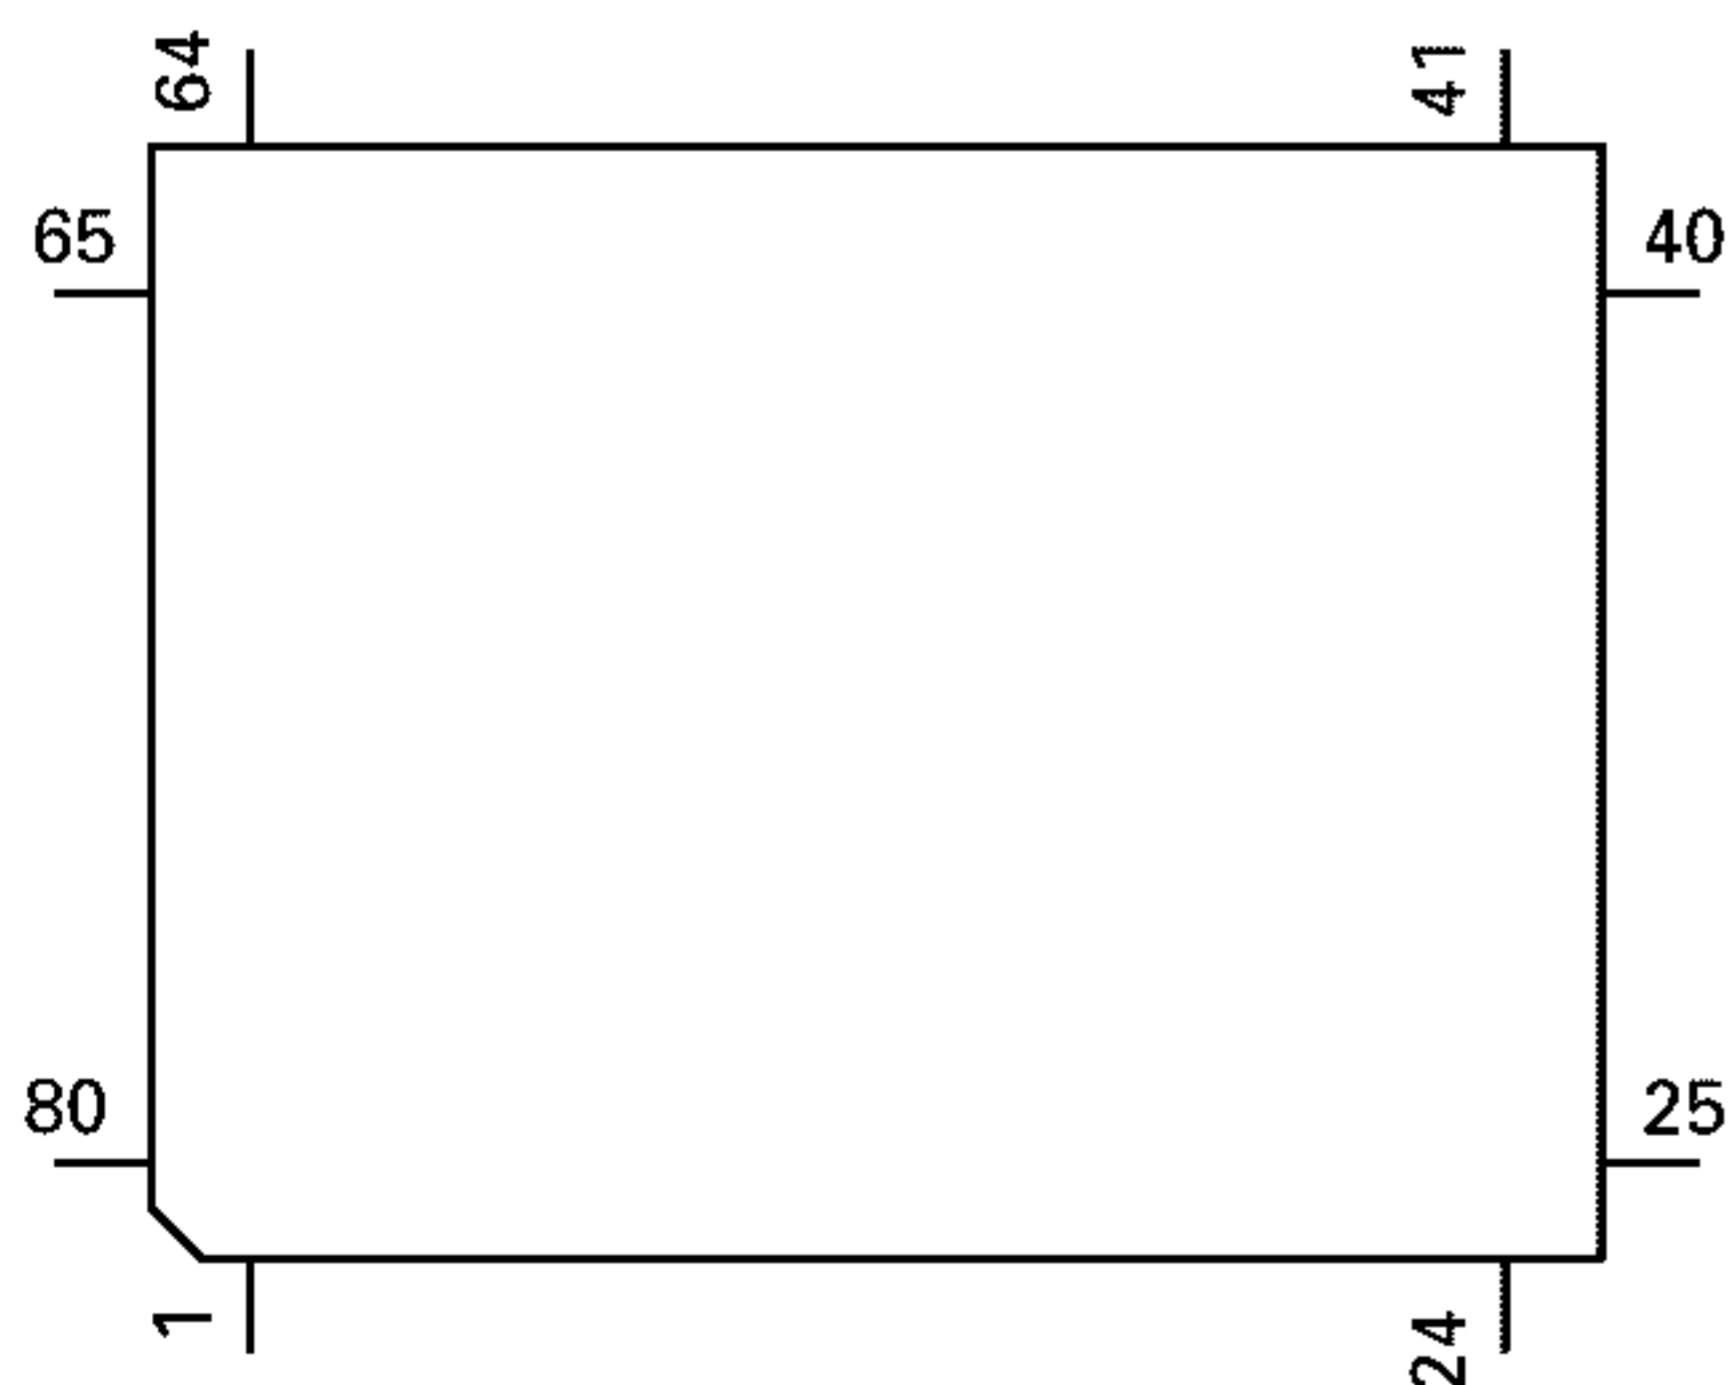

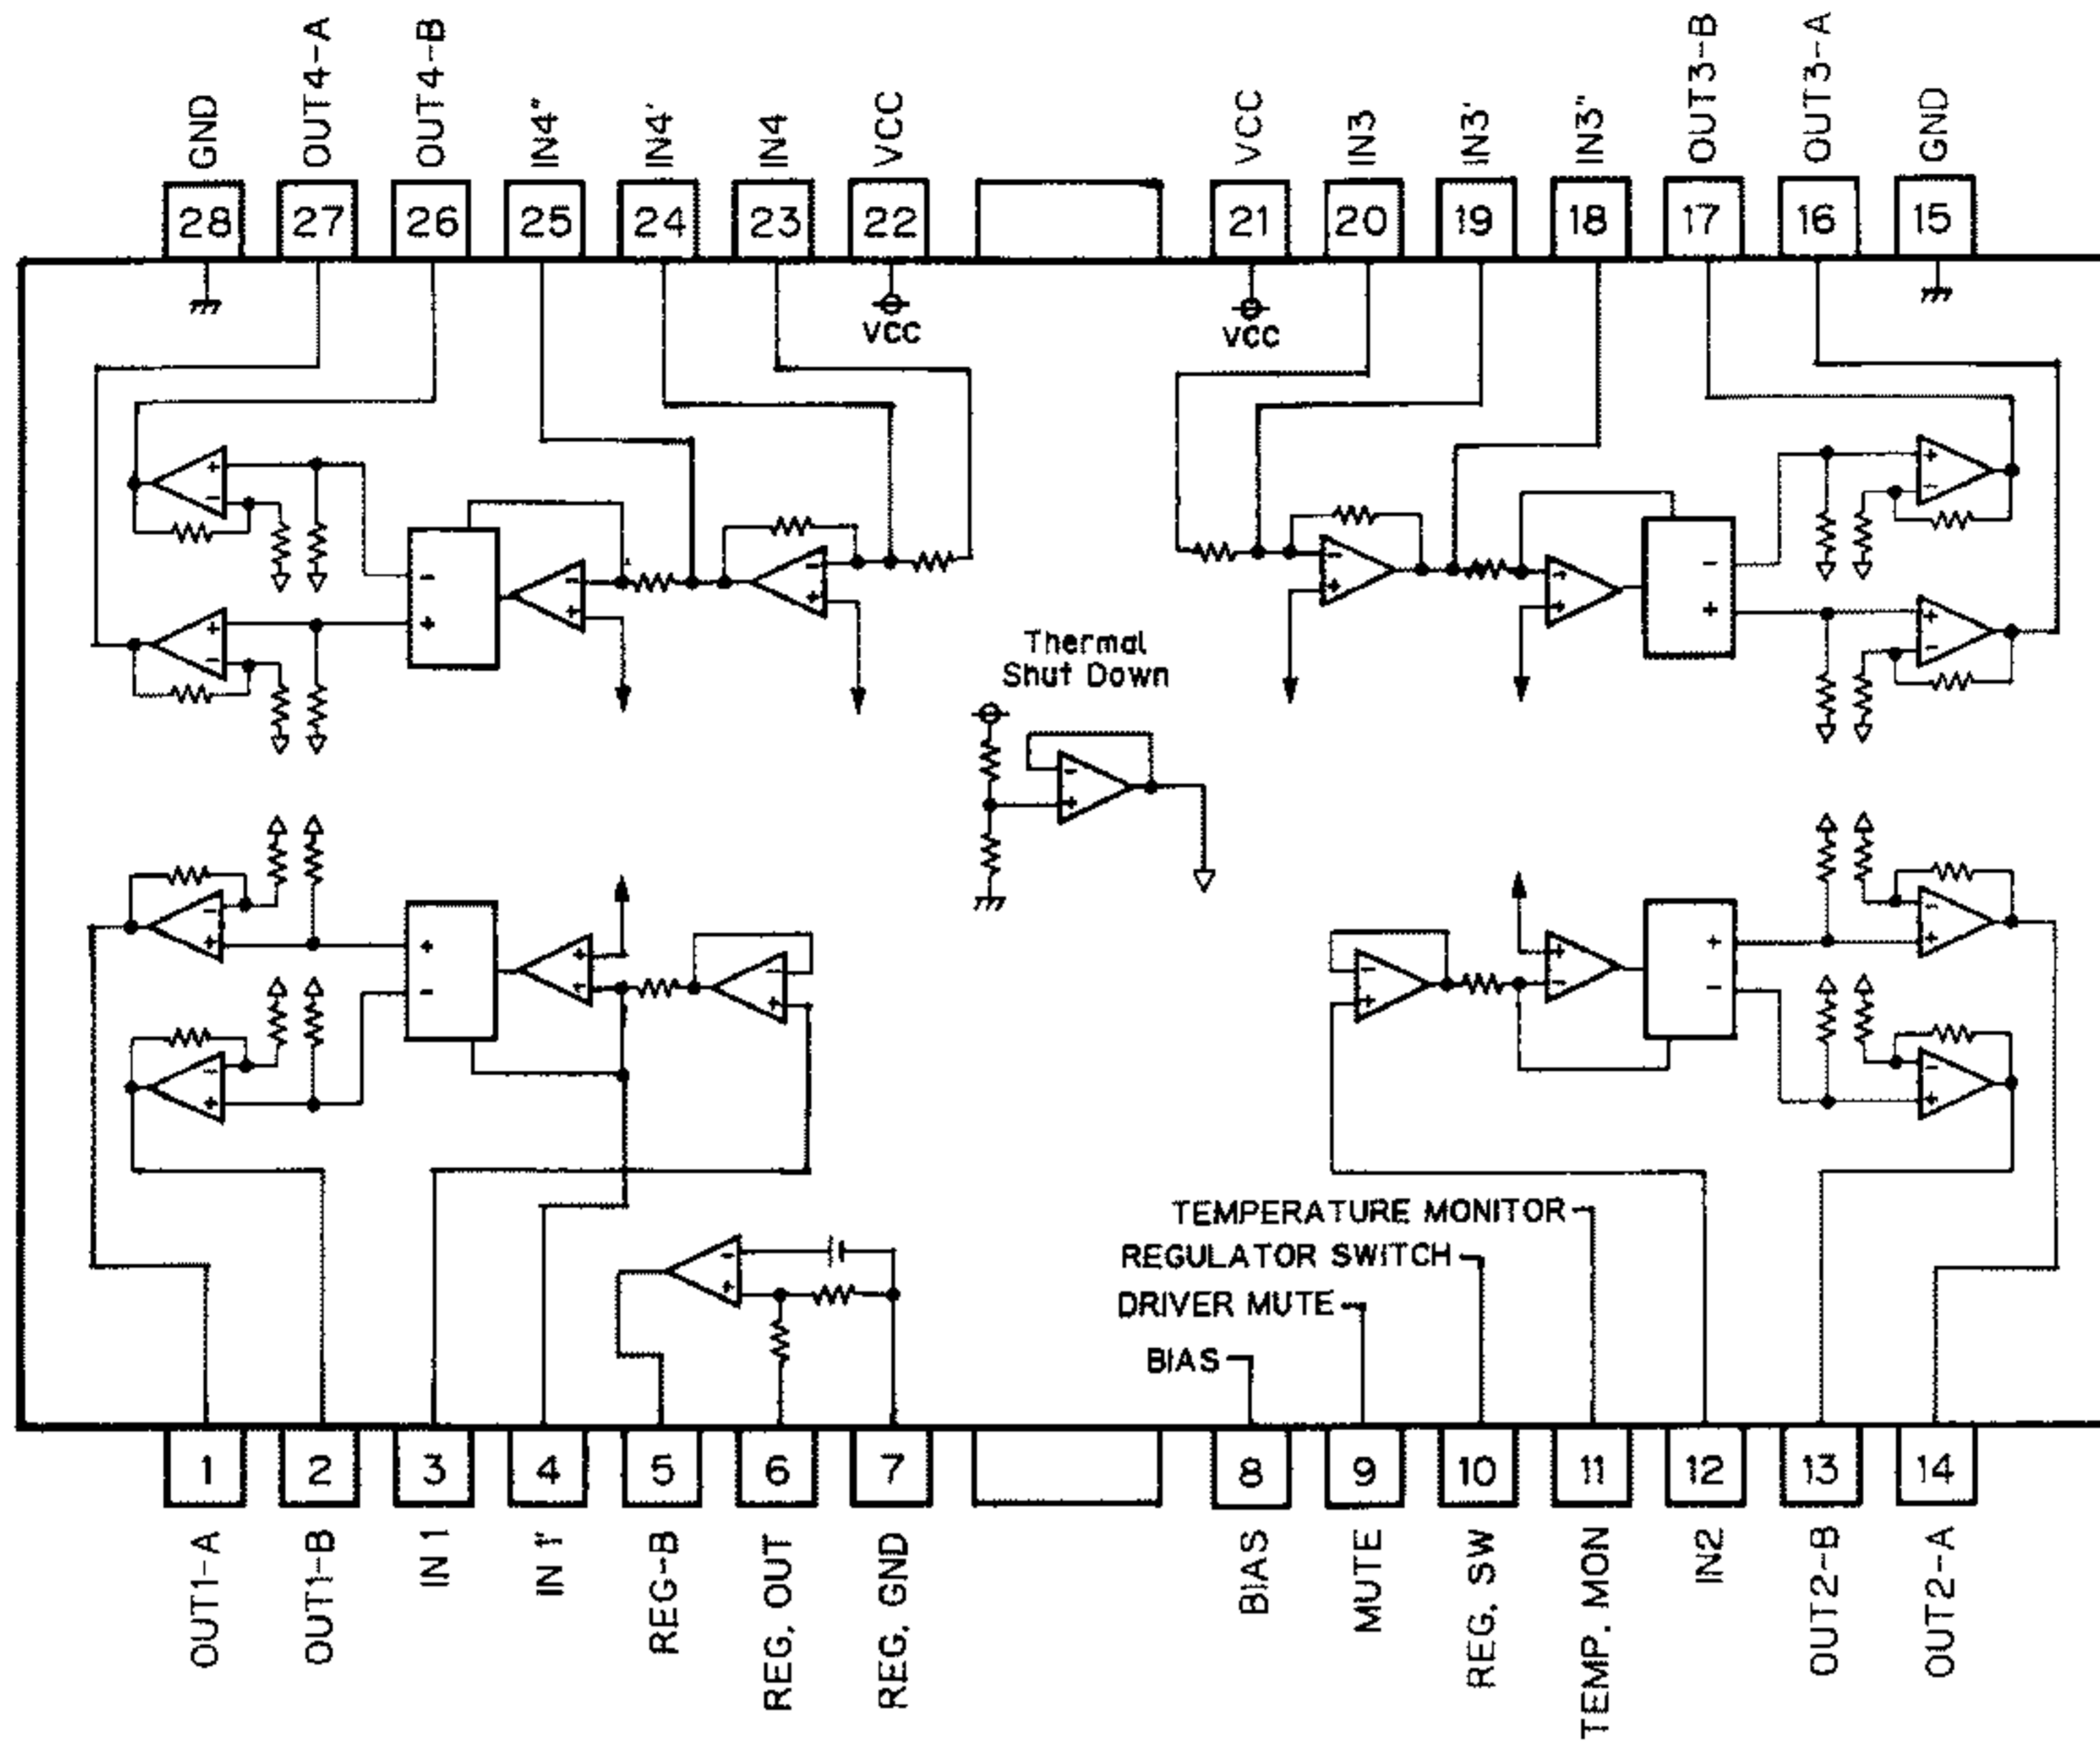


● Pin Functions (PD5397C)

Pin No.	Pin Name	I/O	Format	Function and Operation
1	VDIN	I		Power supply short sensor input
2	NC			Not used
3	PLDT	O	NM	Data output for PLL IC
4	PLCK	O	NM	PLL clock output for PLL IC
5	PLCS	O	NM	PLL chip select output for PLL IC
6	XA0	O	NM	Control signal distinguishing data for CD core unit LSI
7	XSCK	I/O	NM	Clock input/output for CD core unit LSI
8	XSO	O	NM	Data output for CD core unit LSI
9	XSI	I		Data input from CD core unit LSI
10	XSTB	O	C	Strobe output for CD core unit LSI
11	XRST	O	C	Reset output for CD core unit LSI
12	DCE	O	C	Chip enable output for CD core unit compression IC
13	NC			Not used
14	ASENS	I		ACC power sense input
15	BSENS	I		Back up power sense input
16,17	NC			Not used
18	SYSPW	O	C	System power supply control output
19	DISPPW	O	C	Power supply control output for display IC
20	DPDT	O	C	Display data output
21	KYDT	I		Key data input
22	EJSW	I		Eject key switch interrupt input
23	MAG	I		Magazine lock switch interrupt input
24	CNVSS			GND
25	RESET	I		Reset input
26	POWER	O	C	CD +5V control
27	CONT	O	C	Server driver power control output (CD)
28	XIN	I		Crystal oscillating element connection pin
29	XOUT	O		Crystal oscillating element connection pin
30	VSS			GND

Pin No.	Pin Name	I/O	Format	Function and Operation
31-38	D7-D0	I/O	C	External RAM data line input/output
39	WE	O	C	External RAM write enable output
40	PROT	O	C	External RAM output enable output
41	CS	O	C	External RAM chip select output
42,43	NC			Not used
44-54	A10-A0	O	C	External RAM address line output
55	NC			Not used
56	6/12	I		6/12 switching input
57	NC			Not used
58	MIRR	I		Mirror detection input (CD)
59	LOCK	I		Spindle lock input (CD)
60	FOK	I		FOK signal input (CD)
61	CSEL	I		Compression select input(CD)
62	PREN	O	C	Pre-emphasis select output
63	NC			Not used
64	PRMR	I		Compression display select input
65	I1,3	O	C	Motor driver control output
66	I2	O	C	Motor driver control output
67	I4	O	C	Motor driver control output
68	CDMUTE	O	C	Mute control output (CD)
69	ADENA	O	C	A/D converter reference voltage output
70	TESTIN	I		Test program mode input
71	VCC			Power supply terminal
72	VREF			A/D converter reference voltage
73	AVSS			A/D converter GND
74	SIMUKE	I		Destination information input
75	UL	I		ELV position select input
76	DISC	I		Disc detector input
77	ELVPVO	I		Voltage input from ELV position sense
78	ELVREF	I		ELV reference voltage input
79	MSW	I		Disc sense timing input and tray position input
80	NC			Not used

\*PD5397C

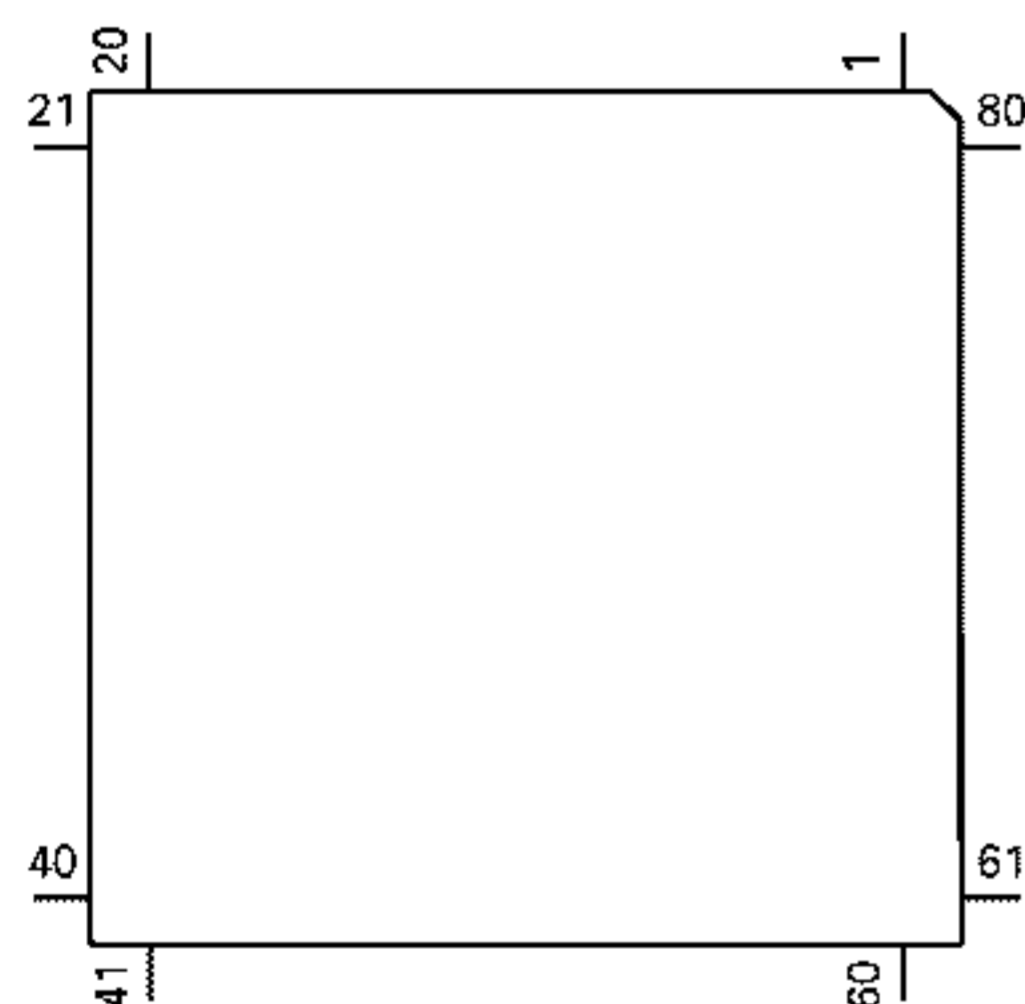


Format	Meaning
C	C MOS
NM	Middle resistivity N channel open drain

7.1.2 DISPLAY

● CAW1273

COMMON

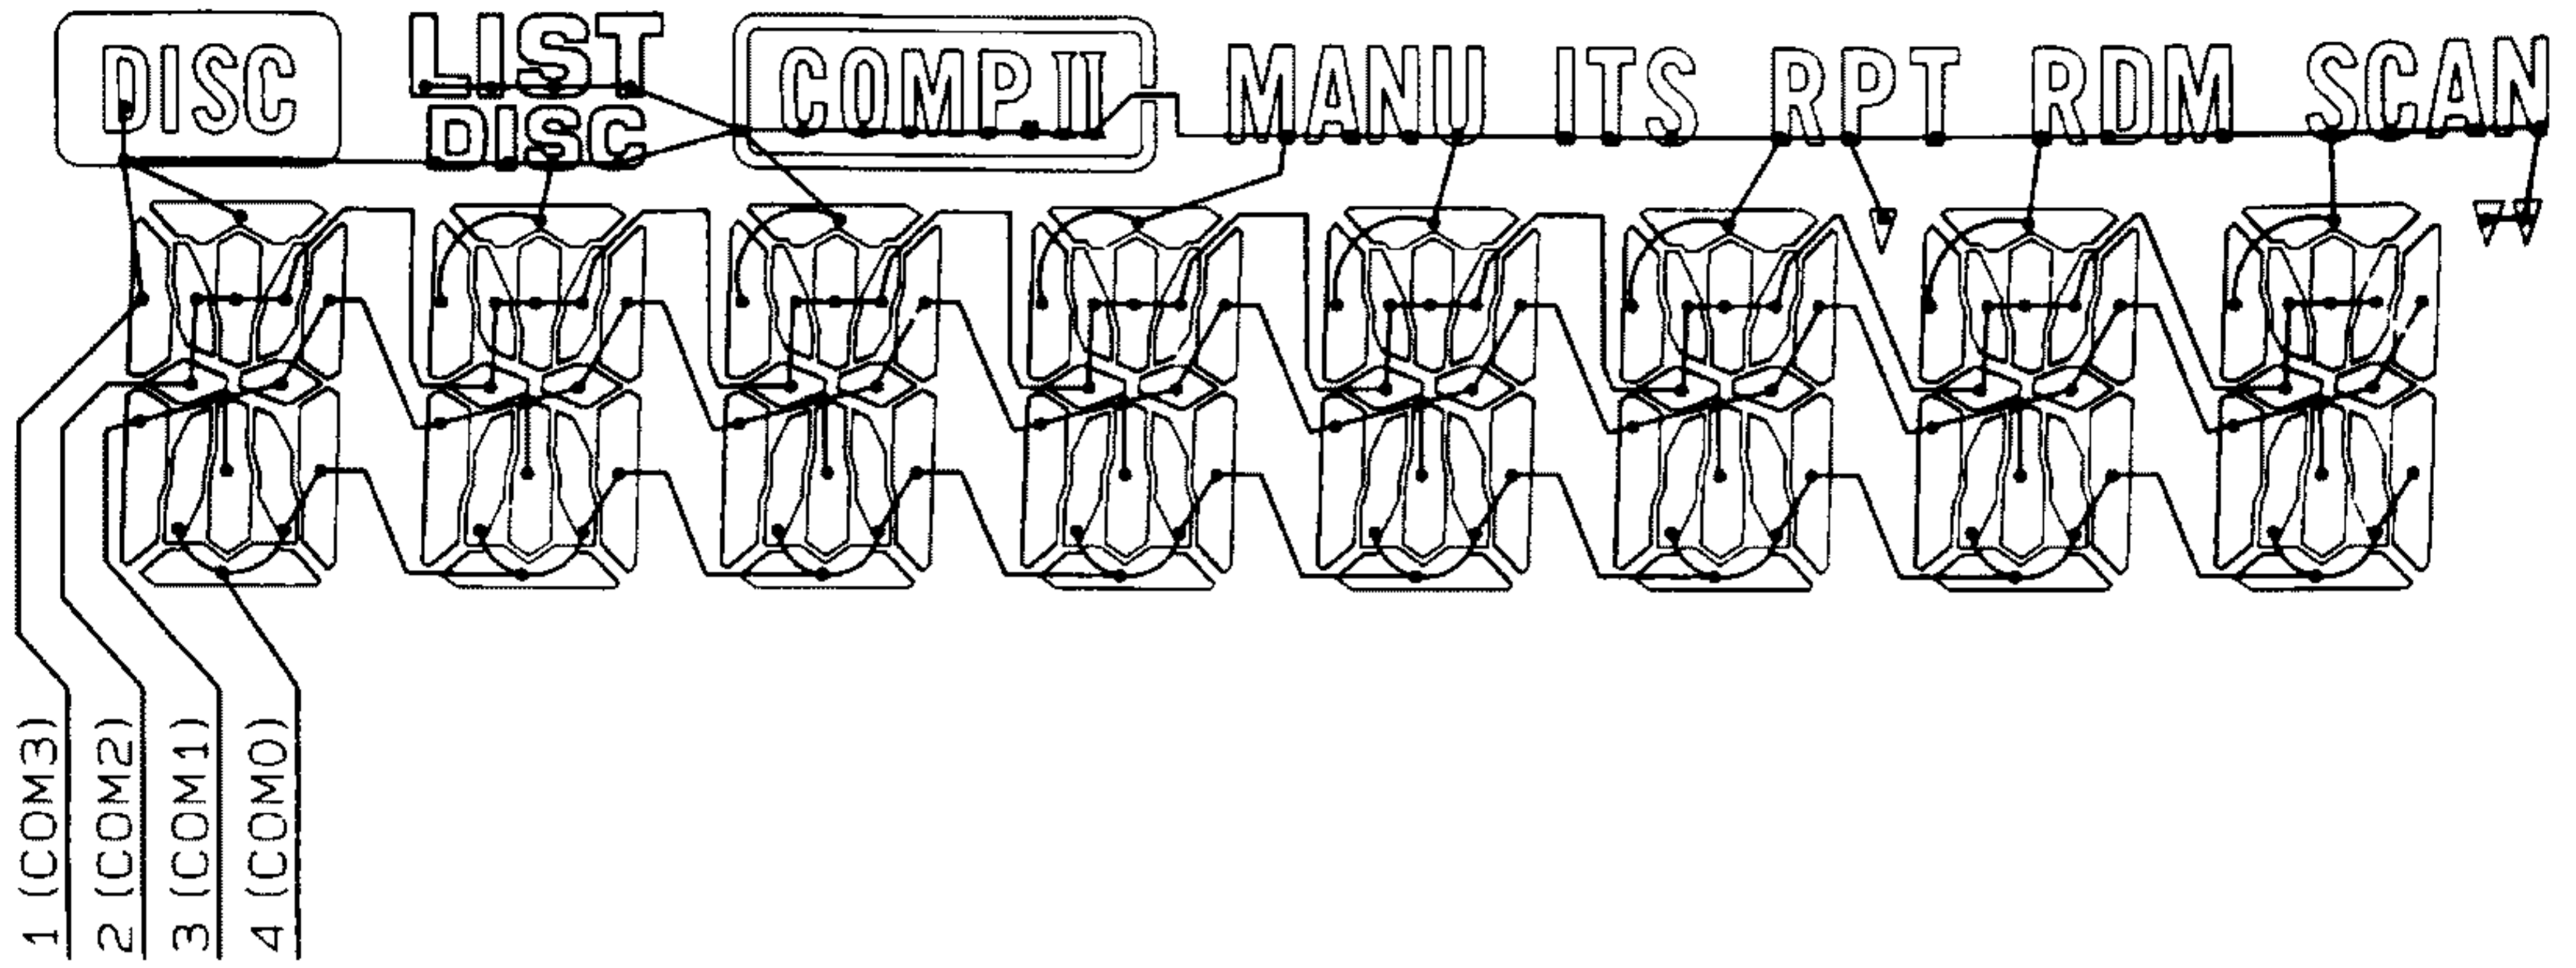

SEGMENT

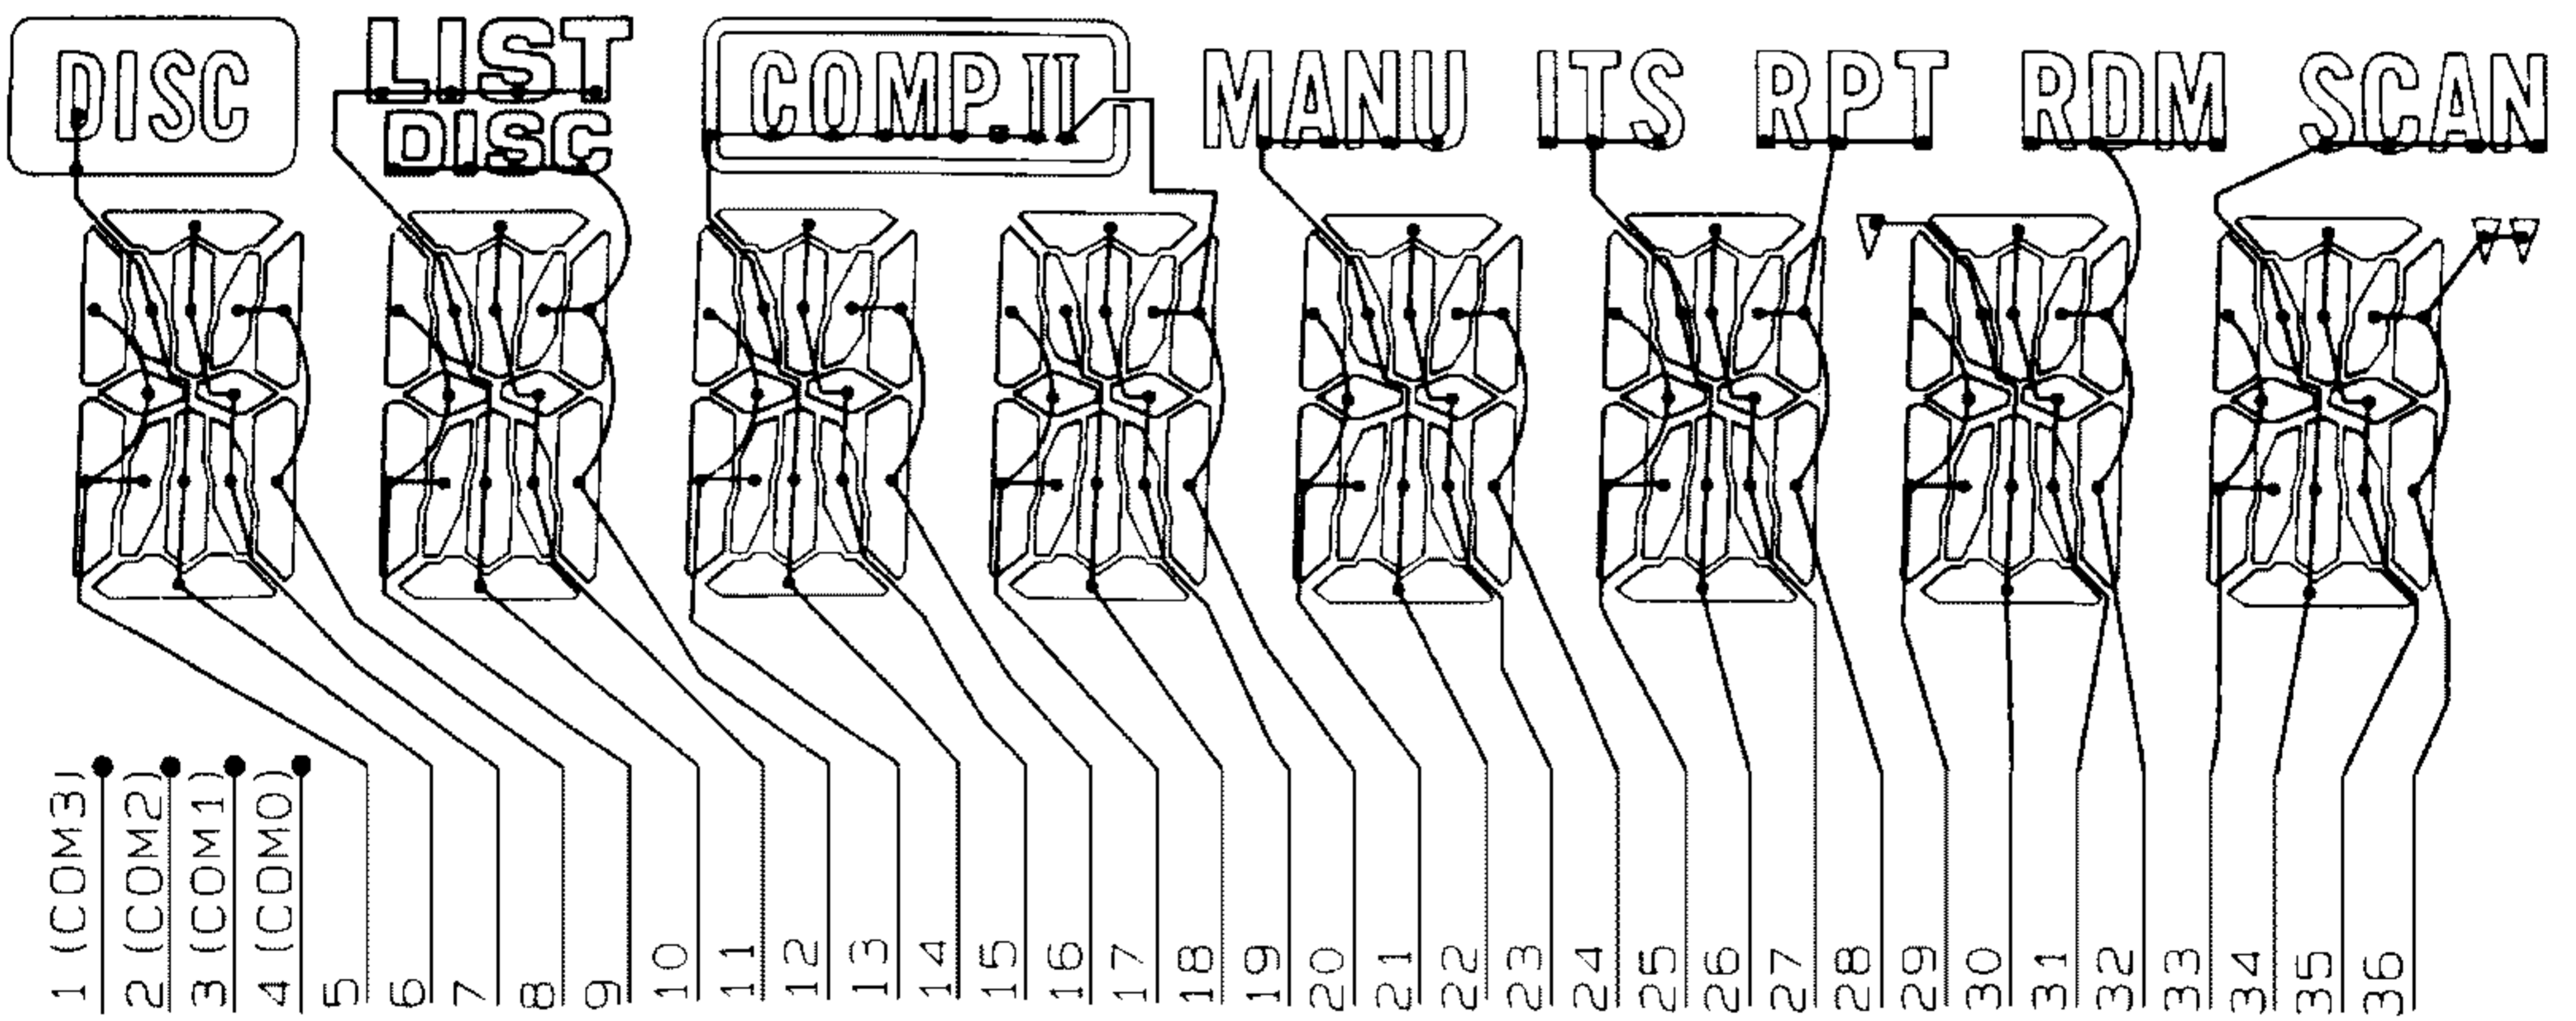


Fig. 27

## 7.2 DIAGNOSIS

### 7.2.1 DISASSEMBLY

#### ● Removing the Upper Case

1. Remove the nine screws and then remove the upper case.

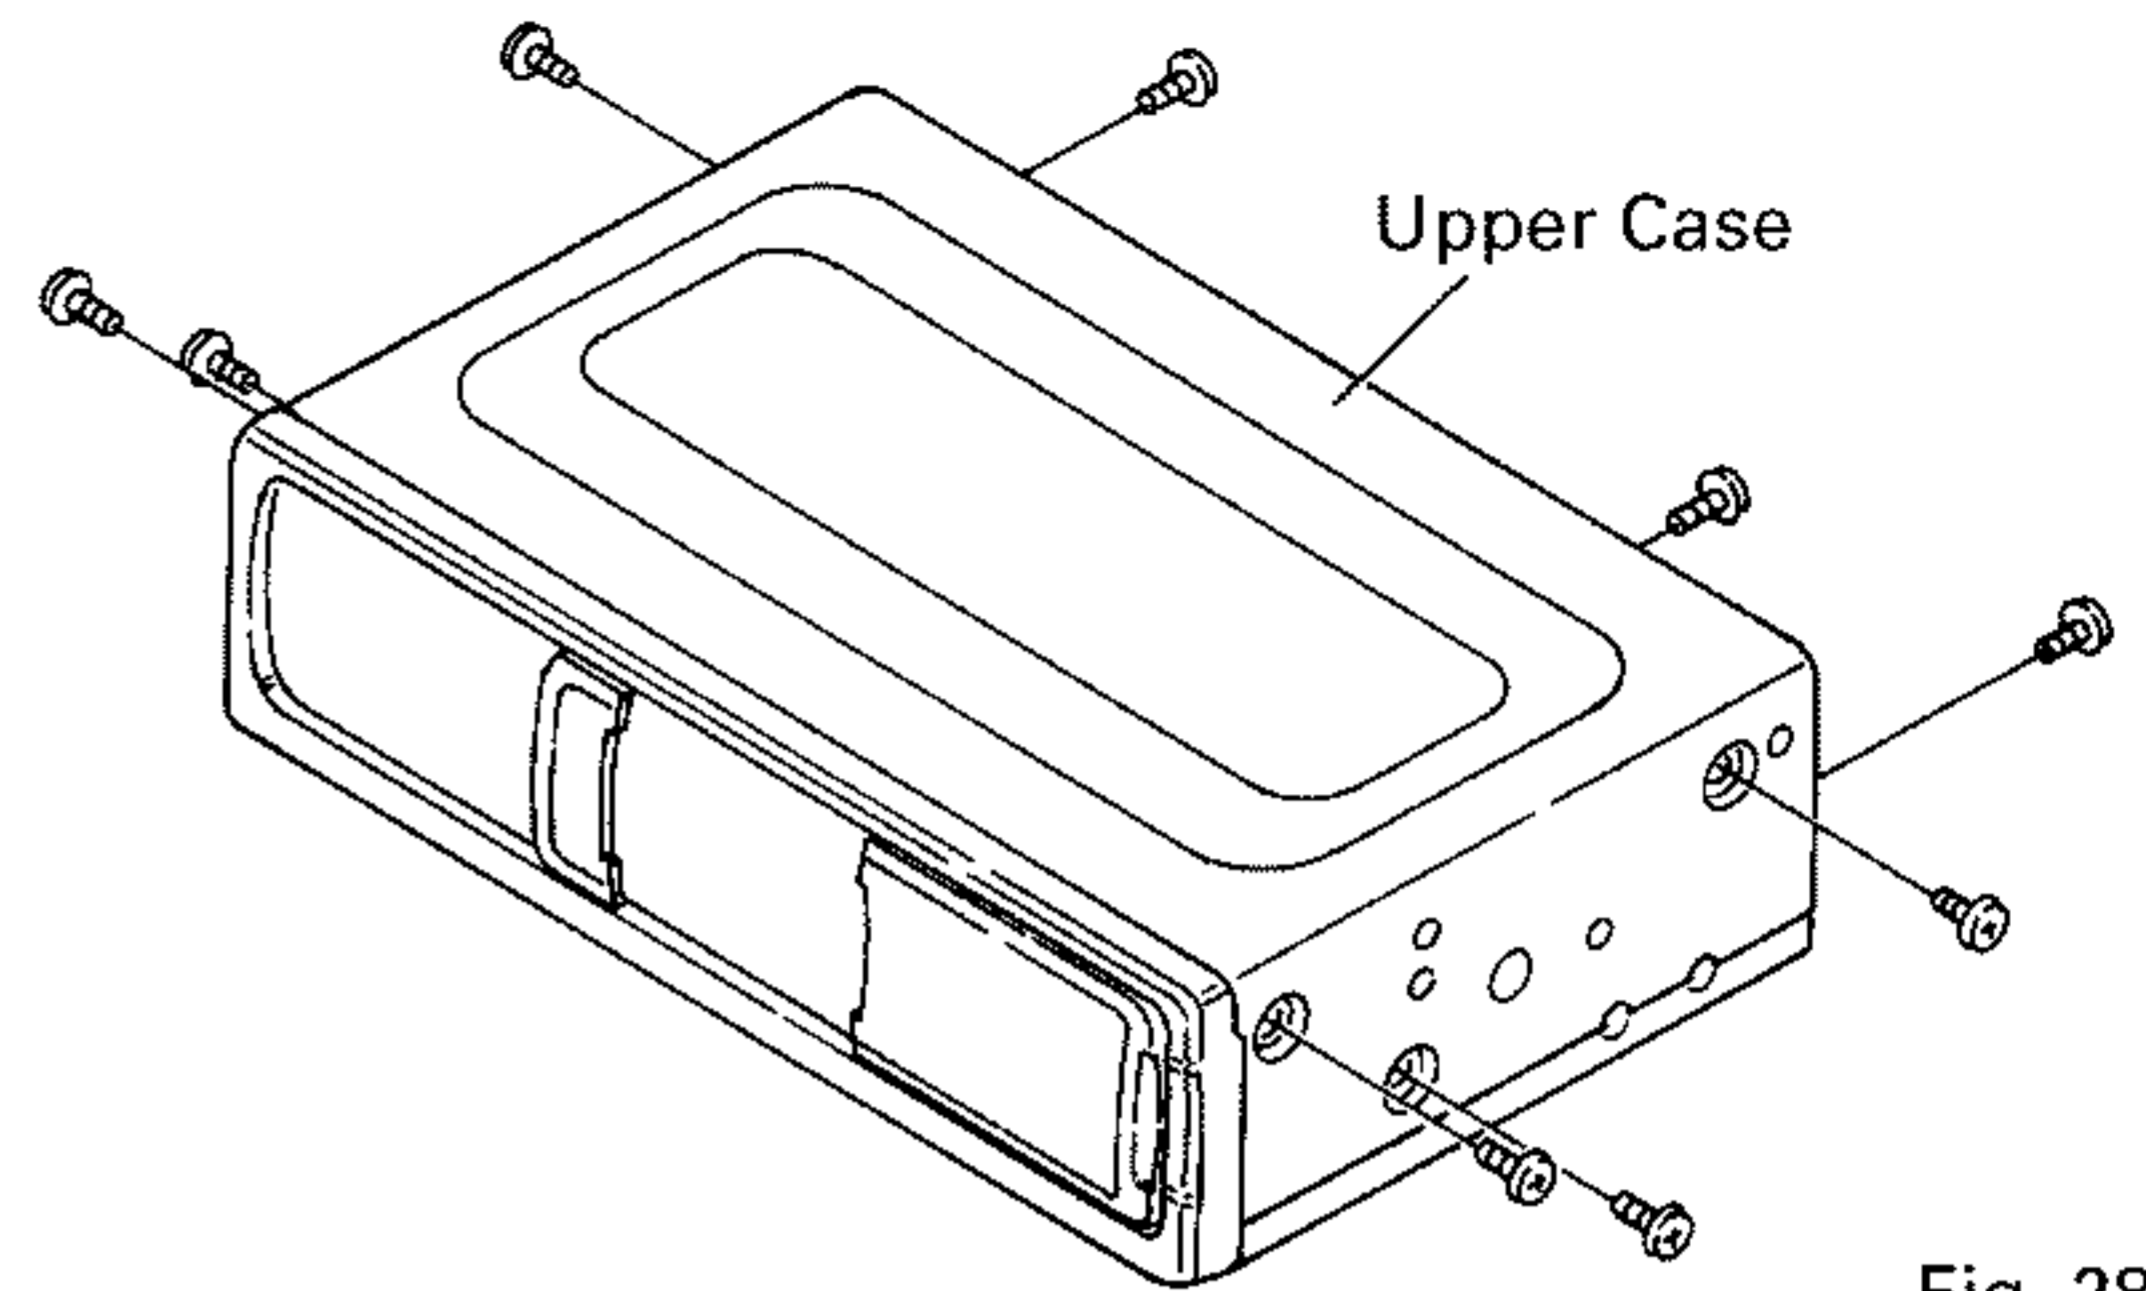


Fig. 28

#### ● Removing the CD Mechanism Module

1. Remove the four dampers.
2. Remove the two springs.
3. Disconnect the connector and then remove the CD mechanism module.

#### ● Removing the Grille Assy

1. Press the two tabs indicated by arrows and then pull out the grille assy.

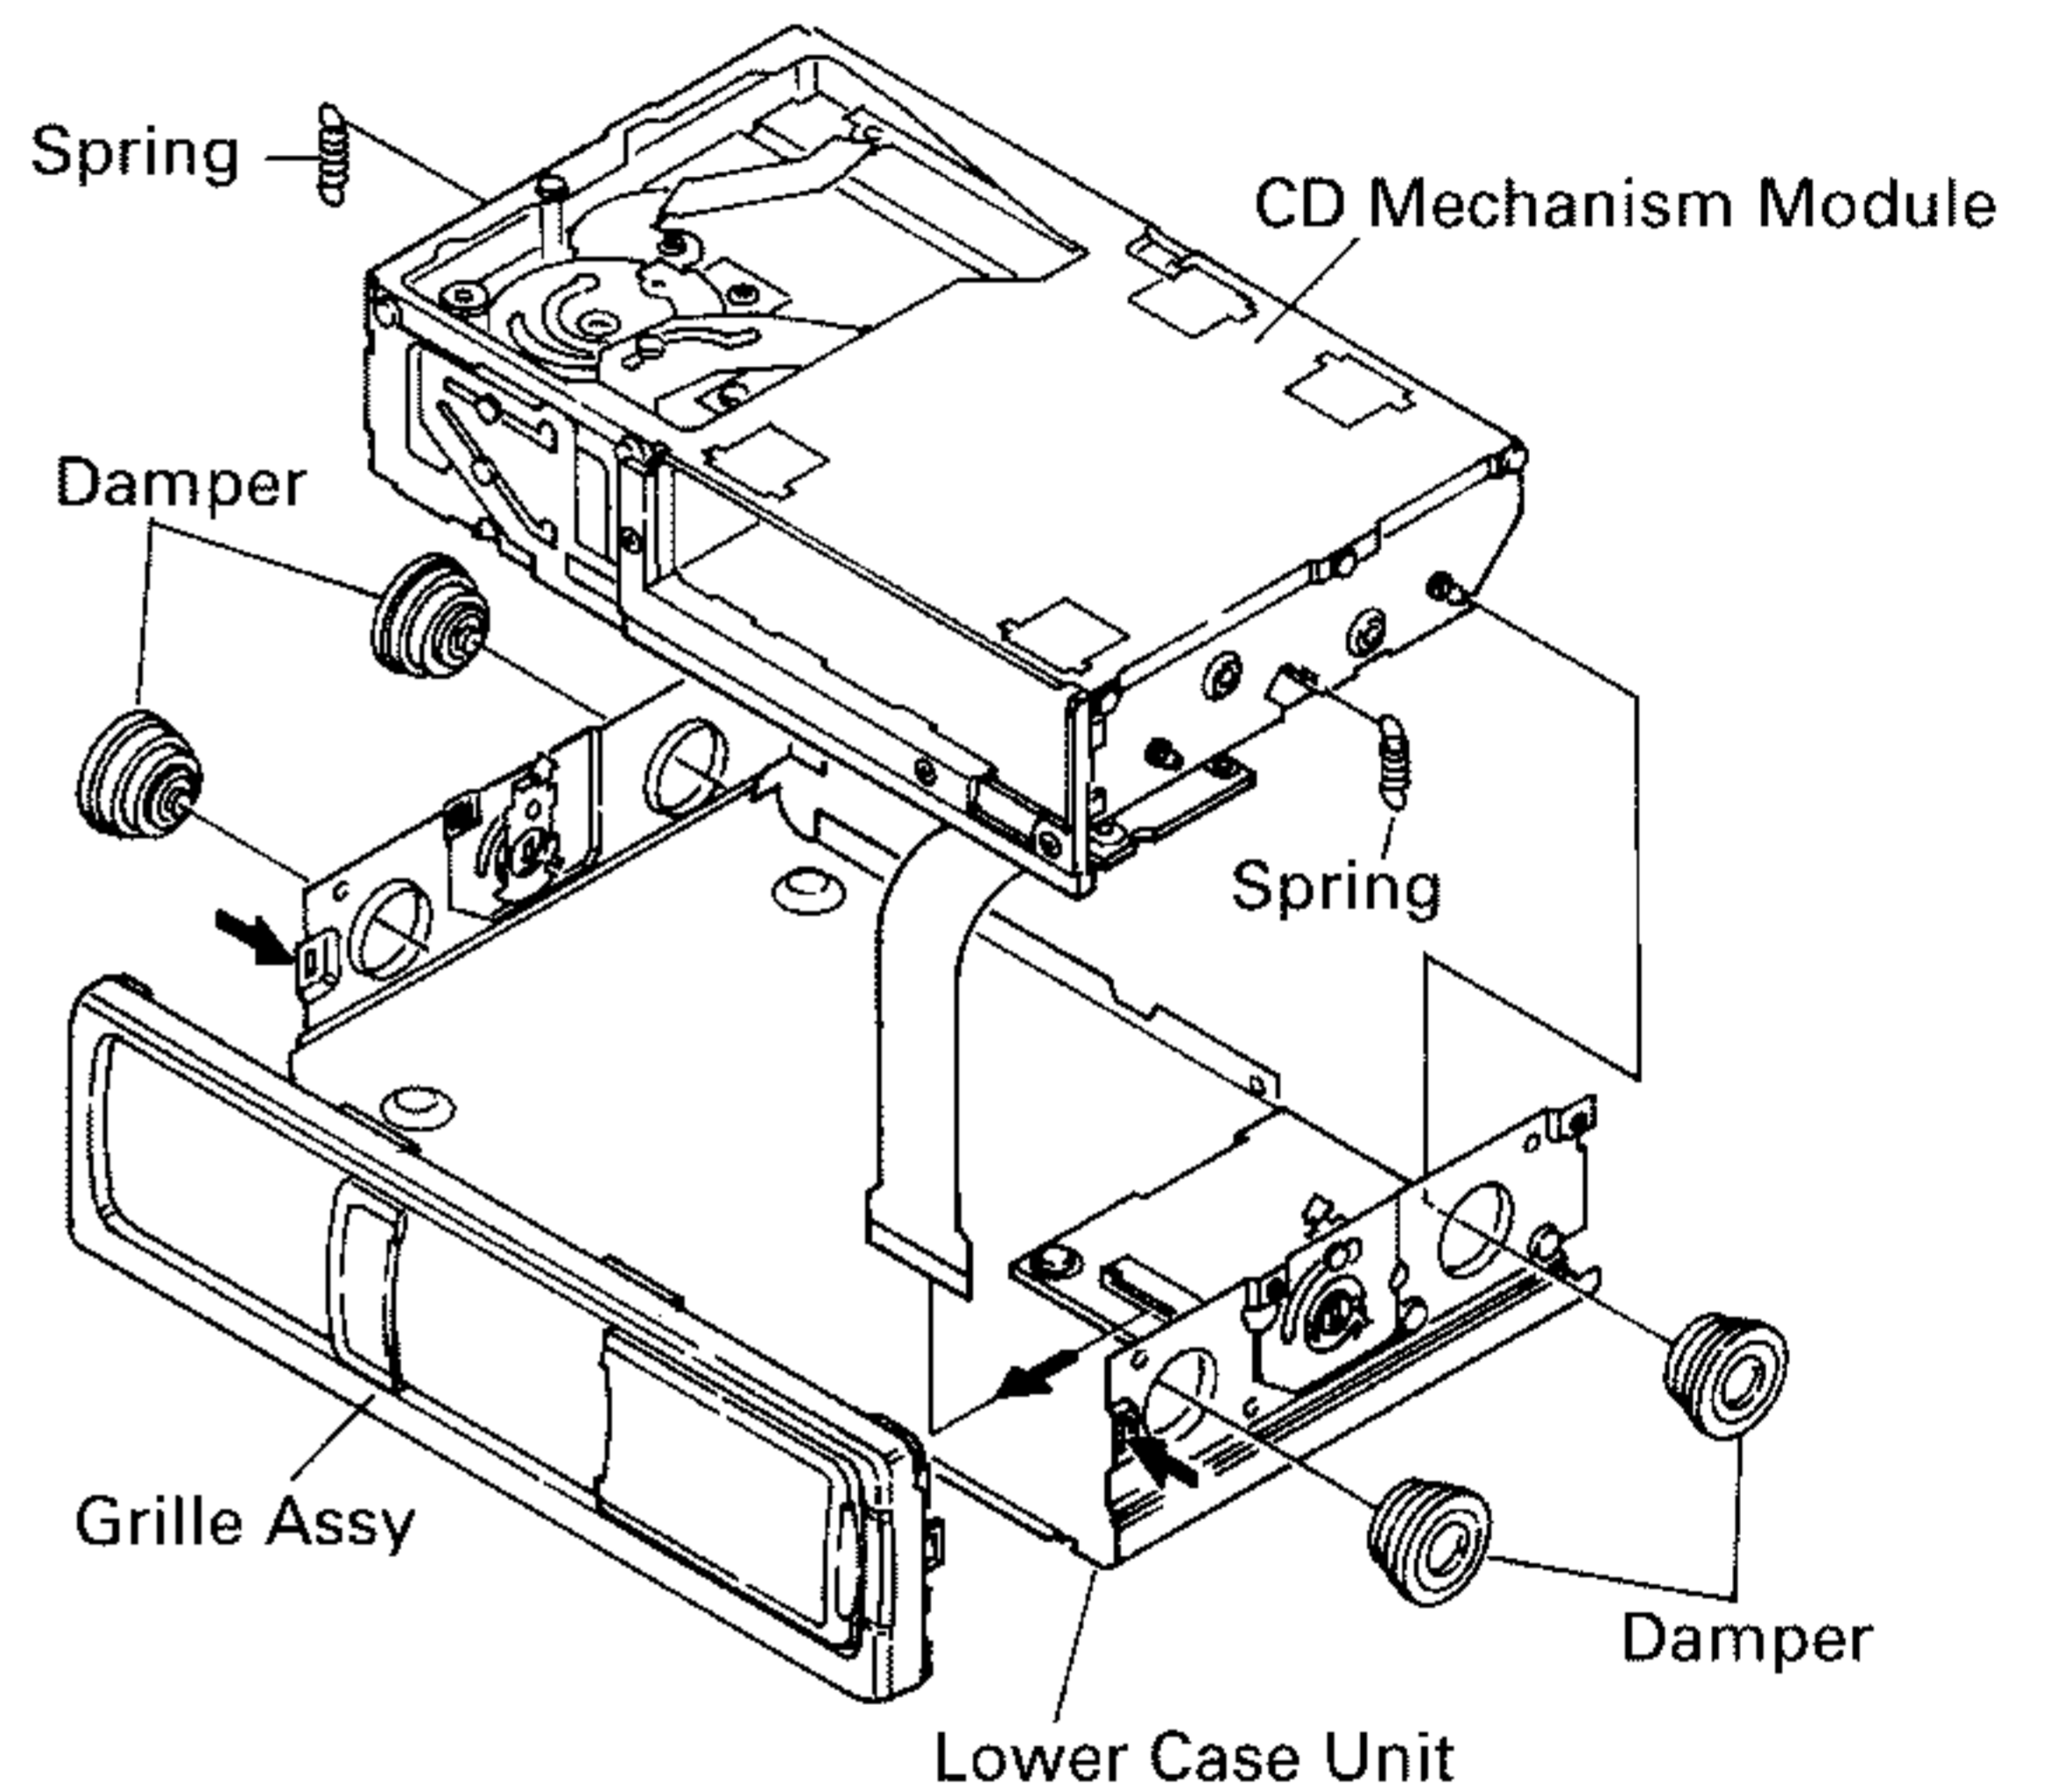


Fig. 29

#### ● Removing the System Unit

1. Remove the two screws A and the screw B.
2. Stretch the claw indicated by arrow and then remove the system unit.

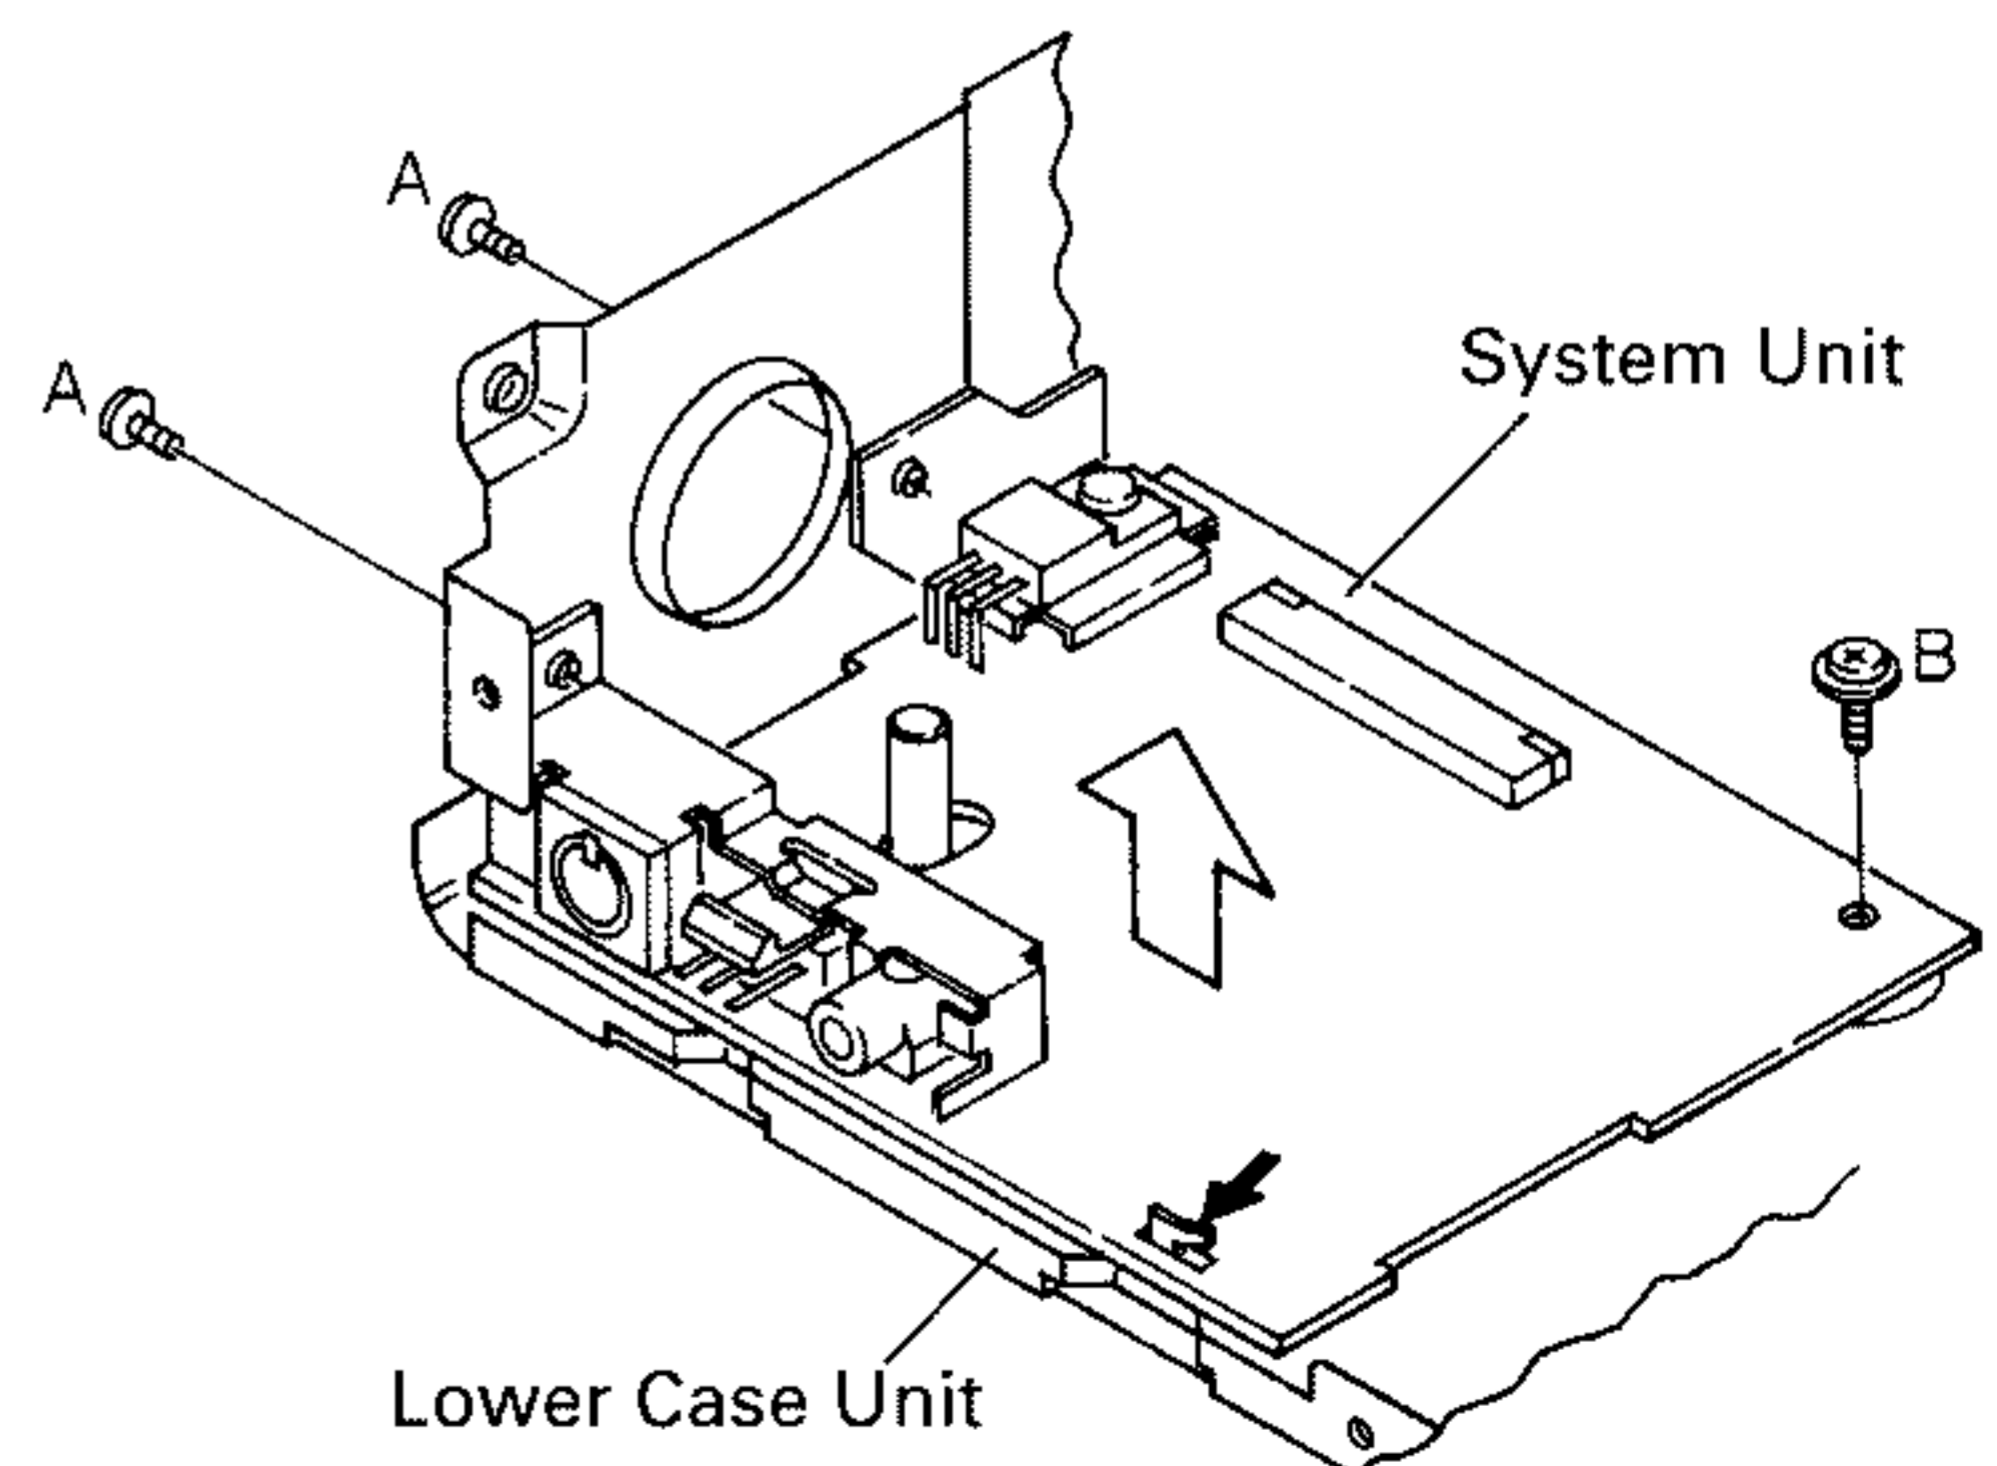


Fig. 30


## 7.2.2 TEST MODE

### 1)Precautions

- This unit uses a single power supply (+5V) for the regulator. The signal reference potential, therefore, is connected to REFO(approx. 2.5V) instead of GND. If REFO and GND are connected to each other by mistake during adjustments, not only will it be impossible to measure the potential correctly, but the servo will malfunction and a severe shock will be applied to the pick-up. To avoid this, take special note of the following.  
Do not connect the negative probe of the measuring equipment to REFO and GND together. It is especially important not to connect the channel 1 negative probe of the oscilloscope to REFO with the channel 2 negative probe connected to GND.  
Since the frame of the measuring instrument is usually at the same potential as the negative probe, change the frame of the measuring instrument to floating status.  
If by accident REFO comes in contact with GND, immediately switch the regulator or power OFF.
- Always make sure the regulator is OFF when connecting and disconnecting the various filters and wiring required for measurements.
- Before proceeding to further adjustments and measurements after switching regulator ON, let the player run for about one minute to allow the circuits to stabilize.
- Since the protective systems in the unit's software are rendered inoperative in test mode, be very careful to avoid mechanical and /or electrical shocks to the system when making adjustment.
- Test mode starting procedure  
Pressing the DISPLAY POWER and RESET keys together.

- Test mode cancellation  
Switch ACC, back-up OFF or pressing the reset key.
- Disc detection during loading and eject operations is performed by means of a photo transistor in this unit. Consequently, if the inside of the unit is exposed to a strong light source when the outer casing is removed for repairs or adjustment, the following malfunctions may occur.  
\*During PLAY, even if the eject button is pressed, the disc will not be ejected and the unit will remain in the PLAY mode.  
\*The unit will not load a disc.  
When the unit malfunctions this way, either re-position the light source, move the unit or cover the photo transistor.
- When loading and unloading discs during adjustment procedures, always wait for the disc to be properly clamped or ejected before pressing another key. Otherwise, there is a risk of the actuator being destroyed.
- Turn power off when pressing the button TRACK UP+ or the button TRACK DOWN- key for focus search in the test mode. (Or else lens may stick and the actuator may be damaged.)
- SINGLE/4TRK/10TRK/32TRK will continue to operate even after the key is released. Tracking is closed the moment C-MOVE is released.
- JUMP MODE resets to SINGLE as soon as power is switched off.

● Flow Chart

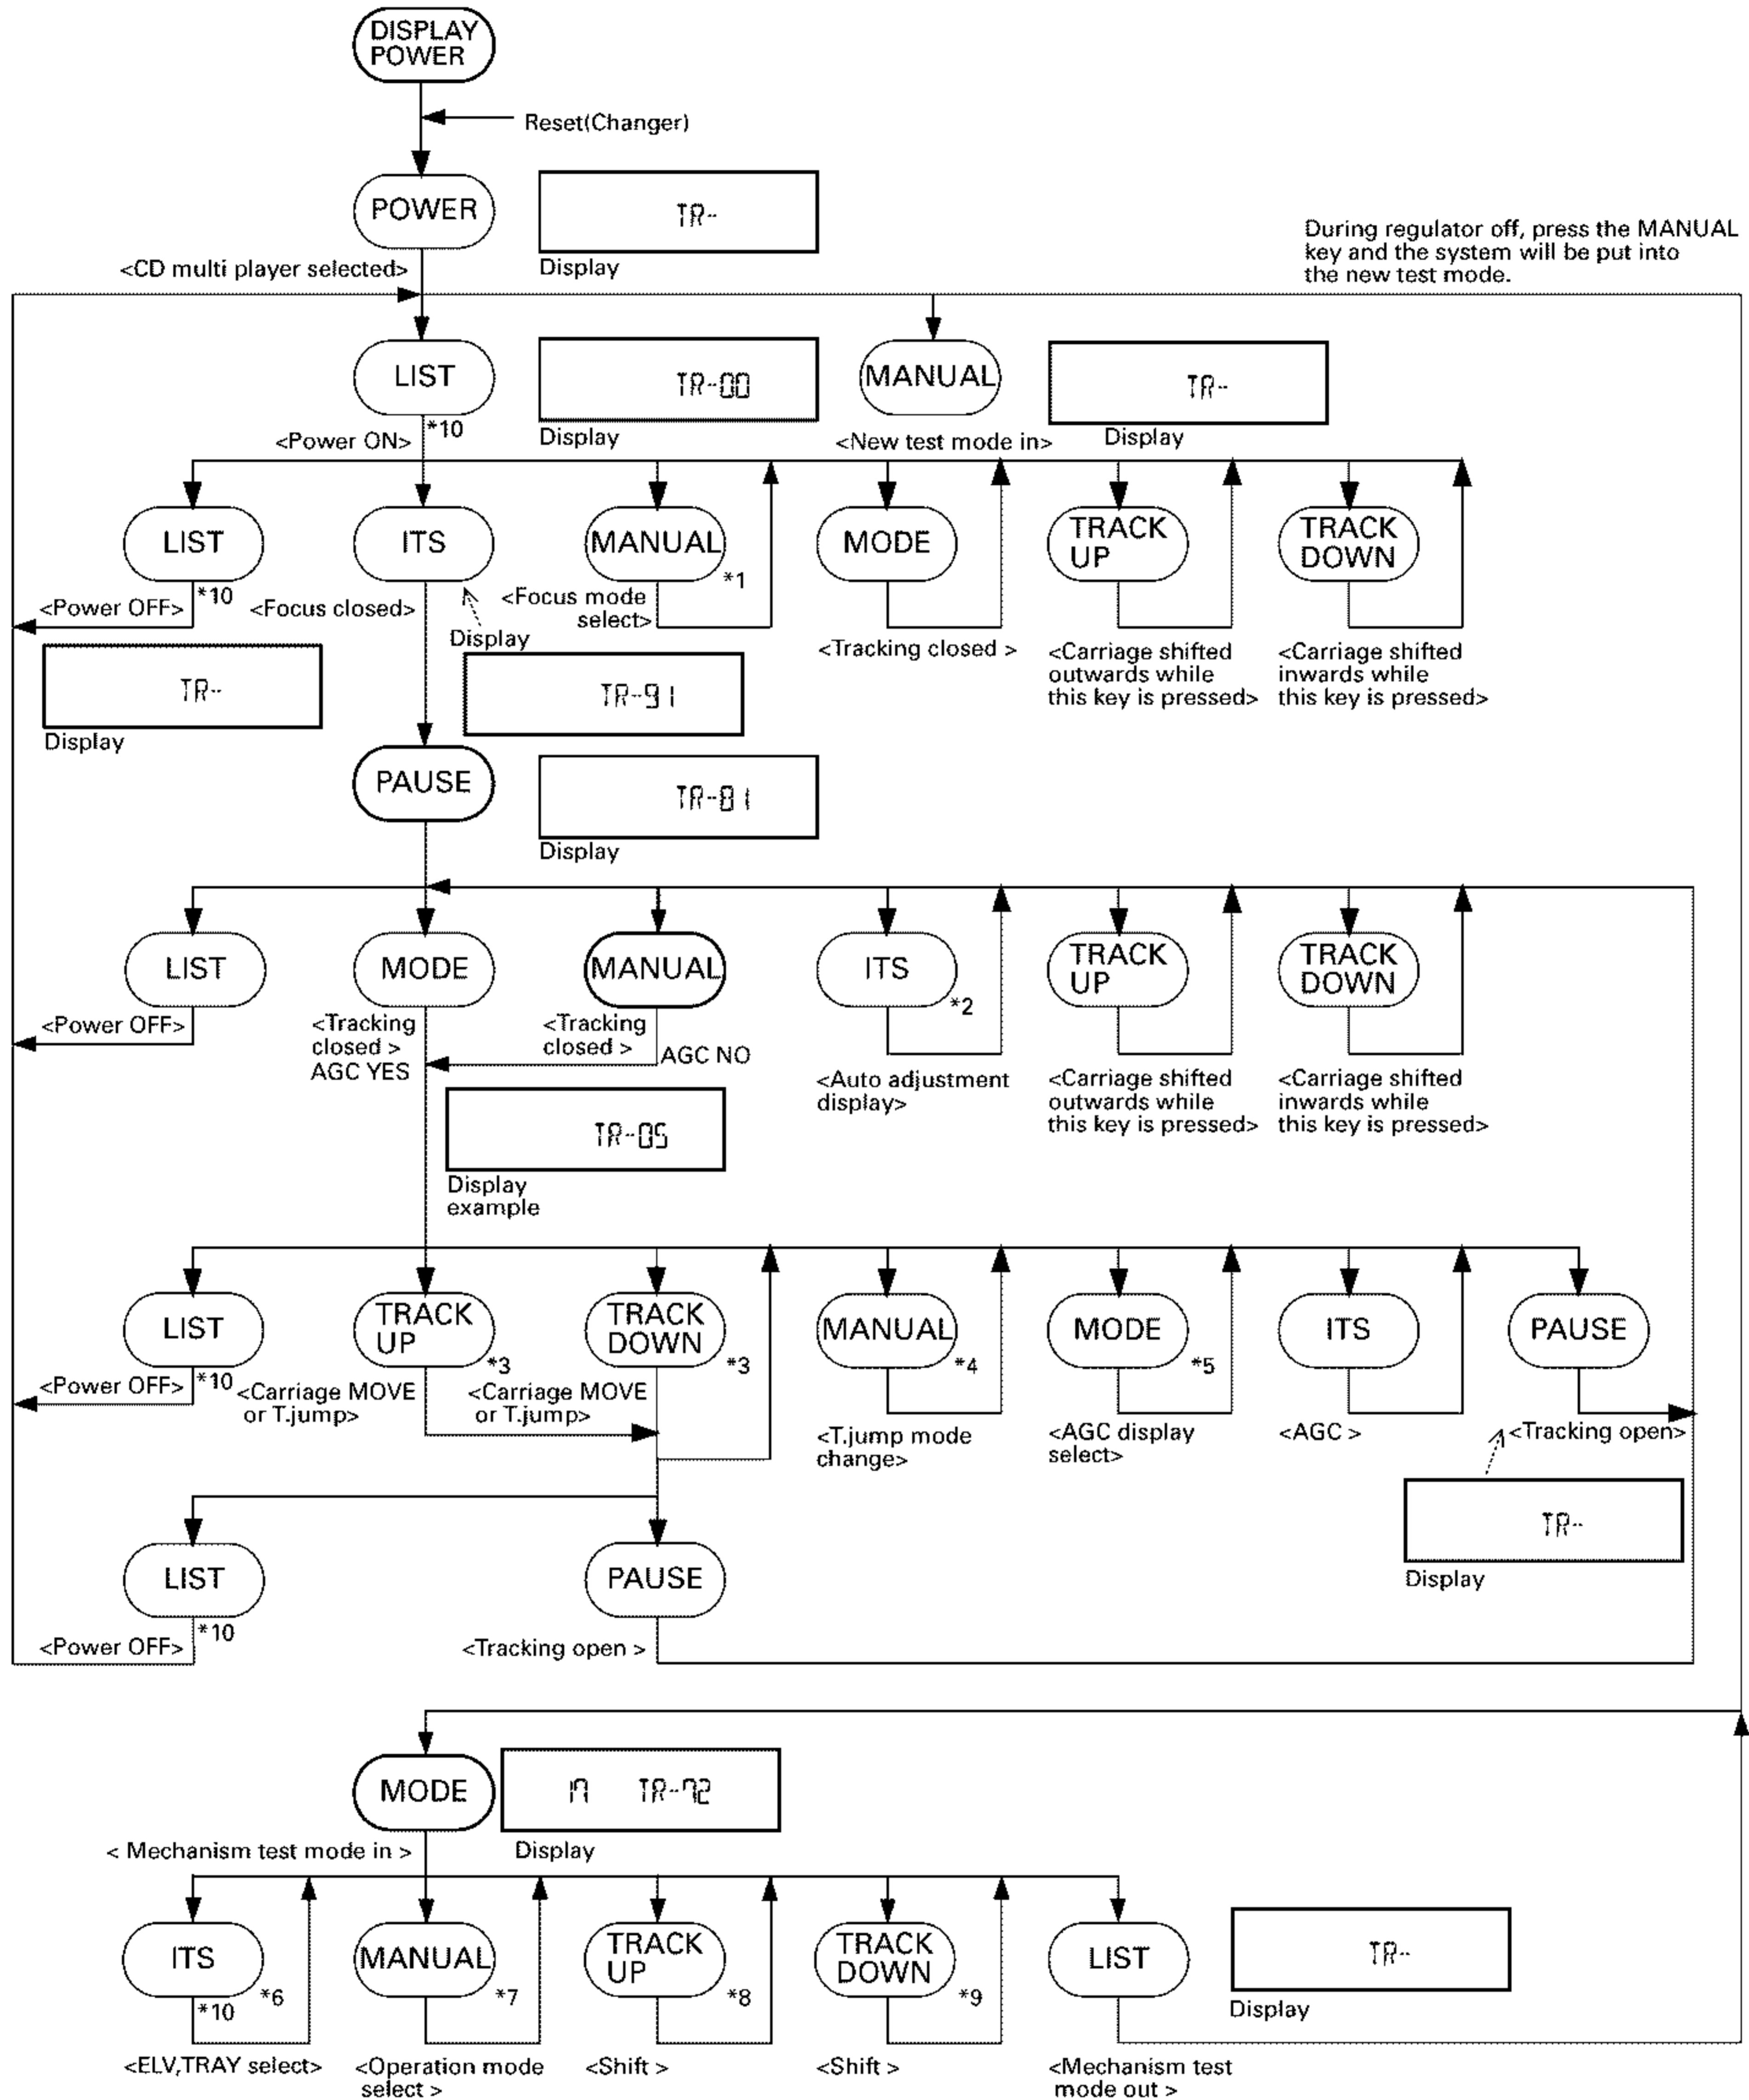

During regulator off, press the MANUAL key and the system will be put into the new test mode.

\*1 Normal focus close → S curve check → Focus EQ check  
 00 Display 01 02

\*2 Normal display → Focus cancel → Tracking offset → Tracking balance (Close spindle-rough)

\*3 100 TRK jump and carriage MOVE continue only while the keys are released

\*4 SINGLE → 4TRK → 10TRK → 32TRK → 100TRK → C.MOVE

\*5 Normal display → Focus gain → Tracking gain → Focus bias

\*6 ELV motor select → TRAY motor select  
 17 TR-- 0X Display 72 TR-- 1X

\*7 8ms pulse drive → 24ms pulse drive → DC drive  
 17 TR-- 00 Display 17 TR-- 01 17 TR-- 02"

48ms pulse drive → 100ms pulse drive → DC drive  
 17 TR-- 10 Display 17 TR-- 11 17 TR-- 12

\*8 ELV select : ELV down (Disc 6 to 1)  
 TRAY select : TRAY out

\*9 ELV select : ELV up (Disc 1 to 6)  
 TRAY select : TRAY in

\*10 Press LIST key for more than 2 seconds.



## ● New Test Mode(aging operation and setup analysis)

The single CD player plays in normal mode. After being set up, it will display FOK (focus), LOCK (spindle), subcode, sound skip, protection against a mechanical error or the like, occurrence of an error, cause and time of an expiry, if any, (and disc number)

During the setup, the CD software operation status (internal RAM and C-point)is displayed.

### (1) How to enter NEW TEST Mode

See the test mode flow chart Page 57.

### (2) Relations of keys between TEST, NEW TEST and Mechanism TEST Modes

Keys	Test Mode		New Test Mode		Mechanism Test Mode
	Regulator OFF	Regulator ON	PLAY in progress	Error Occurred, Protection Activated	
LIST	Regulator ON	Regulator OFF	—	Time of occurrence/ cause of error select	back to the test mode
TRACK UP	—	FWD-Kick	FF/TRACK+	—	Playing the mechanism
TRACK DOWN	—	REV-Kick	REV/TRACK-	—	Playing the mechanism
MODE	—	Tracking close	SCAN	—	—
PAUSE	—	Tracking open	MODE	—	—
ITS	—	Focus close	—	—	TRAY/ELV select
MANUAL	To New Test Mode	Jump Mode Select	AUTO/MANU	TRACK No./time of occurrence select	Operation step select

Operations,such as EJECT, CD ON/OFF, etc. are performed normally

### (3) Error Cause (Error Number) Code


Error Code	Classification	Mode	Description	Cause/Detail	Scratch, Stain, Vibration, Servo defect, etc...
40	ELECTRIC	PLAY	FOK=L 100ms	Put out of focus	
41	ELECTRIC	PLAY	LOCK=L 100ms	Spindle unlock	
42	ELECTRIC	PLAY	Subcode unacceptable 500ms	Failed to read subcode	
43	ELECTRIC	PLAY	Sound skipped	Last address memory operated	

### (4) Indicating an Operation Status During Setup

Status No.	Description	Protection operation
01	Carriage home mode started	None
02	Carriage moving inwards	10-second time out, Home switch failed
03	Carriage moving outwards	10-second time out, Home switch failed
05	Carriage moving outwards	None
11	Setup started	None
12	Spindle turn/Focus search started	None
13	Waiting for focus closure (XSI=L)	Failure to close focus
10,14	Waiting for focus closure (FOK=H)	Failure to close focus
15, 16, 17	Focus closed, Tracking open	Focus disrupted
18	During focus AGC	Focus disrupted
19	During tracking AGC	Disrupted focus
20	Waiting for MIRR, LOCK or subcode read Carriage closed, SPINDLE=ADAPTIVE	Focus disrupted, MIRR NG, Failure to lock, failed to read subcode

**(5) Example of Display.**


·SET UP in progress

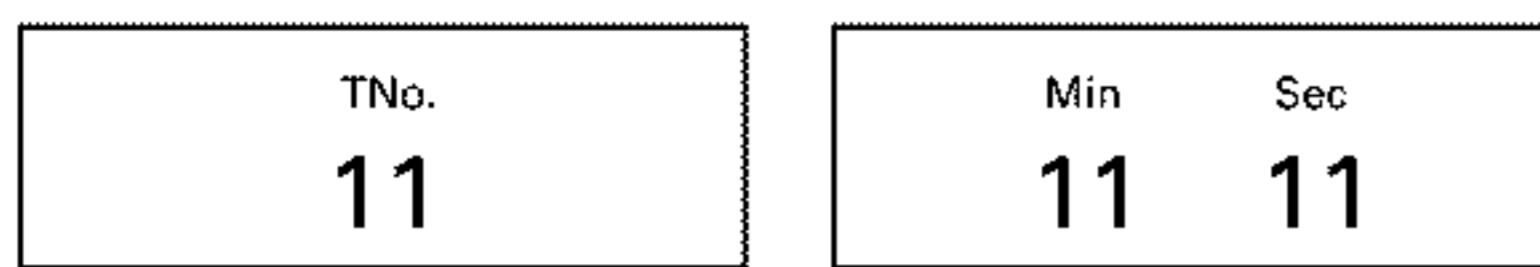

·Operation (PLAY, SEARCH, etc.) in progress perfectly identical with that in the normal mode.



·Protection/Error upon occurrence

(a)Error number indicated

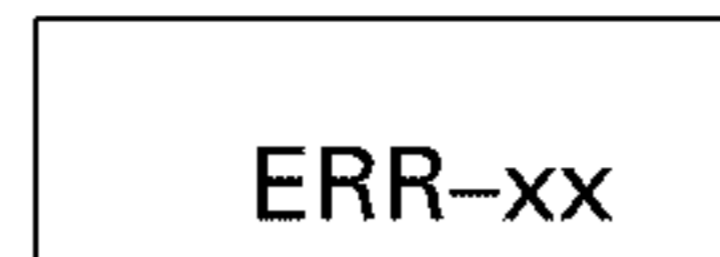


Select the display with the LIST key.


(b)Track number indicated

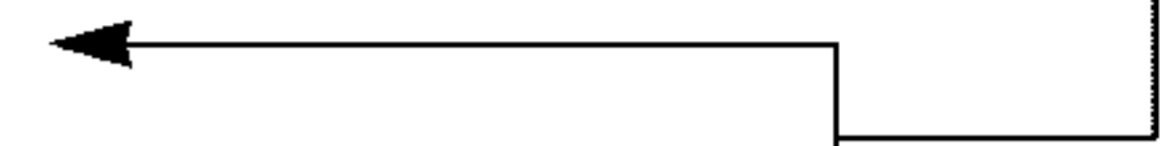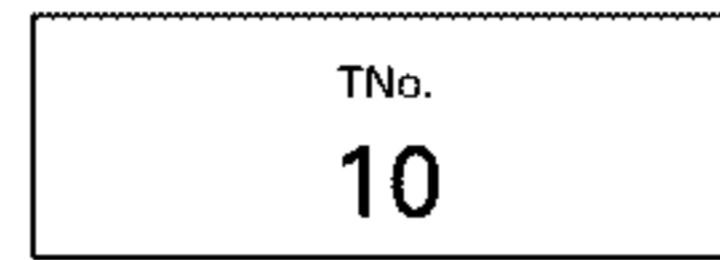

(c)Absolute time indicated

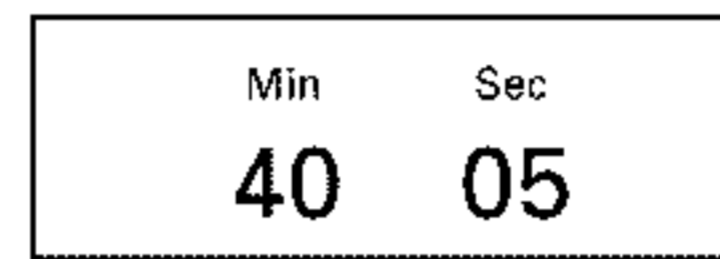

Select the display with the MANUAL key.



**● Error Number Indication**

If the CD should fail to operate or if an error has taken place during operation the player will enter into the error mode, and the cause of the error will be numerically indicated.

This is aimed at assisting in analysis or repair.

**(1) Basic Means of Display**

·Examples of Display ERR-XX

**(2) Error Codes**

Error Code	Classification	Description	Cause/Detail
10	ELECTRIC	Carriage home failure	Carriage doesn't move to or from the innermost position →Home switch failed and/or carriage immobile
11	ELECTRIC	Focus failure	Focus failed →Defects, disc upside-down, severe vibration
12	ELECTRIC	SETUP failure Subcode failure	Spindle failed to lock or subcode unreadable →Spindle defective, defect, severe vibration
14	ELECTRIC	Mirror failure	Unrecorded CD-R The disc is upside-down, defects, vibration
17	ELECTRIC	Set up failure	AGC protect failed →Defects, disc upside-down, severe vibration
19	ELECTRIC	Set up failure	Tracking error waveform is too unbalanced (>50%) or level is too small →The pickup unit or tracking error circuitry is N.G.
30	ELECTRIC	Search time out	Failed to reach target address →Carriage/tracking defective and/or defects
A0	SYSTEM	Power failure	Power overvoltage or short circuit detected →Switching transistor defective and/or power abnormal
A1	SYSTEM	Mechanism power failure	Mechanism elevation reference voltage is out of prescription →EREF adjustment VR and/or power abnormal
50	MECHANISM	An error upon ejection	MAG switch release time has time out Elevation time out when eject
60	MECHANISM	An error while putting in and out the tray	Tray in / out time has time out Tray is caught when put in
70	MECHANISM	An error upon elevation	Elevation time has time out
80	MECHANISM	An error with an empty magazine inserted	No disc is available

\* Setup means a series of operations after focusing up to sound output.

7.3 BLOCK DIAGRAM

● SYSTEM

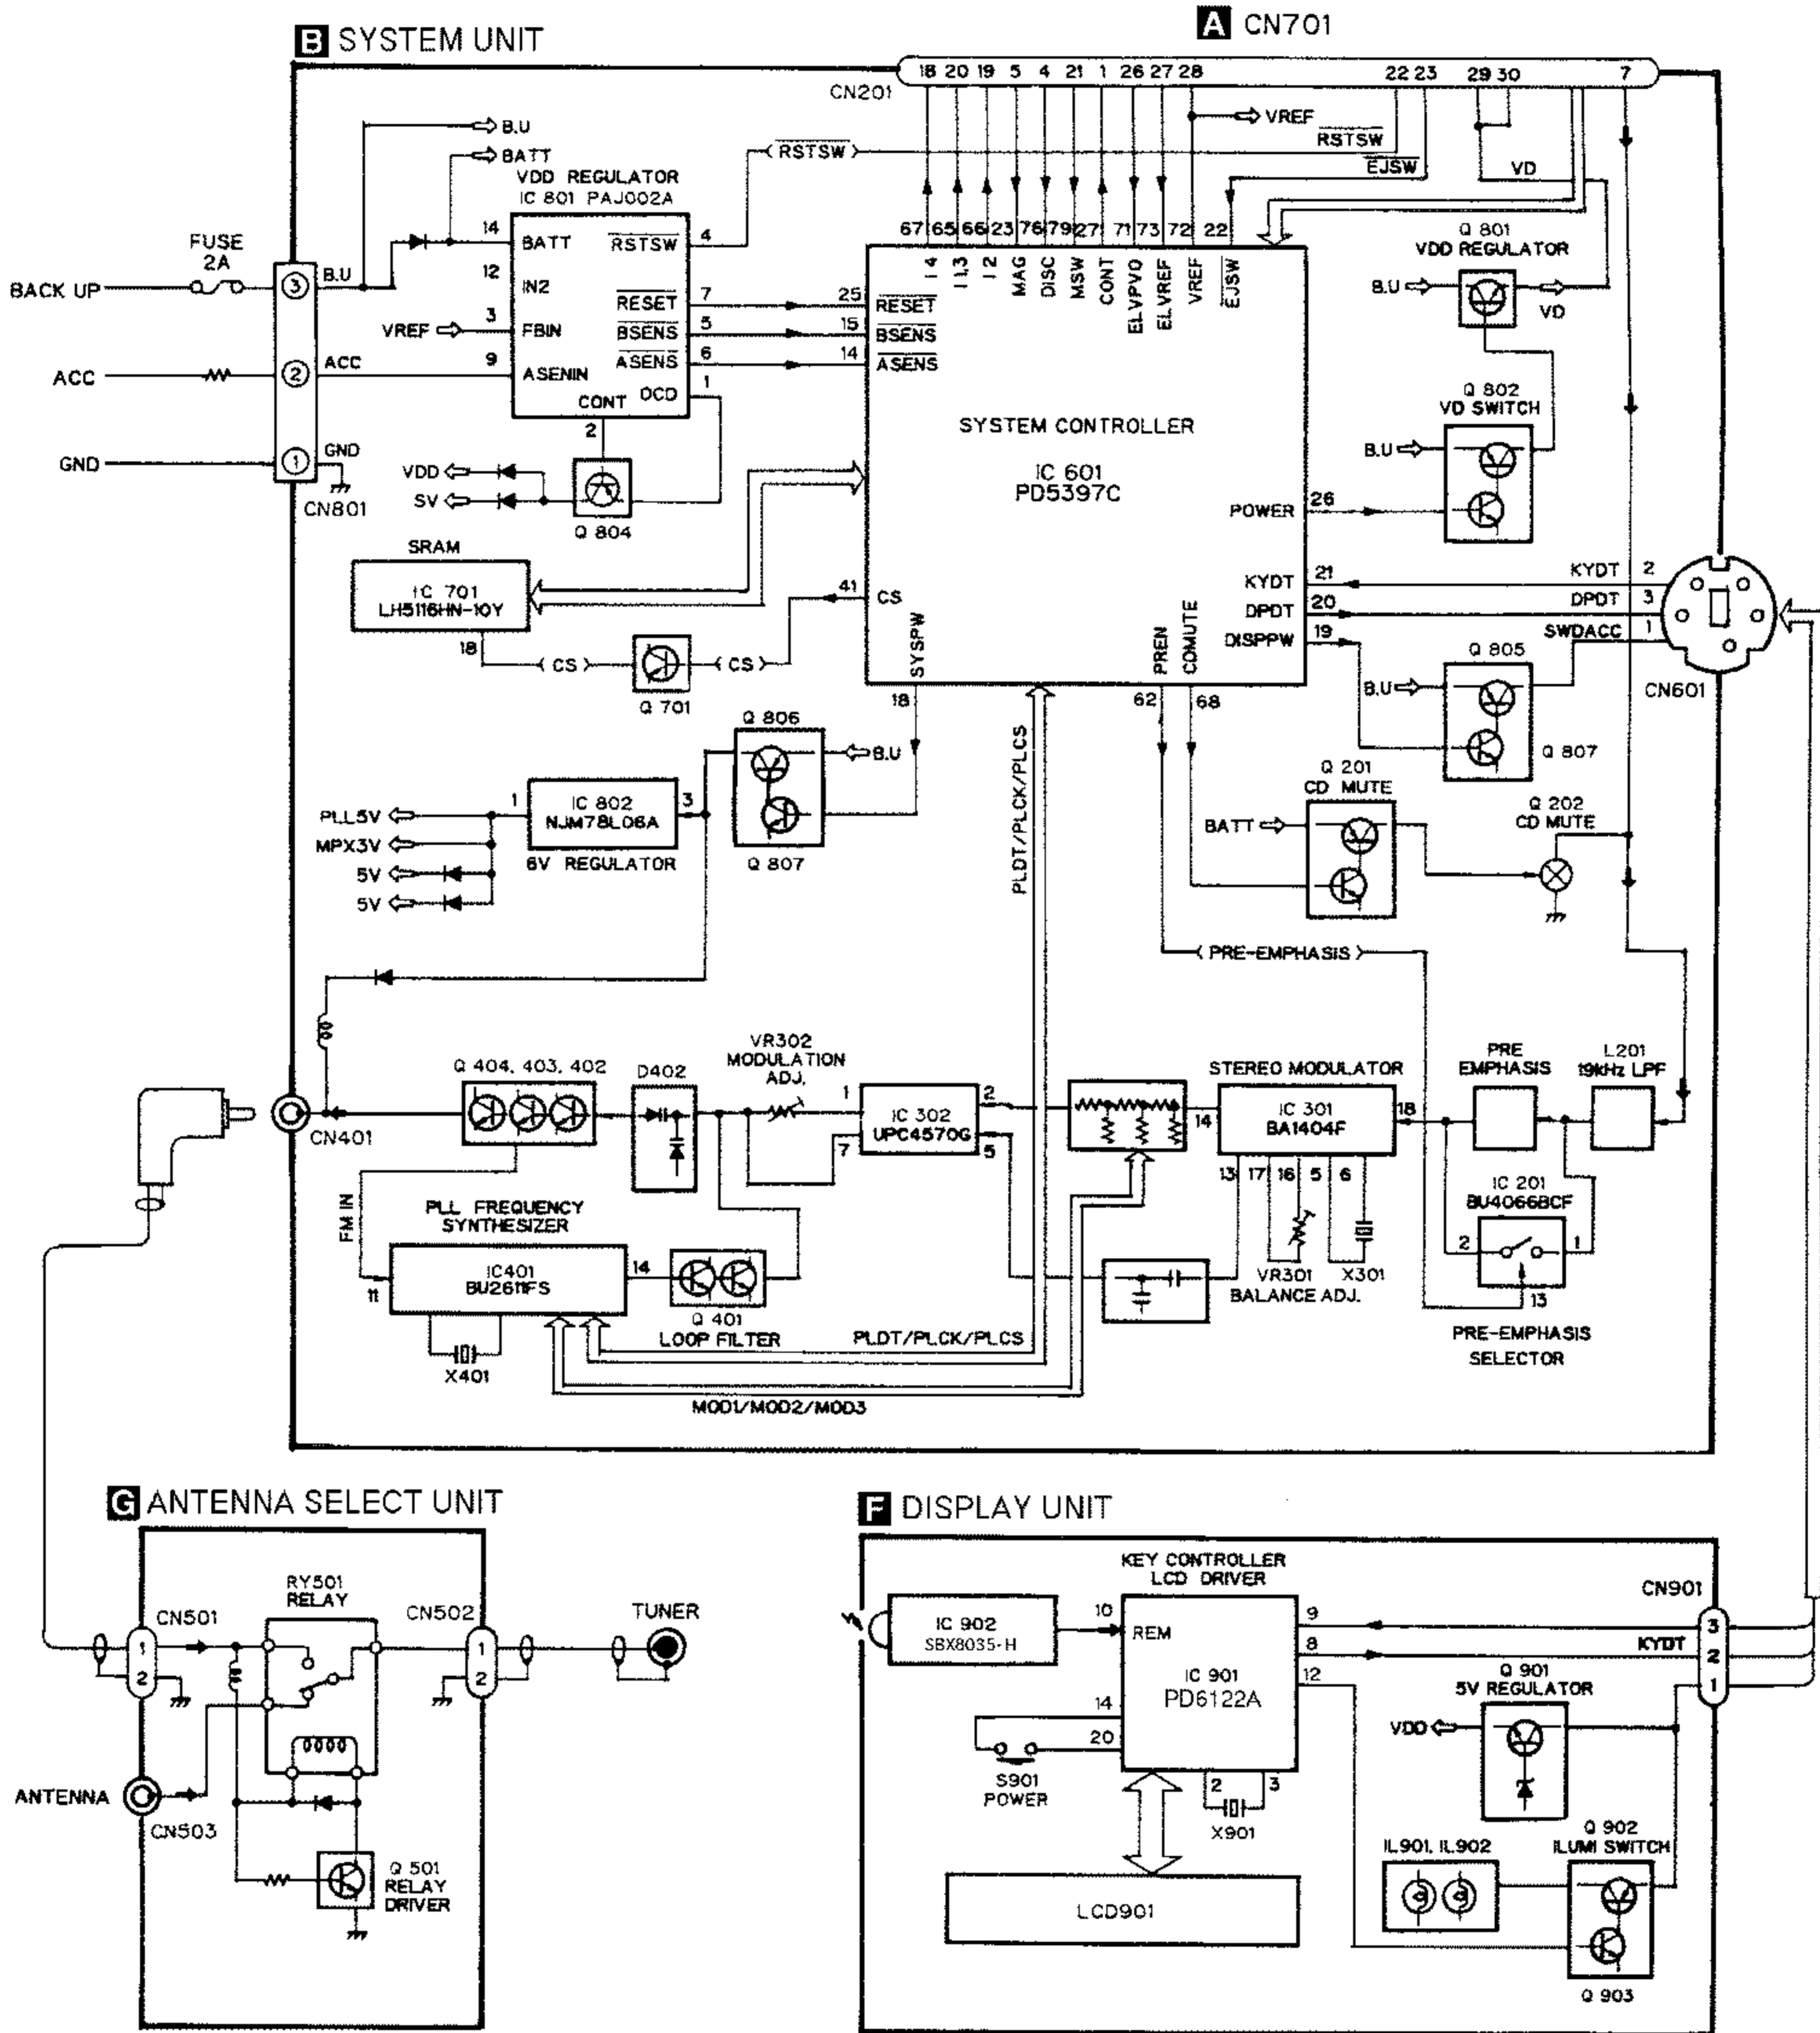


Fig. 31

● CD MECHANISM MODULE


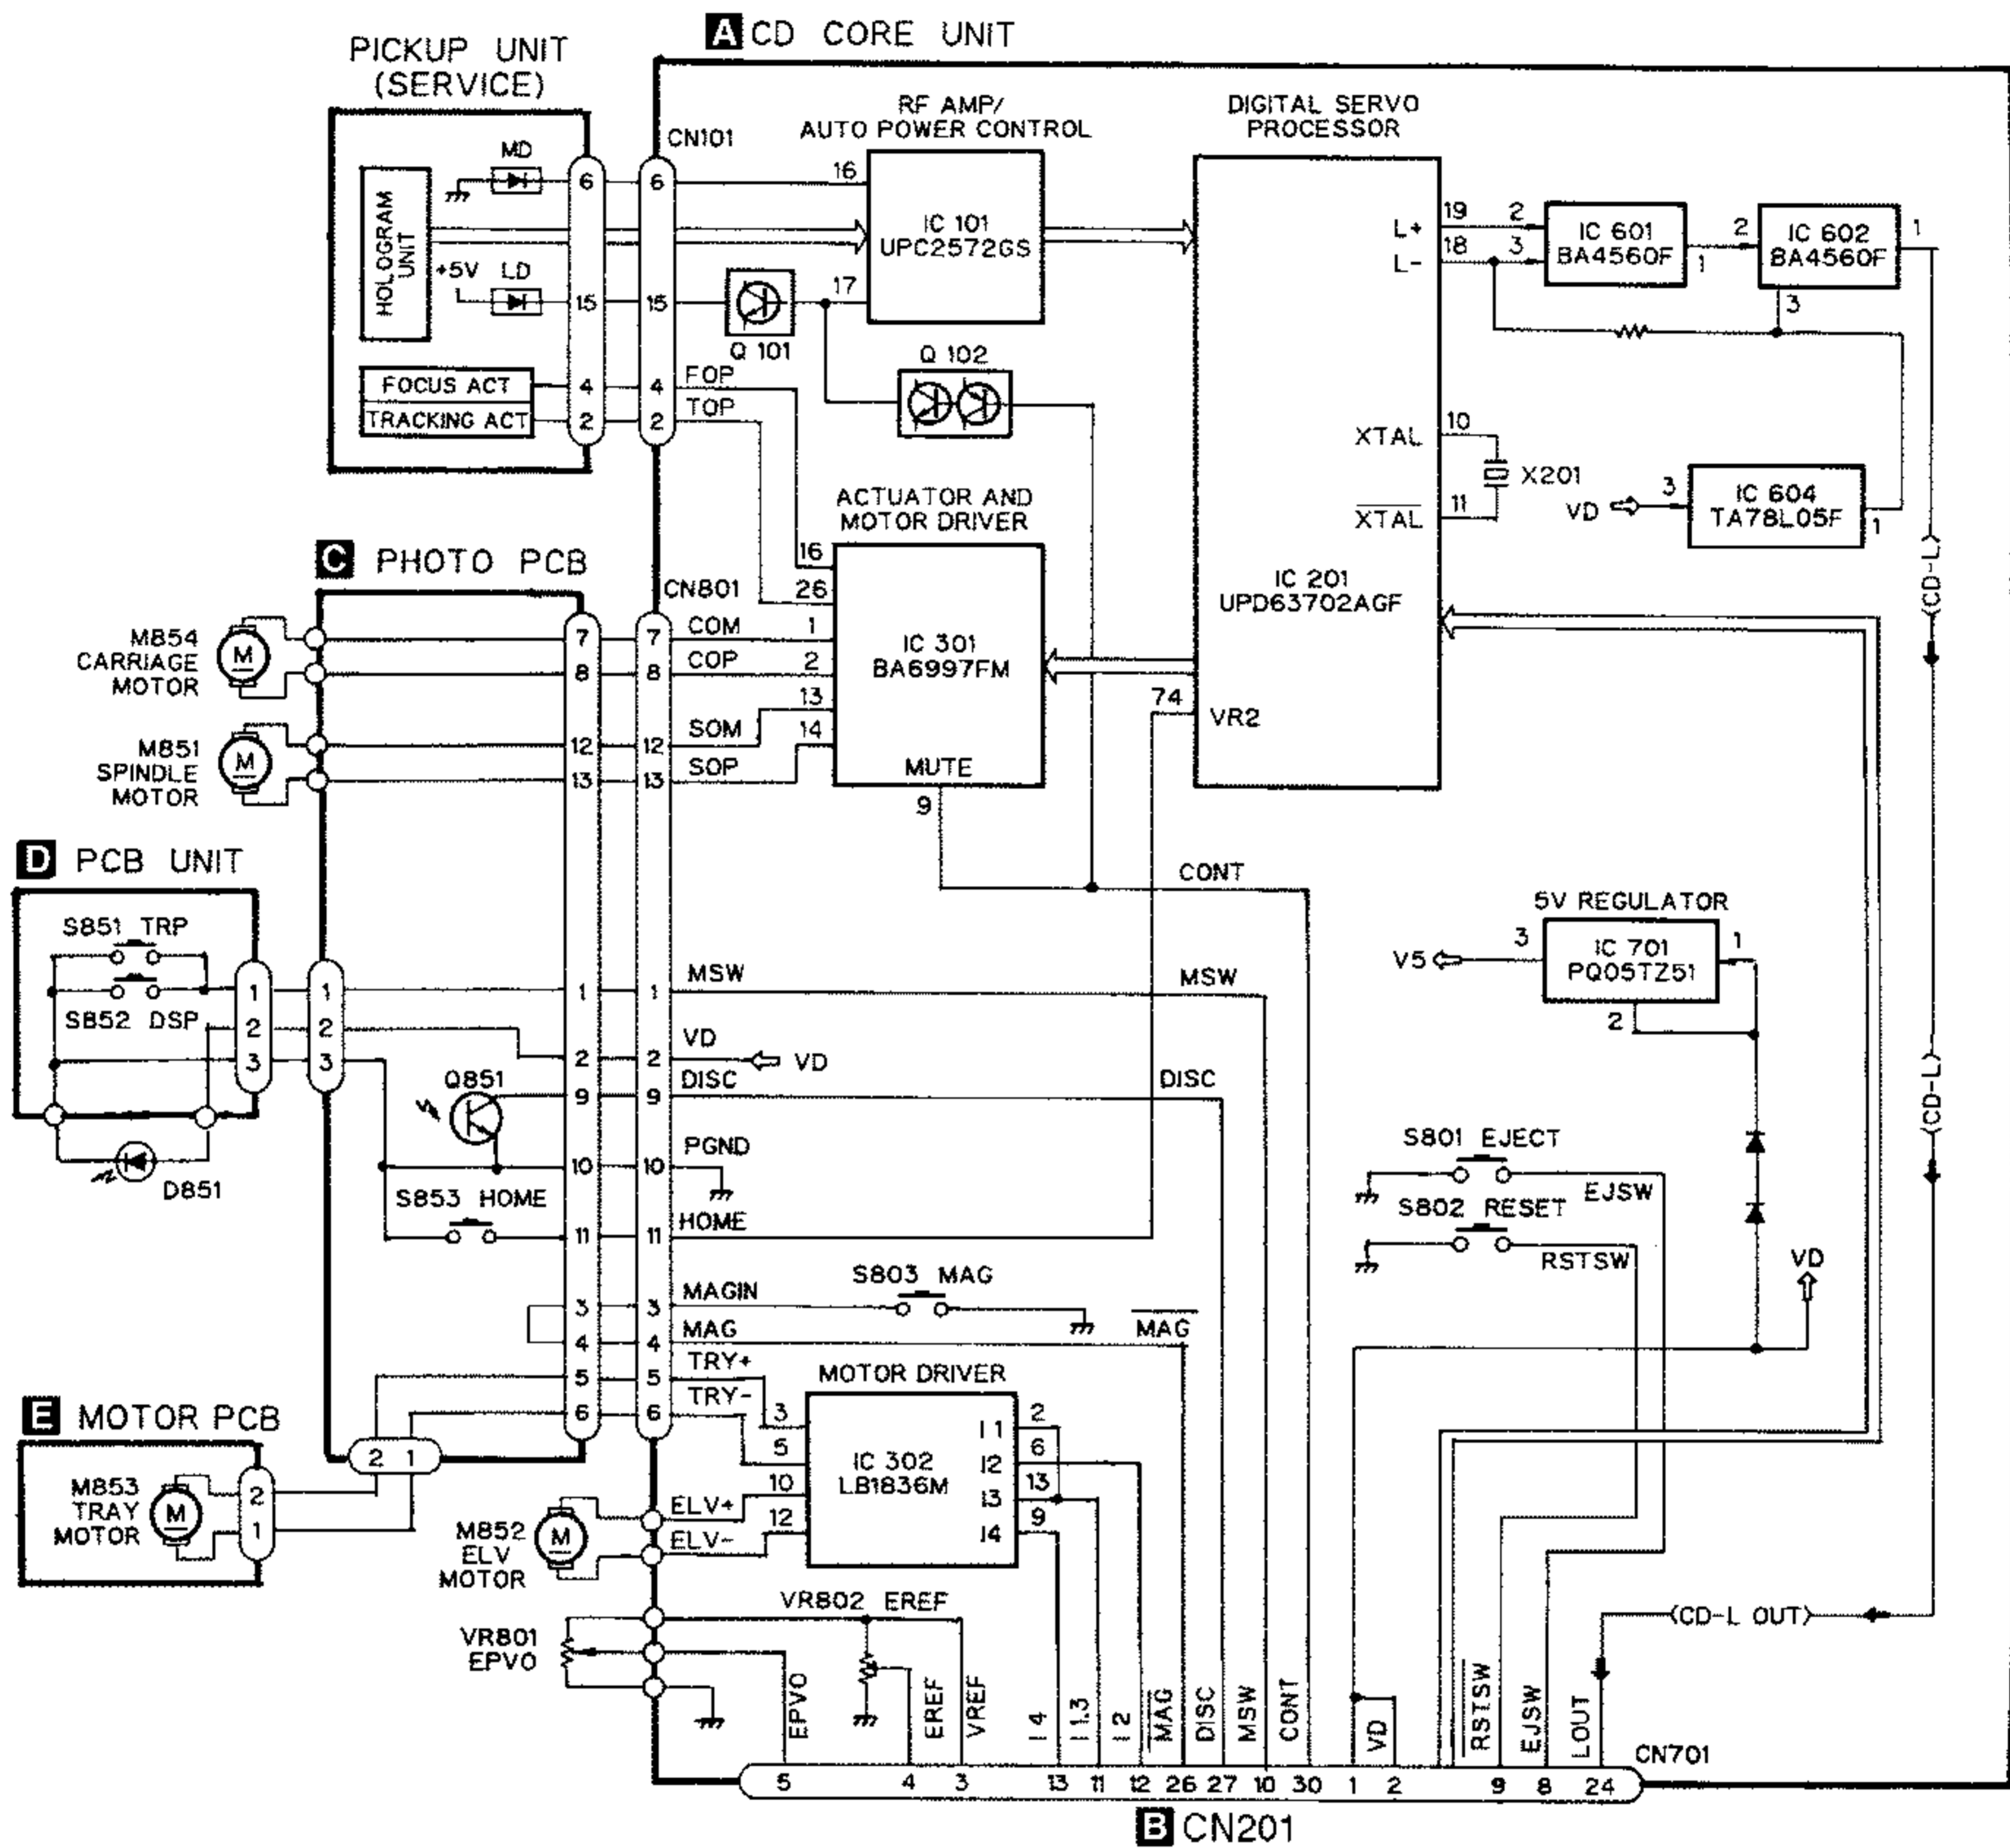


Fig. 32

MC-Service

## 8. OPERATIONS AND SPECIFICATIONS

### 8.1 OPERATION

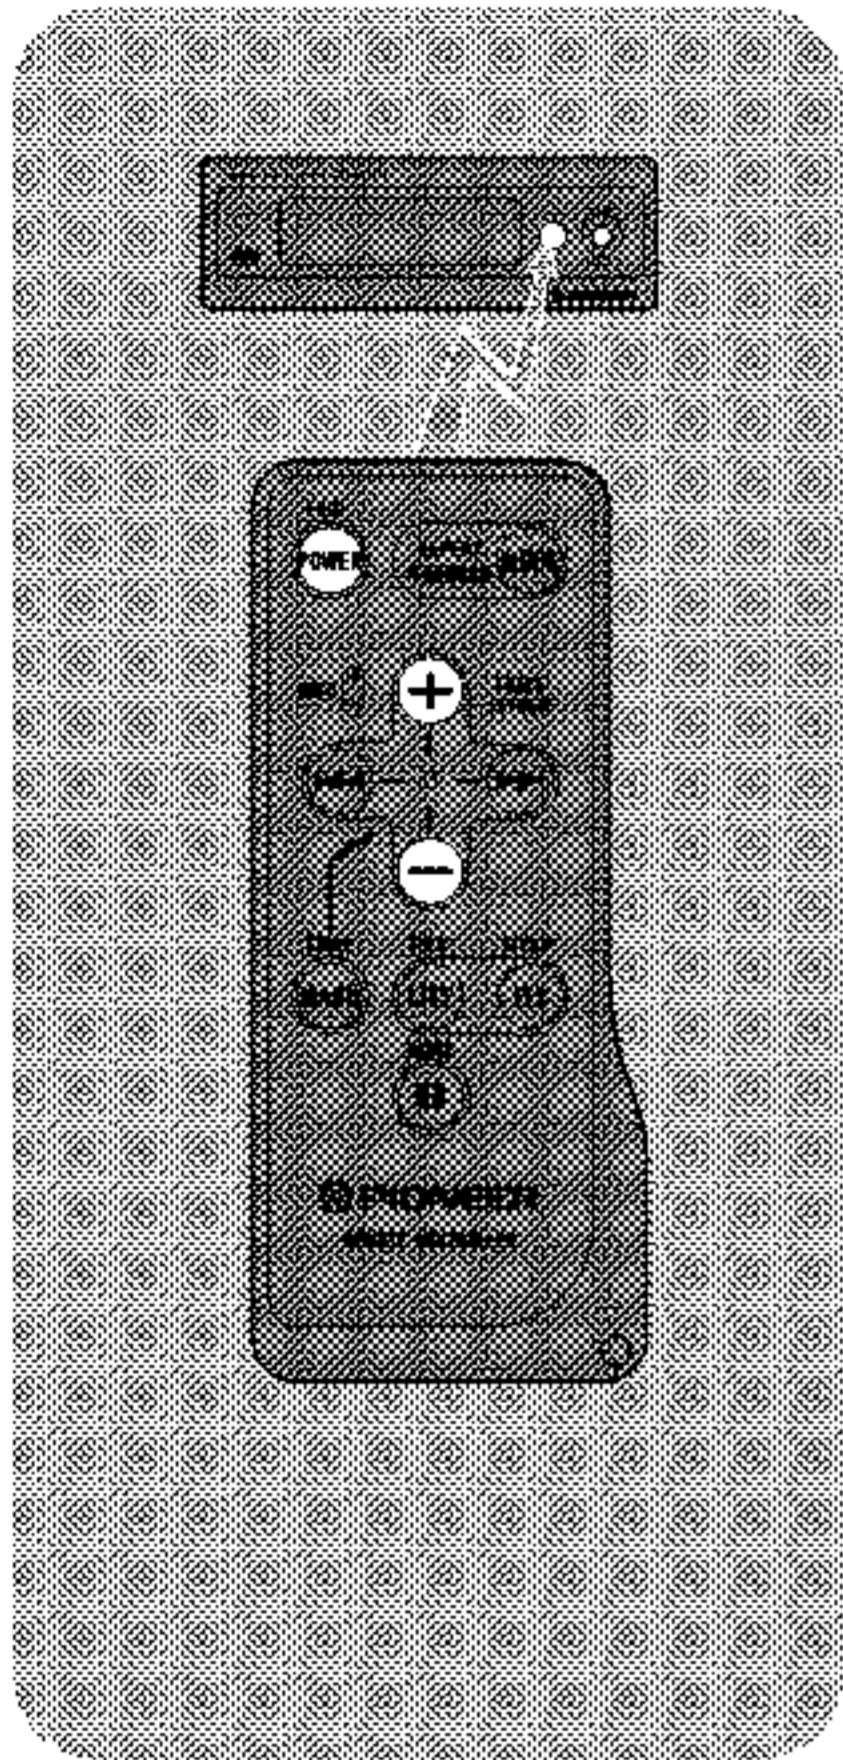

#### Start the CD player

**1. Switch the radio on and tune to Modulating Frequencies.**


- The initial value is 89.1 MHz.

- If your radio does not have muting, there may be some noise before power switch of control unit is ON. If this happens, turn down the volume of the radio.



**2. Press button to switch on and start the player.**

#### Disc Number Search

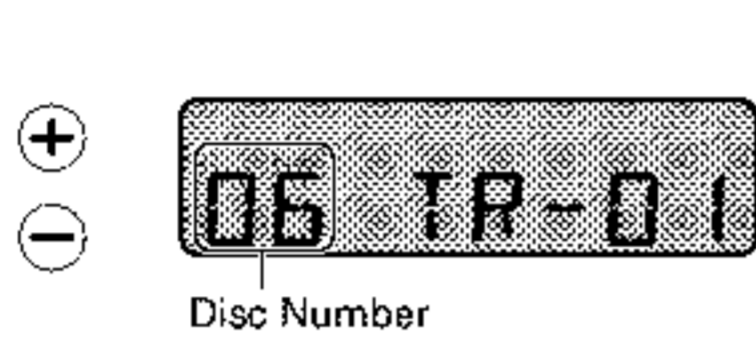

⊕ : increase the number.

⊖ : decrease the number.

### Connecting the Units

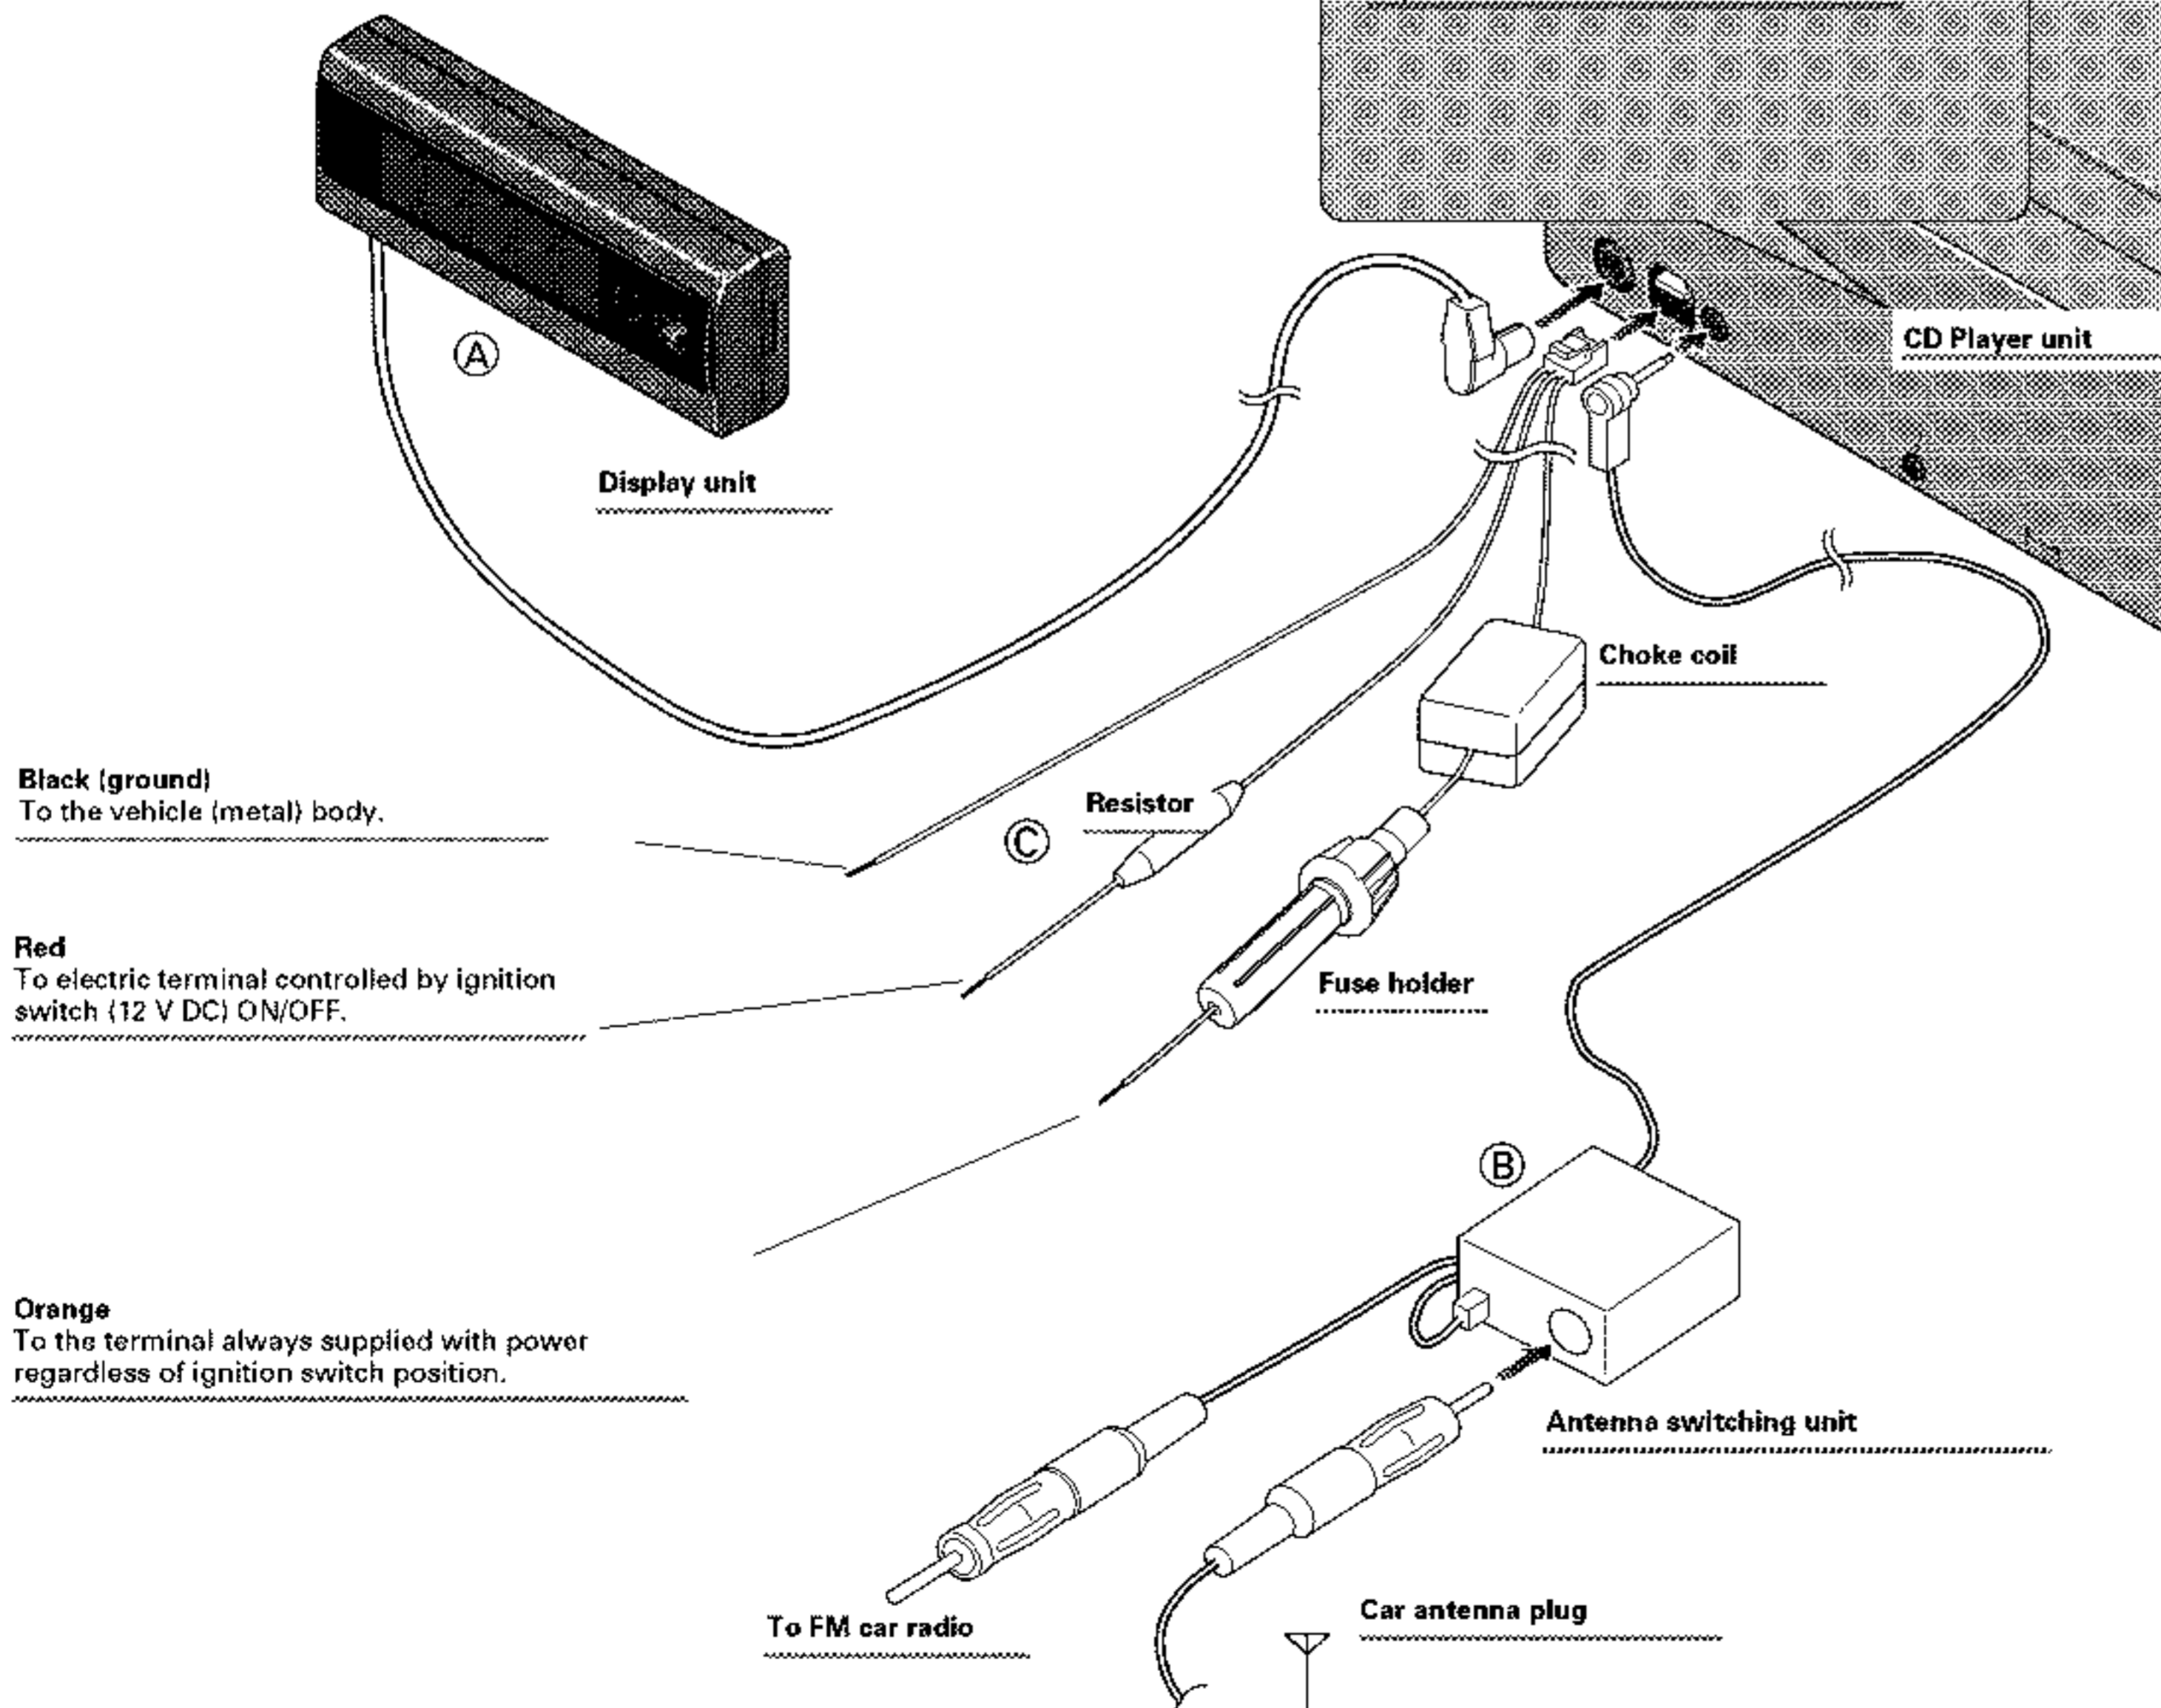
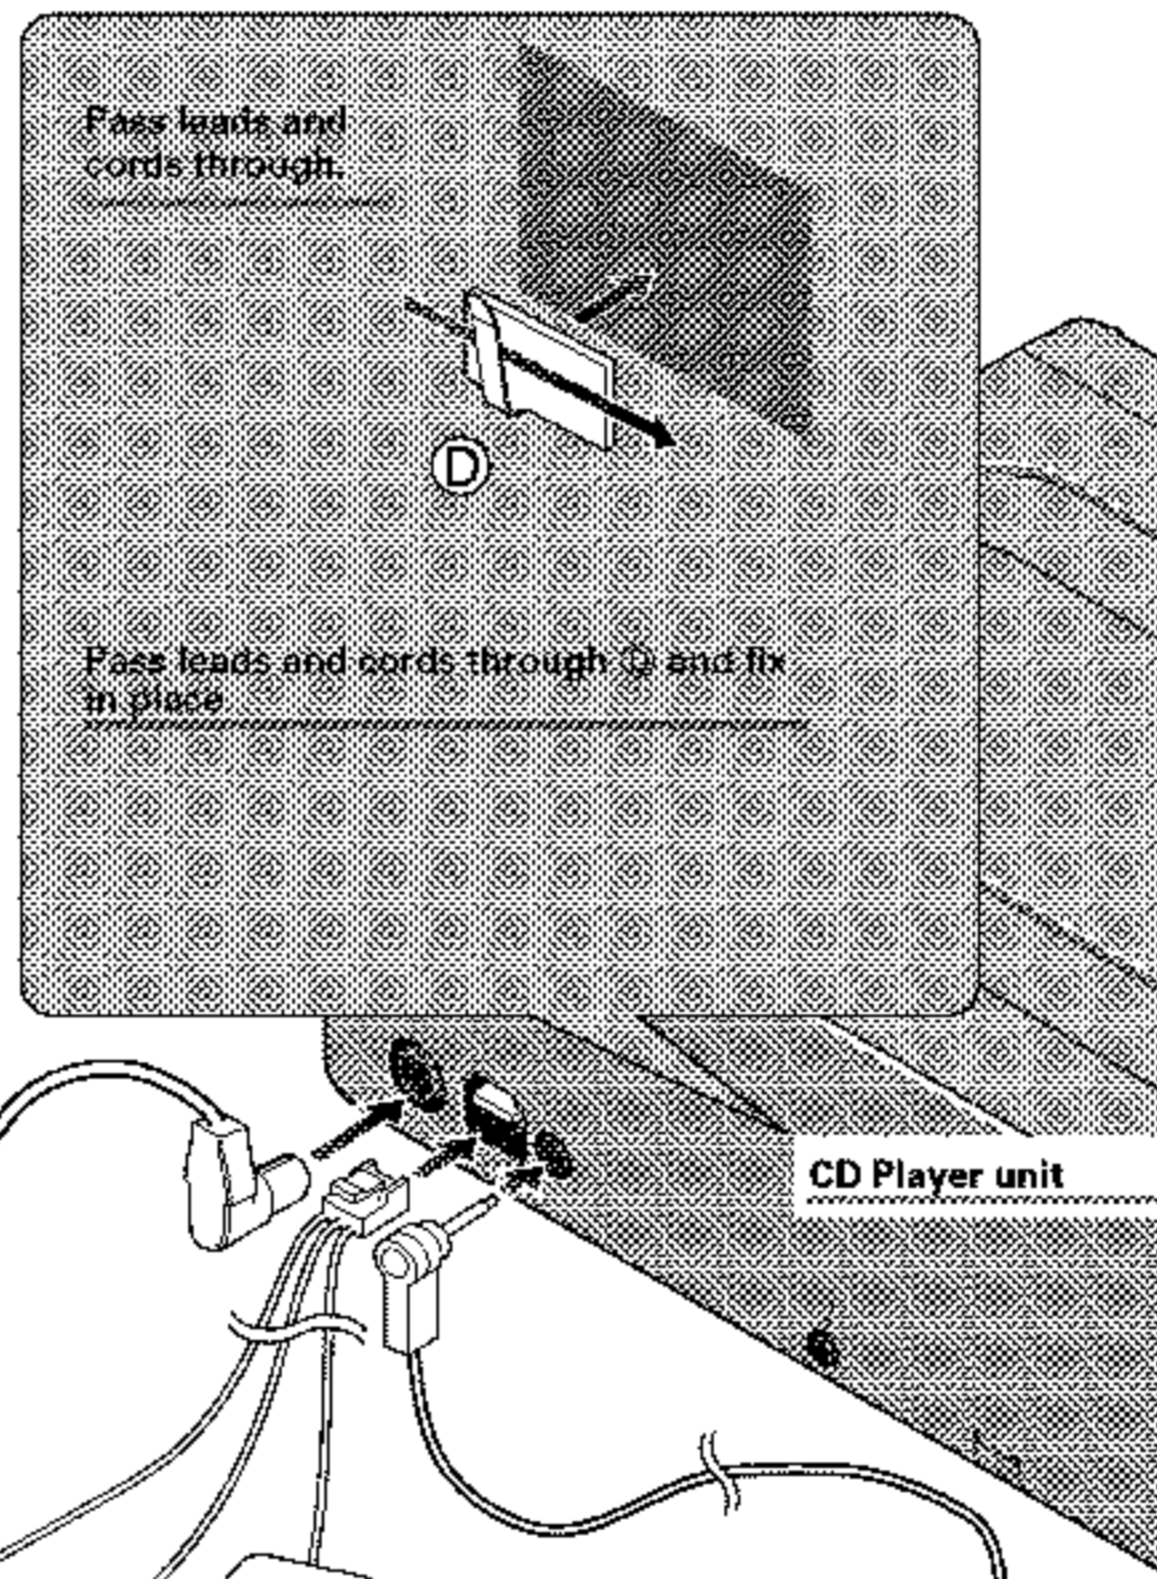
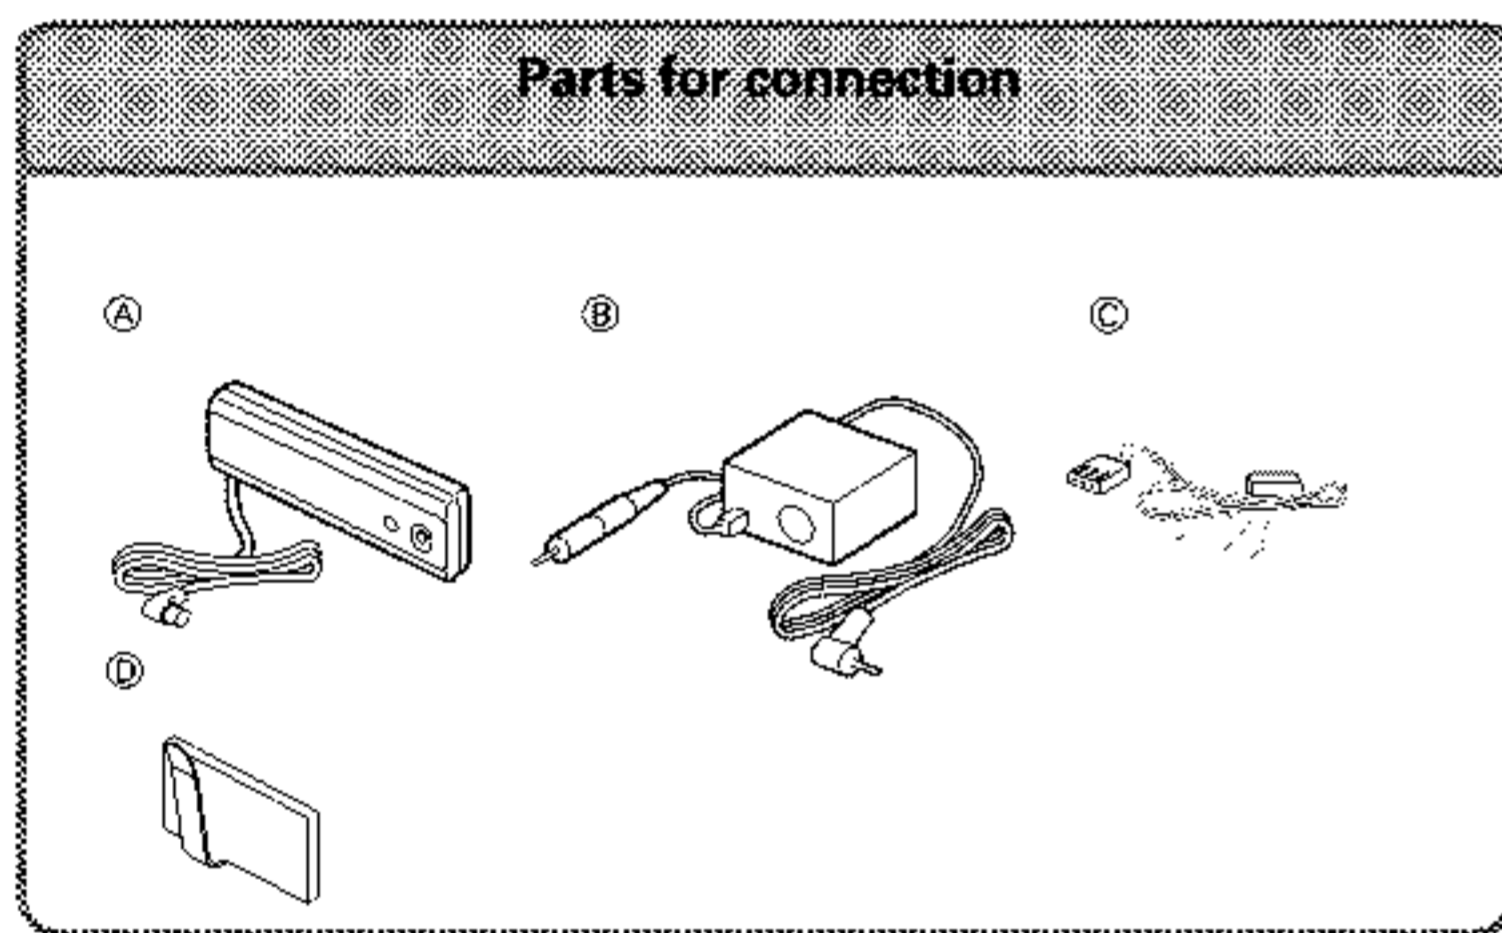


Fig. 33

**8.2 SPECIFICATIONS**

**CD Player unit**

System ..... Compact disc audio system  
 Usable discs ..... Compact Disc  
 Signal format  
     ..... Sampling frequency: 44.1 kHz  
     ..... Number of quantization bits: 16; linear  
 Power source  
     ..... 14.4 V DC (10.8 — 15.1 V allowable)  
 Max. current consumption ..... 1.0 A  
 Weight ..... 1.8 kg  
 Dimensions  
     ..... 248 (W) × 66 (H) × 162 (D) mm  
 FM modulator usable frequency  
     ..... 87.9/88.1/88.3/88.5/88.7/88.9/89.1  
     ..... /89.3/89.5/89.7/89.9/90.1 MHz

**Antenna Switching unit**

Weight ..... 140 g  
 Dimensions  
     ..... 45 (W) × 25 (H) × 43 (D) mm

**Display unit**

Weight ..... 70 g  
 Dimensions  
     ..... 105 (W) × 35 (H) × 18 (D) mm

**Remote Controller unit**

Power source  
     ..... Battery (CR2032)  
 Weight (including battery)  
     ..... 16 g  
 Dimensions  
     ..... 39 (W) × 92 (H) × 6 (D) mm

**Note:**  
 Specifications and the design are subject to possible modification without prior notice due to improvements.