


# Service Manual

**PIONEER**  
The Art of Entertainment



PION-04970



ORDER NO.  
RRV1497

STEREO CASSETTE DECK

# CT-S450S

THIS MANUAL IS APPLICABLE TO THE FOLLOWING MODEL(S) AND TYPE(S).

| Type    | Model    | Power Requirement | Remarks |
|---------|----------|-------------------|---------|
|         | CT-S450S |                   |         |
| HYXJ    | ○        | AC220-230V        |         |
| HYXJ/GR | ○        | AC220-230V        |         |

## CONTENTS

|   |    |
|---|----|
| 1. EXPLODED VIEWS, PACKING AND PARTS LIST .....   | 2  |
| 2. BLOCK DIAGRAM .....                            | 7  |
| 3. ADJUSTMENTS .....                              | 8  |
| 4. SCHEMATIC AND PCB CONNECTION<br>DIAGRAMS ..... | 12 |
| 5. PCB PARTS LIST .....                           | 21 |
| 6. FL INFORMATION .....                           | 24 |
| 7. PANEL FACILITIES .....                         | 25 |
| 8. SPECIFICATIONS .....                           | 26 |

**PIONEER ELECTRONIC CORPORATION** 4-1, Meguro 1-Chome, Meguro-ku, Tokyo 153, Japan  
**PIONEER ELECTRONICS SERVICE, INC.** P.O. Box 1760, Long Beach, CA 90801-1760, U. S. A.  
**PIONEER ELECTRONIC (EUROPE) N.V.** Haven 1087 Keetberglaan 1, 9120 Melsele, Belgium  
**PIONEER ELECTRONICS ASIACENTRE PTE. LTD.** 501 Orchard Road, #10-00 Lane Crawford Place, Singapore 0923  
 © **PIONEER ELECTRONIC CORPORATION 1996**

T-SSR FEB. 1996 Printed in Japan

# CT-S450S

## 1. EXPLODED VIEWS, PACKING AND PARTS LIST


### NOTES:

- Parts marked by "NSP" are generally unavailable because they are not in our Master Spare Parts List.
- The  $\Delta$  mark found on some component parts indicates the importance of the safety factor of the parts. Therefore, when replacing, be sure to use parts of identical designation.
- Parts marked by "⊙" are not always kept in stock. Their delivery time may be longer than usual or they may be unavailable.

### 1.1 EXTERIOR AND PACKING

#### Parts List

| Mark     | No. | Description                          | Parts No.    | Mark | No. | Description   | Parts No.              |
|----------|-----|--------------------------------------|--------------|------|-----|---|------------------------|
|          | 1   | Main unit                            | RWZ3845      |      | 46  | Binder  | ZCA-T18S               |
|          | 2   | Dolby S unit                         | RWX1109      | NSP  | 47  | Earth lead assy   | RDF1089                |
|          | 3   | OPSW unit                            | RWZ3846      |      | 48  | Stabilizer  | REB1085                |
|          | 4   | TR 1 unit                            | RWZ3848      |      | 49  | .....   |                        |
| NSP      | 5   | TR 2 unit                            | RNZ3037      |      | 50  | Screw   | BBZ30P080FMC           |
|          | 6   | FL unit                              | RWZ3847      |      | 51  | Screw   | IBZ30P150FCU           |
| $\Delta$ | 7   | Strain relief                        | CM-22B       |      | 52  | Screw   | BSZ26P120FMC           |
| $\Delta$ | 8   | Fuse FU1001, FU1002<br>(T1.0A/L250V) | REK1022      |      | 53  | Screw   | ABZ30P080FMC           |
| $\Delta$ | 9   | Power transformer                    | RTT1254      |      | 54  | Screw   | IPZ26P080FMC           |
| $\Delta$ | 10  | Power cord with HE plug              | PDG1043      |      | 55  | Screw   | BCZ26P050FMC           |
|          | 11  | Mechanism unit                       | RYM1240      |      | 56  | Connection cord assy  | RDE1036                |
|          | 12  | Door spring L                        | RBH1384      |      | 57  | Control cord  | RDE1044                |
|          | 13  | Half pressure spring                 | RBK1004      |      | 58  | Operating instructions<br>(English/German)                                      | RRB1135                |
|          | 14  | LED lens                             | PNW2019      |      | 58  | Operating instructions<br>(French/Italian/Dutch/<br>Swedish/Spanish/Portuguese) | RRD1183<br>(HYXJ type) |
|          | 15  | Damper assy                          | REC1267      |      | 59  | Pad (L)   | RHA1213                |
| NSP      | 16  | Main chassis                         | RNB1100      |      | 60  | Pad (R)   | RHA1212                |
|          | 17  | Cord clamper                         | RNH-184      |      | 61  | Packing case  | RHG1734                |
|          | 18  | Indicator lens                       | RNK1911      |      | 62  | Sheet   | RHX-034                |
|          | 19  | Insulator                            | PNW1912      |      | 63  | Spacer A  | RHC1044                |
|          | 20  | Balance knob                         | RAC1705      |      | 64  | Connection cord with mini plug  | PDE1267                |
|          | 21  | VR knob                              | RAC1707      |      | 65  | Spacer  | REC1055                |
|          | 22  | Eject spring L                       | RBH1379      |      | 66  | Acetate tape  | REH1028                |
|          | 23  | Operation knob                       | RAC1795      |      |     |   |                        |
|          | 24  | Eject knob                           | RAC1906      |      |     |   |                        |
|          | 25  | Power knob                           | RAC1809      |      |     |   |                        |
|          | 26  | Door lens                            | RAH2687      |      |     |   |                        |
|          | 27  | Mode knob A                          | RAC1907      |      |     |   |                        |
|          | 28  | Name plate                           | RAM1007      |      |     |   |                        |
|          | 29  | Eject collar                         | RLA1283      |      |     |   |                        |
|          | 30  | Indication panel                     | REE-113      |      |     |   |                        |
|          | 31  | Arm collar                           | RLA1290      |      |     |   |                        |
|          | 32  | FL lens                              | RAH2413      |      |     |   |                        |
|          | 33  | Door pocket                          | RAH2715      |      |     |   |                        |
|          | 34  | Front panel                          | RAH2717      |      |     |   |                        |
|          | 35  | Rear panel                           | RNA2035      |      |     |   |                        |
|          | 36  | Bonnet                               | REA1077      |      |     |   |                        |
|          | 37  | Eject spring                         | RBH1340      |      |     |   |                        |
|          | 38  | Washer                               | WA52D120D025 |      |     |   |                        |
| NSP      | 39  | PCB spacer                           | PNY-404      |      |     |   |                        |
|          | 40  | Eject arm L                          | RNE1763      |      |     |   |                        |
|          | 41  | Eject lever L                        | RNK2045      |      |     |   |                        |
|          | 42  | Connector assy 3P                    | RKP1672      |      |     |   |                        |
|          | 43  | Connector assy 2P                    | RKP1681      |      |     |   |                        |
|          | 44  | Azimuth cover                        | REA1238      |      |     |   |                        |
|          | 45  | Stabilizer panel                     | RAH1483      |      |     |   |                        |

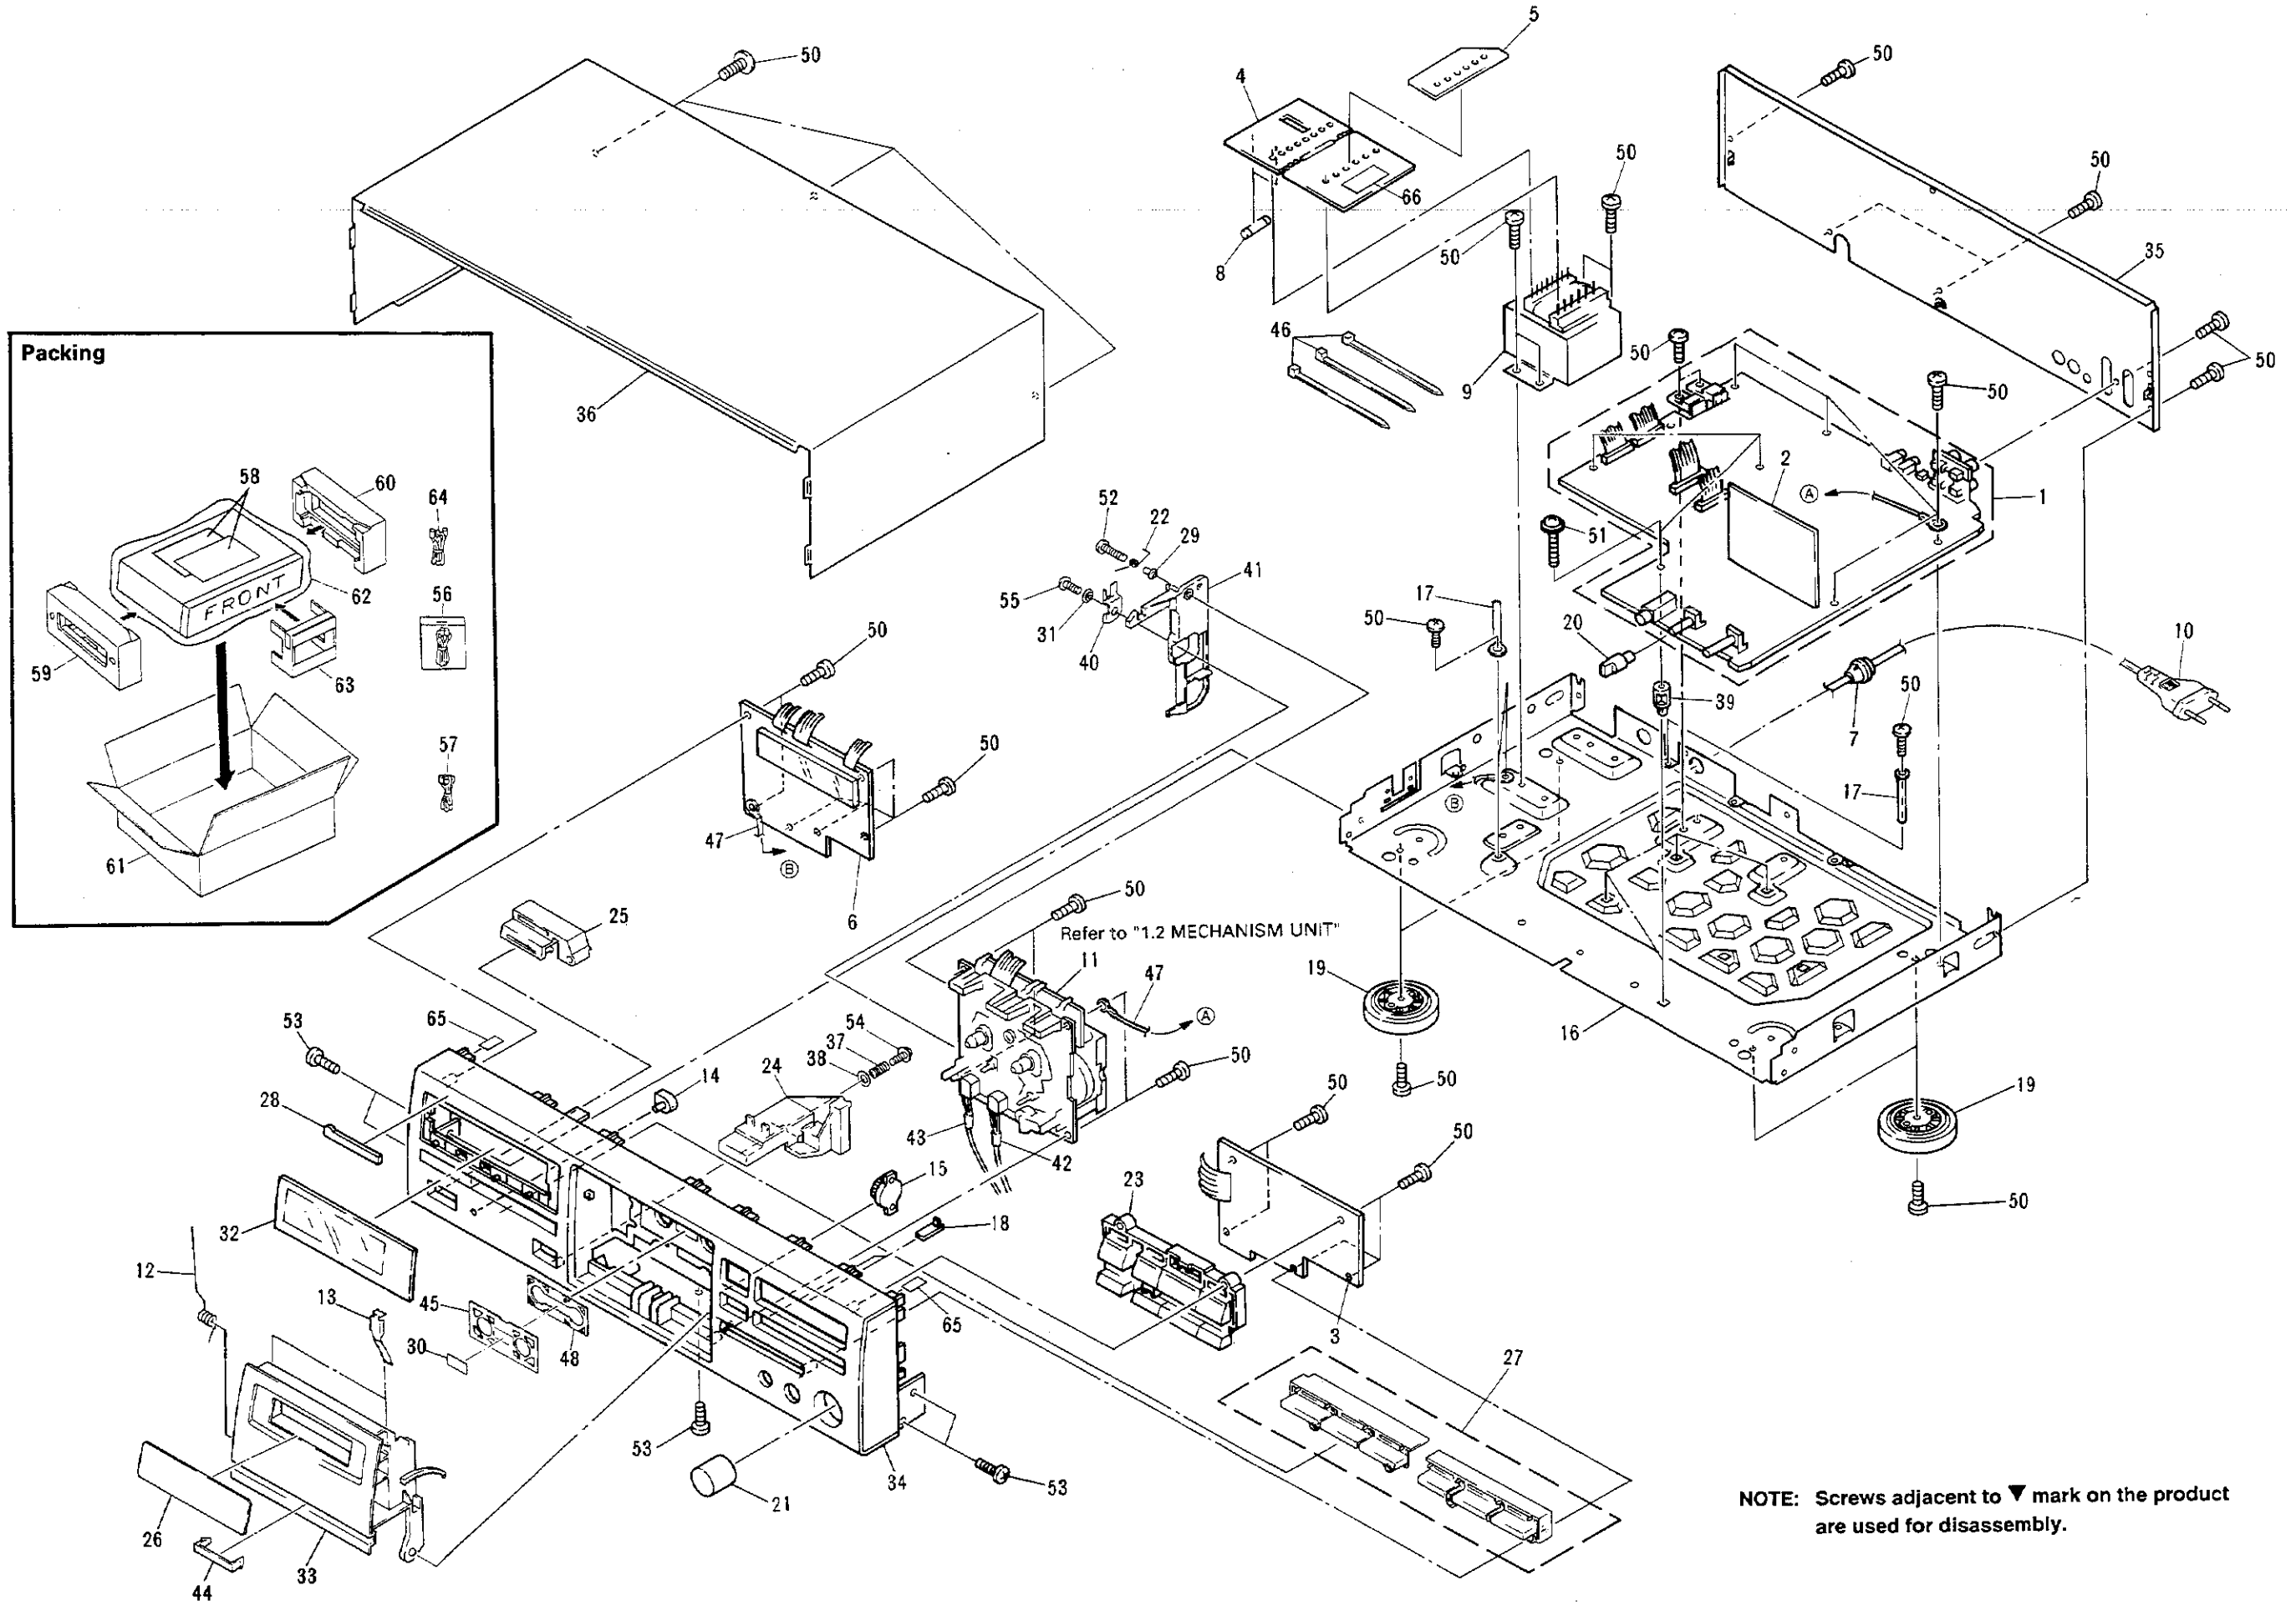


NOTE: Screws adjacent to ▼ mark on the product are used for disassembly.

# CT-S450S

## 1.2 MECHANISM UNIT


### Parts List

| Mark No. | Description        | Parts No.    |
|----------|--------------------|--------------|
| 1        | Plunger            | RLA1288      |
| 2        | PCB Control BLK    | RXA1625      |
| 3        | Push Switch        | RSG1018      |
| 4        | SPLF               | RSN1023      |
| 5        | Photo-Transistor   | SPI33534FG   |
| 6        | MTR Main BLK       | RXM1081      |
| 7        | Solenoid BLK       | RXP1021      |
| 8        | Spring Interlock L | RBH1385      |
| 9        | Arm Interlock L    | RNE1780      |
| 10       | Chassis Base BLK   | RXA1627      |
| 11       | Spring Brake       | RBH1387      |
| 12       | Main Belt          | REB1163      |
| 13       | F/R Belt           | REB1254      |
| 14       | Lever Brake        | RNK2071      |
| 15       | E Head             | RPB1060      |
| 16       | Pinch Roller BLK R | RXA1630      |
| 17       | Head Spacer        | RNK1631      |
| 18       | Clutch Assy BLK    | RXA1631      |
| 19       | Screw              | RBA1120      |
| 20       | Washer             | WA41D065D025 |
| 21       | Spring Reel (L)    | RBH1388      |
| 22       | Spring Reel (R)    | RBH1389      |
| 23       | Cam Spring         | RBH1393      |
| 24       | .....              |              |
| 25       | Lever F/R          | RNE1782      |
| 26       | Reel Feather       | RNK2072      |
| 27       | Reel Base          | RNK2073      |
| 28       | Play Gear (A)      | RNK2074      |
| 29       | FF Gear (A)        | RNK2075      |
| 30       | F/R Pulley         | RNK2076      |
| 31       | Clutch Assy BLK    | RXA1632      |
| 32       | Washer             | WA17D040D025 |
| 33       | .....              |              |
| 34       | Spring (Azimuth)   | RBH1076      |
| 35       | F Lock Screw       | RBA1031      |
| 36       | Spring HB          | RBH1390      |
| 37       | Head Base          | RNE1784      |
| 38       | R/P Head           | RPB1056      |
| 39       | Stop Ring          | YE15FUC      |
| 40       | Screw              | RBA1121      |
| 41       | .....              |              |
| 42       | Spring Arm Play    | RBH1391      |
| 43       | .....              |              |
| 44       | Washer             | WA26D047D050 |
| 45       | Cam Gear           | RNK2078      |
| 46       | Arm Play           | RNK2079      |
| 47       | Spring Cassette    | RNE1786      |
| 48       | Screw              | BMZ26P040FZK |
| 49       | Washer             | WA26D045D025 |

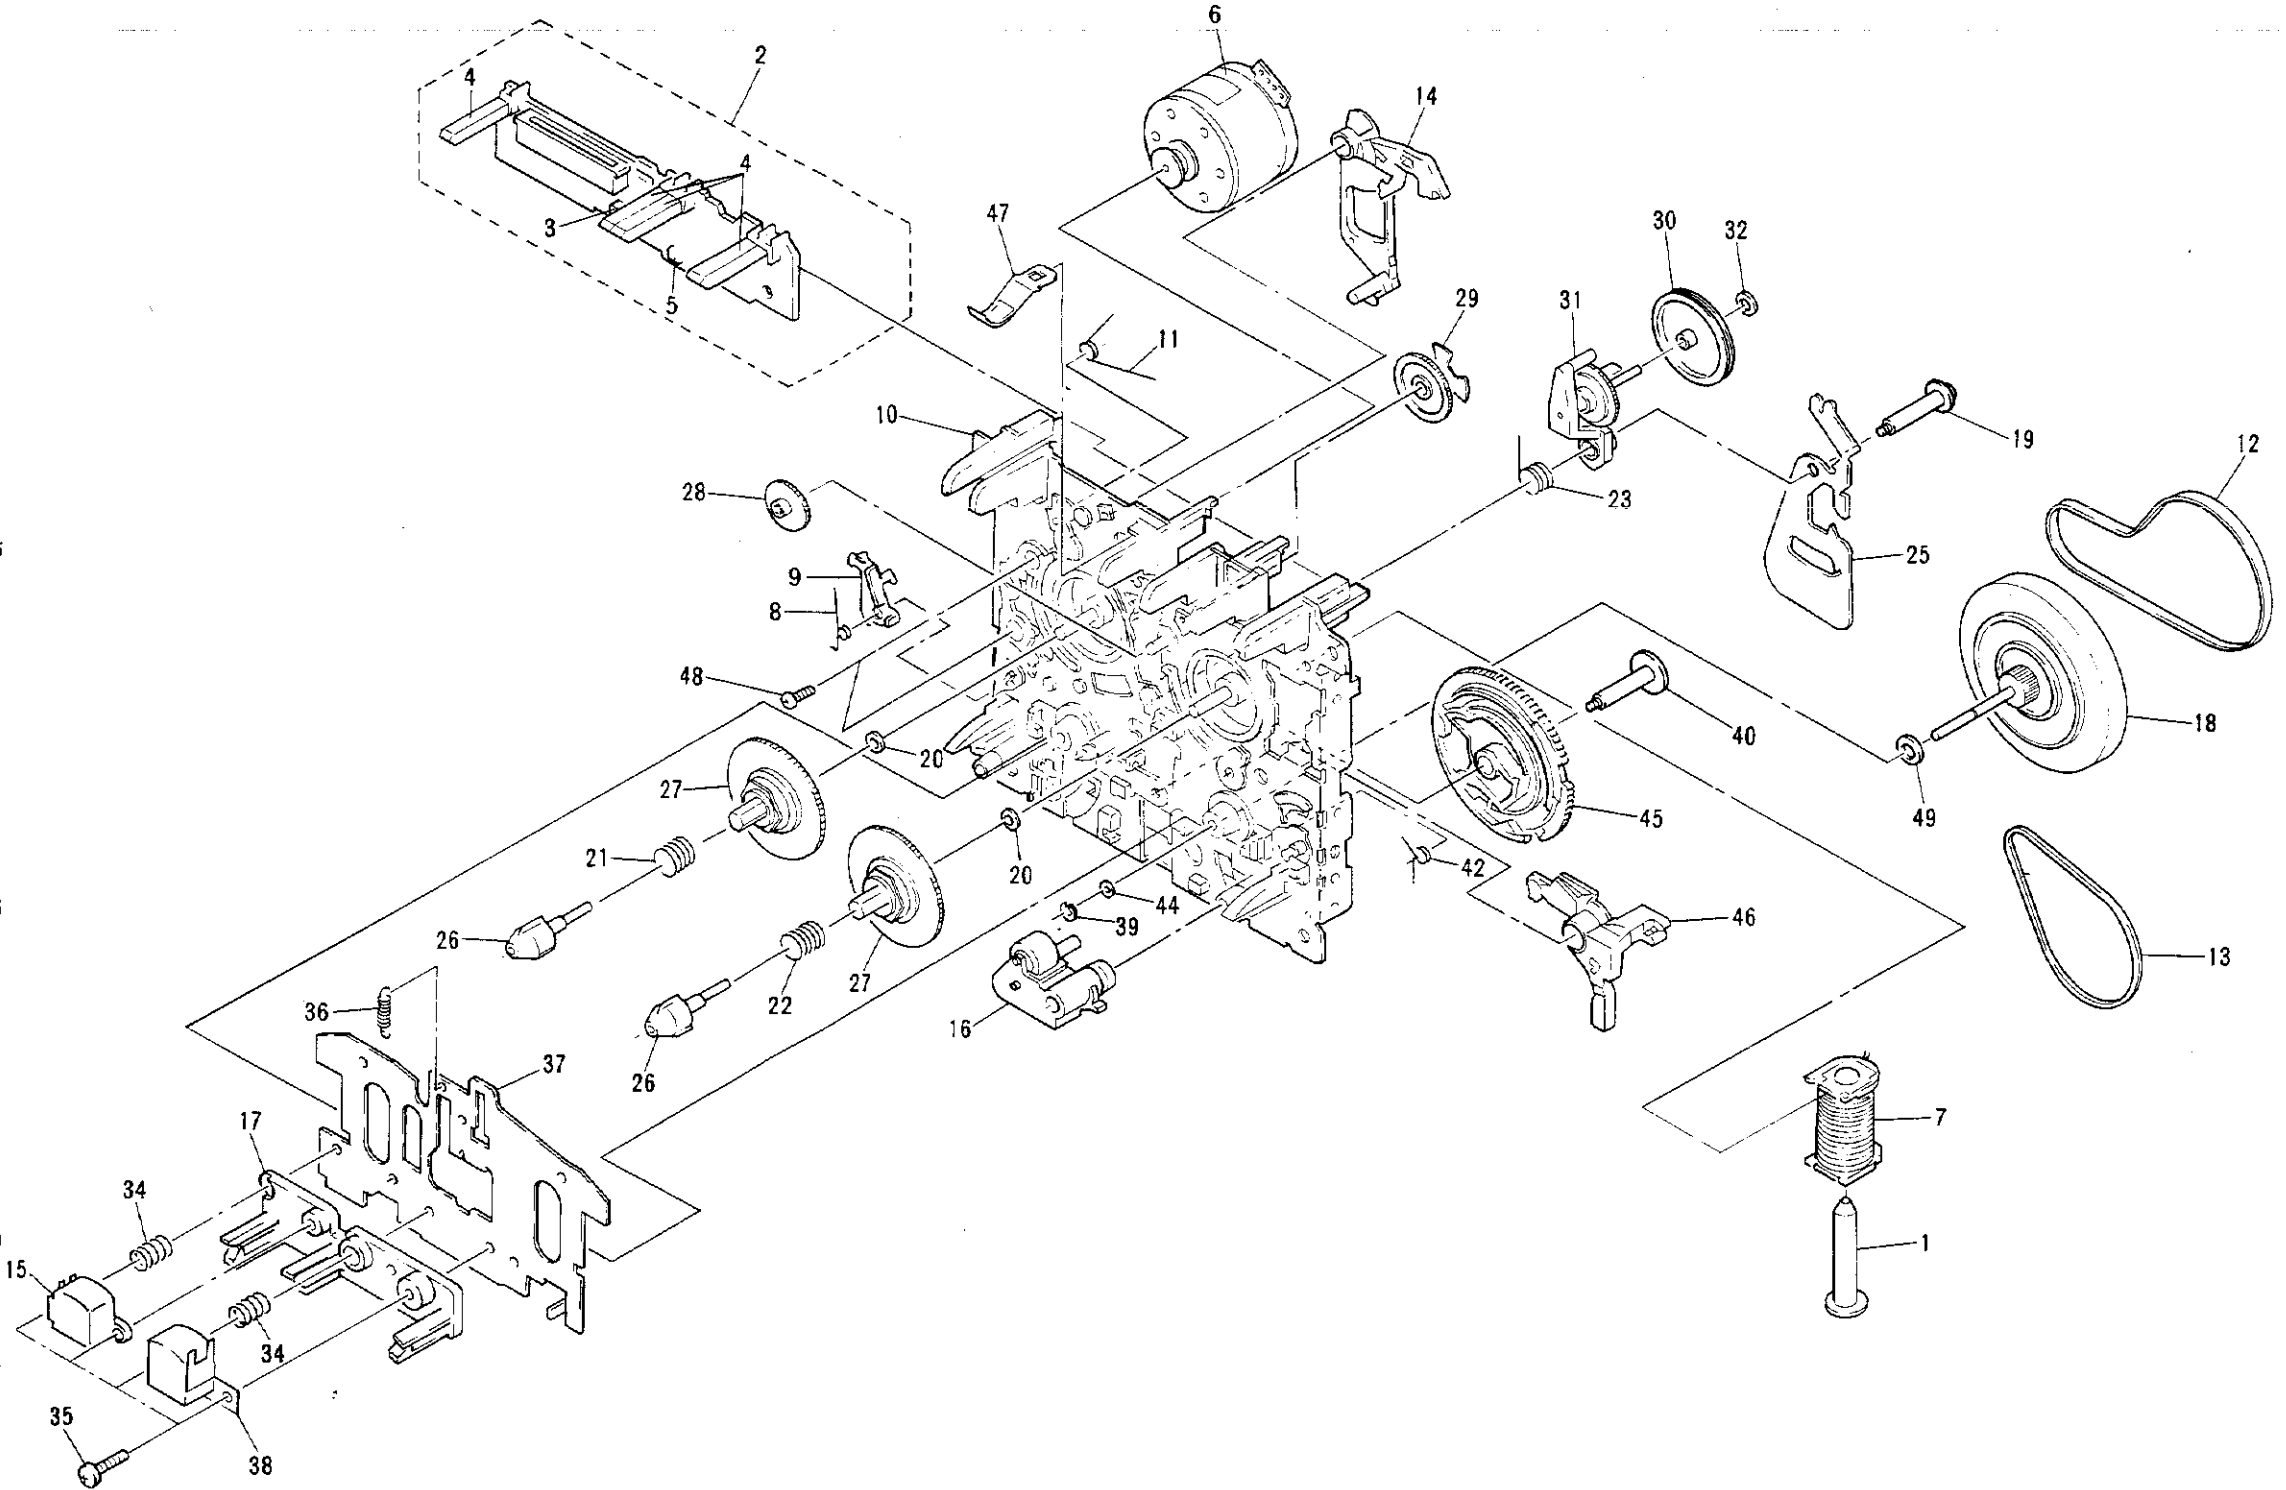

2. BLOCK DIAGRAM

CT-S450S BLOCK & LEVEL DIAGRAM  
(2HEAD CASSETTE DECK)

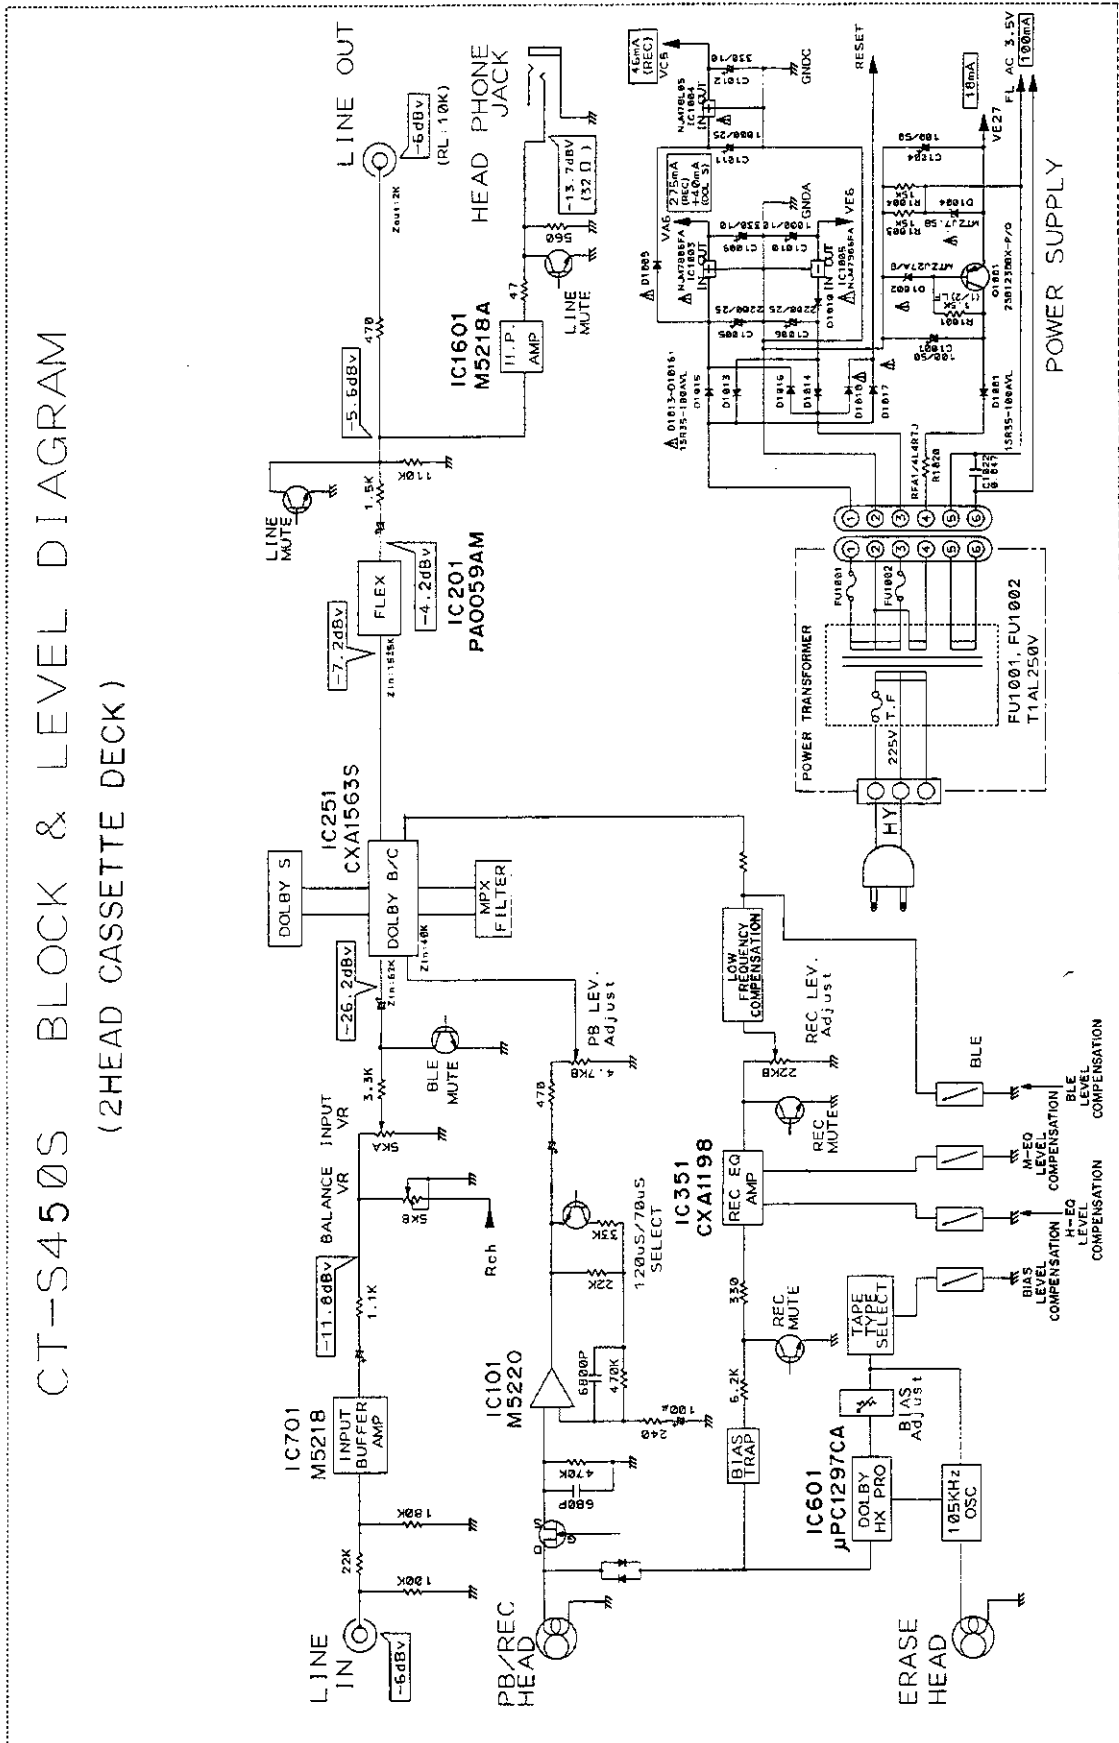

## 3. ADJUSTMENTS

### 1. MECHANICAL ADJUSTMENT

| 1. Tape speed Adjustment |                              |                     |   |
|--------------------------|------------------------------|---------------------|---|
| Mode                     | Test tape                    | Adjustment position | Specification rating (playback frequency) |
| PLAY                     | Play the STD-301 tape (3kHz) | VR852               | 3000Hz $\pm$ 5Hz                          |


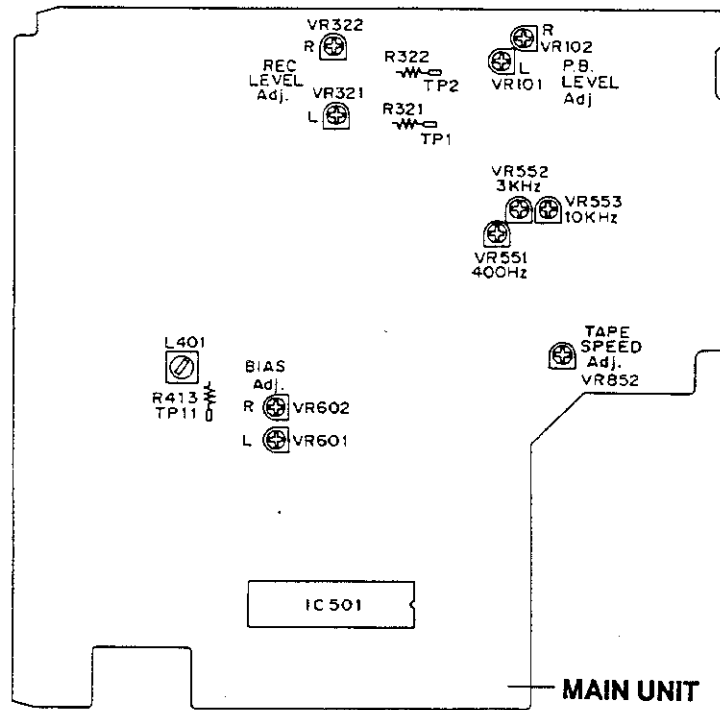


Fig. 1 Adjusting points

#### ● Before performing the head azimuth adjustment

Remove the azimuth cover before performing this adjustment.

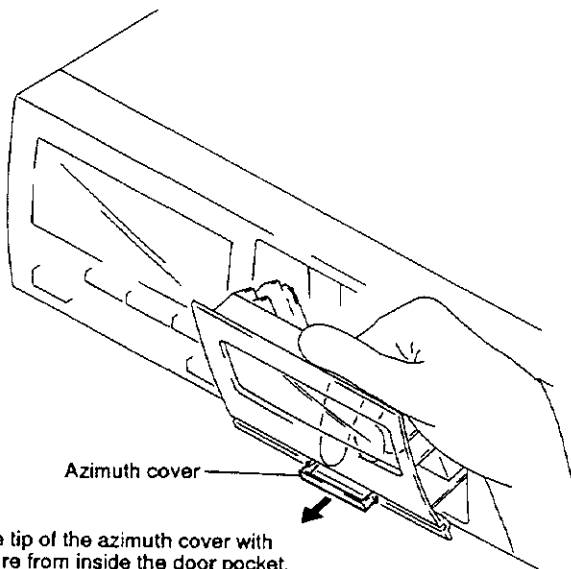

Push the tip of the azimuth cover with your figure from inside the door pocket.

Fig. 2 Removal of azimuth cover

## 2. ELECTRICAL ADJUSTMENTS

### Adjustment Conditions

1. The mechanical adjustments must be completed first.
2. The head must be cleaned and demagnetized.
3. Turn power on allow the deck to warm up for at least a few minutes before commencing any electrical adjustments.
4. The reference signal is 0 dBV=1 Vrms.
5. Connect a 10 kΩ load resistance to the OUTPUT terminals.
6. Unless otherwise specified, the switches listed below are left in the positions indicated.

DOLBY NR : OFF  
TAPE SELECTOR : NORM

### Test Tapes

STD-331E : Playback adjustments  
(See Fig. 3)  
STD-632 : NORMAL blank tape  
STD-621 : CrO<sub>2</sub> blank tape  
STD-610 : METAL blank tape

\* As the reference recording level is 250 nwb/m for STD-331E, the recording level will be higher by 4 dB for STD-331B (160 nwb/m). When adjusting, pay carefull attention to the type of tape used.

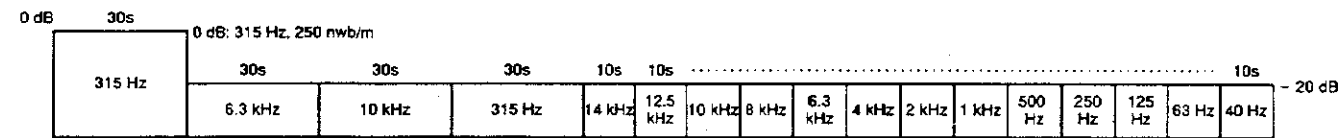


Fig. 3 Constants of the test tape STD-331E

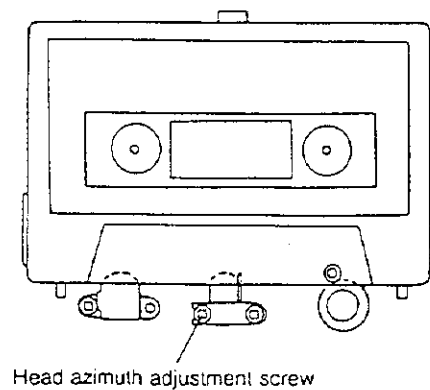


Fig. 4 Head azimuth adjustment

### List of Adjustments

#### Playback sections

1. Head azimuth adjustment.
2. Playback level adjustment.

#### Recording sections

1. Bias oscillator adjustment.
2. Recording bias adjustment.
3. Recording level adjustment.
4. Level meter check
5. AUTO BLE adjustment.

NOTE: This unit has an automatic tape selection feature.

Dolby noise reduction and HX Pro headroom extension manufactured under license from Dolby Laboratories Licensing Corporation. HX Pro originated by Bang & Olufsen. "DOLBY", the double-D symbol and "HX PRO" are trademarks of Dolby Laboratories Licensing Corporation.

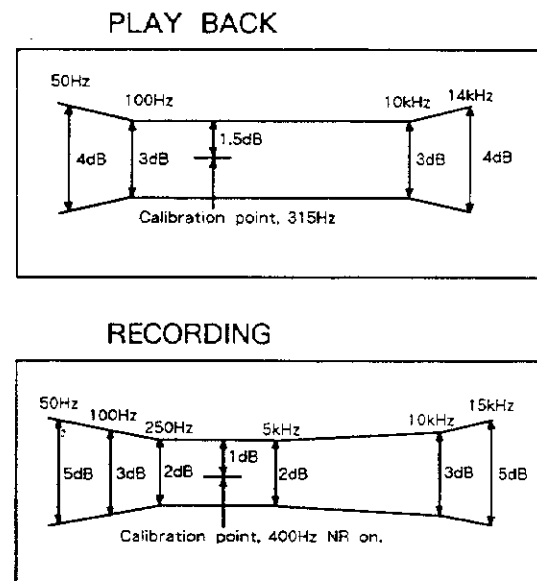


Fig. 5 Frequency response zone

## PLAYBACK SECTION

### 1. Head Azimuth Adjustment

- Turn VR101, 102 to mechanical center positions.

| No. | Mode | Input signal & test tape                                    | Adjustment location                         | Measuring location | Adjustment value               | Remarks |
|-----|------|---|---|--------------------|--------------------------------|---------|
| 1.  | PLAY | Play the 10 kHz/-20 dB section of STD-331E test tape.       | Head azimuth adjustment screw. (See Fig. 4) | LINE OUT           | Maximum playback signal level. |         |
| 2.  | STOP | Lock the screw with screw lock after completing adjustment. |   |                    |                                |         |

### 2. Playback Level Adjustment

- This adjustment determines the DOLBY NR level, and must be performed with great care.

| No. | Mode | Input signal & test tape                                | Adjustment location                | Measuring location         | Adjustment value | Remarks  |
|-----|------|---|------------------------------------|----------------------------|------------------|--|
| 1.  | PLAY | Play the 315 Hz/0 dB section of the STD-331E test tape. | Deck<br>VR101 (Lch)<br>VR102 (Rch) | TP. 1 (Lch)<br>TP. 2 (Rch) | -6.7 dBV         | This adjustment must be performed accurately for proper Dolby level setting. |

## RECORDING SECTION

### 1. Bias Oscillator Adjustment

| No. | Mode | Input signal & test tape                         | Adjustment location | Measuring location | Adjustment value  | Remarks |
|-----|------|--|---------------------|--------------------|-------------------|---------|
| 1.  | REC  | Load the STD-810 test tape with no input signal. | Deck<br>L401        | TP. 11             | 105 kHz ± 0.3 kHz |         |

### 2. Recording Bias Adjustment

- After the adjustment, caution should be exercised so as not to become under bias by checking the distortion rate.

| No. | Mode | Input signal & test tape   | Adjustment location                | Measuring location | Adjustment value   | Remarks |
|-----|------|--|------------------------------------|--------------------|--|---------|
| 1.  | REC  | Load the STD-632 test tape. Record the 315 Hz and 6.3 kHz signals at -28 dBV input level and playback. | Deck<br>VR801 (Lch)<br>VR802 (Rch) | LINE OUT           | Repeatedly record, playback and adjust so that the playback level of 6.3 kHz signal becomes + 0.5dB ± 0.5 dB when compared with the 315 Hz signal. |         |

### 3. Recording Level Adjustment

| No. | Mode       | Input signal & test tape   | Adjustment location                          | Measuring location         | Adjustment value   | Remarks |
|-----|------------|--|--|----------------------------|--|---------|
| 1.  | REC/ PAUSE | Apply a 315 Hz signal to the line input terminals. load the STD-632 test tape. | Volume of the output level of the oscillator |                            | -11.2 dBV  |         |
| 2.  | REC/ PLAY  | Record the above signal onto the STD-632 test tape, and playback.              | Deck<br>VR321 (Lch)<br>VR322 (Rch)           | TP. 1 (Lch)<br>TP. 2 (Rch) | Repeatedly record, playback and adjust so that the playback signal level becomes -11.2dBV. |         |
| 3.  | REC/ PLAY  | Record the above signal onto the STD-621 test tape, and playback.              | Check  |                            | -11.2 dBV ± 1.5 dB   |         |
| 4.  | REC/ PLAY  | Record the above signal onto the STD-810 test tape, and playback.              | Check  |                            | -11.2 dBV ± 1.5 dB   |         |

**PLAYBACK SECTION**

**1. Head Azimuth Adjustment**

- Turn VR101, 102 to mechanical center positions.

| No. | Mode | Input signal & test tape                                    | Adjustment location                         | Measuring location | Adjustment value               | Remarks |
|-----|------|---|---|--------------------|--------------------------------|---------|
| 1.  | PLAY | Play the 10 kHz/-20 dB section of STD-331E test tape.       | Head azimuth adjustment screw. (See Fig. 4) | LINE OUT           | Maximum playback signal level. |         |
| 2.  | STOP | Lock the screw with screw lock after completing adjustment. |   |                    |                                |         |

**2. Playback Level Adjustment**

- This adjustment determines the DOLBY NR level, and must be performed with great care.

| No. | Mode | Input signal & test tape                                | Adjustment location                | Measuring location         | Adjustment value | Remarks  |
|-----|------|---|------------------------------------|----------------------------|------------------|--|
| 1.  | PLAY | Play the 315 Hz/0 dB section of the STD-331E test tape. | Deck<br>VR101 (Lch)<br>VR102 (Rch) | TP. 1 (Lch)<br>TP. 2 (Rch) | -6.7 dBV         | This adjustment must be performed accurately for proper Dolby level setting. |

**RECORDING SECTION**

**1. Bias Oscillator Adjustment**

| No. | Mode | Input signal & test tape                         | Adjustment location | Measuring location | Adjustment value  | Remarks |
|-----|------|--|---------------------|--------------------|-------------------|---------|
| 1.  | REC  | Load the STD-610 test tape with no input signal. | Deck<br>L401        | TP. 11             | 105 kHz ± 0.3 kHz |         |

**2. Recording Bias Adjustment**

- After the adjustment, caution should be exercised so as not to become under bias by checking the distortion rate.

| No. | Mode | Input signal & test tape   | Adjustment location                | Measuring location | Adjustment value   | Remarks |
|-----|------|--|------------------------------------|--------------------|--|---------|
| 1.  | REC  | Load the STD-632 test tape. Record the 315 Hz and 6.3 kHz signals at -26 dBV input level and playback. | Deck<br>VR601 (Lch)<br>VR602 (Rch) | LINE OUT           | Repeatedly record, playback and adjust so that the playback level of 6.3 kHz signal becomes + 0.5dB ± 0.5 dB when compared with the 315 Hz signal. |         |


**3. Recording Level Adjustment**









| No. | Mode          | Input signal & test tape   | Adjustment location                          | Measuring location         | Adjustment value   | Remarks |
|-----|---------------|--|--|----------------------------|--|---------|
| 1.  | REC/<br>PAUSE | Apply a 315 Hz signal to the line input terminals, load the STD-632 test tape. | Volume of the output level of the oscillator | TP. 1 (Lch)<br>TP. 2 (Rch) | -11.2 dBV  |         |
| 2.  | REC/<br>PLAY  | Record the above signal onto the STD-632 test tape, and playback.              | Deck<br>VR321 (Lch)<br>VR322 (Rch)           |                            | Repeatedly record, playback and adjust so that the playback signal level becomes -11.2dBV. |         |
| 3.  | REC/<br>PLAY  | Record the above signal onto the STD-621 test tape, and playback.              | Check  |                            | -11.2 dBV ± 1.5 dB   |         |
| 4.  | REC/<br>PLAY  | Record the above signal onto the STD-610 test tape, and playback.              | Check  |                            | -11.2 dBV ± 1.5 dB   |         |

**4. Level Meter Check**

| No. | Mode          | Input signal & test tape                           | Adjustment location                           | Measuring location         | Adjustment value   | Remarks |
|-----|---------------|--|---|----------------------------|--|---------|
| 1.  | REC/<br>PAUSE | Apply a 315 Hz signal to the line input terminals. | Volume of the output level of the oscillator. | TP. 1 (Lch)<br>TP. 2 (Rch) | Check that the level meters "0 dB" light up within -7.2 dBV ± 2 dB of the signal output level. |         |

**5. AUTO BLE Adjustment**

- BLE adjustment should be performed after all other adjustments are completed.
- This adjustment should be performed in the test mode.
- Entering the Test Mode.  
Turn on the power, and after more than 4 seconds, press the "COUNTER RESET" button, "COUNTER MODE" button and  (PAUSE) button simultaneously.
- Releasing the Test Mode.  
Press the "COUNTER RESET" button.

| No. | Mode | Input signal & test tape                   | Adjustment location | Measuring location | Adjustment value  | Remarks   |
|-----|------|--|---------------------|--------------------|---|---|
| 1.  |      | Set to test mode.                          | -                   | -                  | -   |   |
| 2.  |      | Press the AUTO BLE key on the front panel. | Level meter<br>Rch  | VR551              | Adjust the Lch segment which is lit until Rch is not lighting up.<br>Lch  → <br>Rch    <br>(  : light up  : not light up) | 400 Hz adjustment (Test mode 1 FL indication 1) |
| 3.  |      | Press the AUTO BLE key on the front panel. |                     | VR552              |   | 3 kHz adjustment (Test mode 2 FL indication 2)  |
| 4.  |      | Press the AUTO BLE key on the front panel. |                     | VR553              |   | 10 kHz adjustment (Test mode 3 FL indication 3) |

rc.

ufactured  
HX Pro

marks of




20 dB  
iz

18



### 4. SCHEMATIC AND PCB CONNECTION DIAGRAMS

• This diagram is viewed from the mounted parts side.

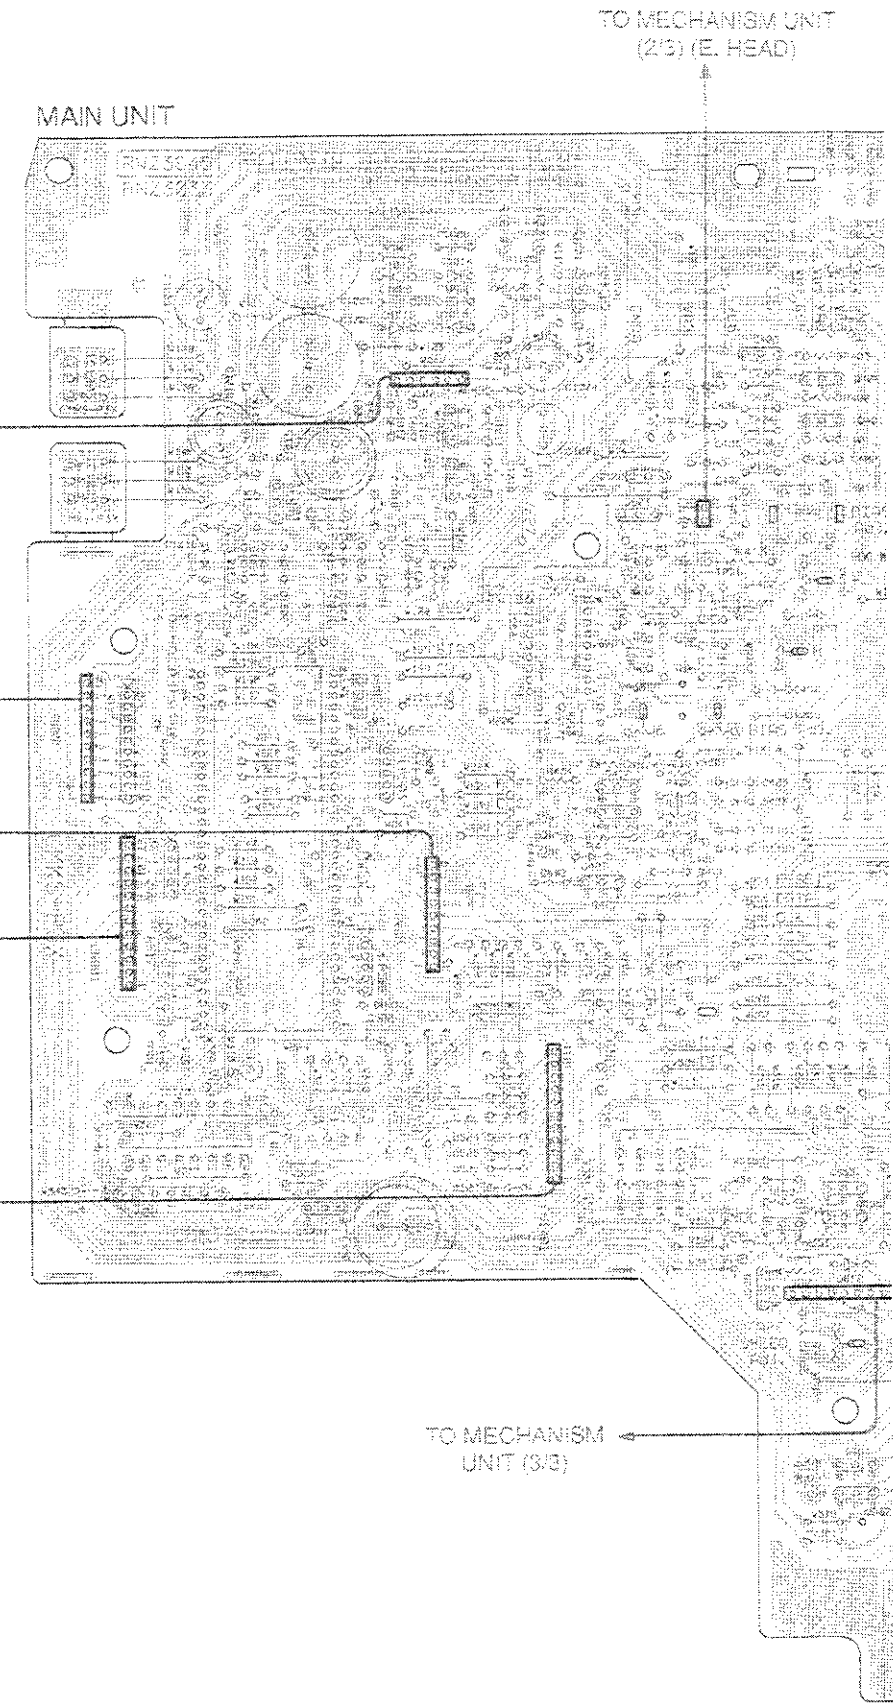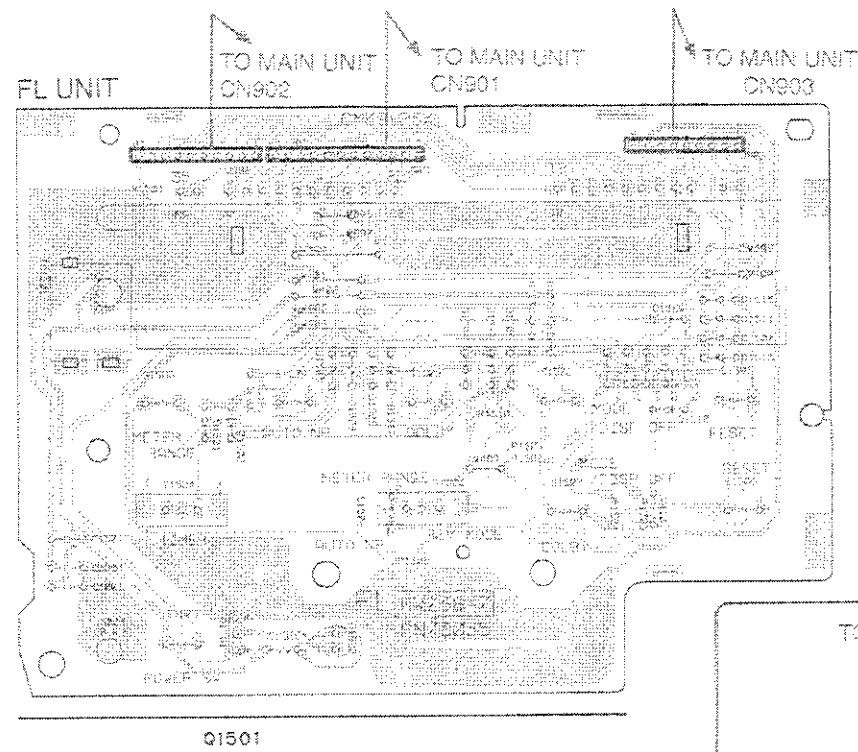
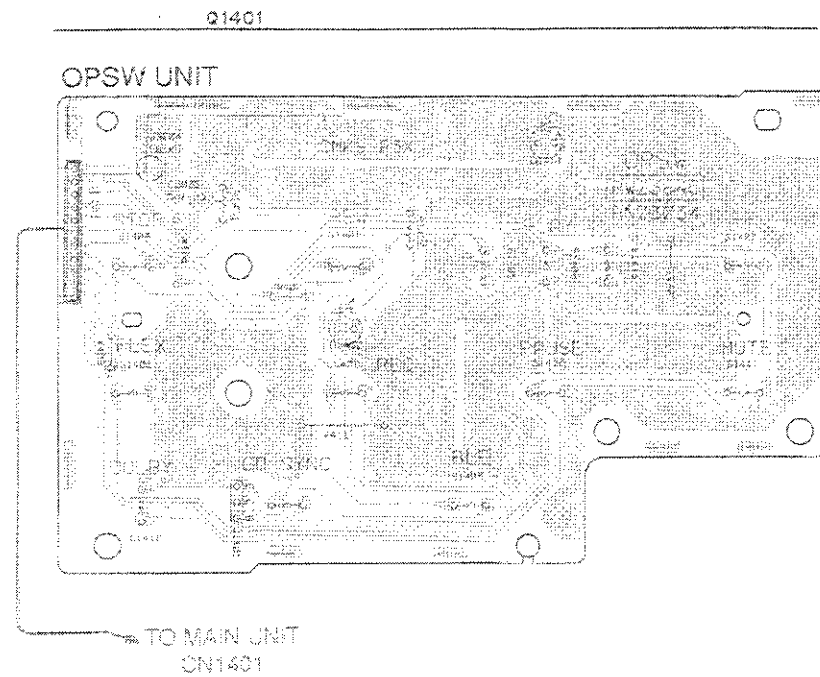


**NOTE FOR PCB DIAGRAMS:**

1. Part numbers in PCB diagrams match those in the schematic diagrams.
2. A comparison between the main parts of PCB and schematic diagrams is shown below.


| Symbol in PCB Diagrams | Symbol in Schematic Diagrams | Part Name                |
|------------------------|------------------------------|--------------------------|
|                        |                              | Transistor               |
|                        |                              | Transistor with resistor |
|                        |                              | Field effect transistor  |
|                        |                              | Resistor array           |
|                        |                              | 3-terminal regulator     |

• The parts mounted on this PCB include all necessary parts for several destinations. For further information for respective destinations, be sure to check with the schematic diagram.

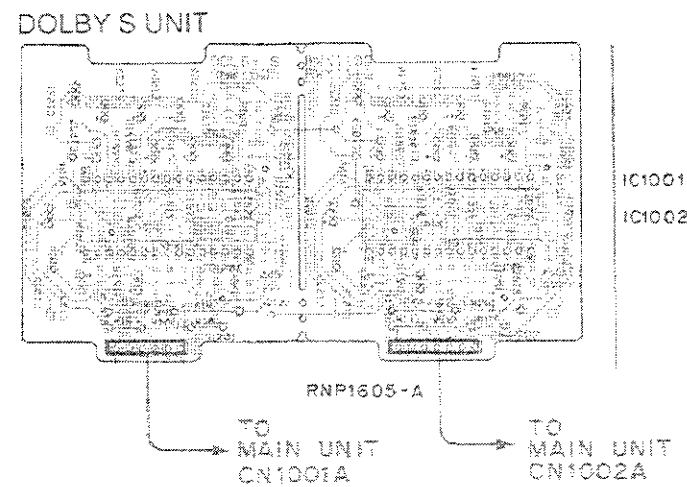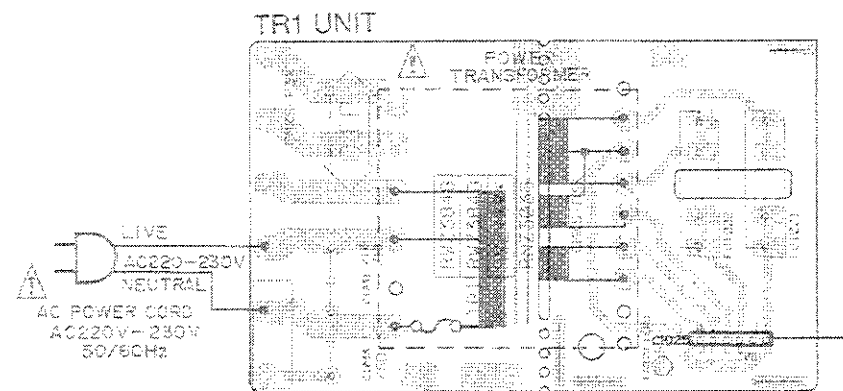


TO DOI UNIT C

• This diagram is viewed from the mounted parts side.

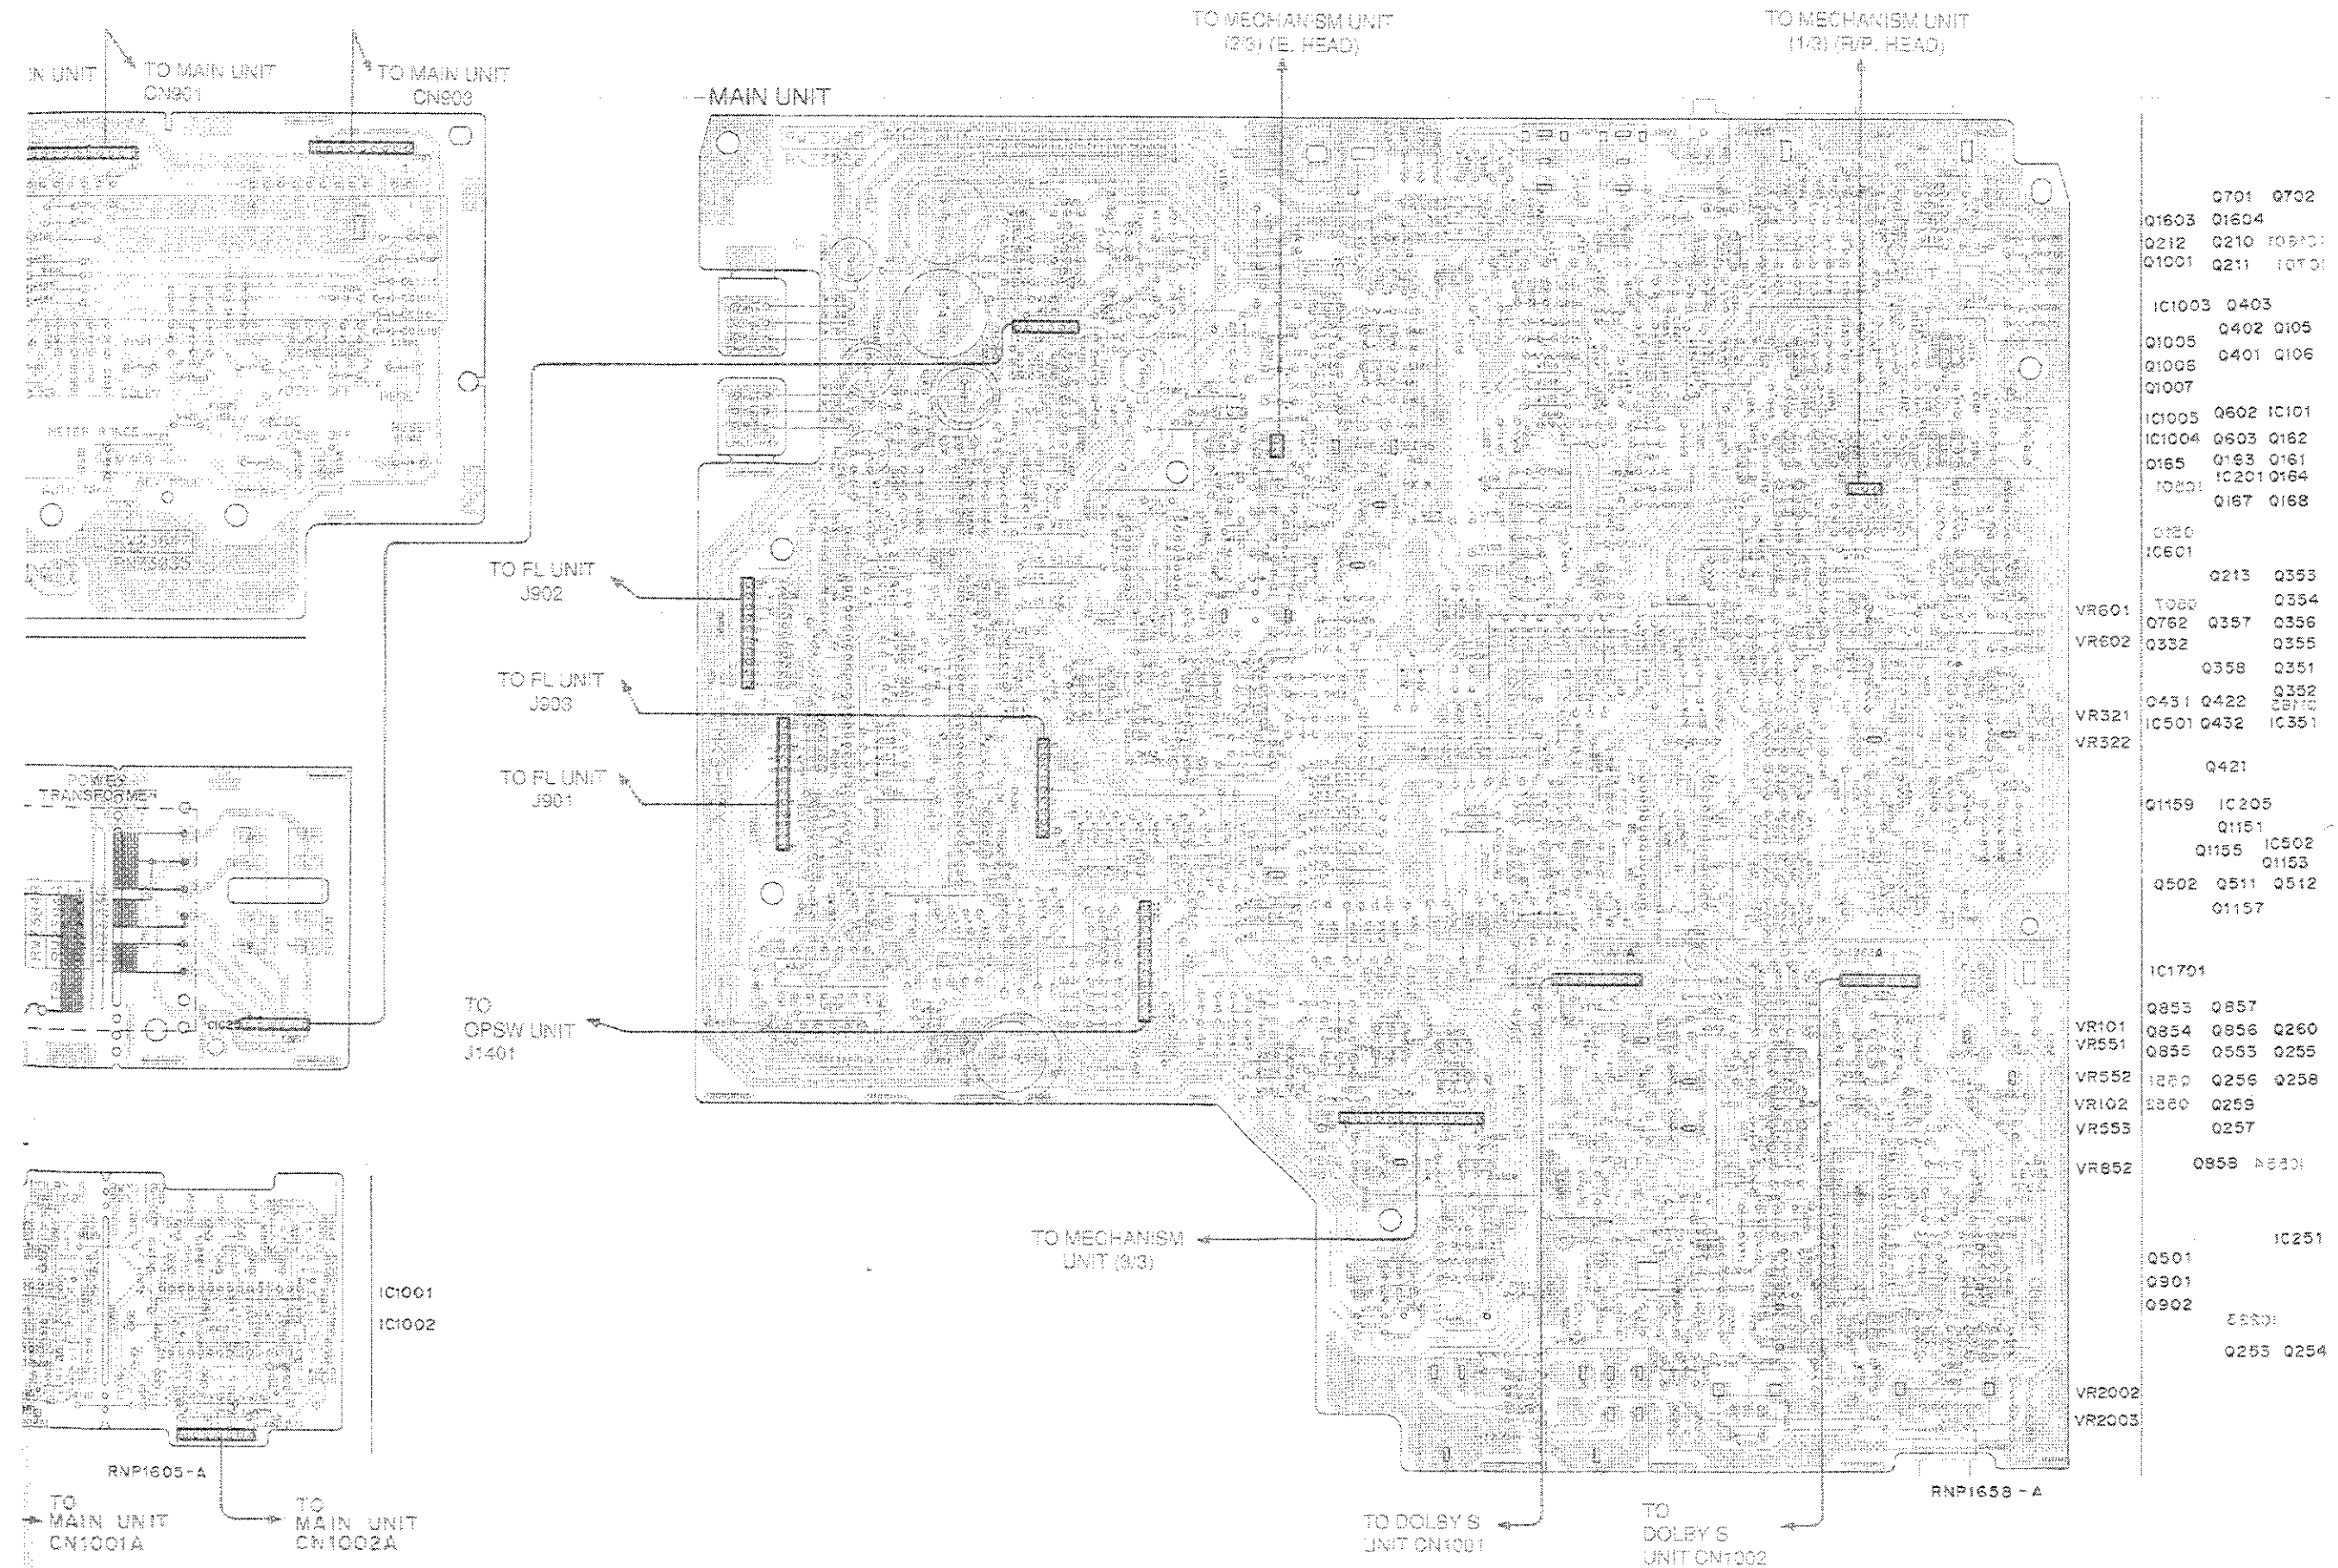

- Q701 Q702
- Q1603 Q1604
- Q212 Q210 Q1001
- Q1001 Q211 Q1002
- IC1003 Q403
- Q1005 Q402 Q105
- Q1006 Q401 Q106
- Q1007
- IC1005 Q602 IC101
- IC1004 Q603 Q162
- Q165 Q163 Q161
- IC201 Q164
- IC202 Q167 Q168
- Q120
- IC601
- Q213 Q353
- Q354
- VR601 Q355
- VR602 Q356
- Q357
- Q358 Q351
- VR321 Q352
- VR322 IC501 Q432 IC351
- Q421
- Q1159 IC205
- Q1151
- Q1155 IC502
- Q1153
- Q502 Q511 Q512
- Q1157
- IC1701
- Q853 Q857
- VR101 Q854 Q856 Q260
- VR551 Q855 Q553 Q255
- VR552 Q256 Q258
- VR102 Q259
- VR553 Q257
- VR852 Q858 Q859
- Q501
- Q901
- Q902
- IC251
- Q253
- Q254
- Q255 Q254
- VR2002
- VR2003


4.1 MAIN, OPSW, FL AND TR 1 UNIT

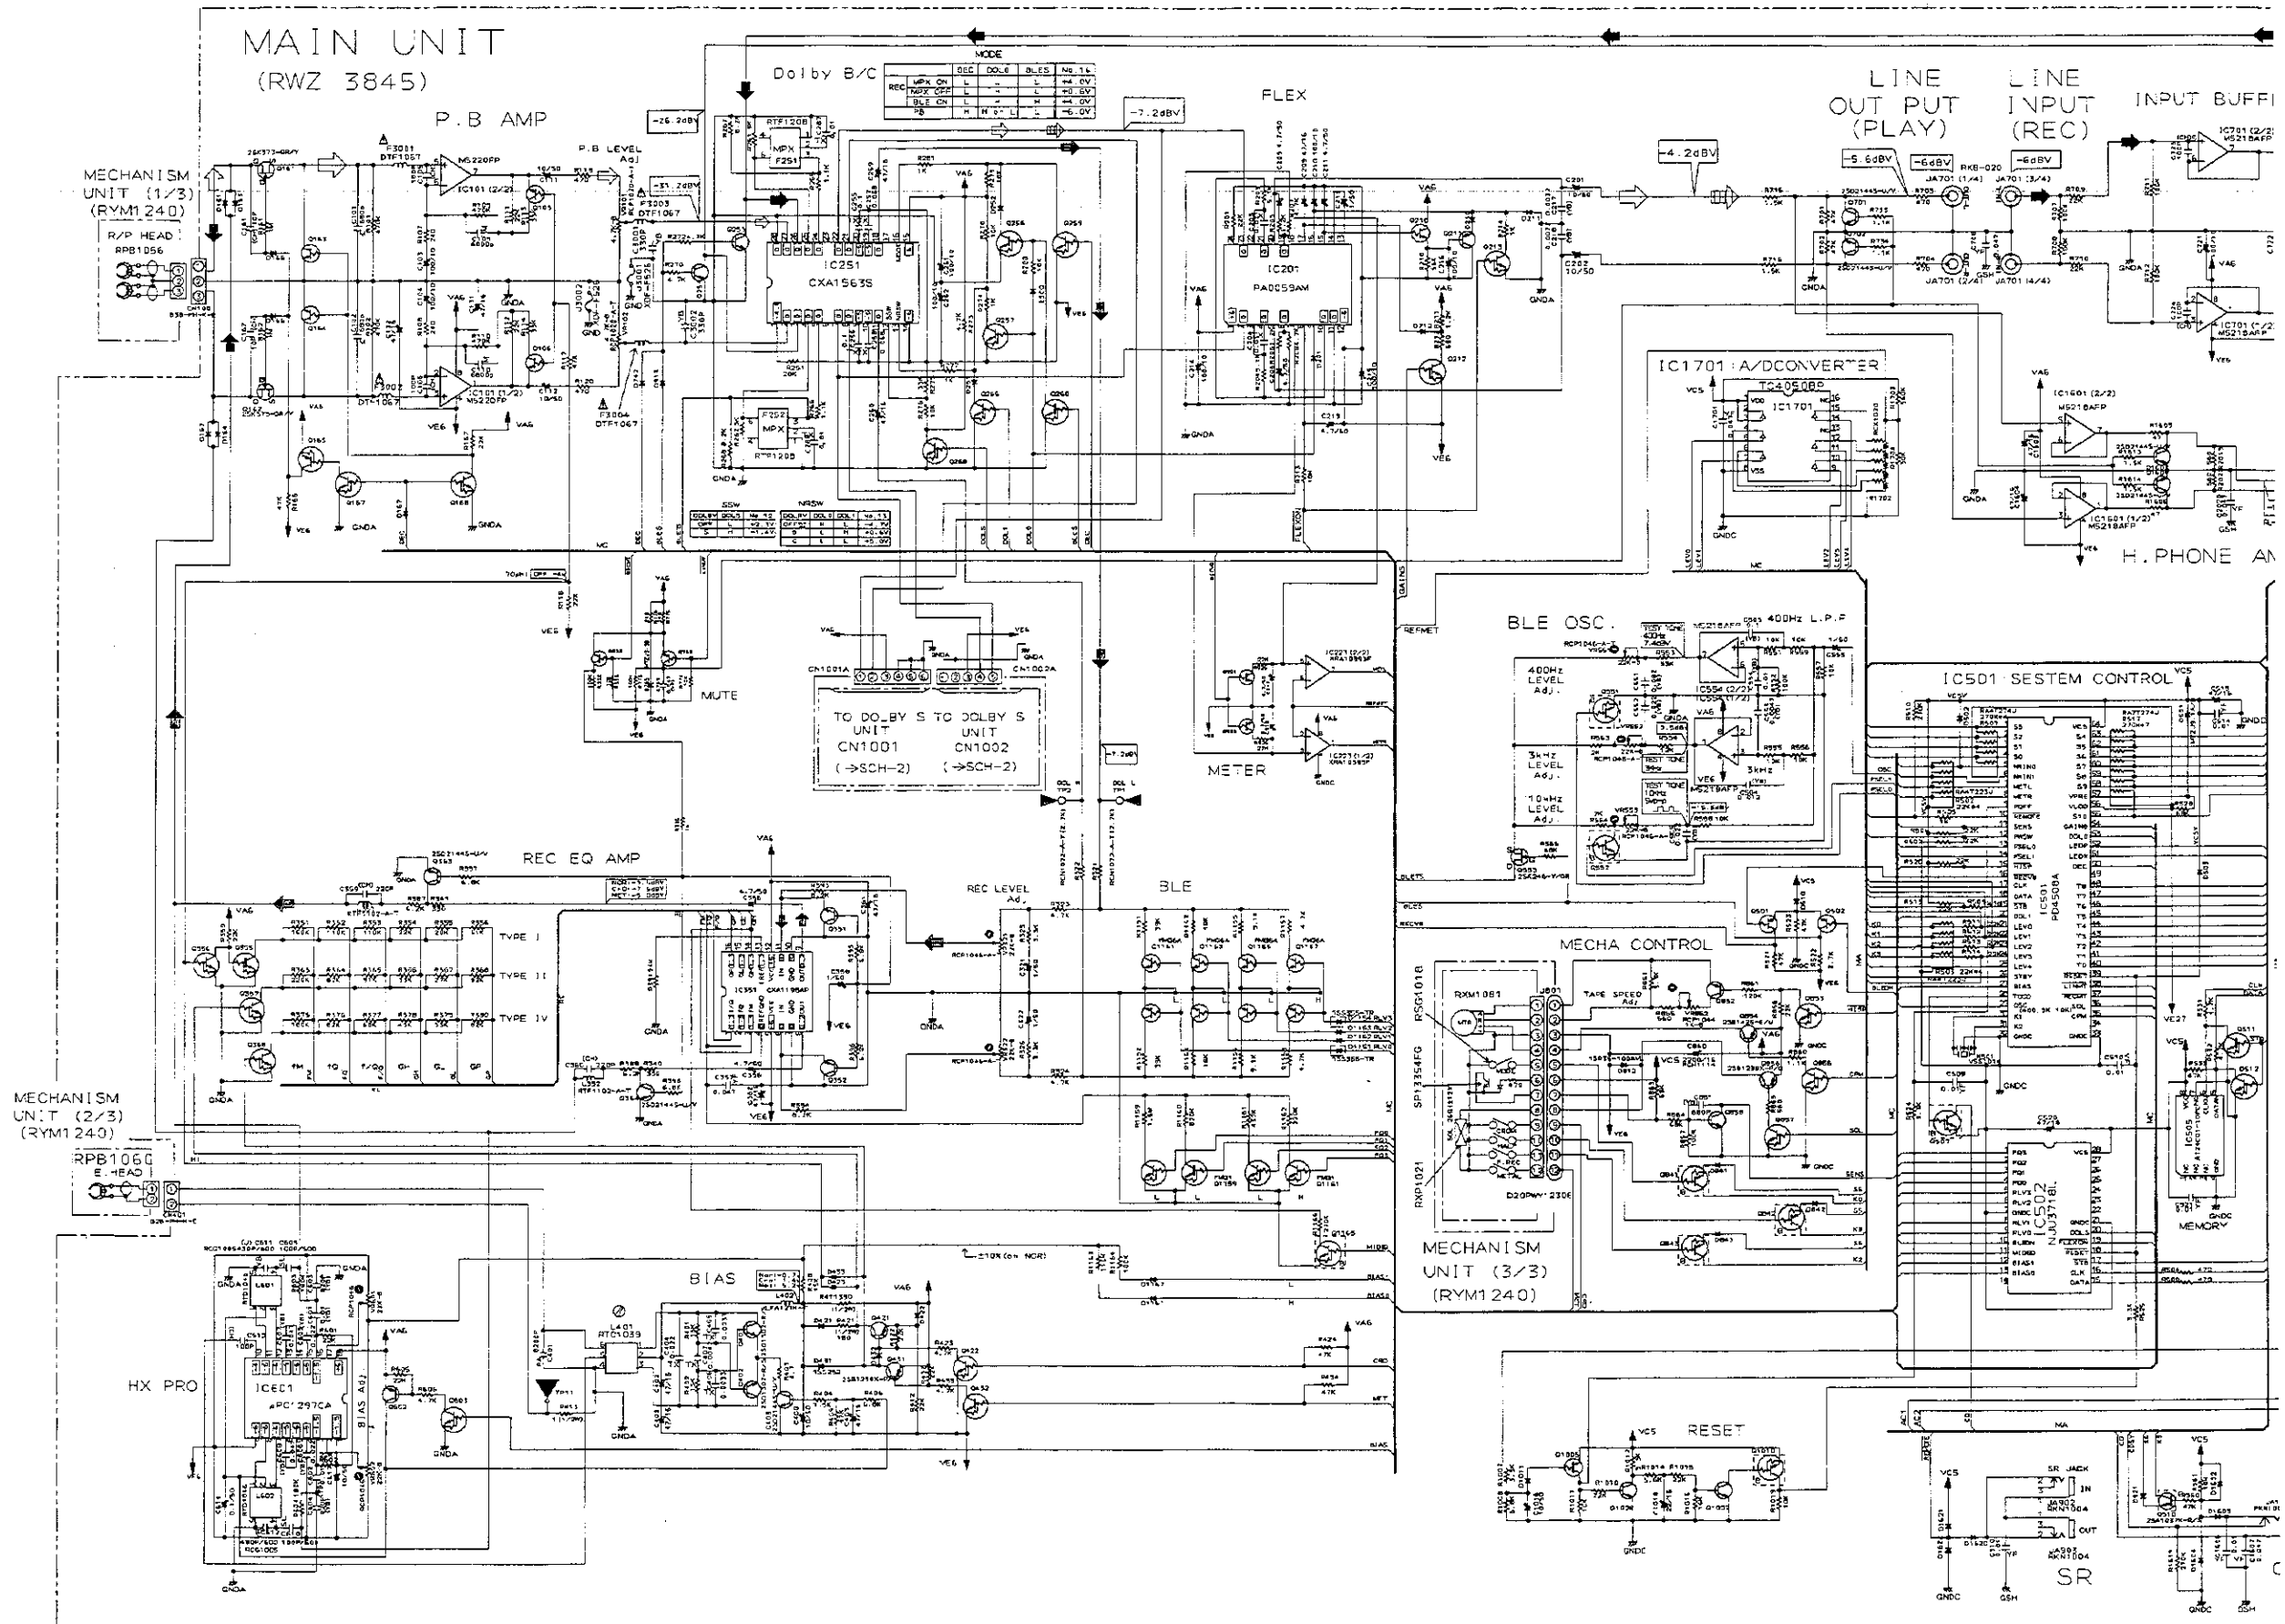

**SCH-1**

MAIN UNIT,  
OPSW UNIT,  
FL UNIT,  
TR 1 UNIT

SCH-1

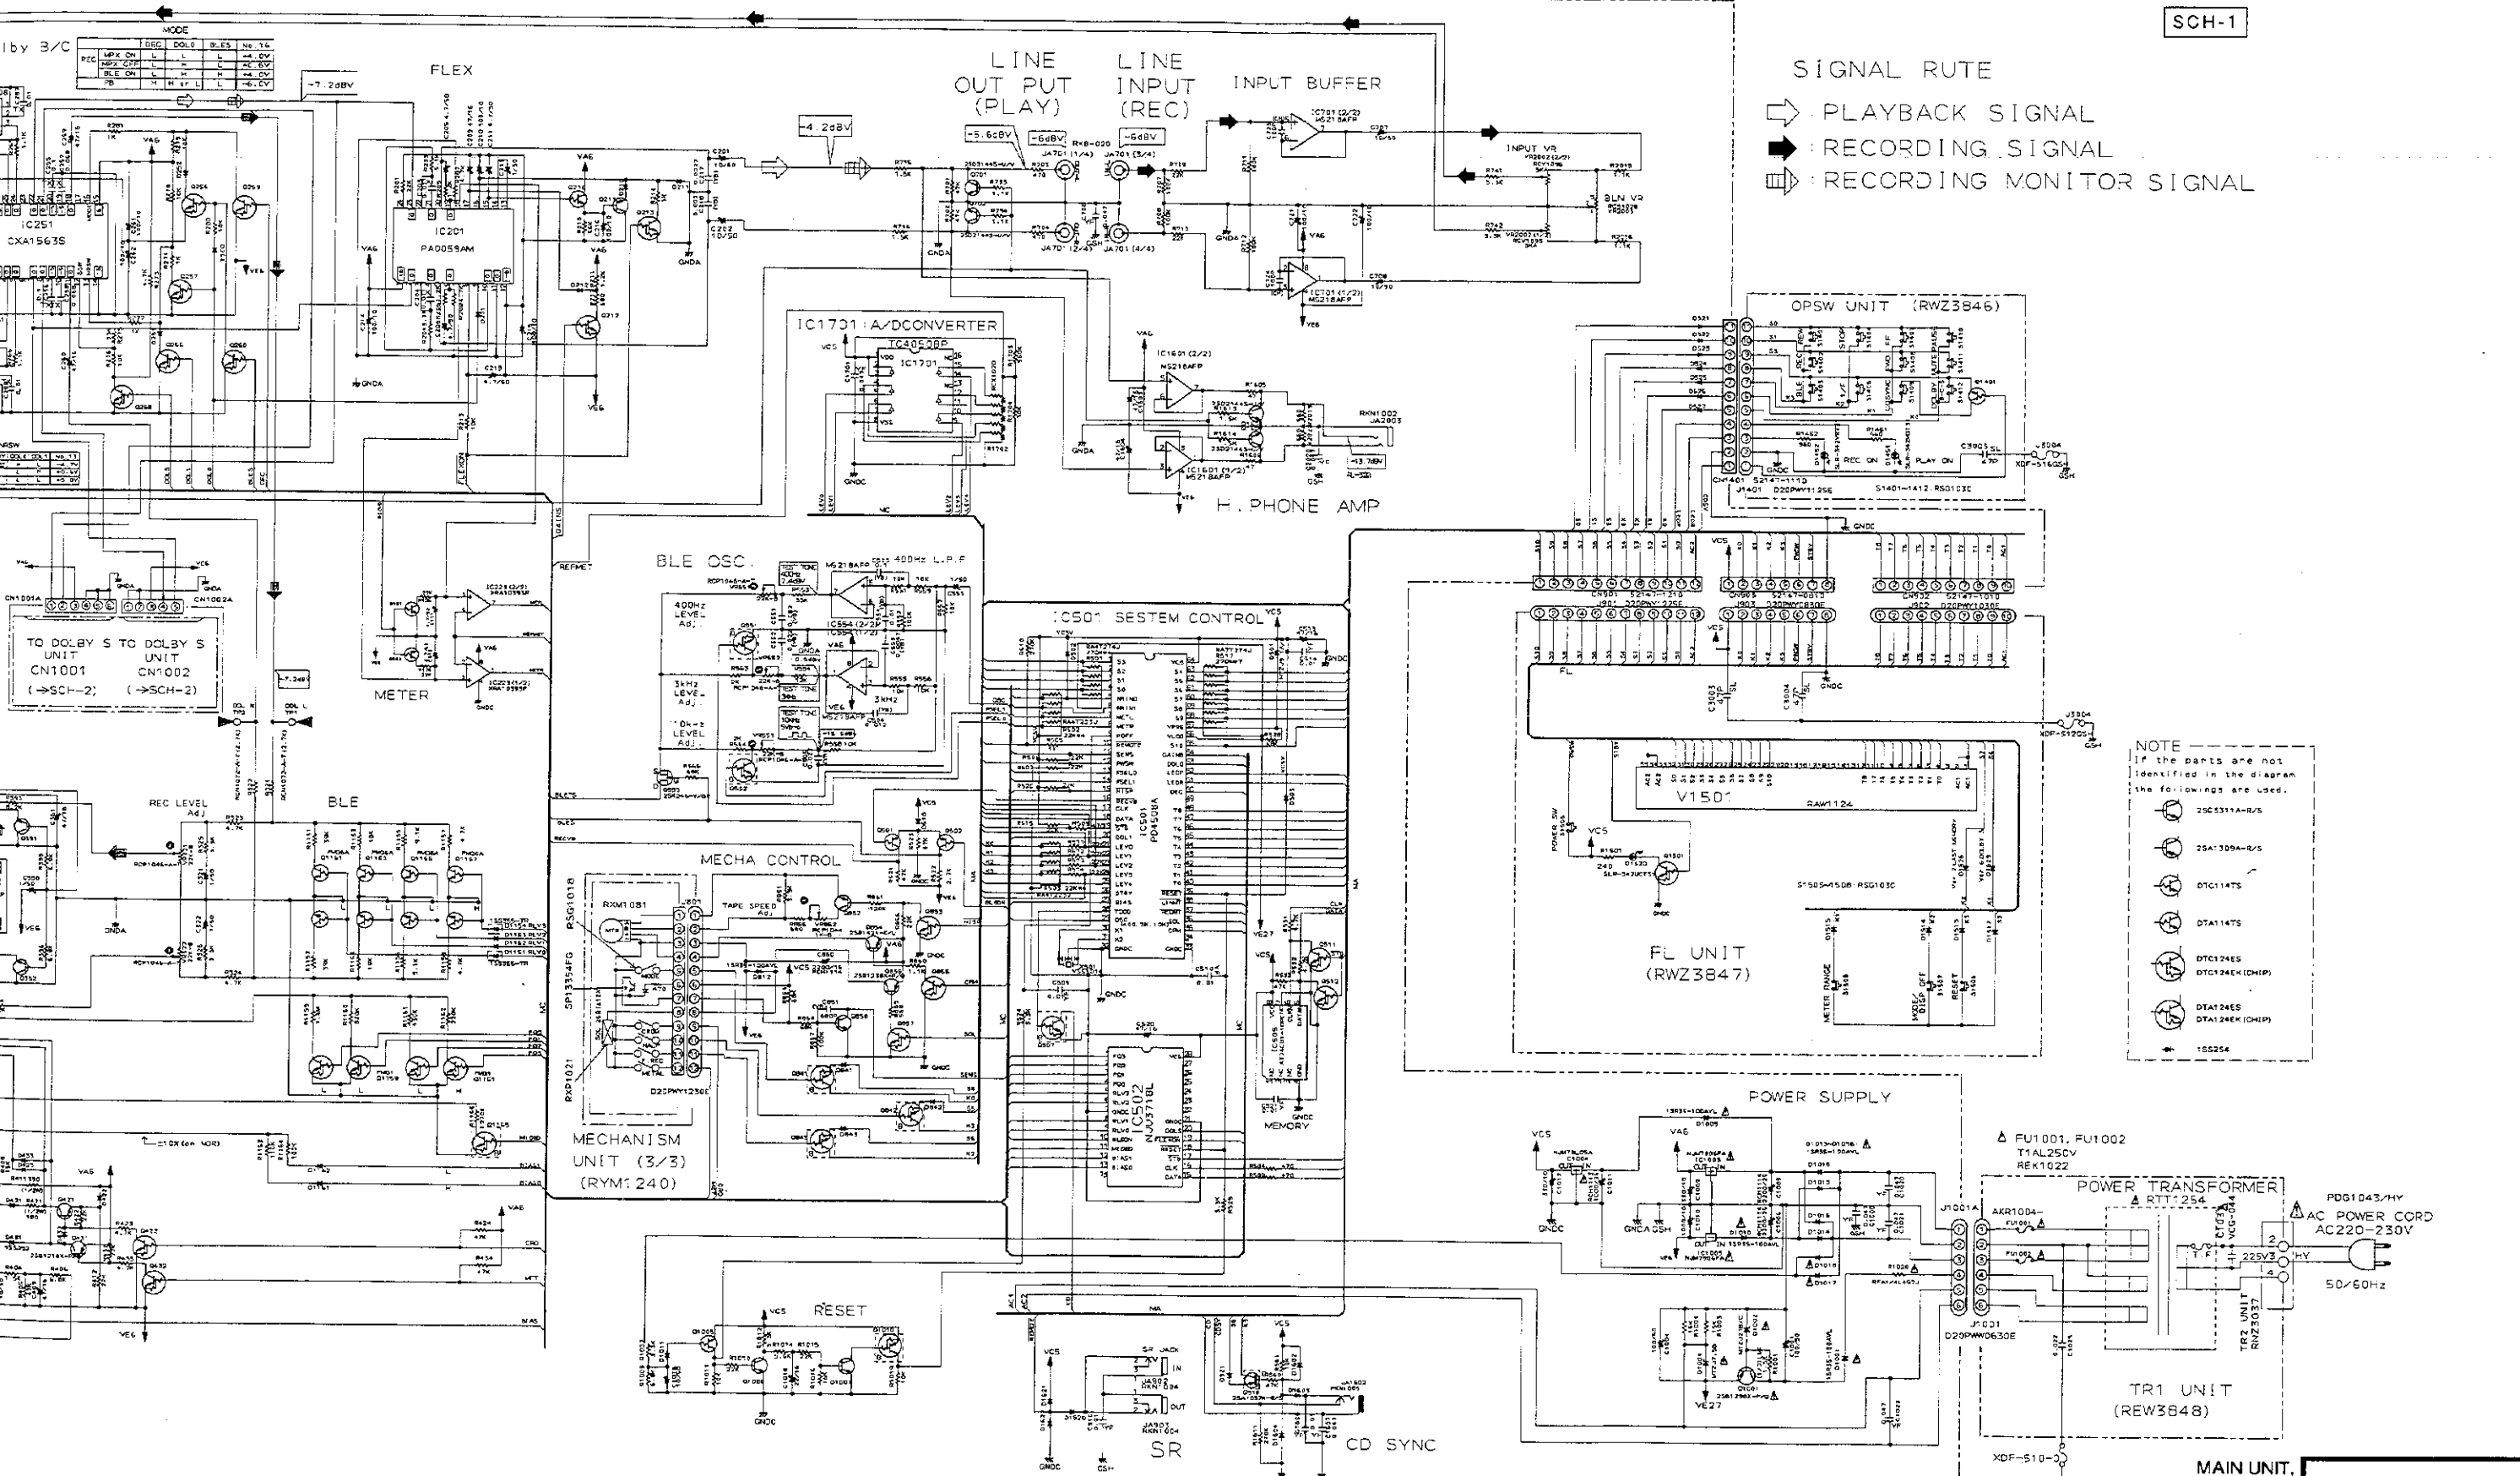

SIGNAL RUTE  
 ⇨ PLAYBACK SIGNAL  
 ⇨ RECORDING SIGNAL  
 ⇨ RECORDING MONITOR SIGNAL

NOTE  
 If the parts are not identified in the diagram the followings are used.  
 25C531A-R/S  
 25A1309A-R/S  
 DTG1147S  
 DTAT147S  
 DTG124ES  
 DTG124EK (CHIP)  
 DTAT124ES  
 DTAT124EK (CHIP)  
 15525A

MAIN UNIT,  
 OPSW UNIT,  
 FL UNIT,  
 TR1 UNIT

SCH-1

4.2 DOLBY S UNIT

NOTE FOR SCHEMATIC DIAGRAMS (Type 6A)

1. When ordering service parts, be sure to refer to "PARTS LIST of EXPLODED VIEWS" or "PCB PARTS LIST".

2. Since these are basic circuits, some parts of them or the values of some components may be changed for improvement.

3. RESISTORS:  
Unit: k: kΩ, M: MΩ, or Ω unless otherwise noted.  
Rated power: 1/4W, 1/6W, 1/8W, 1/10W unless otherwise noted.  
Tolerance: (F): ±1%, (G): ±2%, (K): ±10%, (M): ±20% or ±5% unless otherwise noted.

4. CAPACITORS:  
Unit: p:pF or μF unless otherwise noted.  
Ratings: capacitor (μF)/ voltage (V) unless otherwise noted.  
Rated voltage: 50V except for electrolytic capacitors.

5. COILS:  
Unit: m:mH or μH unless otherwise noted.

6. VOLTAGE AND CURRENT:  
V or - V : DC voltage (V) in STOP mode unless otherwise noted.  
mA or - mA : DC current in STOP mode unless otherwise noted.


7. OTHERS:  
⊗ or ⊙ : Adjusting point.  
◁ : Measurement point.  
The Δ mark found on some component parts indicates the importance of the safety factor of the parts. Therefore, when replacing, be sure to use parts of identical designation.

8. SCH-□ ON THE SCHEMATIC DIAGRAM:  
SCH-□ indicates the drawing number of the schematic diagram. (SCH stands for schematic diagram.)

9. SWITCHES (Underline indicates switch position):

- OPSW UNIT
- S1401: ◀/MS REW
  - S1402: ● REC
  - S1403: SUPER AUTO BLE
  - S1404: ■ STOP
  - S1406: FLEX
  - S1407: ▶/MF FF
  - S1408: ▶ PLAY
  - S1409: ■ CD SYNCHRO
  - S1410: || PAUSE
  - S1411: ○ REC MUTE
  - S1412: DOLBY NR


- FL UNIT
- S1505: POWER STANDBY/ON SW
  - S1506: COUNTER RESET
  - S1507: COUNTER MODE/DISP OFF
  - S1508: METER RANGE

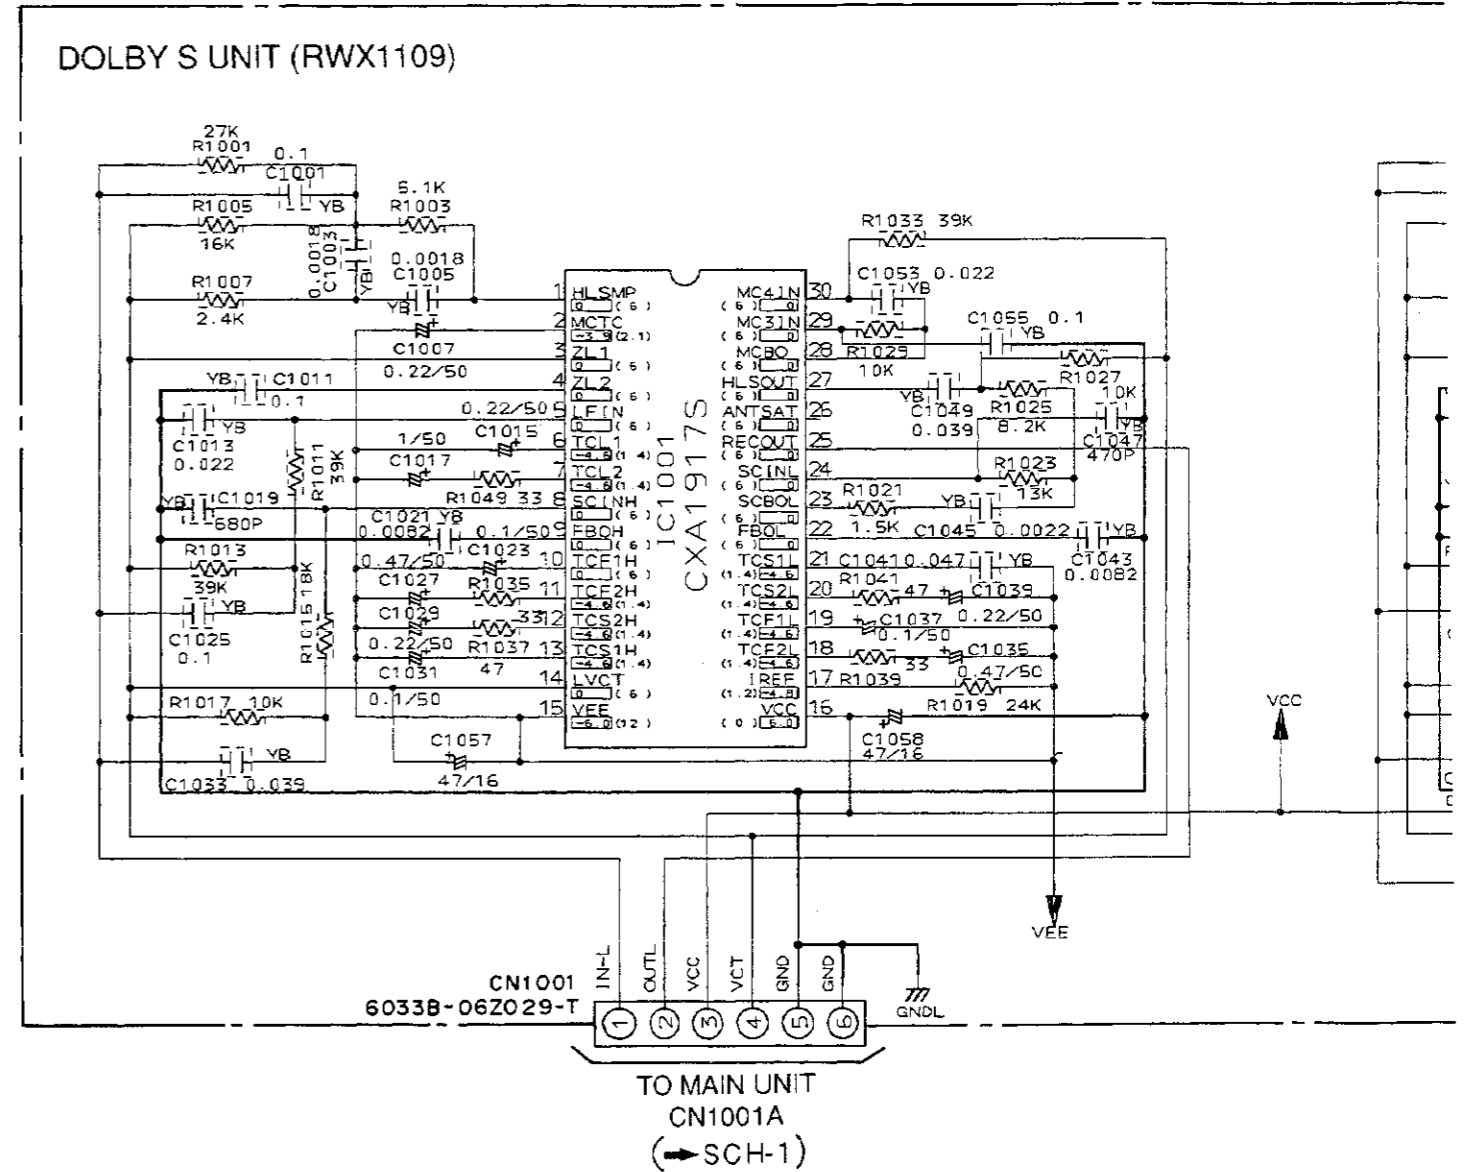

SCH-2 DOLBY S UNIT

4.2 DOLBY S UNIT

SCH-2

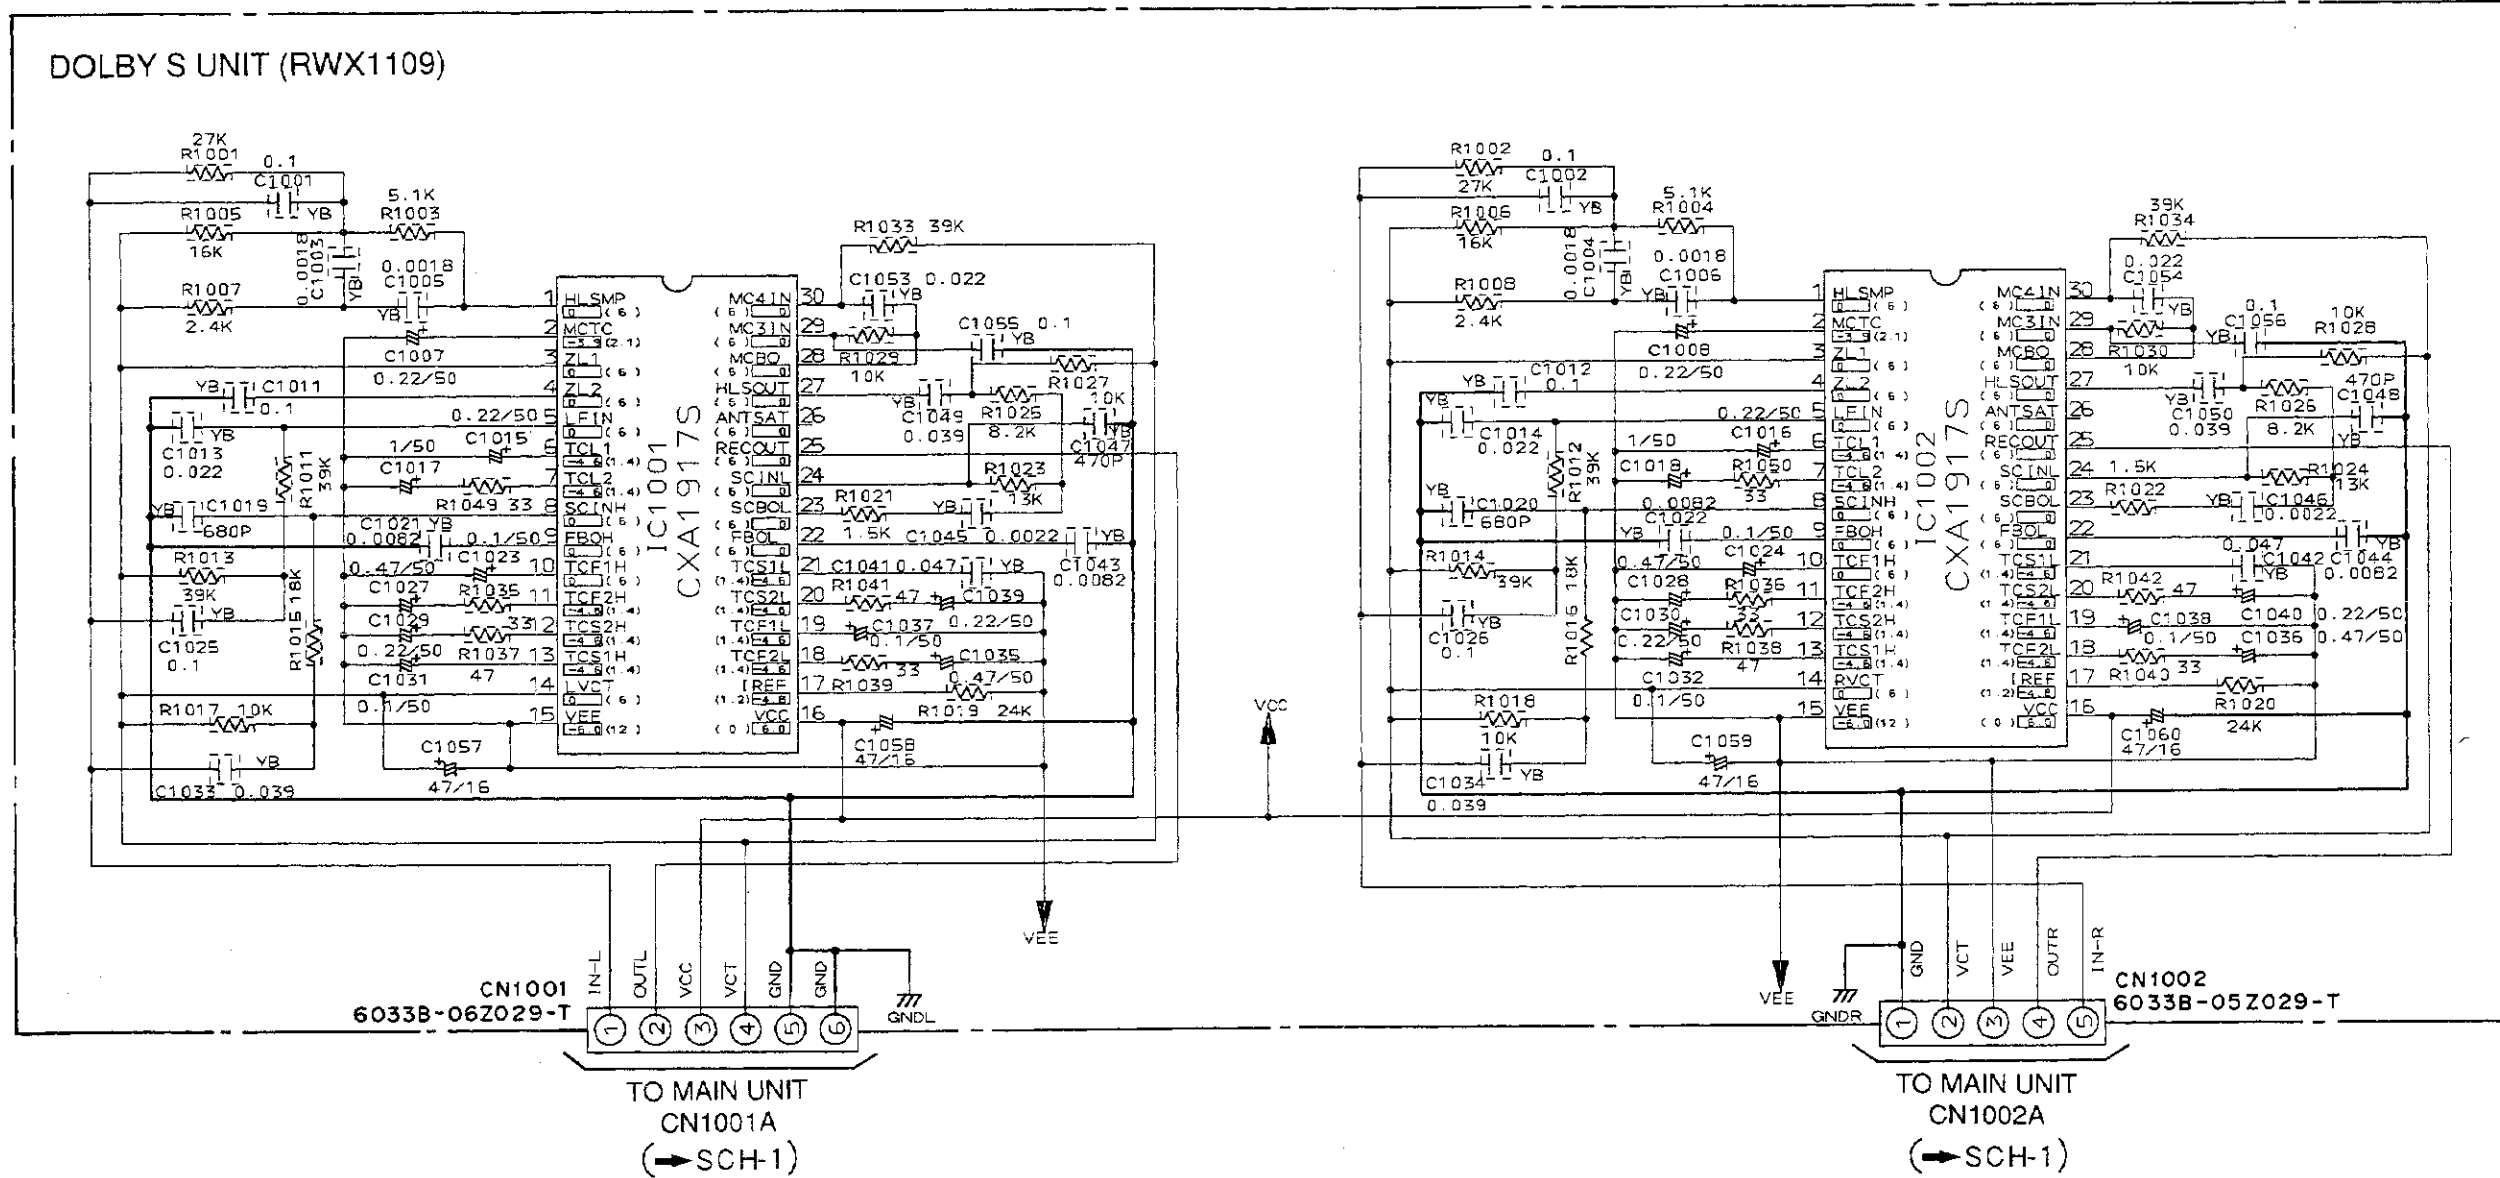

SCH-2

DOLBY S UNIT

DOLBY S UNIT

SCH-2

## 5. PCB PARTS LIST

### NOTES:

- Parts marked by "NSP" are generally unavailable because they are not in our Master Spare Parts List.
- The  $\Delta$  mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
- Parts marked by "⊙" are not always kept in stock. Their delivery time may be longer than usual or they may be unavailable.
- When ordering resistors, first convert resistance values into code form as shown in the following examples.

Ex.1 When there are 2 effective digits (any digit apart from 0), such as 560 ohm and 47K ohm (tolerance is shown by J=5%, and K=10%).

560 Ω → 56 × 10<sup>1</sup> → 561 .....RD1/4PU **561 J**

47 kΩ → 47 × 10<sup>3</sup> → 473 .....RD1/4PU **473 J**

0.5 Ω → 0R5 .....RN2H **0R5 K**

1 Ω → 1R0 .....RS1P **1R0 K**

Ex.2 When there are 3 effective digits (such as in high precision metal film resistors).

5.62 kΩ → 562 × 10<sup>1</sup> → 5621 .....RN1/4PC **5621 F**

| Mark                      | No.                            | Description | Parts No.    | Mark                     | No.                               | Description | Parts No.    |
|---------------------------|--------------------------------|-------------|--------------|--------------------------|-----------------------------------|-------------|--------------|
| <b>LIST OF ASSEMBLIES</b> |                                |             |              |                          |                                   |             |              |
| NSP                       | MOTHER UNIT                    |             | RWM1895      |                          | Q1010, Q841-Q843                  |             | DTA124EK     |
|                           | ├ MAIN UNIT                    |             | RWZ3845      |                          | Q165                              |             | DTA124ES     |
|                           | ├ ─ DOLBY S UNIT               |             | RWX1109      |                          | Q105, Q106, Q163, Q164, Q210      |             | DTC114TS     |
|                           | ├ OPSW UNIT                    |             | RWZ3846      |                          | Q901, Q902                        |             | DTC114TS     |
|                           | ├ FL UNIT                      |             | RWZ3847      |                          | Q1165, Q507, Q551, Q552           |             | DTC124EK     |
|                           | ├ TR 1 UNIT                    |             | RWZ3848      |                          | Q167, Q168, Q212, Q213            |             | DTC124ES     |
|                           |                                |             |              |                          | Q255-Q260, Q355-Q358, Q422        |             | DTC124ES     |
|                           |                                |             |              |                          | Q432, Q511, Q512, Q603, Q853      |             | DTC124ES     |
|                           |                                |             |              |                          | Q855, Q857                        |             | DTC124ES     |
|                           |                                |             |              |                          | Q1159, Q1161                      |             | FMG1         |
|                           |                                |             |              |                          | Q1151, Q1153, Q1155, Q1157        |             | FMG6A        |
|                           |                                |             |              | $\Delta$                 | D1001, D1009, D1010, D1013-D1016  |             | 1SR35-100AVL |
|                           |                                |             |              |                          | D812                              |             | 1SR35-100AVL |
|                           |                                |             |              |                          | D431                              |             | 1SS252       |
|                           |                                |             |              |                          | D1011, D1017, D1018, D1152, D1153 |             | 1SS254       |
|                           |                                |             |              |                          | D1161, D1162, D1602-D1604         |             | 1SS254       |
|                           |                                |             |              |                          | D161, D162, D1620-D1622           |             | 1SS254       |
|                           |                                |             |              |                          | D163-D167, D201, D210-D212        |             | 1SS254       |
|                           |                                |             |              |                          | D251-D253, D421-D423              |             | 1SS254       |
|                           |                                |             |              |                          | D432, D433, D502, D503, D510      |             | 1SS254       |
|                           |                                |             |              |                          | D521-D527, D742, D841-D843        |             | 1SS254       |
|                           |                                |             |              |                          | D913, D921                        |             | 1SS254       |
|                           |                                |             |              |                          | D1151, D1154                      |             | 1SS355       |
|                           |                                |             |              | $\Delta$                 | D1002                             |             | MTZJ27B      |
|                           |                                |             |              |                          | D765                              |             | MTZJ3.9B     |
|                           |                                |             |              | $\Delta$                 | D1004                             |             | MTZJ7.5B     |
|                           |                                |             |              |                          | D501                              |             | MTZJ9.1A     |
| <b>SEMICONDUCTORS</b>     |                                |             |              | <b>COILS AND FILTERS</b> |                                   |             |              |
|                           | IC505                          |             | AT24C01-10PC | $\Delta$                 | F3001-F3004                       |             | DTF1067      |
|                           | IC351                          |             | CXA1198AP    |                          | L402                              |             | LFA121J      |
|                           | IC251                          |             | CXA1563S     |                          | L401                              |             | RTD1039      |
|                           | IC1601, IC554, IC701           |             | M5218AFP     |                          | L601, L602 (4.6μH/105kHz)         |             | RTD1046      |
|                           | IC101                          |             | M5220FP      |                          | L351, L352 (10μH)                 |             | RTF1102      |
| $\Delta$                  | IC1003                         |             | NJM7806FA    |                          | F251, F252                        |             | RTF1208      |
| $\Delta$                  | IC1004                         |             | NJM78L05A    | <b>CAPACITORS</b>        |                                   |             |              |
| $\Delta$                  | IC1005                         |             | NJM7906FA    |                          | C609, C610                        |             | CCCSL101K500 |
|                           | IC502                          |             | NJU3718L     |                          | C161, C162                        |             | CCSQCH100D50 |
|                           | IC201                          |             | PA0059AM     |                          | C105, C106, C613, C723, C724      |             | CCSQCH101J50 |
|                           | IC501                          |             | PD4508A      |                          |                                   |             |              |
|                           | IC1701                         |             | TC4050BP     |                          |                                   |             |              |
|                           | IC601                          |             | UPC1297CA    |                          |                                   |             |              |
|                           | IC223                          |             | XRA10393F    |                          |                                   |             |              |
|                           | Q510                           |             | 2SA1037K     |                          |                                   |             |              |
| $\Delta$                  | Q211, Q421, Q602, Q852         |             | 2SA1309A     |                          |                                   |             |              |
|                           | Q1001                          |             | 2SB1238X     |                          |                                   |             |              |
|                           | Q431, Q856                     |             | 2SB1238X     |                          |                                   |             |              |
|                           | Q854                           |             | 2SB1425      |                          |                                   |             |              |
|                           | Q1006, Q1007, Q253, Q254       |             | 2SC3311A     |                          |                                   |             |              |
|                           | Q351, Q352, Q858               |             | 2SC3311A     |                          |                                   |             |              |
|                           | Q401, Q402                     |             | 2SD1302      |                          |                                   |             |              |
|                           | Q1603, Q1604, Q353, Q354, Q403 |             | 2SD2144S     |                          |                                   |             |              |
|                           | Q701, Q702                     |             | 2SD2144S     |                          |                                   |             |              |
|                           | Q553                           |             | 2SK246       |                          |                                   |             |              |
|                           | Q161, Q162                     |             | 2SK373       |                          |                                   |             |              |
|                           | Q1005, Q332, Q501, Q502, Q762  |             | DTA114TS     |                          |                                   |             |              |

# CT-S450S

| Mark | No.                              | Description | Parts No.    | Mark | No.                              | Description | Parts No.   |
|------|----------------------------------|-------------|--------------|------|----------------------------------|-------------|-------------|
|      | C359, C360                       |             | CCSQCH221J50 |      | R1164, R707, R708, R867          |             | RD1/6PM104J |
|      | C213, C321, C322, C358, C555     |             | CEAS010M50   |      | R2015, R2016, R265, R266         |             | RD1/6PM112J |
|      | C1016, C111, C112, C201, C202    |             | CEAS100M50   |      | R733, R734, R860                 |             | RD1/6PM112J |
|      | C408, C617, C707, C708           |             | CEAS100M50   |      | R1163, R352, R353                |             | RD1/6PM114J |
|      | C103, C104, C210, C214-C216      |             | CEAS101M10   |      | R1613, R1614, R715, R716         |             | RD1/6PM152J |
|      | C261, C262, C721, C722           |             | CEAS101M10   |      | R1003, R1004, R401, R402, R408   |             | RD1/6PM153J |
|      | C1001, C1004                     |             | CEAS101M50   |      | R351                             |             | RD1/6PM154J |
|      | C1010                            |             | CEAS102M10   |      | R375, R711, R712                 |             | RD1/6PM184J |
|      | C1018                            |             | CEAS220M16   |      | R355                             |             | RD1/6PM203J |
|      | C1009, C1012                     |             | CEAS331M10   |      | R111, R112, R201, R350, R354     |             | RD1/6PM223J |
|      | C131, C132, C1603, C1604, C209   |             | CEAS470M16   |      | R709, R710, R925, R926           |             | RD1/6PM223J |
|      | C259, C260, C361, C362           |             | CEAS470M16   |      | R363                             |             | RD1/6PM224J |
|      | C402, C403, C409, C513, C520     |             | CEAS470M16   |      | R775, R776                       |             | RD1/6PM241J |
|      | C205, C206, C211, C219           |             | CEAS4R7M50   |      | R522                             |             | RD1/6PM272J |
|      | C355, C356, C917, C918           |             | CEAS4R7M50   |      | R367                             |             | RD1/6PM273J |
|      | C614                             |             | CEASR10M50   |      | R261, R262                       |             | RD1/6PM302J |
|      | C203, C204, C287, C288           |             | CFTYA103J50  |      | R340, R341                       |             | RD1/6PM331J |
|      | C255, C256                       |             | CFTYA104J50  |      | R325, R326, R524, R525           |             | RD1/6PM332J |
|      | C404                             |             | CFTYA223J50  |      | R741, R742, R851                 |             | RD1/6PM332J |
|      | C257, C258                       |             | CFTYA683J50  |      | R113, R114, R366, R379           |             | RD1/6PM333J |
|      | C3001, C3002                     |             | CKCYB331K50  |      | R378                             |             | RD1/6PM433J |
|      | C1606, C509, C510, C514, C521    |             | CKCYF103Z50  |      | R1605, R1606                     |             | RD1/6PM470J |
|      | C910                             |             | CKCYF103Z50  |      | R119, R120, R703, R704           |             | RD1/6PM471J |
|      | C1008, C1020-C1022, C1607, C1701 |             | CKCYF473Z50  |      | R207, R208, R323, R324           |             | RD1/6PM472J |
|      | C2020, C357, C706                |             | CKCYF473Z50  |      | R117, R424, R434, R521, R523     |             | RD1/6PM473J |
|      | C554, C601, C602                 |             | CKSQYB103K50 |      | R701, R702                       |             | RD1/6PM473J |
|      | C503                             |             | CKSQYB104K25 |      | R101, R102, R109, R110           |             | RD1/6PM474J |
|      | C504                             |             | CKSQYB123K50 |      | R403                             |             | RD1/6PM4R7J |
|      | C217, C218                       |             | CKSQYB222K50 |      | R203, R204                       |             | RD1/6PM512J |
|      | C505, C552, C605, C606           |             | CKSQYB223K50 |      | R356                             |             | RD1/6PM513J |
|      | C553                             |             | CKSQYB472K50 |      | R2019, R2020, R855, R865         |             | RD1/6PM561J |
|      | C607, C608                       |             | CKSQYB473K50 |      | R387, R388                       |             | RD1/6PM622J |
|      | C851                             |             | CKSQYB681K50 |      | R377, R864                       |             | RD1/6PM683J |
|      | C603, C604                       |             | CKSQYB821K50 |      | R267, R268, R393, R394           |             | RD1/6PM822J |
|      | C551                             |             | CKSQYB823K25 |      | R364, R368, R376, R380           |             | RD1/6PM823J |
|      | C769                             |             | CKSQYF473Z50 |      | R365                             |             | RD1/6PM913J |
|      | C405, C406                       |             | CQMA332J50   | △    | R1020                            |             | RFA1/4LAR7J |
|      | C407                             |             | CQMA472J50   |      | R583, R584                       |             | RS1/8S000J  |
|      | C101, C102                       |             | CQMA681J50   |      | VR101, VR102 (4.7kΩ)             |             | RCP1020     |
|      | C109, C110                       |             | CQMA682J50   |      | VR852 (1.0kΩ)                    |             | RCP1044     |
|      | C401                             |             | CQPA822J100  |      | VR321, VR322, VR551-VR553 (22kΩ) |             | RCP1046     |
|      | C860 (2200μF/16V)                |             | PCH1114      |      | VR601, VR602 (22kΩ)              |             | RCP1046     |
|      | C611, C612 (430pF/500V)          |             | RCG1005      |      | VR2003                           |             | RCS1028     |
|      | C1011 (1000μF/25V)               |             | RCH1113      |      | VR2002 (5kΩ-Ax2)                 |             | RCV1095     |
|      | C1005, C1006 (2200μF/25V)        |             | RCH1114      |      | Other Resistors                  |             | RS1/10S□□□□ |

## RESISTORS

|              |              |
|--------------|--------------|
| R502, R503   | RA4T223J     |
| R501         | RA4T274J     |
| R517         | RA7T274J     |
| R1702 (11kΩ) | RCX1020      |
| R413         | RD1/2LMF010J |
| R1001        | RD1/2LMF152J |
| R421         | RD1/2LMF181J |
| R411         | RD1/2LMF391J |

## OTHERS

|        |                      |            |
|--------|----------------------|------------|
| CN903  | 8P JUMPER CONNECTOR  | 52147-0810 |
| CN902  | 10P JUMPER CONNECTOR | 52147-1010 |
| CN1401 | 11P JUMPER CONNECTOR | 52147-1110 |
| CN901  | 12P JUMPER CONNECTOR | 52147-1210 |
| CN401  | KR KONNECTOR         | B2B-PH-K-E |
| CN100  | KR CONNECTOR         | B3B-PH-K-E |
| JA1602 | MINI JACK            | PKN1005    |
| JA701  | 4P PIN JACK          | RKB-020    |



| Mark | No.          | Description                    | Parts No. |
|------|--------------|--------------------------------|-----------|
|      | JA2003       | HEADPHONE JACK                 | RKN1002   |
|      | JA902, JA903 | REMOTE CONTROL JACK            | RKN1004   |
|      |              | PCB BINDER                     | VEF1008   |
|      |              | PCB BINDER                     | VEF1040   |
|      |              | EARTH METAL FITTING            | VNF-091   |
| X501 |              | CERAMIC RESONATOR<br>(4.19MHz) | VSS1014   |

## DLBY S UNIT

### SEMICONDUCTORS

IC1001, IC1002 CXA1917S

### CAPACITORS

C1017, C1018 CEJA010M50  
 C1057-C1060 CEJA470M16  
 C1023, C1024, C1031, C1032 CEJAR10M50  
 C1037, C1038 CEJAR10M50  
 C1007, C1008, C1015, C1016 CEJAR22M50

C1029, C1030, C1039, C1040 CEJAR22M50  
 C1027, C1028, C1035, C1036 CEJAR47M50  
 C1001, C1002, C1011, C1012 CKSQYB104K25  
 C1025, C1026, C1055, C1056 CKSQYB104K25  
 C1003-C1006 CKSQYB182K50

C1045, C1046 CKSQYB222K50  
 C1013, C1014, C1053, C1054 CKSQYB223K50  
 C1033, C1034, C1049, C1050 CKSQYB393K50  
 C1047, C1048 CKSQYB471K50  
 C1041, C1042 CKSQYB473K50

C1019, C1020 CKSQYB681K50  
 C1021, C1022, C1043, C1044 CKSQYB822K50

### RESISTORS

All Resistors RS1/10S□□□J

### OTHERS

CN1002 CONNECTOR 5P 6033B-05Z029  
 CN1001 CONNECTOR 6P 6033B-06Z029

## OPSW UNIT

### SEMICONDUCTORS

Q1401 DTA114TS  
 D1451 SLR-342MGT31  
 D1452 SLR-342VRT31

### SWITCHES AND RELAYS

S1401-S1404, S1406-S1412 RSG1030

### CAPACITORS

C3005 CCCSL470J50

### RESISTORS

All Resistors RD1/6PM□□□J

| Mark | No. | Description | Parts No. |
|------|-----|-------------|-----------|
|------|-----|-------------|-----------|

## FL UNIT

### SEMICONDUCTORS

Q1501 DTC124ES  
 D1512-D1515, D1526, D1529 1SS254  
 D1520 SLR-342UCT31

### SWITCHES AND RELAYS

S1505-S1508 RSG1030

### CAPACITORS

C3003, C3004 CCCSL470J50

### RESISTORS

All Resistors RD1/6PM□□□J

### OTHERS

V1501 FL INDICATOR TUBE RAW1124

## TR 1 UNIT

### CAPACITORS

C1025 CKSQYF223Z50  
 Δ C1031 (0.01μF/400V) VCG-044


### OTHERS

CAPACITOR COVER REC-150  
 EARTH LEAD UNIT XDF-510

# CT-S450S

## 6. FL INFORMATION

■ RAW1124 (FL UNIT : V1501)

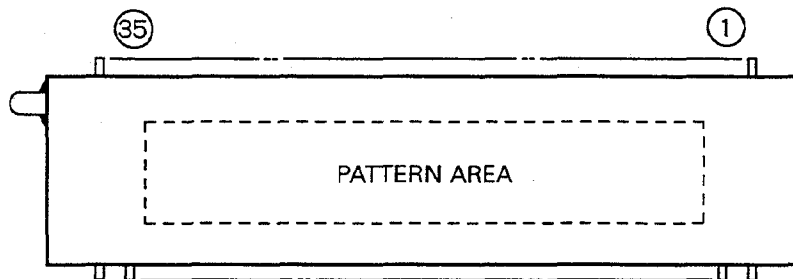


### PIN CONNECTION

|            |    |    |    |    |    |    |    |    |    |    |    |    |    |    |    |    |    |    |    |    |    |    |    |    |    |    |    |    |   |   |   |   |   |
|------------|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|---|---|---|---|---|
| PIN NO.    | 33 | 33 | 33 | 33 | 22 | 22 | 22 | 22 | 22 | 22 | 22 | 22 | 22 | 11 | 11 | 11 | 11 | 11 | 11 | 11 | 11 | 11 | 11 | 11 | 11 | 11 | 11 | 11 |   |   |   |   |   |
| CONNECTION | F  | F  | N  | P  | P  | P  | P  | P  | P  | P  | 1  | 1  | 1  | N  | N  | N  | N  | N  | N  | N  | N  | 9  | 8  | 7  | 6  | 5  | 4  | 3  | 2 | 1 | N | F | F |
|            | 2  | 2  | 1  | 2  | 3  | 4  | 5  | 6  | 7  | 8  | 9  | 0  | 1  | P  | P  | P  | P  | P  | P  | P  | P  | G  | G  | G  | G  | G  | G  | G  | G | P | 1 | 1 | 1 |

- NOTE 1) F1, F2 --- Filament  
 2) NP ----- No pin  
 3) DL ----- Datum Line  
 4) 1G~9G --- Grid


### GRID ASSIGNMENT

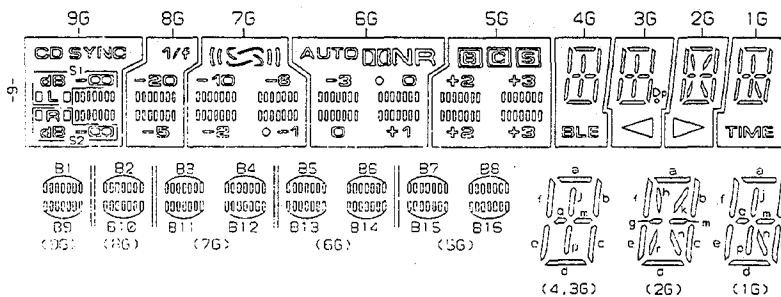

### ANODE CONNECTION

|     |         |     |           |          |       |      |      |      |      |
|-----|---------|-----|-----------|----------|-------|------|------|------|------|
|     | 9G      | 8G  | 7G        | 6G       | 5G    | 4G   | 3G   | 2G   | 1G   |
| P1  | B1      | B2  | B3        | B5       | B7    | a    | a    | a    | a    |
| P2  | -       | -   | B4        | B6       | B8    | b    | b    | b    | b    |
| P3  | B9      | B10 | B11       | B13      | B15   | f    | f    | f    | f    |
| P4  | -       | -   | B12       | B14      | B16   | g    | g    | g, m | g    |
| P5  | S1      | -20 | -10 -8    | -3 0 0   | +2 +3 | m    | m    | k, r | m    |
| P6  | S2      | -5  | -2 0 -1 0 | +1 +2 +3 | c     | c    | c    | c    | c    |
| P7  | -       | -   |           | -        | -     | e    | e    | e    | e    |
| P8  | -       | -   |           | -        | -     | d    | d    | d    | d    |
| P9  | CD SYNC | 1/f | ( )       | -        |       | j, p | j, p | h    | j, p |
| P10 | -       | -   | ( )       | DNR      |       | -    | Dp   | n    | n    |
| P11 | -       | -   | -         | -        |       | BLE  | -    | -    | TIME |

## 7. PANEL FACILITIES

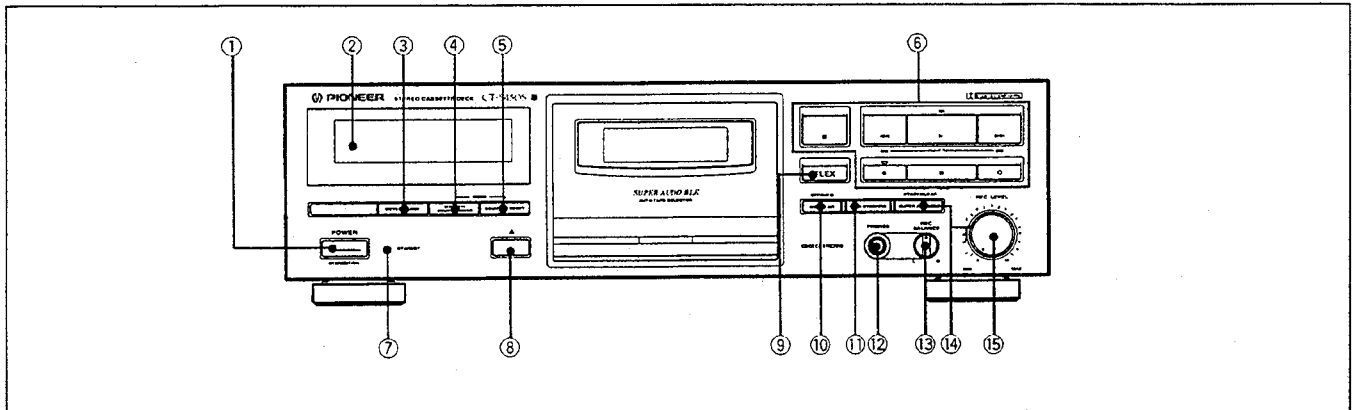


- ① **POWER STANDBY/ON switch**  
The POWER switch activates the secondary transformer only. Even when the switch is in the STANDBY position, there will be a power flow to the deck's circuits as long as the power cord is connected to a power outlet.
- ② **Function display**
- ③ **Level meter range selector button (METER RANGE)**  
Press to select wide or expanded range on the level meter.
- ④ **Display off/Tape counter mode button (DISP OFF/COUNTER MODE)**  
Press to select the tape counter mode, the time counter mode, or to turn the function display off. Press the button to choose between the modes or to turn the display off.  

|                |                |                |
|----------------|----------------|----------------|
| → Display off  | → Display on   | → Display on   |
| (Tape counter) | (Tape counter) | (Time counter) |
- ⑤ **Tape counter reset button (COUNTER RESET)**
- ⑥ **Operation buttons**
  - : Stop
  - ◀/MS : Rewind/music search
  - ▶ : Playback
  - ▶▶/MS : Fast forward/music search
  - : Recording
  - ⏸ : Pause
  - : Recording mute
- ⑦ **STANDBY indicator**
- ⑧ **Eject button (▲)**
  - If the tape is moving (recording, playback, tape winding, etc.), press the stop (■) button before pressing this button.
- ⑨ **FLEX button**
- ⑩ **DOLBY\* NR button (OFF/B/C/S)**  

|     |   |   |   |   |   |   |
|-----|---|---|---|---|---|---|
| OFF | → | B | → | C | → | S |
|-----|---|---|---|---|---|---|

  - *Dolby noise reduction and HX Pro headroom extension manufactured under license from Dolby Laboratories Licensing Corporation. HX Pro originated by Bang & Olufsen.*
  - *"DOLBY", the double-D symbol and "HX PRO" are trademarks of Dolby Laboratories Licensing Corporation.*
- ⑪ **CD-DECK SYNCHRO recording button (CD SYNCHRO)**
- ⑫ **Headphones jack (PHONES)**
- ⑬ **Recording balance control (REC BALANCE)**
- ⑭ **SUPER AUTO BLE button**
- ⑮ **Recording level control (REC LEVEL)**

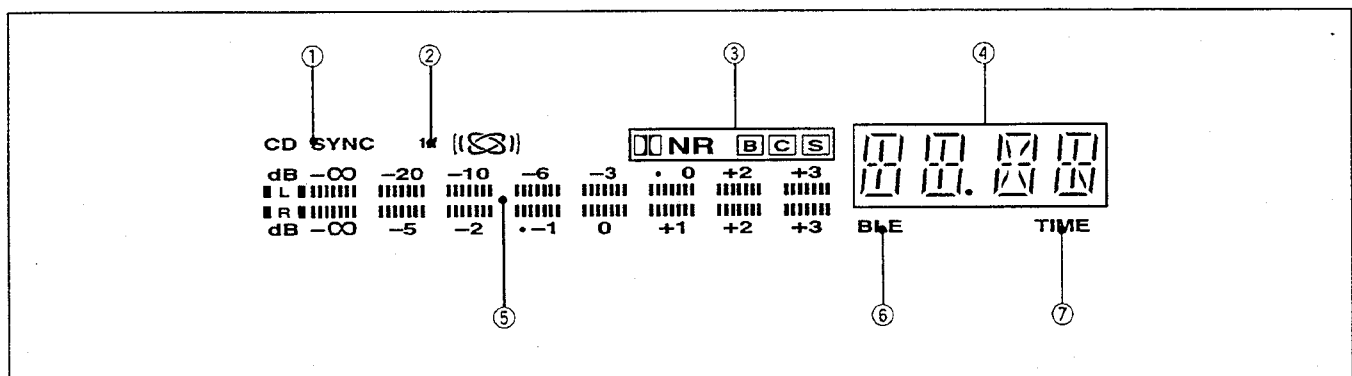

- ① **CD-DECK SYNCHRO indicator (CD SYNC)**  
Light when synchro recording from a CD player is being carried out.
- ② **FLEX indicator (1/f)**  
This indicator lights when the FLEX button is pressed.
- ③ **DOLBY NR B/C/S indicator**
- ④ **Counter indicator**  
Normally the tape number or time counter is displayed. Flashes for four seconds after the power cord is connected to the power supply.
- ⑤ **Level meter with peak hold function**  
The ● beside the -1 dB mark (at Extend mode) or 0 dB mark (at Wide mode) indicates the Dolby NR systems reference level.  
Meter range:  
Wide mode: -20 dB to +3dB  
Expand mode: -5 dB to +3 dB  
● Selected meter range is shown on the function display by pressing the METER RANGE button.
- ⑥ **BLE indicator**
- ⑦ **TIME counter indicator**  
Light up in the time counter mode.

# CT-S450S


## 8. SPECIFICATIONS

|  |   |
|--|---|
| System .....                                   | 4 track, 2-channel stereo   |
| Heads .....                                    | "Hard Permalloy" recording/playback head x 1<br>"Ferrite" erasing head x1 |
| Motor .....                                    | DC servo motor x 1  |
| Wow and Flutter .....                          | 0.070% (WRMS, JIS)<br>±0.18% (DIN)  |
| Fast Winding Time .....                        | Approx. 100 seconds (C-60 tape)   |
| Frequency Response (at -20 dB recording level) |   |
| TYPE IV (Metal) tape .....                     | 25 to 18,000 Hz (±6 dB)   |
| TYPE II (High/CrO <sub>2</sub> ) Tape .....    | 25 to 17,000 Hz (±6 dB)   |
| TYPE I (Normal) Tape .....                     | 25 to 17,000 Hz (±6 dB)   |
| Signal-to-Noise-Ratio                          |   |
| Dolby NR off .....                             | More than 57 dB   |
| Noise Reduction Effect                         |   |
| Dolby B-type NR ON .....                       | More than 10 dB (at 5 kHz)  |
| Dolby C-type NR ON .....                       | More than 19 dB (at 5 kHz)  |
| Dolby S-type NR ON .....                       | More than 22 dB (at 5 kHz)  |
| Harmonic Distortion .....                      | No more than 1.0%<br>(at -4 dB: 160 nwb/m)                                |
| Input (Sensitivity)                            |   |
| LINE (INPUT) .....                             | 100 mV (Input impedance 67 kΩ)  |
| Output (Reference level)                       |   |
| LINE (OUTPUT) .....                            | 0.5 V (Output impedance 2.2 kΩ)   |
| Headphone (PHONES) .....                       | 1.33 mW (Load Impedance 32 Ω)   |


### Miscellaneous

|                           |                                |
|---------------------------|--------------------------------|
| Power requirements .....  | AC 220 - 230 V, 50/60 Hz       |
| Power consumption         |                                |
| CT-S450S .....            | 16 W                           |
| Dimensions .....          | 420 (W) x 125 (H) x 280 (D) mm |
| Weight (without packages) |                                |
| CT-S450S .....            | 3.8 kg                         |

### Subfunctions

- CT-S450S: Dolby B-type C-type and S-type NR systems
- DOLBY HX PRO system
- Auto tape selector (TYPE I, II, IV)
- Headphones jack
- 4-digit electronic tape/time counter
- Music search up to ±15 selections
- Automatic space recording mute
- SUPER AUTO BLE tuning system
- FL level meter 7 + 1 segments (with peak hold)
-  System remote control available
- CD•DECK SYNCHRO function
- FLEX system
- Display off
- Last memory
- Timer play

### Accessories

|  |   |
|--|---|
| Operating instructions .....   | 1 |
| Connection cord with pin plugs .....   | 2 |
|  Remote control cord ..... | 1 |
| CD•DECK SYNCHRO control cord .....   | 1 |

### NOTE:

Specifications and design subject to possible modifications without notice, due to improvements.

# Service Manual

ORDER NO.  
RRV1532

STEREO CASSETTE DECK

# CT-S450S

● Refer to the service manual RRV1497 for CT-S450S/HYXJ.

THIS MANUAL IS APPLICABLE TO THE FOLLOWING MODEL(S) AND TYPE(S).

| Type | Model    | Power Requirement             | The voltage can be converted by the following method. |
|------|----------|-------------------------------|---|
|      | CT-S450S |                               |   |
| HVXJ | ○        | AC230-240V                    | AC220-230V, *   |
| SDXJ | ○        | AC110V/120-127V/220V/230-240V | With the voltage selector                             |
| SLXJ | ○        | AC110V/120-127V/220V/230-240V | With the voltage selector                             |

\*: Alter the wiring of the Power-supply block at the primary winding of power transformer referring to the "Line Voltage Selection" described in Service Manual.

# 1. CONTRAST OF MISCELLANEOUS PARTS

**NOTES:**

- Parts marked by "NSP" are generally unavailable because they are not in our Master Spare Parts List.
- The  $\Delta$  mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
- Parts marked by "⊙" are not always kept in stock. Their delivery time may be longer than usual or they may be unavailable.
- When ordering resistors, first convert resistance values into code form as shown in the following examples.

Ex.1 When there are 2 effective digits (any digit apart from 0), such as 560 ohm and 47K ohm (tolerance is shown by J=5%, and K=10%).

560  $\Omega$   $\rightarrow$  56  $\times$  10<sup>1</sup>  $\rightarrow$  561 .....RD114PU **561 J**

47 k $\Omega$   $\rightarrow$  47  $\times$  10<sup>3</sup>  $\rightarrow$  473 .....RD114PU **473 J**

0.5  $\Omega$   $\rightarrow$  0R5 .....RN2H **0R5 K**

1  $\Omega$   $\rightarrow$  1R0 .....RSIP **1R0 K**

Ex.2 When there are 3 effective digits (such as in high precision metal film resistors).

5.62 k $\Omega$   $\rightarrow$  562  $\times$  10<sup>1</sup>  $\rightarrow$  5621 .....RN114PC **5621 F**

## ■ CONTRAST OF HVXJ, SDXJ, SLXJ AND HXJ TYPES

HVXJ, SDXJ, SLXJ and HXJ types have the same construction except for the following:


| Mark     | Symbol & Description   | Part No. |           |              |              | Remarks  |
|----------|--|----------|-----------|--------------|--------------|----------|
|          |  | HXJ type | HVXJ type | SDXJ type    | SLXJ type    |          |
| NSP      | MOTHER UNIT  | RWM1895  | RWM1905   | RWM1795      | RWM1795      |          |
|          | MAIN UNIT  | RWZ3845  | RWZ3845   | RWZ3462      | RWZ3462      |          |
|          | OPSW UNIT  | RWZ3846  | RWZ3846   | RWZ3463      | RWZ3463      |          |
|          | FL UNIT  | RWZ3847  | RWZ3847   | RWZ3464      | RWZ3464      |          |
|          | TR 1 UNIT  | RWZ3848  | RWZ3849   | RWZ3467      | RWZ3467      |          |
| NSP      | TR 2 UNIT  | Not Used | RWZ3850   | Not Used     | Not Used     | *1       |
| $\Delta$ | Power transformer<br>(AC220-230V/230-240V)                                       | RTT1254  | RTT1254   | Not Used     | Not Used     |          |
| $\Delta$ | Power transformer<br>(AC110V/120-127V/220V/230-240V)                             | Not Used | Not Used  | RTT1255      | RTT1255      |          |
| $\Delta$ | AC Power cord  | PDG1043  | PDG1055   | ADG1157      | PDG1043      |          |
| $\Delta$ | Fuse (T5A) (For AC Power cord)   | Not Used | PEK1003   | Not Used     | Not Used     | *2 No. 1 |
|          | FL lens  | RAH2413  | RAH2413   | RAH2414      | RAH2414      |          |
| $\Delta$ | Rear panel   | RNA2035  | RNA2044   | RNA2062      | RNA2076      |          |
|          | Line voltage selector<br>(AC110V/120-127V/220V/230-240V)                         | Not Used | Not Used  | RSB1022      | RSB1022      | *2 No. 2 |
|          | Screw  | Not Used | Not Used  | BBZ30P080FMC | BBZ30P080FMC | *2 No. 3 |
|          | Operating instructions<br>(English/German)                                       | RRE1135  | Not Used  | Not Used     | Not Used     |          |
|          | Operating instructions<br>(French/Italian/Dutch/Spanish/<br>Portugueses/Swedish) | RRD1183  | Not Used  | Not Used     | Not Used     |          |
|          | Operating instructions (English)   | Not Used | RRB1172   | RRB1172      | RRB1172      |          |
|          | Operating instructions<br>(Spanish/Chinese)                                      | Not Used | Not Used  | RRD1184      | RRD1184      |          |
| NSP      | SISIR label  | Not Used | Not Used  | Not Used     | RRW1251      | *2 No. 4 |
|          | Packing case   | RHG1734  | RHG1735   | RHG1736      | RHG1736      |          |
|          | Rear spacer (PAPER)  | Not Used | RHC1066   | Not Used     | Not Used     | *2 No. 5 |

\*1: Refer to "2. SCHEMATIC AND PCB DIAGRAMS".

\*2: The numbers in the remarks column correspond to the numbers on the exploded diagram.

Refer to "EXPLODED VIEWS"

• EXPLODED VIEWS

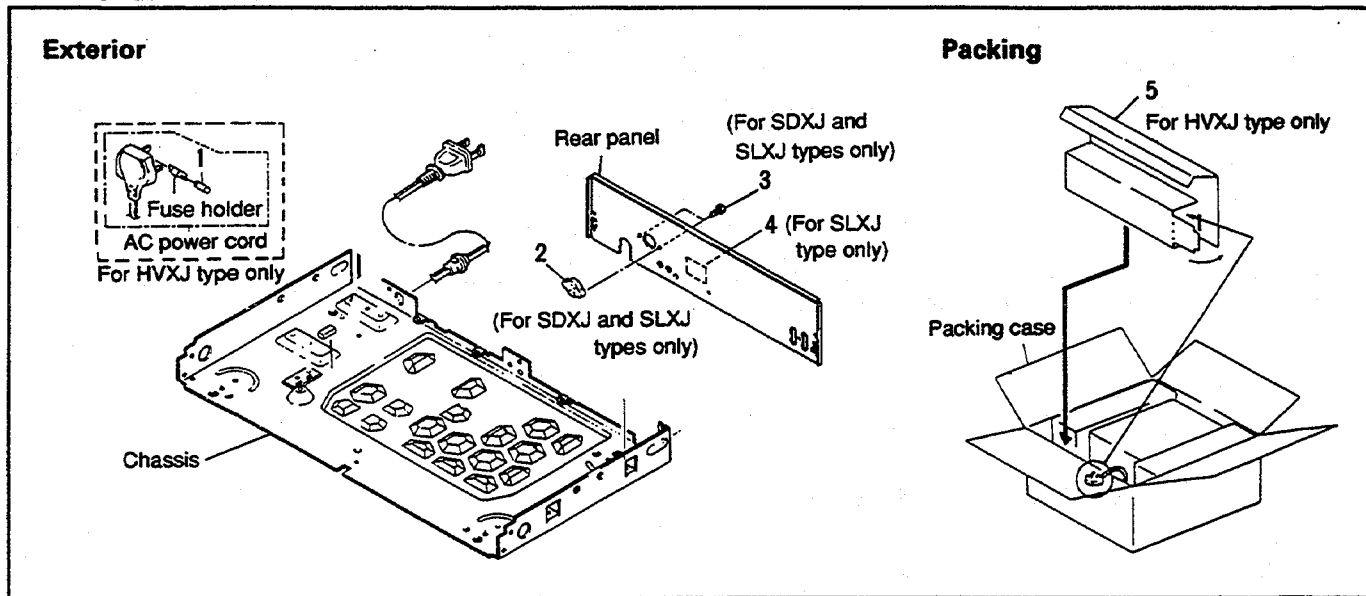

■ CONTRAST OF PCB ASSEMBLIES

MAIN UNIT

RWZ3462 and RWZ3845 have the same construction except for the following:

| Mark | Symbol & Description                                   | Part No.  |   | Remarks |
|------|--|---|---|---------|
|      |  | RWZ3845   | RWZ3462   |         |
| △    | IC101<br>F3001-F3004<br>C3001, C3002<br>J3001<br>J3002 | M5220FP<br>DTF1067<br>CKCYB331K50<br>XDF-536<br>XDF-526 | NJM4580ED<br>Not Used<br>Not Used<br>Not Used<br>Not Used |         |

OPSW UNIT

RWZ3463 and RWZ3846 have the same construction except for the following:

| Mark | Symbol & Description | Part No.               |                      | Remarks |
|------|----------------------|------------------------|----------------------|---------|
|      |                      | RWZ3846                | RWZ3463              |         |
|      | C3005<br>J3004       | CCCSL470J50<br>XDF-516 | Not Used<br>Not Used |         |

FL UNIT

RWZ3464 and RWZ3847 have the same construction except for the following:

| Mark | Symbol & Description  | Part No.               |                      | Remarks |
|------|-----------------------|------------------------|----------------------|---------|
|      |                       | RWZ3847                | RWZ3464              |         |
|      | C3003, C3004<br>J3003 | CCCSL470J50<br>XDF-512 | Not Used<br>Not Used |         |

# CT-S450S

## TR 1 UNIT

RWZ3849, RWZ3467 and RWZ3848 have the same construction except for the following:

| Mark | Symbol & Description | Part No.     |              |          | Remarks |
|------|----------------------|--------------|--------------|----------|---------|
|      |                      | RWZ3848      | RWZ3849      | RWZ3467  |         |
|      | C1025                | CKSQYF223Z50 | CKSQYF223Z50 | Not Used |         |
| Δ    | C1031                | VCG-044      | Not Used     | Not Used |         |
| Δ    | C1033                | Not Used     | Not Used     | VCG-044  | *       |
|      | J                    | XDF-510      | XDF-510      | Not Used |         |
|      | TERMINAL             | Not Used     | Not Used     | PKC-027  | *       |

Note \*: Refer to "2. SCHEMATIC AND PCB DIAGRAMS".

## ■ PCB PARTS LIST

### • TR 2 UNIT (RWZ3850)

| Mark | No. | Description | Parts No. |
|------|-----|-------------|-----------|
|------|-----|-------------|-----------|

#### CAPACITORS


|   |       |  |         |
|---|-------|--|---------|
| Δ | C1032 |  | VCG-044 |
|---|-------|--|---------|



## 2. SCHEMATIC AND PCB DIAGRAMS

The differences of adjacencies to power supply are as follows.

• For HVXJ type

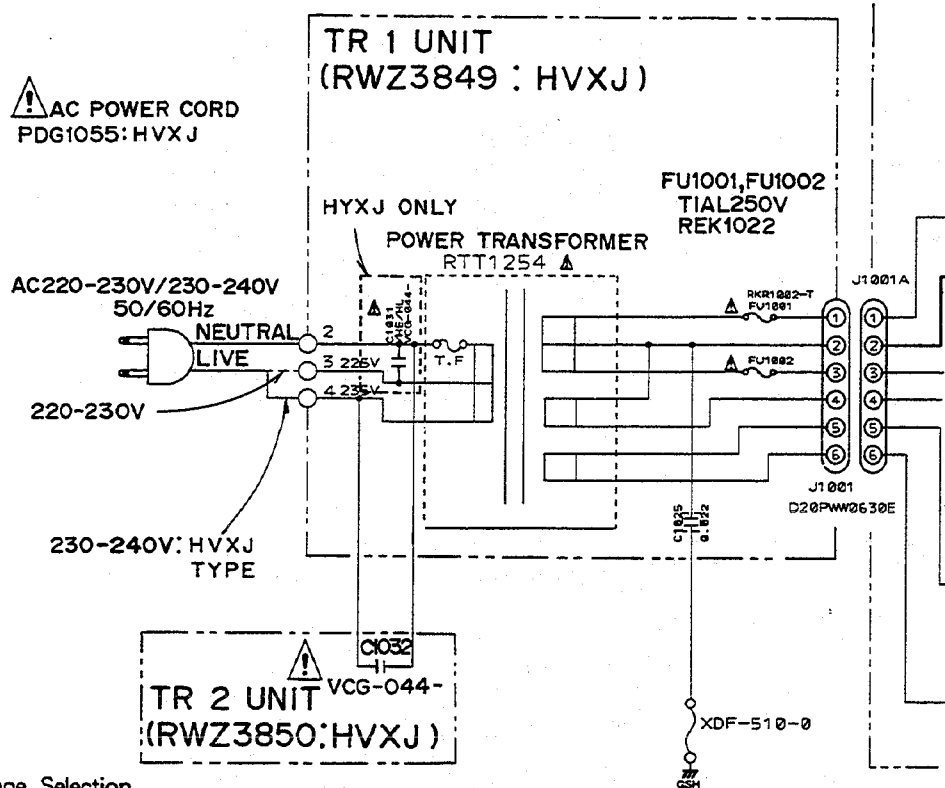

Line Voltage Selection


Line voltage can be changed by the following modification:

1. Disconnect the AC power cord.
2. Remove the cover.
3. Change the connection of TRANSFORMER 1 UNIT primary pins.

4. Stick a line voltage label on the rear panel.

| Part No.  | Description |
|-----------|-------------|
| AAX - 193 | 220V label  |
| AAX - 192 | 240V label  |

• For SDXJ and SLXJ types

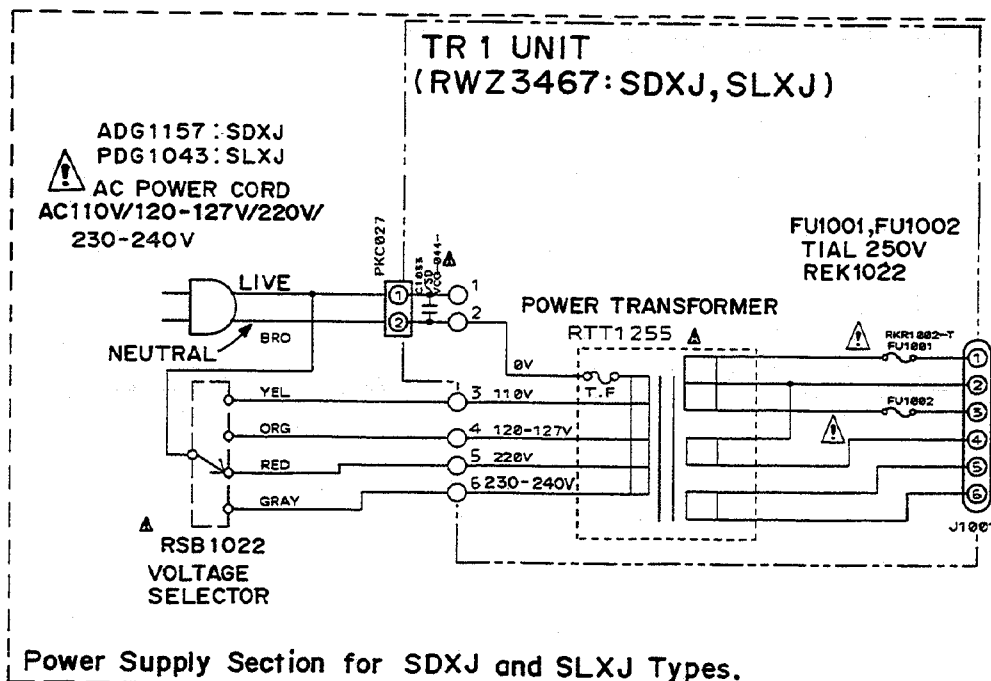

# CT-S450S

