

Service Manual

 **PIONEER**
The Art of Entertainment

ORDER NO.
RRV1787

STEREO DOUBLE CASSETTE DECK

CT-W106

● Refer to the service manual RRV1068 for CT-W103/KUXJ.

THIS MANUAL IS APPLICABLE TO THE FOLLOWING MODEL(S) AND TYPE(S).

Type	Model	Power Requirement	The voltage can be converted by the following method.
	CT-W106		
SDXJ	○	AC110V/120-127V/220V/230-240V	With the voltage selector
SLXJ	○	AC110V/120-127V/220V/230-240V	With the voltage selector
HPWXJ	○	AC230-240V	AC220-230V, *

*: Alter the wiring of the power-supply block at the primary winding of Power transformer referring to the "Line Voltage Selection" described in Service Manual.

PIONEER ELECTRONIC CORPORATION 4-1, Meguro 1-Chome, Meguro-ku, Tokyo 153, Japan
PIONEER ELECTRONICS SERVICE, INC. P.O. Box 1760, Long Beach, CA 90801-1760, U.S.A.
PIONEER ELECTRONIC (EUROPE) N.V. Haven 1087, Keetberglaan 1, 9120 Melsele, Belgium
PIONEER ELECTRONICS ASIACENTRE PTE. LTD. 501 Orchard Road, #10-00 Lane Crawford Place, Singapore 0923

© PIONEER ELECTRONIC CORPORATION 1997

T-KZE APR. 1997 Printed in Belgium

CT-W106

CONTRAST OF MISCELLANEOUS PARTS

- NOTES : ● Parts marked by "NSP" are generally unavailable because they are not in our Master Spare Parts List.
- The Δ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
 - Ref. No.: Numbers following P and hyphen (-) indicate the page(s) and location number(s) in the RRV1068 service manual, respectively.
 - When ordering resistors, first convert resistance values into code form as shown in the following examples.
- Ex. 1 When there are 2 effective digits (any digit apart from 0), such as 560 ohm and 47k ohm (tolerance is shown by J = 5%, and K = 10%).
- 560 Ω \rightarrow $56 \times 10^1 = 561$ RD1/4PU $\overline{5}$ $\overline{6}$ $\overline{1}$ J
 47k Ω \rightarrow $47 \times 10^3 = 473$ RD1/4PU $\overline{4}$ $\overline{7}$ $\overline{3}$ J
 0.5 Ω \rightarrow R50 RN2H \overline{R} $\overline{5}$ $\overline{0}$ K
 1 Ω \rightarrow 1R0 RS1P $\overline{1}$ \overline{R} $\overline{0}$ K
- Ex. 2 When there are 3 effective digits (such as in high precision metal film resistors).
- 5.62k Ω \rightarrow $562 \times 10^1 = 5621$ RN1/4PC $\overline{5}$ $\overline{6}$ $\overline{2}$ $\overline{1}$ F

■ CONTRAST OF CT-W106/SDXJ, SLXJ, HPWXJ AND CT-W103/KUXJ

CT-W106/SDXJ, SLXJ, HPWXJ and CT-W103/KUXJ have the same construction except for the following:

Ref. No.	Mark	Symbol and Description	Part No.			Remarks	
			CT-W103/ KUXJ	CT-W106			
				SDXJ	SLXJ		HPWXJ
PCB ASSEMBLIES							
P5-4	NSP	MOTHER Unit	RWM1699	RWM1723	RWM1723	RWM1700	
P5-5	NSP	└ Power SW Unit	RWZ3229	RWZ3292	RWZ3292	RWZ3292	
P5-5	NSP	└ Transformer 1 Unit	RWZ3230	RWZ3296	RWZ3296	RWZ3296	
EXTERIOR AND PACKING							
P5-8	Δ	Cord Stopper	CM-22C	CM-22B	CM-22B	CM-22B	
P5-9	Δ	AC Power Cord	PDG1015	ADG1157	PDG1058	ADG1159	
P5-10	Δ	Fuse (1A)	REK1057	Not used	Not used	Not used	
P5-10	Δ	Fuse (1.25A)	Not used	REK1023	REK1023	REK1023	
P5-19	Δ	Power Transformer (AC120V)	RTT1265	Not used	Not used	Not used	
P5-19	Δ	Power Transformer (AC110V/120-127V/220V/230-240V)	Not used	RTT1267	RTT1267	Not used	
P5-19	Δ	Power Transformer (AC220-230V/230-240V)	Not used	Not used	Not used	RTT1266	
P5-39		Door Lens	RAH2388	RAH2754	RAH2754	RAH2754	
P5-40		Door L	RAH2389	RAH2824	RAH2824	RAH2824	
P5-41		Door R	RAH2390	RAH2825	RAH2825	RAH2825	
P5-42		Panel	RAH2391	RAH2823	RAH2823	RAH2823	
P5-45		Rear Panel	RNA1795	RNA2162	RNA2163	RNA2164	
P5-47		65 Label	ORW1069	Not used	Not used	Not used	
P5-48	NSP	Fuse Caution Label	RRW-111	Not used	Not used	Not used	
P5-54		Connection Assy	RDE1002	Not used	Not used	Not used	
P5-54	NSP	Connection Cord Assy	Not used	RDE1026	RDE1026	RDE1026	
P5-55		Operating Instructions (English)	RRB1140	Not used	Not used	RRB1180	
P5-55		Operating Instructions (English/Spanish/Chinese)	Not used	RRE1154	RRE1154	Not used	
P5-56		Pad L	RHA1056	Not used	Not used	RHA1056	
P5-57		Pad R	RHA1057	Not used	Not used	RHA1057	
P5-58		Packing Case	RHG1677	RHG1822	RHG1822	RHG1823	
P5-60		Spacer	REC1244	REC1303	REC1303	REC1303	

CT-W106

Ref. No.	Mark	Symbol and Description	Part No.				Remarks
			CT-W103/ KUXJ	CT-W106			
				SDXJ	SLXJ	HPWXJ	
		Caution 220V Label	Not used	ARR1003	ARR1003	Not used	*1 No. 1
		Paper Protector C	Not used	RHA1209	RHA1209	Not used	*1 No. 2
		Paper Protector L	Not used	RHA1210	RHA1210	Not used	*1 No. 3
		Paper Protector R	Not used	RHA1211	RHA1211	Not used	*1 No. 4
		Spacer A	Not used	Not used	Not used	RHC1032	*1 No. 5
		Spacer B	Not used	Not used	Not used	RHC1033	*1 No. 6
		Spacer (CR)	Not used	REB1316	REB1316	Not used	*1 No. 7
		Spacer (PVC)	Not used	REC1309	REC1309	REC1309	*1 No. 8
		Disc Guard	Not used	REC1305	REC1305	REC1305	*1 No. 9
	⚠	Voltage Selector (AC110V/120-127V/220V/230-240V)	Not used	RSB1022	RSB1022	Not used	*1 No.10
		Screw	Not used	BBZ30P060FMC	BBZ30P060FMC	BBZ30P060FMC	*2


Notes *1: The numbers in the remarks column correspond to the numbers on the Exploded Views.

*2: For MAIN Unit, Power SW Unit, Power Transformer and Cord Clamper.


■ EXPLODED VIEWS

● Packing

For SDXJ and SLXJ types

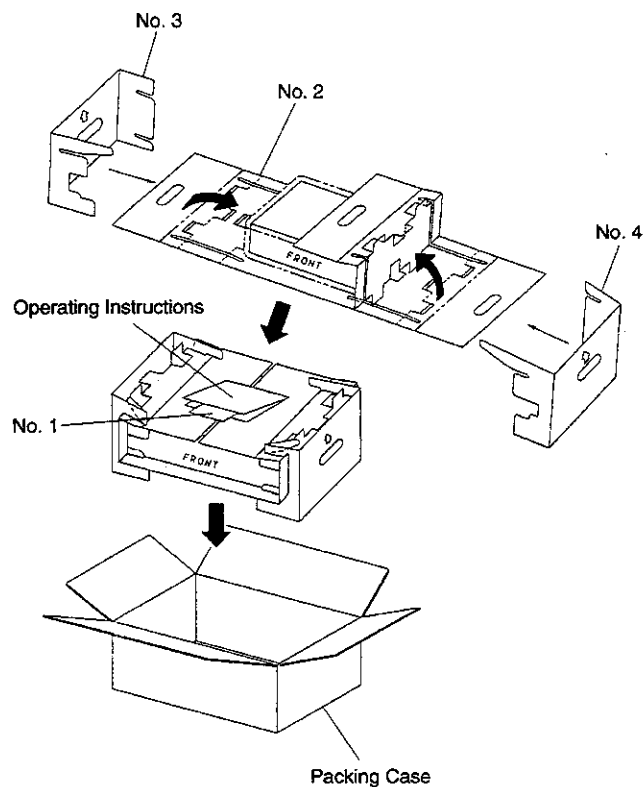


For HPWXJ type

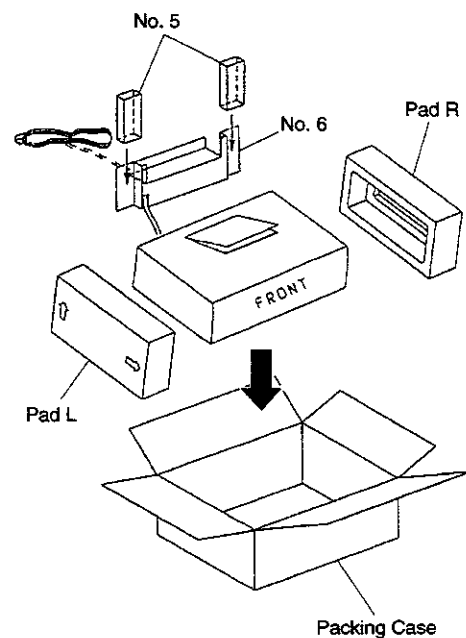

CT-W106


● Exterior

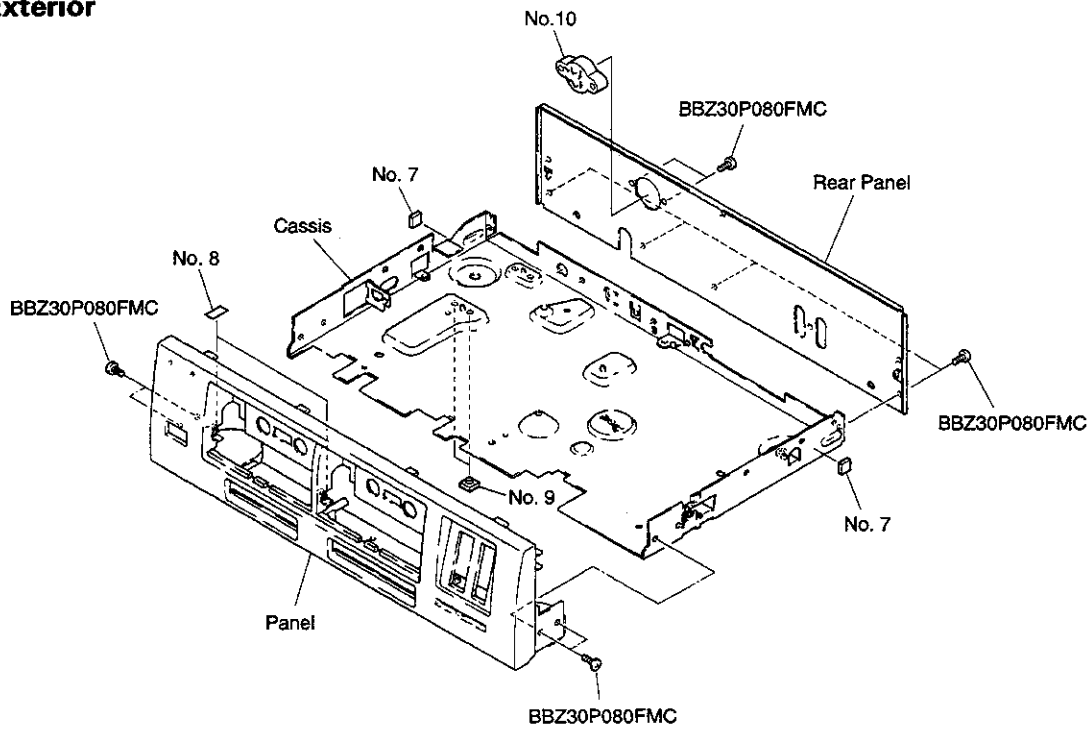

■ CONTRAST OF PCB ASSEMBLIES

TRANSFORMER 1 Unit

RWZ3296, RWZ3293 and RWZ3230 have the same construction except for the following:

Mark	Symbol and Description	Part No.			Remarks
		RWZ3230	RWZ3296	RWZ3293	
 NSP	Terminal (2P)	RKC-061	RKC-061	Not used	
	Terminal (3P)	Not used	Not used	RKC1008	


POWER SW Unit

Although RWZ3292 and RWZ3229 are different in part number, they consist of the same components.


SCHEMATIC AND PCB DIAGRAM

● The differences of adjacencies to power supply are as follows:

● For SDXJ and SLXJ Types

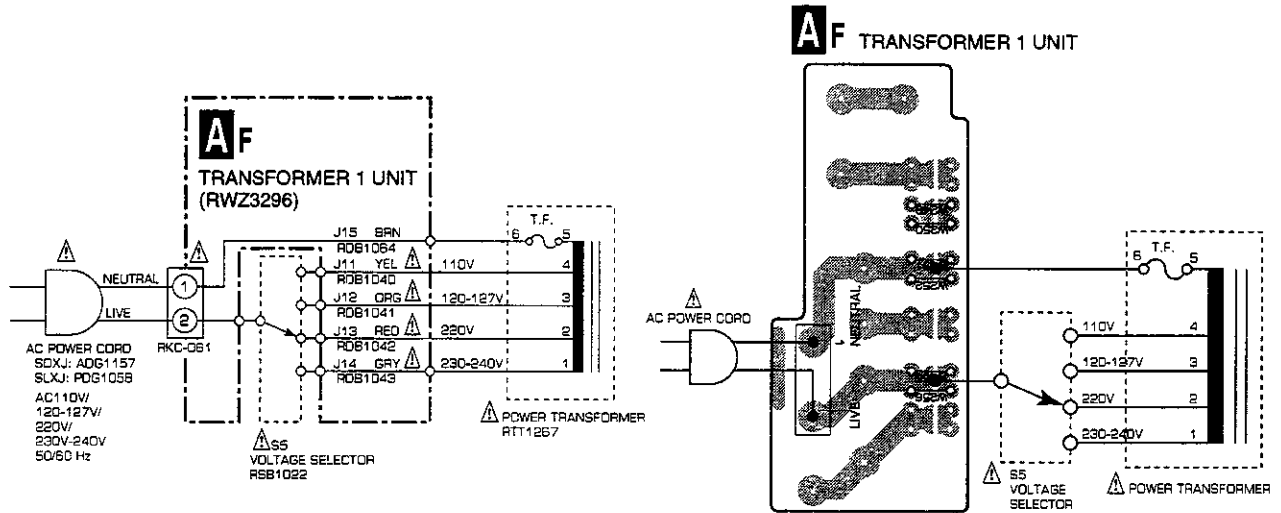

● For HPWXJ Type

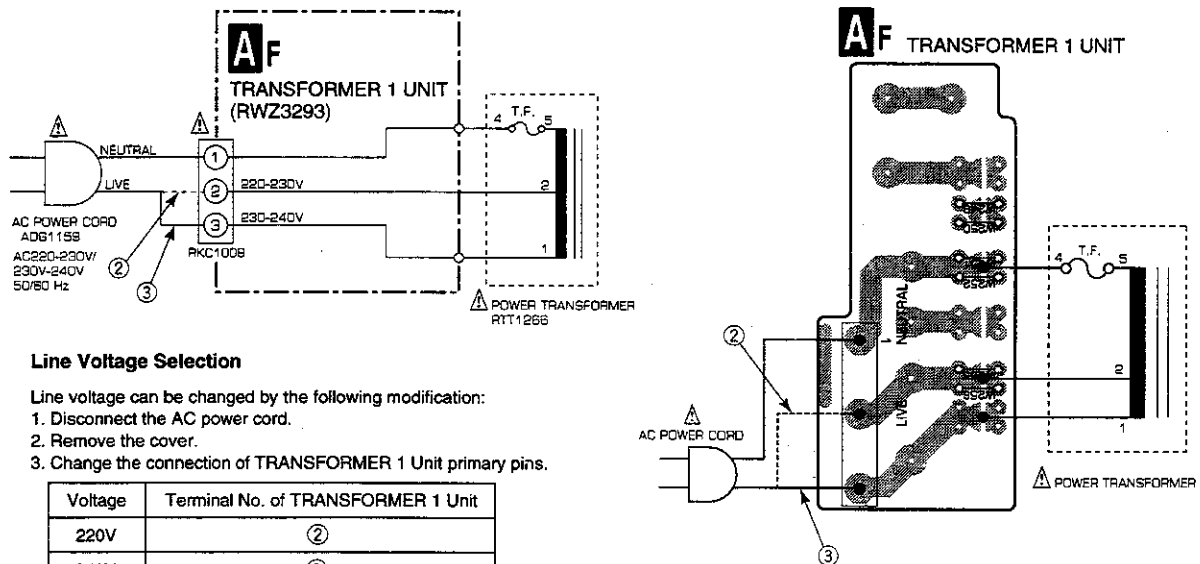

Line Voltage Selection

Line voltage can be changed by the following modification:


1. Disconnect the AC power cord.
2. Remove the cover.
3. Change the connection of TRANSFORMER 1 Unit primary pins.

Voltage	Terminal No. of TRANSFORMER 1 Unit
220V	②
240V	③

4. Stick a line voltage label on the rear panel.

Part No.	Description
AAX-193	220V label
AAX-192	240V label

Service Manual

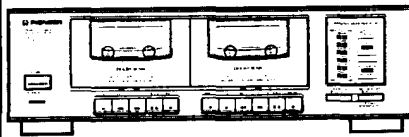

ORDER NO.
RRV1068

STEREO DOUBLE CASSETTE DECK

CT-W103

THIS MANUAL IS APPLICABLE TO THE FOLLOWING MODEL(S) AND TYPE(S).

Type	Model	Power Requirement	Remarks
	CT-W103		
KUXJ	○	AC120V	
KCXJ	○	AC120V	

CONTENTS

1. SAFETY INFORMATION	2
2. EXPLODED VIEWS, PACKING AND PARTS LIST	3
3. BLOCK DIAGRAM	10
4. PCB CONNECTION DIAGRAM	11
5. SCHEMATIC DIAGRAM	15
6. PCB PARTS LIST	18
7. ADJUSTMENTS	20
8. PANEL FACILITIES	23
9. SPECIFICATIONS	24

1. SAFETY INFORMATION



This service manual is intended for qualified service technicians; it is not meant for the casual do-it-yourselfer. Qualified technicians have the necessary test equipment and tools, and have been trained to properly and safely repair complex products such as those covered by this manual. Improperly performed repairs can adversely affect the safety and reliability of the product and may void the warranty. If you are not qualified to perform the repair of this product properly and safely, you should not risk trying to do so and refer the repair to a qualified service technician.

WARNING

Lead in solder used in this product is listed by the California Health and Welfare agency as a known reproductive toxicant which may cause birth defects or other reproductive harm (California Health & Safety Code, Section 25249.5). When servicing or handling circuit boards and other components which contain lead in solder, avoid unprotected skin contact with the solder. Also, when soldering do not inhale any smoke or fumes produced.



NOTICE

(FOR CANADIAN MODEL ONLY)

Fuse symbols  (fast operating fuse) and/or  (slow operating fuse) on PCB indicate that replacement parts must be of identical designation.

REMARQUE

(POUR MODELE CANADIEN SEULEMENT)

Les symboles de fusible  (fusible de type rapide) et/ou  (fusible de type lent) sur CCI indiquent que les pièces de remplacement doivent avoir la même désignation.


(FOR USA MODEL ONLY)

1. SAFETY PRECAUTIONS

The following check should be performed for the continued protection of the customer and service technician.

LEAKAGE CURRENT CHECK

Measure leakage current to a known earth ground (water pipe, conduit, etc.) by connecting a leakage current tester such as Simpson Model 229-2 or equivalent between the earth ground and all exposed metal parts of the appliance (input/output terminals, screwheads, metal overlays, control shaft, etc.). Plug the AC line cord of the appliance directly into a 120V AC 60Hz outlet and turn the AC power switch on. Any current measured must not exceed 0.5mA.

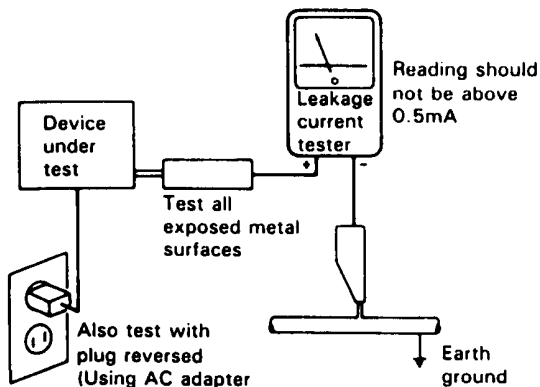

AC Leakage Test

ANY MEASUREMENTS NOT WITHIN THE LIMITS OUTLINED ABOVE ARE INDICATIVE OF A POTENTIAL SHOCK HAZARD AND MUST BE CORRECTED BEFORE RETURNING THE APPLIANCE TO THE CUSTOMER.

2. PRODUCT SAFETY NOTICE


Many electrical and mechanical parts in the appliance have special safety related characteristics. These are often not evident from visual inspection nor the protection afforded by them necessarily can be obtained by using replacement components rated for voltage, wattage, etc. Replacement parts which have these special safety characteristics are identified in this Service Manual.

Electrical components having such features are identified by marking with a Δ on the schematics and on the parts list in this Service Manual. The use of a substitute replacement component which does not have the same safety characteristics as the PIONEER recommended replacement one, shown in the parts list in this Service Manual, may create shock, fire, or other hazards.

Product Safety is continuously under review and new instructions are issued from time to time. For the latest information, always consult the current PIONEER Service Manual. A subscription to, or additional copies of, PIONEER Service Manual may be obtained at a nominal charge from PIONEER.

2. EXPLODED VIEWS, PACKING AND PARTS LIST

1. EXTERIOR AND PACKING

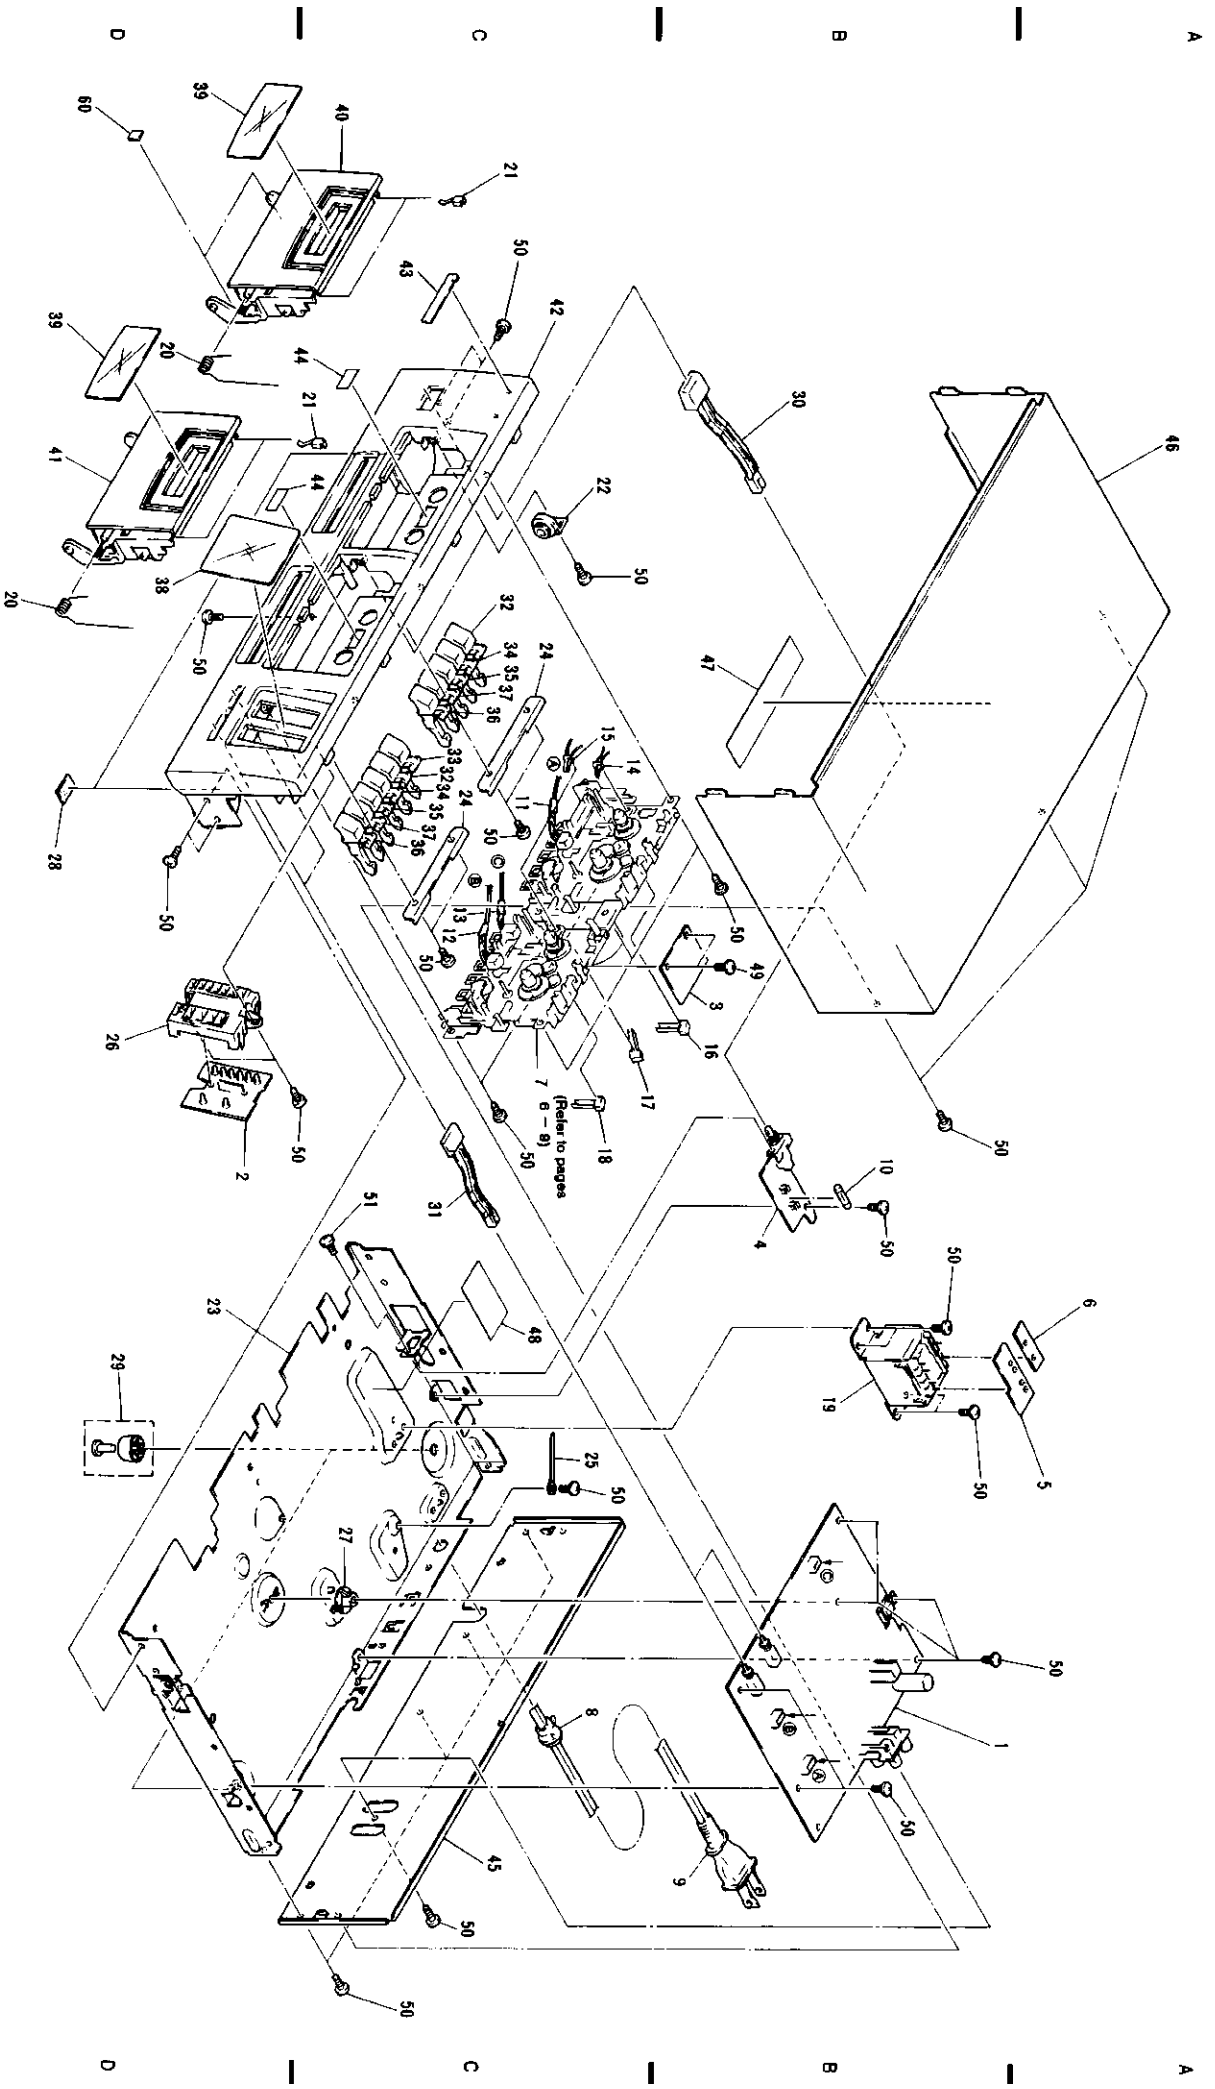


NOTES:

- Parts marked by "NSP" are generally unavailable because they are not in our Master Spare Parts List.
- The Δ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
- Parts marked by "⊙" are not always kept in stock. Their delivery time may be longer than usual or they may be unavailable.


Parts List

Mark	No.	Description	Part No.	Mark	No.	Description	Part No.
	1	Main Unit	RWZ3226		46	Bonnet	REA1077
NSP	2	Sub Unit	RWZ3227		47	65 Label (CT - W103/KUXJ Only)	ORW1069
NSP	3	Mechanism Connection Unit	RWZ3228	NSP	48	Fuse Caution Label	RRW - 111
NSP	4	Power Switch Unit	RWZ3229		49	Screw	BBZ20P060FMC
NSP	5	Transformer 1 Unit	RWZ3230		50	Screw	BBZ30P080FMC
NSP	6	Transformer 2 Unit	RWZ3231		51	Screw	PMA30P060FMC
	7	Cassette Mechanism Unit	RYM1229		52	
Δ	8	Cord Stopper	CM - 22C		53	
Δ	9	AC Power Cord	PDG1015		54	Connection Assy	RDE1036
Δ	10	Fuse (1A)	REK1057		55	Operating Instructions (English) (CT - W103/KUXJ)	RRB1140
	11	Connector Assy (3P)	RKP1672		55	Operating Instructions (English/French) (CT - W103/KCXJ)	RRE1082
	12	Connector Assy (3P)	RKP1673		56	Pad L	RHA1056
	13	Connector Assy (2P)	RKP1681		57	Pad R	RHA1057
	14	Leaf Switch (I PLAY)	RSN1025		58	Packing Case (CT - W103/KUXJ)	RHG1590
	15	Leaf Switch (II PLAY)	RSN1025		58	Packing Case (CT - W103/KCXJ)	RHG1538
	16	Leaf Switch (MAIN I)	RSN1025		59	Sheet	Z23 - 007
	17	Leaf Switch (MAIN II)	RSN1025		60	Spacer	REC1244
Δ	18	Leaf Switch (REC)	RSN1025				
	19	Power Transformer	RTT1265				
	20	Spring R	RBH1305				
	21	Spring	RBK1004				
	22	Damper Assy	REC1241				
NSP	23	Chassis	RNB1101				
	24	Bracket	RNE1765				
	25	Cord Clamper	RNH - 184				
	26	LED Holder	RNK2060				
NSP	27	Stud	RNL - 792				
	28	Rubber Sheet	AEB1111				
	29	Supporting Feet	AXA7010				
NSP	30	POWER Knob	RAC1886				
	31	MODE Knob	RAC1887				
	32	PLAY Knob	RAC1888				
	33	REC Knob	RAC1889				
	34	REW Knob	RAC1890				
	35	FF Knob	RAC1891				
	36	PAUSE Knob	RAC1892				
	37	STOP Knob	RAC1893				
	38	Meter Lens	RAH2387				
	39	Door Lens	RAH2388				
	40	Door L	RAH2389				
	41	Door R	RAH2390				
	42	Panel	RAH2391				
	43	Name Plate	RAM1007				
	44	Indicating Panel	REE - 113				
	45	Panel (CT - W103/KUXJ)	RNA1795				
	45	Panel (CT - W103/KCXJ)	RNA1796				

Packing

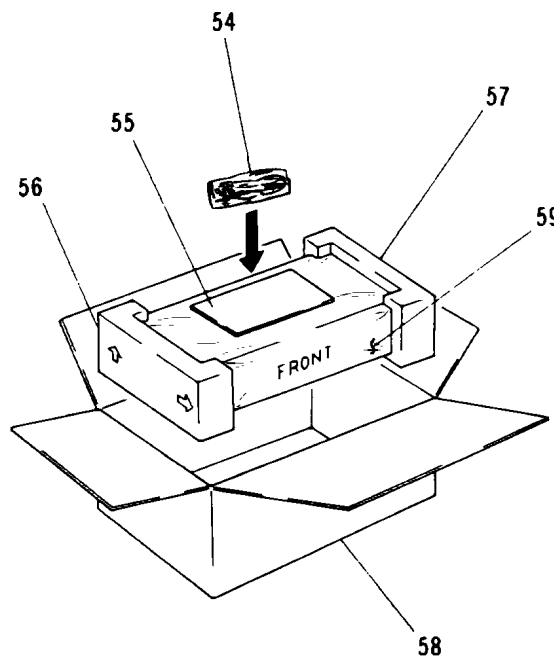

Note: The parts marked with the * are not supplied.

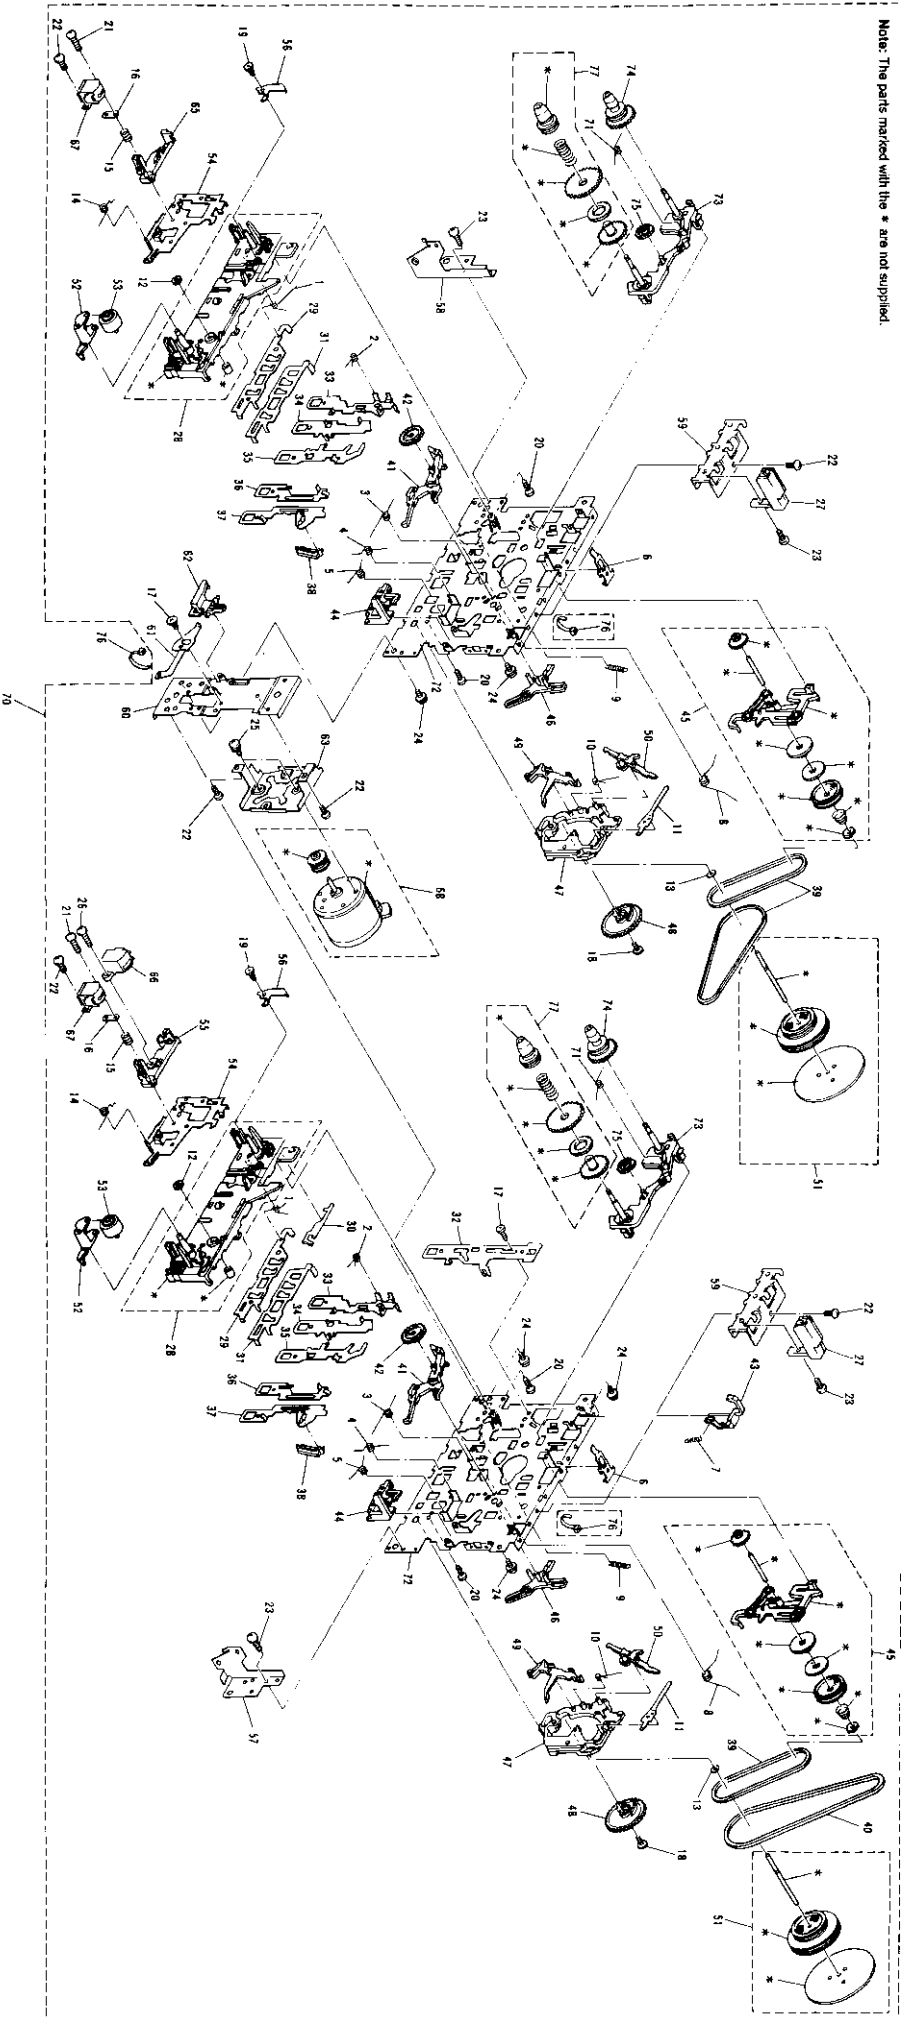


1 2 3 4 5 6 7 8 9

Parts List


Mark	No.	Description	Part No.	Mark	No.	Description	Part No.
	1	Spring	AZB1336		51	FW Assy	AZN2153
	2	Spring	AZB1337		52	Pinch Arm	AZN2157
	3	Spring	AZB1338		53	Pinch Roller	AZN2158
	4	Spring	AZB1339		54	Head Base	AZN2159
	5	Spring	AZB1340		55	Head Holder	AZN2160
	6	Cassette Spring	AZB1343		56	Switch Plate	AZN2162
	7	Spring	AZB1344		57	Button R Holder	AZN2163
	8	Spring	AZB1346		58	Button L Holder	AZN2164
	9	Spring	AZB1347		59	Plate SW	RNE1790
	10	Spring	AZB1348		60	Connect Plate	AZN2166
	11	Plate Spring	AZB1349		61	Connect Arm	AZN2167
	12	Washer	AZB1350		62	Release Arm	AZN2168
	13	Washer	AZB1351		63	Motor Holder	AZN2246
	14	Spring	AZB1352		64	
	15	Spring	AZB1353		65	Tape Guide	AZN2174
	16	Earth Lug	AZB1354		66	E Head	AZP1025
	17	Screw	AZB1355		67	R/P Head	AZP1036
	18	Screw	AZB1356		68	Motor Assy	AZX1037
	19	Screw	AZB1357		69	
	20	Screw	AZB1358		70	Cassette Mecha	RYM1229
	21	Screw	AZB1359		71	Spring	AZB1342
	22	Screw	AZB1360		72	Chassis	AZN2112
	23	Screw	AZB1361		73	Spindle Base	AZN2130
	24	Screw	AZB1362		74	S Reel	AZN2136
	25	Screw	AZB1363		75	FF Idler	AZN2137
	26	Screw	AZB1364	NSP	76	Nylon Binder	Z09 - 057
	27	Reaf SW (CRO)	RSN1024		77	T Reel Assy	AZN2131
	28	Frame Assy	AZN2113				
	29	Function Plate	AZN2116				
	30	REC Stopper	AZN2117				
	31	SW Lever	AZN2118				
	32	REC Lever	AZN2119				
	33	PLAY Lever	AZN2120				
	34	REW Lever	AZN2121				
	35	FF Lever	AZN2122				
	36	SE Lever	AZN2123				
	37	PAUSE Lever	AZN2124				
	38	PAUSE Arm	AZN2125				
	39	Belt	AZN2126				
	40	Belt	AZN2127				
	41	P Idler Arm	AZN2128				
	42	PL Idler	AZN2129				
	43	Inter Lock	AZN2138				
	44	Eject Lever	AZN2139				
	45	PF FF Idler Assy	AZN2140				
	46	Senser	AZN2148				
	47	AS Base	AZN2149				
	48	Cam Gear	AZN2150				
	49	Senser Lever	AZN2151				
	50	Control Lever	AZN2152				

3. BLOCK DIAGRAM

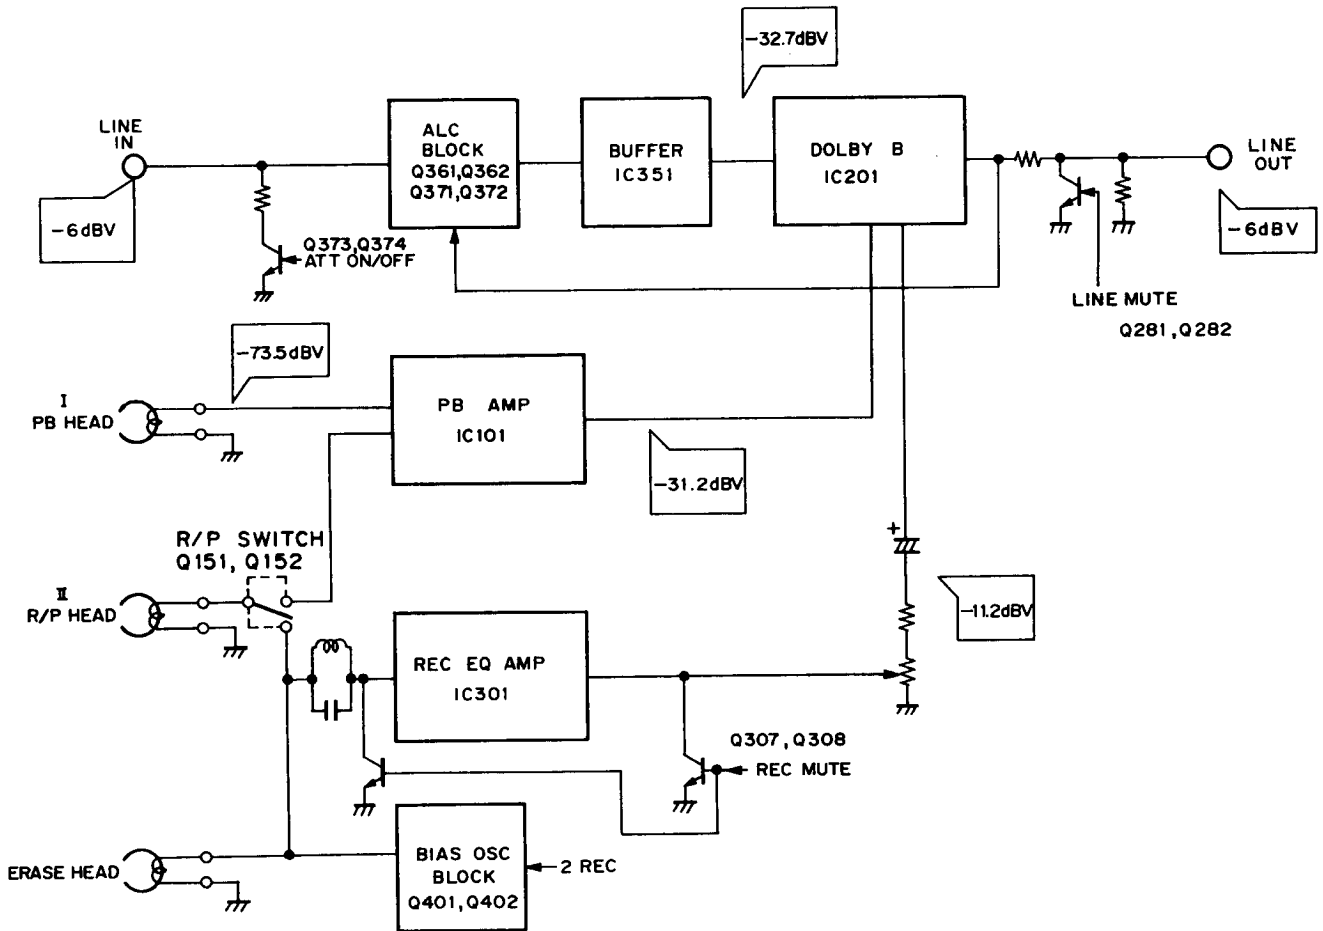


• This diagram is viewed from the mounted parts side.

POWER SWITCH UNIT

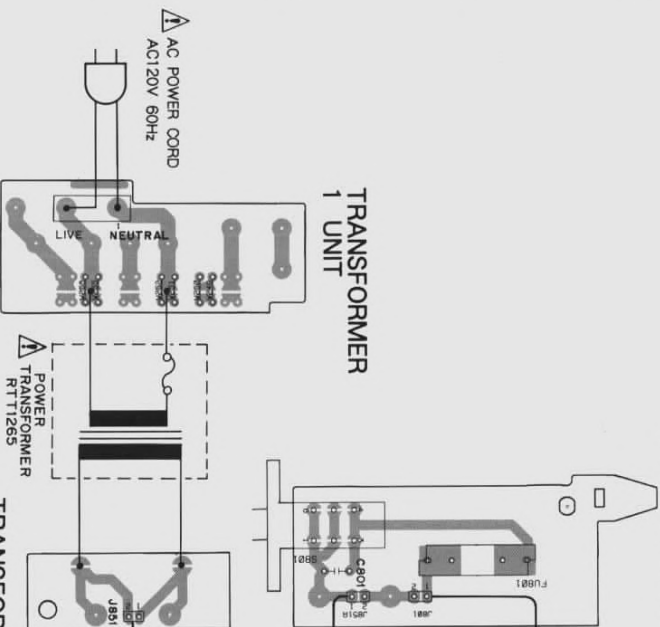

MAIN UNIT


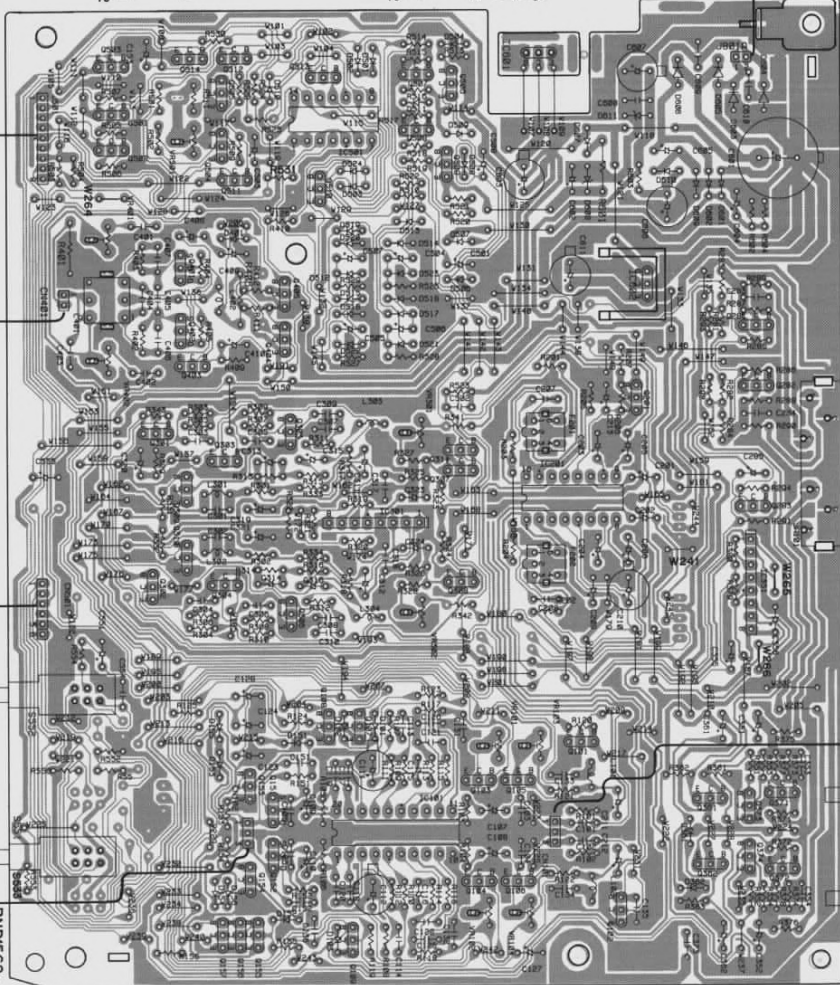


NOTE FOR PCB DIAGRAMS:


1. Part numbers in PCB diagrams match those in the schematic diagrams.
2. A comparison between the main parts of PCB and schematic diagrams is shown below.

Symbol in PCB Diagrams	Symbol in Schematic Diagrams	Part Name
		Transistor
		Transistor with resistor
		Field effect transistor
		Resistor array
		3-terminal regulator

TO MECHANISM UNIT (4/4)

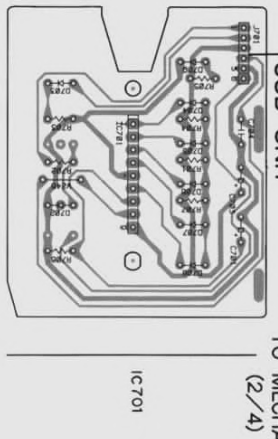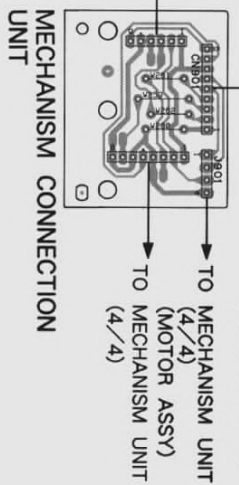

5. SCHEMATIC DIAGRAM

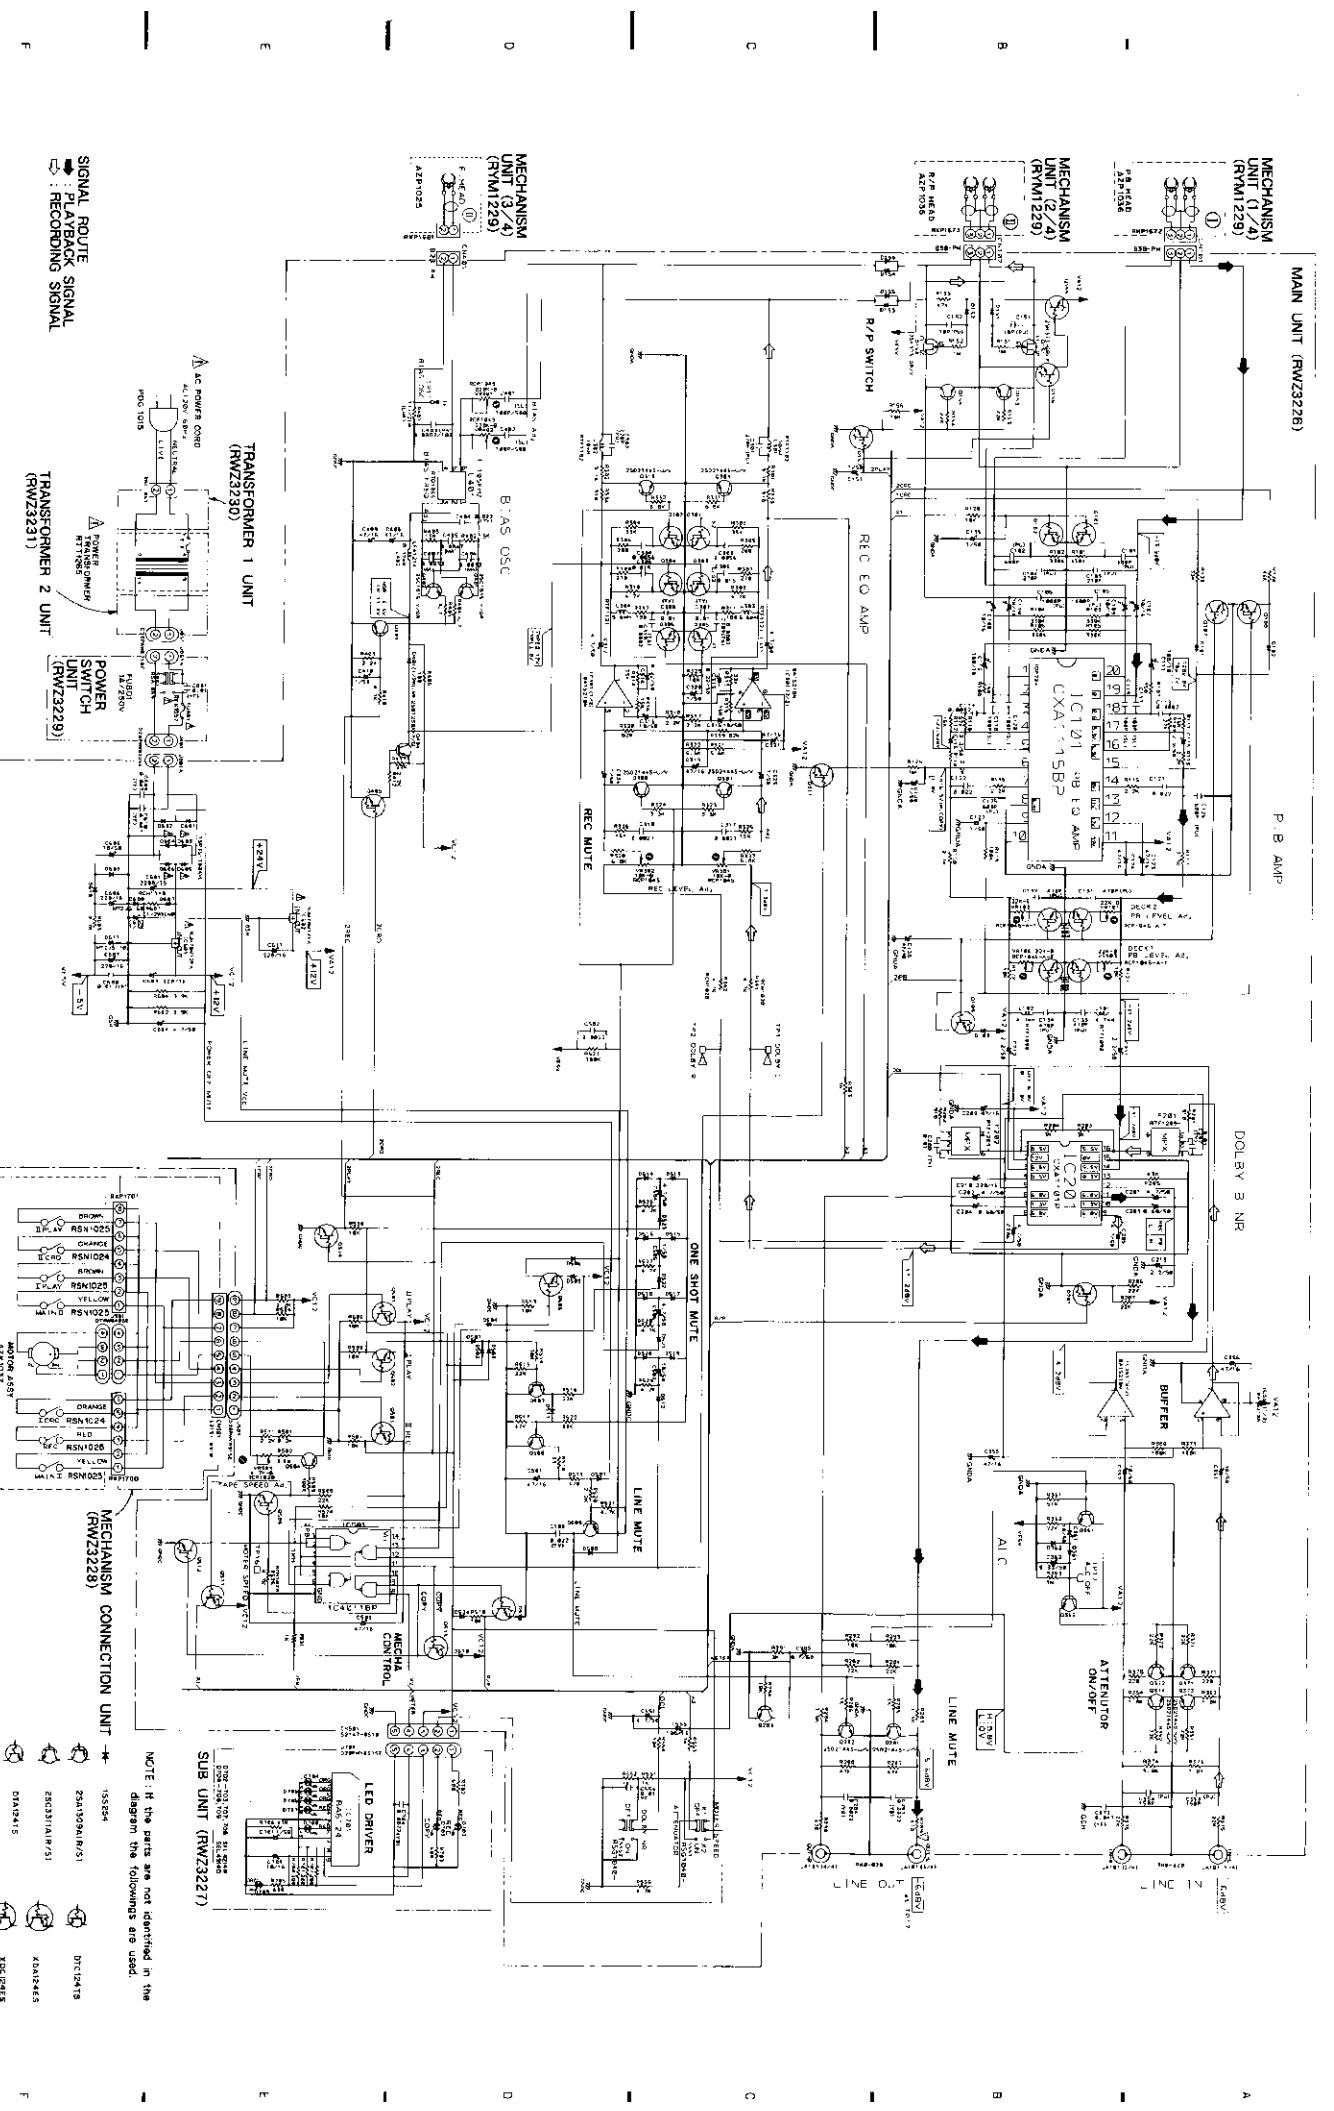

MECHANISM UNIT (1/4) (RVM1228)

MECHANISM UNIT (2/4) (RVM1229)

MAIN UNIT (RWZ3226)

P.B. AMP

DOLBY B NR

REC EQ AMP

REC MUTE

BIAS OSC

TRANSFORMER 1 UNIT (RWZ3230)

TRANSFORMER 2 UNIT (RWZ3231)

POWER SWITCH UNIT (RWZ3229)

MECHANISM UNIT (4/4) (RVM1229)

MECHANISM CONNECTION UNIT (RWZ3228)

LED DRIVER

SUB UNIT (RWZ3227)

NOTE: If the parts are not identified in the diagram the following are used.

155254

25A100AN/51

80C31AN/51

DA24215

01C2475

45A1245

10C2085

Scale 1/1000

SLT 50022
SLT 0920

6. PCB PARTS LIST

NOTES:

- Parts marked by "NSP" are generally unavailable because they are not in our Master Spare Parts List.
- The Δ mark found on some component part numbers indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designations.
- Parts marked by "Q" are not always kept in stock. Their delivery time may be longer than usual or they may be unavailable.
- Values in parentheses, first column, indicate values that come from a library in the following examples:
 - 560 Q → 56 x 10³ → 56k
 - 47K Q → 47 x 10³ → 47k
 - 0.5 Q → 0.5
 - 1 Q → 1
- Ex-2: When there are 3 effective digits (such as in high precision metal film resistors), 5.62k Q → 562 x 10³ → 562k

Mark No.	Description	Part No.	Mark No.	Description	Part No.
NSP	MAIN UNIT	PM1599	Q06	TRANSISTOR	2N1245
NSP	MAIN UNIT	PM2233	Q07	TRANSISTOR	2N3211A
NSP	SUB UNIT CONNECTOR UNIT	PM2234	Q09	TRANSISTOR	2N1301A
NSP	TRANSFORMER 1 UNIT	PM2235	Q10	TRANSISTOR	2N1245
NSP	TRANSFORMER 2 UNIT	PM2236	Q11	TRANSISTOR	2N1245
NSP	TRANSFORMER 2 UNIT	PM2237	Q12	TRANSISTOR	2N1245
NSP	TRANSFORMER 2 UNIT	PM2238	Q13	TRANSISTOR	2N1245
NSP	TRANSFORMER 2 UNIT	PM2239	Q14	TRANSISTOR	2N1245
NSP	TRANSFORMER 2 UNIT	PM2240	Q15	TRANSISTOR	2N1245
NSP	TRANSFORMER 2 UNIT	PM2241	Q16	TRANSISTOR	2N1245
NSP	TRANSFORMER 2 UNIT	PM2242	Q17	TRANSISTOR	2N1245
NSP	TRANSFORMER 2 UNIT	PM2243	Q18	TRANSISTOR	2N1245
NSP	TRANSFORMER 2 UNIT	PM2244	Q19	TRANSISTOR	2N1245
NSP	TRANSFORMER 2 UNIT	PM2245	Q20	TRANSISTOR	2N1245
NSP	TRANSFORMER 2 UNIT	PM2246	Q21	TRANSISTOR	2N1245
NSP	TRANSFORMER 2 UNIT	PM2247	Q22	TRANSISTOR	2N1245
NSP	TRANSFORMER 2 UNIT	PM2248	Q23	TRANSISTOR	2N1245
NSP	TRANSFORMER 2 UNIT	PM2249	Q24	TRANSISTOR	2N1245
NSP	TRANSFORMER 2 UNIT	PM2250	Q25	TRANSISTOR	2N1245

MAIN UNIT

Mark No.	Description	Part No.
12101	79-10 AMP IC	CA1115P
12201	IC	CA1107
12301	IC	CA1107
12401	IC	CA1107
12501	IC	CA1107
12601	IC	CA1107
12701	IC	CA1107
12801	IC	CA1107
12901	IC	CA1107
13001	IC	CA1107
13101	IC	CA1107
13201	IC	CA1107
13301	IC	CA1107
13401	IC	CA1107
13501	IC	CA1107
13601	IC	CA1107
13701	IC	CA1107
13801	IC	CA1107
13901	IC	CA1107
14001	IC	CA1107
14101	IC	CA1107
14201	IC	CA1107
14301	IC	CA1107
14401	IC	CA1107
14501	IC	CA1107
14601	IC	CA1107
14701	IC	CA1107
14801	IC	CA1107
14901	IC	CA1107
15001	IC	CA1107

SEMICONDUCTORS

Mark No.	Description	Part No.
Q01	TRANSISTOR	2N1245
Q02	TRANSISTOR	2N1245
Q03	TRANSISTOR	2N1245
Q04	TRANSISTOR	2N1245
Q05	TRANSISTOR	2N1245
Q06	TRANSISTOR	2N1245
Q07	TRANSISTOR	2N1245
Q08	TRANSISTOR	2N1245
Q09	TRANSISTOR	2N1245
Q10	TRANSISTOR	2N1245
Q11	TRANSISTOR	2N1245
Q12	TRANSISTOR	2N1245
Q13	TRANSISTOR	2N1245
Q14	TRANSISTOR	2N1245
Q15	TRANSISTOR	2N1245
Q16	TRANSISTOR	2N1245
Q17	TRANSISTOR	2N1245
Q18	TRANSISTOR	2N1245
Q19	TRANSISTOR	2N1245
Q20	TRANSISTOR	2N1245
Q21	TRANSISTOR	2N1245
Q22	TRANSISTOR	2N1245
Q23	TRANSISTOR	2N1245
Q24	TRANSISTOR	2N1245
Q25	TRANSISTOR	2N1245

SEMICONDUCTORS

Mark No.	Description	Part No.
Q26	TRANSISTOR	2N1245
Q27	TRANSISTOR	2N1245
Q28	TRANSISTOR	2N1245
Q29	TRANSISTOR	2N1245
Q30	TRANSISTOR	2N1245
Q31	TRANSISTOR	2N1245
Q32	TRANSISTOR	2N1245
Q33	TRANSISTOR	2N1245
Q34	TRANSISTOR	2N1245
Q35	TRANSISTOR	2N1245
Q36	TRANSISTOR	2N1245
Q37	TRANSISTOR	2N1245
Q38	TRANSISTOR	2N1245
Q39	TRANSISTOR	2N1245
Q40	TRANSISTOR	2N1245
Q41	TRANSISTOR	2N1245
Q42	TRANSISTOR	2N1245
Q43	TRANSISTOR	2N1245
Q44	TRANSISTOR	2N1245
Q45	TRANSISTOR	2N1245
Q46	TRANSISTOR	2N1245
Q47	TRANSISTOR	2N1245
Q48	TRANSISTOR	2N1245
Q49	TRANSISTOR	2N1245
Q50	TRANSISTOR	2N1245

7. ADJUSTMENTS

7.1 MECHANICAL ADJUSTMENT

No.	Check	Method	Adjustment value
1	Double speed PLAY	Play back STD-931	6000 Hz ± 500 Hz
2	Normal speed PLAY	Remove the bandage from the band point (P16) at the beginning of P10D or DECK II.	3000Hz ± 2Hz

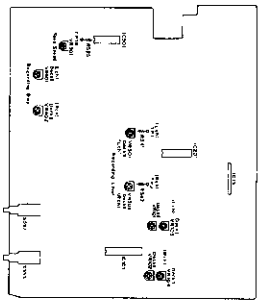


Fig. 7-1 Adjusting points




Fig. 7-2




Fig. 7-3

MECHANISM CONNECTION UNIT

1. Check the 2-point setting of the mechanism as shown in Fig. 7-2 and stand 2. Open the door of DECK I and DECK II simultaneously, and after the door is within 15 mm, 3. If the specification described on steps 1 and 2 have a not satisfied, When the door of DECK I opens, move the wire of DECK II. Change the DECK II door spring to position M.

POWER SWITCH UNIT

1. Check the 2-point setting of the mechanism as shown in Fig. 7-2 and stand 2. Open the door of DECK I and DECK II simultaneously, and after the door is within 15 mm, 3. If the specification described on steps 1 and 2 have a not satisfied, When the door of DECK I opens, move the wire of DECK II. Change the DECK II door spring to position M.

TRANSFORMER 1 UNIT

1. Check the 2-point setting of the mechanism as shown in Fig. 7-2 and stand 2. Open the door of DECK I and DECK II simultaneously, and after the door is within 15 mm, 3. If the specification described on steps 1 and 2 have a not satisfied, When the door of DECK I opens, move the wire of DECK II. Change the DECK II door spring to position M.

TRANSFORMER 2 UNIT

7.1 MECHANICAL ADJUSTMENT

No.	Check	Method	Adjustment value
1	Double speed PLAY	Play back STD-931	6000 Hz ± 500 Hz
2	Normal speed PLAY	Remove the bandage from the band point (P16) at the beginning of P10D or DECK II.	3000Hz ± 2Hz

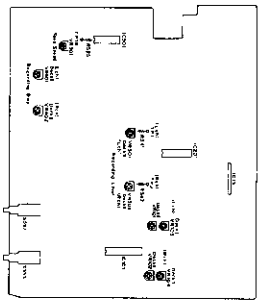


Fig. 7-1 Adjusting points




Fig. 7-2




Fig. 7-3

7.2 ELECTRICAL ADJUSTMENTS

Adjustment Conditions

1. The mechanical adjustments must be completed first.
2. The head must be cleaned and demagnetized.
3. Turn power on allow the deck to warm up for at least a few minutes before commencing any electrical adjustments.
4. The reference signal is 0 dBV=1 Vrms.
5. Connect a 10 kΩ load resistance to the OUTPUT terminals.
6. Unless otherwise specified, the switches listed below are left in the positions indicated.

DOLBY NR : OFF

Test Tapes

- STD-331E : Playback adjustments
(See Fig. 7-4)
- STD-631 or STD-632 : NORMAL blank tape
- STD-621 : CrO₂ blank tape


List of Adjustments

Playback sections

1. Head azimuth adjustment.
2. Playback level adjustment.

Recording sections

1. Recording bias adjustment.
2. Recording level adjustment.
3. Level meter check.

Dolby noise reduction manufactured under license from Dolby Laboratories Licensing Corporation.
"DOLBY" and the double-D symbol  are trademarks of Dolby Laboratories Licensing Corporation.

NOTE: This unit has an automatic tape selection feature.


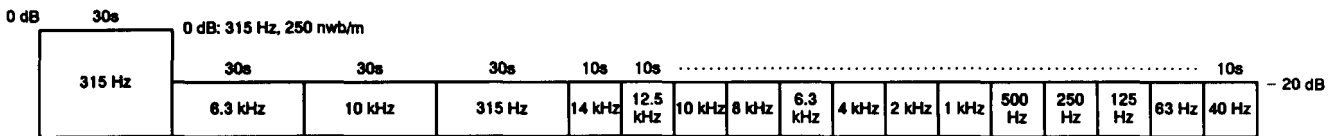


Fig. 7-4 Constants of the test tape STD-331E

Deck II

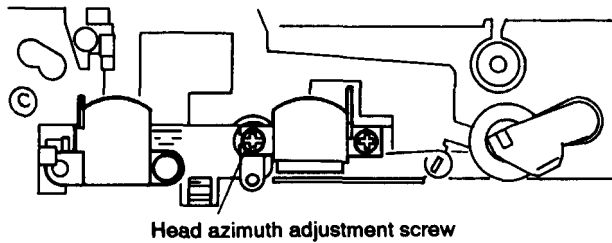

Deck I


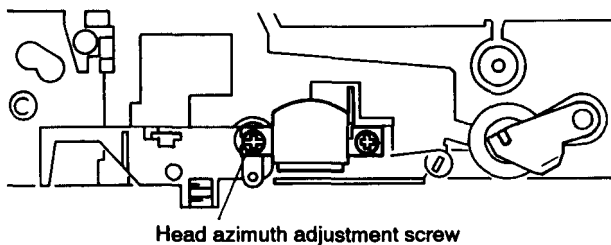


Fig. 7-5 Head azimuth adjustment

PLAY BACK

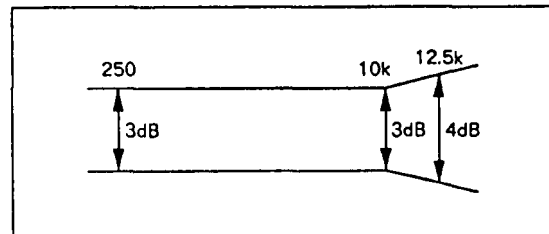

RECORDING

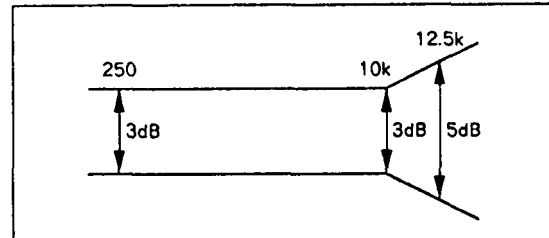


Fig. 7-6 Frequency response zone

PLAYBACK SECTION

1. Head Azimuth Adjustment

- Turn VR101, 102 (Deck II) or VR103, 104 (Deck I) to mechanical center positions.

No.	Mode	Input signal & test tape	Adjustment location	Measuring location	Adjustment value	Remarks
1.	PLAY	Play the 10 kHz/-20 dB section of STD-331E test tape.	Head azimuth adjustment screw. (See Fig. 7-5)	LINE OUT	Maximum playback signal level.	
2.	STOP	Lock the screw with screw lock after completing adjustment.				

2. Playback Level Adjustment

- This adjustment determines the DOLBY NR level, and must be performed with great care.

No.	Mode	Input signal & test tape	Adjustment location	Measuring location	Adjustment value	Remarks	
1.	PLAY	Play the 315 Hz/0 dB section of the STD-331E test tape.	Deck I	VR 103 (Lch) VR 104 (Rch)	TP. 1 (Lch) TP. 2 (Rch)	-10.7 dBV	
			Deck II	VR 101 (Lch) VR 102 (Rch)			

RECORDING SECTION

1. Recording Bias Adjustment

No.	Mode	Input signal & test tape	Adjustment location	Measuring location	Adjustment value	Remarks
1.	STOP	Set the TAPE SELECTOR switch to the NORM position.				
2.	REC → PLAY	Load the STD-631 test tape. Record the 315 Hz and 6.3 kHz signals at -20 dBV input level and playback.	Deck II	VR401 (Lch) VR402 (Rch)	LINE OUT	Repeatedly record, playback and adjust so that the playback level of 6.3 kHz signal becomes +0.5 dB ± 0.5 dB when compared with the 315 Hz signal.


2. Recording Level Adjustment

No.	Mode	Input signal & test tape	Adjustment location	Measuring location	Adjustment value	Remarks
1.	REC/ PAUSE	Apply a 315 Hz signal to the line input terminals, load the STD-631 or STD-632 test tape.	Volume of the output level of the oscillator		-11.2 dBV	
2.	REC → PLAY	Record the above signal onto the STD-631 or STD-632 test tape, and playback.	Deck II	VR301 (Lch) VR302 (Rch)	TP. 1 (Lch) TP. 2 (Rch)	Repeatedly record, playback and adjust so that the playback signal level becomes -11.2 dBV.
3.	REC → PLAY	Record the above signal onto the STD-621 test tape, and playback.	Check			-11.2 dBV ± 1.5 dB

3. Level Meter Check

No.	Mode	Input signal & test tape	Adjustment location	Measuring location	Adjustment value	Remarks
1.	REC/ PAUSE	Apply a 315 Hz/-6 dBV (0.5V) signal to the Line Input terminals.	Volume of the output level of the oscillator.		TP. 1 (Lch) TP. 2 (Rch)	Check that the level meters "0 dB" light up within -11.2 dBV ± 2 dB of the signal output level.

8. PANEL FACILITIES

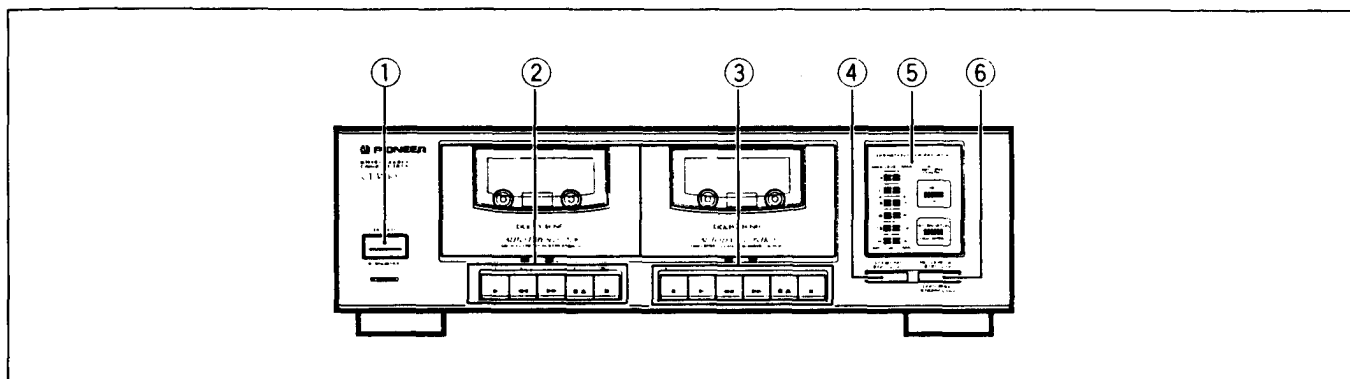

① **POWER (STANDBY/ON) switch**

NOTE:

The POWER switch activates the secondary transformer only. Even when the switch is in the STANDBY position, there will be a power flow to the deck's circuits as long as the power cord is connected to a power outlet.

② **Deck I operation buttons**

- ▶ (PLAY) : Playback
- ◀◀ (REW) : Rewind
- ▶▶ (FF) : Fast forward
- /▲ (STOP/EJECT) : Stop/Eject
- || (PAUSE) : Pause

③ **Deck II operation buttons**

- (REC) : Recording
- ▶ (PLAY) : Playback
- ◀◀ (REW) : Rewind
- ▶▶ (FF) : Fast forward
- /▲ (STOP/EJECT) : Stop/Eject
- || (PAUSE) : Pause

④ **DOLBY* NR switch (■ OFF, ▬ ON)**

*

- Dolby noise reduction manufactured under license from Dolby Laboratories Licensing Corporation.
- "DOLBY" and the double-D symbol are trademarks of Dolby Laboratories Licensing Corporation.

⑤ **Function display**

⑥ **REC LEVEL ATT button (■ OFF, ▬ ON)/ COPY SPEED button (■ NORM, ▬ HIGH)**

- If the sound is distorted, set this button to ON to attenuate the level and reduce distortion.
- When recording from one tape to another tape, this button can be used to switch between NORMAL SPEED and HIGH SPEED recording.


■ **Dolby NR System**

Dolby NR systems are designed to reduce the amount of tape hiss, mainly in the treble components. During recording, the high-pitched pianissimo sounds which are most characteristic of audible noise are boosted, and during playback, only these boosted sections are attenuated, so that the sound is returned to normal. As a result, the noise is attenuated by an amount equal to the boosting in the treble range. The Dolby NR ON system reduces noise in the treble range, cutting tape hiss and expanding the dynamic range.

NOTE:

When a tape has been recorded using the Dolby NR system, make sure that the DOLBY NR switch is set to the ON position during playback.

Function display

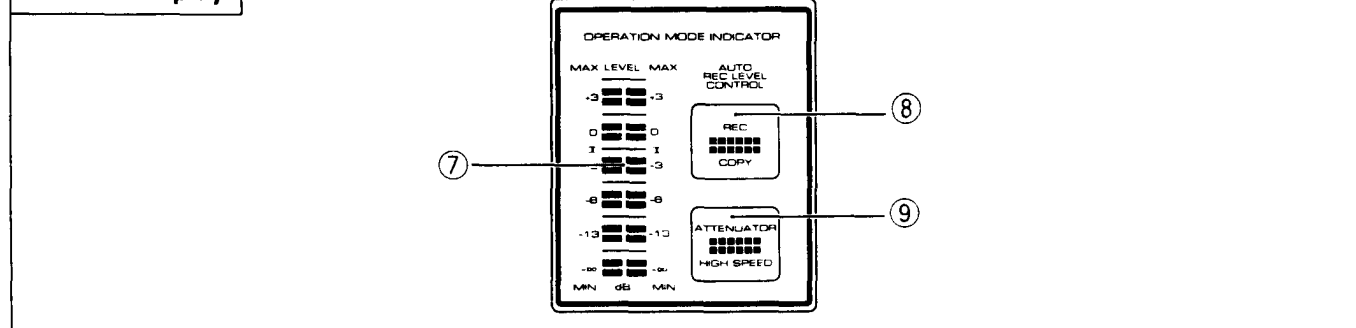

⑦ **Level meter**

- The between the -3 and 0 mark indicates the reference level for the Dolby NR system.

⑧ **REC/COPY indicator**

Lights up during recording or copying.

⑨ **ATTENUATOR/HIGH SPEED indicator**

- Lights up during recording when the REC LEVEL ATT switch is set to ON.
- Lights up during High speed copying.

9. SPECIFICATIONS

System	4 track, 2-channel stereo
Heads	"Hard Permalloy" recording/playback head x 1 "Hard Permalloy" playback head x 1 "Ferrite" erasing head x 1
Motor	DC servo motor x 1
Wow and Flutter	0.15% (WRMS, JIS)
Fast Winding Time	Approx. 115 seconds (C-60 tape)
Frequency Response (at -20 dB recording level)	
TYPE II (HIGH/CrO ₂) tape.....	30 to 16,000 Hz
TYPE I (Normal) tape.....	30 to 16,000 Hz
Signal-to-Noise Ratio	
Dolby NR OFF	More than 56 dB
Noise Reduction Effect	
Dolby NR ON	More than 10 dB (at 5 kHz)
Harmonic Distortion	No more than 1.0% (at -4 dB: 160 nwb/m)
Input (Sensitivity)	
LINE (INPUT).....	112 mV (Input impedance 24 kΩ)
Output (Reference level)	
LINE (OUTPUT)	0.5 V (Output impedance 1.9 kΩ)

Miscellaneous

Power Requirements	
Australian model	AC 230 ~ 240 V, 50/60 Hz
U.S. model.....	AC 120 V, 60Hz
Power Consumption	15 W
Dimensions	420 (W) x 130 (H) x 250 (D) mm
Weight	4.2 kg

Accessories

Operating instructions	1
Connection cord with pin plugs	2

Features

- DOLBY NR
- Synchronized copy start
- High-speed and normal-speed copy (Deck I → Deck II)
- Relay playback (Deck II → Deck I)
- 6-segment LED level meter
- Automatic tape selectors
- Automatic recording level control
- REC LEVEL Attenuator

NOTE:

Specifications and design subject to possible modifications without notice due to improvements.