


Service Manual

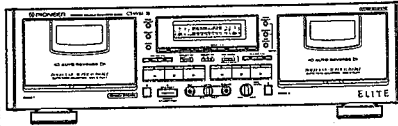

The above illustration shows CT-W54.

**ORDER NO.
RRV1143**

The chapter 1 of this Service Manual will not be reprinted. On your additional orders, we may supply only the chapter 2. For the chapter 1, please make copies and attach to the chapter 2 at your side if necessary.

STEREO DOUBLE CASSETTE DECK

CT-W54 CT-W803RS

THIS MANUAL IS APPLICABLE TO THE FOLLOWING MODEL(S) AND TYPE(S).

Type	Model		Power Requirement	The voltage can be converted by the following method.
	CT-W54	CT-W803RS		
KU/CA	○	—	AC120V	_____
HB	—	○	AC230 – 240V	AC220 – 230V, *
HEM	—	○	AC220 – 230V	AC230 – 240V, *
SD	—	○	AC110V/120 – 127V/220V/240V	With the voltage selector

*: Alter the wiring of the Power-supply block at the primary winding of power transformer referring to the "Line Voltage Selection" described in Service Manual.

CONTENTS

CHAPTER 1

1.1 SAFETY INFORMATION	1-2
1.2 PANEL FACILITIES.....	1-3
1.3 SPECIFICATIONS	1-4
1.4 TEST MODE	1-5
1.5 ADJUSTMENTS	1-7
1.6 PARTS LIST FOR EXPLODED VIEWS AND PACKING	1-11
1.7 PCB PARTS LIST	1-14

CHAPTER 2

2.1 EXPLODED VIEWS AND PACKING	2-3
2.2 BLOCK DIAGRAM	2-7
2.3 SCHEMATIC DIAGRAMS.....	2-8
2.4 PCB CONNECTION DIAGRAM.....	2-13

PIONEER ELECTRONIC CORPORATION 4-1, Meguro 1-Chome, Meguro-ku, Tokyo 153, Japan
PIONEER ELECTRONICS SERVICE INC. P.O. Box 1760, Long Beach, California 90801 U.S.A.
PIONEER ELECTRONICS OF CANADA, INC. 300 Allstate Parkway Markham, Ontario L3R 0P2 Canada
PIONEER ELECTRONIC [EUROPE] N.V. Haven 1087 Keetberglaan 1, 9120 Melsele, Belgium
PIONEER ELECTRONICS AUSTRALIA PTY. LTD. 178-184 Boundary Road, Braeside, Victoria 3195, Australia TEL: [03] 580-9911
© PIONEER ELECTRONIC CORPORATION 1994

CHAPTER 1

1.1 SAFETY INFORMATION

This service manual is intended for qualified service technicians; it is not meant for the casual do-it-yourselfer. Qualified technicians have the necessary test equipment and tools, and have been trained to properly and safely repair complex products such as those covered by this manual.

Improperly performed repairs can adversely affect the safety and reliability of the product and may void the warranty. If you are not qualified to perform the repair of this product properly and safely, you should not risk trying to do so and refer the repair to a qualified service technician.



WARNING

Lead in solder used in this product is listed by the California Health and Welfare agency as a known reproductive toxicant which may cause birth defects or other reproductive harm (California Health & Safety Code, Section 25249.5).

When servicing or handling circuit boards and other components which contain lead in solder, avoid unprotected skin contact with the solder. Also, when soldering do not inhale any smoke or fumes produced.



NOTICE

(FOR CANADIAN MODEL ONLY)

Fuse symbols  (fast operating fuse) and/or  (slow operating fuse) on PCB indicate that replacement parts must be of identical designation.

REMARQUE

(POUR MODÈLE CANADIEN SEULEMENT)

Les symboles de fusible  (fusible de type rapide) et/ou  (fusible de type lent) sur CCI indiquent que les pièces de remplacement doivent avoir la même désignation.


(FOR USA MODEL ONLY)

1. SAFETY PRECAUTIONS

The following check should be performed for the continued protection of the customer and service technician.

LEAKAGE CURRENT CHECK

Measure leakage current to a known earth ground (water pipe, conduit, etc.) by connecting a leakage current tester such as Simpson Model 229-2 or equivalent between the earth ground and all exposed metal parts of the appliance (input/output terminals, screwheads, metal overlays, control shaft, etc.). Plug the AC line cord of the appliance directly into a 120V AC 60Hz outlet and turn the AC power switch on. Any current measured must not exceed 0.5mA.

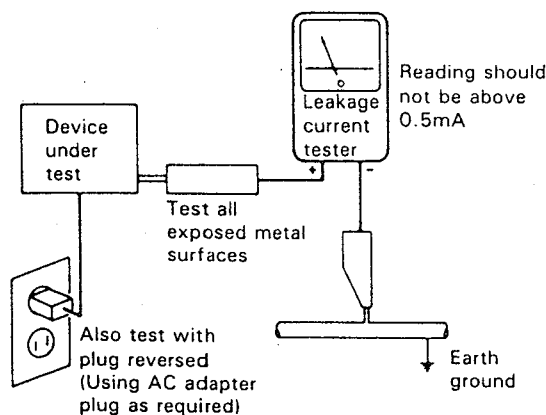

AC Leakage Test

ANY MEASUREMENTS NOT WITHIN THE LIMITS OUTLINED ABOVE ARE INDICATIVE OF A POTENTIAL SHOCK HAZARD AND MUST BE CORRECTED BEFORE RETURNING THE APPLIANCE TO THE CUSTOMER.

2. PRODUCT SAFETY NOTICE


Many electrical and mechanical parts in the appliance have special safety related characteristics. These are often not evident from visual inspection nor the protection afforded by them necessarily can be obtained by using replacement components rated for voltage, wattage, etc. Replacement parts which have these special safety characteristics are identified in this Service Manual.

Electrical components having such features are identified by marking with a Δ on the schematics and on the parts list in this Service Manual.

The use of a substitute replacement component which does not have the same safety characteristics as the PIONEER recommended replacement one, shown in the parts list in this Service Manual, may create shock, fire, or other hazards.

Product Safety is continuously under review and new instructions are issued from time to time. For the latest information, always consult the current PIONEER Service Manual. A subscription to, or additional copies of, PIONEER Service Manual may be obtained at a nominal charge from PIONEER.

1.2 PANEL FACILITIES

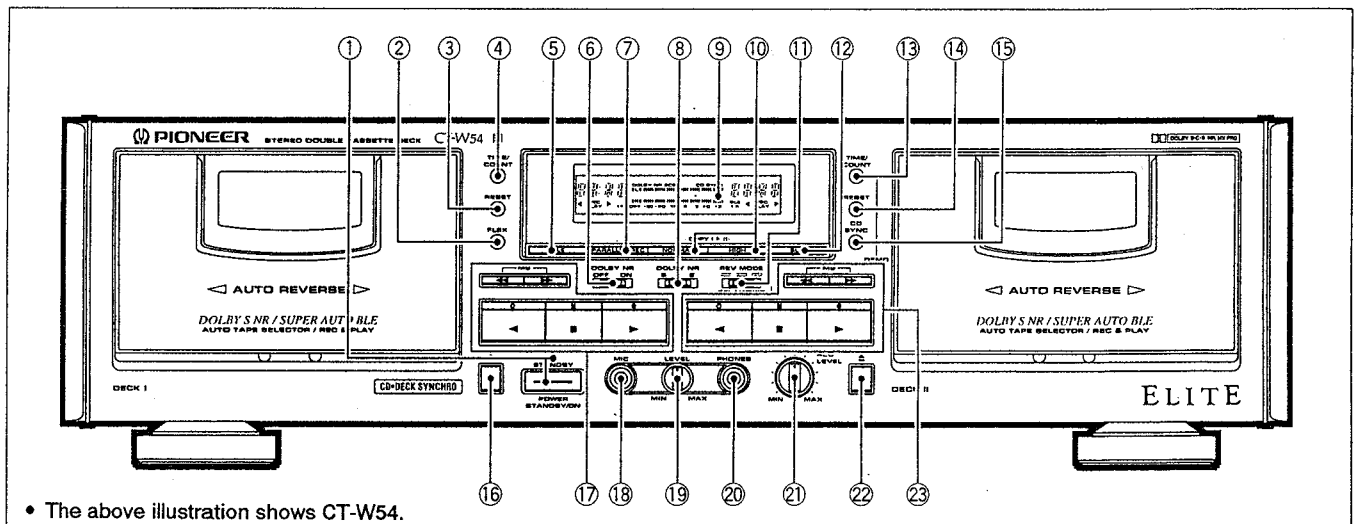

• The above illustration shows CT-W54.

① POWER STANDBY/ON switch/indicator

The POWER switch activates the secondary transformer only. Even when the switch is in the STANDBY position, there will be a power flow to the deck's circuits as long as the power cord is connected to a power outlet.

② FLEX button

③ DECK I counter reset button (RESET)

④ DECK I counter mode button (TIME/COUNT)

⑤ DECK I AUTO BLE button


⑥ DOLBY NR ON/OFF switch

⑦ Parallel recording button (PARALLEL REC)

⑧ DOLBY* NR switch (B/C/S)

*

- *Dolby noise reduction and HX Pro headroom extension manufactured under license from Dolby Laboratories Licensing Corporation. HX Pro originated by Bang & Olufsen.*

- *"DOLBY", the double-D symbol  and "HX PRO" are trademarks of Dolby Laboratories Licensing Corporation.*

⑨ Function display

⑩ Synchro copy buttons (COPY I/II)

NORMAL : Normal speed copy

HIGH : Double speed copy

⑪ Reverse mode switch (REV MODE)

⑫ DECK II AUTO BLE button

⑬ DECK II counter mode button (TIME/COUNT)

⑭ DECK II counter reset button (RESET)

⑮ CD-DECK SYNCHRO recording button (CD SYNC)

⑯ DECK I eject button (▲)

- If the tape is moving (recording, playback, tape winding, etc.), press the stop (■) button before pressing this button.

NOTE:

If the power is turned off while the tape is moving, the cassette door may remain locked. In this case, turn the power on before pressing the eject (▲) button.

⑰ DECK I operation buttons

◀ : Reverse playback

▶ : Forward playback

◀◀/MS : Fast reverse/music search

■ : Stop

▶▶/MS : Fast forward/music search

○ : Recording mute

⏸ : Pause

● : Recording

⑱ Microphone jack (MIC)

⑲ MIC LEVEL control

⑳ Headphones jack (PHONES)

㉑ Recording level control (REC LEVEL)

㉒ DECK II eject button (▲)

- If the tape is moving (recording, playback, tape winding, etc.), press the stop (■) button before pressing this button.

NOTE:

If the power is turned off while the tape is moving, the cassette door may remain locked. In this case, turn the power on before pressing the eject (▲) button.

㉓ DECK II operation buttons

◀ : Reverse playback

▶ : Forward playback

◀◀/MS : Fast reverse/music search

■ : Stop

▶▶/MS : Fast forward/music search

○ : Recording mute

⏸ : Pause

● : Recording


1.3 SPECIFICATIONS

System.....	4 track, 2-channel stereo
Heads.....	"Hard Permalloy" recording/playback head × 2 "Ferrite" erasing head × 2
Motor.....	DC servo motor × 2
Wow and Flutter.....	No more than 0.08% (WRMS)
Fast Winding Time.....	Approximately 100 seconds (C-60 tape)

Frequency Response	
-20 dB recording:	
TYPE IV (Metal) tape	20 to 20,000 Hz
TYPE II (HIGH/CrO ₂) tape	20 to 19,000 Hz
TYPE I (Normal) tape	20 to 18,000 Hz
Signal-to-Noise Ratio	
Dolby NR OFF	More than 57 dB
Noise Reduction Effect	
Dolby B-type NR ON.....	More than 10 dB (at 5 kHz)
Dolby C-type NR ON.....	More than 19 dB (at 5 kHz)
Dolby S-type NR ON.....	More than 22 dB (at 5 kHz)
Harmonic Distortion.....	No more than 0.8% (at -4 dB: 160 nwb/m)

Input (Sensitivity)	
LINE (INPUT)	100 mV (Input impedance 68 k Ω)
MIC	0.63 mV
Output (Reference level)	
LINE (OUTPUT)	0.5 V (Output impedance 1.9 k Ω)
Headphone.....	0.63 mW (Load impedance 8 Ω)


Subfunctions

- Super AUTO BLE tuning system
- Automatic reverse
- Double recording/playback
- DOLBY HX PRO recording function
- DOLBY B/C/S type NR
- Relay recording
- Parallel recording
- Music search over ± 15 selections
- Synchronized copy start
- High-speed and normal-speed copy (DECK I \rightarrow DECK II)
- Relay playback/blank skip
- CD•DECK SYNCHRO recording capability
- Peak level meter with peak-hold function
- MPX FILTER (Interlocks with Dolby NR switch)
- Automatic space recording mute
- Automatic tape selector
-  System remote control available
- Microphone jack
- 2-mode electronic 4-digit twin tape counter
- Headphone jack
- FLEX system

Miscellaneous

Power Requirements	AC 120 Volts, 60 Hz
Power Consumption.....	24 W
Dimensions.....	440 (W) × 125 (H) × 250 (D) mm 17-5/16(W) × 4-7/8 (H) × 9-13/16 (D) in
Weight (without package).....	4.3 kg (9 lb 7 oz)

Accessories

Operating instructions	1
Connection cord with pin plugs	2
 Remote control cord	1
CD•DECK SYNCHRO control cord	1

NOTE:

Specifications and design subject to possible modifications without notice, due to improvements.

POWER-CORD CAUTION

Handle the power cord by the plug. Do not pull out the plug by tugging the cord and never touch the power cord when your hands are wet as this could cause a short circuit or electric shock. Do not place the unit, a piece of furniture, etc., on the power cord, or pinch the cord. Never make a knot in the cord or tie it with other cords. The power cords should be routed such that they are not likely to be stepped on. A damaged power cord can cause fire or give you an electrical shock. Check the power cord once in a while. When you find it damaged, ask your nearest PIONEER authorized service center or your dealer for a replacement.

1.4 TEST MODE

Entering the Test Mode

To enter the test mode, set both DECK I and DECK II into the STOP mode and press the TIME/COUNT key of DECK I, RESET key of DECK I and PAUSE key of DECK II all together.

To change the MODE NO. , press the STOP key so that the MODE NO. becomes 0 and enter other modes.

Exiting the Test Mode

To exit the test mode, press the RESET key of DECK I or turn off the power.

MODE NO.	DECK I Display	DECK II Display	Key Input	Adjustment and Check
0	-	0	STOP FWD REV FF REW REC PAUSE MUTE X1COPY X2COPY	<ul style="list-style-type: none"> ● The mechanism will operate even in the "no-half" state only for this mode. ● Tape speed adjustment mode <ul style="list-style-type: none"> • During play (except during the assist), the speed can be doubled by pressing the FAST key (FF or REW key of DECK I or II). • During double speed play, the play can be returned to normal speed by pressing the FWD or REV key. ● Auto-stop check <ul style="list-style-type: none"> • The RELAY mode will be turned on forcibly. But the REC is not relayed from DECK II to DECK I. • Auto stop is carried out at tape end for one second only in this mode. (Usually four seconds.) • Reverse is carried out as normally, but if the reverse is carried out in double speed, the tape will be played at constant speed.

CD SYNCHRO, SW check Modes

MODE NO.	Deck I Display	Deck II Display	Key Input	LINE MUTE	REC MUTE	BIAS	Adjustment and Check
1	-	1	CD SYNC	ON	ON	OFF	<ul style="list-style-type: none"> ● CD SYNCHRO Check If a cord whose input/output is short-circuited is connected, "CD SYNC" will light up when a key is input.
1	-	1	1-CTR MODE	ON	ON	OFF	<ul style="list-style-type: none"> ● SW Check (NORMAL) <ul style="list-style-type: none"> • When there is no-half, the corresponding counter will display "HALF". • Mistaken Erasure Detection Check When FWD recording is possible : "▶" lights up When REV recording is possible : "◀" lights up • Timer SW Check TIMER REC : Lch - ∞ TIMER PLAY : Rch - ∞ • Reverse SW Check = : "I" ∞ (REPEAT) : "II" • Tape Detection Check Deck II Check NORMAL : Lch +3dB lights up Rch +3dB lights up CR02 : Lch +3dB goes off Rch +3dB lights up METAL : Lch +3dB goes off Rch +3dB goes off Deck I Check NORMAL : Lch -20dB lights up Rch -20dB lights up CR02 : Lch -20dB goes off Rch -20dB lights up METAL : Lch -20dB goes off Rch -20dB goes off



BLE Adjustment Mode

● Entering the BLE Adjustment Mode

Set the MODE NO. to 0 and press the BLE keys of DECK I and DECK II. Both decks will set into the BLE adjustment mode in order.

● Exiting the BLE Adjustment Mode

To exit the BLE adjustment mode, press the STOP key or turn off the power.

MODE NO.	Deck I Display	Deck II Display	Key Input	LINE MUTE	REC MUTE	BIAS	Adjustment and Check
2	—	2 00	2-BLE	ON	ON	OFF	
	400	2 01	2-BLE	OFF	OFF	OFF	<ul style="list-style-type: none"> • For AUTO BLE 400Hz OSC output level adjustment mode  <p>Adjust so that the meter becomes as shown in the above diagram.</p>
	10K	2 02	2-BLE	OFF	OFF	OFF	<ul style="list-style-type: none"> • For AUTO BLE 10kHz OSC output level adjustment mode  <p>Adjust so that the meter becomes as shown in the above diagram.</p>
	3K	2 03	2-BLE	ON	ON	OFF	<ul style="list-style-type: none"> • For AUTO BLE 3kHz OSC output level adjustment mode
	BIAS	2 04	2-BLE	ON	ON	ON	DECK II BIAS SWEEP mode
	LEVL	2 05	2-BLE	OFF	OFF	OFF	DECK II LEVEL SWEEP mode
	EQ	2 06	2-BLE	OFF	OFF	OFF	DECK II EQ SWEEP mode
	400	2 10	1-BLE	OFF	OFF	OFF	<ul style="list-style-type: none"> • For AUTO BLE 400Hz OSC output level adjustment mode For adjustment the same as DECK II
	10K	2 20	1-BLE	OFF	OFF	OFF	<ul style="list-style-type: none"> • For AUTO BLE 10kHz OSC output level adjustment mode For adjustment the same as DECK II
	3K	2 30	1-BLE	ON	ON	OFF	<ul style="list-style-type: none"> • For AUTO BLE 3kHz OSC output level adjustment mode For adjustment the same as DECK II
	BIAS	2 40	1-BLE	ON	ON	ON	DECK I BIAS SWEEP mode
	LEVL	2 50	1-BLE	OFF	OFF	OFF	DECK I LEVEL SWEEP mode
	EQ	2 60	1-BLE	OFF	OFF	OFF	DECK I EQ SWEEP mode

1.5 ADJUSTMENTS

1. MECHANICAL ADJUSTMENT

1.1 Door Damping Check and Adjustment

Set the door spring of the DECK I side to position (A) as shown in Fig. 1. Then, erect the front panel assembly vertically.

Open the doors of DECK I and DECK II at the same time. At this point, confirm that the difference between the door completely opened and the other door is within 15mm. If this standard is not satisfied install the door spring of DECK I at another position and adjust as follows:

- When the door of DECK I opens later than that of DECK II :
Change the door spring of DECK II from A to B.
- When the door of DECK I opens faster than that of DECK II :
Change the door spring of DECK I from A to B.

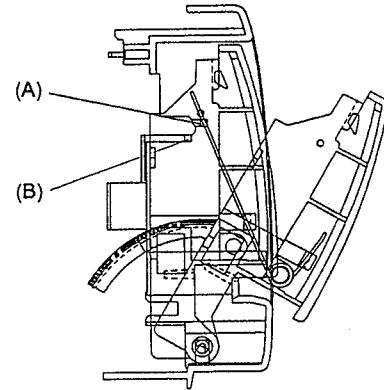


Fig. 1


1.2 Tape Speed

- Perform this adjustment in the test mode.
- TEST mode setting.

1. Press the TIME/COUNT and RESET keys of DECK I together with the PAUSE key of DECK II.
2. The speed becomes normal when the PLAY key is pressed, and double when the FF key is pressed.
3. To cancel the TEST mode, press the RESET key of DECK I.

1. Tape Speed Adjustment and Check						
No.	Deck	Mode	Test tape	Adjusting points	Specifications/Ratings (playback frequency)	Remarks
1	I	Double speed PLAY	STD-301 (3 kHz)	check	6000 Hz \pm 600 Hz	
2	II			VR851	Within \pm 10 Hz against the measurement value of the step 1 (deck I)	
3	I	NORMAL speed PLAY		VR802	2980 Hz \pm 5 Hz	
4	II			VR852	Within \pm 5 Hz against the measurement value of the step 3 (deck I)	

MAIN BOARD

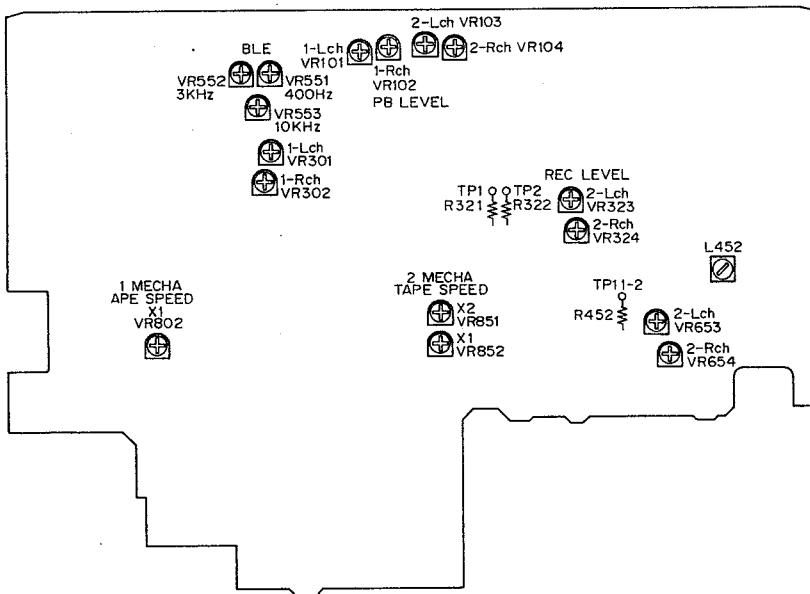

REC UNIT

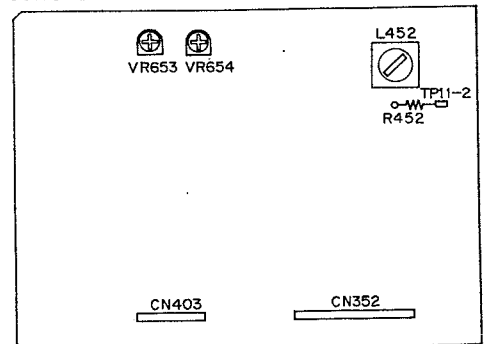


Fig. 2 Adjusting points

2. ELECTRICAL ADJUSTMENTS

Adjustment Conditions

1. The mechanical adjustments must be completed first.
2. The head must be cleaned and demagnetized.
3. Turn power on allow the deck to warm up for at least a few minutes before commencing any electrical adjustments.
4. The reference signal is 0 dBV=1 Vrms.
5. Connect a 10 kΩ load resistance to the OUTPUT terminals.
6. Unless otherwise specified, the switches listed below are left in the positions indicated.

DOLBY NR : OFF
 TAPE SELECTOR : NORM

Test Tapes

- STD-331E : Playback adjustments
 (See Fig. 3)
- STD-631 or STD-632 : NORMAL blank tape
- STD-621 : CrO₂ blank tape
- STD-610 : METAL blank tape

* As the reference recording level is 250 nwb/m for STD-331E, the recording level will be higher by 4 dB for STD-331B (160 nwb/m). When adjusting, pay carefull attention to the type of tape used.

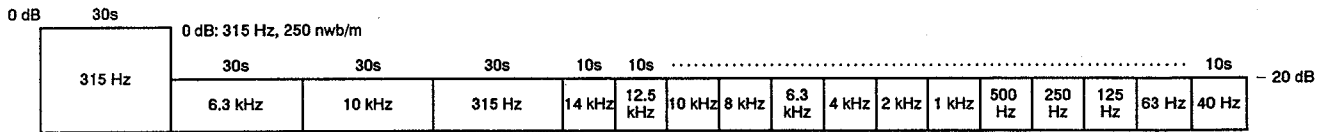


Fig. 3 Constants of the test tape STD-331E

DECK I and II

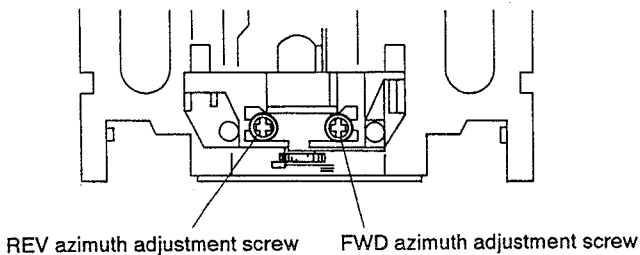


Fig. 4 Head azimuth adjustment

List of Adjustments

Playback sections

1. Head azimuth adjustment.
2. Playback level adjustment.


Recording sections

1. Bias oscillator adjustment.
2. Recording bias adjustment.
3. Recording level adjustment.
4. Level meter check.
5. AUTO BLE adjustment.

NOTE: This unit has an automatic tape selection feature.

Dolby noise reduction and HX Pro headroom extension manufactured under license from Dolby Laboratories Licensing Corporation. HX Pro originated by Bang & Olufsen. "DOLBY", the double-D symbol and "HX PRO" are trademarks of Dolby Laboratories Licensing Corporation.

PLAY BACK

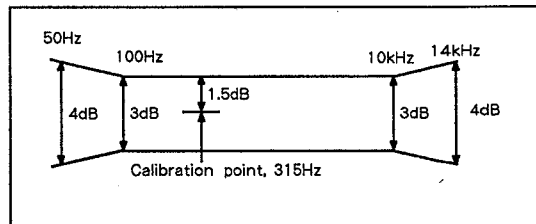

RECORDING

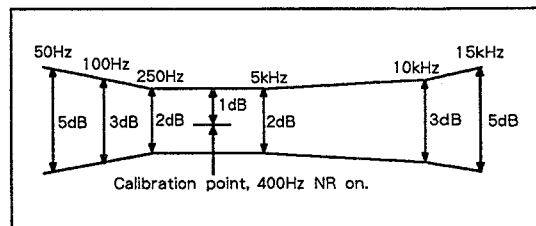


Fig. 5 Frequency response zone

PLAYBACK SECTION

1. Head Azimuth Adjustment

- Turn VR101, 102 (Deck I) or VR103, 104 (Deck II) to mechanical center positions.

No.	Mode	Input signal & test tape	Adjustment location	Measuring location	Adjustment value	Remarks
1.	PLAY	Play the 10 kHz/-20 dB section of STD-331E test tape.	Head azimuth adjustment screw. (See Fig. 4)	LINE OUT	Maximum playback signal level.	
2.	STOP	Lock the screw with screw lock after completing adjustment.				

2. Playback Level Adjustment

- This adjustment determines the DOLBY NR level, and must be performed with great care.

No.	Mode	Input signal & test tape	Adjustment location	Measuring location	Adjustment value	Remarks	
1.	PLAY	Play the 315 Hz/0 dB section of the STD-331E test tape.	Deck II	VR 103 (Lch) VR 104 (Rch)	TP. 1 (Lch) TP. 2 (Rch)	-7.2 dBV	
			Deck I	VR 101 (Lch) VR 102 (Rch)			

RECORDING SECTION

1. Bias Oscillator Adjustment

No.	Mode	Input signal & test tape	Adjustment location	Measuring location	Adjustment value	Remarks	
1.	REC	Load the STD-610 test tape with no input signal.	Deck I	L 452 (REC UNIT)	TP. 11 - 2	105 kHz \pm 0.3kHz	If the values on the left cannot be attained by adjusting, the value should be below 105 ± 0.3 kHz.
			Deck II	L 452 (MAIN UNIT)			

2. Recording Bias Adjustment

- After the adjustment, caution should be exercised so as not to become under bias by checking the distortion rate.

No.	Mode	Input signal & test tape	Adjustment location	Measuring location	Adjustment value	Remarks	
1.	REC	Record the 315 Hz and 6.3 kHz signals at -26 dBV input level and playback. (STD-631 or STD-632)	Deck I	VR653(Lch) VR654(Rch) (REC unit)	LINE OUT	Repeatedly record, playback and adjust so that the playback level of 6.3 kHz signal becomes 0 dB \pm 0.5 dB when compared with the 315 Hz signal.	
			Deck II	VR653(Lch) VR654(Rch) (MAIN unit)			

3. Recording Level Adjustment

No.	Mode	Input signal & test tape	Adjustment location	Measuring location	Adjustment value	Remarks	
1.	REC PAUSE	Apply a 315 Hz/0 dBV signal to the line input terminals, load the STD-631 or STD-632 test tape.	REC level control volume	TP. 1 (Lch) TP. 2 (Rch)	-11.2 dBV		
2.	REC/PLAY	Record the above signal onto the STD-631 or STD-632 test tape, and playback.	Deck I	VR301 (Lch) VR302 (Rch)	TP. 1 (Lch) TP. 2 (Rch)	Repeatedly record, playback and adjust so that the playback signal level becomes -11.2 dBV.	
			Deck II	VR323 (Lch) VR324 (Rch)			
3.	REC/PLAY	Record the above signal onto the STD-621 test tape, and playback.	Check	TP. 1 (Lch) TP. 2 (Rch)	-11.2 dBV \pm 1.5dB		
4.	REC/PLAY	Record the above signal onto the STD-610 test tape, and playback.	Check	TP. 1 (Lch) TP. 2 (Rch)	-11.2 dBV \pm 1.5dB		

4. Level Meter Check

No.	Mode	Input signal & test tape	Adjustment location	Measuring location	Adjustment value	Remarks
1.	REC PAUSE	Apply a 315 Hz/-6 dBV (500 mV) signal to the Line Input terminals.	REC level control volume	TP. 1 (Lch) TP. 2 (Rch)	Check that the level meters "0 dB" light up within -7.2 dBV ± 2 dB of the signal output level.	

5. AUTO BLE Adjustment (Deck II only)

- BLE adjustment should be performed after all other adjustments are completed.
- This adjustment should be performed in the test mode.
- Entering the test mode.

For details of how to enter the test mode, refer to the "Mechanical Adjustment" section (Page 1-5)

No.	Mode	Input signal & test tape	Adjustment location	Measuring location	Adjustment value	Remarks
1.		Set to test mode.	—	—	—	
2.		Press the BLE key on the front panel.	Level meter (R channel)	VR551	Adjust so that - 3 dB on the level meter turn on.	400 Hz adjustment
3.		Press the BLE key on the front panel.		VR553		10 kHz adjustment
4.		Press the BLE key on the front panel.		VR552		3 kHz adjustment

Reference: The output of LINE OUT after completing the adjustments for 400 Hz, 10 kHz, 3 kHz becomes - 23 dBV ± 1dB.

1.6 PARTS LIST FOR EXPLODED VIEWS AND PACKING

NOTES:

- Parts marked by "NSP" are generally unavailable because they are not in our Master Spare Parts List.
- The Δ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
- Parts marked by "⊙" are not always kept in stock. Their delivery time may be longer than usual or they may be unavailable.

1. EXTERIOR AND PACKING

■ CONTRAST OF CT-W54/KU/CA, CT-W803RS/HEM, HB and SD

CT-W54/KU/CA, CT-W803RS/HEM, HB and SD have the same construction except for the following:

Mark	No.	Symbol & Description	Part No.				Remarks
			CT-W54/ KU/CA	CT-W803RS/ HEM	CT-W803RS/ HB	CT-W803RS/ SD	
NSP	1	Main Unit	RWZ3167	RWZ3147	RWZ3147	RWZ3152	
	2	Sub Unit	RWZ3168	RWZ3148	RWZ3148	RWZ3153	
	4	Transformer 2 Unit	RWZ3170	RWZ3150	RWZ3150	RWZ3155	
	64	Transformer 1 Unit	Not Used	Not Used	Not Used	RWZ3154	
NSP	64	Transformer 1 PCB	RNZ2679	RNZ2655	RNZ2655	RNZ2683	
Δ	5	Strain Relief	CM - 22C	CM - 22B	CM - 22B	CM - 22B	
Δ	6	Fuse (1.5A) FU1001, FU1002	REK1059	Not Used	Not Used	Not Used	
Δ	6	Fuse (T1.6A) FU1001, FU1002	Not Used	REK1024	REK1024	REK1024	
Δ	7	AC Power Cord	PDG1015	PDG1003	PDG1055	PDG1013	
	8	Lead Card 31P	RDD1299	Not Used	Not Used	RDD1299	
	8	Lead Card 33P	Not Used	RDD1300	RDD1300	Not Used	
Δ	9	Power Transformer (AC120V)	RTT1223	Not Used	Not Used	Not Used	
Δ	9	Power Transformer (AC220 - 230/230 - 240V)	Not Used	RTT1218	RTT1218	Not Used	
Δ	9	Power Transformer (AC110/120 - 127/220/240V)	Not Used	Not Used	Not Used	RTT1272	
	31	FL Lens	RAH2371	RAH2372	RAH2372	RAH2371	For Packing
	32	Front Panel	RAH2354	RAH2355	RAH2355	RAH2356	
	36	Name Plate	RAN1008	RAM1007	RAM1007	RAM1007	
	38	Rear Panel	RNA1768	RNA1769	RNA1770	RNA1771	
	39	Connection Cord with Mini Plug	PDE - 319	Not Used	Not Used	PDE - 319	
	42	Operating Instructions (English/French)	RRE1089	Not Used	Not Used	Not Used	
	42	Operating Instructions (English/French/German/Italian/Dutch/Spanish/Portuguese/Swedish)	Not Used	RRE1090	Not Used	Not Used	
	42	Operating Instructions (English)	Not Used	Not Used	RRB1143	Not Used	
	42	Operating Instructions (English/Spanish/Chinese)	Not Used	Not Used	Not Used	RRE1091	
	43	Pad	RHA1142	RHA1115	RHA1115	RHA1115	
	44	Pad R	RHA1143	RHA1116	RHA1116	RHA1116	
	45	Packing Case	RHG1517	RHG1518	RHG1519	RHG1520	
	51	65 Label	ORW1069	Not Used	Not Used	Not Used	
NSP	55	Bonnet	REA1135	REA1077	REA1077	REA1077	
NSP	63	Fuse Caution Label	RRW - 111	Not Used	Not Used	Not Used	
	66	Side Spacer	PEB1247	Not Used	Not Used	Not Used	
	67	Screw	ABA1148	Not Used	Not Used	Not Used	
	74	Side Sheet	RED1037	Not Used	Not Used	Not Used	
	75	Panel Stabilizer L	PNW2281	Not Used	Not Used	Not Used	
	76	Panel Stabilizer R	PNW2306	Not Used	Not Used	Not Used	
Δ	77	Line Voltage Selector (AC110/120 - 127/220/240V)	Not Used	Not Used	Not Used	PSB1002	
Δ	78	Fuse (T5A)	Not Used	Not Used	PEK1003	Not Used	
	79	Pin Cap	Not Used	Not Used	VEC1616	Not Used	
	80	Spacer A	Not Used	Not Used	RHC1032	Not Used	
	81	Spacer B	Not Used	Not Used	RHC1033	Not Used	
	82	Remot Control unit	Not Used	RPX1074	RPX1074	Not Used	
	83	Battery Cover (For Remote Control unit)	Not Used	PZN1010	PZN1010	Not Used	
NSP	84	Dry Cell Battery (R03/AAA)	Not Used	VEM - 022	VEM - 022	Not Used	
	85	Caution Card	Not Used	Not Used	RRN1001	Not Used	
	86	Vinyl Bag	Not Used	RHL1001	RHL1001	Not Used	

CT-W54, CT-W803RS

■ PARTS LIST FOR CT-W54/KU/CA

Mark	No.	Description	Part No.	Mark	No.	Description	Part No.
	1	Main Unit	RWZ3167		51	65 Label	ORW1069
	2	Sub Unit	RWZ3168		52	Screw	BCZ26P050FMC
	3	Dolby S Unit	RWX1101		53	Slide Knob	REA1078
NSP	4	Transformer 2 Unit	RWZ3170		54	Screw	BSZ26P120FMC
△	5	Strain Relief	CM - 22C		55	Bonnet	REA1135
△	6	Fuse (1.5A) FU1001, FU1002	REK1059	NSP	56	FL Spacer	REB1171
△	7	AC Power Cord	PDG1015	NSP	57	Spacer	REB1267
	8	Lead Card 31P	RDD1299		58	
△	9	Power Transformer	RTT1223		59	
	10	1 Mechanism Unit	RYM1234	NSP	60	Eject Collar	RLA1283
	11	2 Mechanism Unit	RYM1234	NSP	61	Arm Collar	RLA1290
	12	Headphone Knob	VNK1262	NSP	62	Earth Lead Unit	XDF - 504
	13	Insulator	PNW1912	NSP	63	Fuse Caution Label	RRW - 111
	14	Eject Spring L	RBH1379	NSP	64	Transformer 1 PCB	RNZ2679
	15	Door Spring L	RBH1304		65	REC Unit	RWX1099
	16	Door Spring R	RBH1305		66	Side Spacer	PEB1247
	17	Half Pressure Spring	RBK1004	NSP	67	Screw	ABA1148
	18	Eject Spring R	RBH1380	NSP	68	PCB Spacer	PNY - 404
	19	Damper Assy	REC1005		69	Chassis	RNB1089
	20			70	Connector Assy 5P	RKP1676
	21	Eject Arm L	RNE1763		71	Connector Assy 5P	RKP1677
	22	Eject Arm R	RNE1764	NSP	72	Binder	Z09 - 057
	23	Eject Lever L	RNK2045		73	Eject Lever R	RNK2046
	24	Cord Clamper	RNH - 184		74	Side Sheet	RED1037
	25	Balance Knob	RAC1705		75	Panel Stabilizer L	PNW2281
	26	Eject Konb L	RAC1881		76	Panel Stabilizer R	PNW2306
	27	Eject Konb R	RAC1882				
	28	Power Knob	RAC1883				
	29	Control Knob	RAC1875				
	30	REC Knob A	RAC1777				
	31	FL Lens	RAH2371				
	32	Front Panel	RAH2354				
	33	Door Pocket L	RAH2367				
	34	Door Pocket R	RAH2369				
	35	Door Lens	RAH2435				
	36	Name Plate	RAN1008				
	37	Remain Display Paper	REE - 113				
	38	Rear Panel	RNA1768				
	39	Connection Cord with Mini Plug	PDE - 319				
	40	Connection Cord Assy	RDE1036				
	41	Control Cord	RDE1030				
	42	Operating Instructions (English/French)	RRE1089				
	43	Pad	RHA1142				
	44	Pad R	RHA1143				
	45	Packing Case	RHG1517				
	46	Sheet	RHX - 034				
	47	LED Lens	PNW2019				
	48	Screw	BBZ30P060FMC				
	49	Screw	BBZ30P080FZK				
	50	Screw	IPZ30P150FCU				

2. 1 AND 2 MECHANISM UNIT

Parts List

Mark No.	Description	Part No.	Mark No.	Description	Part No.
1	Plunger	RLA1288	51	Stop Ring	YE15FUC
2		52	Spring Interlock L	RBH1385
3	Push Switch	RSG1018	53	Arm Interlock L	RNE1780
4	SPLF	RSN1023	54	PCB Control	RXA1624
5	Photo - Transistor	SPI33534FG	55	Plate HD BLK	RXA1634
6	MTR Main BLK	RXM1075			
7	Solenoid BLK	RXP1021			
8	Spring Interlock R	RBH1386			
9	Arm Interlock R	RNE1781			
10	Chassis Base BLK	RXA1626			
11	Spring Brake	RBH1387			
12	Main Belt	REB1157			
13	F/R Belt	REB1254			
14	Lever Brake	RNK2071			
15	F/W Assy	RXA1428			
16	Pinch Roller BLK R	RXA1628			
17	Pinch Roller BLK L	RXA1629			
18	Clutch Assy	RXA1631			
19	Screw	RBA1113			
20	Washer 2.1 × 0.25T	RBFB1038			
21	Spring Reel (L)	RBH1388			
22	Spring Reel (R)	RBH1389			
23	Cam Spring	RBH1393			
24	Spacer	RLA1286			
25	Lever F/R	RNE1782			
26	Reel Feather	RNK2072			
27	Reel Base	RNK2073			
28	Play Gear (A)	RNK2074			
29	FF Gear (A)	RNK2075			
30	F/R Pulley	RNK2076			
31	Clutch Assy BLK	RXA1632			
32	Washer	WA17D040D025			
33	Washer	WA23F060M040			
34	Screw	PCZ20P040FMC			
35	Screw	RBA1077			
36	Spring HB	RBH1390			
37	Head Base	RNE1783			
38				
39	HD PCB 5P	RXA1635			
40	Screw	RBA1113			
41	Washer 2.0 × 0.3	RBE1009			
42	Spring Arm Play	RBH1392			
43	Spacer	RLA1286			
44	Plate Slide	RNE1785			
45	Cam Gear	RNK2078			
46	Arm Play	RNK2079			
47	Spring Cassette	RNE1786			
48	Screw	BMZ26P040FZK			
49	Washer	WA26D045D025			
50	Washer	WA26D047D050			

1.7 PCB PARTS LIST

NOTES:

- Parts marked by "NSP" are generally unavailable because they are not in our Master Spare Parts List.
- The Δ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
- Parts marked by "⊙" are not always kept in stock. Their delivery time may be longer than usual or they may be unavailable.
- When ordering resistors, first convert resistance values into code form as shown in the following examples.

Ex.1 When there are 2 effective digits (any digit apart from 0), such as 560 ohm and 47k ohm (tolerance is shown by J=5%, and K=10%).

560 Ω \rightarrow $56 \times 10^1 \rightarrow$ 561 RD1/8PM $\boxed{5}\boxed{6}\boxed{1}\boxed{J}$
 47k Ω \rightarrow $47 \times 10^3 \rightarrow$ 473 RD1/4PS $\boxed{4}\boxed{7}\boxed{3}\boxed{J}$
 0.5 Ω \rightarrow 0R5 RN2H $\boxed{0}\boxed{R}\boxed{5}\boxed{K}$
 1 Ω \rightarrow 010 RS1P $\boxed{0}\boxed{1}\boxed{0}\boxed{K}$

Ex.2 When there are 3 effective digits (such as in high precision metal film resistors).

5.62k Ω \rightarrow $562 \times 10^1 \rightarrow$ 5621 RN1/4PC $\boxed{5}\boxed{6}\boxed{2}\boxed{1}\boxed{F}$

LIST OF WHOLE PCB ASSEMBLIES

Mark	PCB Assemblies	Part No.				Remarks
		CT-W54/ KU/CA	CT-W803RS/ HEM	CT-W803RS/ HB	CT-W803RS/ SD	
NSP	Mother Unit	RWM1683	RWM1679	RWM1679	RWM1680	
	├ Main Unit	RWZ3167	RWZ3147	RWZ3147	RWZ3152	
	├├ Dolby S Unit	RWX1101	RWX1101	RWX1101	RWX1101	
	├ Sub Unit	RWZ3168	RWZ3148	RWZ3148	RWZ3153	
NSP	├ Transformer 2 Unit	RWZ3170	RWZ3150	RWZ3150	RWZ3155	
NSP	├ Transformer 1 Unit	Not Used	Not Used	Not Used	RWZ3154	
	REC Unit	RWX1099	RWX1099	RWX1099	RWX1099	

MAIN UNIT

RWZ3167, RWZ3147 and RWZ3152 have the same construction except for the following:

Mark	Symbol & Description	Part No.			Remarks
		RWZ3167	RWZ3147	RWZ3152	
	D1403 - D1405	1SS254	Not used	1SS254	
	C1011	RCH1116	RCH1120	RCH1120	
	C1402	CKCYF103Z50	Not used	CKCYF103Z50	
	CN1503	52045 - 3145	52045 - 3345	52045 - 3145	
	JA1401, JA1402	RKN1004	Not Used	RKN1004	

SUB UNIT

RWZ3168, RWZ3148 and RWZ3153 have the same construction except for the following:

Mark	Symbol & Description	Part No.			Remarks
		RWZ3168	RWZ3148	RWZ3153	
	CN1501	9604S - 31F	9604S - 33F	9604S - 31F	
	REMOTE SENSOR	Not Used	SBX1785 - 51	Not Used	

TRANSFORMER 2 UNIT

Althouh RWZ3170, RWZ3150 and RWZ3155 different in part number, they consist of the same componets.

TRANSFORMER 1 UNIT

Transformer 1 unit has no service part.

■ PARTS LIST FOR CT-W54/KU/CA

Mark No.	Description	Part No.	Mark No.	Description	Part No.
REC UNIT					
SEMICONDUCTORS					
	IC351	CXA1198AP		C1029, C1030, C1035, C1036	CEJA470M16
	IC352	MC14051BCP		C1033, C1034	CEJAR10M50
	IC651	UPC1297CA		C1001, C1002, C1031, C1032	CEJAR22M50
	Q460	2SB1238X		C1045, C1046, C1091, C1092	CEJAR22M50
	Q456, Q457	2SC1815		C1027, C1028, C1041, C1042	CEJAR47M50
	Q351, Q352, Q454, Q455, Q459	2SC3311A		C1075, C1076	CEJAR47M50
	Q353, Q354, Q458	2SD2144S		C1019, C1020	CFTYA224J50
	Q652	XDA114ES		C1037, C1038	CFTYA334J50
	Q653	XDC124ES		C1013, C1014, C1055, C1056	CKSQYB102K50
	D452	1SS252		C1007, C1008, C1025, C1026	CKSQYB104K25
COILS AND FILTERS				C1043, C1044, C1067, C1068	CKSQYB104K25
	L451	LFA121K		C1077, C1078, C1081, C1082	CKSQYB104K25
	L651, L652	RTD1046		C1087, C1088	CKSQYB104K25
	L452	RTD1048		C1023, C1024, C1049, C1050	CKSQYB153K50
	L351, L352	RTF1102		C1065, C1066, C1069 -C1072	CKSQYB182K50
CAPACITORS				C1083, C1084	CKSQYB182K50
	C659, C660	CCCSL101K500		C1079, C1080	CKSQYB183K50
	C459, C667	CEAS100M50		C1059, C1060	CKSQYB222K50
	C351, C352	CEAS221M10		C1009, C1010, C1073, C1074	CKSQYB223K50
	C451, C458	CEAS330M16		C1093, C1094	CKSQYB333K50
	C361	CEAS470M16		C1005, C1006, C1061, C1062	CKSQYB393K50
	C353-C356	CEAS4R7M50		C1063, C1064	CKSQYB471K50
	C664	CEASR10M50		C1047, C1048	CKSQYB473K50
	C454	CFTYA223J50		C1011, C1012	CKSQYB681K50
	C358	CGCYF104Z25		C1017, C1018, C1053, C1054	CKSQYB822K50
	C357, C657, C658	CGCYF473Z50		C1021, C1022, C1039, C1040	CKSQYB823K25
	C651, C652	CGCYX103K25			
	C655, C656	CGCYX223K25			
	C455-C457	CGCYX332K25			
	C663	CKPUYB101K50			
	C359, C360	CKPUYB221K50			
	C653, C654	CKPUYB821K50			
	C453	CQPA682J100			
	C661, C662 (430/500)	RCG1005			
RESISTORS			RESISTORS		
	R452	RD1/2LMF010J		All Resistors	RS1/10S□□□J
	R461	RD1/2LMF680J			
	VR653, VR654 (22K)	RCP1084			
	Other Resistors	RD1/6PM□□□J			
OTHERS			OTHERS		
	CN452 KR CONNECTOR	B2B-PH-K			
	CN352 CONNECTOR 12P	S12B-XH			
	CN403 CONNECTOR 7P	S7B-XH-A-1			
DOLBY S UNIT			MAIN UNIT		
SEMICONDUCTORS			SEMICONDUCTORS		
	IC1001, IC1002	CXA1417Q		IC101	CXA1115BP
CAPACITORS				IC351	CXA1198AP
	C1003, C1004, C1015, C1016	CEJA010M50		IC201	CXA1563S
	C1051, C1052	CEJA010M50		IC502	LC7570
	C1089, C1090	CEJA100M25		IC1701	MC14050BCP
	C1085, C1086	CEJA220M25		IC352	MC14051BCP
				IC1003, IC1004	NJM7812FA
				IC1002	NJM78M06FA
				IC1008	NJM79L06A
				IC231	PA0059AM
				IC501	PD4507A
				IC651	UPC1297CA
				IC903	XRA10393
				IC2001, IC554, IC701	XRA15218
				IC1601	XRA15218N
				Q1005, Q235, Q801, Q851	2SA1309A
				Q460, Q805, Q855	2SB1238X
				Q803, Q853	2SB1425
				Q456, Q457	2SC1815
				Q1006, Q1007, Q454, Q455, Q459	2SC3311A

CT-W54, CT-W803RS

Mark No.	Description	Part No.	Mark No.	Description	Part No.
Q807, Q857		2SC3311A	C1001		CEAS221M50
Q353, Q354, Q458, Q701, Q702		2SD2144S	C1004, C451, C458, C521		CEAS330M35
Q741, Q742		2SD2144S	C1013, C1015, C1605		CEAS331M16
Q553		2SK246	C1024, C1025, C141, C142, C2003		CEAS470M16
Q151, Q152, Q161, Q162		2SK373			
Q1116, Q1401, Q333, Q762		DTA114TS	C239, C361, C508, C705		CEAS470M16
Q109, Q1101-Q1112, Q1151-Q1162		DTC114TS	C117, C118, C213, C235-C238		CEAS4R7M50
Q1166, Q123, Q1402, Q153, Q154		DTC114TS	C241, C247, C248, C353-C356		CEAS4R7M50
Q157, Q158, Q163, Q164, Q167		DTC114TS	C664		CEASR10M50
Q234, Q253-Q256, Q331		DTC114TS	C1601, C1602		CEASR22M50
Q551, Q552		DTC114TS	C915		CEASR47M50
Q125, Q126, Q351, Q352		DTC115TS	C255, C256		CFTXA392J50
Q1010, Q155, Q165, Q507, Q508		XDA114ES	C257, C258		CFTXA472J50
Q511, Q512, Q652		XDA114ES	C113, C114		CFTXA822J50
Q101, Q102, Q231, Q233		XDC124ES	C233, C234, C651, C652		CFTYA103J50
Q251, Q252, Q653, Q802, Q804		XDC124ES	C205, C206		CFTYA104J50
Q806, Q852, Q854, Q856		XDC124ES	C301, C302, C321, C322		CFTYA184J50
Q901, Q902		XDC124ES	C454, C655, C656		CFTYA223J50
D801, D851		11ES2	C207, C208		CFTYA683J50
△ D1001, D1006		1SR35-100AVL	C1009		CGCYF104Z25
D452		1SS252	C455-C457		CGCYX332K25
△ D1009-D1011, D1101, D1102		1SS254	C1400, C1402		CKCYF103Z50
△ D1151, D1152, D1400-D1406		1SS254	C1008, C1020, C1021, C1030, C1401		CKCYF473Z50
△ D151-D156, D161-D166		1SS254	C2020, C706		CKCYF473Z50
△ D231-D233, D235, D501, D503		1SS254	C105, C106, C801, C851		CKSQYB102K50
△ D507, D508, D510-D512		1SS254	C554		CKSQYB103K50
△ D520, D521, D742, D913		1SS254	C503		CKSQYB104K25
D502		MTZ9. 1B	C504		CKSQYB123K50
△ D1020		MTZJ3. 3B	C121, C122, C360		CKSQYB221K50
D765		MTZJ3. 9B	C249, C250		CKSQYB222K50
D1021		MTZJ5. 1B	C505, C552		CKSQYB223K50
△ D1012		SZVB20	C123, C124, C362, C363		CKSQYB391K50
COILS AND FILTERS			C103, C104		CKSQYB471K50
L451		LFA121K	C553		CKSQYB472K50
L651, L652		RTD1046	C101, C102		CKSQYB561K50
L452		RTD1048	C133, C134, C2001		CKSQYB681K50
L101, L102		RTF1099	C653, C654		CKSQYB821K50
L351, L352		RTF1102	C551		CKSQYB823K25
F251, F252		RTF1203	C501, C502, C506, C507		CKSQYF103Z50
CAPACITORS			C358		CKSQYF104Z50
C659, C660		CCCSL101K500	C1022, C119, C126, C139, C153		CKSQYF473Z50
C151, C152, C161, C162		CCSQCH100D50	C1701, C251, C357, C657, C658		CKSQYF473Z50
C359		CCSQCH221J50	C769, C919		CKSQYF473Z50
C135-C138, C2002, C2007, C663		CCSQSL101J50	C453		CQPA682J100
C701, C702, C711, C712		CCSQSL101J50	C1007 (4700/16)		PCH1116
C723, C724		CCSQSL101J50	C1010 (1000/10)		PCH1117
C111, C112		CEANL101M10	C661, C662 (430/500)		RCG1005
C2004, C201, C2011, C2012, C202		CEAS010M50	C1011 (4700/25)		RCH1116
C263, C555, C703, C704		CEAS010M50	RESISTORS		
C1016, C2005, C2006, C203, C204		CEAS100M50	R502		RA4T223J
C209-C212, C215-C218, C459		CEAS100M50	R501		RA4T683J
C667, C707, C708		CEAS100M50	R503		RA6T223J
C1603, C1604, C200, C231, C240		CEAS101M16	R504		RA6T683J
C244, C245		CEAS101M16	R1702 (11K/22K)		RCX1020
C1018		CEAS220M50	R452		RD1/2LMP010J
C351, C352		CEAS221M10	R468		RD1/2LMP150J
			R461		RD1/2LMP680J
			R118, R469		RD1/6PM102J
			R551, R557-R559		RD1/6PM103J

Mark	No.	Description	Part No.
	R135, R2002, R552		RD1/6PM104J
	R236, R243		RD1/6PM122J
	R1024, R1025		RD1/6PM123J
	R803		RD1/6PM124J
	R809, R810, R859, R860		RD1/6PM152J
	R2017, R2018		RD1/6PM153J
	R2009, R2011		RD1/6PM181J
	R563, R564		RD1/6PM202J
	R136, R395, R460, R465, R717		RD1/6PM222J
	R806, R856		RD1/6PM222J
	R464, R471, R473, R926		RD1/6PM223J
	R1116		RD1/6PM224J
	R454, R455, R472, R474		RD1/6PM273J
	R477		RD1/6PM302J
	R1007		RD1/6PM362J
	R1605, R1606		RD1/6PM470J
	R156, R166, R718		RD1/6PM473J
	R2012		RD1/6PM682J
	R565		RD1/6PM683J
	R1602		RD1/6PM823J
△	R1020		RFA1/4L470J
	R1002		RS2LMF271J
	R1609		RS2LMF750J
	R1023		RS3LMF150J
	VR851 (2.2K)		RCP1019
	VR802, VR852 (1.0K)		RCP1044
	VR551-VR553, VR653, VR654 (22K)		RCP1046
	VR101-VR104, VR301, VR302 (47K)		RCP1047
	VR323, VR324 (47K)		RCP1047
	VR2002 (5KA)		RCV1089
	VR2003 (10KA)		RCV1090
	Other Resistors		RS1/10S□□□J

OTHERS

CN1101 CONNECTOR 12P	12JQ-BT
CN1503 CONNECTOR 30P	52045-3145
CN1102 CONNECTOR 7P	7JQ-BT
CN452 CONNECTOR POST	B2B-PH-K
CN101, CN102 CONNECTOR POST	B3B-PH-K
JA1403 MINI JACK	PKN1005
JA701 PIN JACK 4P	RKB-020
JA2003 HEADPHONE JACK	RKN1002
JA2001 MIC JACK	RKN1003
JA1401, JA1402 REMOTE CONTROL JACK	RKN1004
MIC SHILED PLATE	RNE1588
PCB BINDER	VEF1040
EATRH PLATE	VNF-091
X501 CERAMIC RESONATOR (4.19MHz)	VSS1014

SUB UNIT

SEMICONDUCTORS

Q1501	DTA114TS
D1501-D1514	ISS254
D527	SEL6210S

SWITCHES AND RELAYS

S1501-S1528	RSG1034
S1529, S1530	RSH1041
S1531	RSH1042

Mark	No.	Description	Part No.
RESISTORS			
		All Resistors	RD1/6PM□□□J
OTHERS			
		CN1501 CONNECTOR	9604S-31F
		V1501 FL INDICATOR TUBE	RAW1132
TRANSFORMER 2 UNIT			
OTHERS			
		HOLDER	RKR1002

Service Manual

ORDER NO.
RRZ1143

The chapter 1 of this Service Manual will not be reprinted. On your additional orders, we may supply only the chapter 2. For the chapter 1, please make copies and attach to the chapter 2 at your side if necessary.

STEREO DOUBLE CASSETTE DECK

CT-W54 CT-W803R


CHAPTER 2

CONTENTS

CHAPTER 2

2.1 EXPLODED VIEWS AND PACKING	2-3
2.2 BLOCK DIAGRAM	2-7
2.3 SCHEMATIC DIAGRAMS.....	2-8
2.4 PCB CONNECTION DIAGRAM.....	2-13

2.2 BLOCK DIAGRAM

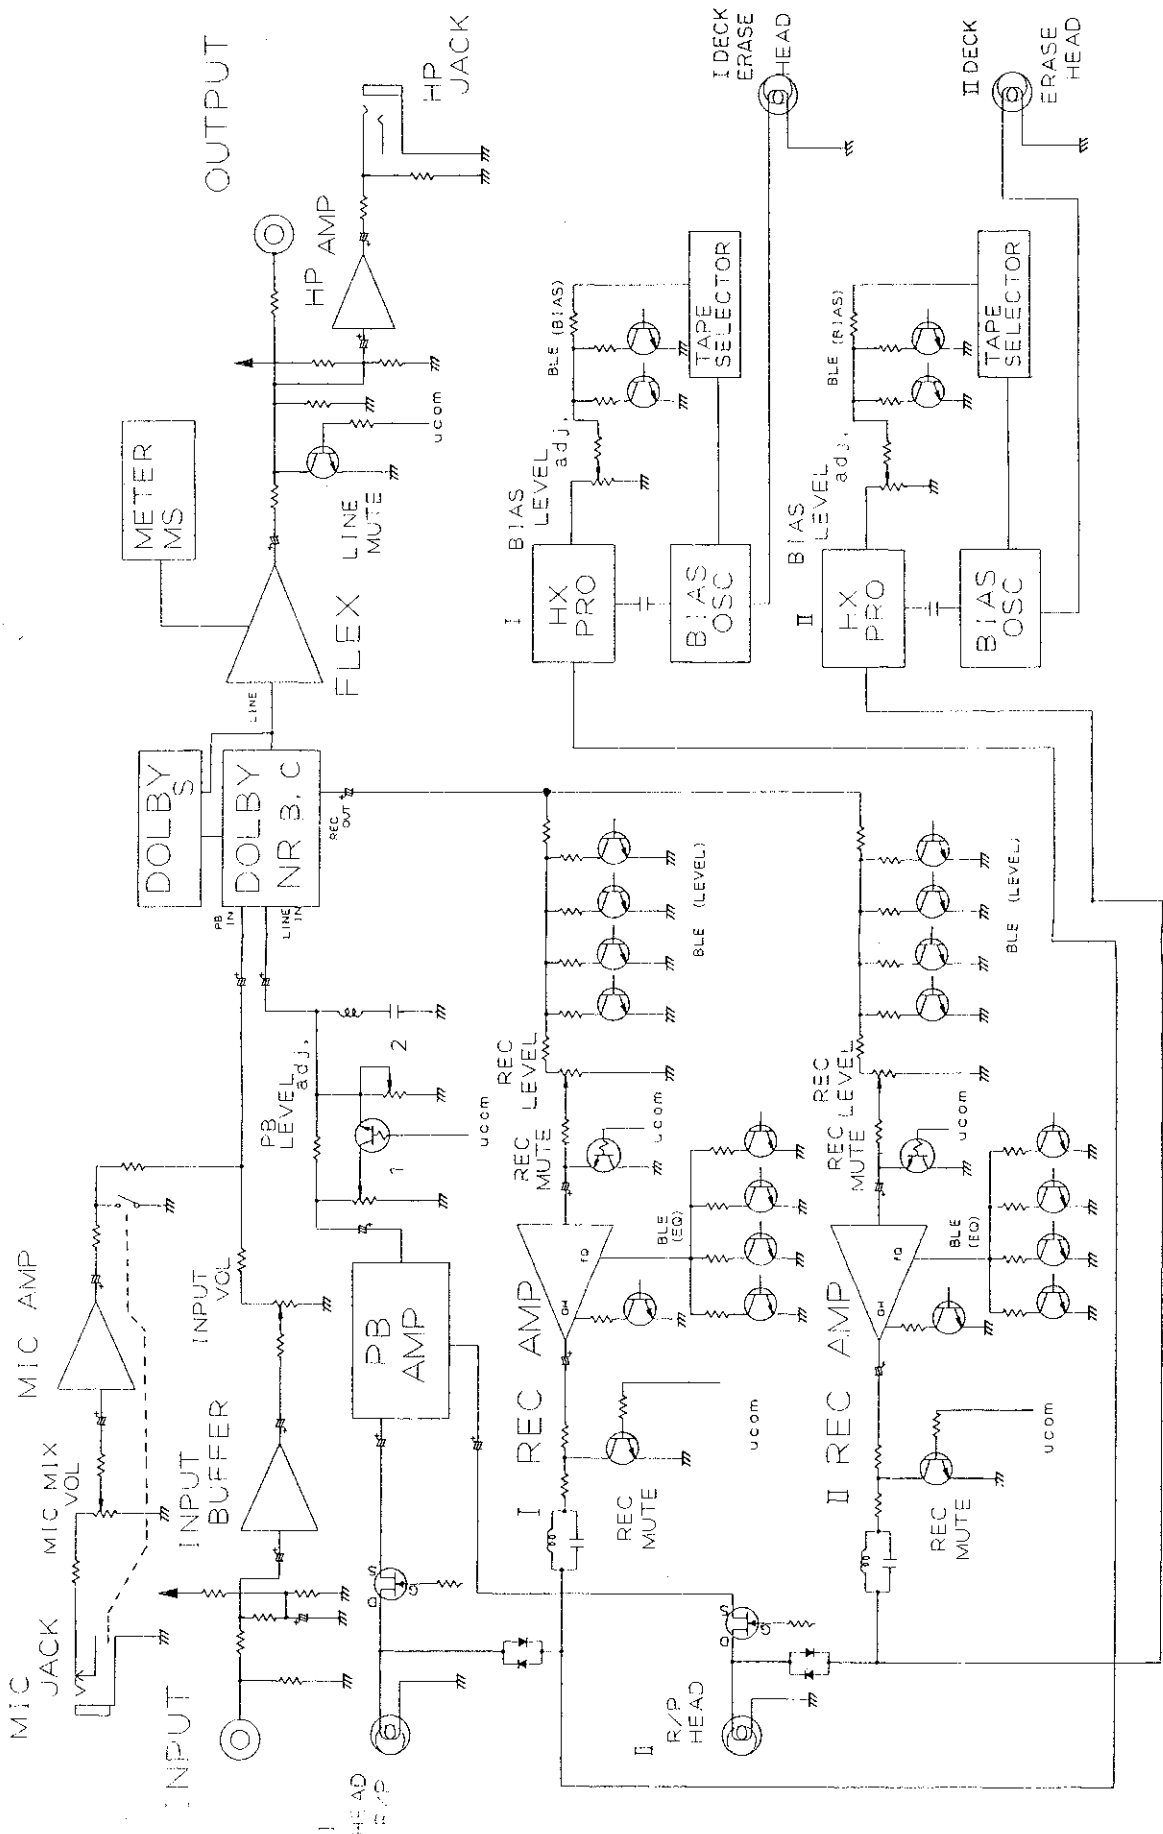

2.3 SCHEMATIC DIAGRAMS


1. DOLBY S UNIT

A

B

C

D

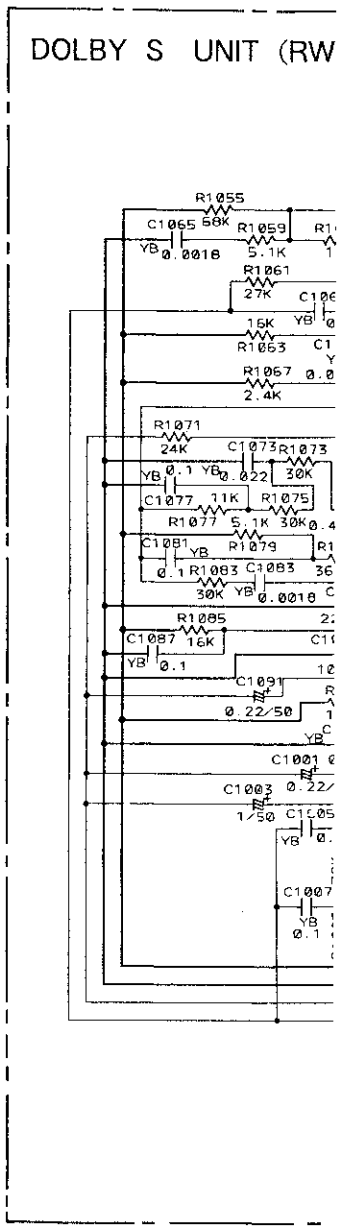

SCH-1 DOLBY S UNIT

NOTE FOR SCHEMATIC DIAGRAMS


(Type 6A)

- When ordering service parts, be sure to refer to "PARTS LIST of EXPLODED VIEWS" or "PCB PARTS LIST".
- Since these are basic circuits, some parts of them or the values of some components may be changed for improvement.
- RESISTORS:
Unit: k: kΩ, M: MΩ, or Ω unless otherwise noted.
Rated power: 1/4W, 1/6W, 1/8W, 1/10W unless otherwise noted.
Tolerance: (F): ±1%, (G): ±2%, (K): ±10%, (M): ±20% or ±5% unless otherwise noted.
- CAPACITORS:
Unit: p: pF or μF unless otherwise noted.
Ratings: capacitor (μF)/ voltage (V) unless otherwise noted.
Rated voltage: 50V except for electrolytic capacitors.
- COILS:
Unit: m: mH or μH unless otherwise noted.
- VOLTAGE AND CURRENT:
□ or - V :
DC voltage (V) in STOP mode unless otherwise noted.
↗ mA or - mA :
DC current in STOP mode unless otherwise noted.
- OTHERS:
• ⊙ or • : Adjusting point.
• ◁ : Measurement point.
• The Δ mark found on some component parts indicates the importance of the safety factor of the parts. Therefore, when replacing, be sure to use parts of identical designation.
- SCH-□ ON THE SCHEMATIC DIAGRAM:
• SCH-□ indicates the drawing number of the schematic diagram. (SCH stands for schematic diagram.)

- SWITCHES (Un...
SUB UNIT
S1501 : FAST F...
S1502 : FAST R...
S1503 : REVERS...
S1504 : FORWAR...
S1505 : RECORD...
S1506 : STOP ■...
S1507 : RECORD...
S1508 : PAUSE ■...
S1509 : FAST F...
S1510 : FAST R...
S1511 : REVERS...
S1512 : FORWAR...
S1513 : RECORD...
S1514 : STOP ■...
S1515 : RECORD...
S1516 : PAUSE ■...
S1517 : PARALL...
S1518 : SYNCHR...
S1519 : SYNCHR...
S1520 : FLEX ■...
S1521 : DECK I...
S1522 : DECK I...
S1523 : DECK I...
S1524 : DECK I...
S1525 : CD - DE...
S1526 : DECK I...
S1527 : DECK I...
S1528 : POWER...
S1529 : DOLBY...
S1530 : REVERS...
S1531 : DOLBY

2.3 SCHEMATIC DIAGRAMS

1. DOLBY S UNIT

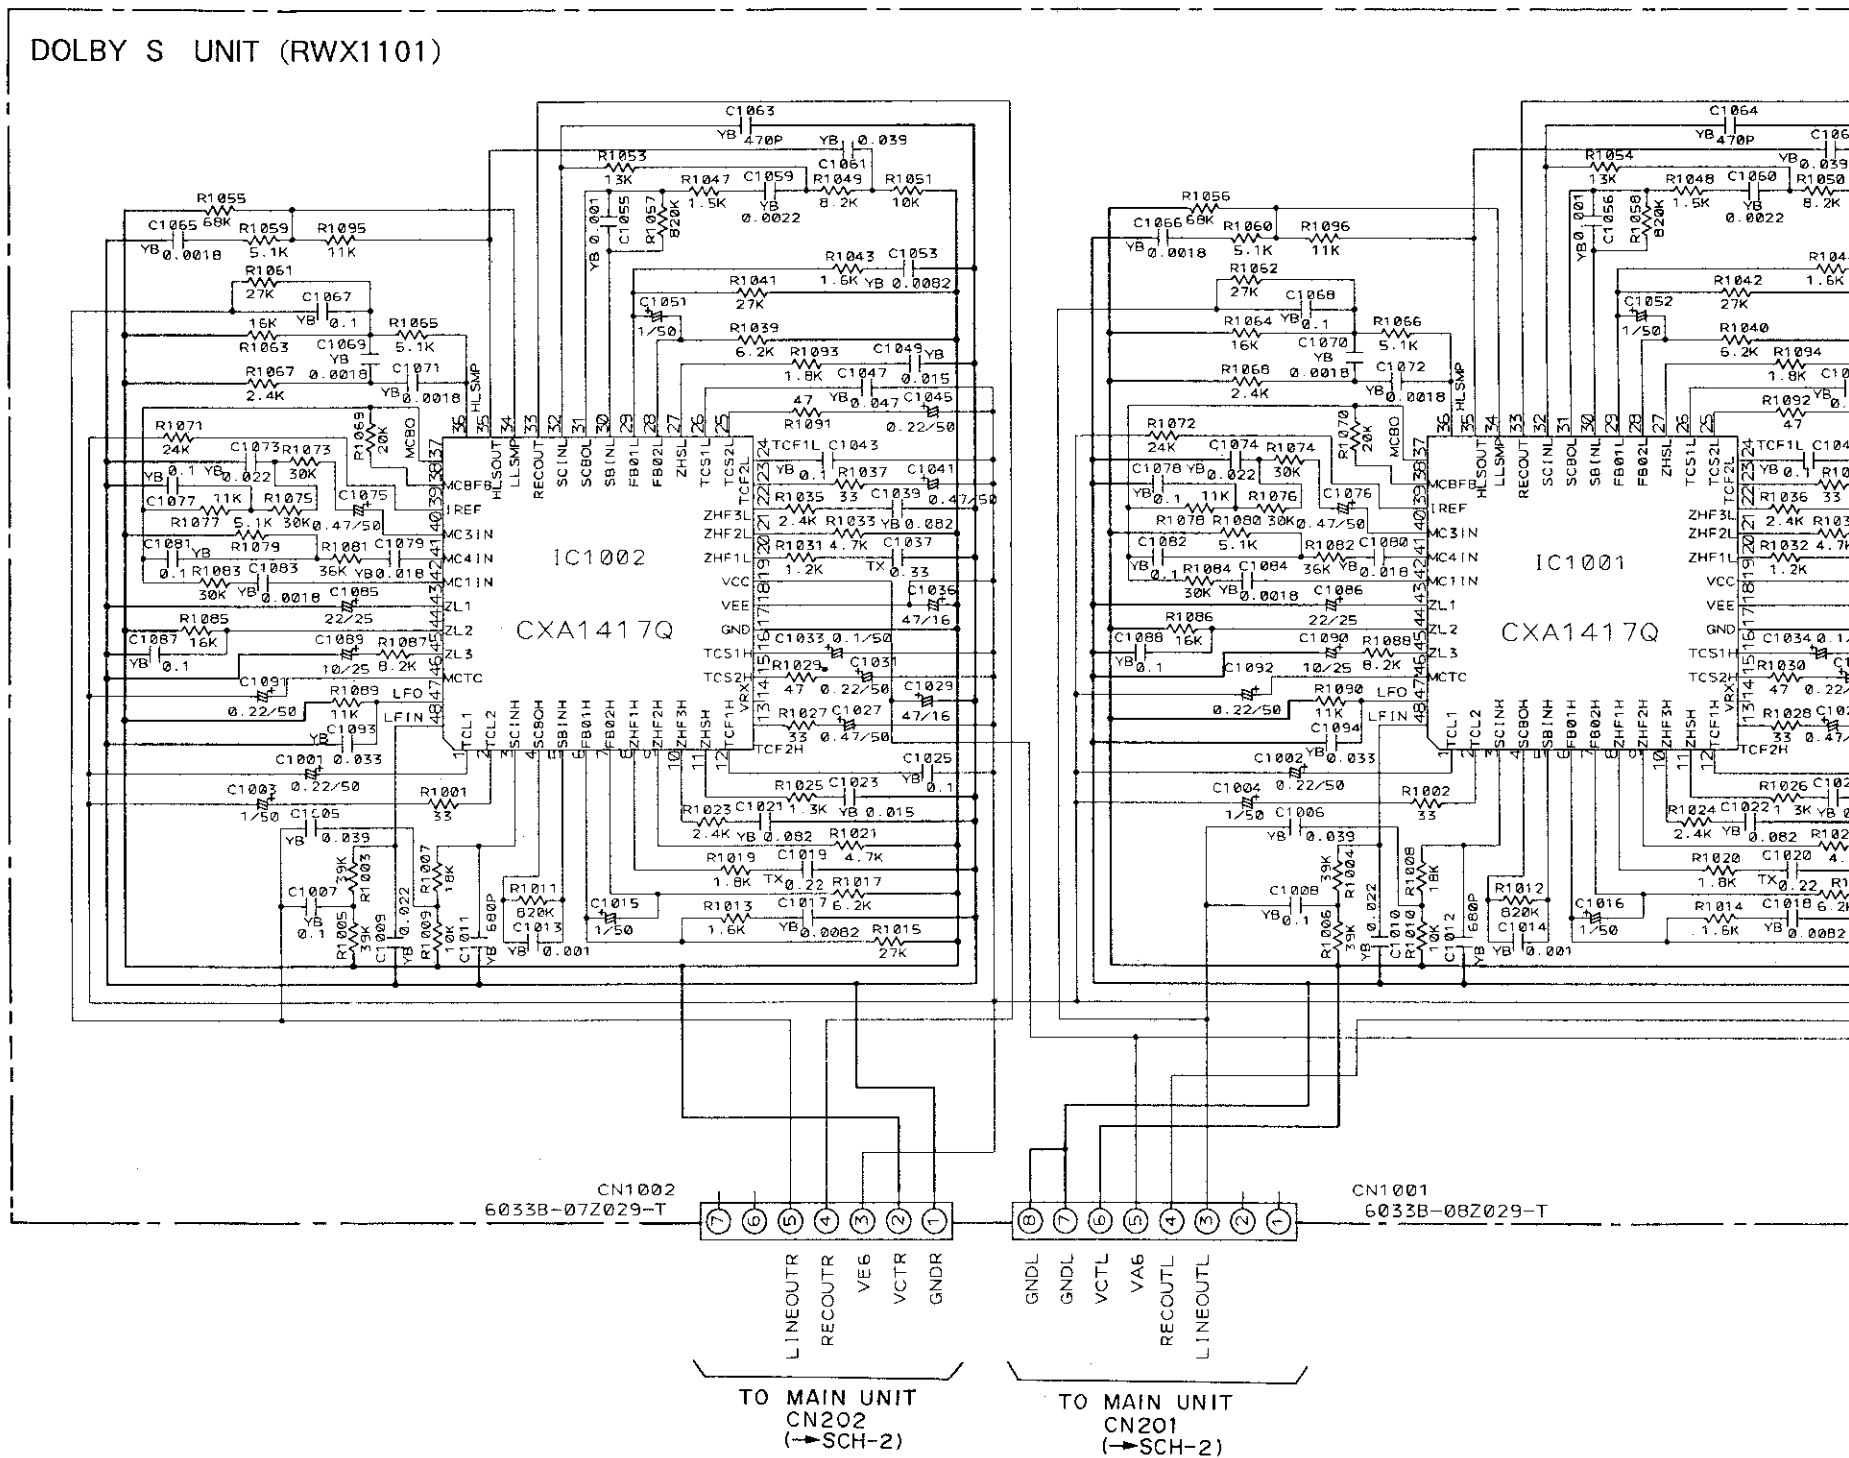

SCH-1

DOLBY S UNIT

NOTE FOR SCHEMATIC DIAGRAMS


(Type 6A)

1. When ordering service parts, be sure to refer to "PARTS LIST of EXPLODED VIEWS" or "PCB PARTS LIST".
2. Since these are basic circuits, some parts of them or the values of some components may be changed for improvement.
3. RESISTORS:
Unit: k: kΩ, M: MΩ, or Ω unless otherwise noted.
Rated power: 1/4W, 1/6W, 1/8W, 1/10W unless otherwise noted.
Tolerance: (F): ±1%, (G): ±2%, (K): ±10%, (M): ±20% or ±5% unless otherwise noted.
4. CAPACITORS:
Unit: p: pF or μF unless otherwise noted.
Ratings: capacitor (μF)/ voltage (V) unless otherwise noted.
Rated voltage: 50V except for electrolytic capacitors.
5. COILS:
Unit: m: mH or μH unless otherwise noted.
6. VOLTAGE AND CURRENT:
□ or - V :
DC voltage (V) in STOP mode unless otherwise noted.
◊ mA or - mA :
DC current in STOP mode unless otherwise noted.
7. OTHERS:
• ⊙ or ⊙ : Adjusting point.
• ◁ : Measurement point.
• The Δ mark found on some component parts indicates the importance of the safety factor of the parts. Therefore, when replacing, be sure to use parts of identical designation.
8. SCH-□ ON THE SCHEMATIC DIAGRAM:
• SCH-□ indicates the drawing number of the schematic diagram. (SCH stands for schematic diagram.)

9. SWITCHES (Un...
SUB UNIT
S1501 : FAST F...
S1502 : FAST R...
S1503 : REVERS...
S1504 : FORWAR...
S1505 : RECOR...
S1506 : STOP ■
S1507 : RECOR...
S1508 : PAUSE ■
S1509 : FAST F...
S1510 : FAST R...
S1511 : REVERS...
S1512 : FORWAR...
S1513 : RECOR...
S1514 : STOP ■
S1515 : RECOR...
S1516 : PAUSE ■
S1517 : PARALL...
S1518 : SYNCHR...
S1519 : SYNCHR...
S1520 : FLEX ■
S1521 : DECK II...
S1522 : DECK I...
S1523 : DECK I...
S1524 : DECK II...
S1525 : CD · DE...
S1526 : DECK I...
S1527 : DECK II...
S1528 : POWER...
S1529 : DOLBY...
S1530 : REVERS...
S1531 : DOLBY

2.3 SCHEMATIC DIAGRAMS

1. DOLBY S UNIT

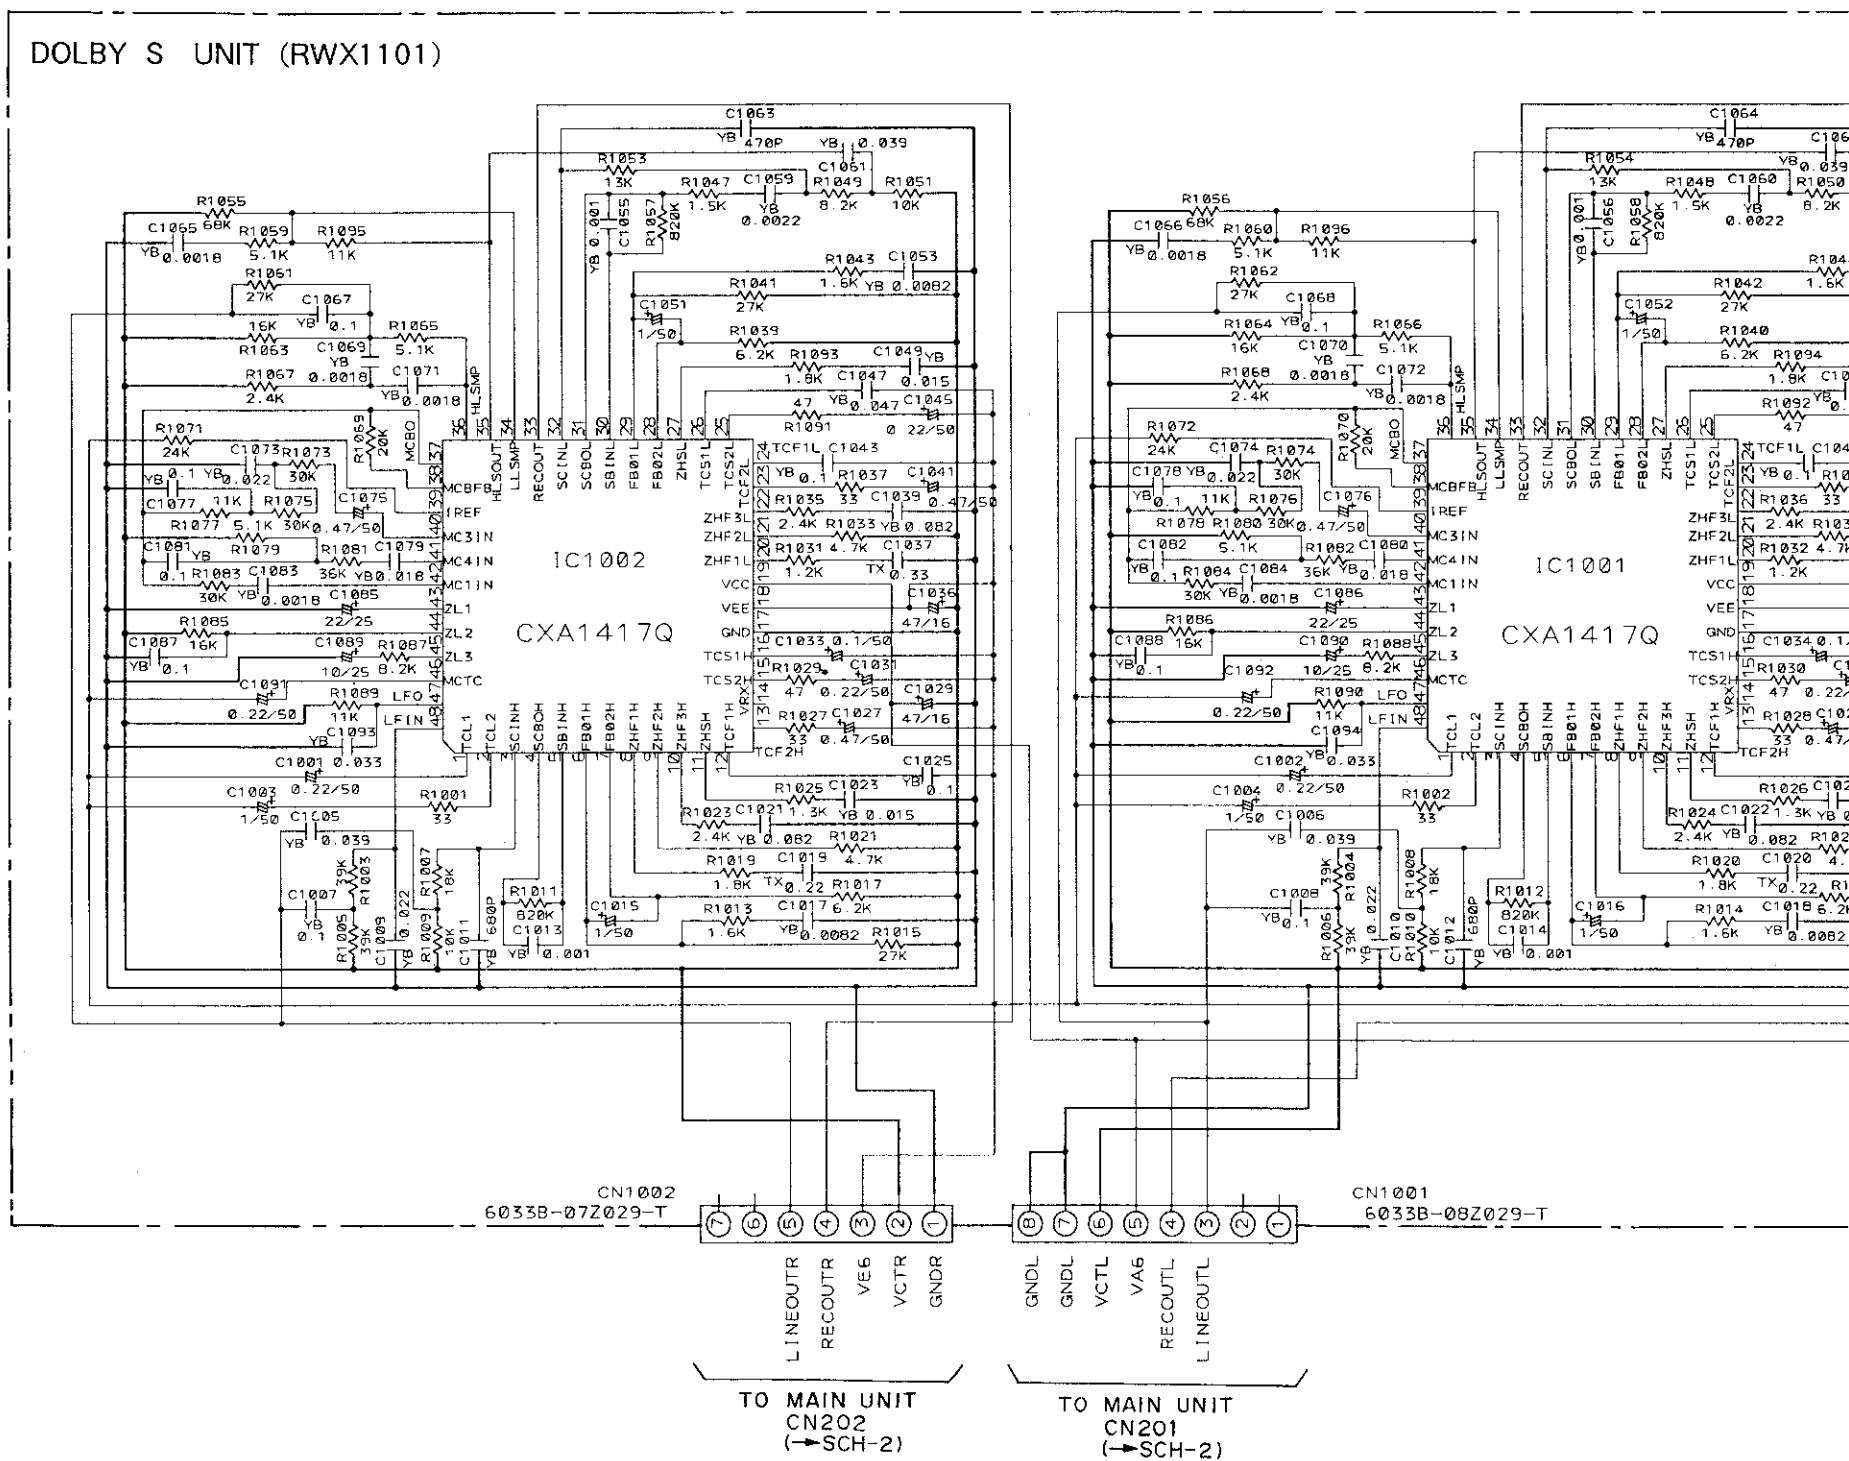

SCH-1

DOLBY S UNIT

NOTE FOR SCHEMATIC DIAGRAMS

(Type 6A)

- When ordering service parts, be sure to refer to "PARTS LIST of EXPLODED VIEWS" or "PCB PARTS LIST".
- Since these are basic circuits, some parts of them or the values of some components may be changed for improvement.
- RESISTORS:**
Unit: k: kΩ, M: MΩ, or Ω unless otherwise noted.
Rated power: 1/4W, 1/8W, 1/8W, 1/10W unless otherwise noted.
Tolerance: (F): ±1%, (G): ±2%, (K): ±10%, (M): ±20% or ±5% unless otherwise noted.
- CAPACITORS:**
Unit: p: pF or μF unless otherwise noted.
Ratings: capacitor (μF)/voltage (V) unless otherwise noted.
Rated voltage: 50V except for electrolytic capacitors.
- COILS:**
Unit: m: mH or μH unless otherwise noted.
- VOLTAGE AND CURRENT:**
□ or - V :
DC voltage (V) in STOP mode unless otherwise noted.
⊕ mA or - mA :
DC current in STOP mode unless otherwise noted.
- OTHERS:**
 - ⊙ or ○ : Adjusting point.
 - △ : Measurement point.
 - The △ mark found on some component parts indicates the importance of the safety factor of the parts. Therefore, when replacing, be sure to use parts of identical designation.
- SCH-□ ON THE SCHEMATIC DIAGRAM:**
 - SCH-□ indicates the drawing number of the schematic diagram. (SCH stands for schematic diagram.)

- SWITCHES (Underline indicates switch position):**
SUB UNIT
S1501 : FAST FORWARD/MUSIC SEARCH ►►/MS
S1502 : FAST REVERSE/MUSIC SEARCH ◄◄/MS
S1503 : REVERSE PLAYBACK ◄
S1504 : FORWARD PLAYBACK ►
S1505 : RECORDING MUTE ○
S1506 : STOP ■
S1507 : RECORDING ●
S1508 : PAUSE ||
S1509 : FAST FORWARD/MUSIC SEARCH ►►/MS
S1510 : FAST REVERSE/MUSIC SEARCH ◄◄/MS
S1511 : REVERSE PLAYBACK ◄
S1512 : FORWARD PLAYBACK ►
S1513 : RECORDING MUTE ○
S1514 : STOP ■
S1515 : RECORDING ●
S1516 : PAUSE ||
S1517 : PARALLEL RECORDING (PARALLEL REC)
S1518 : SYNCHRO COPY (COPY II) NORMAL
S1519 : SYNCHRO COPY (COPY II) HIGH
S1520 : FLEX
S1521 : DECK II COUNTER MODE (TIME/COUNT)
S1522 : DECK I COUNTER RESET (RESET)
S1523 : DECK I COUNTER MODE (TIME/COUNT)
S1524 : DECK II COUNTER RESET (RESET)
S1525 : CD · DECK SYNCHRO (CD SYNC)
S1526 : DECK I AUTO BLE
S1527 : DECK II AUTO BLE
S1528 : POWER STANDBY/ON
S1529 : DOLBY NR (B/C/S)
S1530 : REVERSE MODE (REV MODE) ↔↔
S1531 : DOLBY NR ON/OFF

DECK I
DECK II

3


4

5

CT-W54, CT-W803RS

SCH-1

WX1101)

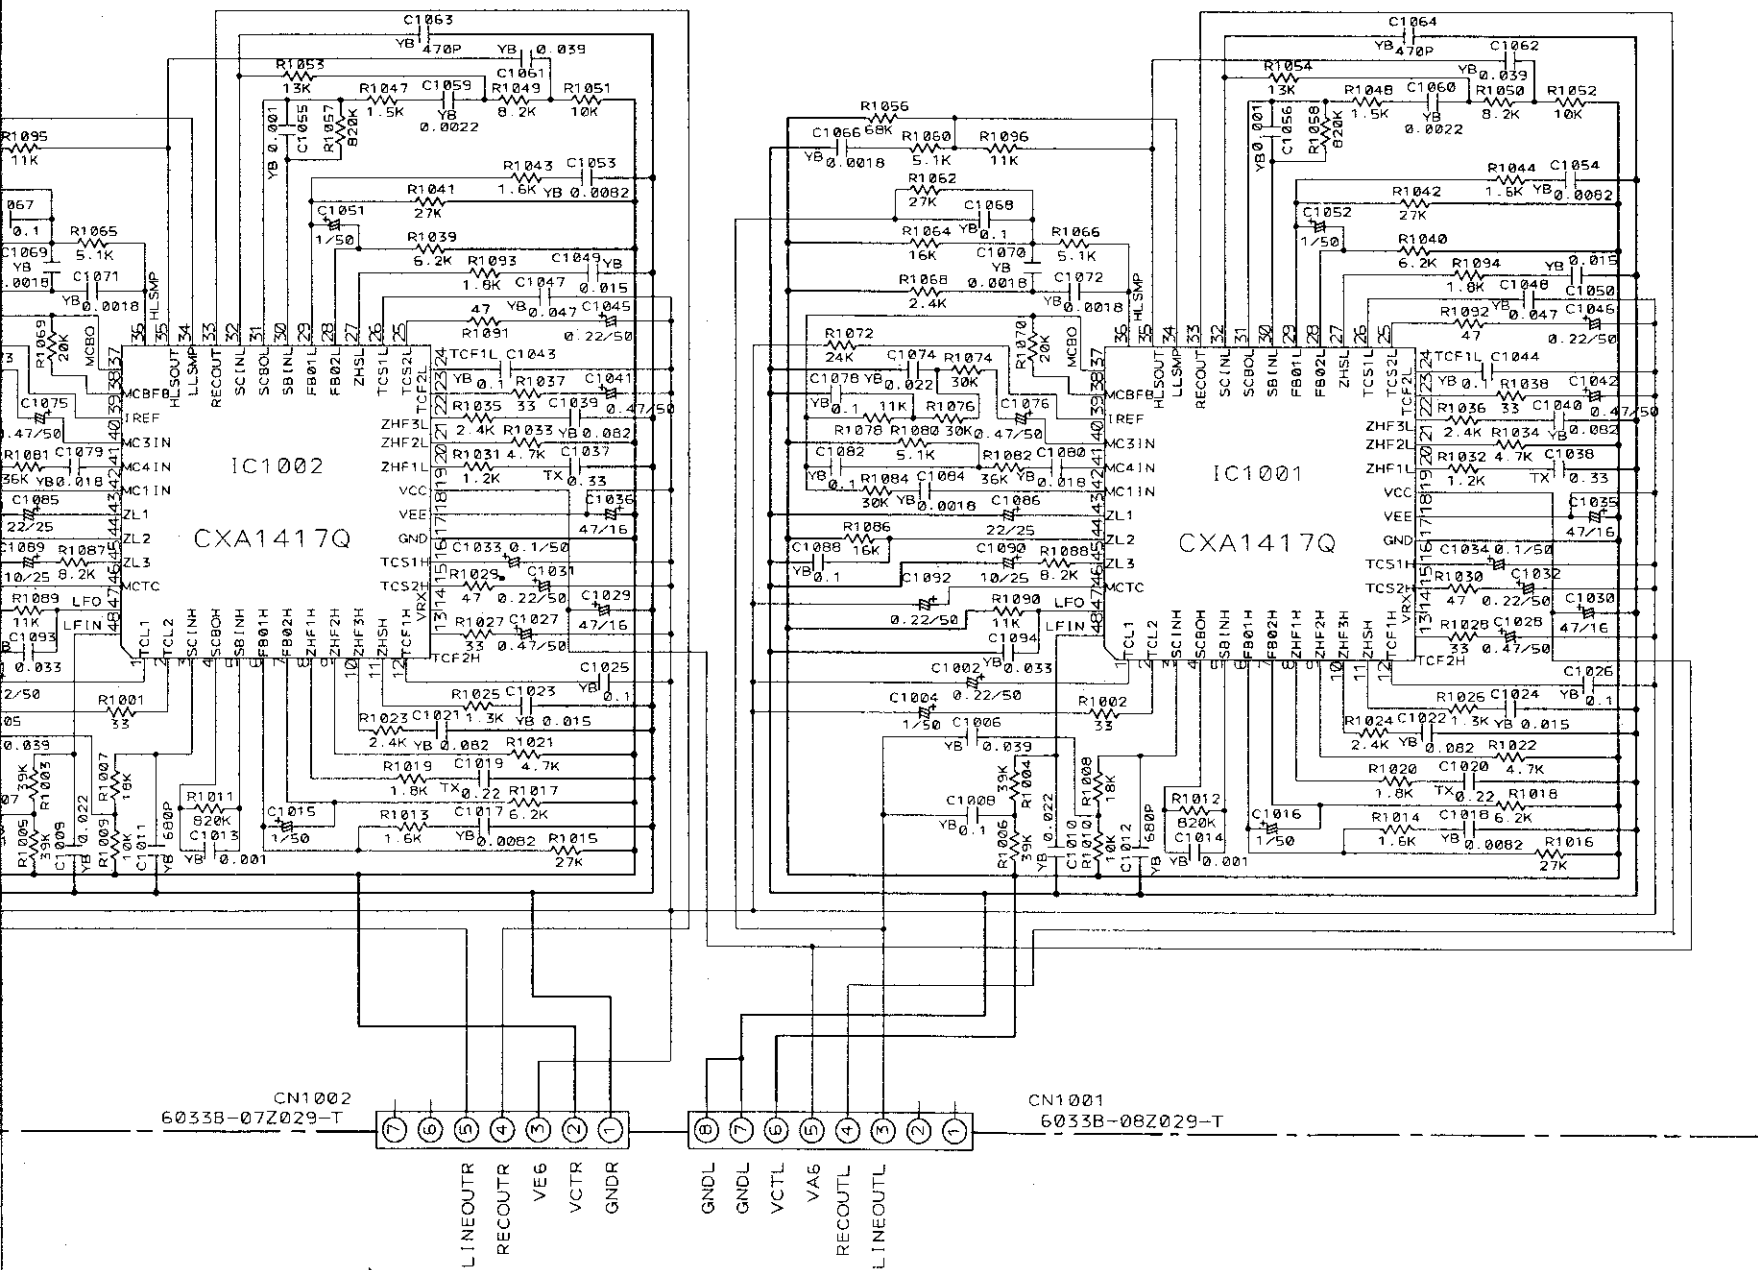

TO MAIN UNIT
CN202
(→SCH-2)

TO MAIN UNIT
CN201
(→SCH-2)

DOLBY S UNIT

SCH-1

3

4

5

6

2. MAIN, SUB, TRANSFORMER 2 AND REC UNIT

A


B

C

D


E

F

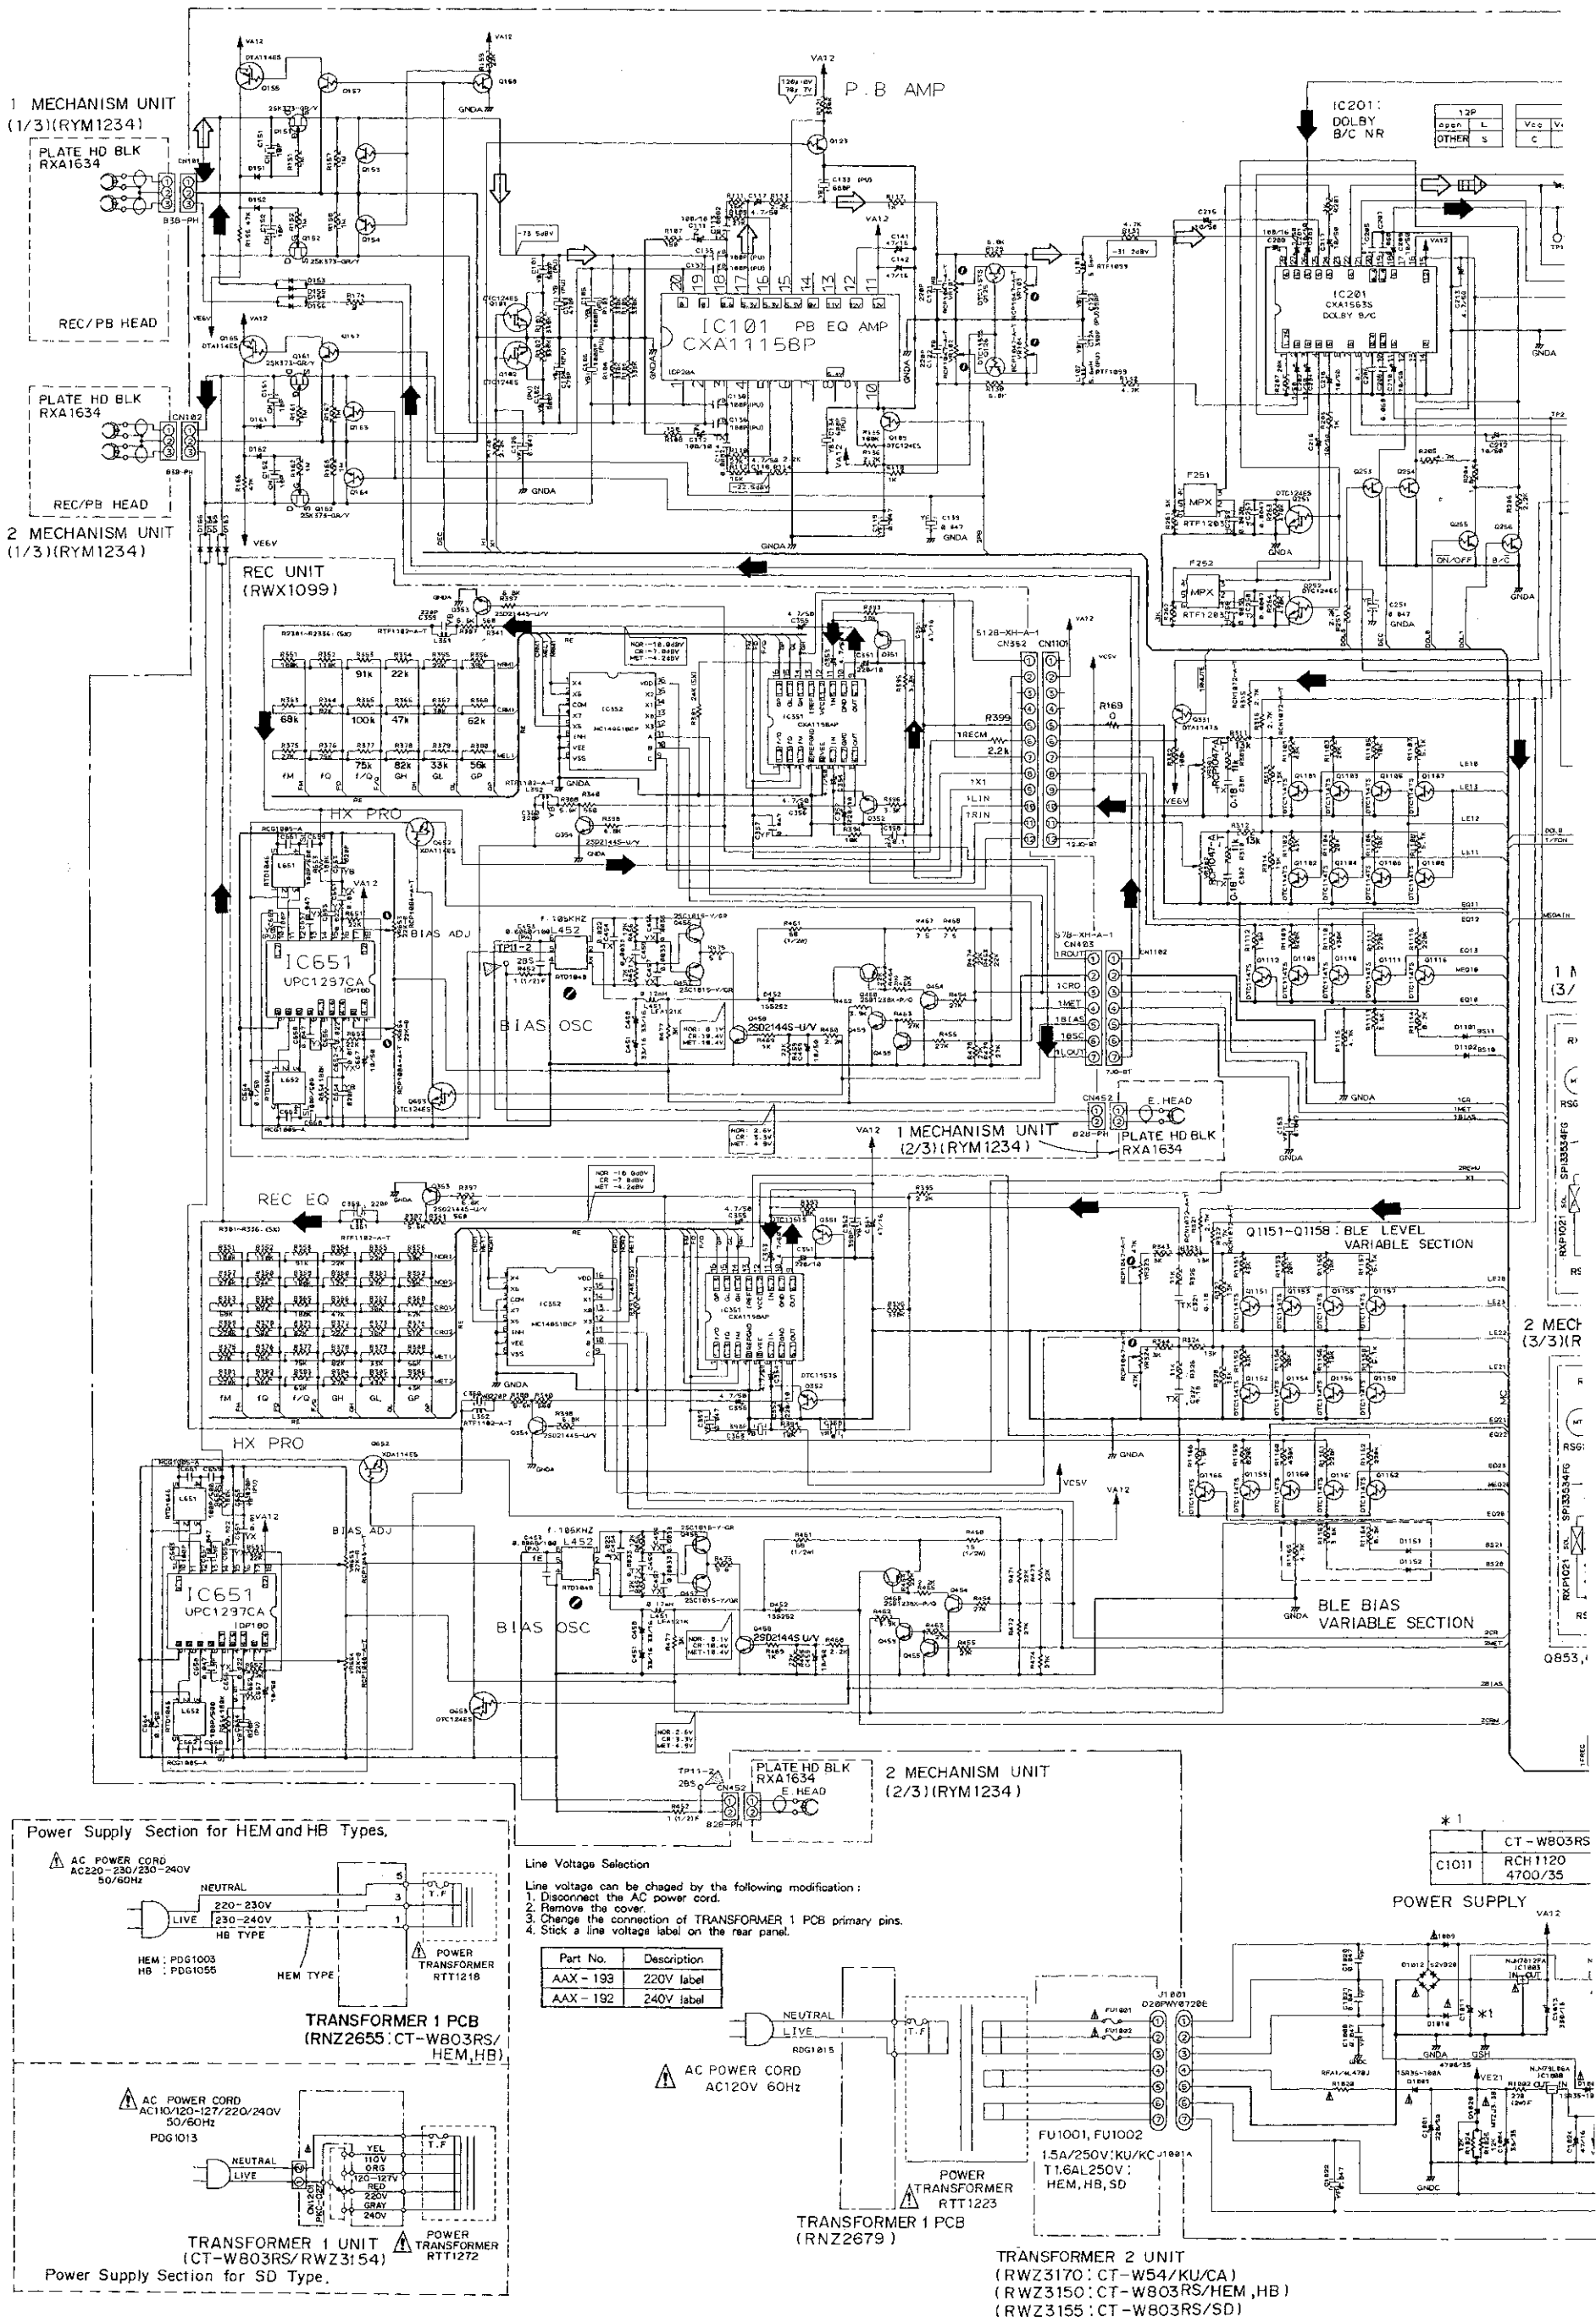

SCH-2

MAIN UNIT, SUB UNIT, TRANSFORMER 2 UNIT, REC UNIT

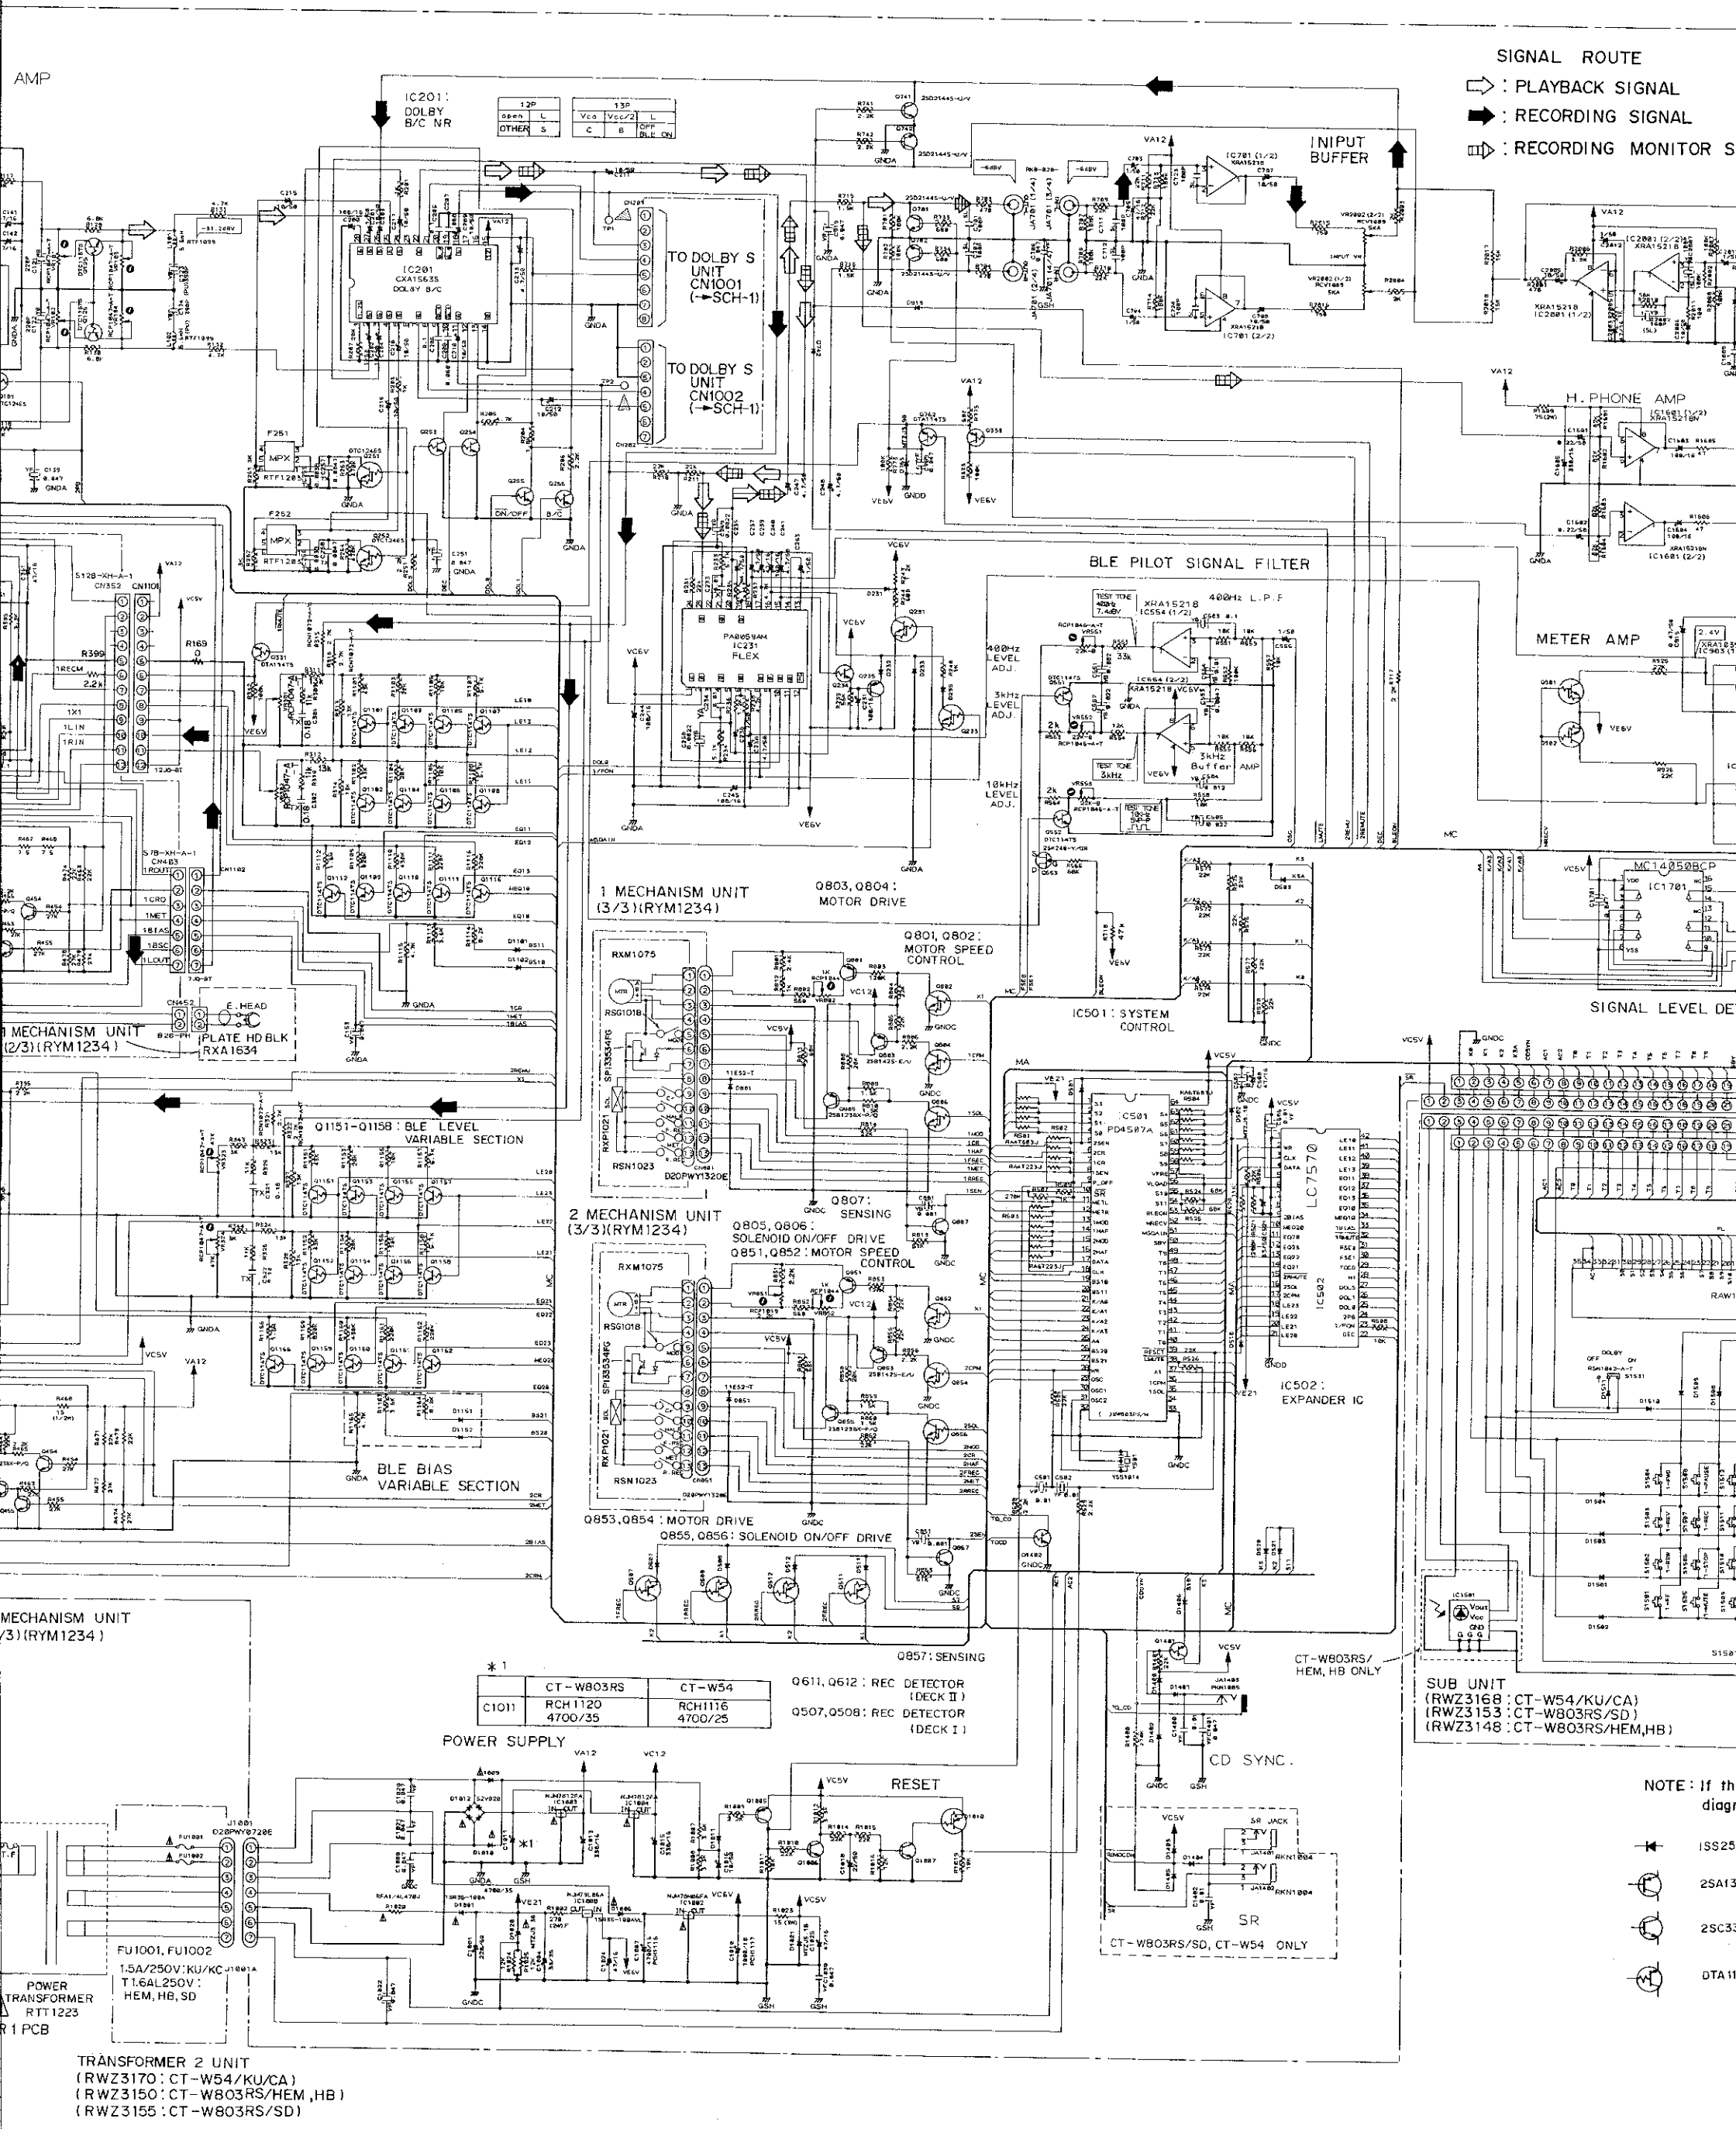

SIGNAL ROUTE
 ⇨ : PLAYBACK SIGNAL
 ⇩ : RECORDING SIGNAL
 ⇩ : RECORDING MONITOR SIGNAL

12P	13P
OPEN L	Vcc (Vcc/2) L
OTHER S	C B OFF BLE ON

POWER SUPPLY


* 1	CT-W803RS	CT-W54
C1011	RCH1120 4700/35	RCH1116 4700/25

SUB UNIT
 (RWZ3168 : CT-W54/KU/CA)
 (RWZ3153 : CT-W803RS/SD)
 (RWZ3148 : CT-W803RS/HEM,HB)

TRANSFORMER 2 UNIT
 (RWZ3170 : CT-W54/KU/CA)
 (RWZ3150 : CT-W803RS/HEM,HB)
 (RWZ3155 : CT-W803RS/SD)

NOTE: If th
 diag
 ⇨ ISS25
 ⇨ 2SA13
 ⇨ 2SC33
 ⇨ DTA11

SCH-2

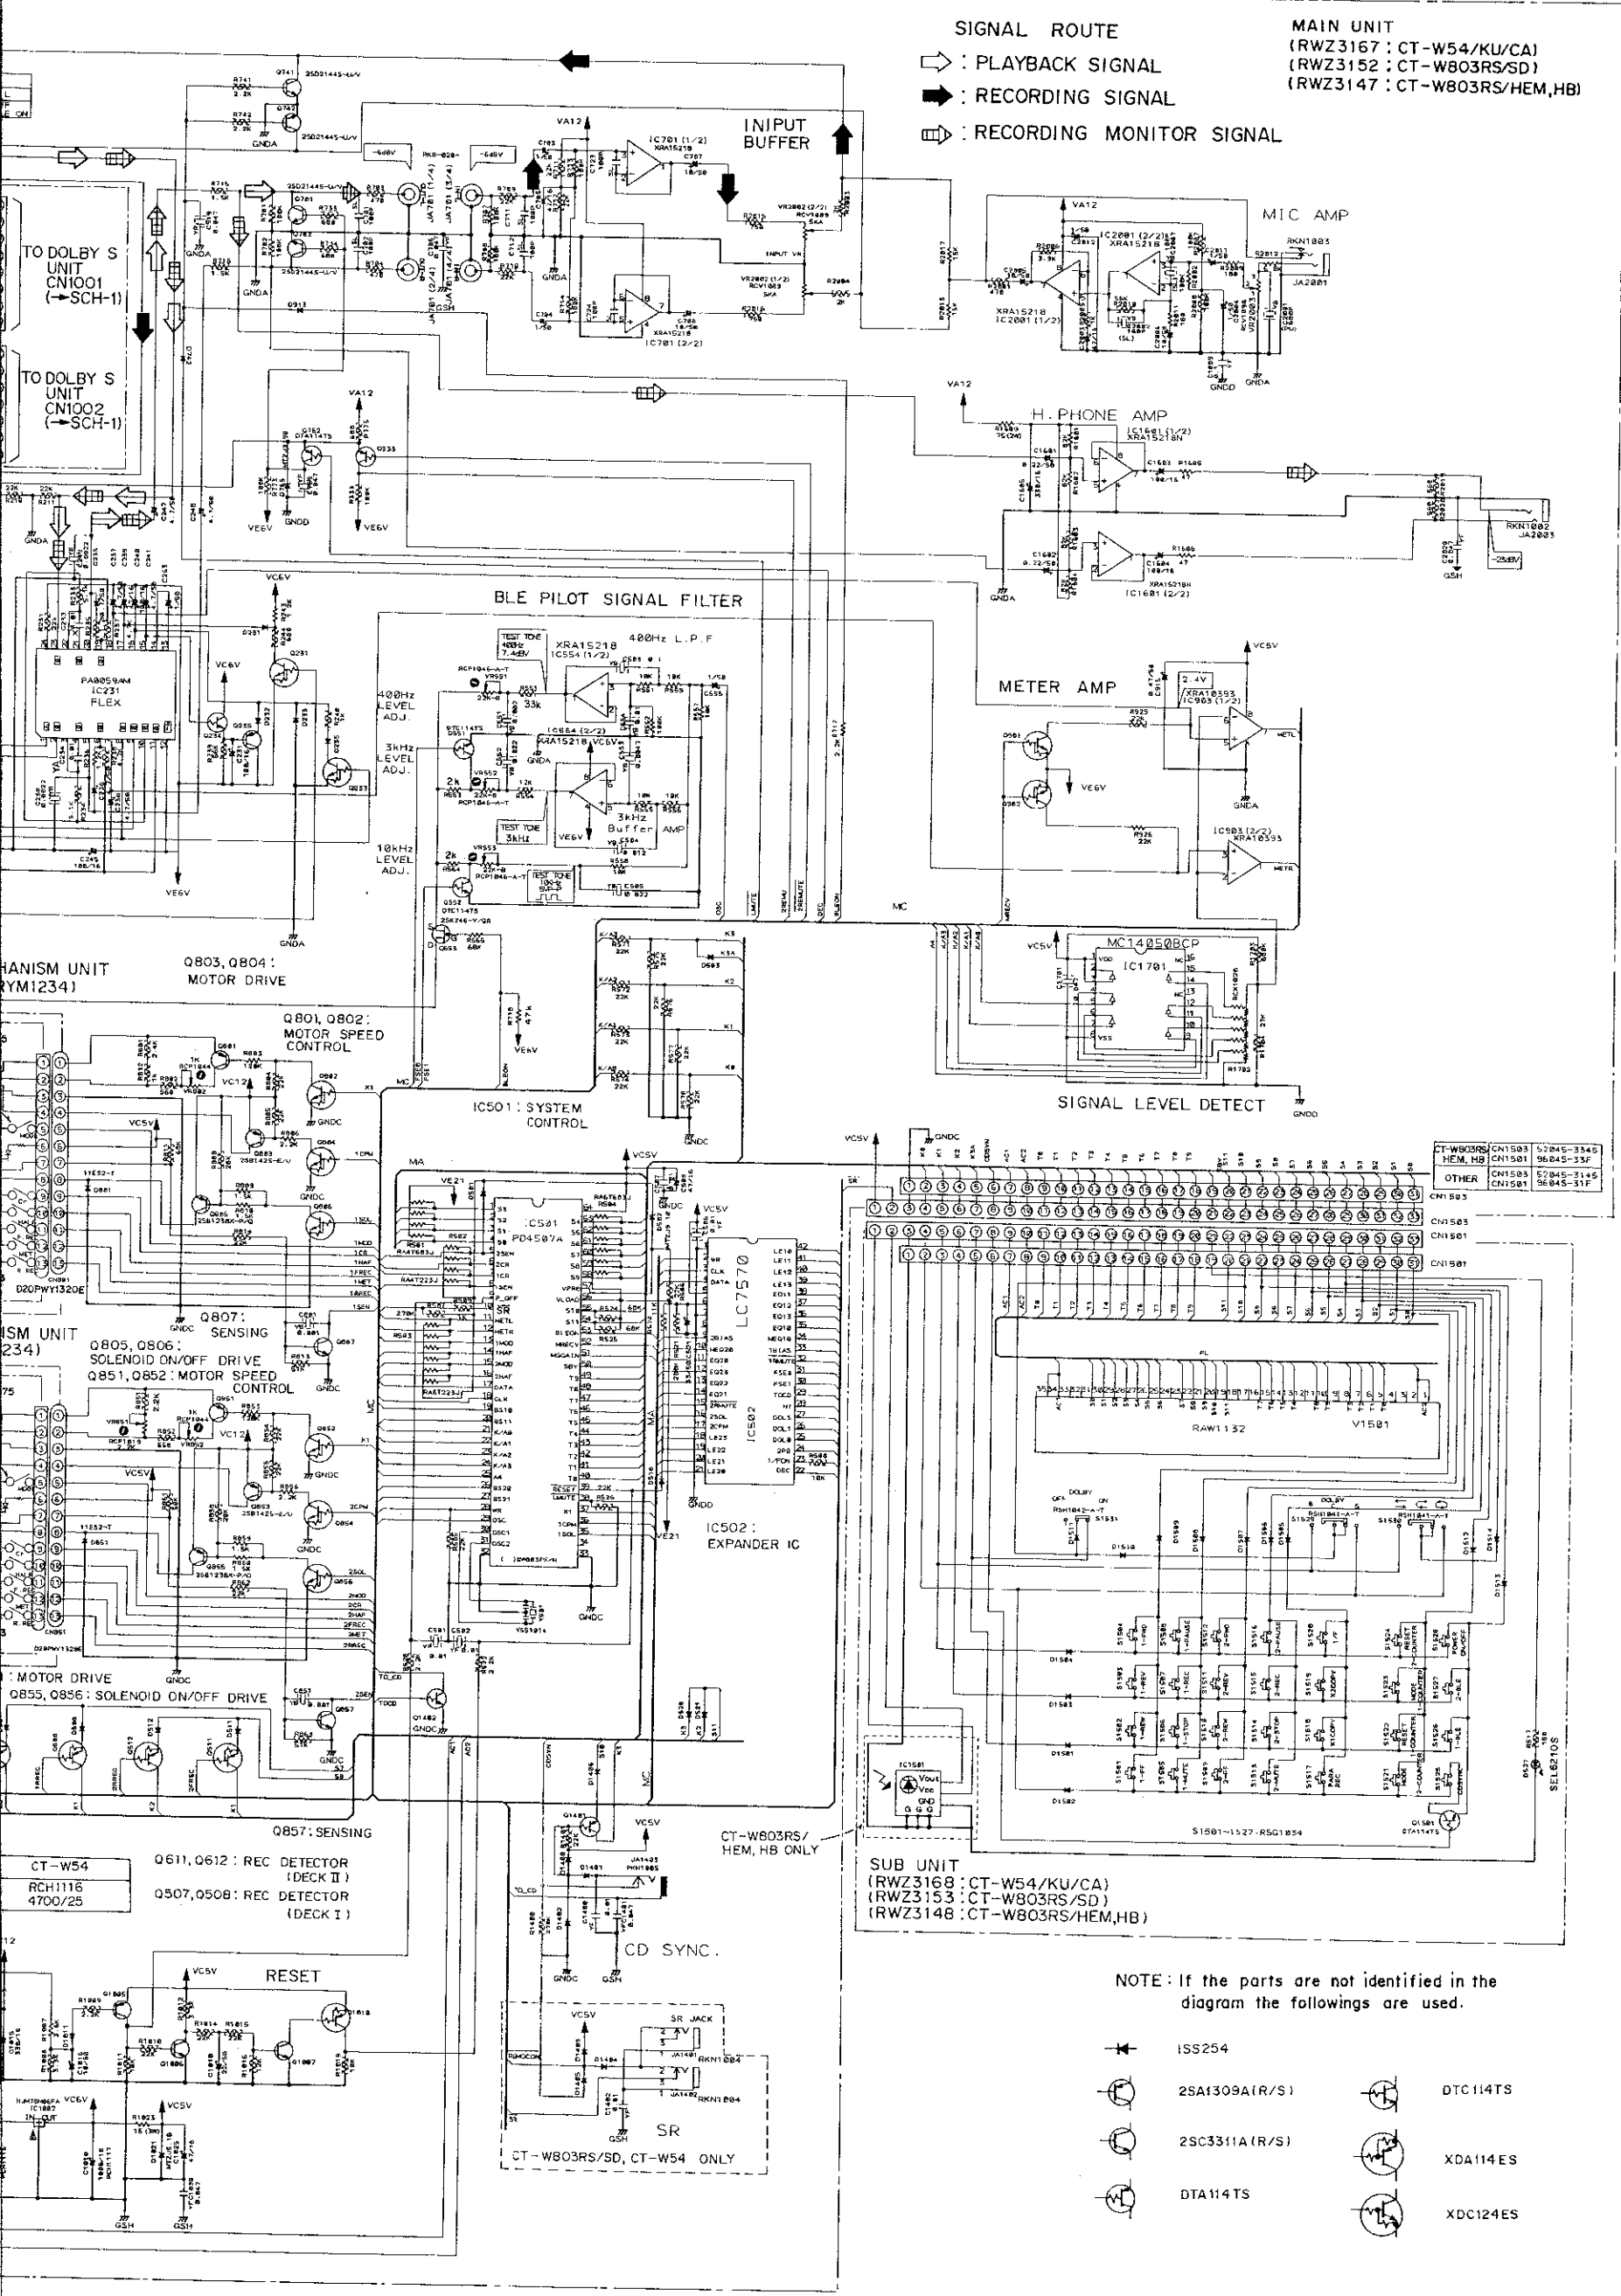

B

C

D



E

F




MAIN UNIT, SUB UNIT, TRANSFORMER 2 UNIT, REC UNIT

SCH-2


2.4 PCB CONNECTION DIAGRAM • This diagram is viewed from the mounted parts side.

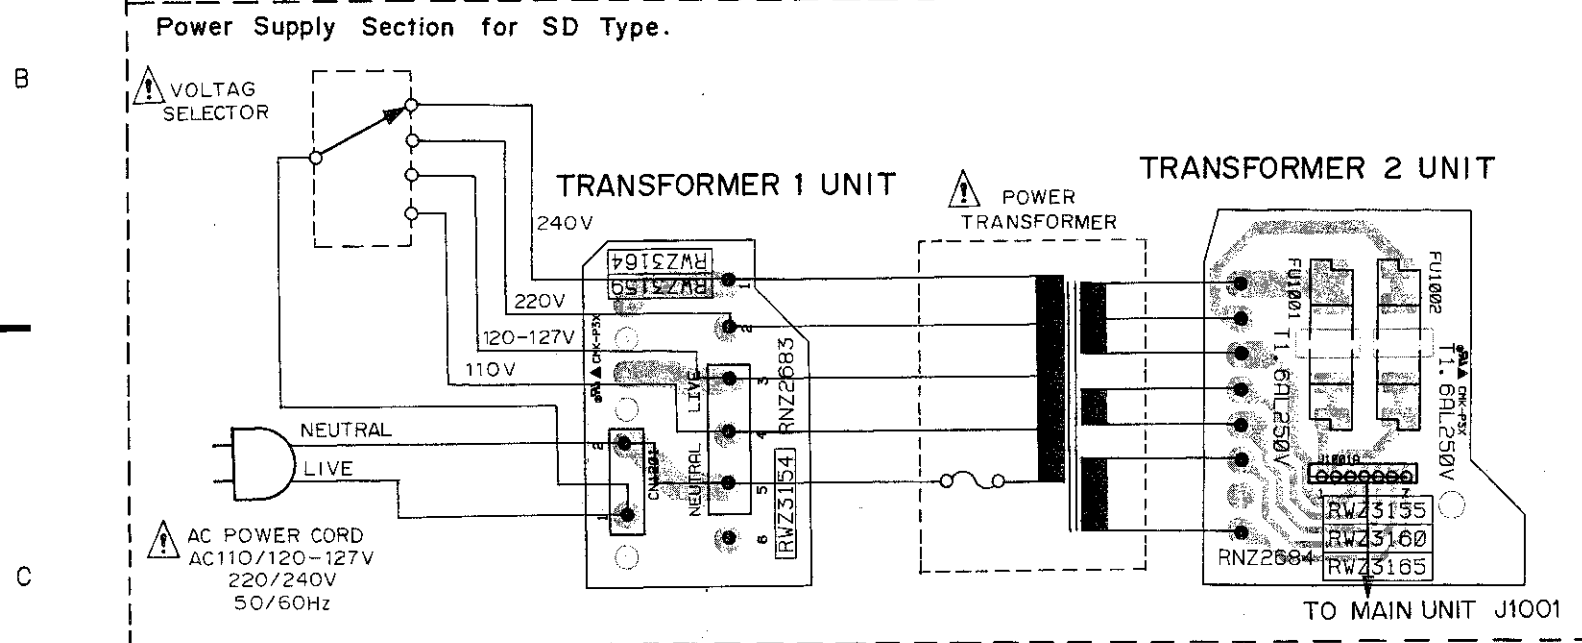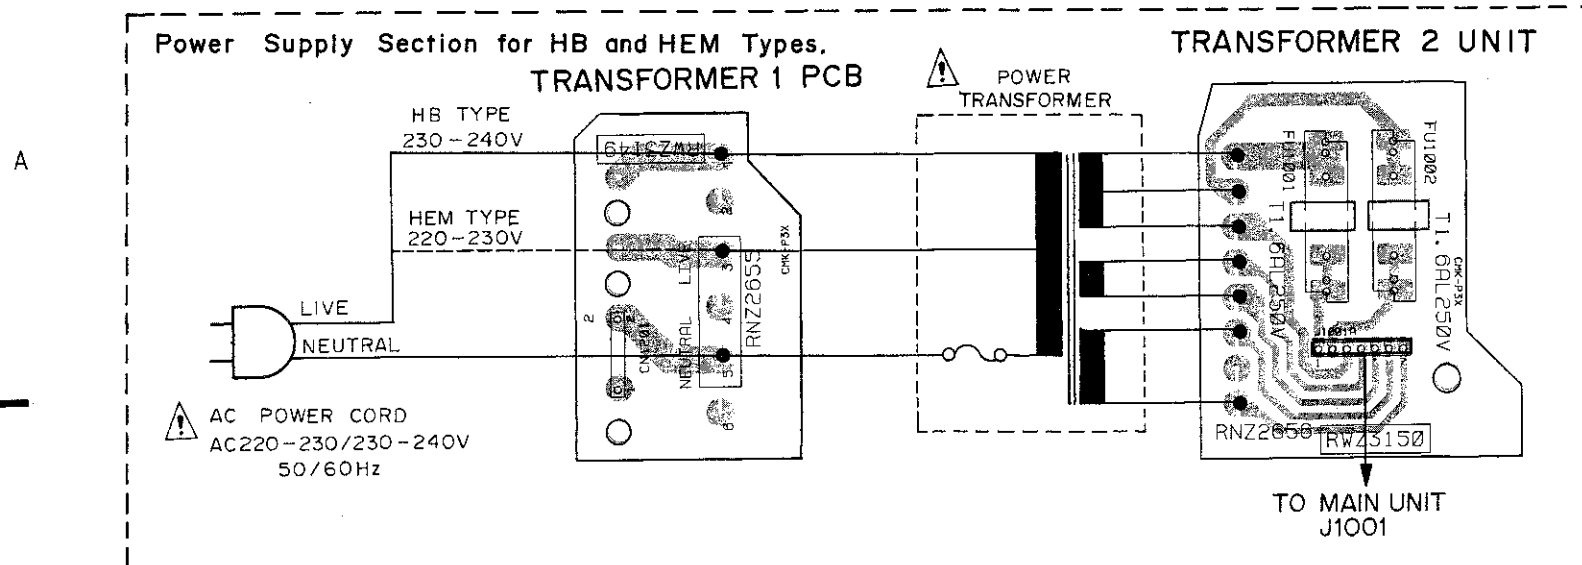

- This diagram is viewed from the pink colored foil side.
- This PCB is double sided.

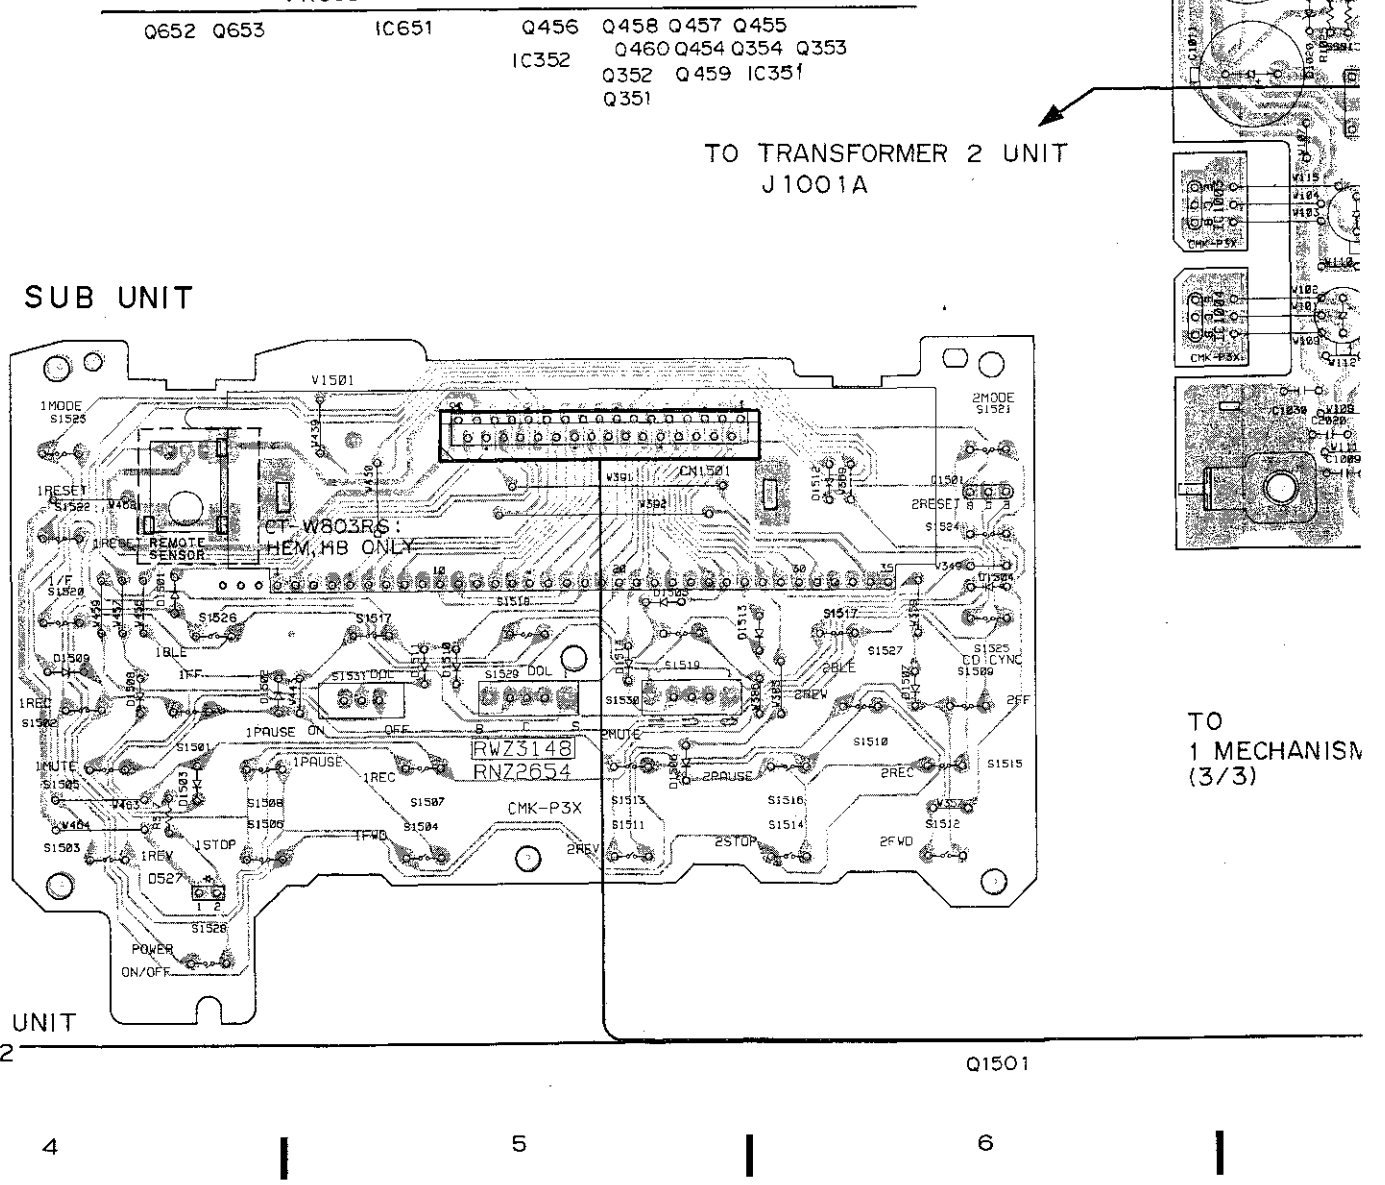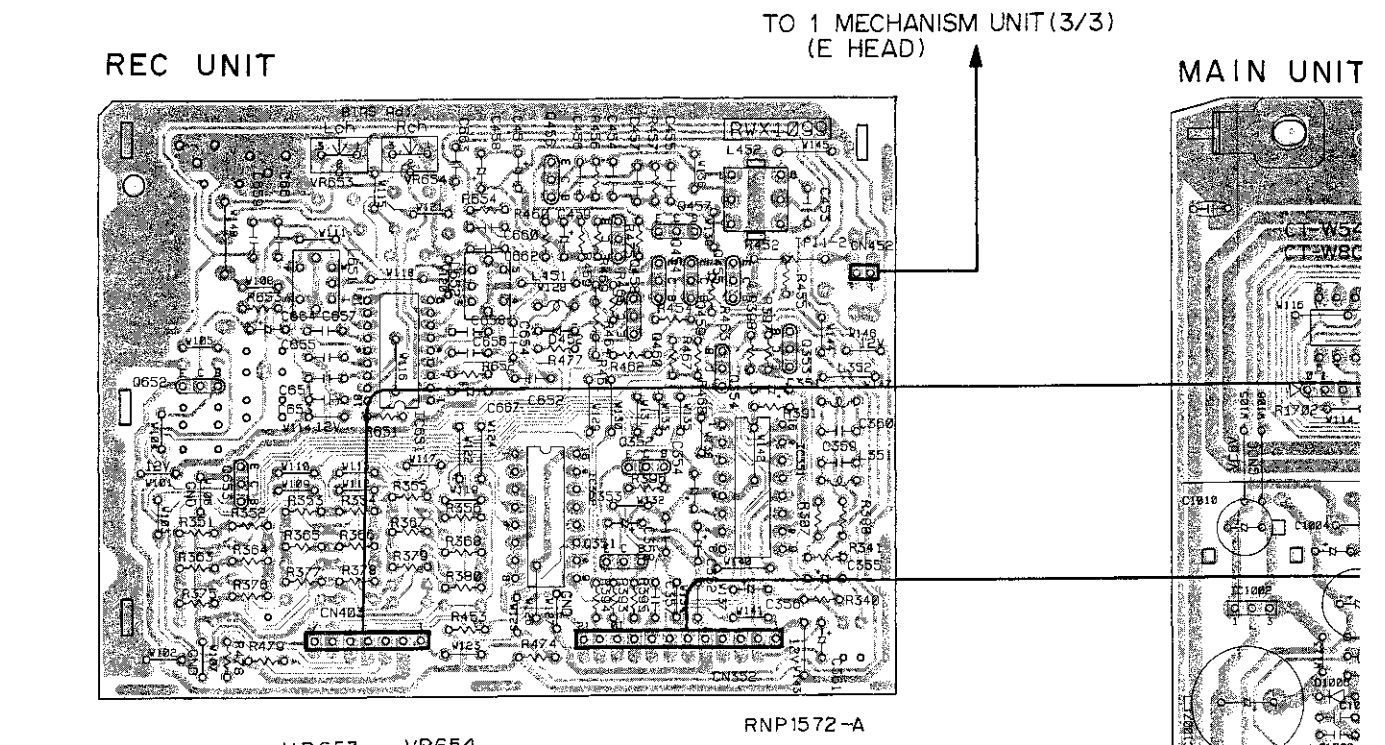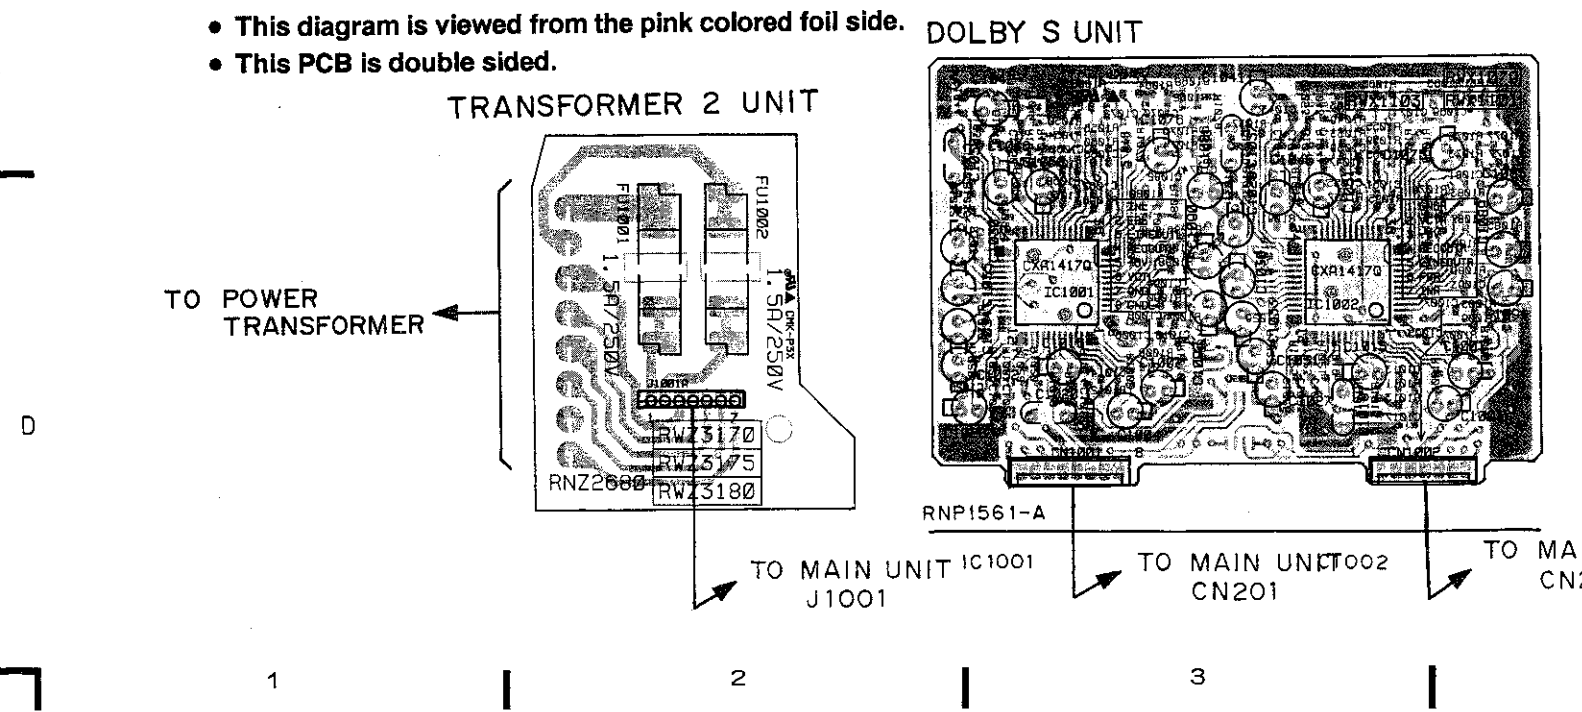


VISM UNIT (3/3)

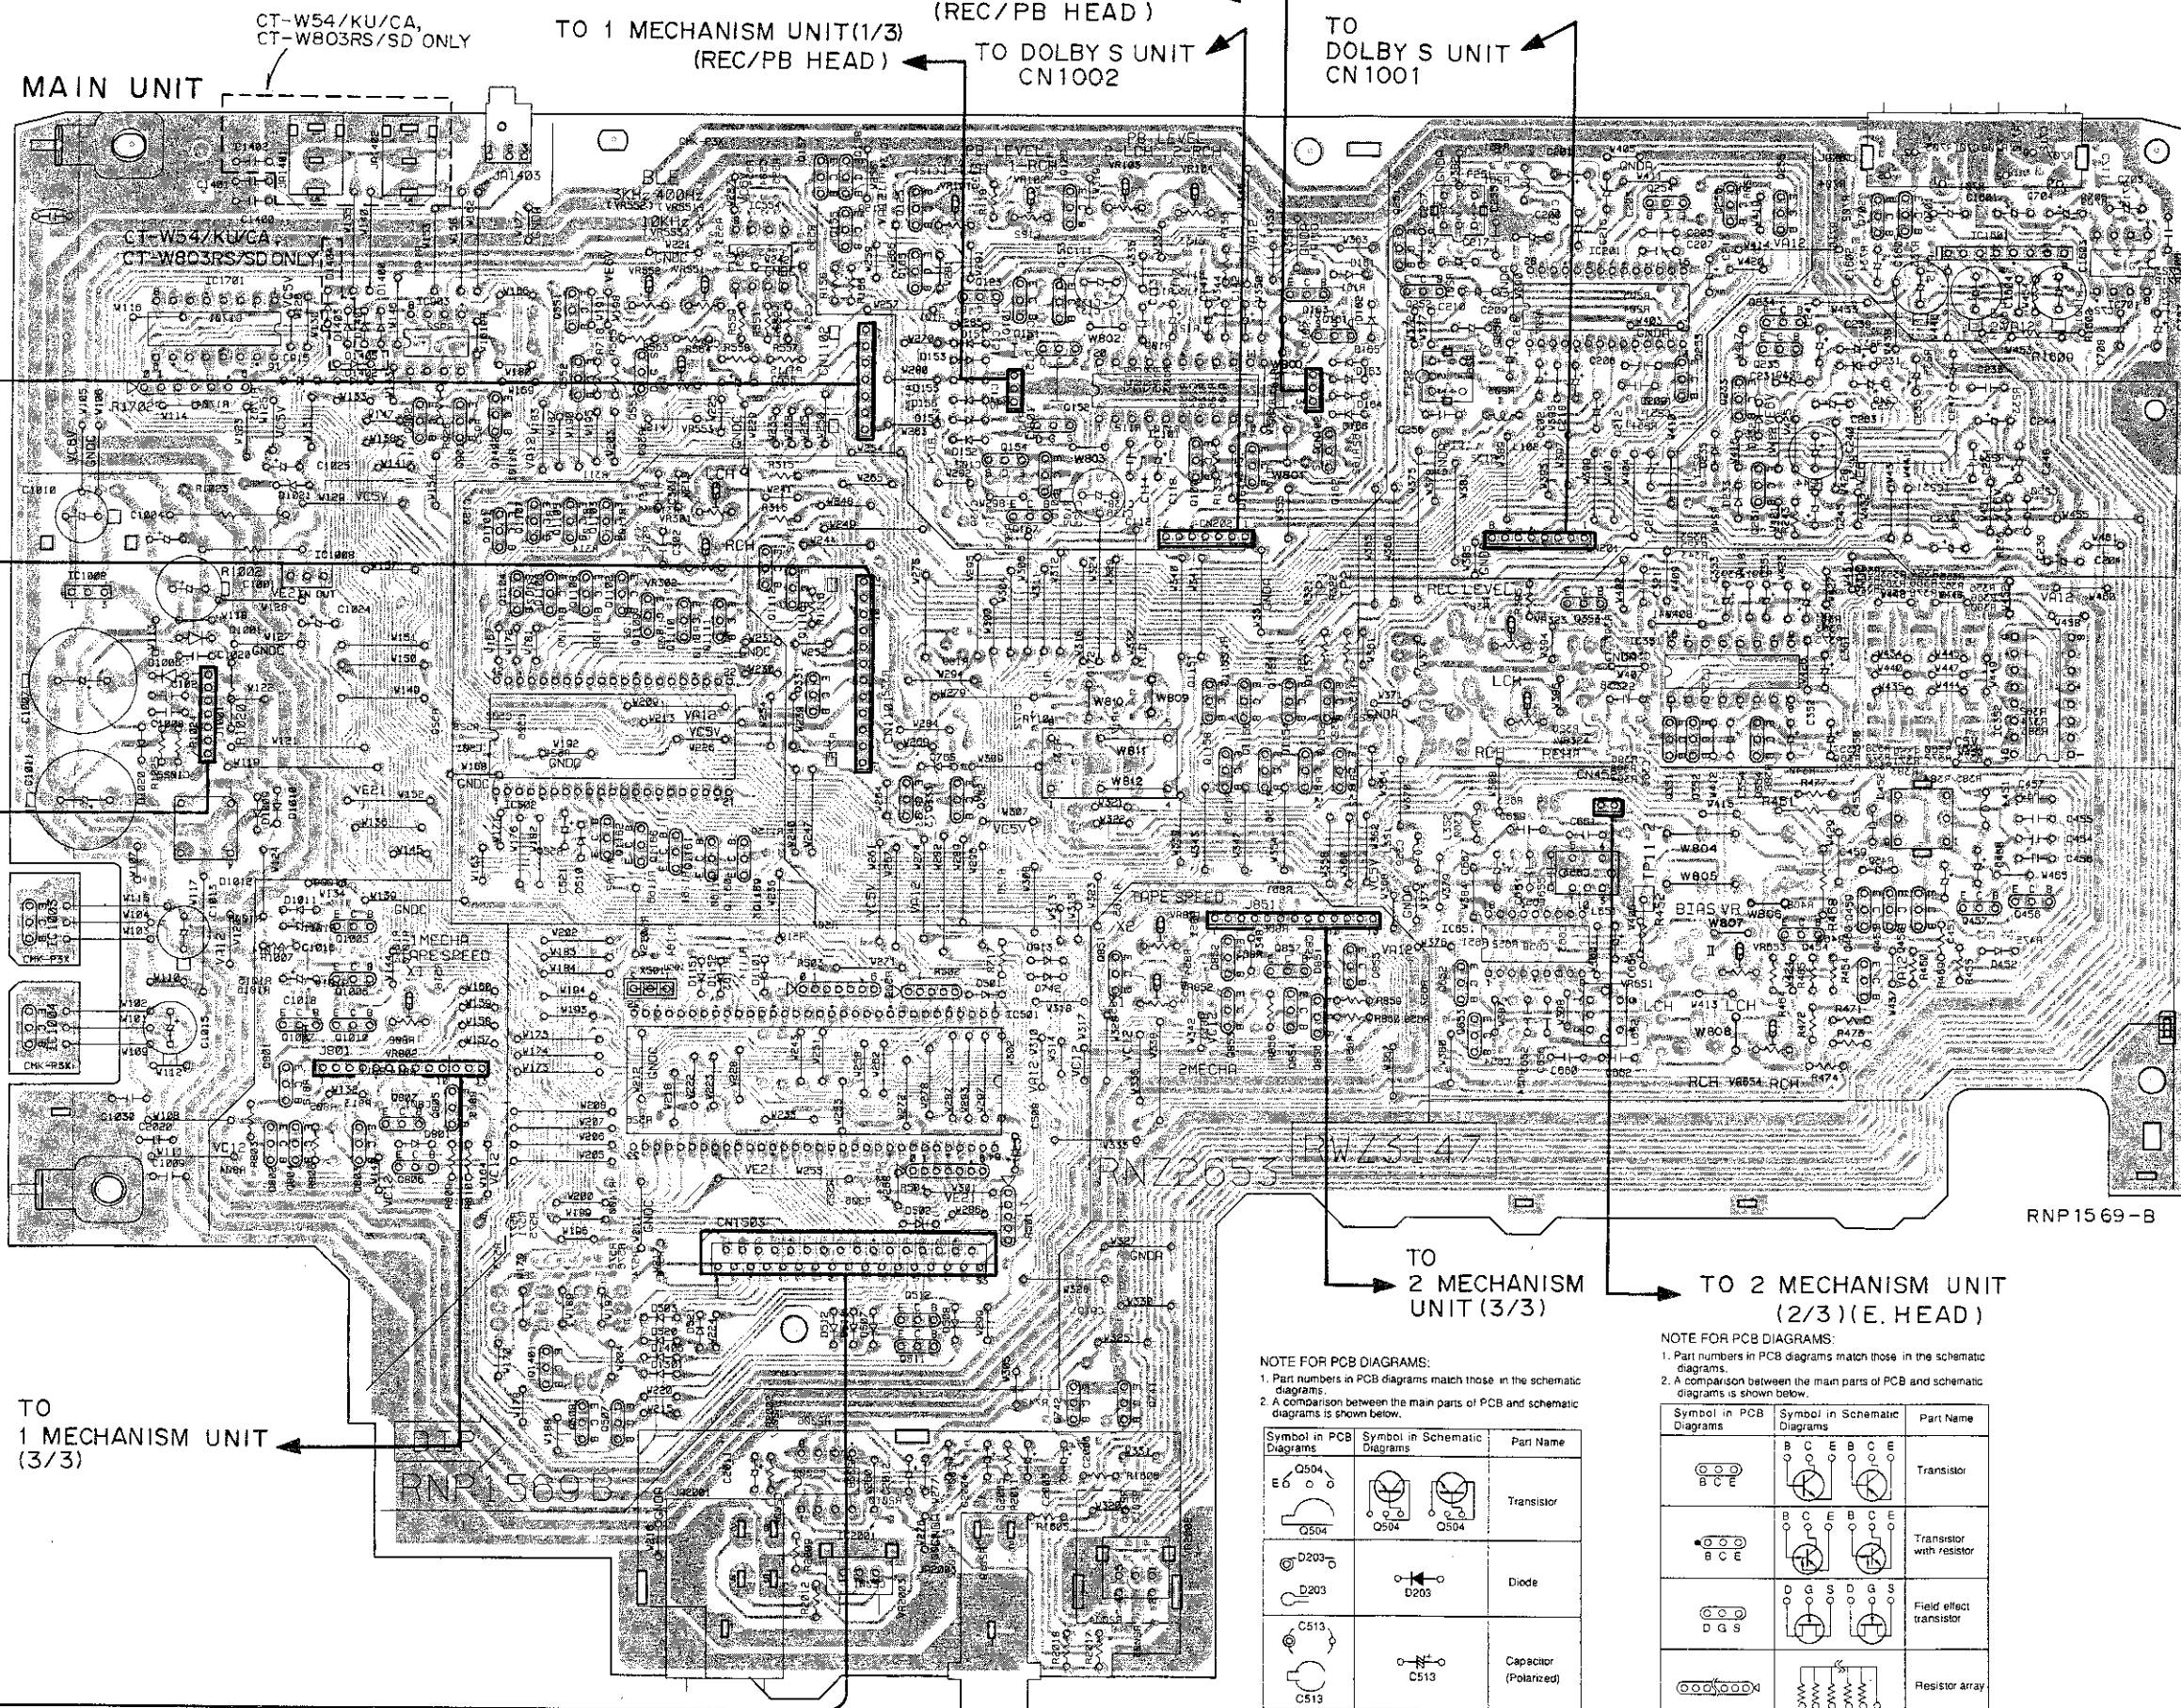

- VR101 Q157 Q256 Q702
- VR102 Q125 Q126 Q254
- VR103 Q158 Q255 Q701
- VR104 Q155 Q251
- VR551 Q123 Q153 Q234
- VR552 Q165 Q161 Q235
- VR552 Q153 Q131 IC701
- VR552 Q101 Q253 IC160 1
- VR553 Q551 IC554 IC201
- VR553 IC1701 IC101
- VR553 Q552 Q553 Q233
- VR553 Q152 Q151 Q14
- VR553 Q902 Q154 IC501
- VR553 Q162 Q1107
- VR301 Q102 Q109 Q164
- VR301 Q1101 Q1105 Q1112
- VR302 Q167 Q1103 Q231
- VR302 Q1104 Q1108
- VR302 Q1106 Q1102
- VR302 IC1002 Q1109
- VR302 IC1008 Q1110 Q353
- VR323 Q331 Q1151 Q1155
- VR324 Q1153 Q1157
- IC502 IC351 IC352
- IC502 Q351 Q352
- IC502 Q1154 Q354
- Q1158 Q1156
- Q1152 Q1152
- Q333
- VR851 Q1162
- VR653 Q1166 Q1160 Q457
- VR802 Q1161 Q1159 Q459
- VR852 Q1005 Q454 Q455
- VR852 IC1003 Q460 IC651
- VR654 IC1004 Q851 Q456
- Q1007 Q852 Q857
- Q1010 Q853 Q854
- Q801 Q853 Q854
- IC501 Q855 Q652
- Q802 Q856 Q653
- Q804 Q807
- Q806 Q803
- Q805 Q805

VR 2 UNIT

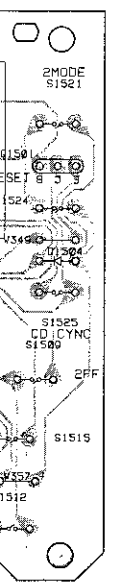

TO 1 MECHANISM UNIT (3/3)

NOTE FOR PCB DIAGRAMS:
 1. Part numbers in PCB diagrams match those in the schematic diagrams.
 2. A comparison between the main parts of PCB and schematic diagrams is shown below.

Symbol in PCB Diagrams	Symbol in Schematic Diagrams	Part Name
Q504 E B C E	Q504 Q504 Q504	Transistor
D203 D203	D203	Diode
C513 C513	C513 C513	Capacitor (Polarized)

NOTE FOR PCB DIAGRAMS:
 1. Part numbers in PCB diagrams match those in the schematic diagrams.
 2. A comparison between the main parts of PCB and schematic diagrams is shown below.

Symbol in PCB Diagrams	Symbol in Schematic Diagrams	Part Name
Q504 B C E	Q504 Q504 Q504	Transistor
D203 B C E	D203 D203 D203	Transistor with resistor
C513 D G S	C513 C513 C513	Field effect transistor
Q504 Q504 Q504	Q504 Q504 Q504	Resistor array
Q504 Q504	Q504 Q504	3-terminal regulator

3. The transistor terminal marked with E or C shows the emitter.
 4. The diode terminal marked with @ or C shows cathode side.
 5. The capacitor terminal marked with @ or C shows negative terminal.

- Q1401 Q512 Q742
- Q508 Q511 Q741
- Q507

- IC2001
- VR2002
- VR2003

Q1501

MAIN UNIT (3/3)

S UNIT


TO
1 MECHANISM UNIT
(3/3)

CT-W8032SD ONLY

TO 1 MECHANISM UNIT (3/3)
(REC/PB HEAD)
CN1005

TO 2 MECHANISM UNIT (3/3)
(REC/PB HEAD)
CN1005

TO
DOLBY 2 UNIT
CN1001

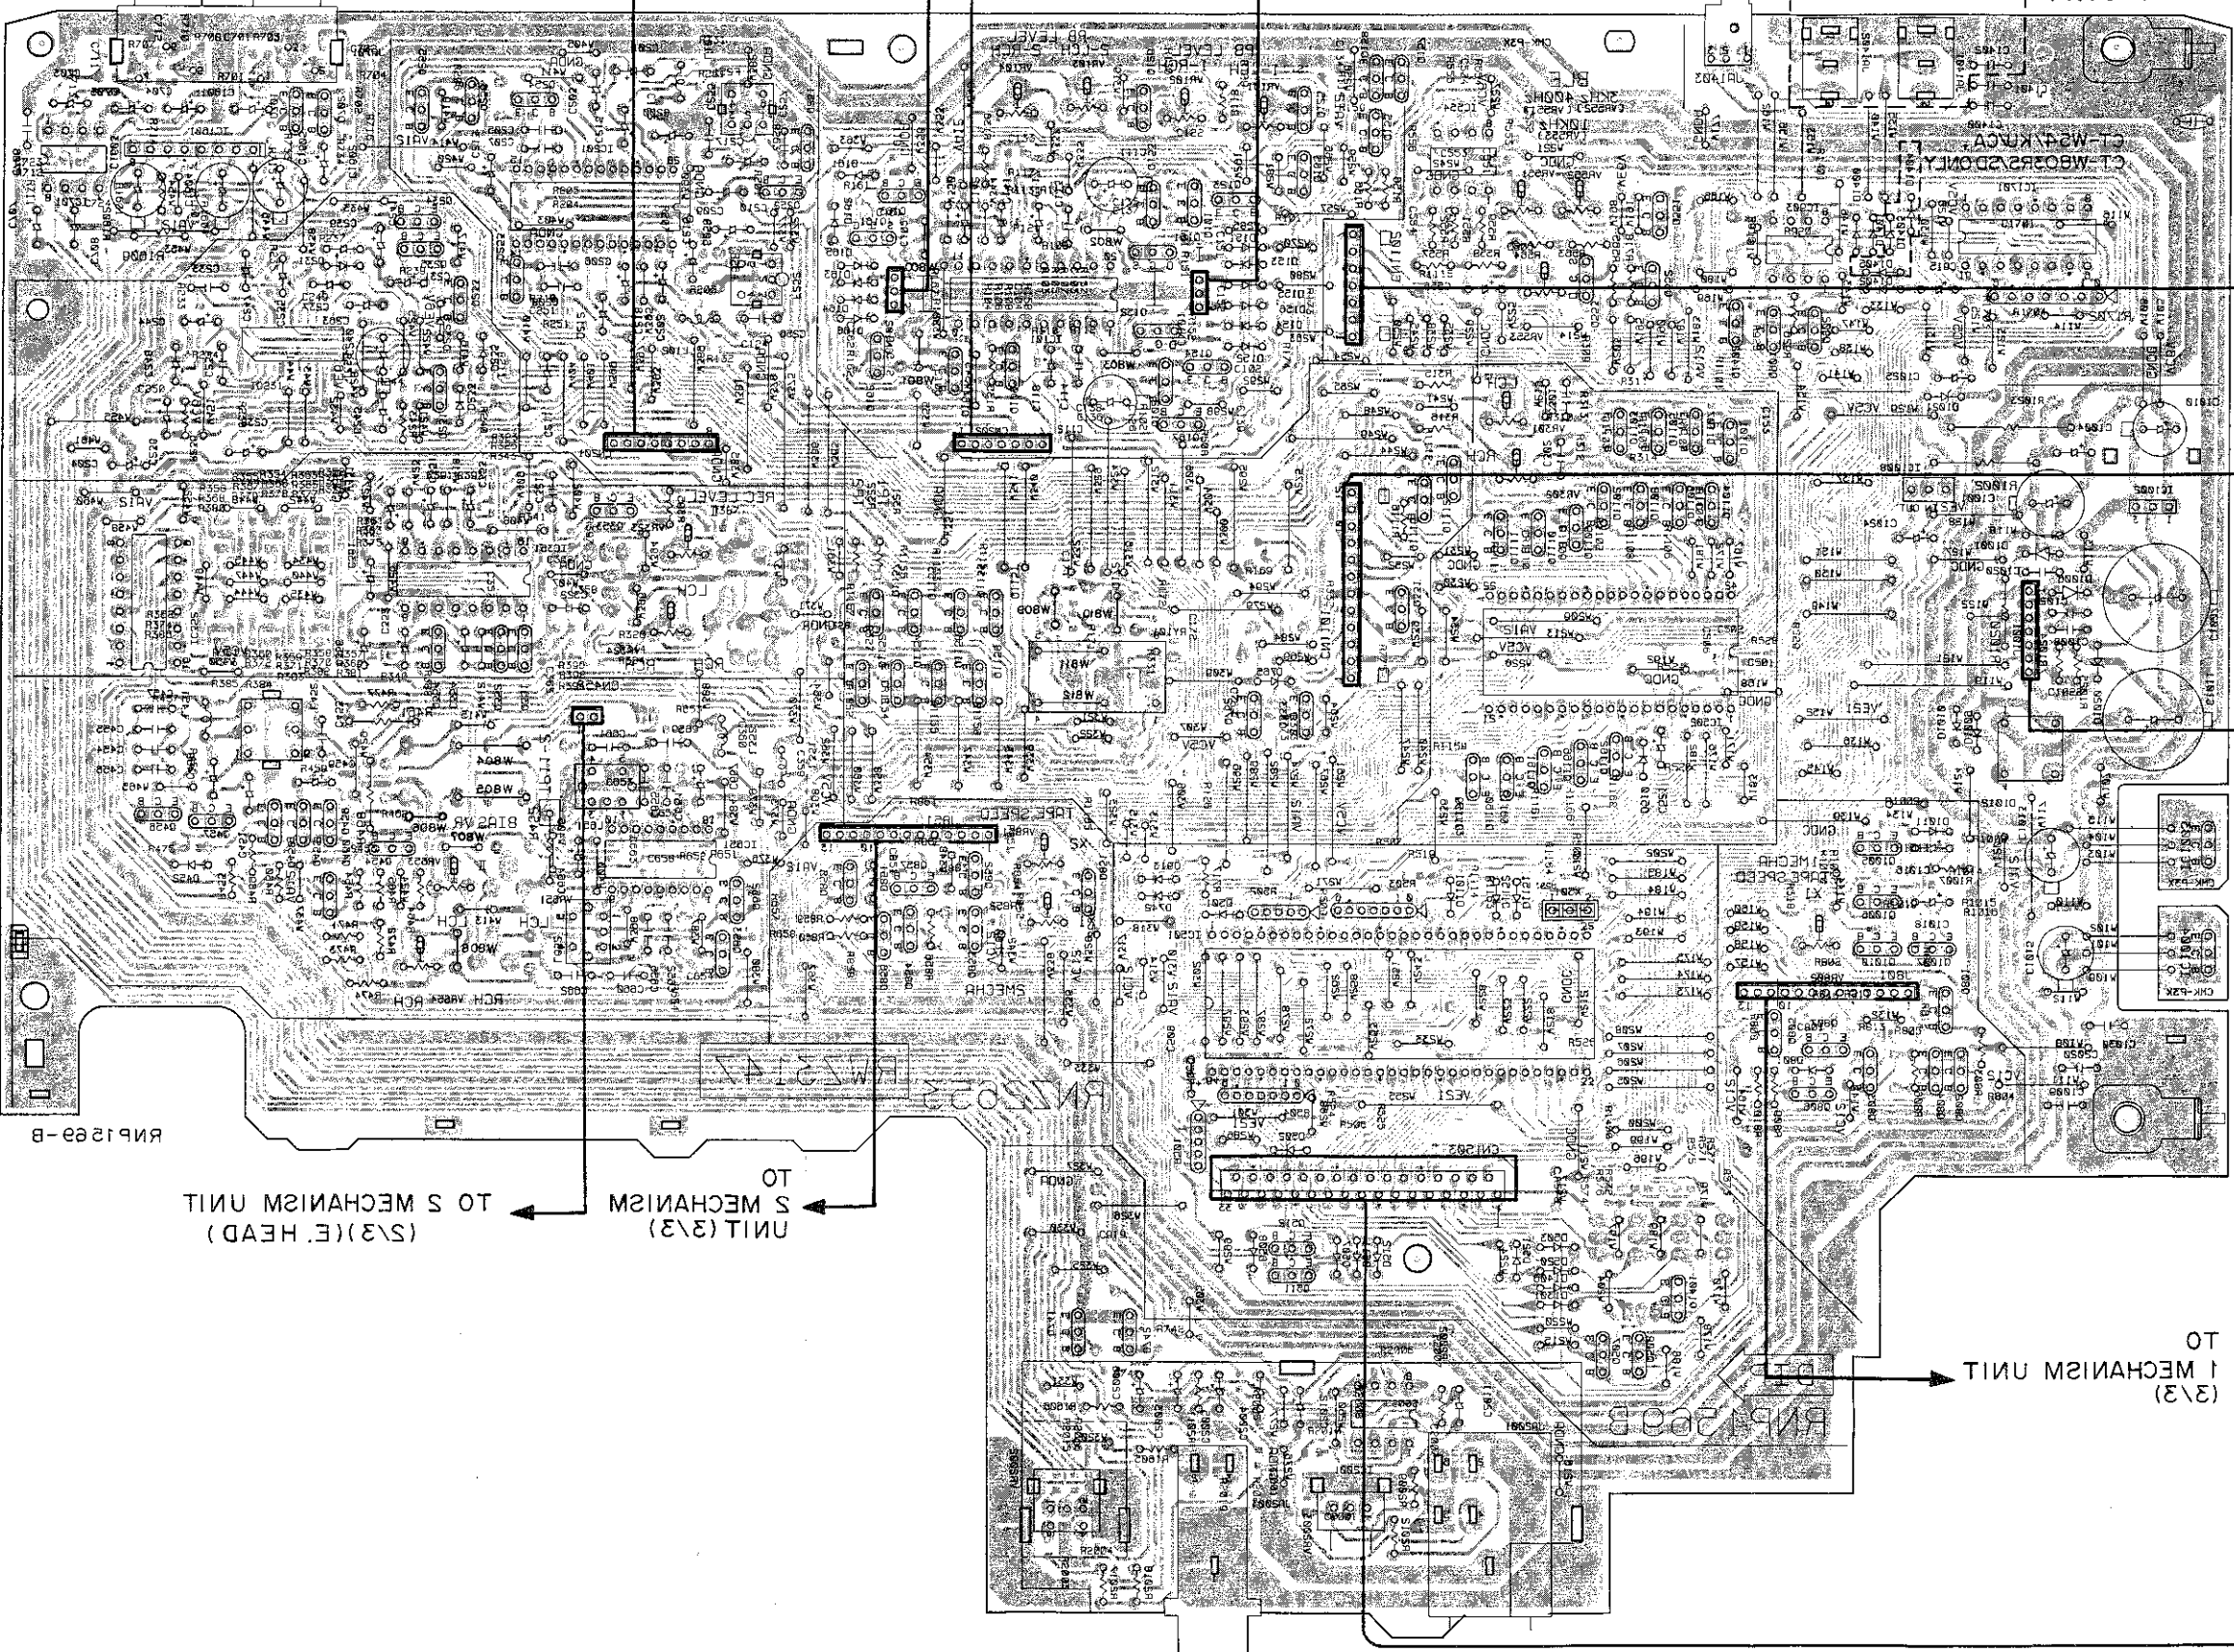

TO
S MECHANISM
UNIT (3/3)
(S) (E HEAD)

RHP1255-B

AR5003
AR5005

IC5001

0207
0208 0211 0241
01401 0215 0245

0802 0803 0804 0805 0823 0824 0827
0805 0821 0822 0823 0824 0825 0826 0828 0829
0802 0803 0804 0805 0823 0824 0827

VR524

0802 0803 0804 0805 0823 0824 0827
0805 0821 0822 0823 0824 0825 0826 0828 0829
0802 0803 0804 0805 0823 0824 0827

VR525

0802 0803 0804 0805 0823 0824 0827
0805 0821 0822 0823 0824 0825 0826 0828 0829
0802 0803 0804 0805 0823 0824 0827

VR523

0802 0803 0804 0805 0823 0824 0827
0805 0821 0822 0823 0824 0825 0826 0828 0829
0802 0803 0804 0805 0823 0824 0827

VR521

0802 0803 0804 0805 0823 0824 0827
0805 0821 0822 0823 0824 0825 0826 0828 0829
0802 0803 0804 0805 0823 0824 0827

VR520

0802 0803 0804 0805 0823 0824 0827
0805 0821 0822 0823 0824 0825 0826 0828 0829
0802 0803 0804 0805 0823 0824 0827

VR519

0802 0803 0804 0805 0823 0824 0827
0805 0821 0822 0823 0824 0825 0826 0828 0829
0802 0803 0804 0805 0823 0824 0827

VR518

0802 0803 0804 0805 0823 0824 0827
0805 0821 0822 0823 0824 0825 0826 0828 0829
0802 0803 0804 0805 0823 0824 0827

VR517

0802 0803 0804 0805 0823 0824 0827
0805 0821 0822 0823 0824 0825 0826 0828 0829
0802 0803 0804 0805 0823 0824 0827

VR516

0802 0803 0804 0805 0823 0824 0827
0805 0821 0822 0823 0824 0825 0826 0828 0829
0802 0803 0804 0805 0823 0824 0827

VR515

0802 0803 0804 0805 0823 0824 0827
0805 0821 0822 0823 0824 0825 0826 0828 0829
0802 0803 0804 0805 0823 0824 0827

VR514

0802 0803 0804 0805 0823 0824 0827
0805 0821 0822 0823 0824 0825 0826 0828 0829
0802 0803 0804 0805 0823 0824 0827


VR513

0802 0803 0804 0805 0823 0824 0827
0805 0821 0822 0823 0824 0825 0826 0828 0829
0802 0803 0804 0805 0823 0824 0827

VR512

2.4 PCB CONNECTION DIAGRAM

• This diagram is viewed from the foil side.

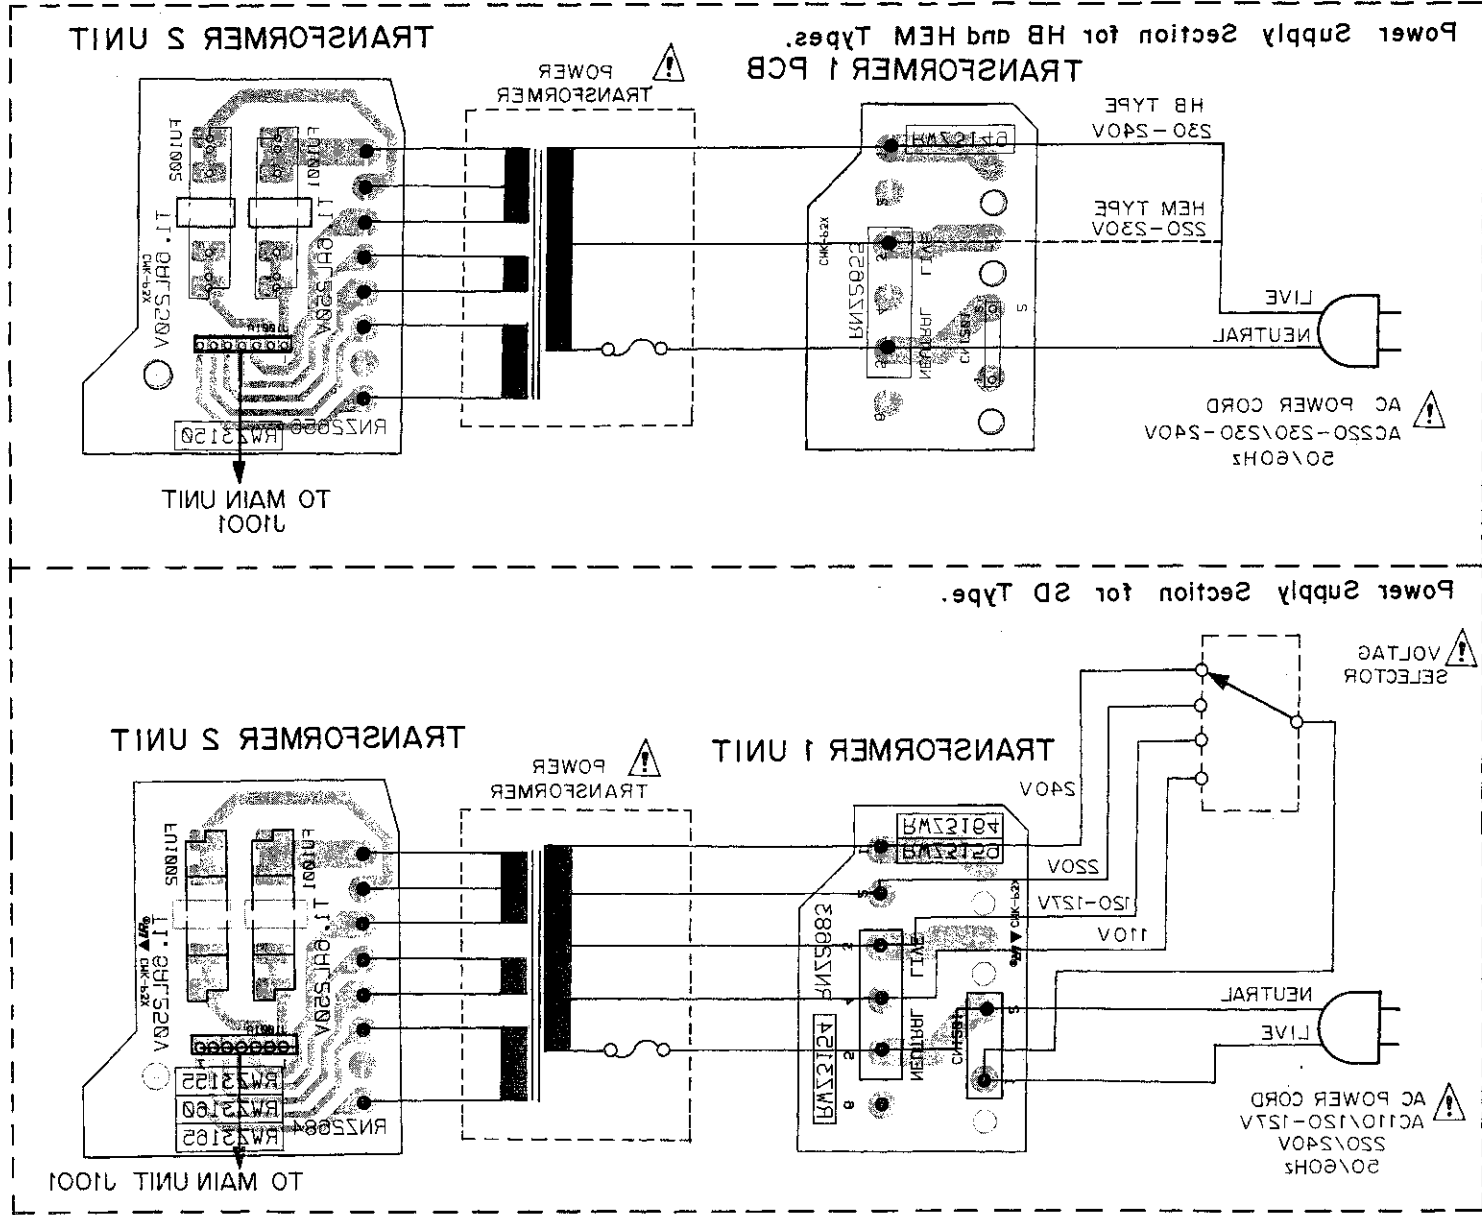



A

B

C



D

- This diagram is viewed from the gray colored foil side.
- This PCB is double sided.

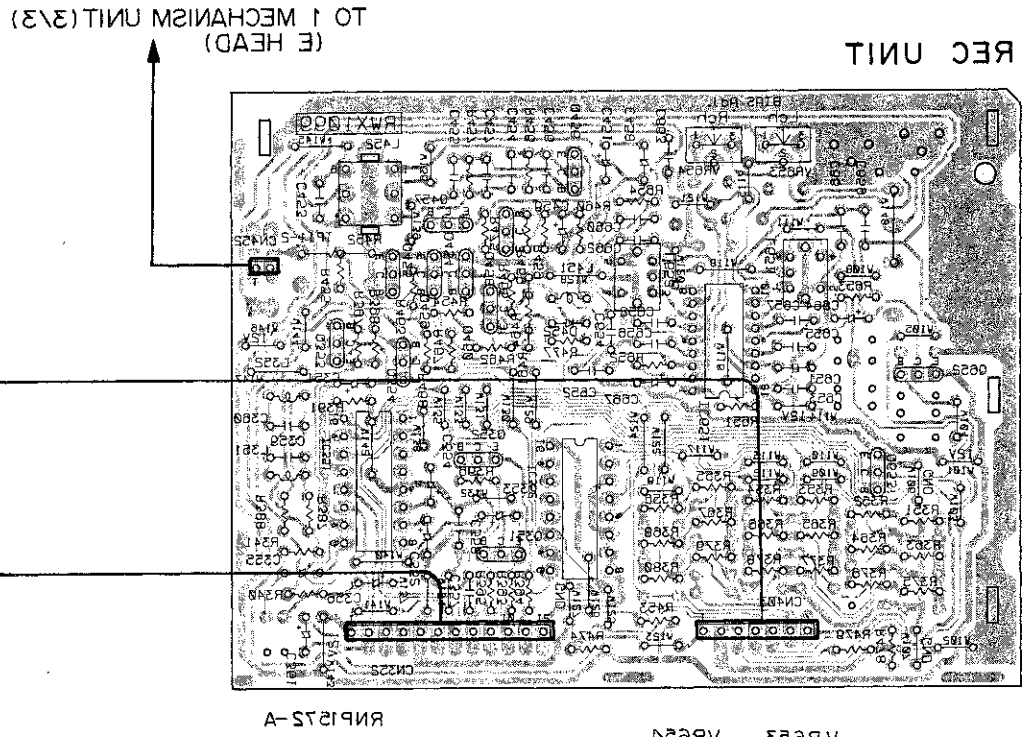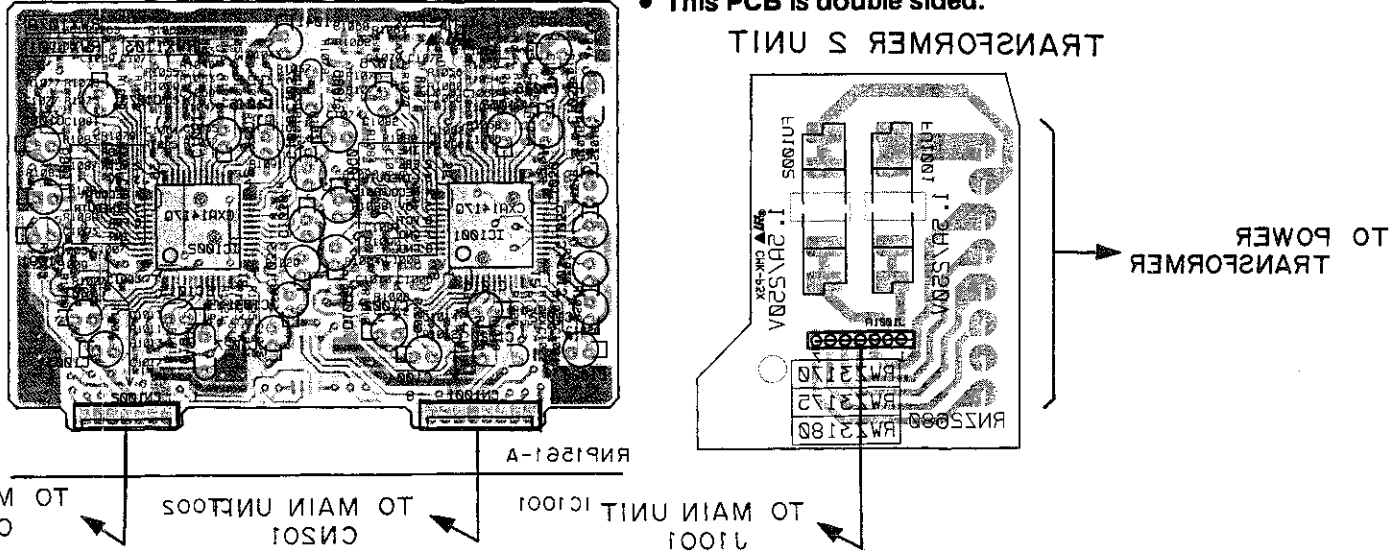

0625 0623	IC621	0426	0428	0427	0425
0625 0623	IC325	0460	0424	0324	0323
0321	IC325	0425	0429	IC321	

RNP152-A

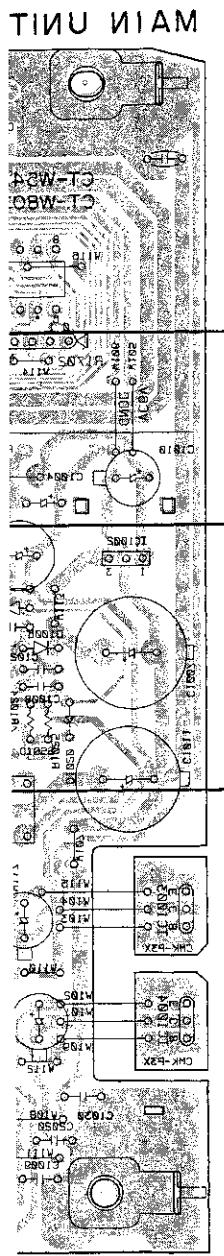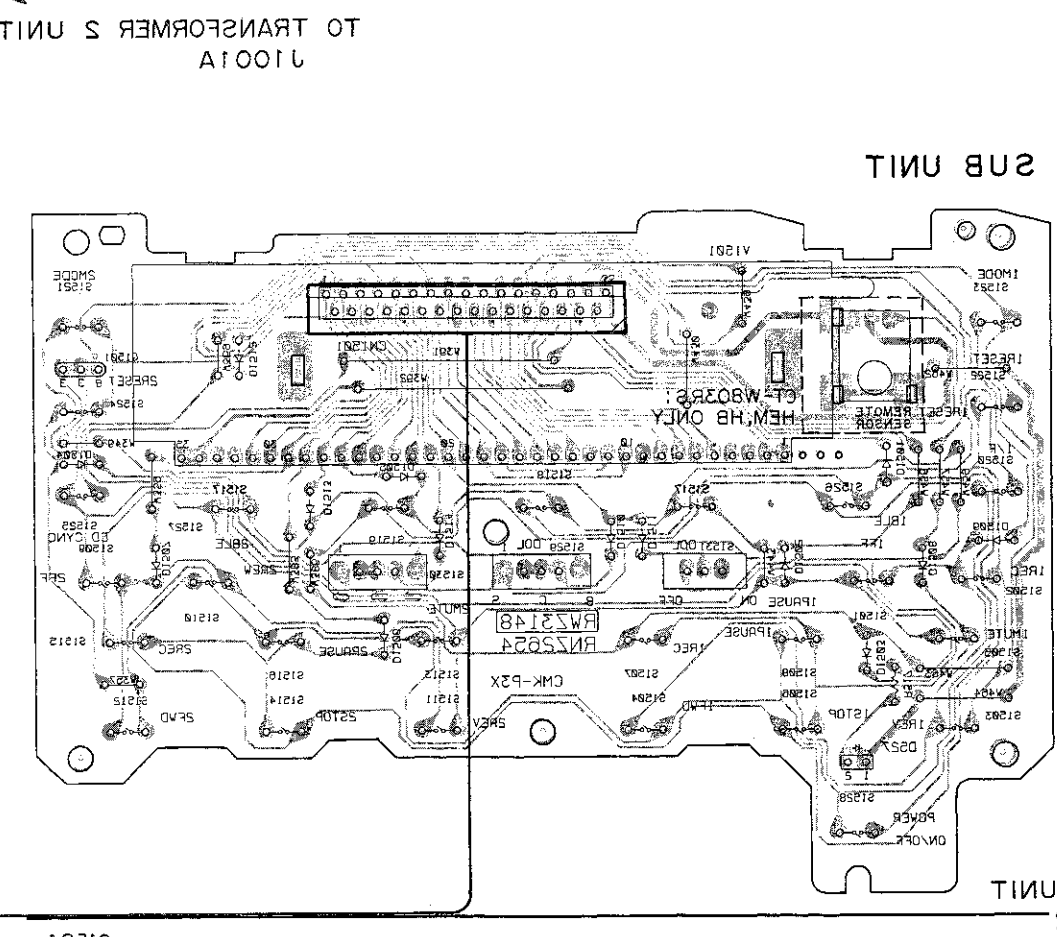

01501

e

4

3

2

1

e

2

4

3

2


1

2.1 EXPLODED VIEWS AND PACKING

1. EXTERIOR AND PACKING

Exterior

NOTE: Screws adjacent to ▼ mark on the product are used for disassembly.

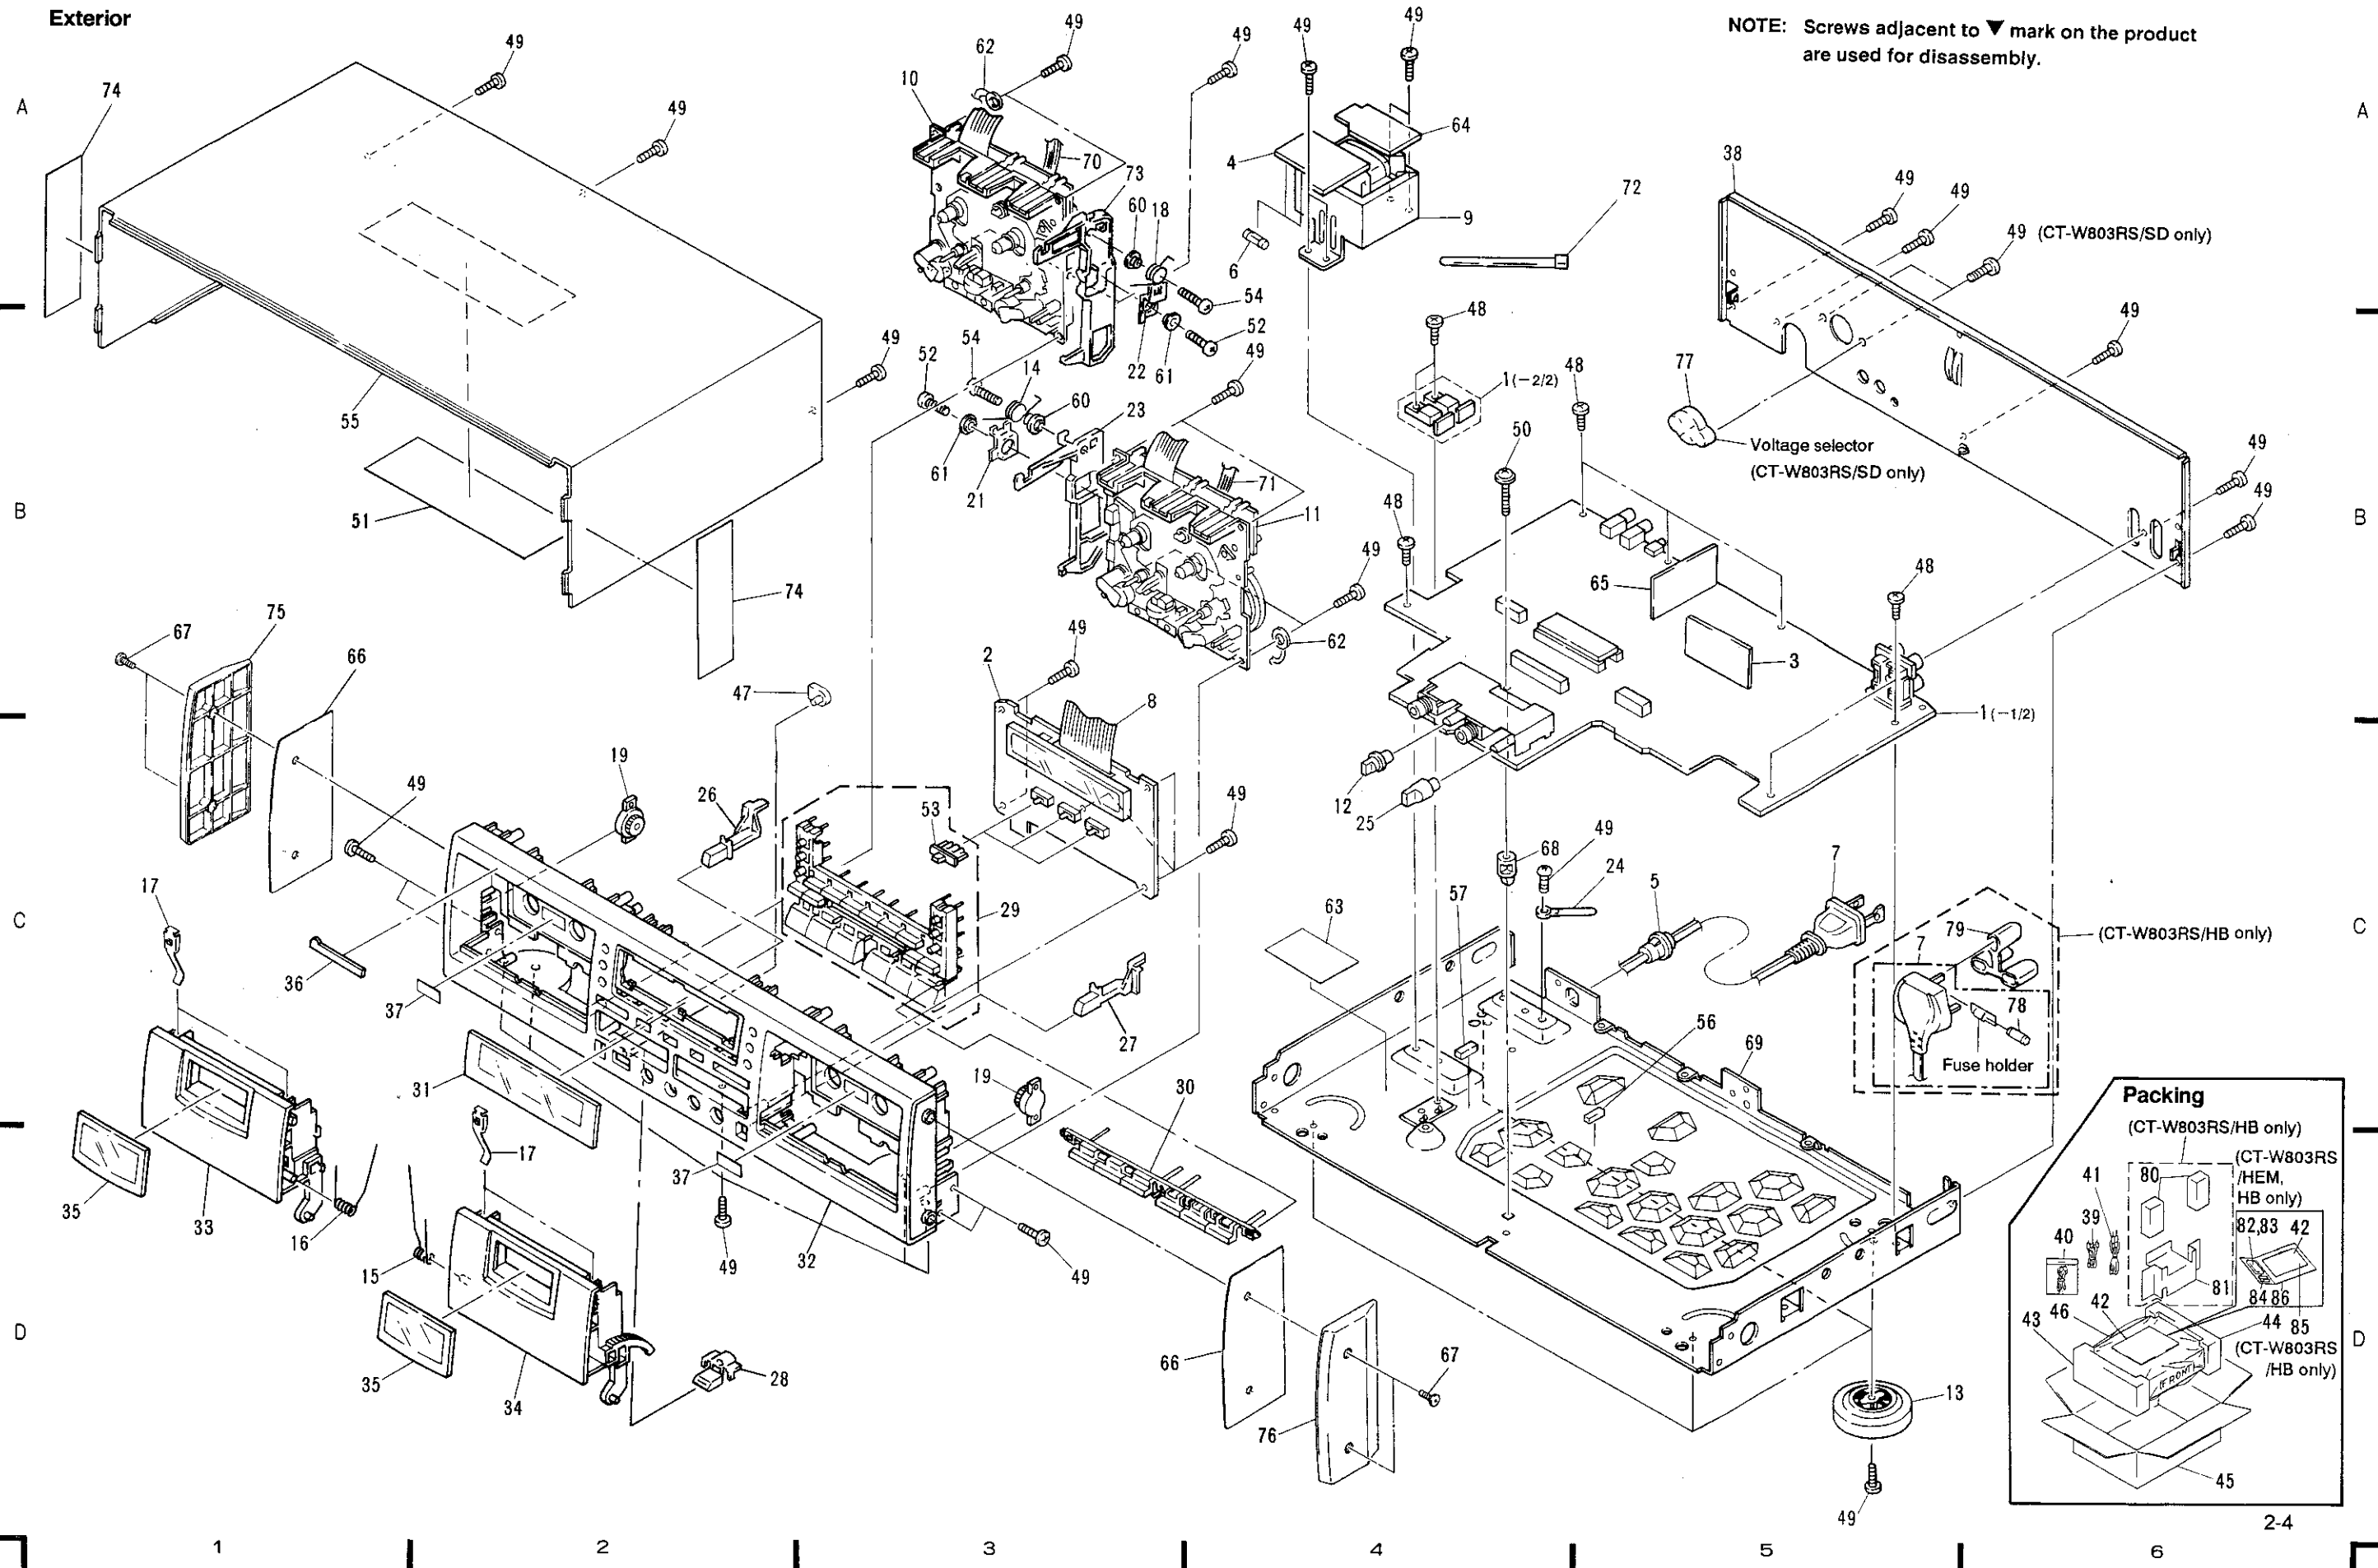

Packing

(CT-W803RS/HB only)

(CT-W803RS /HEM, HB only)

41 80 82,83 42

40 39 81 84 86

43 46 42 44 85

(CT-W803RS /HB only)

45

2-4

2. 1 AND 2 MECHANISM UNIT

