


Service Manual

PIONEER®
The Art of Entertainment

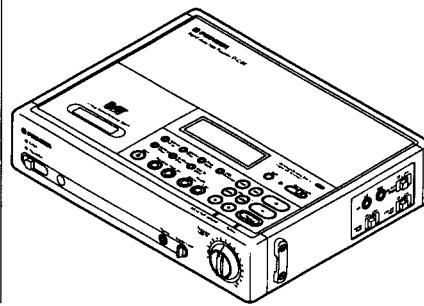

ORDER NO.
TRT1096

The chapter 1 of this Service Manual will not be reprinted. On your additional orders, we may supply only the chapter 2. For the chapter 1, please make copies and attach to the chapter 2 at your side if necessary.

DIGITAL AUDIO TAPE RECORDER **D-C88**

THIS MANUAL IS APPLICABLE TO THE FOLLOWING MODEL(S) AND TYPE(S).

Type	Model	Power Requirement	The voltage can be converted by the following method.
	D-C88		
IEM	○	AC230V	AC120/100V, *

*: The power supply voltage selector switch is on the bottom surface of the accessory AC adaptor.

CONTENTS

CHAPTER 1

1.1 SPECIFICATIONS	1-2
1.2 PANEL FACILITIES	1-3
1.3 DISASSEMBLY	1-7
1.4 LCD INFORMATION	1-8
1.5 IC INFORMATION	1-9
1.6 ADJUSTMENTS	1-24
1.7 FLOW CHART	1-37
1.8 PARTS LIST FOR PACKING AND EXPLoded VIEWS	1-43
1.9 PCB PARTS LIST	1-46

CHAPTER 2

2.1 PACKING AND EXPLODED VIEWS	2-3
2.2 SCHEMATIC AND PCB CONNECTION DIAGRAMS	2-9
2.3 BLOCK DIAGRAM	2-31

PIONEER ELECTRONIC CORPORATION

PIONEER ELECTRONICS SERVISE INC. P.O. Box 1760, Long Beach, California 90801, U.S.A.

PIONEER ELECTRONICS OF CANADA, INC. 300 Allstate Parkway Markham, Ontario L3R 0P2, Canada

PIONEER ELECTRONIC [EUROPE] N.V. Haven 1087 Keetberglaan 1, 9120 Melsele, Belgium

PIONEER ELECTRONICS AUSTRALIA PTY. LTD. 178-184 Boundary Road, Braeside, Victoria 3195, Australia, TEL: [03] 580-9911

© PIONEER ELECTRONIC CORPORATION 1995

H-DDX MAY 1995 Printed in Japan

CHAPTER 1

1.1 SPECIFICATIONS

Type	Rotating head digital audio tape recorder
Tape speed	16.3 mm/s (HS), 8.15 mm/s (SP), 4.075 mm/s (LP)
Recording time	(use of a standard 120-min tape) SP: Max. 120 min. LP: Max. 240 min. HS: Max. 60 min.
Number of channels	2 channels, stereo
Number of quantization bits	16 bits, linear 12 bits, nonlinear
Sampling frequencies	48 kHz (recording, playback) (SCMS provided) 44.1 kHz (recording, playback) 32 kHz (recording, playback) 96 kHz (only analog recording/playback)
Error correction method	Double-encoded Reed-Solomon code
Modulation system	8 – 10 conversion
Emphasis	Analog recording: Fixed to OFF Playback: Automatic switching
Heads:	AT-construction Sendust heads
Recording/Playback frequency response	HS: 5 Hz to 44 kHz SP: 5 Hz to 22 kHz LP: 5 Hz to 14.5 kHz
Signal-to-Noise ratio	90 dB or greater
Dynamic range	92 dB or greater
Total harmonic distortion	0.005% or less
Wow and flutter	Below measurable limits ($\pm 0.001\%$ W.PEAK)

● Unless otherwise listed, the output characteristics are the values for a sampling frequency of 48 kHz.

■ Analog Input/Output Terminals

Microphone input jack	Standard jack: 6 mm ϕ , reference input level: 3 mV (input impedance: 10 k Ω)
Line input terminals	RCA PIN; reference input level: 500 mV (input impedance: 50 k Ω)
Line output terminals	RCA PIN; reference output level: 500 mV (output impedance: 1 k Ω)
Headphone output jack	Standard stereo jack: 6 mm ϕ (2.5 mW, load impedance: 8 Ω)

■ Digital Input/Output Terminals

Coaxial input terminal	RCA PIN; 0.5 Vp-p (input impedance: 75 Ω)
Coaxial output terminal	RCA PIN; 0.5 Vp-p (output impedance: 75 Ω)
Optical input terminal	x 1

■ Power Supply and Other Specifications

Power supply	AC adapter
	Input AC 230 V/120 V/100 V (switchable), 50/60 Hz
	Output DC ± 11 V, +1200 mA, -400 mA
Battery pack	DC ± 7.2 V, +1800 mAh, -1100 mAh
(Battery continuous use time:	About 2 hours in SP mode EIAJ recording/playback)
Power consumption	20 W (recording/playback using the AC adapter) 24 W (charging with the AC adapter)
External dimensions	300 (width) x 58 (height) x 230 (depth) mm
Unit weight	2.7 kg (battery pack not included)

■ Accessory Functions

- Wide band mode (HS)
- Long play mode (LP)
- Legato link conversion (SP, LP modes)
- Skip title selection and music search
- Direct title selection
- Time skip
- Skip play
- Renumbering with TOC recording
- End mark recording, end search, blank search
- Auto ID recording, Q-code synchronized ID recording
- 7-mode counter
- Remaining tape display by automatic tape thickness calculation
- Digital peak margin display
- Recording after-monitoring
- Cue/Review (with fine cue/review)
- REC mute (automatic spacing)
- Automatic rewinding
- Operation key lock
- Microphone attenuator
- Microphone low-cut filter
- Automatic power-off (with battery pack use)
- Battery discharge indication (with battery pack use)
- Charge indication (with battery pack use)


■ Accessories

Remote control unit	1
Remote control unit batteries (IEC R03)	2
Audio cords	2
AC adapter	1
Battery pack	1
Shoulder belt	1
Soft case	1
Operating instructions	1
Warranty card	1

NOTE:

The specifications and design of this product are subject to change without notice, due to improvement.

1.2 PANEL FACILITIES

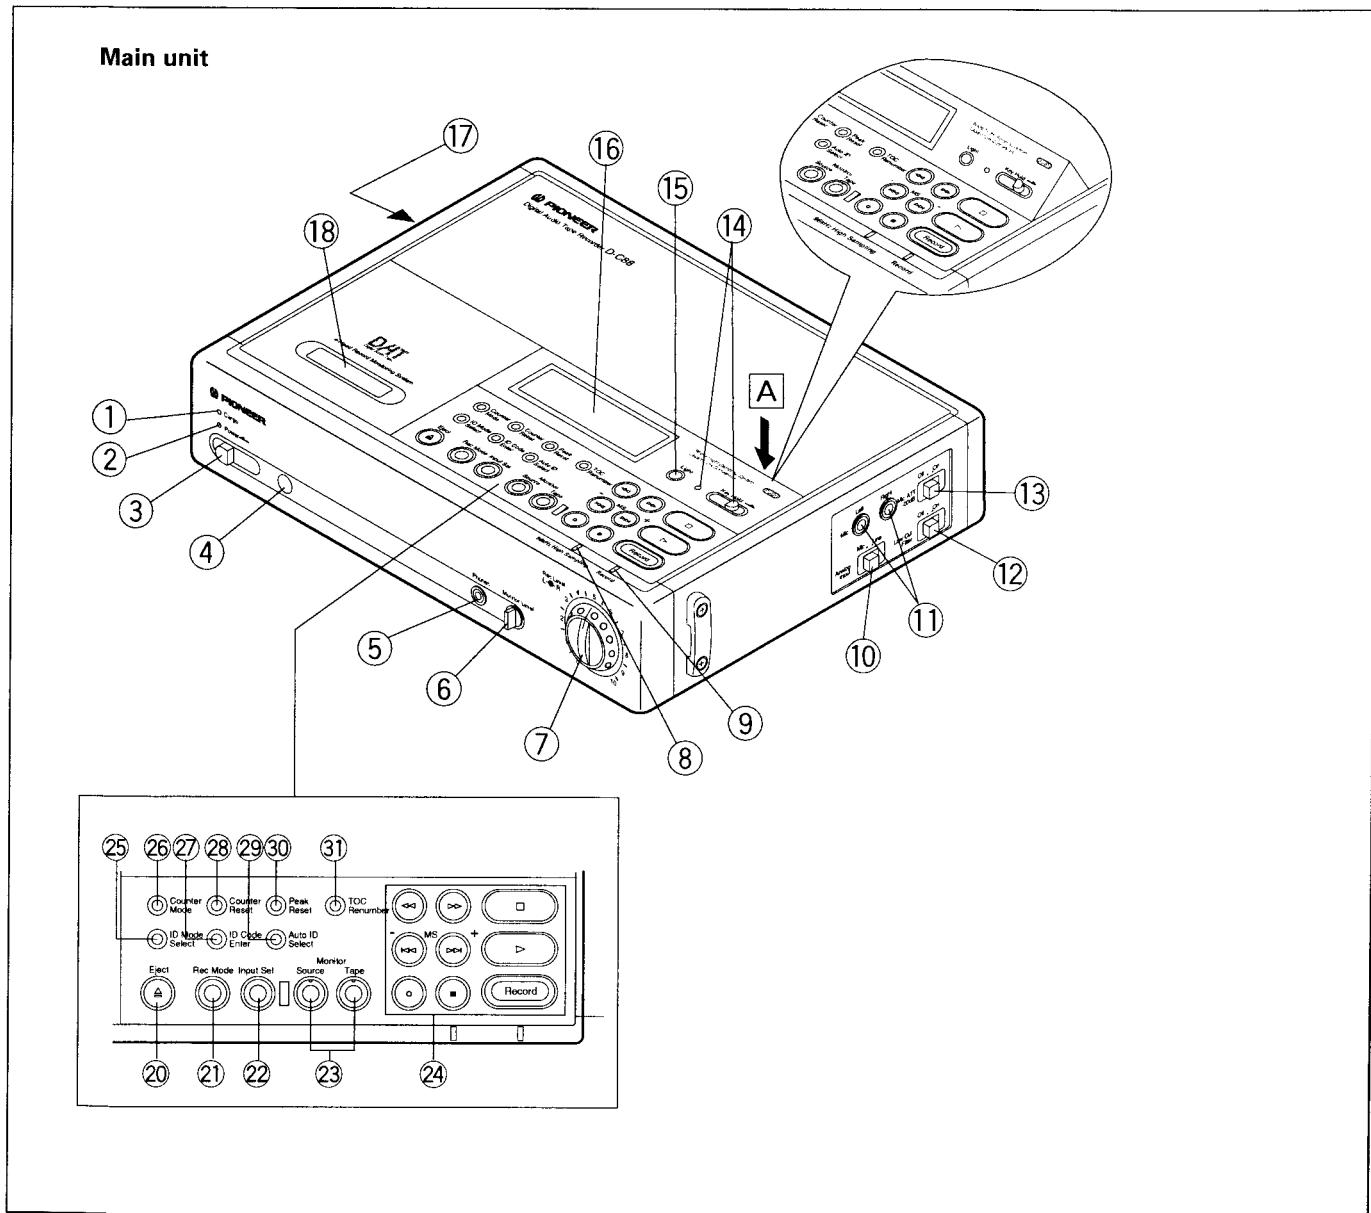

[A] When the **PUSH** part is pressed, the rear of the display panel is raised slightly. This can be grasped and pulled up by hand to an inclination of about 30°.

Main Unit

① Charge indicator (Charge)

When the AC adapter is connected while the accessory battery pack is inserted, and the power button of the main unit is switched off, charging of the battery pack will be started and the indicator will light up during charging. When charging has been completed, the indicator will start to flash.

② Power indicator (Power)

This lights when the power button is switched ON, and it goes out when the power button is switched OFF.

③ Power button (Power)

When this switch is slid in the direction of the arrow (left), the power is switched on, and when it is slid again in the same direction (left), the power is switched off.

When the unit has been in stop mode for about 6 minutes while the battery pack is being used, the power is switched off automatically (auto power OFF function).

The auto power OFF function can be cancelled.

④ Remote sensor window (SR)

This part receives the signals from the remote control. Operate the accessory remote control while it is pointed at this part.

⑤ Headphone jack (Phones)

⑥ Headphone level knob (Phones Level)

This is used to adjust the headphone volume.

⑦ Recording level knob (Rec Level L/R)

This is used to adjust the recording level at the time of analog signal input from a line source or a microphone. This is a double knob with the L channel on the outside and the R channel on the inside. The knob moves together, but individual operation is possible by holding one part and moving the other.

⑧ High sampling mode (96 kHz High Sampling)

This indicates HS mode (wide band mode) with a sampling frequency of 96 kHz.

⑨ Recording indicator (Record)

This indicates recording mode.

⑩ Microphone/Line selector switch (Analog Input Mic/Line)

This switches microphone input and line input.

⑪ Microphone jacks (Mic Left, Right)

⑫ Low cut filter switch (Low Cut Filter Off/On)

Set this switch to ON to avoid recording low frequencies like unwanted wind noise etc.

⑬ Microphone attenuator switch (Mic ATT Off/On)

This switch reduces the input sensitivity for the microphone. Set this switch to ON for recording loud sounds with the microphone.

⑭ Hold button/indicator (Key Hold)

When this button is slid in the direction of the arrow (to the right), the indicator lights and push buttons on the main unit will be made ineffective (remote control operation remains possible).

When the button is slid again in the same direction (to the right), the indicator goes out and push buttons will be made effective.

⑮ Light button (Light)

When this button is pressed, the display is lit, and when it is pressed again, the lighting goes out.

⑯ Display (page 1-6)

⑰ Battery pack compartment

⑱ Cassette holder

⑲ Eject button (Eject ▲)

This button opens the cassette holder.

⑳ Recording mode button (Rec Mode)

This button selects the sampling frequency at the time of recording with analog input (microphone, line). Each time the button is pressed, the frequency changes as shown below.

→ 48kHz(SP) → 96kHz(HS) → 32kHz(LP) → 44.1kHz(SP) →

At the time of digital input (coaxial, optical), the sampling frequency at the time of recording is decided by the input signal.

㉑ Input selection button (Input Sel)

This button switches the input terminals for the recording source. Each time the button is pressed, switching is done as shown below.

→ LINE/MIC → COAX → OPT →

LINE/MIC is switched by the microphone/line input selector.

㉒ Recording monitor button/indicator (Monitor Source, Tape)

This button switches the output signal at the time of recording.

Source: The input signal is output.

Tape: The playback of the recorded signal is output.

② Operation buttons

◀ : Rewind button

This rewinds the tape. When it is pressed during playback, review operation is executed.

▶ : Fast Forward button

This fast forwards the tape. When it is pressed during playback, cue operation is executed.

■ : Stop button

This stops the tape.

◀◀/MS-, ▶▶/MS+: Title selection buttons

These are used for music search.

▶ : Play button

This plays the tape and starts recording (after operation of the recording button).

○ : Mute button

This records a soundless section.

■ : Pause button

This is used to pause the tape during recording or playback. The tape starts again when the button is pressed once more.

Pause cannot be executed during fast forward or rewinding.

Record: Recording button

Recording mode (recording standby) is entered when this button is pressed, and the indicator will light.

Press the play button or the pause button to start recording.

③ ID mode selection button (ID Mode select)

This is used for subcode editing. Each time the button is pressed, the mode changes as follows.



④ Counter mode button (Counter Mode)

This is used to switch the counter indication.

⑤ ID code enter button (ID Code Enter)

This is used for subcode editing. The mode selected with the ID mode selection button is executed.


⑥ Counter reset button (Counter Reset)

When the counter mode is set to elapsed time (TIME COUNTER) mode and this button is pressed, the counter is reset to 0H 00M 00S.

⑦ Auto ID selection button (Auto ID Select)

At the time of recording: The start ID is recorded automatically.

At the time of playback: Skipping is done from the skip ID to the next start ID.

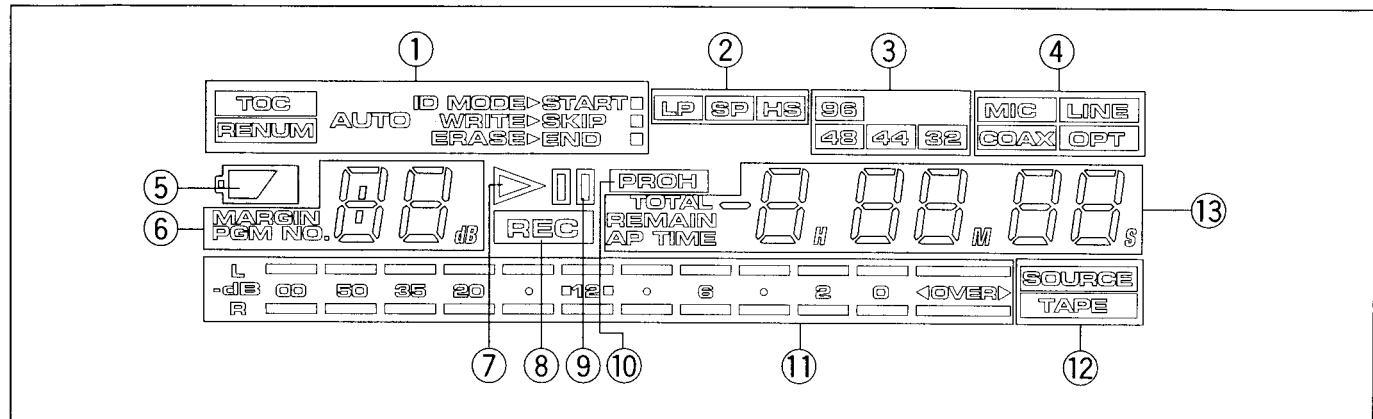

Display

① ID indicator

TOC: This indicates that the TOC has been read from the tape.

This indicator flashes during TOC writing and reading.

RENUM: This indicates that renumbering is being done.

AUTO: This indicates that automatic ID recording at the time of recording and skip play at the time of playback is ON.

▶ : This indicates the selected ID type.

■ : This indicates ID detection.

WRITE: This indicates ID recording mode.

ERASE: This indicates ID erase mode.

② Tape run mode indicator

LP: Long play (long-play mode)

SP: Standard play (standard mode)

HS: High sampling (wide-band mode)

③ Sampling frequency indicator

This indicates the present sampling frequency. It does not light up when the signal is interrupted at the time of digital input recording.

④ Input source indicator

MIC: Microphone jack input

LINE: Analog line input


COAX: Digital coaxial input

OPT: Digital optical input

⑤ Battery discharge indicator

This indicator starts to flash to notify that the battery is exhausted. Then the power supply will be automatically stopped after about 3 minutes of recording or playback have elapsed.

When power ON operation is executed again after power OFF, the display below will be shown, and only the eject operation will be possible.

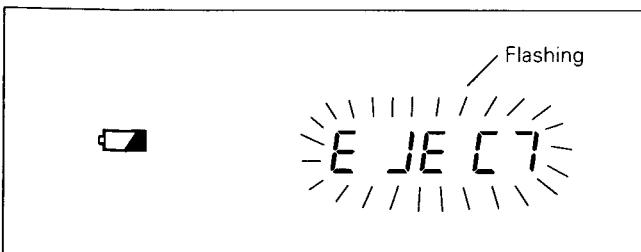

⑥ Margin/Program No. indicator

MARGIN: This indicates peak margin display. When the input level is exceeded at the time of analog input, 00 dB flashes.

PGM NO: This indicates program No. display. "EE" is displayed when the read-out area is detected. "bb" is displayed for the read-in area.

⑦ Play indicator (▶)

This indicates playback mode.

⑧ Recording indicator (REC)

This indicates recording mode.

⑨ Pause indicator (II)

This indicates a paused condition.

⑩ Recording prohibition indicator (PROH)

This lights when a recording prohibition signal (on the basis of SCMS) is given as input at the time of digital input recording (during standby or recording), at this time, the unit will enter recording standby status, and recording operation will become impossible.

⑪ Recording/Playback level meter

During recording, the input level peak value is indicated, and during playback and after-monitoring, the playback level is indicated.

OVER: This lights up with excessive input level of recording or excessive playback level of after-monitoring.

⑫ Monitor indicator

SOURCE: This indicates output of the input signal at the time of recording.

TAPE: This indicates playback output of the recorded signal at the time of recording.

NOTE:

The SOURCE/TAPE indication of the indicator may change automatically according to the operation mode.


⑬ Counter display

1.3 DISASSEMBLY

● REMOVAL OF EXTERNALLY INSTALLED PARTS

1. Remove the bottom cover. (8 screws ①)
2. Remove the battery cover from the side grille L.
3. Remove side grille L and side grille R. (Screw ②, 4 each)
(As these screws also fix the handle, the handle is removed together with the side grille.)
4. Remove the three slide knobs C.
5. Remove the rotary knobs A and B. Next, remove the front panel assembly. (4 screws ③)
6. Remove the rear panel. (3 screws ④)

7. Open the cassette door. (Insert a screwdriver or similar through the square hole at the right side of the mechanical unit as seen from the front, and lower the lever pushing the switch until it locks with a click.)
8. Remove the cassette door. (2 screws ⑤)
After removal of the screws, push the hinge on the right side of the door to the inside to disengage it from its bearing (following figure a), pull it out about 10 mm to the front (following figure b), and then shift the left hinge to the inside to remove it from the bearing and remove the door (following figure c).
9. Remove the aluminum panel A. (6 screws ⑥)
10. Remove the base assembly and the aluminum panel B. (5 screws ⑦)
11. Remove the earth lead wire. (1 screw ⑧)

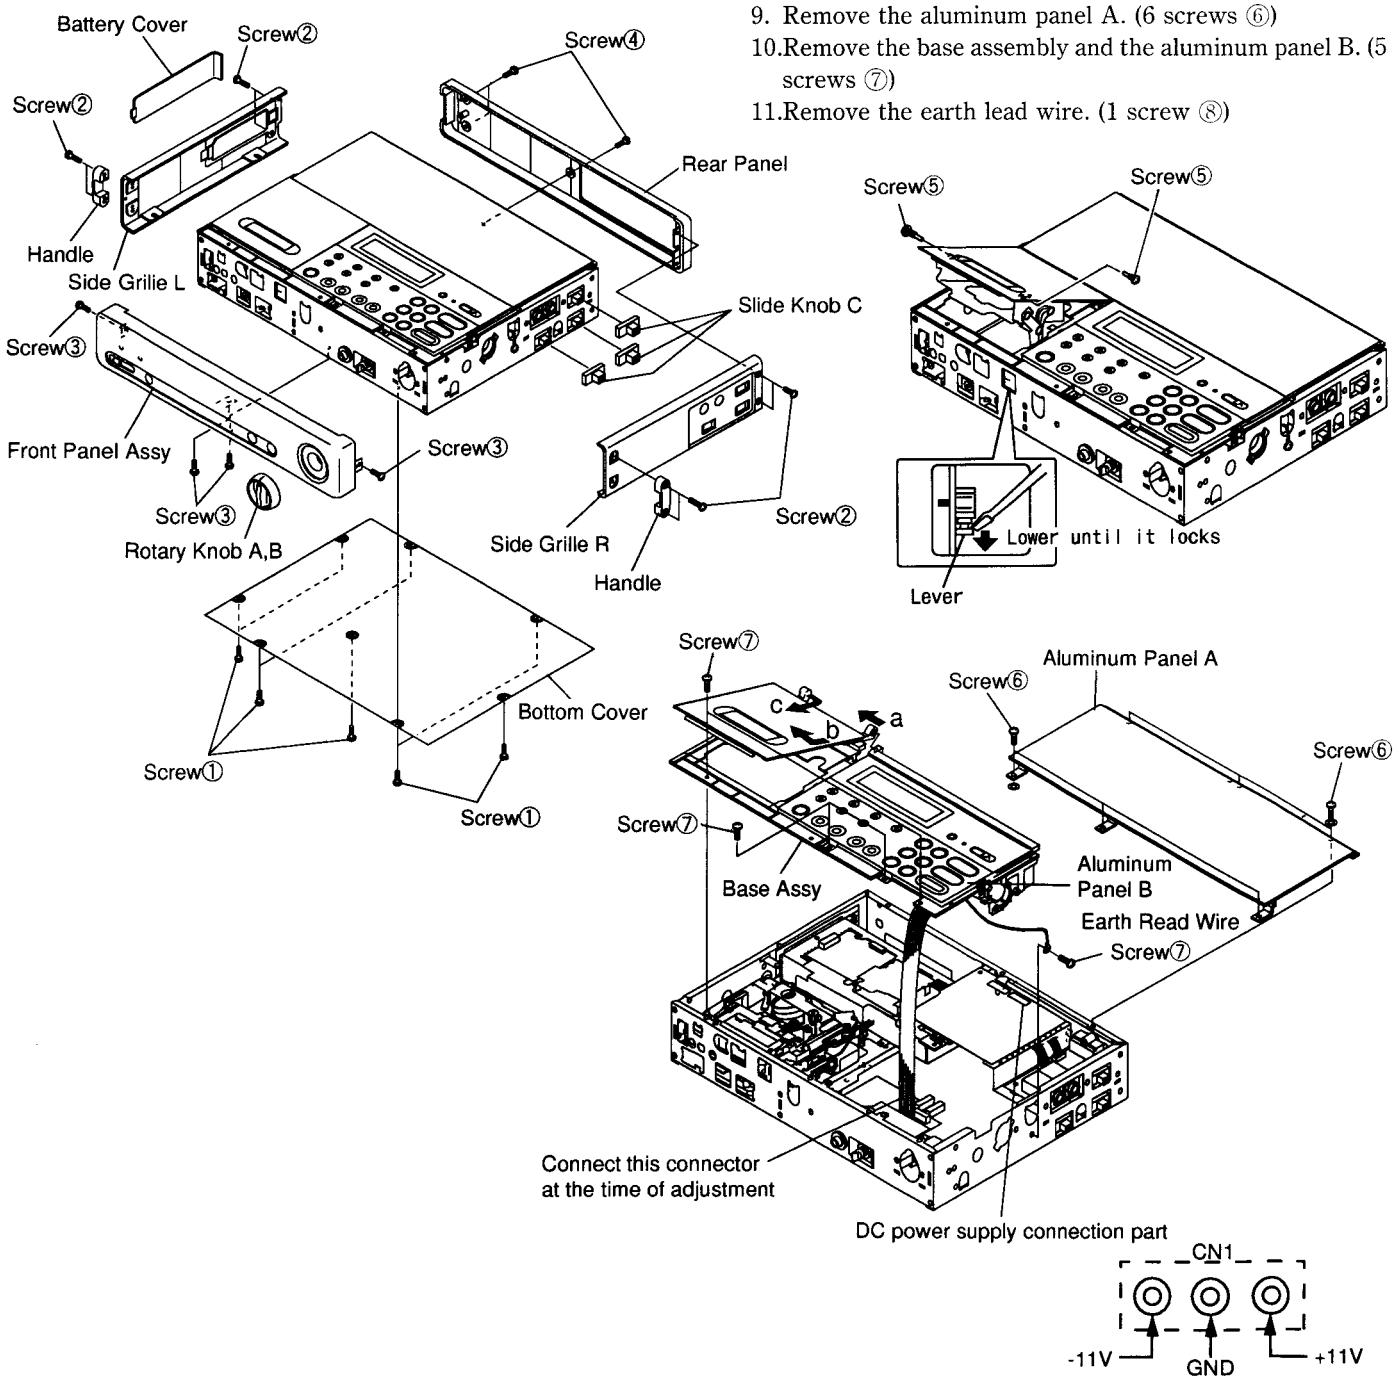


1.4 LCD INFORMATION


■ JAW1103 (V201 : DISPLAY UNIT)

- LCD


- Segment Assignment

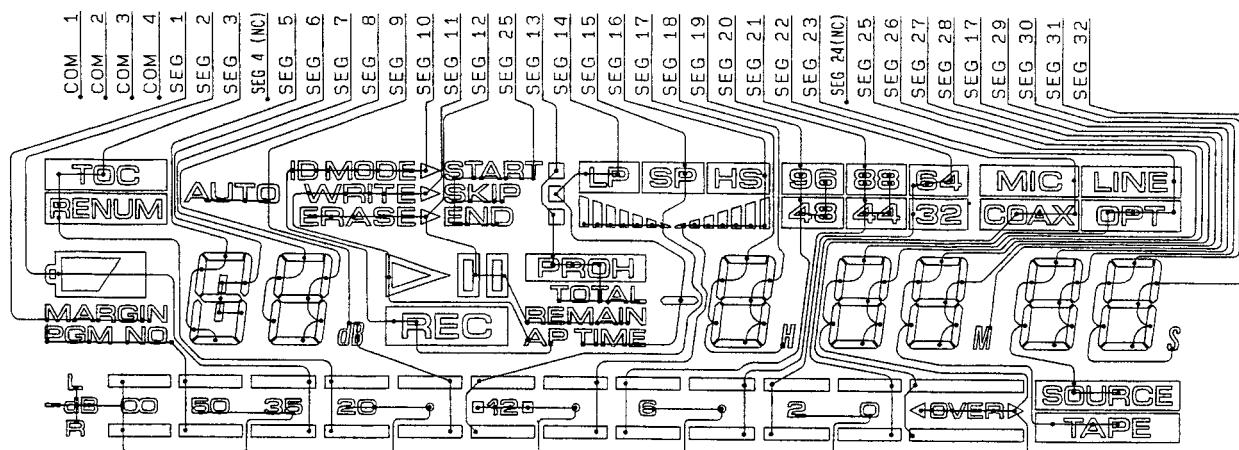

- Common Assignment

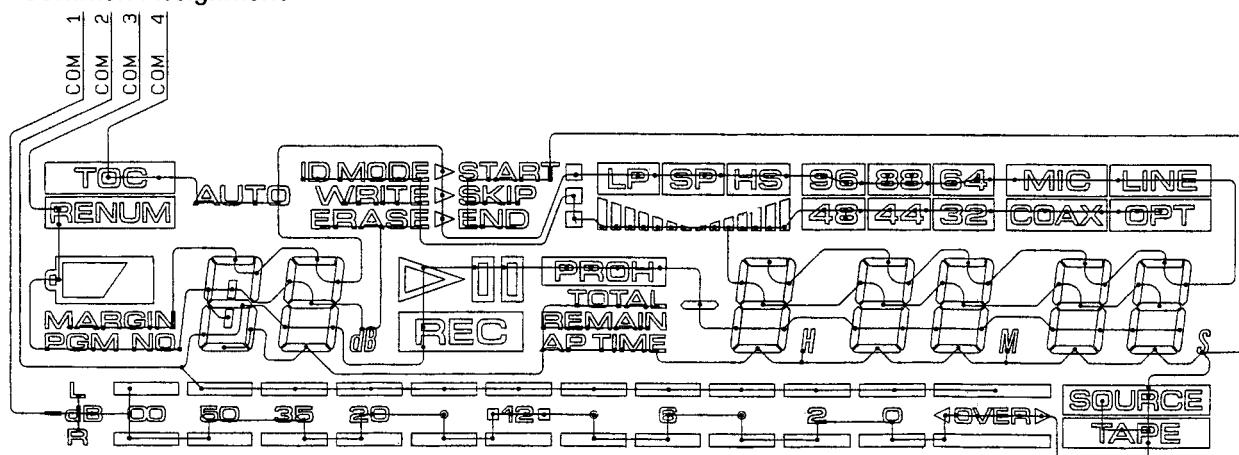

- Pin Assignment and Pin Connection

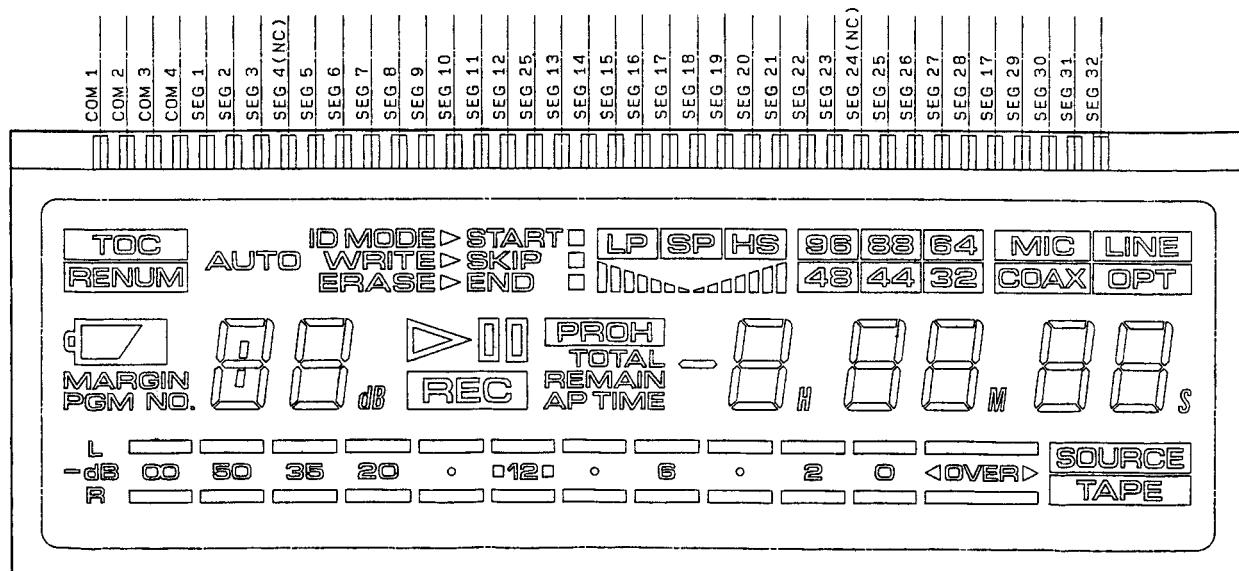

1.5 IC INFORMATION

- The information shown in the list is basic information and may not correspond exactly to that shown in the schematic diagrams.

■ PDG131A (IC512 : MOTHER UNIT)

● System Controller IC

● Pin Function

No.	Pin Name	I/O	Function	CPU
1	LPRUN	O	LP running mode monitor output terminal Connected to pin 44 of the gate array (PDB083A: IC517) and terminals A, B, C (pins 11, 10, 9) of the analog multiplexer (TC4053BF: IC602). Becomes "H" at the time of LP running mode (tape speed = 4.075 mm). ("L" at the time of SP, WSP, WLP running mode)	PF3
2	xMNTR	O	After monitor control output signal Connected to SEL (pin 1) of the input expansion IC (74HC157). Switching is executed between use of the signal of the master signal processing LSI (HD49226AFS: IC505) and use of the signal of the slave signal processing LSI (HD49226AFS: IC509). H: Master signal processing LSI, L: Slave signal processing LSI	PF4
3	CTRLS	O	Microcomputer data transfer mode input control signal/Microcomputer command control signal output (for slave signal processing LSI) Connected to the CTRL terminal (pin 2) of the slave signal processing LSI (HD49226AFS: IC509).	PF5
4	SELB	O	Input expansion IC input selection output terminal A Connected to the SELA pin (pin 14) of the input expansion IC (74HC153). By combination with SELB (pin 5), one of four 4-bit input combinations is selected.	PF6
5	SELA	O	Input expansion IC input selection output terminal B Connected to the SELB pin (pin 14) of the input expansion IC (74HC153). By combination with SELA (pin 5), one of four 4-bit input combinations is selected.	PF7
6	ADPD	O	A/D converter low power consumption mode control output terminal Connected to the PD pin (pin 10) of the A/D converter (AK5340: IC905). Under consideration of battery use, low power consumption mode is used when the A/D converter is not used. Low power consumption mode with "H".	PD0
7	LPMODE	O	LP mode selection output terminal Connected to the LP terminal (pin 60) of the master signal processing LSI (HD49226AFS: IC505) and the LP terminal (pin 60) of the slave signal processing LSI (HD49226AFS: IC509). The operation mode of both signal processing LSIs at the time of LP playback mode is selected. This becomes "H" at the time of WSP mode. (Half-speed playback is executed in WLP mode.) In LP, SP, and WSP mode it becomes "L". (In LP mode, double scan LP playback is executed, and in SP and WSP mode, the status if this terminal has no influence onto the operation.)	PD1
8	LVDATA	I	Level meter data input terminal Connected to 4Y (pin 12) of the input expansion IC (74HC157). By selection of xMNTR (pin 2), level meter data are given as input from the LVDATA terminal (pin 97) of the master signal processing LSI (HD49226AFS: IC505) or the slave signal processing LSI (HD49226AFS).	PD2
9	LVCK	O	Level meter data clock output terminal Connected to the LVCK terminal (pin 96) of the master signal processing LSI (HD49226AFS: IC505) and the LVCK terminal (pin 96) of the slave signal processing LSI (HD49226AFS: IC509). As level meter reading is executed once every half frame, the shift clock is generated by 8 pulses each in the order of Lch and Rch. (Every frame in WSP mode.)	PD3

No.	Pin Name	I/O	Function	CPU
10	QDATA	I	CD Q data input terminal Connected to the QDATA terminal (pin 68) of the master signal processing LSI (HD49226AFS: IC505).	PD4
11	QDCK	O	CD Q data shift clock output terminal Connected to the QDCK terminal (pin 67) of the master signal processing LSI (HD49226AFS: IC505). The shift clock for reading the CD Q data for each frame is generated by 8 pulses each in the order of TNO and INDEX.	PD5
12	PBMUTE	O	Playback mute control output terminal Connected to the mute terminal (pin 1) of the master signal processing LSI (HD49226AFS: IC505) and the mute terminal (pin 1) of the slave signal processing LSI (HD49226AFS: IC509). Playback output signal muting (digital muting) ON/OFF control is executed. Muting ON with "H".	PD6
13	zSRVRST	O	Servo LSI reset output terminal Connected to the RESET terminal (pin 61) of the servo LSI (HD49228FS: IC601). The servo LSI is reset at the time of power ON/OFF and when switching from search mode to another mode.	PD7
14	Y1	I	Input terminal 1 of the input expansion IC output SELA = L, SELB = L: BRACK (drum brake control monitor) L, H: ENCO (mechanism encoder output BIT0) H, L: PLLLOCK (DPLOCK monitor at the time of PLAY, PLLLOCK monitor at the time of high-speed search) H, H: xHALFIN (switch input for cassette half detection)	PC0
15	Y2	I	Input terminal 2 of the input expansion IC output SELA = L, SELB = L: ATFM (ATF monitor at the time of PLAY, HUNT monitor at the time of high-speed search) L, H: ENC1 (mechanism encoder output BIT1) H, L: DLOCK (drum lock monitor) H, H: RECINH (switch input for detection of the recording prohibition confirmation hole)	PC1
16	Y3	I	Input terminal 3 of the input expansion IC output SELA = L, SELB = L: ATFDET (ATFDET monitor at the time of PLAY, HOLD monitor at the time of high-speed search) L, H: ENC2 (mechanism encoder output BIT2) H, L: CRLOCK (capstan, reel lock monitor) H, H: xLDEND (switch input for cassette control loading end detection)	PC2
17	Y4	I	Input terminal 4 of the input expansion IC output SELA = L, SELB = L: PLTL (PILOT level status monitor) L, H: ENC3 (mechanism encoder output BIT3) H, L: RF (RF signal yes/no monitor) H, H: THIN (switch input for thin tape detection)	PC3
18	DMUTE	O	Double speed digital out control output signal Digital out prohibition with "H".	PC4
19	LMUTE	O	Line mute control output terminal Line muting (analog muting) ON/OFF is executed. Muting ON with "H".	PC5
20	TEST	O	Data strobe LSI test mode control output terminal Connected to the TEST terminal (pin 54) of the master data strobe LSI (HD49229: IC903) and the TEST terminal (pin 54) of the slave data strobe LSI (HD49229: IC903). Becomes "H" at the time of VCO free-run adjustment mode (at the time of test mode).	PC6

No.	Pin Name	I/O	Function	CPU
21	LVDATAM	I	Master signal processing LSI level meter data input terminal Connected to the LV DATA terminal (pin 97) of the master signal processing LSI (HD49226AFS: IC505). The level meter data are given as input. Only for the master signal processing LSI.	PC7
22	xSER	O	Master data strobe LSI search mode control output terminal Connected to the SEARCH terminal (pin 1) of the master data strobe LSI (HD49229: IC904). Becomes "L" in FF, REW, and other search running mode. At this time, the TEST terminal must be "L".	PH0
23	MODE1	O	RF amplifier operation mode switching output terminal 1 Connected to the MODE1 terminal (pin 42) of the master RF amplifier IC (HD12154MA: IC301) and pin 1 of the gate array (PDB083A: IC517). The AND output with RP (pin 25) is connected to the MODE1 terminal (pin 42) of the slave RF amplifier IC (HA12154MA: IC201). Control is executed for the second amplifier of the RF amplifier and the equalizer.	PH1
24	MODE2	O	RF amplifier operation mode switching output terminal 2 Connected to the MODE2 terminal (pin 41) of the slave RF amplifier IC (HA12154MA: IC201) and pin 2 of the gate array (PDB083A: IC517). Control is executed for the second amplifier of the RF amplifier and the equalizer.	PH2
25	RP	O	Master RF amplifier recording/playback mode switching output terminal The AND output of the RECPB terminal (pin 24) of the master signal processing LSI (HD49226AFS: IC505) is connected to the RECPB terminal (pin 39) of the master RF amplifier IC (HA12154MA: IC301). Master RF amplifier IC recording/playback mode switching is executed. The output from this microcomputer is for protection.	PH3
26	WSMODE	O	Audio block double speed switching output terminal Connected to the clock generation circuit and pin 3 of the master/slave switching timing generation IC (PDB083A: IC517). A/D, D/A block switching is executed according to the operation mode. This becomes "H" at the time of WSP, WLP mode.	PH4
27	xDARST	O	D/A converter reset output terminal This becomes "L" at the time of power ON, Fs, REC/PB switching.	PH5
28	OCSL	O	Digital input optical/coaxial selection output terminal H: Optical input L: Coaxial input	PH6
29	MLE	O	D/A converter mode set latch output terminal Connected to the LATCH terminal (pin 20) of PD2029A (IC906). The transfer data from the microcomputer are latched with the rising edge.	PH7
30	xRST	I/O	System reset terminal "L" level active	RST
31	EXTAL	I	Ceramic connection terminal (input) for system clock oscillation An 8.38 MHz ceramic oscillator is connected between this pin and pin 32.	EXTAL
32	XTAL	O	Ceramic connection terminal (output) for system clock oscillation	XTAL
33	VSS	-	GND terminal Connected to GND.	VSS
34	NC	O	Not used terminal	TX
35	NC	I	Not used terminal	TEX
36	AVSS	-	GND terminal of the A/D converter Connected to GND.	AVSS

No.	Pin Name	I/O	Function	CPU
37	AVREF	I	A/D converter reference voltage input terminal Connected to the 5 V line.	AVREF
38	xOPRST	O	Submicrocomputer reset output terminal Submicrocomputer (PDG130A: IC201) reset with "L". "L" output at the time of power ON and at the time of a communication error.	PA0/AN0
39	xOPREQ	O	Communication request output terminal to the submicrocomputer. Output of communication request signals to the submicrocomputer PDG130A (IC201).	PA1/AN1
40	xMDMHSP	O	Mode motor extreme high speed control output terminal Extreme high speed with "L". Used only at the time of EJECT.	PA2/AN2
41	AN3	I	Input terminal 1 for analog input expansion IC output Used as AN3 (analog input). AINSEL (74HC595 pin 2) = H: Battery minus side voltage monitor L: Battery plus side temperature monitor	PA3/AN3
42	AN4	I	Input terminal 2 for analog input expansion IC output Used as AN4 (analog input). AINSEL (74HC595 pin 2) = H: Battery plus side voltage monitor L: Battery minus side temperature monitor	PA4/AN4
43	AN5	I	Input terminal 3 for analog input expansion IC output Used as AN5 (analog input). AINSEL (74HC595 pin 2) = H: AC plus side voltage monitor L: AC minus side voltage monitor	PA5/AN5
44	TTOP	I	Input terminal of the tape top sensor output Used as AN6 (analog input).	PA6/AN6
45	TEND	I	Input terminal of the tape end sensor output Used as AN7 (analog input).	PA7/AN7
46	FGS	I	Supply side reel FG input terminal Used as interrupt terminal (CINT).	PB0/CS0
47	CTRLM	O	Microcomputer data transfer mode input control signal/Microcomputer command control signal output terminal (for master signal processing LSI) Connected to the CTRL terminal (pin 2) of the master signal processing LSI (HD49226AFS: IC505) and the CTRL terminal (pin 3) of the servo LSI (HD49228FS: IC601).	PB1/CS0
48	CCK	O	Serial data transfer clock output terminal Used as SCK0 terminal. Connected to the shift clock input terminal of devices (master signal processing LSI, slave signal processing LSI, servo LSI, submicrocomputer, D/A converter) controlled by serial communication from the microcomputer. The shift clock cycle is 3.8 us, and the interval cycle is 61.1 us.	PB2/SCK0
49	CDAO	O	Serial data input terminal (Matched to the terminal names on the signal processing LSI side. The data I/O direction is opposite to the terminal name.) Used as SI0 terminal. Connected to the serial data output terminal of devices (master signal processing LSI, slave signal processing LSI, submicrocomputer) controlled by serial communication from the microcomputer.	PB3/SI0
50	CDAI	O	Serial data output terminal (Matched to the terminal names on the signal processing LSI side. The data I/O direction is opposite to the terminal name.) Used as SO0 terminal. Connected to the serial data output terminal of devices (master signal processing LSI, slave signal processing LSI, submicrocomputer, D/A converter) controlled by serial communication from the microcomputer.	PB4/SO0

No.	Pin Name	I/O	Function	CPU
51	SCK1	O	Serial data transfer clock output terminal Used as SCK1 terminal. Connected to the SCK terminal (pin 11) of the output expansion IC (74HC595). The serial clock cycle is 1.91 us.	PB5/SCK1
52	xTEST	I	Test mode input terminal Test mode with "L".	PB6/SO1
53	SDAO1	O	Serial data output terminal Used as SO1 terminal. Connected to the serial input terminal of the expansion IC (74HC595).	PB7/SO1
54	FSYNCM	I	Master frame sync signal input terminal Connected to the FSYNC terminal (pin 94) of the master signal processing LSI (HD49226AFS: IC505). This is a pulse signal with a duty of 50% and a cycle of 30 ms at the time of SP mode, 60 ms at the time of LP mode, and 15 ms at the time of WSP mode.	PE0/EC0
55	FSYNCS	I	Slave frame sync signal input terminal Connected to the FSYNC terminal (pin 94) of the slave signal processing LSI (HD49226AFS: IC509). The cycles are the same as for FSYNCM, but the phase is normally 90x delayed. The same phase is obtained at the time of transient status and in digital input unlock status.	PE1/EC1
56	xMIC	I	Analog input switching switch input terminal H: Line input L: Microphone input	PE2/RMC
57	xPWSW	I	Input terminal for power switch detection Normally used as PE3 terminal. Power up is monitored in the main loop, and the power ON/OFF routine is started. Used as interrupt terminal (NMI) at the time of sleep mode (power OFF status with battery only). The power ON processing routine is started by an interrupt.	PE3/NMI
58	PADJ	O	TACH adjustment voltage output terminal Used as PWM output terminal.	PE4/PWM
59	xOUTCTL	O	Output expansion IC output enable control terminal Connected to the G terminal (pin 13) of the output expansion IC (74HC595). Output enable by "L".	PE5/T0/ADJ
60	xOPACK	I	Input terminal for permission of communication from the submicrocomputer Used as interrupt terminal (INT0).	PI0/INT0
61	CFG	I	Capstan FG input terminal The rising edge is monitored with timer interrupt processing every 1.95 ms, and this is used for capstan emergency check.	PI1/INT1
62	SWHM	I	Switching pulse input terminal Used as interrupt terminal (INT2).	PI2/INT2
63	FGT	I	Take-up side reel FG input terminal Used as interrupt terminal (INT3).	PI3/INT3
64	x256	O	256/384Fs clock control output terminal Connected to the CMODE terminal (pin 12) of the A/D converter (AK5340: IC905), the C terminal (pin 17) of the D/A converter (PD2029A: IC906), and pin 43 of the master/slave switching generation IC (PDB083A: IC517). Becomes "H" at the time of Fs = 32 kHz mode. (Also becomes "H" at the time of WSP/WLP mode with Fs = 64 kHz.)	PI4

No.	Pin Name	I/O	Function	CPU
65	xDBCK	O	Master clock simultaneous oscillation selection control output terminal Simultaneous oscillation of the master clock at the time of $F_s = 48/32$ kHz and the master clock at the time of $F_s = 44$ kHz. Simultaneous oscillation with "L". Becomes "L" at the time of F_s switching and at the time of digital input unlock.	PI5
66	x4844PB	O	Master clock selection control output terminal Connected to the clock generation circuit and pin 42 of the master/slave switching generation IC (PDB083A: IC517). H: Master clock at the time of $F_s = 44$ kHz L: Master clock at the time of $F_s = 48/32$ kHz	PI6
67	DIN	O	Digital input recording sound mode monitor output terminal Becomes "H" at the time of digital input mode. Used for mute processing at the time of RX PLL unlock.	P17
68	BSOLON	O	Brake solenoid control output terminal Execution of brake solenoid ON/OFF control. Brake ON with "H".	PG0
69	xBSOLPWR	O	Brake solenoid power control output terminal Execution of brake solenoid power control. Becomes "L" when the brake starts to be applied. High power with "L".	PG1
70	EMP	O	Emphasis control output terminal Emphasis ON with "H".	PG2
71	OUTLAT	O	Output expansion IC outlatch output terminal Connected to the RCK terminal (pin 12) of the output expansion IC (74HC595). The transfer data from the microcomputer are latched with the rising edge.	PG3
72	VDD	-	Positive power supply terminal Connected to the 5 V line.	VDD
73	NC	-	Not used terminal	NC
74	xMDMCW	O	Mode motor CW direction control output terminal CW direction ON with "L".	PG4
75	xMDMCCW	O	Mode motor CCW direction control output terminal CCW direction ON with "L".	PG5
76	xMDMSPD	O	Mode motor speed control output terminal H: Low speed L: High speed	PG6
77	xTLED	O	Tape top/end sensor LED control output terminal LED ON/OFF control is executed for the tape top/end sensor. Flashes with a cycle of 3.9 ms.	PG7
78	CMCW	O	Capstan motor rotation direction control output terminal The rotation direction of the capstan motor is controlled. CW direction with "H".	PF0
79	xDMON	O	Drum motor control output terminal Drum motor ON/OFF control is executed. Drum motor ON with "L".	PF1
80	xCMON	O	Capstan motor control output terminal Capstan motor ON/OFF control is executed. Capstan motor ON with "L".	PF2

■ PDG130A (IC201 : DISPLAY UNIT)

● Sub System Controller IC

● Pin Function

No.	Pin Name	I/O	Function	CPU
1	SEG14	O	LCD segment signal output terminal 14	PG1/SEG18
2	SEG15	O	LCD segment signal output terminal 15	PG2/SEG17
3	SEG16	O	LCD segment signal output terminal 16	PG3/SEG16
4	SEG17	O	LCD segment signal output terminal 17	SEG15
5	SEG18	O	LCD segment signal output terminal 18	SEG14
6	SEG19	O	LCD segment signal output terminal 19	SEG13
7	SEG20	O	LCD segment signal output terminal 20	SEG12
8	SEG21	O	LCD segment signal output terminal 21	SEG11
9	SEG22	O	LCD segment signal output terminal 22	SEG10
10	SEG23	O	LCD segment signal output terminal 23	SEG9
11	NC	O	Not used	SEG8
12	SEG25	O	LCD segment signal output terminal 25	SEG7
13	SEG26	O	LCD segment signal output terminal 26	SEG6
14	SEG27	O	LCD segment signal output terminal 27	SEG5
15	SEG28	O	LCD segment signal output terminal 28	SEG4
16	SEG29	O	LCD segment signal output terminal 29	SEG3
17	SEG30	O	LCD segment signal output terminal 30	SEG2
18	SEG31	O	LCD segment signal output terminal 31	SEG1
19	SEG32	O	LCD segment signal output terminal 32	SEG0
20	COM1	O	LCD common signal output terminal 1	COM3
21	COM2	O	LCD common signal output terminal 2	COM2
22	COM3	O	LCD common signal output terminal 3	COM1
23	COM4	O	LCD common signal output terminal 4	COM0
24	VLC1	O	LCD bias power supply terminal 1	VLC1
25	VLC2	O	LCD bias power supply terminal 2	VLC2
26	VLC3	O	LCD bias power supply terminal 3	VLC3
27	VL	O	Cut-off control terminal for LCD	VL
28	RMSIG	I	Remote control signal input terminal The pulse cycle is measured automatically by the remote control reception circuit.	RMC

No.	Pin Name	I/O	Function	CPU
29	xOPREQ	I	Input terminal for communication request signals from the main microcomputer Connected to the PA1 terminal (pin 39) of the main microcomputer (PDG131A: IC512). The communication request signals from the main microcomputer are given as input by interrupt.	INT
30	XTAL	O	Ceramic output terminal for system clock oscillation	XTAL
31	EXTAL	I	Ceramic input terminal for system clock oscillation A 4.19 MHz ceramic oscillator is connected between this pin and pin 30.	EXTAL
32	xOPRST	I	System reset terminal Connected to the PA1 terminal (pin 38) of the main microcomputer (PDG131A: IC512). At the time of occurrence of a communication error, a reset signal is given as input from the main microcomputer.	RST
33	NC	—	Not used terminal Connected to VDD.	NC
34	VD5	—	Power supply voltage terminal	VDD
35	KEY0	I	Key scan data input terminal 0 Used as A/D converter.	AD0/PIO
36	KEY1	I	Key scan data input terminal 1 Used as A/D converter.	AD1/PI1
37	KEY2	I	Key scan data input terminal 2 Used as A/D converter.	AD2/PI2
38	KEY3	I	Key scan data input terminal 3 Used as A/D converter.	AD3/PI3
39	KEY4	I	Key scan data input terminal 4 Used as A/D converter.	AD4/PB0
40	KEY5	I	Key scan data input terminal 5 Used as A/D converter.	AD5/PB1
41	NC	O	Not used terminal	AD6/PB2
42	NC	O	Not used terminal	AD7/PB3
43	NC	—	Not used terminal	NC
44	OPCK	I	Serial data transfer clock input terminal The clock for serial communication, put out by the main microcomputer, is given as input. The clock cycle is 3.818 fs.	PX0/SC
45	OPDAO	O	Serial data output terminal Serial communication data are put out to the main microcomputer.	PX1/SO
46	OPDAI	I	Serial data input terminal Serial communication data are given as input from the main microcomputer.	PX2/SI
47	EROMCK	O	EEPROM control clock output terminal Connected to the CK terminal (pin 4) of the EEPROM (S-2914AIF10: IC202). The data transfer clock with the EEPROM is put out.	PA0
48	xSOULED	O	Output terminal for SOURCE LED lighting	PA1


No.	Pin Name	I/O	Function	CPU
49	xTAPLED	O	Output terminal for TAPE LED lighting	PA2
50	x96KLED	O	Output terminal for 96K LED lighting	PA3
51	xREC LED	O	Output terminal for REC LED lighting	PF0
52	xHLD LED	O	Output terminal for KEY HOLD LED lighting	PF1
53	xLEDEL	O	Output terminal for EL LED lighting	PF2
54	NC	O	Not used terminal	PF3
55	EROMSO	O	EEPROM transfer data output terminal Connected to the DI terminal (pin 5) of the EEPROM (S-2914AIF10: IC202). Transfer data to the EEPROM are put out.	PE0
56	NC	O	Not used terminal	PE1
57	EROMCS	O	EEPROM chip selection signal output terminal Connected to the CS terminal (pin 3) of the EEPROM (S-2914AIF10: IC202).	PE2
58	NC	O	Not used terminal	PE3
59	xOPACK	O	Output terminal for the communication permission signal to the main microcomputer Connected to the INT0 terminal (pin 60) of the main microcomputer (PDG131A: IC512). Output of the communication permission signal to the main CPU.	PYO
60	NC	O	Not used terminal	PY1/PWM
61	NC	I	Not used terminal Connected to VSS.	PY2/WP
62	EROMSI	I	EEPROM transfer data input terminal Connected to the DO terminal (pin 6) of the EEPROM (S-2914AIF10: IC202). The transfer data from the EEPROM are given as input.	PY3/EC
63	SEG1	O	LCD segment signal output terminal 1	PD0/SEG31
64	SEG2	O	LCD segment signal output terminal 2	PD1/SEG30
65	SEG3	O	LCD segment signal output terminal 3	PD2/SEG29
66	NC	O	Not used terminal	PD3/SEG28
67	SEG5	O	LCD segment signal output terminal 5	PC0/SEG27
68	SEG6	O	LCD segment signal output terminal 6	PC1/SEG26
69	SEG7	O	LCD segment signal output terminal 7	PC2/SEG25
70	SEG8	O	LCD segment signal output terminal 8	PC3/SEG24
71	DG1	-	GND terminal	VSS
72	NC	O	Not used terminal	TX
73	NC	-	Not used terminal Connected to VDD.	NC
74	NC	I	Not used terminal Connected to VSS.	TEX

No.	Pin Name	I/O	Function	CPU
75	VD5	I	Reference voltage input terminal Connected to VDD.	VREF
76	SEG9	O	LCD segment signal output terminal 9	PH0/SEG23
77	SEG10	O	LCD segment signal output terminal 10	PH1/SEG22
78	SEG11	O	LCD segment signal output terminal 11	PH2/SEG21
79	SEG12	O	LCD segment signal output terminal 12	PH3/SEG20
80	SEG13	O	LCD segment signal output terminal 13	PG0/SEG19

■ PDB083A (IC517 : MOTHER UNIT)

● Master/Slave Switching IC

● Block Diagram

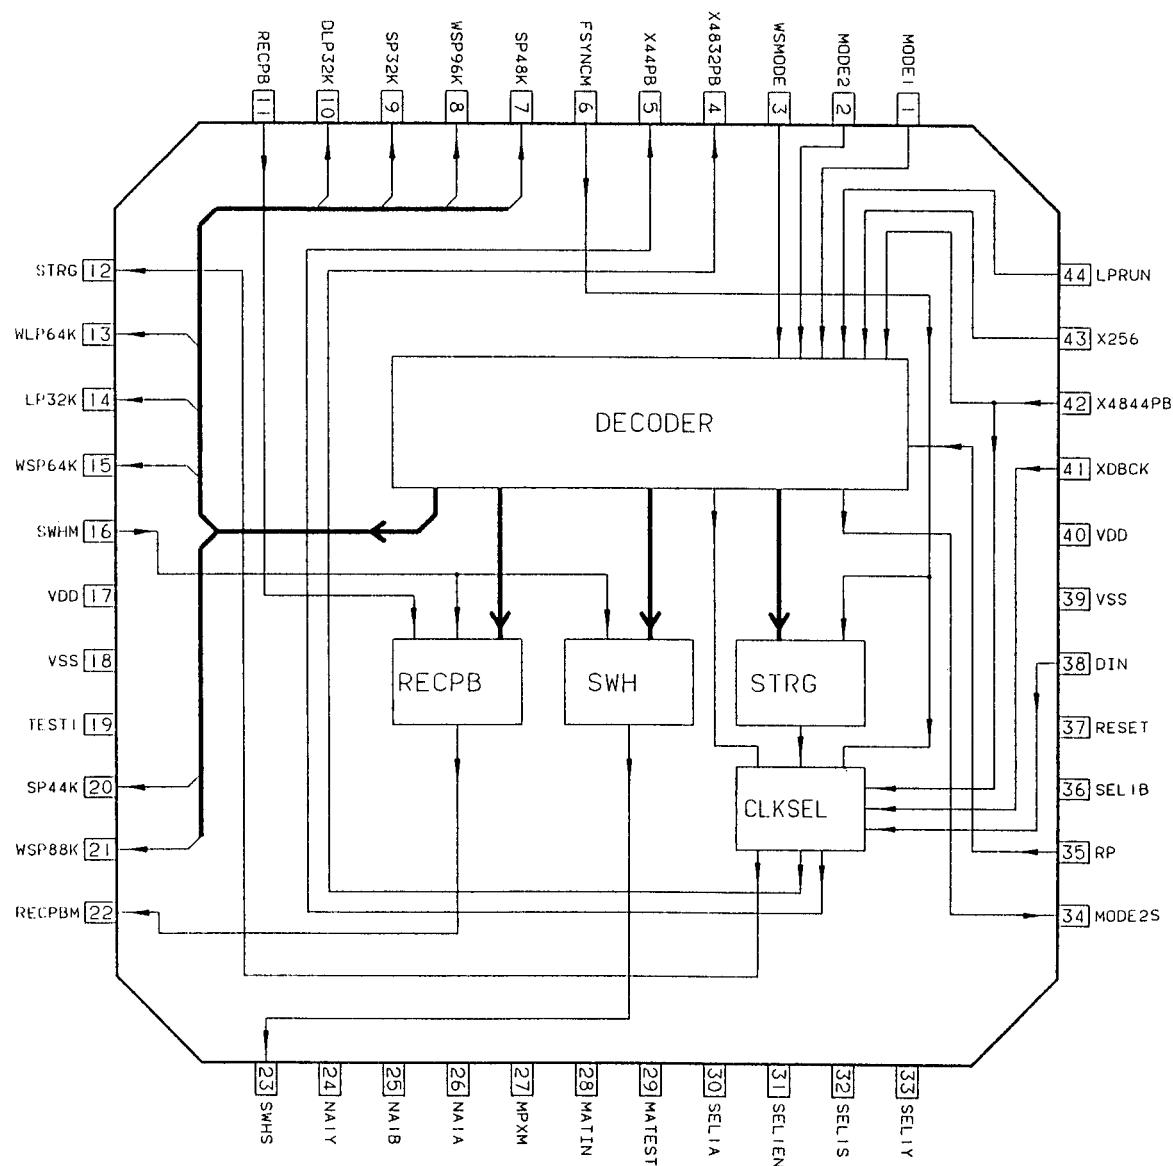

● Pin Function

No.	Pin Name	I/O	Function
1	MODE1	I	Operation mode setting input for STRG, SWHS, RECPBM generation circuit
2	MODE2	I	Control input for operation mode setting for STRG, SWHS, RECPBM generation circuit and MODE2S generation circuit
3	WSMODE	I	Operation mode setting input for STRG, SWHS, RECPBM generation circuit
4	X4832PB	O	24M system clock control signal output, clock oscillation at the time of X4832 = "L".
5	X44PB	O	22M system clock control signal output, clock oscillation at the time of X44 = "L".
6	FSYNCM	I	Trigger signal input for STRG generation
7	SP48K	O	Circuit-internal operation mode display output, "H" at the time of Fs = 48K, SP mode.
8	WSP96K	O	Circuit-internal operation mode display output, "H" at the time of Fs = 96K, WSP mode.
9	SP32K	O	Circuit-internal operation mode display output, "H" at the time of Fs = 32K, SP mode.
10	DLP32K	O	Circuit-internal operation mode display output, "H" at the time of Fs = 32K, double scan LP mode.
11	RECPB	I	Recording, play mode switching input
12	STRG	O	External sync control output of the DSP on the slave side. Set to "H" by the rise of FSYNCM, reset to "L" 90x from the drop of FSYNCM (1 cycle of FSYNCM = 360x).
13	WLP64K	O	Circuit-internal operation mode display output, "H" at the time of Fs = 64K, WLP mode.
14	LP32K	O	Circuit-internal operation mode display output, "H" at the time of Fs = 32K, half speed LP mode.
15	WSP64K	O	Circuit-internal operation mode display output, "H" at the time of Fs = 64K, WSP mode.
16	SWHM	I	Trigger signal input for SWHS, RECPBM generation
17	VDD	-	Power supply +5 V
18	VSS	-	GND
19	TEST1	I	Test control terminal, "L" at the time of normal operation.
20	SP44K	O	Circuit-internal operation mode display output, "H" at the time of Fs = 44K, SP mode.
21	WSP88K	O	Circuit-internal operation mode display output, "H" at the time of Fs = 88K, WSP mode.
22	RECPBM	O	RF circuit recording/play switching timing output, PLAY status: Always "L". REC status: "H" at the time of recording data recording, "L" at the time of after-monitoring data reading.
23	SWHS	O	Slave side A/B head switching output, output delayed 45x from SWHM (1 cycle of SWHM = 360x). "L" at the time of head A tracing, "H" at the time of head B tracing.
24	NA1Y	O	2 input NAND gate output
25	NA1B	I	2 input NAND gate input
26	NA1A	I	2 input NAND gate input
27	MPXM	I	Circuit-internal operation reference clock
28	MATIN	I	Test control terminal, "L" at the time of normal operation.

No.	Pin Name	I/O	Function
29	MATEST	I	Test control terminal, "L" at the time of normal operation.
30	SEL1A	I	Input for multiplexer with 2 to 1 enable
31	SEL1EN	I	Enable input for multiplexer with 2 to 1 enable
32	SEL1S	I	Selector input for multiplexer with 2 to 1 enable
33	SEL1Y	O	Output of multiplexer with 2 to 1 enable
34	MODE2S	O	Control output for slave-side RF circuit (data strobe IC, RF amplifier) MODE2 setting
35	RP	I	Control input for MODE2S generation circuit
36	SEL1B	I	Input for multiplexer with 2 to 1 enable
37	RESET	I	Reset input for STRG, SWHS, RECPBM generation circuit
38	DIN	I	Control input for X4832PB, X44PB generation circuit
39	VSS	-	GND
40	VDD	-	Power supply, +5 V
41	XDBCK	I	Control input for X4832PB, X44PB generation circuit
42	X4844PB	I	STRG, SWHS, RECPBM generation circuit operation mode setting and X4832PB, X44PB generation circuit control input
43	X256	I	Operation mode setting input for STRG, SWHS, RECPBM generation circuit
44	LPRUN	I	Operation mode setting input for STRG, SWHS, RECPBM generation circuit

■ LB1687M (IC609, IC610 : MOTHER UNIT)

- Motor Driver
- Truth Table

Item	Source sink	Input			Forward/reverse control F/RC
		U	V	W	
1	Phase W → Phase V	H	H	L	L
	Phase V → Phase W				H
2	Phase W → Phase U	H	L	L	L
	Phase U → Phase W				H
3	Phase V → Phase W	L	L	H	L
	Phase W → Phase V				H
4	Phase U → Phase V	L	H	L	L
	Phase V → Phase U				H
5	Phase V → Phase U	H	L	H	L
	Phase U → Phase V				H
6	Phase U → Phase W	L	H	H	L
	Phase W → Phase U				H

Input: "H": For each phase input 2, 1 is at a potential higher by 0.2 V or more.
 : "L": For each phase input 2, 1 is at a potential lower by 0.2 V or more.
 Forward/reverse control: "H": 2.0 to Vcc2
 "L": 0 to 0.3 V


- Terminal functions

Terminal name	Pin No.	Function
UIN1, UIN2 VIN1, VIN2 WIN1, WIN2	25, 26 23, 24 21, 22	Phase U Hall element input terminal. Logic "H" is the status VIN1 → VIN2. Phase V Hall element input terminal. Logic "H" is the status VIN1 → VIN2. Phase W Hall element input terminal. Logic "H" is the status VIN1 → VIN2.
UOUT VOUT WOUT	4 5 6	Phase U output terminal Phase V output terminal Phase W output terminal
VCC1	3	Power supply terminal providing output
VCC2	8	Power supply terminal providing output to parts other than the output part. This voltage must be stabilized so that ripple, noise, etc. will not enter.
Rf	7	This is the output current detection terminal, and by insertion of Rf between this terminal and GND, the output current is detected as voltage. This terminal voltage is detected and the overcurrent protection circuit operates.
CD	19	This is the terminal for intake of the current (voltage) detected by Rf. By application of feedback from Rf, a small output control voltage gain can be obtained. Connected to GND when not used.
FC	27	Frequency characteristic correction terminal
VC	18	Speed-phase control terminal The control is a voltage control method with control of the output voltage.
VCREF	13	The control start voltage is decided by this terminal.
GND	28	GND other than output The minimum potential of the output transistor is Rf.
F/RC	20	Forward/reverse control terminal The truth value is changed and forward/reverse control is executed by making this terminal "H" (2 V or more)/"L" (0.3 V or less).
FGin-, FGin+	9, 10	FG signal input terminal
FGOUT	11	FG amplifier output terminal
CR	12	The Hall input gain can be changed by the voltage of this terminal. When a resistor and a capacitor are connected externally, the motor speed can be detected and the Hall input gain can be changed in two steps.

GENERAL PURPOSE LOGIC IC

■ 74HC595 (IC513 : MOTHER UNIT)

● 8 Bit Shift Register (3 State)

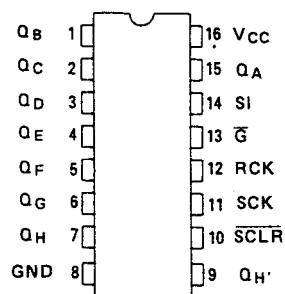● Pin Assignment
(Top View)

● Truth Table


INPUTS					FUNCTION
SI	SCK	SCLR	RCK	G	
X	X	X	X	H	Output (QA, QH) disable
X	X	X	X	L	Output (QA, QH) enable
X	X	L	X	X	The shift register is cleared.
L	↖	H	X	X	The status of the first stage of the shift register is "L", the others store the data of the respective previous stage.
H	↖	H	X	X	The status of the first stage of the shift register is "H", the others store the data of the respective previous stage.
X	▼	H	X	X	The shift register does not change.
X	X	X	↖	X	The shift register data are stored in the storage register.
X	X	X	▼	X	The storage register does not change.

X:Don't Care

■ 74HC157 (IC503, IC508 : MOTHER UNIT)

● Quad 2ch Multiplexer

● Pin Assignment (Top View)

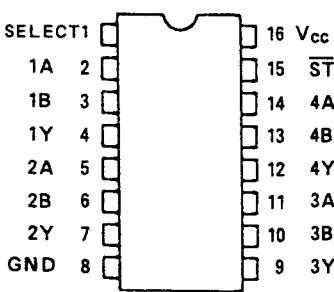

● Truth Table


INPUTS				OUTPUTS
ST	SELECT	A	B	Y(157A)
H	X	X	X	L
L	L	L	X	L
L	L	H	X	H
L	H	X	L	L
L	H	X	H	H

X : Don't Care

■ 74HC153 (IC511, IC514 : MOTHER UNIT)

● Dual 4ch Multiplexer

● Pin Assignment (Top View)

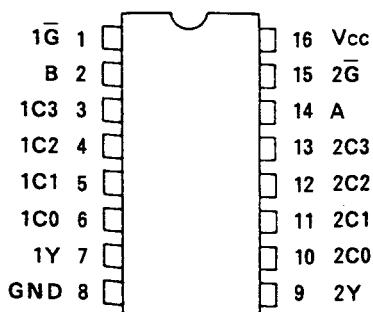

● Truth Table

SELECT INPUTS		DATA INPUTS				STROBE	OUTPUT Y
B	A	C0	C1	C2	C3	G	HC153A
X	X	X	X	X	X	H	L
L	L	L	X	X	X	L	L
L	L	H	X	X	X	L	H
L	H	X	L	X	X	L	L
L	H	X	H	X	X	L	H
H	L	X	X	L	X	L	L
H	L	X	X	H	X	L	H
H	H	X	X	X	L	L	L
H	H	X	X	X	H	L	H


X: Don't care

Z: High impedance

■ TC4053BF (IC602 : MOTHER UNIT、IC11 : POWER SUPPLY UNIT)

- Triple 2ch Analog Multiplexer

- Pin Assignment (Top View) ● Truth Table

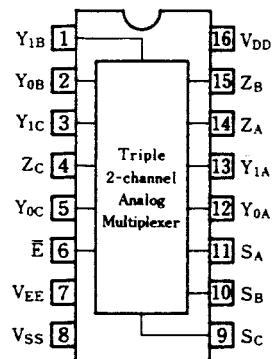

Input		Channel ON
\bar{E}	S_A	
L	L	$Y_{0A} - Z_A$
L	H	$Y_{1A} - Z_A$
H	X	All OFF

■ IC information already listed in other service manuals

- HD49228FS (IC601 : MOTHER UNIT)

R-DAT1 chip digital • servo LSI Refer to D-07 (ARP2823)

- AK5340A-VS (IC905 : MOTHER UNIT)

A/D converter Refer to D-05 (RRV1201)

- HD49229 (IC903, IC904 : MOTHER UNIT)

Data strobe IC Refer to D-07 (ARP2823)

- HD49226AFS (IC505, IC509 : MOTHER UNIT)

R-DAT 1 chip signal processing LSI Refer to D-07 (ARP2823)

- HA12154MA (IC301, IC351 : RF UNIT)

RF redording playback AMP Refer to D-07 (ARP2823)

1.6 ADJUSTMENTS

■ Supply voltage

Use a stabilized power supply and supply DC voltage between +11 V/GND and -11 V/GND at DC IN at the rear of the main unit and at CN1 (3-terminal connector) of the power supply unit (refer to page 1-7).

■ Adjustment Conditions

1. Clean the head and tape transit surfaces (tape guide, drum, capstan shaft, and pinch roller).
2. Before making adjustments, warm up the set for a few minutes.
3. Use an oscilloscope with a 10 : 1 probe.

● Test Tapes

Tracking tape	: SDA-101 (TY-7251)
Level tape	: SDA-102 (TY-7111)
Torque meter FWD	: SDA-104 (TY-7131)
Blank tape	: SDA-301
	SDA-302
	(TY-30B)
Error-rate adjustment tape	: SDA-111 (SP) SDA-112 (WSP)

■ Adjustment Items

Mechanical system

1. Back Tension Torque Adjustment
2. Tape Pass Confirmation
3. Tape Pass Adjustment

Electrical system

1. PLL Adjustment
2. TACH Adjustment
3. ATF Recording Current Adjustment
4. Error Rate Adjustment

■ SETTING THE TEST MODE

● 1.5 TP Test Mode

1. Short-circuit the connectors CN30-8 (XTEST) and CN30-1 (GNDA) of the MOTHER unit. At this time, "PGM NO" on the LCD flashes.
2. Press the counter reset key (C-Reset). At this time, confirm that the counter display part of the LCD becomes "PHASE". (TACH adjustment mode)

● Test mode cancellation

Open the XTEST terminal to cancel this test mode.

● 2/3 waveform setting method

1. Enter into 1.5TP test mode.
2. Connect a stabilized power supply between CN30-7 (VOFT) and CN30-1 (GNDA) and apply +2.5 V.
3. Play back the tracking tape (SDA-101) and execute fine adjustment of the stabilized power supply (around +2.5 V) so that the level close to the center of the RF waveform (Ach) becomes a maximum.
4. Execute fine adjustment of the stabilized power supply voltage so that the level close to the center of the RF waveform (Ach) becomes about 2/3 of the level in item 3. (Around +2.0 V).

● Test Mode for Recording Current Adjustment

1. Short-circuit the connectors CN30-8 (XTEST) and CN30-1 (GNDA) of the MOTHER unit. At this time, "PGM NO" on the LCD flashes.
2. Press the counter mode key (C-Mode). At this time, confirm that the PGM NO display part of the LCD becomes "db".

● Test mode cancellation

Open the XTEST terminal to cancel this test mode.

Note:

At the time of exchange of the memory IC (IC202), TACH adjustment must be executed after initialization of the memory IC in initialization mode.

● Initialization mode

1. Short-circuit the connectors CN30-8 (XTEST) and CN30-1 (GNDA) of the MOTHER unit. At this time, "PGM NO" on the LCD flashes.
2. Press the ID mode key (ID-Mode select).

■ MECHANICAL SYSTEM ADJUSTMENT

1. Back Tension Torque Adjustment

- Purpose : To stabilize the tape's contact with the rotating drum.
- Symptoms of Improper Adjustment : Small torque \Rightarrow Tape transit is unstable.
Large torque \Rightarrow Tape or head is damaged.

Measuring Device/Jig	Measuring Device Connection	DAT State	Part to be Adjusted
● Torque Meter FWD : SDA-104 (TW-7131)		● PLAY mode	● Spring hook part on the reel base

Adjustment Procedure

Preparation

- Mount the torque meter (SDA-104).
- 1. Press the PLAY key and confirm that the center of the back tension torque value on the torque meter FWD is between 6.5 to 9.5g · cm.

2. If the value is not within this standard, adjust positions A to C on the reel base spring hook part.

Adjustment Diagram

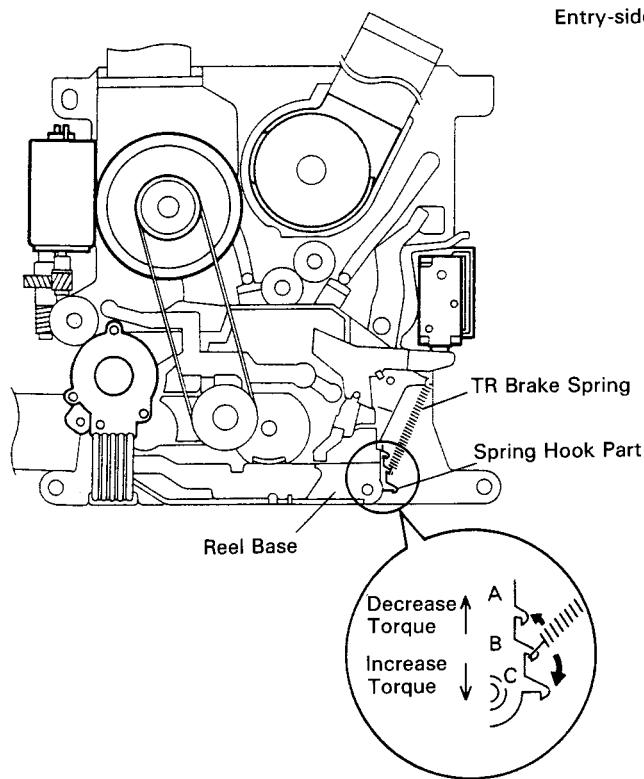


Fig. 1-1

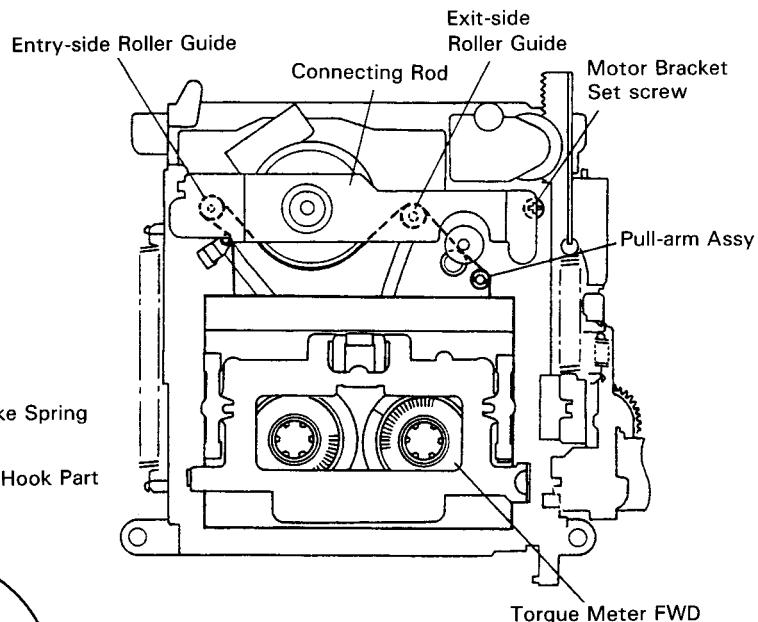


Fig. 1-2

2. Tape Pass Confirmation

- Purpose : To confirm that the tape is correctly aligned with the drum assembly lead. (Tape transit adjustment)
- Symptoms of Improper Adjustment : Sound is interrupted, noise is generated, or sound quality is poor.

Measuring Device/Jig	Measuring Device Connection	DAT State	Part to be Adjusted
<ul style="list-style-type: none"> Oscilloscope Test Tape : Tracking/ SDA-101 (TY-7251) 	<ul style="list-style-type: none"> Oscilloscope MAIN unit interior : CH1 : Between ENV (CN30-4) and GND A (CN30-1) CH2 : Between HSWP (CN30-6) and GND A (CN30-1) 	<ul style="list-style-type: none"> PLAY mode (Test mode) 	<ul style="list-style-type: none"> Waveform check

Adjustment Procedure

Preparation

- Mount the tracking tape (SDA-101).
 - After setting the 1.5 TP test mode, produce the 2/3 waveform and play the tape. (Refer to Page 1-24.)
1. Check the waveform at this time on the oscilloscope and make sure that the degree of flatness is at least 75%.

2. If the degree of flatness is less than 75%, perform the procedures described in "3. Tape Pass Adjustment" on Page 1-28.

- Degree of flatness = $B/A \times 100 [\%]$
(refer to Photo 1-1 to photo 1-3)

Adjustment Diagram

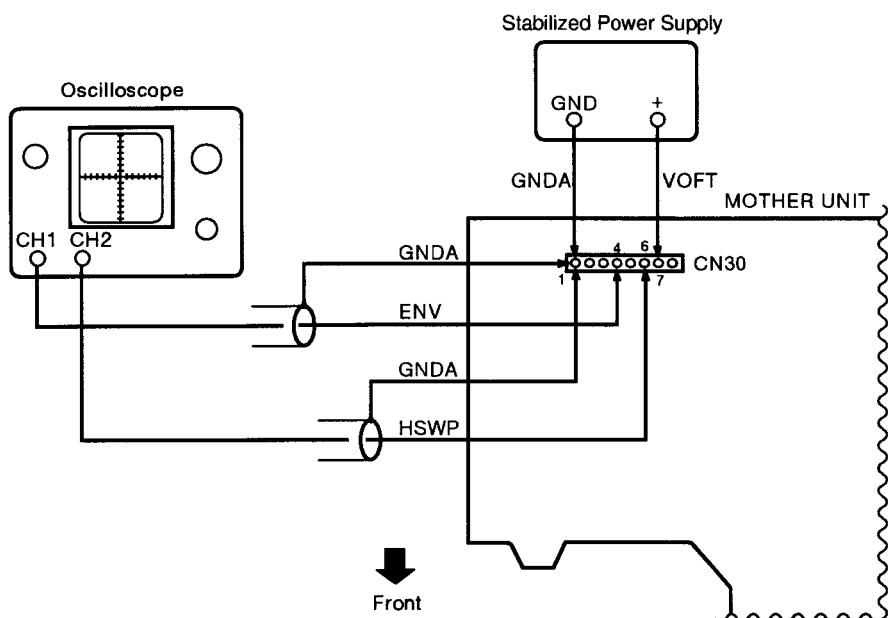


Fig. 2

Waveform

- Oscilloscope Range : 50mV/div., 1ms/div.

Normal

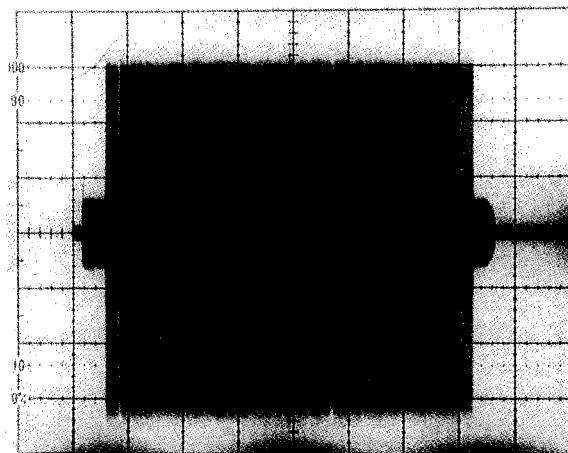


Photo 1-1

Fault on the Entry Side

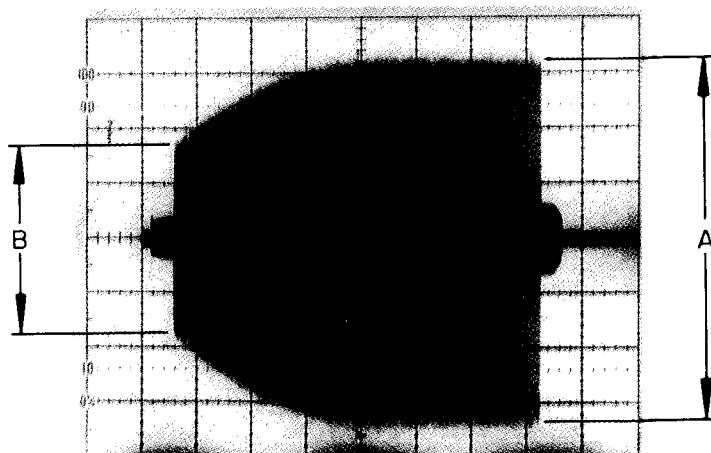


Photo 1-2

Fault on the Exit Side

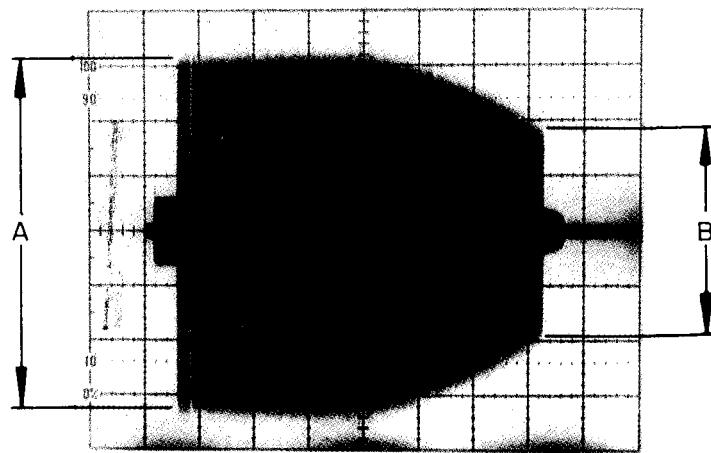


Photo 1-3

3. Tape Pass Adjustment

- Purpose : To confirm that the tape is correctly aligned with the drum assembly lead. (Tape transit adjustment)
- Symptoms of Improper Adjustment : Sound is interrupted, noise is generated, or sound quality is poor.

Measuring Device/Jig	Measuring Device Connection	DAT State	Part to be Adjusted
<ul style="list-style-type: none"> Oscilloscope Test Tape : Tracking/ SDA-101 (TY-7251) Pin-face Screwdriver : R-1784 0-bit Phillips Screwdriver 	<ul style="list-style-type: none"> Oscilloscope MAIN unit interior: CH1 : Between ENV (CN30-4) and GND A (CN30-1) CH2 : Between HSWP (CN30-6) and GND A (CN30-1). 	<ul style="list-style-type: none"> PLAY mode (Test mode) 	<ul style="list-style-type: none"> Roller guide (entry and exit sides) Pull guide

Adjustment Procedure

3-1. Rough adjustment of guides

- Remove the connecting rod of the cassette control assembly. (Refer to page 1-25.)
- Turn the entry-side / exit-side roller guides clockwise using the pin-face screwdriver (R-1784) until they lightly touch the end, and then turn them back about one rotation.
- Turn the guide flange on the pull-arm assy until the top surface of the flange is aligned with the top of the pull-arm shaft. (Refer to Fig. 3-1.)

3-2. Fine adjustment of roller guide height

Preparation

- Mount the tracking tape (SDA-101).
- After setting the 1.5 TP test mode, produce the 2/3 waveform and play the tape. (Refer to Page 1-24.)

[Exit-Side Adjustment]

- Inspect the RF waveform. If it resembles the waveform shown in Photo 2-4, tighten the exit-side roller guide (about 1/8 rotation). If it resembles the waveform shown in Photo 2-6, loosen the exit-side roller guide (about 1/8 rotation).

[Entry-Side Adjustment]

- Inspect the RF waveform. If it resembles the waveform shown in Photo 2-3, tighten the entry-side roller guide (about 1/4 rotation). If it resembles the waveform shown in Photo 2-5, loosen the entry-side roller guide (about 1/4 rotation).
- Observe the RF waveform and repeat Steps 1 and 2 above until the waveform looks like the one shown in Photo 2-2.
- Press the Eject key, and once the tape has been ejected, repeat the procedures described in "2. Tape Pass Confirmation". (Refer to Page 1-26.)

Adjustment Diagram

- The oscilloscope connections and other connections are as indicated in "2. Tape Pass Confirmation" (Page 1-26).

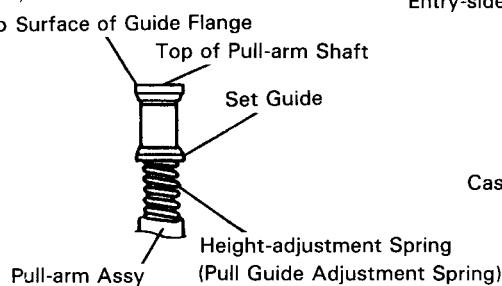


Fig. 3-1

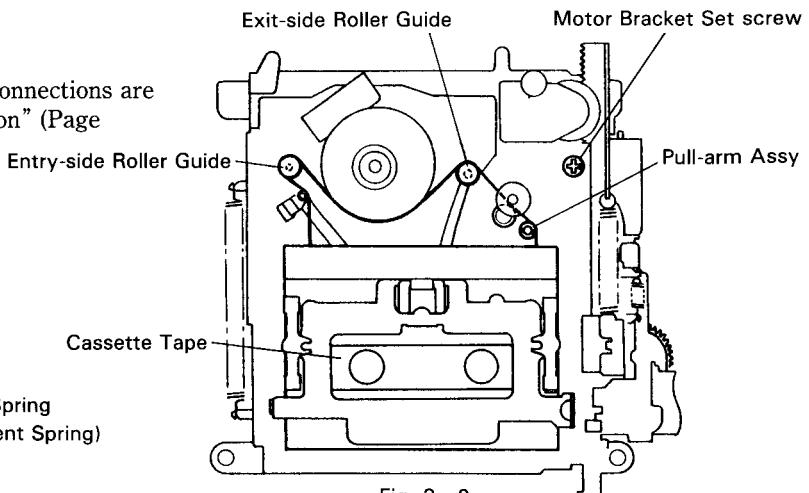


Fig. 3-2

Waveform

- Oscilloscope Range : 50mV/div., 1ms/div.

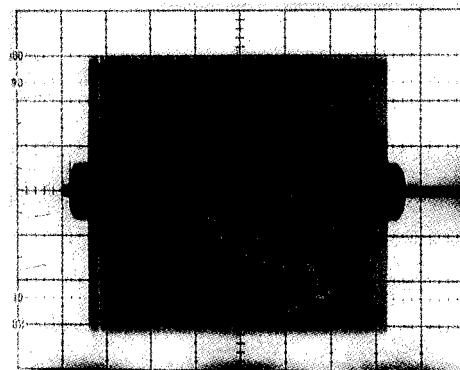


Photo 2-1
Maximum RF Output Level

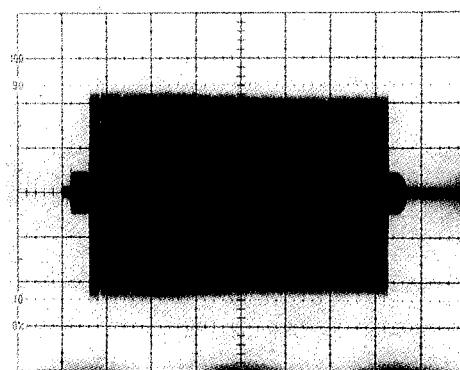


Photo 2-2
2/3 RF Output Level

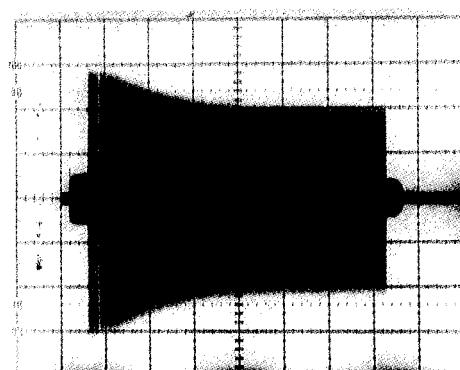


Photo 2-3
Entry-Side Guide Roller Too High

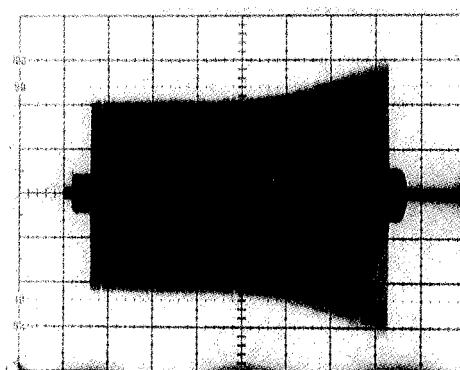


Photo 2-4
Exit-Side Guide Roller Too High

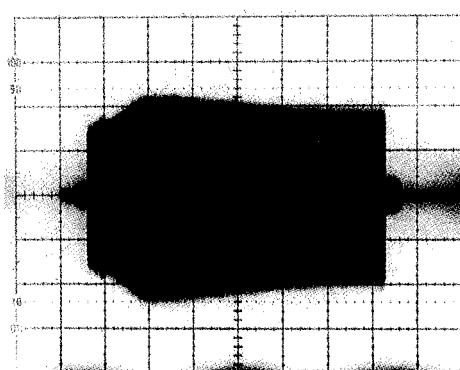


Photo 2-5
Entry-Side Guide Roller Too Low

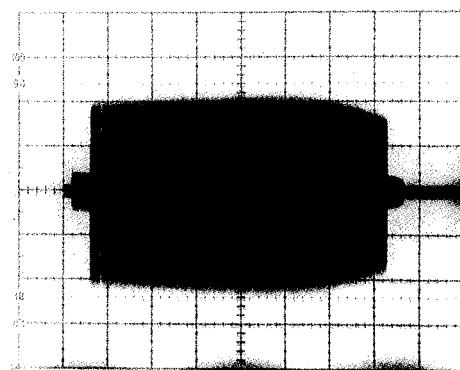


Photo 2-6
Exit-Side Guide Roller Too Low

3-3. Fine Adjustment of Pull Guide

Preparation

- Remove the connecting rod of the cassette control assembly. (Refer to page 1-25.)

Adjustment

- Play the tape and set the CUE mode by holding down the FF/CUE key when the tape starts winding. Check for twisting of the tape between the pinch roller and the pull guide by observing the image of the motor bracket setscrew head reflected on the magnetic surface of the tape. The relationship between the reflected image of the screw head and the height of the pull-guide flange is shown in Fig. 3-3.
- Slowly tighten the pull-guide flange, turning it 180 degrees from its rough-adjusted position, and confirm that the appearance of the reflected image continuously changes from (c) to (a) during this process.
- Then, while loosening the pull-guide flange 180 degrees, confirm that the appearance of the reflected image continuously changes from (a) to (c).

- Tighten the pull-guide flange until the top edge of the tape curls slightly and the screw image resembles the shape shown in (b), and then loosen the flange 90 degrees.
 - Set the REW mode by pressing and holding down the REW/REV key. Confirm that the tape does not curl at Points A and B in Fig. 3-4.
 - After confirming that the tape is not twisted at Point C in Fig. 3-5, check the tape for twisting or bulging at Point D. (Normal bulge : no more than 0.5mm)
 - Press the Eject key and eject the tape. Replay the tape, and keeping the FF/CUE key pressed down, observe the reflected image of the screw head and confirm that it has the same appearance as that shown in (c).
 - Press and hold down the REW/REV key and confirm that curling and twisting at Points A to D are the same.
 - Apply a locking adhesive to the screw on top of the pull-guide flange and lock the screw.
- guarit flange and lock the screw.

Adjustment Diagram

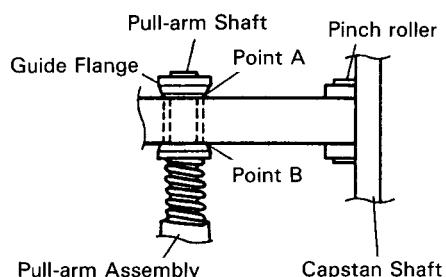
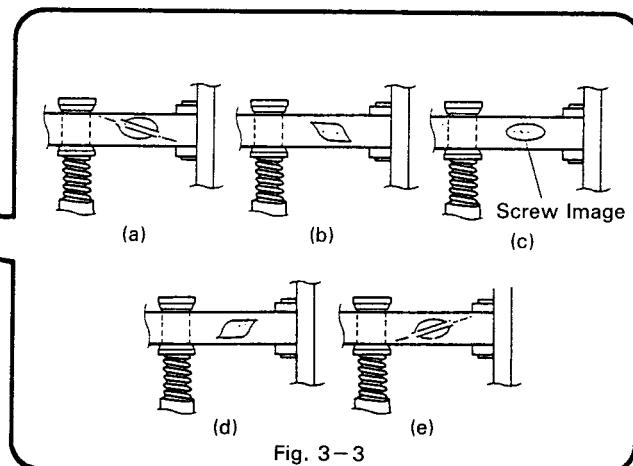
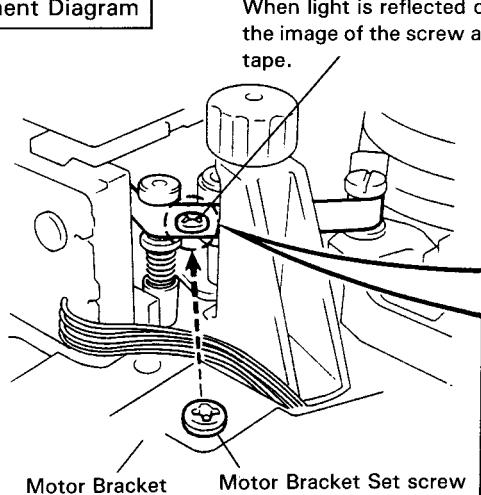


Fig. 3-4

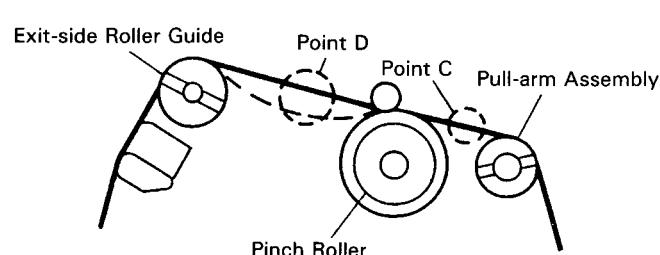


Fig. 3-5

■ ELECTRICAL SYSTEM ADJUSTMENT

1. PLL Adjustment

- Purpose : To correctly access digital signals stored in the tape.
- Symptoms of Improper Adjustment : Sound is intermittent, unit does not playback, noise is generated, or meter fails to oscillate.

Measuring Device/Jig	Measuring Device Connection	DAT State	Part to be Adjusted
<ul style="list-style-type: none"> ● Oscilloscope ● Test Tape Blank Tape : SDA - 301 	<ul style="list-style-type: none"> ● Oscilloscope Mother unit interior : CH1 : Between PHSUBM (CN30-2) and GND A (CN30-1) Between PHSUBS (CN30-3) and GND A (CN30-1) 	<ul style="list-style-type: none"> ● STOP mode 	<ul style="list-style-type: none"> ● Mother unit VR902, VR901 (VCO RANGE ADJ.)
Adjustment Procedure (MASTER SIDE ADJUSTMENT)		Adjustment Procedure (SLAVE SIDE ADJUSTMENT)	
1. Insert the test tape. 2. Set the Rec Mode key to the SP position. 3. Adjust VR902 so that the output voltage of CN30-2 (PHSUBM) becomes 2.5 V. At this time, adjust so that the pulse on the whiskers part of the waveform completely disappears or appears only slightly above or below 2.5 V. Connect and adjust from the rear.		1. Insert the test tape. 2. Set the Rec Mode key to the LP position. 3. Adjust VR901 so that the output voltage of CN30-3 (PHSUBS) becomes 2.5 V. At this time, adjust so that the pulse on the whiskers part of the waveform completely disappears or appears only slightly above or below 2.5 V.	

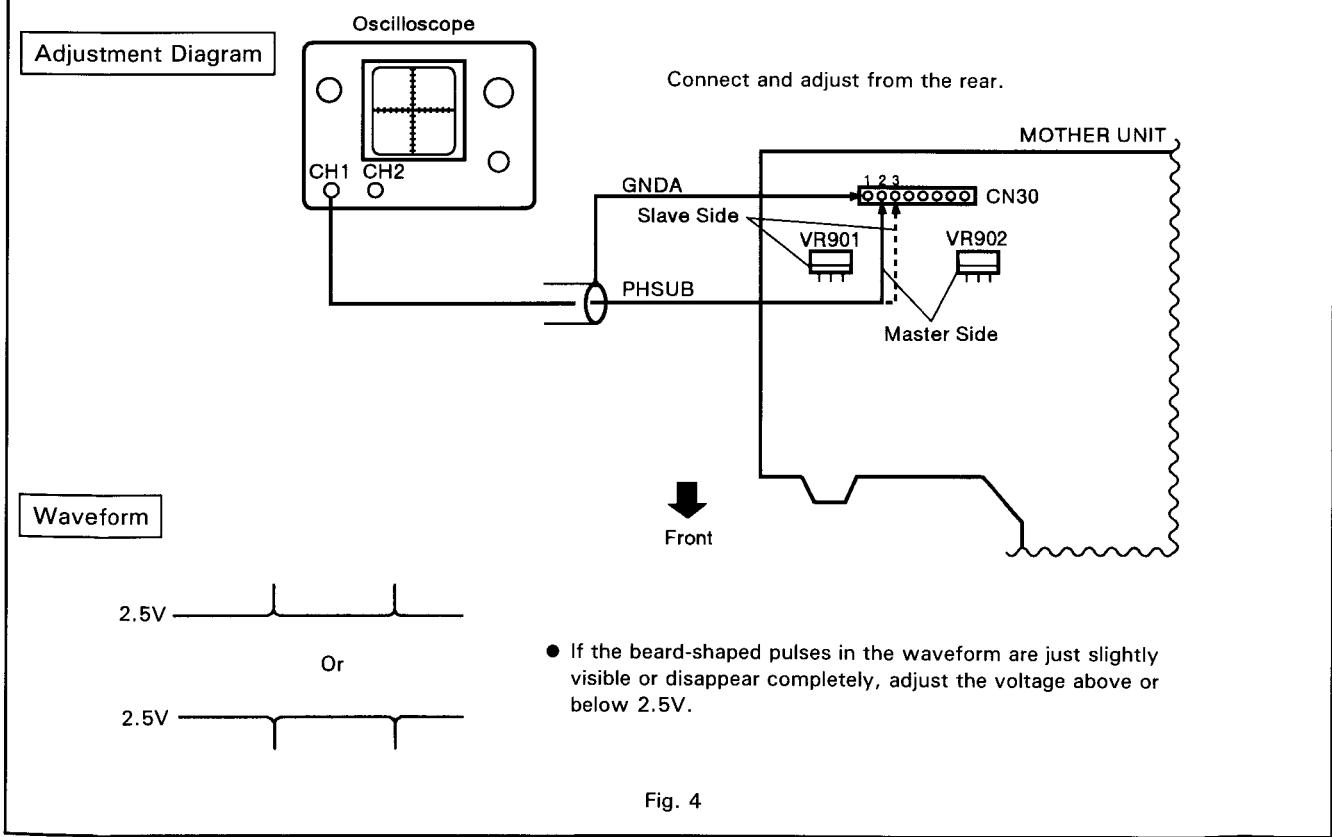


Fig. 4

2. TACH Adjustment

- Purpose : To match the recording position with the tape format.
- Symptoms of Improper Adjustment : Tapes recorded on other machines have intermittent sound or noise increases and the MUTE comes on. (Tapes recorded on this unit perform without problems.)

Measuring Device/Jig	Measuring Device Connection	DAT State	Part to be Adjusted
<ul style="list-style-type: none"> Oscilloscope Test tape Tracking : SDA-101 (TY-7251) 	<ul style="list-style-type: none"> Oscilloscope Mother unit interior : CH1 : Between ENV (CN30-4) and GND A (CN30-1) CH2 : Between HSWP (CN30-6) and GND A (CN30-1) 	<ul style="list-style-type: none"> PLAY mode (Test mode) 	<ul style="list-style-type: none"> MS key "+", "-"


Adjustment Procedure

Preparation

- Set the 1.5 TP test mode. (Refer to Page 1-24.)
1. Press the MS keys "+" or "-" to adjust so that the RF waveform marker position becomes $800\mu s \pm 20\mu s$ from the drop of the HSWP waveform.

Waveform


- Oscilloscope Range :
CH1 : AC500mV/div., 0.1ms/div.
CH2 : DC5V/div. (Trigger)

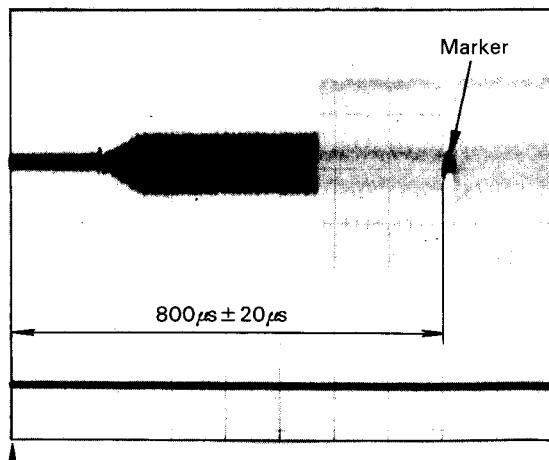

Note

The TACH adjustment is adjustment by means of the microcomputer, where the adjustment data are stored in the memory, and as the adjusted data are stored in the memory at the time of test mode cancellation, do not switch off the power supply while in test mode.


Adjustment Diagram

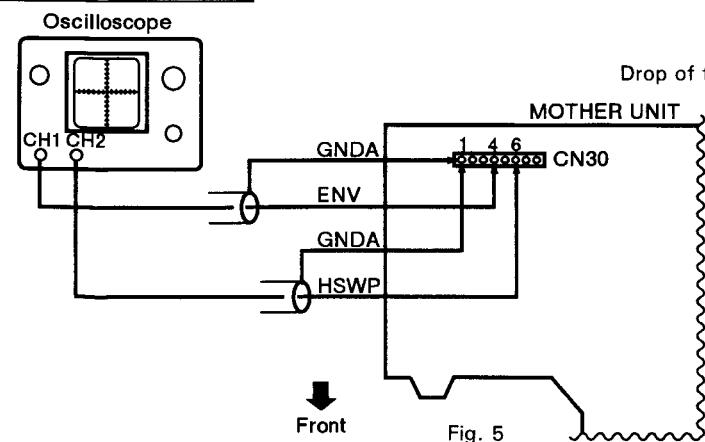

3. ATF Recording Current Adjustment.

- Purpose : To obtain the ideal recording current value.
- Symptoms of Improper Adjustment : Sound is intermittent (tracking cannot be obtained) or noise is generated.


Measuring Device/Jig	Measuring Device Connection	DAT State	Part to be Adjusted		
<ul style="list-style-type: none"> Oscilloscope Test Tape <p>Level : SDA-102 (TY-7111) Blank : SDA-302 (TY-30B)</p> <p>NOTE : Use an unused portion of tape where RF signals have not been recorded.</p>	<ul style="list-style-type: none"> Oscilloscope MOTHER Unit interior : CH1 : Between PLT2 (CN30-5) and GND A (CN30-1) CH2 : Between HSWP (CN30-6) and GND A (CN30-1) 	<ul style="list-style-type: none"> PLAY and REC modes 	<ul style="list-style-type: none"> REC/PLAY RF unit VR352 (A head) VR354 (B head) 		
Adjustment Procedure					
Preparation		<p>3. Stop the recording and rewind the recorded portion of the tape. Confirm that the levels of the reproduced waveform are within $\pm \frac{25}{20}$ % of levels (a) and (b) recorded according to the procedure described in Step 1. (Refer to Photo 4-2.)</p> <p>4. When the values are outside the standard, slightly turn VR352 for A head or VR354 for B head, and record the signal again on an unused portion of tape. Confirm the levels as described in Step 3.</p> <p>5. Repeat Steps 3 and 4 and make adjustments until the values are within the standard.</p>			
Adjustment Diagram					
<p>Fig. 6</p>					

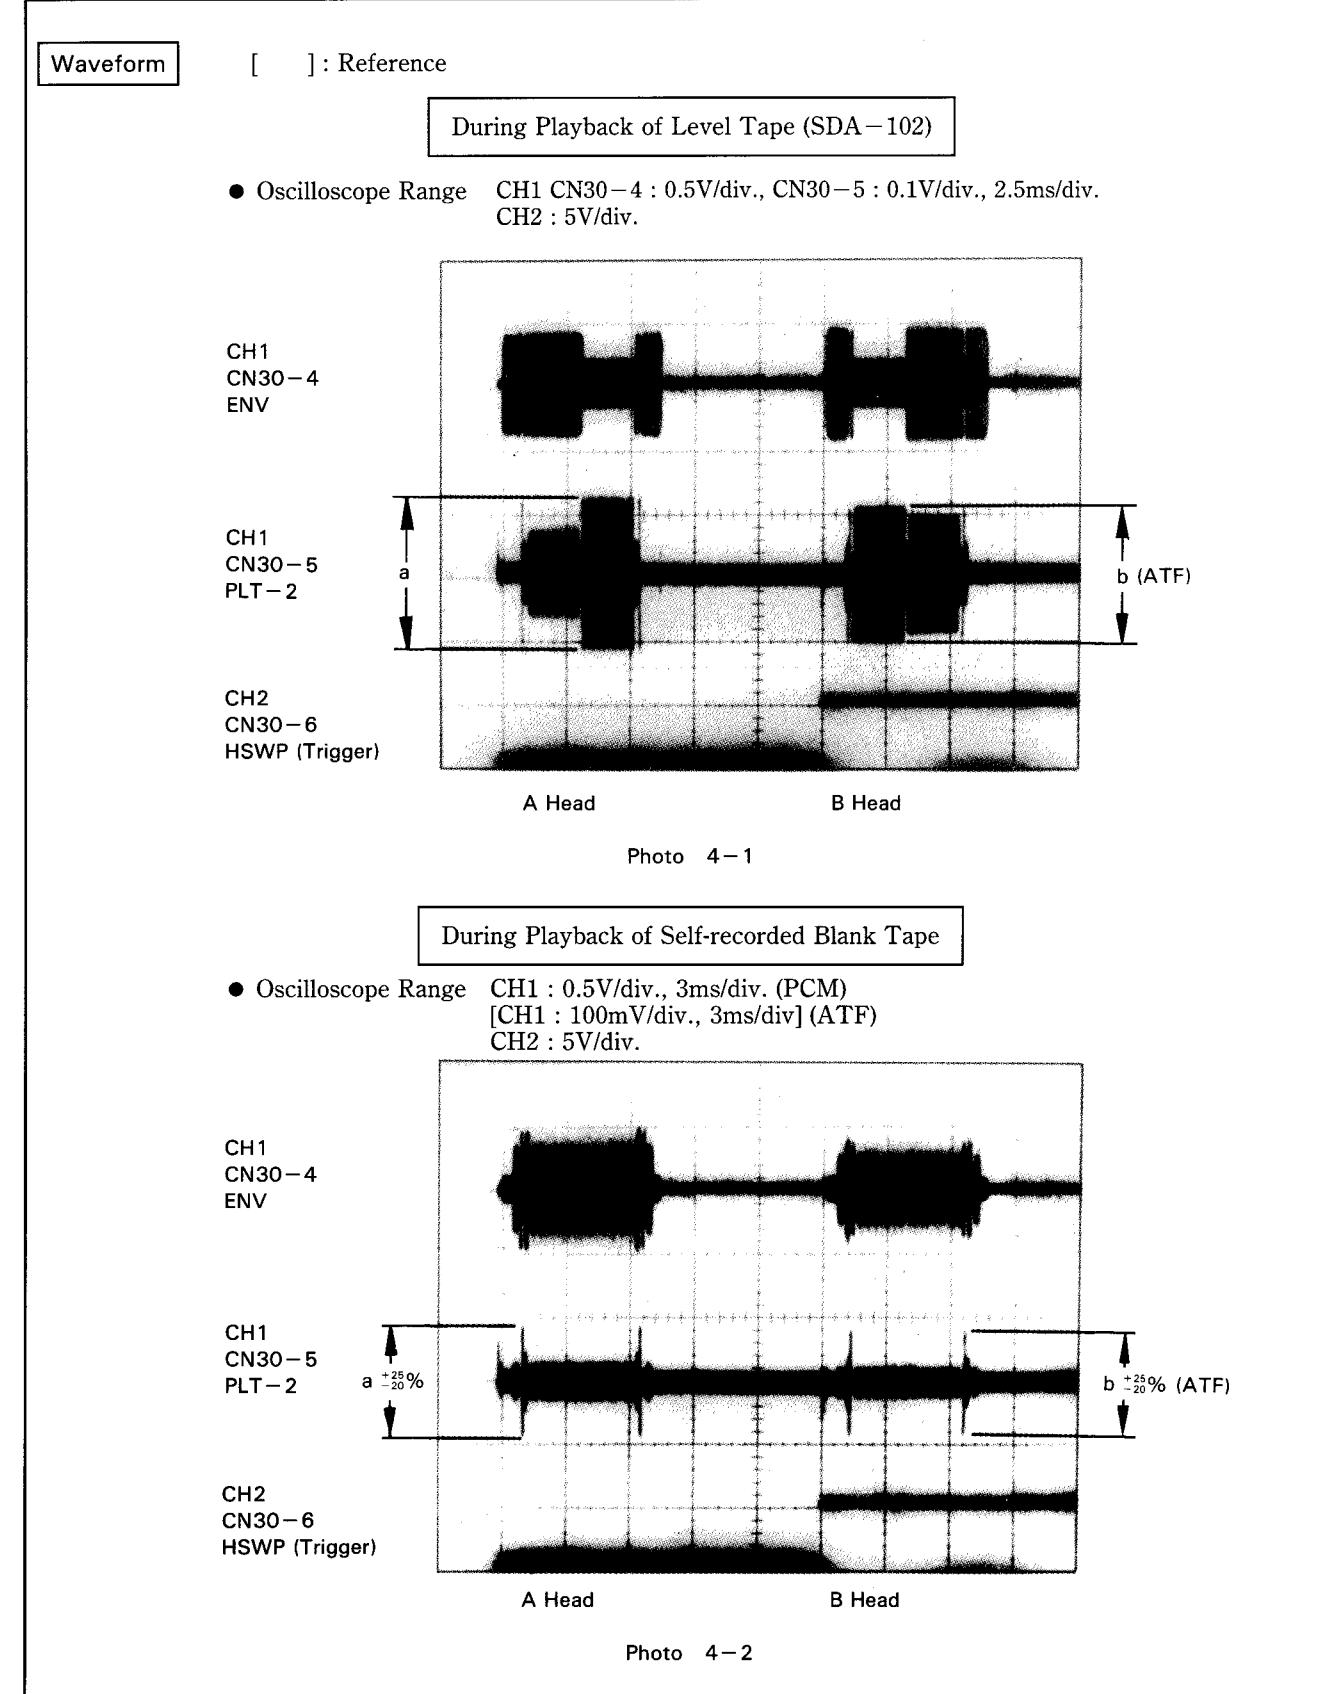

4. Error Rate Adjustment


- Purpose : To reproduce the correct data.
- Symptoms of Improper Adjustment : Units skips during playback, noise is generated, or meter does not oscillate.

Measuring Device/Jig	Measuring Device Connection	DAT State	Part to be Adjusted
<ul style="list-style-type: none"> Test Tape Error Rate Adjustment Tape : SDA-111 (SP) : SDA-112 (WSP) Blank : SDA-302 (TY-30B) Error Rate Counter [Oscilloscope] 	<ul style="list-style-type: none"> Error rate counter MOTHER unit interior Connector : CN27, CN31 Oscilloscope MOTHER Unit interior : CH1 : Between FLAGM (CN27-3) and GND D Between FLAGS (CN31-3) and GND D 	MASTER SIDE ADJUSTMENT	<ul style="list-style-type: none"> REC/PLAY RF unit VR355 (SP) PLAY mode MONITOR RF unit VR302 (SP) VR303 (WSP) REC mode VR301 (LP)
Adjustment Procedure (MASTER SIDE ADJUSTMENT)		Adjustment Procedure (SLAVE SIDE ADJUSTMENT)	
<p>Preparation</p> <ul style="list-style-type: none"> Remove the lower chassis, connect the connector of the error rate counter from the rear of the circuit board to CN27 in the mother unit, and set the setting time of the error rate counter to 10 sec. After connector connection, install the lower chassis. <p>1. Play the error rate adjustment tapes (SDA-111 and SDA-112) and make adjustments so that the error rate is as small as possible. Adjustment standard Of Ach and Bch head, one shall be 100×10^{-4} or less, and the other shall be 300×10^{-4}.</p> <p>If the error rate counter is not used</p> <p>1. Play the error rate adjustment tapes (SDA-111 and SDA-112) and make adjustments so that the oscilloscope waveform error flag is the same as that shown in Photo 5. (Adjust until the error rate is as small as possible.)</p>		<p>Preparation</p> <ul style="list-style-type: none"> Remove the lower chassis, connect the connector of the error rate counter from the rear of the circuit board to CN31 in the mother unit, and set the setting time of the error rate counter to 10 sec. After connector connection, install the lower chassis. <p>1. Insert the test tape (SDA-302). 2. Set the recording monitor button of the set to the TAPE side. 3. Record a music signal or a suitable test signal in WSP, SP, and LP mode, and adjust so that the error rate becomes a minimum. Adjustment standard Of Ach and Bch head, one shall be 100×10^{-4} or less, and the other shall be 300×10^{-4}.</p> <p>If the error rate counter is not used</p> <p>1. Insert the test tape (SDA-302). 2. Set the recording monitor button of the set to the TAPE side. 3. Record a music signal or a suitable test signal in WSP, SP, and LP mode, and adjust so that the error flag of the oscilloscope waveform becomes the same as shown in photo 5. (Adjust until the error rate is as small as possible.)</p>	
<p>Adjustment Drawing</p>		<p>Fig. 7</p>	

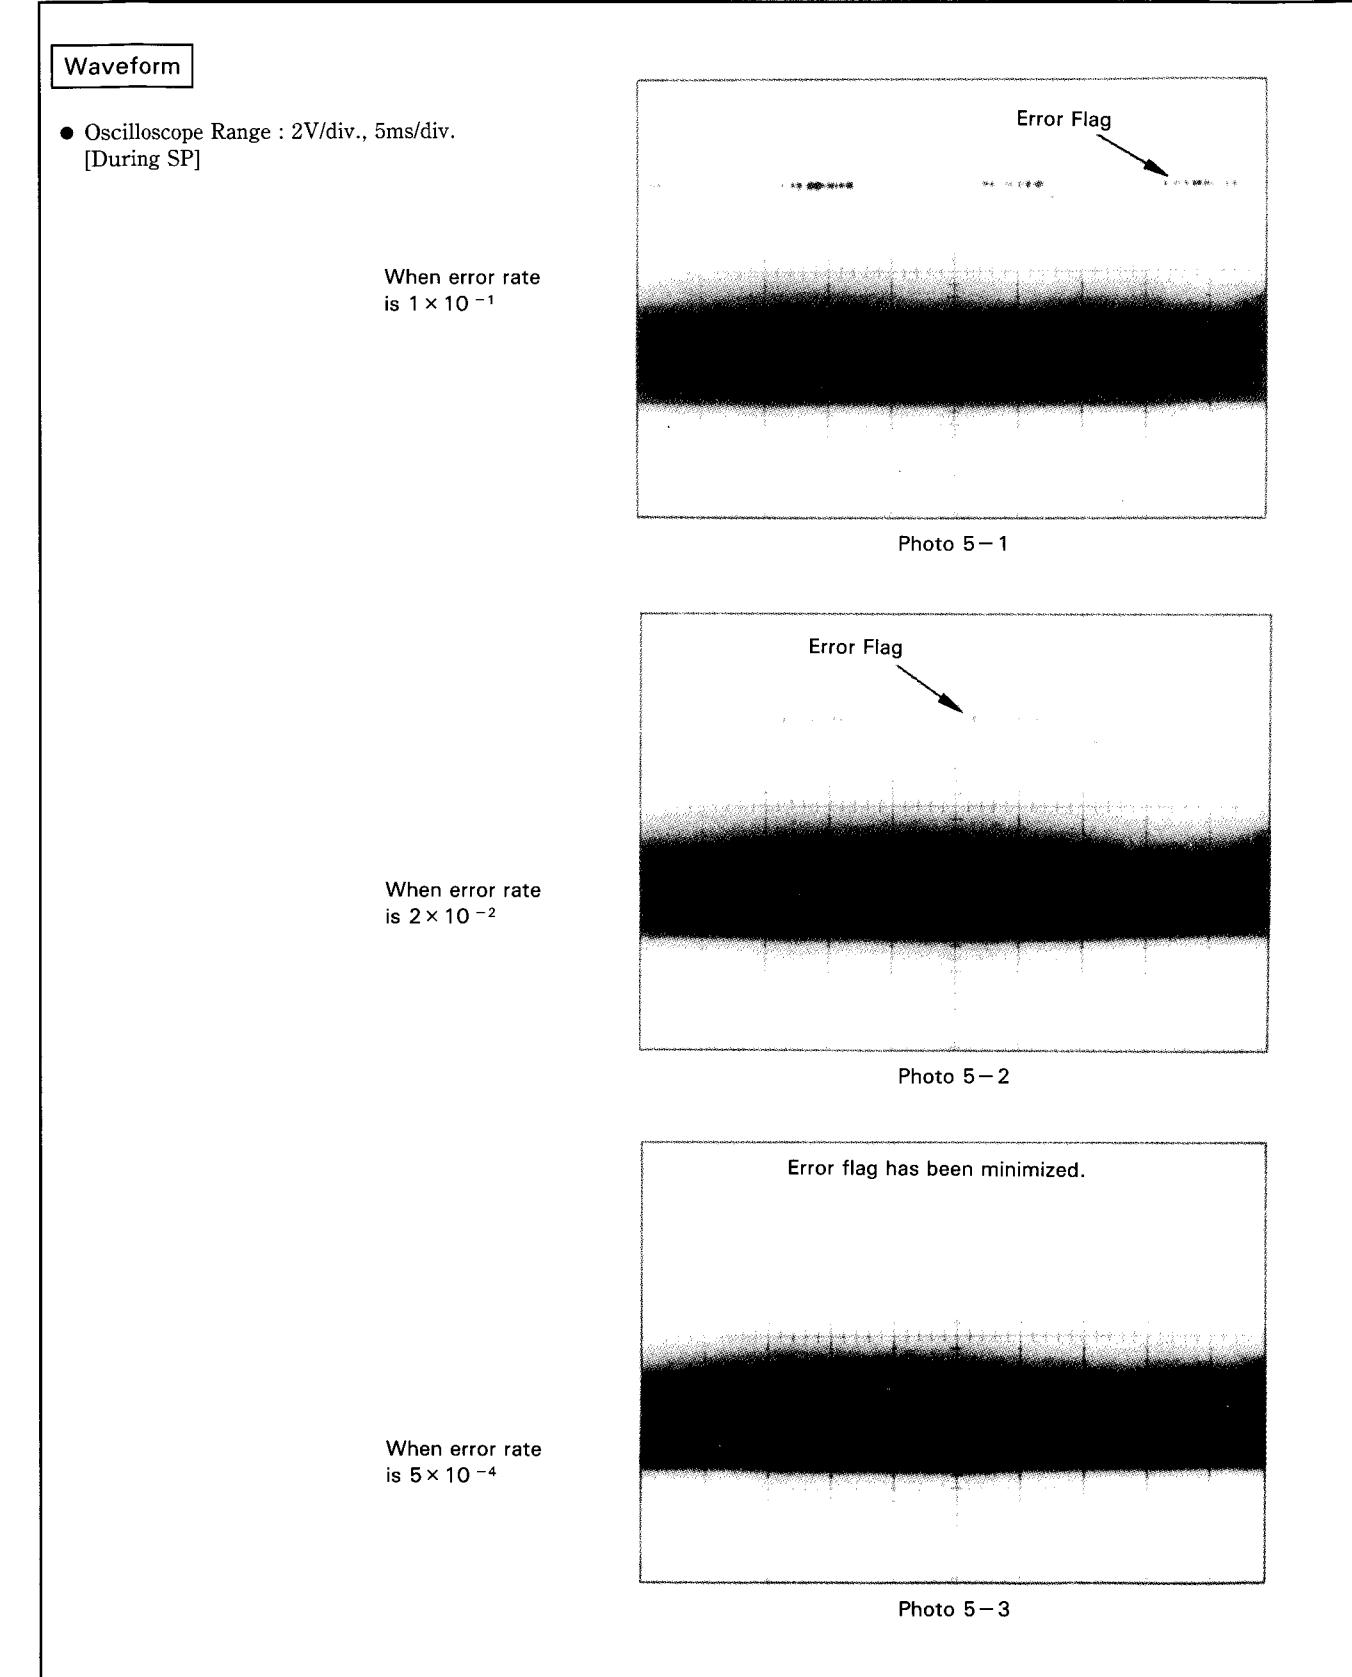


1.7 FLOW CHART

1-7-1. MECHANICAL MODE TRANSITION DIAGRAM

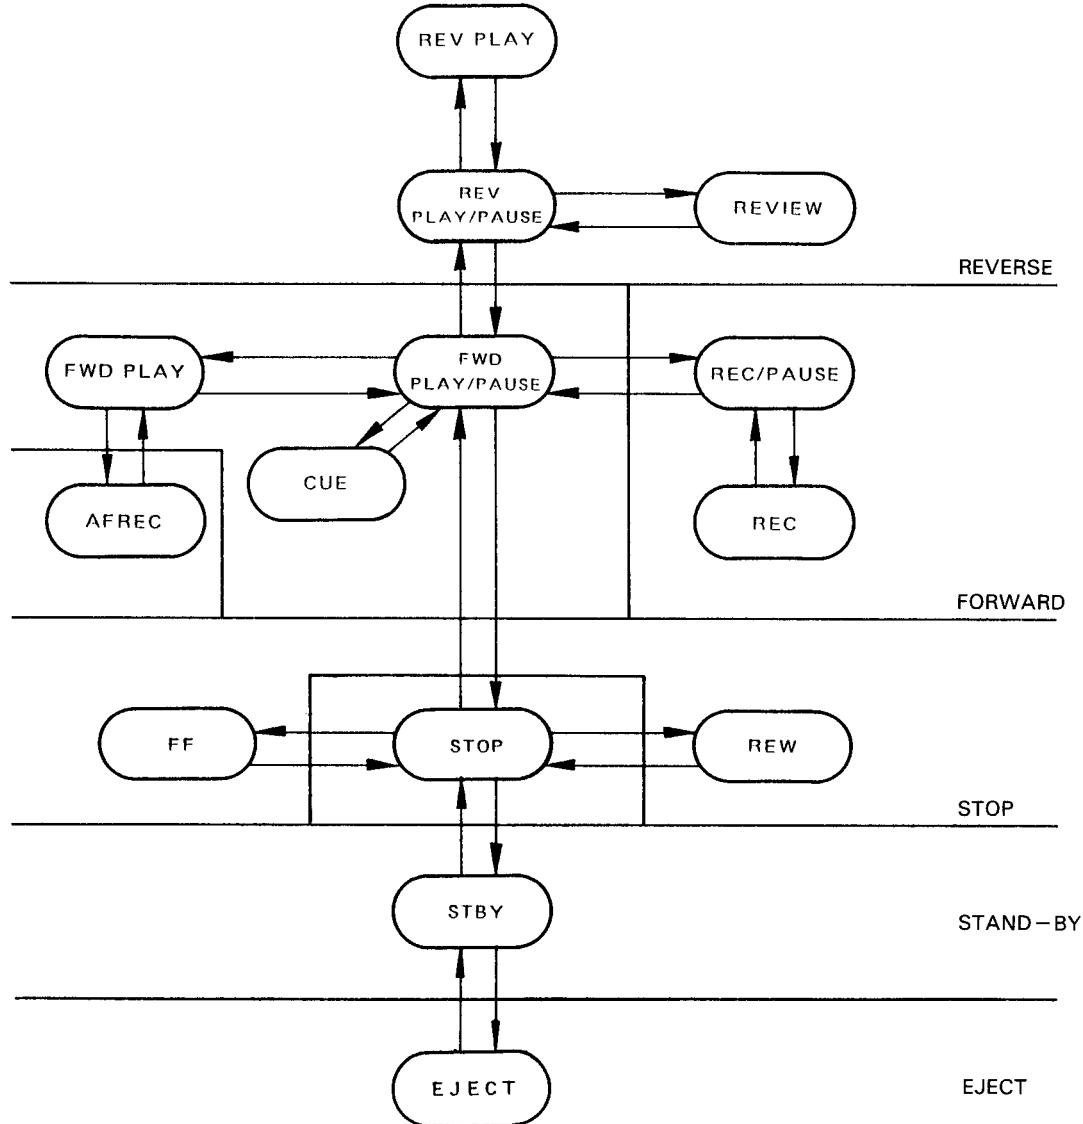

1-7-2. ENCODER PATTERN


- EJECT → STBY → TH WAIT (Threading wait) → UN TH WAIT (Unthreading wait) → STOP → FWD → REV

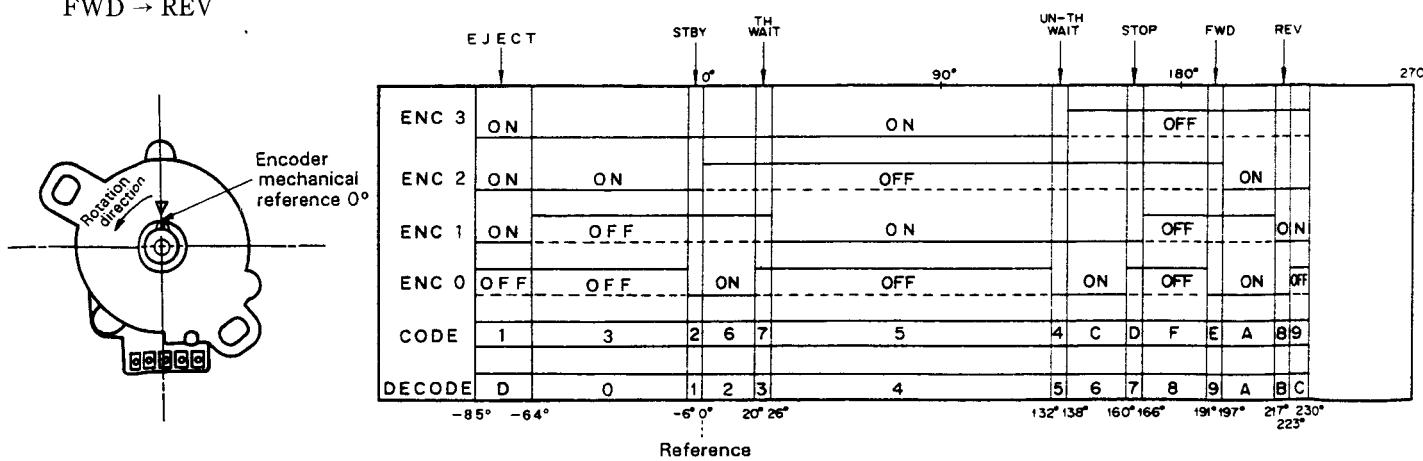


1-7-3. POWER ON

Cassette Tape Loaded → STOP


Cassette Tape Unloaded → STBY (standby, unthreading)

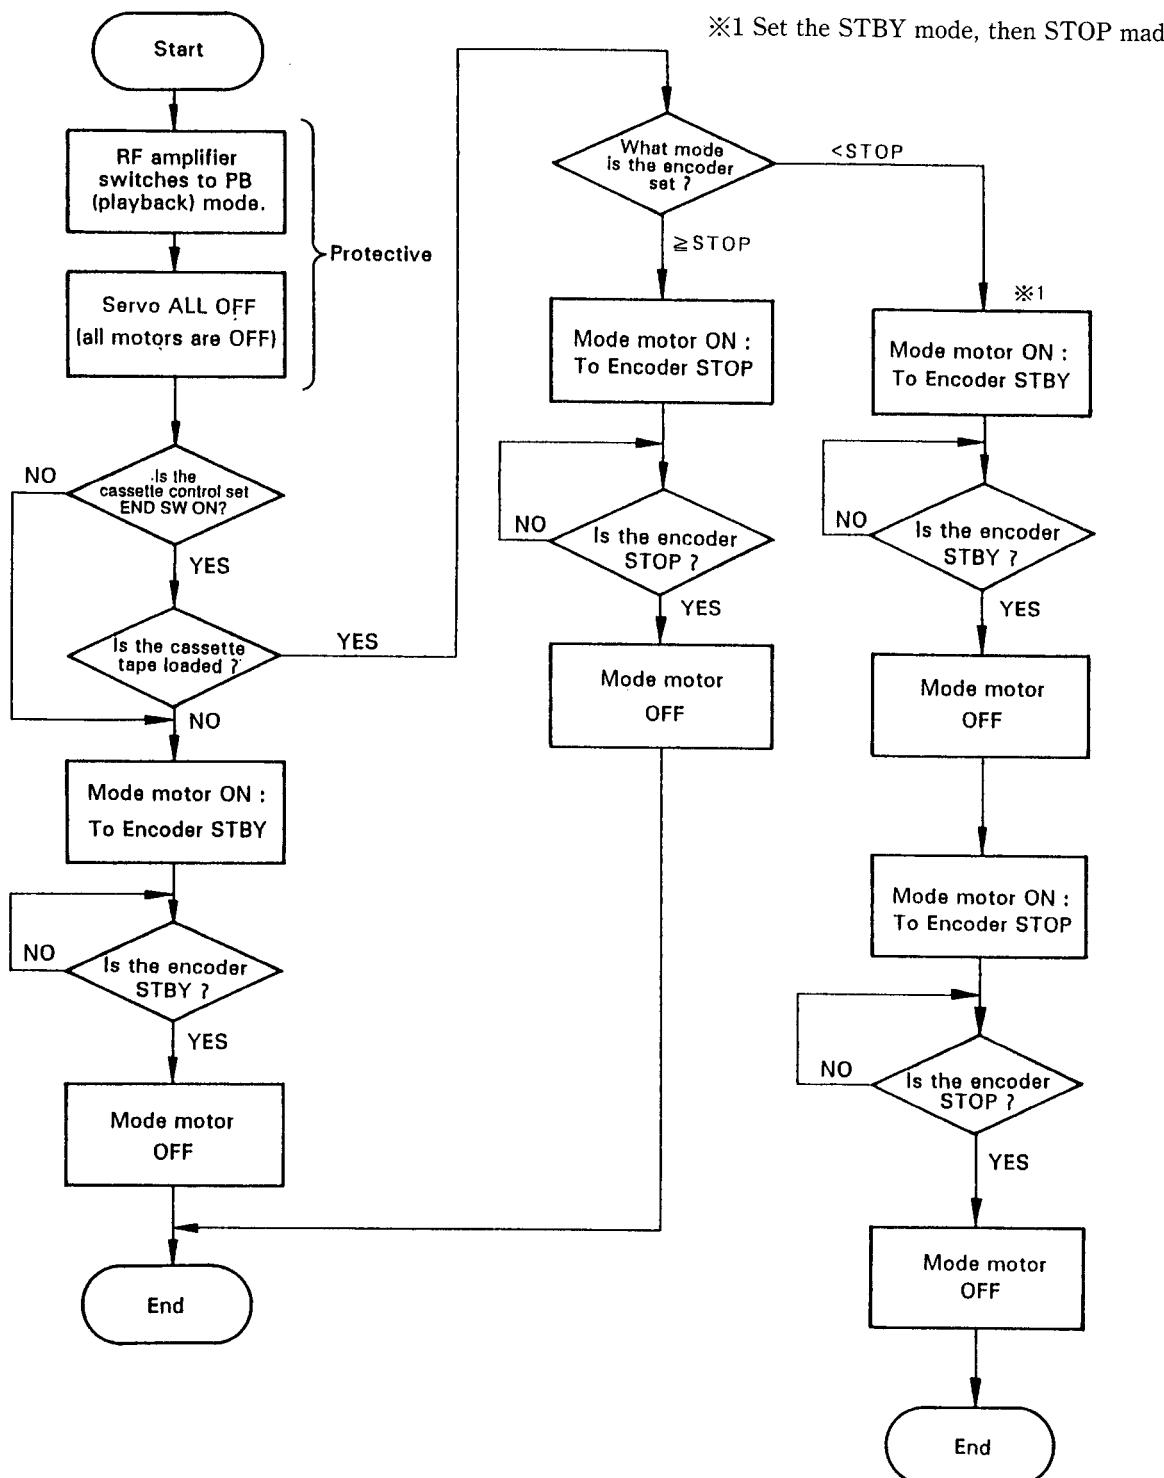


1-7-4. STOP → PLAY

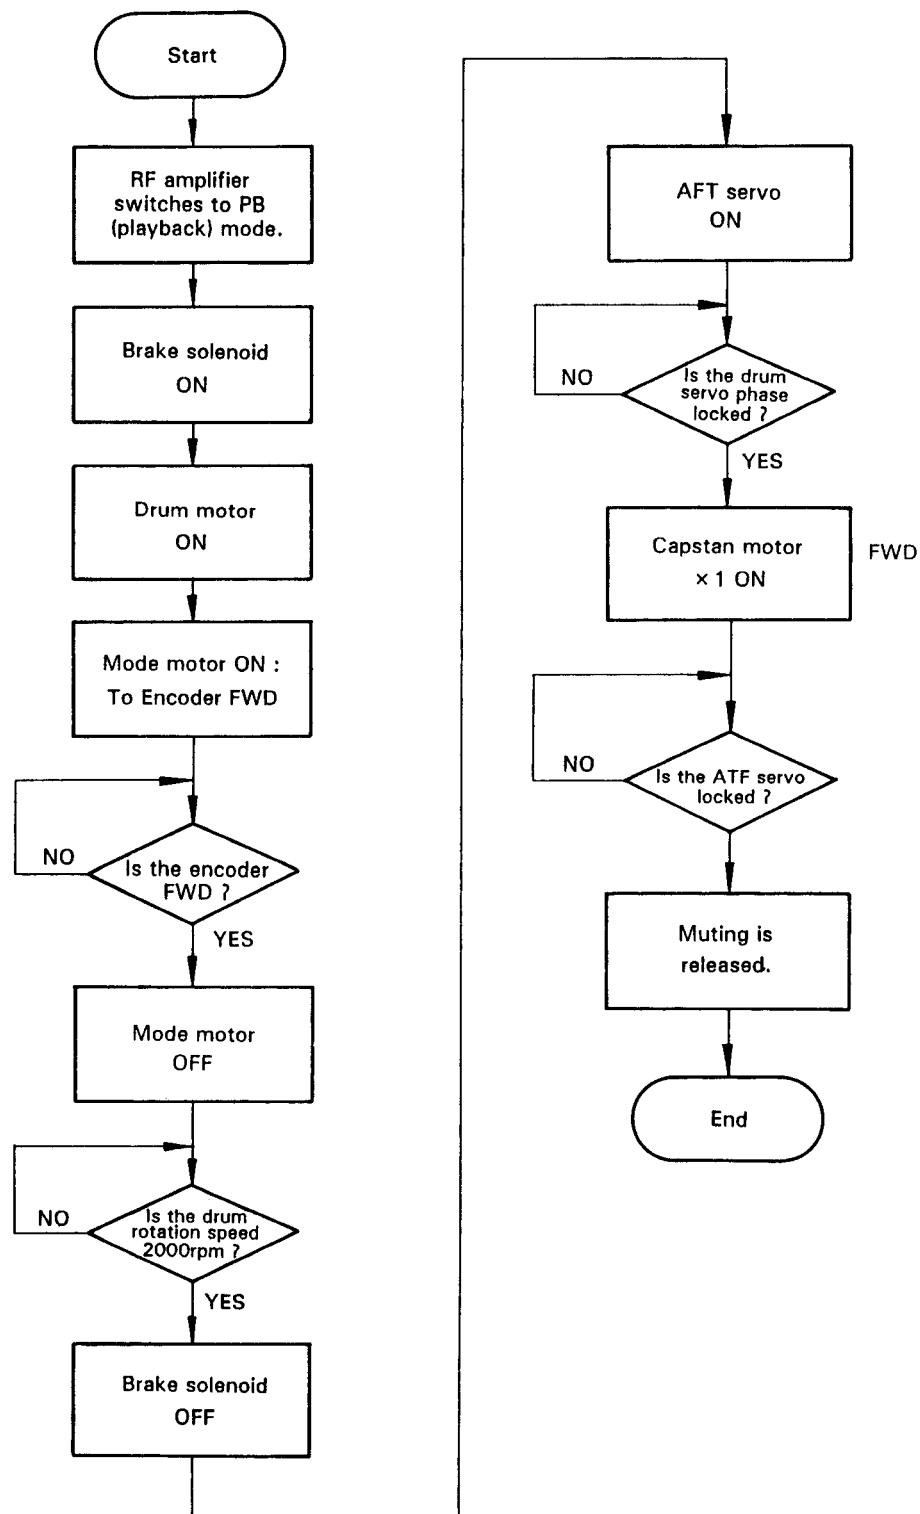


1-7-5. STOP → FF,REW

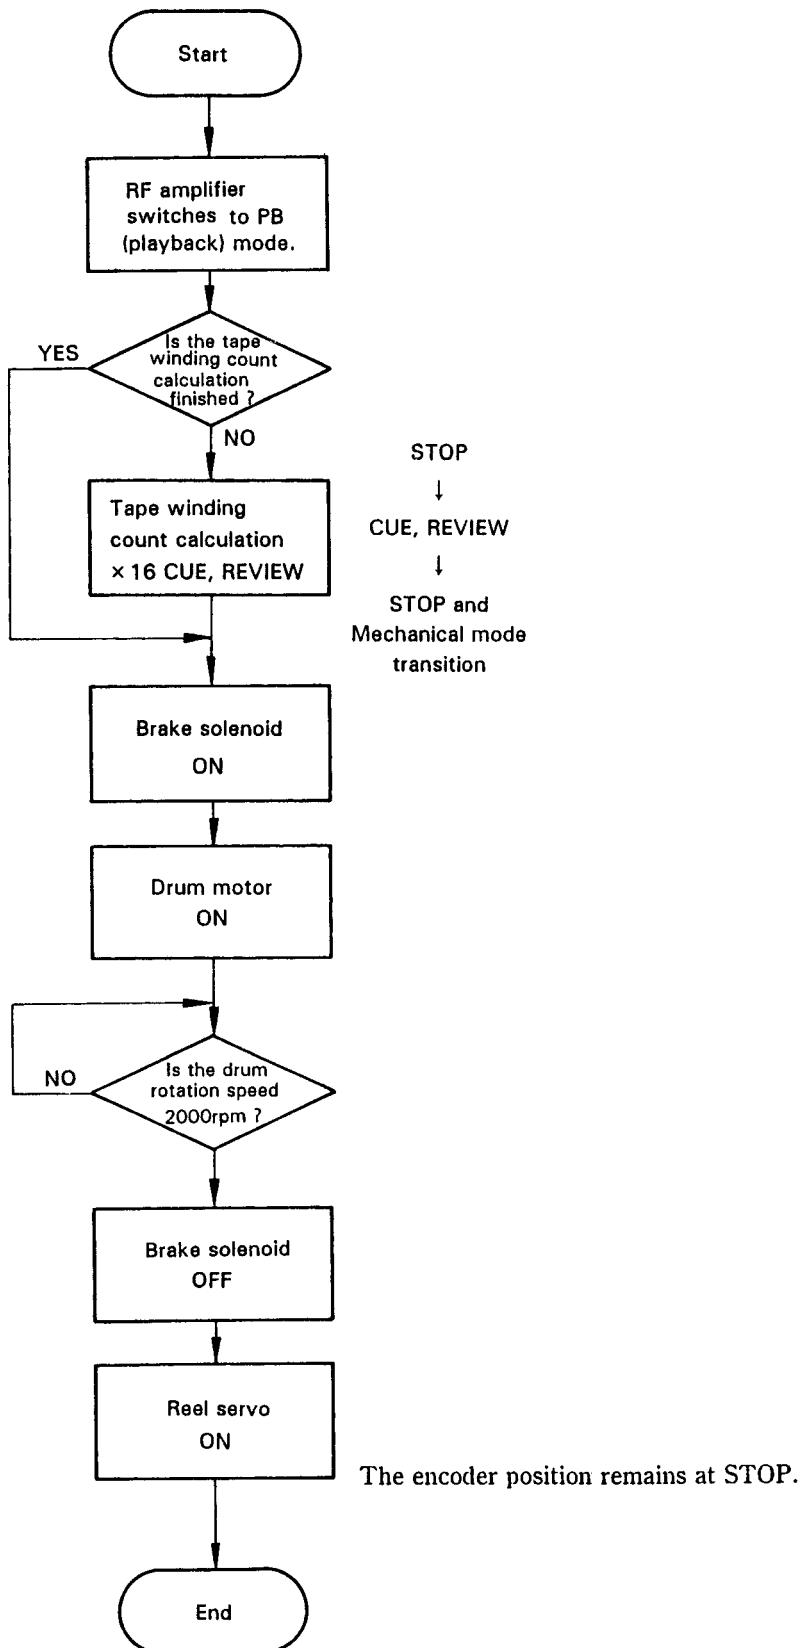

1-7-6. OPEN → CLOSE → STOP

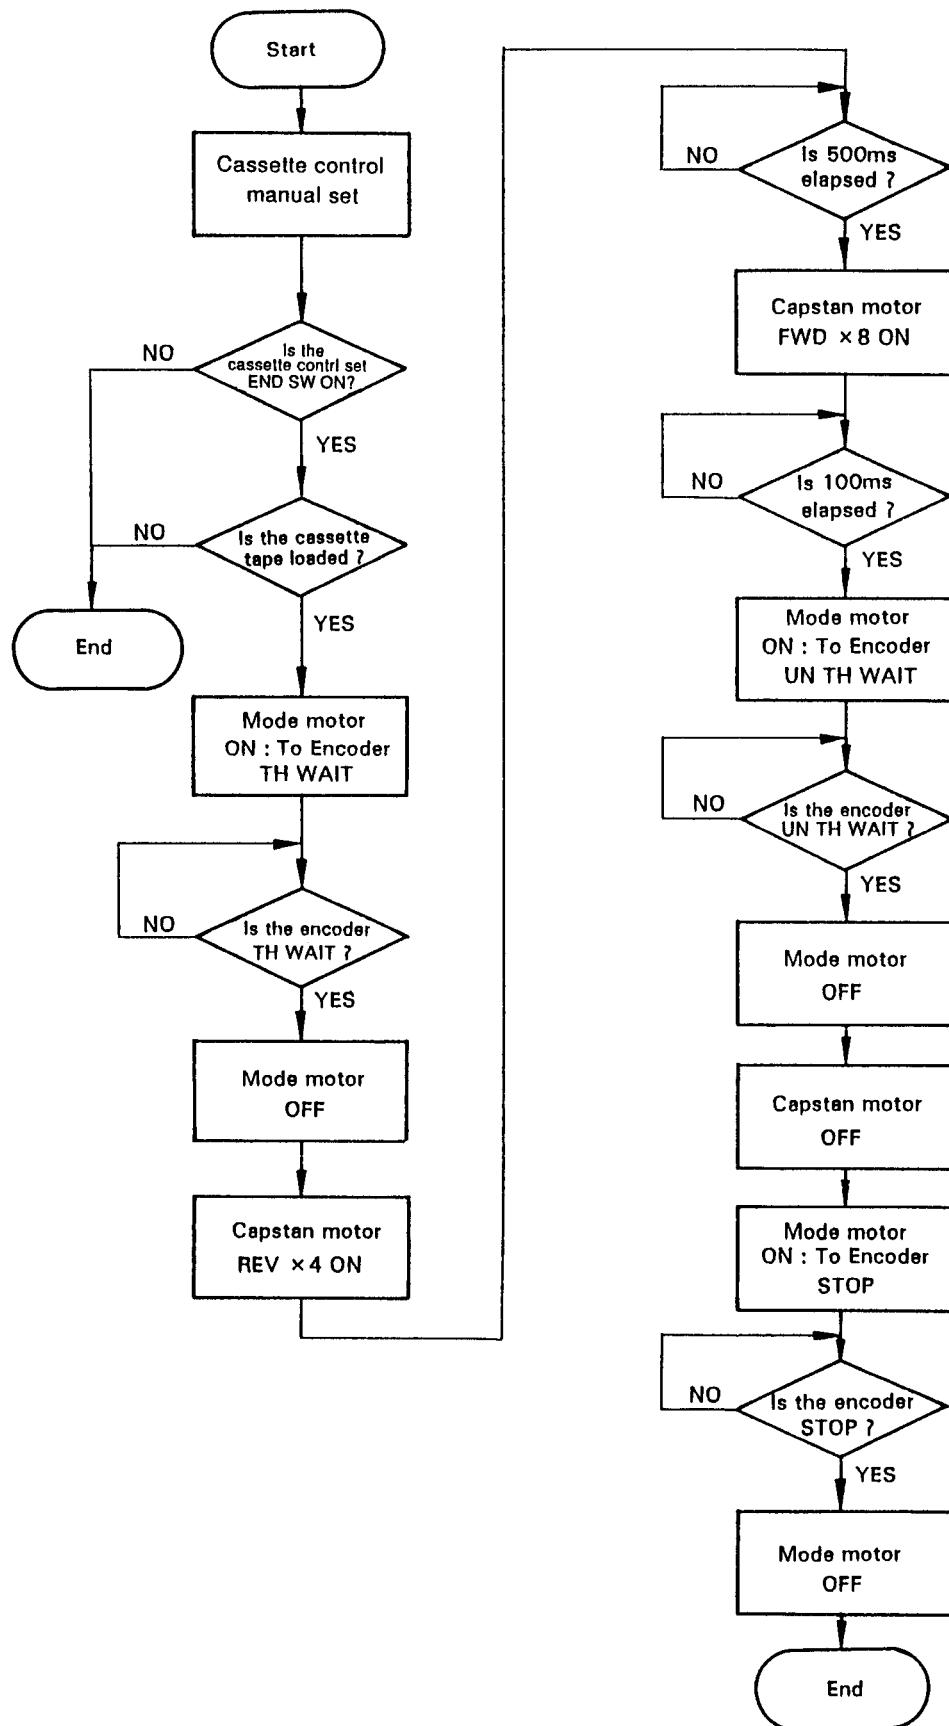

1-7-7. STOP → OPEN

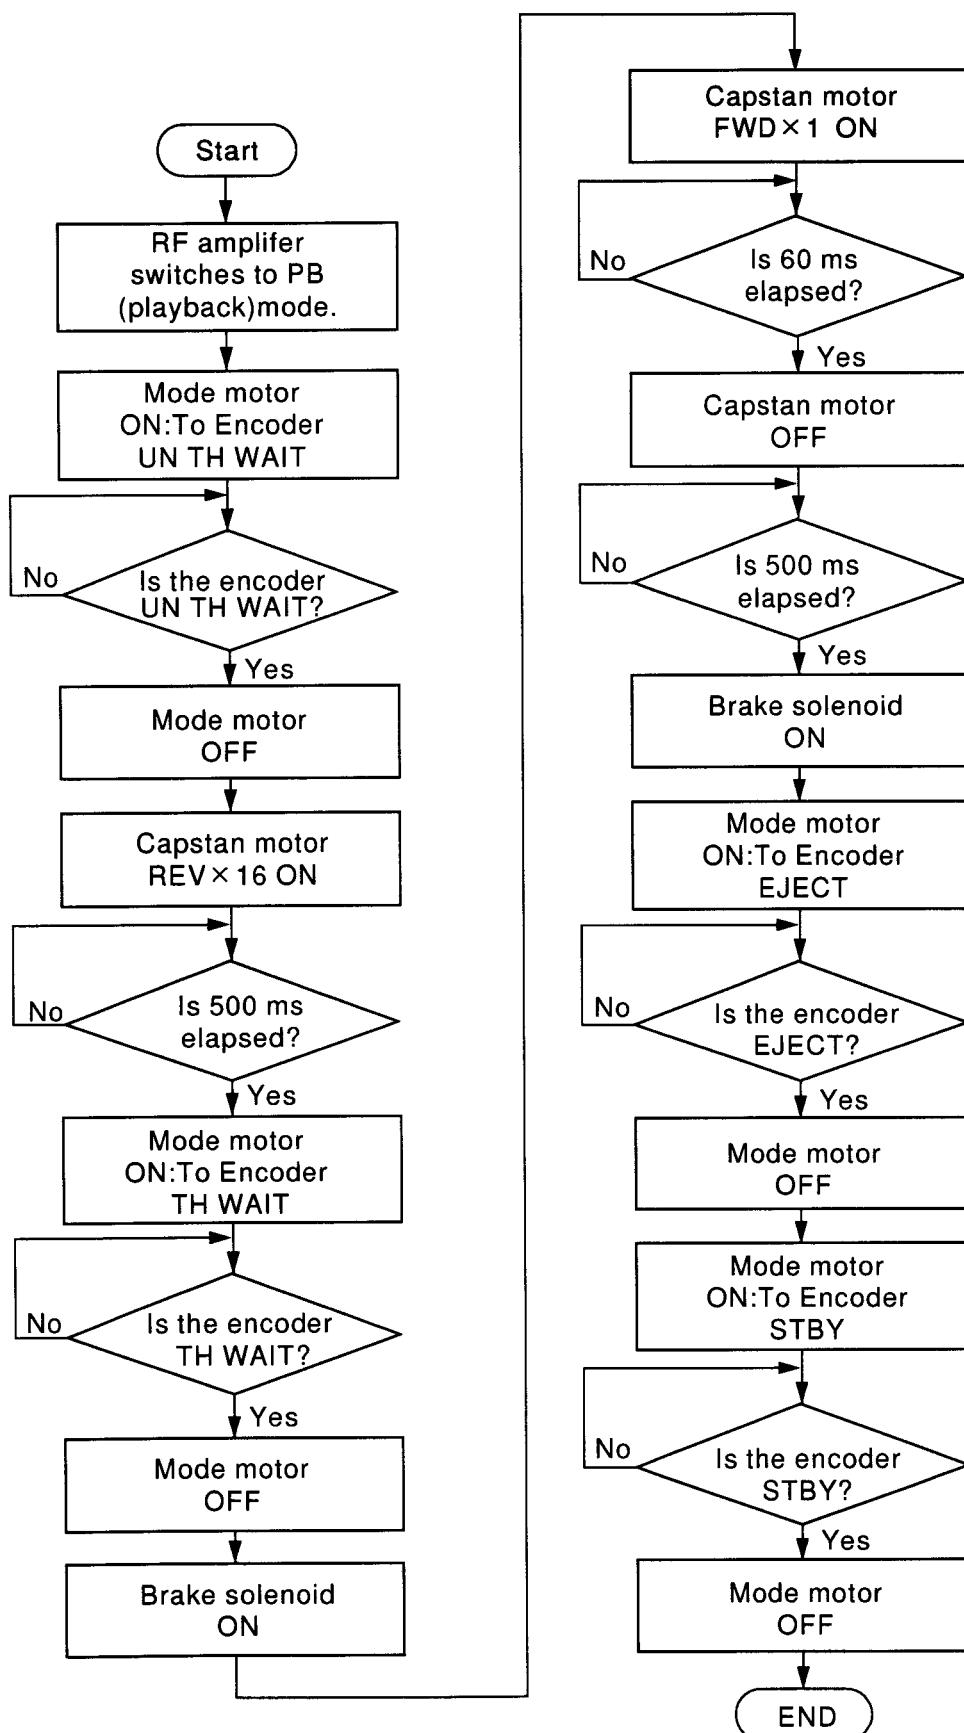

1.8 PARTS LIST FOR PACKING AND EXPLODED VIEWS

NOTES :

- Parts marked by “NSP” are generally unavailable because they are not in our Master Spare Parts List.
- The ▲ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
- Parts marked by “●” are not always kept in stock. Their delivery time may be longer than usual or they may be unavailable.

(1). EXPLODED VIEWS

(1)– 1. EXTERIOR (1/2)

Mark	No.	Description	Parts No.
NSP	1	DISPLAY UNIT	JWZ1006
	2	KEY UNIT	JWZ1007
	3	LCD CUSHION	JNM1079
	4	ROTARY KNOB A	JAA1020
	5	ROTARY KNOB B	JAA1021
NSP	6	COVER	JNV1136
	7	SLIDE KNOB A	JAC1134
	8	SLIDE KNOB B	JAC1135
	9	LCD SHIELD	JNC1137
NSP	10	EL CUSHION	JNM1078
	11	WRITE BUTTON	JAC1140
	12	ALUMINUM PANEL A	JAH1048
	13	ALUMINUM PANEL B	JAH1049
	14	ALUMINUM PANEL C	JAH1050
	15	ALUMINUM PANEL D	JAH1051
	16	PLATE A	JAH1052
	17	PLATE B	JAH1053
	18	HANDLE	JMX1003
	19	BOTTOM COVER	JNC1107
	20	DOOR BASE	JNS1193
	21	BATTERY COVER	JNS1198
	22	REAR PANEL	JNS1200
	23	SIDE GRILLE L	JNS1201
NSP	24	SIDE GRILLE R	JNS1202
	25	LEG	WEP1027
	26	LCD BASE 2	JNV1137
	27	FRONT PANEL ASSY	JXA1178
	28	BASE ASSY	JXA1191
	29	BUTTON ASSY	JXA1180
	30	LCD BASE 1 ASSY	JXA1183
	31	CAUTION LABEL	JRW1021
	32	STUD SCREW	JBA1011
	33	SPRING R	JBH1028
	34	CRICK SPRING	JBL1022
	35	HOLDER A	JNC1102
	36	EARTH CORD ASSY	JDE1205
	37	LABEL A	JNM1076
	38	SPACER A	JNV1123
	39	HOLDER	JNV1127
	40	LATCH	JXA1187
	41	SCREW	BPZ26P050FMC
	42	SCREW	BPZ26P060FNI
	43	SCREW	BPZ26P100FMC
	44	SCREW	BST26P050FCC
	45	SCREW	TSZ26P050FCC
NSP	46	SCREW	NSP
	47	SCREW	46
	48	SCREW	HEADPHONE KNOB
	49	SCREW	NUT
	50	SCREW	SLIDE KNOB C
	51	SCREW	MECHA ASSY
	52	SCREW	SHIELD SHEET
	53	SCREW	HP SHIELD
	54	SCREW	EARTH PLATE
	55	SCREW	COVER SHEET
NSP	49	SCREW	54
	50	SCREW	SPACER
	49	SCREW	JNC1139
	50	SCREW	JNC1140
	49	SCREW	JEC1011
NSP	50	SCREW	BST26P050FCC
	49	SCREW	JNV1138

(1)– 2. EXTERIOR (2/2)

Mark	No.	Description	Parts No.
1	MOTHER UNIT	JWZ1013	
2	POWER SUPPLY UNIT	JWZ1014	
3	LINE/MIC UNIT	JWZ1015	
4	DRIVER UNIT	JWZ1016	
5	VR UNIT	JWZ1017	
6	HEADPHONE UNIT	JWZ1008	
7	REM. RECEIVER UNIT	JWZ1009	
8	MECHA UNIT	EXA9005	
9	RF UNIT	EWX9001	
10	CLAMPER	PEC-034	
11	SLIDE KNOB D	JAC1137	
12	CORD ASSY	JDE1185	
13	CORD ASSY	JDE1186	
14	CORD ASSY	JDE1187	
15	CONNECTOR	JDE1188	
16	SNAP PLATE	JBE1004	
17	SCREW A	JBH1026	
18	SCREW D	JBH1029	
19	SCREW E	JBH1030	
20	SCREW F	JBH1037	
21	TERMINAL SPRING	JBL1018	
22	SHAFT B	JLA1053	
23	SPACER	JLA1081	
24	REAR TERMINAL PANEL	JNB1029	
25	VR BRACKET	JNC1100	
26	INPUT SHIELD A	JNC1101	
27	BATTRY HOLDER	JNC1143	
28	FRONT FRAME	JNC1106	
29	BRACKET L	JNC1124	
30	LABEL B	JNM1077	
31	TERMINAL HOLDER	JNV1125	
32	STOPPER	JNV1126	
33	FRAME ASSY	JXA1181	
34	CENTER FRAME ASSY	JXA1182	
35	SCREW	BMZ20P040FMC	
36	SCREW	TSZ26P050FCC	
37	SCREW	BSZ30P080FMC	
38	SCREW	BST26P040FCC	
39	SCREW	BSZ26P050FMC	
40	SCREW	BSZ26P080FMC	
41	SCREW	ASZ30P080FCC	
42	SCREW	PBZ30P080FCC	
43	SCREW	JFZ20P018FNI	
44	EARTH SPRING	JBL1021	
45	WASHER	YE12FUC	
46	HEADPHONE KNOB	JAA1022	
47	NUT	NKX1FZN	
48	SLIDE KNOB C	JAC1136	
49	MECHA ASSY	EXK2508	
50	SHIELD SHEET	JNC1138	
51	HP SHIELD	JNC1139	
52	EARTH PLATE	JNC1140	
53	COVER SHEET	JEC1011	
54	SCREW	BST26P050FCC	
55	SPACER	JNV1138	

(1) - 3. MECHA UNIT

CASSETTE COMPARTMENT UNIT

Mark	No.	Description	Parts No.
1		CONNECTOR ASSY 2P (J14)	JDE1204
2		SWITCH	JSN1001
3		ROLLER ASSY	JXA1169
4		PRESSURE SPRING ASSY	JXA1170
5		RINK L ASSY	JXA1171
6		RINK R ASSY	JXA1172
7		SIDE SHASSIS L ASSY	JXA1173
8		SIDE SHASSIS R ASSY	JXA1190
9		FIXED PLATE ASSY	JXA1175
10		DAMPER UNIT	CXA5631
11		SPRING R	JBH1039
12		SPRING AB	JBH1034
13		SPRING L	JBH1035
14		SPRING SP	JBH1036
15		SHAFT A	JLA1086
16		SHAFT B	JLA1087
17		SHAFT C	JLA1088
18		ROLLER	JLA1089
19		ROLLER RD	JLA1077
20		TOP PLATE	JNC1115
21		DAMPER ARM	JNC1116
22		BASE ARM	JNC1117
23		COMPARTMENT	JNC1118
24		CONNECTING ROD	JNC1119
25		SLIDE PLATE	JNC1120
26		LEVER	JNC1121
27		BRACKET ASSY	JXA1185
28		GEAR A	JNV1130
29		GEAR B	JNV1131
30		SCREW	BMZ20P040FMC
31		SCREW	CBA1070
32		SCREW	JFZ20P018FNI
33		SCREW	JFZ20P025FNI
34		SCREW	JGZ20P030FMC
35		WASHER	WT12D035D025
36		WASHER	WT16D035D025
37		E RING	YE12FUC
38		E RING	YE15FUC
39		GEAR	JNV1134

DAT MECHA UNIT

Mark	No.	Description	Parts No.
1		CLAMPER	HEF-102
2		SWITCH (S102)	ESG9001
3	
4		SWITCH 2P	ESG1001
5		ENCODER ASSY	JSX1007
6		POWER MOTOR	CXM1020
7		SOLENOID	EXP9001
8		PHOTO REFLECTOR (Q101, Q102) (REEL SENSOR)	GP2S24C
9		PHOTO REFLECTOR ASSY (Q103) (END SENSOR)	EXX9002
10		PHOTO REFLECTOR ASSY (Q104) (TOP SENSOR)	EXX9001
11	
12		DRUM ASSY	EXH9010
13		BRACKET L ASSY	EXA1117
14		PINCH ARM ASSY	EXA1118
15		PINCH DRIVE ARM ASSY	EXA1119
16		TR ARM ASSY	EXA1122
17		DRIVE GEAR ASSY	EXA1123
18		SWING ARM ASSY	EXA1124
19		REEL BASE ASSY	EXA1125
20		ROLLER GUIDE	EXA1129
21		TR ARM BRACKET ASSY	EXA1184
22		TR BAND ASSY	EXA1185
23		SLIDER PLATE	ENE1006
24		SENSOR BRACKET R	ENV1236
25		STABILIZER	ENV1192
26		TR LEVER	ENV1194
27		TR BRAKE	ENV1195
28		PULL ARM	ENV1197
29		REEL GEAR	ENV1251
30		REEL HUB	ENV1252
31		IDLER GEAR	ENV1253
32		CLUTCH DRUM	ENV1254
33		PULLEY GEAR	ENV1255
34		CHANGE ARM	ENV1256
35		BRAKE LEVER	ENV1257
36		BRAKE PLATE	ENV1258
37		CHANGE LEVER	ENV1259
38		REV BRAKE	ENV1260
39		MOTOR GEAR	ENV1231
40		WORM GEAR	ENV1232
41		WORM WHEEL	ENV1233
42		DRIVE GEAR	ENV1234
43		CAM	JNV1122
44		INTERVAL GEAR	ENV1238
45		MODE PLATE	ENV1239
46		HARD BRAKE	ENV1240
47		DRIVE ARM	ENV1241
48		THREADING GEAR	ENV1242
49		THREADING ARM L	ENV1243
50		THREADING ARM R	ENV1244

(2). PACKING

Mark	No.	Description	Parts No.	Mark	No.	Description	Parts No.
	51	THREADING LINK L	ENV1245	NSP	1	WARRANTY CARD	ARW-088
	52	THREADING LINK R	ENV1246		2	SHOULDER BELT	JAX1011
	53	SLIDER L	ENV1247		3	SOFT CASE	JAX1012
	54	SLIDER R	ENV1248		4	CONNECTION CORD	JDE1196
	55	PINCH ROLLER	ENT1016		5	BATTERY PACK (D-B101)	JEX1005
	56	BELT	ENT1017	NSP	6	BATTERIES (R03)	JEX1006
	57	PULL GUIDE FLANGE	ELA2025		7	REMOTE CONTROL UNIT (CU-D013)	JPX1001
	58	TAPE GUIDE	ELA2022		8	OPERATING INSTRUCTIONS	JRD1020
	59	EARTH SPRING	EBL1004	△	9	AC ADAPTOR	JWR1020
	60	REEL WASHER	EBF1014		10	UNIT BOX	JHG1093
	61	SENSOR SHEET	EEF1001		11	MIRROR MAT SHEET	JHL1069
	62	BRAKE FELT	ENM1019		12	PROTECTOR L	JHP1017
	63	DAMPER	ENT1021		13	PROTECTOR R	JHP1018
	64	TAPE GUIDE	ENV1282		14	PARTS BOX	JHW1027
	65	BRAKE SHOE	ENT1022		15	BATTERY COVER	JXX1283
	66	CAPSTAN DD UNIT	EXH9007		16	HANDLE	JHW1028
	67	PINCH-GUIDE SPRING	EBH9005		17
	68	TR ARM SPRING	EBH1237		18	REINFORCING BOARD	JHW1029
	69	PULL-GUIDE SPRING	EBH1222				
	70	SPRING	EBH1223				
	71	TR BRAKE SPRING	EBH1224				
	72	IDLER GEAR SPRING	EBH1226				
	73	REEL HUB SPRING	EBH1227				
	74	BRAKE PLATE SPRING	EBH1228				
	75	BRAKE LEVER SPRING	EBH1229				
	76	REV BRAKE SPRING	EBH9006				
	77	CHANGE ARM SPRING	EBH1231				
	78	DRIVE ARM SPRING	EBH1232				
	79	HARD BRAKE SPRING	EBH1233				
	80	THREADING ARM SPRING (L)	EBH1238				
	81	THREADING ARM SPRING (R)	EBH1239				
	82	SCREW	BBZ20P060FZK				
	83	SCREW	BMZ20P040FMC				
	84	SCREW	PMS20P025FMC				
	85	SCREW	JGZ20P030FMC				
	86	WASHER	WT16D040D050				
	87	WASHER	WT16D032D025				
	88	WASHER	WT10D035D025				
	89	WASHER	WA16D032D025				
	90	WASHER	WA16D032D013				
	91				
	92	SCREW	EBA1025				
	93	WASHER	EBE1002				
NSP	101	CONNECTOR ASSY 5P (J15)	EDX9015				
NSP	102	CONNECTOR ASSY 6P (J13)	EDX9013				
NSP	103	LEAD CARD 12P (J12)	EDH9005				
NSP	104	REEL SENSOR BOARD	ENP9016				
NSP	105	CHASSIS ASSY	EXA9008				
NSP	106	MOTOR BRACKET ASSY	EXG9037				
	107	DRIVE LEVER	ENR1014				

1.9 PCB PARTS LIST

NOTES :

- Parts marked by "NSP" are generally unavailable because they are not in our Master Spare Parts List.
- The \triangle mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
- Parts marked by "●" are not always kept in stock. Their delivery time may be longer than usual or they may be unavailable.
- When ordering resistors, first convert resistance values into code form as shown in the following examples.

Ex. 1 When there are 2 effective digits (any digit apart from 0), such as 560 ohm and 47k ohm (tolerance is shown by J = 5%, and K = 10%).

$$560\Omega \rightarrow 56 \times 10^1 \rightarrow 561 \text{ } RD1/8PM [5] [6] [1] J$$

$$47k\Omega \rightarrow 47 \times 10^3 \rightarrow 473 \text{ } RD1/4PS [4] [7] [3] J$$

$$0.5\Omega \rightarrow 0R5 \text{ } RN2H [0] [R] [5] K$$

$$1\Omega \rightarrow 010 \text{ } RS1P [0] [1] [0] K$$

Ex. 2 When there are 3 effective digits (such as in high precision metal film resistors).

$$5.62k\Omega \rightarrow 562 \times 10^1 \rightarrow 5621 \text{ } RM1/4PC [5] [6] [2] [1] F$$

Mark	No.	Description	Parts No.	Mark	No.	Description	Parts No.
LIST OF ASSEMBLIES							
NSP	MAIN UNIT	JWM1158			IC520		PST529D
	└ MOTHER UNIT	JWZ1013			IC602		TC4053BF
	└ POWER SUPPLY UNIT	JWZ1014			IC521		TC4S81F
NSP	LINE/MIC UNIT	JWZ1015			IC501, IC907		TC74HCU04AF
	└ DRIVER UNIT	JWZ1016			Q501, Q506—Q508, Q605, Q608, Q611,		DTA114EU
NSP	VR UNIT	JWZ1017			Q904		
NSP	SUB UNIT	JWM1155			Q735, Q835		DTA124EU
	└ DISPLAY UNIT	JWZ1006			Q509, Q603, Q615, Q616, Q620,		DTC114EU
	└ KEY UNIT	JWZ1007			Q901—Q903		
	└ HEADPHONE UNIT	JWZ1008			Q736, Q836		DTC124EU
NSP	REM. RECEIVER UNIT	JWZ1009			Q630		DTA123JUA
					Q401		2SA1241
NSP	MECHA ASSY	EXK2508			Q504, Q505, Q601, Q602, Q609, Q610, Q625		2SC4081
	└ RF UNIT	EWF9002			Q404		2SC3076
NSP	└ REC/PLAY RF UNIT	EWY9002			Q733, Q734, Q737, Q833, Q834, Q837		2SD2114K
NSP	└ MONITOR RF UNIT	EWY9003			D503, D506, D731, D831		DAN202K
					D502, D505, D732, D832		DAP202K
	AC ADAPTOR	JWR1020			D504, D599, D733, D833, D902		DA119
					D501		KV1550NT
					D401, D402		MA153—MC
MOTHER UNIT							
SEMICONDUCTORS							
IC905		AK5340A—VS			L501		JTF1037
IC505, IC509		HD49226AFS			L909, L911, L912		JTF1041
IC601		HD49228FS			L516, L517, L908		JTF1042
IC903, IC904		HD49229			L503		JTF1043
IC515		TC74HC00AF			L605, L610		JTF1044
IC908		TC74HC04AF		\triangle	L701, L801, L502		JTF1050
IC901, IC902		TC74HC08AF			L602, L606		JTF1045
IC909		TC74HC10AF			L603		JTF1046
IC511, IC514		TC74HC153AF			L518		JTF1048
IC503, IC508		TC74HC157AF			T501		JTF1047
IC516		TC74HC32AF			F609, F901—F903, F905		JTF1036
IC513		TC74HC595AF		\triangle	F502		JTF1038
IC911		TC74HC74AF		\triangle	L907, L910, L913		JTF1022
IC507, IC510		HM62256BLFP			F505, F508—F510, F512, F513, F515		JTF1049
IC609, IC610		LB1687M		\triangle	L504, L519		JTF1051
IC731, IC831		NJM4565DD		COILS AND FILTERS			
IC603		NJM2902M			L501		
IC403, IC604		NJM2904M			L909, L911, L912		
IC733, IC833		NJM5532DD			L516, L517, L908		
IC517		PDB083A—K			L503		
IC512		PDG131A—K			L605, L610		
IC906		PD2029A					
IC401, IC402, IC404		PQ05SZ1					
IC502, IC522		TC7WU04F					
SWITCHES AND RELAYS							
IC731, IC831		NJM4565DD			SW731		JSH1009
IC603		NJM2902M			SW732		JSH1011
IC403, IC604		NJM2904M					
IC733, IC833		NJM5532DD					
IC517		PDB083A—K					
CAPACITORS							
IC512		PDG131A—K			C916, C929		CCSQCH030C50
IC906		PD2029A			C742, C743, C842, C843		CCSQCH050C50
IC401, IC402, IC404		PQ05SZ1			C921, C934		CCSQCH060D50
IC502, IC522		TC7WU04F			C919, C932		CCSQCH080D50
					C910, C924		CCSQCH100D50

Mark	No.	Description	Parts No.	Mark	No.	Description	Parts No.
	C527, C544, C518, C966, C968–C970 C528, C529, C546, C548, C937 C935 C575 C936, C938		CCSQCH101J50 CCSQCH120J50 CCSQCH150J50 CCSQCH181J50 CCSQCH200J50		RESISTORS		JCP1022 RS1/2PMFR47J JCN1037 RS1/10S□□□
	C668, C735, C835 C918 C609, C699 C741, C841 C509, C510, C646, C653, C967		CCSQCH221J50 CCSQCH270J50 CCSQCH331J50 CCSQCH390J50 CCSQCH470J50		VR901, VCR902 R675, R676 R748, R749, R848, R849 Other Resistors		
	C577, C580, C581, C601, C602, C758, C858, C942 C605, C613, C595, C597 C611, C689 C552, C734, C834, C948, C955 C411, C412, C415, C416, C551		CCSQCH471J50 CCSQCH560J50 CCSQCH561J50 CEA100M50LS CEA101M10LS		OTHERS		B12B-PH-K-S B2B-PH-K-S S04B-PH-SM3-TB B5B-PH-K-S B6B-PH-K-S
	C956 C504, C508 C614, C750, C850, C951 C402, C403, C406, C407, C652, C747, C748, C847, C848, C903, C904, C906, C908, C922, C962 C736, C754, C836, C854		JCH1019 CEA330M35LL CEA4R7M50LS CEA470M16LS		CN020 CN014 CN027, CN031 CN015 CN013	CONNECTOR CONNECTOR CONNECTOR CONNECTOR CONNECTOR	B7B-PH-K-S B8PS-BC-1 JDE1195 51039-0500 51039-0600
	C944 C637 C620 C638 C683		CEAS101M16		CN019 CN030 CN025 CN018 CN023	CONNECTOR CONNECTOR CONNECTOR CABLE HOLDER CABLE HOLDER	51052-0300 52004-1010 52045-1010 52045-1245 52045-1545
	C622–C624, C626, C629 C619 C634, C569 C506, C511, C520, C554, C556, C560, C564, C630, C656, C657–C659, C666, C669, C675, C947, C964 C749, C752, C753, C849, C852, C853		JCH1020 CEVNP010M50 CEVNP3R3M25 CEVNP4R7M16 CEVR47M50		CN024 CN026 CN017 CN012 CN10, CN011	CABLE HOLDER CONNECTOR CONNECTOR CONNECTOR CONNECTOR	53014-0610 53022-0810 53022-0910 53178-0810 JDE1202
	C756, C856 C745, C845 C746, C846 C744, C844 C401, C404, C405, C408–C410, C417, C418, C434, C596, C598, C599, C612, C617, C628, C631, C698		CEV010M50 CEV100M16 CEV4R7M35 CEV470M16		JA901 JA503 JA501 JA502 TP601	JACK JACK JACK JACK PIN	JKB1001 JKB1002 JKB1003 TORX178A RT-08T-1.3B
	C505, C507, C525, C526, C542, C543, C576, C625, C627, C649, C662–C665, C671, C672–C674, C913, C917, C920, C927, C931, C933, C945, C946, C965		CEZA100M63		X503 X501, X502 X901 X902	OSCILLATOR OSCILLATOR OSCILLATOR OSCILLATOR	JSS1019 JSS1020 JSS1021 JSS1022
	C645 C639 C604, C607, C608, C632, C635, C661, C912, C925 C914, C928		CFTXA273J50 CFTXA472J50 CFTXA561J50 CFTXA683J50 CKSQYB102K50				
	C621 C517, C618, C644, C911, C926, C957 C519, C521, C524, C530, C536, C539, C541, C547, C550, C555, C557, C561, C563, C565, C574, C615, C616, C633, C641–C643, C651, C660, C667, C670, C676–C682, C687, C688, C697, C751, C755, C851, C855, C901, C902, C905, C909, C923, C949, C961, C958, C570, C840, C532, C740, C757, C960, C950		CKSQYB123K50 CKSQYB153K50 CKSQYB222K50		IC015 IC006 IC005 IC012 IC011	S-80750AN-JE NJM78L05UA NJM79L05UA S-81250PG-PD TC4053BF	
	C636 C413, C414, C422, C501, C503, C512, C513, C522, C553, C566, C568, C578, C582, C640, C733, C833, C915, C930, C943, C952–C954		CKSQYB223K50 CKSQYB332K50 CKSQYB472K50 CKSQYB473K50		Q008, Q011, Q013, Q024–Q026 Q006, Q007 Q016, Q018, Q027 Q001, Q005, Q009, Q010, Q012, Q014, Q015, Q017, Q023 Q003	Q008, Q011, Q013, Q024–Q026 Q006, Q007 Q016, Q018, Q027 Q001, Q005, Q009, Q010, Q012, Q014, Q015, Q017, Q023 Q003	DTA114EK DTA114YK DTC114YK DTC124XK 2SA1162
△	C435, C590 C971 C433, C523, C531, C540, C545 C738, C838		CKSQYB683K25 CKSQYF104Z50		Q002 Q019, Q021 Q020 Q004 Q022	Q002 Q019, Q021 Q020 Q004 Q022	2SA1469 2SB1122 2SB1203 2SD1682 2SD1803
			CQFA104J50 CQFA473J50		△ D003, D004 D018 D013–D016	D003, D004 D018 D013–D016	JCX1001 MA152WA-MO DZD5R1X DZD6R8XY SB10-05PCP
			JCE1132		D017	D017	
			JCE1133		△ D006	D006	

Mark	No.	Description	Parts No.	マーク	No.	名 称	部品番号
▲	D005		SB20-03	Q604, Q613, Q614, Q622			DTC114EK
▲	D007		5GWJ2CZ47C	Q612, Q618			2SC4097
▲	D001, D002, D008, D009, D012		1SR35-100A-93	Q405, Q607			2SD1801
	D010, D011		MA151A-MA	Q619			2SD1803
				D606			1SR35-100A
SWITCHS AND RELAYS							
▲	RY001		JSR1027	CAPACITORS			
CAPACITORS				C686			JCE1134
	C008, C013, C014		CEAS102M16	C421			JCE1132
	C007		CEAS222M16	C419, C420			CKSQYF104Z50
	C001, C002		CEAS470M16				
	C022, C023		CEA100M50LS				
	C012		CEA101M10LS				
	C015-C019		CKSQYB102K50				
	C009, C021		CKSQYB104K16				
	C003-C006, C010, C011, C020, C024		CKSQYF104Z50				
RESISTORS							
	R005		RN1/2VR22JL				
	R006		RN1/2V010JL				
	R024-R028		RN2V100JL				
	R029, R030		RN2V3R9JL				
	R057, R058		RS1/2S27J1				
	Other Resistors		RS1/10S□□□J				
OTHERS							
	CN001	CONNECTOR	B3B-EH				
	CN004	CONNECTOR	B5B-EH				
	CN002	CONNECTOR	B5B-EH-K				
	CN005	EARTH TERMINAL	JKF1010				
	CN003	CABLE HOLDER	51020-1000				
		HEAT SINK	JNC1123				
LINE/MIC UNIT							
SEMICONDUCTORS							
	IC701		UPC4572C				
SWITCH							
	SW701		JSH1009				
CAPACITORS							
	C703, C803		CCSQCH100D50				
	C702, C802		CEA100M35NPLL				
	C707, C807		CEA330M35				
	C701, C710, C801, C810		CEALNP4R7M50				
	C704, C804		CEA470M35				
	C713		CKSQYF104Z50				
	C706, C806, C712		CKSQYB473K50				
	C711, C811		CCSQCH471J50				
RESISTORS							
	All Resistors		RS1/10S□□□J				
OTHERS							
	CN123	CABLE HOLDER	52007-0610				
	CN124	CONNECTOR	52011-0310				
	JA702	JACK	JKB1001				
	JA701	JACK	JKN1019				
△	L702, L703, L802, L803		JTF1050	X201	OCILLATOR		JSS1015
DRIVER UNIT				V201	LCD		JAW1003
SEMICONDUCTORS				V202	EL		JEL1006
	IC605		NJM2904M				
	IC405		S-80250AG-GB				
	IC606		TD62M4700F				
	Q606, Q617, Q623, Q624		DTA114EK				
	Q621		DTA115EK				

Mark	No.	Description	Parts No.	Mark	No.	Description	Parts No.
KEY UNIT							
SEMICONDUCTORS				OTHERS			
Q230—Q233 D231, D233 D230 D232			XN4601 MAA3371X TLG262 TLS262	CN116		CONNECTOR LED BUSH	JDE1207 CNV-724
SWITCHES AND RELAYS							
SW234, SW237, SW238, SW241, SW242, SW244—SW252 SW230—SW233, SW235, SW236, SW240			JSG1017 MSG3003	REC/PLAY RF UNIT			
CAPACITORS			CCSQCH101J50 CKSQYF104Z50	SEMICONDUCTORS			
C230—C252 C253				IC351 Q351, Q352 Q353, Q354 Q355, Q356			HA12154MA 2SK932 2SD1328 2SC2412K
RESISTORS			RS1/10S□□□J	COILS AND TRANS			
All Resistors				L351			ETF9001
OTHERS				CAPACITORS			
CN355	CONNECTOR LED BUSH		52080-1210 CNV-724	C379 C380 C374 C370 C377			CCSQCH270J50 CCSQCH330J50 CCSQCH820J50 CCSQCH101J50 CCSQCH121J50
HEADPHONE UNIT							
SEMICONDUCTORS				C373, C378 C369 C355, C356 C351—C354, C360—C362, C365—C368, C371, C372, C375, C376, C381, C382, C390 C384, C386, C388, C391			CCSQCH391J50 CCSQCH471J50 CKSQYB472K50 CKSQYB103K50
IC121			M5216L				CKSQYB104K25
COILS AND TRANS				C389 C359 C383 C385, C387 C394			CEV4R7M25 CEV220M6R3 CEV470M6R3 CEV101M6R3 ECX9001
L121, L122			LCTB1ROK3216				CKSQYB103K50
CAPACITORS				C357, C358, C363, C364, C392, C393			
C133, C134 C122, C124 C135, C136			CEA101M16LL CKSQYB103K50 CEA470M25LL				
RESISTORS				RESISTORS			
VR121 R134, R135 R125, R126 Other Resistors			JCS1008 RS1/4S100J RS1/4S820J RS1/10S□□□J	VR355, VR356 VR351, VR353 VR352, VR354 Other Resistors			ECP9001 ECP9002 ECP9003 RS1/10S□□□J
OTHERS				OTHERS			
CN118 JA121	CONNECTOR JACK		52008-0510 JKN1020	CN01 CN03	CONNECTOR CONNECTOR		EKS9003 EKS9005
REM. RECEIVER UNIT							
SEMICONDUCTORS				MONITOR RF UNIT			
IC101 D102 D101			NJH32H400A TLG262 TLS262	SEMICONDUCTORS			
COILS AND TRANS			JTF1036	IC301 Q301, Q302			HA12154MA 2SK932
F101				COILS AND TRANS			
SWITCH			JSH1010	L301			ETF9001
SW101				CAPACITORS			
CAPACITORS				C341 C326 C327 C320, C328 C316			CCSQCH060C50 CCSQCH180J50 CCSQCH330J50 CCSQCH820J50 CCSQCH101J50
C102 C101, C103			CEA6R8M50LL CKSQYF104Z50	C312, C323 C319, C324, C325 C315 C311 C305, C306			CCSQCH151J50 CCSQCH391J50 CCSQCH471J50 CCSQCH122J50 CKSQYB472K50
RESISTORS			RS1/10S□□□J				
All Resistors							

Mark	No.	Description	Parts No.
C301	C304, C307, C308, C310, C313, C314,		CKSQYB103K50
C317	C318, C321, C322, C329, C330, C338		CKSQYB104K25
C332	C333, C336, C339		CEV4R7M25
C337			CEV220M6R3
C309			CEV470M6R3
C331			
	C334, C335		CEV101M6R3
	C340		ECX9001

RESISTORS

VR301	— VR303	ECP9001
Other Resistors		RS1/10S□□□□J

OTHERS

CN02	CONNECTOR	EKS9003
CN04	CONNECTOR	EKS9004

AC ADAPTOR**SEMICONDUCTORS**

△	Q5	2SC3746
△	Q6	2SA1469
△	ICP1	ICP-N38
△	ICP2	ICP-N25

OTHERS

△	FUSE (T1.25A/250V, F1)	JEK1022
---	------------------------	---------



Service Manual

ORDER NO.
TRT1096

The chapter 1 of this Service Manual will not be reprinted. On your additional orders, we may supply only the chapter 2. For the chapter 1, please make copies and attach to the chapter 2 at your side if necessary.

DIGITAL AUDIO TAPE RECORDER

D-C88

CHAPTER 2

CONTENTS

CHAPTER 2

2.1 PACKING AND EXPLODED VIEWS	2-3
2.2 SCHEMATIC AND PCB CONNECTION DIAGRAMS	2-9
2.3 BLOCK DIAGRAM	2-31

PIONEER ELECTRONIC CORPORATION 4-1, Meguro 1-Chome, Meguro-ku, Tokyo 153, Japan

PIONEER ELECTRONICS SERVISE INC. P.O. Box 1760, Long Beach, California 90801, U.S.A.

PIONEER ELECTRONICS OF CANADA, INC. 300 Allstate Parkway Markham, Ontario L3R 0P2, Canada

PIONEER ELECTRONIC [EUROPE] N.V. Haven 1087 Keetberglaan 1, 9120 Melsele, Belgium

PIONEER ELECTRONICS AUSTRALIA PTY. LTD. 178-184 Boundary Road, Braeside, Victoria 3195, Australia, TEL: [03] 580-9911


© PIONEER ELECTRONIC CORPORATION 1995

2.1 PACKING AND EXPLODED VIEW


(1). EXPLODED VIEWS

(1)-1. EXTERIOR (1/2)


A

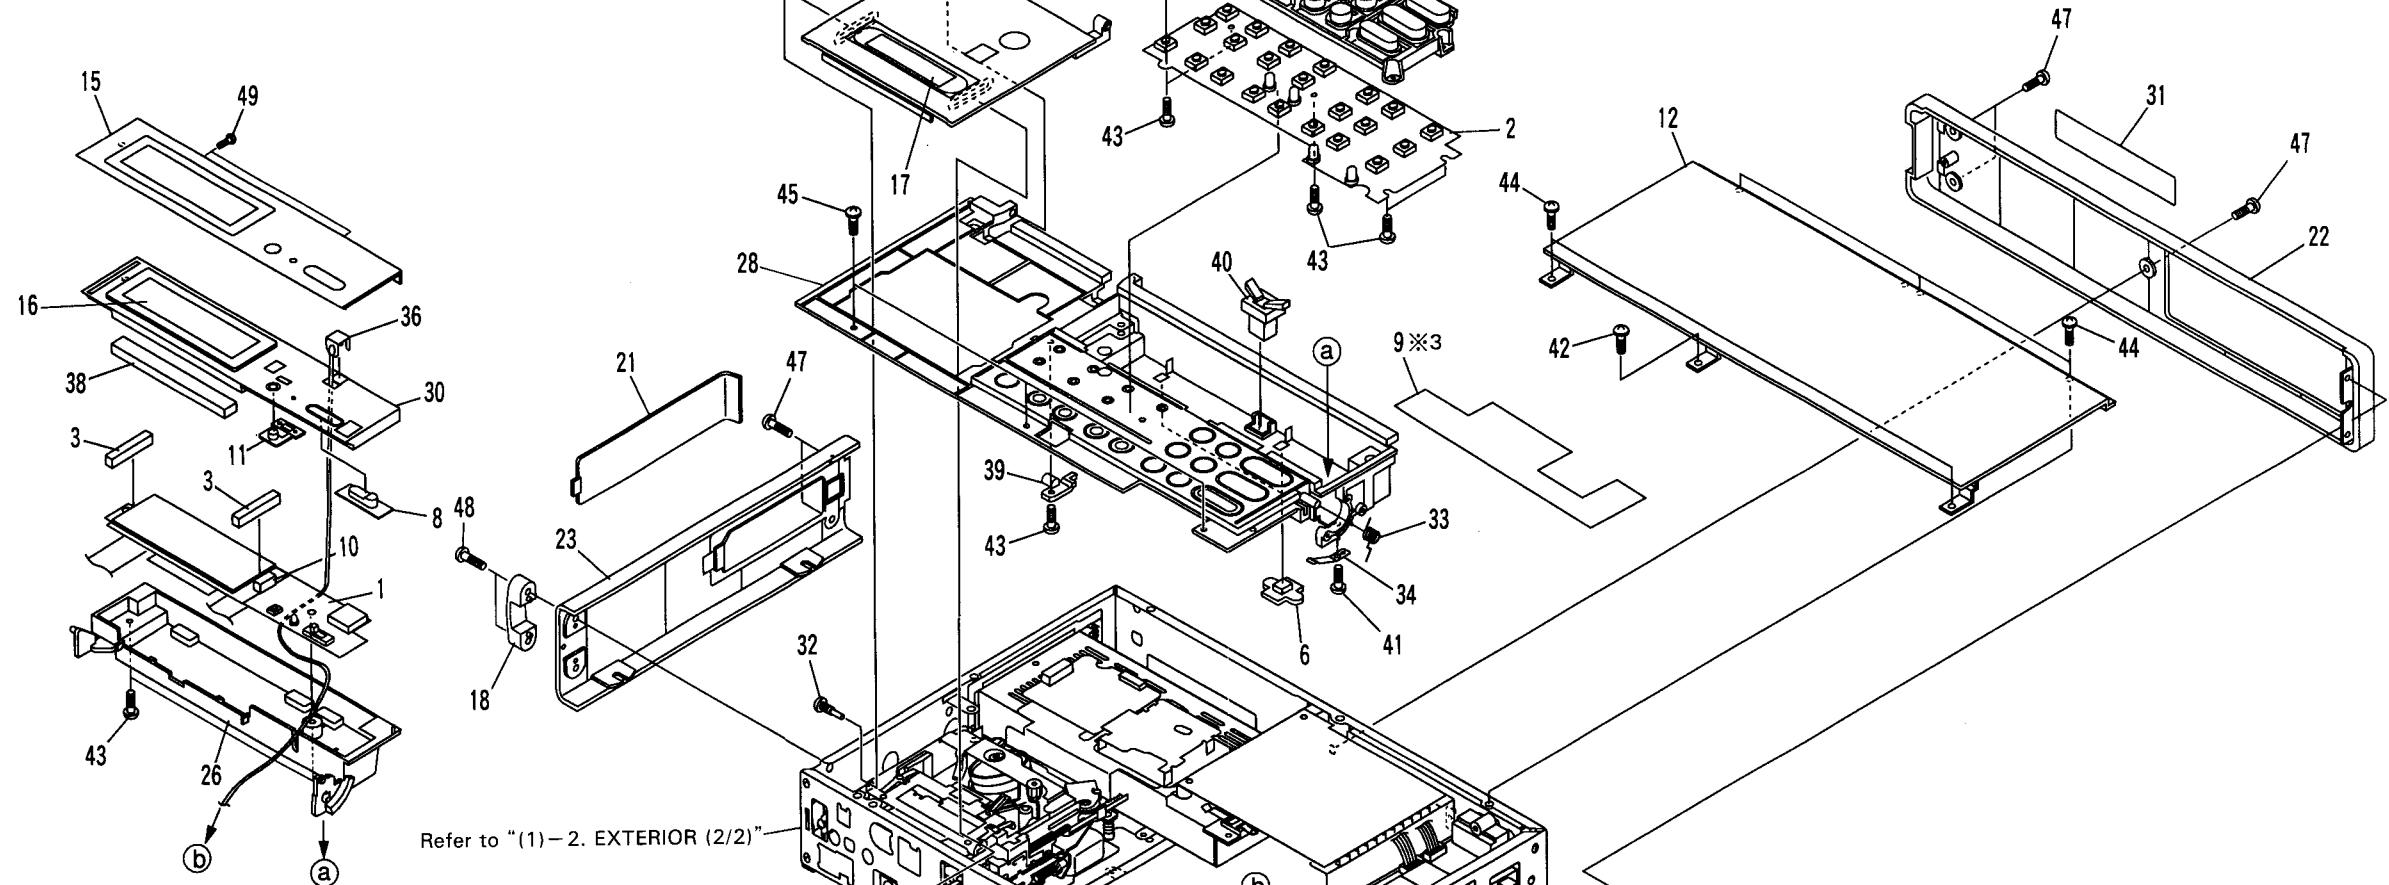

B

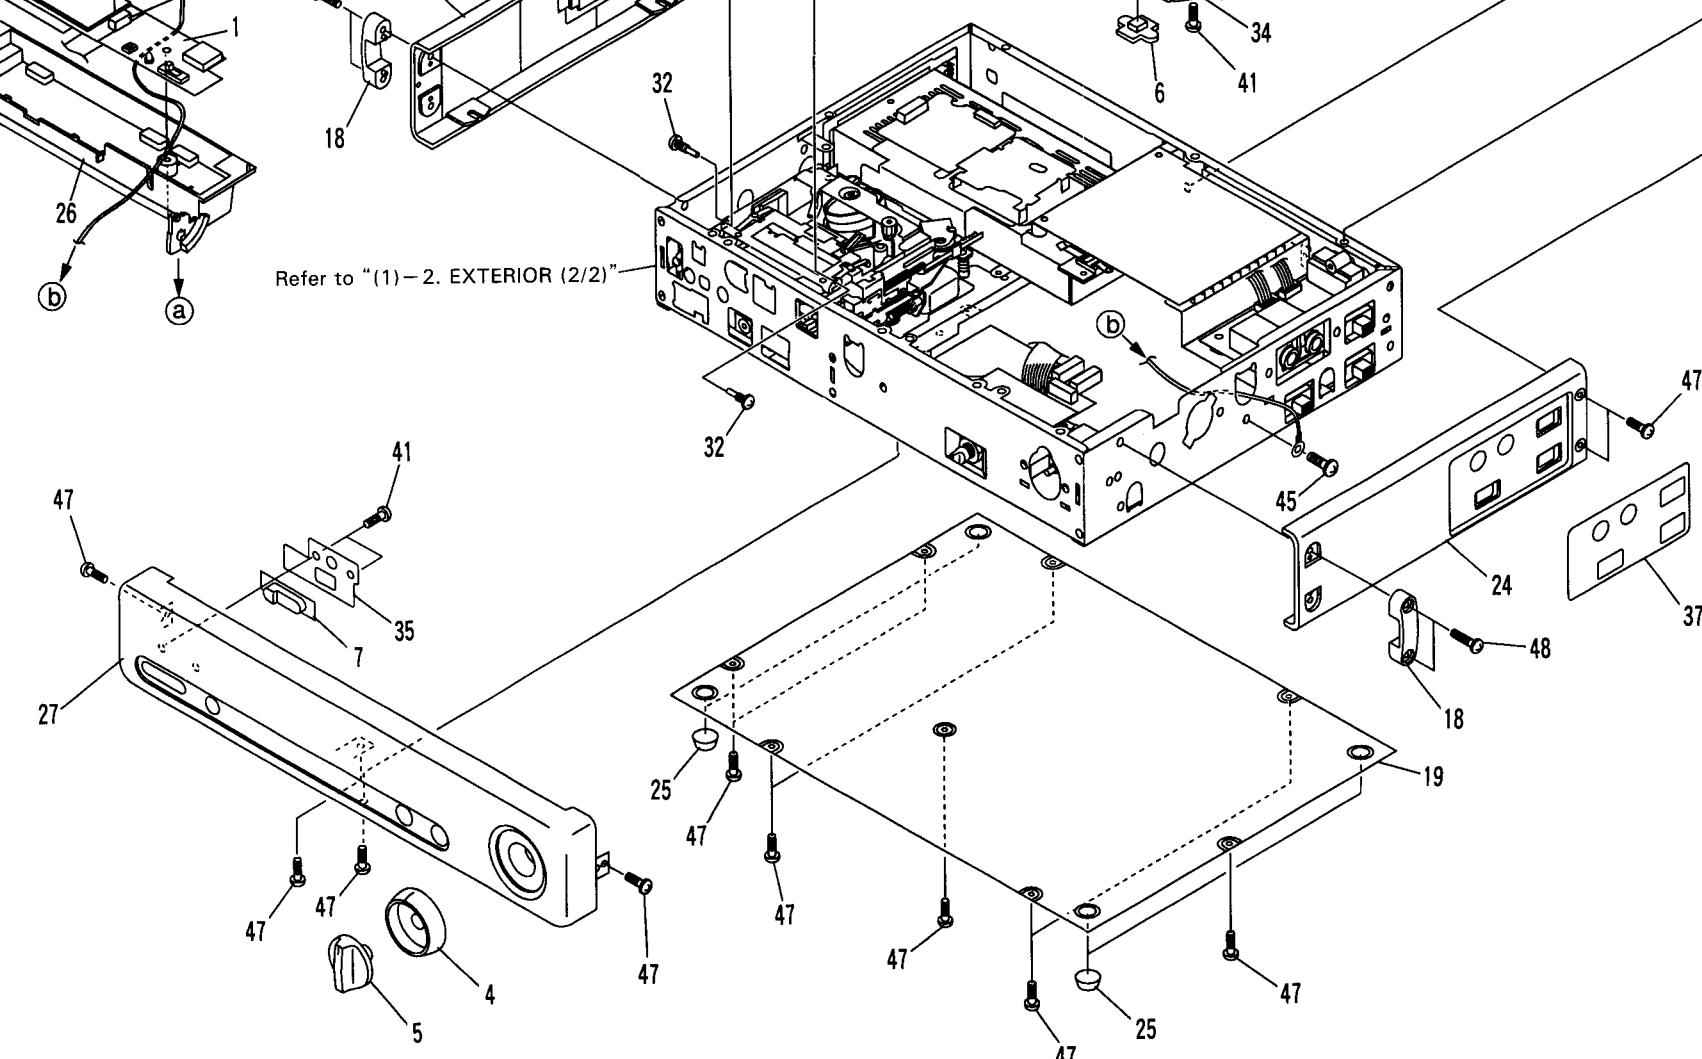


C

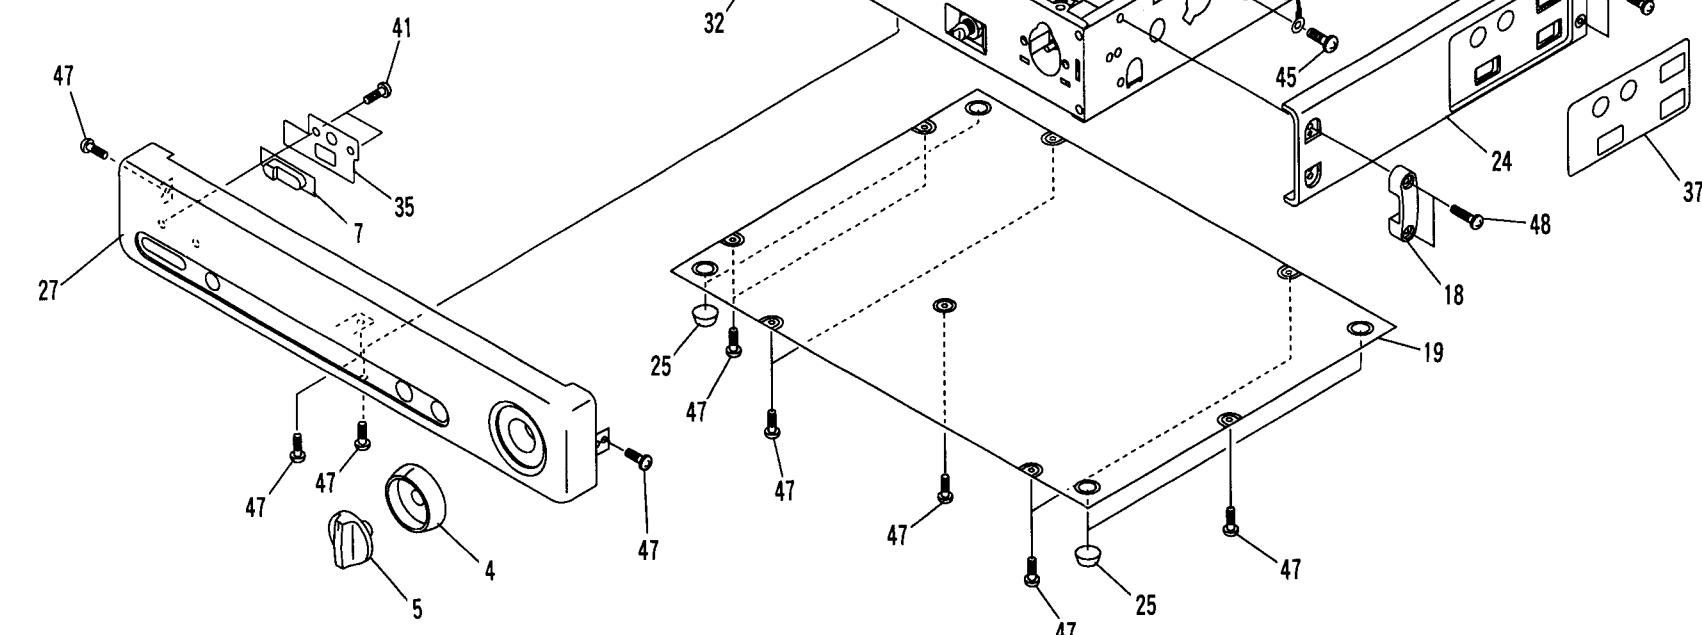

D


- ※1 1.1 Removal of each part
 - Remove from the body according to the cassette door removal procedure in the removal of externally installed parts. (Refer to page 1-7.)
- ※2 Cut the hinge part with nippers, and cut off one button.
- ※3 Attach to the rear of the base assembly (28).

(1)-2. EXTERIOR (2/2)

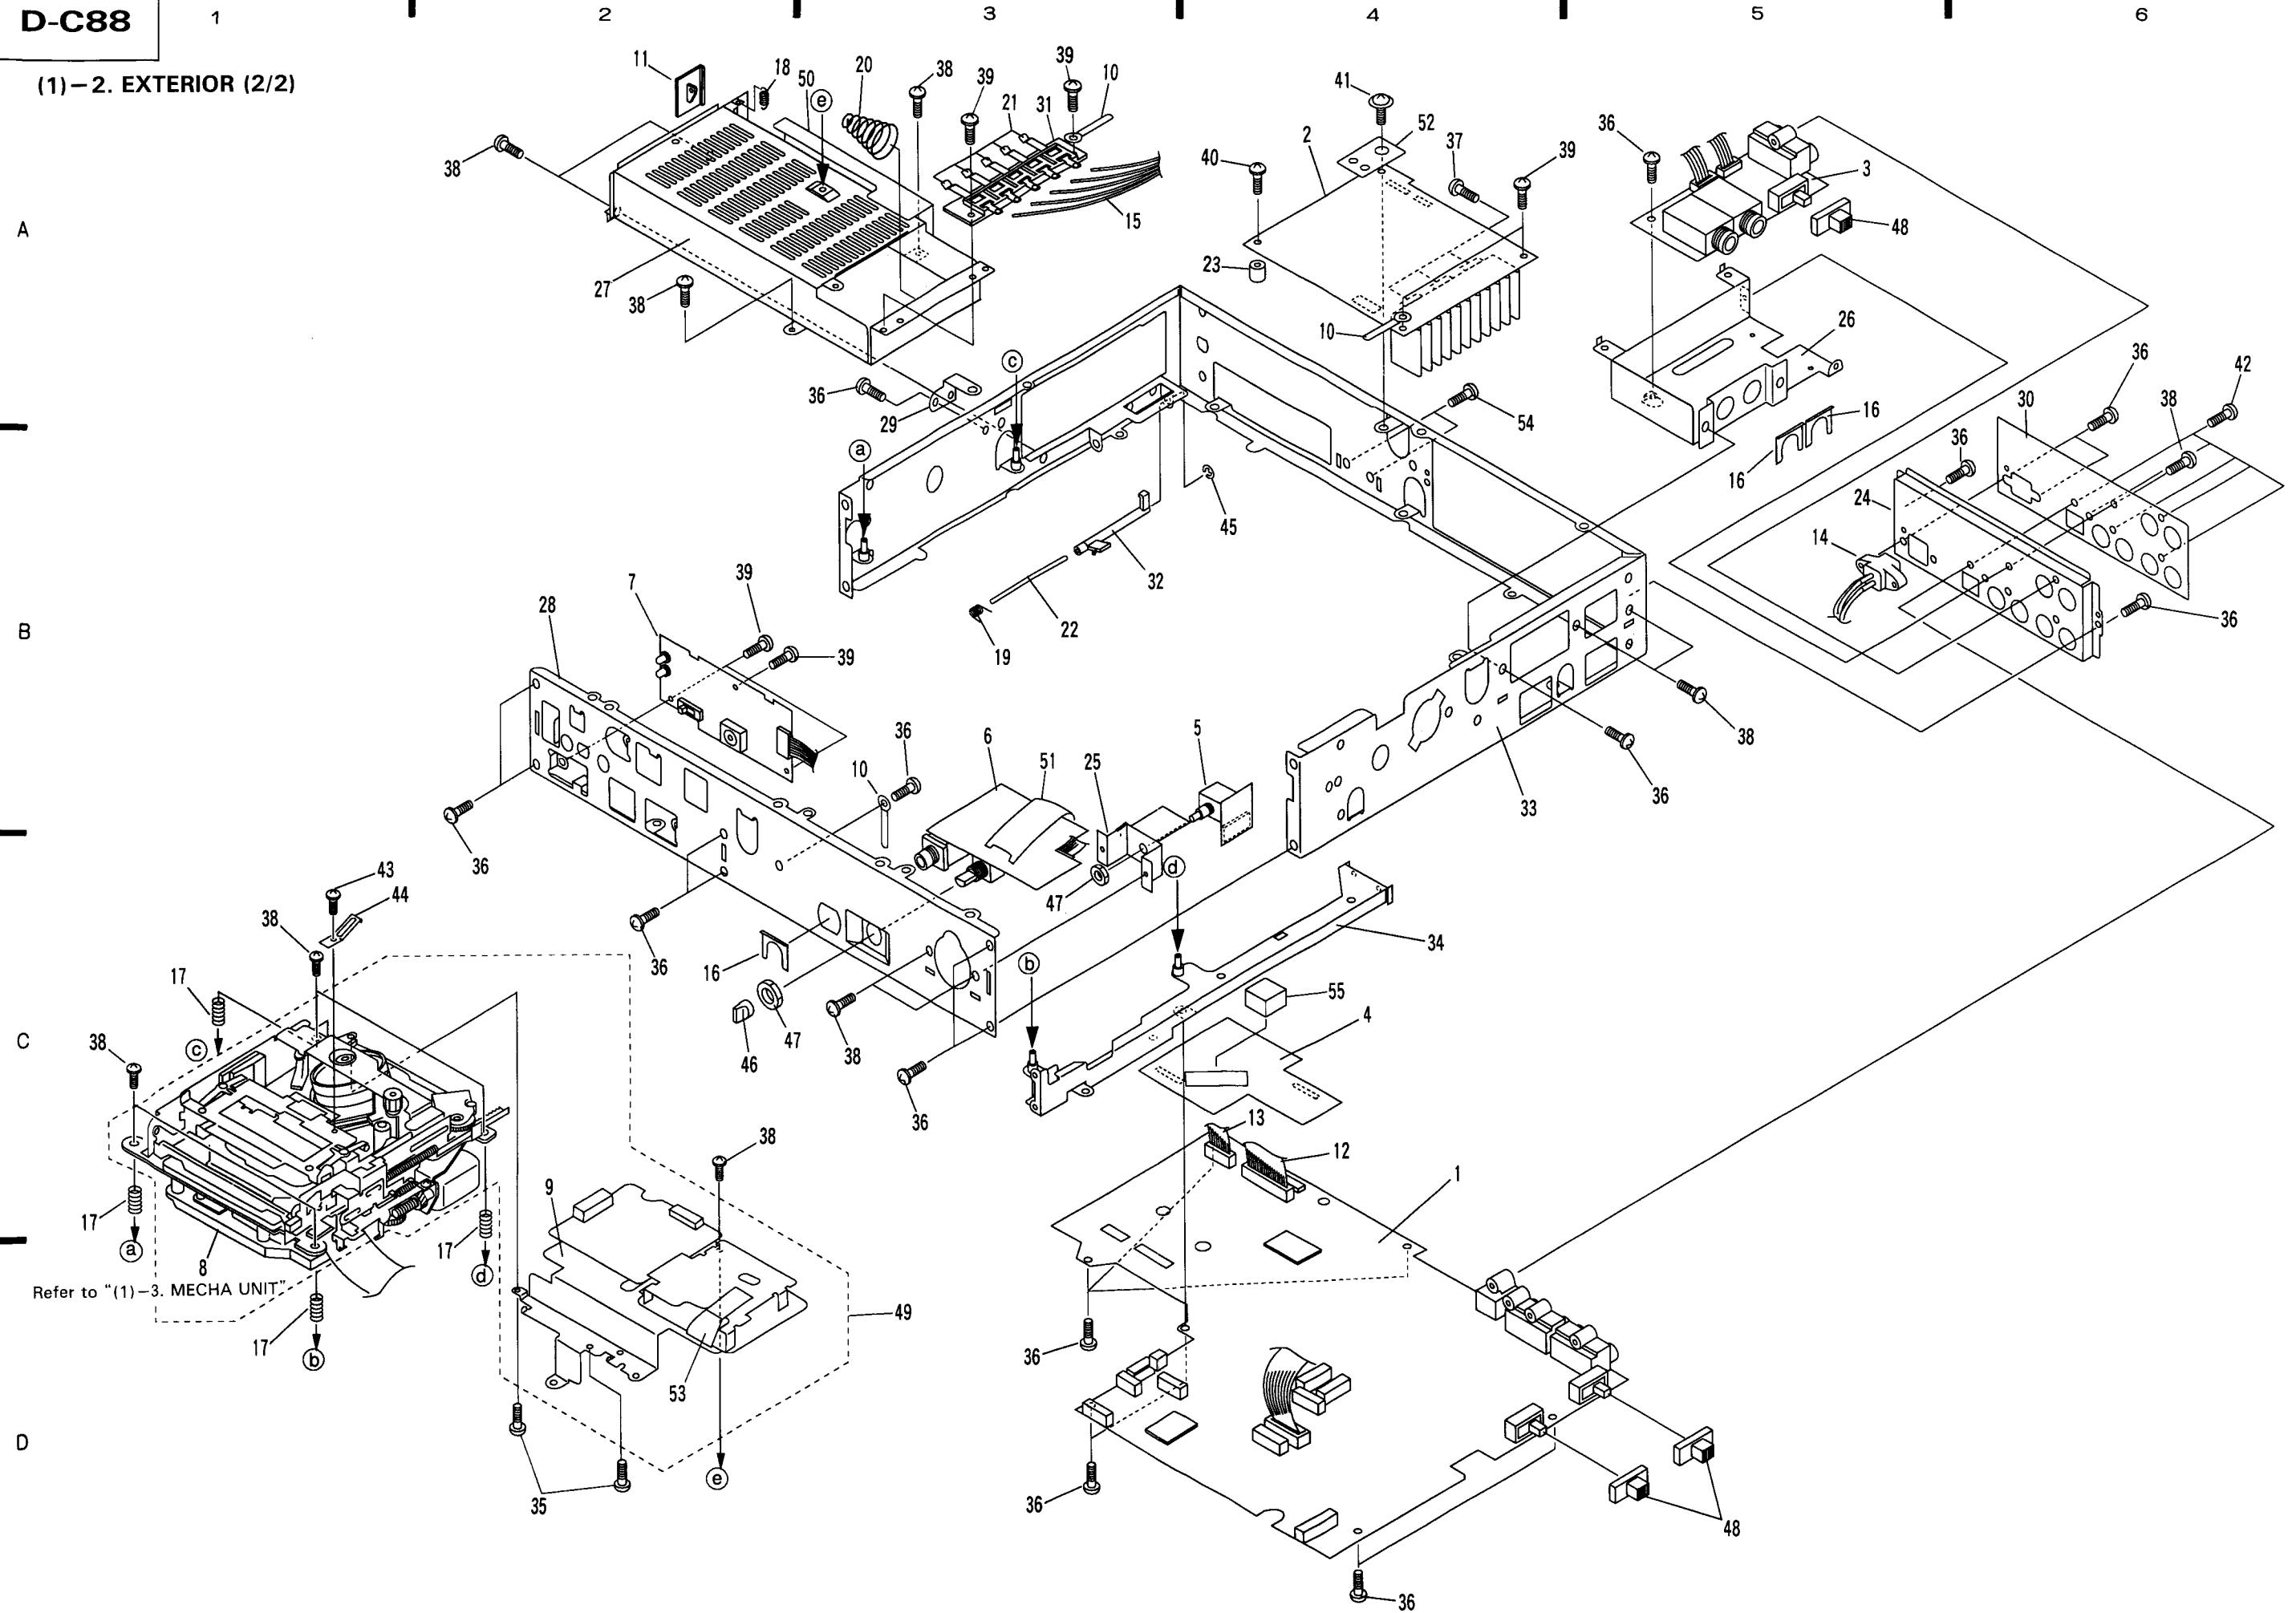

1 (1)-3. MECHA UNIT

● CASSETTE COMPARTMENT UNIT


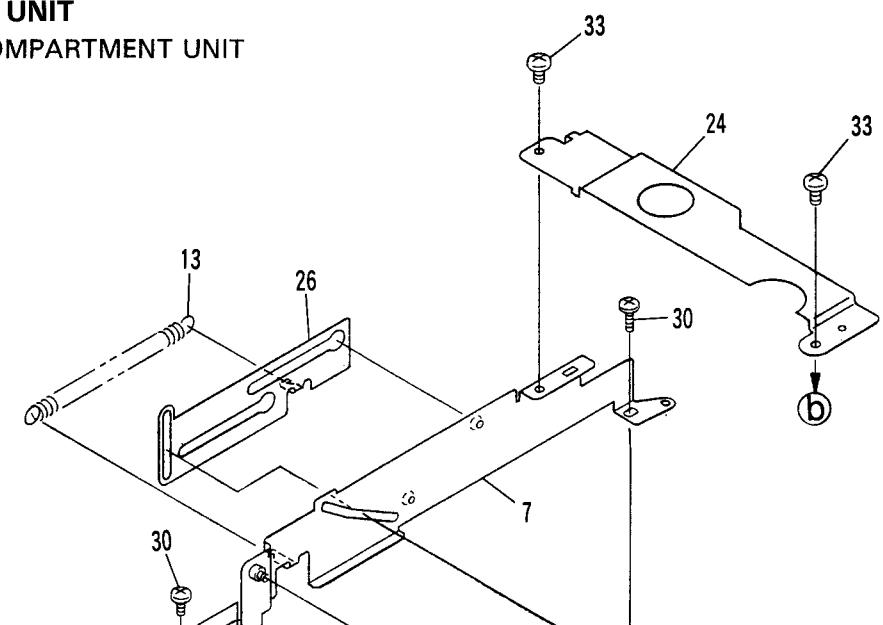


A


B

C


D

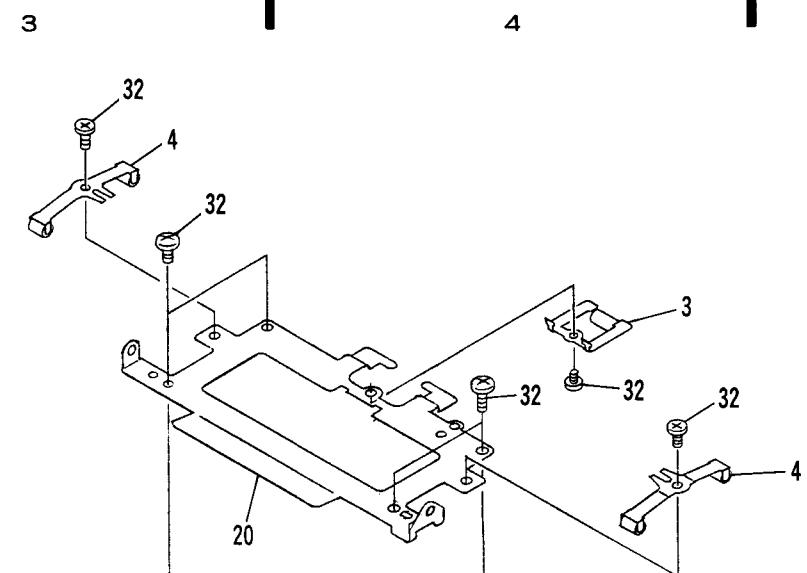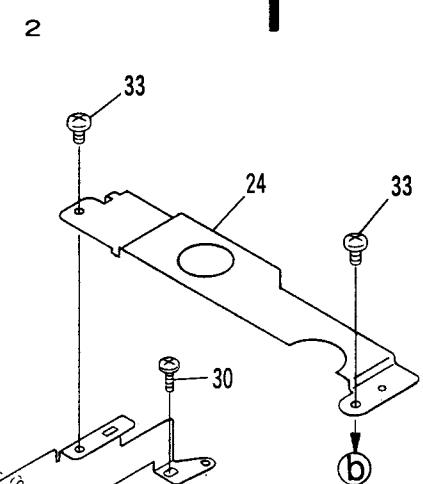

4

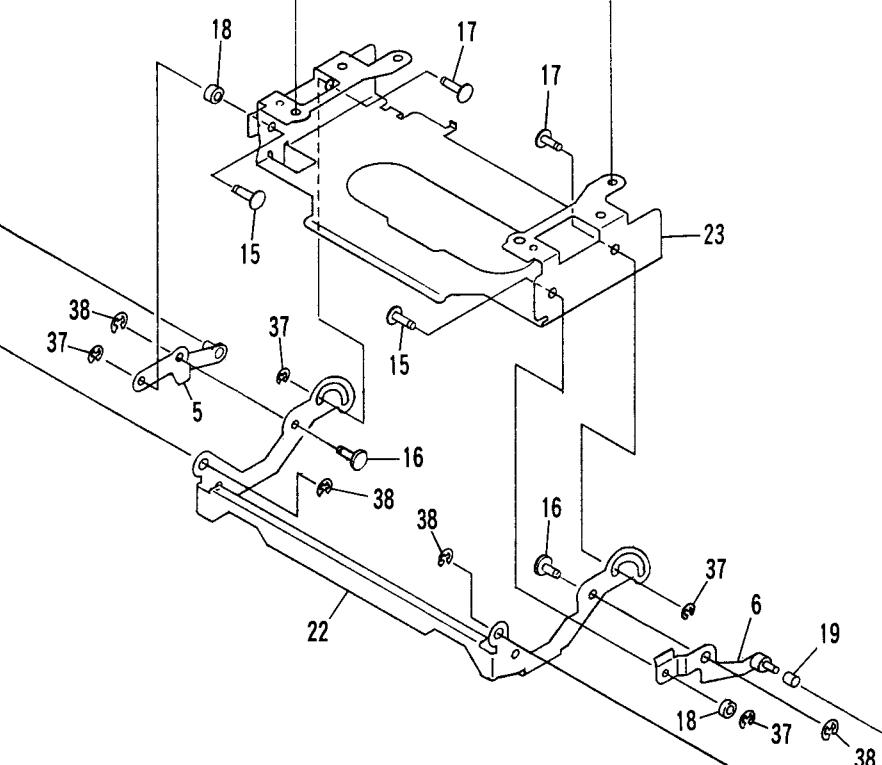


3

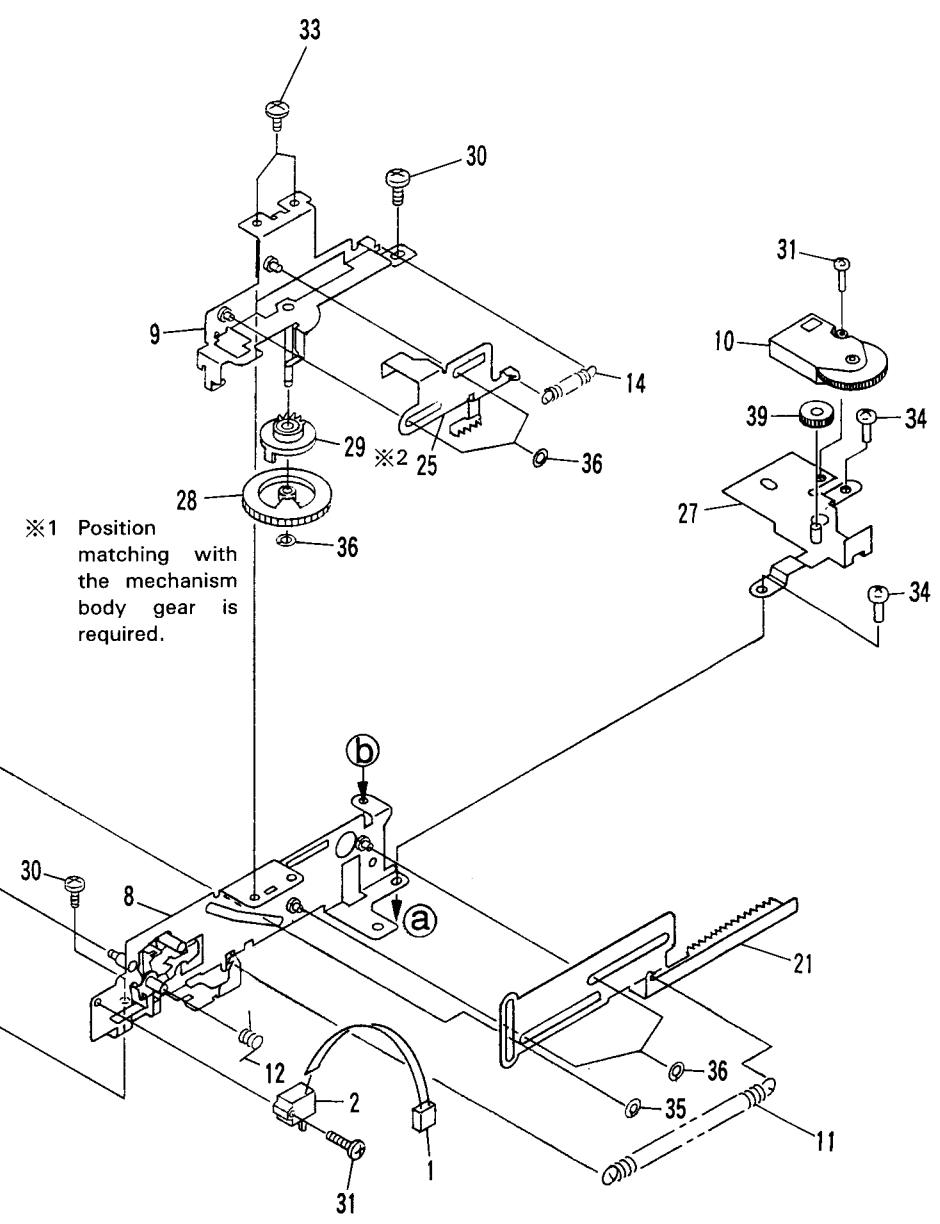

5

※1 View from the rear
Match the gear b on the cassette control side into the groove a of the gear of the mechanism body.

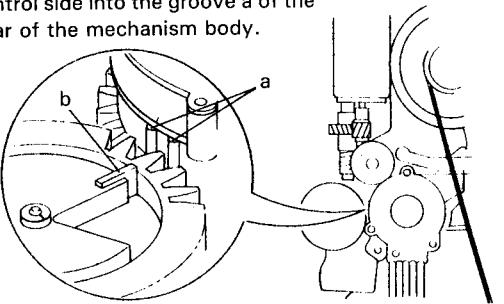


A


B

C

D

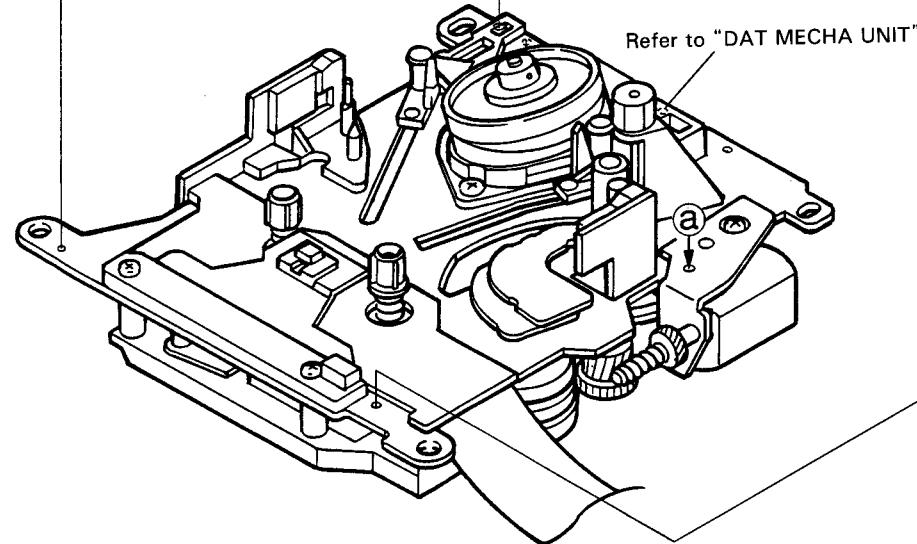

※2 Engagement of gear B and slide plate

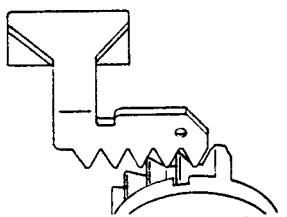

Seen from below
Match the recessed part of gear B
② to the round mark of the slide plate ③.

E

1

2


3

4


5

6

2-8

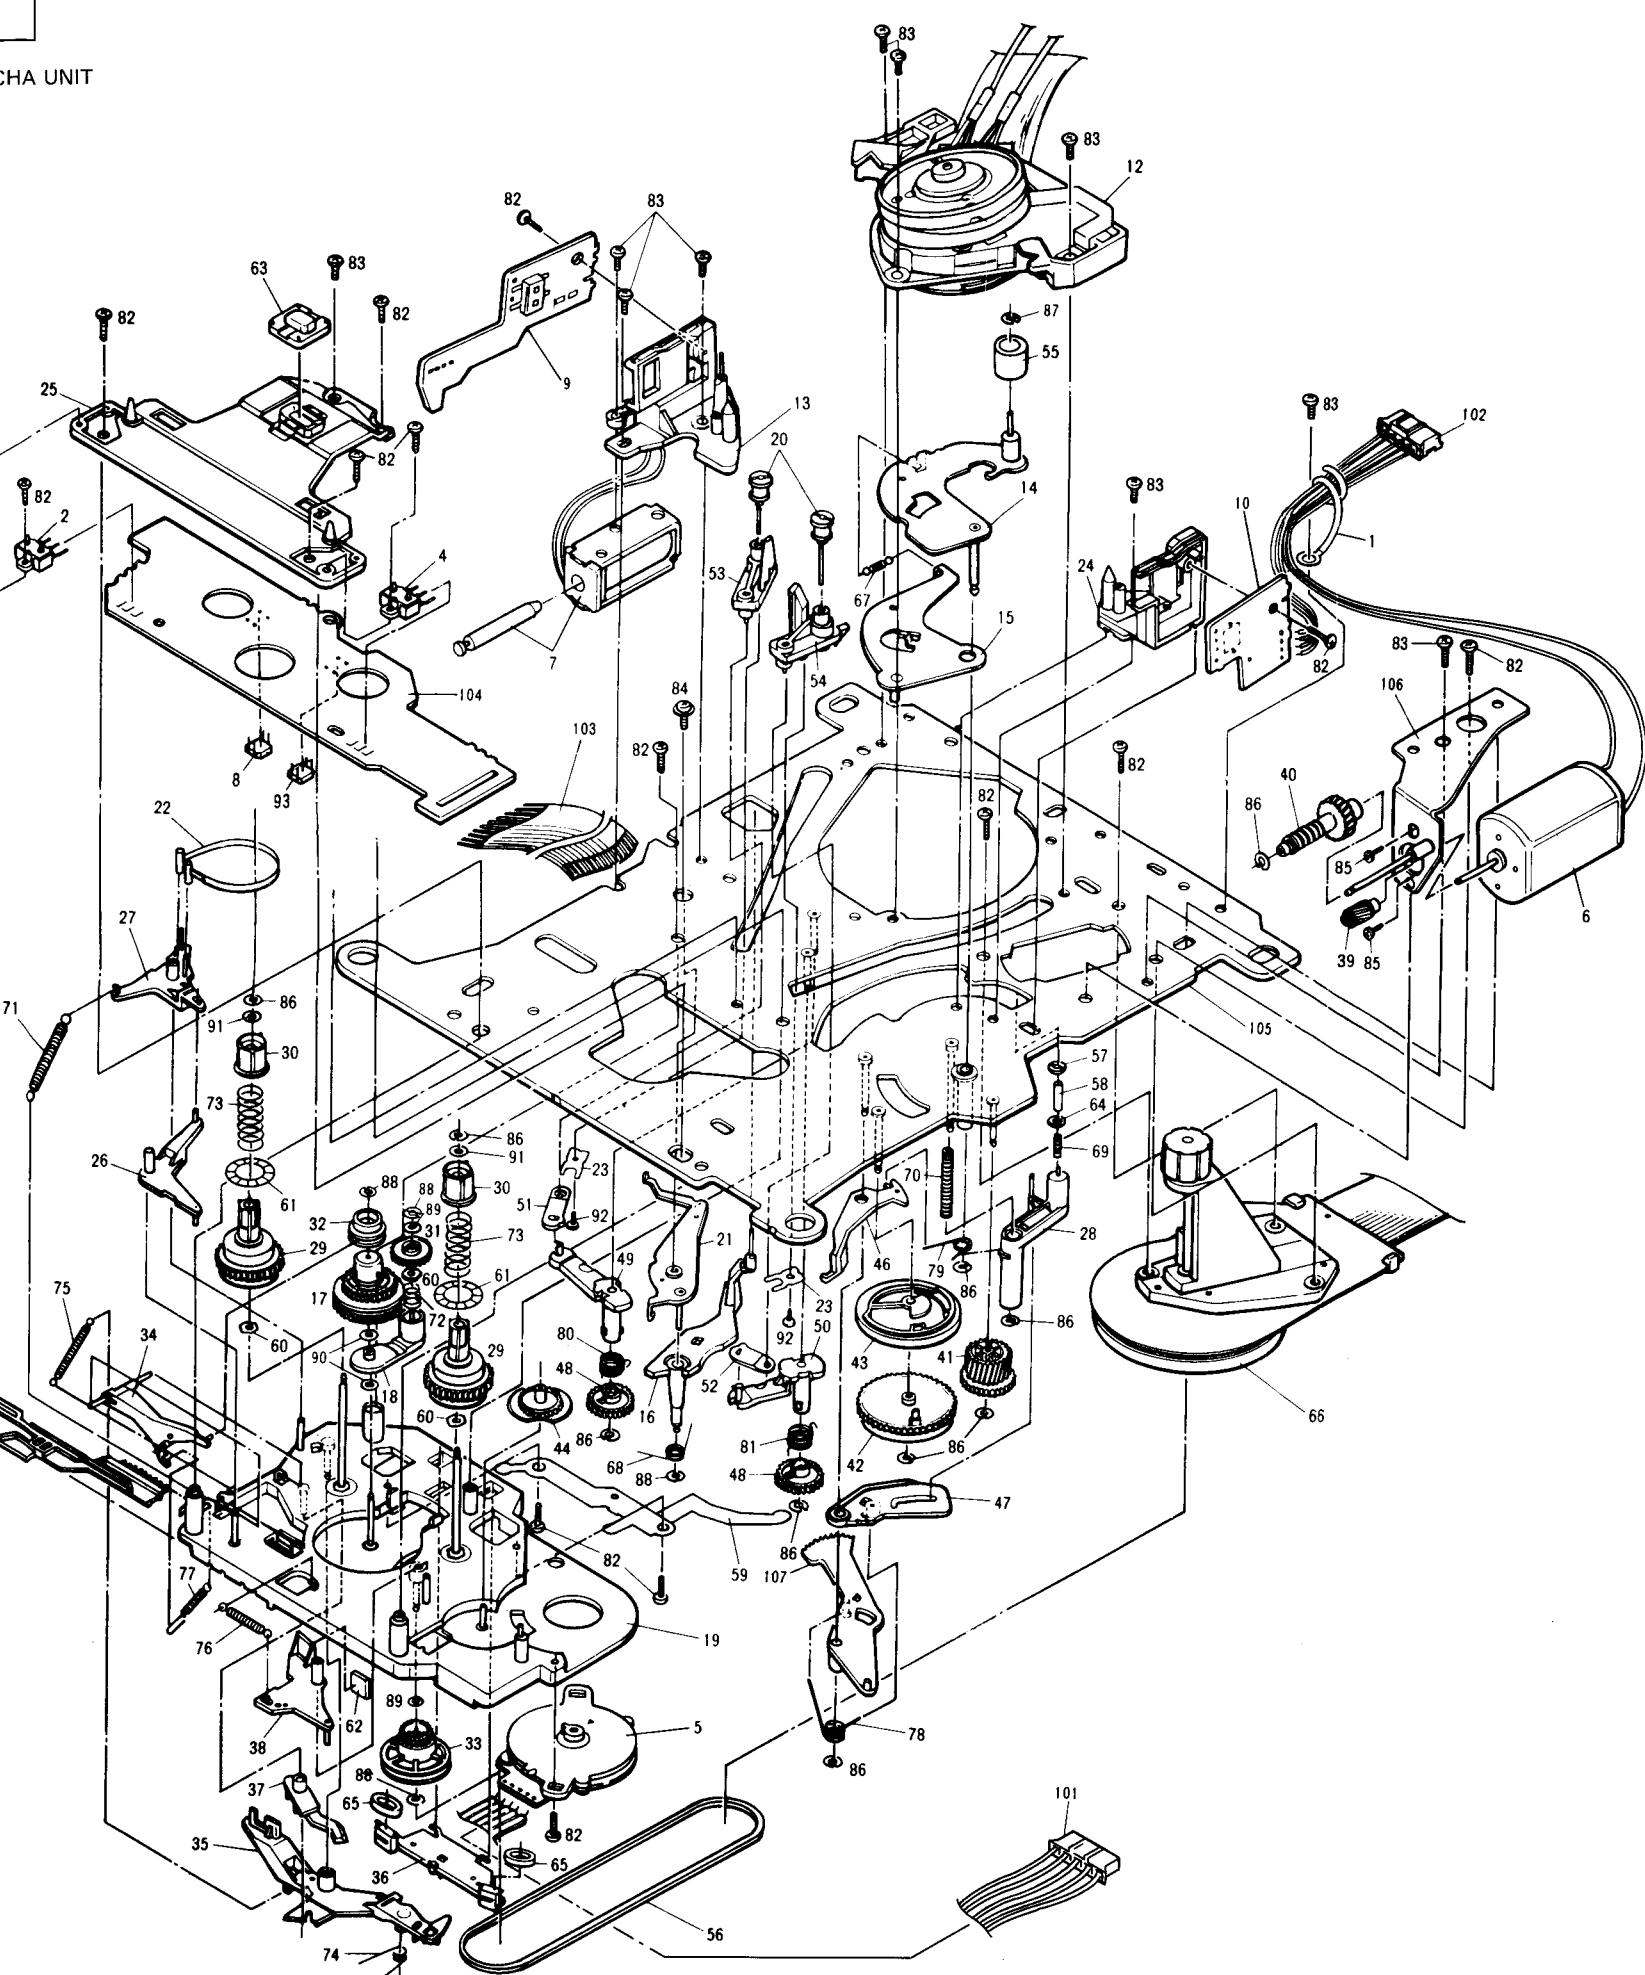


(2). PACKING

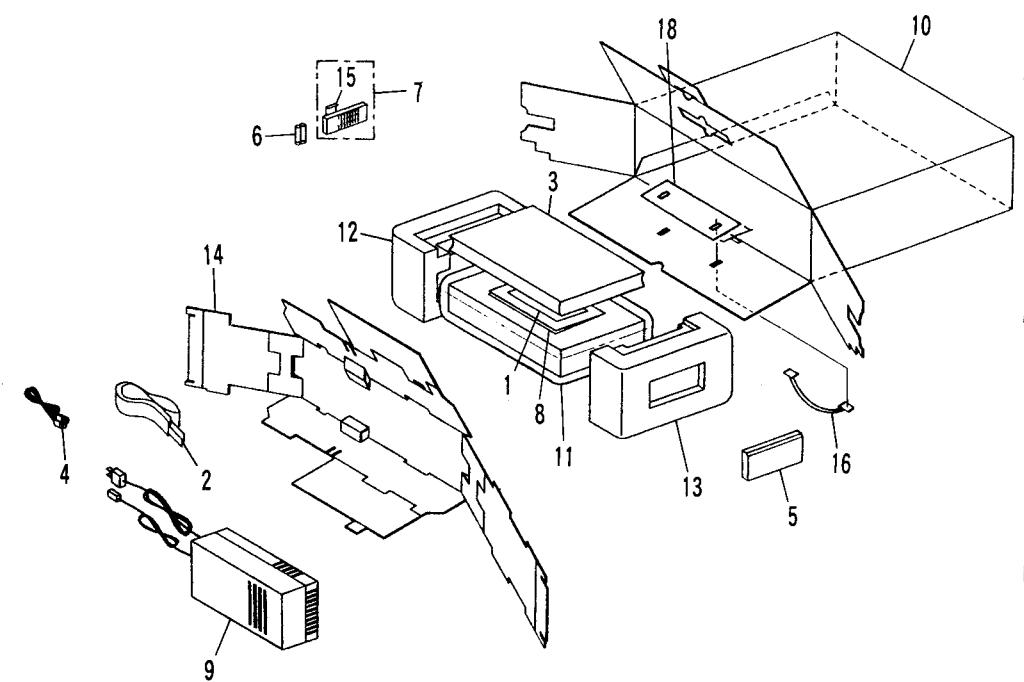


2.2 SCHEMATIC AND PCB CONNECTION

(1). OVERALL SCHEMATIC DIAGRAM

A

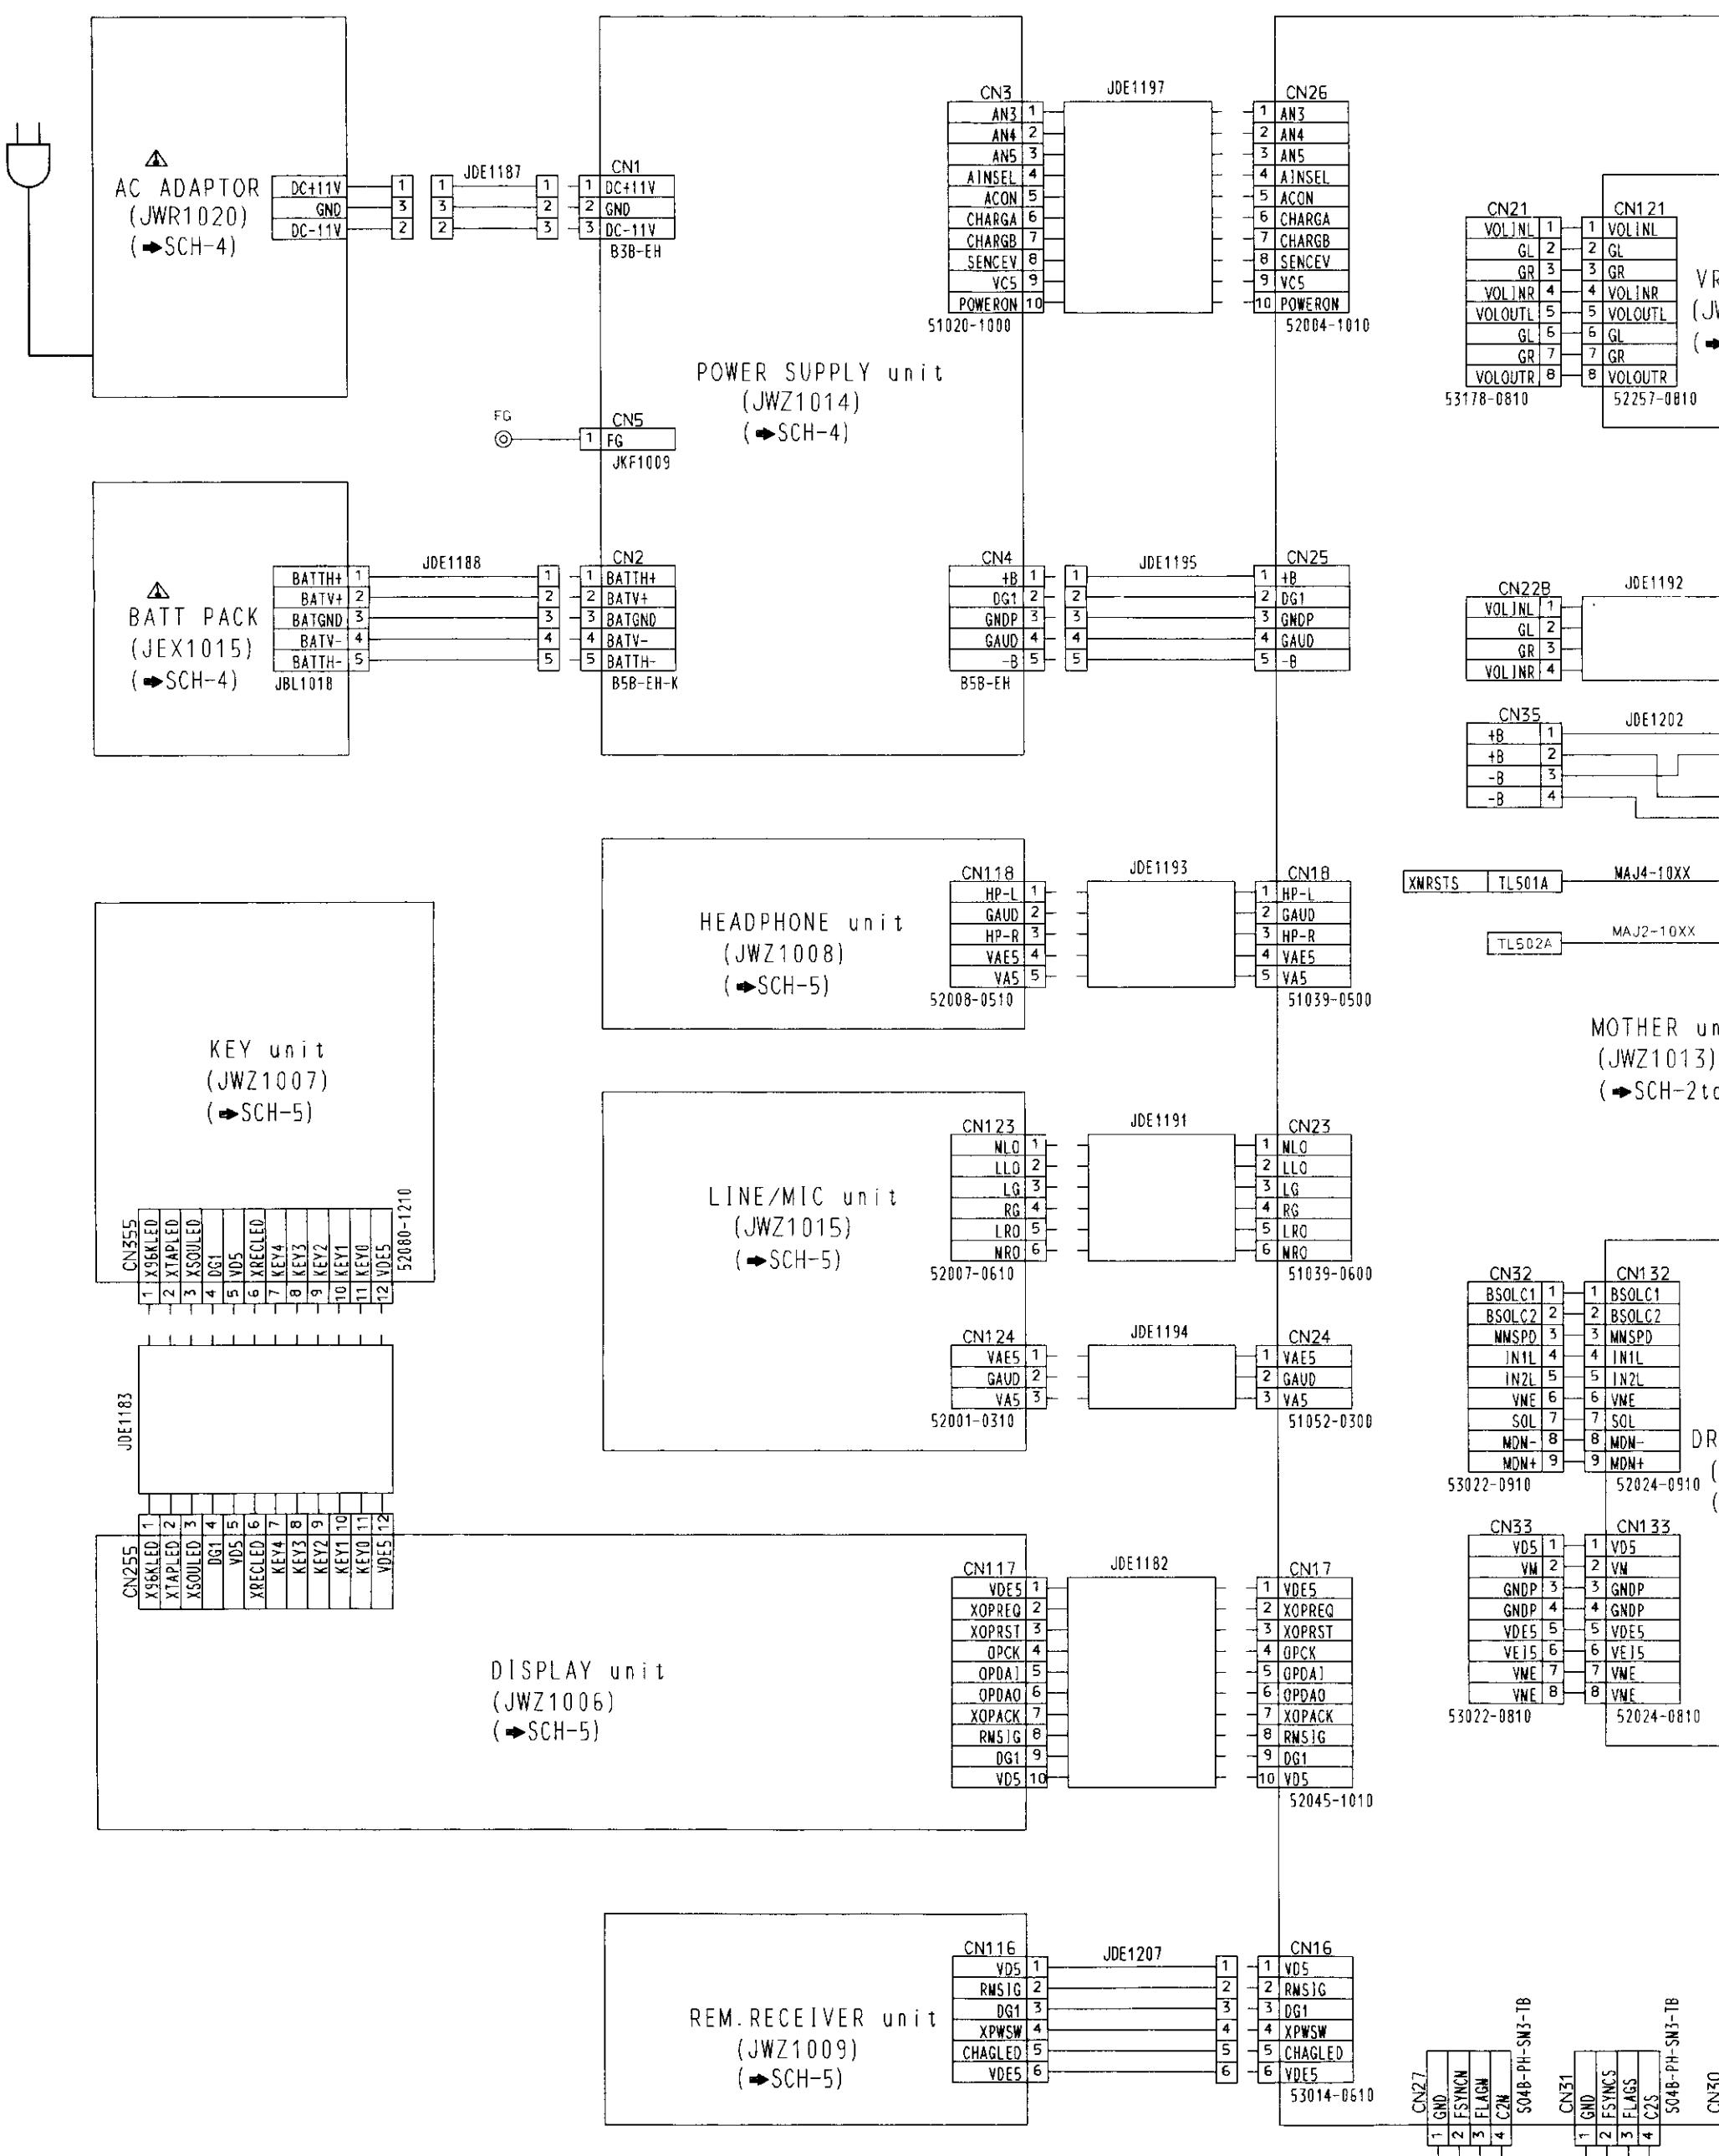

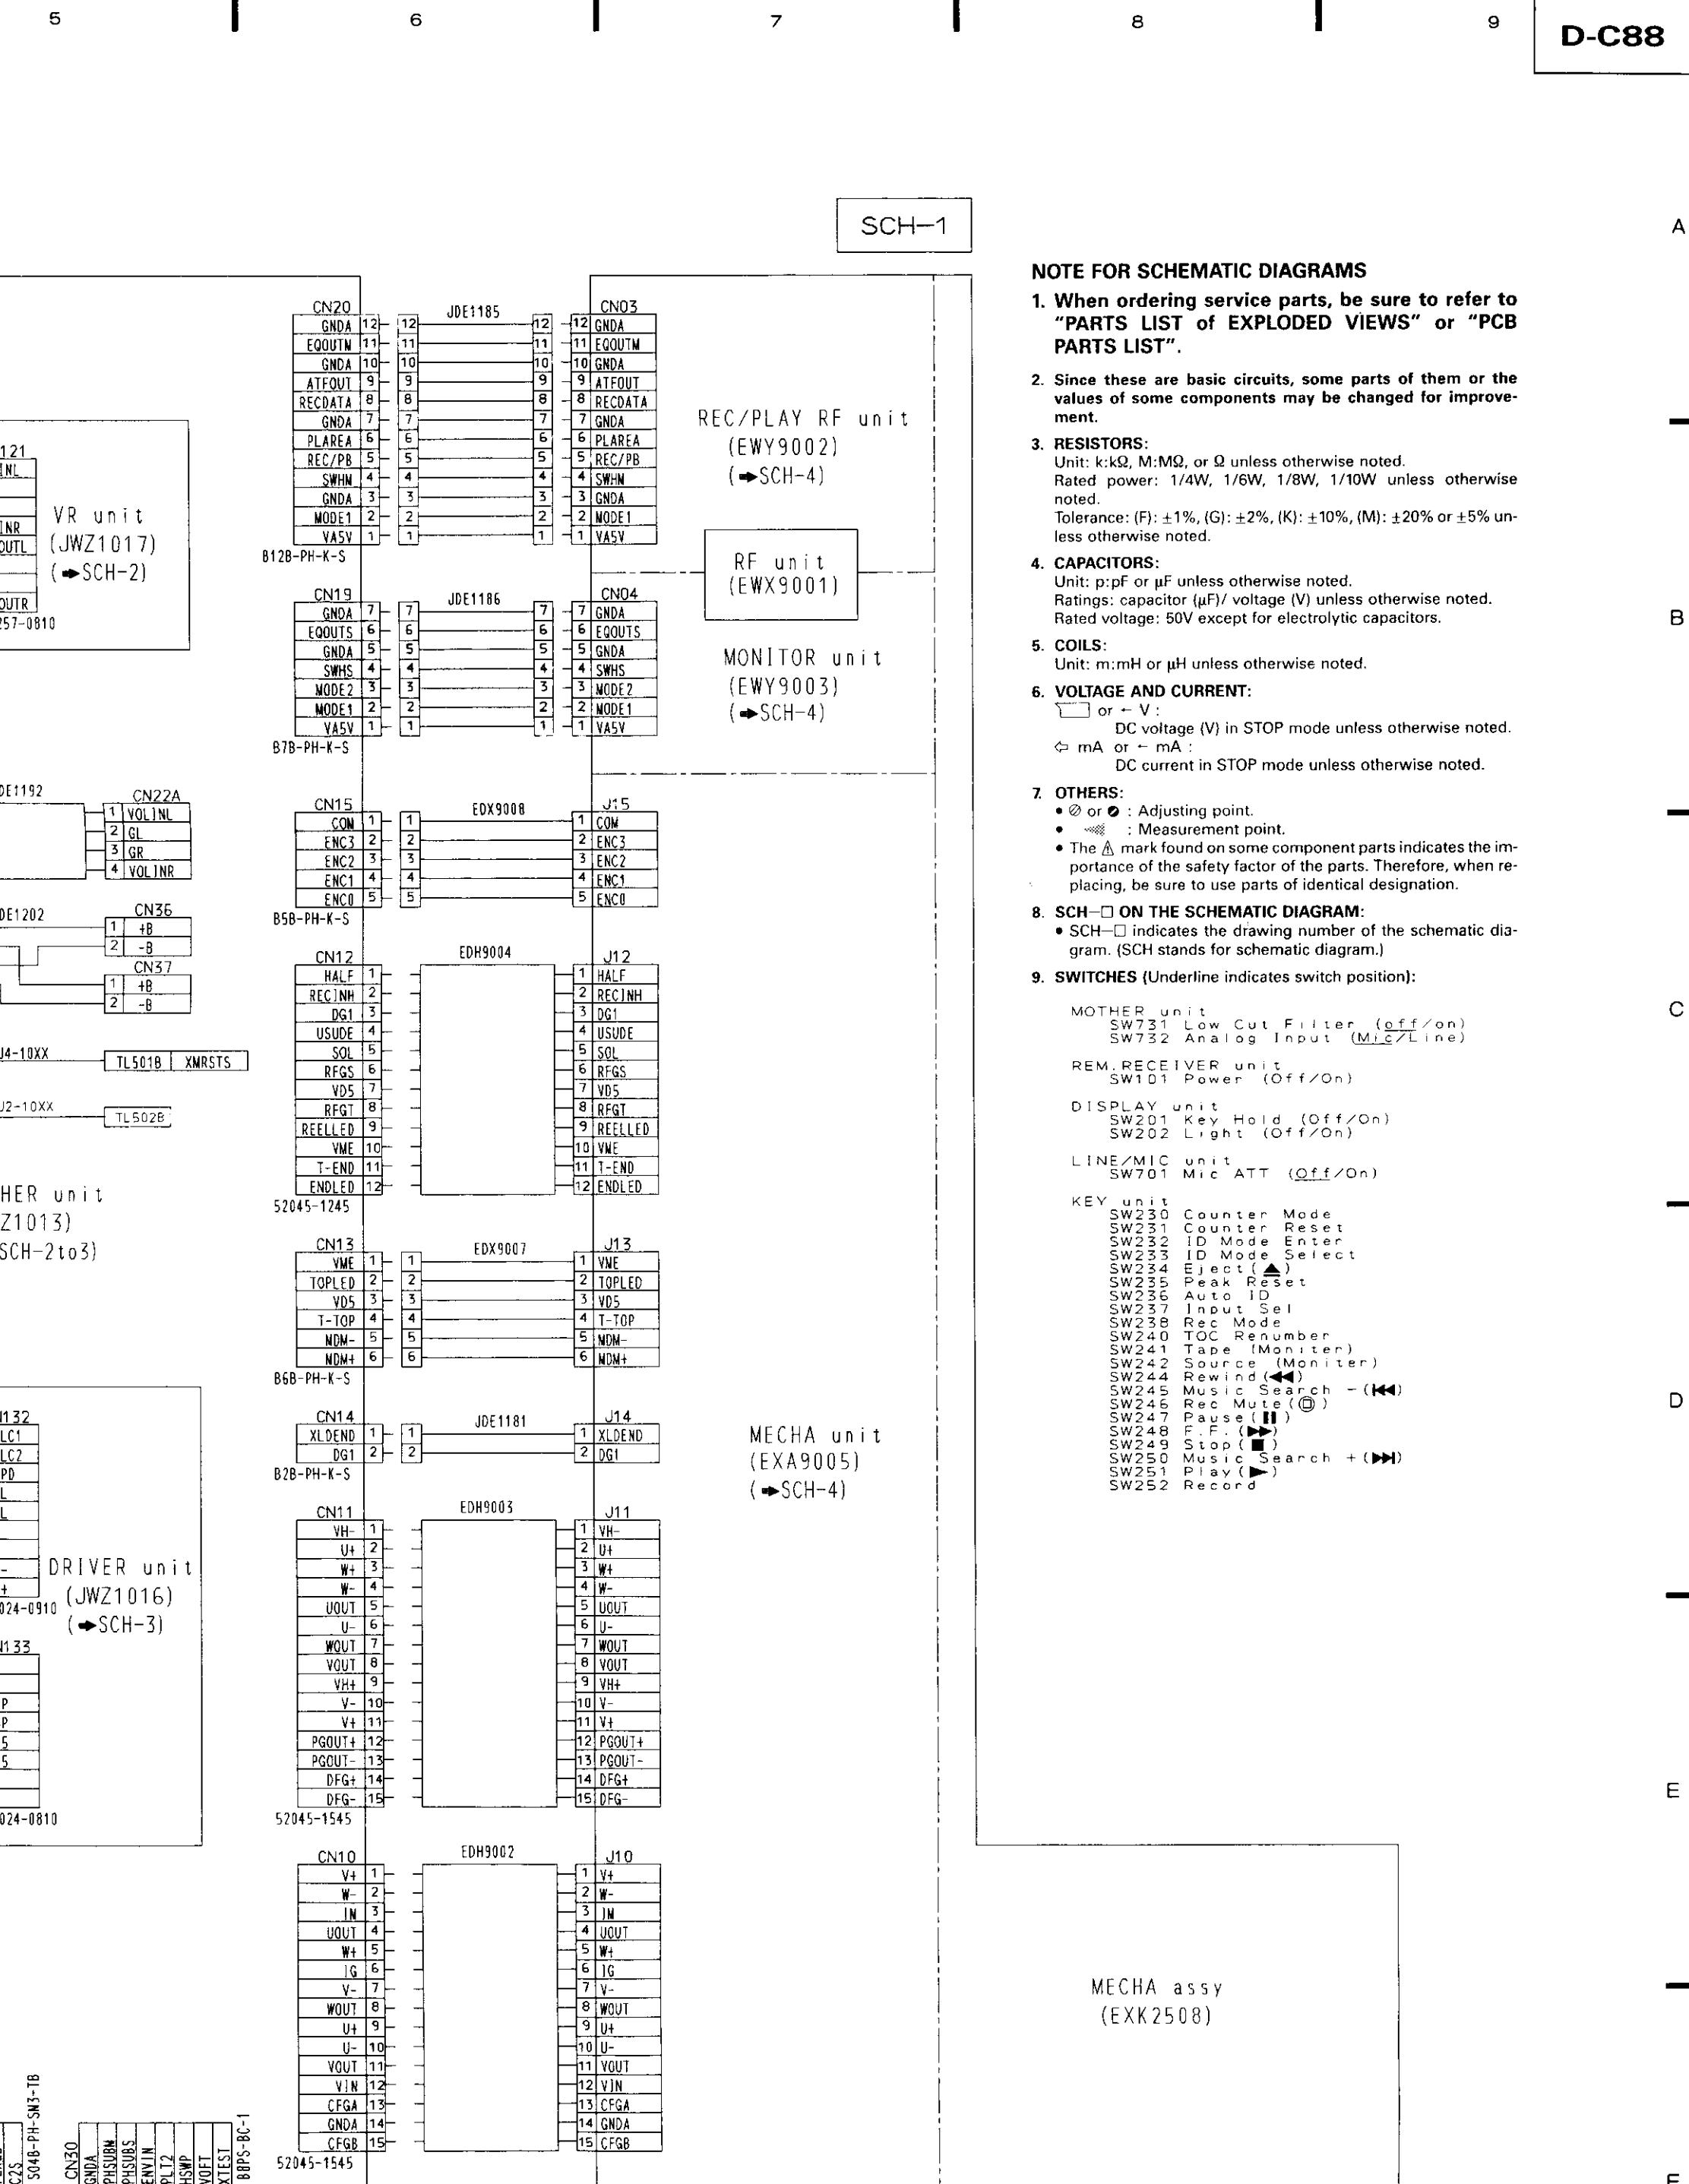


(2). MOTHER UNIT、DRIVER UNIT、VR UNIT



2


3

4

5

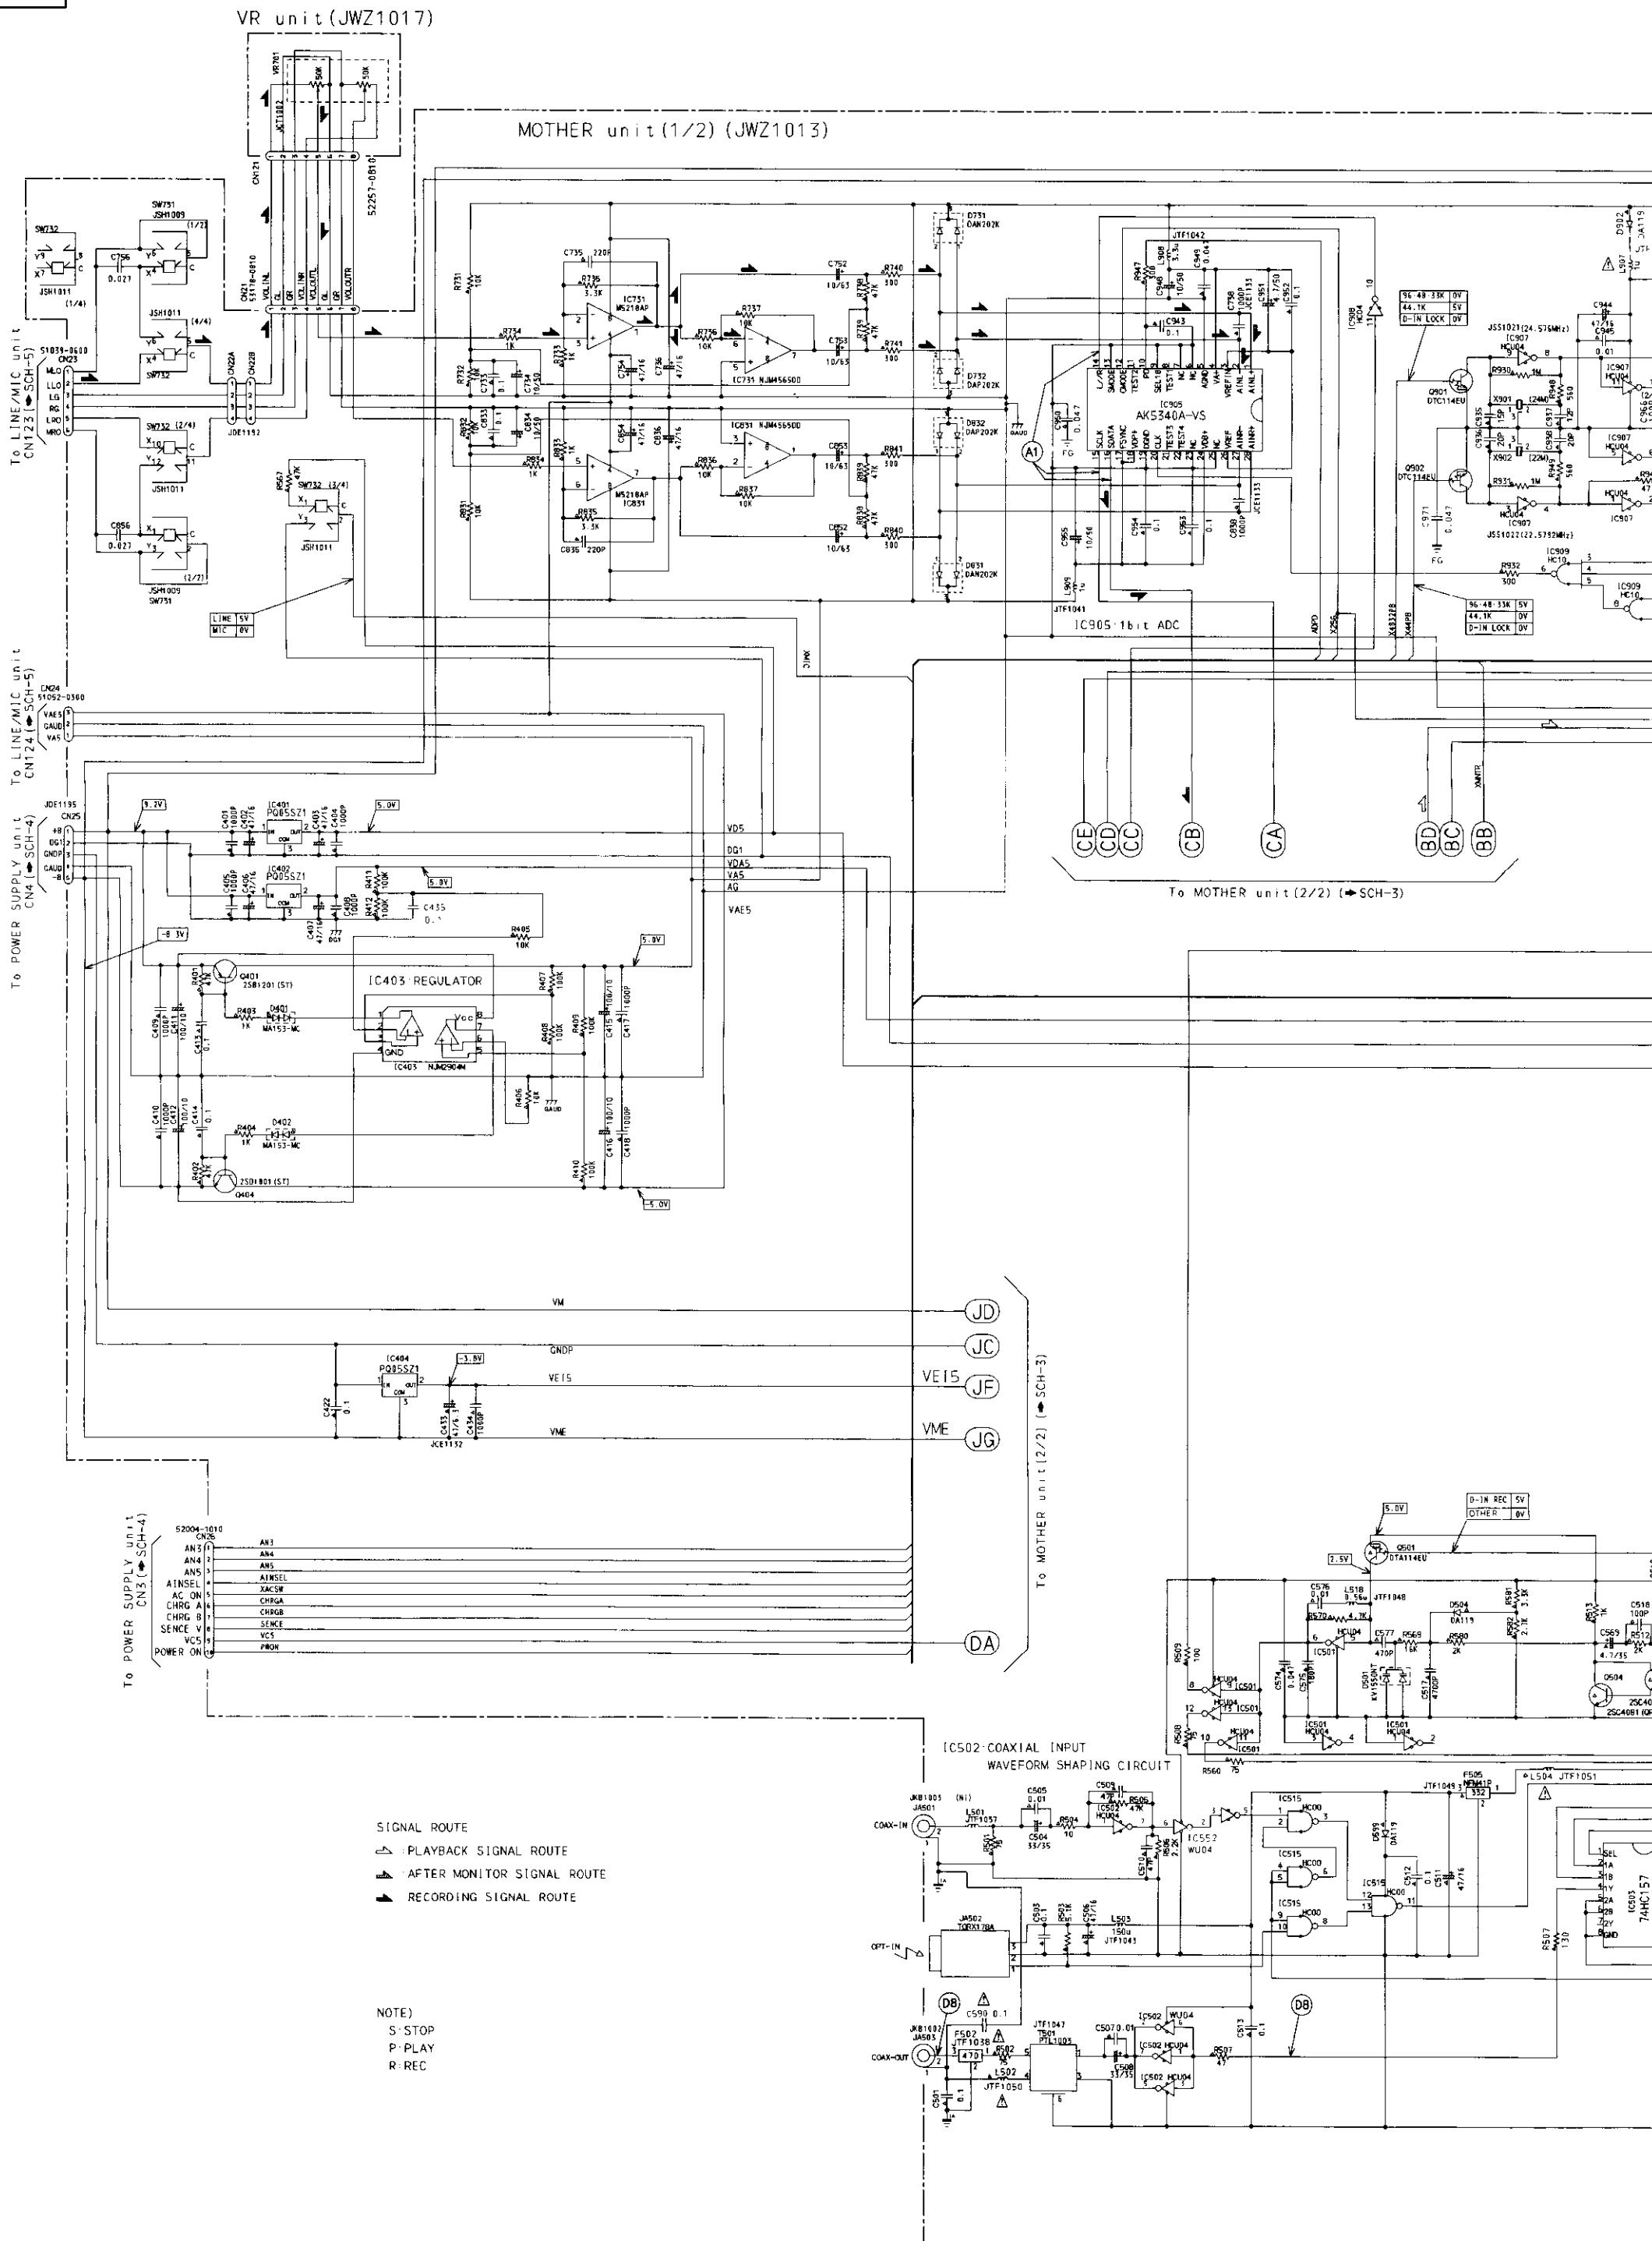

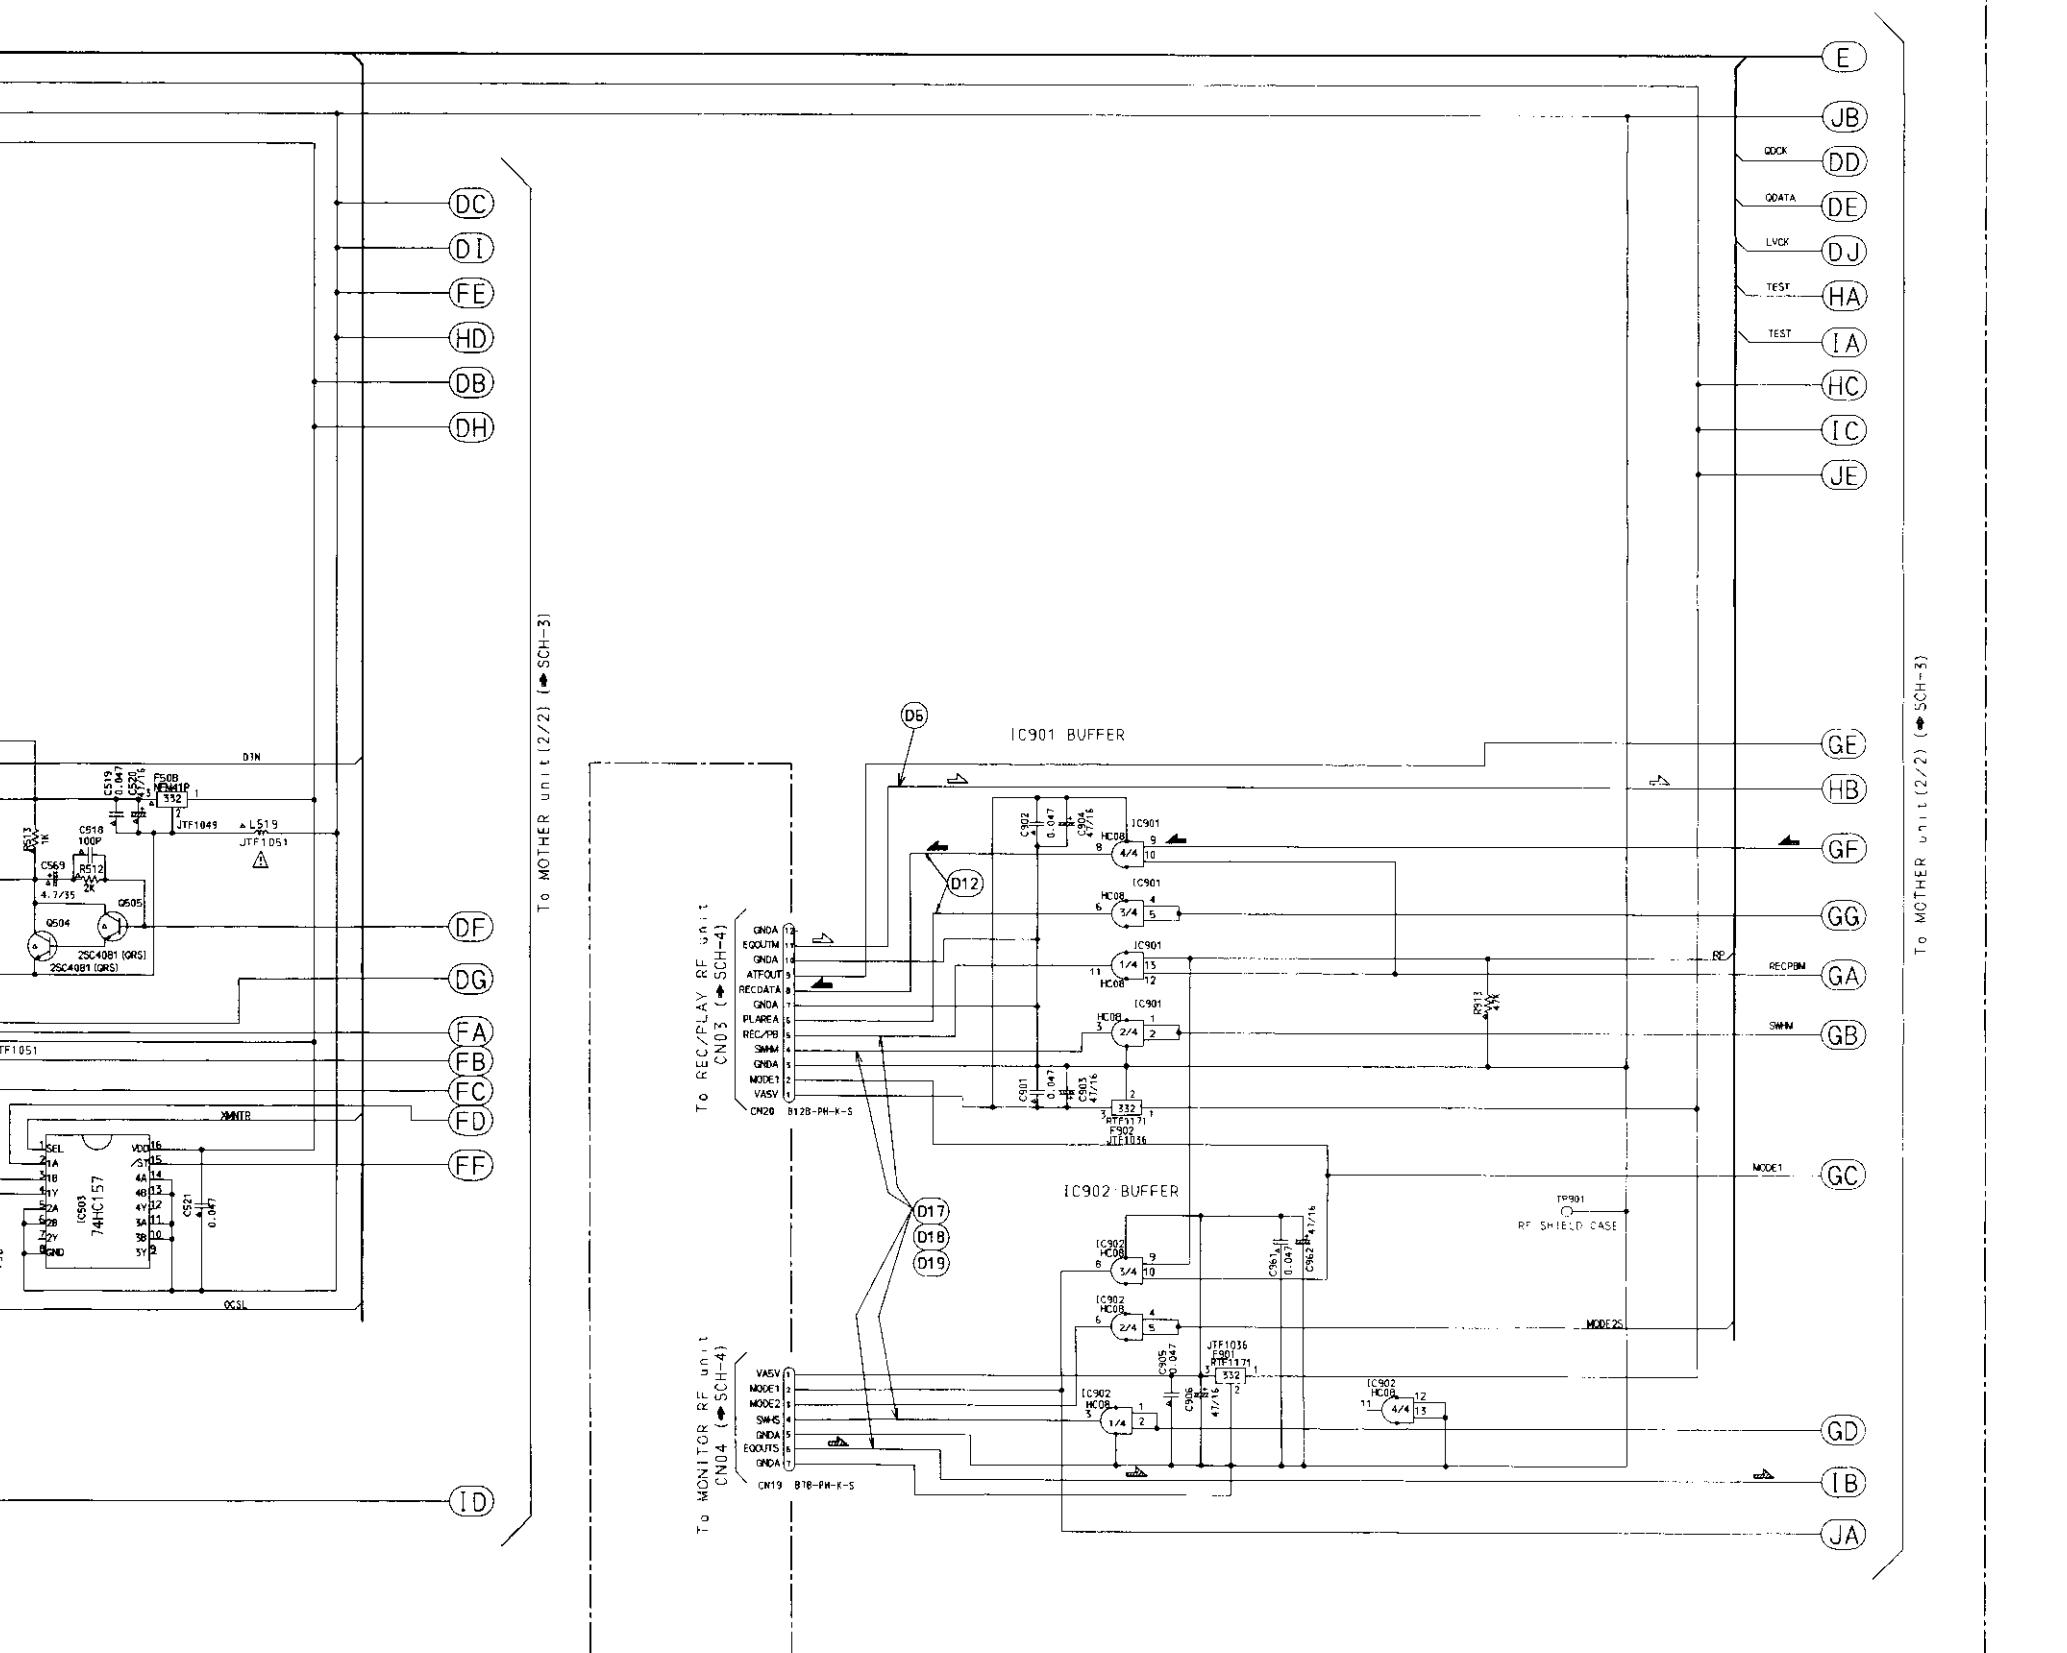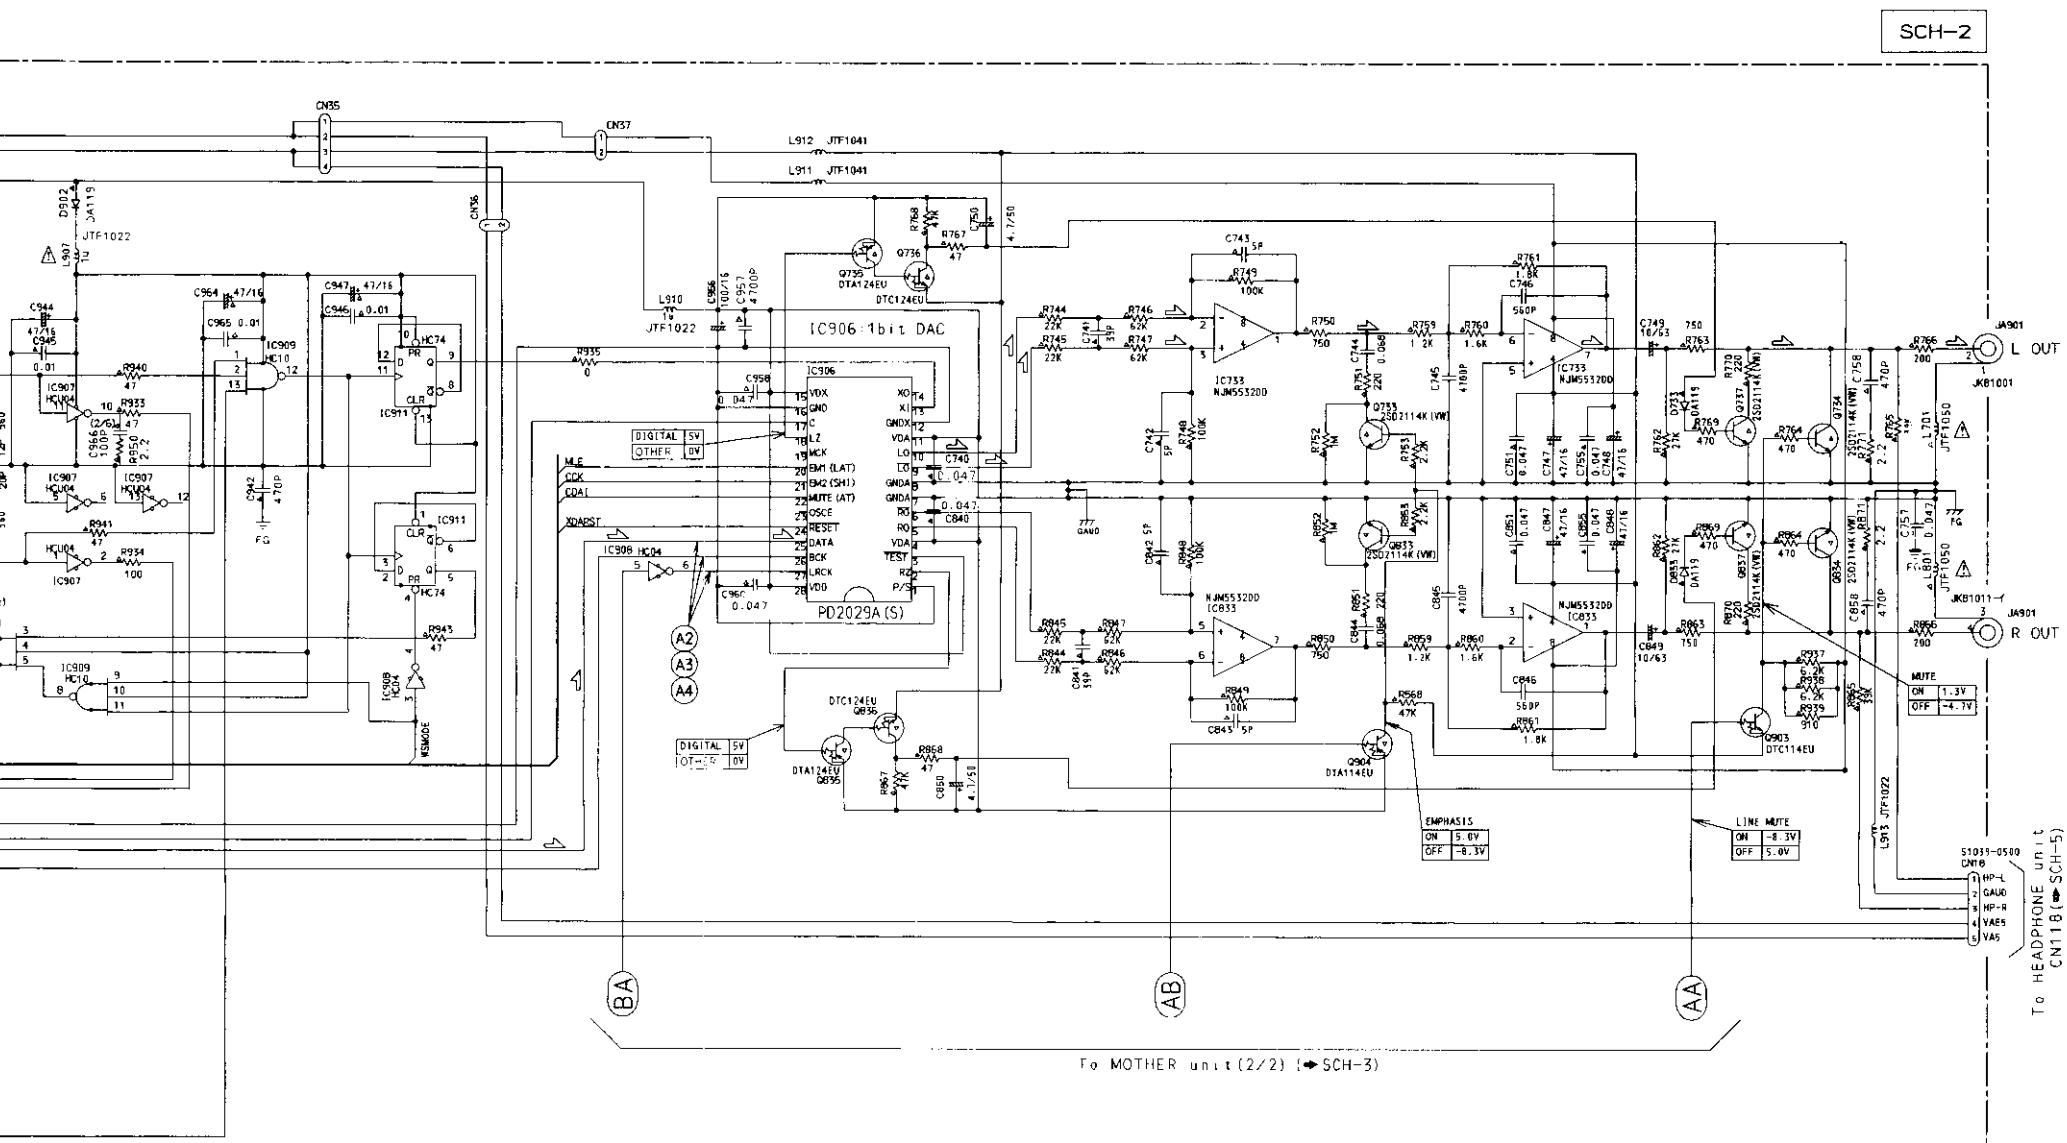

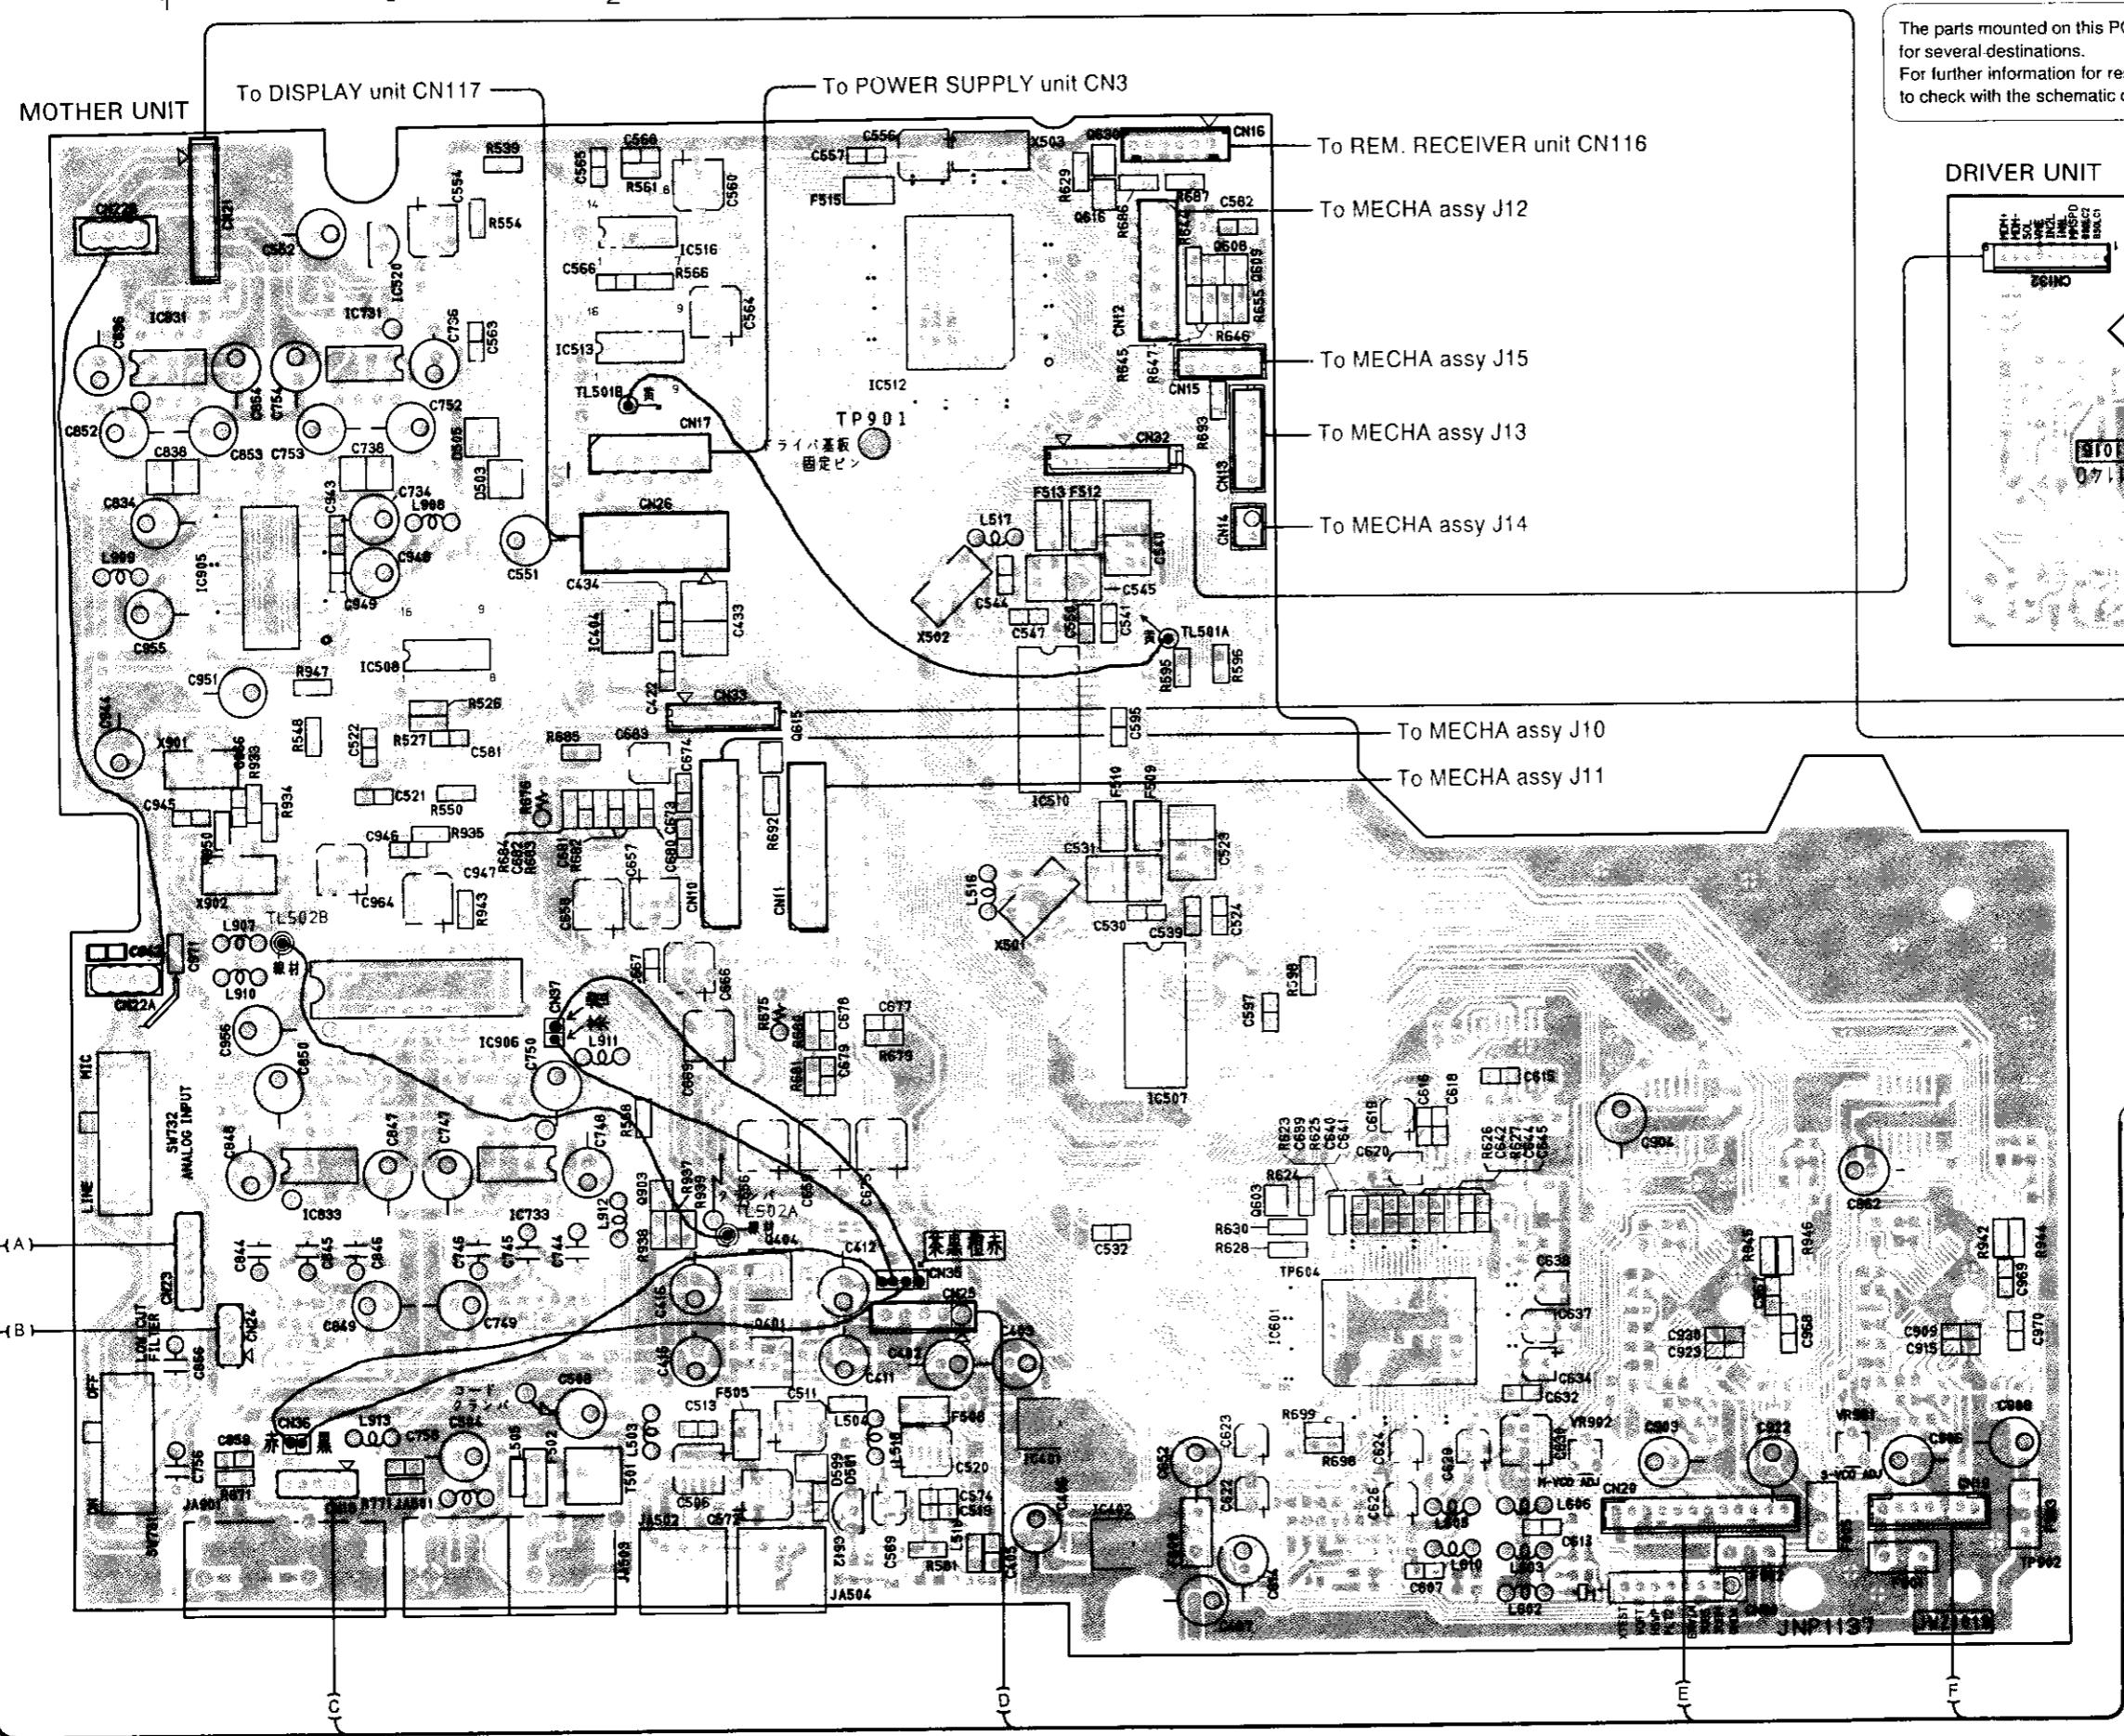


The parts mounted on this PCB include all necessary parts for several destinations.
For further information for respective destinations, be sure to check with the schematic diagram.

- This diagram is viewed from the pink colored foil side.
- This is a multi-layer PCB.

But information for both sides is shown.


Q619 Q618
IC405 Q624 Q621 Q622
Q405 IC605
Q506 Q604 Q612 IC606
Q607
Q614 Q617 Q613 Q623

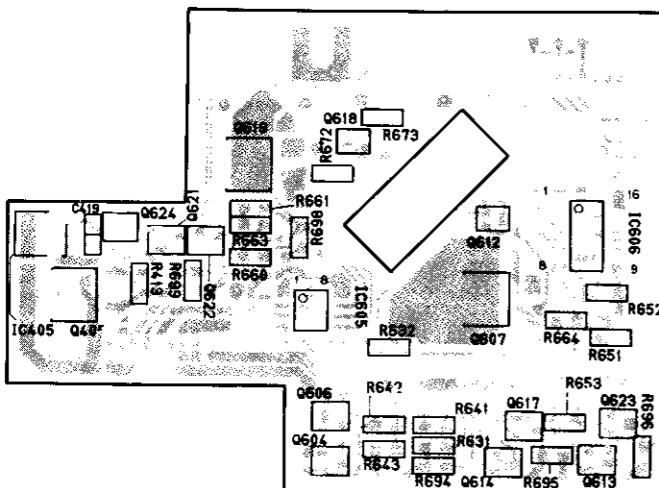

A

- This diagram is viewed from the gray colored foil side.
- This is a multi-layer PCB.
But information for both sides is shown.


The parts mounted on this PCB include all necessary parts for several destinations.
For further information for respective destinations, be sure to check with the schematic diagram.

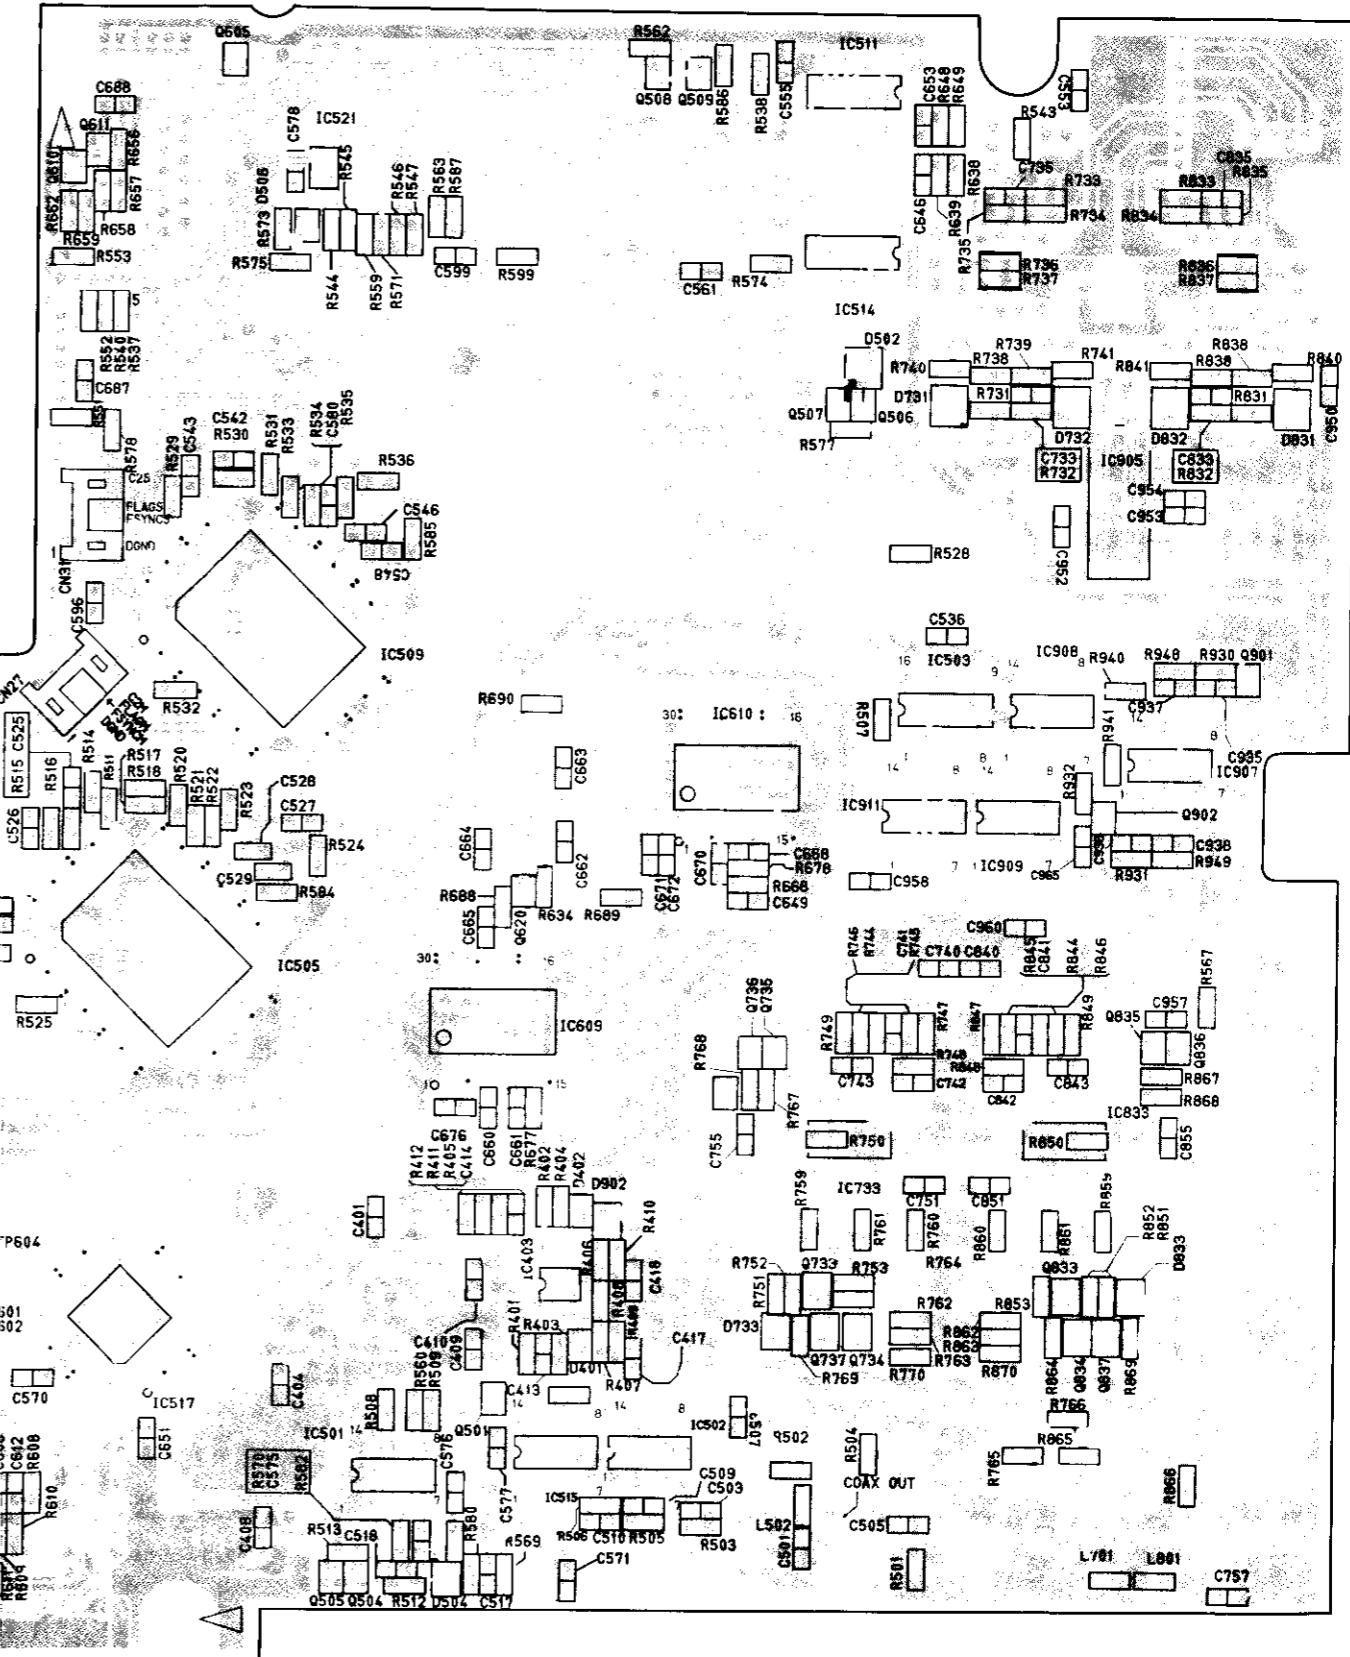

B



C

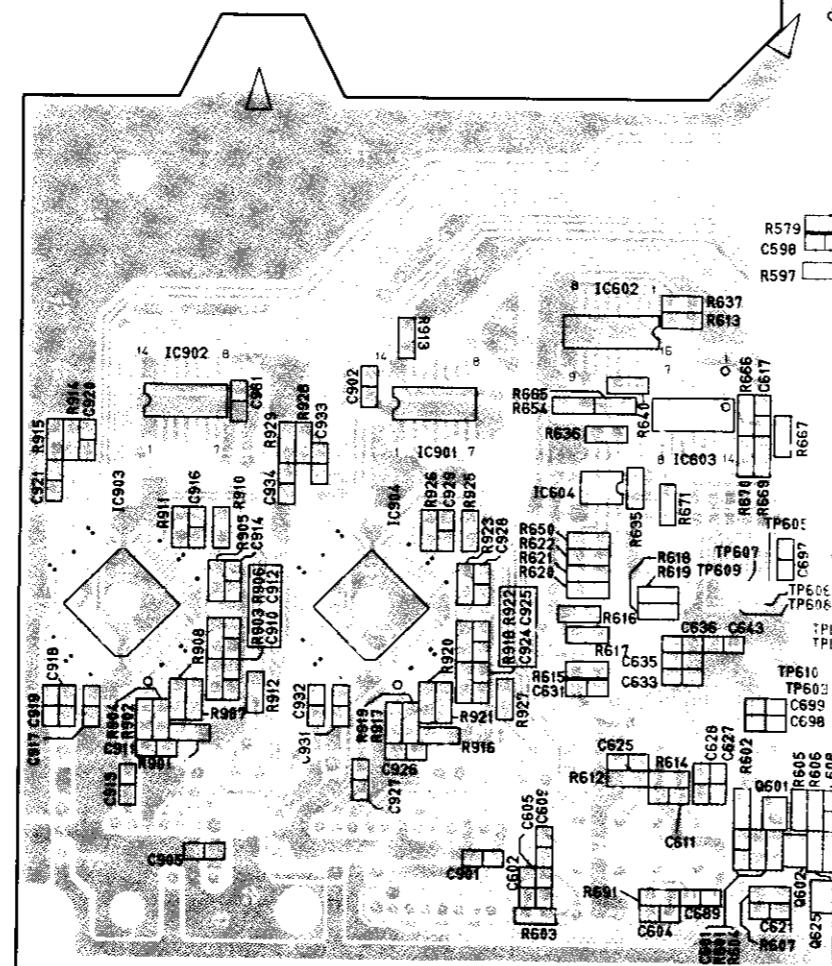

D


IC902
IC903IC901
IC904IC602 IC604 IC603
Q601 Q602 Q625IC505
IC517


Q610 Q611

Q605 IC521
IC509


Q508 Q509 IC511 IC507 Q506 IC514
IC610 IC911 IC503 IC909 IC908 Q902 IC907 Q901
Q736 Q735 Q835 Q836
Q505 Q504 IC501 Q501 IC515 IC403 IC502
Q733 Q737 Q734
Q833 Q834 Q837

● Waveforms

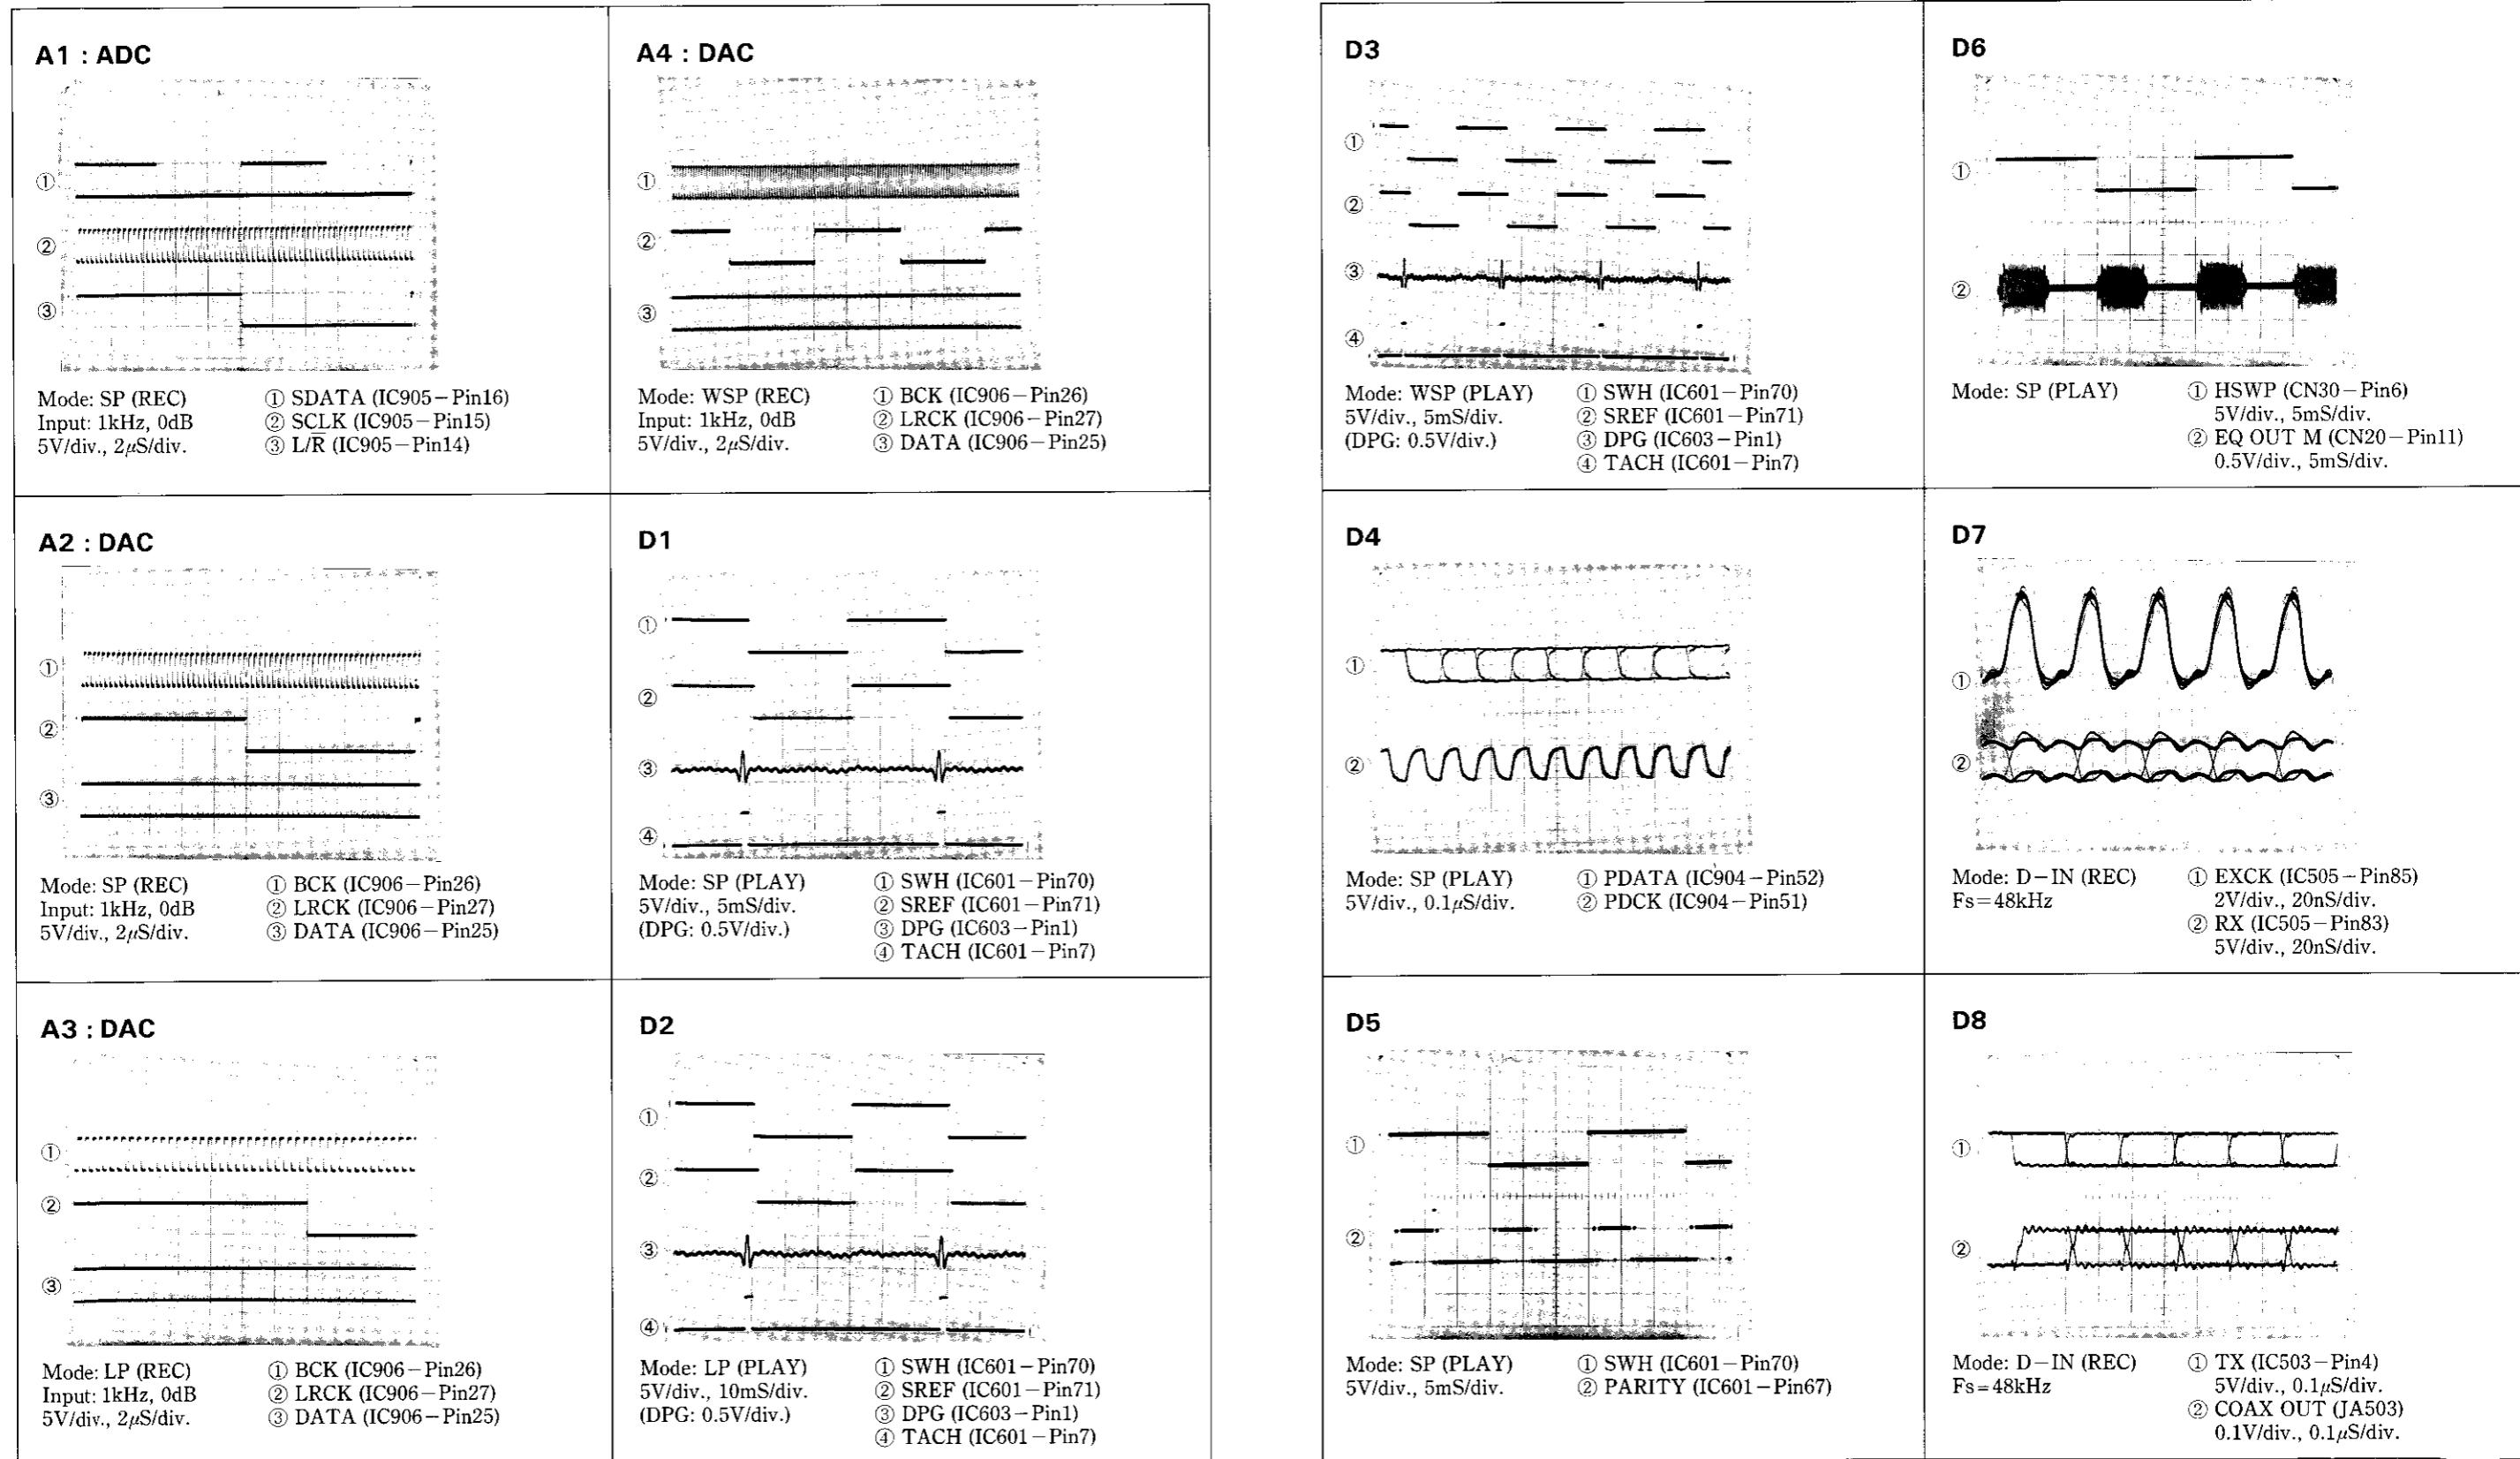


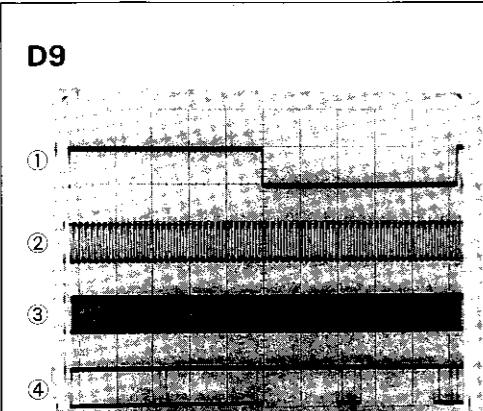


Mode: SP (REC)
Input: No input
5V/div., 2 μ S/div.
① MPX (IC505 – Pin73)
② BCK (IC505 – Pin72)
③ FS256 (IC505 – Pin70)
④ SOUT (IC505 – Pin71)

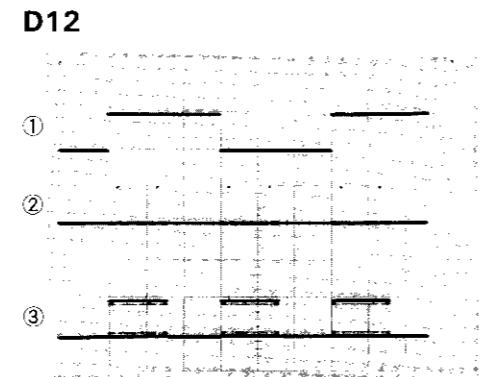


Mode: SP (REC)
5V/div., 5mS/div.
① HSWP (CN30 – Pin6)
② PLAREA (CN20 – Pin6)
③ RECDATA (CN20 – Pin8)

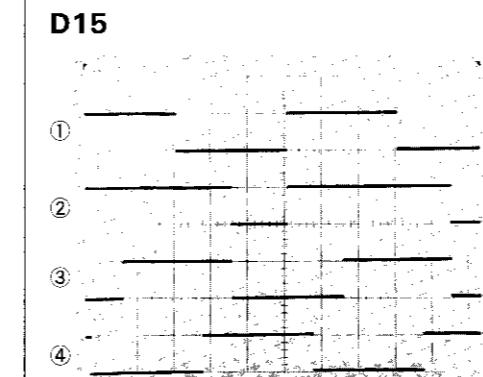


Mode: LP (REC)
5V/div., 10mS/div.
① FSYNC M (CN27 – Pin2)
② STRG (IC509 – Pin93)
③ FSYNC S (CN31 – Pin2)
④ HSWP (CN30 – Pin6)

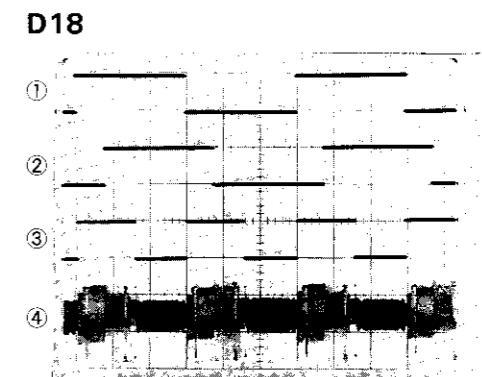


Mode: LP (REC)
5V/div., 10mS/div.
(EQ OUT S: 1V/div.)
① SWHM (CN20 – Pin4)
② SWHS (CN19 – Pin4)
③ REC/PB (CN20 – Pin5)
④ EQ OUT S(CN19 – Pin6)

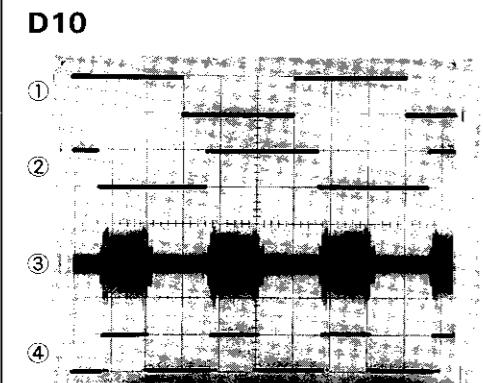


Mode: SP (PLAY)
5V/div., 5mS/div.
(ENVIN: 0.5V/div.)
① FSYNC M (CN27 – Pin2)
② HSWP (CN30 – Pin6)
③ ENV IN (CN30 – Pin4)
④ ENVOUT (IC601 – Pin64)

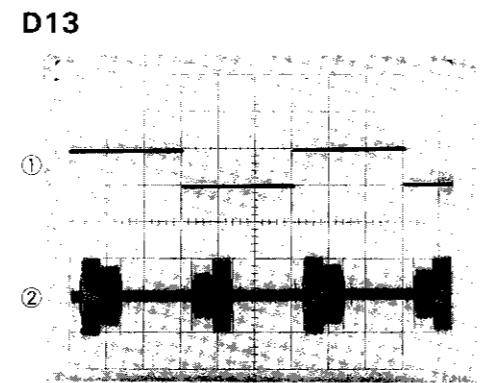


Mode: SP (PLAY)
Test Tape: SDA – 102
① HSWP (CN30 – Pin6)
② PLT2 (CN30 – Pin5)
0.1V/div., 5mS/div.

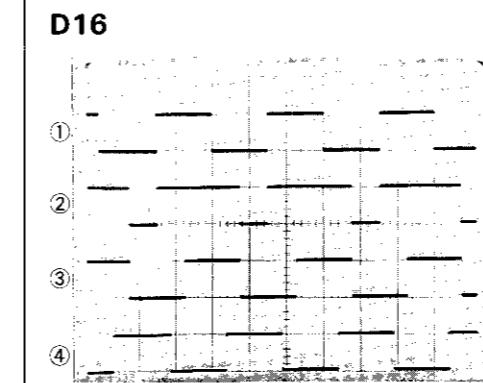


Mode: WSP (REC)
5V/div., 5mS/div.
① FSYNC M (CN27 – Pin2)
② STRG (IC509 – Pin93)
③ FSYNC S (CN31 – Pin2)
④ HSWP (CN30 – Pin6)

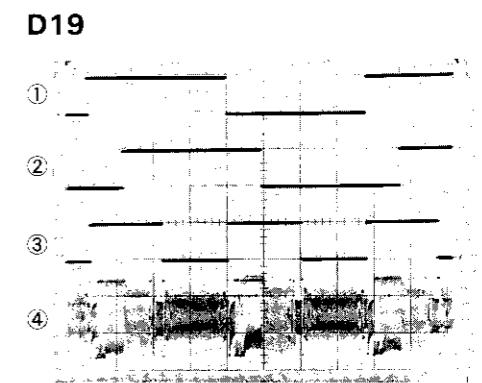


Mode: WSP (REC)
5V/div., 2mS/div.
(EQ OUT S: 1V/div.)
① SWHM (CN20 – Pin4)
② SWHS (CN19 – Pin4)
③ REC/PB (CN20 – Pin5)
④ EQ OUT S(CN19 – Pin6)

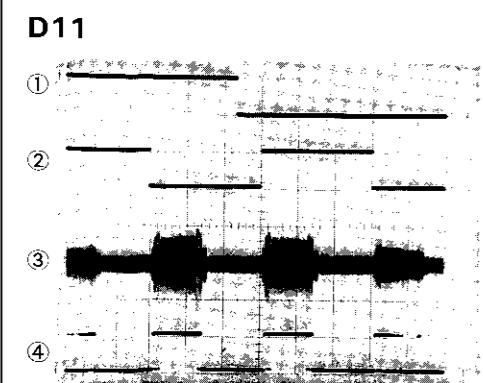


Mode: LP (PLAY)
5V/div., 5mS/div.
(ENVIN: 0.5V/div.)
① FSYNC M (CN27 – Pin2)
② HSWP (CN30 – Pin6)
③ ENV IN (CN30 – Pin4)
④ ENVOUT (IC601 – Pin64)

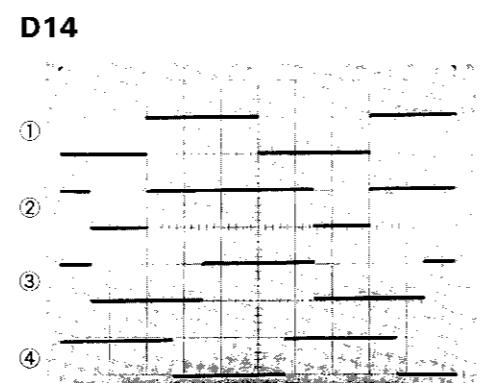

Mode: SP (REC)
5V/div., 5mS/div.
① FSYNC M (CN27 – Pin2)
② STRG (IC509 – Pin93)
③ FSYNC S (CN31 – Pin2)
④ HSWP (CN30 – Pin6)

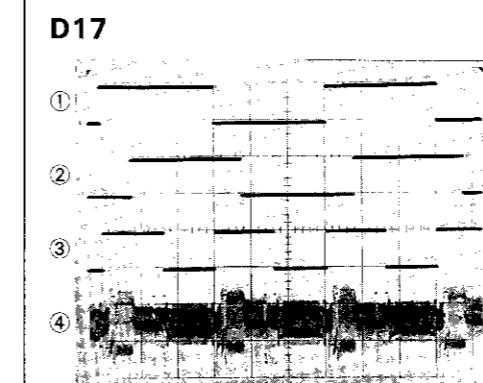

Mode: SP (REC)
5V/div., 5mS/div.
(EQ OUT S: 1V/div.)
① SWHM (CN20 – Pin4)
② SWHS (CN19 – Pin4)
③ REC/PB (CN20 – Pin5)
④ EQ OUT S(CN19 – Pin6)

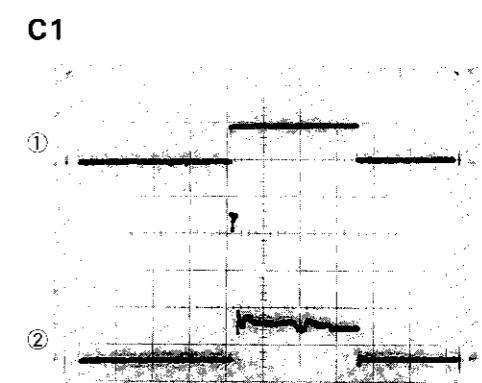



Mode: Solenoid ON
(PLAY BUTTON ON)
① BSOLON (CN132 – Pin1)
5V/div., 0.1S/div.
② SOL (CN132 – Pin7)
2V/div., 0.1S/div.
(One div. above the center line is GND level.)

The waveforms C2 and C3 are shown on page 2–28 and page 2–39.



MOTHER unit (2/2) (JWZ1013)

To MOTHER unit (1/2) (SCH-2)

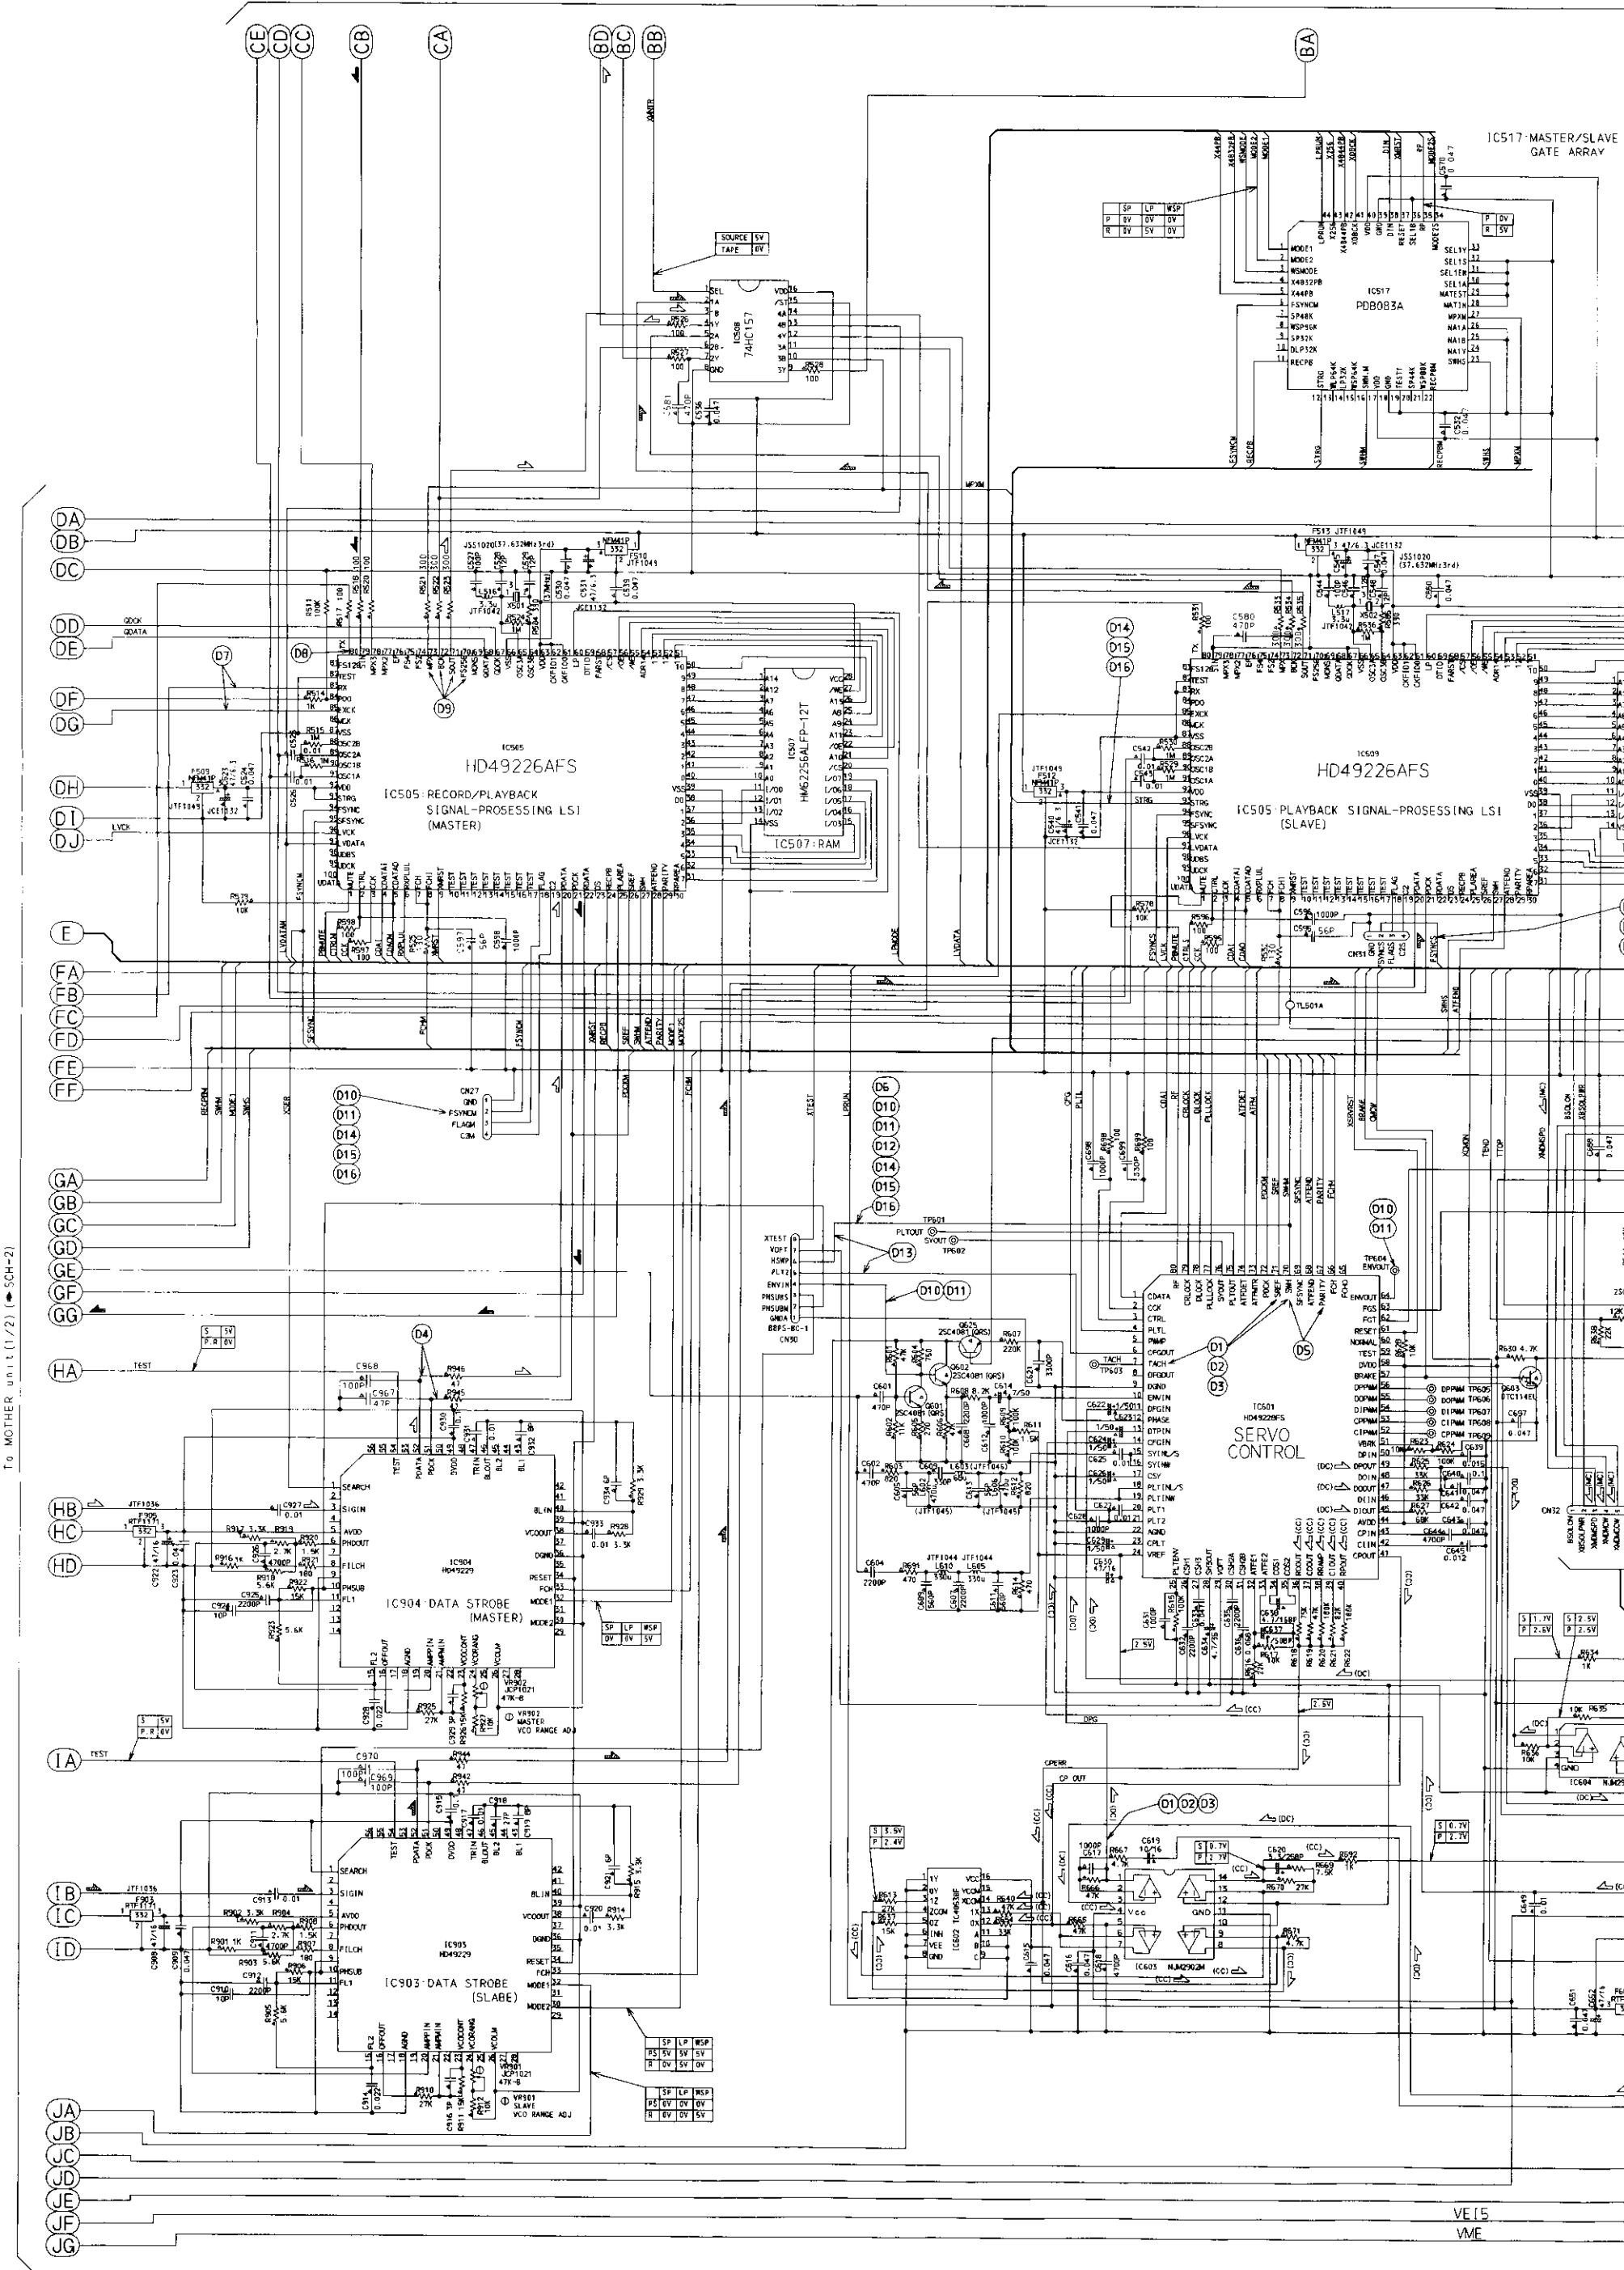


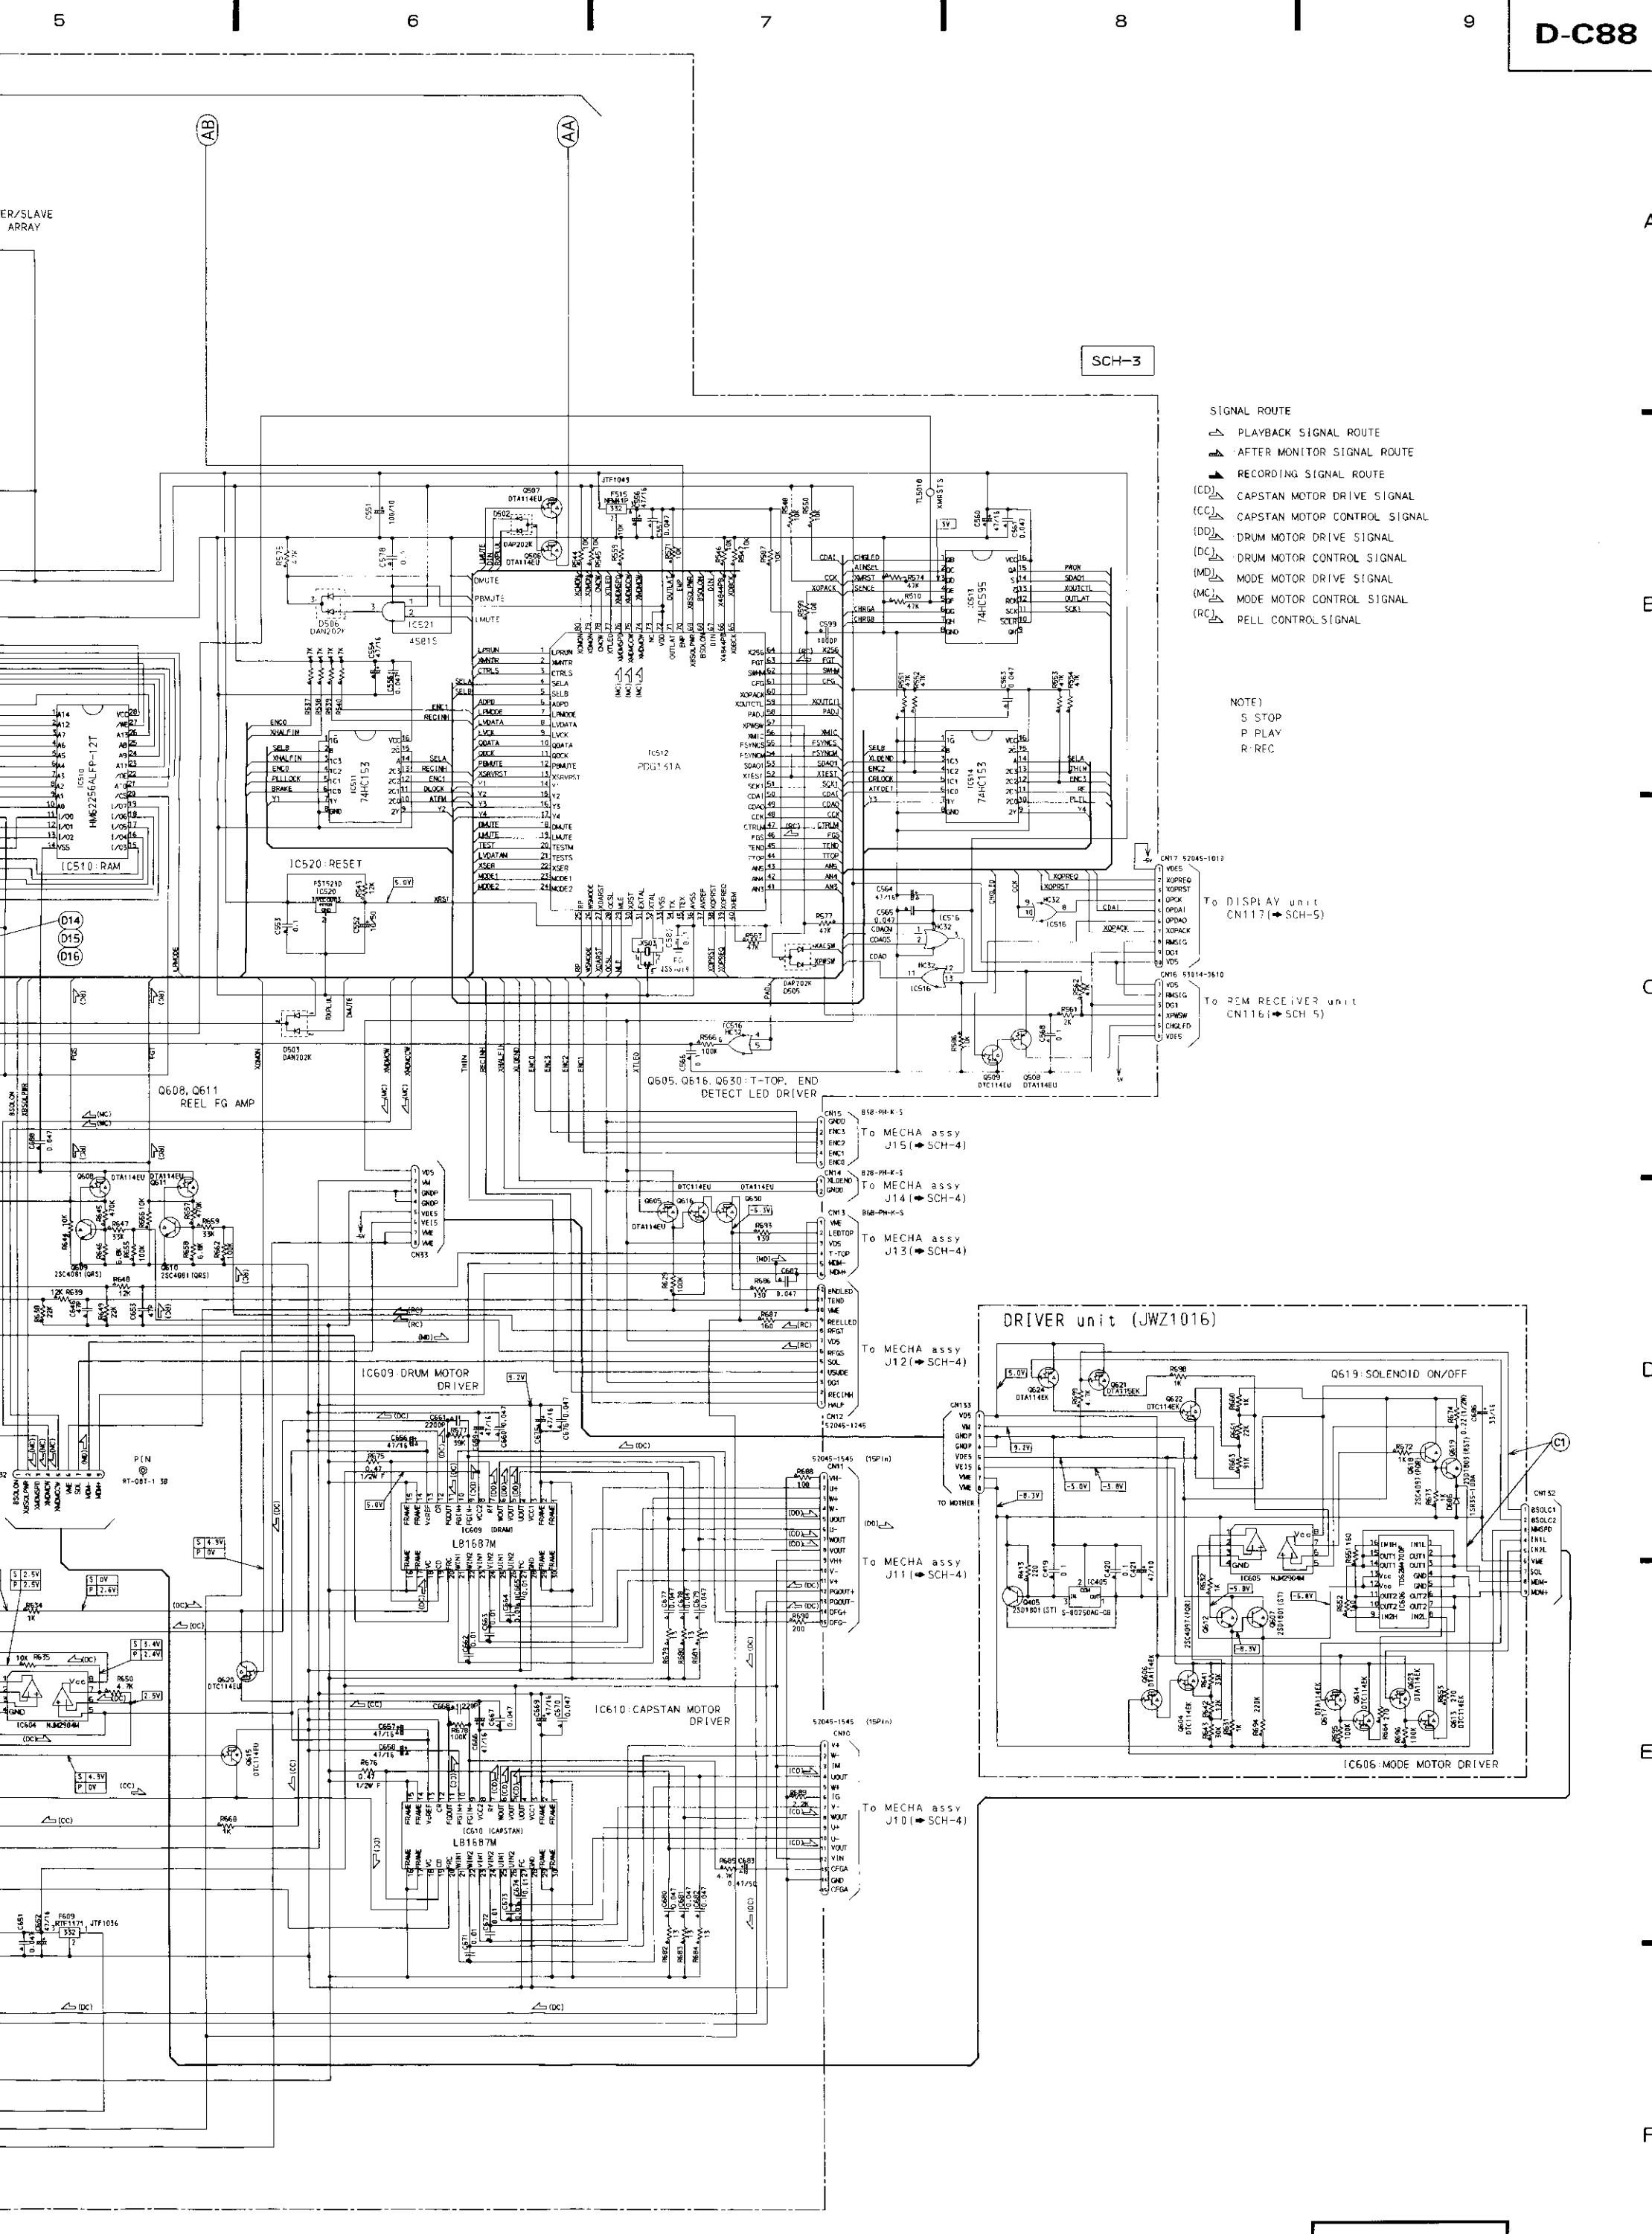


(3). POWER SUPPLY UNIT、MECHA UNIT、REC/PLAY RF UNIT、MONITOR RF UNIT、AC ADAPTOR UNIT

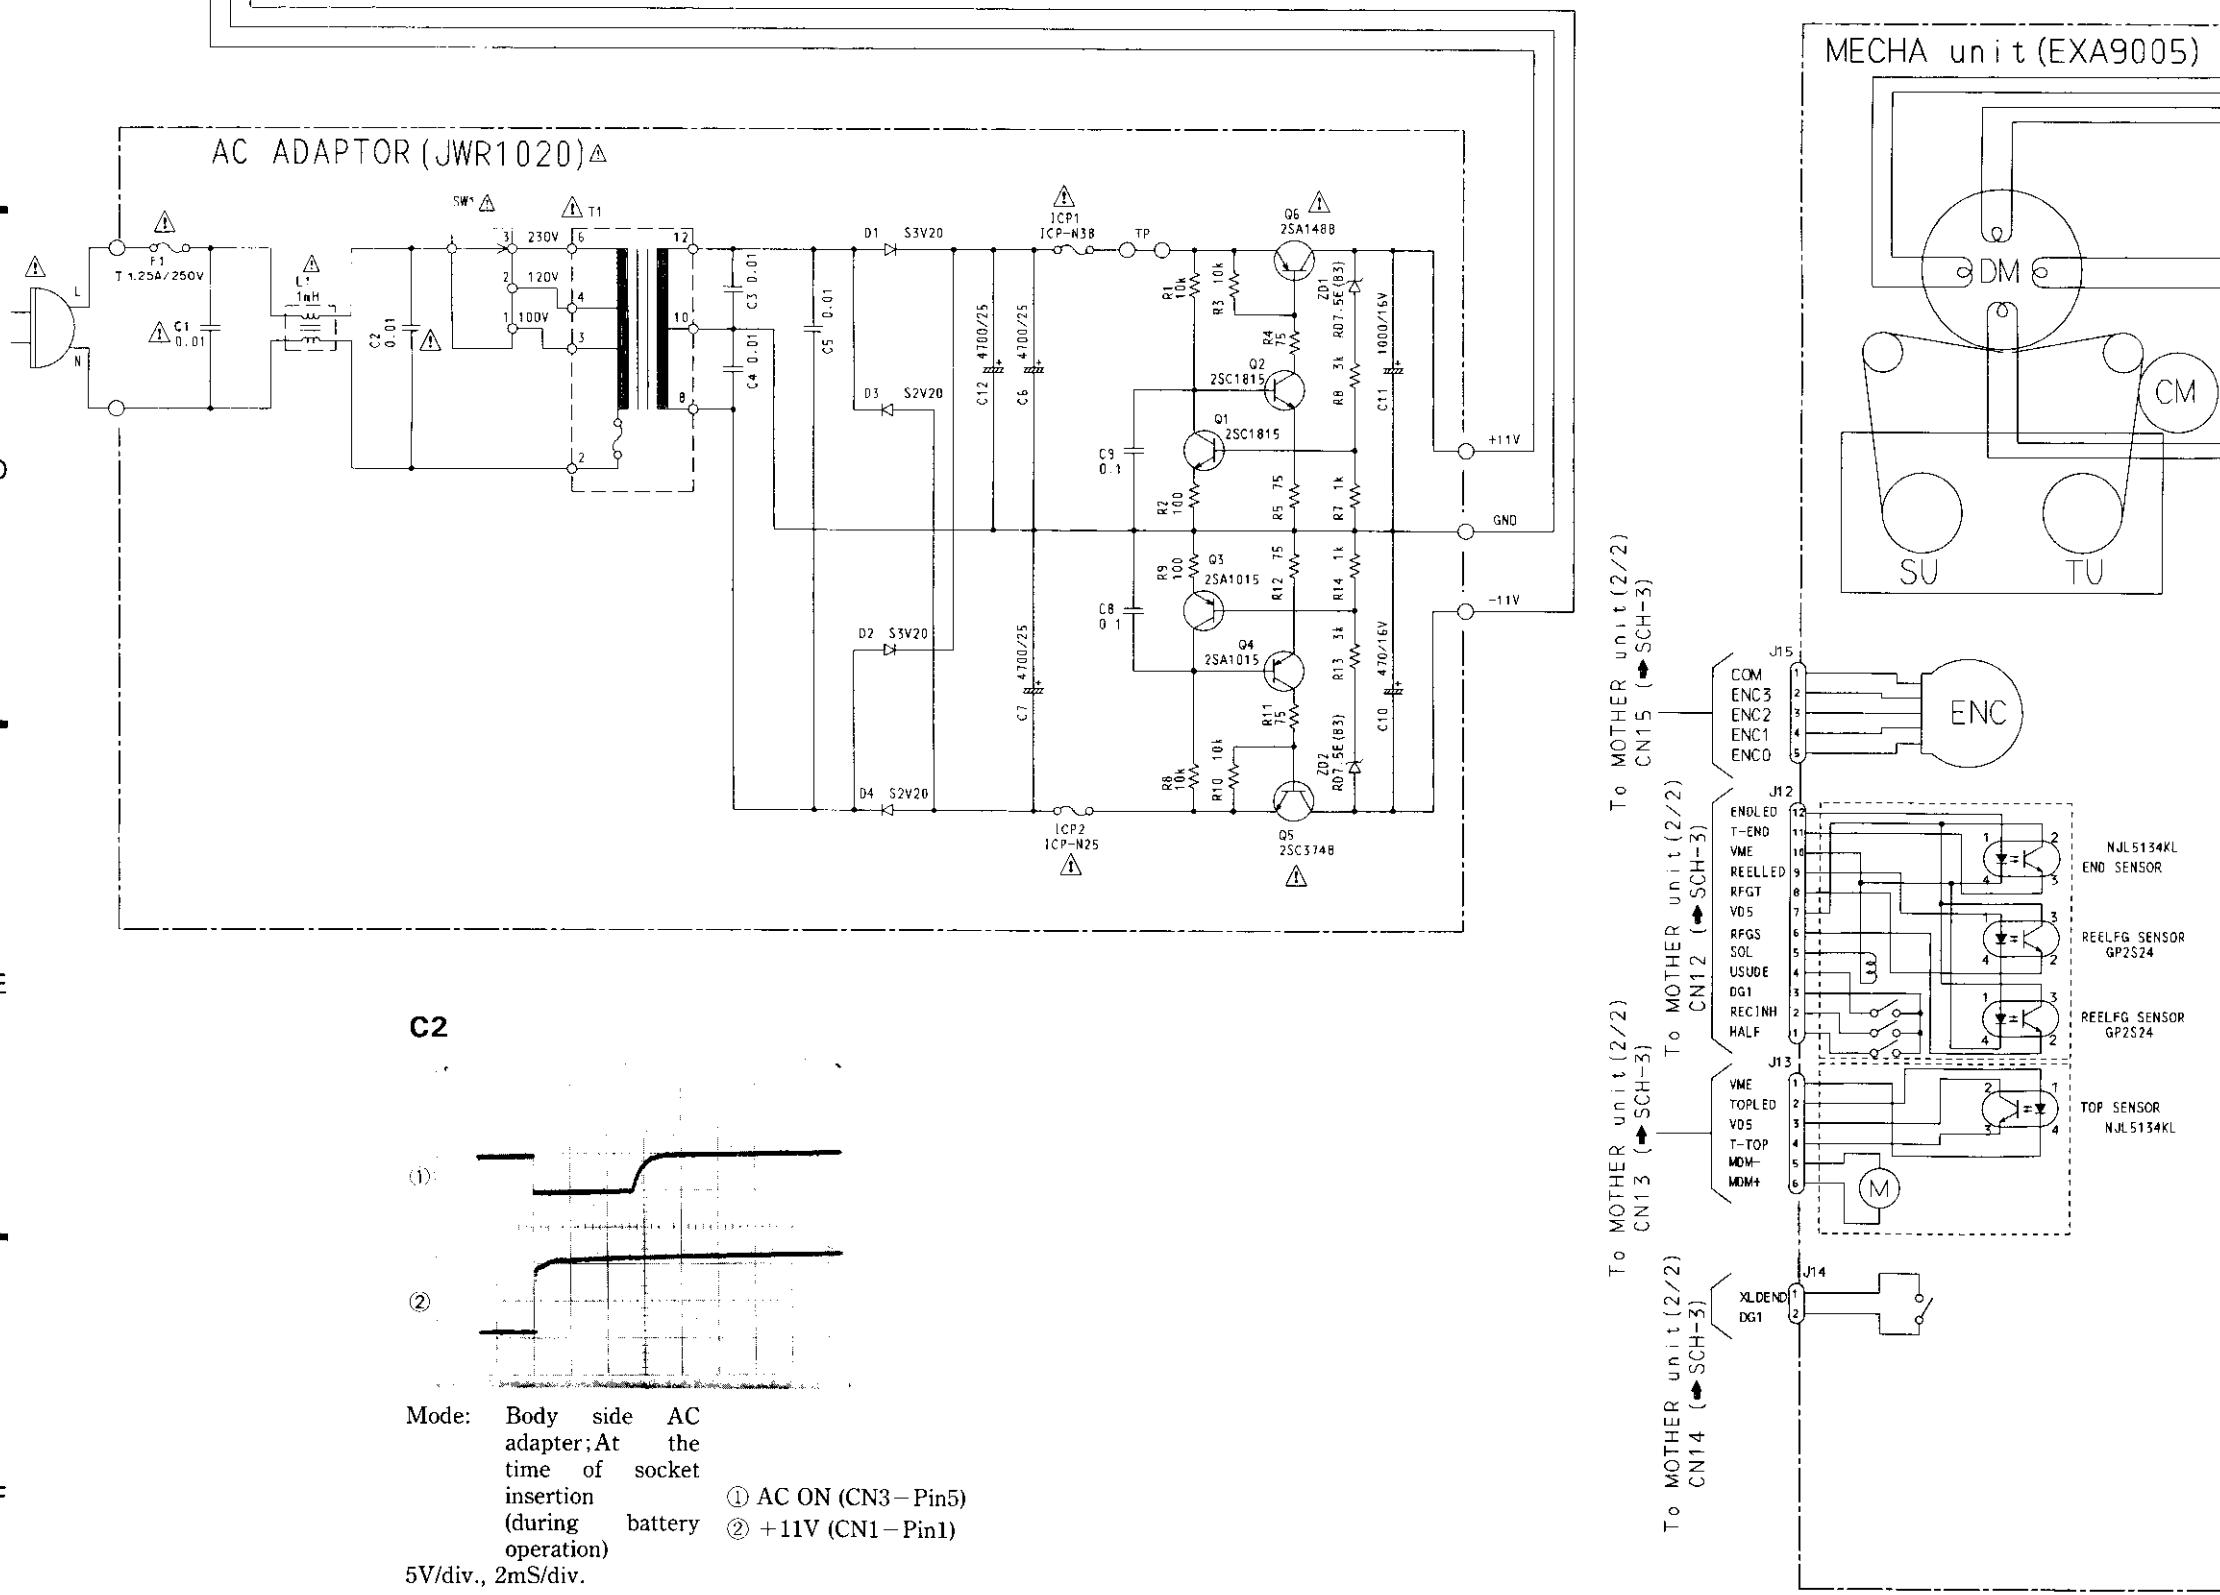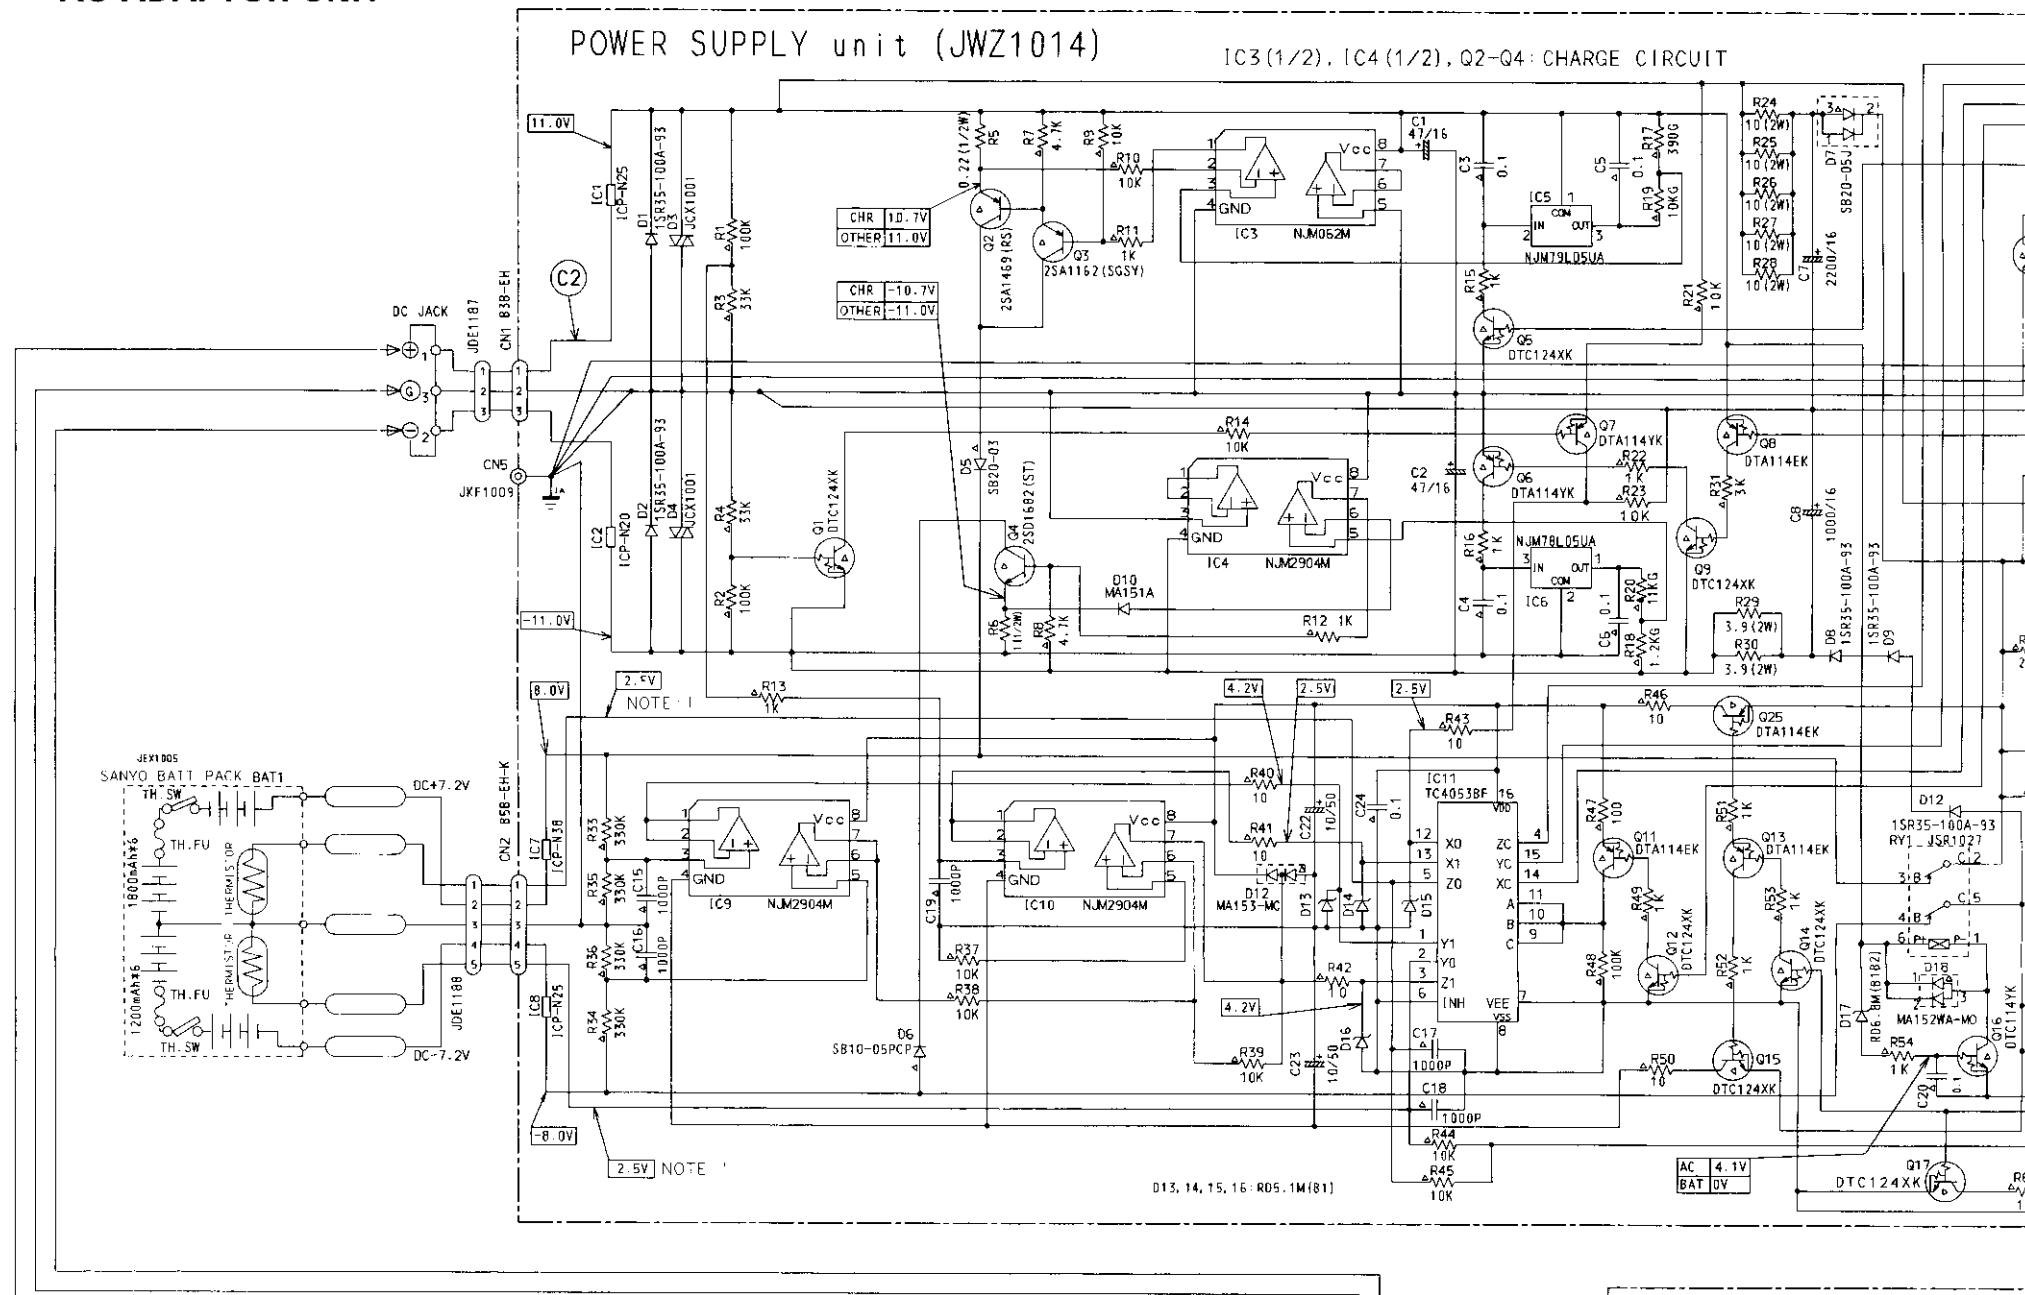

POWER SUPPLY UNIT、MECHA UNIT、
REC/PLAY RF UNIT、MONITOR RF UNIT、
AC ADAPTOR UNIT

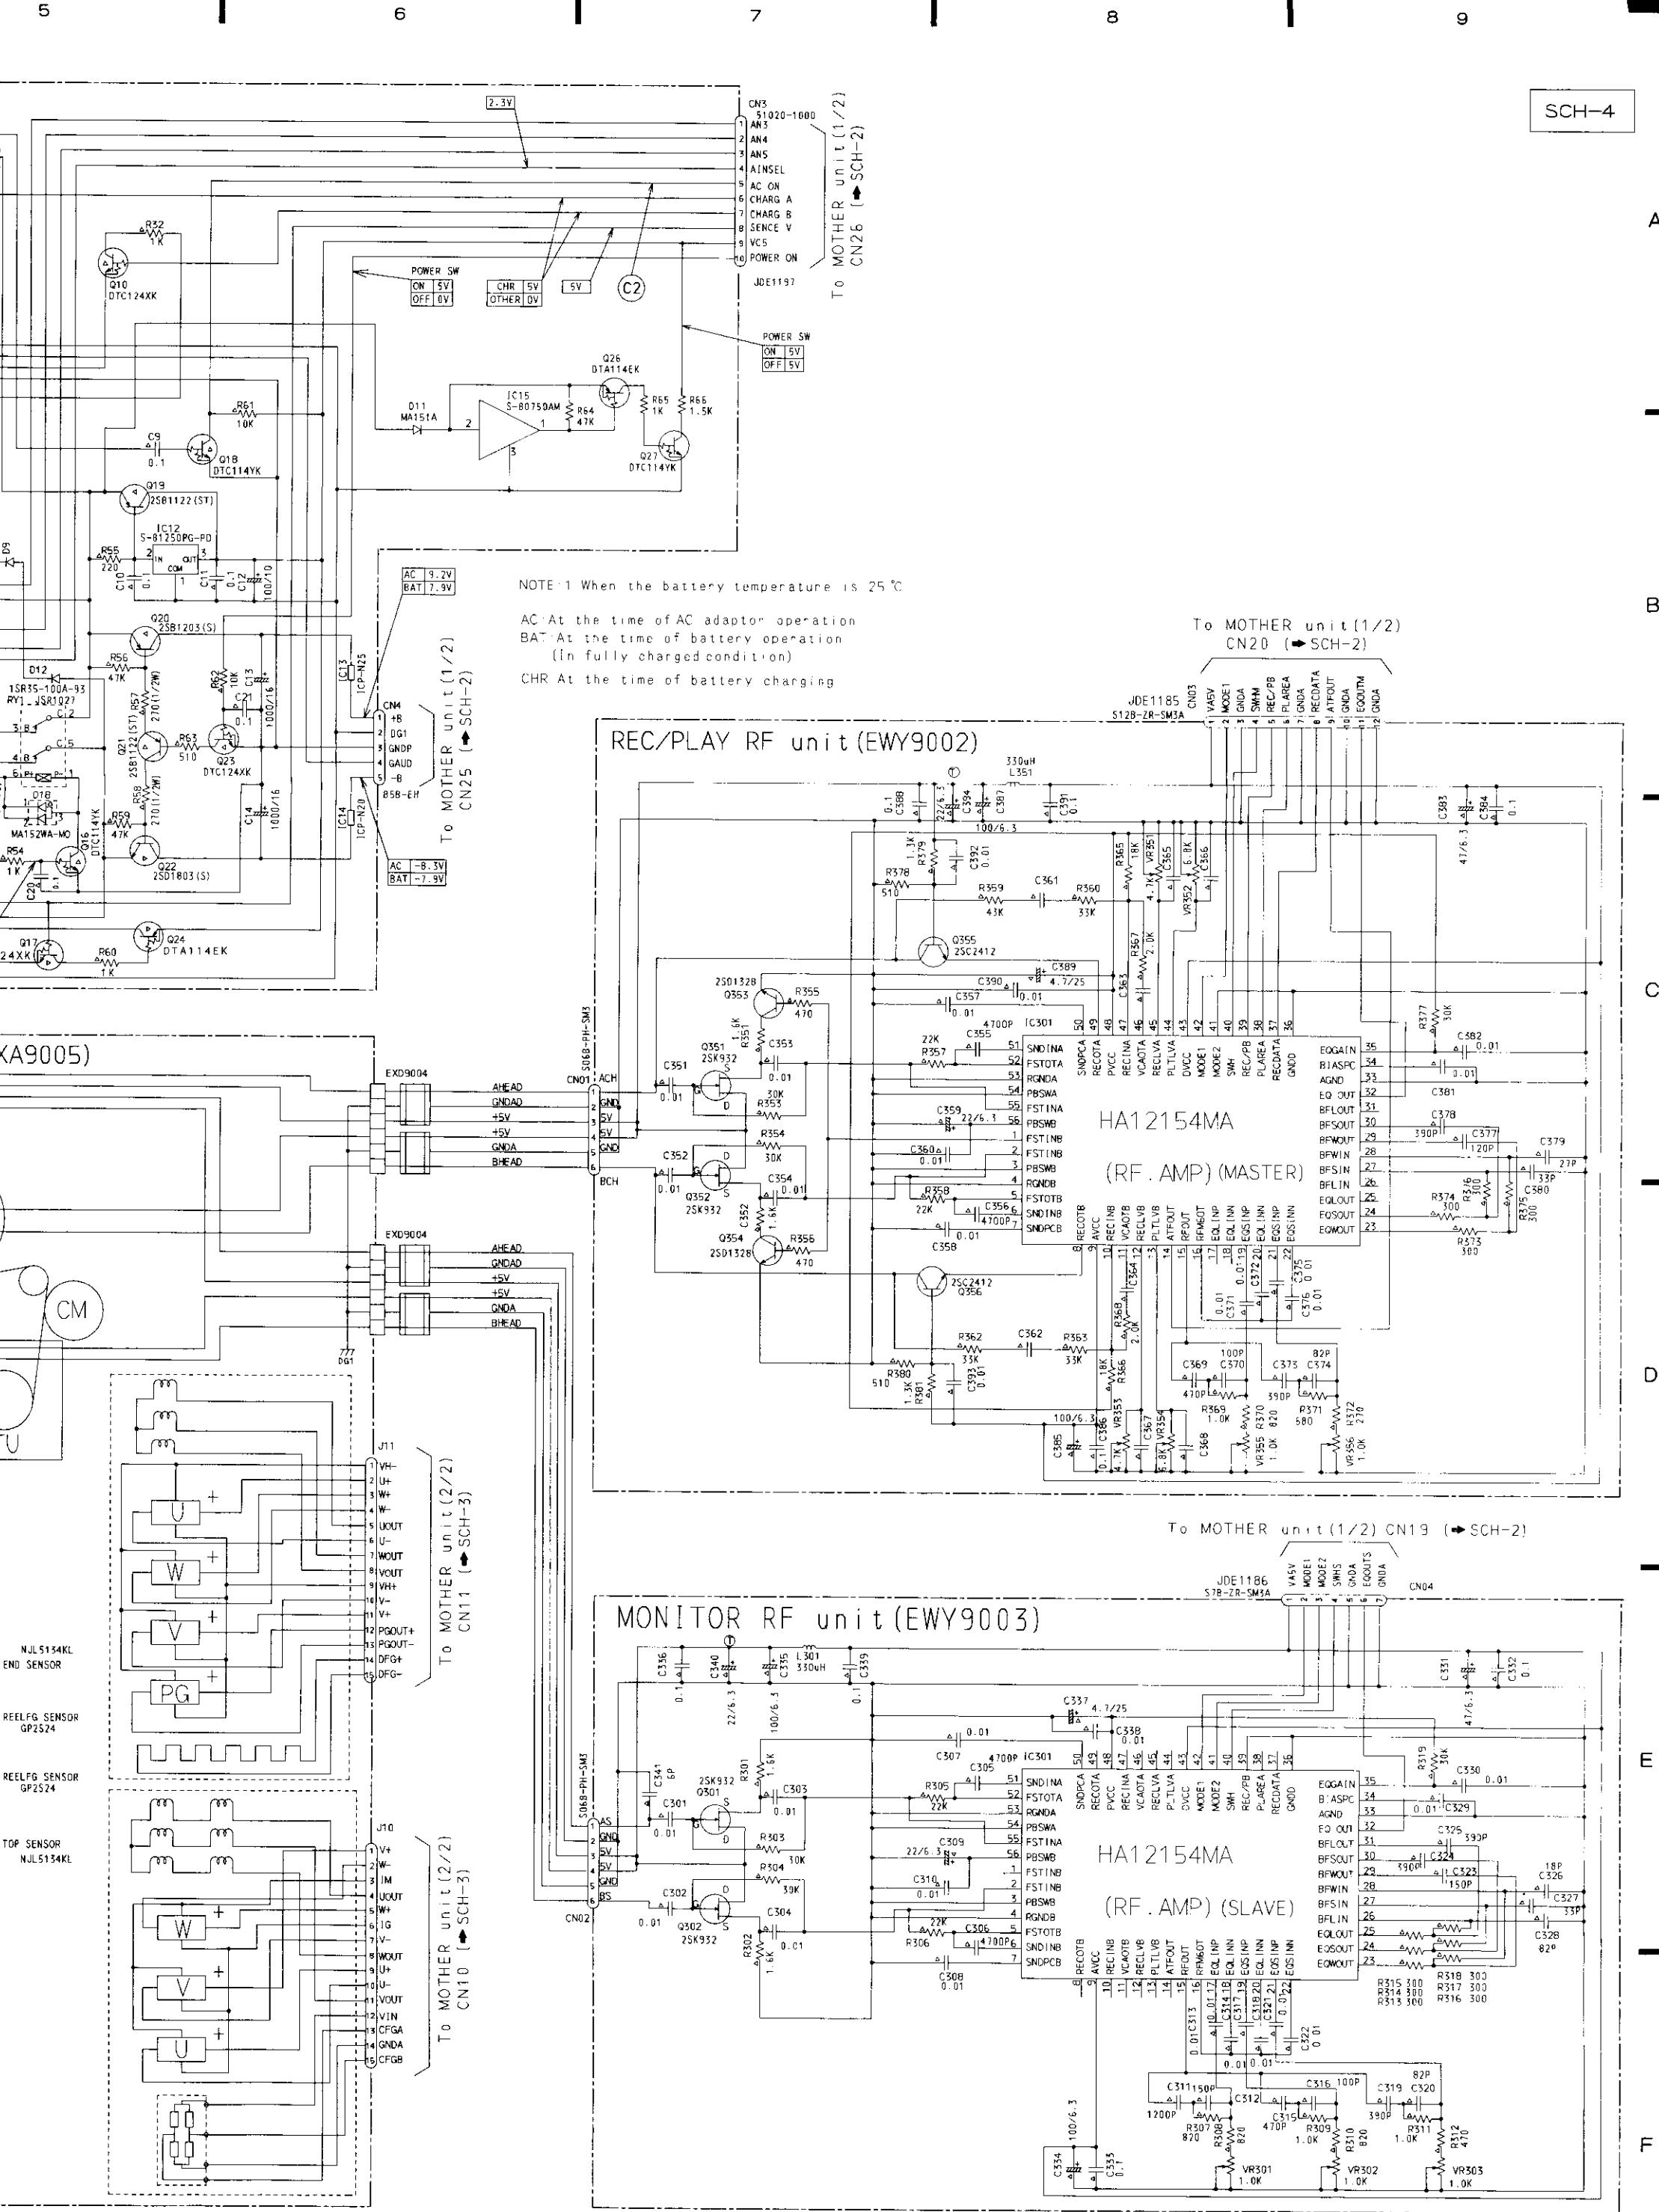


RF UNIT

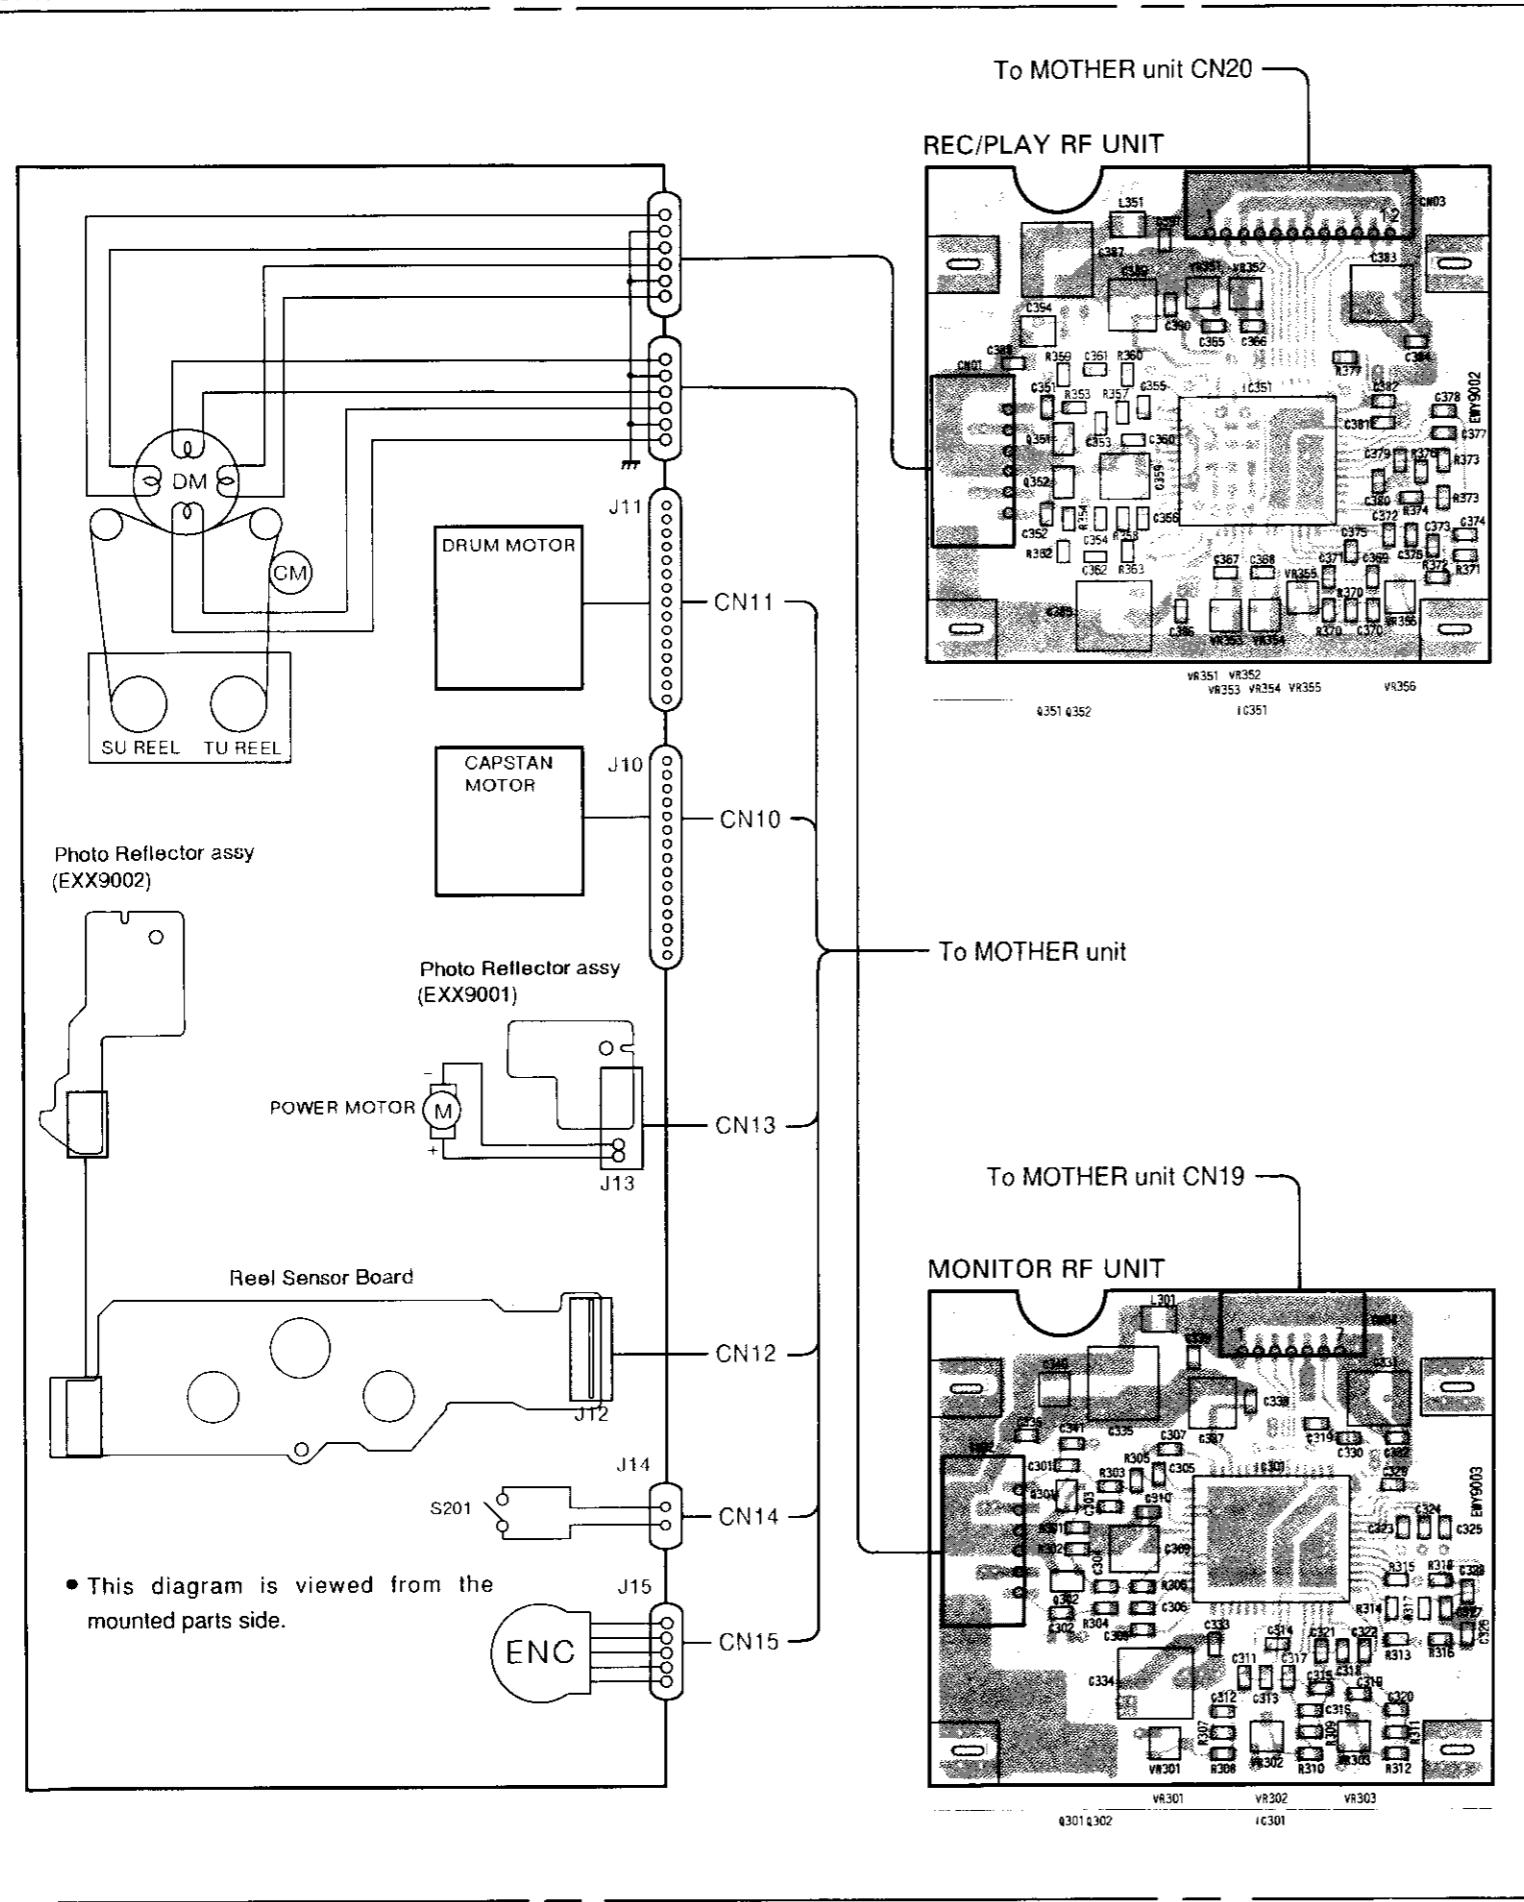


- This diagram is viewed from the pink colored foil side.
 - This is a multi-layer PCB.
But information for both sides is shown.
- The parts mounted on this PCB include all necessary parts for several destinations.
For further information for respective destinations, be sure to check with the schematic diagram.

To MOTHER unit CN26

To MOTHER unit CN25

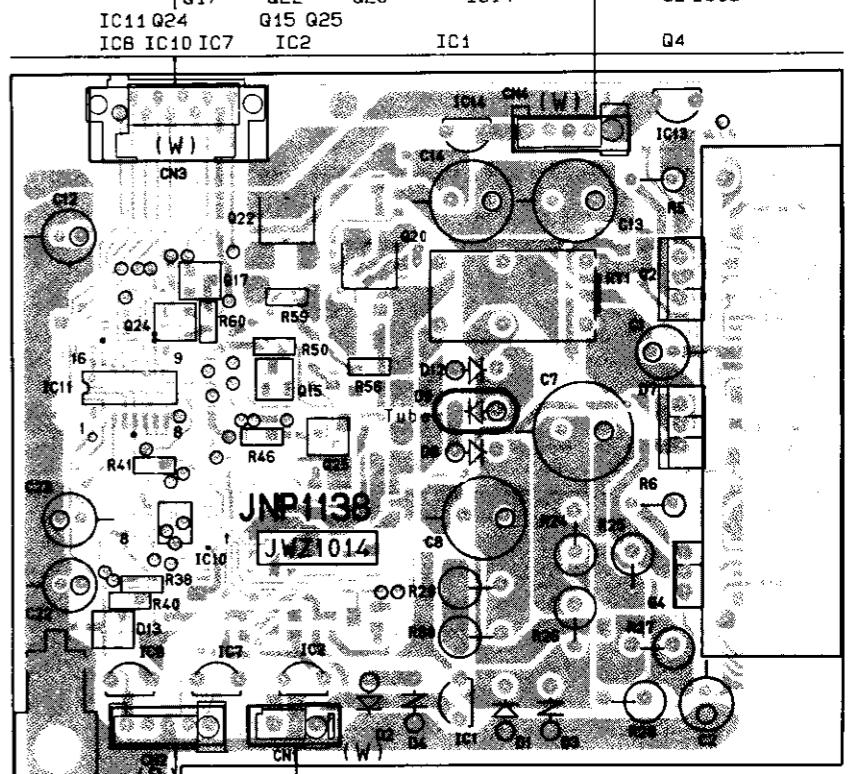


AC ADAPTOR

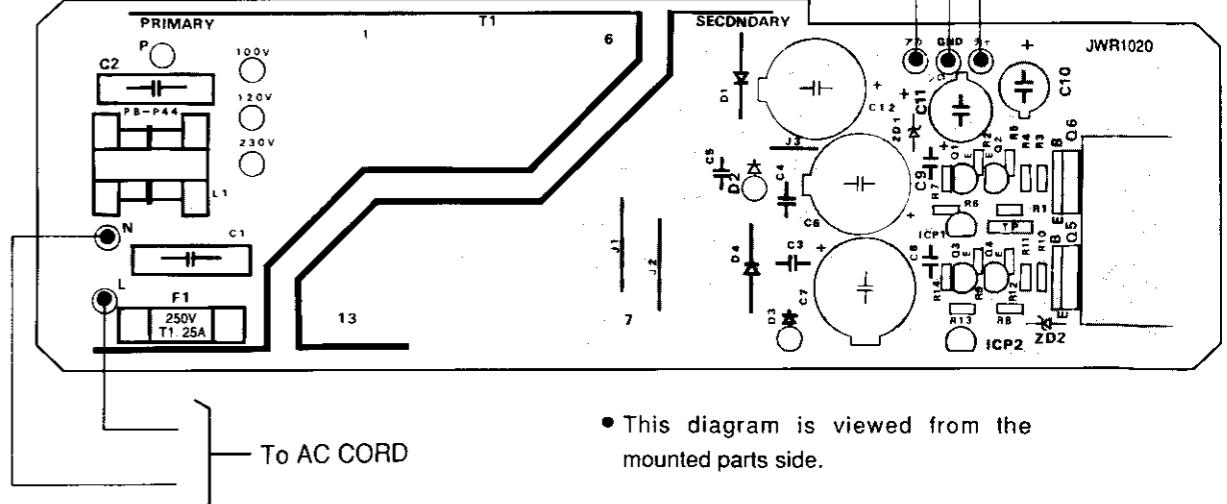


A

- This diagram is viewed from the gray colored foil side.
- This is a multi-layer PCB.
But information for both sides is shown.

The parts mounted on this PCB include all necessary parts for several destinations.
For further information for respective destinations, be sure to check with the schematic diagram.

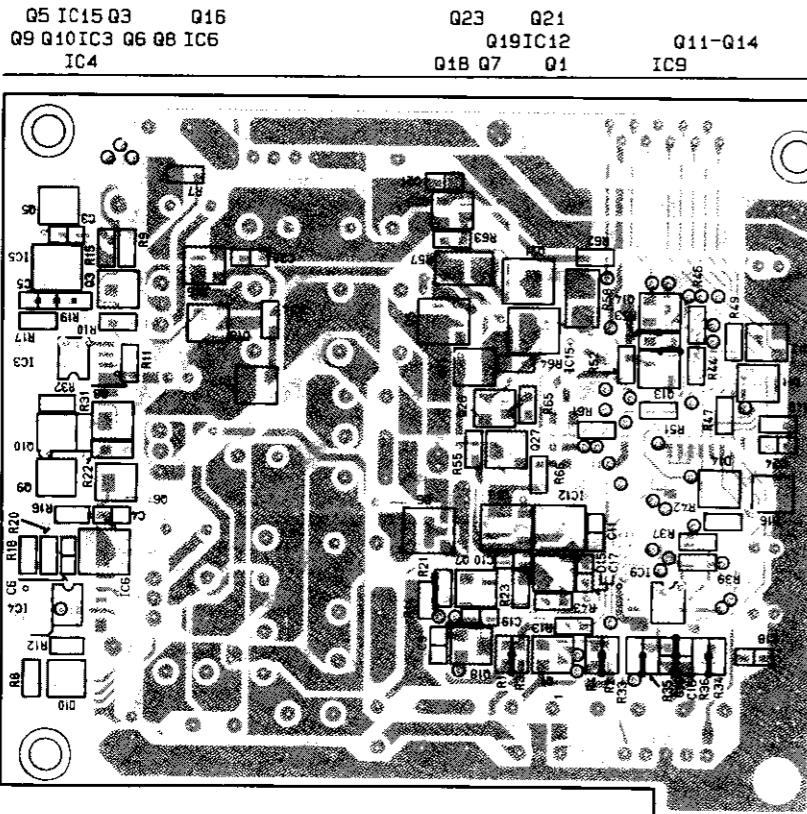

B

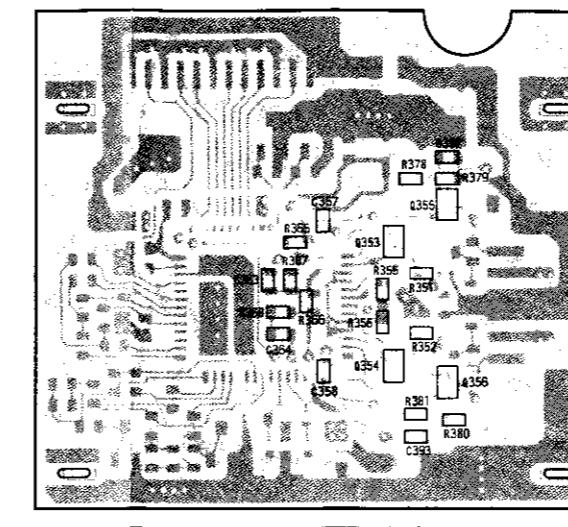


Q353 Q354 Q356 Q355



C



D

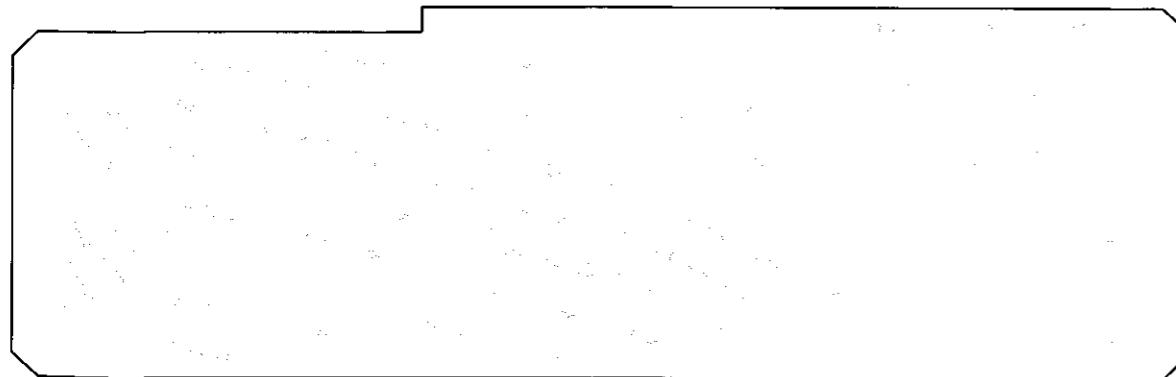

- This diagram is viewed from the foil side.

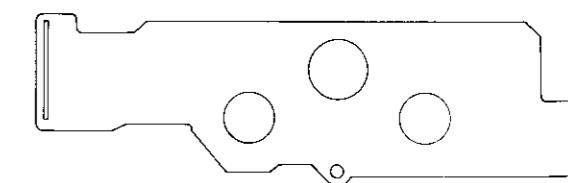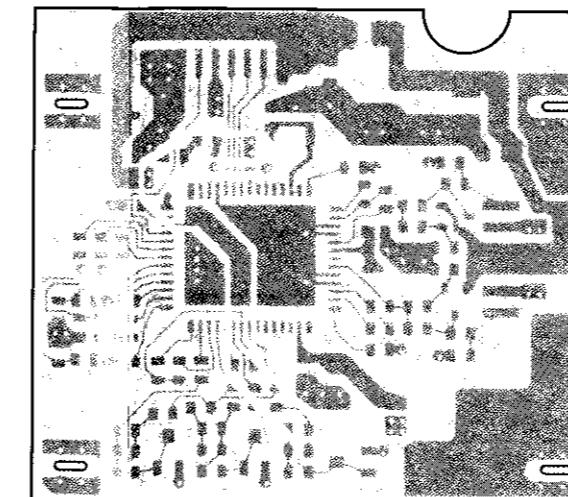

- This diagram is viewed from the foil side.

1

2

3





4

5

6

- This diagram is viewed from the gray colored foil side.
- This is a multi-layer PCB.
- But information for both sides is shown.

The parts mounted on this PCB include all necessary parts for several destinations. For further information for respective destinations, be sure to check with the schematic diagram.

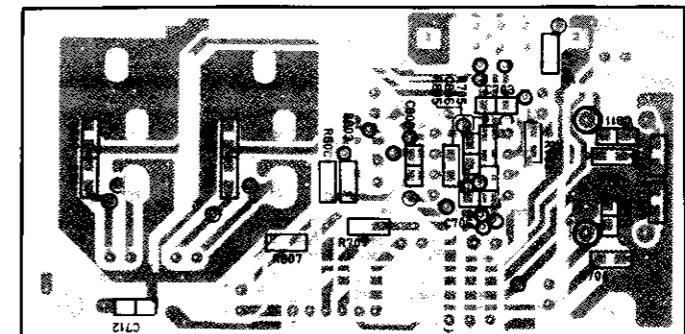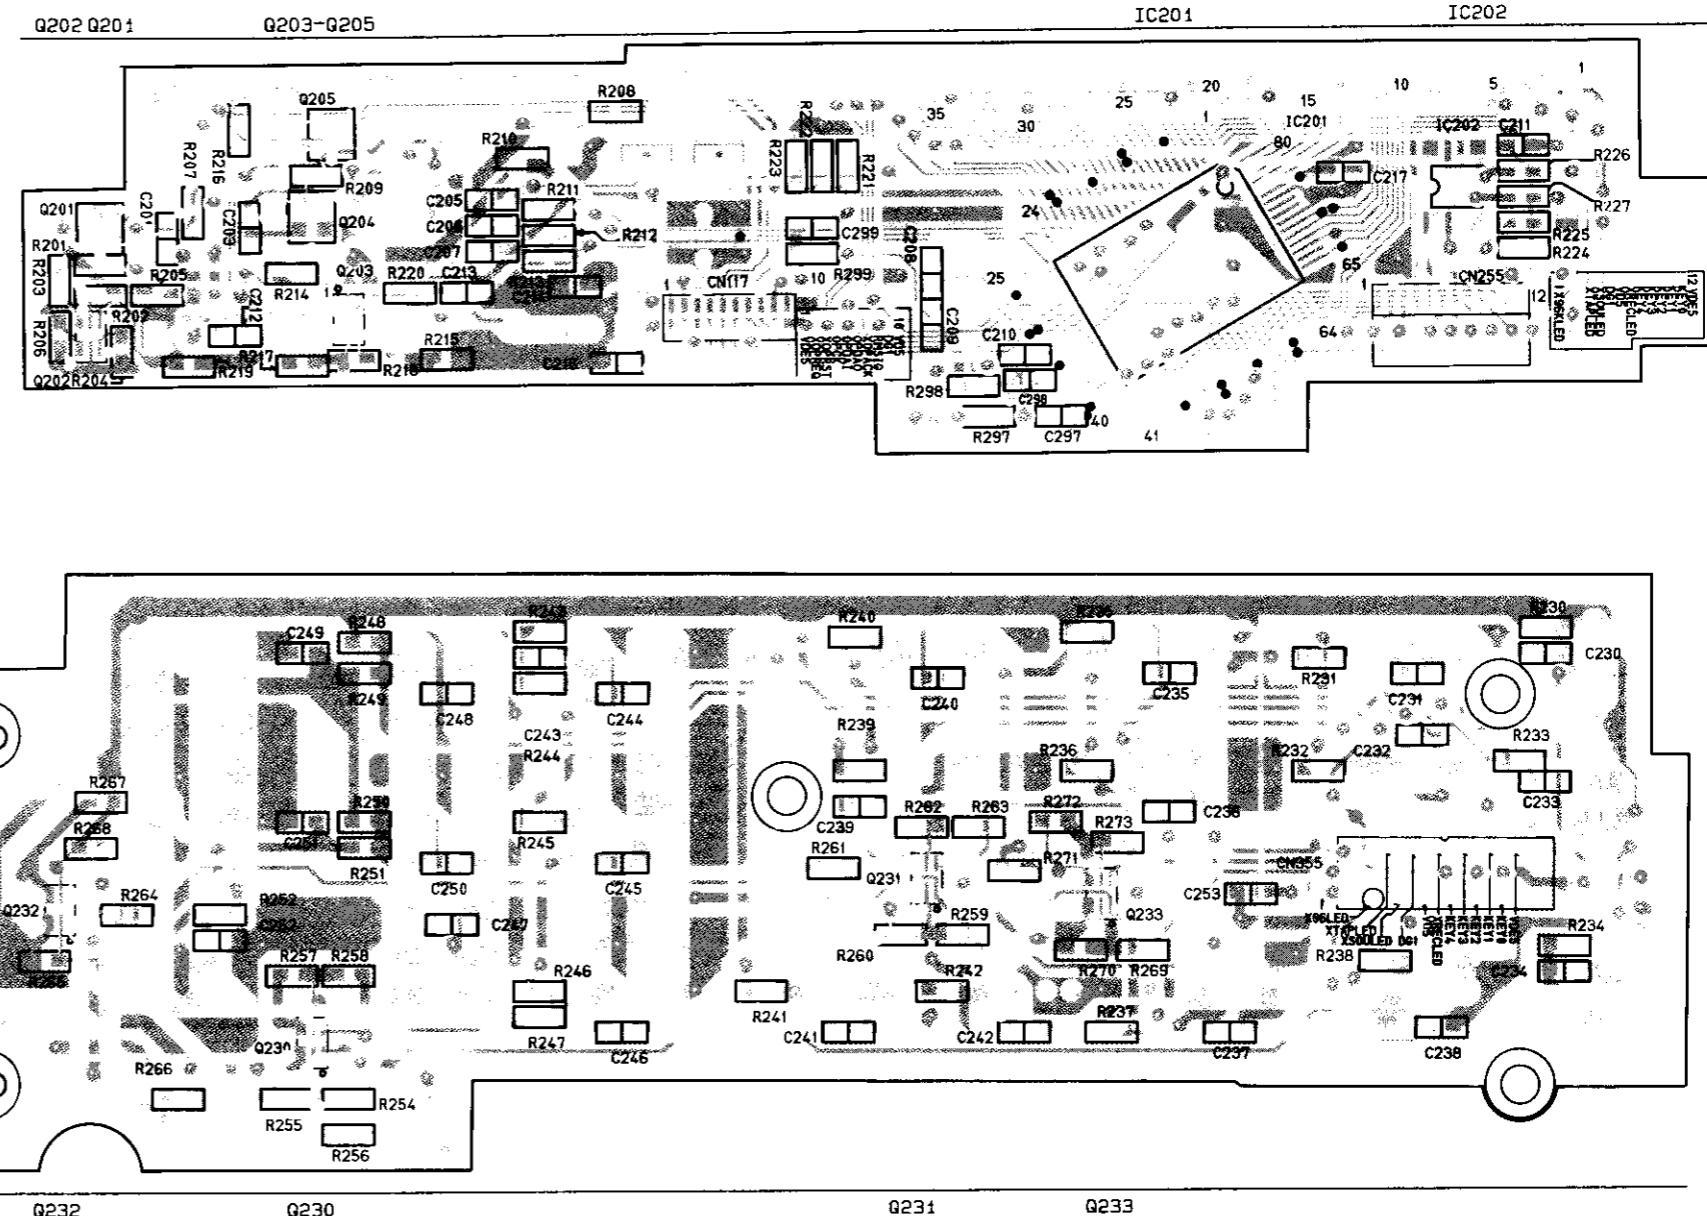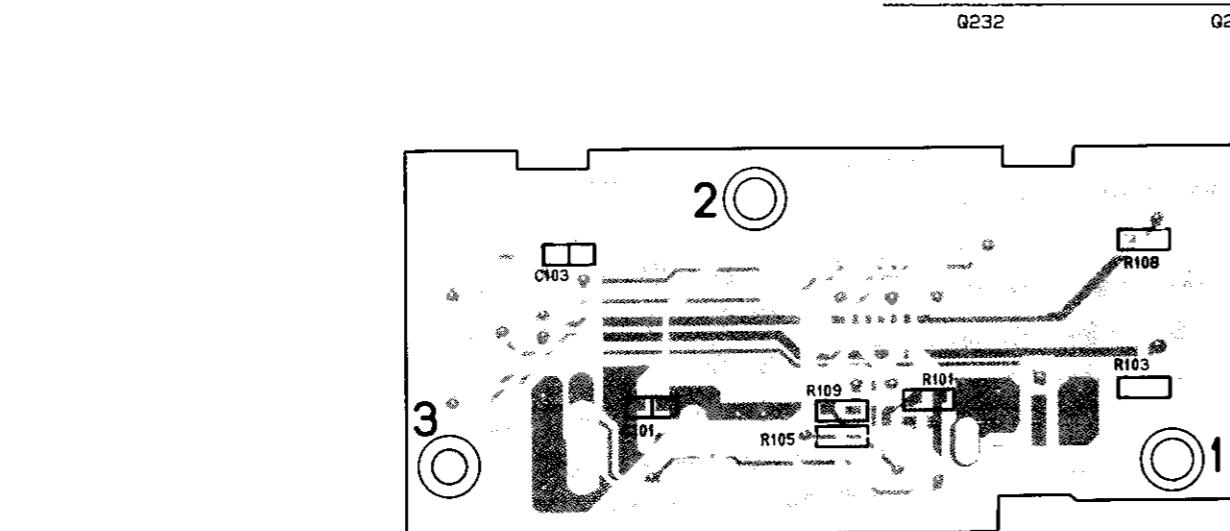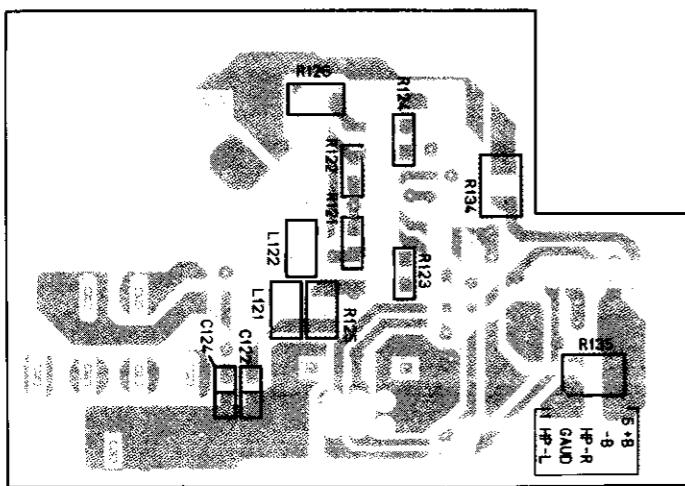


(4). LINE/MIC UNIT、DISPLAY UNIT、KEY UNIT、REM RECEIVER UNIT、HEADPHONE UNIT


- This diagram is viewed from the pink colored foil side.
- This is a multi-layer PCB.
- But information for both sides is shown.

The parts mounted on this PCB include all necessary parts for several destinations. For further information for respective destinations, be sure to check with the schematic diagram.


DISPLAY UNIT

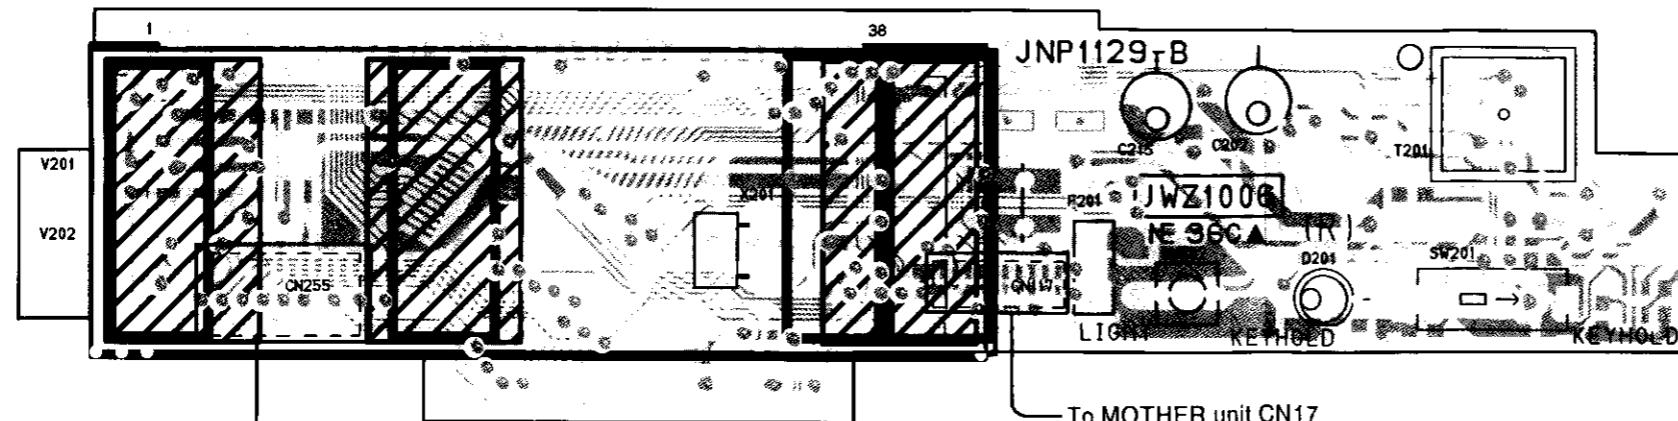

KEY UNIT

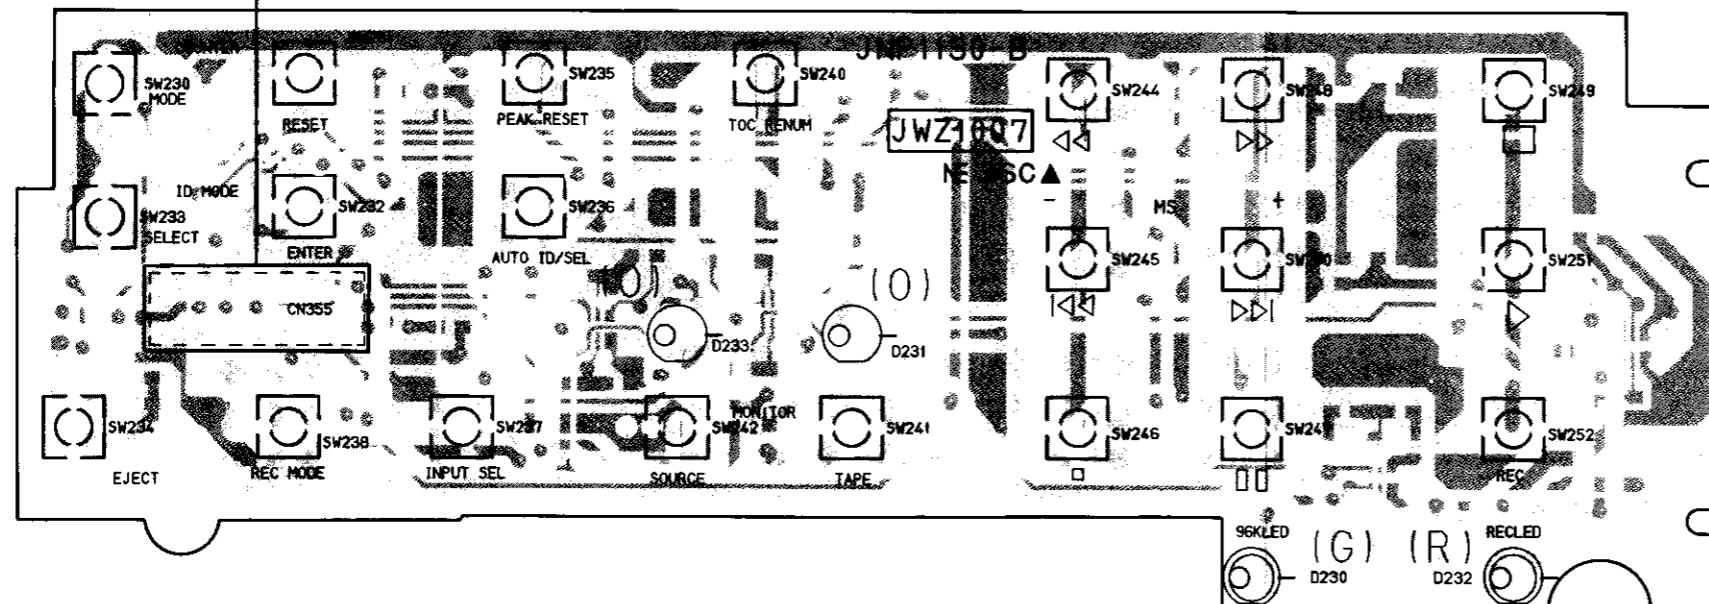


LINE/MIC UNIT

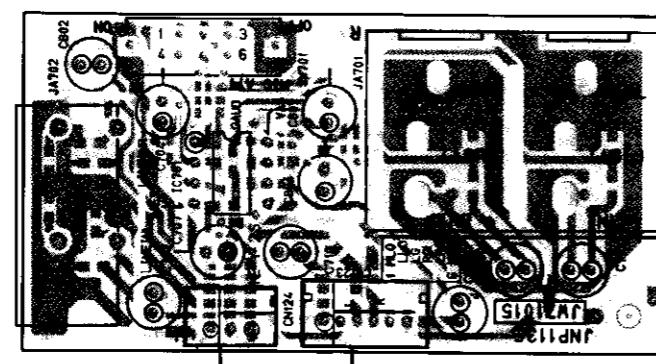

To MOTHER unit CN24


To MOTHER unit CN23

REM. RECEIVER UNIT

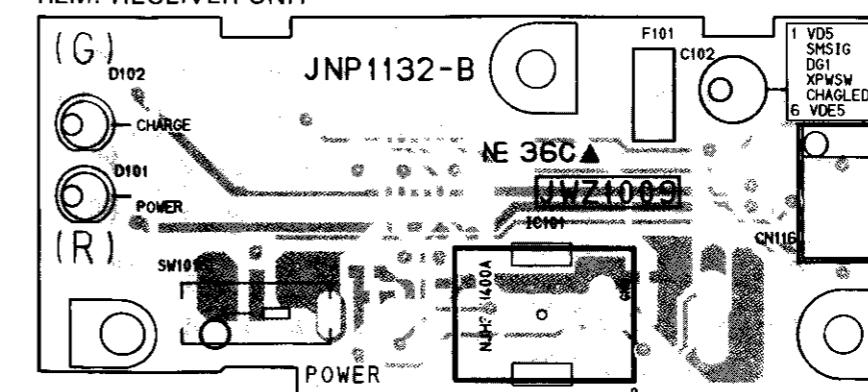

To MOTHER unit CN16

HEADPHONE UNIT

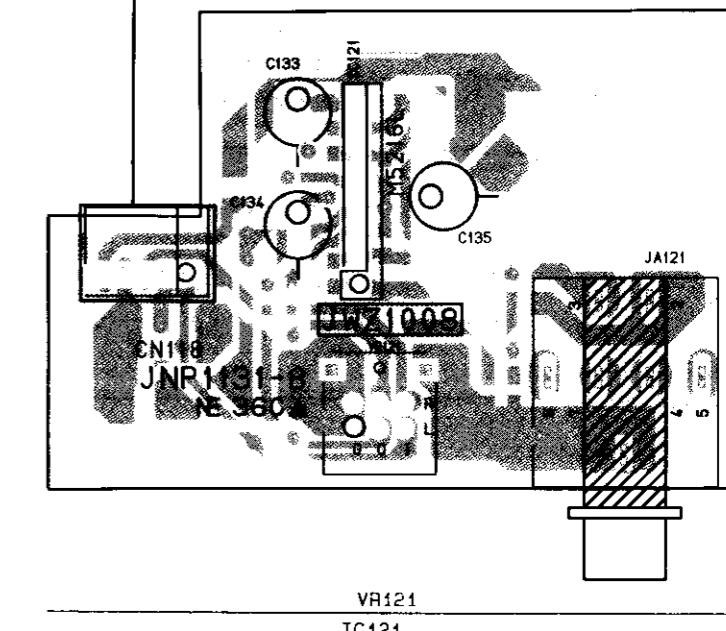

A

A

B

B

C


C

D

D


A

LINE/MIC unit (JWZ1015)

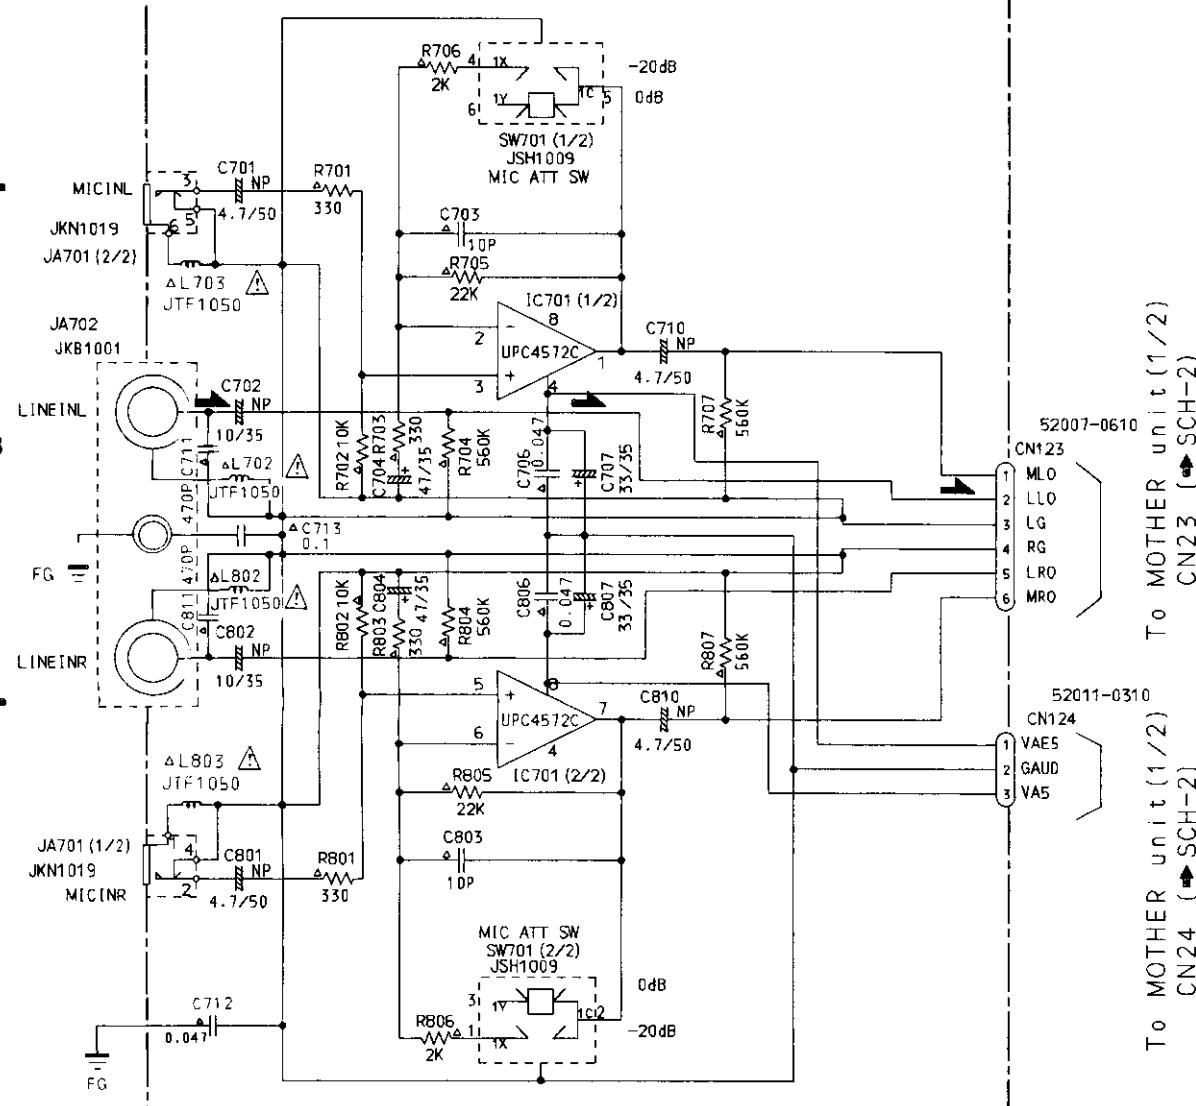

B

DISPLAY unit (JWZ1006)

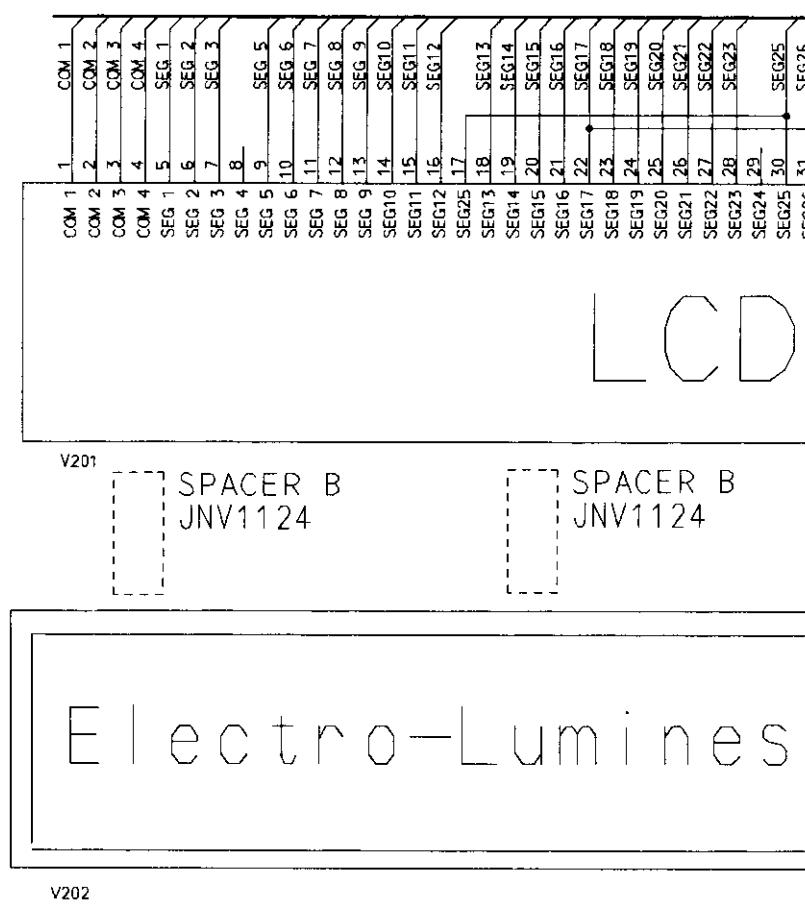


C

SIGNAL ROUTE

→ RECORDING SIGNAL ROUTE

To MOTHER unit (1/2)
CN18 (→ SCH-2)


HEADPHONE unit (JWZ1008)

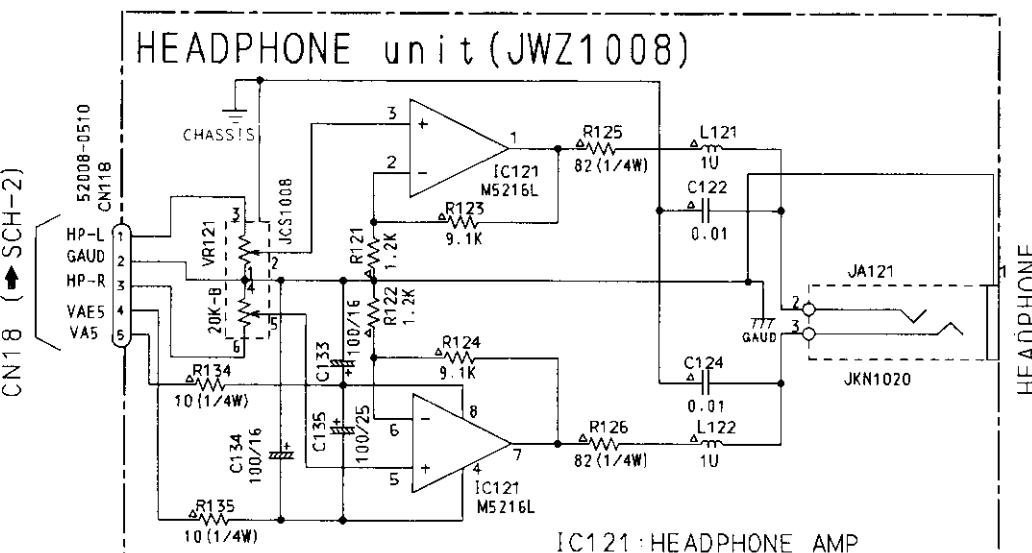

CNT MODE	0V
CNT RESET	1.0V
ID ENTER	2.0V
ID SEL	2.9V
REC MODE	3.8V

PEAK RST	0
AUTO ID	1
INP SEL	2
REC MODE	2

C3

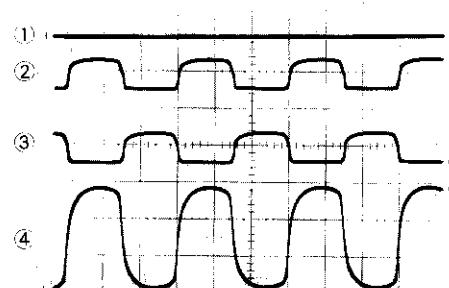


Mode: EL ON



- ① INV IN1 (T201-Pin5)
Signal 0V (EL OFF-5V)
- ② INV IN2 (T201-Pin4)
10V/div., 0.5mS/div.
- ③ INV OUT1 (T201-Pin1)
10V/div., 0.5mS/div.
- ④ INV OUT2 (T201-Pin10)
50V/div., 0.5mS/div.

WIRELESS
REMOTE
CONTROL

REM. RECEIVER unit (JWZ100)

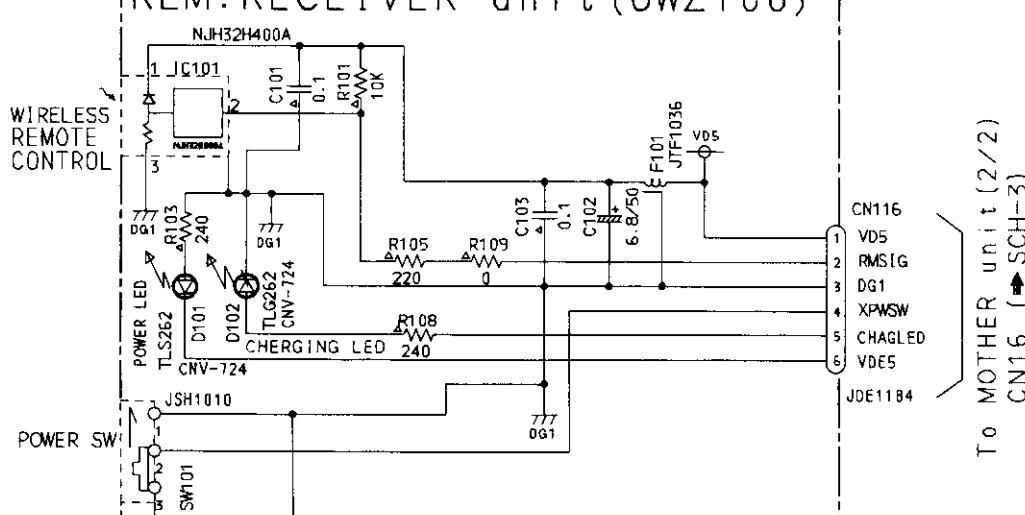To MOTHER unit (2/2)
CN16 (→ SCH-3)**SCH-5**LINE/MIC UNIT, DISPLAY UNIT,
KEY UNIT, REM RECEIVER UNIT,
HEADPHONE UNIT


SCH-5

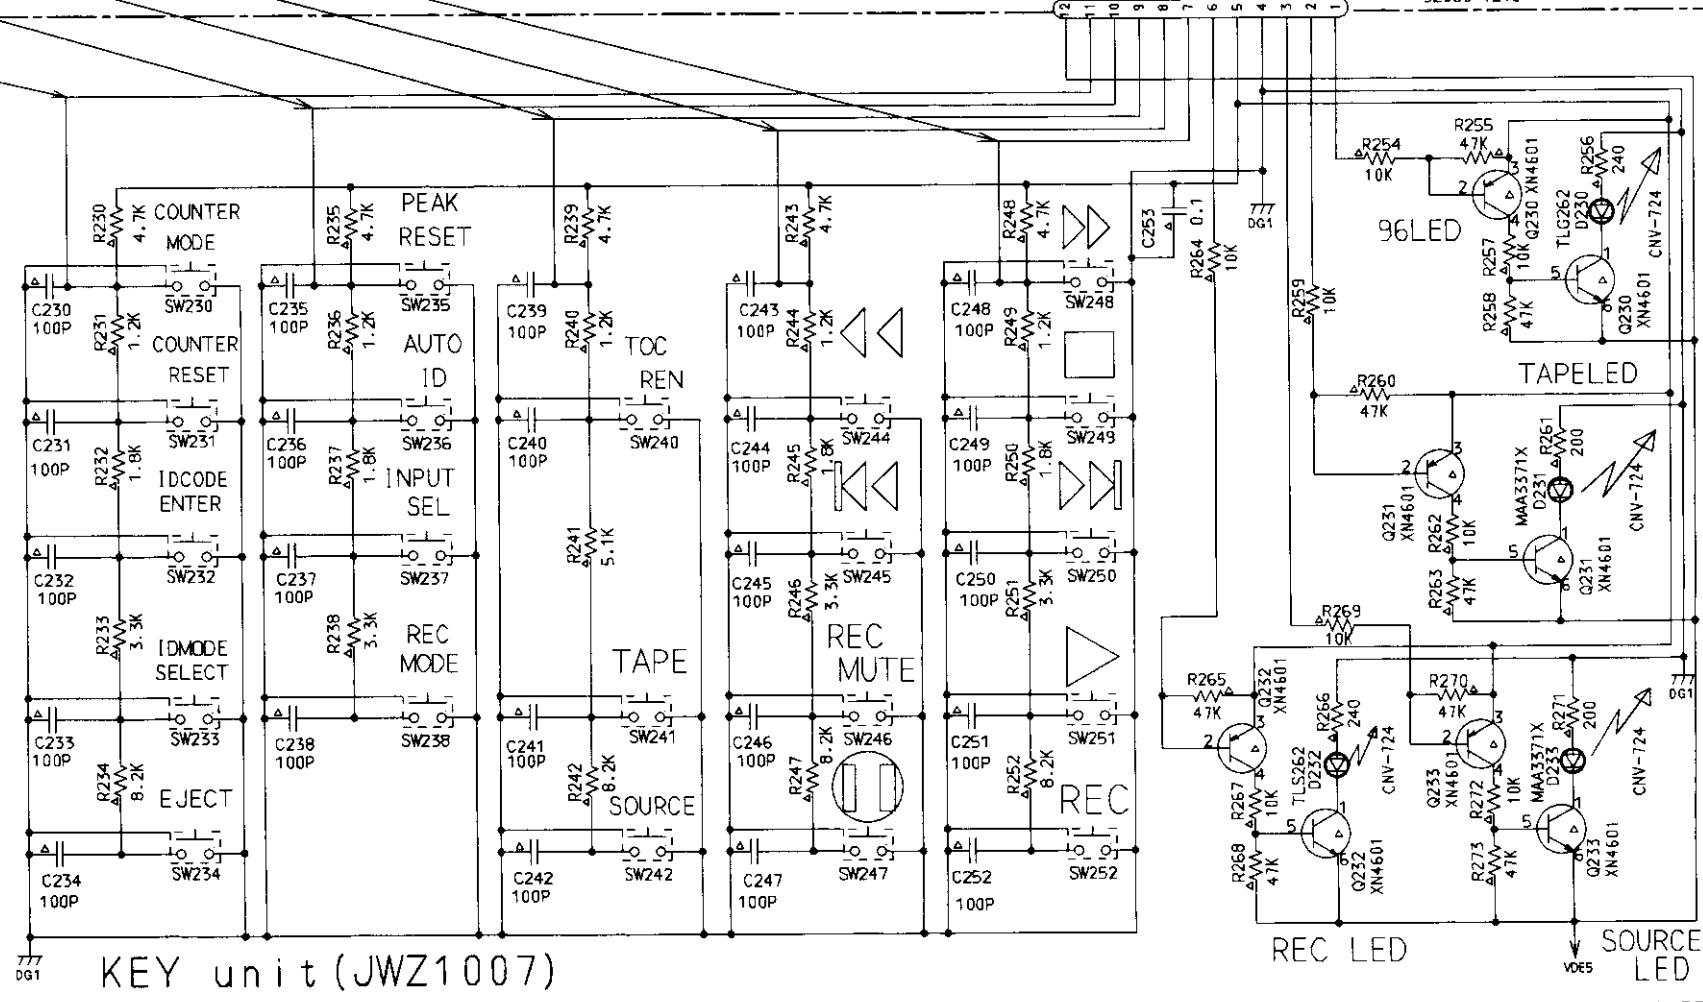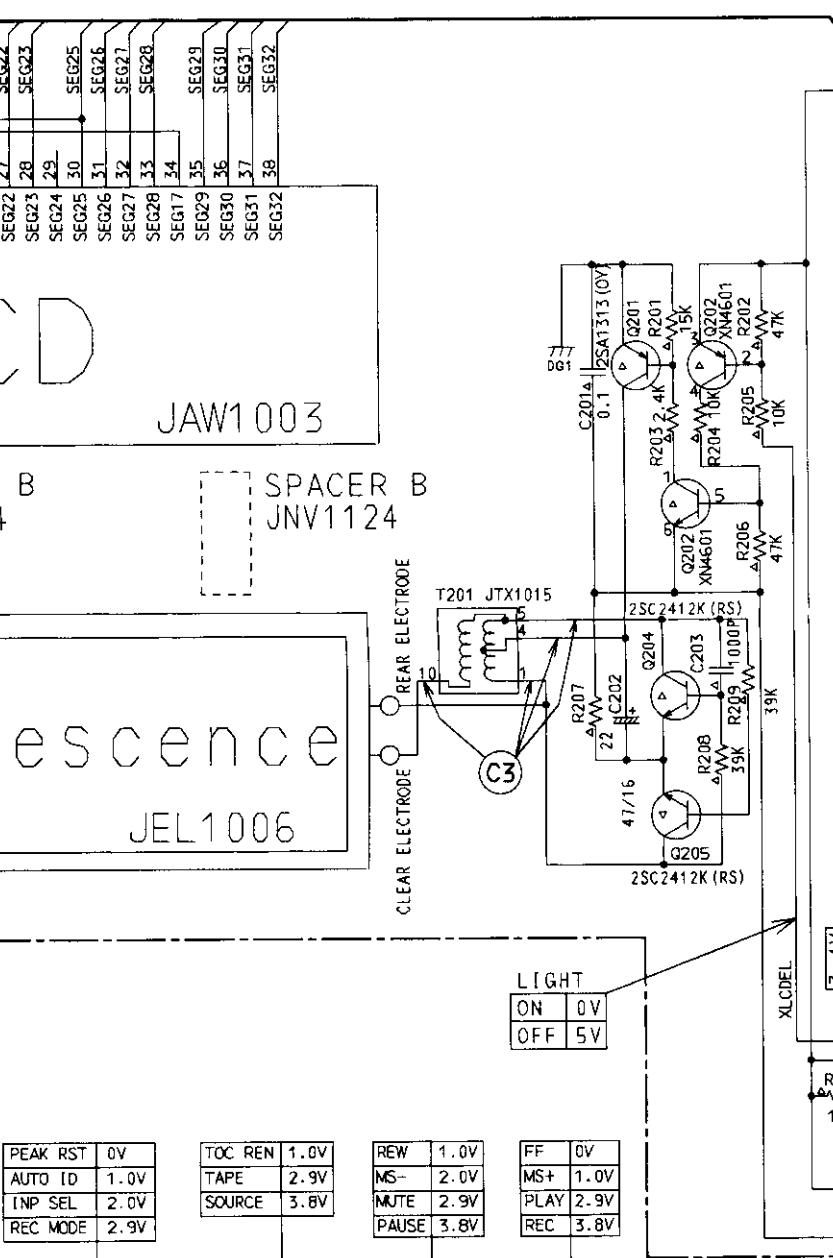
LINE/MIC UNIT, DISPLAY UNIT,
KEY UNIT, REM RECEIVER UNIT,
HEADPHONE UNIT

SCH-5


2.3 BLOCK DIAGRAM

1. SIGNAL PROCESSING SECTION

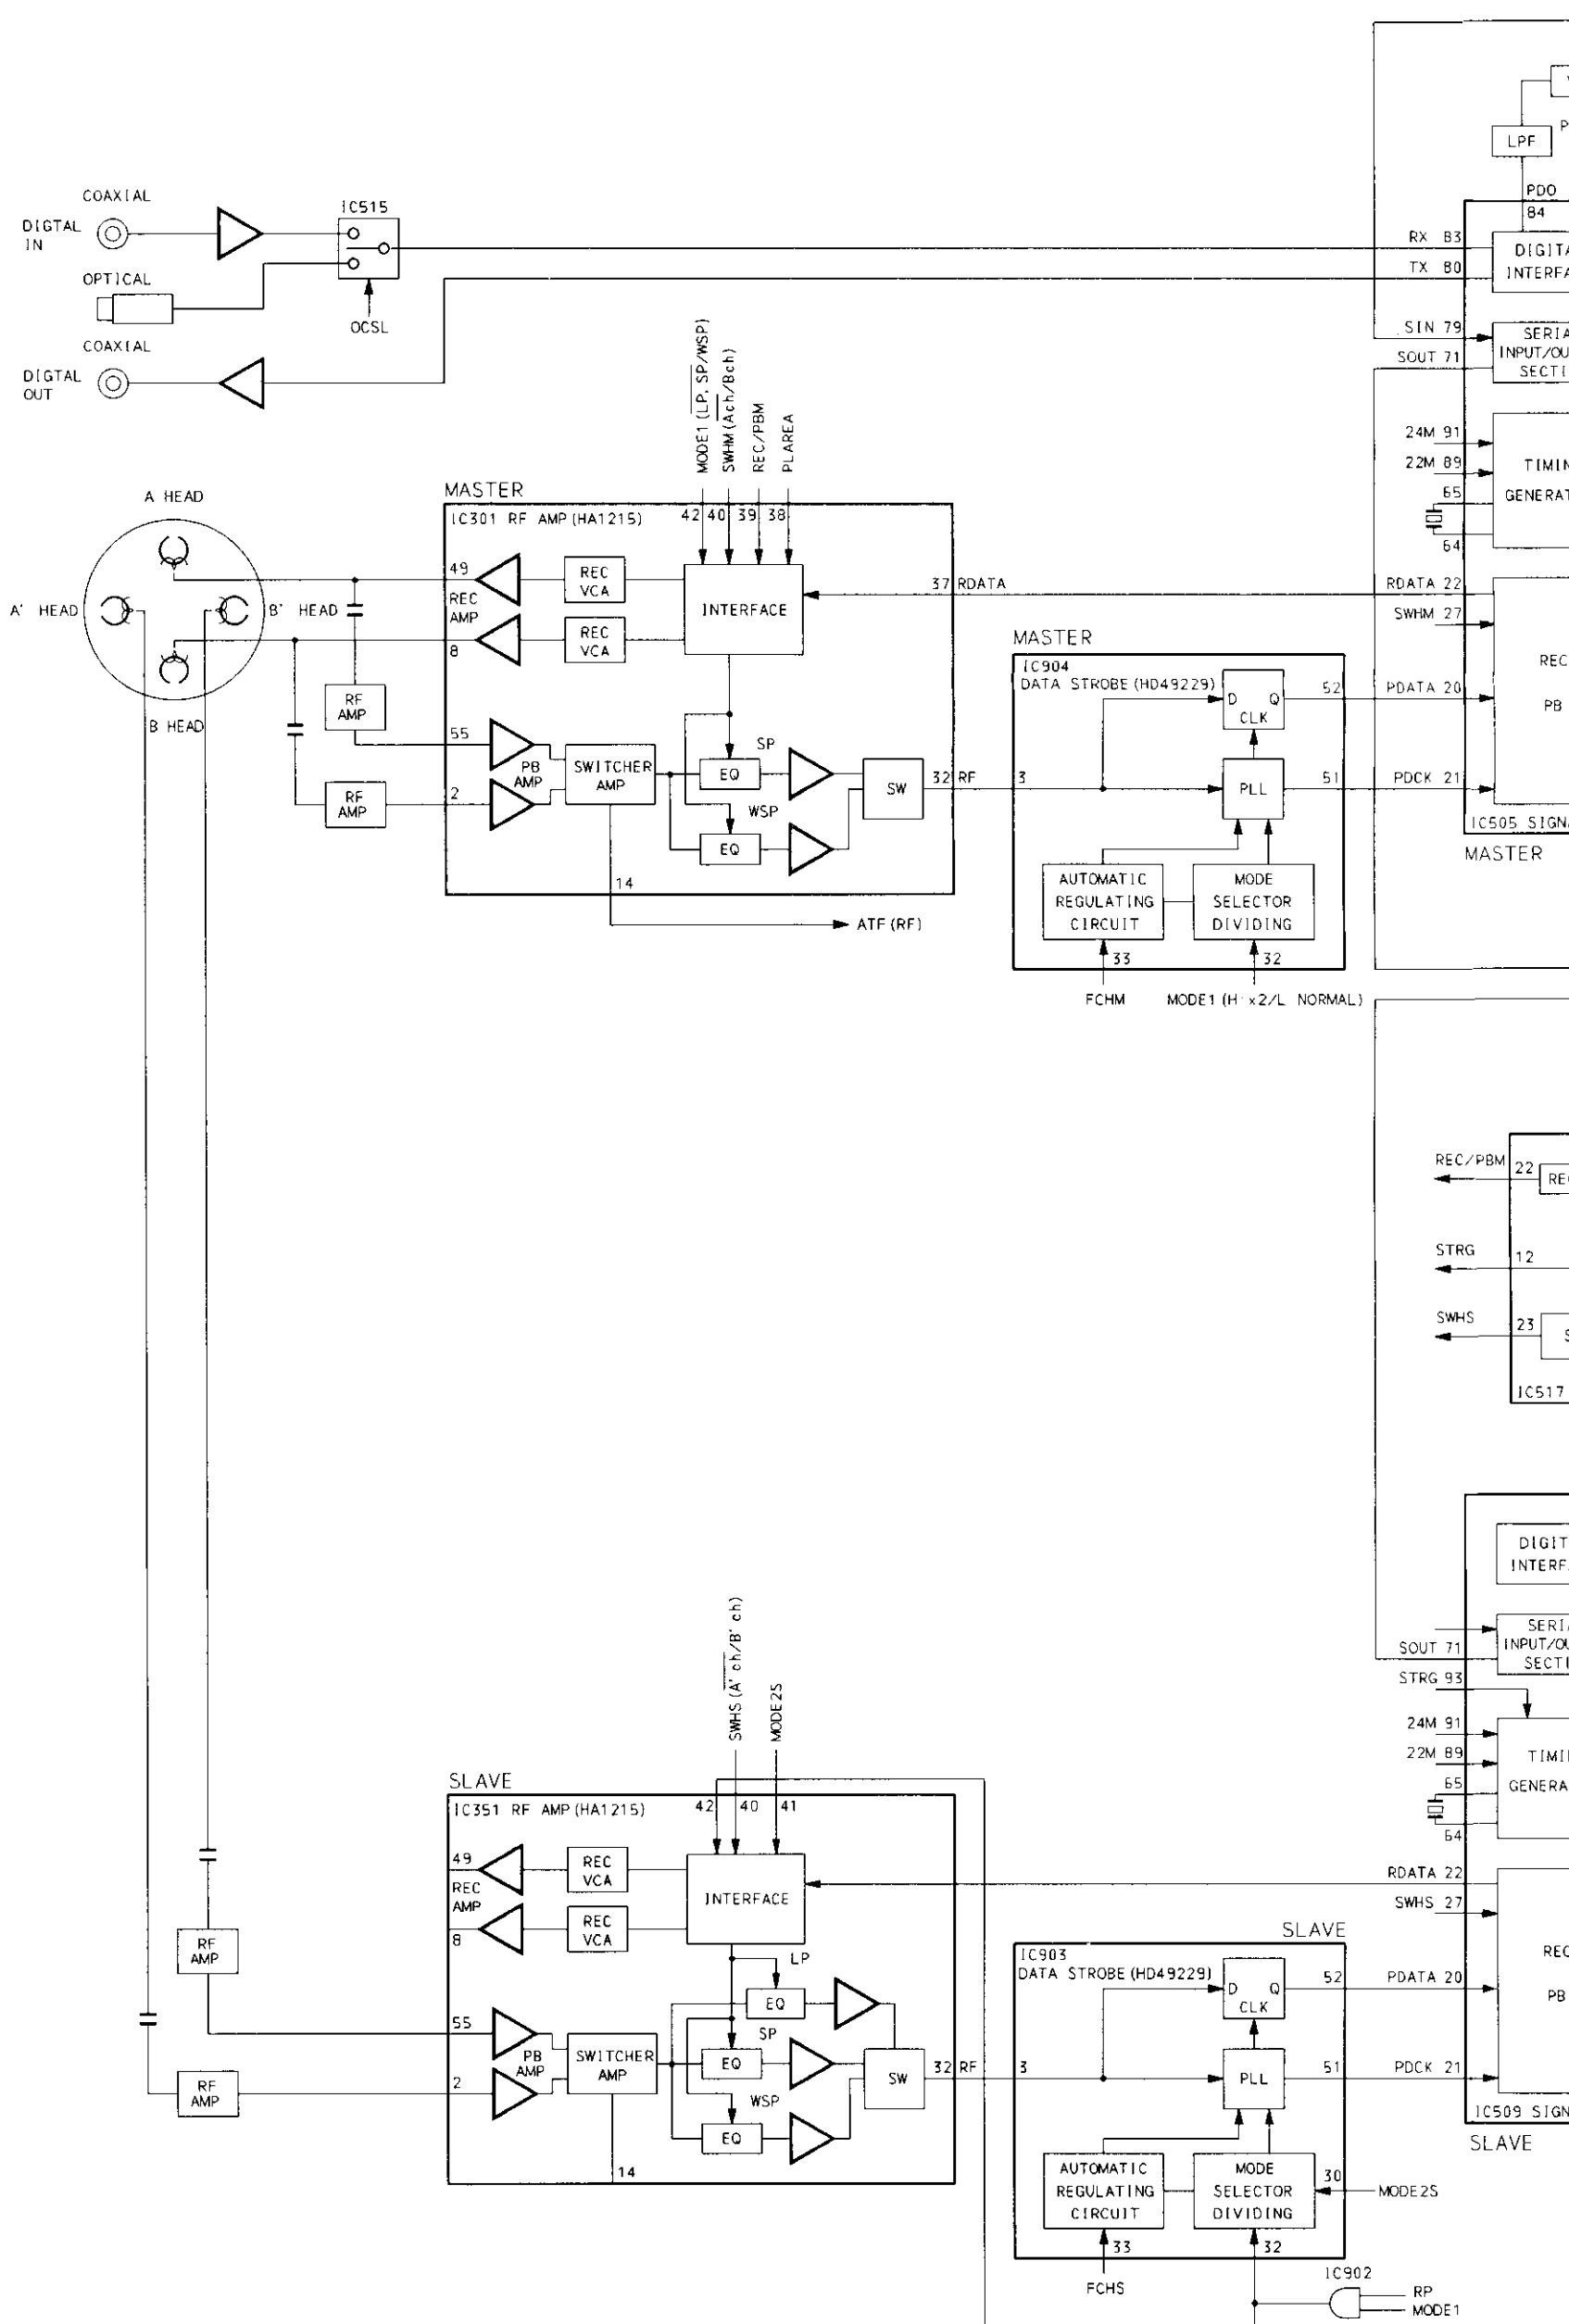

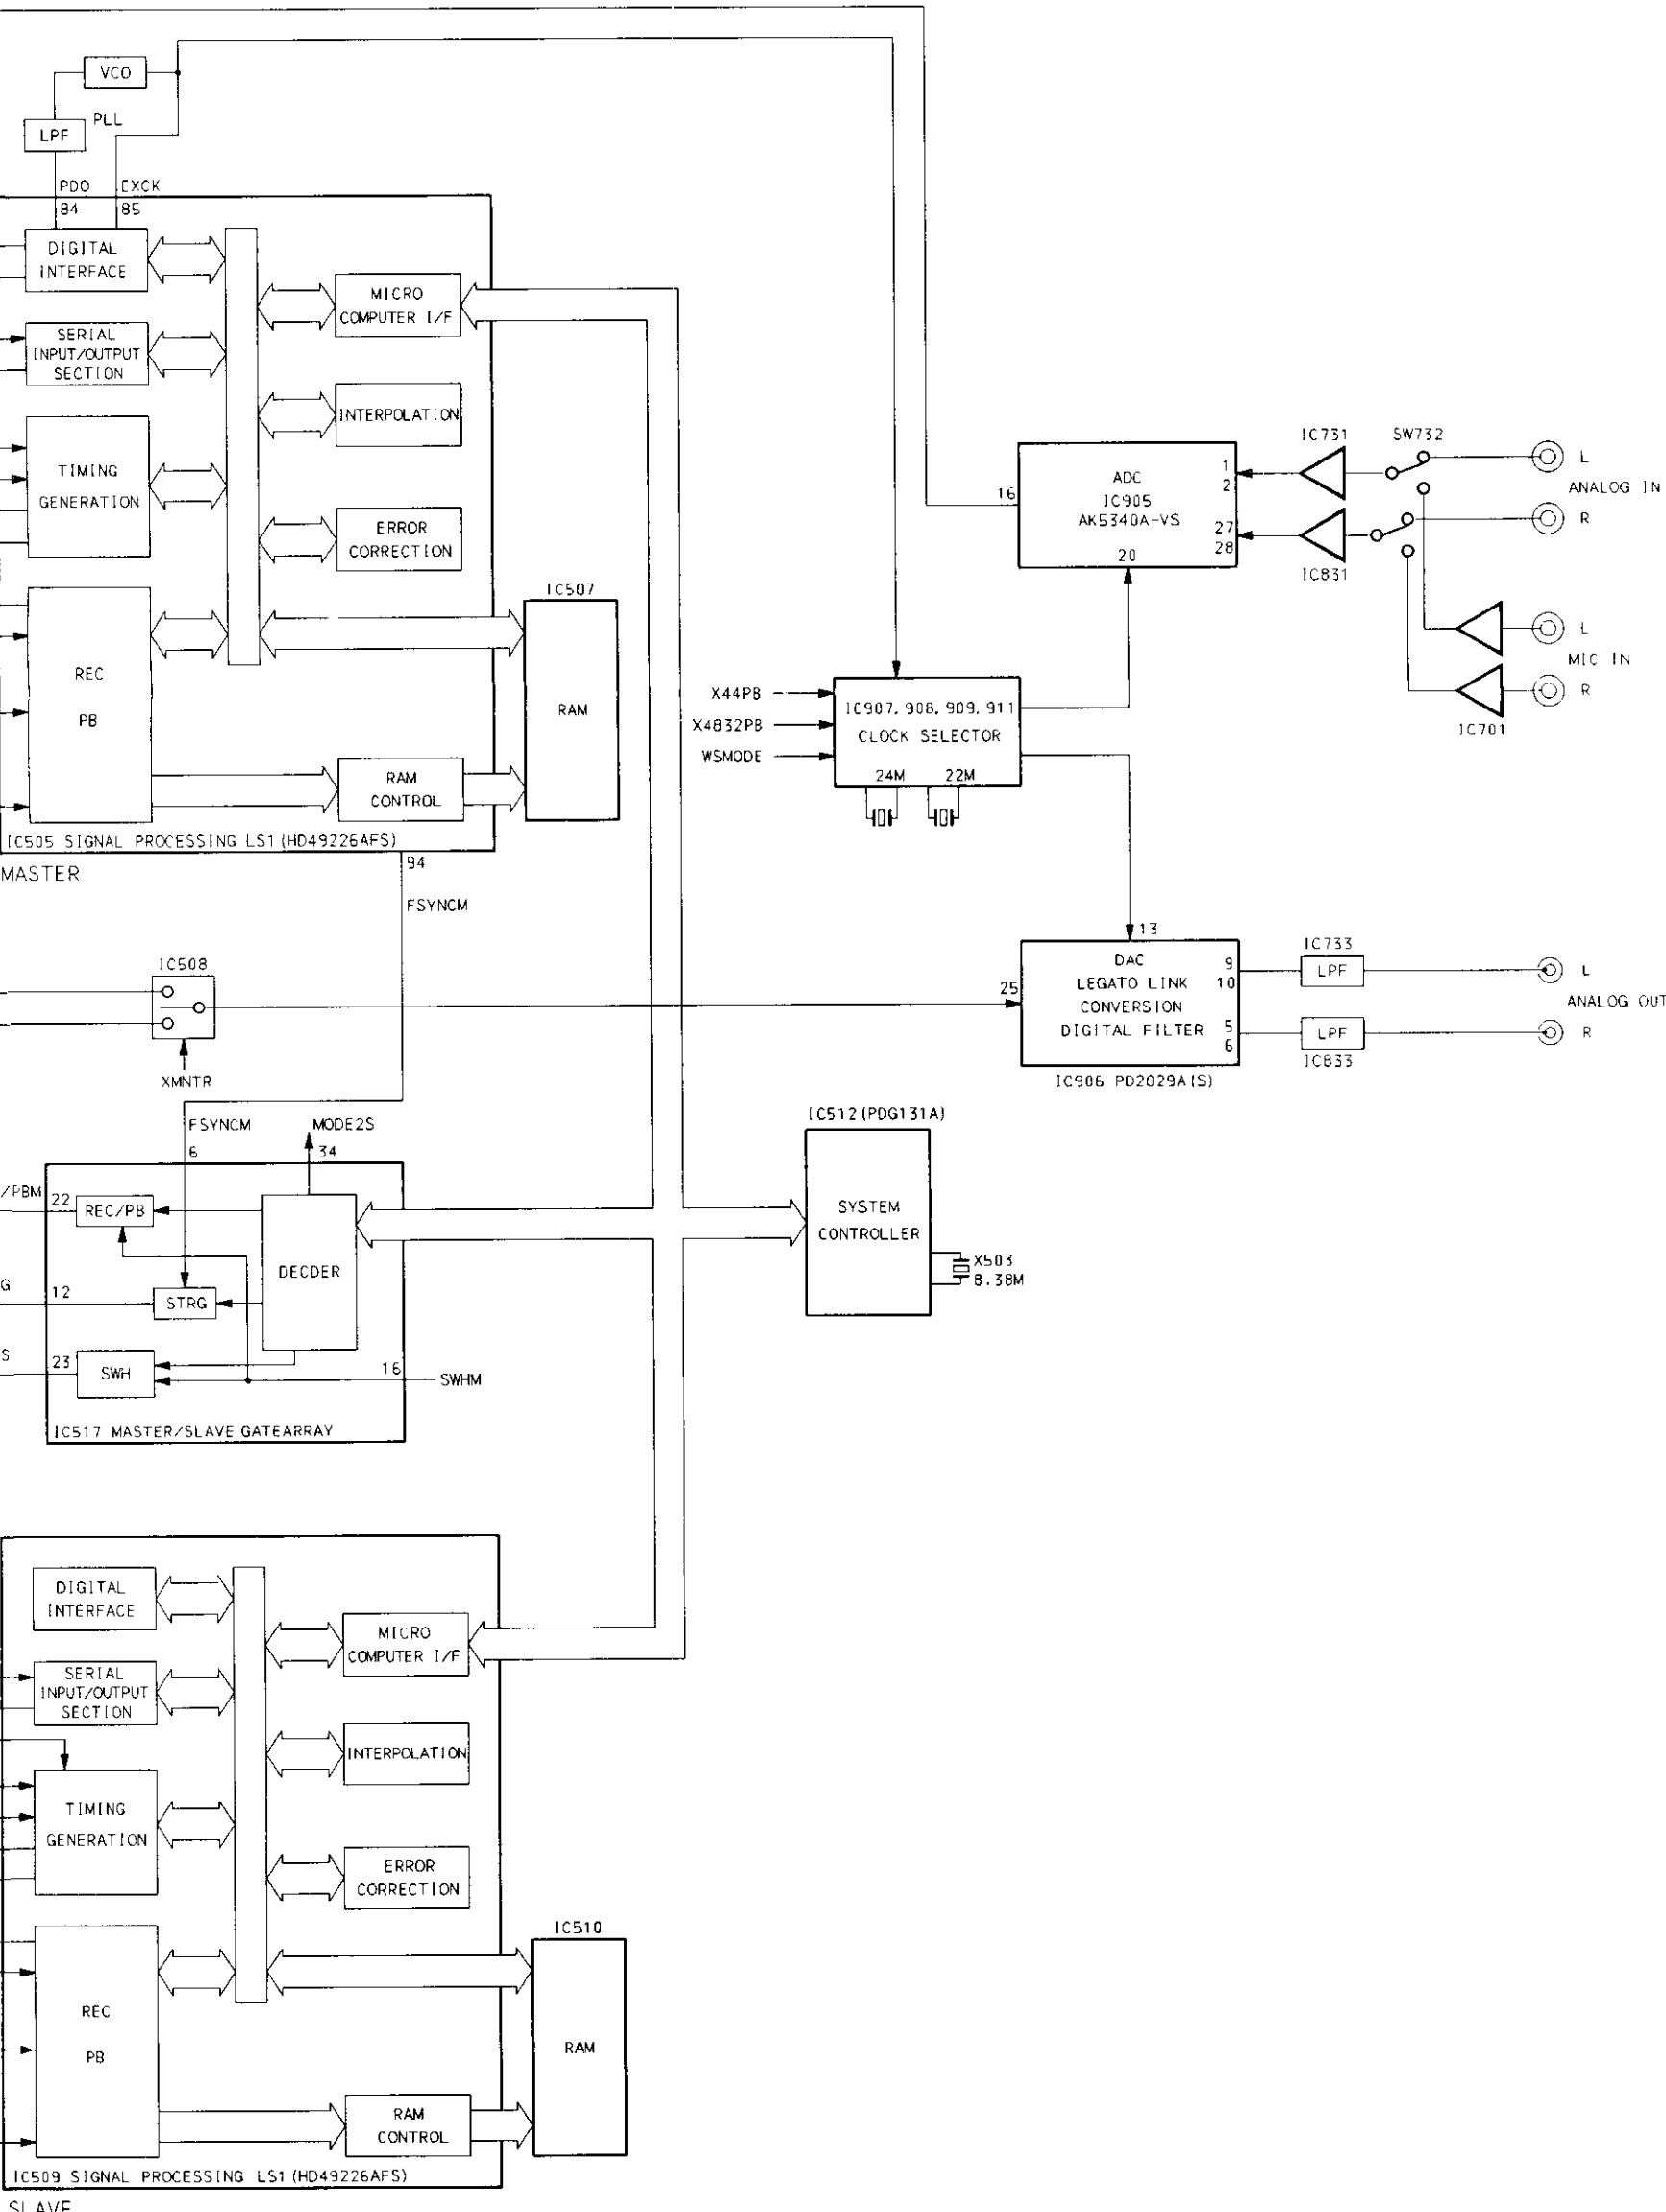

2. SERVO SECTION

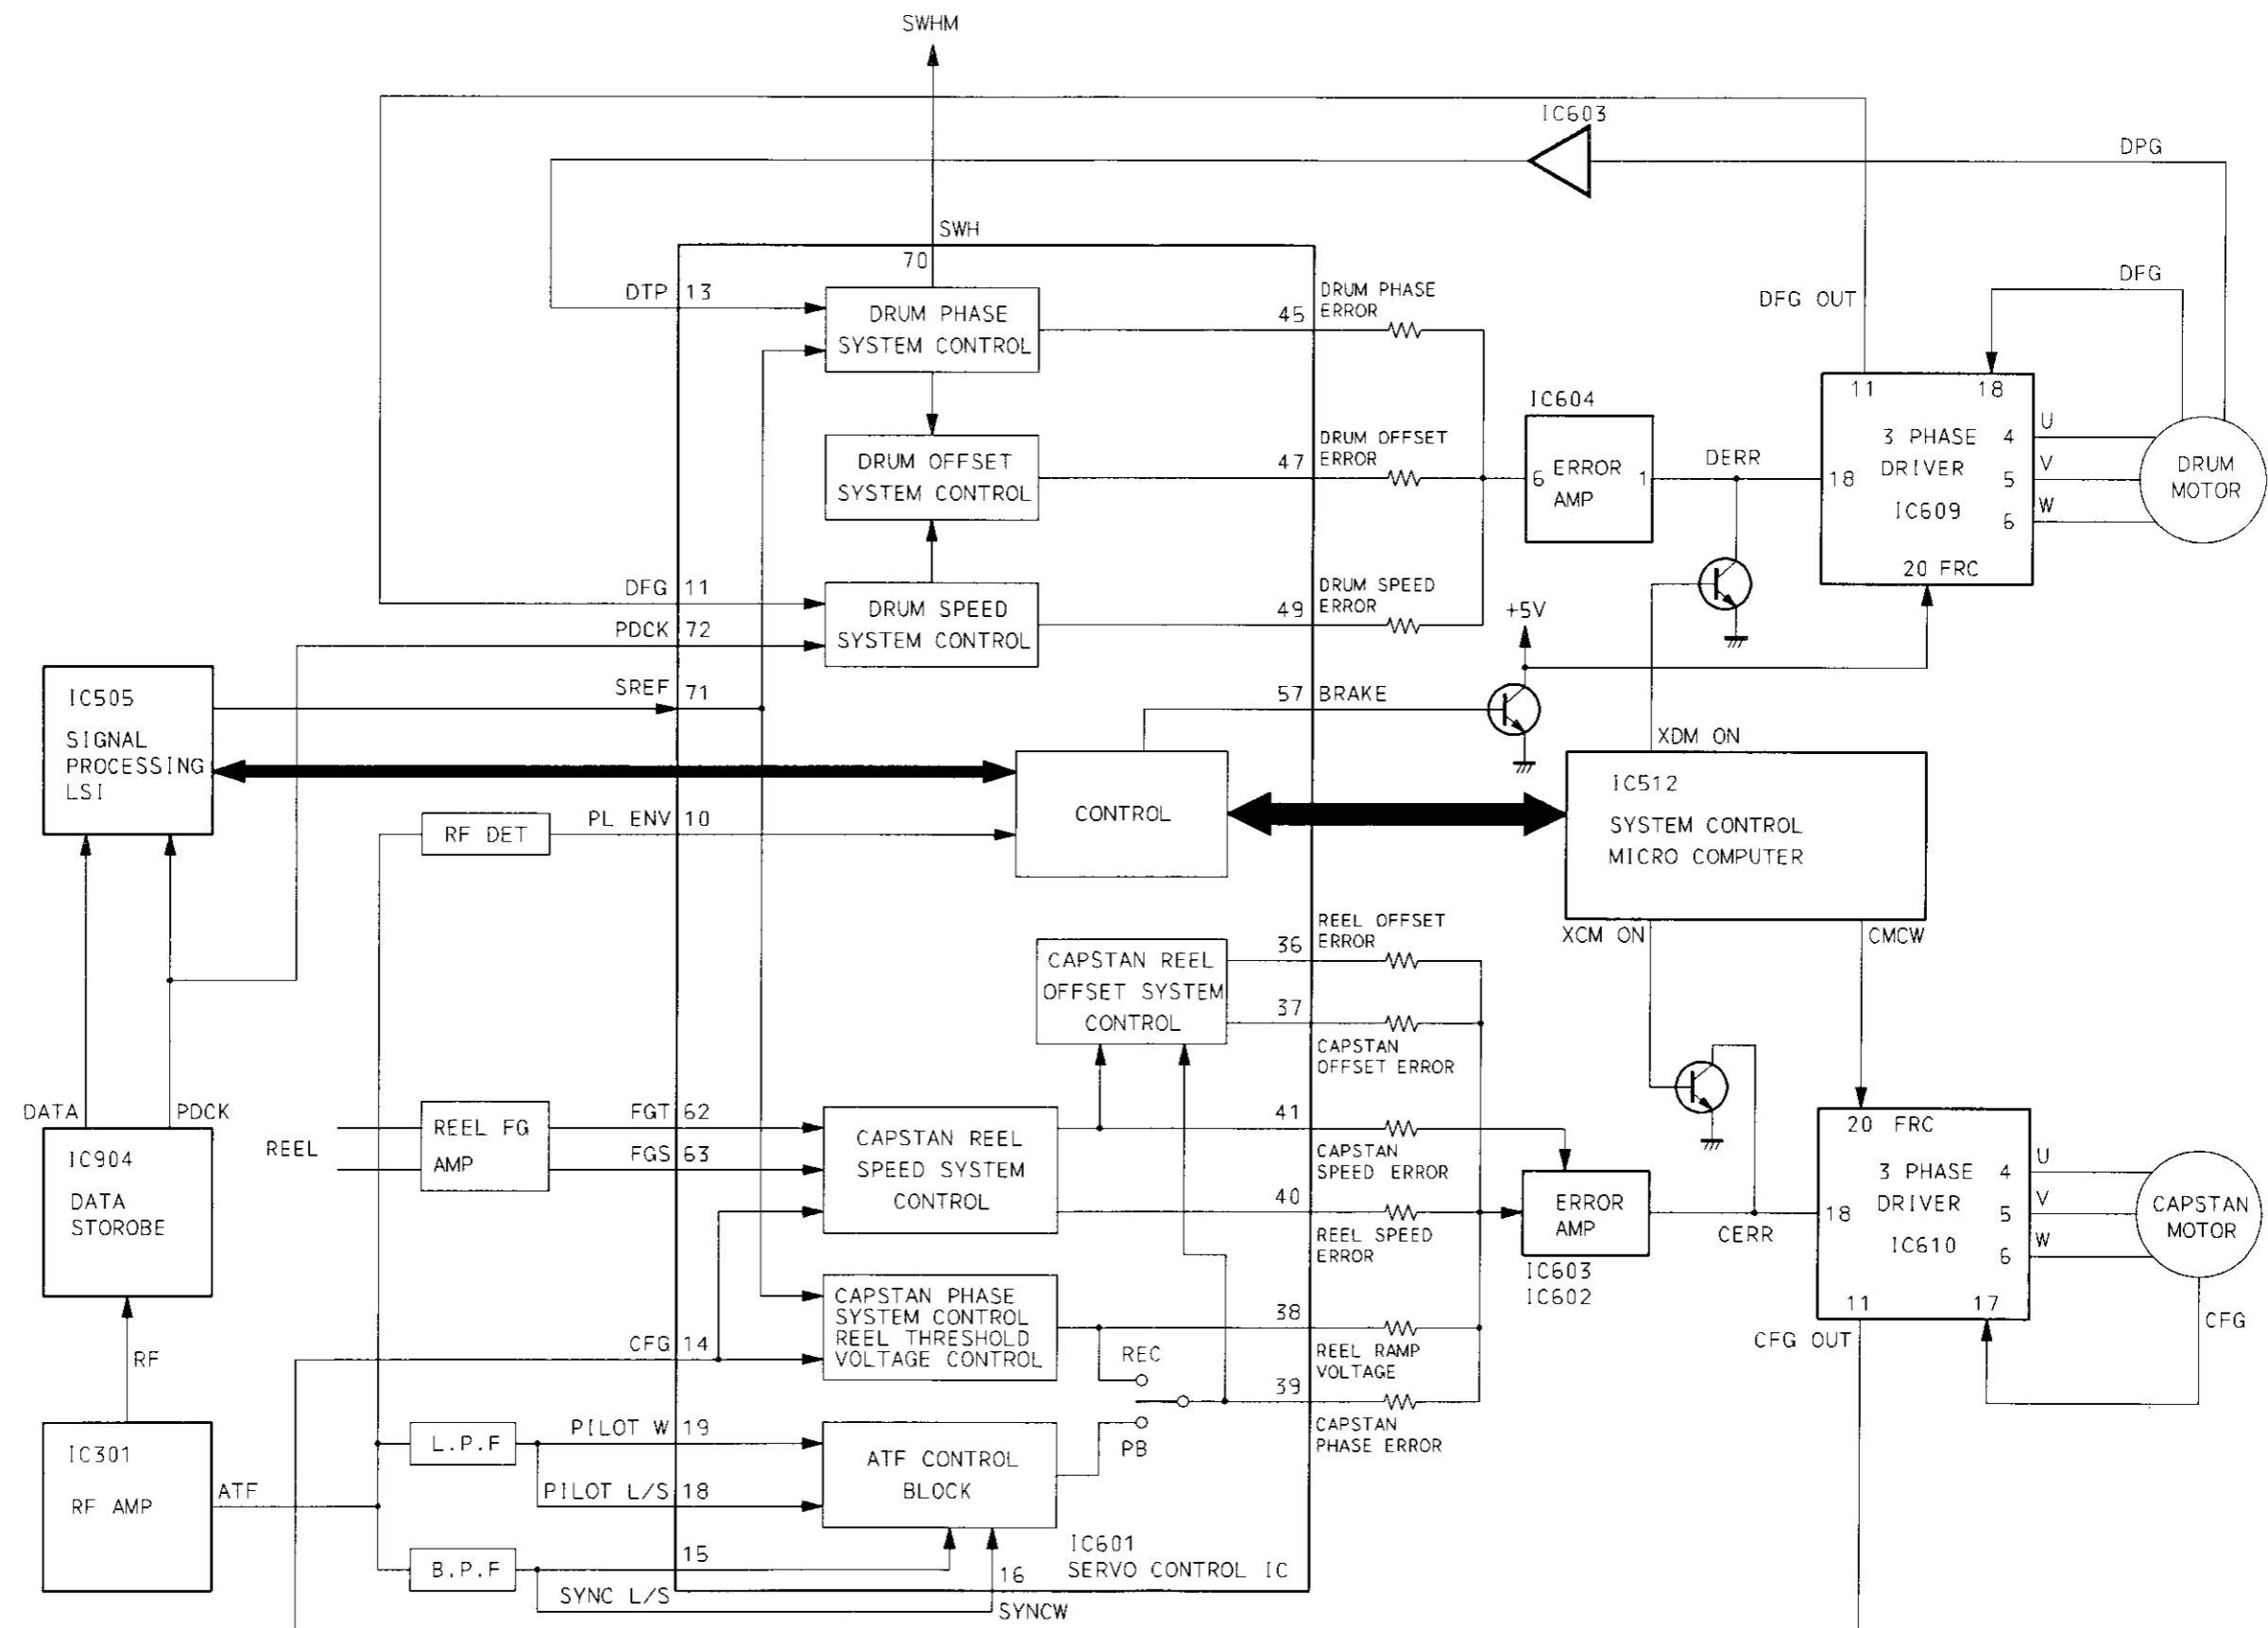

3. SYSTEM CONTROL SECTION

