


 **PIONEER®**

Service Manual

**CIRCUIT DESCRIPTIONS
REPAIR & ADJUSTMENTS**

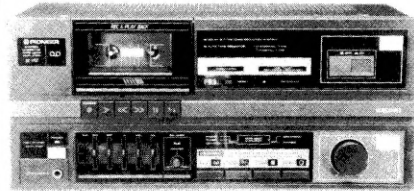

**ORDER NO.
ARP-814-0**

STEREO CASSETTE TAPE DECK AMPLIFIER

DC-111Z DC-110Z

(Silver version of DC-111Z)

- DC-111Z is the same as the DC-110Z except for the exterior design (color).
- Models DC-111Z and DC-110Z come in seven versions distinguished as follows:

Type	Applicable model		Power requirement	Destination
	DC-111Z	DC-110Z		
KU	○	—	AC 120V only	U.S.A
HE	○	○	AC 220V (240V)* (Switchable)	European continent
HB	○	—	AC 240V (220V)* (Switchable)	United Kingdom
S	○	○	AC 110V/120V/240V (Switchable)	General market
YP	○	—	AC 240V only	Australia
KC	○	—	AC 120V only	Canada
HEZ	○	○	AC 220V (240V)* (Switchable)	West Germany

* Change the primary wiring of the power transformer.

- This service manual is applicable to the KU, HE, HB, S and YP types.
- As to the HE, HB, S and YP types please refer to the page 46.
- As to the KC type, please refer to the additional service manual (ARP-813).
- As to the HEZ type, please refer to the additional service manual (ARP-815).
- Ce manuel d'instruction se réfère au mode de réglage, en français. (P36-P40)
- Este manual de servicio trata del método ajuste escrito español. (P41-P45)

PIONEER ELECTRONIC CORPORATION 4-1, Meguro 1-Chome, Meguro-ku, Tokyo 153, Japan
PIONEER ELECTRONICS (USA) INC. P.O. Box 1760, Long Beach, California 90801 U.S.A.
TEL: (800) 421-1404, (800) 237-0424
PIONEER ELECTRONIC (EUROPE) N.V. Keetberglaan 1, 2740 Beveren, Belgium TEL: 03/775-28-08
PIONEER ELECTRONICS AUSTRALIA PTY. LTD. 178-184 Boundary Road, Braeside, Victoria 3195, Australia
TEL: (03) 580-9911

SA © APR. 1985 Printed in Japan

CONTENTS

1. SPECIFICATIONS	2	9. SCHEMATIC DIAGRAM	25
2. FRONT PANEL FACILITIES	3	10. BLOCK DIAGRAM	29
3. DISASSEMBLY	4	11. CIRCUIT DESCRIPTIONS	30
4. PARTS LOCATION	9	12. ADJUSTMENTS	31
5. PACKING	11	RÉGLAGE	36
6. EXPLODED VIEW	12	AJUSTE	41
7. ELECTRICAL PARTS LIST	18	13. FOR HE, HB, S AND YP TYPES	46
8. P.C. BOARDS CONNECTION DIAGRAM	21	14. SAFETY INFORMATION	48

1. SPECIFICATIONS

AMPLIFIER SECTION

Continuous Average Power Output is 25 Watts* per channel, min., at 8 ohms from 40 Hertz to 20,000 Hertz, with no more than 0.3% total harmonic distortion.

**Measured pursuant to the Federal Trade Commission's Trade Regulation rules on Power Output Claims for Amplifiers.*

Continuous Power Output	
40 to 20,000Hz	25 W + 25 W (T.H.D. 0.3% 8 ohms)
1 kHz (DIN)	32 W + 32 W (T.H.D. 1% 8 ohms)
1 kHz (DIN music power)	45 W + 45 W (T.H.D. 1% 8 ohms)
Hum and Noise (IHF, short-circuited, A network)	
PHONO	72 dB
Hum and Noise (DIN continuous Power/50 mV)	
PHONO	68 dB/60 dB
Total Harmonic Distortion (40 Hz to 20,000 Hz, 8 ohms), from CD/VIDEO	
12.5 Watts per channel power output	No more than 0.2%

Tape Deck Section

Systems	4 track, 2-channel stereo
Heads	"Hard Permalloy" recording/playback head x 1 "Ferrite" erasing head x 1
Motor	DC servo motor x 1
Wow and Flutter	No more than 0.08% (WRMS) No more than ±0.20% (DIN)
Fast Winding Time	Approximately 115 seconds (C-60 tape)
Frequency Response	
-20 dB recording:	
Normal tape	35 to 13,000 Hz
Metal tape	35 to 15,000Hz
Signal-to-Noise Ratio	
Dolby NR OFF	More than 55 dB
Noise Reduction Effect	
Dolby NR B type ON	More than 10 dB (at 5 kHz)

Furnished Parts

Operating Instructions	1
------------------------------	---

Miscellaneous

Power requirements

KU and KC models	AC 120 V, 60 Hz
HE model	AC 220 V, 50/60Hz
HB and YP models	AC 240 V, 50/60 Hz
S and S/G models	AC 110 V/120 V/220 V/240 V, 50/60 Hz (switchable)

Power Consumption

KU model	199 W
KC model	199 W
HE, HB, and YP models	270 W
S and S/G models	199 W
Dimensions	420(W) x 188(H) x 224 (D) mm 16-9/16(W) x 7-6/16(H) x 8-13/16(D) in
Weight (without package)	5.5 kg (12 lb 2 oz)

QUESTIONNAIRE

MODEL _____

One Model per questionnaire

Dear Servicer,

Thank you for your cooperation in the post-sale service of Pioneer products.

This questionnaire is used as a tool to improve the serviceability of our products and service manuals. Please evaluate this model and service manual by answering the following questions. Your ideas may be realized in our future products. Your answers will be appreciated. Thank you.

PIONEER ELECTRONIC CORP.

T. Nakagawa, Manager, Service Section, International Division

1. SERVICING EVALUATION	Circle applicable number:	Good	Fair	Poor		
a. Disassembly/Re-assembly:		1	2	3	*4	*5
b. Circuit Checks:		1	2	3	*4	*5
c. Replacement of Parts:		1	2	3	*4	*5
d. Adjustment (s):		1	2	3	*4	*5

* If (4) or (5) was circled, please be specific.

e. Your advice, opinion or ideas related to servicing this product.

2. SERVICE MANUAL EVALUATION

a. Circuit & Mechanism Description

b. Circuit Diagram

3. OTHER

Please describe other areas of servicing which you may find difficult.

Completed by :

Date :


Company Name :

Address :

City/State/Zip :

Please send this form filled to the distributor in your country.

2. FRONT PANEL FACILITIES

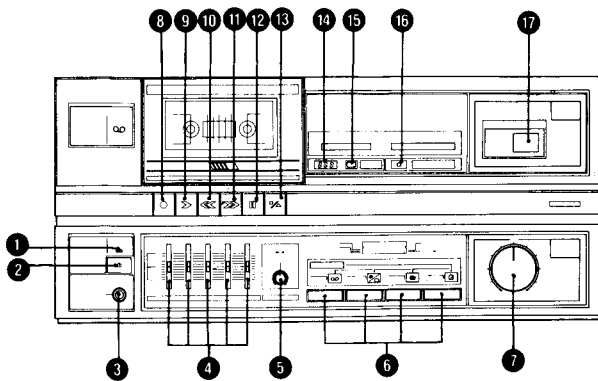

1 POWER indicator

2 POWER switch

3 HEADPHONES jack

4 GRAPHIC EQUALIZER controls

By operating these five controls, equalization effects can be added to program source or tape playback sounds.

5 BALANCE control

6 FUNCTION switches

TAPE (∞): Push when playing back tapes.

CD/VIDEO (∞): Push when listening to a component connected to the CD/VIDEO terminals.

TUNER (*): Push when listening to broadcasts on the tuner.

PHONO (∞): Push when playing records on the turntable.

7 VOLUME control

8 REC switch (∞)

9 PLAY switch (>)

10 REW switch (<<)

11 FF switch (>>)

12 PAUSE switch (∞)

13 STOP/ EJECT switch (∞)

14 TAPE COUNTER

15 RESET button

Push this button to reset the tape counter display to 000.

16 REC indicator

This lights during the recording mode.

17 *DOLBY NR switch

Push this switch to ON when recording with the built-in Dolby noise reduction system (B type), and when playing back tapes which have been recorded using the system.

~~~~~  
\*Noise Reduction manufactured under license from Dolby Laboratories Licensing Corporation.

"Dolby" and the double-D symbol are trademarks of the Dolby Laboratories Licensing Corporation.

~~~~~

3. DISASSEMBLY

Cassette Replacement Procedures

1. Remove 7 pieces of screw ①.
2. Remove Bonnet case.
3. Remove 2 pieces of screw ② and 1 piece of nut ②.
4. Push the claw at the bottom of chassis, remove the Front panel assembly, and pull out toward you. Remove the LED assembly (A) and (B) from the Front panel assembly.
5. Remove 6 pieces of screw ③, and enable the Power amplifier assembly to move upward. (See Fig. 3-2)
6. Remove connectors J7, J11 and J21 of the wiring coming out of the Tape transport unit. (Separate the Front panel assembly from the main body.)
7. Open the Cassette door. (See Fig. 3-3)
8. Remove 4 pieces of screw ④.
9. Remove Counter belt from Tape counter, and hook onto the Tape transport unit.
10. Remove the Tape transport unit from the Front panel assembly.

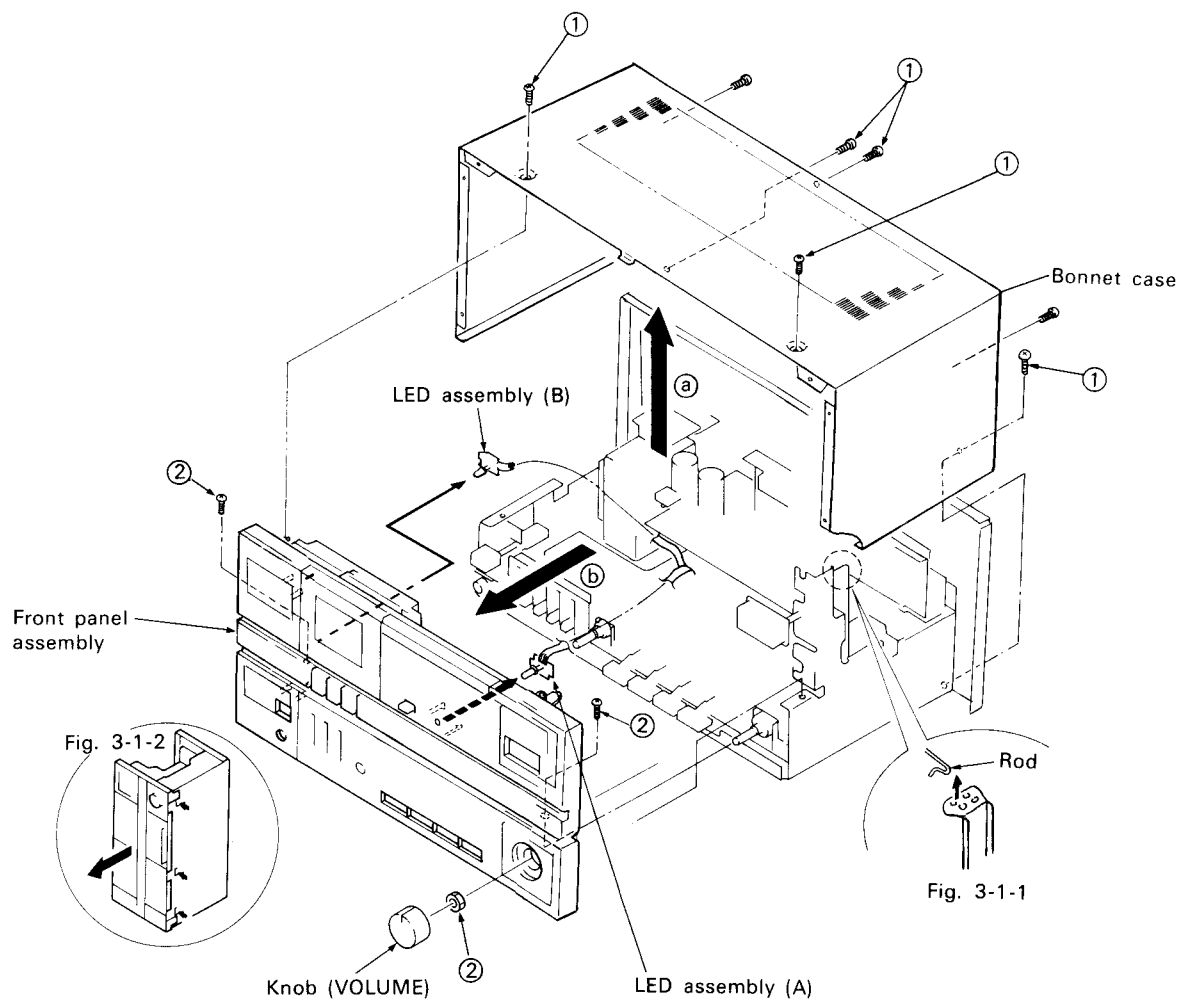


Fig. 3-1

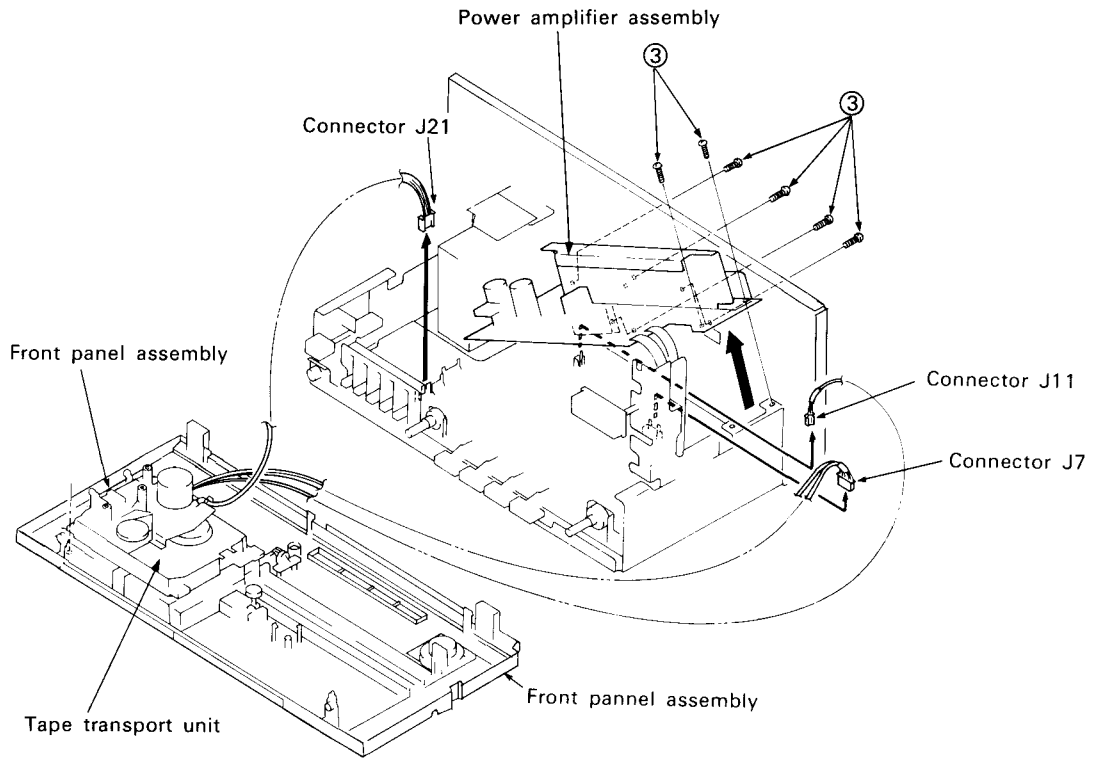


Fig. 3-2

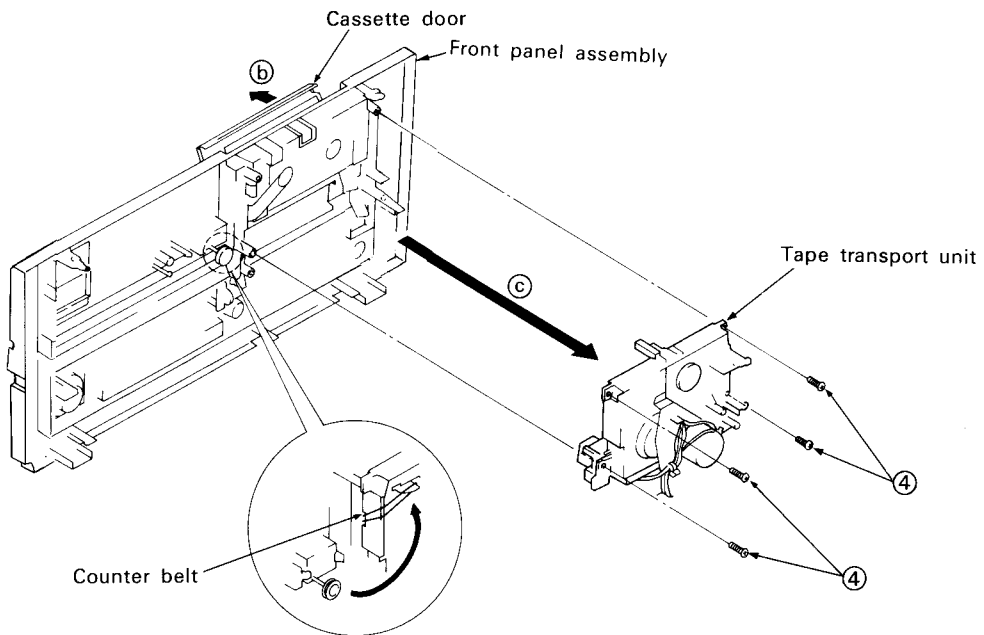


Fig. 3-3

COMPONENT PARTS REPLACEMENT PROCEDURES

Replacement of Motor

1. Remove lead wire of motor terminal.
2. Remove set screw ① and detach Motor holder.
3. Remove 2 set screws ②, and detach the Motor.
4. Pull out Motor pulley from Motor.
5. Attach Motor pulley to new motor.
6. Adjust the height of Motor pulley. (see Fig. 3-4-1)
7. Attach Motor to Motor holder.
8. While applying a Belt to the flywheel side, attach Motor plate to Tape transport unit.
9. Apply Belt to driving pulley and pulley.
10. Solder lead wire to motor terminal.
11. Fasten securely head lead and control lead with binder.
12. Adjust the tape speed.

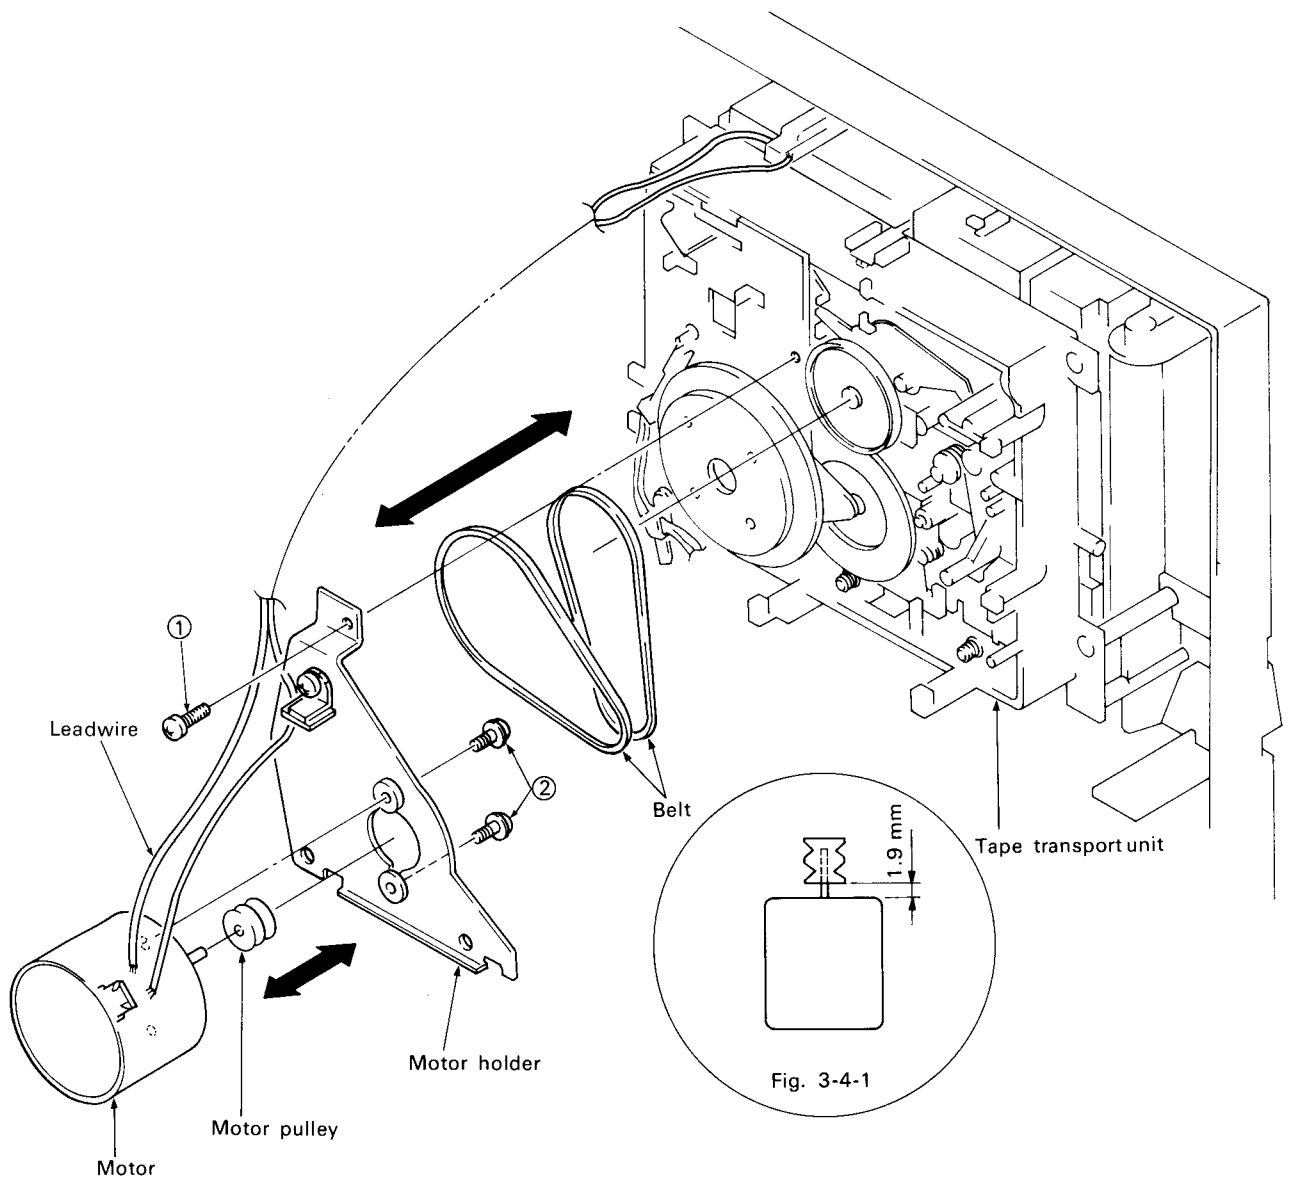


Fig. 3-4

Replacement of Belt

1. Remove set screw ① and detach Motor holder the Tape transport unit.
2. Replace the old belt with a new one.
3. While applying the Belt on the flywheel side, attach Motor holder to the Tape transport unit.
4. Apply belt to driving pulley and pulley.
5. Fasten securely head lead and control lead with binder.
6. Adjust the tape speed.

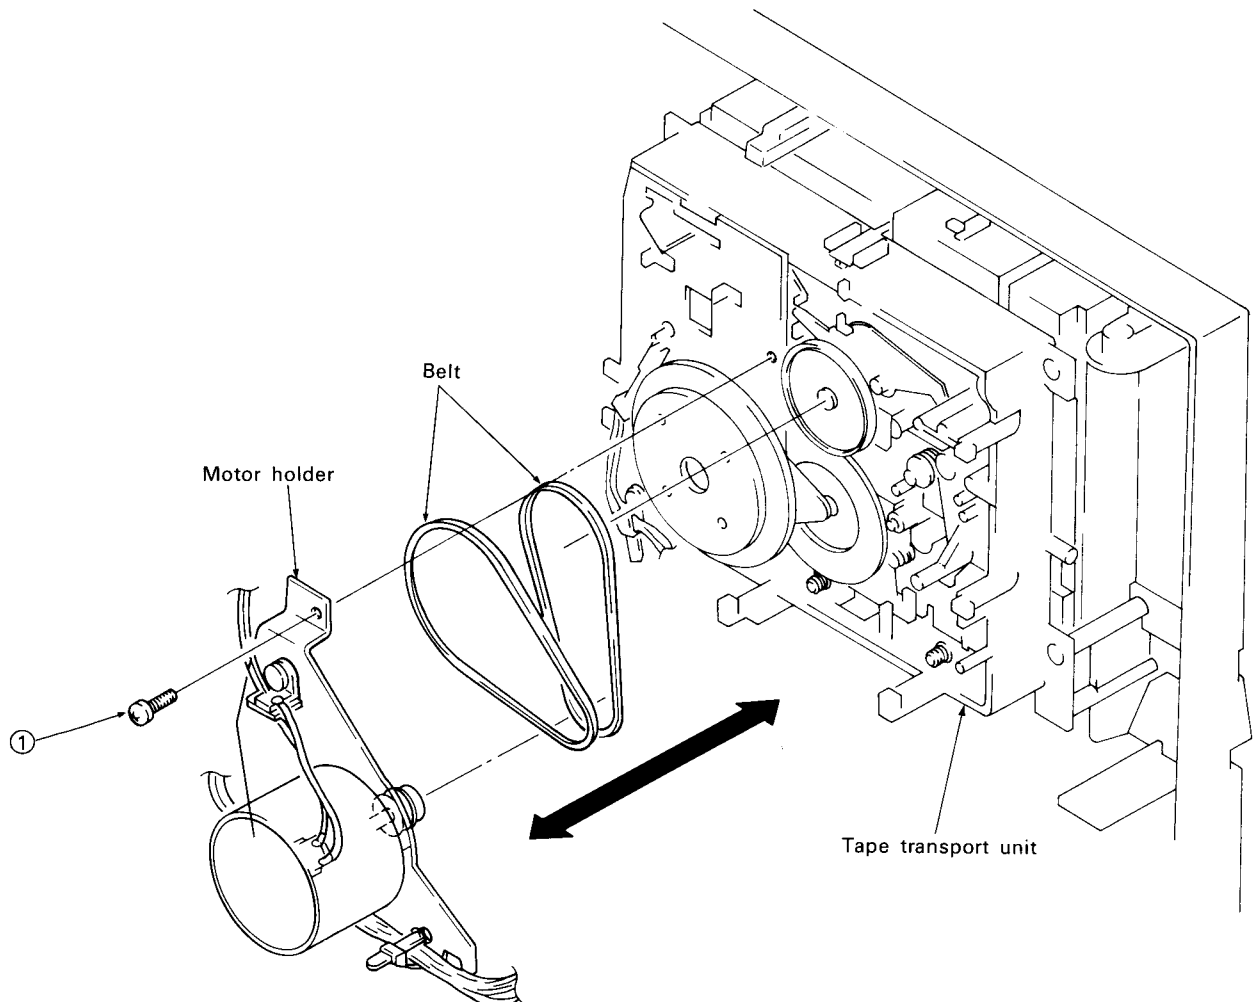


Fig. 3-5

Replacement of Head

1. Detach cassette knob.
2. Remove head lead from head.
3. Remove set screw ① of head.
4. Remove former head and install a new one.
5. Solder the head lead while taking precaution not to touch the wirings.
6. Attach cassette knob.
7. Check the running of tape.
8. Perform azimuth adjustment.
9. Perform bias adjustment.

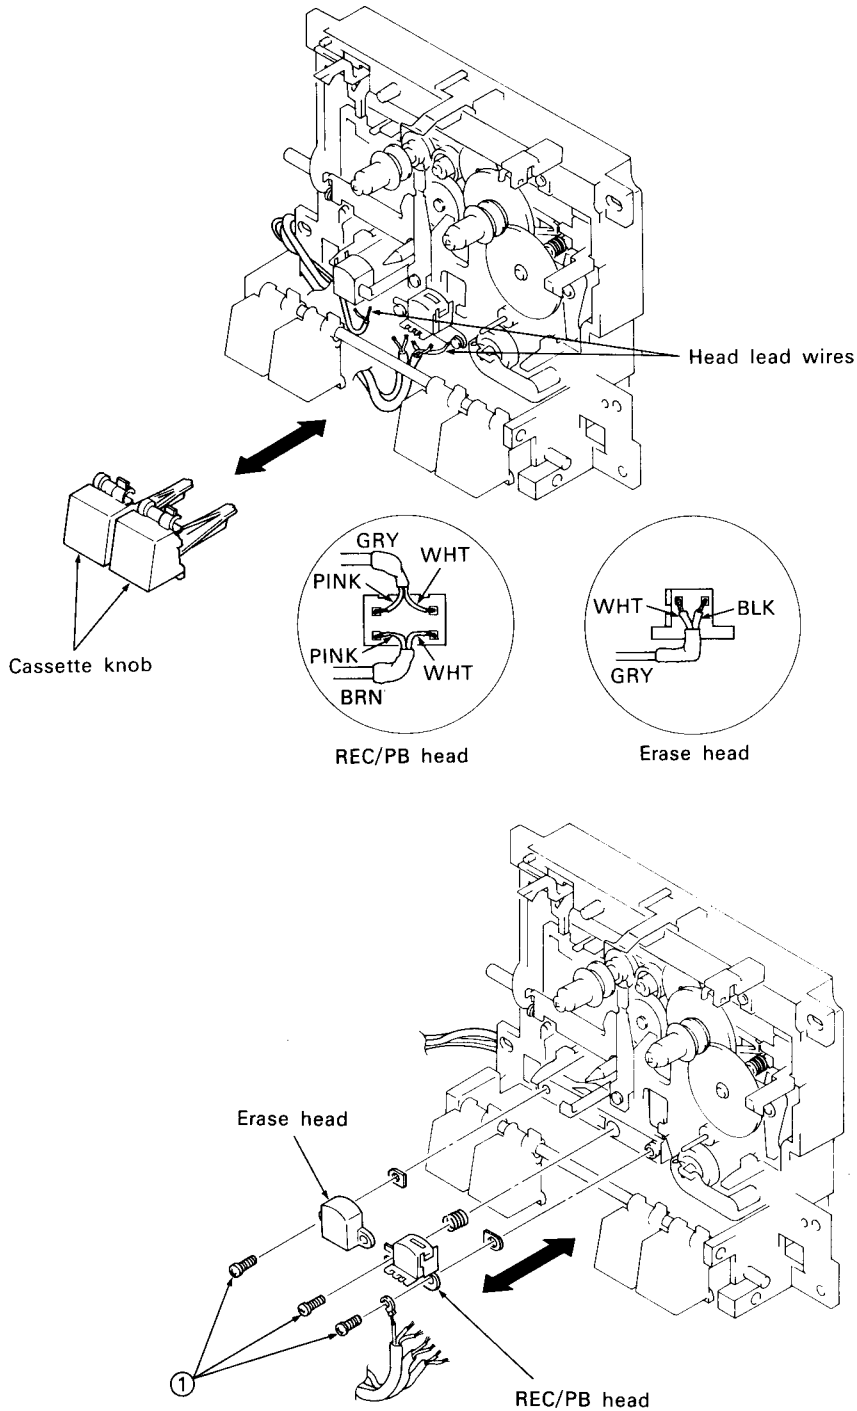



Fig. 3-6

4. PARTS LOCATION


NOTES:

- The Δ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
- For your Parts Stock Control, the fast moving items are indicated with the marks ****** and *****.
**** GENERALLY MOVES FASTER THAN ***
 This classification shall be adjusted by each distributor because it depends on model number, temperature, humidity, etc.


Front Panel View (DC-111Z)

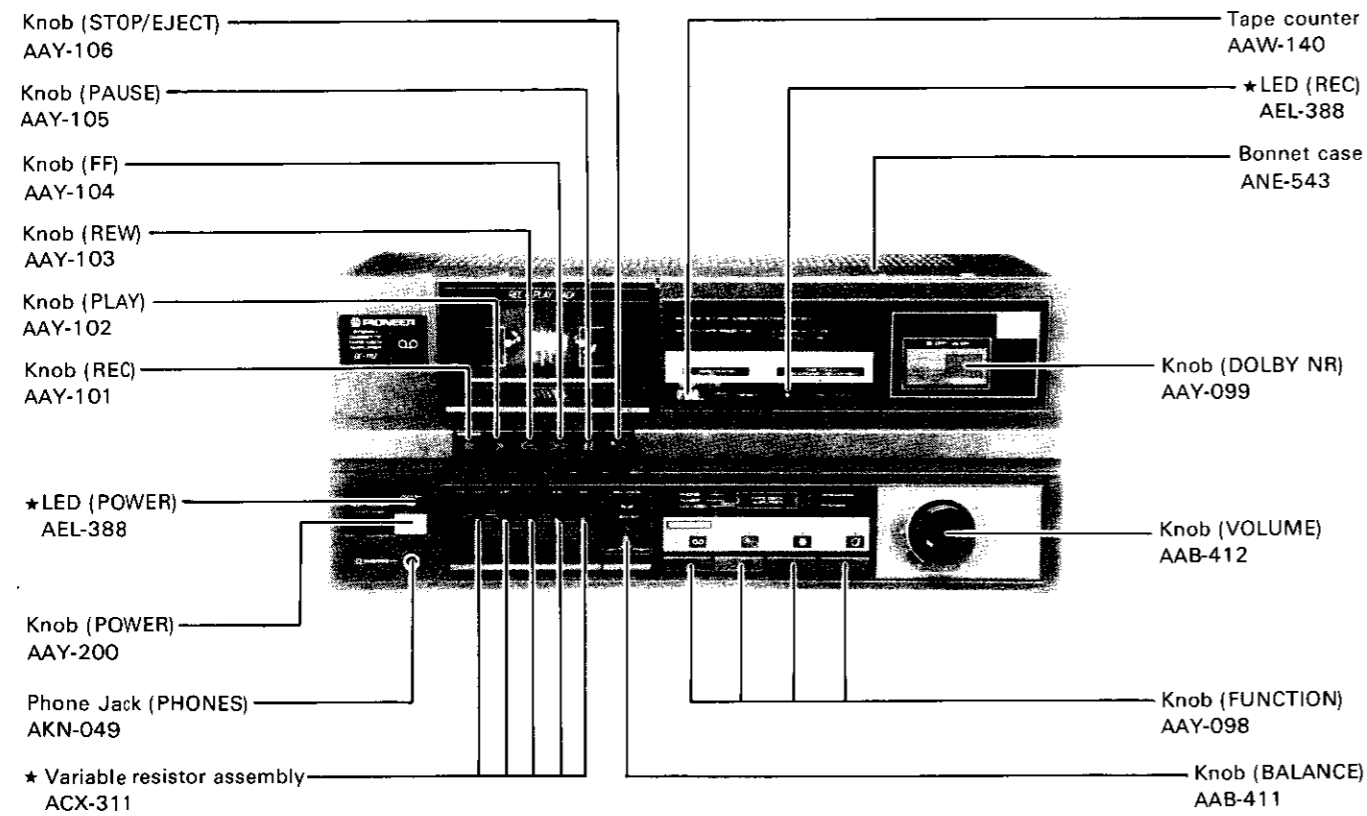


Rear Panel View (DC-111Z)

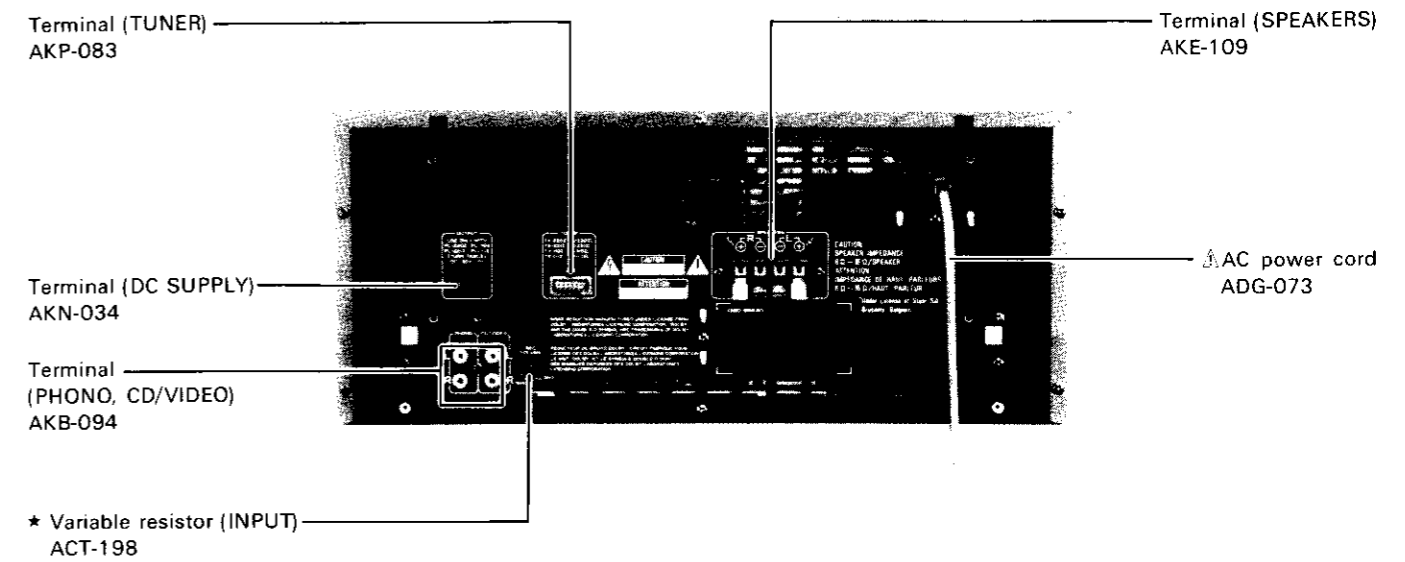

Top View (DC-111Z)

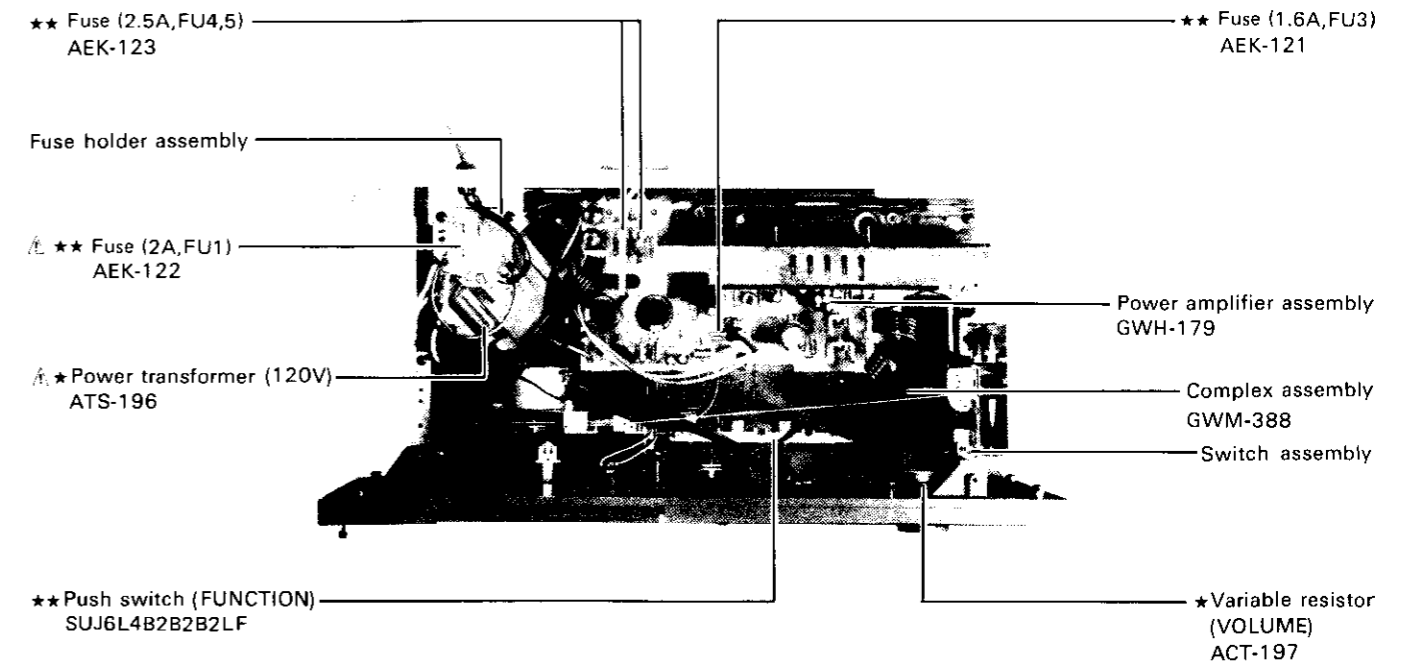

5. PACKING

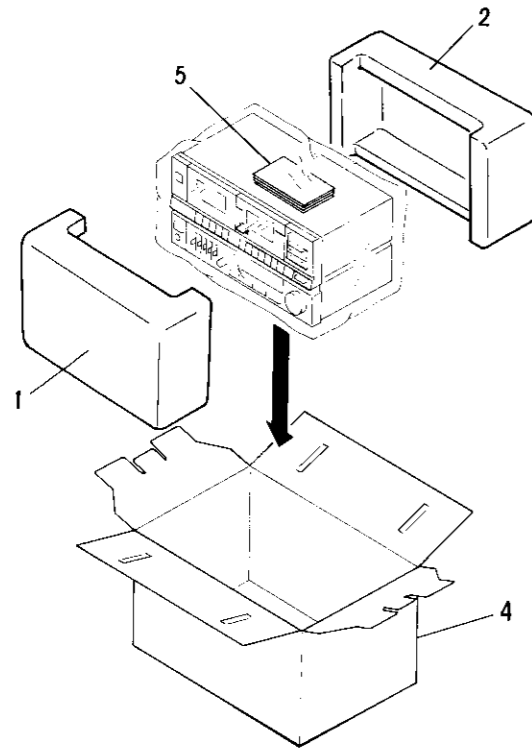

Mark	No.	Part No.	Description
	1	AHA-400	Front pad
	2	AHA-401	Rear pad
	3
	4	AHE-527 AHE-528	Packing case for DC-111Z Packing case for DC-110Z
	5	ARB-679	Operating instructions (English)

Contrast of Miscellaneous parts.

Key No.	Symbol & Description	Part No.		Remarks
		DC-111Z	DC-110Z	
16	Knob A (REC)	AAV-101	AAV-085	
17	Knob B (PLAY)	AAV-102	AAV-086	
18	Knob C (REW)	AAV-103	AAV-087	
19	Knob D (FF)	AAV-104	AAV-088	
20	Knob E (PAUSE)	AAV-105	AAV-089	
21	Knob F (STOP/EJECT)	AAV-106	AAV-090	
23	Front panel assembly	ANM-888	ANM-949	
26	Name panel	ANZ-039	ANZ-043	
28	Deck panel	ANZ-037	ANZ-042	
29	Amp panel	ANZ-055	ANZ-056	

6. EXPLODED VIEW


NOTES:

- Parts without part number cannot be supplied.
- The Δ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
- For your Parts Stock Control, the fast moving items are indicated with the marks $\star\star$ and \star .
 $\star\star$ **GENERALLY MOVES FASTER THAN \star**
 This classification shall be adjusted by each distributor because it depends on model number, temperature, humidity, etc.

Parts List of Exterior (DC-111Z) Regarding DC-110Z, see the table in page 11.

Mark	No.	Part No.	Description	Mark	No.	Part No.	Description
	1	GWH-179	Power amplifier assembly	$\star\star$	35	AEB-197	Counter belt
	2	GWM-388	Complex assembly		36	AEC-847	Leg assembly
\star	3	ACX-311	Variable resistor assembly	Δ	37	ADG-073	AC power cord
Δ \star	4	ATS-196	Power transformer (120V)		38	BBZ30P080FZK	Screw 3x8
					39	NK90FUC	Nut
Δ $\star\star$	5	ASG-539	Push switch (POWER)		40	ABA-286	Screw
Δ $\star\star$	6	AEK-122	FU1 Fuse (2A)		41	VMZ30P060FMC	Screw 3x6
Δ $\star\star$	7	AEK-121	FU3 Fuse (1.6A)		42	BPZ30P080FZK	Screw 3x8
Δ $\star\star$	8	AEK-123	FU4,5 Fuse (2.5A)		43	PBZ20P040FMC	Screw 2x4
	9	AAW-140	Tape counter		44	VPZ30P080FMC	Screw 3x8
	10	ANZ-044	Damper assembly		100		Fuse holder Assembly
	11	AAB-411	Knob (BALANCE)		101		Switch assembly
	12	AAB-412	Knob (VOLUME)		102		Headphone jack assembly
	13	AAV-200	Knob (POWER)		103		LED assembly (A)
	14	AAV-098	Knob (FUNCTION)		104		LED assembly (B)
	15	AAV-099	Knob (DOLBY NR)		105		Tape transport unit
	16	AAV-101	Knob (REC)		106		Chassis
	17	AAV-102	Knob (PLAY)		107		Bottom plate
	18	AAV-103	Knob (REW)		108		Rear panel
	19	AAV-104	Knob (FF)		109		Heat sink holder
	20	AAV-105	Knob (PAUSE)		110		P.C.B holder
	21	AAV-106	Knob (STOP/EJECT)		111		Damper holder
	22	ANE-543	Bonnet case		112		REC lever
	23	ANM-888	Front panel		113		REC base
	24	ANR-964	Door (L)		114	
	25	ANZ-038	Door panel S		115		Switch barrier
	26	ANZ-039	Name panel		116		Clamp plate
	27	ANZ-032	POWER panel				
	28	ANZ-037	Deck panel				
	29	ANZ-055	Amp panel				
	30	AAX-426	Shine paper				
	31	ABH-156	REC spring				
	32	ABH-147	Coiled spring				
	33	ABH-149	Rod				
	34	ABK-012	Keep plate				

Exterior

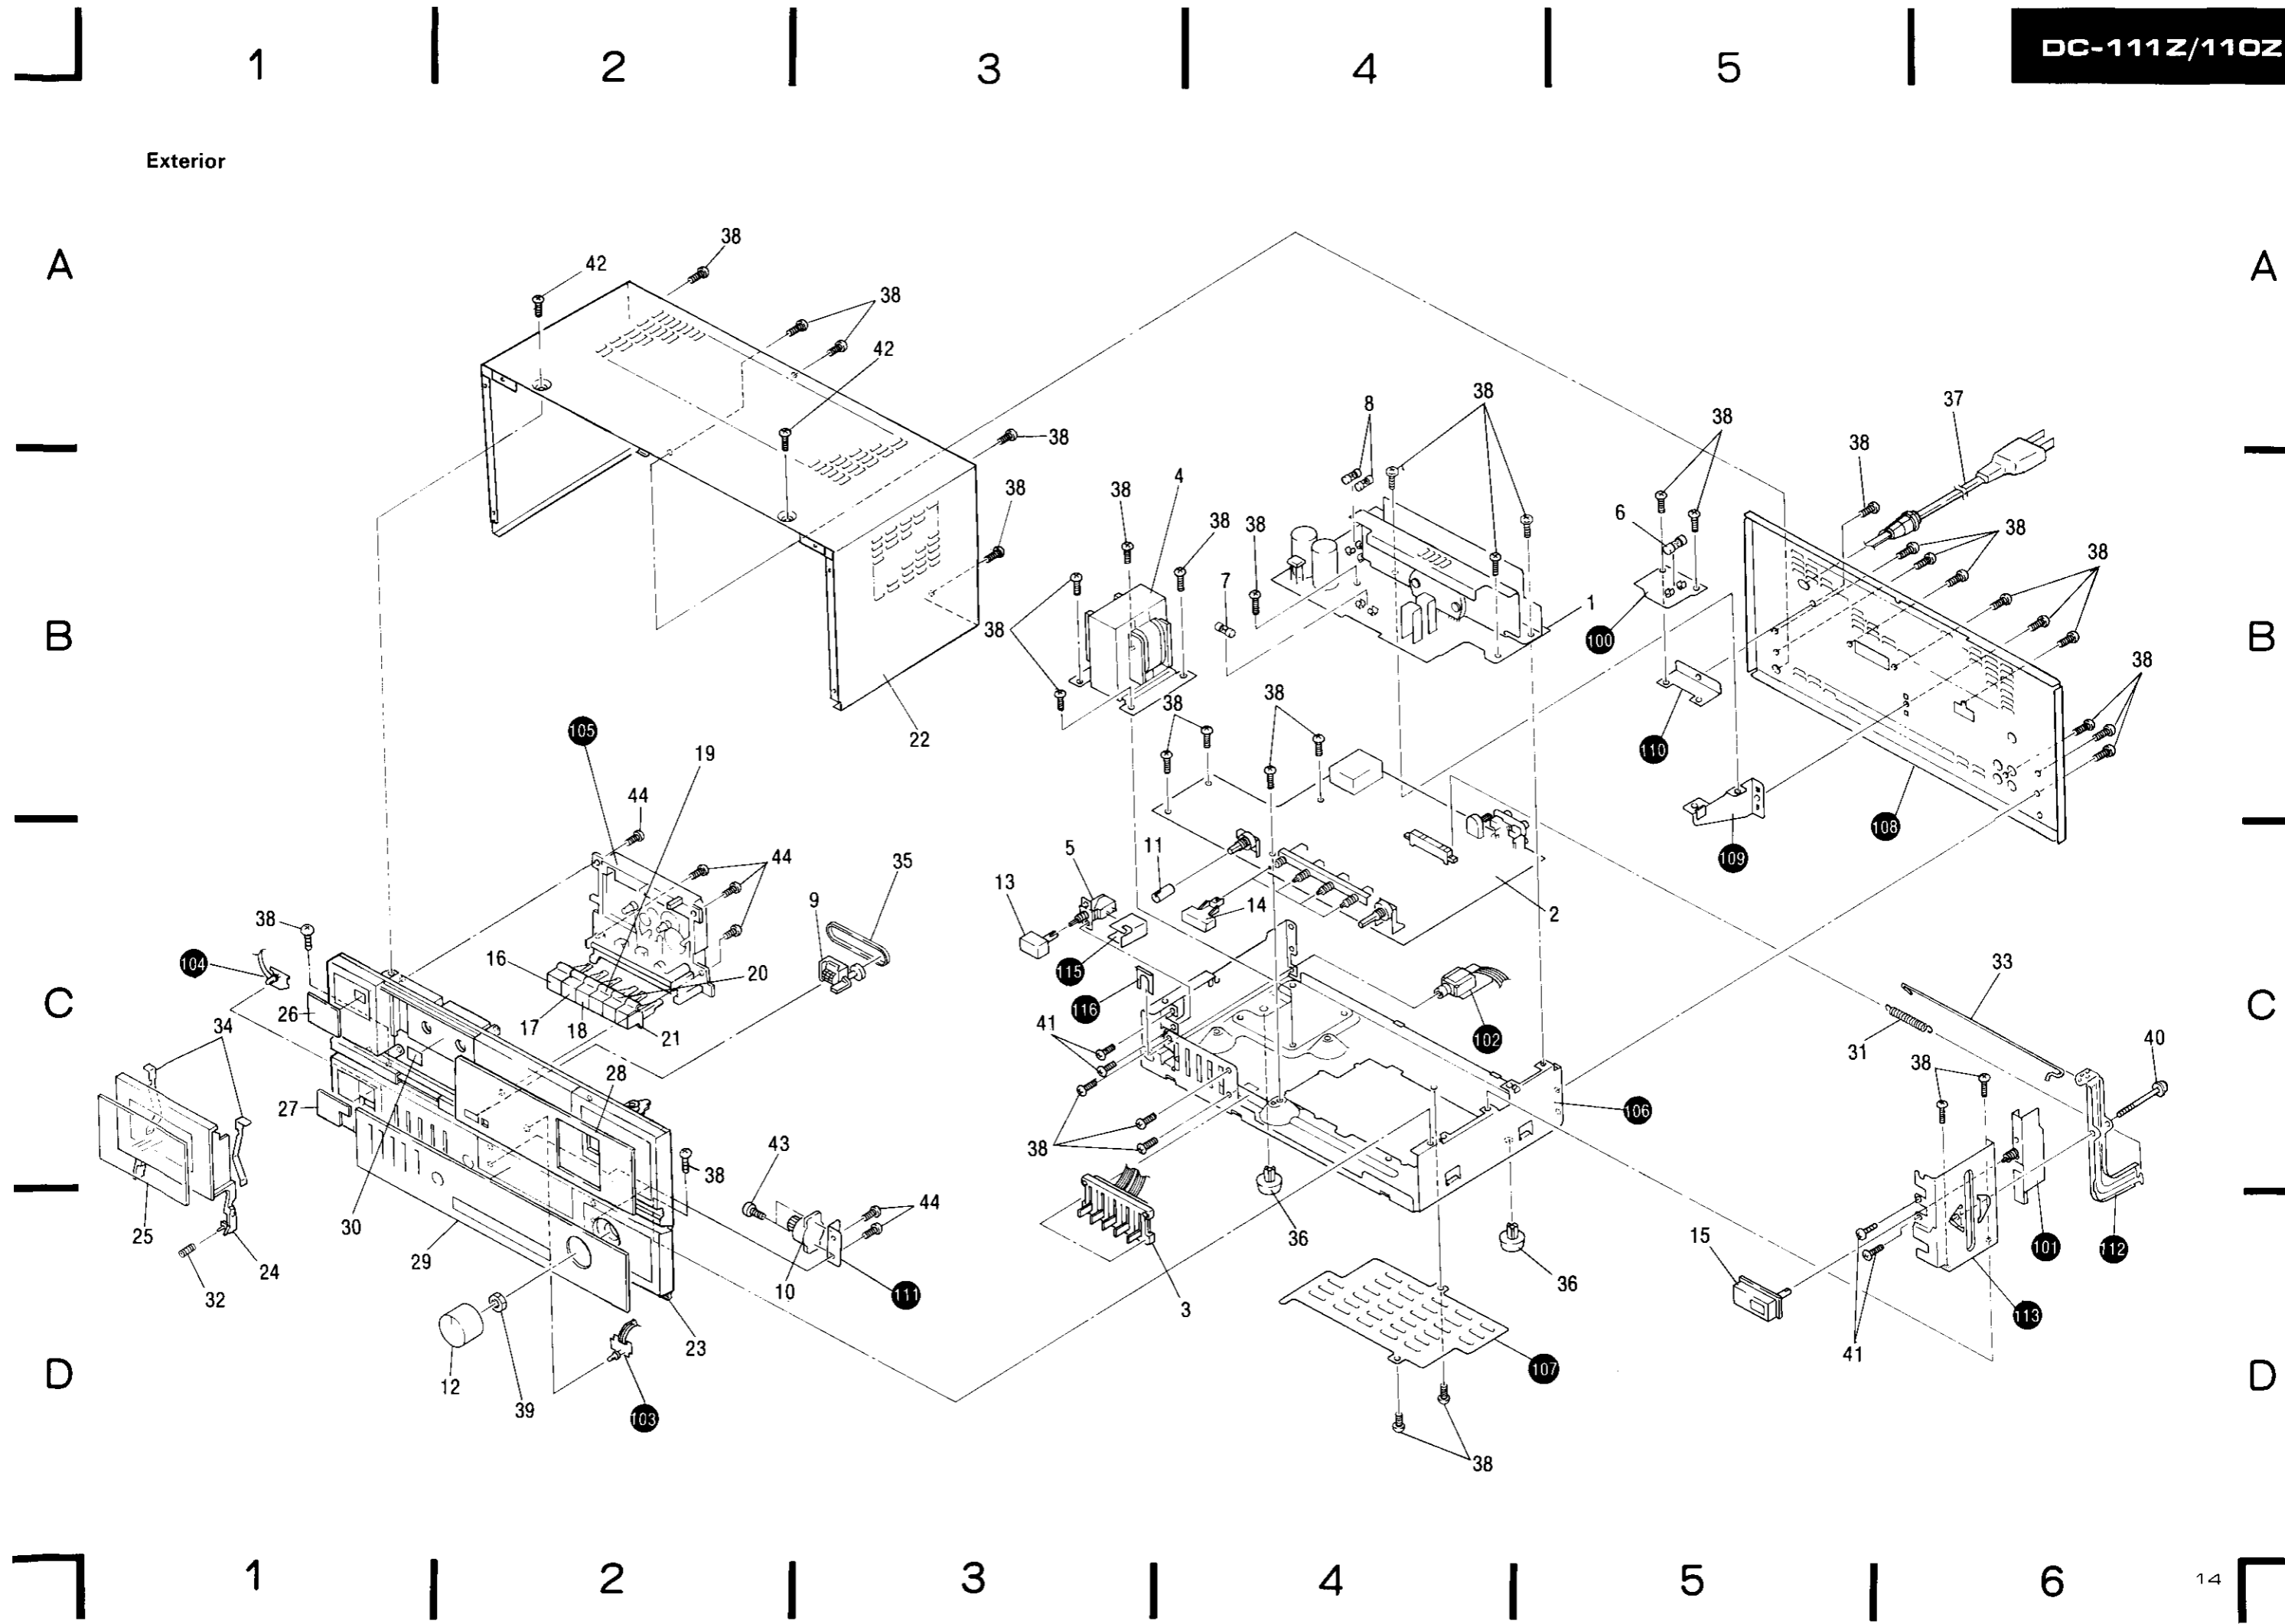



Tape Transport Unit

A

B

C

D

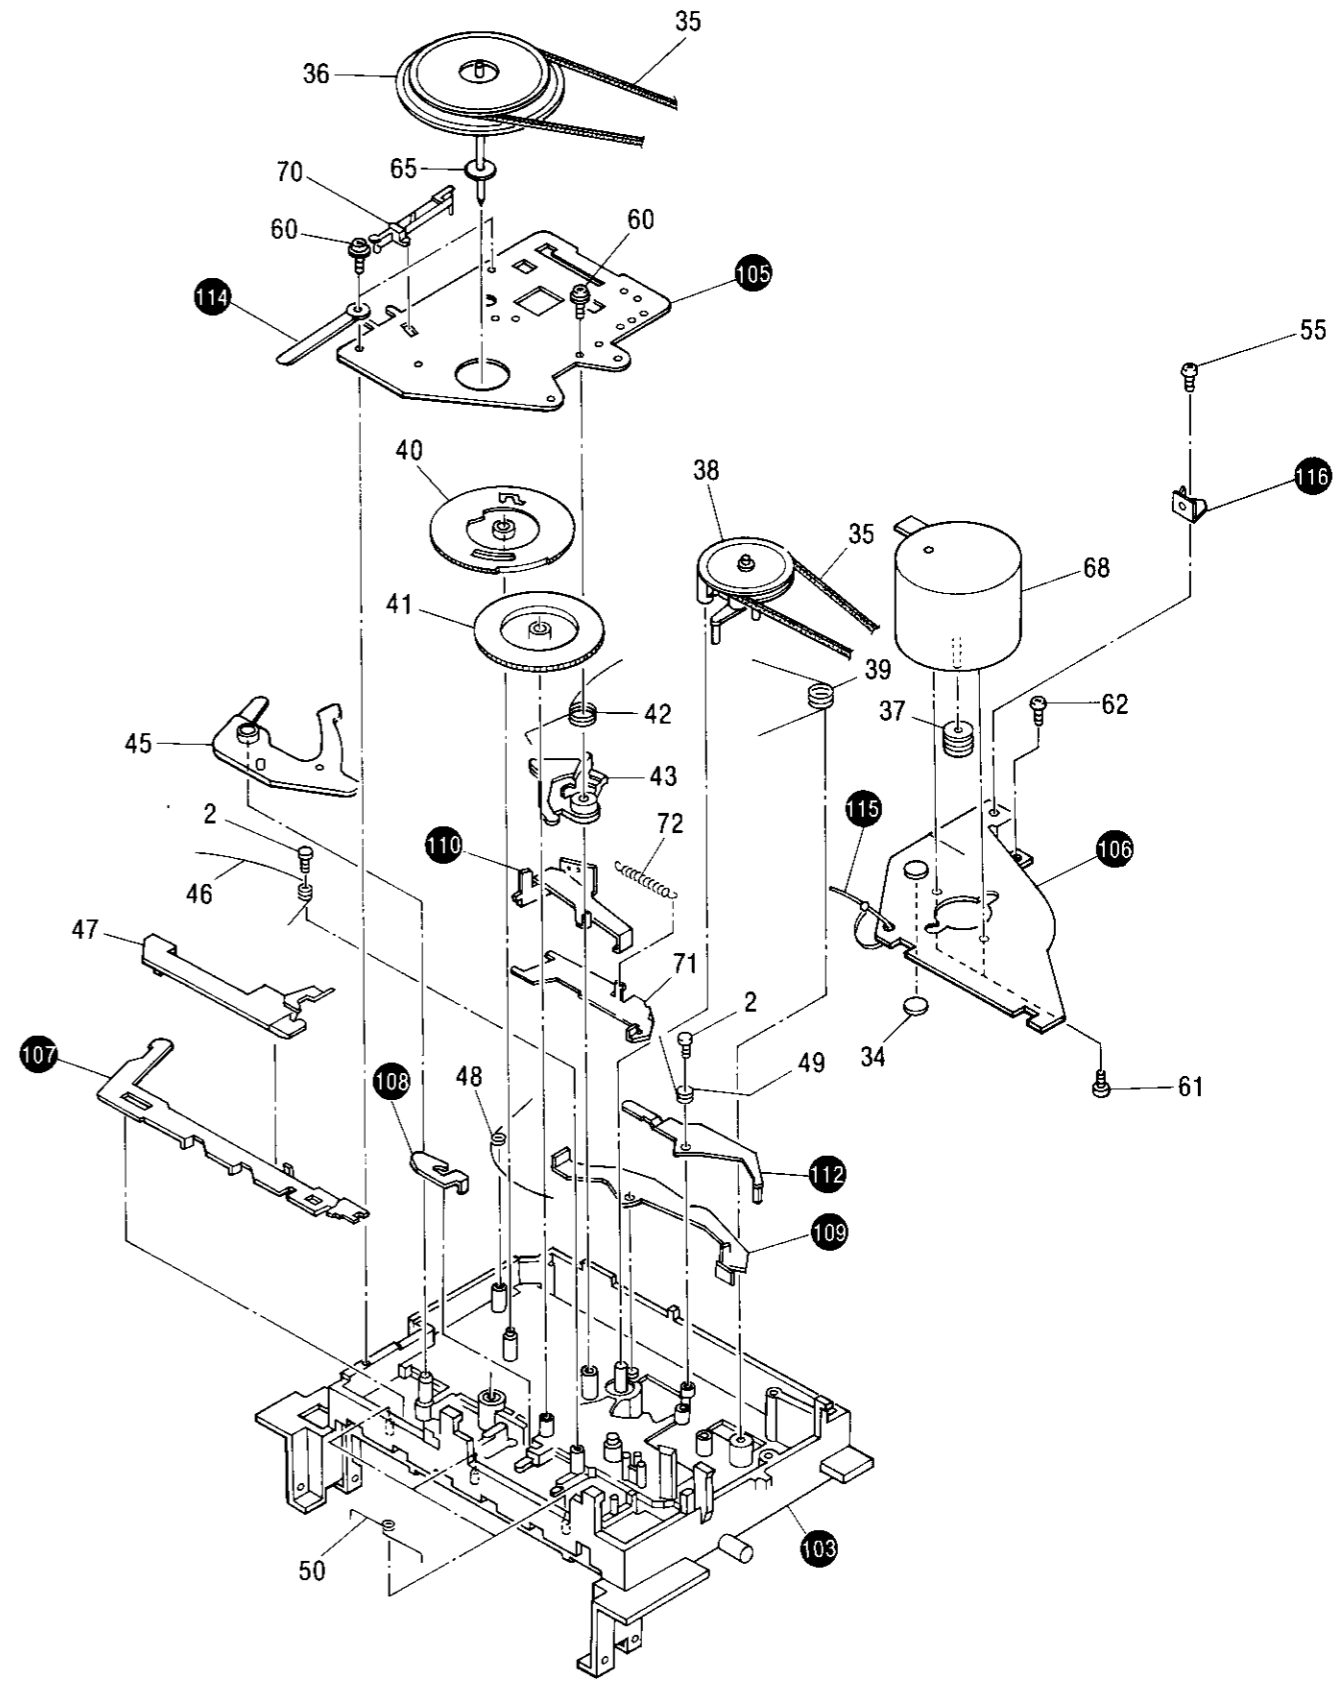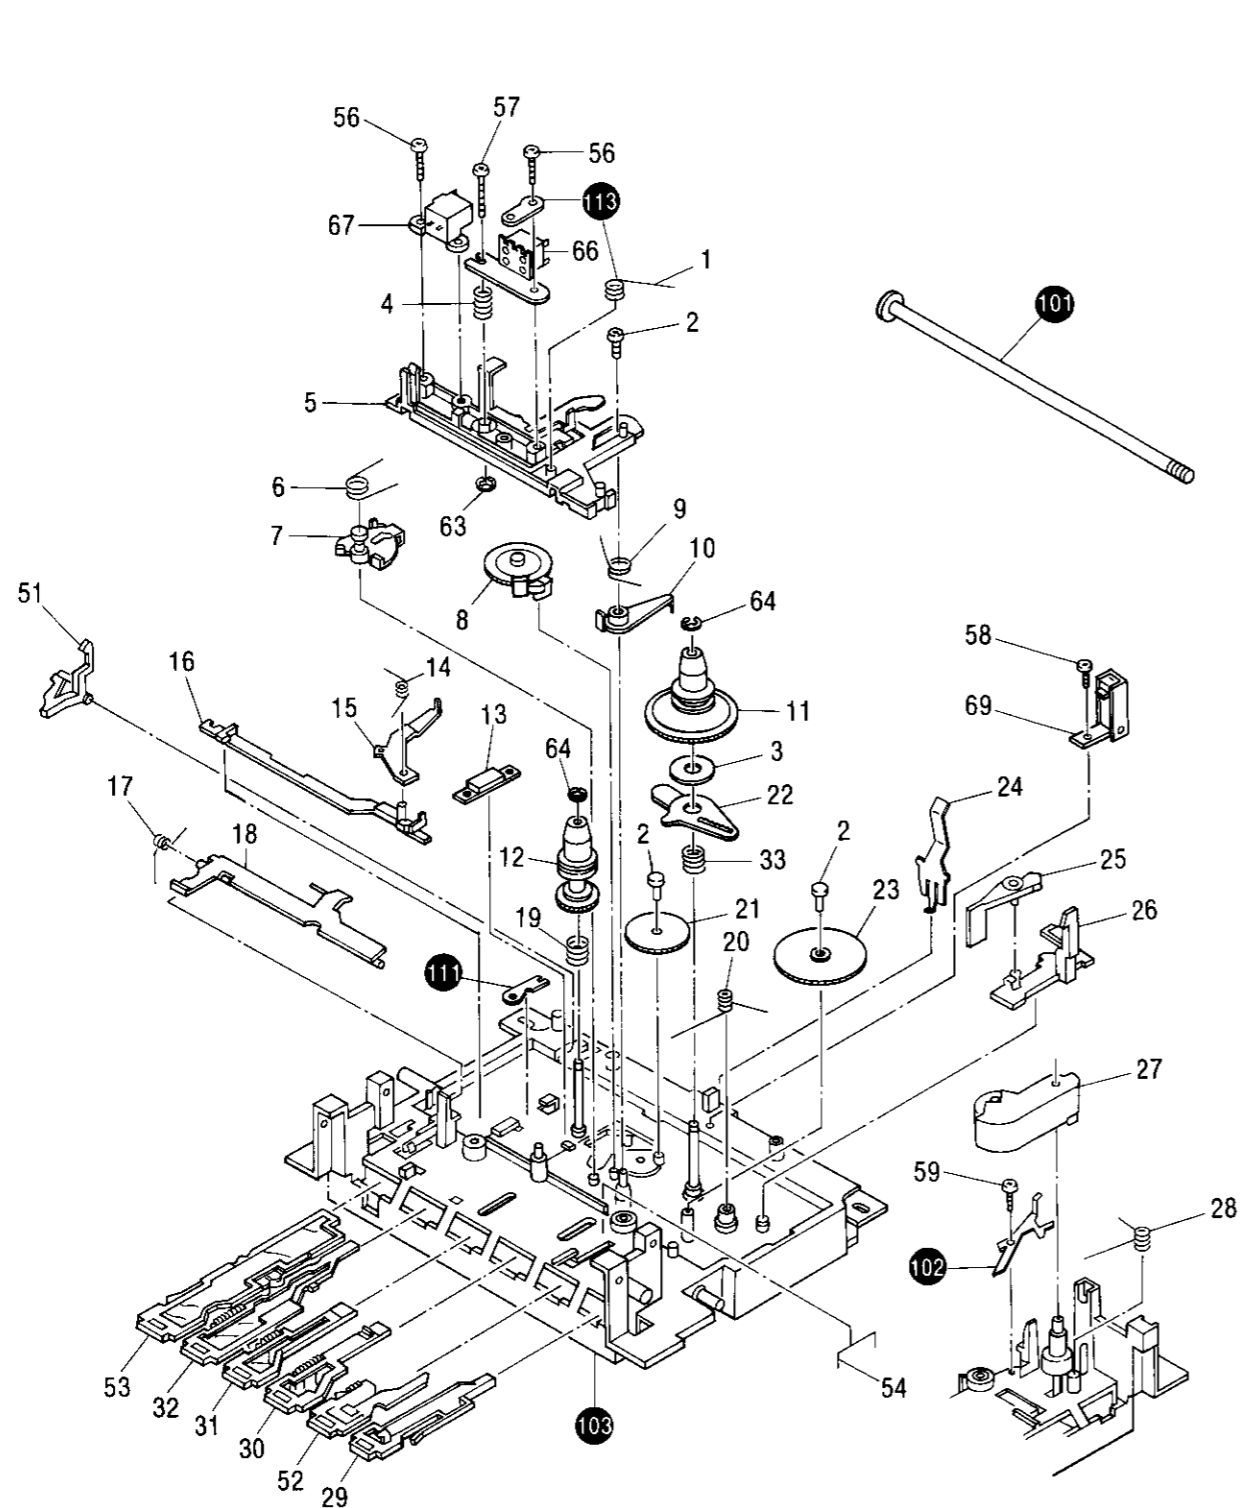

A

B

C

D

Parts List of Tape Transport Unit

NOTES:

- Parts without part number cannot be supplied.
- The Δ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
- For your Parts Stock Control, the fast moving items are indicated with the marks **★★** and **★**.
★★ GENERALLY MOVES FASTER THAN ★
 This classification shall be adjusted by each distributor because it depends on model number, temperature, humidity, etc.

Mark	No.	Part No.	Description	Mark	No.	Part No.	Description
	1	AXV-087	Torsion spring		46	AXV-099	Torsion spring
	2	AXT-007	Bush		47	AXS-106	FR start lever
	3	AXW-034	Felt		48	AXV-100	Torsion spring
	4	AXV-064	Compression spring		49	AXV-101	Torsion spring
	5	AXS-078	Head base		50	AXV-102	Torsion spring
	6	AXV-088	Torsion spring		51	AXS-098	Interlock plate
	7	AXS-079	FR arm		52	AXS-090	Pause lever
★★	8	AXP-037	P idler assembly		53	AXS-100	REC lever
	9	AXV-089	Torsion spring		54	AXV-103	Lock pin
	10	AXS-080	Reset lever		55	BDZ26P050FMC	Screw 2.6×5
★★	11	AXP-038	T reel assembly		56	BTZ20P080FMC	Screw 2×8
★★	12	AXP-039	S reel assembly		57	BMZ20P100FMC	Screw 2×10
	13	AXS-081	FR release lever		58	PTZ26P060FMC	Screw 2.6×6
	14	AXV-090	Torsion spring		59
	15	AXS-082	P release lever		60	BTZ26P060FMC	Screw 2.6×6
	16	AXS-083	PL plate		61	PMA26P040FMC	Screw 2.6×4
	17	AXV-091	Torsion spring		62	PDZ26P040FMC	Screw 2.6×4
	18	AXS-099	FR plate		63	NA20FMC	Nut M2
	19	AXV-092	S brake spring		64	WA16D040D020	Washer 1.6×4×0.2
	20	AXV-093	Torsion spring		65	WA21D040D030	Washer 2.1×4×0.3
	21	AXS-084	F idler gear	★★	66	AXN-031	REC/PB head
	22	AXS-085	Sensor cam	★	67	AXN-032	Erase head
	23	AXS-086	AS gear	★★	68	AXN-023	Motor
	24	AXV-094	Cassette holder	★★	69	AXN-024	Spring switch (S12, METAL)
	25	AXS-087	Eject cam				
	26	AXS-088	Latch lever	★★	70	AXN-025	Spring switch (S11, MUTE)
★★	27	AXP-040	Pinch arm assembly		71	AXS-102	REC link lever
	28	AXV-095	Torsion spring		72	AXV-106	Tension spring
	29	AXS-089	SE lever		101		Button shaft
	30	AXS-091	FF lever		102		Grounding lug
					103		Chassis
					104	
	31	AXS-092	REW lever		105		Gear holder
	32	AXS-093	PL lever B				
	33	AXV-096	Torsion spring		106		Motor holder
★★	34	AXW-035	Thrust receptacle		107		FR S lever
★★	35	AXW-036	Belt		108		Protector
					109		PL start lever
	36	AXP-041	Flywheel assembly				
	37	AXS-101	Motor pulley		110		RS W lever
★★	38	AXP-042	FR idler arm assembly		111		REC protector
	39	AXV-104	Torsion spring		112		REC change plate
	40	AXS-094	Assist gear A		113		Lug
					114		Cord fixer
	41	AXS-095	Assist gear B				
	42	AXV-098	Torsion spring		115		Wire tie
	43	AXS-096	P cam lever		116		Lug terminal
	44					
	45	AXS-097	CR cam lever				

7. ELECTRICAL PARTS LIST

NOTES:

- When ordering resistors, first convert resistance values into code form as shown in the following examples.
 Ex. 1 When there are 2 effective digits (any digit apart from 0), such as 560 ohm and 47k ohm (tolerance is shown by J=5%, and K=10%).
 560Ω 56×10^1 $561 \dots \dots RD\frac{1}{2}PS$ $\begin{matrix} \text{5} & \text{6} & \text{1} \\ \text{J} \end{matrix}$
 $47k\Omega$ 47×10^3 $473 \dots \dots RD\frac{1}{2}PS$ $\begin{matrix} \text{4} & \text{7} & \text{3} \\ \text{J} \end{matrix}$
 0.5Ω $0R5$ $\dots \dots RN2H$ $\begin{matrix} \text{0} & \text{5} \\ \text{K} \end{matrix}$
 1Ω 010 $\dots \dots RS1P$ $\begin{matrix} \text{0} & \text{1} & \text{0} \\ \text{K} \end{matrix}$
 Ex. 2 When there are 3 effective digits (such as in high precision metal film resistors).
 $5.62k\Omega$ 562×10^1 $5621 \dots \dots RN\frac{1}{4}SR$ $\begin{matrix} \text{5} & \text{6} & \text{2} & \text{1} \\ \text{F} \end{matrix}$
- The Δ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
- For your Parts Stock Control, the fast moving items are indicated with the marks **★★** and **★**.
★★ GENERALLY MOVES FASTER THAN ★
 This classification shall be adjusted by each distributor because it depends on model number, temperature, humidity, etc.

Miscellaneous Parts

P.C. BOARD ASSEMBLIES

Mark	Symbol & Description	Part No.
	Power amplifier assembly	GWH-179
	Complex assembly	GWM-388
	Switch Assembly	Non supply
	Headphone jack assembly	Non supply
	Fuse holder assembly	Non supply
	LED assembly (B)	Non supply
	LED assembly (A)	Non supply

SWITCH

Mark	Symbol & Description	Part No.
Δ ★★	S1 Push switch (POWER)	ASG-539

TRANSFORMER

Mark	Symbol & Description	Part No.
Δ ★	T1 Power transformer (AC120V)	ATS-196

RESISTOR

Mark	Symbol & Description	Part No.
★	VR1 Variable resistor assembly (GRAPHIC EQUALIZER)	ACX-311

FUSES

Mark	Symbol & Description	Part No.
Δ ★★	FU4, FU5 Fuse (2.5A)	AEK-123
Δ ★★	FU1 Fuse (2A)	AEK-122
Δ ★★	FU3 Fuse (1.6A)	AEK-121

OTHERS

Mark	Symbol & Description	Part No.
Δ	AC Power cord	ADG-073
Δ	C1 Ceramic capacitor	ACG-502

Complex Assembly (GWM-388)

SEMICONDUCTORS

Mark	Symbol & Description	Part No.
★★	IC701, IC702	BA3812L
★★	IC401	HA12045
★★	IC501	M5218L
★★	IC601	M5218P
★★	IC301	M5220L
★★	Q842	DTA143ES (RN2201)
★★	Q810, Q841	DTC124ES (RN1203)
★★	Q801	2SA933S (2SA1048)
★★	Q303, Q304, Q401—Q406, Q408, Q409, Q501, Q502, Q505, Q506, Q846	2SC1740S (2SC2458)
★★	Q843	2SC2603 (2SC2458)
★★	Q844, Q845	2SD438
★★	Q301, Q302	2SC2878
★	D833	RD5.6EB (HZ5.6EB)
★	D401, D402, D808, D822, D840—D843	1SS131

SWITCHES

Mark	Symbol & Description	Part No.
★★	S401 Slide switch (REC/PB)	ASH-105
★★	S701 Push switch (FUNCTION)	SUJ6L4B2B2LF

COILS AND TRANSFORMERS

Mark	Symbol & Description	Part No.
	F401, F402 MPX filter	ATF-158
	L801 Inductor	ATH-094
	L501, L502 Inductor	ATH-117
	L401, L402 Trap coil	ATM-031
	L503, L504 Trap coil	ATM-032
	T801 Oscillator transformer	ATX-036

CAPACITORS

Mark	Symbol & Description	Part No.
	C804 Polypropylene (1500p/630V)	ACE-133
	C723, C724 Ceramic (330p/50V)	ACG-028
	C417, C418 Electrolytic (0.27/50V)	ACH-387
	C419, C420 Electrolytic (0.82/50V)	ACH-388
	C305, C306, C605—C608	CCCSL101J50 (CCDSL101J50)
	C802, C803	CCCSL101K500 (CCDSL101K500)

Part No.	Symbol & Description	Part No.
BA3812L	C403, C404, C429, C430	CCCSL470J50 (CCDSL470J50)
HA12045	C709, C710	CEASR15M50
M5218L	C801	CEASR47M50
M5218P	C705, C706	CEASR68M50
M5220L		

Part No.	Symbol & Description	Part No.
DTA143ES (RN2201)	C303, C304, C423, C424, C517, C518, C615, C616, C815	CEAS010M50
DTC124ES (RN1203)	C311, C312, C407, C408, C425, C426, C501, C502, C519, C520, C701, C702, C727, C728, C814	CEAS100M25

Part No.	Symbol & Description	Part No.
2SC1740S (2SC2458)	C453, C725, C726	CEAS101M16
	C401, C402, C405, C406, C427, C428, C452, C603, C604	CEAS2R2M50
	C451, C454	CEAS221M16

Part No.	Symbol & Description	Part No.
2SD438	C307, C308, C505, C506	CEAS330M16
2SC2878	C415, C416	CEAS4R7M50
RD5.6EB	C609, C610	CEAS470M10
(HZ5.6EB)	C351, C352, C651, C652, C751, C809, C810	CEAS470M16
1SS131		

Part No.	Symbol & Description	Part No.
ASH-105	C715, C716	CKCYB182K50 (CKDYB182K50)
	C719, C720	CKCYB391K50 (CKDYB391K50)
	C711, C712	CKCYB392K50 (CKDYB392K50)

Part No.	Symbol & Description	Part No.
SUJ6L4B2B2B2LF	C301, C302	CKCYB471K50 (CKDYB471K50)
	C521—C524	CKCYB681K50 (CKDYB681K50)
	C721, C722	CKCYB682K50 (CKDYB682K50)

Mark	Symbol & Description	Part No.
	C717, C718	CKCYX153M25 (CKDYX153M25)
	C707, C708	CKCYX183M25 (CKDYX183M25)
	C703, C704	CKCYX393M25 (CKDYX393M25)
	C713, C714	CKCYX683M25 (CKDYX683M25)
	C806, C808	CQMA153J50
	C503, C504	CQMA182J50
	C421, C422	CQMA183J50
	C313, C314, C507, C508, C805, C807	CQMA223J50
	C611, C612	CQMA242J50
	C411, C412	CQMA333J50
	C511, C512	CQMA393J50
	C413, C414	CQMA472J50
	C309, C310	CQMA562J50
	C613, C614	CQMA822J50

RESISTORS

NOTE: When ordering resistors, convert the resistance value into code form, and then rewrite the part no. as before.

Mark	Symbol & Description	Part No.
*	VR701 Variable (BALANCE)	ACT-057
*	VR702 Variable (VOLUME)	ACT-197
*	VR601 Variable (INPUT)	ACT-198
*	VR841, VR842 Semi-fixed 220k	VRTB6VS224
*	VR301, VR302, VR501, VR502, Semi-fixed 22k	VRTB6VS223
	R842	RD1/2PM271J
	R319, R320	RD1/4PM105J
	Other resistors	RD1/8PM□□□J

OTHERS

Mark	Symbol & Description	Part No.
	Terminal (PHONO, CD/VIDEO)	AKB-094

Switch Assembly

SWITCHES

Mark	Symbol & Description	Part No.
**	S902 Push switch (DOLBY NR)	SUJL2SF

RESISTORS

Mark	Symbol & Description	Part No.
	R821	RD1/8PM472J
	R822	RD1/8PM622J

Headphone Jack Assembly

RESISTORS

Mark	Symbol & Description	Part No.
	R829, R830	RD1/2PM331J

OTHERS

Mark	Symbol & Description	Part No.
	Phone jack (PHONES)	AKN-049

LED Assembly (A)

SEMICONDUCTOR

Mark	Symbol & Description	Part No.
*	D828 LED (REC)	AEL-388

LED Assembly (B)

SEMICONDUCTOR

Mark	Symbol & Description	Part No.
*	D827 LED (POWER)	AEL-388

Power Amplifier Assembly (GWH-179)

SEMICONDUCTORS

Mark	Symbol & Description	Part No.
△ **	IC101	STK4141-2S
**	IC102, IC103	μPC78M12H
**	Q104	2SB834
**	Q101—Q103	2SC1740S (2SC2603)
*	D101	KZL150
△ *	D106	3D4B41
*	D105	RD13EB (HZ13EB)
△ *	D103, D104, D107—D110	S5566 (11E2)
*	D102	1S2471

RELAY

Mark	Symbol & Description	Part No.
**	RY101 Relay	ASR-111

COIL

Mark	Symbol & Description	Part No.
	L103, L104 AF choke coil	ATH-053

CAPACITORS

Mark	Symbol & Description	Part No.
	C131, C132 Ceramic (0.01/AC150V)	ACG-019
	C128, C129 Electrolytic (3300/42V)	ACH-249

Mark	Symbol and Description	Part No.
	C105, C106	CCCSL470J50 (CCDSL470J50)
	C101, C102	CCCSL101J50 (CCDSL101J50)
	C119	CEASR47M100
	C113, C115, C116	CEAS100M50
	C107, C108	CEAS101M10
	C109, C110, C118	CEAS101M25
	C114	CEAS101M50
	C103, C104	CEAS2R2M50
	C126, C127	CEAS330M25
	C130	CEAS332M25
	C111, C112, C124, C125	CEAS470M25
	C133	CEAS470M50
	C117	CEAS471M6
	C120, C121	CKCYF473Z50 (CKDYF473Z50)

RESISTORS

NOTE: When ordering resistors, convert the resistance value into code form, and then rewrite the part no. as before.

Mark	Symbol & Description	Part No.
△	R129, R130	RD1/2PMF□□□J
	R133, R137, R138	RD1/2PM□□□J
△	R125, R126, R141, R142, R134, R118, R119, R120, R136	RD1/4PMF□□□J
	R124	RS1LMF681J
	R131	RS2LMF221J
	R132	RS2LMF271J
	R139	RS2LMF4R7J
	Other resistors	RD1/4PM□□□J

OTHERS

Mark	Symbol & Description	Part No.
	Terminal (SPEAKERS)	AKE-109
	Terminal (DC SUPPLY)	AKN-034
	Terminal (TO TUNER)	AKP-083
	Screw	ABA-271
	Heat proof rivet	AEC-940
	Screw 3×6	PBZ30P060FMC


Fuse Holder Assembly

RESISTOR


Mark	Symbol & Description	Part No.
△	R140 Carbon composition (2.2M 1/2W)	ACN-209

8. P.C. BOARDS CONNECTION DIAGRAM

A

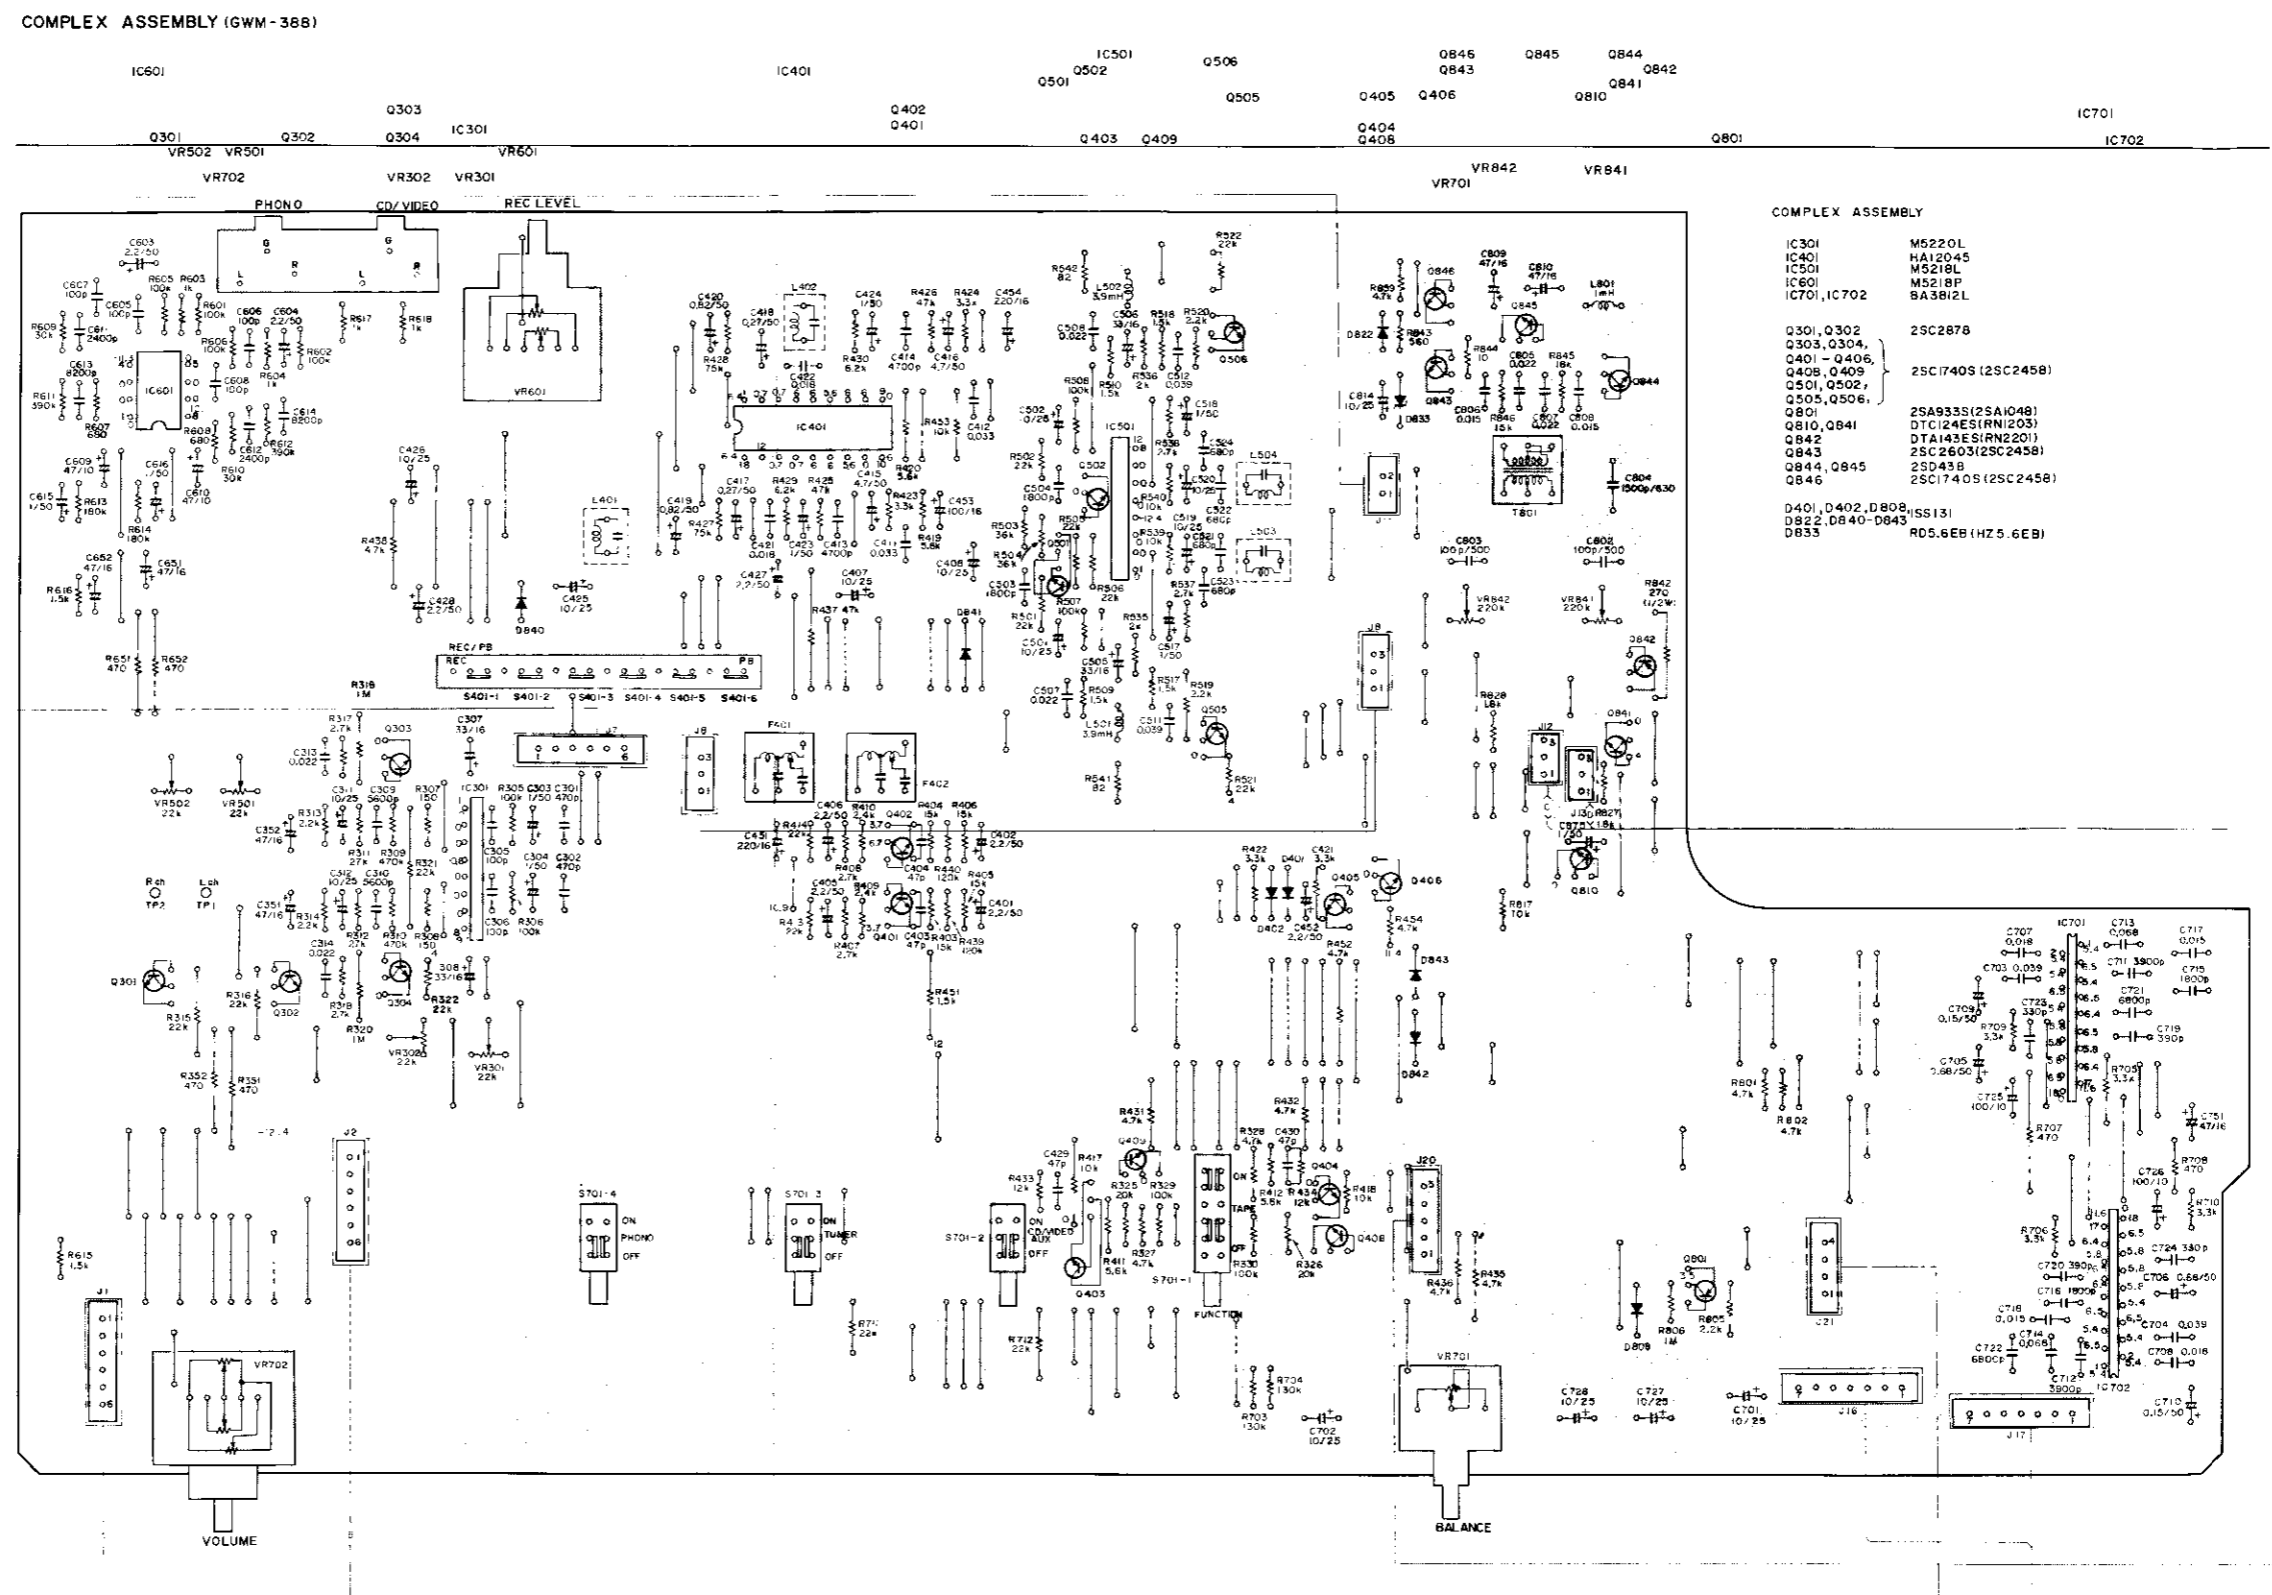

B

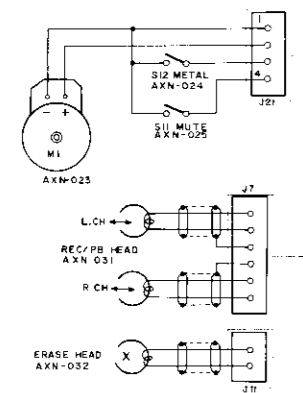


C

D

VARIABLE RES-STOP ASSEMBLY


POWER AMP ASSEMBLY (GWH-179)

IC101
IC102
IC103
Q102 Q101
Q103
Q104

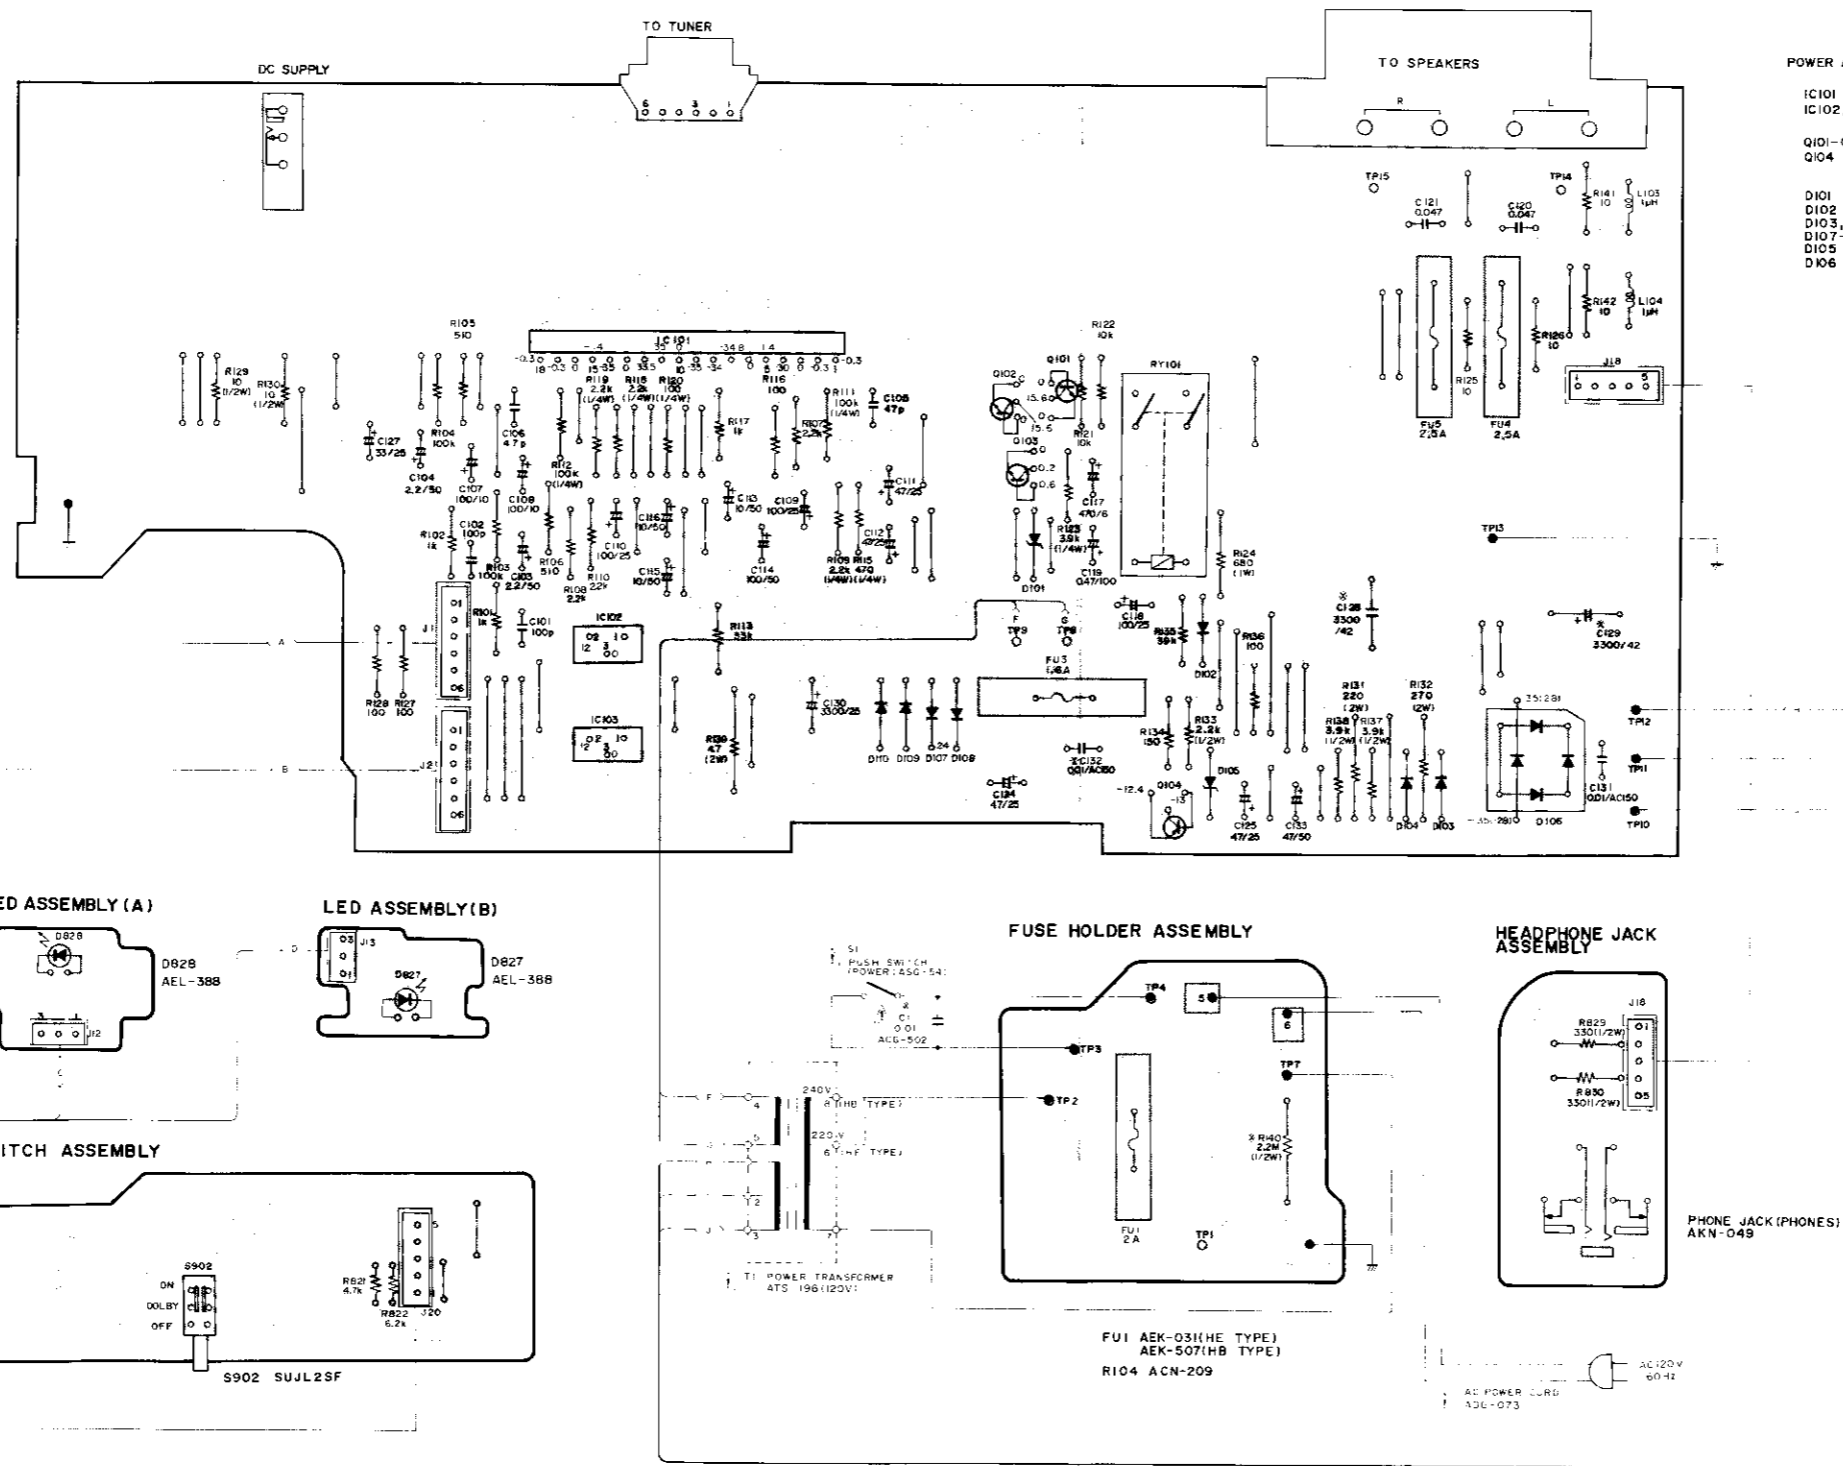


POWER AMP ASSEMBLY

IC101	STK4141-2S
IC102, IC103	μPC78M12H
Q101-Q103	2SC1740S (2SC2603)
Q104	2SB834
D101	KZL150
D102	1S2471
D103, D104,	S5566 (IE2)
D107-D110	RD13E8 (HZ13E8)
D105	3D4B41
D106	


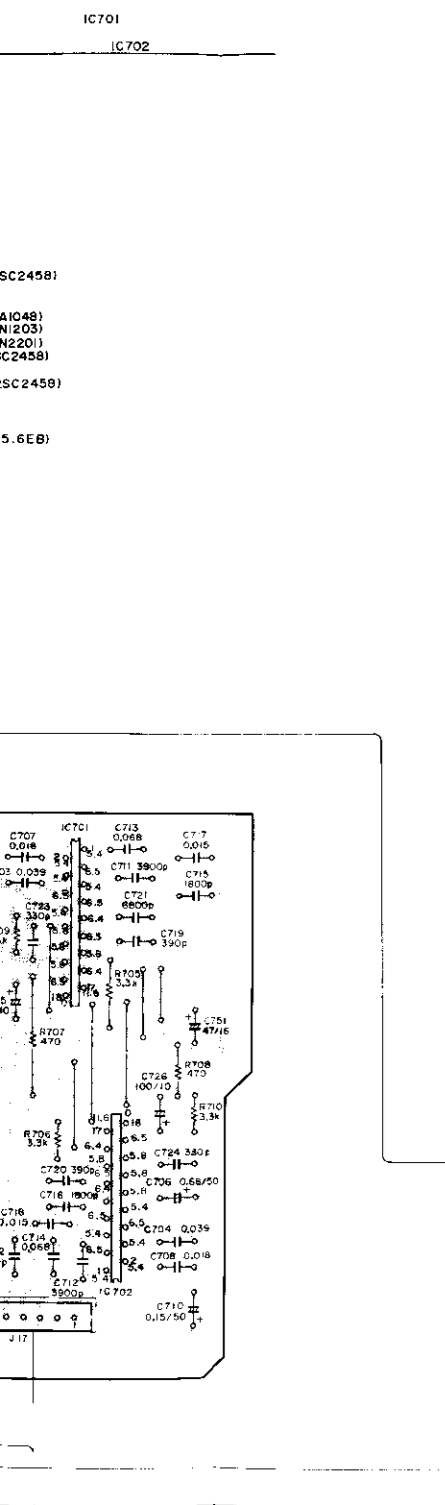


A
B
C
D

9. SCHEMATIC DIAGRAM

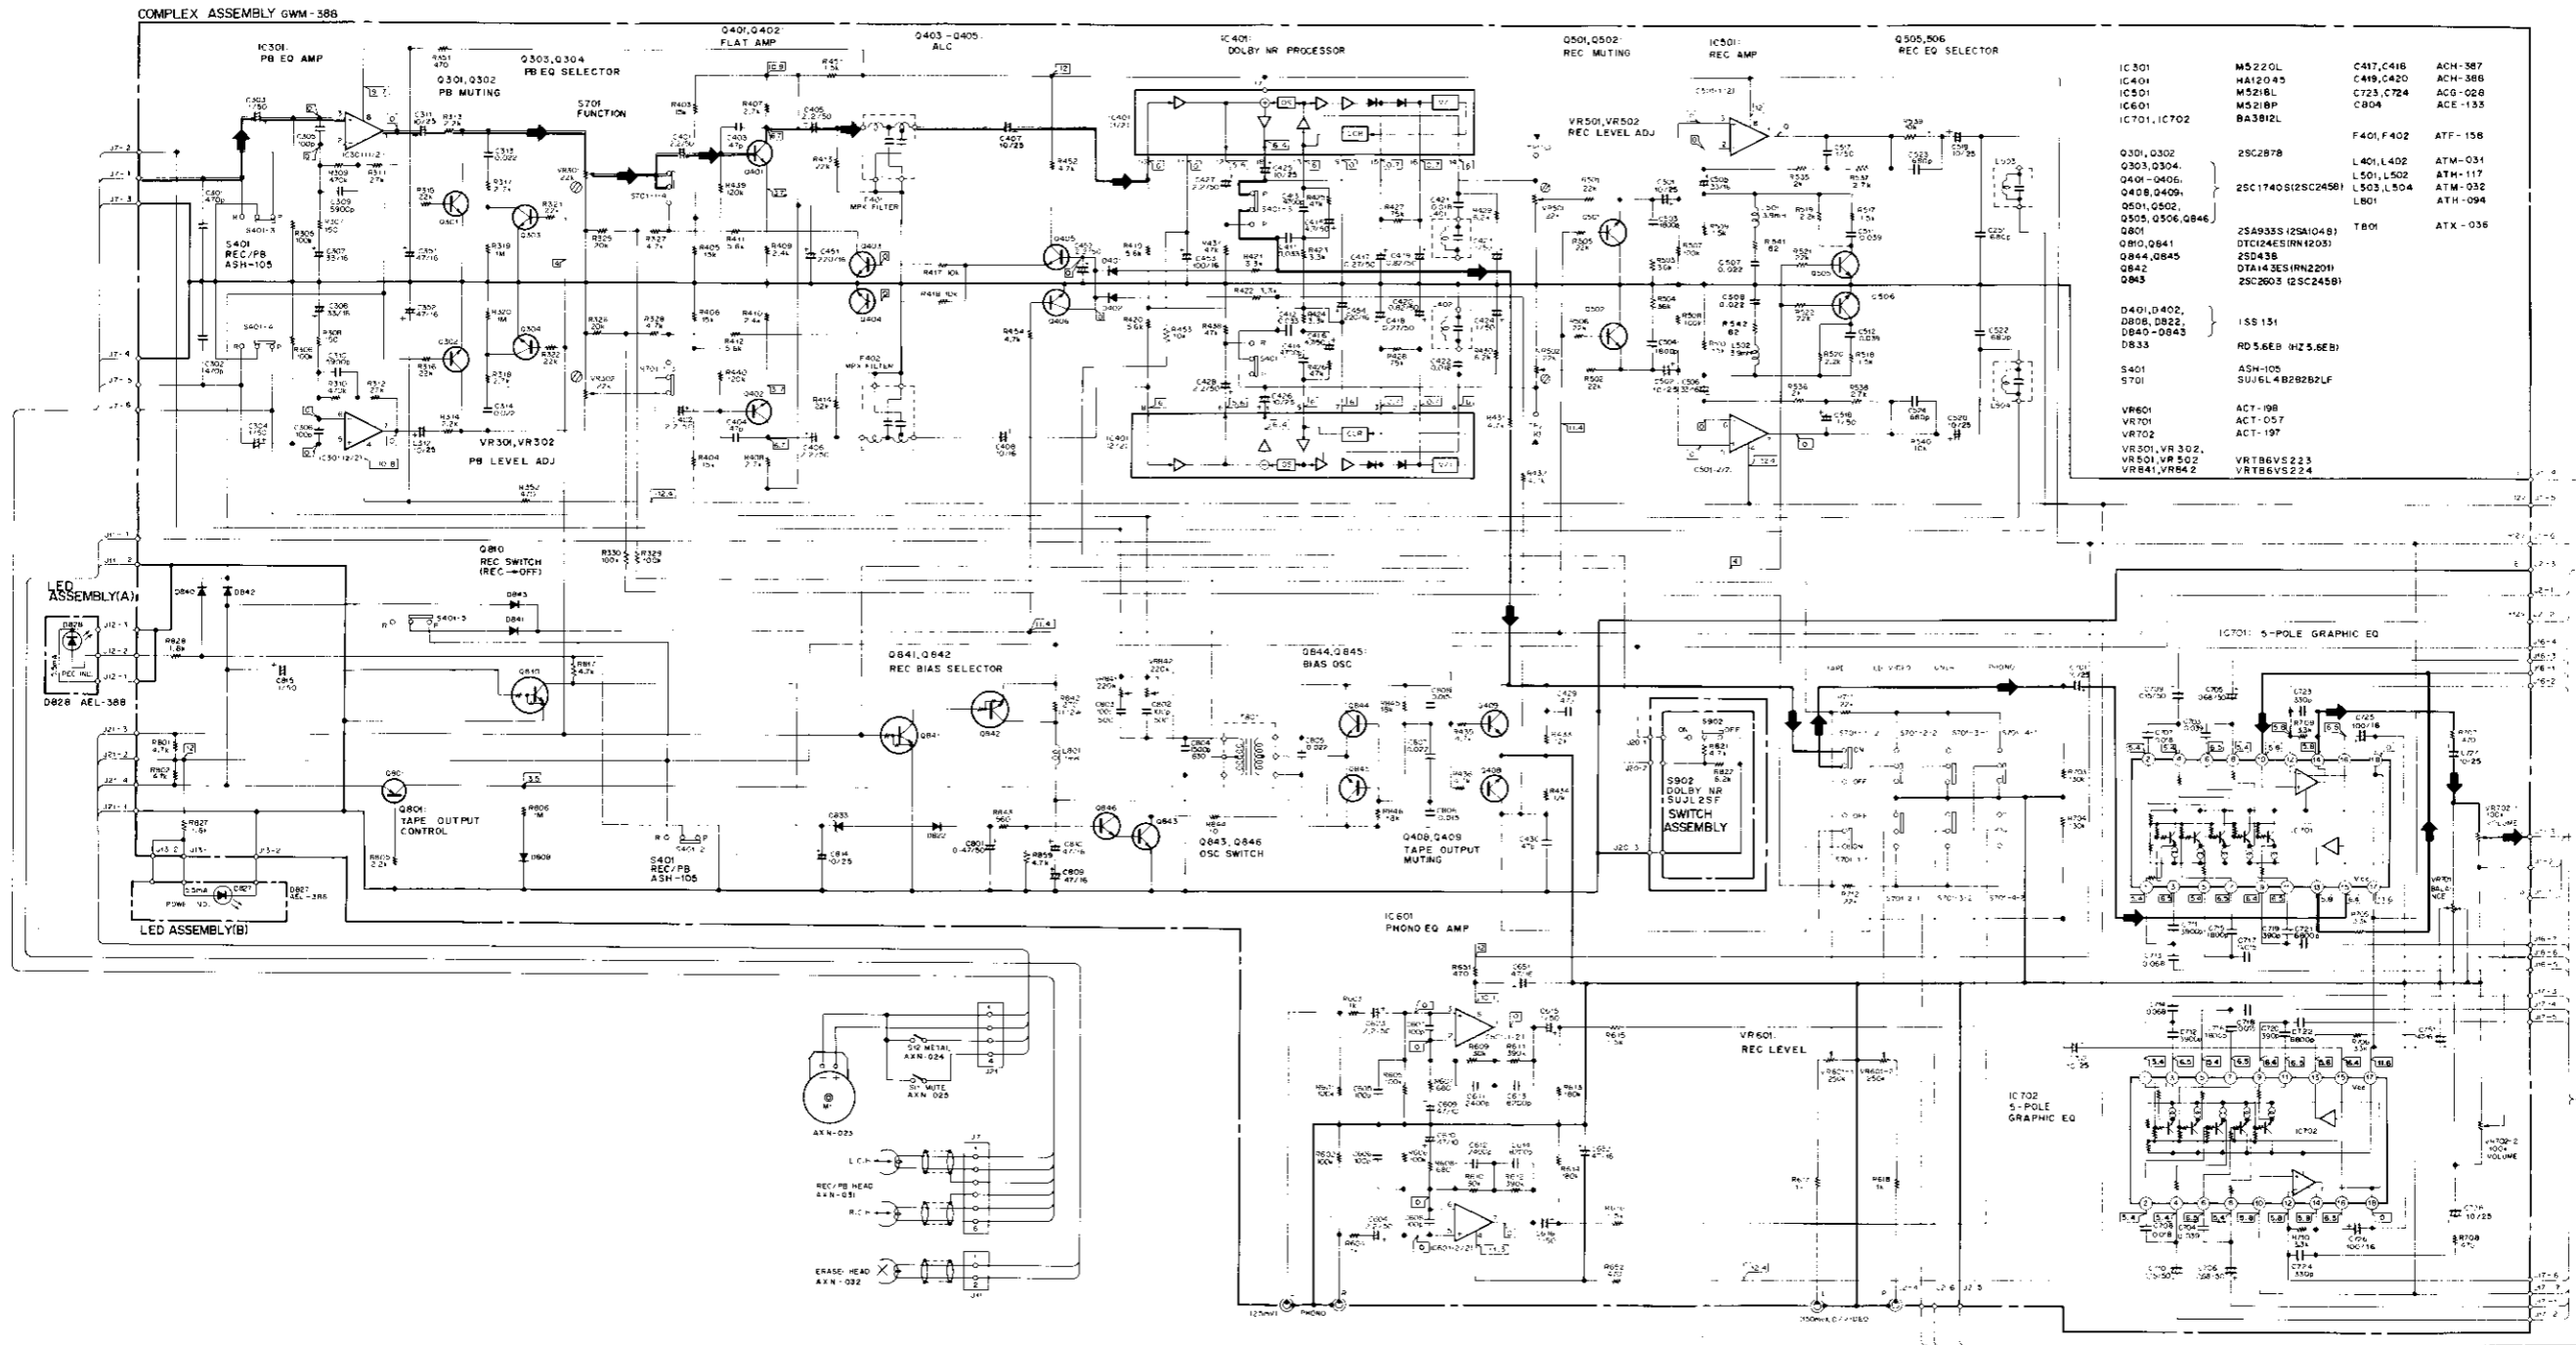

IC301	M5220L	C417, C418	ACH-387
IC401	HA12043	C419, C420	ACH-386
IC501	M5218L	C723, C724	ACH-026
IC601	M5218P	C804	ACE-133
IC701, IC702	BA3812L	F401, F402	ATF-158
Q301, Q302		25C2878	
Q303, Q304		L401, L402	ATM-031
Q401-Q406		L501, L502	ATM-117
Q408, Q409		L503, L504	ATM-032
Q501, Q502		L801	ATX-094
Q505, Q506, Q846		T801	ATX-036
Q801		25A935S (25A104S)	
Q810, Q841		DTC124ES (RN120S)	
Q844, Q845		2SD43B	
Q842		DTA143ES (RN220S)	
Q843		25C2605 (25C245B)	
D401, D402		1SS151	
D808, D822		RD5.6E8 (HZ5.6E8)	
D840-D843			
D833			
S401		ASH-100	
S701		SU16L4B2822LF	
VR601		ACT-108	
VR701		ACT-057	
VR702		ACT-197	
VR301, VR302		VRT86VS223	
VR501, VR502		VRT86VS224	
VR841, VR842			

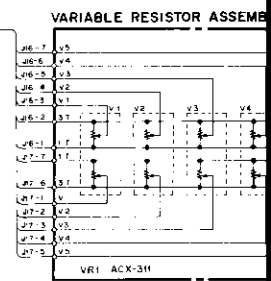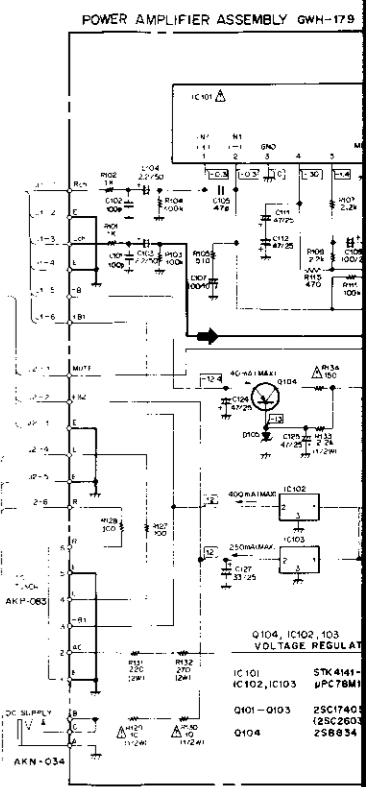

A
B
C
D

1 2 3 4 5 6 7

6

7


8

9


External Appearance of Transistors and ICs

A


BA3812L

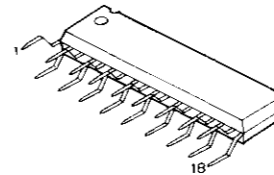

2SA933S
2SC1740S

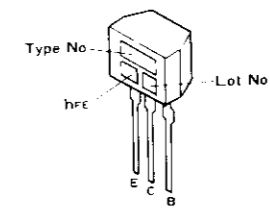


DTA143ES
DTC124ES

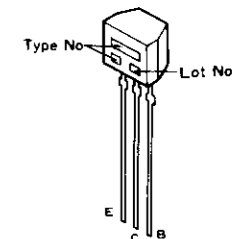


B


HA12045

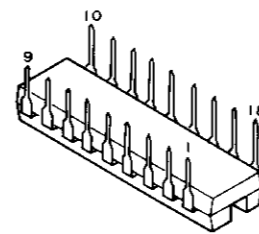

2SA1048
2SC2458

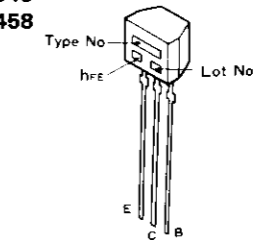


RN1203
RN2201

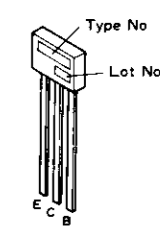


C


M5218L
M5220L

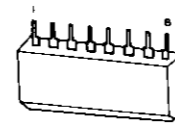


2SB834

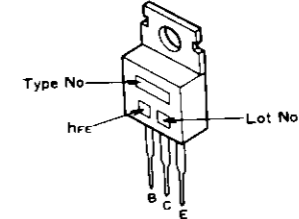

M5218P

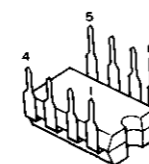


2SC2603

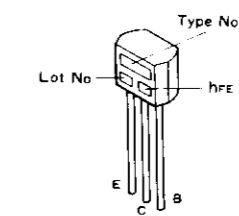


D


STK4141-2S

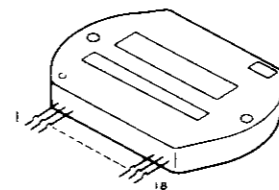


2SC2878

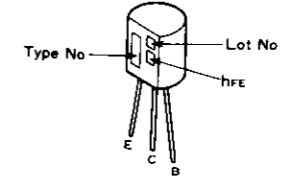

μPC78M12H

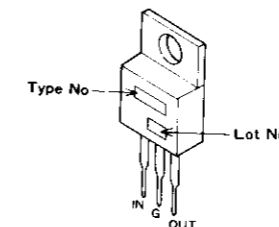

2SD438

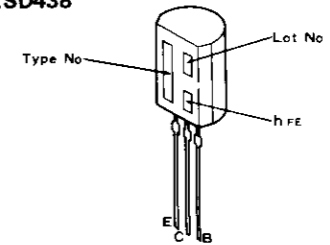


ACH-307
ACH-308
ACG-026
ACE-133

ATF-158



ATM-031
ATH-817
ATM-032
ATH-094
ATX-036

- RESISTORS:
Indicated in Ω, 1/4W and 1/8W, 5% tolerance unless otherwise noted, k, M, MD, (F), ±1%, (G), ±2%, (K) ±10%, (M), ±20% tolerance
- CAPACITORS:
Indicated in capacity (μF)(voltage (V) unless otherwise noted p, nF, indication without voltage = 50V except electrolytic capacitor
- VOLTAGE CURRENT:
V: Signal voltage at 25W = 25W, 811 output (1 kHz)
V: DC voltage (V) at no input signal value in () is DC voltage at rated power
mA: DC current at no input signal
- OTHERS:
○: Signal route
◇: Adjusting point
△: mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designations.
X: marked capacitors and resistors have parts numbers


HEADPHONE JACK ASSEMBLY

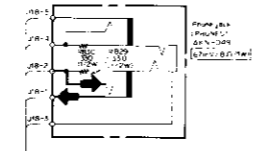

FUSE HOLDER ASSEMBLY

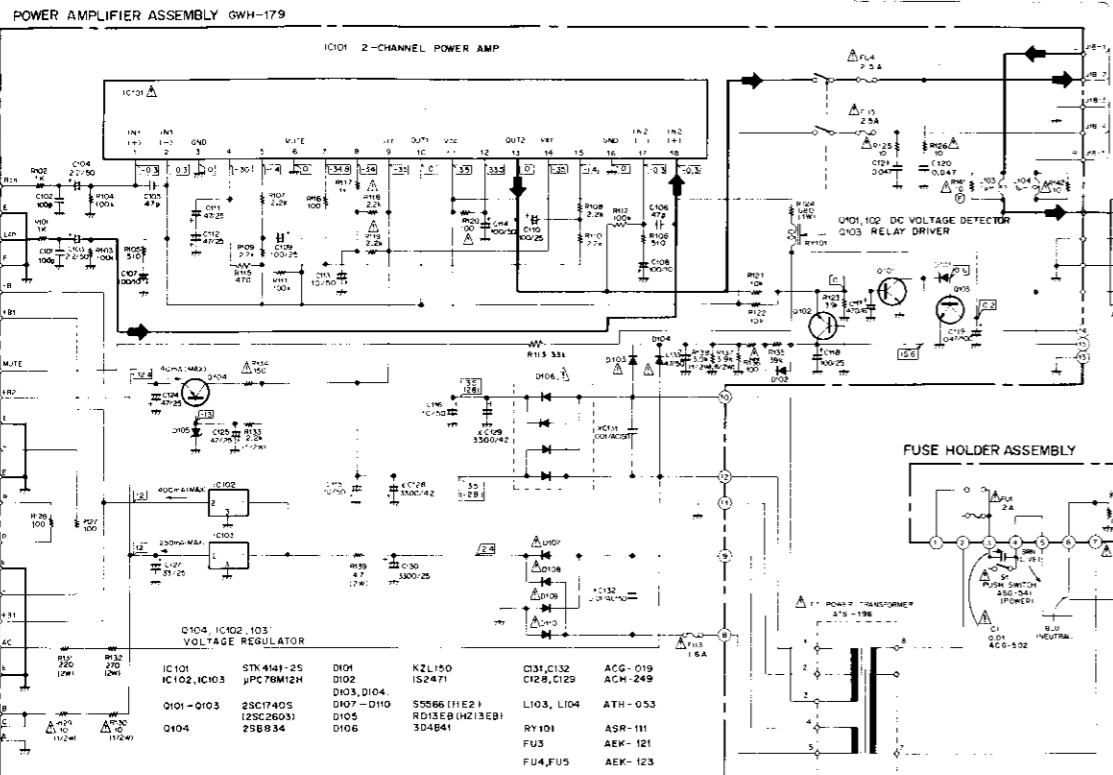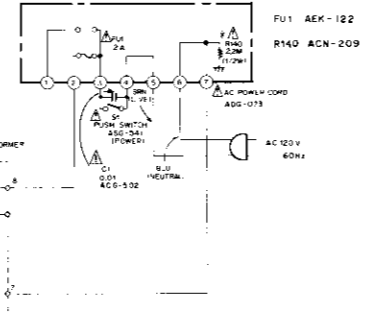

VARIABLE RESISTOR ASSEMBLY

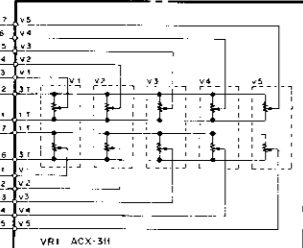

- SWITCHES:
(OUTSIDE OF P.C. BOARD)
S1: POWER ON-OFF
(TAPE TRANSPORT UNIT)
S11: MUTE ON-OFF
S12: TAPE TYPE METAL ON-OFF
(COMPLEX ASSEMBLY)
S401: REC./PB SELECTOR RLC-PLAY
S701: FUNCTION
S701-1: TAPE ON-OFF
S701-2: CD/VIDFO ON-OFF
S701-3: TUNER ON-OFF
S701-4: PHONO ON-OFF
(SWITCH ASSEMBLY)
S902: DOLBY NR ON-OFF

THE UNDERLINED INDICATES THE SWITCH POSITION
This is the basic schematic diagram, but the actual circuit may vary due to improvements in design

6

7

8

9

12-2. ELECTRICAL ADJUSTMENTS

Before commencing any electrical adjustments, make sure the following checked/completed.

1. All mechanical adjustments must have been completed.
2. The heads must be clean and demagnetized.
3. 0dB=1V during level measurements.
4. Use the specified tapes for each adjustment. Although test tapes have both A and B sides, only use side A where the label is attached.
 STD-331B: Playback adjustment
 STD-608A: NORMAL blank tape
 STD-610: METAL blank tape
5. Prepare the following measuring equipment. AC millivoltmeter, audio generator, attenuator, oscilloscope.
6. Adjust both left and right channels unless otherwise specified.

7. And unless indicated otherwise, leave the DOLBY NR switch in the OFF position.
8. Let the set warm up for at least a few minutes before commencing adjustments. And before commencing the record/playback frequency response adjustment, let the set "age" for three to five minutes.
9. Always adjust the set in the given adjustments order. If the order is changed, proper adjustment will not be possible, and this may result in loss of performance.

Adjustment Procedure

1. Head azimuth adjustment
2. Playback level adjustment
3. Recording/Playback frequency response
4. Recording level adjustment




Fig. 12-4 Test tape STD-331B

• ADJUSTMENT (with auto tape selector function)							
1. Head Azimuth Adjustment • Set VR301 and VR302 (playback level adjustment) to MAX positions (turn fully clockwise)							
Tape selector	Mode	Input signal/test tape	Adjustment location	Measuring location	Adjustment value	Remarks	
NORM	PLAY	Play 10kHz–20dB portion of STD-331B test tape.	Head azimuth adjustment screw. (Fig. 12-5)	TP1 (L) TP2 (R)	Maximum playback signal level.	Apply "screw-lock" after completing adjustment.	
2. Playback Level Adjustment • Adjust precisely since this adjustment sets the playback Dolby level.							
Tape selector	Mode	Input signal/test tape	Adjustment location	Measuring location	Adjustment value	Remarks	
NORM	PLAY	Play the 315 Hz 0dB portion of the STD-331B test tape.	VR301 (L) VR302 (R)	TP1 (L) TP2 (R)	-7.7dBv (412mV)		
3. Recording/Playback Frequency Response Adjustment							
Tape selector	Mode	Input signal/test tape	Adjustment location	Measuring location	Adjustment value	Remarks	
NORM	REC	Apply a 315Hz signal to the CD/VIDEO terminals. Set the CD/VIDEO switch to ON.	1	Input signal level to be applied to the CD/VIDEO terminals.	TP1 (L) TP2 (R)	-27.7dBv (41mV)	Set the INPUT level control to the maximum position (rear panel).
NORM	REC/PLAY	Record 315Hz and 6.3kHz signals on the STD-608A test tape, and then playback signals.	2	VR841 (L) VR842 (R)	TP1 (L) TP2 (R)	Repeat the recording and playback processes and adjust accordingly until the 6.3kHz playback level is within $0 \pm 0.5\text{dB}$ of the 315Hz level.	
• Change the test tape and the DOLBY NR switch position and check that the frequency response zone indicated in Fig. 12-8, 9 is satisfied.							
4. Recording Level Adjustment							
Tape selector	Mode	Input signal/test tape	Adjustment location	Measuring location	Adjustment value	Remarks	
NORM	REC	Apply a 315Hz signal to the CD/VIDEO terminals. Set the CD/VIDEO switch to ON.	1	Input signal level to be applied to the CD/VIDEO terminals.	TP1 (L) TP2 (R)	-7.7dBv (412mV)	Set the INPUT level control to the maximum position (rear panel).
NORM	REC/PLAY	Record the 315Hz signal onto the STD-608A test tape, and then play the signal back.	2	VR501 (L) VR502 (R)	TP1 (L) TP2 (R)	Repeat the recording and playback processes, and adjust accordingly until a playback level of -7.7dBv (412mV) is obtained.	
METAL	REC/PLAY	Record the 315Hz signal onto the STD-610 test tape, and then play the signal back.	3		TP1 (L) TP2 (R)	Check that the 315Hz playback level is $-7.7\text{dBv} \pm 1.5\text{dB}$.	

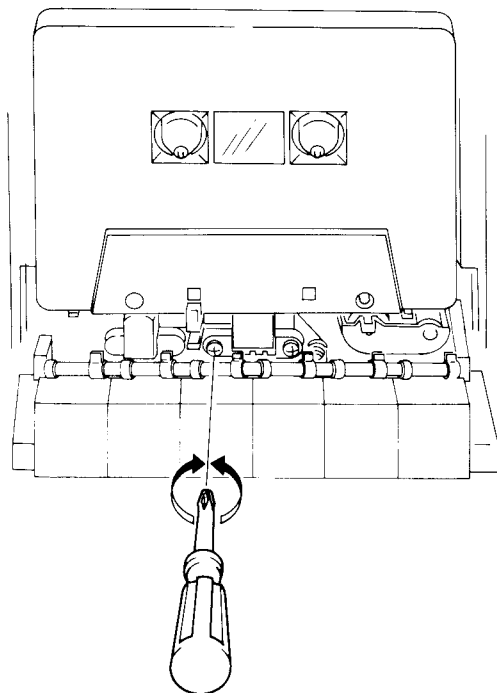


Fig. 12-5 Head azimuth adjustment

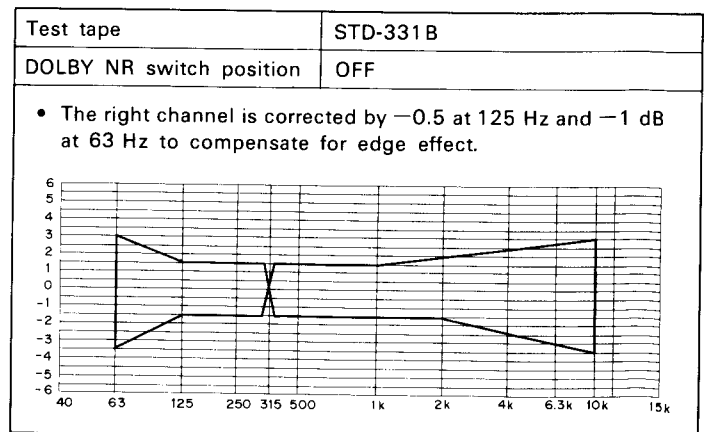


Fig. 12-6 Playback frequency response tolerance zone

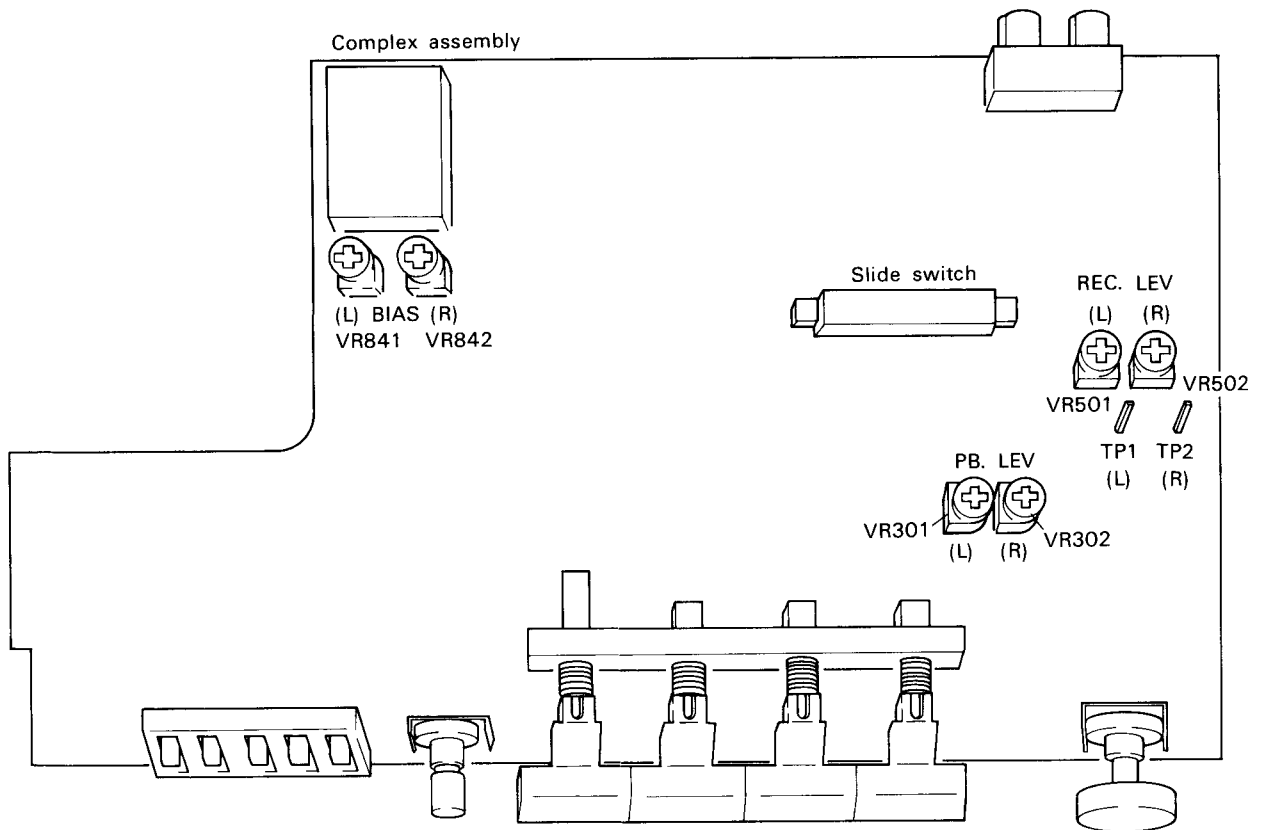


Fig. 12-7 Arrangement diagram of adjusting parts

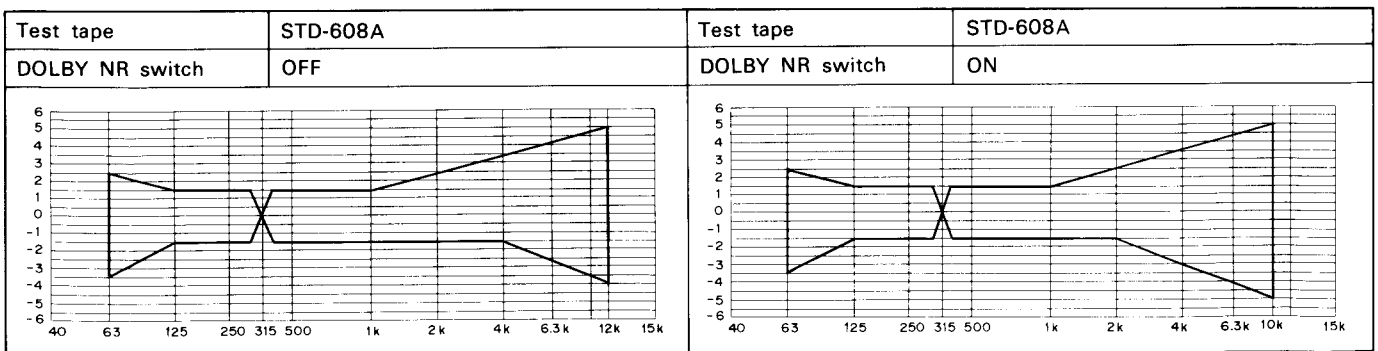


Fig. 12-8 Recording & playback frequency response tolerance zone (NORM)

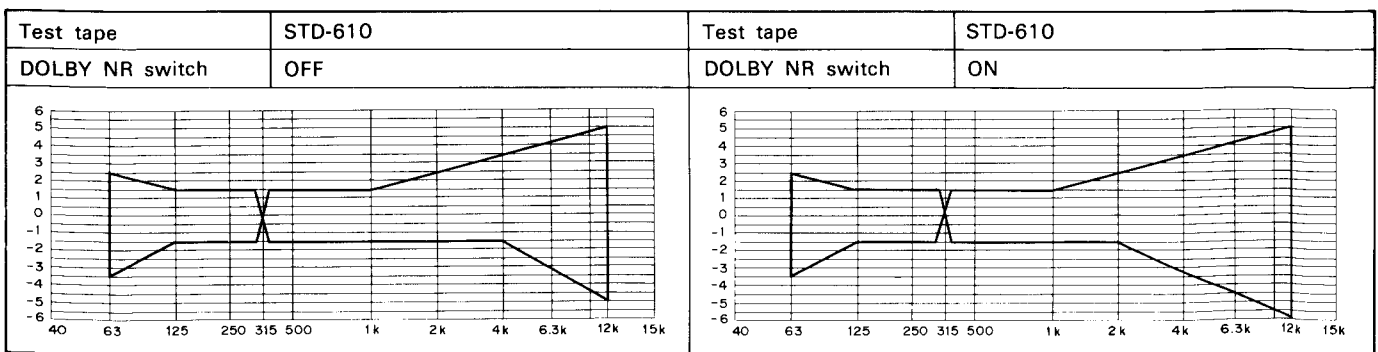


Fig. 12-9 Recording & playback frequency response tolerance zone (METAL)

12. RÉGLAGE

12-1. RÉGLAGES MECANQUES

Avant le réglage

Nettoyer les deux embases de bobine, le cabestan et le rouleau presseur avec un tissu imbibé d'alcool.

Réglage du rouleau presseur

1. Placer la platine en mode play back (lecture).
2. Pousser doucement la jauge de tension contre le bras du rouleau presseur et séparer légèrement le rouleau presseur du cabestan.
3. Puis, replacer le rouleau presseur contre le cabestan, et lire la valeur indiquée lorsque le rouleau presseur se met à tourner. Si la lecture est dans la plage 300 — 500g, remplacer le ressort du rouleau presseur.

Vérification du couple d'embase de bobine

Mesurer la couple torsionmètre en modes, lecture, avance rapide (FF) et rembobinage (REW). Les valeurs mesurées devraient être comprises dans les plages indiquées dans le Tableau 1.

Si les valeurs mesurées ne sont pas comprises dans ces plages, remplacer le montage de bobine T, et/ou le montage de bobine S ou le montage de poulie intermédiaire P.

Tableau 1

	Embase de bobine T (côté droit)	Embase de bobine (côté gauche)
Mode PLAY	35g · cm—70g · cm	*1g · cm—5g · cm
Mode FF	70g · cm—140g · cm	*1g · cm—5g · cm
Mode REW	*1g · cm—5g · cm	70g · cm—140g · cm

* Couple tension arrière

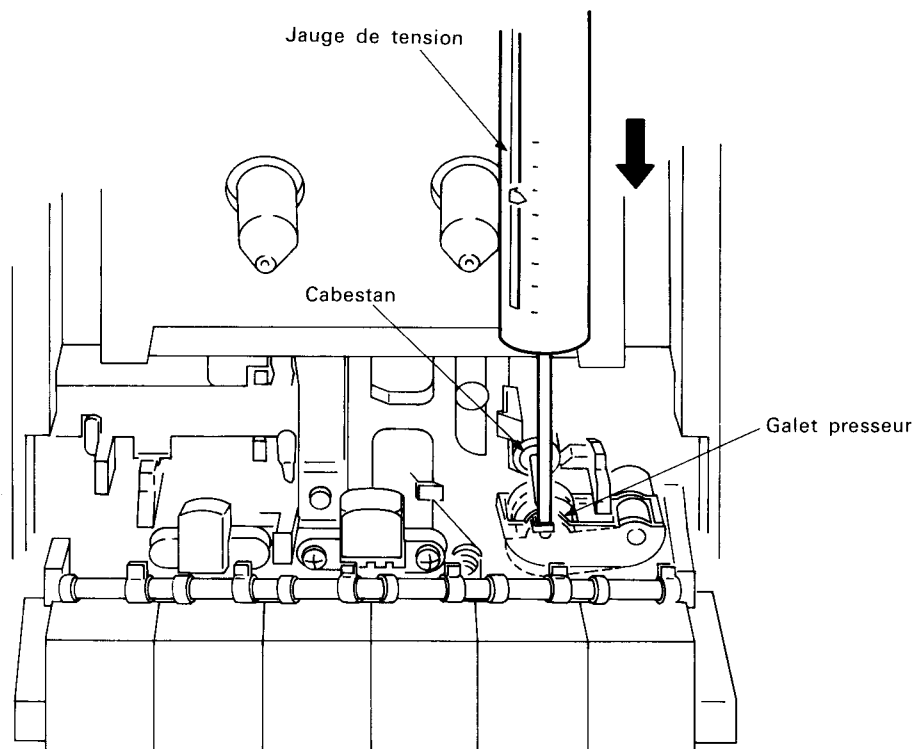


Fig. 12-1 Réglage du rouleau presseur

Réglage de la vitesse de la bande

1. Connecter le fréquencemètre à la borne TP1 de l'ensemble.
2. Régler le commutateur TAPE en position ON.
3. Placer la bande-test STD-301 sur la platine.
4. Vérifier si la fréquence de lecture de la platine est de $3010 \text{ Hz} \pm 5 \text{ Hz}$.
5. Si la fréquence lue est en dehors de cette marge, régler la résistance semi-fixe par l'orifice de réglage situé à l'arrière du moteur pour obtenir $3010 \text{ Hz} \pm 10 \text{ Hz}$.

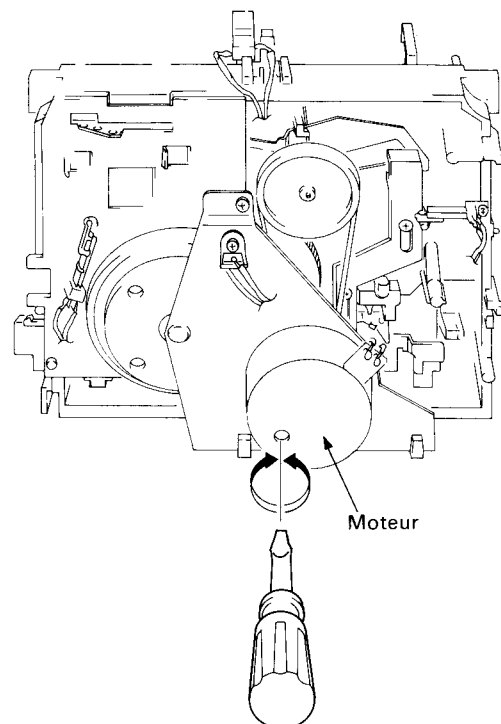


Fig. 12-2 Schéma de localisation des pièces de réglage

Platine combinée REC

1. Vérifier que le commutateur coulissant est correctement en contact lorsque l'unité de transport de bande est en mode enregistrement.
2. Déplacer la position de prise du mécanisme combiné REC si le commutateur coulissant n'est pas correctement en contact.

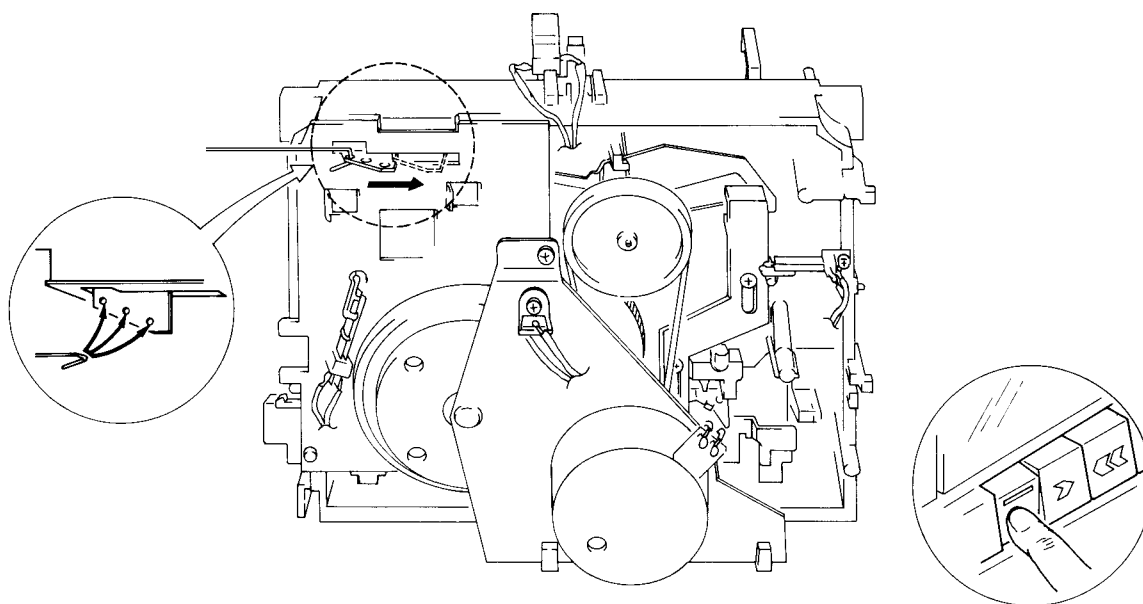


Fig. 12-3 Réglage mixte déenregistrement

12-2. RÉGLAGES ÉLECTRIQUES

■ Avant de commencer à procéder aux réglages électriques, bien effectuer les vérifications suivantes.

1. Tous les réglages mécaniques ont été effectués.
2. Les têtes doivent être propres et démagnétisées.
3. 0 dB=1V pendant les mesures de niveau.
4. Utiliser les bandes spécifiées pour chaque réglage. Bien que les bandes d'essai aient à la fois une face A et une face B, n'utiliser que la face A sur laquelle est attachée l'étiquette.
 STD-331B: Réglage de la reproduction.
 STD-608A: Bande vierge ordinaire.
 (NORMAL)
 STD-610: Bande vierge au métal (METAL)
5. Préparer les équipements de mesure ci-après: millivoltmètre CA, générateur audio, atténuateur, oscilloscope.
6. Régler à la fois le canal gauche et le canal droit, sauf spécification contraire.

7. Sauf spécification contraire, laisser le commutateur de réduction de bruit DOLBY en position arrêt (OFF).
8. Laisser l'appareil chauffer pendant au moins quelques minutes avant de commencer les réglages. Avant de commencer le réglage de la réponse en fréquences enregistrement/reproduction, laisser l'appareil fonctionner de trois à cinq minutes.
9. Toujours procéder aux réglages dans l'ordre indiqué. Si cet ordre est modifié, il ne sera plus possible d'effectuer des réglages correctement, et cela pourrait entraîner une dégradation des performances.

Procédure de réglage

1. Réglage de l'azimutage de la tête.
2. Réglage du niveau de reproduction.
3. Réponse en fréquences enregistrement/reproduction.
4. Réglage du niveau d'enregistrement.




Fig. 12-4 Band d'essai STD-331 B

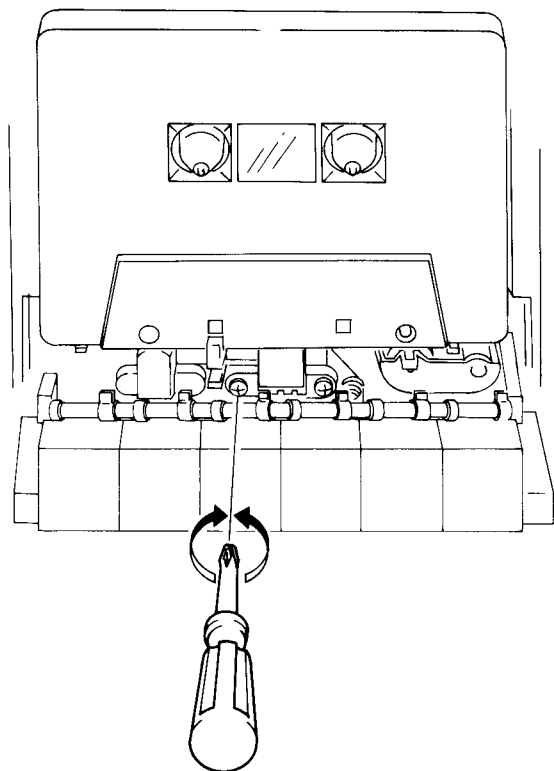


Fig. 12-5 Réglage d'azimut de la tête

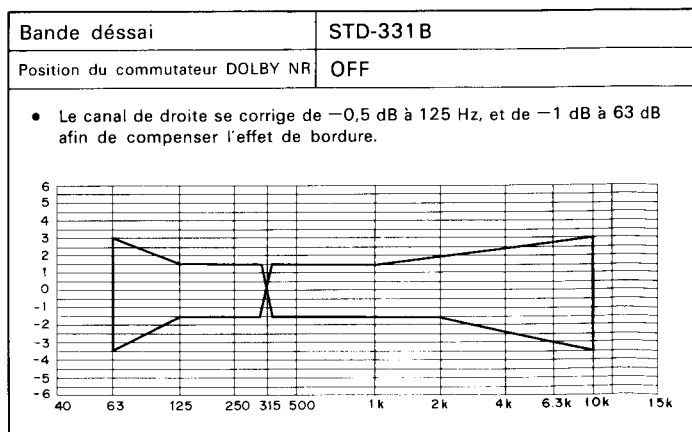


Fig. 12-6 Zone de tolérance de la réponse de fréquence de lecture

• RÉGLAGE (Avec sélecteur automatique de bande)						
1. Réglage de l'azimutage de la tête • Placer le VR301 et le VR302 (Réglage de niveau de reproduction) sur la position maximale (tourner complètement dans le sens des aiguilles d'une montre).						
Sélecteur de bande	Mode	Signal d'entrée/bande d'essai	Emplacement du réglage	Emplacement de mesure	Valeur de réglage	Remarques
Normal (NORM)	Reproduction (PLAY)	Reproduire la portion 10kHz -20dB de la bande d'essai STD-331B.	Vis de réglage de l'azimutage de la tête. (Fig. 12-5)	TP1 (L) TP2 (R)	Niveau de signal de reproduction maximal.	Mettre en place "l'arrêt de vis" après avoir effectué ce réglage.
2. Réglage du niveau de reproduction • Procéder à ce réglage avec précision car celui-ci détermine le niveau de reproduction du DOLBY.						
Sélecteur de bande	Mode	Signal d'entrée/bande d'essai	Emplacement du réglage	Emplacement de mesure	Valeur de réglage	Remarques
Normal (NORM)	Reproduction (PLAY)	Reproduire la portion 315Hz 0dB de la bande d'essai STD-331B.	VR301 gauche (L) VR302 droit (R)	TP1 (L) TP2 (R)	-7,7dBv (412mV)	
3. Réglage de la réponse en fréquences d'enregistrement et de reproduction						
Sélecteur de bande	Mode	Signal d'entrée/bande d'essai	Emplacement du réglage	Emplacement de mesure	Valeur de réglage	Remarques
Normal (NORM)	Enregistrement (REC)	Appliquer un signal 315Hz aux bornes CD/VIDEO. Mettez le commutateur CD/VIDEO sur ON.	1 Entrer le signal de niveau à appliquer aux bornes de CD/VIDEO.	TP1 (L) TP1 (R)	-27,7dBv (41 mV)	Amener la commande de niveau INPUT sur la position maximale (panneau arrière).
Normal (NORM)	Enregistrement/reproduction (REC/PLAY)	Enregistrer des signaux de 315Hz et 6,3kHz sur la bande d'essai STD-608A, et reproduire ensuite les signaux.	2 VR841 gauche (L) VR842 droit (R)	TP1 (L) TP2 (R)	Recommencer les procédures d'enregistrement et de reproduction, et procéder au réglage en conséquence jusqu'à ce que le niveau de reproduction du 6,3kHz soit compris entre 0 ±0,5dB du niveau du 315Hz.	
• Changer la bande d'essai et la position du commutateur de réducteur de bruit DOLBY, et vérifier que la courbe de réponse en fréquences indiquée sur la Fig. 12-8, 9 est respectée.						
4. Réglage du niveau d'enregistrement						
Sélecteur de bande	Mode	Signal d'entrée/bande d'essai	Emplacement du réglage	Emplacement de mesure	Valeur de réglage	Remarques
Normal (NORM)	Enregistrement (REC)	Appliquer un signal 315Hz aux bornes CD/VIDEO. Mettez le commutateur CD/VIDEO sur ON.	1 Entrer le signal de niveau à appliquer aux bornes de CD/VIDEO.	TP1 (L) TP2 (R)	-7,7dBv (412mV)	Amener la commande de niveau INPUT sur la position maximale (panneau arrière).
Normal (NORM)	Enregistrement/reproduction (REC/PLAY)	Enregistrer le signal de 315Hz sur la bande d'essai STD-608A, puis reproduire le signal.	2 VR501 gauche (L) VR502 droit (R)	TP1 (L) TP2 (R)	Recommencer les procédures d'enregistrement et de reproduction, et procéder au réglage jusqu'à ce que un niveau de reproduction de -7,7dBv (412mV) soit obtenu.	
Métal (METAL)	Enregistrement/reproduction (REC/PLAY)	Enregistrer le signal de 315Hz sur la bande d'essai STD-610, puis reproduire le signal.	3	TP1 (L) TP2 (R)	Vérifier que le niveau de reproduction du 315Hz est à -7,7dBv ± 1,5dB.	

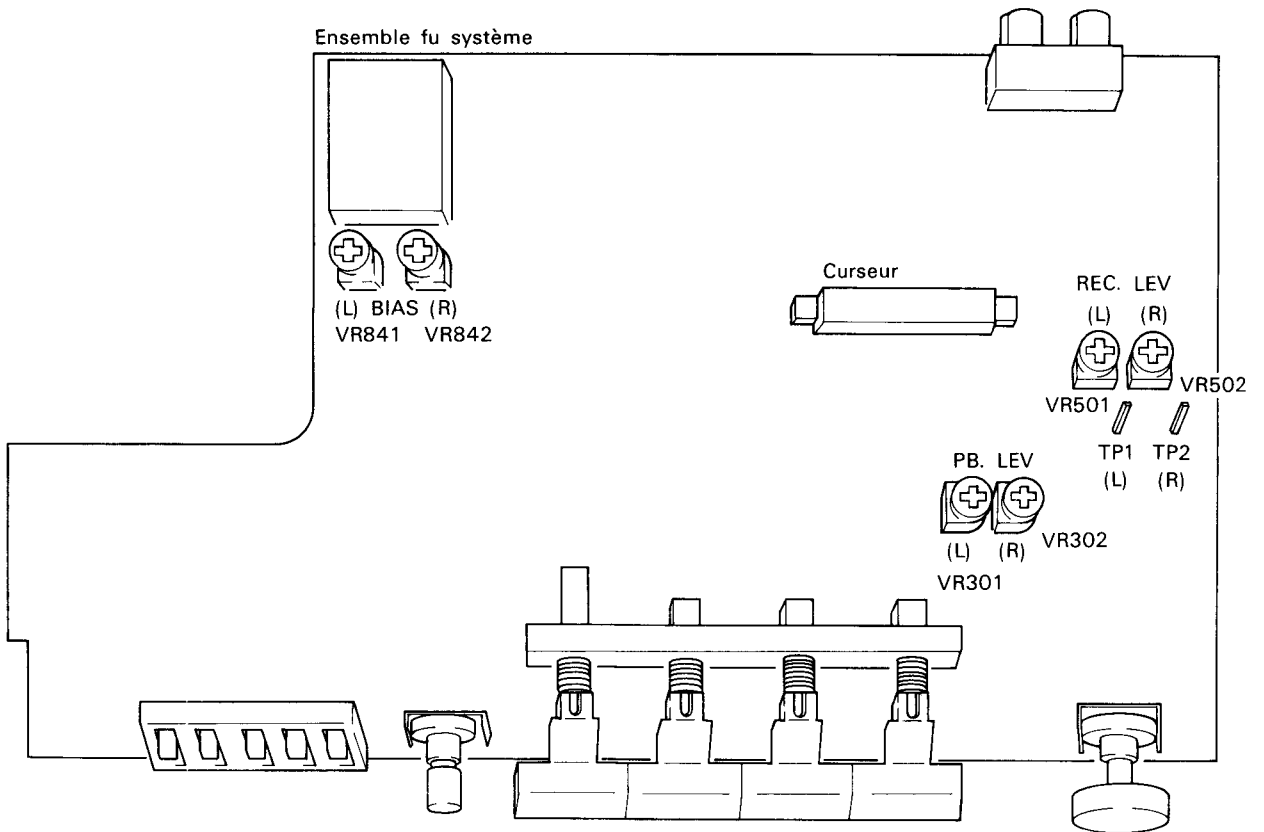


Fig. 12-7 Schéma de localisation des pièces de réglage

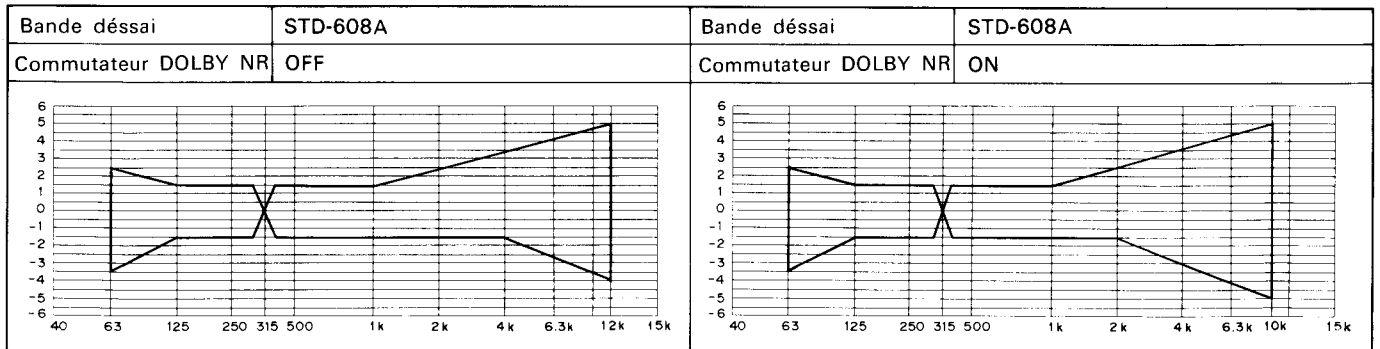


Fig. 12-8 Zone de tolérance de la réponse de fréquence d'enregistrement et de lecture (NORM)

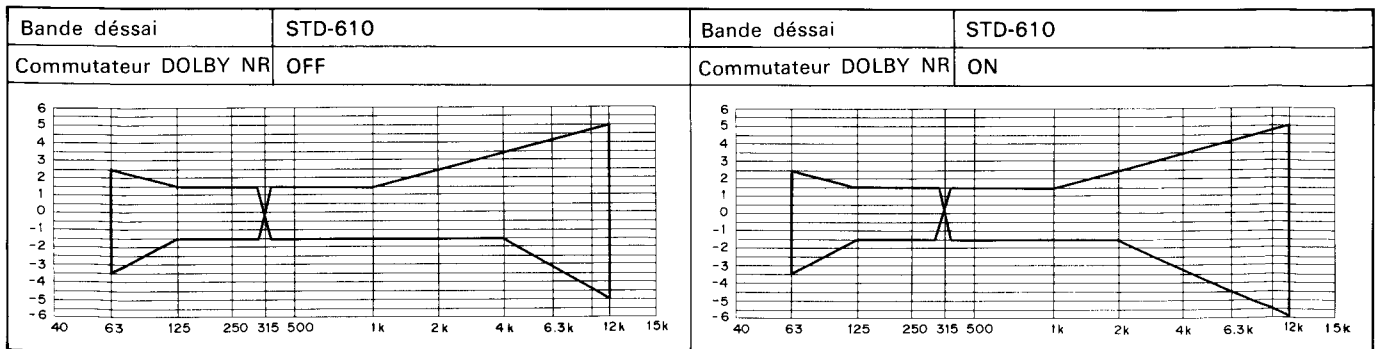


Fig. 12-9 Zone de tolérance de la réponse de fréquence d'enregistrement et de lecture (METAL)

12. AJUSTE

12-1. AJUSTES MECANICOS

Antes del ajuste

Limpie ambas bases del carrete, el cabrestante y el rodillo de prensado con una escobillón humedecido en alcohol.

Ajuste de la presión del rodillo de prensado

1. Ponga el magnetofóno en el modo de reproducción.
2. Suavemente empuje en contra del brazo del rodillo de prensado con el indicador de tensión y separe el rodillo de prensado ligeramente del cabrestante.
3. Luego ponga de nuevo el rodillo de prensado en el cabrestante, y lea la lectura cuando el rodillo de prensado empiece a girar.

Si la lectura no está dentro de 300 a 500g, cambie el resorte de presión del rodillo de prensado.

Inspección del par de torsión de la base de carrete

Mida el par de torsión con un medidor de par de torsión durante la reproducción, en los modos de avance rápido (FF) y rebobinado (REW). Los valores medidos deberán normalmente estar dentro de los rangos permisibles enlistados en la table 1.

Si los valores medidos están fuera de los rangos pertinentes, cambie el conjunto del carrete T, y/o el conjunto del carrete S o el conjunto de la rueda loca P.

Tabla 1

	Base del carrete T (lado R)	Base del carrete S (lado L)
Mode PLAY	35g·cm—70g·cm	*1g·cm—5g·cm
Mode FF	70g·cm—140g·cm	*1g·cm—5g·cm
Mode REW	*1g·cm—5g·cm	70g·cm—140g·cm

* Par de contra tensión

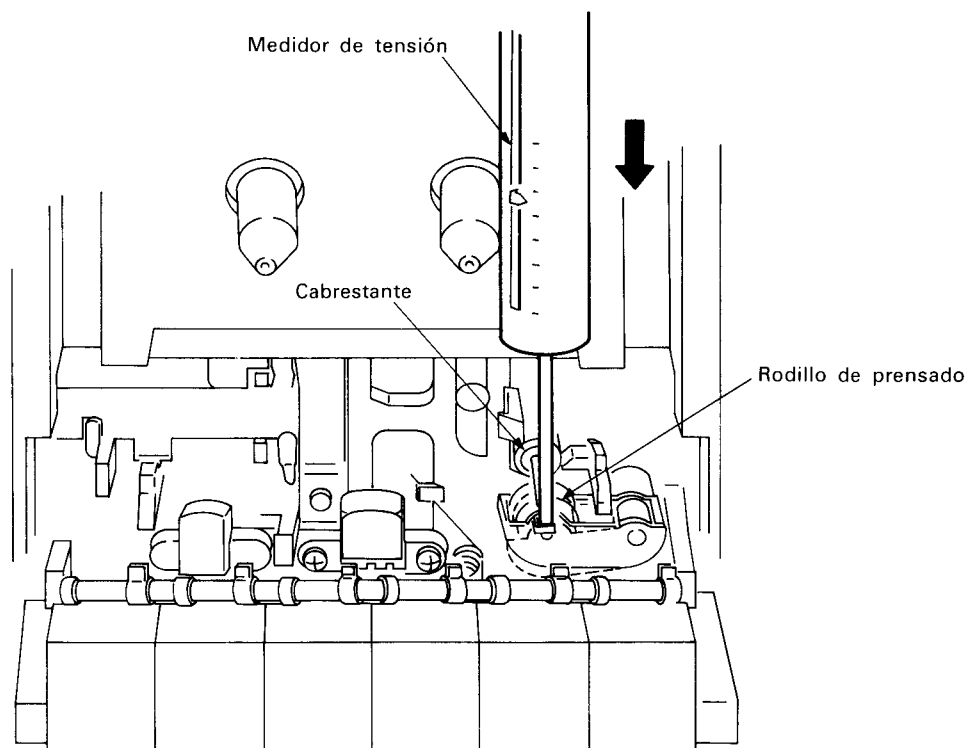


Fig. 12-1 Ajuste de la presión del rodillo de prensado

Ajuste de la velocidad de cinta

1. Conecte el frecuencímetro a la terminal TP1 en el conjunto compuesto.
2. Fije el interruptor de TAPE a la posición ON.
3. Introduzca la cinta de prueba STD-301 en el magnetofono.
4. Inspeccione que la frecuencia de reproducción sea $3010 \text{ Hz} \pm 5 \text{ Hz}$.
5. Si la lectura de la frecuencia está fuera de este rango, ajuste el resistro semifijado a través del orificio de ajuste localizado detras del motor para obtener $3010 \text{ Hz} \pm 10 \text{ Hz}$.

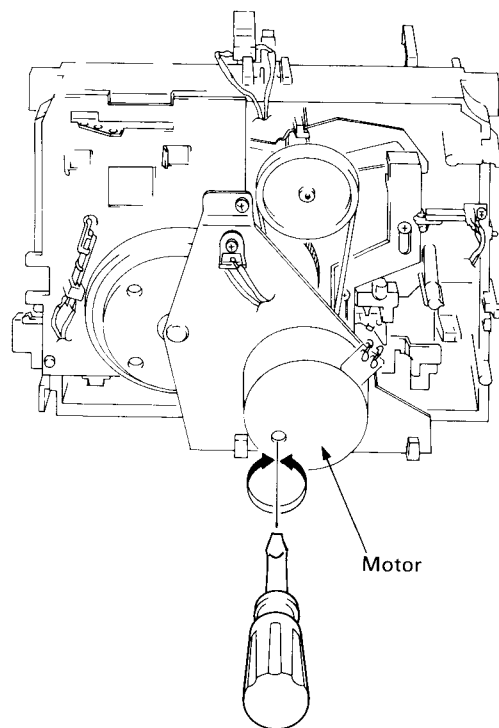


Fig. 12-2 Diagrama de disposición de las partes de ajuste

Inspección de la unión REC

1. Inspeccione que el interruptor deslizable este cambiado completamente cuando la unidad de transporte de la cinta está en el modo de grabación.
2. Mueva la posición de trabado del mecanismo de unión REC si el interruptor deslizable no esta completamente cambiado.

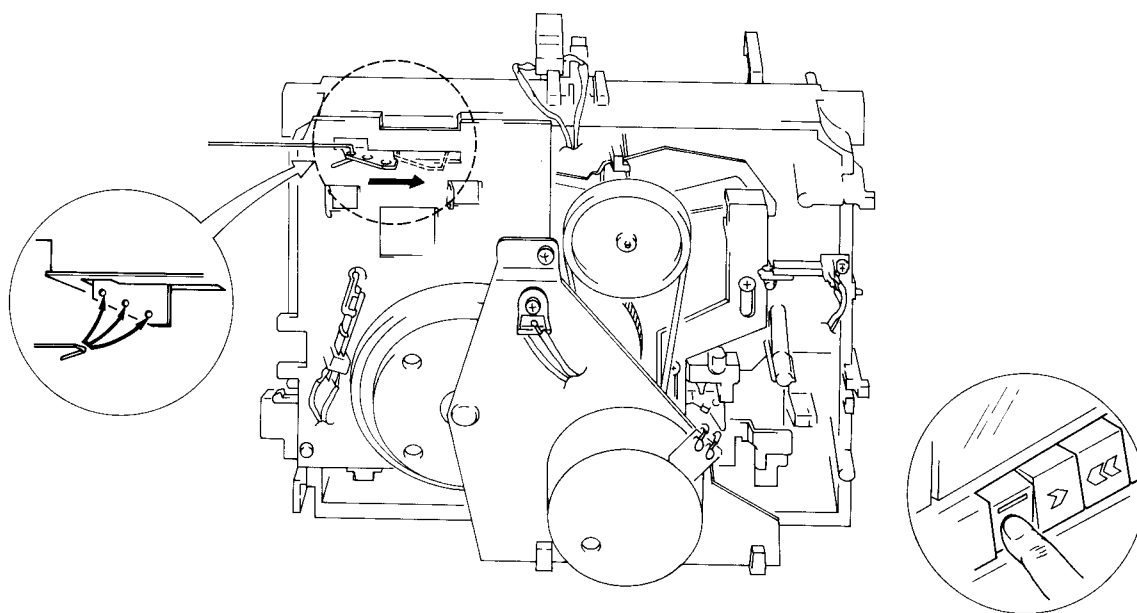


Fig. 12-3. Ajuste de la unión de REC

12-2. AJUSTES ELECTRICOS

■ Antes de iniciar cualquier ajuste, cerciorarse de haber completado y comprobado lo siguiente.

1. Deben haberse completo todos los ajustes mecánicos.
2. Las cabezas deben estar limpias y desmagnetizadas.
3. 0 dB=1V durante las mediciones del nivel.
4. Emplear las cintas especificadas para cada ajuste. Aunque estas cintas están provistas de ambos lados, A y B, emplear sólo el lado A, donde está la etiqueta.
 STD-331B: Ajuste de reproducción.
 STD-608A: Cinta en blanco NORMAL.
 STD-610: Cinta en blanco de METAL.
5. Preparar el siguiente equipo de medición: Un voltímetro de CA, un generador de sonido, un atenuador y un osciloscopio.
6. Ajustar los canales izquierdo y derecho a menos que se especifique lo contrario.
7. Y a menos que se diga lo contrario, dejar el interruptor DOLBY NR en la posición OFF.

8. Dejar que se precaliente el aparato durante algunos minutos antes de iniciar los ajustes. Y antes de empezar el ajuste de la respuesta en frecuencia para reproducción y grabación, dejar que se precaliente de tres a cinco minutos.
9. Ajustar siempre el aparato en el orden de ajuste dado. Si se cambia el orden, no son posibles los ajustes adecuados, lo cual puede ocasionar pérdida del rendimiento.

Procedimientos de ajuste

1. Ajuste del acimut de la cabeza.
2. Ajuste del nivel de reproducción.
3. Respuesta en frecuencia de grabación/reproducción.
4. Ajuste del nivel de grabación.




Fig. 12-4 Cinta de prueba STD-331B

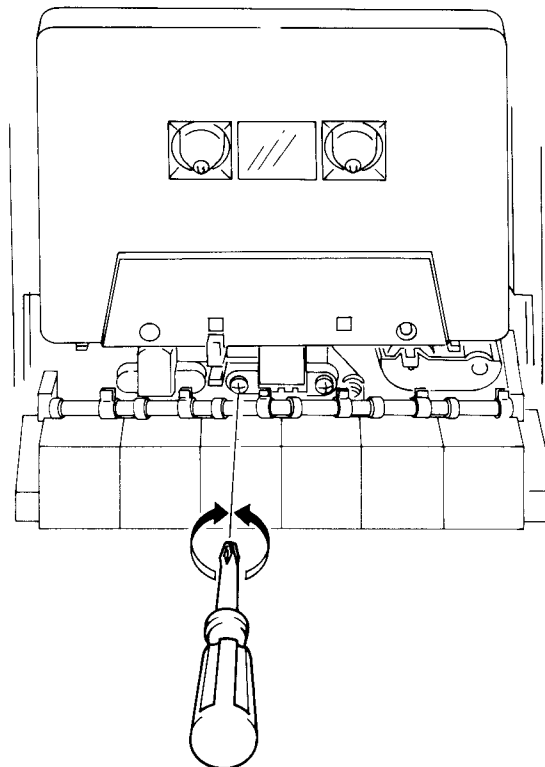


Fig. 12-5 Ajuste del acimut de la cabeza

• AJUSTE (Con la función del selector automático de cintas)						
1. Ajuste del acimut de la cabeza • Ajustar VR301 y VR302 (Ajuste del nivel de reproducción) a las posiciones MAX (Girados completamente a la derecha)						
Selector de cintas	Modo	Señal de entrada/cinta de prueba	Lugar de ajuste	Lugar de medición	Valor de ajuste	Observaciones
NORM	PLAY	Reproducir la parte de 10kHz -20dB de la cinta de prueba STD-331B.	Tornillo de ajuste del acimut de la cabeza. (Fig. 12-5)	TP1 (L) TP2 (R)	Nivel máximo de la señal de reproducción.	Aplicar el "enclavamiento del tornillo" después de terminar el ajuste.
2. Ajuste del nivel de reproducción • Ajustar con precisión porque este ajuste establece el nivel del sistema Dolby de reproducción.						
Selector de cintas	Modo	Señal de entrada/cinta de prueba	Lugar de ajuste	Lugar de medición	Valor de ajuste	Observaciones
NORM	PLAY	Reproducir la parte de 315Hz 0dB de la cinta de prueba STD-331B.	VR301 (L) VR302 (R)	TP1 (L) TP2 (R)	-7,7dBv (412mV)	
3. Ajuste de la respuesta en frecuencia para grabación/reproducción						
Selector de cintas	Modo	Señal de entrada/cinta de prueba	Lugar de ajuste	Lugar de medición	Valor de ajuste	Observaciones
NORM	REC	Aplique una señal de 315Hz a las terminales CD/VIDEO. Fije el interruptor de CD/VIDEO a ON.	Nivel de señal de entrada a ser aplicada a las terminales CD/VIDEO.	TP1 (L) TP2 (R)	-27,7dBv (41mV)	Fije el control de nivel de INPUT (entrada) a la posición máxima (panel trasero).
NORM	REC/PLAY	Grabar las señales de 315Hz y de 6,3kHz en la cinta de prueba STD-608A, y luego reproducirlas.	VR841 (L) VR842 (R)	TP1 (L) TP2 (R)	Repetir los procesos de grabación y reproducción y ajustar consecuentemente hasta que el nivel de reproducción de 6,3kHz esté dentro de $0 \pm 0,5dB$ del nivel de 315Hz.	
• Cambiar la cinta de prueba y la posición del interruptor DOLBY NR y comprobar que la zona de respuesta en frecuencia indicada en la Fig.12-8, 9 se satisfaga.						
4. Ajuste del nivel de grabación						
Selector de cintas	Modo	Señal de entrada/cinta de prueba	Lugar de ajuste	Lugar de medición	Valor de ajuste	Observaciones
NORM	REC	Aplique una señal de 315Hz a las terminales CD/VIDEO. Fije el interruptor de CD/VIDEO a ON.	Nivel de señal de entrada a ser aplicada a las terminales CD/VIDEO.	TP1 (L) TP2 (R)	-7,7dBv (412mV)	Fije el control de nivel de INPUT (entrada) a la posición máxima (panel trasero).
NORM	REC/PLAY	Grabar la señal de 315Hz en la cinta de prueba STD-608A y reproducirlas.	VR501 (L) VR502 (R)	TP1 (L) TP2 (R)	Repetir los procesos de grabación y ajustar consecuentemente hasta que se obtenga un nivel de reproducción de -7,7dBV (412mV).	
METAL	REC/PLAY	Grabar la señal de 315Hz en la cinta de prueba STD-610 y reproducirla.		TP1 (L) TP2 (R)	Comprobar que el nivel de reproducción de 315Hz sea de $-7,7dBv \pm 1,5dB$.	

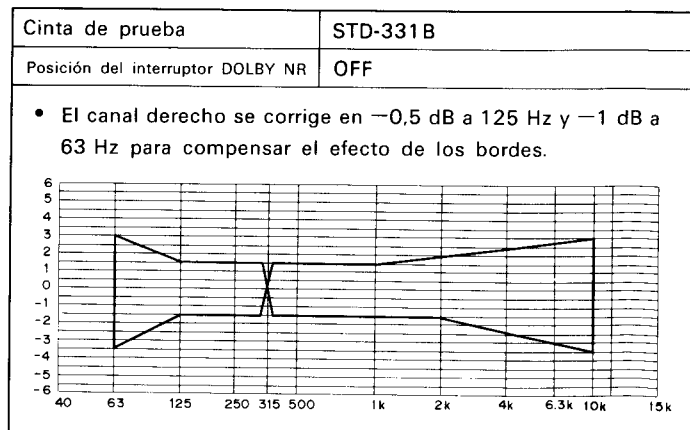


Fig. 12-6 Zona de tolerancia de respuesta de frecuencia de reproducción

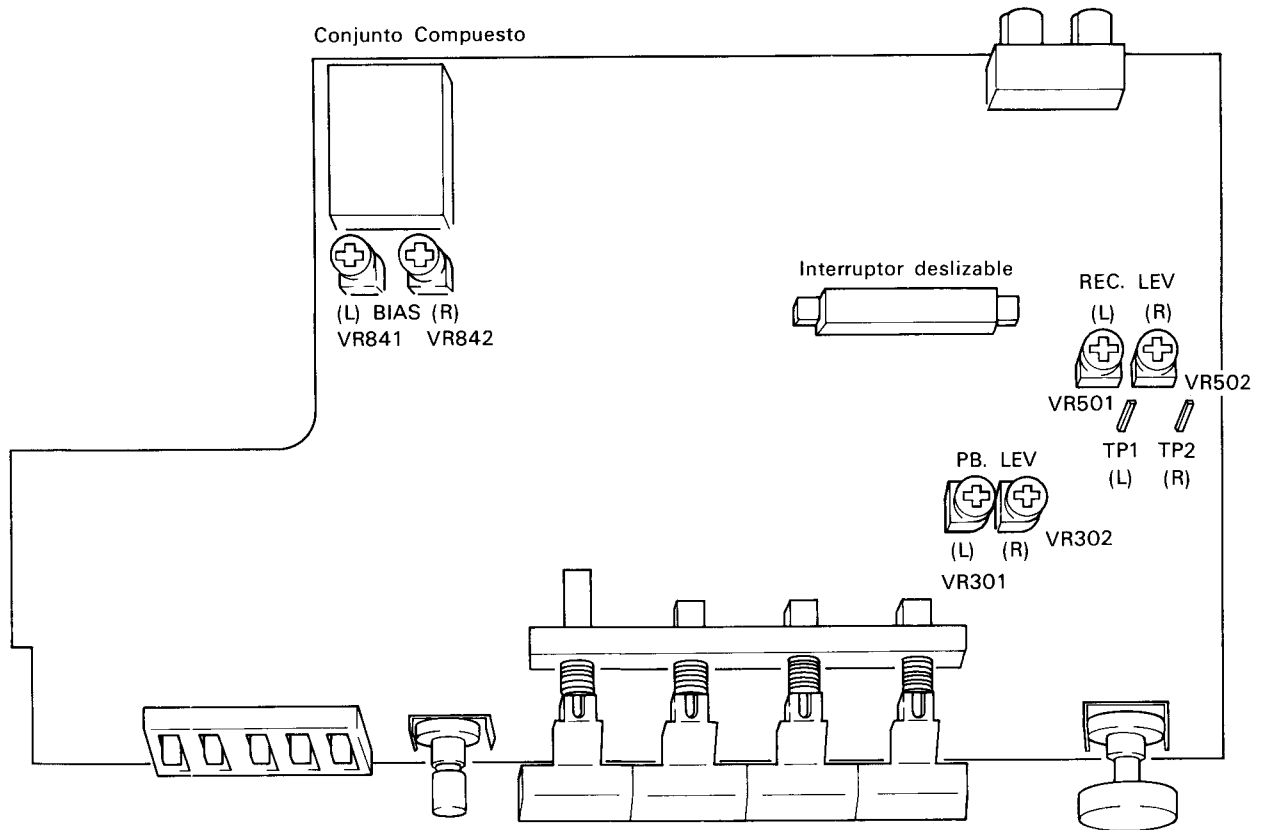


Fig. 12-7 Diagrama de disposición de las partes de ajuste

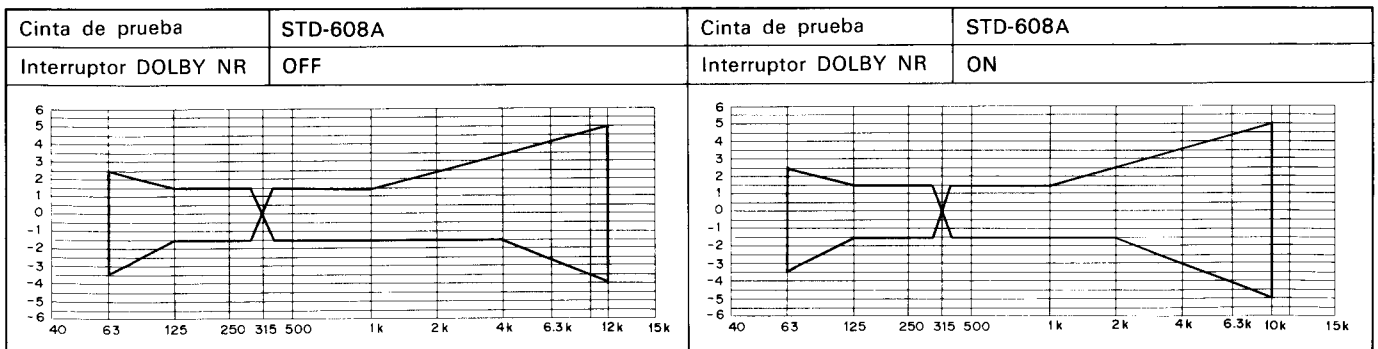


Fig. 12-8 Zona de tolerancia de copia y respuesta de frecuencia de reproducción (NORM)

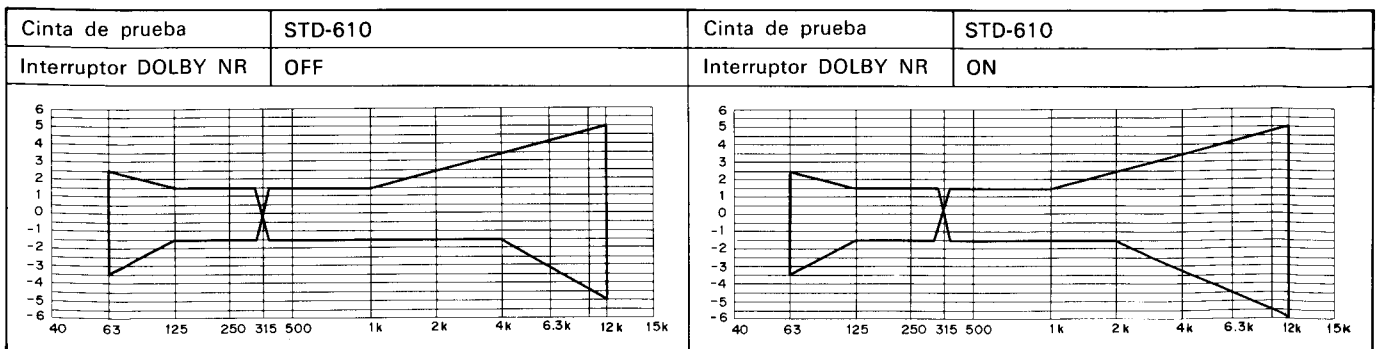


Fig. 12-9 Zona de tolerancia de copia y respuesta de frecuencia de reproducción (METAL)

13. FOR HE, HB, S AND YP TYPES

The (DC-111Z and DC-110Z), HB, S, and YP types are the same as the KU type with the exception of the following sections.

Contrast of Miscellaneous parts.

Mark	Symbol & Description	Part No.				
		DC-111Z KU type	DC-111Z and DC-110Z HE type	DC-111Z HB type	DC-111Z and DC-110Z S type	DC-111Z YP type
⚠ ★	T1 Power transformer (AC 120V)	ATS-196
	(AC220V/240V)	ATS-184	ATS-184	ATS-184
⚠ ★★	(AC110V/120V/220V/240V)	ATS-198
	Line voltage selector	AKX-506
⚠ ★★	FU1 Fuse (2A)	AEK-122
	FU1 Fuse (T800mA)	AEK-031	AEK-031
⚠ ★★	FU1 Fuse (T800mA)	AEK-507
	FU1 Fuse (1A)	AEK-119
⚠ ★★	FU2 Fuse (1A)	AEK-119
	FU3 Fuse (1.6A)	AEK-121	AEK-121
⚠ ★★	FU3 Fuse (T1.6A)	AEK-405	AEK-405
	FU3 Fuse (T1.6A)	AEK-510
⚠ ★★	FU4 Fuse (2.5A)	AEK-123	AEK-123
	FU4 Fuse (T2.0A)	AEK-017	AEK-017
⚠ ★★	FU4 Fuse (T2.0A)	AEK-511
	FU5 Fuse (2.5A)	AEK-123	AEK-123
⚠ ★★	FU5 Fuse (T2A)	AEK-017	AEK-017
	FU5 Fuse (T2A)	AEK-511
⚠	AC Power cord	ADG-073	ADG-068	ADG-063	ADG-073	ADG-064
	Operating instruction (English)	ARB-679	ARB-679	ARB-679	ARB-679
	(English/French/German/Italian)	ARE-130
	(Spanish)	ARC-087
	Packing case (DC-111Z)	AHE-527	AHE-527	AHE-527	AHE-527	AHE-527
	(DC-110Z)	AHE-528	AHE-528

Line voltage selection for HE, HB types.


1. Disconnect the AC power cord.
2. Remove the bonnet case.
3. Change the connection of the power transformer primary lead wire as follows:
 220V: Disconnect the terminal no.2 on the fuse holder assembly to the terminal no.8 of the power transformer, and connect the terminal no.2 on the fuse holder assembly to the terminal no.6 of the power transformer.

240V: Disconnect the terminal no.2 on the fuse holder assembly to the terminal no.6 of the power transformer, and connect the terminal no.2 on the fuse holder assembly to the terminal no.8 of the power transformer.


4. Stick the line voltage label on the rear panel.

Description	Part No.
220V label	AAX-193
240V label	AAX-192

Schematic diagram for HE, HB, and YP types.

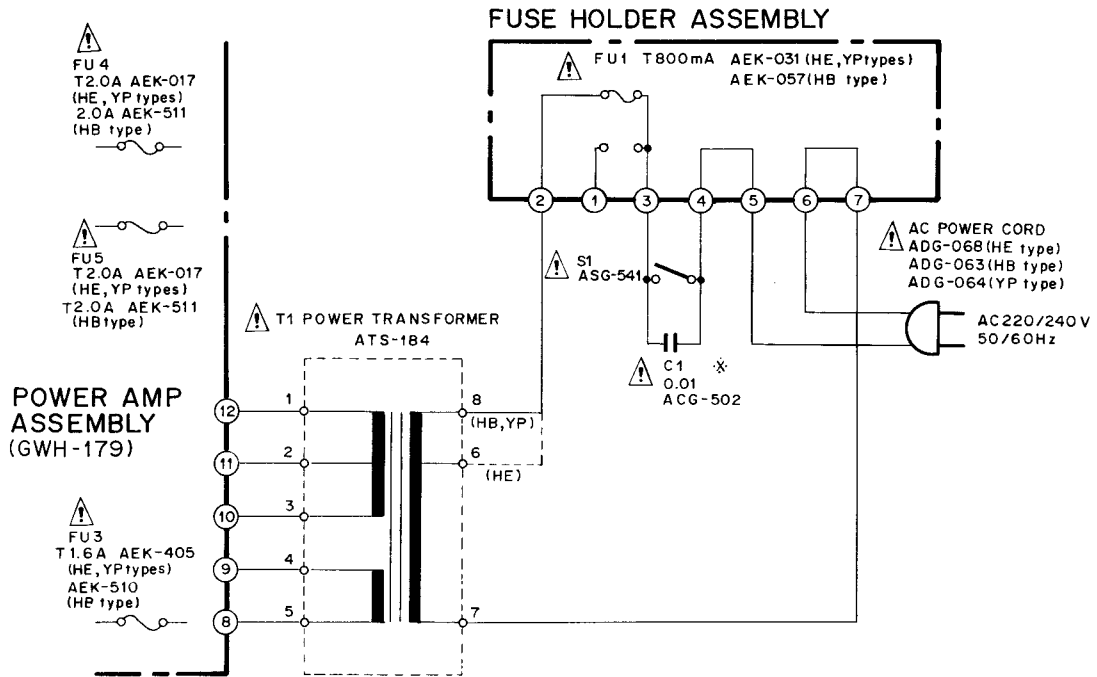

Schematic diagram for S type.

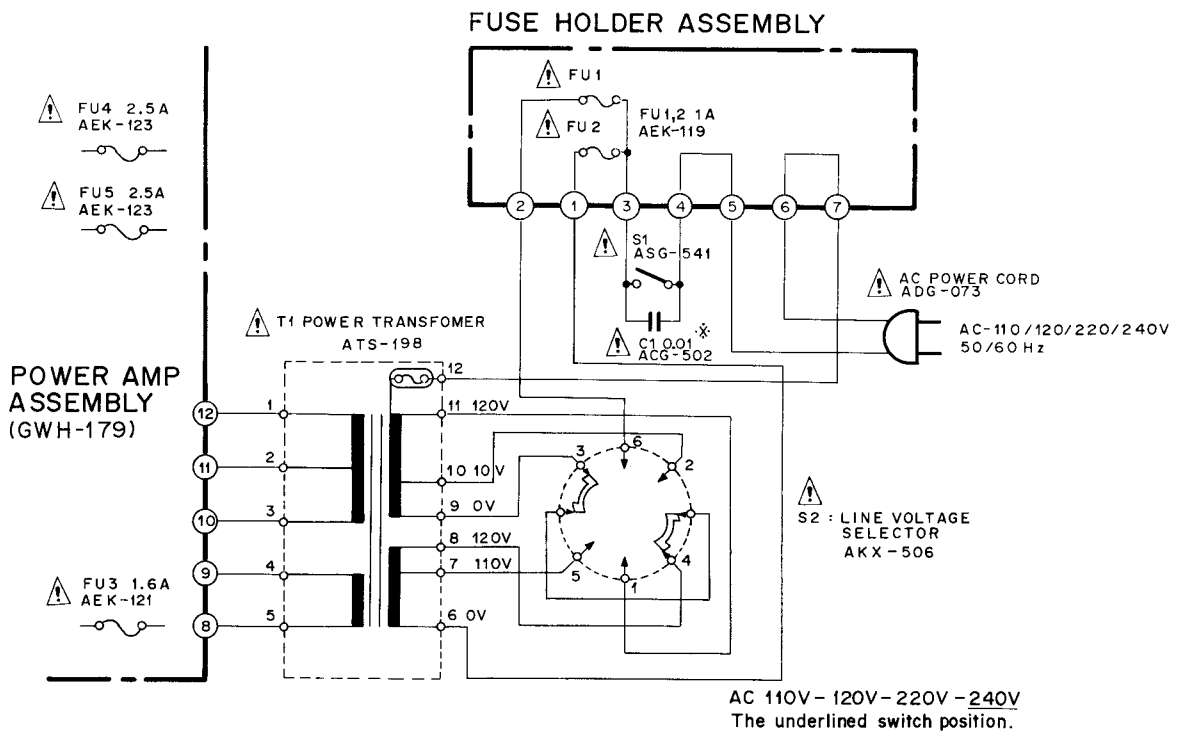


14. SAFETY INFORMATION

1. SAFETY PRECAUTIONS

The following check should be performed for the continued protection of the customer and service technician.

LEAKAGE CURRENT CHECK

Measure leakage current to a known earth ground (water pipe, conduit, etc.) by connecting a leakage current tester such as Simpson Model 229-2 or equivalent between the earth ground and all exposed metal parts of the appliance (input/output terminals, screwheads, metal overlays, control shaft, etc.). Plug the AC line cord of the appliance directly into a 120V AC 60Hz outlet and turn the AC power switch on. Any current measured must not exceed 0.5mA.

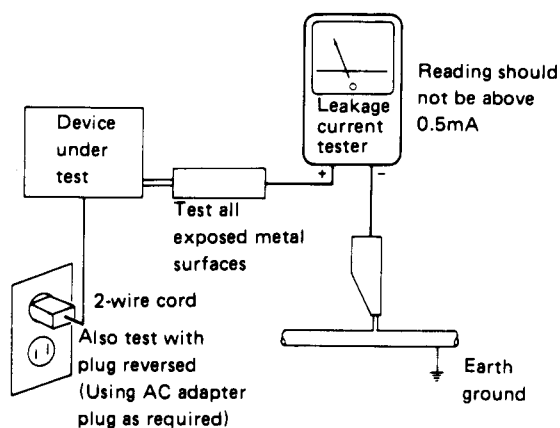

AC Leakage Test

ANY MEASUREMENTS NOT WITHIN THE LIMITS OUTLINED ABOVE ARE INDICATIVE OF A POTENTIAL SHOCK HAZARD AND MUST BE CORRECTED BEFORE RETURNING THE APPLIANCE TO THE CUSTOMER.

2. PRODUCT SAFETY NOTICE

Many electrical and mechanical parts in the appliance have special safety related characteristics. These are often not evident from visual inspection nor the protection afforded by them necessarily can be obtained by using replacement components rated for voltage, wattage, etc. Replacement parts which have these special safety characteristics are identified in this Service Manual.

Electrical components having such features are identified by marking with a Δ on the schematics and on the parts list in this Service Manual.

The use of a substitute replacement component which does not have the same safety characteristics as the PIONEER recommended replacement one, shown in the parts list in this Service Manual, may create shock, fire, or other hazards.

Product Safety is continuously under review and new instructions are issued from time to time. For the latest information, always consult the current PIONEER Service Manual. A subscription to, or additional copies of, PIONEER Service Manual may be obtained at a nominal charge from PIONEER.