


# Service Manual

**PIONEER®**  
The future of sound and vision.

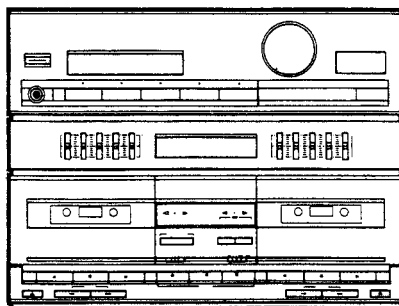

ORDER NO.  
**ARP1918**

**STEREO DOUBLE CASSETTE DECK AMPLIFIER**

# DC-Z73

DC-Z73 HAS FOLLOWING VERSIONS:

| Type | Power requirement                          | Export destination                         |
|------|--|--|
| HE   | AC220V, 240V (switchable)*                 | European continent                         |
| HEWZ | AC220V, 240V (switchable)*                 | West Germany                               |
| YPW  | AC240V only                                | Australia                                  |
| SD   | AC110V, 120V-127V, 220V, 240V (switchable) | Kingdom of Saudi Arabia and General market |

\*: Change the Jumper wires of assembly boards.

- This manual is applicable to the DC-Z73/HE type.
- As to the other types, refer to applicable service manuals.
- As to the system composition, refer to the S-111 service manual (ARP1937).
- Ce manuel pour le service comprend les explications de réglage en français.
- Este manual de servicio trata del método ajuste escrito en español.

## CONTENTS

|   |    |                           |    |
|---|----|---------------------------|----|
| 1. EXPLODED VIEWS, PACKING AND PARTS LIST .....               | 2  | 5. PANEL FACILITIES ..... | 60 |
| 2. SCHEMATIC DIAGRAMS AND P.C.BOARD CONNECTION DIAGRAMS ..... | 12 | 6. SPECIFICATIONS .....   | 62 |
| 3. P.C.B's PARTS LIST .....                                   | 43 |                           |    |
| 4. ADJUSTMENTS .....  | 48 |                           |    |
| 4. RÉGLAGE .....  | 52 |                           |    |
| 4. AJUSTE .....   | 58 |                           |    |

**PIONEER ELECTRONIC CORPORATION** 4-1, Meguro 1-Chome, Meguro-ku, Tokyo 153, Japan  
**PIONEER ELECTRONICS SERVICE INC.** P.O. Box 1760, Long Beach, California 90801 U.S.A.  
**PIONEER ELECTRONICS OF CANADA, INC.** 505 Cochrane Drive, Markham, Ontario L3R 8E3 Canada  
**PIONEER ELECTRONIC [EUROPE] N.V.** Keetberglaan 1, 2740 Beveren, Belgium  
**PIONEER ELECTRONICS AUSTRALIA PTY. LTD.** 178-184 Boundary Road, Braeside, Victoria 3195, Australia TEL: [03] 580-9911  
 © **PIONEER ELECTRONIC CORPORATION 1990**

YV JAN. 1990 Printed in Japan.

# 1. EXPLODED VIEWS, PACKING AND PARTS LIST


## 1.1 PARTS LIST OF EXTERIOR AND PACKING

**NOTES:**


- Parts without part number cannot be supplied.
- The  $\Delta$  mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designa-
- Parts marked by "⊙" are not always kept in stock. Their delivery time may be longer than usual or they may be unavailable.

| Mark     | No. | Description               | Parts No. | Mark     | No. | Description                    | Parts No.    |
|----------|-----|---------------------------|-----------|----------|-----|--------------------------------|--------------|
|          | 1   | Knob (VOLUME)             | AAB1135   |          | 46  | Plate                          |              |
|          | 2   | Button (REC)              | AAD1668   |          | 47  | Plate B                        |              |
|          | 3   | Button (POWER)            | AAD1674   |          | 48  | Plate                          |              |
|          | 4   | Button (COPY)             | AAD1676   |          | 49  | Plate A                        |              |
|          | 5   | Button (EJECT)            | AAD1716   |          | 50  | Plate                          |              |
|          | 6   | Button (DECK)             | AAD1718   |          | 51  | Heat sink                      |              |
|          | 7   | Button (FUNCTION)         | AAD1724   |          | 52  | Shield plate (MECHA)           |              |
|          | 8   | Slide knob                | AAE1128   |          | 53  | Operating instructions         | ARC1180      |
|          | 9   | Indicator lens            | AAK1801   |          | 54  | Operating instructions         | ARE1144      |
|          | 10  | Decorative plate (DOOR R) | AAK1873   |          | 55  | ...                            | ...          |
|          | 11  | Decorative plate (DECK)   | AAK1881   |          | 56  | FUNCTION assembly              | AWK1245      |
|          | 12  | Decorative plate (DOOR L) | AAK1882   |          | 57  | AF assembly                    | AWZ2627      |
|          | 13  |                           |           |          | 58  | HEAD PHONE assembly            |              |
|          | 14  | Cassette door (L)         | AAN1182   |          | 59  | TRANS CONNECT assembly         |              |
|          | 15  | Cassette door (R)         | AAN1183   |          | 60  | MAIN VR assembly               |              |
|          | 16  | ...                       | ...       |          | 61  | DECK CENTER assembly           |              |
|          | 17  | ...                       | ...       |          | 62  | DECK CTRL assembly             | AWZ2635      |
|          | 18  | Label (PAPER)             | AAX1301   |          | 63  | DECK-1 SW assembly             |              |
|          | 19  | Screw                     | ABA1084   |          | 64  | DECK-2 SW assembly             |              |
|          | 20  | Screw (STEEL)             | ABA1095   |          | 65  | AMP,GEQ CTRL assembly          | AWZ2639      |
|          | 21  | Spring 1                  | ABH1062   |          | 66  | POWER SUPPLY assembly          | AWZ2239      |
|          | 22  | Spring 2                  | ABH1063   |          | 67  | CONNECT assembly               |              |
|          | 23  | Keep plate                | ABK1011   |          | 68  | Mecha unit 1                   | AWY1052      |
|          | 24  | Earth lead                |           |          | 69  | Mecha unit 2                   | AWY1053      |
|          | 25  | Earth lead                |           |          | 70  | Damper assembly                | AXA1008      |
| $\Delta$ | 26  | AC power cord             | ADG1049   |          | 71  | Remote control unit (CU-DC019) | AXD1133      |
|          | 27  | Nylon binder              |           |          | 72  | Screw                          | BBZ30P060FMC |
|          | 28  | Leg assembly              | AEC-847   |          | 73  | Screw                          | BBZ30P080FCU |
| $\Delta$ | 29  | Strain relief             | AEC-882   |          | 74  | Screw                          | BBZ30P080FZK |
|          | 30  | Nylon revet               |           |          | 75  | Screw                          | BBZ30P180FMC |
|          | 31  | ...                       | ...       |          | 76  | Screw                          | BPZ26P080FMC |
|          | 32  | "AAA" DRY CELL            |           |          | 77  | Nut                            | NK90FUC      |
|          | 33  | Front pad (L•R)           | AHA1316   |          | 78  | Screw                          | VPZ30P080FZK |
|          | 34  | Rear pad (L•R)            | AHA1317   |          | 79  | Fuse (T1.25A/250V,FU2001)      | AEK-018      |
|          | 35  | Packing case              | AHD1826   | $\Delta$ | 80  | Fuse (T800mA/250V,FU2003)      | AEK-031      |
|          | 36  | ...                       | ...       | $\Delta$ | 81  | Fuse (T1.25A/250V,FU2004)      | AEK-018      |
|          | 37  | Sheet                     |           | $\Delta$ | 82  | Fuse (T1.25A/250V,FU2005)      | AEK-018      |
|          | 38  | Battery cover             | AZN1856   | $\Delta$ | 83  | Power transformer (T2001)      | ATS1253      |
|          | 39  | Front panel               | AMB1635   | $\Delta$ | 84  | Screw (EARTH)                  | VBZ35P080FMC |
|          | 40  | P.C.B mold                |           |          | 85  | Screw                          | VPZ30P080FMC |
|          | 41  | Eject arm (L)             | AMR2031   |          |     |                                |              |
|          | 42  | Eject arm (R)             | AMR2032   |          |     |                                |              |
|          | 43  | Chassis                   |           |          |     |                                |              |
|          | 44  | Rear panel                |           |          |     |                                |              |
|          | 45  | Bonnet case               | ANE1220   |          |     |                                |              |

1.2 EXTERIOR

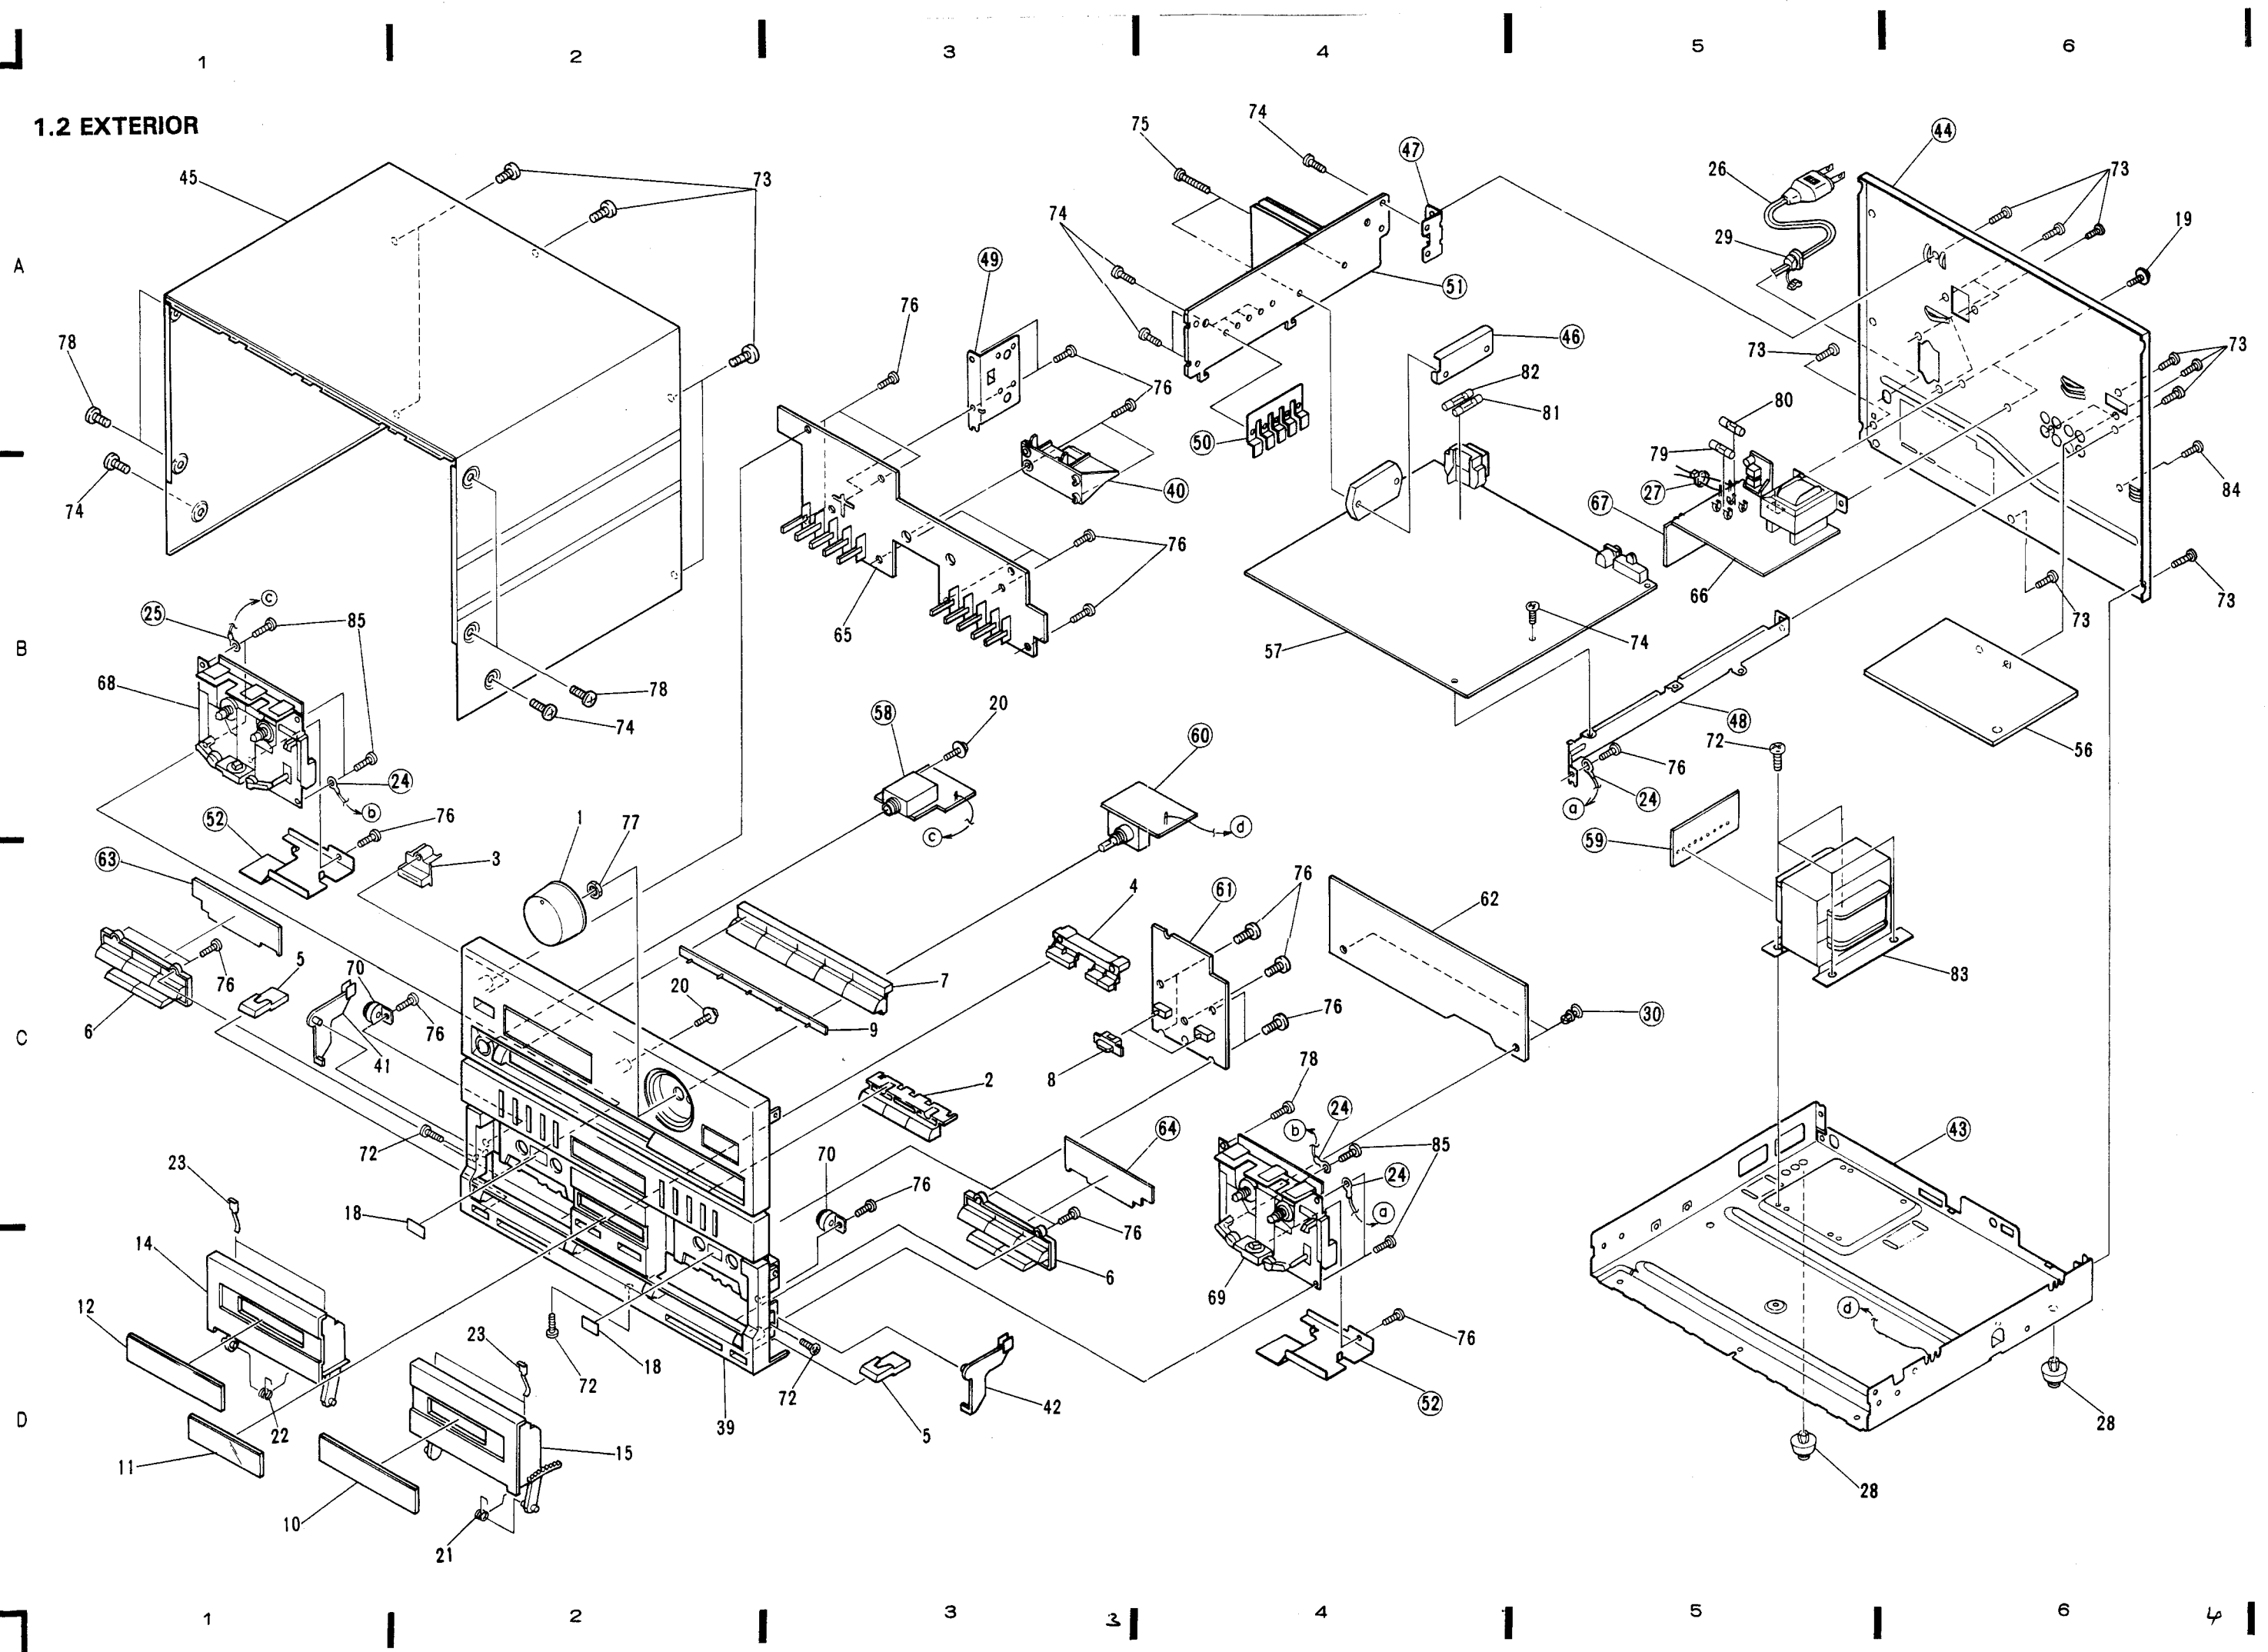

### 1.3 PACKING

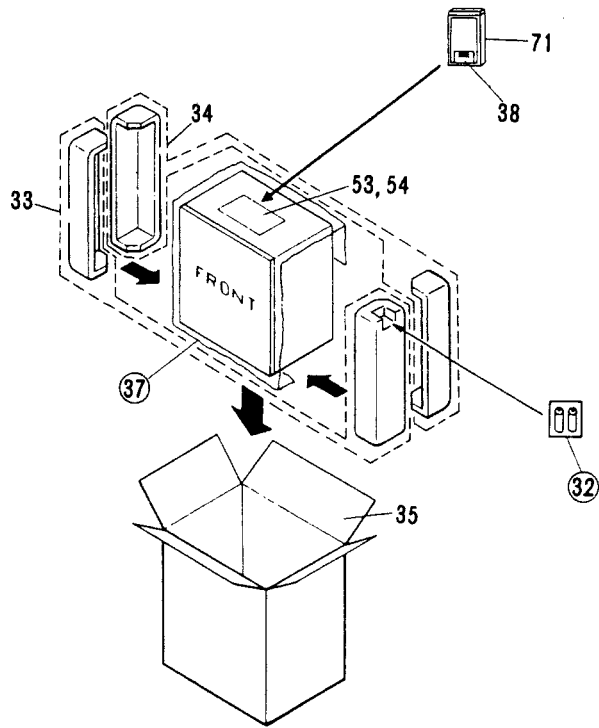

A

B

C

D

## 1.4 MECHA UNIT 1 (AWY1052)

| Mark | No. | Parts No. | Description                      | Mark | No. | Parts No. | Description                 |
|------|-----|-----------|----------------------------------|------|-----|-----------|-----------------------------|
|      | 1   | AZE1018   | Hall IC                          |      | 51  | AZN1976   | Gear arm R calking assembly |
|      | 2   | AZX1019   | Motor                            |      | 52  | AZN1977   | Gear arm L calking assembly |
|      | 3   | AZS1054   | Leaf SW (MODE)                   |      | 53  | AZN1326   | Head lever calking assembly |
|      | 4   | AZS1034   | Leaf SW (CrO2)                   |      | 54  | AZN1327   | FW assembly                 |
|      | 5   | AZN1286   | Drive arm assembly               |      | 55  |           | Head P.C.board              |
|      | 6   | AZN1287   | FW assembly A                    |      | 56  |           | Plate (FLY WHEEL)           |
|      | 7   | AZN1288   | Cam gear                         |      | 57  | AZN1328   | Azimuth plate               |
|      | 8   | AZN1289   | Reel                             |      | 58  |           | SW arm                      |
|      | 9   | AZN1971   | FR arm                           |      | 59  | ...       | ...                         |
|      | 10  | AZN1972   | Pinch arm L assembly             |      | 60  | ...       | ...                         |
|      | 11  | AZN1973   | Pinch arm R assembly             |      | 61  | AZN1330   | Head arm                    |
|      | 12  | AZN1293   | Gear                             |      | 62  | AZN1331   | Azimuth spring              |
|      | 13  | AZN1294   | H Gear                           |      | 63  | AZN1332   | Cassette stopper            |
|      | 14  | AZN1793   | CUE arm                          |      | 64  | AZN1978   | Trigger arm                 |
|      | 15  | AZB1079   | Screw                            |      | 65  | AZN1334   | Head frame                  |
|      | 16  | ...       | ...                              |      | 66  | AZN1335   | Cassette guide L            |
|      | 17  | AZN1984   | Collar C                         |      | 67  | AZN1336   | Cassette guide R            |
|      | 18  | AZN1297   | Motor pully                      |      | 68  | AZN1337   | Cassette guide              |
|      | 19  | AZN1298   | Belt                             |      | 69  | AZN1338   | Cam gear                    |
|      | 20  | AZN1299   | Spring                           |      | 70  | AZN1994   | Head holder                 |
|      | 21  | AZN1300   | FR lever spring                  |      | 71  | AZN1340   | Head gear                   |
|      | 22  | AZN1301   | FWF spring                       |      | 72  | AZN1980   | Eject arm 2                 |
|      | 23  | AZN1302   | FWR spring                       |      | 73  | AZN1342   | Select lever                |
|      | 24  | AZN1303   | Spring                           |      | 74  | AZN1343   | Brake                       |
|      | 25  | AZB1297   | Screw                            |      | 75  | ...       | ...                         |
|      | 26  | AZN1305   | Cable holder                     |      | 76  | AZN1981   | Ratch lever L               |
|      | 27  | AZN1306   | Spring                           |      | 77  | AZN1348   | Metal                       |
|      | 28  | AZN1307   | Spring                           |      | 78  | AZN1347   | Metal                       |
|      | 29  | AZN1308   | Spring                           |      | 79  | AZN1348   | Cushion                     |
|      | 30  | AZN1309   | Spring                           |      | 80  | AZN1349   | Trigger arm                 |
|      | 31  | AZN1310   | Spring                           |      | 81  | ...       | ...                         |
|      | 32  | AZN1311   | Spring                           |      | 82  | AZS1085   | Solenoid                    |
|      | 33  | AZN1312   | Spring                           |      | 83  | ...       | ...                         |
|      | 34  | AZN1313   | Spring                           |      | 84  | AZP1022   | P Head                      |
|      | 35  | AZN1314   | Spring                           |      | 85  | AZB1099   | Screw                       |
|      | 36  | AZN1315   | Spring                           |      | 86  | AZN1362   | Spring                      |
|      | 37  | AZB1081   | Screw                            |      | 87  | AZN1304   | Spacer                      |
|      | 38  | AZN1316   | Nylon band                       |      | 88  | AZN1470   | Tube                        |
|      | 39  | AZN1995   | P.C.board                        |      | 89  | AZB1100   | Screw                       |
|      | 40  |           | Jumper wire                      |      | 90  | AZS1087   | Solenoid                    |
|      | 41  |           | Wire assembly                    |      | 91  | AZB1101   | Screw                       |
|      | 42  |           | Lead wire                        |      | 92  | AZB1102   | Spring washer               |
|      | 43  |           | Lead wire                        |      | 93  | AZN1471   | Head spring                 |
|      | 44  | AZN1468   | Tube                             |      | 94  | AZB1298   | Screw                       |
|      | 45  |           | Mecha P.C.board calking assembly |      | 95  | AZN1833   | Capstan holder              |
|      | 46  | AZN1319   | R reel assembly                  |      | 96  | AZN1834   | Capstan holder              |
|      | 47  | AZN1320   | F reel assembly                  |      | 97  |           | Holder                      |
|      | 48  | AZN1321   | Reverse arm calking assembly     |      | 200 | AZB1084   | Nut                         |
|      | 49  |           | FR lever assembly                |      | 201 | AZB1085   | E ring                      |
|      | 50  | AZN1975   | PLAY lever calking assembly      |      | 202 | AZB1086   | D screw                     |
|      |     |           |                                  |      | 203 | AZB1121   | P washer                    |
|      |     |           |                                  |      | 204 | AZB1087   | N washer                    |

1 2 3 4 5 6

| Mark | No. | Parts No. | Description         |
|------|-----|-----------|---------------------|
|      | 205 | AZB1089   | U screw             |
|      | 206 | AZB1090   | P washer            |
|      | 207 | AZB1091   | Oil cut             |
|      | 208 | AZB1092   | Oil cut             |
|      | 209 | ...       | ...                 |
| A    | 210 | AZB1094   | P washer            |
|      | 211 | AZB1095   | D screw             |
|      | 212 | ...       | ...                 |
|      | 213 | AZB1097   | P washer            |
|      | 214 | AZB1098   | M washer            |
|      | 215 | AZB1105   | P screw             |
|      | 216 | AZB1108   | D screw             |
|      | 217 | ...       | ...                 |
|      | 218 | AZB1164   | P screw             |
|      | 300 | AZX1020   | Motor assembly      |
|      | 301 | AZP1042   | Head frame assembly |

A

A

B


B

C

C


D

D

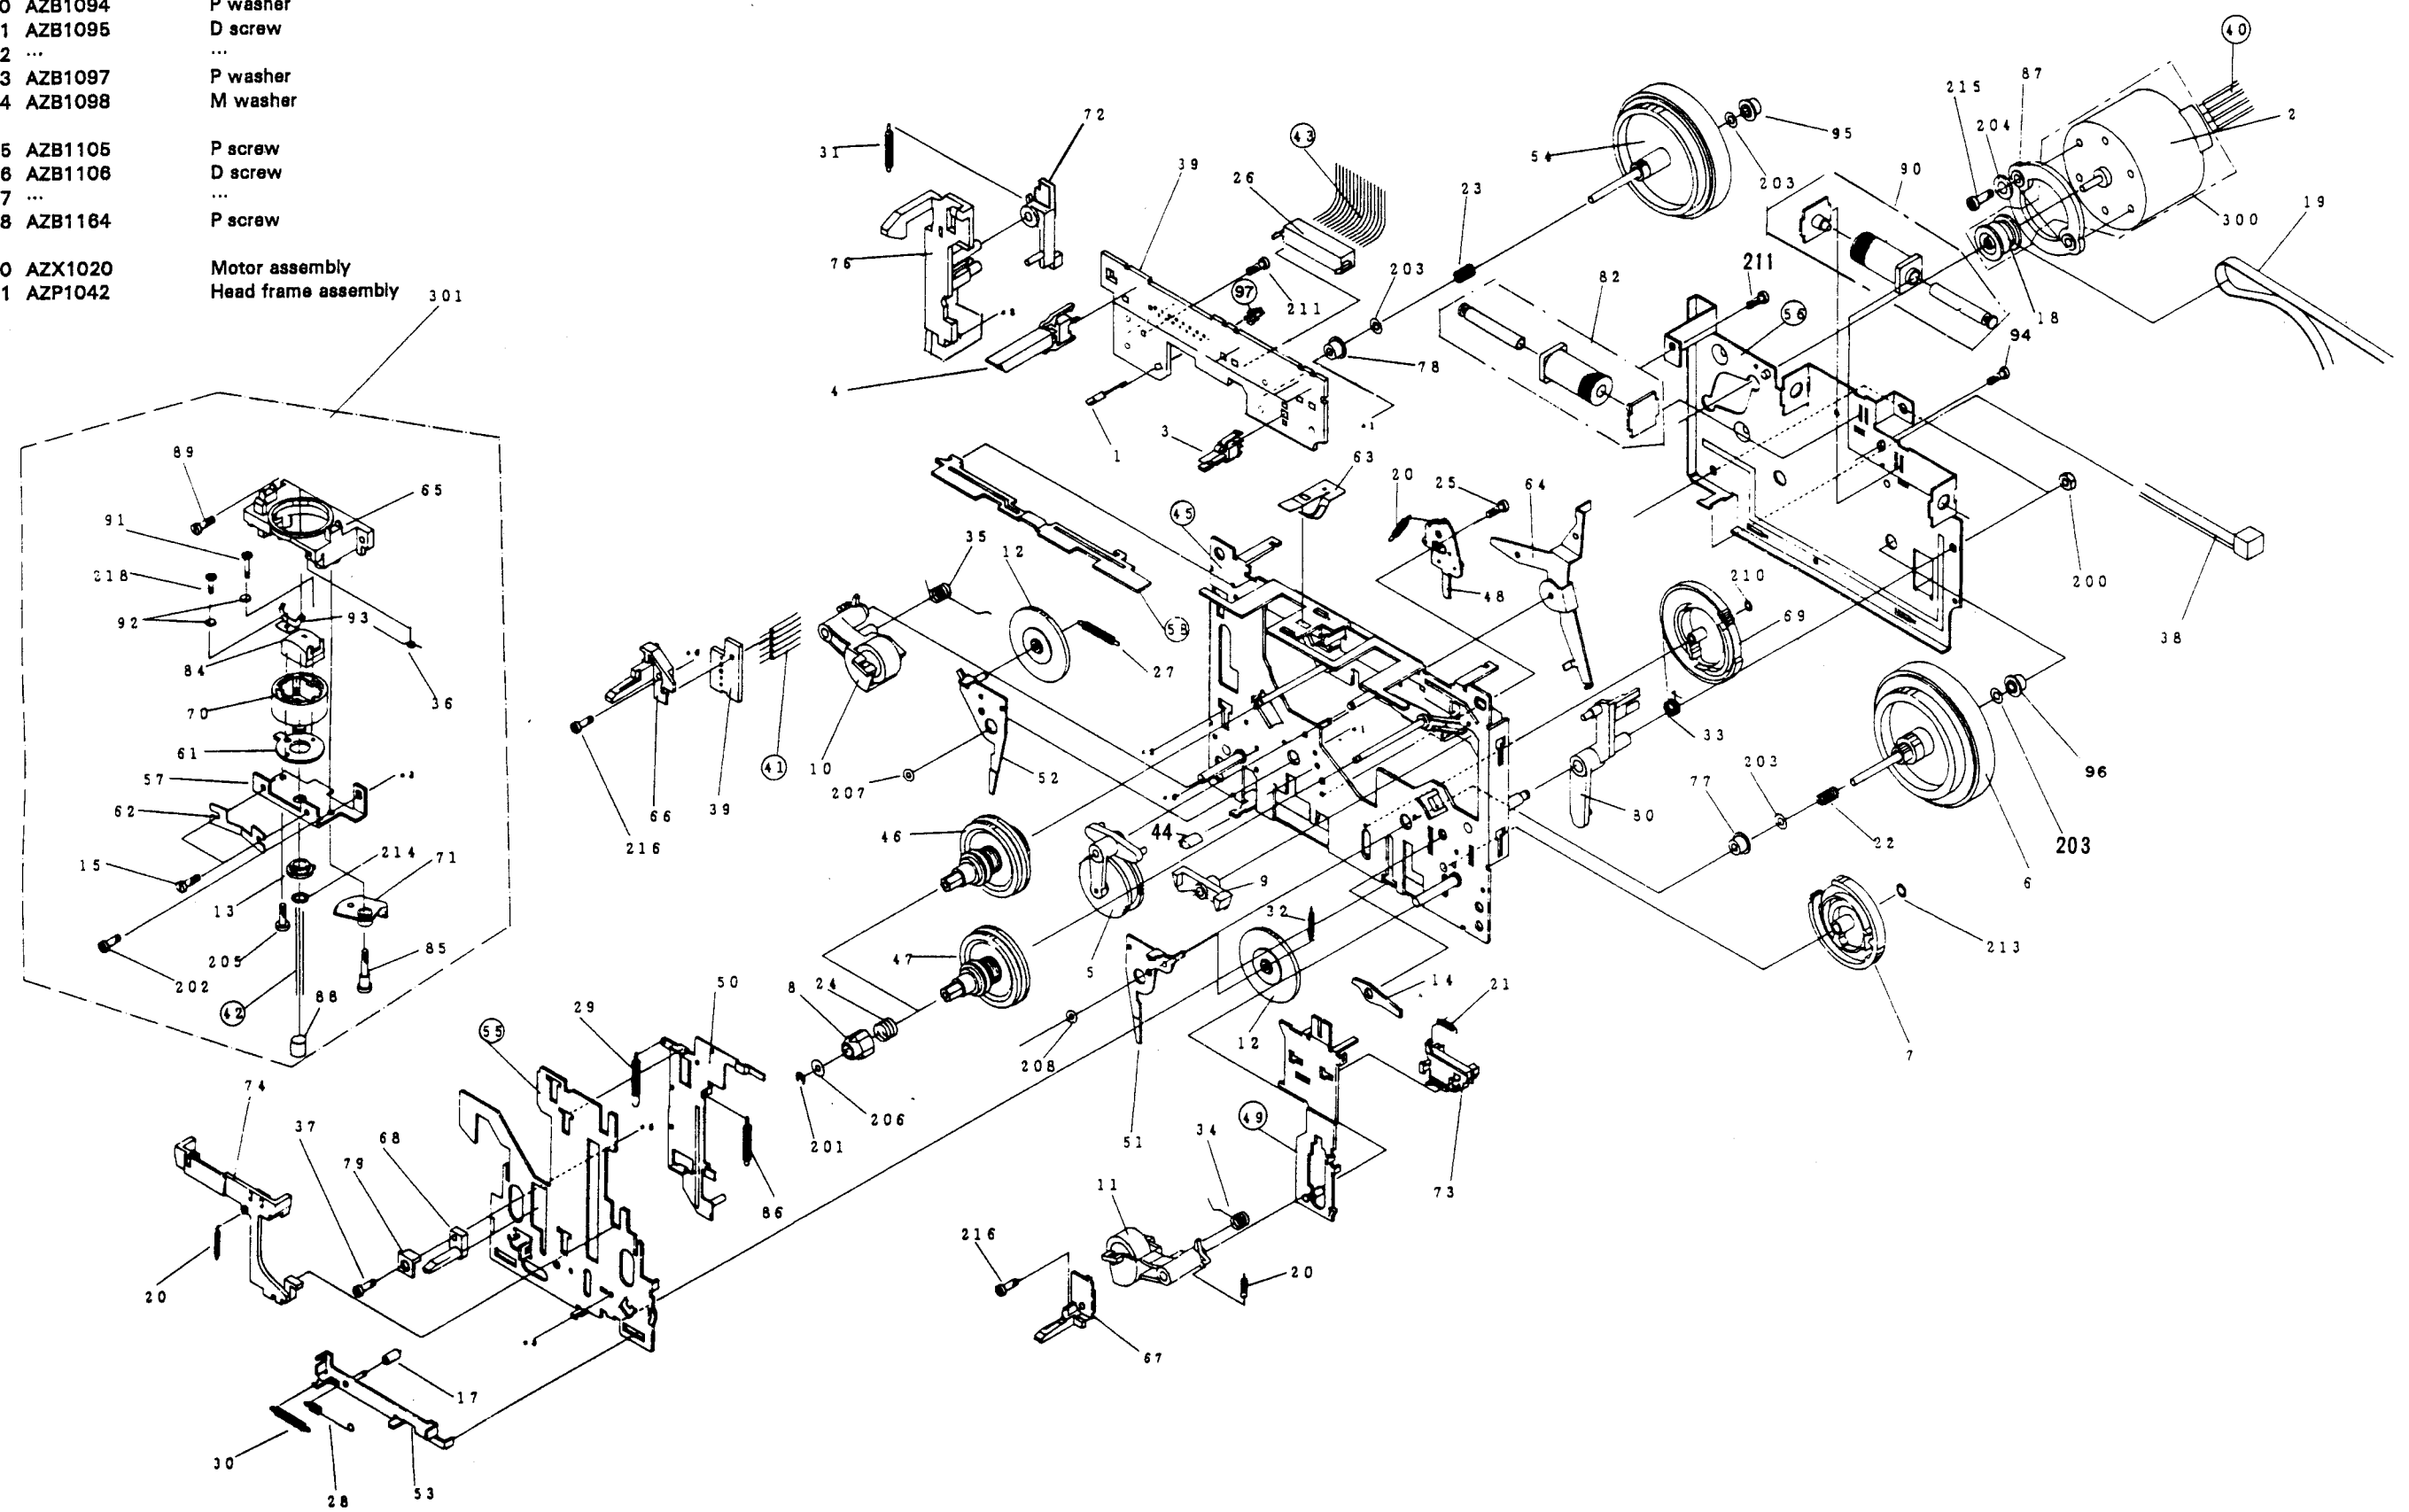

6 1 2 3 4 5 6

| Mark | No. | Parts No. | Description         |
|------|-----|-----------|---------------------|
|      | 206 | AZB1089   | U screw             |
|      | 208 | AZB1090   | P washer            |
|      | 207 | AZB1091   | Oil cut             |
|      | 208 | AZB1092   | Oil cut             |
|      | 209 | ...       | ...                 |
|      | 210 | AZB1094   | P washer            |
|      | 211 | AZB1095   | D screw             |
|      | 212 | ...       | ...                 |
|      | 213 | AZB1097   | P washer            |
|      | 214 | AZB1098   | M washer            |
|      | 215 | AZB1105   | P screw             |
|      | 216 | AZB1106   | D screw             |
|      | 300 | AZX1020   | Motor assembly      |
|      | 301 | AZP1041   | Head frame assembly |

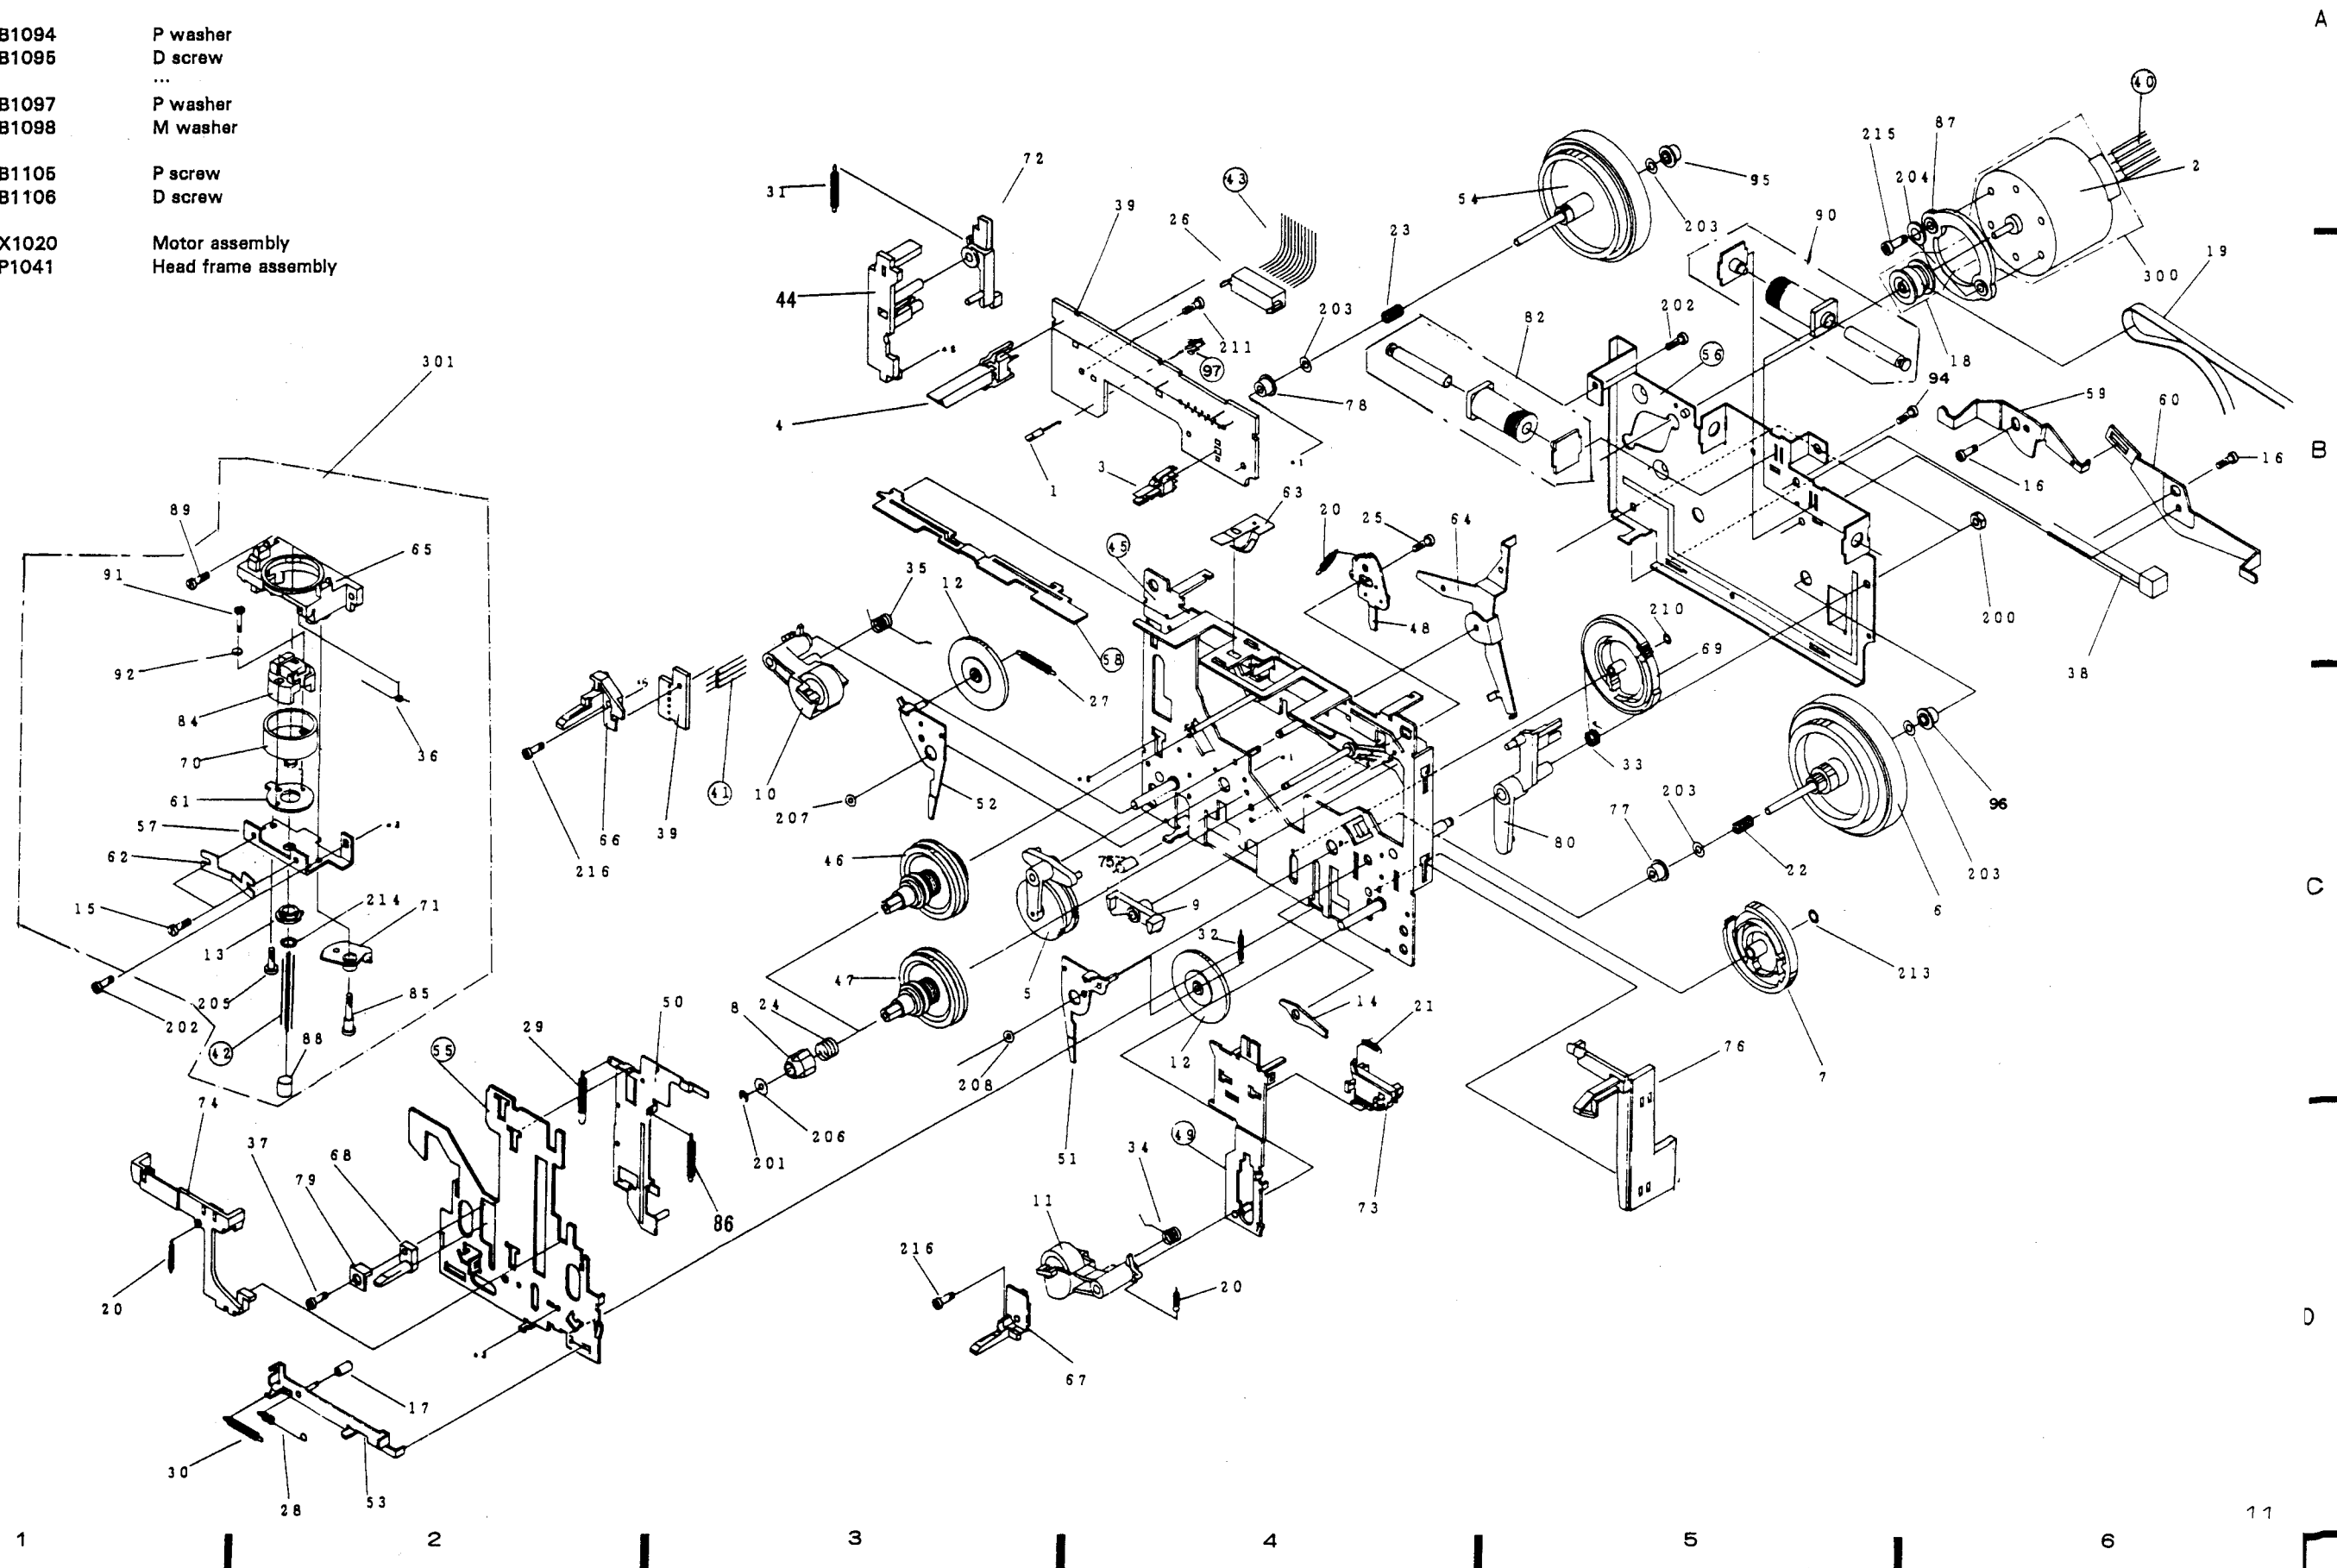

### 1.5 MECHA UNIT 2 (AWY1053)

| Mark | No. | Parts No. | Description                      | Mark | No. | Parts No. | Description                 |
|------|-----|-----------|----------------------------------|------|-----|-----------|-----------------------------|
|      | 1   | AZE1018   | Hall IC                          |      | 51  | AZN1976   | Gear arm R                  |
|      | 2   | AZX1019   | Motor                            |      | 52  | AZN1977   | Gear arm L                  |
|      | 3   | AZS1054   | Leaf SW (MODE)                   |      | 53  | AZN1326   | Head lever calking assembly |
|      | 4   | AZS1034   | Leaf SW (CrO2)                   |      | 54  | AZN1327   | FW assembly                 |
|      | 5   | AZN1286   | Drive arm assembly               |      | 55  |           | Head P.C.board              |
|      | 6   | AZN1287   | FW assembly A                    |      | 56  |           | Plate (FLY WHEEL)           |
|      | 7   | AZN1288   | Cam gear                         |      | 57  | AZN1328   | Azimuth plate               |
|      | 8   | AZN1289   | Reel                             |      | 58  |           | SW arm                      |
|      | 9   | AZN1971   | FR arm                           |      | 59  | AZN1988   | Eject arm L                 |
|      | 10  | AZN1972   | Pinch arm L assembly             |      | 60  | AZN1989   | Eject arm R                 |
|      | 11  | AZN1973   | Pinch arm R assembly             |      | 61  | AZN1330   | Head arm                    |
|      | 12  | AZN1293   | Gear                             |      | 62  | AZN1331   | Azimuth spring              |
|      | 13  | AZN1294   | H Gear                           |      | 63  | AZN1332   | Cassette stopper            |
|      | 14  | AZN1793   | CUE arm                          |      | 64  | AZN1978   | Trigger arm                 |
|      | 15  | AZB1079   | Screw                            |      | 65  | AZN1334   | Head frame                  |
|      | 16  | AZB1080   | Screw                            |      | 66  | AZN1335   | Cassette guide L            |
|      | 17  | AZN1984   | Collar C                         |      | 67  | AZN1336   | Cassette guide R            |
|      | 18  | AZN1297   | Motor pully                      |      | 68  | AZN1337   | Cassette guide              |
|      | 19  | AZN1298   | Belt                             |      | 69  | AZN1338   | Cam gear                    |
|      | 20  | AZN1299   | Spring                           |      | 70  | AZN1979   | Head holder                 |
|      | 21  | AZN1300   | FR lever spring                  |      | 71  | AZN1340   | Head gear                   |
|      | 22  | AZN1301   | FWF spring                       |      | 72  | AZN1980   | Eject arm 2                 |
|      | 23  | AZN1302   | FWR spring                       |      | 73  | AZN1342   | Select lever                |
|      | 24  | AZN1303   | Spring                           |      | 74  | AZN1343   | Brake                       |
|      | 25  | AZB1080   | Screw                            |      | 75  | AZN1468   | Tube                        |
|      | 26  | AZN1305   | Cable holder                     |      | 76  | AZN1985   | Ratch lever R               |
|      | 27  | AZN1306   | Spring                           |      | 77  | AZN1346   | Metal                       |
|      | 28  | AZN1307   | Spring                           |      | 78  | AZN1347   | Metal                       |
|      | 29  | AZN1308   | Spring                           |      | 79  | AZN1348   | Cushlon                     |
|      | 30  | AZN1309   | Spring                           |      | 80  | AZN1349   | Trigger arm                 |
|      | 31  | AZN1310   | Spring                           |      | 81  | ...       | ...                         |
|      | 32  | AZN1311   | Spring                           |      | 82  | AZS1085   | Solenoid                    |
|      | 33  | AZN1312   | Spring                           |      | 83  | ...       | ...                         |
|      | 34  | AZN1313   | Spring                           |      | 84  | AZP1014   | R/P Head                    |
|      | 35  | AZN1314   | Spring                           |      | 85  | AZB1099   | Screw                       |
|      | 36  | AZN1315   | Spring                           |      | 86  | AZN1352   | Spring                      |
|      | 37  | AZB1081   | Screw                            |      | 87  | AZN1304   | Spacer                      |
|      | 38  | AZN1316   | Nylon band                       |      | 88  | AZN1470   | Tube                        |
|      | 39  | AZN1983   | P.C.board                        |      | 89  | AZB1100   | Screw                       |
|      | 40  |           | Jumper wire                      |      | 90  | AZS1087   | Solenoid                    |
|      | 41  |           | Wire assembly                    |      | 91  | AZB1101   | Screw                       |
|      | 42  |           | Lead wire                        |      | 92  | AZB1102   | Washer                      |
|      | 43  |           | Lead wire                        |      | 93  | ...       | ...                         |
|      | 44  | AZN1344   | Eject lever L                    |      | 94  | AZB1298   | Screw                       |
|      | 45  |           | Mecha P.C.board calking assembly |      | 95  | AZN1833   | Capstan holder              |
|      | 46  | AZN1319   | R reel assembly                  |      | 96  | AZN1834   | Capstan holder              |
|      | 47  | AZN1320   | F reel assembly                  |      | 97  |           | Holder                      |
|      | 48  | AZN1321   | Reverse arm calking assembly     |      | 200 | AZB1084   | Nut                         |
|      | 49  |           | FR lever assembly                |      | 201 | AZB1085   | E ring                      |
|      | 50  | AZN1975   | PLAY lever calking assembly      |      | 202 | AZB1086   | D screw                     |
|      |     |           |                                  |      | 203 | AZB1121   | P washer                    |
|      |     |           |                                  |      | 204 | AZB1087   | N washer                    |



# 2. SCHEMATIC DIAGRAMS AND P.C.BOARD CONNECTION DIAGRAMS


## 2.1 OVER ALL SCHEMATIC DIAGRAM


A

B

C

D

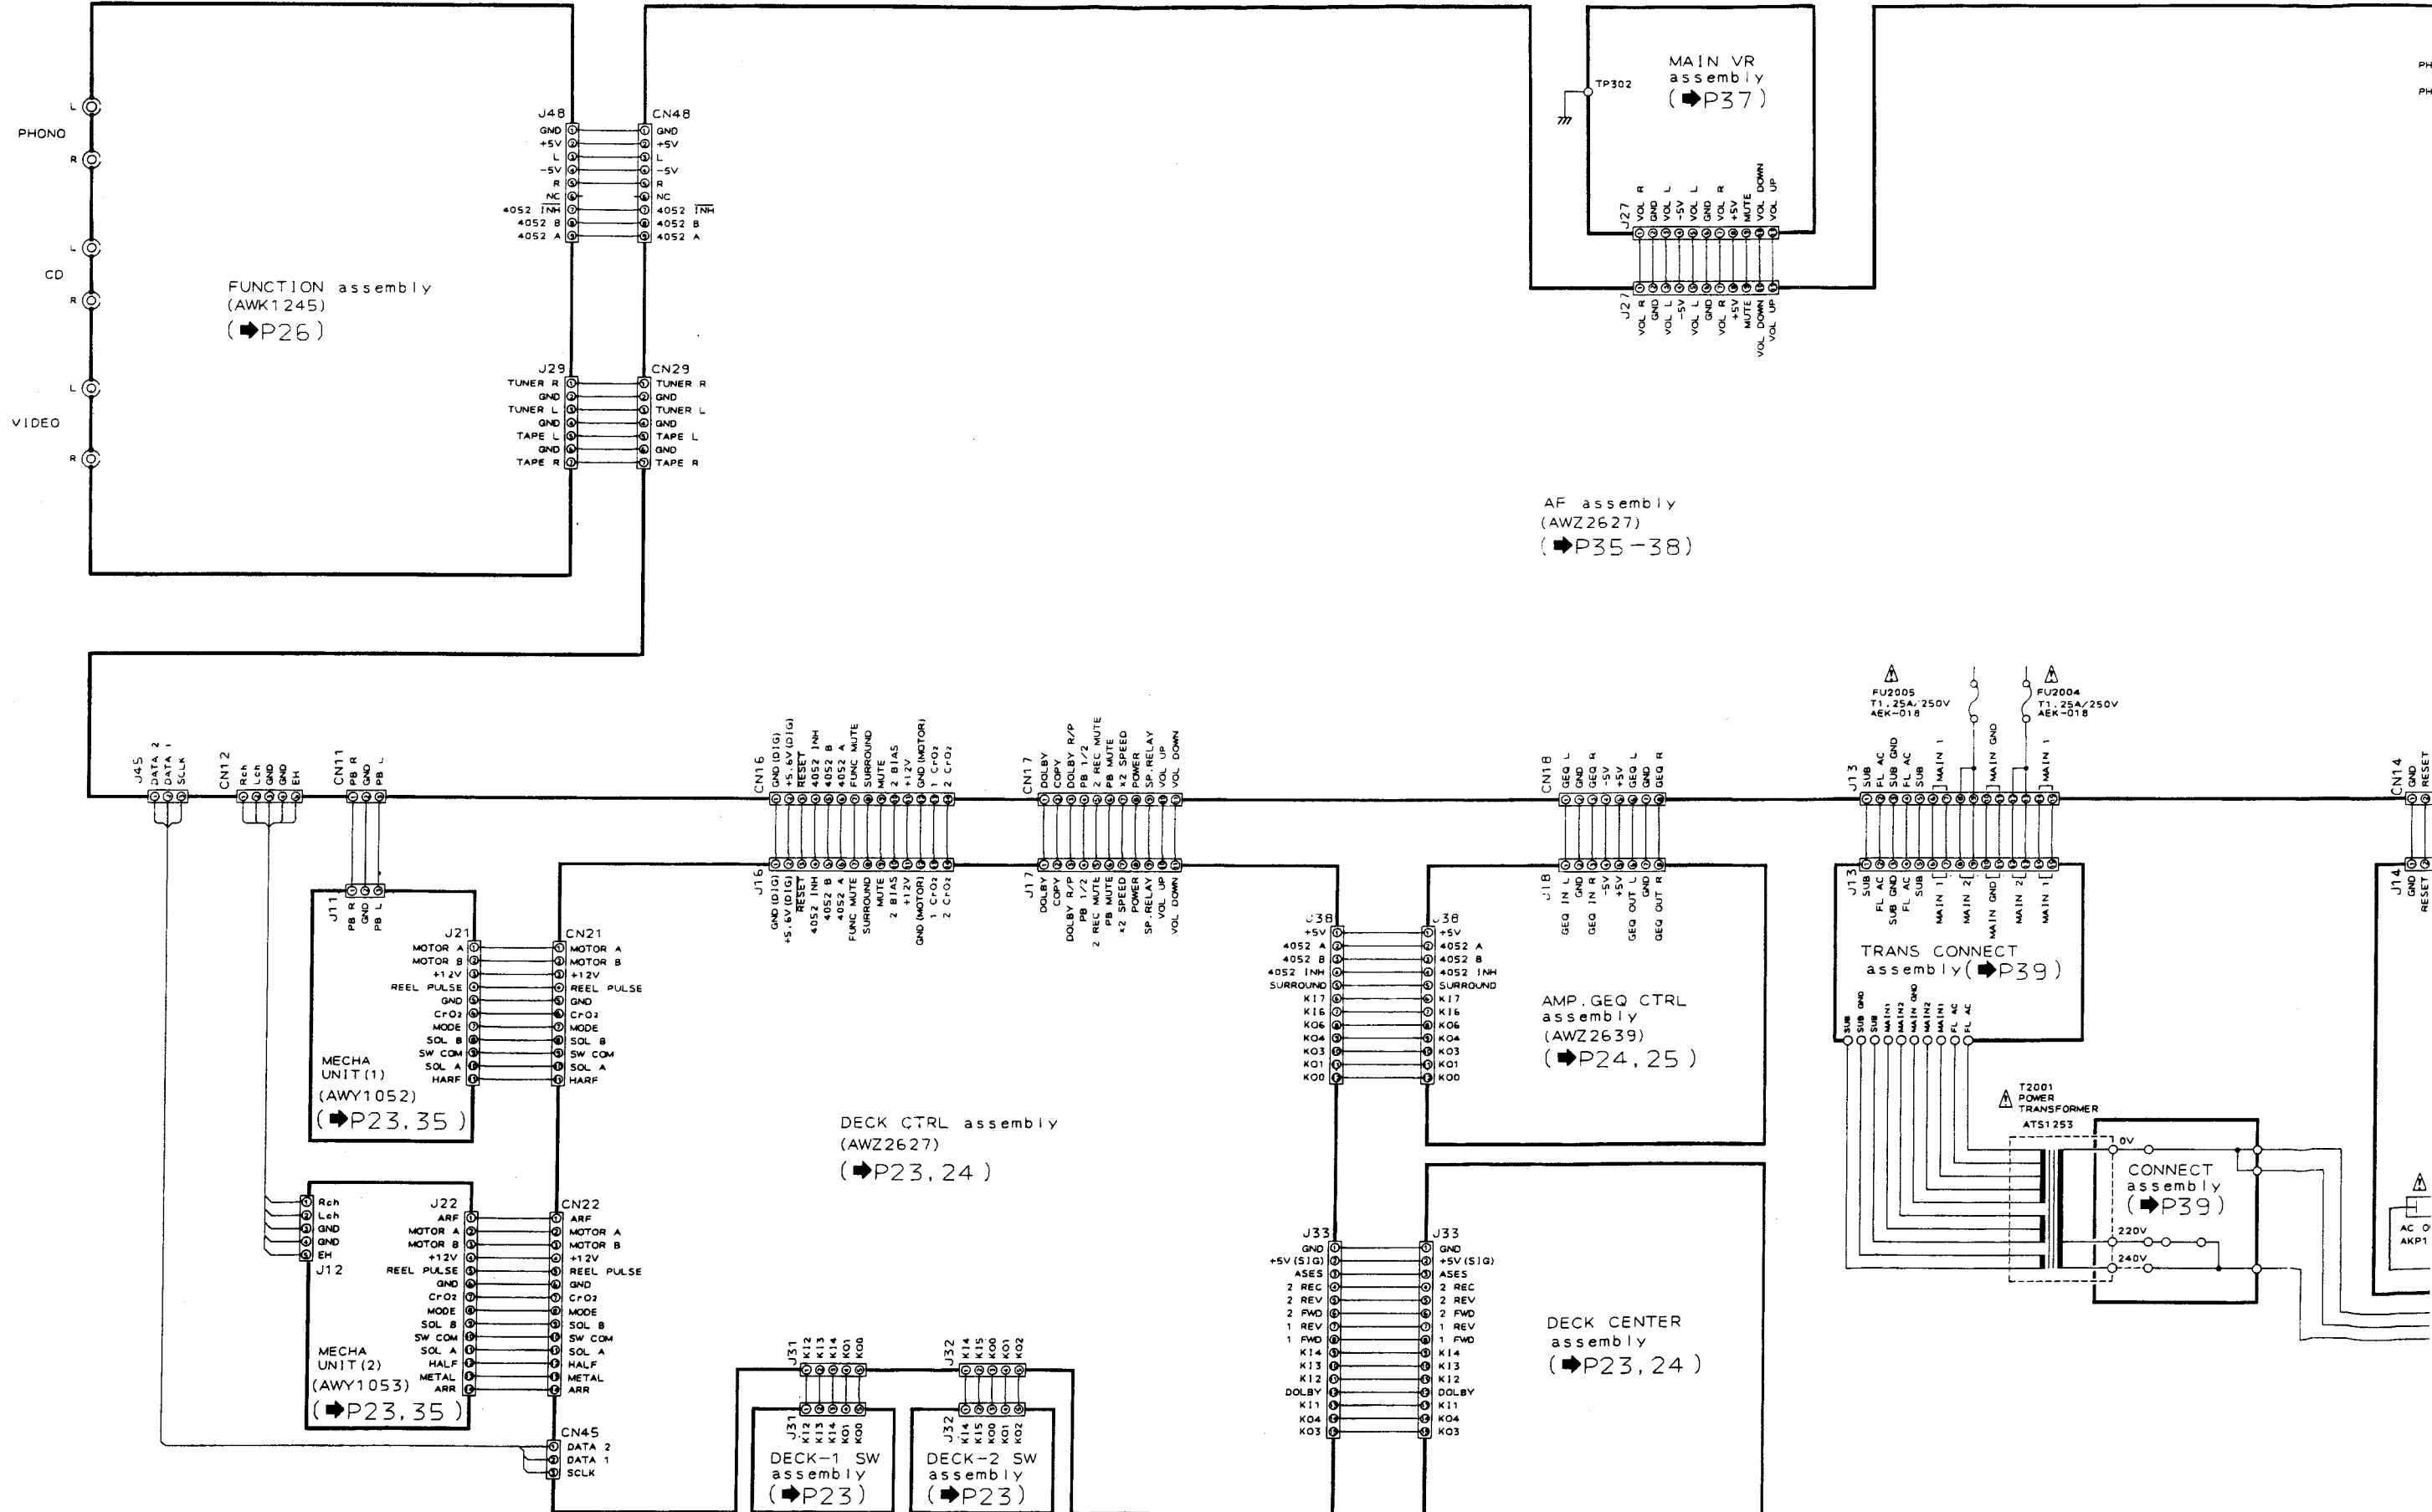

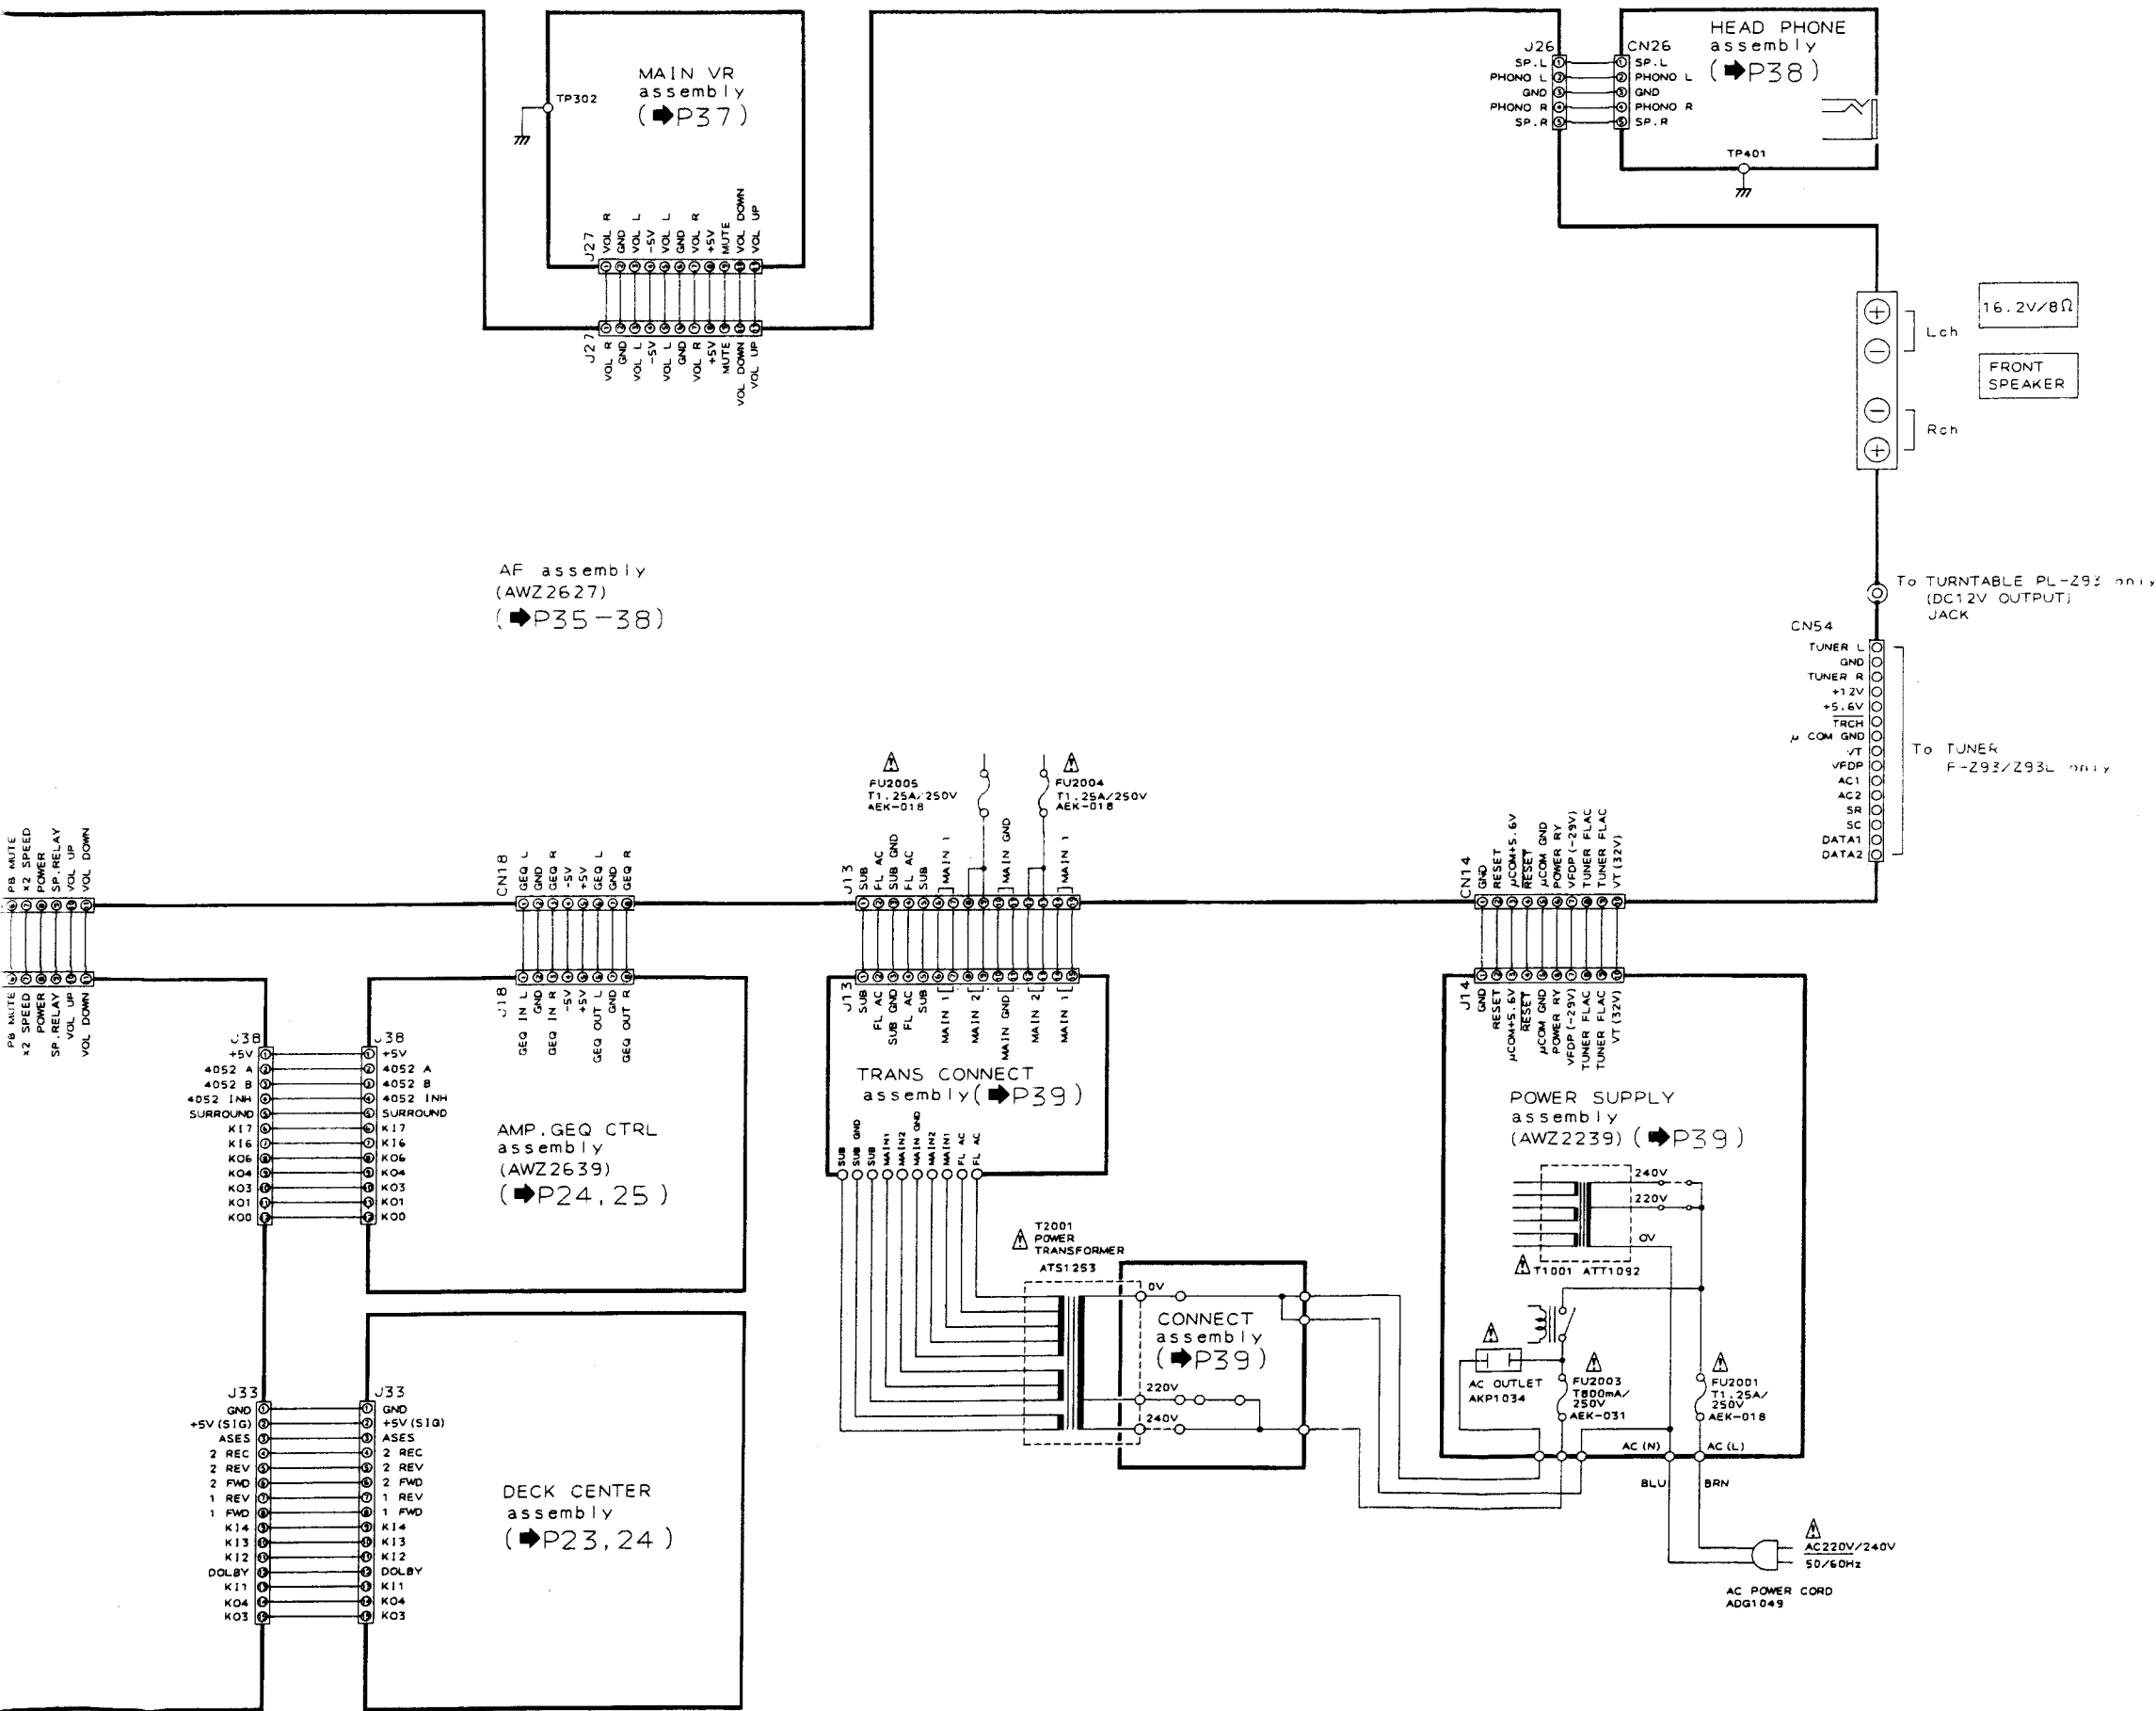

- RESISTORS:**  
Indicated in  $\Omega$ ,  $\frac{1}{2}W$ ,  $\frac{1}{4}W$ ,  $\pm 5\%$  tolerance unless otherwise noted k:k $\Omega$ , A  
M: M $\Omega$ , (F):  $\pm 1\%$ , (G):  $\pm 2\%$ , (K):  $\pm 10\%$  (M):  $\pm 20\%$  tolerance
- CAPACITORS:**  
Indicated in capacity ( $\mu F$ )/voltage (V) unless otherwise noted p: pF  
Indication without voltage is 50V except electrolytic capacitor.
- VOLTAGE, CURRENT:**  
[Symbol]: Signal voltage at (33W + 33W 8 $\Omega$ ) output (1kHz)  
[Symbol]: DC voltage (V) at no input signal  
Value in ( ) is DC voltage at rated power.  
[Symbol] mA: DC current at no input signal
- OTHERS:**  
[Symbol]: Signal route.  
[Symbol]: Adjusting point.  
The  $\Delta$  mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.  
\* marked capacitors and resistors have parts numbers.

This is the basic schematic diagram, but the actual circuit may vary due to improvements in design.

**SWITCHES:**

- DECK-1 SW assembly**
  - S811 1FWD
  - S812 1REV
  - S813 1FF
  - S814 1REW
  - S815 1STOP
- DECK-2 SW assembly**
  - S821 2FWD
  - S822 2REV
  - S823 2FF
  - S824 2REW
  - S825 2STOP
- DECK CENTER assembly**
  - S848 DOLBY OFF-ON
  - S849 REVERSE MODE
  - S853 COPY
  - S861 DECK-2 REC
  - S862 HI-SPEED COPY
  - S871 DECK-2 MUTE
  - S872 A.S.E.S
  - S875 DECK-2 PAUSE
- AMP, GEQ CTRL assembly**
  - S701 CD
  - S702 PHONO
  - S703 TUNER
  - S704 TAPE
  - S705 VIDEO
  - S707 POWER

The underline indicates the switch position

2.2 AMP, GEQ CTRL (AWZ2639), DECK-1 SW, DECK-2 SW,  
DECK CTRL (AWZ2635), DECK CENTER assembly,  
MECHA UNIT(1)(AWY1052) and MECHA UNIT(2)(AWY1053)

NOTE

1. This P.C.B connection diagram is viewed from the parts mounted side.
2. The parts which have been mounted on the board can be replaced with those shown with the corresponding wiring symbols listed in the following Table.

| P.C.B. pattern diagram indication | Corresponding part symbol | Part Name                |
|-----------------------------------|---------------------------|--------------------------|
|                                   |                           | Transistor               |
|                                   |                           | Resistor type transistor |
|                                   |                           | Diode                    |
|                                   |                           | Resistor                 |
|                                   |                           | Capacitor (Polarity)     |
|                                   |                           | Capacitor (Non-polarity) |

Others



| P.C.B. pattern diagram indication | Part Name                                |
|-----------------------------------|--|
| IC                                | IC                                       |
| S                                 | Switch                                   |
| RY                                | Relay                                    |
| L                                 | Coil                                     |
| F                                 | Filter                                   |
| VR                                | Variable resistor or Semi-fixed resistor |

3. The capacitor terminal marked with ⊕ (double circles) shows negative terminal.
4. The diode terminal marked with ⊕ (double circles) shows cathode side.
5. The transistor terminal to which E is affixed shows the emitter.

A

B

AMP, GEQ CTRL assembly (AWZ2639)

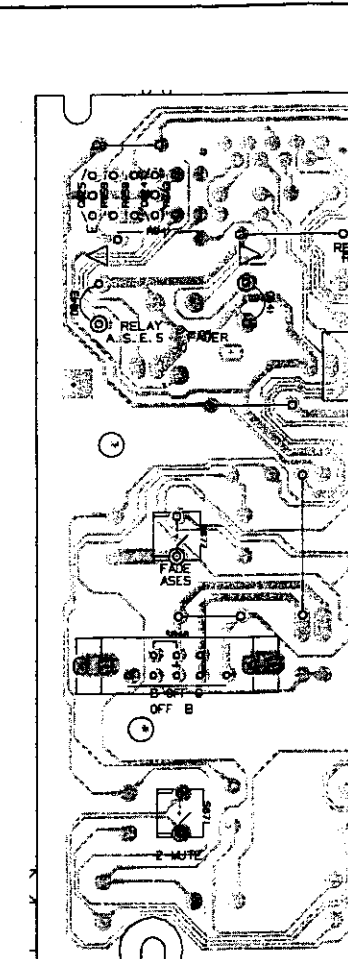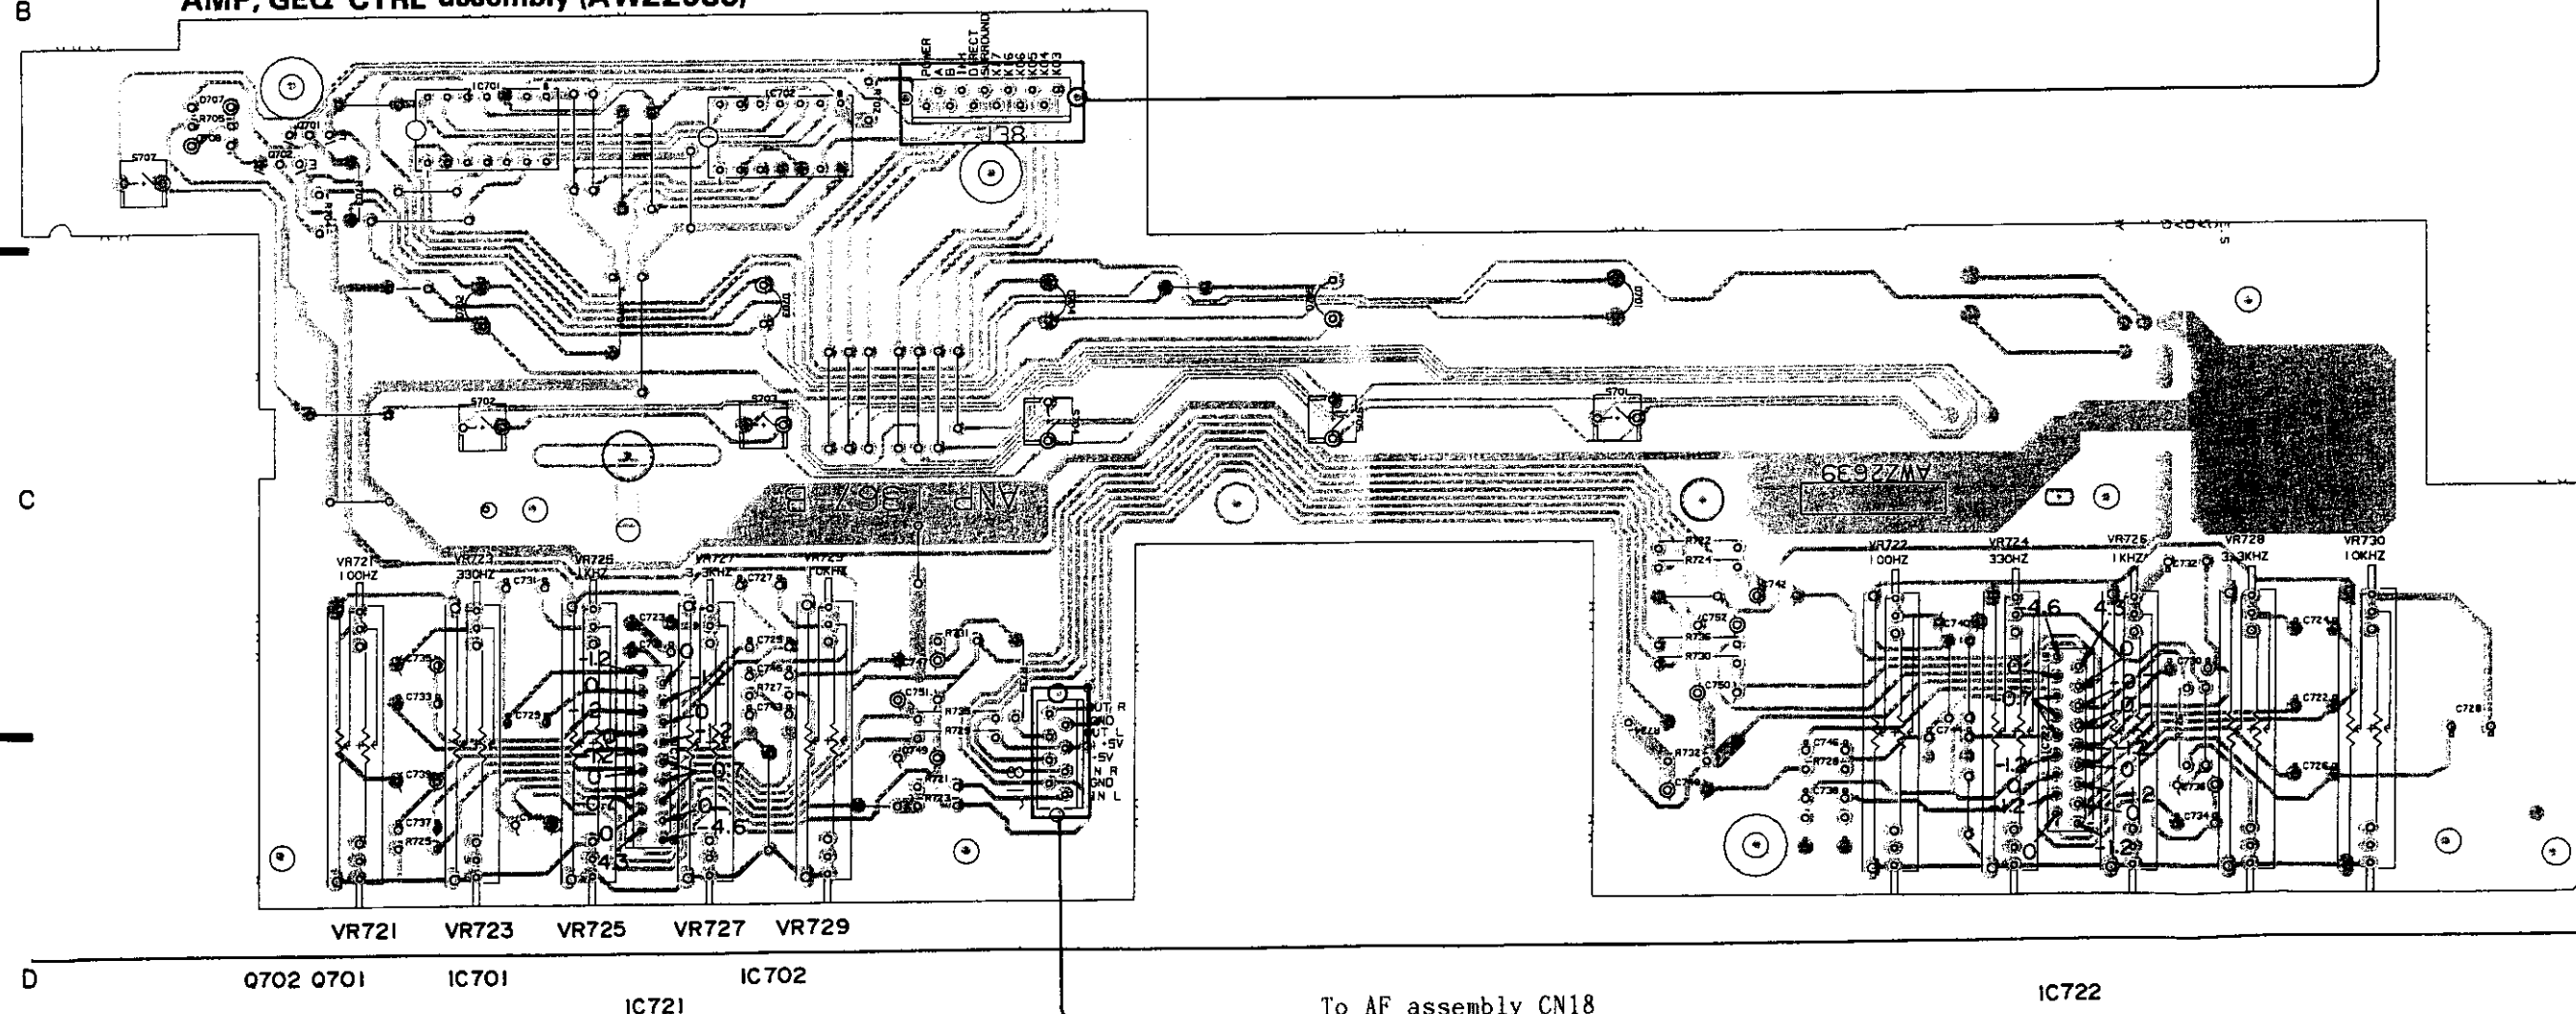

DECK CENTER assen

To AF assembly CN18  
(To page 33)

A




B

C


D

DECK-1 SW assembly

DECK-2 SW assembly

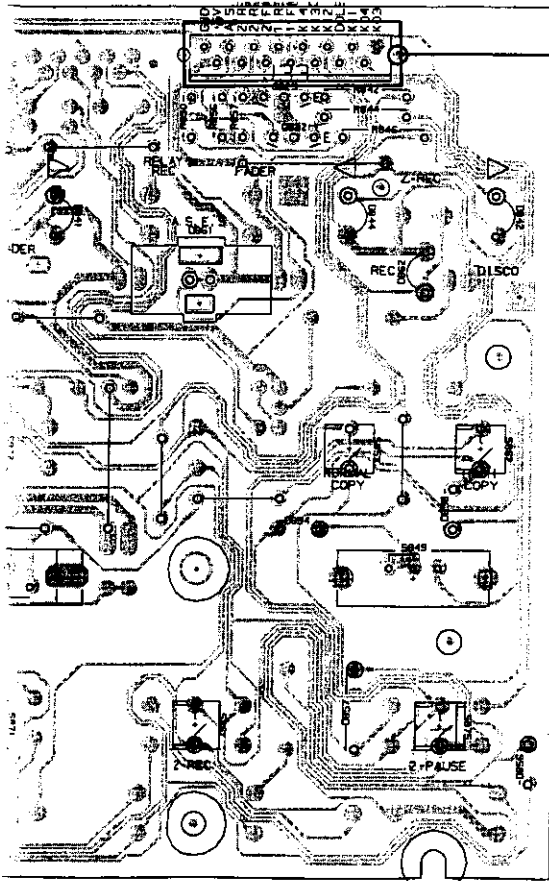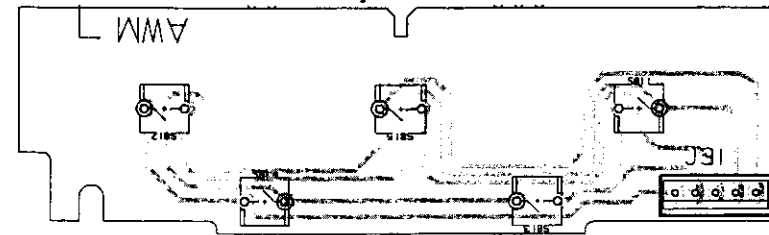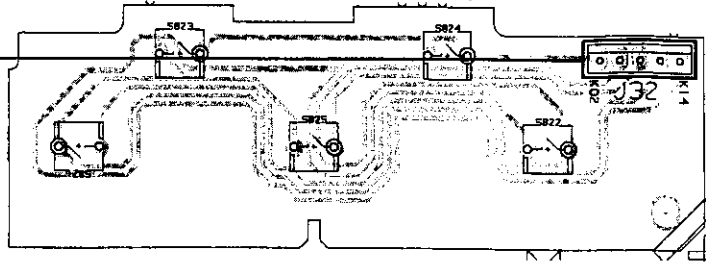

TER assembly

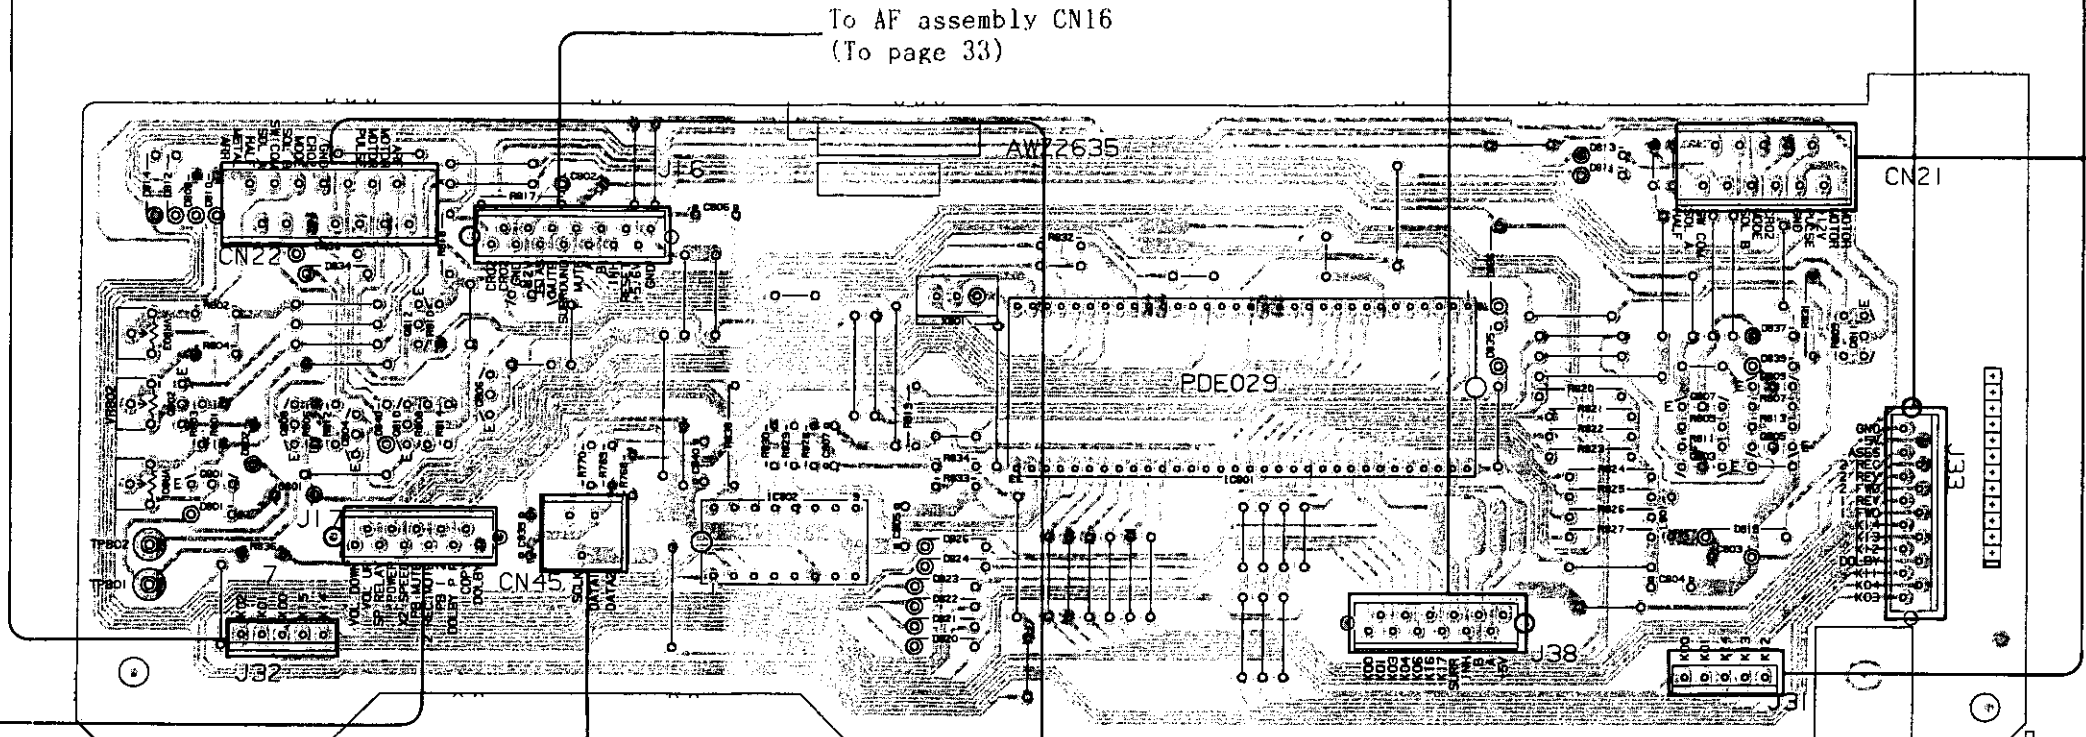

DECK CTRL assembly (AWZ2635)

VR801-VR803

Q802 Q808 Q804 Q812 Q806 Q814  
Q801 Q810


IC802

IC801


Q807 Q809 Q811  
Q803 Q805

To AF assembly CN17  
(To page 33)

To AF assembly J45  
(To page 34)

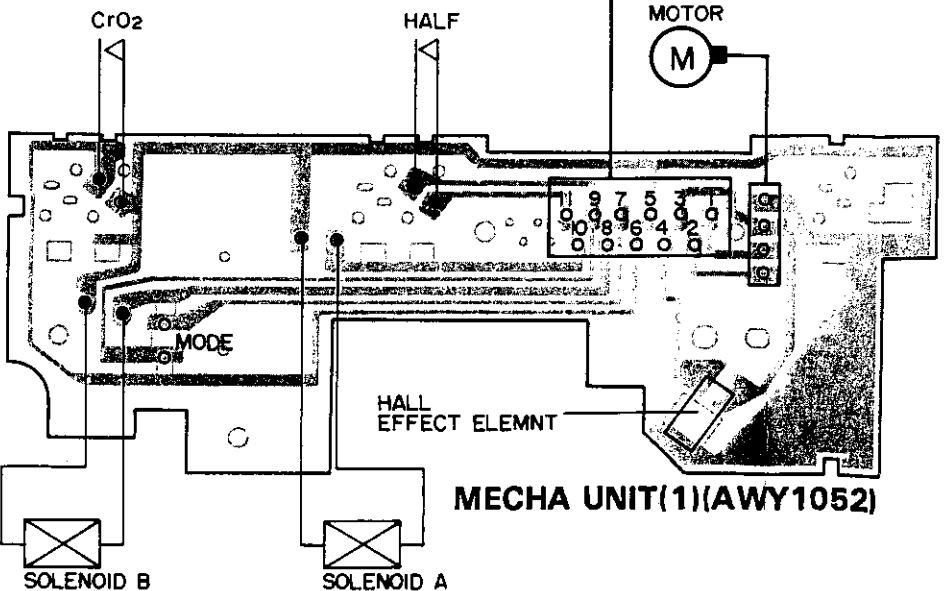

MECHA UNIT (1) (AWY1052)

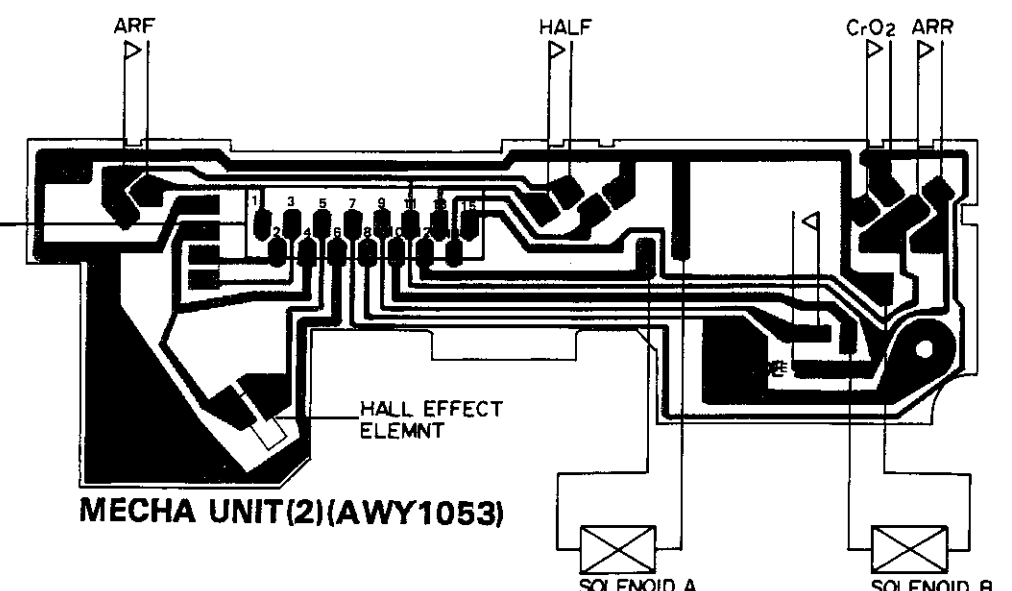

MECHA UNIT (2) (AWY1053)

AMP. GEQ CTRL assembly

DECK CTRL assembly (AWZ2635)


MECHA UNIT(1)

MECHA UNIT(2)

DECK-1 SW assembly

DECK-2 SW assembly

DECK CENTER assembly

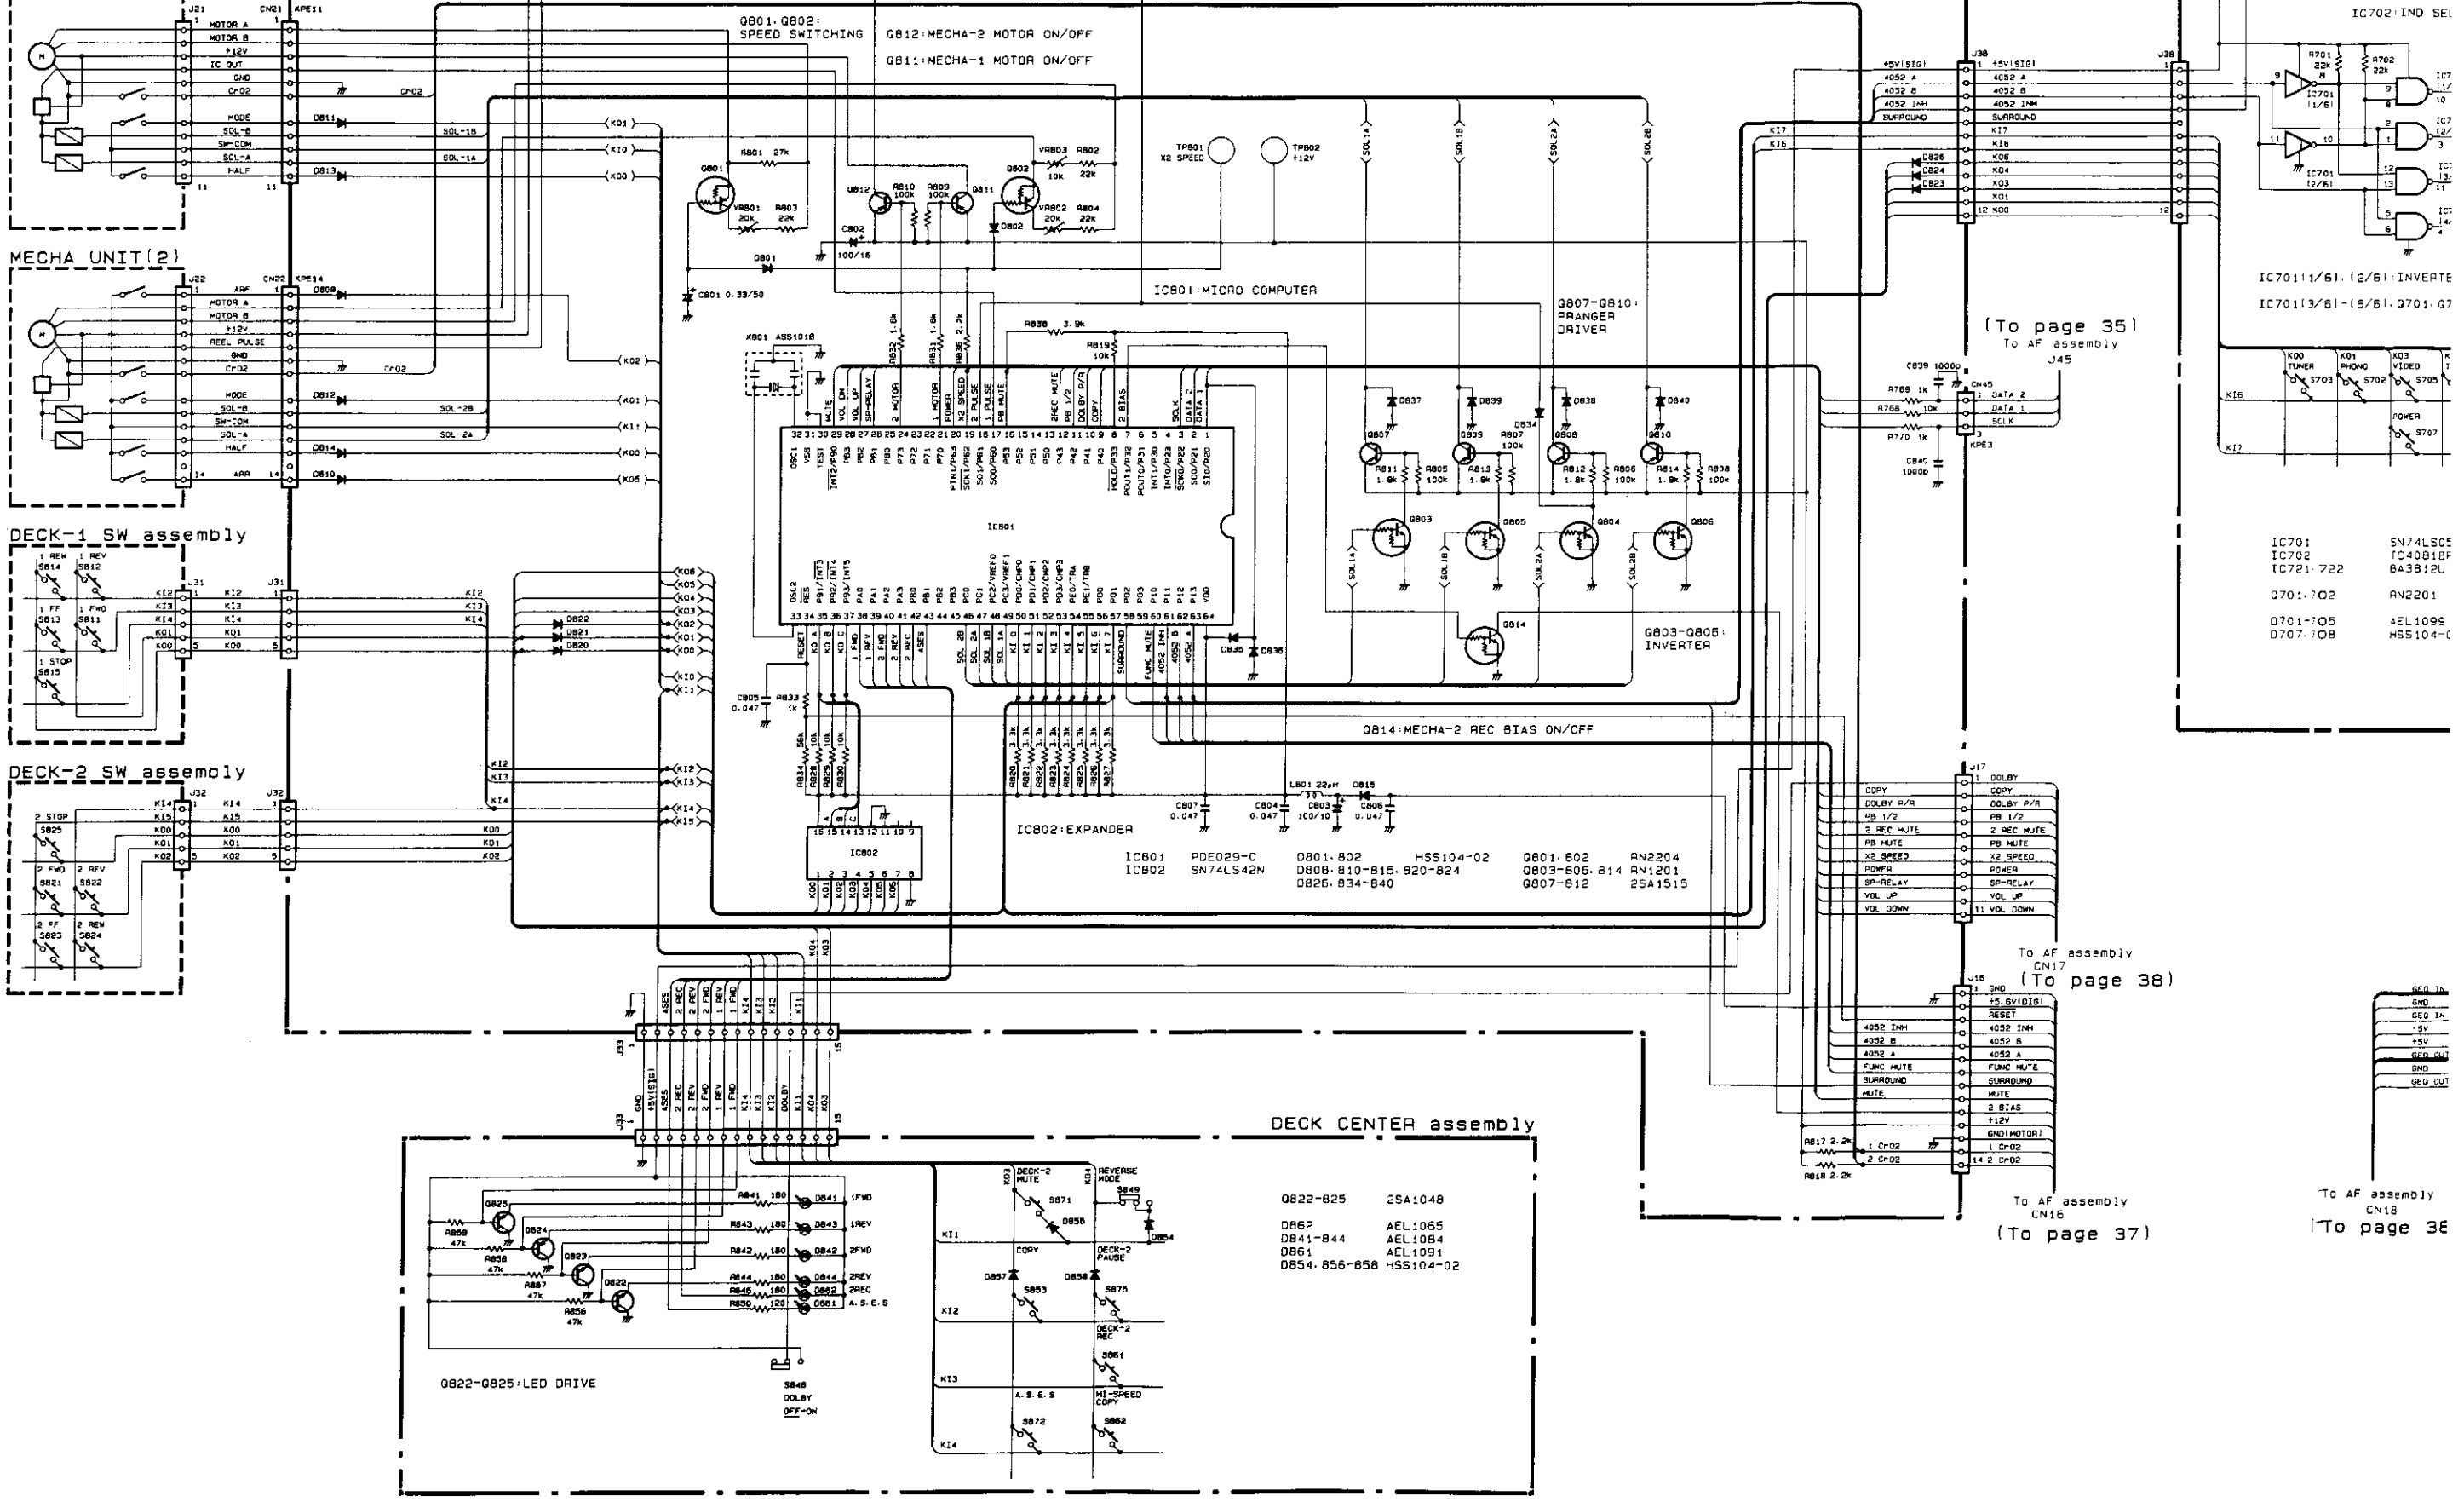

(To page 35)  
To AF assembly  
J45

To AF assembly  
CN17  
(To page 38)

To AF assembly  
CN16  
(To page 37)

- IC701 SN74LS05
- IC702 IC4081BF
- IC721-722 BA3812L
- Q701-Q02 AN2201
- Q701-Q05 AEL1099
- Q707-Q08 HSS104-C

- Q822-Q825 2SA1048
- Q826-Q844 AEL1065
- Q841-Q844 AEL1084
- Q861 AEL1091
- Q854, 856-858 HSS104-02


A

B

C

D

AMP. GEQ CTRL assembly (AWZ2639)

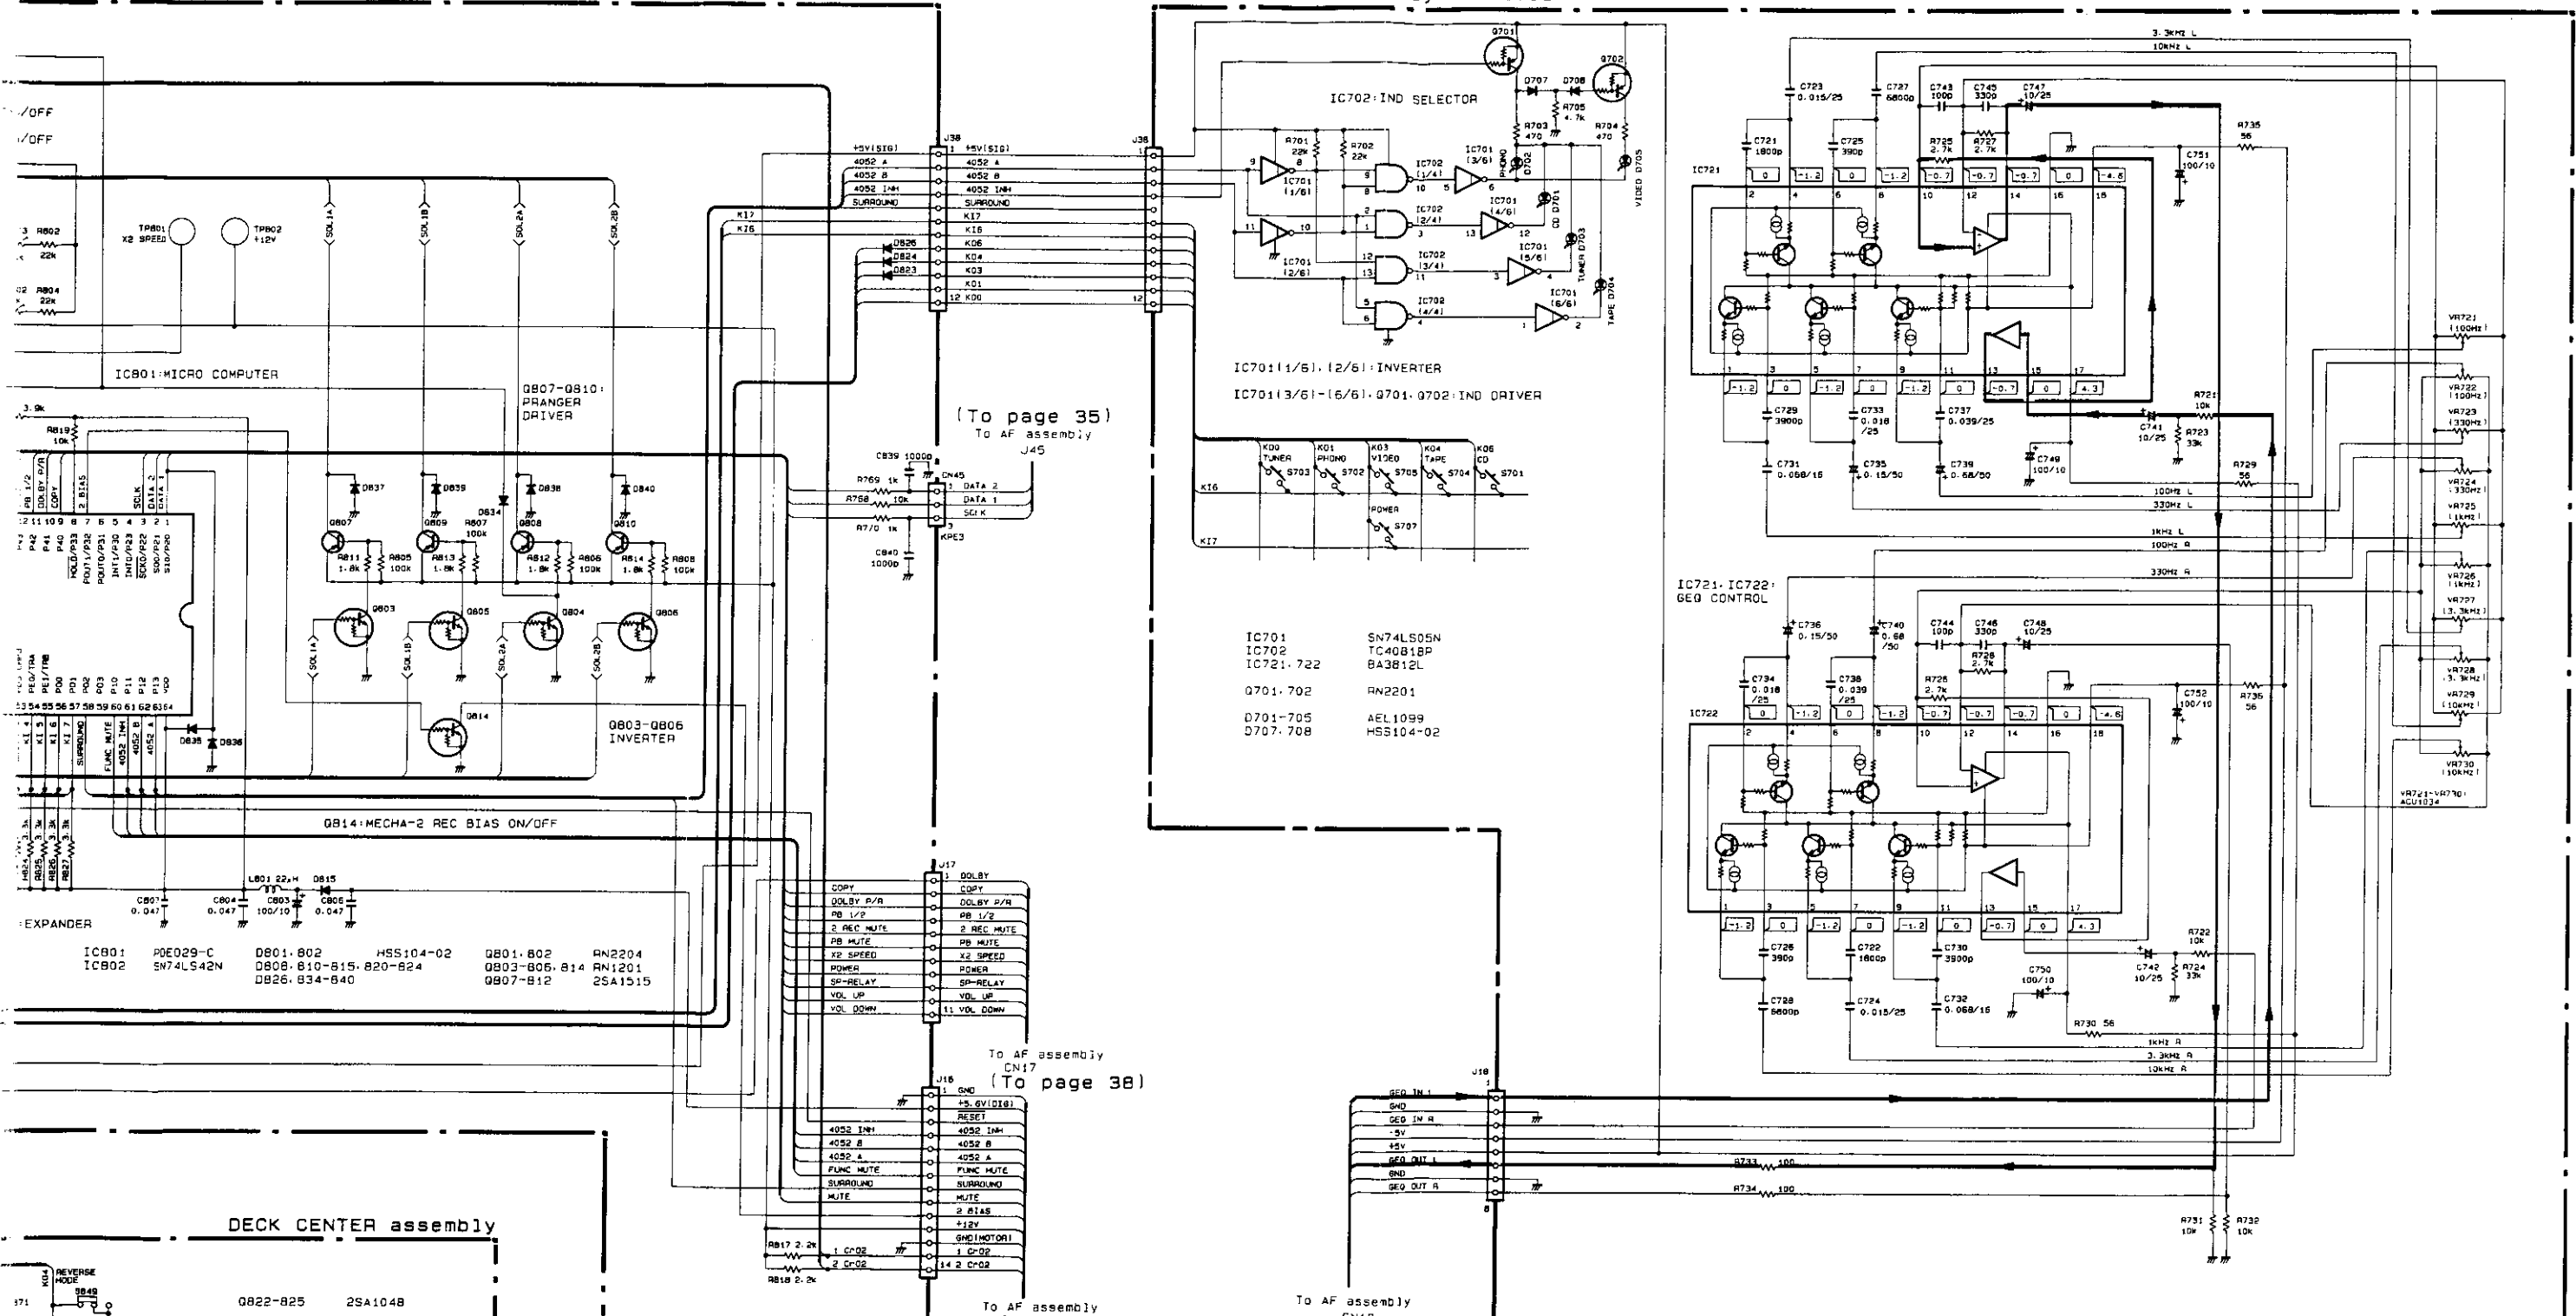


(To page 35)  
To AF assembly  
J45

To AF assembly  
CN17  
(To page 38)

To AF assembly  
CN16  
(To page 37)

To AF assembly  
CN18  
(To page 38)

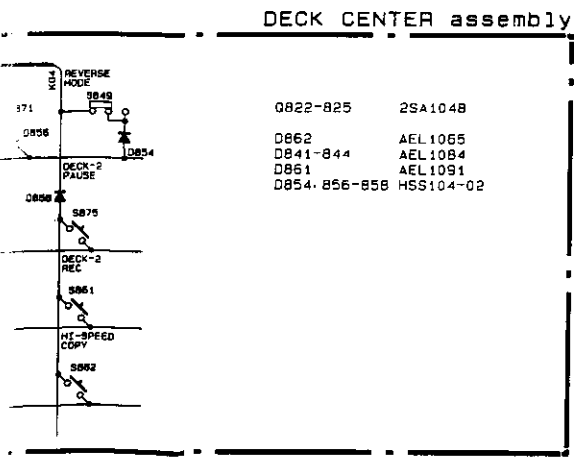

A  
B  
C

D

4

5

6

7

8

4

5

6

7

8

9

2.3 FUNCTION assembly (AWK1245)

NOTE

1. This P.C.B connection diagram is viewed from the parts mounted side.
2. The parts which have been mounted on the board can be replaced with those shown with the corresponding wiring symbols listed in the following Table.

| P.C.B. pattern diagram indication | Corresponding part symbol | Part Name                |
|-----------------------------------|---------------------------|--------------------------|
|                                   |                           | Transistor               |
|                                   |                           | Resistor type transistor |
|                                   |                           | Diode                    |
|                                   |                           | Resistor                 |
|                                   |                           | Capacitor (Polarity)     |
|                                   |                           | Capacitor (Non-polarity) |

Others

| P.C.B. pattern diagram indication | Part Name                                |
|-----------------------------------|--|
| IC                                | IC                                       |
| S                                 | Switch                                   |
| RY                                | Relay                                    |
| L                                 | Coil                                     |
| F                                 | Filter                                   |
| VR                                | Variable resistor or Semi-fixed resistor |



3. The capacitor terminal marked with ⊖ (double circles) shows negative terminal.
4. The diode terminal marked with ⊖ (double circles) shows cathode side.
5. The transistor terminal to which E is affixed shows the emitter.

A

B

C

D

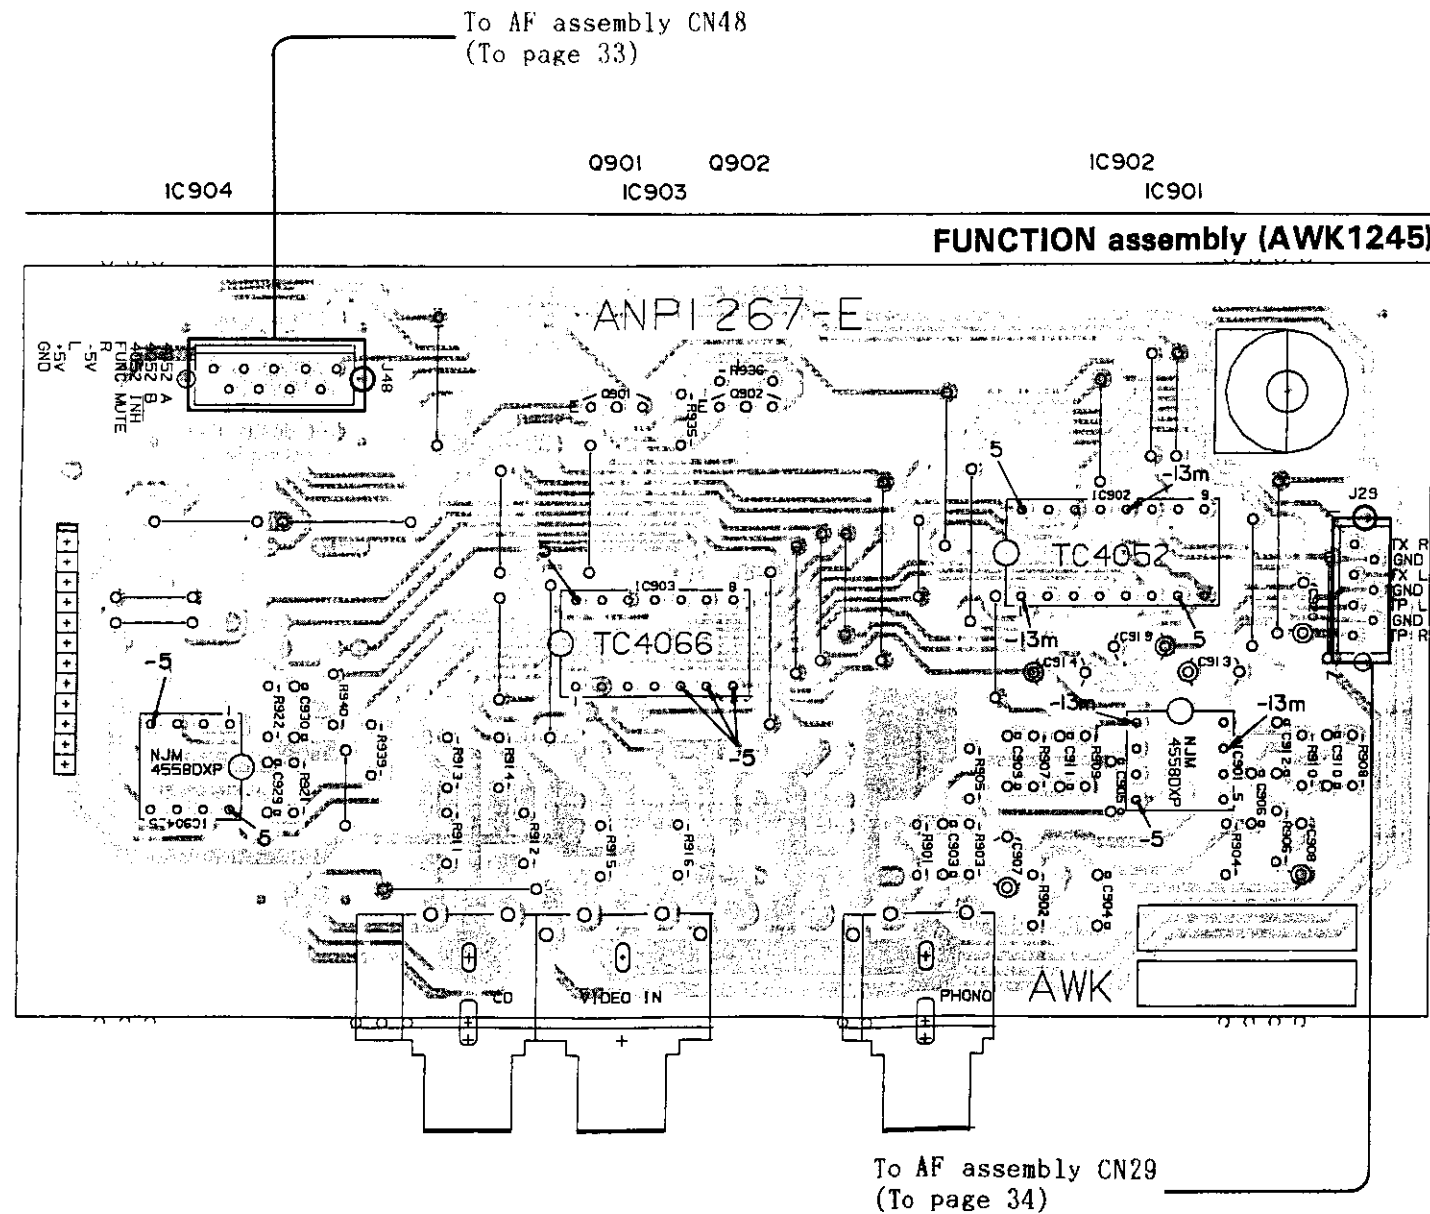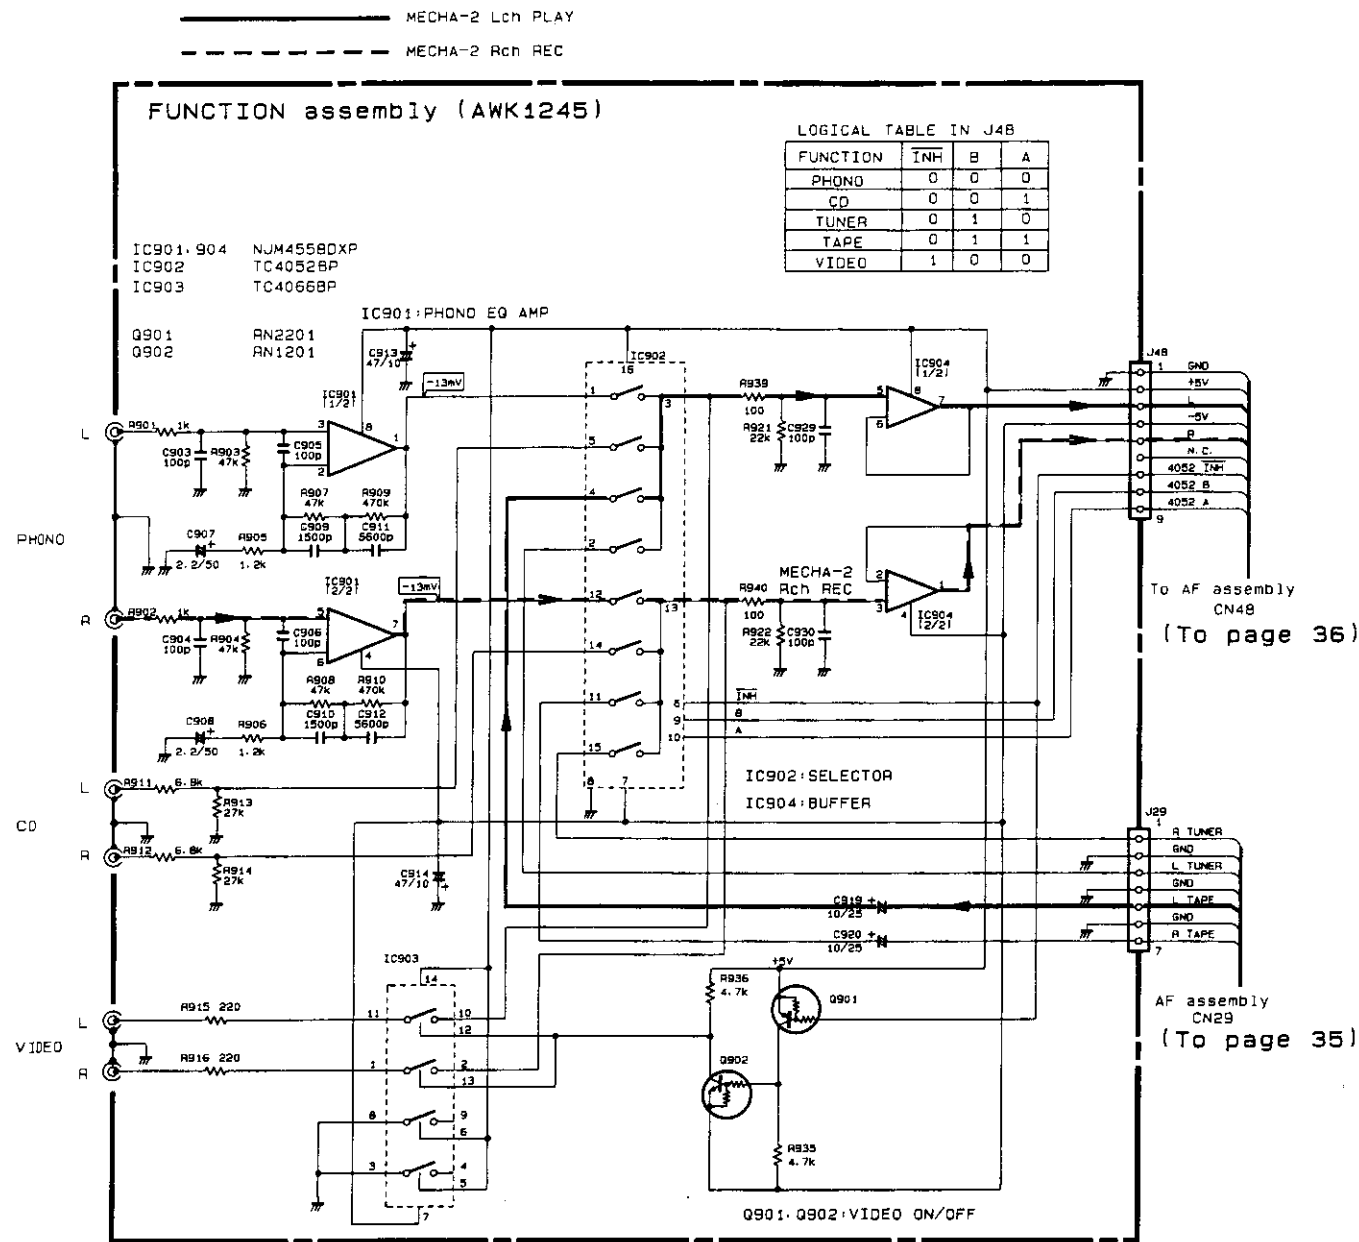



NOTE

- 1. This P.C.B connection diagram is viewed from the parts mounted side.
- 2. The parts which have been mounted on the board can be replaced with those shown with the corresponding wiring symbols listed in the following Table.

| P.C.B. pattern diagram indication | Corresponding part symbol | Part Name                |
|-----------------------------------|---------------------------|--------------------------|
|                                   |                           | Transistor               |
|                                   |                           | Radiator type transistor |
|                                   |                           | Diode                    |
|                                   |                           | Resistor                 |
|                                   |                           | Capacitor (Polarity)     |
|                                   |                           | Capacitor (Non-polarity) |



Others

| P.C.B. pattern diagram indication | Part Name                                |
|-----------------------------------|--|
|                                   | IC                                       |
|                                   | Switch                                   |
|                                   | Relay                                    |
|                                   | Coil                                     |
|                                   | Filter                                   |
|                                   | Variable resistor or Semi-fixed resistor |

- 3. The capacitor terminal marked with ⊕ (double circles) shows negative terminal.
- 4. The diode terminal marked with ⊕ (double circles) shows cathode side.
- 5. The transistor terminal to which E is affixed shows the emitter.

NOTE:

This picture shows the foil side of the printed circuit.

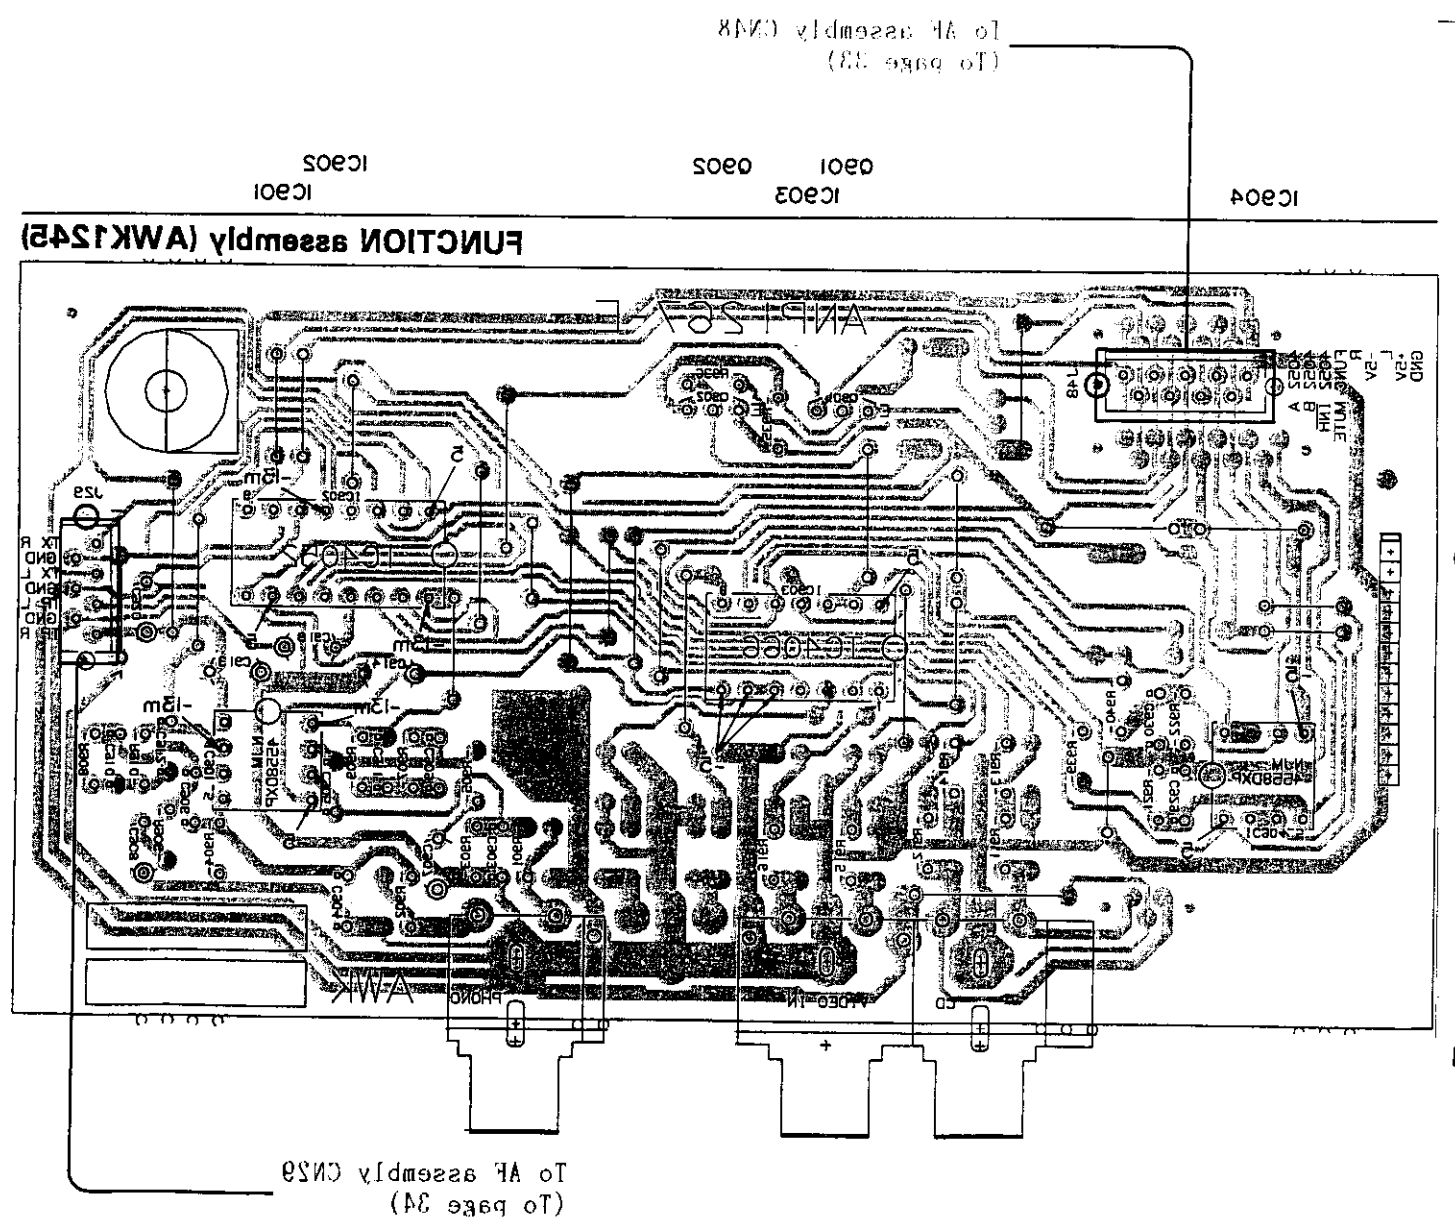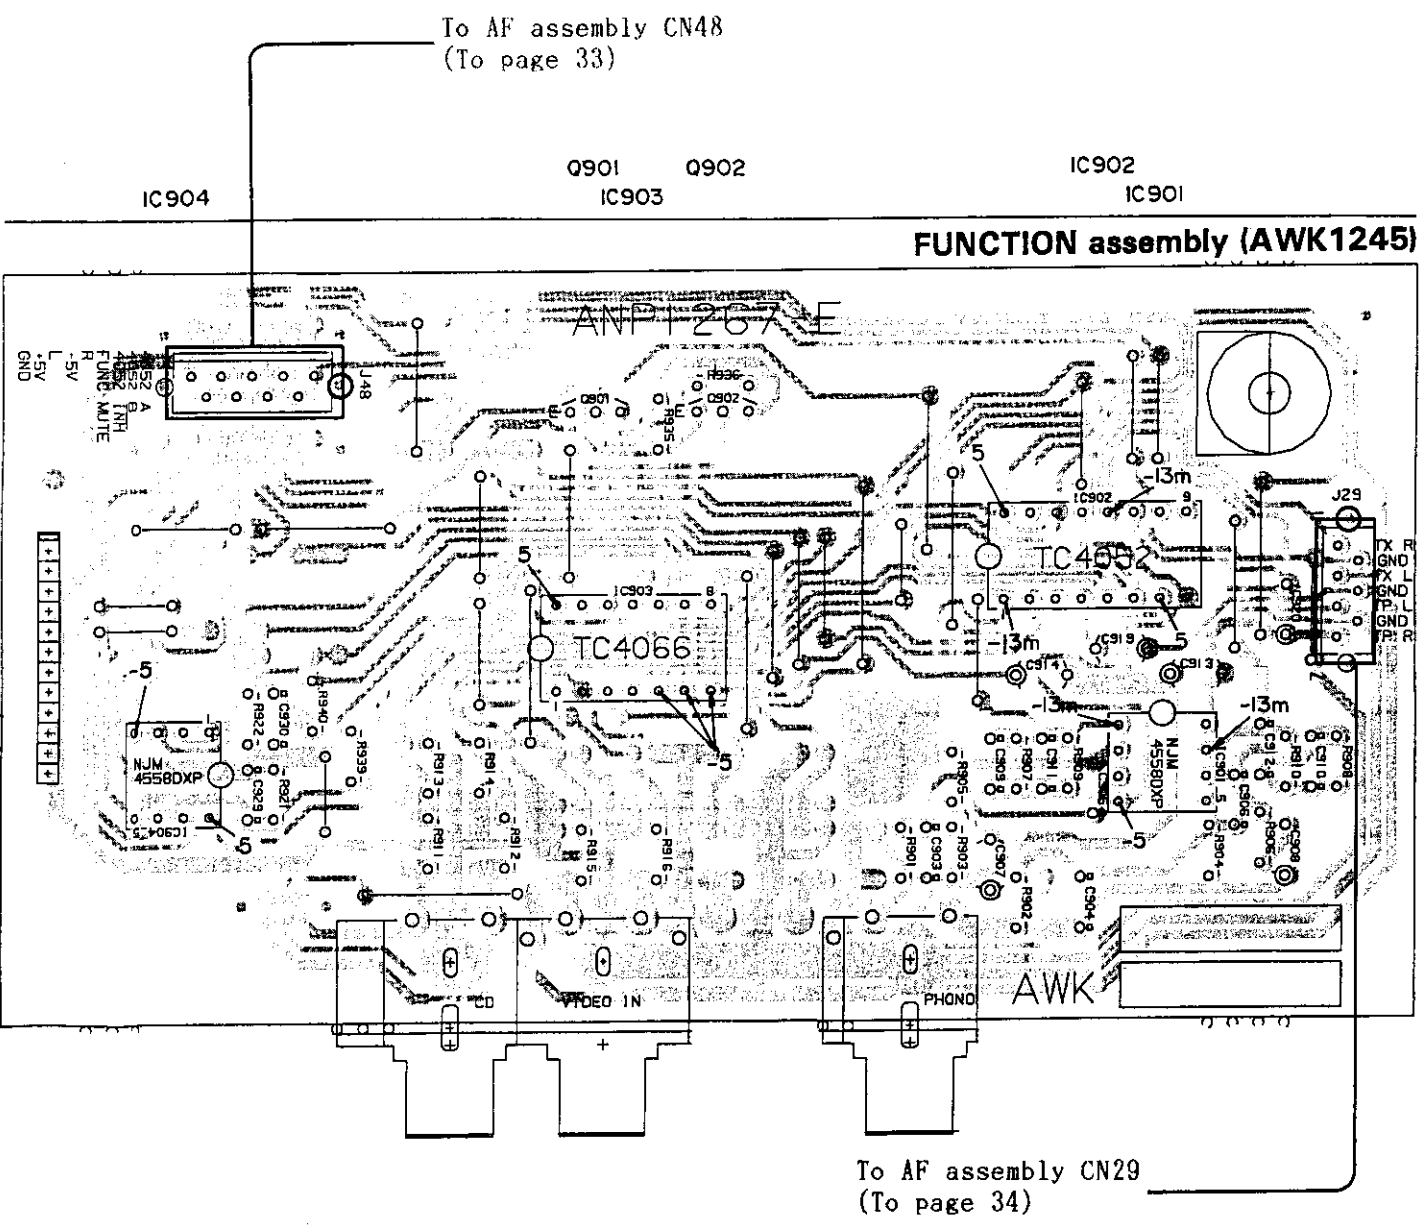





0284 0280-0285 0212 0414 0413 0226-0229 0211-0214 IC411 IC412 IC413 IC414 IC415 IC416  
 IC255 IC253 0251-0254 IC417 0251-0254 IC251 0251-0254 IC418  
 0431-0434 IC201 0481-0483 IC419 0432-0438  
 IC306


VR411 VR412 VR413 VR414 VR415 VR416 VR417 VR418 VR419 VR420 VR421 VR422 VR423 VR424 VR425 VR426 VR427 VR428 VR429 VR430 VR431 VR432 VR433 VR434 VR435 VR436 VR437 VR438 VR439 VR440 VR441 VR442 VR443 VR444 VR445 VR446 VR447 VR448 VR449 VR450 VR451 VR452 VR453 VR454 VR455 VR456 VR457 VR458 VR459 VR460 VR461 VR462 VR463 VR464 VR465 VR466 VR467 VR468 VR469 VR470 VR471 VR472 VR473 VR474 VR475 VR476 VR477 VR478 VR479 VR480 VR481 VR482 VR483 VR484 VR485 VR486 VR487 VR488 VR489 VR490 VR491 VR492 VR493 VR494 VR495 VR496 VR497 VR498 VR499 VR500

To TUNER F-293\293L only  
 To DECK CTRL assembly C142 (To page 21)  
 To FUNCTION assembly 129 (To page 27)

IC309 IC335  
 VR451-VR454  
 To TURN TABLE PL-293 only (DC15V OUTPUT)

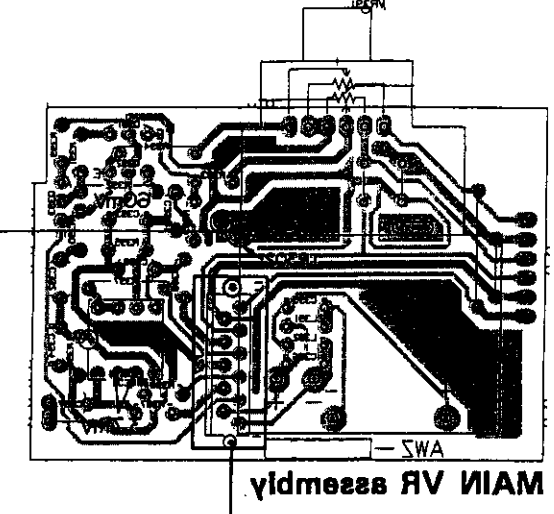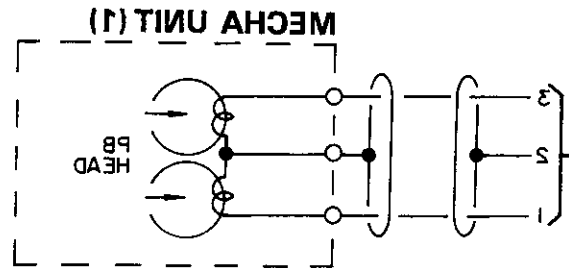

To DECK CTRL assembly 117 (To page 21)  
 To DECK CTRL assembly 116 (To page 21)

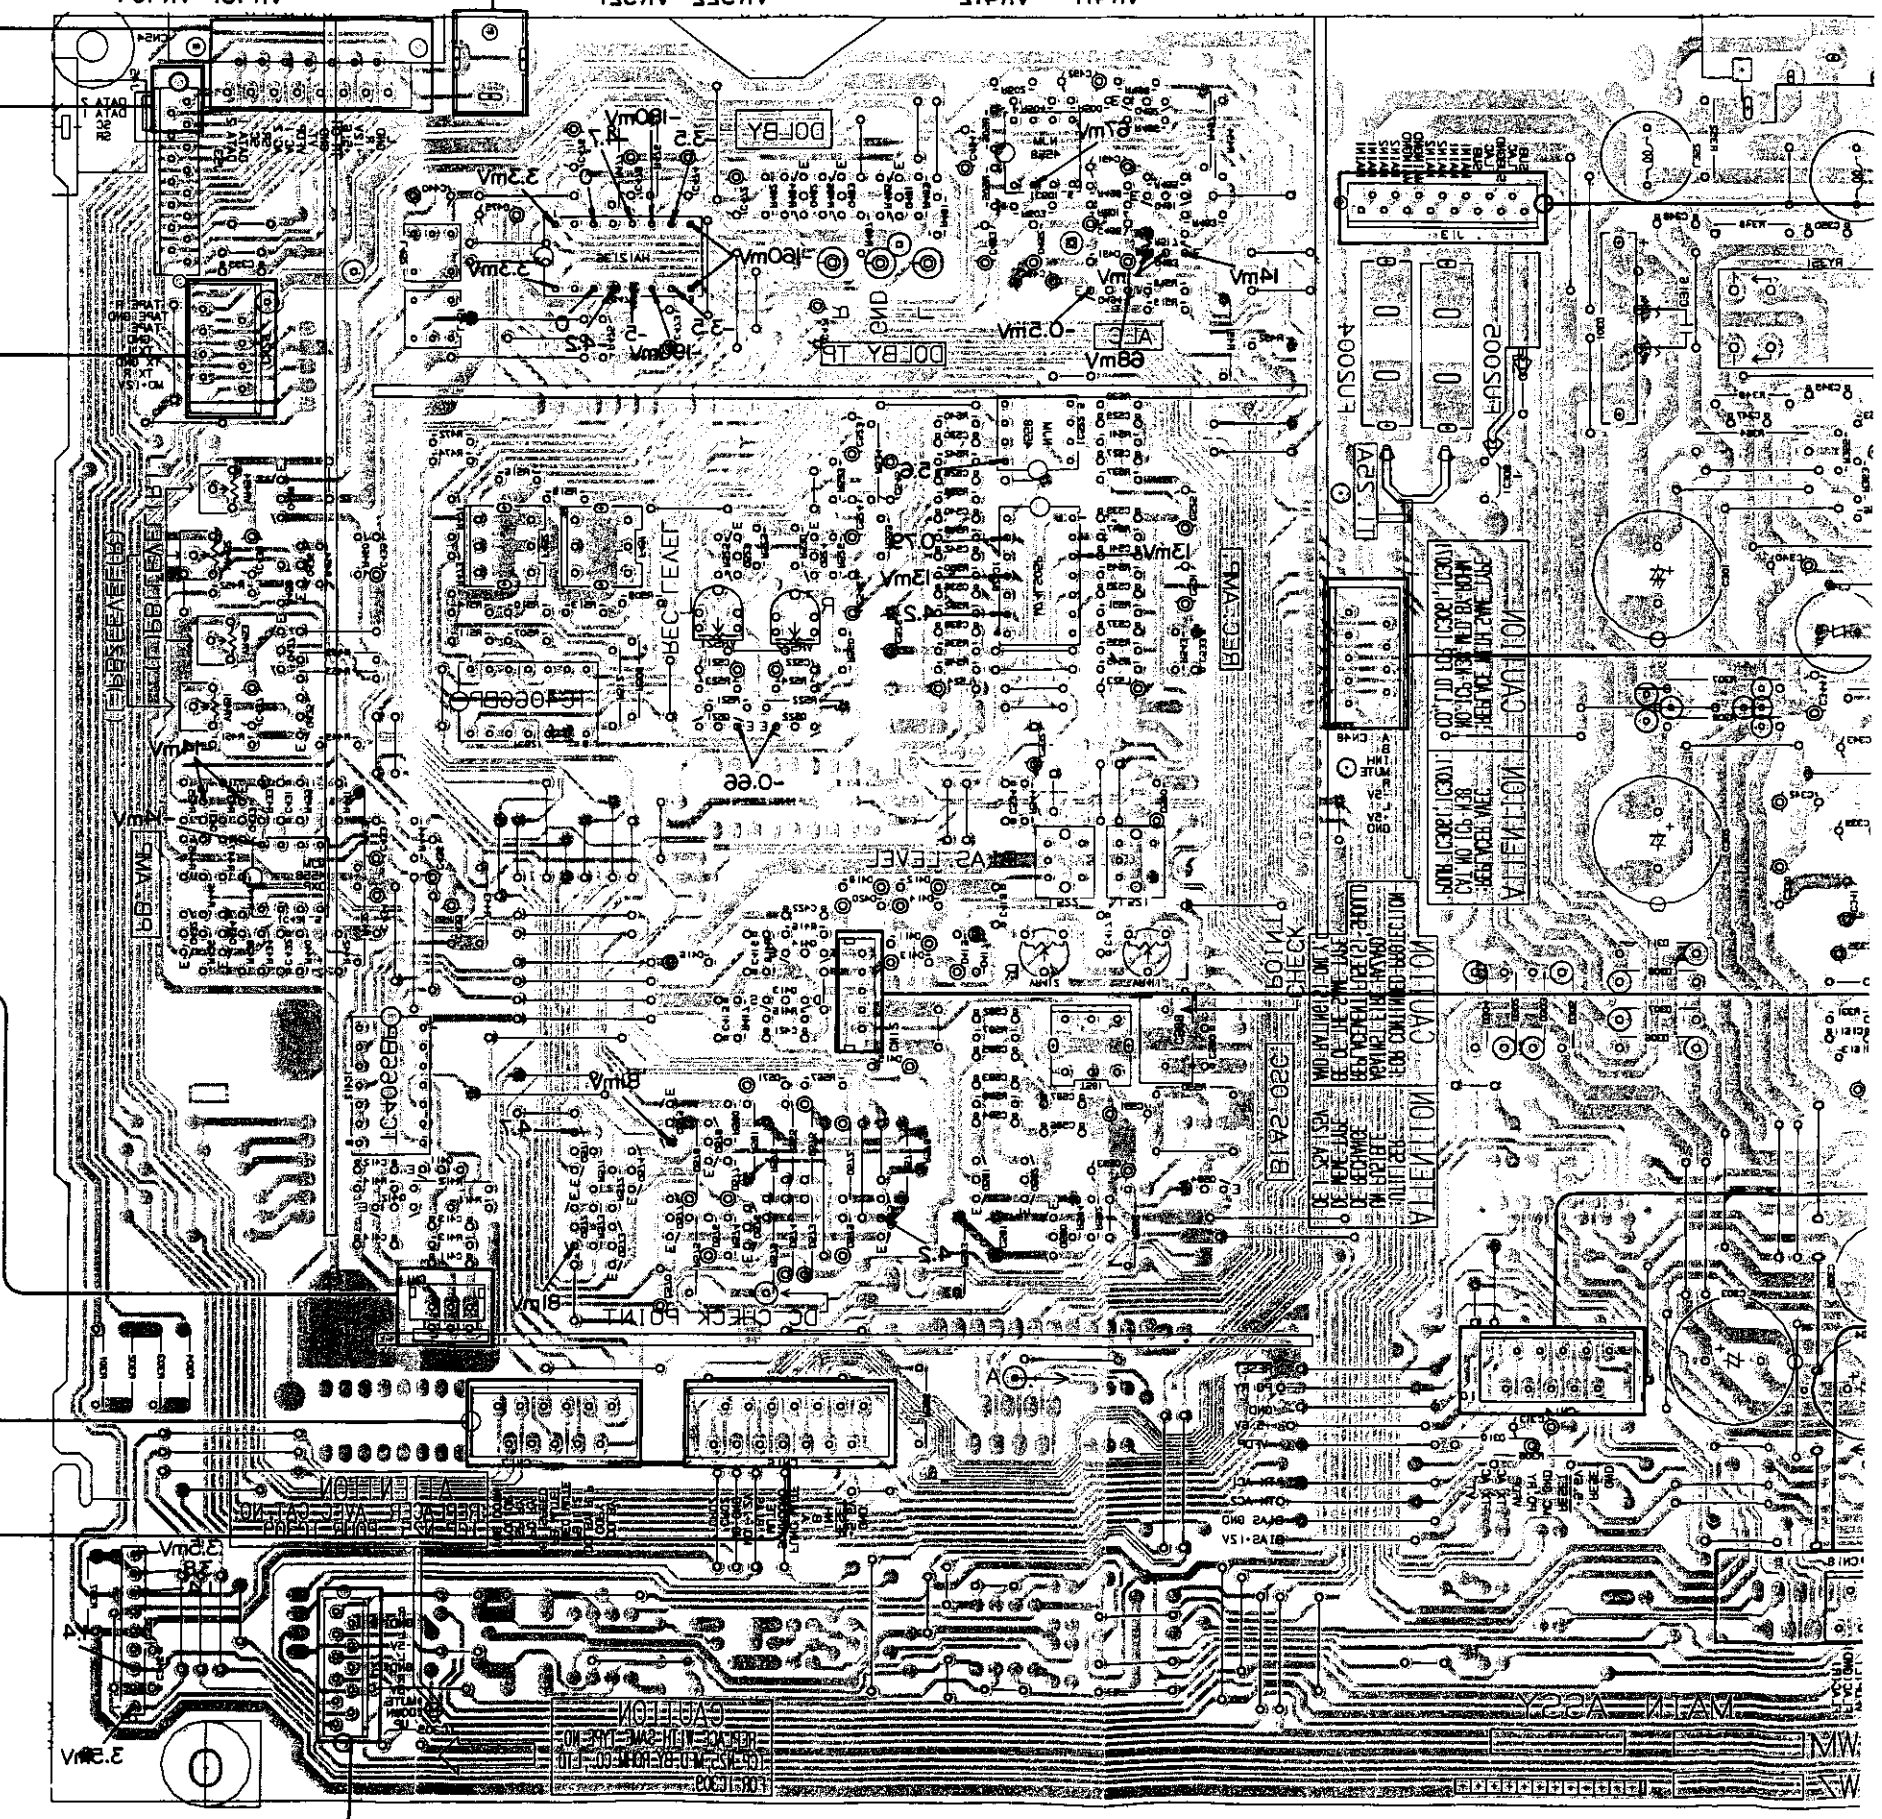

A

B

C

D

8

8


7

8

8

4

(12)

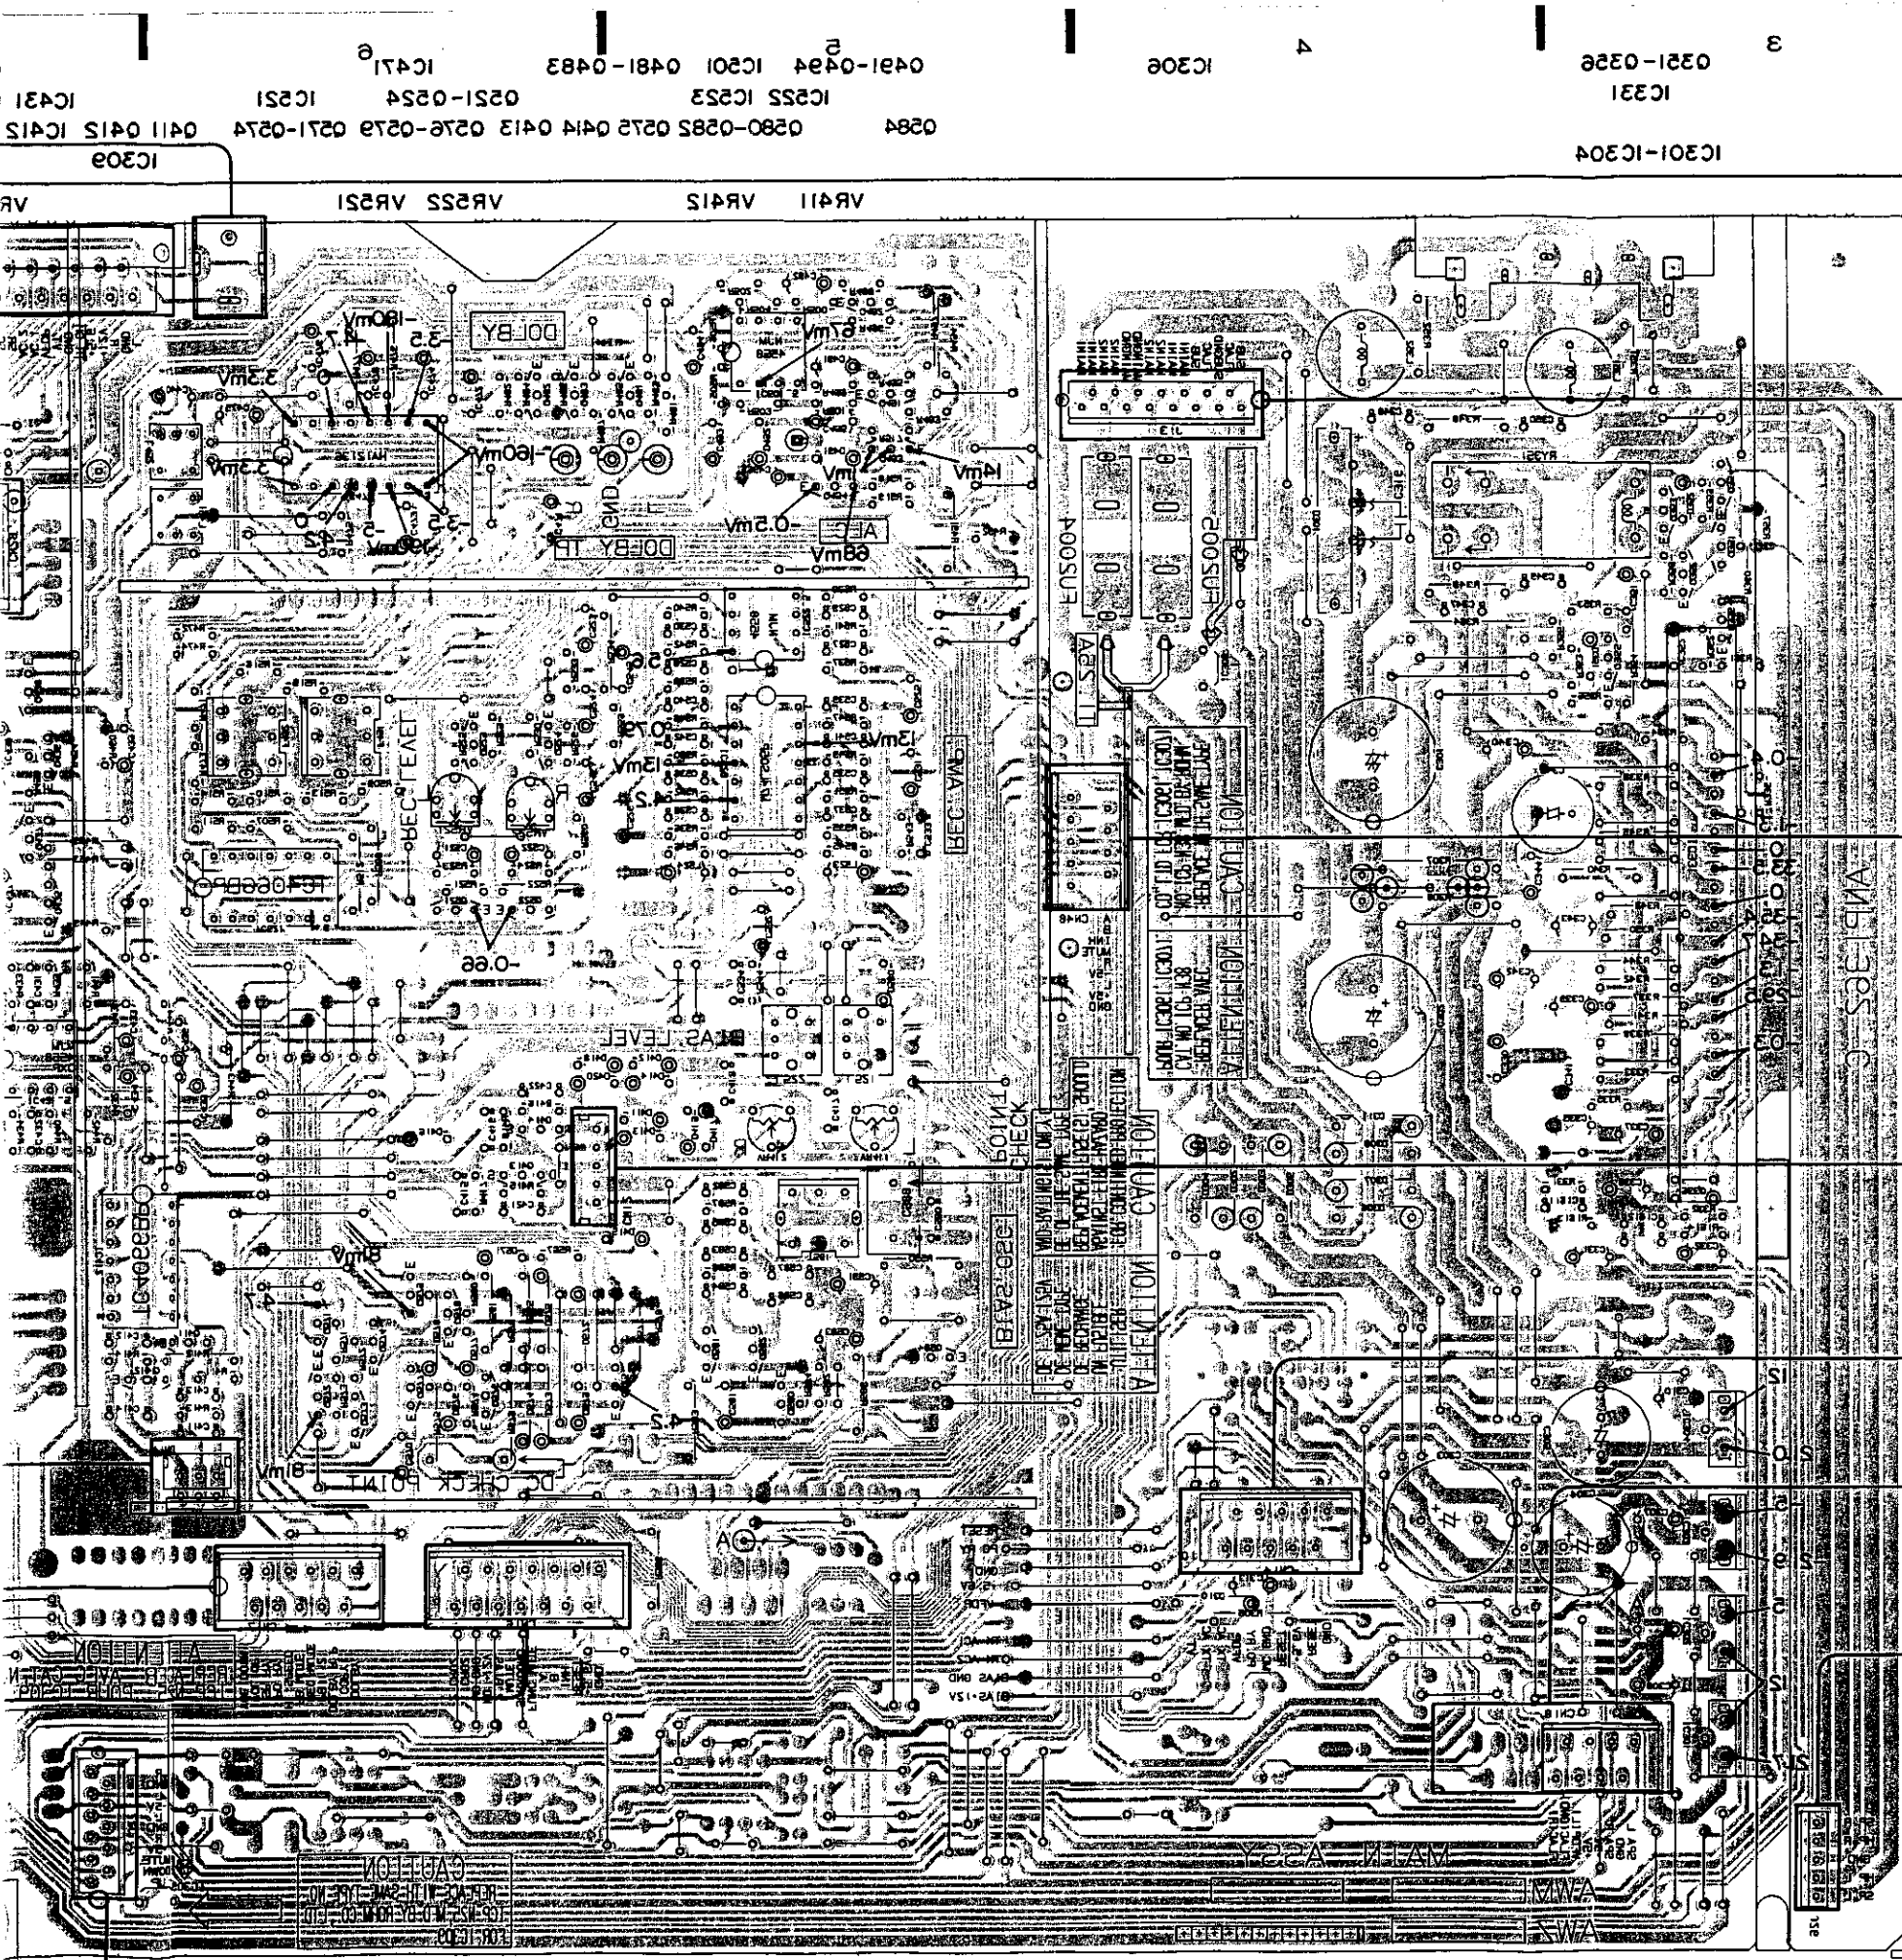



IC301-IC304  
 IC331  
 0321-0326  
 IC308  
 0284 0280-0285 0275 0413 0276-0279 0211-0274 0415 IC415  
 IC255 IC253 0251-0254 IC251  
 0491-0494 IC201 0481-0483 IC471  
 IC303

To TRANS CONNECT assembly 113  
 (To page 41)

To FUNCTION assembly 148  
 (To page 27)

To POWER SUPPLY assembly 114  
 (To page 40)

To AMP GEO CTRL assembly 118  
 (To page 19)

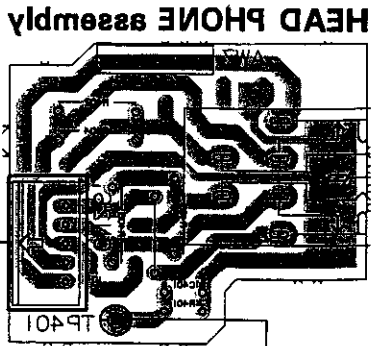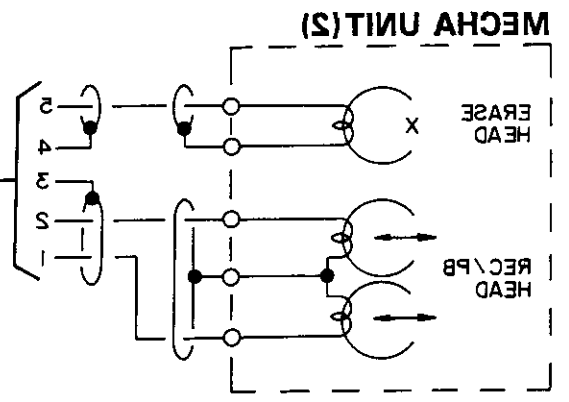

A  
 B  
 C  
 D

AF assembly (A52852)

IC303  
 VR411 VR415  
 VR251 VR251  
 IC303



2.4 AF (AWZ2627), MAIN VR and HEAD PHONE assembly


A

To TRANS CONNECT assembly J13  
(To page 41)

B

To FUNCTION assembly J48  
(To page 27)


MECHA UNIT (2)

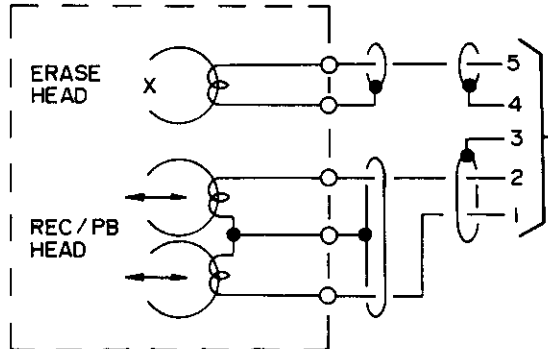

C


To POWER SUPPLY assembly J14  
(To page 40)

HEAD PHONE assembly

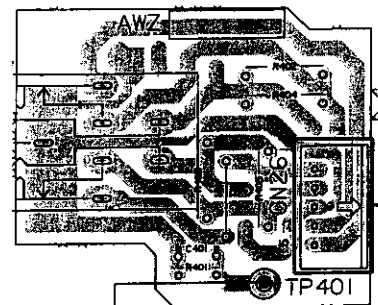

To AMP GEQ CTRL assembly J18  
(To page 19)

D

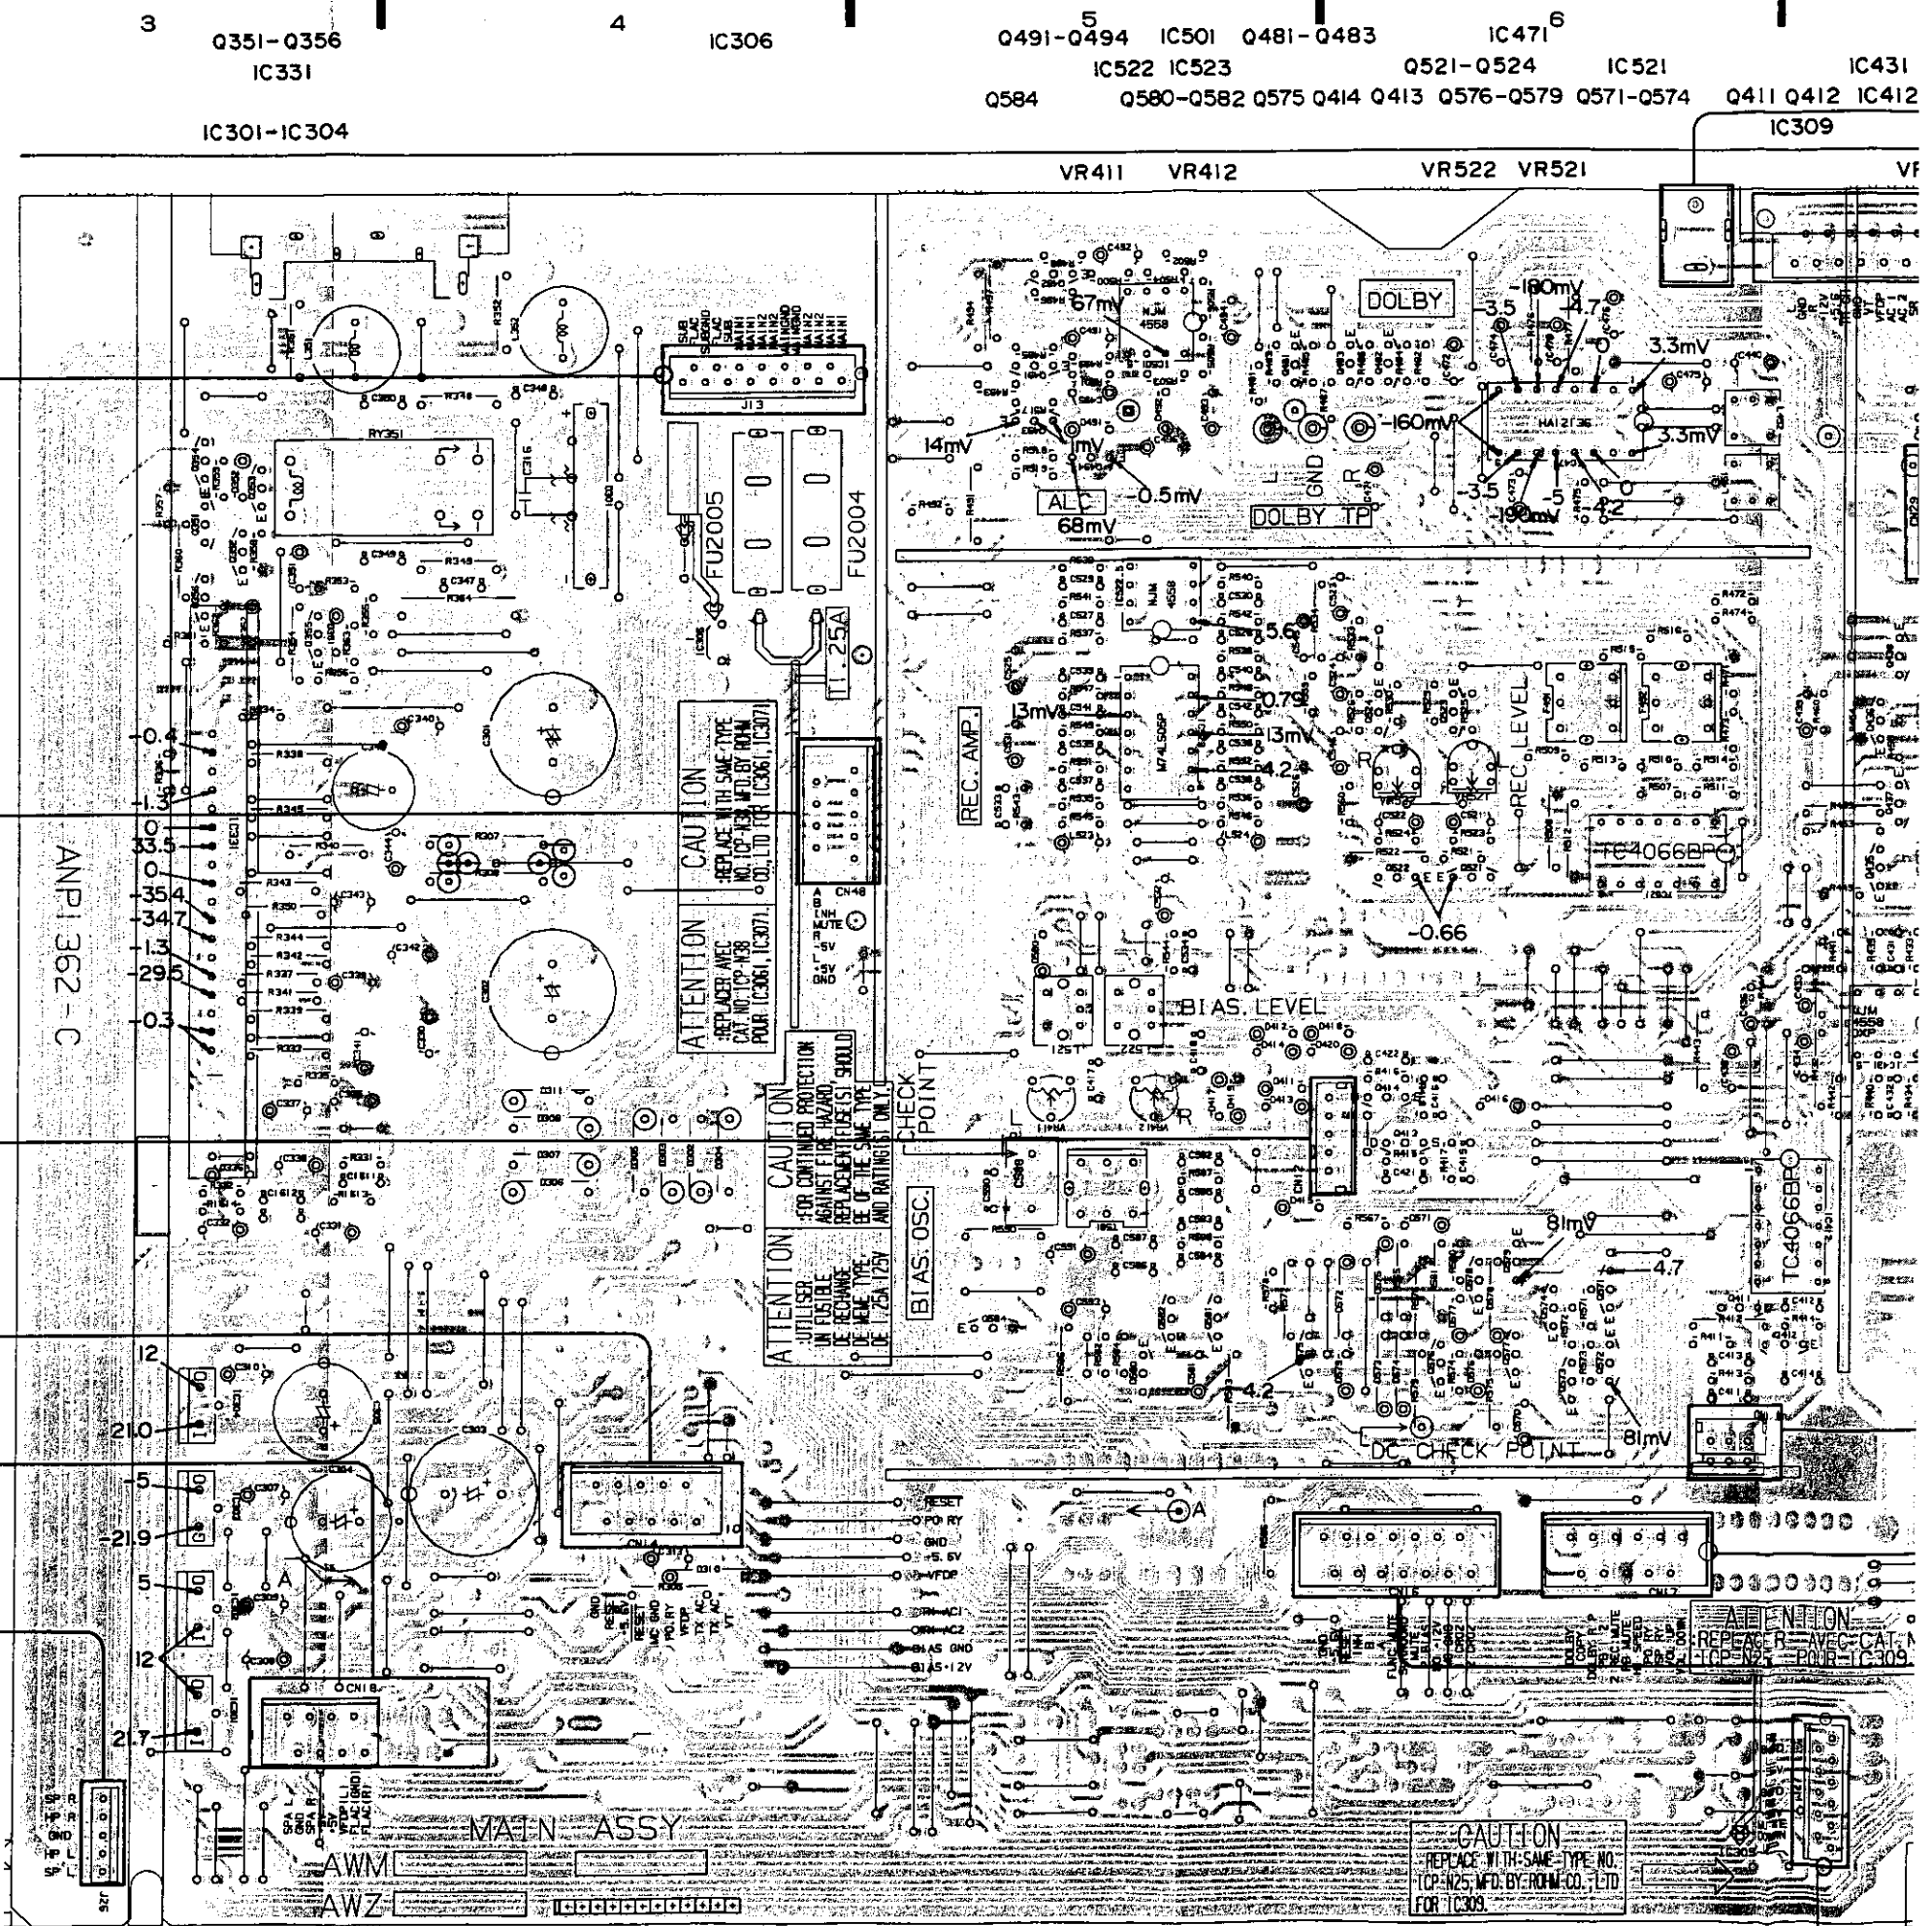

AF assembly (AWZ2627)

To TURN TABLE PL-Z93 only(DC12V,OUTPUT)

To TUNER F-Z93/Z93L only

To DECK CTRL assembly CN45  
(To page 21)

To FUNCTION assembly J29  
(To page 27)

To DECK CTRL assembly J17  
(To page 21)

To DECK CTRL assembly J16  
(To page 21)

NOTE

- 1. This P.C.B connection diagram is viewed from the parts mounted side.
- 2. The parts which have been mounted on the board can be replaced with those shown with the corresponding wiring symbols listed in the following Table.



| P.C.B. pattern diagram indication | Corresponding part symbol | Part Name                |
|-----------------------------------|---------------------------|--------------------------|
|                                   |                           | Transistor               |
|                                   |                           | Radiator type transistor |
|                                   |                           | Diode                    |
|                                   |                           | Resistor                 |
|                                   |                           | Capacitor (Polarity)     |
|                                   |                           | Capacitor (Non-polarity) |

Others

| P.C.B. pattern diagram indication | Part Name                                |
|-----------------------------------|--|
| IC                                | IC                                       |
| S                                 | Switch                                   |
| RY                                | Relay                                    |
| L                                 | Coil                                     |
| F                                 | Filter                                   |
| VR                                | Variable resistor or Semi-fixed resistor |

- 3. The capacitor terminal marked with ⊙ (double circles) shows negative terminal.
- 4. The diode terminal marked with ⊙ (double circles) shows cathode side.
- 5. The transistor terminal to which E is affixed shows the emitter.

MECHA UNIT (1)

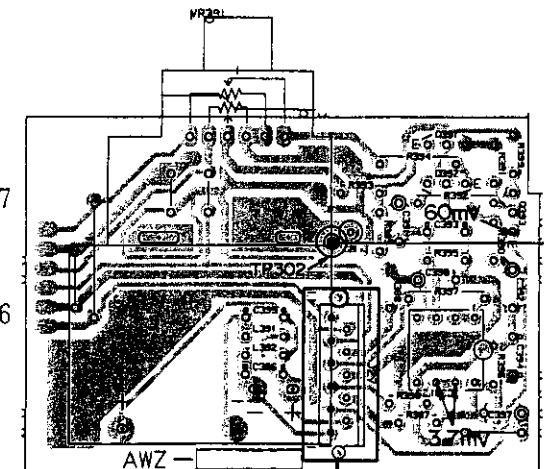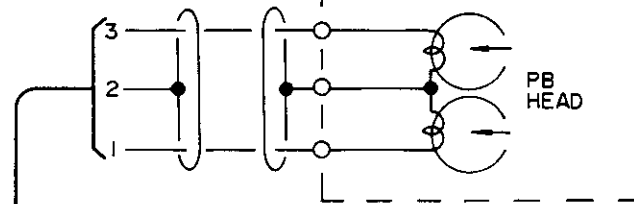

MAIN VR assembly

**CAUTION**  
REPLACE WITH SAME TYPE  
NO. (CP-N25, M.D. BY ROHM CO., LTD.)  
FOR IC306, IC307.

**ATTENTION**  
REPLACE WITH SAME TYPE  
NO. (CP-N25, M.D. BY ROHM CO., LTD.)  
FOR IC306, IC307.

**ATTENTION**  
FOR CONTINUED PROTECTION  
AGAINST FIRE HAZARD,  
REPLACEMENT (USE) SHOULD  
BE OF THE SAME TYPE  
(RATING) ONLY.

**CAUTION**  
REPLACE WITH SAME TYPE NO.  
(CP-N25, M.D. BY ROHM CO., LTD.)  
FOR IC309.

A

B

C


D


A

B

C

D

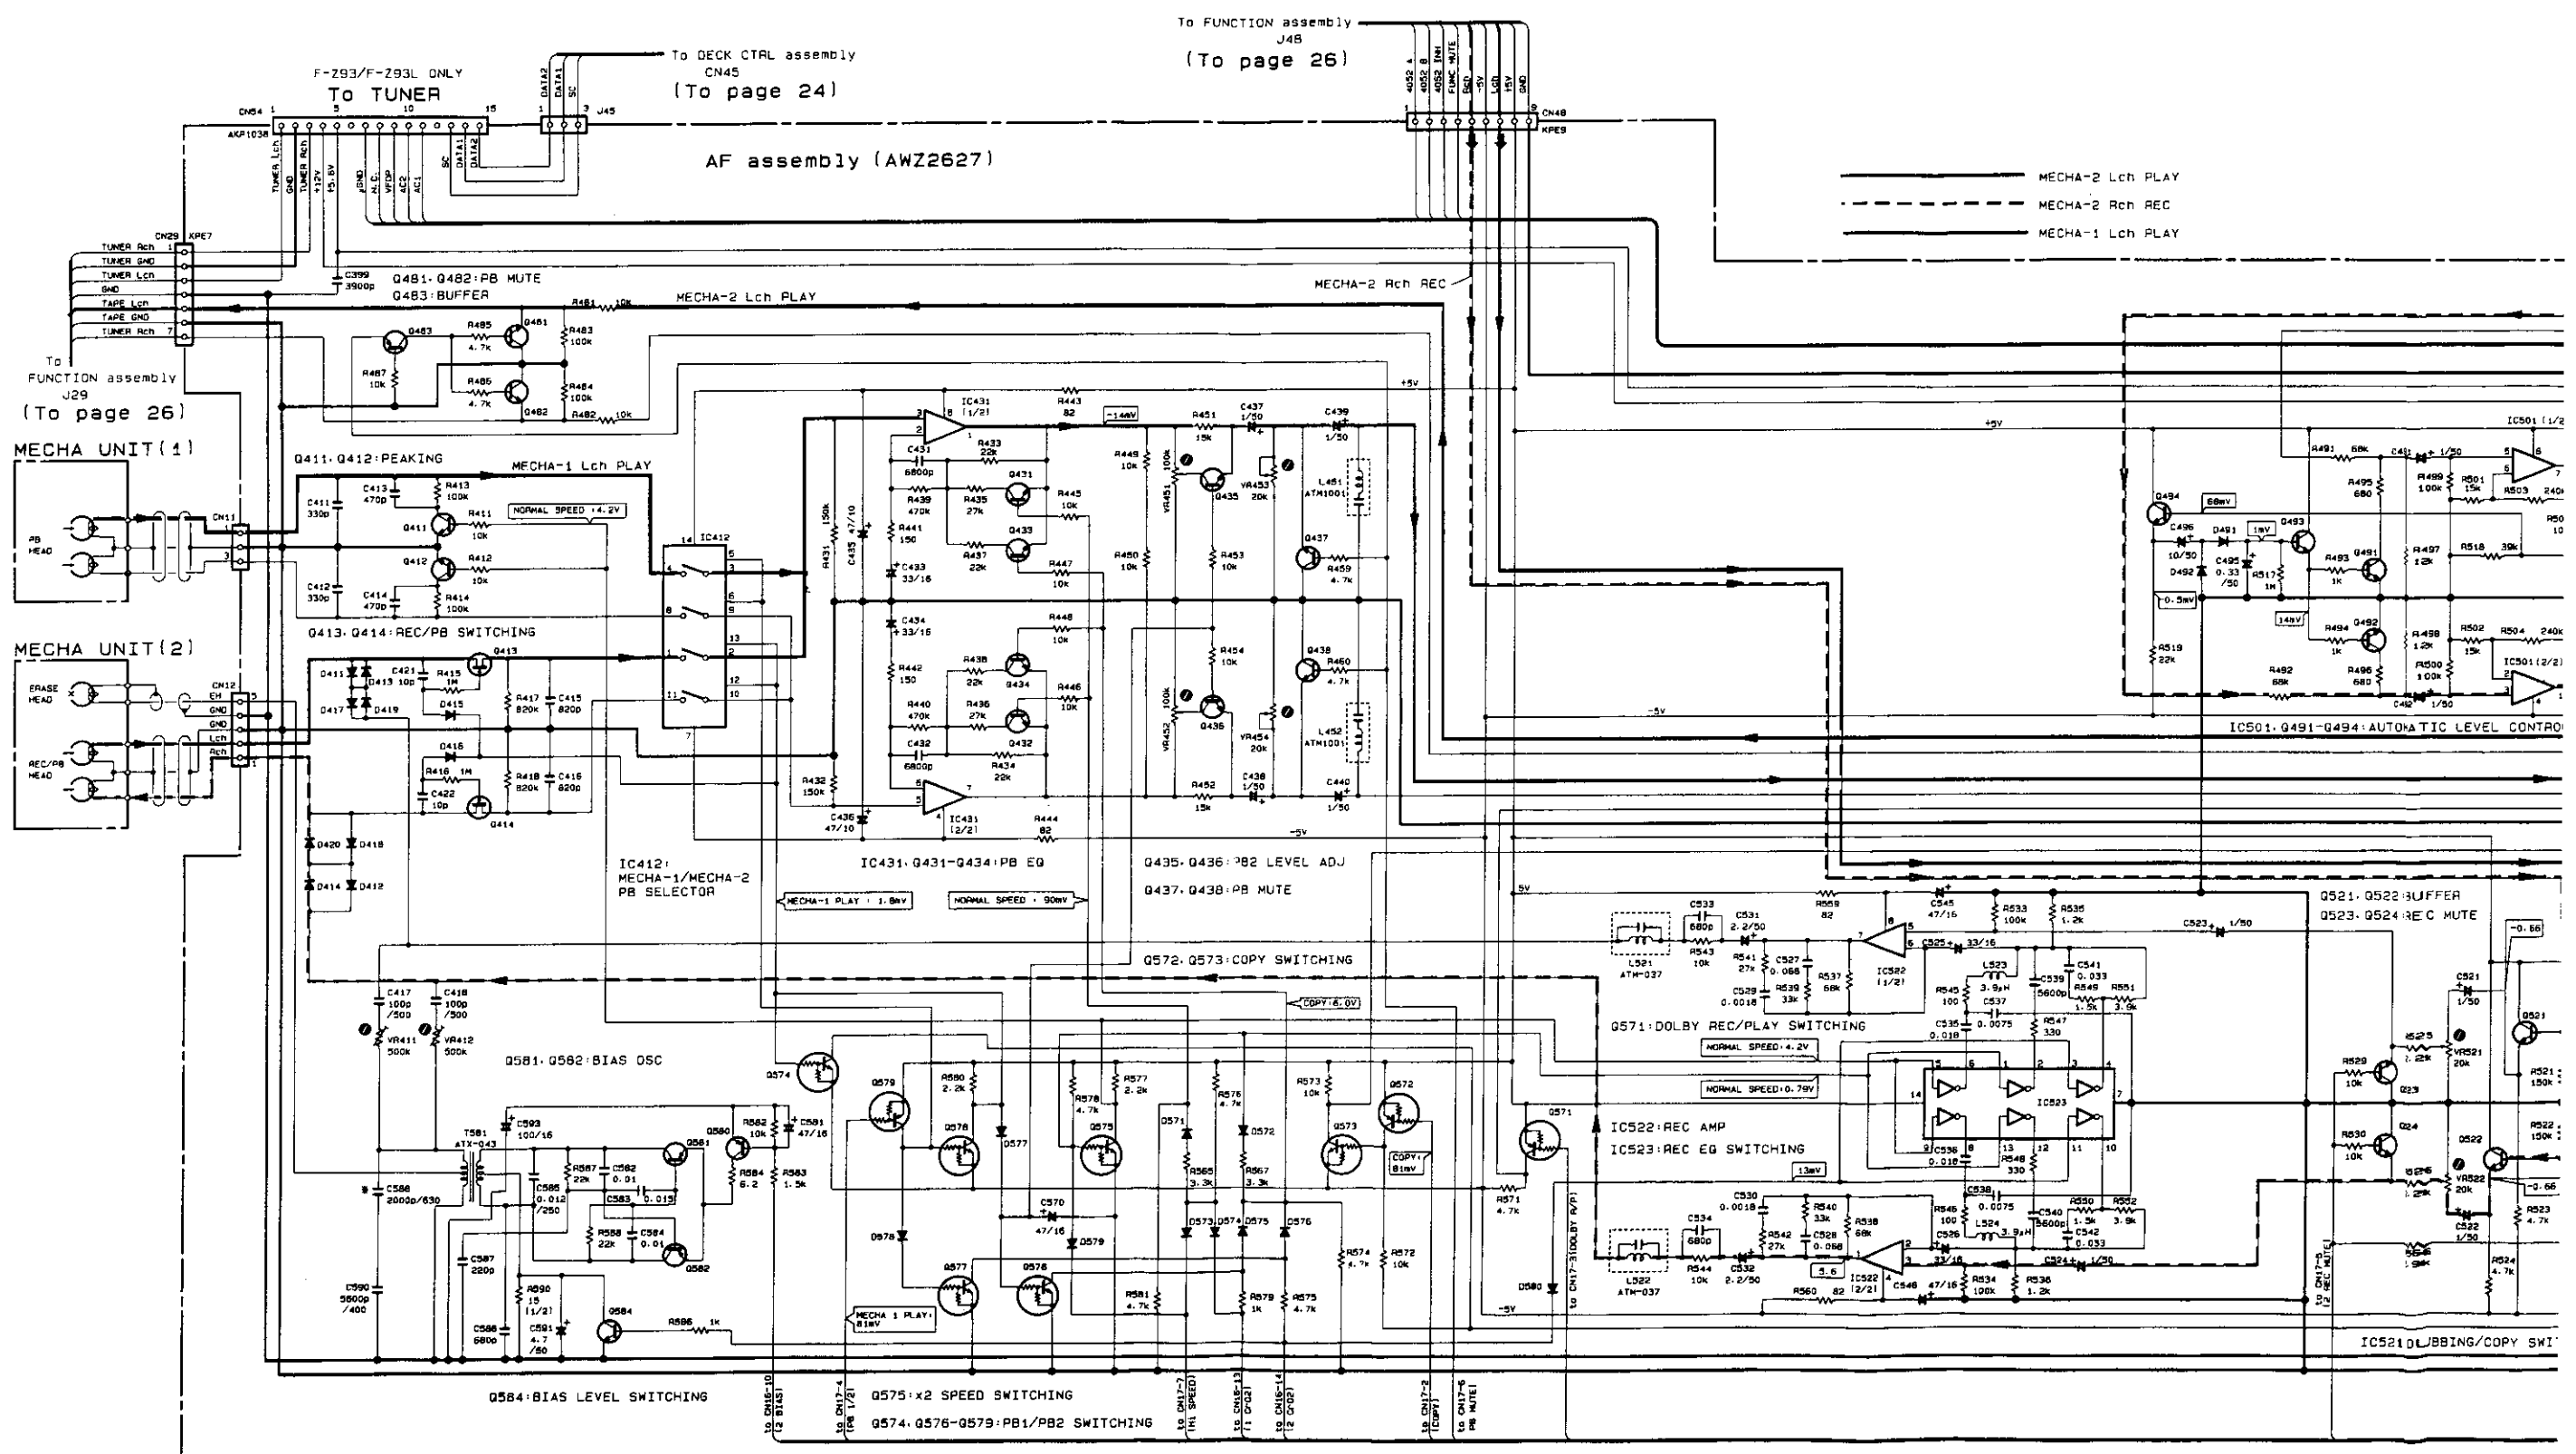

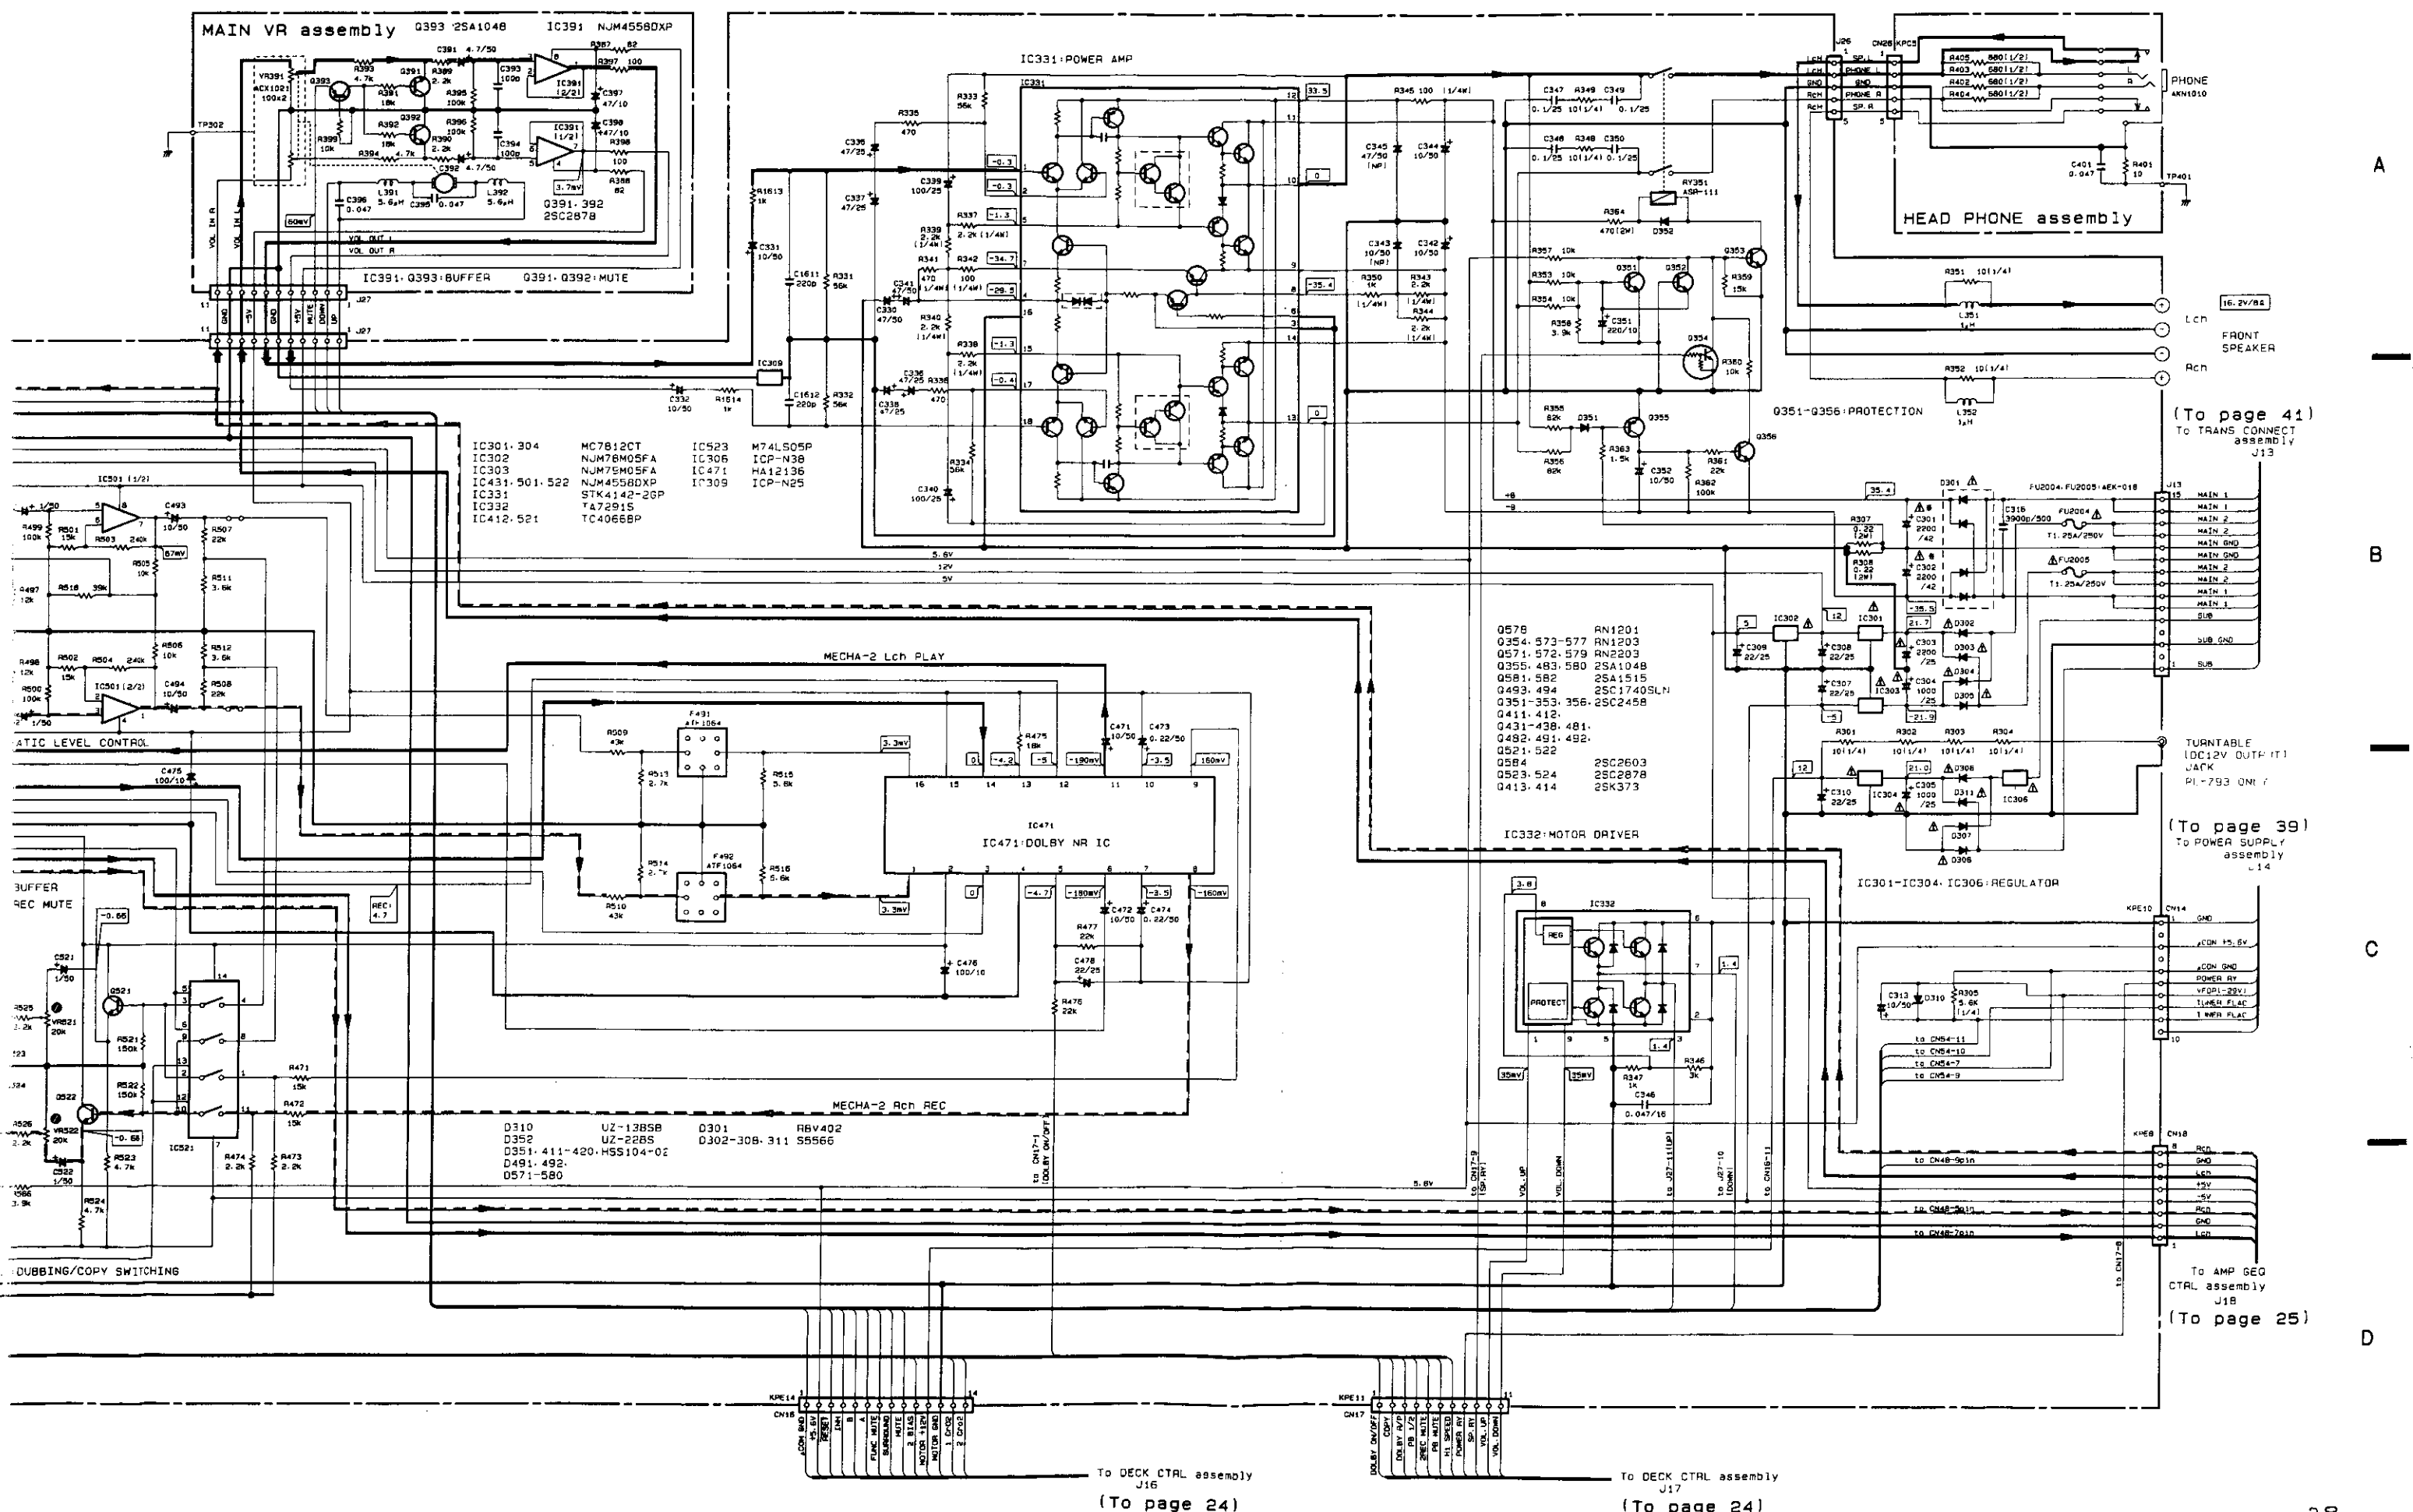

(To page 41)  
To TRANS CONNECT assembly J13


(To page 39)  
To POWER SUPPLY assembly J14

To AMP GEG CTRL assembly J18  
(To page 25)


To DECK CTRL assembly J16  
(To page 24)

To DECK CTRL assembly J17  
(To page 24)


2.5 POWER SUPPLY (AWZ2239), TRANS CONNECT and CONNECT assembly

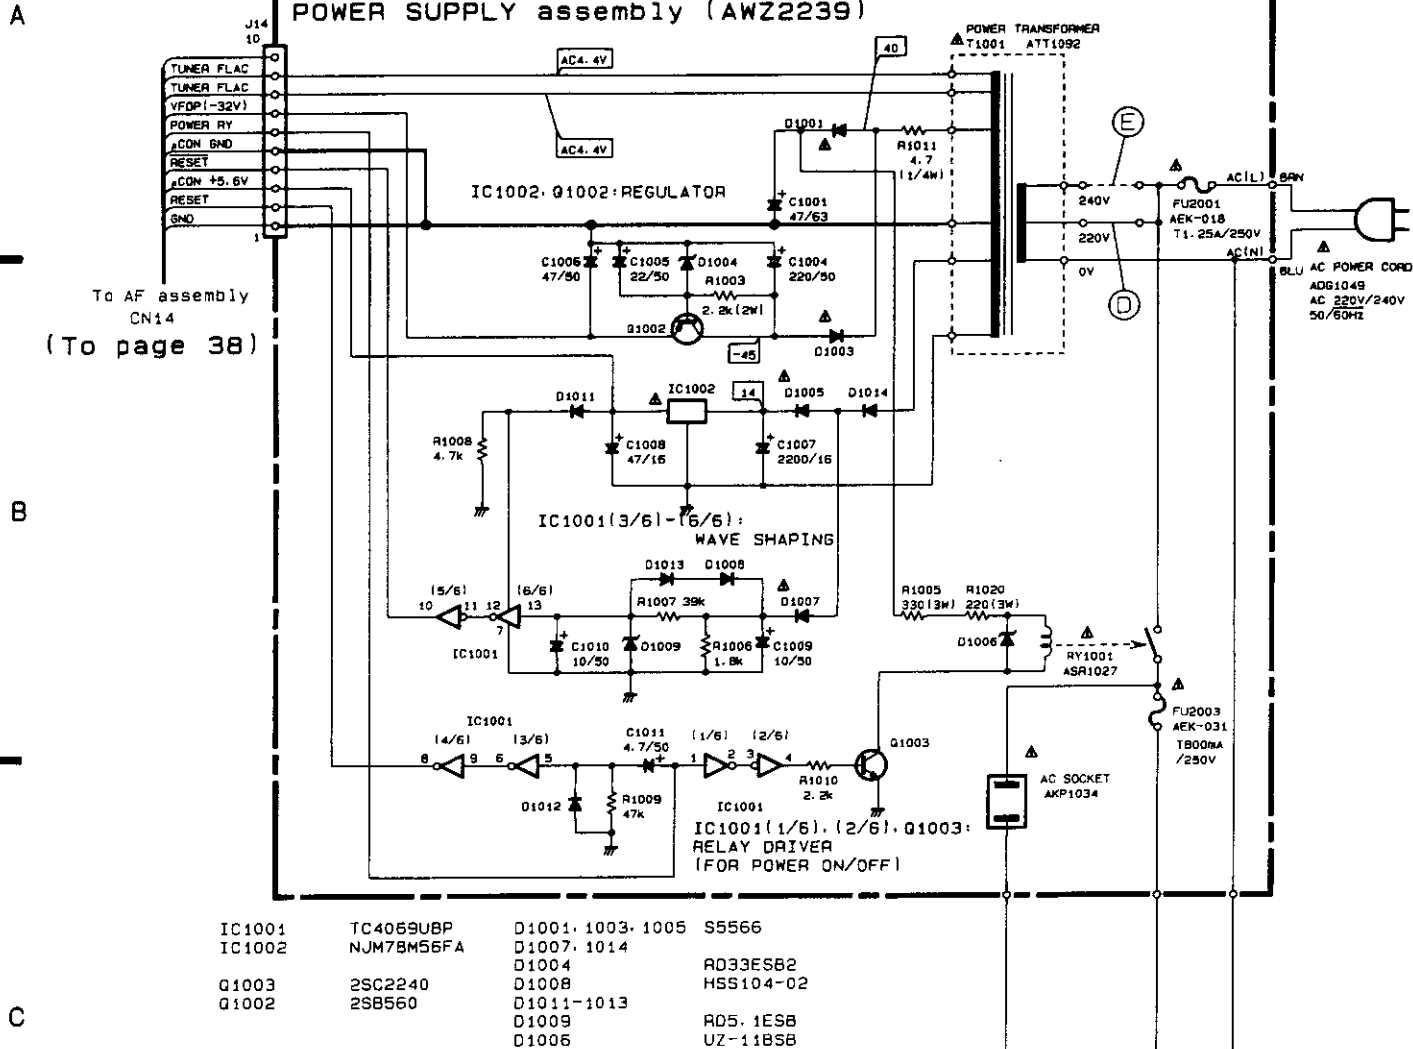

To AF assembly  
CN14  
(To page 38)

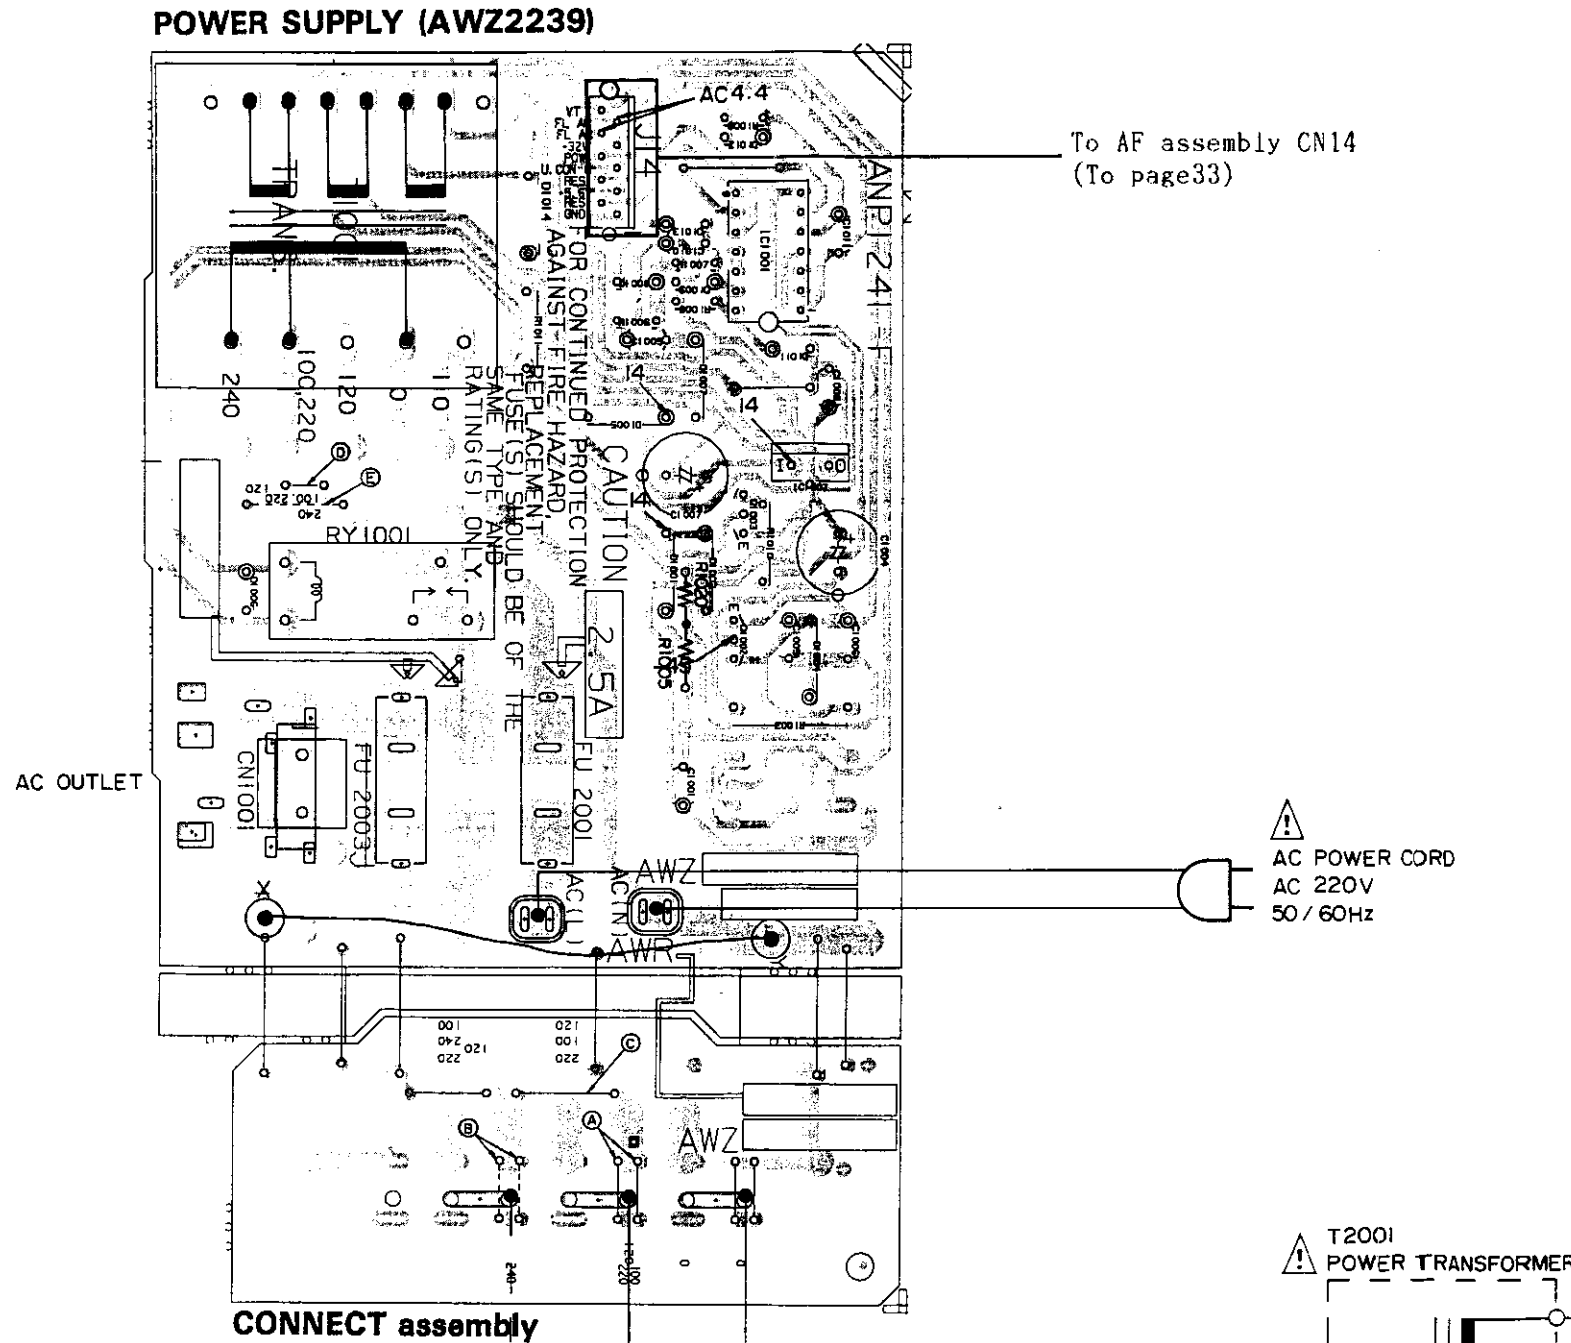

To AF assembly CN14  
(To page 33)

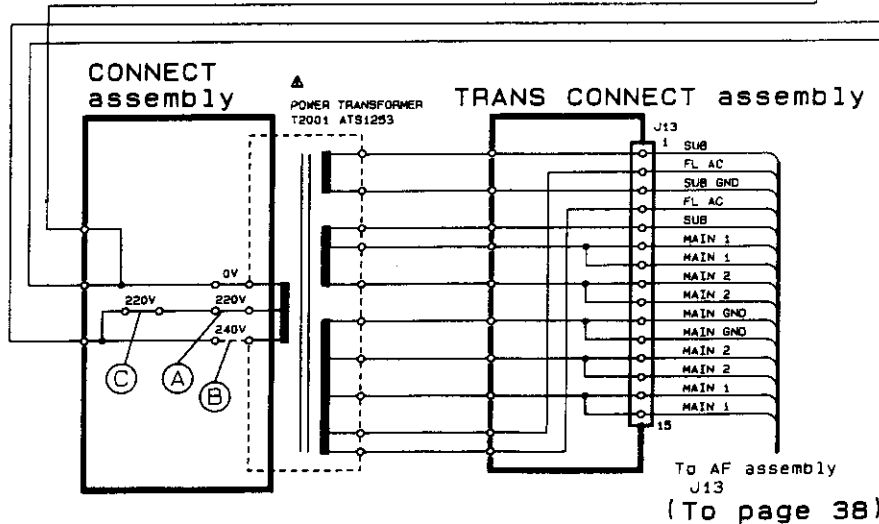

**Line Voltage Selection**

Line voltage can be changed with the following steps.

1. Disconnect the AC power cord.
2. Remove the top cover.
3. Change the position of the Jumper wires ②-③ as follows.
4. Stick the line voltage label on the rear panel.

| Voltage      | 220V | 240V |
|--------------|------|------|
| Jumper wires |      |      |
| ①            | ○    | ×    |
| ②            | ×    | ○    |
| ③            | ○    | ×    |
| ④            | ○    | ×    |
| ⑤            | ×    | ○    |

○: Be needed  
×: Be needless

| Part No. | Description |
|----------|-------------|
| AAx-193  | 220V label  |
| AAx-192  | 240V label  |

To AF assembly CN13  
(To page 33)



NOTE

1. This P.C.B. connection diagram is viewed from the parts mounted side.
2. The parts which have been mounted on the board can be replaced with those shown with the corresponding wiring symbols listed in the following Table.

| P.C.B. pattern diagram indication | Corresponding part symbol | Part Name                |
|-----------------------------------|---------------------------|--------------------------|
|                                   |                           | Transistor               |
|                                   |                           | Radiator type transistor |
|                                   |                           | Diode                    |
|                                   |                           | Resistor                 |
|                                   |                           | Capacitor (Polarity)     |
|                                   |                           | Capacitor (Non-polarity) |


Others

| P.C.B. pattern diagram indication | Part Name                                |
|-----------------------------------|--|
| IC                                | IC                                       |
| S                                 | Switch                                   |
| RY                                | Relay                                    |
| L                                 | Coil                                     |
| F                                 | Filter                                   |
| VR                                | Variable resistor or Semi-fixed resistor |


3. The capacitor terminal marked with ⊕ (double circles) shows negative terminal.
4. The diode terminal marked with ⊕ (double circles) shows cathode side.
5. The transistor terminal to which E is affixed shows the emitter.

ER CORD  
/  
2

ER CORD  
/  
2

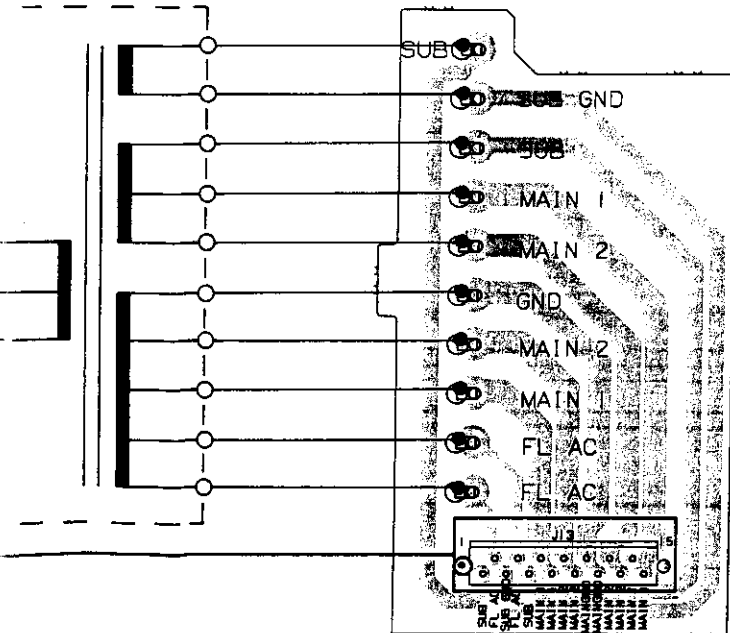


TRANS CONNECT assembly yldmess TCONNECT assembly

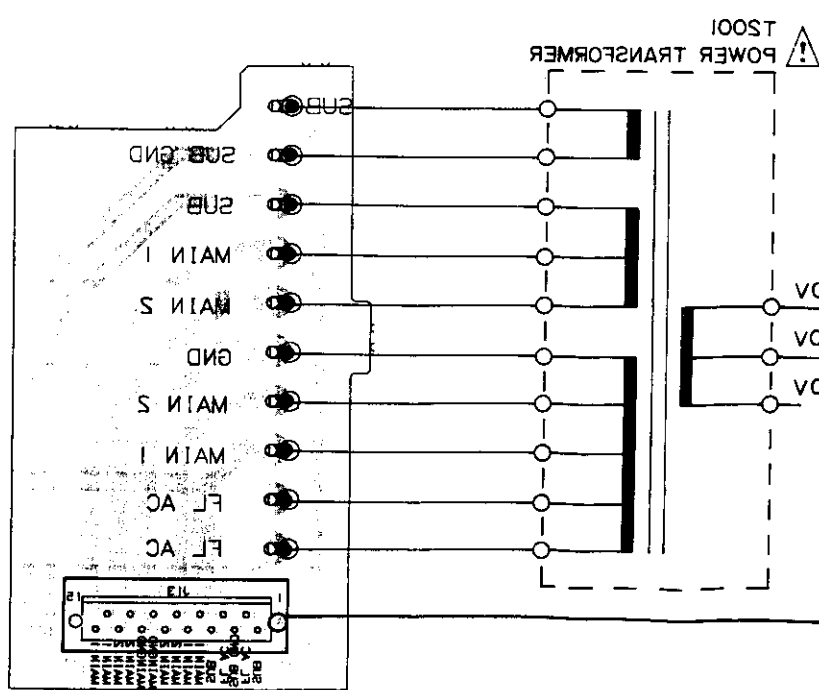

To AF assembly CMI3  
(To page 33)

To AF assembly CMI4  
(To page 33)

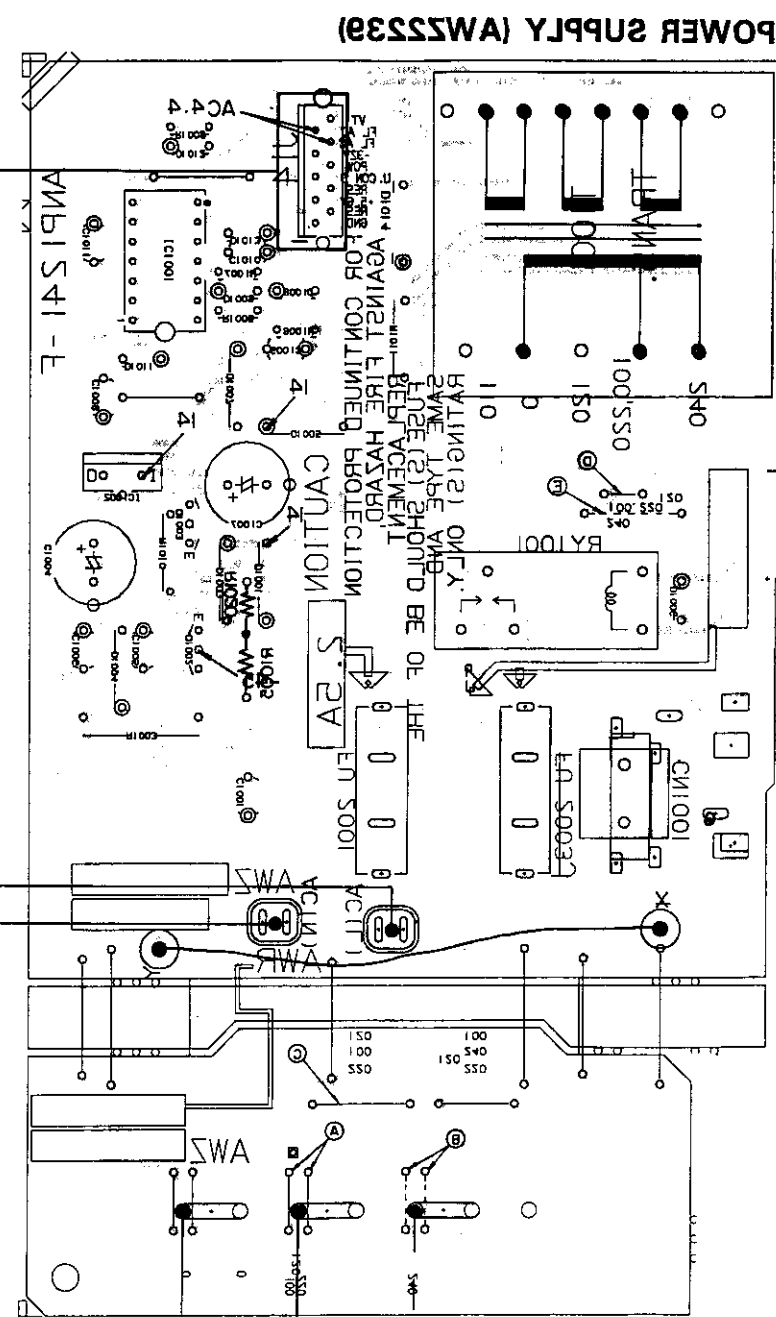

POWER SUPPLY (AW2533)

A  
B  
AC OUTLET

NOTE:

This picture shows the foil side of the printed circuit.

D



### 3. P.C.B.'s PARTS LIST

#### NOTES:

- Parts without part number cannot be supplied.
- Parts marked by "⊙" are not always kept in stock. Their delivery time may be longer than usual or they may be unavailable.
- The  $\Delta$  mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
- When ordering resistors, first convert resistance values into code form as shown in the following examples.

Ex. 1 When there are 2 effective digits (any digit apart from 0), such as 560 ohm and 47k ohm (tolerance is shown by J = 5%, and K = 10%).

|              |                  |          |         |          |           |           |   |
|--------------|------------------|----------|---------|----------|-----------|-----------|---|
| 560 $\Omega$ | 56 $\times 10^1$ | 561..... | RD1/4PS | $\Delta$ | $\square$ | $\square$ | J |
| 47k $\Omega$ | 47 $\times 10^3$ | 473..... | RD1/4PS | $\Delta$ | $\square$ | $\square$ | J |
| 0.5 $\Omega$ | 0R5.....         |          | RN2H    | $\Delta$ | $\square$ | $\square$ | K |
| 1 $\Omega$   | 010.....         |          | RS1P    | $\Delta$ | $\square$ | $\square$ | K |

Ex. 2 When there are 3 effective digits (such as in high precision metal film resistors).

|                |                   |           |         |          |           |           |   |
|----------------|-------------------|-----------|---------|----------|-----------|-----------|---|
| 5.62k $\Omega$ | 562 $\times 10^1$ | 5621..... | RN1/4SR | $\Delta$ | $\square$ | $\square$ | F |
|----------------|-------------------|-----------|---------|----------|-----------|-----------|---|

| Mark                               | No.              | Description       | Parts No.   | Mark     | No. | Description         | Parts No.   |
|------------------------------------|------------------|-------------------|-------------|----------|-----|---------------------|-------------|
| <b>FUNCTION assembly (AWK1245)</b> |                  |                   |             | IC309    |     | IC PROTECTOR        | ICP-N25     |
| <b>SEMICONDUCTOR</b>               |                  |                   |             | IC331    |     | AUDIO IC            | STK4142-2GP |
|                                    | IC901            | OP-AMP IC         | NJM4558DXP  | IC332    |     | MECHANISM DRIVER IC | TA7291S     |
|                                    | IC902            | LOGIC IC          | TC4052BP    | IC412    |     | LOGIC IC            | TC4066BP    |
|                                    | IC903            | LOGIC IC          | TC4066BP    | IC431    |     | OP-AMP IC           | NJM4558DXP  |
|                                    | IC904            | OP-AMP IC         | NJM4558DXP  | IC471    |     | DOLBY-B IC          | HA12136     |
|                                    | Q901             | TRANSISTOR        | RN2201      | IC501    |     | OP-AMP IC           | NJM4558DXP  |
|                                    | Q902             | TRANSISTOR        | RN1201      | IC521    |     | LOGIC IC            | TC4066BP    |
| <b>CAPACITORS</b>                  |                  |                   |             | IC522    |     | OP-AMP IC           | NJM4558DXP  |
|                                    | C903-906         | CERAMIC CAPACITOR | CCCSL101J50 | IC523    |     | LOGIC IC            | M74LS05P    |
|                                    | C907,908         | ELECTR.CAPACITOR  | CEAS2R2M50  | Q351-353 |     | TRANSISTOR          | 2SC2458     |
|                                    | C909,910         | CERAMIC CAPACITOR | CKCYB152K50 | Q354     |     | TRANSISTOR          | RN203       |
|                                    | C911,912         | CERAMIC CAPACITOR | CKCYB562K50 | Q355     |     | TRANSISTOR          | 2SA1048     |
|                                    | C913, 914        | ELECTR.CAPACITOR  | CEAS470M10  | Q356     |     | TRANSISTOR          | 2SC2458     |
|                                    | C919, 920        | ELECTR.CAPACITOR  | CEAS100M25  | Q411,412 |     | TRANSISTOR          | 2SC2458     |
|                                    | C929, 930        | CERAMIC CAPACITOR | CCCSL101J50 | Q413,414 |     | N-FET               | 2SE373      |
| <b>RESISTORS</b>                   |                  |                   |             | Q431-438 |     | TRANSISTOR          | 2SC2458     |
|                                    | All resistors    |                   | RD1/8PM     | Q481,482 |     | TRANSISTOR          | 2SC2458     |
| <b>OTHERS</b>                      |                  |                   |             | Q483     |     | TRANSISTOR          | 2SA1048     |
|                                    | JACK-4P          |                   | AKB1009     | Q491,492 |     | TRANSISTOR          | 2SC2458     |
|                                    | (VIDEO,CD)       |                   |             | Q493,494 |     | TRANSISTOR          | 2SC1740SLN  |
|                                    | JACK 2-P (PHONO) |                   | AKB1088     | Q521,522 |     | TRANSISTOR          | 2SC2458     |
| <b>AF ASSY (AWZ2627)</b>           |                  |                   |             | Q523,524 |     | TRANSISTOR          | 2SC2878     |
| <b>SEMICONDUCTORS</b>              |                  |                   |             | Q571,572 |     | TRANSISTOR          | RN203       |
|                                    | IC301            | REGURATOR IC      | MC7812CT    | Q573-577 |     | TRANSISTOR          | RN203       |
|                                    | IC302            | REGULATOR IC      | NJM78M05FA  | Q578     |     | TRANSISTOR          | RN201       |
|                                    | IC303            | REGULATOR IC      | NJM79M05FA  | Q579     |     | TRANSISTOR          | RN203       |
|                                    | IC304            | REGURATOR IC      | MC7812CT    | Q580     |     | TRANSISTOR          | 2SA1048     |
|                                    | IC306            | IC PROTECTOR      | ICP-N38     | Q581,582 |     | TRANSISTOR          | 2SA1515     |
|                                    |                  |                   |             | Q584     |     | TRANSISTOR          | 2SC2603     |
|                                    |                  |                   |             | D301     |     | DIODE               | RB7402      |
|                                    |                  |                   |             | D302-308 |     | DIODE               | S556        |
|                                    |                  |                   |             | D310     |     | ZENER DIODE         | UZ-13BSB    |
|                                    |                  |                   |             | D311     |     | DIODE               | S556        |
|                                    |                  |                   |             | D351     |     | DIODE               | HS104-02    |

| Mark                           | No.        | Description                      | Parts No.    | Mark             | No.      | Description             | Parts No.     |
|--------------------------------|------------|----------------------------------|--------------|------------------|----------|-------------------------|---------------|
|                                | D352       | ZENER DIODE                      | UZ-22BS      |                  | C475,476 | ELECTR.CAPACITOR        | CEAS101M10    |
|                                | D411-420   | DIODE                            | HSS104-02    |                  | C478     | ELECTR.CAPACITOR        | CEAS220M25    |
|                                | D491,492   | DIODE                            | HSS104-02    |                  | C491,492 | ELECTR.CAPACITOR        | CEAS010M50    |
|                                | D571-580   | DIODE                            | HSS104-02    |                  | C493,494 | ELECTR.CAPACITOR        | CEAS100M50    |
|                                |            |                                  |              |                  | C495     | ELECTR.CAPACITOR        | CEASR33M50    |
| <b>RELAY</b>                   |            |                                  |              |                  |          |                         |               |
|                                | RY351      | RELAY                            | ASR-111      |                  | C496     | ELECTR.CAPACITOR        | CEAS100M50    |
| <b>COILS &amp; TRANSFORMER</b> |            |                                  |              |                  | C521-524 | ELECTR.CAPACITOR        | CEAS010M50    |
|                                | F491,492   | DOLBY FILTER                     | ATF1064      |                  | C525,526 | ELECTR.CAPACITOR        | CEAS330M16    |
|                                | L351,352   | COIL(1 $\mu$ H)                  | ATH-133      |                  | C527,528 | AUDIO FILM<br>CAPACITOR | CFTXA683J50   |
|                                | L451,452   | COIL                             | ATM1001      |                  | C529,530 | CERAMIC CAPACITOR       | CKCYB182K50   |
|                                | L521,522   | COIL                             | ATM-037      |                  | C531,532 | ELECTR.CAPACITOR        | CEAS2R2M50    |
|                                | L523,524   | INDUCTOR (3.9 mH)                | LTA392J      |                  | C533,534 | CERAMIC CAPACITOR       | CKMYB681K50   |
|                                | T581       | OSC TRANSFORMER                  | ATX-043      |                  | C535,536 | MYLOR FILM<br>CAPACITOR | CQMA183J50    |
| <b>CAPACITORS</b>              |            |                                  |              |                  | C537,538 | MYLOR FILM<br>CAPACITOR | CQMA752J50    |
|                                | C1611,1612 | CERAMIC CAPACITOR                | CCCSL221J50  |                  | C539,540 | CERAMIC CAPACITOR       | CKCYB562K50   |
|                                | C301,302   | ELECTR.CAPACITOR<br>(2200pF/42V) | ACH1109      |                  | C541,542 | AUDIO FILM<br>CAPACITOR | CFTXA333J50   |
|                                | C303       | ELECTR.CAPACITOR                 | CEAS222M25   |                  | C545,546 | ELECTR.CAPACITOR        | CEAS470M16    |
|                                | C304,305   | ELECTR.CAPACITOR                 | CEAS102M25   |                  | C570     | ELECTR.CAPACITOR        | CEAS470M16    |
|                                | C307-310   | ELECTR.CAPACITOR                 | CEAS220M25   |                  | C581     | ELECTR.CAPACITOR        | CEAS470M16    |
|                                | C313       | ELECTR.CAPACITOR                 | CEAS100M50   |                  | C582     | MYLOR FILM<br>CAPACITOR | CQMA103K50    |
|                                | C316       | CERAMIC CAPACITOR                | CKDYB392K500 |                  | C583     | MYLOR FILM<br>CAPACITOR | CQMA153K50    |
|                                | C330       | ELECTR.CAPACITOR                 | CEAS470M50   |                  | C584     | MYLOR FILM<br>CAPACITOR | CQMA103K50    |
|                                | C331,332   | ELECTR.CAPACITOR                 | CEAS100M50   |                  | C585     | MYLOR FILM<br>CAPACITOR | CQMA123K250   |
|                                | C335       | ELECTR.CAPACITOR                 | CEAS470M25   |                  | C586     | CERAMIC CAPACITOR       | CKMYB681K50   |
|                                | C336       | ELECTR.CAPACITOR                 | CEHAQ470M25  |                  | C587     | CERAMIC CAPACITOR       | CKMYB221K50   |
|                                | C337,338   | ELECTR.CAPACITOR                 | CEAS470M25   |                  | C588     | CQPA (2000pF/630V)      | ACE1020       |
|                                | C339,340   | ELECTR.CAPACITOR                 | CEAS101M25   |                  | C590     | MYLOR FILM<br>CAPACITOR | CQMA562K400   |
|                                | C341       | ELECTR.CAPACITOR                 | CEAS470M50   |                  | C591     | ELECTR.CAPACITOR        | CEAS4R7M50    |
|                                | C342       | ELECTR.CAPACITOR                 | CEAS100M50   |                  | C593     | ELECTR.CAPACITOR        | CEAS101M16    |
|                                | C343       | ELECTR.CAPACITOR                 | CEANP100M50  | <b>RESISTORS</b> |          |                         |               |
|                                | C344       | ELECTR.CAPACITOR                 | CEAS100M50   |                  | R301-304 | CARBON FILM<br>RESISTOR | RD1/4PM100J   |
|                                | C345       | ELECTR.CAPACITOR                 | CEANP470M50  |                  | R305     | CARBON FILM<br>RESISTOR | RD1/4PM562J   |
|                                | C346       | CERAMIC CAPACITOR                | CKDYX473M16  |                  | R307,308 | METAL OXIDE<br>RESISTOR | RS2LMFR2J     |
|                                | C347-350   | CERAMIC CAPACITOR                | CKCYX104M25  |                  | R337-340 | CARBON FILM<br>RESISTOR | RD1/4PM222J   |
|                                | C351       | ELECTR.CAPACITOR                 | CEAS221M10   |                  | R341     | CARBON FILM<br>RESISTOR | RD1/4PMFL471J |
|                                | C352       | ELECTR.CAPACITOR                 | CEAS100M50   |                  | R342     | CARBON FILM<br>RESISTOR | RD1/4PMFL101J |
|                                | C399       | CERAMIC CAPACITOR                | CKDYB392K50  |                  | R343,344 | CARBON FILM<br>RESISTOR | RD1/4PM222J   |
|                                | C411,412   | CERAMIC CAPACITOR                | CKMYB331K50  |                  | R345     | CARBON FILM<br>RESISTOR | RD1/4PMFL01J  |
|                                | C413,414   | CERAMIC CAPACITOR                | CKMYB471K50  |                  |          |                         |               |
|                                | C415,416   | CERAMIC CAPACITOR                | CKMYB821K50  |                  |          |                         |               |
|                                | C417,418   | CERAMIC CAPACITOR                | CCCSL101K500 |                  |          |                         |               |
|                                | C421,422   | CERAMIC CAPACITOR                | CCMSL100D50  |                  |          |                         |               |
|                                | C431,432   | MYLOR FILM<br>CAPACITOR          | CQMA682J50   |                  |          |                         |               |
|                                | C433,434   | ELECTR.CAPACITOR                 | CEAS330M16   |                  |          |                         |               |
|                                | C435,436   | ELECTR.CAPACITOR                 | CEAS470M10   |                  |          |                         |               |
|                                | C437,438   | ELECTR.CAPACITOR                 | CEAS010M50   |                  |          |                         |               |
|                                | C439,440   | ELECTR.CAPACITOR                 | CEAS010M50   |                  |          |                         |               |
|                                | C471,472   | ELECTR.CAPACITOR                 | CEAS100M50   |                  |          |                         |               |
|                                | C473,474   | ELECTR.CAPACITOR                 | CEASR22M50   |                  |          |                         |               |

| Mark No.                            | Description              | Parts No.   |
|-------------------------------------|--------------------------|-------------|
| <b>DECK CTRL assembly (AWZ2635)</b> |                          |             |
| <b>SEMICONDUCTORS</b>               |                          |             |
| IC801                               |                          | PDE029-C    |
| IC802                               | LOGIC IC                 | SN74LS42N   |
| Q801,802                            | TRANSISTOR               | RN2204      |
| Q803-806                            | TRANSISTOR               | RN1201      |
| Q807-812                            | TRANSISTOR               | 2SA1515     |
| Q814                                | TRANSISTOR               | RN1201      |
| D801,802                            | DIODE                    | HSS104-02   |
| D808                                | DIODE                    | HSS104-02   |
| D810-815                            | DIODE                    | HSS104-02   |
| D820-824                            | DIODE                    | HSS104-02   |
| D826                                | DIODE                    | HSS104-02   |
| D834-840                            | DIODE                    | HSS104-02   |
| <b>COIL</b>                         |                          |             |
| L801                                | AXIAL INDUCTOR<br>(22μH) | LAU220K     |
| <b>CAPACITORS</b>                   |                          |             |
| C801                                | ELECTR.CAPACITOR         | CEASR33M50  |
| C802                                | ELECTR.CAPACITOR         | CEAS101M16  |
| C803                                | ELECTR.CAPACITOR         | CEAS101M10  |
| C804-807                            | CERAMIC CAPACITOR        | CKCYF473Z50 |
| C839,840                            | CERAMIC CAPACITOR        | CKCYB102K50 |
| <b>RESISTORS</b>                    |                          |             |
| VR801,802                           | VR (20kΩ)                | VRTM6H203   |
| VR803                               | VR (10kΩ)                | VRTM6H103   |
| Other resistors                     |                          | RD1/8PM□□□□ |
| <b>OTHERS</b>                       |                          |             |
| CN21                                | JUMPER CONNECTOR<br>11P  | KPE11       |
| CN22                                | JUMPER CONNECTOR<br>14P  | KPE14       |
| CN45                                | JUMPER CONNECTOR<br>3P   | KPE3        |
| X801                                | Ceramic resonator        | ASS1018     |

**DECK - 1 SW assembly**

**SWITCHES**

S811-815 SWITCH ASG1034

**DECK - 2 SW assembly**

**SWITCHES**

S821-825 SWITCH ASG1034

| Mark No.                               | Description       | Parts No.   |
|--|-------------------|-------------|
| <b>AMP,GEQ CTRL assembly (AWZ2639)</b> |                   |             |
| <b>SEMICONDUCTORS</b>                  |                   |             |
| IC701                                  | LOGIC IC          | SN74LS05N   |
| IC702                                  | LOGIC IC          | TC4081BP    |
| IC721,722                              | AUDIO IC          | BA3812L     |
| Q701,702                               | TRANSISTOR        | RN2201      |
| D701-705                               | LED(RED)          | AEL1099     |
| D707,708                               | DIODE             | HSS104-02   |
| <b>SWITCHES</b>                        |                   |             |
| S701-705                               | SWITCH            | ASG1034     |
| S707                                   | SWITCH            | ASG1034     |
| <b>CAPACITORS</b>                      |                   |             |
| C721,722                               | CERAMIC CAPACITOR | CKCYB182K50 |
| C723,724                               | CERAMIC CAPACITOR | CKCYX153M25 |
| C725,726                               | CERAMIC CAPACITOR | CKCYB391K50 |
| C727,728                               | CERAMIC CAPACITOR | CKCYB682K50 |
| C729,730                               | CERAMIC CAPACITOR | CKCYB392K50 |
| C731,732                               | CERAMIC CAPACITOR | CKCYX683M16 |
| C733,734                               | CERAMIC CAPACITOR | CKCYX183M25 |
| C735,736                               | ELECTR.CAPACITOR  | CEJAR15M50  |
| C737                                   | CERAMIC CAPACITOR | CKCYX393M25 |
| C738                                   | CERAMIC CAPACITOR | CKDYX393M25 |
| C739,740                               | ELECTR.CAPACITOR  | CEJAR68M50  |
| C741                                   | ELECTR.CAPACITOR  | CEJA100N25  |
| C742                                   | ELECTR.CAPACITOR  | CEAS100M25  |
| C743,744                               | CERAMIC CAPACITOR | CCMSL101J50 |
| C745,746                               | CERAMIC CAPACITOR | CKCYB331K50 |
| C747,748                               | ELECTR.CAPACITOR  | CEAS100M25  |
| C749-750                               | ELECTR.CAPACITOR  | CEAS101M10  |
| <b>RESISTORS</b>                       |                   |             |
| VR721-730                              | VR (30kΩ)         | ACU1034     |
| Other resistors                        |                   | RD1/8PM□□□□ |

**POWER SUPPLY assembly (AWZ2239)**

**SEMICONDUCTORS**

|        |              |           |
|--------|--------------|-----------|
| IC1001 | LOGIC IC     | TC4069UEP |
| IC1002 | REGULATOR IC | NJM78M5FA |
| Q1002  | TRANSISTOR   | 2SB560    |
| Q1003  | TRANSISTOR   | 2SC2240   |
| D1001  | DIODE        | S5566     |
| D1003  | DIODE        | S5566     |
| D1004  | ZENER DIODE  | RD33ESEB2 |
| D1005  | DIODE        | S5566     |
| D1006  | ZENER DIODE  | UZ-11BS1  |
| D1007  | DIODE        | S5566     |
| D1008  | DIODE        | HSS104-02 |
| D1009  | ZENER DIODE  | RD5.1ESB  |

| Mark                       | No.                    | Description          | Parts No.     | Mark   | No.                    | Description | Parts No. |
|----------------------------|------------------------|----------------------|---------------|--|------------------------|-------------|-----------|
| R348,349                   |                        | CARBON FILM RESISTOR | RD1/4PM100J   | <b>TRANS CONNECT assembly</b>                          |                        |             |           |
| R350                       |                        | CARBON FILM RESISTOR | RD1/4PMFL102J | No parts are supplied with the TRANS CONNECT assembly. |                        |             |           |
| R351,352                   |                        | CARBON FILM RESISTOR | RD1/4PMFL100J | <b>MAIN VR assembly</b>                                |                        |             |           |
| R364                       |                        | METAL OXIDE RESISTOR | RS2LMF471J    | <b>SEMICONDUCTORS</b>                                  |                        |             |           |
| R590                       |                        | CARBON FILM RESISTOR | RD1/2PM150J   | IC391  | OP-AMP IC              | NJM4558DXP  |           |
| VR411,412                  | VR (500kΩ)             | VRTM6V504            |               | Q391,392   | TRANSISTOR             | 2SC2878     |           |
| VR451,452                  | VR (100kΩ)             | VRTM6H104            |               | Q393   | TRANSISTOR             | 2SA1048     |           |
| VR453,454                  | VR (20kΩ)              | VRTM6H203            |               | <b>COILS</b>   |                        |             |           |
| VR521,522                  | VR (22kΩ)              | ACP1026              |               | L391,392   | AXIAL INDUCTOR (5.6μH) | LAU5R6K     |           |
| Other resistors            |                        | RD1/8PM□□□J          |               | <b>CAPACITORS</b>                                      |                        |             |           |
| <b>OTHERS</b>              |                        |                      |               | C391,392   | ELECTR.CAPACITOR       | CEAS4R7M50  |           |
|                            | TERMINAL 4-P (SPEAKER) | AKE1012              |               | C393,394   | CERAMIC CAPACITOR      | CCMSL101J50 |           |
|                            | JACK (PL DC+12V)       | AKN-203              |               | C395,396   | CERAMIC CAPACITOR      | CKCYF473Z50 |           |
|                            | Socket 15-P (To TUNER) | AKP1038              |               | C397,398   | ELECTR.CAPACITOR       | CEAS470M10  |           |
| CN14                       | JUMPER CONNECTOR 10P   | KPE10                |               | <b>RESISTORS</b>                                       |                        |             |           |
| CN16                       | JUMPER CONNECTOR 14P   | KPE14                |               | VR391  | VR (100kΩ × 2)         | ACX1021     |           |
| CN17                       | JUMPER CONNECTOR 11P   | KPE11                |               | Other resistors  |                        | RD1/8PM□□□J |           |
| CN18                       | JUMPER CONNECTOR 8P    | KPE8                 |               | <b>DECK CENTER assembly</b>                            |                        |             |           |
| CN29                       | JUMPER CONNECTOR 7P    | KPE7                 |               | <b>SEMICONDUCTORS</b>                                  |                        |             |           |
| CN48                       | JUMPER CONNECTOR 9P    | KPE9                 |               | Q822-825   | TRANSISTOR             | 2SA1048     |           |
| <b>HEAD PHONE assembly</b> |                        |                      |               | D841-844   | LED                    | AEL1084     |           |
| <b>CAPACITOR</b>           |                        |                      |               | D854   | DIODE                  | HSS104-02   |           |
| C401                       | CERAMIC CAPACITOR      | CKCYF473Z50          |               | D856-858   | DIODE                  | HSS104-02   |           |
| <b>RESISTORS</b>           |                        |                      |               | D861   | LED                    | AEL1091     |           |
| R401                       | CARBON FILM RESISTOR   | RD1/8PM100J          |               | D862   | LED (RED)              | AEL1065     |           |
| R402-405                   | CARBON FILM RESISTOR   | RD1/2PMF681J         |               | <b>SWITCHES</b>  |                        |             |           |
| <b>OTHERS</b>              |                        |                      |               | S848,849   | SWITCH                 | ASH1014     |           |
|                            | JACK (HEAD PHONE)      | AKN1010              |               | S853   | SWITCH                 | ASG1034     |           |
| CN25                       | JUMPER CONNECTOR 5P    | KPC5                 |               | S861,862   | SWITCH                 | ASG1034     |           |
| <b>HEAD PHONE assembly</b> |                        |                      |               | S871,872   | SWITCH                 | ASG1034     |           |
| <b>CAPACITOR</b>           |                        |                      |               | S875   | SWITCH                 | ASG1034     |           |
| <b>RESISTORS</b>           |                        |                      |               | <b>RESISTORS</b>                                       |                        |             |           |
| <b>OTHERS</b>              |                        |                      |               | All resistors  |                        | RD1/8PM□□□J |           |

| Mark               | No.             | Description             | Parts No.     |
|--------------------|-----------------|-------------------------|---------------|
|                    | D1011-1013      | DIODE                   | HSS104-02     |
|                    | D1014           | DIODE                   | S5566         |
| <b>RELAY</b>       |                 |                         |               |
| ⚠                  | RY1001          | RELAY                   | ASR1027       |
| <b>TRANSFORMER</b> |                 |                         |               |
| ⚠                  | T1001           | POWER<br>TRANSFORMER    | ATT1092       |
| <b>CAPACITORS</b>  |                 |                         |               |
|                    | C1001           | ELECTR.CAPACITOR        | CEAS470M63    |
|                    | C1004           | ELECTR.CAPACITOR        | CEAS221M50    |
|                    | C1005           | ELECTR.CAPACITOR        | CEHAQ220M50   |
|                    | C1006           | ELECTR.CAPACITOR        | CEAS470M50    |
|                    | C1007           | ELECTR.CAPACITOR        | CEAS222M16    |
|                    | C1008           | ELECTR.CAPACITOR        | CEAS470M16    |
|                    | C1009,1010      | ELECTR.CAPACITOR        | CEAS100M50    |
|                    | C1011           | ELECTR.CAPACITOR        | CEAS4R7M50    |
| <b>RESISTORS</b>   |                 |                         |               |
|                    | R1003           | METAL OXIDE<br>RESISTOR | RS2LMF222J    |
|                    | R1005           | METAL OXIDE<br>RESISTOR | RS3PMF331J    |
|                    | R1011           | CARBON FILM<br>RESISTOR | RD1/4PMFL4R7J |
|                    | R1020           | METAL OXIDE<br>RESISTOR | RS3PMF221J    |
|                    | Other resistors |                         | RD1/8PM□□□J   |
| <b>OTHERS</b>      |                 |                         |               |
| ⚠                  |                 | AC SOCKET 1-P           | AKP1034       |

**CONNECT assembly**

No parts are supplied with the CONNECT assembly.

### 4. ADJUSTMENTS

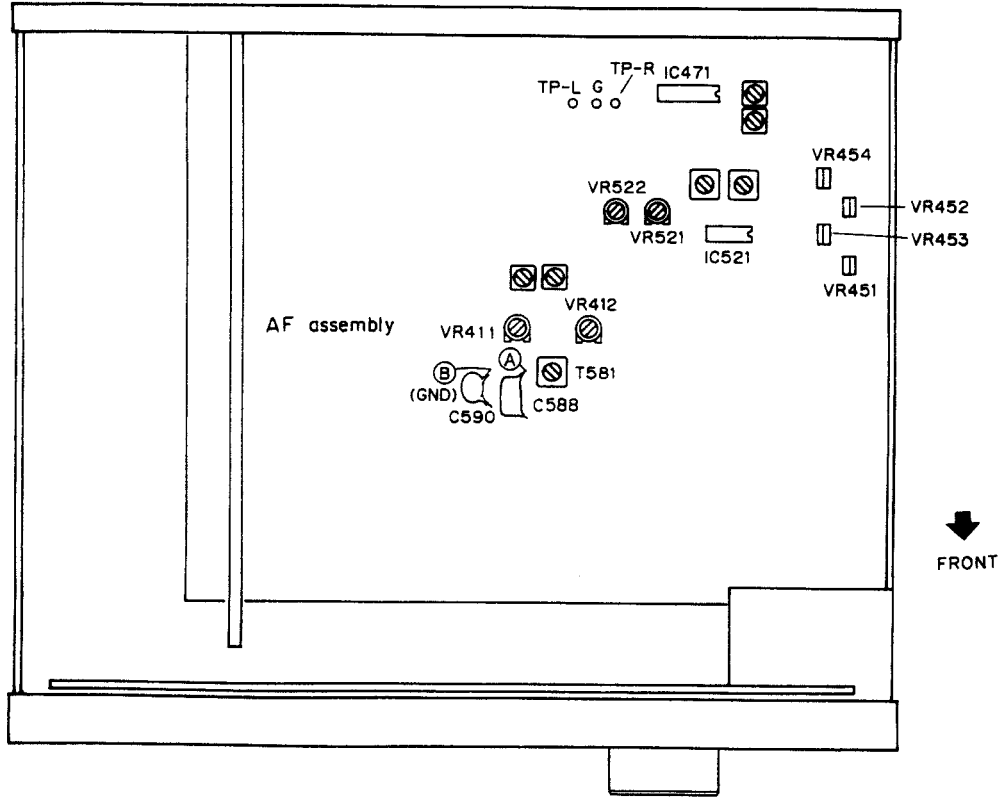


Fig 4.1. Adjustment location

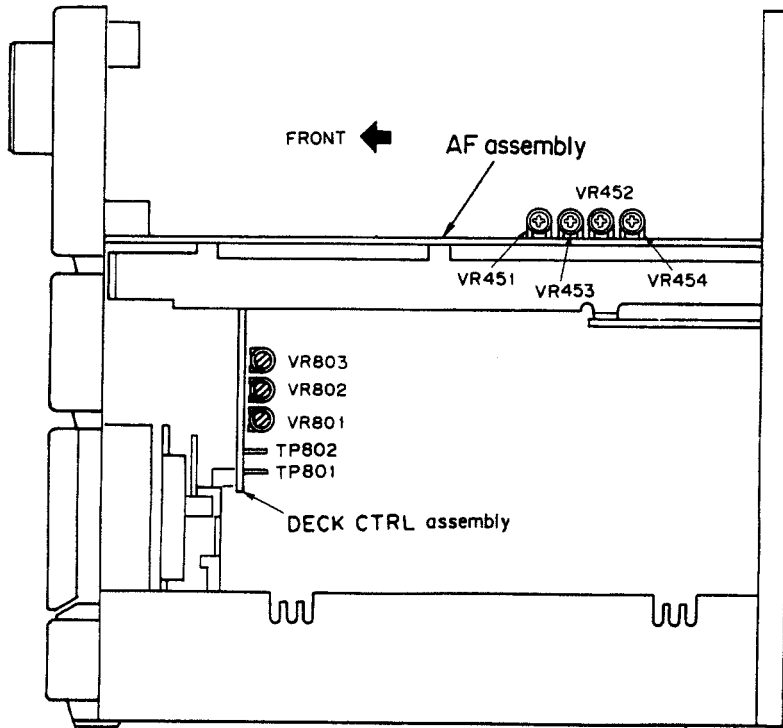


Fig 4.2. Adjustment location

- Adjustment and measurement are usually made in the AF assembly, unless specified otherwise.
- Set the graphic equalizer to FLAT. Depending on the country of destination, the unit may be equipped with a MIC mixing volume control.  
If a MIC mixing volume control is built in, please set to the MIN position.
- The function should always be set to "TAPE" unless otherwise specified.

### Adjustment of Mechanical System

- Test tape: STD-301 (3 kHz, 30 min)
- Setting of double speed mode: Short-circuit TP801 and TP802 of the DECK CTRL assembly. To release the mode, break the short circuit.

| 1. Adjustment of tape speed |                          |                                     |                     |                          |                    |  |   |
|-----------------------------|--------------------------|-------------------------------------|---------------------|--------------------------|--------------------|--|---|
| No.                         | Mode                     | Input signal & Test tape            | Adjustment location |                          | Measuring location | Adjustment value   | Remarks   |
| 1                           | PLAY                     | Playback the STD-301 tape to 3 kHz. | Deck I              | DECK CTRL Assembly VR801 | TP-L (Lch)         | Press the PLAY SW and adjust the frequency to 3010 Hz $\pm$ 10 Hz. Make sure that the wow and flutter is within 0.2 %.         |   |
| 2                           | PLAY (Double speed mode) |                                     |                     | —                        |                    | Press the PLAY SW in double speed mode and confirm that the frequency is 6000 Hz $\pm$ 1000 Hz. Note down the figure.          | Release the double speed mode after adjustment. |
| 3                           | PLAY (Double speed mode) |                                     | Deck II             | DECK CTRL Assembly VR803 | TP-R (Rch)         | Press the PLAY SW in double speed mode and adjust the frequency to be within $\pm$ 30 Hz of the figure recorded at step No. 2. | Release the double speed mode after adjustment. |
| 4                           | PLAY                     |                                     |                     | DECK CTRL Assembly VR802 |                    | Press the PLAY SW and adjust the frequency to 3010 Hz $\pm$ 10 Hz. Make sure that the wow and flutter is within 0.2 %.         |   |

### Adjustment of Electric System

#### ■ Check and conduct the following before adjusting the electric system.

1. Adjustment of tape speed has been completed.
2. Clean and demagnetize the head using a head eraser.
3. When measured, the level should be 0 dBV = 1 Vrms.
4. Use side A of the specified tape for adjustment.  
STD-331B: For adjustment of playback system.  
STD-630: NORMAL blank tape
5. Prepare the following measuring devices:  
AC millivoltmeter, Low-frequency oscillator, Attenuator, Oscilloscope
6. Adjust both L and R channels, unless specified otherwise.
7. Set the DOLBY NR switches to OFF, unless specified otherwise.
8. Warm up the unit for several minutes before adjustment. Especially before adjusting the frequency characteristics of recording and playback, warm up for 3 to 5 minutes in REC/PLAY mode.
9. Make sure to follow the proper order of the adjustment procedure. Any change in the order may cause an imperfect result.

### List of Adjustment

#### Deck I

1. Head azimuth adjustment
2. Playback level adjustment

#### Deck II

1. Head azimuth adjustment
2. Playback level adjustment
3. Bias oscillation frequency adjustment
4. Recording level adjustment
5. Adjustment frequency characteristics of recording / playback

#### Checking of Deck II

1. Make sure the ALC is operating properly.




Fig. 4.3 Test tape STD-331B

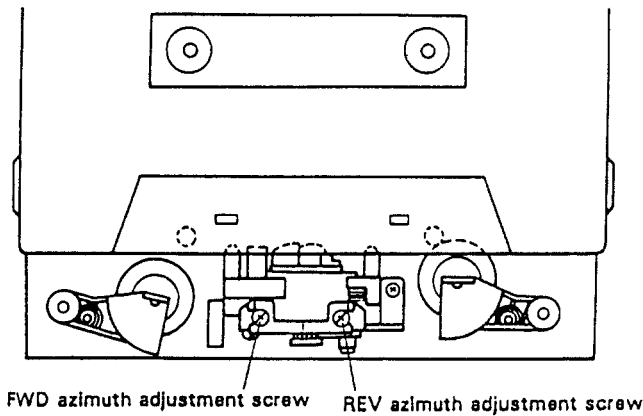


Fig. 4.4 Head azimuth adjustment

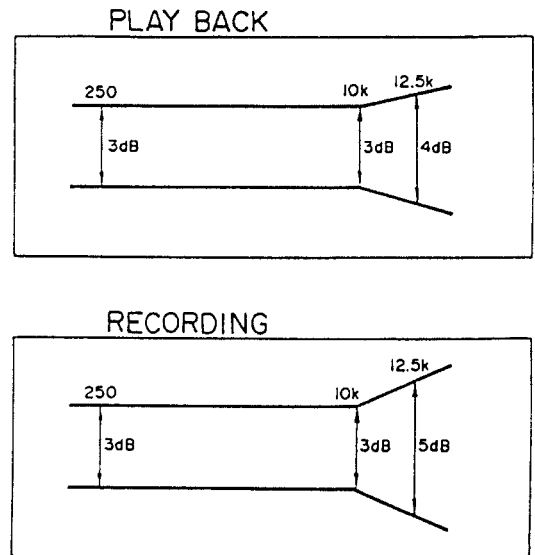


Fig. 4.5 Frequency characteristics

**• Head Adjustment of Deck I**

- Deck I is provided with an automatic tape selector mechanism.
- Note: Do not switch over FWD and REV while the driver is inserted.

**1. Head Azimuth Adjustment**

| Pro-cedure | Tape selector | Mode | Input signal/test tape                            | Adjustment location                      | Measuring location       | Adjustment value              | Remarks   |
|------------|---------------|------|---|--|--------------------------|-------------------------------|---|
| 1          | NORM          | PLAY | Playback the test tape STD-331B (10 kHz, -20 dB). | Head azimuth adjustment screw (Fig. 4-4) | TP-L (Lch)<br>TP-R (Rch) | Maximum playback signal level | Lock the screw with screw lock after completing adjustment. |

**2. Playback Level Adjustment**

- Be sure to make a careful adjustment, as the adjustment determines the DOLBY NR level for playback.

| Pro-cedure | Tape selector | Mode | Input signal/test tape                          | Adjustment location        | Measuring location       | Adjustment value | Remarks |
|------------|---------------|------|---|----------------------------|--------------------------|------------------|---------|
| 1          | NORM          | PLAY | Playback the test tape STD-331B (315 Hz, 0 dB). | VR453 (Lch)<br>VR454 (Rch) | TP-L (Lch)<br>TP-R (Rch) | -6.7 dBV         |         |

**• Head Adjustment of Deck II**

- Deck II is provided with an automatic tape selector mechanism.
- Note: Do not switch over FWD and REV while the driver is inserted.



### 1. Head Azimuth Adjustment

| Pro-<br>cedure | Tape<br>selector | Mode | Input signal/test tape                            | Adjustment<br>location                   | Measuring<br>location    | Adjustment value              | Remarks   |
|----------------|------------------|------|---|--|--------------------------|-------------------------------|---|
| 1              | NORM             | PLAY | Playback the test tape STD-331B (10 kHz, -20 dB). | Head azimuth adjustment screw (Fig. 4-4) | TP-L (Lch)<br>TP-R (Rch) | Maximum playback signal level | Lock the screw with screw lock after completing adjustment. |

### 2. Playback Level Adjustment

- Be sure to make a careful adjustment, as the adjustment determines the DOLBY NR level for playback.

| Pro-<br>cedure | Tape<br>selector | Mode | Input signal/test tape                          | Adjustment<br>location     | Measuring<br>location    | Adjustment value | Remarks |
|----------------|------------------|------|---|----------------------------|--------------------------|------------------|---------|
| 1              | NORM             | PLAY | Playback the test tape STD-331B (315 Hz, 0 dB). | VR451 (Lch)<br>VR452 (Rch) | TP-L (Lch)<br>TP-R (Rch) | -6.7 dBV         |         |

### 3. Bias oscillation frequency adjustment

| Pro-<br>cedure | Tape<br>selector | Mode | Input signal/test tape                             | Adjustment<br>location | Measuring<br>location                                     | Adjustment value                                  | Remarks |
|----------------|------------------|------|--|------------------------|---|---|---------|
| 1              | NORM             | REC  | Load the test tape STD-630 and set to record mode. | —                      | Area between (A) and (B) (AF Assembly) shown in Fig. 4-1. | The oscillation frequency is 105 kHz $\pm$ 1 kHz. |         |

### 4. Recording Level Adjustment

| Pro-<br>cedure | Tape<br>selector | Mode         | Input signal/test tape  | Adjustment<br>location     | Measuring<br>location    | Adjustment value  | Remarks |
|----------------|------------------|--------------|---|----------------------------|--------------------------|---|---------|
| 1              | NORM             | REC          | Apply a signal of 315 Hz to the CD input terminal and set the function to "CD". | Input signal level         | TP-L (Lch)<br>TP-R (Rch) | -7.7 dBV  |         |
| 2              | NORM             | REC/<br>PLAY | Record and playback the test tape STD-630 (315 Hz).                             | VR521 (Lch)<br>VR522 (Rch) | TP-L (Lch)<br>TP-R (Rch) | Repeat the recording and correction so that the playback level of 315 Hz is -6.7 dBV. |         |

### 5. Adjustment of frequency characteristics of recording/playback

- As this procedure is for adjustment of the recording bias, be careful not to increase the distortion rate by under-adjusting the bias.


| Pro-<br>cedure | Tape<br>selector | Mode         | Input signal/test tape  | Adjustment<br>location     | Measuring<br>location    | Adjustment value   | Remarks |
|----------------|------------------|--------------|---|----------------------------|--------------------------|--|---------|
| 1              | NORM             | REC          | Apply a signal of 315 Hz to the CD input terminal and set the function to "CD". | Input signal level         | TP-L (Lch)<br>TP-R (Rch) | -27.7 dBV  |         |
| 2              | NORM             | REC/<br>PLAY | Record and playback the test tape STD-630 (315 Hz and 10 kHz).                  | VR411 (Lch)<br>VR412 (Rch) | TP-L (Lch)<br>TP-R (Rch) | Repeat the correction so that the playback level of 10 kHz remains 0 $\pm$ 0.5 dB in relation to 315 Hz. |         |

### • Checking Procedure for Deck II

#### 1. Action of ALC

| Pro-<br>cedure | Tape<br>selector | Mode | Input signal/test tape  | Adjustment<br>location                    | Measuring<br>location    | Checking value        | Remarks |
|----------------|------------------|------|---|---|--------------------------|-----------------------|---------|
| 1              | NORM             | REC  | Apply a signal of 315 Hz to the CD input terminal and set the function to "CD". | Input signal level                        | TP-L (Lch)<br>TP-R (Rch) | -7.7 dBV              |         |
| 2              |                  |      |   | +10 dB against the input level of step 1. |                          | -2.7 dBV $\pm$ 2.5 dB |         |

### 5. PANEL FACILITIES

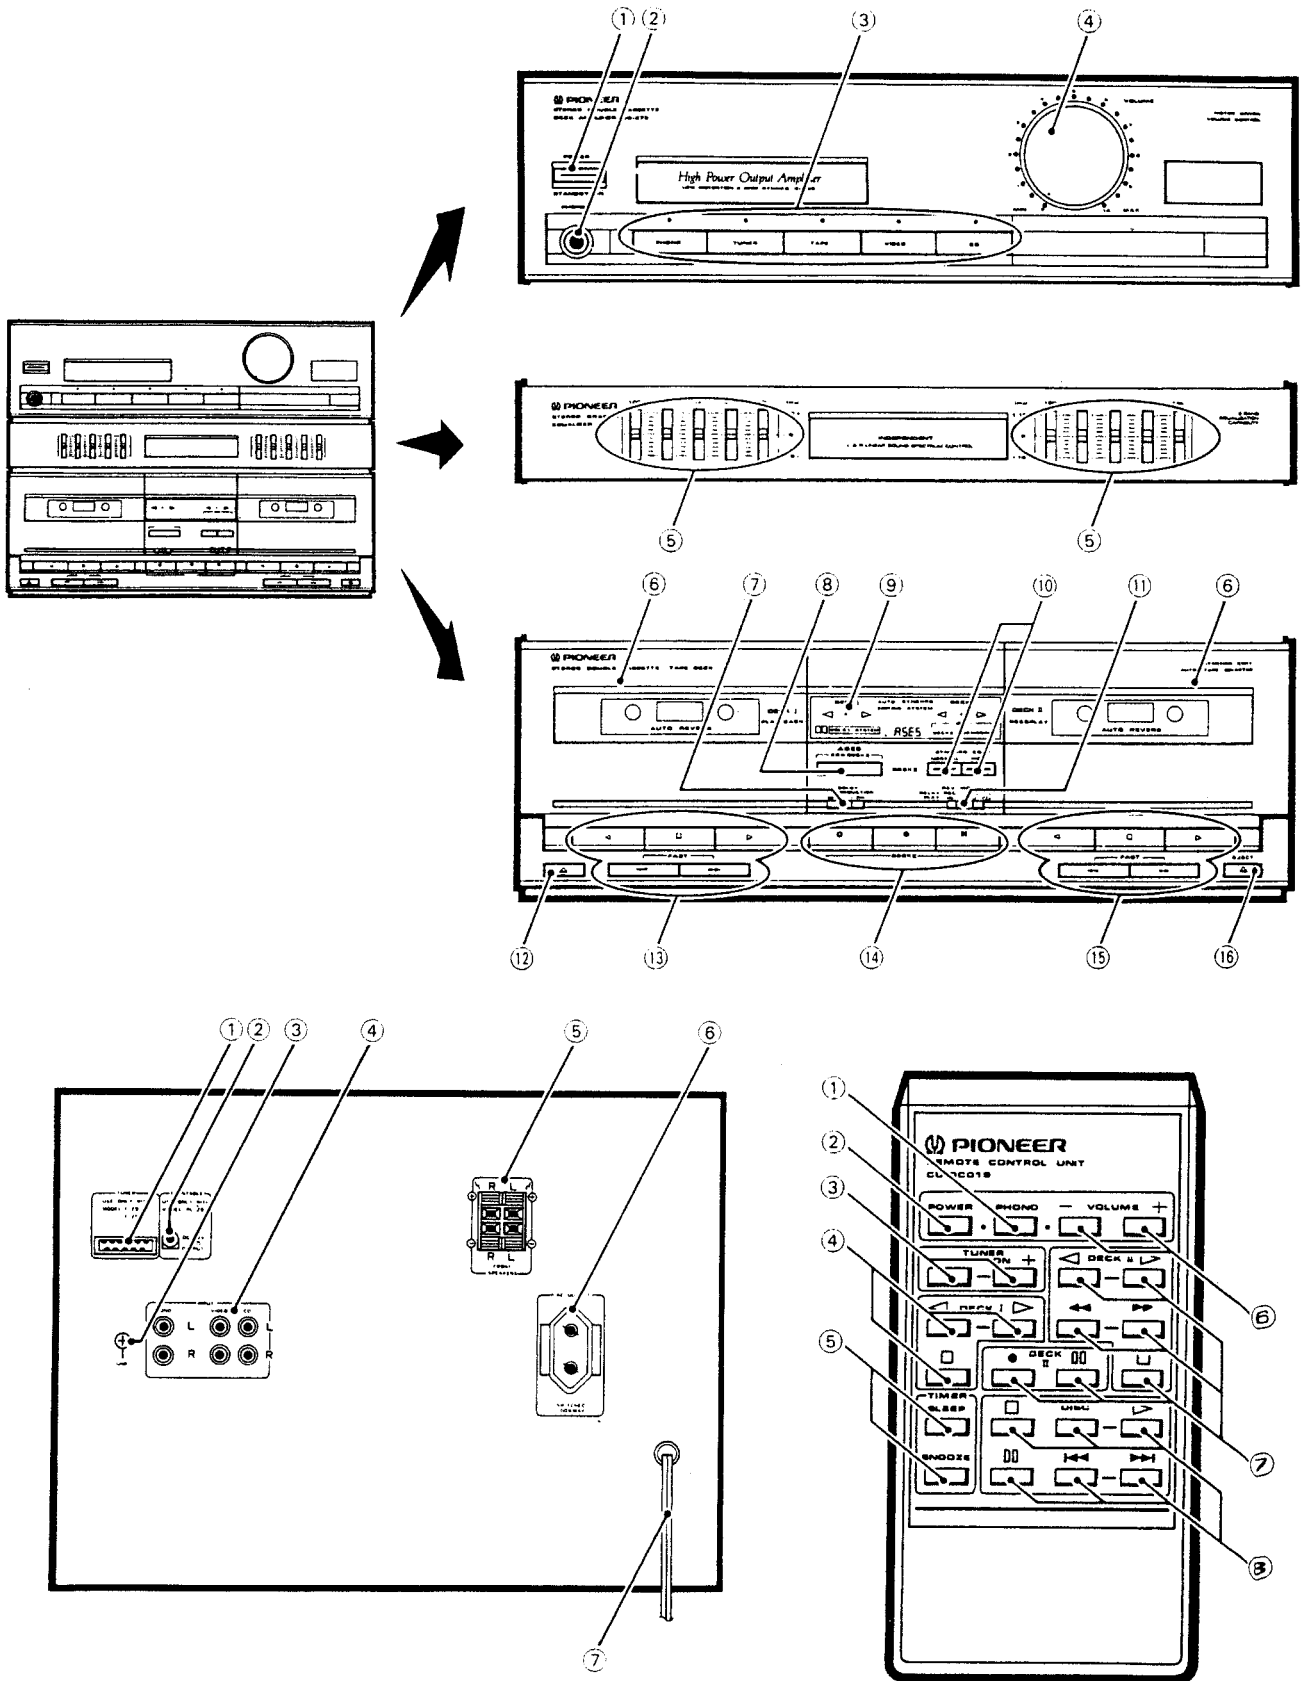

## REAR PANEL FACILITIES

### ① TUNER jacks

Connect the tuner cord here.

### ② TURNTABLE (DC 12 V OUTPUT) jack

This jack supplies power to the turntable (PL-Z93).

### ③ Ground terminal (GND)

Connect this to the ground terminal on the turntable (except for PL-Z93). Loosen screw with Phillips head screwdriver, connect, and tighten screw.

### ④ INPUT jacks

**PHONO:** Connect the output cord of the turntable to these jacks.  
**VIDEO:** Connect to audio output jacks of LD player or VCR, etc.  
**CD:** Connect to output jacks of a CD player.

### ⑤ SPEAKERS terminals

**L:** Connect the left speaker system as seen from the listening position.  
**R:** Connect the right speaker system as seen from the listening position.

#### NOTE:

Connect a speaker system having a nominal impedance ranging from 6  $\Omega$  to 16  $\Omega$ .

### ⑥ AC OUTLET (SWITCHED 100 W MAX)

Power supplied through this outlet is turned on and off by the cassette tape deck amplifier's POWER switch. Total electrical power consumption of connected equipment should not exceed 100 W.

#### NOTE:

Do not connect appliances with high power consumption such as heaters, irons, or television sets to the AC OUTLET in order to avoid overheating or fire risk.

This can cause the cassette tape deck amplifier to malfunction.

### ⑦ Power cord

Connect this to the AC wall socket.

## FRONT PANEL FACILITIES

- Tapes can be played back on deck I; tapes can be played back and recorded on deck II.
- Sound can be recorded as adjusted by the graphic equalizer.

## Amplifier section/Graphic equalizer section

### ① POWER STANDBY/ON switch

This is the switch for electric power.

**ON:** When set to the ON position, power is supplied and the unit becomes operational.

**STANDBY:** When set to the STANDBY position, the main power flow is cut and the unit is no longer fully operational. A minute flow of power feeds the unit to maintain operation readiness.

(The tuner display shows only the time.)

### ② PHONES (Headphones) jack

For stereo headphones.

#### NOTE:

There is no output from the speakers when headphones are plugged into PHONES jack.

### ③ Input selector switches/indicators

[PHONO]

Press to play records on a turntable connected to the PHONO jacks.

[TUNER]

Press to listen to radio broadcast.

[TAPE]

Press to listen to cassette tape.

[VIDEO]

Press to listen to stereo component connected to the VIDEO jacks.

[CD]

Press to listen to a CD player connected to the CD jacks.

### ④ VOLUME control

### ⑤ Graphic equalizer controls

Fine adjustment in sound quality are possible using the 5 controls on the graphic equalizer.

## Cassette Tape Deck Section


### ⑥ Cassette door

### ⑦ DOLBY\* NR switch

Set this switch to the ON position to activate the DOLBY NR system.

- Tapes recorded using Dolby noise reduction should always be played back with the noise reduction system on. Sound quality will be adversely affected if played back with the system off, or if tapes recorded using a different noise reduction system are played back with the Dolby NR system on.
- It is recommended that tapes recorded with Dolby B type NR be so marked on the label. This will help prevent incorrect setting of the noise reduction switch during playback.

---

Dolby noise reduction manufactured under license from Dolby Laboratories Licensing Corporation.  
 "DOLBY" and the double-D symbol  are trademarks of Dolby Laboratories Licensing Corporation.

---

### ⑧ ASES (CD ► DECK II) switch

Used for automatically recording a CD on cassette tape.

### ⑨ Operation indicators

**ASES:** Lights when the A.S.E.S. (Auto Synchro Editing System) is operating.

**DECK II RECORDING:** Lights when recording. Flashes when copying a tape.

Slow flashing = Normal copy

Rapid flashing = High speed copy

**Direction (◀, ▶):** Show direction of tape travel.

### ⑩ SYNCHRO COPY switches

Used for tape copying.

**NORMAL:** Copying from the Deck I tape to the Deck II tape at normal recording/playback speed.

**HIGH:** Copying at about twice normal tape speed. (Copies can be made in about half the NORMAL time.)

**⑪ REV (REVERSE) MODE switch**

| Switch position   | During playback  | During recording                      |
|-------------------|--|---------------------------------------|
| RELAY REC<br>PLAY | Plays both tape sides. When one deck finishes playback, the other deck begins playback of both tape sides for 6 times.<br>If there is a tape in only one deck, then that deck continuously plays both sides of the tape for 6 times. | Records on one side (Deck II only).   |
| REC PLAY<br>      | Plays both tape sides for 6 times.   | Records on both sides (Deck II only). |

**⑫ Deck I EJECT switch**

**⑬ Deck I Operation switches**

- ▷ (PLAY: FWD) .. For playing back a tape in the forward mode.
- ◁ (PLAY: REV) ... For playing back a tape in the reverse mode.
- (STOP) ..... For stopping the tape.
- ▶▶ (FAST) ..... Fast forward in forward mode, rewind in reverse mode.
- ◀◀ (FAST) ..... Rewind in forward mode, fast forward in reverse mode.

**⑭ DECK II switches**

- MUTE (○) ..... Used for creating a blank space between songs. The unrecorded space is created for as long as this switch is kept depressed during recording.
- REC (●) ..... To set to recording standby mode. Recording begins when you press the PLAY switch (▷ or ▷).
- PAUSE (□□) ..... Temporarily stops tape travel. Cancels pause mode when pressed again or press the PLAY switch.

**⑮ Deck II Operation switches:**

Same as Deck I operation switches ⑬.

**⑯ Deck II EJECT switch**

**Remote control unit**

**① PHONO key**

Sets function to PHONO.

**② POWER key**

**③ TUNER STATION keys**


- Before operation, memorize broadcast stations in the STATION CALL switches.
- + ..... Stations change in order in the upward direction
- ..... Stations change in order in the downward direction.

**④ Deck I operation keys**

- ▷ ..... Forward play
- ◁ ..... Reverse play
- ..... Stop

**⑤ Timer operation keys**

**SLEEP:** Sets the sleep timer. Each time you press this key, the setting changes as shown here. The current setting is shown on the tuner display. Power turns off when your set time has elapsed.

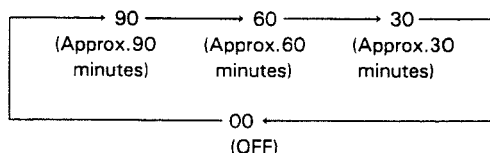

If you press the SLEEP key during SLEEP operation, the display will show the time remaining till power turns off.

**SNOOZE:** Turns off power if pressed after timer playback begins. Timer playback begins again approx. 5 minutes later.

**⑥ VOLUME + (UP)/- (DOWN) keys**

When pressed, VOLUME on the amplifier is actually moved by a motor.

**⑦ Deck II operation keys:**

Same as Deck I operation switches ⑬ plus DECK II switches ⑮.

**⑧ CD operation keys**

Perform the connections so that the CD player is operated by the remote control unit.

- ▷ ..... Play
- DISC ..... DISC selection
- ..... Stop
- ..... Pause
- ◀◀, ▶▶ ..... Track search

**NOTE:**

Note that the DISC selector key on the remote control unit may not operate, depending on the CD player used.

The amplifier input selector automatically switches to the music source being operated when you press the CD playback (▷), cassette tape deck playback (◁, ▷), or tuner station controls.

**NOTE:**

It is not possible to operate the CD player with the remote control unless the remote control cord is connected

**Range of remote control**

When the remote control unit is pointed at the remote sensor window on the tuner and any of its keys is pressed, the tuner and other components can be operated by remote control.

Distance: Within a range of approx. 7 meters from the remote sensor window on the tuner.

Angle: Within approx. 30 degrees from the center of the remote sensor window on the tuner.

Remote control will not be possible if there is an obstacle between the remote control unit itself and the remote sensor window on the tuner.

Performance of the remote control unit is adversely affected in the presence of strong fluorescent light. Keep such lights away, specially from the sensor window.

## 6. SPECIFICATIONS

### Cassette tape deck amplifier: DC-Z73

#### Amplifier Section

|   |   |
|---|---|
| Music power .....                           | 50 W + 50 W (1 kHz, T.H.D. 1 %, 8 Ω)              |
| DIN music power .....                       | 50 W + 50 W (1 kHz, T.H.D. 1 %, 8 Ω)              |
| Peak music power.....                       | 290 W (1 kHz, T.H.D. 10%, 6 Ω)                    |
| Continuous Power Output (DIN) .....         | 33 W + 33 W<br>(1 kHz, T.H.D. 1 %, 8 Ω)           |
| Graphic equalizer frequency band.....       | 100 Hz, 330 Hz,<br>1 kHz, 3.3 kHz, 10 kHz, ± 7 dB |
| Hum and Noise (DIN, continuous Power/50 mW) |   |
| PHONO .....                                 | 68 dB/60 dB                                       |
| Total Harmonic Distortion                   |   |
| (40 Hz to 20,000 Hz, 15 W, 8 ohms)** .....  | No more than 0.2 %                                |

#### Tape Deck Section

|   |  |
|---|--|
| Systems .....                           | 4 track, 2-channel stereo  |
| Heads .....                             | Recording/playback head x 1<br>Playback head x 1<br>Erasing head x 1 |
| Motor.....                              | DC servo 2 speed motor x 2   |
| Wow and Flutter.....                    | No more than 0.09 % (WRMS)   |
| Fast Winding Time .....                 | Approximately 95 seconds<br>(C-60 tape)                              |
| Frequency Response (– 20 dB recording): |  |
| Normal tape .....                       | 35 Hz to 14,000 Hz ± 6 dB  |
| CrO <sub>2</sub> tape .....             | 35 Hz to 15,000 Hz ± 6 dB  |
| Signal-to-Noise ratio                   |  |
| Dolby NR OFF.....                       | 56 dB  |
| Noise Reduction Effect                  |  |
| Dolby B type NR ON .....                | More than 10 dB (at 5 kHz)   |

#### Furnished Parts

|                              |   |
|------------------------------|---|
| Operating Instructions ..... | 1 |
| Remote control unit .....    | 1 |
| Dry cell batteries .....     | 2 |

#### Miscellaneous

|                                |                                |
|--------------------------------|--------------------------------|
| Power requirements .....       | a.c. 220 Volts ~, 50/60 Hz     |
| Power Consumption .....        | 216 W                          |
| Dimensions .....               | 360 (W) x 271 (H) x 329 (D) mm |
| Weight (without package) ..... | 8.3 kg                         |

#### Accessories

|                 |   |
|-----------------|---|
| EP Adaptor..... | 1 |
|-----------------|---|

• Specifications and design subject to possible modification without notice due to improvement.

\*\* Measured By Audio Spectrum Analyzer.