

CDX-646/646X

SERVICE MANUAL

US Model
Canadian Model
AEP Model
UK Model
CDX-646
E Model
CDX-646/646X



Photo: CDX-646

Model Name Using Similar Mechanism	CDX-601/636
CD Drive Mechanism Type	MG-251A-137
Optical Pick-up Name	KSS-720A/Q-N

SPECIFICATIONS

System	Compact disc digital audio system
Laser diode properties	Material: GaAlAs Wavelength: 780 nm Emission Duration: Continuous Laser out-put Power: Less than 44.6 μ W*
* This output is the value measured at a distance of 200 mm from the objective lens surface on the Optical Pick-up Block.	
Frequency response	10 – 20,000 Hz
Wow and flutter	Below the measurable limit
Signal-to-noise ratio	94 dB
Outputs	BUS control output (8 pins) Analog audio output (RCA pin)
Current drain	800 mA (during CD playback) 800 mA (during loading or ejecting a disc)
Operating temperature	-10°C to +55°C (14°F to 131°F)
Dimensions	Approx. 262 × 90 × 185 mm (10 ³ / ₈ × 3 ⁵ / ₈ × 7 ³ / ₈ in.) (w/h/d) not incl. projecting parts and controls
Mass	Approx. 2.1 kg (4 lb. 10 oz.)
Power requirement	12 V DC car battery (negative ground)
Supplied accessories	Disc magazine (1) Parts for installation and connections (1 set)

Design and specifications are subject to change without notice.

COMPACT DISC CHANGER

SONY®

SERVICING NOTES

NOTES ON HANDLING THE OPTICAL PICK-UP BLOCK OR BASE UNIT

The laser diode in the optical pick-up block may suffer electrostatic breakdown because of the potential difference generated by the charged electrostatic load, etc. on clothing and the human body. During repair, pay attention to electrostatic breakdown and also use the procedure in the printed matter which is included in the repair parts.

The flexible board is easily damaged and should be handled with care.


NOTES ON LASER DIODE EMISSION CHECK

The laser beam on this model is concentrated so as to be focused on the disc reflective surface by the objective lens in the optical pick-up block. Therefore, when checking the laser diode emission, observe from more than 30 cm away from the objective lens.

US/Canadian model:

If the optical pick-up block is defective, please replace the whole optical pick-up block.


Never turn the semi-fixed resistor located at the side of optical pick-up block.

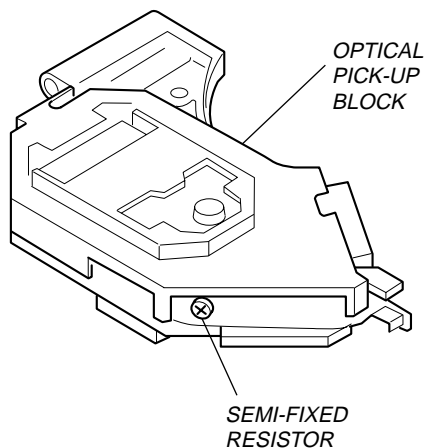

AEP/UK model:



This product is classified as a CLASS 1 LASER PRODUCT. The CLASS 1 LASER PRODUCT label is located on the rear exterior.

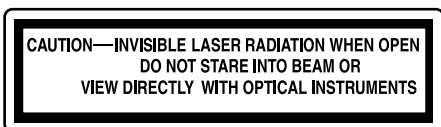

This label is located on the drive unit's internal chassis.


When replacing the chassis (U.S) sub assy of mechanism deck which have the "CAUTION LABEL" attached, please be sure to put a new CAUTION LABEL (3-223-913-11) to the chassis (U.S) sub assy.

DISC MAGAZINE GETTING OUT PROCEDURE ON THE POWER SUPPLY IS OFF

Remove the CASE (LOWER. T) beforehand

- 1) Press the lever (ML.S) in the direction of arrow **A**.
- 2) Removal the magazine assy.

Note: Take out the magazine only when the tray is completely within the magazine. If the disk or tray is sticking out, turn on the power and eject the magazine.

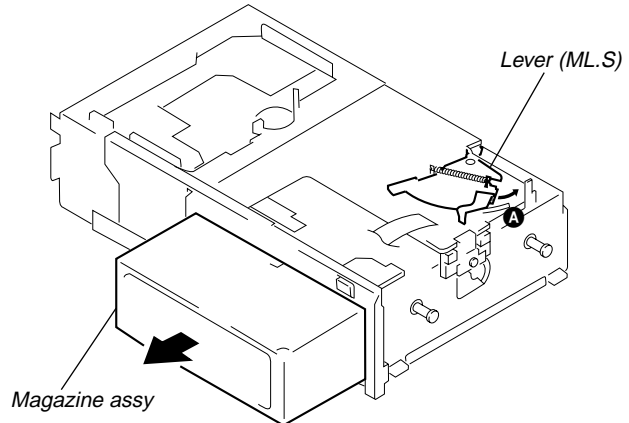

CAUTION

Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

Flexible Circuit Board Repairing

- Keep the temperature of the soldering iron around 270 °C during repairing.
- Do not touch the soldering iron on the same conductor of the circuit board (within 3 times).
- Be careful not to apply force on the conductor when soldering or unsoldering.

Notes on chip component replacement

- Never reuse a disconnected chip component.
- Notice that the minus side of a tantalum capacitor may be damaged by heat.

SAFETY-RELATED COMPONENT WARNING!!

COMPONENTS IDENTIFIED BY MARK \triangle OR DOTTED LINE WITH MARK \triangle ON THE SCHEMATIC DIAGRAMS AND IN THE PARTS LIST ARE CRITICAL TO SAFE OPERATION. REPLACE THESE COMPONENTS WITH SONY PARTS WHOSE PART NUMBERS APPEAR AS SHOWN IN THIS MANUAL OR IN SUPPLEMENTS PUBLISHED BY SONY.

ATTENTION AU COMPOSANT AYANT RAPPORT À LA SÉCURITÉ!

LES COMPOSANTS IDENTIFIÉS PAR UNE MARQUE \triangle SUR LES DIAGRAMMES SCHÉMATIQUES ET LA LISTE DES PIÈCES SONT CRITIQUES POUR LA SÉCURITÉ DE FONCTIONNEMENT. NE REMPLACER CES COMPOSANTS QUE PAR DES PIÈCES SONY DONT LES NUMÉROS SONT DONNÉS DANS CE MANUEL OU DANS LES SUPPLÉMENTS PUBLIÉS PAR SONY.

SECTION 1 GENERAL

This section is extracted from instruction manual.

TABLE OF CONTENTS

SERVICING NOTES	2
1. GENERAL	
Installation	3
Connections	4
2. DISASSEMBLY	5
3. MECHANISM DECK ASSEMBLY	11
4. MECHANICAL ADJUSTMENT	13
5. ELECTRICAL CHECK	14
6. DIAGRAMS	
6-1. Block Diagram – MAIN Section –	17
6-2. Block Diagram – BUS CONTROL/ POWER SUPPLY Section –	18
6-3. Note for Printed Wiring Boards and Schematic Diagrams	19
6-4. Printed Wiring Boards – LSW/RF Boards –	20
6-5. Schematic Diagram – LSW/RF Boards –	21
6-6. Printed Wiring Board – MAIN Board (Component Side) –	22
6-7. Printed Wiring Board – MAIN Board (Conductor Side) –	23
6-8. Schematic Diagram – MAIN Board (1/2) –	24
6-9. Schematic Diagram – MAIN Board (2/2) –	25
6-10. Printed Wiring Boards – JACK/SWITCH Boards –	26
6-11. Schematic Diagram – JACK/SWITCH Boards –	26
6-12. IC Pin Function Description	30
7. EXPLODED VIEWS	33
8. ELECTRICAL PARTS LIST	38

Installation


Precautions

- Choose the mounting location carefully, observing the following:
 - The unit is not subject to temperatures exceeding 55°C (such as in a car parked in direct sunlight).
 - The unit is not subject to direct sunlight.
 - The unit is not near heat sources (such as heaters).
 - The unit is not exposed to rain or moisture.
 - The unit is not exposed to excessive dust or dirt.
 - The unit is not subject to excessive vibration.
 - The fuel tank should not be damaged by the tapping screws.
 - There should be no wire harnesses or pipes under the place where you are going to install the unit.
 - The spare tire, tools or other equipment in or under the trunk should not be interfered with or damaged by the screws or the unit itself.
- Be sure to use only the supplied mounting hardware for a safe and secure installation.
- Use only the supplied screws.
- Make holes of $\varnothing 3.5$ mm only after making sure there is nothing on the other side of the mounting surface.


How to install the unit

The brackets ① provide two positions for mounting, high and low. Use the appropriate screw holes according to your preference.

Horizontal installation

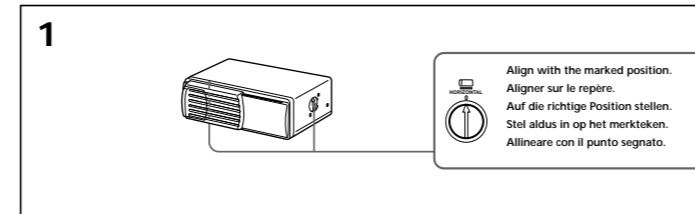


Vertical installation

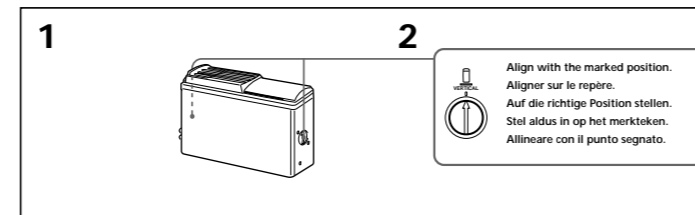

Suspended installation

When the unit is to be installed under the rear tray etc. in the trunk compartment, make sure the following provisions are made.

- Choose the mounting location carefully so that the unit can be installed horizontally.
- Make sure the unit does not hinder the movement of the torsion bar spring etc. of the trunk lid.

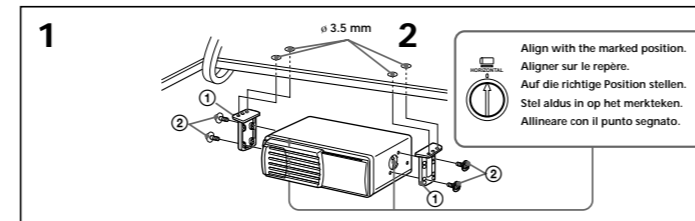

Inclined installation

After installing the unit, align the dials with one of the marks so that the arrows are as vertical as possible.

Note
Be sure to align the left and right dials with the same mark.



Installation


Précautions

- Choisissez l'emplacement de montage en tenant compte des observations suivantes:
 - L'appareil ne doit pas être exposé à des températures supérieures à 55°C (comme dans une voiture garée en plein soleil).
 - L'appareil ne doit pas être utilisé en plein soleil.
 - L'appareil ne doit pas être utilisé près d'une source de chaleur (comme un chauffage).
 - L'appareil ne doit pas être utilisé dans un endroit exposé à la pluie ou à l'humidité.
 - L'appareil ne doit pas être utilisé dans un endroit poussiéreux ou sale.
 - L'appareil ne doit pas être exposé à des vibrations excessives.
 - Vérifiez que le réservoir d'essence ne risque pas d'être endommagé par les vis taraudeuses.
 - Il ne doit pas y avoir de faisceau de fils ou de tuyaux à l'emplacement du montage.
 - Vérifiez que l'appareil ou les vis ne risquent pas d'endommager ou de gêner la roue de secours, les outils, ou tout autre objet dans le coffre.
- Pour garantir la sécurité de l'installation, utiliser uniquement le matériel de montage fourni.
- Utilisez uniquement les vis fournies.
- Ne percez les trous de 3,5 mm de diamètre qu'après vous être assuré qu'il n'y avait rien de l'autre côté de la surface de montage.


Installation de l'appareil

Les supports ① offrent deux positions de montage, haut et bas. Utilisez les trous de vissage appropriés en fonction de vos préférences.

Installation horizontale

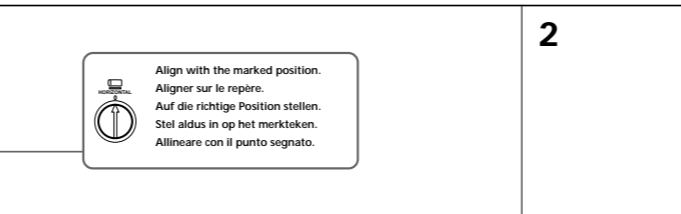

Installation verticale

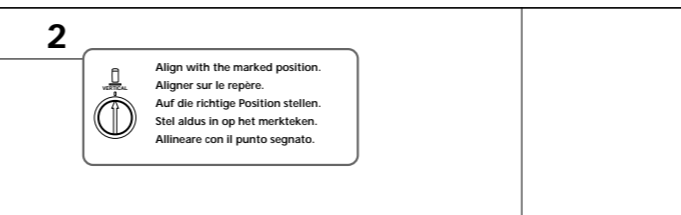

Installation suspendue

Si l'appareil doit être installé sous la plage arrière dans le coffre par exemple, observer les précautions suivantes.

- Choisissez l'emplacement pour pouvoir installer l'appareil à l'horizontale.
- Vérifiez que l'appareil ne gêne pas les mouvements du ressort de fermeture du coffre, entre autres.



Installation inclinée

Après avoir installé l'appareil, alignez le disque sur l'un des repères afin que la flèche soit aussi proche que possible de la position verticale.

Remarque
Veillez à aligner les disques gauche et droite sur le même repère.



Installation

Sicherheitsmaßnahmen

- Bei der Wahl des Einbaortes ist folgendes zu beachten:
 - Das Gerät darf keinen Temperaturen über 55 °C ausgesetzt sein, wie sie z. B. in einem in der Sonne geparkten Fahrzeug auftreten können.
 - Das Gerät darf keiner direkten Sonneneinstrahlung ausgesetzt sein.
 - Das Gerät muß von Wärmequellen (z. B. der Heizung) ferngehalten werden.
 - Das Gerät darf weder Regen noch Feuchtigkeit ausgesetzt sein.
 - Das Gerät darf keinem übermäßigen Staub oder anderer Verschmutzung ausgesetzt sein.
 - Das Gerät darf keinen übermäßigen Vibrationen ausgesetzt sein.
 - Der Tank darf durch die Schneidschrauben nicht beschädigt werden.
 - Unter der Fläche, auf die das Gerät montiert werden soll, dürfen sich keine Kabelbäume oder Leitungen befinden.
 - Ersatzreifen, Werkzeug usw. im oder unter dem Kofferraum dürfen durch die Schneidschrauben nicht beschädigt werden. Achten Sie auch darauf, daß die Herausnahme des Ersatzreifens, Werkzeugs usw. nicht durch das Gerät behindert wird.
 - Für sicheren und stabilen Einbau verwenden Sie ausschließlich die mitgelieferten Befestigungsteile.
 - Verwenden Sie ausschließlich die mitgelieferten Schrauben.
 - Bohren Sie die Löcher mit einem Durchmesser von 3,5 mm erst, wenn Sie sich vergewissert haben, daß sich nichts auf der Rückseite der Montagefläche befindet.

Installation des Gerätes

Die Halterungen ① eignen sich für zwei Einbaupositionen, oben und unten. Verwenden Sie je nach Bedarf die geeigneten Bohrungen.

Horizontaler Einbau




Vertikaler Einbau



Hängender Einbau

Bei hängender Installation unter der Heckablage usw. im Kofferraum beachten Sie folgende Vorsichtsmaßnahmen:


- Wählen Sie den Befestigungsort sorgfältig so aus, daß das Gerät horizontal montiert werden kann.
- Achten Sie darauf, daß das Gerät die Heckklappendämpfer usw. nicht behindert.

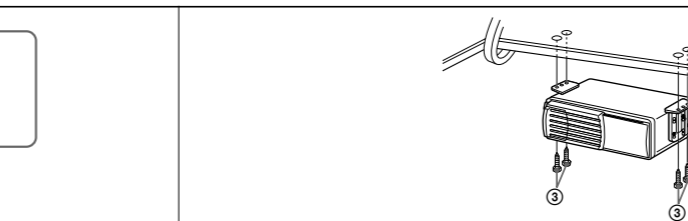

Installation in geneigter Position

Nach dem Installieren des Gerätes richten Sie die Dial-Ringe an einer der Markierungen aus, so daß der Pfeil möglichst senkrecht steht.

Hinweis
Achten Sie darauf, den linken und rechten Dial-Ring an derselben Markierung auszurichten.

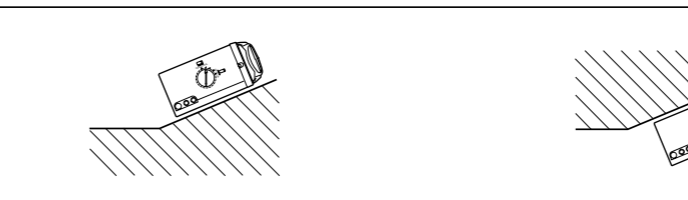

Installieren


Voorzorgsmaatregelen

- Kies de plaats van opstelling met zorg, zodat het toestel niet:
 - onderhevig is aan temperaturen boven de 55°C (zoals in een auto geparkeerd in de volle zon).
 - steeds blootgesteld wordt aan direct zonlicht.
 - te dicht bij een warmtebron komt (zoals een autoverwarming).
 - nat kan worden, door regen, vocht of opspattend water.
 - in contact komt met veel stof of vuil.
 - onderhevig is aan sterke trillingen of schokken.
 - Let op dat de plaatschroeven de benzinetank niet beschadigen.
 - Kontroleer of onder de plaats waar u het apparaat wilt monteren geen bedrading of leidingen lopen.
 - Houd bij het monteren rekening met het reservewiel, gereedschappen en-eventueel in de kofferruimte aanwezige andere apparaten, zodat deze de compact disc wisselaar niet in de weg zitten, noch beschadigd kunnen worden door de montageschroeven van de laaiste.
 - In het belang van een veilige en stevige montage dient u uitsluitend het bijgeleverde montage materiaal te gebruiken.
 - Gebruik enkel de meegeleverde schroeven.
 - Controleer of er niets achter het bevestigingsvlak zit en maak pas dan gaten van 3,5 mm diameter.


Installatie van het apparaat

De beugels ① zijn geschikt voor twee montageposities, hoog en laag. Maak gebruik van de vereiste schroefgaten afhankelijk van de gewenste montagepositie.

Horizontaal installeren

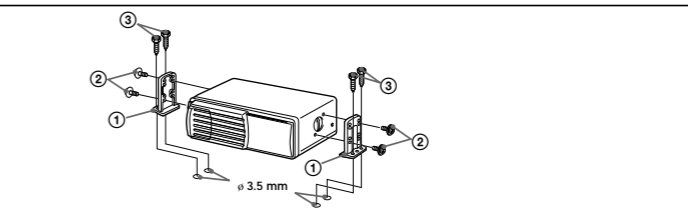


Vertikaal installeren

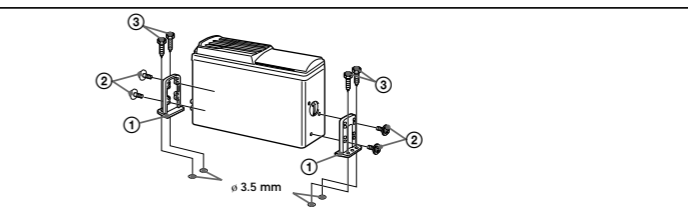

Hangend installeren

Als u het apparaat onder de hoedenplank of iets dergelijks wilt installeren, let dan op de volgende punten:


- Kies een geschikte plek waar u het apparaat horizontaal kunt ophangen.
- Vergewis u ervan dat het apparaat niet beschadigd kan worden door bewegende onderdelen zoals een kofferdeksel, de veren van de vijfde deur, enz.

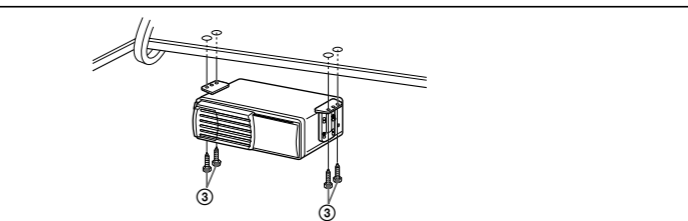

Niet-horizontale plaatsing

Zodra de eenheid geplaatst is, draait u de ringen op een stand waarbij de pijl zoveel mogelijk in een verticale positie staat.

Opmerking
Zet de linker-en de rechterring op dezelfde stand.

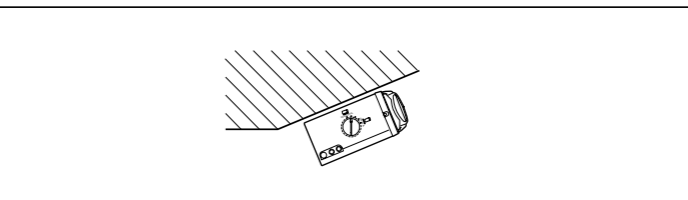

Installazione


Precauzioni

- Scegliere con cura il luogo di installazione, seguendo le istruzioni riportate di seguito ed evitando di installare l'apparecchio in luoghi:
 - soggetti a temperature oltre i 55°C (come in un'auto parcheggiata al sole).
 - esposti alla luce solare diretta.
 - vicini a fonti di calore (come impianti di riscaldamento).
 - esposti alla pioggia o all'umidità.
 - esposti a polvere o sporco eccessivi.
 - soggetti a vibrazioni eccessive.
 - il serbatoio del carburante non deve essere danneggiato dalle viti filettanti.
 - Non devono essere presenti né cavi né tubi sotto il luogo scelto per l'installazione dell'apparecchio.
 - Le viti e l'apparecchio stesso non devono interferire con, o danneggiare, la ruota di scorta, gli attrezzi o altri dispositivi presenti dentro o sotto il bagagliaio.
- Assicurarsi di usare solo il materiale di montaggio in dotazione per un'installazione stabile e sicura.
- Utilizzare solo le viti in dotazione.
- Assicurarsi che non vi sia nulla sull'altro lato della superficie di montaggio, quindi effettuare fori di solo 3,5 mm di diametro.


Installazione dell'apparecchio

Le staffe ① consentono l'installazione in due diverse posizioni: alta e bassa. Utilizzare i fori per le viti in base alla posizione di installazione scelta.

Installazione in orizzontale

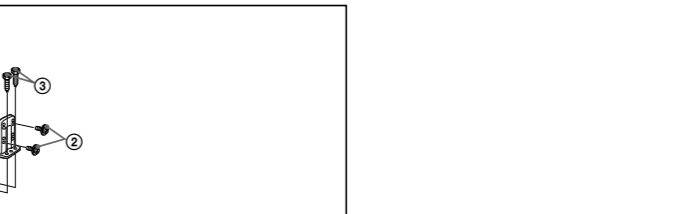


Installazione in verticale

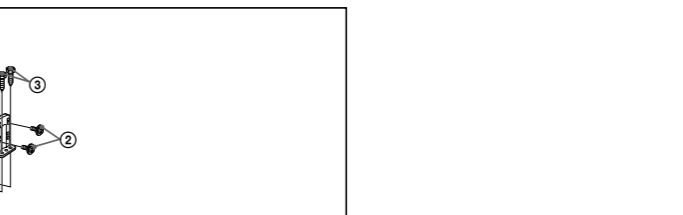

Installazione in sospensione

Se l'apparecchio deve essere installato sotto il ripiano posteriore, nel bagagliaio, ecc., assicurarsi di prendere le seguenti precauzioni:


- Scegliere con attenzione il luogo di montaggio in modo che l'apparecchio possa essere installato orizzontalmente.
- Assicurarsi che l'apparecchio non ostacoli il movimento della molla della barra di torsione ecc. del coperchio del cofano.

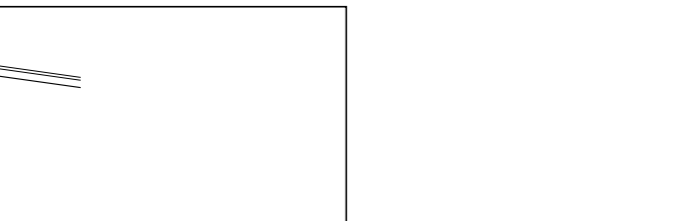

Installazione in posizione inclinata

Dopo aver installato l'apparecchio, allineare le manopole ad una delle tacche in modo che la freccia sia il più verticale possibile.

Nota
Accertarsi di allineare le manopole di sinistra e di destra alla stessa tacca.

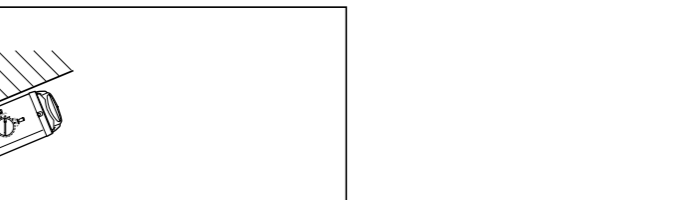

Connections/Connexions/ Anschluß /Aansluitingen/ Collegamenti

For details, refer to the Installation/Connections manual of each product.


Pour plus de détails, consulter le manuel d'installation/connexions de chaque produit.

Einzelheiten entnehmen Sie der Installations-/Anschlußanleitung des betreffenden Geräts.

Zie voor nadere bijzonderheden de gebruiksaanwijzing voor installatie en aansluitingen van de aan te sluiten apparatuur.

Per i dettagli, fare riferimento al manuale di installazione/collegamenti dell'autoradio.

Connection diagram/Schéma de connexion/ Anschlußdiagramm/Aansluitingsschema/ Schema di collegamento

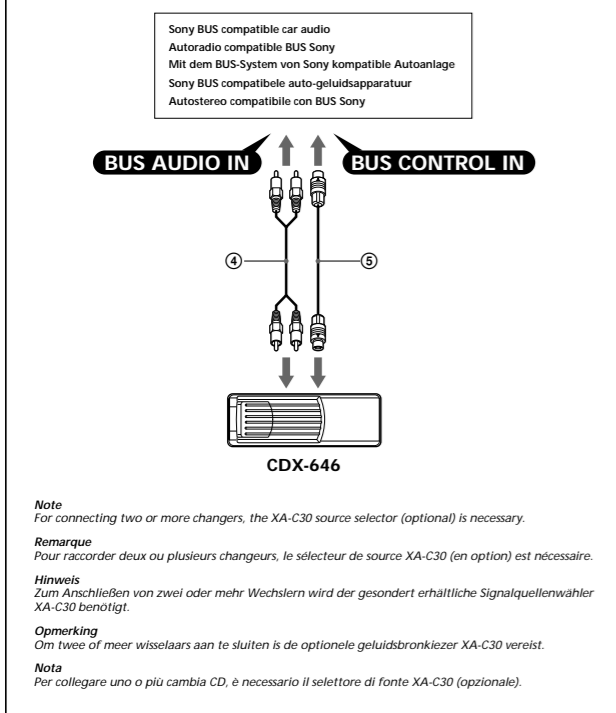

Note
For connecting two or more changers, the *XA-C30 source selector (optional)* is necessary.

Remarque
Pour raccorder deux ou plusieurs changeurs, le sélecteur de source *XA-C30* (en option) est nécessaire.

Hinweis
Zum Anschließen von zwei oder mehr Wechslern wird der gesondert erhältliche Signalquellenwähler *XA-C30* benötigt.

Opmerking
Om twee of meer wisselaars aan te sluiten is de optionele geluidsbronkiezer *XA-C30* vereist.

Nota
Per collegare uno o più cambia CD, è necessario il selettore di fonte *XA-C30* (opzionale).

Inserting a disc

1 With the arrow side facing up
Avec la partie fléchée tournée vers le haut
Mit dem Pfeil nach oben
Met het pijltje naar boven
Con il lato della freccia rivolto verso l'alto

Use the supplied disc magazine or the disc magazine *XA-250*. The disc magazine *XA-108* can not be used with this unit. If you use any other magazine, it may cause a malfunction.

Utilisez le magasin à disques fourni ou un magasin à disques *XA-250*. Vous ne pouvez pas utiliser de magasin à disques *XA-108* avec cet appareil. L'utilisation d'un autre type de magasin à disques risque de provoquer un dysfonctionnement.

Verwenden Sie das mitgelieferte CD-Magazin oder das CD-Magazin *XA-250*. Das CD-Magazin *XA-108* kann nicht zusammen mit diesem Gerät eingesetzt werden. Wird ein anderes als das empfohlene CD-Magazin verwendet, kann es zu Fehlfunktionen kommen.

Gebruik het meegeleverde disc-magazijn of het disc-magazijn *XA-250* met deze afspeler. Het gebruik van een ander magazijn kan defecten veroorzaken.

Utilizzare il contenitore dischi in dotazione o il contenitore dischi *XA-250*. Il contenitore dischi *XA-108* non può essere utilizzato con questo apparecchio. Se si utilizza qualsiasi altro contenitore, potrebbero sorgere problemi di funzionamento.

10 discs, one in each tray
10 disques, un par plateau
Insgesamt 10 CDs (eine in jedem Fach)
Tien discs, in elke gleuf één
10 dischi, uno in ciascun comparto

Tab
Langsette
Lasche
Lijze
Linguetta

Labeled surface up
Etiquette vers le haut
Mit der beschrifteten Seite nach oben
Etiket naar boven
Con l'etichetta rivolta verso l'alto

3 Disc magazine
Chargeur de disques
CD-Magazin
Disc-magazijn
Contentore dischi

If the disc magazine does not lock properly
Take out the magazine, and after pressing the (EJECT) button, reinsert it.
Si vous ne pouvez pas fermer le chargeur de disques
Sortez le chargeur et, après avoir appuyé sur la touche (EJECT), réinsérez-le.

Wenn sich das CD-Magazin nicht richtig verriegeln läßt
Nehmen Sie das Magazin heraus, drücken Sie die (EJECT)-Taste, und setzen Sie das Magazin dann wieder ein.

Als het disc-magazijn niet snoopel op zijn plaats vastkijkt
Verwijder het disc-magazijn, druk op de (EJECT) toets en breng vervolgens het disc-magazijn opnieuw in.

Se il contenitore dischi non si blocca in posizione correttamente
Estrarlo e, dopo aver premuto il tasto (EJECT), reinsierlo.

To remove
Retrait
Herausnehmen des CD-Magazins
Verwijderen
Per estrarre

Notes on the disc magazine

- Do not leave the disc magazine in locations with high temperatures and high humidity such as on a car dashboard or in the rear window where the disc magazine will be subjected to direct sunlight.
- Do not place more than one disc at a time onto one tray, otherwise the changer and the discs may be damaged.
- Do not drop the disc magazine or subject it to a violent shock.

Remarques sur le chargeur de disques

- Ne pas laisser le chargeur de disques dans un endroit très chaud ou très humide comme sur le tableau de bord ou sur la plaque arrière d'une voiture où il serait en plein soleil.
- Ne pas insérer plus d'un disque à la fois sur le plateau, sinon le changeur et les disques risquent d'être endommagés.
- Ne pas laisser tomber le chargeur de disques ni le cogner.

Hinweise zum CD-Magazin

- Halten Sie das Magazin von hohen Temperaturen und Feuchtigkeit fern. Lassen Sie es nicht auf dem Armaturenbrett, auf der Heckablage usw. liegen, wo es direktem Sonnenlicht ausgesetzt ist.
- Verursachen Sie nicht mehr als eine CD in ein Fach einzulegen. Andernfalls können der Wechsler und die CDs beschädigt werden.
- Lassen Sie das Magazin nicht fallen, und schützen Sie es vor Stößen.

Opmerkingen betreffende het disc-magazijn

- Laat het magazijn niet achter op plaatsen waar dit blootgesteld wordt aan vocht of aan hoge temperaturen, zoals op het dashboard van een auto of op de hoedeplank, waar het magazijn in de volle zon staat.
- Steek niet meer dan één enkele disc in een uitsparing, anders kunnen zowel de CD-wisselaar als de compact discs beschadigd worden.
- Laat het apparaat niet vallen en stel het niet bloot aan hevige trillingen of schokken.

Note sul contenitore dischi

- Non lasciare il contenitore dischi in luoghi con temperature elevate o molto umidi, come sul cruscotto o sul ripiano posteriore di un'auto dove il contenitore potrebbe essere esposto alla luce solare diretta.
- Non inserire più di un disco alla volta in ciascun comparto, diversamente il CD e i dischi saranno danneggiati.
- Non lasciar cadere il contenitore dischi e non sottoporlo a urti violenti.

When the tray comes out
Normally, the trays will not come out of the magazine. However, if they are pulled out of the magazine, it is easy to re-insert them.
With the cut-away portion of the tray facing you, insert the right corner of the tray in the slot, then push in the left corner until it clicks.
Note
Do not insert the tray upside down or in the wrong direction.

Lorsque le plateau sort
En principe, les plateaux ne sortent pas du chargeur. Toutefois, s'ils sortent du chargeur, il est facile de les réinsérer.
Avec la portion découpée du plateau vous faisant face, insérez le coin droit du plateau dans la fente, puis enfoncez le coin gauche jusqu'au clic.
Remarque
Ne pas insérer le plateau à l'envers ou dans le mauvais sens.

Wenn sich ein Fach gelöst hat
Normalerweise können sich die Fächer nicht vom Magazin lösen. Werden sie jedoch aus dem Magazin herausgezogen, lassen sie sich mühelos wieder anbringen.
Hierbei muß die Aussparung des Fachs auf Sie weisen. Setzen Sie dann die rechte Ecke des Fachs in den Einschub ein, und drücken Sie danach die linke Ecke an, bis das Fach mit einem Klicken einrastet.
Hinweis
Versuchen Sie nicht, das Fach mit der falschen Seite nach oben oder verkehrt herum einzusetzen.

Als de houder uitsteekt
Normaal gezien steken de houders niet uit het magazijn. Als ze er toch zouden zijn uitgetrokken, kan u ze gemakkelijk weer insteken.
Met de uitsparing in de houder naar u toe gericht, brengt u de rechterhoek van de houder in de gleuf en drukt dan de linkerhoek erin tot u een klik hoort.
Opmerking
De houder niet omgekeerd of in de verkeerde richting inbrengen.

Quando il comparto fuoriesce
Di solito, i comparti non fuoriescono dal contenitore; se ciò dovesse avvenire, è facile reinserirli.
Con la parte del comparto tagliata rivolta in avanti, inserire l'angolo destro del comparto nell'alloggiamento, quindi inserire l'angolo sinistro fino a farlo scattare in posizione.
Nota
Non inserire il vassoio capovolto o nella direzione errata.

Notes on handling discs

- A dirty or defective disc may cause sound drop-outs during playback. To enjoy optimum sound, handle the disc as follows:
 - Handle the disc by its edge, and to keep the disc clean, do not touch the unlabeled surface. (fig. A)
 - Do not stick paper or tape on the disc. (fig. B)
 - Keep your discs in their cases or disc magazines when not in use.
 - Do not expose discs to direct sunlight or heat sources such as hot air ducts.
 - Do not leave discs in a car parked in direct sunlight where there can be a considerable rise in the temperature inside the car. (fig. C)
 - Before playing, clean the discs with an optional cleaning cloth. Wipe each disc in the direction of the arrows. (fig. D)
 - Do not use solvents such as benzine, thinner, commercially available cleaners or antistatic spray intended for analog discs.
- Discs with special shapes (heart-shaped discs, octagonal discs etc.) cannot be played on this unit. Attempting to do so may damage the unit. Do not use such discs.

- Notes on CD-R discs**
 - You can play CD-Rs (recordable CDs) designed for audio use on this unit. (fig. H)
 - Some CD-Rs (depending on the equipment used for its recording or the condition of the disc) may not play this unit.
 - You cannot play a CD-R that is not finalized.*

Remarques sur la manipulation des disques

- Un disque sale ou défectueux peut provoquer des pertes de son à la lecture. Manipuler le disque comme suit pour obtenir un son optimal.
 - Manipuler le disque par son arête et le maintenir dans un état propre, ne pas le toucher sur la surface non imprimée. (fig. A)
 - Ne pas coller de papier ou de bande adhésive sur le disque. (fig. B)
 - Conserver vos disques dans leurs boîtiers ou des pochettes de rangement lorsqu'ils ne sont pas utilisés.
 - Ne pas laisser les disques en plein soleil ou près d'une source de chaleur comme des conduits d'air chaud. Ne pas laisser les disques dans une voiture garée en plein soleil car la température de l'habitacle risque d'augmenter considérablement. (fig. C)
 - Avant la lecture, essayer les disques avec un chiffon de nettoyage en option. Essuyer chaque disque dans le sens des flèches. (fig. D)
 - Ne pas utiliser de solvants tels que de la benzine, du diluant, des produits de nettoyage vendus dans le commerce ou de vaporisateurs anti-statiques destinés aux disques analogiques.
- Il n'est pas possible d'utiliser les disques de formes spéciales (en forme de cœur ou octogonaux, etc.) avec cet appareil. Vous risquez d'endommager l'appareil. N'essayez jamais de lire ces disques.


- Remarques sur les disques**
 - Si vous utilisez les disques décrits ci-dessous, le résidu adhésif risque de provoquer l'arrêt de la rotation du disque et d'entraîner un dysfonctionnement ou d'endommager vos disques.
 - N'utilisez pas de CD de seconde main ou de location qui présentent des résidus adhésifs à la surface (par exemple d'étiquettes décollées ou d'encre, de colle dépassant de l'étiquette).
 - N'utilisez pas de CD de location avec d'anciennes étiquettes qui commencent à se décoller.
 - Les étiquettes qui commencent à se décoller laissent des résidus adhésifs. (fig. E)
 - N'utilisez pas vos disques avec des étiquettes ou des autocollants apposés dessus.
 - Les étiquettes sont fixées. (fig. G)

- Remarques sur les disques CD-R**
 - Vous pouvez écouter avec cet appareil des CD-R (CD enregistrables) conçus pour une utilisation audio. (fig. H)
 - Certains CD-R (en fonction des conditions de l'équipement d'enregistrement ou du disque) risquent de ne pas être lus avec cet appareil.
 - Vous ne pouvez pas lire de disques CD-R non finalisés*.

Hinweise zum Umgang mit CDs

- Eine verschmutzte oder beschädigte CD kann Tonaussetzer verursachen. Um optimale Klangqualität sicherzustellen, beachten Sie folgendes:
 - Manipulieren Sie die CD durch den Rand und halten Sie sie immer am Rand an, und berühren Sie nicht die Seite ohne Beschriftung. (Abb. A)
 - Kleben Sie weder Papier noch Klebeband auf die CD. (Abb. B)
 - Bewahren Sie CDs in ihrer Hülle oder in den CD-Magazinen auf, wenn Sie nicht abgespielt werden.
 - Schützen Sie die CD vor Sonnenlicht und Wärmequellen wie Warmluftauslässen. Lassen Sie sie nicht in einem Auto liegen, das direkt in der Sonne geparkt ist, da die Temperatur im Wageninneren sehr hoch ansteigen kann. (Abb. C)
 - Vor dem Abspielen reinigen Sie die CD mit einem im Handel erhältlichen Reinigungstuch, indem Sie in Pfeilrichtung über die Oberfläche wischen. (Abb. D)
- Lösungsmittel wie Benzol, Verdünnner sowie für Analogplatten bestimmte Reinigungsmittel und Antistatiksprays dürfen nicht verwendet werden.
- CDs mit außergewöhnlichen Formen (z. B. herzförmige oder achteckige CDs) können mit diesem Gerät nicht wiedergegeben werden. Falls Sie es doch versuchen, kann das Gerät beschädigt werden. Verwenden Sie solche CDs nicht.


- Hinweise zu CDs**
 - Wenn Sie die unten aufgeführten CDs verwenden, können Klebstoffrückstände dazu führen, daß die CD sich nicht mehr dreht, oder Fehlfunktionen oder Schäden an der CD verursachen.
 - Verwenden Sie keine gebrauchte gekaufte oder Leih-CDs mit klebrigen Rückständen auf der Oberfläche (z. B. von abgelösten Aufklebern, von Tinte oder von Klebstoff, der unter den Aufklebern hervorquillt).
 - Klebstoffrückstände, Tinte klebt. (Abb. E)
 - Verwenden Sie keine Leih-CDs mit alten Etiketten, die sich abzulösen beginnen.
 - Aufkleber, die sich zu lösen beginnen und Klebstoffrückstände hinterlassen. (Abb. E)
 - Verwenden Sie keine CDs, an denen Etiketten oder Aufkleber angebracht sind.
 - Angebrachte Etiketten. (Abb. G)
- Hinweise zu CD-Rs**
 - Mit diesem Gerät können Sie CD-Rs (beschreibbare CDs) wiedergeben lassen, die für den Einsatz als Tondatenträger konzipiert sind. (Abb. H)
 - Je nach dem Aufnahmegerät, mit dem die CD-R bespielt wurde, oder dem Zustand der CD-R selbst können einige CD-Rs mit diesem Gerät möglicherweise nicht wiedergegeben werden.
 - Eine noch nicht abgeschlossene CD-R kann nicht wiedergegeben werden*.

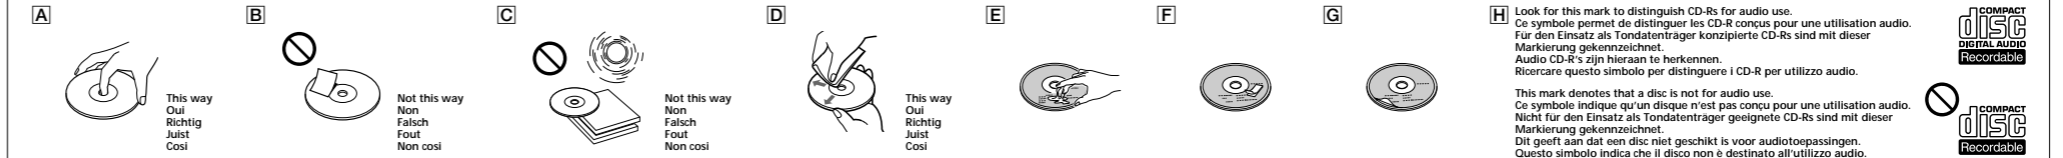


SECTION 2 DISASSEMBLY

Note: Follow the disassembly procedure in the numerical order given.


CASE (UPPER. T), FRONT PANEL ASSY

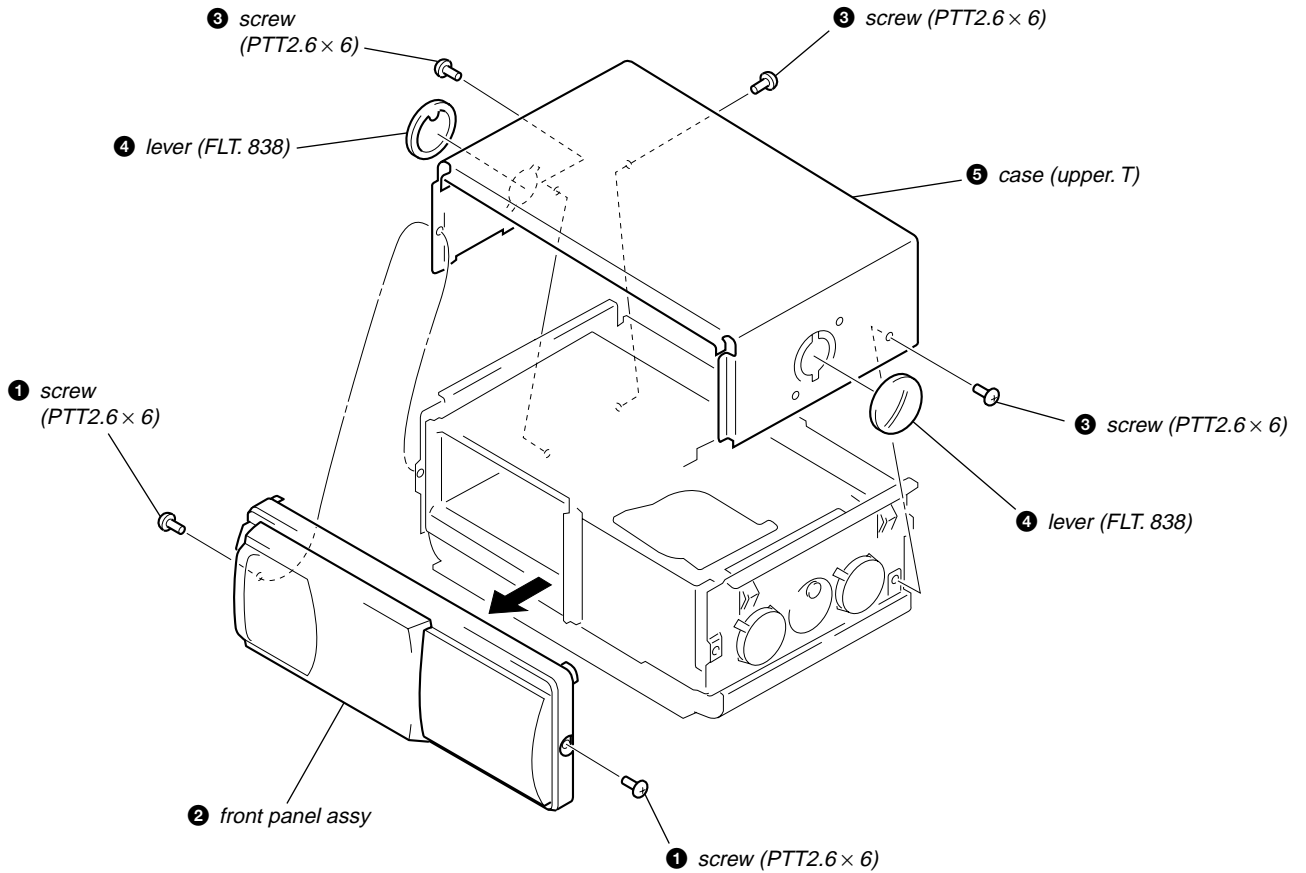



MECHANISM DECK (MG-251A-137)

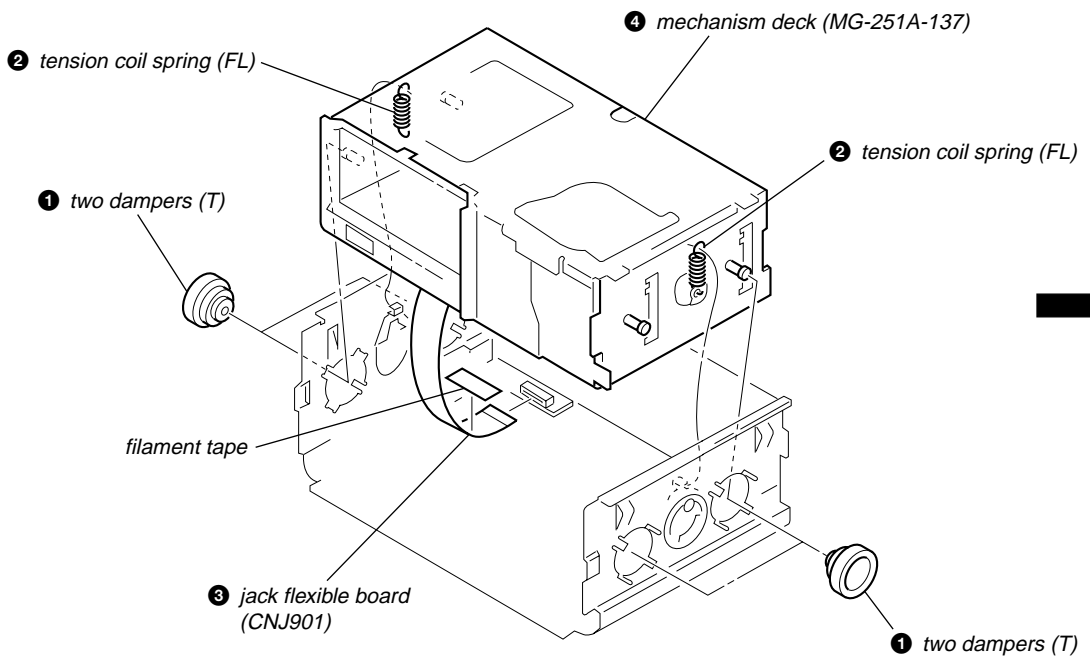



JACK BOARD

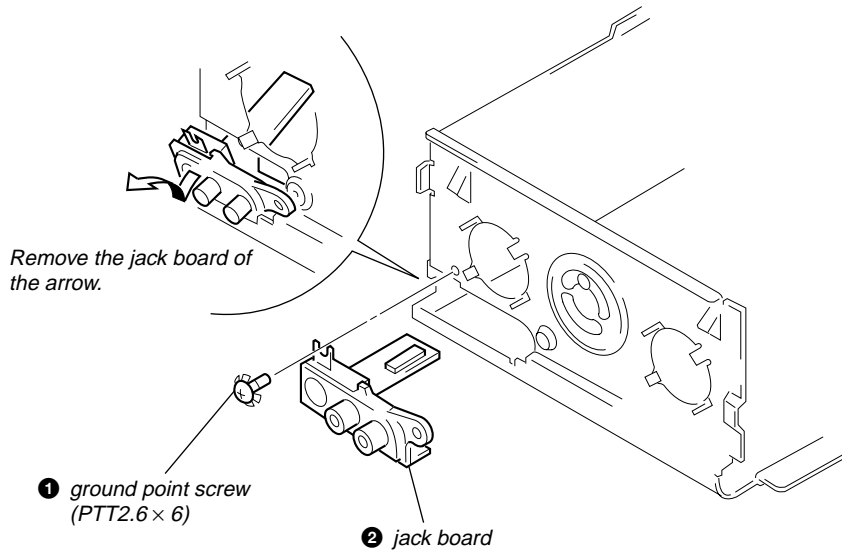


MAIN BOARD, SLIDE VARIABLE RESISTOR (ELEVATOR HEIGHT SENSOR) (RV202)

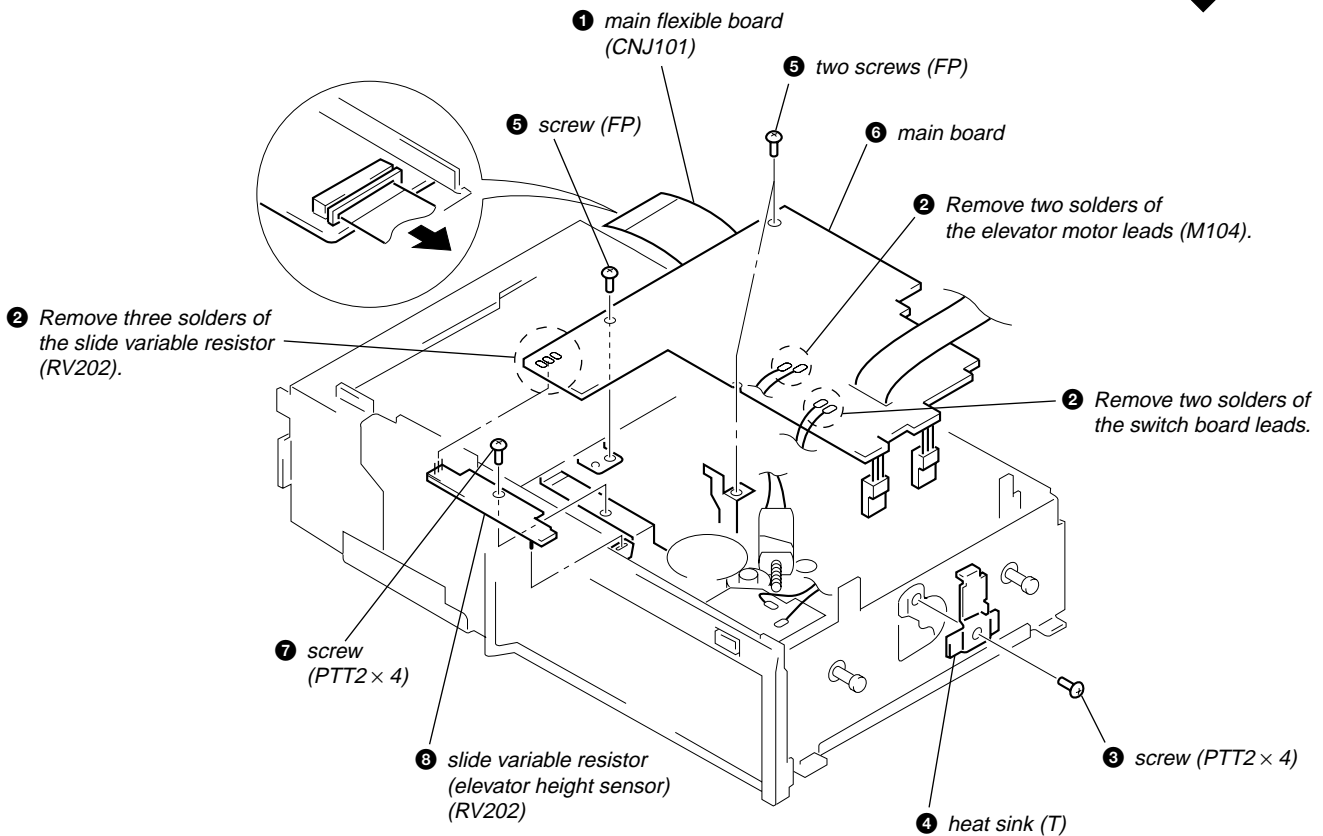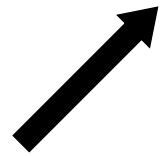


ELJ MOTOR ASSY (ELEVATOR) (M104)

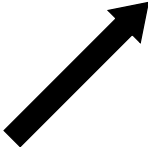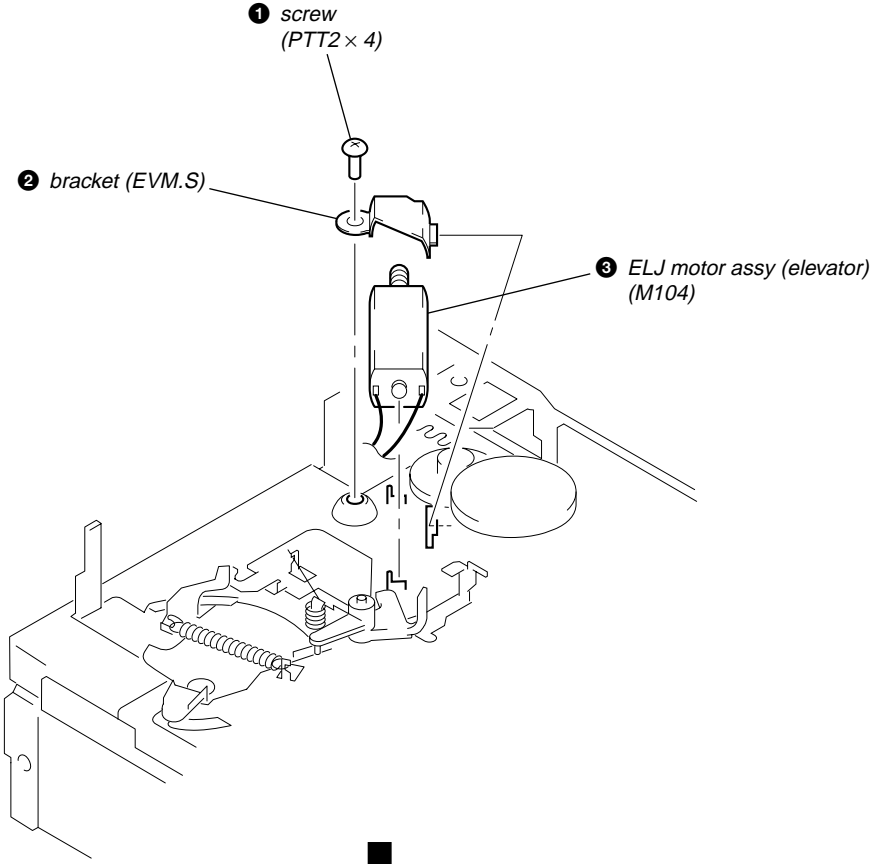


ESCUTCHEON (T)

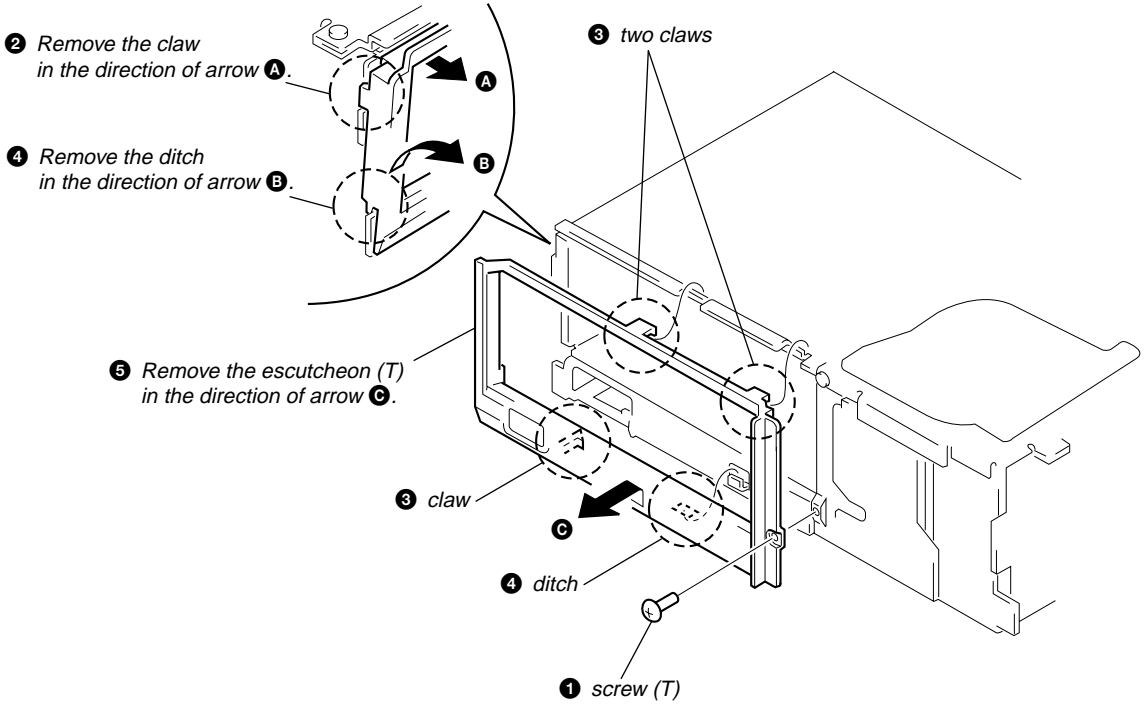


CHASSIS (U.S) SUB ASSY

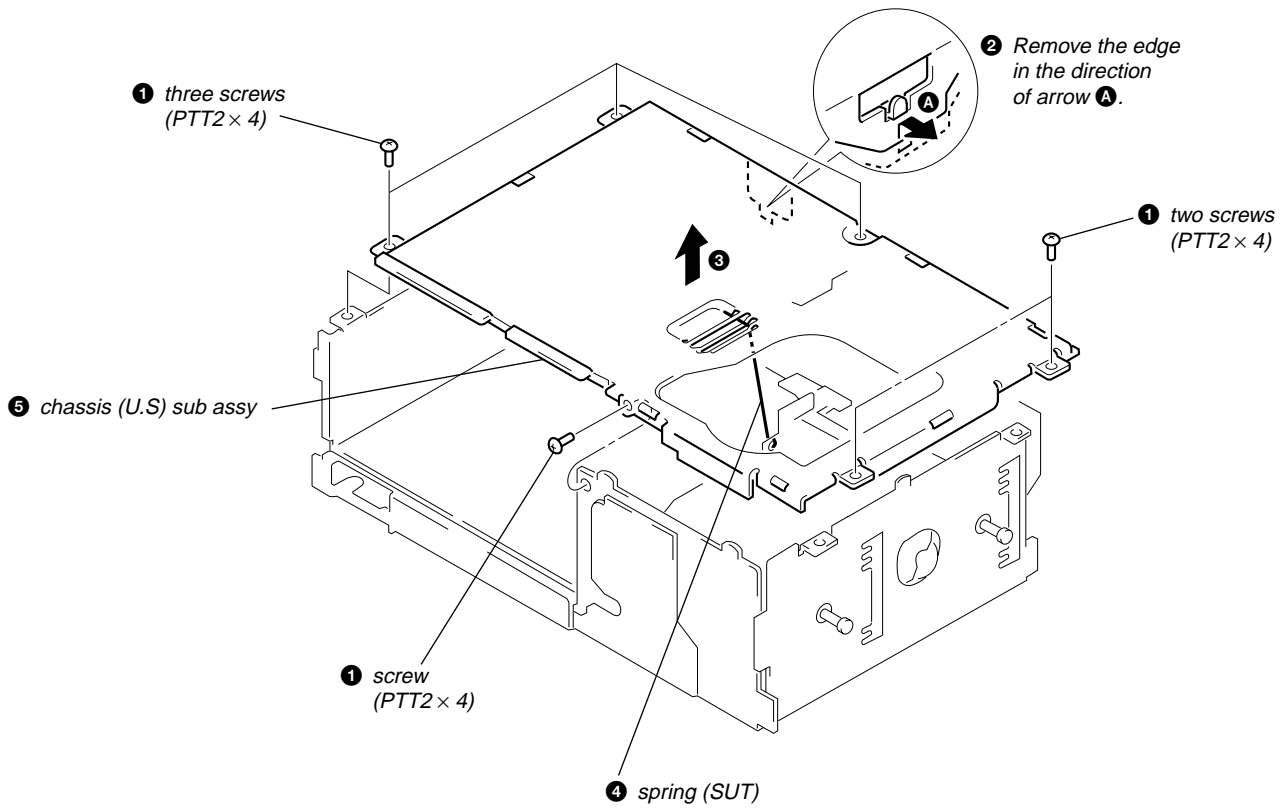


CHASSIS ASSY

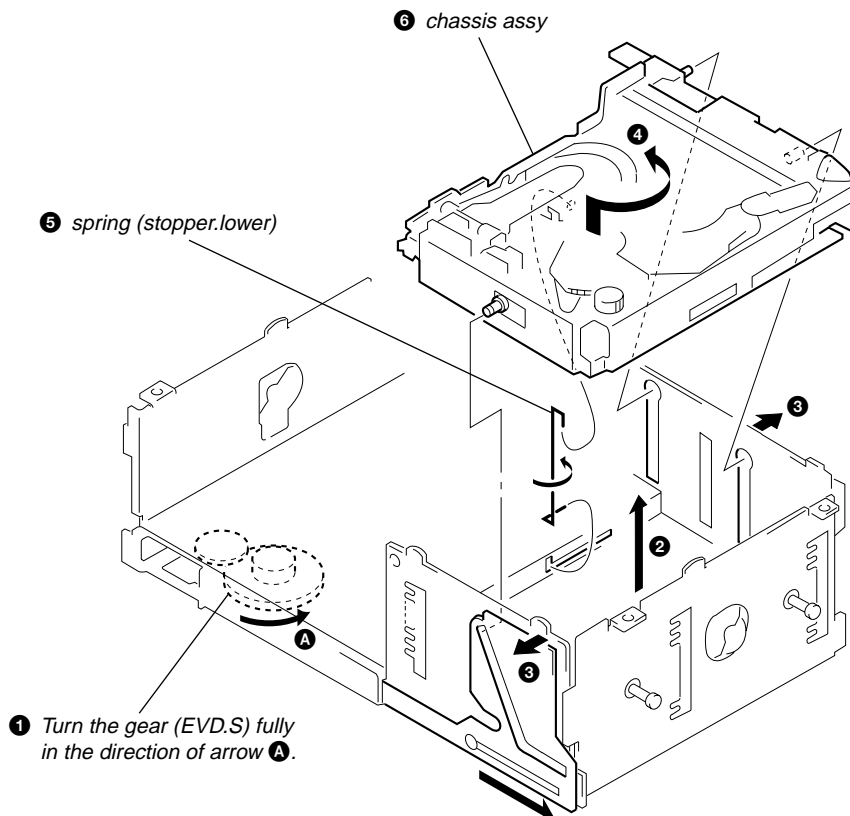


RF BOARD

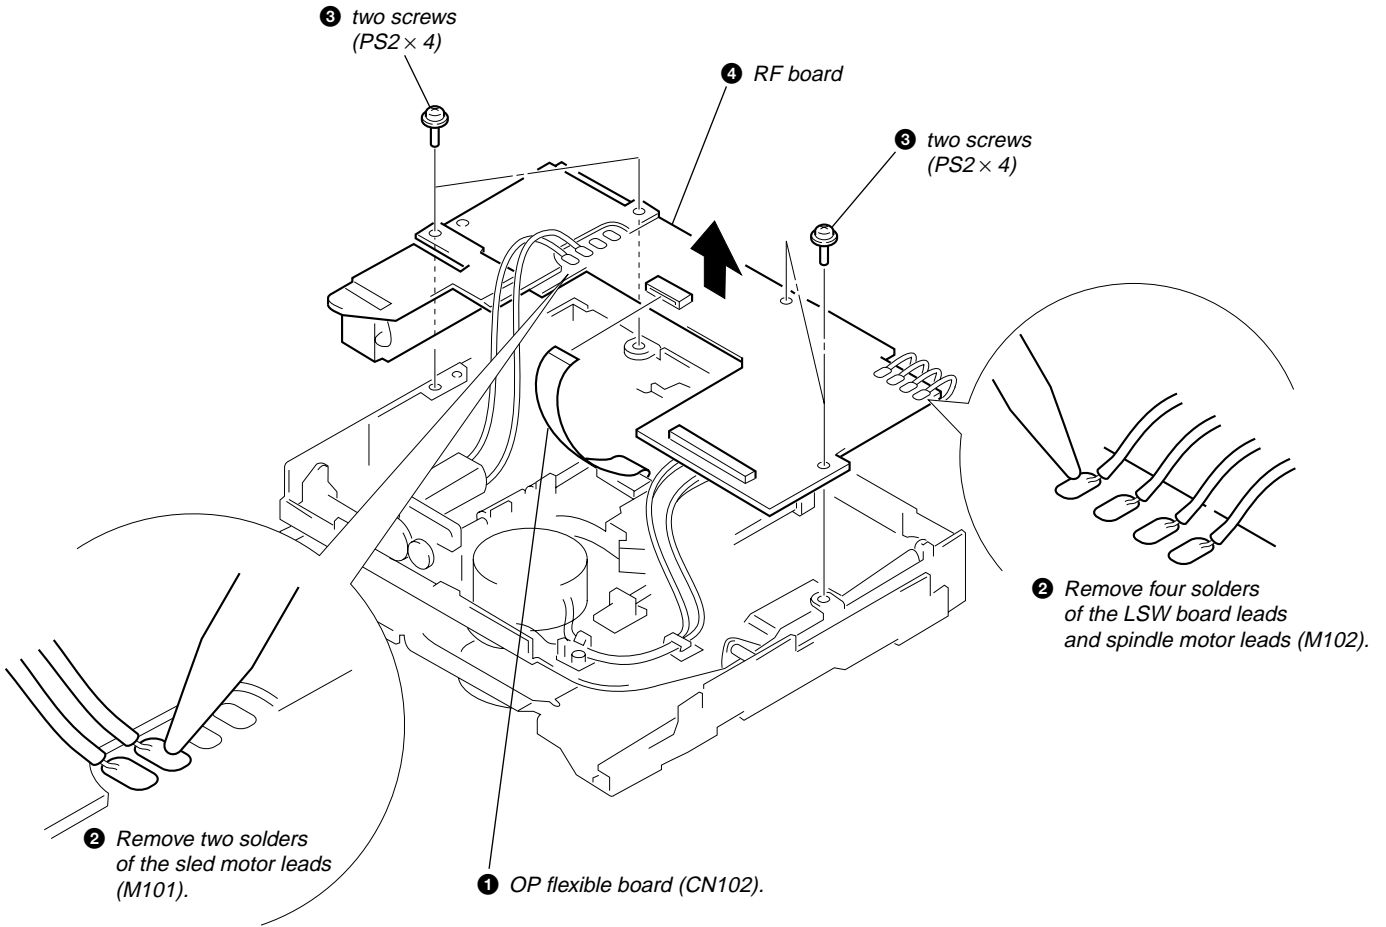


SLED MOTOR ASSY (251) (M101), OPTICAL PICK-UP (KSS-720A/Q-N)

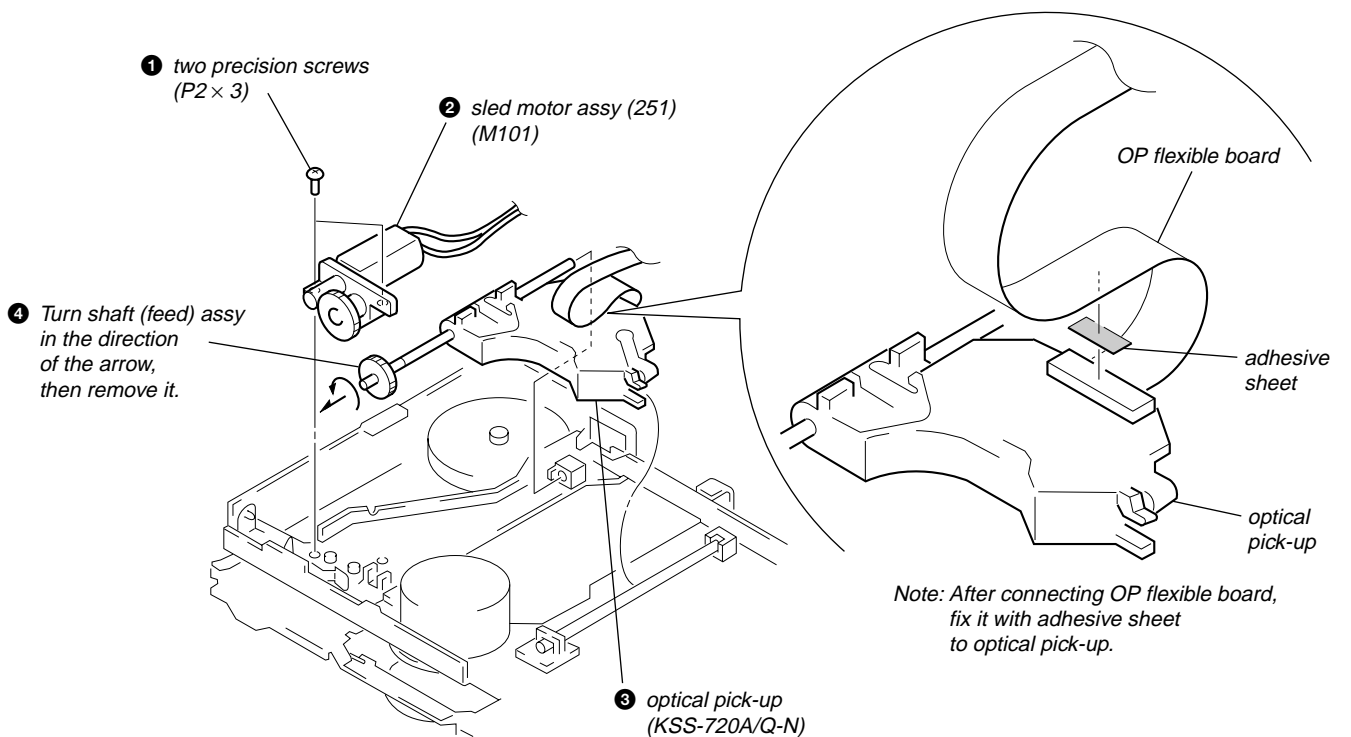

LSW BOARD, SPINDLE MOTOR (S) SUB ASSY (M102)

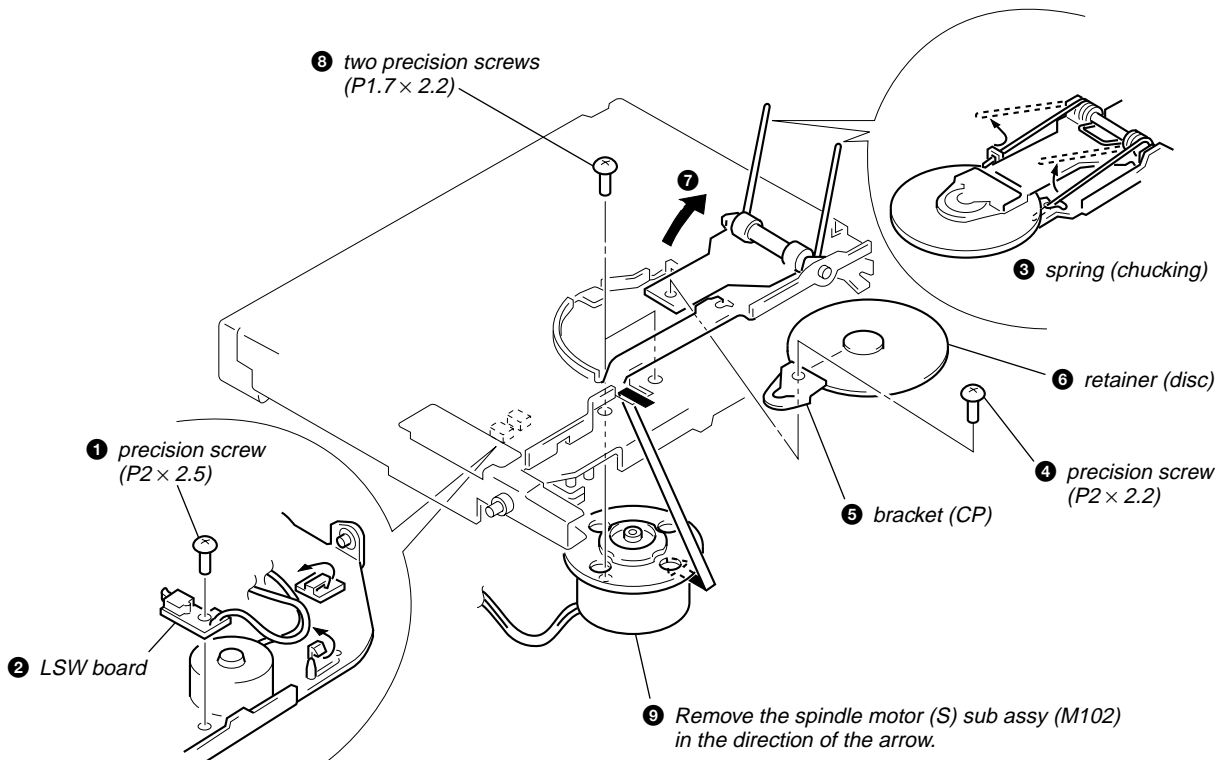


ELJ MOTOR ASSY (CHUCKING) (M103)

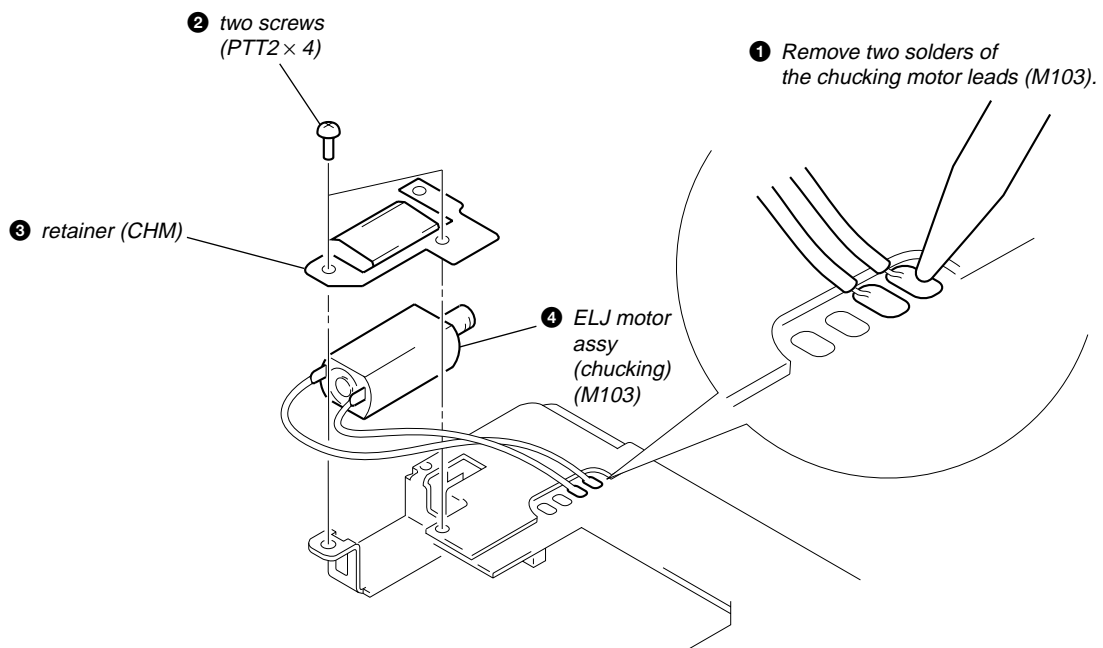


SECTION 3 MECHANISM DECK ASSEMBLY

Note: Follow the assembly procedure in the numerical order given.

OPTICAL PICK-UP COMPLETE ASSY

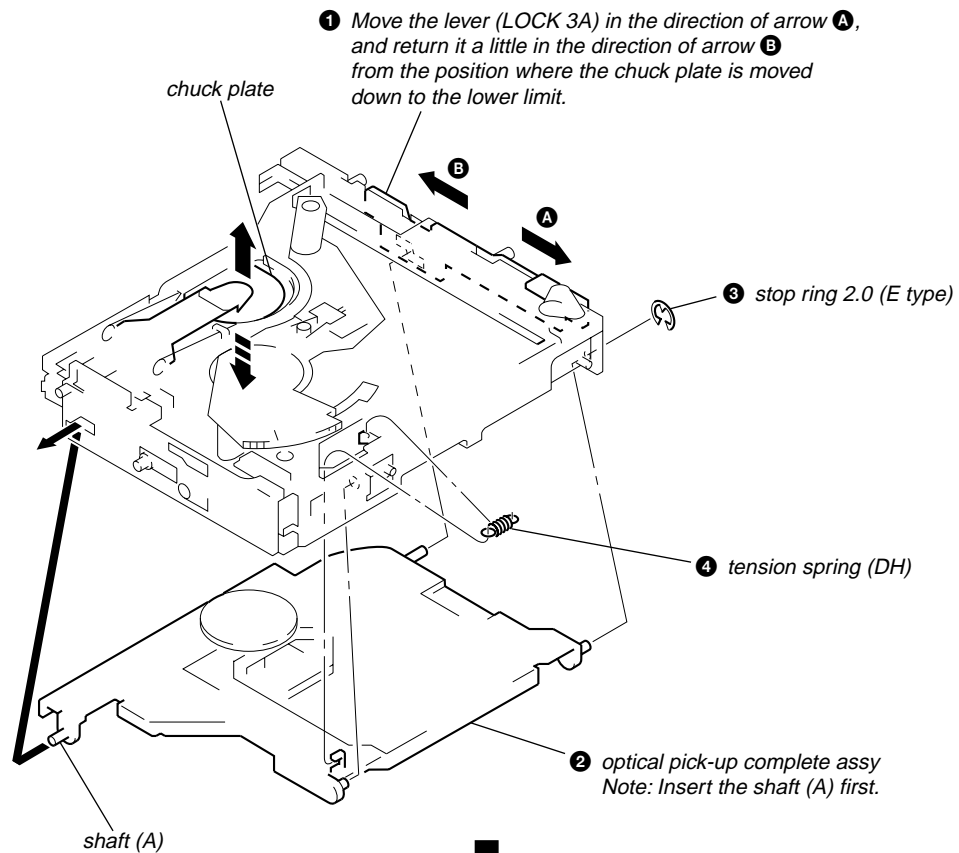


GEAR (LOMINI)/(LOAD CAM) ASSY

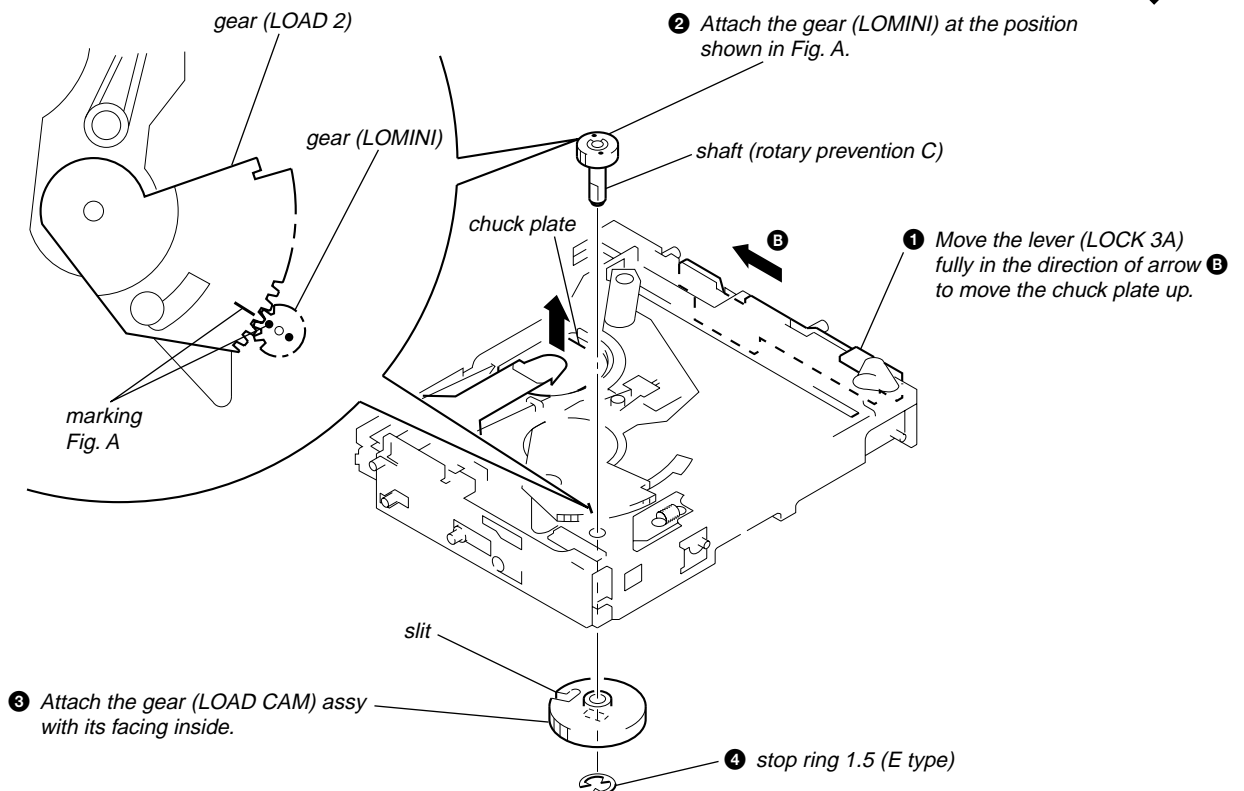

OPERATION CHECK

- 1 Confirm that the slider moves in the direction of arrow **C** to move down the chuck plate if the gear (LOAD CAM) is rotated in the direction of arrow **A** or the chuck plate moves up and the slider moves in the direction of arrow **D** if the gear is rotated in the direction of arrow **B**.

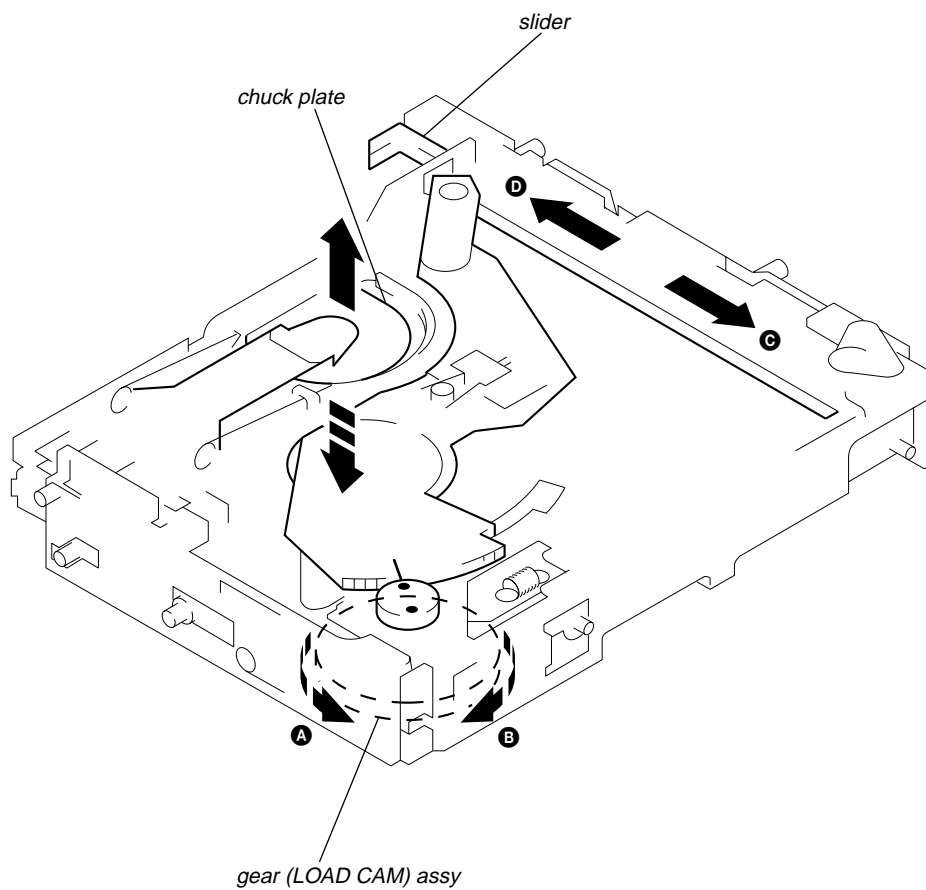


SECTION 4 MECHANICAL ADJUSTMENT

• Elevator Height (Address) Adjustment


Note: This adjustments is necessary when the system controller (IC201), variable resistor (RV201), slider (R), slider (L), or chassis (ELV) was replaced for any repair.

Connection:

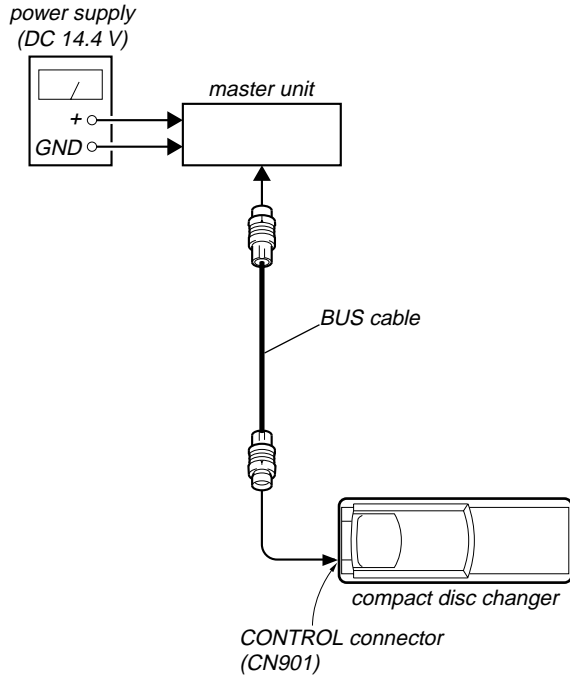

Adjustment Method:

1. Connect this set to the master unit (e.g. MDX-C7970/C7970R), load a disc magazine, and place the set vertically as shown below.
2. Connect the regulated power supply to the master unit, and turn the power on.
3. Press the DISC button on the master unit and select DISC 5.
4. At this time, if the elevator shaft does not position between comb teeth A and B at addresses 5 and 6 as shown below, adjust the following.
5. Press repeatedly the DISC + and – buttons on the master unit so that the elevator shafts moves from address 6 to address 5, or from 5 to 6. At this time, adjust RV201 on the main board so that the elevator shaft positions smoothly between comb teeth A and B.
6. Further, place the set horizontally and make same adjustment as mentioned above.
7. After adjustment at addresses 5 to 6 is finished, check all operations from addresses 1 to 10 with the set placed vertically and horizontally respectively to confirm that the elevator shaft positions in a range between comb teeth A to B.

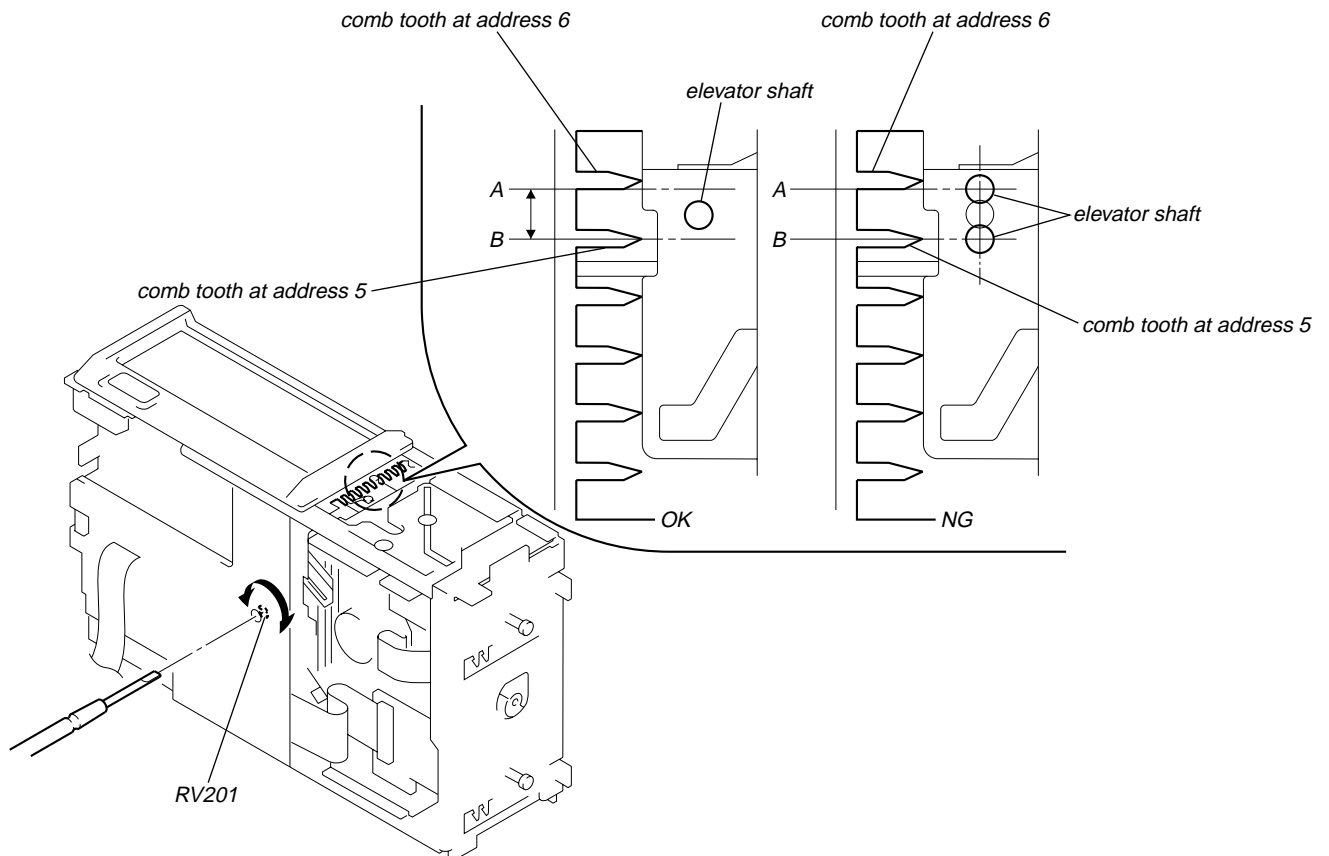


SECTION 5 ELECTRICAL CHECK

Note:

1. This check is performed with the set placed horizontally.
2. Power supply voltage: DC14.4 V (more than 3 A).
3. Be sure to use the disc "YEDS-18" parts code: 3-702-101-01, but only when indicated.


Connection:

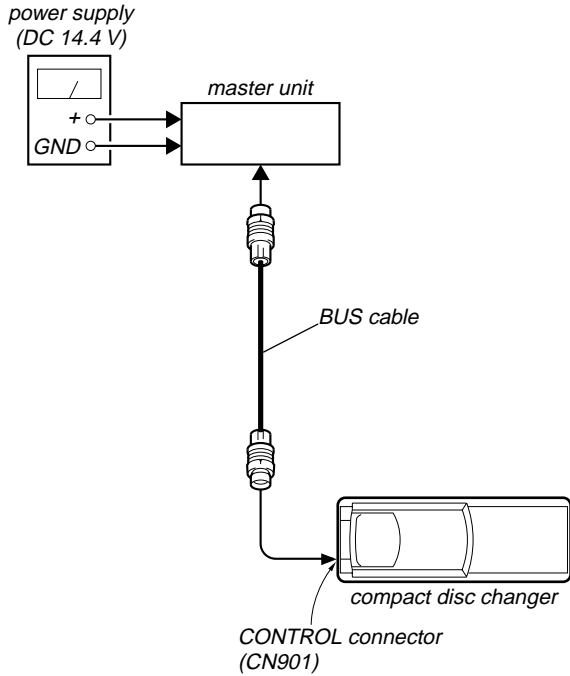

Focus Bias Check

Connection:

– RF Board (Component Side) –

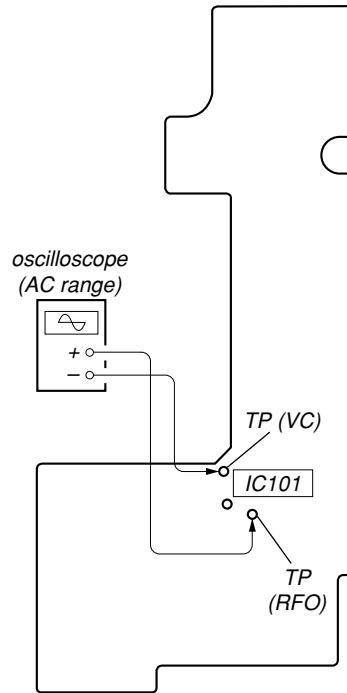


Procedure:

1. Connect the oscilloscope to TP (RFO) and TP (VC) on the RF board.
2. Put the set into play mode by loading the disc (YEDS-18).
3. Confirm that oscilloscope waveform is clear and check RF signal level is correct or not.

Note:

Clear RF signal waveform means that the shape "∩" can be clearly distinguished at the center of the waveform.

RF signal waveform

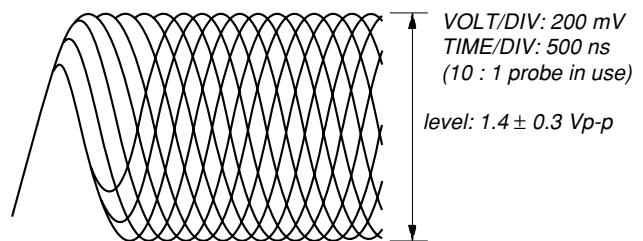


When observing the eye pattern, set the oscilloscope to AC range and raise the vertical sensitivity so that it may be easily seen.



Tracking Offset Check

Connection:

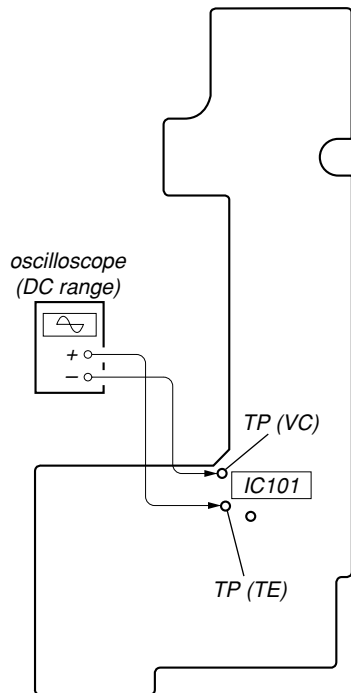– RF Board (Component Side) –




Procedure:

1. Connect the oscilloscope to TP (TE) and TP (VC) on the RF board.
2. Put the set into play mode by loading the disc (YEDS-18).
3. Press the ,  buttons on the master unit, and check the traverse waveform*.
4. Confirm that the oscilloscope waveform is symmetrical on the top and bottom in relation to 0 V dc, and check this level.

* Traverse waveform: This is the tracking error wave form appears when crossing the track.


Traverse waveform

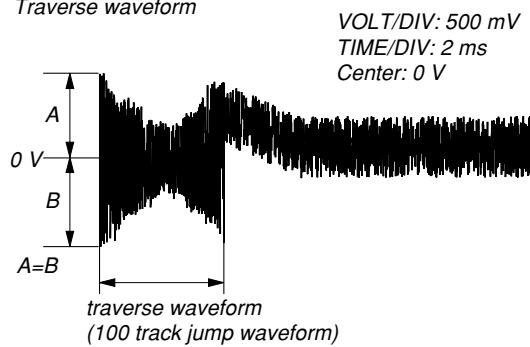

MEMO


SECTION 6
DIAGRAMS

6-1. BLOCK DIAGRAM – MAIN Section –

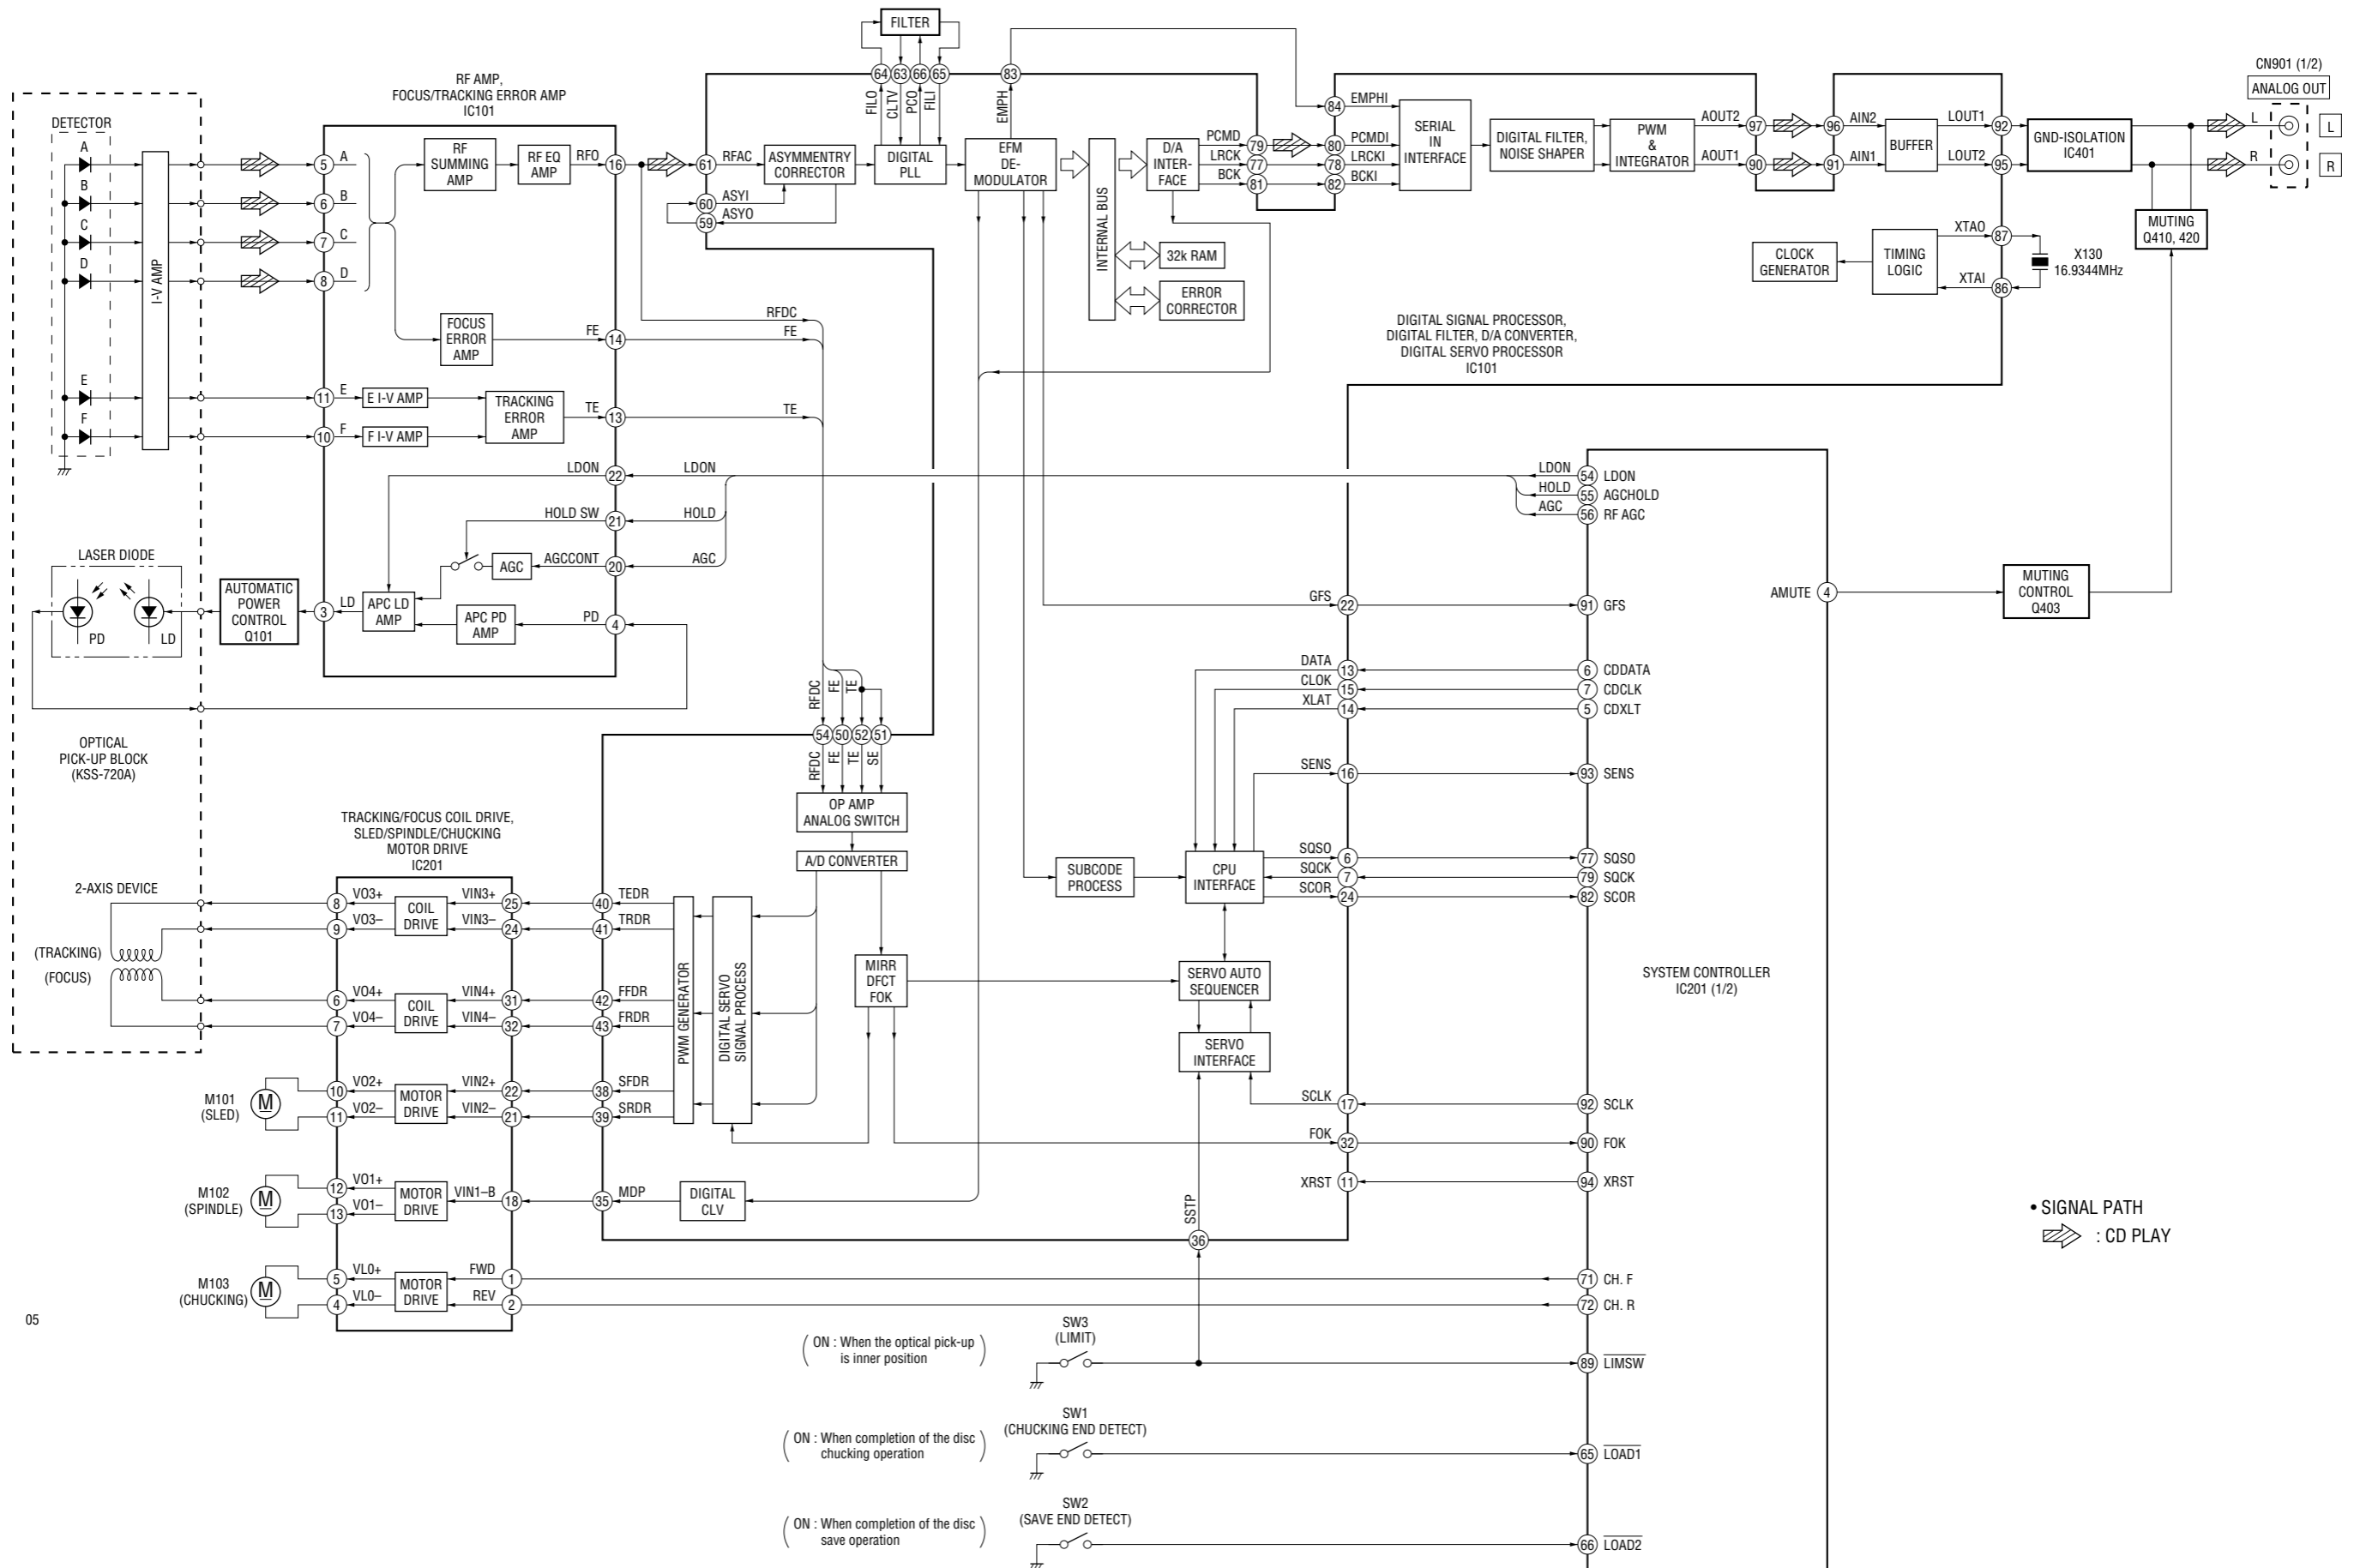

05

6-2. BLOCK DIAGRAM – BUS CONTROL/POWER SUPPLY Section –

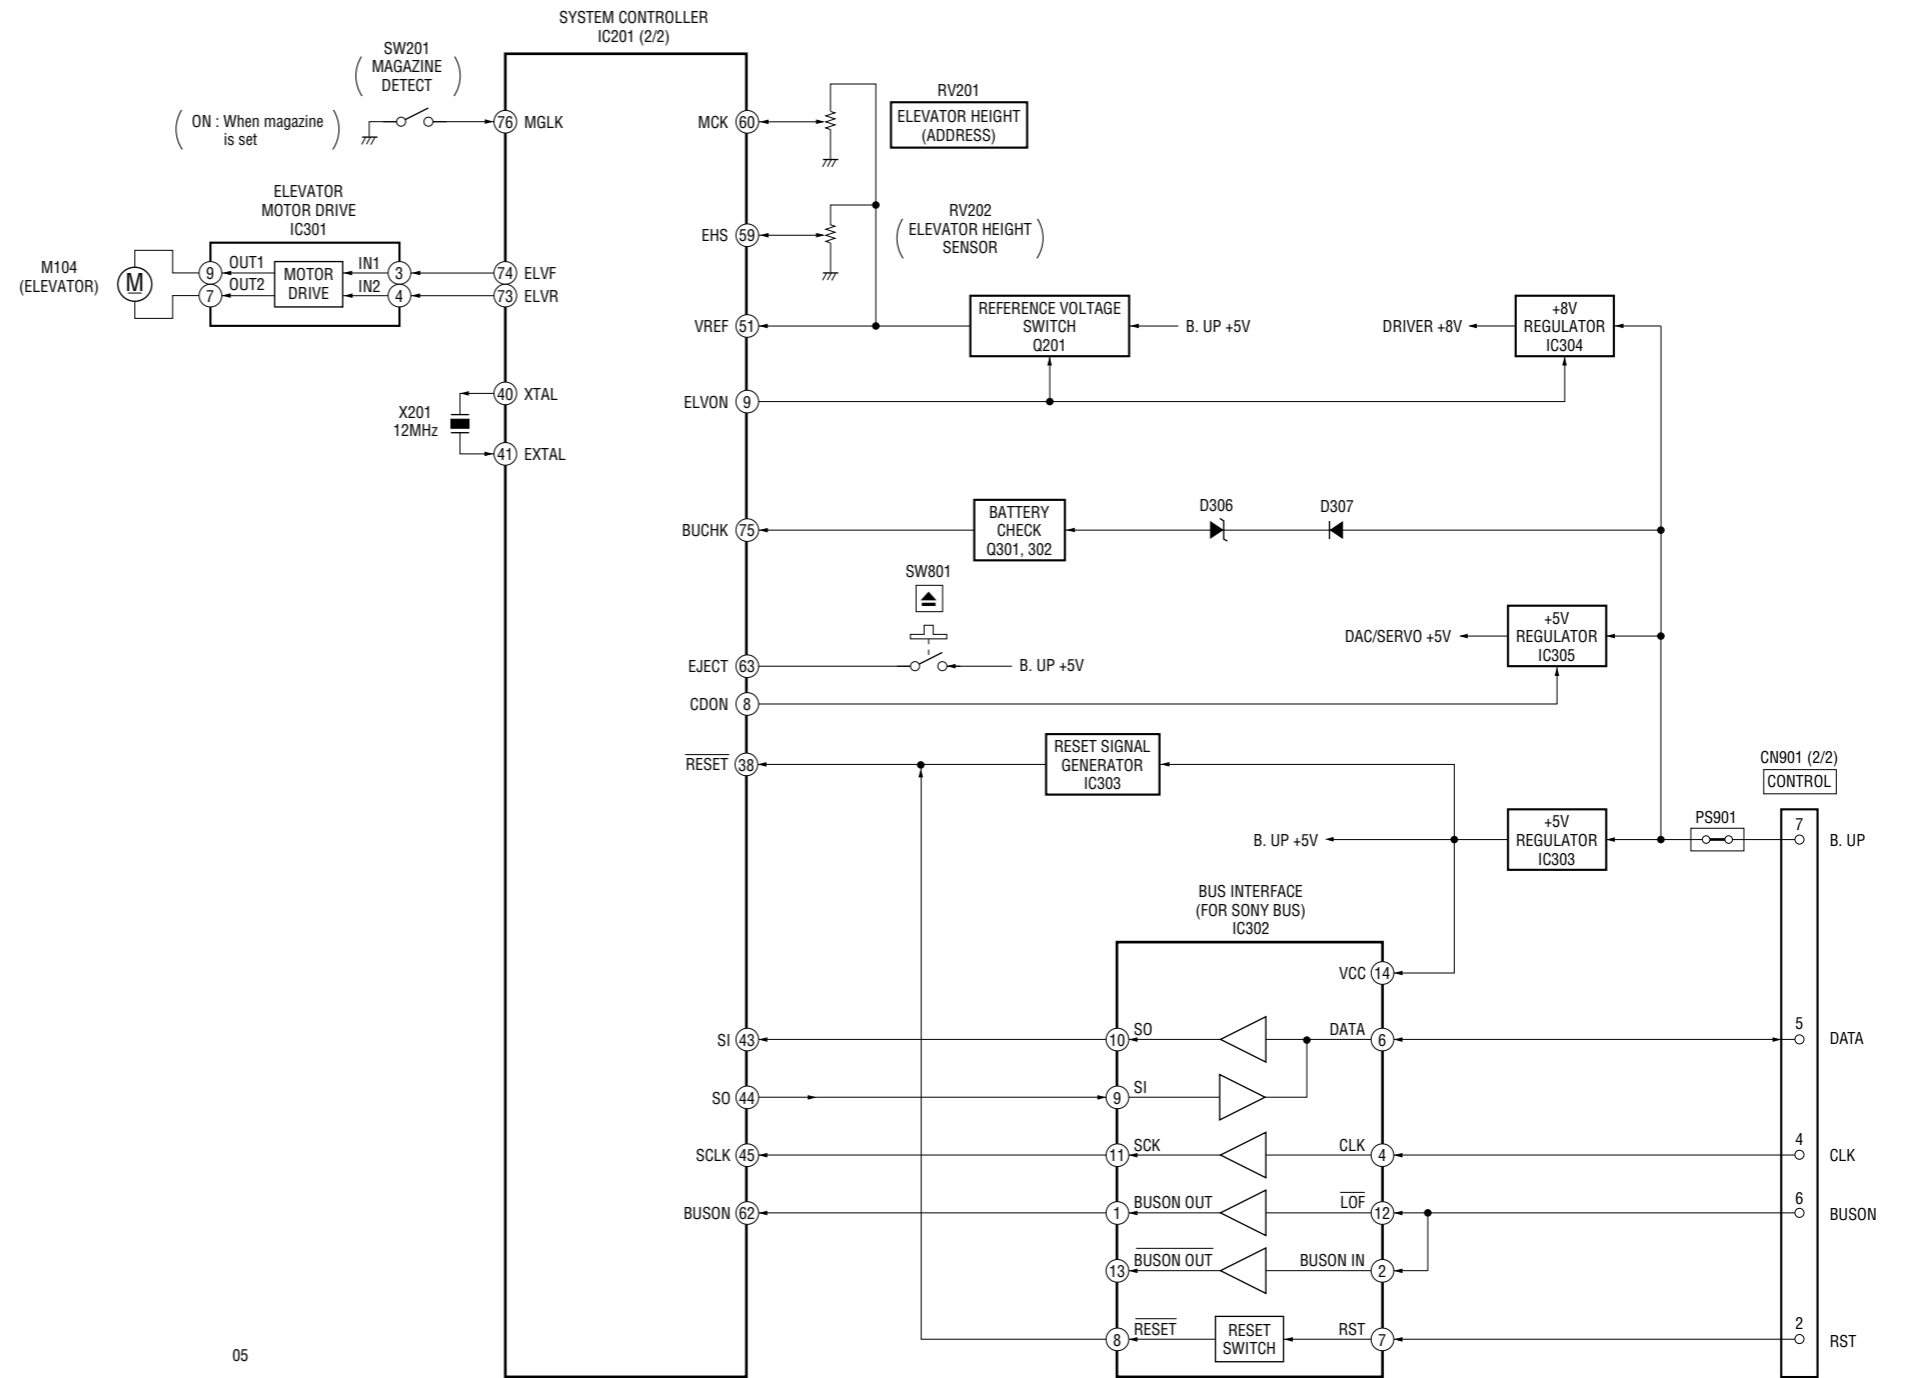

05

6-3. NOTE FOR PRINTED WIRING BOARDS AND SCHEMATIC DIAGRAMS

Note on Printed Wiring Boards:

- : parts extracted from the component side.
- : parts extracted from the conductor side.
- △ : internal component.
- ▨ : Pattern from the side which enables seeing.
(The other layers' patterns are not indicated.)

Caution:

Pattern face side:	Parts on the pattern face side seen from the pattern face are indicated.
Parts face side:	Parts on the parts face side seen from the parts face are indicated.

Note on Schematic Diagram:

- All capacitors are in μF unless otherwise noted. pF: μpF 50 WV or less are not indicated except for electrolytics and tantalums.
- All resistors are in Ω and $1/4\text{W}$ or less unless otherwise specified.
- △ : internal component.
- : panel designation.

Note:


The components identified by mark △ or dotted line with mark △ are critical for safety. Replace only with part number specified.

Note:

Les composants identifiés par une marque △ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

- + : B+ Line.
- : adjustment for repair.
- Power voltage is dc 14.4V and fed with regulated dc power supply from CD changer controller.
- Voltages and waveforms are dc with respect to ground under no-signal conditions.
no mark : CD PLAY
* : Impossible to measure
- Voltages are taken with a VOM (Input impedance 10 M Ω). Voltage variations may be noted due to normal production tolerances.
- Waveforms are taken with a oscilloscope. Voltage variations may be noted due to normal production tolerances.
- Circled numbers refer to waveforms.
- Signal path.
⇒ : CD PLAY

• Circuit Boards Location

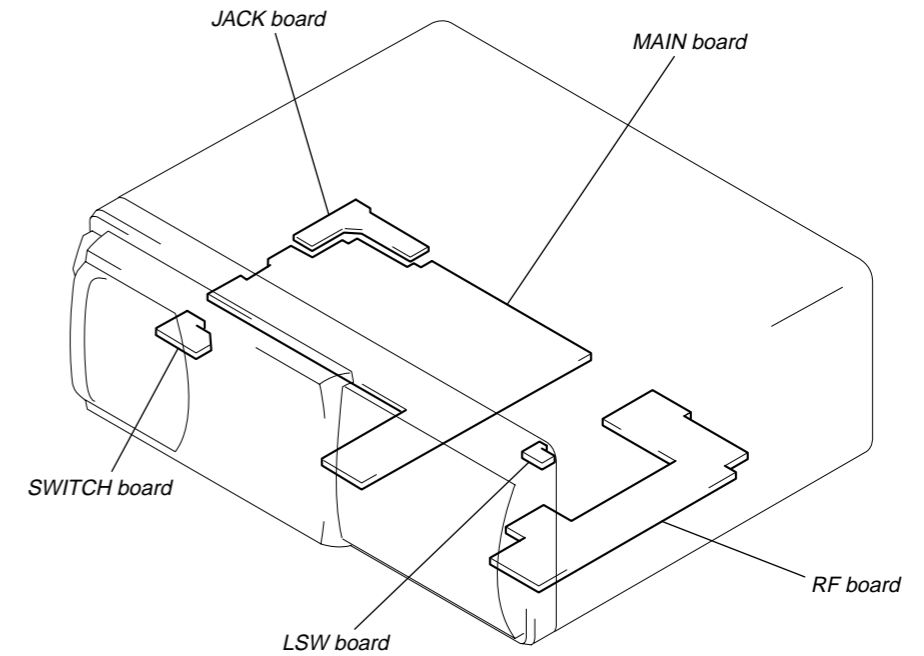



CDX-646/646X


6-4. PRINTED WIRING BOARDS – LSW/RF Boards –

• See page 19 for Circuit Boards Location.

• **Semiconductor Location – RF Board – (Component Side)**

Ref. No.	Location
IC101	H-4
IC201	I-3
Q101	F-4

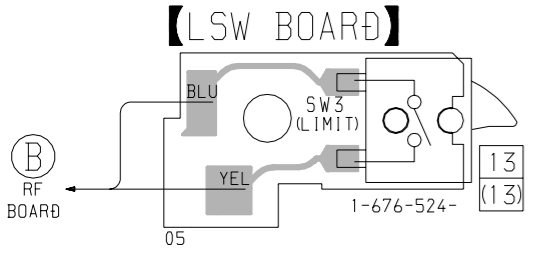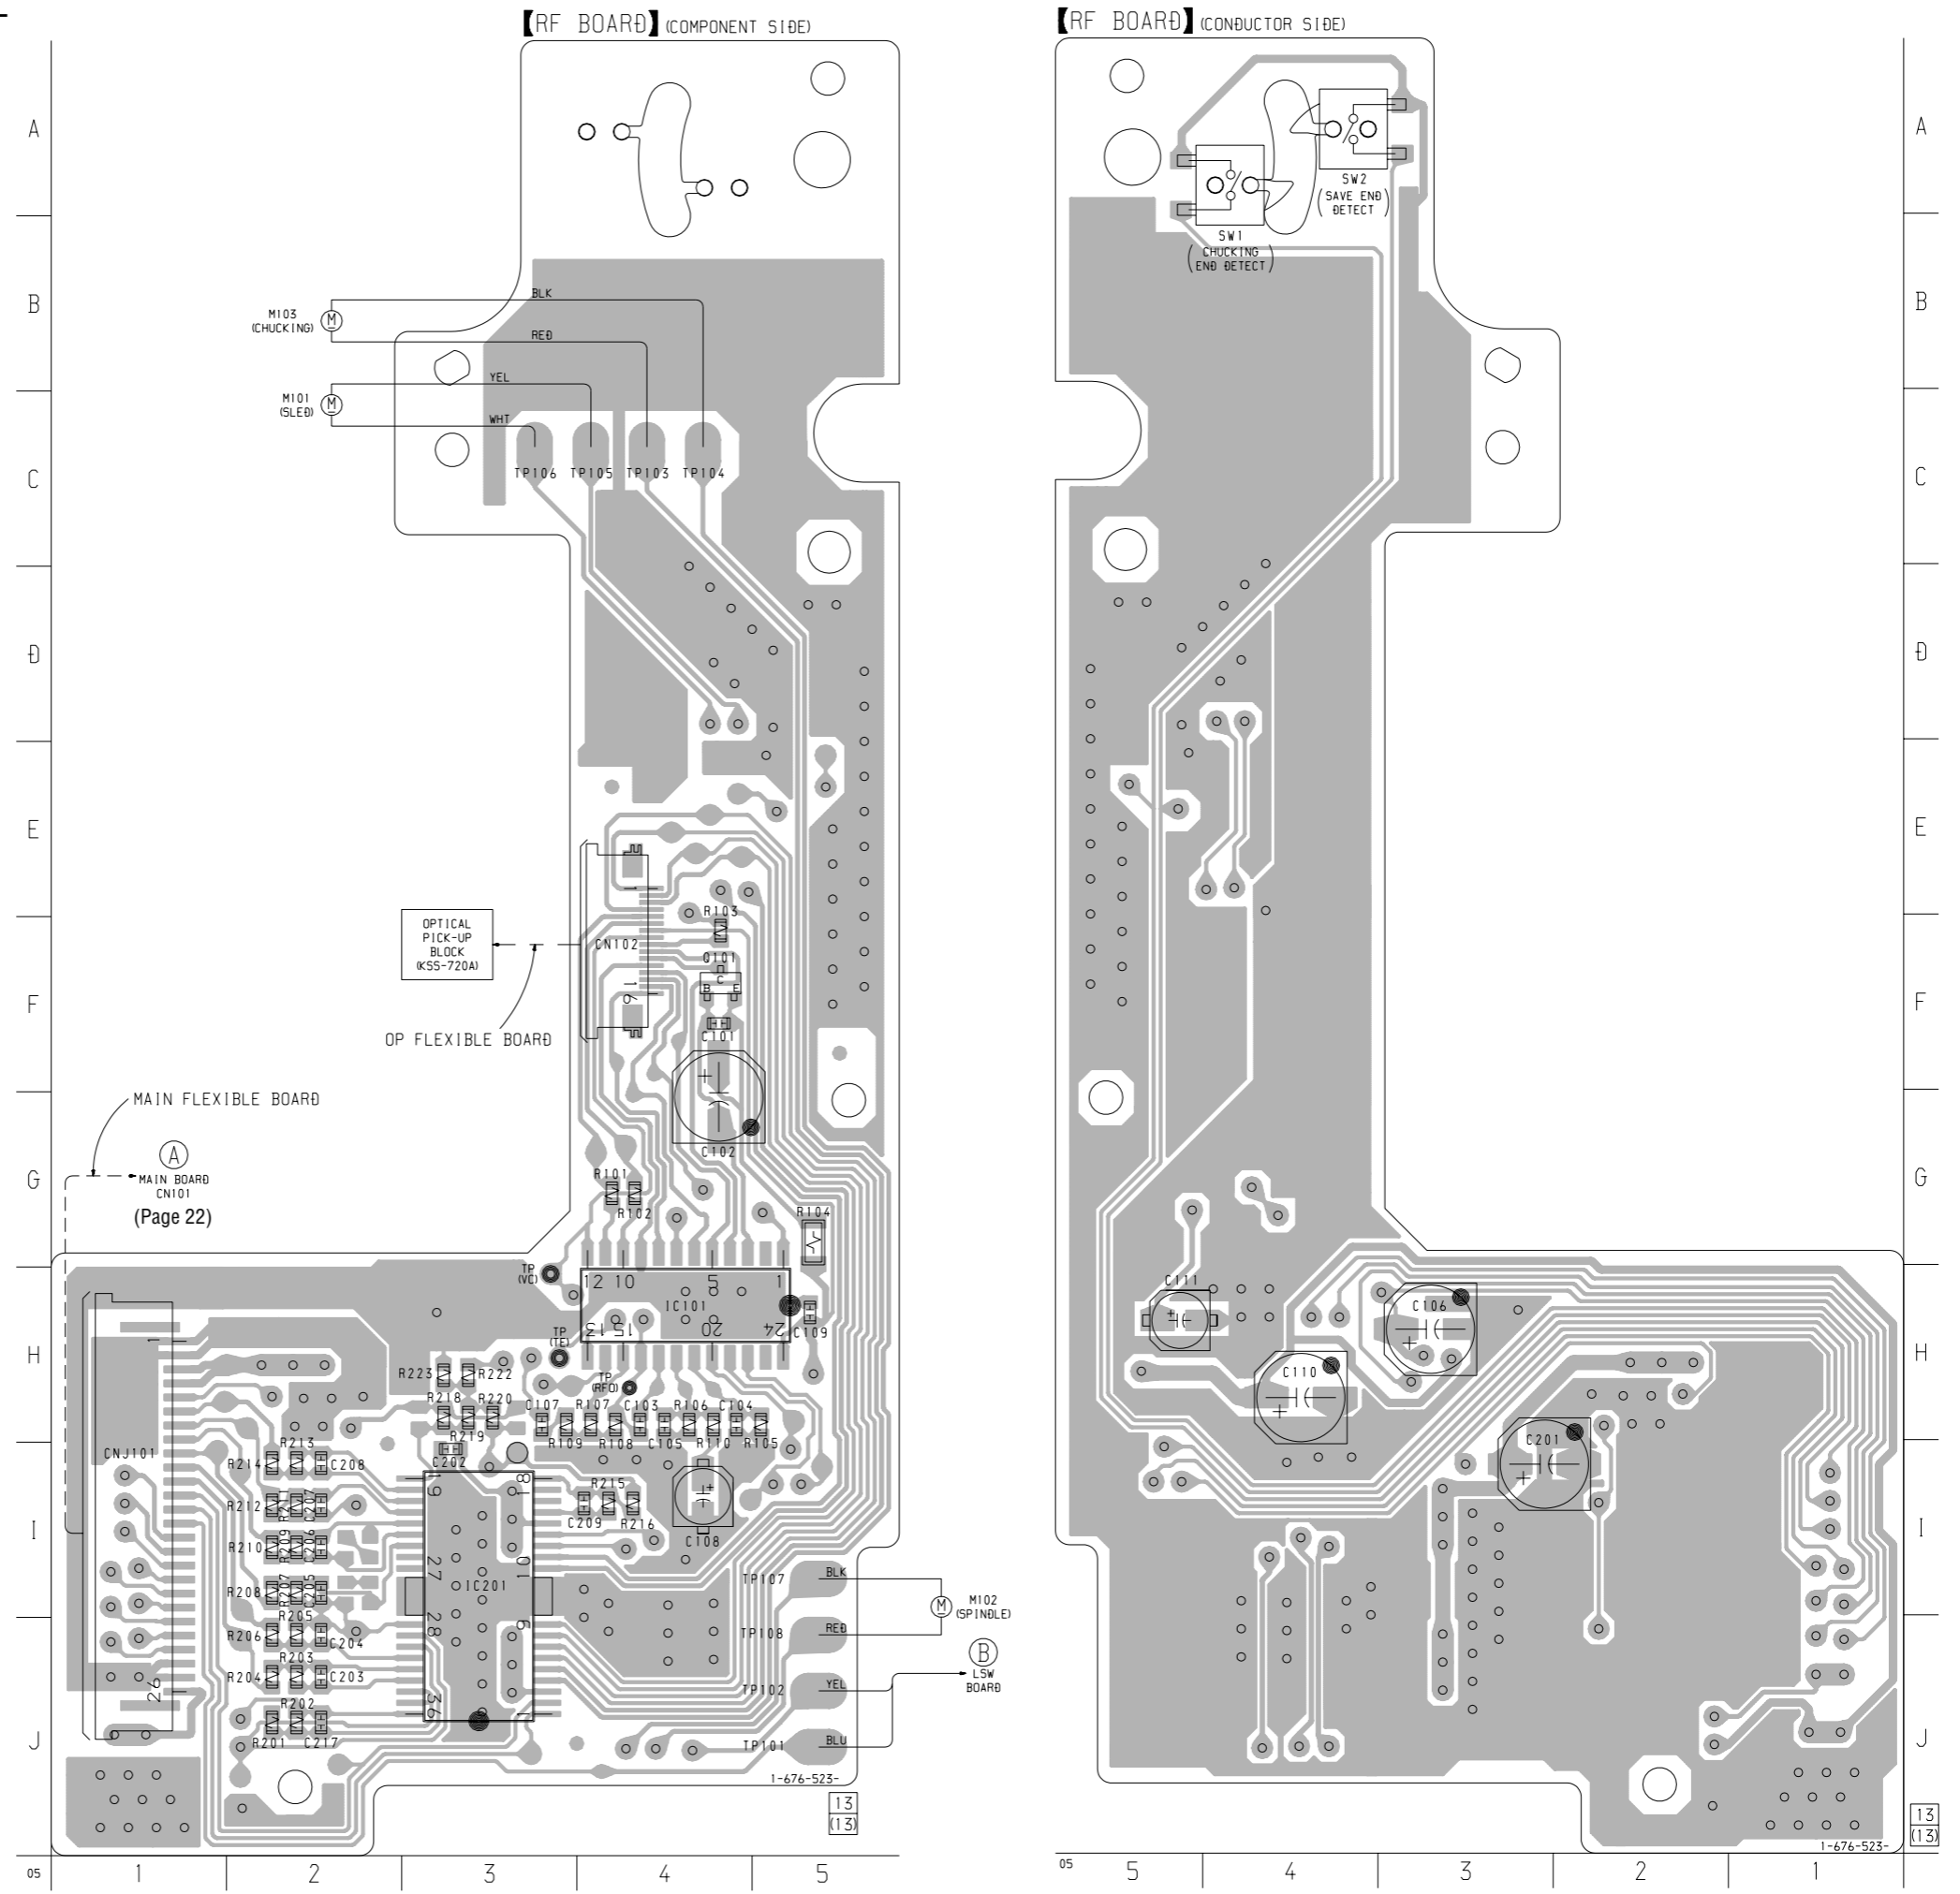

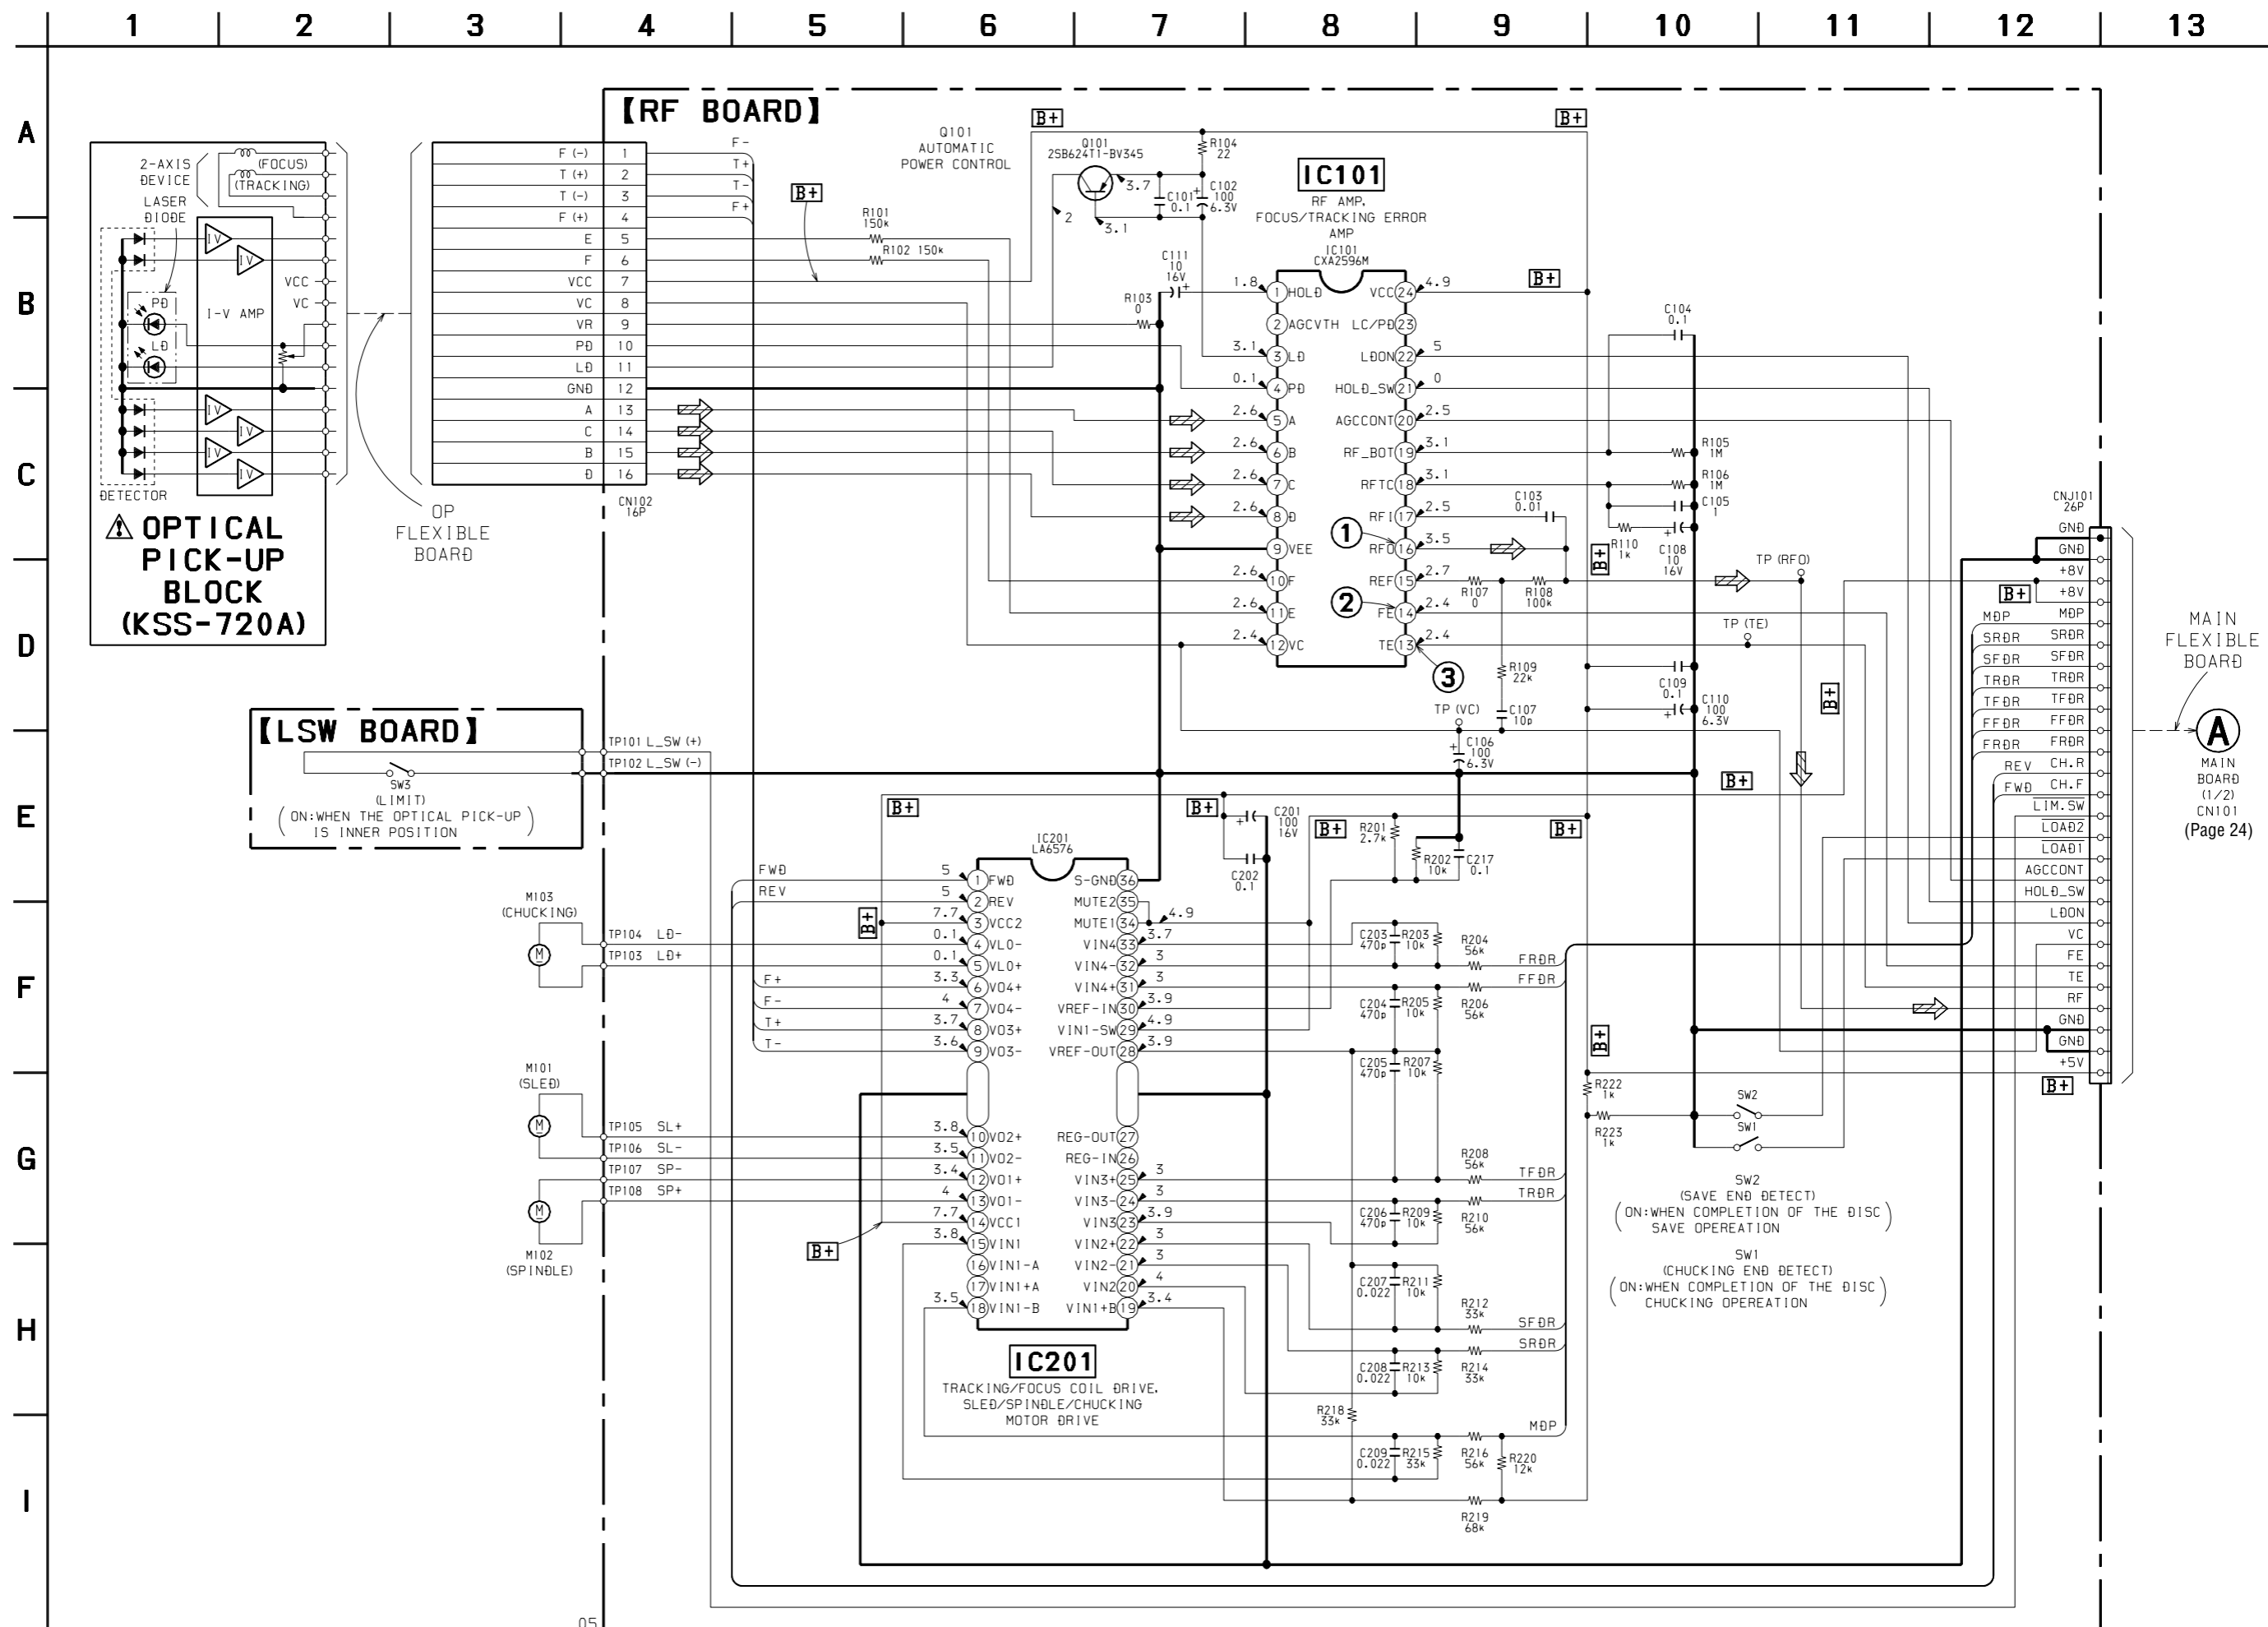


The components identified by mark Δ or dotted line with mark Δ are critical for safety. Replace only with part number specified.


Les composants identifiés par une marque Δ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

• Semiconductor Location

Ref. No.	Location
D302	D-2
D303	D-3
D306	F-4
D307	F-4
D309	F-4
D310	F-3
D313	D-3
D314	C-3
D315	C-3
IC101	C-8
IC201	E-8
IC301	G-3
IC302	D-3
IC303	F-3
IC401	C-6
Q201	E-10
Q301	F-5
Q302	F-5
Q303	F-4
Q403	E-5
Q410	D-5
Q420	D-5

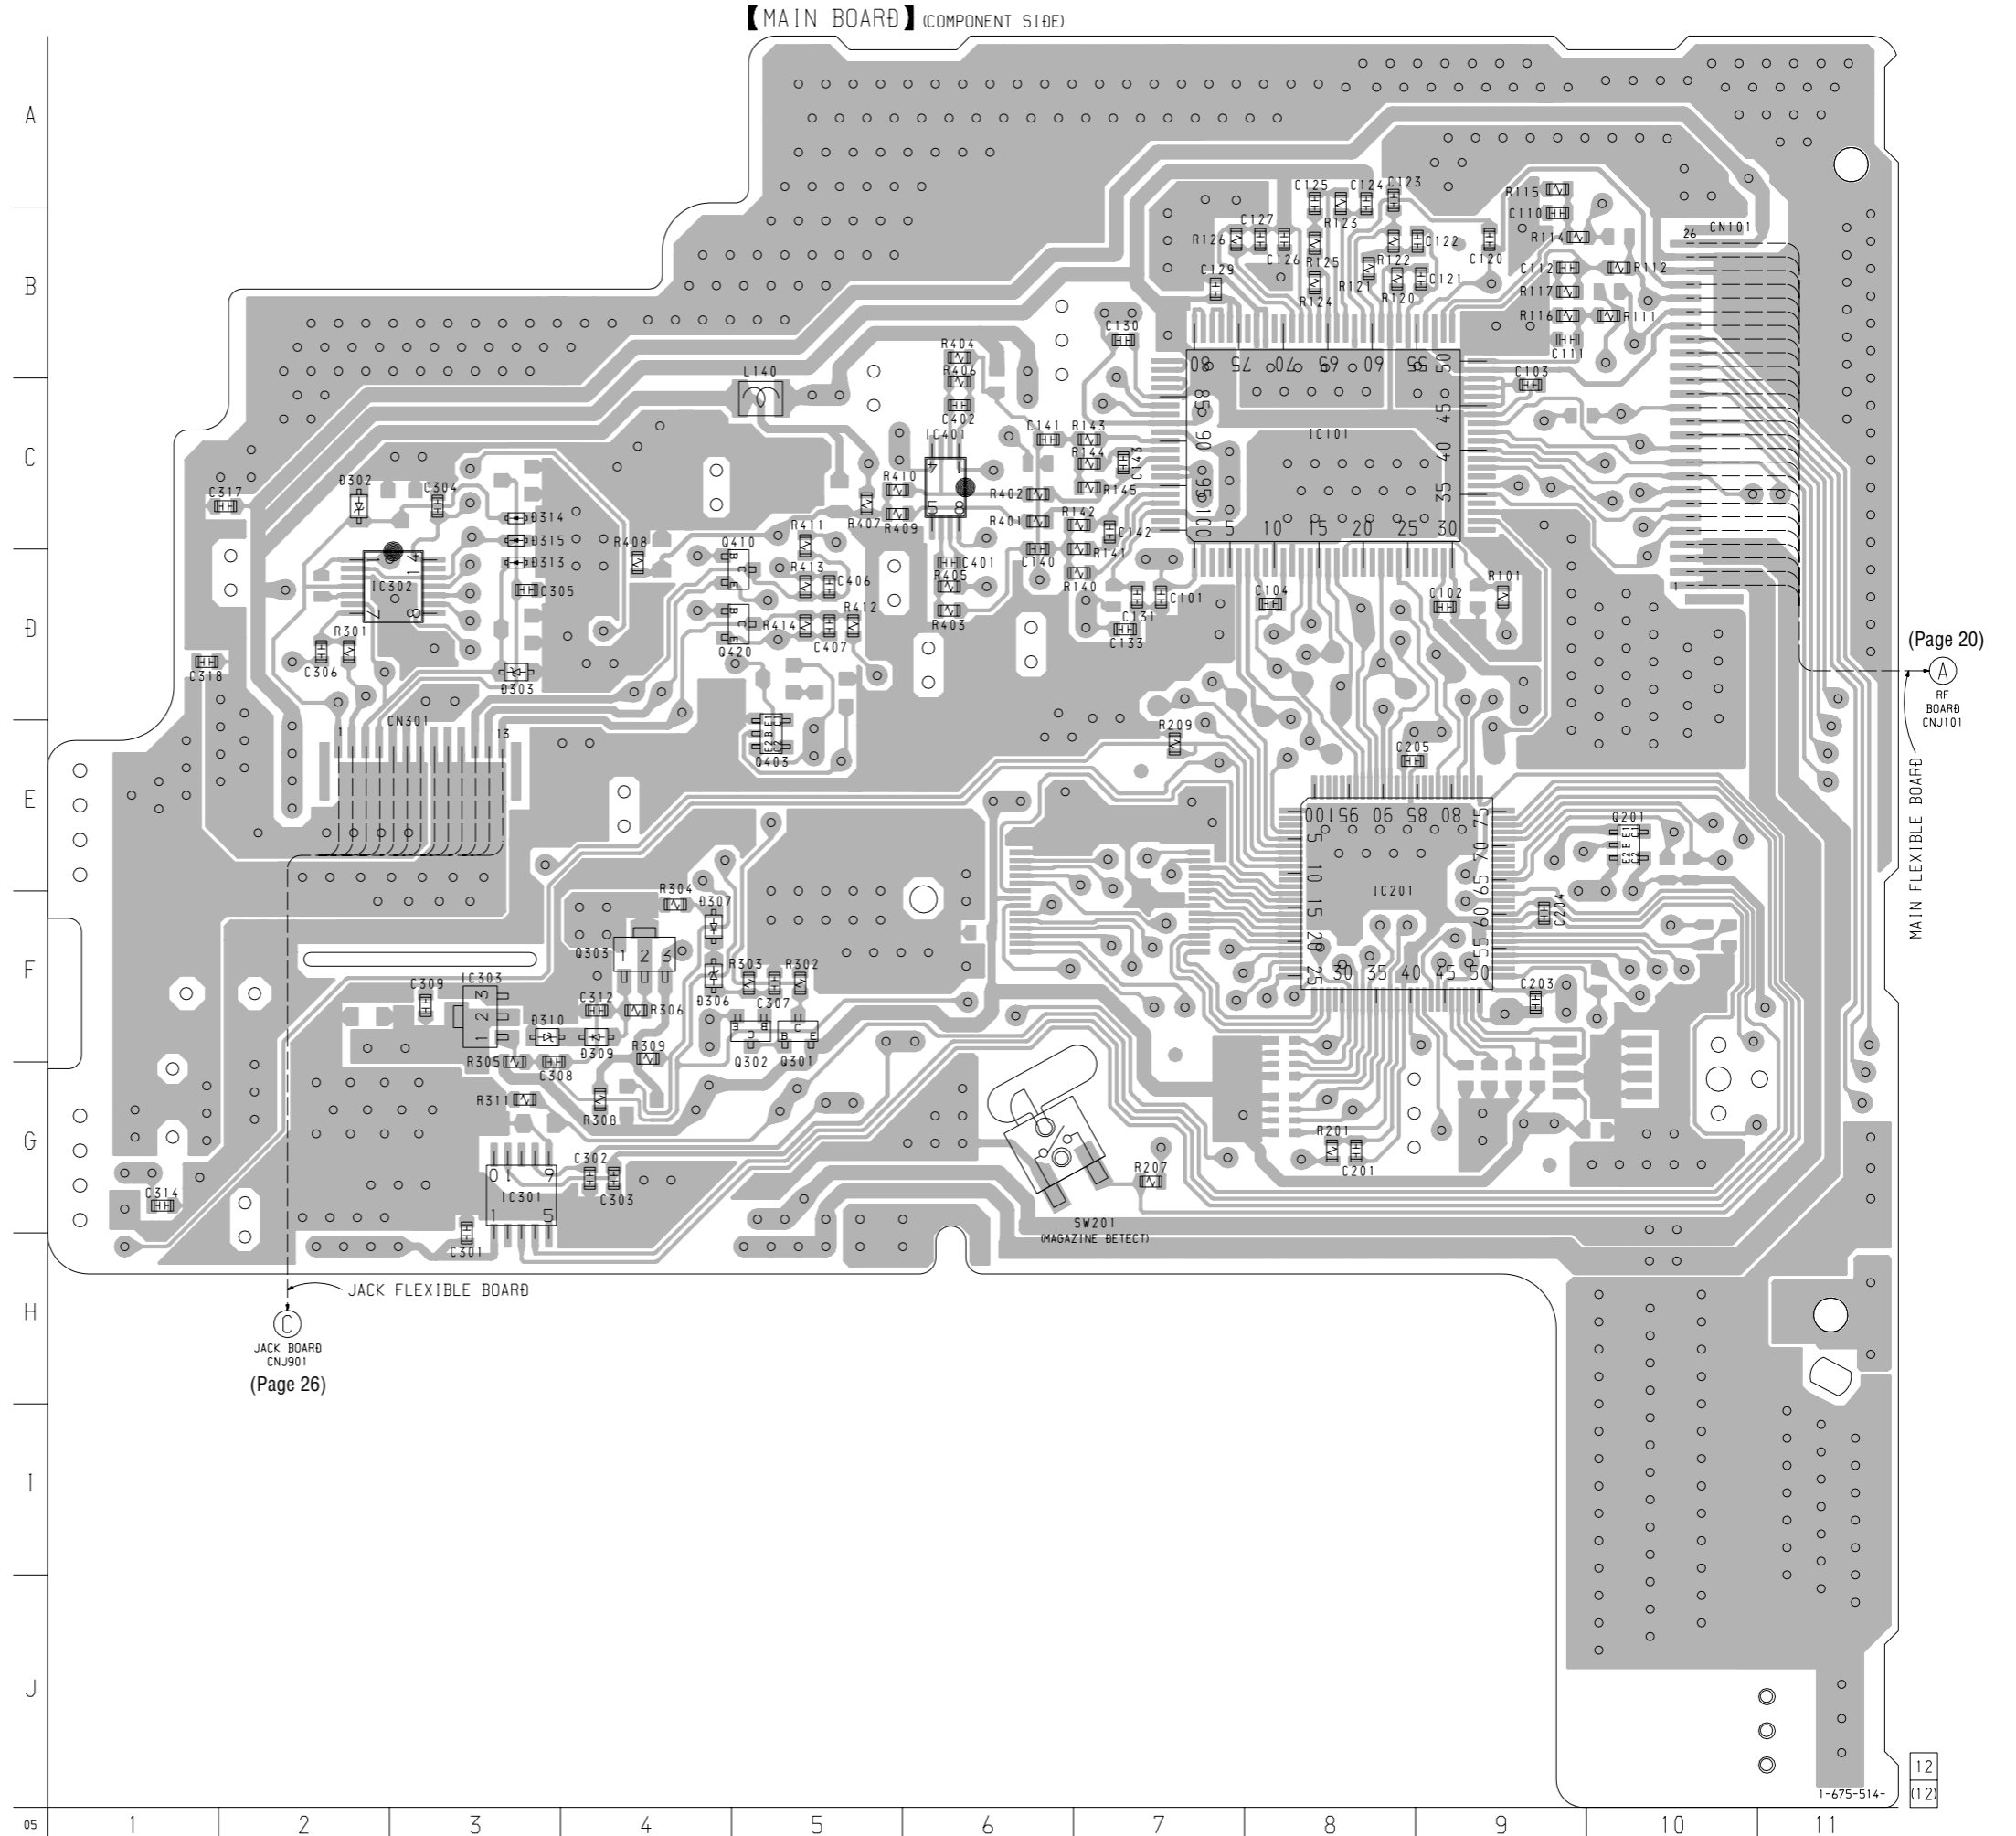


【MAIN BOARD】(CONDUCTOR SIDE)

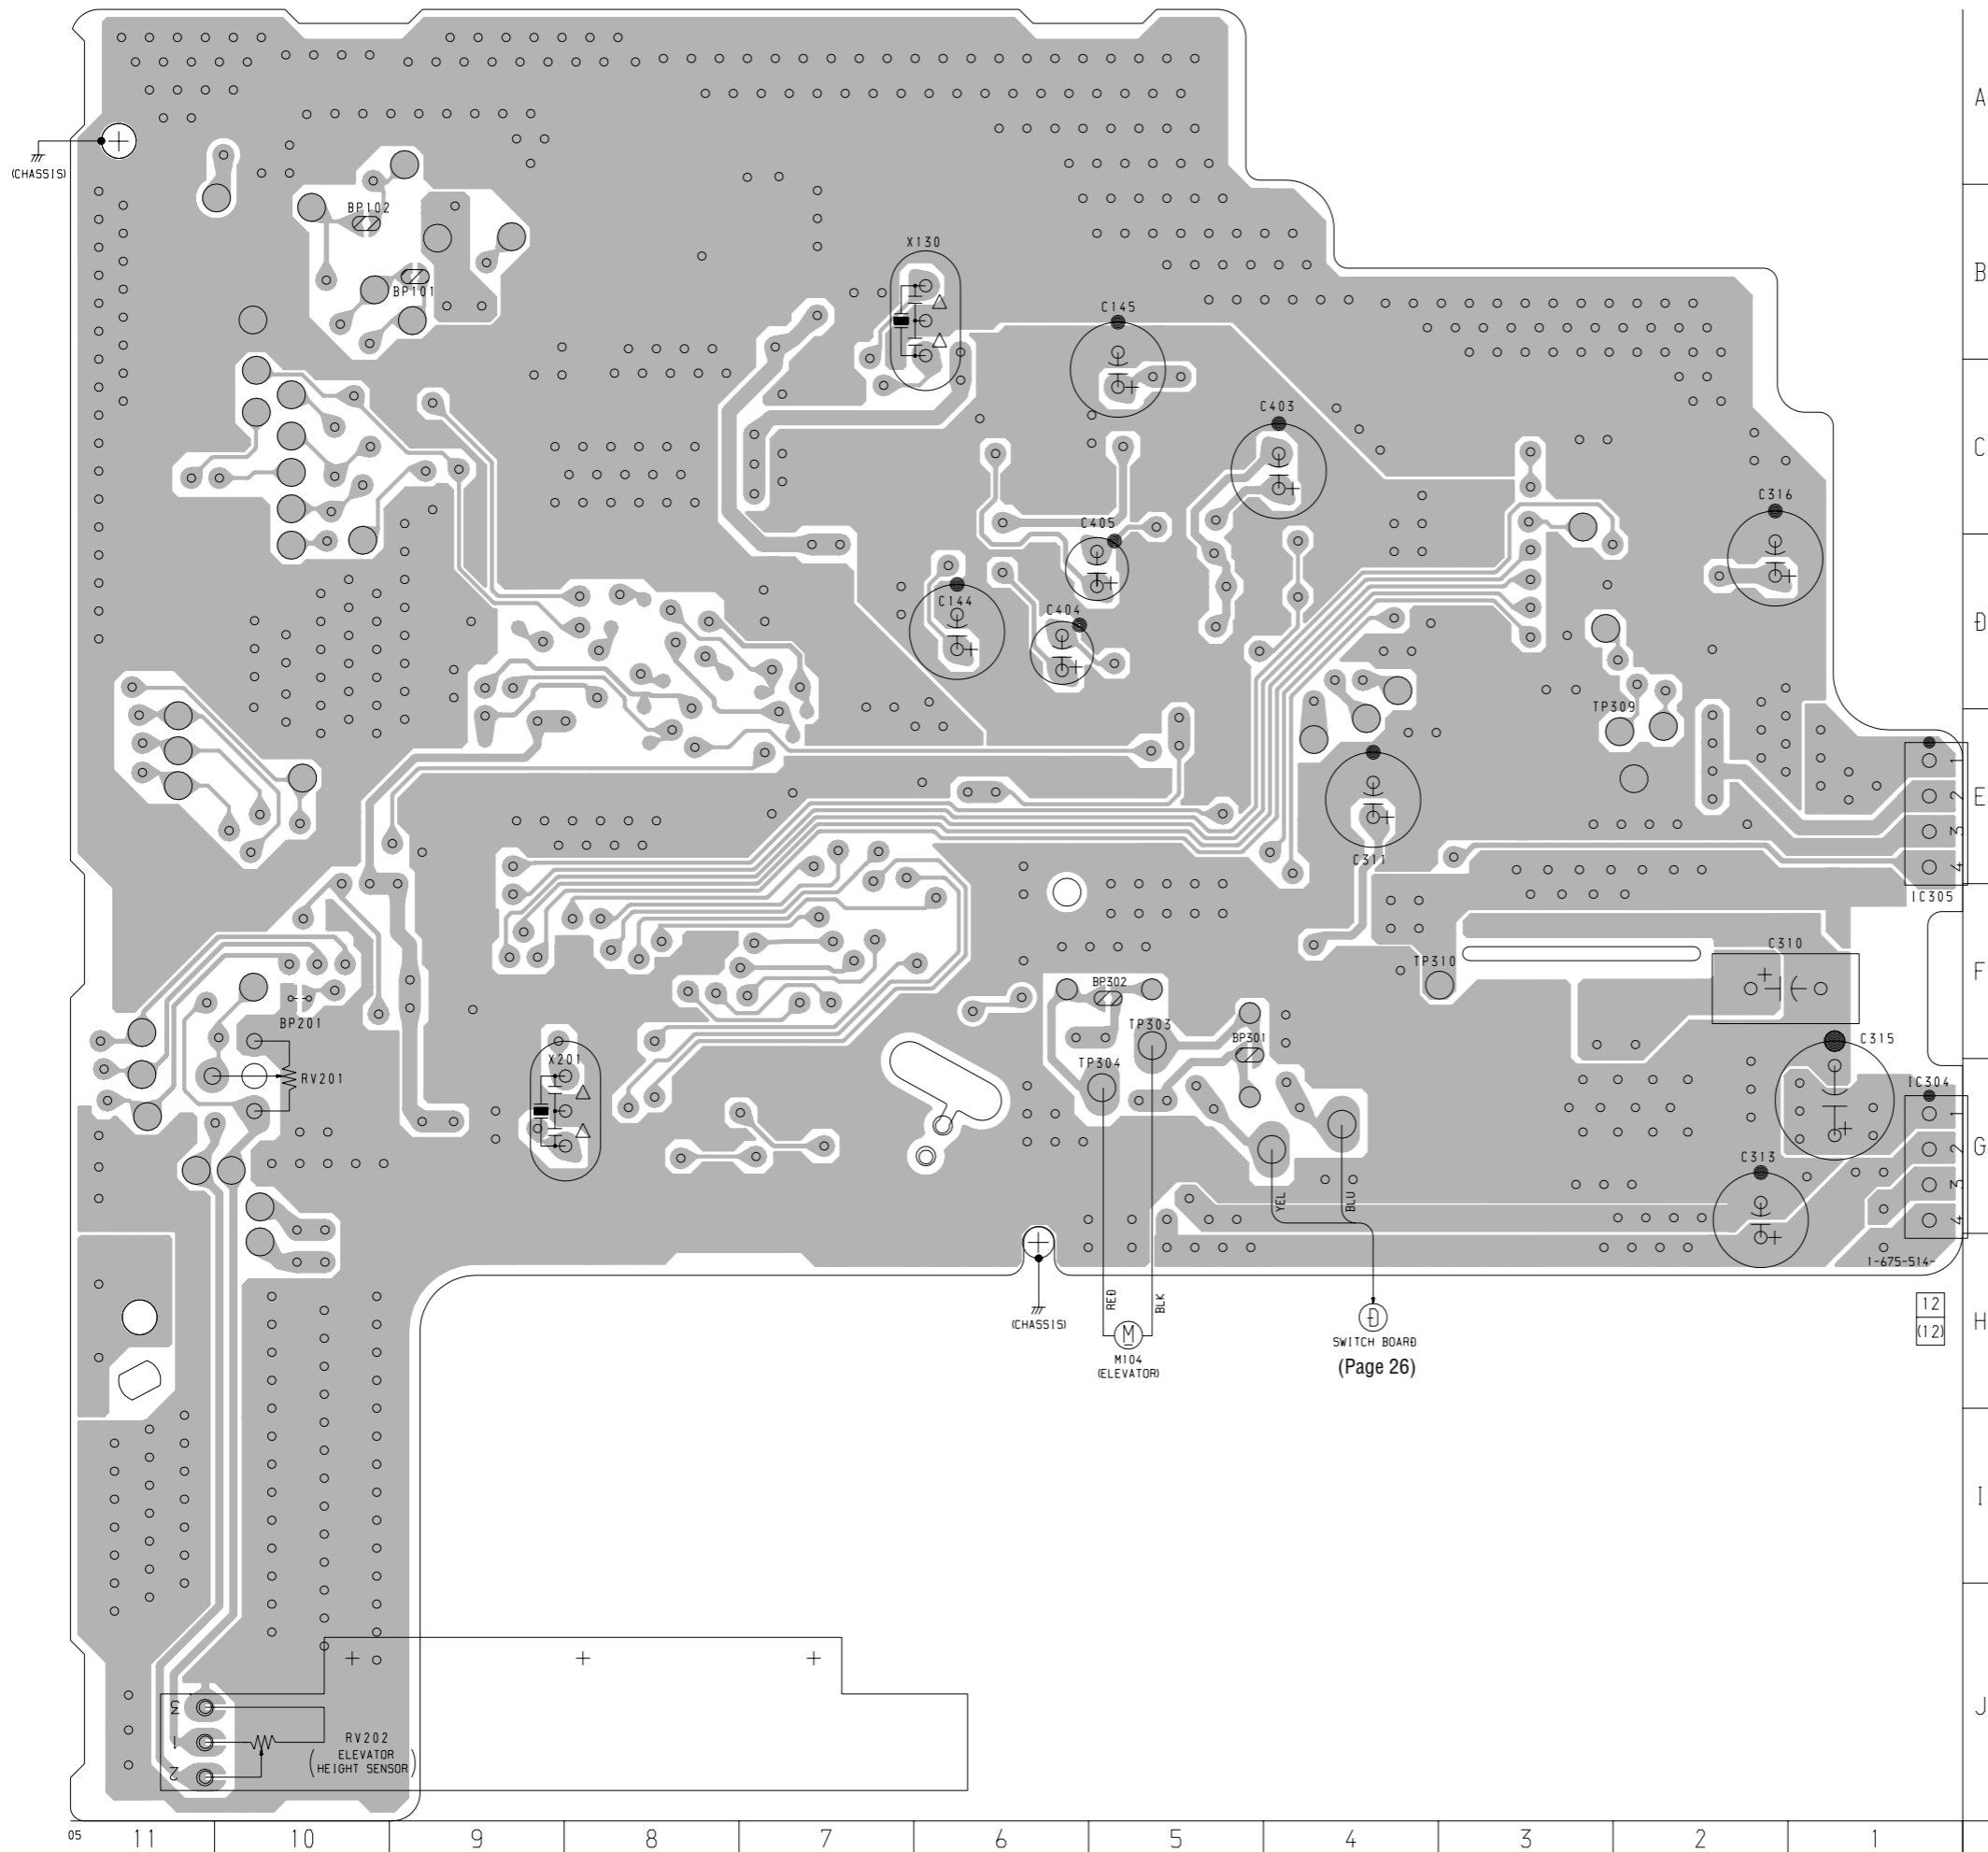


• Semiconductor Location

Ref. No.	Location
IC304	G-1
IC305	E-1


6-8. SCHEMATIC DIAGRAM – MAIN Board (1/2) – • See page 27 for Waveforms. • See page 28 for IC Block Diagram.

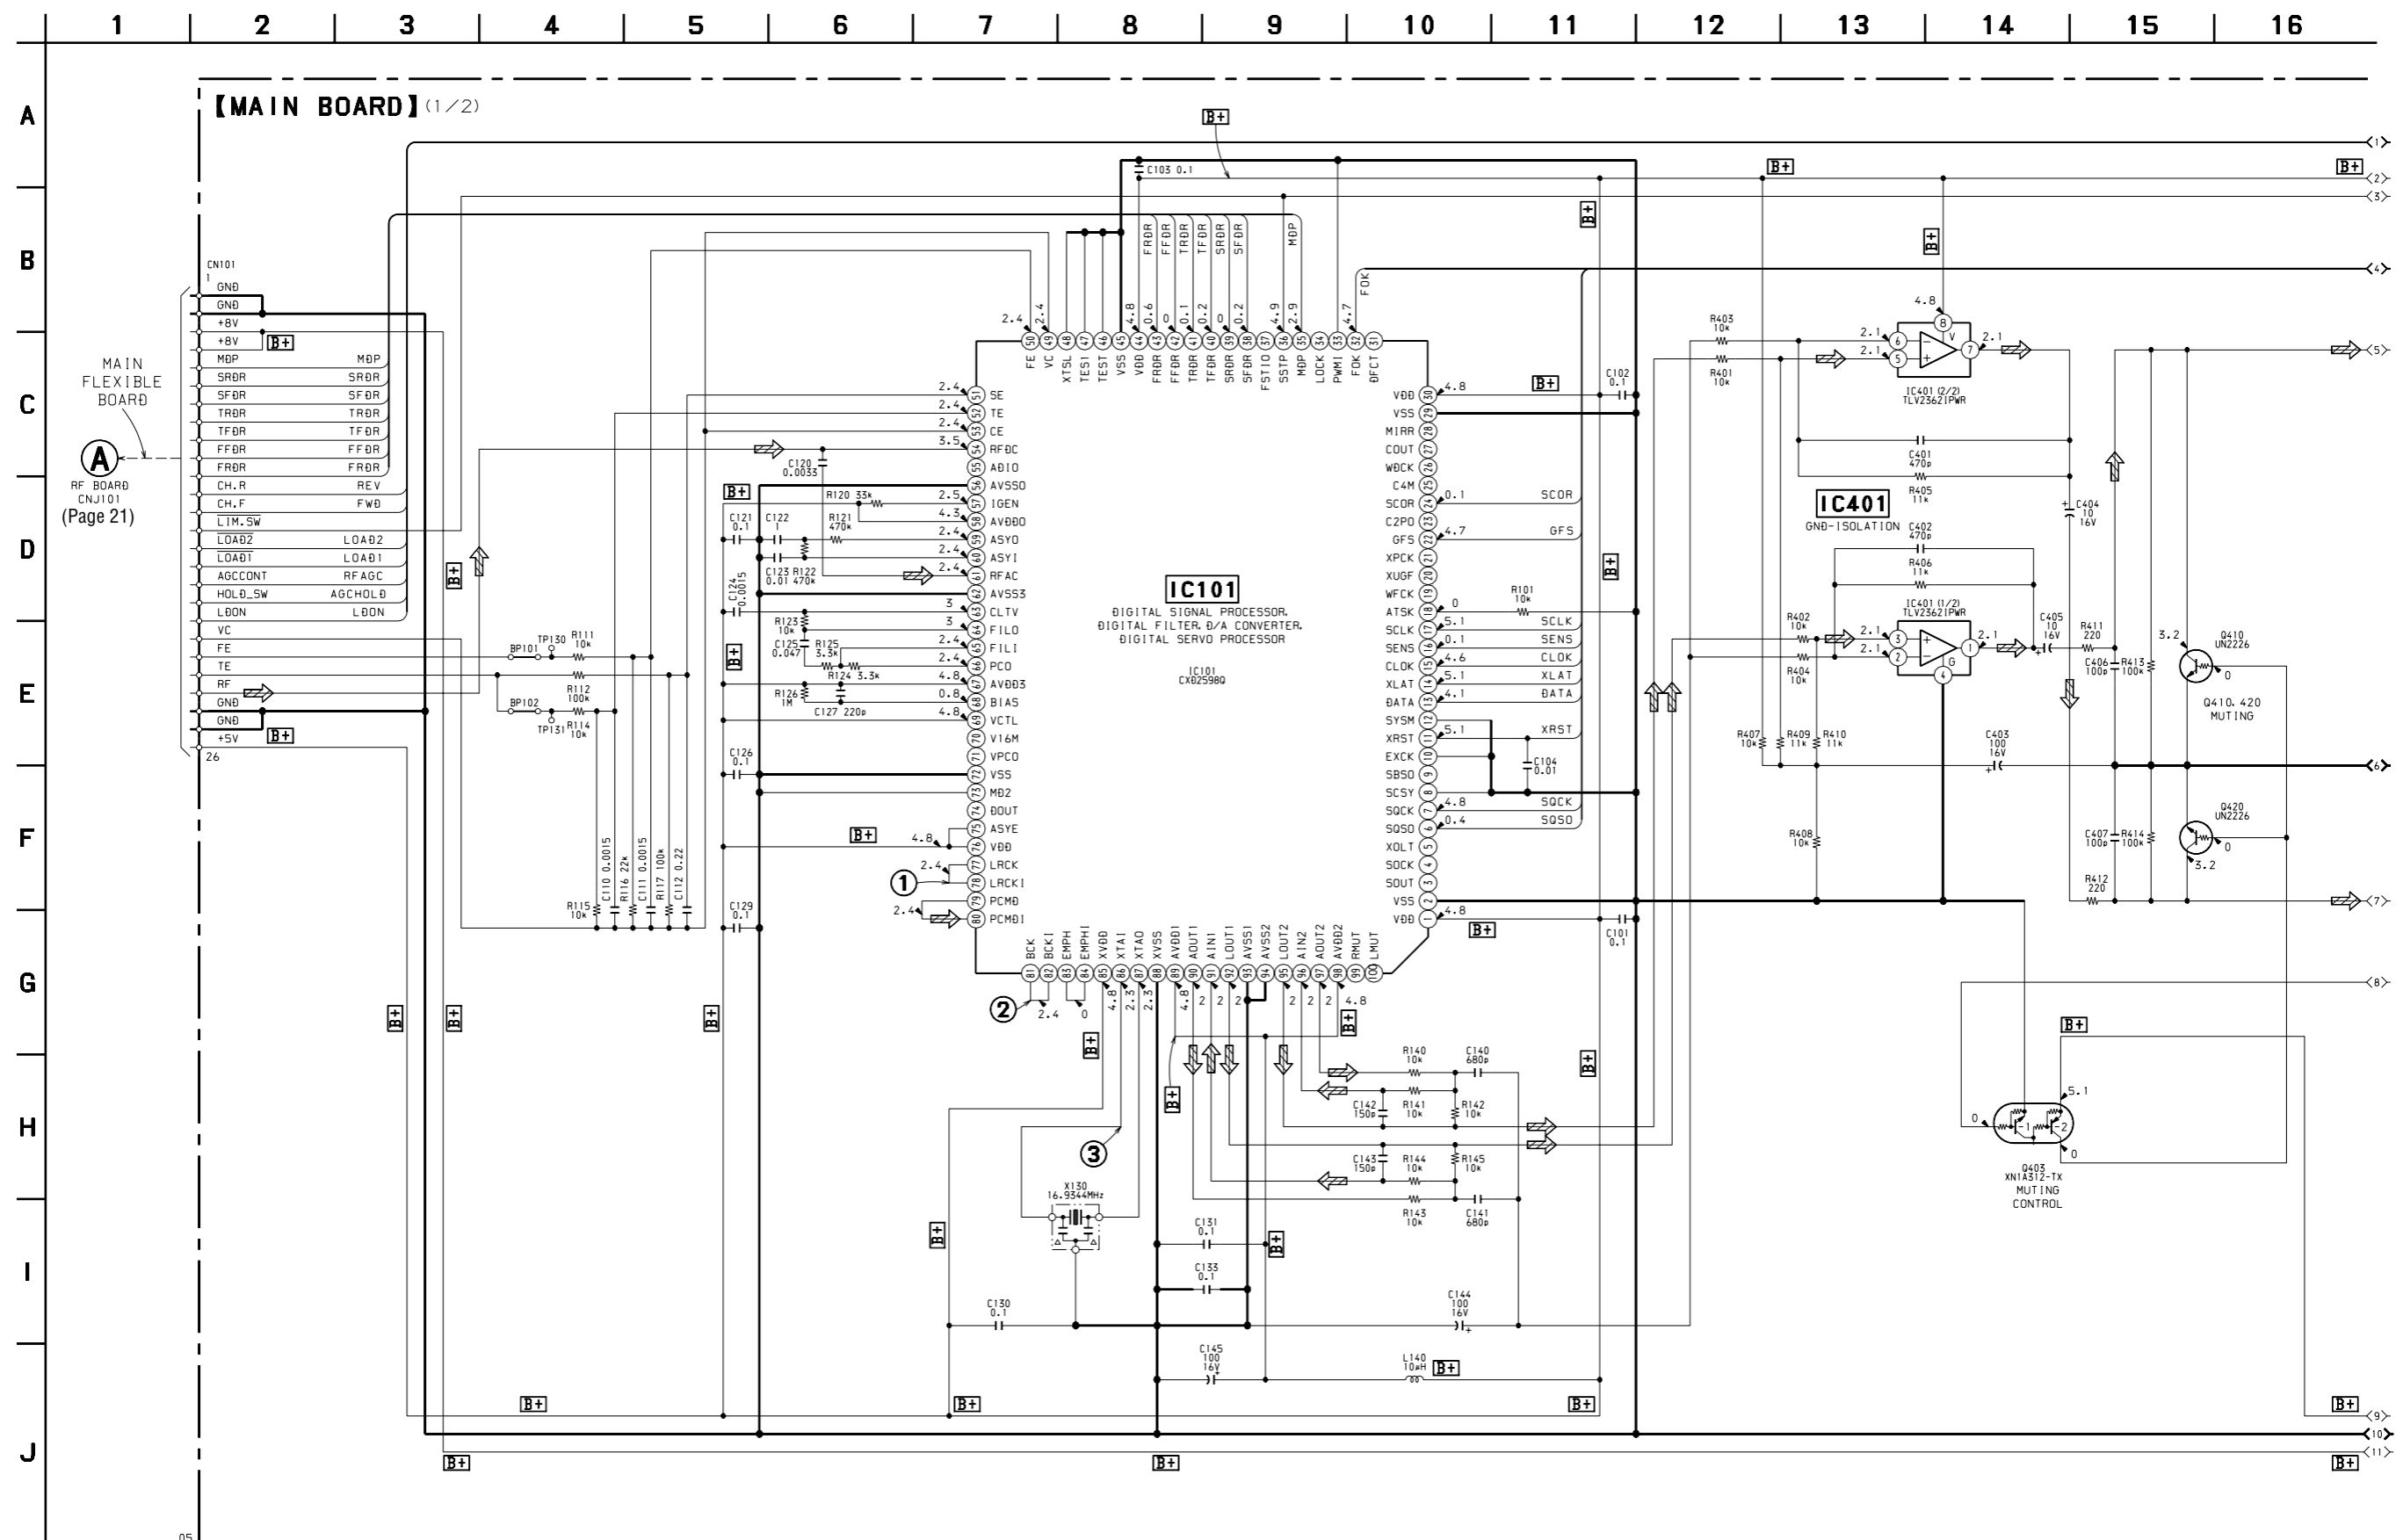


6-9. SCHEMATIC DIAGRAM – MAIN Board (2/2) – • See page 27 for Waveform. • See page 28 for IC Block Diagrams.

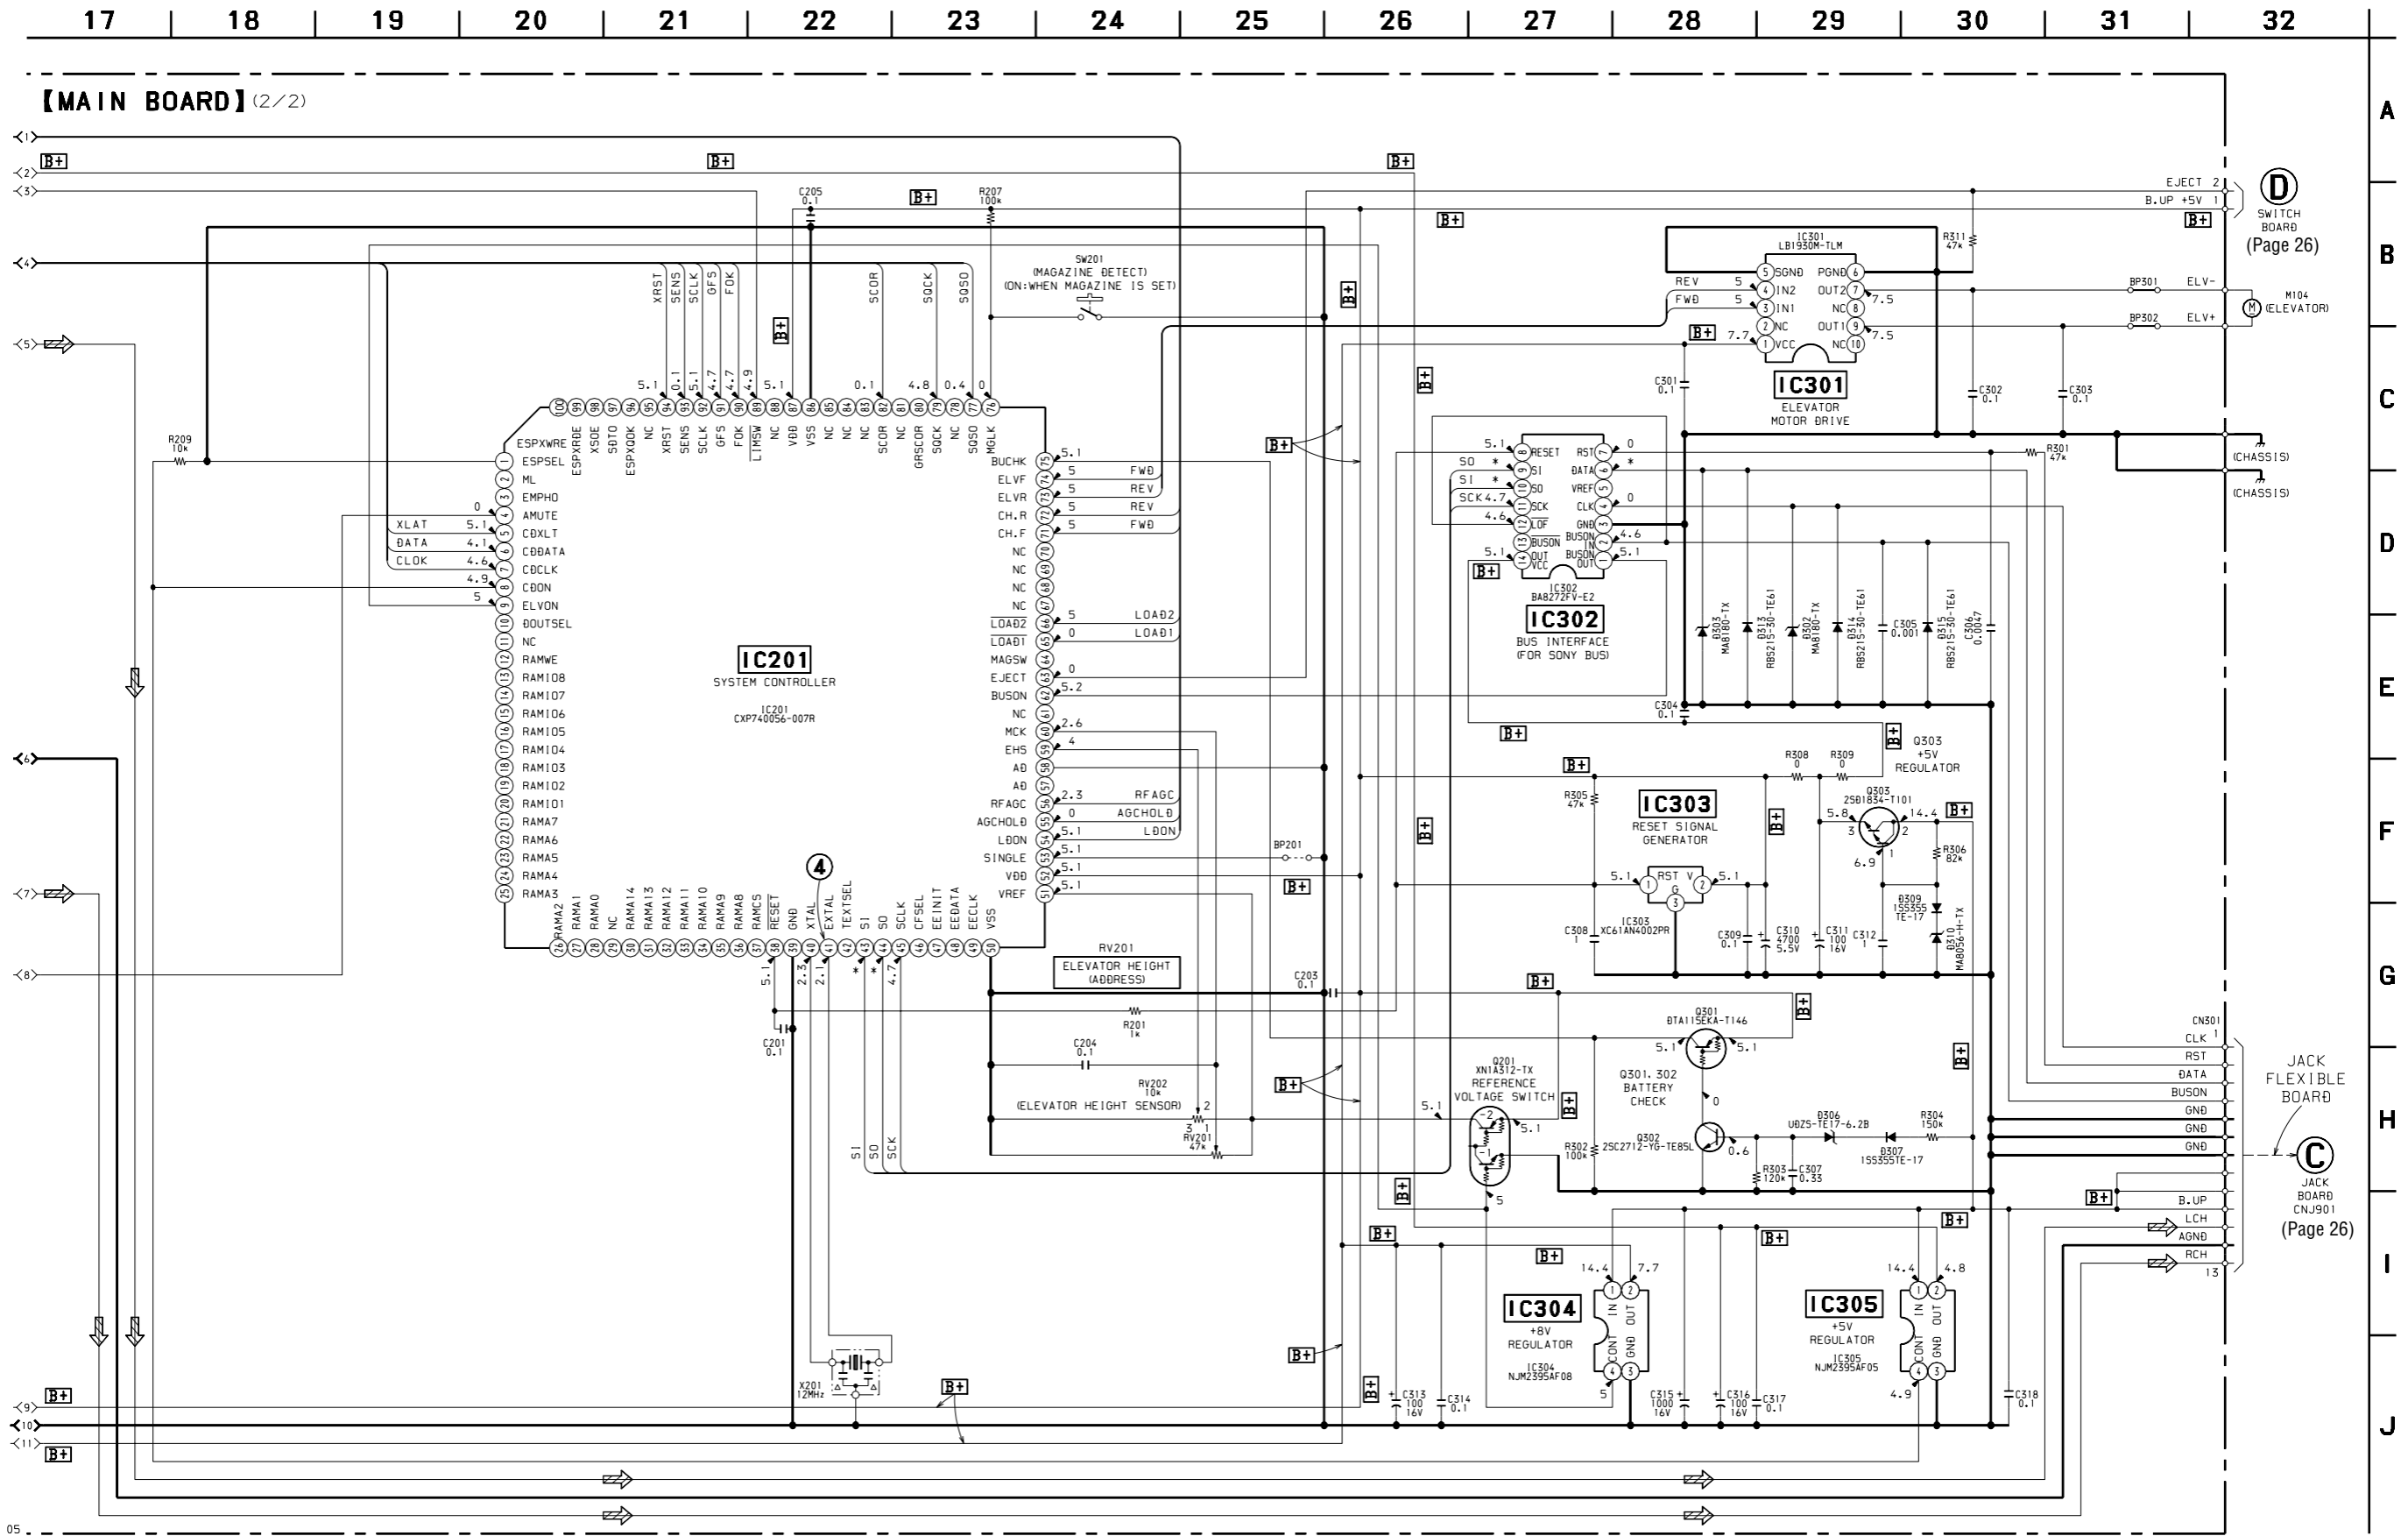

6-10. PRINTED WIRING BOARDS – JACK/SWITCH Boards – • See page 19 for Circuit Boards Location.

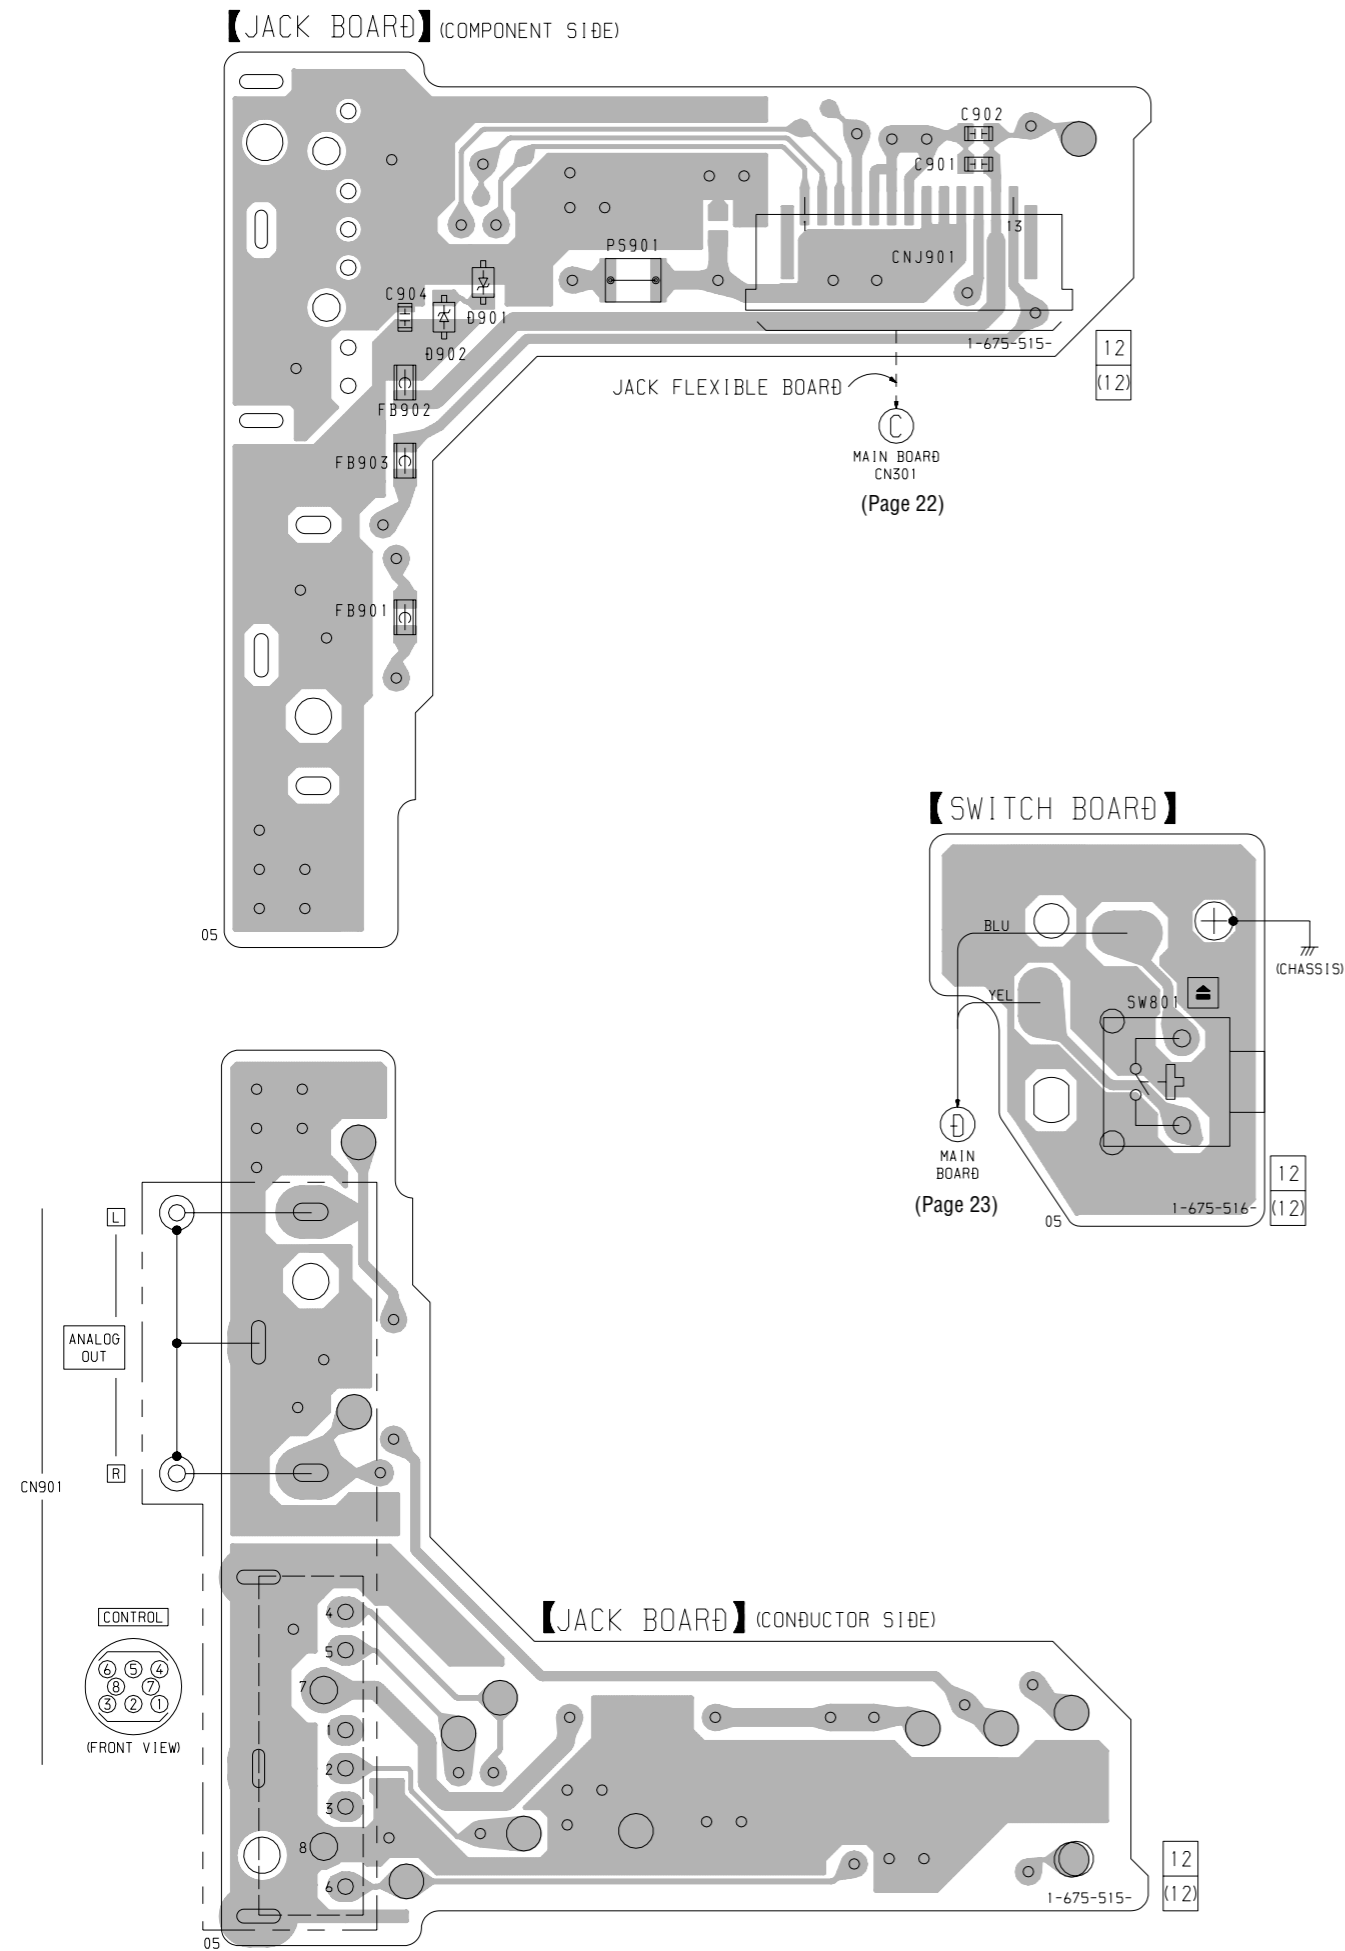


6-11. SCHEMATIC DIAGRAM – JACK/SWITCH Boards –

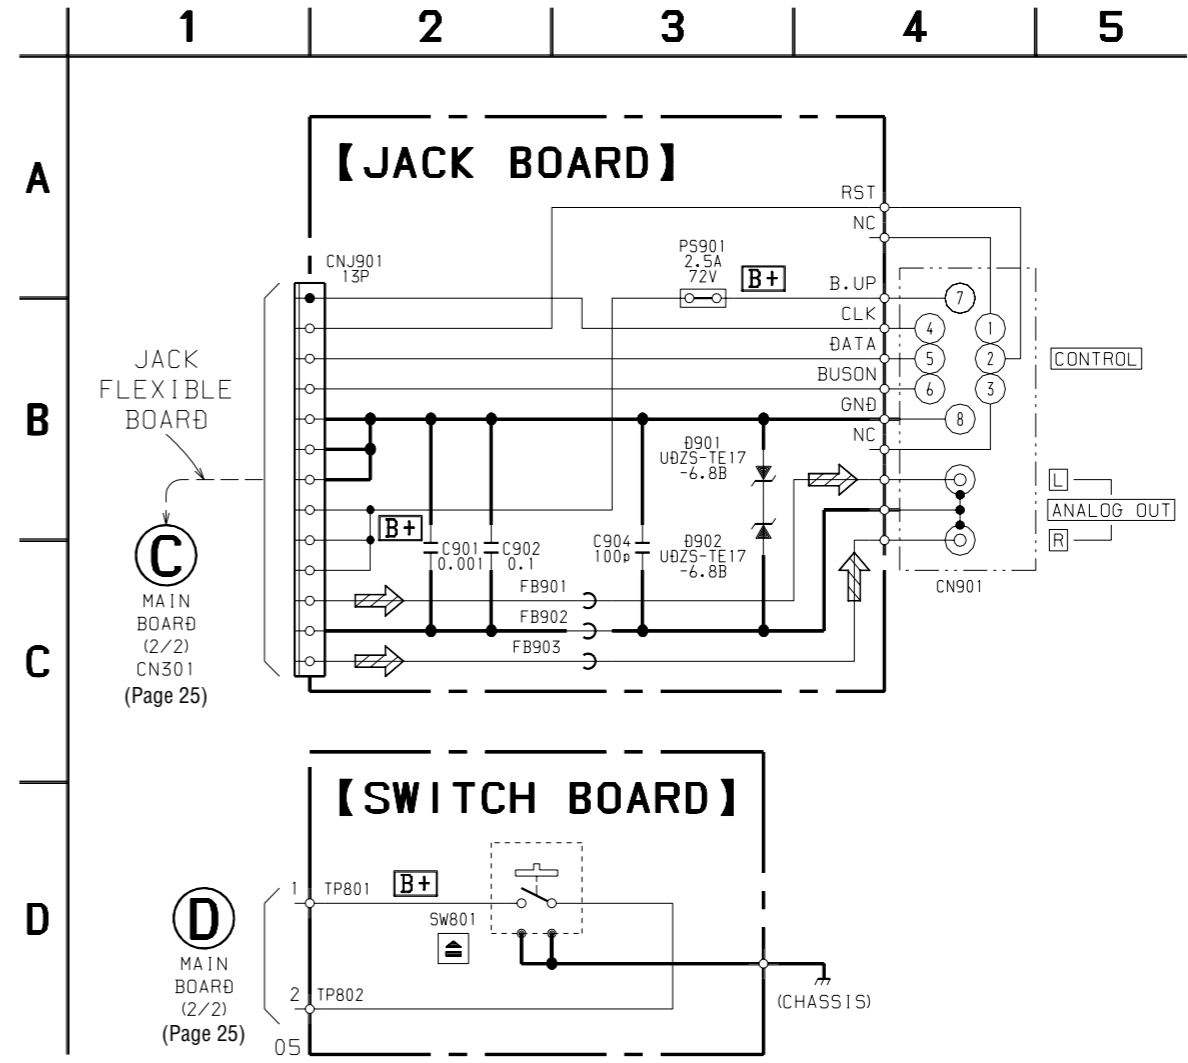


• Waveforms
– RF Board –


1 IC101 ⑩ (RFO) (CD play mode)

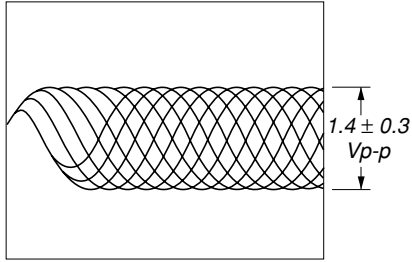

2 IC101 ⑭ (FE) (CD play mode)

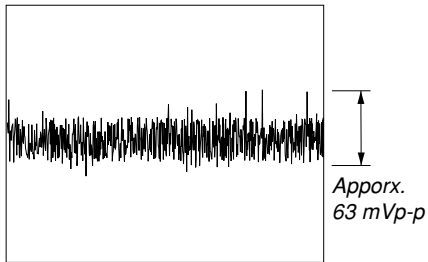


3 IC101 ⑬ (TE) (CD play mode)

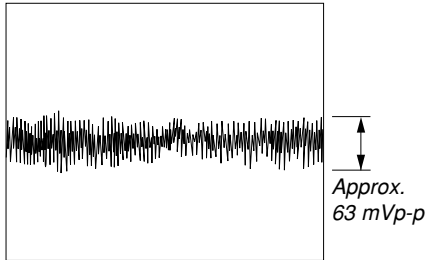


– MAIN Board –


1 IC101 ⑰ (LRCK), ⑱ (LRCKI) (CD play mode)

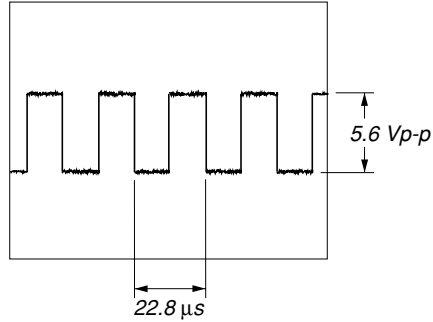


2 IC101 ⑳ (BCK), ㉑ (BCKI) (CD play mode)

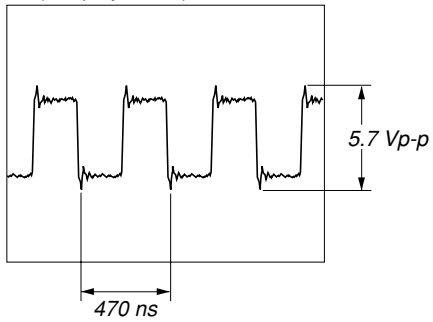

3 IC101 ㉒ (XTAL) (CD play mode)

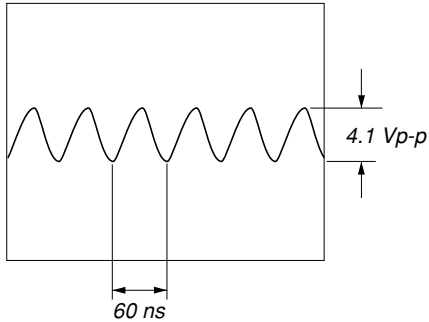


4 IC201 ④ (EXTAL) (CD play mode)

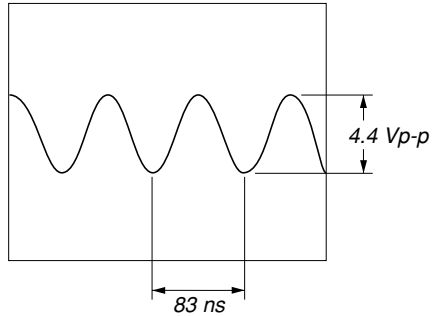


• IC Block Diagrams
– RF Board –


IC101 CXA2596M-T6

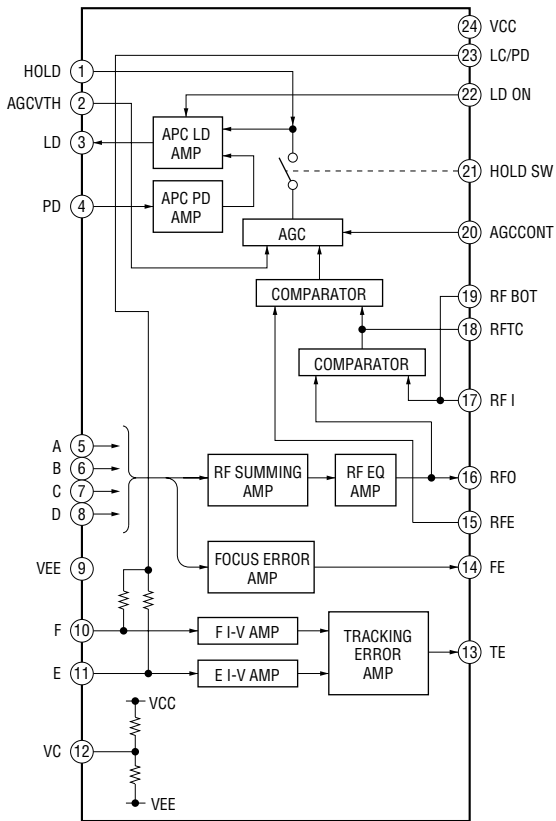


IC201 LA6576L-TE-L

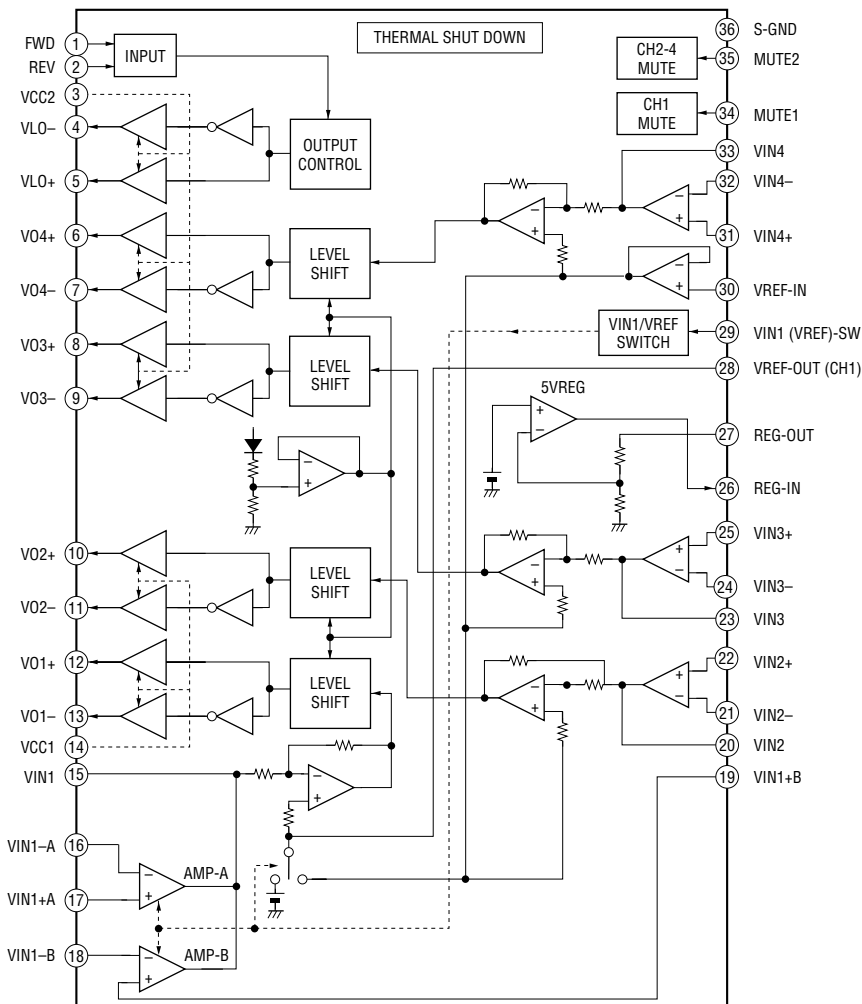


- MAIN Board -
IC101 CXD2598Q

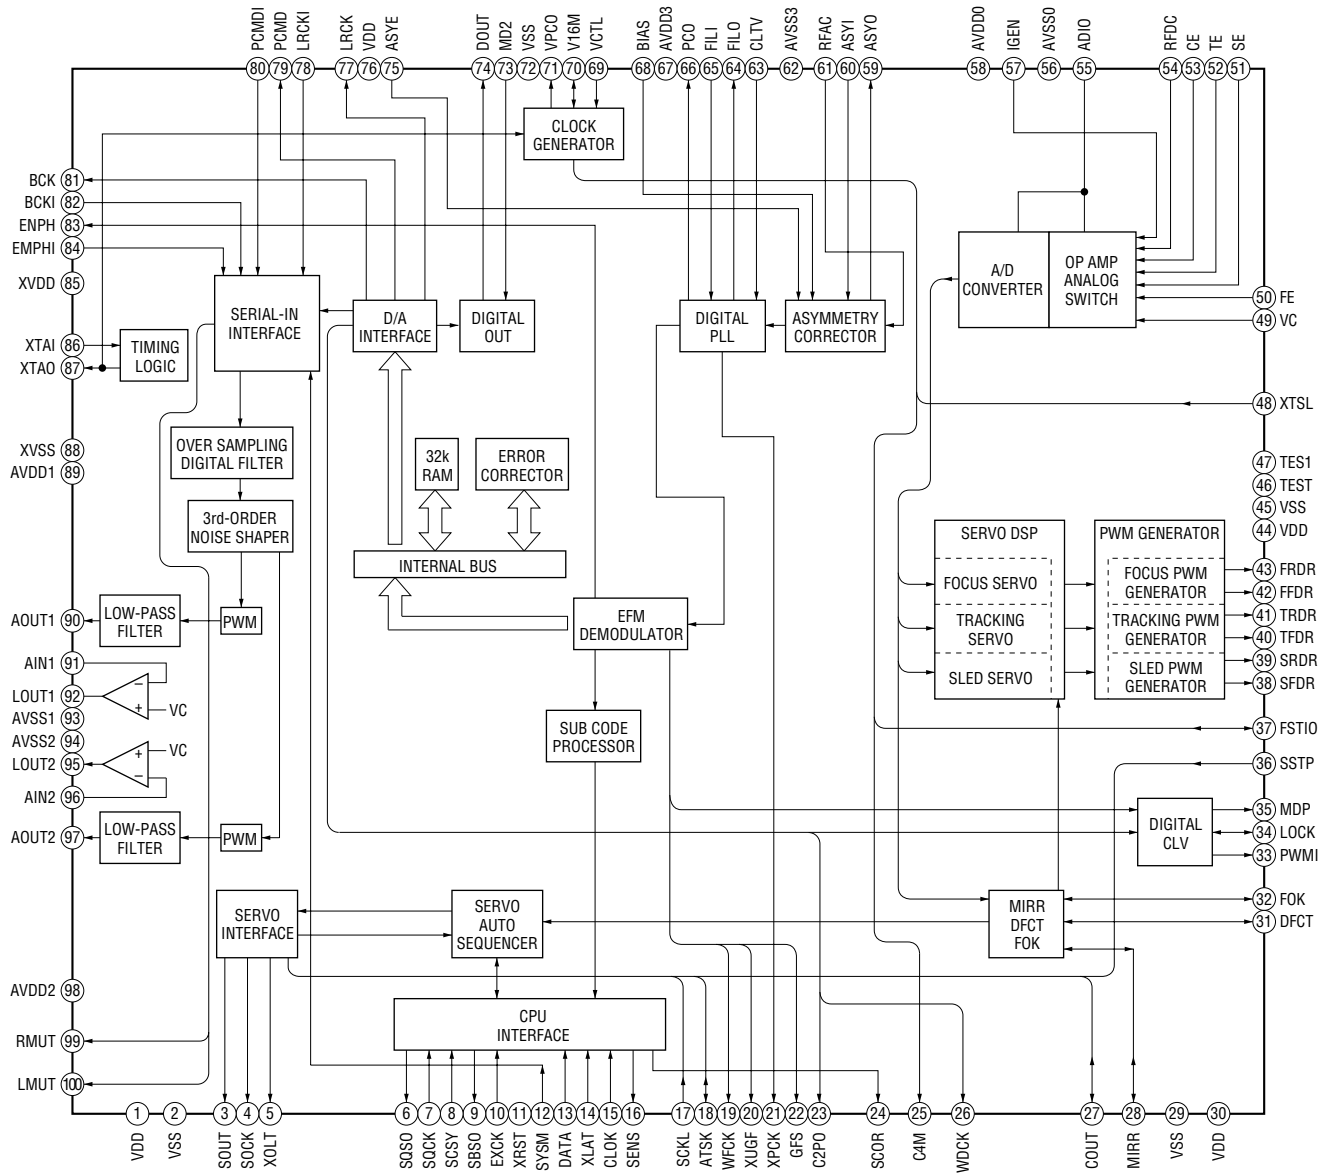


IC301 LB1930M-TLM

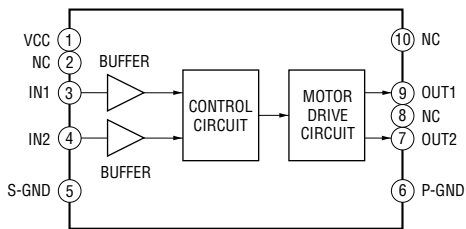

IC302 BA8272FV-E2

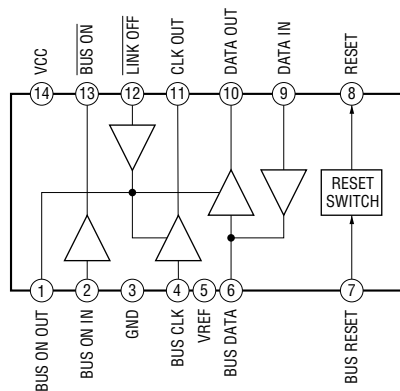

IC304 NJM2395AF08
IC305 NJM2395AF05

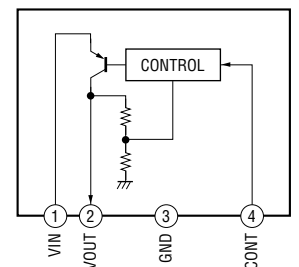

6-12. IC PIN FUNCTION DESCRIPTION

• MAIN BOARD IC201 CXP740056-007R (SYSTEM CONTROLLER)

Pin No.	Pin Name	I/O	Description
1	ESPSEL	I	ESP on/off setting terminal Not used (fixed at "L")
2	ML	O	Normal/high speed playback control signal output terminal "L": high speed playback Not used (open)
3	EMPHO	O	Emphasis signal output terminal Not used (open)
4	AMUTE	O	Audio line muting on/off control signal output terminal "H": muting on
5	CDXLT	O	Serial data latch pulse signal output to the CXD2598Q (IC101)
6	CDDATA	O	Serial data output to the CXD2598Q (IC101)
7	CDCLK	O	Serial data transfer clock signal output to the CXD2598Q (IC101)
8	CDON	O	D/A converter and servo section power supply on/off control signal output "H": power on
9	ELVON	O	Mechanism deck section power supply on/off control signal output "H": power on
10	DOUTSEL	I	Digital output on/off control signal input terminal "L": digital output on Not used (open)
11	NC	—	Not used (open)
12	RAMWE	O	Data write enable signal output to the S-RAM "L": active Not used (open)
13 to 20	RAMIO8 to RAMIO1	I/O	Two-way data bus with the S-RAM Not used (open)
21 to 28	RAMA7 to RAMA0	O	Address signal output to the S-RAM Not used (open)
29	NC	—	Not used (open)
30 to 36	RAMA14 to RAMA8	O	Address signal output to the S-RAM Not used (open)
37	RAMCS	O	Chip select signal output to the S-RAM "L": active Not used (open)
38	<u>RESET</u>	I	System reset signal input from the SONY bus interface (IC302) and reset signal generator (IC303) "L": reset For several hundreds msec. after the power supply rises, "L" is input, then it changes to "H"
39	GND	—	Ground terminal
40	XTAL	O	Main system clock output terminal (12 MHz)
41	EXTAL	I	Main system clock input terminal (12 MHz)
42	TEXTSEL	I	CD text mode setting terminal "L": CD text on, "H": does not display track name Not used (open)
43	SI	I	Serial data input from the SONY bus interface (IC302)
44	SO	O	Serial data output to the SONY bus interface (IC302)
45	SCLK	I	Serial data transfer clock signal input from the SONY bus interface (IC302)
46	CFSEL	I	Custom file on/off setting terminal "L" custom file on Not used (open)
47	EEINIT	I	Initialize signal input for the EEPROM "H": format Not used (open)
48	EEDATA	I/O	Two-way data bus with the EEPROM Not used (open)
49	EECLK	O	Serial data transfer clock signal output to the EEPROM Not used (open)
50	VSS	—	Ground terminal (for A/D converter)
51	AVREF	I	Reference voltage (+5V) input terminal (for A/D converter)
52	VDD	—	Power supply terminal (+5V) (for A/D converter)
53	SINGLE	I	Setting terminal for the single disc/multiple discs mode "L": single mode, "H": multiple discs mode Fixed at "H" in this set (open)
54	LDON	O	The laser automatic power control on/off signal output "H": automatic power control on
55	AGCHOLD	O	RF AGC hold on/off signal output "H": hold
56	RFAGC	I/O	RF AGC level control signal output "L": off, center voltage: 40%, "H": 60%
57	AD	I	A/D input terminal Not used (open)
58	AD	I	A/D input terminal Not used (fixed at "L")

Pin No.	Pin Name	I/O	Description
59	EHS	I	Elevator height position detect input from the RV202 (elevator height sensor) (A/D input)
60	MCK	I	Input of signal for the fine adjustment (elevator height (address) adjustment; RV201) of elevator position (A/D input)
61	NC	—	Not used (open)
62	BUSON	I	Bus on/off control signal input from the SONY bus interface (IC302) “H” bus on
63	EJECT	I	Eject switch (SW801) input terminal “H” active
64	MAGSW	I	Magazine in/out detect switch input terminal Not used (open)
65	$\overline{\text{LOAD1}}$	I	Chucking end detect switch (SW1) input terminal “L”: When completion of the disc chucking operation
66	$\overline{\text{LOAD2}}$	I	Save end detect switch (SW2) input terminal “L”: When completion of the disc save operation
67 to 70	NC	—	Not used (open)
71	CH.F	O	Motor drive signal (save direction) output to the chucking motor drive (IC201) “L” active *1
72	CH.R	O	Motor drive signal (chucking direction) output to the chucking motor drive (IC201) “L” active *1
73	ELVR	O	Motor drive signal (elevator down direction) output to the elevator motor drive (IC301) “L” active *2
74	ELVF	O	Motor drive signal (elevator up direction) output to the elevator motor drive (IC301) “L” active *2
75	BUCHK	I	Battery detect signal input terminal “H”: battery on
76	MGLK	I	Magazine detect switch (SW201) input “L”: magazine is set
77	SQSO	O	Subcode Q/text serial data output to the CXD2598Q (IC101)
78	NC	—	Not used (open)
79	SQCK	O	Subcode Q/text serial data transfer clock signal output to the CXD2598Q (IC101)
80	GRSCOR	I	Subcode sync (S0+S1) detection signal input terminal Not used (open)
81	NC	—	Not used (open)
82	SCOR	I	Subcode sync (S0+S1) detection signal input from the CXD2598Q (IC101)
83 to 85	NC	—	Not used (open)
86	VSS	—	Ground terminal
87	VDD	—	Power supply terminal (+5V)
88	NC	—	Not used (open)
89	$\overline{\text{LIMSW}}$	I	Sled limit in detect switch (SW3) input terminal “L”: When the optical pick-up is inner position
90	FOK	I	Focus OK signal input from the CXD2598Q (IC101) “H” is input when focus is on (“L”: NG)
91	GFS	I	Guard frame sync signal input from the CXD2598Q (IC101) “L”: NG, “H”: OK
92	SCLK	O	Serial data transfer clock signal output to the CXD2598Q (IC101)
93	SENS	I	Internal status signal (sense signal) input from the CXD2598Q (IC101)
94	XRST	O	System reset signal output to the CXD2598Q (IC101) “L”: reset
95	NC	—	Not used (open)
96	ESPXQOK	O	Subcode Q OK pulse signal output terminal “L”: active Not used (open)
97	SDTO	I	ESP status signal input terminal Not used (open)
98	XSOE	O	ESP status read enable signal output terminal “L”: active Not used (open)
99	ESPXRDE	O	ESP read enable signal output terminal “L”: active Not used (open)
100	ESPXWRE	O	ESP write enable signal output terminal “L”: active Not used (open)

*1 chucking motor (M103) control

Terminal \ Mode	STOP	LOAD CHUCKING	SAVE	BRAKE
CH.F (pin ㉗)	“H”	“H”	“L”	“L”
CH.R (pin ㉘)	“H”	“L”	“H”	“L”

*2 elevator motor (M104) control

Terminal \ Mode	STOP	ELEVATOR UP	ELEVATOR DOWN	BRAKE
ELVF (pin ㉙)	“H”	“L”	“H”	“L”
ELVR (pin ㉚)	“H”	“H”	“L”	“L”

SECTION 7 EXPLODED VIEWS

NOTE:


- -XX and -X mean standardized parts, so they may have some difference from the original one.
- Color Indication of Appearance Parts
Example:
KNOB, BALANCE (WHITE) . . . (RED)
 ↑ ↑
 Parts Color Cabinet's Color

- Items marked "*" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- The mechanical parts with no reference number in the exploded views are not supplied.
- Hardware (# mark) list and accessories and packing materials are given in the last of the electrical parts list.

The components identified by mark \triangle or dotted line with mark \triangle are critical for safety. Replace only with part number specified.


Les composants identifiés par une marque \triangle sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

(1) CASE SECTION

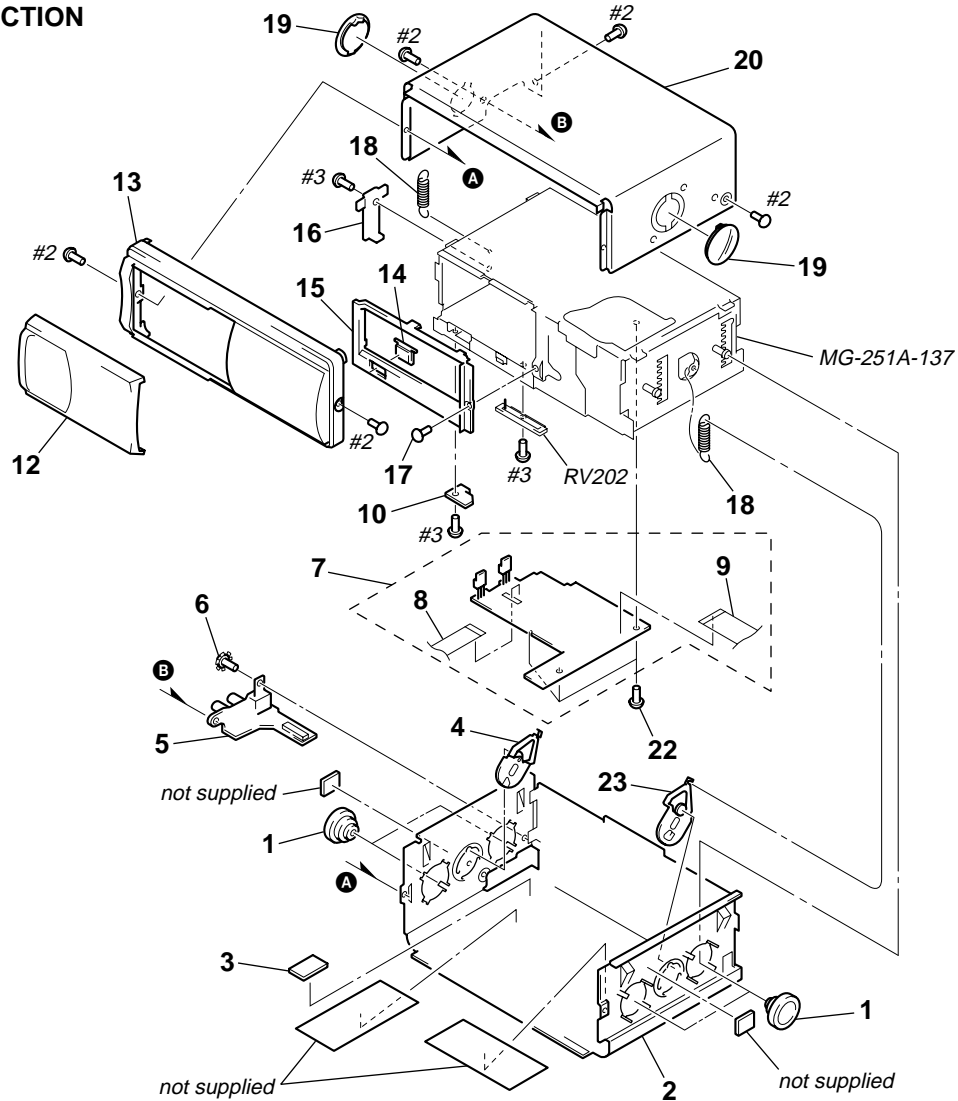


Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
1	3-047-852-01	DAMPER (T)		13	3-224-392-01	PANEL (L), FRONT (646)	
* 2	3-045-543-01	CASE (LOWER. T)		13	3-224-392-31	PANEL (L), FRONT (646X)	
* 3	3-024-065-01	CUSHION (EJECT-T)		14	3-022-007-01	BUTTON (EJT) (\triangle)	
4	X-3375-357-1	ARM (FLT) ASSY		15	3-041-218-21	ESCUTCHEON (T)	
* 5	1-675-515-11	JACK BOARD		* 16	3-022-012-01	HEAT SINK (T)	
6	3-376-464-11	SCREW (+PTT 2.6X6), GROUND POINT		17	3-042-244-11	SCREW (T)	
* 7	A-3294-822-A	MAIN BOARD, COMPLETE		18	3-038-166-01	SPRING (FL), TENSION COIL	
8	1-676-340-11	JACK FLEXIBLE BOARD		19	3-047-886-11	LEVER (FLT. 838)	
9	1-676-339-11	MAIN FLEXIBLE BOARD		* 20	3-046-160-01	CASE (UPPER. T)	
* 10	1-675-516-11	SWITCH BOARD		22	3-935-636-11	SCREW (FP)	
12	X-3379-707-1	DOOR (L) ASSY (646)		23	X-3375-360-1	ARM (FRT) ASSY	
12	X-3380-045-1	DOOR (L) ASSY (646X)		RV202	1-227-137-11	RES, VAR, SLIDE 10K (ELEVATOR HEIGHT SENSOR)	

(2) MECHANISM DECK SECTION-1
(MG-251A-137)

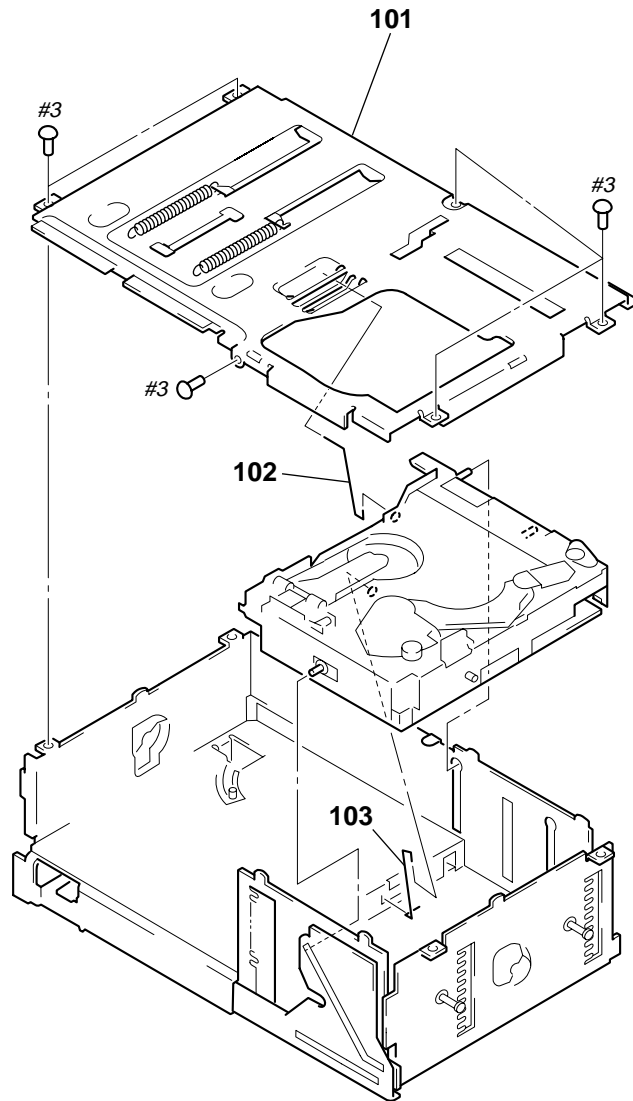


<u>Ref. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Remark</u>	<u>Ref. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Remark</u>
101	X-3378-091-1	CHASSIS (U. S) SUB ASSY		103	3-011-997-01	SPRING (STOPPER. LOWER)	
102	3-024-161-11	SPRING (SUT)					

**(3) MECHANISM DECK SECTION-2
(MG-251A-137)**

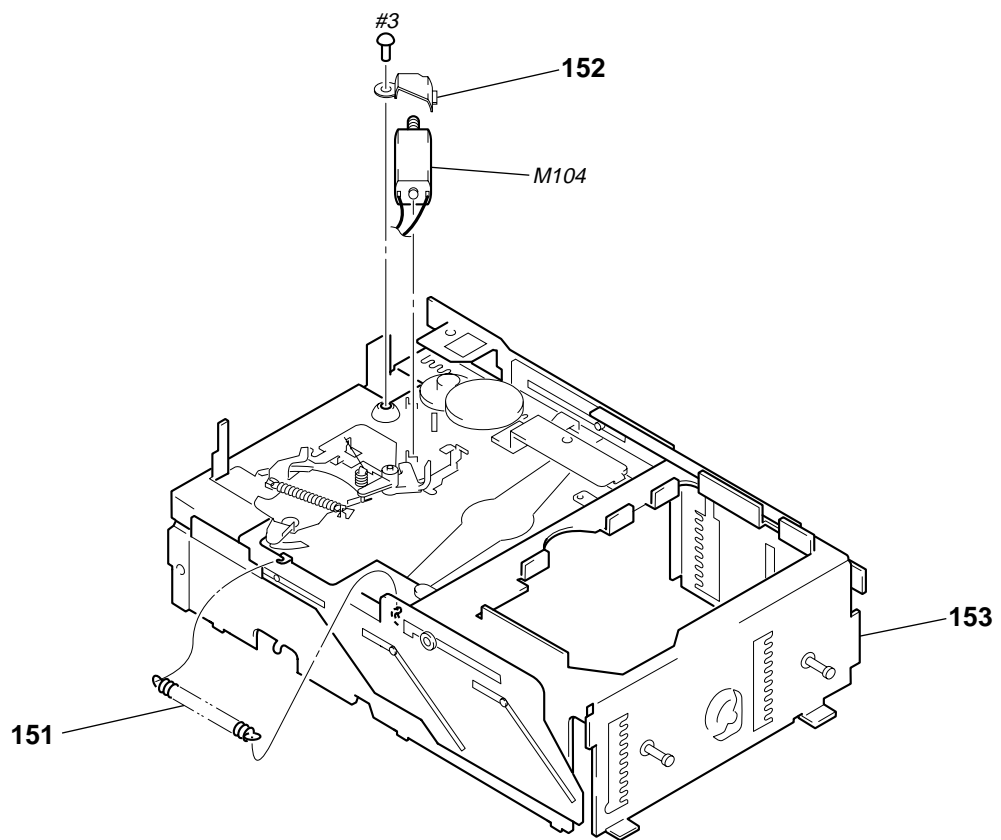


<u>Ref. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Remark</u>	<u>Ref. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Remark</u>
151	3-024-170-01	SPRING (SB), TENSION		153	X-3378-092-1	CHASSIS (D. S) SUB ASSY	
* 152	3-040-790-01	BRACKET (EVM. S)		M104	A-3301-123-A	ELJ MOTOR ASSY (ELEVATOR)	

(4) MECHANISM DECK SECTION-3
(MG-251A-137)

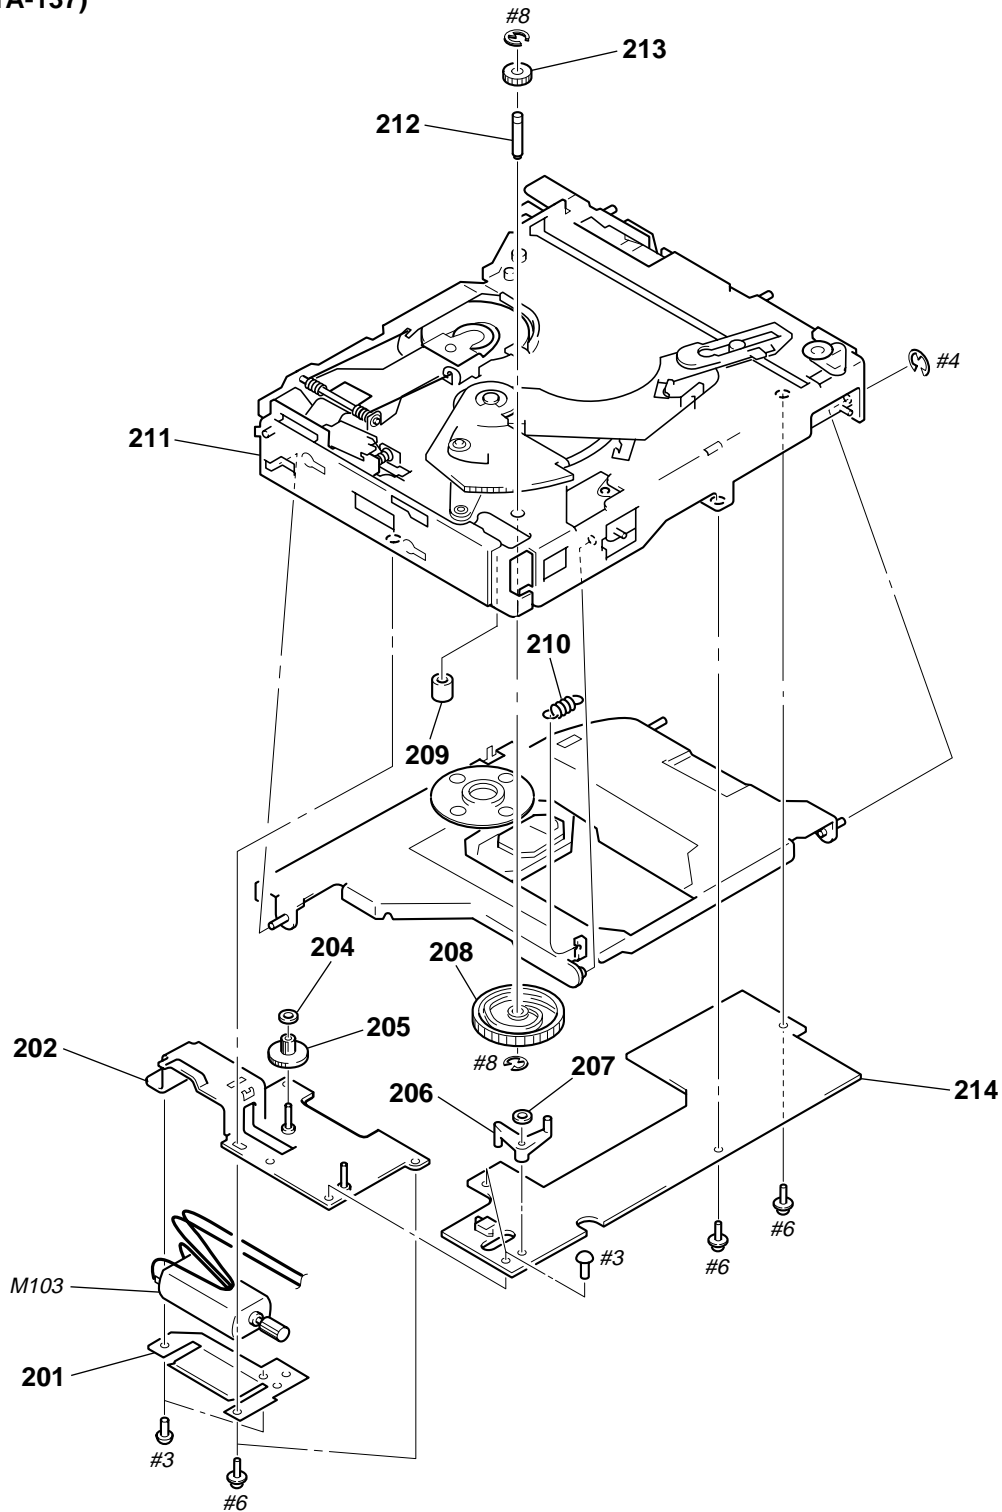

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
* 201	3-024-150-01	RETAINER (CHM)		209	3-010-252-11	ROLLER (CRE)	
* 202	X-3378-080-1	BRACKET (CHM. D) ASSY		210	3-010-268-01	SPRING (DH), TENSION	
204	3-321-813-01	WASHER, COTTER POLYETHYLENE		* 211	A-3290-194-C	MAIN ASSY, CHASSIS (EVY)	
205	3-017-139-01	GEAR (WORM LOAD A)		212	3-010-254-11	SHAFT (ROTARY PREVENTION C)	
206	3-022-839-01	ARM (NSW)		213	3-010-253-01	GEAR (LOMINI)	
207	3-573-936-00	STOPPER, REEL		* 214	A-3326-000-A	RF BOARD, COMPLETE	
208	X-3375-220-1	GEAR (LOAD CAM) ASSY		M103	A-3301-123-A	ELJ MOTOR ASSY (CHUCKING)	

(5) MECHANISM DECK SECTION-4
(MG-251A-137)

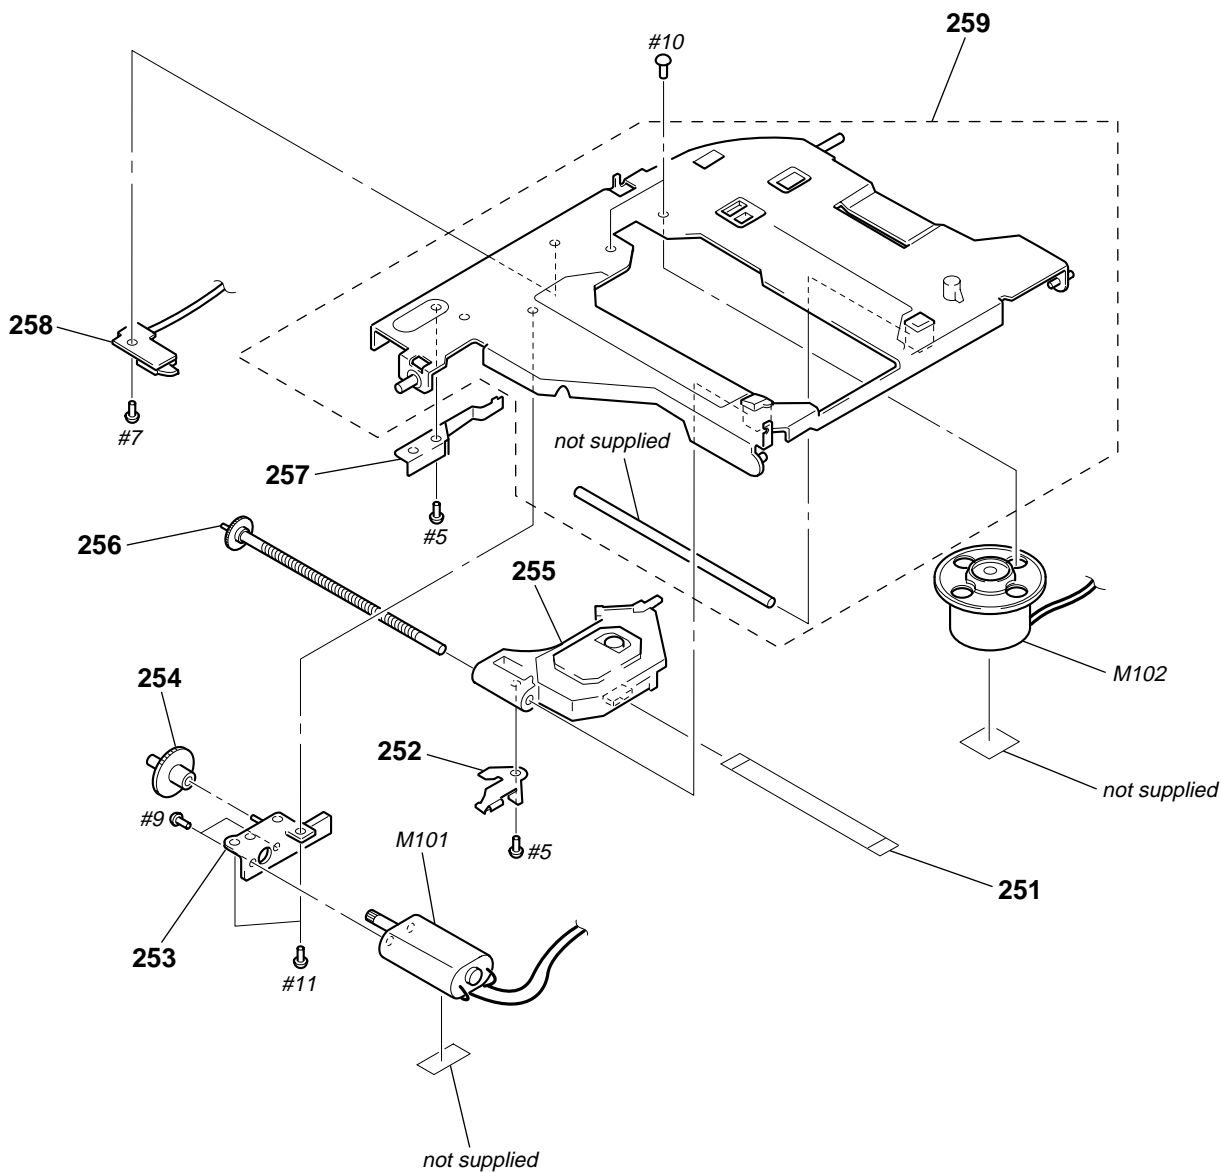

<p>The components identified by mark \triangle or dotted line with mark \triangle are critical for safety. Replace only with part number specified.</p>	<p>Les composants identifiés par une marque \triangle sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.</p>
---	--

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
251	1-676-341-11	OP FLEXIBLE BOARD		257	3-010-263-01	DETENT (SHAFT THRUST)	
252	3-025-743-01	SPRING (FEED), LEAF		* 258	1-676-524-11	LSW BOARD	
253	X-3378-101-1	HOLDER (SLED. S) ASSY		259	A-3301-954-A	BASE (OPT. S) (J) ASSY	
254	3-931-832-01	GEAR (SL MIDWAY)		M101	A-3315-151-A	SLED MOTOR ASSY (251)	
\triangle 255	8-820-103-05	OPTICAL PICK-UP KSS-720A/Q-RP		M102	A-3301-998-A	SPINDLE MOTOR (S) SUB ASSY	
256	A-3291-669-A	SHAFT (FEED) ASSY					

SECTION 8 ELECTRICAL PARTS LIST

NOTE:

- Due to standardization, replacements in the parts list may be different from the parts specified in the diagrams or the components used on the set.
- -XX and -X mean standardized parts, so they may have some difference from the original one.
- **RESISTORS**
All resistors are in ohms.
METAL: Metal-film resistor.
METAL OXIDE: Metal oxide-film resistor.
F: nonflammable

- Items marked “*” are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- **SEMICONDUCTORS**
In each case, u: μ , for example:
uA. . . : μ A. . . uPA. . . : μ PA. . .
uPB. . . : μ PB. . . uPC. . . : μ PC. . .
uPD. . . : μ PD. . .
- **CAPACITORS**
uF: μ F
- **COILS**
uH: μ H

The components identified by mark Δ or dotted line with mark Δ are critical for safety. Replace only with part number specified.

Les composants identifiés par une marque Δ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

When indicating parts by reference number, please include the board.

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
*	1-675-515-12	JACK BOARD *****		C111	1-162-965-11	CERAMIC CHIP 0.0015uF 10%	50V
		< CAPACITOR >		C112	1-115-467-11	CERAMIC CHIP 0.22uF 10%	10V
C901	1-162-964-11	CERAMIC CHIP 0.001uF 10%	50V	C120	1-162-967-11	CERAMIC CHIP 0.0033uF 10%	50V
C902	1-164-360-11	CERAMIC CHIP 0.1uF	16V	C121	1-164-360-11	CERAMIC CHIP 0.1uF	16V
C904	1-162-927-11	CERAMIC CHIP 100PF 5%	50V	C122	1-125-837-11	CERAMIC CHIP 1uF 10%	6.3V
		< CONNECTOR >		C123	1-162-970-11	CERAMIC CHIP 0.01uF 10%	25V
CN901	1-779-077-51	PLUG, CONNECTOR (CONTROL, ANALOG OUT)		C124	1-162-965-11	CERAMIC CHIP 0.0015uF 10%	50V
CNJ901	1-778-775-21	CONNECTOR, FPC 13P		C125	1-165-176-11	CERAMIC CHIP 0.047uF 10%	16V
		< DIODE >		C126	1-164-360-11	CERAMIC CHIP 0.1uF	16V
D901	8-719-978-33	DIODE DTZ-TT11-6.8B		C127	1-162-960-11	CERAMIC CHIP 220PF 10%	50V
D902	8-719-978-33	DIODE DTZ-TT11-6.8B		C129	1-164-360-11	CERAMIC CHIP 0.1uF	16V
		< FERRITE BEAD >		C130	1-164-360-11	CERAMIC CHIP 0.1uF	16V
FB901	1-500-445-21	FERRITE		C131	1-164-156-11	CERAMIC CHIP 0.1uF	25V
FB902	1-500-445-21	FERRITE		C133	1-164-156-11	CERAMIC CHIP 0.1uF	25V
FB903	1-500-445-21	FERRITE		C140	1-162-963-11	CERAMIC CHIP 680PF 10%	50V
		< IC LINK >		C141	1-162-963-11	CERAMIC CHIP 680PF 10%	50V
PS901	1-576-398-21	RINK, IC (CCP2E63) 2.5A/72V		C142	1-164-217-11	CERAMIC CHIP 150PF 5%	50V
*****				C143	1-164-217-11	CERAMIC CHIP 150PF 5%	50V
*	1-676-524-13	LSW BOARD *****		C144	1-126-382-11	ELECT 100uF 20%	16V
		< SWITCH >		C145	1-126-382-11	ELECT 100uF 20%	16V
SW3	1-786-079-21	SWITCH, PUSH (1 KEY) (LIMIT)		C201	1-107-826-11	CERAMIC CHIP 0.1uF 10%	16V
*****				C203	1-164-360-11	CERAMIC CHIP 0.1uF	16V
*	A-3294-822-A	MAIN BOARD, COMPLETE *****		C204	1-164-360-11	CERAMIC CHIP 0.1uF	16V
	1-676-339-12	MAIN FLEXIBLE BOARD		C205	1-164-360-11	CERAMIC CHIP 0.1uF	16V
	1-676-340-12	JACK FLEXIBLE BOARD		C301	1-164-360-11	CERAMIC CHIP 0.1uF	16V
		< CAPACITOR >		C302	1-164-360-11	CERAMIC CHIP 0.1uF	16V
C101	1-164-360-11	CERAMIC CHIP 0.1uF	16V	C303	1-164-360-11	CERAMIC CHIP 0.1uF	16V
C102	1-164-360-11	CERAMIC CHIP 0.1uF	16V	C304	1-164-360-11	CERAMIC CHIP 0.1uF	16V
C103	1-164-360-11	CERAMIC CHIP 0.1uF	16V	C305	1-162-964-11	CERAMIC CHIP 0.001uF 10%	50V
C104	1-162-970-11	CERAMIC CHIP 0.01uF 10%	25V	C306	1-162-968-11	CERAMIC CHIP 0.0047uF 10%	50V
C110	1-162-965-11	CERAMIC CHIP 0.0015uF 10%	50V	C307	1-165-112-11	CERAMIC CHIP 0.33uF 20%	10V
				C308	1-125-837-11	CERAMIC CHIP 1uF 10%	6.3V
				C309	1-164-360-11	CERAMIC CHIP 0.1uF	16V
				C310	1-137-920-21	ELECT 4700uF	5.5V
				C311	1-126-382-11	ELECT 100uF 20%	16V
				C312	1-115-156-11	CERAMIC CHIP 1uF	10V
				C313	1-126-382-11	ELECT 100uF 20%	16V
				C314	1-164-360-11	CERAMIC CHIP 0.1uF	16V
				C315	1-115-466-00	ELECT 1000uF 20%	16V
				C316	1-126-382-11	ELECT 100uF 20%	16V
				C317	1-164-360-11	CERAMIC CHIP 0.1uF	16V
				C318	1-164-360-11	CERAMIC CHIP 0.1uF	16V
				C401	1-162-962-11	CERAMIC CHIP 470PF 10%	50V
				C402	1-162-962-11	CERAMIC CHIP 470PF 10%	50V

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
C403	1-126-382-11	ELECT 100uF 20%	16V	R143	1-218-871-11	RES-CHIP 10K 2%	1/16W
C404	1-126-157-11	ELECT 10uF 20%	16V	R144	1-218-871-11	RES-CHIP 10K 2%	1/16W
C405	1-126-157-11	ELECT 10uF 20%	16V	R145	1-218-871-11	RES-CHIP 10K 2%	1/16W
C406	1-162-927-11	CERAMIC CHIP 100PF 5%	50V	R201	1-216-821-11	METAL CHIP 1K 5%	1/16W
C407	1-162-927-11	CERAMIC CHIP 100PF 5%	50V	R207	1-216-845-11	METAL CHIP 100K 5%	1/16W
< DIODE >				R209	1-216-833-11	METAL CHIP 10K 5%	1/16W
D302	8-719-017-94	DIODE MA8180		R301	1-216-841-11	METAL CHIP 47K 5%	1/16W
D303	8-719-017-94	DIODE MA8180		R302	1-216-845-11	METAL CHIP 100K 5%	1/16W
D306	8-719-069-56	DIODE UDZS-TE17-6.2B		R303	1-216-846-11	METAL CHIP 120K 5%	1/16W
D307	8-719-988-61	DIODE 1SS355TE-17		R304	1-216-847-11	METAL CHIP 150K 5%	1/16W
D309	8-719-988-61	DIODE 1SS355TE-17		R305	1-216-841-11	METAL CHIP 47K 5%	1/16W
D310	8-719-977-03	DIODE DTZ5.6B		R306	1-216-844-11	METAL CHIP 82K 5%	1/16W
D313	8-719-071-34	DIODE RB521S-30-TE61		R308	1-216-864-11	METAL CHIP 0 5%	1/16W
D314	8-719-071-34	DIODE RB521S-30-TE61		R309	1-216-864-11	METAL CHIP 0 5%	1/16W
D315	8-719-071-34	DIODE RB521S-30-TE61		R311	1-216-841-11	METAL CHIP 47K 5%	1/16W
< IC >				R401	1-218-871-11	RES-CHIP 10K 2%	1/16W
IC101	8-752-392-04	IC CXD2598Q		R402	1-218-871-11	RES-CHIP 10K 2%	1/16W
IC201	8-752-914-89	IC CXP740056-007R		R403	1-218-871-11	RES-CHIP 10K 2%	1/16W
IC301	8-759-527-33	IC LB1930M-TLM		R404	1-218-871-11	RES-CHIP 10K 2%	1/16W
IC302	8-759-697-48	IC BA8272FV-E2		R405	1-218-645-11	RES-CHIP 11K 2%	1/16W
IC303	8-759-363-81	IC XC61AN4002PR		R406	1-218-645-11	RES-CHIP 11K 2%	1/16W
IC304	8-759-833-13	IC NJM2395AF08		R407	1-216-833-11	METAL CHIP 10K 5%	1/16W
IC305	8-759-833-12	IC NJM2395AF05		R408	1-216-833-11	METAL CHIP 10K 5%	1/16W
IC401	8-759-662-11	IC TLV2362IPWR		R409	1-218-645-11	RES-CHIP 11K 2%	1/16W
< COIL >				R410	1-218-645-11	RES-CHIP 11K 2%	1/16W
L140	1-414-398-11	INDUCTOR (SMD)10uH		R411	1-216-813-11	METAL CHIP 220 5%	1/16W
< TRANSISTOR >				R412	1-216-813-11	METAL CHIP 220 5%	1/16W
Q201	8-729-020-67	TRANSISTOR XN1A312-TX		R413	1-216-845-11	METAL CHIP 100K 5%	1/16W
Q301	8-729-028-62	TRANSISTOR DTA115EKA-T146		R414	1-216-845-11	METAL CHIP 100K 5%	1/16W
Q302	8-729-230-49	TRANSISTOR 2SC2712-YG		< VARIABLE RESISTOR >			
Q303	8-729-921-12	TRANSISTOR 2SD1834		RV201	1-223-834-11	RES, ADJ, CARBON 47K	
Q403	8-729-020-67	TRANSISTOR XN1A312-TX		< SWITCH >			
Q410	8-729-015-39	TRANSISTOR DTC323TK		SW201	1-786-079-21	SWITCH, PUSH (1 KEY) (MAGAZINE DETECT)	
Q420	8-729-015-39	TRANSISTOR DTC323TK		< VIBRATOR >			
< RESISTOR >				X130	1-760-307-11	VIBRATOR, CERAMIC (16.9344MHz)	
R101	1-216-833-11	METAL CHIP 10K 5%	1/16W	X201	1-579-126-11	VIBRATOR, CERAMIC (12MHz)	
R111	1-216-833-11	METAL CHIP 10K 5%	1/16W	*****			
R112	1-216-845-11	METAL CHIP 100K 5%	1/16W	*	A-3326-000-A	RF BOARD, COMPLETE	
R114	1-216-833-11	METAL CHIP 10K 5%	1/16W	*****			
R115	1-216-833-11	METAL CHIP 10K 5%	1/16W	< CAPACITOR >			
R116	1-216-837-11	METAL CHIP 22K 5%	1/16W	C101	1-107-826-11	CERAMIC CHIP 0.1uF 10%	16V
R117	1-216-845-11	METAL CHIP 100K 5%	1/16W	C102	1-126-206-11	ELECT CHIP 100uF 20%	6.3V
R120	1-216-839-11	METAL CHIP 33K 5%	1/16W	C103	1-162-970-11	CERAMIC CHIP 0.01uF 10%	25V
R121	1-216-853-11	METAL CHIP 470K 5%	1/16W	C104	1-107-826-11	CERAMIC CHIP 0.1uF 10%	16V
R122	1-216-853-11	METAL CHIP 470K 5%	1/16W	C105	1-125-837-11	CERAMIC CHIP 1uF 10%	6.3V
R123	1-216-833-11	METAL CHIP 10K 5%	1/16W	C106	1-126-206-11	ELECT CHIP 100uF 20%	6.3V
R124	1-216-827-11	METAL CHIP 3.3K 5%	1/16W	C107	1-162-915-11	CERAMIC CHIP 10PF 0.5PF	50V
R125	1-216-827-11	METAL CHIP 3.3K 5%	1/16W	C108	1-124-779-00	ELECT CHIP 10uF 20%	16V
R126	1-216-857-11	METAL CHIP 1M 5%	1/16W	C109	1-107-826-11	CERAMIC CHIP 0.1uF 10%	16V
R140	1-218-871-11	RES-CHIP 10K 2%	1/16W	C110	1-126-206-11	ELECT CHIP 100uF 20%	6.3V
R141	1-218-871-11	RES-CHIP 10K 2%	1/16W	C111	1-124-779-00	ELECT CHIP 10uF 20%	16V
R142	1-218-871-11	RES-CHIP 10K 2%	1/16W	C201	1-117-681-11	ELECT CHIP 100uF 20%	16V

RF SWITCH

Ref. No.	Part No.	Description	Remark
C202	1-107-826-11	CERAMIC CHIP 0.1uF 10%	16V
C203	1-162-962-11	CERAMIC CHIP 470PF 10%	50V
C204	1-162-962-11	CERAMIC CHIP 470PF 10%	50V
C205	1-162-962-11	CERAMIC CHIP 470PF 10%	50V
C206	1-162-962-11	CERAMIC CHIP 470PF 10%	50V
C207	1-164-227-11	CERAMIC CHIP 0.022uF 10%	25V
C208	1-164-227-11	CERAMIC CHIP 0.022uF 10%	25V
C209	1-164-227-11	CERAMIC CHIP 0.022uF 10%	25V
C217	1-107-826-11	CERAMIC CHIP 0.1uF 10%	16V
< CONNECTOR >			
CN102	1-778-303-21	CONNECTOR, FPC (ZIF) 16P	
CNJ101	1-778-777-21	CONNECTOR, FPC 26P	
< IC >			
IC101	8-752-095-36	IC CXA2596M-T6	
IC201	8-759-832-99	IC LA6576L-TE-L	
< TRANSISTOR >			
Q101	8-729-141-48	TRANSISTOR 2SB624-BV345	
< RESISTOR >			
R101	1-216-847-11	METAL CHIP 150K 5%	1/16W
R102	1-216-847-11	METAL CHIP 150K 5%	1/16W
R103	1-216-864-11	METAL CHIP 0 5%	1/16W
R104	1-216-158-00	RES-CHIP 22 5%	1/8W
R105	1-216-857-11	METAL CHIP 1M 5%	1/16W
R106	1-216-857-11	METAL CHIP 1M 5%	1/16W
R107	1-216-864-11	METAL CHIP 0 5%	1/16W
R108	1-216-845-11	METAL CHIP 100K 5%	1/16W
R109	1-216-837-11	METAL CHIP 22K 5%	1/16W
R110	1-216-821-11	METAL CHIP 1K 5%	1/16W
R201	1-216-826-11	METAL CHIP 2.7K 5%	1/16W
R202	1-216-833-11	METAL CHIP 10K 5%	1/16W
R203	1-216-833-11	METAL CHIP 10K 5%	1/16W
R204	1-216-842-11	METAL CHIP 56K 5%	1/16W
R205	1-216-833-11	METAL CHIP 10K 5%	1/16W
R206	1-216-842-11	METAL CHIP 56K 5%	1/16W
R207	1-216-833-11	METAL CHIP 10K 5%	1/16W
R208	1-216-842-11	METAL CHIP 56K 5%	1/16W
R209	1-216-833-11	METAL CHIP 10K 5%	1/16W
R210	1-216-842-11	METAL CHIP 56K 5%	1/16W
R211	1-216-833-11	METAL CHIP 10K 5%	1/16W
R212	1-216-839-11	METAL CHIP 33K 5%	1/16W
R213	1-216-833-11	METAL CHIP 10K 5%	1/16W
R214	1-216-839-11	METAL CHIP 33K 5%	1/16W
R215	1-216-839-11	METAL CHIP 33K 5%	1/16W
R216	1-216-842-11	METAL CHIP 56K 5%	1/16W
R218	1-216-839-11	METAL CHIP 33K 5%	1/16W
R219	1-216-843-11	METAL CHIP 68K 5%	1/16W
R220	1-216-834-11	METAL CHIP 12K 5%	1/16W
R222	1-216-821-11	METAL CHIP 1K 5%	1/16W
R223	1-216-821-11	METAL CHIP 1K 5%	1/16W

Ref. No.	Part No.	Description	Remark
< SWITCH >			
SW1	1-529-566-21	SWITCH, PUSH (1 KEY) (CHUCKING END DETECT)	
SW2	1-529-566-21	SWITCH, PUSH (1 KEY) (SAVE END DETECT)	

*	1-675-516-12	SWITCH BOARD	

SW801	1-571-532-21	SWITCH, TACTIL (▲)	

MISCELLANEOUS			

251	1-676-341-11	OP FLEXIBLE BOARD	
▲255	8-820-103-05	OPTICAL PICK-UP KSS-720A/Q-RP	
M101	A-3315-151-A	SLED MOTOR ASSY (251)	
M102	A-3301-998-A	SPINDLE MOTOR (S) SUB ASSY	
M103	A-3301-123-A	ELJ MOTOR ASSY (CHUCKING)	
M104	A-3301-123-A	ELJ MOTOR ASSY (ELEVATOR)	
RV202	1-227-137-11	RES, VAR, SLIDE 10K (ELEVATOR HEIGHT SENSOR)	

HARDWARE LIST			

#2	7-685-792-09	SCREW +PTT 2.6X6 (S)	
#3	7-685-781-09	SCREW +PTT 2X4 (S)	
#4	7-624-104-04	STOP RING 2.0, TYPE-E	
#5	7-627-554-07	SCREW, PRECISION +P 2X2.2	
#6	7-628-253-00	SCREW +PS 2X4	
#7	7-627-553-27	SCREW, PRECISION +P 2X2.5	
#8	7-624-102-04	STOP RING 1.5, TYPE-E	
#9	7-627-850-28	SCREW, PRECISION +P 1.4X3	
#10	7-627-000-00	SCREW, PRECISION +P1.7X2.2 TYPE 3	
#11	7-627-553-37	PRECISION SCREW +P 2X3 TYPE 3	

ACCESSORIES & PACKING MATERIALS			

3-225-284-11	MANUAL, INSRTUCTION (ENGLISH, FRENCH, SPANISH, TRADITIONAL CHINESE)		
3-225-284-21	MANUAL, INSRTUCTION (ENGLISH, FRENCH, GERMAN, DUTCH, ITALIAN) (646)		
3-225-284-31	MANUAL, INSRTUCTION (SPANISH, SWEDISH, PORTUGUESE, POLISH, RUSSIAN, GREEK) (646)		
A-3301-944-A	MAGAZINE (250T) ASSY		

The components identified by mark ▲ or dotted line with mark ▲ are critical for safety. Replace only with part number specified.	Les composants identifiés par une marque ▲ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.
--	--

Ref. No.	Part No.	Description	Remark
----------	----------	-------------	--------

PARTS FOR INSTALLATION AND CONNECTIONS

501	3-040-583-21	BRACKET (T)	
* 502	X-3369-824-1	SCREW ASSY	
503	1-590-874-11	CORD, CONNECTION (RCA PIN CORD 5.5m)	
504	1-590-519-21	CORD (WITH CONNECTOR) (BUS CABLE 5.5m)	

