

Service
Service
Service

Service Manual

Contents	Page	Contents	Page
1 Technical specifications, Connection facilities and chassis overview	2	Video control (amp) Geometry (Diagram K6)	74 76,77
2 Safety instructions, maintenance, warnings and Notes	4	Teletext (amp) Control (Diagram K7)	75 76,77
3 Directions for use	6	8 Electrical alignments	79
4 Mechanical instructions	23	9 Circuit Descriptions (see also Training manual)	85
5 Service modes, DST, error messages, protections, faultfinding and repair tips including:	24	List of abbreviations	85
Errorcodes-table	29	10 Spare parts list	87
Fault find tree	31		
6 Block diagrams			
Block diagram	34		
Block diagram (Video, Audio, Control)	35		
Survey of testpoints	36		
Oscillograms	38		
7 Electrical Diagrams and PWB lay-outs	Diagram PWB		
Power Supply	40,41 42,43		
HV Scan	44,45 46,47		
Mains switch Panel	48 48		
Convergence panel	49-51 52		
Scavem panel	53 54		
CRT green	55 56		
CRT red	57 56		
CRT blue	58 59		
Audio Amplifier	60 59		
Rear switch panel	61 62		
Front Jack panel	63 62		
Interface panel	64,65 66		
Customer control	67 68		
Tuner, IF, I/O, Video processing (Diagram K1)	69 76,77		
Input / Output (Diagram K2)	70 76,77		
Sound processing (Diagram K3)	71 76,77		
Audio Dolby (Diagram K4)	72 76,77		
Featurebox 6 (Eco) (Diagram K5)	73 76,77		

©Copyright reserved 1999 Philips Consumer Electronics B.V. Eindhoven, The Netherlands. All rights reserved. No part of this publication may be reproduced, stored in a retrieval system or transmitted, in any form or by any means, electronic, mechanical, photocopying, or otherwise without the prior permission of Philips.



PHILIPS

1. Technical specifications

1.1 Specifications

Mains voltage	: 220V - 240V ($\pm 10\%$); 50-60Hz ($\pm 5\%$)
Aerial input impedance	: coaxial 75 Ω
Minimal aerial voltage	: 30 μ V (VHF), 40 μ V (UHF)
Maximum aerial voltage	: 180 mV
Programmes	: 0-99
VCR programmes	: 0, 90-99

1.2 Specification of the terminal sockets

1.2.1 Front connections

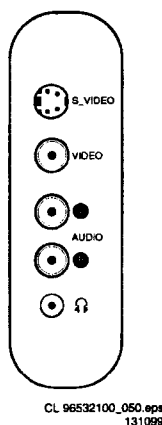


Figure 1-1

Audio/Video

- Video	1Vpp/75 Ω
- Audio	L(0.5Vrms $\geq 10k\Omega$)
- Audio	R(0.5Vrms $\geq 10k\Omega$)
- Headphone	(32-600 Ω $\geq 10m\Omega$)



SVHS


1 -	
2 -	
3 - Y	(1Vpp; 75 Ω)
4 - C	(0.3 Vpp; 75 Ω)



1.2.2 Rear connections

See figure 1.2

External 1 (in/out): RGB+CVBS

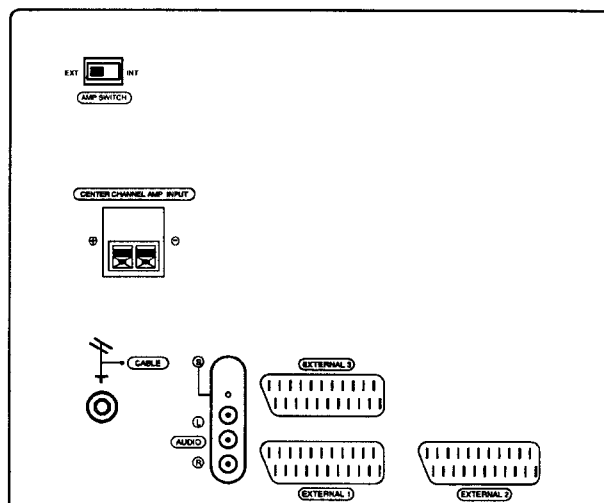

CL 96532100_051.eps
141099

Figure 1-2

1 - Audio	R (0.5Vrms $\leq 1k\Omega$)	⊕
2 - Audio	R (0.5Vrms $\geq 10k\Omega$)	⊕
3 - Audio	L (0.5Vrms $\leq 1k\Omega$)	⊕
4 - Audio		⊕
5 - Blue		⊕
6 - Audio	L (0.5Vrms $\geq 10k\Omega$)	⊕
7 - Blue	(0.7Vpp/75 Ω)	⊕
8 - CVBS-status	0-1.3V:INT 4.5-7V:EXT 16:9 9.5-12V:EXT 4:3	⊕
9 - Green		⊕
10-		⊕
11- Green	(0.7Vpp/75 Ω)	⊕
12-		⊕
13- Red		⊕
14- RGB-status		⊕
15- Red	(0.7Vpp/75 Ω)	⊕
16- RGB-status	0-0.4V:INT 1-3V:EXT/75 Ω	⊕
17- CVBS		⊕
18- CVBS		⊕
19- CVBS	(1Vpp/75 Ω)	⊕
20- CVBS	(1Vpp/75 Ω)	⊕
21- Earth socket		⊕



External 2 (in/out): SVHS+RGB+CVBS (intended for VCR.)

1 - Audio	R (0.5Vrms $\leq 1k\Omega$)	⊕
2 - Audio	R (0.5Vrms $\geq 10k\Omega$)	⊕
3 - Audio	L (0.5Vrms $\leq 1k\Omega$)	⊕
4 - Audio		⊕
5 - Blue		⊕
6 - Audio	L (0.5Vrms $\geq 10k\Omega$)	⊕
7 - Blue /		⊕
Chroma out	(0.7Vpp/75 Ω)	⊕
8 - CVBS-status	0-1.3V:INT 4.5-7V:EXT 16:9 9.5-12V:EXT 4:3	⊕
9 - Green		⊕
10-	Easy link	⊕
11- Green	(0.7Vpp/75 Ω)	⊕
12-		⊕
13- Red		⊕
14- RGB-status		⊕

15- Red / chroma-		
in	(0.7Vpp/75Ω)	⊕
16- RGB-status	(0-0.4V:INT	
	1-3V:EXT/75Ω)	
17- CVBS		⊕
18- CVBS		⊕
19- Y/CVBS	(1Vpp/75Ω)	⊕
20- Y/CVBS	(1Vpp/75Ω)	⊕
21- Earth socket		

External 3 (In): CVBS+Audio (optional)

1 -		
2 - Audio	R (0.5Vrms >10kΩ)	⊕
3 -		
4 - Audio		⊕
5 -		
6 - Audio	L (0.5Vrms >10kΩ)	⊕
7 -		
8 - CVBS-status	0-1.3V:INT	
	4.5-7V:EXT 16:9	
	9.5-12V:EXT 4:3	⊕
9 -		
10-		
11-		
12-		
13-		
14-		
15-		
16-		
17- CVBS		⊕
18- CVBS		⊕
19-		
20- CVBS	(1Vpp/75Ω)	⊕
21- Earth socket		

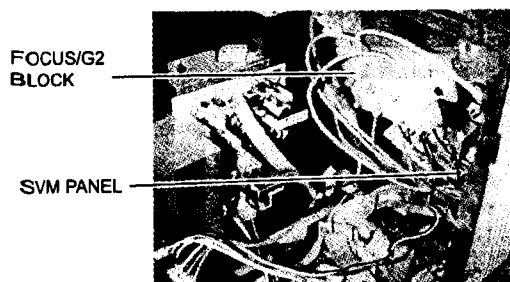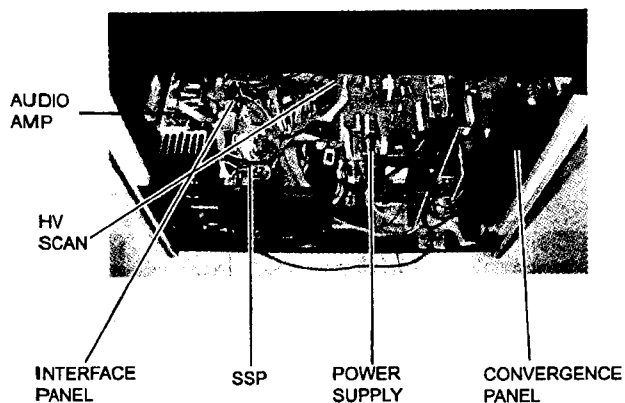

CL 9953E100_002.dwg
14/10/98

Figure 1-3

2. Safety instructions, Maintenance instruction, Warnings and Notes

2.1 Safety instructions for repairs ▲

1. Safety regulations require that during a repair:
 - The set should be connected to the mains via an isolating transformer;
 - Safety components, indicated by the symbol ▲, should be replaced by components identical to the original ones;
 - When replacing the CRT, safety goggles must be worn.
2. Safety regulations require that after a repair the set must be returned in its original condition. In particular attention should be paid to the following points.
 - As a strict precaution, we advise you to resolder the solder joints through which the horizontal deflection current is flowing, in particular ('general repair instruction'):
 - All pins of the line output transformer (LOT);
 - Fly-back capacitor(s);
 - S-correction capacitor(s);
 - Line output transistor;
 - Pins of the connector with wires to the deflection coil;
 - Other components through which the deflection current flows.
 - Note:
 - This resoldering is advised to prevent bad connections due to metal fatigue in solder joints and is therefore only necessary for television sets older than 2 years.
 - The wire trees and EHT cable should be routed correctly and fixed with the mounted cable clamps.
 - The insulation of the mains lead should be checked for external damage.
 - The mains lead strain relief should be checked for its function in order to avoid touching the CRT, hot components or heat sinks.
 - The electrical DC resistance between the mains plug and the secondary side should be checked (only for sets which have a mains isolated power supply). This check can be done as follows:
 - Unplug the mains cord and connect a wire between the two pins of the mains plug;
 - Set the mains switch to the "on" position (keep the mains cord unplugged!);
 - Measure the resistance value between the pins of the mains plug and the metal shielding of the tuner or the aerial connection on the set. The reading should be between 4.5 MΩ and 12 MΩ
 - Switch off the TV and remove the wire between the two pins of the mains plug.
 - The cabinet should be checked for defects to avoid touching of any inner parts by the customer.

2.2 Maintenance instruction

It is recommended to have a maintenance inspection carried out by a qualified service employee. The interval depends on the usage conditions:

- When the set is used under normal circumstances, for example in a living room, the recommended interval is 3 to 5 years.
- When the set is used in circumstances with higher dust, grease or moisture levels, for example in a kitchen, the recommended interval is 1 year.
- The maintenance inspection contains the following actions:
 - Execute the above mentioned 'general repair instruction'.

- Clean the power supply and deflection circuitry on the chassis.
- Clean the picture tube panel and the neck of the picture tube.

2.3 Warnings

1. ESD ▲
2. All ICs and many other semiconductors are susceptible to electrostatic discharges (ESD). Careless handling during repair can reduce life drastically. When repairing, make sure that you are connected with the same potential as the mass of the set by a wristband with resistance. Keep components and tools also at this same potential.
3. Available ESD protection equipment:
 - Complete kit ESD3 (small table mat, Wristband, Connection box, Extension cable and Earth cable) 4822 310 10671
 - Wristband tester 4822 344 13999
4. In order to prevent damage to ICs and transistors, all high-voltage flashovers must be avoided. In order to prevent damage to the picture tube, the method shown in Fig. 2-4 should be used to discharge the picture tube. Use a high-voltage probe and a multimeter (position DC-V). Discharge until the meter reading is 0V (after approx. 30s).
5. Together with the deflection unit and any multipole unit, the flat square picture tubes used form an integrated unit. The deflection and the multipole units are set optimally at the factory. Adjustment of this unit during repair is therefore not recommended.
6. Be careful during measurements in the high-voltage section and on the picture tube.
7. Never replace modules or other components while the unit is switched on.
8. When making settings, use plastic rather than metal tools. This will prevent any short circuits and the danger of a circuit becoming unstable.
9. Wear safety goggles during replacement of the picture tube.

2.4 Notes

The direct voltages and oscillograms should be measured with regard to the tuner earth (⊥), or hot earth (⚡) as this is called. The direct voltages and oscillograms shown in the diagrams are indicative and should be measured in the Service Default Mode (see chapter 5) with a colour bar signal and stereo sound (L:3 kHz, R:1 kHz unless stated otherwise) and picture carrier at 475.25 MHz.

Where necessary, the oscillograms and direct voltages are measured with (⊥) and without aerial signal (⚡). Voltages in the power supply section are measured both for normal operation (⊕) and in standby (⓪). These values are indicated by means of the appropriate symbols.

The picture tube PWB has printed spark gaps. Each spark gap is connected between an electrode of the picture tube and the Aquadag coating.

The semiconductors indicated in the circuit diagram and in the parts lists are completely interchangeable per position with the semiconductors in the unit, irrespective of the type indication on these semiconductors.

4. Disassembly procedure

4.1 To remove the rear cover

1. Remove the 10 screws located on the sides and bottom of the lower center rear cover (1).
2. Remove the 3 screws on the bottom of the plastic upper rear cover (2). Remove the lower center rear cover (1).

Note: If you are only servicing a PWB or loudspeaker, you do not have to remove the plastic upper rear cover.

1. Remove the remaining 11 screws located in the upper rear cover (2). Lift cover up to dislodge from pegs and remove the cover.
2. Remove the 6 screws located in the mirror mounting board (18) and remove the board.

Note: care should be taken NOT to place fingerprints or smudges on the mirror.

1. Remove the 2 screws located in the plastic light barrier (16) and remove the barrier.
2. Remove the 12 screws located in the end rear covers (3), 6 per cover, and remove each cover.

4.2 To remove the optical assembly or individual light box assemblies

1. Separate CRT boards from assemblies to be removed.
2. To remove the optical assembly, loosen the 4 screws located in the assembly and lift assembly up and out.
3. To remove individual assemblies, loosen the 4 screws located in the assembly you wish to remove and lift the assembly up and out.

4.3 To remove the digital convergence panel

1. Remove the 2 screws located in the digital convergence panel frame. Lift the frame and panel to remove.

4.4 To remove the 25W amplifier panel

1. Remove the 2 screws located at the top of the 25W amplifier panel frame. Lift the frame and panel to remove.

4.5 To remove the rear switch panel

1. Remove the 2 screws located on the bottom of the rear switch panel. Press 2 tabs on the right side, slide back and remove the panel.

4.6 To remove the power supply


1. Remove the 3 screws located in the power supply panel. Press 3 tabs on the left side and remove the panel.

4.7 To remove the interface panel

1. Pull 2 tabs in the front of the interface panel. Lift the panel and slide forward to remove.

4.8 To remove the side jack panel

1. Remove 2 screws from the side jack panel frame. Slide the panel out to remove.

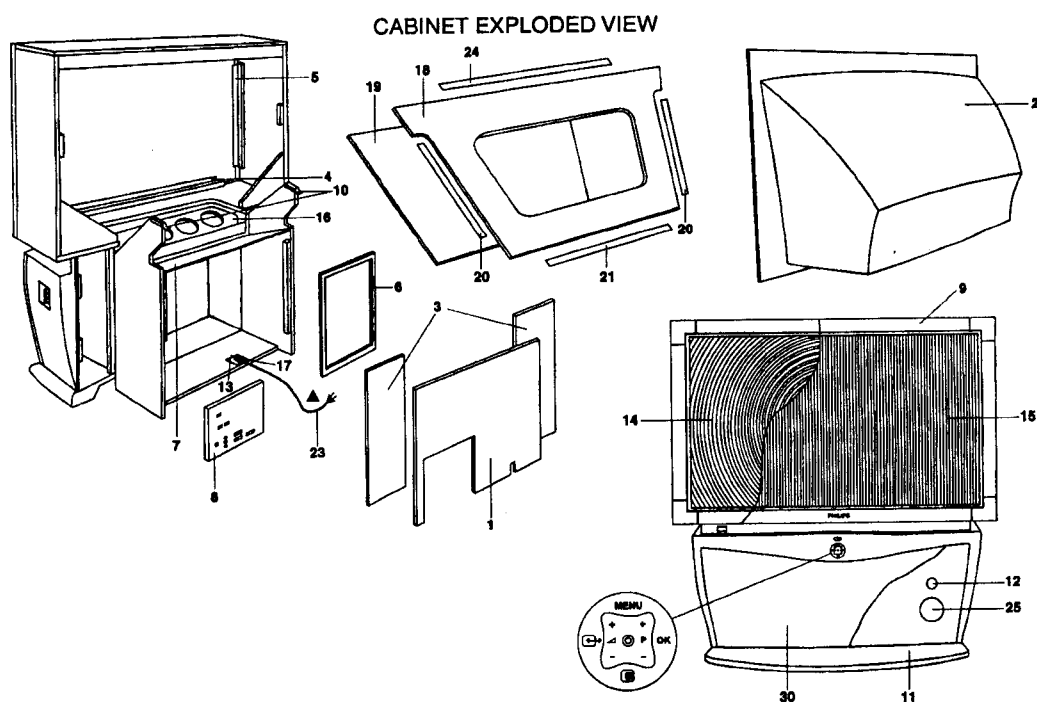

CL 96532100_061.eps
141099

Figure 4-1

5. Service modes, error codes and protections

In this chapter the following paragraphs are included:

- 5.1 Test points
- 5.2 Service modes and Dealer Service Tool and ComPair (including fault finding tips related to CSM-mode)
- 5.3 Error codes
- 5.4 Fault find tree

5.1 Test points

The MG5.1E chassis is equipped with test points in the service printing. These test points are referring to the functional blocks:

- P1-P2-P3, etc.: Test points for the power supply.
- L1-L2-L3, etc.: Test points for the line drive and line output circuitry.
- F1K-F2K-F3K, etc. on Small Signal Panel: Test points for the frame drive.
- F1F-F2F-F3F, etc. on CRT/Scavem Panel: Test points for the CRT-panel circuitry.
- F1-F2-F3, etc. on Large Small Signal Panel: Test points for the frame output circuitry.
- S1-S2-S3, etc.: Test points for the synchronisation circuitry.
- V1-V2-V3, etc.: Test points for the video processing circuitry.
- I1-I2-I3, etc.: Test points for the Tuner/IF part.
- A1-A2-A3, etc. on Small Signal Panel: Test points for the audio processing circuitry.
- A1-A2-A3, etc. on Large Signal Panel: Test points for the audio amplifiers.
- C1-C2-C3, etc.: Test points for the control circuitry.
- T1-T2-T3, etc.: Testpoints for the teletext circuitry.
- SC1-SC2-SC3, etc.: Test points for the Scavem circuitry.

The numbering is done in a for diagnostics logical sequence; always start diagnosing within a functional block in the sequence of the relevant test points for that functional block.

5.2 Service modes, Dealer Service Tool and ComPair

For easy installation and diagnosis the dealer remote control RC7150 is introduced. The RC7150 can be used for all new TV sets, including all set of the MG5.1E chassis. The RC7150 is also called Dealer Service Tool or DST. The ordering number of the DST (RC7150) is 4822 218 21232.

5.2.1 Installation features for the dealer

The dealer can use the RC7150 for programming the TV-set with presets. 10 Different program tables can be programmed into the DST via a TV-set (downloading from the GFL, MD2 or MG2.1 to the DST; see GFL, MD2 and MG2.1 service manuals) or by the DST-I (DST interface; ordering code 4822 218 21277).

For explanation of the installation features of the DST, the directions for use of the DST (4822 727 20073) are recommended (for the MG5.1E chassis, download code 4 should be used).

5.2.2 Diagnose features for the servicer

The MG5.1E sets can be put in the two service modes via the DST RC7150. These are the Service Default Mode (SDM) and the Service Alignment Mode (SAM). The SDM and SAM can also be entered by short circuiting the relevant pins on the SSP.

Service Default Mode (SDM)

Specification of the SDM:

- Tuning frequency 475.25 MHz.
- TV-system for BGLM sets set to BG, for BGLL'I sets to LL'.
- All picture settings at 50% (brightness, colour, contrast, HUE).
- All sound settings at 50% except volume at 25% (so bass, treble, balance at 50%, volume at 25%).
- All service-unfriendly modes are disabled (like sleep timer, child lock, blue mute).

Entering the SDM can be done in 2 ways:

- By the "DEFAULT" key on the DST while the set is in the normal operation mode.
- By short-circuiting for a moment the two pins (pin 2 and 3 of connector 0356) on the component side of the SSP with the indication "SDM" (activation can be performed in all modes except when the set has a problem with the main-processor).

Note: If the SDM is entered via the pins, all the protections are de-activated.

Exiting the SDM can only be done via the STANDBY command. By switching off-on the set with the mains switch the MG5.1E will come up again in the SDM.

Service Alignment Mode (SAM)

Specification of the SAM:

- Software alignments (see chapter 8).
- Option settings (see chapter 8).
- Error buffer reading and erasing. The most recent error code is displayed on the left side.
- Operation counter.
- Software version.

Entering the SAM can be done in 2 ways:

- By the button on the DST while the set is in the normal operation mode (or SDM). Enter the password '3-1-4-0' and press OK.
- By short-circuiting for a moment the two pins (pin 1 and 2 of connector 0356) on the component side of the SSP with the indication "SAM" (activation can be performed in all modes except when the set has a problem with the microprocessor).

Note: If the SAM is entered via the pins, all protections are de-activated.

Exiting the SAM can be done via the MENU command or via switching off-on the set with the mains switch.

Customer Service Mode (CSM)

All MG5.1E sets are equipped with the 'Customer Service Mode' (CSM). This 'Customer Service Mode' is a special service mode which can be activated and deactivated by the customer upon request of the service technician/dealer during a telephone conversation in order to identify the status of the set. This CSM is a 'read only' mode, therefore modifications in this mode are not possible.

Switching-on of the Customer Service Mode

The Customer Service Mode will switch-on after pressing simultaneously the "MUTE" knob on the remote control handset and the "MENU" button on the TV for at least 4 seconds. This activation only works if there is no menu on the screen.

Switching-off the Customer Service Mode

The Customer Service Mode will switch-off after pressing any key of the remote control handset (with exception of the "cursor-up" and "cursor-down" keys), or the buttons on the TV or by switching off the TV set with the mains switch.

Detailed explanation of the Customer service Mode
After switching on the Customer Service Menu the following screen will appear:

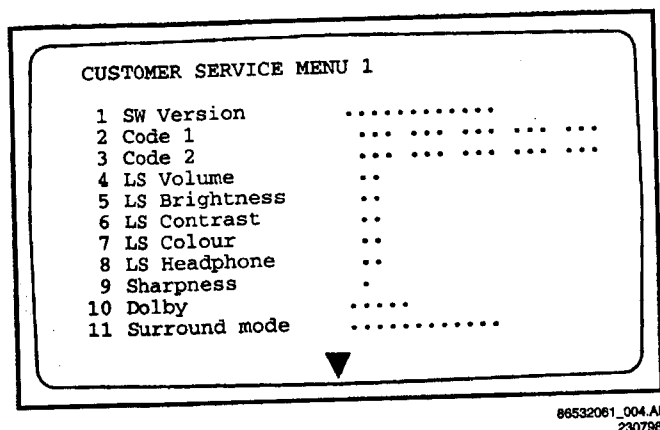


Figure 5-1 Customer Service Menu 1

Line 1: Software version; the build in software version (AAAABCX.Y)

- AAAA= MG21(chassis name)
- B = E (Europe)
- C = 1 (language cluster)
- X = main version number
- Y = sub version number

Details on the software version can be found in the chapter "Software Survey" of the publication "Product Survey - Colour Television".

Line 2: Code 1; gives the last 5 errors of the error buffer.
As soon as the built-in diagnose software has detected an error the buffer is adapted.

Line 3: Code 2; gives the first 5 errors of the error buffer.
As soon as the built-in diagnose software has detected an error the buffer is adapted.
The last occurred error is displayed on the leftmost position of code 2. Each error code is displayed as a 3 digit number. When less than 10 errors occur, the rest of the line(s) is(are) empty. In case of no errors the text "No Errors" is displayed. See paragraph 5.3 of this chapter for a description of the error codes.

Line 4: LS Volume; gives the Last Status of the volume as set by the customer for this selected transmitter.
The value can vary from 0 (volume is minimum) to 24 (volume is maximum). Volume values can be changed via the volume key on the remote control handset.

Line 5: LS Brightness; gives the Last Status of the brightness as set by the customer for this selected transmitter.
The value can vary from 0 (brightness is minimum) to 63 (brightness is maximum). Brightness values can be changed via the "cursor left" and "cursor right" keys on the remote control handset after pressing the red button for picture menu and selecting "brightness".

Line 6: LS Contrast; gives the Last Status of the contrast as set by the customer.
The value can vary from 0 (contrast is minimum) to 63 (contrast is maximum). Contrast values can be changed via "cursor left" and "cursor right" keys on the remote control handset after pressing the red button for picture menu and selecting "contrast".

Line 7: LS Colour; gives the Last Status of the colour saturation, as set by the customer.

The value can vary from 0 (colour is minimum) to 63 (colour is maximum). Colour values can be changed via "cursor left" and "cursor right" keys on the remote control handset after pressing the red button for picture menu and selecting "colour".

Line 8: LS Headphone; gives the Last Status of the headphone volume, as set by the customer.

The value can vary from 0 (volume is minimum) to 24 (volume is maximum). Headphone volume values can be changed via the "cursor left" and "cursor right" keys on the remote control handset after pressing the green button for sound menu and selecting "headphone".

Line 9: Sharpness; gives the sharpness value. The value can vary from 0 (sharpness is minimum) to 7 (sharpness is maximum).

In case of bad antenna signals a too high value of the sharpness can result in a noisy picture. Sharpness values can be changed via the "cursor left" and "cursor right" keys on the remote control handset after pressing the red button for picture menu and selecting "sharpness".

Line 10: Dolby; indicates whether the received transmitter transmits Dolby sound (present) or not (not present).

Attention: The presence of Dolby can only be tested by the software on the Dolby Signalling bit. If a Dolby transmission is therefore received without a Dolby Signalling bit, then this indicator will show "not present" even though such a Dolby transmission is received.

Line 11: Surround Mode; indicates the by the customer selected surround mode.

In case the set is a Non-Dolby set there will be displayed "0". If it is a Dolby-set then is displayed: "Pro Logic", "Dolby 3 Stereo", "Hall" or "Off". For Dolby-set surround mode can be changed via the "cursor left" and "cursor right" keys on the remote control handset after pressing the green button for sound menu and selecting "Surround settings".

By means of the "cursor-down" knob on the remote control handset the Customer Service Menu 2 will appear. By means of the "cursor-up" knob on the remote control handset the Customer Service Menu 1 will appear again.

Customer Service Menu 2 represents following information:

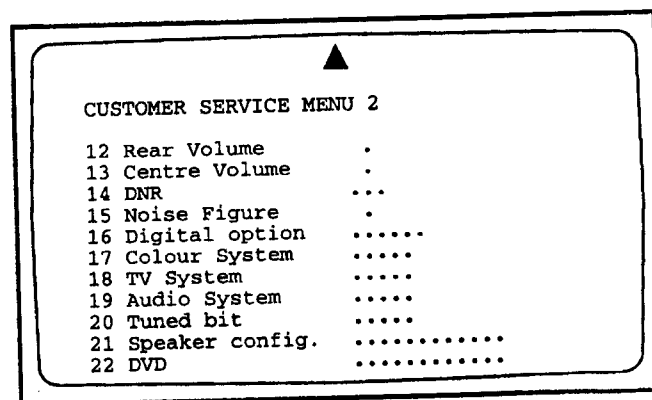


Figure 5-2 Customer Service Menu 2

Line 12: Rear Volume; gives the volume value of the surround sound loudspeakers.

This value can vary from 0 (minimum volume) to 63 (maximum volume). Rear volume can be changed via the "cursor left" and "cursor right" keys on the remote control handset after pressing

the green button for sound menu, selecting "Surround settings" and selecting "Rear volume". This feature is only available when surround mode is in "Dolby Pro Logic" or "Hall".

Line 13: Centre Volume; gives the volume value of the centre loudspeakers. This value can vary from 0 (minimum volume) to 63 (maximum volume). Centre volume can be changed via the "cursor left" and "cursor right" keys on the remote control handset after pressing the green button for sound menu, selecting 'Dolby Pro Logic' and selecting "centre volume". This feature is only available when surround mode is in "Dolby Pro Logic" or "Dolby 3 Stereo".

Line 14: DNR (Dynamic Noise Reduction); gives the setting of the DNR for the selected transmitter. The following selections are possible:

- "off", "min", "med" or "max"
- "off" or "automatic" (MG5.1E with "Automatic Noise Reduction").

The DNR can be changed via the "DNR" key on the remote control handset.

Line 15: Noise Figure; gives the selected noise ratio for this selected transmitter.

This value can vary from 0 (good signal) to 127 (average signal) and to 255 (bad signal). This only works in case the DNR selection is "off/automatic".

Line 16: Digital Option; gives the selected digital mode, "100Hz", Digital Scan" or "Natural Motion". Digital option can be changed via the "cursor left" and "cursor right" keys on the remote control handset after pressing the red button for picture menu and selecting "digital options".

Line 17: Colour System; gives information about the colour system of the selected transmitter.

- Black and white: No colour carrier received
- PAL: PAL signal received
- SECAM: SECAM signal received
- NTSC: NTSC signal received

Line 18: TV System; gives information about the video system of the selected transmitter.

- BG: BG signal received
- DK: DK signal received
- I: PAL I signal received
- L: SECAM L signals received
- M38.9: NTSC M signal received with video carrier on 38.9 MHz
- MN: NTSC M signal received

Line 19: Audio System; gives information about the audio system of the selected transmitter.

- Sound Muted: No sound
- Dolby Pro Logic: Dolby Pro Logic sound received
- Mono: Mono sound received
- Stereo: Stereo sound received
- Dual I: Language I received
- Dual II: Language II received
- Digital Mono: Digital mono sound is received
- Digital Stereo: Digital stereo sound is received
- Digital Dual I: Digital language I is received
- Digital Dual II: Digital language II is received

Line 20: Tuned Bit; gives information about the tuning method of the stored preset.

If the value is "Yes" the preset is stored via manual entry of the frequency when a transmitter was not present on that frequency. In that case the TV will attempt to perform a micro-search every time the preset number is selected. Once the micro-search has been successful the Tuned Bit will be set to "No".

Line 21: Speaker configuration; gives the configuration setting for the speakers.

In case the set is a Non-Dolby set there will be displayed "0". If it is a Dolby-set then is displayed: "Full internal", "L/R external", "Surround external" or "Full external". For the Dolby-set the speaker configuration can be changed via the "cursor left" and "cursor right" keys on the remote control handset after opening the installation menu and selecting "set-up". The installation menu can be opened by pressing "timer" and "enlarge" at the same time. This feature is only available when the set has virtual Dolby.

Line 22: DVD; gives the configuration setting for DVD. This can be "Present" or "Not Present".

If "Present" is selected the starting point is a top quality signal and a number of settings are therefore changed automatically. DVD can be changed via the "cursor left" and "cursor right" keys on the remote control handset after opening the installation menu and selecting "set-up". The installation menu can be opened by pressing "timer" and "enlarge" at the same time.

Problems and solving tips

The procedures to change the value or the status of the different settings is described in the paragraph 'Detailed explanation of the Customer Service Mode'.

Picture problems

Worse picture quality in case of DVD pictures Check line 22 "DVD". In case line 22 gives the indication "Not Present" change the setting into "Present".

Snowy/noisy picture

1. Check line 15 "Noise Figure". In case the value is 127 or higher and the value is also high on other programs check the aerial cable/aerial system.
2. Check lines 9 "Sharpness", 14 "DNR" and 15 "Noise Figure". In case the value of line 9 is 3 or 4 and the value of line 15 is high (127 or higher), lower the value of line 9 "sharpness" and switch DNR (line 14) to "automatic", "on" or to a higher value.

Picture too dark

1. Press "Smart Picture" button on the Remote Control handset. In case picture improves, raise the brightness value or raise the contrast value. The new value(s) are automatically stored for all TV channels.
2. After switching on the Customer Service Mode the picture is OK. Raise the brightness value or raise the contrast value. The new value(s) are automatically stored for all TV channels.
3. Check lines 6 "LS Brightness" and 7 "LS Contrast". The value of line 6 is low (<10) or the value of line 7 is low (<10). Raise the brightness value or raise the contrast value.

Picture too bright

1. Press "Smart Picture" button on the Remote Control handset. In case picture improves, reduce the brightness value or reduce the contrast value. The new value(s) are automatically stored for all TV channels.
2. After switching on the Customer Service Mode the picture is OK. Reduce the brightness value or reduce the contrast value. The new value(s) are automatically stored for all TV channels.
3. Check lines 6 "LS Brightness" and 7 "LS Contrast". The value of line 6 is high (>40) or the value of line 7 is high (>50). Reduce the brightness value or raise the contrast value.

Fading picture

Digital scan effect. Check line 14 "DNR". The status of "DNR" is 'med' or 'max'. Reduce "DNR" to 'min' or switch off the digital scan.

White line around picture elements and text

1. Press "Smart Picture" button on the Remote Control handset. In case picture improves, reduce the sharpness value. The new value(s) are automatically stored for all TV channels.
2. After switching on the Customer Service Mode the picture is OK. Reduce the sharpness value. The new value(s) are automatically stored for all TV channels.
3. Check line 8 "Sharpness". Reduce the sharpness value. The new value(s) are automatically stored for all TV channels

No picture.

Check line 20 "Tuned bit". In case the value is 'Yes', install the required program again. Open the installation menu by pressing "timer" and "enlarge" at the same time and perform manual installation.

Blue picture. No proper signal is received.

Check the aerial cable/aerial system.

Blue picture and/or unstable picture.

A scrambled or decoded signal is received.

Black and white picture.

Check line 5 "LS colour". In case the value is low ((10) raise the value of colour. The new value(s) are automatically stored for all TV channels.

No colours/colour lines around picture elements.

1. Check lines 17 "Colour System" and 18 "TV System". In case line 17 is 'PAL' and line 18 is 'M 38,9', the installed system for this preset is 'USA', while 'West Europe' is required. Install the required program again. Open the installation menu by pressing "timer" and "enlarge" at the same time and perform manual installation. Select 'System; West Europe'.
2. In case line 17 is 'PAL' and line 18 is 'L', the installed system for this preset is 'France', while 'West Europe' is required. Install the required program again. Open the installation menu by pressing "timer" and "enlarge" at the same time and perform manual installation. Select 'System; West Europe'.

No colours/noise in picture

1. Check lines 17 "Colour System" and 18 "TV System". In case line 17 is 'Black and White' and line 18 is 'BG', the installed system for this preset is 'West Europe', while 'USA' is required. Install the required program again. Open the installation menu by pressing "timer" and "enlarge" at the same time and perform manual installation. Select 'System; USA'.
2. In case line 17 is 'Black and White' and line 18 is 'L', the installed system for this preset is 'France', while 'USA' is required. Install the required program again. Open the installation menu by pressing "timer" and "enlarge" at the same time and perform manual installation. Select 'System; USA'

Colours not correct.

Check lines 17 "Colour System" and 18 "TV System". In case line 17 is 'PAL' and line 18 is 'L', the installed system for this preset is 'France', while 'West Europe' is required. Install the required program again. Open the installation menu by pressing "timer" and "enlarge" at the same time and perform manual installation. Select 'System; West Europe'.

Colours not correct/unstable picture.

Check lines 17 "Colour System" and 18 "TV System". In case line 17 is 'SECAM' and line 18 is 'BG', the installed system for this preset is 'USA', while 'France' is required. Install the required program again. Open the installation menu by pressing "timer" and "enlarge" at the same time and perform manual installation. Select 'System; France'.

Unstable picture.

Check lines 17 "Colour System" and 18 "TV System". In case line 17 is 'SECAM' and line 18 is 'M 38,9', the installed system for this preset is 'West Europe', while 'France' is required. Install the required program again. Open the installation menu by pressing "timer" and "enlarge" at the same time and perform manual installation. Select 'System; France'.

Menu text not sharp enough.

1. Press "Smart Picture" button on the Remote Control handset. In case picture improves, reduce the contrast value. The new value(s) are automatically stored for all TV channels.
2. After switching on the Customer Service Mode the picture is OK. Reduce the contrast value. The new value(s) are automatically stored for all TV channels.
3. Check line 7 "LS Contrast". The value of line 7 is high (>50). Reduce the contrast value.

Sound problems**No sound from left and right speaker.**

1. Press "Smart Sound" button on the Remote Control handset. In case sound improves, raise the volume value. The new value(s) are automatically stored for all TV channels.
2. After switching on the Customer Service Mode the volume is OK. Raise the volume value. The new value(s) are automatically stored for all TV channels.
3. Check line 4 "LS Volume". The value is low. Raise the value of "Volume". The new value(s) are automatically stored for all TV channels.

Sound too loud for left and right speaker.

1. Press "Smart Sound" button on the Remote Control handset. In case sound improves, reduce the volume value. The new value(s) are automatically stored for all TV channels.
2. After switching on the Customer Service Mode the volume is OK. Reduce the volume value. The new value(s) are automatically stored for all TV channels.
3. Check line 4 "LS Volume". The value is high. Reduce the value of "LS Volume". The new value(s) are automatically stored for all TV channels.

No sound from "centre" speaker.

Check line 12 "Centre Volume". The value is low. Raise the value of the "Centre Volume"

Sound too loud from "centre" speaker.

Check line 12 "Centre Volume". The value is high. Reduce the value of the "Centre Volume"

Diagnose Mode (only active during transmission of error codes and diagnose 99)

This mode is activated by the DIAGNOSE command on the DST for reading the error codes and erasing the error buffer by the DST even when the set is in protection and so there is no picture (assuming that the power supply and the control part are working). For activation see paragraph 5.3. The diagnose Mode is only a temporarily mode (the set will go back to the previous mode), and can not be switched on permanently. Note: The diagnose mode can not be entered if the SAM is activated.

ComPair

ComPair (Computer Aided Repair) is a service tool for Philips Consumer Electronics products. ComPair is a further development on the DST service remote control allowing faster and more accurate diagnostics. ComPair has three big advantages:

- ComPair helps you to quickly get an understanding how to repair the MG5.1E in short time by guiding you step by step through the repair procedures.
- ComPair allows very detailed diagnostics (on I2C level) and is therefore capable of accurately indicating problem areas. You do not have to know anything about I2C commands yourself; ComPair takes care of this.
- ComPair speeds up the repair time since it can automatically communicate with the MG5.1E (when the micro processor is working) and all repair information is directly available. When ComPair is installed together with the SearchMan MG5.1E electronic manual, schematics and PCBs are only a mouse-click away.

ComPair consists of a Windows based fault finding program and an interface box between PC and the (defective) product. The ComPair interface box is connected to the PC via a serial or RS232 cable. In case of the MG5.1E chassis, the ComPair interface box and the television communicate with each other via bi-directional infrared signal.

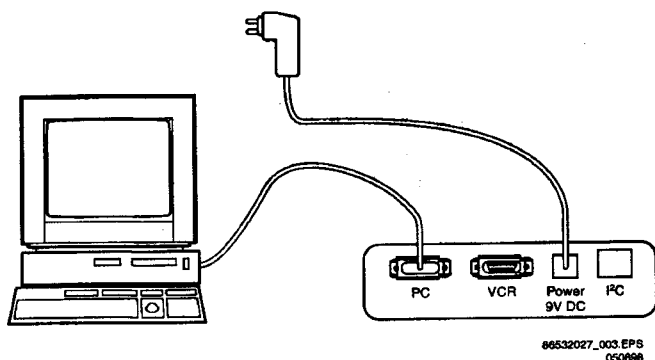


Figure 5-3

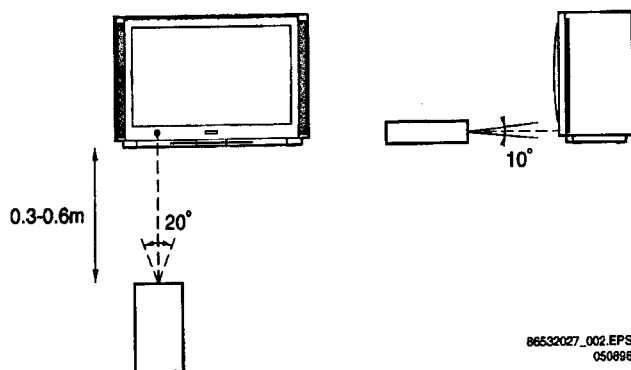


Figure 5-4

The ComPair fault finding program is able to determine the problem of the defective television. ComPair can gather diagnostic information in 2 ways:

1. Communication to the television (automatic)
2. Asking questions to you (manually)

ComPair combines this information with the repair information in its database to find out how to repair the MG5.1E.

Automatic information gathering

Step-by-step start up. Under normal circumstances, a fault in the power supply or an error during start-up will switch the

television to protection-mode. ComPair can take over the initialisation of the television. In this way it is possible to distinguish which part of the start-up routine (hence which circuitry) is causing the problem.

Reading out the error buffer, ComPair can automatically read out the contents of the entire error buffer.

Diagnosis on I2C level. ComPair can access the I2C bus of the television without a physical connection. ComPair can send and receive infrared commands to the micro controller of the television. These commands are translated by the controller to I2C commands and vice versa. In this way it is possible for ComPair to communicate (read and write) to devices on the I2C busses of the MG5.1E.

Manual information gathering

Automatic diagnosis is only possible if the micro controller of the television is working correctly and only to a certain extent. When this is not the case, ComPair will guide you through the fault finding tree by asking you questions and showing you examples. You can answer by clicking on a link (e.g. text or an oscillogram) that will bring you to the next step in the faultfinding process.

A question could be: Do you see snow? (Click on the correct answer)

YES / NO

An example can be: Measure testpoint I7 and click on the correct oscillogram you see on the oscilloscope

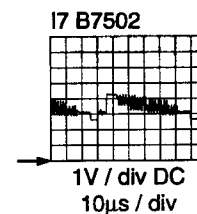


Figure 5-5

By a combination of automatic diagnostics and an interactive question/answer procedure, ComPair will enable you to find most problems in a fast and effective way.

Additional features

Beside fault finding, ComPair provides some additional features like:

- Uploading/downloading of presets
- Managing of preset lists
- Emulation of the Dealer Service Tool

SearchMan (electronic service manual)

When ComPair is installed in combination with SearchMan, all schematics and PCBs will be directly available while you repair a television if you click on a PCB or schematic link.

Example: Measure the DC voltage on C2568 (PCB/schematic) on the small signal level.

Clicking on PCB will automatically pop-up a picture of the PCB with the location of C2568 marked. Clicking on schematic will automatically pop-up the schematic with the location of C2568 marked.

5.3 Error codes

5.3.1 Reading error codes from the error buffer

The error buffer can be read in 2 ways:

1. On the screen via the Service Alignment Mode (SAM). In case picture is OK, the error buffer can be read easiest via

the SAM. In the main menu of the SAM the last 10 different error codes occurred are displayed. The most recent detected error code is displayed on the left side, so e.g.:
 0 0 0 0 means no error codes present in the buffer
 3 0 0 0 means one error code present in the buffer; error code 3

2 3 0 0 means two error codes present in the buffer; error code 2 is the most recent, error code 3 is detected before 2

2. On the display of the DST. If an error has been detected by the MG5.1E chassis, the set might go into protection. Without the presence of a picture the errors can be read by the DST, as long as the main-processor is still active (green LED continuous and red LED blinking fast (5Hz); in case of red LED is blinking slow (1,25Hz) there is a main-processor problem). To transmit the errors from the TV to the DST:
 1. Press the "DIAGNOSE" key (in all modes except the SAM).
 2. Press "1" to view the last error detected.
 3. Hold the DST 5 to 10 cm in front of the stand-by LED of the set (the IR-sending LED of MG5.1E is located near the stand-by LED).
 4. Press the "OK" key.

The error is represented by a 2 digit number. The 2 digits on the DST are displayed sequentially, with a pause before it is repeated. The digit after the pause is the 1st digit. If the display

reads 4 - 7, the error code is 47. To read other error codes, press "DIAGNOSE" and one of the other digit keys. Note:

- If the DST cannot communicate to the MG5.1E in a proper way, ERROR 2 is shown in the display of the DST. Trying again by changing the DST position a little bit might help.
- If the error buffer of MG5.1E is empty, no errors are displayed by the DST; the display remains blank.

5.3.2 Clearing the error buffer

The error buffer can be cleared in 2 ways:

1. In the SAM by selecting the item RESET ERROR BUFFER in the main menu.
2. By the "DIAGNOSE 99" command of the DST (in all modes except the SAM). Press the DIAGNOSE key on the DST, followed by 9 and 9 and then .

Note: When error buffer is full (10 codes), no new error can be stored anymore. However of every error raised is monitored how long it exists in the error buffer. When for any reason a false raised error exists in the buffer, it will be deleted after 50 hours. If this error still is actual after 50 hours, it will be raised again. In this way is safeguarded that history of error codes is stored. Sometimes it is an option to first write down the error buffer content, reset the buffer, and look again which error codes are generated by the set.

5.3.3 Error code table

Error messages (see table)

Error	Device	Description	Defective item	Diagram	Defective module Indication
2	ST24E32 or M24C32	Non volatile memory	IC7008	K7	Control
3	SAA5801	OTC2.5 microprocessor/TXT	IC7003	K7	Control
5	UV1316	Tuner	U1102	K1	Tuner
10	TEA6415	I/O source select video	IC7208	K8	Source select
11	TEA6422	I/O source select audio	IC7777	K8	Source select
15	TDA9320H	HIP I/O-video processing	IC7501	K1	Chroma IF I/O
20	TDA9330H	HOP video control/deflection processor	IC7300	K6	Video Controller
21	TDA9178	LTP Peaking	IC7402	K6	Video Controller
25	MSP3410D	ITT sound processor	IC7751	K3	Audio module
26	SAA7712H	SEDSP dolby processor	IC7770	K4	Audio module
35	UV1316	FDS Tuner	U1102	M1	Video Dual Screen Panel
36	PCF8574	FDS I/O Expander	IC7860	M2	Video Dual Screen Panel
37	SAB9079	FDS Popov	IC7700	M4	Video Dual Screen Panel
38	TDA9320	FDS HIP2	IC7501	M1	Video Dual Screen Panel
39	M24C04	FDS NVM	IC7991	M1	Video Dual Screen Panel
40	83C751	Cordless Transmitter processor	IC7105	R	Surround Transmitter Panel
41	TDA7309	FDS Headphone	IC7620	M5	Video Dual Screen Panel
50	SAA4978H	FBX Picnic	IC7611	L1	Feature Box
53	SAA4992	FBX Falconic	IC7626	L3	Feature Box
54	SAA4997	FBX Veric	IC7621	L2	Feature Box
55	SAA4996	FBX Macpatic	IC7616	L2	Feature Box
56	83C654	MCS processor	IC7803	N3	Digital Audio Module
57	TDA7438	MCS SOFAC L/R	IC7540	N8	Digital Audio Module
58	TDA7438	MCS SOFAC L/R	IC7600	N9	Digital Audio Module
59	TDA7438	MCS SOFAC L/R	IC7570	N10	Digital Audio Module
61	PCF8574	MCS I/O expander	IC7690	N16	Digital Audio Module

Error	Device	Description	Defective Item	Diagram	Defective module Indication
65	Slow I2C bus blocked		see fig 5.6	Slow I2C bus blocked	
66	Fast I2C bus blocked		see fig 5.6	Fast I2C bus blocked	
67	Supply 5V	5V2	see fig 5.5	+5 V Supply	
68	Supply 8V	8V6	see fig 5.5	+8V Supply	
70	V fail protection	VFB	fig 5.8	A3/A1/K6	Vertical Flyback
71	H fail protection	HFB	fig 5.8	A1/K6	Horizontal Flyback
73	Line Deflection protection	LDP	IC7484	A1/K6	Line Deflection
74	Beam Current Protection	BC-PROT	TS7351	K6/K7	Beam Current
76	DC Sound protection	DC-PROT	TS7762	A4	Sound Output
77	Feature box protection	FBX-PROT	Fig 5.6	L1	+3V (FBX) Supply
78	Edric protection	EDRIC-PROT	IC7750	K4	+3V (Edric) Supply
79	POPOV protection	POPOV_PROT			
80	Tuner protection	Tuner-PROT	U1102	K1	+8V (Tuner) Supply
81	UPD65654GF-260	Convergence spline processor	IC102	Convergence	Convergence panel
82	M24C32	Digital Convergence NVM	IC101	Convergence	Convergence panel
83	TDA8444	Interface I/O expander	IC7001	Interface	Interface panel

Remark: If on the DST the text "ERROR 2" is displayed, this means that the communication from the TV to the DST has failed

5.4 Fault find trees

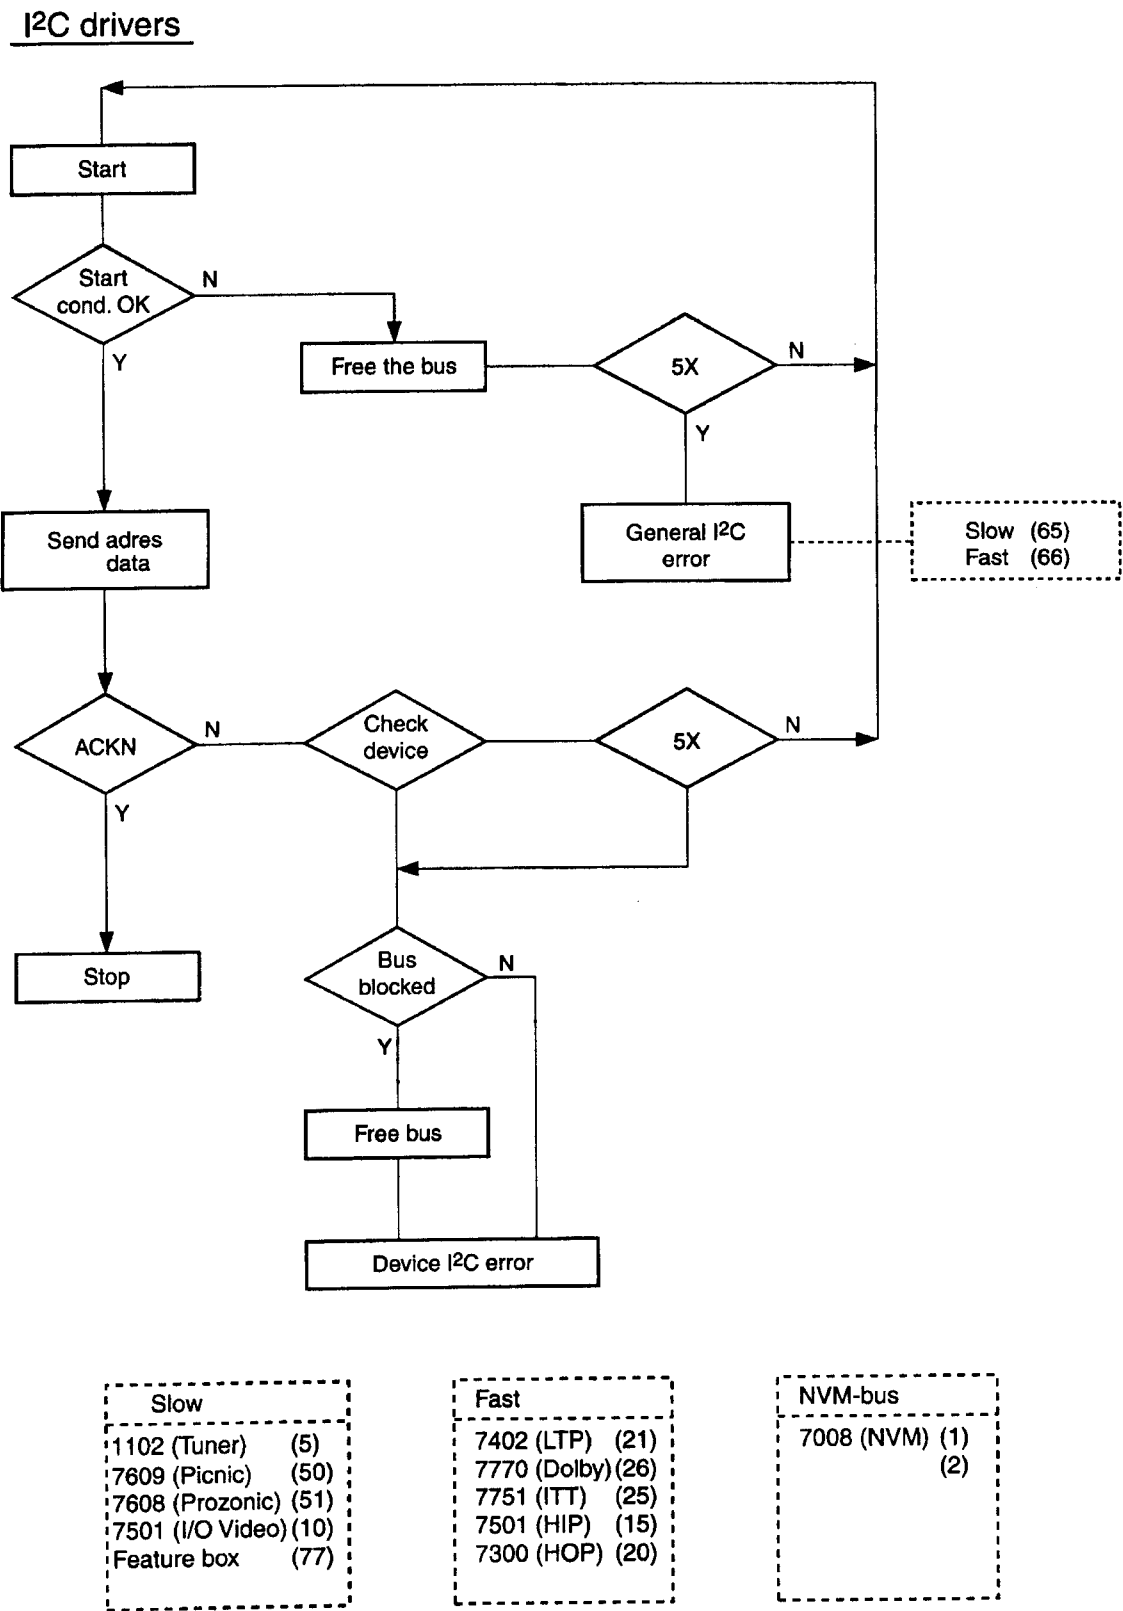


Figure 5-6

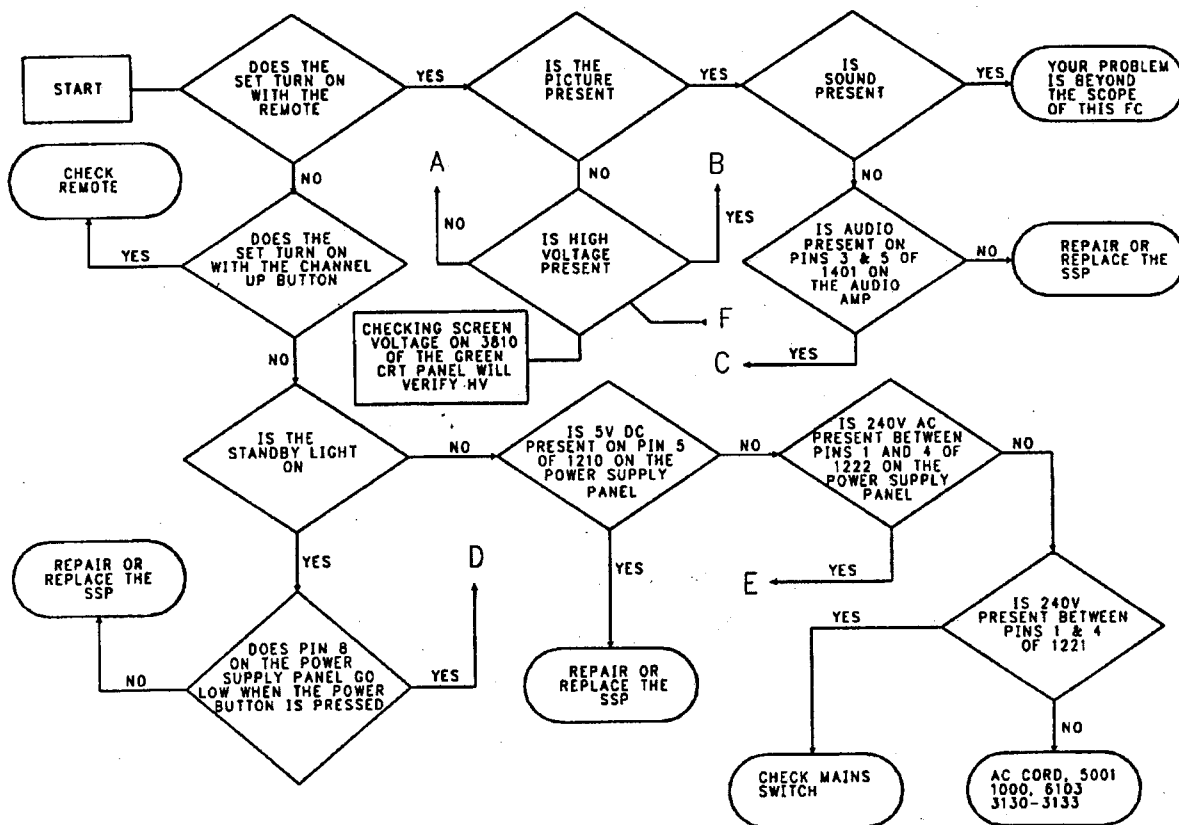
CL96532100_070.1H
141099

Figure 5-7

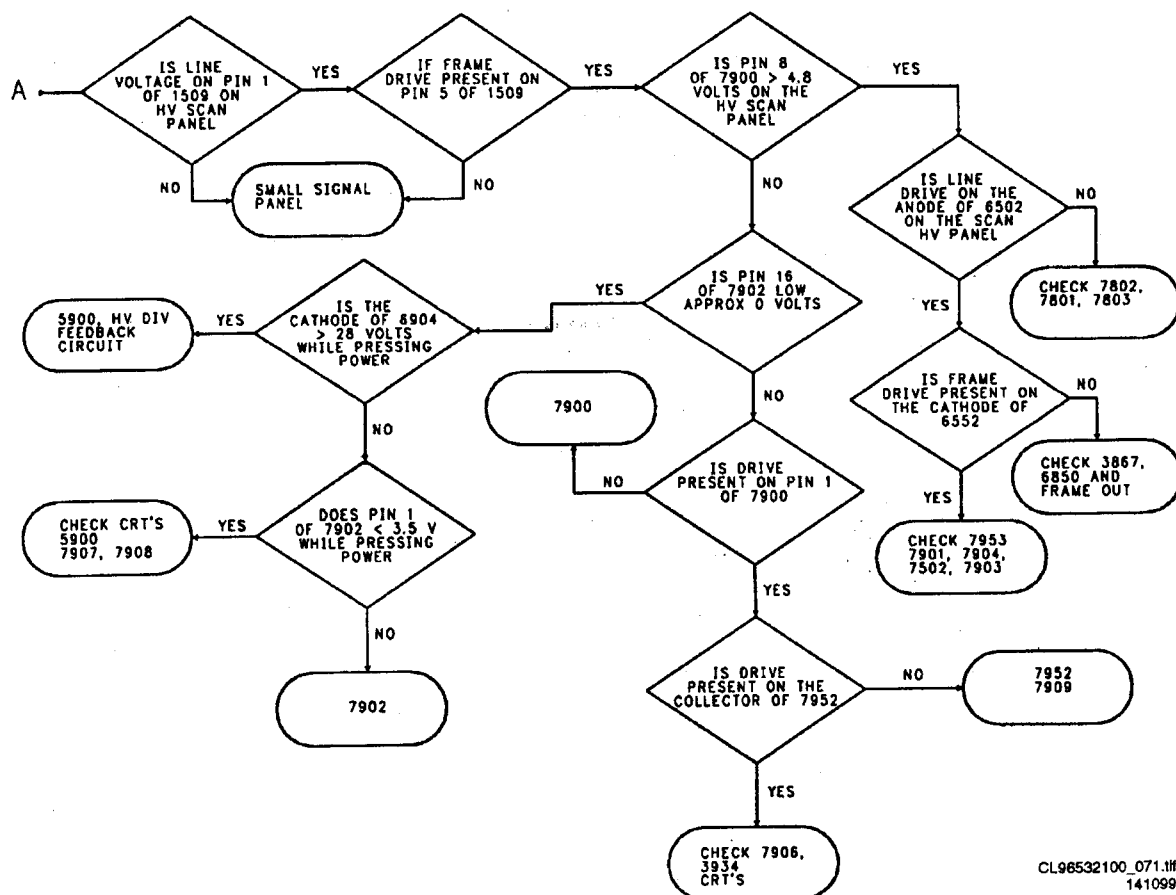
CL96532100_071.1H
141099

Figure 5-8

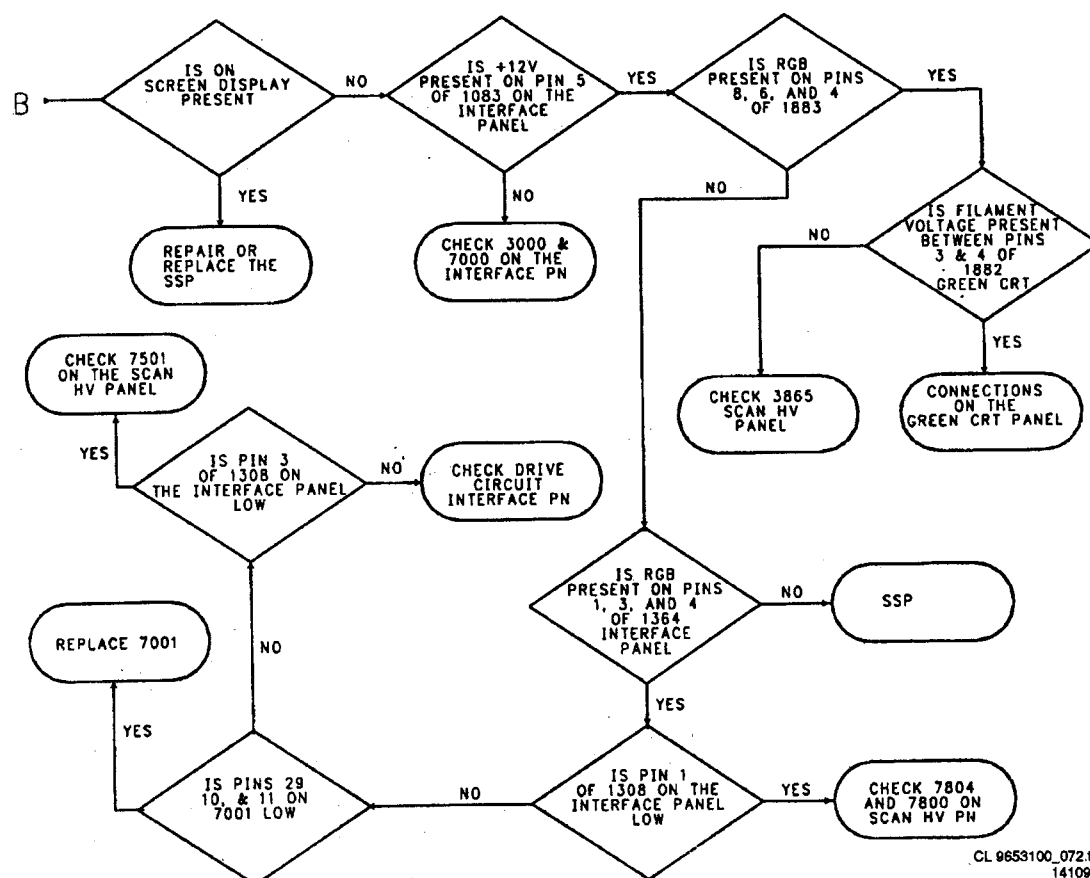


Figure 5-9

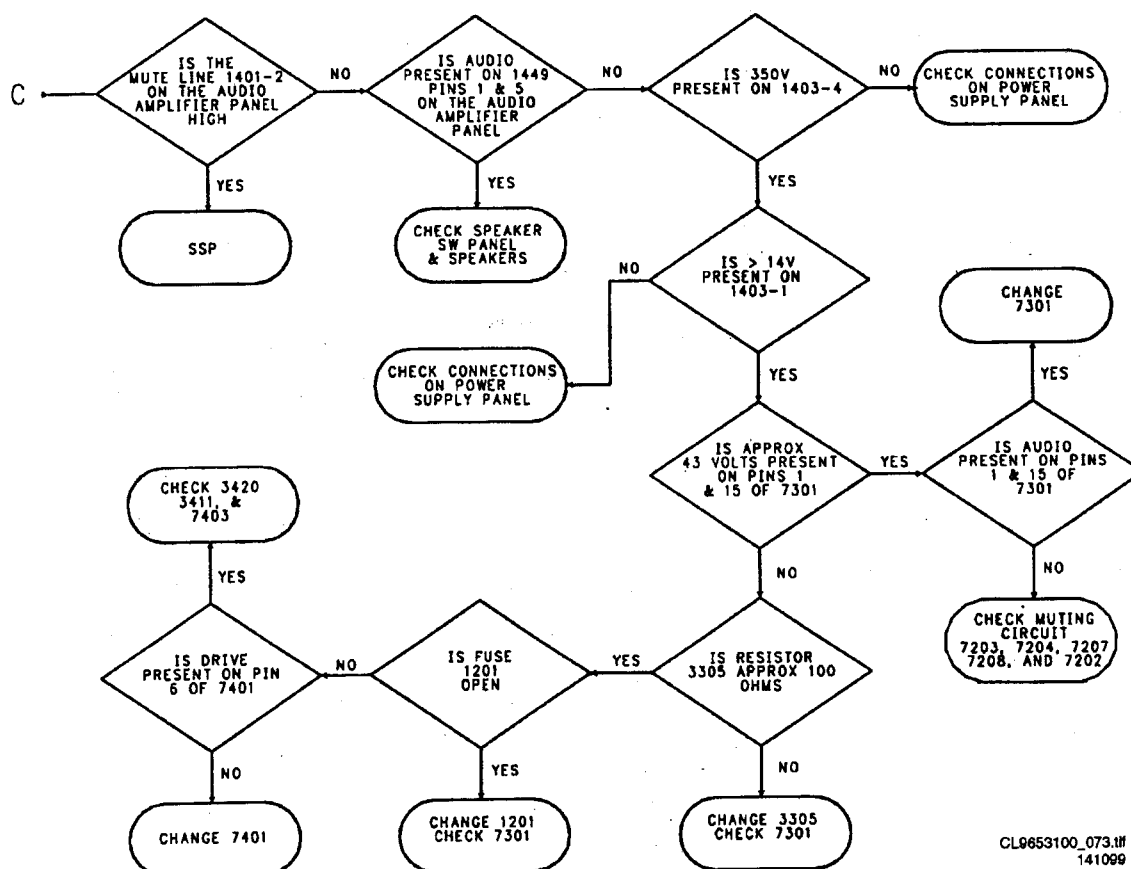


Figure 5-10

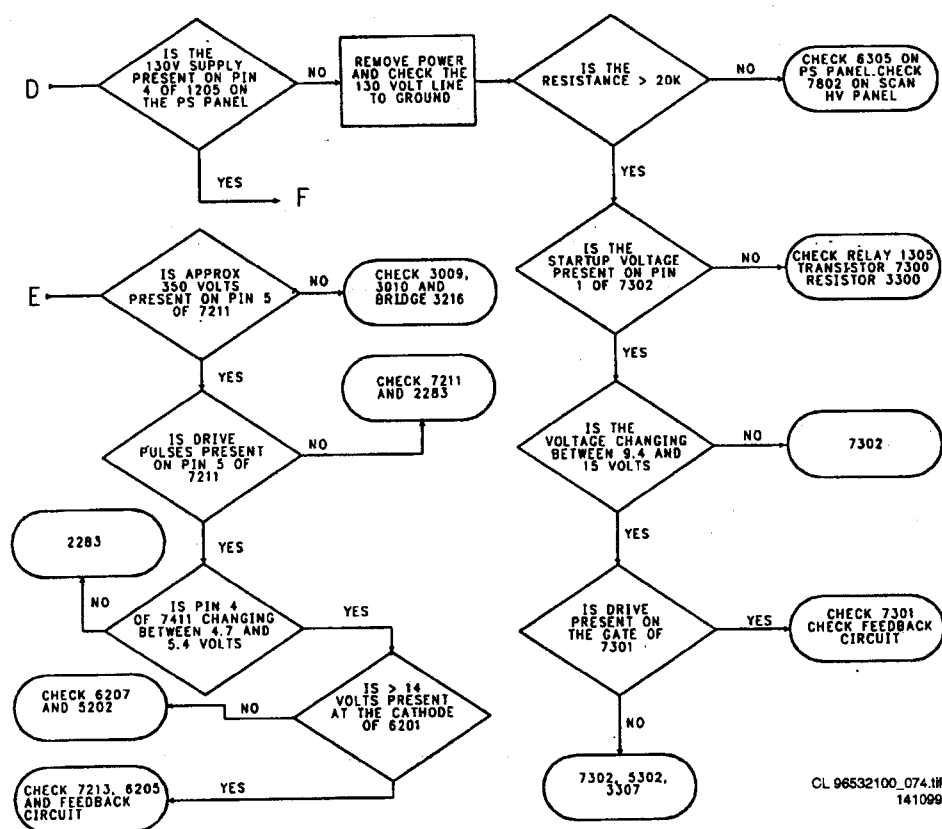


Figure 5-11



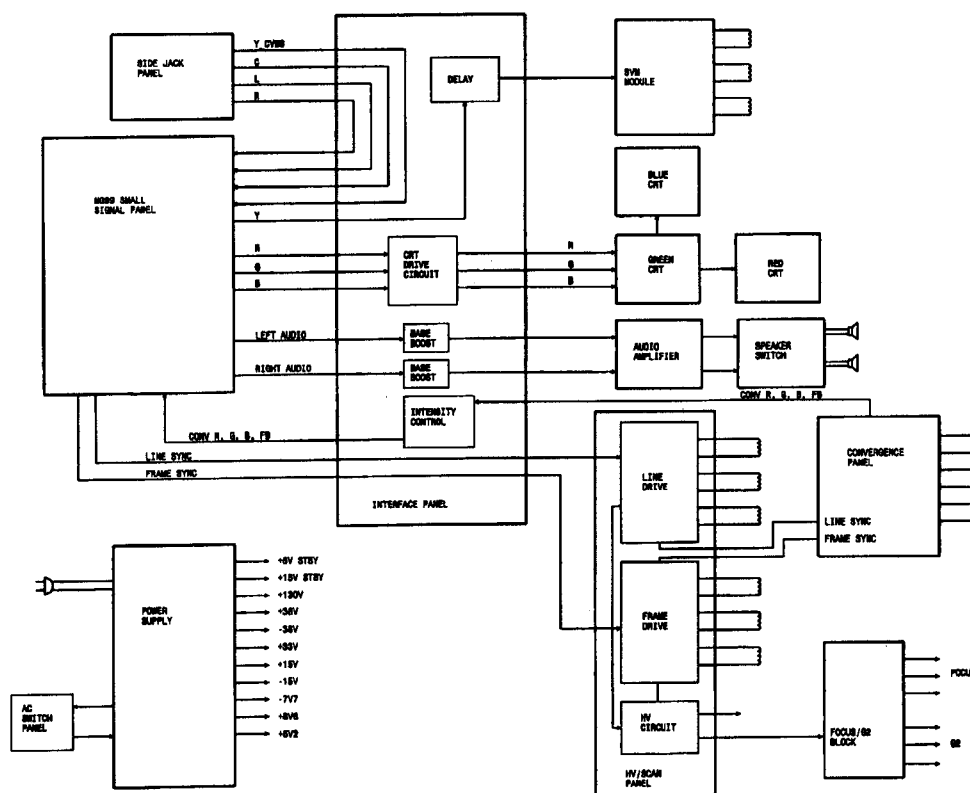


Figure 5-12


6. Block diagrams

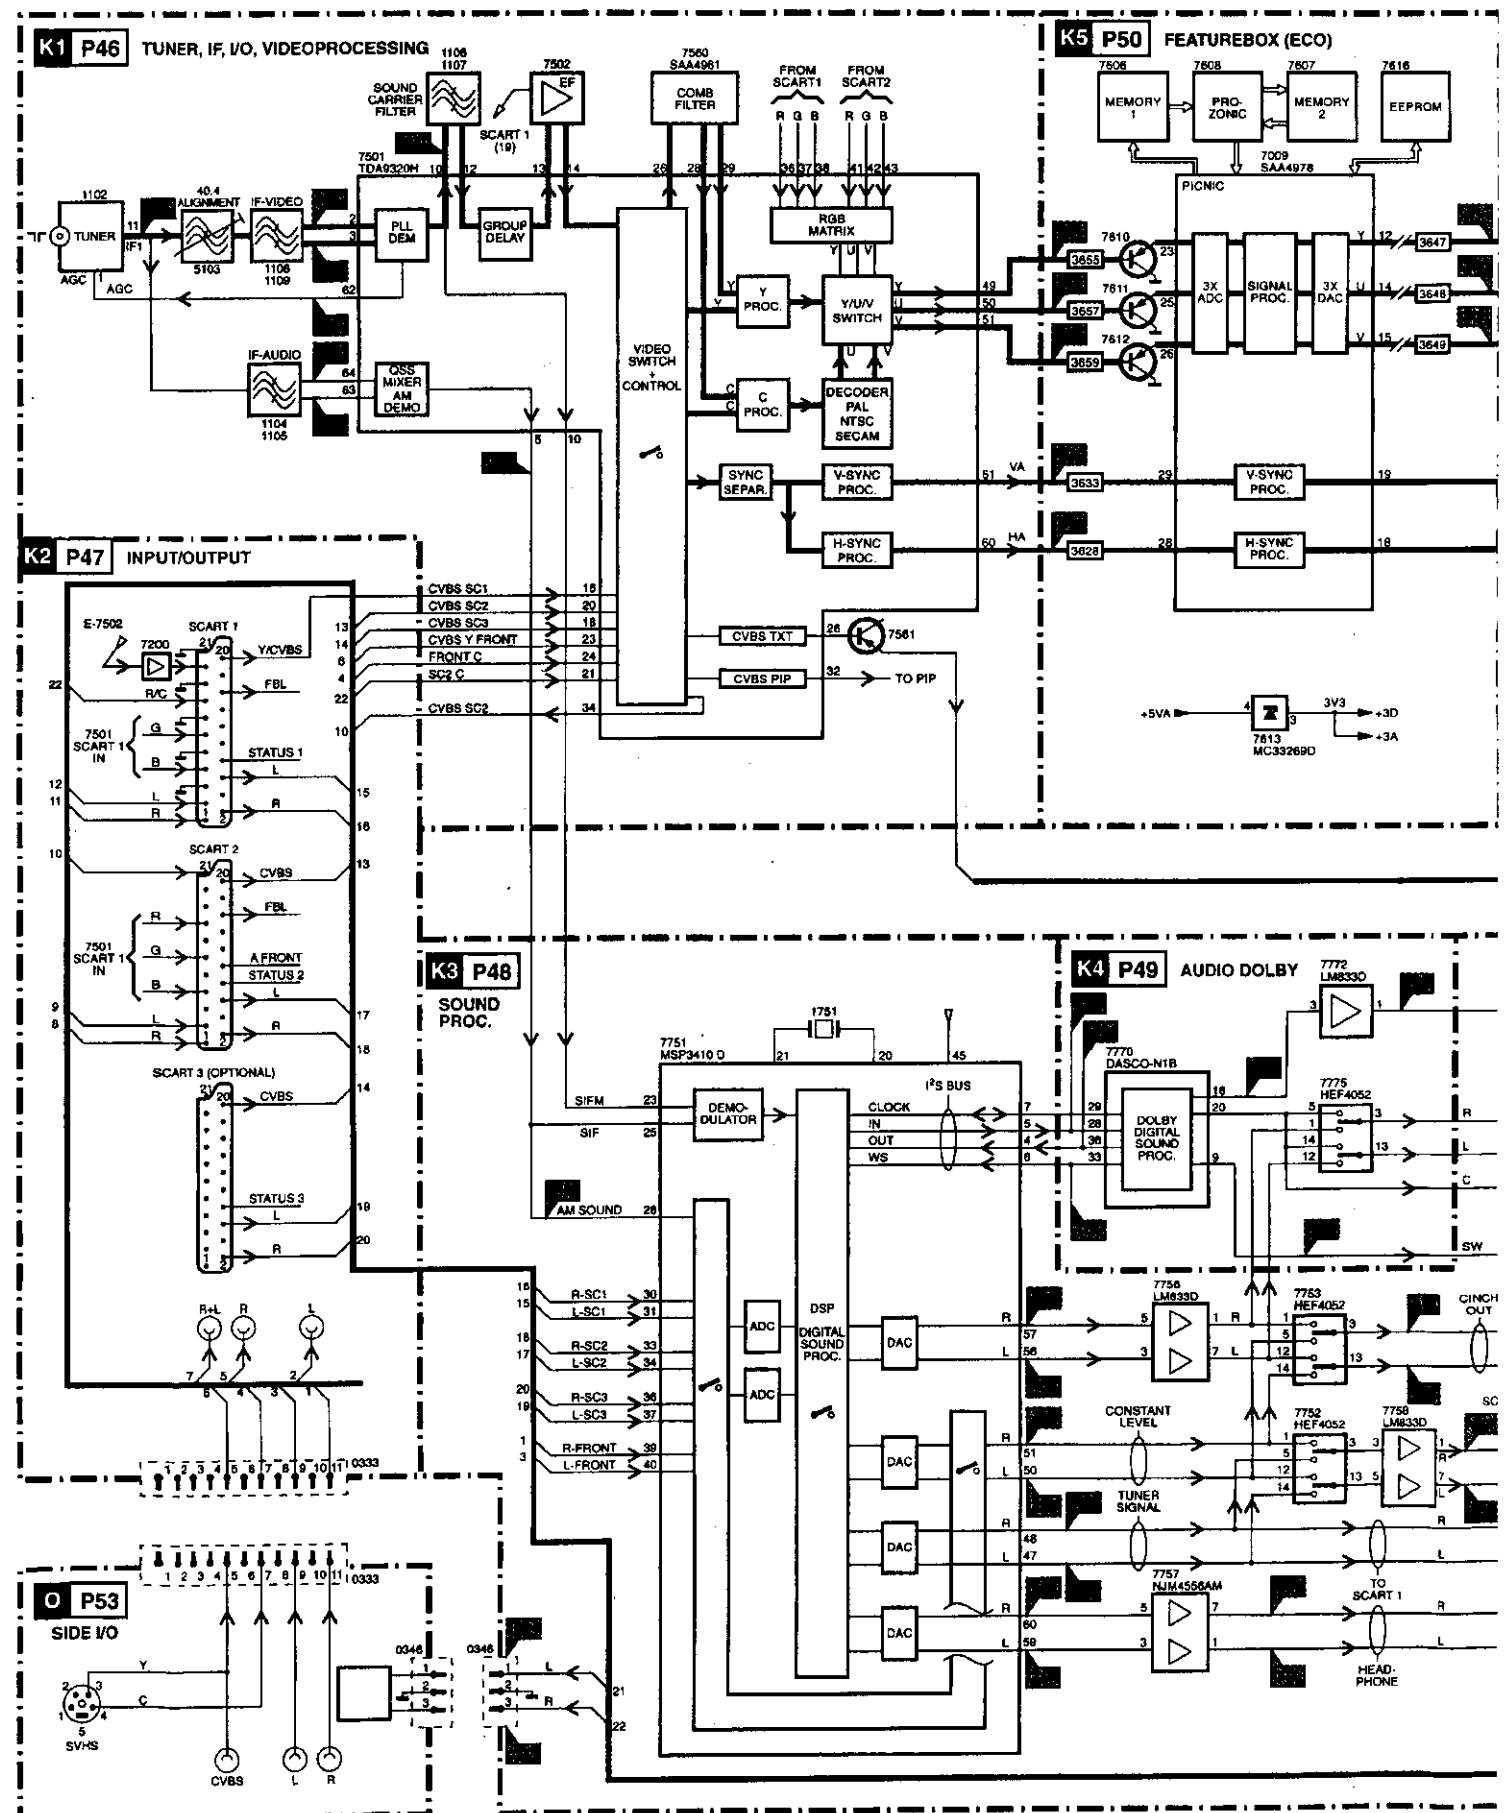

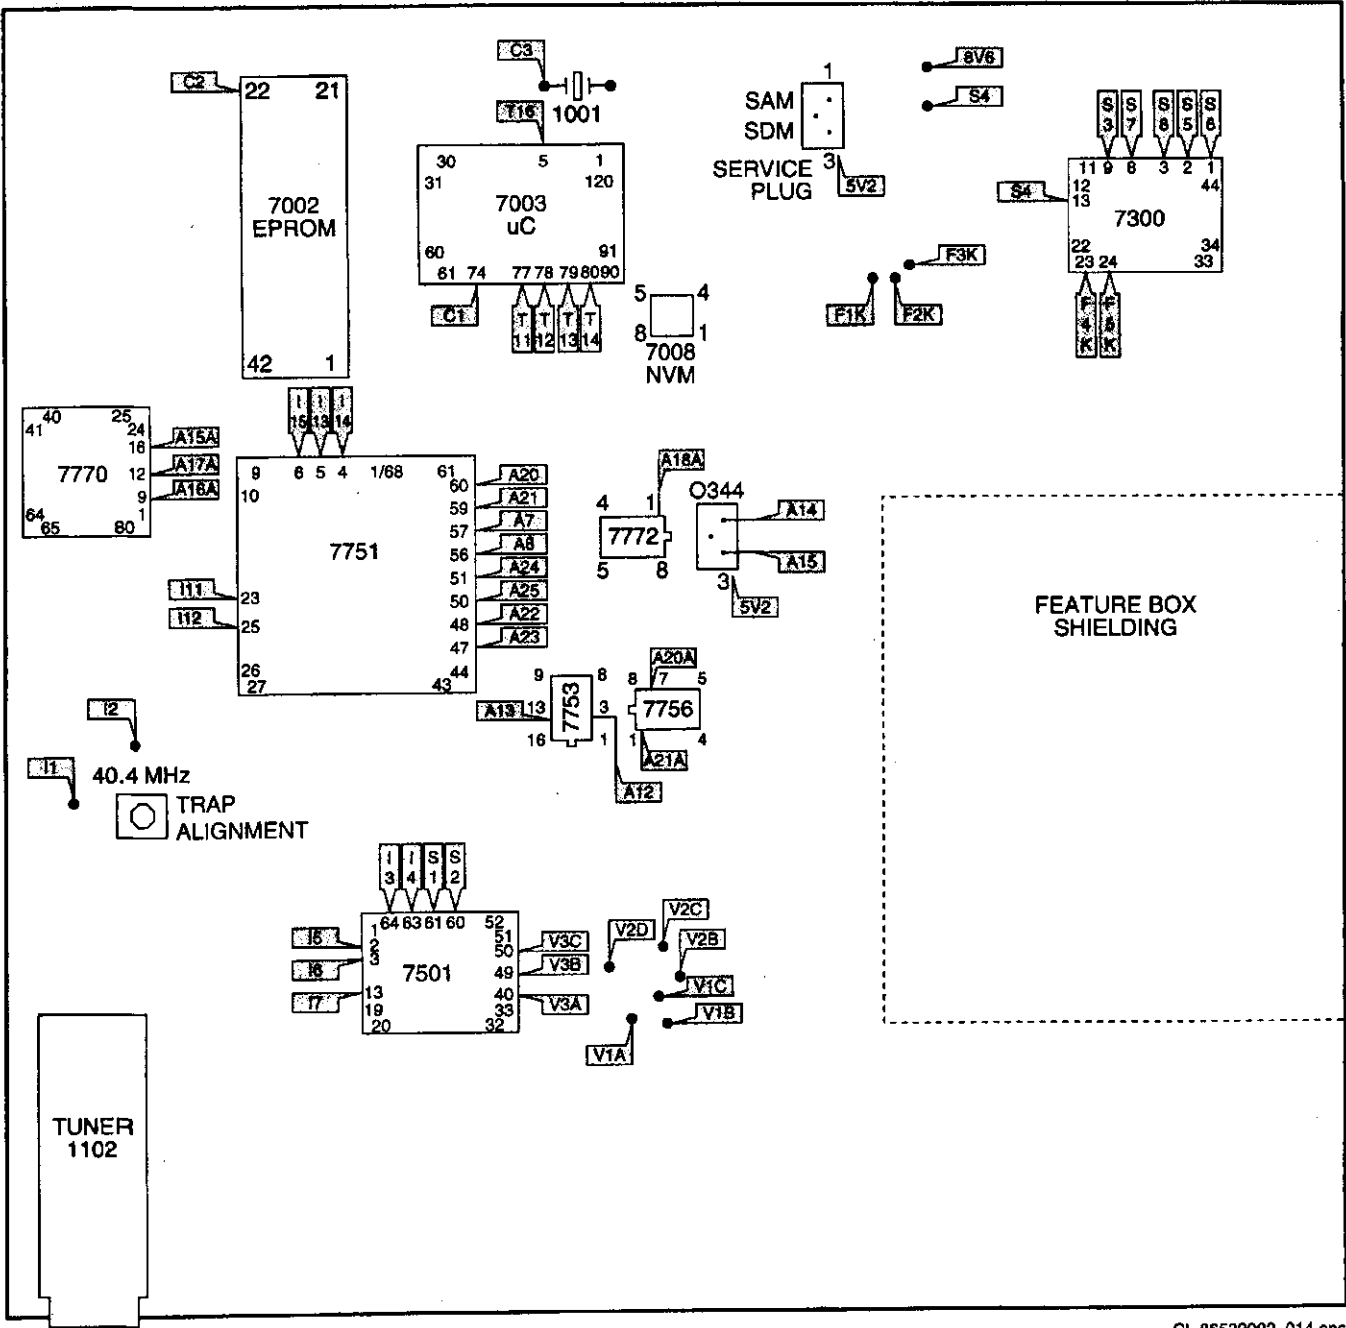


(COMPONENT-SIDE)


CL 86532092_014.eps
2011 98

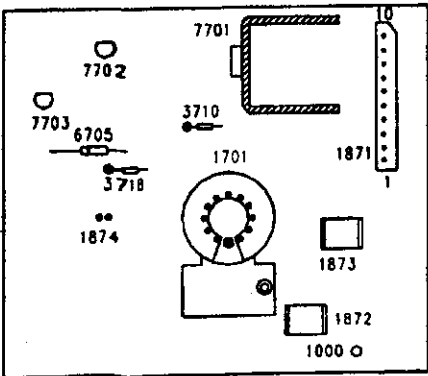

RED CRT BOARD

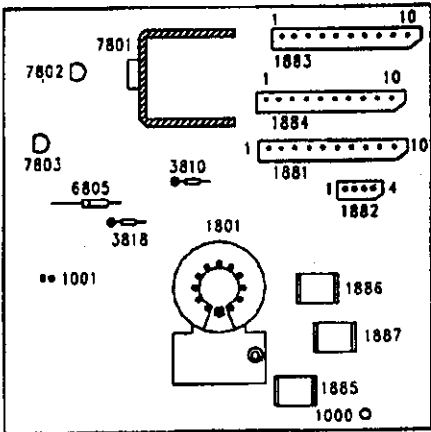


GREEN CRT BOARD

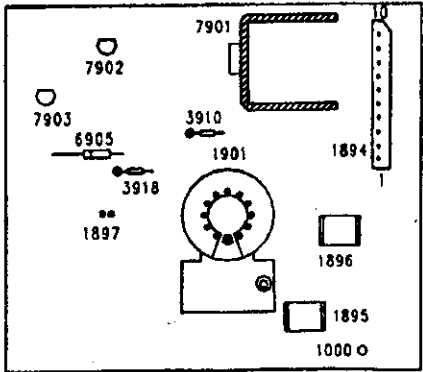

BLUE CRT BOARD


CL 96532100_067.tif
141099

CONVERGENCE PANEL WIRING INTERCONNECT


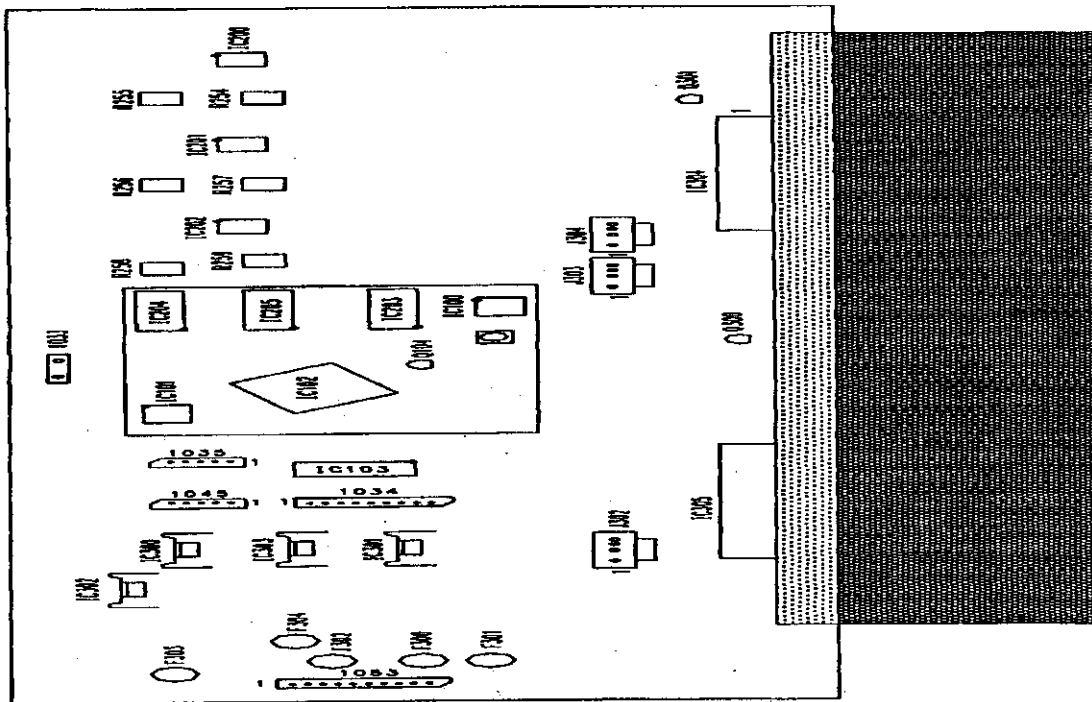


CL96532100_022.eps
051089


AUDIO AMPLIFIER COMPONENT LOCATION

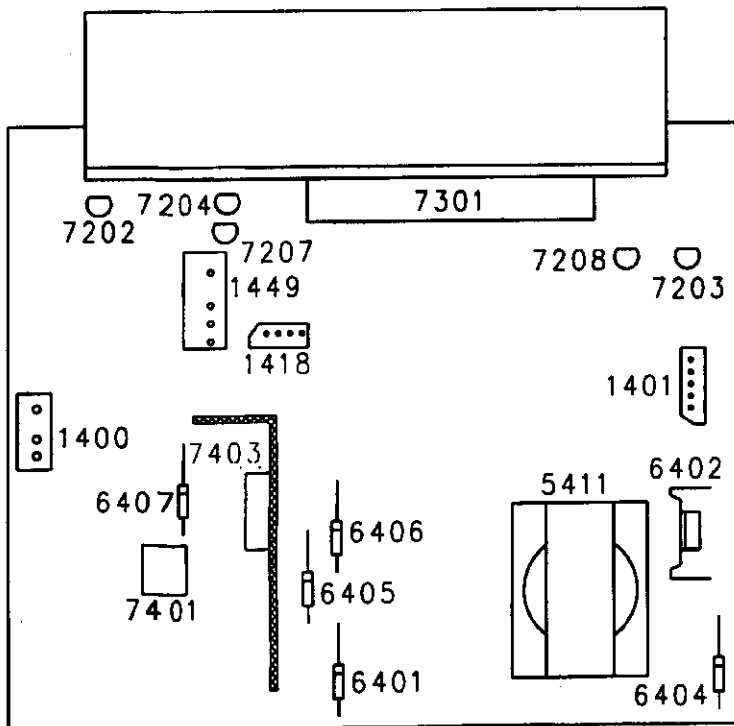


CL96532100_022.eps
051089

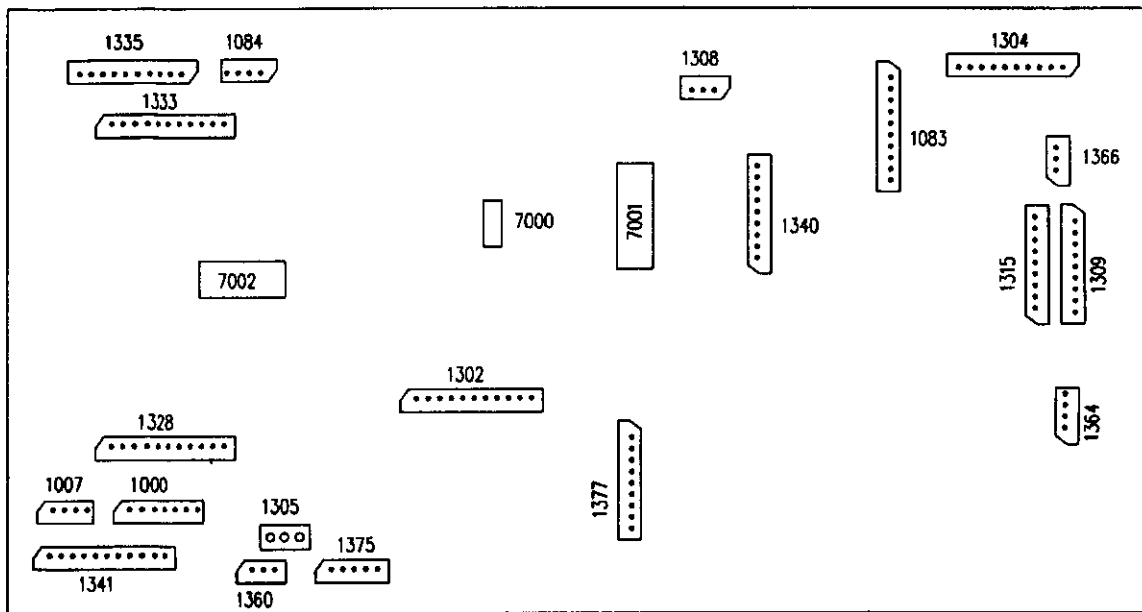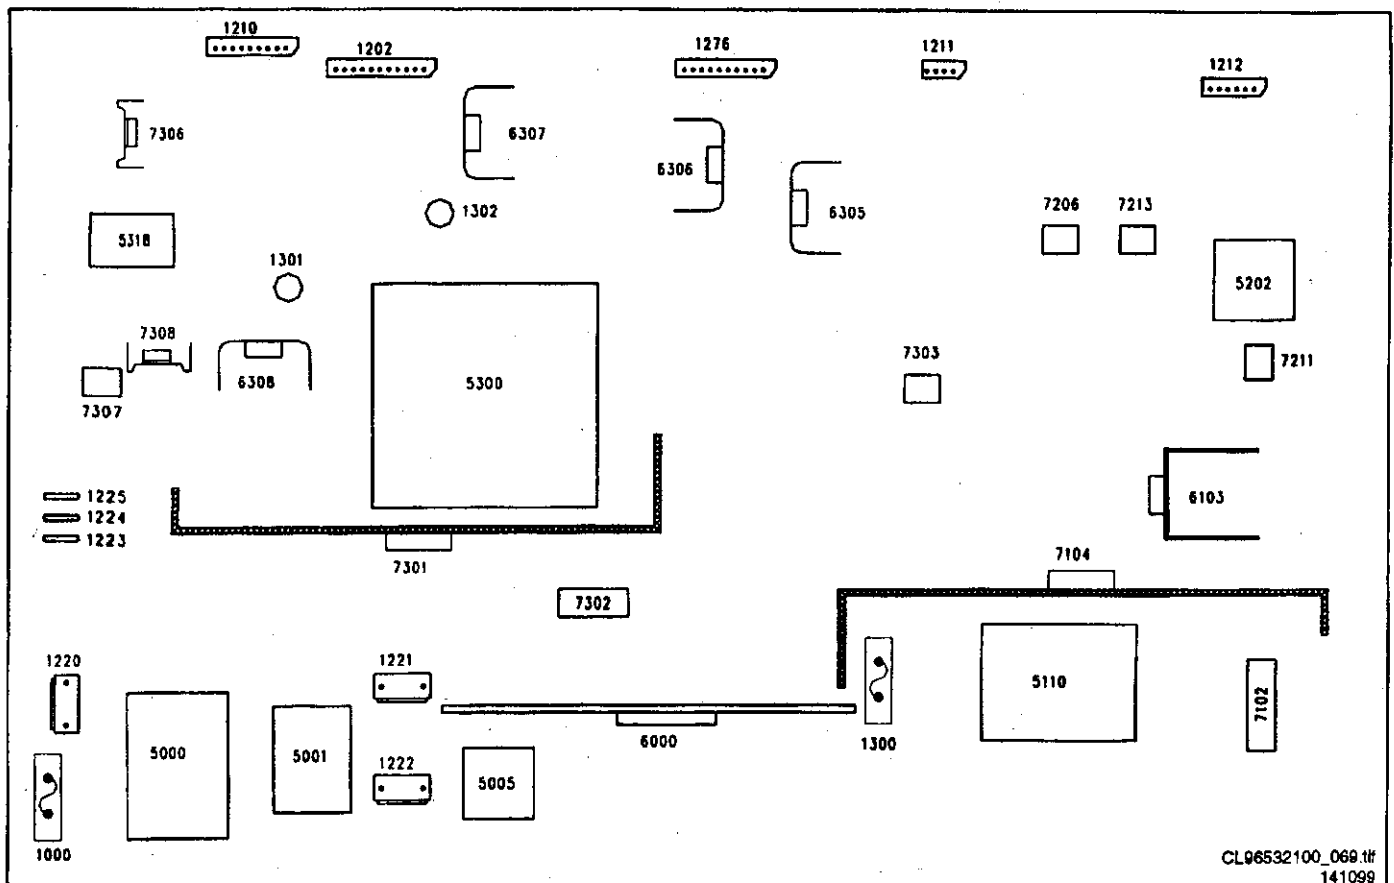INTERFACE PANEL COMPONENT LOCATIONCL96532100_021.eps
051099**POWER SUPPLY COMPONENT LOCATION**CL96532100_069.tif
141099


HIGH VOLTAGE COMPONENT LOCATION

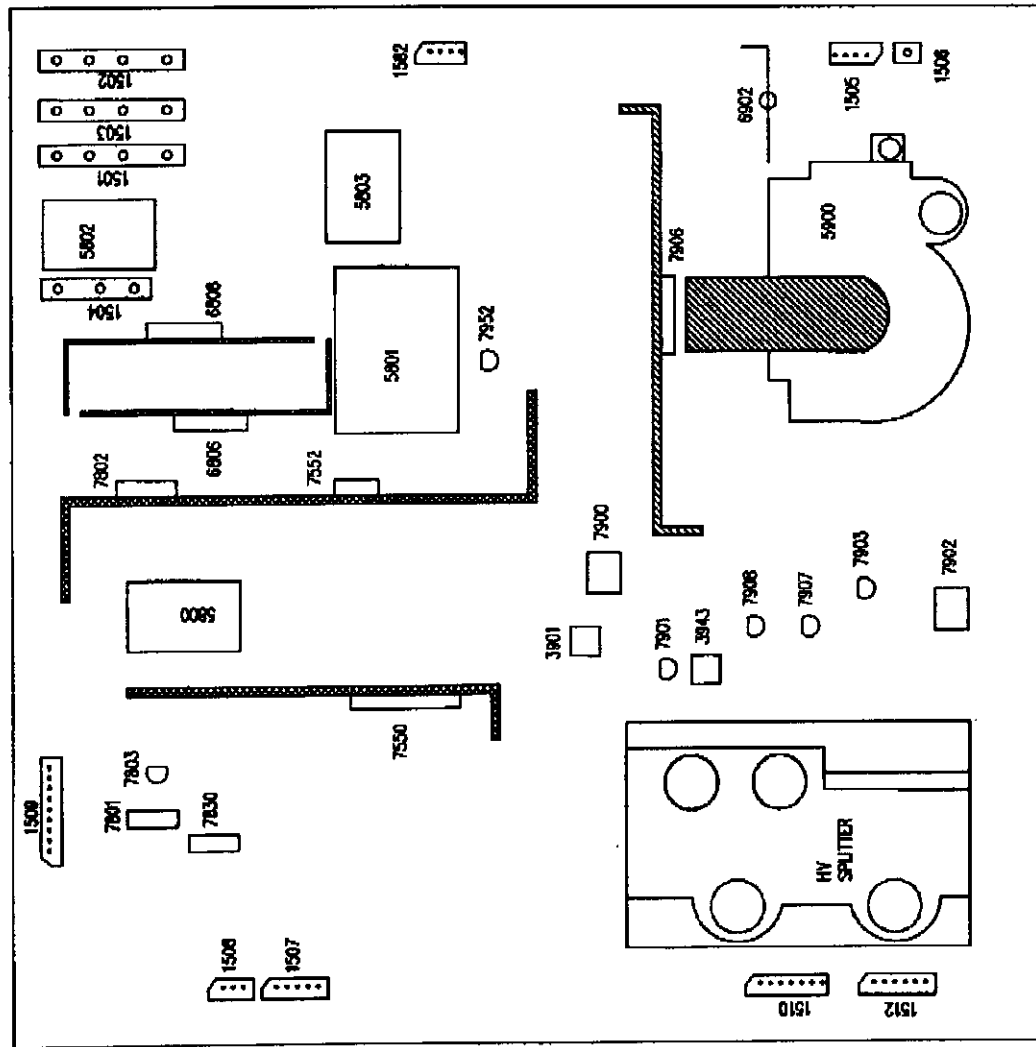


A15 HP-R/3-0344

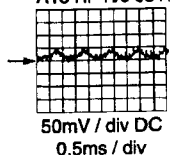


A16 SC2-R

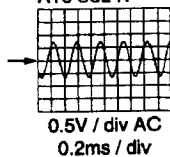


A17 SC2-R

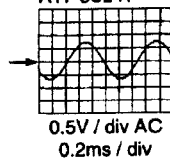


A20 R/60-7751

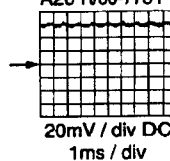


A21 L/59-7751

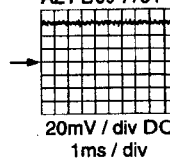


A22 SC1-R/48-7751

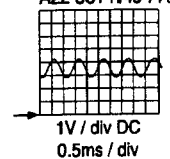


A23 SC1-L/47-7751

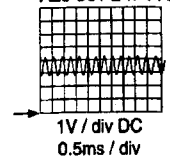


A24 SC2-R/51-7751

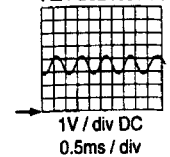

A25 SC2-L/50-7751

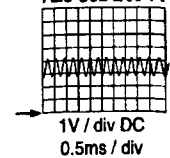


C1 Reset/c-7007

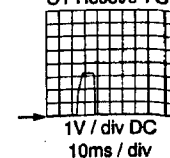


C2 +3V3


C3 6MHz/2016/1001

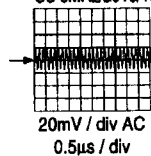


F1K Y-OUT/19-7402

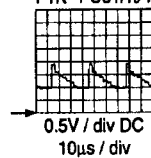


F2K U-OUT/17-7402

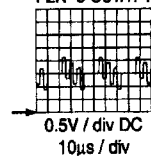


F3K V-OUT/16-7402

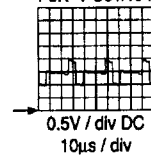


F4K VD/23-7300

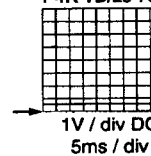


F5K HD/24-7300

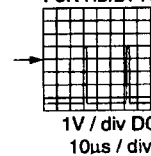


I2 PIN11-Tuner

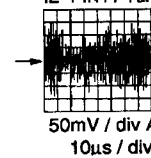








































I7 B7502

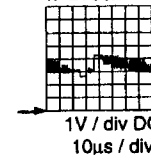

I11 SIFM-E7111

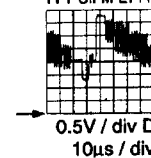


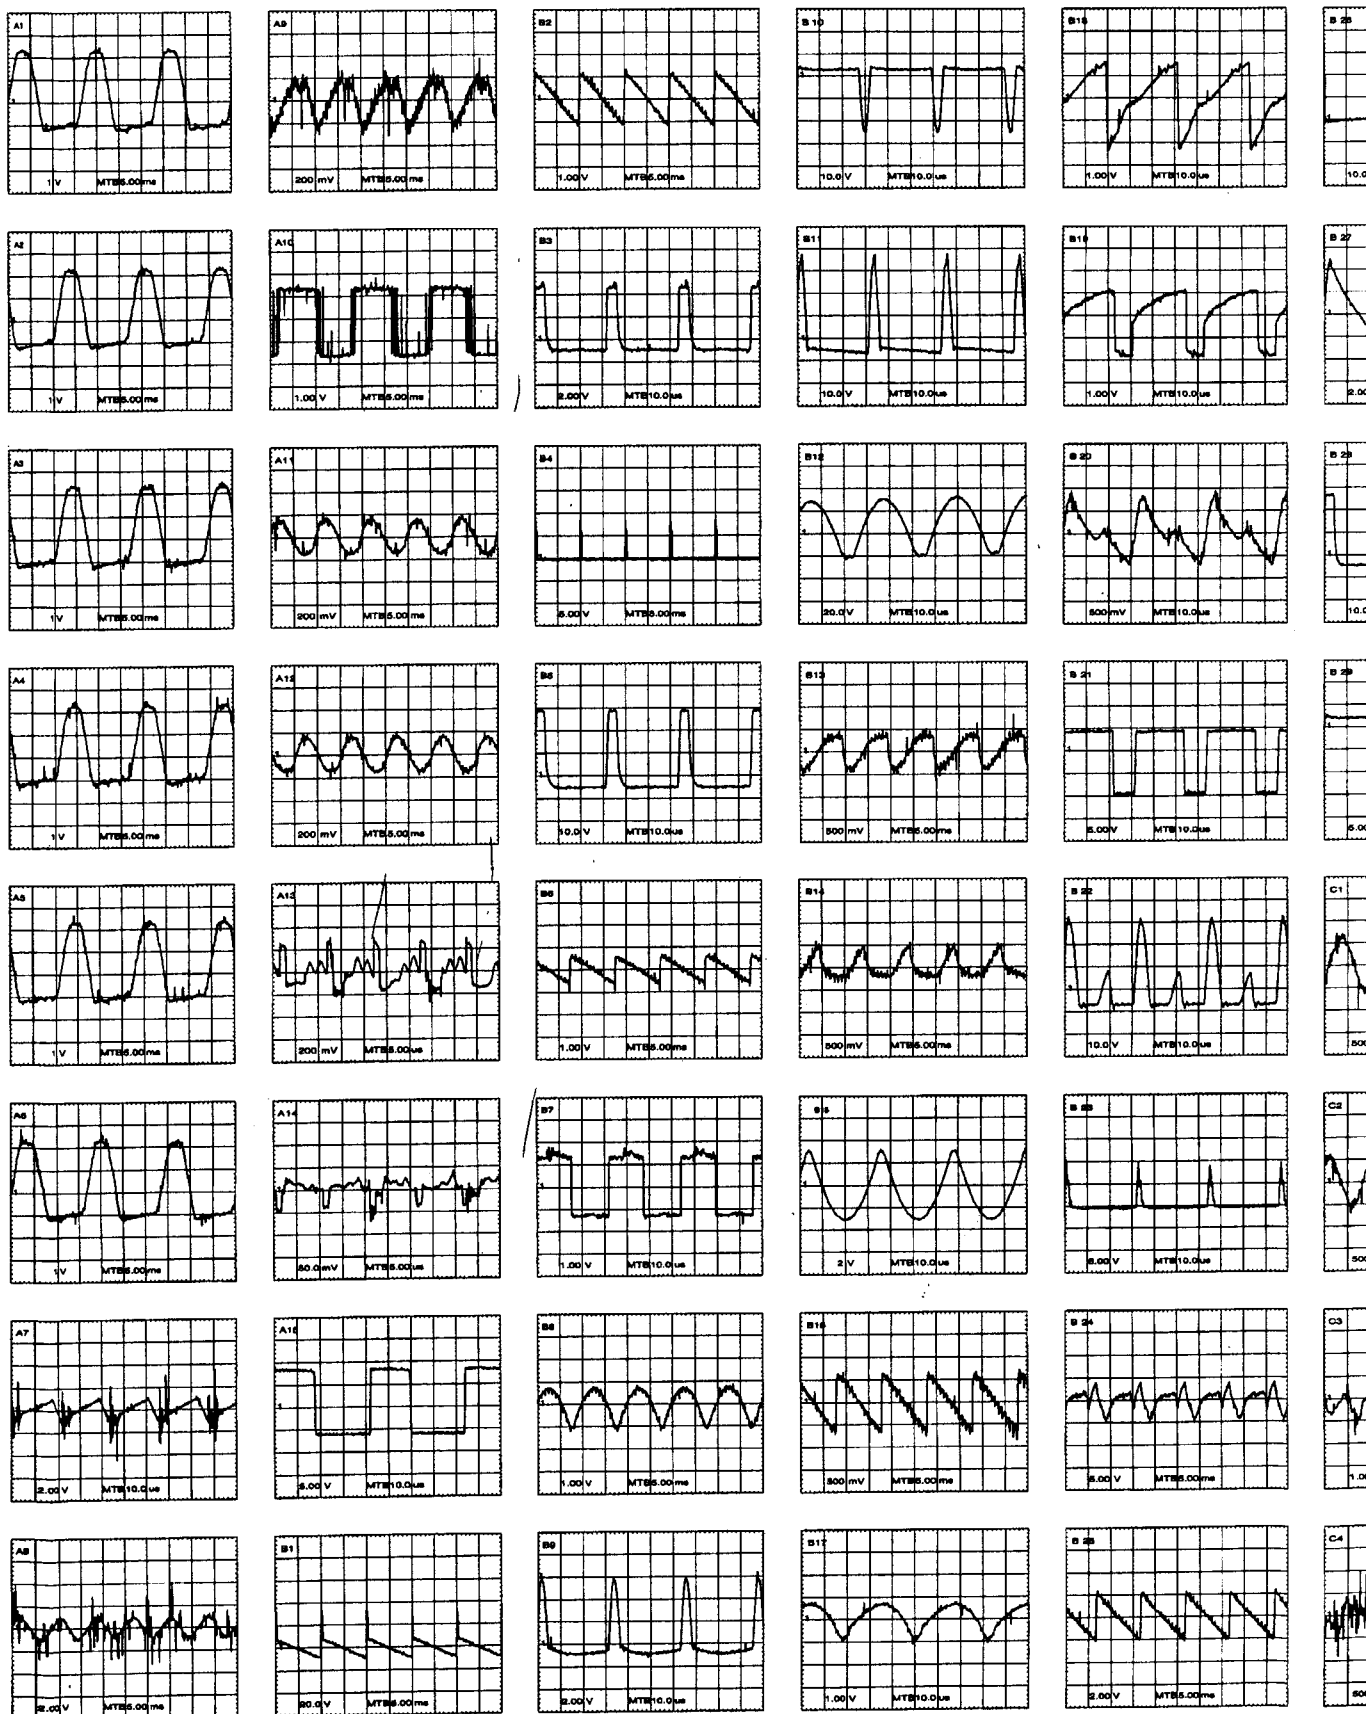


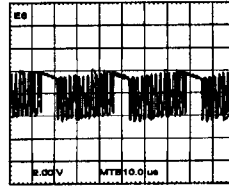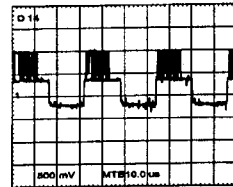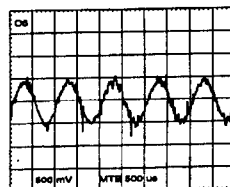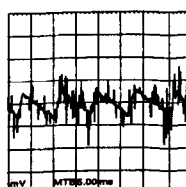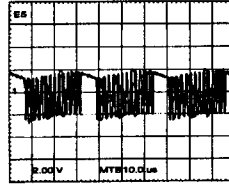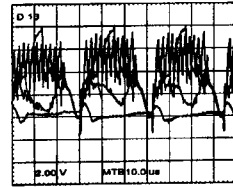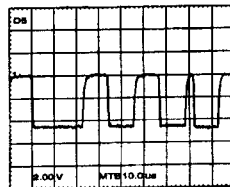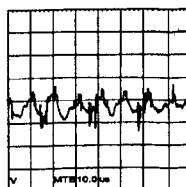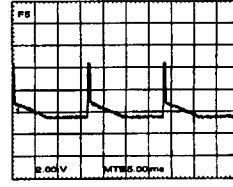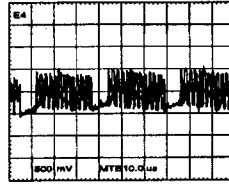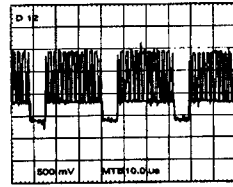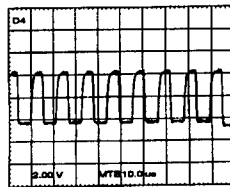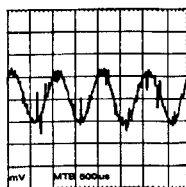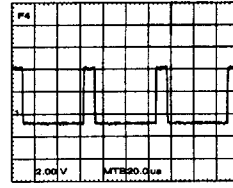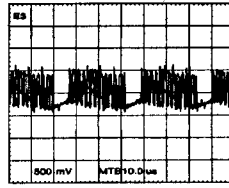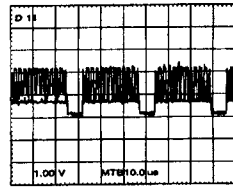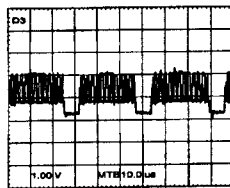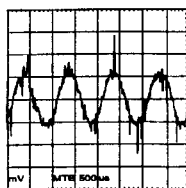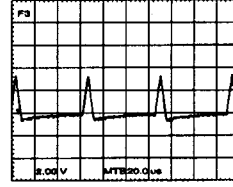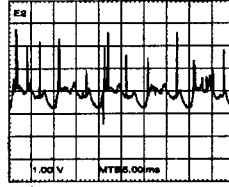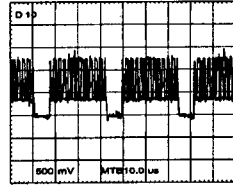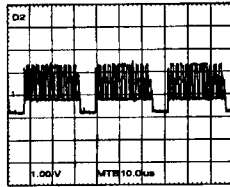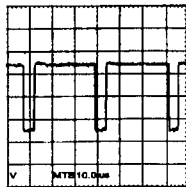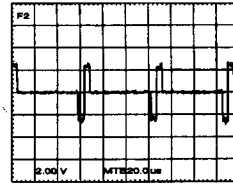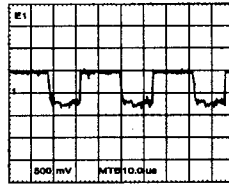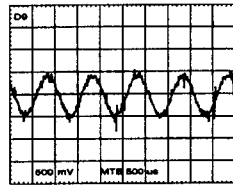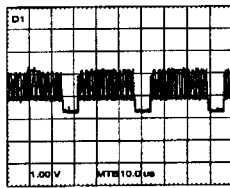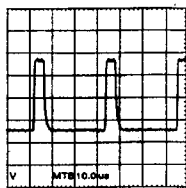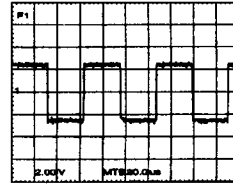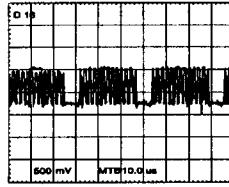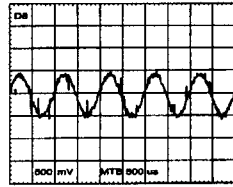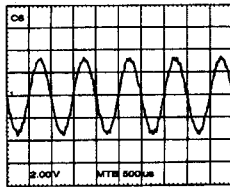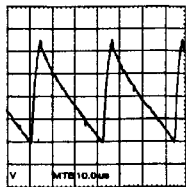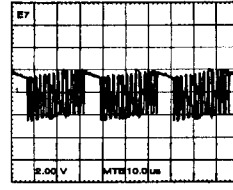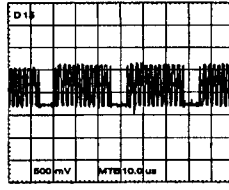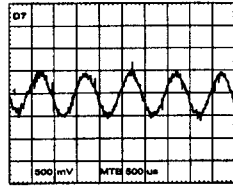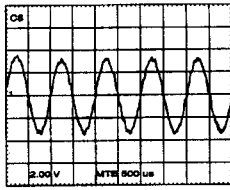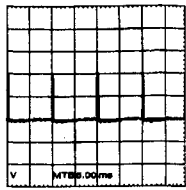

7. Electrical diagrams and print lay-outs

Power supply

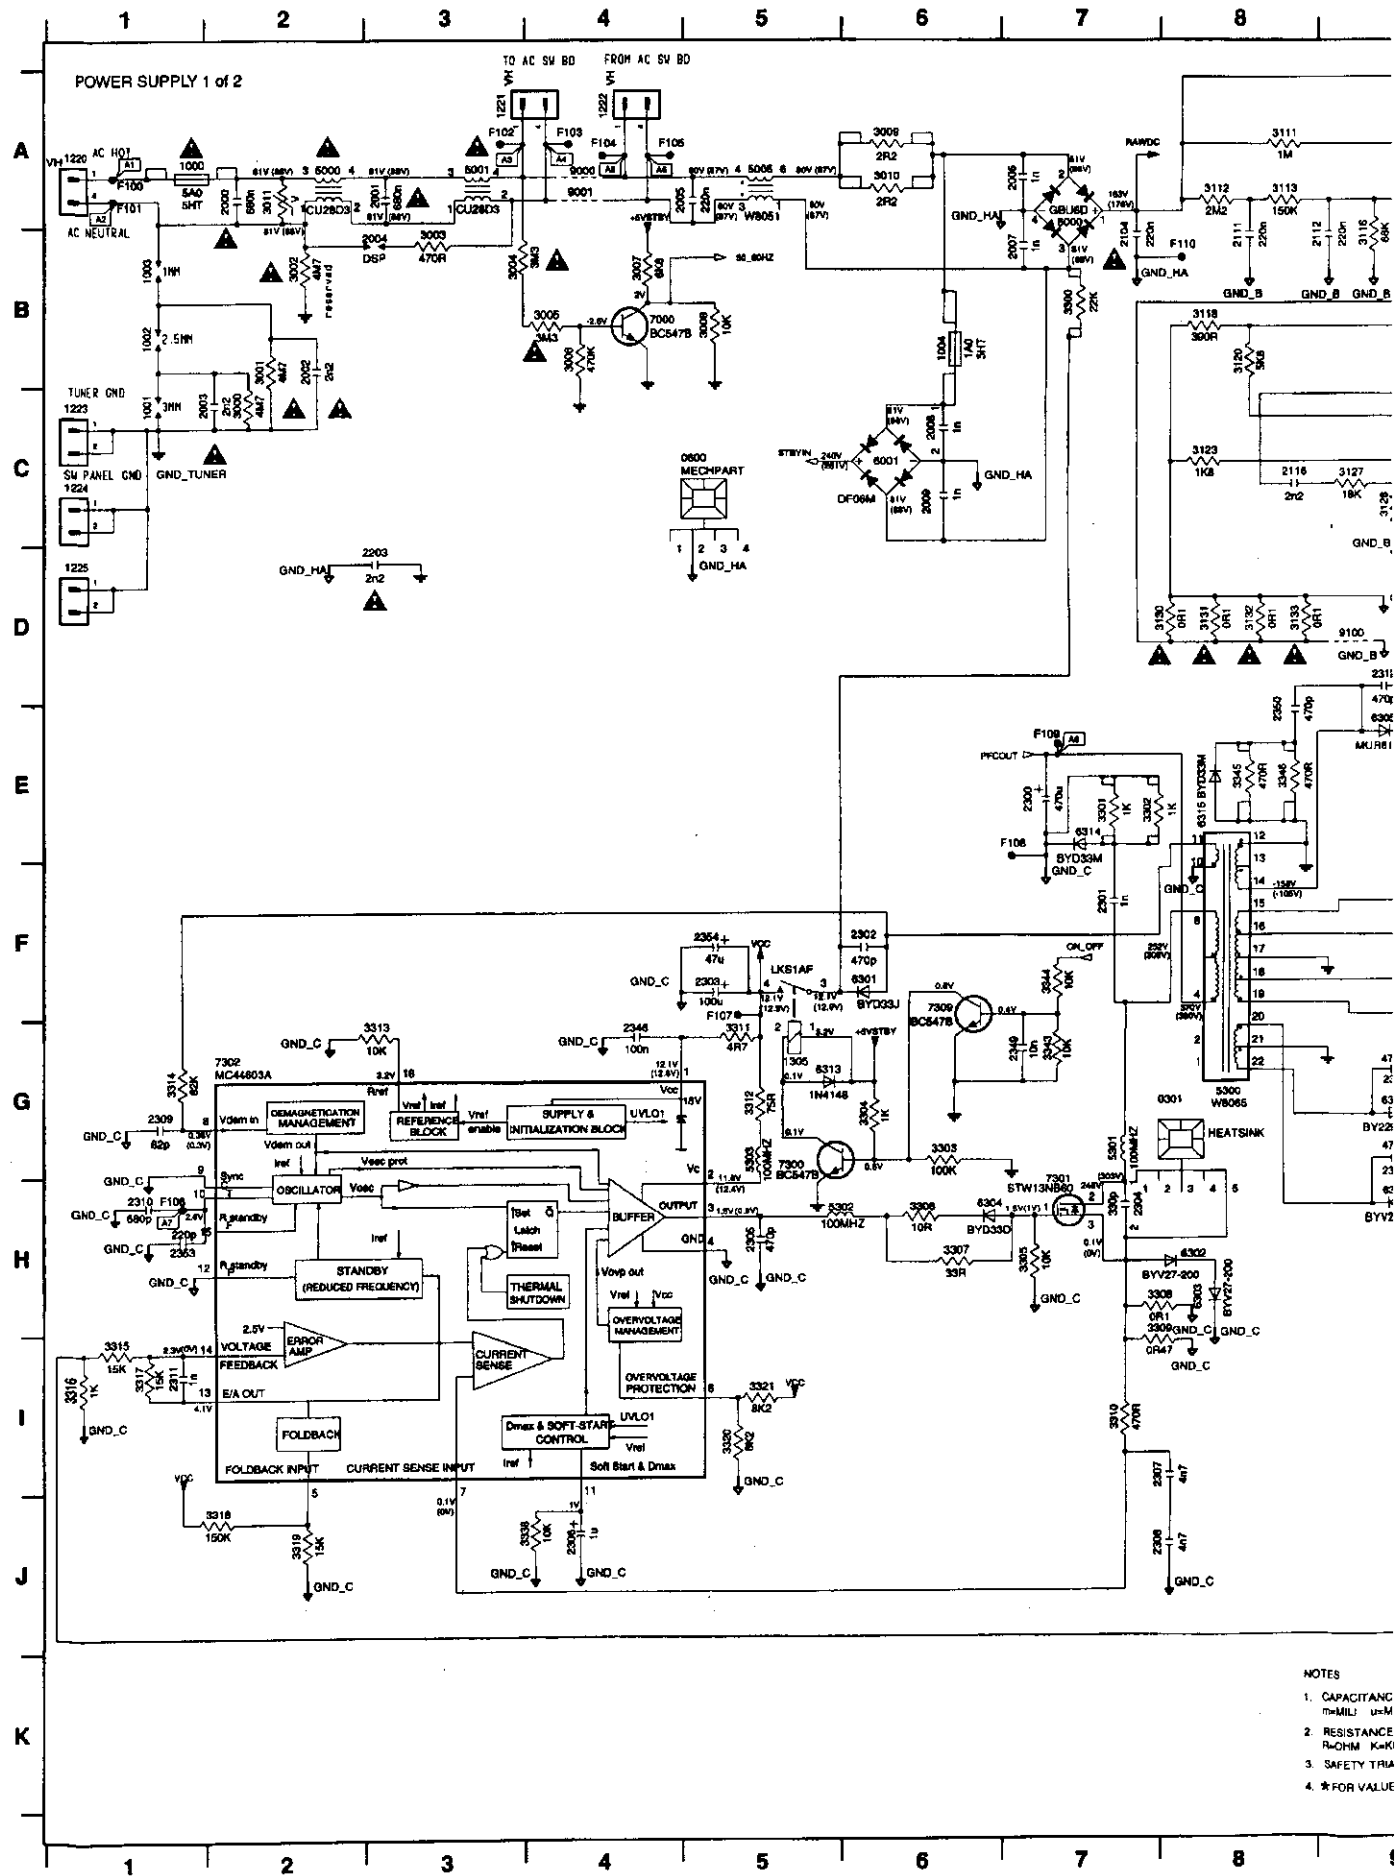

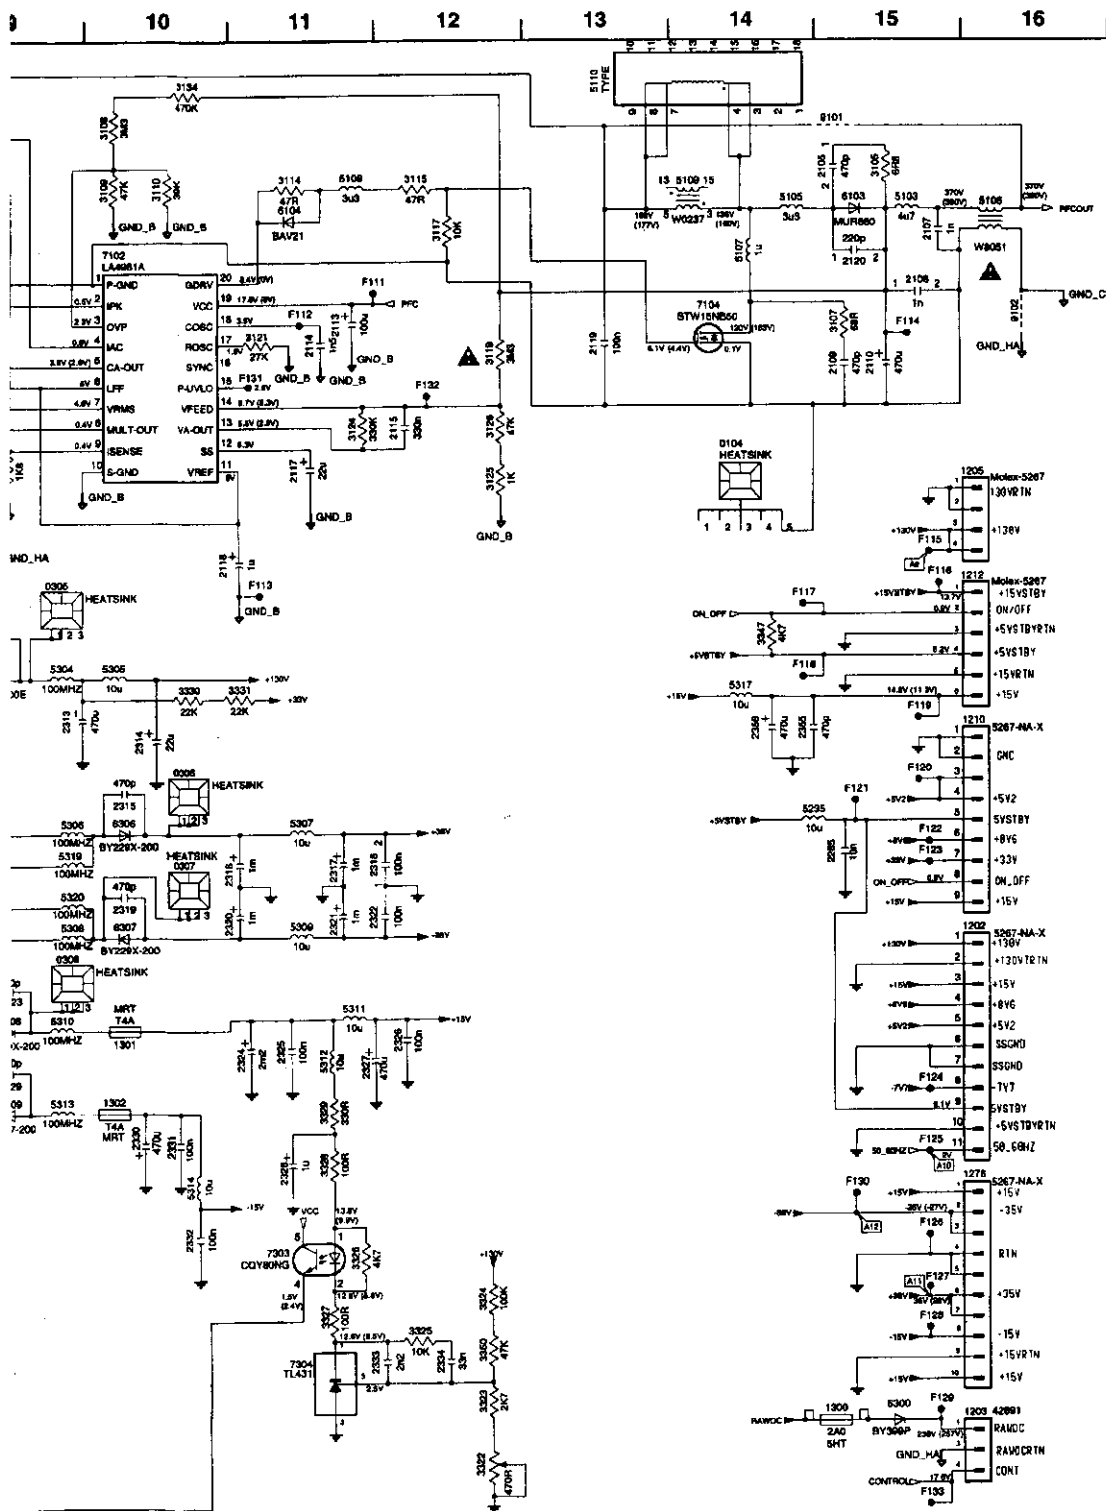


A
B
C
D
E
F
G
H
I
J
K

0104 C14	3135 D8
0301 G7	3136 A10
0306 D9	3300 B7
0308 E10	3301 E7
0307 F10	3302 E7
0308 G9	3303 G9
0600 C4	3304 G6
1000 A1	3305 H7
1001 C1	3306 H8
1002 B1	3307 H8
1003 B1	3308 H7
1004 B4	3309 I7
1202 F16	3310 I7
1203 J16	3311 G6
1205 C15	3312 G5
1210 E18	3313 G3
1212 D15	3314 G1
1220 A1	3315 H1
1221 A3	3316 H1
1222 A4	3317 H1
1223 C1	3318 J2
1224 C1	3319 J2
1225 D4	3320 I6
1278 H16	3321 I6
1300 A10	3322 J12
1301 G10	3323 J12
1302 H10	3324 J12
1305 G5	3325 H2
1306 A2	3326 H1
1301 A3	3327 H1
2002 B2	3328 H1
2003 C2	3329 H1
2004 B2	3330 H1
2005 A4	3331 E11
2006 A7	3332 J4
2007 B7	3343 G7
2008 C6	3344 F7
2009 C6	3345 E8
2104 B7	3346 E8
2106 A15	3347 D14
2107 B16	3348 H2
2108 B16	3349 A2
2109 C18	3350 A3
2110 C15	3351 A5
2111 B4	3352 A15
2112 B9	3353 A14
2113 B11	3354 A16
2114 B11	3355 B14
2115 C12	3356 A11
2116 C6	3357 A16
2117 C11	3358 A13
2118 D16	3359 F14
2119 B13	3360 G8
2120 B18	3361 G7
2205 D3	3362 H6
2206 F16	3363 H5
2300 E7	3364 E9
2301 F7	3365 E10
2302 F8	3366 F9
2303 F5	3367 F11
2304 H7	3368 F9
2305 H6	3369 F11
2306 J4	3370 G8
2307 A8	3371 G11
2308 J4	3372 G11
2309 G1	3373 H9
2310 H1	3374 H10
2311 H1	3375 E14
2312 D9	3376 A16
2313 E9	3377 F9
2314 E10	3378 A7
2315 F10	3379 C6
2316 F11	3380 A16
2317 F11	3381 A11
2318 F12	3382 J15
2319 F10	3383 F6
2320 F11	3384 H6
2321 F11	3385 H6
2322 F12	3386 H6
2323 G8	3387 E9
2324 G11	3388 F10
2325 G11	3389 F10
2326 G12	3390 G9
2327 G11	3391 H8
2328 H11	3392 G5
2329 G8	3393 E7
2330 H10	3394 E9
2331 H10	3395 B4
2332 H10	3396 B10
2333 H12	3397 B14
2334 H12	3398 H5
2335 G4	3399 H7
2336 G7	3399 G2
2337 E8	3399 H1
2338 H1	3399 H1
2339 H1	3399 H1
2340 H1	3399 H1
2341 A2	3399 E7
2342 B15	3399 B6
2343 B11	3399 B11
2344 A10	3399 B11
2345 A10	3399 B11
2346 A10	3399 B11
2347 A10	3399 B11
2348 A10	3399 B11
2349 A10	3399 B11
2350 A10	3399 B11
2351 A10	3399 B11
2352 A10	3399 B11
2353 A10	3399 B11
2354 A10	3399 B11
2355 A10	3399 B11
2356 A10	3399 B11
2357 A10	3399 B11
2358 A10	3399 B11
2359 A10	3399 B11
2360 A10	3399 B11
2361 A10	3399 B11
2362 A10	3399 B11
2363 A10	3399 B11
2364 A10	3399 B11
2365 A10	3399 B11
2366 A10	3399 B11
2367 A10	3399 B11
2368 A10	3399 B11
2369 A10	3399 B11
2370 A10	3399 B11
2371 A10	3399 B11
2372 A10	3399 B11
2373 A10	3399 B11
2374 A10	3399 B11
2375 A10	3399 B11
2376 A10	3399 B11
2377 A10	3399 B11
2378 A10	3399 B11
2379 A10	3399 B11
2380 A10	3399 B11
2381 A10	3399 B11
2382 A10	3399 B11
2383 A10	3399 B11
2384 A10	3399 B11
2385 A10	3399 B11
2386 A10	3399 B11
2387 A10	3399 B11
2388 A10	3399 B11
2389 A10	3399 B11
2390 A10	3399 B11
2391 A10	3399 B11
2392 A10	3399 B11
2393 A10	3399 B11
2394 A10	3399 B11
2395 A10	3399 B11
2396 A10	3399 B11
2397 A10	3399 B11
2398 A10	3399 B11
2399 A10	3399 B11

E VALUES ARE IN FARADS:
CRO n=1000 p=1000 f=1000
VALUES ARE IN OHMS:
LO M=1000 G=1000 T=1000
NGE REPRESENTS PCEC REPLACEMENT PART ONLY.
SEE PARTS LIST.

1 2 3 4 5 6

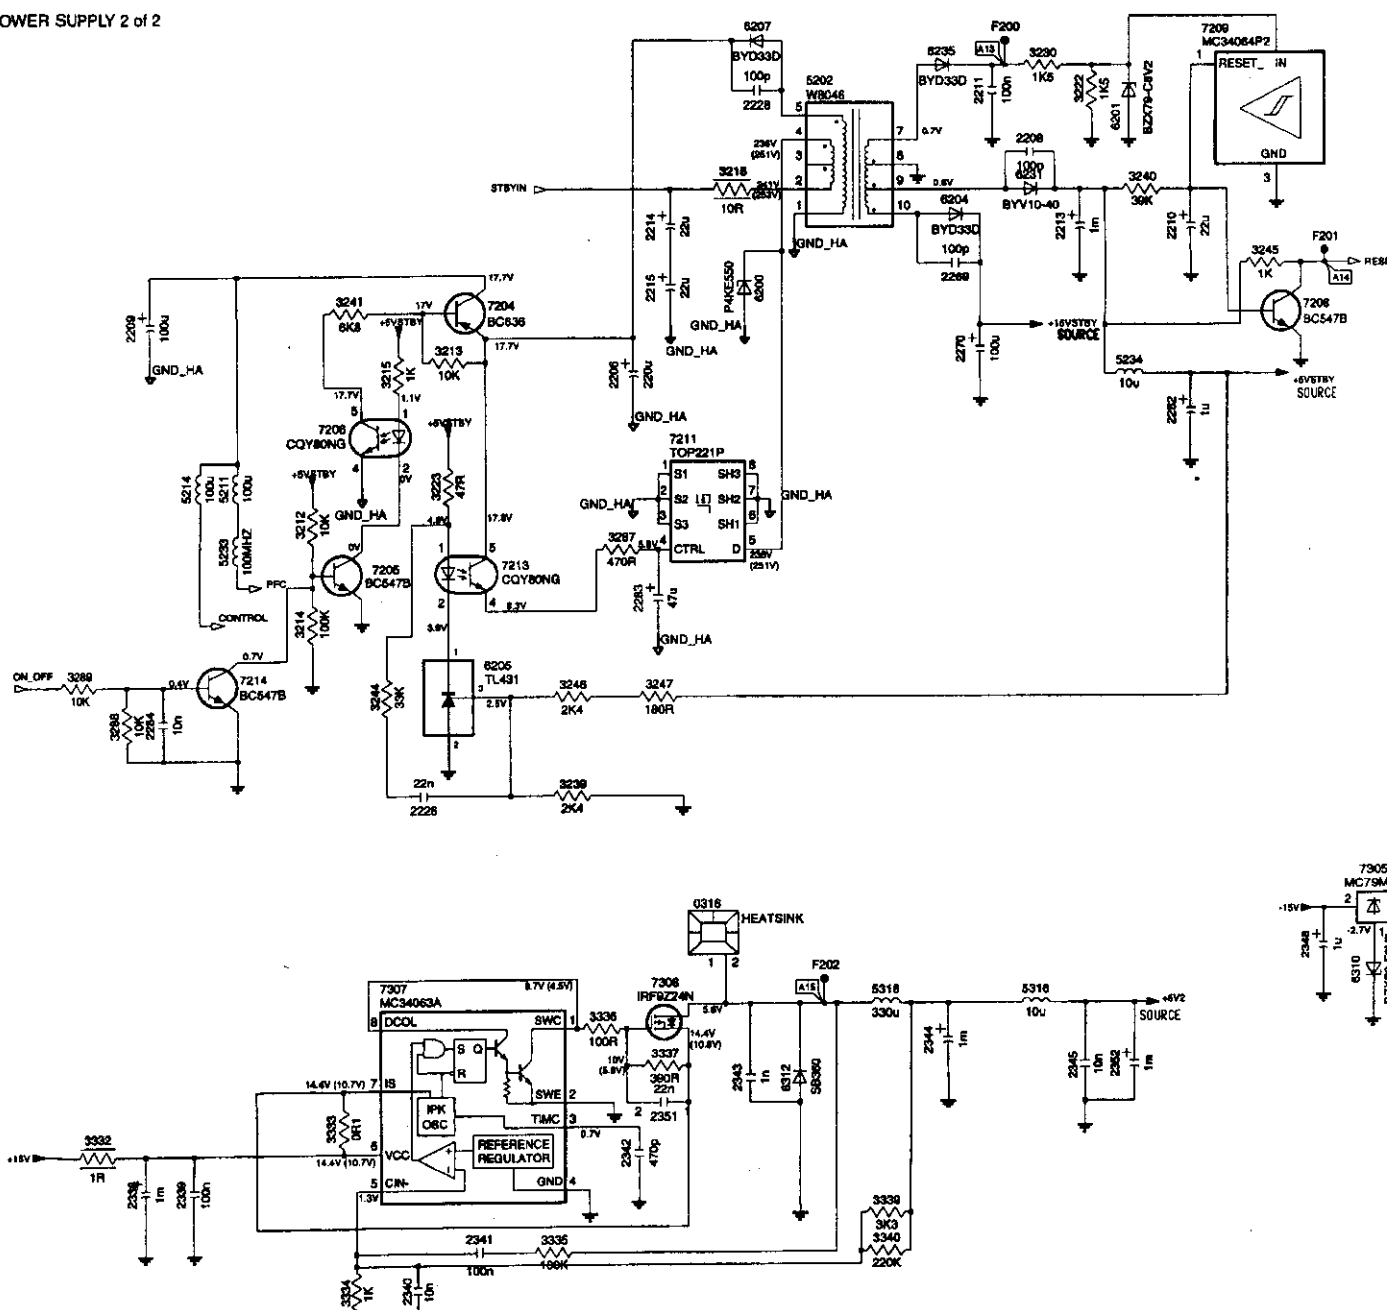

7

8

a

b



c

d

e

f


g

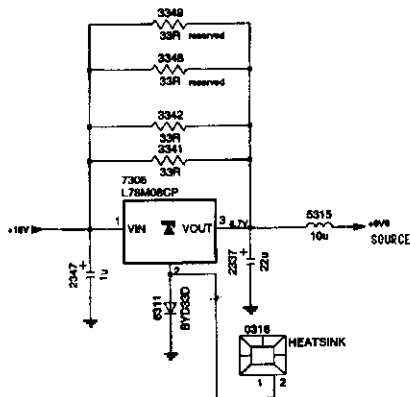


NOTES

1. CAPACITANCE VALUES ARE IN FARADS:
m=MILI u=MICRO n=NANO p=PICO f=FEMTO
2. RESISTANCE VALUES ARE IN OHMS:
R=OHM K=KILO M=MEGA G=GIGA T=TERA
3. SAFETY TRIANGLE REPRESENTS PCEC REPLACEMENT PART ONLY.
4. * FOR VALUE SEE PARTS LIST.


HV SCAN

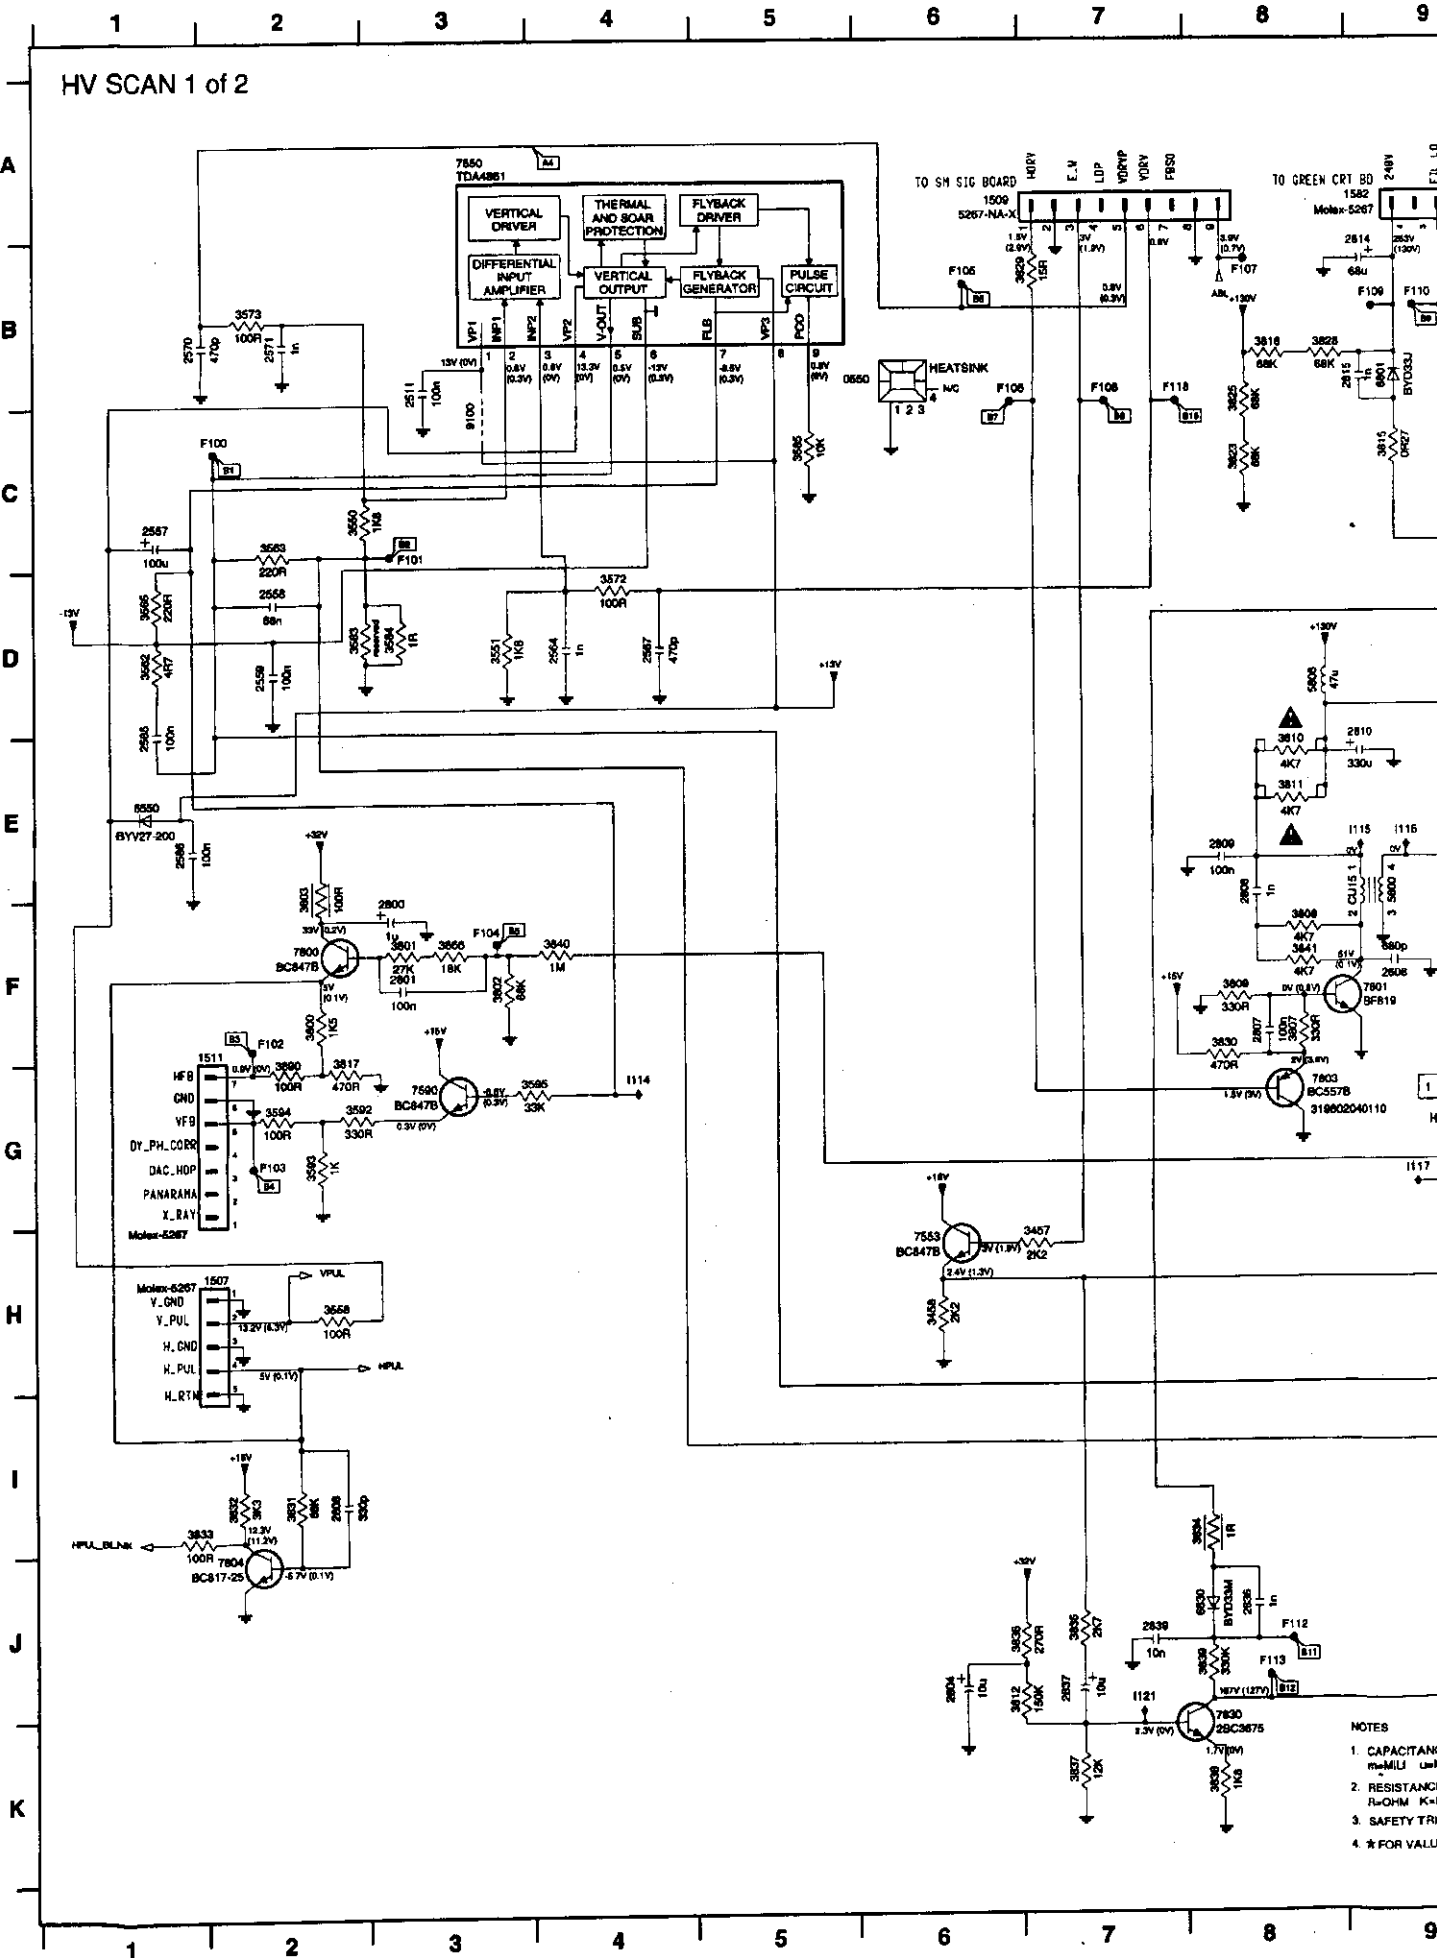

HV SCAN

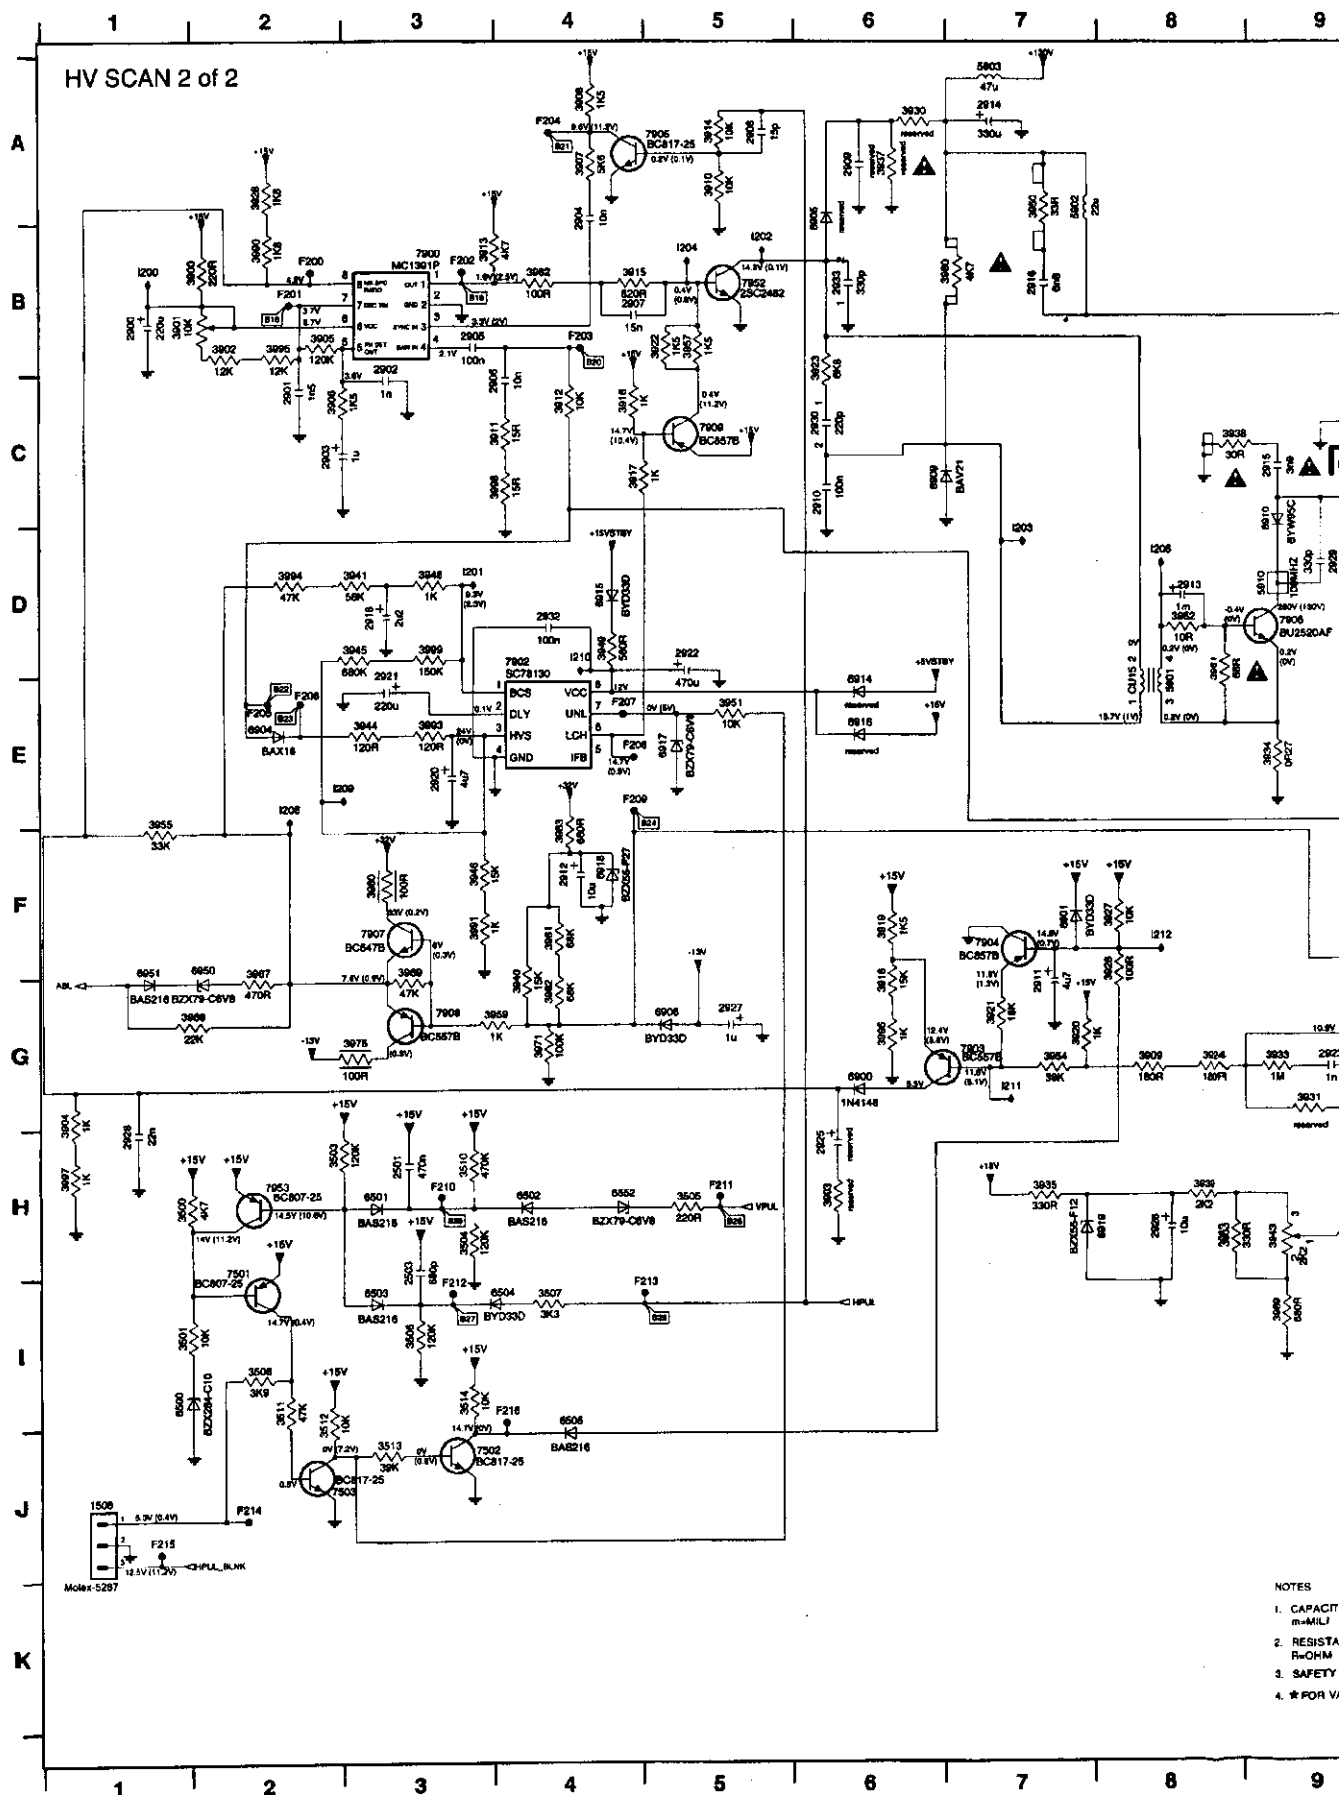


Mains switch panel

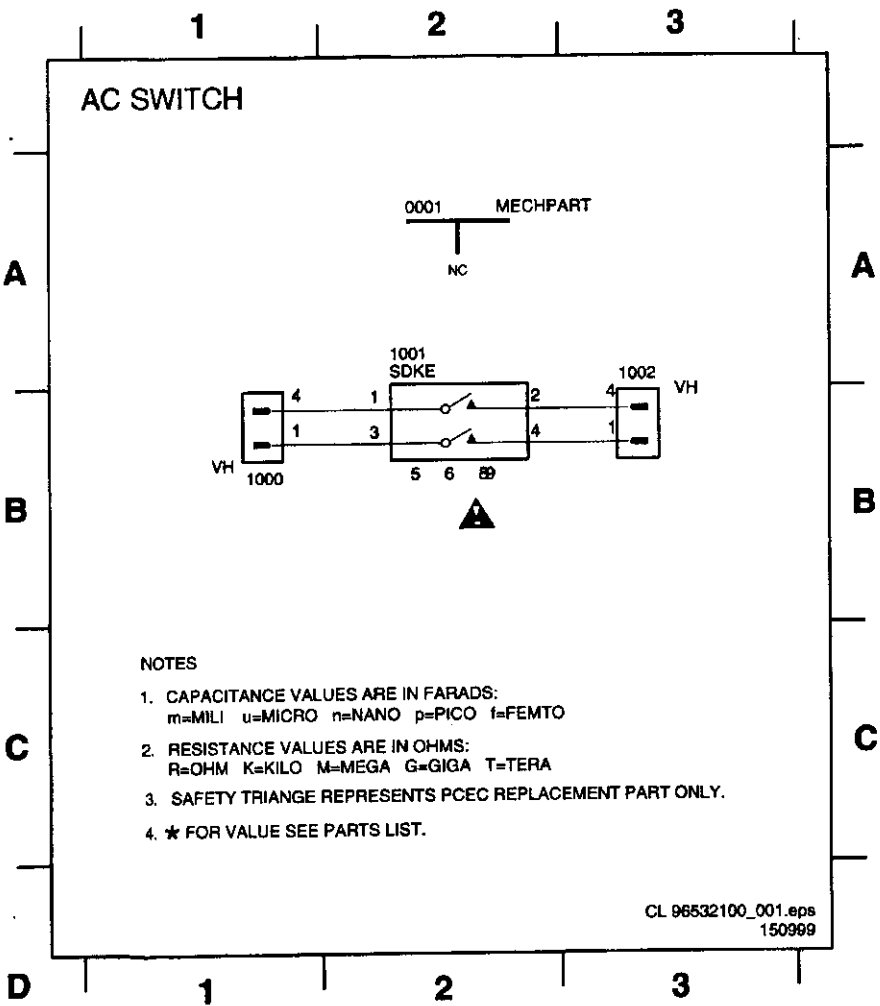

0001 A2
1000 B1
1001 A2
1002 A3


Convergence panel

CONVERGENCE 1 of 3



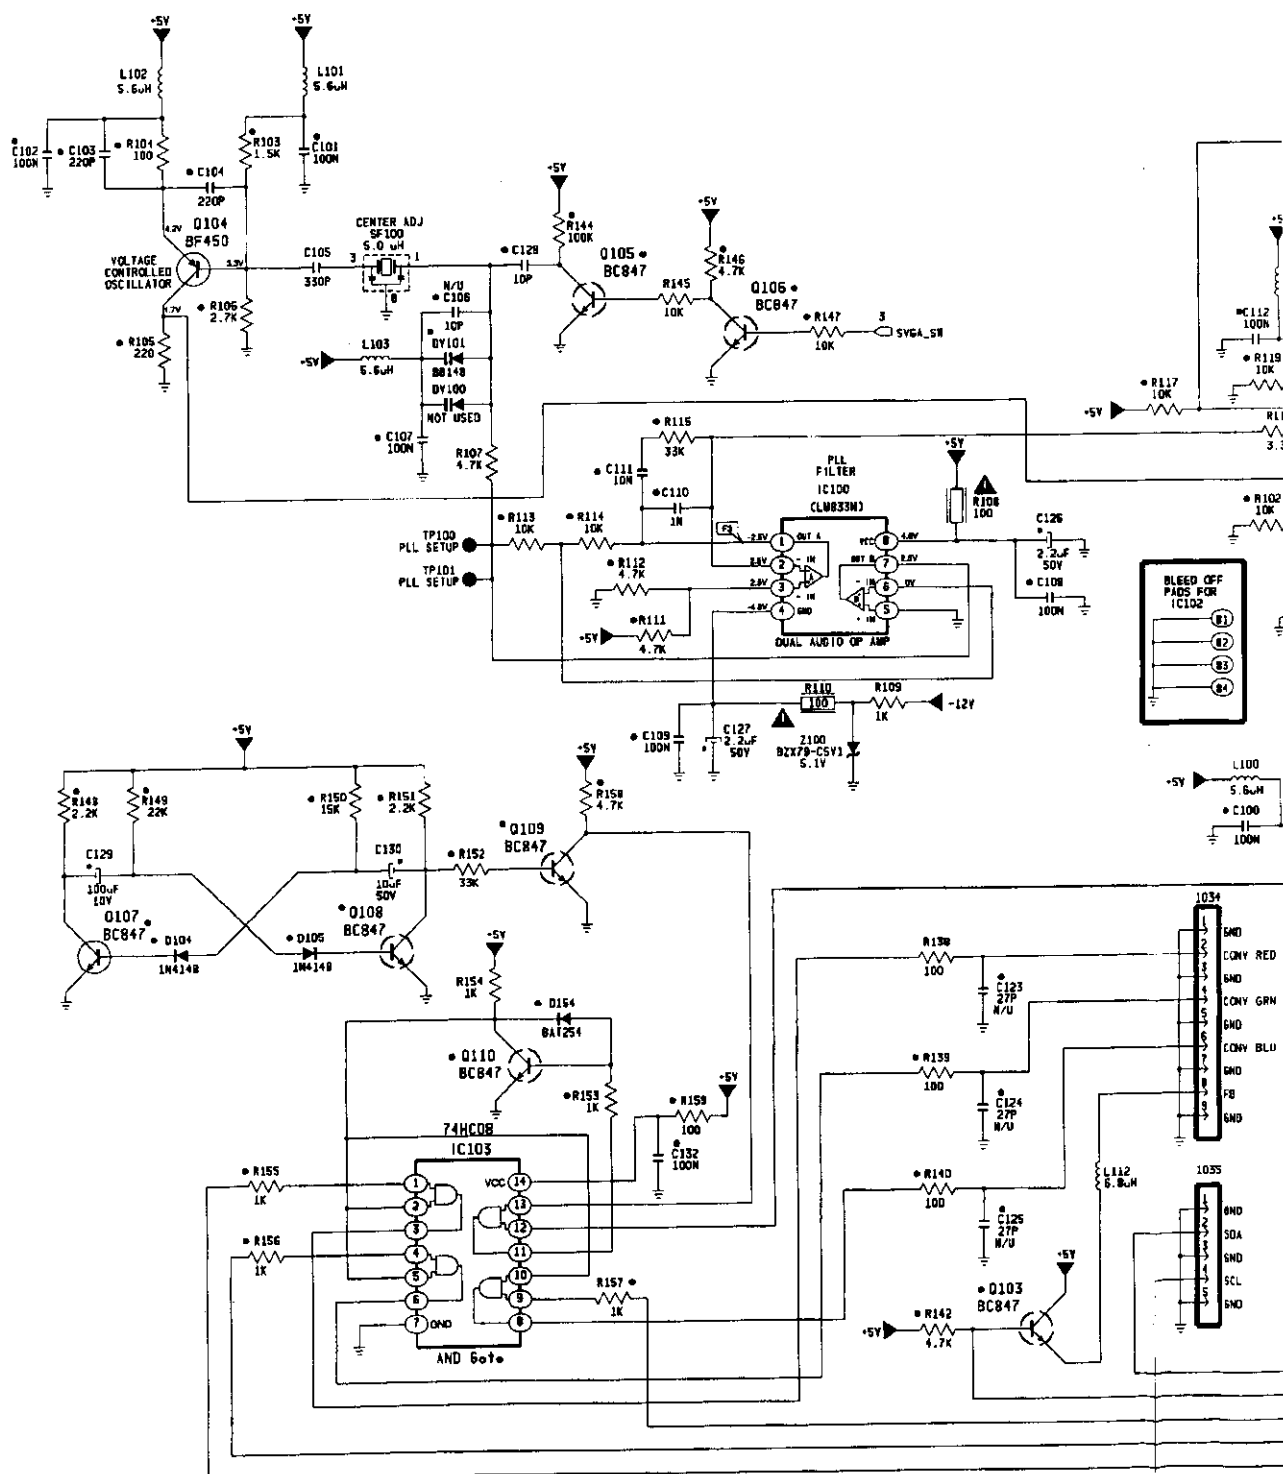


Convergence panel

CONVERGENCE 2 of 3

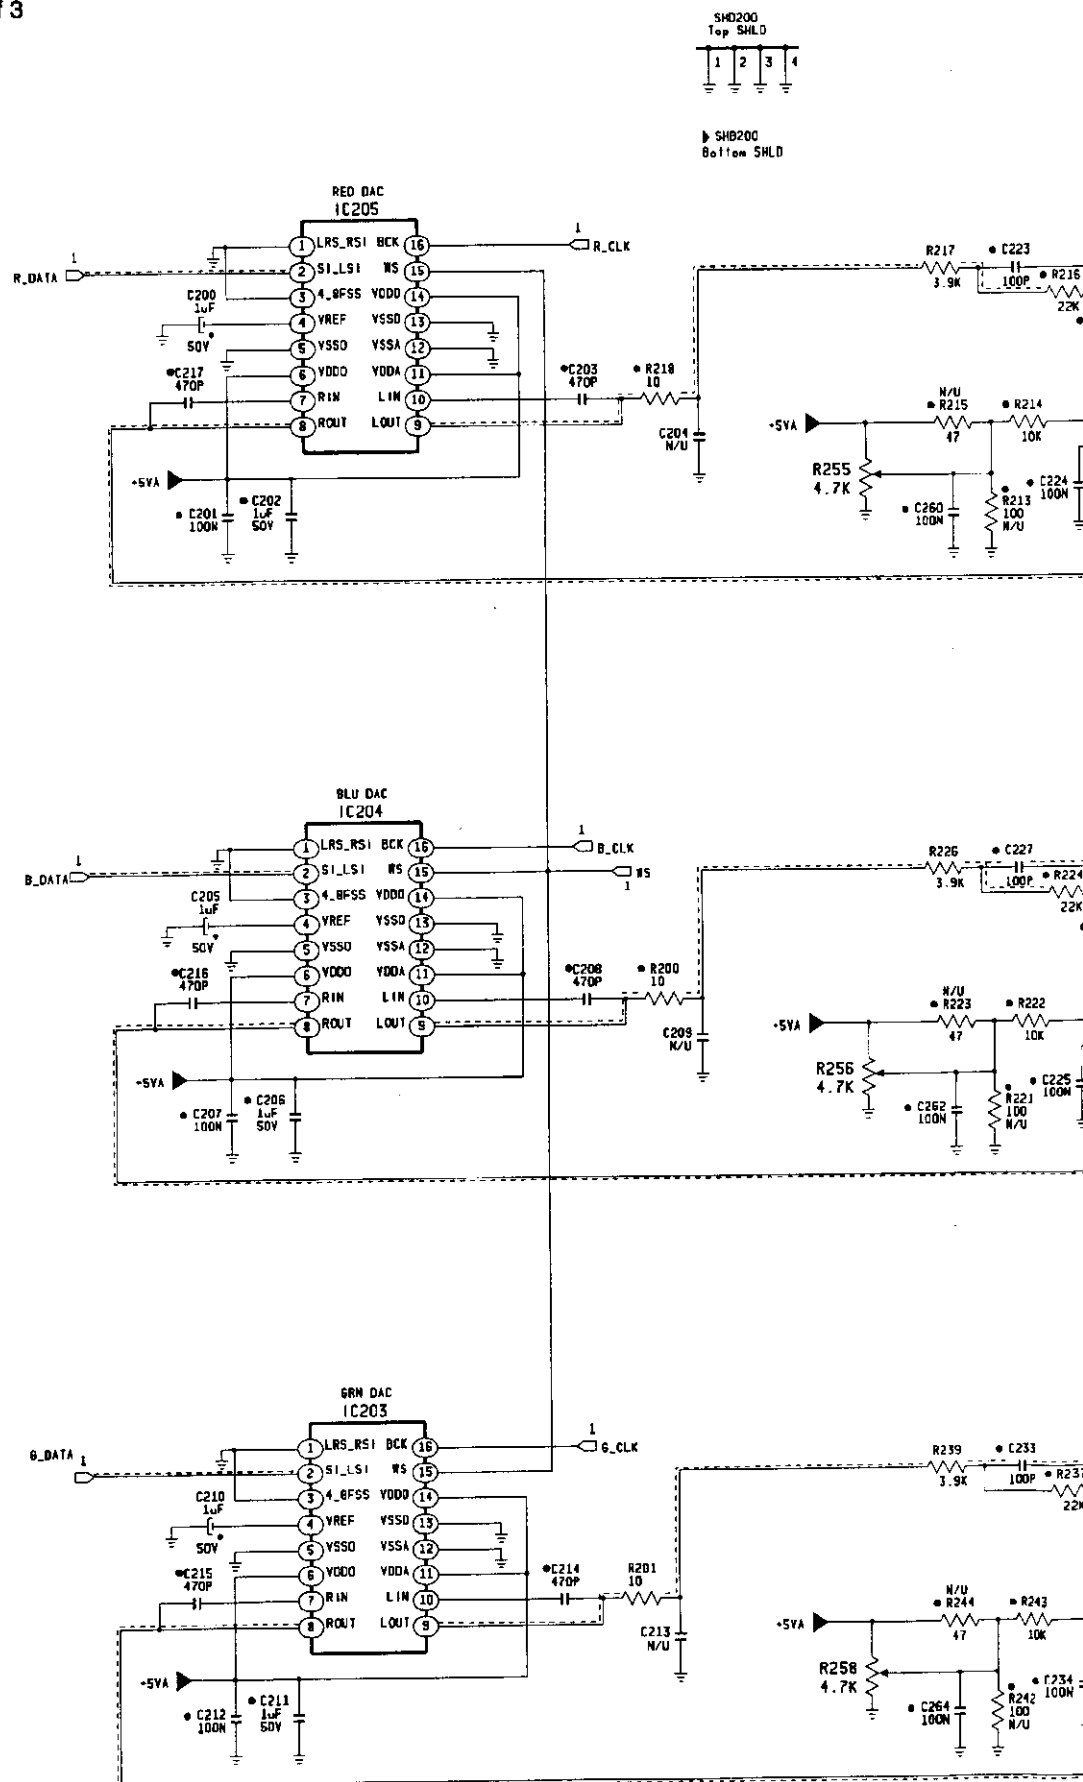



50

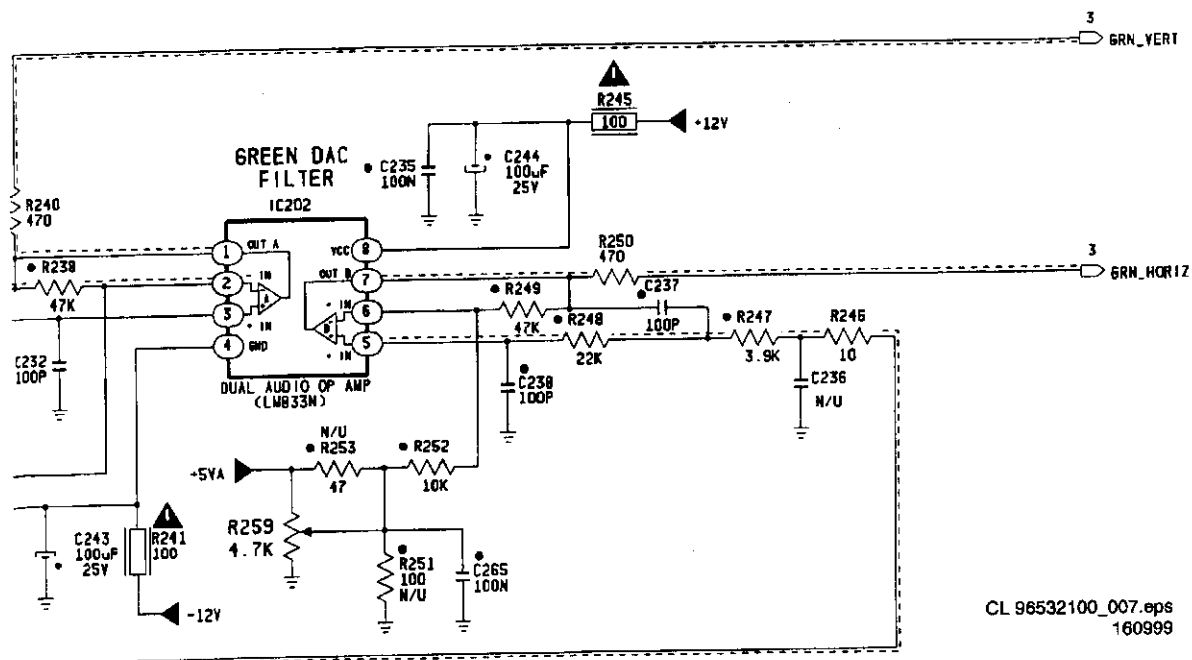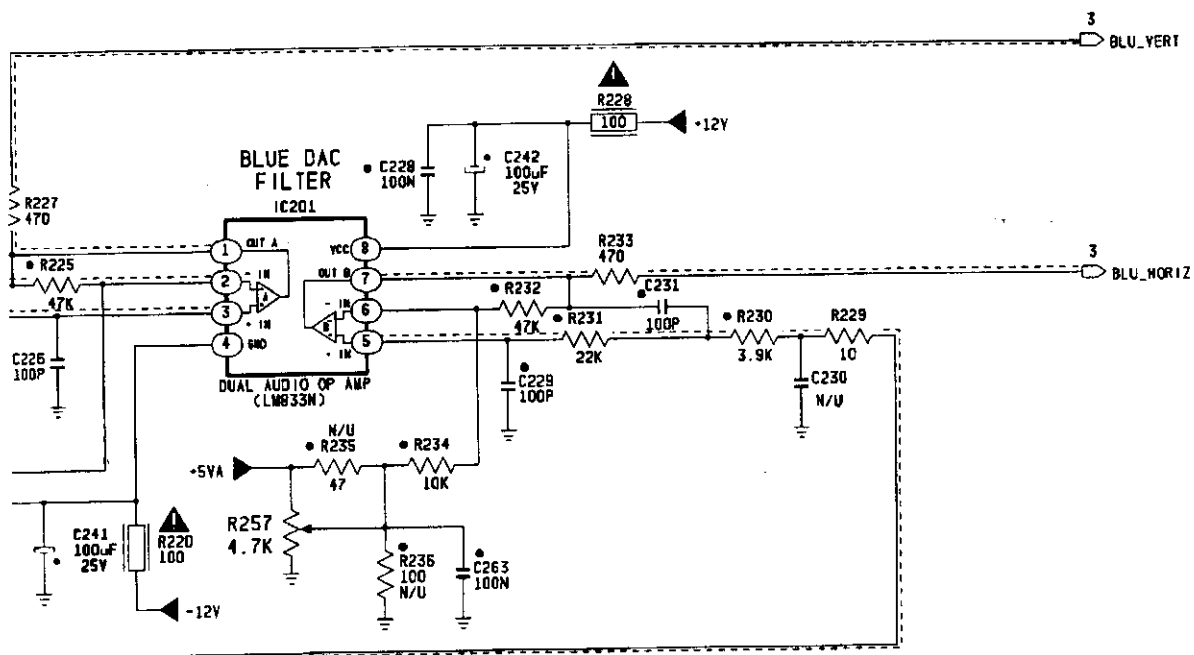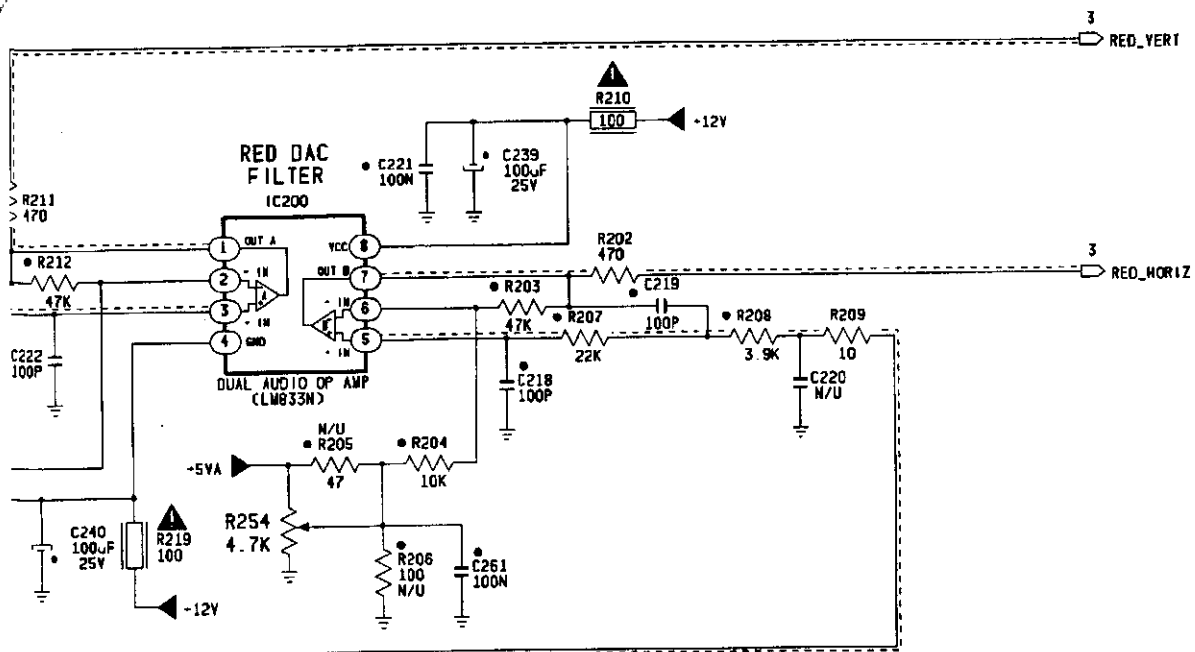


Convergence panel

CONVERGENCE 3 of 3

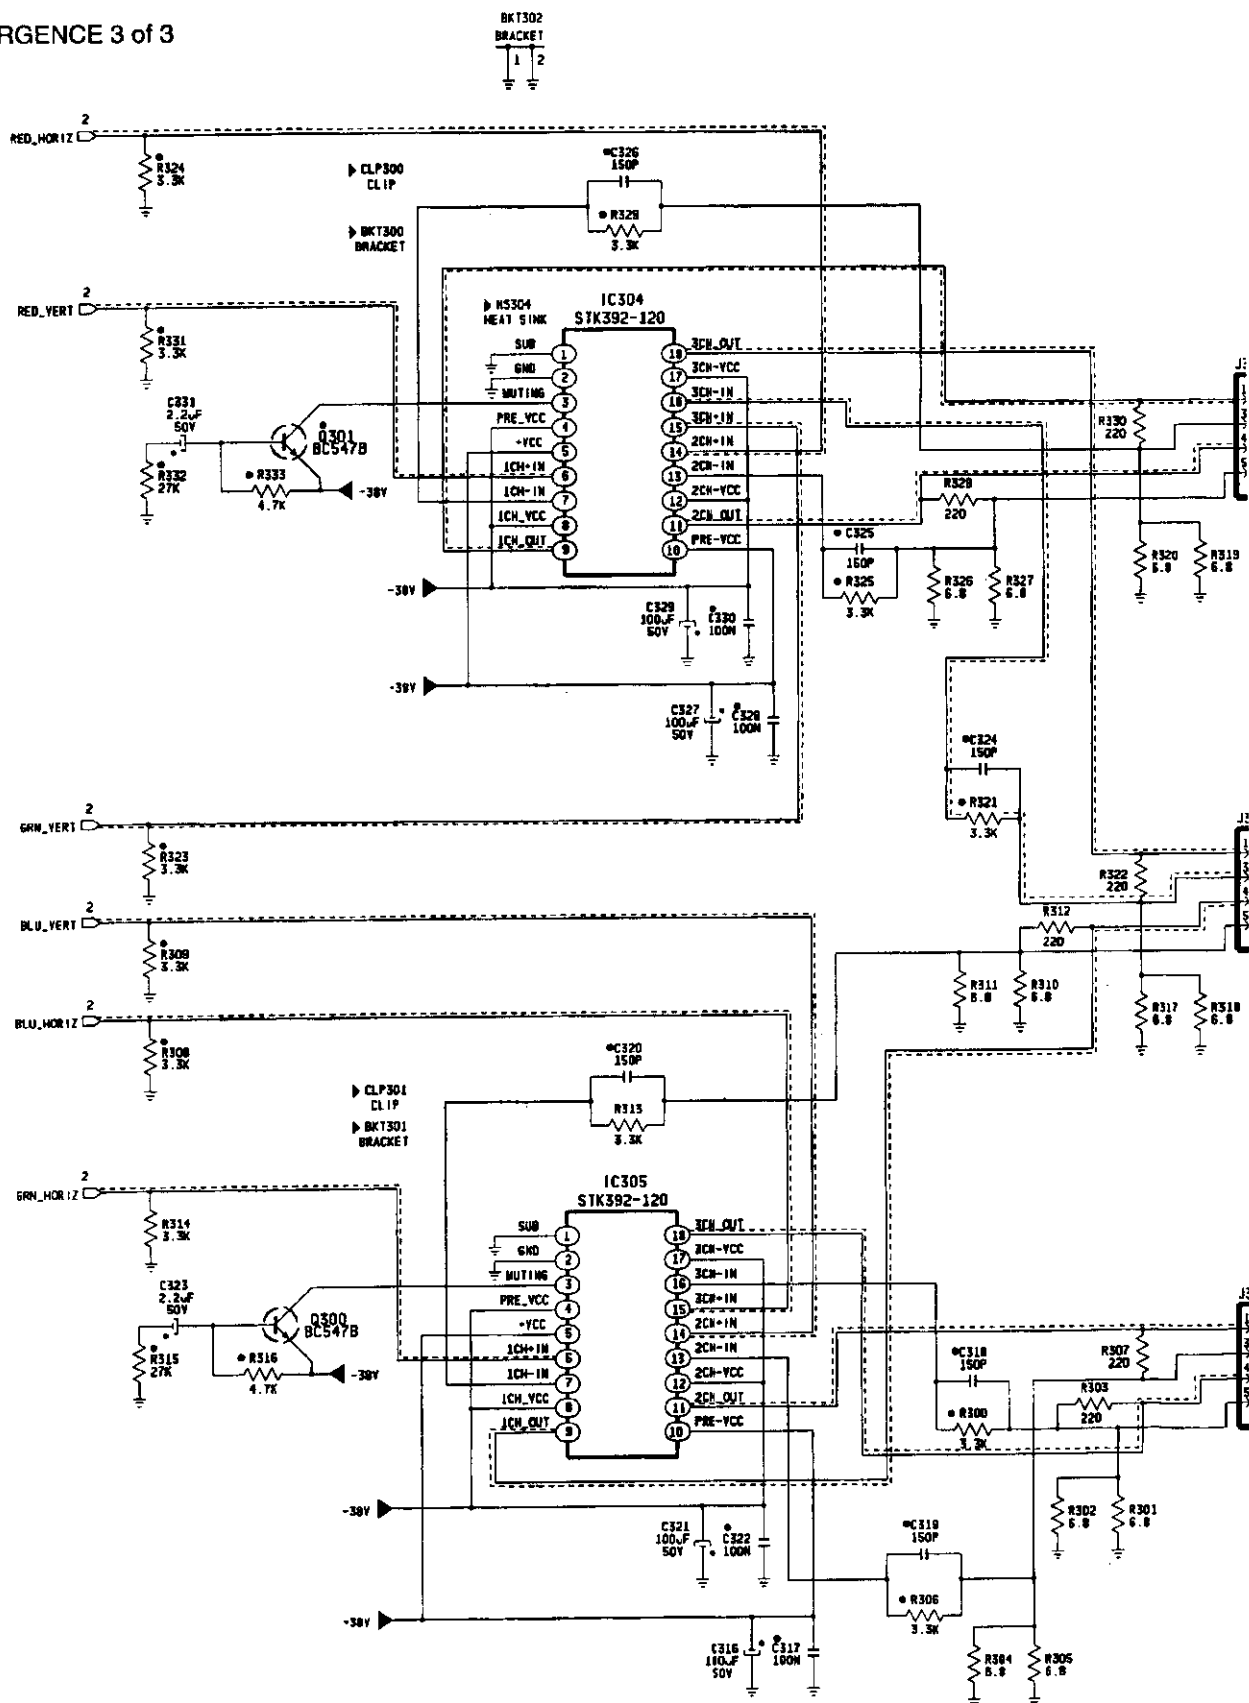

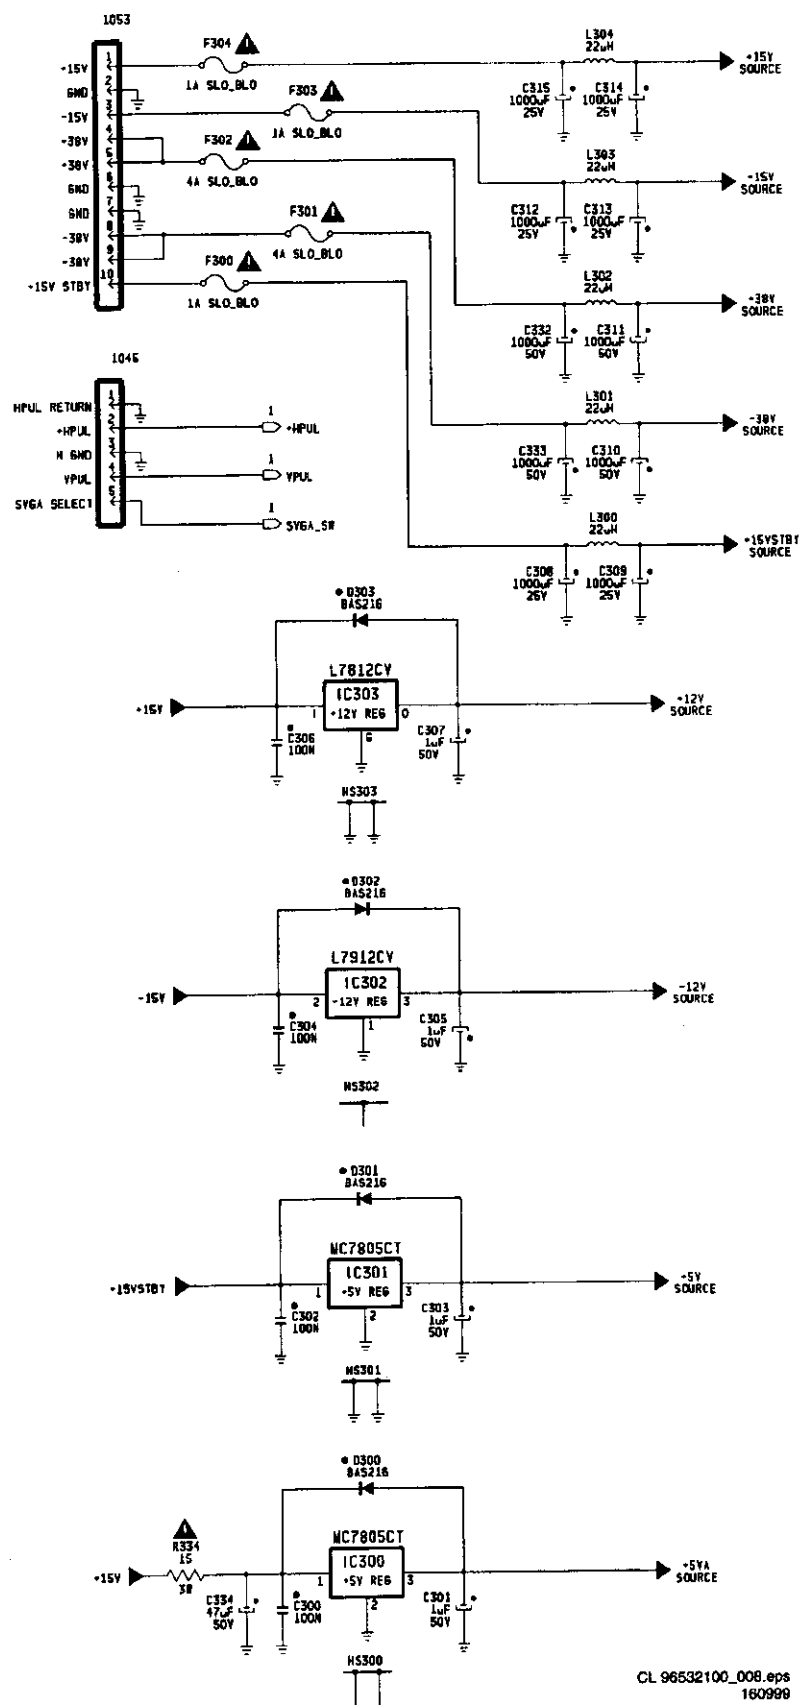


SVM PANEL

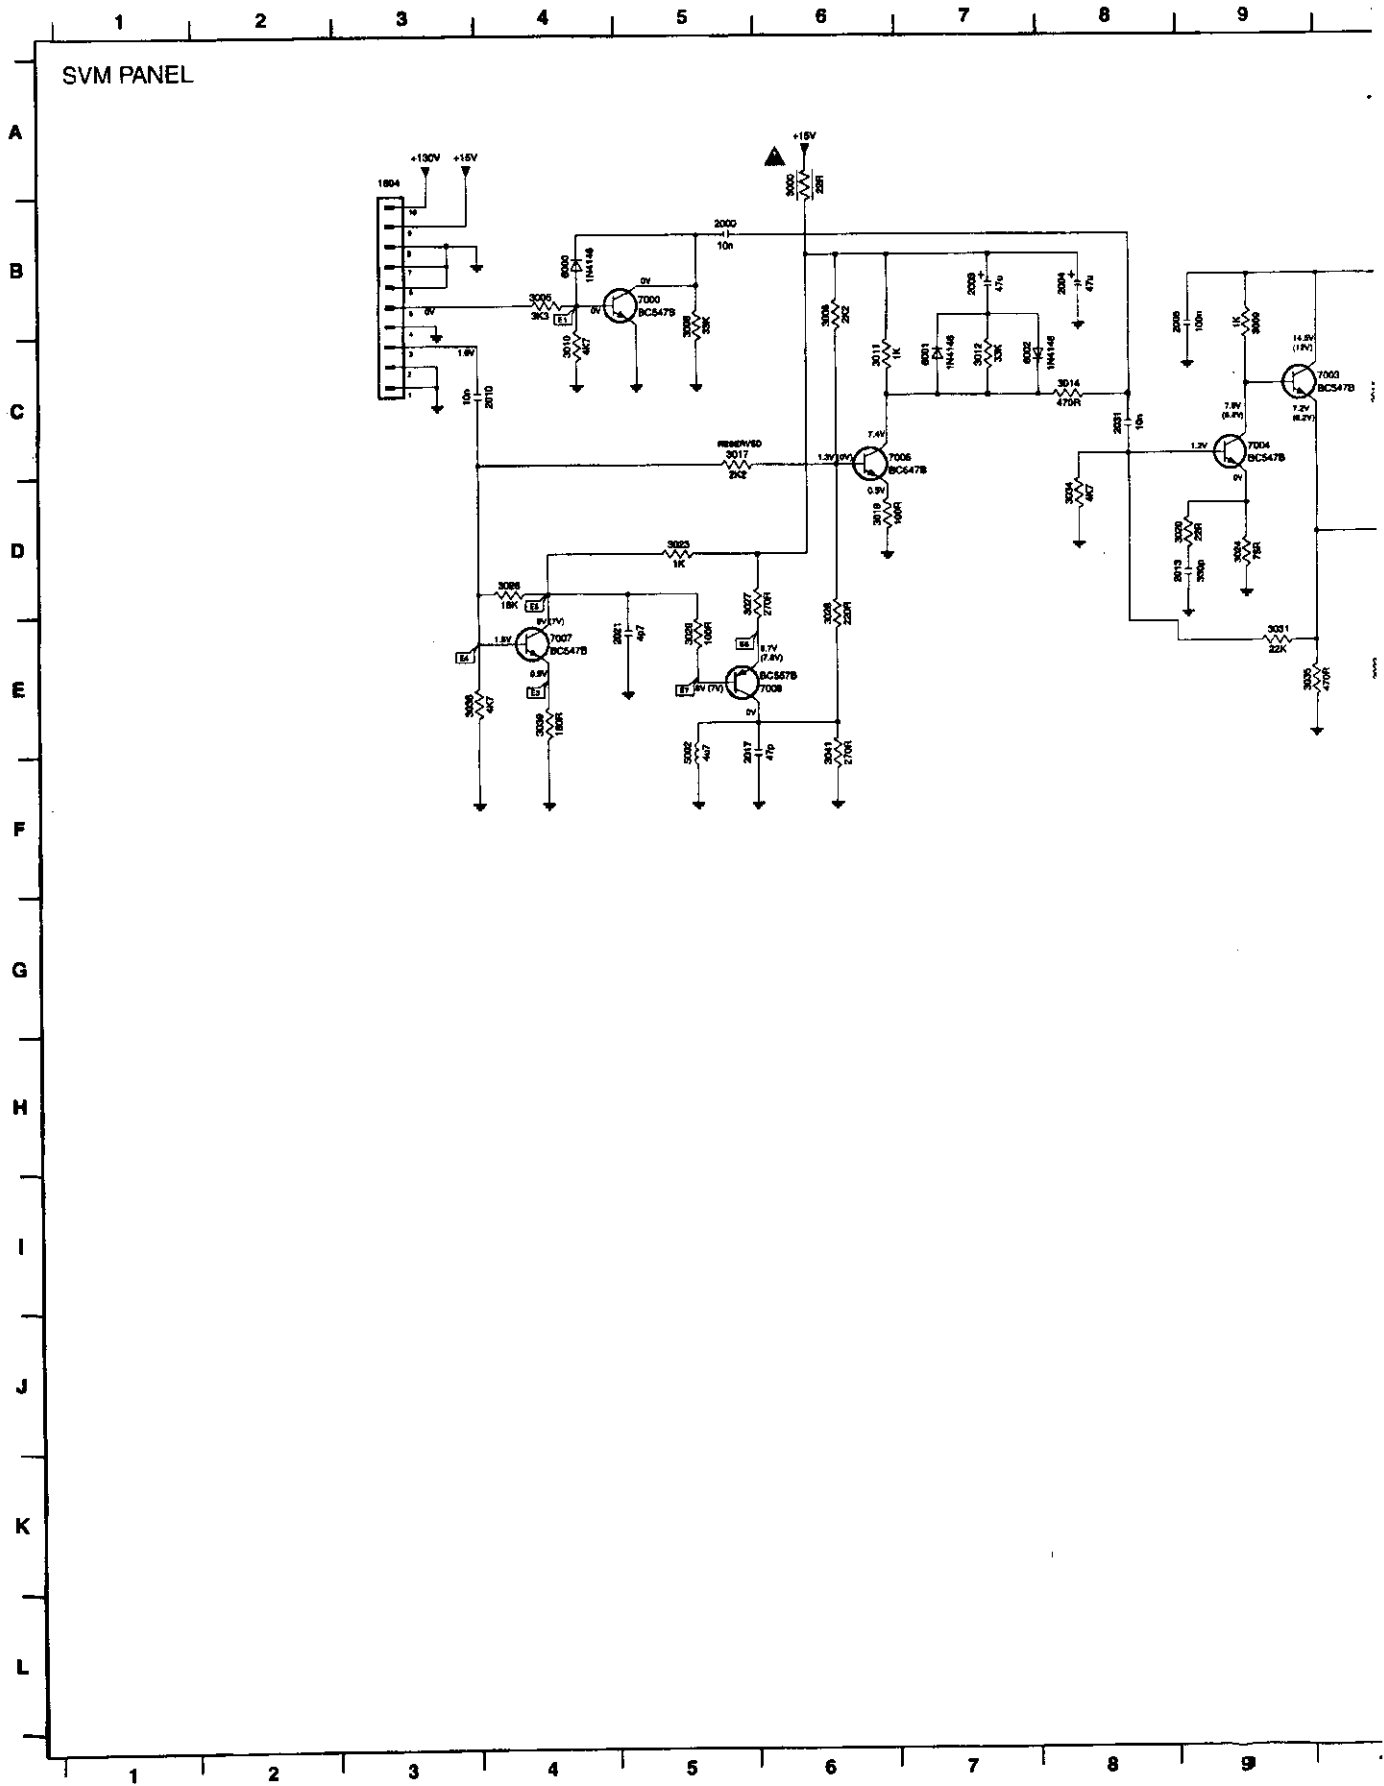

CRT GREEN panel

GREEN CRT

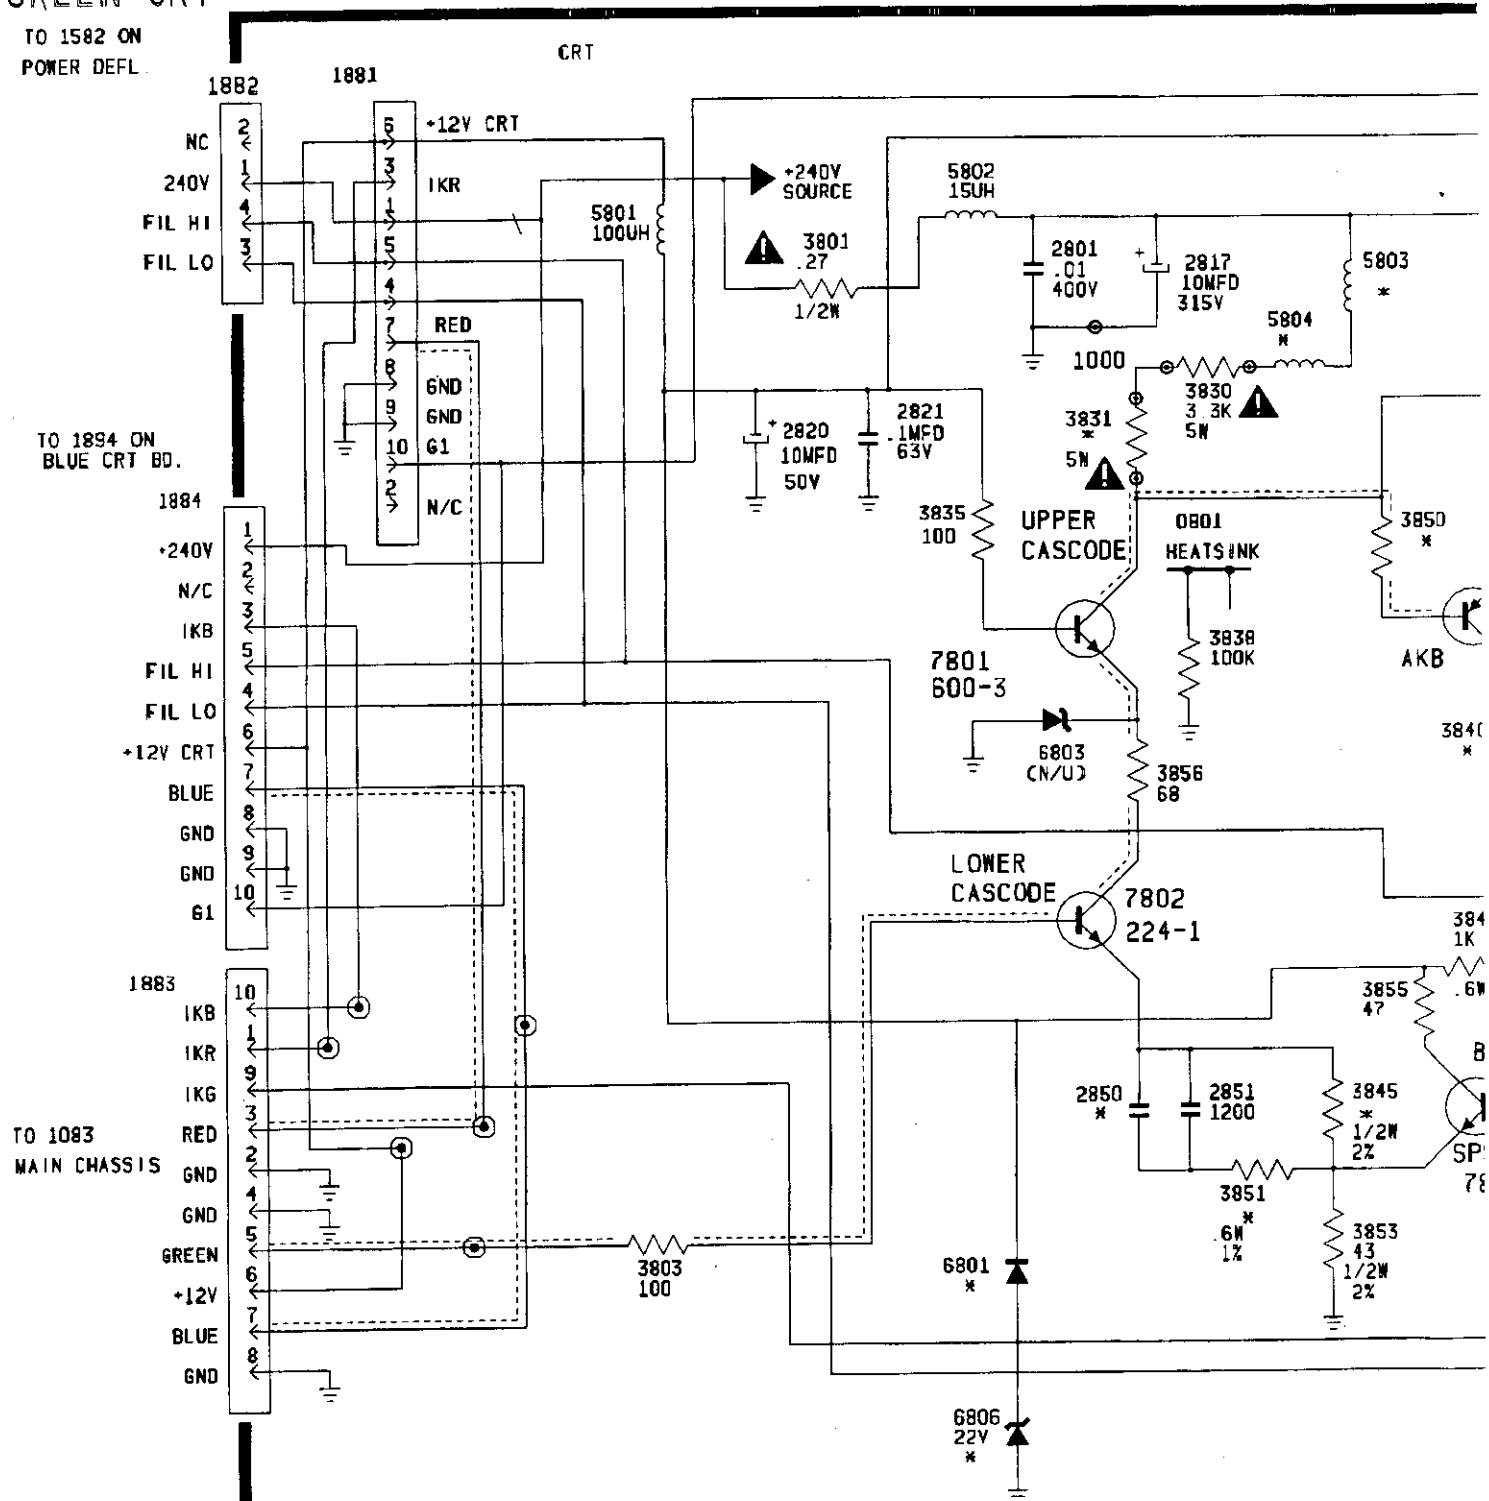
TO 1582 ON
POWER DEFL.

NOTES:

UNLESS OTHERWISE SPECIFIED


1. CAPACITANCE VALUES OF ONE OR MORE ARE PICOFARADS.
2. CAPACITANCE VALUES LESS THAN ONE ARE MICROFARADS.
3. RESISTORS ARE IN OHMS, 1/4W, 5%.
4. • = SURFACE MOUNTED DEVICE (SMD).
5. ⚠ = PCEC REPLACEMENT PART NUMBERS ONLY.
6. ⊙ = LAYOUT INDUCED JUMPER.
7. * = SEE PARTS LIST.

E BOARD

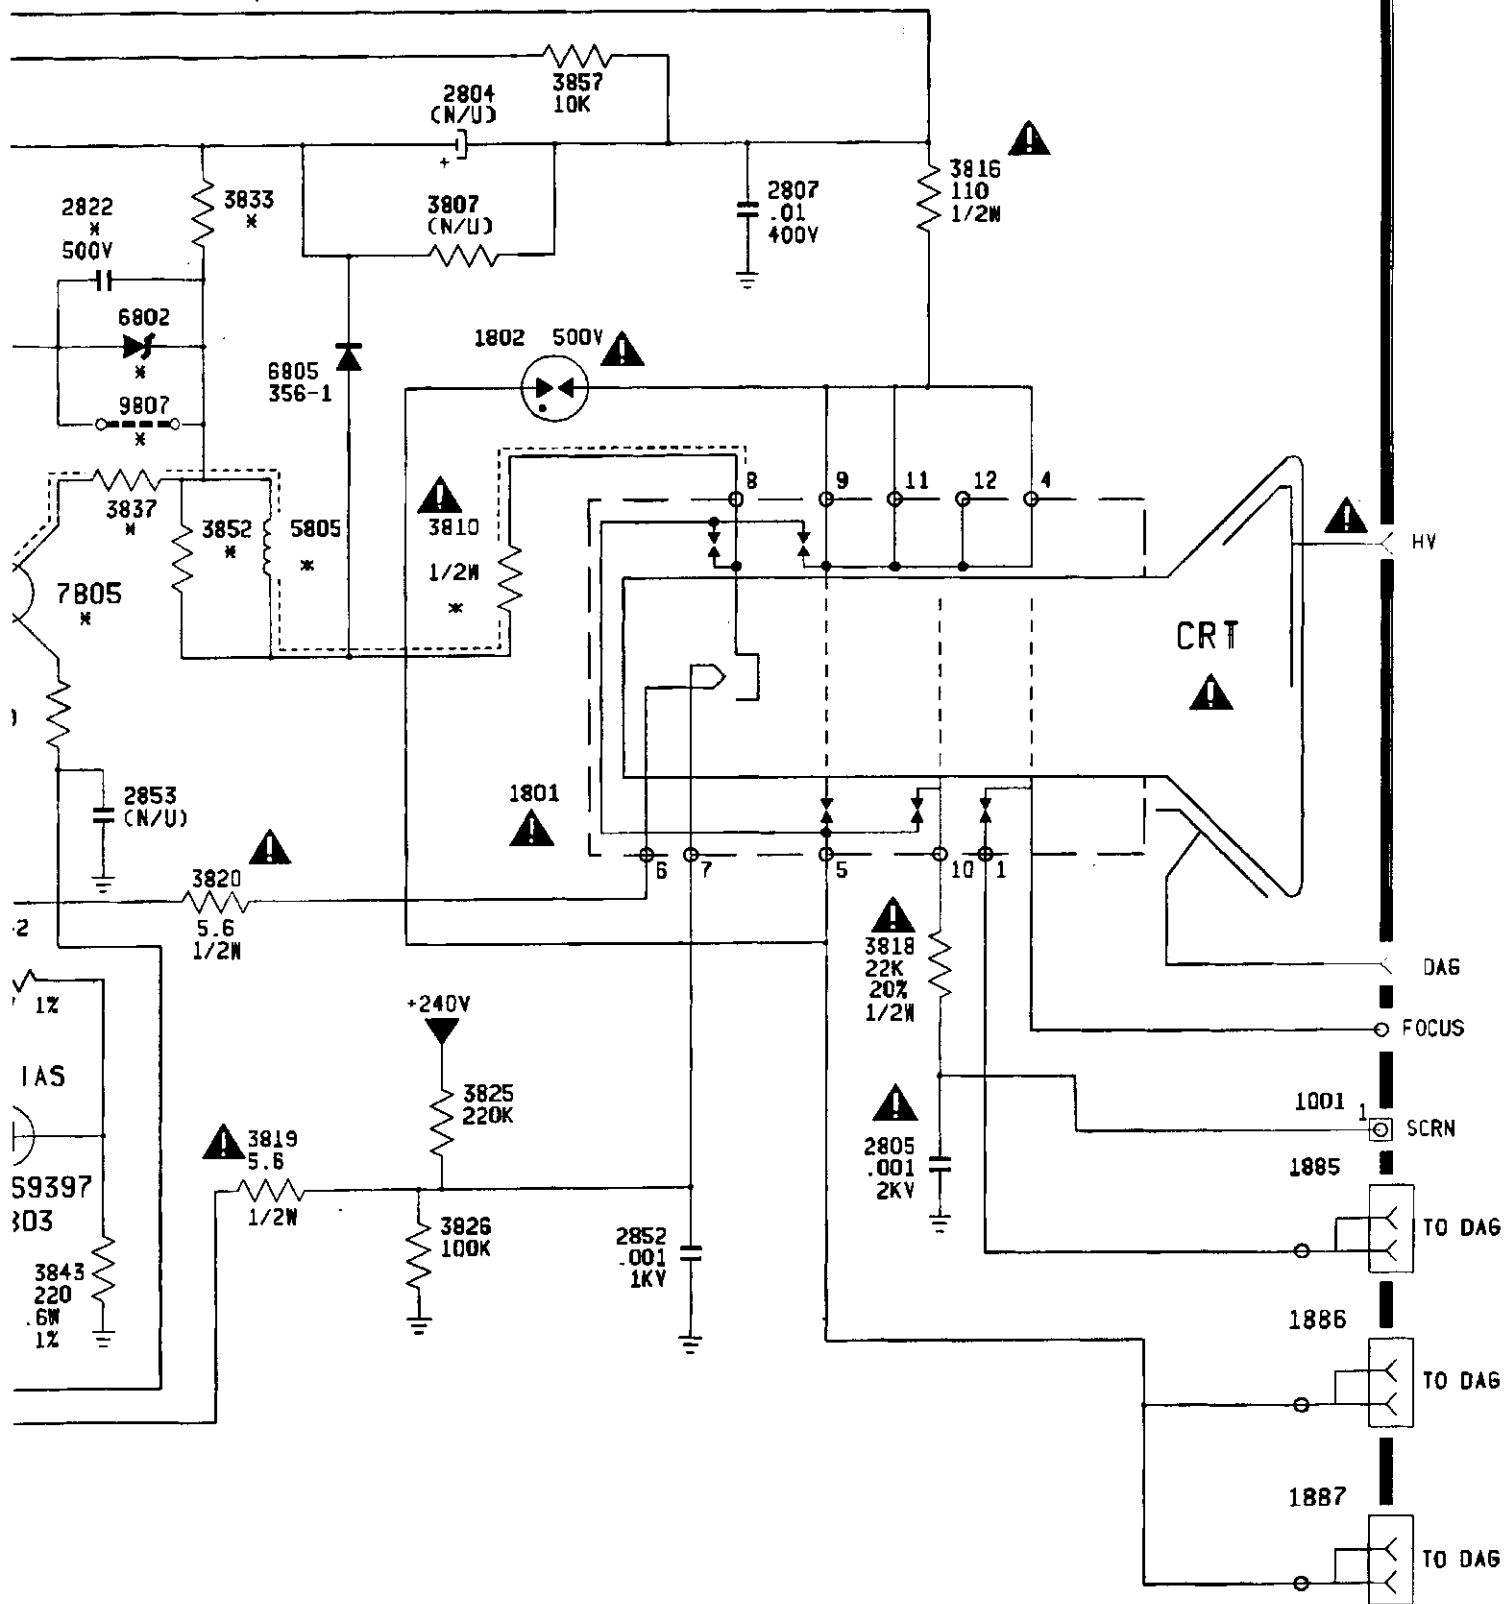


CRT RED panel

RED CRT

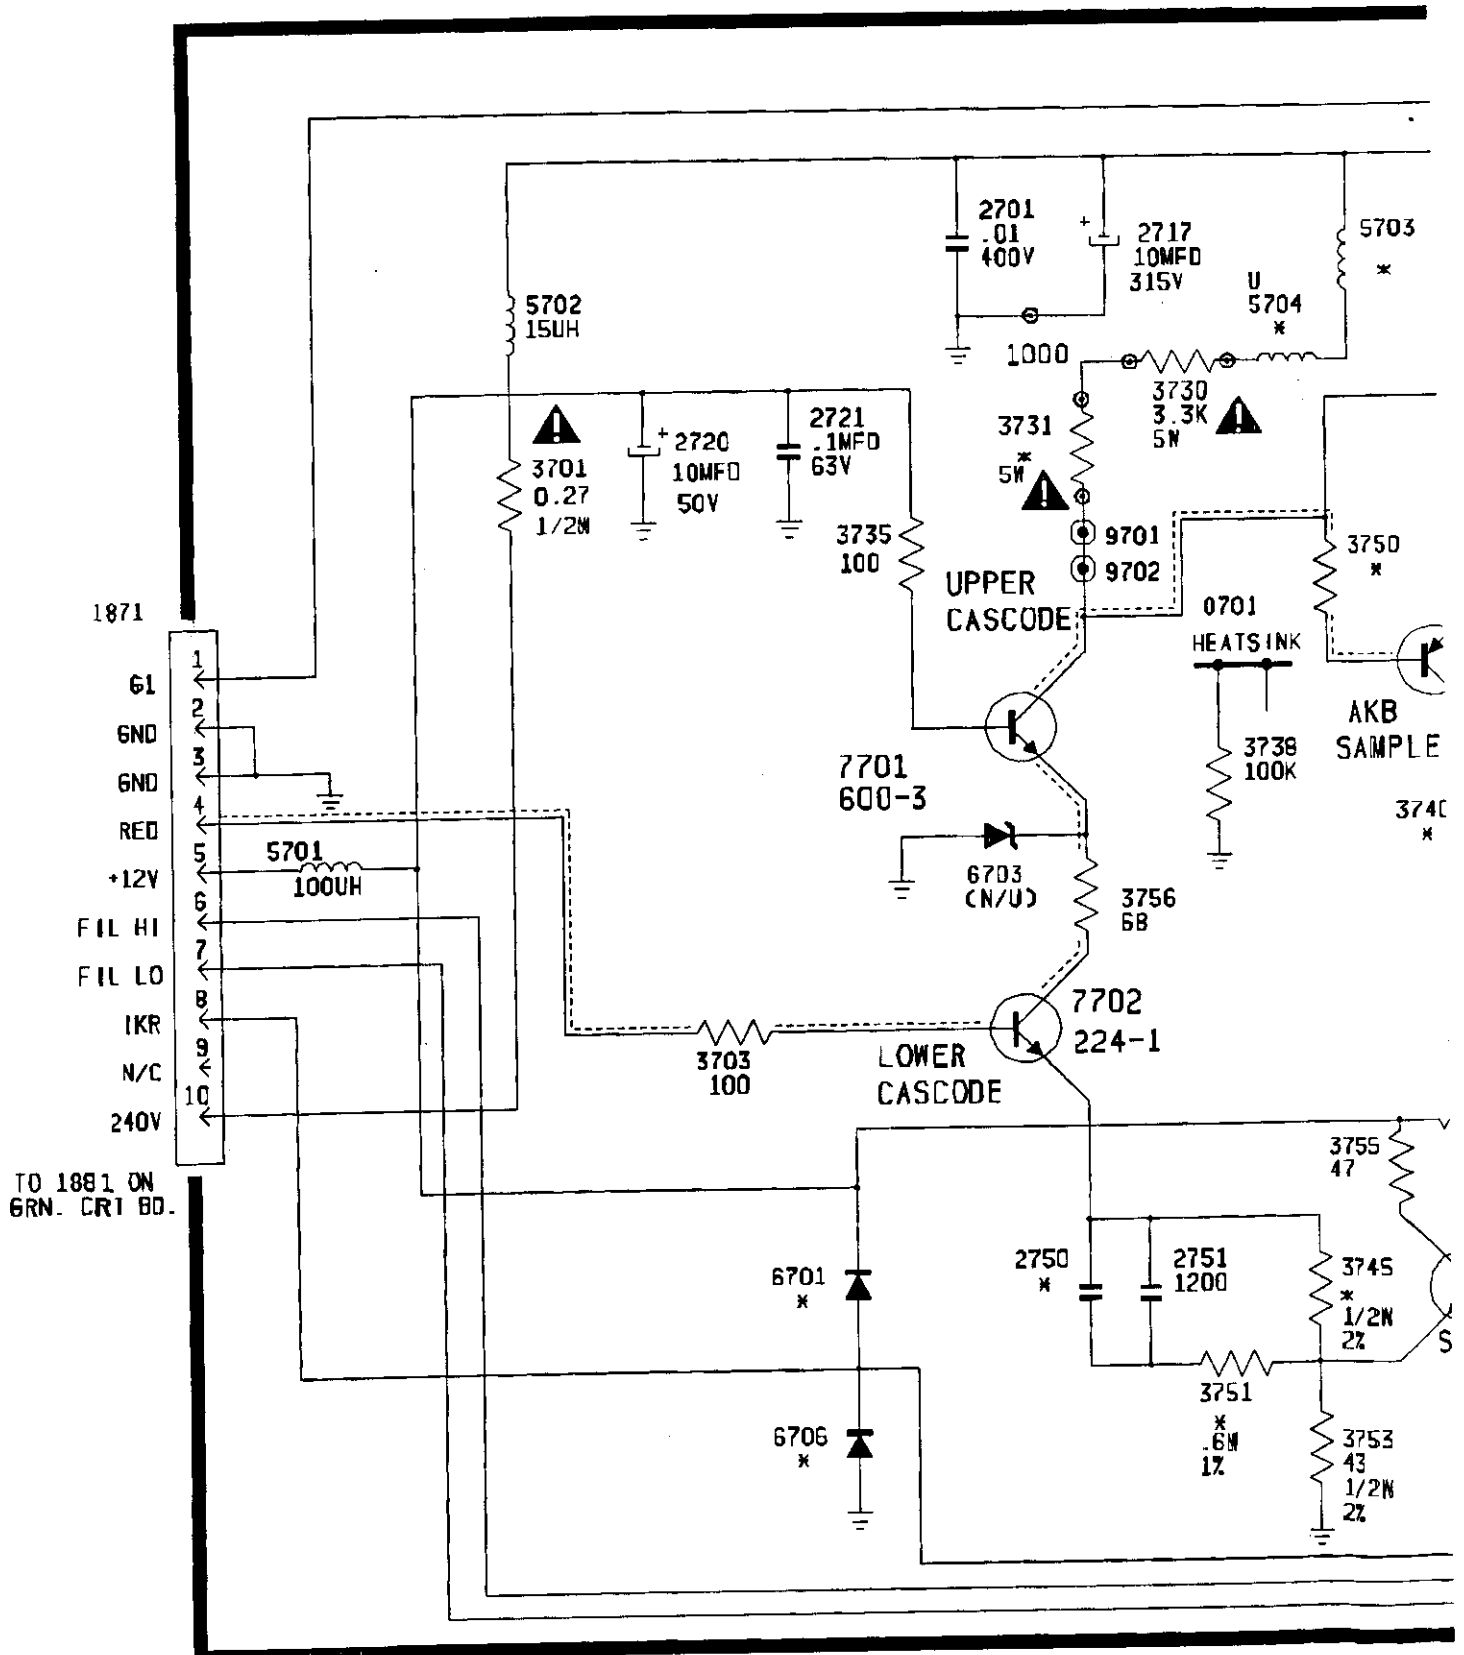


N BOARD

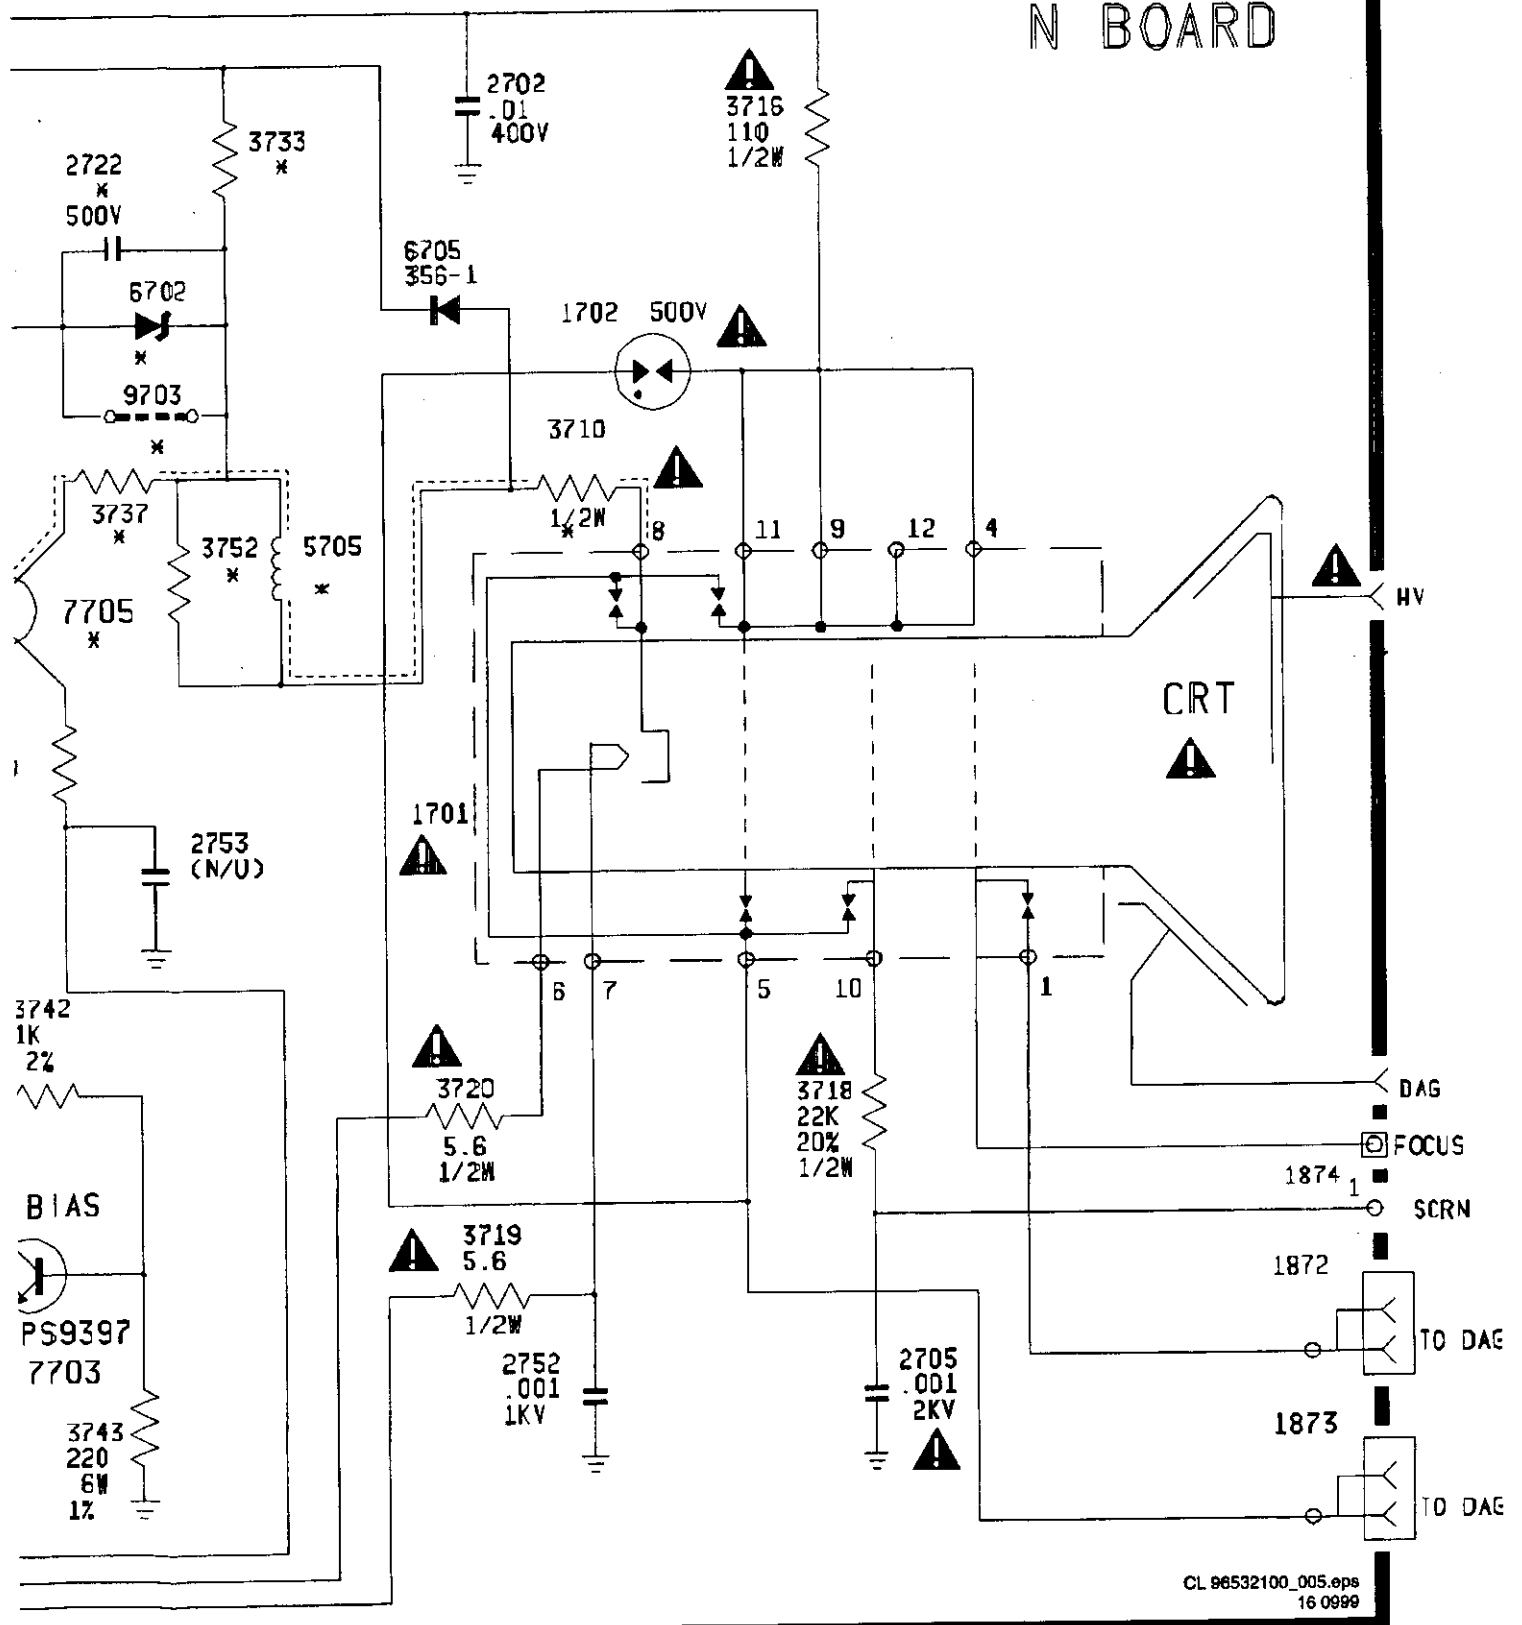


CRT BLUE panel


BLUE CRT

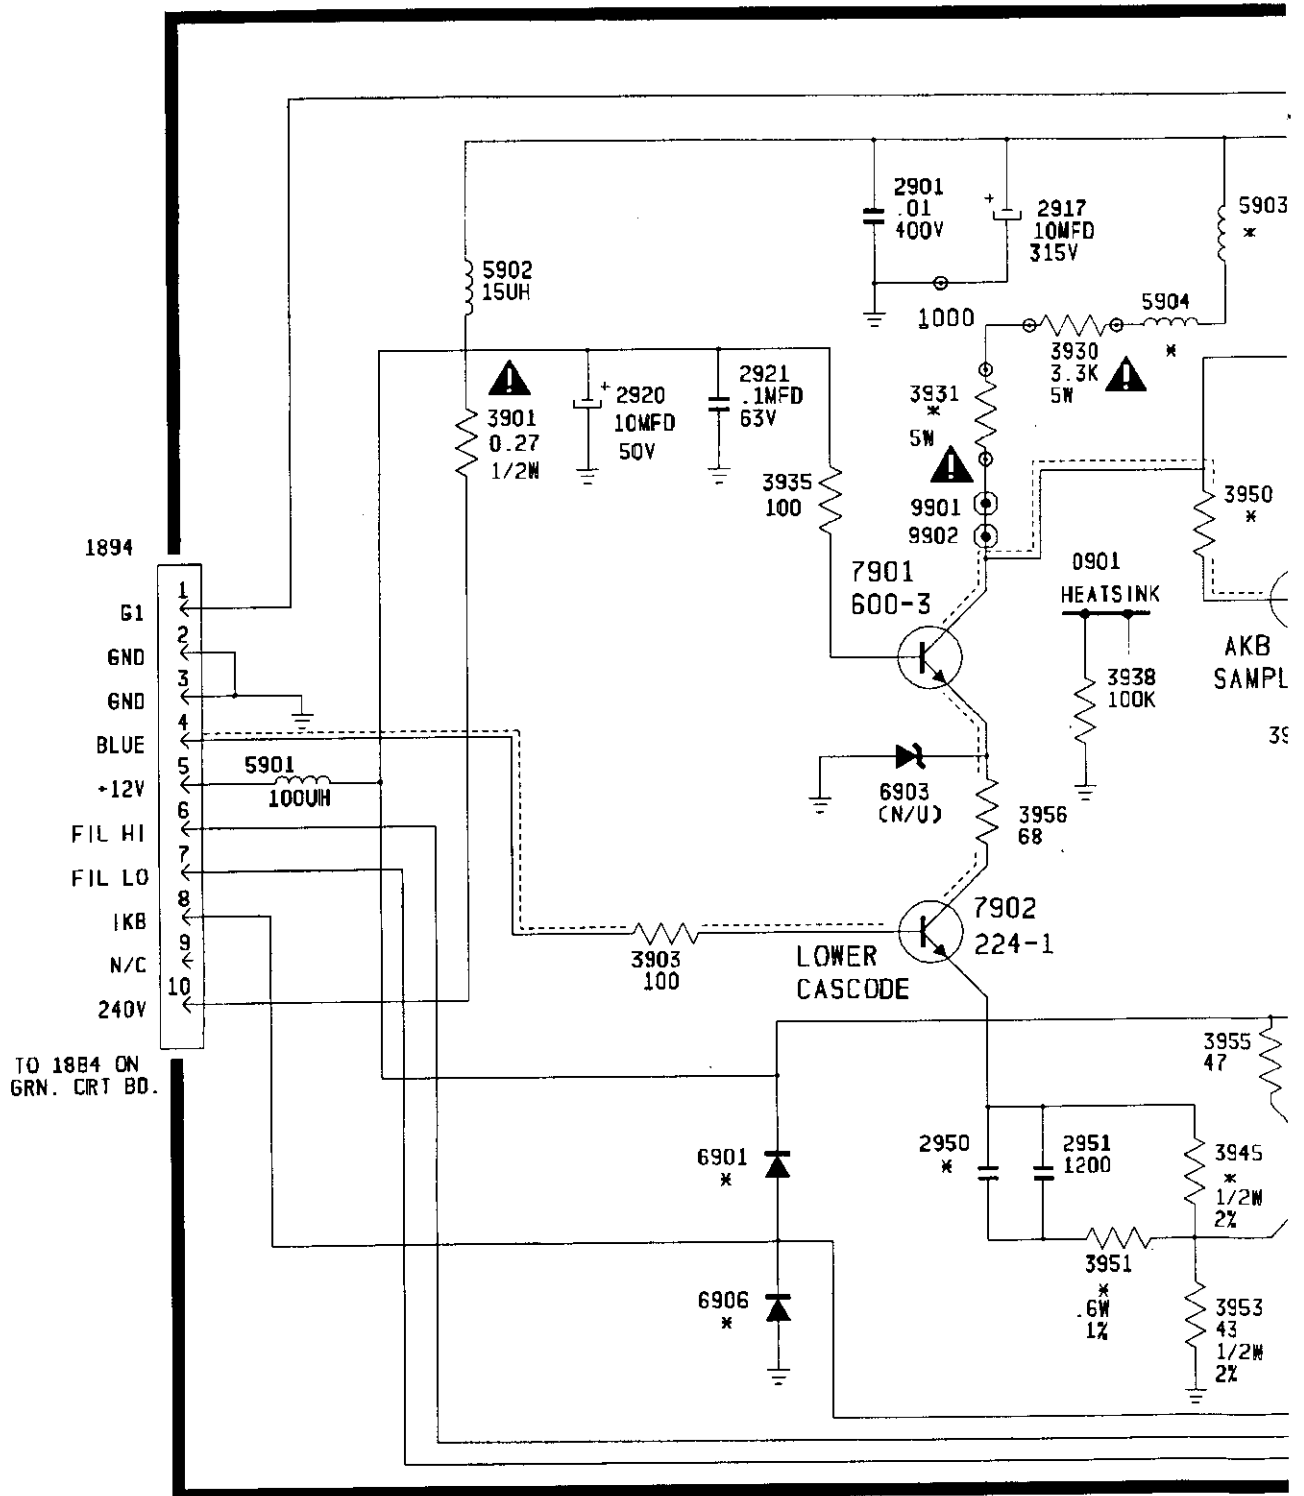


O BOARD

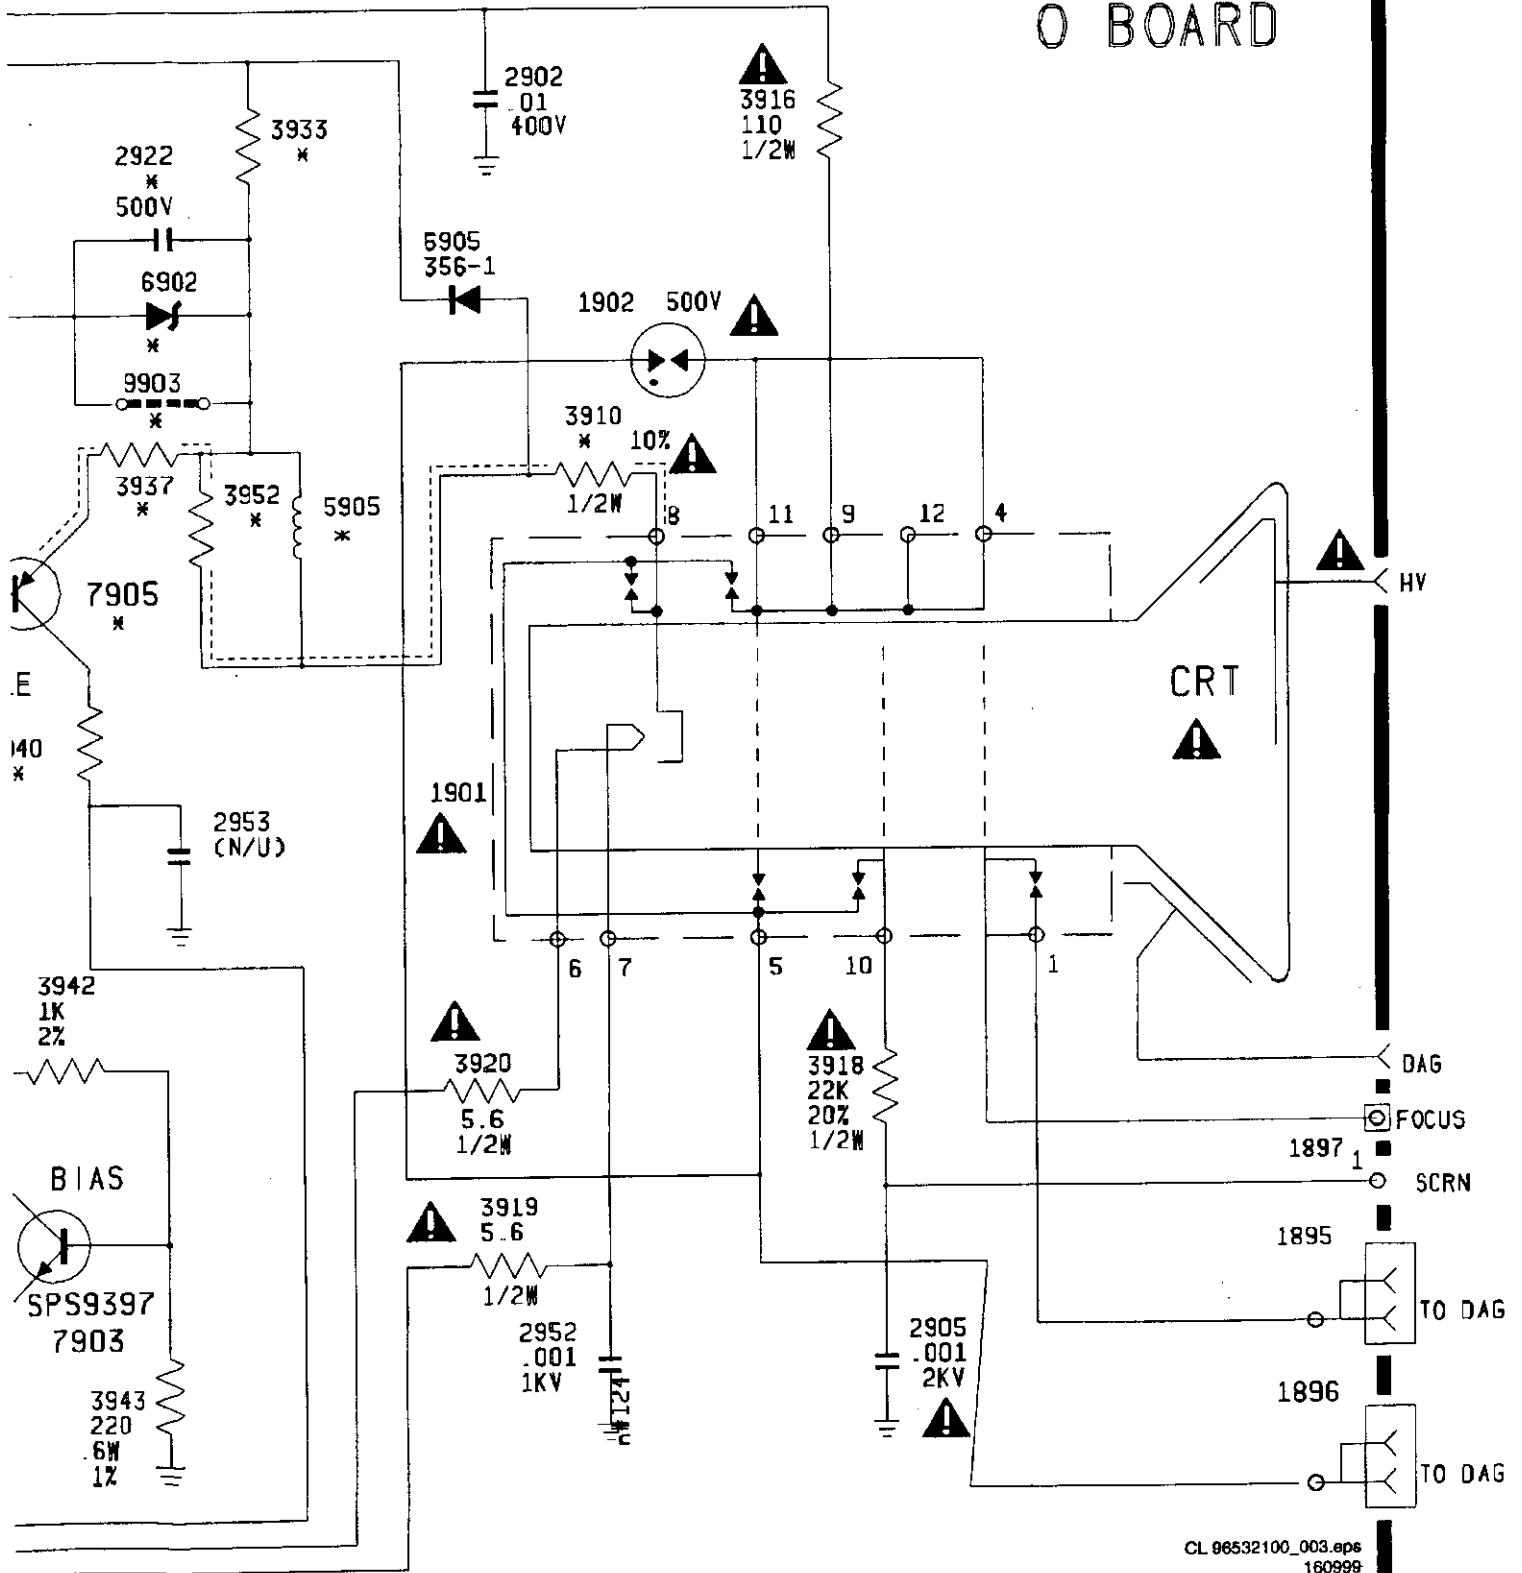

Audio amplifier

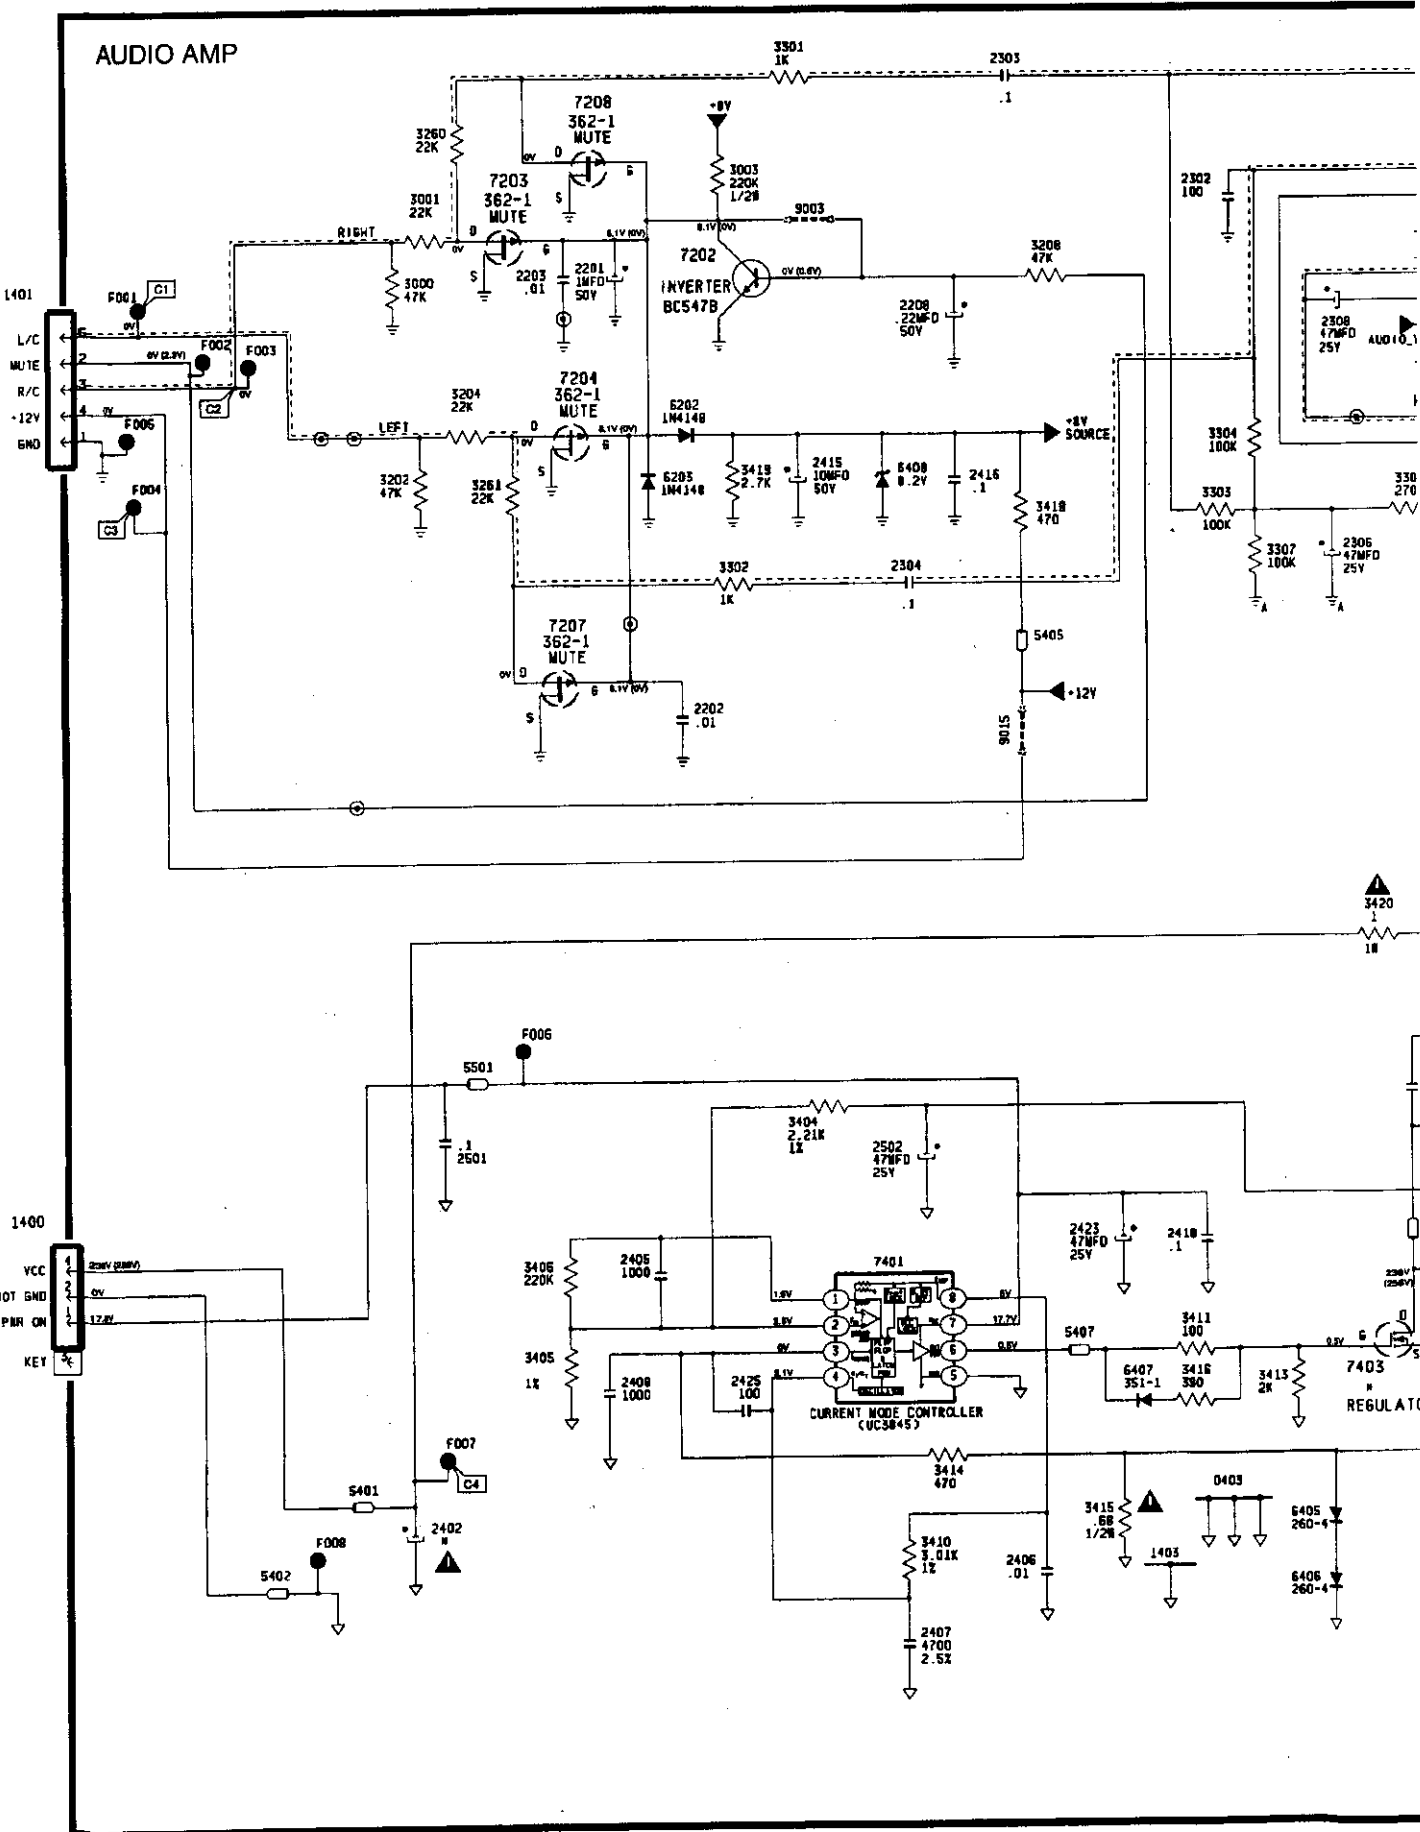

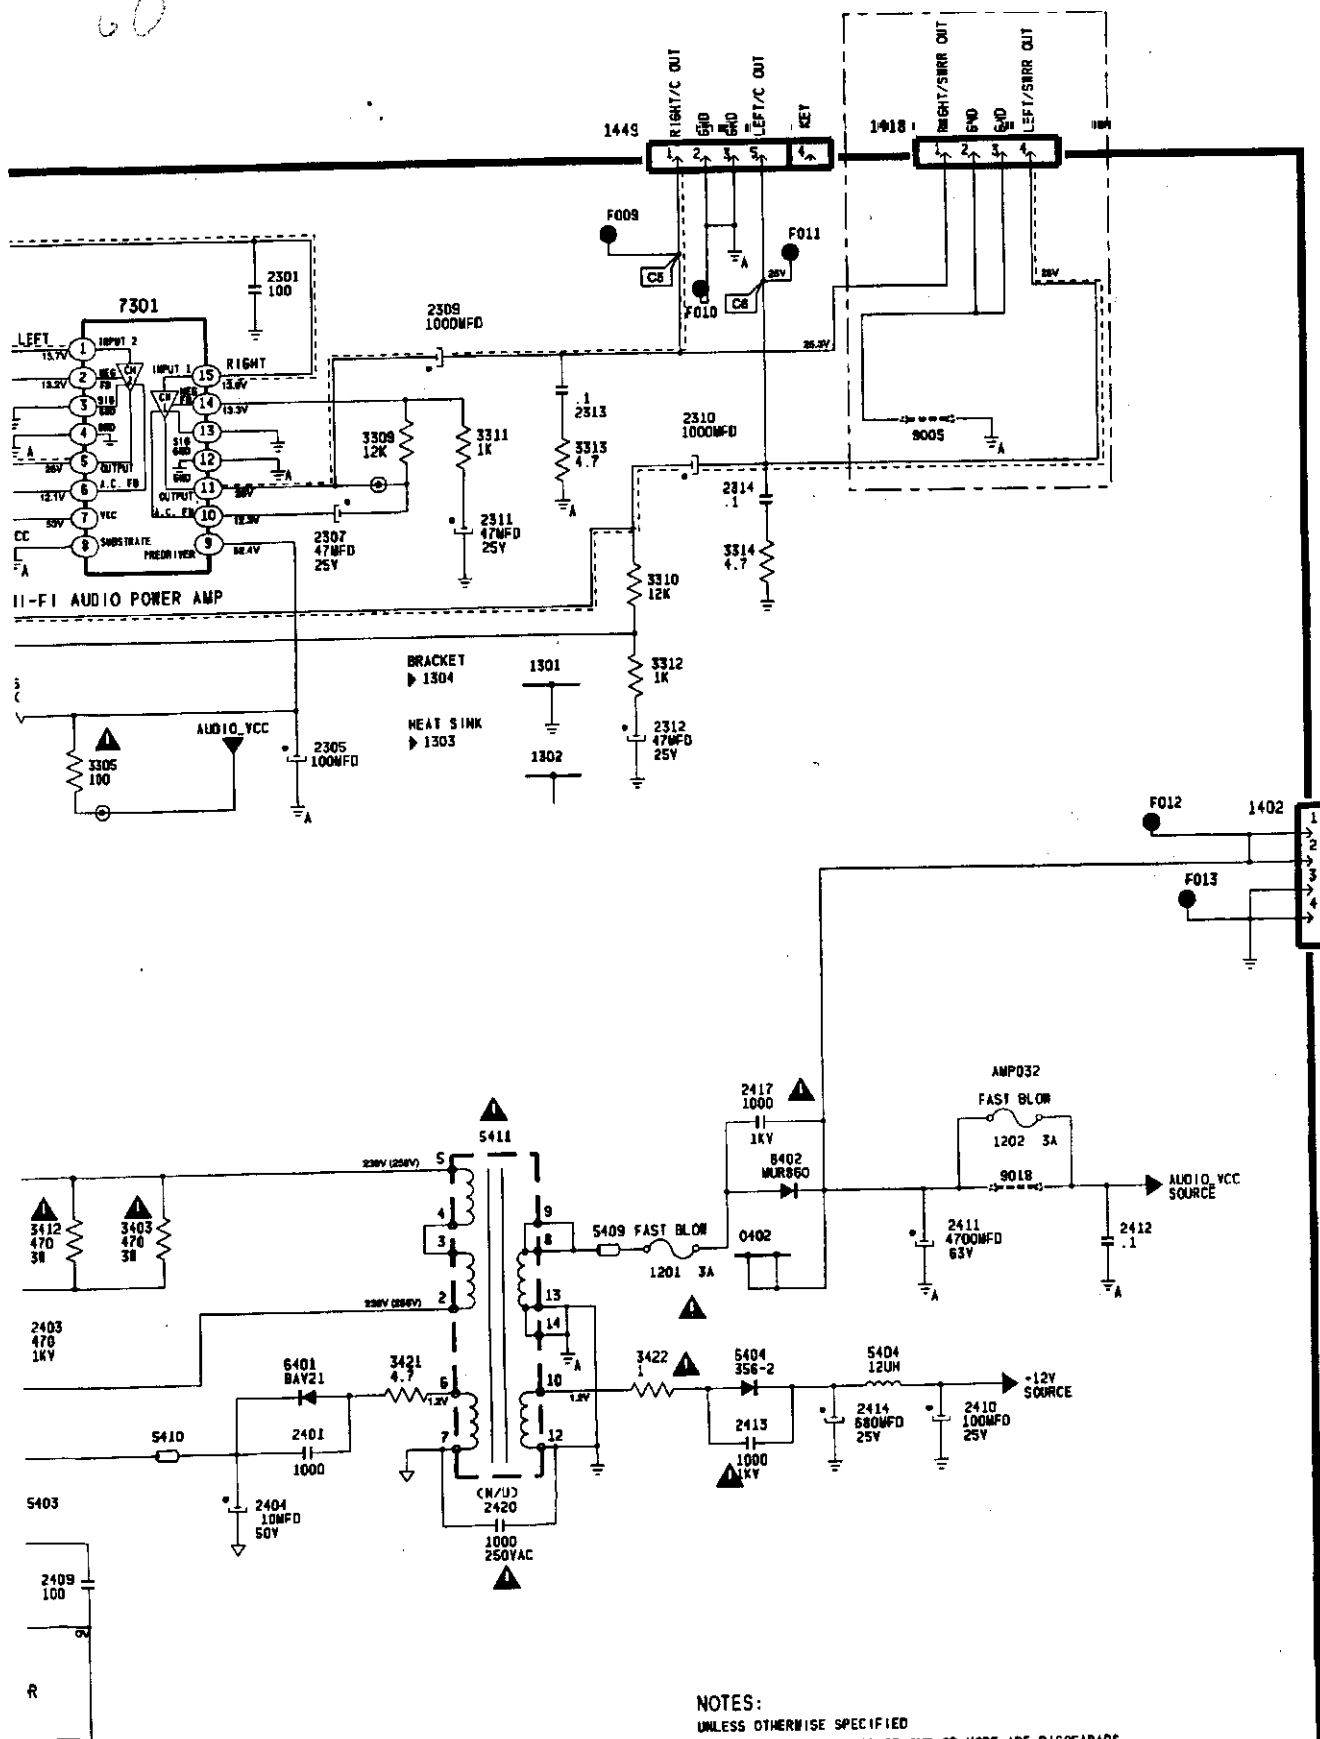

NOTES:


UNLESS OTHERWISE SPECIFIED

1. CAPACITANCE VALUES OF ONE OR MORE ARE PICOFARADS.
2. CAPACITANCE VALUES LESS THAN ONE ARE MICROFARADS.
3. RESISTORS ARE IN OHMS, 1/4W, 5%.
4. * = SURFACE MOUNTED DEVICE (SMO).

5. ▲ = PCEC REPLACEMENT PART NUMBERS ONLY.

6. ⊕ = LAYOUT INDUCED JUMPER.

7. * = SEE PARTS LIST.

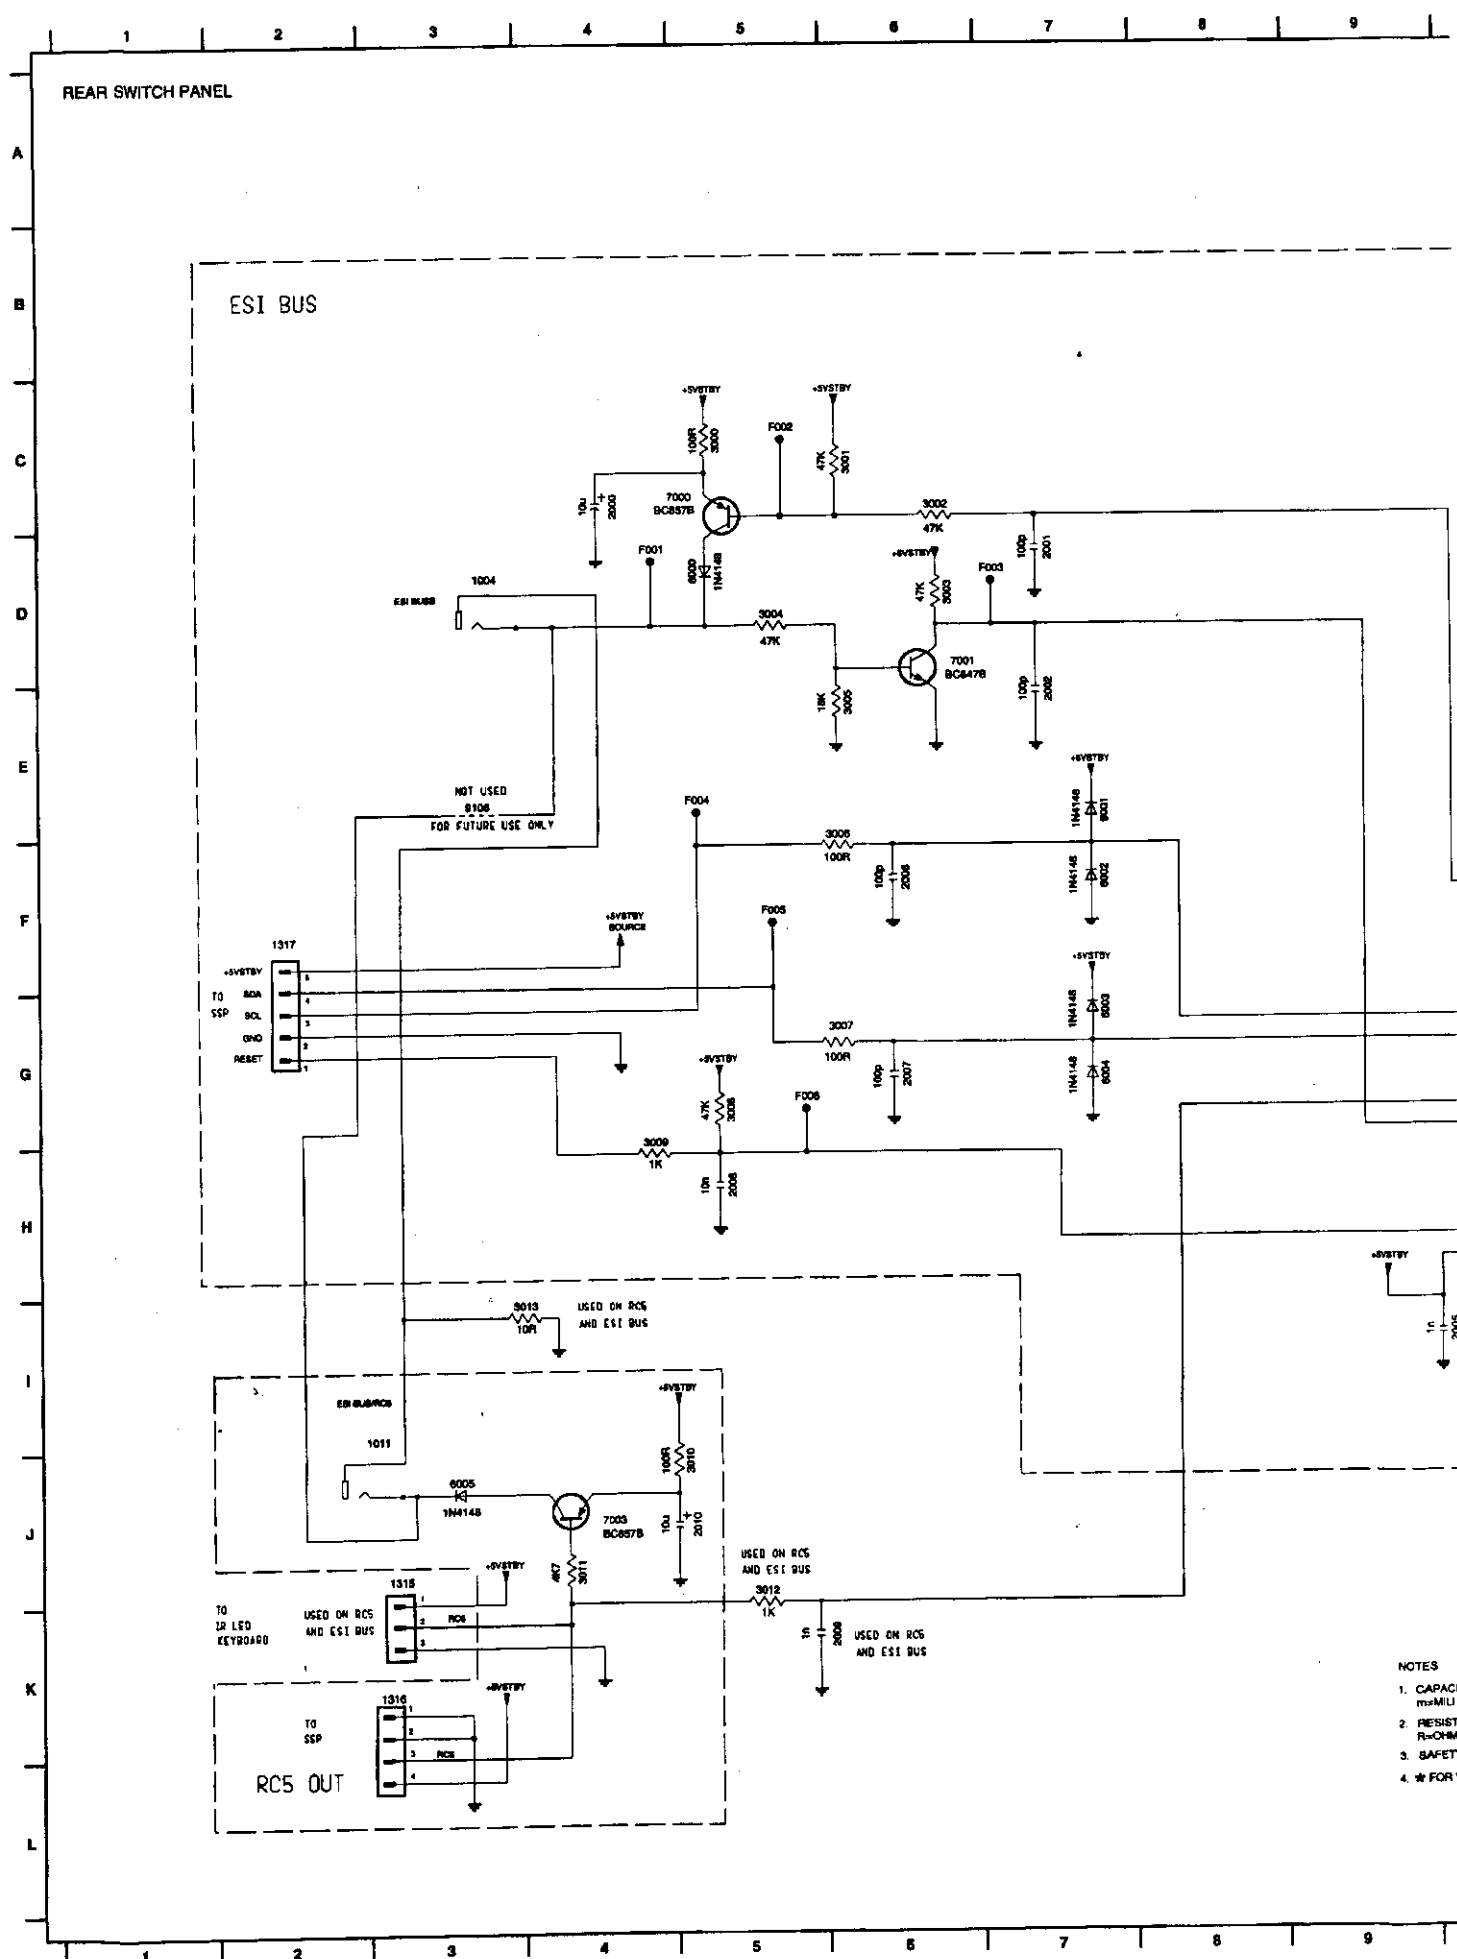

10

11

12


13

14

15

16


17





(NOT USED IN GLOBAL)

CENTER CHANNEL INPUT

AMP SWITCH

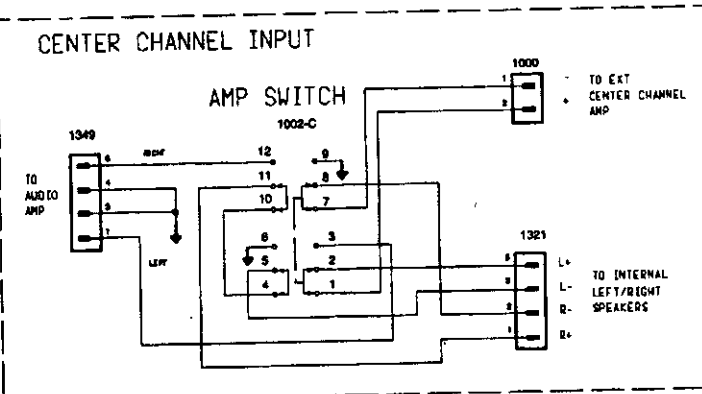

SURROUND SOUND

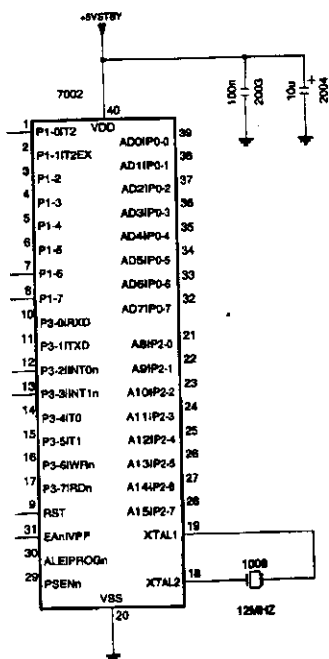


ANCE VALUES ARE IN FARADS:
 u=MICRO n=NANO p=PICO f=FERMI
 NCE VALUES ARE IN OHMS:
 K=KILO M=MEGA G=GIGA T=TERA
 TRIANGLE REPRESENTS PCEC REPLACEMENT PART ONLY.
 UUE SEE PARTS LIST.

001_0000


CL 96532100_016.eps
150999

0000 C11
 1000 C18
 1002-C D15
 1004 D3
 1007-A F15
 1008 K11
 1011 D
 1215 J3
 1316 K3
 1317 F2
 1318 F16
 1319 A15
 1320 A15
 1321 D18
 1349 D13
 2000 C4
 2001 D7
 2002 E7
 2003 F11
 2004 F12
 2005 F13
 2006 F8
 2007 G6
 2008 H5
 2009 K6
 2010 J5
 3000 C5
 3001 C6
 3002 C6
 3003 D6
 3004 D6
 3005 E6
 3006 F6
 3007 G6
 3008 H4
 3009 H4
 3010 J5
 3011 J4
 3012 J5
 3013 J4
 6000 D5
 6001 E7
 6002 F7
 6003 G7
 6004 G7
 6005 J3
 7000 C5
 7001 D6
 7002 F10
 7003 J4
 9108 E3
 F001 D4
 F002 C6
 F003 D7
 F004 E5
 F005 F5
 F006 G5


Front jack panel

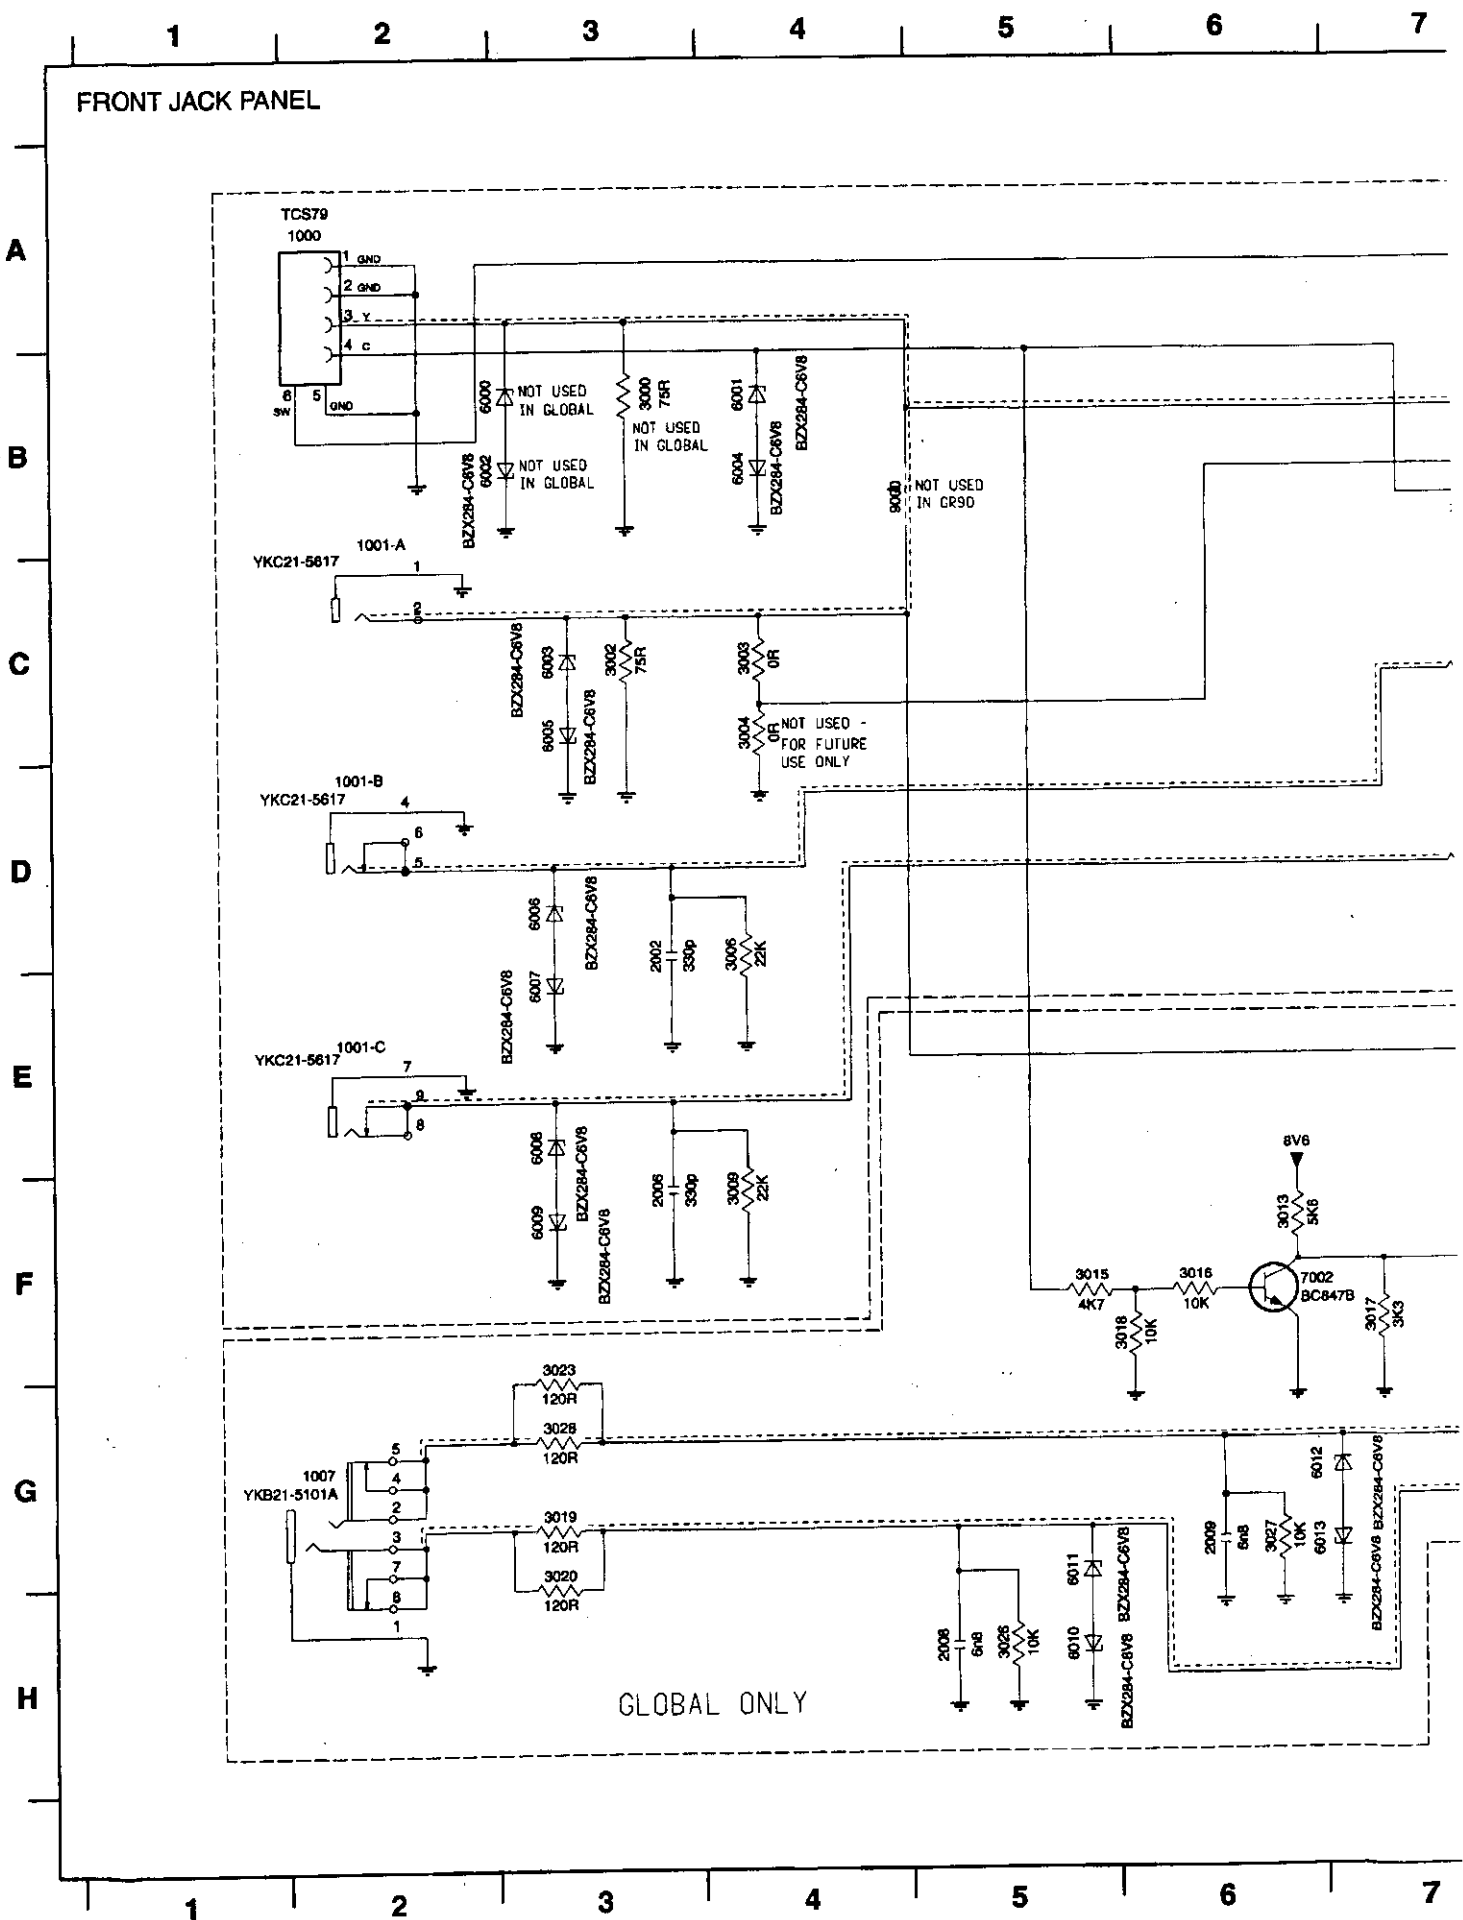

64

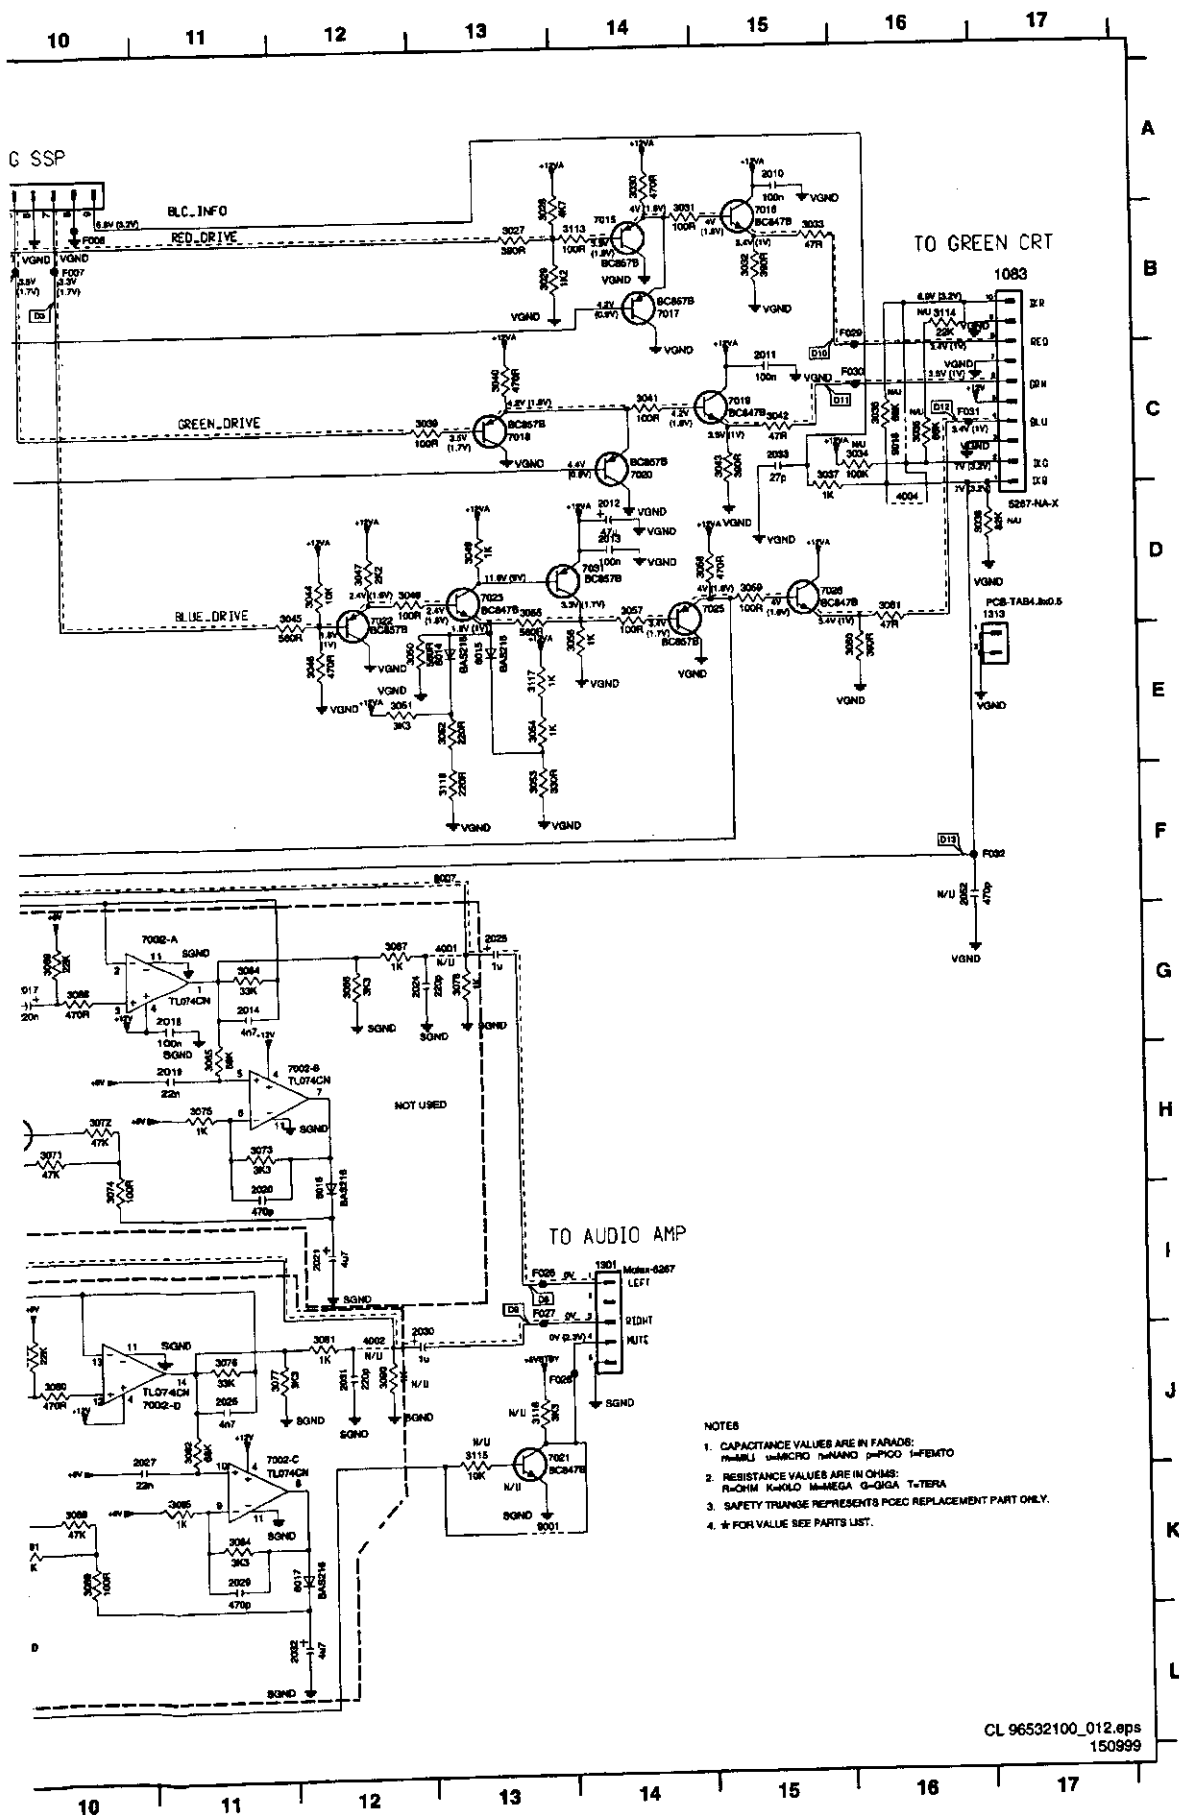


1086 B2	3081 K70
1087 A2	3113 B14
1088 B17	3114 B18
1091 H14	3118 J15
1092 C2	3118 J15
1095 I2	3117 E13
1098 A8	3118 F18
1098 J2	3131 B3
1113 D17	3132 B6
1115 J4	3133 B6
1126 K8	3134 J7
1140 A9	3136 J7
1141 A3	3136 J7
1180 I2	3137 M
1175 M2	3138 M
1177 G8	3138 M
1200 B2	3140 J6
2001 E3	3141 J2
2002 E3	3142 J2
2003 E4	4002 L8
2004 E4	4001 G13
2006 F8	4002 J12
2006 L8	4004 D16
2007 L2	4006 F2
2008 B8	4006 K3
2009 D7	8000 D4
2010 A15	8001 E5
2011 C18	8007 D6
2012 D14	8008 D3
2013 D14	8002 C5
2014 G11	8003 G5
2015 D8	8004 H5
2016 D8	8005 C7
2017 D10	8006 C7
2018 D11	8007 D6
2019 D11	8008 D3
2020 H11	8009 D7
2021 I12	8010 D7
2022 J8	8011 C7
2023 J8	8012 D7
2024 G12	8013 D7
2025 G13	8014 E13
2026 J11	8015 E13
2027 J10	8016 H12
2028 J8	8017 E12
2029 K11	8018 G3
2030 H12	8019 D4
2031 J12	8020 D4
2032 L11	8021 F4
2033 C16	8024 J8
2034 L8	7000 E4
2035 D3	7801 A8
2036 F15	7002 C10
2037 J7	7002 B H12
2038 E4	7002 C J11
2039 E5	7002 D J18
2040 F5	7006 F8
2041 F2	7007 M
2042 D3	7008 J3
2043 D3	7009 M
2044 G4	7010 M9
2045 G4	7011 K8
2046 H4	7012 A14
2047 D15	7013 B18
2048 B18	7014 B14
2049 B18	7015 C13
2050 J3	7016 C15
2051 J3	7017 C14
2052 J3	7021 J13
2053 L8	7022 D12
2054 K8	7023 D13
2055 L8	7024 D7
2056 H5	7025 D18
2057 H5	7026 D18
2058 H5	7027 K3
2059 C6	7028 D14
2060 C6	7029 I7
2061 C6	7030 J6
2062 C6	7031 J6
2063 C6	7032 K13
2064 C6	8007 F19
2065 C6	8008 I14
2066 B13	8009 J6
2067 B13	8010 C16
2068 B13	8011 E4
2069 B13	8012 F6
2070 B13	8013 E8
2071 B13	8014 B8
2072 B13	8015 B8
2073 B13	8016 B8
2074 B13	8017 B8
2075 B13	8018 B8
2076 B13	8019 B8
2077 B13	8020 B8
2078 B13	8021 B8
2079 B13	8022 B8
2080 B13	8023 B8
2081 B13	8024 B8
2082 B13	8025 B8
2083 B13	8026 B8
2084 B13	8027 B8
2085 B13	8028 B8
2086 B13	8029 B8
2087 B13	8030 B8
2088 B13	8031 B8
2089 B13	8032 B8
2090 B13	8033 B8
2091 B13	8034 B8
2092 B13	8035 B8
2093 B13	8036 B8
2094 B13	8037 B8
2095 B13	8038 B8
2096 B13	8039 B8
2097 B13	8040 B8
2098 B13	8041 B8
2099 B13	8042 B8
2100 B13	8043 B8

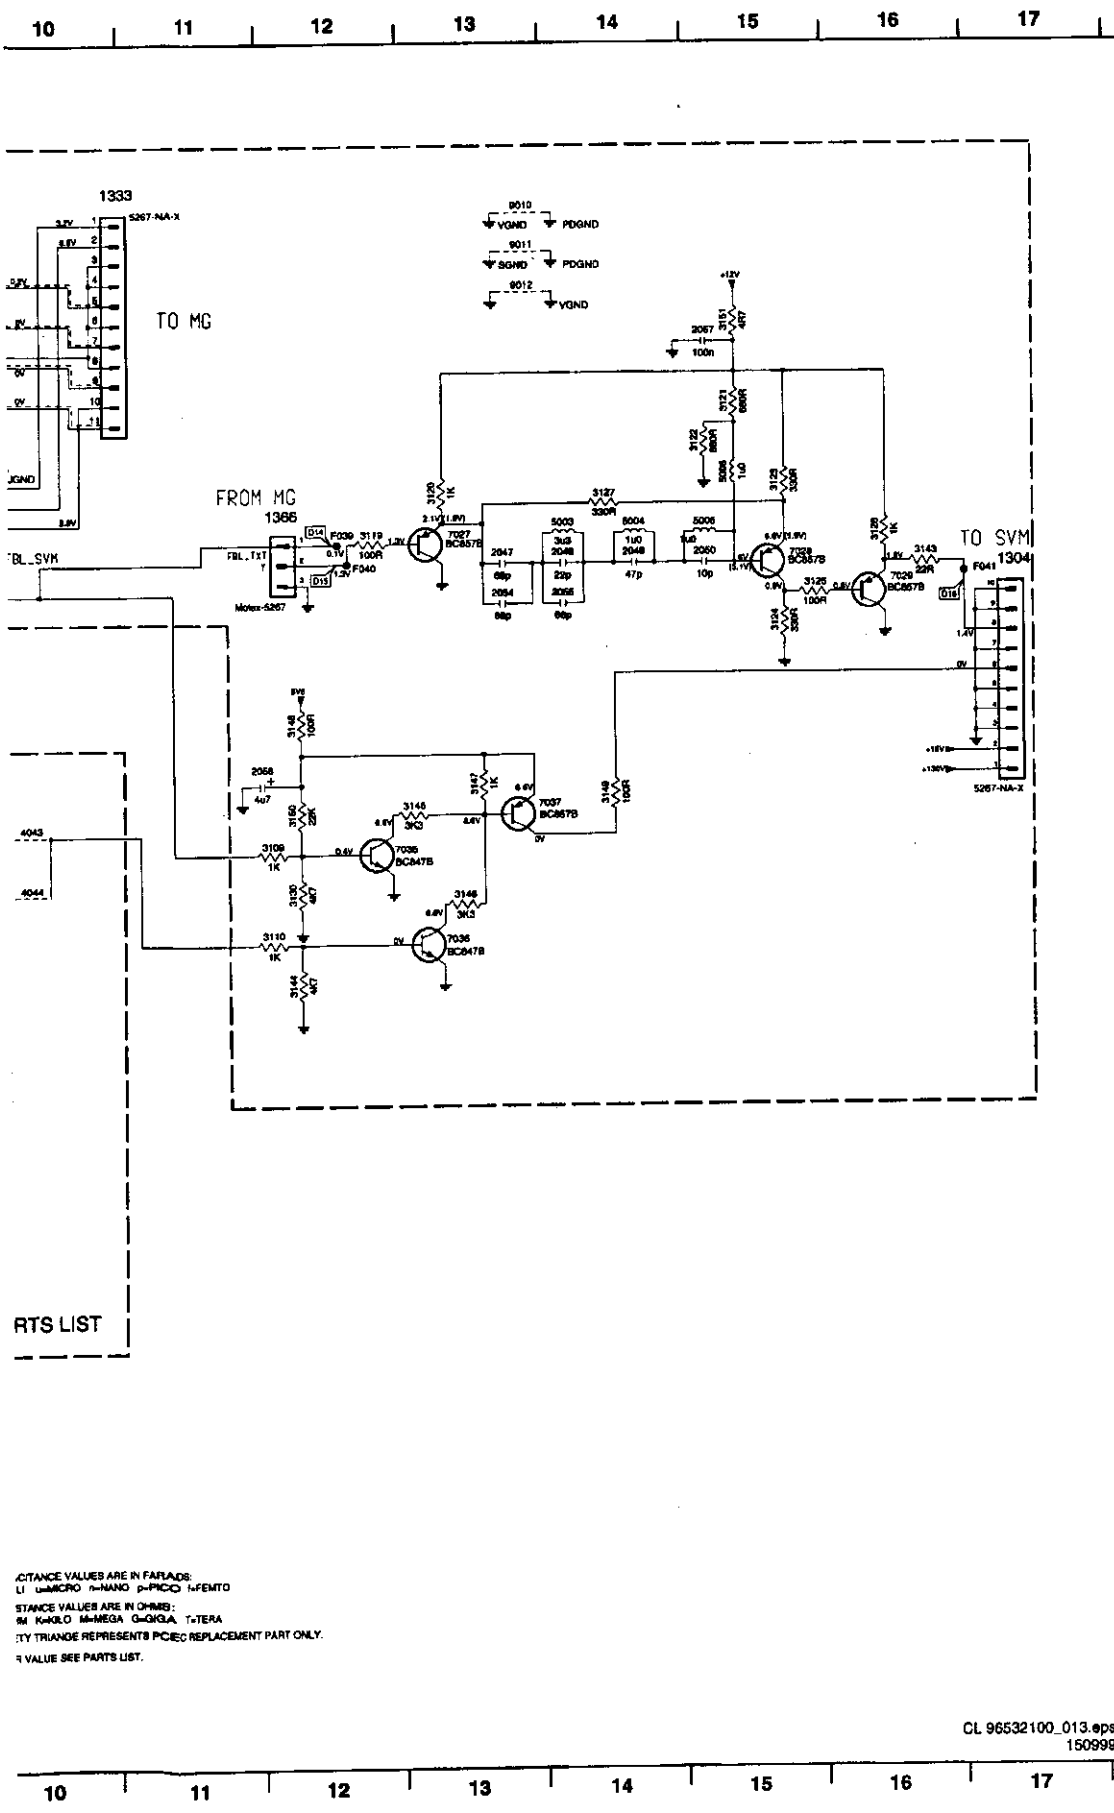


- 1083 B3
- 1084 C10
- 1086 G2
- 1304 D17
- 1333 A10
- 1335 A9
- 1344 B9
- 1386 D12
- 1376 H8
- 1378 B4
- 1379 D4
- 2035 B4
- 2036 H4
- 2037 D4
- 2638 H6
- 2039 G3
- 2040 E3
- 2041 E2
- 2042 I3
- 2043 H3
- 2044 H3
- 2046 C3
- 2047 D13
- 2048 D14
- 2048 D14
- 2050 D15
- 2054 D13
- 2056 D14
- 2058 F13
- 2057 B14
- 3082 I7
- 3083 H7
- 3084 I7
- 3086 F7
- 3086 F7
- 3087 F7
- 3088 G7
- 3099 G7
- 3100 H7
- 3101 H7
- 3102 B8
- 3108 F7
- 3104 F8
- 3106 G7
- 3108 G8
- 3107 H8
- 3108 H8
- 3108 F12
- 3110 D12
- 3111 B2
- 3112 C4
- 3119 D12
- 3120 D12
- 3121 C15
- 3122 C18
- 3123 C16
- 3124 D16
- 3126 D16
- 3127 D14
- 3128 G4
- 3128 G4
- 3130 F12
- 3143 D16
- 3144 D12
- 3145 F13
- 3147 F13
- 3148 F12
- 3149 F14
- 3156 F12
- 3181 B16
- 4003 G2
- 4007 H2
- 4008 H2
- 4008 H4
- 4010 E4
- 4011 G8
- 4012 G8
- 4013 G8
- 4014 G8
- 4041 H8
- 4042 F10
- 4043 F10
- 4044 F10
- 6002 B5
- 6003 D14
- 6004 D14
- 6005 D15
- 6006 C19
- 6022 C4
- 7005 F4
- 7012 B6
- 7013 F8
- 7014 G8
- 7027 D13
- 7028 D16
- 7028 D16
- 7033 F12
- 7034 G12
- 7037 F13
- 8010 B13
- 8011 B13
- 8012 B13
- 8014 C4
- F033 G2
- F034 G2
- F035 G2
- F036 G8
- F037 G8
- F038 G8
- F039 D12
- F040 D12
- F041 D17

DISTANCE VALUES ARE IN FARADS:
 U MICRO N-NAANO P-PICCO F-FEMTO
 DISTANCE VALUES ARE IN OHMS:
 M K-KILO M-MEGA G-GIGA T-TERA
 *TY TRIANGLE REPRESENTS PCIEC REPLACEMENT PART ONLY.
 * VALUE SEE PARTS LIST.

Customer control panel

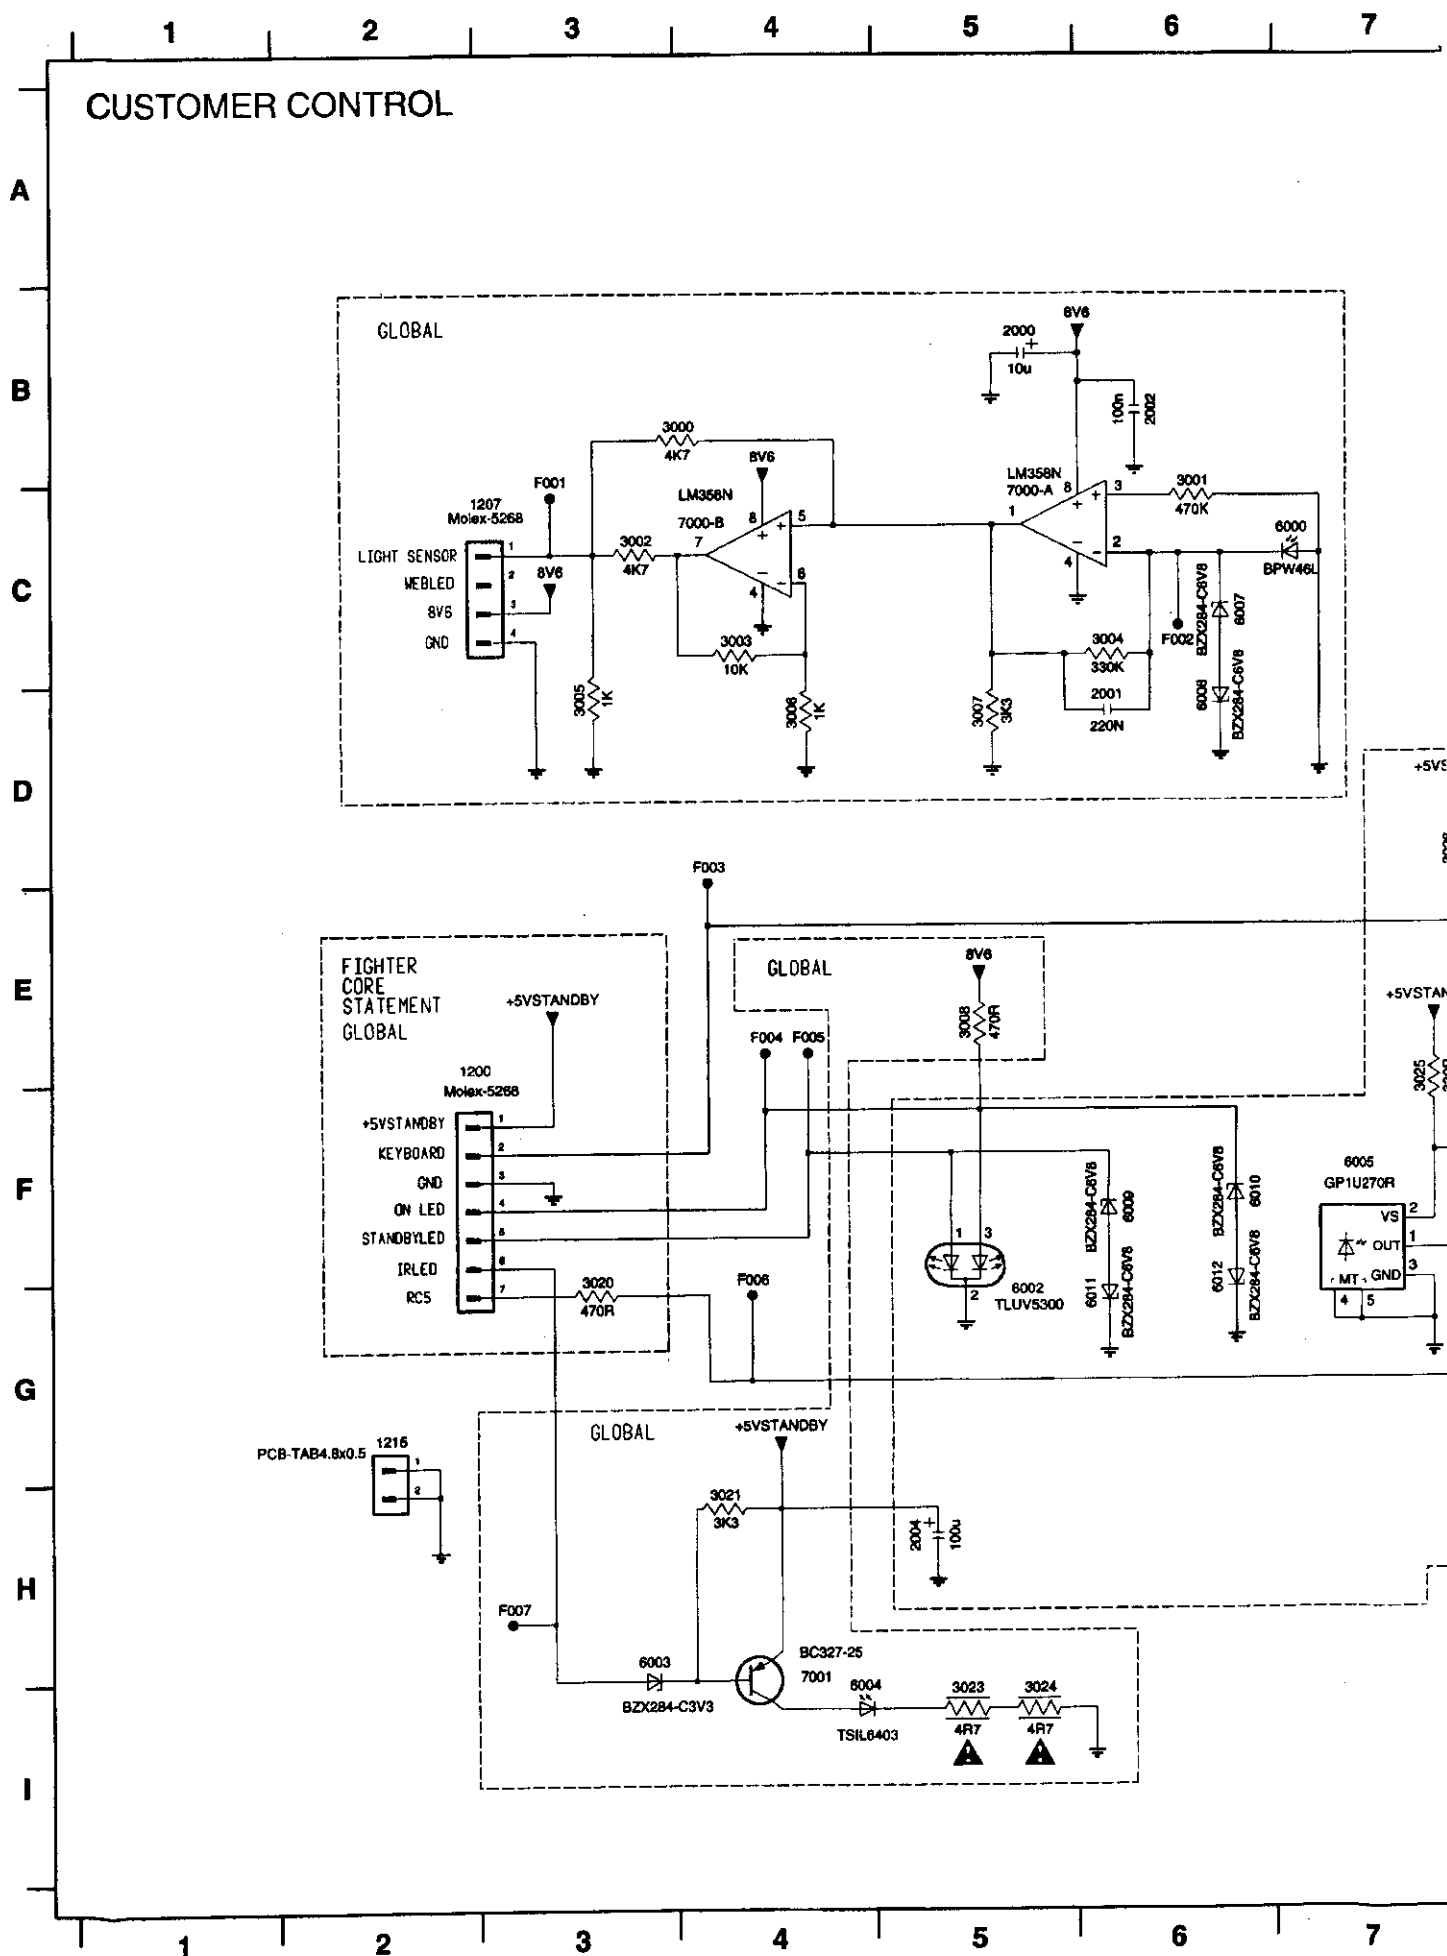

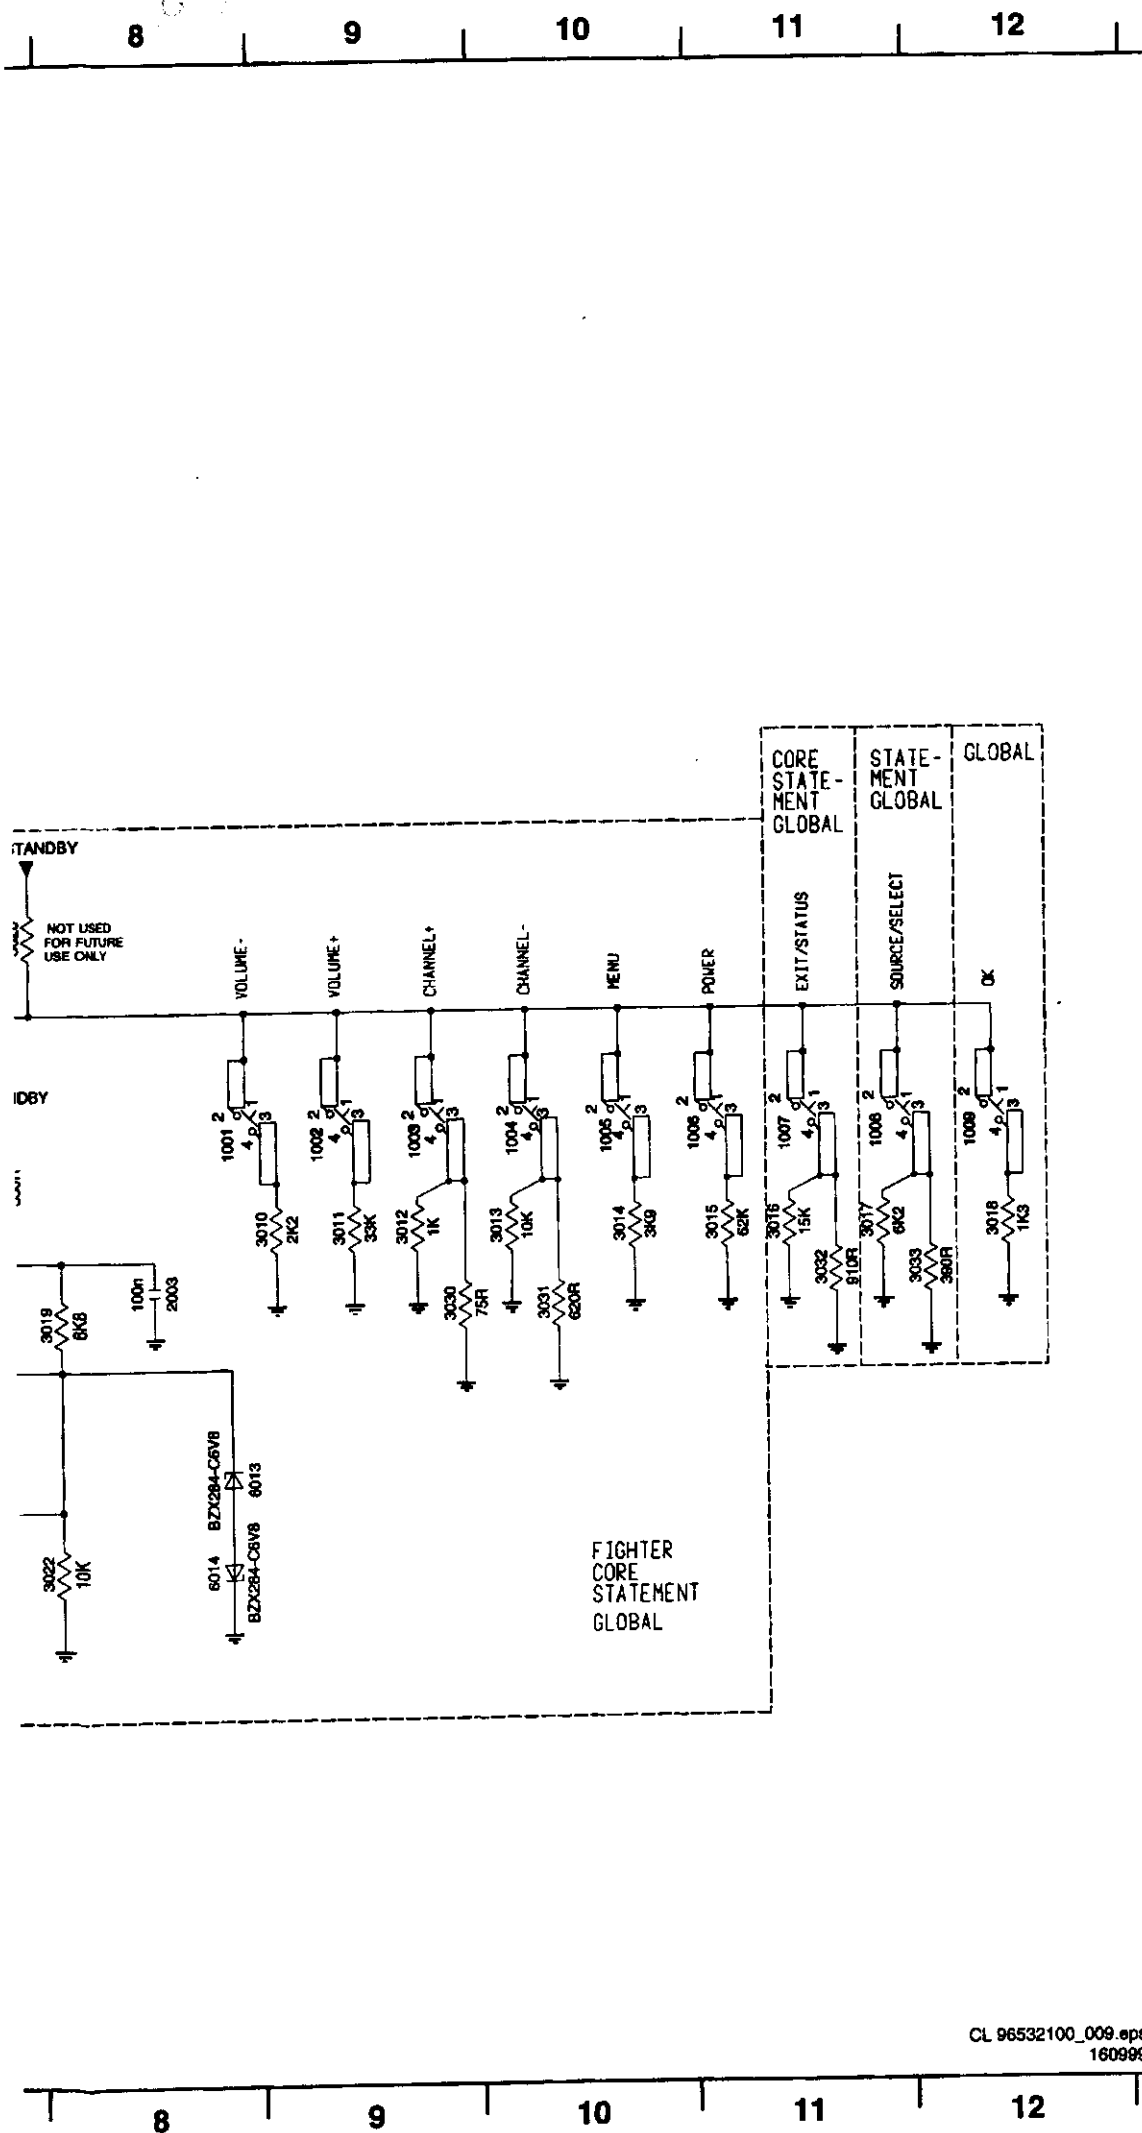

- 1001 E8
- 1002 E9
- 1003 E9
- 1004 E10
- 1005 E10
- 1006 E10
- 1007 E11
- 1008 E11
- 1009 E12
- 1200 E2
- 1207 C3
- 1215 G2
- 2000 B5
- 2001 D6
- 2002 B6
- 2003 F8
- 2004 H5
- 3000 B4
- 3001 C6
- 3002 C3
- 3003 C4
- 3004 C6
- 3005 D3
- 3006 D4
- 3007 D5
- 3008 E5
- 3010 F9
- 3011 F9
- 3012 F9
- 3013 F10
- 3014 F10
- 3015 F11
- 3016 F11
- 3017 F11
- 3018 F12
- 3019 F8
- 3020 G3
- 3021 H4
- 3022 G8
- 3023 I5
- 3024 I5
- 3025 E7
- 3026 D7
- 3030 F9
- 3031 F10
- 3032 F11
- 3033 F12
- 6000 C7
- 6002 G5
- 6003 H3
- 6004 I4
- 6005 F7
- 6007 C5
- 6008 D6
- 6009 F6
- 6010 F6
- 6011 G6
- 6012 F6
- 6013 G8
- 6014 G8
- 7000-A C5
- 7000-B C4
- 7001 H4
- F001 C3
- F002 C6
- F003 D4
- F004 E4
- F005 E4
- F006 G4
- F007 H3

A

B

C

D

E


F

G


H

I

0333 G7	1202-B E10	2212 E6	2222 F9	3200 B1	3209 E3	3220 B3	3230 F6	3243 G8	3253 F8	3270 E11	4227 H6	6204 E2	6211
0376 H8	2126 H6	2213 E5	2224 F4	3201 B1	3210 D4	3221 B6	3231 H12	3244 B11	3254 E4	3271 F11	4228 G6	6205 B4	6211
0381 C1	2202 B2	2215 B7	2226 F4	3202 B2	3211 D4	3222 B6	3232 E7	3245 C10	3255 F4	3272 G1	4229 B4	6206 B4	6211
1200-A E1	2203 B2	2216 B7	2228 H2	3203 B2	3212 E12	3223 B7	3233 G1	3246 B11	3256 H4	3273 G11	4230 E4	6207 C4	6211
1200-B E2	2204 D2	2217 B11	2229 H2	3204 D2	3213 C3	3224 B7	3235 D11	3247 F8	3257 G2	3274 G11	4235 D11	6208 C5	6211
1200-C E2	2205 D2	2218 G6	2235 F1	3205 D1	3215 C4	3225 E6	3236 D11	3248 G8	3258 G1	3280 F2	4200 B1	6209 C5	6211
1201-A B3	2206 B3	2219 C11	2240 E11	3206 D2	3216 C4	3227 G12	3240 C11	3249 G8	3264 G3	3262 F1	6201 C1	6210 C3	6211
1201-B C3	2209 C3	2220 C11	2241 F11	3207 E1	3218 C3	3228 E6	3241 C11	3250 F7	3265 G4	4201 C6	6202 B2	6211 D3	6211
1202-A B10	2210 C4	2221 F6	3147 H8	3208 E11	3219 B4	3229 F6	3242 C12	3252 F8	3266 F8	4226 H6	6203 C2	6212 D3	6211

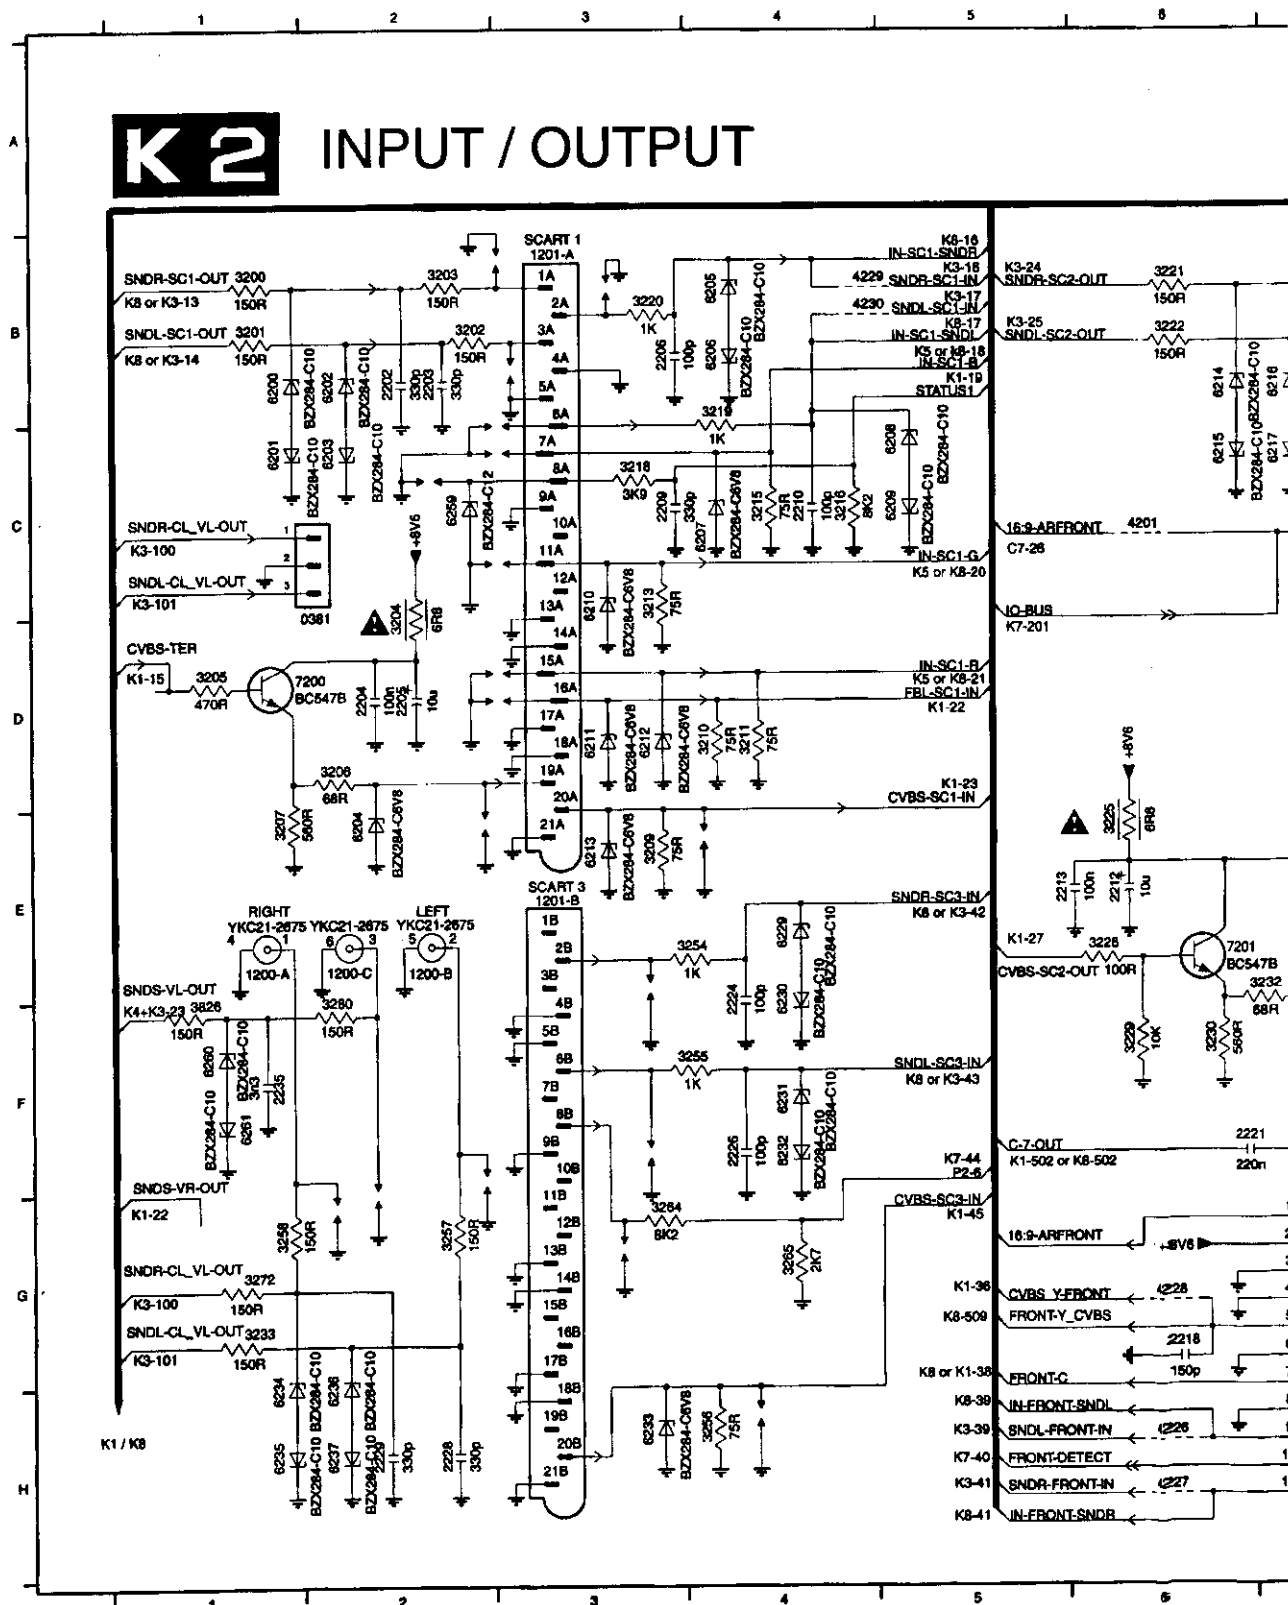


SSP panel

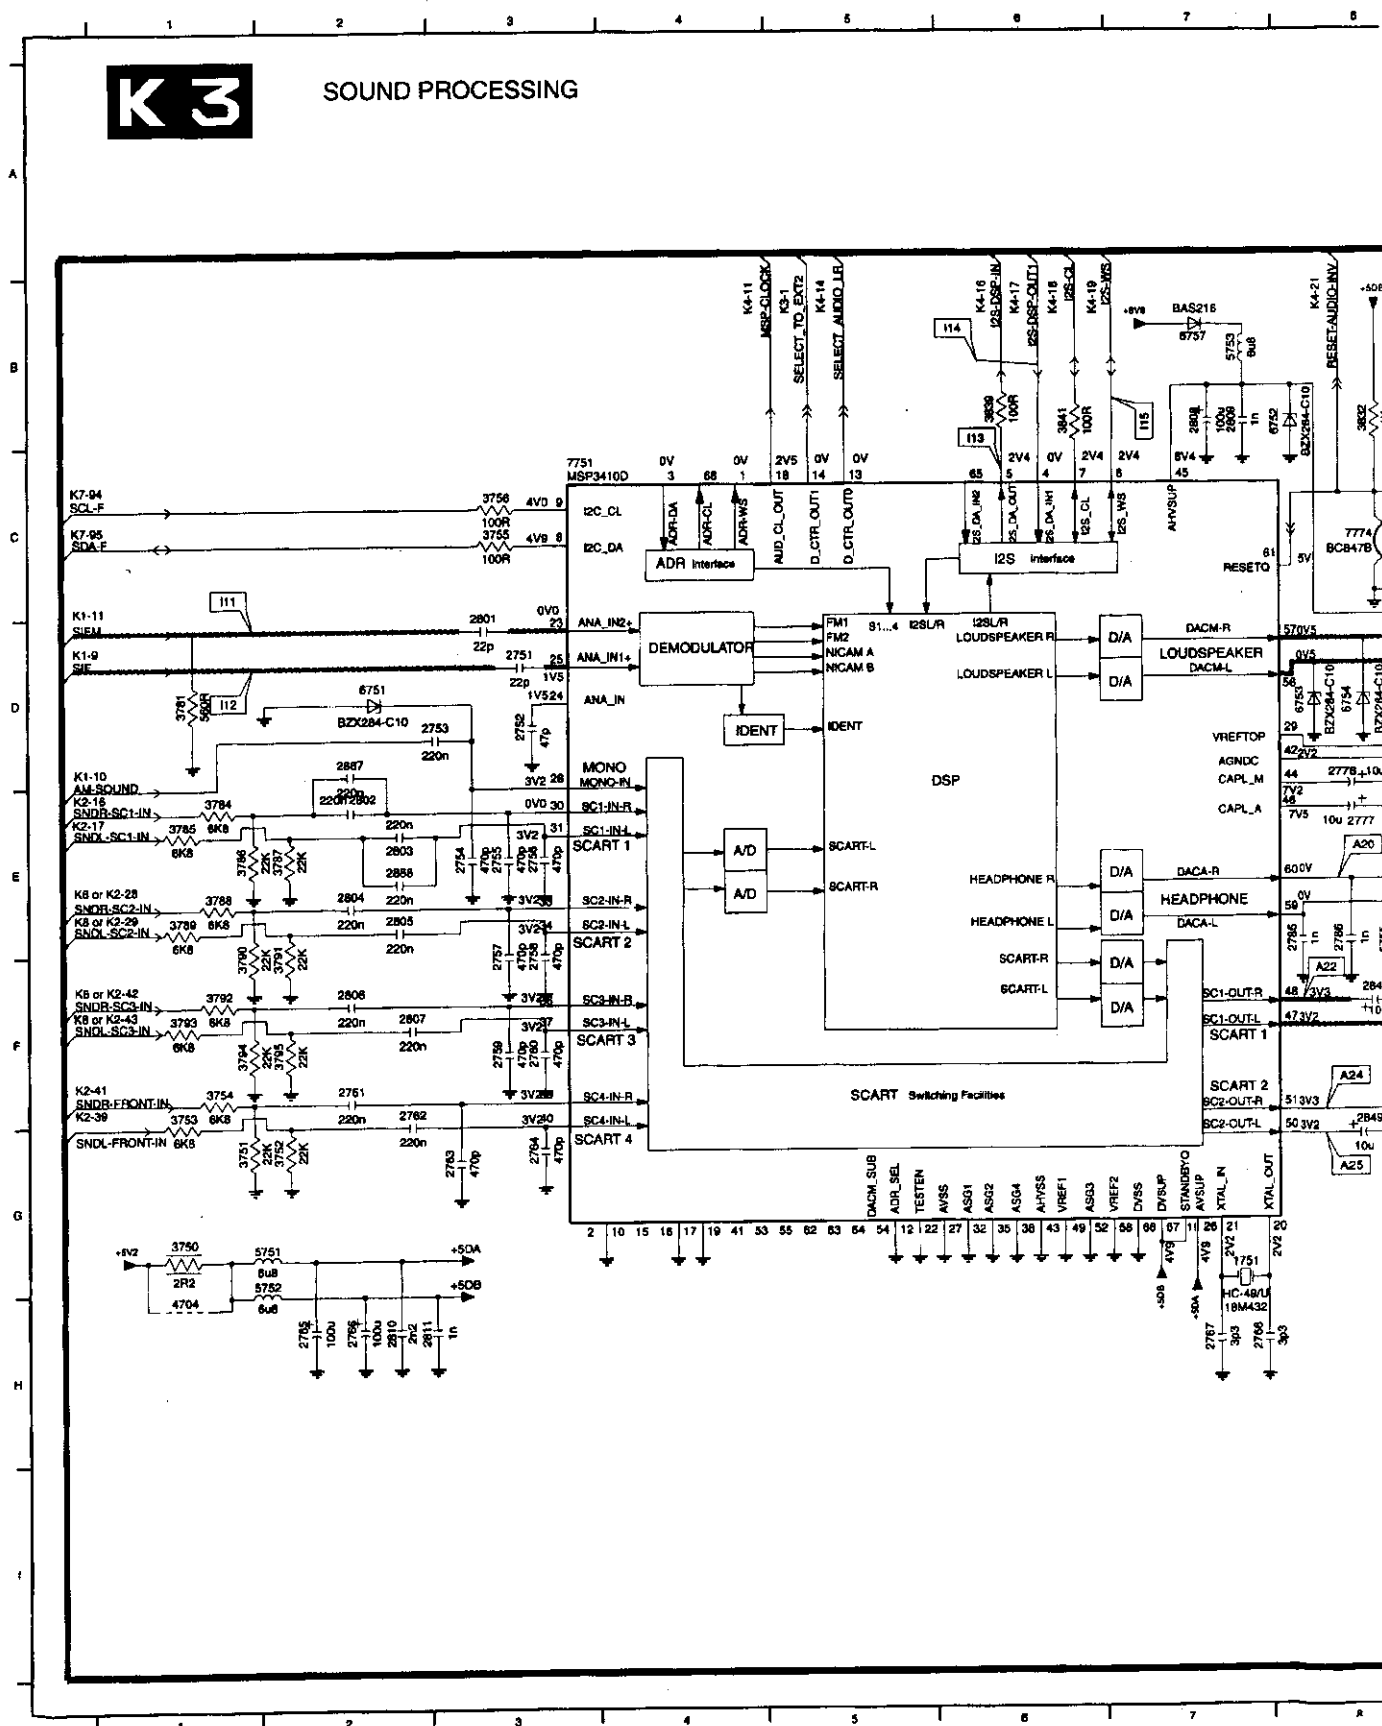


71

9 10 11 12 13 14

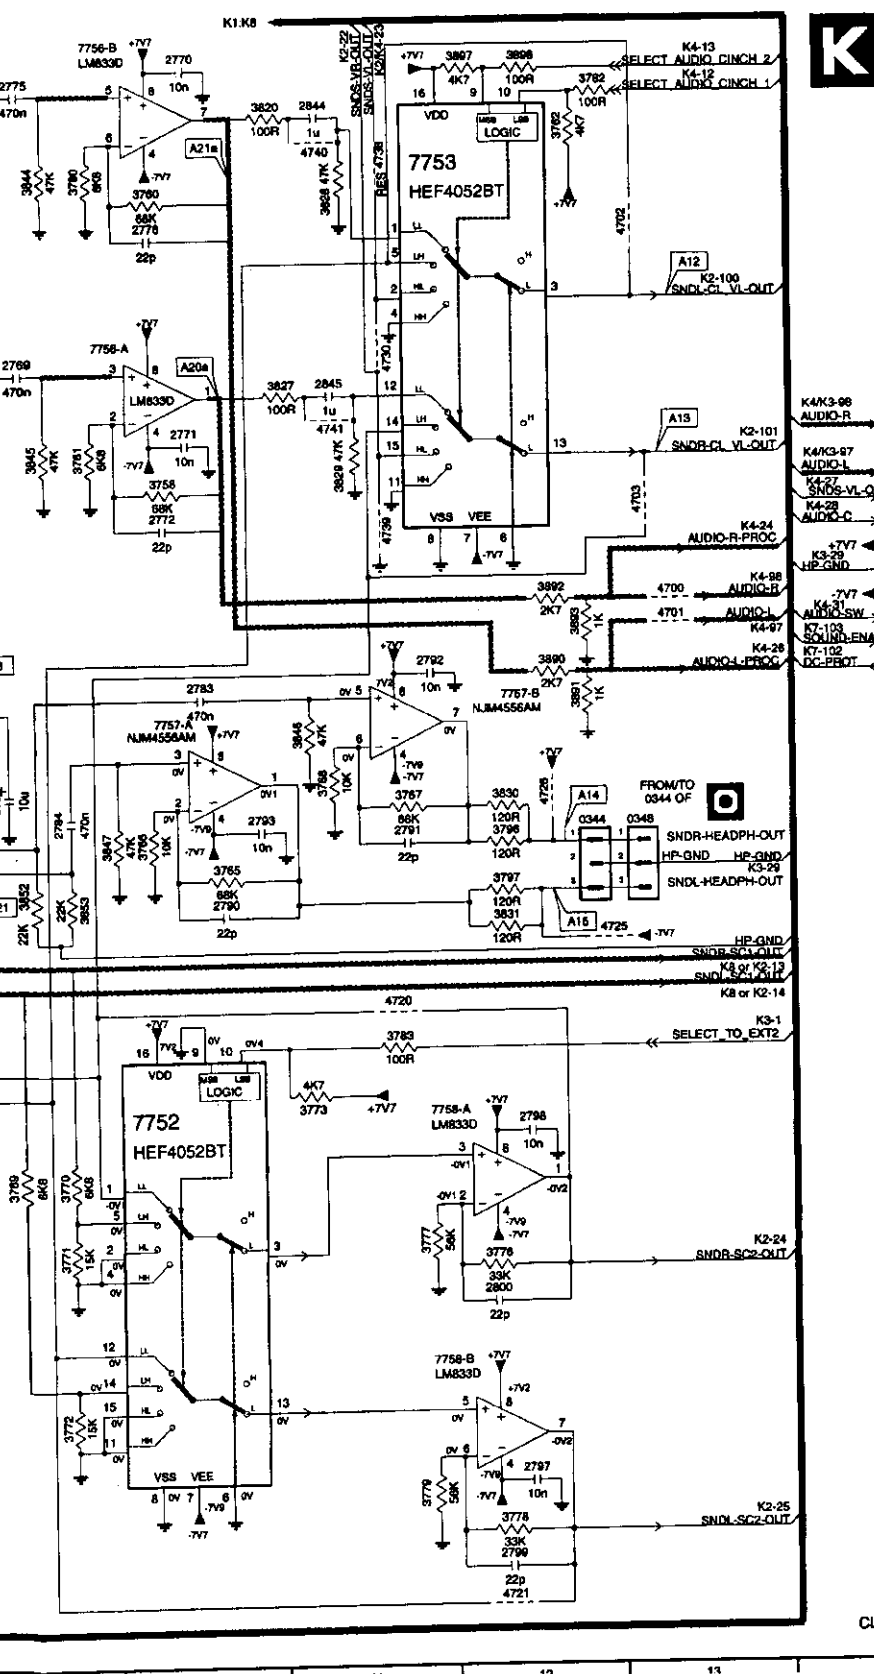


K3

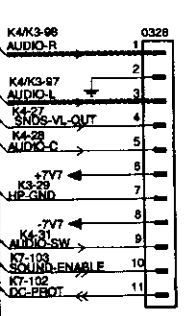


FROM/TO
0328
OF
A4

- 0328 C14
- 0344 E12
- 0346 E13
- 1751 G7
- 2751 D3
- 2752 D8
- 2753 D8
- 2754 E3
- 2755 E3
- 2756 E3
- 2757 F3
- 2758 F3
- 2759 F3
- 2761 F2
- 2762 F2
- 2763 G3
- 2764 G3
- 2765 H2
- 2766 H2
- 2767 H7
- 2768 H7
- 2769 B9
- 2770 A10
- 2771 C10
- 2772 C10
- 2773 D8
- 2774 D8
- 2775 A9
- 2776 A10
- 2777 E8
- 2778 D8
- 2779 E8
- 2780 E8
- 2781 E9
- 2782 E9
- 2783 D10
- 2784 E9
- 2785 E8
- 2786 E8
- 2787 E10
- 2788 E10
- 2789 I12
- 2790 G12
- 2791 I12
- 2792 D11
- 2793 E10
- 2794 I12
- 2795 G12
- 2796 I12
- 2800 H12
- 2801 D3
- 2802 E2
- 2803 E2
- 2804 E2
- 2805 E2
- 2806 F2
- 2807 F2
- 2808 B7
- 2809 B7
- 2810 H2
- 2811 H2
- 2844 A11
- 2845 B11
- 2846 F8
- 2847 F8
- 2848 F8
- 2849 G8
- 2887 D2
- 2888 E2
- 2890 C8
- 2891 C8
- 3750 G1
- 3751 G1
- 3752 G2
- 3753 F1
- 3754 F1
- 3755 C3
- 3756 C3
- 3758 C10
- 3760 A10
- 3761 C9
- 3762 A12
- 3765 E10
- 3766 E10
- 3767 E11
- 3768 E11
- 3769 G9
- 3770 G9
- 3771 H9
- 3772 H9
- 3773 G11
- 3776 H12
- 3777 G11
- 3778 I12
- 3779 H11
- 3780 A9
- 3781 D1
- 3782 A12
- 3783 F11
- 3784 E1
- 3785 E1
- 3786 E1
- 3787 E2
- 3788 E1
- 3789 E1
- 3790 F1
- 3791 F2
- 3792 F1
- 3793 F1
- 3794 F1
- 3795 F2
- 3796 E12
- 3797 E12
- 3798 G9
- 3799 G8
- 3820 A10
- 3827 B11
- 3828 A11


SSP panel

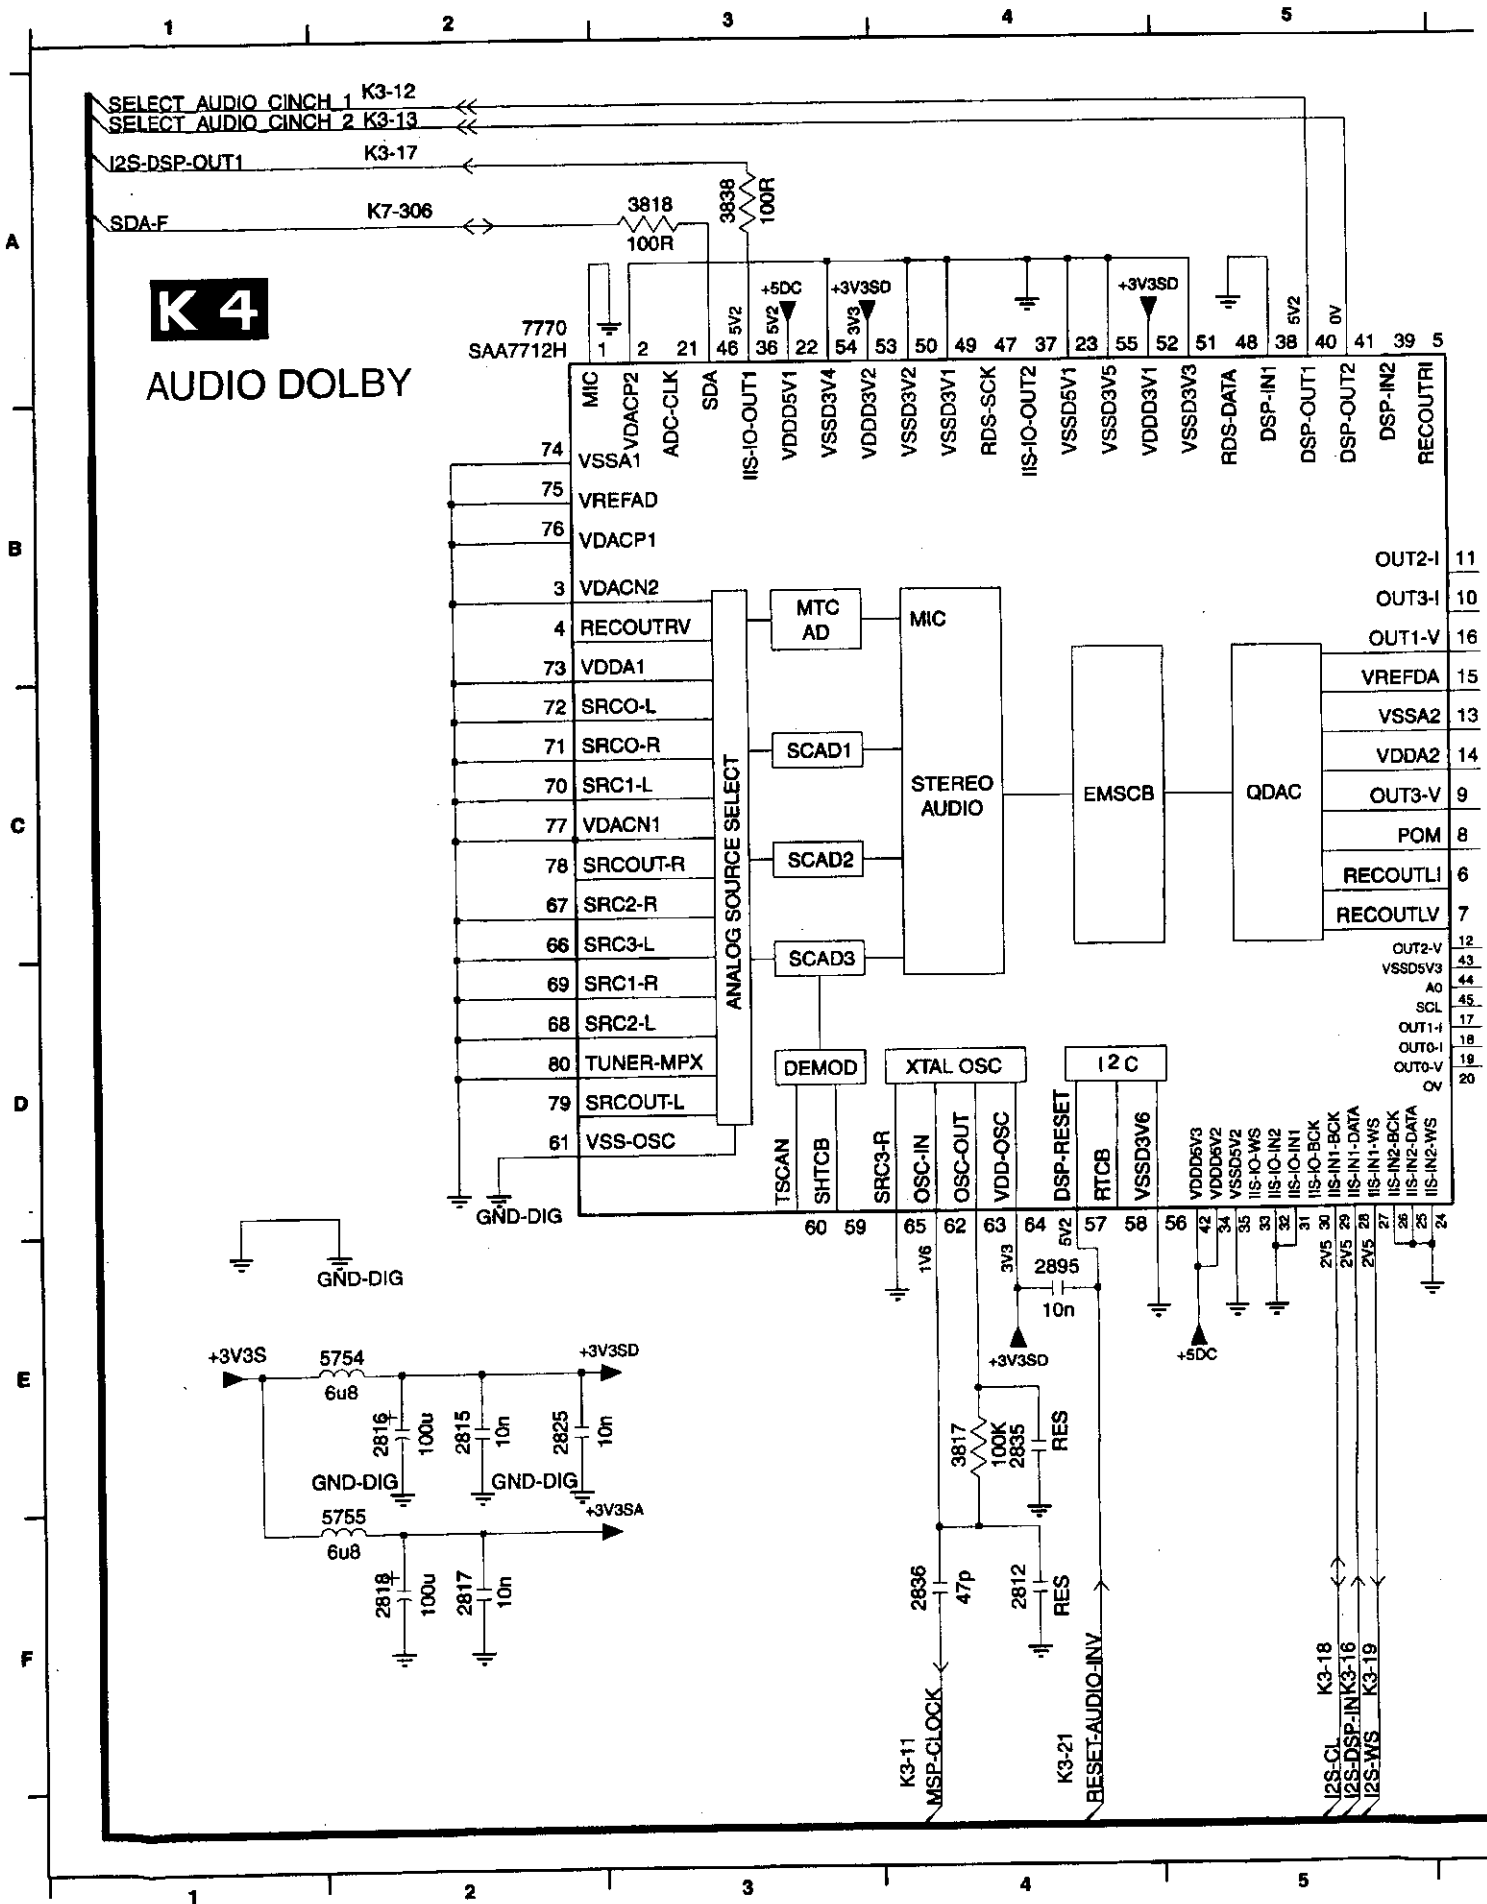


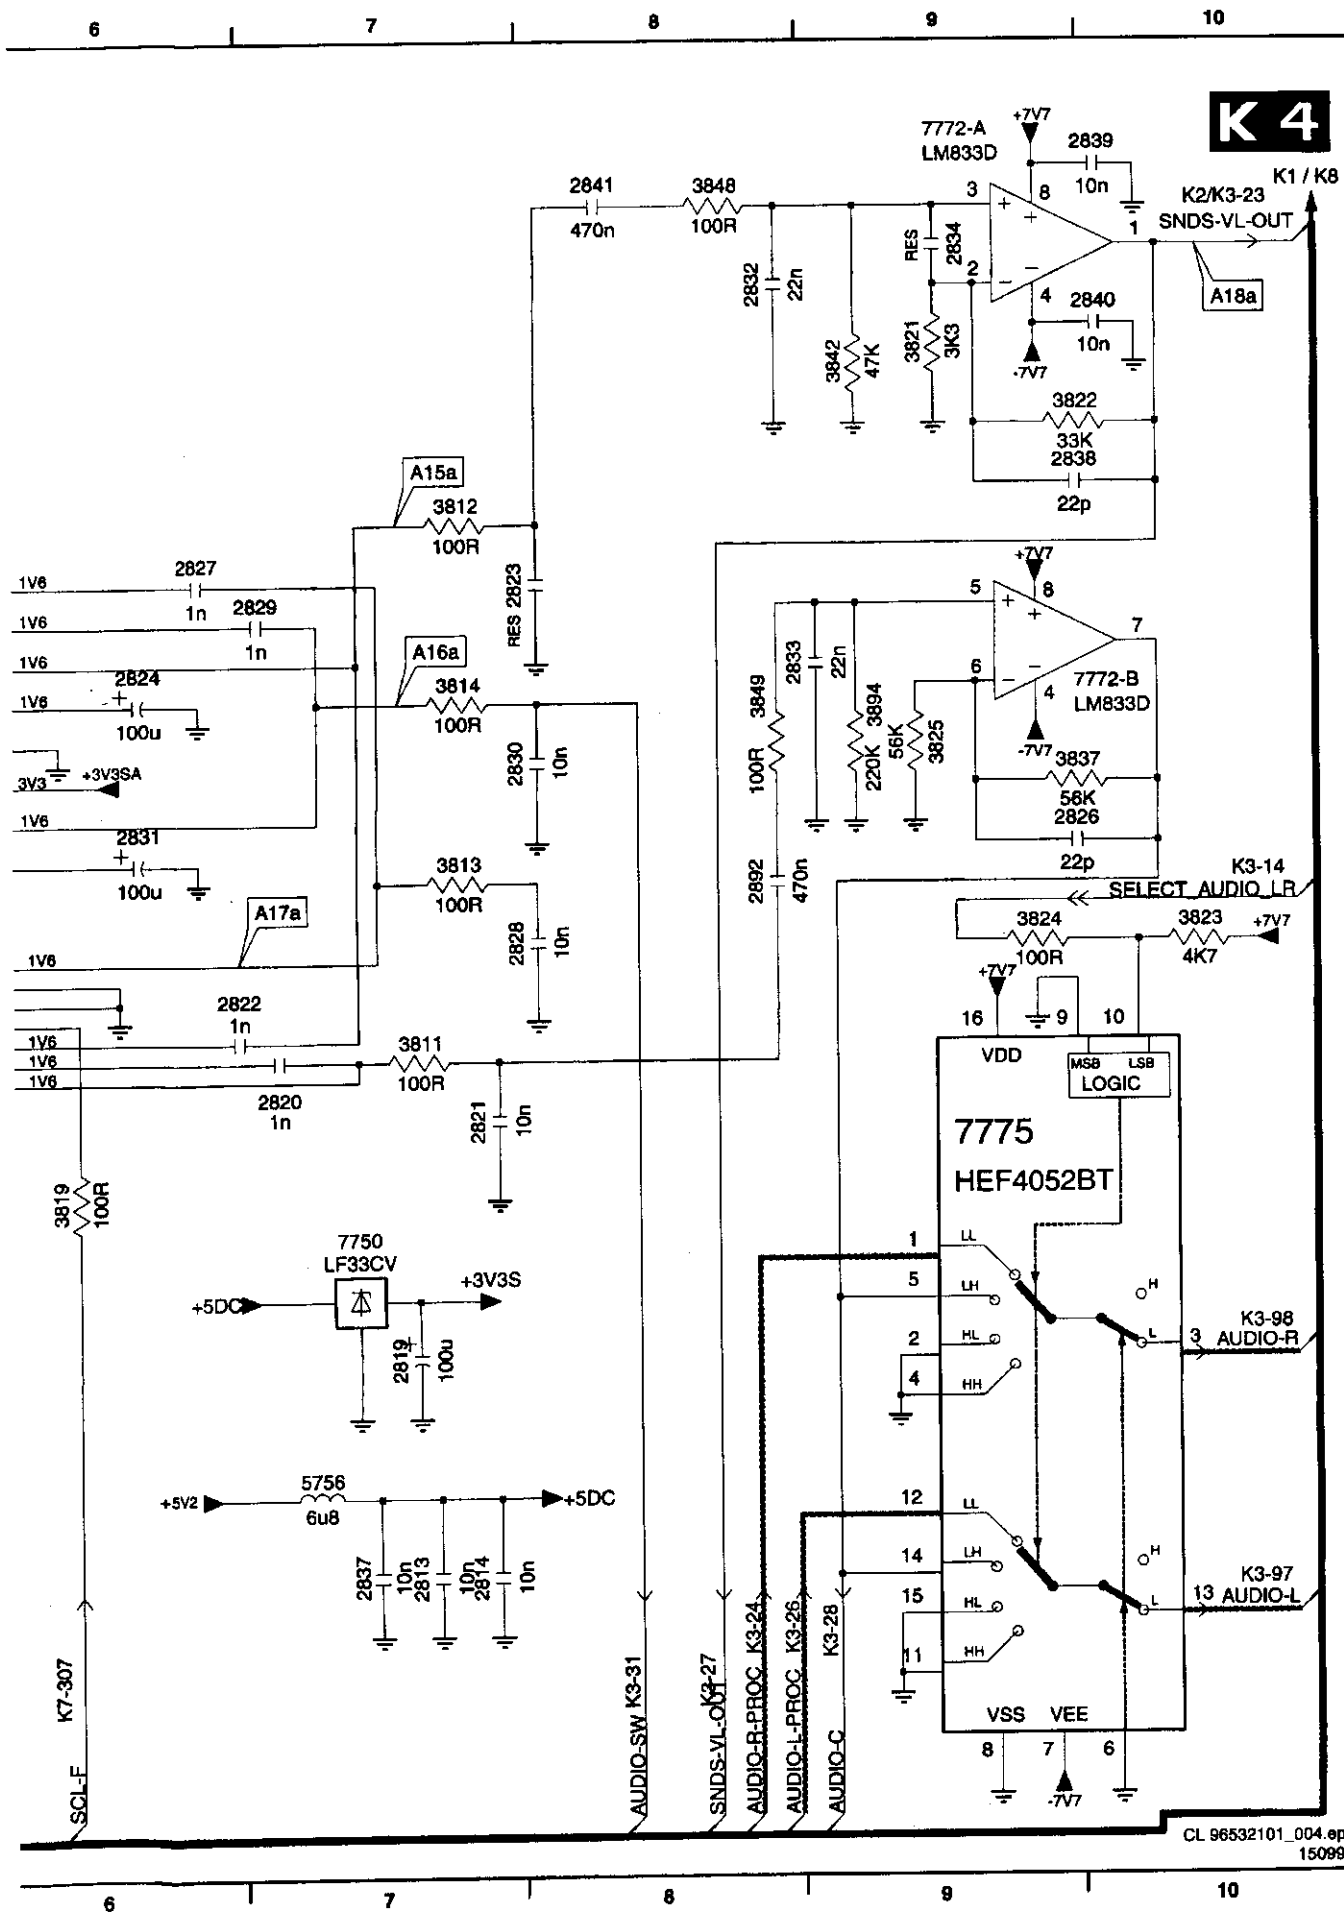

- 2812 F4
- 2813 F7
- 2814 F7
- 2815 E2
- 2816 E2
- 2817 F2
- 2818 F2
- 2819 E7
- 2820 D7
- 2821 D7
- 2822 D6
- 2823 B8
- 2824 B6
- 2825 E2
- 2826 C9
- 2827 B6
- 2828 C8
- 2829 B7
- 2830 C8
- 2831 C6
- 2832 A8
- 2833 B9
- 2834 A9
- 2835 E4
- 2836 F4
- 2837 F7
- 2838 B9
- 2839 A10
- 2840 A10
- 2841 A8
- 2842 C8
- 2843 E4
- 2844 D7
- 2845 B7
- 2846 C7
- 2847 E4
- 2848 A3
- 2849 D6
- 2850 A9
- 2851 B9
- 2852 C10
- 2853 C9
- 2854 C9
- 2855 C9
- 2856 A3
- 2857 A9
- 2858 A8
- 2859 C8
- 2860 C9
- 2861 E2
- 2862 F2
- 2863 E7
- 2864 E7
- 2865 A2
- 2866 A9
- 2867 C9
- 2868 D9

SSP panel

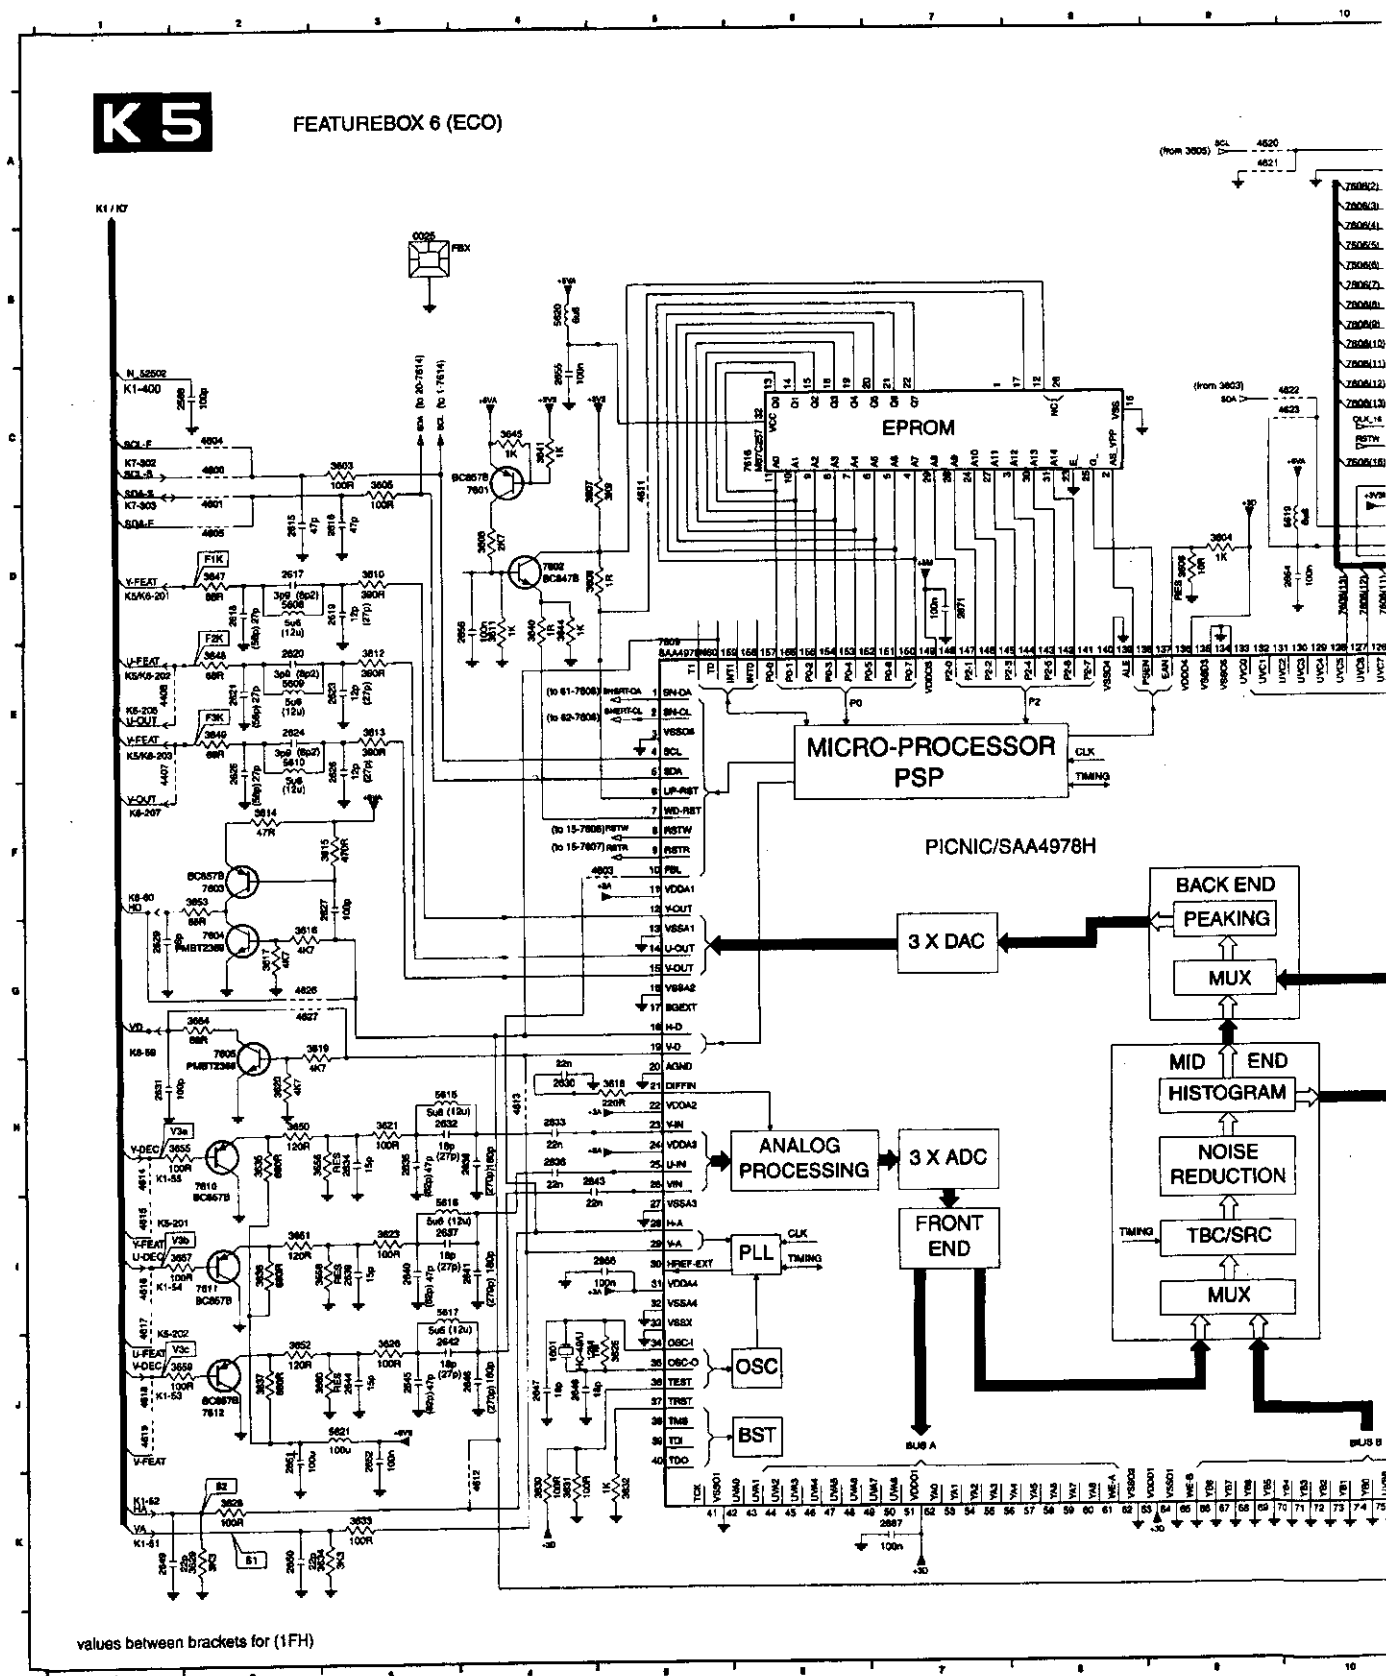

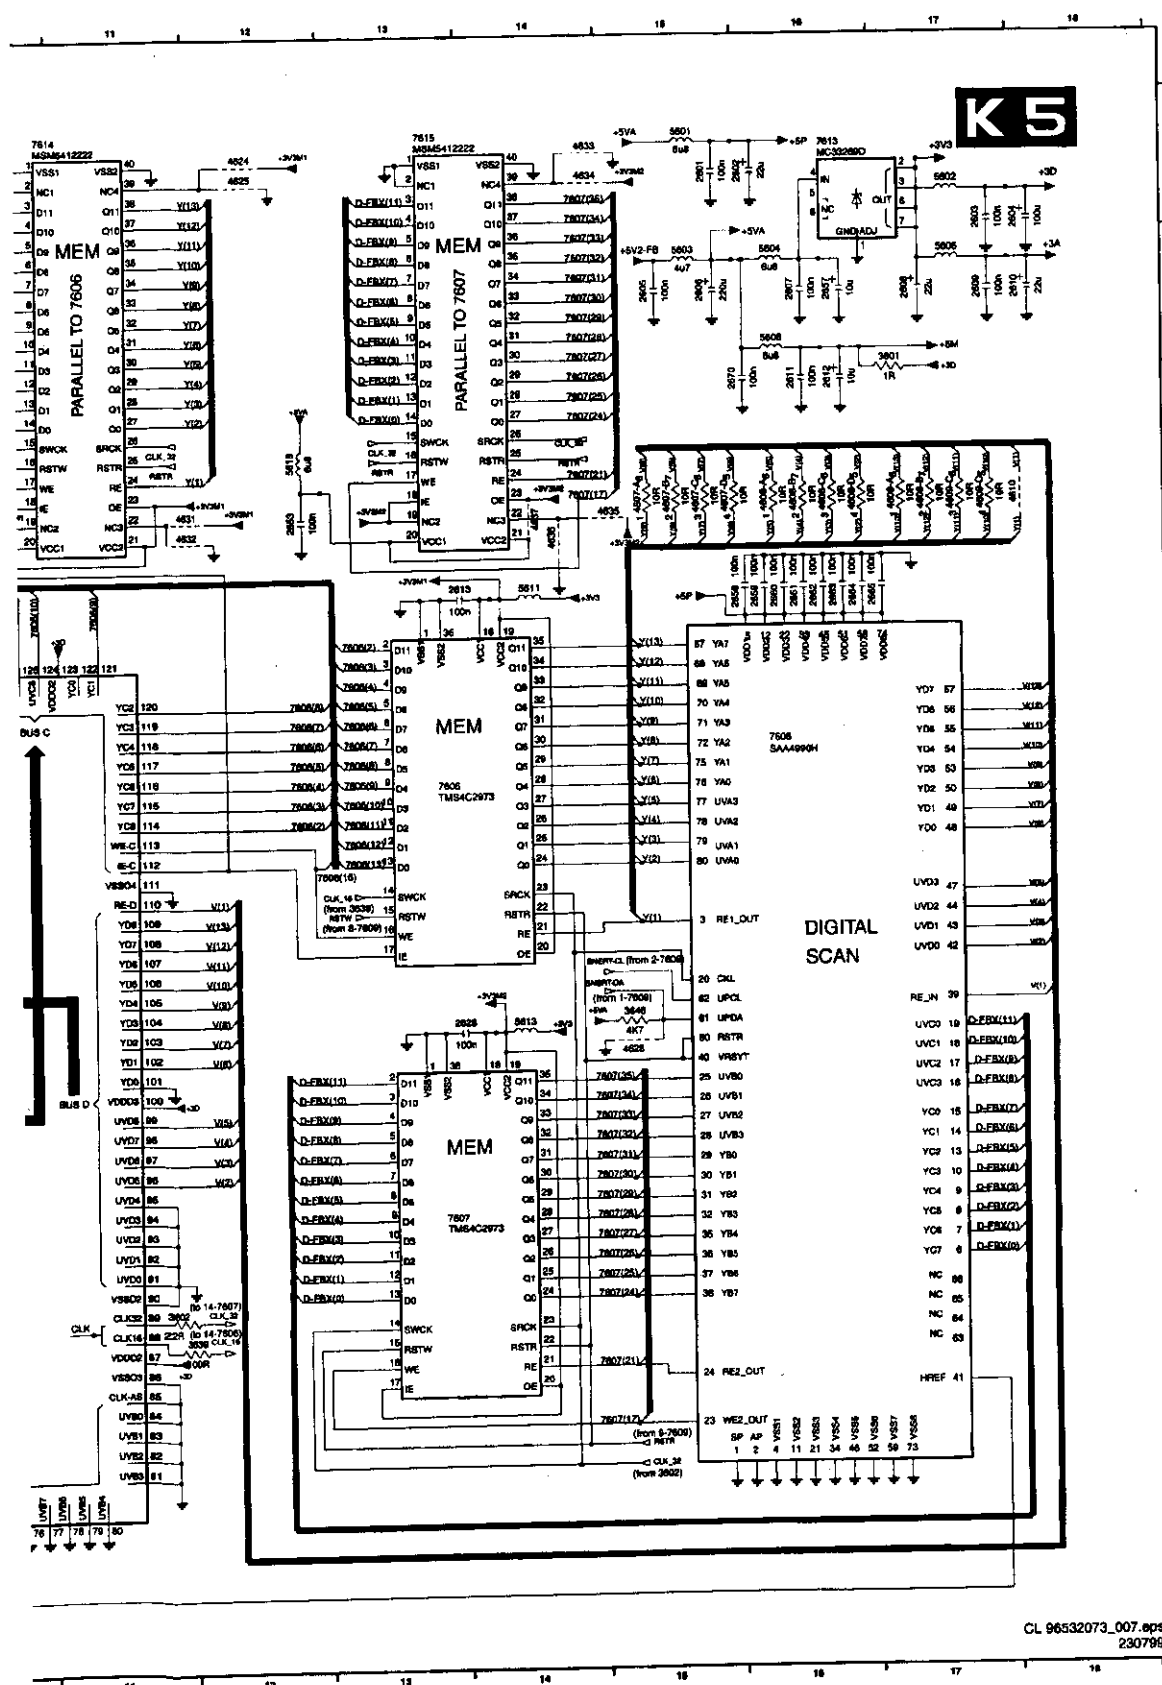


0025 B3	3633 K3
1801 J4	3634 K3
2807 A7	3635 H2
2808 A7	3636 J2
2809 A7	3637 J2
2808 C5	3638 J12
2801 A15	3640 D4
2802 A19	3641 CA
2803 A17	3644 CA
2804 A18	3646 CA
2804 B15	3646 D15
2804 B15	3647 D2
2807 B16	3648 E2
2808 B17	3649 E2
2809 B17	3650 H2
2810 B18	3651 I2
2811 C16	3652 J2
2812 C18	3653 F2
2813 D13	3654 D2
2815 D2	3656 H2
2816 D2	3658 H2
2817 D2	3657 I2
2818 D2	3658 J2
2819 D2	3659 J2
2820 E2	3660 J2
2821 E2	3661 E1
2822 E2	3662 E1
2823 E2	3663 E1
2824 E2	3664 E1
2825 E2	3665 E1
2826 E2	3666 E1
2827 F2	3667 F2
2828 G19	3668 F2
2829 G1	3669 F2
2830 H1	3670 F2
2831 H1	3671 F2
2832 H1	3672 F2
2833 H1	3673 F2
2834 H1	3674 F2
2835 H1	3675 F2
2836 H1	3676 F2
2837 H1	3677 F2
2838 H1	3678 F2
2839 H1	3679 F2
2840 H1	3680 F2
2841 H1	3681 F2
2842 H1	3682 F2
2843 H1	3683 F2
2844 H1	3684 F2
2845 H1	3685 F2
2846 H1	3686 F2
2847 H1	3687 F2
2848 H1	3688 F2
2849 H1	3689 F2
2850 H1	3690 F2
2851 H1	3691 F2
2852 H1	3692 F2
2853 H1	3693 F2
2854 H1	3694 F2
2855 H1	3695 F2
2856 H1	3696 F2
2857 H1	3697 F2
2858 H1	3698 F2
2859 H1	3699 F2
2860 H1	3700 F2
2861 H1	3701 F2
2862 H1	3702 F2
2863 H1	3703 F2
2864 H1	3704 F2
2865 H1	3705 F2
2866 H1	3706 F2
2867 H1	3707 F2
2868 H1	3708 F2
2869 H1	3709 F2
2870 H1	3710 F2
2871 H1	3711 F2
2872 H1	3712 F2
2873 H1	3713 F2
2874 H1	3714 F2
2875 H1	3715 F2
2876 H1	3716 F2
2877 H1	3717 F2
2878 H1	3718 F2
2879 H1	3719 F2
2880 H1	3720 F2
2881 H1	3721 F2
2882 H1	3722 F2
2883 H1	3723 F2
2884 H1	3724 F2
2885 H1	3725 F2
2886 H1	3726 F2
2887 H1	3727 F2
2888 H1	3728 F2
2889 H1	3729 F2
2890 H1	3730 F2
2891 H1	3731 F2
2892 H1	3732 F2
2893 H1	3733 F2
2894 H1	3734 F2
2895 H1	3735 F2
2896 H1	3736 F2
2897 H1	3737 F2
2898 H1	3738 F2
2899 H1	3739 F2
2900 H1	3740 F2
2901 H1	3741 F2
2902 H1	3742 F2
2903 H1	3743 F2
2904 H1	3744 F2
2905 H1	3745 F2
2906 H1	3746 F2
2907 H1	3747 F2
2908 H1	3748 F2
2909 H1	3749 F2
2910 H1	3750 F2
2911 H1	3751 F2
2912 H1	3752 F2
2913 H1	3753 F2
2914 H1	3754 F2
2915 H1	3755 F2
2916 H1	3756 F2
2917 H1	3757 F2
2918 H1	3758 F2
2919 H1	3759 F2
2920 H1	3760 F2
2921 H1	3761 F2
2922 H1	3762 F2
2923 H1	3763 F2
2924 H1	3764 F2
2925 H1	3765 F2
2926 H1	3766 F2
2927 H1	3767 F2
2928 H1	3768 F2
2929 H1	3769 F2
2930 H1	3770 F2
2931 H1	3771 F2
2932 H1	3772 F2
2933 H1	3773 F2
2934 H1	3774 F2
2935 H1	3775 F2
2936 H1	3776 F2
2937 H1	3777 F2
2938 H1	3778 F2
2939 H1	3779 F2
2940 H1	3780 F2
2941 H1	3781 F2
2942 H1	3782 F2
2943 H1	3783 F2
2944 H1	3784 F2
2945 H1	3785 F2
2946 H1	3786 F2
2947 H1	3787 F2
2948 H1	3788 F2
2949 H1	3789 F2
2950 H1	3790 F2
2951 H1	3791 F2
2952 H1	3792 F2
2953 H1	3793 F2
2954 H1	3794 F2
2955 H1	3795 F2
2956 H1	3796 F2
2957 H1	3797 F2
2958 H1	3798 F2
2959 H1	3799 F2
2960 H1	3800 F2
2961 H1	3801 F2
2962 H1	3802 F2
2963 H1	3803 F2
2964 H1	3804 F2
2965 H1	3805 F2
2966 H1	3806 F2
2967 H1	3807 F2
2968 H1	3808 F2
2969 H1	3809 F2
2970 H1	3810 F2
2971 H1	3811 F2
2972 H1	3812 F2
2973 H1	3813 F2
2974 H1	3814 F2
2975 H1	3815 F2
2976 H1	3816 F2
2977 H1	3817 F2
2978 H1	3818 F2
2979 H1	3819 F2
2980 H1	3820 F2
2981 H1	3821 F2
2982 H1	3822 F2
2983 H1	3823 F2
2984 H1	3824 F2
2985 H1	3825 F2
2986 H1	3826 F2
2987 H1	3827 F2
2988 H1	3828 F2
2989 H1	3829 F2
2990 H1	3830 F2
2991 H1	3831 F2
2992 H1	3832 F2
2993 H1	3833 F2
2994 H1	3834 F2
2995 H1	3835 F2
2996 H1	3836 F2
2997 H1	3837 F2
2998 H1	3838 F2
2999 H1	3839 F2
3000 H1	3840 F2


SSP panel

K 6

VIDEO CONTROL & GEOMETRY

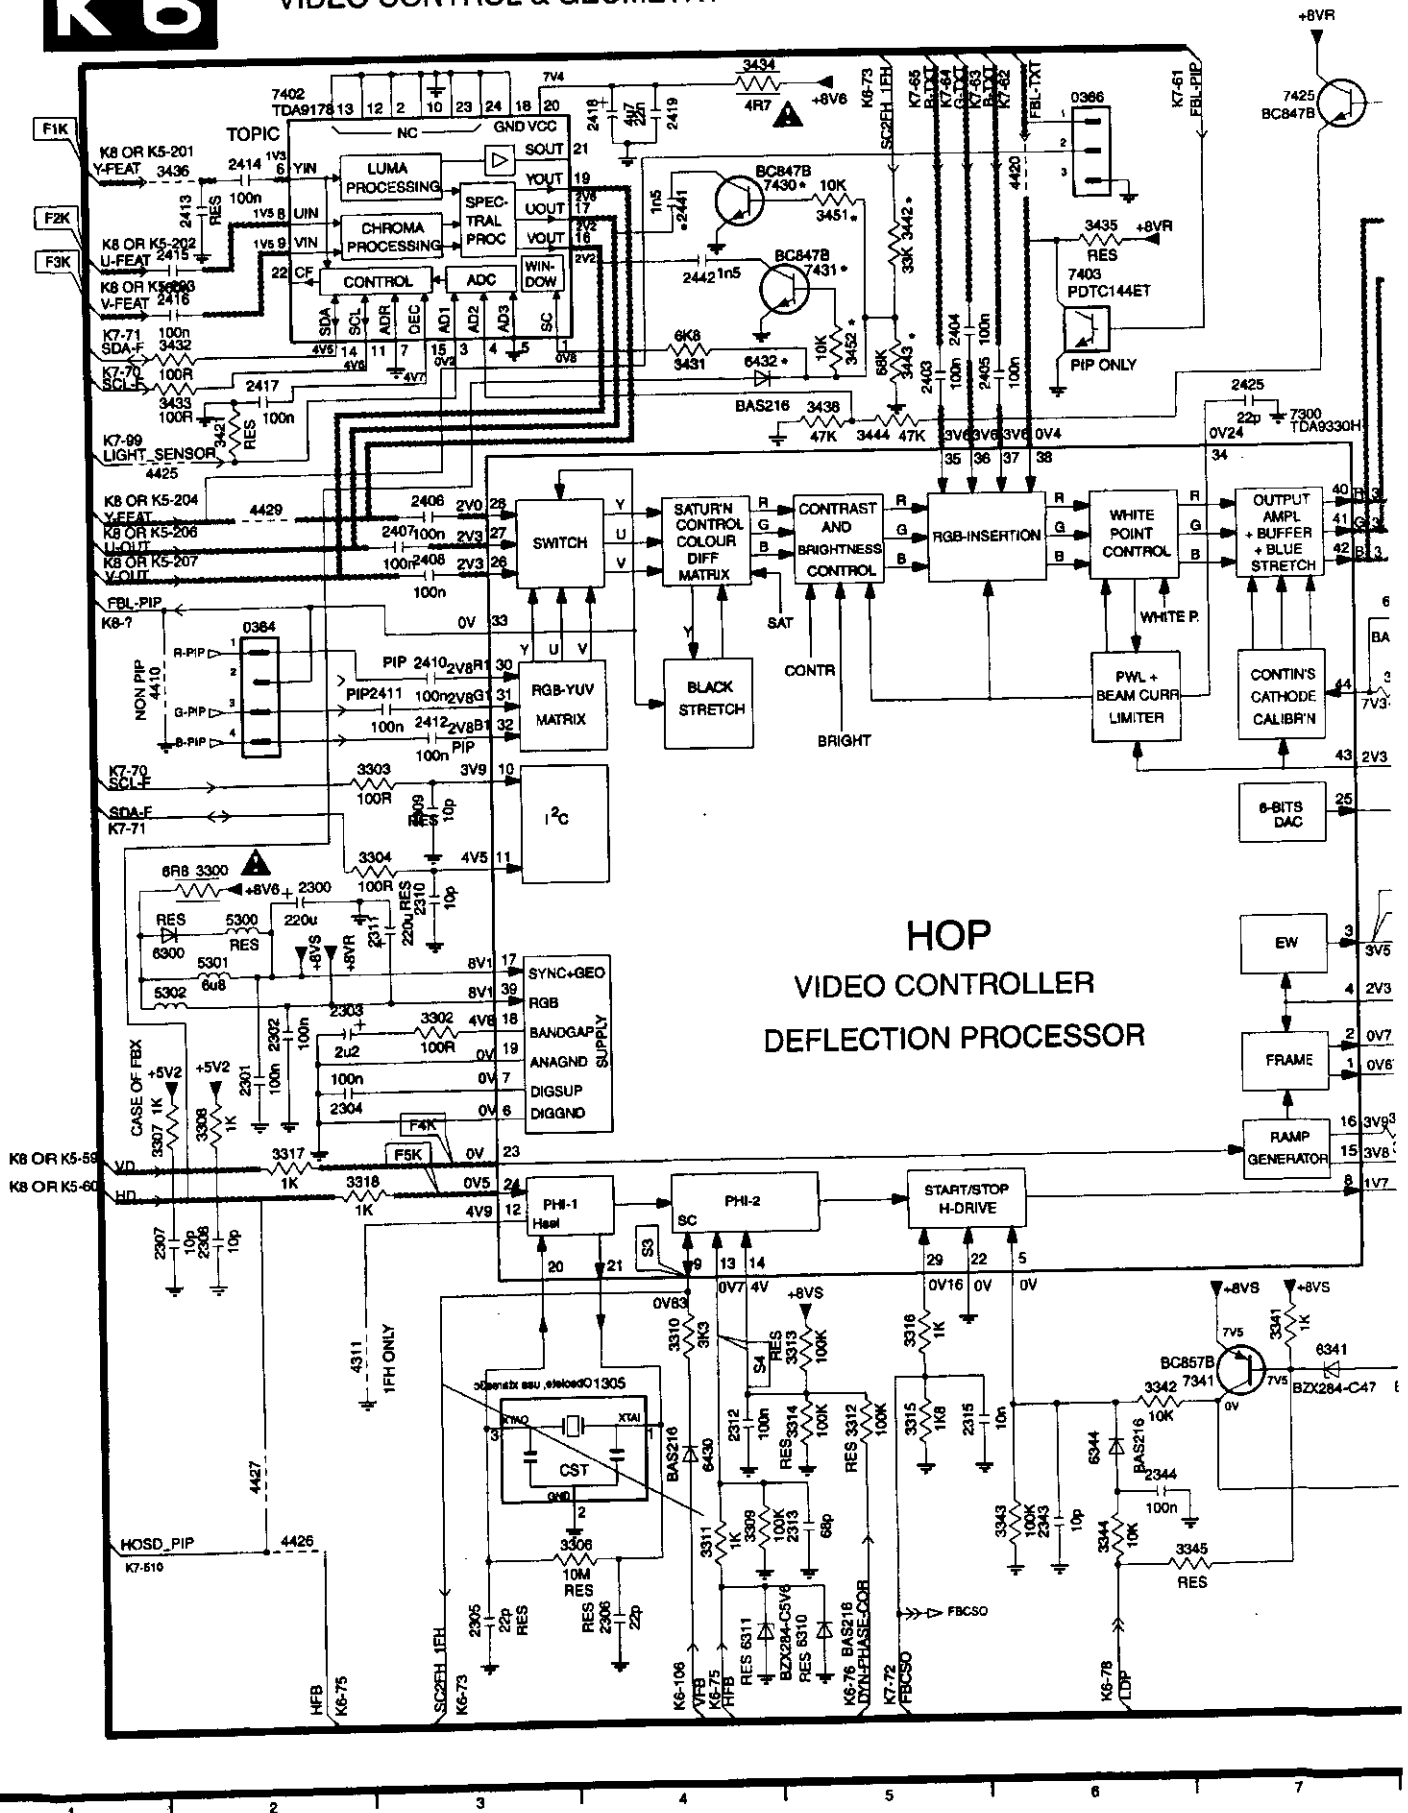

K 6

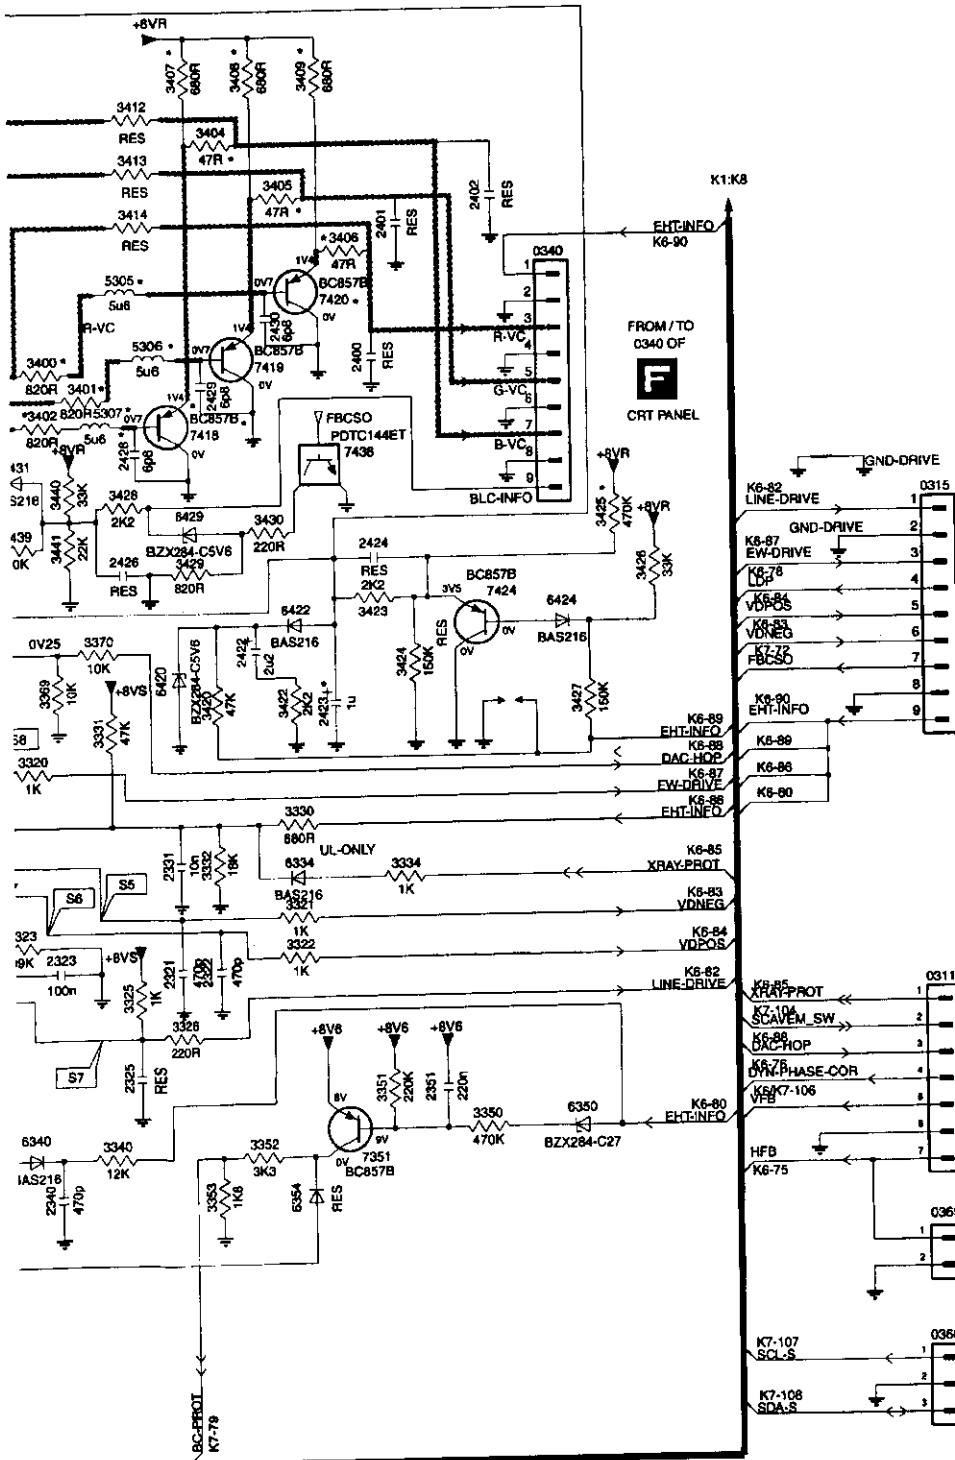

FROM / TO
0315 OF
A1


TO LSP
A2

TO 0360 OF
A2

0311 G12	3331 E8	7402 A2
0315 D12	3332 F9	7403 B6
0340 C10	3334 F10	7418 D8
0360 I12	3340 H8	7419 C9
0364 D2	3341 G7	7420 C9
0368 A6	3342 H6	7424 E10
0369 H12	3343 H6	7425 A7
1305 H4	3344 H6	7430 B5
2300 E2	3345 H6	7431 B5
2301 F2	3350 G10	7438 D9
2302 F2	3351 G10	
2303 F2	3352 H9	
2304 F2	3353 H9	
2305 I3	3369 E8	
2306 I4	3370 E8	
2307 G2	3400 C8	
2308 G2	3401 C8	
2309 E3	3402 D8	
2310 E3	3404 B9	
2311 E3	3405 B9	
2312 H4	3406 C9	
2313 H5	3407 B8	
2315 H5	3408 B9	
2321 G8	3409 B9	
2322 G9	3412 B8	
2323 G8	3413 B8	
2325 G8	3414 C8	
2331 F8	3420 E9	
2340 H8	3421 C2	
2343 H8	3422 E9	
2344 H6	3423 E9	
2351 G10	3424 E10	
2400 C9	3425 D11	
2401 C10	3426 D11	
2402 B10	3427 E11	
2403 C5	3428 D8	
2404 C5	3429 D8	
2405 C6	3430 D9	
2406 C3	3431 C4	
2407 C3	3432 C2	
2408 D3	3433 C2	
2410 D3	3434 A4	
2411 D3	3435 B6	
2412 D3	3436 B2	
2413 B2	3438 C5	
2414 B2	3439 D8	
2415 B2	3440 D8	
2416 B2	3441 D8	
2417 C2	3442 B5	
2418 A4	3443 C5	
2419 A4	3444 C5	
2422 E9	3451 B5	
2423 E9	3452 C5	
2424 D9	4311 G2	
2425 C7	4410 D2	
2426 D8	4420 B6	
2428 D8	4425 C2	
2429 C8	4426 H2	
2430 C9	4427 H2	
2441 B4	4429 C2	
2442 B4	5300 E2	
3300 E2	5301 F2	
3302 F3	5302 F2	
3303 E3	5305 C8	
3304 E3	5306 C8	
3306 H3	5307 D8	
3307 F2	6300 E2	
3308 F2	6310 I5	
3309 H4	6311 I4	
3310 G4	6334 F8	
3311 H4	6340 H8	
3312 H5	6341 H7	
3313 G5	6344 H6	
3314 H5	6350 G11	
3315 H5	6354 H9	
3316 G5	6420 E8	
3317 F2	6422 E9	
3318 G2	6424 E10	
3320 E8	6429 D8	
3321 F9	6430 H4	
3322 F9	6431 D8	
3323 F8	6432 C4	
3325 G8	7300 C7	
3326 G8	7341 H7	
3330 F9	7351 H10	

3057-C H2	3069 K13	3077 K8	3280 J4	4005 D3	4018 F14	8008 G7	8023 G8	7002 B15	7010 H7	7018 K9
3057-D H2	3070 K18	3078 K8	3281 J3	4008 F3	4802 J3	8008 G4	8025 G9	7003 B11	7011 I8	7018 D6
3059 C6	3071 K18	3080-B H13	3282 K3	4009 D9	5001 K9	8008 G4	8026 G8	7004 J6	7012 D8	7205 K4
3082 K18	3072 L17	3080-B H13	3283 K4	4010 C8	5002 I5	8012 B8	8037 D8	7005 J7	7013 B17	7218 J9
3083 F17	3073 K18	3080-C J13	3088 J3	4012 D8	8001 G8	8013 C8	8038 M	7008 K18	7014 K18	
3086 D5	3074 K3	3080-D H13	4001 H3	4014 D3	8002 G5	8017 G6	8238 J4	7007 K17	7015 K19	
3087 D5	3075 G9	3081 H13	4002 H3	4016 D4	8003 G7	8019 G6	8260 J4	7008 H8	7016 K18	
3088 E5	3078 H10	3289 J4	4003 H4	4017 E14	8004 G5	8021 G7	7001 F15	7009 J18	7017 K8	

K 7

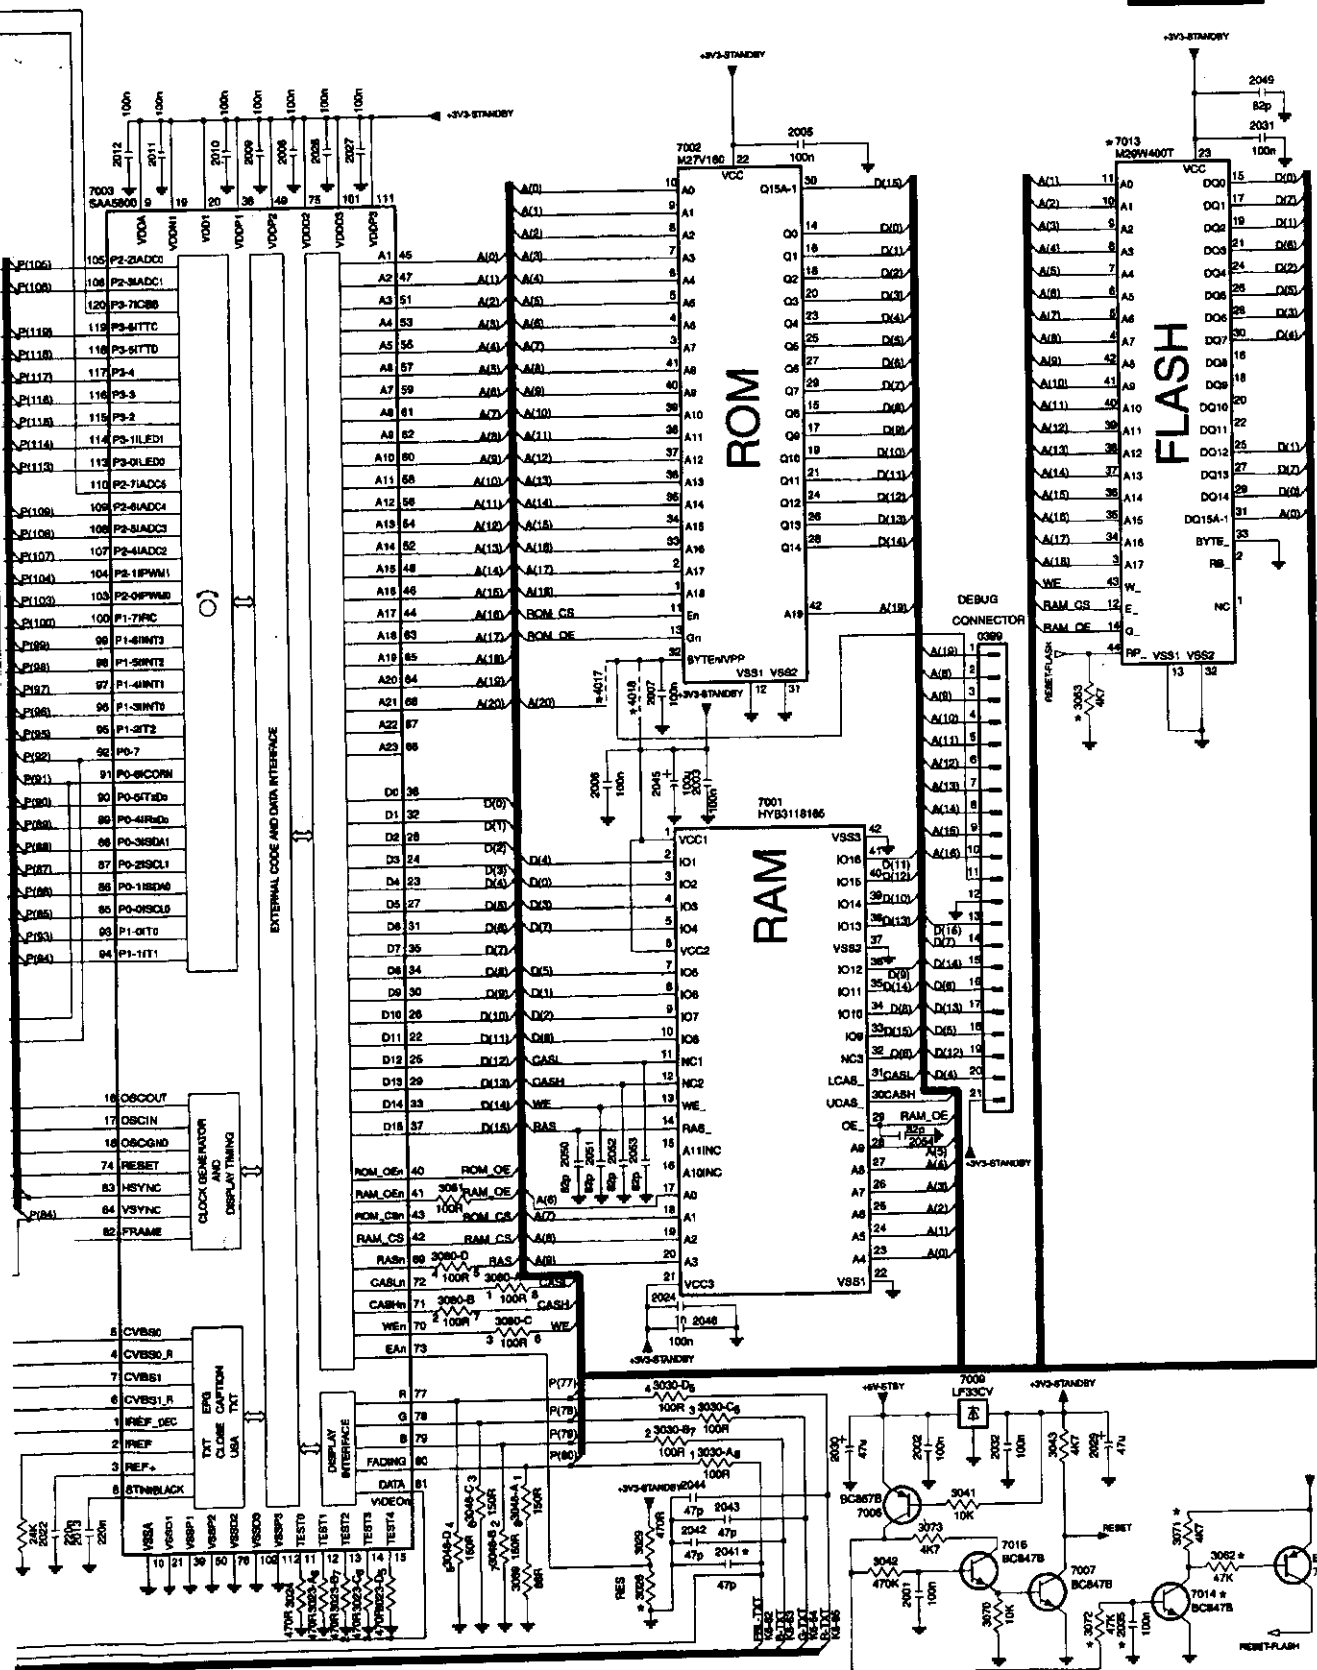

8. Electrical alignments

8.1 General alignment conditions

All electrical alignments should be made under the following conditions:

- Power supply voltage: 220-240V 10%; 50-60 Hz 5%.
- Warm-up time >15 minutes.
- Voltages and oscillograms are measured in relation to tuner earth (with exception to the voltages on the primary side of the power supply). Never use the cooling fins/plates as ground.
- Test probe: $R_i > 10 \text{ MOHM}$, $C_i < 20 \text{ pF}$.

8.2 Alignments on the Power supply panel

8.2.1 +130Vdc supply voltage

- Connect the positive lead of a voltmeter to the 130Vdc source (at the junction of 5304 and 5305).
- Connect the negative lead to the isolated "cold" ground.
- Using potentiometer R3322 adjust the 130Vdc supply voltage to +130Vdc 0V5.

8.3 Alignments on the Large Signal Panel

8.3.1 High Voltage Adjustment

Exercise extreme caution when adjusting high voltage.

Note: The following test equipment must be used:

High voltage probe

Digital multimeter with 1% (or better) dc accuracy and an input impedance of 10 Megohms 10%.

Initial settings:

- Turn the PTV on.
- Confirm that the 130V source (at the junction of 5304 and 5305) is 130V 0V5.
- Perform the 130Vdc adjustment if the voltage is not within specified limits.
- Select a non-used AUX input for a black picture.
- Turn the PTV off.

With the PTV off and unplugged, connect a Fluke Model 80K-40 (or equivalent) high voltage probe as follows and adjust the high voltage.

1. Connect the ground lead to the chassis ground.
2. Connect the high voltage probe to the digital multimeter.
3. Set the digital multimeter to measure dc volts.
4. Remove one of the CRT anode connections from the high voltage splitter.

Note: Make sure that 3973 is turned fully clockwise.

1. Insert the probe tip into the open CRT anode connection of the high voltage splitter
2. Turn the set on.
3. Adjust 3973, High Voltage Adjust, on the Large Signal Panel for a reading of 30kV 200V.
4. Turn the set off.
5. Remove the high voltage probe.
6. Reinstall the CRT anode connector.
7. Turn the set on and confirm proper operation.

8.3.2 High Voltage Frequency Adjustment

1. Turn the set off and disconnect the ac-input power.
2. Disable the high voltage by shorting the collector of 7952 to ground.
3. Disable the sync input to 7900 by shorting the base of 7952 to ground.
4. Connect a frequency counter to pin 1 of 7900.

5. Turn the set on and adjust 3902 to obtain a reading of 31.25kHz on the frequency counter.

6. Turn the set off and remove the short circuits and the frequency counter.


Note: Some frequency counters may be too sensitive at one attenuation level and not sensitive enough at another. In this case, an oscilloscope may be used. Adjust 3902 to obtain a delay of 63.5S from the leading edge of the first main pulse to the leading edge of the second main pulse.

8.4 Alignments on the small signal panel (SSP)

8.4.1 40.4 MHz neighbour-channel sound trap



- Tune to a checker board test-pattern (system BG - and with a carrier frequency of 475.25 MHz).
- Connect an oscilloscope (trigger line frequent) to pin 19 (CVBS out) of the scart1 connection.
- Align the coil L5103 (diagram K1) completely downwards (see Fig. 8.1).
- Align the coil upwards till under- and overshoot arise at the black/white and white/black transitions in the video signal (Fig. 8.2).
- Align the coil downwards again till above mentioned under- and overshoot is just disappeared.

SSP

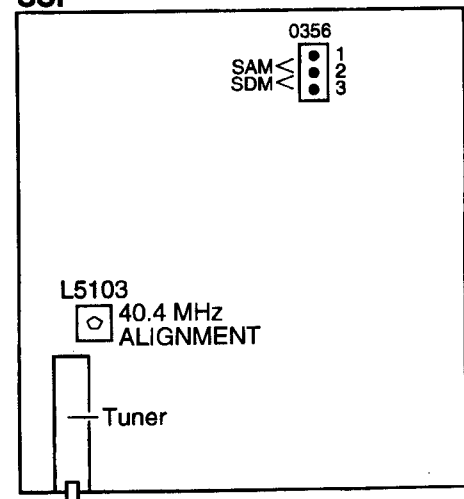

CL 86532057_004a.AI
240798

Figure 8-1

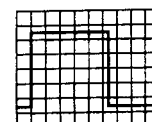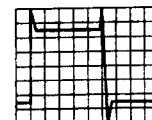

CL 86532057_006.AI
170798

Figure 8-2

8.5 Alignments needing SAM-mode + measuring equipment

(These alignments could be of interest when ICs (7501, TDA9320H), or the EAROM (7008, ST24E16) are exchanged on the SSP.)

8.5.1 'IF AFC' (navigation to this menu item via Alignment --> General --> IF AFC)

- During the 'IF AFC'-parameter adjustment one can see OSD feedback on the screen.
- The OSD feedback can give 4 kind of messages:

AFC-window	AFC-frequency versus reference
Out	High
In	High
In	Low
Out	Low

The first item (in or out) informs you whether you are in or out the AFC-window

The second item (high/low) informs you about whether the AFC-frequency is to high or to low

- First you must align the 'IF AFC'-parameter such that you come into the AFC-window (= 'in')
- Then you must look for the point where the 'IF AFC'-parameter influences the high/low message. This level is the value you are looking for.

Service-tip: If you do not trust the accuracy of the frequency of your Service-generator, first 'measure' with 'Fine tune'-line (manual install-menu) of a good set your Service generator.

8.5.2 'Tuner AGC'

Supply a TV-signal, with a frequency of 475.25 MHz and a signal-strength of about 2 mV. Measure the DC-voltage on pin 1 of the Tuner (position 1102). With the 'Tuner AGC'-alignment in the SAM-menu, this voltage can be aligned. Alignment is correct when DC-voltage is just below 3.8 V

8.6 Alignments and settings in the Service Alignment Menu

8.6.1 General

Entering the SAM can be done in 2 ways:

- Briefly shorting the service pins 'SERVICE ALIGNMENT MODE' on the front side of the SSP (pins 1 and 2 of connector 0356) or:
- Pressing the key on the Dealer Service Tool (DST) (RC7150), followed by keying in the password "3140" and then pressing the key.

The Service Alignment Mode menu will now appear on the screen. The following information is now displayed:

1. The software date ('Date') and version ('ID.') of the ROM (Example: MG51E11.0_01501). (This software-code stands for MG51 (chassis), E for Europe, 1-language, 1.0 software version, xxxxx latest 5 digits of 12nc code software.)
2. The accumulated total of operation hours ('Operation Hours').
3. ('Errors') followed by maximal 10 errors. The most recent error is displayed at the upper left. For explanation errors see chapter 5 (table 5.1).
4. ('Defect. Module'). Here the module that generates the error is displayed. (If there are multiple errors in the buffer that have not all been generated by a single module, there

is probably another defect. The message 'Unknown' will then be displayed here).

5. ('Reset Error Buffer'). The error buffer can be reset by pressing the key.
6. ('Functional Test'). All devices are tested via the key. Eventual errors are displayed in the error buffer. The error buffer is not erased, the contents return when the Functional Test is terminated.
7. ('Alignments'). This enables the Alignments sub-menu to be called up.

The following alignments can be selected:

'General':

- 'Drive'
- 'Luminance Delays'
- 'EHT Compensation'
- 'Soft Clipper'
- 'Luma Gain'
- 'IF AFC'
- 'Tuner AGC'
- 'Blend Intensity'
- 'Adjust Peak White Limiter'
- 'Vg2 Test Pattern'
- 'G2 Setup'
- 'AKB'

'Normal Geometry':

- General geometry alignments.

'Super wide geometry': (only valid for widescreen sets)

- Geometry alignments for the 'Super Wide' position in 16:9 sets (only valid for wide screen sets; alignments can be performed, however, it is better to set values as mentioned below).

'Options':

- Setting the initialisation codes in the set via text.

'Option number':

- All options together, expressed in two long numbers. The original factory setting for these numbers can be found on the picture tube sticker on the inside of the set.

'Store':

- Store all alignments.

The alignments are explained now in the sequence of the sub-menu:

8.6.2 General alignments in Service Alignment Menu:

- Once all alignments/settings have been completed the item 'Store' must be selected to record all the values in the permanent memory of the set.
- If the option codes have been changed and stored, the set has to be switched on and off using the mains switch to activate the new settings (when switching on and off via Standby, the option code settings are NOT read by the microprocessor).
- If an empty EAROM (permanent memory) is detected, all settings are set to pre-programmed default (standard) values.
- A built-in test pattern can be called up in various sub-menus. The test pattern generator can be switched on using the item 'Test pattern on/off'. The test pattern only appears AFTER the specific alignment has been selected. The test patterns are generated by the teletext-IC.

'Drive'

1. Remove the Light Barrier in order to view the Main Lens Output from each tube.

Note: Any dust should be removed from the Output Lenses, Mirror and backside of the Screen with a soft cloth.

1. Apply a Black Level video pattern to the antenna input.
2. Turn all the G2 controls counterclockwise.
3. While looking directly into the tubes, set each G2 control to produce a barely visible picture on the CRT.
4. Set "Cathode" to 6.
5. Select "Green" and set the value to 32.

6. Select "Tint" and switch this to normal.
7. Apply a Gray scale pattern to the antenna input.
8. Adjust the Red and Blue drives to obtain the correct Gray scale.
9. Reset the "Tint" to Warm.
10. Add 4 to the value of the "Red" and subtract 7 from the value of the "Blue".
11. Reset "Tint" to Cool.
12. Subtract 3 from the value of the "Red" and add 3 to the value of the "Blue".
13. Return to the "Alignments" menu and "Store" the new settings.

Tint-settings:

In table below an indication of the three tint settings 'Normal', 'Warm' and 'Cool' is given.

	Cool	Normal	Warm
R	10	13	17
G	32	32	32
B	17	14	7

'Luminance delays'

With the 'Luminance delays' alignment the luminance information is placed on the chrominance information (brightness is pushed onto the colour). Use a colour bar/grey scale pattern as test signal.

- Lum. Delay Pal: Apply a PAL colour bar/grey scale pattern as a test signal. Adjust 'Lum. Delay Pal' until the transients of the colour part and black and white part of the test pattern are at the same position.
- Lum. Delay Secam: Apply a SECAM colour bar/grey scale pattern as a test signal. Adjust 'Lum. Delay Pal' until the transients of the colour part and black and white part of the test pattern are at the same position.
- Lum. Delay Bypass: Apply a NTSC colour bar/grey scale pattern as a test signal. Adjust 'Lum. Delay Bypass' until the transients of the colour part and black and white part of the test pattern are at the same position.

'EHT compensation'

Fixed value: 0

'Soft clipper'

Fixed setting: 'Pwl+0%'

'Luma gain'

Fixed value: 1

'IF AFC'

See chapter 8.5.1. The SAM-mode is needed to make alignment, a test generator to make signal, an oscilloscope to measure at SCART-output and the Install-menu to check fine-tuning-value.

'Tuner AGC'

See chapter 8.5.2. The SAM-mode is needed to make alignment, a test generator to make signal, a DC-Voltmeter to measure at pin 1 of Tuner.

'Blend intensity'

(This alignment could be used when micro controller or HOP-IC has been replaced). It aligns the level of transparency of the menu-picture blended into the main-picture.

- Position the brightness-, contrast- and colour-setting in the middle-position. (picture-menu).
- Apply a signal with a 100 % white video-pattern
- Connect an oscilloscope to pin 3 of connector 0340 of the CRT panel and measure the Red output level

- Align 'blending intensity'-parameter such that the blended signal is 65 % of the black-white amplitude. Practically this will be about 1.3 V (blended signal) versus 2 V (full white signal).
- The parameter can be adjusted in between 0 and 31.

'Peak White Limiter'

The next value for 'Peak White Limiter' must be entered: 10

'VG2 Test Pattern'

Not applicable

'G2 Setup'

Not applicable

'AKB'

Select AKB and switch to "ON".

8.6.3 Geometry alignments 'Normal Geometry' in the Service Alignment Menu

Warning:

At this moment the INTERNAL test pattern of the set will lead to a misaligned geometry of the picture. Please do not use internal test pattern. When using a service generator with a geometry-pattern (e.g. a crosshatch-pattern), the set can be aligned without problems.

Note: First defeat the Convergence drive by shorting the two pins on connector 1033 on the Convergence Panel.

Typical values for the Normal Geometry alignments are:

V Slope36
V. Shift32
V. Amplitude46
V S-Correction12
H. Shift24
H. Amplitude20
East/West Parabola40
East/West Corner13
East/West Trapezium24
Horizontal Parallelogram30

Vertical amplitude and centring

Select 'Test Pattern ON' and set the begin conditions:

- Vertical S-correction value on 12.

The boundary-stripes of the test pattern should be positioned on the edge of the picture tube.

1. Align 'V slope' (when aligning the below half of the picture is blanked). The middle line of the test pattern must be matched with the edge of this blanking/picture transient in the middle of the picture. Pushing button again, gives you previous menu again. (This alignment is meant to align the zero-crossing of the frame-deflection to the mechanical middle of the picture tube.)
2. Align the vertical amplitude using 'V amplitude' so that the test pattern is fully visible.
3. Align the vertical centring using 'V shift' so that the test pattern is located vertically in the middle.
4. If necessary repeat the alignment of 'V amplitude', in order to get 'V shift' OK.

Vertical S correction

Select 'Test pattern on'.

Align the vertical S correction using 'V S-correction' so that the vertical amplitude at the top of the picture is equal to the amplitude in the middle of the picture.

Horizontal centring and amplitude

Select 'Test pattern on'.

1. Using 'H amplitude' align the horizontal amplitude so that the entire test pattern is visible.

2. Use an external test signal, with a centre-reference from a service-generator. Use 'H shift' to align the picture horizontally in the middle.
3. Repeat the 'H amplitude' alignment if necessary.

East/west alignment

Select 'Test pattern on'.

1. Use 'East/West Parabola' to align the vertical lines until straight.
2. Use 'East/West Corner' to align the vertical lines in the corners until straight.
3. Use 'East/West Trapezium' to align for a rectangular.
4. Use 'Horizontal Parallelogram' to align for straight vertical lines if necessary.
5. If necessary select 'East/West Corner' and align as required.
6. Repeat steps 1 to 4 if necessary.

8.6.4 Geometry alignments 'Super wide geometry' in the Service Alignment Menu

Only applicable to 16:9 sets.

Typical values for the Super Wide Geometry alignments are:

V. Shift 32

V. Amplitude 28

V S-Correction 12

H. Correction 18

East/West Parabola 40

The header of this paragraph and also the menu's are misleading. We only need to set the following values, if the normal geometry alignment has been performed correctly.

- Vertical S correction: enter value here of normal geometry.
- East/west parabola: enter value here or normal geometry.

8.7 Option menu

Introduction:

The microprocessor communicates with a large number of I2C-ICs in the set. To ensure good communication and make digital diagnosis possible, the microprocessor has to know which ICs have to be addressed. The presence of specific ICs or functions is made known by means of the option codes.

All options codes can be manipulated using both the option numbers and/or the Option menu.

All hardware related options are incorporated under the heading 'Options' of the 'Alignments' sub-menu of the 'Service Alignment Mode'. All software related options that are incorporated under the heading 'Dealer Options' of the 'Service Alignment Mode', can also be reached directly via the 'button of the DST.

8.8 Options in the Service Alignment Mode

Menu-item	Subjects	Options	Physically in the set
Dual screen/PIP	Aux type	None	
		Video Dual Screen	
		PIP	
	Text dual screen	Yes	Text dual screen present (only valid for 16:9 sets)
		No	Text dual screen not present
Teletext/EPG	TXT	Yes	Teletext present
		No	Teletext not present
	NextView present	Yes	NextView set
		No	NextView not set
	NextView type	Flashram	IC7013 present on SSP (diagram K7)
		No Flashram	IC 7013 not present on SSP (diagram K7)
Communication	Easylink Plus	Yes	Easylink Plus set
		No	Easylink Plus not set
Picture tube	CRT Type	4:3	4:3 picture tube
		16:9	16:9 picture tube
	Picture Rotation (only for 16:9)	Yes	Frame rotation circuitry present on LSP (IC7440 diagram A3)
		No	Frame rotation circuitry not present (IC7440 diagram A3)
	Dynamic Focus	Yes	Dynamic focus picture tube present
		No	Dynamic focus picture tube not present
Video Repro	Feature box type	Eco	IC7606 present on SSP (diagram K5)
		Prozonic	IC7606 and IC7607 present on SSP (diagram K5)
		Falconic	
	Field memories (only with falconic)	2	
		3	
	Lightsensor	Yes	
		No	

Menu-item	Subjects	Options	Physically in the set
	PALplus	Yes	
		No	
	Combfilter	Yes	IC7560 present on SSP (diagram K1)
		No	IC7560 not present on SSP (diagram K1)
	Picture improvement	Yes	
		No	
	Picnic AGC	Yes	In normal operation: Yes
		No	During 'Drive' alignments: No
	Signalling bits	Yes	
		No	
Source Selection	External 3	Yes	3rd EURO connector present
		No	No 3rd EURO connector present
	External 4	Yes	4th EURO connector present
		No	No 4th EURO connector present
Audio Repro	Dolby	None	
		Pro Logic	
		Digital	MCS-module present
	Rear speakers	Corded	
		Virtual	
		Cordless	Active surroundbox present
	Acoustic system	FL7	Applicable for sets with subwoofer
		FL8	Applicable for sets without subwoofer
		FL9	Monitor look
Miscellaneous	Heatsink Present	Yes	Heatsinks present on CRT/Scavem panel (diagram F)
		No	Heatsinks not present on CRT/Scavem panel (diagram F)

8.9 Dealer Options in the Service Alignment Mode

Menu name	Subjects	Options	Physically in set
Picture options	CTI	Yes	CTI enabled
		No	CTI disabled
Personal	Blue Mute	Yes	Blue mute active in case no picture detected
		No	Noise in case of no picture detected
	Virgin Mode	Yes	TV starts up once with language selection menu after mains switch on for the first time (virgin mode)
		No	TV does not starts up once with language selection menu after mains switch on for the first time (virgin mode)
	Auto store mode	None	Autostore mode disabled (not in installation menu)
		PDC-VPS	Autostore mode via ATS (PDC/VPS) enabled
		TXT page	Autostore mode via ACI enabled
		PDC-VPS-TXT	Autostore mode via ACI or ATS enabled
	Demo Mode Enable	Yes	Demo mode enable
		No	Demo mode disable
	Auto TV	Yes	Auto TV mode enabled
		No	Auto TV mode disabled
Teletext	TXT Preference	TOP	Preference to TOP teletext
		FLOF	Preference to FLOF teletext
	East/West TXT	West	TXT characters for non -/58 sets
		East	TXT characters for -/58 sets

- After the option(s) have been changed, they must be stored via the STORE command.
- The new option is only active after the TV is switched off and then back on again using the mains switch (the EAROM is then read out again).

8.10 'Option number'

In case the EAROM has to be replaced, all the options will also require resetting. To be certain that the factory settings are reproduced exactly, both option numbers have to be set. These numbers can be found on a sticker on the picture tube. Option number 46PP9105 and 55PP9105 is:
00713 12678 04545 00016
12343 00001 00000 00000

8.11 Convergence Alignment

Warm the set up for at least 20 minutes prior to making any Geometry or Convergence adjustments. Sit directly in front of and at least 2 to 3 meter away from the front of the screen while performing convergence alignments. Also ensure that you are always at eye level with the area of the screen you are adjusting.

Digital Convergence alignments are interactive. A change in one quadrant will affect adjacent areas of the screen. Several passes through the convergence sequence may be necessary. When performing convergence alignments, it is advised to always follow the sequence pattern when going from one adjustment location to another. Pressing the Cursor Right key will sequence the Icon through the preloaded pattern. A convergence board severely out of convergence will not necessarily have perfect Icon shapes.

A Complete in-depth Convergence will be required if the Convergence module or Convergence Memory IC has been replaced.

The correct signal for the mode being adjusted must be applied to the set when performing Geometry or Convergence alignments. Convergence alignments must be performed twice, one time for an NTSC signal, and then for PAL or SECAM. The NTSC signal can only be applied through the External inputs.

8.11.1 Screen centering

1. Apply a PAL, SECAM, or NTSC signal to the set (NTSC Signal can only be applied to the External inputs).
2. Put the picture in the 16:9 mode.
3. Select the "Convergence Mode" in the alignment menu.
4. Select "Convergence Selection" in the Convergence menu.
5. Select "Green" in the Convergence Selection Menu.
6. Defeat the Convergence drive by shorting the two Pins on connector 1033 located on the Convergence panel.
7. Place the Convergence Template over the screen.
 - 46": 3122 785 90002
 - 55": 3122 785 90003
8. Using the Centering rings on the Green CRT, center the convergence pattern onto the center point of the Convergence Template.
9. Return to the Convergence Selection menu.
10. Select "Red to Green" in the service menu.
11. Center the Red pattern onto the Green pattern for each quadrant of the screen.
12. Return to the Convergence Select Menu.
13. Select "Blue to Green" in the service menu.
14. Center the Blue pattern onto the Green pattern.
15. Remove the jumper from connector 1033.
16. Return to the Convergence Selection
17. Menu.

8.11.2 Green Geometry

Green Geometry

1. Make sure the set is placed in 16:9 mode. Ensure that the proper signal (PAL, SECAM, or NTSC) for the mode being tested is applied to the set.

2. Perform the procedure for PAL or SECAM, repeating the convergence procedure for NTSC will then be required.
- Note: Do not repeat Screen Centering. It is necessary to perform Screen Centering for one mode only.

1. Select "Convergence Selection" in the Convergence Mode Menu.
2. Select "Green" in the "Convergence Selection" Menu.
3. Press the "OK" button on the DST or the Menu Select button on the consumer remote to adjust the Icon.

Note: Move the Icon toward the adjustment point on the Template for no more than 4 seconds in any direction.

1. When you are satisfied with the current location of the Icon, press the "OK" button or the Menu Select button.
2. Then press the Cursor Right Button or Outer Menu Ring to the right to move the Icon to the next adjustment point.

Note: This adjustment is highly interactive. Therefore it is advised to follow the pattern programmed into the set by pressing the Outer Menu Ring toward the right. However when performing minor touch up adjustments, it is possible to move the Icon up, down, right or left by pressing the Outer Menu Ring in that direction, until the Icon is positioned in the area requiring adjustment.

1. Follow the pattern and make corrections until the Convergence Crosshatch pattern matches the pattern on the screen template.
2. Remove the screen template.

8.11.3 Red Convergence

Red Convergence

1. Select "Red to Green" in the Convergence Selection menu.
2. Adjust the Red crosshatch pattern onto the green pattern in the same manner that the Green was adjusted to the template.

8.11.4 Blue Convergence

Blue Convergence

Select "Blue to Green" in the Convergence Selection menu. Adjust the Blue crosshatch pattern onto the green pattern in the same manner that the Red was adjusted to the Green.

8.11.5 Focus/White balance

Focus/White Balance

1. Set the Picture, Sharpness, Brightness and Tint (NTSC) to their midrange position.
2. Set Color to minimum.

8.11.6 Electrical Focus

Electrical Focus

1. Connect a crosshatch pattern to the antenna input.
2. Cover the screen with a dark cloth.
3. Cover two of the CRT's Output Lenses with an 18-cm x 18-cm piece of cardboard.
4. Observe the magnified reflections of the individual picture tubes on the backside of the viewing screen.
5. Adjust the respective Focus control (top row of the HV/Focus distribution block) for optimum mid-screen focus.
6. Confirm the correct focus by viewing the screen from the front of the unit.
7. Repeat steps 2 through 6 to focus the remaining two CRT's.

8.11.7 Mechanical Focus

Mechanical Focus

1. As with Electrical Focus, connect a crosshatch pattern to the antenna input.
2. Cover the screen with a dark cloth.

3. Cover two of the CRT's Output Lenses with an 18-cm x 18-cm piece of cardboard.
4. Carefully loosen the lens retaining wing nuts on the CRT output lens.
5. Move the Wing nut post in the slot to obtain optimum focus while viewing the screen from the rear of the set.

6. Tighten the wing nut.
7. Confirm correct focus by viewing the screen from the front of the unit.
8. Repeat steps 2 through 7 for the two remaining Output Lenses.

9. Circuit description


For the circuit description see Training Manual MG5.1E (3122 785 10053)

9.1 List of abbreviations

uC	Micro Computer	INT-L	Internal audio L
2CS	Two Carrier System stereo	INT-R	Internal audio R
2fcs	2 x colour subcarrier frequency	L-in	Left audio in
3,58	Colour subcarrier frequency (3.58 MHz)	L-out	Left audio out
4,43	Colour subcarrier frequency (4.43 MHz)	LED	Light Emitting Diode
AF	Sound IF signal from sound IF detector	Line drive	Line drive
AFC	Automatic Frequency Control	Line prot	Line protection signal
AFT	Automatic Fine Tuning	LOT	Line Output Transformer
AGC	Automatic Gain Control	LSP	Large Signal Panel
Aquadag	Earth from the CRT-tube	MHz	Mega Hertz
Audio/CVBS	Sound IF signal (Intercarrier sound)	MPX	Multiplexed BTSC signal
AV	Audio/Video	NICAM	Near Instantaneous Companding Audio Multiplex
AVS	Automatic Voltage Switching	NIL	Non Interlace
BCI	Beam Current Info	NILS	Non Interlace Signal
BG/I/DK/MN	IF Sound systems BG/I/DK/MN	NTSC	National Television System Committee
BL	Beam Current limitation	OSD	On Screen Display (in diagrams Display On Screen)
BS	Broadcasting satellite	PAL	Phase Alternating Line
BTSC	Broadcast Television System Committee (L-R and L+R)	PIP	Picture In Picture
C	Chrominance	PLL	Phase Locked Loop
C-out	Chroma out	POR	Power On Reset
CRT	Picture Tube	PP	Personal Preference
CTI	Colour Transient Improvement	Prot	Protection signal
CVBS	Colour Video Blanking Sync	PTC	Positive Temperature Coefficient (increasing resistance at increasing temperature)
CVBS-PIP	CVBS for PIP panel	PWM	Pulse Width Modulation
CVBS-Y	CVBS for luminance signal	QPSK	Quadrature Phase Shift Keying
DAC	Digital Analogue Converter	R-in	Right audio in
DC	Direct Current	R-out	Right audio out
East/west	East/west Correction signal	RAM	Random Access Memory
EEPROM	Electrical Erasable and Programmable Read Only Memory	RC5	Remote Control 5 system
EHT	Extra High Tension (25kV)	REF	Reference
EN	Enable	RGB	Red Green Blue
EXT	External inputs (audio and video cinches)	ROM	Read Only Memory
FB	Fast blanking	SAP	Second Audio Program
Flyback	Flyback signal	SAP_AVAIL	Status signal; pulled "low" by BTSC panel, SAP is available
FM	Frequency Modulation	SAW	Surface Acoustic Wave
Frame drive	Frame drive	SC	Sand Castle signal
Geometry	Geometry signal for 60Hz frame	SCL	Clock of the I2C-bus
H-shift	Horizontal-shift	SDA	Data if the I2C-bus
Heater	Heater current for filament	SDM	Service Default Mode
HOR	Horizontal	SECAM	Sequential Couleur a Memoire
HUE	Tint adjustment for NTSC system	Sif	Sound IF signal front end tuner
I/O-expander	Input/Output expander	SM	Service Mode
I-deg	Degaussing current	SMPS	Switched Mode Power Supply (frequency and duty cycle controlled)
I2C	Inter IC data bus	SQ	Squeeze mode
IDENT	Identification signal from synchronisation IC	SSP	Small Signal Panel
IF	Intermediate Frequency	Std-by	Stand by
Int-CVBS	Internal CVBS signal	SVHS	Super Video Home System
		SYNC	Synchronisation
		TINT	PWM control signal for hue control
		TP1	Test Point 1
		TRANS_ID	Status signal
		TXT	Teletext
		U	R-Y

V	B-Y	4:3	Aspect Ratio of Picture Tube (4 equals height, 3 equals width)
VERT	Vertical		
Vfb	Vertical feedback voltage	16:9	Aspect Ratio of Picture Tube (16 equals height, 9 equals width)
VG1	VG1 Voltage		
VG2	VG2 Voltage	14:9	Aspect Ratio of Picture Tube (14 equals height, 9 equals width)
Vref	V-Reference		
Y	Luminance part of the video signal		

9.2 Optical assembly replacement

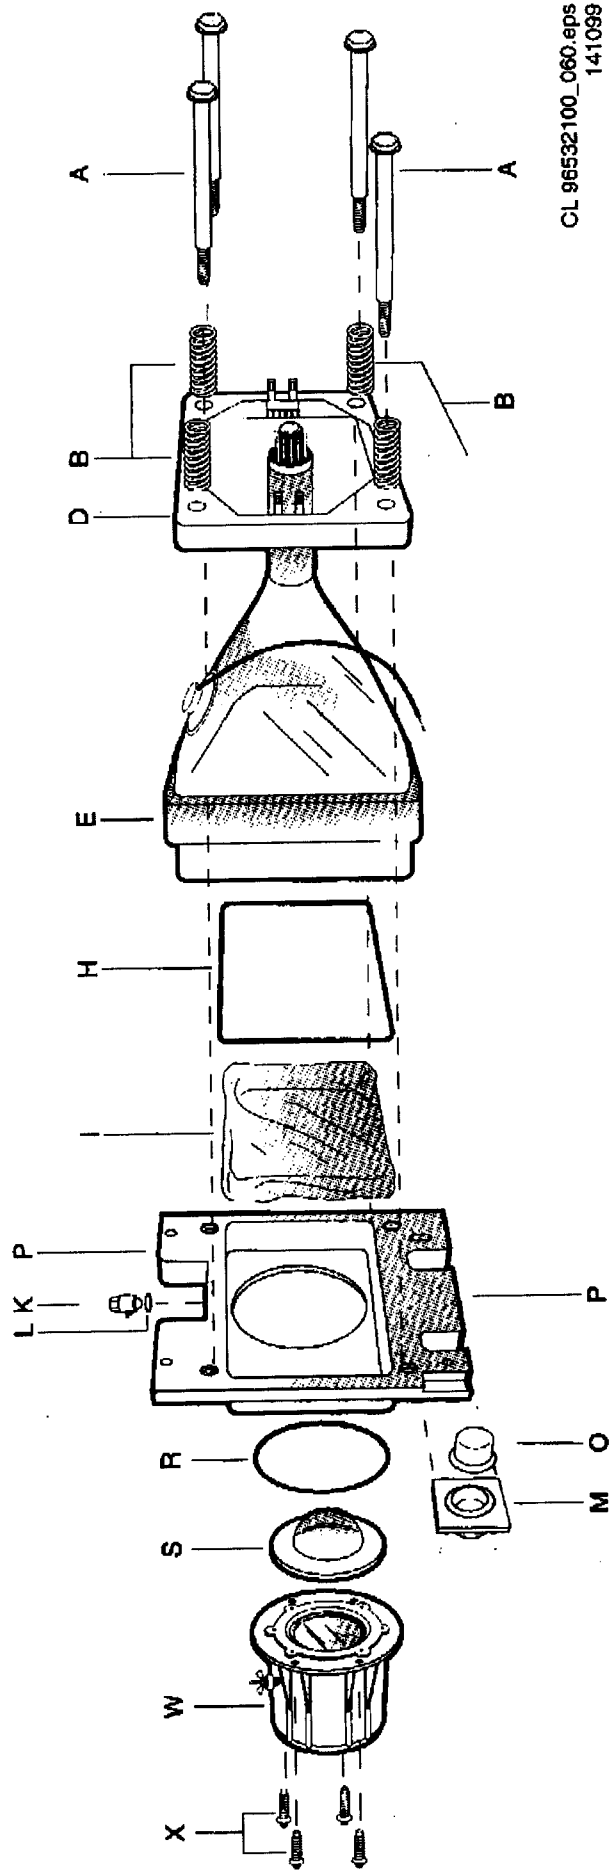

CL 96532100_060.eps
141099

Figure 9-1

For optical assembly replacement parts see Spare parts list at the end of this manual.

5316 4822 157 71736 10μH 5%
5317 4822 157 71736 10μH 5%



6001 4822 130 83147 DF06M
6103 4835 130 37491 MUR860
6104 4822 130 30842 BAV21
6204 4822 130 42488 BYD33D
6205 4822 209 81397 TL431CLPST
6207 4822 130 42488 BYD33D
6231 4822 130 32245 BYV10-40
6301 4822 130 42606 BYD33J
6302 5322 130 31938 BYV27-200
6303 5322 130 31938 BYV27-200
6304 4822 130 42488 BYD33D
6306 4822 130 10218 BY229X-800
6307 4822 130 10218 BY229X-800
6308 4822 130 10218 BY229X-800
6309 5322 130 31938 BYV27-200
6311 4822 130 42488 BYD33D
6312 4822 130 83865 SB360
6313 4822 130 30621 1N4148
6314 4822 130 32896 BYD33M
6315 4822 130 32896 BYD33M



7000 4822 130 40959 BC547B
7102 4822 209 16121 L4981A
7104 4822 130 10745 STW15NA50
7204 4822 130 44283 BC636
7205 4822 130 40959 BC547B
7206 4822 130 91451 CQY80NG
7211 4822 209 17276 TOP221P
7213 4822 130 91451 CQY80NG
7214 4822 130 40959 BC547B
7300 4822 130 40959 BC547B
7302 4822 209 15684 MC44603AP
7303 4822 130 91451 CQY80NG
7304 4822 209 81397 TL431CLPST
7305 4822 209 11079 MC79M05CT
7306 4822 209 90281 L78M08CP
7307 4822 209 60059 NJM2360D
7309 4822 130 40959 BC547B

High Voltage Scan Module

Various

3135 011 02331 Clip for transistor
3135 011 02621 Spring
1501 2422 025 16153 4P
1502 2422 025 16153 4P
1503 2422 025 16153 4P
1504 2422 025 14409 3P
1505 4822 265 11507 4P
1506 4822 267 10973 1P
1507 4822 267 10888 5P male
1508 4822 267 31673 3P male v 2.5
1509 2422 025 15516 9P
1511 4822 267 10933 7P male
1512 4822 267 10889 6P male
1582 4822 265 11507 4P
1590 3121 218 60362 EHT res/cap
1800 4822 071 51002 Fuse 1A
1801 4822 071 51002 Fuse 1A
LEAD 3135 010 01351 Highvoltage cable



2452 2020 012 92648 2.2μF 20% 50V
2501 4822 121 51252 470nF 5% 63V
2503 5322 122 32052 680pF 10% 100V
2511 5322 121 42386 100nF 5% 63V
2557 4822 124 40255 100μF 20% 63V
2558 2222 347 90235 68nF 10% 100V
2559 5322 121 42386 100nF 5% 63V
2564 5322 126 10511 1nF 5% 50V
2565 5322 121 42386 100nF 5% 63V
2567 5322 122 32268 470pF 10% 50V
2570 5322 122 32268 470pF 10% 50V
2571 5322 126 10511 1nF 5% 50V
2573 5322 122 32311 470pF 10% 100V
2574 5322 121 42498 680nF 5% 63V
2586 5322 121 42386 100nF 5% 63V
2608 4822 126 13185 680pF 10% 500V

2800 4822 124 21913 1μF 20% 63V
2801 5322 121 42386 100nF 5% 63V
2804 4822 124 40248 10μF 20% 63V
2805 4822 121 51473 470nF 20% 63V
2806 4822 122 31175 1nF 10% 500V
2807 4822 126 13838 100nF 50V 20%
2808 5322 122 31863 330pF 5% 63V
2809 4822 121 51473 470nF 20% 63V
2810 2020 024 90586 330μF 20% 200V
2811 4822 126 13864 330pF 10% 2KV
2814 2020 024 90587 68μF 20% 400V
2815 4822 122 31175 1nF 10% 500V
2817 2222 375 90141 3.3nF 5% 1.6KV
2818 4822 126 11503 820pF 10% 2KV
2819 4822 121 10551 27nF 5% 630V
2820 4822 121 42035 4.7μF 10% 100V
2822 2222 479 90022 430nF 5% 250V
2824 2020 558 90555 470pF 10% 1KV
2825 2020 558 90555 470pF 10% 1KV
2826 4822 124 81144 1000μF 16V
2827 4822 124 81144 1000μF 16V
2836 2020 558 90557 1nF 10% 1KV
2837 4822 124 40248 10μF 20% 63V
2838 2020 558 90557 1nF 10% 1KV
2839 2022 333 00119 10nF 5% 1.6KV
2850 2020 558 90555 470pF 10% 1KV
2851 4822 124 40255 100μF 20% 63V
2898 2020 021 91429 1500μF 20% 35V
2899 5322 121 44356 4.7nF 5% 2KV
2900 4822 124 80144 220μF 20% 25V
2901 5322 122 31865 1.5nF 10% 63V
2902 5322 122 31647 1nF 10% 63V
2903 4822 124 21913 1μF 20% 63V
2904 4822 122 33177 10nF 20% 50V
2905 4822 126 14585 100nF 10% 50V
2906 4822 122 33177 10nF 20% 50V
2907 4822 121 51305 15nF 10% 50V
2908 4822 126 13486 15pF 2% 63V
2910 4822 121 51473 470nF 20% 63V
2911 4822 124 40769 4.7μF 20% 100V
2912 4822 124 40248 10μF 20% 63V
2913 4822 124 81144 1000μF 16V
2914 2020 024 90586 330μF 20% 200V
2915 2222 375 90143 3.9nF 5% 1.6KV
2916 4822 121 70642 6.8nF 1600V
2917 4822 121 51473 470nF 20% 63V
2918 4822 124 22652 2.2μF 20% 50V
2919 5322 121 42386 100nF 5% 63V
2920 4822 124 40769 4.7μF 20% 100V
2921 4822 124 80144 220μF 20% 25V
2922 4822 124 11767 470μF 20% 25V
2923 5322 122 31647 1nF 10% 63V
2924 4822 126 11503 820pF 10% 2KV
2926 4822 124 40248 10μF 20% 63V
2927 4822 124 21913 1μF 20% 63V
2928 4822 121 70619 22nF 10% 50V
2929 4822 126 13597 330pF 10% 500V
2930 4822 122 31173 220pF 10% 500V
2932 4822 126 13838 100nF 20% 50V
2933 4822 126 13597 330pF 10% 500V



3452 4822 051 20478 4Ω 5% 0.1W
3453 4822 051 20478 4Ω 5% 0.1W
3454 4822 051 20478 4Ω 5% 0.1W
3455 4822 051 20478 4Ω 5% 0.1W
3456 4822 051 20471 470Ω 5% 0.1W
3457 4822 117 11449 2k2 1% 0.1W
3458 4822 117 11449 2k2 1% 0.1W
3500 4822 116 52283 4k7 5% 0.5W
3501 4822 050 21003 10k 1% 0.6W
3503 4822 051 20124 120k 5% 0.1W
3504 4822 051 20124 120k 5% 0.1W
3505 4822 116 83872 220Ω 5% 0.5W
3506 4822 051 20124 120k 5% 0.1W
3507 4822 116 52269 3k3 5% 0.5W
3508 4822 116 52276 3k9 5% 0.5W
3510 4822 116 52285 470k 5% 0.5W
3511 4822 116 83884 47k 5% 0.5W
3512 4822 050 21003 10k 1% 0.6W
3513 4822 116 83882 39k 5% 0.5W
3514 4822 050 21003 10k 1% 0.6W
3550 2120 108 92618 1k8 1% 0805
3551 2120 108 92618 1k8 1% 0805
3558 4822 116 52175 100Ω 5% 0.5W
3562 4822 053 10478 4Ω 5% 1W
3563 4822 053 10221 220Ω 5% 1W
3565 4822 053 10221 220Ω 5% 1W
3571 4822 117 11383 12k 1% 0.1W

3572 4822 116 52175 100Ω 5% 0.5W
3573 4822 116 52175 100Ω 5% 0.5W
3581 4822 117 11449 2k2 1% 0.1W
3584 4822 117 13628 1Ω 5% 3W
3585 4822 050 21003 10k 1% 0.6W
3590 4822 051 20393 39k 5% 0.1W
3591 4822 117 11449 2k2 1% 0.1W
3592 4822 117 13577 330Ω 1% 1.25W 0805
3593 4822 051 10102 1k 2% 0.25W
3594 4822 116 52175 100Ω 5% 0.5W
3595 4822 050 23303 33k 1% 0.6W
3800 2120 105 90222 1k5 1% 1W
3801 4822 116 52264 27k 5% 0.5W
3802 4822 050 26803 68k 1% 0.6W
3803 4822 052 10101 100Ω 5% 0.33W
3805 4822 053 10101 100Ω 5% 1W
3806 4822 053 10102 1k 5% 1W
3807 4822 116 52219 330Ω 5% 0.5W
3808 3198 012 14720 4.7k 5% 1W
3809 4822 116 52219 330Ω 5% 0.5W
3810 4822 117 12473 4k7 5% 5W
3811 4822 117 12473 4k7 5% 5W
3812 4822 116 52245 150k 5% 0.5W
3813 2120 106 90504 1Ω 5% 2W
3814 4822 051 20339 33Ω 5% 0.1W
3815 4822 116 81832 0.27Ω 5% 0.5W
3816 4822 050 26803 68k 1% 0.6W
3817 4822 116 83883 470Ω 5% 0.5W
3821 4822 053 10471 470Ω 5% 1W
3822 4822 053 10221 220Ω 5% 1W
3823 4822 050 26803 68k 1% 0.6W
3824 4822 053 10221 220Ω 5% 1W
3825 4822 050 26803 68k 1% 0.6W
3826 4822 053 10221 220Ω 5% 1W
3828 4822 050 26803 68k 1% 0.6W
3829 4822 116 52182 15Ω 5% 0.5W
3830 4822 053 10471 470Ω 5% 1W
3831 4822 051 20683 68k 5% 0.1W
3832 4822 051 20332 3k3 5% 0.1W
3833 4822 051 20101 100Ω 5% 0.1W
3834 4822 052 10108 1Ω 5% 0.33W
3835 4822 117 12955 2k7 1% 0.1W 0805
3836 4822 116 83876 270Ω 5% 0.5W
3837 4822 116 52238 12k 5% 0.5W
3838 4822 116 52249 1k8 5% 0.5W
3839 2322 195 63304 300k 5% 3W
3840 4822 117 10118 1M 5% 0.5W
3841 3198 012 14720 4.7k 5% 1W
3865 2120 106 90282 0.47Ω 5% 1W
3866 4822 116 52251 18k 5% 0.5W
3867 4822 052 10108 1Ω 5% 0.33W
3890 4822 051 20101 100Ω 5% 0.1W
3900 4822 053 10221 220Ω 5% 1W
3901 4822 100 12157 10k 30%
3902 4822 116 52238 12k 5% 0.5W
3904 4822 050 11002 1k 1% 0.4W
3905 4822 051 20124 120k 5% 0.1W
3906 4822 116 52243 1k5 5% 0.5W
3907 4822 116 52289 5k6 5% 0.5W
3908 4822 116 52243 1k5 5% 0.5W
3909 4822 116 52213 180Ω 5% 0.5W
3910 4822 050 21003 10k 1% 0.6W
3911 4822 116 52182 15Ω 5% 0.5W
3912 4822 050 21003 10k 1% 0.6W
3913 4822 116 52283 4k7 5% 0.5W
3914 4822 117 10833 10k 1% 0.1W
3915 4822 116 52231 820Ω 5% 0.5W
3916 4822 051 10102 1k 2% 0.25W
3917 4822 117 11635 1k 10% 0.5W
3918 4822 116 52244 15k 5% 0.5W
3919 4822 116 52243 1k5 5% 0.5W
3920 4822 050 11002 1k 1% 0.4W
3921 4822 116 52251 18k 5% 0.5W
3922 4822 116 52243 1k5 5% 0.5W
3923 3198 012 16820 6.8k 5% 1W
3924 4822 116 52213 180Ω 5% 0.5W
3926 4822 116 52175 100Ω 5% 0.5W
3927 4822 050 21003 10k 1% 0.6W
3928 4822 116 52249 1k8 5% 0.5W
3932 4822 116 52289 5k6 5% 0.5W
3933 4822 051 20105 1M 5% 0.1W
3934 4822 116 81832 0.27Ω 5% 0.5W
3935 4822 116 52219 330Ω 5% 0.5W
3938 2122 254 00476 30Ω 10% 15W
3939 4822 116 52256 2k2 5% 0.5W
3940 4822 050 21503 15k 1% 0.6W
3941 4822 116 52291 56k 5% 0.5W
3942 4822 116 52234 100k 5% 0.5W
3943 4822 100 12155 2k2 30%
3944 4822 116 52206 120Ω 5% 0.5W
3945 4822 051 20684 680k 5% 0.1W

1874 4822 267 10691 1P yellow

-II-

2701 4822 121 70162 10nF 5% 400V
 2702 4822 121 70162 10nF 5% 400V
 2705 4822 126 14053 1nF 10% 2KV
 2717 4822 124 12386 10μF 350V
 2720 4822 124 40248 10μF 20% 63V
 2721 5322 121 42386 100nF 5% 63V
 2722 2020 557 90147 560pF 10% 500V
 2750 4822 126 13499 220pF 5% 50V
 2751 2020 300 90647 1.2nF 5% 100V
 2752 2020 558 90585 1nF 20% 1KV

-□-

3701 2120 105 92799 0.27Ω 5% 0.5W
 3703 4822 116 52175 100Ω 5% 0.5W
 3710 4822 117 12516 680Ω 2% 0.5W
 3716 2120 103 90057 100Ω 20% 0.5W
 3718 2120 103 07223 22k 20% 0.5W
 3719 2120 106 90531 5.6Ω 5% 0.5W
 3720 2120 106 90531 5.6Ω 5% 0.5W
 3730 2322 257 41332 3.3k 5% 5W
 3731 4822 117 12618 2k2 5% 5W
 3733 4822 053 20106 10M 5% 0.25W
 3735 4822 116 52175 100Ω 5% 0.5W
 3737 2120 103 11272 2.7k 5% 0.25W
 3738 4822 116 52234 100k 5% 0.5W
 3740 4822 050 11002 1k 1% 0.4W
 3742 4822 050 21002 1k 1% 0.6W
 3743 4822 050 22201 220Ω 1% 0.6W
 3745 4822 050 26809 68Ω 1% 0.6W
 3750 4822 116 52175 100Ω 5% 0.5W
 3751 4822 050 21009 10Ω 1% 0.6W
 3752 2120 103 90012 10k 10% 0.25W
 3753 2120 101 90213 43Ω 5% 0.25W
 3755 4822 050 24709 47Ω 1% 0.6W
 3756 4822 050 26809 68Ω 1% 0.6W

5701 4822 157 52333 100μH
 5702 4822 157 50965 15μH
 5703 4822 157 11517 10μH 5%
 5704 4822 157 11517 10μH 5%
 5705 4822 157 50965 15μH

-II-

6701 9322 019 69683 MUR140
 6702 9331 668 30133 BZX79-B6V2
 6705 9322 019 69683 MUR140
 6706 9322 019 69683 MUR140

-□-

7701 0061 060 00003 2SC3790E
 7702 9322 122 61686 SPS7350
 7703 9322 103 08678 2SC2383-0
 7705 9334 311 90126 MPSA92

CRT Panel Green

Various

1000 4822 267 10691 1P yellow
 1001 4822 267 10691 1P yellow
 1801A 2422 500 80051 10P
 1802A 4822 252 60151 Surge protect DSP-501N-A21F
 1881 4822 267 10541 10P
 1882 4822 267 10542 4P
 1883 4822 267 10541 10P
 1884 4822 267 10541 10P
 1886 4822 265 11551 Push-on terminal
 1887 4822 265 11551 Push-on terminal

-II-

2801 4822 121 70162 10nF 5% 400V
 2805A 4822 126 14053 1nF 10% 2KV
 2807 4822 121 70162 10nF 5% 400V
 2817 4822 124 12386 10μF 350V
 2820 4822 124 40248 10μF 20% 63V

2821 5322 121 42386 100nF 5% 63V
 2822 2020 557 90147 560pF 10% 500V
 2850 4822 126 13499 220pF 5% 50V
 2851 2020 300 90647 1.2nF 5% 100V
 2852 2020 558 90585 1nF 20% 1KV

-□-

3801A 2120 105 92799 0.27Ω 5% 0.5W
 3803 4822 116 52175 100Ω 5% 0.5W
 3810A 4822 117 12516 680Ω 2% 0.5W
 3816 2120 103 90057 100Ω 20% 0.5W
 3818A 2120 103 07223 22k 20% 0.5W
 3819A 2120 106 90531 5.6Ω 5% 0.5W
 3820A 2120 106 90531 5.6Ω 5% 0.5W
 3825 4822 116 83874 220k 5% 0.5W
 3826 4822 116 52234 100k 5% 0.5W
 3830A 2322 257 41332 3.3k 5% 5W
 3831A 4822 117 12618 2k2 5% 5W
 3833 4822 053 20106 10M 5% 0.25W
 3835 4822 116 52175 100Ω 5% 0.5W
 3837 2120 103 11272 2.7k 5% 0.25W
 3838 4822 116 52234 100k 5% 0.5W
 3840 4822 050 11002 1k 1% 0.4W
 3842 4822 050 21002 1k 1% 0.6W
 3843 4822 050 22201 220Ω 1% 0.6W
 3845 4822 050 26809 68Ω 1% 0.6W
 3850 4822 116 52175 100Ω 5% 0.5W
 3851 4822 050 21009 10Ω 1% 0.6W
 3852 2120 103 90012 10k 10% 0.25W
 3853 2120 101 90213 43Ω 5% 0.5W
 3855 4822 050 24709 47Ω 1% 0.6W
 3856 4822 050 26809 68Ω 1% 0.6W
 3857 4822 050 21003 10k 1% 0.6W

5801 4822 157 52333 100μH
 5802 4822 157 50965 15μH
 5803 4822 157 11517 10μH 5%
 5804 4822 157 11517 10μH 5%
 5805 4822 157 50965 15μH

-II-

6802 9331 668 30133 BZX79-B6V2
 6805 9322 019 69683 MUR140
 6806 4822 130 34441 BZX79-B22

-□-

7801 0061 060 00003 2SC3790E
 7802 9322 122 61686 SPS7350
 7803 9322 103 08678 2SC2383-0
 7805 9334 311 90126 MPSA92

CRT Panel Blue

Various

1000 4822 267 10691 1P yellow
 1894 4822 267 10541 10P
 1896 4822 265 11551 Push-on terminal
 1897 4822 267 10691 1P yellow
 1901A 2422 500 80051 10P
 1902A 4822 252 60151 Surge protect DSP-501N-A21F

-II-

2901 4822 121 70162 10nF 5% 400V
 2902 4822 121 70162 10nF 5% 400V
 2905A 4822 126 14053 1nF 10% 2KV
 2917 4822 124 12386 10μF 350V
 2920 4822 124 40248 10μF 20% 63V
 2921 5322 121 42386 100nF 5% 63V
 2922 2020 557 90147 560pF 10% 500V
 2950 4822 126 13499 220pF 5% 50V
 2951 2020 300 90647 1.2nF 5% 100V
 2952 2020 558 90585 1nF 20% 1KV

-□-

3901A 2120 105 92799 0.27Ω 5% 0.5W
 3903 4822 116 52175 100Ω 5% 0.5W
 3910A 4822 117 12516 680Ω 2% 0.5W

3916 2120 103 90057 100Ω 20% 0.5W
 3918A 2120 103 07223 22k 20% 0.5W
 3919A 2120 106 90531 5.6Ω 5% 0.5W
 3920A 2120 106 90531 5.6Ω 5% 0.5W
 3930A 2322 257 41332 3.3k 5% 5W
 3931A 4822 117 12618 2k2 5% 5W
 3933 4822 053 20106 10M 5% 0.25W
 3935 4822 116 52175 100Ω 5% 0.5W
 3937 2120 103 11272 2.7k 5% 0.25W
 3938 4822 116 52234 100k 5% 0.5W
 3940 4822 050 11002 1k 1% 0.4W
 3942 4822 050 21002 1k 1% 0.6W
 3943 4822 050 22201 220Ω 1% 0.6W
 3945 4822 050 26809 68Ω 1% 0.6W
 3950 4822 116 52175 100Ω 5% 0.5W
 3951 4822 050 21009 10Ω 1% 0.6W
 3952 2120 103 90012 10k 10% 0.25W
 3953 2120 101 90213 43Ω 5% 0.5W
 3955 4822 050 24709 47Ω 1% 0.6W
 3956 4822 050 26809 68Ω 1% 0.6W

5901 4822 157 52333 100μH
 5902 4822 157 50965 15μH
 5903 4822 157 11517 10μH 5%
 5904 4822 157 11517 10μH 5%
 5905 4822 157 50965 15μH

-II-

6901 9322 019 69683 MUR140
 6902 9331 668 30133 BZX79-B6V2
 6905 9322 019 69683 MUR140
 6906 9322 019 69683 MUR140

-□-

7901 0061 060 00003 2SC3790E
 7902 9322 122 61686 SPS7350
 7903 9322 103 08678 2SC2383-0
 7905 9334 311 90126 MPSA92

Audio Amplifier Panel

Various

1201 2422 086 10889 Fuse 4A
 1302 3135 011 03221 IC clip
 1304 3135 011 02481 Bracket
 1400 2422 025 15875 4P
 1401 4822 267 10537 5P
 1403 4822 492 62076 Clip for transistors
 1418 4822 267 10542 4P
 1449 2422 025 15832 5P

-II-

2201 4822 124 21913 1μF 20% 63V
 2202 4822 122 30043 10nF 80% 63V
 2203 4822 122 30043 10nF 80% 63V
 2208 4822 124 40248 10μF 20% 63V
 2301 4822 122 10182 100pF 5% 50V
 2302 4822 122 10182 100pF 5% 50V
 2303 5322 121 42386 100nF 5% 63V
 2304 5322 121 42386 100nF 5% 63V
 2305 2020 012 92615 100μF 20% 63V
 2306 4822 124 40433 47μF 20% 25V
 2307 4822 124 40433 47μF 20% 25V
 2308 4822 124 40433 47μF 20% 25V
 2309 3198 026 51020 1000μF 20% 50V
 2310 3198 026 51020 1000μF 20% 50V
 2311 4822 124 40433 47μF 20% 25V
 2312 4822 124 40433 47μF 20% 25V
 2313 5322 121 42386 100nF 5% 63V
 2314 5322 121 42386 100nF 5% 63V
 2401 2020 558 90557 1nF 10% 1KV
 2402 4822 124 80532 220μF 20% 400V
 2403 2020 558 90555 470pF 10% 1KV
 2404 4822 124 40248 10μF 20% 63V
 2405 5322 122 32331 1nF 10% 100V
 2406 4822 122 30043 10nF 80% 63V
 2407 4822 121 10863 4700pF 2% 63V
 2408 5322 122 32331 1nF 10% 100V
 2409 4822 122 31211 100pF 10% 500V
 2410 4822 124 40207 100μF 20% 25V
 2411 4822 124 12423 4700μF 20% 63V

