


Passive Probes PM8927A(L) PM8927AS

Instruction Manual

9499 443 03111

821030/2

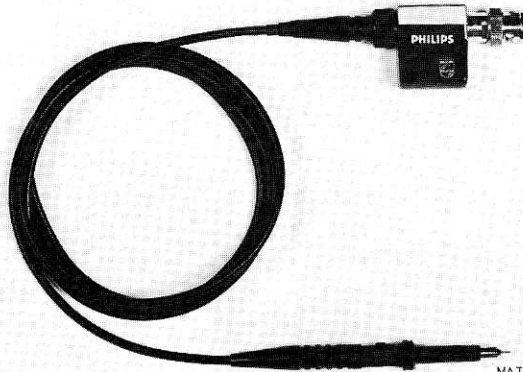

PHILIPS

CONTENTS

Page

1. INTRODUCTION	3
2. SPECIFICATIONS	3
3. ADJUSTMENTS	6
3.1. Matching the probe to your oscilloscope	6
3.2. Adjusting the h.f. step response	6
4. DISMANTLING	7
4.1. Dismantling the probe	7
4.2. Dismantling the compensation box	7
5. REPLACING PARTS	8
5.1. Assembling the probe	8
5.2. Replacing the cable assembly	8
5.3. Replacing the BNC	8
5.4. Replacing the probe tip	8
6. PARTS LIST	9
6.1. Mechanical parts including standard accessories	9
6.2. Electrical parts	9
7. SUPPLEMENT FOR THE PM8927AS PROBE	11
7.1. Introduction	11
7.2. Specifications adjustments and dismantling	11
7.3. Replacing the range indication parts	12
7.4. Parts lists	12

FIGURES

1. Parallel input resistance (R_p) and reactance (X_p) vs frequency for probes with normal and long cables	4
2. Derating of maximum input voltage at higher frequencies for probes with normal and long cables	4
3. Useful bandwidth versus frequency	4
4. Over-compensation (adjustment C2)	6
5. Correct compensation (adjustment C2)	6
6. Under-compensation (adjustment C2)	6
7. Preset potentiometers correctly adjusted	6
8. Rounding due to incorrectly adjusted potentiometers	6
9. Overshoot due to incorrectly adjusted potentiometers	6
10. Dismantling	7
11. Accessories with item numbers	10
12. Printed-wiring board showing adjusting elements; circuit diagram	10
13. PM8927AS	11
14. Range indication	12

1. INTRODUCTION

The PM8927A is a 10x attenuator probe, designed for real time oscilloscopes up to 100MHz, having a BNC input jack and an input resistance of $1M\Omega$.

The PM8927AL is a similar probe with a cable length of 2,5m and a bandwidth of 75MHz.

At delivery the PM8927A(L) has been adjusted to an oscilloscope with an input capacitance of 25pF.

2. SPECIFICATIONS

Electrical

Attenuation		$10x \pm 2\%$ (Oscilloscope input $1M\Omega$)
Input resistance d.c. a.c.		$10M\Omega \pm 2\%$ (Oscilloscope input $1M\Omega$) See curve Fig. 1.
Input capacitance d.c. and l.f. PM8927A		$11pF \pm 1pF$ (Oscilloscope input $1M\Omega \pm 5\%$ paralleled by $25pF \pm 5pF$).
	PM8927AL	$14pF \pm 1pF$
Input reactance h.f.		See curve Fig. 1.
Compensation range		14 to 40pF (input capacitance of oscilloscope).
Useful bandwidth		See Fig. 3.
Max. rated input voltage		500V (d.c. + a.c. _{peak}), derating with frequency. See Fig. 2. Oscilloscope input $1M\Omega$ and voltage applied between probe tip and earthed part of probe body. Test voltage 1500V _{d.c.} during 1s, at a temperature between 15 and 25°C, a rel. hum. of 80% at maximum and at sea level.
		Same function as 0 position of input coupling switch on oscilloscope.



Environmental

Probe operates within specifications over the following ranges:

Temperature		$-25^{\circ}C$ to $+70^{\circ}C$.
Altitude		Up to 5000 metres (15000 feet).
Other environmental data		Same as for any PHILIPS oscilloscope the probe is used with

Mechanical

Dimensions		Probe body 103mm x 11mm dia (max.). Cable length 1500mm or 2500mm Correction box 55 x 30 x 15mm incl. BNC
Mass		Incl. standard accessories 140g.

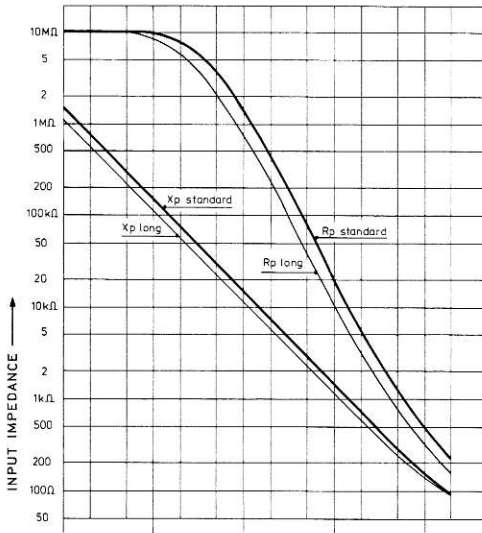


Fig. 1. Input impedance vs Frequency

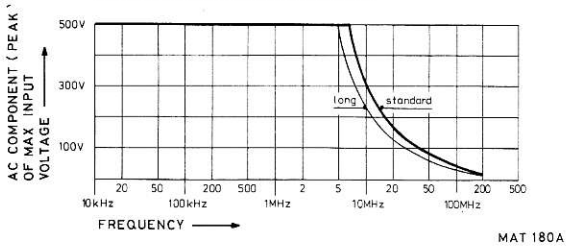


Fig. 2. AC component (peak) of max. input voltage versus Frequency

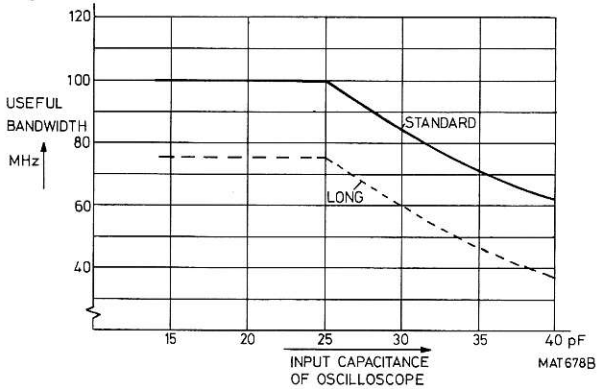


Fig. 3. Useful bandwidth versus input capacitance of oscilloscope

3. ADJUSTMENTS

3.1. Matching the probe to your oscilloscope

The measuring probe has been adjusted and checked by the manufacturer. However, to match the probe to your oscilloscope, the following manipulation is necessary.

Connect the measuring pin to the CAL socket of the oscilloscope.

A trimmer C2 (Fig. 10.) can be adjusted through a hole in the compensation box to obtain optimum square-wave response. See Fig. 4, 5 and 6.

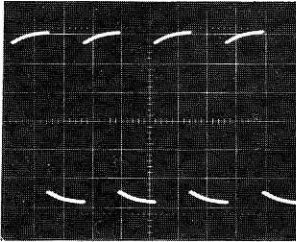


Fig. 4. Over-compensation
(adjustment C2)

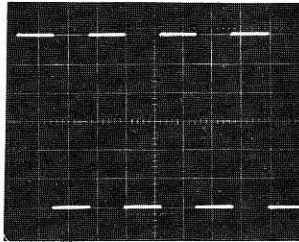


Fig. 5. Correct compensation
(adjustment C2)

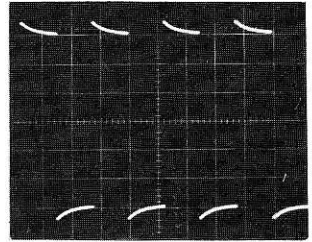


Fig. 6. Under-compensation
(adjustment C2)

3.2. Adjusting the h.f. step response

The h.f. step response correction network has been adjusted by the manufacturer to match an average oscilloscope input. For optimum pulse response, however, the probe can be adjusted to match your particular oscilloscope. Later readjustment is only necessary if the probe is to be used with a different type of oscilloscope, or after replacement of an electrical component.

For the adjustment, proceed as follows:

Connect the probe to a fast pulse generator (rise time not exceeding 1ns) which is terminated by its characteristics impedance. Dismantle the compensation box as described in section 4.2. Set the generator to 100kHz. Adjust R2 and R3 alternatively to obtain a display as shown in Fig. 7.

It is important that the leading edge is as steep, and the top is as flat, as possible. Incorrect settings of R2 and R3 give rise to pulse distortions as shown in Fig. 8 and 9.

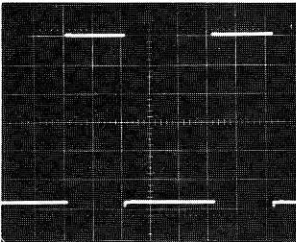


Fig. 7. Preset potentiometers
correctly adjusted

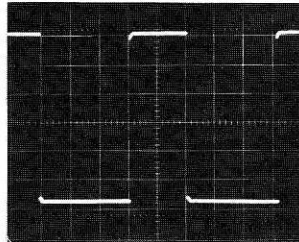


Fig. 8. Rounding due to incorrectly
adjusted potentiometers

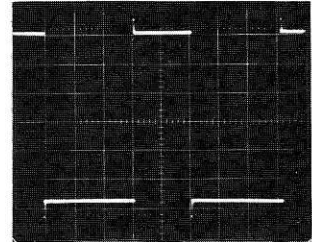


Fig. 9. Overshoot due to incorrectly
adjusted potentiometers

4. DISMANTLING

4.1. Dismantling the probe (see Fig. 10.)

The front part 11 of the probe can be screwed from the rear part 13. Item 11 can then be slid from 12 and 13. The RC combination 12 is soldered to 13. For replacement of 12 refer to section 5.1.

4.2. Dismantling the compensation box (see Fig. 10.)

Unscrew the ribbed collar of the compensation box to the cable. The case 14 can then be slid of the compensation box sideways. The electrical components on the printed-wiring board are then accessible.

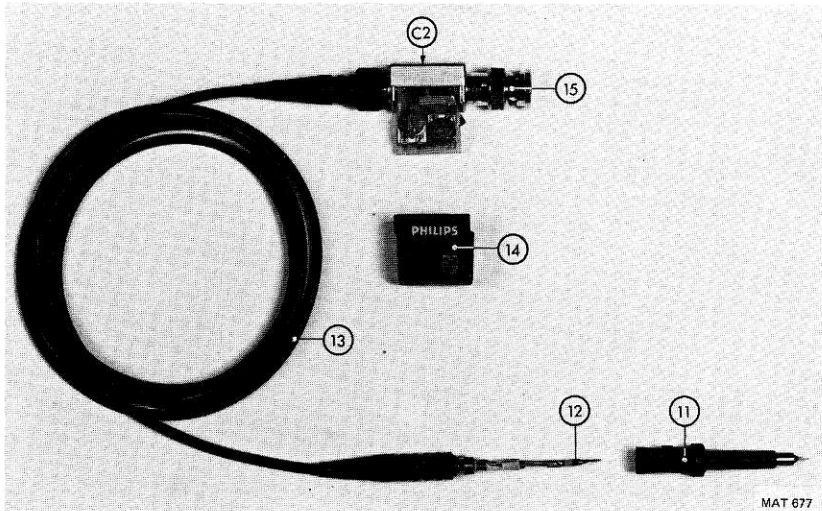


Fig. 10. Dismantling

5. REPLACING PARTS**5.1. Assembling the probe**

A new RC network is slid over the cable nipple after which the cable core is soldered on to the resistor wire. When the measuring probe is assembled, the RC network must be at dead centre in the probe tip.

5.2. Replacing the cable assembly

Dismantle the compensation box as described in section 4.2.

Unsolder the connection between the inner conductor and the printed-wiring board. Keep the frame of the compensation box steady and loosen the cable nipple with a 5 mm spanner on the hexagonal part. Replace the cable and fit it working in the reverse order.

5.3. Replacing the BNC

Dismantle the compensation box as described in section 4.2.

Unsolder the connection to the printed-wiring board. Keep the frame of the compensation box steady and loosen the BNC with a 3/8 inch spanner. Replace the BNC and fit it working in the reverse order.

5.4. Replacing the probe tip

The damaged tip can be pulled out by means of a pair of pliers. A new tip must be firmly pushed in.

6. PARTS LIST

6.1. Mechanical parts (see Fig. 10 and 11)

Items 1 to 10 are standard accessories supplied with the probe.

Item	Order number	Qty.	Description
1	5322 321 20223	1	Earth cable
2	5322 256 94136	1	Probe holder
3	5322 255 44026	10	Soldering terminals which may be incorporated in circuits as routine test points
4	5322 532 64223	2	Marking ring red
5	5322 532 64224	2	Marking ring white
	5322 532 64225	2	Marking ring blue (not shown)
6	5322 268 14017	2	Probe tip
7	5322 462 44319	1	Insulating cap to cover metal part of probe during measurements in densely wired circuits
8	5322 462 44318	2	Cap facilitating measurements on dual-in-line integrated circuits
9	5322 264 24018	1	Wrap pin adapter
10	5322 264 24019	1	Spring-loaded test clip
11	5322 264 24021	1	Probe shell with check-zero button
12	5322 216 54152	1	RC network PM8927A
	5322 216 54153	1	RC network PM8927AL
13	5322 320 14063	1	Cable assembly PM8927A
	5322 320 14064	1	Cable assembly PM8927AL
14	5322 447 61006	1	Cap PM8927A
	5322 447 61007	1	Cap PM8927AL
15	5322 268 44019	1	BNC connector

6.2. Electrical parts (see Fig. 12)

Item	Order number	Description
C1	—	Part of RC network (not supplied separately)
C2	5322 125 54003	Trimmer 60pF, 300V
R1	—	Part of RC network (not supplied separately)
R2	5322 101 14047	Potmeter 470 Ω , 20%, 0.5W
R3	5322 100 10112	Potmeter 1k Ω , 20%, 0.5W

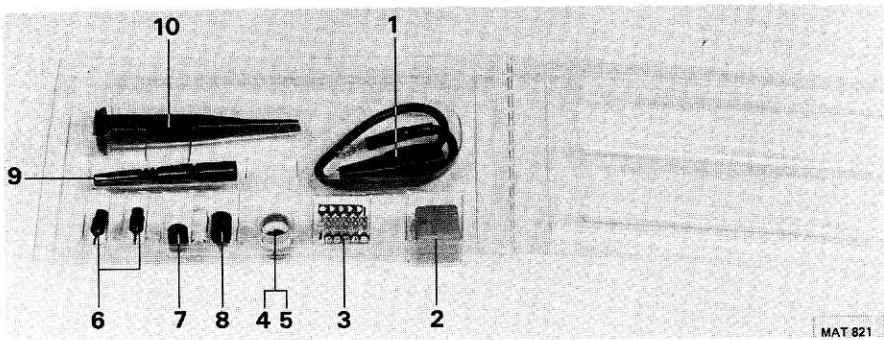


Fig. 11. Accessories with item numbers


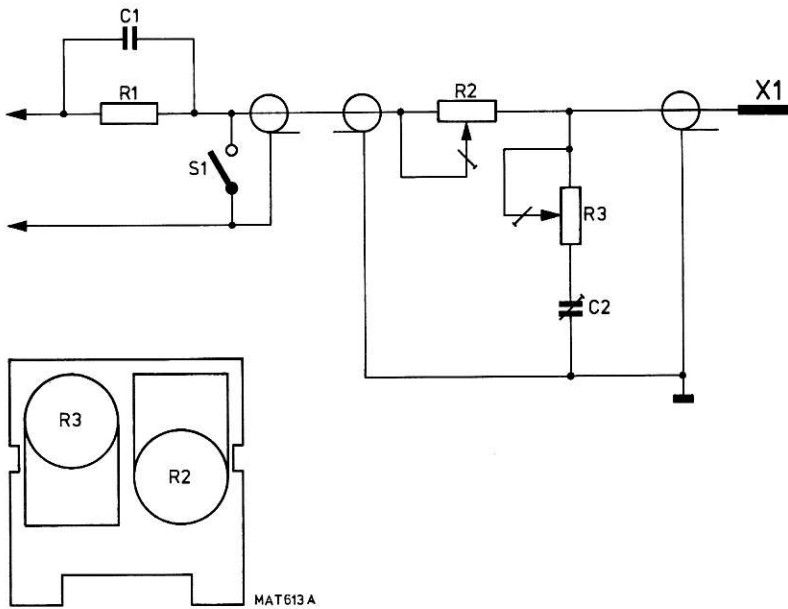


Fig. 12. Printed-wiring board showing adjusting elements, circuit diagram

7. SUPPLEMENT FOR THE PM8927AS PROBE

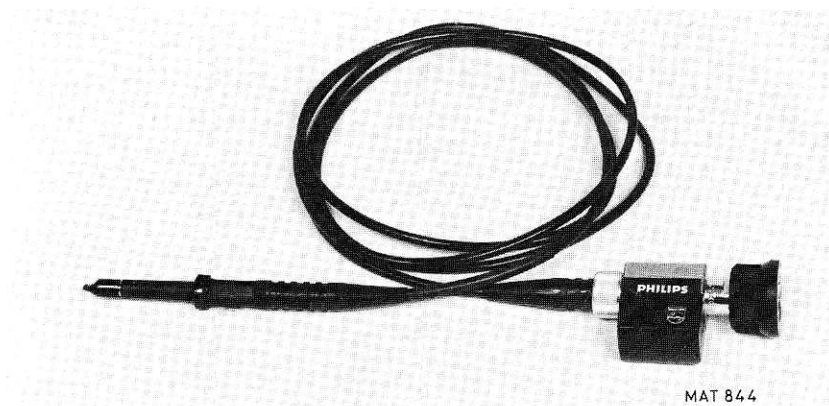

MAT 844

Fig. 13. PM8927AS

7.1. Introduction

The PM8927AS is a standard PM8927A probe provided with a special BNC connector, which makes automatic range indication possible.

The attenuator range is selected by a resistor which is mounted in the holder of the BNC connector.

When the probe is connected with an oscilloscope provided with automatic range indication e.g. PM3310, this resistor is connected between earth potential and the spring-contact situated on the left side of the BNC socket. The value of this resistor determines the attenuator range.

The PM8927AS is a 10x attenuator probe designed for real time oscilloscopes up to 100MHz with an input resistance of $1M\Omega$.

The probe can be adjusted to oscilloscopes with input capacitances from 14pF up to 40pF.

At delivery the PM8927AS has been adjusted to an oscilloscope with an input capacitance of 25pF.

The PM8927AS is available with a cable length of 1500 mm.

7.2. Specifications, adjustments and dismantling: see PM8927A(L)

7.3. Replacing the range indication parts (fig. 14)


- Push the rubber ring (item 16) from the BNC connector in the direction of the compensation box.
- Unsolder the resistor, which is mounted in the holder (item 17), from the contact ring (item 18).
- Lift the lips of the contact ring so that the contact ring can be removed from the holder.
- Remove the two holder halves.
- Remove the contact spring together with the resistor.

To reassemble the BNC connector with range indication, proceed in reverse order.

ATTENTION: When soldering the resistor on the lip of the contact ring, use a minimum of soldering tin, to prevent that the soldering point will touch the rubber ring.

7.4. Parts lists**7.4.1. For probe-parts; see the PM8927A(L)****7.4.2. Range indication parts**

Item	Ordering number	Qty	Description
16	5322 532 64278	1	Rubber ring
17	5322 532 64277	2	Holder
18	5322 532 14696	1	Contact ring
19	5322 492 64765	1	Contact spring
R	5322 116 55552	1	Resistor 2k32

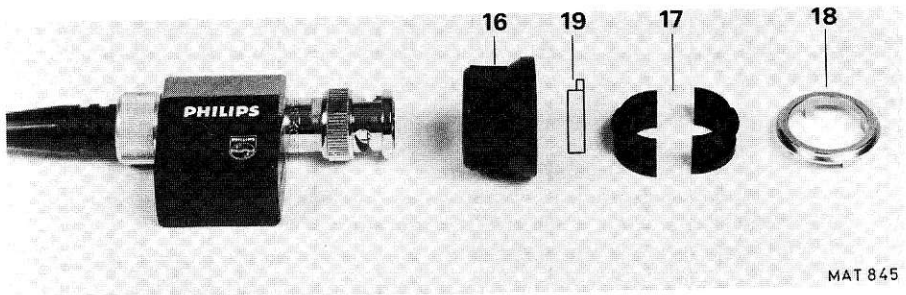*Fig. 14. Range indication parts*