

# SERVICE MANUAL

**marantz**

model 4230

*Stereo 2+Quadraxial 4 Receiver*

## TABLE OF CONTENTS

SECTION		PAGE
Introduction . . . . .		1
Service Notes . . . . .		1
AM Tuner . . . . .		1
FM Tuner . . . . .		2
Phono and Pre-Amplifier . . . . .		3
Dolby Unit . . . . .		4
400Hz Tone . . . . .		4
Dolby Switch . . . . .		4
Main Amplifier . . . . .		6
BTL (Balanced Transformerless) Connection . . . . .		6
Power Supply Unit . . . . .		6
Audio Trouble Analysis . . . . .		6
Test Equipment Required for Servicing . . . . .		7
AM Alignment Procedure . . . . .		7
FM Alignment Procedure . . . . .		8
Audio Adjustment . . . . .		9
Automatic Voltage Regulator Adjustment . . . . .		9
Dolby Alignment Procedure . . . . .		9
Alignment Procedures of Dolby FM Preset Level Control . . . . .		10
Explanation of the Dolby Processing Chart . . . . .		10
Parts List . . . . .		25
Technical Specifications . . . . .		38

## LIST OF ILLUSTRATIONS

FIGURE		PAGE
1. Main Chassis Component Locations (Bottom View) . . . . .		12
2. Front Panel Adjustment and Component Locations . . . . .		12
3. Main Chassis Component Locations (Top View) . . . . .		13
4. Rear Panel Adjustment and Component Locations . . . . .		13
5. Dial Stringing . . . . .		14
6. FM and AM Tuner Assembly P100 Component Locations . . . . .		14
7. Phono Amplifier Assembly P400 Component Locations . . . . .		15
8. Vari-Matrix Unit Assembly P500 Component Locations . . . . .		15
9. Dolby Unit Assembly P600 Component Locations . . . . .		16
10. Power Amplifier Assembly P700 Component Locations . . . . .		16
11. Power Supply Assembly P800 Component Locations . . . . .		17
12. FM De-emphasis Switch Unit Assembly PC01 Component Locations . . . . .		17
13. Buffer Amplifier Assembly PD01 Component Locations . . . . .		18
14. Tone Amplifier Assembly PE01 Component Locations . . . . .		18
15. Tone Control Unit Assembly PF01 Component Locations . . . . .		19
16. Balance Control Unit Assembly PG01 Component Locations . . . . .		19
17. 400Hz Oscillator and Meter Driver Assembly PL01 Component Locations . . . . .		19
18. Loudness, Hi Filter, Speaker and Power Switch Unit Assembly PS01 Component Locations . . . . .		20
19. Tape Monitor Switch Unit Assembly PT01 Component Locations . . . . .		20
20. Indicator Lamps Assembly PY01 Component Locations . . . . .		20
21. Dial Lamps Assembly PZ01 Component Locations . . . . .		20
22. Schematic Diagram . . . . .		21, 22
23. Exploded Mechanical Diagram . . . . .		23, 24

TABLE		PAGE
1. Test Equipment Required for Servicing . . . . .		7
2. Dolby Processing Chart . . . . .		11

## INTRODUCTION

This service manual was prepared for use by Authorized Warranty Stations and contains service information for Marantz Model 4230 Stereo 2 + Quadradial 4 Receiver.

Servicing information and voltage data included in this manual are intended for use by the knowledgeable and experienced technician only. All instruction should be read carefully. No attempt should be made to proceed without a good understanding of the operation in the receiver.

The parts list furnish information by which replacement part may be ordered from the Marantz Company. A simple description is included for parts which can be usually be obtained through local suppliers.

### 1. SERVICE NOTES

As can be seen from the circuit diagram, the chassis of Model 4230 consists of following units. Each unit mounted on a printed circuit board is described within the square enclosed by a bold dotted line on the circuit diagram.

1. FM and AM Tuner .....	mounted on P.W. Board, P100
2. Phono Amplifier .....	mounted on P.W. Board, P400
3. Vari-Matrix Unit .....	mounted on P.W. Board, P500
4. Dolby Unit .....	mounted on P.W. Board, P600
5. Power Amplifier .....	mounted on P.W. Board, P700
6. Power Supply .....	mounted on P.W. Board, P800
7. FM De-emphasis Switch Unit.....	mounted on P.W. Board, PC01
8. Buffer Amplifier .....	mounted on P.W. Board, PD01
9. Tone Amplifier .....	mounted on P.W. Board, PE01
10. Tone Control Unit .....	mounted on P.W. Board, PF01
11. Balance Control Unit .....	mounted on P.W. Board, PG01
12. 400Hz Oscillator and Meter Driver.....	mounted on P.W. Board, PL01
13. Loudness, Hi Filter, Speaker and Power Switch Unit.....	mounted on P.W. Board, PS01
14. Tape Monitor Switch Unit .....	mounted on P.W. Board, PT01
15. Indicator Lamps .....	mounted on P.W. Board, PY01
16. Dial Lamps .....	mounted on P.W. Board, PZ01

### 2. AM TUNER

All components except ferrite bar antenna are mounted on a printed circuit board P100.

The AM signals induced in a ferrite bar antenna are applied to the base of converter transistor H113 through a capacitor of C171, while the local oscillator voltage is injected to the emitter of H113 through a capacitor C172. Both AM signals and oscillating voltage are mixed at the base-emitter junction and converted into 455KHz intermediate frequency. The resulting IF signal is applied to the first IF transformer L116 consisting of one ceramic filter and two tuned circuits.

The output of L116 is led to the transistor H104 which in turn apply its output to the transistor of next stage H105. The fully amplified IF output is then applied to the diode H123 to detect audible signal through the detector transformer L117. The detected audio signal is filtered and the final audio output is obtained from pin terminal J118 and applied to the audio amplifier section through the SELECTOR switch.

The DC component of the detected IF signal is used as a AGC voltage to control emitter current of H104 through the resistor R185. A part of IF signal output is also applied to the diode H124 through a capacitor C180 and rectified to obtain DC current for energizing the SIGNAL STRENGTH meter M004.

#### 2.1 Suggestions for AM Tuner Trouble Shooting

Check for broken AM bar antenna, next try to tune station by rotating fly-wheel tuning knob

slowly and observe the SIGNAL STRENGTH meter whether it deflects or not. If the SIGNAL STRENGTH meter gives a deflection at several frequencies received, no failure may exist in the stages at least preceding final IF transformer L117. Next connect a oscilloscope to the pin terminal J118 and check for audio signals with the tuning meter deflected. If the SIGNAL STRENGTH meter does not deflect, check the local oscillator circuit. Normal oscillating voltage at the hot end of the oscillator tuning capacitor is about 2 or 3 volts, varying with tuning capacitor position. When measuring oscillating voltage use a RF VTVM, no circuit tester gives correct indication.

### 3. FM TUNER

All components are mounted on a printed circuit board P100.

FM signals induced by a FM antenna are led to FM antenna coil L101.

These signals are then applied to the FET RF amplifier which in turn applies its output to the next transistor mixer H102 through a high Q tuned circuit.

The mixer convert its input signal into 10.7MHz intermediate frequency and amplifies it at the same time. The H103 is a local oscillator and its output is injected into the base of mixer transistor, the injection voltage is about 40mV.

The 10.7MHz front end output is led to the next IF section. The IF section consists of five stage of IF amplifier and one stage of sub IF amplifier. Two pieces of ceramic filters are also used to obtain high selectivity, a pair of symmetrical diode limiters are also employed for the best limiting characteristics, improved capture ratio and good AM suppression. A part of IF amplifier H105 output is rectified by the diode H115, H116 and its DC output is fed back to the gate of FET RF amplifier to decrease the gain with increased signal strength.

#### 3.1 Muting and Auto-Stereo Switching Circuits

The muting circuit consisting of all solid-state electrical switching has been incorporated in the Model 4230.

The DC voltage obtained by rectifying the sub IF output signal from the H109 is applied to the base of H110 and turns on it, if the sub IF output is greater than predetermined level (muting threshold level).

When H110 turns on, the muting switch transistor H111 turned on, thus decreasing the emitter collector resistance to near zero ohm and allowing emitter current path to the final IF amplifier H108.

When the input signal is lower than the predetermined level, the DC output obtained is small and can not turn on the H110, thus the H110 keeps its turn off state and this makes the switch transistor H111 keep turn off, then no emitter current is supplied to the H108 and signals below threshold level are muted out.

The muting threshold level can be varied by adjusting the trimming resistor R153.

The DC voltage obtained is also used to make the Auto-Stereo switching transistor H112 turn on and off, and used to energizing the SIGNAL STRENGTH meter M004.

#### 3.2 MPX Stereo Decoding Circuit

A Non-equalized audio signal from the FM detector is applied through the phase adjuster network of C148 and R161 to input terminal pin ① on the MPX decoder IC H114. The MPX decoder IC consists of a stereo decoder and postamplifier for the output. The right and left channel signals decoded by the stereo decoder H114, appear at pin ⑩ (right channel) and pin ⑪ (left channel), respectively. These signals are passed through the low-pass filters and de-emphasis networks to eliminate undesirable residual switching signals and are then delivered to postamplifier input pin ⑤ (right channel) and pin ⑦ (left channel), respectively. The signals amplified in the postamplifiers to the required level (approximately 10dB) are delivered to pin ⑥ (right channel) and pin ⑧ (left channel), and are then passed through C169 and C168 to pin terminals J114 and J115, hence, through the SELECTOR switch to the audio amplifier section.

Pin ⑯ on the MPX IC H114 is connected through R163 to the collector of the autostereo switch transistor H112, which turns on or off according to the incoming FM signal strength, thereby automatically switching between the stereophonic and monaural operations. The H112 turns on or off in accordance with whether the FM signal strength is more or less than approximately  $25\mu V$ .

### 3.3 Suggestion for Trouble Shooting of FM Tuner

#### 3.3.1 Symptom: No FM Reception

First turn on the POWER switch and try to tune FM stations. Rotate the fly-wheel tuning knob slowly and observe the FM SIGNAL STRENGTH meter. If the SIGNAL STRENGTH meter deflect at several frequencies received, the tuner circuits preceding the discriminator circuit may have no failure. When no reading is obtained in the meter, check FM local oscillator circuit, using a RF VTVM. The normal local oscillator voltage is one or two volts (rms) at the tuning capacitor, depending on the tuning capacitor position. When SIGNAL STRENGTH meter deflects but no sound is obtained, check audio circuits, using high sensitive oscilloscope.

#### 3.3.2 Symptom: No Stereo Separation

Connect an FM RF signal generator output modulated by a stereo modulator to the rear FM ANTENNA terminals, and check the stereo beacon is turned on or not. If not turned on, check for 19 KHz pilot signal and 38 KHz switching signal, using an oscilloscope.

## 4. PHONO AND PRE-AMPLIFIER

Signals from the PHONO jacks are applied to the phono-amplifier mounted on P400. The amplified and RIAA equalized phono signals and signals from the tuner section, CD-4/AUX and TAPE MONITOR IN jacks are applied to the SELECTOR switch which, in turn, leads the selected signals to the TAPE MON. switch and TAPE MONITOR OUT jacks. Applied to the other section of the TAPE MON. switch are signals from the TAPE MONITOR IN jacks. The TAPE MON. switch selects the signals from the SELECTOR switch or those from the TAPE MONITOR IN jacks and the selected signals go to the DOLBY and MODE switches. Signals are then mode processed by the MODE switch and its associated circuit and applied to the tone control amplifier through the buffer amplifier and BALANCE and VOLUME controls. The bass and treble controlled signals from the tone control amplifier pass through the hi filter before they reach the main amplifier.

### 4.1 Mode Switch

MODE switch S002 has positions of MONO, 2 CH, DISCRETE, VARI-MATRIX, and SQ DECODER.

In the MONO position, all input signals are mixed together and delivered to all four channels.

In the 2 CH position, each pair of input signals right-front (RF) and right-rear (RR), and left-front (LF) and left-rear (LR) are mixed together. The resultant signals (RF + RR) and (LF + LR) are delivered to the pairs of RF and RR, and LF and LR channels, respectively.

In the DISCRETE position, each channel signal is separately routed to the corresponding channel.

In the VARI-MATRIX position, 2-channel streo input signals are converted into quadraphonic signals through the vari-matrix circuit; the input right and left channel signals are fed directly to the LF and RF channels, while the signals to the LR and RR channels are synthesized from the 2-channel input signals under the control of the DIMENSION control. The LR and RR channel signal components are controlled by the DIMENSION control as shown below.

DIMENSION Control Setting	LR Output	RR Output
Minimum (FCCW)	LF + RF	RF + LF
Center	LF	RF
Maximum (FCW)	LF - RF	RF - LF

When the DIMENSION control is set to the minimum position the LR and RR channel signals become monophonic, to the center are stereophonic, and to the maximum are out of phase, thus providing vanished sound image positioning.

In the SQ DECODER position, signal sources encoded by the CBS SQ system are ideally decoded into 4-channel signals. Required for this operation is incorporation of the SQ Adaptor, Model SQA-1, into the Model 4230.

#### 4.2 Balance Control

Signals from the buffer amplifiers are fed into the balance control circuit, in which the signals are controlled by three balancers: FRONT L-R, REAR L-R, and FRONT-REAR. By setting the FRONT-REAR balancer to the "FRONT" side and the FRONT L-R balancer to the "L" side, for example, only the front left channel is driven.

The balance control circuit is provided with the REMOTE CONTROL switch which makes the Model RC-4 Remote Control Box operative when set to the "REMOTE" position. In the "REMOTE" position the BALANCE and VOLUME controls on the Model 4230 become ineffective since signals are led to the Model RC-4. Balance and volume can be adjusted by the Model RC-4. Balanced and volume controlled signals are led to the tone control amplifier.

#### 5. DOLBY UNIT

The Dolby unit built in Model 4230, which is a switchable processor, is inserted in each of both FRONT R and L channels. The attached "DOLBY PROCESSING CHART" will facilitate you to well understand the operation of the Dolby circuit.

An input signal coming to J601 is amplified by H601, and its output signal is led to the filter which cuts off the tape bias. The signal passed through the filter is further amplified and comes to the mixing circuit of resistors R623 and R625 and to the phase inverting circuit of H607 and H609. The output signal is fed out from J607.

In the recording mode of operation, the signal is fed out from J605 preceding the mixing circuit and applied at J611. The signal is then discriminated in the frequency and level by the dynamic filter consisting of H611, H613, H615 and H617, and is fed back to the mixing circuit.

In the playback mode of operation, a part of the output signal (at J607) is fed to J611 and discriminated in the frequency and level by the dynamic filter consisting of H611, H613, H615 and H617 and fed back to the mixing circuit.

#### 6. 400Hz TONE

The 400Hz tone signal which is a 580mV, 400Hz sine wave is available at the FRONT and REAR TAPE MONITOR OUT terminals at any position of the DOLBY switch (with the exception of the RECORD II position) and the SELECTOR switch.

The output signal of the 400Hz oscillator consisting of HL01 and HL02 is fed to JL02 and JL03 through the emitter follower HL03. The output levels at JL02 and JL03 are adjusted to 580mV and approximately 25mV, respectively.

The signal fed from the Dolby P.W. Board (P600) comes to JL04 and is rectified through HL06. The rectified output at JL06 is led to the meter M004.

#### 7. DOLBY SWITCH

This switch sets the Dolby noise-reduction circuit for record or playback and also switches the Meter Mode from AM or FM SIGNAL STRENGTH to DOLBY CAL LEVEL, or vice-versa.

With the DOLBY Switch placed in "OFF" position, the Meter will be used as a SIGNAL-STRENGTH meter; in all other positions as a DOLBY CAL LEVEL meter.

### **7.1 Dolby FM**

This position is used for listening to Dolbyized FM broadcasts. The Dolby FM level has been pre-adjusted at the factory.

### **7.2 Play**

This position is used to play back a Dolbyized source (except FM).

### **7.3 Off**

With this position, the Dolby circuit is by-passed and the input signals are directly applied to both TAPE MONITOR OUT jacks and amplifiers.

### **7.4 Record I**

For making a Dolbyized recording from an in-coming "flat" (non-Dolbyized) signal. When the MONITOR switch is in the SOURCE (out) position, the "flat" signal will be heard. When the MONITOR switch is in the TAPE (in) position, the Dolbyized signal from the tape will be heard.

### **7.5 Record II**

For making a "flat" (non-Dolbyized) recording from an in-coming Dolbyized signal. Regardless of the position of the MONITOR switch, a "flat" signal will be heard.

## **8. RECORD LEVEL (L) (R)**

These knobs control the record level of the signals to be recorded through the Dolby unit. Adjust the knobs so that the Level Meter pointers of the tape recorder do not exceed the OVU level.

## **9. PLAY CAL. (L) (R)**

These knobs adjust the playback outputs from a tape deck to the proper Dolby level.

## **10. DOLBY FM PRESET LEVEL CONTROLS**

These factory-adjusted controls govern FM output level to the Dolby circuit. These controls are for the use of a qualified technician only.

## **11. 400Hz TONE SWITCH**

This is used for calibration of the record input level of the tape deck. When the switch is depressed, the built-in oscillator operates and a sine wave signal output of 580mV will be applied to the four TAPE MONITOR OUT jacks.

## **12. FM DE-EMPHASIS SWITCH**

At present both normal and Dolbyized FM broadcast programs are being transmitted with pre-emphasis time constant of 75 microsecond.

However if the Dolbyized FM broadcasting is approved by F.C.C., this pre-emphasis time constant for Dolbyized FM broadcast will be changed to 25 microsecond. The FM DE-EMPHASIS switch provided on the rear of Model 4230 is used for switching the time constants. After the permission of Dolbyized FM broadcasting, set the switch to 25 $\mu$ S position. This automatically change the time constant to 75 $\mu$ S while the DOLBY switch is placed in other than DOLBY FM positions (namely normal FM broadcast position), thus, the de-emphasis time constant for each normal and Dolbyized FM reception will be correctly set.

### 13. MAIN AMPLIFIER

Transistor H702 is the pre-driver coupled to the transistor H704 through capacitor C712. The transistor H704 drives the inverter transistors H710 and H712 which, in turn, drive the power stage consisting of H001 and H003. Transistors H706 and H708 are current limiter operating as a power transistor protection circuit.

Excessive current flow in the power output stage is detected by the resistors R759 and R761 and the resultant variation is applied to the transistors H706 and H708 and make them turned on. This decreases the base biasing current for H710 and H712. In this way the current flow in the power output stage (H001 and H003) is restricted within a safe predetermined value.

### 14. BTL (Balanced Transformerless) CONNECTION

This power amplifier is designed to operate in either 2-channel or 4-channel modes, depending on the setting of the POWER MODE switch that incorporates phase-conversion and power switch for BTL connection.

With this switch placed in the 12Wx4 position, this unit operates as a 12W 4 channel amplifier. With the switch placed in the 35Wx2 position, the unit operate as a 35W 2 channel amplifier, in this case, the power output is obtained only from FRONT SPK terminals.

The transistor H701 convert the phase of 1 channel amplifier and 3 channel amplifier.

### 15. POWER SUPPLY UNIT

The power supply unit consisting of transistors H801, H802 and H803, which operates as an automatic voltage regulator provides +35V DC to all of the amplifiers except main amplifiers and +14V DC to the tuner section.

### 16. AUDIO TROUBLE ANALYSIS

1. Excessive line consumption
  - a. Check for shorted rectifiers H007.
  - b. Check for shorted transistors H001 through H004. Check L001 for short.
2. No line consumption or zero bias.
  - a. Check line cord, fuse, shorted H005 and H006, H718 & H719.
  - b. Check for open rectifiers H007, or open L001.
3. Excessive hum and noise level
  - a. Check filter capacitors C003, C707, & C708.
  - b. Check for shorted transistor H801 and H802.
4. Parasitic oscillation
  - a. Check for defective capacitors, C710, C711, C714, C715, C728 & C729.
5. Improper clipping
  - a. Check for proper adjustment of R727 & R728.

## 17. TEST EQUIPMENT REQUIRED FOR SERVICING

Table 1 lists the test equipment required for servicing the Model 4230 Receiver.

Item	Manufacturer and Model No.	Use
AM Signal Generator		Signal source for AM alignment.
Test Loop		Used with AM Signal generator.
FM Signal Generator	Less than 0.3% distortion	Signal source for FM alignment.
Stereo Modulator	Less than 0.3% distortion	Stereo separation alignment and trouble shooting.
Audio Oscillator	Weston Model CVO-100P, less than 0.02% residual distortion is required.	Sinewave and squarewave signal source.
Oscilloscope	High sensitivity with DC horizontal and vertical amplifiers.	Waveform analysis and trouble shooting and ASO alignment.
VTVM	With AC, DC, RF range	Voltage measurements.
Circuit Tester		Trouble shooting.
AC Wattmeter	Simpson, Model 390	Monitors primary power to Amplifier.
AC Ammeter	Commercial Grade (1-10A)	Monitors amplifier output under short circuit condition.
Line Voltmeter	Commercial Grade (0-150VAC)	Monitors potential of primary power to amplifier.
Variable Autotransformer (0-140VAC, 10 amps)	Powerstat, Model 116B	Adjusts level of primary power to amplifier.
Shorting Plug	Use phono plug with 600 ohm across center pin and shell.	Shorts amplifier input to eliminate noise pickup.
Output Load (8 ohms, 0.5% 100W)	Commercial Grade	Provides 8-ohm load for amplifier output termination.
Output Load (4 ohms, 0.5% 100W)	Commercial Grade	Provides 4-ohm load for amplifier output termination.

Table 1. Test Equipment Required for Servicing

## 18. AM ALIGNMENT PROCEDURE

### 18.1 AM IF Alignment

1. Connect a sweep generator to J107 and an alignment scope to the test point (B).
2. Rotate each core of IF transformer L116 and L117 for maximum height and flat top symmetrical response.

### 18.2 AM Frequency Range and Tracking Alignment

1. Set AM signal generator to 525KHz. Turn the tuning capacitor fully closed (place the tuning pointer at the low end.) and adjust the oscillator coil L115 for maximum audio output.

2. Set the signal generator to 1650KHz. Place the tuning pointer in the high frequency end and adjust the oscillator trimmer on the oscillator tuning capacitor (CA-2) for maximum audio output.
3. Repeat the step 1 and 2 until no further adjustment is necessary.
4. Set the generator to 600KHz and tune the receiver to the same frequency and adjust a slug core of AM ferrite rod antenna for maximum output.
5. Set the generator to 1400KHz and tune the receiver to the same frequency and adjust the trimming capacitors of antenna (CA-1) for maximum output.
6. Repeat the step 4 and 5 until no further adjustment is necessary.

Note: During tracking alignment reduce the signal generator output as necessary to avoid AGC action.

#### **19. FM ALIGNMENT PROCEDURE**

1. Connect an FM signal generator to the FM ANTENNA terminals and a oscilloscope and an audio distortion analyzer to the TAPE MONITOR OUT jacks on the rear panel.
2. Set the FM SG to 87.5MHz and provide about 3 to  $5\mu V$ . Place the tuning pointer at the low frequency end by rotating the tuning knob and adjust the core of oscillator coil L103 to obtain maximum audio output.
3. Set the FM SG to 108.5MHz and provide about 3 to  $5\mu V$  output. Rotate the tuning knob and place the tuning pointer at the high frequency end and adjust the trimming capacitor C187 for maximum output.
4. Repeat the step 2 and 3 until no further adjustment is necessary.
5. Set the FM SG to 90MHz and tune the receiver to the same frequency. Decrease signal generator output until the audio output level decreases with the decreasing generator output. Adjust the antenna coil L101, RF coil L102 and IF transformer L105 for minimum audio distortion.
6. Set the FM SG to 106MHz and tune the receiver to the same frequency. Adjust the trimming capacitor CF-1, CF-2 for minimum distortion.
7. Repeat the step 5 and 6 until no further adjustment is necessary.
8. Connect a DC VTVM with 1 volt range selected to the test point (E) (J120) and adjust the secondary core (upper) of discriminator transformer L107 so that no voltage reading is obtained on the VTVM at no signal.

Next set the FM SG to 98MHz and increase the output level to  $1K\mu V$ , then tune the receiver to the same frequency so that no deflection is obtained on the VTVM.

Adjust primary core (bottom) of L107 for minimum distortion, and adjust the L108 for the maximum deflection of FM SIGNAL STRENGTH meter M004.

##### **19.1 Stereo Separation Alignment**

1. Set the FM SG to provide  $1K\mu V$  at 98MHz.  
Tune the receiver to the same frequency perfectly (so that the VTVM connected to the test point (E) gives no reading).
2. Modulate the FM SG with stereo composite signal consisting of subchannel signal only (of course a pilot signal must be included).  
Adjust the core of L110 for maximum audio output, then, modulate the FM SG with a stereo composite signal consisting of L or R channel only, and adjust the trimming resistor R 161 for maximum and equal separation in both channels.

##### **19.2 Muting Circuit Alignment**

1. Set the FM SG output to provide  $25\mu V$  (IHF) at 98MHz and tune the receiver to the same frequency.  
Adjust the trimming resistor R153 for the threshold level of  $25\mu V$  (during this adjustment turn the FM MUTING pushswitch "on").

## **20. AUDIO ADJUSTMENT**

1. Connect a VTVM to J717 (+) and J711 (-) and adjust the trimming resistor R737 until the VTVM reads 15mV DC. For the other channel connect the VTVM to J718 (+) and J712 (-) and adjust the R738 for the same reading.
2. Connect a oscilloscope across the SPEAKER terminals. Apply an audio signal of 1KHz to the CD-4/AUX jacks and increase the audio signal until the audio output on the scope begin to start clipping. Adjust the trimming resistor R727 for equal and symmetrical clipping. For the other channel adjust the R728.

## **21. AUTOMATIC VOLTAGE REGULATOR ADJUSTMENT**

Connect a VTVM to J801 (+) and J811 (-) and adjust R801 until the VTVM reads 35.0V under no signal condition.

## **22. DOLBY ALIGNMENT PROCEDURE**

Prior to the adjustment, turn the PLAY CAL and REC LEVEL controls all the way to the right and the SELECTOR switch to the CD-4/AUX position. Use the CD-4/AUX and TAPE MONITOR OUT jacks for the signal input and output.

1.

- 1) Set the DOLBY switch to the RECORD I position.
- 2) Adjust the semi-fixed resistor R653 for maximum source voltage of the field-effect transistor H611.
- 3) Connect J620 and J613 to the ground.
- 4) Apply a 5KHz sine wave so as to obtain 17.5mV at J605.
- 5) Record the output level at the TAPE MONITOR OUT jack with the above signal applied.
- 6) Adjust the semi-fixed resistor R659 so that the output level at the TAPE MONITOR OUT jack may increase  $10 \pm 0.25$ dB when J620 is disconnected from the ground.
- 7) Record the above output level.
- 8) Adjust the semi-fixed resistor R653 so that the output level may decrease  $2 \pm 0.25$ dB when J613 is disconnected from the ground.
- 9) Connect J613 to the ground again, and assure the level increase in the step (6) above. Disconnect J613.

2.

- 1) Set the DOLBY switch to the RECORD II position.
- 2) Connect J620 and J613 to the ground.
- 3) Apply a 5KHz sine wave so as to obtain a 44mV at J605.
- 4) Check to insure that the level at the TAPE MONITOR OUT jack decreases  $10 \pm 0.5$ dB when J620 is disconnected from the ground.
- 5) Disconnect J620 and J613 from the ground.
- 6) Check to insure that the output voltage at the TAPE MONITOR OUT jack is 17.5mV ( $\pm 0.5$ dB).

3. For the level adjustment, set the DOLBY switch and SELECTOR switch to the RECORD I and CD-4/AUX positions, respectively, and use the TAPE MONITOR OUT jack for the signal output. By setting the 400Hz TONE pushswitch "in", the 400Hz sine wave is fed out. Adjust the semi-fixed resistor RL11 for 580mV of the sine wave output voltage in both R and L channels. Then, set the DOLBY switch to the RECORD II position, and apply the 400Hz signal for 580mV of the output voltage. Adjust the semi-fixed resistors RL28 and RL29 so that the DOLBY LEVEL meter may point the Dolby level. Change over the METER switch, and perform this adjustment for both R and L channels.

Next, adjust the semi-fixed resistor RL12 for 580mV output level when the DOLBY switch is set to the OFF position. Check the 400Hz output signal level after the adjustment of the level setting semi-fixed resistors RL11 and RL12. The output level must be precisely 580mV since it is a reference level of the Dolby circuit.

### 23. ALIGNMENT PROCEDURES OF DOLBY FM PRESET LEVEL CONTROLS

Connect an FM signal generator to the FM antenna. Set the signal generator for 400Hz 50% modulation.


Set the FM signal generator to 98MHz and the DOLBY switch to the OFF position. Turn the Tuning knob on Model 4230 until it tunes to the 98MHz signal from the FM signal generator.

Then, set the DOLBY switch to the DOLBY FM position, and adjust the FM preset level controls RC05 and RC06 so that the DOLBY LEVEL meter may point the Dolby level. Change over the METER switch, and perform this adjustment for both R and L channels.

### 24. EXPLANATION OF THE DOLBY PROCESSING CHART

This chart shows the condition of the signals available at the speakers (SPKRS) and at the TAPE MONITOR OUT terminals as a function of different control settings.

To understand the chart refer to the symbols below:

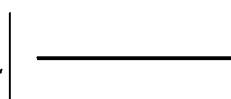


- Represents a signal which has not been applied to either Record or Playback Dolby circuits. The relative amplitudes of all audio frequencies remain unaltered at all levels.



- Represents a signal which has been processed by the Dolby Record circuit. The relative amplitude of the high frequencies is increased at low signal levels.



- Represents a signal which has been processed by the Dolby Playback circuit. The relative amplitude of the high frequencies is decreased at low signal levels.

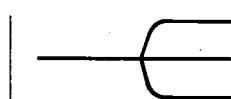


- Represents a signal which has been processed by both the Record and the Playback Dolby circuits.

These circuits are complementary. Therefore, relative amplitudes of all audio frequencies are restored to their original values.


SIGNAL	DOLBY SW	DOLBY FM		PLAY		OFF		RECORD		I		II	
	TAPE MON	SOURCE	TAPE	SOURCE	TAPE	SOURCE	TAPE	SOURCE	TAPE	SOURCE	TAPE	SOURCE	TAPE
FM TRANSMISSION	SIGNAL AT	SPKRS	TAPE OUT	SPKRS	TAPE OUT	SPKRS	TAPE OUT	SPKRS	TAPE OUT	SPKRS	TAPE OUT	SPKRS	TAPE OUT
NORMAL FM													
75 $\mu$ s FM WITH DOLBY													
DOLBY FM (25 $\mu$ s W/DOLBY)													
OTHER SOURCE													

NOTE: \* DE-EMPHASIS SWITCH IN THE 75  $\mu$ s POSITION.  
\*\* DE-EMPHASIS SWITCH IN THE 25  $\mu$ s POSITION.


Table 2. Dolby Processing Chart

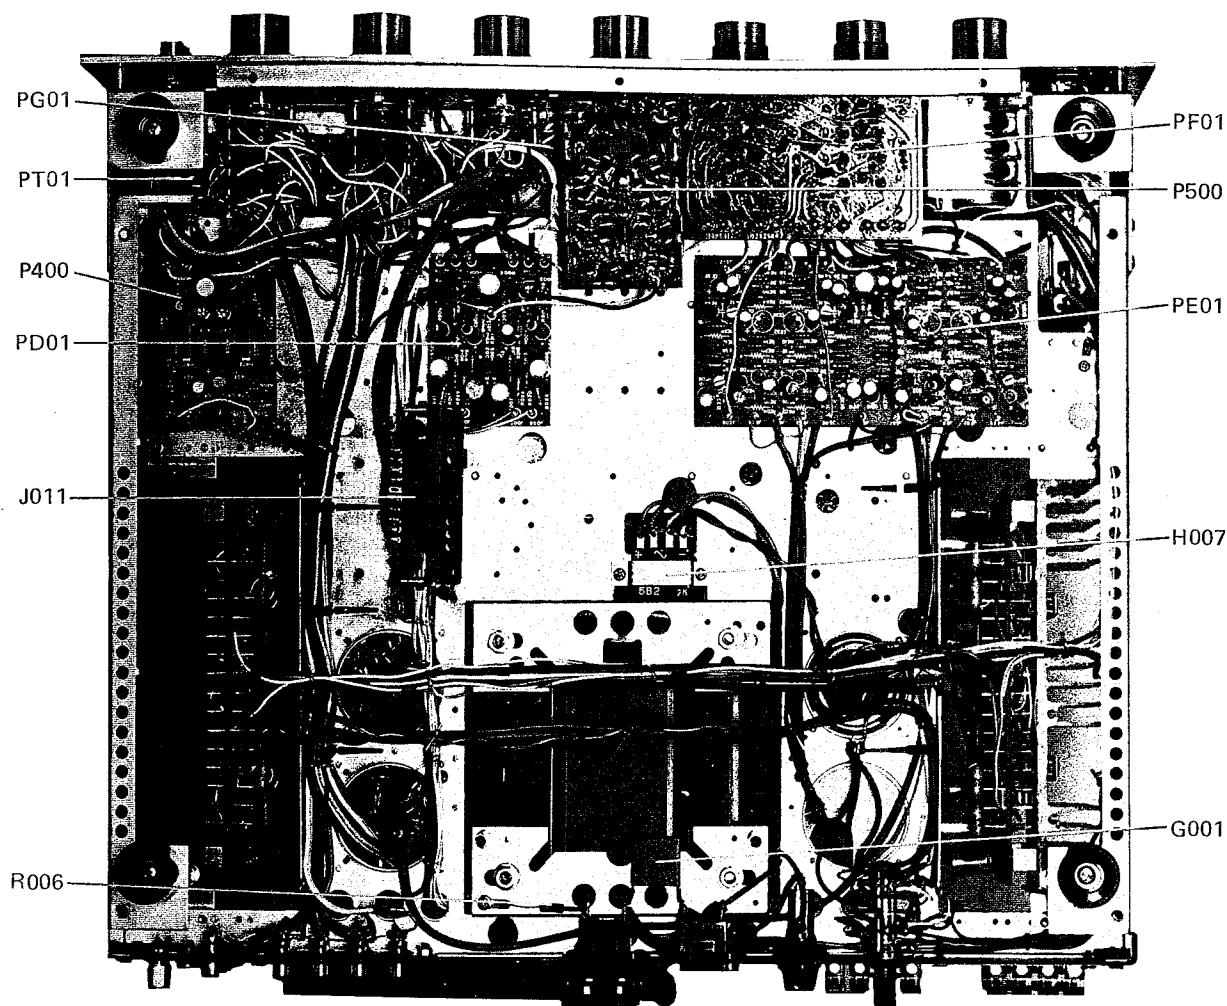


**Figure 1. Main Chassis Component Locations (Bottom View)**

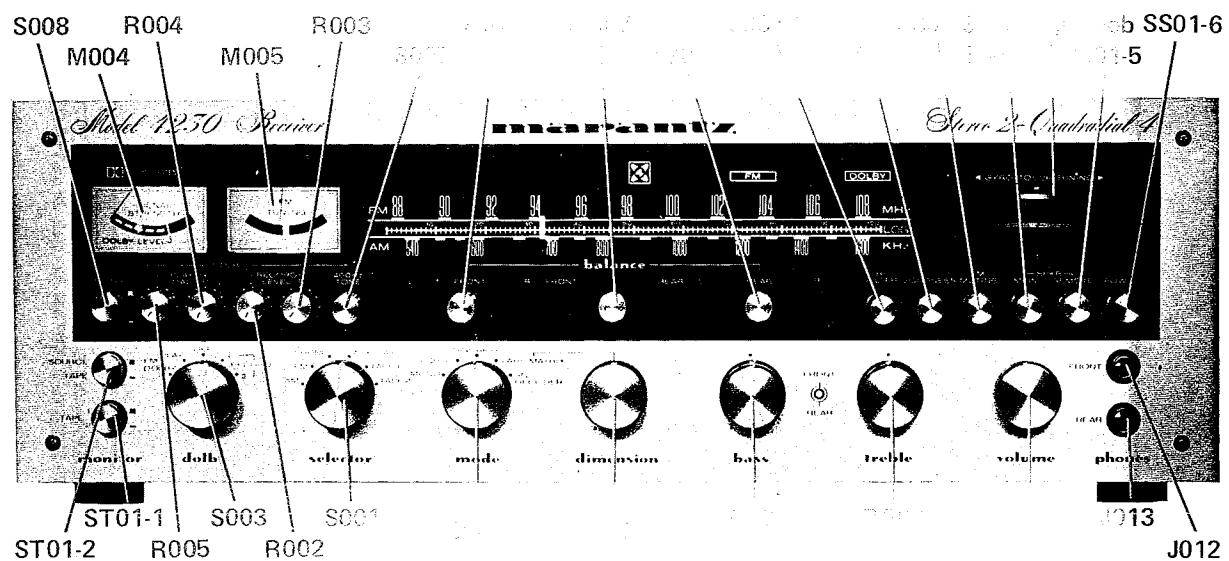


**Figure 2. Front Panel Adjustment and Component Locations**

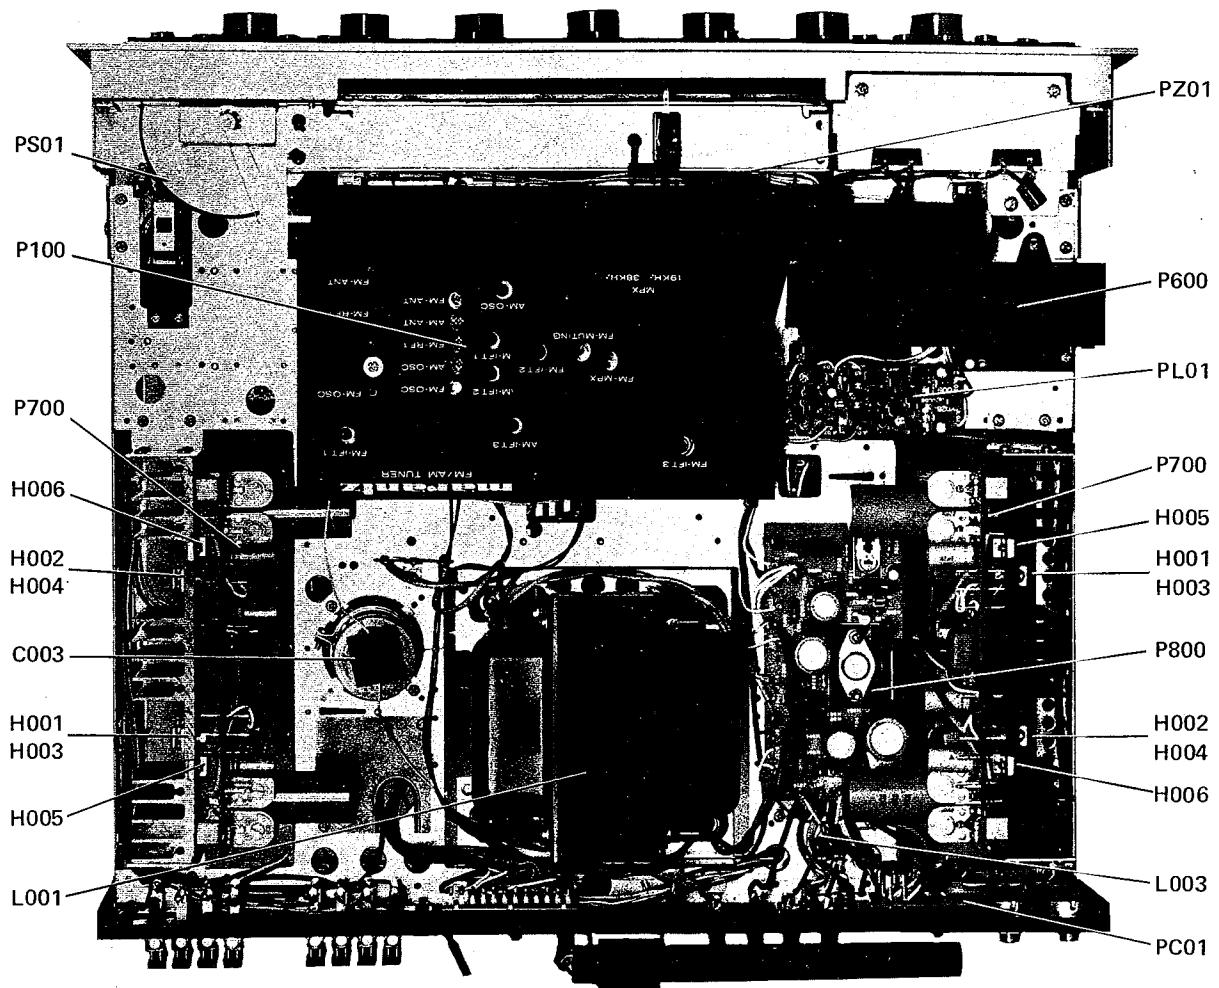


**Figure 3. Main Chassis Component Locations (Top View)**

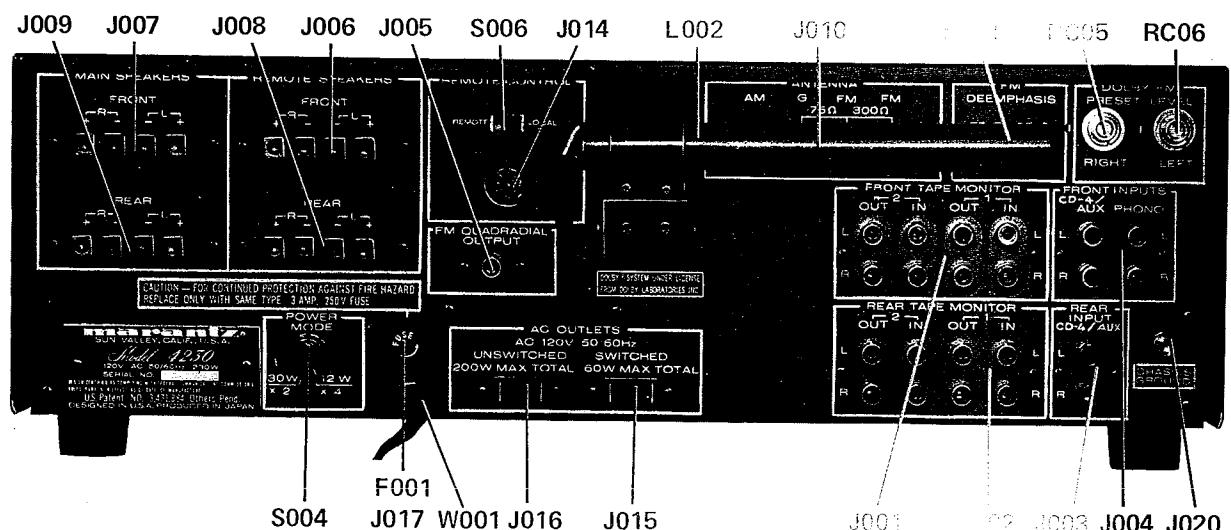


**Figure 4. Rear Panel Adjustment and Component Locations**

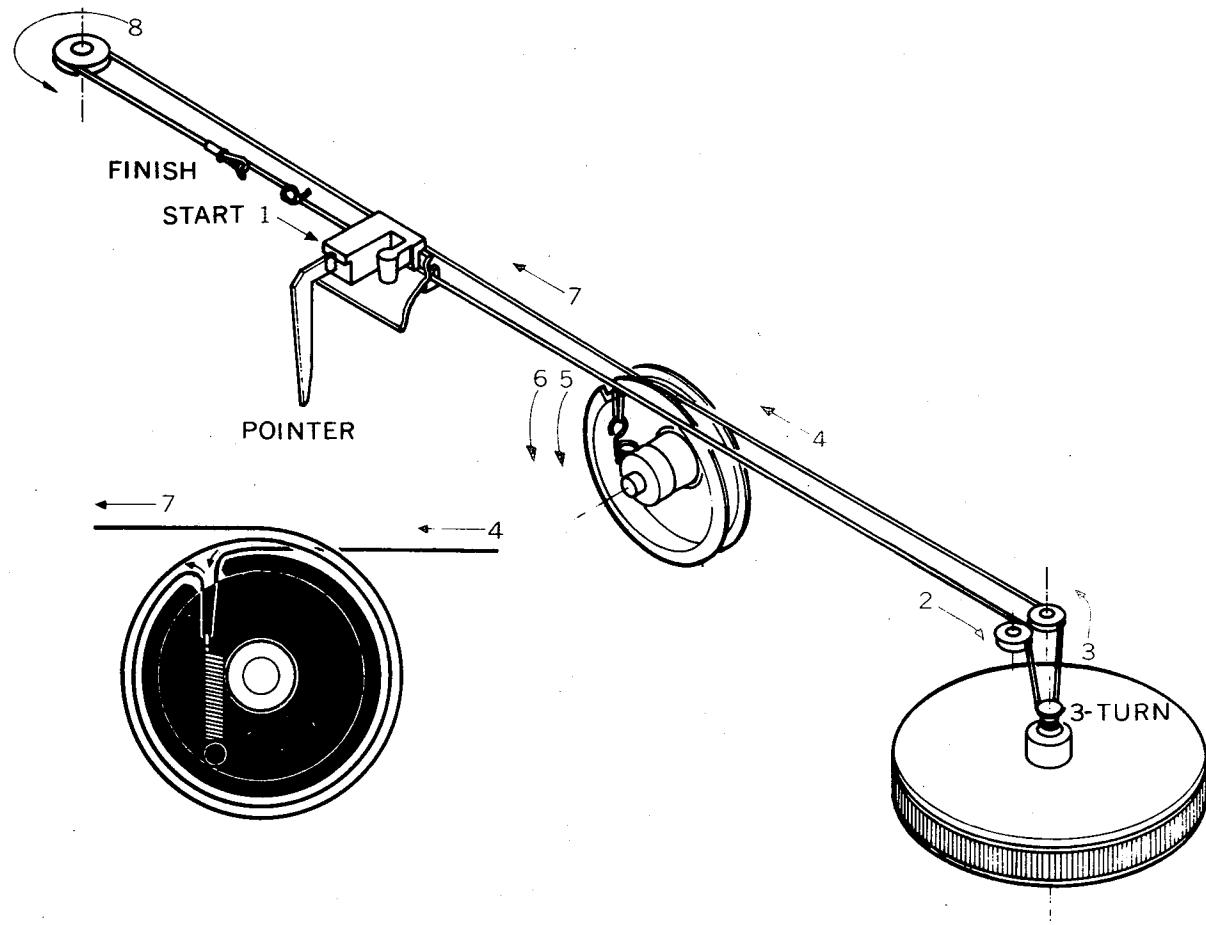


**Figure 5. Dial Stringing**

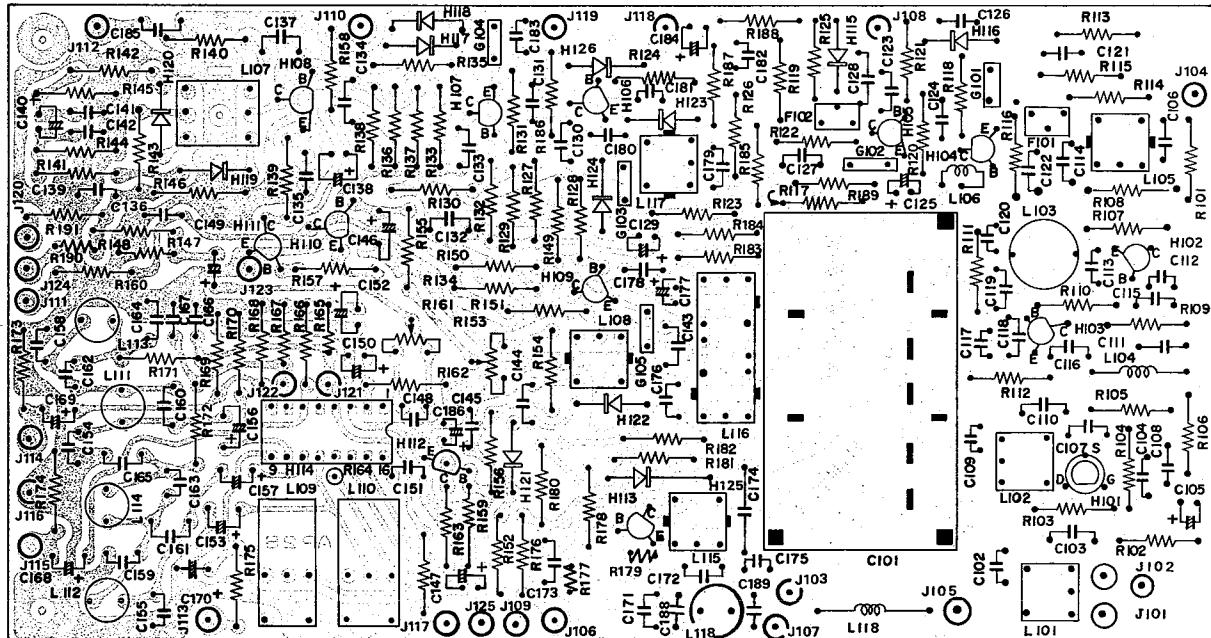


**Figure 6. FM and AM Tuner Assembly P100 Component Locations**

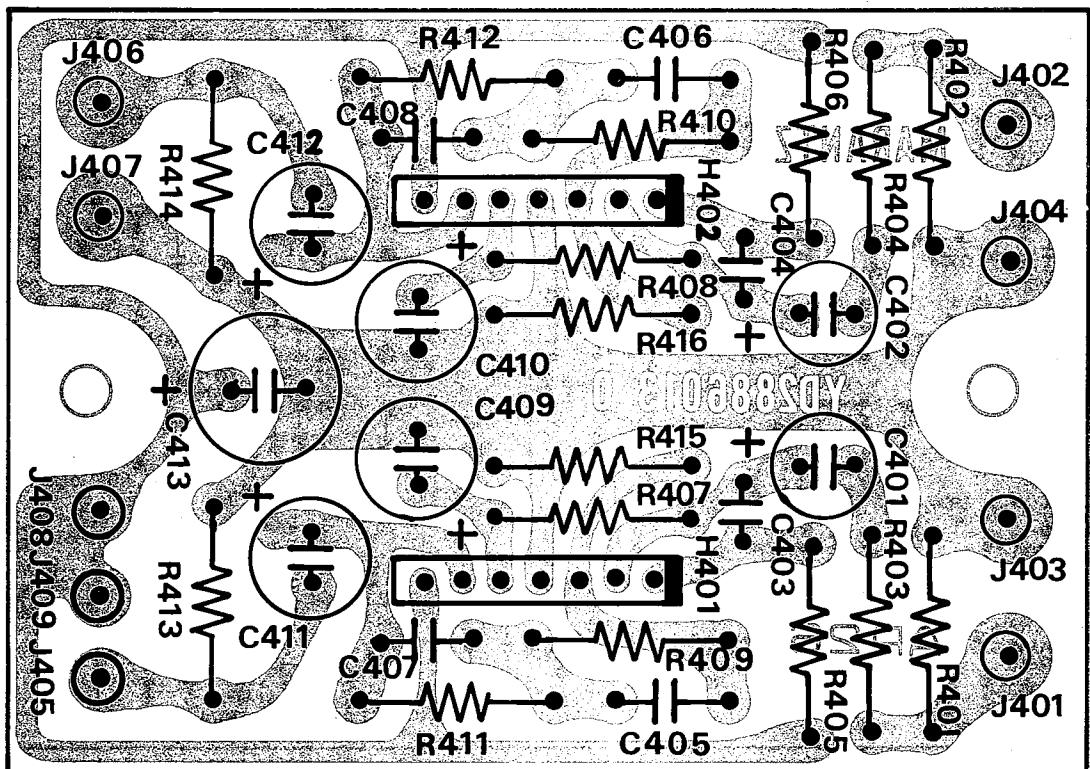


**Figure 7. Phono Amplifier Assembly P400 Component Locations**

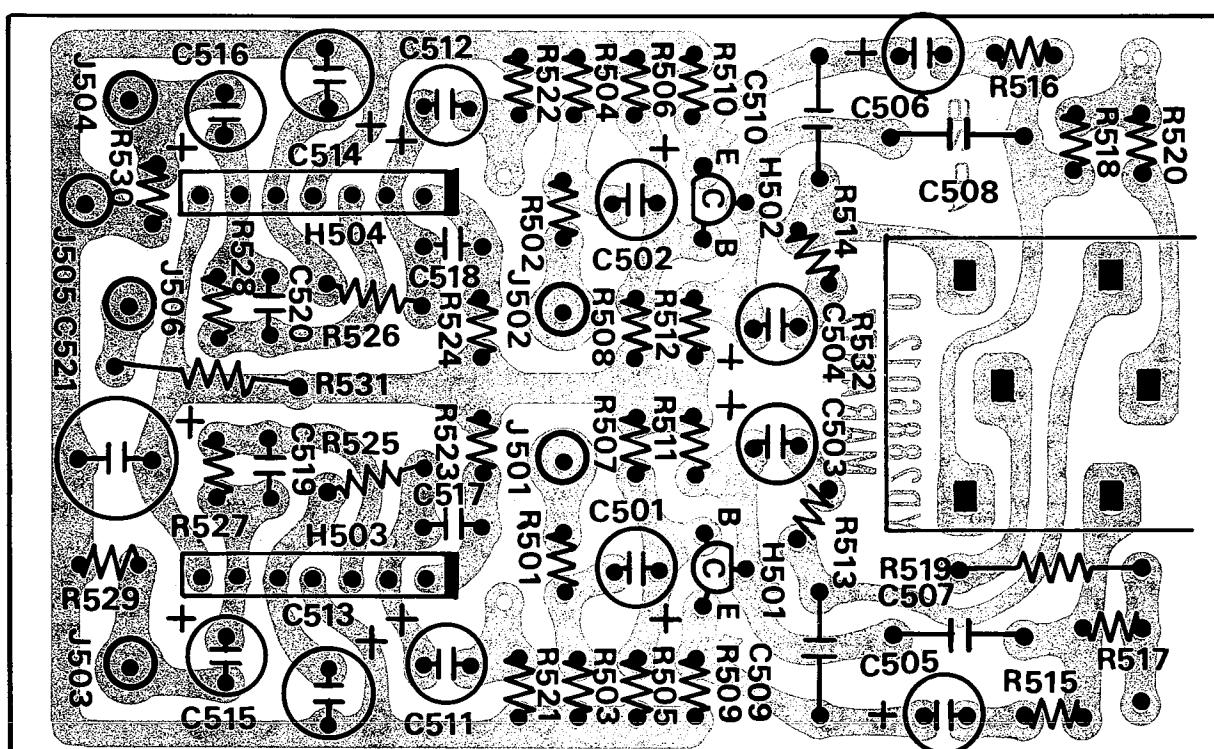


**Figure 8. Vari-Matrix Unit Assembly P500 Component Locations**

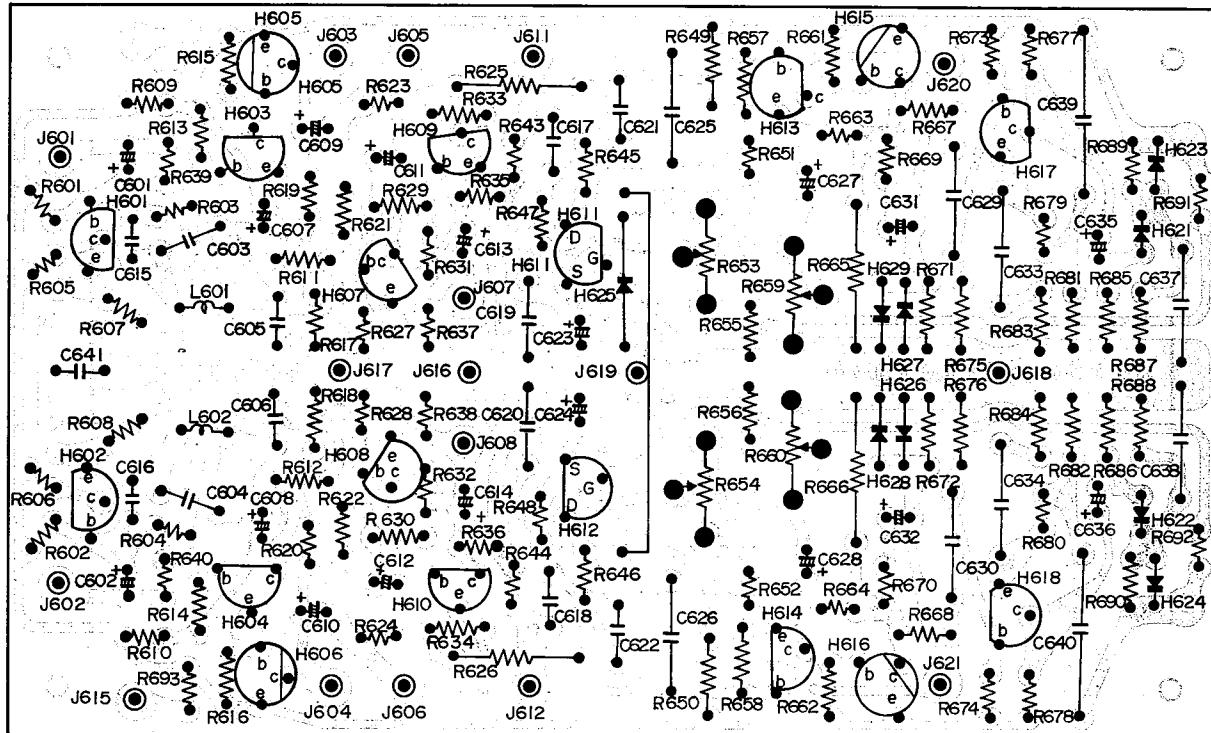


**Figure 9. Dolby Unit Assembly P600 Component Locations**

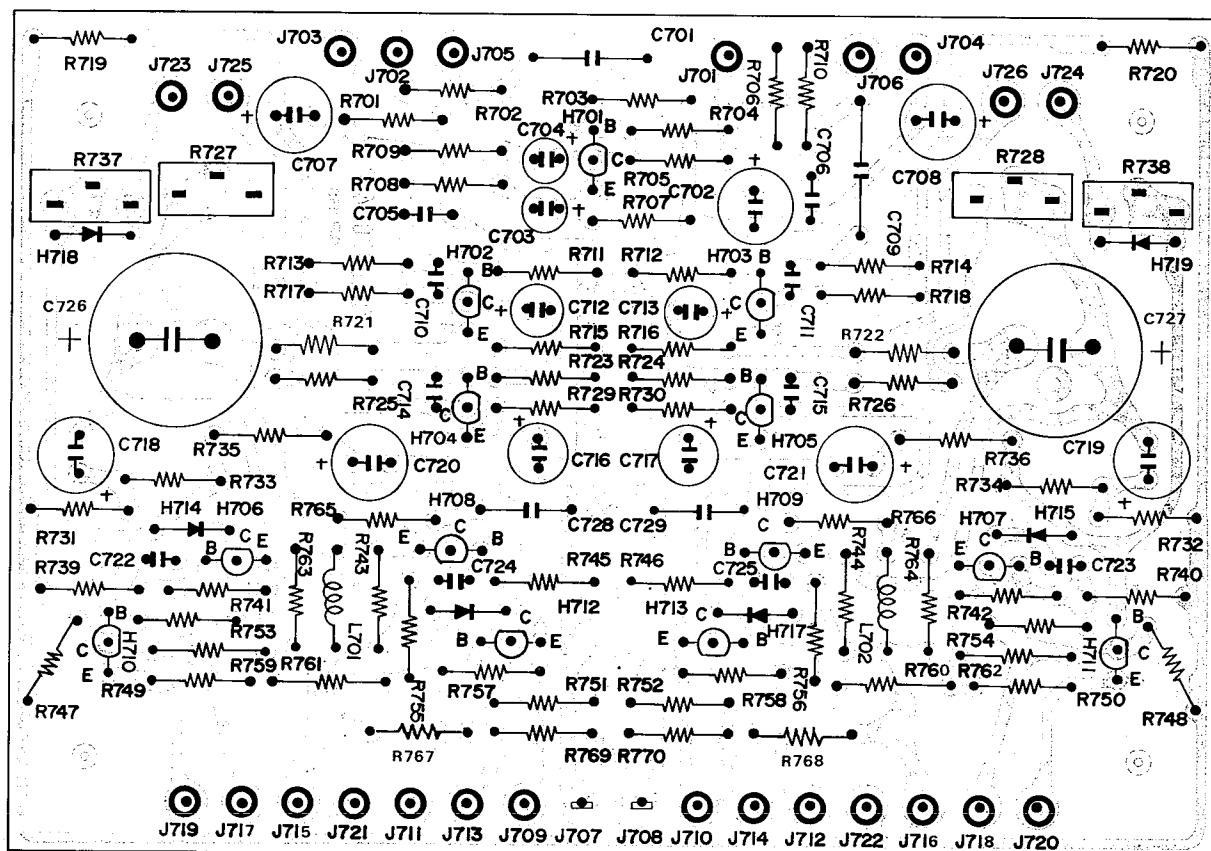

**Figure 10. Power Amplifier Assembly P700 Component Locations**

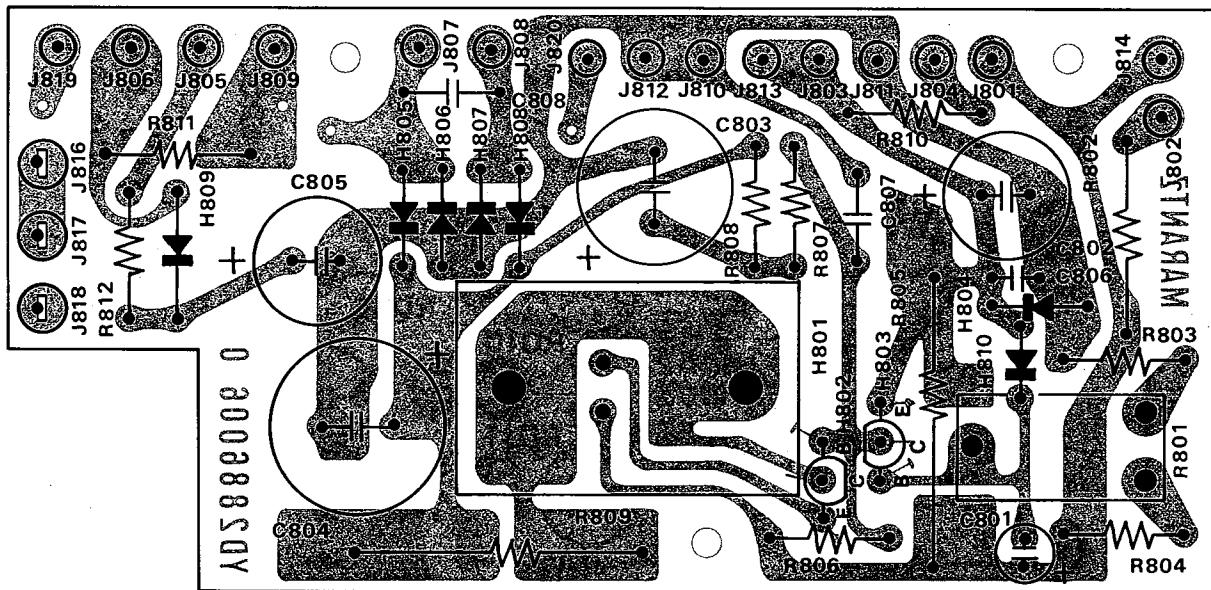

**Figure 11. Power Supply Assembly P800 Component Locations**

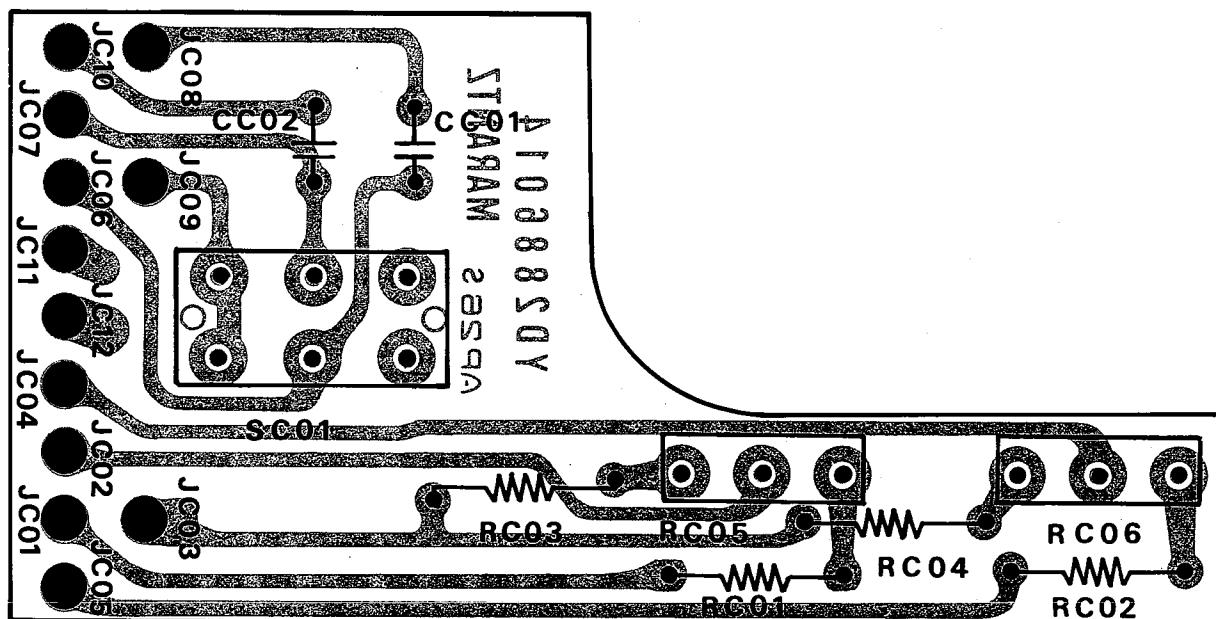

**Figure 12. FM De-emphasis Switch Unit Assembly PC01 Component Locations**

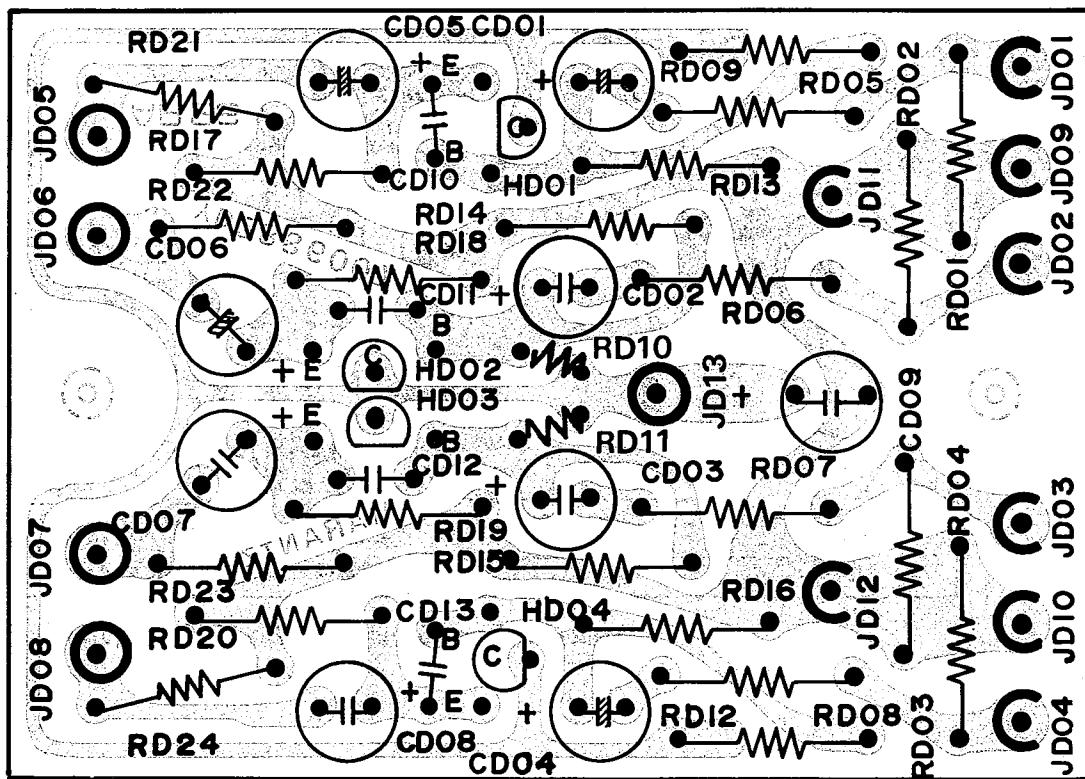
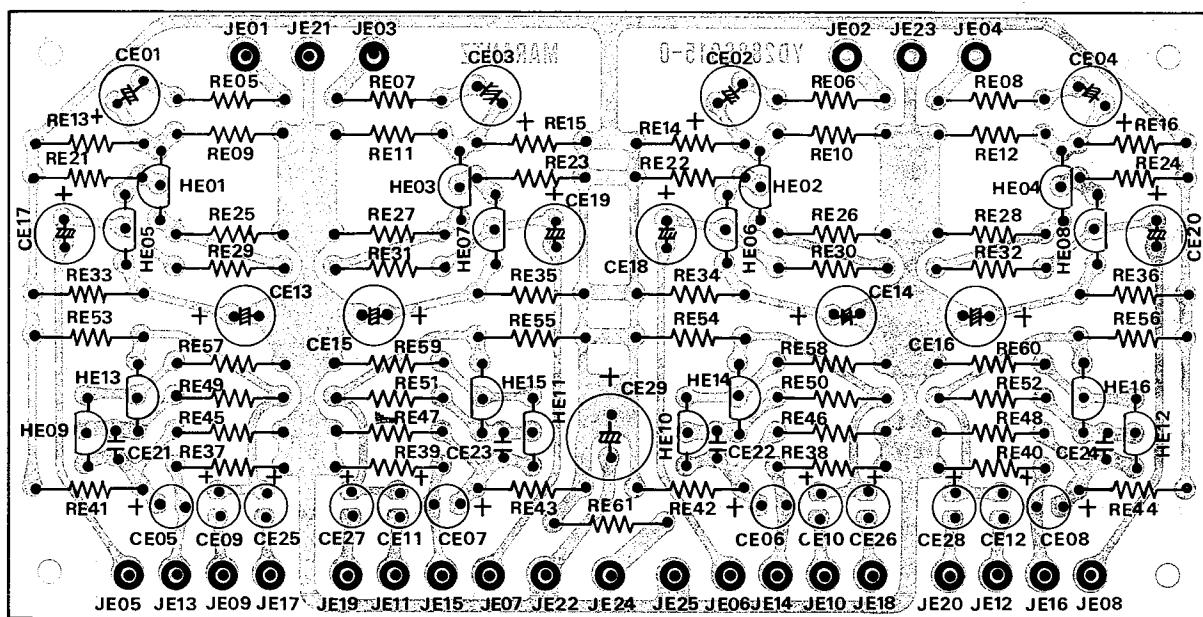


Figure 13. Buffer Amplifier Assembly PD01 Component Locations



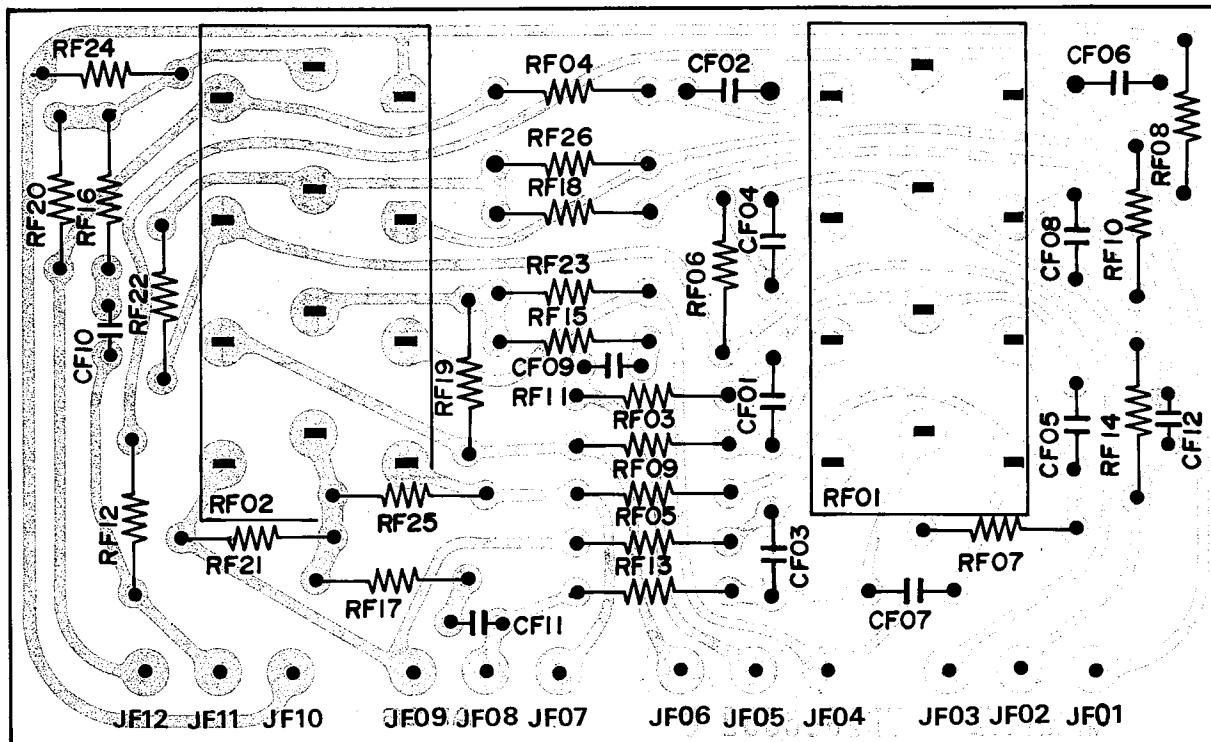


Figure 15. Tone Control Unit Assembly PF01 Component Locations

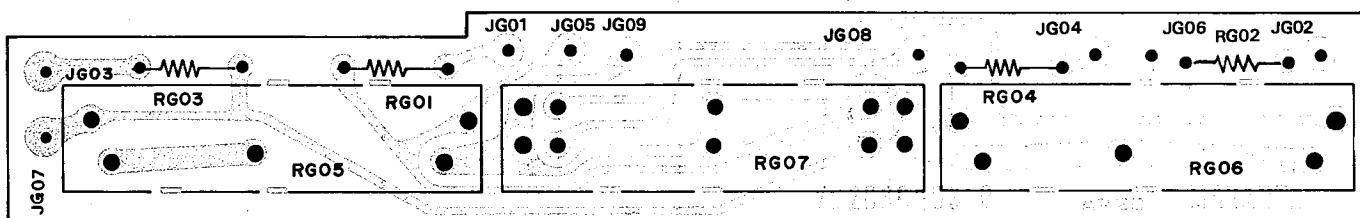


Figure 16. Balance Control Unit Assembly PG01 Component Locations

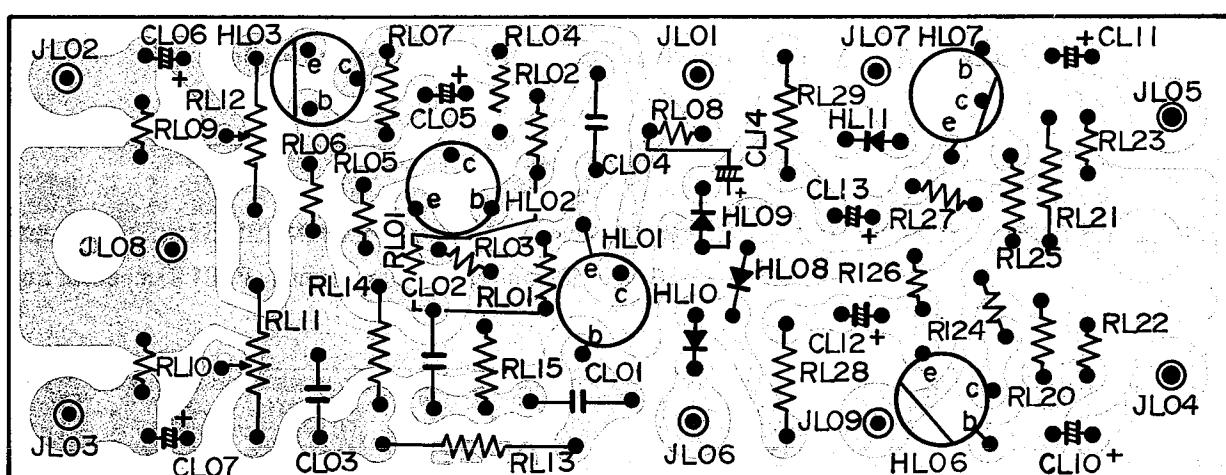


Figure 17. 400Hz Oscillator and Meter Driver Assembly PL01 Component Locations

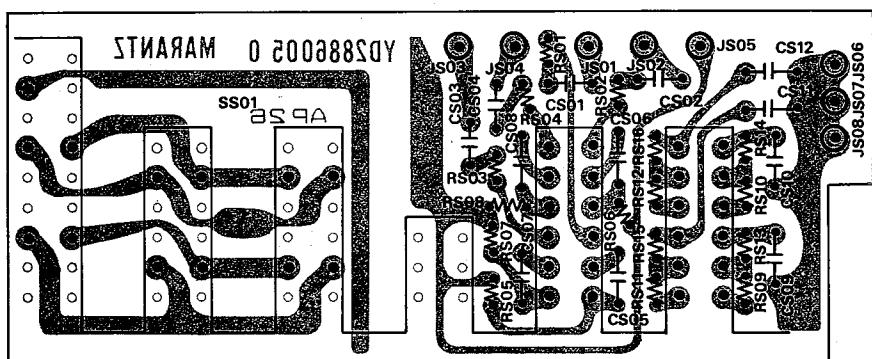


Figure 18. Loudness, Hi Filter, Speaker and Power Switch Unit Assembly PS01 Component Locations

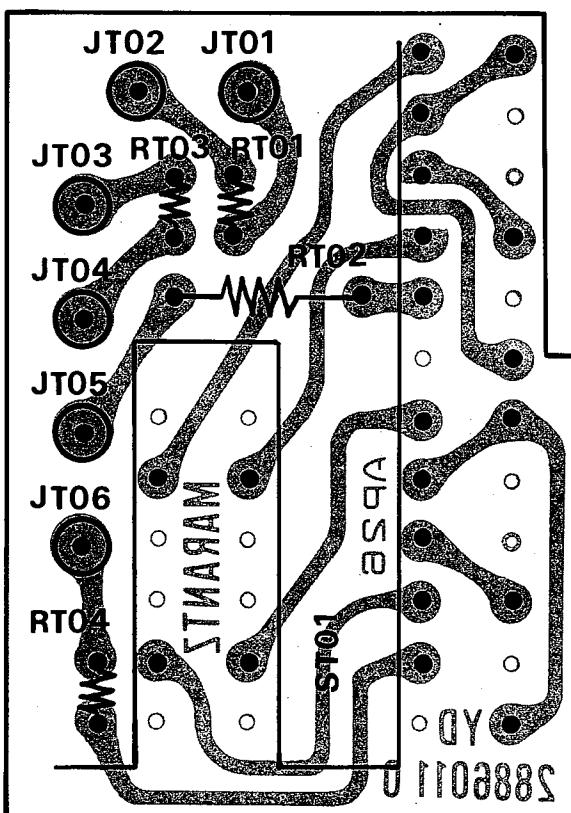


Figure 19. Tape Monitor Switch Unit Assembly PT01 Component Locations



Figure 20. Indicator Lamps Assembly PY01 Component Locations



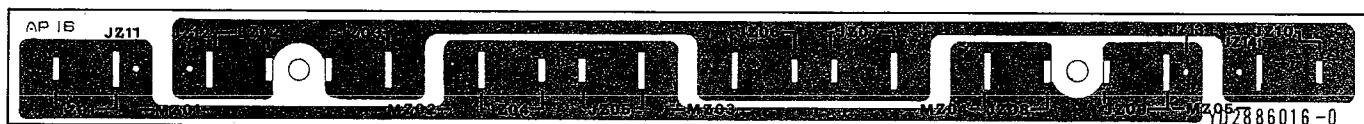


Figure 21. Dial Lamps Assembly PZ01 Component Locations

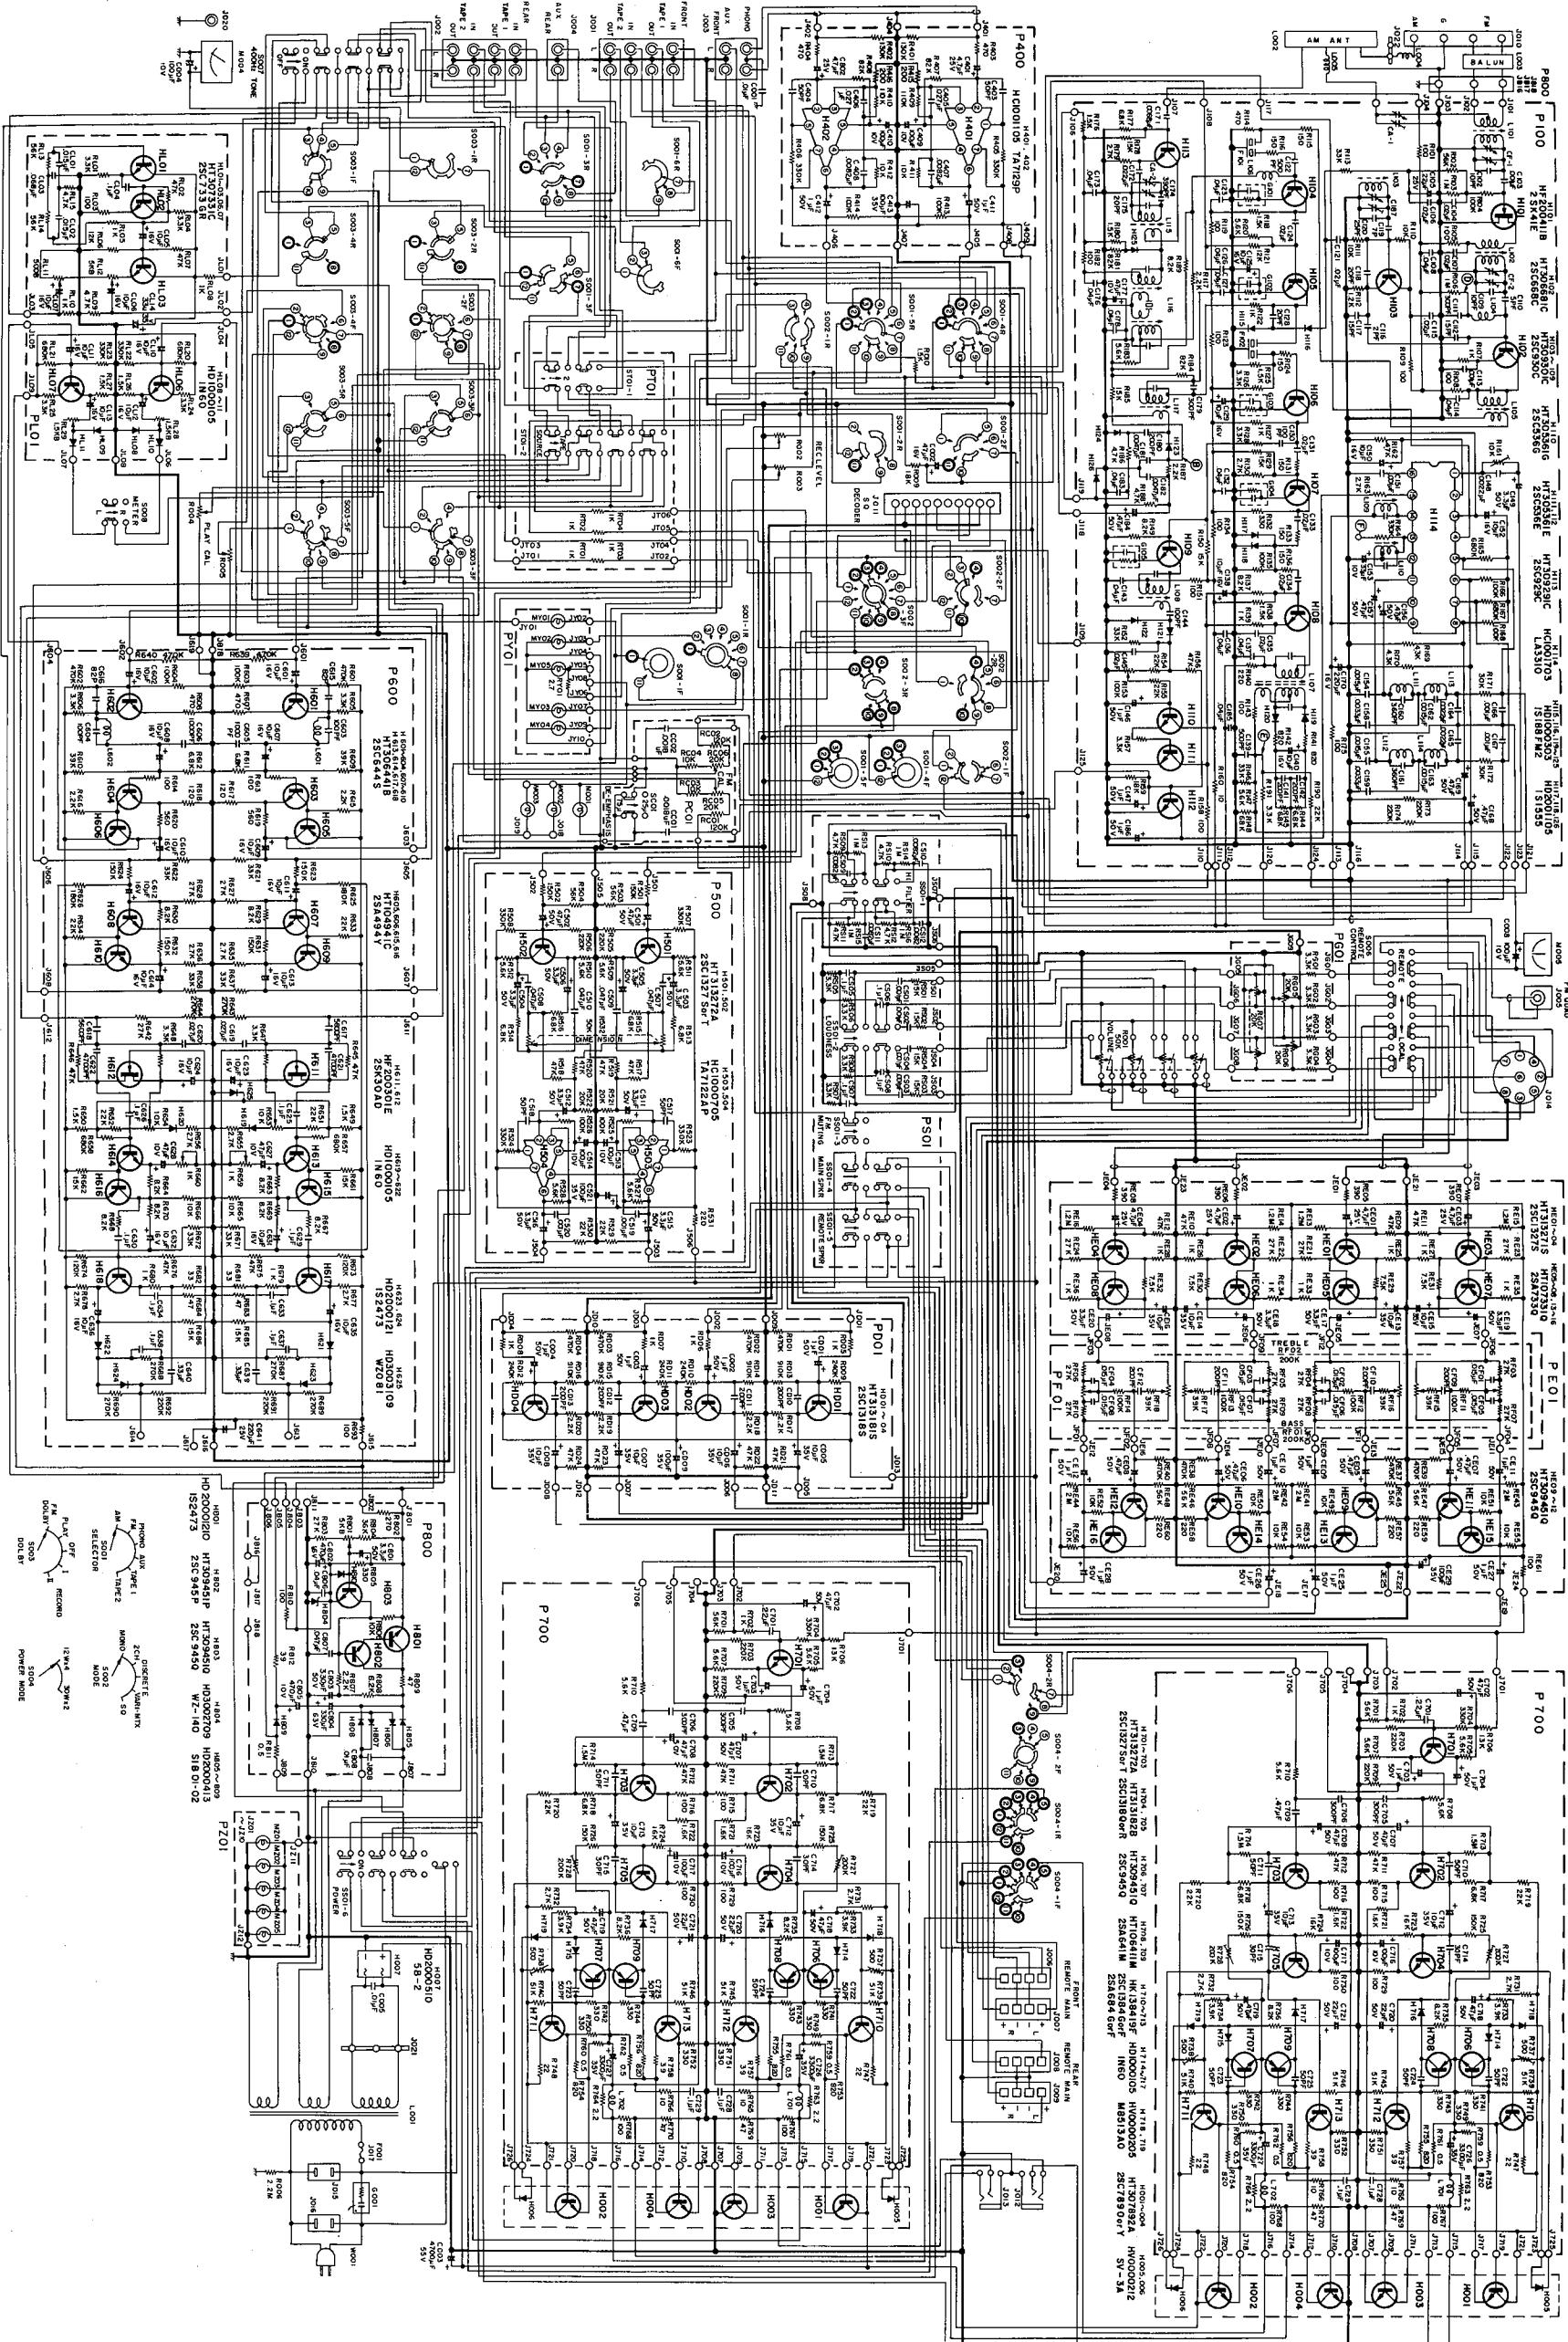

**Figure 22.** Schematic Diagram

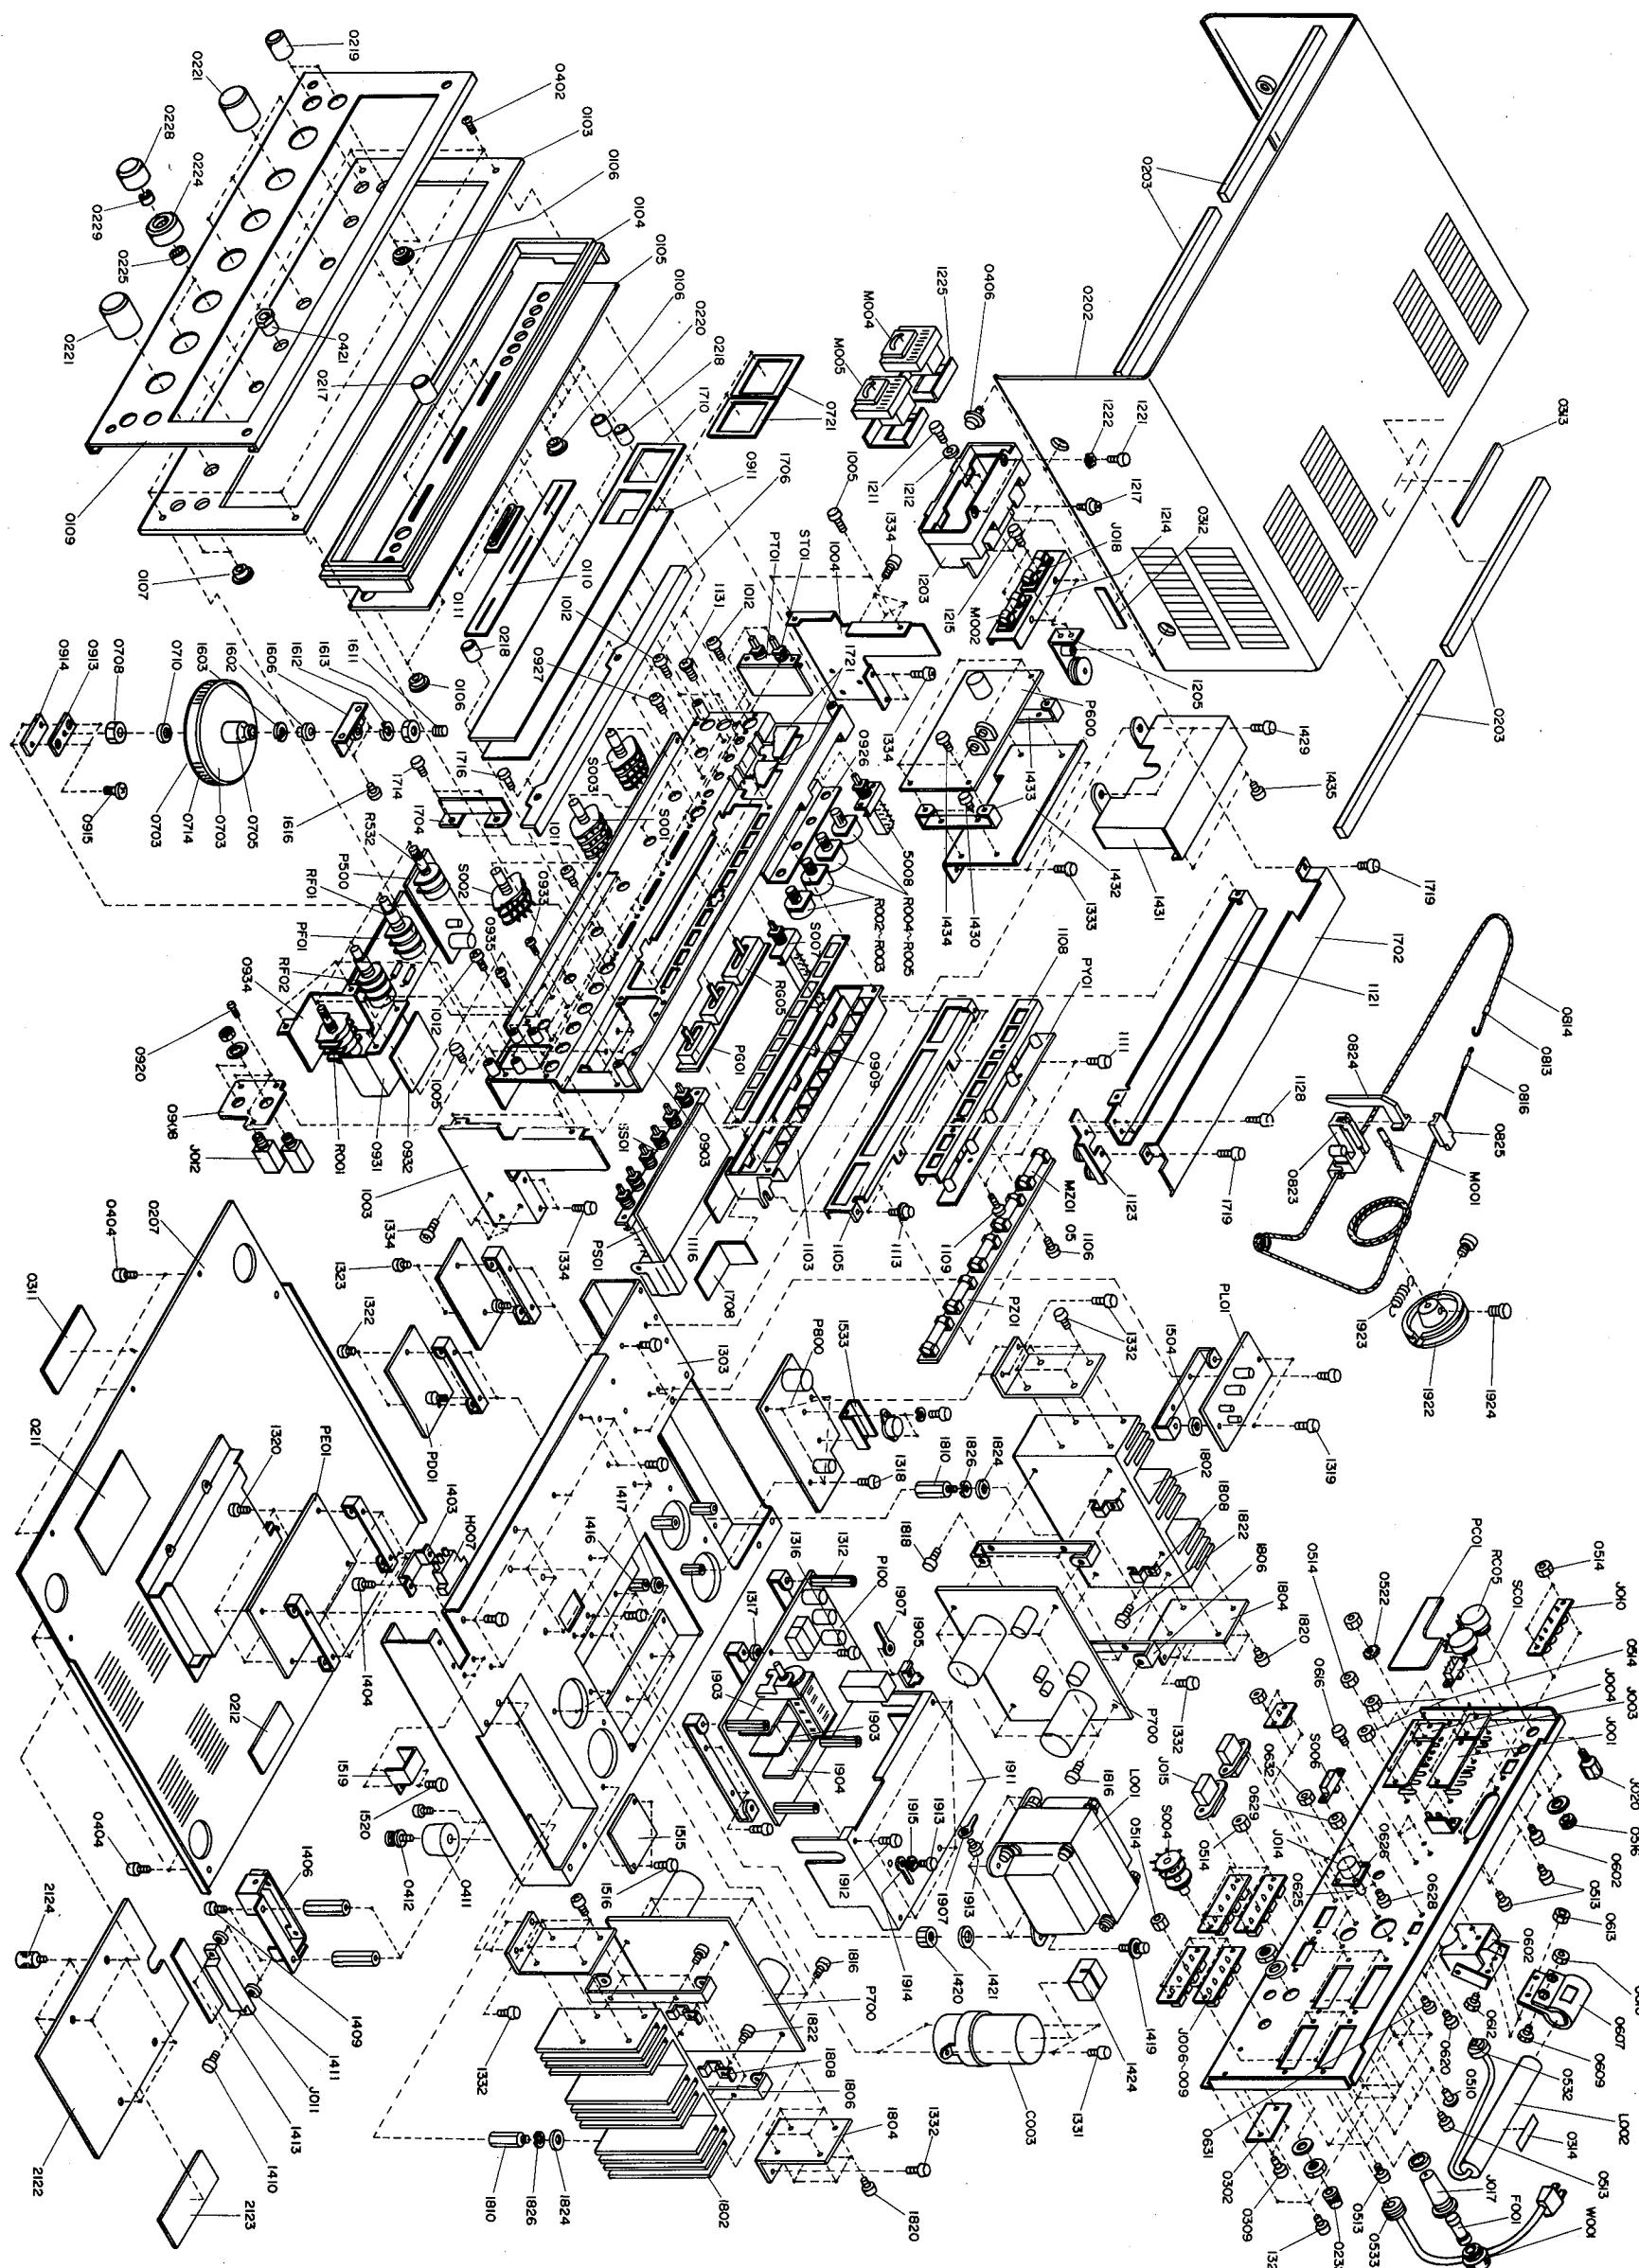

## PARTS LIST

REF. DESIG.	MARANTZ PART NO.	DESCRIPTION	REF. DESIG.	MARANTZ PART NO.	DESCRIPTION
A 0103 0104 0105 0106 0107 0109 0110 0111	288606340 288606301 285340101 288615801 288625901 273125901 288605302 289010701 285025901	Front Panel Assembly for U.S.A. Escutcheon Frame Window Bush x 10 Bush x 2 Cover Sheet Bush x 3	P100	YD2886001 ZZ2886001	P.W. Board P.W. Board Ass'y
A1 0103 0104 0105 0106 0107 0110 0111	288606341 288606301 285340101 288615801 288625901 273125901 289010701 285025901	Front Panel Assembly for CANADA Escutcheon Frame Window Bush x 10 Bush x 2 Sheet Bush x 3	R101 R102 R103 R104 R105 R106 R107 R108 R109 R110 R111 R112 R113 R114 R115 R116 R117 R118 R119 R120	RT0510114 RT0556314 RT0510514 RT0510414 RT0510114 RT0510514 RT0510214 RT0510114 RT0510114 RT0510314 RT0510314 RT0512214 RT0533314 RT0547114 RT0515114 RT0515114 RT0582214 RT0515214 RT0510114 RT0556214	<b>RESISTORS</b> All resistors are ±5% and 1/4W, otherwise indicated. 100Ω 56KΩ 1MΩ 100KΩ 100Ω 1MΩ 1KΩ 100Ω 100Ω 10KΩ 1.2KΩ 33KΩ 470Ω 150Ω 150Ω 8.2KΩ 1.5KΩ 100Ω 5.6KΩ
B 0207 0211 0212	285325743 285325750 288812001 285612001	Lid Assembly Lid K Insulator Insulator	R121 R122 R123 R124 R125 R126 R127 R128 R129 R130	RT0512314 RT0510214 RT0510114 RT0515114 RT0515214 RT0533214 RT0510214 RT0533214 RT0515314 RT0527214	12KΩ 1KΩ 100Ω 150Ω 1.5KΩ 3.3KΩ 1KΩ 3.3KΩ 15KΩ 2.7KΩ
D 0228 0229	281815441 281815405 71400159Q	Knob Assembly Knob Spring	R131 R132 R133 R134 R135 R136 R137 R138 R139 R140 R141 R142 R143 R144 R145 R146 R147 R148 R149 R150	RT0515114 RT0533114 RT0515114 RT0510114 RT0510414 RT0515114 RT0582214 RT0515314 RT0510214 RT0522114 RT0582114 RT0582114 RT0510114 RT0568214 RT0568214 RT0518314 RT0510314 RT0522314 RT0582214 RT0515314	150Ω 330Ω 150Ω 100Ω 100KΩ 150Ω 8.2KΩ 15KΩ 1KΩ 220Ω 820Ω 820Ω 100Ω 6.8KΩ 6.8KΩ 18KΩ 10KΩ 22KΩ 8.2KΩ 15KΩ
F 0703 0704 0705 0708 0710	285327340 257706302 257727301 285311201 53110603E 54020601E	Fly Wheel Assembly Escutcheon x 2 Fly Wheel Shaft Hexagon Nut Flat Washer	R151 R152 R153 R154 R155 R156 R157 R158	RT0510114 RT0533314 RA0104015 RT0522314 RT0522314 RT0547314 RT0533214 RT0510114	100Ω 33KΩ Trimming, 100KΩ (B) 22KΩ 22KΩ 47KΩ 3.3KΩ 100Ω
G 0813 0814	120200640 120225801 72080802A	String Assembly Hook String			
H 0823 0824 0825 M001	281810341 281810301 281810302 281805301 IN1008030	Pointer Assembly Pointer Pointer Cover Lamp			
I 1922 1923 1924	281915941 281915901 71101569M 51064019A	Drum Assembly Drum Spring Screw x 2			

REF. DESIG.	MARANTZ PART NO.	DESCRIPTION	REF. DESIG.	MARANTZ PART NO.	DESCRIPTION
R159	RT0518314	18KΩ	C129	EA1060169	Electroly,
R160	RT0510014	10Ω	C130	DD1610101	Ceramic, 10μF, 16V 100PF ± 10%
R161	RA0103020	Trimming, 10KΩ (B)	C131	DK1820302	Ceramic, 0.02μF +100%, -0%
R162	RT0547214	4.7KΩ	C132	DK1840302	Ceramic, 0.04μF +80%, -20%
R163	RT0518214	1.8KΩ	C133	DK1820302	Ceramic, 0.02μF +100%, -0%
R164	RC1033412	330KΩ ± 10%, ½W	C134	DK1820302	Ceramic, 0.02μF +100%, -0%
R165	RT0568414	680KΩ	C135	DK1820302	Ceramic, 0.02μF +100%, -0%
R166	RT0510414	100KΩ	C136	DK1840302	Ceramic, 0.04μF +80%, -20%
R167	RT0568414	680KΩ	C137	DK1840302	Ceramic, 0.04μF +80%, -20%
R168	RT0510414	100KΩ	C138	EA1060169	Electroly, 10μF, 16V
R169	RT0543214	4.3KΩ	C139	DD1650101	Ceramic, 500PF ± 10%
R170	RT0543214	4.3KΩ	C140	EA1060169	Electroly, 10μF, 16V
R171	RT0530314	30KΩ	C141	DD1620101	Ceramic, 200PF ± 10%
R172	RT0530314	30KΩ	C142	DD1620101	Ceramic, 200PF ± 10%
R173	RT0522414	220KΩ	C143	DK1840302	Ceramic, 0.04μF +80%, -20%
R174	RT0522414	220KΩ	C144	DD1610101	Ceramic, 100PF ± 10%
R175	RT0510114	100Ω	C145	DK1820302	Ceramic, 0.02μF +100%, -0%
R176	RT0515214	1.5KΩ	C146	EA1050509	Electroly, 1μF, 50V
R177	RT0568214	6.8KΩ	C147	EA1050509	Electroly, 1μF, 50V
R178	RT0515314	15KΩ	C148	DF1722201	Film, 0.0022μF ± 20%
R179	RT0527214	2.7KΩ	C149	EA3350509	Electroly, 3.3μF, 50V
R180	RT0515214	1.5KΩ	C150	EA1060169	Electroly, 10μF, 16V
R181	RT0582314	82KΩ	C151	DF1610201	Film, 0.001μF ± 10%
R182	RT0510114	100Ω	C152	EA1060169	Electroly, 10μF, 16V
R183	RT0556214	5.6KΩ	C153	EA3360109	Electroly, 33μF, 10V
R184	RT0582314	82KΩ	C154	DF1615205	Film, 0.0015μF ± 10%
R185	RT0515314	15KΩ	C155	DF1615205	Film, 0.0015μF ± 10%
R186	RT0547214	4.7KΩ	C156	EA4740501	Electroly, 0.47μF, 50V
R187	RT0522214	2.2KΩ	C157	EA4740501	Electroly, 0.47μF, 50V
R188	RT0547214	4.7KΩ	C158	DF1633205	Film, 0.0033μF ± 10%
R189	RT0522214	2.2KΩ	C159	DF1633205	Film, 0.0033μF ± 10%
R190	RT0522314	22KΩ	C160	DD1536101	Film, 360PF ± 5%
R191	RT0533214	3.3KΩ	C161	DD1536101	Film, 360PF ± 5%
<b>CAPACITORS</b>			C162	DF1518205	Film, 0.0018μF ± 5%
C101	CA3240007	Variable, FM-3, AM-2, Gang	C163	DF1518205	Film, 0.0018μF ± 5%
C102	DD1210001	Ceramic, 10PF ± 10%	C164	DF1622205	Film, 0.0022μF ± 10%
C103	DK1710201	Ceramic, 0.001μF ± 20%	C165	DF1622205	Film, 0.0022μF ± 10%
C104	DK1820302	Ceramic, 0.02μF +100%, -0%	C166	DF1510205	Film, 0.001μF ± 5%
C105	EM2240251	Electroly, 0.22μF, 25V	C167	DF1510205	Film, 0.001μF ± 5%
C106	DK1820302	Ceramic, 0.02μF +100%, -0%	C168	EA4740501	Electroly, 0.47μF, 50V
C107	DK1820302	Ceramic, 0.02μF +100%, -0%	C169	EA4740501	Electroly, 0.47μF, 50V
C108	DK1840302	Ceramic, 0.04μF +80%, -20%	C170	EA2270169	Electroly, 220μF, 16V
C109	DD1210001	Ceramic, 10PF ± 10%	C171	DF1768201	Film, 0.0068μF ± 20%
C110	DD1105001	Ceramic, 5PF ± 0.5PF	C172	DF1722301	Film, 0.022μF ± 20%
C111	DD1530101	Ceramic, 300PF ± 5%	C173	DF1740301	Film, 0.04μF ± 20%
C112	DD1615003	Ceramic, 15PF ± 10%	C174	DF6539101	Film, 390PF ± 5%
C113	DK1710201	Ceramic, 0.001μF ± 20%	C175	DD1620001	Ceramic, 20PF ± 10%
C114	DK1840302	Ceramic, 0.04μF +80%, -20%	C176	DF1740301	Film, 0.04μF ± 20%
C115	DK1820302	Ceramic, 0.02μF +100%, -0%	C177	EA4760109	Electroly, 47μF, 10V
C116	DD1102004	Ceramic, 2PF ± 0.5PF	C178	DK1840302	Ceramic, 0.04μF +80%, -20%
C117	DD1615003	Ceramic, 15PF ± 10%	C179	DD1530101	Ceramic, 300PF ± 5%
C118	DD1520001	Ceramic, 20PF ± 5%	C180	DD1620101	Ceramic, 200PF ± 10%
C119	DD1207003	Ceramic, 7PF ± 1PF	C181	DF1647201	Film, 0.0047μF ± 10%
C120	DD1525002	Ceramic, 25PF ± 5%	C182	DF1610301	Film, 0.01μF ± 10%
C121	DK1820302	Ceramic, 0.02μF +100%, -0%	C183	DK1840302	Ceramic, 0.04μF +80%, -20%
C122	DD1650101	Ceramic, 500PF ± 10%	C184	EA4740501	Electroly, 0.47μF, 50V
C123	DK1840302	Ceramic, 0.04μF +80%, -20%	C185	DK1840302	Ceramic, 0.04μF +80%, -20%
C124	DK1820302	Ceramic, 0.02μF +100%, -0%	C186	EA1050509	Electroly, 1μF, 50V
C125	EA1060169	Electroly, 10μF, 16V	C187	CT1100008	Trimming, FM OSC
C126	DK1840302	Ceramic, 0.04μF +80%, -20%	G101	BF4030001	<b>MISCELLANEOUS</b>
C127	DK1840302	Ceramic, 0.04μF +80%, -20%	G102	BF2230008	Printed Compo., 0.04μF + 270Ω
C128	DD1620001	Ceramic, 20PF ± 10%			Printed Compo., 0.022μF + 270Ω

REF. DESIG.	MARANTZ PART NO.	DESCRIPTION	REF. DESIG.	MARANTZ PART NO.	DESCRIPTION
G103	BF2230007	Printed Compo., 0.022μF + 680Ω	1904	286710901	Shield
G104	BF2230006	Printed Compo., 0.022μF + 1KΩ	1905	285010902	Shield
G105	BF2230006	Printed Compo., 0.022μF + 1KΩ	1914	62031650W	Lug
F101	FF1107004	Ceramic Filter, CFS107M	1907	138200503	Clamper x 2
F102	FF1107004	Ceramic Filter, CFS107M	P400	YD2886013 ZZ2886013	P.W. Board, Phono EQ P.W. Board Ass'y
<b>COILS and TRANSFORMERS</b>			<b>RESISTORS</b> <i>All resistors are ±5% and 1/4W, unless otherwise indicated.</i>		
L101	LA1004606	Ant. Coil, FM	R401	RT0591314	91KΩ
L102	LA1027809	RF Coil, FM	R402	RT0591314	91KΩ
L103	LO1203601	OSC Coil, FM	R403	RT0547114	470Ω
L104	LC1751001	Choke Coil, 0.75μH	R404	RT0547114	470Ω
L105	LI1001601	IFT, FM	R405	RN1082414	820KΩ ± 10%, 1/4W
L106	LC1223002	Choke Coil, 22μH	R406	RN1082414	820KΩ ± 10%, 1/4W
L107	LI1401623	IFT, FM	R407	RN1010414	100KΩ ± 10%, 1/4W
L108	LI1015602	IFT, FM	R408	RN1010414	100KΩ ± 10%, 1/4W
L109	LS1031001	MPX Coil, 19KHz	R409	RT0512414	120KΩ
L110	LS1031004	MPX Coil, 38KHz	R410	RT0512414	120KΩ
L111	LC2576001	Choke Coil, 57mH	R411	RT0510314	10KΩ
L112	LC2576001	Choke Coil, 57mH	R412	RT0510314	10KΩ
L113	LC2446001	Choke Coil, 44mH	R413	RT0510414	100KΩ
L114	LC2446001	Choke Coil, 44mH	R414	RT0510414	100KΩ
L115	LO1001042	OSC Coil, AM	R415	RT0520114	200Ω
L116	LI1028004	IFT, AM	R416	RT0520114	200Ω
L117	LI1001048	IFT, AM	<b>CAPACITORS</b>		
<b>SEMICONDUCTORS</b>			C401	EE4750251	Electroly, 4.7μF ± 20%, 25V
H101	HF200411B	FET, 2SK41E	C402	EE4750251	Electroly, 4.7μF ± 20%, 25V
H102	HT306681C	Transistor, 2SC668C	C403	DD1650001	Ceramic, 50PF ± 10%, 50V
H103	HT309301C	Transistor, 2SC930C	C404	DD1650001	Ceramic, 50PF ± 10%, 50V
H104	HT309301C	Transistor, 2SC930C	C405	DF1527305	Film, 0.027μF ± 5%, 50V
H105	HT309301C	Transistor, 2SC930C	C406	DF1527305	Film, 0.027μF ± 5%, 50V
H106	HT309301C	Transistor, 2SC930C	C407	DF1582205	Film, 0.0082μF ± 5%, 50V
H107	HT309301C	Transistor, 2SC930C	C408	DF1582205	Film, 0.0082μF ± 5%, 50V
H108	HT309301C	Transistor, 2SC930C	C409	EA2270069	Electroly, 220μF +100%, -10%, 6V
H109	HT309301C	Transistor, 2SC930C	C410	EA2270069	Electroly, 220μF +100%, -10%, 6V
H110	HT305361G	Transistor, 2SC536G	C411	EE1050501	Electroly, 1μF ± 20%, 50V
H111	HT305361E	Transistor, 2SC536E	C412	EE1050501	Electroly, 1μF ± 20%, 50V
H112	HT305361E	Transistor, 2SC536E	C413	EA1070359	Electroly, 100μF +100%, -10%, 35V
H113	HT309291C	Transistor, 2SC929C	<b>SEMICONDUCTORS</b>		
H114	HC1001703	IC, LA3310	H401	HC1001105	IC, TA7129P
H115	HD1000303	Diode, 1S188FM2	H402	HC1001105	IC, TA7129P
H116	HD1000303	Diode, 1S188FM2	<b>MISCELLANEOUS</b>		
H117	HD2001105	Diode, 1S1555	J401	YP1000113	Plug
H118	HD2001105	Diode, 1S1555	J409	YP1000113	Plug
H119	HD1000303	Diode, 1S188FM2	P600	YD2886008 ZZ2886008	P.W. Board, Dolby P.W. Board Ass'y
H120	HD1000303	Diode, 1S188FM2	<b>RESISTORS</b> <i>All resistors are ±5% and 1/4W, unless otherwise indicated.</i>		
H121	HD1000303	Diode, 1S188FM2	R601	RT0547414	470KΩ
H122	HD1000303	Diode, 1S188FM2	R602	RT0547414	470KΩ
H123	HD1000303	Diode, 1S188FM2	R603	RT0510414	100KΩ
H124	HD1000303	Diode, 1S188FM2	R604	RT0510414	100KΩ
H125	HD1000303	Diode, 1S188FM2	R605	RT0533214	3.3KΩ
H126	HD2001105	Diode, 1S1555	R606	RT0533214	3.3KΩ
<b>MISCELLANEOUS</b>			R607	RT0547114	470Ω
J101	YP1000113	Plug			
J104	YP1000113	Plug			
J106	YP1000113	Plug			
J125	YP1000113	Plug			
1903	282110901	Shield x 2			

REF. DESIG.	MARANTZ PART NO.	DESCRIPTION	REF. DESIG.	MARANTZ PART NO.	DESCRIPTION
R608	RT0547114	470Ω	R673	RT0512414	120KΩ
R609	RT0539314	39KΩ	R674	RT0512414	120KΩ
R610	RT0539314	39KΩ	R675	RT0547314	47KΩ
R611	RT0568214	6.8KΩ	R676	RT0547314	47KΩ
R612	RT0568214	6.8KΩ	R677	RT0527214	2.7KΩ
R613	RT0510114	100Ω	R678	RT0527214	2.7KΩ
R614	RT0510114	100Ω	R679	RT0510214	1KΩ
R615	RT0522214	2.2KΩ	R680	RT0510214	1KΩ
R616	RT0522214	2.2KΩ	R681	RT0533014	33Ω
R617	RT0512114	120Ω	R682	RT0533014	33Ω
R618	RT0512114	120Ω	R683	RT0547014	47Ω
R619	RT0556114	560Ω	R684	RT0547014	47Ω
R620	RT0556114	560Ω	R685	RT0515314	15KΩ
R621	RT0533314	33KΩ	R686	RT0515314	15KΩ
R622	RT0533314	33KΩ	R687	RT0527414	270KΩ
R623	RT0515414	150KΩ	R688	RT0527414	270KΩ
R624	RT0515414	150KΩ	R689	RT0527414	270KΩ
R625	RT0518414	180KΩ	R690	RT0527414	270KΩ
R626	RT0518414	180KΩ	R691	RT0522414	220KΩ
R627	RT0527314	27KΩ	R692	RT0522414	220KΩ
R628	RT0527314	27KΩ	R693	RC1010112	100Ω ± 10%, ½W
R629	RT0582214	8.2KΩ			<b>CAPACITORS</b>
R630	RT0582214	8.2KΩ	C601	EE3350251	Electroly, 3.3μF, 25V
R631	RT0515414	150KΩ	C602	EE3350251	Electroly, 3.3μF, 25V
R632	RT0515414	150KΩ	C603	DF6610101	Film, 100PF ± 10%
R633	RT0522314	22KΩ	C604	DF6610101	Film, 100PF ± 10%
R634	RT0522314	22KΩ	C605	DF1510205	Film, 1000PF ± 5%
R635	RT0527214	2.7KΩ	C606	DF1510205	Film, 1000PF ± 5%
R636	RT0527214	2.7KΩ	C607	EA1060169	Electroly, 10μF, 16V
R637	RT0533314	33KΩ	C608	EA1060169	Electroly, 10μF, 16V
R638	RT0533314	33KΩ	C609	EA1060169	Electroly, 10μF, 16V
R639	RT0547414	470KΩ	C610	EA1060169	Electroly, 10μF, 16V
R640	RT0547414	470KΩ	C611	EA1060169	Electroly, 10μF, 16V
R643	RT0527414	270KΩ	C612	EA1060169	Electroly, 10μF, 16V
R644	RT0527414	270KΩ	C613	EA1060169	Electroly, 10μF, 16V
R645	RT0547314	47KΩ	C614	EA1060169	Electroly, 10μF, 16V
R646	RT0547314	47KΩ	C615	DD1582001	Ceramic, 82PF ± 5%
R647	RT0533214	3.3KΩ	C616	DD1582001	Ceramic, 82PF ± 5%
R648	RT0533214	3.3KΩ	C617	DF1556205	Film, 5600PF ± 5%
R649	RT0515214	1.5KΩ	C618	DF1556205	Film, 5600PF ± 5%
R650	RT0515214	1.5KΩ	C619	DF1527305	Film, 0.027μF ± 5%
R651	RT0522314	22KΩ	C620	DF1527305	Film, 0.027μF ± 5%
R652	RT0522314	22KΩ	C621	DF1547205	Film, 4700PF ± 5%
R653	RA0103022	Variable, 10KΩ (B)	C622	DF1547205	Film, 4700PF ± 5%
R654	RA0103022	Variable, 10KΩ (B)	C623	EA1060169	Electroly, 10μF, 16V
R655	RT0527214	2.7KΩ	C624	EA1060169	Electroly, 10μF, 16V
R656	RT0527214	2.7KΩ	C625	DF1610405	Film, 0.1μF ± 10%
R657	RT0568414	680KΩ	C626	DF1610405	Film, 0.1μF ± 10%
R658	RT0568414	680KΩ	C627	EA4760109	Electroly, 47μF, 10V
R659	RA0102020	Variable, 1KΩ (B)	C628	EA4760109	Electroly, 47μF, 10V
R660	RA0102020	Variable, 1KΩ (B)	C629	DF1610405	Film, 0.1μF ± 10%
R661	RT0515314	15KΩ	C630	DF1610405	Film, 0.1μF ± 10%
R662	RT0515314	15KΩ	C631	EA1060169	Electroly, 10μF, 16V
R663	RT0582214	8.2KΩ	C632	EA1060169	Electroly, 10μF, 16V
R664	RT0582214	8.2KΩ	C633	DF1610405	Film, 0.1μF ± 10%
R665	RT0510314	10KΩ	C634	DF1610405	Film, 0.1μF ± 10%
R666	RT0510314	10KΩ	C635	EA1060169	Electroly, 10μF, 16V
R667	RT0582214	8.2KΩ	C636	EA1060169	Electroly, 10μF, 16V
R668	RT0582214	8.2KΩ	C637	DF1610405	Film, 0.1μF ± 10%
R669	RT0582214	8.2KΩ	C638	DF1610405	Film, 0.1μF ± 10%
R670	RT0582214	8.2KΩ	C639	DF1633405	Film, 0.33μF ± 10%
R671	RT0533314	33KΩ	C640	DF1633405	Film, 0.33μF ± 10%
R672	RT0533314	33KΩ			

REF. DESIG.	MARANTZ PART NO.	DESCRIPTION	REF. DESIG.	MARANTZ PART NO.	DESCRIPTION
C641	EA2270259	Electroly., 220μF, 25V	R703	RT0522414	220KΩ x 2
L601	LC2226004	<b>COILS</b>	R704	RT0533414	330KΩ x 2
L602	LC2226004	Choke, 22mH	R705	RT0556214	5.6KΩ x 2
		Choke, 22mH	R706	RT0513314	13KΩ x 2
H601	HT306441B	<b>SEMICONDUCTORS</b>	R707	RT0556214	5.6KΩ x 2
H602	HT306441B	Transistor, 2SC644 S	R708	RT0556214	5.6KΩ x 2
H603	HT306441B	Transistor, 2SC644 S	R709	RT0522414	220KΩ x 2
H604	HT306441B	Transistor, 2SC644 S	R710	RT0556214	5.6KΩ x 2
H605	HT104941C	Transistor, 2SA494 Y	R711	RT0547314	47KΩ x 2
H606	HT104941C	Transistor, 2SA494 Y	R712	RT0547314	47KΩ x 2
H607	HT306441B	Transistor, 2SC644 S	R713	RT0515514	1.5MΩ x 2
H608	HT306441B	Transistor, 2SC644 S	R714	RT0515514	1.5MΩ x 2
H609	HT306441B	Transistor, 2SC644 S	R715	RT0510114	100Ω x 2
H610	HT306441B	Transistor, 2SC644 S	R716	RT0510114	100Ω x 2
H611	HF200301E	Transistor, 2SK30 AD	R717	RT0568214	6.8KΩ x 2
H612	HF200301E	Transistor, 2SK30 AD	R718	RT0568214	6.8KΩ x 2
H613	HT306441B	Transistor, 2SC644 S	R719	RT0522314	22KΩ x 2
H614	HT306441B	Transistor, 2SC644 S	R720	RT0522314	22KΩ x 2
H615	HT104941C	Transistor, 2SA494 Y	R721	RT0516214	1.6KΩ x 2
H616	HT104941C	Transistor, 2SA494 Y	R722	RT0516214	1.6KΩ x 2
H617	HT306441B	Transistor, 2SC644 S	R723	RT0516314	16KΩ x 2
H618	HT306441B	Transistor, 2SC644 S	R724	RT0516314	16KΩ x 2
H621	HD1000105	Diode, 1N60	R725	RT0515414	150KΩ x 2
H622	HD1000105	Diode, 1N60	R726	RT0515414	150KΩ x 2
H623	HD2000121	Diode, 1S2473	R727	RA0204005	Variable, 200KΩ (B) x 2
H624	HD2000121	Diode, 1S2473	R728	RA0204005	Variable, 200KΩ (B) x 2
H625	HD3003109	Diode, WZ-081	R729	RT0510114	100Ω x 2
H626	HD2000121	Diode, 1S2473	R730	RT0510114	100Ω x 2
H627	HD2000121	Diode, 1S2473	R731	RT0527214	2.7KΩ x 2
H628	HD2000121	Diode, 1S2473	R732	RT0527214	2.7KΩ x 2
H629	HD2000121	Diode, 1S2473	R733	RT0539214	3.9KΩ x 2
J601	YP1000109	<b>MISCELLANEOUS</b>	R734	RT0539214	3.9KΩ x 2
J608			R735	RT0582214	8.2KΩ x 2
J611	YP1000109	Plug	R736	RT0582214	8.2KΩ x 2
J621			R737	RA0501010	Variable, 500Ω (B) x 2
1430	51570305B	P.H. Tapt Screw x 4	R738	RA0501010	Variable, 500Ω (B) x 2
1432	288616003	Bracket	R739	RT0551314	51KΩ x 2
1433	288616004	Bracket x 2	R740	RT0551314	51KΩ x 2
1434	51100305S	B.H.M. Screw x 4	R741	GF0533114	330Ω x 2
2036	54050300R	T.L. Washer OR x 2	R742	GF0533114	330Ω x 2
1810	281810104	Support x 2	R743	GF0533114	330Ω x 2
1816	51100306S	B.H.M. Screw x 8	R744	GF0533114	330Ω x 2
1824	54020401A	Flat Washer x 2	R745	RT0551314	51KΩ x 2
1826	54040402N	Spring Washer x 2	R746	RT0551314	51KΩ x 2
P700	YD2886004	P.W. Board, Main Amp. x 2	R747	GF0522014	22Ω x 2
	ZZ2886004	P.W. Board Ass'y x 2	R748	GF0522014	22Ω x 2
		<b>RESISTORS</b>	R749	GF0533114	330Ω x 2
		All resistors are ±5% and 1/4W, unless otherwise indicated.	R750	GF0533114	330Ω x 2
R701	RT0556314	56KΩ x 2	R751	GF0533114	330Ω x 2
R702	RT0510214	1KΩ x 2	R752	GF0533114	330Ω x 2
			R753	GF0582114	820Ω x 2
			R754	GF0582114	820Ω x 2
			R755	GF0582114	820Ω x 2
			R756	GF0582114	820Ω x 2
			R757	GF0539014	39Ω x 2
			R758	GF0539014	39Ω x 2
			R759	RW1000503	0.5Ω ± 10%, 3W x 2
			R760	RW1000503	0.5Ω ± 10%, 3W x 2
			R761	RW1000503	0.5Ω ± 10%, 3W x 2
			R762	RW1000503	0.5Ω ± 10%, 3W x 2
			R763	RC1002212	2.2Ω ± 10%, 1/2W x 2
			R764	RC1002212	2.2Ω ± 10%, 1/2W x 2
			R765	RC1010012	10Ω ± 10%, 1/2W x 2

REF. DESIG.	MARANTZ PART NO.	DESCRIPTION	REF. DESIG.	MARANTZ PART NO.	DESCRIPTION
R766	RC1010012	10Ω ± 10%, ½W x 2	H004	HT307892A	Transistor, 2SC789 O or Y x 2
R767	RJ1010101	100Ω ± 10%, 1W x 2	H005	HV0000212	Diode, SV 3X x 2
R768	RJ1010101	100Ω ± 10%, 1W x 2	H006	HV0000212	Diode, SV 3X x 2
R769	RC1047012	47Ω ± 10%, ½W x 2			
R770	RC1047012	47Ω ± 10%, ½W x 2			
		<b>SEMICONDUCTORS</b>			<b>MISCELLANEOUS</b>
H701	HT313272A	Transistor, 2SC1327 S or T x 2	J701	YP1000114	Plug x 2
H702	HT313272A	Transistor, 2SC1327 S or T x 2	J706		
H703	HT313272A	Transistor, 2SC1327 S or T x 2	J707	YP1000091	Plug x 2
H704	HT313182B	Transistor, 2SC1318 Q or R x 2	J708	YP1000091	Plug x 2
H705	HT313182B	Transistor, 2SC1318 Q or R x 2	J709	YP1000114	Plug x 2
H706	HT309451Q	Transistor, 2SC945 Q x 2	J726		
H707	HT309451Q	Transistor, 2SC945 Q x 2			
H708	HT106411M	Transistor, 2SA641 M x 2	1802	285126701	Heat Sink x 2
H709	HT106411M	Transistor, 2SA641 M x 2	1804	282016007	Bracket x 4
H710	HT313841F	Transistor, 2SC1384 F or G x 2	1806	285116006	Bracket x 4
H711	HT313841F	Transistor, 2SC1384 F or G x 2	1808	282026702	Heat Sink x 4
H712	HT106841F	Transistor, 2SA684 F or G x 2			
H713	HT106841F	Transistor, 2SA684 F or G x 2	1818	51380306P	P.H. Tapt Screw x 8
H714	HD1000105	Diode, 1N60 x 2	1820	51380306P	P.H. Tapt Screw x 16
H715	HD1000105	Diode, 1N60 x 2	1822	51100308S	B.H.M. Screw x 4
H716	HD1000105	Diode, 1N60 x 2	1828	51060312E	P.H.M. Screw x 8
H717	HD1000105	Diode, 1N60 x 2	1830	54040302N	Spring Washer x 8
H718	HV0000205	Diode, M8513 A-O x 2	1832	62031340W	Lug x 8
H719	HV0000205	Diode, M8513 A-O x 2	1834	53110303E	Hexagon Nut x 8
		<b>CAPACITORS</b>			
C701	DF1622405	Film, 0.22μF ± 10%, 50V x 2	P800	YD2886006	P.W. Board, Power Supply
C702	EA4760509	Electroly, 47μF +100%,-10%, 50V x 2		ZZ2886006	P.W. Board Ass'y
C703	EE1050501	Electroly, 1μF ± 20%, 50V x 2			
C704	EE1050501	Electroly, 1μF ± 20%, 50V x 2			
C705	DD1530101	Ceramic, 300PF ± 5%, 50V x 2	R801	RA0502010	<b>RESISTORS</b>
C706	DD1530101	Ceramic, 300PF ± 5%, 50V x 2	R802	GJ0527102	All resistors are ±5% and ¼W, unless otherwise indicated.
C707	EA4760509	Electroly, 47μF +100%,-10%, 50V x 2	R803	RT0527314	Variable, 5KΩ (B)
C708	EA4760509	Electroly, 47μF +100%,-10%, 50V x 2	R804	RT0536314	270Ω ± 5%, 2W
C709	DF1647405	Film, 0.47μF ± 10%, 50V x 2	R805	GJ0533102	27KΩ
C710	DD1650001	Ceramic, 50PF ± 10%, 50V x 2	R806	RT0510314	36KΩ
			R807	RT0522214	330Ω ± 5%, 2W
C711	DD1650001	Ceramic, 50PF ± 10%, 50V x 2	R808	RT0562214	10KΩ
C712	EA1060359	Electroly, 10μF +100%,-10%, 35V x 2	R809	GJ0547003	2.2KΩ
C713	EA1060359	Electroly, 10μF +100%,-10%, 35V x 2	R810	RC1010112	6.2KΩ
C714	DD1630001	Ceramic, 30PF ± 10%, 50V x 2			47Ω ± 5%, 3W
C715	DD1630001	Ceramic, 30PF ± 10%, 50V x 2	R811	RW1000503	100Ω ± 10%, ½W
C716	EA1070109	Electroly, 100μF +100%,-10%, 10V x 2	R812	RC1039012	0.5Ω ± 10%, 3W
C717	EA1070109	Electroly, 100μF +100%,-10%, 10V x 2			39Ω ± 10%, ½W
C718	EA4760509	Electroly, 47μF +100%,-10%, 50V x 2			
C719	EA4760509	Electroly, 47μF +100%,-10%, 50V x 2			
C720	EA2260509	Electroly, 22μF +100%,-10%, 50V x 2			
		<b>CAPACITORS</b>			
C721	EA2260509	Electroly, 22μF +100%,-10%, 50V x 2	C801	EA3350509	Electroly, 3.3μF +100%, -10%, 50V
C722	DD1650001	Ceramic, 50PF ± 10%, 50V x 2	C802	EA4770169	Electroly, 470μF +100%, -10%, 16V
C723	DD1650001	Ceramic, 50PF ± 10%, 50V x 2	C803	EA3370509	Electroly, 330μF +100%, -10%, 50V
C724	DD1650001	Ceramic, 50PF ± 10%, 50V x 2	C804	EA3370631	Electroly, 330μF +100%, -10%, 63V
C725	DD1650001	Ceramic, 50PF ± 10%, 50V x 2	C805	EA4770109	Electroly, 470μF +100%, -10%, 10V
C726	EB3380353	Ceramic, 50PF ± 10%, 50V x 2	C806	DK1840302	Ceramic, 0.04μF +100%, -0%, 50V
C727	EB3380353	Electroly, 3300μF +100%,-10%, 35V x 2	C807	DF1747305	Film, 0.047μF ± 20%, 50V
C728	DF1710405	Electroly, 3300μF +100%,-10%, 35V x 2	C808	DK1810351	Ceramic, 0.01μF +100%, -0%, 500V
C729	DF1710405	Film, 0.1μF ± 20%, 50V x 2			
		<b>COILS</b>			
L701	LL2391512	Choke Coil x 2	H801	HT403152B	<b>SEMICONDUCTORS</b>
L702	LL2391512	Choke Coil x 2	H802	HT309451P	Transistor, 2SD315 C or D
		<b>SEMICONDUCTORS</b>	H803	HT309451Q	Transistor, 2SC945 P
H001	HT307892A	Transistor, 2SC789 O or Y x 2	H804	HD3002709	Transistor, 2SC945 Q
H002	HT307892A	Transistor, 2SC789 O or Y x 2	H805	HD2000413	Diode, WZ-140
H003	HT307892A	Transistor, 2SC789 O or Y x 2	H806	HD2000413	Diode, SIB01-02
			H807	HD2000413	Diode, SIB01-02
			H808	HD2000413	Diode, SIB01-02
			H809	HD2000413	Diode, SIB01-02

REF. DESIG.	MARANTZ PART NO.	DESCRIPTION	REF. DESIG.	MARANTZ PART NO.	DESCRIPTION
H810	HD20001Z1	Diode, 1S2473	JD01	YP1000113	MISCELLANEOUS
J801	YP1000113	MISCELLANEOUS	JD02	YP1000113	Plug
J810	YP1000113	Plug	JD03	YP1000113	Plug
J816	YP1000113	Plug	JD04	YP1000113	Plug
J818	YP1000113	Plug	JD05	YP1000113	Plug
1533	273026702	Heat Sink	JD06	YP1000113	Plug
3136	54050300R	T.L. Washer OR	JD07	YP1000113	Plug
1534	53110303E	Hexagon Nut	JD08	YP1000113	Plug
		x 2	JD09	YP1000113	Plug
		x 2	JD10	YP1000113	Plug
PD01	YD2886007 ZZ2886007	P.W. Board, Buffer P.W. Board Ass'y	JD11	YP1000113	Plug
			JD12	YP1000113	Plug
			JD13	YP1000113	Plug
RD01	RT0547414	RESISTORS	PE01	YD2886015 ZZ2886015	P.W. Board, Tone Amp. P.W. Board Ass'y
RD02	RT0547414	All resistors are $\pm 5\%$ and $\frac{1}{4}W$ , unless otherwise indicated.			
RD03	RT0547414	470K $\Omega$	RE05	RT0539114	RESISTORS
RD04	RT0547414	470K $\Omega$	RE06	RT0539114	All resistors are $\pm 5\%$ and $\frac{1}{4}W$ .
RD05	RT0510214	470K $\Omega$	RE07	RT0539114	390 $\Omega$
RD06	RT0510214	1K $\Omega$	RE08	RT0539114	390 $\Omega$
RD07	RT0510214	1K $\Omega$	RE09	RT0547314	390 $\Omega$
RD08	RT0510214	1K $\Omega$	RE10	RT0547314	47K $\Omega$
RD09	RT0524414	240K $\Omega$	RE11	RT0547314	47K $\Omega$
RD10	RT0524414	240K $\Omega$	RE12	RT0547314	47K $\Omega$
RD11	RT0524414	240K $\Omega$	RE13	RT0512514	1.2M $\Omega$
RD12	RT0524414	240K $\Omega$	RE14	RT0512514	1.2M $\Omega$
RD13	RT0591414	910K $\Omega$	RE15	RT0512514	1.2M $\Omega$
RD14	RT0591414	910K $\Omega$	RE16	RT0512514	1.2M $\Omega$
RD15	RT0591414	910K $\Omega$	RE21	RT0527314	27K $\Omega$
RD16	RT0591414	910K $\Omega$	RE22	RT0527314	27K $\Omega$
RD17	GU0522212	2.2K $\Omega \pm 5\%$ , $\frac{1}{2}W$	RE23	RT0527314	27K $\Omega$
RD18	GU0522212	2.2K $\Omega \pm 5\%$ , $\frac{1}{2}W$	RE24	RT0527314	27K $\Omega$
RD19	GU0522212	2.2K $\Omega \pm 5\%$ , $\frac{1}{2}W$	RE25	RT0510214	1K $\Omega$
RD20	GU0522212	2.2K $\Omega \pm 5\%$ , $\frac{1}{2}W$	RE26	RT0510214	1K $\Omega$
RD21	RT0547314	47K $\Omega$	RE27	RT0510214	1K $\Omega$
RD22	RT0547314	47K $\Omega$	RE28	RT0510214	1K $\Omega$
RD23	RT0547314	47K $\Omega$	RE29	RT0575214	7.5K $\Omega$
RD24	RT0547314	47K $\Omega$	RE30	RT0575214	7.5K $\Omega$
CD01	EE1050501	CAPACITORS	RE31	RT0575214	7.5K $\Omega$
CD02	EE1050501	Electroly., $1\mu F \pm 20\%$ , 50V	RE32	RT0575214	7.5K $\Omega$
CD03	EE1050501	Electroly., $1\mu F \pm 20\%$ , 50V	RE33	RT0510214	1K $\Omega$
CD04	EE1050501	Electroly., $1\mu F \pm 20\%$ , 50V	RE34	RT0510214	1K $\Omega$
CD05	EE1060351	Electroly., $1\mu F \pm 20\%$ , 50V	RE35	RT0510214	1K $\Omega$
CD06	EE1060351	Electroly., $10\mu F \pm 20\%$ , 35V	RE36	RT0510214	1K $\Omega$
CD07	EE1060351	Electroly., $10\mu F \pm 20\%$ , 35V	RE37	RT0547414	470K $\Omega$
CD08	EE1060351	Electroly., $10\mu F \pm 20\%$ , 35V	RE38	RT0547414	470K $\Omega$
CD09	EE1070359	Electroly., $100\mu F \pm 100\%, -10\%$ , 35V	RE39	RT0547414	470K $\Omega$
CD10	DD1620101	Electroly., $200PF \pm 10\%$ , 50V	RE40	RT0547414	470K $\Omega$
CD11	DD1620101	Electroly., $200PF \pm 10\%$ , 50V	RE41	RT0520514	2M $\Omega$
CD12	DD1620101	Electroly., $200PF \pm 10\%$ , 50V	RE42	RT0520514	2M $\Omega$
CD13	DD1620101	Electroly., $200PF \pm 10\%$ , 50V	RE43	RT0520514	2M $\Omega$
			RE44	RT0520514	2M $\Omega$
			RE45	RT0556314	56K $\Omega$
HD01	HT313181S	SEMICONDUCTORS	RE46	RT0556314	56K $\Omega$
HD02	HT313181S	Transistor, 2SC1318 S	RE47	RT0556314	56K $\Omega$
HD03	HT313181S	Transistor, 2SC1318 S	RE48	RT0556314	56K $\Omega$
HD04	HT313181S	Transistor, 2SC1318 S	RE49	RT0510314	10K $\Omega$
			RE50	RT0510314	10K $\Omega$

REF. DESIG.	MARANTZ PART NO.	DESCRIPTION	REF. DESIG.	MARANTZ PART NO.	DESCRIPTION
RE51	RT0510314	10K $\Omega$			
RE52	RT0510314	10K $\Omega$			
RE53	RT0510314	10K $\Omega$			
RE54	RT0510314	10K $\Omega$			
RE55	RT0510314	10K $\Omega$			
RE56	RT0510314	10K $\Omega$			
RE57	RT0522114	220 $\Omega$			
RE58	RT0522114	220 $\Omega$			
RE59	RT0522114	220 $\Omega$			
RE60	RT0522114	220 $\Omega$			
RE61	RT0510114	100 $\Omega$			
<b>CAPACITORS</b>					
CE01	EE4750251	Electroly, 4.7 $\mu$ F $\pm$ 20%, 25V	RL11	RA0501012	Trimming, 500 $\Omega$ (B)
CE02	EE4750251	Electroly, 4.7 $\mu$ F $\pm$ 20%, 25V	RL12	RA0502019	Trimming, 5K $\Omega$ (B)
CE03	EE4750251	Electroly, 4.7 $\mu$ F $\pm$ 20%, 25V	RL13	RT0556314	56K $\Omega$
CE04	EE4750251	Electroly, 4.7 $\mu$ F $\pm$ 20%, 25V	RL14	RT0556314	56K $\Omega$
CE05	EE4740501	Electroly, 0.47 $\mu$ F $\pm$ 20%, 50V	RL15	RT0547214	4.7K $\Omega$
CE06	EE4740501	Electroly, 0.47 $\mu$ F $\pm$ 20%, 50V	RL20	RT0568414	680K $\Omega$
CE07	EE4740501	Electroly, 0.47 $\mu$ F $\pm$ 20%, 50V	RL21	RT0568414	680K $\Omega$
CE08	EE4740501	Electroly, 0.47 $\mu$ F $\pm$ 20%, 50V	RL22	RT0533414	330K $\Omega$
CE09	EE1050501	Electroly, 1 $\mu$ F $\pm$ 20%, 50V	RL23	RT0533414	330K $\Omega$
CE10	EE1050501	Electroly, 1 $\mu$ F $\pm$ 20%, 50V	RL24	RT0533214	3.3K $\Omega$
CE11	EE1050501	Electroly, 1 $\mu$ F $\pm$ 20%, 50V	RL25	RT0533214	3.3K $\Omega$
CE12	EE1050501	Electroly, 1 $\mu$ F $\pm$ 20%, 50V	RL26	RT0515214	1.5K $\Omega$
CE13	EA1060359	Electroly, 10 $\mu$ F +100%, -10%, 35V	RL27	RT0515214	1.5K $\Omega$
CE14	EA1060359	Electroly, 10 $\mu$ F +100%, -10%, 35V	RL28	RA0152004	Trimming, 1.5K $\Omega$ (B)
CE15	EA1060359	Electroly, 10 $\mu$ F +100%, -10%, 35V	RL29	RA0152004	Trimming, 1.5K $\Omega$ (B)
CE16	EA1060359	Electroly, 10 $\mu$ F +100%, -10%, 35V			
CE17	EE3350501	Electroly, 3.3 $\mu$ F $\pm$ 20%, 50V			
CE18	EE3350501	Electroly, 3.3 $\mu$ F $\pm$ 20%, 50V	CL01	DF1515305	Film, 0.015 $\mu$ F $\pm$ 5%
CE19	EE3350501	Electroly, 3.3 $\mu$ F $\pm$ 20%, 50V	CL02	DF1515305	Film, 0.015 $\mu$ F $\pm$ 5%
CE20	EE3350501	Electroly, 3.3 $\mu$ F $\pm$ 20%, 50V	CL03	DF1668301	Film, 0.068 $\mu$ F $\pm$ 10%
CE25	EE1050501	Electroly, 1 $\mu$ F $\pm$ 20%, 50V	CL04	DF1710402	Film, 0.1 $\mu$ F $\pm$ 20%
CE26	EE1050501	Electroly, 1 $\mu$ F $\pm$ 20%, 50V	CL05	EA1060169	Electroly, 10 $\mu$ F, 16V
CE27	EE1050501	Electroly, 1 $\mu$ F $\pm$ 20%, 50V	CL06	EA1060169	Electroly, 10 $\mu$ F, 16V
CE28	EE1050501	Electroly, 1 $\mu$ F $\pm$ 20%, 50V	CL07	EA1060169	Electroly, 10 $\mu$ F, 16V
CE29	EA1070359	Electroly, 100 $\mu$ F +100%, -10%, 35V	CL10	EA1060169	Electroly, 10 $\mu$ F, 16V
			CL11	EA1060169	Electroly, 10 $\mu$ F, 16V
			CL12	EA1060169	Electroly, 10 $\mu$ F, 16V
			CL13	EA1060169	Electroly, 10 $\mu$ F, 16V
			CL14	EA3360359	Electroly, 33 $\mu$ F, 35V
<b>SEMICONDUCTORS</b>					
HE01	HT313271S	Transistor, 2SC1327 S	HL01	HT307331C	<b>SEMICONDUCTORS</b>
HE02	HT313271S	Transistor, 2SC1327 S	HL02	HT307331C	Transistor, 2SC733 GR
HE03	HT313271S	Transistor, 2SC1327 S	HL03	HT307331C	Transistor, 2SC733 GR
HE04	HT313271S	Transistor, 2SC1327 S	HL06	HT307331C	Transistor, 2SC733 GR
HE05	HT107331Q	Transistor, 2SA733 Q	HL07	HT307331C	Transistor, 2SC733 GR
HE06	HT107331Q	Transistor, 2SA733 Q	HL08	HD1000105	Diode, 1N60
HE07	HT107331Q	Transistor, 2SA733 Q	HL09	HD1000105	Diode, 1N60
HE08	HT107331Q	Transistor, 2SA733 Q	HL10	HD1000105	Diode, 1N60
HE09	HT309451Q	Transistor, 2SC945 Q	HL11	HD1000105	Diode, 1N60
HE10	HT309451Q	Transistor, 2SC945 Q	JL01	?	<b>MISCELLANEOUS</b>
HE11	HT309451Q	Transistor, 2SC945 Q	JL09	YP1000113	Plug
HE12	HT309451Q	Transistor, 2SC945 Q			
HE13	HT107331Q	Transistor, 2SA733 Q			
HE14	HT107331Q	Transistor, 2SA733 Q			
HE15	HT107331Q	Transistor, 2SA733 Q			
HE16	HT107331Q	Transistor, 2SA733 Q			
<b>MISCELLANEOUS</b>					
JE01	?		0903	288616050	Bracket K
JE25	YP1000113	Plug	0909	288612201	Sticker
PL01	YD2886009 ZZ2886009	P.W. Board, Dolby Tone & Meter P.W. Board Ass'y	0913	257710602	Bearing
			0914	141511801	Spacer
			0915	51040306A	F.H.M. Screw x 2
			0920	51100306S	B.H.M. Screw x 3
			0927	51100305A	B.H.M. Screw x 2

REF. DESIG.	MARANTZ PART NO.	DESCRIPTION	REF. DESIG.	MARANTZ PART NO.	DESCRIPTION
0933	51102604A	B.H.M. Screw x 2	J501	YP1000113	<b>MISCELLANEOUS</b>
0934	51102604A	B.H.M. Screw x 2	J506		Plug
0935	288610903	Shield			
1003	281816003	Bracket			
1004	281816004	Bracket			
1005	51100406A	B.H.M. Screw x 4	C501	EE4740501	<b>CAPACITORS</b> Electroly, 0.47 $\mu$ F ± 20%, 50V
1011	51102605A	B.H.M. Screw x 6	C502	EE4740501	Electroly, 0.47 $\mu$ F ± 20%, 50V
1012	51060305A	P.H.M. Screw x 8	C503	EE3350501	Electroly, 3.3 $\mu$ F ± 20%, 50V
1131	51042608A	F.H.M. Screw x 2	C504	EE3350501	Electroly, 3.3 $\mu$ F ± 20%, 50V
1221	51570306B	P.H. Tapt Screw x 2	C505	EE3350501	Electroly, 3.3 $\mu$ F ± 20%, 50V
1222	54050300R	T.L. Washer OR x 2	C506	EE3350501	Electroly, 3.3 $\mu$ F ± 20%, 50V
1225	288610701	Sheet x 2	C507	DF1647305	Film, 0.047 $\mu$ F ± 10%, 50V
1616	51470306A	B.H.M. Screw S x 2	C508	DF1647305	Film, 0.047 $\mu$ F ± 10%, 50V
1704	285326901	Protector	C509	DF1647305	Film, 0.047 $\mu$ F ± 10%, 50V
1708	281912004	Insulator	C510	DF1647305	Film, 0.047 $\mu$ F ± 10%, 50V
1714	51570305B	P.H. Tapt Screw x 2	C511	EE3350501	Electroly, 3.3 $\mu$ F ± 20%, 50V
1721	287105302	Cover x 2	C512	EE3350501	Electroly, 3.3 $\mu$ F ± 20%, 50V
M004	IM1104209	D.C. Meter, Signal	C513	EA1070109	Electroly, 100 $\mu$ F +100%, -10%, 10V
M005	IM1104202	D.C. Meter, Center	C514	EA1070109	Electroly, 100 $\mu$ F +100%, -10%, 10V
C004	EA1070109	Electroly Cap., 100 $\mu$ F +100%, -10%, 10V	C515	EE3350501	Electroly, 3.3 $\mu$ F ± 20%, 50V
C008	EA1070109	Electroly Cap., 100 $\mu$ F +100%, -10%, 10V	C516	EE3350501	Electroly, 3.3 $\mu$ F ± 20%, 50V
P500	YD2886012	P.W. Board, Vari-Matrix	C517	DD1650001	Ceramic, 50PF ± 10%, 50V
	ZZ2886012	P.W. Board Ass'y	C518	DD1650001	Ceramic, 50PF ± 10%, 50V
		<b>RESISTORS</b> <b>All resistors are ±5% and 1/4W, unless otherwise indicated.</b>	C519	DF1610205	Film, 0.001 $\mu$ F ± 20%, 50V
			C520	DF1610205	Film, 0.001 $\mu$ F ± 20%, 50V
			C521	EA1070359	Electroly, 100 $\mu$ F +100%, -10%, 35V
R501	RT0515414	150K $\Omega$	H501	HT313272A	<b>SEMICONDUCTORS</b>
R502	RT0515414	150K $\Omega$	H502	HT313272A	Transistor, 2SC1327 S or T
R503	RT0556314	56K $\Omega$	H503	HC1000705	Transistor, 2SC1327 S or T
R504	RT0556314	56K $\Omega$	H504	HC1000705	IC, TA7122 AP B or C
R505	RT0522414	220K $\Omega$	PF01	YD2886002	IC, TA7122 AP B or C
R506	RT0522414	220K $\Omega$			P.W. Board, Tone Vol. Ass.
R507	RT0533414	330K $\Omega$			P.W. Board Ass'y
R508	RT0533414	330K $\Omega$			<b>RESISTORS</b>
R509	RT0556214	5.6K $\Omega$			<b>All resistors are ±5% and 1/4W, unless otherwise indicated.</b>
R510	RT0556214	5.6K $\Omega$	RF01	RU0204001	Variable, 200K $\Omega$ (B)
R511	RT0556214	5.6K $\Omega$	RF02	RU0204001	Variable, 200K $\Omega$ (B)
R512	RT0556214	5.6K $\Omega$	RF03	RT0527314	27K $\Omega$
R513	RT0568214	6.8K $\Omega$	RF04	RT0527314	27K $\Omega$
R514	RT0568214	6.8K $\Omega$	RF05	RT0527314	27K $\Omega$
R515	RT0568214	6.8K $\Omega$	RF06	RT0527314	27K $\Omega$
R516	RT0568214	6.8K $\Omega$	RF07	RT0527314	27K $\Omega$
R517	RT0547314	47K $\Omega$	RF08	RT0527314	27K $\Omega$
R518	RT0547314	47K $\Omega$	RF09	RT0527314	27K $\Omega$
R519	RT0547314	47K $\Omega$	RF10	RT0527314	27K $\Omega$
R520	RT0547314	47K $\Omega$			
R521	RT0520314	20K $\Omega$	RF11	RT0510414	100K $\Omega$
R522	RT0520314	20K $\Omega$	RF12	RT0510414	100K $\Omega$
R523	RT0533414	330K $\Omega$	RF13	RT0510414	100K $\Omega$
R524	RT0533414	330K $\Omega$	RF14	RT0510414	100K $\Omega$
R525	RT0510414	100K $\Omega$	RF15	RT0539314	39K $\Omega$
R526	RT0510414	100K $\Omega$	RF16	RT0539314	39K $\Omega$
R527	RT0556214	5.6K $\Omega$	RF17	RT0539314	39K $\Omega$
R528	RT0556214	5.6K $\Omega$	RF18	RT0539314	39K $\Omega$
R529	RT0522314	22K $\Omega$			
R530	RT0522314	22K $\Omega$	RF27	RT0568414	680K $\Omega$
R531	RT0522114	220 $\Omega$	RF28	RT0568414	680K $\Omega$
R532	RM0503054	Variable, 50K $\Omega$ (B), Dimension	RF29	RT0568414	680K $\Omega$

REF. DESIG.	MARANTZ PART NO.	DESCRIPTION	REF. DESIG.	MARANTZ PART NO.	DESCRIPTION
RF30	RT0568414	680KΩ	6136	62031650W	Lug
		<b>CAPACITORS</b>	PT01	YD2886011 ZZ2886011	P.W. Board, Tape Mon., Sw P.W. Board Ass'y
CF01	DF1615305	Film, 0.015μF ± 10%, 50V	ST01	SP0802001	<b>MISCELLANEOUS</b>
CF02	DF1615305	Film, 0.015μF ± 10%, 50V	RT01	RT0510214	Push Switch, Tape Mon.
CF03	DF1615305	Film, 0.015μF ± 10%, 50V	RT02	RT0510214	Resistor, 1KΩ ± 5%, ½W
CF04	DF1615305	Film, 0.015μF ± 10%, 50V	RT03	RT0510214	Resistor, 1KΩ ± 5%, ½W
CF05	DF1615305	Film, 0.015μF ± 10%, 50V	RT04	RT0510214	Resistor, 1KΩ ± 5%, ½W
CF06	DF1615305	Film, 0.015μF ± 10%, 50V	JT01 ~ JT06	YP1000113	Resistor, 1KΩ ± 5%, ½W
CF07	DF1615305	Film, 0.015μF ± 10%, 50V	PY01	YD2886010 ZZ2886010	Plug
CF08	DF1615305	Film, 0.015μF ± 10%, 50V			P.W. Board, Function Lamp
CF09	DD1520101	Ceramic, 200PF ± 5%, 50V			P.W. Board Ass'y
CF10	DD1520101	Ceramic, 200PF ± 5%, 50V			<b>MISCELLANEOUS</b>
CF11	DD1520101	Ceramic, 200PF ± 5%, 50V	MY01	IN1006301	Lamp, AM, 40mA
CF12	DD1520101	Ceramic, 200PF ± 5%, 50V	MY02	IN1006301	Lamp, FM, 40mA
JF01 ~ JF12	YP1000113	Plug	MY03	IN1006301	Lamp, Stereo, 40mA
PS01	YD2886005 ZZ2886005	P.W. Board, Switch P.W. Board Ass'y	MY04	IN1006301	Lamp, Dolby, 40mA
			MY05	IN1006302	Lamp, 4, 180mA
		<b>RESISTORS</b>	RY01	RC1002712	All resistors are ±5% and ½W.
RS01	RT0515314	15KΩ	JY01 ~ JY10	YP1000113	Resistor, 2.7Ω ± 10%, ½W
RS02	RT0515314	15KΩ			Plug
RS03	RT0515314	15KΩ			
RS04	RT0515314	15KΩ	1108	288627101	
RS05	RT0533214	3.3KΩ	1109	51570305B	Holder
RS06	RT0533214	3.3KΩ			P.H. Tapt Screw x 2
RS07	RT0533214	3.3KΩ			
RS08	RT0533214	3.3KΩ	PZ01	YD2886016 ZZ2886016	
RS09	RT0547214	4.7KΩ			P.W. Board, Dial Lamp
RS10	RT0547214	4.7KΩ			P.W. Board
RS11	RT0547214	4.7KΩ			<b>MISCELLANEOUS</b>
RS12	RT0547214	4.7KΩ	MZ01 ~ MZ05	IN1008007	Lamp, Dial
RS13	RT0510514	1MΩ			
RS14	RT0510514	1MΩ	JZ01 ~ JZ10	YJ0800017	
RS15	RT0510514	1MΩ			Socket
RS16	RT0510514	1MΩ			
		<b>CAPACITORS</b>	JZ11	YP1000113	
CS01	DF1610205	Film, 0.001μF ± 10%, 50V	JZ12	YP1000113	Plug
CS02	DF1610205	Film, 0.001μF ± 10%, 50V			Plug
CS03	DF1610205	Film, 0.001μF ± 10%, 50V	1105	287127101	
CS04	DF1610205	Film, 0.001μF ± 10%, 50V	1106	51570305B	Holder
CS05	EM1040251	Electroly, 0.1μF ± 20%, 25V			P.H. Tapt Screw x 2
CS06	EM1040251	Electroly, 0.1μF ± 20%, 25V			
CS07	EM1040251	Electroly, 0.1μF ± 20%, 25V			
CS08	EM1040251	Electroly, 0.1μF ± 20%, 25V			
CS09	DF1682205	Film, 0.0082μF ± 10%, 50V	PG01	YD2886003 ZZ2886003	
CS10	DF1682205	Film, 0.0082μF ± 10%, 50V			P.W. Board, Balance
CS11	DF1682205	Film, 0.0082μF ± 10%, 50V			P.W. Board Ass'y
CS12	DF1682205	Film, 0.0082μF ± 10%, 50V			<b>RESISTORS</b>
		<b>MISCELLANEOUS</b>			All resistors are ±5% and ½W,
JS01 ~ JS08	YP1000113	Plug			unless otherwise indicated.
SS01	SP0706001	Push Switch, 6 Keys	RG01	RT0533214	3.3KΩ
			RG02	RT0533214	3.3KΩ
			RG03	RT0533214	3.3KΩ
			RG04	RT0533214	3.3KΩ
			RG05	RX0503006	Variable, 20KΩ (G)
			RG06	RX0503006	Variable, 20KΩ (G)

REF. DESIG.	MARANTZ PART NO.	DESCRIPTION	REF. DESIG.	MARANTZ PART NO.	DESCRIPTION
RG07	RS0503017	Variable, 20KΩ(G)	7936	62031650W	Lug
JG01 JG09	YP1000113	<b>MISCELLANEOUS</b>  Plug	7937	62031650W	Lug
R001	RG0503002	<b>RESISTORS</b>	8636	51100308S	B.H.M. Screw x 12
R002	RK0504010	Variable, 50KΩ(B), Volume	8637	53110303E	Hexagon Nut x 12
R003	RK0504010	Variable, Dol. Rec. Cal.	0516	53228059E	Nut x 2
R004	RK0504010	Variable, Dol. Rec. Cal.	0522	54050400R	T.L. Washer OR
R005	RK0504010	Variable, Dol. Play Cal.	0532	145525903	Bush
R009	RT0518314	Variable, Dol. Play Cal.	0533	145525903	Bush
R010	RT0515214	18KΩ ± 5%, 1/4W	0616	51100306S	B.H.M. Screw x 3
R015	RT0539214	1.5KΩ ± 5%, 1/4W	0620	51100304S	B.H.M. Screw x 2
C002	EA4760169	3.9KΩ ± 5%, 1/4W	0622	51100305S	B.H.M. Screw x 2
C001	DK1710301	<b>MISCELLANEOUS</b> Electroly Cap., 47μF +100%, -10%, 16V Ceramic Cap., 0.01μF ± 20%, 50V	0625	281805501	Collar x 2
J001	YT0208002	Terminal, 8P	0631	51100312S	B.H.M. Screw x 2
J002	YT0208002	Terminal, 8P	0632	53110303E	Hexagon Nut x 2
J003	YT0204003	Terminal, 4P	RC05	RK0203030	Variable Resist., 20KΩ(B)
J004	YT0202007	Terminal, 2P	RC06	RK0203030	Variable Resist., 20KΩ(B)
J011	YJ0700006	Jack, SQ Decoder	R006	RC1022512	Resistor, 2.2MΩ ± 10%, 1/2W
J012	YJ0100065	Jack, Head Phone	J005	YT0201006	Terminal, 1P
J013	YJ0100065	Jack, Head Phone	J006	YT0304001	Terminal, SPK
J018	YJ0800019	Socket	J007	YT0304001	Terminal, SPK
J019	YJ0800019	Socket	J008	YT0304001	Terminal, SPK
S001	SR1506002	Rotary Switch, Selector	J009	YT0304001	Terminal, SPK
S002	SR1205002	Rotary Switch, Mode	J010	YT0104004	Terminal, Ant.
S003	SR2505001	Rotary Switch, Dolby	J017	YJ0800012	Socket, Fuse Holder
S007	SP0801001	Push Switch, 400Hz Tone	J020	YT0101003	Terminal, Ground
S008	SP0201009	Push Switch, Meter L-R	J022	YL0102003	Terminal, 2P
M002	IN1008007	Lamp	S006	SS0802007	Slide Switch, Remote Control
M003	IN1008007	Lamp	L003	LB3007526	Balun Coil, FM
			L004	LC1154002	Choke Coil, 150μH
0918	288612003	Insulator	W001	YC0240010	AC Cord
0926	288616010	Bracket	F001	FS1030006	Fuse, 3A
0931	285310901	Shield	G001	BF1040001	Printed Compo.
0932	282112001	Insulator	L002	LF1120024	Ant. Coil, AM
1103	287127401	Reflector	L005	LC1332002	Choke Coil, 3.3μH
1111	51100305A	B.H.M. Screw x 2	0602	257816052	Bracket K
1113	51480306A	B.H.M. Screw F x 2	0607	281927103	Holder
1116	203912001	Insulator	0609	51100310S	B.H.M. Screw x 2
1121	287105102	Guide	0610	53110301E	Hexagon Nut x 2
1123	288626252	Pulley K	0612	51100308S	B.H.M. Screw x 2
1128	51100305A	B.H.M. Screw x 2	0613	53110301E	Hexagon Nut x 2
1203	288627401	Reflector	J014	YJ1100012	Jack, Remocon
1205	288626251	Pulley K	0626	285116007	Bracket
1211	51100305A	B.H.M. Screw x 2	0628	51100306S	B.H.M. Screw x 2
1212	54050300R	T.L. Washer OR x 2	0629	53110303E	Hexagon Nut x 2
1217	51480306A	B.H.M. Screw F x 2	9136	62031650W	Lug
1214	288627102	Holder	S004	SR0702001	Rotary Switch, BTL
1215	51570305B	P.H. Tapt Screw x 2	PC01	YD2886014	P.W. Board
1406	285110450	Retainer K		ZZ2886014	P.W. Board Ass'y
1410	51100310S	B.H.M. Screw x 2			
1411	59030805P	Fiber Washer x 2			
1606	285310650	Bearing K			
1611	51640410D	Set Screw C.P.			
1612	54040402N	Spring Washer			
1613	53110403E	Hexagon Nut			

REF. DESIG.	MARANTZ PART NO.	DESCRIPTION	REF. DESIG.	MARANTZ PART NO.	DESCRIPTION
		<b>RESISTORS</b> All resistors are $\pm 5\%$ and $\frac{1}{4}W$ .	1507	54050300R	T.L. Washer OR x 6
RC01	RT0512414	Resistor, 120K $\Omega$	1509	62031650W	Lug x 6
RC02	RT0512414	Resistor, 120K $\Omega$	1511	51570306B	P.H. Tapt Screw x 10
RC03	RT0510314	Resistor, 10K $\Omega$	1513	51570306B	P.H. Tapt Screw x 10
RC04	RT0510314	Resistor, 10K $\Omega$	1515	285416005	Bracket
		<b>CAPACITORS</b>	1516	51570305B	P.H. Tapt Screw x 2
CC01	DF1518205	Film, 0.0018 $\mu F$ $\pm 5\%$ , 50V	1519	288612004	Insulator
CC02	DF1518205	Film, 0.0018 $\mu F$ $\pm 5\%$ , 50V	1520	51570305B	P.H. Tapt Screw x 2
		<b>MISCELLANEOUS</b>	1528	285110101	Support, For CANADA x 2
SC01	SS0202017	Slide Switch, De-Emphasis	1529	53110303E	Hexagon Nut, For CANADA x 2
JC01 & JC12	YP1000113	Plug	1530	54040302N	Spring Washer, For CANADA x 2
			1531	51100306S	B.H.M. Screw, For CANADA x 2
H007	HD2000510	Diode, 5B-2	C003	EC4780551	Electroly Cap., 4700 $\mu F$ +100%,-10%, 55V
C005	DK1810351	Ceramic Cap., 0.01 $\mu F$ +100%, -0%, 500V	L001	TS6050206	Power Transformer
9936	138200503	Clamper x 5	J021	YL0103018	Terminal, 3P Lug
0911	285610701	Sheet	0121	288606450	Case K, For CANADA
1710	288630201	Dial	0204	285605601	Buffer x 4
W002	YW2886001	Wire Material	0202	285325701	Lid
W003	YX2886101	Wire Material	0203	257711803	Spacer x 4
W004	YW2886002	Wire Material	0217	285015401	Knob x 3
0411	275905701	Leg x 4	0218	288615403	Knob x 8
0412	51490410S	B.H.M. Screw FS x 4	0219	281815401	Knob x 2
0327	951022101	Label, For CANADA	0220	288615401	Knob x 4
0513	51100308S	B.H.M. Screw x 8	0221	281815403	Knob x 5
0514	53110303E	Hexagon Nut x 8	0232	288615402	Knob
1303	288610550	Chassis K	0302	288626501	Indicator
1312	288610103	Support x 4	0303	288626502	Indicator, For CANADA
1316	51100306S	B.H.M. Screw x 2	0309	51100306S	B.H.M. Screw x 2
1317	59030805P	Fiber Washer x 2	0331	951091102	Label, Factory Code
1318	51100306S	B.H.M. Screw x 3	0311	257886101	Label, UL Caution
1319	51100306S	B.H.M. Screw x 2	0312	257886102	Label, Don't remove
1320	51100306S	B.H.M. Screw x 4	0313	257886103	Label, See marking
1322	51100306S	B.H.M. Screw x 2	0314	250626506	Indicator Do not use as handle
1323	51100306S	B.H.M. Screw x 2			
1324	51100306S	B.H.M. Screw x 6	0319	282186101	Label, For CANADA
1331	51570306B	P.H. Tapt Screw x 2	0320	282186102	Label, For CANADA
1332	51570306B	P.H. Tapt Screw x 8	0323	951110102	Label
1333	51570306B	P.H. Tapt Screw x 2	0402	51122608B	T.H.M. Screw x 4
1334	51570306B	P.H. Tapt Screw x 10	0404	51100406S	B.H.M. Screw x 9, For CANADA x 7
1403	281900501	Clamper	0406	51480406S	B.H.M. Screw F x 4
1404	51570306B	P.H. Tapt Screw x 2	0416	52010420A	H Head Bolt, x 6, For CANADA
1409	51100305S	B.H.M. Screw x 2	0417	54080400R	T.L. Washer RR, x 6, For CANADA
1416	285310102	Support x 2	0421	289205502	Collar
1417	54040402N	Spring Washer x 2	0816	56382540G	Eyelet
1419	51490512A	B.H.M. Screw FS x 4	1413	203912001	Insulator
1420	53110501A	Hexagon Nut x 4	1431	288610902	Bracket
1421	54020501A	Flat Washer P x 4	1435	51100304S	B.H.M. Screw x 2
1424	281805601	Buffer	1702	286726901	Protector
1429	51570305B	P.H. Tapt Screw x 2	1706	285326902	Protector
1503	138200503	Clamper x 5	1716	51570305B	P.H. Tapt Screw x 2
1504	59030805P	Fiber Washer x 2	1719	51100305S	B.H.M. Screw x 2
			1911	288610901	Shield

REF. DESIG.	MARANTZ PART NO.	DESCRIPTION
1912	51100305S	B.H.M. Screw x 4
1913	51570305B	P.H. Tapt Screw x 3
1915	54050300R	T.L. Washer OR
1602	285011202	Shaft
1603	54040402N	Spring Washer
2002	288685101	Instructions
2009	288685601	Schematic Diagram
2011	288685603	Schematic Diagram, For CANADA
2016	281885104	Instructions
2017	281885108	Instructions
2021	257785450	Guarantee Card K
2102	288680101	Packing Case, For CANADA
2103	288680102	Packing Case, For CANADA
2104	288680105	Packing Case
2105	288680106	Packing Case
2107	288680302	Partitioner
2108	288680303	Partitioner
2109	288680301	Partitioner x2, For CANADA
2112	901483838	Polyethylen Bag
2113	901484343	Polyethylen Bag, For CANADA
2114	901302501	Polyethylen Bag x 2
2117	102980401	Sleeve
2119	273182101	Silicagel x 2
2120	281905601	Buffer
2122	285125703	Lid
2123	285386101	Label
2124	51216059E	Screw x 4
2131	ZA0200007	Ext. Antenna
2202	952281501	Serial NO. Card x 4
2203	952301512	Serial NO. Card x 4, For CANADA

## TECHNICAL SPECIFICATIONS

## FM SECTION

Tuning Frequency Range.....	88 – 108MHz
IHFM Usable Sensitivity .....	3.5 $\mu$ V at 30dB 50 $\mu$ V at 70dB
IHF Selectivity.....	48dB
Capture Ratio .....	3.0dB
Image Rejection Ratio at 106MHz.....	50dB
Total Harmonic Distortion (Mono) .....	0.6%
Total Harmonic Distortion (Stereo) .....	0.8%
Frequency Response (ref. 75 $\mu$ sec. de-emphasis).....	$\pm$ 2dB, from 30Hz to 15KHz
Stereo Separation at 1KHz .....	40dB, 26dB at 10KHz
Quadradial Output (400Hz 75KHz dev.) .....	300mV, 15Kohms

## AM SECTION

Tuning Frequency Range.....	540 to 1605KHz
Usable Sensitivity.....	25 $\mu$ V
Selectivity .....	1000KHz, 25dB
Image Rejection Ratio at 1400KHz .....	45dB
Bandwidth (-6 dB) .....	7KHz


## AUDIO SECTION

Input Sensitivity and Impedance — Phono .....	2.2mV, 47Kohms
— High level.....	150mV
Phono Frequency Response.....	30 to 15KHz, $\pm$ 1dB (RIAA)
Intermodulation Distortion below rated power output (SMPTE) .....	Less than 0.9% Nominal 0.5%
Damping Factor .....	2 channel: 20 at 20Hz 4 channel: 40 at 20Hz
Rated Continuous (RMS) Output .....	60W at 8ohms (30W x 2) 48W at 8ohms (12W x 4)
all channels operating simultaneously at 40Hz to 20KHz for nominal harmonic distortion	

## GENERAL

Power Requirements .....	120V
Power Consumption— at rated power output .....	230Watts
— idling (no signal) .....	33Watts
Dimensions — Panel Width .....	17 21/64 Inches
— Panel Height .....	5 25/64 Inches
— Depth .....	14 3/8 Inches
— Width (Packed for Shipment).....	22 1/4 Inches
— Height (Packed for Shipment).....	10 1/2 Inches
— Depth (Packed for Shipment).....	19 1/2 Inches
Weight — Unit alone .....	31.3 lbs
— Packed for Shipment .....	40.1 lbs

\* These specifications and exterior designs may be changed for improvement without advance notice.

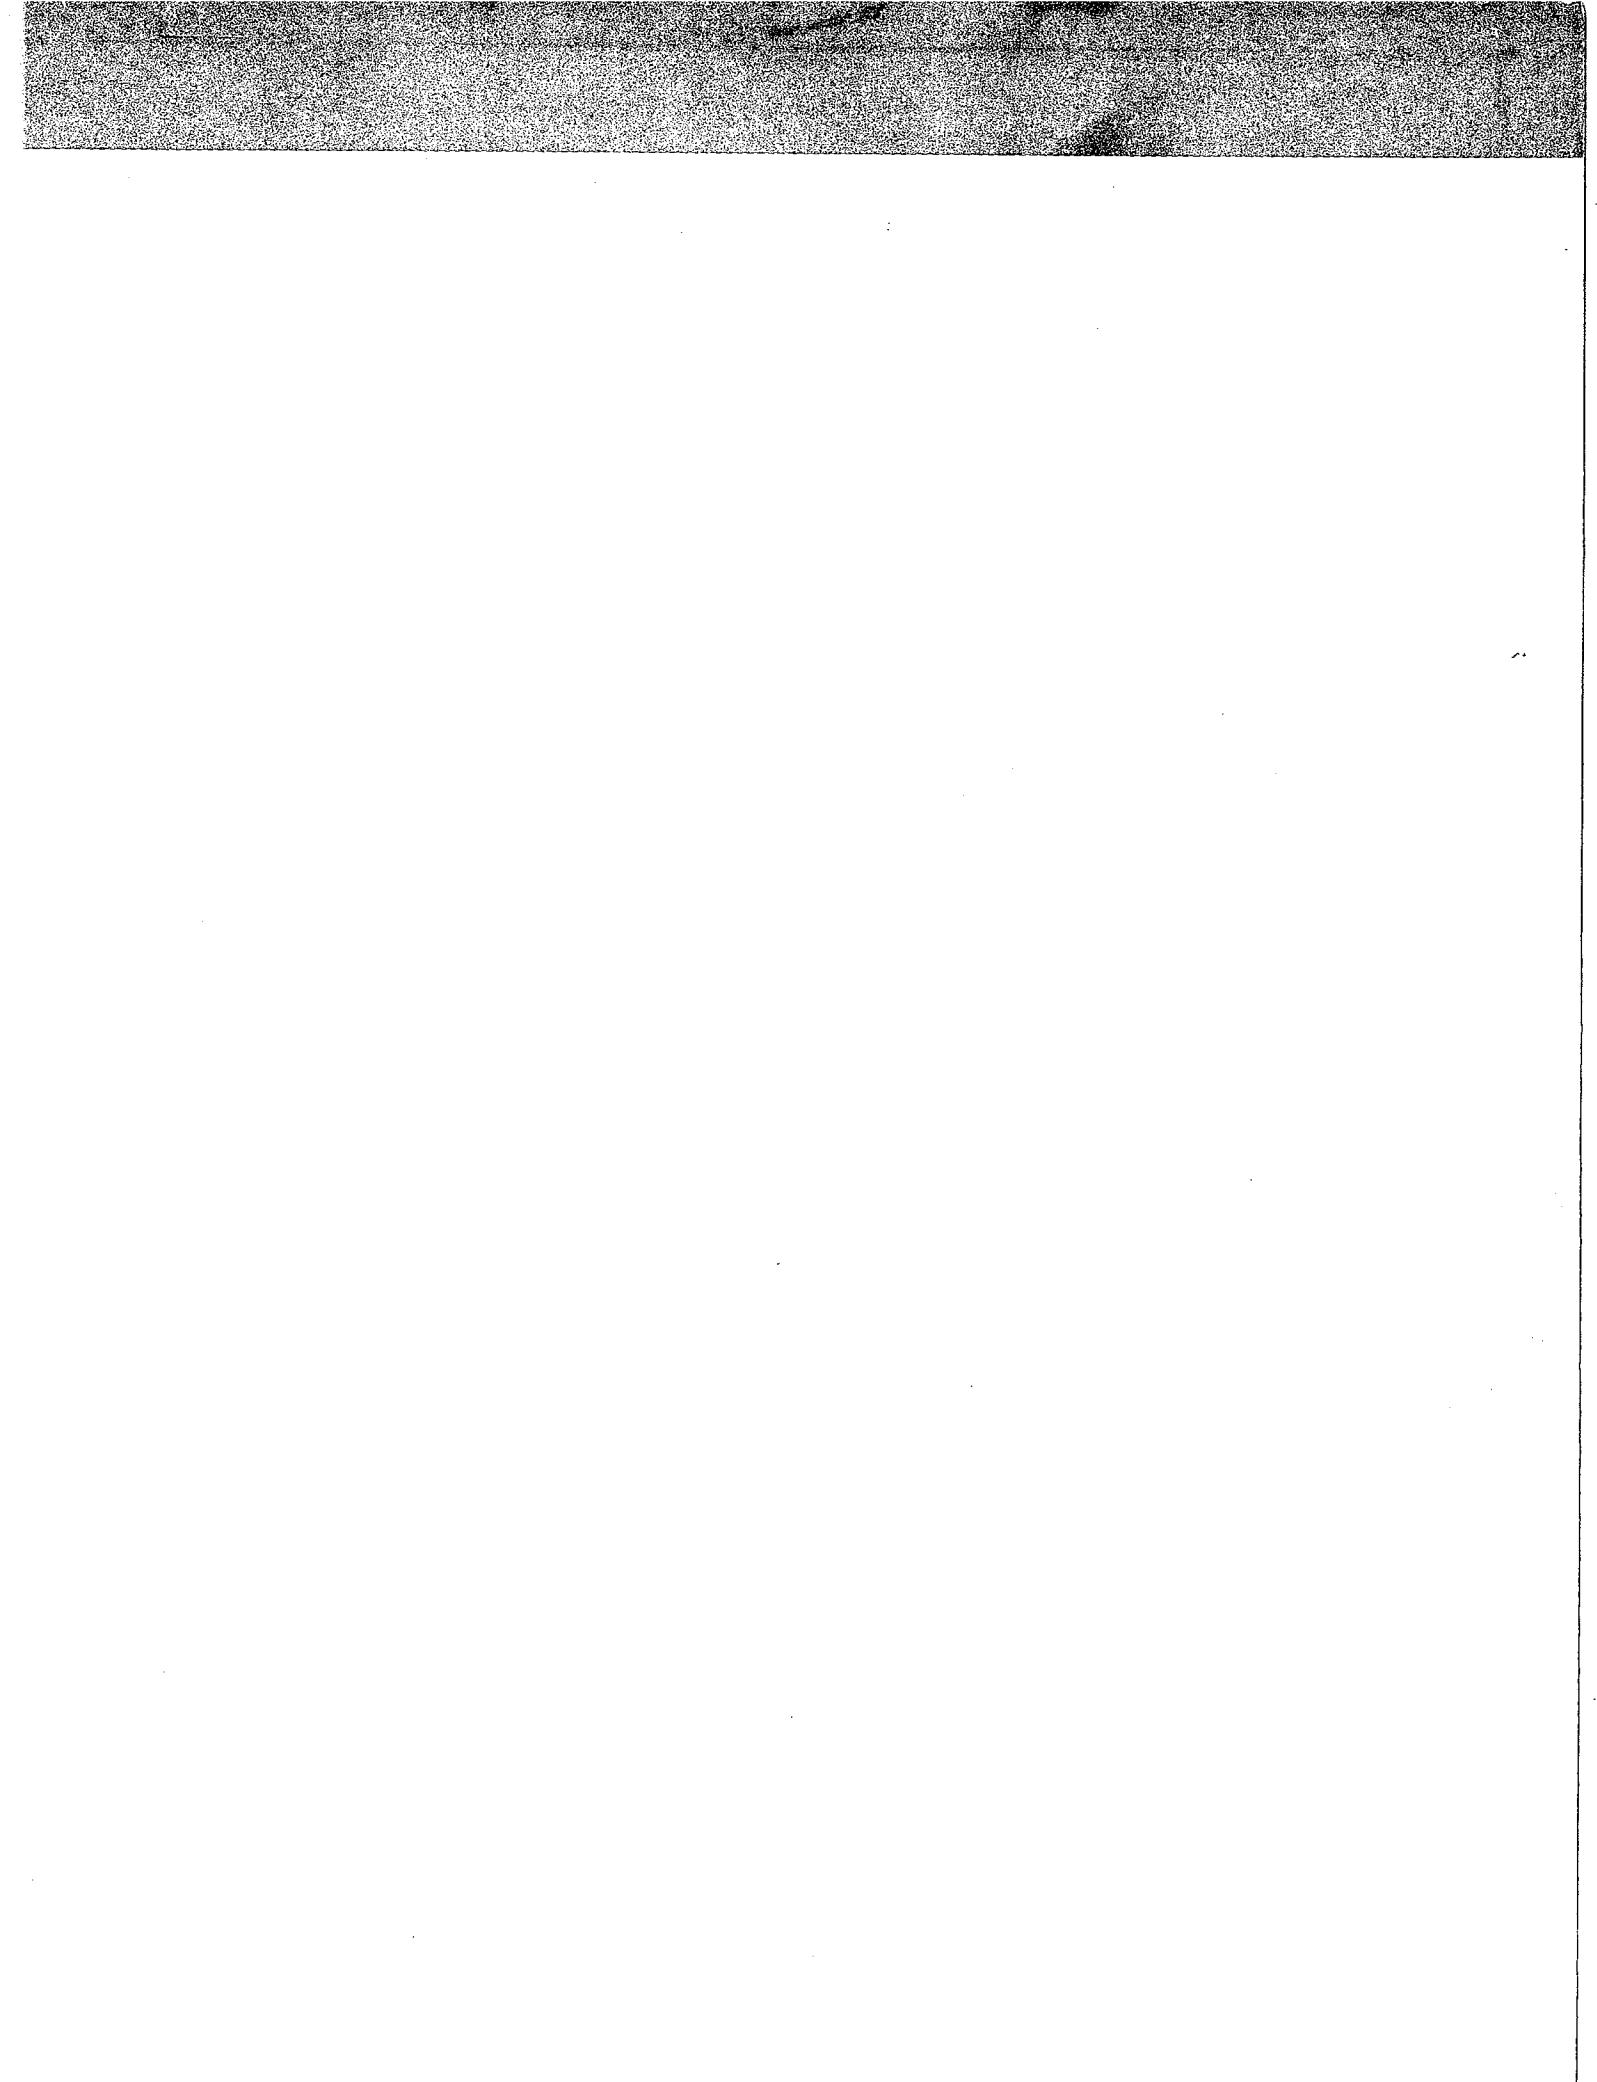



**marantz**

**MARANTZ CO., INC. • P.O. BOX 99 • SUN VALLEY, CALIFORNIA • 91352**

A WHOLLY-OWNED SUBSIDIARY OF SUPERSCOPE INC., SUN VALLEY, CALIFORNIA 91352