

JVC


SERVICE MANUAL

COLOR TELEVISION

C-13310_{IS}
C-13311_{IS}

BASIC CHASSIS

FV5

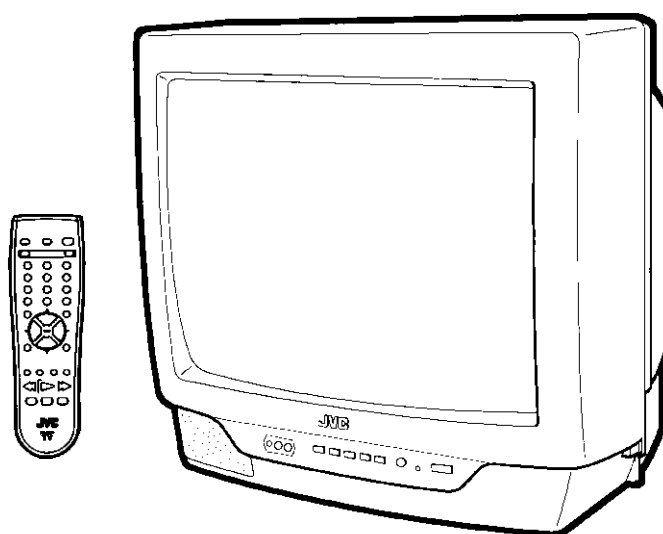

CONTENTS

■ SPECIFICATIONS	2
■ SAFETY PRECAUTIONS	3
■ FEATURES	4
■ MAIN DIFFERENCE LIST	5
■ SPECIFIC SERVICE INSTRUCTIONS	6
■ SERVICE ADJUSTMENTS	11
■ PARTS LIST	27
★ OPERATING INSTRUCTIONS	
★ STANDARD CIRCUIT DIAGRAM	2-1

SPECIFICATIONS

Items	Content
Dimensions (W × H × D) Mass	14-3/8" × 13-1/8" × 14-3/4" / 36.4cm × 33.4cm × 37.4cm 19.8 lbs / 9.0 kg
TV System and Color system TV RF System Sound System	CCIR(M) NTSC
TV Receiving Channels and Frequency VL Band VH Band UHF Band	(02~06) 54MHz~88MHz (07~13) 174MHz~216MHz (14~69) 470MHz~806MHz
CATV Receiving Channels and Frequency Low Band High Band Mid Band Super Band Hyper Band Ultra Band Sub Mid Band TV/CATV Total Channel	(02~06, A-8) by (02~06&01) (07~13) by (07~13) (A~1) by (14~22) (J~W) by (23~36) (W+1~W+28) by (37~64) (W+29~W+84) by (65~125) (A8, A4~A1) by (01, 96~99) 180 Channels (54MHz~804MHz)
Intermediate Frequency Video IF Carrier Sound IF Carrier Color Sub Carrier	45.75MHz 41.25MHz (4.5MHz) 3.58MHz
Antenna Input Impedance Power Input Power Consumption	75Ω (VHF/UHF) Terminal, F-Type Connector 120V AC, 60Hz 60W (US) / 1.1A (CA)
Picture Tube High Voltage	13" (34cm) Measured Diagonally 22.5kV ± 1kV (at zero beam current)
Speaker Audio Power Output	3-1/16" (8cm) Round type × 1 1W
Input Video Audio	1Vp-p, 75Ω 500mVrms (-4dBs), High Impedance
Hedphone Jack	3.5mm mono mini jack
Remote Control Unit	RM-C205-1C [C-13310/s] RM-C205W-1C [C-13311/s] (AA / R6 / UM-3 dry battery × 2)

Design & specifications are subject to change without notice.

SAFETY PRECAUTIONS

- The design of this product contains special hardware, many circuits and components specially for safety purposes. For continued protection, no changes should be made to the original design unless authorized in writing by the manufacturer. Replacement parts must be identical to those used in the original circuits. Service should be performed by qualified personnel only.
- Alterations of the design or circuitry of the products should not be made. Any design alterations or additions will void the manufacturer's warranty and will further relieve the manufacturer of responsibility for personal injury or property damage resulting therefrom.
- Many electrical and mechanical parts in the products have special safety-related characteristics. These characteristics are often not evident from visual inspection nor can the protection afforded by them necessarily be obtained by using replacement components rated for higher voltage, wattage, etc. Replacement parts which have these special safety characteristics are identified in the parts list of Service manual. **Electrical components having such features are identified by shading on the schematics and by (Δ) on the parts list in Service manual.** The use of a substitute replacement which does not have the same safety characteristics as the recommended replacement part shown in the parts list of Service manual may cause shock, fire, or other hazards.
- Use isolation transformer when hot chassis.**
The chassis and any sub-chassis contained in some products are connected to one side of the AC power line. An isolation transformer of adequate capacity should be inserted between the product and the AC power supply point while performing any service on some products when the HOT chassis is exposed.
- Don't short between the LIVE side ground and ISOLATED (NEUTRAL) side ground or EARTH side ground when repairing.**
Some model's power circuit is partly different in the GND. The difference of the GND is shown by the LIVE : (⊥) side GND, the ISOLATED(NEUTRAL) : (↘) side GND and EARTH : (⊕) side GND. Don't short between the LIVE side GND and ISOLATED(NEUTRAL) side GND or EARTH side GND and never measure with a measuring apparatus (oscilloscope etc.) the LIVE side GND and ISOLATED(NEUTRAL) side GND or EARTH side GND at the same time.
If above note will not be kept, a fuse or any parts will be broken.
- If any repair has been made to the chassis, it is recommended that the B1 setting should be checked or adjusted (See ADJUSTMENT OF B1 POWER SUPPLY).
- The high voltage applied to the picture tube must conform with that specified in Service manual. Excessive high voltage can cause an increase in X-Ray emission, arcing and possible component damage, therefore operation under excessive high voltage conditions should be kept to a minimum, or should be prevented. If severe arcing occurs, remove the AC power immediately and determine the cause by visual inspection (incorrect installation, cracked or melted high voltage harness, poor soldering, etc.). To maintain the proper minimum level of soft X-Ray emission, components in the high voltage circuitry including the picture tube must be the exact replacements or alternatives approved by the manufacturer of the complete product.
- Do not check high voltage by drawing an arc. Use a high voltage meter or a high voltage probe with a VTVM. Discharge the picture tube before attempting meter connection, by connecting a clip lead to the ground frame and connecting the other end of the lead through a 10kΩ 2W resistor to the anode button.
- When service is required, observe the original lead dress. Extra precaution should be given to assure correct lead dress in the high voltage circuit area. Where a short circuit has occurred, those components that indicate evidence of overheating should be replaced. Always use the manufacturer's replacement components.

10. Isolation Check

(Safety for Electrical Shock Hazard)

After re-assembling the product, always perform an isolation check on the exposed metal parts of the cabinet (antenna terminals, video/audio input and output terminals, Control knobs, metal cabinet, screwheads, earphone jack, control shafts, etc.) to be sure the product is safe to operate without danger of electrical shock.

(1) Dielectric Strength Test

The isolation between the AC primary circuit and all metal parts exposed to the user, particularly any exposed metal part having a return path to the chassis should withstand a voltage of 1100V AC (r.m.s.) for a period of one second.

(. . . Withstand a voltage of 1100V AC (r.m.s.) to an appliance rated up to 120V, and 3000V AC (r.m.s.) to an appliance rated 200V or more, for a period of one second.)

This method of test requires a test equipment not generally found in the service trade.


(2) Leakage Current Check

Plug the AC line cord directly into the AC outlet (do not use a line isolation transformer during this check.). Using a "Leakage Current Tester", measure the leakage current from each exposed metal part of the cabinet, particularly any exposed metal part having a return path to the chassis, to a known good earth ground (water pipe, etc.). Any leakage current must not exceed 0.5mA AC (r.m.s.).

However, in tropical area, this must not exceed 0.2mA AC (r.m.s.).

● Alternate Check Method

Plug the AC line cord directly into the AC outlet (do not use a line isolation transformer during this check.). Use an AC voltmeter having 1000 ohms per volt or more sensitivity in the following manner. Connect a 1500Ω 10W resistor paralleled by a 0.15μF AC-type capacitor between an exposed metal part and a known good earth ground (water pipe, etc.). Measure the AC voltage across the resistor with the AC voltmeter. Move the resistor connection to each exposed metal part, particularly any exposed metal part having a return path to the chassis, and measure the AC voltage across the resistor. Now, reverse the plug in the AC outlet and repeat each measurement. Any voltage measured must not exceed 0.75V AC (r.m.s.). This corresponds to 0.5mA AC (r.m.s.). However, in tropical area, this must not exceed 0.3V AC (r.m.s.). This corresponds to 0.2mA AC (r.m.s.).

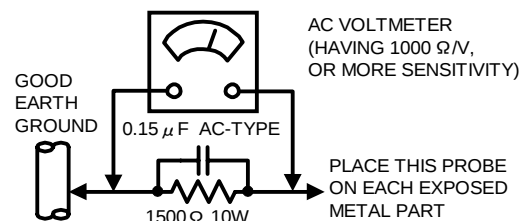

11. High voltage hold down circuit check.


After repair of the high voltage hold down circuit, this circuit shall be checked to operate correctly.

See item "How to check the high voltage hold down circuit".

This mark shows a fast operating fuse, the letters indicated below show the rating.




POWER CORD REPLACEMENT WARNING.
Connecting the white line side of power cord to "WHT" character side.

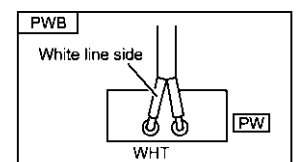

FEATURES

- New chassis design enables use of a single board with simplified circuitry.
- Provided with miniature tuner (TV/CATV).
- Multifunctional remote control permits picture adjustment.
- Adoption of the CHANNEL GUARD function prevents the specific channels from being selected, unless the "ID number" is key in.
- Adoption of the VIDEO STATUS function.
- Adoption of the ON/OFF TIMER function.
- Adoption of the HYPER SCAN function.
- With 75 Ω V/U in common (F-Type) ANT Terminal.
- SLEEP TIMER for setting in real time.
- Closed-caption broadcasts can be viewed.
- Audio Video input terminal.
- Built-in V-CHIP system.

● SYSTEM BLOCK DIAGRAM

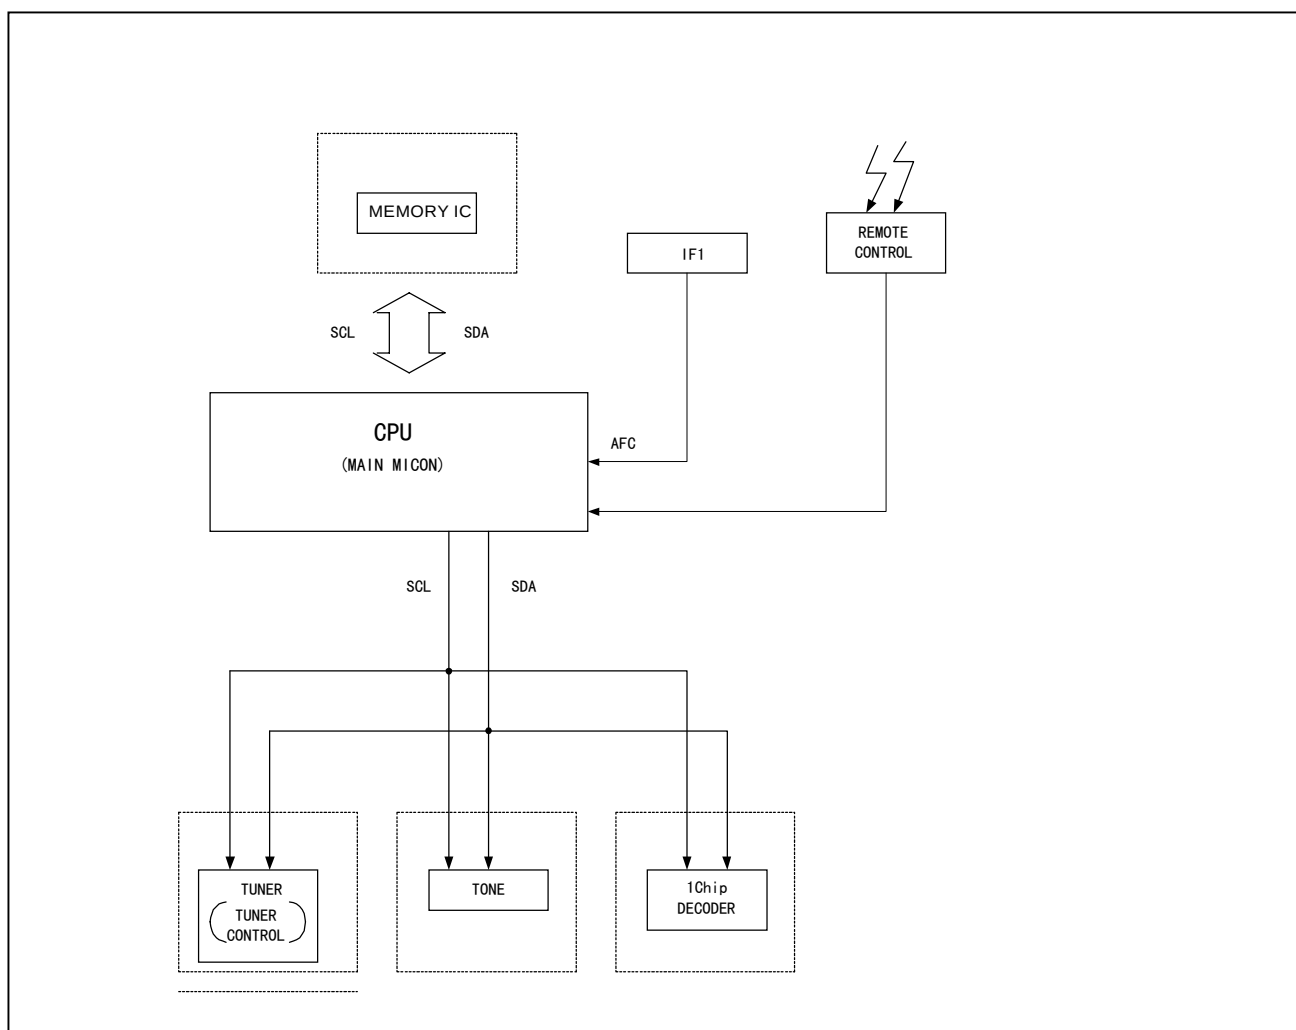

MAIN DIFFERENCE LIST

△	Model	C-13310/s	C-13311/s
	Parts Name		
	MAIN PWB	SFV-1079A-M2	SFV-1084A-M2
△	POWER CORD	QMPD390-200-JS (Within MAIN PWB)	QMPD209-200-JC (Within MAIN PWB)
△	FRONT CABINET	LC10055-011A-A	LC10055-012A-A
△	POWER KNOB	LC30376-001A-A	LC30376-002A-A
△	CONTROL KNOB	LC30189-001B-A	LC30189-002B-A
△	REAR COVER	LC10056-001G-A	LC10056-002G-A
△	POWER CORD CLAMP	LC20106-001D-A	LC20106-002C-A
	REMOTE CONTROL UNIT	RM-C205-1C	RM-C205W-1C
	WHITE MARK	x	GQ40012-001A-A

SPECIFIC SERVICE INSTRUCTIONS

DISASSEMBLY PROCEDURE

REMOVING THE REAR COVER

1. Unplug the power supply cord.
2. Remove the 5 screws marked (A) as shown in Fig.1.
3. Withdraw the REAR COVER toward you.

[CAUTION]

- When reinstalling the rear cover, carefully push it inward after inserting the MAIN PWB into the rear cover groove.

REMOVING THE MAIN PW BOARD

1. Slightly raise the both sides of the MAIN PW Board by hand and withdraw the MAIN PW Board backward.
(If necessary, take off the wire clamp and connectors, etc.)

REMOVING THE SPEAKER

- After removing the MAIN PW board.
1. By holding up the SPEAKER HOLDER marked (B) slightly and unlocking the claw, the SPEAKER HOLDER can be removed.
Then you can remove the SPEAKER.

CHECKING THE MAIN PW BOARD


1. To check the back side of the MAIN PW Board.
 - 1) Pull out the MAIN PWB. (Refer to REMOVING THE MAIN PWB).
 - 2) Erect the chassis vertically so that you can easily check the back side of the MAIN PW Board.

[CAUTION]

- When erecting the MAIN PWB, be careful so that there will be no contacting with other PW Board.
- Before turning on power, make sure that the CRT earth wire and other connectors are properly connected.

WIRE CLAMPING AND CABLE TYING

1. Be sure clamp the wire.
2. Never remove the cable tie used for tying the wires together.
Should it be inadvertently removed, be sure to tie the wires with a new cable tie.

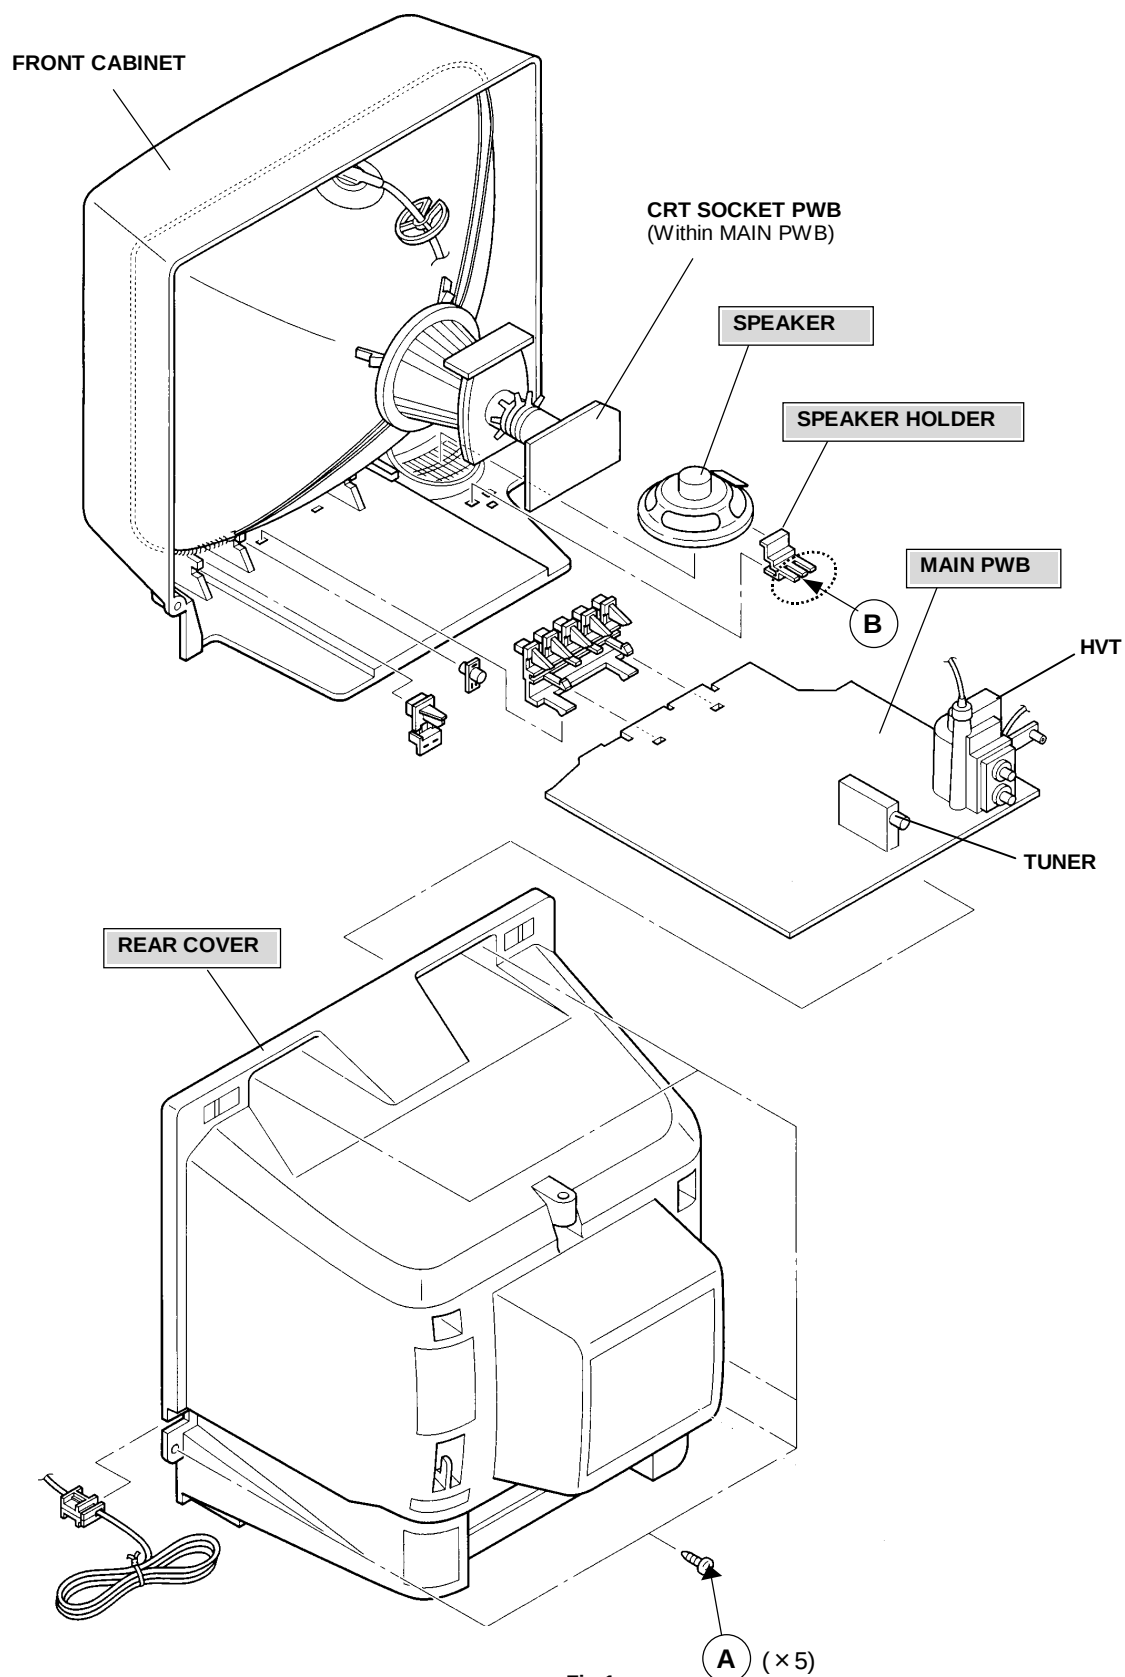

MEMORY IC REPLACEMENT

1. Memory IC

This model use a memory IC.
This memory IC stores data for proper operation of the video and deflection circuits.
When replacing, be sure to use an IC containing this (initial value) data.

2. Memory IC replacement procedure

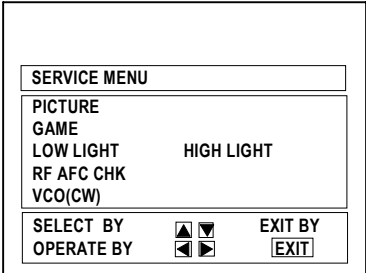
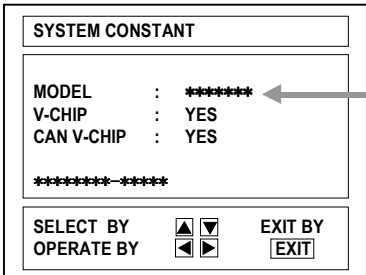
Procedure	Screen display
(1) Power off Switch off the power and disconnect the power cord from the outlet.	
(2) Replace the memory IC Initial value must be entered into the new IC.	
(3) Power on Connect the power cord to the outlet and switch on the power.	
(4) System constant check and setting 1) Press SLEEP TIMER key and, while the indication of "SLEEP TIMER 0 MIN." is being displayed, press DISPLAY key and VIDEO STATUS key on the remote control unit simultaneously. 2) The SERVICE MENU screen of Fig.1 is displayed. 3) While the SERVICE MENU is displayed, again simultaneously press the DISPLAY and VIDEO STATUS keys to display the Fig.2 SYSTEM CONSTANT screen. 4) Refer to the SYSTEM CONSTANT table 1 and check the setting items. Where these differ, select the setting item with the MENU UP/DOWN key and adjust the setting with the MENU LEFT/RIGHT keys. (The letters of the selected item are displayed in yellow.) 5) After adjusting, release the MENU LEFT/RIGHT key to store the setting value. 6) Press the EXIT key twice to return the normal screen.	 Fig.1  Fig.2 Indicated Model No.
(5) Receive channel setting Refer to the OPERATING INSTRUCTIONS(USER'S GUIDE) and set the receive channels (Channels Preset) as described.	
(6) User settings Check the user setting items according to Table 2. Where these do not agree, refer to the OPERATING INSTRUCTIONS (USER'S GUIDE) and set the items as described.	
(7) SERVICE MENU setting Verify what to set in the SERVICE MENU, and set whatever is necessary.(Fig.1) Refer to the SERVICE ADJUSTMENT for setting.	

TABLE 1 (System Constant setting)



Setting item	Setting content	Setting value	
		C-13310/S	C-13311/S
MODEL	Display the each application model	C-13310	C-13311
V-CHIP		YES	←
CAN V-CHIP		YES	←

TABLE 2 (User setting value)

Setting item	Setting value
1. Use remote controller keys	
POWER	OFF
CHANNEL	CH 02
CHANNEL PRESET	See OPERATING INSTRUCTIONS.
VOLUME	10
INPUT (TV/VIDEO)	TV
DISPLAY	OFF
SLEEP TIMER	0
VIDEO STATUS	STANDARD
2. Setting of MENU	
TINT	CENTER
COLOR	CENTER
PICTURE	CENTER
BRIGHT	CENTER
DETAIL	CENTER
NOISE MUTING	OFF
SET VIDEO STATUS	ALL CENTER
SET CLOCK	Unnecessary to set
ON/OFF TIMER	OFF
LANGUAGE	ENG
CLOSED CAPTION	OFF
BACKGROUND	BLACK
AUTO TUNER SETUP	TUNER MODE : AIR
CHANNEL SUMMARY	Unnecessary to set
V-CHIP	OFF
SET LOCK CODE	Unnecessary to set

REPLACEMENT OF CHIP COMPONENT

■ CAUTIONS

1. Avoid heating for more than 3 seconds.
2. Do not rub the electrodes and the resist parts of the pattern.
3. When removing a chip part, melt the solder adequately.
4. Do not reuse a chip part after removing it.

■ SOLDERING IRON


1. Use a high insulation soldering iron with a thin pointed end of it.
2. A 30w soldering iron is recommended for easily removing parts.

■ REPLACEMENT STEPS


1. How to remove Chip parts

◆ Resistors, capacitors, etc.

- (1) As shown in the figure, push the part with tweezers and alternately melt the solder at each end.

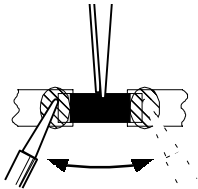


- (2) Shift with tweezers and remove the chip part.

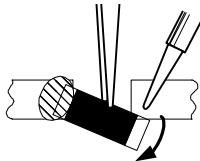


◆ Transistors, diodes, variable resistors, etc.

- (1) Apply extra solder to each lead.



- (2) As shown in the figure, push the part with tweezers and alternately melt the solder at each lead. Shift and remove the chip part.

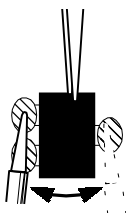


Note : After removing the part, remove remaining solder from the pattern.


2. How to install Chip parts

◆ Resistors, capacitors, etc.

- (1) Apply solder to the pattern as indicated in the figure.

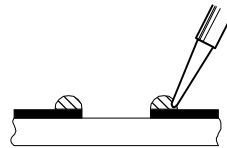


- (2) Grasp the chip part with tweezers and place it on the solder. Then heat and melt the solder at both ends of the chip part.

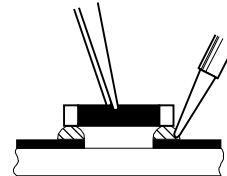


◆ Transistors, diodes, variable resistors, etc.

- (1) Apply solder to the pattern as indicated in the figure.
- (2) Grasp the chip part with tweezers and place it on the solder.
- (3) First solder lead **A** as indicated in the figure.

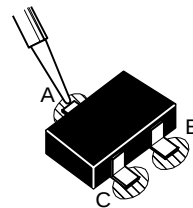

- (4) Then solder leads **B** and **C**.

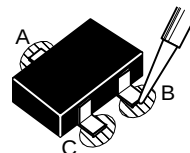

SERVICE ADJUSTMENTS

ADJUSTMENT PREPARATION:

1. You can make the necessary adjustments for this unit with either the Remote Control Unit or With the adjustment tools and parts as given below.
2. Adjustment with the Remote Control Unit is made on the basis of the initial setting values, however, the new setting values which set the screen to its optimum condition may differ from the initial settings.
3. Make sure that AC power is turned on correctly.
4. Turn on the power for set and test equipment before use, and start the adjustment procedures after waiting at least 30 minutes.
5. Unless otherwise specified, prepare the most suitable reception or input signal for adjustment.
6. Never touch any adjustment parts which are not specified in the list for this adjustment - variable resistors, transformers, condensers, etc.
7. Presetting before adjustment.
Unless otherwise specified in the adjustment instructions, preset the following functions with the remote control unit:

User mode position

MENU ITEM	PRESET VALUE
VIDEO STATUS	STANDARD
TINT / COLOUR	CENTER
PICTURE / BRIGHT	
DETAIL	


ADJUSTMENT EQUIPMENT

1. DC voltmeter (or digital voltmeter)
2. Oscilloscope
3. Signal generator (Pattern generator) [NTSC]
4. Remote control unit
5. TV audio multiplex signal generator.
6. Frequency counter


ADJUSTMENT ITEMS

Adjustment item	Adjustment item	Adjustment item
● B1 POWER SUPPLY	● WHITE BALANCE	● PURITY / CONVERGENCE
● VIDEO / DEF. CIRCUIT	Low Light / High Light	PURITY
IF VCO	● PICTURE	STATIC CONVERGENCE
RF. AGC	SUB BRIGHT	DYNAMIC CONVERGENCE
FOCUS	SUB CONTRAST	
V. SIZE	SUB COLOR	
H. POSITION	SUB TINT	

ADJUSTMENT PARTS LOCATION

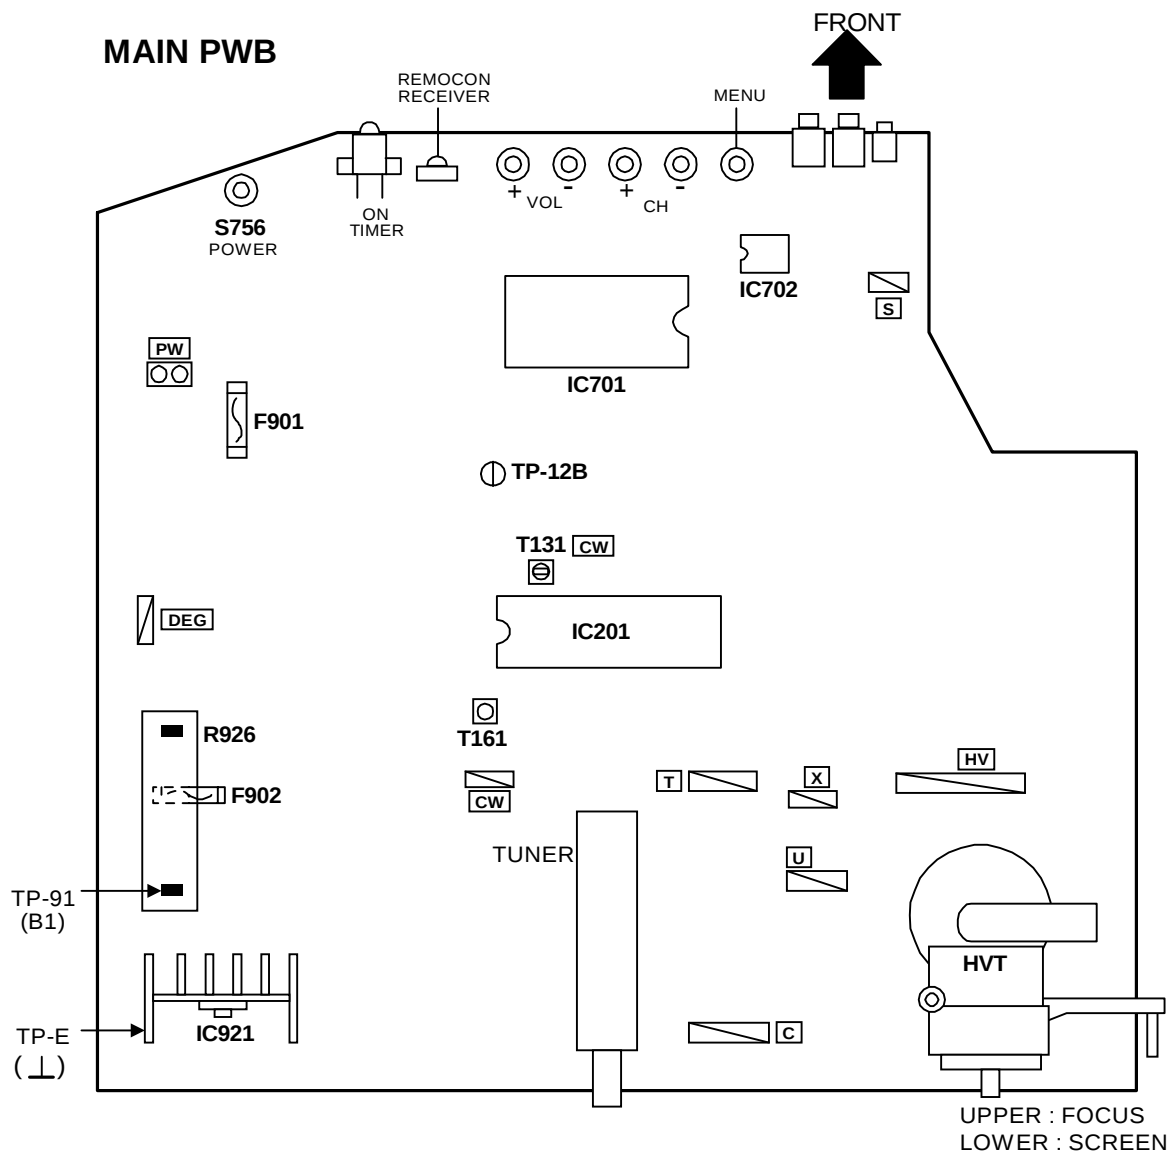

CRT SOCKET PWB (SOLDER SIDE) (Within MAIN PWB ASS'Y)

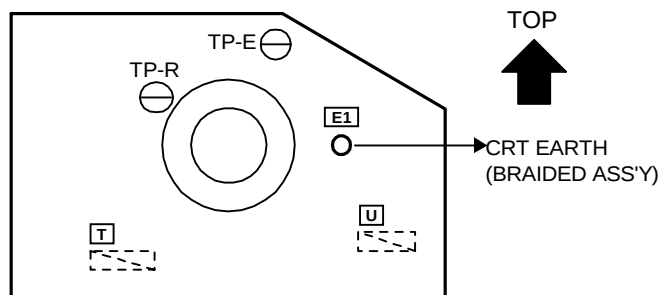

BASIC OPERATION SERVICE MENU

1. TOOL OF SERVICE MENU OPERATION

Operate the SERVICE MENU with the REMOTE CONTROL UNIT.

2. SERVICE MENU ITEMS

In general, basic setting(adjustments) items or verifications are performed in the SERVICE MENU.

- PICTURE This sets the setting values (adjustment values) of the VIDEO/CHROMA and DEFLECTION circuits.
- GAME This is used when the GAME MODE is adjusted.
- LOW LIGHT This sets the setting values (adjustment values) of the WHITE BALANCE circuit.
- HIGH LIGHT This sets the setting values (adjustment values) of the WHITE BALANCE circuit.
- RF AFC CHK This is used when the IF VCO is adjusted. **[Do not adjust]**
- VCO (CW) This is used when the IF VCO is adjusted.

3. Basic Operations of the SERVICE MENU


(1) How to enter the SERVICE MENU.

Press **SLEEP TIMER** key and, while the indication of "SLEEP TIMER 0 MIN." is being displayed, press **DISPLAY** key and **VIDEO STATUS** key on the remote control unit simultaneously to enter the **SERVICE MENU** screen ① shown in the next figure page.

(2) SERVICE MENU screen selection

Press the UP / DOWN key of the MENU to select any of the following items.

(The letters of the selected items are displayed in yellow.)

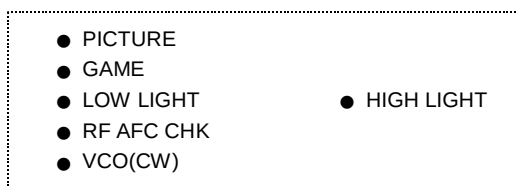


(3) Enter the any setting (adjustment) mode

● PICTURE mode

- 1) If select any of PICTURE item, and the LEFT / RIGHT key is pressed from SERVICE MENU (MAIN MENU), the screen ② will be displayed as shown in figure page later.
- 2) Then the UP / DOWN key is pressed, the PICTURE mode screen ③ is displayed, and the PICTURE setting can be performed.


● GAME, LOW LIGHT, HIGH LIGHT, RF AFC CHK and VCO (CW) mode

- 1) If select any of GAME / LOW LIGHT / HIGH LIGHT / RF AFC CHK / VCO (CW) items, and the LEFT / RIGHT key is pressed from SERVICE MENU (MAIN MENU), the screens ④ ⑤ ⑥ ⑦ ⑧ will be displayed as shown in figure page later.
- 2) Then the settings or verifications can be performed.

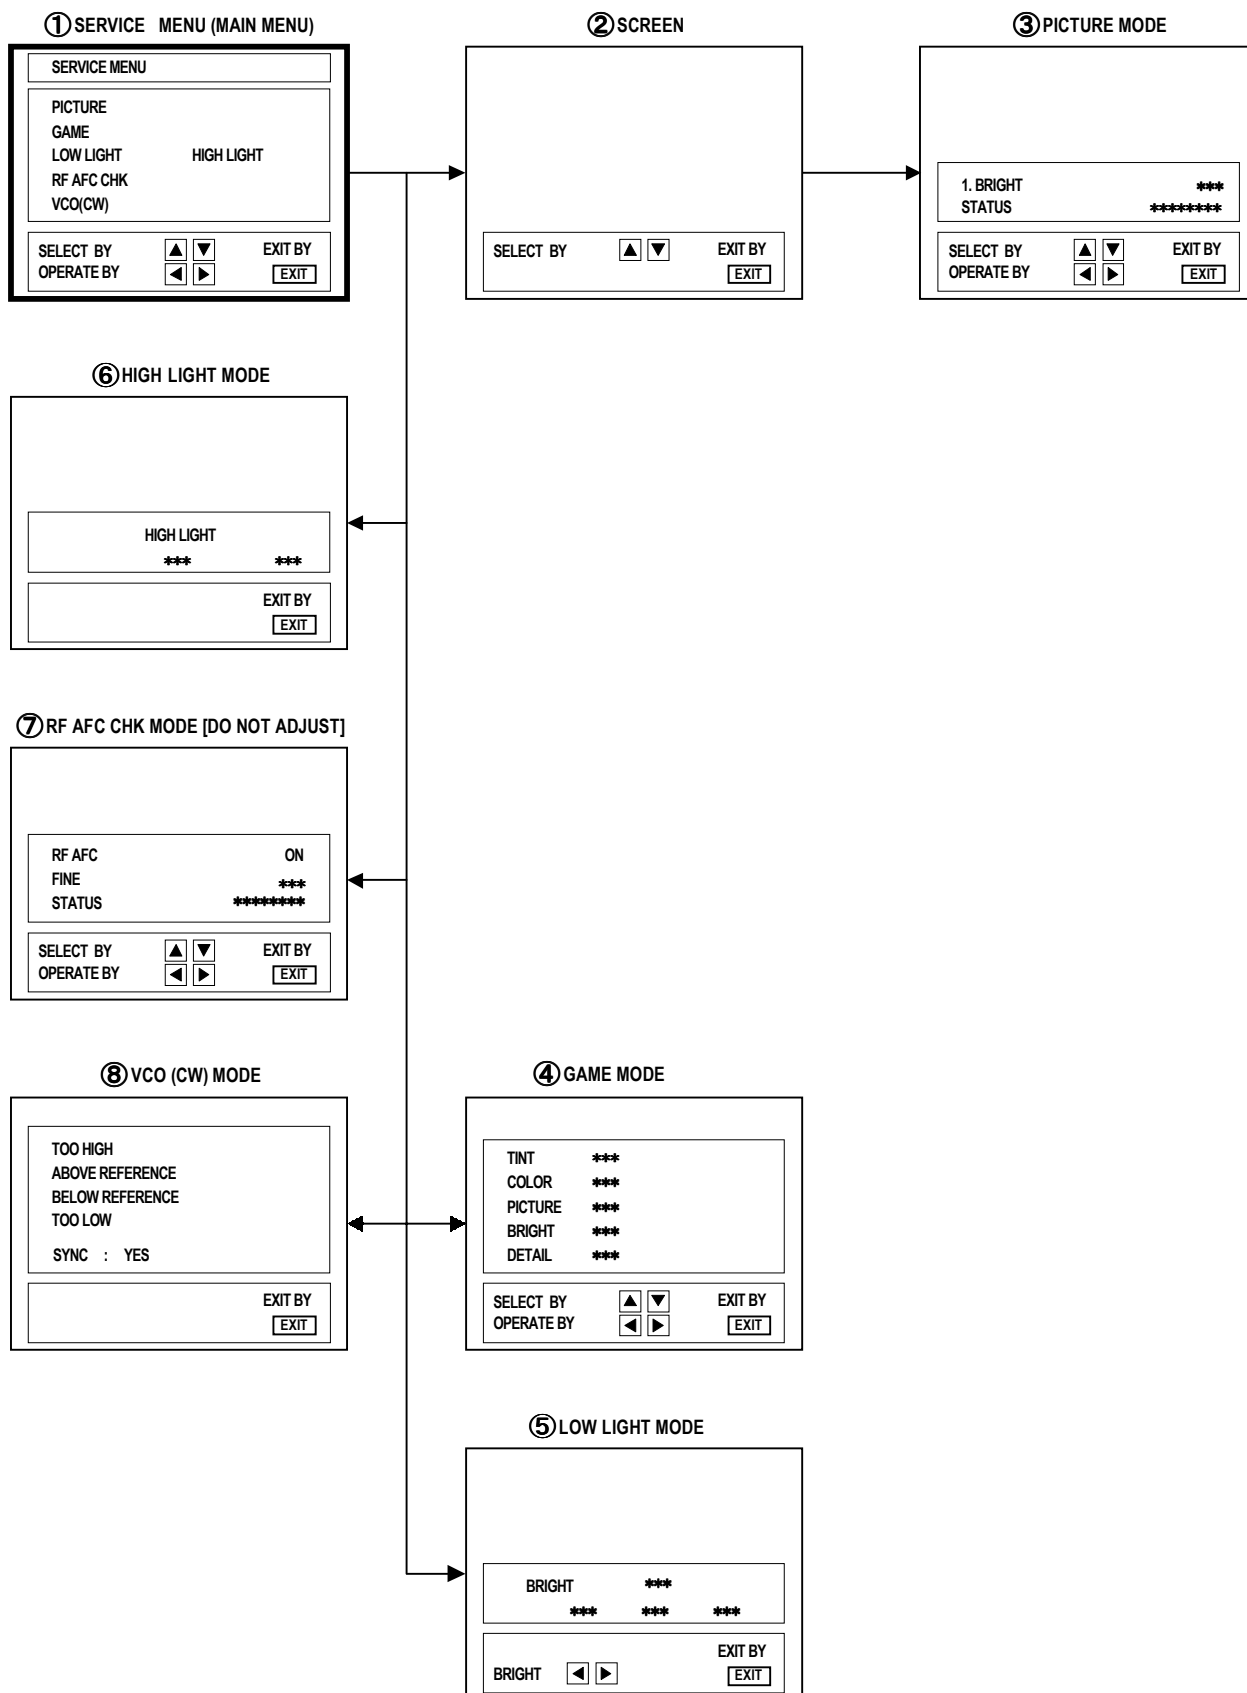

(4) Setting method

- 1) UP / DOWN key of the MENU
Select the SETTING ITEM.
- 2) LEFT / RIGHT key of the MENU
Setting(adjust) the INITIAL SETTING VALUE of the SETTING ITEM.
When the key is released the SETTING VALUE will be stored (memorized).
- 3) EXIT key
Returns to the previous screen.

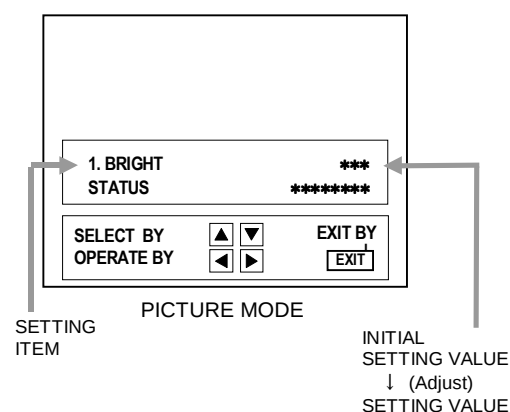


(5) Releasing SERVICE MENU

- 1) After returning to the SERVICE MENU upon completion of the setting (adjustment) work, press the EXIT key again.

★ The settings for LOW LIGHT and HIGH LIGHT are described in the WHITE BALANCE page of ADJUSTMENT.

★ The setting for VCO(CW) are described in the IF VCO page of ADJUSTMENT.

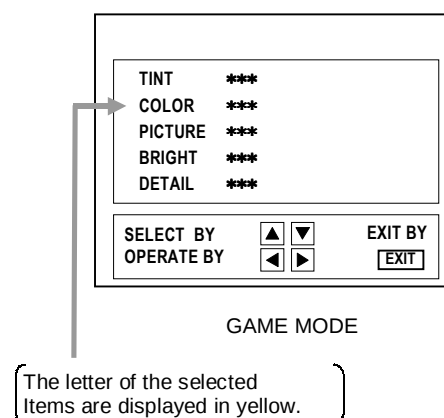

INITIAL SETTING VALUE OF SERVICE MENU

1. Adjustment of the SERVICE MENU is made on the basis of the initial setting values; however, the new setting values which set the screen in its optimum condition may differ from the initial setting.
2. Do not change the initial setting values of the setting (Adjustment) items not listed in “ADJUSTMENT” .

● PICTURE MODE

- ◇ The four setting items in the video mode No.7 EXT BRI., No.8 EXT PIC., No.11 EXT TINT and No.12 EXT COL. are linked to the items in the TV MODE No.1 BRIGHT, No.2 PICTURE, No.5 TINT and No.6 COLOR, respectively. When the setting items in the TV mode are adjusted, the values in the setting items in the video mode are revised automatically to the same values in the TV mode.(The initial setting values given in () are off-set values.)
- ◇ When the four items (No.7, 8, 11 and 12) are adjusted in the video mode, the setting values in each item are revised independently.

No.	Setting (Adjustment) items	Variable range	Initial setting value
1.	BRIGHT	0 ~ 127	64
2.	PICTURE	0 ~ 127	60
3.	TV DTL(TV DETAIL)	0 ~ 63	23
4.	TV BPF(TV B.P.FILTER)	0 / 1	0
5.	TINT	0 ~ 127	57
6.	COLOR	0 ~ 127	55
7.	EXT BRI.(EXT.BRIGHT)	±25	(-2)
8.	EXT PIC.(EXT.PICTURE)	±25	(-2)
9.	EXT DTL(EXT.DETAIL)	0 ~ 63	25
10.	EXT BPF(EXT.B.P.FILTER)	0 / 1	0
11.	EXT TINT	±25	(+9)
12.	EXT COL.(EXT.COLOR)	±25	(+3)
13.	V SIZE	0 ~ 63	20
14.	V CENT.(V.CENTER)	0 ~ 7	0
15.	H POS.(H.POSITION)	0 ~ 31	20
16.	OSD HP (OSD H POSITION)	0 ~ 31	23
17.	OSD VP (OSD V POSITION)	0 ~ 15	14
18.	H AFC	0 / 1	0
19.	RF AGC	0 ~ 63	40
20.	OSC SEL	0 / 1	0

● GAME MODE

No.	Setting (Adjustment) item	Variable range	initial setting value
1.	TINT	± 20	± 0
2.	COLOR	± 20	± 0
3.	PICTURE	± 20	-10
4.	BRIGHT	± 20	-2
5.	DETAIL	± 15	+10

● LOW LIGHT MODE

No.	Setting (Adjustment) item	Variable range	initial setting value
1.	R CUTOFF	0 ~ 255	20
2.	G CUTOFF	0 ~ 255	20
3.	B CUTOFF	0 ~ 255	20

● HIGH LIGHT MODE

No.	Setting (Adjustment) item	Variable range	initial setting value
1.	G DRIVE	0 ~ 255	128
2.	B DRIVE	0 ~ 255	128

● RF AFC CHK MODE


No.	Setting (Adjustment) item	Variable range	initial setting value
1.	RF AFC	ON / OFF	ON
2.	FINE	-77 ~ +77	$\pm * * *$ DO NOT ADJUST


ADJUSTMENTS

● B1 POWER SUPPLY




Item	Measuring instrument	Test point	Adjustment part	Description
Check of B1 POWER SUPPLY	DC Voltmeter	TP-91 (B1) TP-E(⊥)		1. Receive a black-and-white signal. 2. Connect the DC Voltmeter to TP-91 (B1) and TP-E(⊥). 3. Confirm that the voltage is DC134V ^{+2V}/_{-2.5V}.

● ADJUSTMENT OF VIDEO / DEF. CIRCUIT

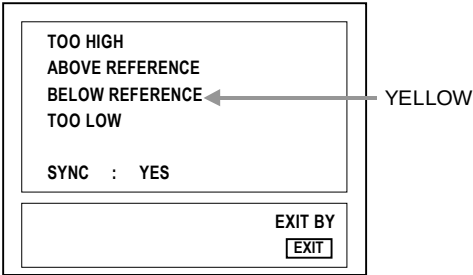Item	Measuring instrument	Test point	Adjustment part	Description
IF VCO adjustment	Signal generator		CW TRANSF. (T131) [VCO(CW)] MODE	● Under normal conditions, no adjustment is required. 1. Receive a NTSC broadcast. (use channels without offset frequency). 2. Select the VCO(CW) mode from the SERVICE MENU. 3. Confirm the color change (yellow) from “TOO HIGH” to “TOO LOW” by CW TRANSF. and “SYNC : YES” being shown on the screen. Then, adjust CW TRANSF. until “BELOW REFERENCE” mark turns yellow and confirm again “ SYNC : YES” being shown on the screen.
				
RF. AGC adjustment			No.19 RF AGC	1. Receive a broadcast. 2. Select “No.19 RF AGC” of the PICTURE MODE. 3. Press the MUTE key and turn off color. 4. With the MENU LEFT key, get noise in the screen picture. (0 side of setting value) 5. Press the MENU RIGHT key and stop when noise disappears from the screen. 6. Change to other channels and make sure that there is no irregularity. 7. Press the MUTE key and get color out.
FOCUS adjustment	Signal generator		FOCUS VR [In HVT]	1. Receive a crosshatch signal. 2. While looking at the screen, adjust FOCUS VR so that the vertical and horizontal lines will be clear and in fine detail. 3. Make sure that the picture is in focus even when the screen gets darkened.

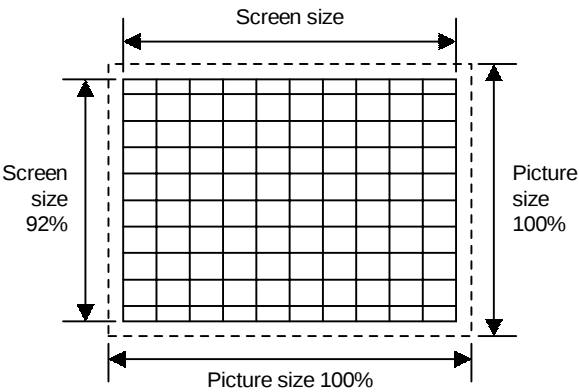Item	Measuring instruments	Test point	Adjustment part	Description
V.SIZE Adjustment	Signal generator		No.13 V.SIZE	1. Receive a crosshatch signal. 2. Select No.13 V SIZE in the PICTURE MODE. 3. Set the initial setting value of No.13 V SIZE with the LEFT / RIGHT key of the MENU. 4. Adjust No.13 V SIZE until the vertical screen size is 92%.
 The diagram illustrates the vertical size adjustment. It shows a 10x10 grid of squares. A dashed rectangle surrounds the grid, with arrows indicating its height and width. Labels indicate 'Screen size' for the outer dashed rectangle and 'Screen size 92%' for its vertical dimension. Inside the dashed rectangle is a solid rectangle, also labeled 'Picture size 100%' for both its horizontal and vertical dimensions.				
H.POSITION Adjustment	Signal generator		No.15 H POS.	1. Receive a crosshatch signal. 2. Select the No.15 H POS. of the PICTURE MODE. 3. Set the initial setting value of the No.15 H POS. with the LEFT / RIGHT key of the MENU. 4. Adjust the No.15 H POS. until the screen will be horizontally centered.

● ADJUSTMENT OF WHITE BALANCE

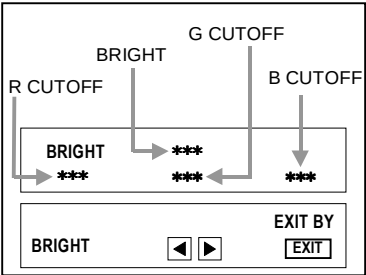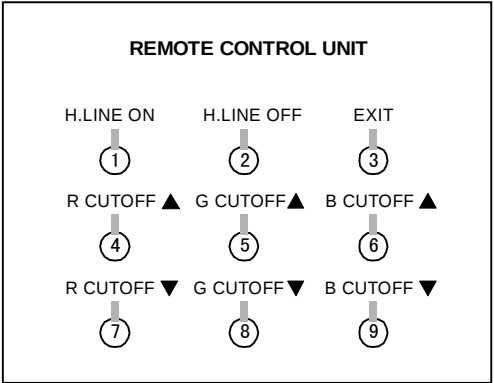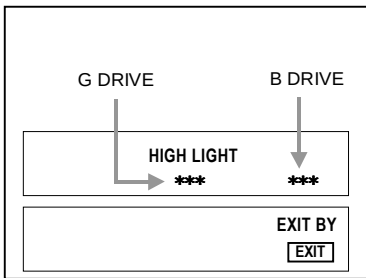Item	Measuring instruments	Test point	Adjustment part	Description
WHITE BALANCE (Low Light) Adjustment	Signal generator		BRIGHT R. CUTOFF G. CUTOFF B. CUTOFF SCREEN VR [In HVT]	1. Receive a black-and-white signal.(Color off) 2. Select the [LOW LIGHT] MODE from the SERVICE MENU. 3. Set the initial setting value of BRIGHT with the LEFT / RIGHT key of the remote control unit. 4. Set the initial setting value of R CUTOFF, G CUTOFF and B CUTOFF with the ④ to ⑨ key of the remote control unit. 5. Display a single horizontal line by pressing the ①key of the remote control unit. 6. Turn the screen VR all the way to the left. 7. Turn the screen VR gradually to the right from the left until either one of the red, blue or green colors appears faintly. 8. Adjust the two colors which did not appear until the single horizontal line that is displayed becomes white using the ④ to ⑨ keys of the remote control unit. 9. Turn the screen VR to where the single horizontal line glows faintly. 10. Press the ② key to return to the regular screen. * The ③ EXIT key is the cancel key for the WHITE BALANCE.
[LOW LIGHT] MODE  				
WHITE BALANCE (High Light) Adjustment	Signal generator		G. DRIVE B. DRIVE	1. Receive a black-and-white signal. (Color off) 2. Select the [HIGH LIGHT] MODE in the SERVICE MENU. 3. Set the initial setting value of G DRIVE and B DRIVE with the ⑤, ⑥, ⑧ and ⑨ keys of the remote control unit. 4. Adjust the screen until it becomes white using the ⑤, ⑥, ⑧ and ⑨ keys of the remote control unit. * The ③ (EXIT) key is the cancel key for the WHITE BALANCE.
[HIGH LIGHT] MODE 				Remote Control Unit ① key : H.LINE ON ② key : H.LINE OFF ③ key : EXIT ⑤ key : G DRIVE ▲ ⑥ key : B DRIVE ▲ ⑧ key : G DRIVE ▼ ⑨ key : B DRIVE ▼


● **ADJUSTMENT OF PICTURE**

Item	Measuring instruments	Test point	Adjustment part	Description
SUB BRIGHT Adjustment			No.1 BRIGHT	1. Receive a broadcast. 2. Select No.1 BRIGHT of the PICTURE MODE. 3. Set the initial setting value of the No.1 BRIGHT with the LEFT / RIGHT key of the MENU. 4. If the brightness is not best with the initial setting value, make fine adjustment of the No.1 BRIGHT until you get the optimum brightness.
SUB CONTRAST Adjustment			No.2 PICTURE	1. Receive a broadcast. 2. Select No.2 PICTURE of the PICTURE MODE. 3. Set the initial setting value of the No.2 PICTURE with the LEFT / RIGHT key of the MENU. 4. If the contrast is not best with the initial setting value, make fine adjustment of the No.2 PICTURE until you get the optimum contrast.
SUB COLOR Adjustment			No.6 COLOR	1. Receive a broadcast. 2. Select No.6 COLOR of the PICTURE MODE. 3. Set the initial setting value of the No.6 COLOR with the LEFT / RIGHT key of the MENU. 4. If the color is not best with the initial setting value, make fine adjustment of the No.6 COLOR until you get the optimum color.
SUB TINT Adjustment			No.5 TINT	1. Receive a broadcast. 2. Select No.5 TINT of the PICTURE MODE. 3. Set the initial setting value of the No.5 TINT with the LEFT / RIGHT key of the MENU. 4. If the tint is not best with the initial setting value, make fine adjustment of the No.5 TINT until you get the optimum tint.

ADJUSTMENT OF PURITY / CONVERGENCE

PURITY ADJUSTMENT

1. Demagnetize CRT with the demagnetizer.
2. Loosen the retainer screw of the deflection yoke.
3. Remove the wedges.
4. Input a green raster signal from the signal generator, and turn the screen to green raster.
5. Move the deflection yoke backward.
6. Bring the long lug of the purity magnets on the short lug and position them horizontally. (Fig.2)
7. Adjust the gap between two lugs so that the GREEN RASTER will come into the center of the screen. (Fig.3)
8. Move the deflection yoke forward, and fix the position of the deflection yoke so that the whole screen will become green.
9. Insert the wedge to the top side of the deflection yoke so that it will not move.
10. Input a crosshatch signal.
11. Verify that the screen is horizontal.
12. Input red and blue raster signals, and make sure that purity is properly adjusted.

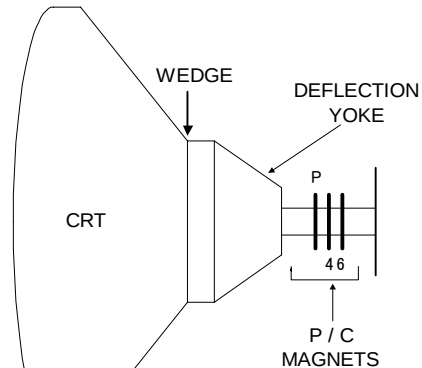

• P/C MAGNETS

P : PURITY MAGNET
4 : 4 POLES (convergence magnets)
6 : 6 POLES (convergence magnets)

Fig.1

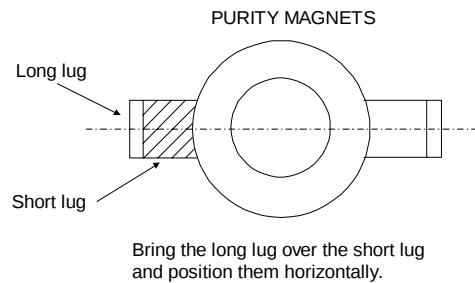


Fig.2

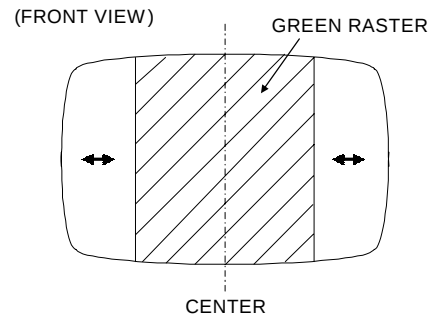


Fig.3

STATIC CONVERGENCE ADJUSTMENT

1. Input a crosshatch signal.
2. Using 4-pole convergence magnets, overlap the red and blue lines in the center of the screen (Fig.1) and turn them to magenta (red/blue).
3. Using 6-pole convergence magnets, overlap the magenta(red/blue) and green lines in the center of the screen and turn them to white.
4. Repeat 2 and 3 above, and make best convergence.

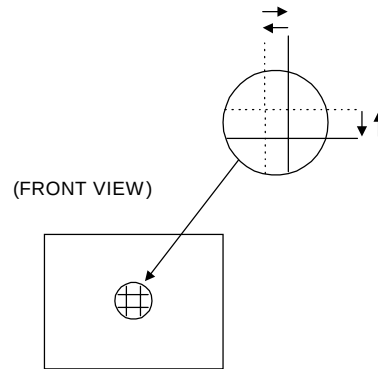


Fig.1

DYNAMIC CONVERGENCE ADJUSTMENT

1. Move the deflection yoke up and down and overlap the lines in the periphery. (Fig. 2)
2. Move the deflection yoke left to right and overlap the lines in the periphery. (Fig. 3)
3. Repeat 1 and 2 above, and make best convergence.

(FRONT VIEW)

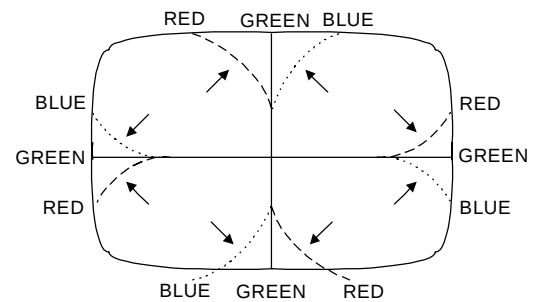


Fig.2

(FRONT VIEW)

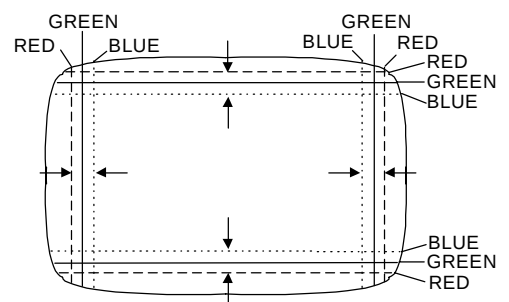


Fig.3

- After adjustment, fix the wedge at the original position.
Fasten the retainer screw of the deflection yoke.
Fix the 6 magnets with glue.

HOW TO CHECK THE HIGH VOLTAGE HOLD DOWN CIRCUIT

1. HIGH VOLTAGE HOLD DOWN CIRCUIT

After repairing the high voltage hold down circuit shown in Fig. 1.
This circuit shall be checked to operate correctly.

2. CHECKING OF THE HIGH VOLTAGE HOLD DOWN CIRCUIT

- (1) Turn the POWER SW ON.
- (2) As shown in Fig. 1, set the resistor (between ☐ connector ☐ 1 & ☐ 3).
- (3) Make sure that the screen picture disappears.
- (4) Temporarily unplug the power cord.
- (5) Remove the resistor (between ☐ connector ☐ 1 & ☐ 3).
- (6) Again plug the power cord, make sure that the normal picture is displayed on the screen.

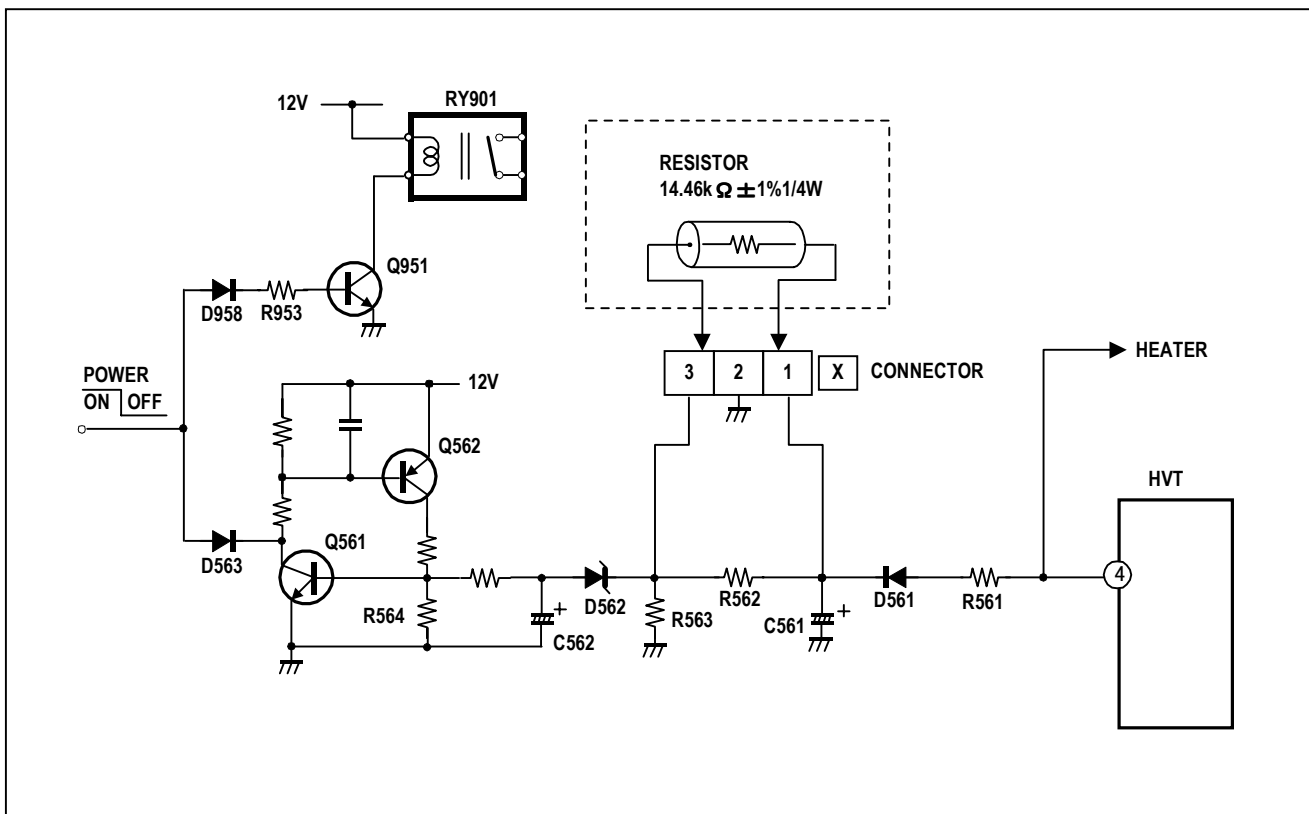


Fig. 1

SELF CHECK FUNCTIONS

1. Outline

This model has self check functions given below. When a malfunction has been detected, the POWER is turned off and the LED flashes to inform of the failure. The malfunction is detected by the signal input state of the control line connected to the microcomputer.

2. Self check items

Check item	Details of detection	Method of detection	State of malfunction
CRT NECK protector (Also detected if the power supply line output from the HVT (High voltage Transformer) has shorted with the ground.)	When the vertical circuit S-correction capacitor C427 is shorted, detect the potential drop of the C427, and prevent the burn damage to the CRT NECK. (Grounding of shorting of the power supply output from the HVT to the vertical circuit, and the small signal power supply is also detected.)	The microcomputer detects at 1 second intervals. If NG is detected for more than 1 ms, a malfunction is interpreted.	When a malfunction has been detected, the POWER is turned off. While the POWER is being turned off, the power key of the remote controller is not operational until the power code is taken out and put in again.

3. Self check indicating function


The self-check function begins detection about 5 seconds after power is supplied.

In the event a malfunction is detected, the power is cut off immediately.

At this time, the ON-TIMER LED flashes to inform of the malfunction.

[ON-TIMER LED indication]

The ON-TIMER LED flashes at 0.5 seconds intervals.

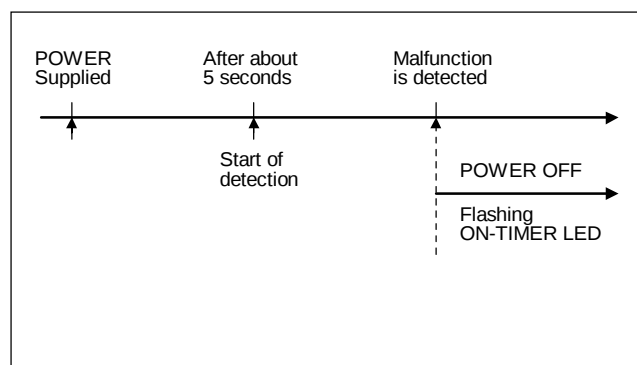

C-13310
C-13311

JVC

SCHEMATIC DIAGRAMS


COLOR TELEVISION

C-13310_{/S}
C-13311_{/S}

BASIC CHASSIS

FV5

CD-ROM No.SML200203

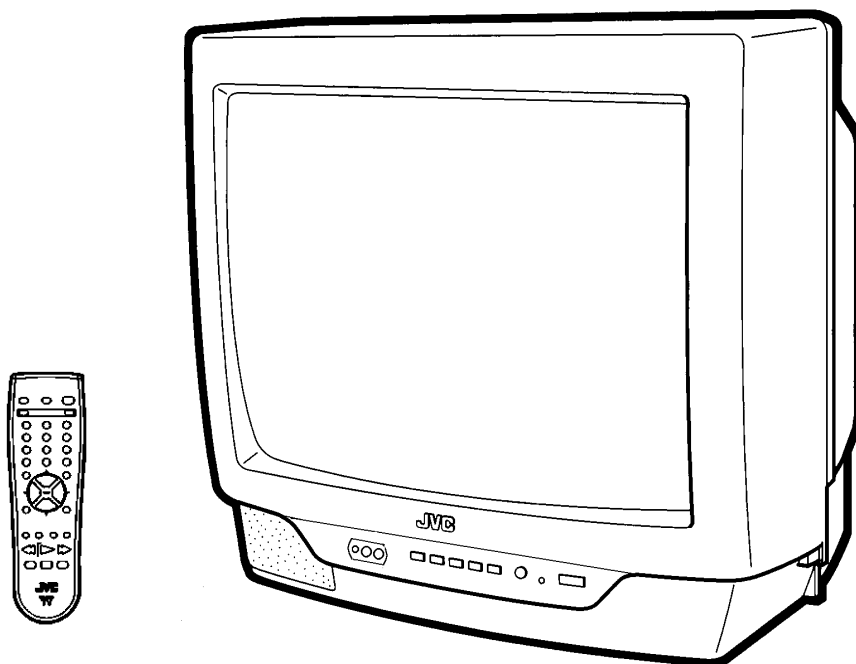

CONTENTS

■ NOTE ON USING CIRCUIT DIAGRAMS	2-1
■ SEMICONDUCTOR SHAPES	2-2
■ BLOCK DIAGRAM	2-3
■ CIRCUIT DIAGRAMS	2-5
■ PATTERN DIAGRAMS	2-9
■ CHANNEL CHART	2-11

CHANNEL CHART (CA)

MODE		BAND	CHANNEL		TUNER
TV	CATV		REAL	DISP.	BAND
○	○	VL	02 03 04 05 06		I
		VH	07 08 09 10 11 12 13		II
×	○	MID	A	14	
			B	15	
			C	16	
			D	17	
			E	18	
			F	19	
			G	20	
			H	21	
			I	22	
		SUPER	J	23	
			K	24	
			L	25	
			M	26	
			N	27	
			O	28	
			P	29	
			Q	30	
			R	31	
		HYPER	S	32	
			T	33	
			U	34	
			V	35	
			W	36	
			W+1	37	
			W+2	38	
			W+3	39	
			W+4	40	
			W+5	41	
			W+6	42	
			W+7	43	
W+8	44				
W+9	45				
W+10	46				
W+11	47				
W+12	48				
W+13	49				
W+14	50				
W+15	51				
W+16	52				
W+17	53				
W+18	54				
W+19	55				
W+20	56				
W+21	57				
W+22	58				
W+23	59				
W+24	60				
W+25	61				
W+26	62				
W+27	63				
W+28	64				
ULTRA	W+29	65			
	W+30	66			
	W+31	67			
	W+32	68			
	W+33	69			
	W+34	70			
				IV	

MODE		BAND	CHANNEL		TUNER BAND
TV	CATV		REAL	DISP.	
×	○	ULTRA	W+35	71	IV
			W+36	72	
			W+37	73	
			W+38	74	
			W+39	75	
			W+40	76	
			W+41	77	
			W+42	78	
			W+43	79	
			W+44	80	
			W+45	81	
			W+46	82	
			W+47	83	
			W+48	84	
			W+49	85	
			W+50	86	
			W+51	87	
			W+52	88	
			W+53	89	
			W+54	90	
			W+55	91	
			W+56	92	
			W+57	93	
			W+58	94	
			W+59	100	
			W+60	101	
			W+61	102	
			W+62	103	
			W+63	104	
			W+64	105	
			W+65	106	
			W+66	107	
			W+67	108	
			W+68	109	
			W+69	110	
			W+70	111	
			W+71	112	
			W+72	113	
			W+73	114	
			W+74	115	
			W+75	116	
			W+76	117	
			W+77	118	
			W+78	119	
			W+79	120	
			W+80	121	
			W+81	122	
			W+82	123	
			W+83	124	
			W+84	125	
		SUB MID	A-8	01	I
			A-4	96	
			A-3	97	II
			A-2	98	
			A-1	99	
○	×	UHF	14 }	69	IV
TOTAL 180CH { VHF 124CH UHF 56CH					
NOTE: TO RECEIVE THE SUBSCRIPTION OR PREMIUM PROGRAMMING FROM CERTAIN CABLE COMPANIES. SPECIAL ADAPTERS MAY BE REQUIRED.					

C-13310/s ,C-13311/s
STANDARD CIRCUIT DIAGRAM

NOTE ON USING CIRCUIT DIAGRAMS

1.SAFETY

The components identified by the △symbol and shading are critical for safety. For continued safety replace safety critical components only with manufactures recommended parts.

2.SPECIFIED VOLTAGE AND WAVEFORM VALUES

The voltage and waveform values have been measured under the following conditions.

- (1)Input signal : Color bar signal
- (2)Setting positions of each knob/button and variable resistor : Original setting position when shipped
- (3)Internal resistance of tester :DC 20kΩ /V
- (4)Oscilloscope sweeping time :H ⇒ 20μS/div
:V ⇒ 5mS/div
:Others ⇒ Sweeping time is specified
- (5)Voltage values :All DC voltage values

* Since the voltage values of signal circuit vary to some extent according to adjustments, use them as reference values.

3.INDICATION OF PARTS SYMBOL [EXAMPLE]

- In the PW board :R1209 → R209

4.INDICATIONS ON THE CIRCUIT DIAGRAM

(1)Resistors

- Resistance value

- No unit :[Ω]
- K :[K Ω]
- M :[M Ω]

- Rated allowable power

- No indication :1/ 16 [W]
- Others :As specified

- Type

- No indication :Carbon resistor
- OMR :Oxide metal film resistor
- MFR :Metal film resistor
- MPR :Metal plate resistor
- UNFR :Uninflammable resistor
- FR :Fusible resistor

* Composition resistor 1/2 [W] is specified as 1/2S or Comp.

(2)Capacitors

- Capacitance value

- 1 or higher :[pF]
- less than 1 :[μF]

- Withstand voltage

- No indication :DC50[V]
- Others :DC withstand voltage [V]
- AC indicated :AC withstand voltage [V]

* Electrolytic Capacitors

47/50[Example]:Capacitance value [μF]/withstand voltage[V]

- Type

- No indication :Ceramic capacitor
- MM :Metalized mylar capacitor
- PP :Polypropylene capacitor
- MPP :Metalized polypropylene capacitor
- MF :Metalized film capacitor
- TF :Thin film capacitor
- BP :Bipolar electrolytic capacitor
- TAN :Tantalum capacitor

(3)Coils

- No unit :[μH]
- Others :As specified

(4)Power Supply

- :B1 :B2 (12V)
- :9V :5V

* Respective voltage values are indicated

(5)Test point

- :Test point :Only test point display

(6)Connecting method

- :Connector :Wrapping or soldering
- :Receptacle

(7)Ground symbol

- :LIVE side ground
- :ISOLATED(NEUTRAL) side ground
- :EARTH ground
- :DIGITAL ground

5.NOTE FOR REPAIRING SERVICE

This model's power circuit is partly different in the GND. The difference of the GND is shown by the LIVE : () side GND and the ISOLATED(NEUTRAL) : () side GND.Therefore, care must be taken for the following points.

- (1)Do not touch the LIVE side GND or the LIVE side GND and the ISOLATED(NEUTRAL) side GND simultaneously. If the above caution is not respected, an electric shock may be caused. Therefore, make sure that the power cord is surely removed from the receptacle when, for example, the chassis is pulled out.
- (2)Do not short between the LIVE side GND and ISOLATED(NEUTRAL) side GND or never measure with a measuring apparatus measure with a measuring apparatus (oscilloscope, etc.) the LIVE side GND and ISOLATED(NEUTRAL) side GND at the same time. If the above precaution is not respected , a fuse or any parts will be broken.

◇ Since the circuit diagram is a standard one, the circuit and circuit constants may be subject to change for improvement without any notice.

NOTE
◇ Due improvement in performance, some part numbers show in the circuit diagram may not agree with those indicated in the part list.
When ordering parts, please use the numbers that appear in the Parts List.

CONTENTS

SEMICONDUCTOR SHAPES	2-2
BLOCK DIAGRAM	2-3
CIRCUIT DIAGRAMS	
MAIN PWB CIRCUIT DIAGRAM	2-5
PATTERN DIAGRAMS	
MAIN PWB & CRT SOCKET PATTERN	2-9
CHANNEL CHART	2-11

SEMICONDUCTOR SHAPES

TRANSISTOR

BOTTOM VIEW	FRONT VIEW				TOP VIEW
					CHIP TR

IC

BOTTOM VIEW	FRONT VIEW			TOP VIEW

CHIP IC


TOP VIEW	

CHANNEL CHART (US)


MODE		BAND	CHANNEL		TUNER BAND
TV	CATV		REAL	DISP.	
○	○	VL	02		I
			03		
			04		
			05		
			06		
		VH	07		II
			08		
			09		
			10		
			11		
×	○	MID	12		I
			13		
			A	14	II
			B	15	
			C	16	
			D	17	
			E	18	
			F	19	
			G	20	
		SUPER	H	21	II
			I	22	
			J	23	
			K	24	
			L	25	
			M	26	
			N	27	
			O	28	
			P	29	
			Q	30	
			R	31	
			S	32	
			T	33	
			U	34	
			V	35	
			W	36	
		HYPER	W+1	37	IV
			W+2	38	
			W+3	39	
			W+4	40	
			W+5	41	
			W+6	42	
			W+7	43	
			W+8	44	
			W+9	45	
			W+10	46	
			W+11	47	
			W+12	48	
			W+13	49	
			W+14	50	
			W+15	51	
			W+16	52	
			W+17	53	
			W+18	54	
			W+19	55	
		ULTRA	W+20	56	
			W+21	57	
			W+22	58	
			W+23	59	
			W+24	60	
			W+25	61	
			W+26	62	
			W+27	63	
			W+28	64	
			W+29	65	
			W+30	66	
			W+31	67	
			W+32	68	
			W+33	69	
			W+34	70	

MODE		BAND	CHANNEL		TUNER BAND
TV	CATV		REAL	DISP.	
×	○	ULTRA	W+35	71	IV
			W+36	72	
			W+37	73	
			W+38	74	
			W+39	75	
			W+40	76	
			W+41	77	
			W+42	78	
			W+43	79	
			W+44	80	
			W+45	81	
			W+46	82	
			W+47	83	
			W+48	84	
			W+49	85	
			W+50	86	
			W+51	87	
			W+52	88	
			W+53	89	
			W+54	90	
			W+55	91	
			W+56	92	
			W+57	93	
			W+58	94	
			W+59	100	
○	×	SUB MID	W+60	101	I
			W+61	102	
			W+62	103	
			W+63	104	
			W+64	105	
			W+65	106	
			W+66	107	
			W+67	108	
			W+68	109	
			W+69	110	
		UHF	W+70	111	IV
			W+71	112	
			W+72	113	
			W+73	114	
			W+74	115	
			W+75	116	
			W+76	117	
			W+77	118	
			W+78	119	
			W+79	120	
			W+80	121	
			W+81	122	
			W+82	123	
			W+83	124	
			W+84	125	
			A-8	01	
			A-4	96	
			A-3	97	
			A-2	98	
			A-1	99	
○	×	UHF	14	69	IV
TOTAL 180CH { VHF 124CH UHF 56CH					
NOTE: TO RECEIVE THE SUBSCRIPTION OR PREMIUM PROGRAMMING FROM CERTAIN CABLE COMPANIES. SPECIAL ADAPTERS MAY BE REQUIRED.					

BLOCK DIAGRAM

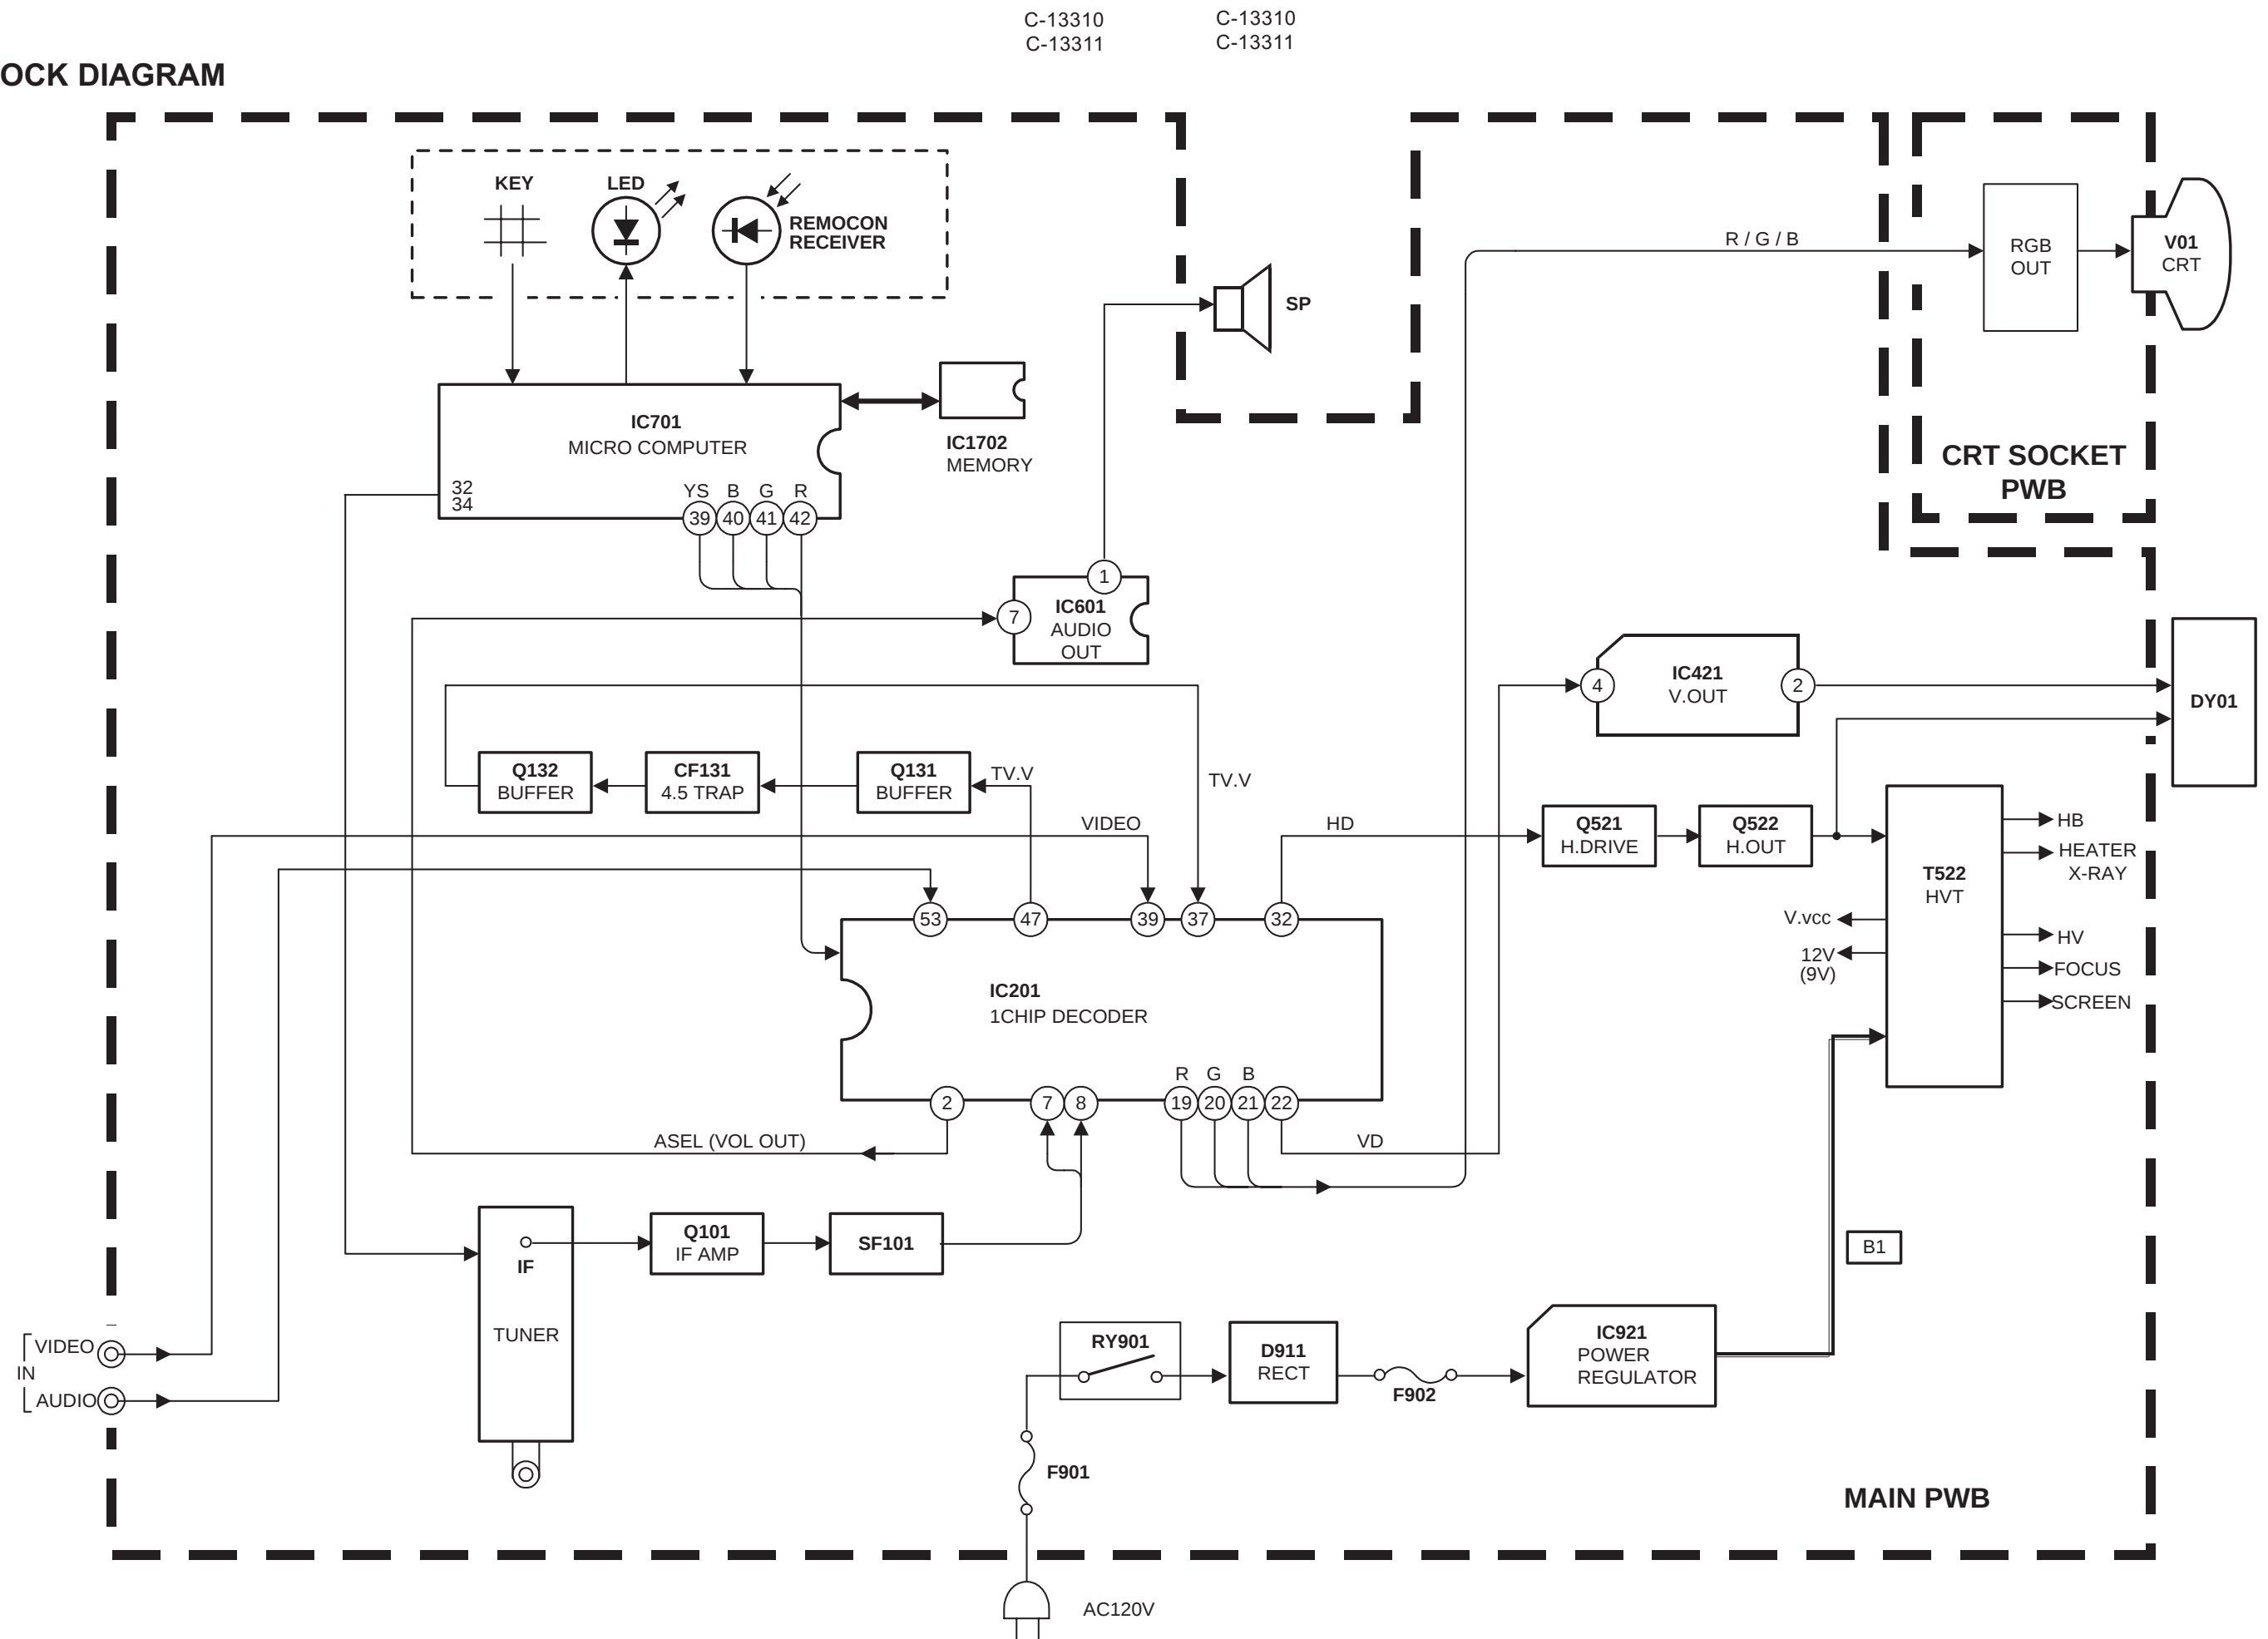


CIRCUIT DIAGRAMS MAIN PWB CIRCUIT DIAGRAMS

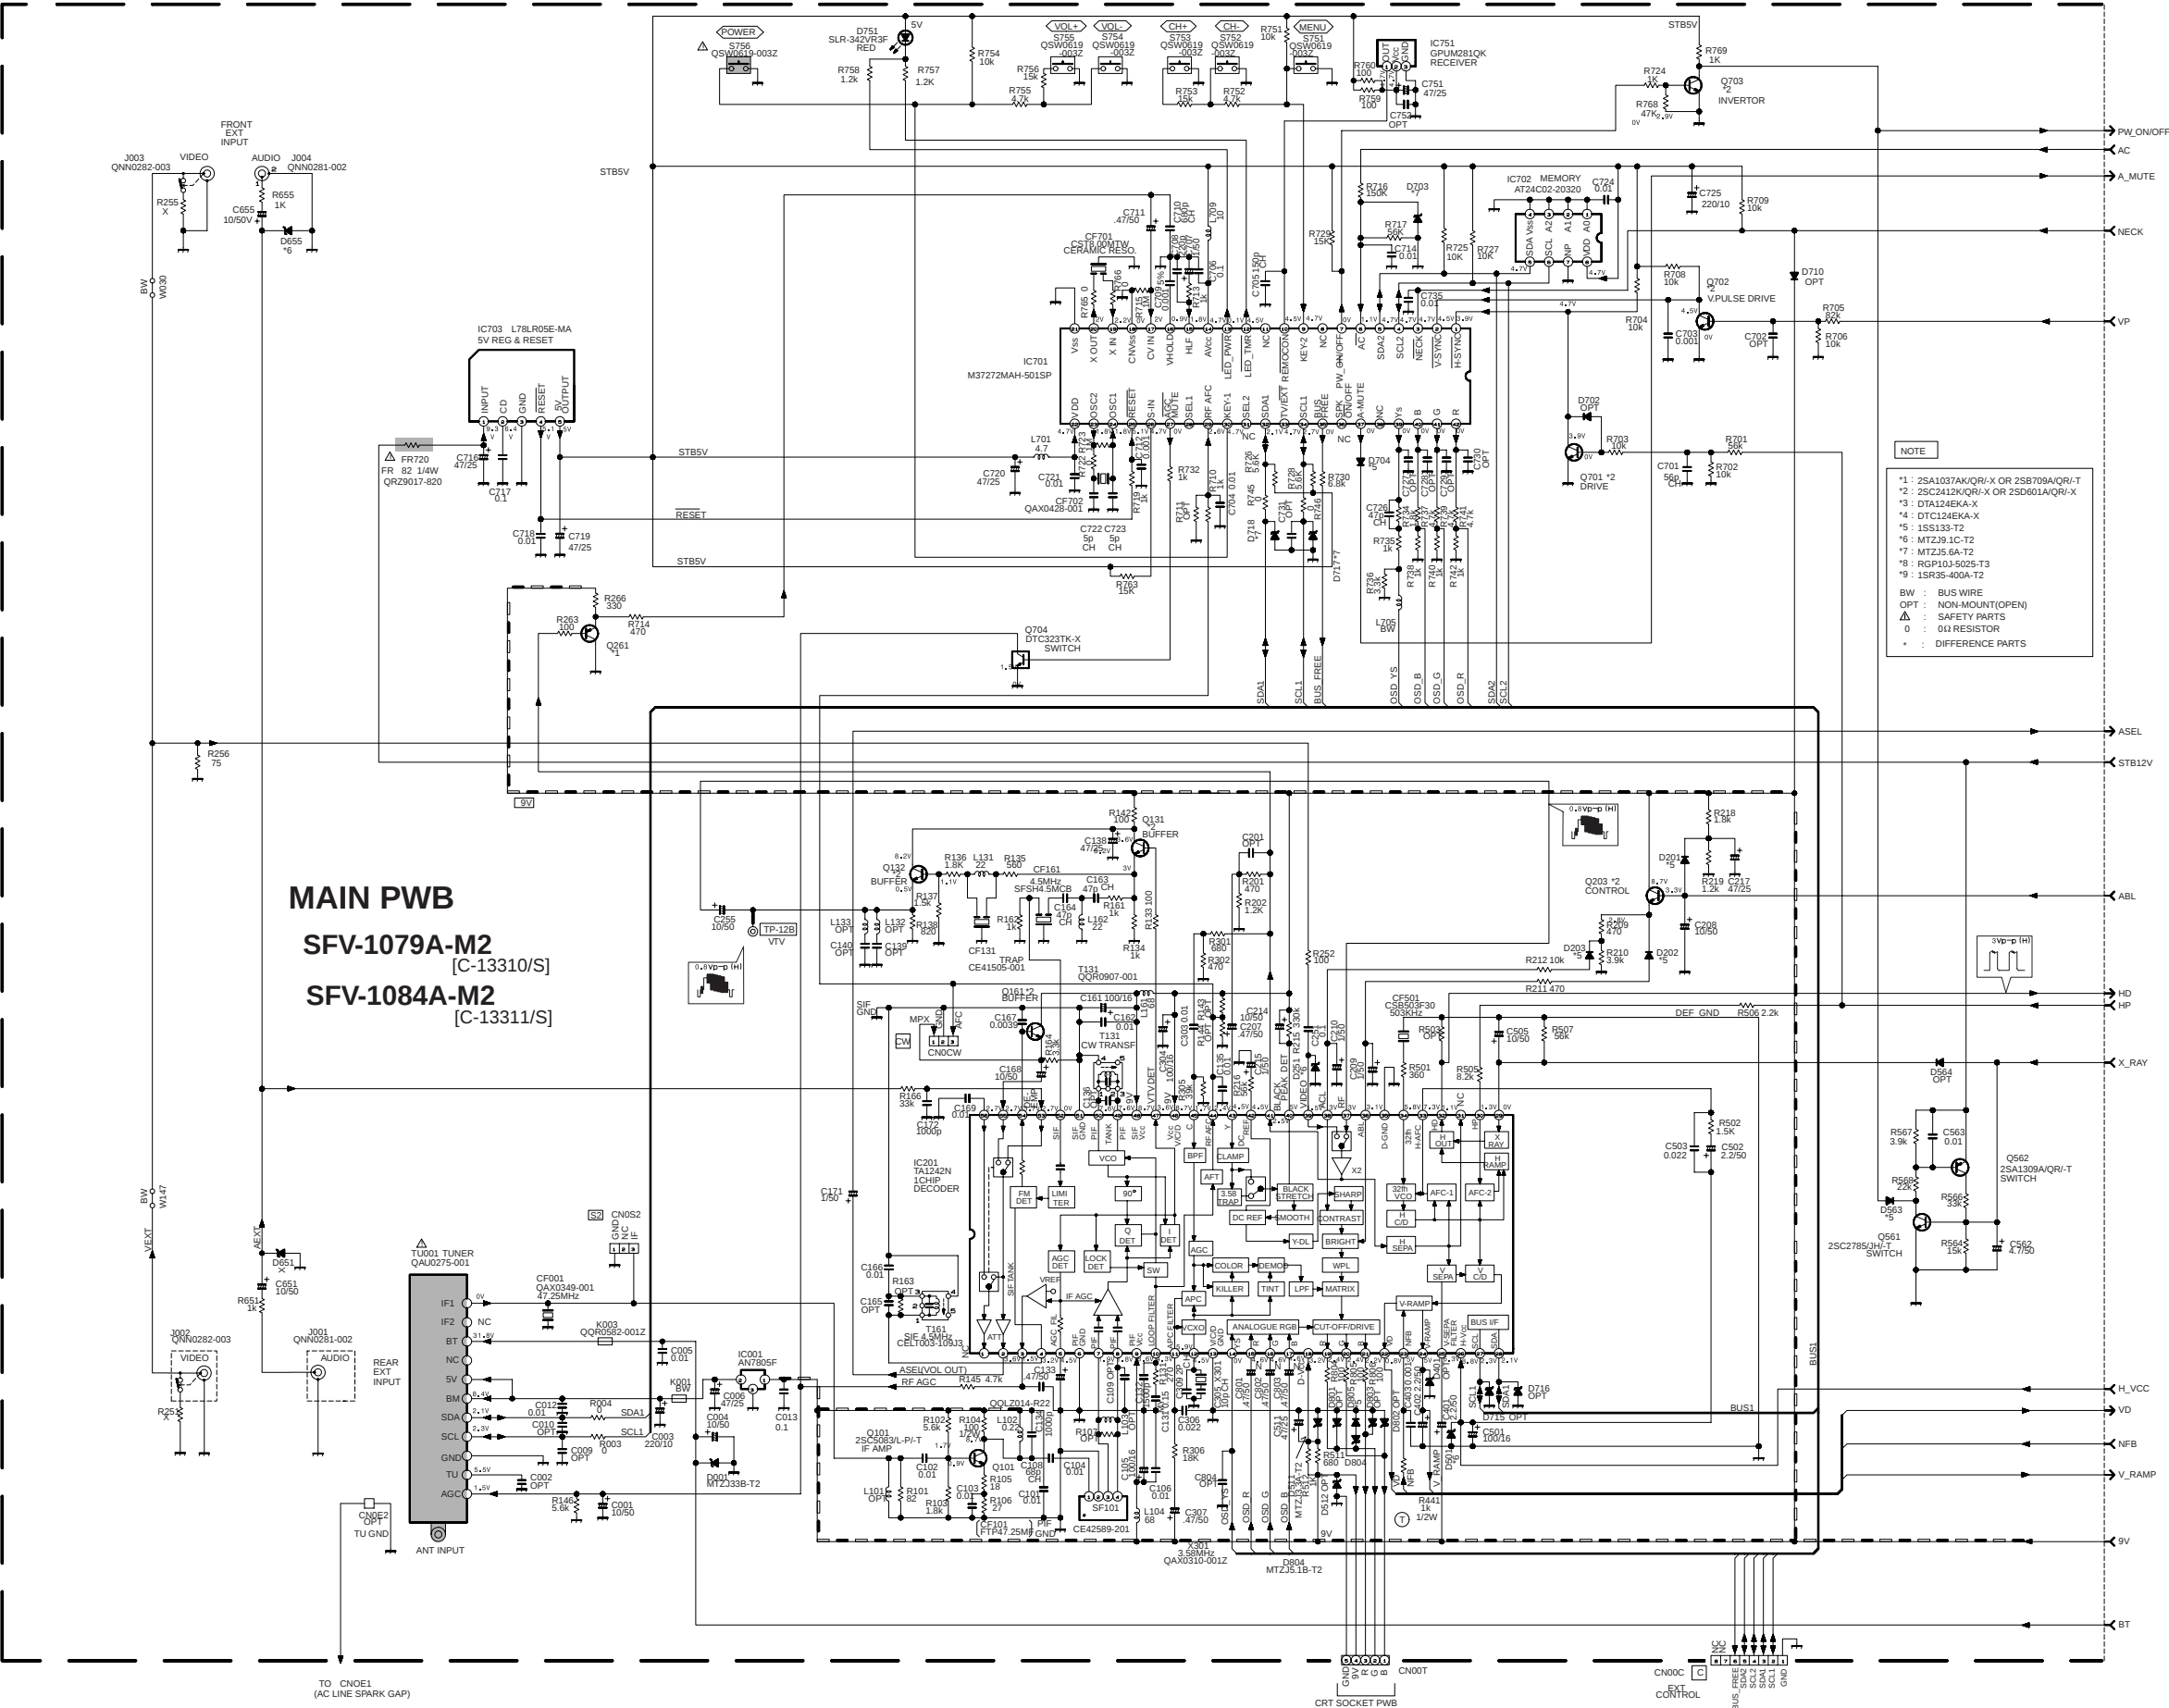

SFV-1079A-M3
[C-13310/S]

SFV-1084A-M3
[C-13311/S]

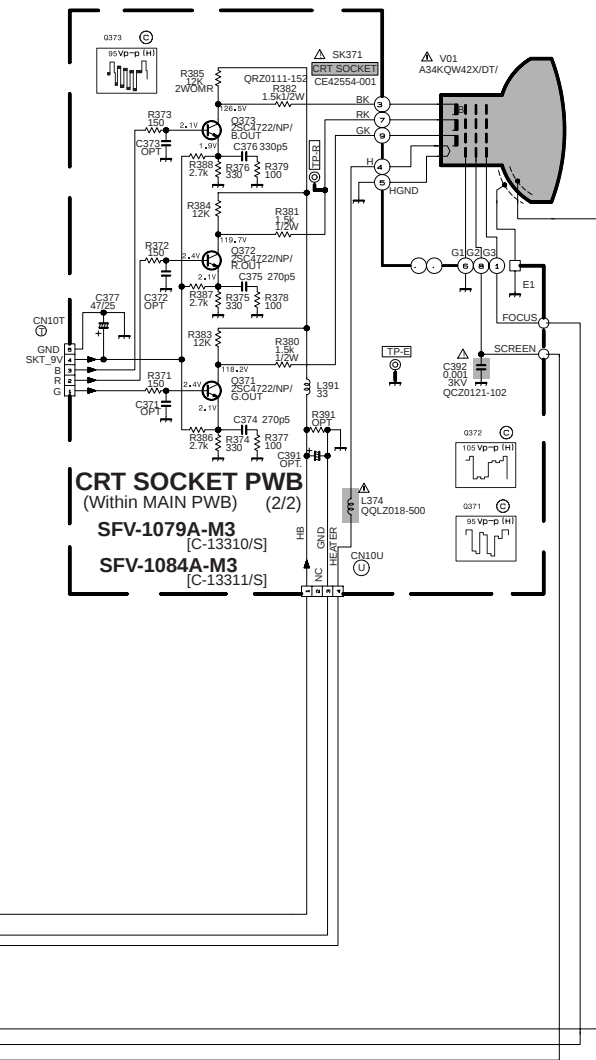


CRT SOCKET PW
(Within MAIN PWB) (2/

SFV-1079A-M3
[C-13310/S]

SFV-1084A-M3
[C-13311/S]

NOTE	
*1 : 25A1037AKJQR/-X	BW : BUS WIRE
*2 : 25C24120KJQR/-X	OPT : NON-MOUNT(OPEN)
*3 : D7A124EKA-X	 : SAFETY PARTS
*4 : D7C124EKA-X	0 : 0Ω RESISTOR
*5 : 1S5133-T2	* : DIFFERENCE PARTS
*6 : MTJ39-1C-T2	
*7 : MTJ35-6A-T2	
*8 : RGP103-5025-T3	
*9 : 1SR35-400A-T2	

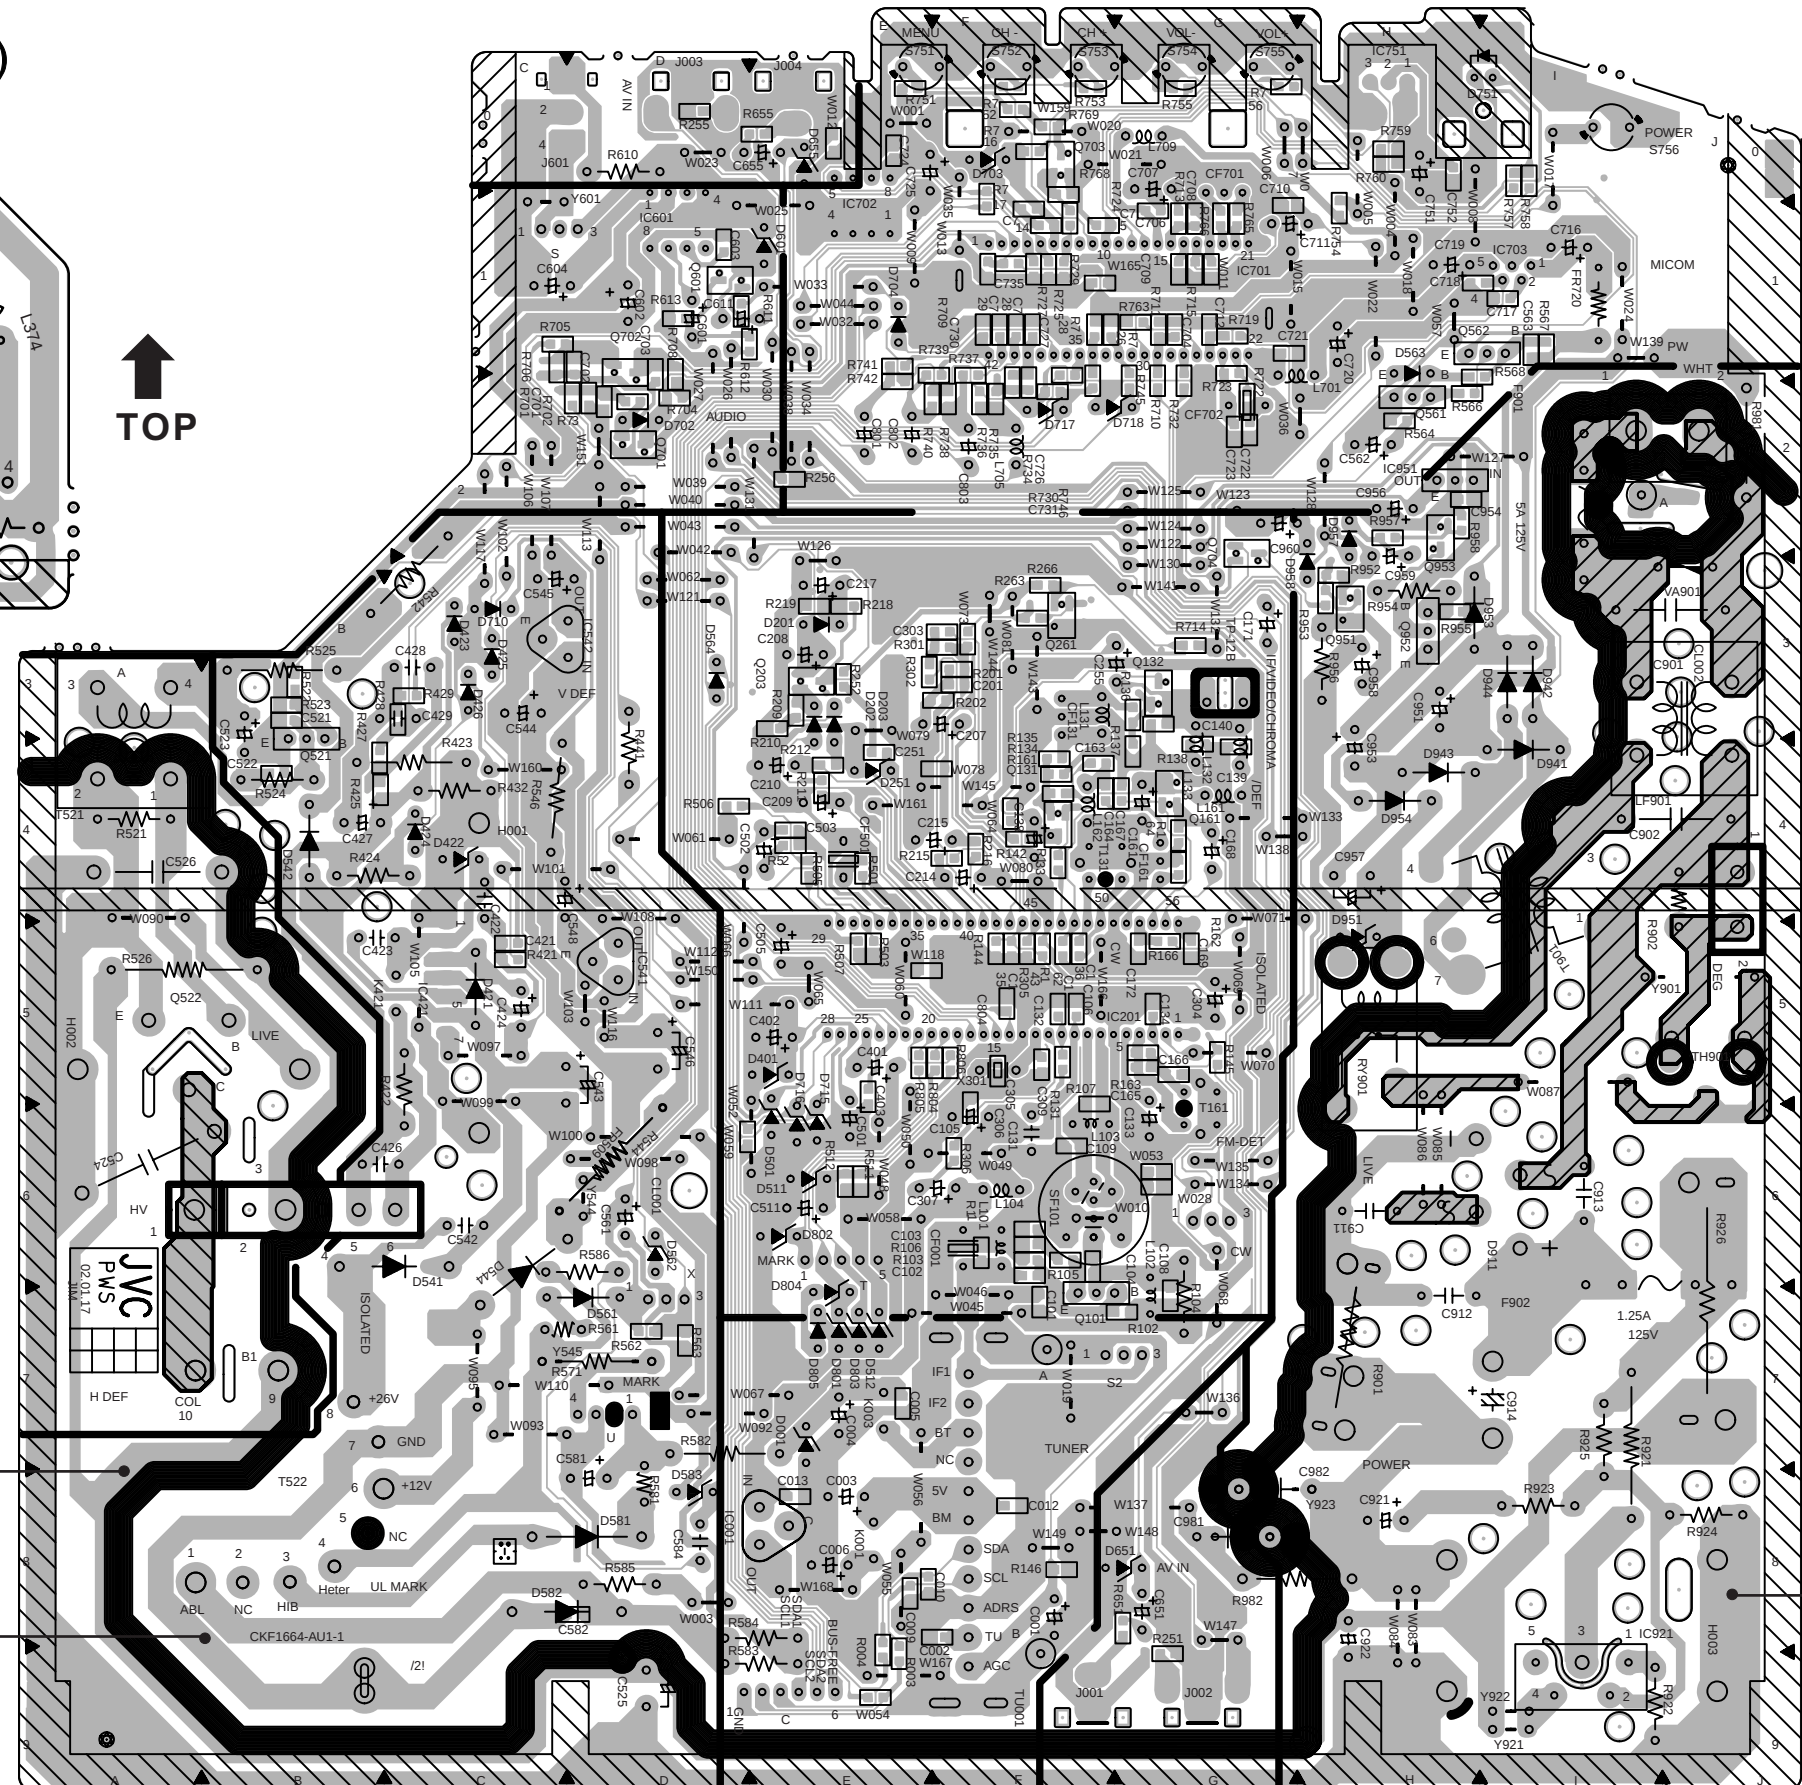MAIN PWBTP-E
($\pi\pi$)

(⊥)

JVC SERVICE & ENGINEERING COMPANY OF AMERICA

.DIVISION OF JVC AMERICAS CORP

Head office	:	1700 Valley Road, Wayne, New Jersey 07470	(973)315-5000
East Coast	:	10 New Maple Avenue, Pine Brook, New Jersey 07058	(973)396-1000
Midwest	:	705 Enterprise St. Aurora, Illinois 60504	(630)851-7855
West Coast	:	5665 Corporate Avenue, Cypress, California 90630	(714)229-8011
Southwest	:	10700 Hammerly, Suite 105, Houston, Texas 77043	(713)935-9331
Hawaii	:	2969 Mapunapuna Place, Honolulu, Hawaii 96819	(808)833-5828
Southeast	:	1500 Lakes Parkway, Lawrenceville, Georgia 30243	(770)339-2582

JVC CANADA INC.

Head office	:	21 Finchdene Square Scarborough, Ontario M1X 1A7	(416)293-1311
Vancouver	:	13040 Worster Court Richmond B.C. V6V 2B3	(604)270-1311

JVC

PARTS LIST

CAUTION

- The parts identified by the  symbol are important for the safety. Whenever replacing these parts, be sure to use specified ones to secure the safety .
- The parts not indicated in this Parts List and those which are filled with lines — in the Parts No. columns will not be supplied.
- P. W. Board Ass'y will not be supplied, but those which are filled with the Parts No. in the Parts No. columns will be supplied.

ABBREVIATIONS OF RESISTORS, CAPACITORS AND TOLERANCES

RESISTORS		CAPACITORS	
C R	Carbon Resistor	C CAP.	Ceramic Capacitor
F R	Fusible Resistor	E CAP.	Electrolytic Capacitor
P R	Plate Resistor	M CAP.	Mylar Capacitor
V R	Variable Resistor	HV CAP.	High Voltage Capacitor
HV R	High Voltage Resistor	MF CAP.	Metalized Film Capacitor
MF R	Metal Film Resistor	MM CAP.	Metalized Mylar Capacitor
MG R	Metal Glazed Resistor	MP CAP.	Metalized Polystyrol Capacitor
MP R	Metal Plate Resistor	PP CAP.	Polypropylene Capacitor
OM R	Metal Oxide Film Resistor	PS CAP.	Polystyrol Capacitor
CMF R	Coating Metal Film Resistor	TF CAP.	Thin Film Capacitor
UNF R	Non-Flammable Resistor	MPP CAP.	Metalized Polypropylene Capacitor
CH V R	Chip Variable Resistor	TAN. CAP.	Tantalum Capacitor
CH MG R	Chip Metal Glazed Resistor	CH C CAP.	Chip Ceramic Capacitor
COMP. R	Composition Resistor	BP E CAP.	Bi-Polar Electrolytic Capacitor
LPTC R	Linear Positive Temperature Coefficient Resistor	CH AL E CAP.	Chip Aluminum Electrolytic Capacitor
		CH AL BP CAP.	Chip Aluminum Bi-Polar Capacitor
		CH TAN. E CAP.	Chip Tantalum Electrolytic Capacitor
		CH AL BP E CAP.	Chip Tantalum Bi-Polar Electrolytic Capacitor

TOLERANCES									
F	G	J	K	M	N	R	H	Z	P
±1%	±2%	±5%	±10%	±20%	±30%	+30% -10%	+50% -10%	+80% -20%	+100% -0%

CONTENTS

■ EXPLODED VIEW PARTS LIST	28
■ EXPLODED VIEW	29
■ PRINTED WIRING BOARD PARTS LIST	

C-13310/s

● MAIN PW BOARD ASS'Y(SFV-1079A-M2) (With CRT SOCKET PW BOARD).....	30
---	----

C-13311/s

● MAIN PW BOARD ASS'Y(SFV-1084A-M2) (With CRT SOCKET PW BOARD).....	33
■ REMOTE CONTROL UNIT PARTS LIST	33
■ PACKING	34
■ PACKING PARTS LIST	34

EXPLODED VIEW PARTS LIST


C-13310/S Charcoal Model

△ Ref.No.	Part No.	Part Name	Description
△ V01	A34KQW42X/DT/	PICTURE TUBE(C)	
△ DY01	QQD0002-001	DEF YOKE	
△ L01	QQW0001-001	DEGA COIL	
△ T1522	QQH0029-001	H.V.TRANSF.	
△ 1	LC10055-011A-A	FRONT CABINET	
△ 2	LC30335-001A-A	SP HOLDER	
3	CE42153-00AJ1	WEDGE ASSY	(×4)
4	CE40305-00B	P.C.MAGNET	
5	A48457-4-S	SPRING	
6	CHGB0016-0A	BRAIDED WIRE	
△ 7	LC30376-001A-A	POWER KNOB	
△ 8	LC30191-001C-A	LENS	
△ 9	LC30189-001B-A	CONTROL KNOB	
△ 10	CEB5508P-01KJ2	SPEAKER	SP01
△ 11	LC10056-001G-A	REAR COVER	
△ 12	QMPD390-200-JS	POWER CORD	CN10PW(Within MAIN PWB)
△ 13	LC20106-001D-A	POWER CORD CLAMP	
△ 14	QYSB5FG4016Z	TAPPING SCREW	(×5)
△ 15	LC31139-001A-A	RATING LABEL	

C-13311/S White Model

△ Ref.No.	Part No.	Part Name	Description
△ V01	A34KQW42X/DT/	PICTURE TUBE(C)	
△ DY01	QQD0002-001	DEF YOKE	
△ L01	QQW0001-001	DEG COIL	
△ T1522	QQH0029-001	H.V.TRANSF.	
△ 1	LC10055-012A-A	FRONT CABINET	
△ 2	LC30335-001A-A	SP HOLDER	
3	CE42153-00AJ1	WEDGE ASSY	(×4)
4	CE40305-00B	P.C.MAGNET	
5	A48457-4-S	SPRING	
6	CHGB0016-0A	BRAIDED WIRE	
△ 7	LC30376-002A-A	POWER KNOB	
△ 8	LC30191-001C-A	LENS	
△ 9	LC30189-002B-A	CONTROL KNOB	
△ 10	CEB5508P-01KJ2	SPEAKER	SP01
△ 11	LC10056-002G-A	REAR COVER	
△ 12	QMPD209-200-JC	POWER CORD	CN10PW(Within MAIN PWB)
△ 13	LC20106-002C-A	POWER CORD CLAMP	
△ 14	QYSB5FG4016Z	TAPPING SCREW	(×5)
△ 15	LC31139-001A-A	RATING LABEL	

EXPLODED VIEW

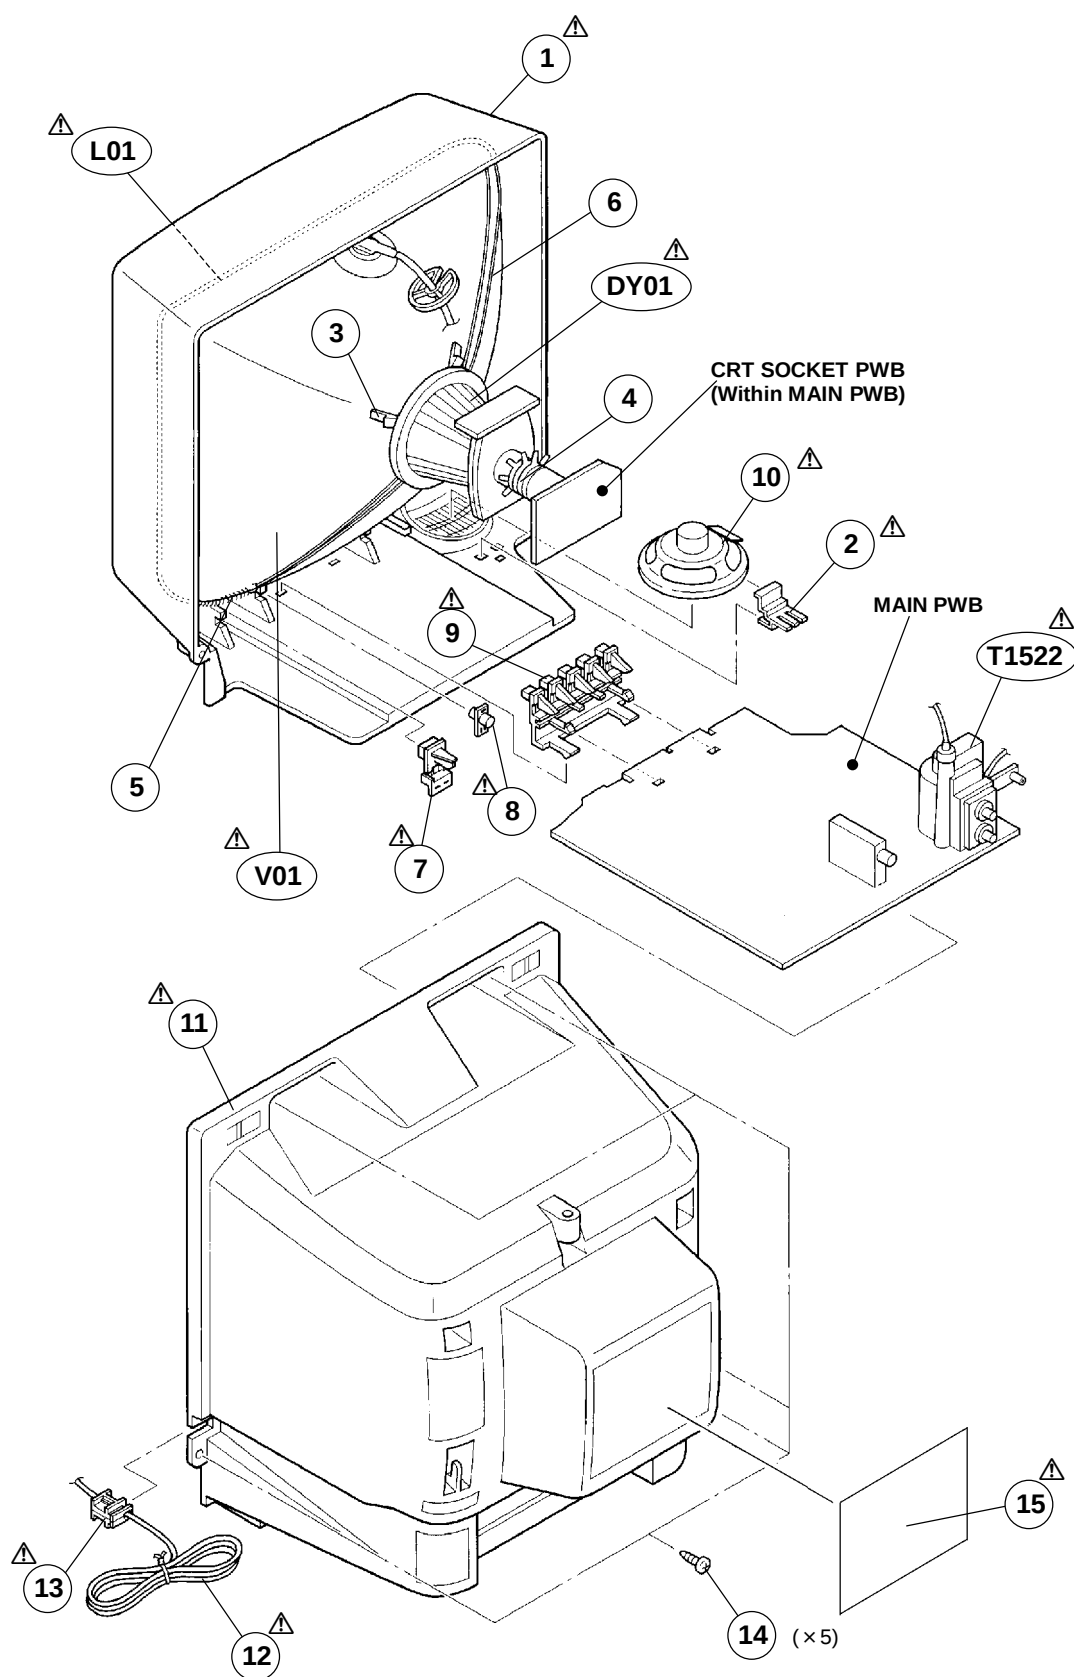

PRINTED WIRING BOARD PARTS LIST

[C-13310/s]

MAIN P.W. BOARD ASS'Y (SFV-1079A-M2)

△ Symbol No.	Part No.	Part Name	Description
RESISTOR			
R1003-04	NRSA63J-0R0X	MG R	0.0Ω 1/16W J
R1101	NRSA63J-820X	MG R	82Ω 1/16W J
R1102	NRSA63J-562X	MG R	5.6kΩ 1/16W J
R1103	NRSA63J-182X	MG R	1.8kΩ 1/16W J
R1104	QRE121J-101Y	C R	100Ω 1/2W J
R1105	NRSA63J-180X	MG R	18Ω 1/16W J
R1106	NRSA63J-270X	MG R	27Ω 1/16W J
R1131	NRSA63J-271X	MG R	270Ω 1/16W J
R1133	NRSA63J-101X	MG R	100Ω 1/16W J
R1134	NRSA63J-102X	MG R	1kΩ 1/16W J
R1135	NRSA63J-561X	MG R	560Ω 1/16W J
R1136	NRSA63J-182X	MG R	1.8kΩ 1/16W J
R1137	NRSA63J-152X	MG R	1.5kΩ 1/16W J
R1138	NRSA63J-821X	MG R	820Ω 1/16W J
R1142	NRSA63J-101X	MG R	100Ω 1/16W J
R1145	NRSA63J-472X	MG R	4.7kΩ 1/16W J
R1146	NRSA63J-562X	MG R	5.6kΩ 1/16W J
R1161-62	NRSA63J-102X	MG R	1kΩ 1/16W J
R1164	NRSA63J-332X	MG R	3.3kΩ 1/16W J
R1166	NRSA63J-333X	MG R	33kΩ 1/16W J
R1201	NRSA63J-471X	MG R	470Ω 1/16W J
R1202	NRSA63J-122X	MG R	1.2kΩ 1/16W J
R1209	NRSA63J-471X	MG R	470Ω 1/16W J
R1210	NRSA63J-392X	MG R	3.9kΩ 1/16W J
R1211	NRSA63J-471X	MG R	470Ω 1/16W J
R1212	NRSA63J-103X	MG R	10kΩ 1/16W J
R1215	NRSA63J-334X	MG R	330kΩ 1/16W J
R1216	NRSA63J-563X	MG R	56kΩ 1/16W J
R1218	NRSA63J-182X	MG R	1.8kΩ 1/16W J
R1219	NRSA63J-122X	MG R	1.2kΩ 1/16W J
R1251	NRSA63J-750X	MG R	75Ω 1/16W J
R1252	NRSA63J-101X	MG R	100Ω 1/16W J
R1255	NRSA63J-750X	MG R	75Ω 1/16W J
R1263	NRSA63J-101X	MG R	100Ω 1/16W J
R1266	NRSA63J-152X	MG R	1.5kΩ 1/16W J
R1301	NRSA63J-681X	MG R	680Ω 1/16W J
R1302	NRSA63J-471X	MG R	470Ω 1/16W J
R1305	NRSA63J-393X	MG R	39kΩ 1/16W J
R1306	NRSA63J-183X	MG R	18kΩ 1/16W J
R1371-73	NRSA63J-151X	MG R	150Ω 1/16W J
R1374-76	NRSA63J-331X	MG R	330Ω 1/16W J
R1377-79	NRSA63J-101X	MG R	100Ω 1/16W J
R1380-82	QRZ0111-152	C R	1.5kΩ 1/2W K
R1383-85	QRL029J-123	OM R	12kΩ 2W J
R1386-88	NRSA63J-272X	MG R	2.7kΩ 1/16W J
R1421	NRSA63J-472X	MG R	4.7kΩ 1/16W J
R1422	QRE121J-331Y	C R	330Ω 1/2W J
R1423	QRX01GJ-1R8	MF R	1.8Ω 1W J
R1425	NRSA63J-823X	MG R	82kΩ 1/16W J
R1427	NRSA63J-392X	MG R	3.9kΩ 1/16W J
R1428	NRSA63J-473X	MG R	47kΩ 1/16W J
R1429	NRSA63J-223X	MG R	22kΩ 1/16W J
R1441	QRE121J-102Y	C R	1kΩ 1/2W J
R1501	NRSA63J-361X	MG R	360Ω 1/16W J
R1502	NRSA63J-152X	MG R	1.5kΩ 1/16W J
R1505	NRSA63J-822X	MG R	8.2kΩ 1/16W J
R1506	NRSA63J-222X	MG R	2.2kΩ 1/16W J
R1507	NRSA63J-563X	MG R	56kΩ 1/16W J
R1511	NRSA63J-681X	MG R	680Ω 1/16W J
R1512	NRSA63J-102X	MG R	1kΩ 1/16W J
R1521	QRE121J-220Y	C R	22Ω 1/2W J
R1522	NRSA63J-391X	MG R	390Ω 1/16W J
R1523	NRSA63J-471X	MG R	470Ω 1/16W J
R1524	QRE121J-271Y	C R	270Ω 1/2W J
R1525	QRL029J-101	OM R	100Ω 2W J
R1526	QRL039J-152	OM R	1.5kΩ 3W J

△ Symbol No.	Part No.	Part Name	Description
RESISTOR			
R1542	QRL029J-151	OM R	150Ω 2W J
R1544	QRT039J-R47	MF R	0.47Ω 3W J
R1546	QRL029J-470	OM R	47Ω 2W J
R1561	QRK126J-4R7X	C R	4.7Ω 1/2W J
△ R1562	NRZ0032-7151X	MF R	7.15kΩ 1/10W±0.5%
△ R1563	NRZ0032-2941X	MF R	2.94kΩ 1/10W±0.5%
R1564	NRSA63J-153X	MG R	15kΩ 1/16W J
R1566	NRSA63J-333X	MG R	33kΩ 1/16W J
R1567	NRSA63J-392X	MG R	3.9kΩ 1/16W J
R1568	NRSA63J-223X	MG R	22kΩ 1/16W J
R1581	QRJ146J-2R2X	C R	2.2Ω 1/4W J
R1582	QRL029J-223	OM R	22kΩ 2W J
R1583-84	QRE121J-563Y	C R	56kΩ 1/2W J
R1585	QRE121J-153Y	C R	15kΩ 1/2W J
R1586	QRE121J-472Y	C R	4.7kΩ 1/2W J
R1610	QRE121J-271Y	C R	270Ω 1/2W J
R1611	NRSA63J-472X	MG R	4.7kΩ 1/16W J
R1612	NRSA63J-333X	MG R	33kΩ 1/16W J
R1613	NRSA63J-272X	MG R	2.7kΩ 1/16W J
R1651	NRSA63J-102X	MG R	1kΩ 1/16W J
R1655	NRSA63J-102X	MG R	1kΩ 1/16W J
R1701	NRSA63J-563X	MG R	56kΩ 1/16W J
R1702-04	NRSA63J-103X	MG R	10kΩ 1/16W J
R1705	NRSA63J-823X	MG R	82kΩ 1/16W J
R1706	NRSA63J-103X	MG R	10kΩ 1/16W J
R1708-09	NRSA63J-103X	MG R	10kΩ 1/16W J
R1710	NRSA63J-102X	MG R	1kΩ 1/16W J
R1713	NRSA63J-102X	MG R	1kΩ 1/16W J
R1714	NRSA63J-471X	MG R	470Ω 1/16W J
R1715	NRSA63J-105X	MG R	1kΩ 1/16W J
R1716	NRSA63J-154X	MG R	150kΩ 1/16W J
R1717	NRSA63J-563X	MG R	56kΩ 1/16W J
R1719	NRSA63J-102X	MG R	1kΩ 1/16W J
R1722	NRSA63J-0R0X	MG R	0.0Ω 1/16W J
R1723	NRSA63J-105X	MG R	1kΩ 1/16W J
R1724	NRSA63J-102X	MG R	1kΩ 1/16W J
R1725	NRSA63J-103X	MG R	10kΩ 1/16W J
R1726	NRSA63J-562X	MG R	5.6kΩ 1/16W J
R1727	NRSA63J-103X	MG R	10kΩ 1/16W J
R1728	NRSA63J-562X	MG R	5.6kΩ 1/16W J
R1729	NRSA63J-153X	MG R	15kΩ 1/16W J
R1730	NRSA63J-682X	MG R	6.8kΩ 1/16W J
R1732	NRSA63J-102X	MG R	1kΩ 1/16W J
R1734	NRSA63J-182X	MG R	1.8kΩ 1/16W J
R1735	NRSA63J-102X	MG R	1kΩ 1/16W J
R1736	NRSA63J-332X	MG R	3.3kΩ 1/16W J
R1737	NRSA63J-472X	MG R	4.7kΩ 1/16W J
R1738	NRSA63J-102X	MG R	1kΩ 1/16W J
R1739	NRSA63J-472X	MG R	4.7kΩ 1/16W J
R1740	NRSA63J-102X	MG R	1kΩ 1/16W J
R1741	NRSA63J-472X	MG R	4.7kΩ 1/16W J
R1742	NRSA63J-102X	MG R	1kΩ 1/16W J
R1745-46	NRSA63J-0R0X	MG R	0.0Ω 1/16W J
R1751	NRSA63J-103X	MG R	10kΩ 1/16W J
R1752	NRSA63J-472X	MG R	4.7kΩ 1/16W J
R1753	NRSA63J-153X	MG R	15kΩ 1/16W J
R1754	NRSA63J-103X	MG R	10kΩ 1/16W J
R1755	NRSA63J-472X	MG R	4.7kΩ 1/16W J
R1756	NRSA63J-153X	MG R	15kΩ 1/16W J
R1757-58	NRSA63J-122X	MG R	1.2kΩ 1/16W J
R1759-60	NRSA63J-101X	MG R	100Ω 1/16W J
R1763	NRSA63J-153X	MG R	15kΩ 1/16W J
R1765-66	NRSA63J-0R0X	MG R	0.0Ω 1/16W J
R1768	NRSA63J-473X	MG R	47kΩ 1/16W J
R1769	NRSA63J-102X	MG R	1kΩ 1/16W J
R1804-06	NRSA63J-101X	MG R	100Ω 1/16W J

[C-13310/s]

△ Symbol No.	Part No.	Part Name	Description
RESISTOR			
△ R1901	QRF054K-2R2	UNF R	2.2Ω 5W K
△ R1921	QRX029J-2R7	MF R	2.7Ω 2W J
△ R1922	QRJ149J-330	C R	33Ω 1/4W J
R1923	QRJ149J-470	C R	47Ω 1/4W J
R1924	QRN141J-224Y	C R	220kΩ 1/4W J
R1925	QRN141J-103Y	C R	10kΩ 1/4W J
△ R1926	QRF154J-331	UNF R	330 Ω 15W J
R1952	NRSA63J-222X	MG R	2.2kΩ 1/16W J
R1953	NRSA63J-122X	MG R	1.2kΩ 1/16W J
R1954	QRE121J-272Y	C R	2.7kΩ 1/2W J
R1955	NRSA63J-223X	MG R	22kΩ 1/16W J
R1956	QRE121J-101Y	C R	100Ω 1/2W J
R1957	NRSA63J-472X	MG R	4.7kΩ 1/16W J
R1958	NRSA63J-563X	MG R	56kΩ 1/16W J
△ R1981	QRZ9041-275	C R	2.7MΩ 1/2W K

CAPACITOR

C1001	QETN1HM-106Z	E CAP.	10μF 50V M
C1003	QETN1AM-227Z	E CAP.	220μF 10V M
C1004	QETN1HM-106Z	E CAP.	10μF 50V M
C1005	NCB31HK-103X	C CAP.	0.01μF 50V K
C1006	QETN1EM-476Z	E CAP.	47μF 25V M
C1012	NCB31HK-103X	C CAP.	0.01μF 50V K
C1013	NCB31HK-104X	CHIP CAP.	0.1μF 50V K
C1101-04	NCB31HK-103X	C CAP.	0.01μF 50V K
C1105	QETN1CM-107Z	E CAP.	100μF 16V M
C1106	NCB31HK-103X	C CAP.	0.01μF 50V K
C1108	NDC31HJ-680X	C CAP.	680pF 50V J
C1131	QFV21HJ-154Z	MF CAP.	0.15μF 50V J
C1132	NCB31HK-152X	C CAP.	1500pF 50V K
C1133	QETN1HM-474Z	E CAP.	0.47μF 50V M
C1134	NCB31HK-102X	C CAP.	1000pF 50V K
C1135	NCB31HK-103X	C CAP.	0.01μF 50V K
C1138	QETN1EM-476Z	E CAP.	47μF 25V M
C1161	QETN1CM-107Z	E CAP.	100μF 16V M
C1162	NCB31HK-103X	C CAP.	0.01μF 50V K
C1163-64	NDC31HJ-470X	C CAP.	47pF 50V J
C1166	NCB31HK-103X	C CAP.	0.01μF 50V K
C1167	NCB31HK-392X	CHIP CAP.	3900pF 50V K
C1168	QETN1HM-106Z	E CAP.	10μF 50V M
C1169	NCB31HK-103X	C CAP.	0.01μF 50V K
C1171	QETN1HM-105Z	E CAP.	1.0μF 50V M
C1172	NCB31HK-102X	C CAP.	1000pF 50V K
C1207	QETN1HM-474Z	E CAP.	0.47μF 50V M
C1208	QETN1HM-106Z	E CAP.	10μF 50V M
C1209-10	QETN1HM-105Z	E CAP.	1.0μF 50V M
C1214	QETN1HM-106Z	E CAP.	10μF 50V M
C1215	QETN1HM-105Z	E CAP.	1.0μF 50V M
C1217	QETN1EM-476Z	E CAP.	47μF 25V M
C1251	NCB31HK-104X	CHIP CAP.	0.1μF 50V K
C1255	QETN1HM-106Z	E CAP.	10μF 50V M
C1303	NCB31HK-103X	C CAP.	0.01μF 50V K
C1304	QETN1CM-107Z	E CAP.	100μF 16V M
C1305	NDC31HJ-100X	C CAP.	10pF 50V J
C1306	NCB31HK-223X	CHIP CAP.	0.022μF 50V K
C1307	QETN1HM-474Z	E CAP.	0.47μF 50V M
C1309	NDC31HJ-2R0X	C CAP.	2.0pF 50V J
C1374-75	NDC31HJ-271X	C CAP.	270pF 50V J
C1376	NDC31HJ-331X	C CAP.	330pF 50V J
C1377	QETN1EM-476Z	E CAP.	47μF 25V M
△ C1392	QCZ0121-102	C CAP.	1000pF 3kV Z
C1401	QETN1HM-225Z	E CAP.	2.2μF 50V M
C1402	QBHC1CK-225Z	TAN. CAP.	2.2μF 16V K
C1403	NCB31HK-102X	C CAP.	1000pF 50V K
C1421	NCB31HK-103X	C CAP.	0.01μF 50V K
C1424	QETN1VM-107Z	E CAP.	100μF 35V M
C1426	QCB32HK-102Z	C CAP.	1000pF 500V K
C1427	QETN1EM-108Z	E CAP.	1000μF 25V M

△ Symbol No.	Part No.	Part Name	Description
CAPACITOR			
C1428	QFV21HJ-474Z	MF CAP.	0.47μF 50V J
C1429	QFV21HJ-224Z	MF CAP.	0.22μF 50V J
C1501	QETN1CM-107Z	E CAP.	100μF 16V M
C1502	QETN1HM-225Z	E CAP.	2.2μF 50V M
C1503	NCB31HK-223X	CHIP CAP.	0.022μF 50V K
C1505	QETN1HM-106Z	E CAP.	10μF 50V M
C1511	QETN1EM-476Z	E CAP.	47μF 25V M
C1521	NCB31HK-332X	C CAP.	3300pF 50V K
C1522	NCB31HK-822X	CHIP CAP.	8200pF 50V K
C1523	QEM61HK-105Z	E CAP.	1μF 50V K
△ C1524	QFZ0198-56Z	MPP CAP.	5600pF1.5kVH±3%
△ C1525	QETN2CM-476Z	E CAP.	47μF 160V M
△ C1526	QFZ0210-404	MPP CAP.	0.4μF 250V±3%
C1543	QETM1VM-108	E CAP.	1000μF 35V M
C1544	QETN1CM-107Z	E CAP.	100μF 16V M
C1545	QETN1EM-476Z	E CAP.	47μF 25V M

C1546	QETM1CM-228	E CAP.	2200μF 16V M
C1548	QETN1CM-227Z	E CAP.	220μF 16V M
△ C1561	QETN1HM-106Z	E CAP.	10μF 50V M
C1562	QETN1HM-475Z	E CAP.	4.7μF 50V M
C1563	NCB31HK-103X	C CAP.	0.01μF 50V K
△ C1581	QETN2EM-106Z	E CAP.	10μF 250V M
C1582	NCB31HK-473X	CHIP CAP.	0.047μF 50V K
C1584	QFCL2AJ-104Z	M CAP.	0.1μF 100V J

C1601	QETN1HM-474Z	E CAP.	0.47μF 50V M
C1602	QETN1CM-477Z	E CAP.	470μF 16V M
C1603	NCB31HK-103X	C CAP.	0.01μF 50V K
C1604	QETN1CM-477Z	E CAP.	470μF 16V M
C1611	QETN1HM-105Z	E CAP.	1.0μF 50V M
C1651	QETN1HM-106Z	E CAP.	10μF 50V M
C1655	QETN1HM-106Z	E CAP.	10μF 50V M
C1701	NDC31HJ-560X	C CAP.	56pF 50V J

C1703	NCB31HK-102X	C CAP.	1000pF 50V K
C1704	NCB31HK-103X	C CAP.	0.01μF 50V K
C1705	NDC31HJ-151X	C CAP.	150pF 50V J
C1706	NCB31HK-104X	CHIP CAP.	0.1μF 50V K
C1707	QETN1HM-105Z	E CAP.	1.0μF 50V M
C1708	NCS21HJ-221X	C CAP.	220pF 50V J
C1709	NCS21HJ-102X	C CAP.	1000pF 50V J
C1710	NDC31HJ-681X	C CAP.	680pF 50V J

C1711	QETN1HM-474Z	E CAP.	0.47μF 50V M
C1712	NCB31HK-102X	C CAP.	1000pF 50V K
C1714	NCB31HK-103X	C CAP.	0.01μF 50V K
C1716	QETN1EM-476Z	E CAP.	47μF 25V M
C1717	NCB31HK-104X	CHIP CAP.	0.1μF 50V K
C1718	NCB31HK-103X	C CAP.	0.01μF 50V K
C1719-20	QETN1EM-476Z	E CAP.	47μF 25V M
C1721	NCB31HK-103X	C CAP.	0.01μF 50V K

C1722-23	NDC31HJ-5R0X	C CAP.	5.0pF 50V J
C1724	NCB31HK-103X	C CAP.	0.01μF 50V K
C1725	QETN1AM-227Z	E CAP.	220μF 10V M
C1726	NDC31HJ-470X	C CAP.	47pF 50V J
C1735	NCB31HK-103X	C CAP.	0.01μF 50V K
C1751	QETN1EM-476Z	E CAP.	47μF 25V M
C1801-03	QENC1HM-474Z	BP E CAP.	0.47μF 50V M
△ C1901	QFZ9072-104	MF CAP.	0.1μFAC275V K

△ C1902	QFZ9072-473	MF CAP.	0.047μFAC275V K
△ C1911	QCZ9074-472	C CAP.	4700pFAC250V M
△ C1912	QCZ9074-472	C CAP.	4700pFAC250V M
△ C1913	QCZ9074-472	C CAP.	4700pFAC250V M
△ C1914	QEZ0169-337	E CAP.	330μF 200V M
C1921	QETN2CM-106Z	E CAP.	10μF 160V M
C1951	QETN1EM-227Z	E CAP.	220μF 25V M
C1953	QETN1EM-477Z	E CAP.	470μF 25V M

C1954	NCB31HK-473X	CHIP CAP.	0.047μF 50V K
C1956	QETN1HM-106Z	E CAP.	10μF 50V M
C1958	QETN1EM-107Z	E CAP.	100μF 25V M
C1959	QETN1HM-226Z	E CAP.	22μF 50V M
△ C1981	QCZ9074-103	C CAP.	0.01μFAC250V M
△ C1982	QCZ9074-103	C CAP.	0.01μFAC250V M

[C-13310/s]


△ Symbol No.	Part No.	Part Name	Description
TRANSFORMER			
T1131	QQR0907-001	I.F. TRANSFORMER	
T1161	CEL7003-109J3	S.I.F. TRANSF.	
△ T1521	CE41106-00CJ1	DRIVE TRANSF.	
△ T1522	QQH0029-001	H.V. TRANSF.	
△ T1901	QQT0198-001	POWER TRANSF.	
COIL			
L1102	QQLZ014-R22	PEAKING COIL	0.22μH
L1104	QQL03BJ-680Z	COIL	68μH J
L1131	QQL03BJ-220Z	COIL	22μH J
L1161	QQL03BJ-680Z	COIL	68μH J
L1162	QQL03BJ-220Z	COIL	22μH J
△ L1374	QQLZ018-500	HEATER CHOKE	
L1391	QQL03BJ-390Z	COIL	39μH J
L1701	QQL03BJ-4R7Z	COIL	4.7μH J
L1709	QQL03BJ-100Z	COIL	10μH J
DIODE			
D1001	MTZJ33B-T2	ZENER DIODE	
D1201	1SS133-T2	SI. DIODE	
D1202	1SS133-T2	SI. DIODE	
D1203	1SS133-T2	SI. DIODE	
D1251	MTZJ9.1C-T2	ZENER DIODE	
D1421	1N4003-T2	SI. DIODE	
D1422	MTZJ75-T2	ZENER DIODE	
D1423	1SS133-T2	SI. DIODE	
D1501	MTZJ9.1C-T2	ZENER DIODE	
D1511	MTZJ3.3A-T2	ZENER DIODE	
D1541	RGP10J-5025-T3	SI. DIODE	
D1542	1SR35-400A-T2	SI. DIODE	
D1544	RU3AM-LFC4	SI. DIODE	
D1561	1SS81-T2	SI. DIODE	
△ D1562	MA4068N/Z1/-T2	ZENER DIODE	
D1563	1SS133-T2	SI. DIODE	
△ D1581	RH1S-T3	SI. DIODE	
D1582	RGP10J-5025-T3	SI. DIODE	
D1583	MTZJ9.1C-T2	ZENER DIODE	
D1601	MTZJ12C-T2	ZENER DIODE	
D1655	MTZJ9.1C-T2	ZENER DIODE	
D1703	MTZJ5.6A-T2	ZENER DIODE	
D1704	1SS133-T2	SI. DIODE	
D1717-18	MTZJ5.6A-T2	ZENER DIODE	
D1751	SLR-342VR3F	L.E.D.	
D1804	MTZJ5.1B-T2	ZENER DIODE	
D1805	1SS133-T2	SI. DIODE	
△ D1911	D2SBA60	BRIDGE DIODE	
D1941-44	1SR35-400A-T2	SI. DIODE	
D1951	MTZJ12C-T2	ZENER DIODE	
D1953	1SR35-400A-T2	SI. DIODE	
D1957	1SS133-T2	SI. DIODE	
D1958	1SS133-T2	SI. DIODE	
TRANSISTOR			
Q1101	2SC5083/L-P/-T	SI. TRANSISTOR	
Q1131-32	2SD601A/QR/-X	SI. TRANSISTOR	
Q1161	2SD601A/QR/-X	SI. TRANSISTOR	
Q1203	2SD601A/QR/-X	SI. TRANSISTOR	
Q1261	2SB709A/QR/-X	SI. TRANSISTOR	
Q1371-73	2SC4722/NP/-	SI. TRANSISTOR	
Q1521	2SC2655/Y/-T	SI. TRANSISTOR	
△ Q1522	2SD1876-YD	SI. TRANSISTOR	H. OUT
Q1561	2SC2785/JH/-T	SI. TRANSISTOR	
Q1562	2SA1309A/QR/-T	SI. TRANSISTOR	
Q1601	DTC323TK-X	DIGI. TRANSISTOR	
Q1701-03	2SD601A/QR/-X	SI. TRANSISTOR	
Q1704	DTC323TK-X	DIGI. TRANSISTOR	
Q1951	2SC2412K/QR/-X	SI. TRANSISTOR	
Q1952	2SA933AS/QR/-T	SI. TRANSISTOR	
Q1953	2SC2412K/QR/-X	SI. TRANSISTOR	

△ Symbol No.	Part No.	Part Name	Description
IC			
IC1001	AN7805F	I.C (MONO-ANA)	
IC1201	TA1242N	I.C (MONO-ANA)	
△ IC1421	LA7830	I.C (MONO-ANA)	
IC1541-42	AN7809F	I.C (MONO-ANA)	
△ IC1601	LA4525	I.C (MONO-ANA)	
IC1701	M37272MAH-501SP	I.C	
IC1702	AT24C02-20320	I.C	(SERVICE)
IC1703	L78L05E-MA	I.C (MONO-ANA)	
IC1751	GP1UM281QK	IR DETECT UNIT	
△ IC1921	STR30134	I.C (H)	
IC1951	TA78L009AP-T	I.C (MONO-ANA)	
OTHERS			
CF1001	LC30190-001B-A	L.E.D. HOLDER	
CF1131	QAX0349-001	CERAMIC FILTER	
CF1161	CE41505-001	CERAMIC FILTER	
CF1501	SFSH4.5MCB	CERAMIC FILTER	
CF1701	CSB503F30-T2	CER. RESONATOR	
CF1702	CST8.00MTW	CER. RESONATOR	
CN10CW	QAX0428-001	CER. RESONATOR	
△ CN10PW	CH41169-R03Y	EH POST HEADER	
△ F1901	QMPD390-200-J5	POWER CORD	(Charcoal type)
△ F1902	QMF51N1-5R0-J5	FUSE	5.0A
FC1901	QMF51U1-1R25-J8	FUSE	1.25A
FC1902	CEMG002-001Z	FUSE CLIP	(x2)
FR1720	CEMG002-001Z	FUSE CLIP	(x2)
J1001	QRZ9017-820	F. R	82 Ω 1/4W J
J1002-03	CEMN065-002	PIN JACK	
J1004	QNN0282-003	PIN JACK	
J1601	CEMN065-002	PIN JACK	
△ LF1901	QMS3010-C01	JACK	
K1003	QQR0883-001	LINE FILTER	
RY1901	QQR0582-001Z	BEADS CORE	
S1751	QSK0083-001	RELAY	or QSK0084-001
S1752	QSW0619-003Z	PUSH SWITCH	MENU
S1753	QSW0619-003Z	PUSH SWITCH	CH-
S1754	QSW0619-003Z	PUSH SWITCH	CH+
S1755	QSW0619-003Z	PUSH SWITCH	VOL-
S1756	QSW0619-003Z	PUSH SWITCH	VOL+
△ SF1101	QSW0619-003Z	PUSH SWITCH	POWER
SK1371	CE42589-201	SAW FILTER	
△ TH1901	CE42554-001	C. R. T. SOCKET	
TU1001	CEKP007-002	P. THERMISTOR	
VA1901	QAU0275-001	TUNER	
X1301	ERZV10V361CS	VARISTOR	
X1301	QAX0310-001Z	CRYSTAL	

MAIN P.W. BOARD ASS'Y (SFV-1084A-M2) [C-13311/S]

Regarding the parts list for the main PW board ass'y **SFV-1084A-M2**, only the different parts from those of the **SFV-1079A-M2** are described. For further details regarding the other parts, refer to the parts list for the **SFV-1079A-M2** described on page 30 through page 32.

⚠	Symbol No.	Parts No.		Parts Name	Description
		C-13310/s SFV-1079A-M2	C-13311/s SFV-1084A-M2		
⚠	CN10PW	QMPD390-200-JS (Charcoal type)	QMPD209-200-JC (White type)	POWER CORD	

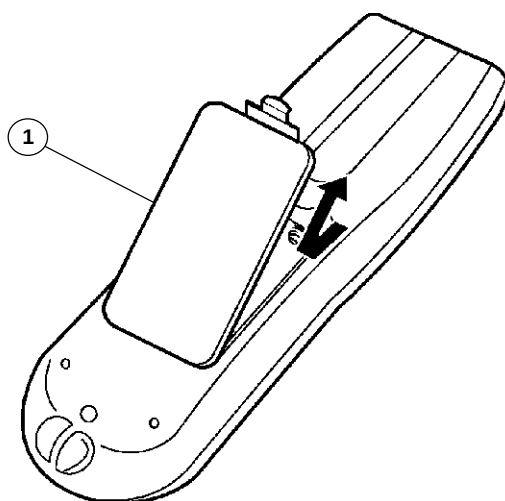
REMOTE CONTROL UNIT PARTS LIST(RM-C205-1C / RM-C205W-1C)**C-13310/s Charcoal Model**

⚠ Ref.No.	Part No.	Part Name.	Description
1	511A24001	BATTERY COVER	(RM-C205-1C)

C-13311/s White Model

1	511A24003	BATTERY COVER	(RM-C205W-1C)
---	-----------	---------------	---------------

PACKING

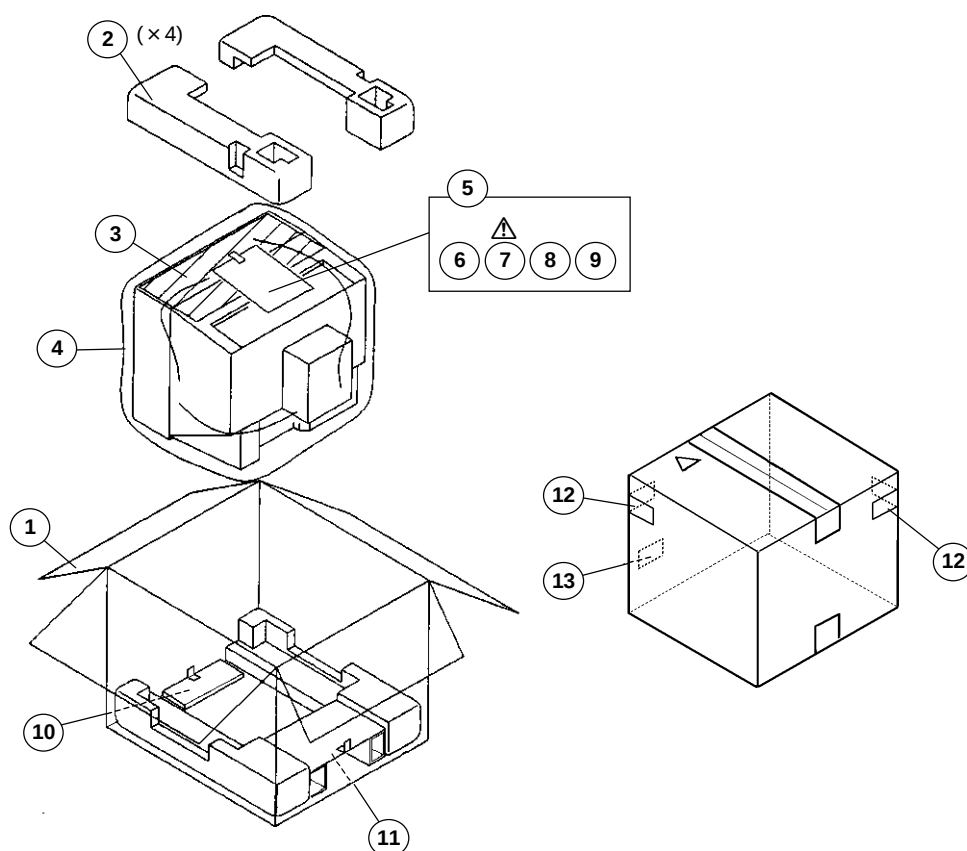

PACKING PARTS LIST

C-13310/S Charcoal Model

△ Ref.No.	Part No.	Part Name	Description
1	GQ10009-025A-A	PACKING CASE	4pcs in 1set
2	LC10057-002D-A	CUSHION ASSY	
3	CP30055-005-A	TOP COVER	
4	CP30056-003-A	POLY BAG	
5	QPA02503505	POLY BAG	[CHARCOAL TYPE]
6	RM-C205-1C	REMOCON UNIT	
7	LCT1146-001A-A	INST BOOK	
8	BT-51028-1Q	REGISTRATION CARD	
9	BT-52004-2Q	WARRANTY CARD	2pcs in 1set
10	LC30746-001A-A	PACKING CUSHION	
11	LC30779-001A-A	PACKING PAD	
12	CM36616-001-A	CORNER LABEL	

C-13311/S White Model

△ Ref.No.	Part No.	Part Name	Description
1	GQ10009-025A-A	PACKING CASE	4pcs in 1set
2	LC10057-002D-A	CUSHION ASSY	
3	CP30055-005-A	TOP COVER	
4	CP30056-003-A	POLY BAG	
5	QPA02503505	POLY BAG	[WHITE TYPE]
6	RM-C205W-1C	REMOCON UNIT	
7	LCT1146-001A-A	INST BOOK	
8	BT-51028-1Q	REGISTRATION CARD	
9	BT-52004-2Q	WARRANTY CARD	2pcs in 1set
10	LC30746-001A-A	PACKING CUSHION	
11	LC30779-001A-A	PACKING PAD	
12	CM36616-001-A	CORNER LABEL	
13	GQ40012-001A-A	WHITE MARK	

Memo

JVC SERVICE & ENGINEERING COMPANY OF AMERICA

DIVISION OF JVC AMERICAS CORP.

Head office :	1700 Valley Road, Wayne, New Jersey 07470	(973)315-5000
East Coast :	10 New Maple Avenue, Pine Brook, New Jersey 07058	(973)396-1000
Midwest :	705 Enterprise St. Aurora, Illinois 60504	(630)851-7855
West Coast :	5665 Corporate Avenue, Cypress, California 90630	(714)229-8011
Southwest :	10700 Hammerly, Suite 105, Houston, Texas 77043	(713)935-9331
Hawaii :	2969 Mapunapuna Place, Honolulu, Hawaii 96819	(808)833-5828
Southeast :	1500 Lakes Parkway, Lawrenceville, Georgia 30243	(770)339-2582

JVC CANADA INC.

Head office :	21 Finchdene Square Scarborough, Ontario M1X 1A7	(416)293-1311
Vancouver :	13040 Worster Court Richmond B.C. V6V 2B3	(604)270-1311

JVC®