

Service Manual

Cassette Tape Deck
RS-630TUS

Front Loading High Fidelity Cassette Deck
with Timer Stand-by Mechanism



RS-630U MECHANISM SERIES

Specifications (Catalog specifications for sales)

Power requirements: AC; 120V, 50/60Hz
(not necessary for conversion)
Power consumption; 10W
Motor: 1-electronic speed control motor
Track system: 4-track, 2-channel stereo recording and playback
Tape speed: 1-7/8 ips.
Wow and flutter: 0.09% (WRMS)
Frequency response: CrO₂ tape; 30 ~ 16,000Hz
Normal tape; 30 ~ 14,000Hz
Signal-to-noise ratio: Dolby NR in; 63 dB (CrO₂ tape above 5 kHz)
Dolby NR out; 50 dB (Normal tape)
(signal level = 250 nWb/m)
Fast forward and
rewind time: Approx. 90 seconds with C-60 cassette tape

Input: MIC; sensitivity 0.25 mV/applicable microphone
impedance 600Ω ~ 2 KΩ
LINE; sensitivity 60 mV/input impedance 47 KΩ
Output: LINE; output level 0.42 V/load impedance 50 KΩ
over
HEADPHONE; output level 60 mV/impedance
8Ω
Head: 2-head system
1-super alloy head for record/playback
1-ferrite head for erasure
Dimensions: 17-1/8"(W) × 5-5/8"(H) × 12-5/8"(D)
Weight: 17-1/2 lbs.

Specifications are subject to change without notice.

Technics
by Panasonic

Panasonic Company
Division of Matsushita Electric
Corporation of America
One Panasonic Way, Secaucus,
New Jersey 07094

Matsushita Electric of Hawaii, Inc.
320 Waiakamilo Road, Honolulu,
Hawaii 96817

LOCATION OF CONTROLS AND COMPONENTS


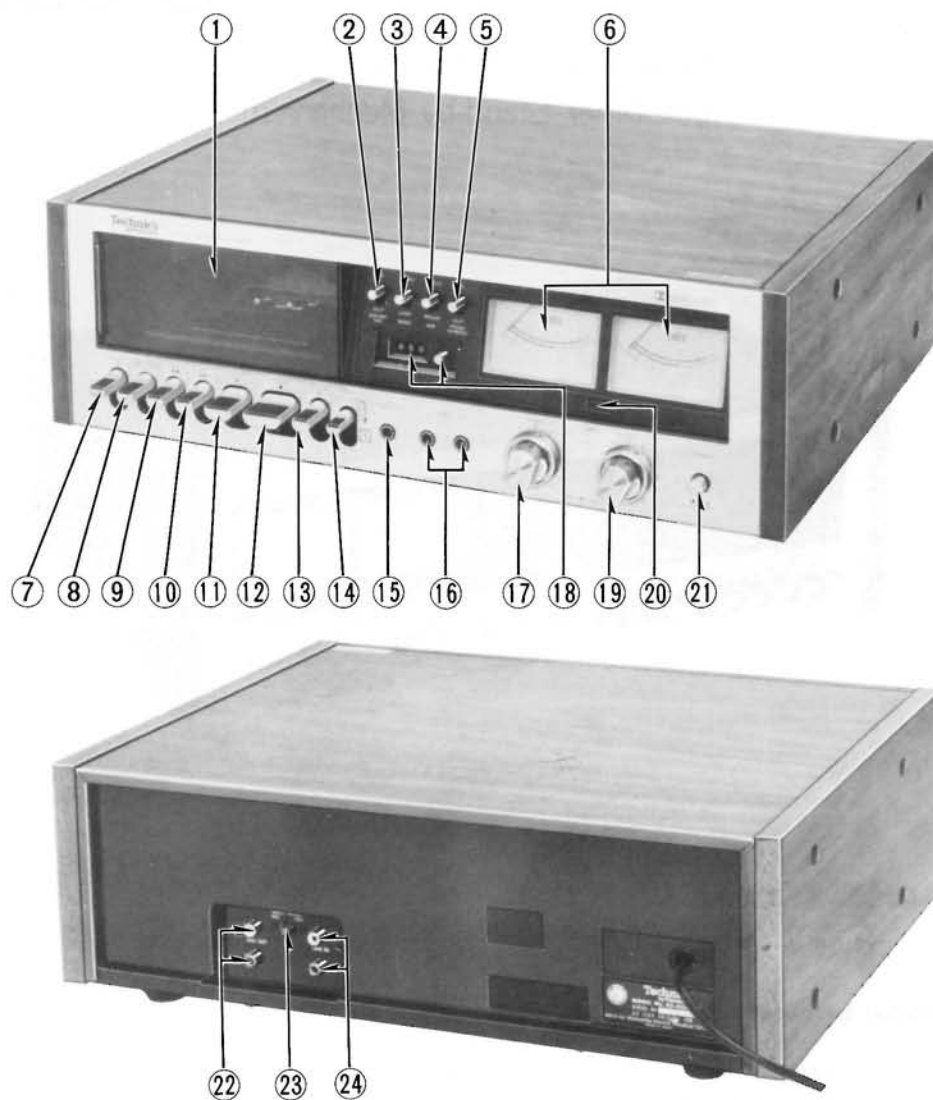



Fig. 1

- | | |
|--------------------------------|---------------------------------|
| ① Cassette compartment door | ⑬ Pause button |
| ② Dolby noise-reduction switch | ⑭ Timer stand-by button |
| ③ Bias selector | ⑮ Headphones jack |
| ④ Equalization selector | ⑯ Microphone jacks |
| ⑤ Peak-signal-check switch | ⑰ Input level controls |
| ⑥ Peak level/VU meters | ⑱ Tape counter and reset button |
| ⑦ Eject button | ⑲ Output level controls |
| ⑧ Record button | ⑳ Recording indication lamp |
| ⑨ Rewind button | ㉑ Power switch |
| ⑩ Fast forward button | ㉒ Line output jacks |
| ⑪ Playback button | ㉓ Input selector |
| ⑫ Stop button | ㉔ Line input jacks |

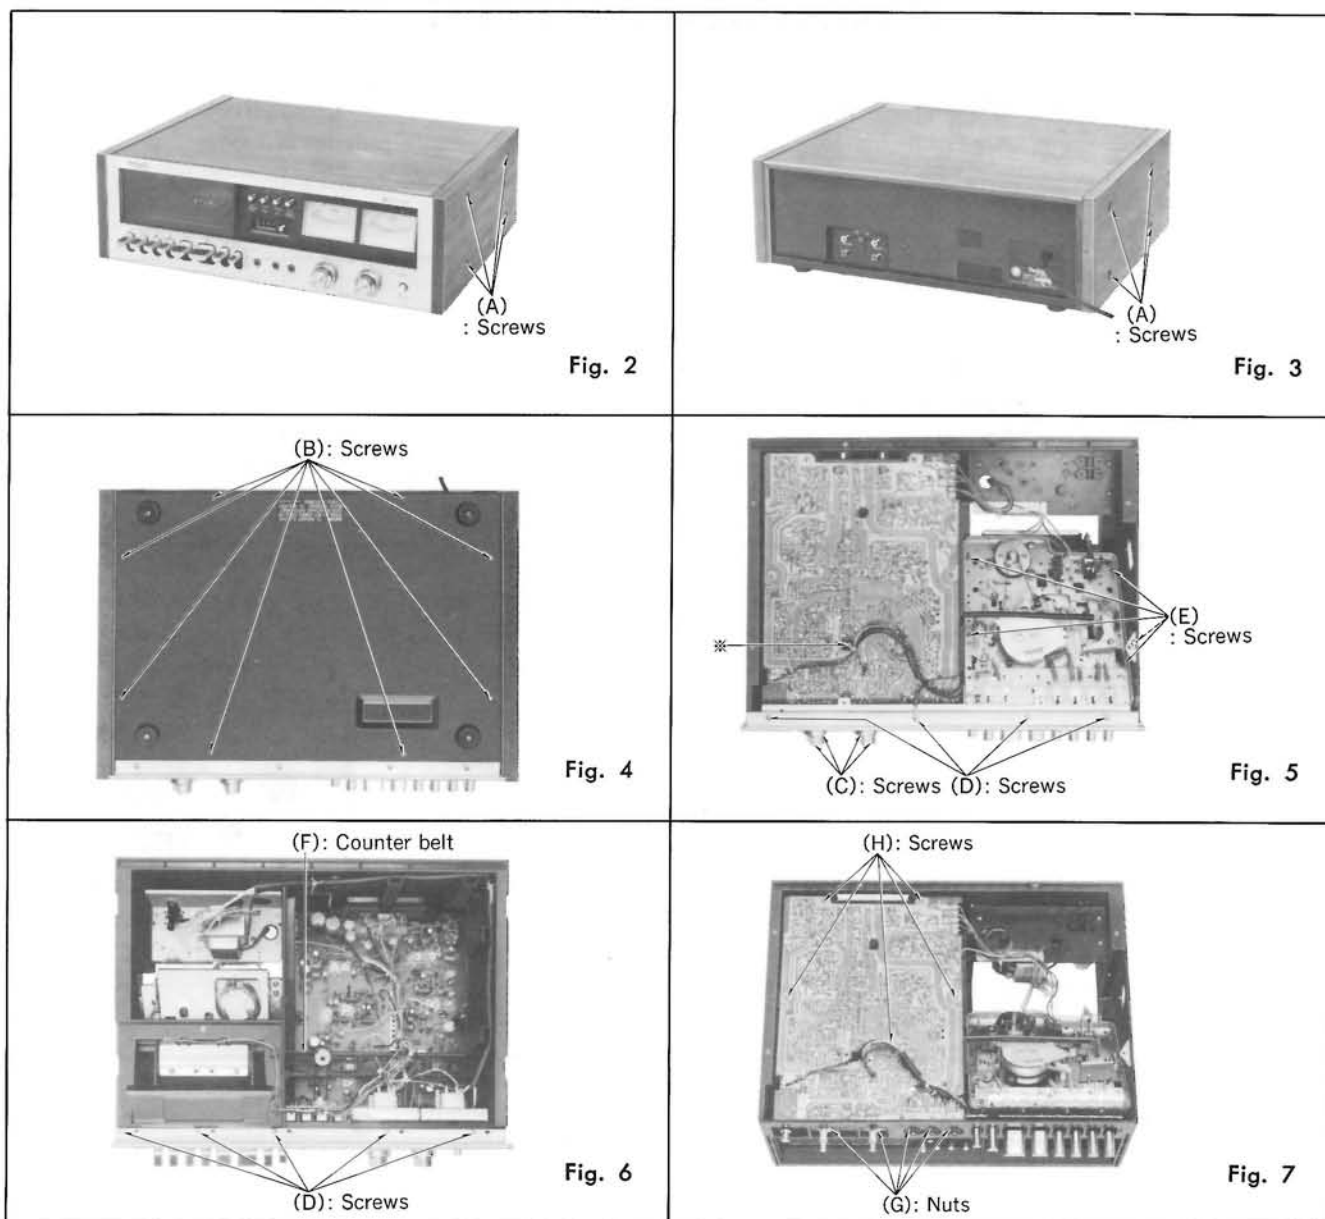DISASSEMBLY INSTRUCTIONS



Procedure	To remove —	Remove —	Pcs.	Shown in fig. —
1	Case cover	(A)	8	2, 3
1	Bottom cover	(B)	8	4
3	Front panel	(C), (D)	4, 9	5, 6
4	Mechanism	(E), (F)	5, 1	5, 6
4	Main circuit board	(G), (H),	5, 5	7

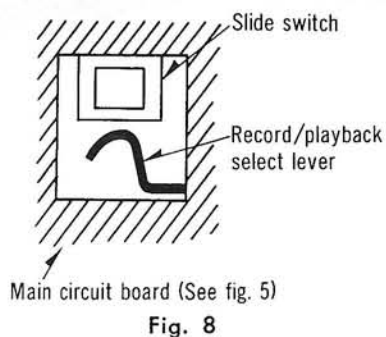

※ When the main circuit board is installed, be sure that the slide switch and the record/playback select lever are placed in proper position. (See fig. 8)

ADJUSTMENTS

Before measuring and adjusting "Overall frequency response", "Overall distortion" and "Overall S/N ratio", confirm that the characteristics of 5 items below are within standard which have much relation to or influence on electrical performances above.

1. Head azimuth adjustment.
2. Bias current.
3. Playback gain.
4. Overall gain.
5. Playback frequency response.

I. TEST INSTRUMENTS

1. Prepare test instruments which are equivalent in accuracy to those shown below.
2. The test instruments should be inspected and corrected by specialists once every 6 months, because a long period of use without maintenance may increase errors in indication.
3. Warm-up the test instruments for 30 minutes and the set to be measured for 10 minutes before taking the measurements. If not, there may arise an error or difference between the initial value and the stabilized value measured after "aging".
4. Specifications of test instruments.

(1) Audio frequency oscillator

- a. Oscillation frequency: 5 Hz ~ 500 kHz (5 ranges)
- b. Frequency tolerance: $\pm(3\% + 1\text{ Hz})$
- c. Sine wave
 - * Output voltage: 5 Vrms $\pm 10\%$ (without load)
2.5 Vrms $\pm 10\%$ (with 600 Ω load)
(at 25°C)
 - * Output frequency response: Within $\pm 0.2\text{ dB}$, 20 Hz ~ 20 kHz
Within $\pm 0.5\text{ dB}$, 5 Hz ~ 500 kHz
 - * Distortion factor: Not more than 0.05%, 200 Hz ~ 20 kHz
Not more than 0.5%, 5 Hz ~ 500 kHz
 - * Output impedance: 600 Ω unbalanced, within $\pm 15\%$
 - * Output attenuator: 0, 20 dB, Error: within $\pm 0.2\text{ dB}$
- d. Temperature in use of set: Temperature = 0 ~ 40°C, Humidity = 90% or less



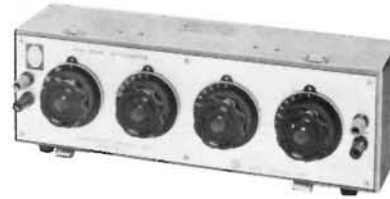
(2) Automatic-stop distortion meter (with vacuum tube voltmeter)

- A. Distortion factor measurement
 - a. Frequency: 400 Hz, 1 kHz $\pm 10\%$
(fundamental wave)
 - b. Measurement: 0.1 ~ 100% (6 ranges)
 - c. Input: 50 mV ~ 50 V
 - d. Fundamental wave attenuation: 60 dB or more
- B. Level measurement
 - a. Measurement: 1 mV (–60 dB) ~ 30 V (30 dB) (9 ranges)
 - b. Frequency response: 20 Hz ~ 100 kHz $\pm 0.3\text{ dB}$
(1 kHz basis)
 - c. Input impedance: 1 M Ω $\pm 10\%$, less than 50 pF
 - d. Error in indicated value: Within $\pm 3\%$ at 1 kHz
- C. Output terminal
 - a. Frequency response: 10 Hz ~ 100 kHz $\pm 1\text{ dB}$
100 kHz ~ 1 MHz $\pm 3\text{ dB}$
 - b. Output voltage: 1 Vrms $\pm 10\%$ (1 kHz sine wave)



(3) Attenuator

- a. Input impedance: 600 Ω unbalanced
- b. Maximum attenuation: 121 dB
- c. Minimum attenuation: 0.1 dB



(4) Oscilloscope

- a. Cathode ray tube: Effective ranges 8 $\times$ 8 cm
- b. Vertical axis
 - * Input sensitivity: 30 mV $\sim$ 30 V/cm
 - * Frequency band: DC $\sim$ 2 MHz
 - * Transient time: 180 ns.
 - * Input impedance: 1 M Ω , 35 pF
- c. Horizontal axis
 - * Tuning range: 30 Hz $\sim$ 2 MHz
 - * Sweep time: 1 μ s $\sim$ 100 ms/cm
 - * External sweep: 1 Vp-p/cm or more



(5) Digital electronic counter

- a. Number of figure: 4 (decimal system)
- b. Input sensitivity: 100 mVrms
- c. Input impedance: 1 M Ω , 40 pF
- d. Frequency measurement range: 10 Hz $\sim$ 100 kHz
- e. Counting time: 0.1, 1, 10 s



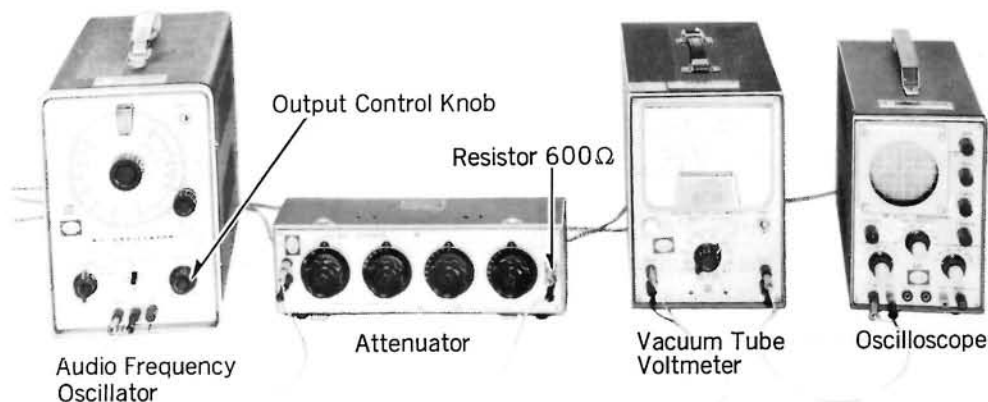
(6) Wow meter

- a. Measured center frequency range: 3 kHz $\pm$ 4%
- b. Input level range: 30 mV $\sim$ 3 V
- c. Input impedance: About 50 K Ω unbalanced
- d. Measurement: 0.01 $\sim$ 3% (5 ranges)
- e. Indicator error: Maximum error in indicated value $\pm$ 5% in each range.
- f. Frequency response: Conforming to weighting curve characteristics (WRMS), JIS C5551.
Flat characteristics (RMS)
0.5 $\sim$ 200 Hz, within -3 dB (4 Hz basis)
- g. Meter indication system: Effective value indication, conforming to JIS C5551.
- h. Meter response characteristic: About 5 $\sim$ 7 sec.
- i. Oscillation frequency: 3 frequencies (3 kHz, 3 kHz $\pm$ 3%)
- j. Temperature range: 0 $\sim$ 40 $^{\circ}$ C



II. MEASUREMENT CONDITIONS

- Standard measurement conditions
 - * Ambient temperature: 10~30°C (50~86°F)
 - * Ambient humidity: 30~90% RH
 - * Power voltage accuracy: $\pm 3\%$
- Position of tape recorder
 - * When measuring, place the unit under test in a horizontal position.
- Oscillator output voltage adjustment
 - * Connect the equipments as shown in the following and adjust the oscillator output control knob for 1 V ($f=1$ kHz) through the attenuator while keeping the attenuator at 0 dB.
 - * When supplying a signal to the tape recorder amplifier, adjust the input level using the attenuator.



III. TEST TAPE

Test tape life

The more frequently the test tape is used, the more the tape characteristics will deteriorate (e.g. lowering of recorded level, worsening of frequency response particularly in high-frequency range, and an increase in wow due to tape elongation) until measured values become unreliable. Even in such a case when a tape is not used, but stored, for a long period of time, tape shows deterioration in performance because of self damagenetization due to storage conditions, etc.

Please refer to the tape life specification and use care not to use a tape longer than its rated life when servicing.

Frequency of use: Not more than 20 times for each tape length.

Storage period: Not more than 6 months.






※ Test tape



PARTS NO.	PARTS NAME	SPECIFICATIONS	REMARKS
C-FH	STANDARD REC. LEVEL & FREQ. RESPONSE TAPE	0dB: STANDARD REC. LEVEL (160pWb/mm)	5 TIMES REPETITIVE RECORDING TAPE SPEED: 1-7/8IPS. (4.8CM/S), FULL TRACK (10 MIN.)
C-WAT	WOW & TAPE SPEED TAPE	0dB: 250pWb/mm	TAPE SPEED: 1-7/8IPS. (4.8CM/S), FULL TRACK (45 MIN.)
C-AA	AZIMUTH TAPE	0dB: 250pWb/mm	TAPE SPEED: 1-7/8IPS. (4.8CM/S), FULL TRACK (15 MIN.)
C-RA	REFERENCE BLANK TAPE (NORMAL)		UNRECORDED TAPE (20 MIN.)
C-RF	REFERENCE BLANK TAPE (CrO ₂)		UNRECORDED TAPE (20 MIN.)


IV. MEASUREMENT & ADJUSTMENT METHOD




NOTE:



- | | |
|---|---|
| <ol style="list-style-type: none"> 1. Make sure heads are clean. 2. Make sure capstan and pressure roller are clean. 3. Judgeable room temperature: $20 \pm 5^{\circ}\text{C}$ ($68 \pm 9^{\circ}\text{F}$) 4. Dolby NR switch: OUT | <ol style="list-style-type: none"> 5. EQ. selector: 120μ 6. Bias selector: LOW 7. Peak check switch: OUT 8. Output level control: MAX. |
|---|---|

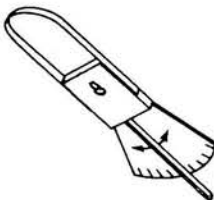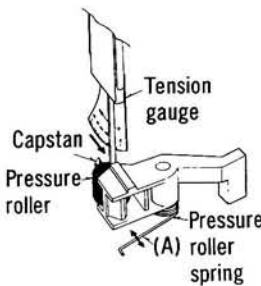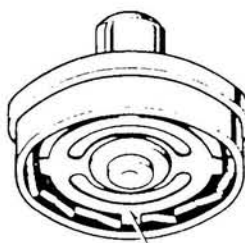
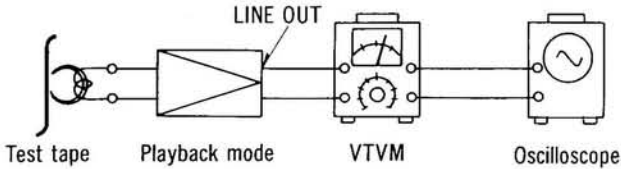
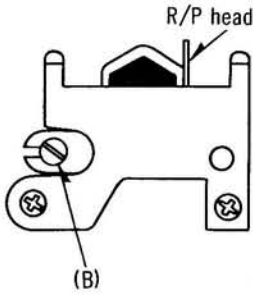
ITEM	MEASUREMENT & ADJUSTMENT	REMARKS
Pressure of pressure roller Equipment: * Tension gauge (max. 500 gr) 	1. Place UNIT into playback mode. 2. Hook the tension gauge to pressure roller lever and pull it in the direction of the arrow as shown in fig. 9. 3. Measure the tension at the moment when the pressure roller moves away from the capstan. Standard Value: 400 ± 50 gr Adjustment method Bend the part (A) of the pressure roller spring in either direction shown by the arrow until the correct pressure is attained.	* Playback mode  Fig. 9
Takeup tension Equipment: * Cassette torque meter (SRK-CT or RP8063)	1. Mount cassette torque meter on UNIT. 2. Place UNIT into playback mode and read takeup torque. 3. Measure several times and determine the mean value. Standard Value: 55 ± 15 gr-cm If the measured value is not within standard, firstly clean the rotational parts of the mechanism with alcohol, and if it still is not within standard, make the following adjustment. Adjustment method Adjust by turning the plate spring attached in the takeup reel table (See fig. 10).	* Playback mode  Plate spring Fig. 10
Head azimuth adjustment Equipment: * VTVM * Oscilloscope * Test tape (azimuth)...C-AA	Record/playback head adjustment 1. Test equipment connection is shown below.  Test tape Playback mode LINE OUT VTVM Oscilloscope Fig. 11 2. Play azimuth tape (C-AA 6.3 kHz). 3. Adjust record/playback head angle adjustment screw (B) in fig. 12 so that output level at LINE OUT becomes maximum. 4. Measure both channels, and adjust levels for equal output. 5. After adjustment lock head adjustment screw with lacquer.	* Playback mode  R/P head (B) Fig. 12

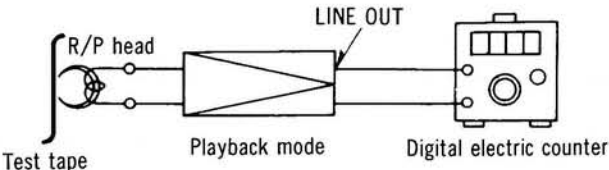
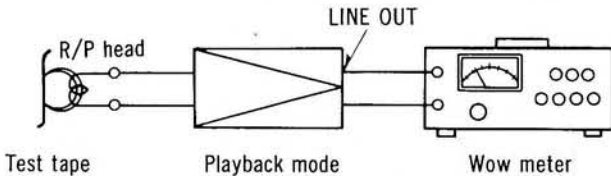
ITEM	MEASUREMENT & ADJUSTMENT	REMARKS
Tape speed Equipment: • Digital electronic counter or frequency counter (RP8067) • Test tape...C-WAT	Tape speed accuracy 1. Test equipment connection is shown below.  Fig. 13 2. Play test tape (C-WAT 3,000Hz), and supply playback signal to frequency counter. 3. Measure this frequency. 4. On the basis of 3,000Hz, determine value by following formula: $\text{Tape speed accuracy} = \left(\frac{f - 3,000}{3,000} \times 100 \right) \%$ where, f = measured value 5. Take measurement at middle section of tape. Standard Value: ± 1.5% Adjustment method 1. Play the middle part of test tape. 2. Adjust the tape speed adjustment VR shown in fig. 28 so that frequency becomes 3,000Hz. Tape speed fluctuation Make measurements in same manner as above (beginning, middle and end of tape), and determine difference between maximum and minimum values and calculate as follows: $\text{Tape speed fluctuation} = \left(\frac{f_1 - f_2}{3,000} \times 100 \right) \%$ f₁ = maximum value f₂ = minimum value Standard Value: 1%	• Playback mode
Wow and flutter Equipment: • Wow meter • Test tape...C-WAT	1. Test equipment connection is shown below.  Fig. 14 2. Use wow test tape (3,000Hz) and measure its playback signal on wow meter. 3. Wow and flutter is expressed in percentage and that measurement can be weighted by JIS network (WRMS). 4. Measure at middle section of test tape. Standard Value: 0.12 % (WRMS)	• Playback mode

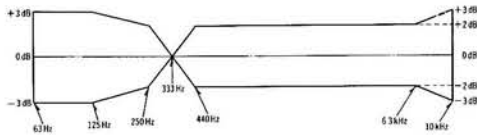ITEM	MEASUREMENT & ADJUSTMENT	REMARKS
Playback frequency response Equipment: • VTVM • Oscilloscope • Test tape...C-FH	1. Test equipment connection is as same as "Head azimuth adjustment" but use the test tape (C-FH) instead of head azimuth tape (See fig. 11). 2. Place UNIT into playback mode. 3. Play frequency response test tape (C-FH). 4. Measure output level at 10kHz, 8kHz, 4kHz, 1kHz, 125Hz and 63Hz and compare each output level with standard frequency 333Hz, at LINE OUT. 5. Make measurement for both channels. 6. Make sure that the measured value is within the range specified in the frequency response chart. Playback frequency response chart  Fig. 15 7. If measured value is not in standard, adjust VR1 (L-CH), VR2 (R-CH) (See fig. 28 on page 14).	• Playback mode
Playback gain Equipment: • VTVM • Oscilloscope • Test tape...C-FH	1. Test equipment connection is shown in fig. 11. 2. Play standard recording level portion on test tape (C-FH 333Hz), and using VTVM measure the output level at LINE OUT jack. 3. Make measurement for both channels. Standard Value: 0.42 V (- 7 dB) Adjustment 1. If measured value is not standard, adjust VR3 (L-CH), VR4 (R-CH) (See fig. 28 on page 14). 2. After adjustment, check "Playback frequency response" again.	• Playback mode
Playback S/N ratio Equipment: • VTVM • Oscilloscope • Test tape...C-FH • Empty cassette	1. Test equipment connection is shown in fig. 11. 2. Play standard recording level test tape (C-FH 333Hz) and read output level on VTVM. Refer to "Playback gain adjustment". 3. Place empty cassette (which has been cut) and play again. 4. Measure noise level at this time, using VTVM, and determine ratio of this level to test tape output signal voltage (333Hz). Standard Value: Greater than 43dB An example calculation is shown below. A: Es = playback output signal voltage of test tape (333Hz) B: En = playback output noise level Es = 0.42 V (- 7 dB) En = 3.0 mV (- 50 dB) $S/N \text{ ratio} = \frac{E_s}{E_n} = \frac{0.42 \text{ V}}{3.0 \text{ mV}} = 140$ $20 \log_{10} 140 = 43 \text{ dB}$ $S/N \text{ ratio} = E_s(\text{dB}) - E_n(\text{dB}) = -7 - (-50) = 43 \text{ dB}$	• Playback mode

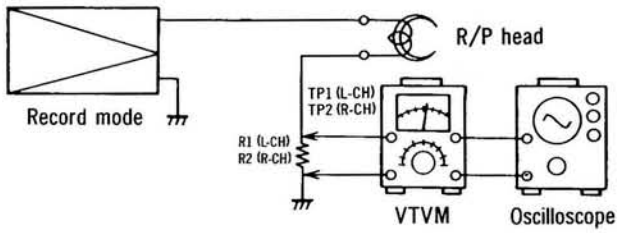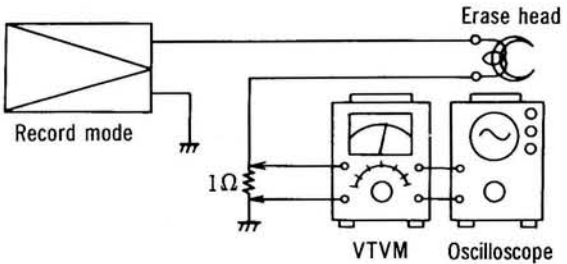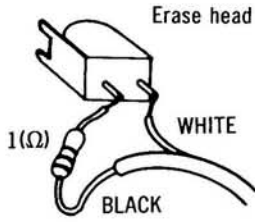ITEM	MEASUREMENT & ADJUSTMENT	REMARKS
Bias current Equipment: • VTVM • Oscilloscope	1. Test equipment connection is shown below.  Fig. 16 2. Place UNIT into record mode, and bias selector to "LOW" (for normal tape). 3. Read voltage on VTVM and calculate bias current by following formula: $\text{Bias current (A)} = \frac{\text{Value read on VTVM (V)}}{10 (\Omega)}$ Standard Value: $0.5 \begin{smallmatrix} +0.25 \\ -0.15 \end{smallmatrix} \text{mA}$ 4. Adjust L5 (L-CH), and L6 (R-CH) (See adjustment part location on page 14). 5. Then changing the bias selector to "HIGH" confirm that bias current becomes the value shown below. Standard Value: $0.6 \begin{smallmatrix} +0.25 \\ -0.15 \end{smallmatrix} \text{mA}$	• Record mode • Be sure the ground end of the meter is connected to the ground end of the resistor. • When bias current is adjusted on one channel only, note that bias current on the other channel may vary.
Erase current Equipment: • VTVM • Oscilloscope • Resistor (1Ω)	1. Connect 1Ω resistor between ground side terminal of erase head and ground lead wire removed (See fig. 18). 2. Connect VTVM to both ends of 1Ω resistor.  Fig. 17 3. Place UNIT into record mode and, measure voltage across the 1Ω resistor. 4. Determine erase current with the following formula: $\text{Erase current (A)} = \frac{\text{Voltage across } 1\Omega \text{ resistor (V)}}{1 (\Omega)}$ Standard Value: More than 70mA	• Record mode  Fig. 18

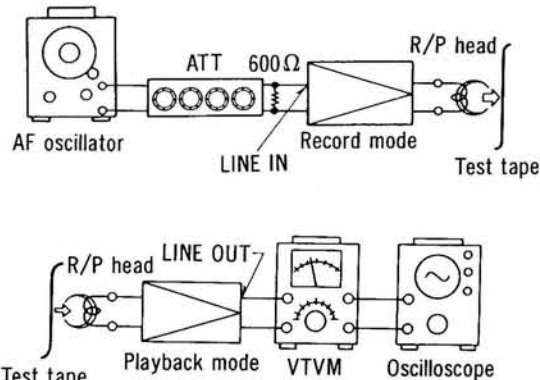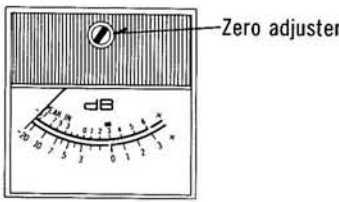ITEM	MEASUREMENT & ADJUSTMENT	REMARKS
Overall gain Equipment: • AF oscillator • VTVM • ATT • Oscilloscope • Test tape (reference blank tape) C-RA for Normal	1. Test equipment connection is shown in fig. 19.  Fig. 19 2. Place UNIT into record mode. 3. Supply 1 kHz signal (-24 dB) from AF oscillator, through ATT, to LINE IN. 4. Adjust ATT until monitor level at LINE OUT becomes 0.42 V (-7 dB). 5. Using test tape (C-RA), make recording. 6. Playback recorded tape, and make sure the value at LINE OUT on VTVM becomes 0.42 V. 7. If measured value is not 0.42 V, adjust VR15 (L-CH), VR16 (R-CH) (See fig. 28 on page 14). 8. Repeat from step (2).	• Record/playback mode • LINE IN level control ...MAX • Input selector...LINE IN • Standard input level: MIC $-72 \pm 3\text{ dB}$ LINE IN $-24 \pm 3\text{ dB}$
Level meter Equipment: • VTVM • Oscilloscope • AF oscillator • ATT	When there is no signal 1. Turn off the power supply to the set. 2. Check whether the indication needles of the level meters are in the position shown in fig. 20.  Fig. 20 3. If they deviate to the position shown above, adjust the zero adjuster. 4. Turn on the power supply to the set.	• Record mode

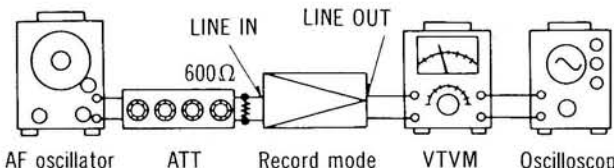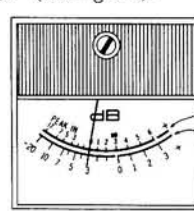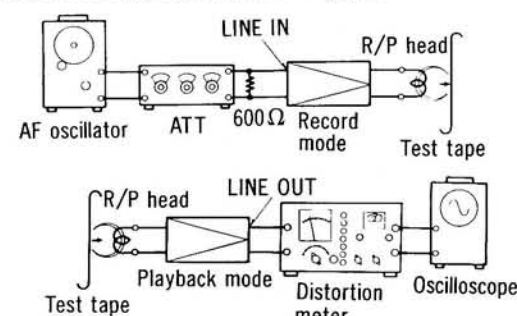ITEM	MEASUREMENT & ADJUSTMENT	REMARKS
	When standard recording level is supplied. Test equipment connection are shown in fig. 21.  Fig. 21 - Set the peak level check switch to the "IN" position. - Supply a 1 kHz signal from the AF oscillator, through the ATT, to the LINE IN Jack. - Adjust the ATT so that the monitor level at LINE OUT becomes 0.42 V. - Adjust VR13 (L-CH) and VR14 (R-CH) so that the VU meters indicate 0 VU. (See fig. 22).  Fig. 22 Balance of left and right level meters - Set the peak level check switch to the "OUT" position. - Then adjust VR18 for R-CH so that left and right VU meters show the same indication.	• Input selector...LINE IN
Overall distortion Equipment: • Distortion meter • AF oscillator • ATT • Oscilloscope • Test tape (reference blank tape) C-RA for Normal C-RF for CrO₂	- Test equipment connection is shown in fig. 23.  Fig. 23 - Supply 1 kHz signal to LINE IN and adjust ATT so that output level at LINE OUT indicates 0.42 V (−7 dB). - Make recording. - Playback and measure distortion factor of output signal. - When the distortion factor does not satisfy the standard, check the bias current. When the bias current is lower than standard, distortion will increase. Care should be exercised in the adjustment because the bias current also has an influence on the overall frequency response. Refer to "The overall frequency response" and "The bias current adjustment". Standard Value: Less than 2.3 % (Normal) Less than 3.3 % (CrO₂)	• LINE IN level control ...MAX • Input selector...LINE IN

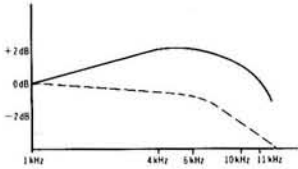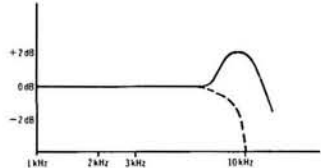ITEM	MEASUREMENT & ADJUSTMENT	REMARKS
	Adjustment 1-Using bias current  Fig. 26 Adjustment 2-Using the peaking coil for recording equalization When the frequency response is flat in the middle-frequency range and makes a sharp rise or drop in the high-frequency range, as shown in fig. 27, adjust by turning the peaking coil L3 (L-CH), L4 (R-CH) for normal tape recording equalization.  Fig. 27	
Overall S/N ratio Equipment: • VTVM • AF oscillator • ATT • Oscilloscope • Test tape (reference blank tape) ...C-RA	- Test equipment connection is shown in fig. 19. - Supply 1 kHz signal to LINE IN and adjust ATT so that output level at LINE OUT indicates 0.42 V (−7 dB). - Make recording. - Make another recording without supplying signal (disconnect input plug to LINE IN). - Rewind to recorded part and playback. - Measure output signal level and no signal level (noise), and determine the ratio in decibels (dB). - The value is different between "Playback S/N and overall S/N", but for decibel calculation refer to "Playback S/N measurement" on page 8. Standard Value: Greater than 42dB (without NAB filter)	• Record/playback mode • LINE IN level control ...MAX • Erase the tape with a bulk tape eraser. • Input selector...LINE IN
Dolby NR circuit Equipment: • VTVM • AF oscillator • ATT • Oscilloscope	- Place UNIT into record mode, set the Dolby NR switch to OUT position and supply to LINE IN to obtain −34.5 dB at TP3 (L-CH), TP4 (R-CH) (frequency 5 kHz). - Confirm that the value at IN position is 8 dB greater than the value at OUT position of Dolby NR switch. - When it is not in condition above, adjust as follows. - Set VR7 (L-CH), VR8 (R-CH) to maximum. - Set the Dolby NR switch to IN position. - At this time adjust VR9 (L-CH), VR10 (R-CH) so that the reading of VTVM become 10 dB greater than the value in step (1) above. - Adjusting VR7 (L-CH), VR8 (R-CH), make the reading of VTVM become 2 dB smaller than the value obtained through the adjustment in step (6) above.	• Record mode • LINE IN level control ...MAX • Input selector...LINE IN

ADJUSTMENT PARTS LOCATION



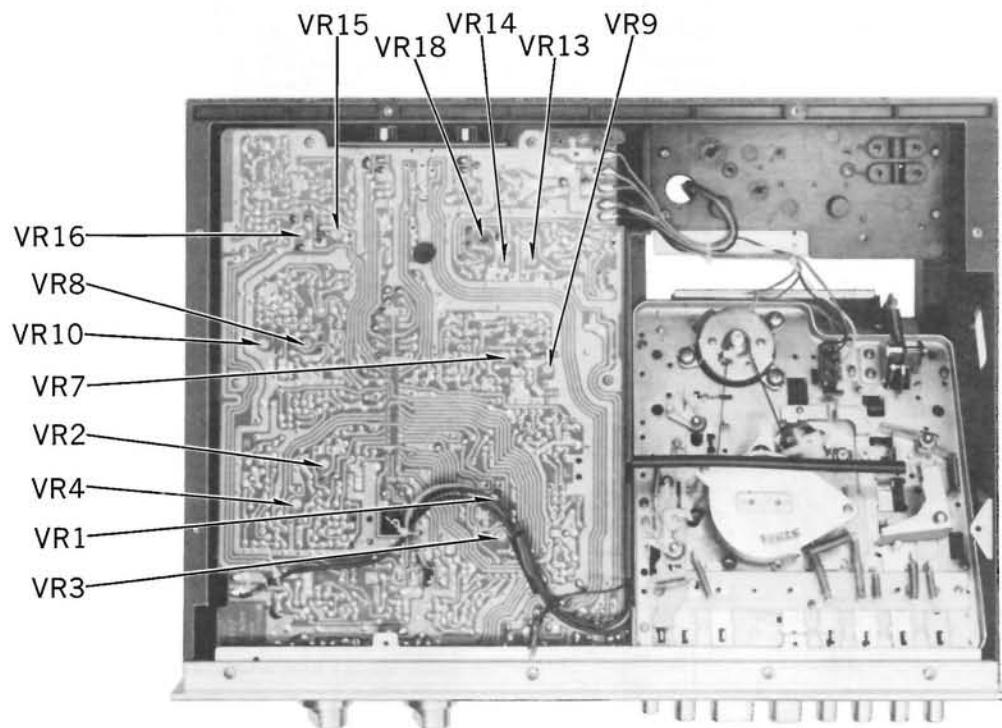
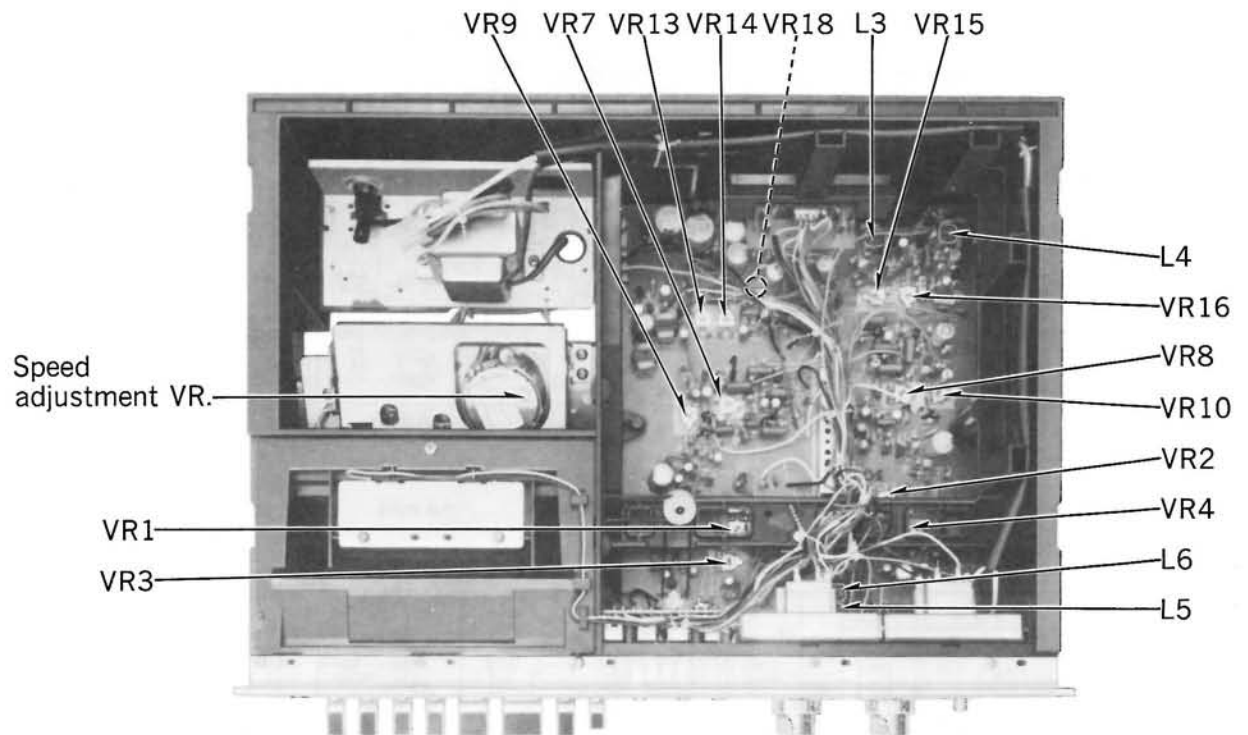


Fig. 28

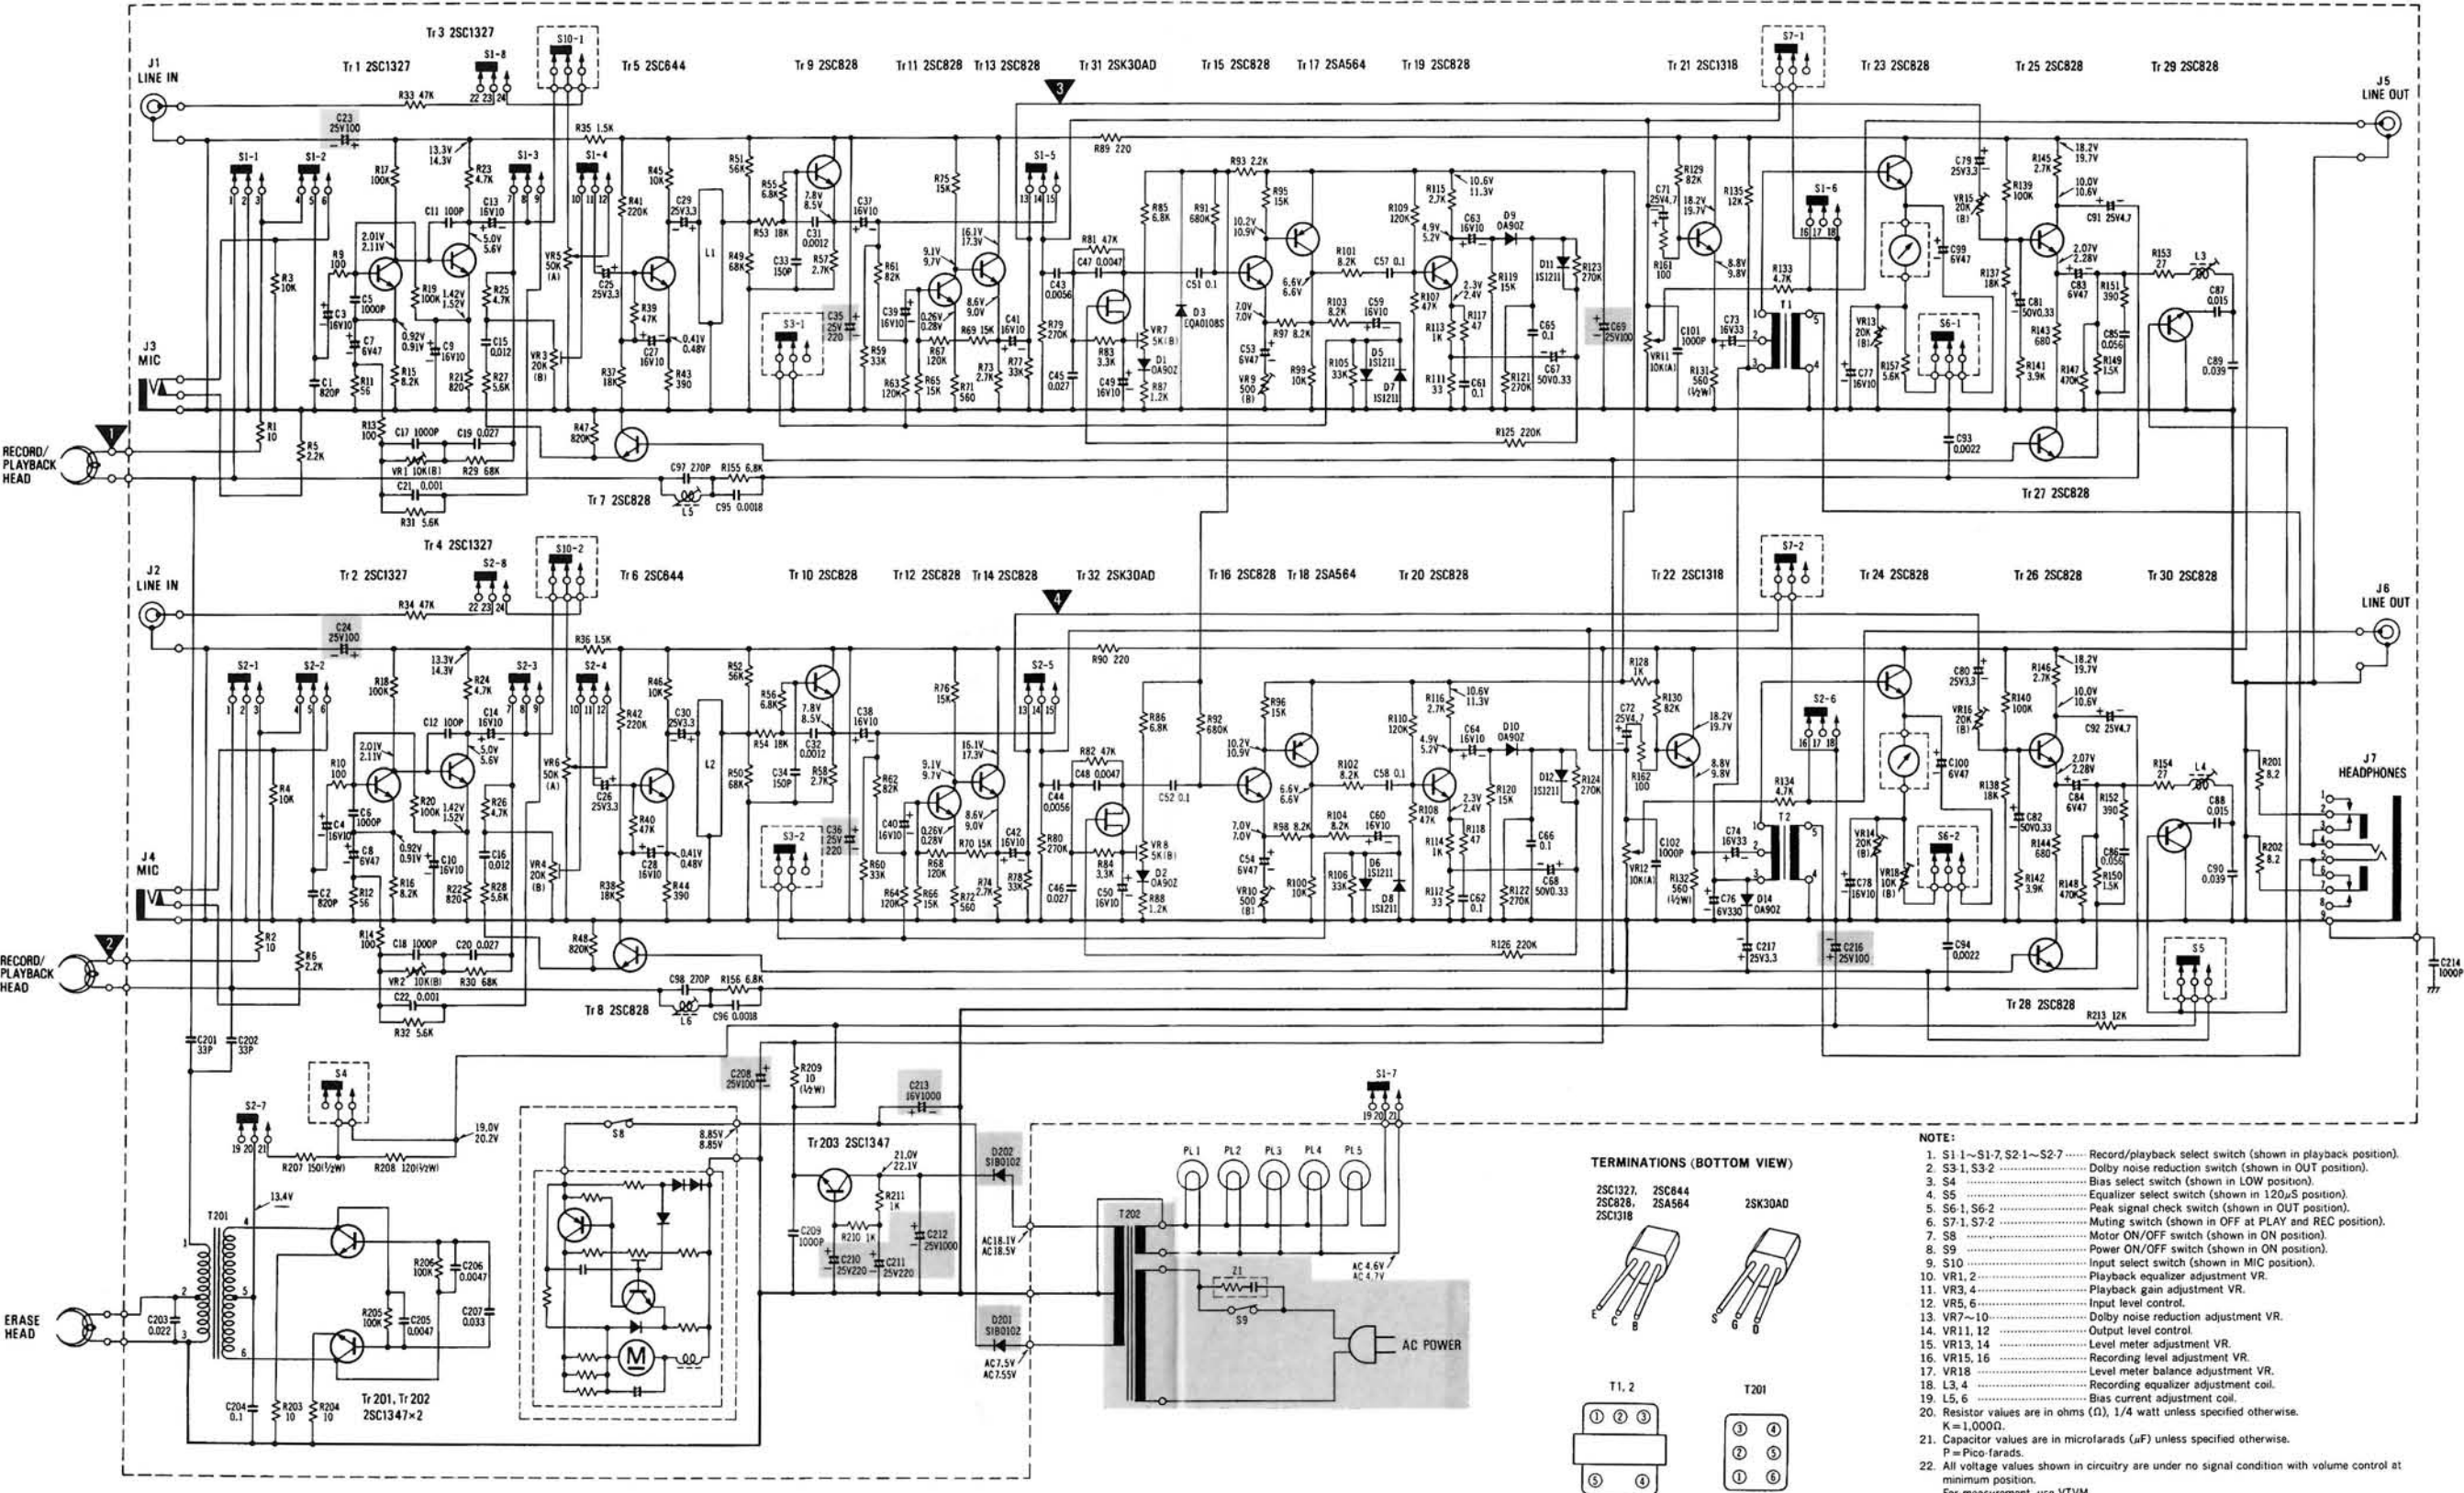SCHEMATIC DIAGRAM MODEL RS-630TUS




TERMINATIONS (BOTTOM VIEW)

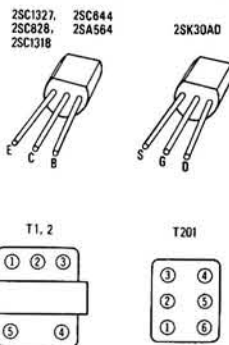


- NOTE:**
- S1 1~S1-7, S2 1~S2-7 Record/playback select switch (shown in playback position).
 - S3-1, S3-2 Dolby noise reduction switch (shown in OUT position).
 - S4 Bias select switch (shown in LOW position).
 - S5 Equalizer select switch (shown in 120μS position).
 - S6-1, S6-2 Peak signal check switch (shown in OUT position).
 - S7-1, S7-2 Muting switch (shown in OFF at PLAY and REC position).
 - S8 Motor ON/OFF switch (shown in ON position).
 - S9 Power ON/OFF switch (shown in ON position).
 - S10 Input select switch (shown in MIC position).
 - VR1, 2 Playback equalizer adjustment VR.
 - VR3, 4 Playback gain adjustment VR.
 - VR5, 6 Input level control.
 - VR7~10 Dolby noise reduction adjustment VR.
 - VR11, 12 Output level control.
 - VR13, 14 Level meter adjustment VR.
 - VR15, 16 Recording level adjustment VR.
 - VR18 Level meter balance adjustment VR.
 - L3, 4 Recording equalizer adjustment coil.
 - L5, 6 Bias current adjustment coil.
 - Resistor values are in ohms (Ω), 1/4 watt unless specified otherwise. K=1,000Ω.
 - Capacitor values are in microfarads (μF) unless specified otherwise. P=Pico-farads.
 - All voltage values shown in circuitry are under no signal condition with volume control at minimum position. For measurement, use VTVM.
 - The upper values should be measured during recording and the lower values during playback.
 - The mark (▼) shows test point. e.g. ▼ = Test point 1.
 - Important safety notice.
 - The shaded area on this schematic diagram incorporates special features important for safety. When servicing it is essential that only manufacturer's specified parts be used for the critical components in the shaded areas of the schematic.

CIRCUIT BOARD

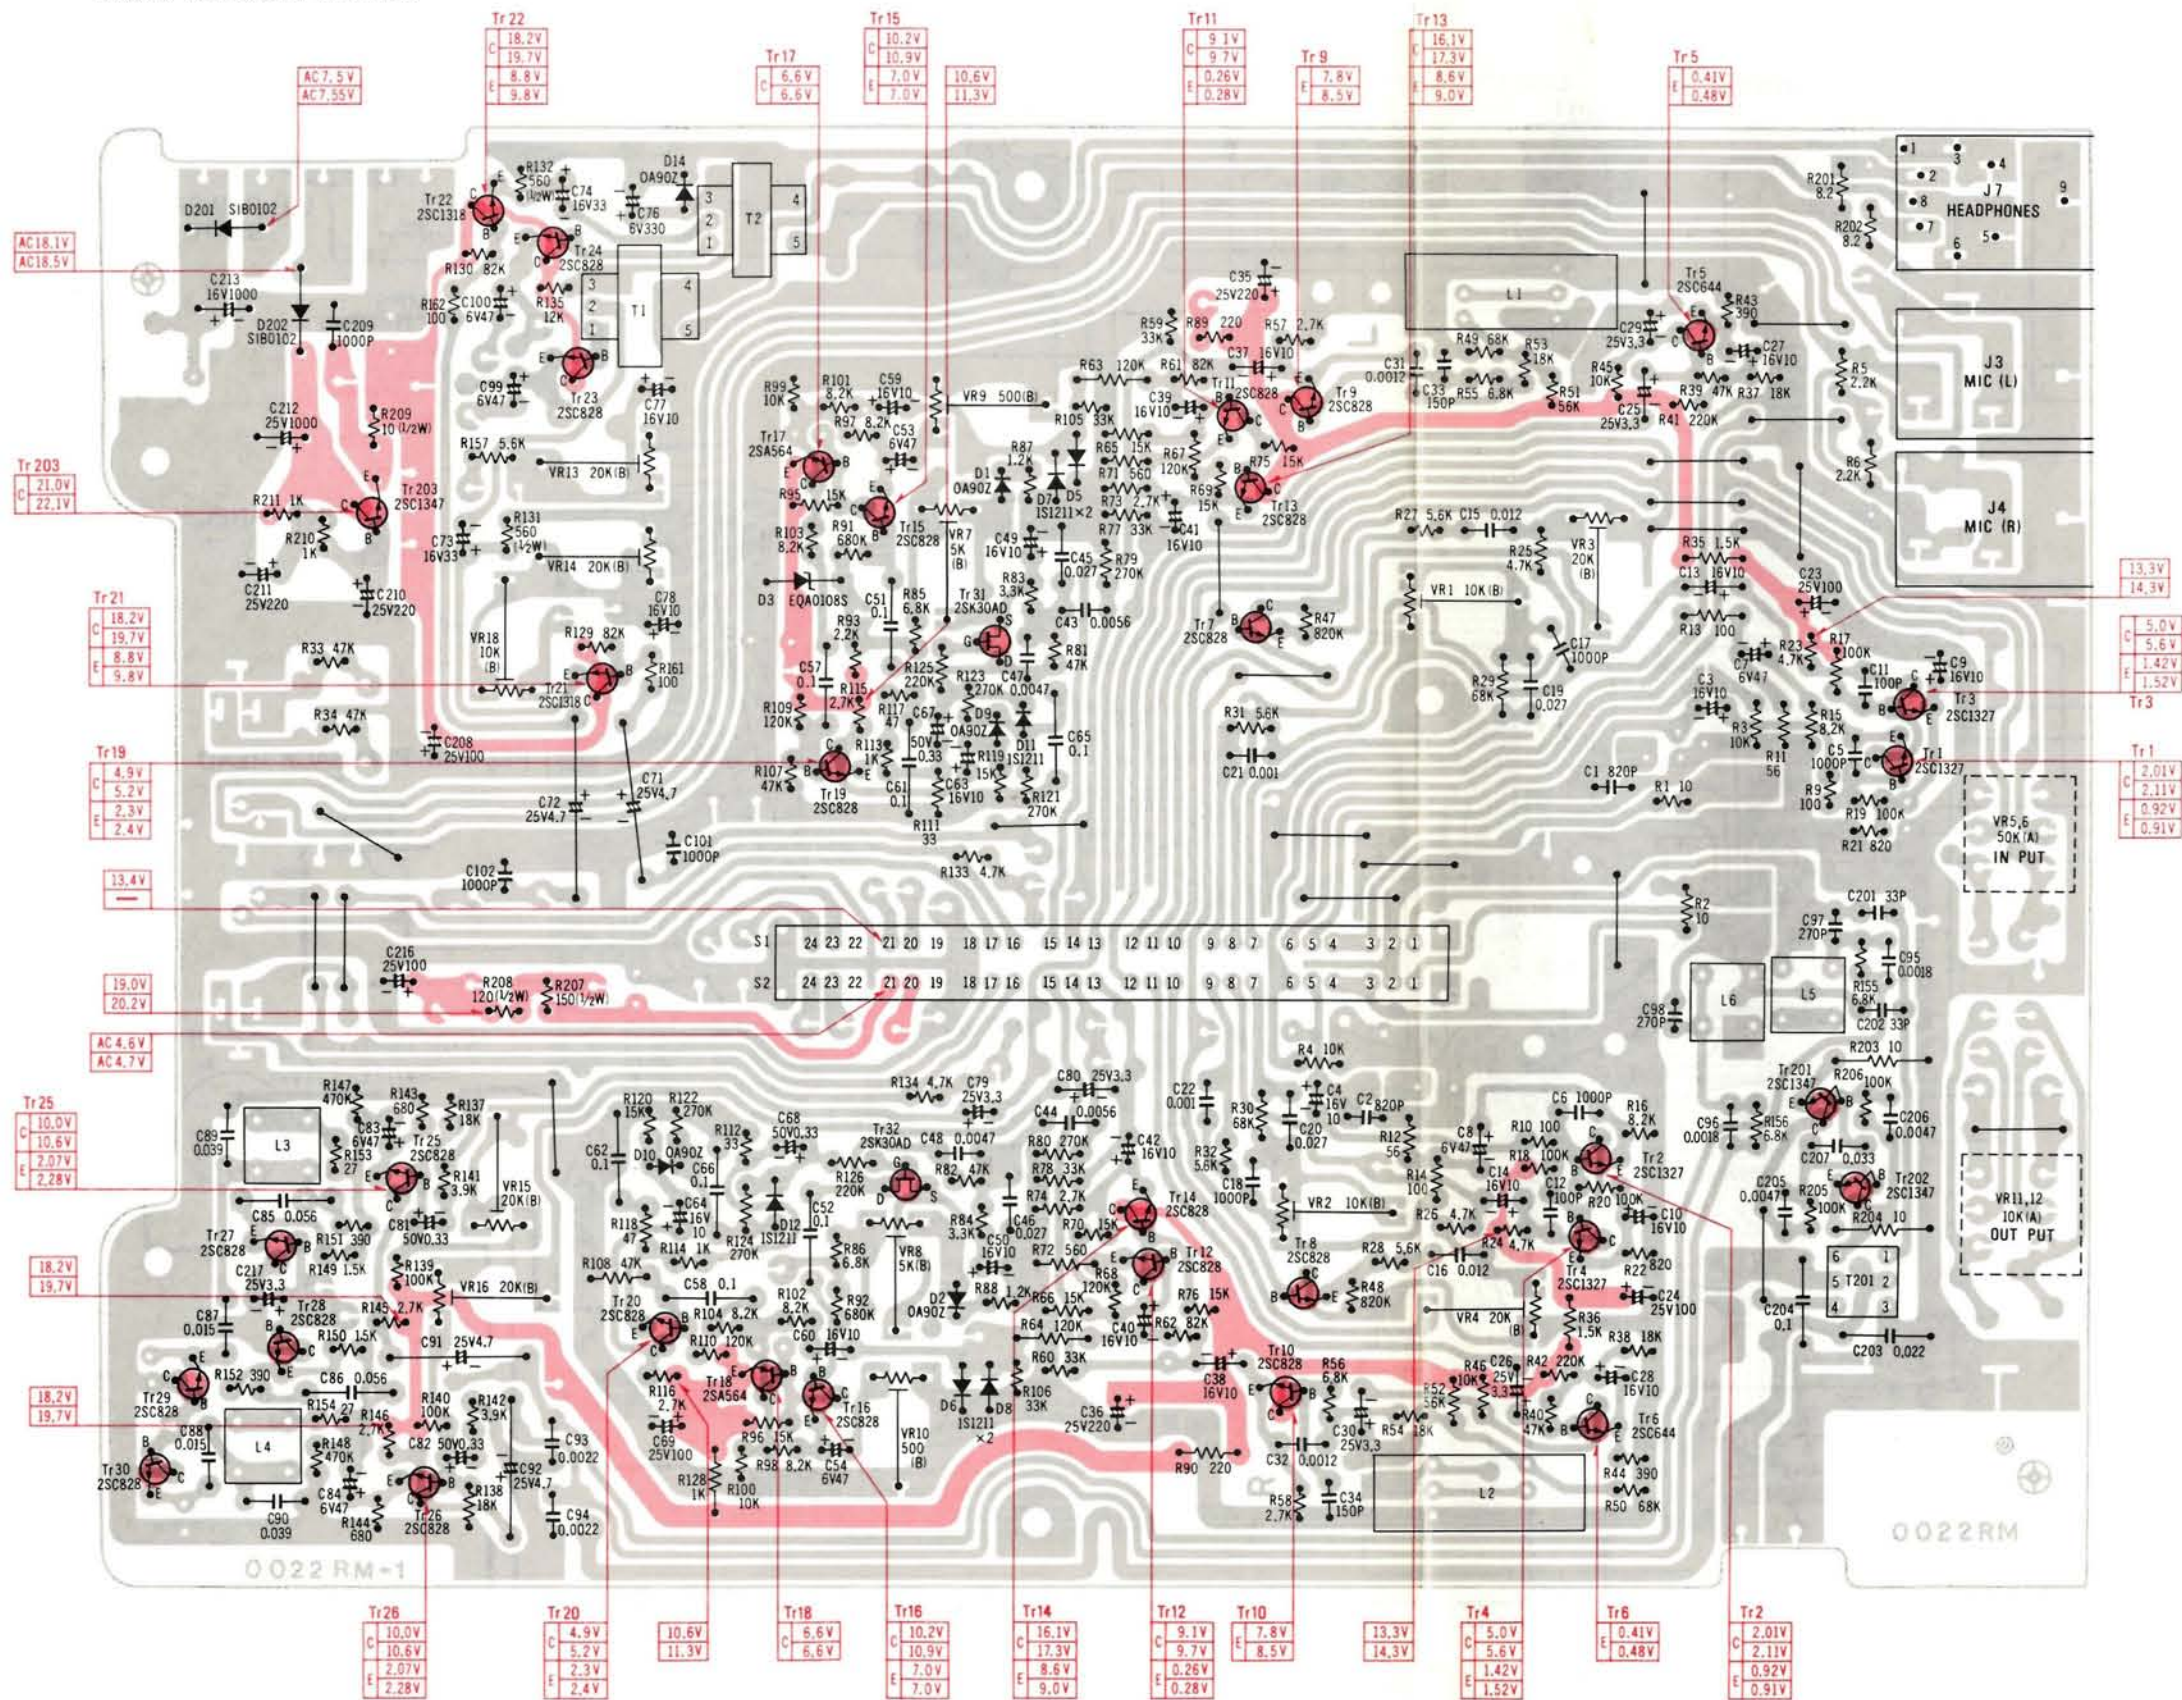MAIN CIRCUIT BOARD




SWITCH CIRCUIT BOARD

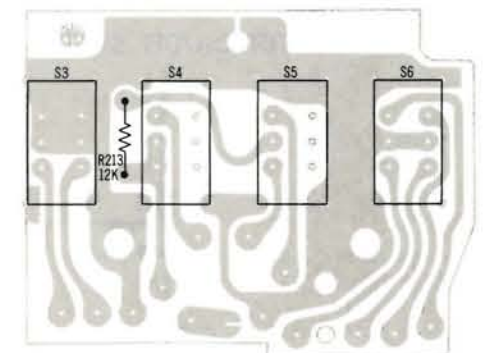


NOTE:
The circuit shown in red on the conductor is B circuit.
Values indicated in are DC voltage between the chassis and electrical parts.
The upper values should be measured during recording and the lower values during playback.

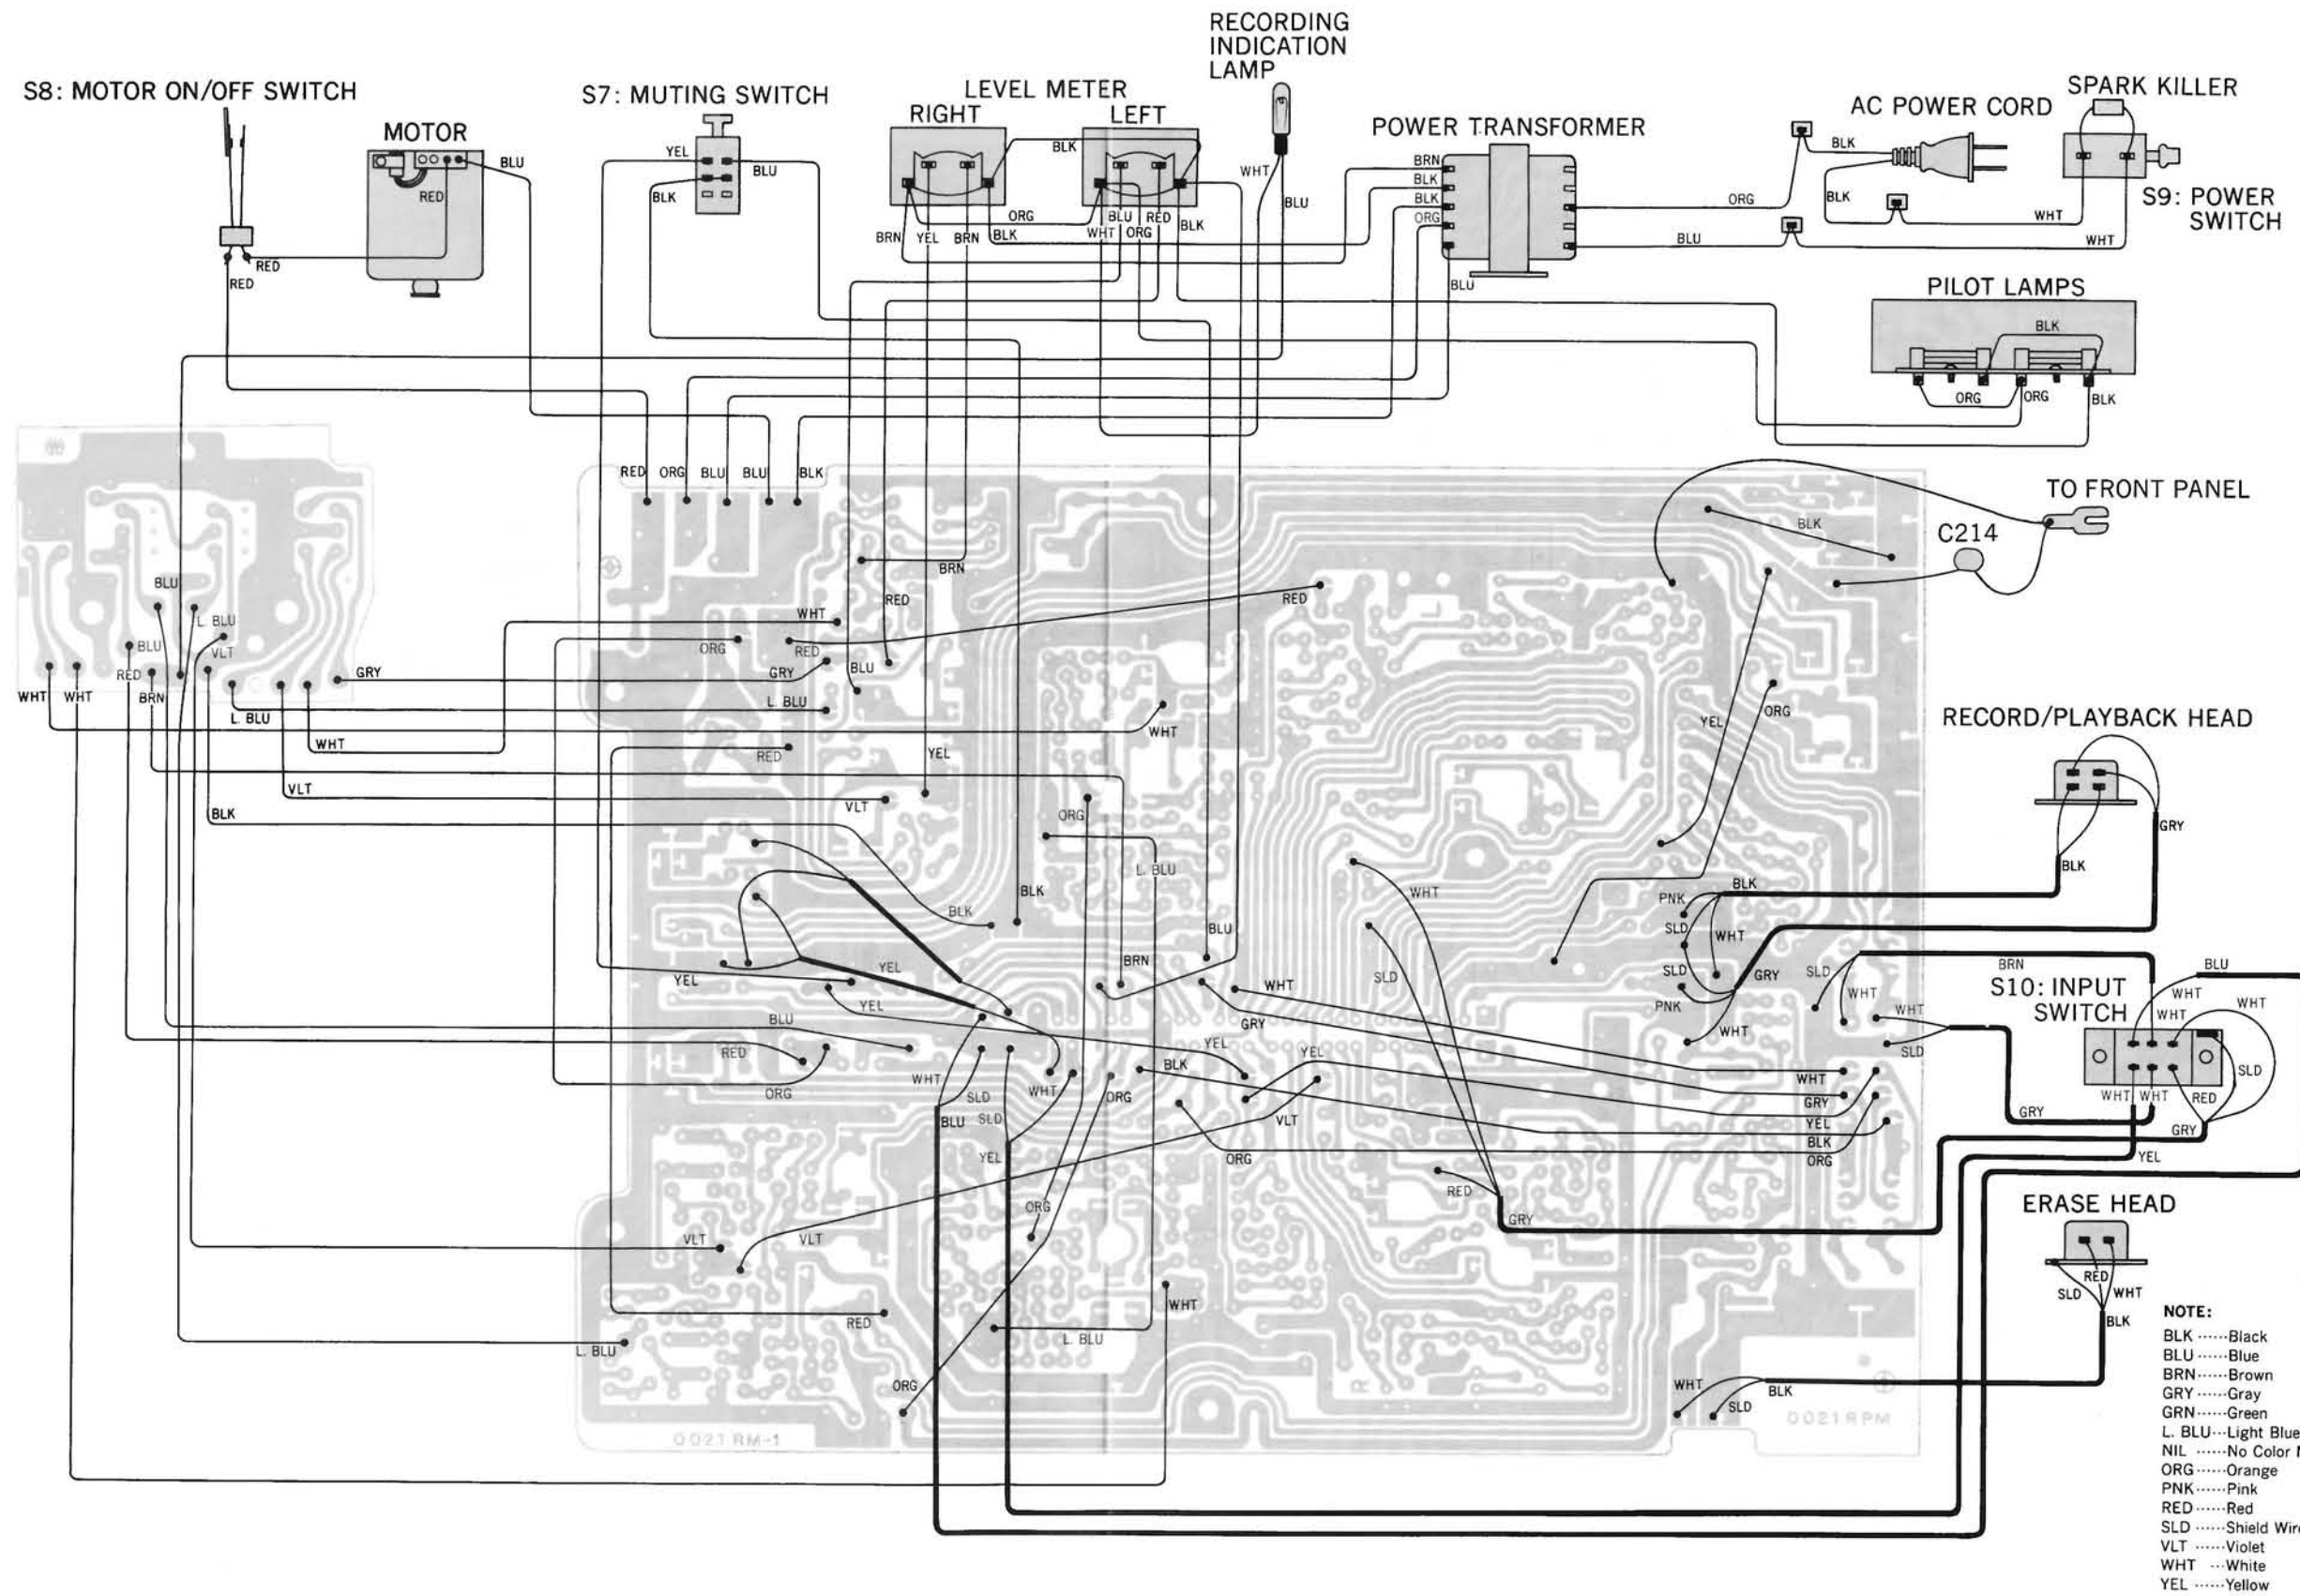
WIRING CONNECTION DIAGRAM MODEL RS-630TUS




EXPLODED VIEWS

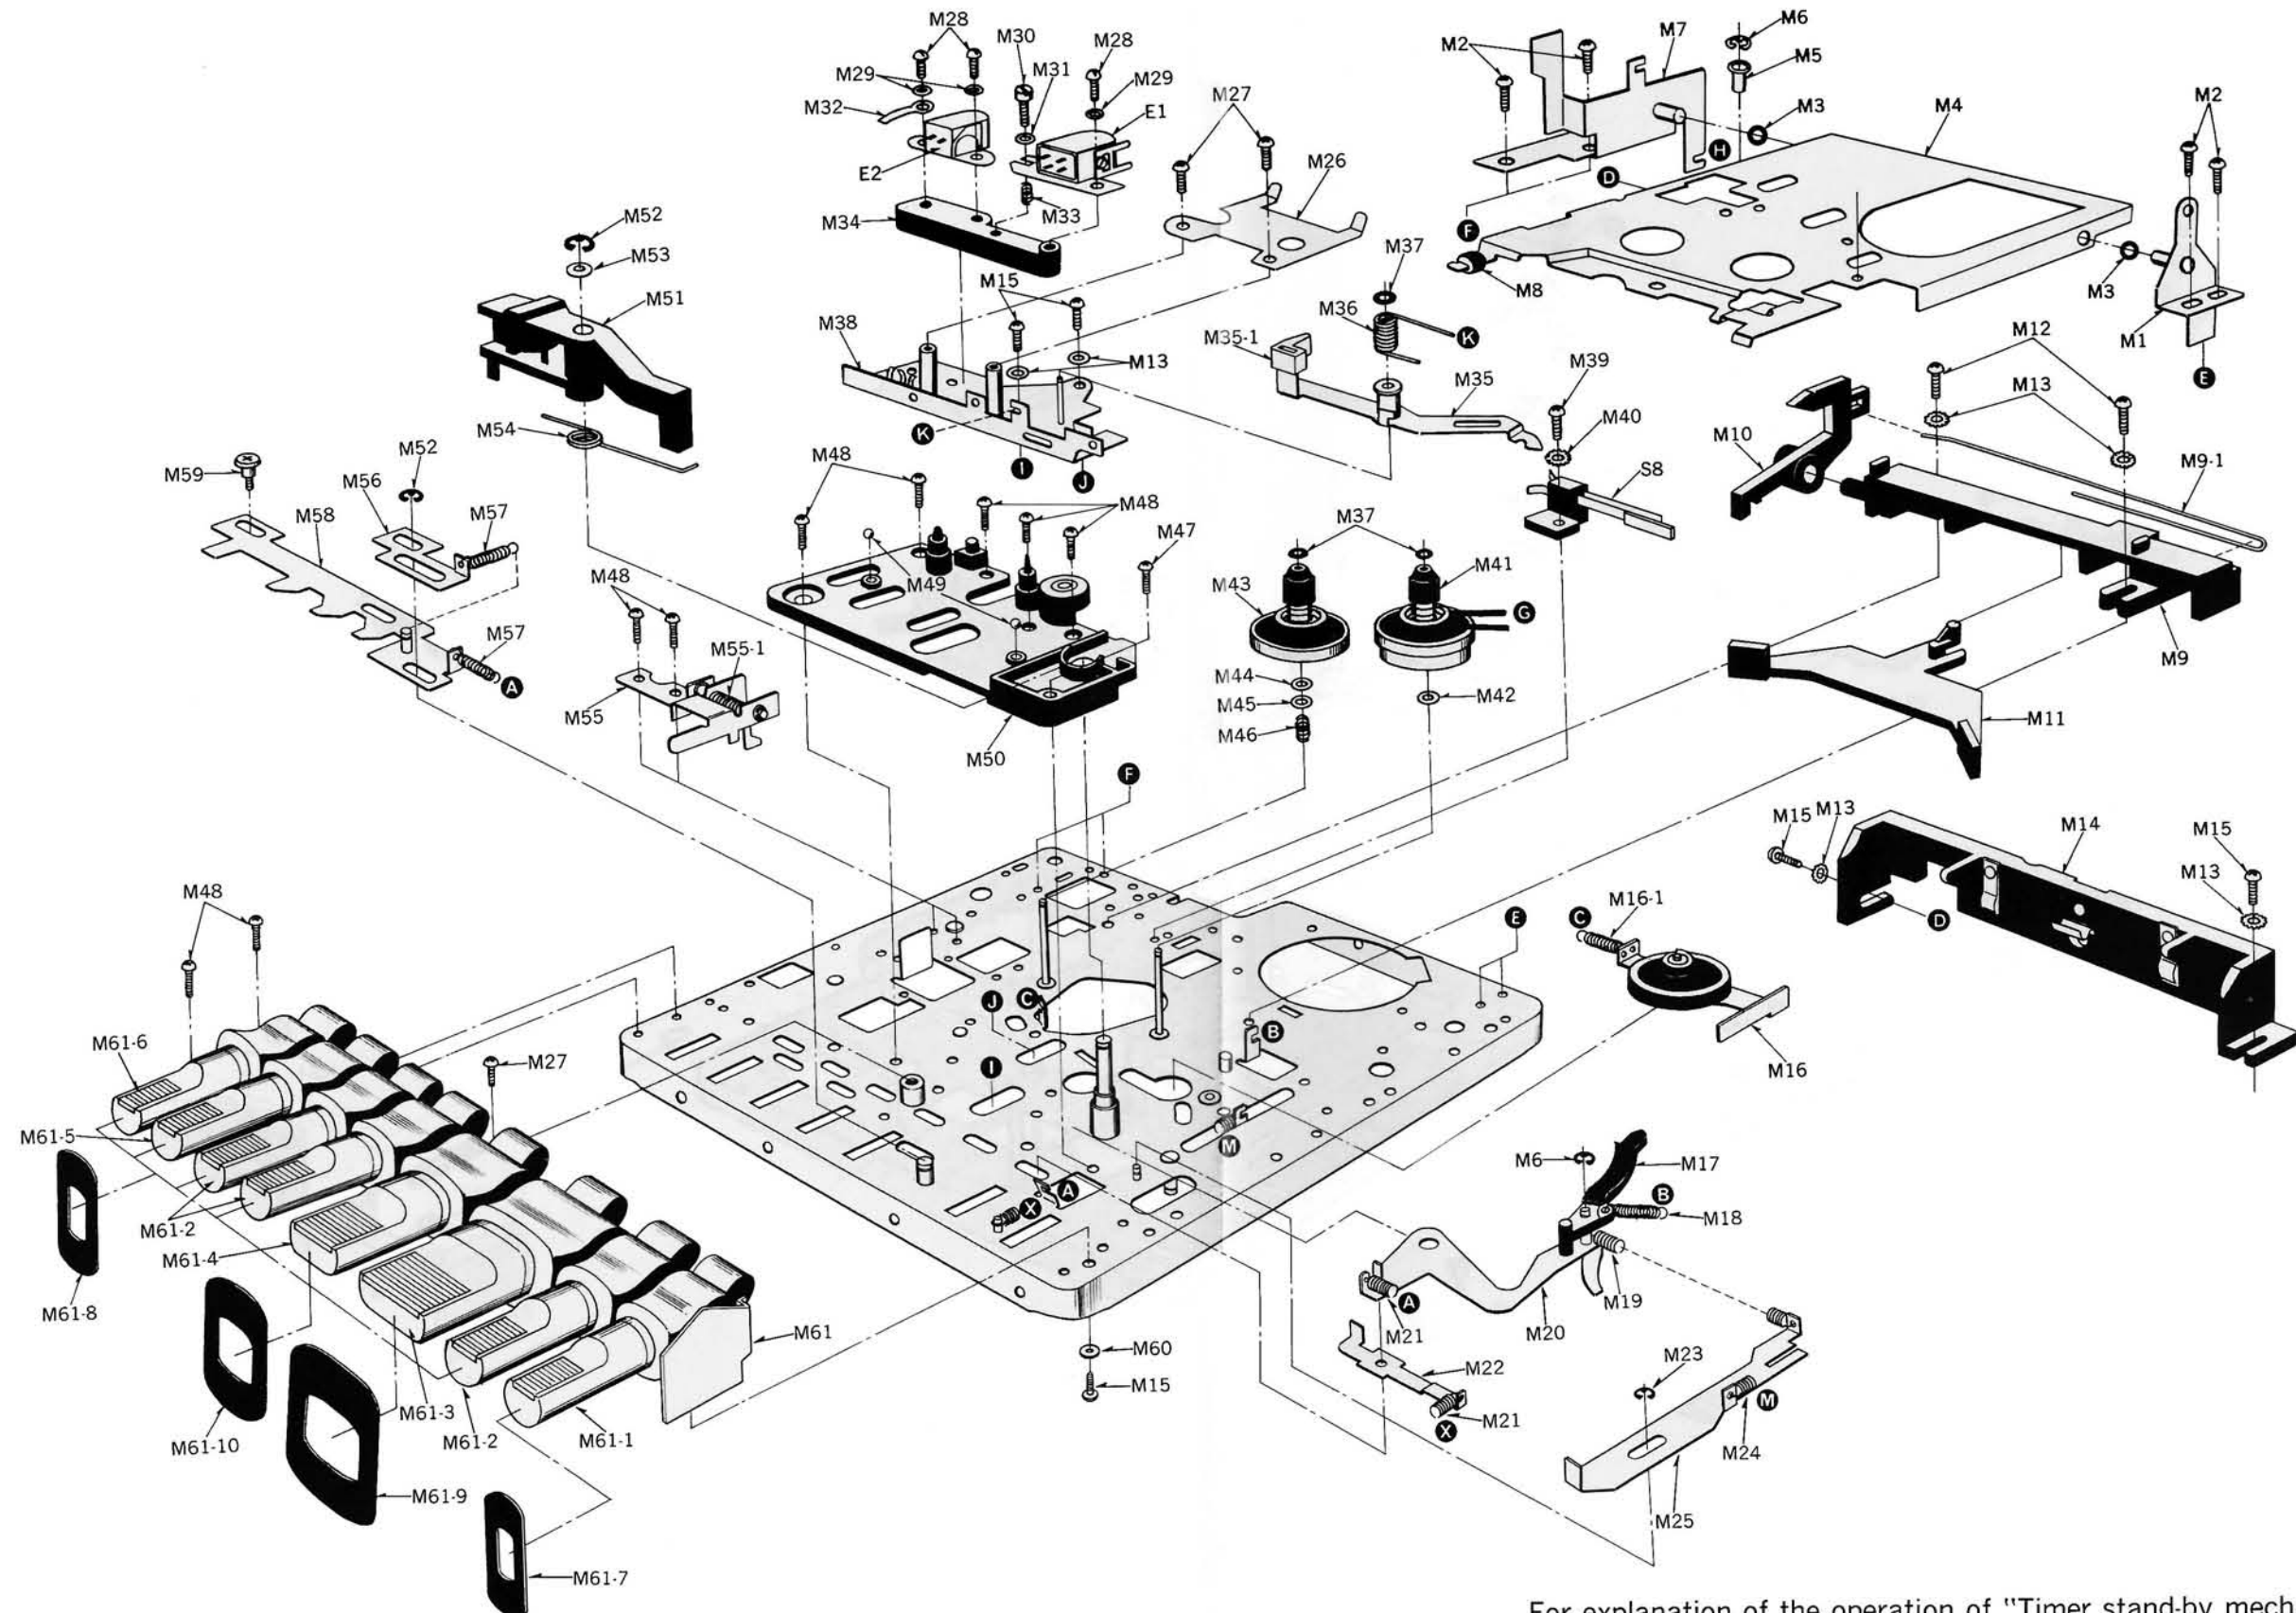

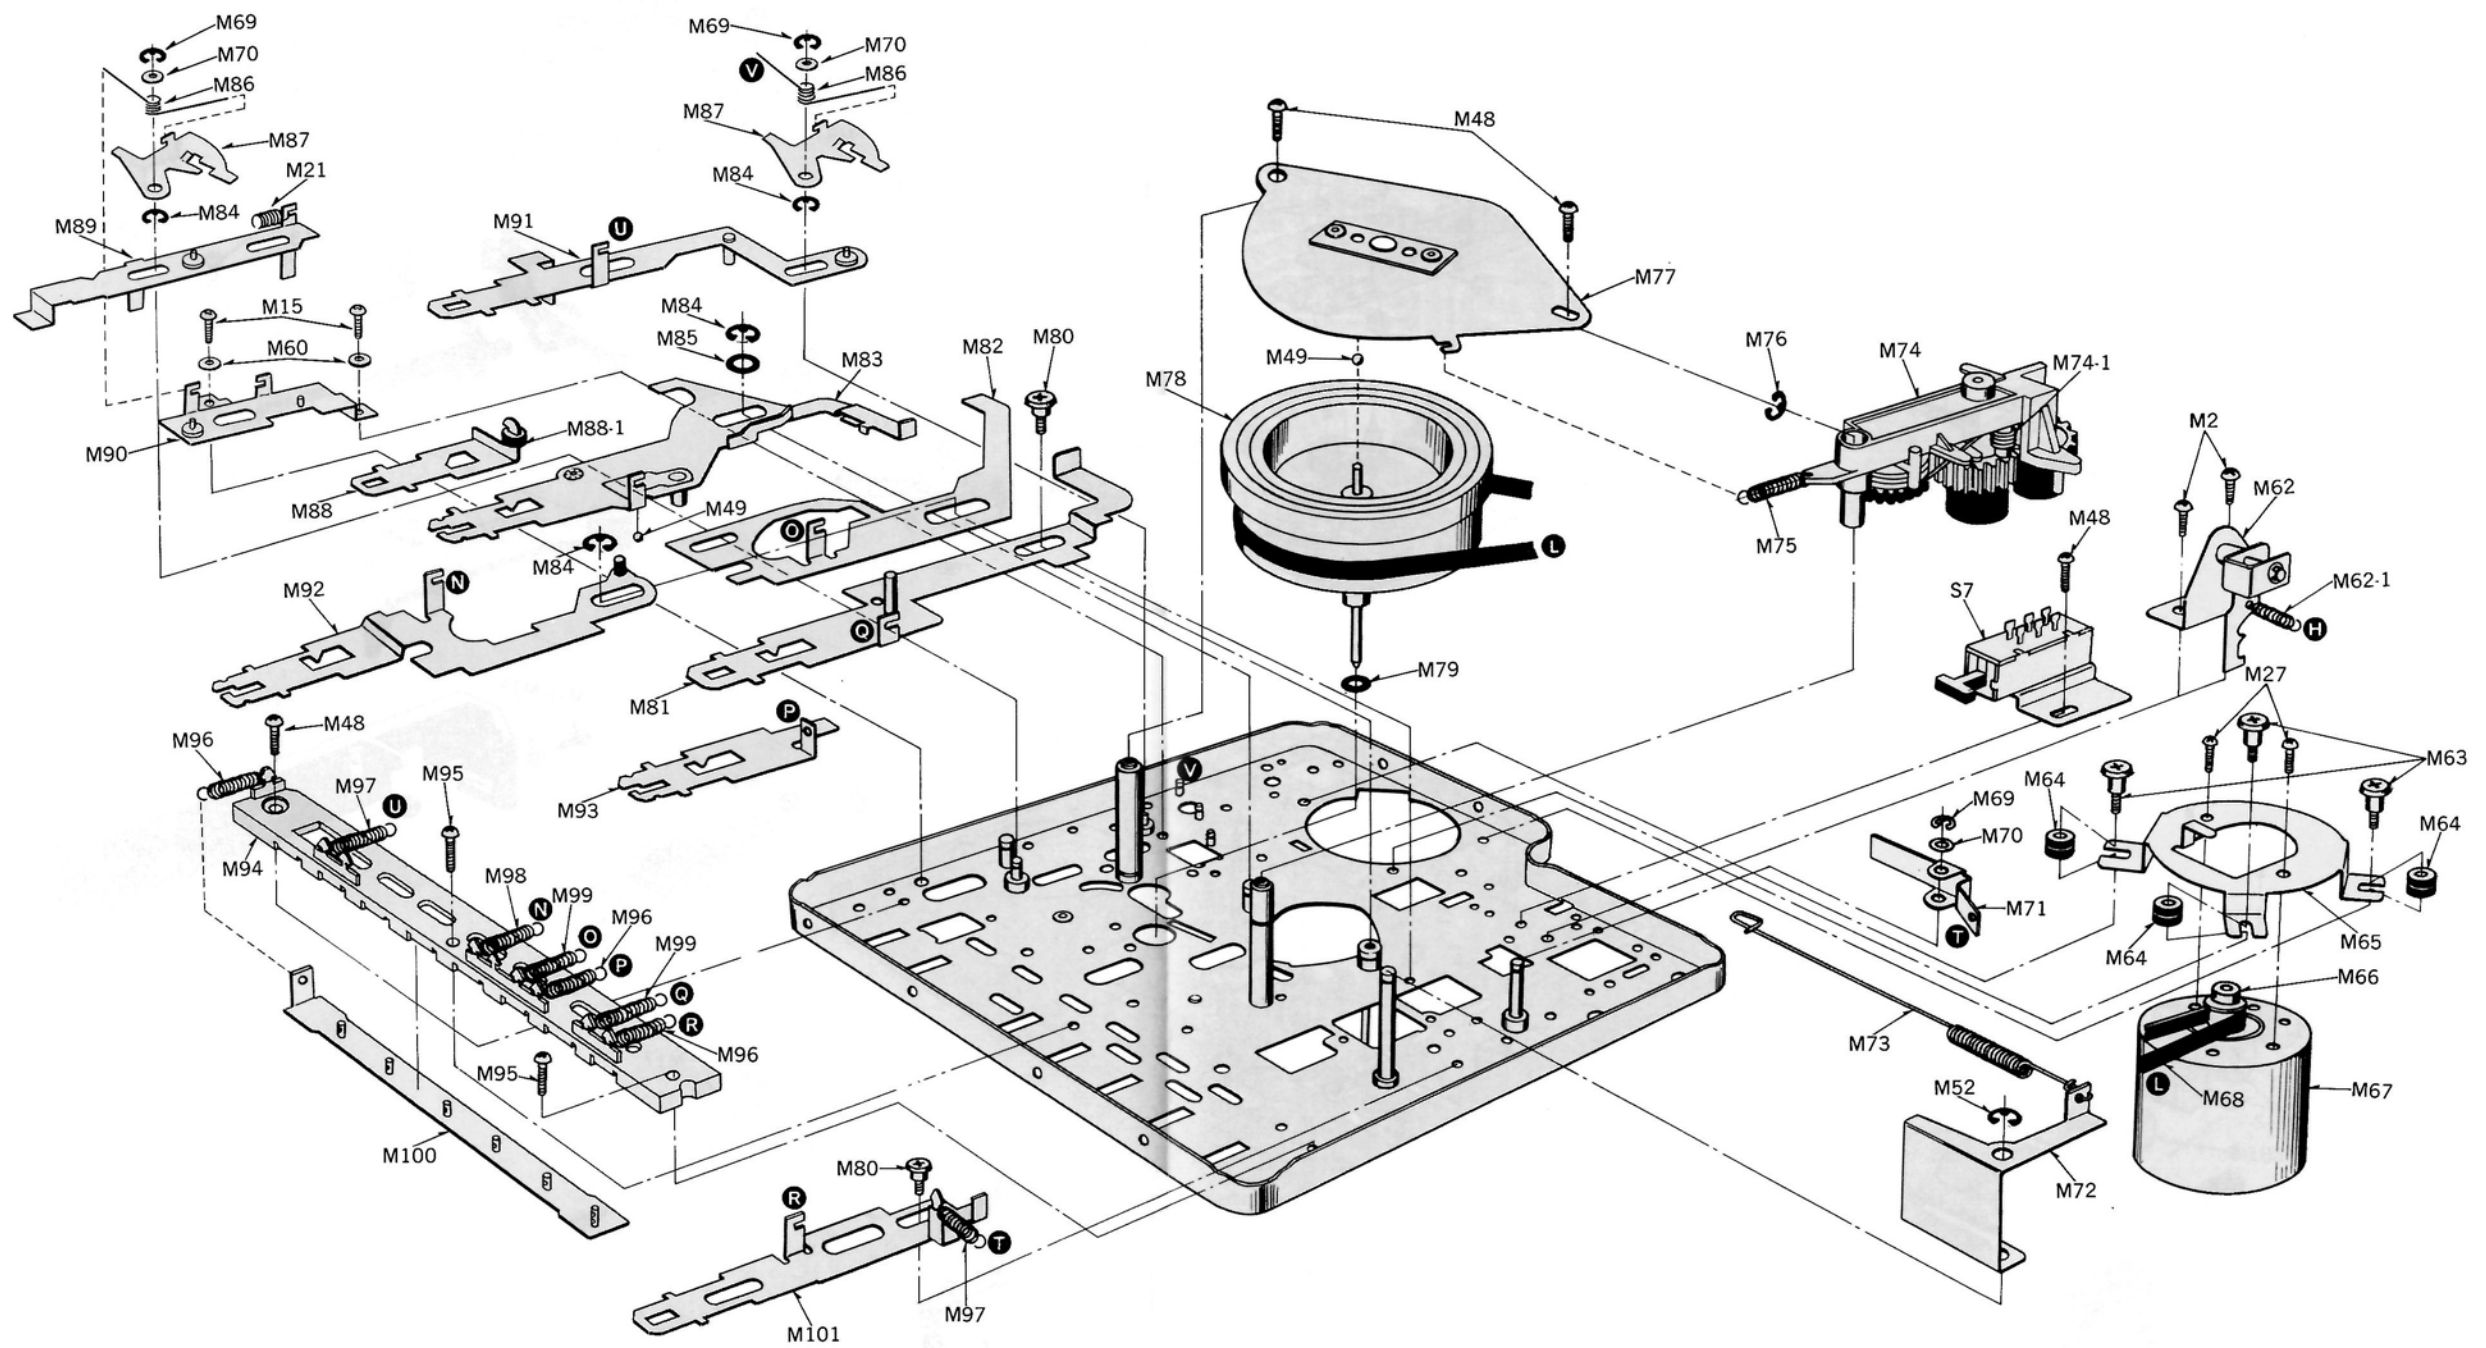
※ For explanation of the operation of "Timer stand-by mechanism", refer to the service manual of RS-615US.



CABINET PARTS

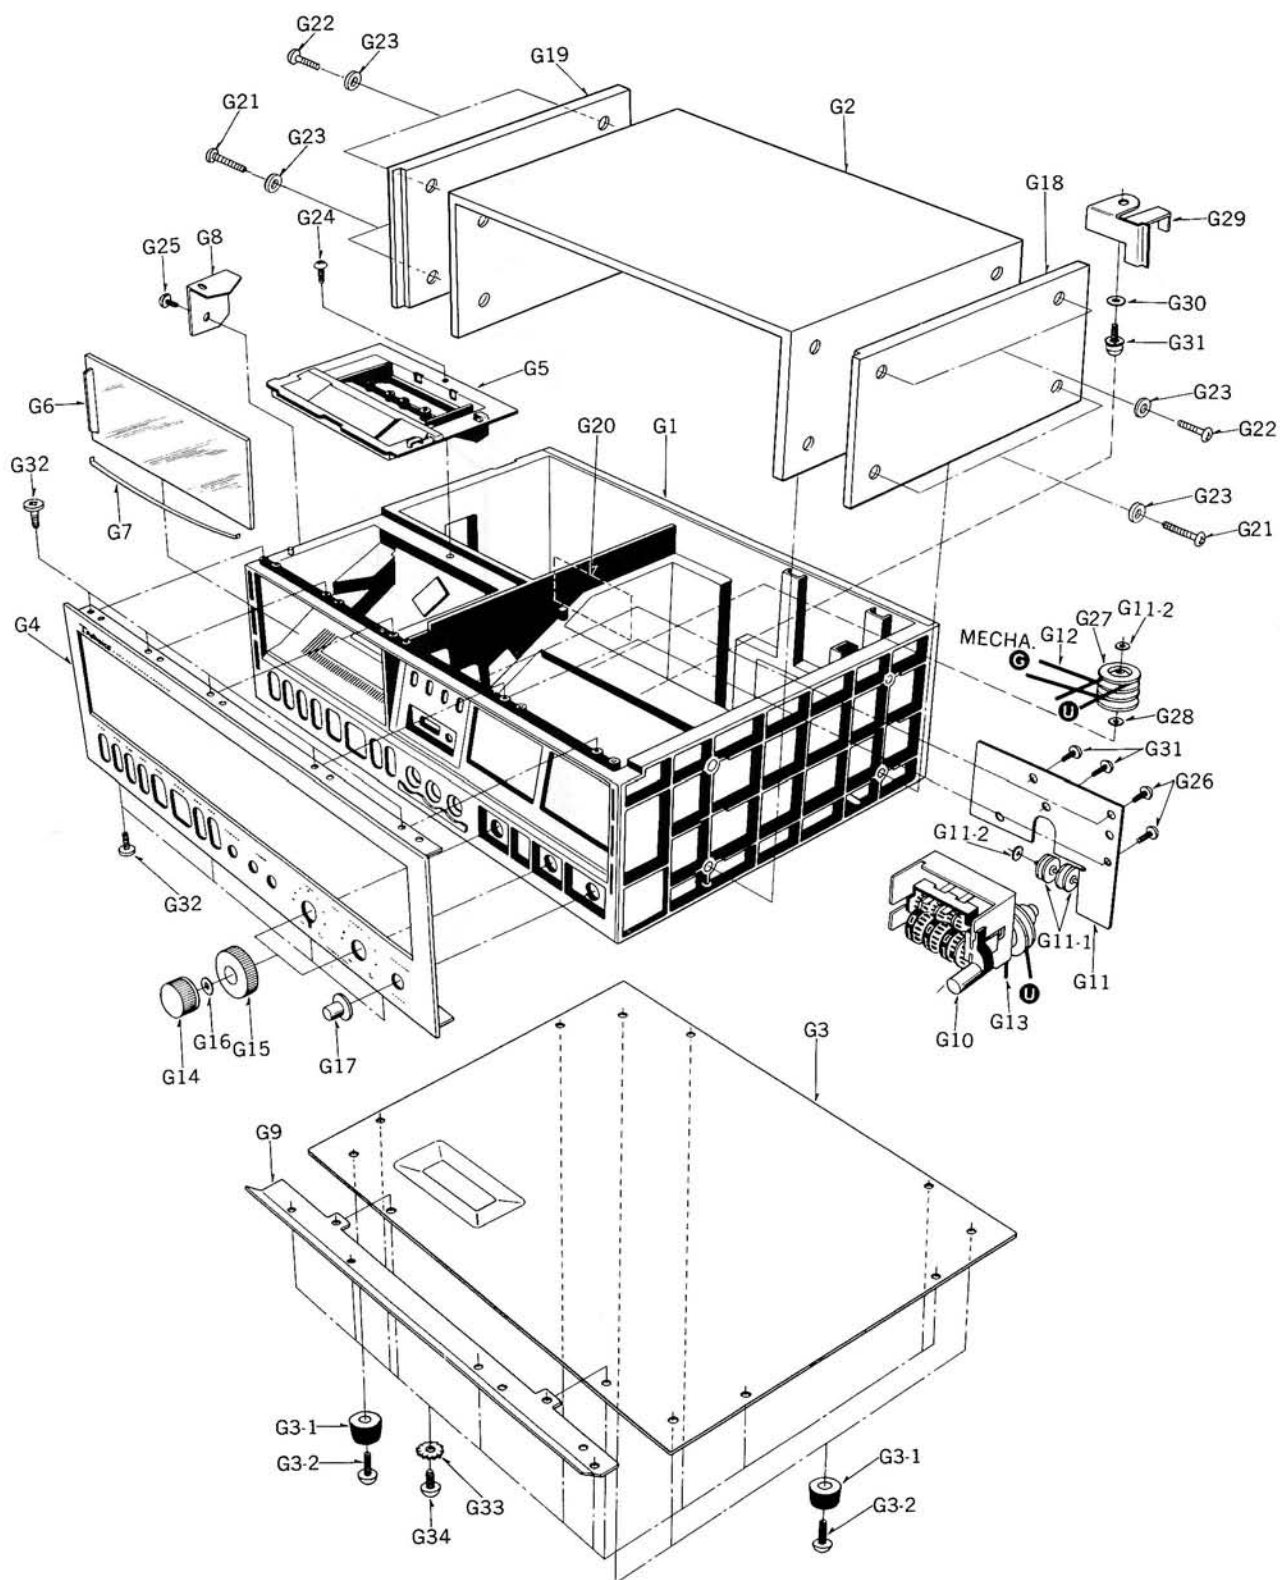

COMPONENT PACKING

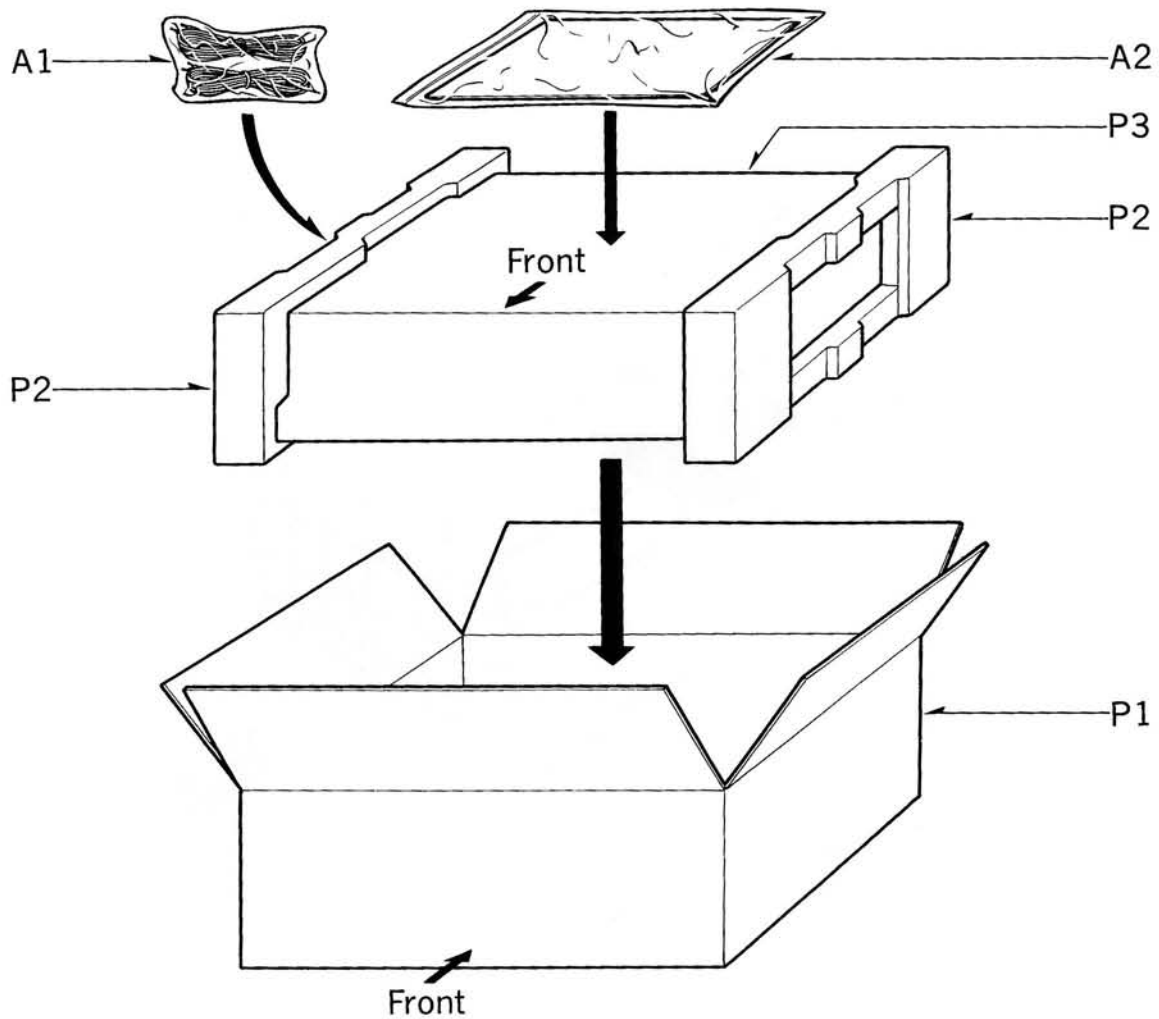

PACKINGS

P1	QPNM0012	Inside Carton
P2	QPAM0010	Inner Cushion
P3	XZB50X60A05	Dust Cover

REPLACEMENT PARTS LIST

MODEL RS-630TUS **Technics**
by Panasonic

ATTENTION:

Important safety notice.

Components identified by shaded area have special characteristics important for safety. When replacing any of these components use only manufacturer's specified parts.



RS-630TUS

Ref. No.	Part No.	Part Name & Description	Pcs/Set	Remarks
		MECHANICAL PARTS		
M1	QXA0292	Cassette Base Plate Holding Angle	1	RS-671US
M2	XTN3+8B	Tapping Screw $\oplus 3 \times 8$	6	COMMON
M3	QBW2019	Washer	2	RQ-218S
M4	QXK1713	Cassette Base Plate Assembly	1	RS-630US
M5	QDP1595	Roller	1	RS-671US
M6	XUC25FT	Stop Ring 2.5 ϕ	2	COMMON
M7	QXA0465	Cassette Base Plate Holding Angle	1	RS-630US
M8	QBG1132	Cushion Rubber	1	"
M9	QXT0004	Brake Holder	1	"
M9-1	QBN1486	Brake Spring	1	"
M10	QBJ1975B	Erase Safety Lever-B	1	RS-610US
M11	QBJ1941A	Brake	1	RS-260US
M12	XSN26+8	Screw $\oplus 2.6 \times 8$	2	COMMON
M13	XWC26B	Lock Washer	4	"
M14	QXZ0044	Cassette Retainer Assembly	1	RS-630US
M15	XSN26+6	Screw $\oplus 2.6 \times 6$	2	COMMON
M16	QXLM008	Idler Lever Assembly	1	RS-263AUS
M16-1	QBT1558M	Idler Spring	1	"
M17	QML3061	Auto-Stop Driving Pawl	1	
M18	QBT1489M	Auto-Stop Spring	1	RS-630US
M19	QBT1822M	Eject Lever Spring	1	
M20	QXL1046	Auto-Stop Driving Lever Assembly	1	
M21	QBT1558	Idler Spring	2	RS-630US
M22	QML3057	Timer Lever-A	1	
M23	XUC3FT	Stop Ring 3 ϕ	1	COMMON
M24	QBT1536DM	Playback Lever Spring	1	RS-630US

RS-630TUS

Ref. No.	Part No.	Part Name & Description	Pcs/Set	Remarks
M25	QML3058	Timer Lever-B	1	
M26	QMF1814	Cassette Holder	1	RS-630US
M27	XSN26+3	Screw $\oplus 2.6 \times 3$	3	COMMON
M28	XSN2+12	Screw $\oplus 2 \times 12$	3	"
M29	XWA2B	Spring Washer	3	"
M30	QHQ1199A	Screw for Head Adjustment	1	"
M31	XWE2	Flat Washer 2 ϕ	1	"
M32	QTD1163	Cord Clamper	1	RQ-317S
M33	QBC1103A	Head Spring	1	RS-610US
M34	QBJ2087A	Head Spacer	1	"
M35	QXL1048	Auto-Stop Detecting Lever Assembly	1	"
M35-1	QBJ1538A	Auto-Stop Detecting Piece	1	RS-630US
M36	QBN1390	Auto-Stop Detecting Lever Spring	1	RS-610US
M37	QWQ1124	Snap Washer	3	RS-630US
M38	QXK1717	Head Base Plate Assembly	1	"
M39	XSN2+5	Screw $\oplus 2 \times 5$	1	COMMON
M40	XWC2B	Lock Washer 2 ϕ	1	"
M41	QXD0050	Takeup Reel Table Assembly	1	RS-630US
M42	QBJ3220	Washer	1	RQ-309AS
M43	QXD0034	Supply Reel Table Assembly	1	RS-630US
M44	QBW2013	Washer	1	RS-263AUS
M45	QBW2012	"	1	RQ-317S
M46	QBC1272	Back Tension Spring	1	RS-671US
M47	XYN26+C10	Screw with Washer $\oplus 2.6 \times 10$	3	COMMON
M48	XYN26+C6	Screw with Washer $\oplus 2.6 \times 6$	19	"
M49	QDK1012	Steel Ball 2.5 ϕ	4	RS-630US
M50	QXK1716	Upper Base Plate Assembly	1	"
M51	QXLM010	Pressure Roller Assembly	1	RS-610US
M52	XUC3FT	Stop Ring 3 ϕ	3	COMMON
M53	QBW2018	Washer	1	RS-671US
M54	QBN1389	Pressure Roller Spring	1	RS-610US
M55	QXL0991	Up Lever Assembly	1	RS-630US
M55-1	QBN1485	Up Lever Spring	1	"
M56	QMR1411	Operation Lever-C	1	RS-610US
M57	QBT1558M	Idler Spring	1	"

RS-630TUS

Ref. No.	Part No.	Part Name & Description	Pcs/ Set	Remarks
M58	QXR0179	Operation Rod Assembly	1	RS-630US
M59	QHQ1169	Step Screw	1	RS-620US
M60	XWA26B	Washer	1	COMMON
M61	QXB0445A	Push Button Assembly	1	
M61-1	QXB0483	Push Button (TIMER)	1	
M61-2	QXB0478	Push Button (REW, FF, PAUSE)	3	
M61-3	QXB0479	Push Button (STOP)	1	
M61-4	QXB0480	Push Button (PLAY)	1	
M61-5	QXB0481	Push Button (RECORD)	1	
M61-6	QXB0482	Push Button (EJECT)	1	
M61-7	QBG1566	Push Button Cover	1	
M61-8	QBG1541	"	5	RS-630US
M61-9	QBG1543	"	1	"
M61-10	QBG1542	"	1	"
M62	QXL0990	Click Lever Assembly	1	"
M62-1	QBT1817	Click Lever Spring	1	"
M63	QMS1833	Step Screw	3	RS-610US
M64	QBG1055A	Motor Rubber Cushion	3	"
M65	QMA1952A	Motor Angle	1	RS-260US
M66	QXP0347B	Motor Pulley Assembly	1	RS-263AUS
M66-1	XSN2+3	Screw $\oplus 2 \times 3$	1	COMMON
M67	QDM0981XPRB	Motor	1	RS-263AUS
M68	QDB0141	Capstan Belt	1	"
M69	XUC2FT	Stop Ring 2 ϕ	3	COMMON
M70	QBK7121	Fiber Washer	3	RS-610US
M71	QML2712	Eject Operation Lever	1	RS-630US
M72	QML2950	Record/Playback Lever	1	"
M73	QBT1818	Record/Playback Spring	1	"
M74	QXG1014E	Fast Wind Lever Assembly	1	RQ-309AS
M74-1	QBN1447A	Gear Lever Spring	1	RS-263AUS
M75	QBT1485M	Fast Forward Lever Spring	1	RS-610US
M76	XUC4FT	Stop Ring 4 ϕ	1	COMMON
M77	QXH0095B	Flywheel Retainer	1	RS-610US
M78	QXF0115	Flywheel Assembly	1	RS-630US
M79	QBJ3221	Washer	1	RQ-301AS

RS-630TUS

Ref. No.	Part No.	Part Name & Description	Pcs/ Set	Remarks
M80	QHQ1168	Step Screw	2	RS-610US
M81	QXL0828	Record Lever Assembly	1	"
M82	QMR1307A	Fast Forward Lever Assembly	1	RS-260US
M83	QXRM0002A	Playback Lever Assembly	1	RS-610US
M84	XUC5FT	Stop Ring 5 ϕ	3	COMMON
M85	QBK7130A	Fiber Washer	1	RS-630US
M86	QBN1271	Lock Spring	2	"
M87	QML2379B	Lock Plate	2	"
M88	QXR0241	Stop Rod Assembly	1	"
M88-1	QBG1497A	Brake Rubber	1	RS-260US
M89	QXL1044	Timer Lever Assembly	1	
M90	QXA0547	Timer Angle Assembly	1	
M91	QXR0268	Pause Lever Assembly	1	
M92	QXR0002B	Fast Forward Rod Assembly	1	RS-630US
M93	QML1953A	Rewind Lever	1	"
M94	QGG0050	Lever Guide	1	RS-610US
M95	XYN26+C10	Screw $\oplus 2.6 \times 10$	2	COMMON
M96	QBT1580M	Stop Lever Spring	3	RS-610US
M97	QBT1604M	Eject Lever-C Spring	2	"
M98	QBT1536DMA	Playback Lever Spring	1	RS-460S
M99	QBT1486DM	Record Lever Spring	2	RS-610US
M100	QXH0227	Push Button Lock Plate	1	"
M101	QMR1446	Eject Rod	1	
RESISTORS				
R1, 2	ERD25TJ100	Carbon Resistor 10 Ω 1/4W	2	
R3, 4	ERD25TJ103	" 10K Ω 1/4W	2	
R5, 6	ERD25TJ222	" 2.2K Ω 1/4W	2	
R9, 10	ERD25TJ101	" 100 Ω 1/4W	2	
R11, 12	ERD25TJ560	" 56 Ω 1/4W	2	
R13, 14	ERD25TJ101	" 100 Ω 1/4W	2	
R15, 16	ERD25TJ822	" 8.2K Ω 1/4W	2	
R17, 18, 19, 20	ERD25TJ104	" 100K Ω 1/4W	4	
R21, 22	ERD25TJ821	" 820 Ω 1/4W	2	
R23, 24, 25, 26	ERD25TJ472	" 4.7K Ω 1/4W	4	

RS-630TUS

RS-630TUS

Ref. No.	Part No.	Part Name & Description	Pcs/ Set	Remarks
R27, 28	ERD25TJ562	Carbon Resistor 5.6K Ω 1/4W	2	
R29, 30	ERD25TJ683	" 68K Ω 1/4W	2	
R31, 32	ERD25TJ562	" 5.6K Ω 1/4W	2	
R33, 34	ERD25TJ473	" 47K Ω 1/4W	2	
R35, 36	ERD25TJ152	" 1.5K Ω 1/4W	2	
R37, 38	ERD25TJ183	" 18K Ω 1/4W	2	
R39, 40	ERD25TJ473	" 47K Ω 1/4W	2	
R41, 42	ERD25TJ224	" 220K Ω 1/4W	2	
R43, 44	ERD25TJ391	" 390 Ω 1/4W	2	
R45, 46	ERD25TJ103	" 10K Ω 1/4W	2	
R47, 48	ERD25TJ824	" 820K Ω 1/4W	2	
R49, 50	ERD25TJ683	" 68K Ω 1/4W	2	
R51, 52	ERD25TJ563	" 56K Ω 1/4W	2	
R53, 54	ERD25TJ183	" 18K Ω 1/4W	2	
R55, 56	ERD25TJ682	" 6.8K Ω 1/4W	2	
R57, 58	ERD25TJ272	" 2.7K Ω 1/4W	2	
R59, 60	ERD25TJ333	" 33K Ω 1/4W	2	
R61, 62	ERD25TJ823	" 82K Ω 1/4W	2	
R63, 64	ERD25TJ124	" 120K Ω 1/4W	2	
R65, 66	ERD25TJ153	" 15K Ω 1/4W	2	
R67, 68	ERD25TJ124	" 120K Ω 1/4W	2	
R69, 70	ERD25TJ153	" 15K Ω 1/4W	2	
R71, 72	ERD25TJ561	" 560 Ω 1/4W	2	
R73, 74	ERD25TJ272	" 2.7K Ω 1/4W	2	
R75, 76	ERD25TJ153	" 15K Ω 1/4W	2	
R77, 78	ERD25TJ333	" 33K Ω 1/4W	2	
R79, 80	ERD25TJ274	" 270K Ω 1/4W	2	
R81, 82	ERD25TJ473	" 47K Ω 1/4W	2	
R83, 84	ERD25TJ332	" 3.3K Ω 1/4W	2	
R85, 86	ERD25TJ682	" 6.8K Ω 1/4W	2	
R87, 88	ERD25TJ122	" 1.2K Ω 1/4W	2	
R89, 90	ERD25TJ221	" 220 Ω 1/4W	2	
R91, 92	ERD25TJ684	" 680K Ω 1/4W	2	
R93	ERD25TJ222	" 2.2K Ω 1/4W	1	
R95, 96	ERD25TJ153	" 15K Ω 1/4W	2	

Ref. No.	Part No.	Part Name & Description	Pcs/ Set	Remarks
R97, 98	ERD25TJ822	Carbon Resistor 8.2K Ω 1/4W	2	
R99, 100	ERD25TJ103	" 10K Ω 1/4W	2	
R101, 102, 103, 104				
	ERD25TJ822	" 8.2K Ω 1/4W	4	
R105, 106	ERD25TJ333	" 33K Ω 1/4W	2	
R107, 108	ERD25TJ473	" 47K Ω 1/4W	2	
R109, 110	ERD25TJ124	" 120K Ω 1/4W	2	
R111, 112	ERD25TJ330	" 33 Ω 1/4W	2	
R113, 114	ERD25TJ102	" 1K Ω 1/4W	2	
R115, 116	ERD25TJ272	" 2.7K Ω 1/4W	2	
R117, 118	ERD25TJ470	" 47 Ω 1/4W	2	
R119, 120	ERD25TJ153	" 15K Ω 1/4W	2	
R121, 122, 123, 124				
	ERD25TJ274	" 270K Ω 1/4W	4	
R125, 126	ERD25TJ224	" 220K Ω 1/4W	2	
R128	ERD25TJ102	" 1K Ω 1/4W	1	
R129, 130	ERD25TJ823	" 82K Ω 1/4W	2	
R131, 132	ERD50TJ561	" 560 Ω 1/4W	2	
R133, 134	ERD25TJ472	" 4.7K Ω 1/4W	2	
R135	ERD25TJ123	" 12K Ω 1/4W	1	
R137, 138	ERD25TJ183	" 18K Ω 1/4W	2	
R139, 140	ERD25TJ104	" 100K Ω 1/4W	2	
R141, 142	ERD25TJ392	" 3.9K Ω 1/4W	2	
R143, 144	ERD25TJ681	" 680 Ω 1/4W	2	
R145, 146	ERD25TJ272	" 2.7K Ω 1/4W	2	
R147, 148	ERD25TJ474	" 470K Ω 1/4W	2	
R149, 150	ERD25TJ152	" 1.5K Ω 1/4W	2	
R151, 152	ERD25TJ391	" 390 Ω 1/4W	2	
R153, 154	ERD25TJ270	" 27 Ω 1/4W	2	
R155, 156	ERD25TJ682	" 6.8K Ω 1/4W	2	
R157	ERD25TJ562	" 5.6K Ω 1/4W	1	
R161, 162	ERD25TJ101	" 100 Ω 1/4W	2	
R201, 202	ERD25TJ8R2	" 8.2 Ω 1/4W	2	
R203, 204	ERD25TJ100	" 10 Ω 1/4W	2	
R205, 206	ERD25TJ104	" 100K Ω 1/4W	2	

RS-630TUS

Ref. No.	Part No.	Part Name & Description	Pcs/ Set	Remarks
R207	ERD50TJ151	" 150Ω 1/2W	1	
R208	ERD50TJ121	Carbon Resistor 120Ω 1/2W	1	
R209	ERD50TJ100	" 10Ω 1/2W	1	
R210, 211	ERD25TJ102	" 1KΩ 1/4W	2	
R213	ERD25TJ123	" 12KΩ 1/4W	1	
		<u>VARIABLE RESISTORS</u>		
VR1, 2	EVLS3AA00B14	Semi-fixed Variable Resistor 10KΩ (B)	2	RS-610US
VR3, 4	EVLS3AA00B24	" 20KΩ (B)	2	"
VR5, 6	EWKN5AR20A54	Variable Resistor 50KΩ (A)	1	RS-671US
VR7, 8	EVLS3AA00B53	Semi-fixed Variable Resistor 5KΩ (B)	2	"
VR9, 10	EVLS3AA00B52	" 500Ω (B)	2	"
VR11, 12	EWKN5AR20A14	Variable Resistor 10KΩ (A)	1	RS-630US
VR13, 14, 15, 16	EVLS3AA00B24	Semi-fixed Variable Resistor 20KΩ (B)	4	RS-610US
VR18	EVLS3AA00B14	" 10KΩ (B)	1	"
		<u>CAPACITORS</u>		
C1, 2	ECKD1H821KB	Ceramic Capacitor 820pF	2	
C3, 4	ECEA16Z10	Electrolytic Capacitor 10μF	2	
C5, 6	ECKD1H102KB	Ceramic Capacitor 1000pF	2	
C7, 8	ECEA16V47	Electrolytic Capacitor 47μF	2	
C9, 10	ECEA16V10	" 10μF	2	
C11, 12	ECCD1H101K	Ceramic Capacitor 100pF	2	
C13, 14	ECEA16Z10	Electrolytic Capacitor 10μF	2	
C15, 16	ECQM05123KZ	Mylar Capacitor 0.012μF	2	
C17, 18	ECKD1H102KB	Ceramic Capacitor 1000pF	2	
C19, 20	ECQM05273KZ	Mylar Capacitor 0.027μF	2	
C21, 22	ECKD1H102KB	Ceramic Capacitor 0.001μF	2	
C23, 24	ECEA25V100	Electrolytic Capacitor 100μF	2	
C25, 26	ECEA50Z3R3	" 3.3μF	2	
C27, 28	ECEA16V10	" 10μF	2	
C29, 30	ECEA50V3R3	" 3.3μF	2	
C31, 32	ECQM05122KZ	Mylar Capacitor 0.0012μF	2	
C33, 34	ECKD1H151KB	Ceramic Capacitor 150pF	2	
C35, 36	ECEA25V220	Electrolytic Capacitor 220μF	2	

RS-630TUS

Ref. No.	Part No.	Part Name & Description	Pcs/ Set	Remarks
C37, 38, 39, 40, 41, 42				
	ECEA16V10	Electrolytic Capacitor 10μF	6	
C43, 44	ECQM05562JZ	Mylar Capacitor 0.0056μF	2	
C45, 46	ECQM05273JZ	" 0.027μF	2	
C47, 48	ECQM05472JZ	" 0.0047μF	2	
C49, 50	ECEA16V10	Electrolytic Capacitor 10μF	2	
C51, 52	ECQM05104KZ	Mylar Capacitor 0.1μF	2	
C53, 54	ECEA16V47	Electrolytic Capacitor 47μF	2	
C57, 58	ECQM05104KZ	Mylar Capacitor 0.1μF	2	
C59, 60	ECEA16V10	Electrolytic Capacitor 10μF	2	
C61, 62	ECQM05104KZ	Mylar Capacitor 0.1μF	2	
C63, 64	ECEA16V10	Electrolytic Capacitor 10μF	2	
C65, 66	ECQM05104KZ	Mylar Capacitor 0.1μF	2	
C67, 68	ECEA50Z3R3	Electrolytic Capacitor 0.33μF	2	
C69	ECEA25V100	" 100μF	1	
C71, 72	ECEB35V4R7	" 4.7μF	2	
C73, 74	ECEA16V33	" 33μF	2	
C76	ECEA6V330	" 330μF	1	
C77, 78	ECEA16V10	" 10μF	2	
C79, 80	ECEA50V3R3	" 3.3μF	2	
C81, 82	ECEA50Z3R3	" 0.33μF	2	
C83, 84	ECEA16V47	" 47μF	2	
C85, 86	ECQM05563KZ	Mylar Capacitor 0.056μF	2	
C87, 88	ECQM05153KZ	" 0.015μF	2	
C89, 90	ECQM05393KZ	" 0.039μF	2	
C91, 92	ECEB35V4R7	Electrolytic Capacitor 4.7μF	2	
C93, 94	ECQM05222KZ	Mylar Capacitor 0.0022μF	2	
C95, 96	ECQM05182KZ	" 0.0018μF	2	
C97, 98	ECQS1271KZ	Styrol Capacitor 270pF	2	
C99, 100	ECEA16V47	Electrolytic Capacitor 47μF	2	
C101, 102	ECKD1H102KB	Ceramic Capacitor 1000pF	2	
C201, 202	ECKD1H330K	" 33pF	2	
C203	ECQM05223KZ	Mylar Capacitor 0.022μF	1	
C204	ECQM05104KZ	" 0.1μF	1	
C205, 206	ECQM05472KZ	" 0.0047μF	2	

RS-630TUS

Ref. No.	Part No.	Part Name & Description	Pcs/ Set	Remarks
C207	ECQM05333KZ	Mylar Capacitor 0.033μF	1	
C208	ECEA25V100	Electrolytic Capacitor 100μF	1	
C209	ECKD1H102KB	Ceramic Capacitor 1000pF	1	
C210, 211	ECEA25V220	Electrolytic Capacitor 220μF	2	
C212	ECEA25V1000	" 1000μF	1	
C213	ECEA16V1000	" 1000μF	1	
C214	ECKD1H102KB	Ceramic Capacitor 1000pF	1	
C216	ECEA25V100	Electrolytic Capacitor 100μF	1	
C217	ECEA50V3R3	" 3.3μF	1	
		<u>COMBINATION PART</u>		
Z1	ECQJ0187A	Spark Killer	1	RQ-630US
		<u>TRANSISTORS</u>		
Tr1, 2, 3, 4	2SC1327	Transistor	4	RS-610US
Tr5, 6	2SC644	"	2	"
Tr7, 8, 9, 10, 11, 12, 13, 14, 15, 16				
	2SC828	"	10	"
Tr17, 18	2SA564	"	2	"
Tr19, 20	2SC828	"	2	"
Tr21, 22	2SC1318	"	2	RS-676US
Tr23, 24, 25, 26, 27, 28, 29, 30				
	2SC828	"	8	"
Tr31, 32	2SK30AD	FET	2	"
Tr201, 202, 203				
	2SC1347	Transistor	3	RS-610US
		<u>DIODES & RECTIFIERS</u>		
D1, 2	OA90Z	Diode	2	COMMON
D3	EQA0108S	"	1	RS-263AUS
D5, 6, 7, 8	1S1211	"	4	RS-610US
D9, 10	OA90Z	"	2	COMMON
D11, 12	1S1211	"	2	RS-610US
D14	OA90Z	"	1	COMMON
D201, 202	SIB0102	Rectifier	2	RS-630US

RS-630TUS

Ref. No.	Part No.	Part Name & Description	Pcs/ Set	Remarks
		<u>TRANSFORMERS</u>		
T1, 2	QLT2D10A	Output Transformer	2	RS-671US
T201	QLB0158	Oscillator Transformer	1	"
T202	QLPP7ELEU	Power Transformer	1	RS-630US
		<u>COILS</u>		
L1, 2	QLM9Z002W	MPX Filter Coil	2	RS-630US
L3, 4	QLQX0331W	Peaking Coil	2	RS-671US
L5, 6	QLQX1032W	Bias Trap Coil	2	RS-610US
		<u>JACKS</u>		
J1, 2, 5, 6	Refer to E12	(Interlocked with Jack Board)	(1)	
J3, 4	QJA0237	Microphone Jack	2	RS-676US
J7	QJA0238	Headphone Jack	1	"
		<u>SWITCHES</u>		
S1, 2	QSS1120	Slide Switch (Record/Playback Selector)	1	RS-282S
S3, 4, 5, 6	QST2210H	Lever Switch (Dolby, Bias, Equalizer, Peak)	4	RS-630US
S7	QSS2209T	Slide Switch (Muting)	1	"
S8	QSB0169M1	Leaf Switch (Motor ON/OFF)	1	RS-610US
S9	ESB1134SU	Push Switch (Power ON/OFF)	1	"
S10	QSS1080	Slide Switch (Input)	1	RS-253S
		<u>ELECTRICAL PARTS</u>		
E1	WY436AD	Record/Playback Head	1	
E2	QWY2118	Erase Head	1	RS-610US
E3	QFC1201M	AC Power Cord	1	RS-275US
E4	XAMR9S	Pilot Lamp	2	RS-671US
E5	QTF1049A	Lamp Holder	2	RS-817S
E6	XAMQ22P200N	Pilot Lamp	1	"
E7	QBG1222	Lamp Cover	1	"
E8	QSL9005LNM	Level Meter	2	RS-630US
E9	QTD1129	Cord Bushing	1	RS-671US
E10	QNQ1051	Jack Nut	3	"