


M. W. TAX

STR-700

AEP Model
UK Model

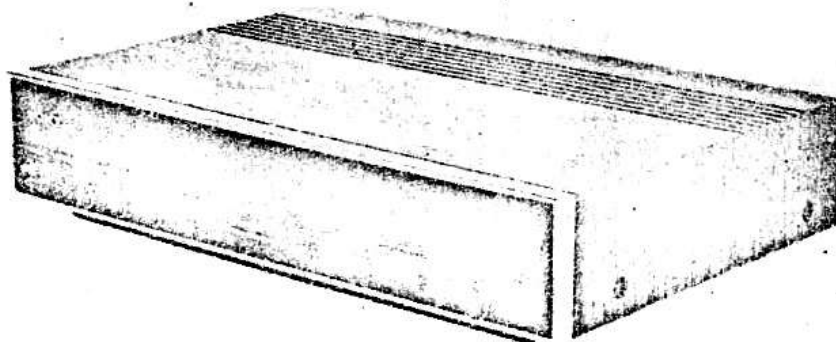

FM STEREO/FM-AM RECEIVER

SPECIFICATIONS

FM TUNER SECTION

Frequency range: 87.5 to 108 MHz
Usable sensitivity: $2.2 \mu\text{V}$ (6.5 dB), S/N = 30 dB
Signal-to-noise ratio: 65 dB
Harmonic distortion: Mono 0.5 % at 400 Hz
Stereo 1.0 % at 400 Hz
Fm-stereo separation: Better than 35 dB

AM TUNER SECTION

Frequency range: MW 530 to 1,605 kHz
LW 150 to 350 kHz
Sensitivity: MW $250 \mu\text{V/m}$ (48 dB/m), built-in antenna
 $20 \mu\text{V}$ (26 dB), external antenna
LW $400 \mu\text{V/m}$ (52 dB/m), built-in antenna
 $180 \mu\text{V}$ (45 dB), external antenna
Signal-to-noise ratio: MW/LW 50 dB
Harmonic distortion: MW/LW 0.8 dB at 400 Hz

AUDIO AMPLIFIER SECTION


Continuous RMS power output: $2 \times 10 \text{ W}$
(THD = 1.0 %, 1 kHz)
Music power output: $2 \times 16 \text{ W}$
(THD = 1.0 %, 1 kHz)
Harmonic distortion: Less than 1.0 % at 1 kHz at continuous RMS power output
Frequency response: TAPE: 70 Hz to 40 kHz at 1-watt output

GENERAL

Power requirements: 110, 127, 220, 240 volts, 50 Hz ac
(AEP Model)
240 volts, 50 Hz ac (UK Model)
Power consumption: 85 watts
Dimensions: 500 (w) x 118 (h) x 346 (d) mm
 $19\frac{3}{4}$ (w) x $4\frac{7}{8}$ (h) x $13\frac{5}{8}$ (d) inches
Net weight: 7.2 kg (15 lb 13 oz)

SONY®


SERVICE MANUAL

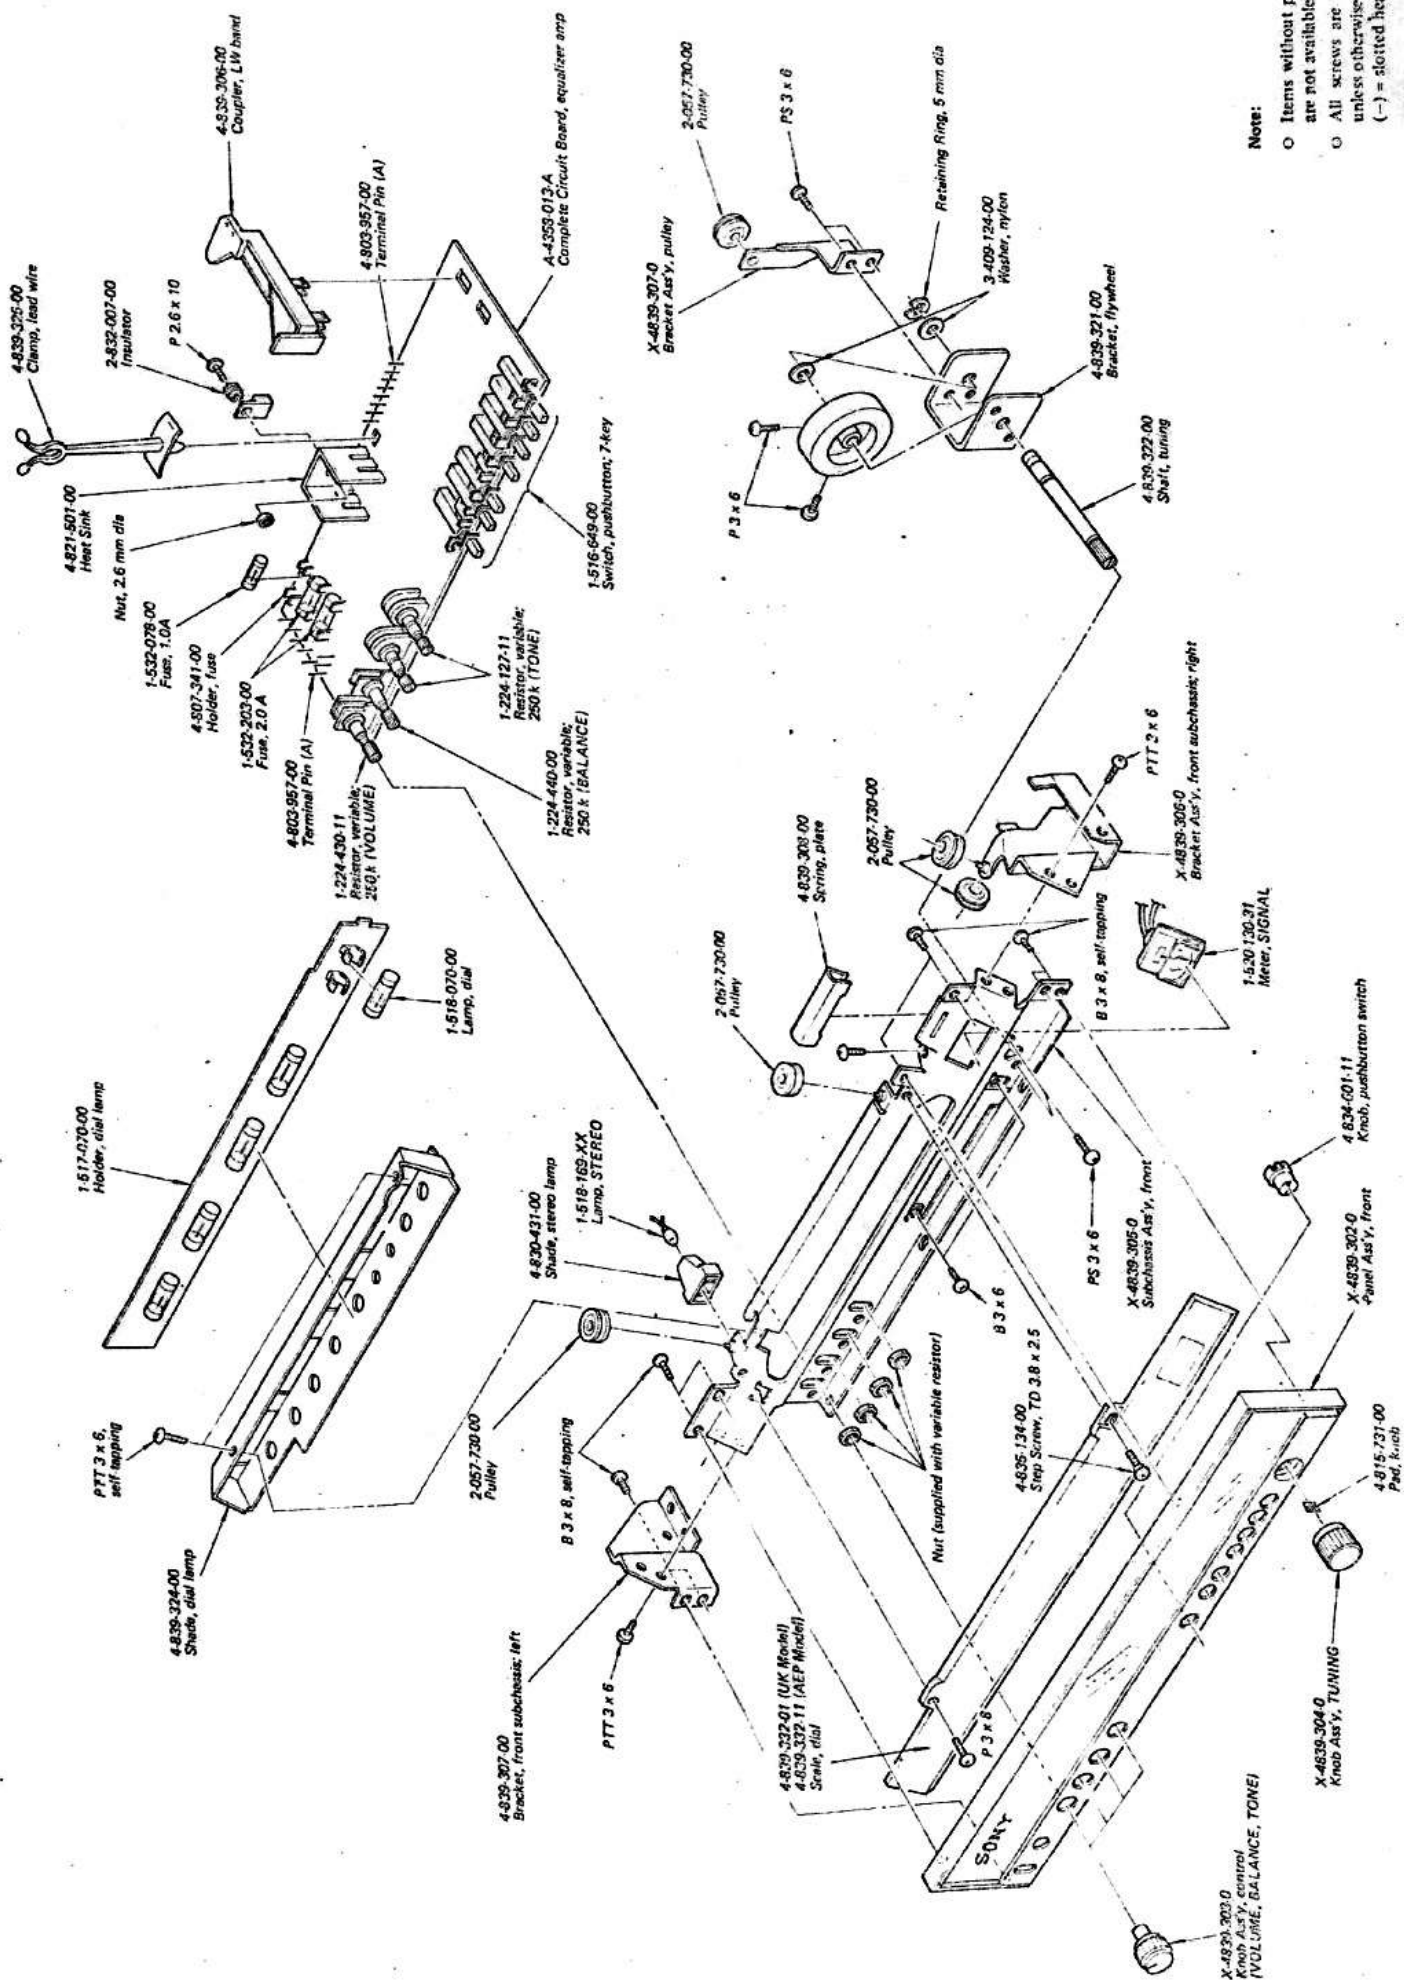**Note:**

- Items without part number and dis are not available.
- All screws are Phillips (cross) type unless otherwise noted.
- (-) = slotted head
- "PTT" type screws may be replaced

9/9/2018

2. BLOCK/LEVEL DIAGRAM

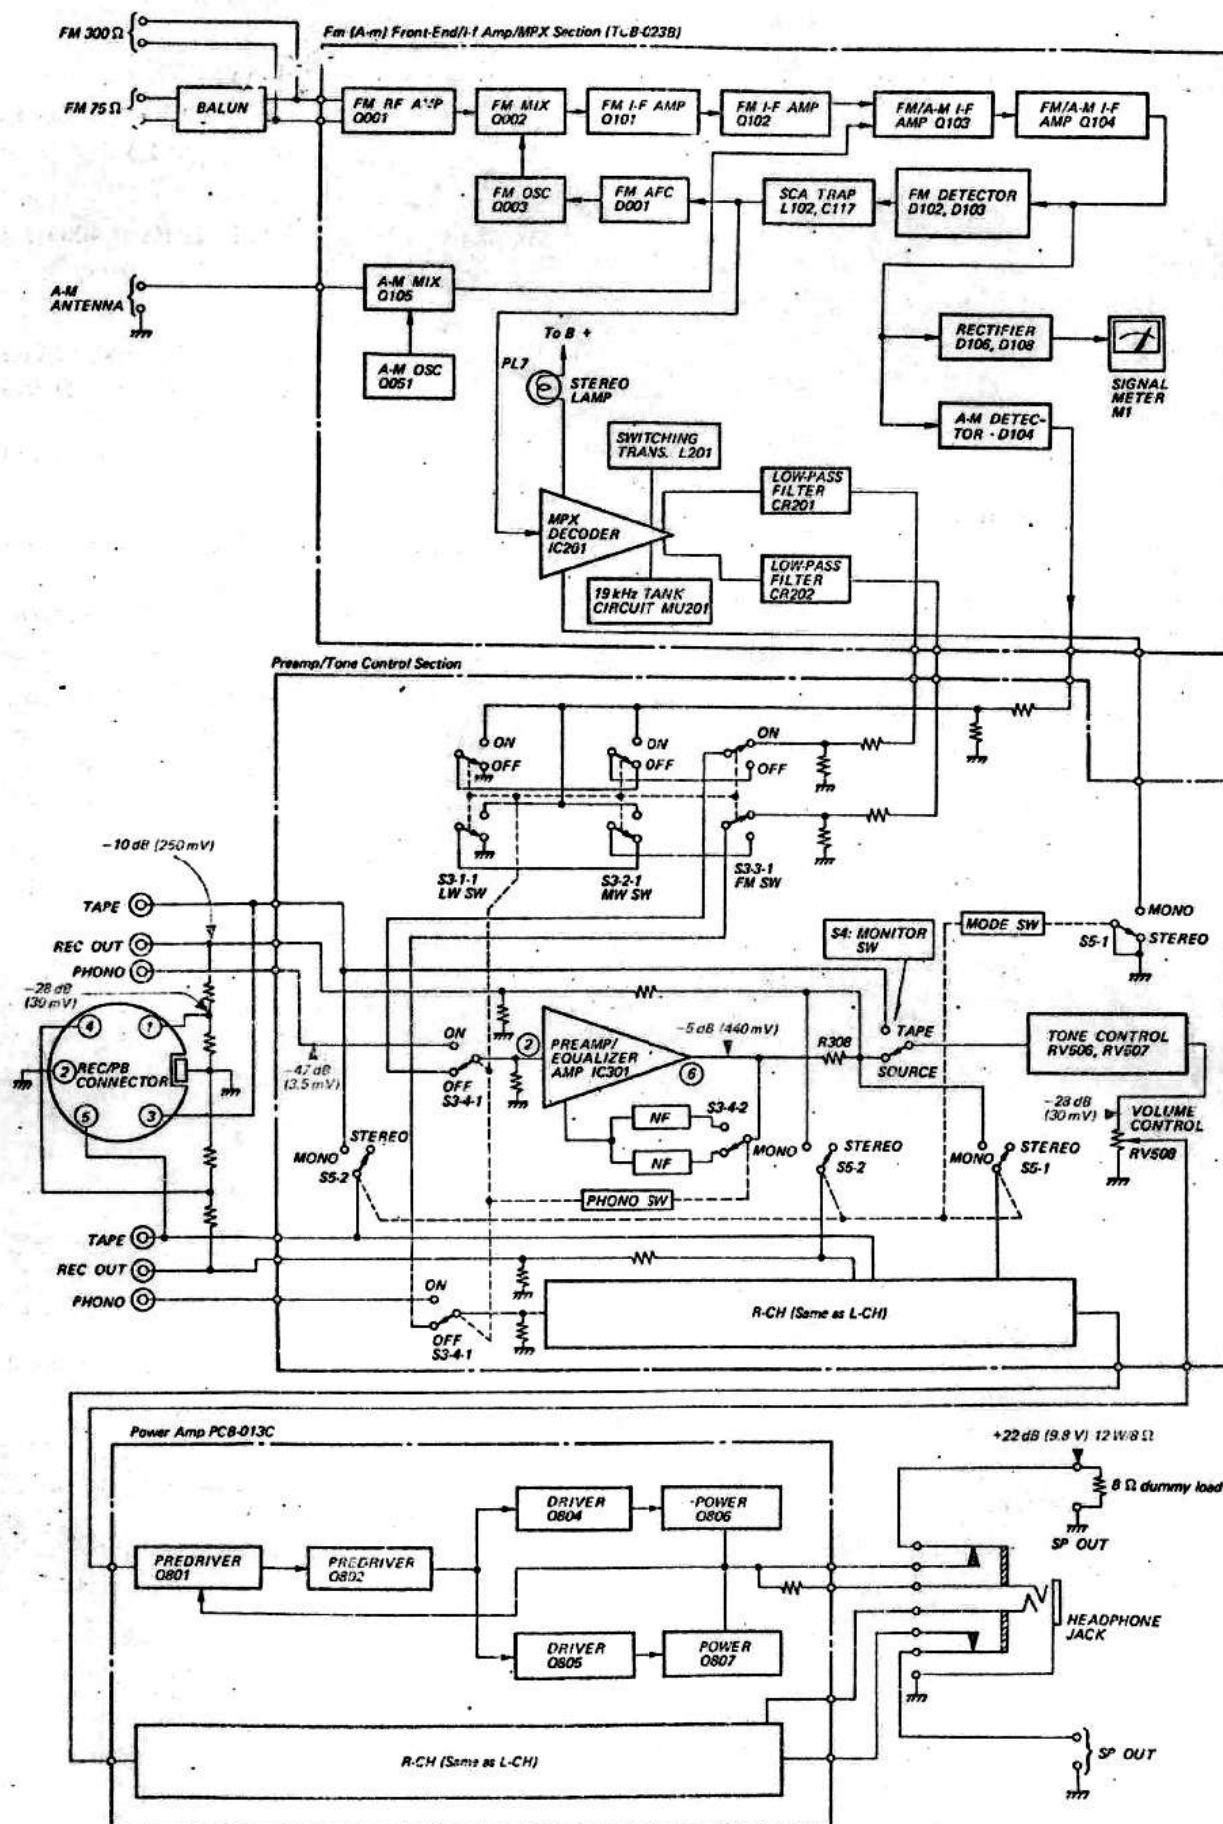

Note: Signal voltages are measured with ac VTVM and expressed in dB referred to 0.775 V, 1 kHz.

SECTION 3

ALIGNMENT AND ADJUSTMENT

FM I-F AND DISCRIMINATOR ALIGNMENT

CAUTION

The ceramic filters in the fm i-f circuit are selected according to their specified center frequencies and color coded as shown in Fig. 3-1 and listed in Table 3-1. Check the color code of the filters to identify the same center frequency when replacing any of these filters.

TABLE 3-1.
FM I-F CERAMIC FILTERS

Part No.	Color	Specified Center Freq.
1-527-220-11	red	10.70 MHz
1-527-220-21	blue	10.67 MHz
1-527-220-31	orange	10.73 MHz
1-527-220-41	black	10.64 MHz
1-527-220-51	white	10.76 MHz

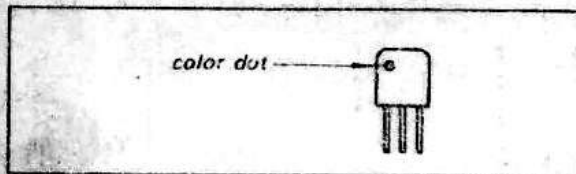


Fig. 3-1. Color dot on ceramic filters

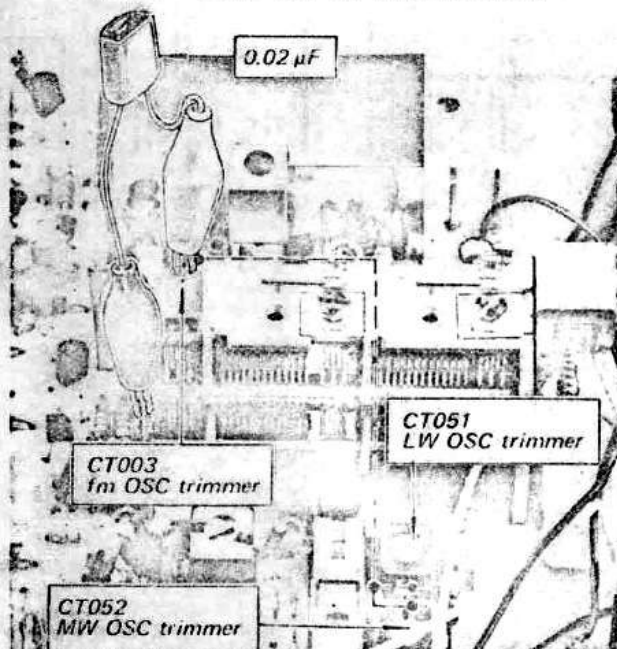


Fig. 3-2. Interruption of fm or a-m local oscillator operation

Note: Local oscillator should be killed when performing this alignment. To stop the local oscillator's operation, shunt the oscillator capacitor with a $0.02\mu\text{F}$ capacitor as shown in Fig. 3-2.

Signal Generator Method

Test Equipment Required

1. Signal generator capable of generating a 10.7-MHz a-m/fm signal.
2. Oscilloscope
Vertical sensitivity . . . 100 mV/cm minimum
3. Alignment tools
4. Ac VTVM

Preparation

1. Connect the input cable of the oscilloscope with alligator clips to connection point of R154 and C116, and ground on the fm (a-m) front-end/i-f amp/MPX board and solder a $0.02\mu\text{F}$ capacitor across these clips as shown in Fig. 3-3.
2. Connect the output cable of the signal generator across CT002 on the fm (a-m) front-end/i-f amp/MPX board through a $0.02\mu\text{F}$ coupling capacitor as shown in Fig. 3-4.

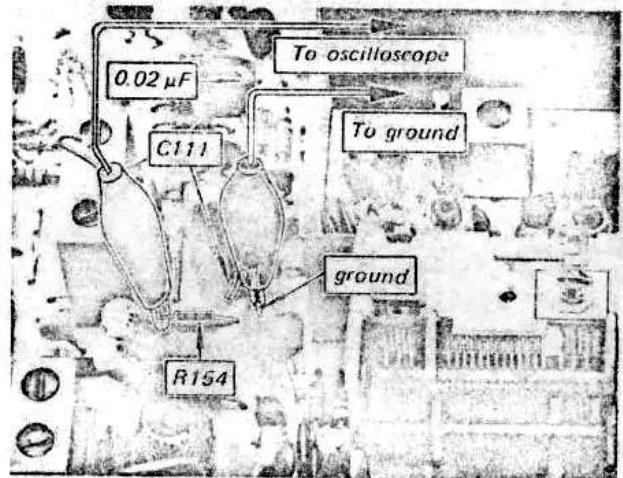


Fig. 3-3. Fm discriminator output connection

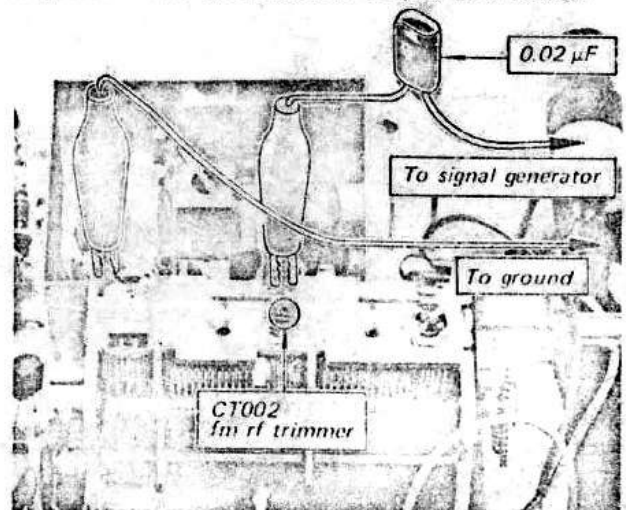


Fig. 3-4. 10.7 MHz signal injection

Procedure

With the equipment connected as shown in Fig. 3-5, set the signal-generator controls as follows:

Frequency Specified center frequency of ceramic filter.
See Table 3-1.
Modulation Fm, 400 Hz, 100 %
(75 kHz deviation)
Output level 1,000 μ V (60 dB)

Set the receiver controls as follows:

FUNCTION switch FM
VOLUME control Minimum

Adjust the signal generator frequency slightly to obtain a maximum output, and then change the signal generator's modulation to a-m, 400-Hz 30 %.

4. If the discriminator transformer IFT102 (See Fig. 3-13) is not aligned correctly, 400 Hz ripple will be observed as shown in Fig. 3-6.
5. Turn the secondary side core (green) of discriminator transformer IFT102 (See Fig. 3-13) with an alignment tool to obtain a minimum indication on the oscilloscope as shown in Fig. 3-6.



Fig. 3-6. Fm discriminator alignment output response

Note: Turn the core carefully and slowly because the output appearing on the oscilloscope jumps up and down when turning the core. This might cause difficulty in determining the point of minimum output.

Also, at both extreme positions of the secondary core, decreased output will be observed. The real null point should be obtained in the middle of the core thread length, and maximum output appears at each side of the true null

point.

6. Change the signal generator modulation to fm, 400 Hz 100 % (75 kHz deviation).
7. Turn the core of fm i-f transformer IFT001 (See Fig. 3-13) and the primary side core (brown) of discriminator transformer IFT102 (See Fig. 3-13), to obtain the maximum output.

3.2. FM FREQUENCY COVERAGE AND TRACKING ALIGNMENT

Note: Before starting this alignment, be sure that the fm i-f and discriminator alignment has been performed, and that the dial is mechanically calibrated as described in Procedure 2-6.

Signal Generator Method

Test Equipment Required

1. Fm signal generator
2. Ac VTVM
3. Alignment tools
4. Oscilloscope

Preparation

1. Connect the equipment as shown in Fig. 3-7.
2. Set the receiver controls as follows:
FUNCTION switch FM
VOLUME control Minimum
3. Short the connection point of R154 and C111 (AFC circuit) to ground as shown in Fig. 3-8.

Procedure

Follow the procedures given in Table 3-2 when performing this alignment with an fm signal generator.

Off-the-Air Signal Method

The frequency-coverage alignment can also be performed by utilizing off-the-air local fm signals.

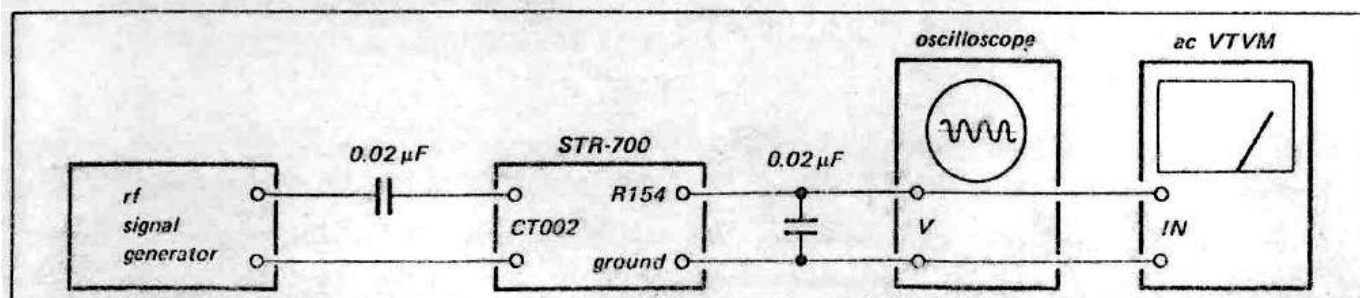


Fig. 3-5. Fm i-f and discriminator alignment setup by rf signal generator

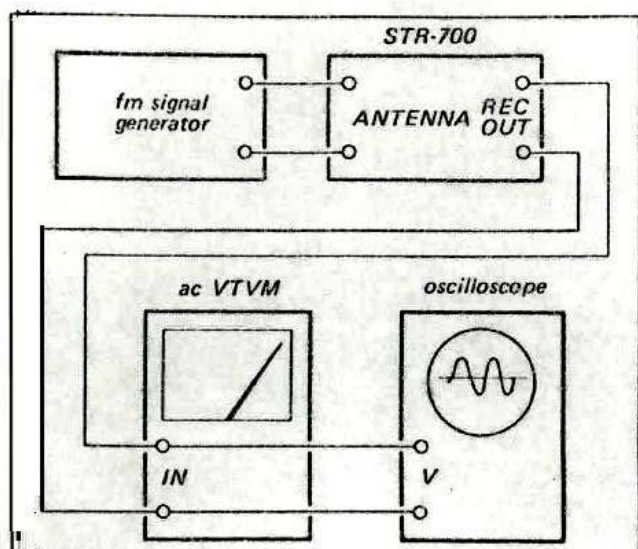


Fig. 3-7. Fm frequency coverage and tracking alignment setup

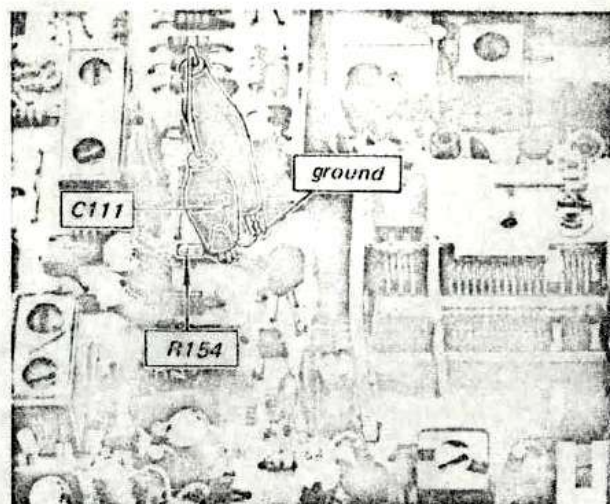


Fig. 3-8. Interruption of AFC circuit

TABLE 3-2. FM FREQUENCY COVERAGE AND TRACKING ALIGNMENT

FM FREQUENCY COVERAGE ALIGNMENT						
Step	SG Coupling	SG Frequency and Output Level	Dial Indication	Ac VTVM Connection	Adjust	Indication
1.	Direct coupling	87.2 MHz (※ 87.5 MHz) 400 Hz 75 kHz deviation (100%) mod. Output level; as low as possible	lowest position	REC OUT	OSC coil L002 See Fig. 3-13.	Maximum VTVM reading
2.	Same as above	108.4 MHz (※ 108.0 MHz) 400 Hz 75 kHz deviation (100%) mod. Output level; as low as possible	highest position	Same as above	OSC trimmer CT003 See Fig. 3-13.	Same as above
FM TRACKING ALIGNMENT						
1.	Direct coupling	87.2 MHz (※ 87.5 MHz) 400 Hz 75 kHz deviation (100%) mod. Output level; as low as possible	lowest position	REC OUT	Antenna coil L001 RF coil L003 See Fig. 3-13.	Maximum VTVM reading
2.	Same as above	108.4 MHz (※ 108.0 MHz) 400 Hz 75 kHz deviation (100%) mod. Output level; as low as possible	highest position	Same as above	Antenna trimmer CT001 RF trimmer CT002 See Fig. 3-13.	Same as above

Note: ※ West Germany Model only

3. FM STEREO SEPARATION ADJUSTMENT

Test Equipment Required

1. Fm stereo signal generator
2. Ac VTVM
3. Oscilloscope
4. Alignment tools

Preparation

1. Remove the wooden case as described in Procedure 2-1 on page 5.
2. Connect the equipment as shown in Fig. 3-9, then set the fm stereo signal generator controls as follows:

Carrier frequency 98 MHz

Output level 1,000 μ V (60 dB)

Mode Stereo

Audio (400 Hz) Mod .. 67.5 kHz (90%)*

Pilot (19 kHz) Mod 7.5 kHz (10%)

*Note: 75 kHz (100%) if the metering indicates total modulation (audio+pilot).

Procedure

1. Precisely tune the receiver to the carrier frequency of stereo signal generator, then turn the top core of switching transformer L201 (See Fig. 3-13) to obtain maximum output at the left channel. Note that this adjustment has a close relationship with stereo distortion.
2. Record the output level of the left channel when the stereo signal generator input selector is set to the left channel.
3. Switch the stereo signal generator input selector to the right channel and read the residual signal level of the left channel.
4. The output-level to residual-level ratio represents the separation. Turn the top core of switching transformer L201 (See Fig. 3-13) for minimum residual level. Check the right channel for separation. Readjust switching transformer for minimum difference between left and right-channel separation.

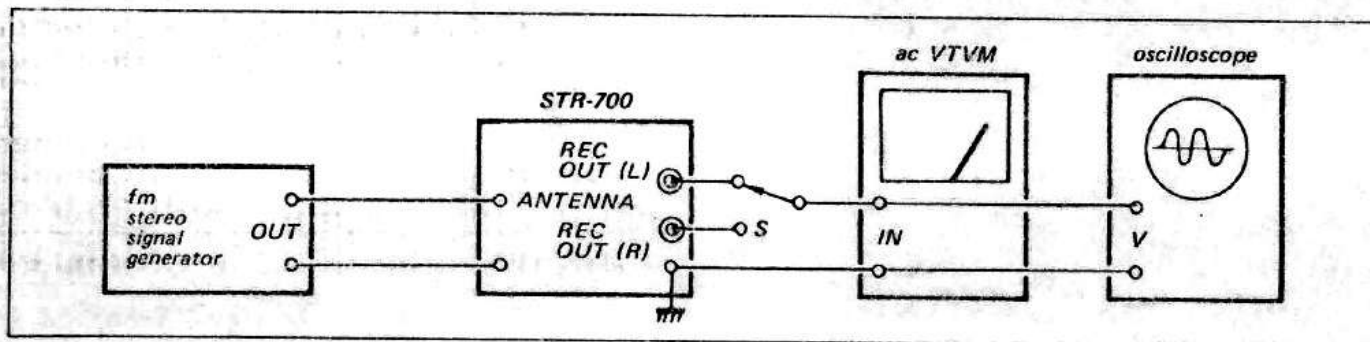


Fig. 3-9. Fm stereo separation adjustment setup


SECTION 4

DIAGRAMS


MOUNTING DIAGRAM – Fm (A-m) Front-end/I-f Amp/MPX Circuit Board (TCB-023B) –

— Component Side —


Parts Location		
IC, Q	D	ADJ
Q101		
Q102	D110 D109	IFT001
Q103 Q002		L002 L003 L001
Q003 Q001	D001	
Q104		
Q106		CT001 CT002 CT003
Q105	D103 D106	IFT002
Q051	D102 D103	L051 IFT101 CT051
	D104	CT052
	D105	L052
IC201		CT053
	D107	L053 CT054 L201

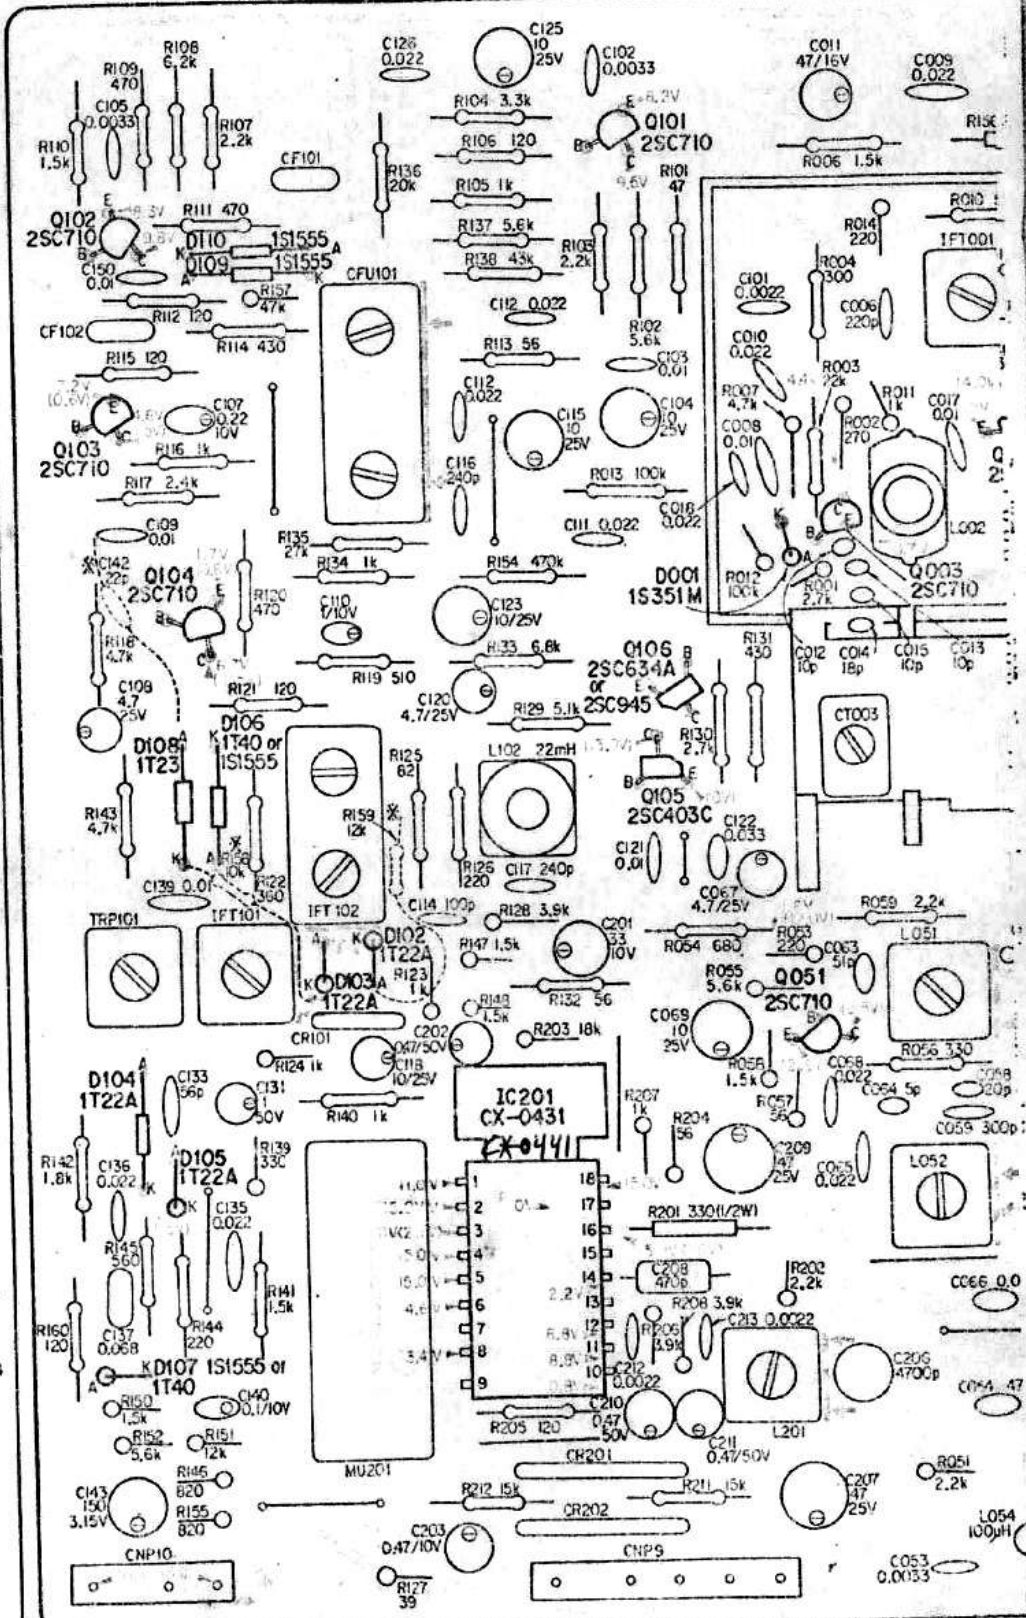


※ : Mounted on conductor side.

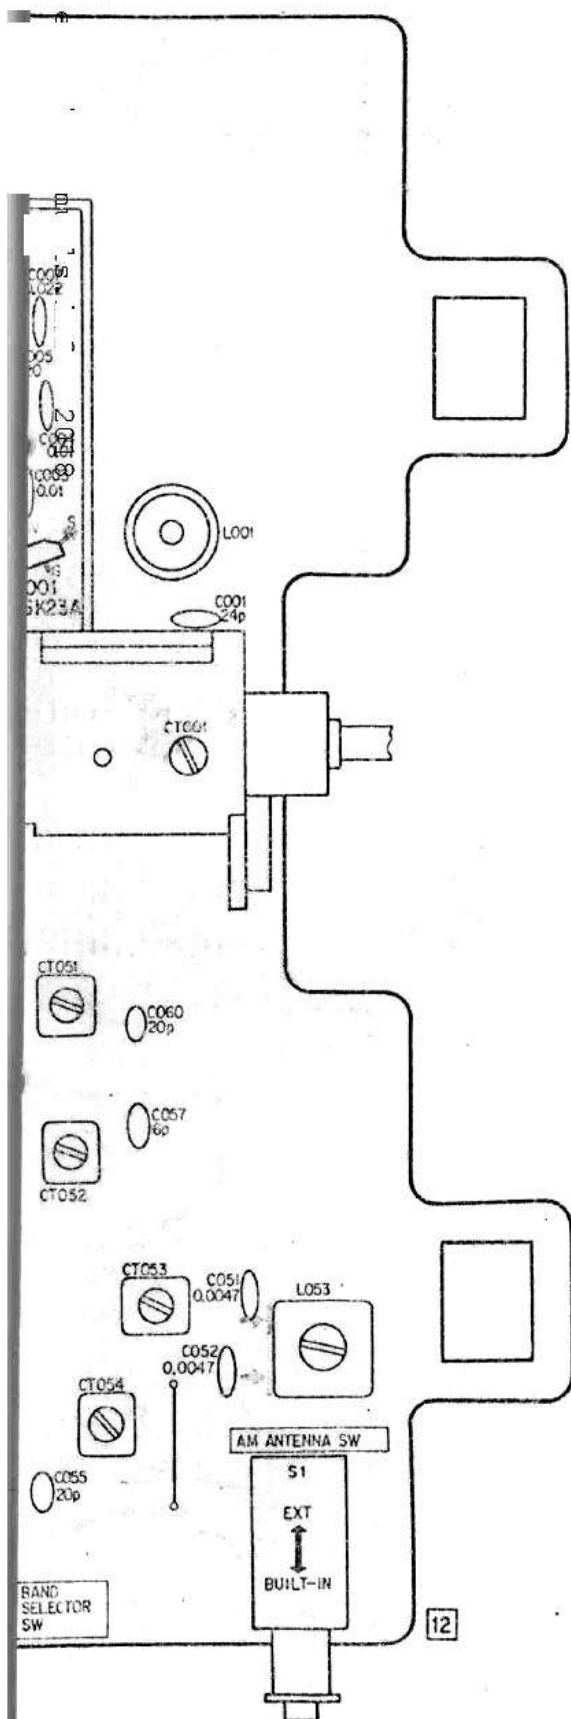


2SK23A

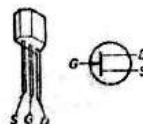


2SC710

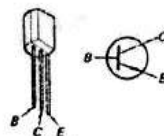


2SC403C
2SC634A

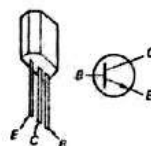

2SC945

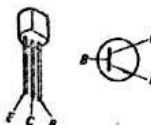


CX-0441
CX-0431

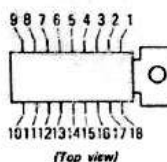

1S1555
1S351M
1T22A
1T23
1T40




Note:  Shows the location of stencilled part number. Refer to this mark when replacing the part.
Capacitors marked Δ are built in transformers.
() : A-m operation
< > : STEREO operation

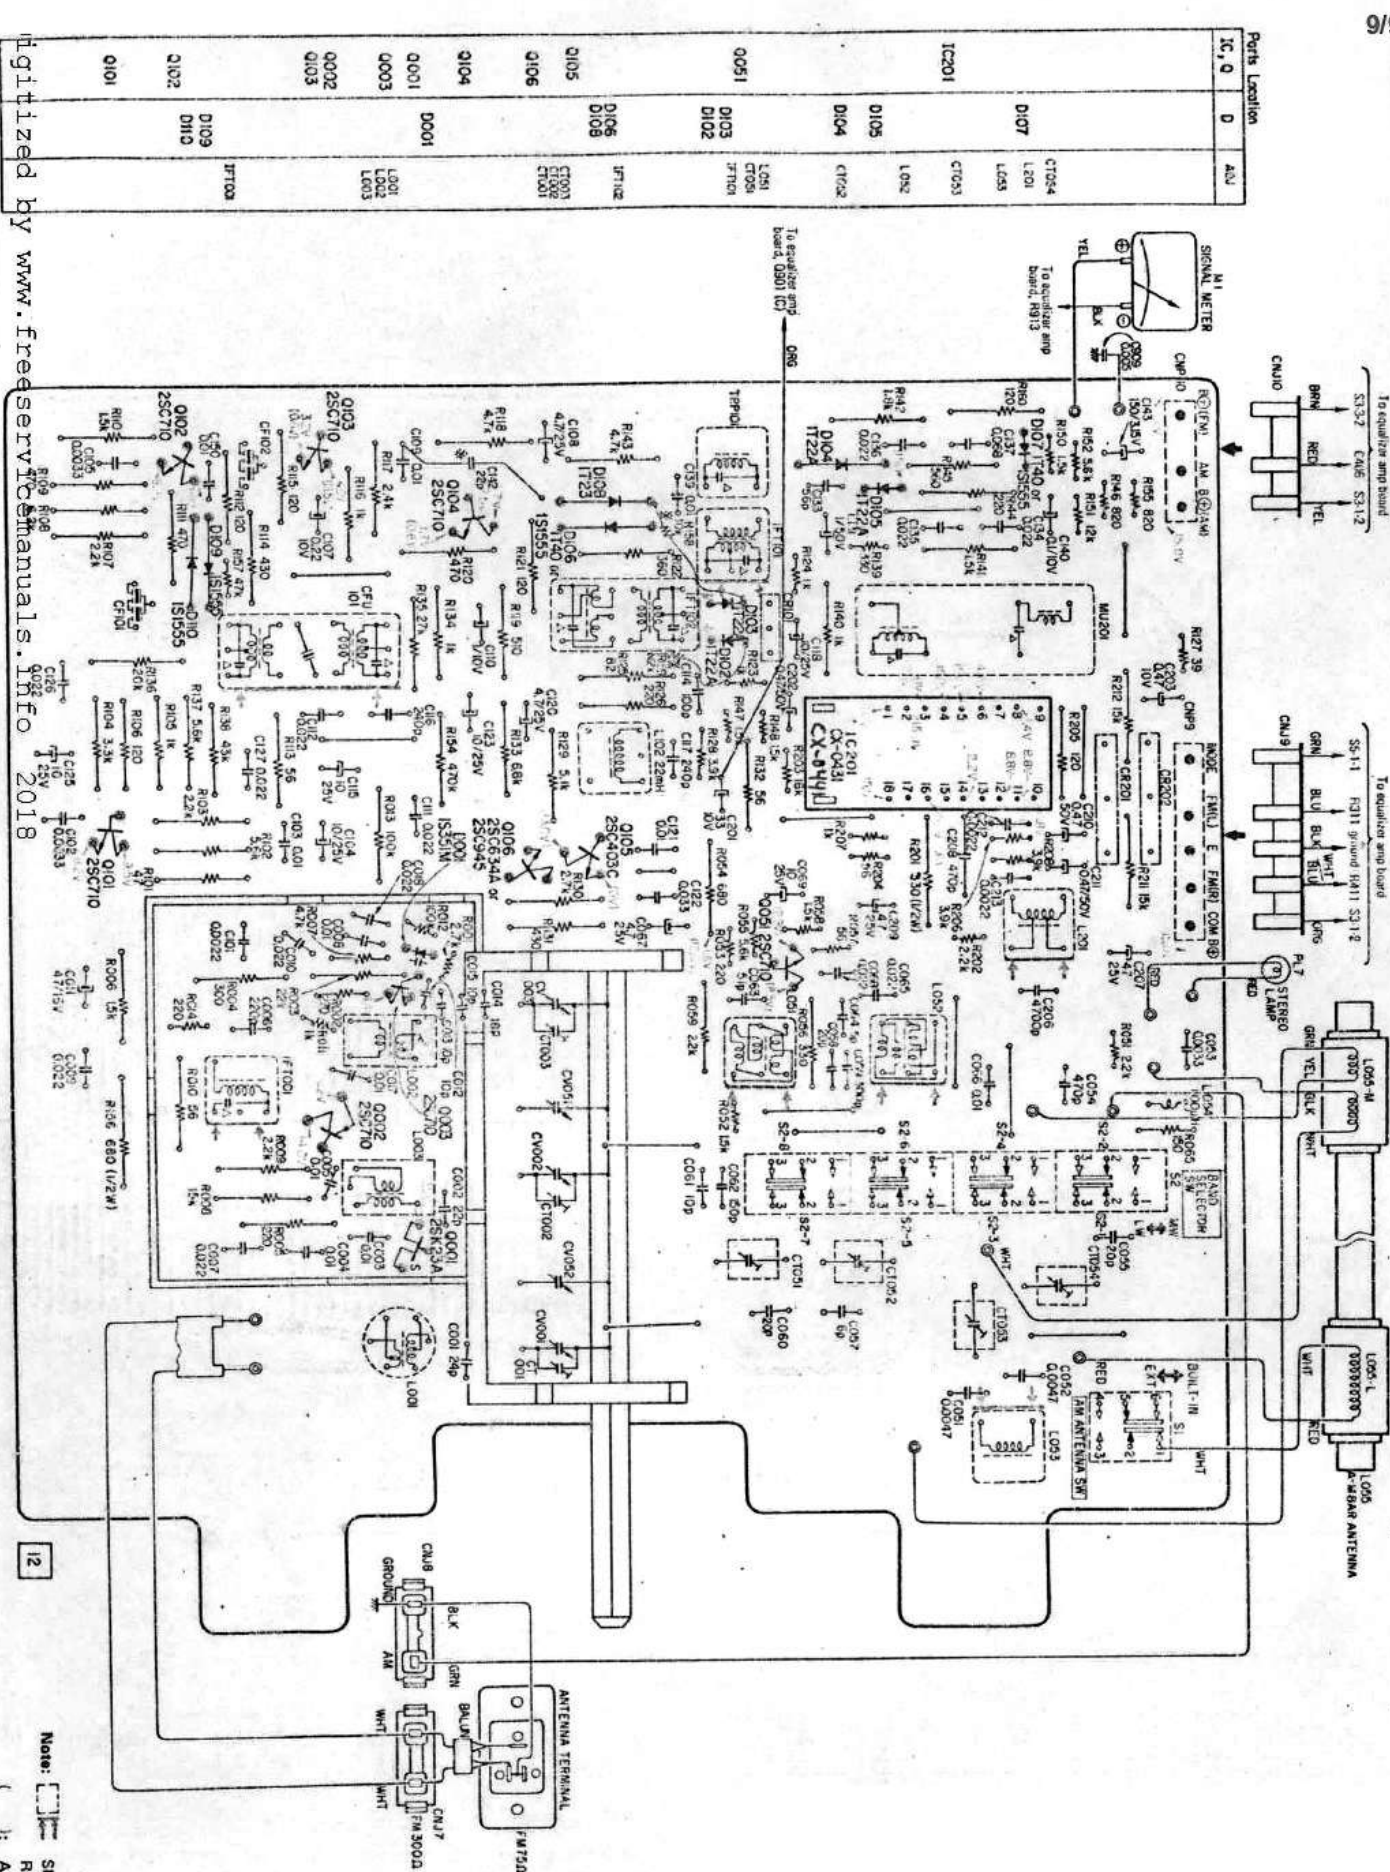

Note: []^{Part}
Shows the location of stencilled part number. Refer to this mark when replacing the part.

4.2. SCHEMATIC DIAGRAM – Fm (A-m) Front-end/-f Amp/MPX Section (TCB-023B) –

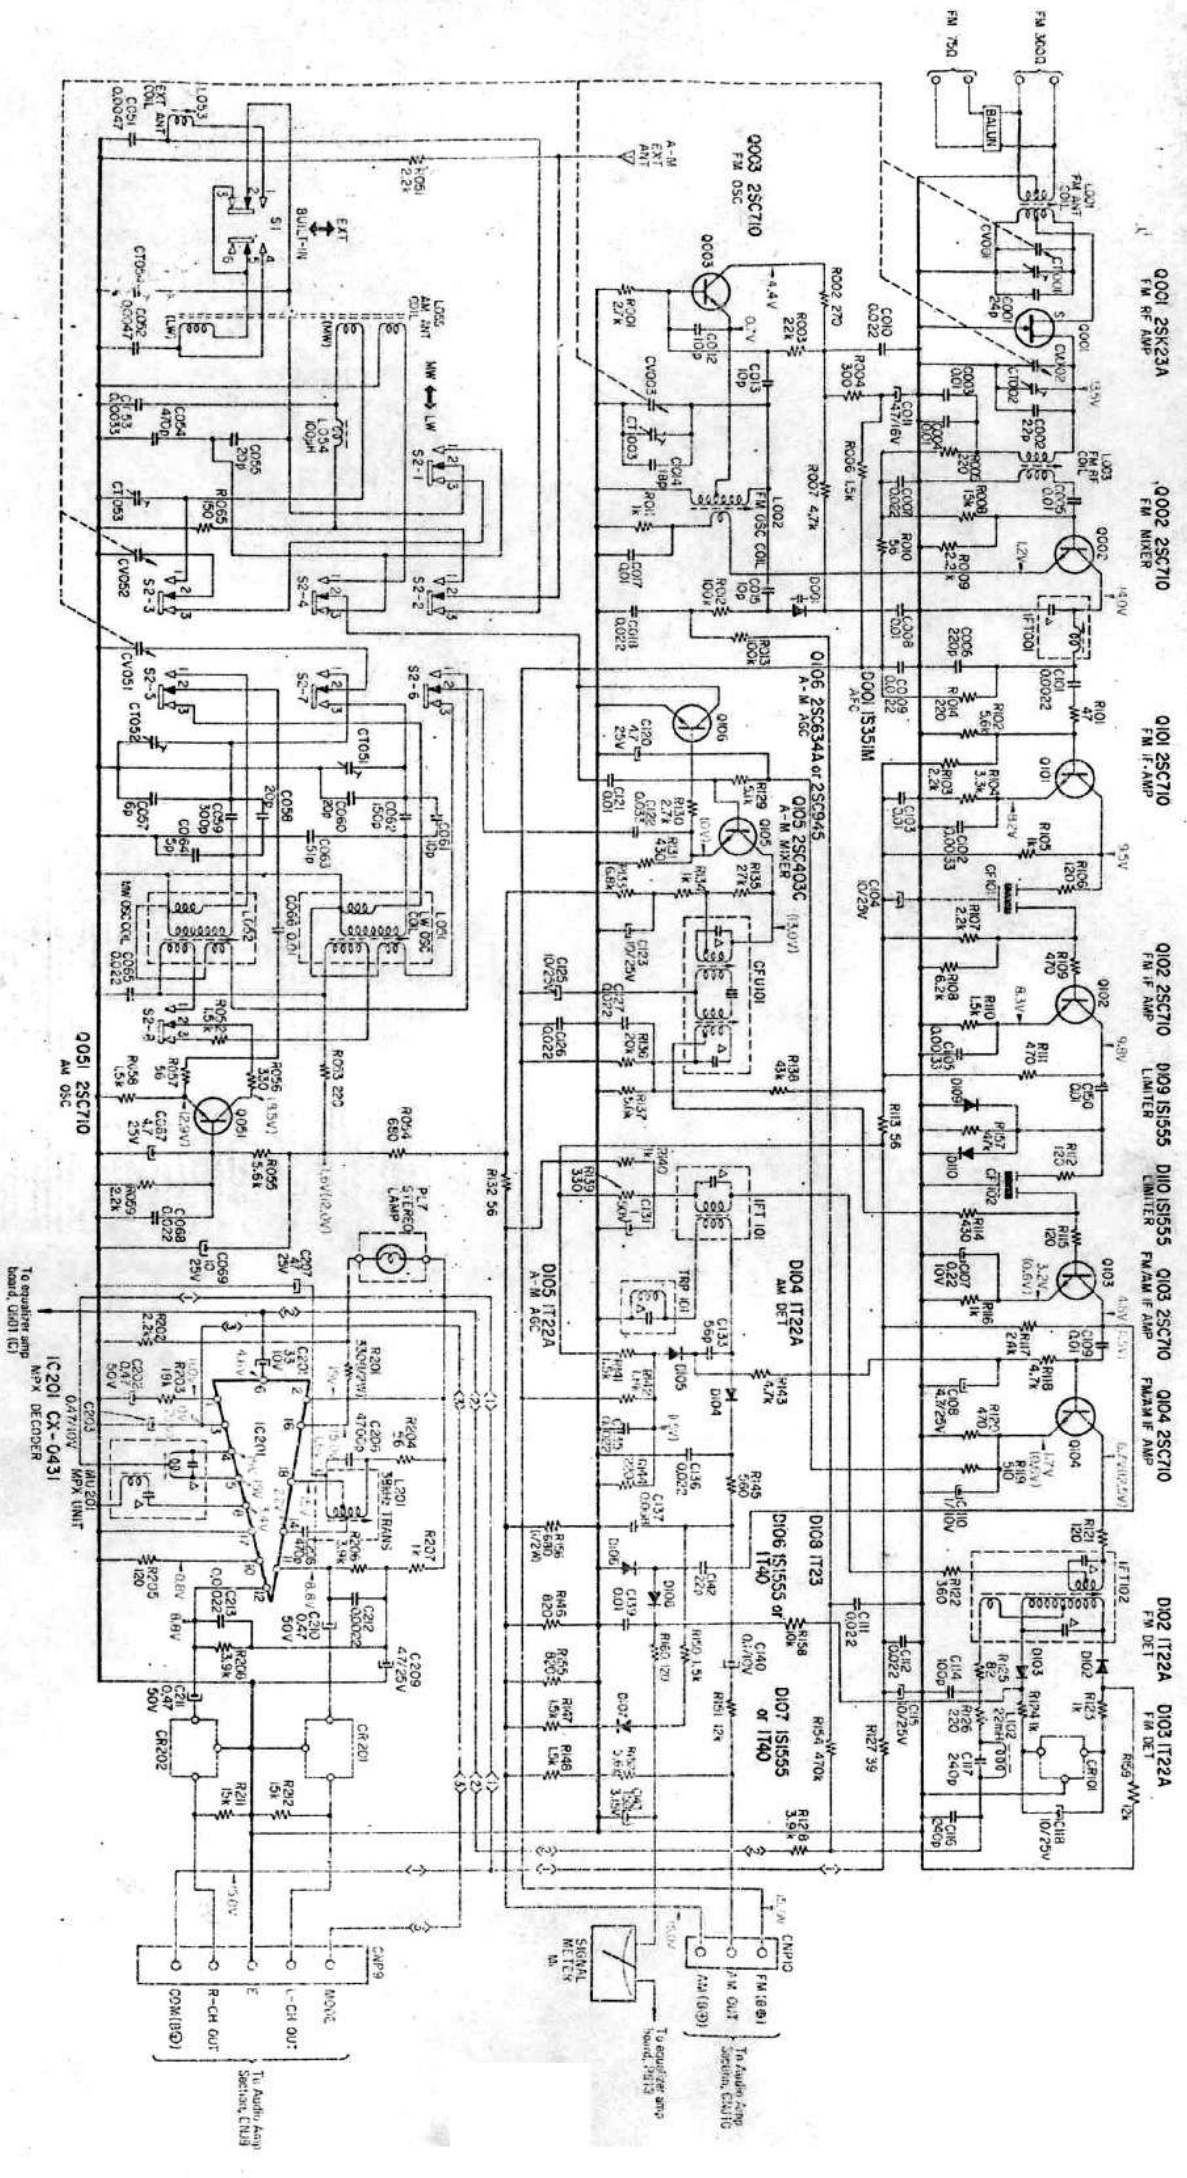



Note: All resistance values are in ohms, $k = 1,000$, $M = 1,000\ k$. All capacitance values are in μF , except as indicated with p which means pF . All voltages are dc measured with a VOM which has an input impedance of $20\ k\ \text{ohms/volt}$. No signal in. Voltage variations may be noted because of normal production tolerances. Connectors marked Δ are built in transformers.



Note: All resistance values are in ohms, $k = 1,000$, $M = 1,000$ k.
All capacitance values are in μF except as indicated with p, which means pF .
All voltages are dc measured with a VOM which has an input

STR-700 STR-700

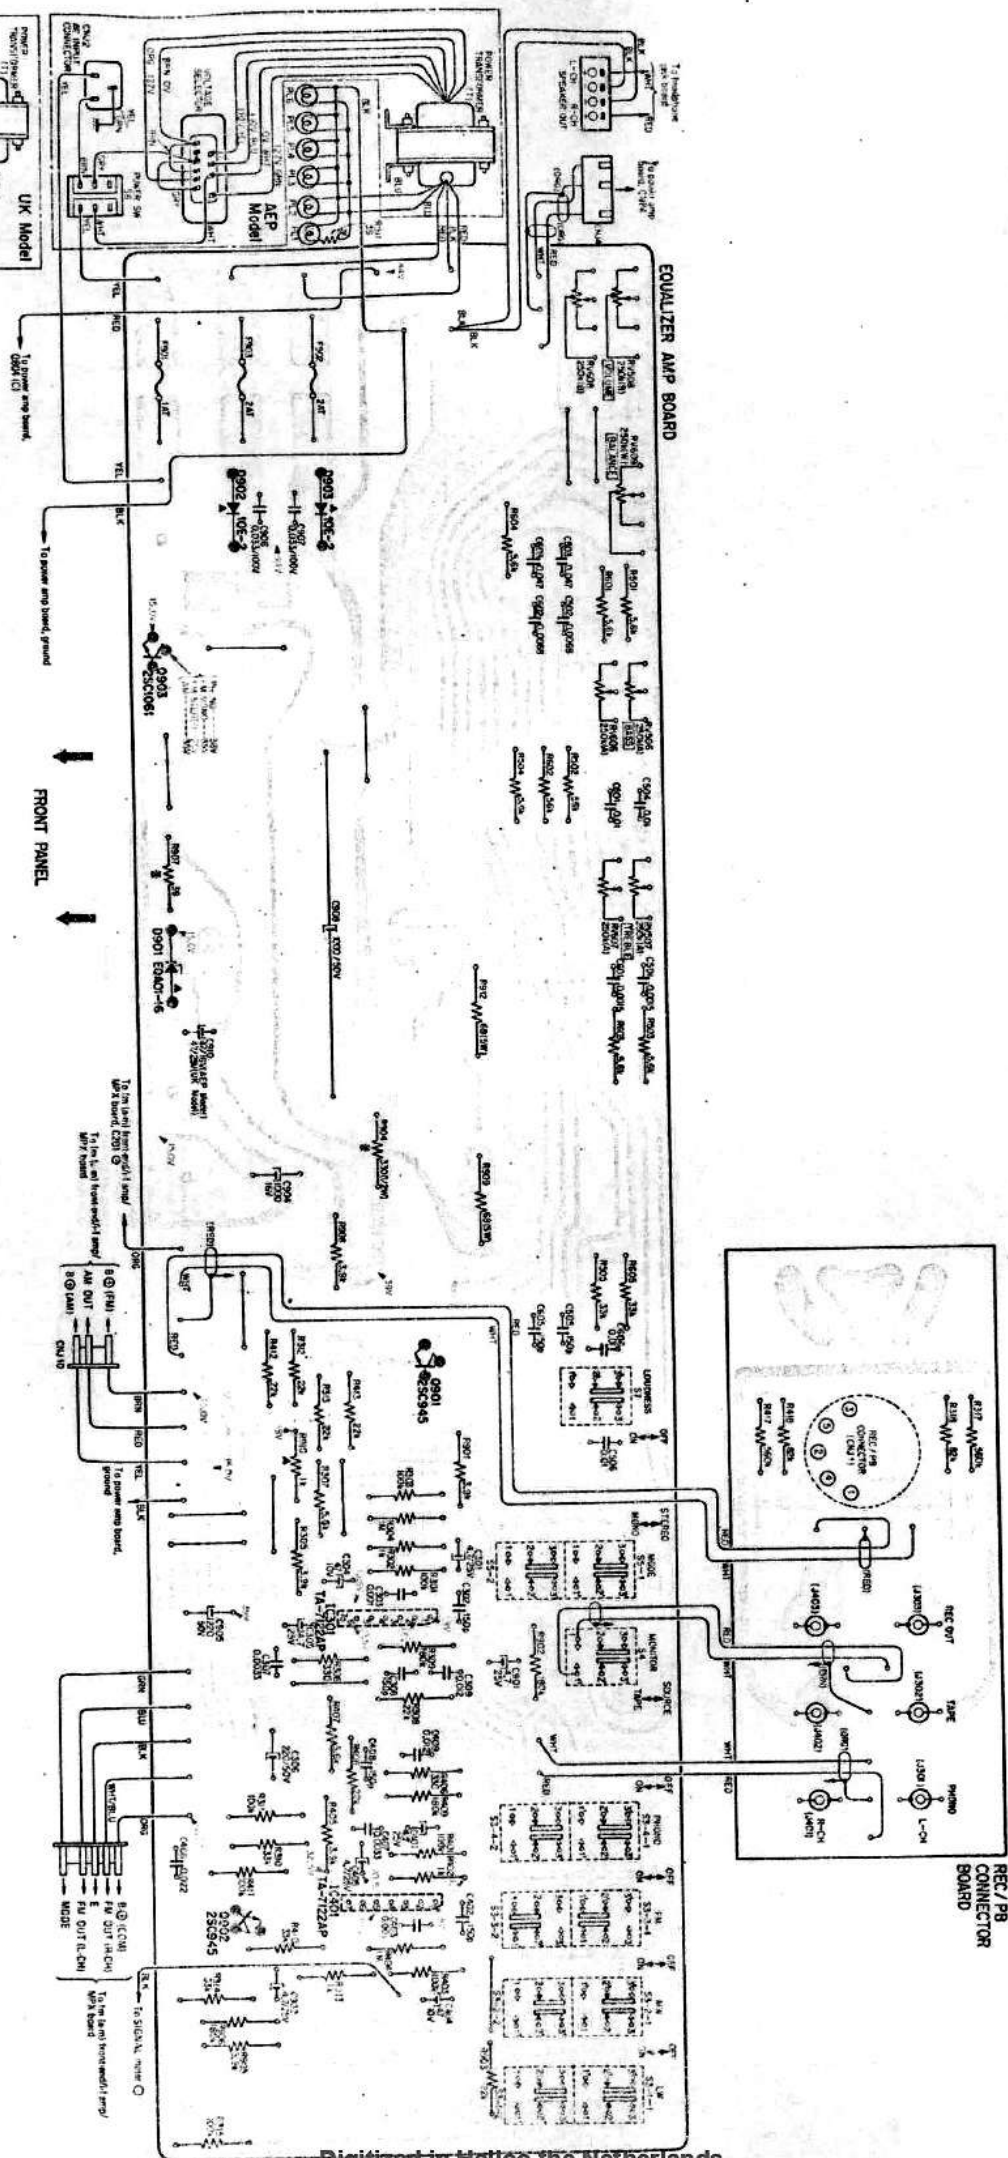4.4. MOUNTING DIAGRAM - Equalizer Amp Circuit Board -
- Conductor Side -

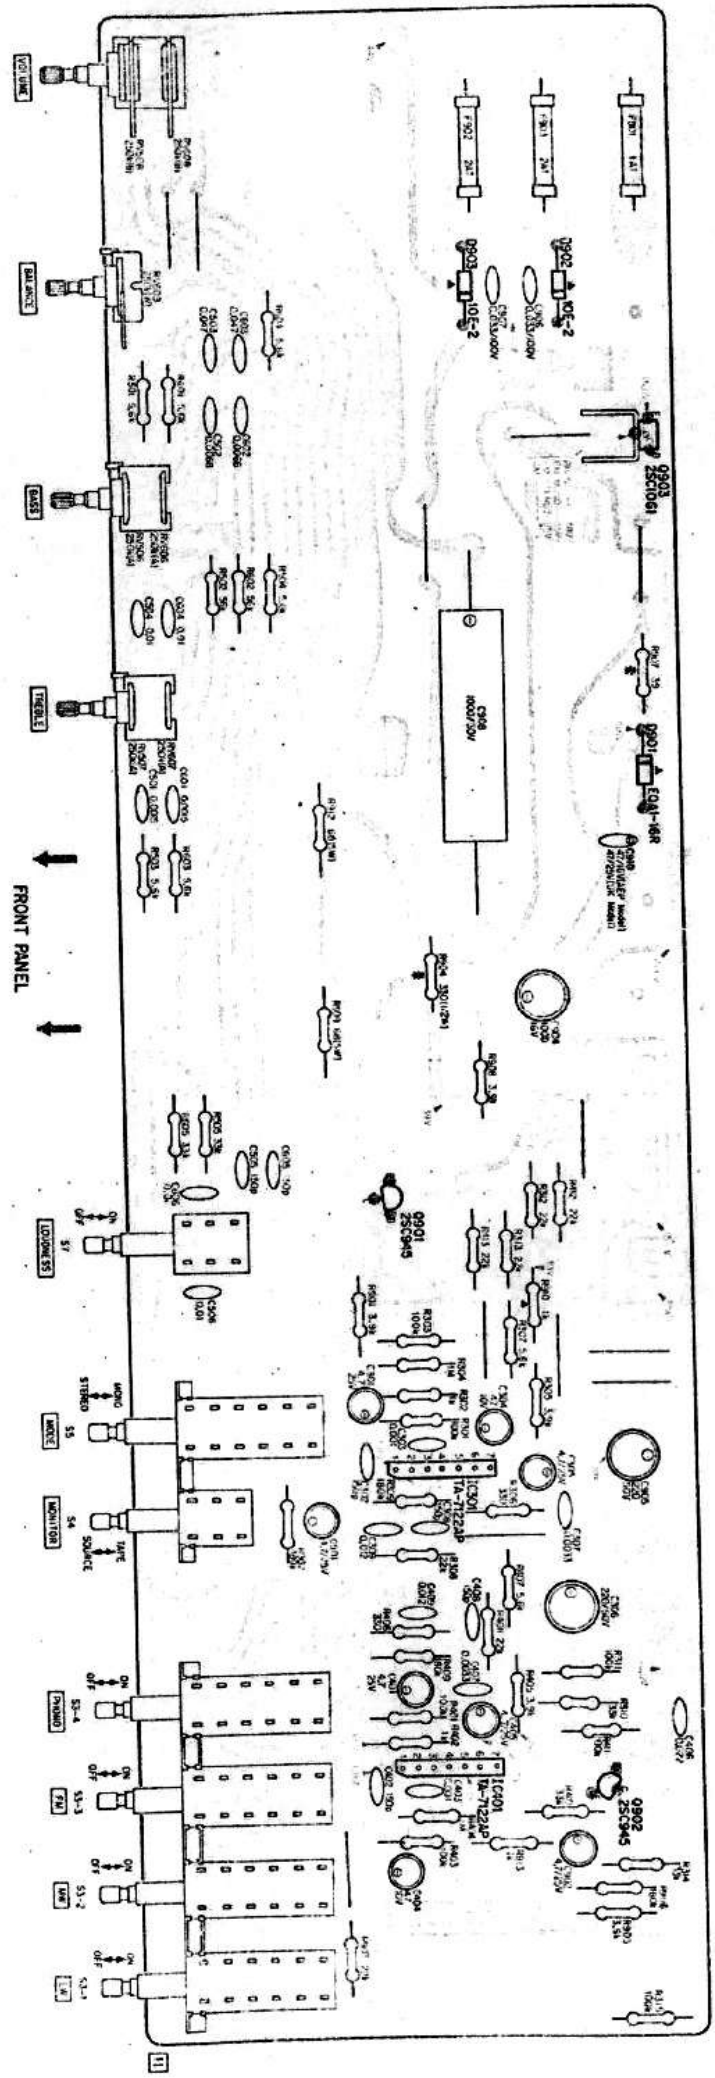

- | | | | | |
|----------|--------|---------|-----------|-------|
| TA7122AP | 2SC945 | 2SC1061 | EOA01-16R | 10E-2 |
| | | | | |


Note:

▲ D901, D902, D903, R910
 All the components listed above should be stand off from the surface of printed circuit board as shown below.




* R904, R907 and R911 should be fuse-type metal-oxide resistors.

4-5. IC BLOCK DIAGRAM

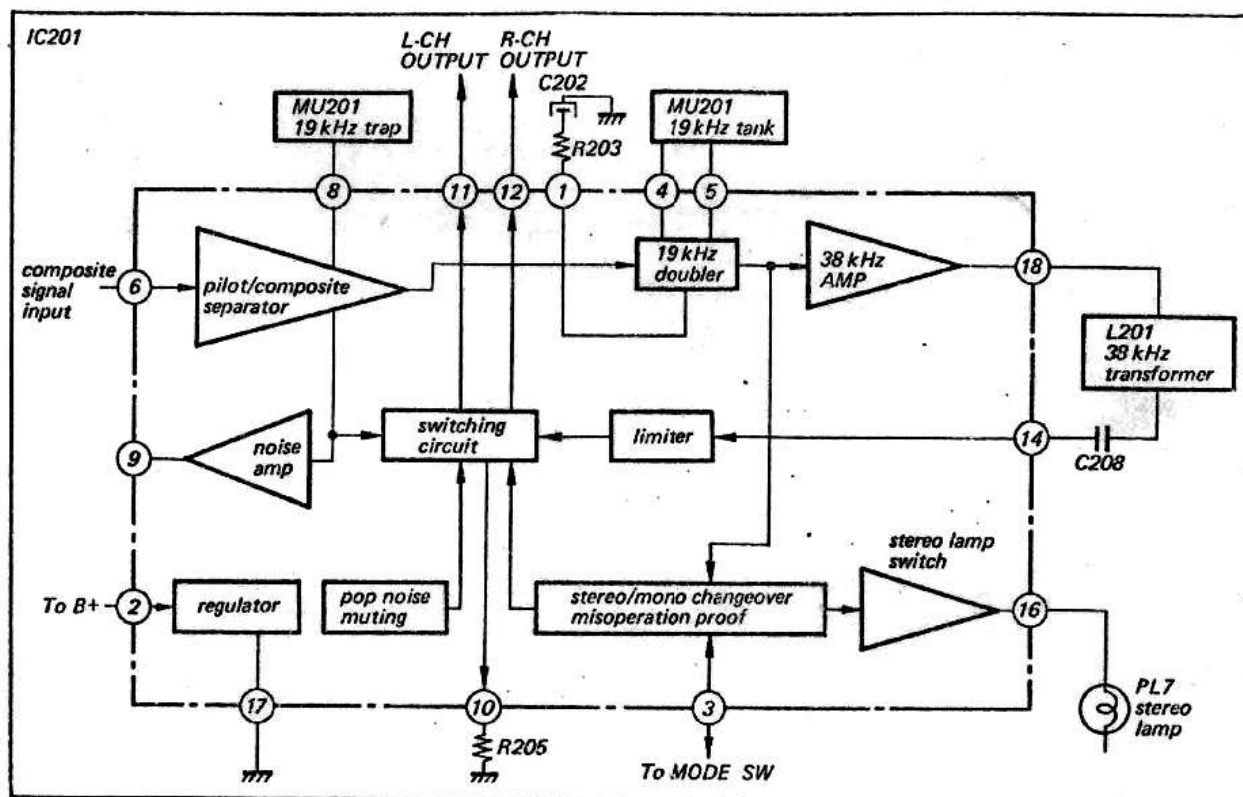


Detailed IC (CX-0431) diagram
CX-0441

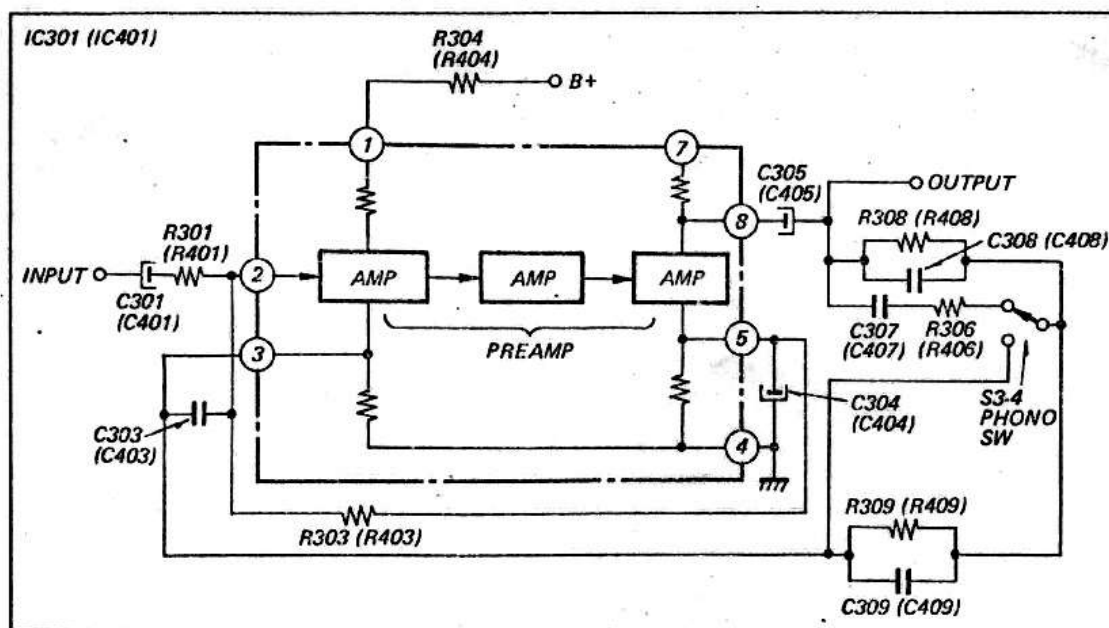



Detailed IC (TA-7122AP) diagram

6 SCHEMATIC DIAGRAM – Power Amp Section (PCB-013C) –

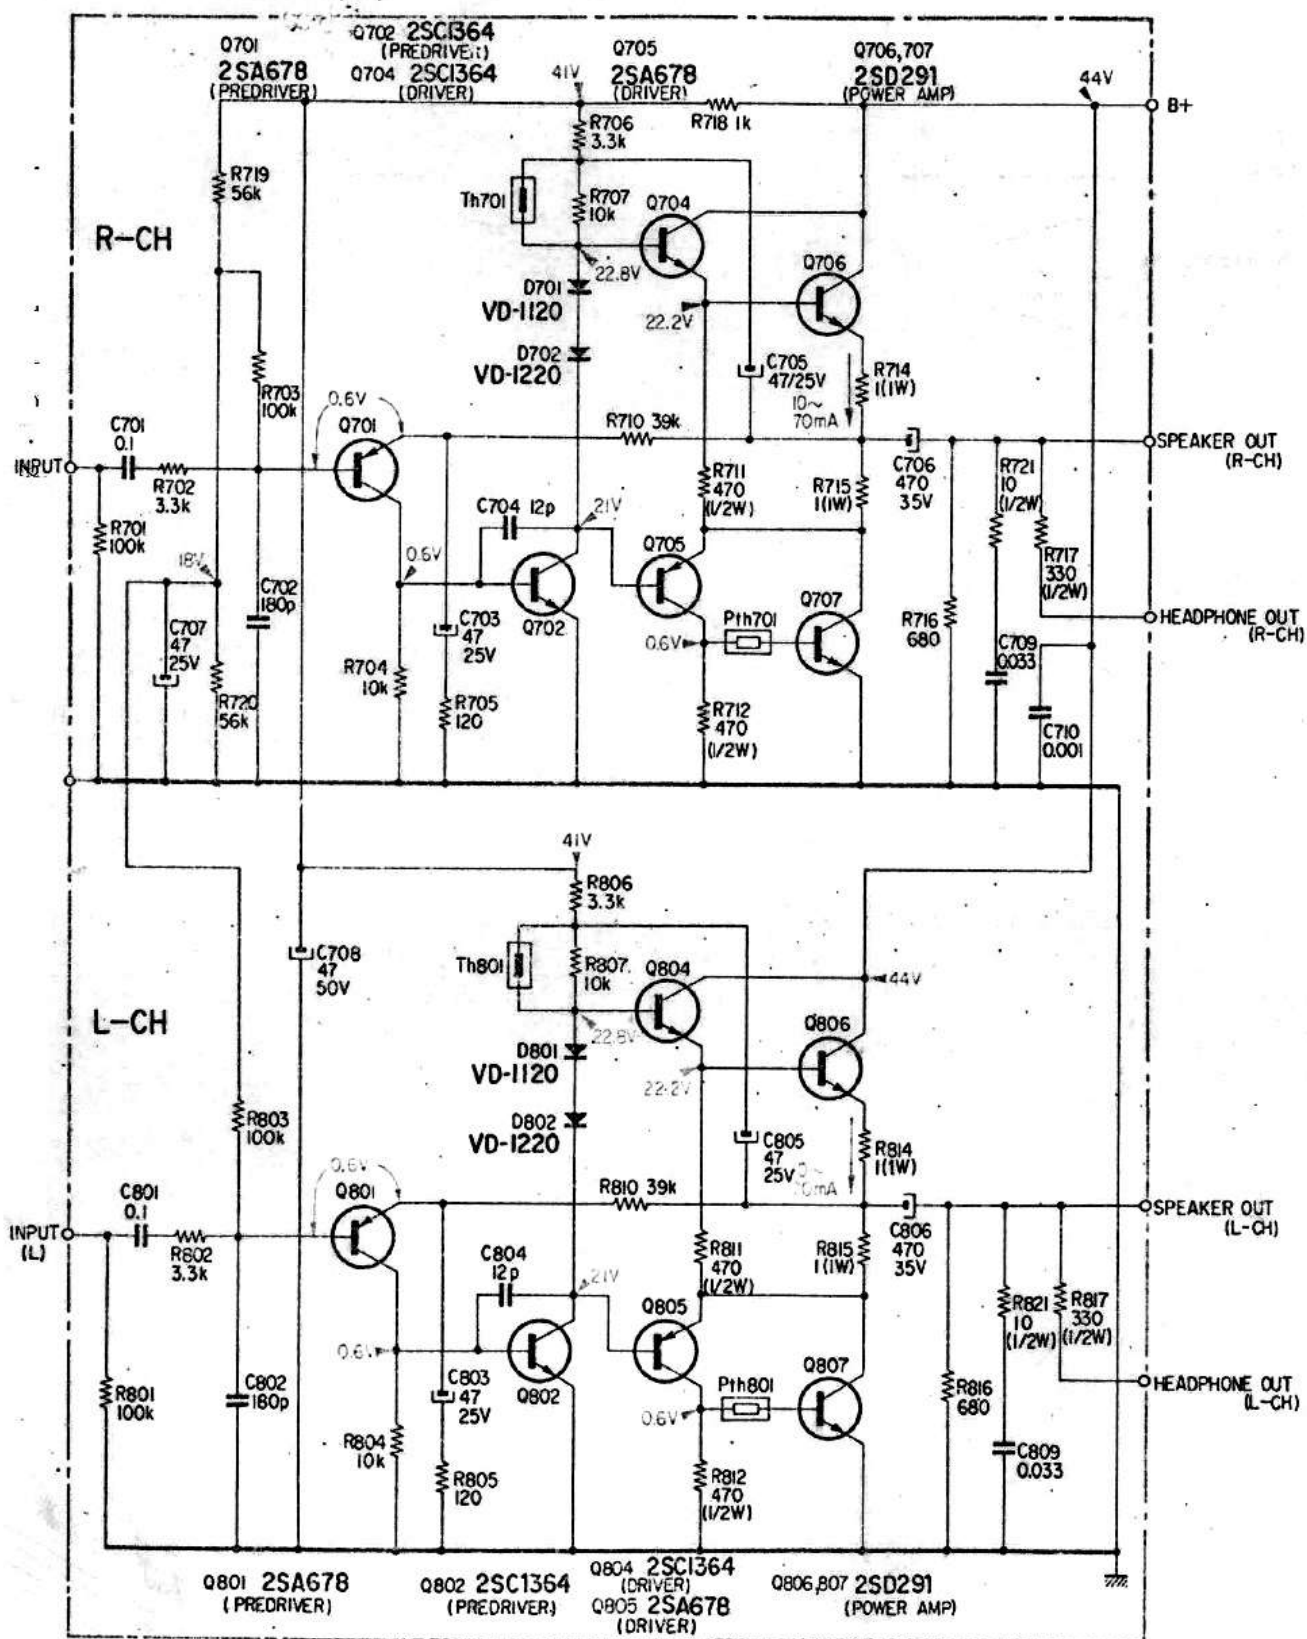


Note: All resistance values are in ohms. k = 1,000, M = 1,000 k.
All capacitance values are in μF except as indicated with p, which means μpF .
All voltages are dc measured with a VOM which has an input impedance of 20 k ohms/volt. No signal in.
Voltage variations may be noted because of normal production tolerances.

4-7. MOUNTING DIAGRAM - Power Amp Circuit Board (PCB-013C) -
- Conductor Side -

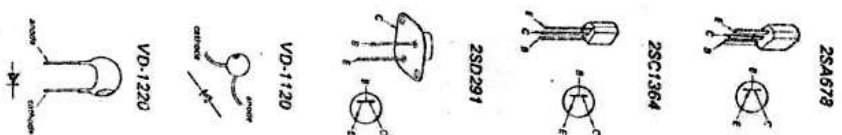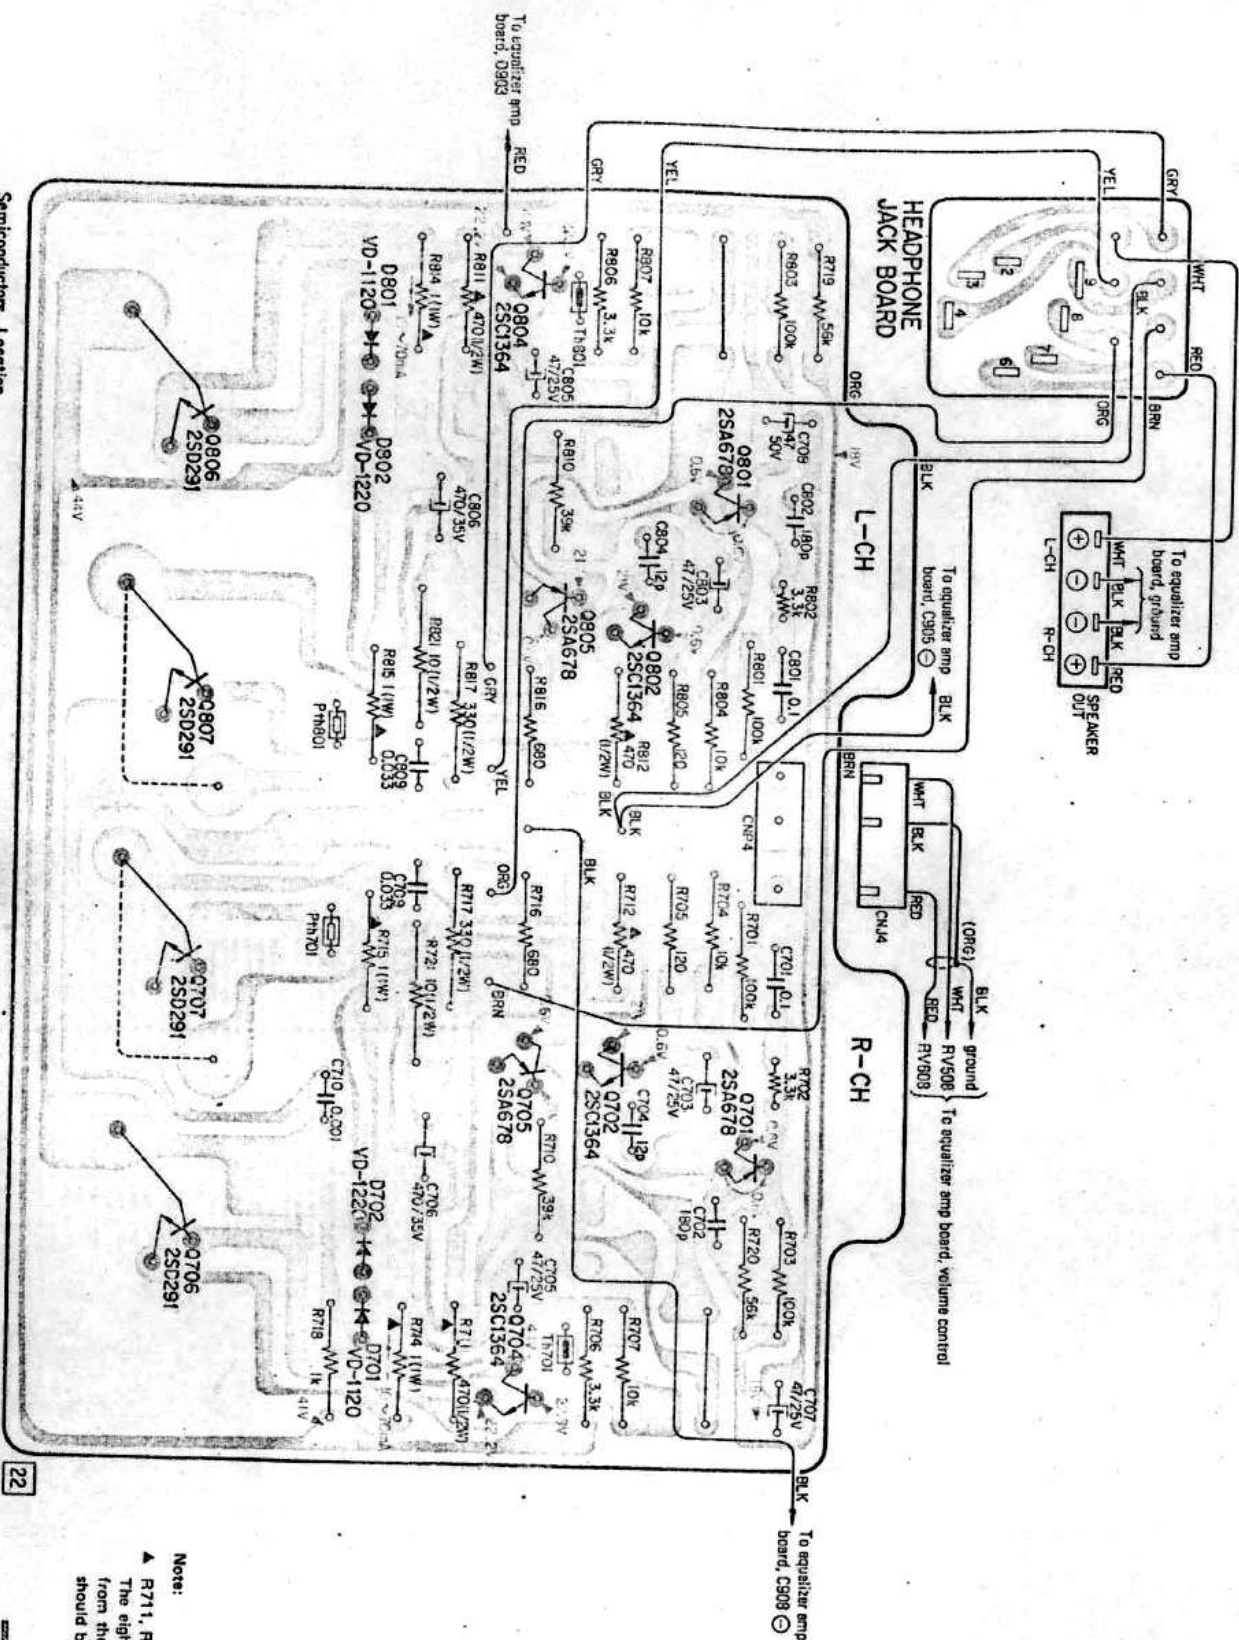


Note:
▲ R711, R712, R714, R715, R811, R812, R814, R815
The eight metal-oxide resistors listed above should be stand off
from the surface of printed circuit board as shown below, and
should be a fuse type.



Semiconductors Location

by www.freeservice.com 0801 0802 0804 0805 0806 0807 0808 0809 0810 0811 0812 0813 0814 0815 0816 0817 0818 0819 0820 0821 0822 0823 0824 0825 0826 0827 0828 0829 0830 0831 0832 0833 0834 0835 0836 0837 0838 0839 0840 0841 0842 0843 0844 0845 0846 0847 0848 0849 0850 0851 0852 0853 0854 0855 0856 0857 0858 0859 0860 0861 0862 0863 0864 0865 0866 0867 0868 0869 0870 0871 0872 0873 0874 0875 0876 0877 0878 0879 0880 0881 0882 0883 0884 0885 0886 0887 0888 0889 0890 0891 0892 0893 0894 0895 0896 0897 0898 0899 0900 0901 0902 0903 0904 0905 0906 0907 0908 0909 0910 0911 0912 0913 0914 0915 0916 0917 0918 0919 0920 0921 0922 0923 0924 0925 0926 0927 0928 0929 0930 0931 0932 0933 0934 0935 0936 0937 0938 0939 0940 0941 0942 0943 0944 0945 0946 0947 0948 0949 0950 0951 0952 0953 0954 0955 0956 0957 0958 0959 0960 0961 0962 0963 0964 0965 0966 0967 0968 0969 0970 0971 0972 0973 0974 0975 0976 0977 0978 0979 0980 0981 0982 0983 0984 0985 0986 0987 0988 0989 0990 0991 0992 0993 0994 0995 0996 0997 0998 0999 1000


T701 and T801 should be in direct contact with R714 and R814.

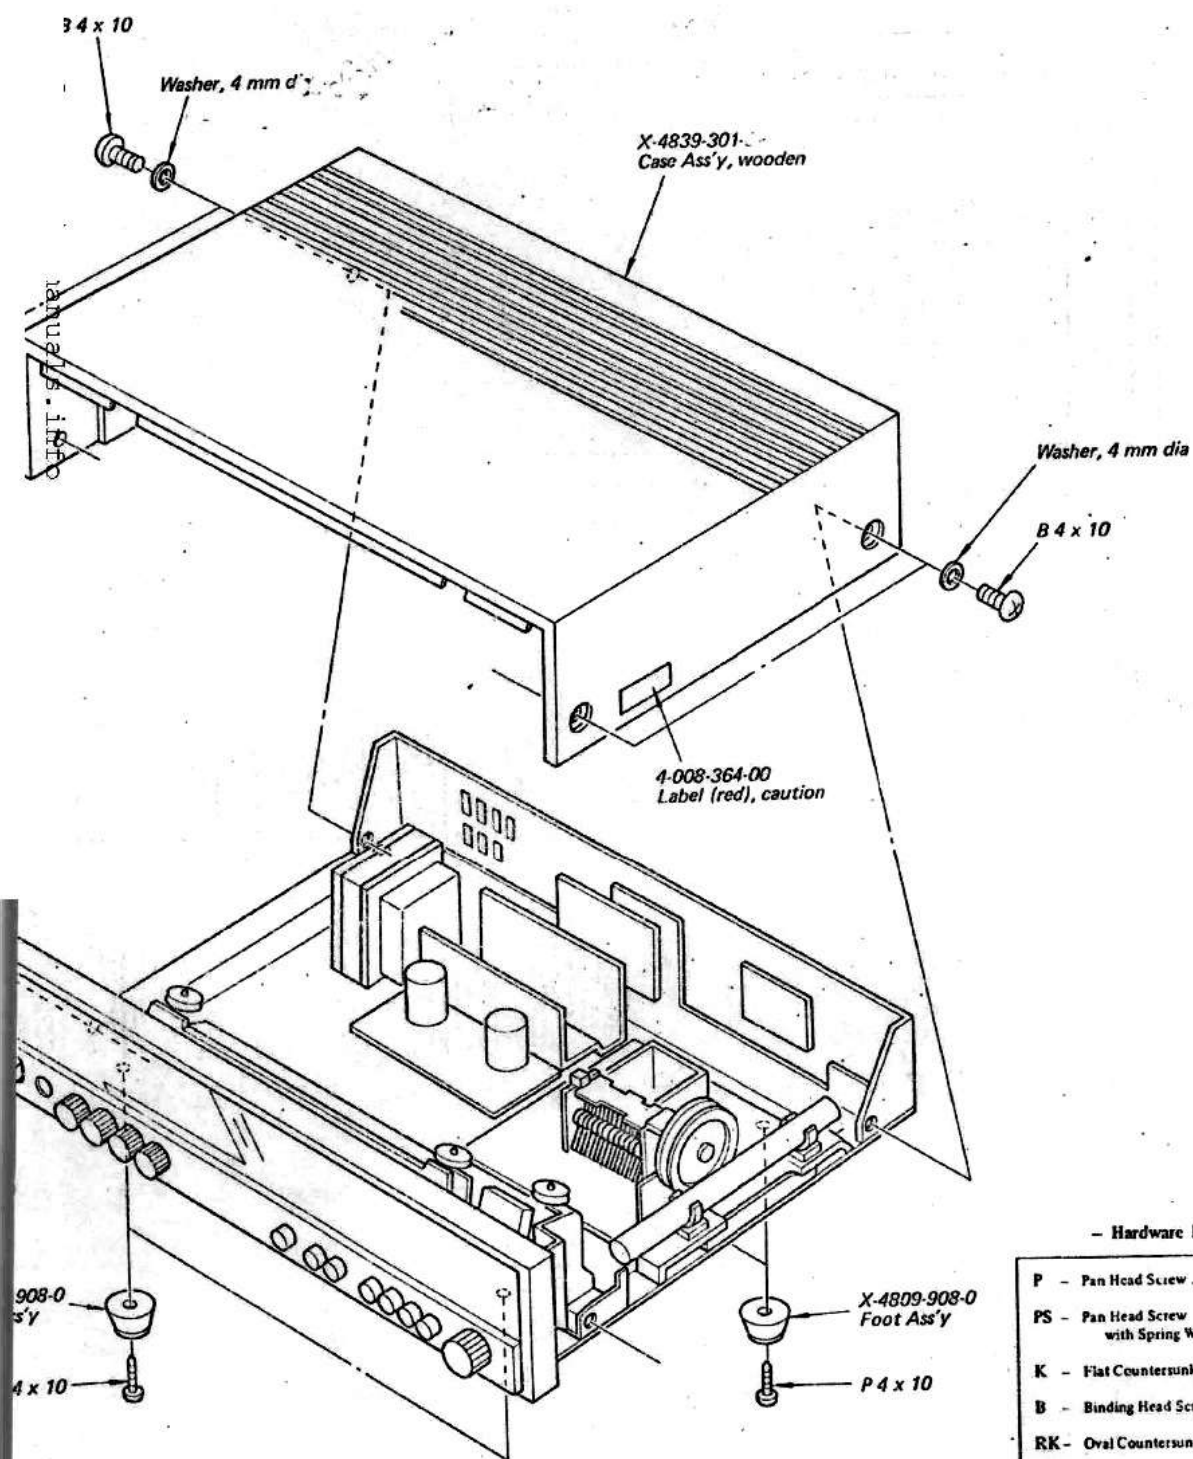

- Hardware Nomenclature -

P	- Pan Head Screw	
PS	- Pan Head Screw with Spring Washer	
K	- Flat Countersunk Head Screw	
B	- Binding Head Screw	
RK	- Oval Countersunk Head Screw	
T	- Truss Head Screw	
R	- Round Head Screw	
F	- Flat Fillister Head Screw	
SC	- Set Screw	
E	- Retaining Ring (E Washer)	
	W - Washer	
	SW - Spring Washer	
	LW - Lock Washer	
	N - Nut	

- Example -



Items without part number and description are not available.

All screws are Phillips (cross recess) type unless otherwise noted.

(-) = slotted head

