


# ICF-SW40

## SERVICE MANUAL

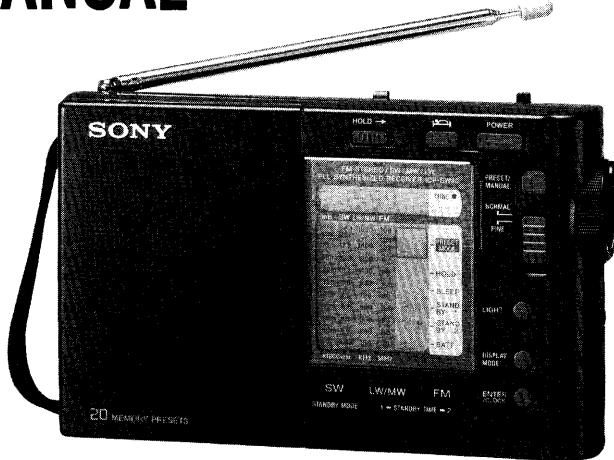

US Model  
Canadian Model  
AEP Model  
UK Model  
E Model  
Australian Model  
Tourist Model

### SPECIFICATIONS

**Circuit system:**

FM: Super heterodyne  
SW/MW/LW: Dual conversion super heterodyne

**Frequency range:**

FM: 76.00-108.00 MHz  
87.50-108.00 MHz<sup>1</sup>  
SW: 3850-26100 kHz  
MW: 530-1620 kHz  
LW: 150-285 kHz

**Intermediate frequency**

FM: 10.7 MHz  
SW/MW/LW: 10.7 MHz (1st)  
450 kHz (2nd)

**Speaker:**

Approx. 66 mm (2 1/4 in.) diameter, 8 Ohms

**Maximum output:**

240 mW (at 10% harmonic distortion)

**Output:**

□ (headphone) jack (stereo minijack) 16 Ohms

**Power requirements:**

DC 4.5 V, three R6 (size AA) batteries

**External power source:**

DC 4.5 V

**Dimensions (w/h/d)**

Approx. 170 x 106 x 35 mm  
(6 1/4 x 4 1/4 x 1 7/16 in.) incl. projecting parts

**Mass:**

Approx. 410 g (14.5 oz.) incl. batteries

**Supplied accessories:**

Carrying case (1)

Shortwave Guide (1)

**Optional accessories:**

AC power adaptor AC-E45 HG<sup>2</sup>  
Car battery cord DCC-E245HG  
SW/MW/LW wide-range antenna  
AN-1, AN-102

Your dealer may not handle all of the above listed optional accessories. Please ask your dealer for detailed information on the optional accessories available in your country.

Design and specifications are subject to change without notice.

<sup>1</sup> For the Italian and Saudi Arabian models only.

<sup>2</sup> The operating voltage for the AC power adaptor's depending upon the country in which it is sold. Therefore, purchase the AC power adaptor in the country you intend to use it.

FM STEREO/SW/MW/LW  
PLL SYNTHESIZED RECEIVER

**SONY**<sup>®</sup>



MICROFILM

## TABLE OF CONTENTS

<b>Section</b>	<b>Title</b>	<b>Page</b>
Specifications .....	1	
Servicing Note .....	2	
<b>1. GENERAL</b>		
Location of Controls .....	3	
Operating the Radio .....	4	
Setting the Standby .....	5	
Setting the Sleep Timer .....	6	
Using Other Functions .....	6	
Setting the Clock .....	6	
<b>2. DISASSEMBLY</b>		
2-1. Cabinet (Rear) Removal .....	7	
2-2. Key Board and Main Board Removal .....	7	
<b>3. ELECTRICAL ADJUSTMENTS</b> .....		
<b>4. EXPLANATION OF IC TERMINALS</b> .....		
<b>5. DIAGRAMS</b>		
5-1. Printed Wiring Boards .....	13	
5-2. Schematic Diagram .....	17	
<b>6. EXPLODED VIEW</b> .....		
<b>7. ELECTRICAL PARTS LIST</b> .....		

## SERVICING NOTE

### Flexible Circuit Board Repairing

- Keep the temperature of the soldering iron around 270 °C during repairing.
- Do not touch the soldering iron on the same conductor of the circuit board (within 3 times).
- Be careful not to apply force on the conductor when soldering or unsoldering.

### Notes on chip component replacement


- Never reuse a disconnected chip component.
- Notice that the minus side of a tantalum capacitor may be damaged by heat.

## Features

- FM stereo/SW/MW/LW portable receiver with worldwide band coverage
- Quartz-controlled PLL (Phase Locked Loop) synthesizer system using a microcomputer for easy pinpoint tuning
- Presetting of up to 20 stations for quick tuning
- Dual timer standby function to receive your favorite broadcast at the desired time
- Sleep timer to turn the radio off automatically after a specified number of minutes
- FM stereo reception through stereo headphones (not supplied)

### • HOW TO CHANGE THE CERAMIC FILTERS


This model is used two ceramic filters of CF2, CF4. You must use same type of color marked ceramic filters in order to meet same specifications. Therefore, the ceramic filter must change two pieces together since it's supply two pieces in one package as a spare parts.

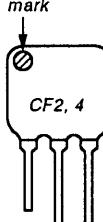	Mark	Center frequency
	red	10.70MHz
	blue	10.67MHz
	orange	10.73MHz
	black	10.64MHz
	white	10.76MHz

## SECTION 1 GENERAL


### 1-1. LOCATION OF CONTROLS

**Front, Right Side**

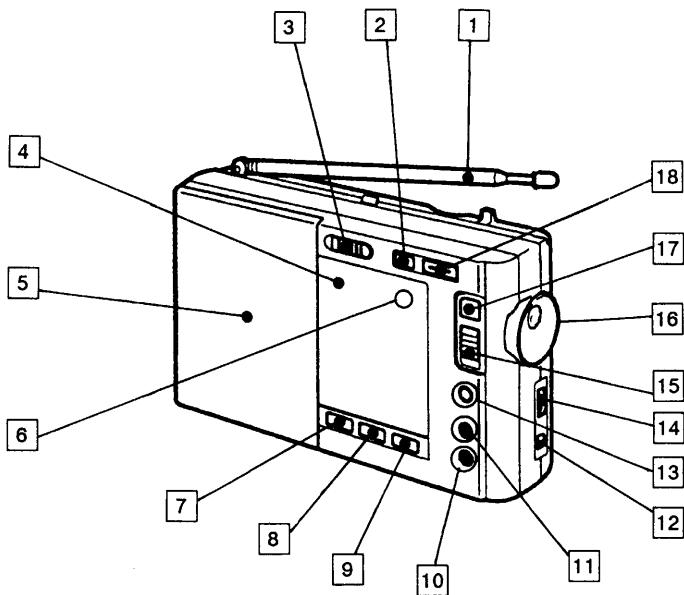

- [1] Telescopic antenna
- [2] SLEEP button
- [3] HOLD → button
- [4] Display window
- [5] Speaker
- [6] TUNE (tuning) indicator
- [7] SW button
- [8] LW/MW button
- [9] FM button
- [10] ENTER /CLOCK button
- [11] DISPLAY MODE button
- [12] TONE (NEWS ↔ MUSIC) selector knob
- [13] LIGHT button
- [14] VOL knob
- [15] NORMAL /FINE selector knob
- [16] TUNING/TIME ADJ knob
- [17] PRESET/MANUAL button
- [18] POWER ON/OFF button

**Rear, Left Side**

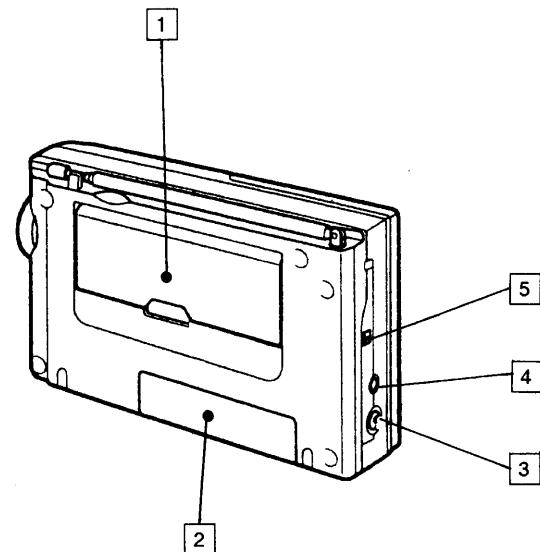

- [1] Stand
- [2] Battery compartment
- [3] DC IN 4.5V (external power input) jack
- [4] (phones) jack (stereo mini)
- [5] SENS (DX ↔ LOCAL) knob

## Operating the Radio

Before operating the radio, make sure of your location. If in North or South America, the MW Channel Step must be changed.

- Refer to "Changing the MW Channel Step" when changing the MW tuning frequency step.

### Manual tuning

- 1 Press **POWER** to turn on the radio.
- 2 Press either **SW**, **LW/MW**, or **FM** to select the desired band.  
Each time **SW** is pressed, the indicator moves up one meter band.
- 3 Turn the **TUNING/TIME ADJ** control to tune in the desired station.  
The indicator moves in accordance with the frequency number, enabling you to use it to select the station.  
When a broadcast is received, the red **TUNE** lamp is illuminated.
- 4 Turn the **VOL** control to adjust the volume.

To turn off the radio, press **POWER**.

### About tuning step

The frequency step employed by the **TUNING/TIME ADJ** control to tune in stations can be changed with the **NORMAL/FINE** selector. The selector should usually be set to **NORMAL**. Switching to **FINE** permits finer tuning.

**NORMAL:** The tuning step is 9 kHz for LW, 9 kHz (or 10 kHz) for MW and 5 kHz for SW. The step for FM is 0.1 MHz. The steps widen when the control is turned quickly.

**FINE:** The tuning step for LW/MW and SW is 1 kHz, and that for FM is 0.05 MHz. The steps widen when the control is turned quickly.

- To enjoy FM stereo reception, plug the stereo headphones to the  $\ominus$  (headphones) jack.
- When listening to news, set the **TONE** selector to **NEWS** for optimum results. Vocal output will be sharper and clearer. When listening to music, set it to **MUSIC** for optimum results.
- When interference is prevalent during reception, set the **SENS DX•LOCAL** selector to **LOCAL**. Under normal conditions, set it to **DX**.
- Reception of around 10250 kHz and 20500 kHz may be difficult because of extraneous internal signals generated by the built-in oscillators.

### Preset tuning


This unit is factory-preset with 20 stations. You can preset up to 20 stations by assigning your favorite stations to the preset numbers 0 to 19.

#### Presetting stations


- 1 Manually tune in the station you wish to preset.  
Refer to "Manual tuning" for more details.




- 2 Press and hold **ENTER/CLOCK** until you hear a beep and the preset number starts flashing.

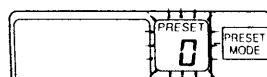

- 3 Turn the **TUNING/TIME ADJ** control until the preset number (0 to 19) under which you wish to store the selected station to is displayed.

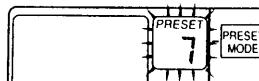

- 4 Press **ENTER/CLOCK**.  
A double-beep sounds and the preset number stops flashing.

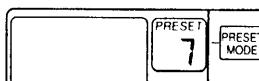

#### To change the preset station

Follow the same procedure to store a new station to the selected preset number. The previous preset station is overwritten by the new preset station.


- When either **SW**, **LW/MW**, or **FM** is pressed in the preset tuning mode, the unit enters the manual tuning mode.
- To interrupt and cancel presetting, press **PRESET/MANUAL**. The unit will return to the manual tuning mode.
- When about 60 seconds elapse with no operation while the preset number is flashing, the unit will return to the previous indication.

#### Tuning in a preset station

- 1 Press **POWER** to turn on the radio.
- 2 Press **PRESET/MANUAL** if the unit is in the manual tuning mode to enter the preset tuning mode, as necessary.
- 3 Turn the **TUNING/TIME ADJ** control to display the preset number to which the desired station is assigned.
- 4 Turn the **VOL** control to adjust the volume.

#### Deleting a preset station

- 1 Press **POWER** to turn on the radio.
- 2 Press **PRESET/MANUAL** if the unit is in the manual tuning mode to enter the preset tuning mode, as necessary.
- 3 Turn the **TUNING/TIME ADJ** control to display the preset number to which the station you wish to delete is assigned.
- 4 Depress **ENTER/CLOCK** for more than three seconds.  
After **ENTER/CLOCK** is depressed for about one second, a beep sounds and the preset number starts flashing. Release **ENTER/CLOCK** when you hear another beep and the frequency display changes to a flashing "dEL".

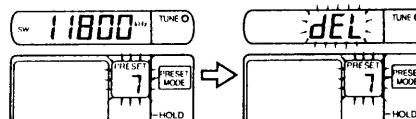

- 5 Press **ENTER/CLOCK** until a long beep sounds.

- If about 60 seconds elapse with no operation while the preset number and "dEL" are flashing, the unit will return to the previous mode.
- A preset number that has been deleted can be assigned a new station for preset tuning. Refer to "Presetting stations" for more details.
- If all preset numbers 0 to 19 have been deleted and you attempt to enter the preset tuning mode, "----" appears in the frequency display, and "PRESET" flashes for about three seconds. The unit then returns to the manual tuning mode.

## Changing the MW Channel Step

This radio's frequency channel step in the MW band is set at 9 kHz when it is shipped from the factory. Since the broadcasting channel step in North and South America is 10 kHz, however, the channel step should be changed when listening in countries in these regions.

Area	Channel step
North/South America	10 kHz
Other countries	9 kHz

#### To change the channel step

- 1 Press **POWER**.
- 2 Press **LW/MW** to receive LW/MW broadcasting.
- 3 Press **LW/MW** until a double-beep sounds.


The tuning step indication "10 kHz" or "9 kHz" appears, and the display returns to the former frequency indication.



## Improving reception

### For FM reception

Gently pull out the telescopic antenna and adjust the length, angle and direction to obtain optimum reception.

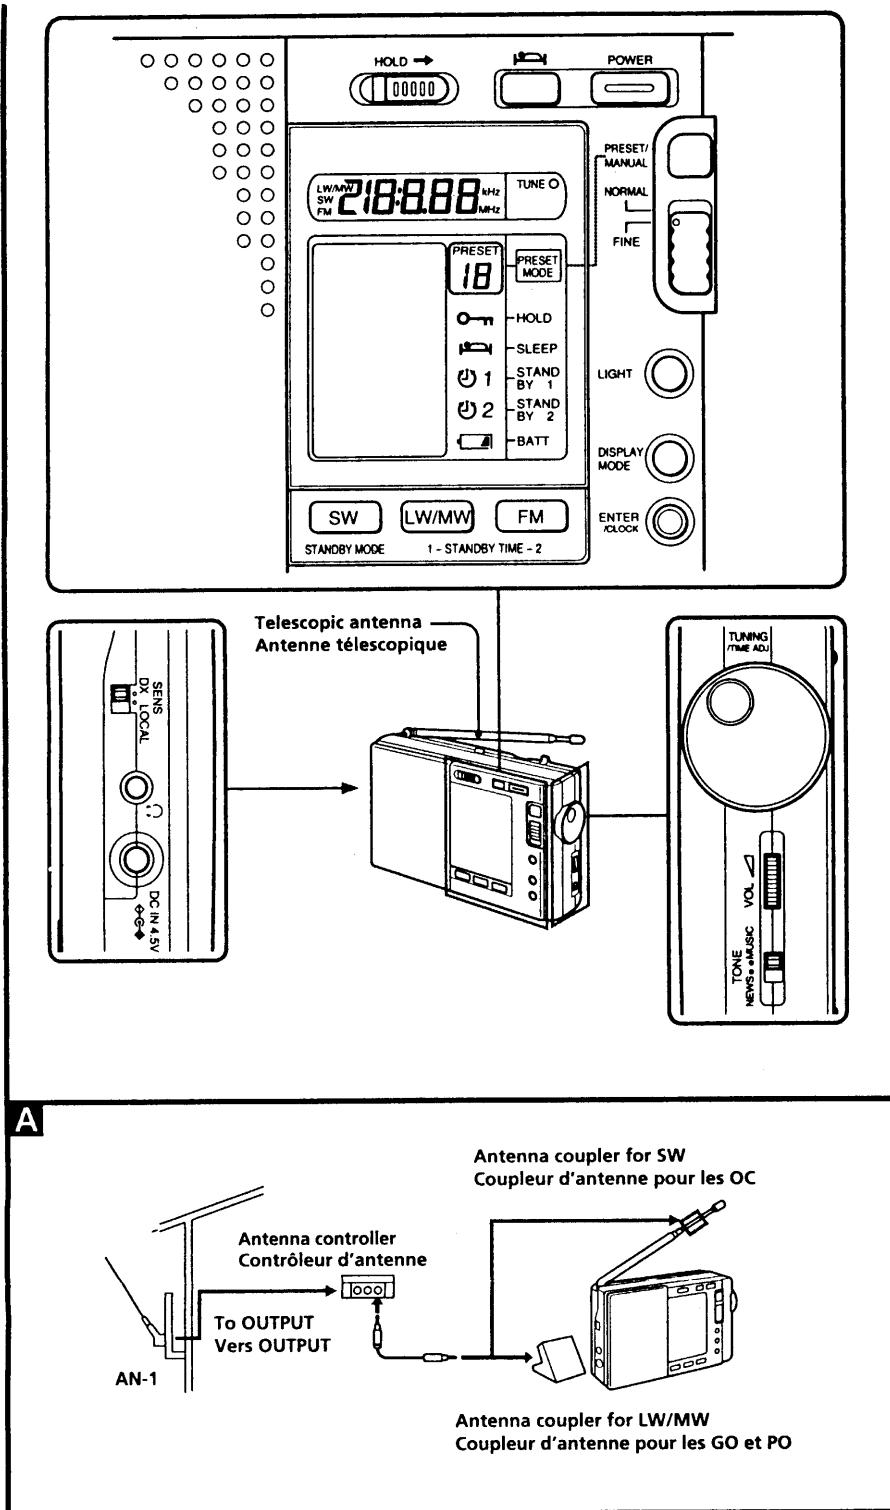

#### For LW/MW reception

Retract the telescopic antenna and rotate the unit to reorient the built-in ferrite bar antenna to obtain optimum reception.

#### For SW reception

Gently pull out the telescopic antenna to its full length and set it vertically to obtain optimum reception.

#### Using an external antenna for SW and LW/MW reception (see Fig. A)

Use a wide-range antenna AN-1 or AN-102 (not supplied).

**1** Use the connecting cord to connect the antenna controller **OUTPUT** jack to the antenna coupler **INPUT** jack.

**2** For SW reception, attach the antenna coupler to the telescopic antenna.

For LW/MW reception, position the antenna coupler near the unit, where LW/MW reception is optimal.

- Keep the unit and antenna away from fluorescent lights, televisions, computers, and other equipment which may generate noise.

- Retract the telescopic antenna when using an external antenna.

- Set up the external antenna as far away from the street as possible.


- For more details on the external antenna, refer to the antenna Operating Instructions.

## Setting the standby

You can turn on the radio and tune in your favorite station at the desired time with the dual standby function (Standby 1 and Standby 2). Before you set the standby, assign the station to which you wish to listen at the desired time for Standby 1 to preset number 1. Similarly, assign the station to which you wish to listen at another desired time for Standby 2 to preset number 2. Refer to "Presetting stations" for more details.

**1** If the radio is operating, press **DISPLAY MODE** to display the clock.

**2** Press **LW/MW•STANDBY TIME 1** for Standby 1 and **FM•STANDBY TIME 2** for Standby 2 for more than one second until you hear a beep. In this display mode, the hour and "S1" (or "S2") start flashing.

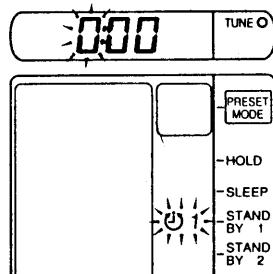

**3** Turn the **TUNING/TIME ADJ** control until the desired hour is displayed.

**4** Press **LW/MW•STANDBY TIME 1** (or **FM•STANDBY TIME 2**) to set the desired minute.

5 Turn the **TUNING/TIME ADJ** control until the desired minute is displayed.

6 Press **LW/MW•STANDBY TIME 1** (or **FM•STANDBY TIME 2**)

The minute stops flashing, and a few seconds later, “**① 1**” (or “**② 2**”) stops flashing and remains in the display while the unit returns to the clock display.

#### To set/cancel standby mode or confirm the standby time

Each time **STANDBY MODE** is pressed, the display changes in the following order.

**① 1 \*** → **② 2 \*** → **① 1 ② 2** → **(None)**

\* The display will be flashing initially. Only while the display is flashing, the preset standby time will be displayed to allow checking of the standby time for Standby 1 or Standby 2.

• When the standby time arrives and standby is activated, the radio turns on. The unit will then turn off automatically after 60 minutes. To turn off the radio before 60 minutes have elapse, press **POWER**.

• When you have set Standby 1 and Standby 2, and a second preset standby time arrives while the first standby function is operating, the most recent standby function will have priority over the other and tune in the appropriate station.

• When identical standby times are set for Standby 1 and Standby 2, only Standby 1 is operational.


• To cancel the standby function temporarily, slide **HOLD** to the right to display “**—**” while the radio is turned off. When the hold function is canceled and “**—**” disappears, the standby function is operational.

#### Activating the buzzer

To activate the buzzer instead of the radio at the desired time, delete the station assigned to either preset number 1 or preset number 2 as necessary. Refer to “Deleting a preset station” for further details.

To stop the buzzer, press any button. The buzzer will sound continuously for about 60 minutes if no button is pressed.

• The buzzer volume is not adjustable.

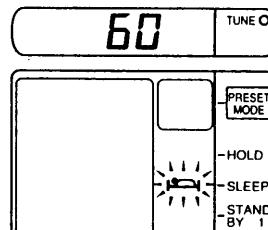

2 Press **◀** repeatedly to select the desired duration for the sleep timer.

60 (minutes) → 30 → 15

After about three seconds, the unit returns to the frequency display.  
The sleep timer is operational.


- To reset or extend the duration, press **◀** and select the desired duration as shown in step 2.
- To turn off the radio before the selected duration elapses, press **POWER**.

## Using other functions

#### Hold function

When the hold function is used, neither the buttons nor the **TUNING/TIME ADJ** control are operational. Use the hold function to prevent accidental operation. The hold function can also be used to cancel the standby function temporarily.

1 Slide **HOLD** in the direction of the arrow. “**—**” appears on the display and all buttons and the **TUNING/TIME ADJ** control cease to be operational.

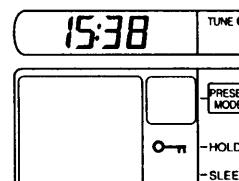

- To cancel the hold function, slide **HOLD** to the left.

#### To cancel the standby function temporarily

Slide **HOLD** to the right to display “**—**” while the radio is turned off. When the hold function is canceled and “**—**” disappears, the standby function is operational.

- When the hold function is used, the display is not illuminated.

#### Light function

Press **LIGHT** to turn on the light for about 15 seconds to view the display in the dark.

- If any function on the unit is performed during the light on, the light continues to turn on for longer than 15 seconds.

## Setting the Clock

Set the time after you first install the batteries at which time “0:00” flashes.

- The clock is displayed in 24-hour indication. (Midnight: 0:00; noon: 12:00)
- See the map on the back of the radio for the names of representative cities throughout the world and the time differences separating them.

1 Press and hold **ENTER/CLOCK** for more than one second until you hear a beep and the hour starts flashing.



2 Turn the **TUNING/TIME ADJ** control until the correct hour is displayed.



3 Press **ENTER/CLOCK** again to set the minute. A beep sounds and the minute starts flashing.



4 Turn the **TUNING/TIME ADJ** control until the correct minute is displayed.



5 Press **ENTER/CLOCK**.

A double-beep sounds and the minute stops flashing. The colon “:” starts flashing and the clock operates.



- When listening to the radio, press **DISPLAY MODE** to display the clock and set the time.
- To set the clock accurately, press **ENTER/CLOCK** as instructed in step 5 at the time of the tone.
- If about 60 seconds elapse with no operation, the clock setting will be aborted and the unit will return to the previous mode. In this case, repeat the procedure from step 1 to complete the clock setting.

#### To cancel the clock setting

Press **DISPLAY MODE**. The unit will return to the previous mode.


#### To display the clock

Press **DISPLAY MODE** while the radio is operating. The clock is displayed for about 1 minute. Pressing the button again returns the display to the frequency indication.


## SECTION 2 DISASSEMBLY

Note : Follow the disassembly procedure in the numerical order given.

### 2-1. CABINET (REAR) REMOVAL

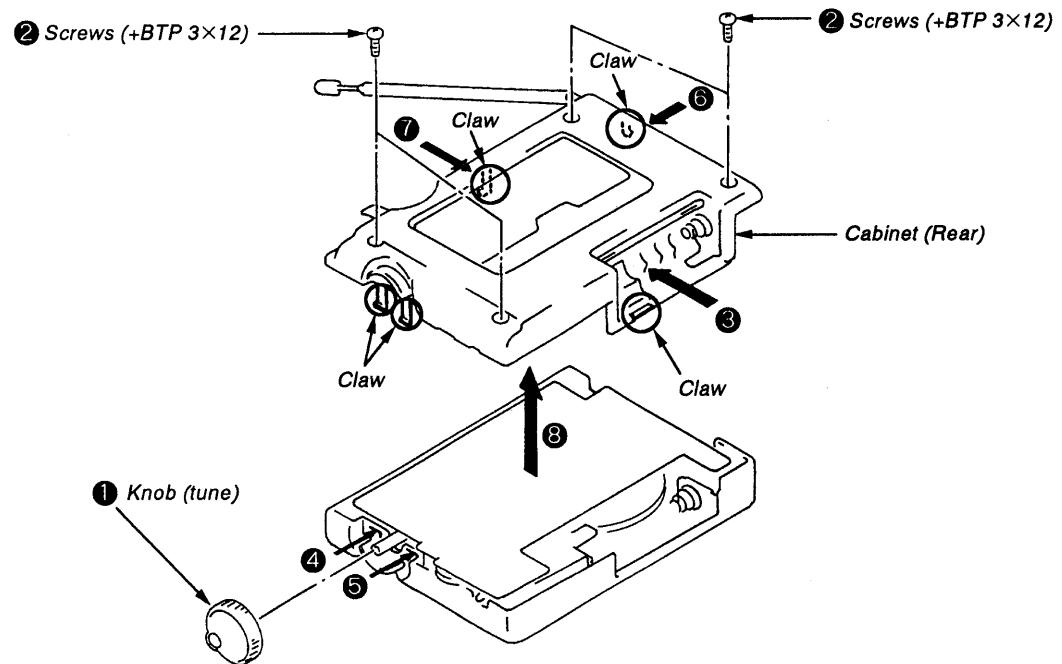


### 2-2. KEY BOARD AND MAIN BOARD REMOVAL

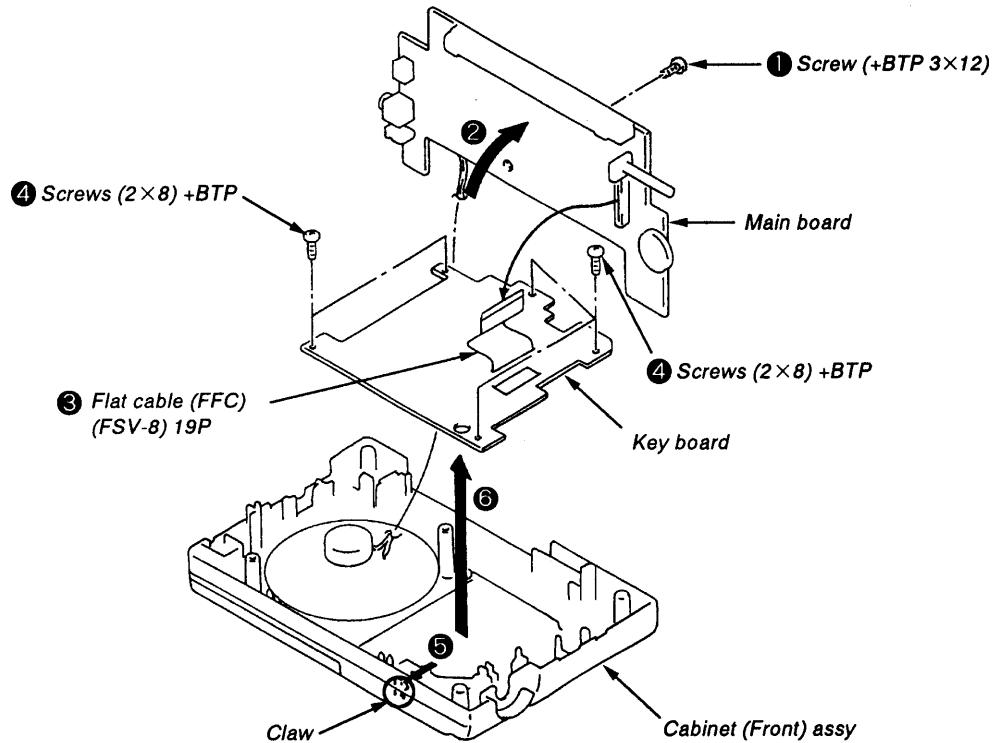


## SECTION 3 ELECTRICAL ADJUSTMENTS

### AM SECTION

LW :

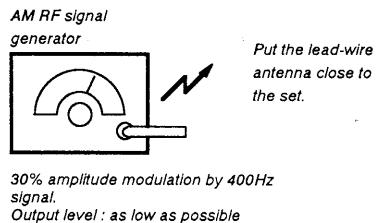

SW :

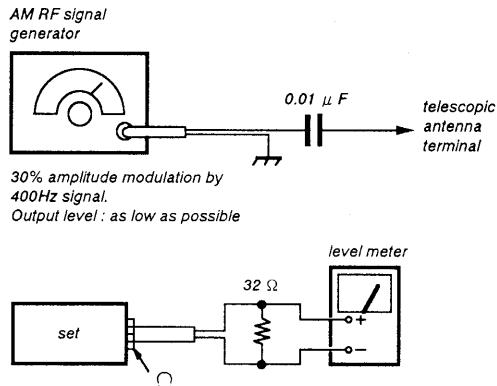


### VCO Voltage Adjustment

Setting :

VOLUME : maximum  
BAND : LW/SW  
SENS : DX  
TONE : MUSIC

### [MAIN BOARD] (Conductor Side)

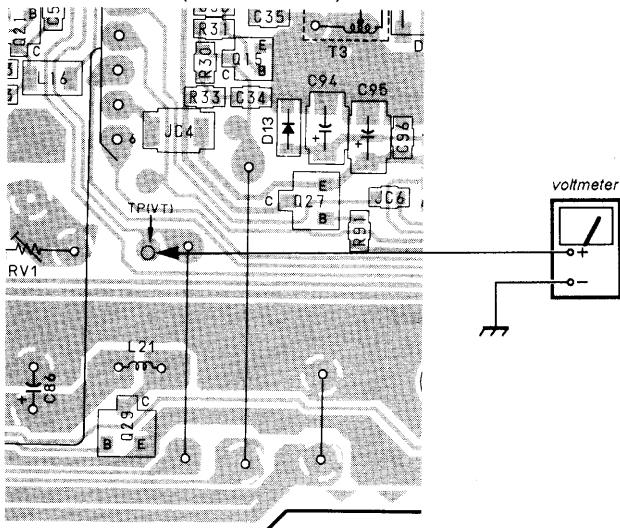


### AM IF Adjustment

Setting :

VOLUME : maximum

BAND : SW

### [MAIN BOARD] (Conductor Side)

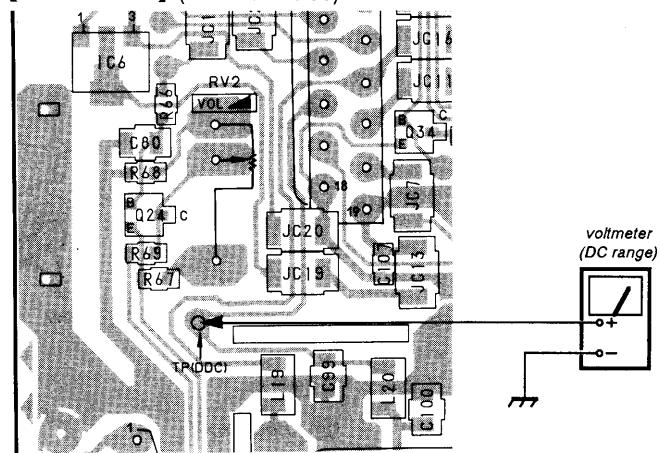




### Procedure :

1. Set the frequencies of the AM RF SG and the frequency display of the set to SW 3,850kHz.
2. Confirm that the voltage reading on the voltmeter is 11.5 – 14.5V.
3. Adjust T1 and T4 maximum output level.

### Procedure :

1. Tune the set to LW 150kHz.
2. Adjust T3 to obtain a 1.1 – 1.3V on the voltmeter.
3. Tune the set to SW 261,000kHz.
4. Confirm that the voltage reading on the voltmeter is 7.0 – 9.0V.

## SECTION 4 IC TERMINALS

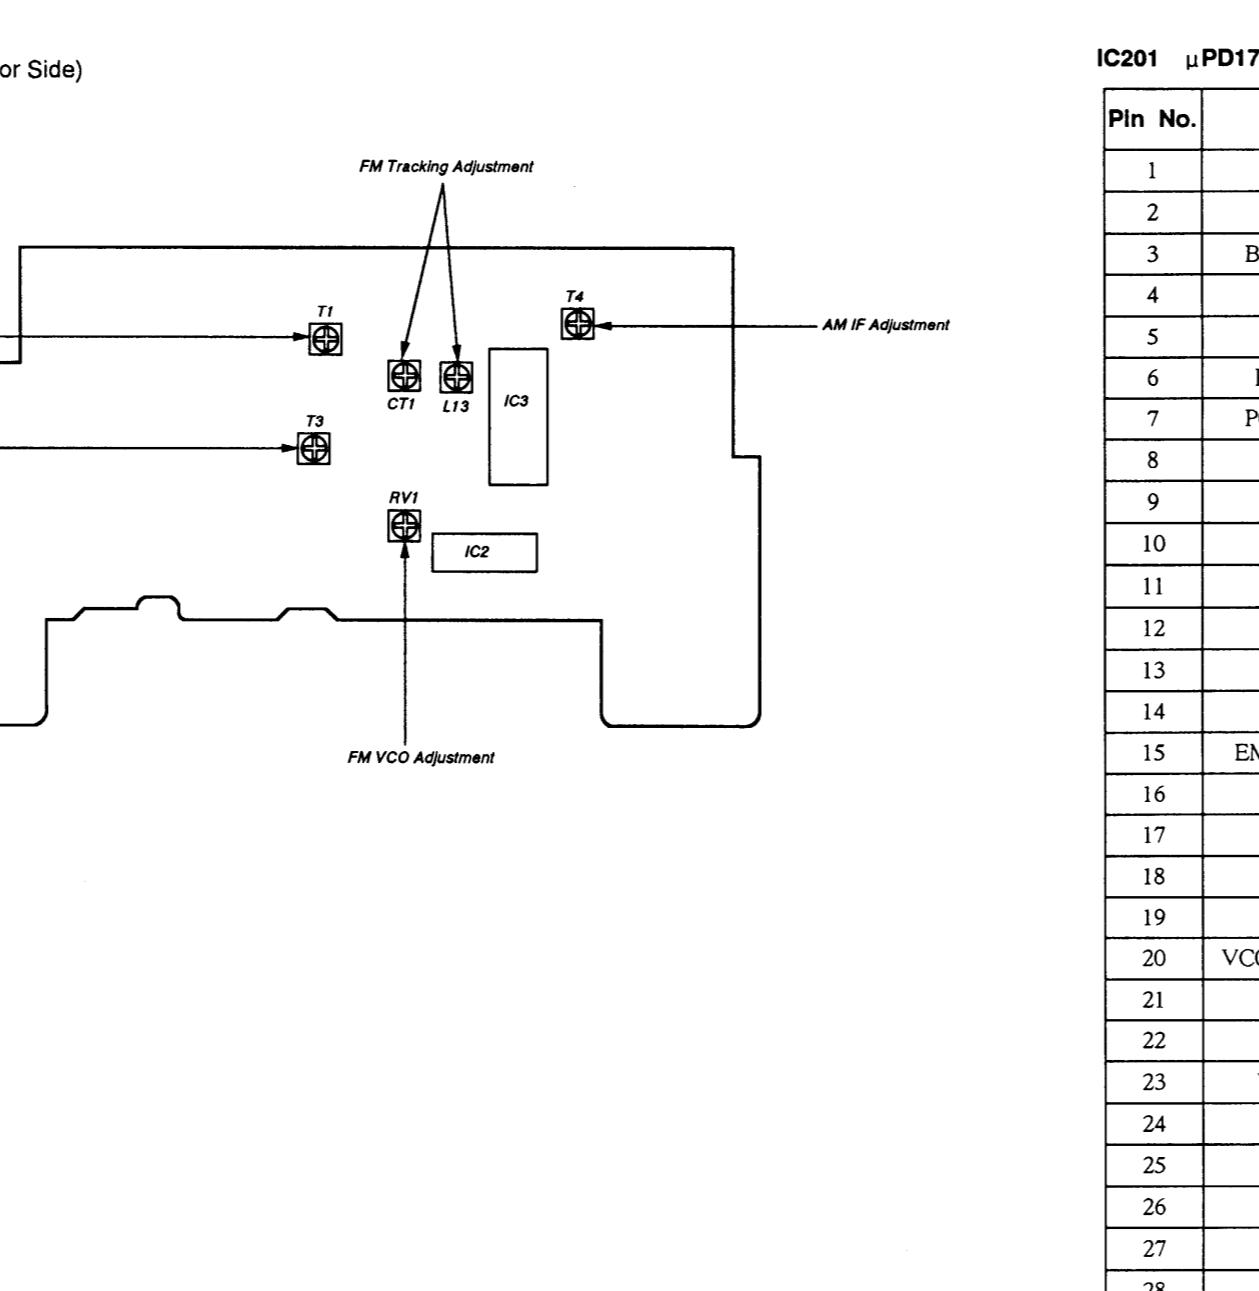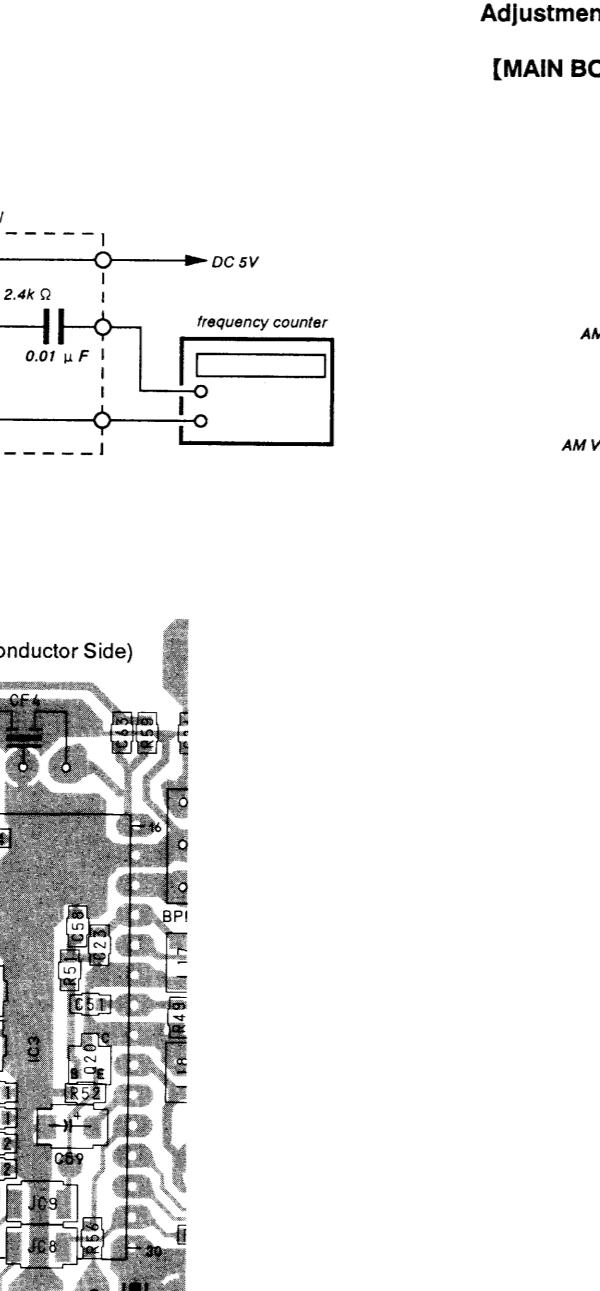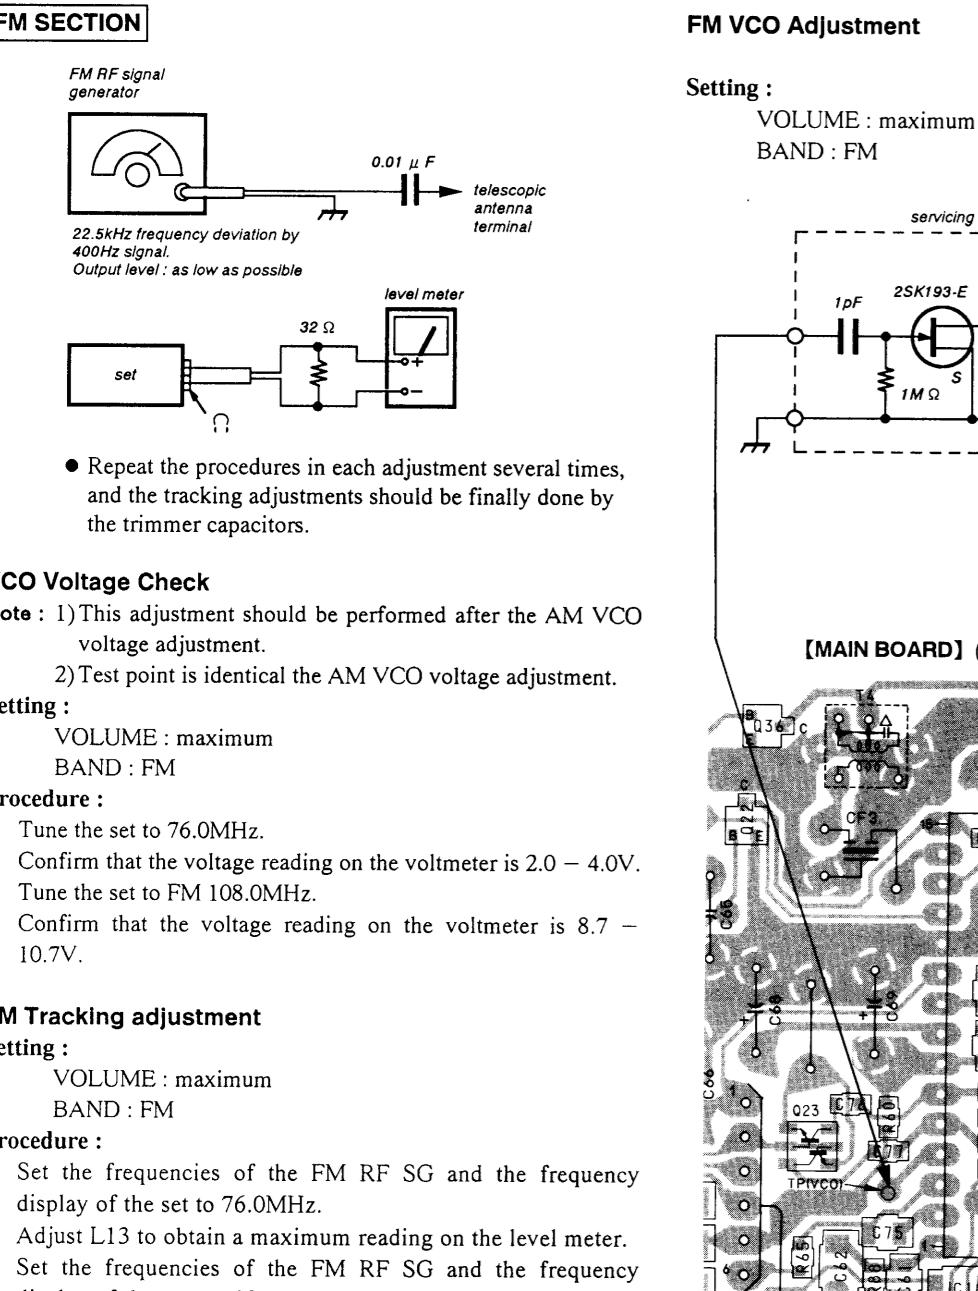

Name	I/O	Description
ME	O	Timing signal output for key matrix.
OD	O	Antenna select switch. ("H" : Ferrite-Rod "L" : Telescope)
M/AM)	O	Band select switch. ("H" : AM, "L" : FM)
E	O	Frequency select switch. ("H" : HI, "L" : Low)
AUDIO	O	Mute signal output. ("L" : MUTE)
TUNER	O	Audio power ON. ("H" : Audio ON)
C	O	Tuner power ON. ("H" : Tuner ON)
S	O	Timing signal output for key matrix.
S	O	Timing signal output for key matrix.
KE	I	Key return input.
2	I	Key return input.
3	I	Key return input.
KE	I	Destination select signal input.
M	O	Destination select signal output. ("H" : output)
-DATA	I	Rotary encoder data input B.
NT B	O	Segment select output A. ("H" : OFF)
NT A	O	Segment select output B. ("H" : OFF)
D	-	Ground.
	O	PLL signal output.
MW/SW)	I	AM VCO input.
FM)	I	FM VCO input.
2	O	Connected to the regulator circuit capacitor. (PLL)
V IN)	-	Power supply 2V.
	O	Connected to the liquid crystal oscillator.
	I	Oscillator 75KHz liquid crystals.
5	O	Connected to the regulator circuit capacitor. (oscillator)
3	-	Power supply for liquid crystal display drive.
1	-	Power supply for liquid crystal display drive.
2	-	Power supply for liquid crystal display drive.
4	-	Power supply for liquid crystal display drive.
0	O	Liquid crystal display common signal output.
11	O	Liquid crystal display common signal output.
12	O	Liquid crystal display common signal output.
13	O	Liquid crystal display common signal output.
0	O	Liquid crystal display segment signal output.

In No.	Pin name	I/O	Description
36	LCD1	O	Liquid crystal display segment signal output.
37	LCD2	O	Liquid crystal display segment signal output.
38	LCD3	O	Liquid crystal display segment signal output.
39	LCD4	O	Liquid crystal display segment signal output.
40	LCD5	O	Liquid crystal display segment signal output.
41	LCD6	O	Liquid crystal display segment signal output.
42	LCD7	O	Liquid crystal display segment signal output.
43	LCD8	O	Liquid crystal display segment signal output.
44	LCD9	O	Liquid crystal display segment signal output.
45	LCD10	O	Liquid crystal display segment signal output.
46	LCD11	O	Liquid crystal display segment signal output.
47	LCD12	O	Liquid crystal display segment signal output.
48	LCD13	O	Liquid crystal display segment signal output.
49	LCD14	O	Liquid crystal display segment signal output.
50	CE	I	Reset signal input. ("L" : Reset)
51	ENCODER-CLOCK	I	Rotary encoder data input A.
52	BEEP	O	Beep signal output.
53	VDET	I	Voltage detect.
54	LIGHT	O	Light signal output. ("H" : ON)
55	HOLD	I	Hold switch signal input. ("H" : Unhold, "L" : Hold)
56	DIAL STEP	I	Dial speed select switch input. ("H" : Fast, "L" : Slow)

## **5-1. PRINTED WIRING BOARD**

Ref. No.	Location	Ref. No.	Location
D1	D - 23	Q8	D - 20
D2	C - 21	Q10	F - 19
D3	C - 19	Q11	D - 21
D4	C - 19	Q12	E - 19
D5	C - 18	Q13	E - 19
D6	D - 18	Q14	D - 19
D7	D - 18	Q15	E - 17
D8	E - 18	Q16	E - 17
D9	D - 12	Q17	D - 18
D10	E - 17	Q18	D - 17
D11	D - 17	Q19	D - 17
D12	D - 16	Q20	D - 15
D13	E - 18	Q21	E - 16
D14	H - 13	Q22	C - 13
D15	G - 13	Q23	E - 14
D16	H - 23	Q24	F - 12
D17	G - 22	Q25	E - 23
D18	G - 20	Q26	E - 19
D201	G - 4	Q27	F - 18
D202	H - 4	Q28	G - 20
D203	B - 8	Q29	G - 17
D204	C - 5	Q30	G - 20
		Q31	H - 13
		Q32	H - 13
IC1	F - 18	Q33	G - 20
IC2	F - 15		
IC3	D - 15	Q34	F - 13
IC4	D - 12	Q35	E - 19
IC5	E - 12	Q36	C - 13
		Q201	G - 6
IC6	E - 11	Q202	F - 6
IC201	E - 7		
IC202	D - 7	Q203	F - 6
IC203	C - 7	Q204	D - 4
IC204	G - 4	Q205	G - 7
		Q206	G - 8
		Q207	C - 8
Q2	C - 20		
Q3	C - 18	Q208	F - 8
Q4	C - 16		
Q5	E - 20		
Q6	E - 20		

**Note:**

- ○— : parts extracted from the component side.
  - ——— : parts extracted from the conductor side.
  - Δ : internal component.
  - ⚡⚡⚡ : Pattern from the side which enables seeing.  
(The other layers' patterns are not indicated)

**Caution :**


**Pattern face side :** Parts on the pattern face side seen from (Conductor Side) the pattern face are indicated.  
**Parts face side :** Parts on the parts face side seen from the (Component side) parts face are indicated.

- Abbreviation

IT : Italian


EA : Saudi Arabia

JE : Tourist

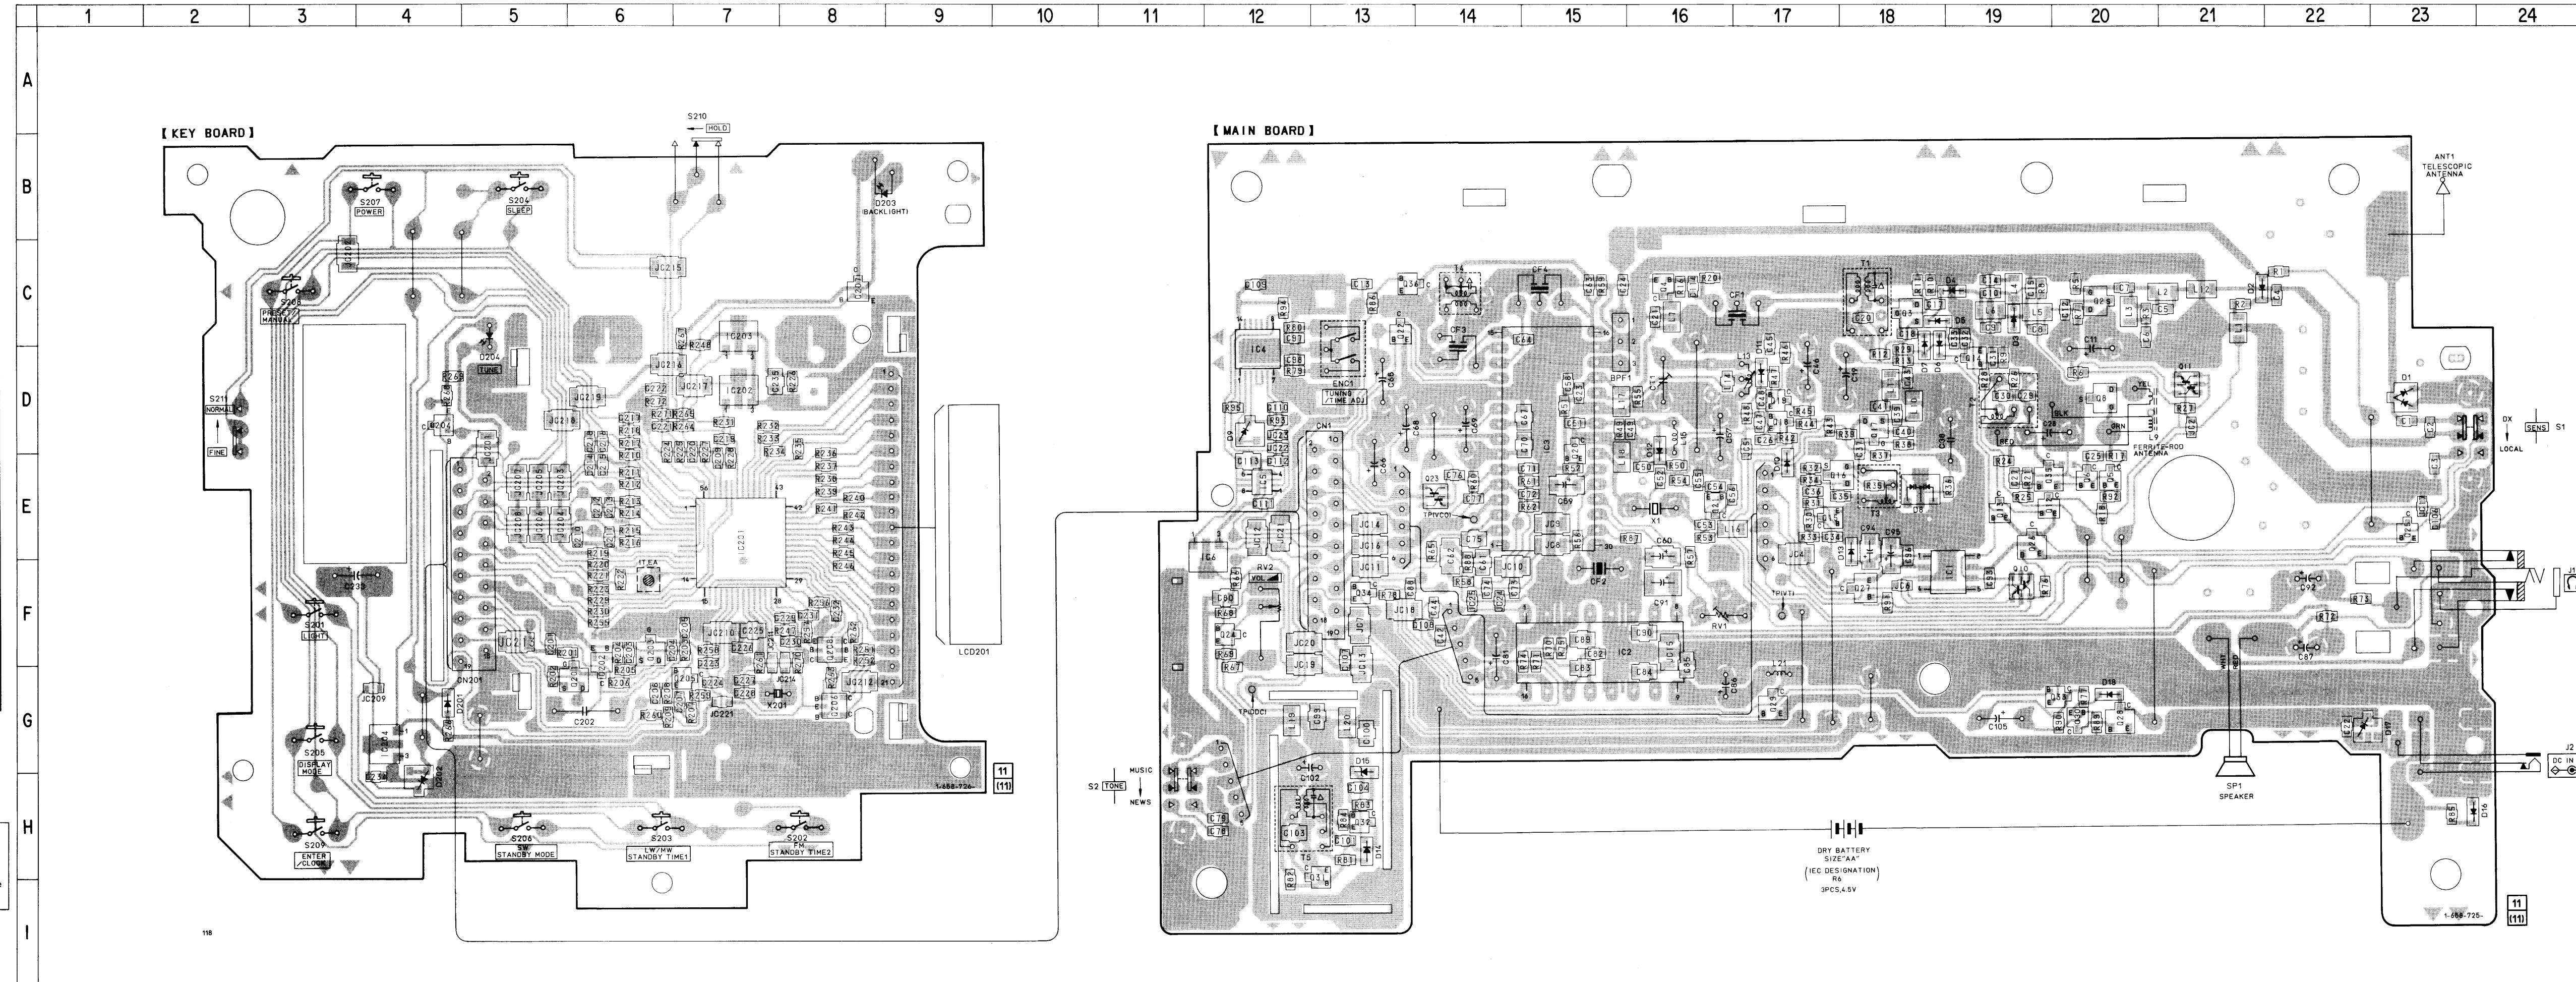


## 5-2. SCHEMATIC DIAGRAM

• Refer to page 21 for IC Block Diagrams.

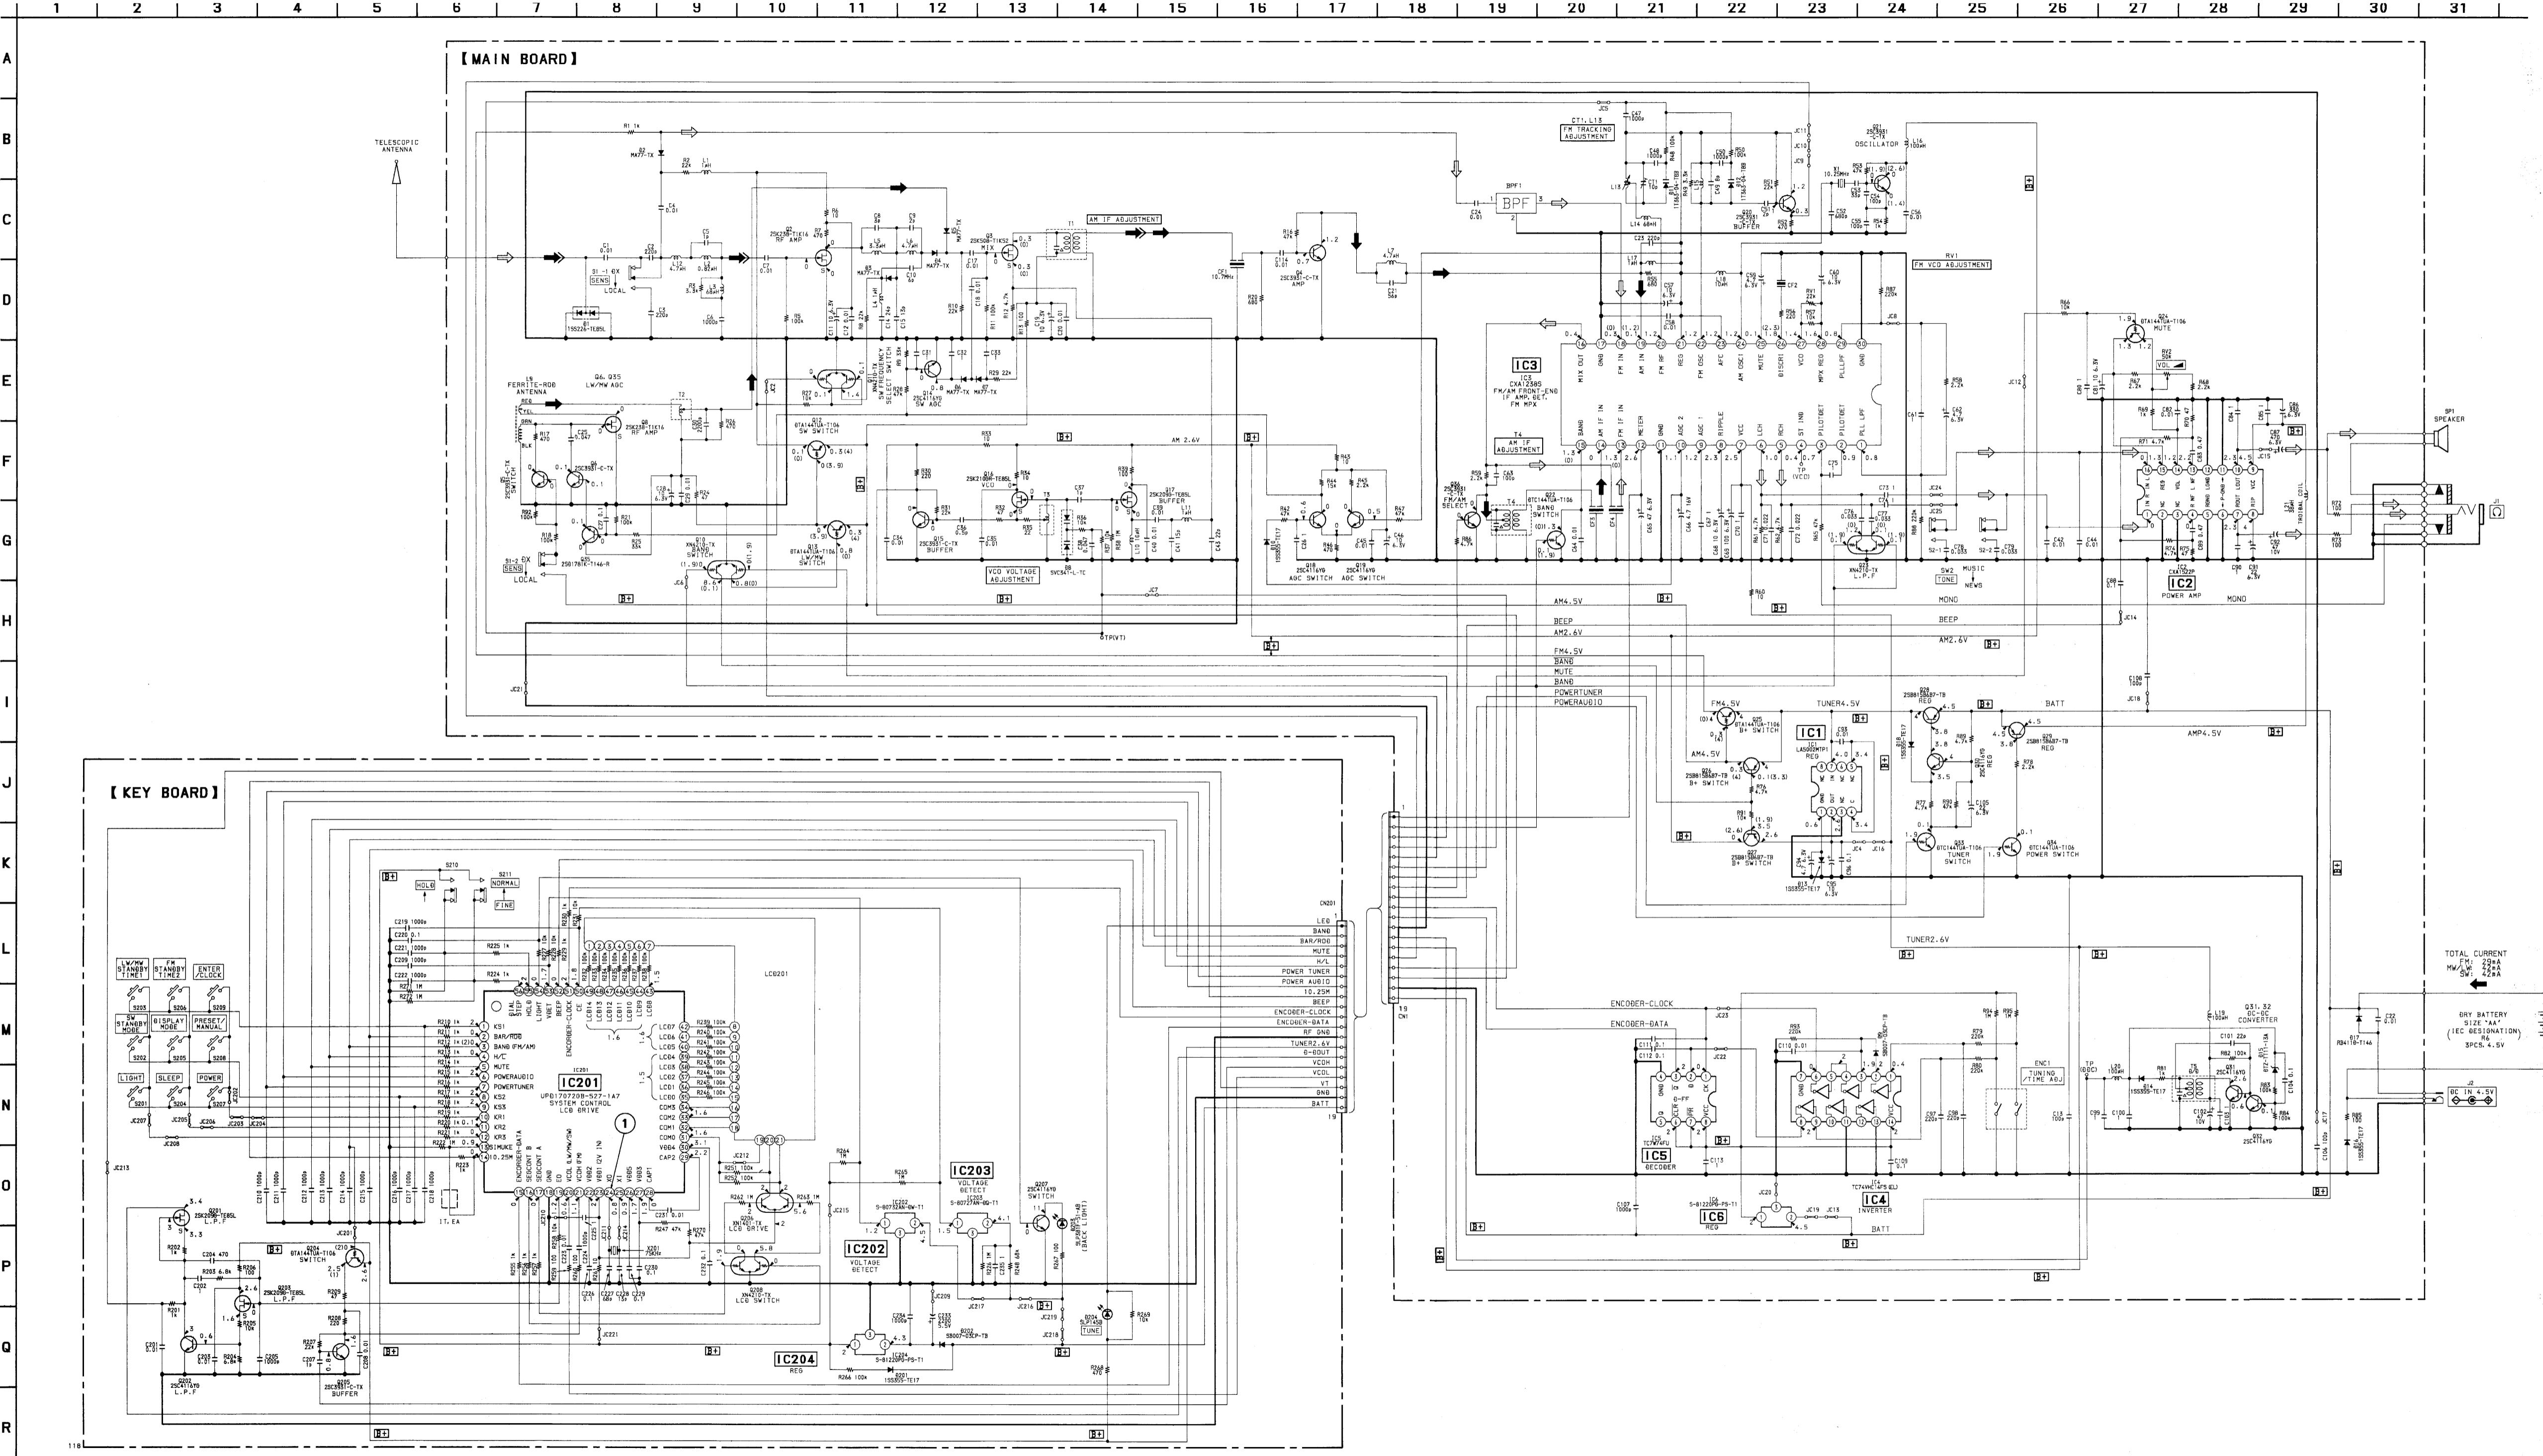


● IC BLOCK DIAGRAMS


IC1 LA5002M

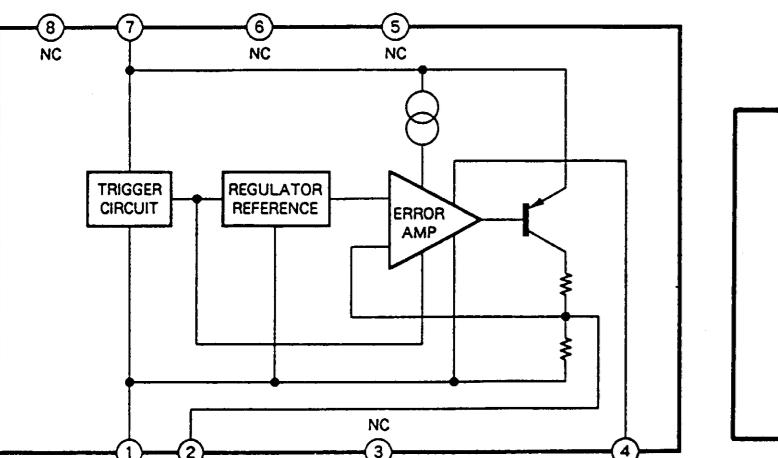


IC2 CXA1522P

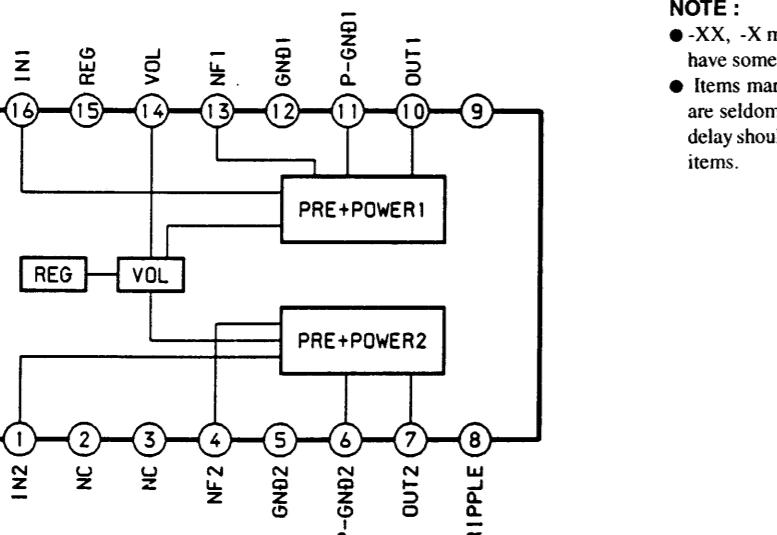

IC3 CXA1238S

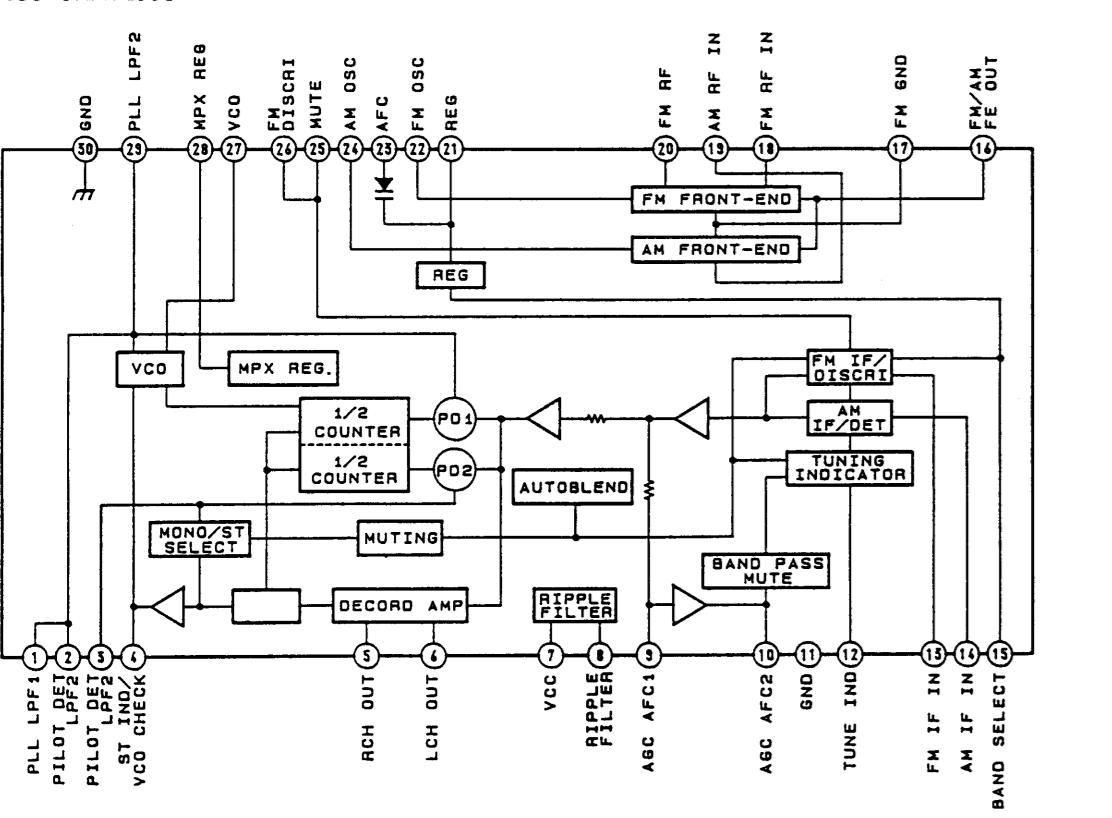


IC5 TC7W74FU

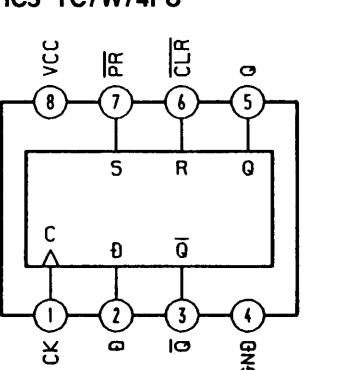

16 3-371-765-21 SCREW (2X8), +BTP

SECTION 6  
EXPLODED VIEW

SEE ADDITIONAL INFORMATION

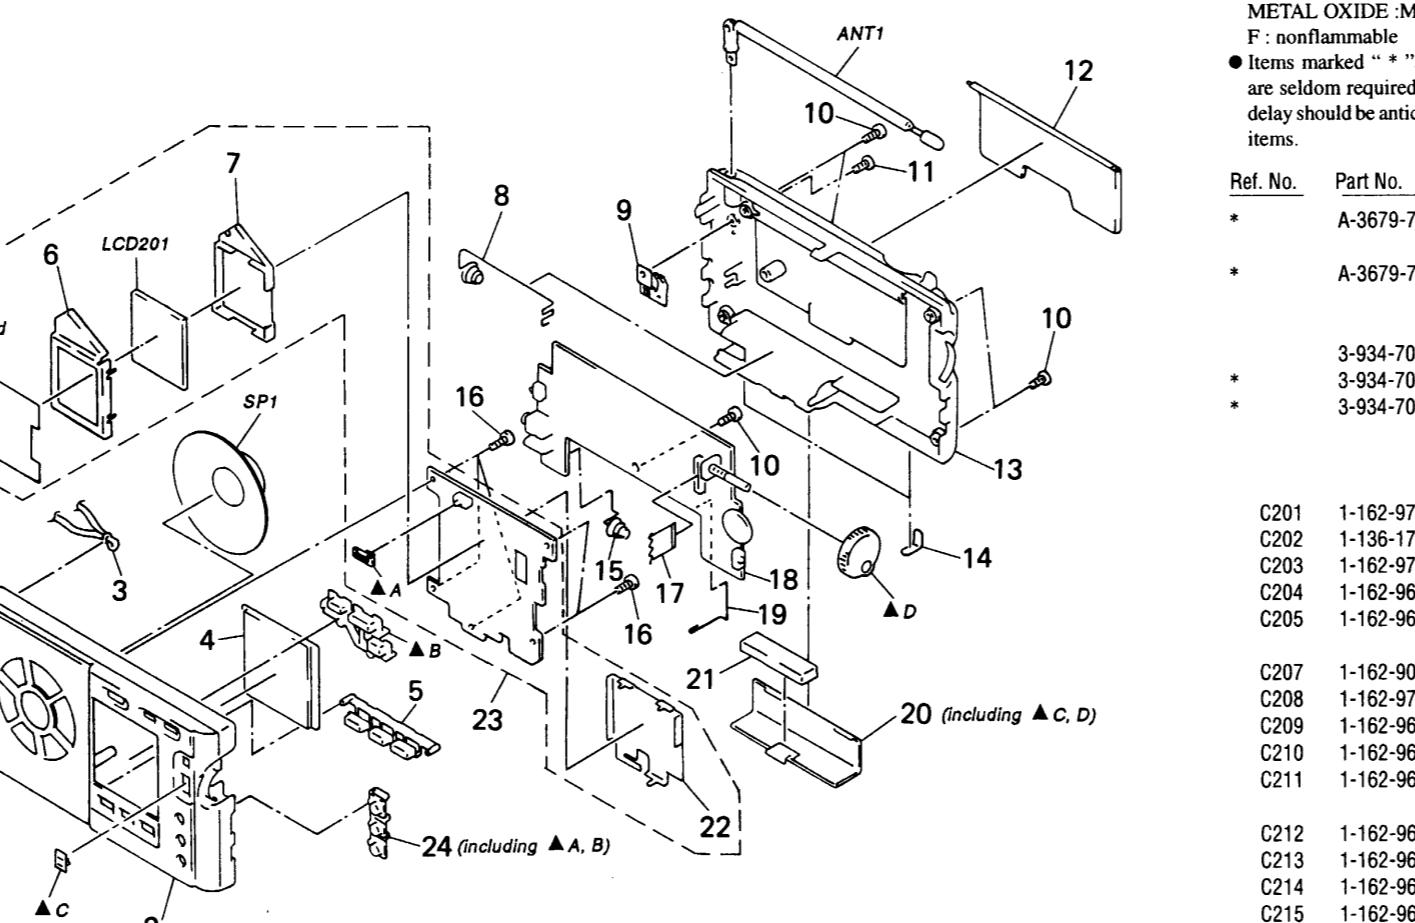

**NOTE :**  
● -XX, -X mean standardized parts, so they may have some difference from the original one.  
● Items marked “\*” are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.

**NOTE :**  
● The mechanical parts with no reference number in the exploded views are not supplied.  
● Items marked “\*” are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.  
**Abbreviation**  
AUS : Australian JE : Tourist  
EA : Saudi Arabia IT : Italian

SECTION 7  
ELECTRICAL PARTS LIST

KEY

KEY

Ref. No.

Part No.

Description

Remark

Ref. No.

Ref. No.	Part No.	Description		Remark		Ref. No.	Part No.	Description		Remark	
< VIBRATOR >											
X201	1-567-769-11	VIBRATOR, CRYSTAL (75KHz)				C41	1-162-917-11	CERAMIC CHIP	15PF	5%	50V
*	A-3679-755-A	MAIN BOARD, COMPLETE				C42	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
		*****				C43	1-162-919-11	CERAMIC CHIP	22PF	5%	50V
		*****				C44	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
						C45	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
						C46	1-126-157-11	ELECT	10uF	20%	16V
< FILTER >											
BPF1	1-239-507-11	FILTER, BAND PASS				C47	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V
		*****				C48	1-164-357-11	CERAMIC CHIP	1000PF	5%	50V
		*****				C49	1-162-913-11	CERAMIC CHIP	8PF	0.5PF	50V
						C50	1-164-357-11	CERAMIC CHIP	1000PF	5%	50V
						C51	1-162-907-11	CERAMIC CHIP	2PF	0.25PF	50V
C1	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V	C52	1-162-963-11	CERAMIC CHIP	680PF	10%	50V
C2	1-162-957-11	CERAMIC CHIP	220PF	5%	50V	C53	1-162-921-11	CERAMIC CHIP	33PF	5%	50V
C3	1-162-957-11	CERAMIC CHIP	220PF	5%	50V	C54	1-162-927-11	CERAMIC CHIP	100PF	5%	50V
C4	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V	C55	1-162-927-11	CERAMIC CHIP	100PF	5%	50V
C5	1-162-905-11	CERAMIC CHIP	1PF	0.25PF	50V	C56	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C6	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V	C57	1-126-157-11	ELECT	10uF	20%	16V
C7	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V	C58	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C8	1-162-908-11	CERAMIC CHIP	3PF	0.25PF	50V	C59	1-135-181-21	TANTALUM CHIP	4.7uF	20%	6.3V
C9	1-162-907-11	CERAMIC CHIP	2PF	0.25PF	50V	C60	1-135-259-11	TANTAL. CHIP	10uF	20%	6.3V
C10	1-162-911-11	CERAMIC CHIP	6PF	0.5PF	50V	C61	1-164-346-11	CERAMIC CHIP	1uF		16V
C11	1-126-157-11	ELECT	10uF	20%	16V	C62	1-135-181-21	TANTALUM CHIP	4.7uF	20%	6.3V
C12	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V	C63	1-162-927-11	CERAMIC CHIP	100PF	5%	50V
C13	1-162-927-11	CERAMIC CHIP	100PF	5%	50V	C64	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C14	1-162-975-11	CERAMIC CHIP	24PF	5%	50V	C65	1-126-154-11	ELECT	47uF	20%	6.3V
C15	1-164-185-11	CERAMIC CHIP	13PF	5%	50V	C66	1-126-163-11	ELECT	4.7uF	20%	50V
C17	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V	C67	1-164-346-11	CERAMIC CHIP	1uF		16V
C18	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V	C68	1-126-157-11	ELECT	10uF	20%	16V
C19	1-126-157-11	ELECT	10uF	20%	16V	C69	1-124-584-00	ELECT	100uF	20%	10V
C20	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V	C70	1-164-346-11	CERAMIC CHIP	1uF		16V
C21	1-162-924-11	CERAMIC CHIP	56PF	5%	50V	C71	1-164-227-11	CERAMIC CHIP	0.022uF	10%	25V
C22	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V	C72	1-164-227-11	CERAMIC CHIP	0.022uF	10%	25V
C23	1-162-957-11	CERAMIC CHIP	220PF	5%	50V	C73	1-115-156-11	CERAMIC CHIP	1uF		10V
C24	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V	C74	1-115-156-11	CERAMIC CHIP	1uF		10V
C25	1-164-361-11	CERAMIC CHIP	0.047uF		16V	C75	1-164-346-11	CERAMIC CHIP	1uF		16V
C26	1-115-156-11	CERAMIC CHIP	1uF		10V	C76	1-164-677-11	CERAMIC CHIP	0.033uF	10%	16V
C27	1-164-156-11	CERAMIC CHIP	0.1uF		25V	C77	1-164-677-11	CERAMIC CHIP	0.033uF	10%	16V
C28	1-126-157-11	ELECT	10uF	20%	16V	C78	1-164-677-11	CERAMIC CHIP	0.033uF	10%	16V
C29	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V	C79	1-164-677-11	CERAMIC CHIP	0.033uF	10%	16V
C30	1-162-966-11	CERAMIC CHIP	0.0022uF	10%	50V	C80	1-164-346-11	CERAMIC CHIP	1uF		16V
C31	1-115-156-11	CERAMIC CHIP	1uF		10V	C81	1-126-157-11	ELECT	10uF	20%	16V
C32	1-115-156-11	CERAMIC CHIP	1uF		10V	C82	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C33	1-115-156-11	CERAMIC CHIP	1uF		10V	C83	1-164-005-11	CERAMIC CHIP	0.47uF		25V
C34	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V	C84	1-109-982-11	CERAMIC CHIP	1uF	10%	10V
C35	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V	C85	1-164-346-11	CERAMIC CHIP	1uF		16V
C36	1-162-904-11	CERAMIC CHIP	0.5PF	0.25PF	50V	C86	1-128-057-11	ELECT	330uF	20%	6.3V
C37	1-162-905-11	CERAMIC CHIP	1PF	0.25PF	50V	C87	1-126-935-11	ELECT	470uF	20%	6.3V
C38	1-162-847-11	CERAMIC	0.047uF	10%	16V	C88	1-164-156-11	CERAMIC CHIP	0.1uF		25V
C39	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V	C89	1-164-005-11	CERAMIC CHIP	0.47uF		25V
C40	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V	C90	1-109-982-11	CERAMIC CHIP	1uF	10%	10V
						C91	1-104-852-11	TANTAL. CHIP	22uF	20%	6.3V

**MAIN**

<u>Ref. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Remark</u>				<u>Ref. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Remark</u>			
C92	1-124-589-11	ELECT	47uF	20%	16V		D16	8-719-988-62	DIODE	1SS355			
C93	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V		D17	8-719-975-40	DIODE	RB411D			
C94	1-135-181-21	TANTALUM CHIP	4.7uF	20%	6.3V		D18	8-719-988-62	DIODE	1SS355			
C95	1-135-259-11	TANTAL. CHIP	10uF	20%	6.3V								
C96	1-164-156-11	CERAMIC CHIP	0.1uF		25V								< ROTARY ENCODER >
C97	1-162-957-11	CERAMIC CHIP	220PF	5%	50V		ENC1	1-473-596-11	ENCODER, ROTARY (TUNING/TIME ADJ)				
C98	1-162-957-11	CERAMIC CHIP	220PF	5%	50V								< IC >
C99	1-164-346-11	CERAMIC CHIP	1uF		16V		IC1	8-759-804-76	IC	LA5002M			
C100	1-164-346-11	CERAMIC CHIP	1uF		16V		IC2	8-752-059-51	IC	CXA1522P			
C101	1-162-919-11	CERAMIC CHIP	22PF	5%	50V		IC3	8-752-050-20	IC	CXA1238S			
C102	1-124-589-11	ELECT	47uF	20%	16V		IC4	8-759-079-56	IC	TC74VHC14FS(EL)			
C103	1-164-346-11	CERAMIC CHIP	1uF		16V		IC5	8-759-083-94	IC	TC7W74FU			
C104	1-164-156-11	CERAMIC CHIP	0.1uF		25V		IC6	8-759-255-04	IC	S-81220PG-PS-T1			
C105	1-126-153-11	ELECT	22uF	20%	6.3V								
C106	1-162-927-11	CERAMIC CHIP	100PF	5%	50V								
C107	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V								< JACK >
C108	1-162-927-11	CERAMIC CHIP	100PF	5%	50V		J1	1-566-891-11	JACK (◎)				
C109	1-164-156-11	CERAMIC CHIP	0.1uF		25V		J2	1-580-681-21	JACK,DC(POLARITY UNIFIED TYPE)(DC IN 4.5V)				
C110	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V								
C111	1-164-156-11	CERAMIC CHIP	0.1uF		25V								< JUMPER RESISTOR >
C112	1-164-156-11	CERAMIC CHIP	0.1uF		25V		JC2	1-216-864-11	METAL CHIP	0	5%	1/16W	
C113	1-164-346-11	CERAMIC CHIP	1uF		16V		JC4	1-216-296-00	METAL CHIP	0	5%	1/8W	
C114	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V		JC5	1-216-864-11	METAL CHIP	0	5%	1/16W	
							JC6	1-216-864-11	METAL CHIP	0	5%	1/16W	
							JC7	1-216-296-00	METAL CHIP	0	5%	1/8W	
							JC8	1-216-296-00	METAL CHIP	0	5%	1/8W	
CF1	1-577-601-11	FILTER, CERAMIC					JC9	1-216-296-00	METAL CHIP	0	5%	1/8W	
CF2	1-760-238-71	FILTER, CERAMIC					JC10	1-216-296-00	METAL CHIP	0	5%	1/8W	
CF3	1-577-687-11	FILTER, CERAMIC					JC11	1-216-296-00	METAL CHIP	0	5%	1/8W	
CF4	1-760-238-71	FILTER, CERAMIC					JC12	1-216-296-00	METAL CHIP	0	5%	1/8W	
													< CONNECTOR >
CN1	1-691-051-21	HOUSING, CONNECTOR 19P					JC13	1-216-296-00	METAL CHIP	0	5%	1/8W	
							JC14	1-216-296-00	METAL CHIP	0	5%	1/8W	
							JC15	1-216-296-00	METAL CHIP	0	5%	1/8W	
							JC16	1-216-296-00	METAL CHIP	0	5%	1/8W	
CT1	1-141-304-21	CAP, TRIMMER	10PF				JC17	1-216-864-11	METAL CHIP	0	5%	1/16W	
							JC18	1-216-296-00	METAL CHIP	0	5%	1/8W	
							JC19	1-216-296-00	METAL CHIP	0	5%	1/8W	
D1	8-719-800-76	DIODE	1SS226				JC20	1-216-296-00	METAL CHIP	0	5%	1/8W	
D2	8-719-421-40	DIODE	MA77				JC21	1-216-296-00	METAL CHIP	0	5%	1/8W	
D3	8-719-421-40	DIODE	MA77				JC22	1-216-864-11	METAL CHIP	0	5%	1/16W	
D4	8-719-421-40	DIODE	MA77				JC23	1-216-864-11	METAL CHIP	0	5%	1/16W	
D5	8-719-421-40	DIODE	MA77				JC24	1-216-864-11	METAL CHIP	0	5%	1/16W	
D6	8-719-421-40	DIODE	MA77				JC25	1-216-864-11	METAL CHIP	0	5%	1/16W	
D7	8-719-421-40	DIODE	MA77										
D8	8-719-945-31	DIODE	SVC341-L										< COIL >
D9	8-719-941-04	DIODE	SB007-03CP				L1	1-412-939-11	INDUCTOR	1uH			
D10	8-719-988-62	DIODE	1SS355				L2	1-412-938-11	INDUCTOR	0.82uH			
							L3	1-412-961-11	INDUCTOR	68uH			
D11	8-719-002-81	DIODE	1T363				L4	1-412-939-11	INDUCTOR	1uH			
D12	8-719-002-81	DIODE	1T363				L5	1-412-945-11	INDUCTOR	3.3uH			
D13	8-719-988-62	DIODE	1SS355				L6	1-412-947-11	INDUCTOR	4.7uH			
D14	8-719-988-62	DIODE	1SS355										
D15	8-719-977-39	DIODE	DTZ13A										

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
L7	1-412-947-11	INDUCTOR	4.7uH	R2	1-216-837-11	METAL CHIP	22K 5% 1/16W
L9	1-501-793-21	ANTENNA, FERRITE-ROD (LW/MW)		R3	1-216-827-11	METAL CHIP	3.3K 5% 1/16W
L10	1-412-951-11	INDUCTOR	10uH	R5	1-216-845-11	METAL CHIP	100K 5% 1/16W
L11	1-412-939-11	INDUCTOR	1uH	R6	1-216-797-11	METAL CHIP	10 5% 1/16W
L12	1-412-947-11	INDUCTOR	4.7uH	R7	1-216-817-11	METAL CHIP	470 5% 1/16W
L13	1-402-815-11	COIL (WITH CORE) (FM RF)		R8	1-216-837-11	METAL CHIP	22K 5% 1/16W
L14	1-412-965-11	INDUCTOR	68nH	R9	1-216-839-11	METAL CHIP	33K 5% 1/16W
L15	1-406-786-11	COIL, FM (OSC)		R10	1-216-837-11	METAL CHIP	22K 5% 1/16W
L16	1-412-963-11	INDUCTOR	100uH	R11	1-216-845-11	METAL CHIP	100K 5% 1/16W
L17	1-412-939-11	INDUCTOR	1uH	R12	1-216-829-11	METAL CHIP	4.7K 5% 1/16W
L18	1-412-951-11	INDUCTOR	10uH	R13	1-216-809-11	METAL CHIP	100 5% 1/16W
L19	1-412-963-11	INDUCTOR	100uH	R16	1-216-841-11	METAL CHIP	47K 5% 1/16W
L20	1-412-963-11	INDUCTOR	100uH	R17	1-216-817-11	METAL CHIP	470 5% 1/16W
L21	1-410-294-11	INDUCTOR, MICRO	38uH	R18	1-216-845-11	METAL CHIP	100K 5% 1/16W
< TRANSISTOR >							
Q2	8-729-123-86	TRANSISTOR	2SK238-K16	R20	1-216-819-11	METAL CHIP	680 5% 1/16W
Q3	8-729-116-64	TRANSISTOR	2SK508-K51	R21	1-216-845-11	METAL CHIP	100K 5% 1/16W
Q4	8-729-423-52	TRANSISTOR	2SC3931-C	R24	1-216-805-11	METAL CHIP	47 5% 1/16W
Q5	8-729-423-52	TRANSISTOR	2SC3931-C	R25	1-216-839-11	METAL CHIP	33K 5% 1/16W
Q6	8-729-423-52	TRANSISTOR	2SC3931-C	R26	1-216-817-11	METAL CHIP	470 5% 1/16W
Q8	8-729-123-86	TRANSISTOR	2SK238-K16	R27	1-216-833-11	METAL CHIP	10K 5% 1/16W
Q10	8-729-403-24	TRANSISTOR	XN4210	R28	1-216-841-11	METAL CHIP	47K 5% 1/16W
Q11	8-729-403-24	TRANSISTOR	XN4210	R29	1-216-837-11	METAL CHIP	22K 5% 1/16W
Q12	8-729-028-92	TRANSISTOR	DTA144TUA-T106	R30	1-216-813-11	METAL CHIP	220 5% 1/16W
Q13	8-729-028-92	TRANSISTOR	DTA144TUA-T106	R31	1-216-837-11	METAL CHIP	22K 5% 1/16W
Q14	8-729-230-63	TRANSISTOR	2SC4116-YG	R32	1-216-805-11	METAL CHIP	47 5% 1/16W
Q15	8-729-423-52	TRANSISTOR	2SC3931-C	R33	1-216-797-11	METAL CHIP	10 5% 1/16W
Q16	8-729-208-47	TRANSISTOR	2SK210-GR	R34	1-216-797-11	METAL CHIP	10 5% 1/16W
Q17	8-729-220-93	TRANSISTOR	2SK209-G	R35	1-216-801-11	METAL CHIP	22 5% 1/16W
Q18	8-729-230-63	TRANSISTOR	2SC4116-YG	R36	1-216-833-11	METAL CHIP	10K 5% 1/16W
Q19	8-729-230-63	TRANSISTOR	2SC4116-YG	R37	1-216-833-11	METAL CHIP	10K 5% 1/16W
Q20	8-729-423-52	TRANSISTOR	2SC3931-C	R38	1-216-857-11	METAL CHIP	1M 5% 1/16W
Q21	8-729-423-52	TRANSISTOR	2SC3931-C	R39	1-216-809-11	METAL CHIP	100 5% 1/16W
Q22	8-729-029-15	TRANSISTOR	DTA144TUA-T106	R42	1-216-841-11	METAL CHIP	47K 5% 1/16W
Q23	8-729-403-24	TRANSISTOR	XN4210	R43	1-216-797-11	METAL CHIP	10 5% 1/16W
Q24	8-729-028-92	TRANSISTOR	DTA144TUA-T106	R44	1-216-835-11	METAL CHIP	15K 5% 1/16W
Q25	8-729-028-92	TRANSISTOR	DTA144TUA-T106	R45	1-216-825-11	METAL CHIP	2.2K 5% 1/16W
Q26	8-729-807-87	TRANSISTOR	2SB1295-UL6	R46	1-216-817-11	METAL CHIP	470 5% 1/16W
Q27	8-729-807-87	TRANSISTOR	2SB1295-UL6	R47	1-216-841-11	METAL CHIP	47K 5% 1/16W
Q28	8-729-807-87	TRANSISTOR	2SB1295-UL6	R48	1-216-845-11	METAL CHIP	100K 5% 1/16W
Q29	8-729-807-87	TRANSISTOR	2SB1295-UL6	R49	1-216-827-11	METAL CHIP	3.3K 5% 1/16W
Q30	8-729-230-63	TRANSISTOR	2SC4116-YG	R50	1-216-845-11	METAL CHIP	100K 5% 1/16W
Q31	8-729-230-63	TRANSISTOR	2SC4116-YG	R51	1-216-837-11	METAL CHIP	22K 5% 1/16W
Q32	8-729-230-63	TRANSISTOR	2SC4116-YG	R52	1-216-817-11	METAL CHIP	470 5% 1/16W
Q33	8-729-029-15	TRANSISTOR	DTA144TUA-T106	R53	1-216-841-11	METAL CHIP	47K 5% 1/16W
Q34	8-729-029-15	TRANSISTOR	DTA144TUA-T106	R54	1-216-821-11	METAL CHIP	1K 5% 1/16W
Q35	8-729-921-72	TRANSISTOR	2SD1781K-R	R55	1-216-819-11	METAL CHIP	680 5% 1/16W
Q36	8-729-423-52	TRANSISTOR	2SC3931-C	R56	1-216-813-11	METAL CHIP	220 5% 1/16W
< RESISTOR >							
R1	1-216-821-11	METAL CHIP	1K 5% 1/16W	R57	1-216-833-11	METAL CHIP	10K 5% 1/16W
				R58	1-216-825-11	METAL CHIP	2.2K 5% 1/16W
				R59	1-216-825-11	METAL CHIP	2.2K 5% 1/16W
				R60	1-216-797-11	METAL CHIP	10 5% 1/16W

MAIN

SEE ADDITIONAL INFORMATION

Ref. No.	Part No.	Description	Remark			Ref. No.	Part No.	Description	Remark
R61	1-216-829-11	METAL CHIP	4.7K	5%	1/16W			MISCELLANEOUS	
R62	1-216-829-11	METAL CHIP	4.7K	5%	1/16W			*****	
R65	1-216-841-11	METAL CHIP	47K	5%	1/16W	17	1-769-222-11	CABLE, FLAT (FFC) (FSV-8) 19P	
R66	1-216-833-11	METAL CHIP	10K	5%	1/16W	ANT1	1-501-222-81	ANTENNA, TELESCOPIC (FM)	
R67	1-216-825-11	METAL CHIP	2.2K	5%	1/16W	LCD201	1-801-196-11	DISPLAY PANEL, LIQUID CRYSTAL (US,Canadian,AEP,E,AUS,JE)	
R68	1-216-825-11	METAL CHIP	2.2K	5%	1/16W	LCD201	1-801-196-21	DISPLAY PANEL, LIQUID CRYSTAL (IT,EA)	
R69	1-216-821-11	METAL CHIP	1K	5%	1/16W	SP1	1-505-246-11	SPEAKER (6.6 cm)	
R70	1-216-805-11	METAL CHIP	47	5%	1/16W			*****	
R71	1-216-829-11	METAL CHIP	4.7K	5%	1/16W			*****	
R72	1-216-809-11	METAL CHIP	100	5%	1/16W			*****	
R73	1-216-809-11	METAL CHIP	100	5%	1/16W			*****	
R74	1-216-829-11	METAL CHIP	4.7K	5%	1/16W			ACCESSORIES & PACKING MATERIALS	
R75	1-216-805-11	METAL CHIP	47	5%	1/16W			*****	
R76	1-216-829-11	METAL CHIP	4.7K	5%	1/16W	3-810-631-01	MANUAL, INSTRUCTION (ENGLISH/JAPANESE/ KOREAN) (JE)		
R77	1-216-829-11	METAL CHIP	4.7K	5%	1/16W	3-810-631-11	MANUAL, INSTRUCTION (ENGLISH/FRENCH) (US,Canadian,AEP,E)		
R78	1-216-825-11	METAL CHIP	2.2K	5%	1/16W	3-810-631-21	MANUAL, INSTRUCTION (SPANISH/ PORTUGUESE/CHINESE) (AEP1,E)		
R79	1-216-849-11	METAL CHIP	220K	5%	1/16W	3-810-631-31	MANUAL, INSTRUCTION (GERMAN/DUTCH/ SWEDISH) (AEP2)		
R80	1-216-849-11	METAL CHIP	220K	5%	1/16W	3-810-631-41	MANUAL, INSTRUCTION (ENGLISH/ITALIAN/ ARABIC) (IT,EA)		
R81	1-216-821-11	METAL CHIP	1K	5%	1/16W	3-893-802-21	BOOK, GUIDE, WAVE (JE)		
R82	1-216-845-11	METAL CHIP	100K	5%	1/16W	3-906-140-01	CASE, CARRYING		
R83	1-216-845-11	METAL CHIP	100K	5%	1/16W	3-912-863-31	SHORT WAVE GUIDE (US,Canadian,AEP,E,IT,EA)		
R84	1-216-845-11	METAL CHIP	100K	5%	1/16W	*	3-934-954-01	INDIVIDUAL CARTON (JE)	
R85	1-216-809-11	METAL CHIP	100	5%	1/16W	*	3-934-957-01	INDIVIDUAL CARTON (US,Canadian,AEP,E,IT,EA)	
R86	1-216-829-11	METAL CHIP	4.7K	5%	1/16W				
R87	1-216-849-11	METAL CHIP	220K	5%	1/16W				
R88	1-216-849-11	METAL CHIP	220K	5%	1/16W				
R89	1-216-829-11	METAL CHIP	4.7K	5%	1/16W				
R90	1-216-841-11	METAL CHIP	47K	5%	1/16W				
R91	1-216-833-11	METAL CHIP	10K	5%	1/16W				
R92	1-216-845-11	METAL CHIP	100K	5%	1/16W				
R93	1-216-849-11	METAL CHIP	220K	5%	1/16W				
R94	1-216-857-11	METAL CHIP	1M	5%	1/16W				
R95	1-216-857-11	METAL CHIP	1M	5%	1/16W				
< VARIABLE RESISTOR >									
RV1	1-241-765-11	RES, ADJ, CARBON 22K (FM VCO)							
RV2	1-223-967-11	RES, VAR, CARBON 50K (VOL)							
< SWITCH >									
S1	1-572-552-11	SWITCH, SLIDE (SENS)							
S2	1-572-552-11	SWITCH, SLIDE (TONE)							
< TRANSFORMER >									
T1	1-404-764-21	TRANSFORMER, IF							
T2	1-411-760-11	COIL (LW/MW RF)							
T3	1-411-761-11	COIL (OSC)							
T4	1-404-444-31	TRANSFORMER, IF							
T5	1-449-138-61	TRANSFORMER, DC-DC CONVERTER							
< VIBRATOR >									
X1	1-760-018-21	VIBRATOR, CRYSTAL (10.25MHz)							
*****									

Sony Corporation  
 Consumer A&V Products Company  
 Personal A&V Products Div.

9-960-640-11

English  
 96C0295-1  
 Printed in Japan  
 © 1996.3  
 Published by Home A&V Products Div.  
 Quality Engineering Dept.

# ICF-SW40

**SONY.**

## **SERVICE MANUAL**

*US Model  
Canadian Model  
AEP Model  
UK Model  
E Model  
Australian Model  
Tourist Model*

### **SUPPLEMENT - 1**

**File this Supplement with the Service Manual.**

**Subject : EXPLODED VIEWS PARTSLIST**


(ENG-97024)

● EXPLODED VIEWS (Service Manual see page 22, 28)

Ref. No.	Before change			After change		
	Part No.	Description	Remark	Part No.	Description	Remark
2	3-934-690-01	CABINET (FRONT)		X-3374-480-1	PLATE ASSY, TRANSPARENT	
4	3-934-693-01	PLATE, TRANSPARENT				
13	3-934-691-01	CABINET (REAR)		3-934-691-11	CABINET (REAR)	
20	3-932-189-01	LID (COMBINED), BATTERY CASE		3-934-692-01	LID, BATTERY CASE	
24	3-932-191-01	BUTTON (COMBINED)		3-934-697-01	BUTTON (LIGHT)	
ANT1	1-501-222-81	ANTENNA, TELESCOPIC (FM)		1-501-222-71	ANTENNA, TELESCOPIC (FM)	
25				3-934-699-01	KNOB (NORMAL/FINE)	
26				3-934-698-01	KNOB (TUNE)	
27				3-934-695-01	BUTTON (POWER)	
28				3-934-700-01	KNOB (HOLD)	

█ : Changed portion

(Service Manual see page 22)

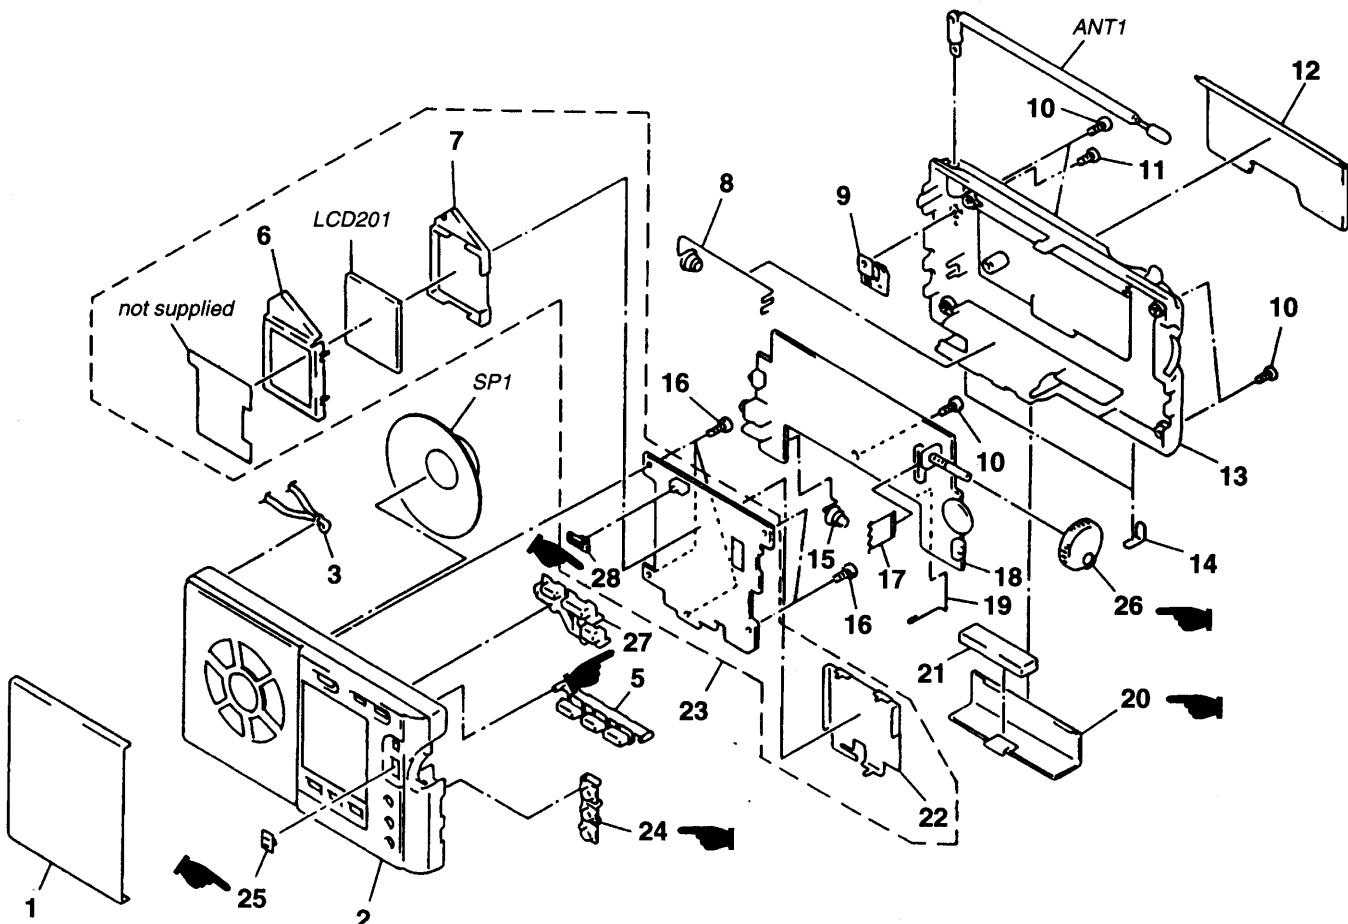

# ICF-SW40

**SONY®**

## SERVICE MANUAL

Ver 1.0      1999. 08

*US Model  
Canadian Model  
AEP Model  
UK Model  
E Model  
Australian Model  
Tourist Model*

## SUPPLEMENT - 2

File this Supplement with the Service Manual.

**Subject :**

- CHANGE OF BOARDS
  - MAIN BOARD : 1-658-725-11 → 1-671-938-11
  - KEY BOARD : 1-658-726-11 → 1-671-939-11
- BLOCK DIAGRAMS
- ELECTRICAL PARTS

(ECN-TR800931)

## ● CHANGE OF BOARDS

The main board and key board have been changed.

Printed wiring boards and schematic diagram of new type, and changed parts list are described in this Supplement-2.

Refer to original service manual (9-960-640-11) and Supplement-1 (9-960-640-81) previously issued for the other information.

Serial No. of changed model :


US model	: 1,035,251 and later	Tourist model	: 1,037,251 and later
AEP1 model	: 1,036,851 and later	Canadian model	: 1,046,511 and later
AEP2 model	: 1,035,551 and later	Italian model	: (not changed)
E model	: 1,036,151 and later	Australian model	: (not changed)
Saudi Arabia model : 1,036,751 and later			

### ● Abbreviation


AEP 1 : Countries except for German, Austrian and  
Scandinavian.

AEP 2 : German, Austrian and Scandinavian.


[MAIN BOARD] (COMPONENT SIDE)

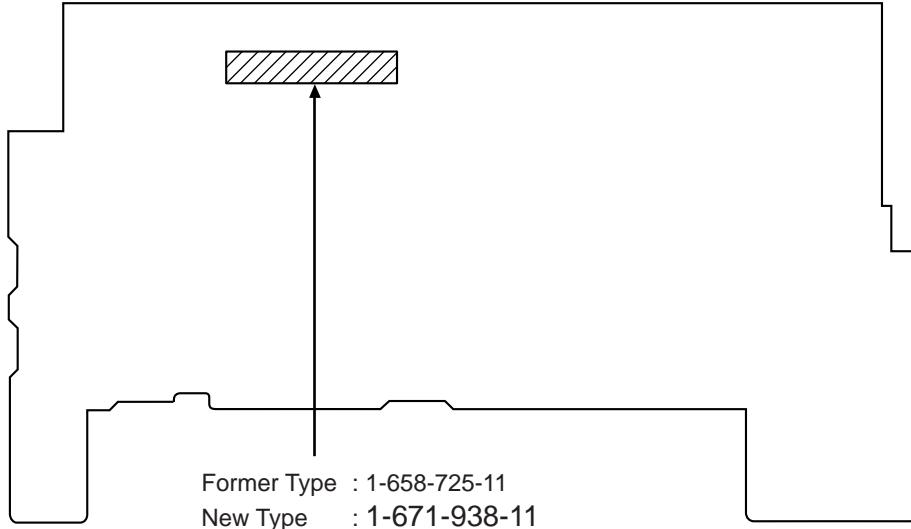

[KEY BOARD] (COMPONENT SIDE)

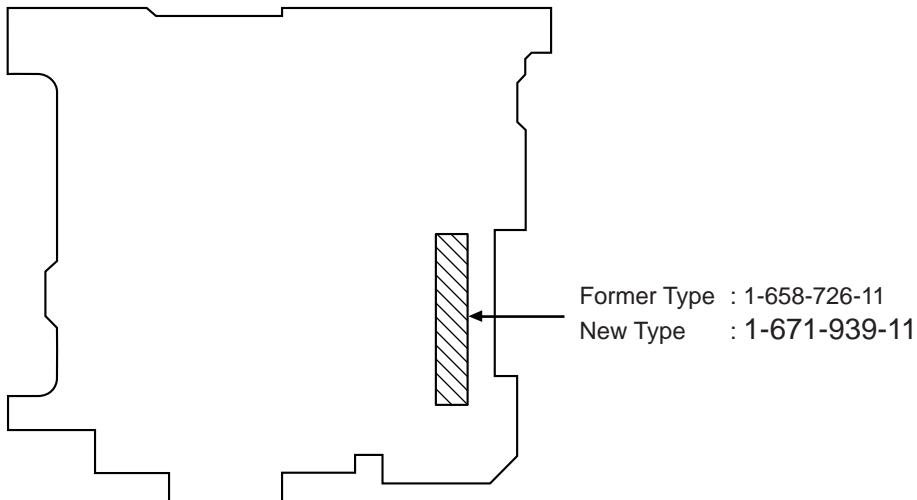


- **BLOCK DIAGRAMS**

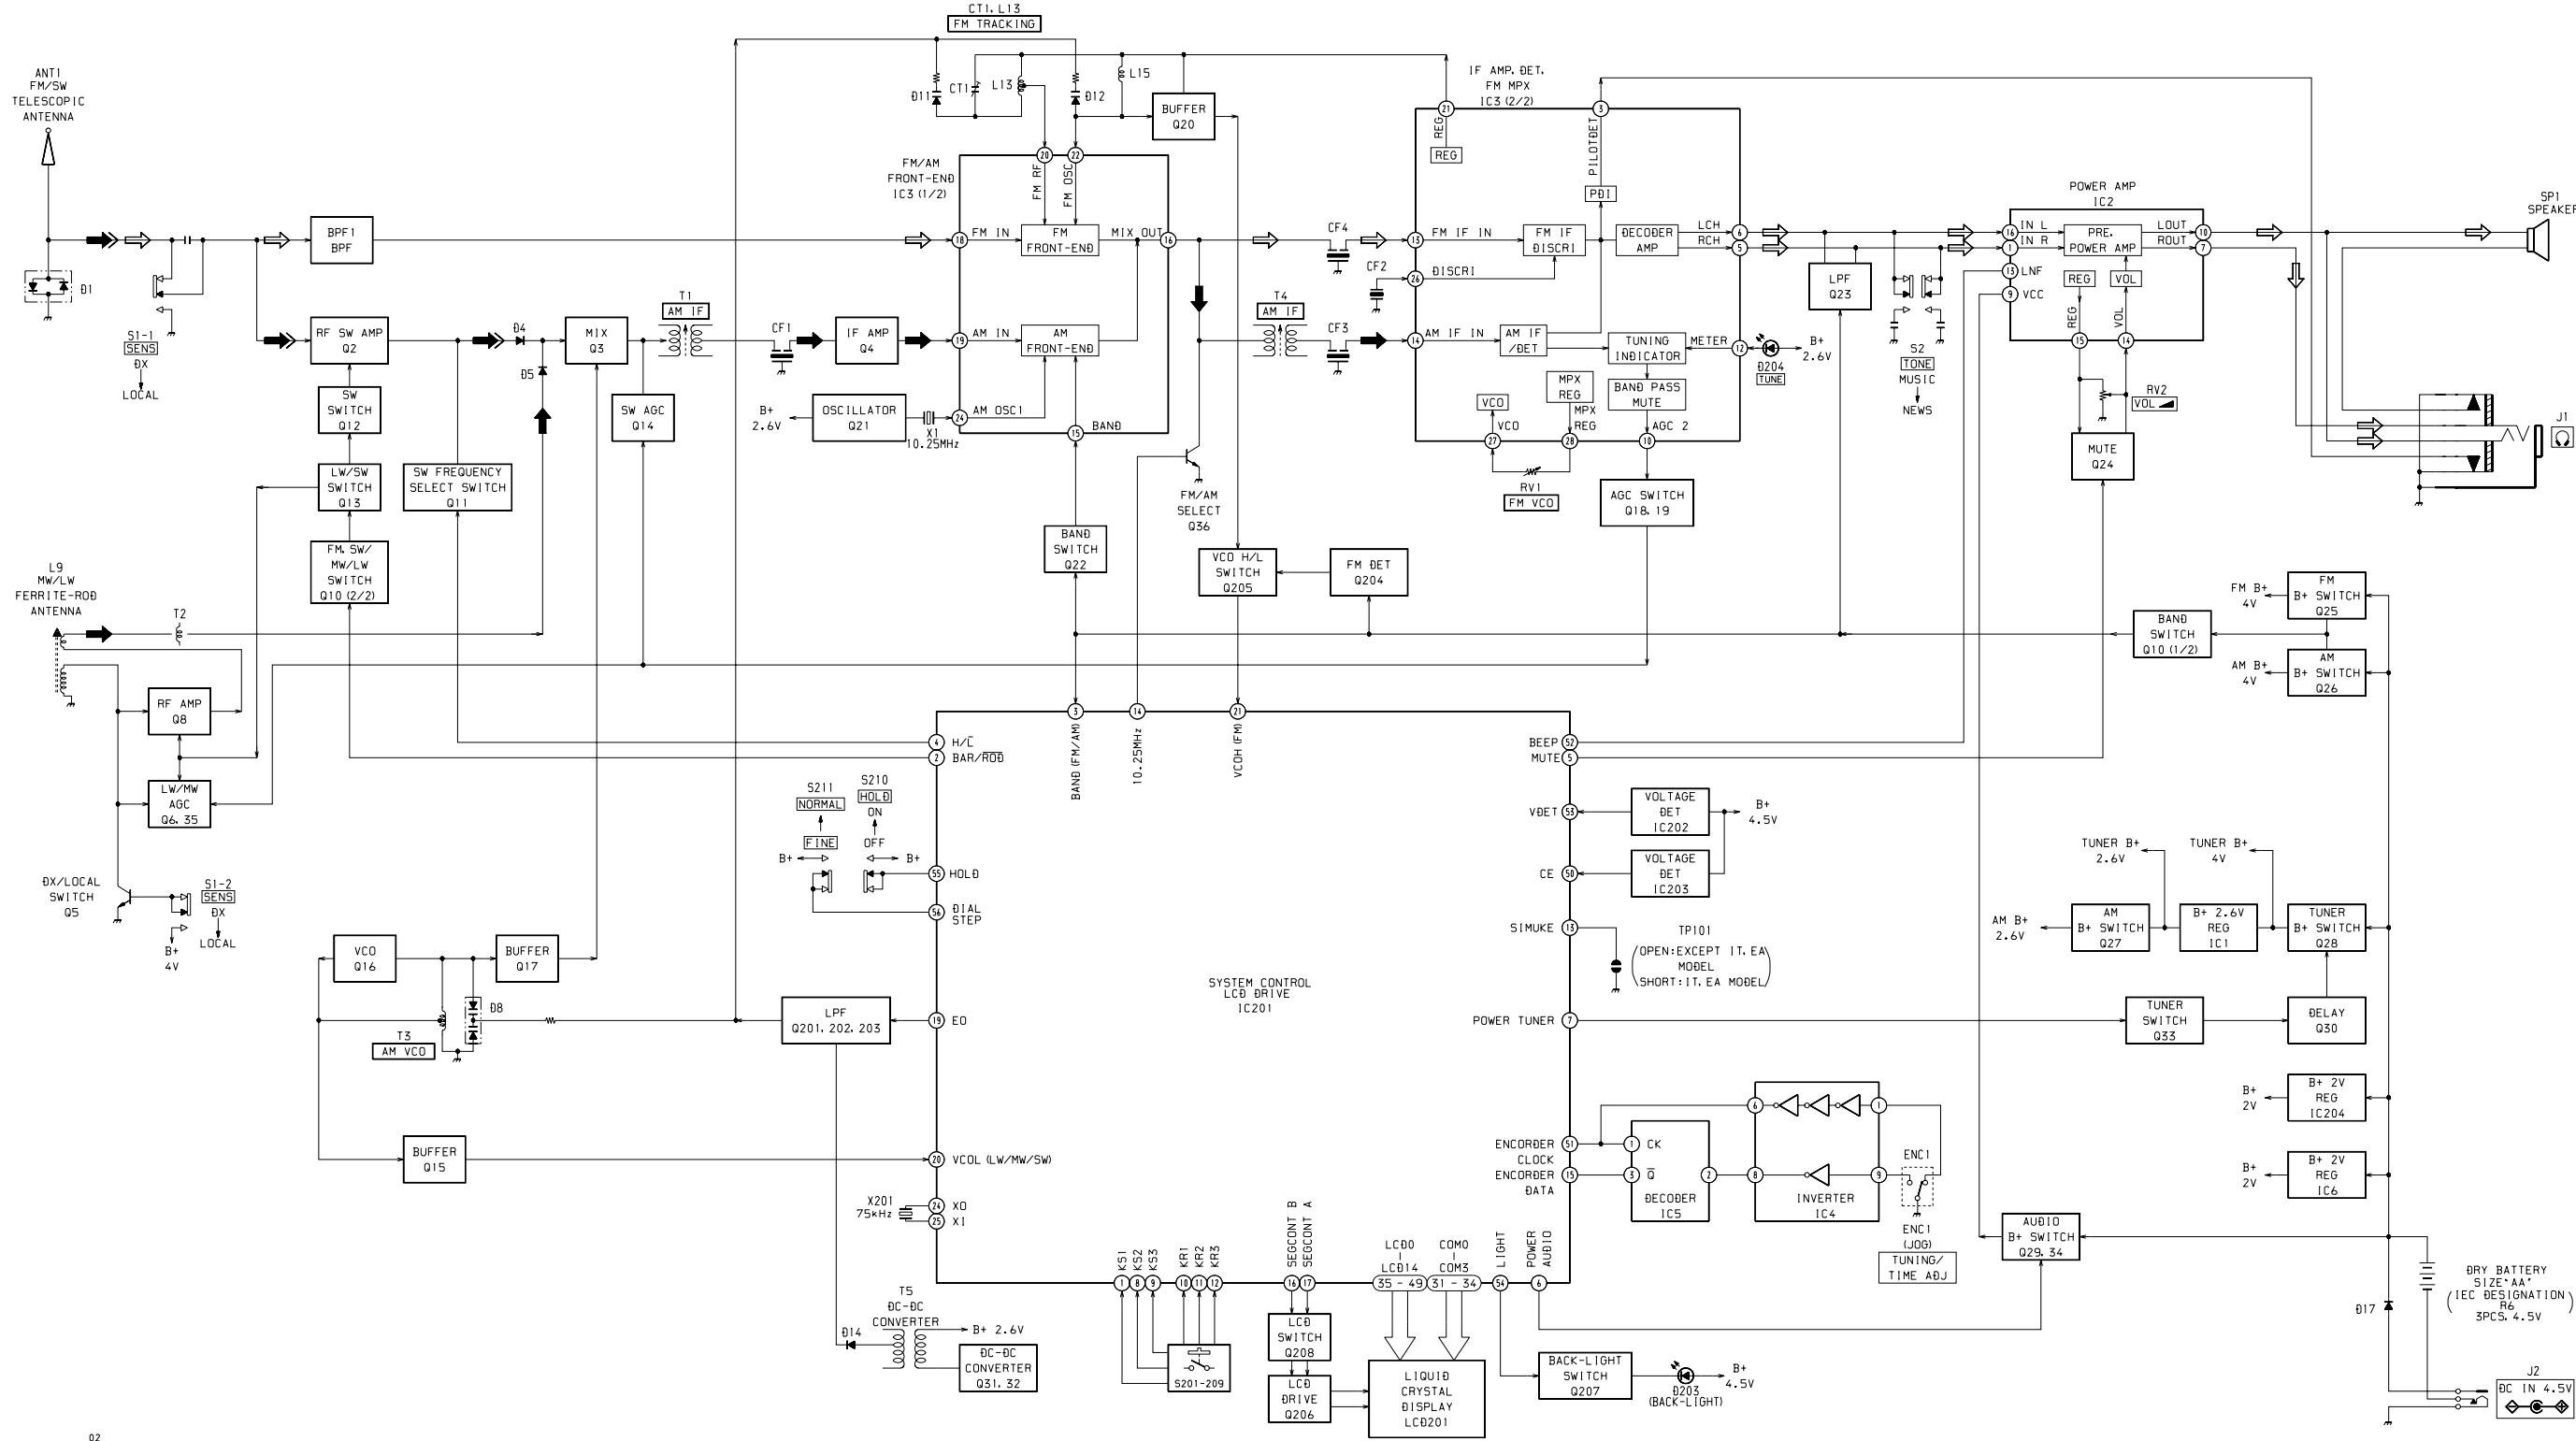

- Signal path.
    - : FM
    - : MW/LW
    - : SW

## • PRINTED WIRING BOARDS (MAIN SECTION)

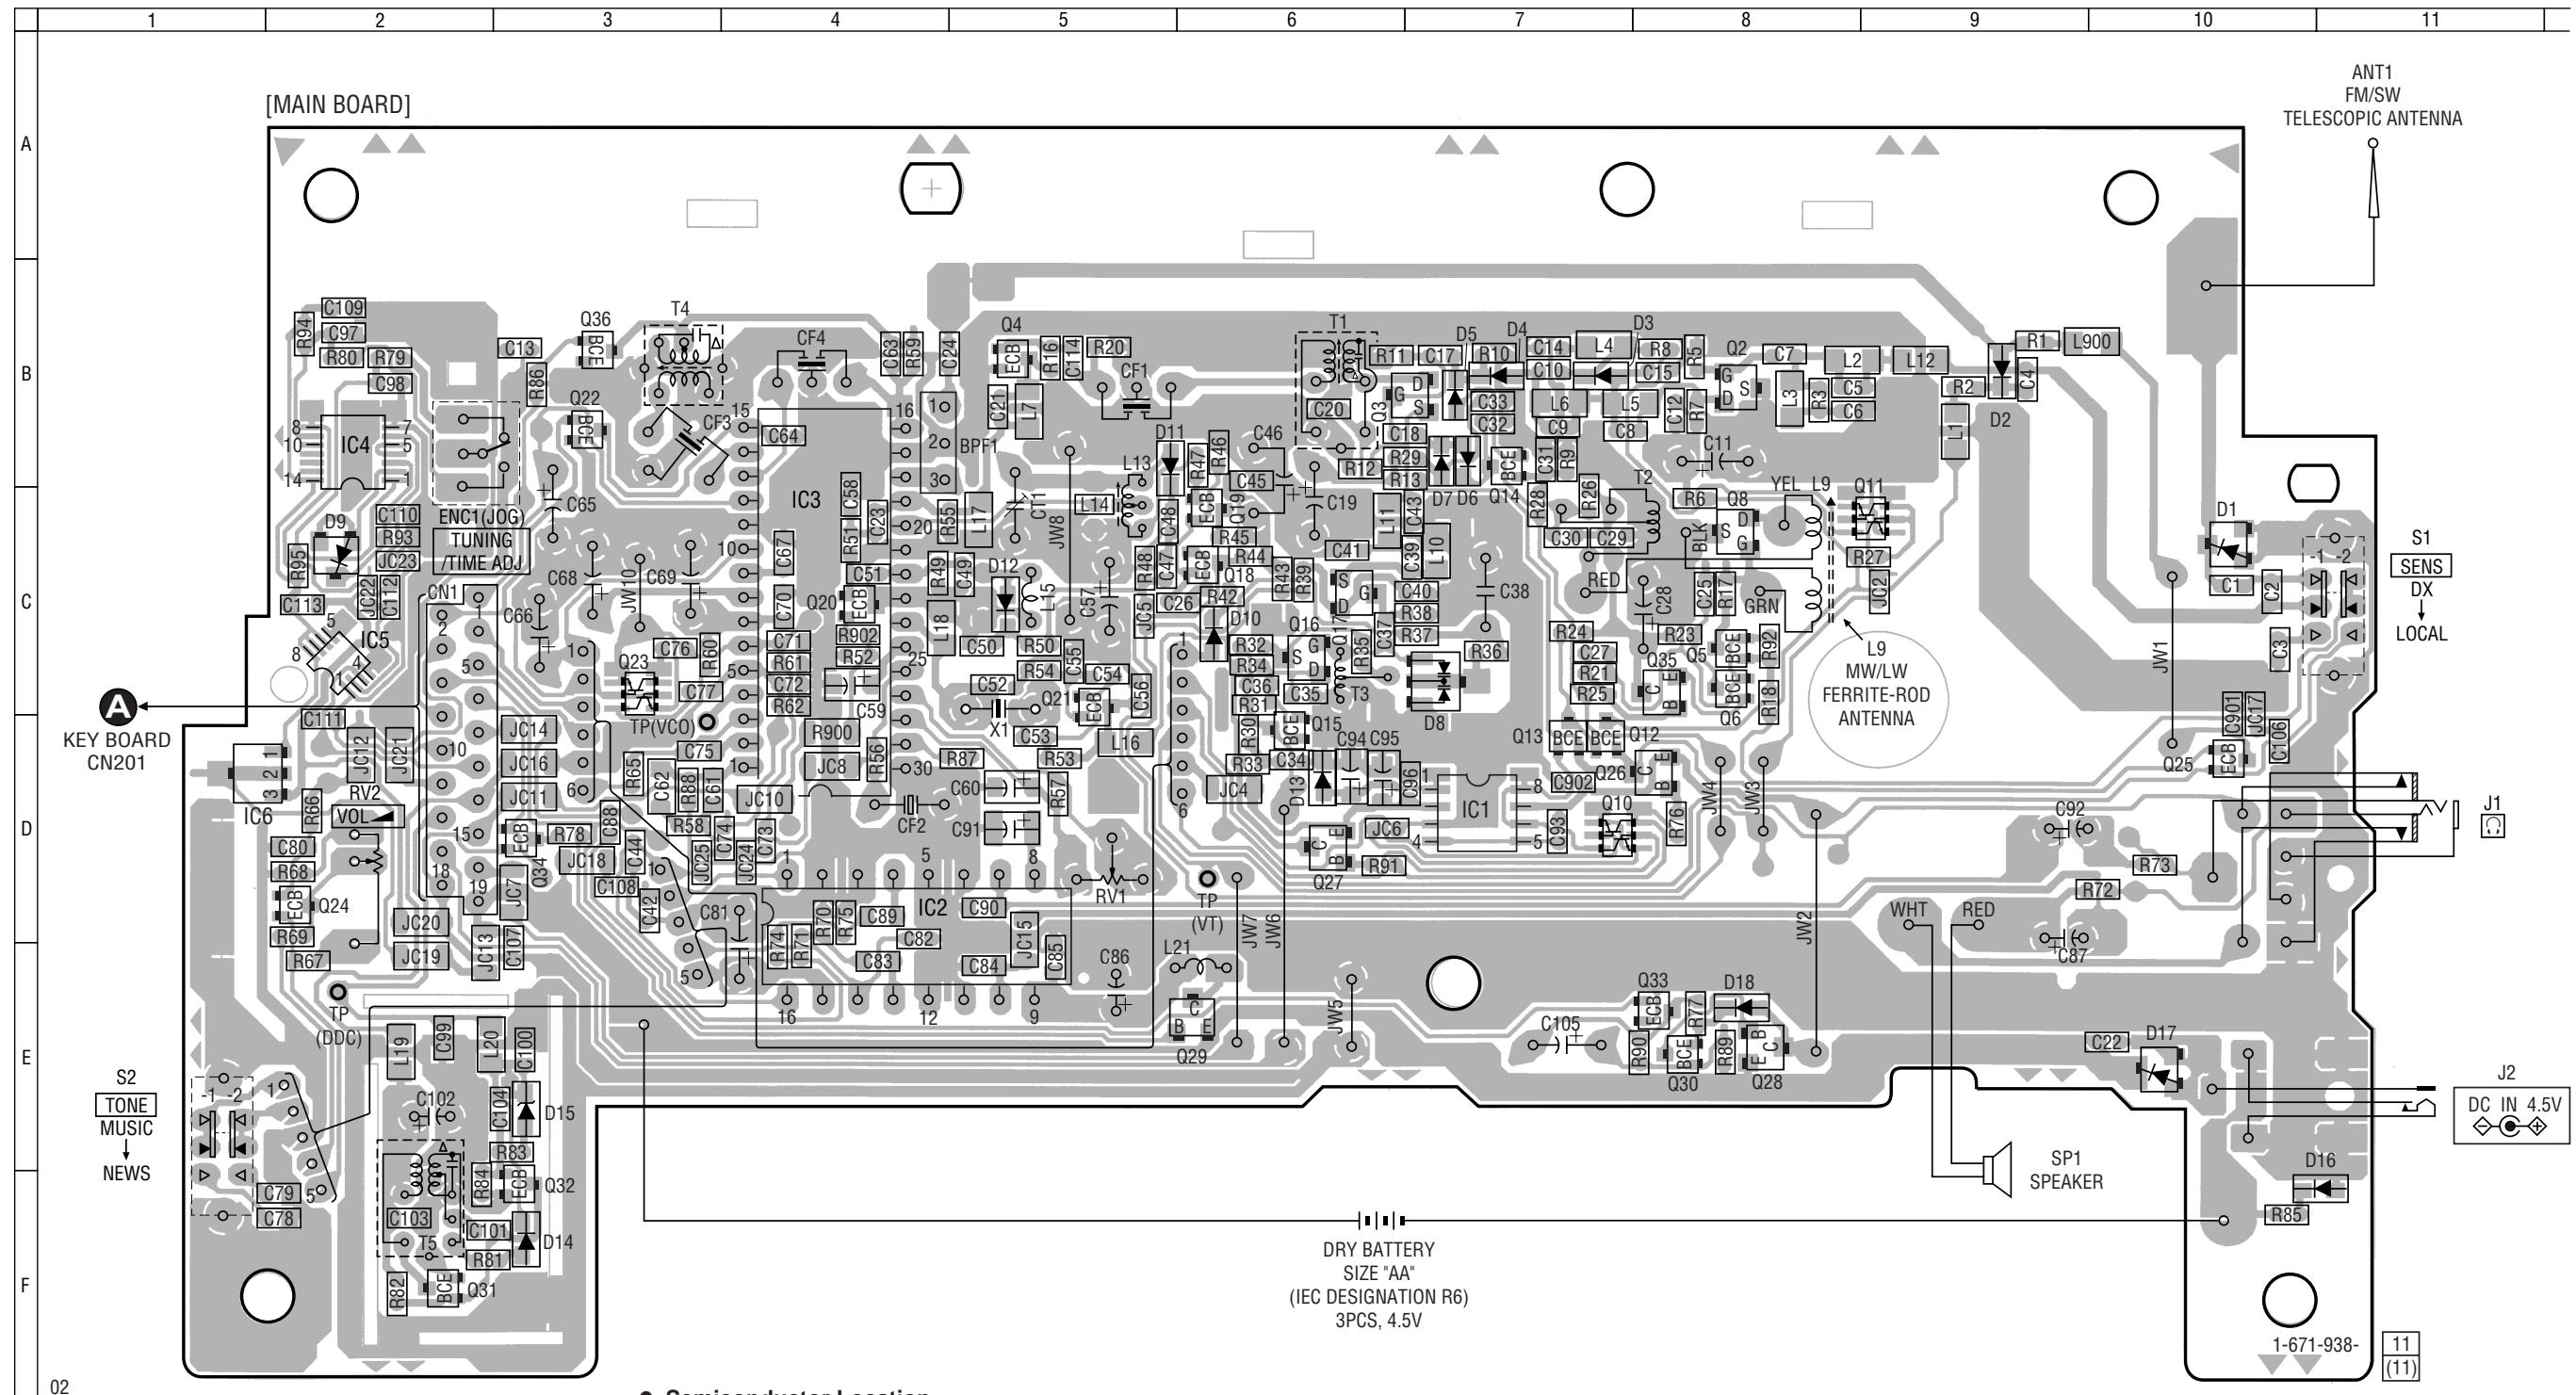


## • Semiconductor Location

Ref. No.	Location	Ref. No.	Location	Ref. No.	Location	Ref. No.	Location
D1	C-10	D16	F-11	Q6	C-8	Q23	C-3
D2	B-9	D17	E-10	Q8	C-8	Q24	D-2
D3	B-7	D18	E-8	Q10	D-7	Q25	D-10
D4	B-7			Q11	C-9	Q26	D-8
D5	B-7			Q12	D-7	Q27	D-6
D6	B-7	IC1	D-7	Q13	D-7	Q28	E-8
D7	B-7	IC2	D-4	Q14	B-7	Q29	E-6
D8	C-7	IC3	C-4	Q15	D-6	Q30	E-8
D9	C-2	IC4	B-2	Q16	C-6	Q31	F-2
D10	C-6	IC5	C-2	Q17	C-6	Q32	F-3
D11	B-5	IC6	D-1	Q18	C-6	Q33	E-8
D12	C-5			Q19	C-6	Q34	D-3
D13	D-6			Q20	C-4	Q35	C-8
D14	F-3			Q21	C-5	Q36	B-3
D15	E-3			Q5	C-8		
				Q22	B-3		

- Note:**
- ○ : parts extracted from the component side.
  - △ : internal component.
  - ■ : Pattern from the side which enables seeing.

## • SCHEMATIC DIAGRAM (MAIN SECTION)

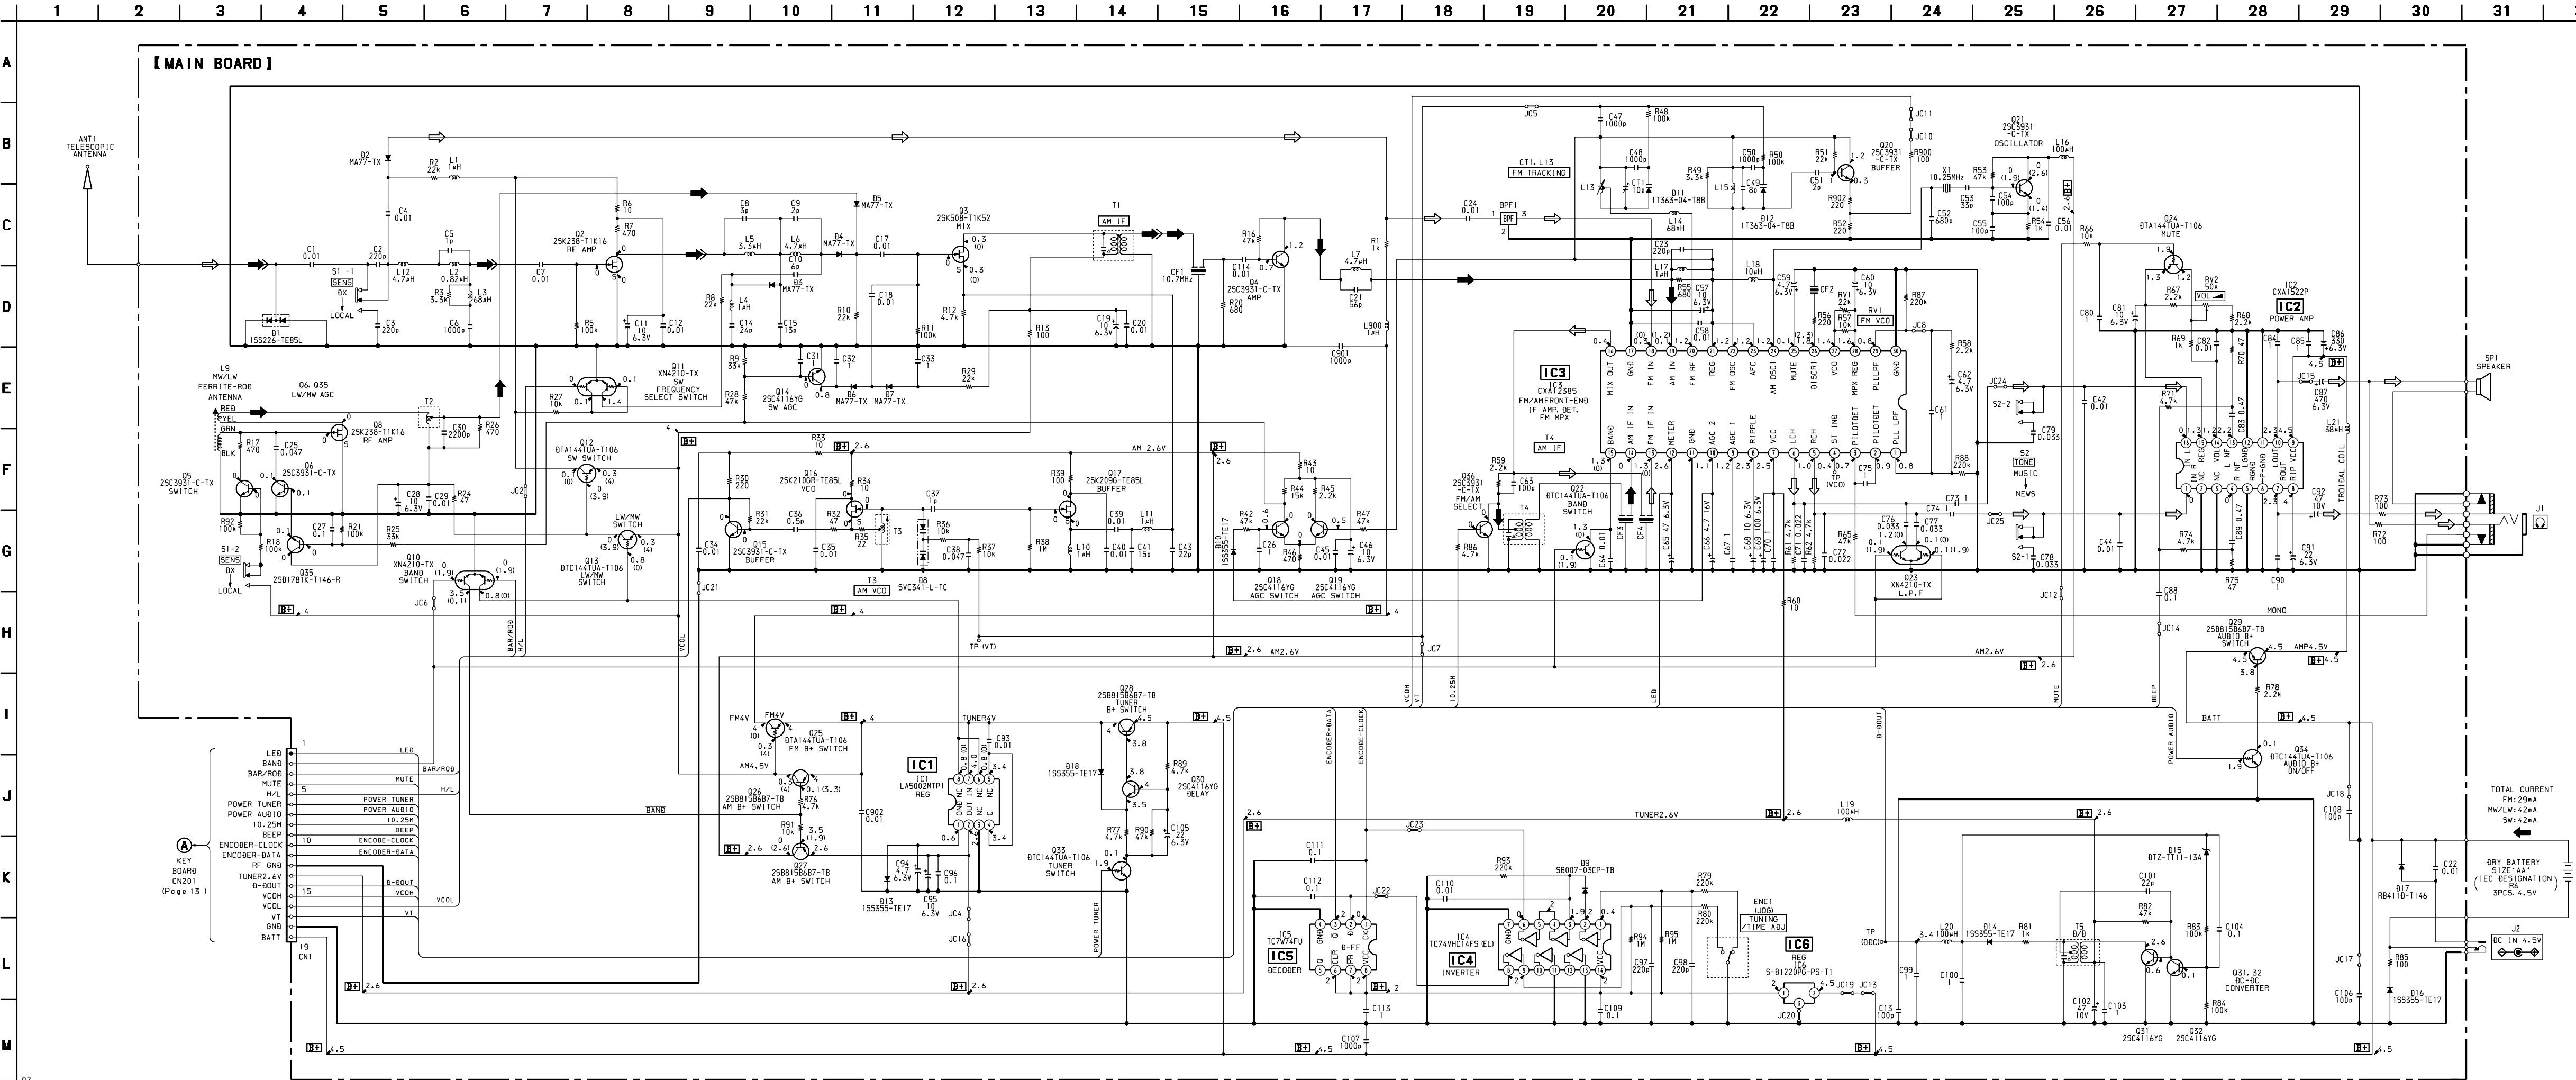


## Note:


- All capacitors are in  $\mu\text{F}$  unless otherwise noted. pF:  $\mu\mu\text{F}$  50 WV or less are not indicated except for electrolytics and tantalums.
- All resistors are in  $\Omega$  and  $1/4\text{W}$  or less unless otherwise specified.
- $\triangle$ : internal component.
- $B+$ : B+ Line.
- $\square$ : adjustment for repair.
- Power voltage is dc 4.5V and fed with regulated dc power supply from external power voltage jack (J2).
- Voltages are dc with respect to ground under no-signal (detuned) conditions.
- no mark : FM
- ( ) : MW/LW
- < > : SW
- Voltages are taken with a VOM (Input impedance 10  $\text{M}\Omega$ ). Voltage variations may be noted due to normal production tolerances.
- Signal path:

  - $\Rightarrow$  : FM
  - $\Rightarrow$  : MW/LW
  - $\Rightarrow$  : SW


## • PRINTED WIRING BOARDS (KEY SECTION)

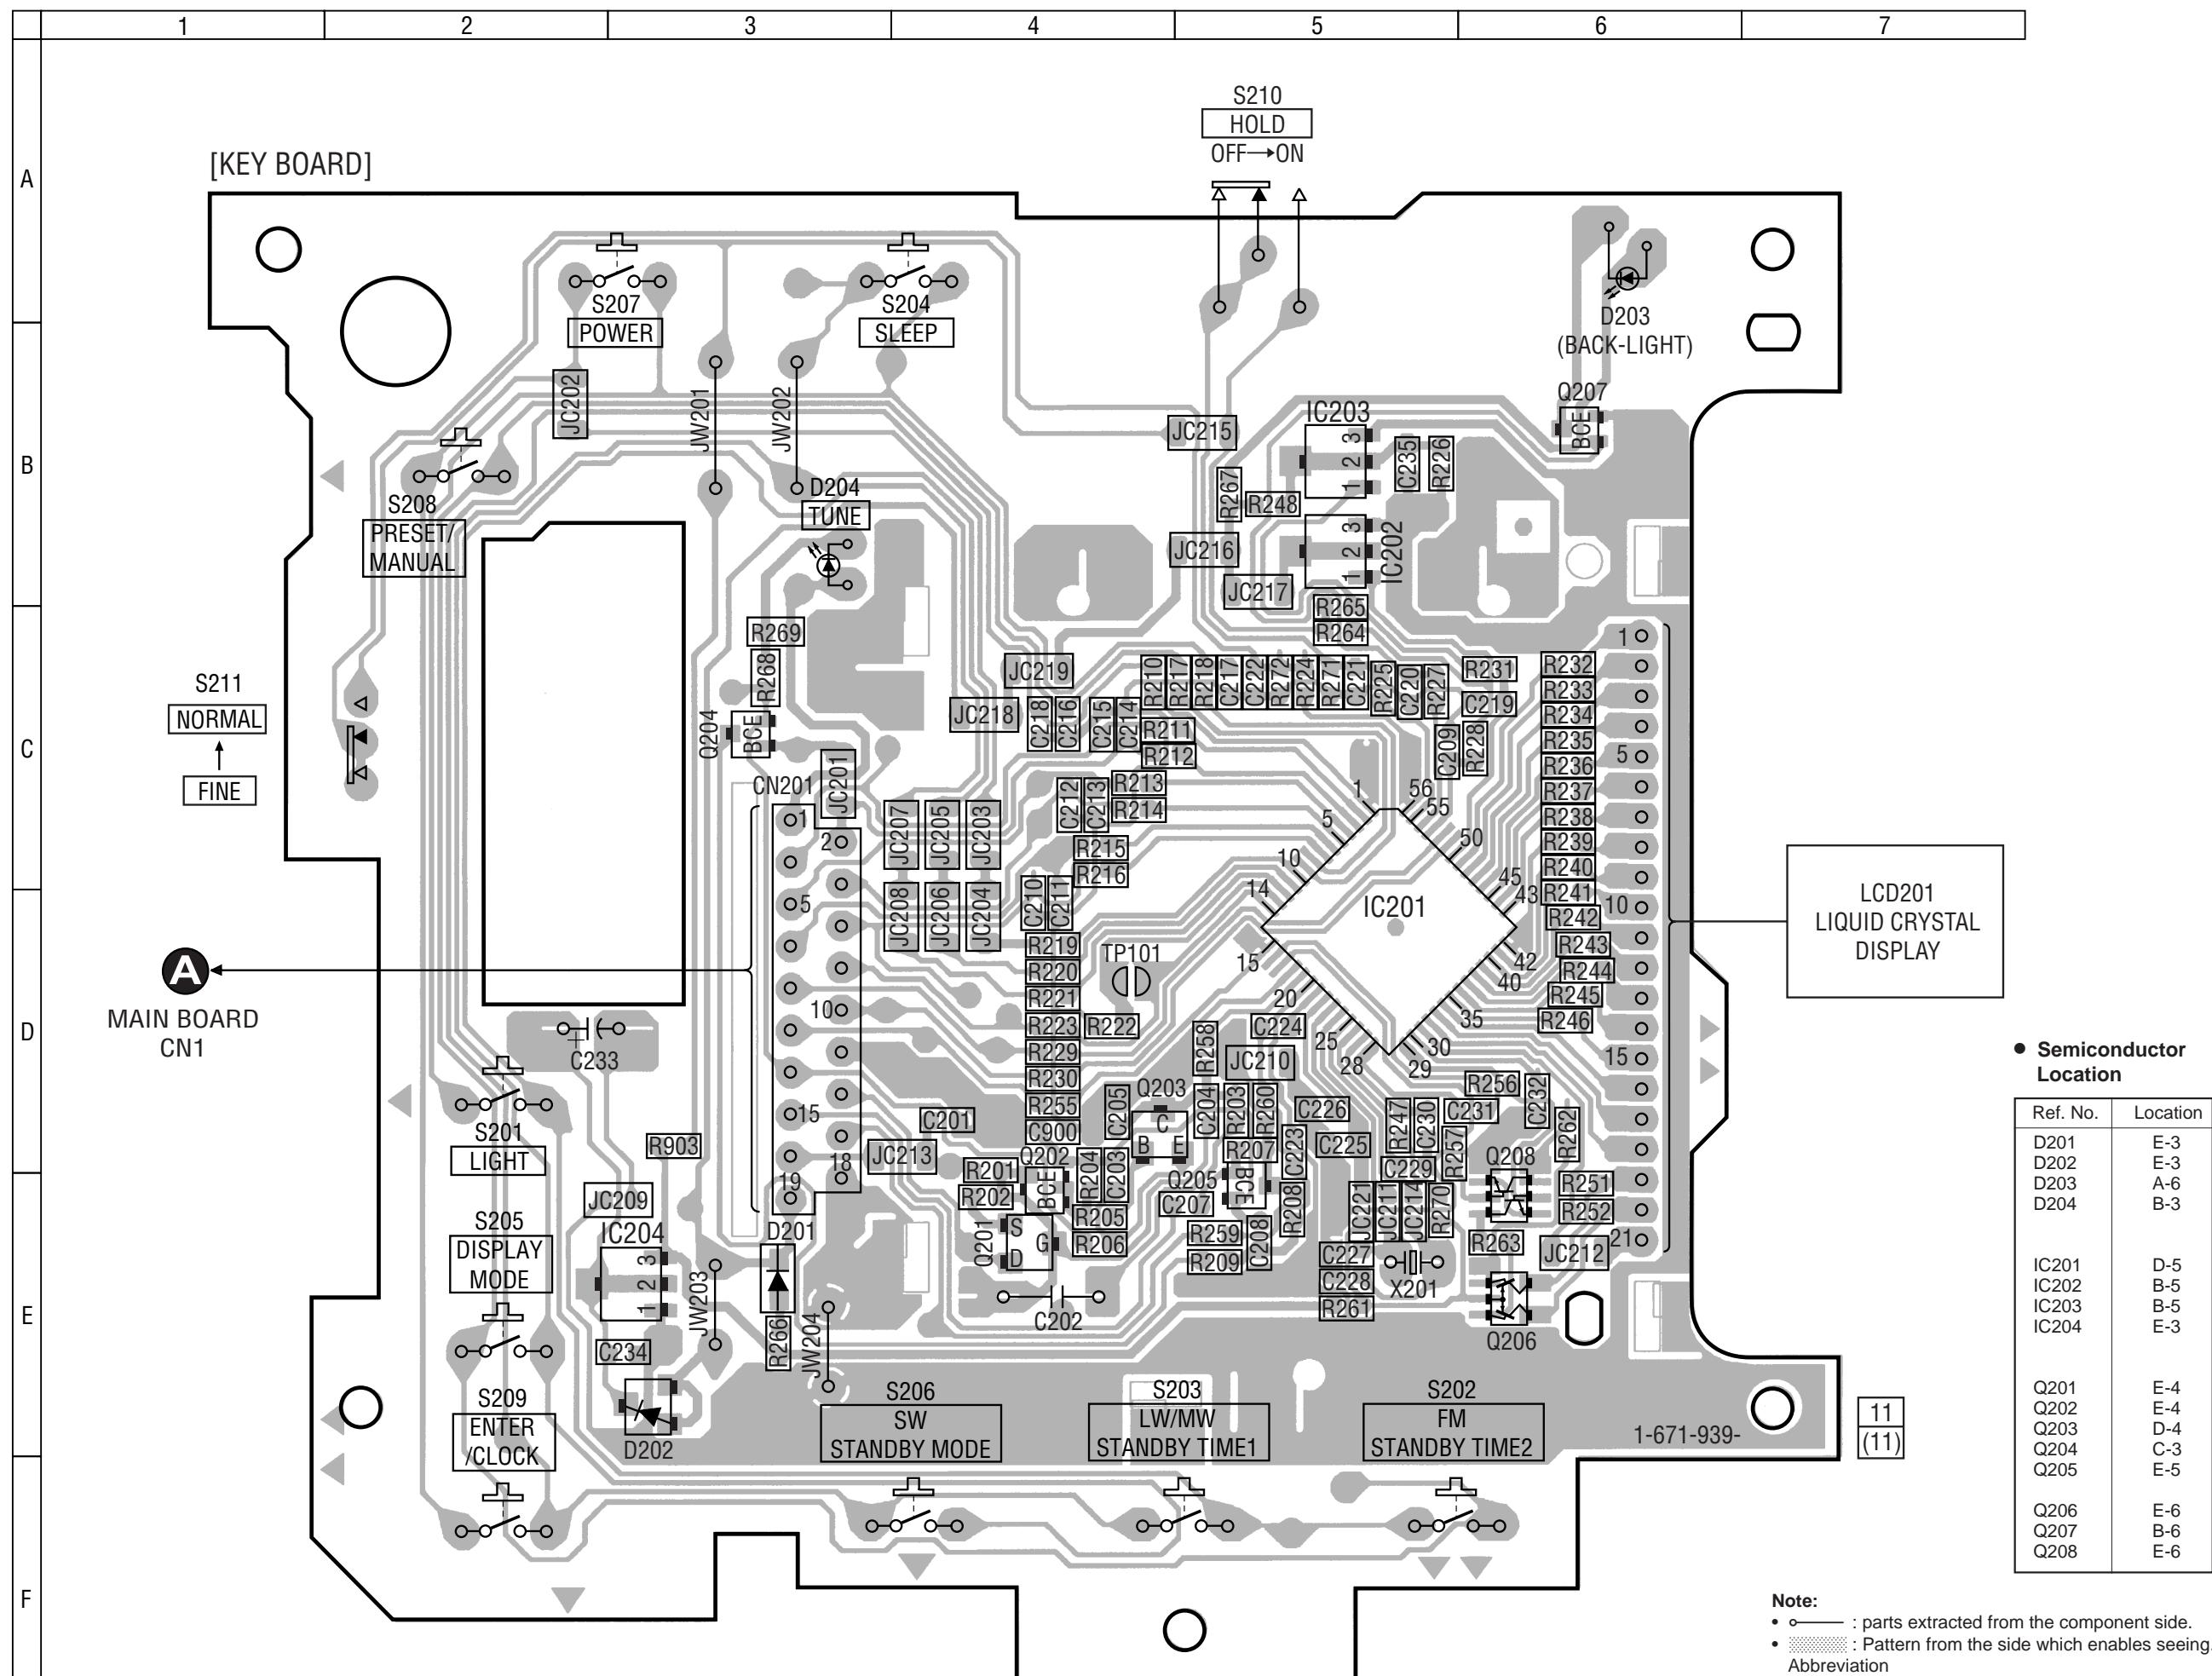

## • SCHEMATIC DIAGRAM (KEY SECTION)

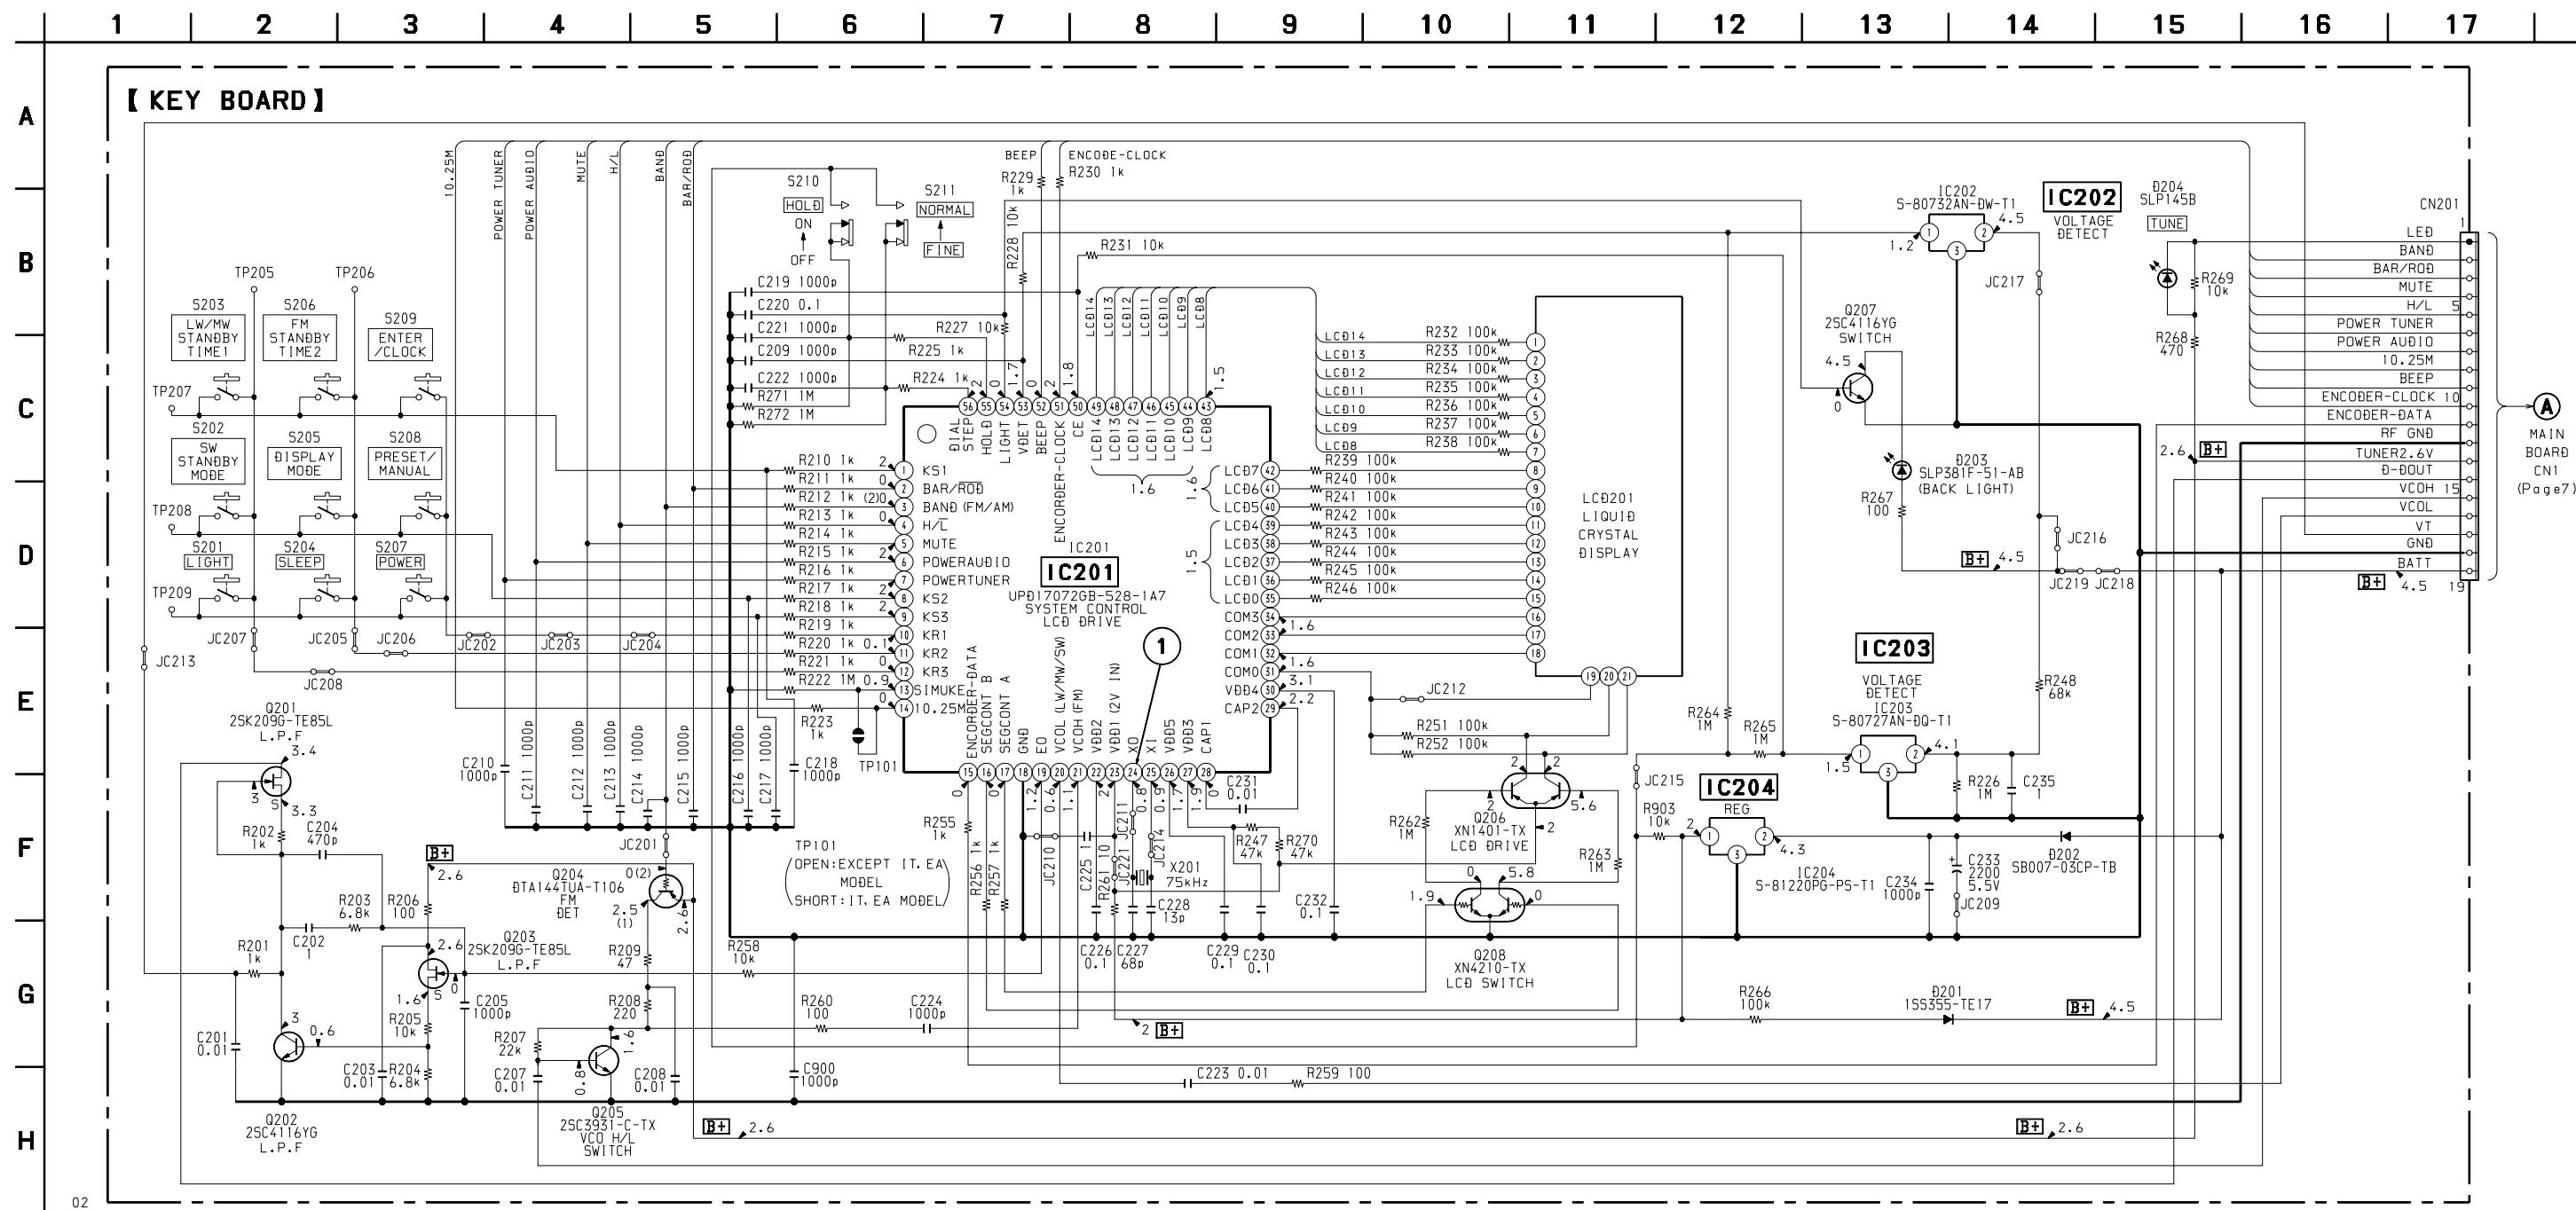

## • WAVEFORMS

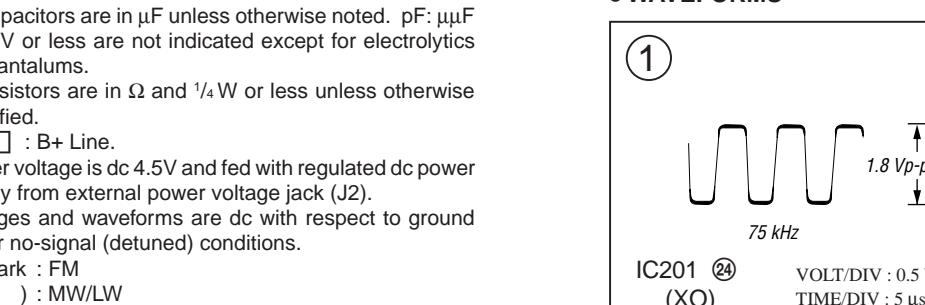

• ELECTRICAL PARTS LIST

• Abbreviation

AEP 1 : Countries except for German, Austrian and Scandinavian.  
AEP 2 : German, Austrian and Scandinavian.

**KEY**

(Service Manual See page 23 to 25)

Ref. No.	Former Type					New Type				
	Part No.	Description				Part No.	Description			
C207	1-162-905-11	CERAMIC CHIP	1PF	0.25PF	50V	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C900	_____					1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V
R903	_____					1-216-833-11	METAL CHIP	10K	5%	1/16W

**MAIN**

(Service Manual See page 25 to 28)

Ref. No.	Former Type					New Type				
	Part No.	Description				Part No.	Description			
C901	_____					1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V
C902	_____					1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
CF1	1-577-601-11	FILTER, CERAMIC				1-577-687-11	FILTER, CERAMIC			
CF2	1-760-238-71	FILTER, CERAMIC				1-579-392-71	FILTER, CERAMIC			
CF3	1-577-687-11	FILTER, CERAMIC				1-577-601-11	FILTER, CERAMIC			
CF4	1-760-238-71	FILTER, CERAMIC				1-760-023-11	FILTER, CERAMIC			
JC9	1-216-296-00	METAL CHIP	0	5%	1/8W	_____				
L900	_____					1-412-939-11	INDUCTOR	1uH		
R52	1-216-817-11	METAL CHIP	470	5%	1/16W	1-216-813-11	METAL CHIP	220	5%	1/16W
R82	1-216-845-11	METAL CHIP	100K	5%	1/16W	1-216-841-11	METAL CHIP	47K	5%	1/16W
R900	_____					1-216-174-00	METAL CHIP	100	5%	1/8W
R902	_____					1-216-813-11	METAL CHIP	220	5%	1/16W

• ACCESSORIES & PACKING MATERIALS

(Service Manual See page 28)

Ref. No.	Former Type					New Type				
	Part No.	Description				Part No.	Description			
	3-810-631-01	MANUAL INSTRUCTION (ENGLISH/JAPANESE/KOREAN) (Tourist)				3-860-716-01	MANUAL INSTRUCTION (ENGLISH/JAPANESE/KOREAN) (Tourist)			
	3-810-631-11	MANUAL INSTRUCTION (ENGLISH/FRENCH) (US,Canadian,AEP,E)				3-860-716-11	MANUAL INSTRUCTION (ENGLISH/FRENCH) (US,Canadian,AEP,E)			
	3-810-631-21	MANUAL INSTRUCTION (SPANISH/PORTGUESE/CHINESE) (AEP1,E)				3-860-716-21	MANUAL INSTRUCTION (SPANISH/PORTGUESE/CHINESE) (Canadian,AEP1,E)			
	3-810-631-31	MANUAL INSTRUCTION (GERMAN/DUTCH/SWEDISH) (AEP2)				3-860-716-31	MANUAL INSTRUCTION (GERMAN/DUTCH/SWEDISH) (AEP2)			
	3-810-631-41	MANUAL INSTRUCTION (ENGLISH/ITALIAN/ARABIC) (Italian,Saudi Arabia)				3-860-716-41	MANUAL INSTRUCTION (ENGLISH/ITALIAN/ARABIC) (Italian,Saudi Arabia)			
	3-893-802-21	BOOK,GUIDE,WAVE (Tourist)				3-893-802-14	BOOK,GUIDE,WAVE (Tourist)			
	3-912-863-31	SHORT WAVE GUIDE (US,Canadian,AEP,E,IT, Saudi Arabia)				3-912-863-05	SHORT WAVE GUIDE (US,Canadian,AEP,E,IT, Saudi Arabia)			
	_____					3-918-796-01	HOW TO CATCH THE WAVE HAND BOOK (Tourist)			

