

SPECIFICATIONS

| | |
|--|---|
| Circuit System: | 9-transistor 5-diode superheterodyne |
| Frequency Coverage: | FM 87.5~106 MHz (3.43~2.78 m) AM 530~1,605 kHz (566~187 m) |
| Intermediate Frequency: | FM 10.7 MHz AM 465 kHz |
| Antenna System: | FM built-in telescopic antenna AM built-in ferrite bar antenna |
| Maximum Sensitivity at 50 mW output: | FM 3 μV (10 dB) AM 150 μV/m (44 dB/m) |
| Selectivity at ±10 kHz off-resonance: | 22 dB at 1,400 kHz |
| Power Output at 10% distortion: | 180 mW maximum: 300 mW |
| Current Drain at zero signal: | FM 18 mA AM 16 mA at 180 mW output: 110 mA |
| Power Requirement: | Three "AA" size penlight batteries, 4.5 V in total |
| Speaker: | 2 1/4" x 1 3/4" (72 mm x 47 mm) PM dynamic, 8Ω |
| Dimensions: | 2 5/16" (W) x 4 1/16" (H) x 1 1/16" (D) (75 mm x 119 mm x 37 mm) |
| Weight: | 10.6 oz (300 g) |

2-4. DIAL CORD STRINGING

Preparation:

1. Remove the chassis and strip the dial back plate from the chassis.
2. Remove the E-ring and the fiber washer on the dial drum as shown in Fig. 2-6.

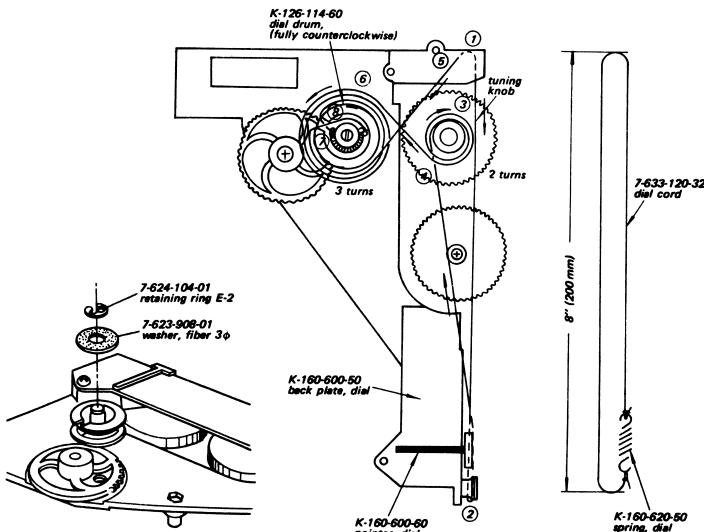


Fig. 2-6

Fig. 2-7 Dial cord stringing

Procedure:

1. Cut the dial cord and make a loop as shown in Fig. 2-7 using the spring.
2. Rotate the dial drum fully counterclockwise to its maximum capacitance position.
3. String the dial cord in numerical order as shown in Fig. 2-8.
4. After stringing, set the dial pointer at pointer setting position shown in Fig. 2-8.

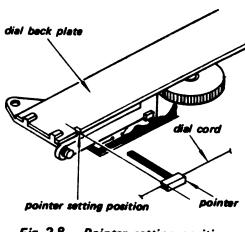


Fig. 2-8 Pointer setting position

3-1. AM IF ALIGNMENT

Test Equipments/Tools Required: Rf signal generator (for a-m)
VTVM
Loop antenna
8Ω resistor
Screwdriver for alignment

| Rf Signal Generator Coupling | Rf Signal Generator Frequency | VTVM Connection | Adjust | Remarks |
|---------------------------------|-------------------------------|--|--------|---|
| Loop antenna (See Fig. 3-1.) | 455 kHz (1 kHz 30% a-m) | Earphone jack with 8Ω load resistor in parallel | CFT A1 | Band selector: AM Volume control: maximum Tuning knob: fully counterclockwise position Adjust for maximum meter reading. |

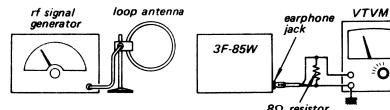


Fig. 3-1 AM i-f alignment, frequency coverage and tracking adjustment setup

3-2. FM IF ALIGNMENT

Test Equipments/Tools Required:

Sweep generator with 10.7 MHz marker generator
0.01μF ceramic capacitor
Oscilloscope
Screwdriver for alignment

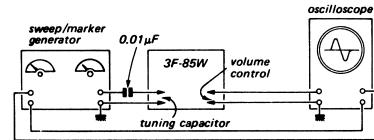


Fig. 3-2 FM i-f alignment setup

Preparation:

Oscilloscope Connection:
Across the volume control (See Fig. 3-4)
Sweep/Marker Generator Connection:
Across the tuning capacitor (See Fig. 3-3)
Sweep generator Center Frequency: 10.7 MHz
Marker Generator Frequency: 10.7 MHz
Volume Control Setting: Minimum
Band Selector Setting: FM

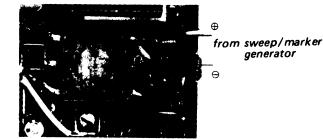


Fig. 3-3 Sweep generator connection

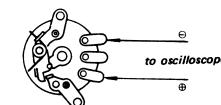


Fig. 3-4 Oscilloscope connection

Procedure:

1. Turn the core of IFT F4 fully counterclockwise.
2. Turn the core of IFT F1, IFT F2 and IFT F3 to obtain the maximum amplitude response curve on the scope shown in Fig. 3-5.
3. Turn the core of IFT F4 to obtain the symmetrical "S" curve shown in Fig. 3-6.

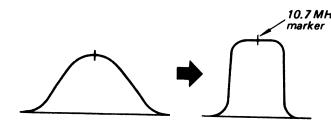


Fig. 3-5 Response curve


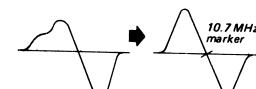


Fig. 3-6 "S" curve

| Sweep/Marker Generator Coupling | Sweep/Marker Generator Frequency | Oscilloscope Connection | Adjust | Remarks |
|-------------------------------------|----------------------------------|-----------------------------------|--------------------------------------|---|
| Tuning capacitor (See Fig. 3-3.) | 10.7 MHz | Volume control (See Fig. 3-4.) | IFT F1 IFT F2 IFT F3 IFT F4 | Band selector: FM Adjust for maximum amplitude and symmetrical "S" curve on the scope. |


MOUNTING DIAGRAM

- Conductor Side -

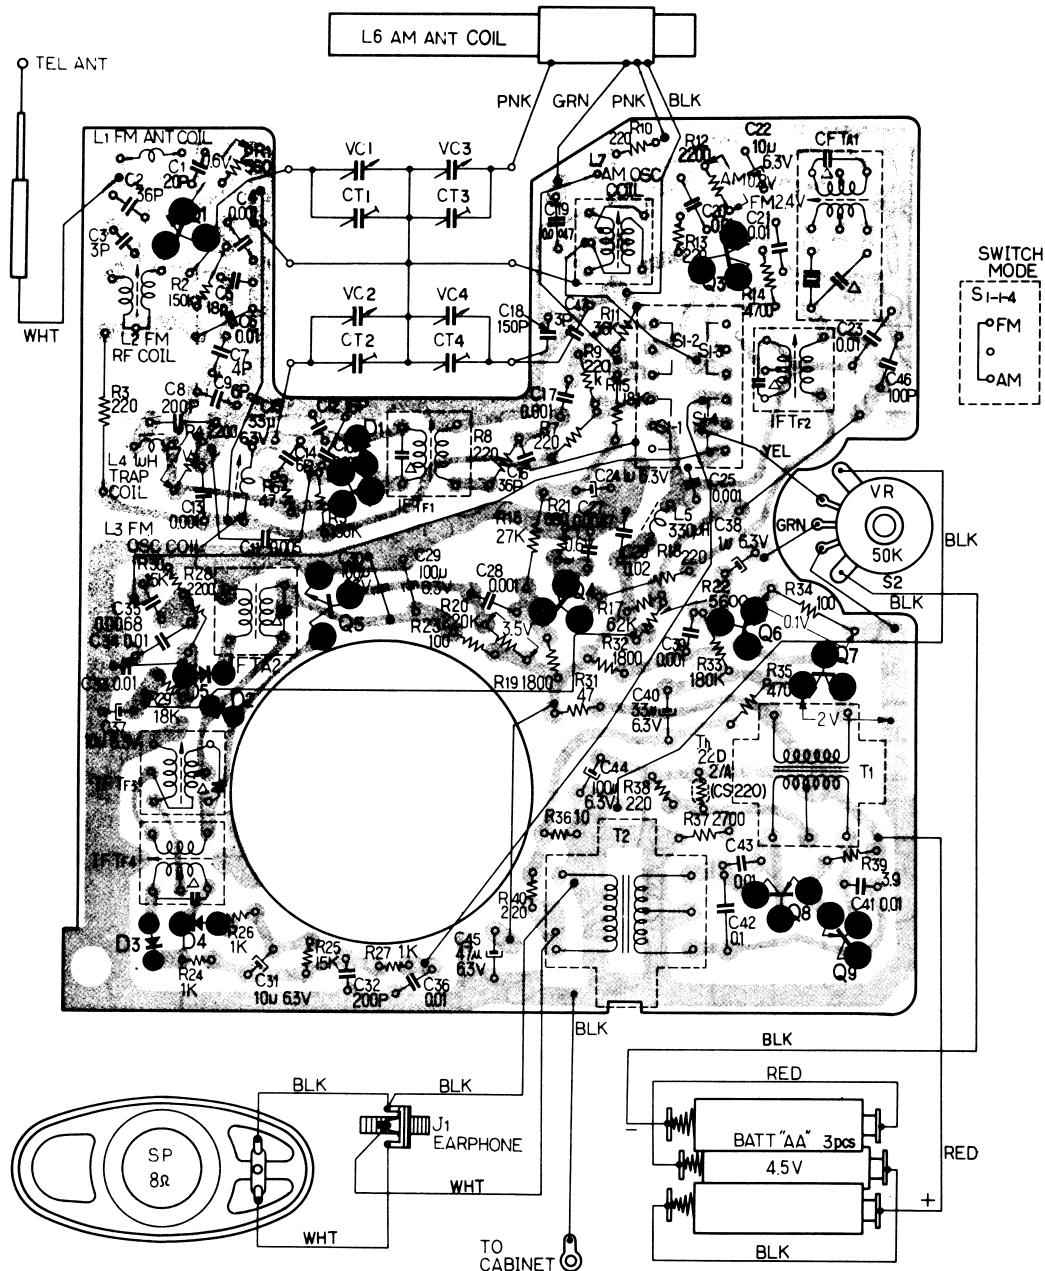

Note:

- Printed circuit board, Part No.: 1-539-711-11
- The following parts are mounted on the conductor side, C11, C15, C30 and C33.
- Capacitors marked Δ are built in if transformers.

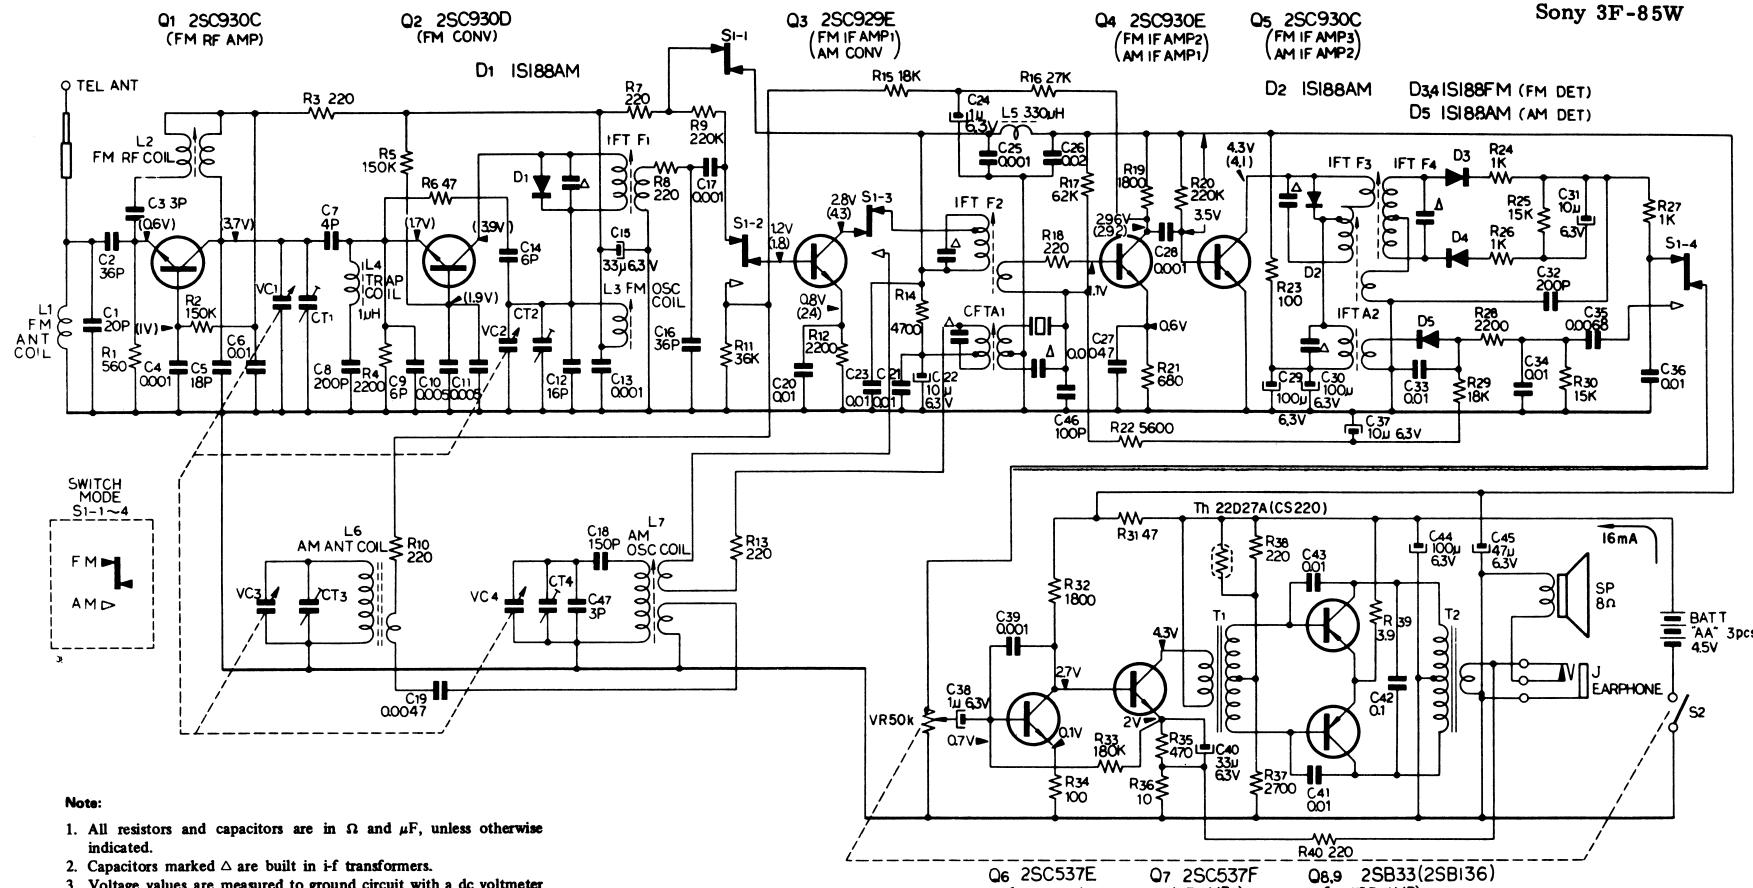**Note:**

- All resistors and capacitors are in Ω and μF , unless otherwise indicated.
- Capacitors marked Δ are built in i-f transformers.
- Voltage values are measured to ground circuit with a dc voltmeter ($20 \text{ k}\Omega/\text{V}$) and current value is measured with a dc ammeter. Voltage and current values are measured when no signal is received and voltage values in () are taken with band selector set to FM.
- Variations may be noted due to normal production tolerances.
- When replacing transistors Q8 and Q9, use 2SB136.
- When replacing thermistor Th, use CS220 and remove R38 (220Ω).