

TC-765

*UK Model
AEP Model
US Model
Canadian Model
PX Model*



STEREO TAPE DECK

SPECIFICATIONS

GENERAL

| | | | |
|----------------------------|--|--------------------------------------|--|
| Power Requirements: | 120V ac, 60 Hz (US, Canadian model) 110V, 120V, 220V, 240V ac, 50/60 Hz (UK, AEP, PX model) | Fast Forward and Rewind Time: | Approx. 150 seconds with 740 m (2,400 ft) tape |
| Power Consumption: | 110W (US, Canadian model) 90W (UK, AEP model) 80W (PX model) | Recording Time: | With 1,100 m (3,600 ft), 27 cm reel Stereo recording 180 minutes at 19 cm/s Mono recording 720 minutes at 9.5 cm/s |
| AC Outlet: | 300W, unswitched (US, Canadian model) | Heads: | Record head 1, Playback head 1 Erase head 1 |
| Dimensions: | Approx. 445 (w) x 525 (h) x 235 (d) mm 17½ (w) x 20⅝ (h) x 9¼ (d) inches including projecting parts and controls | Motors: | AC servo-controlled capstan motor 1 Induction reel motor 2 |
| Weight: | 26.5 kg, 58 lb 7 oz (US, Canadian model) 27 kg, 58 lb 8 oz (UK, AEP, PX model) | Reel: | Up to 27 cm (10½-inch) |
| Track: | 4-track 2-channel stereo recording and playback | | |
| Tape Speed: | 19 cm/s (7½ ips) 9.5 cm/s (3¾ ips) | | |

— Continued on page 2 —

SAFETY-RELATED COMPONENT IDENTIFICATION

COMPONENTS IDENTIFIED BY SHADING IN THE SCHEMATIC DIAGRAMS AND IN THE PARTS LIST ARE CRITICAL TO SAFE OPERATION. REPLACE THESE COMPONENTS WITH SONY PARTS WHOSE PART NUMBERS APPEAR AS SHOWN IN THIS MANUAL OR IN SUPPLEMENTS PUBLISHED BY SONY.

SONY
SERVICE MANUAL

TC-765

Frequency Response: With Sony Ferri-Chrome tape
 30–25,000 Hz \pm 3 dB at 19 cm/s
 30–18,000 Hz \pm 3 dB at 9.5 cm/s
 With SLH tape
 30–25,000 Hz \pm 3 dB at 19 cm/s
 30–18,000 Hz \pm 3 dB at 9.5 cm/s
 With regular tape
 30–18,000 Hz \pm 3 dB at 19 cm/s
 30–15,000 Hz \pm 3 dB at 9.5 cm/s

Wow and Flutter: NAB
 0.04% WRMS at 19 cm/s
 0.08% WRMS at 9.5 cm/s
 DIN
 \pm 0.07% at 19 cm/s
 \pm 0.15% at 9.5 cm/s

S/N Ratio: 61 dB (NAB) with Sony Ferri-Chrome Tape
 61 dB (DIN 1975 rev.) with Sony Ferri-Chrome Tape
 56 dB (DIN, old)

Total Harmonic Distortion: 0.7%

Bias Frequency: 160 kHz

Equalization: 3,180 μ S + 50 μ S (19 cm/s)
 3,180 μ S + 90 μ S (9.5 cm/s)

Inputs: MIC (two phone jacks)
 Sensitivity: 0.2 mV (-72 dB)
 Impedance: for low-impedance microphone
 LINE IN (two phono jacks)
 Sensitivity: 0.06 V (-22 dB)
 Impedance: 100 k Ω
 REC/PB (connector) (UK, AEP, PX model)
 Input impedance: less than 10 k Ω

Outputs: LINE OUT (two phono jacks)
 Normal level: 0.435 V (-5 dB) with PB LEVEL control set to center detent position
 0.775 V (0 dB) with PB LEVEL control set to "10"
 Load impedance: 100 k Ω
 Suitable load impedance: more than 10 k Ω
 HEADPHONES (binaural jack)
 Load impedance: for low-impedance headphones
 REC/PB (connector) (UK, AEP, PX model)
 Output impedance: less than 10 k Ω

Other Jack: 11-pin remote control connector

0 dB = 0.775 V

MODEL IDENTIFICATION Specification label

UK, AEP model

| | |
|--------------------------|--------------------|
| SONY. | |
| TAPECORDER | TC-765 |
| 110.120.220.240V | \sim 50/60Hz 90W |
| NO. <input type="text"/> | |
| MADE IN JAPAN | |

US model

| | |
|--------------------------|-----------|
| SONY. | |
| TAPECORDER | TC-765 |
| AC 120V | 60Hz 110W |
| NO. <input type="text"/> | |
| MADE IN JAPAN | |

Canadian model


| | |
|--------------------------|-----------|
| SONY. | |
| TAPECORDER | TC-765 |
| AC 120V | 60Hz 110W |
| NO. <input type="text"/> | |
| MADE IN JAPAN | |

PX model

| | |
|--|--------|
| SONY. | |
| TAPECORDER | TC-765 |
| NO. <input type="text"/> MADE IN JAPAN | |
| AC 120V 80W 50/60Hz | |


SECTION 1
OUTLINE

1-1. BLOCK DIAGRAM - System Control Section -

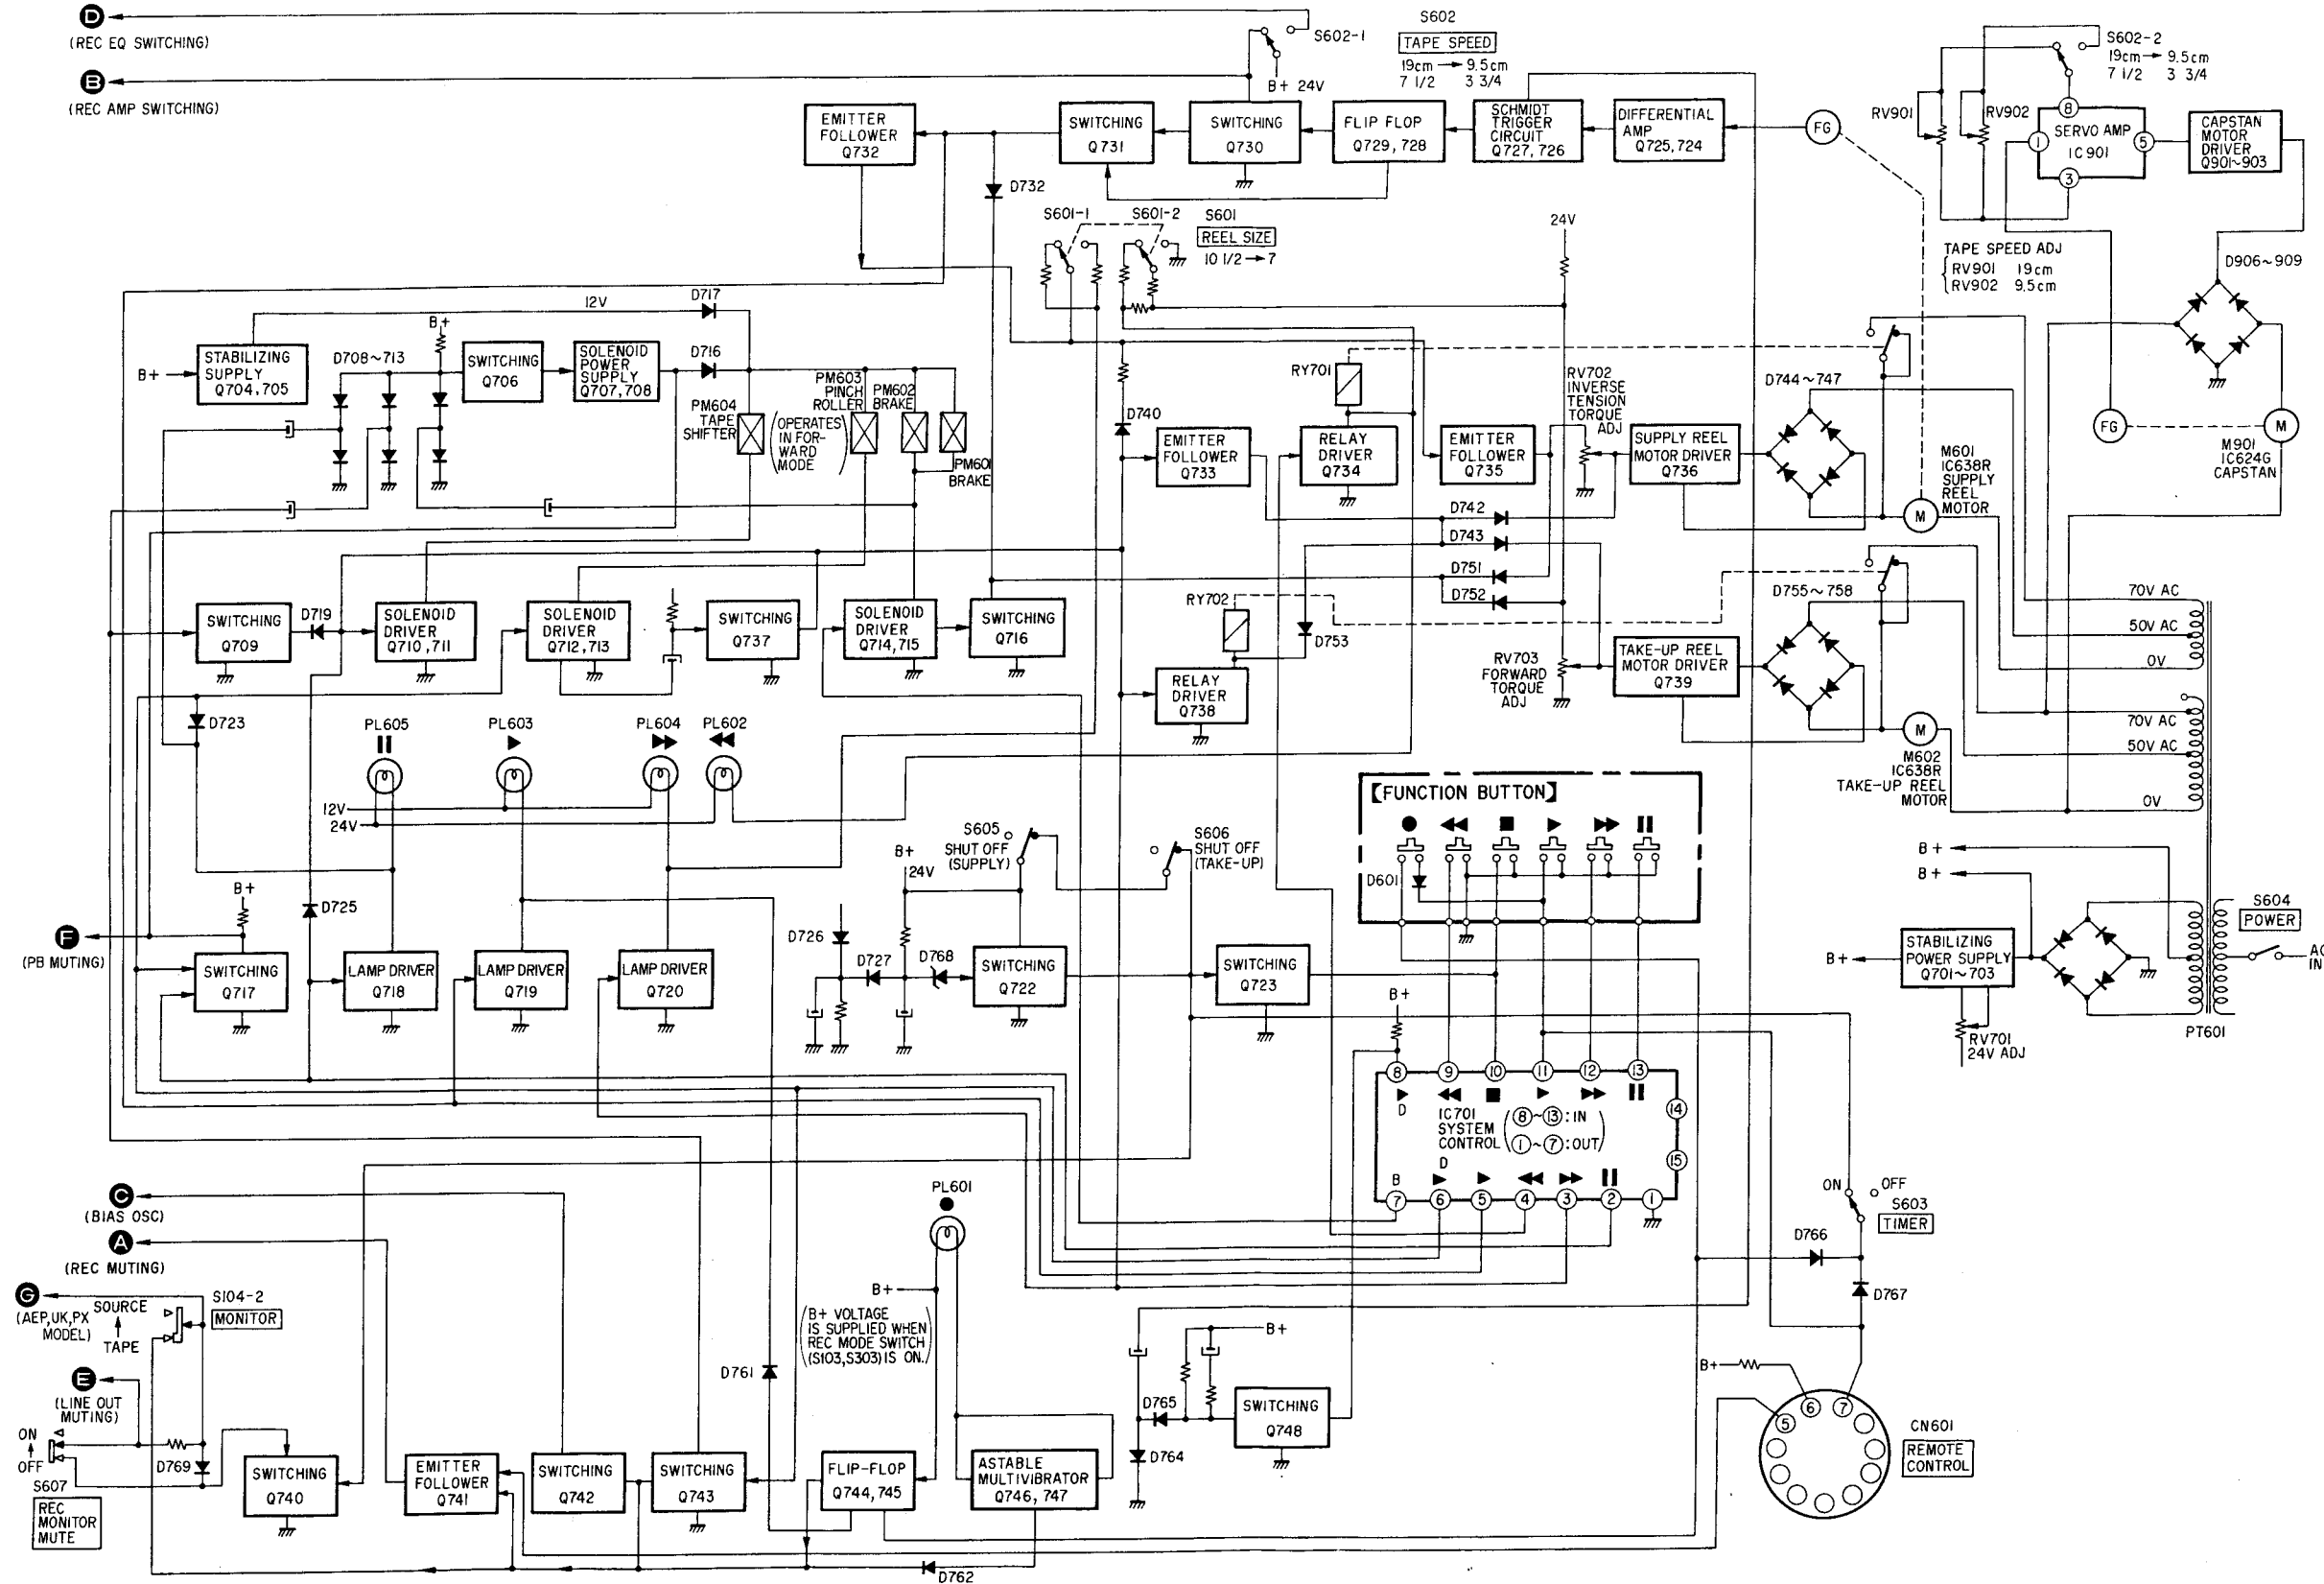

TC-765 TC-765

1-2. BLOCK DIAGRAM – Amplifier Section –

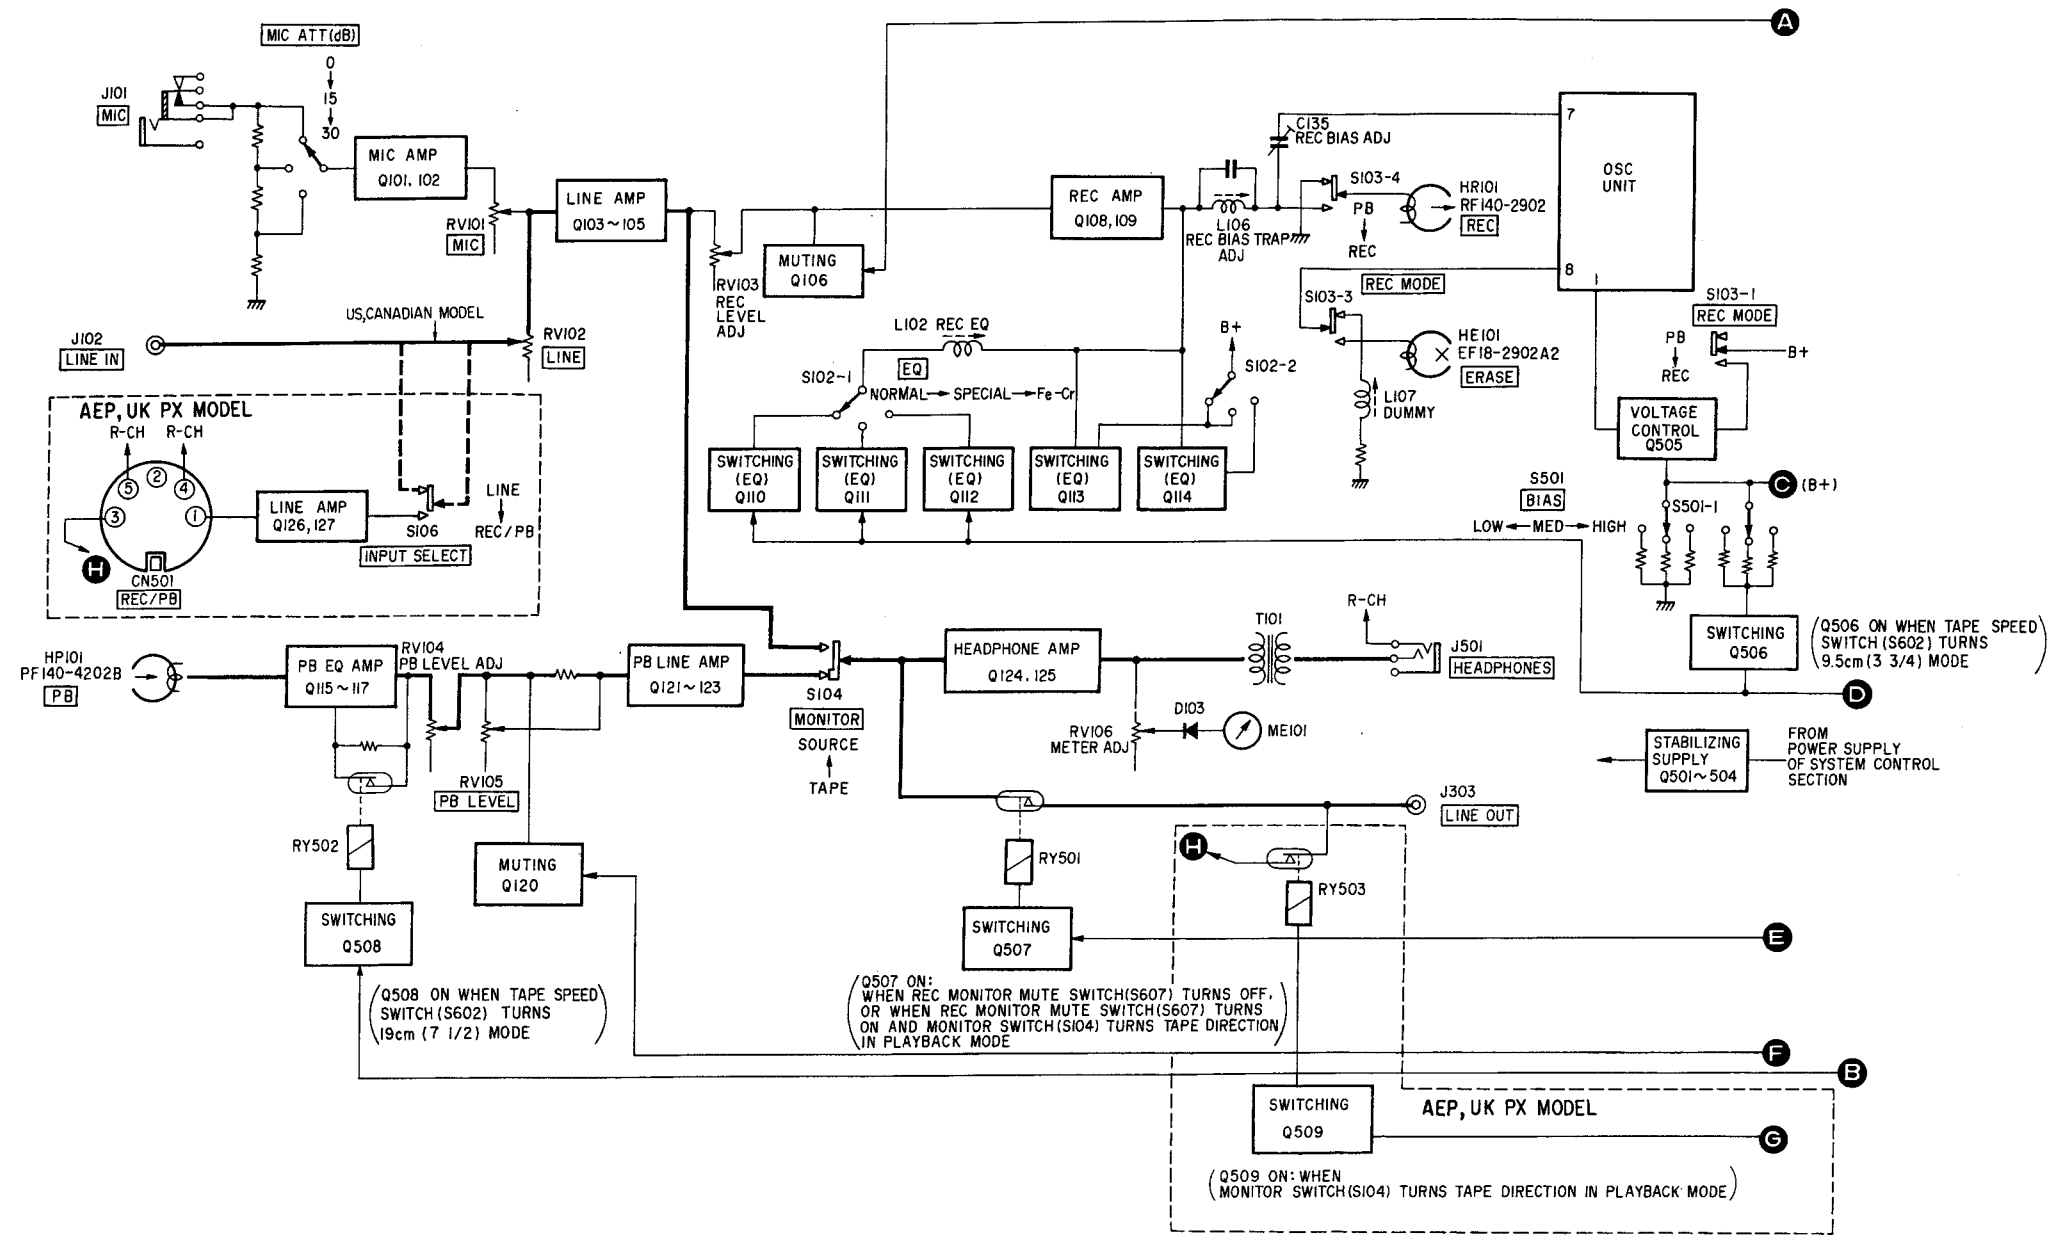

SECTION 2
DISASSEMBLY

1-3. NOTE ON REPAIRING

NOTE ON REPAIRING

- This set does not change playback level when TAPE SELECT switches are changed.
- The LINE OUT signal is cut when REC MONITOR MUTE switch (S607) on the rear panel is turned ON except when MONITOR switch is in TAPE position in playback mode.
- If TIMER switch is previously set to ON position, it may happen to erase test tapes because the set becomes automatically in the auto playback (awakening) or auto record mode determined by REC MODE switch position when POWER switch is turned ON.
- PB LEVEL controls on the front panel control LINE OUT and HEADPHONES levels, and also VU meters indicate the amount of PB LEVEL controlling. When PB LEVEL is in the center-click positions, LINE OUT levels are standard 0.44V (-5 dB) and VU meters indicate "0". When PB LEVEL controls are in their full-clockwise stops, LINE OUT levels are 0.775V (0 dB).
- Three kinds of hexagonal-socket screwdrivers are needed for the following adjustment/removal.


| Screwdriver | Adjustment/removal |
|-------------|--|
| 1.27 mm | Tension-arm pin Intermediate pin Switch knob Switch lever |
| 1.5 mm | Head azimuth FG-holding boss Control knob Motor pulley |
| 2.0 mm | Reel drum |

6. Tape BIAS/EQ recommendations

The following list shows the recommended settings, which have been determined through critical listening tests and electrical characteristic measurements on commercially available tapes. The setting can be changed according to the personal preference. For Sony tapes, be sure to use the recommended settings to obtain the optimum tape characteristics.

| EQ | NORMAL | SPECIAL | Fe-Cr |
|------|-------------|---|--|
| BIAS | | | |
| LOW | SONY PR | BASF LH, LHS AGFA PE, PEM MEMOREX | SCOTCH #211, #212, #213 AMPEX 406, 407 |
| MED | SCOTCH #218 | SONY SLH SCOTCH CLASSIC TDK AUDUA | SONY DUAD SCOTCH #206, #207 MAXELL UD |
| HIGH | | | SCOTCH #250 |



- | | | |
|------------------------------------|---------------|--|
| Reel Panel Removal: | 1, 2 | (to Mechanical Adjustment) |
| Amp Panel Removal: | 3, 4, 5, 6, 7 | (to VU Meter and Variable Resistor Replacement) |
| Perforated Panel (top) Removal: | 8, 9 | (to Fuse Replacement) |
| Perforated Panel (bottom) Removal: | 10, 11 | (to Audio Amp Board Check) |
| Side Board (right) Removal: | 12, 13 | (to Tape Speed and Forward Torque Adjustments) |
| Side Board (left) Removal: | 14, 15 | (to B+ and Supply Reel Back Tension Adjustments) |
| Rear Board Removal: | 16, 17 | (to System Control Board Checking) |

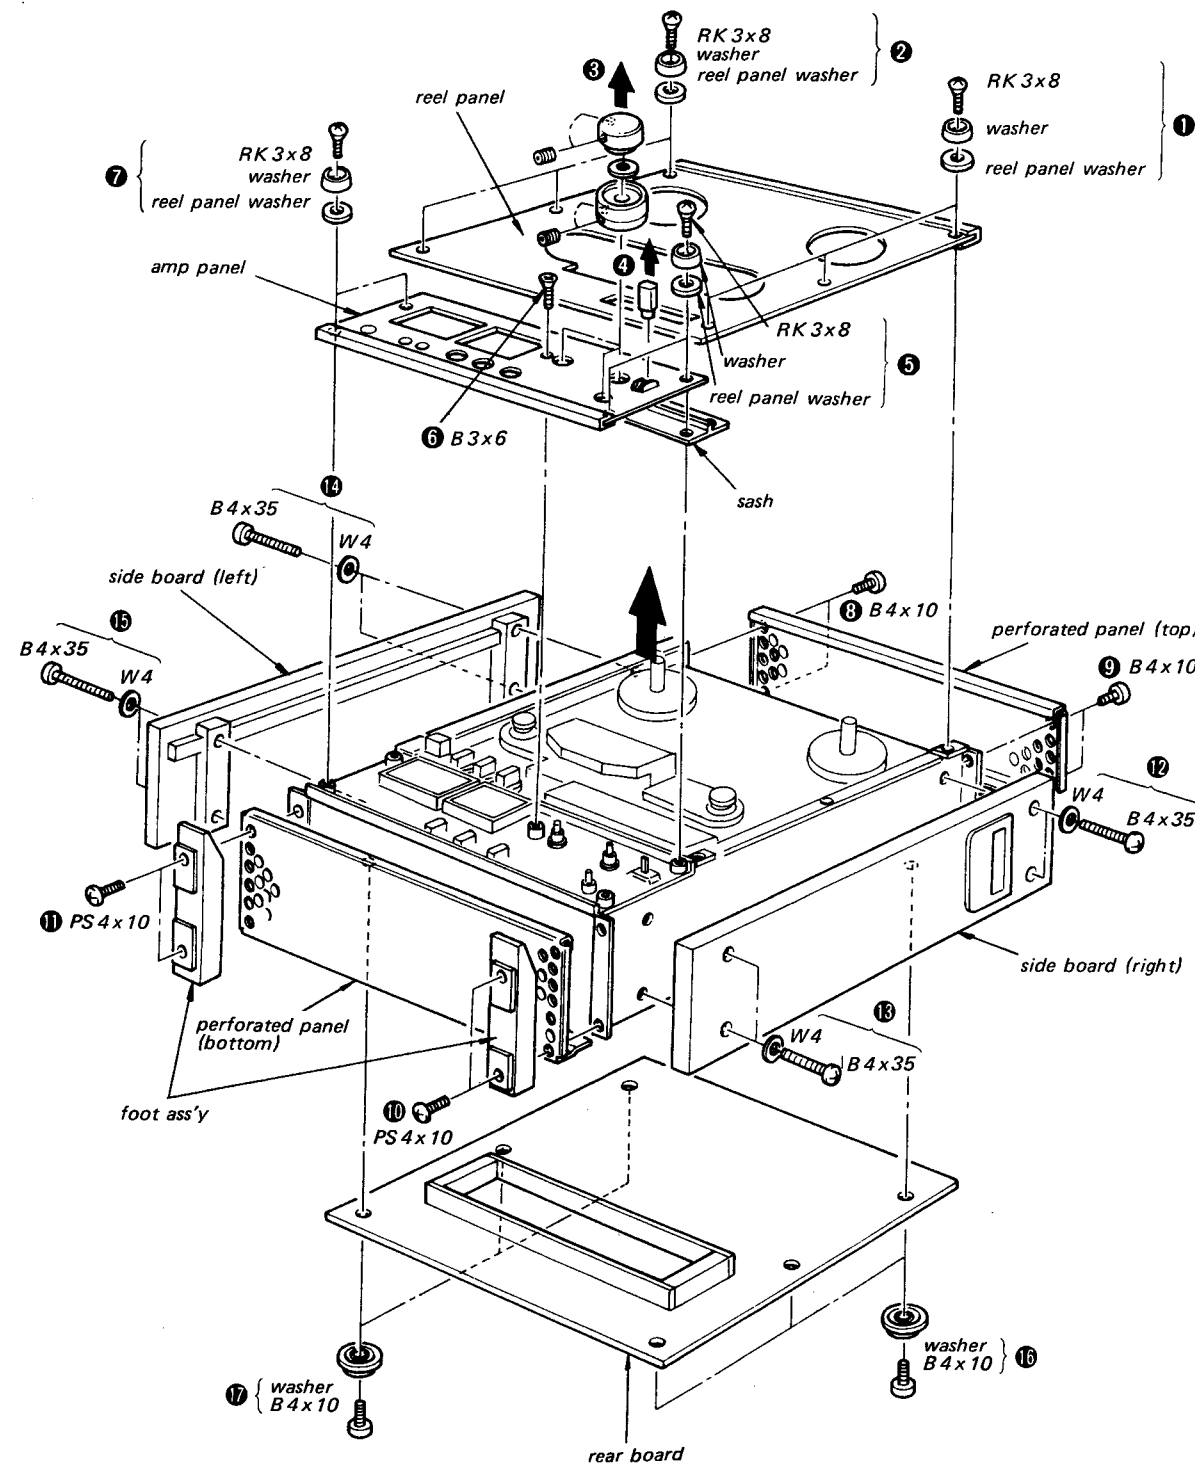


TENSION ARM BASE REMOVAL

Microswitch Installation


Turn the tension lever and adjust the position of the microswitch for the specified clearance when it switches.

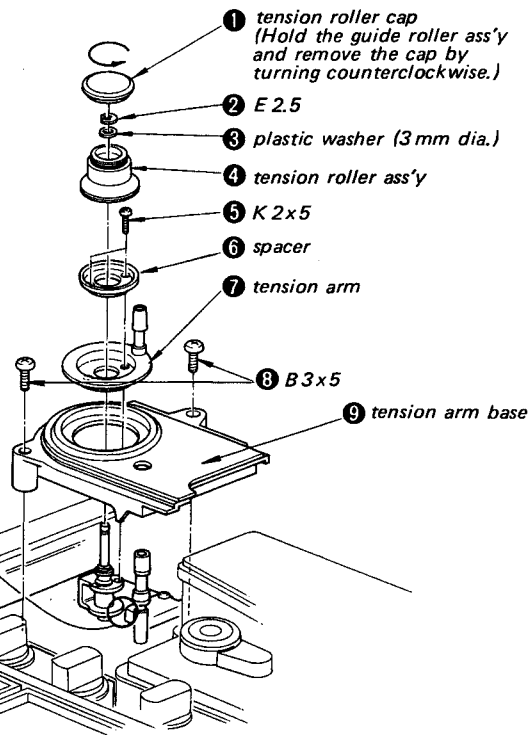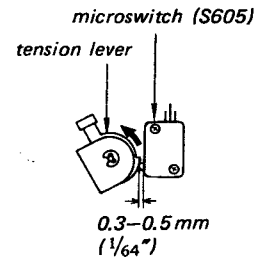

REEL TABLE REMOVAL

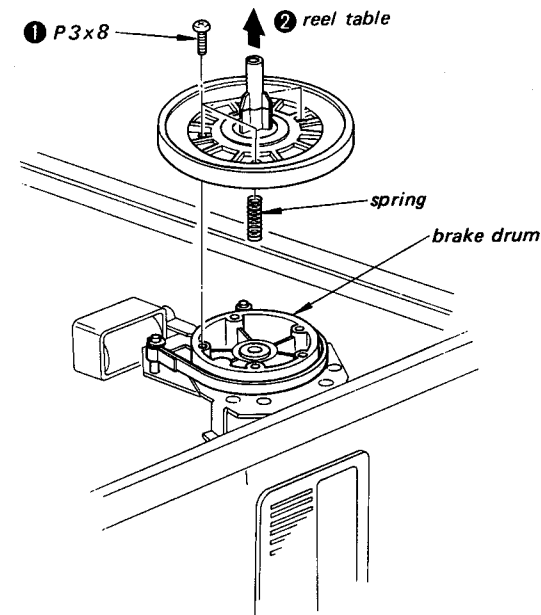


HEAD COVER REMOVAL

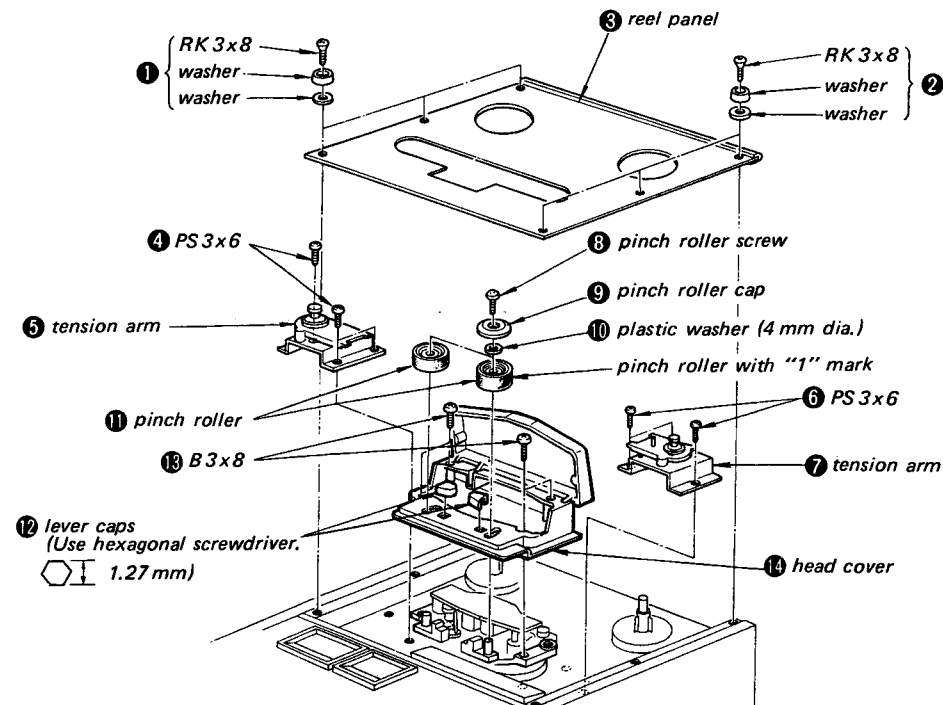



Note: When reattaching the pinch rollers, be sure to reattach the one with "1" mark at the right side.

MOTOR PULLEY INSTALLATION

Use a hexagonal screwdriver.

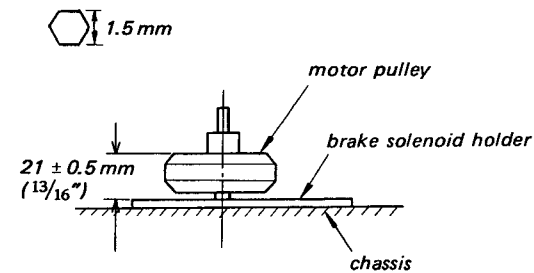

ELECTROSTATIC DISCHARGE BRUSH INSTALLATION

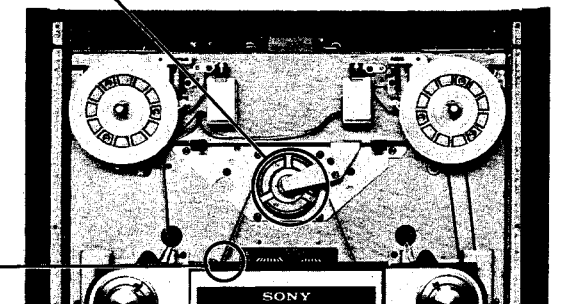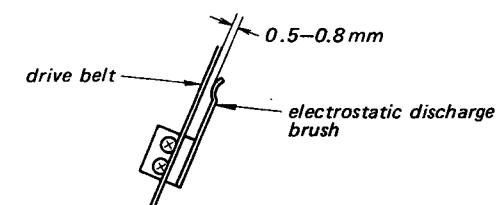


SECTION 3
MECHANICAL ADJUSTMENT

3-1. MECHANICAL ADJUSTMENTS


Tape Path Adjustment

1. In playback mode, travel a blank tape SLH-S1, and adjust the positions of the tension-arm guide and intermediate pin.

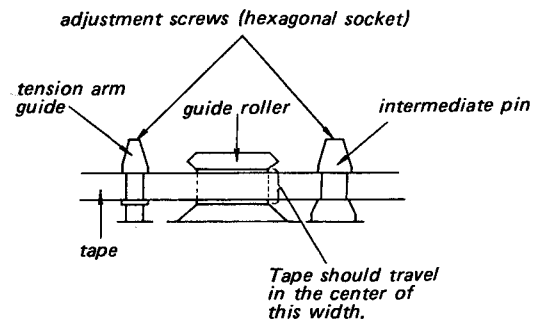


After the adjustment, tighten the adjustment screws.

2. Travel a blank tape SLH7-740 and adjust the position of the tape guides to eliminate tape curls.

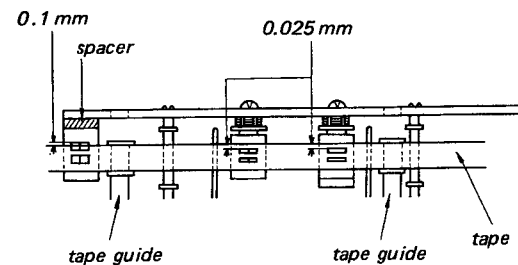

3. Travel a blank tape SLH-S1 and adjust the height of each head for the specified clearances. To adjust the erase head height, select appropriate spacer. To adjust the record and playback heads, turn the height/zenith adjustment screws in the same angle and direction.


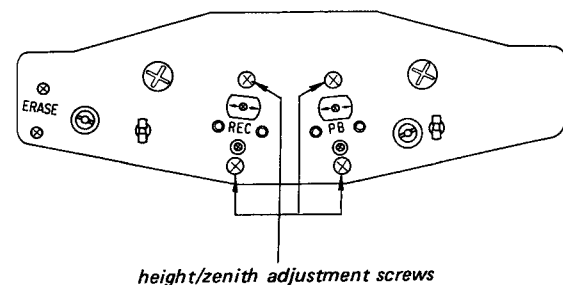


After the adjustment, apply a suitable locking compound to the adjusted screws.


Reel Table Height Adjustment

— playback and rewind modes —

1. Loosen the adjustment screws and adjust the height of the reel tables for the specified height.
2. If the tape touches the reel in playback, fast forward and rewind modes, recheck the tension arms, standard reels and the tape.

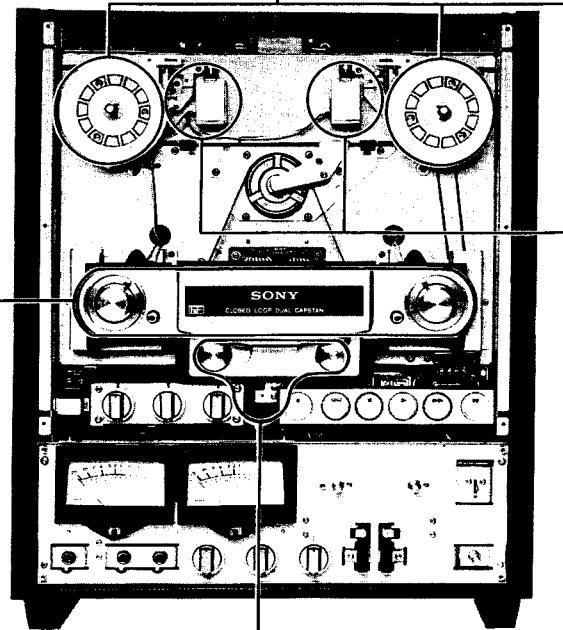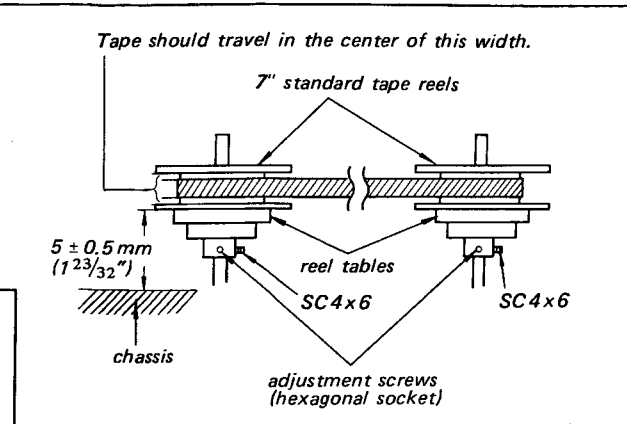


Note: Adjustment screw positions for the 2T PB and 4T PB heads are the same as the 2T REC head. Azimuth adjustment screws are so constructed to react each other. Take care in adjusting azimuth adjustment screw.

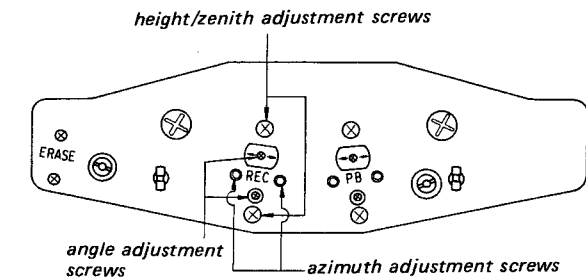

Brake Adjustment (1)

Adjust both the supply- and take-up-side brakes.

1. In stop mode, 0.5–0.7 mm clearance should exist between the brake-band guide and brake band.
2. In playback mode (the brake solenoid should be in ON condition), loosen the adjustment screw and adjust the position of the solenoid link in the arrowed direction so that the brake band and brake-band guide uniformly touch.

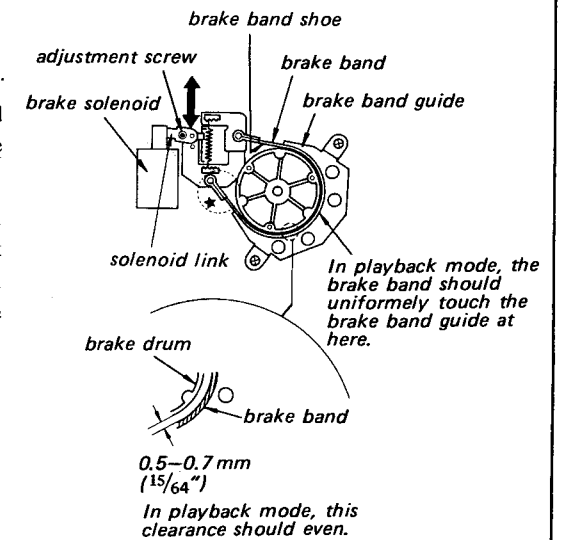


Note: If the brake-release stroke is long, the brake band may bend at the position shown with *. Be sure not to bend the brake band.

3. After the adjustment, apply a suitable locking compound to the adjustment screw.

Pinch Roller Lever Position Adjustment

1. Remove the head cover.
2. Reattach both the pinch rollers.
3. Place the set in the playback mode. Check that the solenoid is in on condition (energized).
4. Loosen the adjustment screw and push the slide adjustment plate in the arrowed direction for the specified clearance between the pinch roller levers A and B, and tighten the adjustment screw.
5. After the adjustment, apply a suitable locking compound to the adjustment screw.

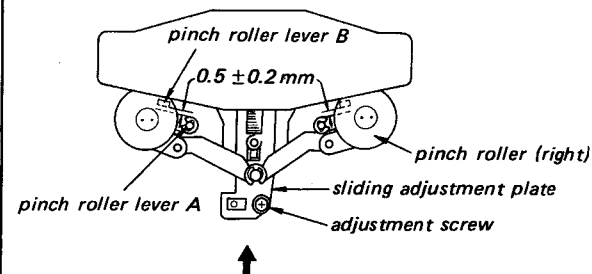


Brake Adjustment (2) and Brake Torque Adjustment

Adjust both the supply- and take-up-side brakes.

1. In stop mode, loosen the adjustment screw and adjust the position of the brake stopper for the specified clearance between the brake stopper and brake lever.
2. After the adjustment, tighten the adjustment screw and apply a suitable locking compound to the screw.
3. Measure both the forward and backward brake torques. Adjust spring-hook position for the specified torques.


backward torque: 1,800–2,500 g·cm (25–34 oz·inch)
forward torque: 600–700 g·cm (8.5–9.5 oz·inch)

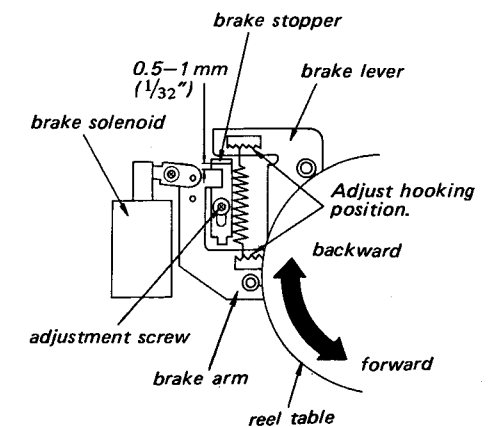



Pinch Roller Pressure Check

— playback mode —

1. Place the dial-cord ring between the pinch roller and pinch-roller cap.

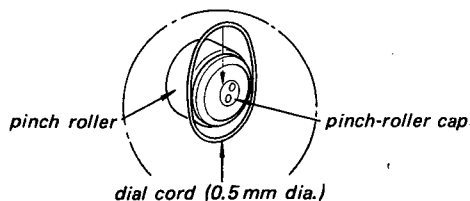


2. In playback mode, pull the spring scale on the center line made by the centers of the capstan and pinch roller.
3. Slowly return the pinch roller and read the spring scale just when the pinch roller starts to rotate.

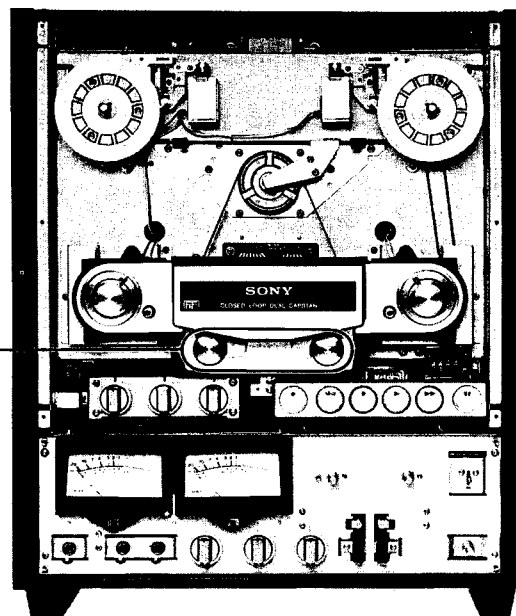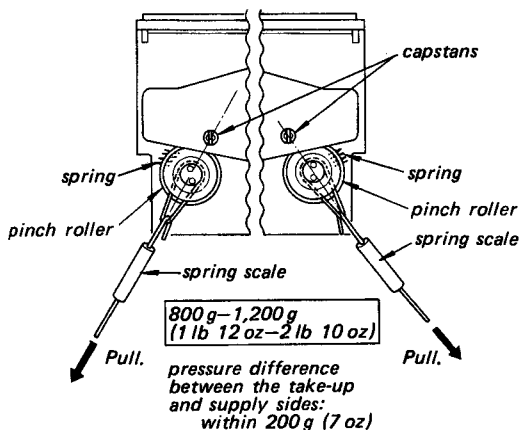

Forward Torque Adjustment

1. Remove the side board (right).
2. Apply the rated ac voltage to the AC IN.
3. Set the TAPE SPEED switch to 19 cm/s and REEL SIZE switch to 10½.
4. In playback mode, adjust RV703 for the specified torques.
5. Set REEL SIZE switch to 7 and check torques.

| | REEL SIZE switch | |
|-------|-----------------------------------|-----------------------------------|
| | 10½ | 7 |
| 50 Hz | 520-580 g-cm (7.3-8.0 oz-inch) | 260-320 g-cm (3.6-4.4 oz-inch) |
| 60 Hz | 380-440 g-cm (5.3-6.1 oz-inch) | 180-240 g-cm (2.5-3.3 oz-inch) |

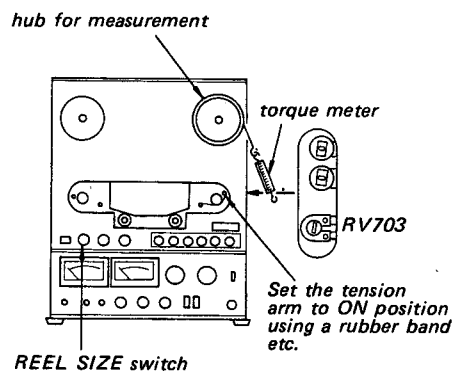

Supply Reel Back Tension Adjustment


Note: This adjustment requires a ultra-low frequency audio signal generator. If the signal generator is not available, do not attempt this adjustment.

1. Remove the side board (left).
2. Apply the rated ac voltage to AC IN.
3. Set RV702 to the fully-counterclockwise stop.
4. Put a torque meter on the supply reel tape.
5. Unsolder the RED and WHT lead wires from the FG at the system control board.
6. Set the signal generator's frequency to 20.2 Hz and attenuator to -20 dB.
7. Connect the signal generator to the points from where the two lead wires are unsoldered in step 5.
8. Set REEL SIZE switch to 10½ and TAPE SPEED switch to 19 cm.
9. In playback mode, adjust RV702 for specified torque.

| | <i>Back tension torque</i> |
|-------|----------------------------|
| 50 Hz | 150 g-cm (2.1 oz-inch) |
| 60 Hz | 120 g-cm (1.65 oz-inch) |


10. Change the audio signal generator's frequency to 7.14 Hz and check the torque meter reeding.

| | <i>Torque meter reeding</i> |
|-------|-----------------------------------|
| 50 Hz | 280-340 g-cm (3.9-4.7 oz-inch) |
| 60 Hz | 220-280 g-cm (3.1-3.8 oz-inch) |

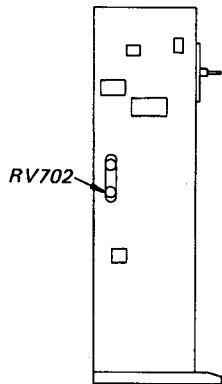

Fast Forward and Rewind Back Tension Check

1. Apply the rated ac voltage to AC IN.
2. Turn either the left- or right-side tension arm on using a rubber band.
3. Put a torque meter on the supply reel table. In fast forward mode, pull the torque meter in the arrowed direction at a speed of 19-9.5 cm/s and read the fast forward back tension on the torque meter.
4. Put a torque meter on the take-up reel table. In rewind mode, pull the torque meter and read the rewind back tension as in step 3.

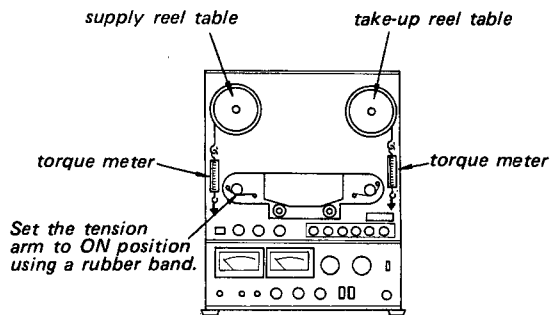

| | <i>REEL SIZE switch</i> | |
|-------|-----------------------------------|-----------------------------------|
| | 10½ | 7 |
| 50 Hz | 110-150 g-cm (1.6-2.0 oz-inch) | 80-120 g-cm (1.15-1.6 oz-inch) |
| 60 Hz | 70-110 g-cm (1.0-1.5 oz-inch) | 50-90 g-cm (0.7-1.2 oz-inch) |

3-2. SYSTEM CONTROL CHECK

System Control Check

Setting:

| | |
|--------------------------|--------------------|
| REEL SIZE switch: | 10½ |
| TAPE SPEED switch: | 19 cm |
| TIMER switch: | OFF |
| MONITOR switch: | TAPE |
| PB LEVEL control: | center click |
| REC MONITOR MUTE switch: | OFF |
| INPUT SELECT switch: | LINE |
| (AEP, UK, PX model) | |
| REC MODE switches: | released positions |

Put the 10½-inch blank tapes on the set.

Checking:


- Turn POWER switch ON. The VU meter lamps should light up.
- Depress REC MODE switches. The L-side lamp should light up when the L-side REC MODE switch is depressed, and the R-side lamp should light up when the R-side REC MODE switch is depressed. And the record button lamp should put on and off repeatedly.
- Depress the pause button. The pause button lamp should light up.
- Depress the record and forward buttons simultaneously. The record button lamp should turn from flickering to ON. At the same time, the forward button lamp should light up.
- Press the pause button. The pause button lamp should turn off and the pinch roller should press the capstan and become in forward record mode.
- Depress the fast forward button. The set should become in the fast forward mode. In this mode, the record button lamp flickers, forward button lamp turns off and the fast forward button lamp turns on.
- Depress the rewind button. The set should become in the rewind mode. In this mode, the fast forward button lamp should turn off and rewind button lamp turns on.
- Depress the forward button. The rewind button lamp should turn off and forward button lamp turns on. The tape should once completely stop traveling, and then become in the forward mode.
- The set should become in the stop mode only when both the tension arm microswitches turn off. The set should not become in the stop mode when one of the tension arm microswitches turns off.
- Turn TIMER switch ON. Turn POWER switch OFF once, and two to three second later turn POWER switch ON. Now the set should become in the forward record mode automatically.
- With REC MODE switches released (i.e., in the playback positions), perform the same procedure as shown in step 10. The set should become in forward mode automatically.
- Place the set in the forward record and simultaneous monitoring mode. Turn REC MONITOR MUTE switch on the rear panel ON. Now the signal should not come out from LINE OUT jacks. Rewind the recorded portion of the tape and place the set in the forward mode. Now the signal should come out from LINE OUT jacks. Turn REC MONITOR MUTE switch OFF.
- Depress the forward and pause buttons. Move the recorded portion of the tape back and forth. Sound signal should come out from LINE OUT jacks.

3-3. ELECTRICAL ADJUSTMENTS

Note: The adjustments should be performed in the order given in this service manual. The adjustments should be performed for both L-CH and R-CH.

Standard Record:

Set the REC LEVEL control for the specified output level.

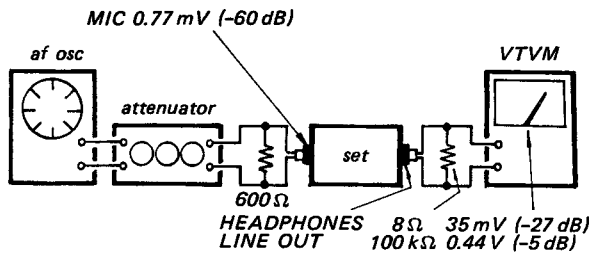

Control and Switch Settings:

Unless otherwise specified, set the controls and switches as follows.




| Controls | In playback | In record |
|--------------|--------------|--|
| MIC REC VOL | / | The position to produce the rated LINE OUT level with rated MIC input level. |
| LINE REC VOL | | The position to produce the rated LINE OUT level with rated LINE IN level. |
| PB VOL | center click | center click |

| Switch | In playback | In record |
|----------------------------------|-------------|---------------|
| POWER | ON | ON |
| REEL SIZE | 7 | 7 |
| TAPE SPEED | 19 | 19 |
| TIMER | OFF | OFF |
| MIC ATT | / | 0 |
| TAPE SELECT (BIAS) | / | MED |
| TAPE SELECT (EQ) | / | SPECIAL |
| REC MODE | PB | REC |
| MONITOR | TAPE | SOURCE (TAPE) |
| REC MONITOR MUTE | OFF | OFF |
| INPUT SELECT (AEP, UK, PX model) | LINE | LINE |

B+ Voltage Adjustment

Adjustment Location:


— function button board —

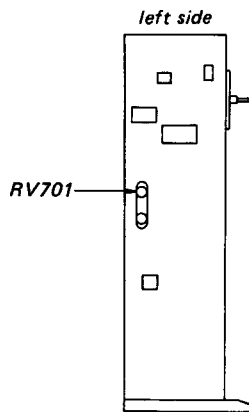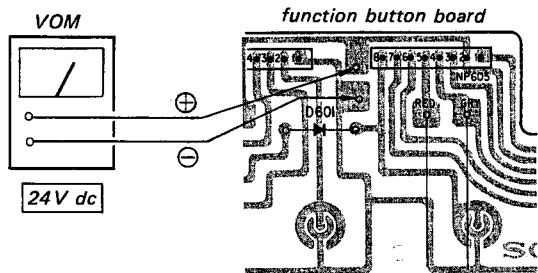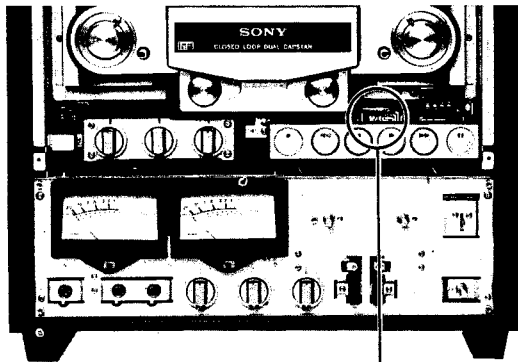

Tape Speed Adjustment

Procedure:

Mode: playback

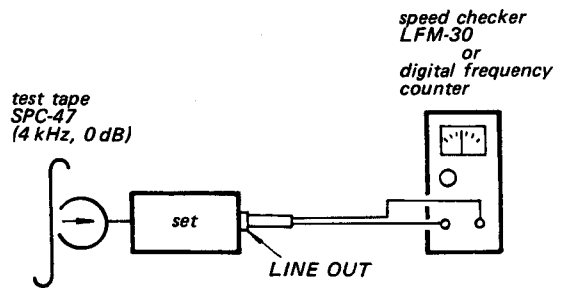

Use a non-metallic screwdriver. Adjust RV901 (19 cm/s) and RV902 (9.5 cm/s) for 0% checker or 4,000 Hz (19 cm/s) and 2,000 Hz (9.5 cm/s) counter readings.

Specification:


| Speed checker | Frequency counter |
|---------------|---|
| $\pm 0.75\%$ | 3,970–4,030 Hz (19 cm/s) 1,985–2,015 Hz (9.5 cm/s) |

Frequency difference between beginning and end of tape:

19 cm/s: within 0.5% or 20 Hz

9.5 cm/s: within 0.5% or 10 Hz


Adjustment Location:

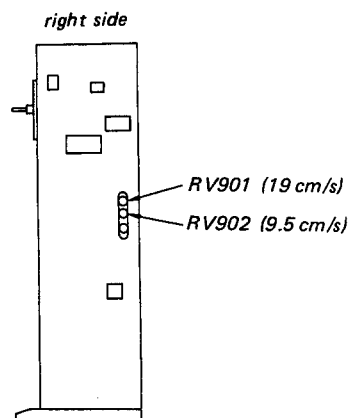

Playback Head Angle Adjustment

Procedure:

Mode: playback
 SONY J-19-F2
 (4th tone, 12.5 kHz, -10 dB)

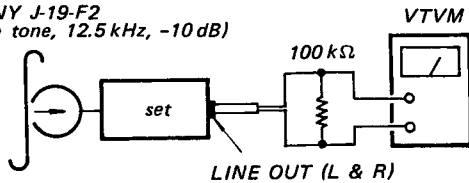

Loosen the adjustment screws ① and ② and adjust the position of the PB head by moving the screw ② in the arrowed direction for the highest VTVM reading.


After the adjustment, apply a locking compound to the screws.

Note: Slightly touch the supply reel and at this time the VTVM reading deviation should be less than 1 dB.

Adjustment Location:

— head base —

angle adjustment screw ②

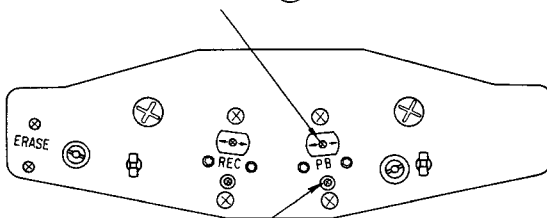


angle adjustment screw ①

Playback Head Azimuth and Phase Adjustment

Procedure:

1. Mode: playback

SONY J-19-F2
 (4th tone, 12.5 kHz, -10 dB)

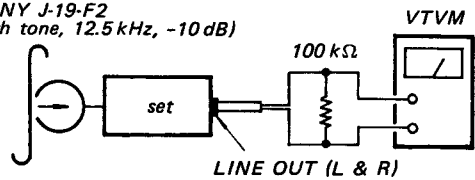


Turn the adjustment screws of the PB head for the highest VTVM reading. If the highest peaks for L and R do not coincide, place the adjustment screw to the point where both L and R outputs are same and within 1 dB from the peaks.

Note: The two adjustment screws are so constructed to react each other. When one side screw is loosened, tighten another screw in the same angle.

2. Mode: playback

SONY J-19-F2
 (4th tone, 12.5 kHz, -10 dB)

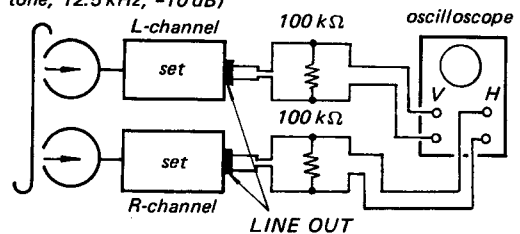


| Adjust | On the oscilloscope | | | |
|--------------------------|---------------------|-----|-----|---------------|
| azimuth adjustment screw | | | | |
| | in-phase | 30° | 90° | more than 90° |
| | good | | | wrong |

Note: Difference between the highest levels of L and R and the finally adjusted level should be within 1 dB.

Adjustment Location:

— head base —

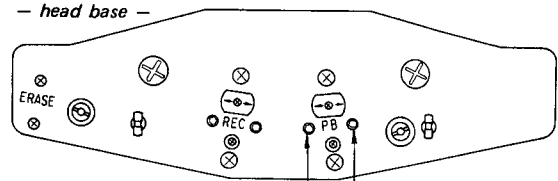


azimuth adjustment screws
 (hexagonal socket \square 1.5 mm)

Playback Frequency Response Adjustment

Procedure:

Mode: playback
PLAYBACK HEAD switch: 2 TRACK

SONY J-19-F2
(2nd tone, 400 Hz, -10 dB)
(3rd tone, 10 kHz, -10 dB)
(4th tone, 12.5 kHz, -10 dB)

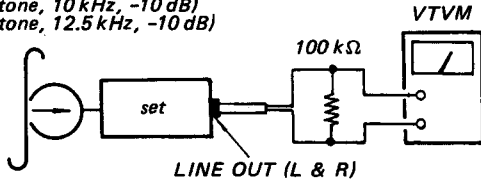


Adjust the pattern connections to obtain the specified values.

| Playback | Level difference from 400 Hz |
|----------|------------------------------|
| 10 kHz | within ± 2 dB |
| 12.5 kHz | |

Adjustment Location:

— audio amp board —

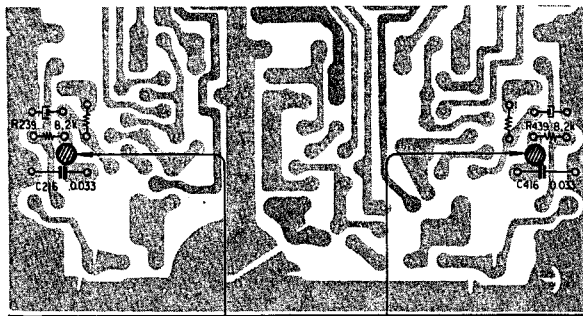

pattern connection pattern connection


Note: After this adjustment perform the playback level adjustment.

Playback Level Adjustment

Procedure:

Mode: playback

SONY J-19-F2
(1st tone, 400 Hz, 0 dB)

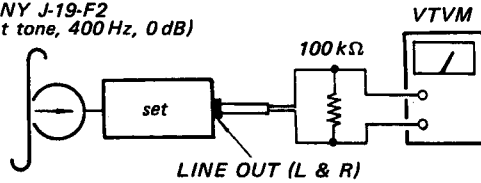


| Adjust | VTVM reading |
|--------------|--|
| RV104 (L-CH) | 0.44 V (-5 dB) |
| RV304 (R-CH) | allowance: ± 1 dB (0.39–0.49 V) |

Note: Level difference between L and R channels should be within 1 dB.

Adjustment Location:

— audio amp board —

RV104 (L-CH) RV304 (R-CH)

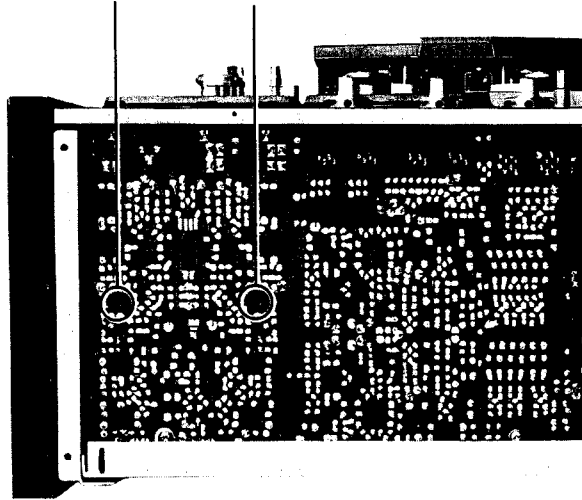


VU Meter Calibration

Setting:

MONITOR switch: SOURCE

Procedure:

1. Mode: record

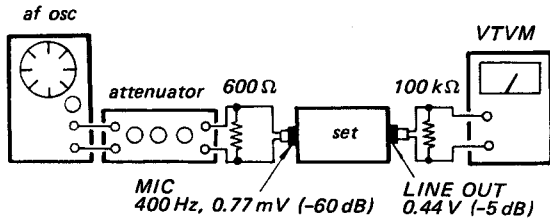


2.

| Adjust | VU meter indication |
|--------------|---------------------|
| RV106 (L-CH) | "0" |
| RV306 (R-CH) | |

Adjustment Location:

— audio amp board —

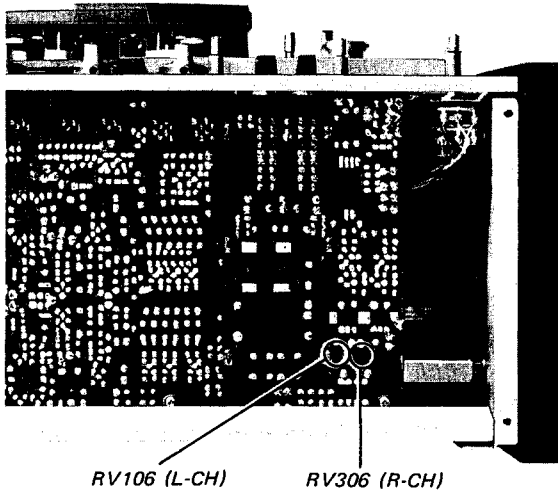



Record Head Angle Adjustment

Setting:

MONITOR switch: TAPE

Procedure:

Mode: record and simultaneous playback
PLAYBACK HEAD switch: 2T REC

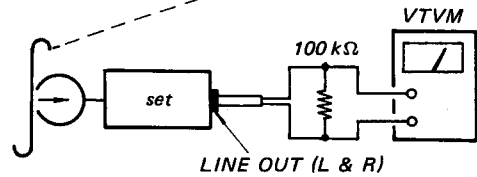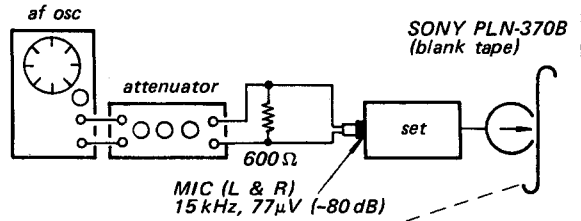


Loosen the adjustment screws ① and ②. Correctly position the record head by moving the adjustment screw ② in the arrowed directions for the highest VTVM reading.

Note: Slightly touch the supply reel and at this time the VTVM reading deviation should be less than 1 dB.

After the adjustment, apply a suitable locking compound to the screws.

Adjustment Location:

— head base —

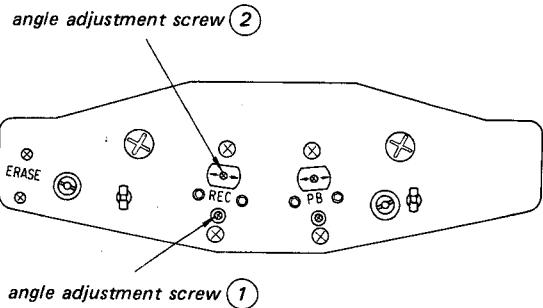


Record Head Height and Zenith Adjustment

Setting:

MONITOR switch: TAPE

Procedure:


Mode: record and simultaneous playback
PLAYBACK HEAD switch: 2 TRACK

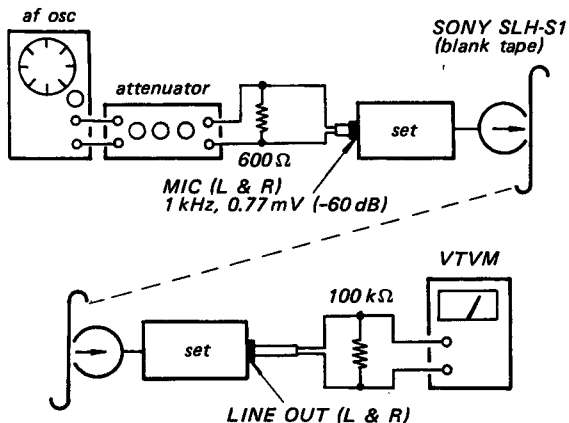


Turn the height and zenith adjustment screws for the highest VTVM reading.

Adjustment Location:

- head base -

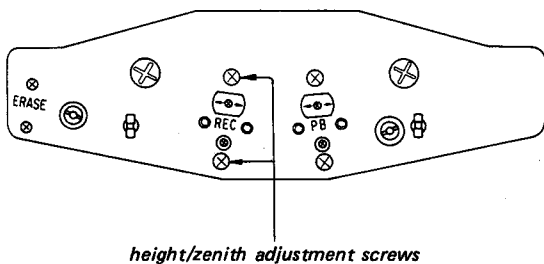


1. Mode: record and simultaneous playback

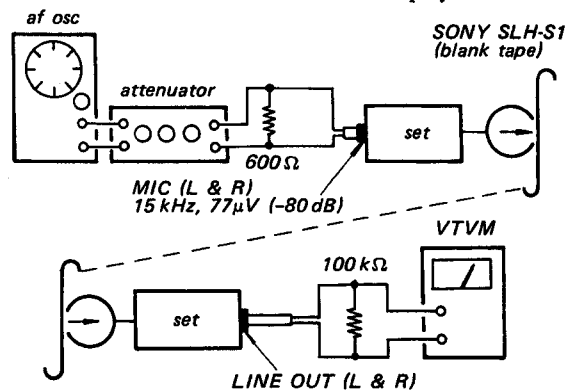

Turn the adjustment screws for the highest VTVM reading. If the highest peaks for L and R do not coincide, place the adjustment screws to the point where both L and R outputs are same and within 1 dB from the peaks.

2. Mode: record and simultaneous playback

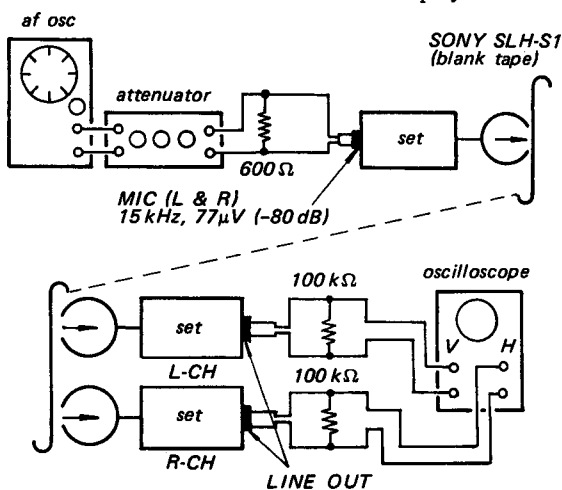


| Adjust | On the oscilloscope | | | |
|--------------------------|---------------------|--|-------|--|
| azimuth adjustment screw | | | | |
| | good | | wrong | |

Note: Difference between the highest levels of L and R and the finally adjusted level should be within 1 dB.

Adjustment Location:

- head base -

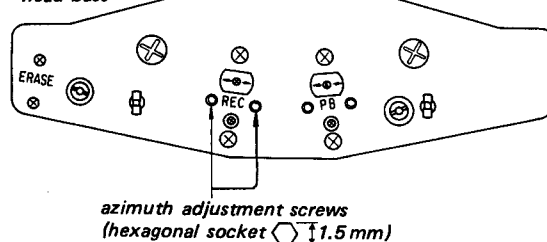

Record Head Azimuth and Phase Adjustments

Setting:

MONITOR switch: TAPE

Procedure:

When a simplified test is made, follow Procedure 1. When an oscilloscope is available, employ Procedure 2.

Note: The two adjustment screws are so constructed to react each other. When one side screw is loosened, tighten another screw in the same angle.


Record Bias Adjustment

Setting:


MONITOR switch: TAPE

Procedure:

Mode: record and simultaneous playback

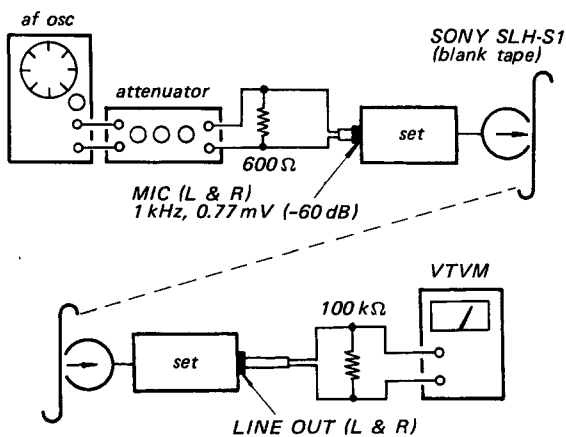


As trimmer capacitor C135 (L-CH) or C335 (R-CH) is slowly turned clockwise, VTVM reading will go up to a maximum and then start falling again. Adjust the capacitor until VTVM reads 0.5 dB below and beyond the maximum reading.

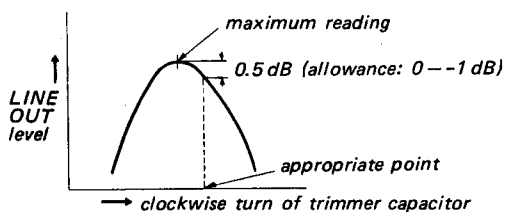

Adjustment Location:

— audio amp board —

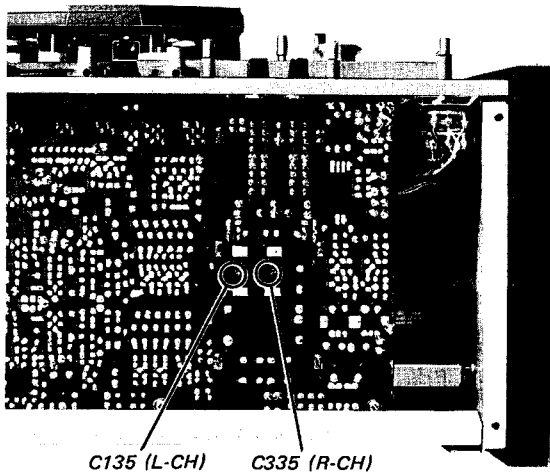


Record Level Adjustment

Setting:

MONITOR switch: TAPE

Procedure:


Mode: record and simultaneous playback

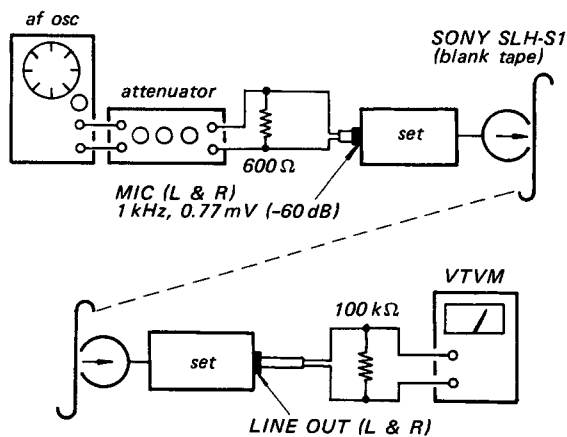

| Adjust | VTVM reading |
|------------------------------|----------------|
| RV103 (L-CH) RV303 (R-CH) | 0.44 V (-5 dB) |

Adjustment Location:

— audio amp board —

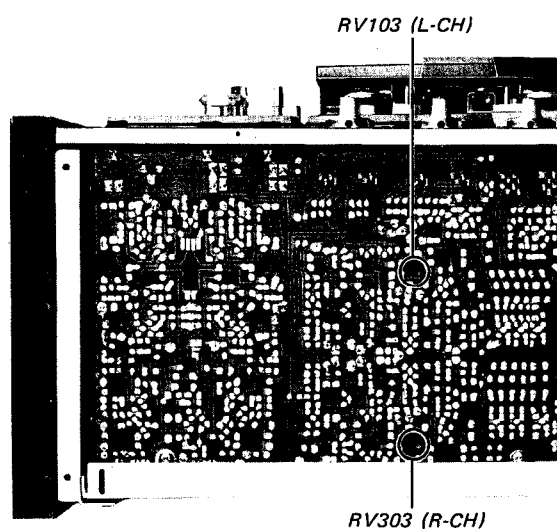


Record Equalizer Adjustment

Setting:

MONITOR switch: TAPE

Procedure:

Mode: record and simultaneous playback

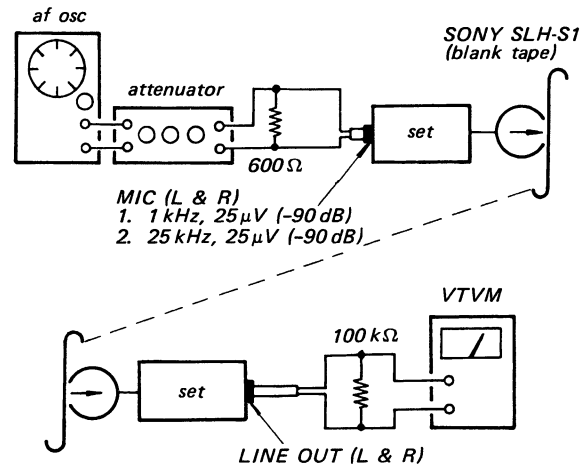


| | Adjust | Remarks |
|--------|-----------------------------|--|
| 1 kHz | L102 (L-CH) and L302 (R-CH) | Same LINE OUT level at both frequencies. |
| 25 kHz | | |

Level-difference allowance of 25 kHz signal from 1 kHz: 0 dB - -3 dB

Adjustment Location:

- audio amp board -

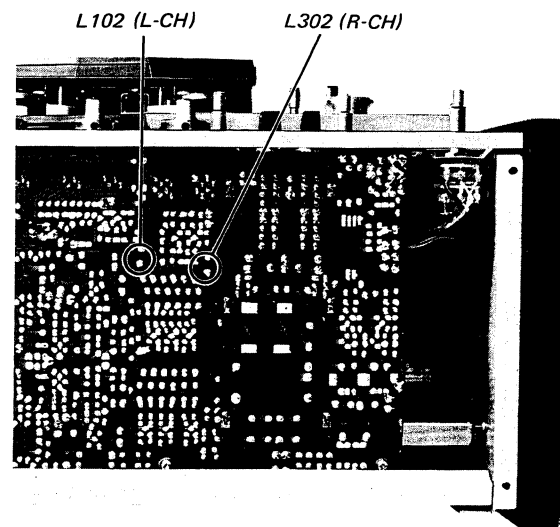


Record Bias Trap Adjustment

Setting:

MIC REC control: 0
LINE REC control: 0

Procedure:


Mode: record

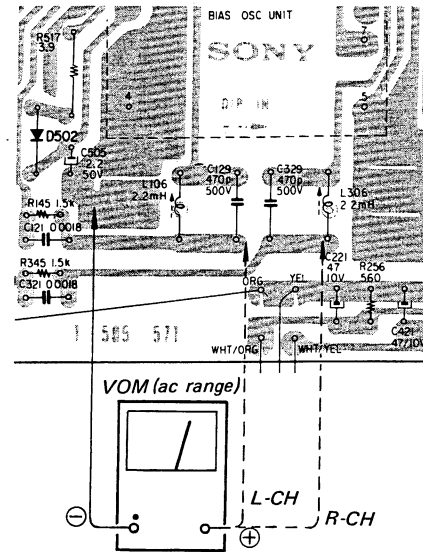

| Adjust | VTVM reading |
|----------------------------|--------------|
| L106 (L-CH) L306 (R-CH) | minimum |

Adjustment Location:

- audio amp board -

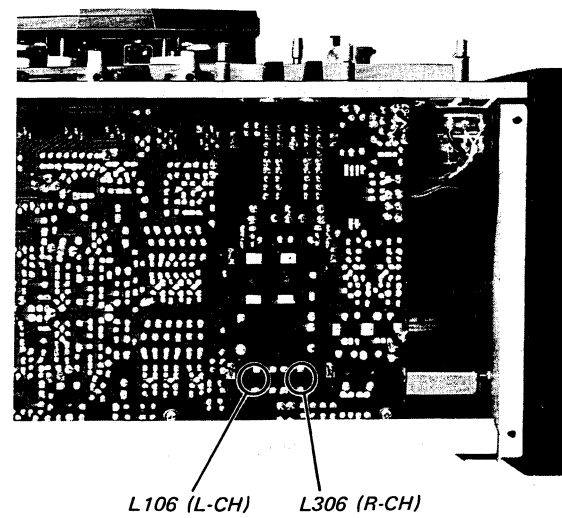


Dummy Coil Adjustment

Setting:

MONITOR switch: TAPE

Procedure:


Mode: record and simultaneous playback

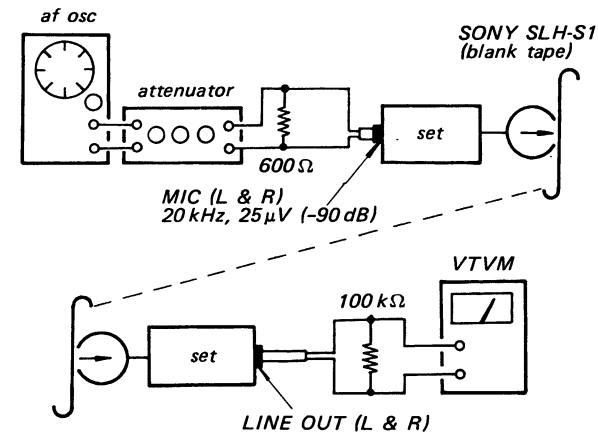

| Step | Mode | Adjust | Remarks |
|------|--|--------|---------------------------------|
| 1 | stereo record and simultaneous playback | - | Record VTVM reading. |
| 2 | L channel record and simultaneous playback | L307 | same VTVM reading as in step 1. |
| 3 | R channel record and simultaneous playback | L107 | |

Adjustment Location:

- audio amp board -

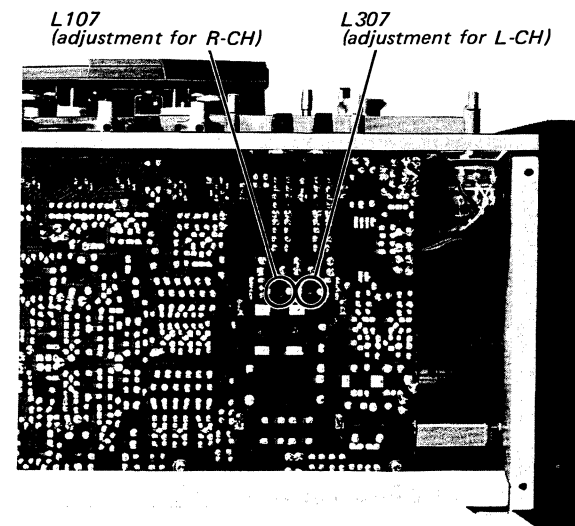



SECTION 4
DIAGRAMS

4-1. MOUNTING DIAGRAM — Amplifier Section (US, Canadian model) —



— Conductor Side —

Replacement Semiconductors
For replacement, use semiconductors except in ().


Q101, 103, 104
Q115, 121, 122
Q301, 303, 304
Q315, 321, 322
Q102, 108
Q302, 308

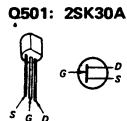


Q105, 109
Q123, 124
Q305, 309
Q323, 324

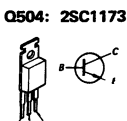

Q106
Q110-114, 120
Q306
Q310-314, 320
Q502, 503
Q506-508





Q125, 325: 2SC1475 (2SC1318)
Q505: 2SC1475-13 (2SC1475)




(After replacing Q505, perform the record bias adjustment on page 22.)


D101, 102
D301, 302
D502-504
D103
D303

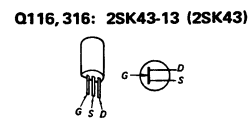

Q116, 316: 2SK43-13 (2SK43)




D501: EQB01-11Z (EQA01-11S)

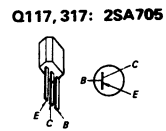



Q117, 317: 2SA705

Note:

- : part mounted on the conductor side.
- B+ pattern.
- : signal path (both channel)
- : L-CH
- : R-CH
- DC resistance measurements are with coils connected on the circuit board, and are approximate.
- Color code of sleeving over the end of the jacket.

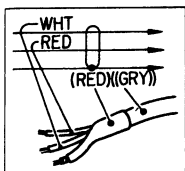


- Readings are taken under no signal conditions and in stop mode with a VOM (20 kΩ/V).
- () : record mode.
- () : forward mode.
- () : S607 is ON.
- AC voltage readings indicated by * in the bias oscillator circuit are taken with a VTVM.

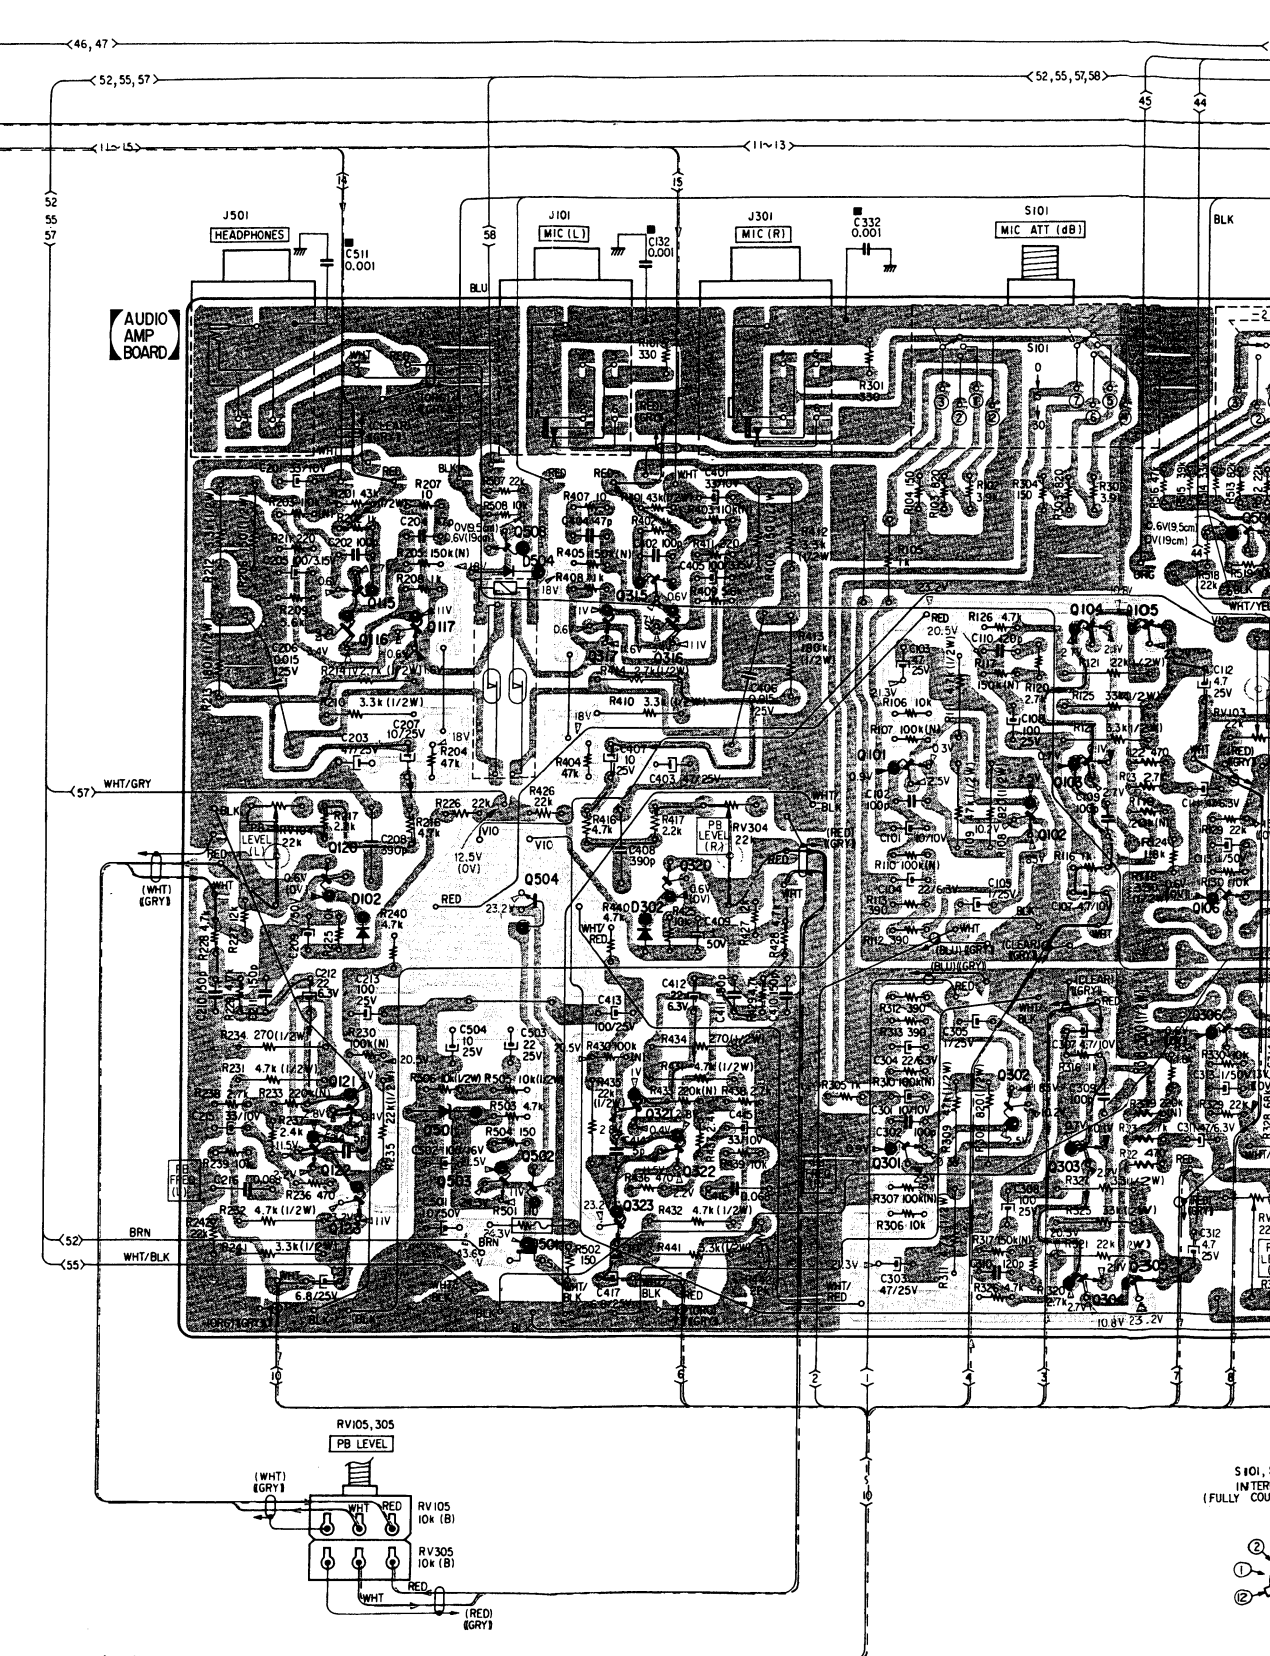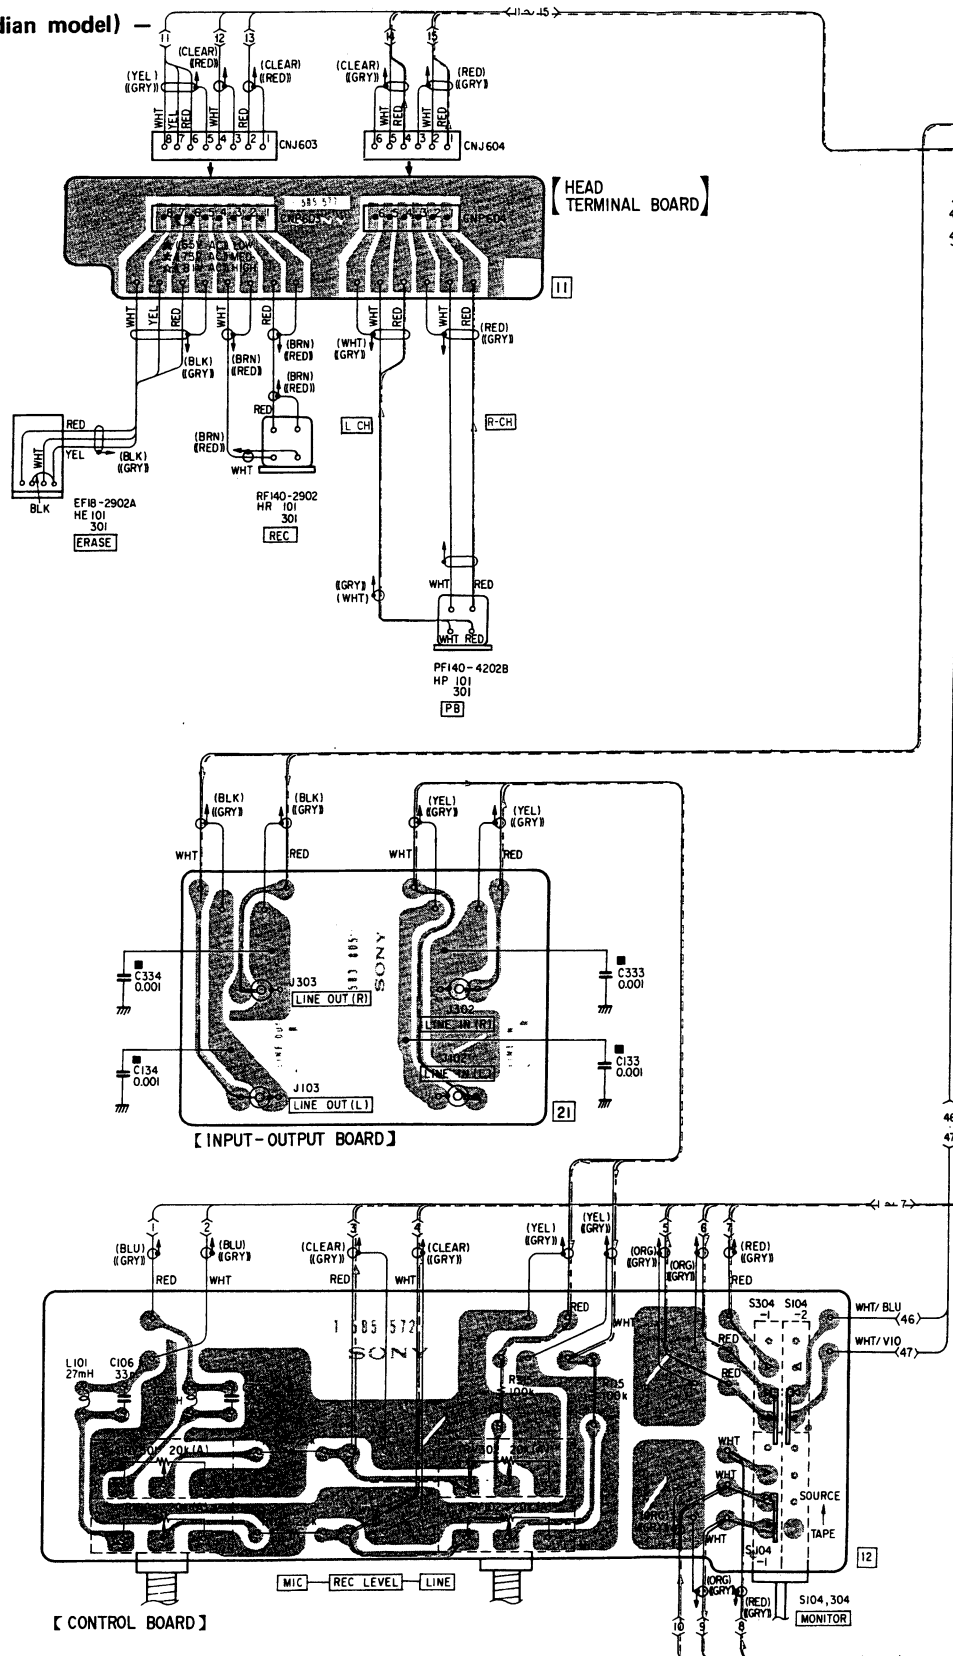






| | | | | | | | | | | | |
|---|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|
| Q | 115 | 117 | 508 | 504 | 317 | 315 | 101 | 102 | 104 | 105 | 106 |
| | 122 | 121 | 503 | 501 | 323 | 321 | 301 | 302 | 303 | 304 | 306 |
| D | 102 | 501 | 504 | 302 | | | | | | | |

TC-765 TC-765

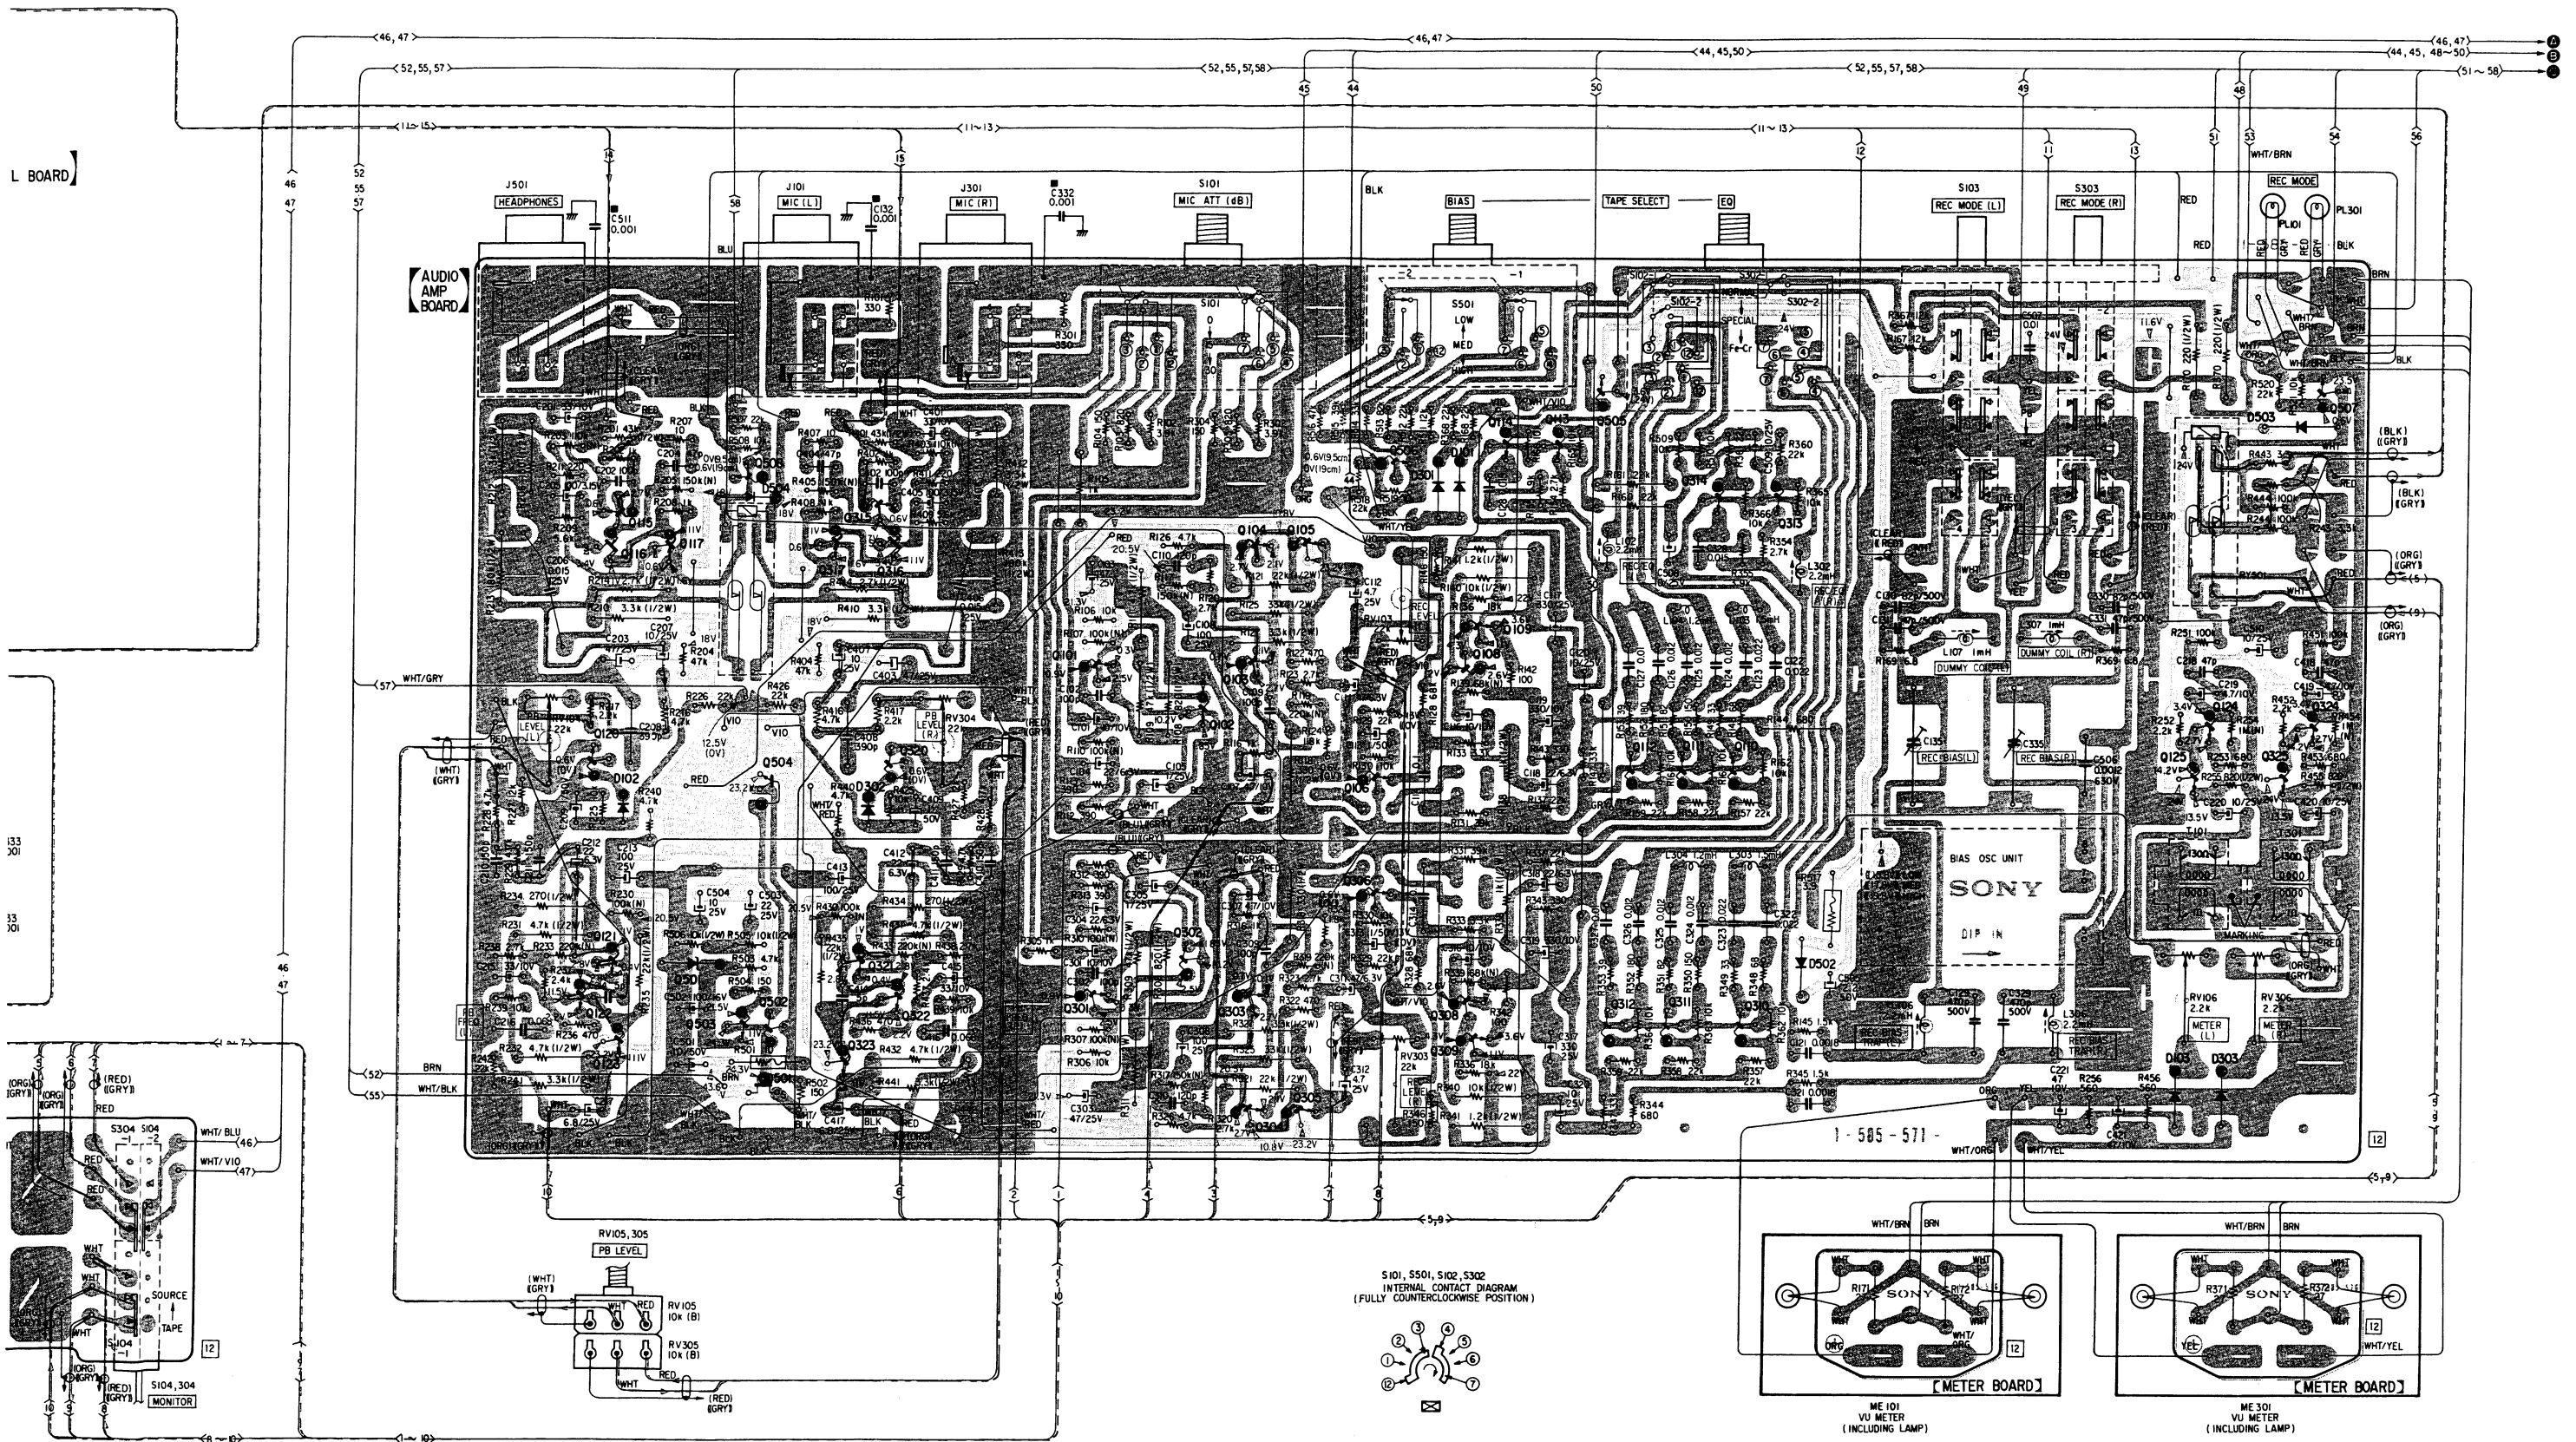

L BOARD


33 301
33 301

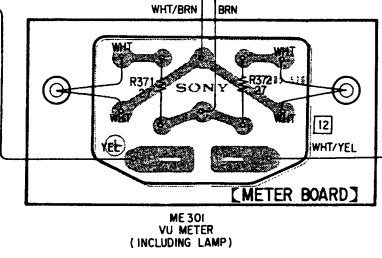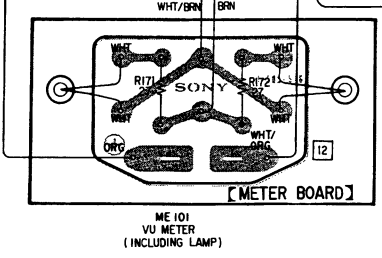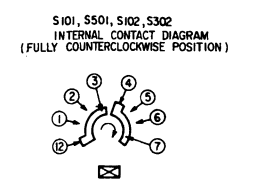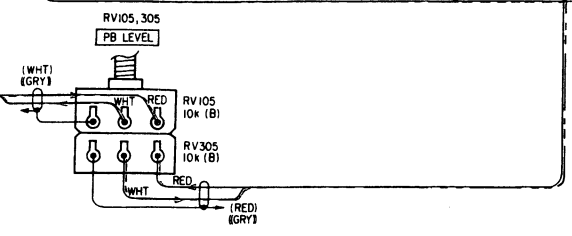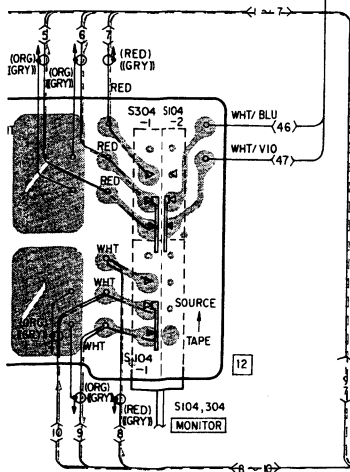


| | | | | | | | | | | | | | | | | | | | | | | | |
|---|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|
| Q | 115 | 117 | 508 | 504 | 317 | 315 | 316 | 101 | 102 | 104 | 105 | 106 | 109 | 114 | 113 | 505 | 112 | 111 | 314 | 313 | 124 | 507 | |
| | 120 | 116 | 503 | 501 | 323 | 321 | 320 | 301 | 302 | 103 | 303 | 306 | 108 | 110 | | 312 | 311 | 110 | 310 | | 125 | 324 | |
| D | | 102 | 501 | 504 | | 302 | | | | | | 301 | 101 | | | | | | | 502 | 103 | 303 | 503 |

TC-765 TC-765

4-2. SCHEMATIC DIAGRAM – Amplifier Section (US, Canadian model) –

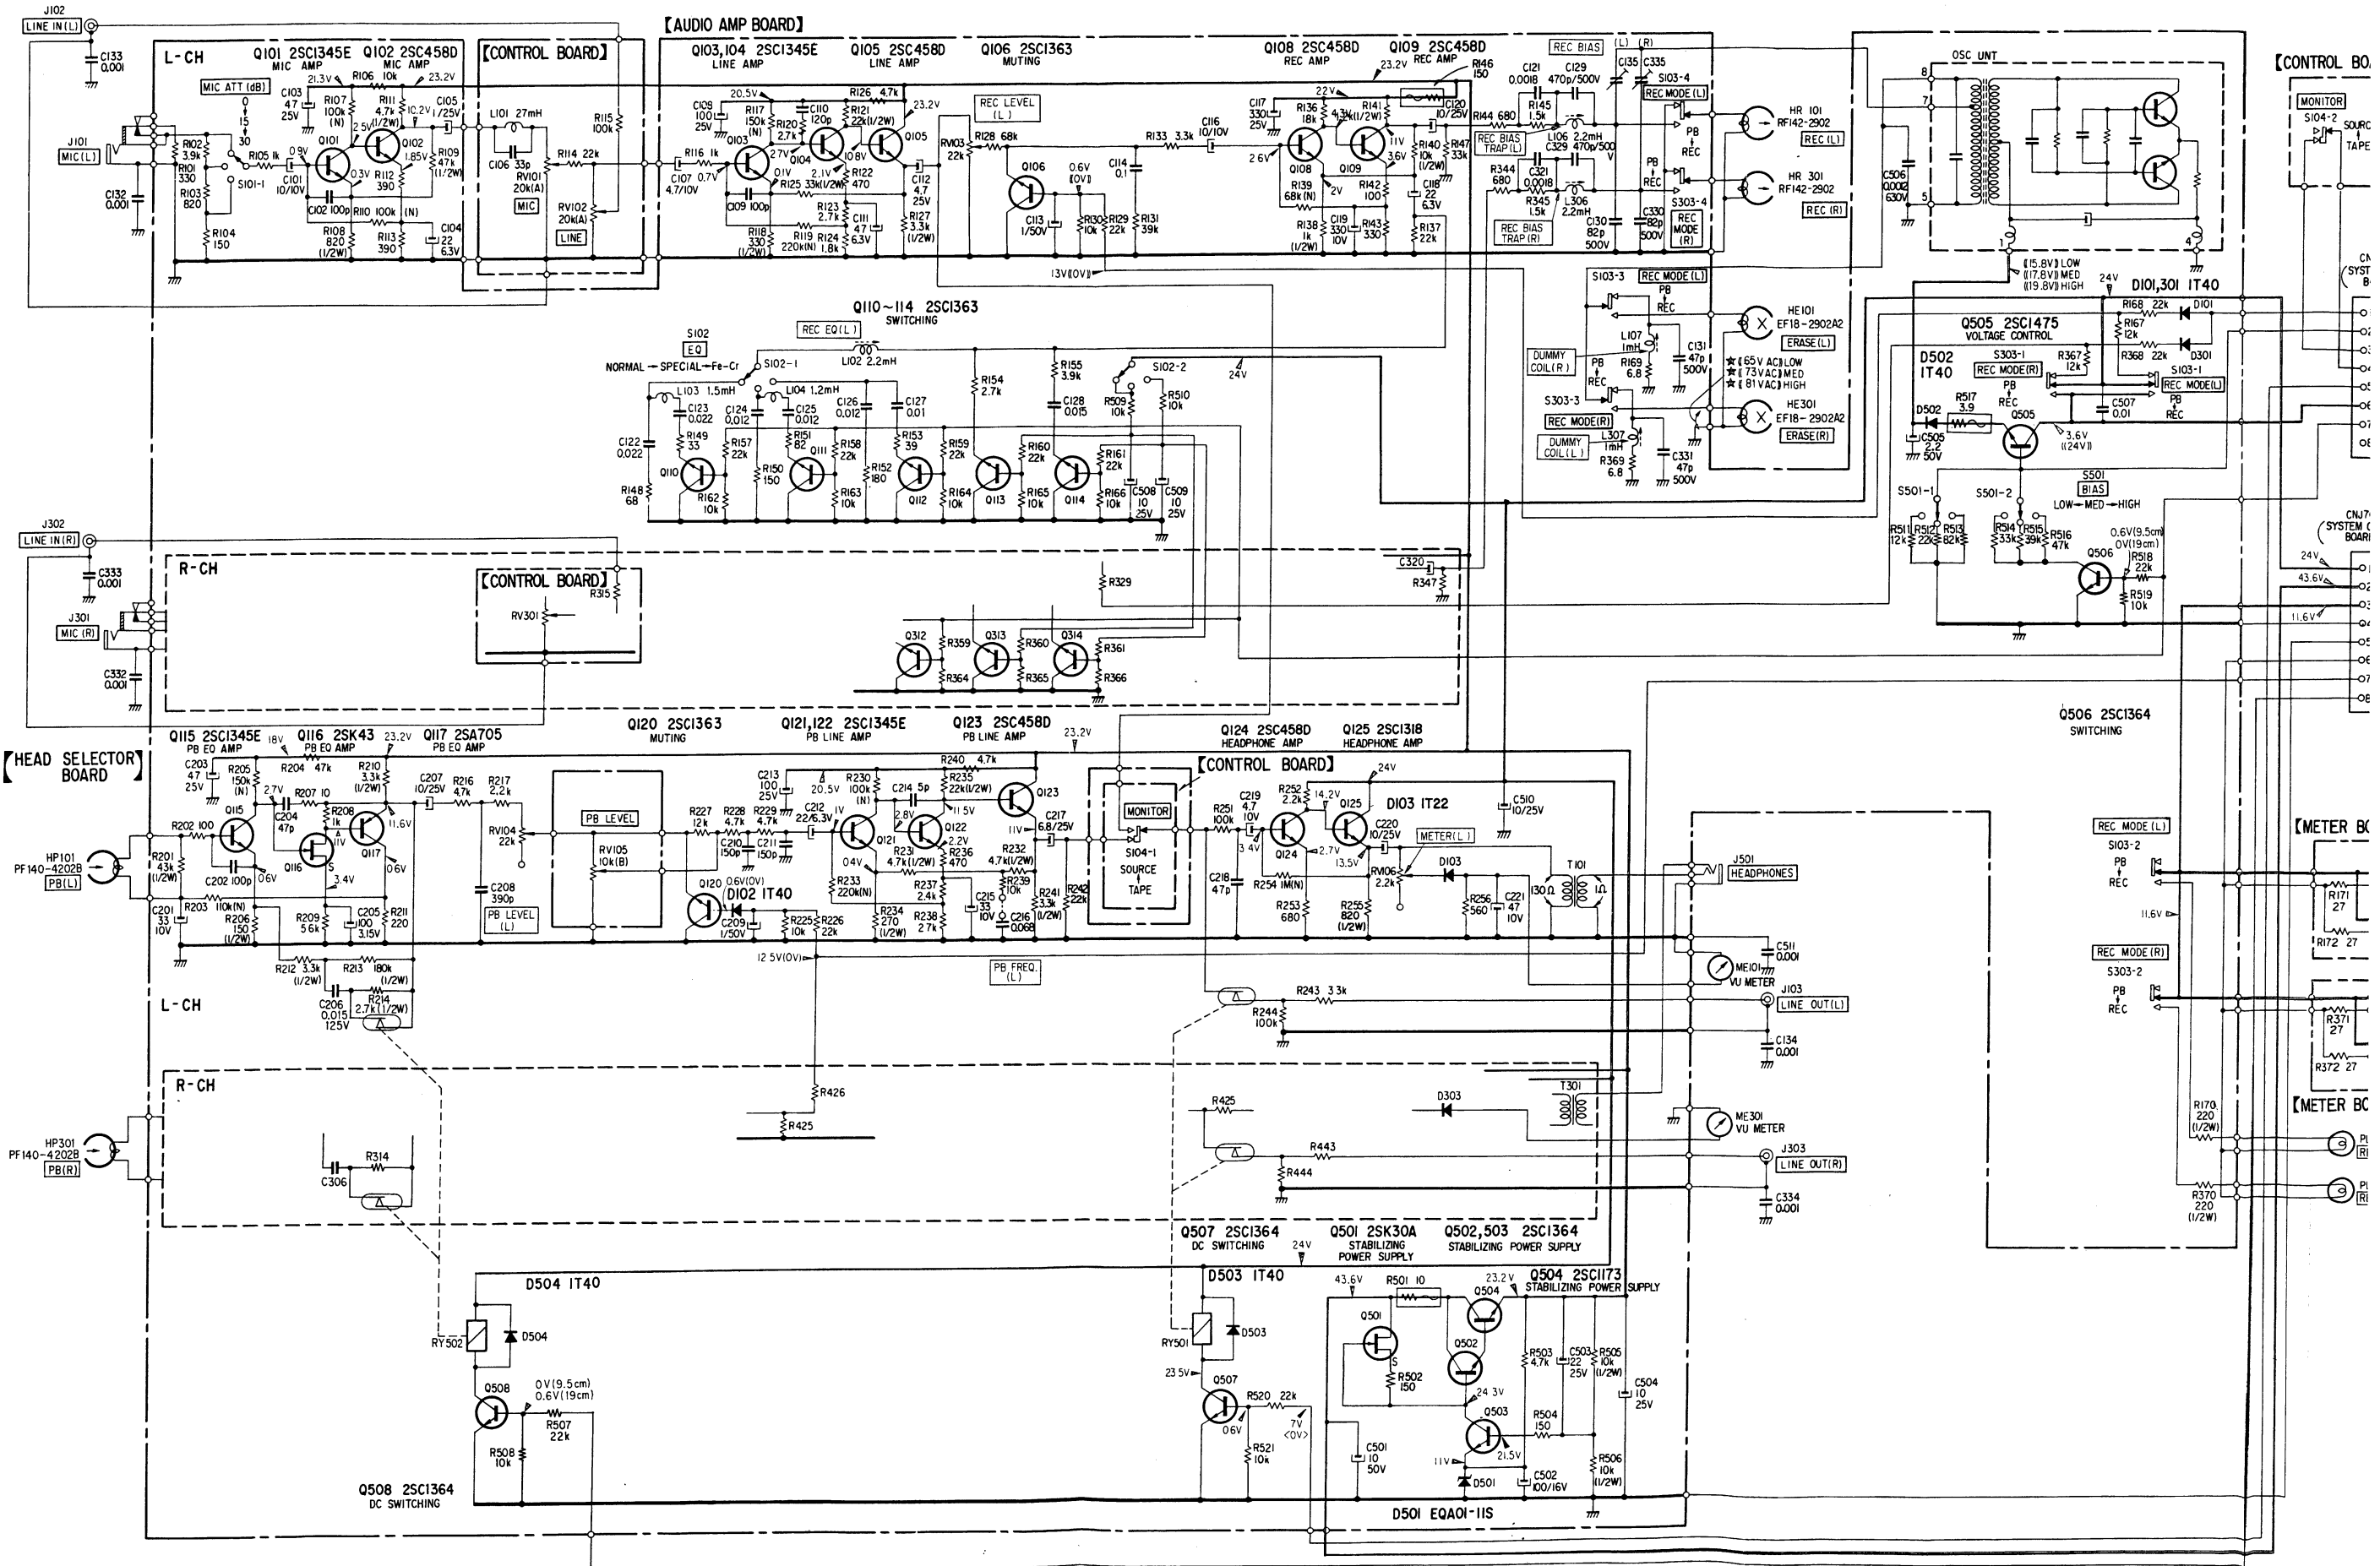

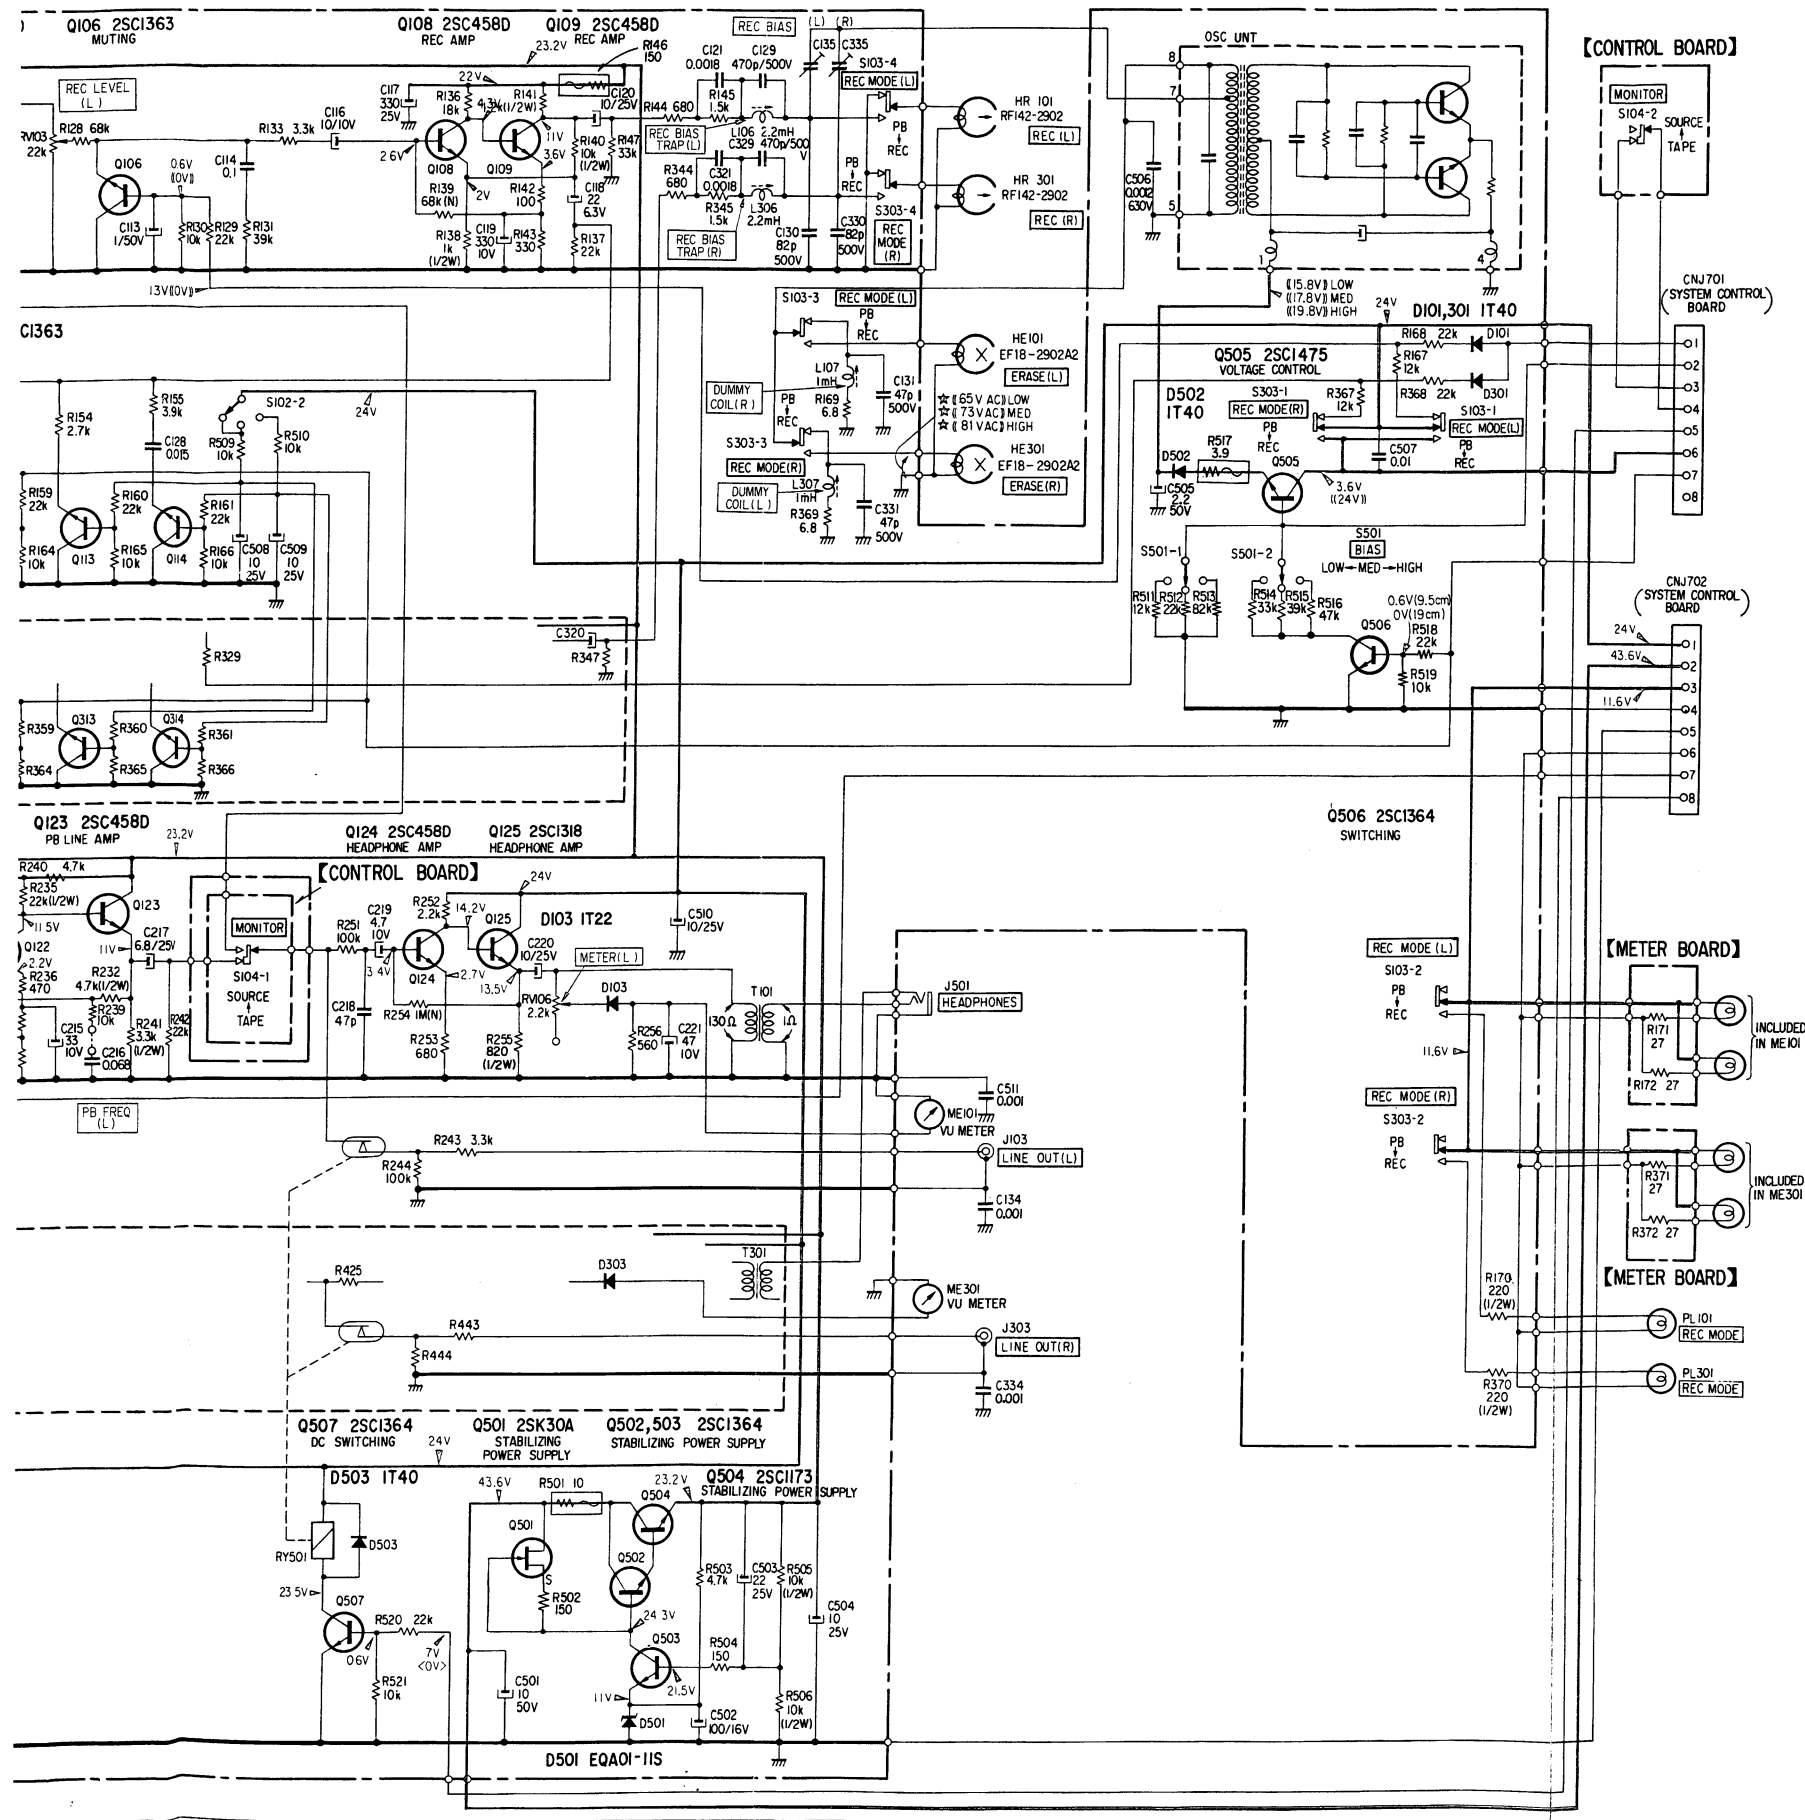

Note:

- Components for right channel have the same values as for left channel. Reference numbers are coded from 301 (REC AMP or PB AMP) or 401 (PB AMP).
- All capacitors are in μF unless otherwise noted. $\text{pF} = \mu\mu\text{F}$. 50WV or less are not indicated except for electrolytics.
- All resistors are in ohms, $\frac{1}{4}\text{W}$ unless otherwise noted. $\text{k}\Omega = 1000\Omega$, $\text{M}\Omega = 1000\text{k}\Omega$
- All variable and adjustable resistors have characteristic curve B, unless otherwise noted.
- : fusible resistor.
- (N) : low-noise capacitor and resistor.
- : B+ bus.
- : panel designation.
- : adjustment for repair.
- : chassis ground.
- Voltages are dc with respect to ground unless otherwise noted.
- Readings are taken under no signal conditions and in stop mode with a VOM (20 $\text{k}\Omega/\text{V}$).
- (()) : record mode.
- () : forward mode.
- < > : S607 is ON.
- AC voltage readings indicated by * in the bias oscillator circuit are taken with a VTVM.
- Voltage variations may be noted due to normal production tolerances.
- Switch

| Ref. No. | Switch | Position |
|----------|----------|----------|
| S101,301 | MIC ATT | 0 (dB) |
| S102,302 | EQ | NORMAL |
| S103,303 | REC MODE | PB |
| S104,304 | MONITOR | TAPE |
| S501 | BIAS | MED |

4-3. MOUNTING DIAGRAM — Amplifier Section (UK, AEP, PX model) —



— Conductor Side —

Replacement Semiconductors
For replacement, use semiconductor except in ().

- Q101, 103, 104
- Q115, 121, 122
- Q126
- Q301, 303, 304
- Q315, 321, 322
- Q326
- Q102, 108
- Q302, 308

2SC1345-E (2SC458D)



Q501: 2SK30A



- Q105, 109
- Q123, 124
- Q305, 309
- Q323, 324

2SC634A (2SC458D)

Q504: 2SC1173





- Q106
- Q110-114, 120
- Q306
- Q310-314, 320
- Q502, 503
- Q506-509

2SC634A (2SC1363)


Q125, 325: 2SC1475 (2SC1318)

Q505: 2SC1475-13 (2SC1475)



(After replacing Q505, perform the record bias adjustment on page 22.)

- Q116, 316: 2SK43-13 (2SK43)



D101, 102


D301, 302

D103


D303

1S1555 (1T40)


1T22A (1T22)



- Q117, 317: 2SA705
- Q127, 327: 2SA678 (2SA677)




D501: EQB01-11Z (EQA01-11S)




Note:

- : part mounted on the conductor side.
- : B+ pattern.
- : signal path (both channel)
- : L-CH
- : R-CH
- DC resistance measurements are with coils connected on the circuit board, and are approximate.
- Color code of sleeving over the end of the jacket.



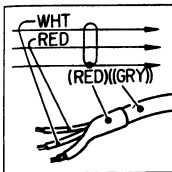


- Readings are taken under no signal conditions and in stop mode with a VOM (20 kΩ/V).
- () : record mode.
- () : forward mode.
- < > : S607 is ON.
- AC voltage readings indicated by * in the bias oscillator circuit are taken with a VTVM.

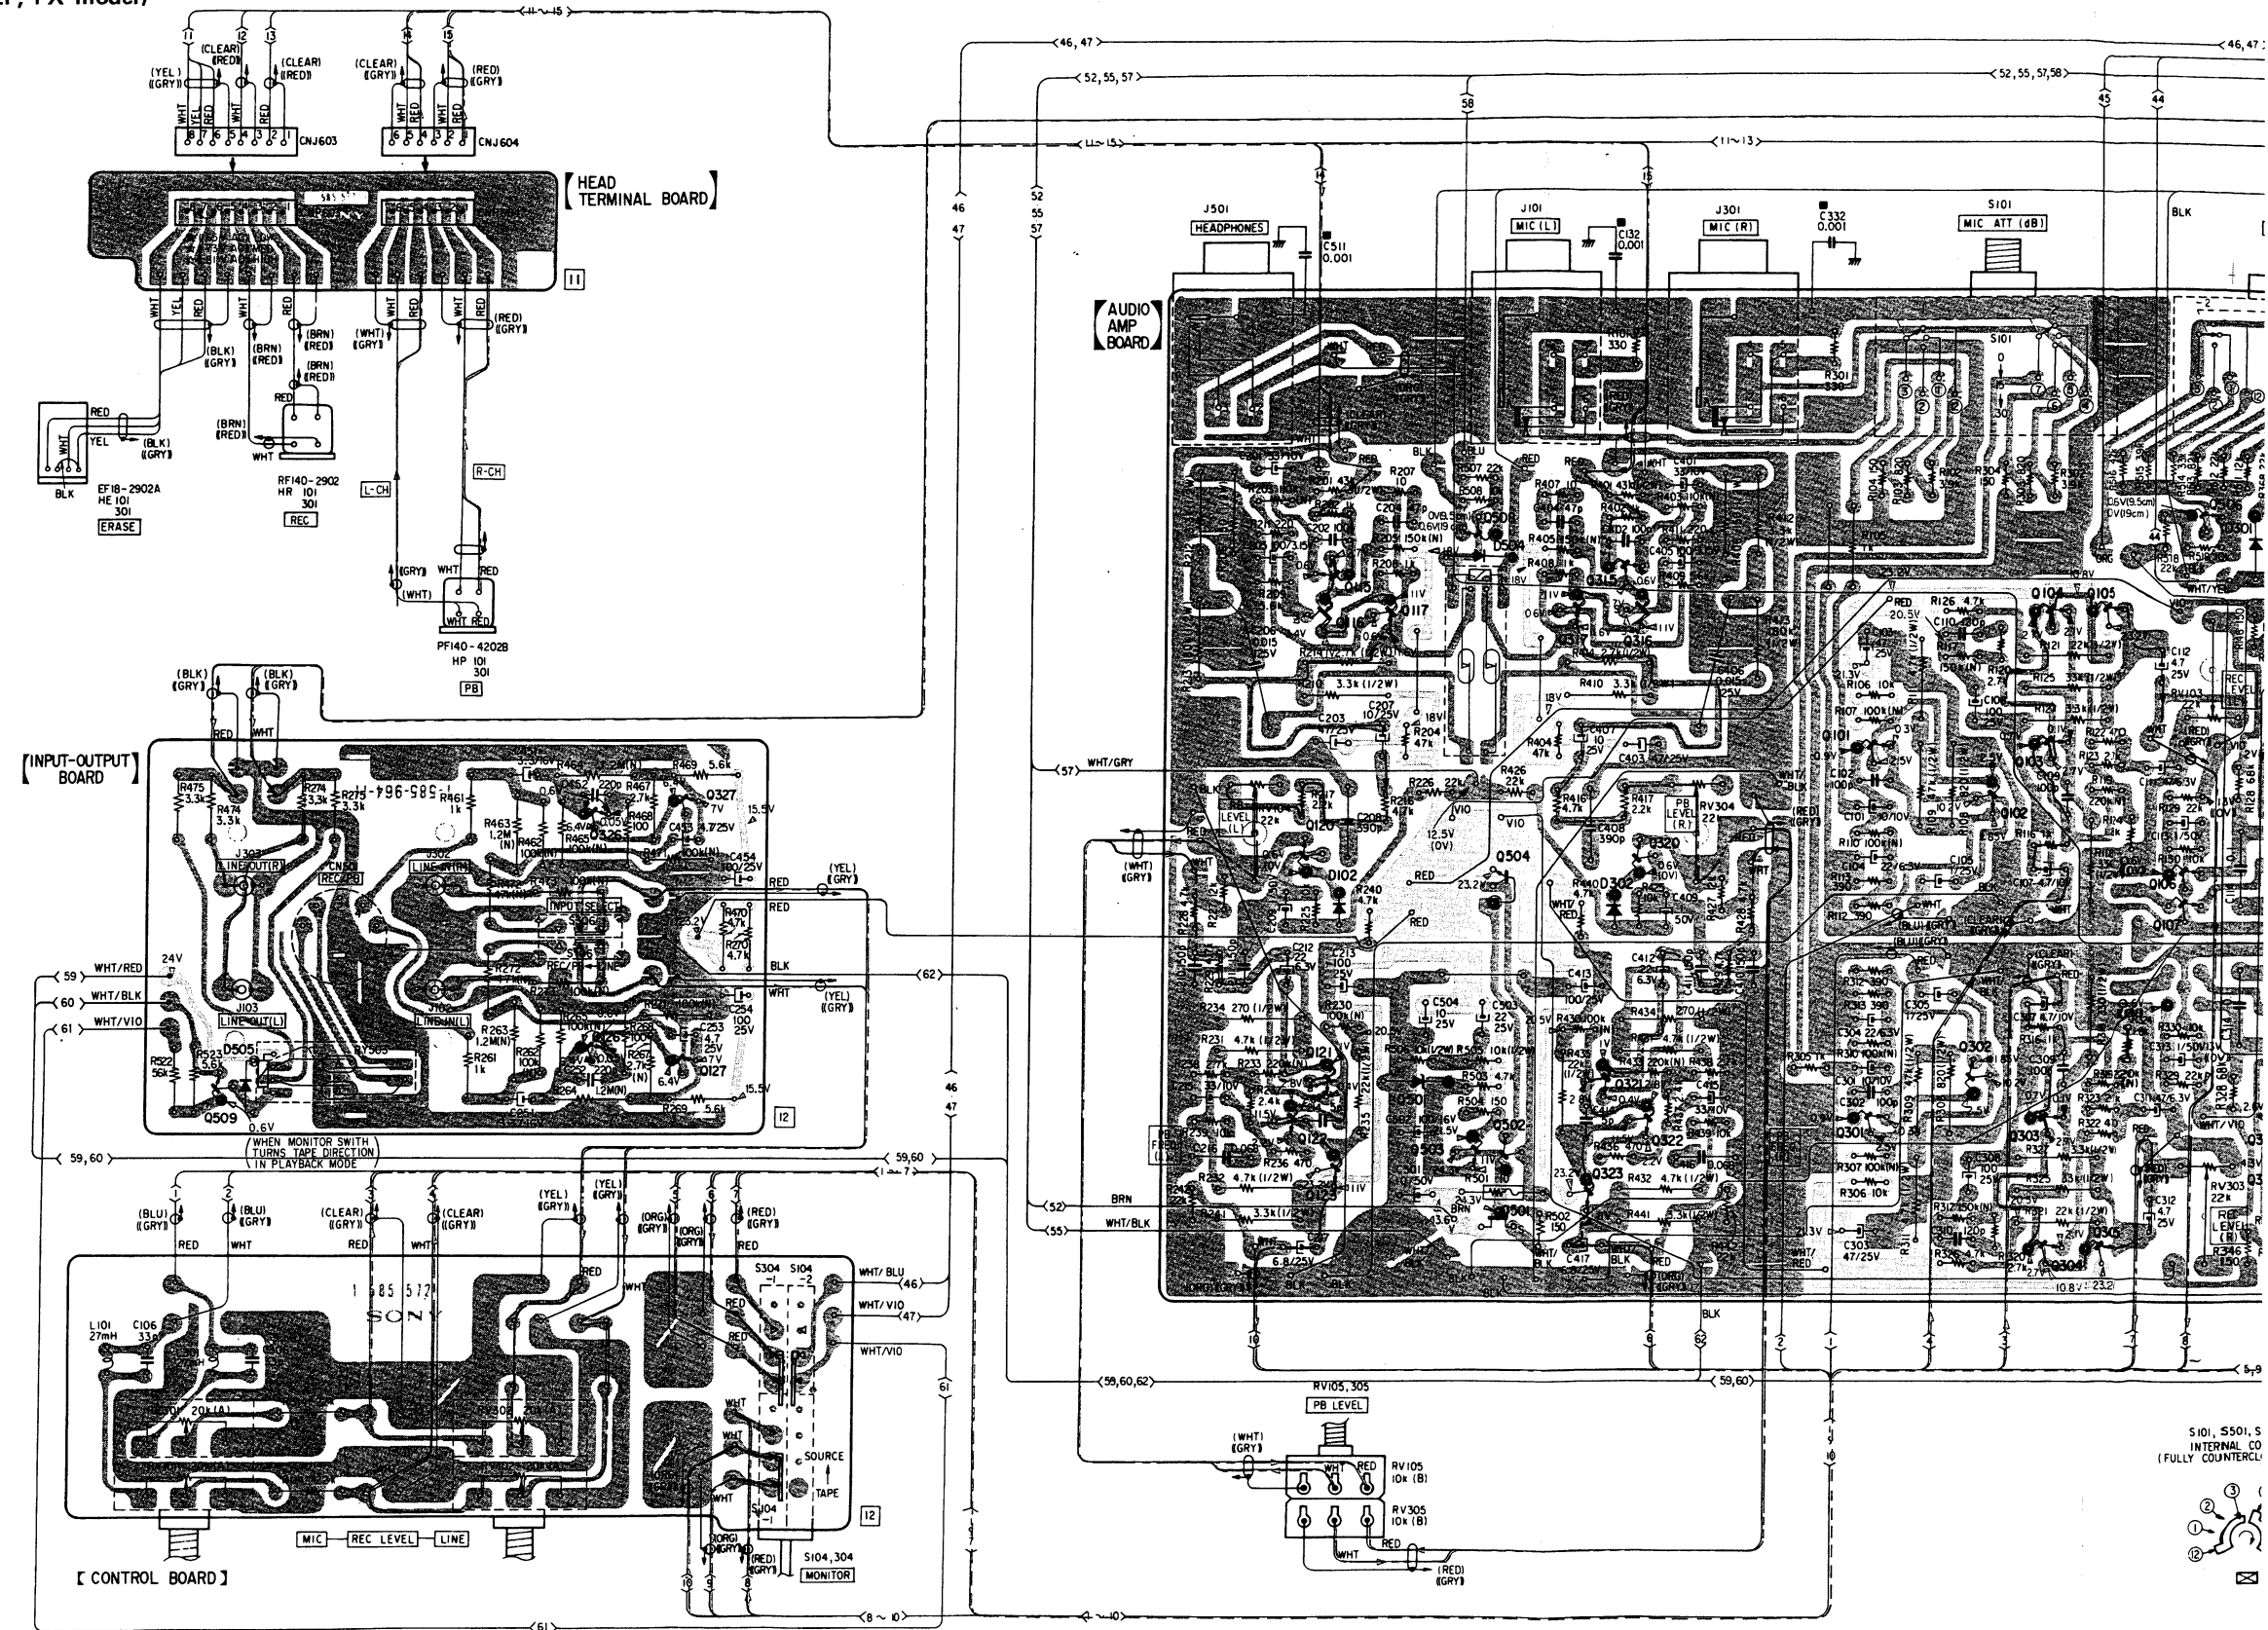

| | | | | | | | | | | | | | | | |
|---|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|
| 0 | 509 | 326 | 327 | 115 | 117 | 508 | 504 | 317 | 315 | 101 | 102 | 104 | 105 | 106 | 506 |
| | | 126 | 127 | 120 | 116 | 503 | 502 | 323 | 321 | 301 | 302 | 303 | 304 | 305 | 306 |
| D | 505 | | | 102 | | 504 | | 302 | | | | | | | 301 |


TC-765 TC-765

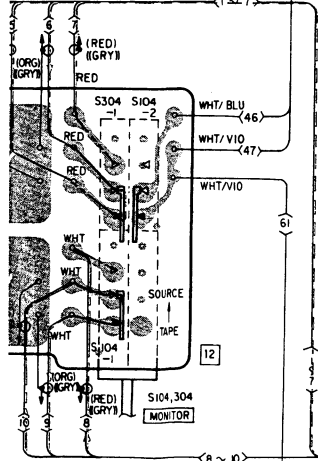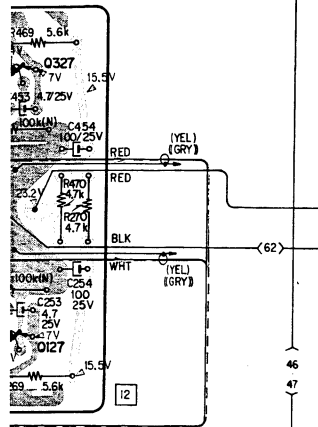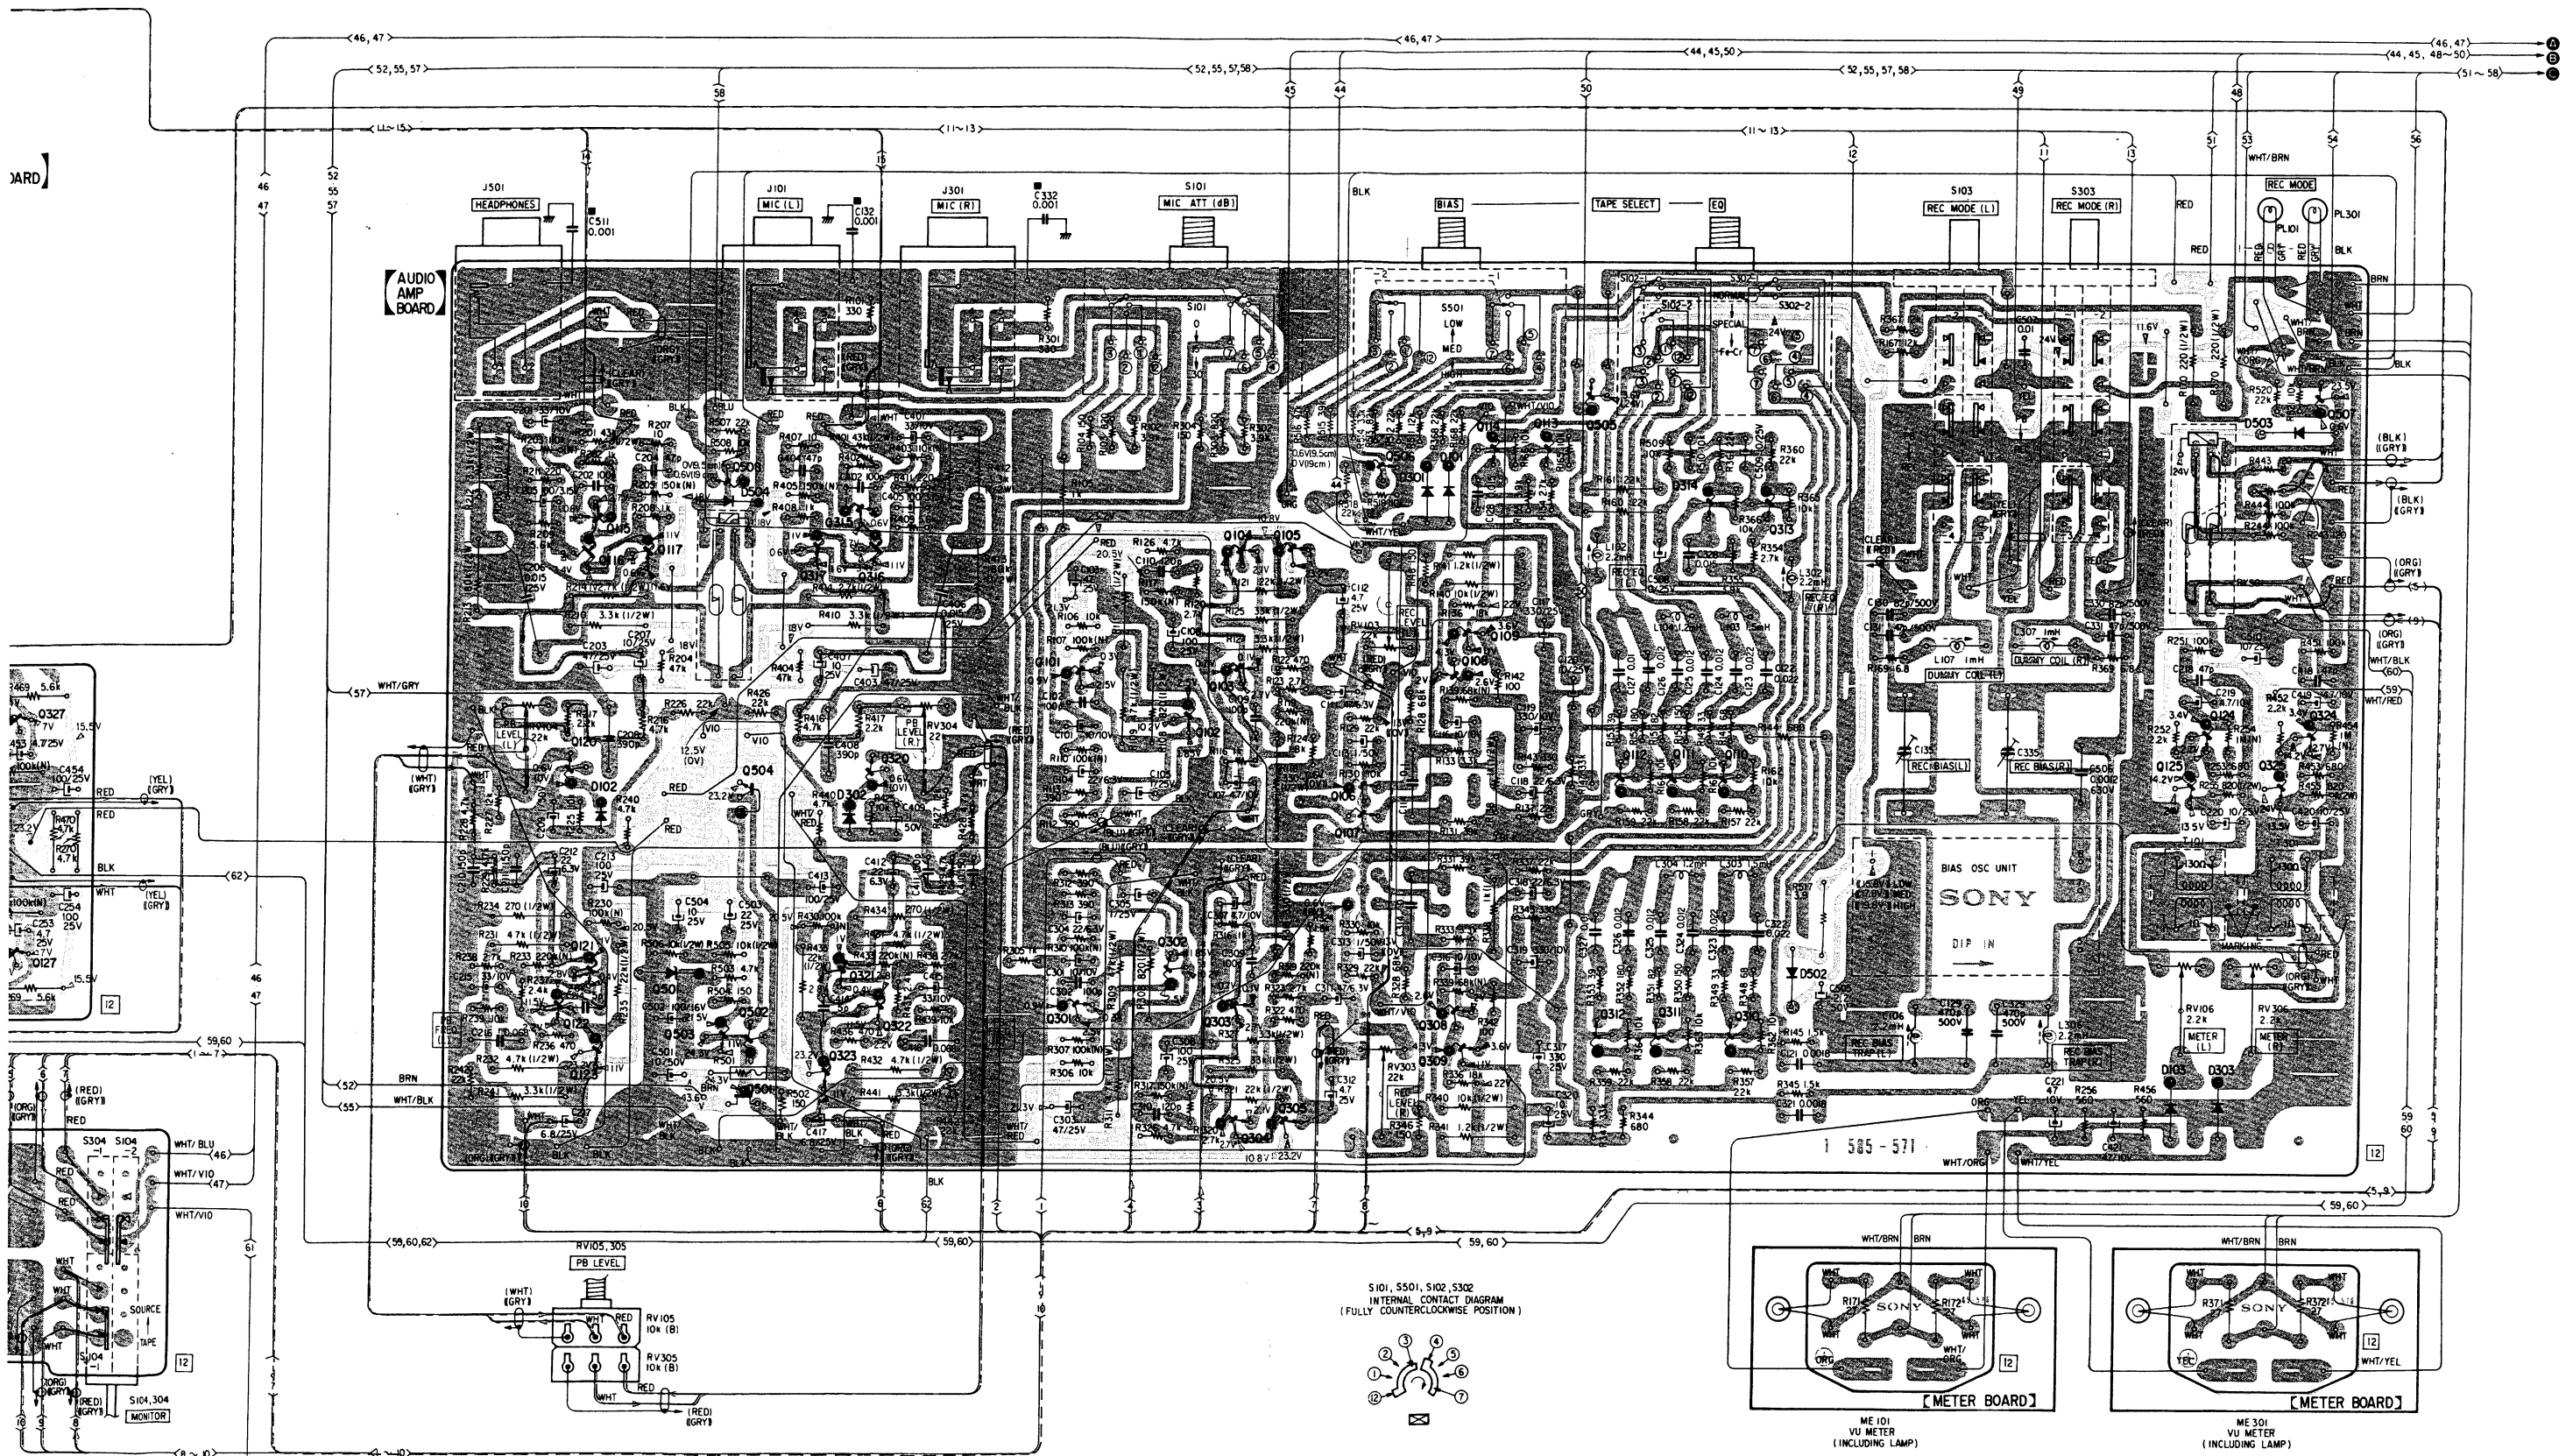


| | | | | | | | | | | | | | | | | | | | | | |
|----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|
| 27 | 115 | 117 | 508 | 504 | 317 | 315 | 101 | 102 | 104 | 105 | 106 | 109 | 114 | 113 | 505 | 314 | 313 | 124 | 507 | | |
| 27 | 120 | 116 | 503 | 502 | 323 | 321 | 301 | 302 | 103 | 305 | 107 | 108 | 111 | 112 | 502 | 312 | 311 | 110 | 125 | 325 | |
| | 122 | 123 | 501 | 501 | 322 | 322 | | | 304 | | 306 | 308 | 309 | | | | | | 324 | 324 | |
| | | | 501 | 504 | 302 | | | | | | 301 | 101 | | | | | | | 103 | 303 | 503 |

TC-765 TC-765

4-4. SCHEMATIC DIAGRAM — Amplifier Section (UK, AEP, PX model) —

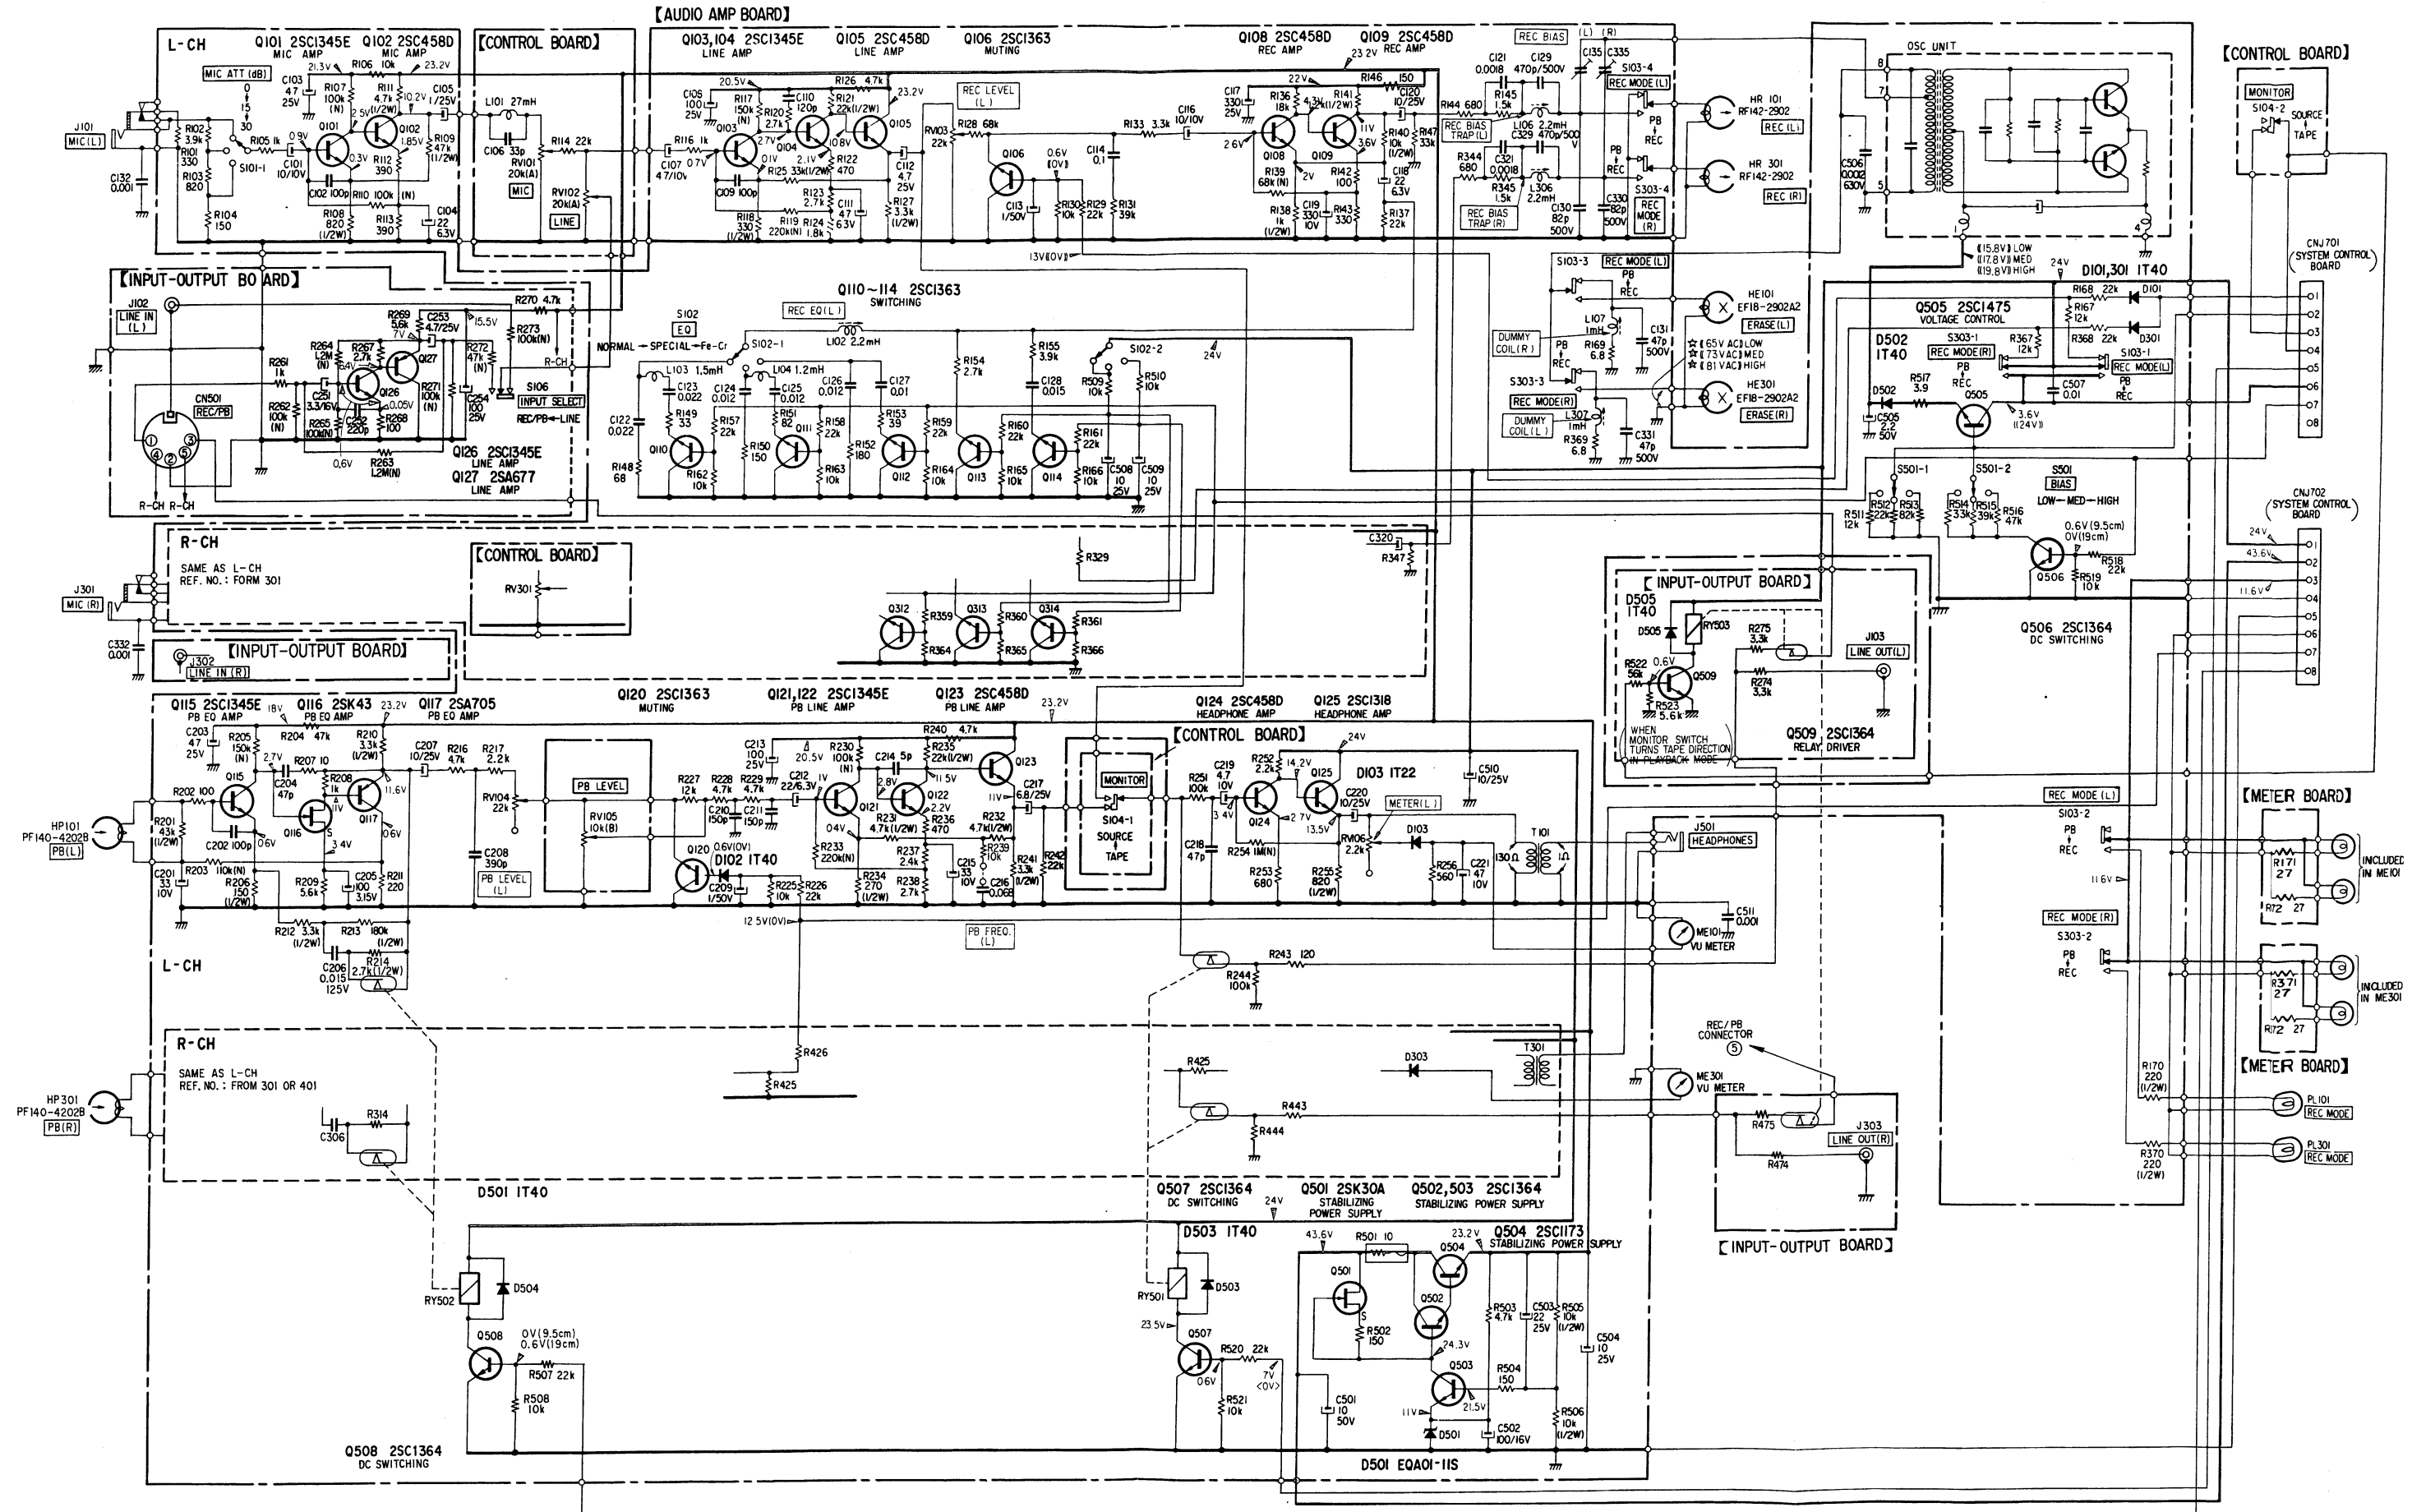

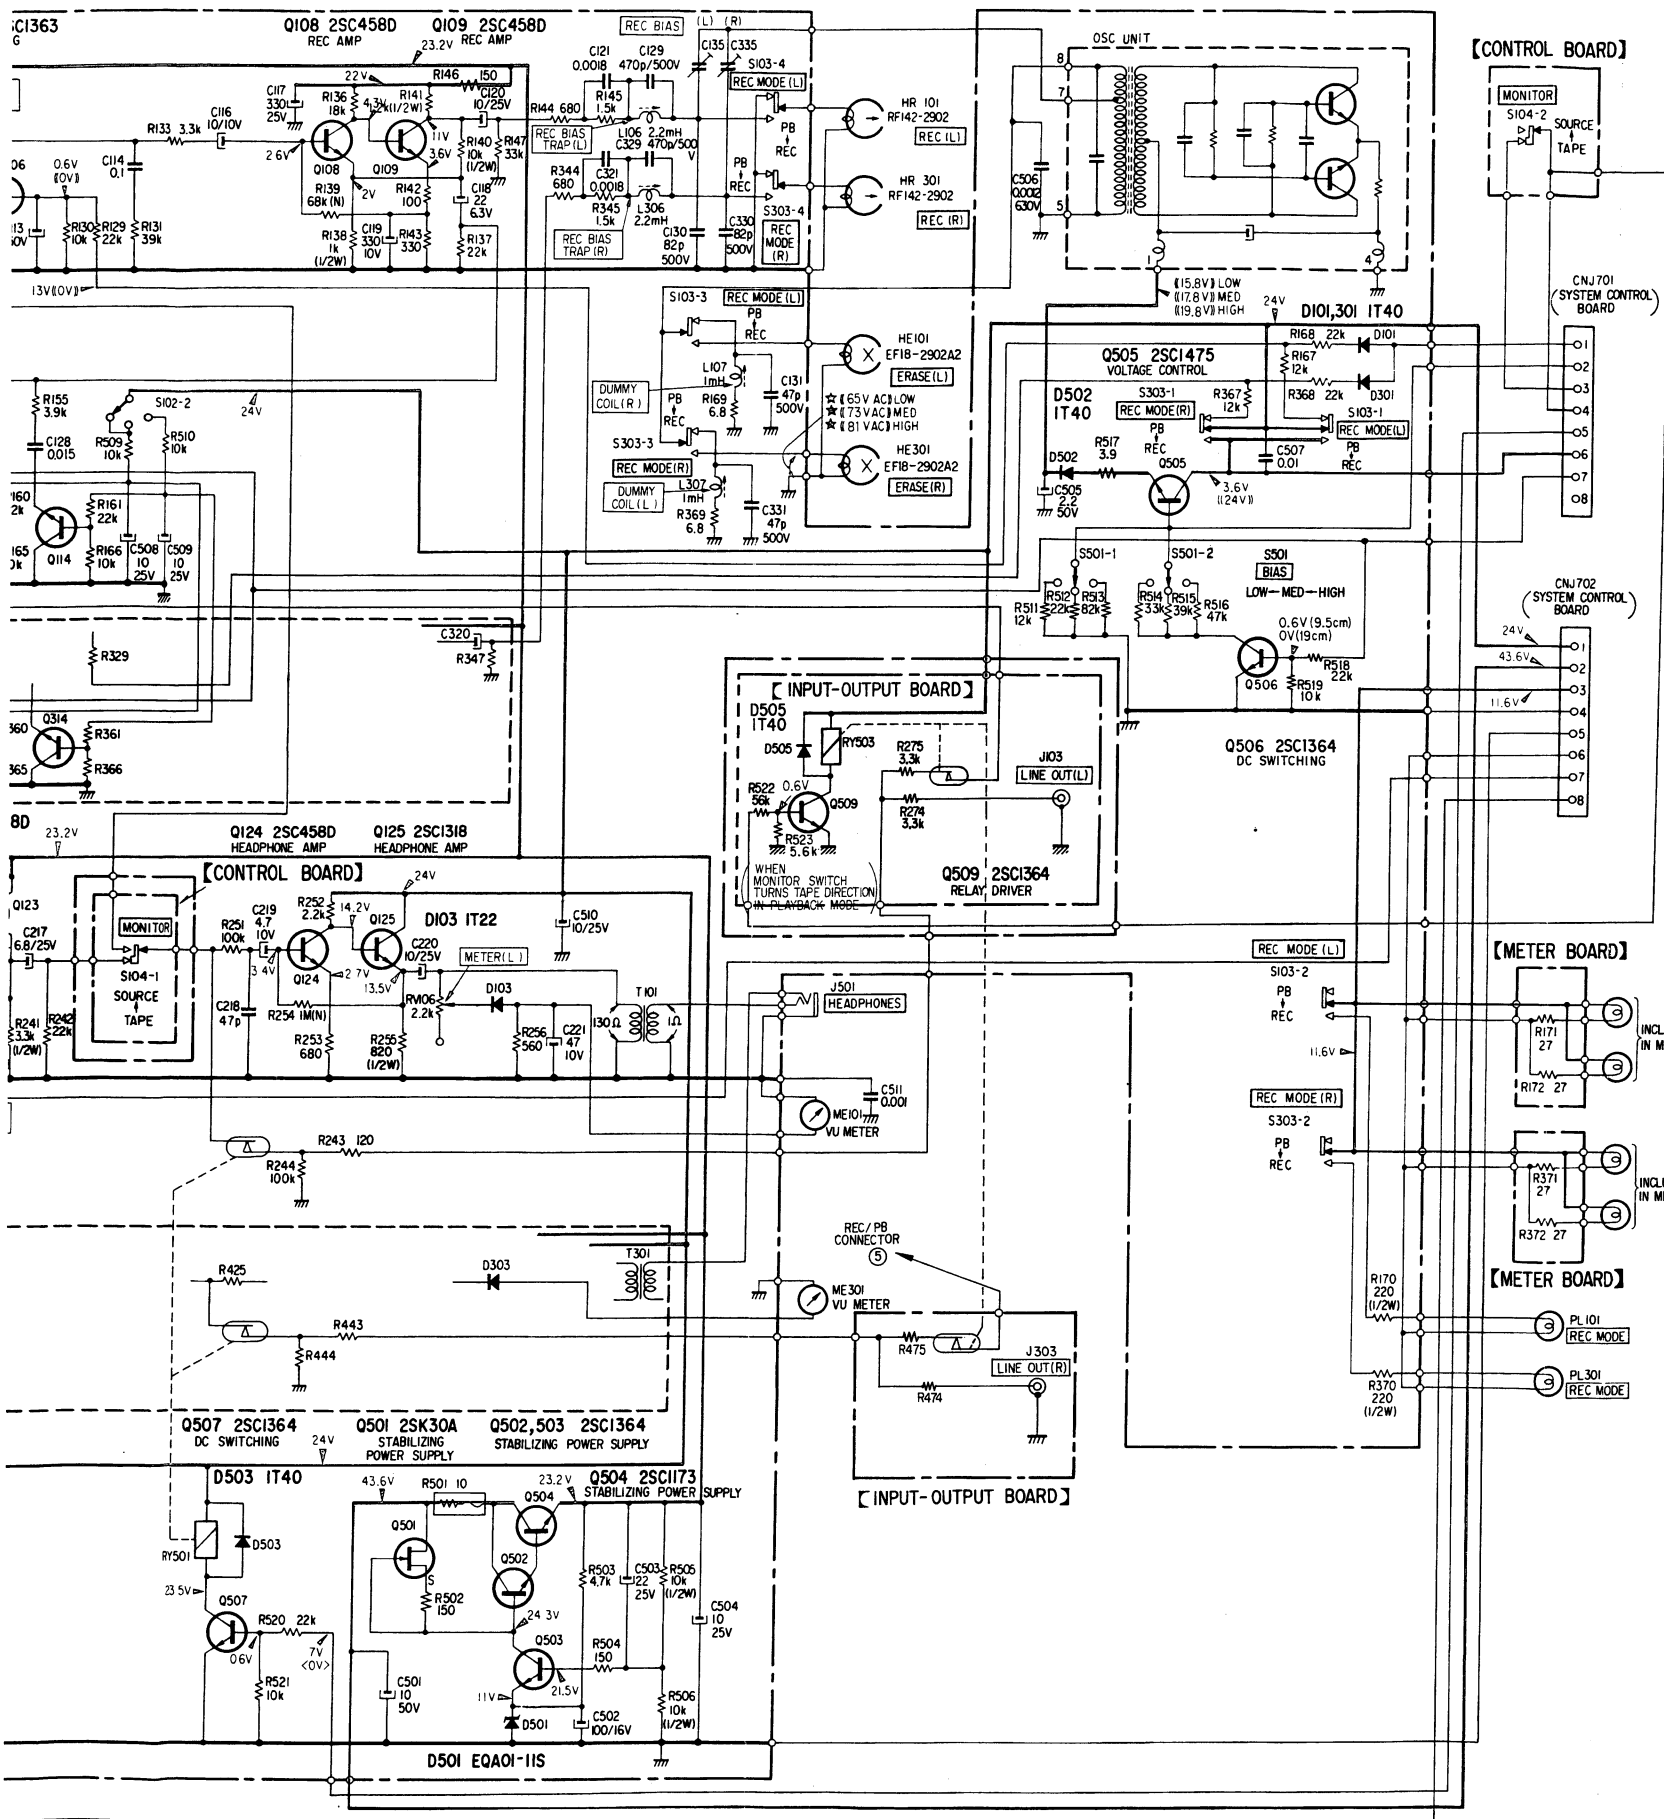


- Note:**
- Components for right channel have the same values as for left channel. Reference numbers are coded from 301 (REC AMP or PB AMP) or 401 (PB AMP).
 - All capacitors are in μF unless otherwise noted. $\text{pF} = \mu\mu\text{F}$ 50WV or less are not indicated except for electrolytics.
 - All resistors are in ohms, $\frac{1}{2}\text{W}$ unless otherwise noted. $\text{k}\Omega = 1000\Omega$, $\text{M}\Omega = 1000\text{k}\Omega$
 - All variable and adjustable resistors have characteristic curve B, unless otherwise noted.
 - (N) : low-noise capacitor and resistor.
 - $\text{B}+$: B+ bus.
 - \square : panel designation.
 - \square : adjustment for repair.
 - --- : chassis ground.
 - Voltages are dc with respect to ground unless otherwise noted.
 - Readings are taken under no signal conditions and in stop mode with a VOM (20 $\text{k}\Omega/\text{V}$).
 - (()) : record mode.
 - () : forward mode.
 - < > : S607 is ON.
 - AC voltage readings indicated by * in the bias oscillator circuit are taken with a VTVM.
 - Voltage variations may be noted due to normal production tolerances.
 - Switch




| Ref. No. | Switch | Position |
|----------|--------------|----------|
| S101,301 | MIC ATT | 0 (dB) |
| S102,302 | EQ | NORMAL |
| S103,303 | REC MODE | PB |
| S104,304 | MONITOR | TAPE |
| S106,306 | INPUT SELECT | LINE |
| S501 | BIAS | MED |

4-5. MOUNTING DIAGRAM - System Control Section -



- Conductor Side -

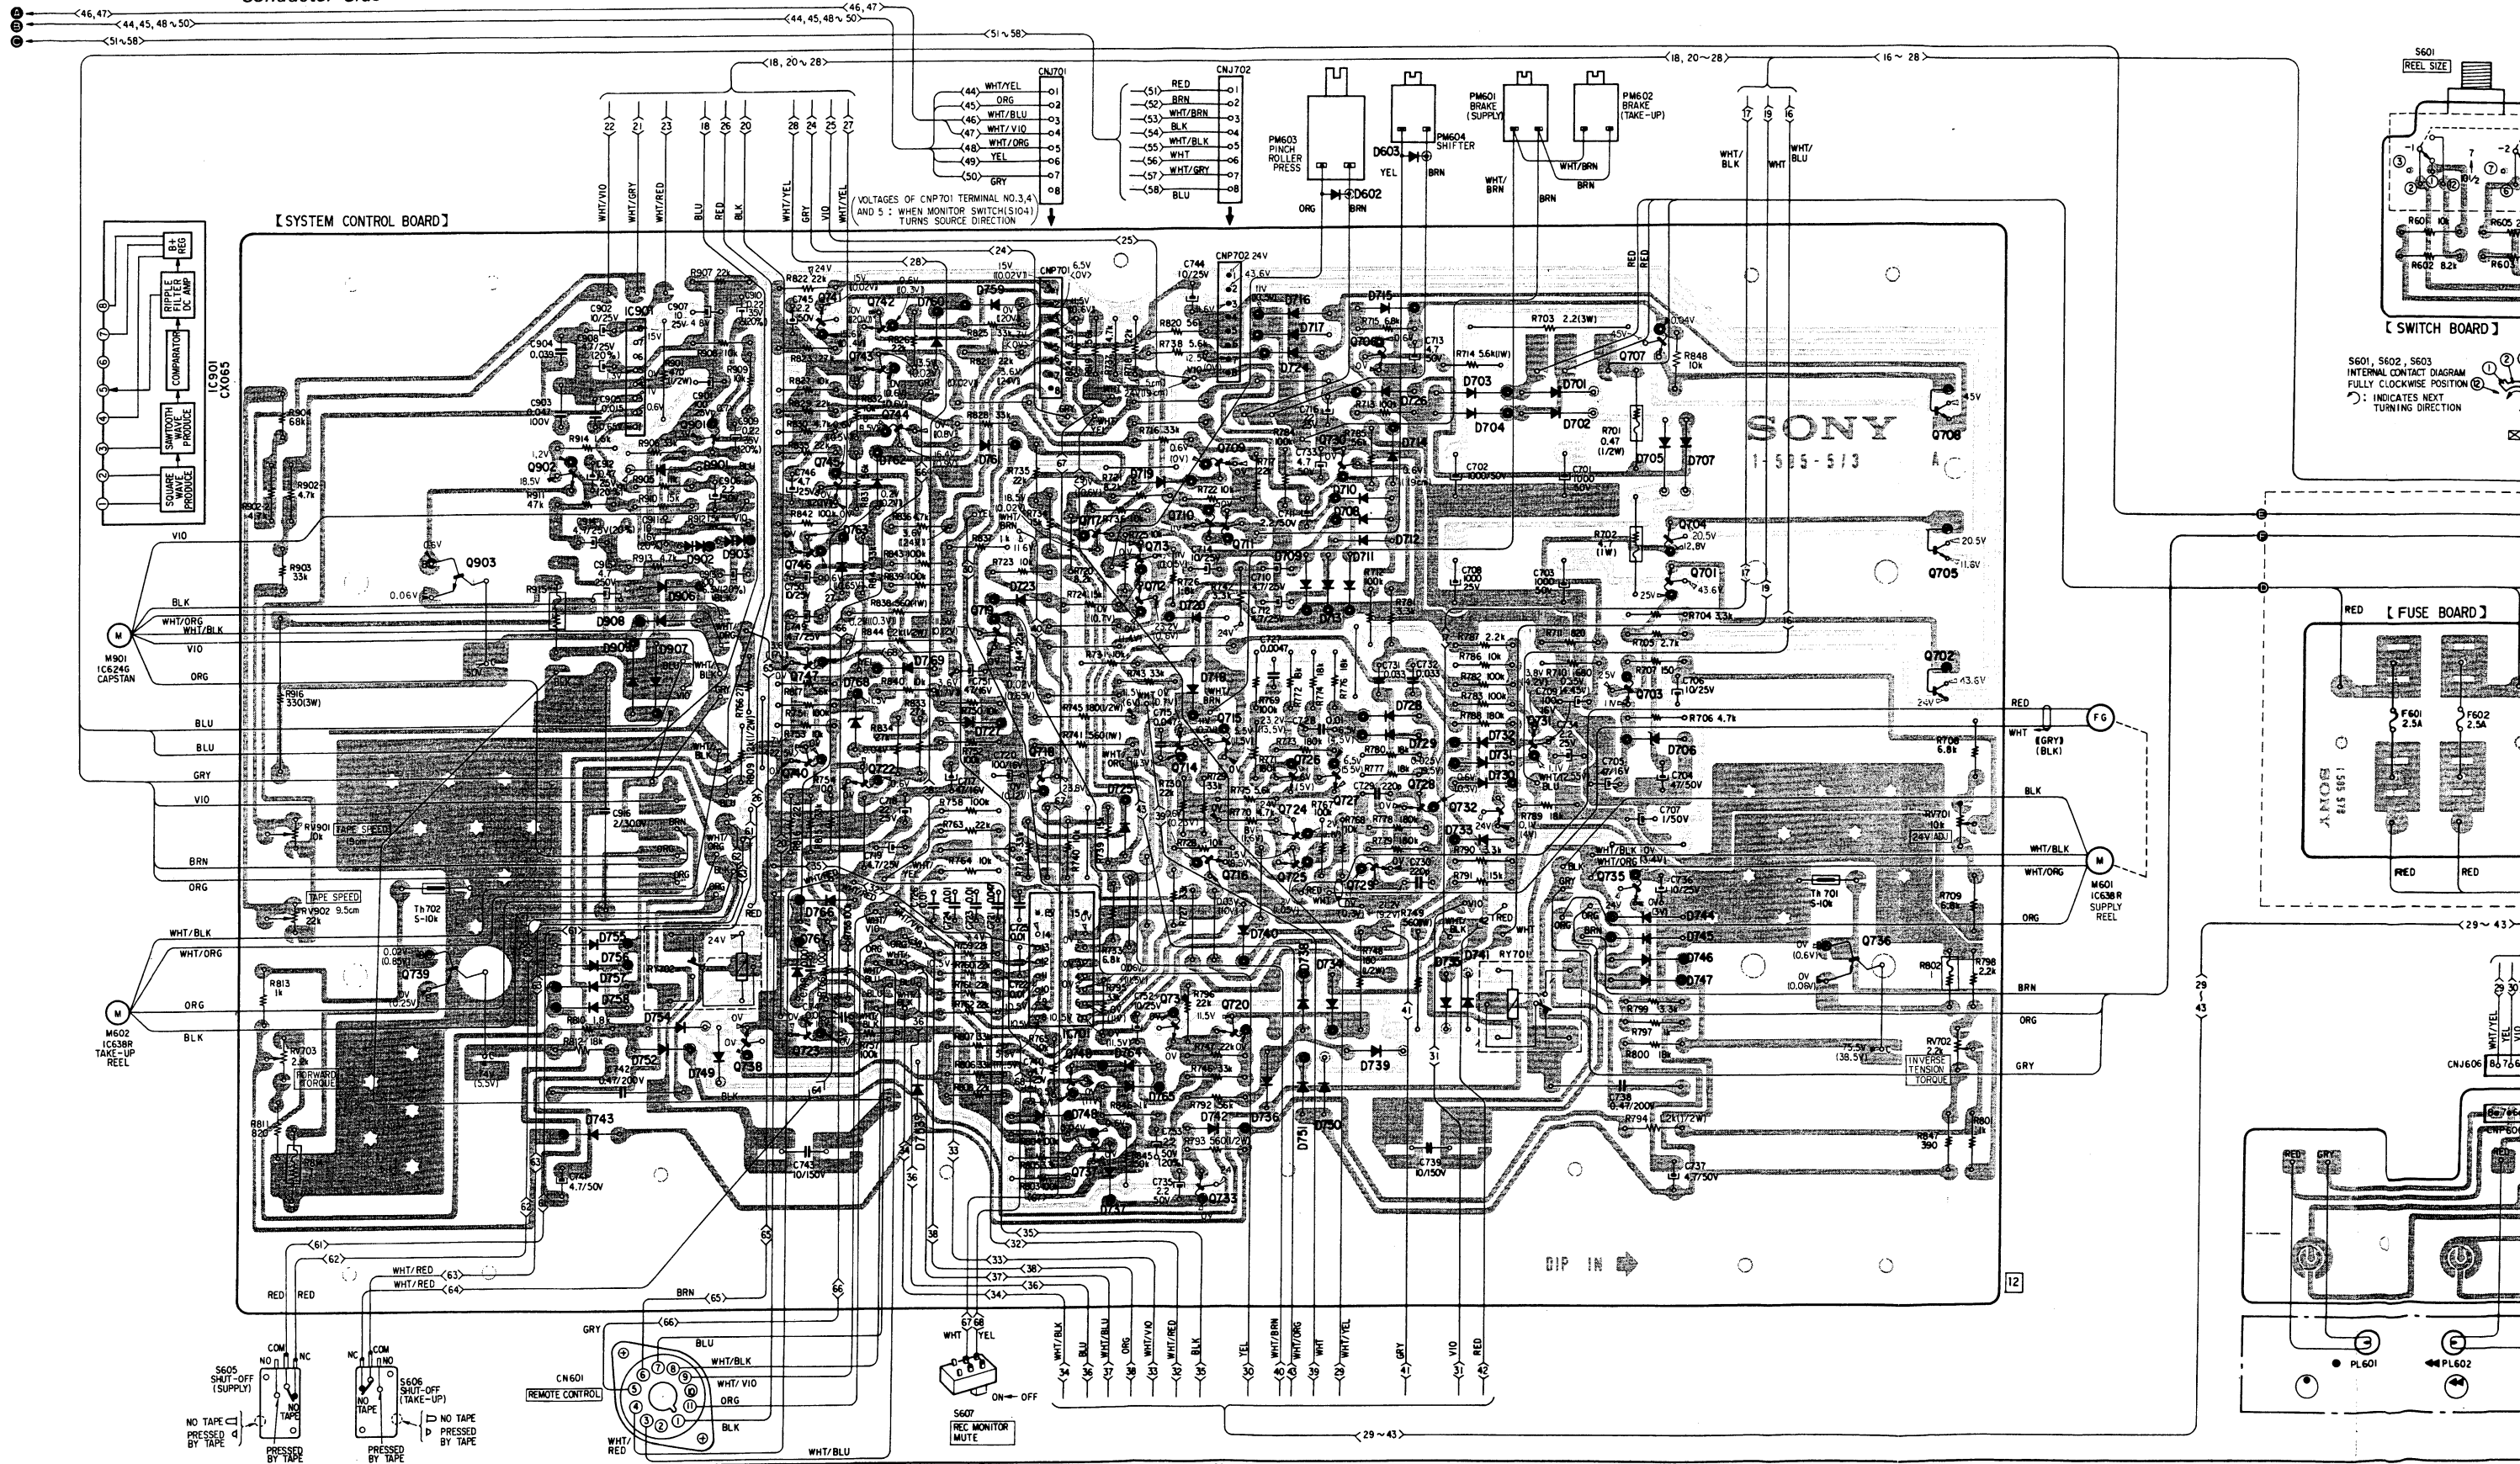

| | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
|-------|-----|-----|-------|-----|-----|-----|-----|-----|-----|-----|-----|-------|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|
| Q, IC | 903 | 902 | IC902 | 901 | 741 | 745 | 742 | 743 | 744 | 719 | 718 | IC701 | 713 | 714 | 710 | 711 | 726 | 730 | 706 | 728 | 732 | 731 | 703 | 707 | 708 | 705 | 702 | |
| D | 739 | 755 | 909 | 906 | 747 | 748 | 749 | 763 | 762 | 769 | 753 | 727 | 748 | 725 | 764 | 720 | 740 | 756 | 734 | 710 | 726 | 715 | 703 | 733 | 701 | 744 | 705 | 707 |
| | | 756 | 908 | 907 | 743 | 744 | 749 | 767 | 766 | 768 | 753 | 727 | 748 | 737 | 765 | 718 | 742 | 756 | 734 | 710 | 726 | 715 | 703 | 733 | 701 | 744 | 705 | 707 |
| | | 757 | 907 | 907 | 743 | 744 | 749 | 767 | 766 | 768 | 753 | 727 | 748 | 737 | 765 | 718 | 742 | 756 | 734 | 710 | 726 | 715 | 703 | 733 | 701 | 744 | 705 | 707 |
| | | 743 | 758 | 907 | 743 | 744 | 749 | 767 | 766 | 768 | 753 | 727 | 748 | 737 | 765 | 718 | 742 | 756 | 734 | 710 | 726 | 715 | 703 | 733 | 701 | 744 | 705 | 707 |
| | | | | | | | | | | | | | | | | | | | | | | | | | | | | |

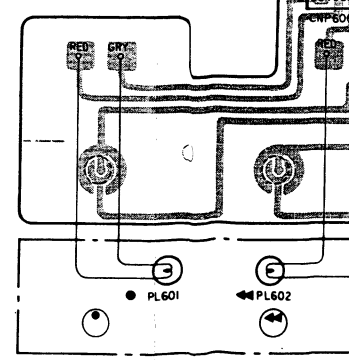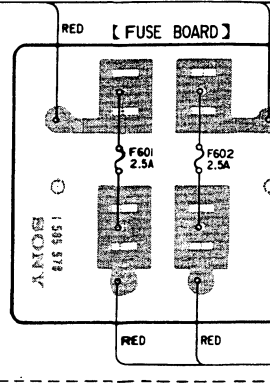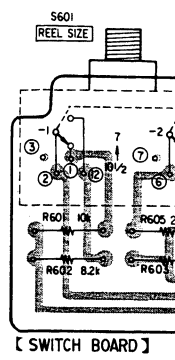

TC-765 TC-765


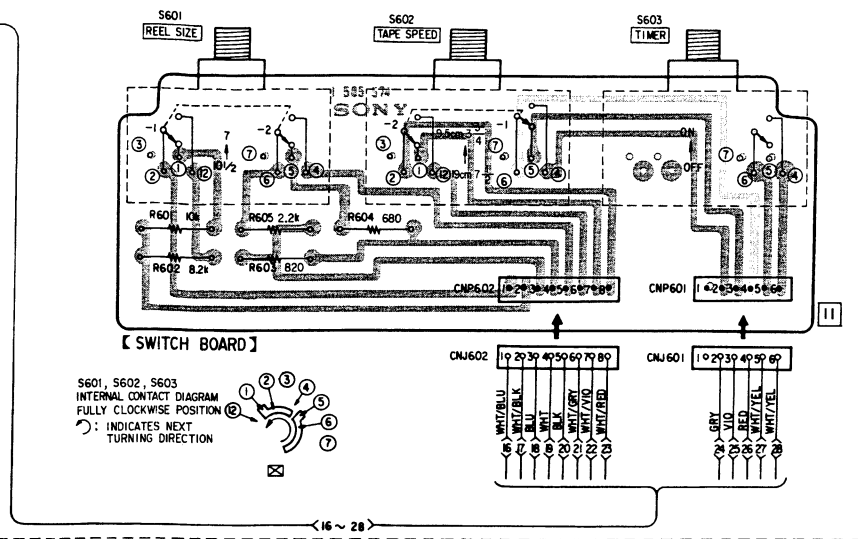
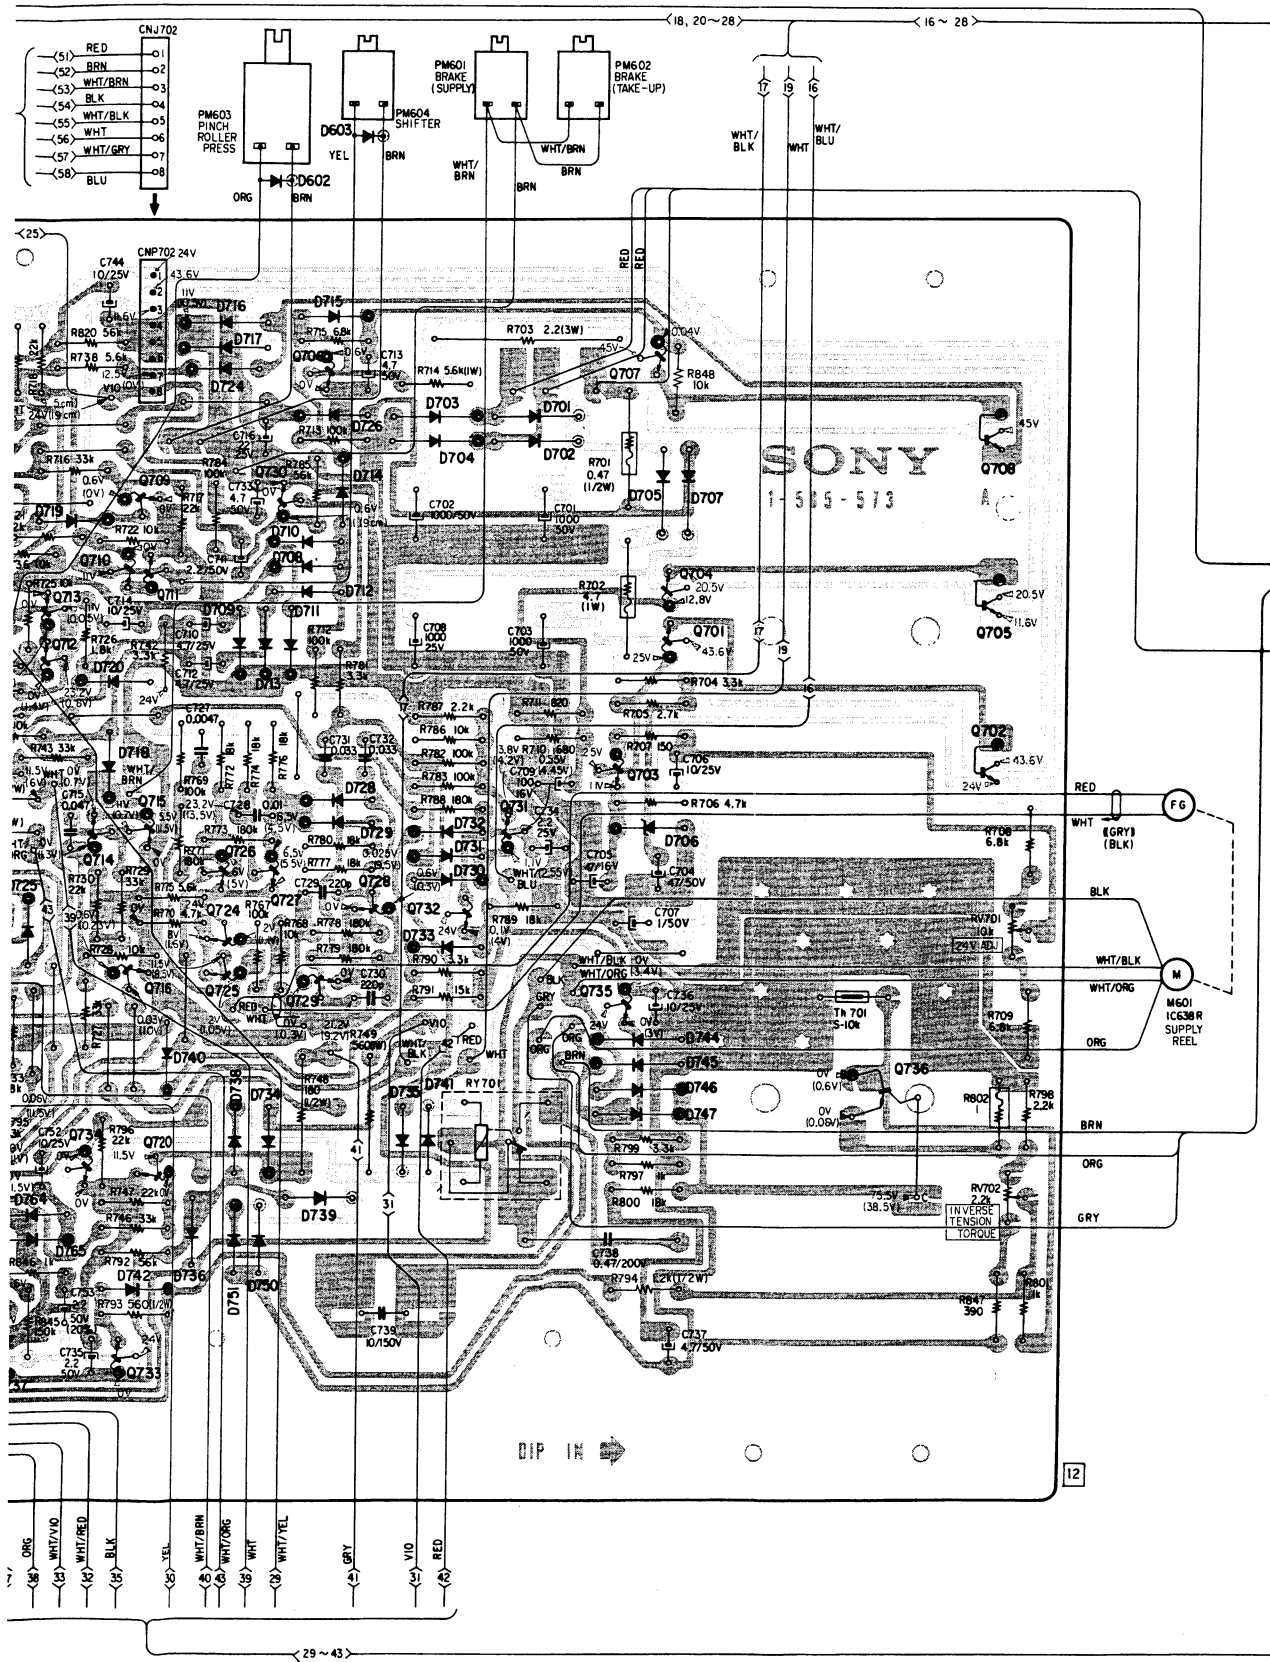



Note:

- ① : B+ pattern.
- Color code of sleeving over the end of the jacket.

Readings are taken in stop mode with a VOM (20 kΩ/V).

(()): record mode.
 () : forward mode.
 < > : S607 is ON.

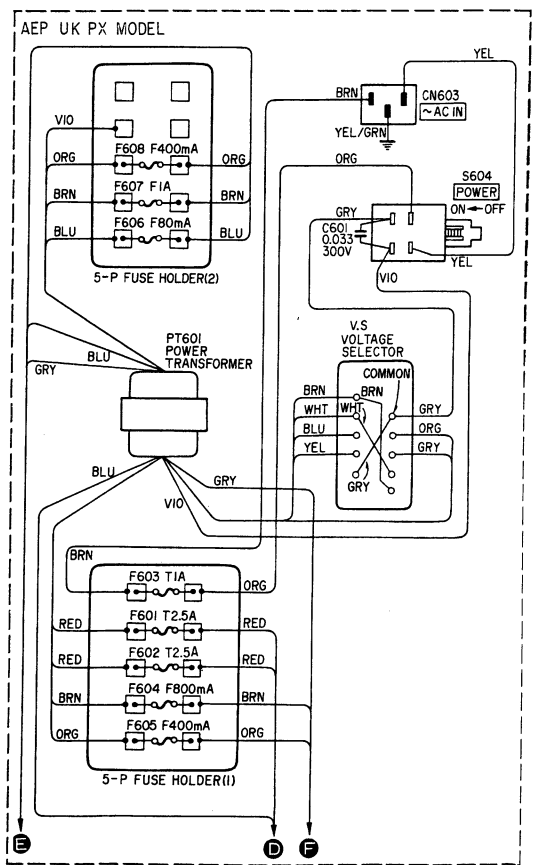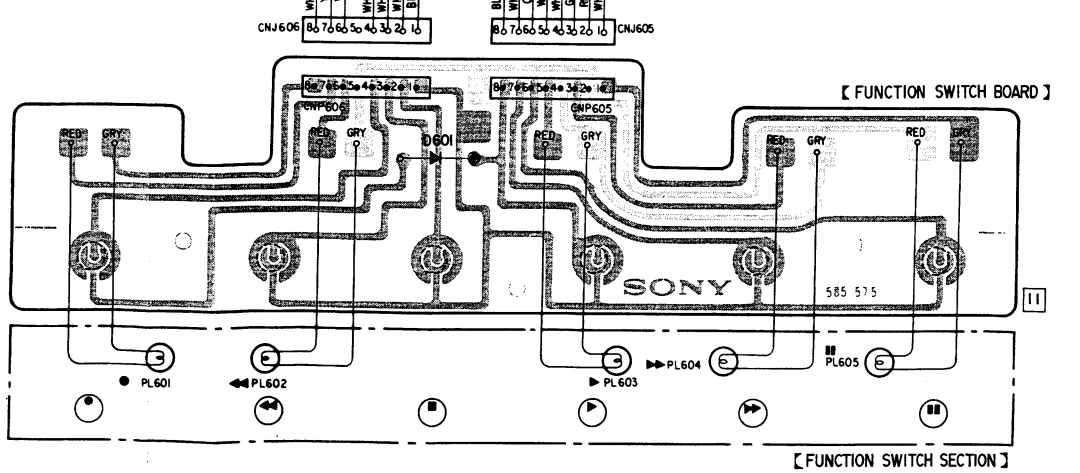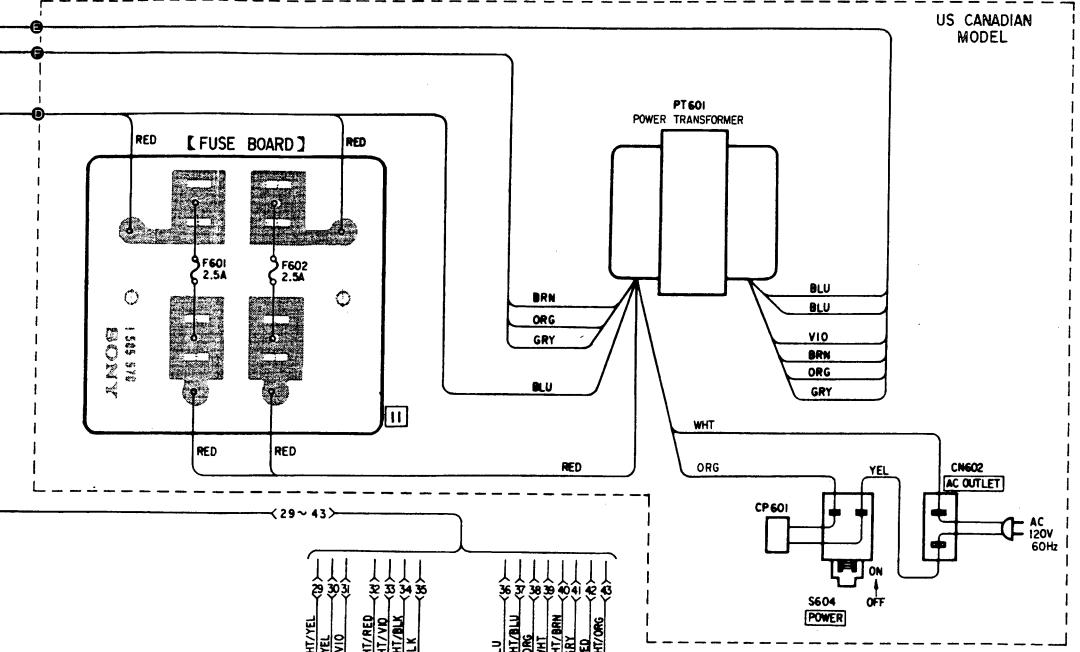

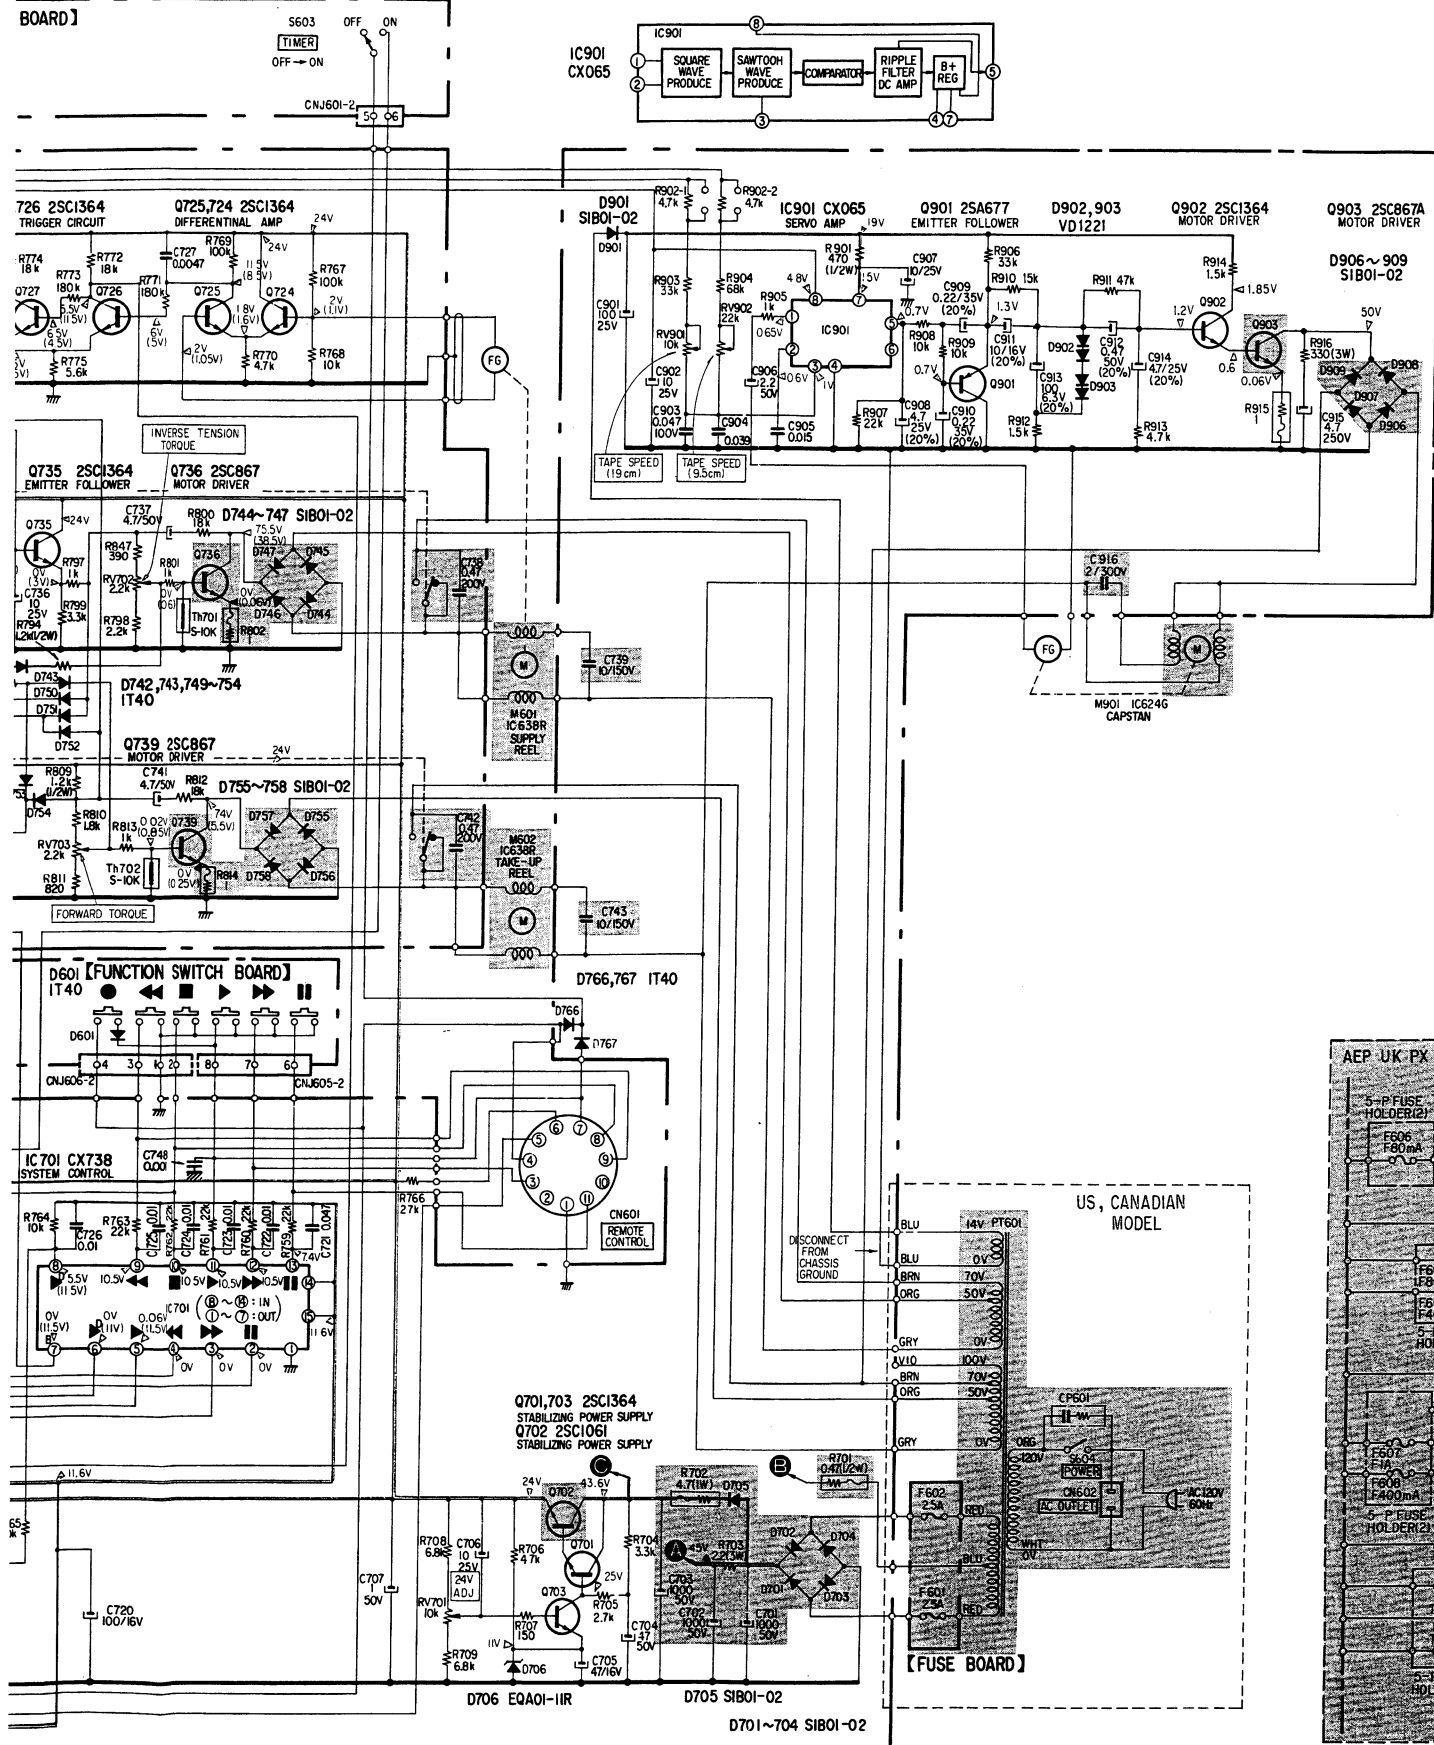


- Note:**
- All capacitors are in μF unless otherwise noted. $\text{pF} = \mu\mu\text{F}$
 - 50V or less are not indicated except for electrolytics.
 - All resistors are in ohms, $\frac{1}{4}\text{W}$ unless otherwise noted. $\text{k}\Omega = 1000\Omega$, $\text{M}\Omega = 1000\text{k}\Omega$
 - : fusible resistor.
 - (N) : low-noise capacitor and resistor.
 - 20% indicates component tolerance.
 - : B+ bus.
 - : panel designation.
 - : adjustment for repair.
 - : direct connection to points marked on the chassis.
 - : chassis ground.
 - Voltages are dc with respect to ground unless otherwise noted.
 - Readings are taken in stop mode with a VOM (20 $\text{k}\Omega/\text{V}$).
 - () : record mode.
 - () : forward mode.
 - < > : S607 is ON.
 - Voltage variations may be noted due to normal production tolerances.
 - Switch


| Ref. No. | Switch | Position |
|----------|--------------------|------------------|
| S601 | REEL SIZE | 10 $\frac{1}{2}$ |
| S602 | TAPE SPEED | 19 cm |
| S603 | TIMER | OFF |
| S604 | POWER | OFF |
| S605 | SHUT-OFF (SUPPLY) | OFF |
| S606 | SHUT-OFF (TAKE-UP) | OFF |
| S607 | REC MONITOR MUTE | OFF |

Replacement Semiconductor
For replacement, use semiconductors except in ().


Q701, 703, 704
Q706, 707, 709
Q716-720, 722-735 : 2SC634A (2SC1364)
Q737, 738, 740-748
Q902

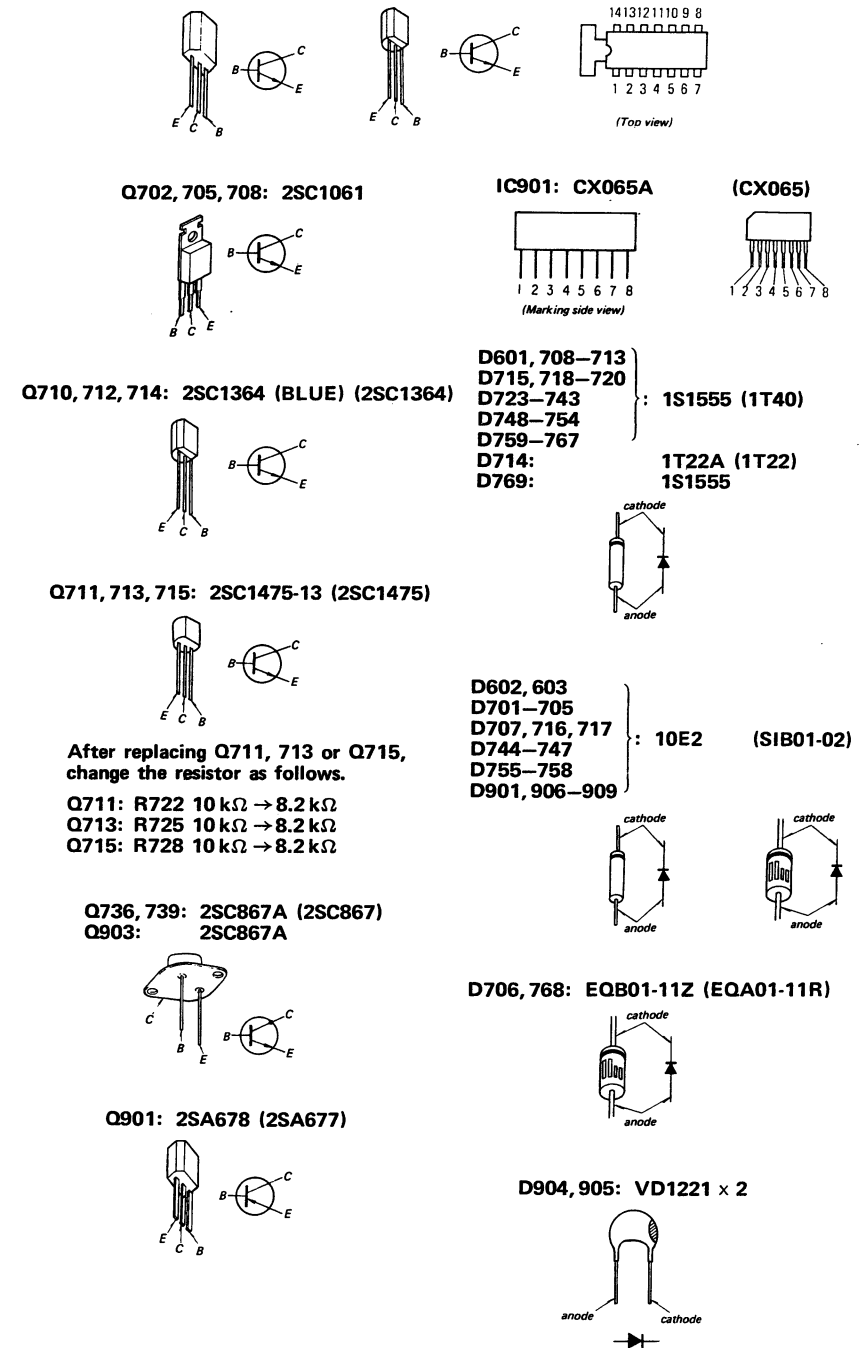

Note: The components identified by shading are critical for safety. Replace only with part number specified.

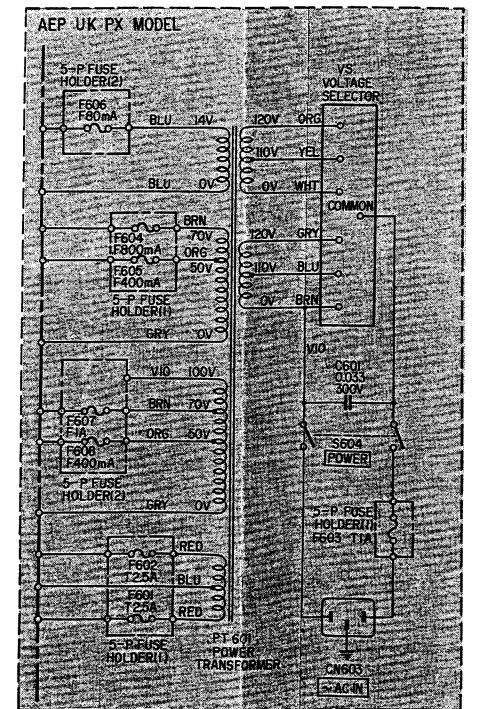


SECTION 5
EXPLODED VIEWS

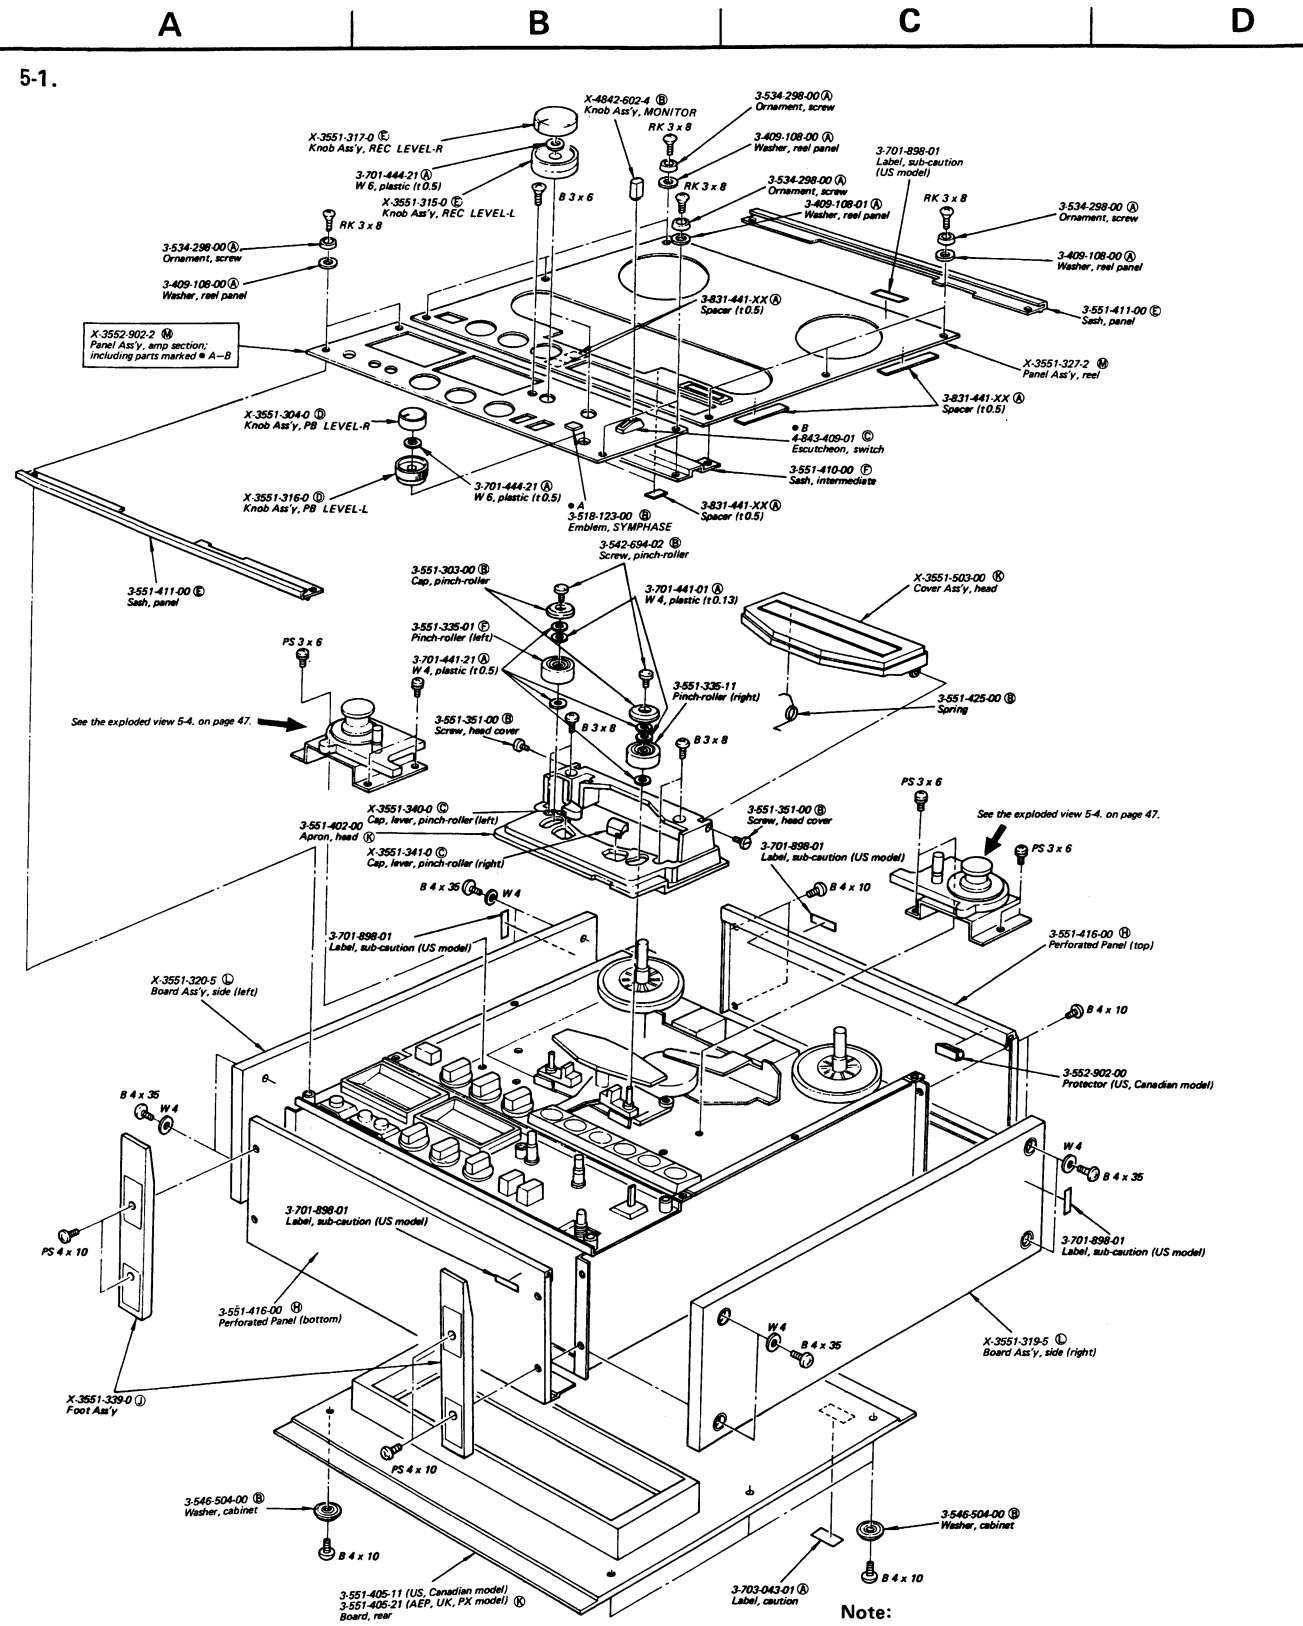

Note:



- Items with no part number and/or no description are not stocked because they are seldom required for routine service.
- All screws are Phillips (cross recess) type unless otherwise noted.
- (-) = slotted head
- Circled letters (A to Z) are applicable to European models only.

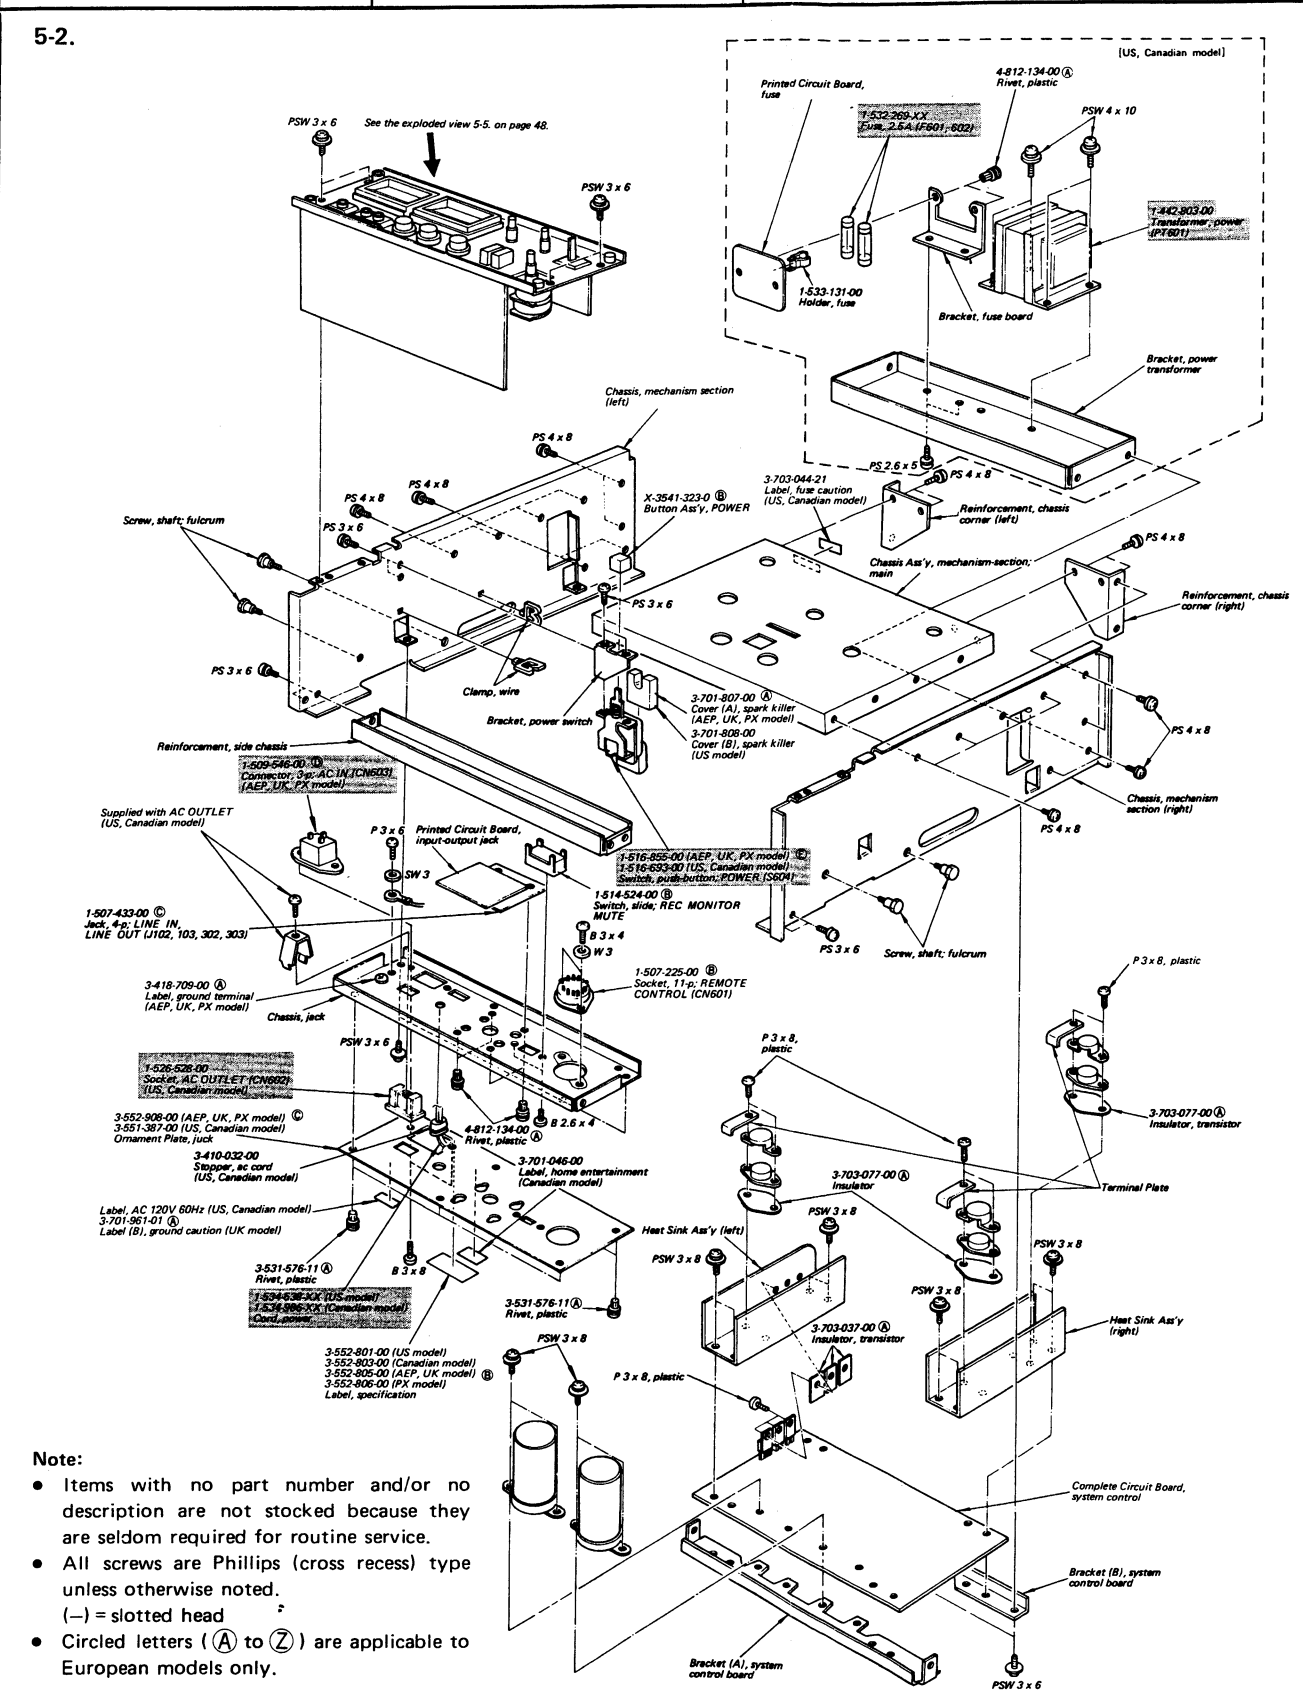

Note:

- Items with no part number and/or no description are not stocked because they are seldom required for routine service.
- All screws are Phillips (cross recess) type unless otherwise noted.
- (-) = slotted head
- Circled letters (A to Z) are applicable to European models only.

Note: The components identified by shading are critical for safety. Replace only with part number specified.

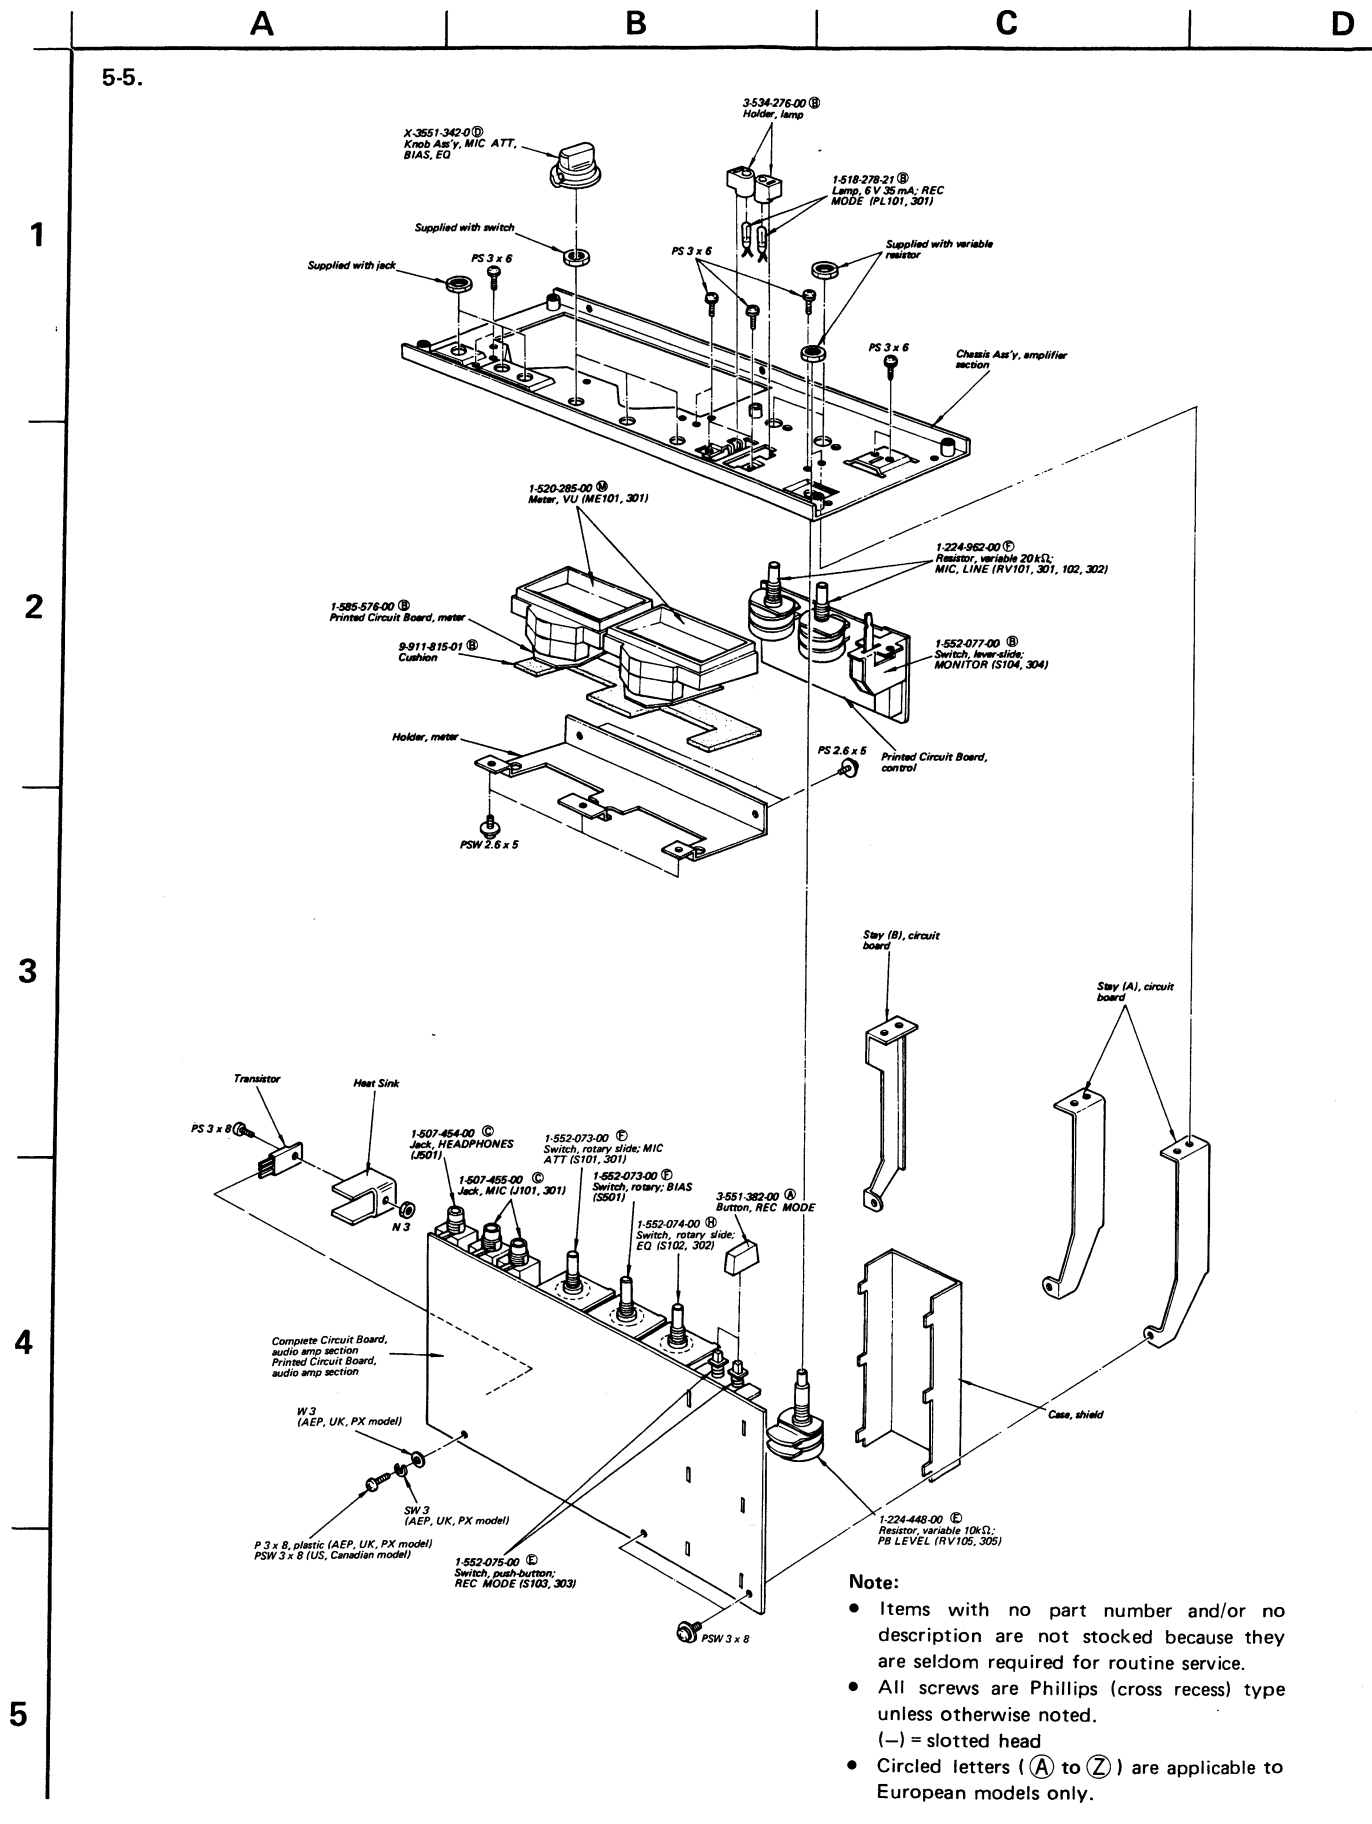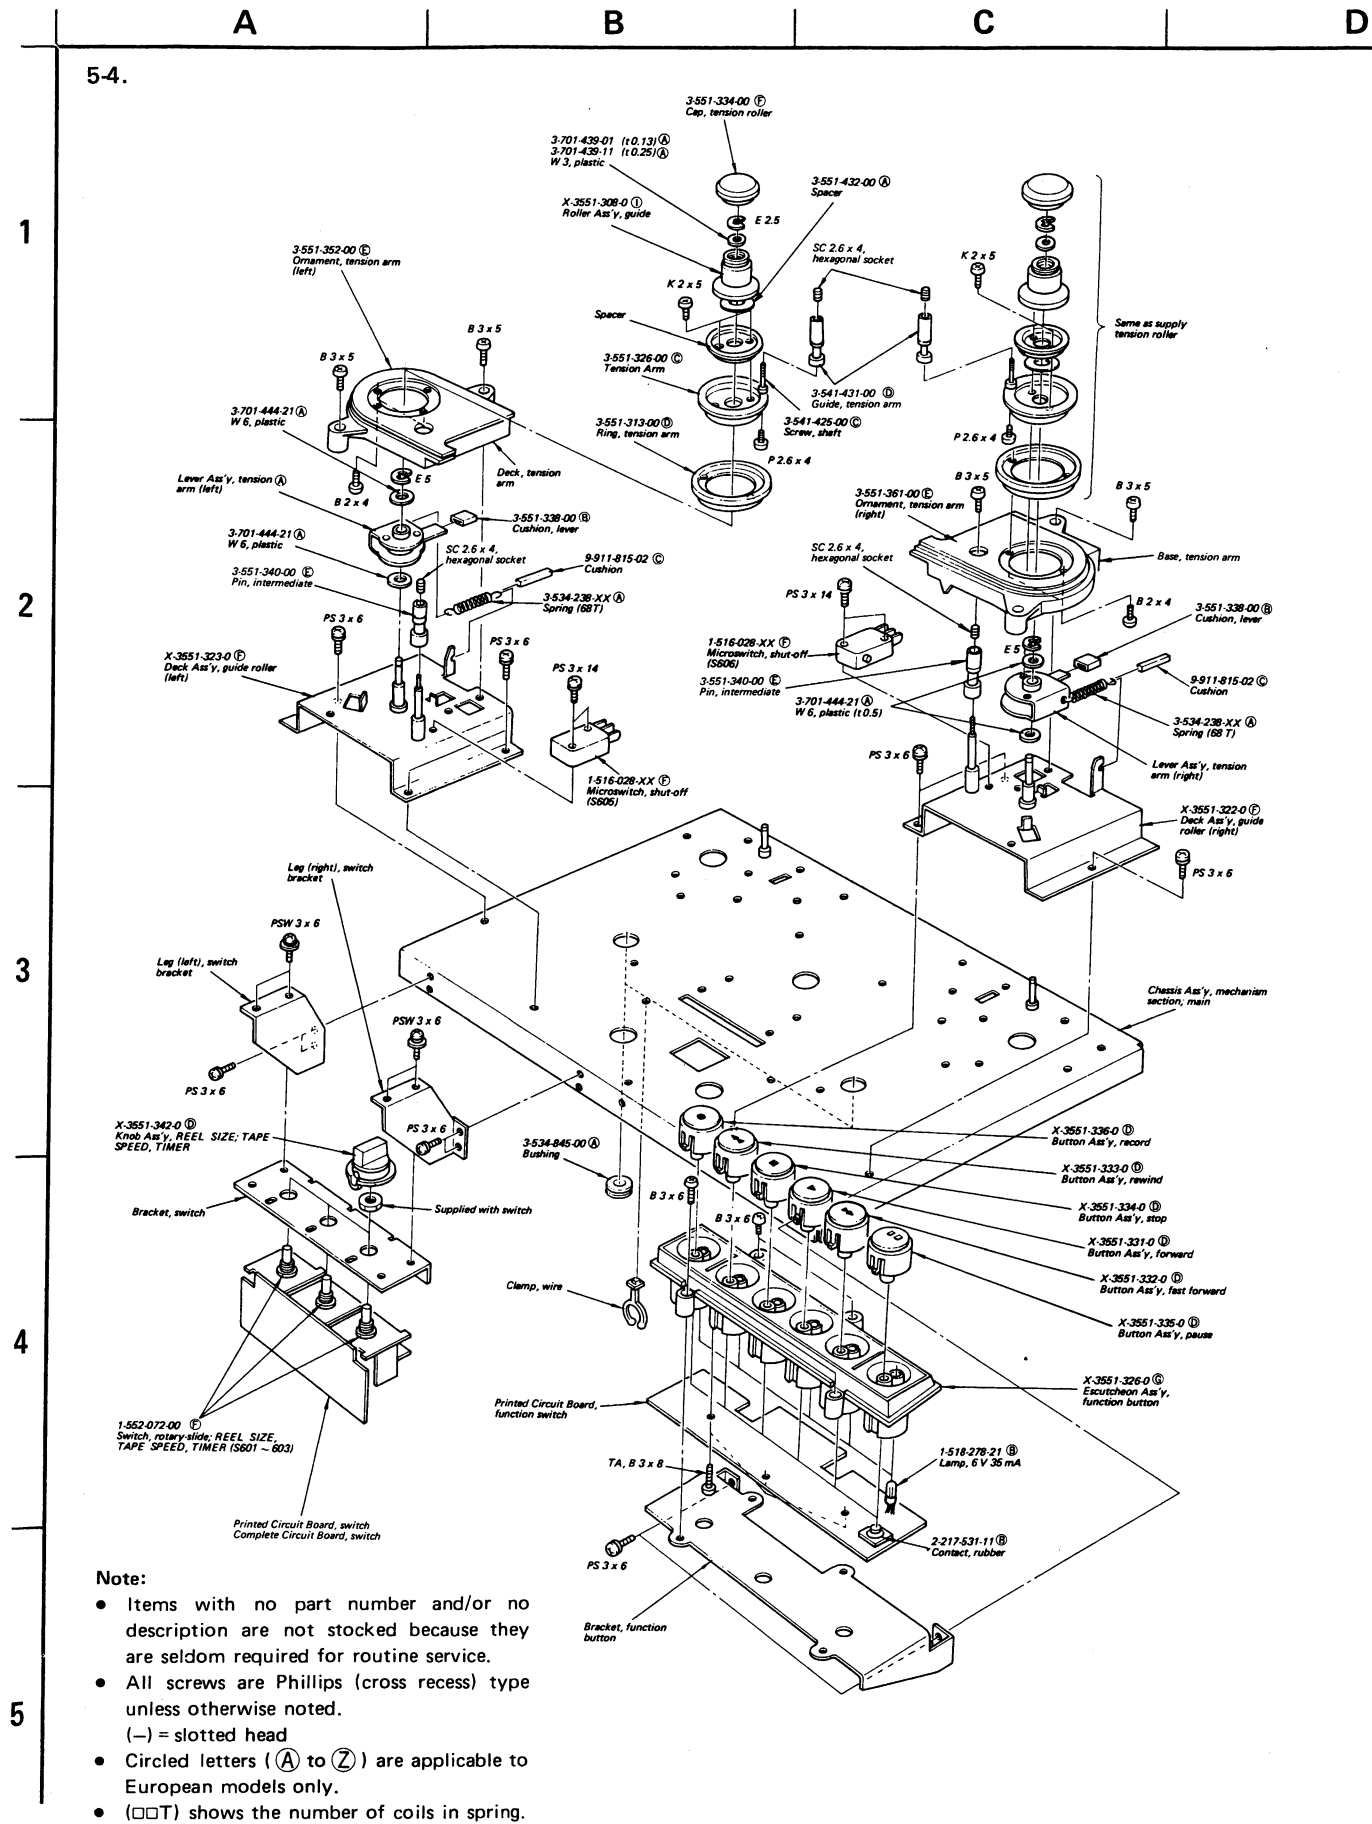

**SECTION 6
ELECTRICAL PARTS LIST**

Note: Circled letters (A to Z) are applicable to European models only.

| <u>Ref. No.</u> | <u>Part No.</u> | <u>Description</u> |
|------------------------------|-----------------|-------------------------------|
| PRINTED CIRCUIT BOARD | | |
| | 1-585-576-00 | (B) Meter |
| SEMICONDUCTORS | | |
| Transistors | | |
| ⇒ Q101-104, ⇒ Q301-304 | (B) | 2SC1345-E |
| ⇒ Q105,106 ⇒ Q305,306 | (B) | 2SC634A |
| ⇒ Q108,308 | (B) | 2SC1345-E |
| ⇒ Q109-114, ⇒ Q309-314 | (B) | 2SC634A |
| Q115,315 | (B) | 2SC1345-E |
| ⇒ Q116,316 | (E) | 2SK43-13 |
| Q117,317 | (B) | 2SA705 |
| ⇒ Q120,320 | (B) | 2SC634A |
| Q121,321 Q122,322 | (B) | 2SC1345-E |
| ⇒ Q123,323 ⇒ Q124,324 | (B) | 2SC634A |
| ⇒ Q125,325 | (C) | 2SC1475 |
| Q126,326 | (B) | 2SC1345-E (AEP, UK, PX model) |
| ⇒ Q127,327 | (C) | 2SA678 (AEP, UK, PX model) |
| Q501 | (B) | 2SK30A |
| ⇒ Q502,503 | (B) | 2SC634A |
| Q504 | (C) | 2SC1173 |
| ⇒ Q505 | (C) | 2SC1475-13 |
| ⇒ Q506-508 | (B) | 2SC634A |
| ⇒ Q509 | (B) | 2SC634A (AEP, UK, PX model) |
| ⇒ Q701 | (B) | 2SC634A |
| Q702 | (D) | 2SC1061 |
| ⇒ Q703,704 | (B) | 2SC634A |
| Q705 | (D) | 2SC1061 |
| ⇒ Q706,707 | (B) | 2SC634A |
| Q708 | (D) | 2SC1061 |
| ⇒ Q709 | (B) | 2SC634A |
| ⇒ Q710 | (B) | 2SC1364 (blue) |

| <u>Ref. No.</u> | <u>Part No.</u> | <u>Description</u> |
|--------------------------|-----------------|----------------------------|
| ⇒ Q711 | (B) | 2SC1475-13 |
| ⇒ Q712 | (B) | 2SC1364 (blue) |
| ⇒ Q713 | (C) | 2SC1475-13 |
| ⇒ Q714 | (B) | 2SC1364 (blue) |
| ⇒ Q715 | (C) | 2SC1475-13 |
| ⇒ Q716-720 | (B) | 2SC634A |
| ⇒ Q722-735 | (B) | 2SC634A |
| Q736 | (C) | 2SC867A |
| ⇒ Q737,738 | (B) | 2SC634A |
| Q739 | (C) | 2SC867A |
| ⇒ Q740-748 | (B) | 2SC634A |
| ⇒ Q901 | (C) | 2SA678 |
| ⇒ Q902 | (B) | 2SC634A |
| Q903 | (C) | 2SC867A |
| ICs | | |
| IC701 | (K) | CX738 |
| ⇒ IC901 | (F) | CX065A |
| Diodes | | |
| ⇒ D101,301 ⇒ D102,302 | (B) | 1S1555 |
| ⇒ D103,303 | (B) | 1T22A |
| ⇒ D501 | (B) | EQB01-11Z |
| ⇒ D502-504 | (B) | 1S1555 |
| ⇒ D505 | (B) | 1S1555 (AEP, UK, PX model) |
| ⇒ D601 | (B) | 1S1555 |
| D602,603 | (B) | 10E2 |
| D701-705 | (B) | 10E2 |
| ⇒ D706 | (B) | EQB01-11Z |
| D707 | (B) | 10E2 |
| ⇒ D708-713 | (B) | 1S1555 |
| ⇒ D714 | (B) | 1T22A |
| ⇒ D715 | (B) | 1S1555 |
| D716,717 | (B) | 10E2 |
| ⇒ D718-720 | (B) | 1S1555 |
| ⇒ D723-743 | (B) | 1S1555 |
| D744-747 | (B) | 10E2 |

⇒: Due to standardization, interchangeable replacements may be substituted for parts specified in the diagrams.

Note: The components identified by shading are critical for safety. Replace only with part number specified.

TC-765 TC-765

Note: Circled letters (A to Z) are applicable to European models only.

| Ref. No. | Part No. | Description |
|-----------------------|-------------------|------------------|
| ⇒ D748-754 | ⓑ 1S1555 | |
| ⇒ D755-755 | ⓑ 10E2 | |
| ⇒ D759-767 | ⓑ 1S1555 | |
| ⇒ D768 | ⓑ EQB01-11Z | |
| D769 | ⓑ 1S1555 | |
| ⇒ D901 | ⓑ 10E2 | |
| D904,905 | ⓑ VD1221 | |
| ⇒ D906-909 | ⓑ 10E2 | |
| Th701,702 | 1-800-204-00 ⓑ | Thermistor S-10K |

COILS

| | | |
|----------|----------------|---------------------------|
| L101,301 | 1-407-593-00 ⓑ | 27 mH, microinductor |
| L102,302 | 1-407-269-00 ⓑ | 2.2 mH, variable inductor |
| L103,303 | 1-407-213-XX ⓑ | 1.5 mH, microinductor |
| L104,304 | 1-407-195-XX ⓑ | 1.2 mH, microinductor |
| L106,306 | 1-407-286-00 ⓑ | 2.2 mH, variable inductor |
| L107,307 | 1-407-248-00 ⓑ | 1 mH, variable inductor |

TRANSFORMER

| | | |
|------------------|-------------------------|---------------------------------------|
| PT601 | 1-442-803-00 | Power (US, Canadian model) |
| | 1-442-804-00 | Power (UK, AEP, PX model) |
| T101,301 | 1-427-284-00 ⓑ | Output |

CAPACITORS

All capacitors are in μF and electrolytic unless otherwise noted.
50WV or less are not indicated except for electrolytics tantalum. $\text{pF} = \mu\text{F}$

| | | | | |
|----------|----------------|------|------|---------------|
| C101,301 | 1-131-193-11 ⓑ | 10 | 10V | tantalum |
| C102,302 | 1-107-131-11 ⓐ | 100p | | silvered mica |
| C103,303 | 1-121-410-11 ⓑ | 47 | 25V | |
| C104,304 | 1-131-190-11 ⓑ | 22 | 6.3V | tantalum |
| C105,305 | 1-131-236-11 ⓑ | 1 | 25V | tantalum |
| C106,306 | 1-107-073-11 ⓐ | 33p | | silvered mica |
| C107,307 | 1-131-192-11 ⓑ | 4.7 | 10V | tantalum |
| C108,308 | 1-121-416-11 ⓑ | 100 | 25V | |
| C109,309 | 1-107-131-11 ⓐ | 100p | | silvered mica |
| C110,310 | 1-107-133-11 ⓐ | 120p | | silvered mica |
| C111,311 | 1-131-191-11 ⓑ | 47 | 6.3V | tantalum |
| C112,312 | 1-131-207-11 ⓑ | 4.7 | 25V | tantalum |

| Ref. No. | Part No. | Description |
|----------|----------------|---------------------------------------|
| C113,313 | 1-121-391-11 ⓐ | 1 50V |
| C114,314 | 1-108-816-12 ⓑ | 0.1 mylar |
| C116,316 | 1-131-193-11 ⓑ | 10 10V tantalum |
| C117,317 | 1-121-654-11 ⓑ | 330 25V |
| C118,318 | 1-131-190-11 ⓑ | 22 6.3V tantalum |
| C119,319 | 1-121-805-11 ⓑ | 330 10V |
| C120,320 | 1-131-238-11 ⓑ | 10 25V tantalum |
| C121,321 | 1-108-795-12 ⓐ | 0.0018 mylar |
| C122,322 | 1-108-808-12 ⓐ | 0.022 mylar |
| C123,323 | 1-108-808-12 ⓐ | 0.022 mylar |
| C134-126 | | |
| C324-326 | 1-108-805-12 ⓐ | 0.012 mylar |
| C127,327 | 1-108-804-12 ⓐ | 0.01 mylar |
| C128,328 | 1-108-806-12 ⓐ | 0.015 mylar |
| C129,329 | 1-107-185-11 ⓐ | 470p silvered mica |
| C130,330 | 1-107-037-11 ⓐ | 82p silvered mica |
| C131,331 | 1-107-163-11 ⓐ | 47p silvered mica |
| C132-134 | | |
| C332-334 | 1-101-001-11 | 0.001 ceramic (US, Canadian model) |
| C135,335 | 1-141-010-XX ⓑ | Trimmer |
| C201,401 | 1-131-195-11 ⓑ | 33 10V tantalum |
| C202,402 | 1-107-131-11 ⓐ | 100p silvered mica |
| C203,403 | 1-121-410-11 ⓑ | 47 25V |
| C204,404 | 1-107-123-11 ⓐ | 47p silvered mica |
| C205,405 | 1-131-187-11 ⓑ | 100 3.15V tantalum |
| C206,406 | 1-104-052-11 ⓑ | 0.015 125V polystyrol |
| C207,407 | 1-131-238-11 ⓑ | 10 25V tantalum |
| C208,408 | 1-103-765-11 ⓐ | 390p polystyrol |
| C209,409 | 1-121-391-11 ⓐ | 1 50V |
| C210,410 | | |
| C211,411 | 1-107-135-11 ⓐ | 150p silvered mica |
| C212,412 | 1-131-190-11 ⓐ | 22 6.3V tantalum |
| C213,413 | 1-121-416-11 ⓑ | 100 25V |
| C214,414 | 1-107-102-11 ⓐ | 5p silvered mica |
| C215,415 | 1-131-195-11 ⓑ | 33 10V tantalum |
| C216,416 | 1-108-814-12 ⓑ | 0.068 mylar |
| C217,417 | 1-131-208-11 ⓐ | 6.8 25V tantalum |
| C218,418 | 1-107-123-11 ⓐ | 47p silvered mica |
| C219,419 | 1-131-192-11 ⓑ | 4.7 10V tantalum |
| C220,420 | 1-121-398-11 ⓐ | 10 25V |
| C221,421 | 1-121-352-11 ⓐ | 47 10V |

| Ref. No. | Part No. | Description |
|---------------------|-------------------------|--|
| C251,451 | 1-131-197-11 ⓑ | 3.3 16V tantalum (AEP, UK, PX model) |
| C252,452 | 1-107-139-11 ⓐ | 220p silvered mica (AEP, UK, PX model) |
| C253,453 | 1-131-207-11 ⓑ | 4.7 25V tantalum (AEP, UK, PX model) |
| C254,454 | 1-121-416-11 ⓑ | 100 25V |
| C501 | 1-121-738-11 ⓐ | 10 50V |
| C502 | 1-121-415-11 ⓑ | 100 16V |
| C503 | 1-121-480-11 ⓐ | 22 25V |
| C504 | 1-121-398-11 ⓐ | 10 25V |
| C505 | 1-121-450-11 ⓐ | 2.2 50V |
| C506 | 1-129-703-11 ⓑ | 0.0012 630V polyethylene |
| C507 | 1-108-804-12 ⓐ | 0.01 mylar |
| C508-510 | 1-121-398-11 ⓐ | 10 25V |
| C511 | 1-101-001-11 ⓐ | 0.001 ceramic |
| C512,513 | 1-101-001-11 ⓐ | 0.001, ceramic (AEP, UK, PX model) |
| C601 | 1-108-750-22 | ⓑ 0.033 500V, metalized paper (AEP, UK, PX model) |
| C701-703 | 1-121-061-11 | ⓐ 1000 50V |
| C704 | 1-121-411-11 ⓑ | 47 50V |
| C705 | 1-121-409-11 ⓐ | 47 16V |
| C706 | 1-121-398-11 ⓐ | 10 25V |
| C707 | 1-121-391-11 ⓐ | 1 50V |
| C708 | 1-121-657-11 | ⓑ 1000 25V |
| C709 | 1-121-415-11 ⓑ | 100 16V |
| C710 | 1-121-395-11 ⓐ | 4.7 25V |
| C711 | 1-121-450-11 ⓐ | 2.2 50V |
| C712 | 1-121-395-11 ⓐ | 4.7 25V |
| C713 | 1-121-396-11 ⓐ | 4.7 50V |
| C714 | 1-108-246-12 | ⓐ 0.047 |
| C715 | 1-108-246-12 ⓐ | 0.047 |
| C716 | 1-121-480-11 ⓐ | 22 25V |
| C717 | 1-121-409-11 ⓐ | 47 16V |
| C718 | 1-121-480-11 ⓐ | 22 25V |
| C719 | 1-121-395-11 ⓐ | 4.7 25V |
| C720 | 1-121-415-11 ⓑ | 100 16V |
| C721 | 1-108-246-12 ⓐ | 0.047 mylar |
| C722-726 | 1-108-239-12 ⓐ | 0.01 mylar |
| C727 | 1-108-234-12 ⓐ | 0.047 mylar |
| C728 | 1-108-239-12 ⓐ | 0.01 mylar |

Note: Circled letters (A to Z) are applicable to European models only.

| Ref. No. | Part No. | Description |
|-----------------|-------------------------|--------------------------------------|
| C729,730 | 1-102-110-11 ⓐ | 220p ceramic |
| C731,732 | 1-108-244-12 ⓐ | 0.033 mylar |
| C733 | 1-121-192-11 | ⓐ 4.7 50V |
| C734 | 1-131-205-11 ⓑ | 2.2 25V tantalum |
| C735 | 1-121-450-11 ⓐ | 2.2 50V |
| C736 | 1-121-398-11 ⓐ | 10 25V |
| C737 | 1-121-396-11 ⓐ | 4.7 50V |
| C738 | 1-108-967-11 | ⓐ 0.47 200V polyethylene |
| C739 | 1-117-100-11 | ⓐ 10 150V metalized paper |
| C740,741 | 1-121-395-11 ⓐ | 4.7 25V |
| C742 | 1-108-967-11 | ⓐ 0.47 200V polyethylene |
| C743 | 1-117-100-11 | ⓐ 10 150V metalized paper |
| C744 | 1-121-398-11 ⓐ | 10 25V |
| C745 | 1-121-450-11 ⓐ | 2.2 50V |
| C746 | 1-121-395-11 ⓐ | 4.7 25V |
| C747 | 1-108-239-12 ⓐ | 0.01 mylar |
| C748 | 1-102-074-11 ⓐ | 0.001 ceramic |
| C749 | 1-121-395-11 ⓐ | 4.7 25V |
| C750 | 1-121-398-11 ⓐ | 10 25V |
| C751 | 1-121-409-11 ⓐ | 47 16V |
| C752 | 1-121-398-11 ⓐ | 10 25V |
| C753 | 1-121-986-11 ⓐ | 2.2 50V |
| C901 | 1-121-416-11 ⓑ | 100 25V |
| C902 | 1-121-398-11 ⓐ | 10 25V |
| C903 | 1-129-793-11 ⓑ | 0.047 100V polyethylene |
| C904 | 1-108-593-12 ⓑ | 0.039 mylar |
| C905 | 1-108-240-12 ⓐ | 0.015 mylar |
| C906 | 1-121-450-11 ⓐ | 2.2 50V |
| C907 | 1-121-398-11 ⓐ | 10 25V |
| C908 | 1-121-961-11 ⓐ | 4.7 25V |
| C909,910 | 1-131-211-11 ⓑ | 0.22 35V tantalum |
| C911 | 1-121-968-11 ⓐ | 10 16V |
| C912 | 1-121-951-11 ⓐ | 0.47 50V |
| C913 | 1-121-980-11 ⓐ | 100 6.3V |
| C914 | 1-121-961-11 ⓐ | 4.7 25V |
| C915 | 1-121-759-11 ⓑ | 4.7 250V |

⇒: Due to standardization, interchangeable replacements may be substituted for parts specified in the diagrams.

Note: The components identified by shading are critical for safety. Replace only with part number specified.

Note: The components identified by shading are critical for safety. Replace only with part number specified.

TC-765 TC-765

Note: Circled letters (A to Z) are applicable to European models only.

Ref. No. Part No. Description

RESISTORS

All resistors are in ohms. Common 1/4W carbon resistors are omitted. Check schematic diagram for their values.

| | | | |
|----------------------|--------------|-----------|--------------------------------------|
| R108,308 | 1-244-871-11 | (A) 820 | 1/2W |
| R109,309 | 1-244-913-11 | (A) 47 k | 1/2W |
| R111,311 | 1-244-889-11 | (A) 4.7 k | 1/2W |
| R118,318 | 1-244-861-11 | (A) 330 | 1/2W |
| R121,321 | 1-244-905-11 | (A) 22 k | 1/2W |
| R125,325 | 1-244-909-11 | (A) 33 k | 1/2W |
| R127,327 | 1-244-885-11 | (A) 3.3 k | 1/2W |
| R138,338 | 1-244-873-11 | (A) 1 k | 1/2W |
| R140,340 | 1-244-897-11 | (A) 10 k | 1/2W |
| R141,341 | 1-244-875-11 | (A) 1.2 k | 1/2W |
| R146,346 | 1-217-401-11 | 150 | 1/4W fusible (US, Canadian model) |
| R170,370 | 1-244-857-11 | (A) 220 | 1/2W |
| R201,401 | 1-244-912-11 | (A) 43 k | 1/2W |
| R206,406 | 1-244-853-11 | (A) 150 | 1/2W |
| R210,410 R212,412 | 1-244-885-11 | (A) 3.3 k | 1/2W |
| R213,413 | 1-244-927-11 | (A) 180 k | 1/2W |
| R214,414 | 1-244-883-11 | (A) 2.7 k | 1/2W |
| R231,431 R232,432 | 1-244-889-11 | (A) 4.7 k | 1/2W |
| R234,434 | 1-244-859-11 | (A) 270 | 1/2W |
| R235,435 | 1-244-905-11 | (A) 22 k | 1/2W |
| R241,441 | 1-244-885-11 | (A) 3.3 k | 1/2W |
| R255,455 | 1-244-871-11 | (A) 820 | 1/2W |
| R501 | 1-217-387-11 | (B) 10 | 1/4W fusible |
| R505,506 | 1-244-897-11 | (A) 10 | 1/2W |
| R517 | 1-217-382-11 | 3.9 | 1/4W fusible (US, Canadian model) |

Ref. No. Part No. Description

| | | | |
|------------------------|--------------|-----------------------|------------------|
| R793 | 1-244-867-11 | (A) 560 | 1/2W |
| R794 | 1-244-875-11 | (A) 1.2 k | 1/2W |
| R809 | 1-244-875-11 | (A) 1.2 k | 1/2W |
| R901 | 1-244-865-11 | (A) 470 | 1/2W |
| R903 | 1-212-626-11 | (B) 33 k | 1/4W metal oxide |
| R904 | 1-212-634-11 | (B) 68 k | 1/4W metal oxide |
| R915 | 1-217-375-11 | (B) 1 | 1/4W fusible |
| R916 | 1-206-713-11 | (B) 330 | 3W metal oxide |
| RV101,301 RV102,302 | 1-224-962-00 | (F) 20 k, variable; | MIC, LINE |
| RV103,303 RV104,304 | 1-224-646-XX | (B) 22 k, adjustable | |
| RV105,305 RV106,306 | 1-224-448-00 | (E) 10 k, variable; | PB LEVEL |
| | 1-224-643-XX | (B) 2.2 k, adjustable | |
| RV701 | 1-224-645-XX | (B) 10 k, adjustable | |
| RV702,703 | 1-224-643-XX | (B) 2.2 k, adjustable | |
| RV901 | 1-224-493-00 | (B) 10 k, adjustable | |
| RV902 | 1-224-491-00 | (B) 22 k, adjustable | |

SWITCHES

| | | | |
|----------|--------------|--|--------------------|
| S101,301 | 1-552-073-00 | (F) Rotary, MIC ATT | |
| S102,302 | 1-552-074-00 | (H) Rotary, EQ | |
| S103,303 | 1-552-075-00 | (E) Pushbutton, REC MODE | |
| S104,304 | 1-552-077-00 | (D) Lever Slide, MONITOR | |
| S106,306 | 1-516-778-XX | (C) Slide, INPUT SELECT | AEP, UK, PX model) |
| S501 | 1-552-073-00 | (F) Rotary, BIAS | |
| S601-603 | 1-552-072-00 | (F) Rotary-slide, REEL SIZE, TAPE SPEED, TIMER | |
| S605,606 | 1-516-028-XX | (F) Micro, shut-off | |
| S607 | 1-514-524-00 | (B) Slide, REC MONITOR MUTE | |

Note: The components identified by shading are critical for safety. Replace only with part number specified.

Note: Circled letters (A to Z) are applicable to European models only.

Ref. No. Part No. Description

JACKS

| | | | |
|----------------------|--------------|----------------------------------|--|
| J101,301 | 1-507-455-00 | (C) MIC | |
| J102,302 J103,303 | 1-507-433-00 | (C) 4p, phono; LINE IN, LINE OUT | |
| J501 | 1-507-454-00 | (C) HEADPHONES | |

FUSES

| | | | |
|-------|--------------|----------------------------------|---------------------|
| CN501 | 1-509-549-00 | (B) Connector, REC/PB | (AEP, UK, PX model) |
| CN601 | 1-507-255-00 | (B) Socket, 11-p; REMOTE CONTROL | |

MISCELLANEOUS

| | | | |
|-----------|--------------|--------------------------------|--|
| HE101,301 | 8-825-547-00 | (E) Head, erase FF18-2902A2 | |
| HP101,301 | 8-825-534-20 | (L) Head, playback PF140-2202D | |
| HR101,301 | 8-825-511-00 | (L) Head, record RF140-2902 | |

⇒: Due to standardization, interchangeable replacements may be substituted for parts specified in the diagrams.

Note: The components identified by shading are critical for safety. Replace only with part number specified.


Note: Circled letters (A to Z) are applicable to European models only.

| ACCESSORIES & PACKING MATERIALS | |
|--|--|
| <u>Part No.</u> | <u>Description</u> |
| A-2500-027-A | RM-30 (US, Canadian, PX model) |
| X-3552-801-0 | Carton Ass'y (US model) |
| X-3552-802-0 | (K) Carton Ass'y (Canadian, AEP, UK model) |
| X-3552-803-0 | Carton Ass'y (PX model) |
| 1-526-565-00 | Adaptor, AC plug (PX model) |
| 1-534-049-31 | (F) Cord, connection; RK-74H |
| 1-534-754-00 | Cord, power (PX model) |
| 1-534-819-00 | (G) Cord, power 3 pin (UK model) |
| 3-401-193-00 | Ribbon, head cleaning (US model) |
| 3-534-322-00 | (A) Cushion, reel table |
| 3-534-327-00 | (C) Case, reel |
| 3-541-496-00 | (D) Bag, protection |
| 3-542-008-00 | (C) Tips, head cleaning |
| 3-542-101-00 | (B) Adaptor, reel |
| 3-551-428-00 | (B) Cover, sheet |
| 3-551-428-00 | (B) Cushion, lower |
| 3-551-430-00 | (D) Cushion upper |
| 3-552-909-00 | Carton, RM-30 (PX, US, Canadian model) |
| 3-701-628-00 | Bag, plastic; RM-30 (US, Canadian, PX model) |
| 3-701-632-11 | (I) Manual, instruction (AEP, UK model) |
| 3-770-226-21 | Manual, instruction (US model) |
| 3-770-226-31 | Manual, instruction (Canadian model) |
| 3-770-226-61 | Manual, instruction (PX model) |


Note: The components identified by shading are critical for safety. Replace only with part number specified.

HARDWARE NOMENCLATURE

Screw:

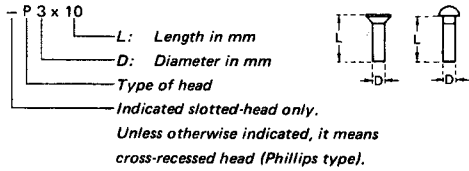

Nut, Washer, Retaining ring:



| Reference Designation | Shape | Description | Remarks |
|-----------------------|-------|---|--|
| SCREWS | | | |
| P | | pan-head screw | binding-head (B) screw for replacement |
| PWH | | pan-head screw with washer face | binding-head (B) screw and flat washer for replacement |
| PS PSP | | pan-head screw with spring washer | binding-head (B) screw and spring washer for replacement |
| PSW PSPW | | pan-head screw with spring and flat washers | binding-head (B) screw and spring and flat washers for replacement |
| R | | round-head screw | binding-head (B) screw for replacement |
| K | | flat-countersunk-head screw | |
| RK | | oval-countersunk-head screw | |
| B | | binding-head screw | |
| T | | truss-head screw | binding-head (B) screw for replacement |
| F | | flat-fillister-head screw | |
| RF | | fillister-head screw | |
| BV | | braizer-head screw | |

| Reference Designation | Shape | Description | Remarks |
|----------------------------|-------|--|---|
| SELF-TAPPING SCREWS | | | |
| TA | | self-tapping screw | ex: TA, P 3 x 10 |
| PTP | | pan-head self-tapping screw | binding-head self-tapping (TA, B) screw for replacement |
| PTPWH | | pan-head self-tapping screw with washer face | binding-head self-tapping (TA, B) screw and flat washer for replacement |
| PTTWH | | pan-head thread-rolling screw with washer face | binding-head (B) screw and flat washer for replacement |
| SET SCREWS | | | |
| SC | | set screw | |
| SC | | hexagon-socket set screw | ex: SC 2.6 x 4, hexagon socket |
| NUT | | | |
| N | | nut | |
| WASHERS | | | |
| W | | flat washer | |
| SW | | spring washer | |
| LW | | internal-tooth lock washer | ex: LW3, internal |
| LW | | external-tooth lock washer | ex: LW3, external |
| RETAINING RINGS | | | |
| E | | retaining ring | |
| G | | grip-type retaining ring | |