


# STR-414L

*AEP Model*

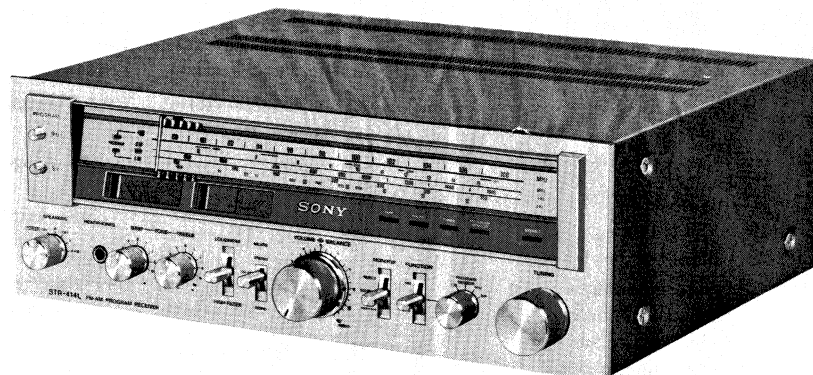

## FM-AM PROGRAM RECEIVER

### SPECIFICATIONS

#### GENERAL

<b>Power Requirements:</b>	120 V, 220 V or 240 V ac adjustable, 50 Hz
<b>Power Consumption:</b>	250 W
<b>Dimensions:</b>	Approx. 410 (w) x 145 (h) x 375 (d) mm 16 (w) x 5 3/4 (h) x 14 3/4 (d) inches including projecting parts and controls
<b>Weight:</b>	Approx. 9.1 kg, 20 lb 1 oz (net) Approx. 11.2 kg, 24 lb 12 oz (in shipping carton)


#### FM SECTION

<b>Frequency Range:</b>	87.5 – 108 MHz
<b>Antenna:</b>	300 $\Omega$ balanced 75 $\Omega$ unbalanced
<b>Intermediate Frequency:</b>	10.7 MHz
<b>Sensitivity at 50dB Quieting:</b>	3.5 $\mu$ V (10.7 dB) (MONO) 45 $\mu$ V (33 dB) (STEREO)
<b>Sensitivity at 46dB Quieting:</b>	4 $\mu$ V (12 dB) (MONO) 50 $\mu$ V (34 dB) (STEREO) (at 40 kHz deviation)

<b>Usable Sensitivity:</b>	1.8 $\mu$ V (5 dB), IHF (at 40 kHz deviation) 1.6 $\mu$ V (4 dB), S/N=26 dB
<b>S/N Ratio:</b>	75 dB (MONO) 70 dB (STEREO)
<b>Harmonic Distortion:</b>	At 100 Hz 0.15 % (MONO) 0.3 % (STEREO) At 1 kHz 0.15 % (MONO) 0.3 % (STEREO) At 10 kHz 0.2 % (MONO) 0.5 % (STEREO)
<b>IM Distortion:</b>	0.15 % (MONO) 0.3 % (STEREO)
<b>Separation:</b>	35 dB at 100 Hz 45 dB at 1 kHz 35 dB at 10 kHz
<b>Frequency Response:</b>	40 – 12,500 Hz +0.5 dB -1.0 dB 30 – 15,000 Hz +0.5 dB -2.0 dB

— Continued on page 2 —

#### SAFETY-RELATED COMPONENT WARNING !!

COMPONENTS IDENTIFIED BY SHADING AND MARK  ON THE SCHEMATIC DIAGRAMS, EXPLODED VIEWS AND IN THE PARTS LIST ARE CRITICAL TO SAFE OPERATION. REPLACE THESE COMPONENTS WITH SONY PARTS WHOSE PART NUMBERS APPEAR AS SHOWN IN THIS MANUAL OR IN SUPPLEMENTS PUBLISHED BY SONY.

# SONY

---

# SERVICE MANUAL

**Selectivity:** 60 dB (400 kHz)  
 40 dB (300 kHz, S/N=26 dB, 40 kHz deviation)  
**Capture Ratio:** 1.0 dB  
**AM Suppression Ratio:** 54 dB  
**Image Response Ratio:** 45 dB  
**IF Response Ratio:** 90 dB  
**Spurious Response Ratio:** 75 dB  
**RF Intermodulation:** 60 dB  
**Muting Threshold:** Approx. 5  $\mu$ V

## SW/MW/LW SECTION

**Frequency Range:** SW: 5.8 – 15.8 MHz  
 MW: 530 – 1,605 kHz  
 LW: 150 – 350 kHz  
**Antenna:** SW/MW: External antenna terminal  
 Attached antenna wire  
 LW: Built-in Ferrite-rod antenna  
 External antenna terminal  
**Intermediate Frequency:** 468 kHz  
**Usable Sensitivity:** SW: 30  $\mu$ V (29.5 dB),  
 external antenna (10 MHz)  
 MW: 100  $\mu$ V (40 dB),  
 external antenna (1,000 kHz)  
 LW: 500  $\mu$ V/m (53.8 dB/m),  
 built-in antenna (250 kHz)  
 100  $\mu$ V (40 dB),  
 external antenna (250 kHz)  
**S/N Ratio:** SW/MW: 52 dB (5 mV)  
 LW: 52 dB (50 mV/m)  
**Harmonic Distortion:** SW/MW: 0.3 % (5 mV, 400 Hz)  
 LW: 0.3 % (50 mV/m, 400 Hz)  
**Selectivity:** 28 dB (9 kHz)  
 30 dB (10 kHz)

## AUDIO AMPLIFIER SECTION

**Continuous RMS Power Output:** Less than 0.3 % THD, both channels driven simultaneously  
 At 20 – 20,000 Hz  
 40 W + 40 W (8  $\Omega$ )  
 At 1 kHz  
 45 W + 45 W (8  $\Omega$ )  
 According to DIN 45500  
 40 W + 40 W (8  $\Omega$ )  
 40 W + 40 W (4  $\Omega$ )

**Dynamic Power Output:** IHF constant power supply method  
 130 W (8  $\Omega$ )  
**Power Bandwidth:** 10 – 40,000 Hz, IHF  
**Damping Factor:** 30 at 1 kHz (8  $\Omega$ )  
**Harmonic Distortion:** Less than 0.3 % at rated output (8  $\Omega$ )  
 Less than 0.7 % at rated output (4  $\Omega$ )  
 Less than 0.1 % at 1 W output  
**IM Distortion:** Less than 0.3 % at rated output  
 (60 Hz : 7 kHz = 4 : 1) Less than 0.1 % at 1 W output  
**Residual Noise:** Less than 0.08  $\mu$ W (at 8  $\Omega$ )  
**Frequency Response:** PHONO:  
 RIAA equalization curve  $\pm$  0.5 dB  
 TAPE:  
 10 – 50,000 Hz +1 dB  
 -3 dB

### Inputs:

	Sensitivity	Impedance	S/N	Weighting network
PHONO	2.5 mV (-50 dB)	50 k $\Omega$	80 dB	A
TAPE 1, 2	150 mV (-14.5 dB)	100 k $\Omega$	95 dB	A

Measured with rated output power into 8  $\Omega$  loads (both channels driven simultaneously) at 1 kHz.

### Outputs: (with rated input)

	Voltage	Impedance
REC OUT 1, 2	150 mV (-14.5 dB)	10 k $\Omega$

**Headphones:** Accepts all low or high impedance headphones

**Speaker:** 4 – 16  $\Omega$  speakers are suitable.

**Tone Controls:** BASS:  $\pm$  9 dB at 100 Hz  
 TREBLE:  $\pm$  7 dB at 10 kHz

**Loudness Control:** +8 dB at 100 Hz  
 (att. 30 dB) +3 dB at 10 kHz

**High Filter:** 6 dB/oct. above 7.5 kHz

## SECTION 1 OUTLINE

### 1-1. CIRCUIT DESCRIPTION (See Fig. 1)

#### Program Sensor

The FM or LW band can be changed automatically through the optical detection by the following procedures;

- 1 Set the FUNCTION switch (S1) to band selector position (center position).
- 2 Then, Set the band selector switch (S3) to PROGRAM SENSOR position.
- 3 Match the dial pointer to the desired station marker. (See Fig. 2)
- 4 The FM or LW band changes automatically.

#### 1) When the pointer matches only with the FM station marker:

- a) The light of IC301 (Photo Interrupter) is intercepted by the marker, bias voltage is applied to the base of Q303 through R305, and Q303 is turned on.
- b) The collector voltage of Q303 reduces and D203 is turned on.
- c) D203 is conducted, B+ voltage through R217 is decreased.
- d) D201 is opened, B+ voltage is not supplied to the terminal ②③ of IC201.
- e) FM circuit operates (The terminal ②③ of IC201 serves as a switch).

**Note:** When B+ voltage is applied to the terminal ②③ of IC201 through R217, R216 and D201, the receiver is in LW mode.

- f) At the same time, PL905 (FM indicator lamp) lights because of Q304 operating.

#### 2) When the pointer matches only with the LW station marker:

- a) As the light of IC301 is not intercepted, Q303 and D203 are turned off. As a result, B+ voltage is applied to the terminal ②③ of IC201 through R217 and R216. On the other hand, the light

of IC302 is intercepted by the LW station marker.

- b) Q306 and Q305 are turned on.
- c) B+ voltage is applied to L208 (LW oscillator coil).
- d) LW circuit operates. When Q305 is on, PL906 (LW indicator lamp) simultaneously lights.

#### 3) When the pointer matches simultaneously with both the FM and LW station markers:

- a) Q303 and Q304 are turned on by intercepting the light of IC301. On the other hand, the light of IC302 is also intercepted and the bias voltage is applied to the base of Q306, but because the collector voltage of Q304 is high, D304 is turned off. The emitter voltage of Q306 rises and B+ voltage is not applied to L208 (LW oscillator coil) and PL906. Consequently, only the FM station signal is received.

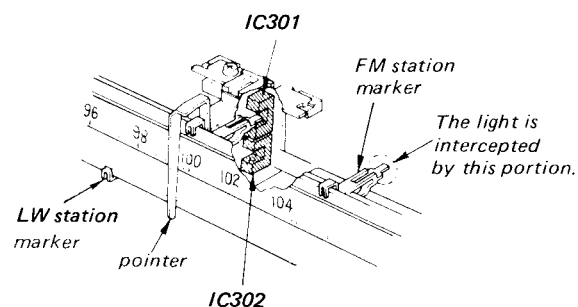


Fig. 2

#### Q302 and 301

Q302 operates to improve the rise time of PL905 (FM indicator lamp) or PL906 (LW indicator lamp) when tuning the receiver, and at the same time Q302 switches Q301. Q301 serves as a high-speed-muting switch which is turned on or off as soon as the station signal is tuned or detuned.

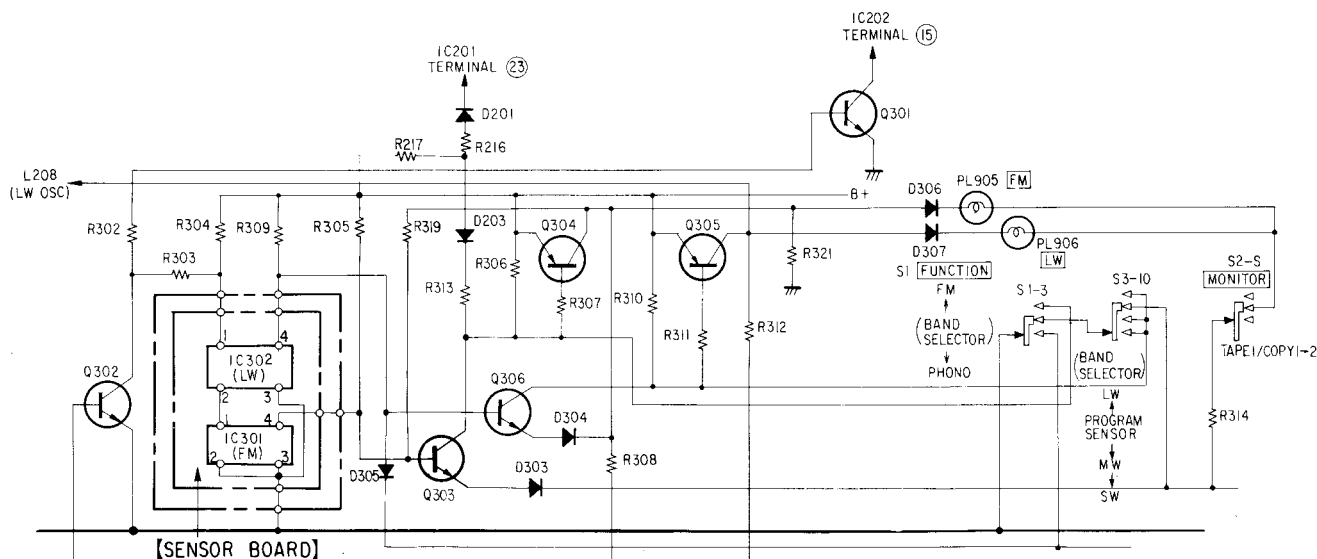


Fig. 1

## IC201 (CX168), IC202 (CX178)

These two ICs form a system. Both of them are bipolar-linear-ICs. CX168 integrates 343 elements and CX178 integrates 260 elements. They include many functions and are improved upon the degree of integration now available as a linear-ICs for tuner use. They have high performance in FM reception and form a muting system having an FM muting attenuation of 90dB. In addition, because a muting circuit is newly employed in the AM circuit not only is there high performance in FM reception but AM station signal can be received with fine tone quality and sensitivity as with FM broadcasting station. As an additional function, they operate for FM/AM continuous station selection, FM/AM signal-strength meter output, FM/AM muting output switching and enforced AGC at FM reception.

### CX168 Main Function

#### <FM>

- IF Amplifier
- Quadrature detector
- Signal-strength Meter Output
- Muting Signal Output
- AFC Output for Converter
- Multipath Signal Output
- Bandpass Control Circuit

#### <AM>

- RF Attenuator
- Mixer
- Oscillator
- IF Amplifier and AGC
- AM Detector
- Signal-Strength Meter Output
- Signal Generator for AM Muting

#### <General>

- Regulator
- FM/AM Switching
- Regulator Output

### CX178 Main Function

#### <FM Stereo Demodulator>

- FM Stereo Demodulator
- Phase Detector
- Stereo Indicating Circuit
- VCO
- VCO ON/OFF Circuit


#### <General>

- Muting Gate
- Regulator
- Muting Canceler Circuit
- Pop-noise Canceler
- Hysteresis Circuit


### Photo Interrupter (IC301, 302)

The terminals (1) and (2) of the photo interrupter operate as the light emitting diode. On the other hand, the terminals (3) and (4) operate as the photo detector. When the photo detector receives the light as shown in Fig. 3, the terminal between terminals (3) and (4) is a low-impedance. When light is intercepted by the marker, as shown in Fig. 4, it becomes high-impedance.

When the photo detector receives the light      When light is intercepted

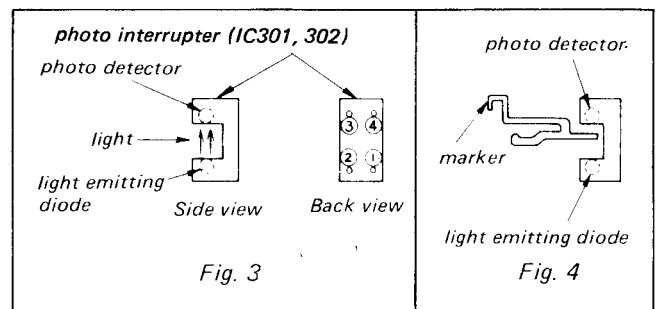






1-2. BLOCK DIAGRAM

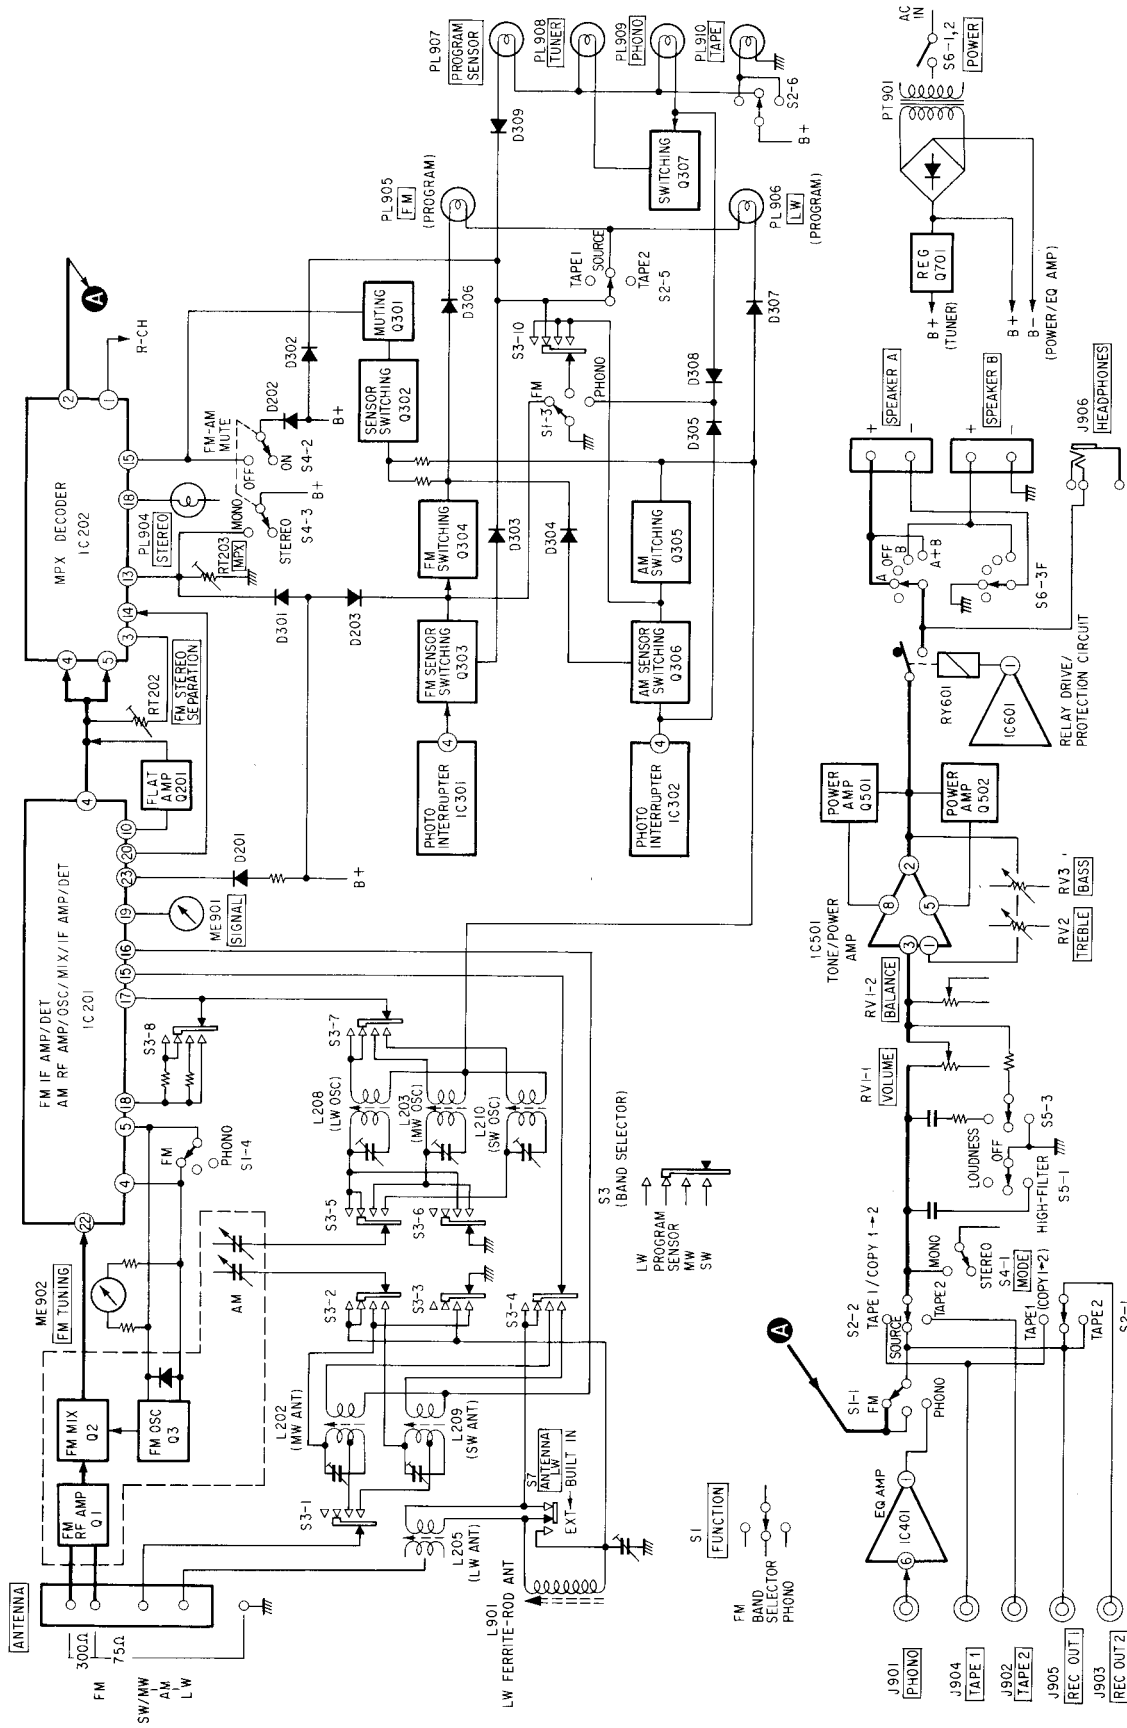


— R-CH SAME AS L-CH. —

**SECTION 2  
DISASSEMBLY**


- Follow the disassembly procedure in the numerical order given.

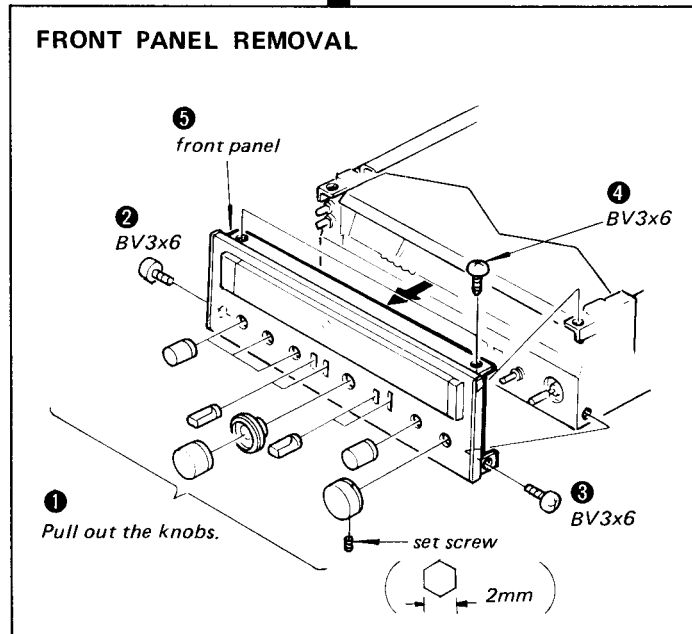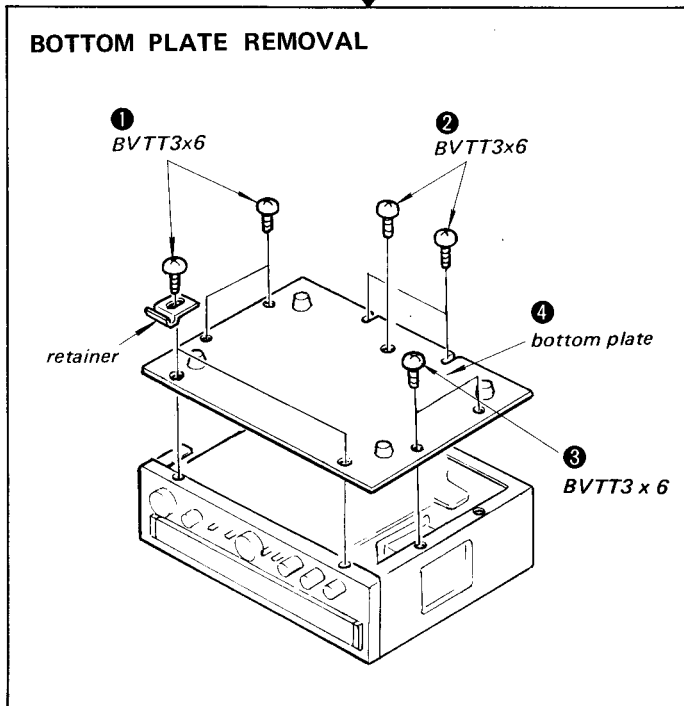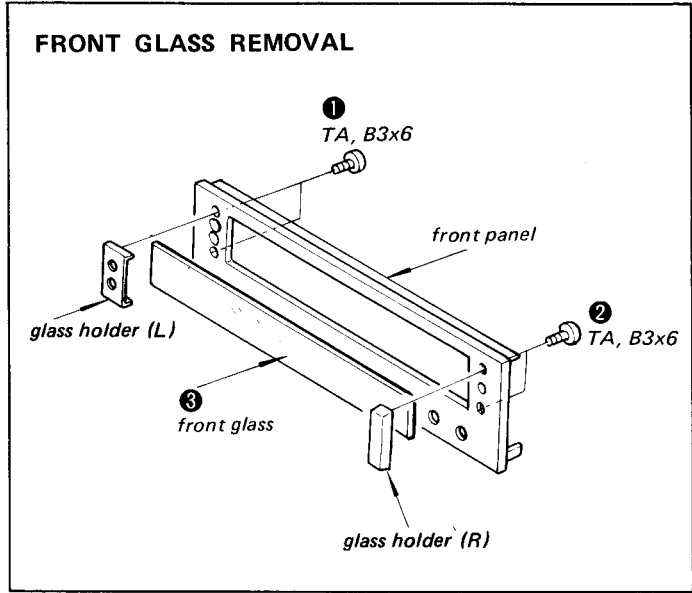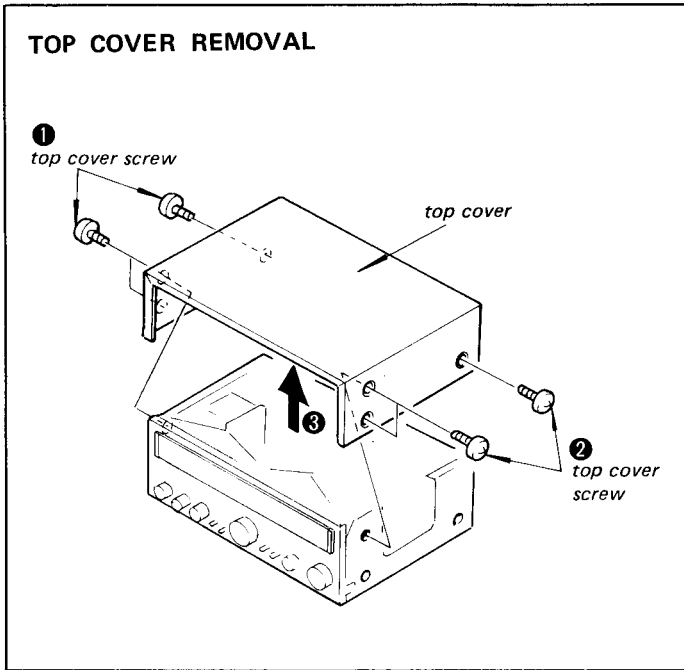


POWER TRANSISTOR (Q501, 502, 551, 552) REPLACEMENT (1)

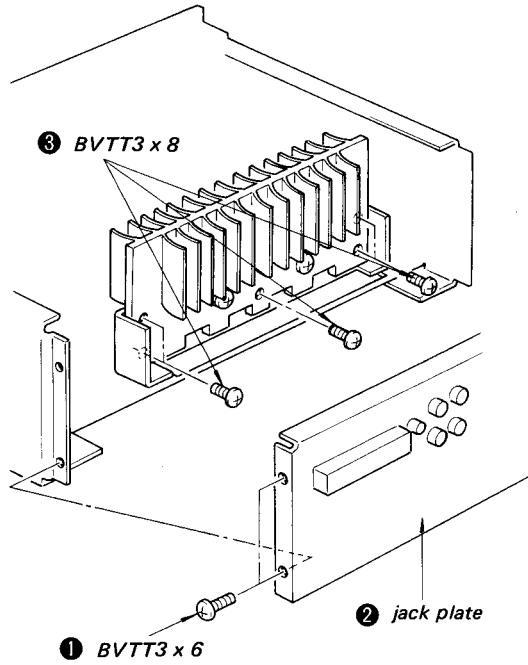


POWER TRANSISTOR (Q501, 502, 551, 552) REPLACEMENT (2)

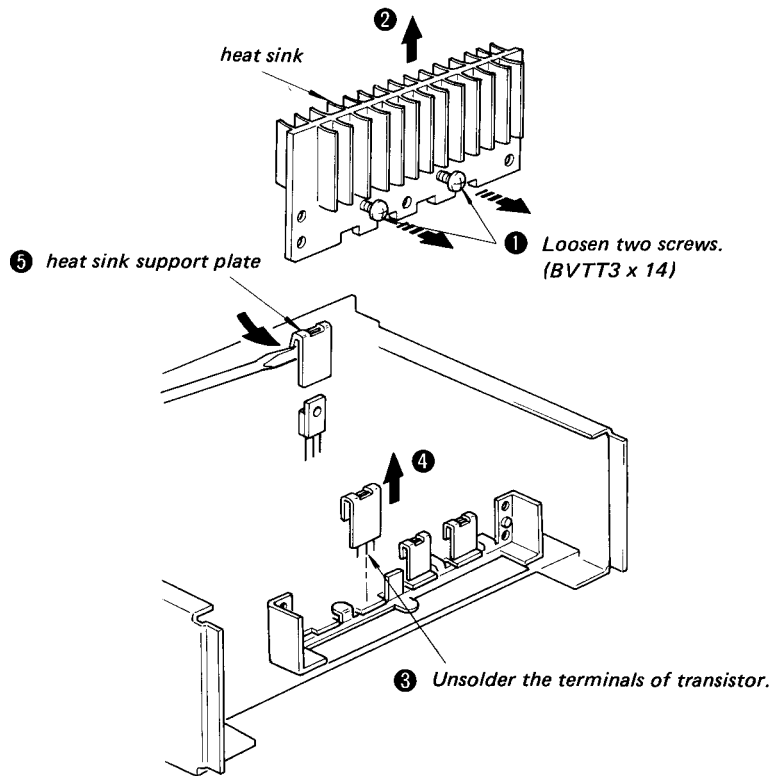




## DIAL CORD STRINGING

### 1) Preparation

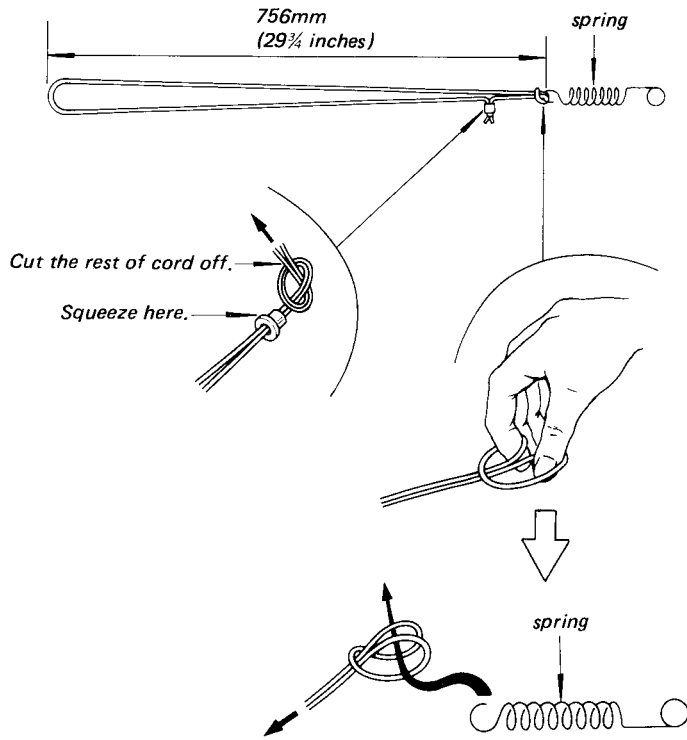

### 2) Stringing


Turn the tuning capacitor shaft fully clockwise and set the dial drum so that the slot is positioned as shown below.

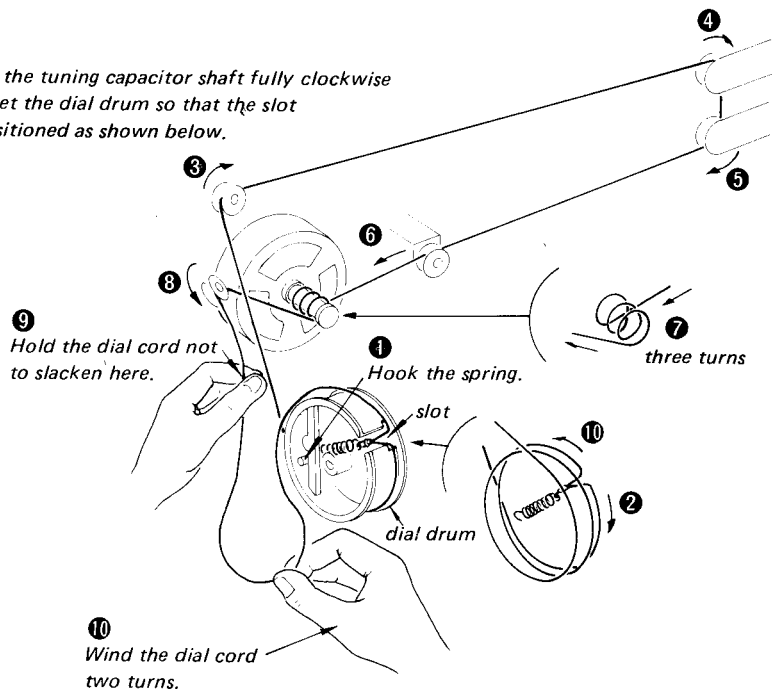

### 3) Dial Pointer Installation

Perform the mechanical-dial calibration by utilizing off-the-air local signals.

1 After dial calibration, string the dial cord while taking the dial pointer up.

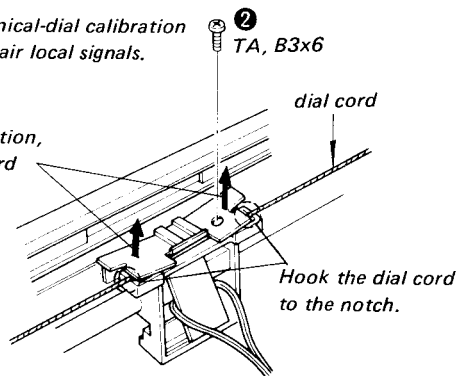



## SECTION 3 ELECTRICAL ADJUSTMENTS


### DC BIAS ADJUSTMENT

#### Setup:

1. Detune the set.
2. Perform this adjustment one minute or more after turning the power switch on.

#### Procedure:



1. Adjust RT501 (L-CH) and RT551 (R-CH) for a 9mV dc on the VOM.

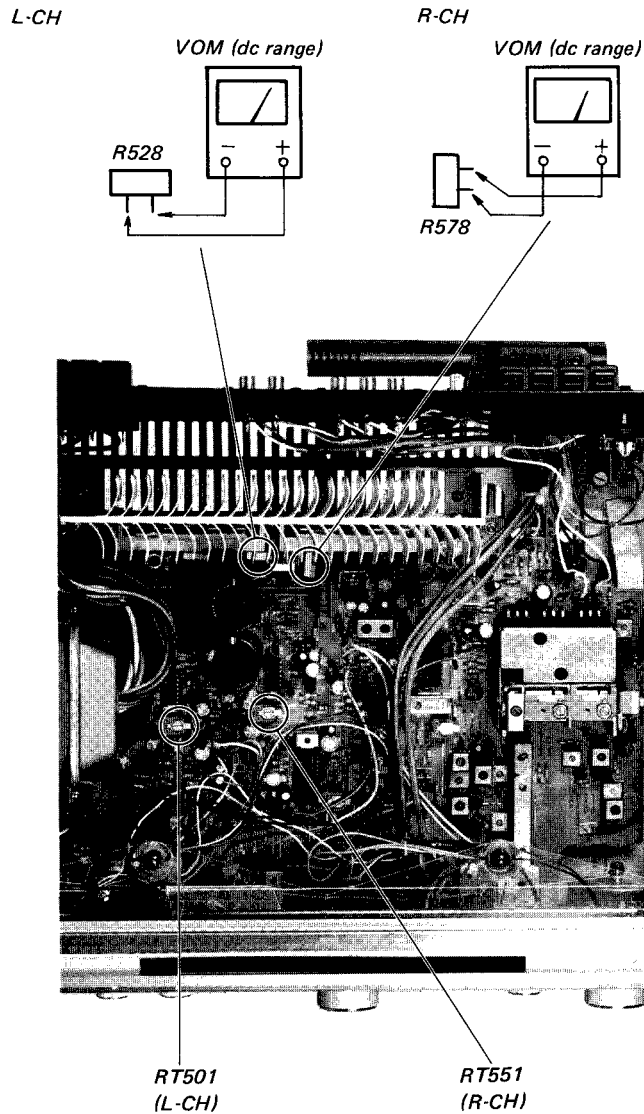


## SW, MW SECTION

Setting: FUNCTION switch: (Band Selector)  
 (Band Selector) : SW, MW

MW, SW

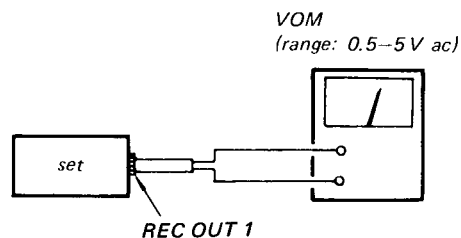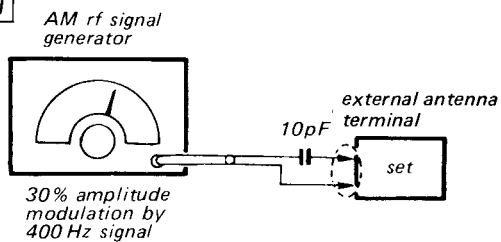

- Repeat the procedures in each adjustment several times, and the frequency coverage and tracking adjustments should be finally done by the trimmer capacitors.

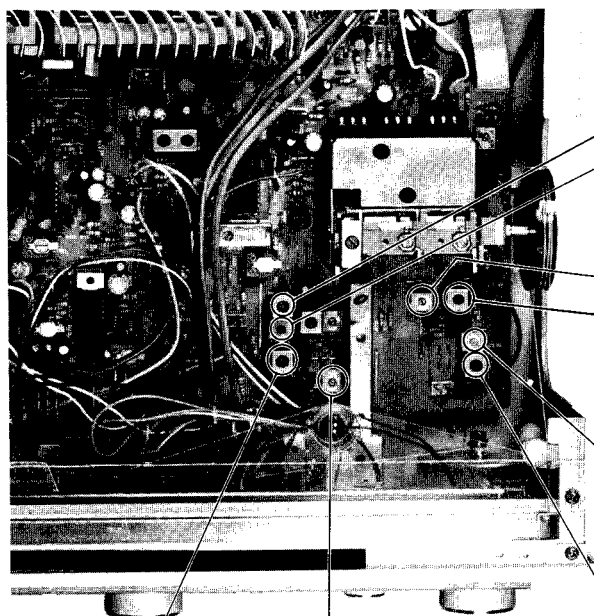

### MW FREQUENCY COVERAGE ADJUSTMENT

Adjust for a maximum reading on VOM.

L203	520 kHz
CT204	1680 kHz

### MW TRACKING ADJUSTMENT

Adjust for a maximum reading on VOM.



CT203	1400 kHz
L202	600 kHz

L210	CT206
5.5 MHz	16.1 MHz
Adjust for a maximum reading on VOM.	
<b>SW FREQUENCY COVERAGE ADJUSTMENT</b>	



L209	CT205
6 MHz	15 MHz
Adjust for a maximum reading on VOM.	
<b>SW TRACKING ADJUSTMENT</b>	

**LW SECTION**

Setting: FUNCTION switch: (Band Selector)  
 (Band Selector): LW  
 ANTENNA LW switch: BUILT IN

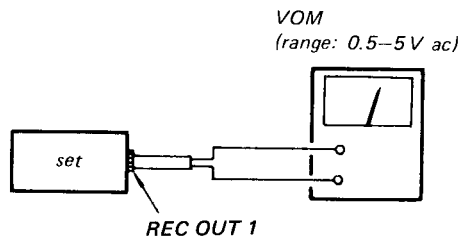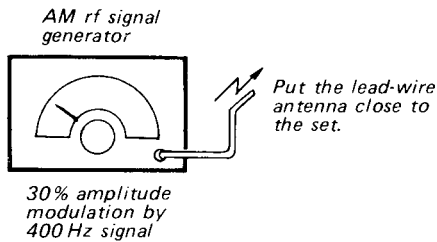

- Repeat the procedures in each adjustment several times, and the frequency coverage and tracking adjustments should be finally done by the trimmer capacitors.

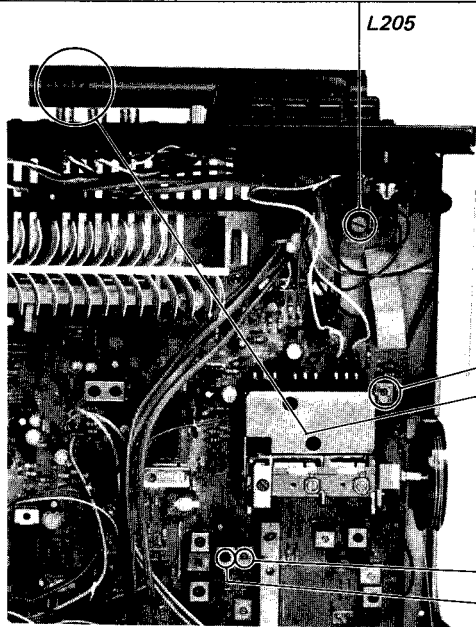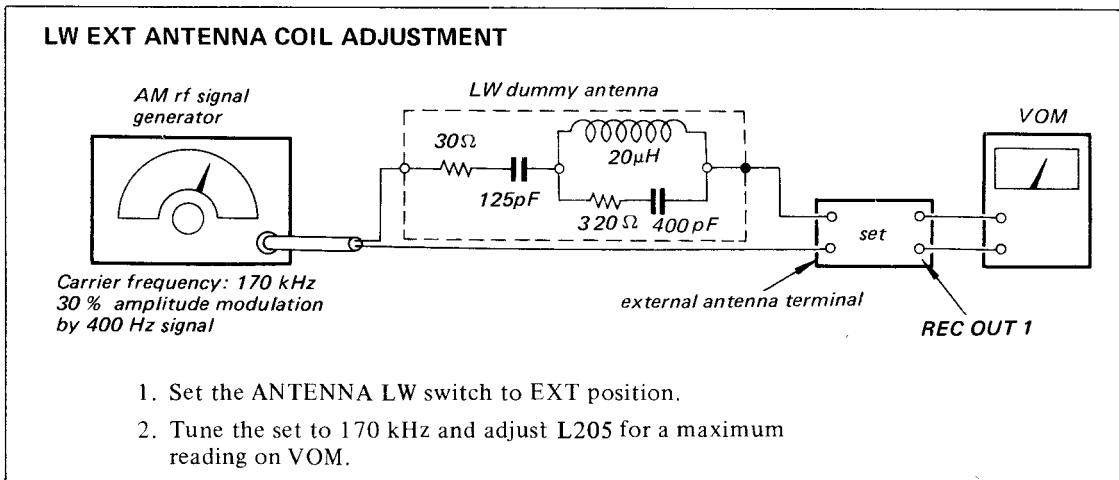

**LW TRACKING ADJUSTMENT**

Adjust for a maximum reading on VOM.

CT201	310 kHz
L901	170 kHz



**LW FREQUENCY COVERAGE ADJUSTMENT**

Adjust for a maximum reading on VOM.

CT202	365 kHz
L208	145 kHz

## FM SECTION


Setting: FUNCTION switch: FM

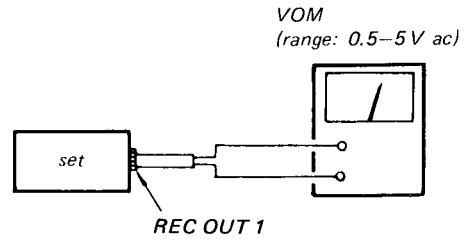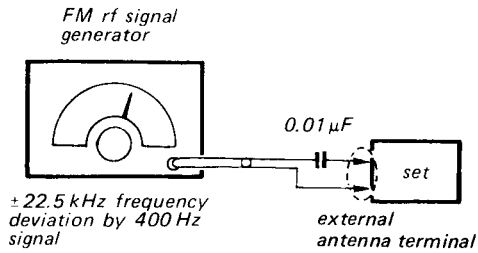

- Repeat the procedures in each adjustment several times, and the frequency coverage and tracking adjustments should be finally done by the trimmer capacitors.

FM FREQUENCY COVERAGE ADJUSTMENT	
Adjust for a maximum reading on VOM.	
87.1 MHz (87.5 MHz)	L3
108.5 MHz (108 MHz)	CT3

( ) : in West Germany

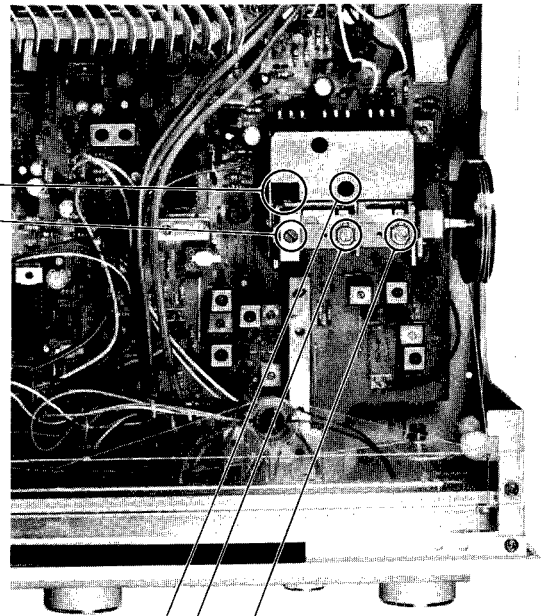


87.1 MHz (87.5 MHz)	L2
108.5 MHz (108 MHz)	CT2
	CT1
Adjust for a maximum reading on VOM.	
FM TRACKING ADJUSTMENT	

( ) : in West Germany

**FM DISCRIMINATOR ALIGNMENT 2**

**Procedure:**

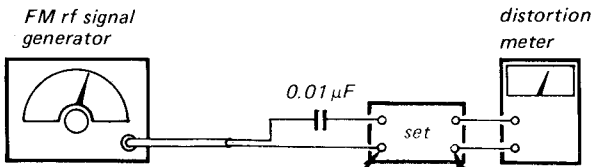

Carrier frequency: 98 MHz  
 Output level: 1mV (60 dB)  
 Modulation: 400 Hz, 75 kHz deviation (100%)


1. Set MODE switch to MONO.
2. Turn the core (secondary side) of IFT201 for a minimum distortion reading on the distortion meter.

IFT201  
 (secondary side: black)

**FM DISCRIMINATOR ALIGNMENT 1**


**Procedure:**

1. Detune the set.
2. Turn the core (primary side) of IFT201 for null-point reading on the FM TUNING meter.

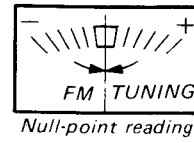

IFT201  
 (primary side: blue)

**FM IF ALIGNMENT**

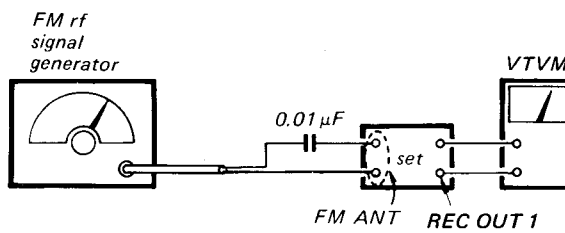

**FM Signal Generator Setting:**

Carrier frequency: 98 MHz  
 Modulation: 400 Hz, 75 kHz deviation (100%)  
 Output level: 12 μV (21.5dB)


**Procedure:**

Tune the set to 98 MHz and adjust IFT1 for a maximum reading on the VTVM.

IFT1

**FM STEREO SEPARATION ADJUSTMENT**

**Procedure:**

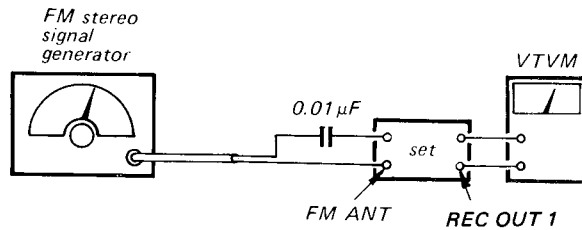

Carrier frequency: 98 MHz  
 Output level: 1 mV (60 dB)  
 Mode: Stereo  
 Modulation:  
 Audio (400 Hz): 67.5 kHz deviation (90%)  
 Pilot (19 kHz): 7.5 kHz deviation (10%)

MODE switch: STEREO


FM stereo signal generator output channel	VTVM connection	VTVM reading
L-CH	L-CH	(A)
R-CH	L-CH	(B) Adjust RT202 for minimum reading.
R-CH	R-CH	(C)
L-CH	R-CH	(D) Adjust RT202 for minimum reading.

L-CH Stereo separation: (A) - (B)  
 R-CH Stereo separation: (C) - (D)

The separations of both channels should be equal.

RT202


RT203

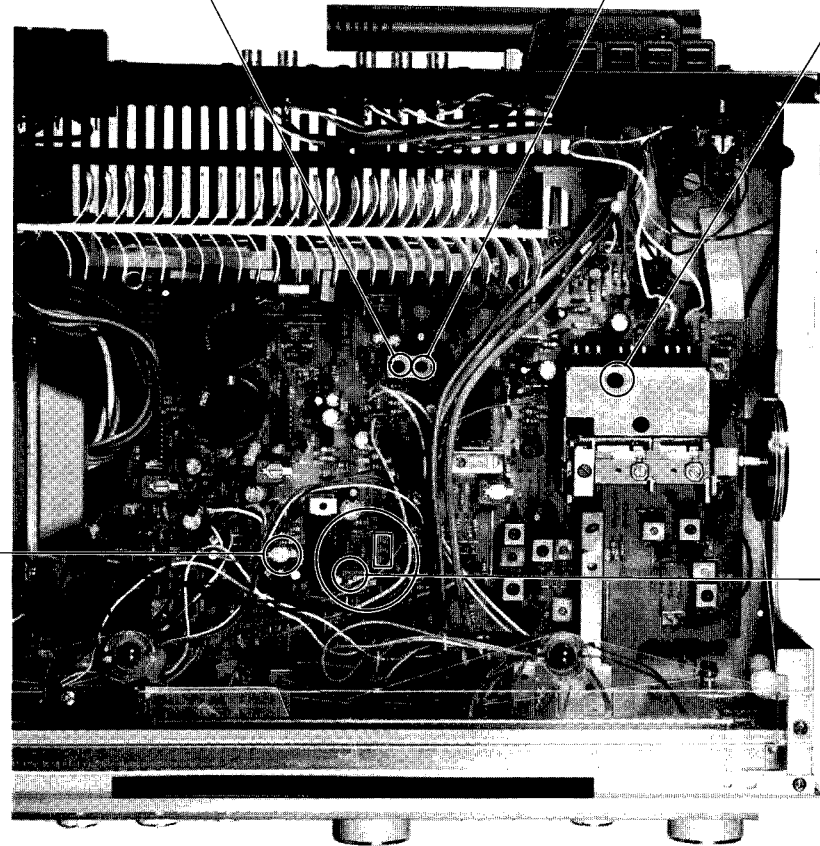

**MPX ADJUSTMENT**

**A) Regular Method**

**Procedure:**


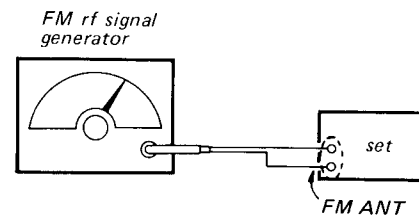


Carrier frequency: 98 MHz  
 Modulation: no modulation  
 Output level: 1 mV (60 dB)

**B) Simple Method**

**Procedure:**

1. Tune the set to the FM stereo broadcasting signal.
2. Turn RT203 clockwise or counterclockwise and memorize the lighting-up range of STEREO lamp.
3. Secure RT203 at the center in lighting-up range of both turns as shown below.

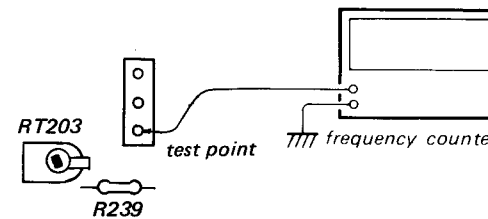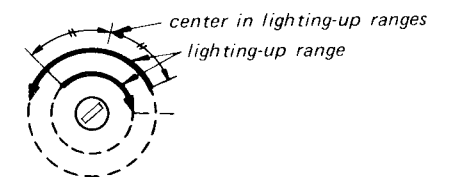


1. Tune the set to 98 MHz.
2. Adjust RT203 for 76 kHz ±100Hz on the counter.

**FM DISCRIMINATOR ALIGNMENT 1**


Procedure:

1. Detune the set.
2. Turn the core (primary side) of IFT201 for null-point reading on the FM TUNING meter.

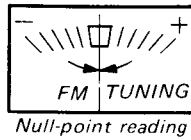

IFT201  
(primary side: blue)

**FM IF ALIGNMENT**

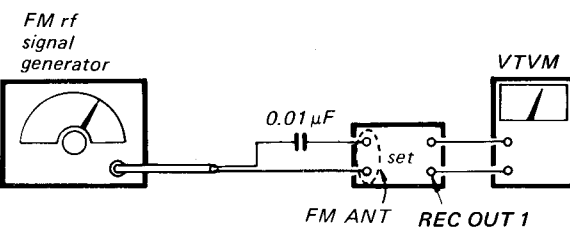

**FM Signal Generator Setting:**

- Carrier frequency: 98 MHz
- Modulation: 400 Hz, 75 kHz deviation (100%)
- Output level: 12 μV (21.5dB)


Procedure:

1. Tune the set to 98 MHz and adjust IFT1 for a maximum reading on the VTVM.

**MPX ADJUSTMENT**

**A) Regular Method**

Procedure:


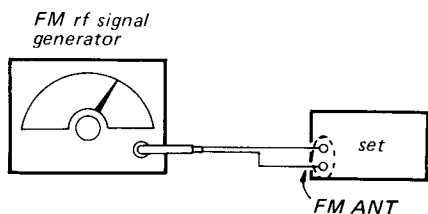


- Carrier frequency: 98 MHz
- Modulation: no modulation
- Output level: 1 mV (60 dB)

**B) Simple Method**



Procedure:

1. Tune the set to the FM stereo broadcasting signal.
2. Turn RT203 clockwise or counterclockwise and memorize the lighting-up range of STEREO lamp.
3. Secure RT203 at the center in lighting-up range of both turns as shown below.

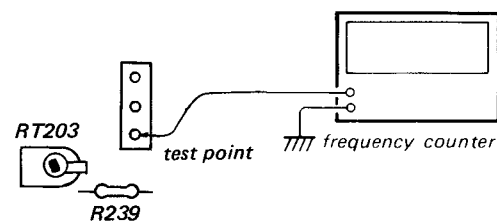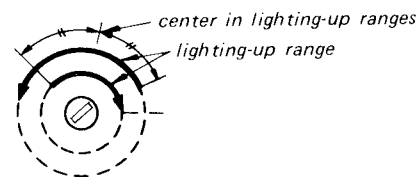


1. Tune the set to 98 MHz.
2. Adjust RT203 for 76 kHz ±100Hz on the counter.


• IC Block Diagrams

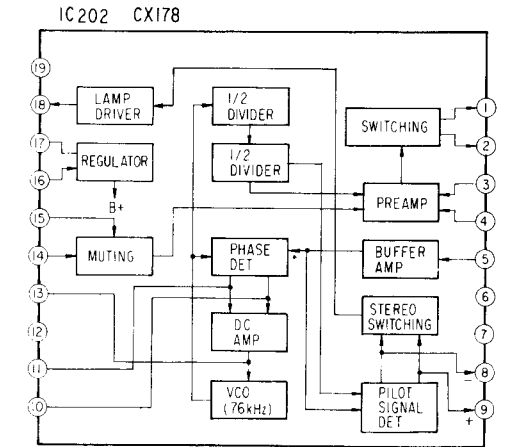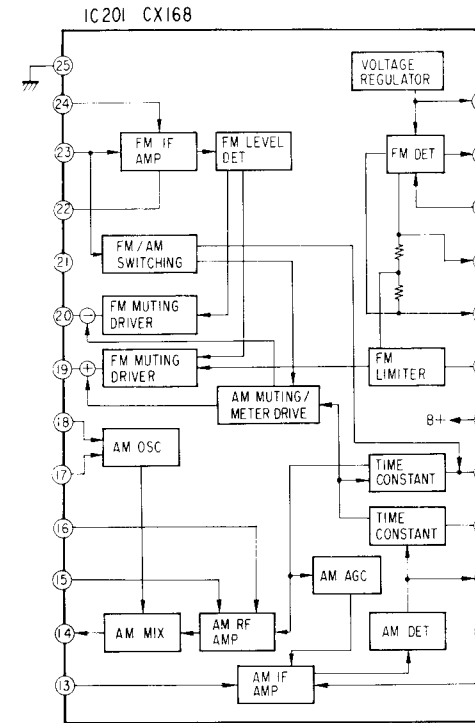



**IC601 HAI2002**

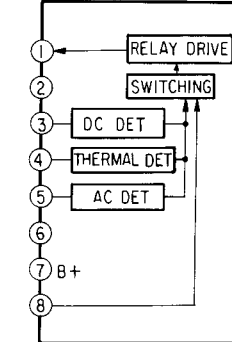

**IC401, 451 HAI457**

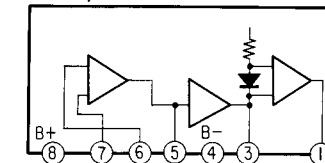

**IC501, 551 CX171**

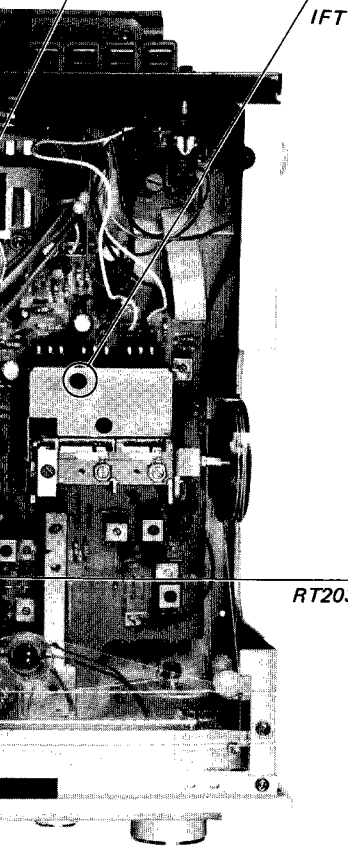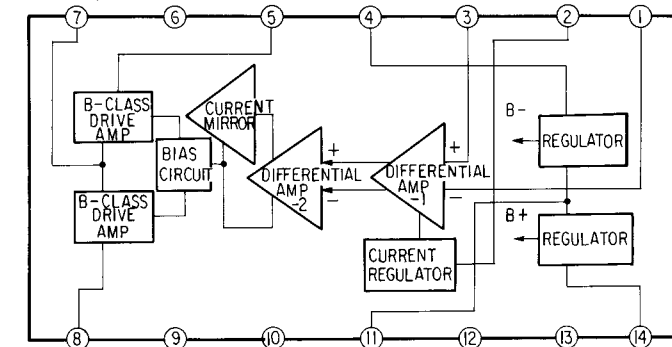


SECTION 4  
DIAGRAMS

4-1. MOUNTING DIAGRAM  
— Conductor Side —


- IC Block Diagram: See page 15.
- Replacement Semiconductors  
For replacement, use semiconductors except in ( ).

IC201: CX168

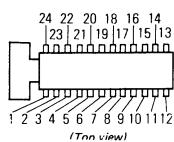

Q201

Q301-303 : 2SC1364 (2SC945)  
Q306, 307

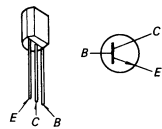

D201-203


D301-309 : 1S1555

D502, 504, 506-511


D552, 554, 556-561

D602

D501, 551 : 1T22AM (1T22A)  
D503, 505 : 1S2076A  
D553, 555




IC202: CX178

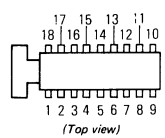


Q304, 305: 2SA678

(2SA844)

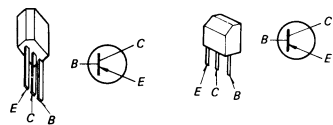

D601: 10E2


(RA12)

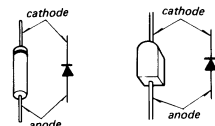

IC301, 302: SPI201




Q501, 551: 2SA771

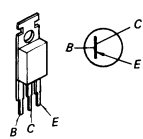


D701-704: 10E2

(SIB01-02)

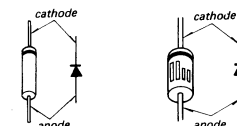


IC401, 451: HA1457

IC601: HA12002




Q502, 552: 2SC1986C (2SC1986)

Q701: 2SC1173

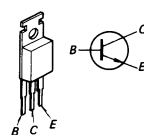


D705, 706: EQB01-22 (EQA01-22R)

D707: EQB01-16 (EQA01-16R)




IC501, 551: CX171

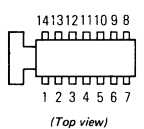

Note: Voltages of IC202.


TERMINAL No.	FM no mark	FM STEREO	FM MUTING ON	AM MUTING ON	TERMINAL No.	FM no mark	FM STEREO	FM MUTING ON	AM MUTING ON
1	7.8V	7.8V	7.8V	7.8V	10	2.8V	2.8V	2.8V	2.8V
2	7.7V	7.7V	7.7V	7.7V	11	2.8V	2.8V	2.8V	2.8V
3	4V	4V	4V	4V	12	0V	0V	0V	0V
4	4V	4V	4V	4V	13	4.8V	2.6V	2.6V	6.8V
5	4V	4V	4V	4V	14	0.05V	5V	1V	0.05V
6	0V	0V	0V	0V	15	13V	2.1V	0.04V	0.04V
7	0V	0V	0V	0V	16	12.5V	12.5V	13.5V	13.5V
8	2.8V	2.75V	2.8V	2.8V	17	4V	4V	4V	4V
9	2.8V	2.75V	2.8V	2.8V	18	15.5V	0.25V	15.5V	15.5V


- [Symbol] : indicates side identified with part number.
- [Symbol] : part mounted on the conductor side.
- Color code of sleeving over the end of the jacket.

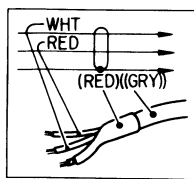

- [Symbol] : B+ pattern.
- [Symbol] : B- pattern.
- Signal Path  
---> : L-CH  
---> : R-CH

Q, IC	D
552, 551 502, 501	
IC451, IC401	705
	702, 701 704, 703 707 706
701	602
	561, 560
IC201	552 556, 555 553
	511, 510 506, 502 505, 503
IC551 IC501	551
	201
	559
	201
	509
IC202	501
	301 554
	504 507 557 558, 508
	601
302, 303 306, 305	304
	301
	303
	306, 307
	305
IC601	308 302
	202
IC301	
IC302	309
	307

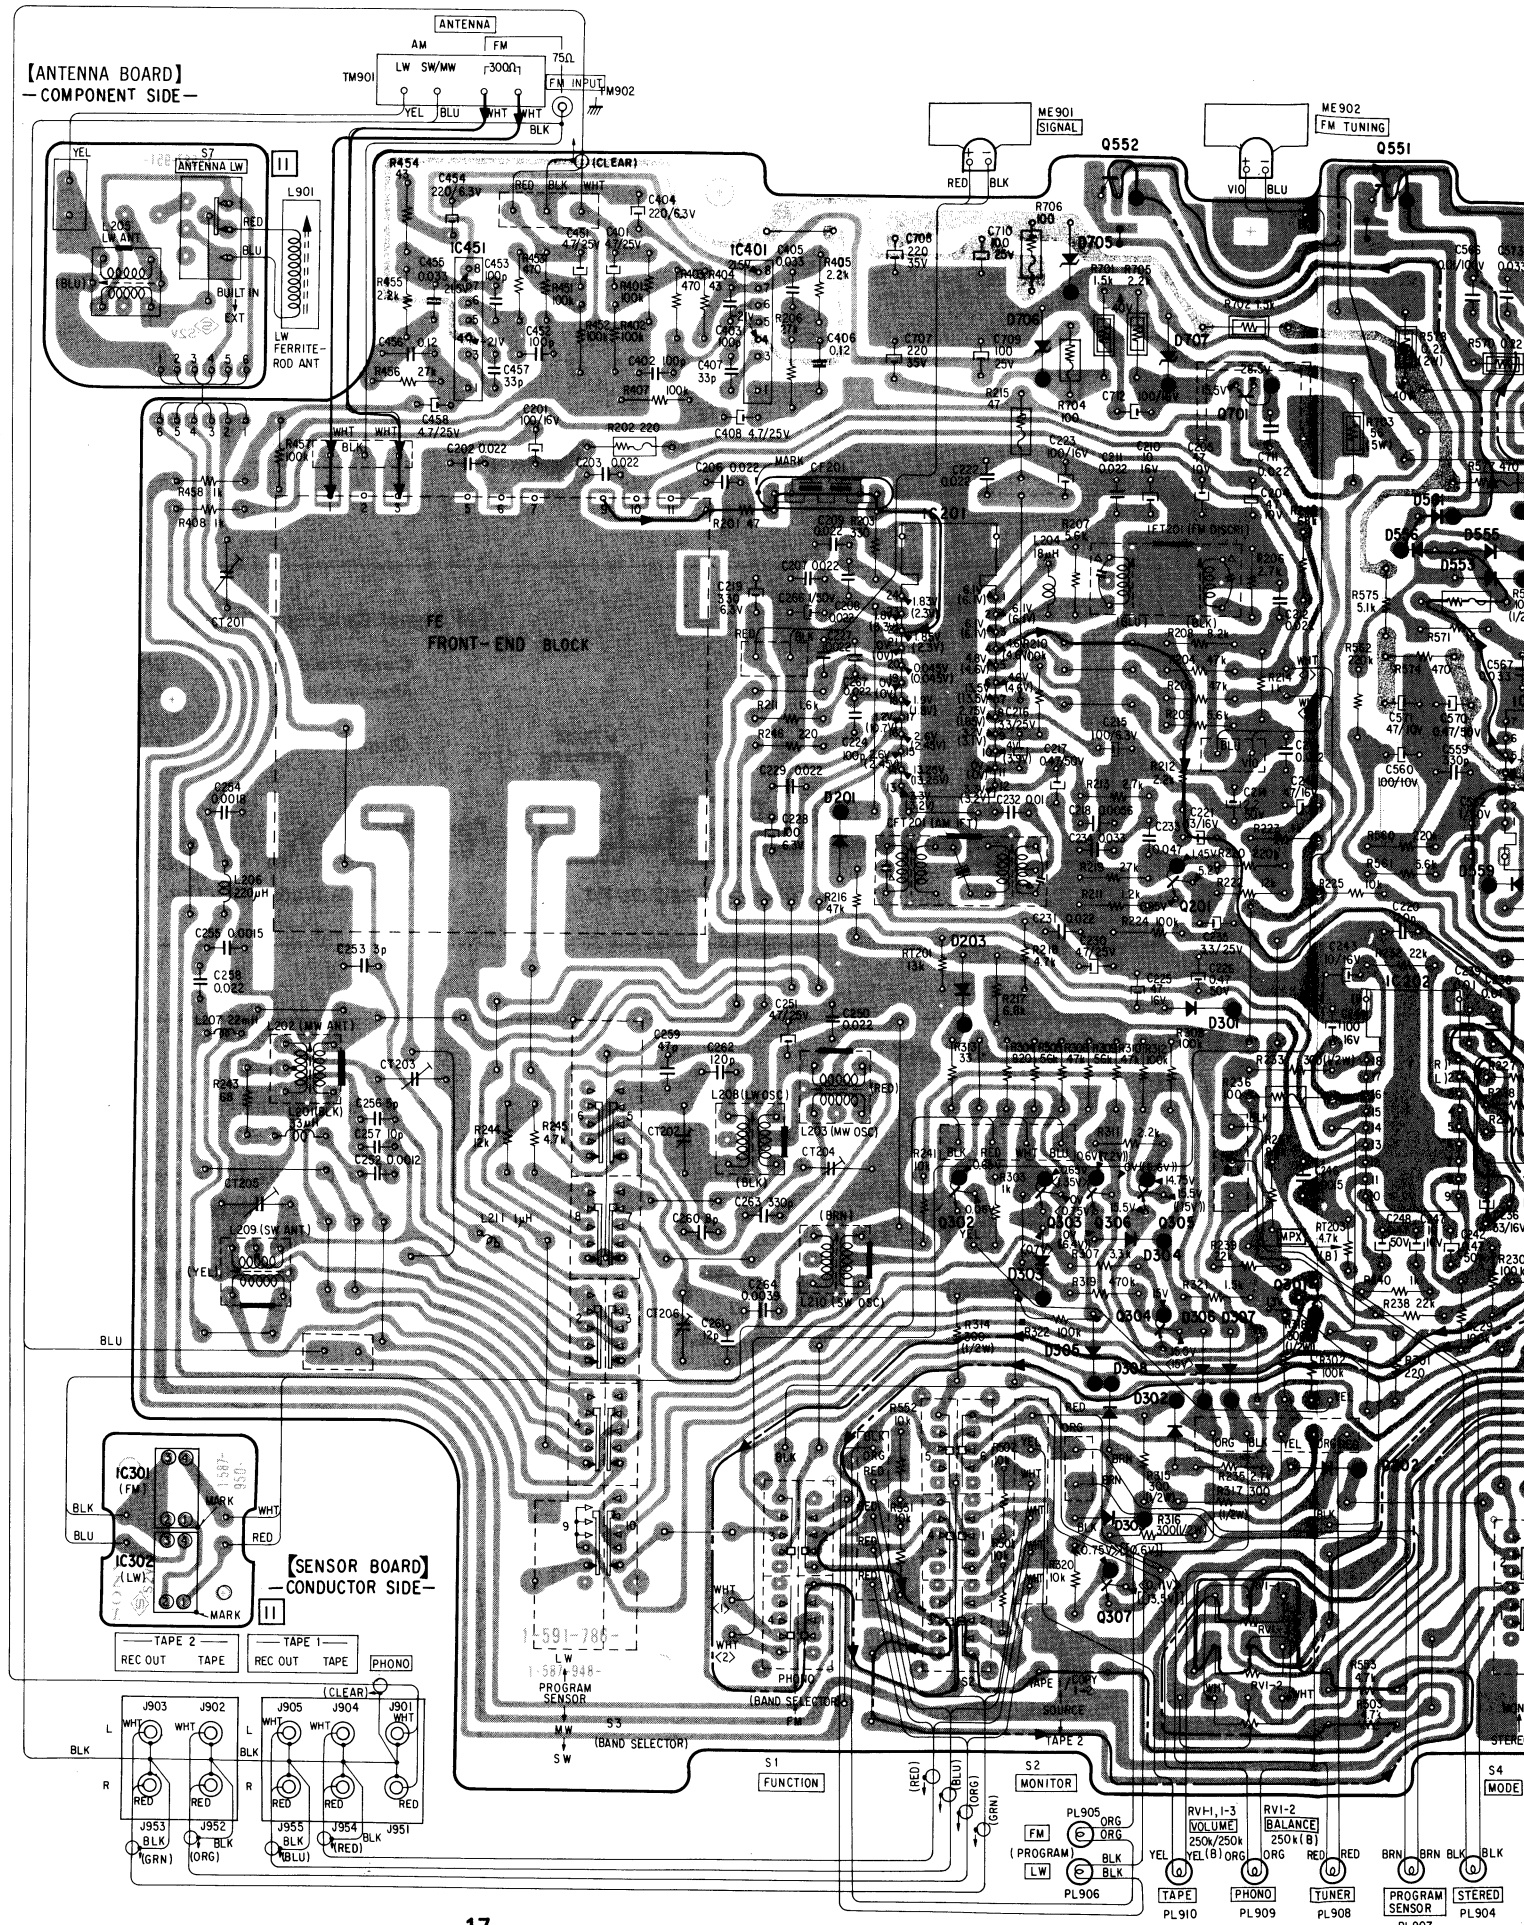


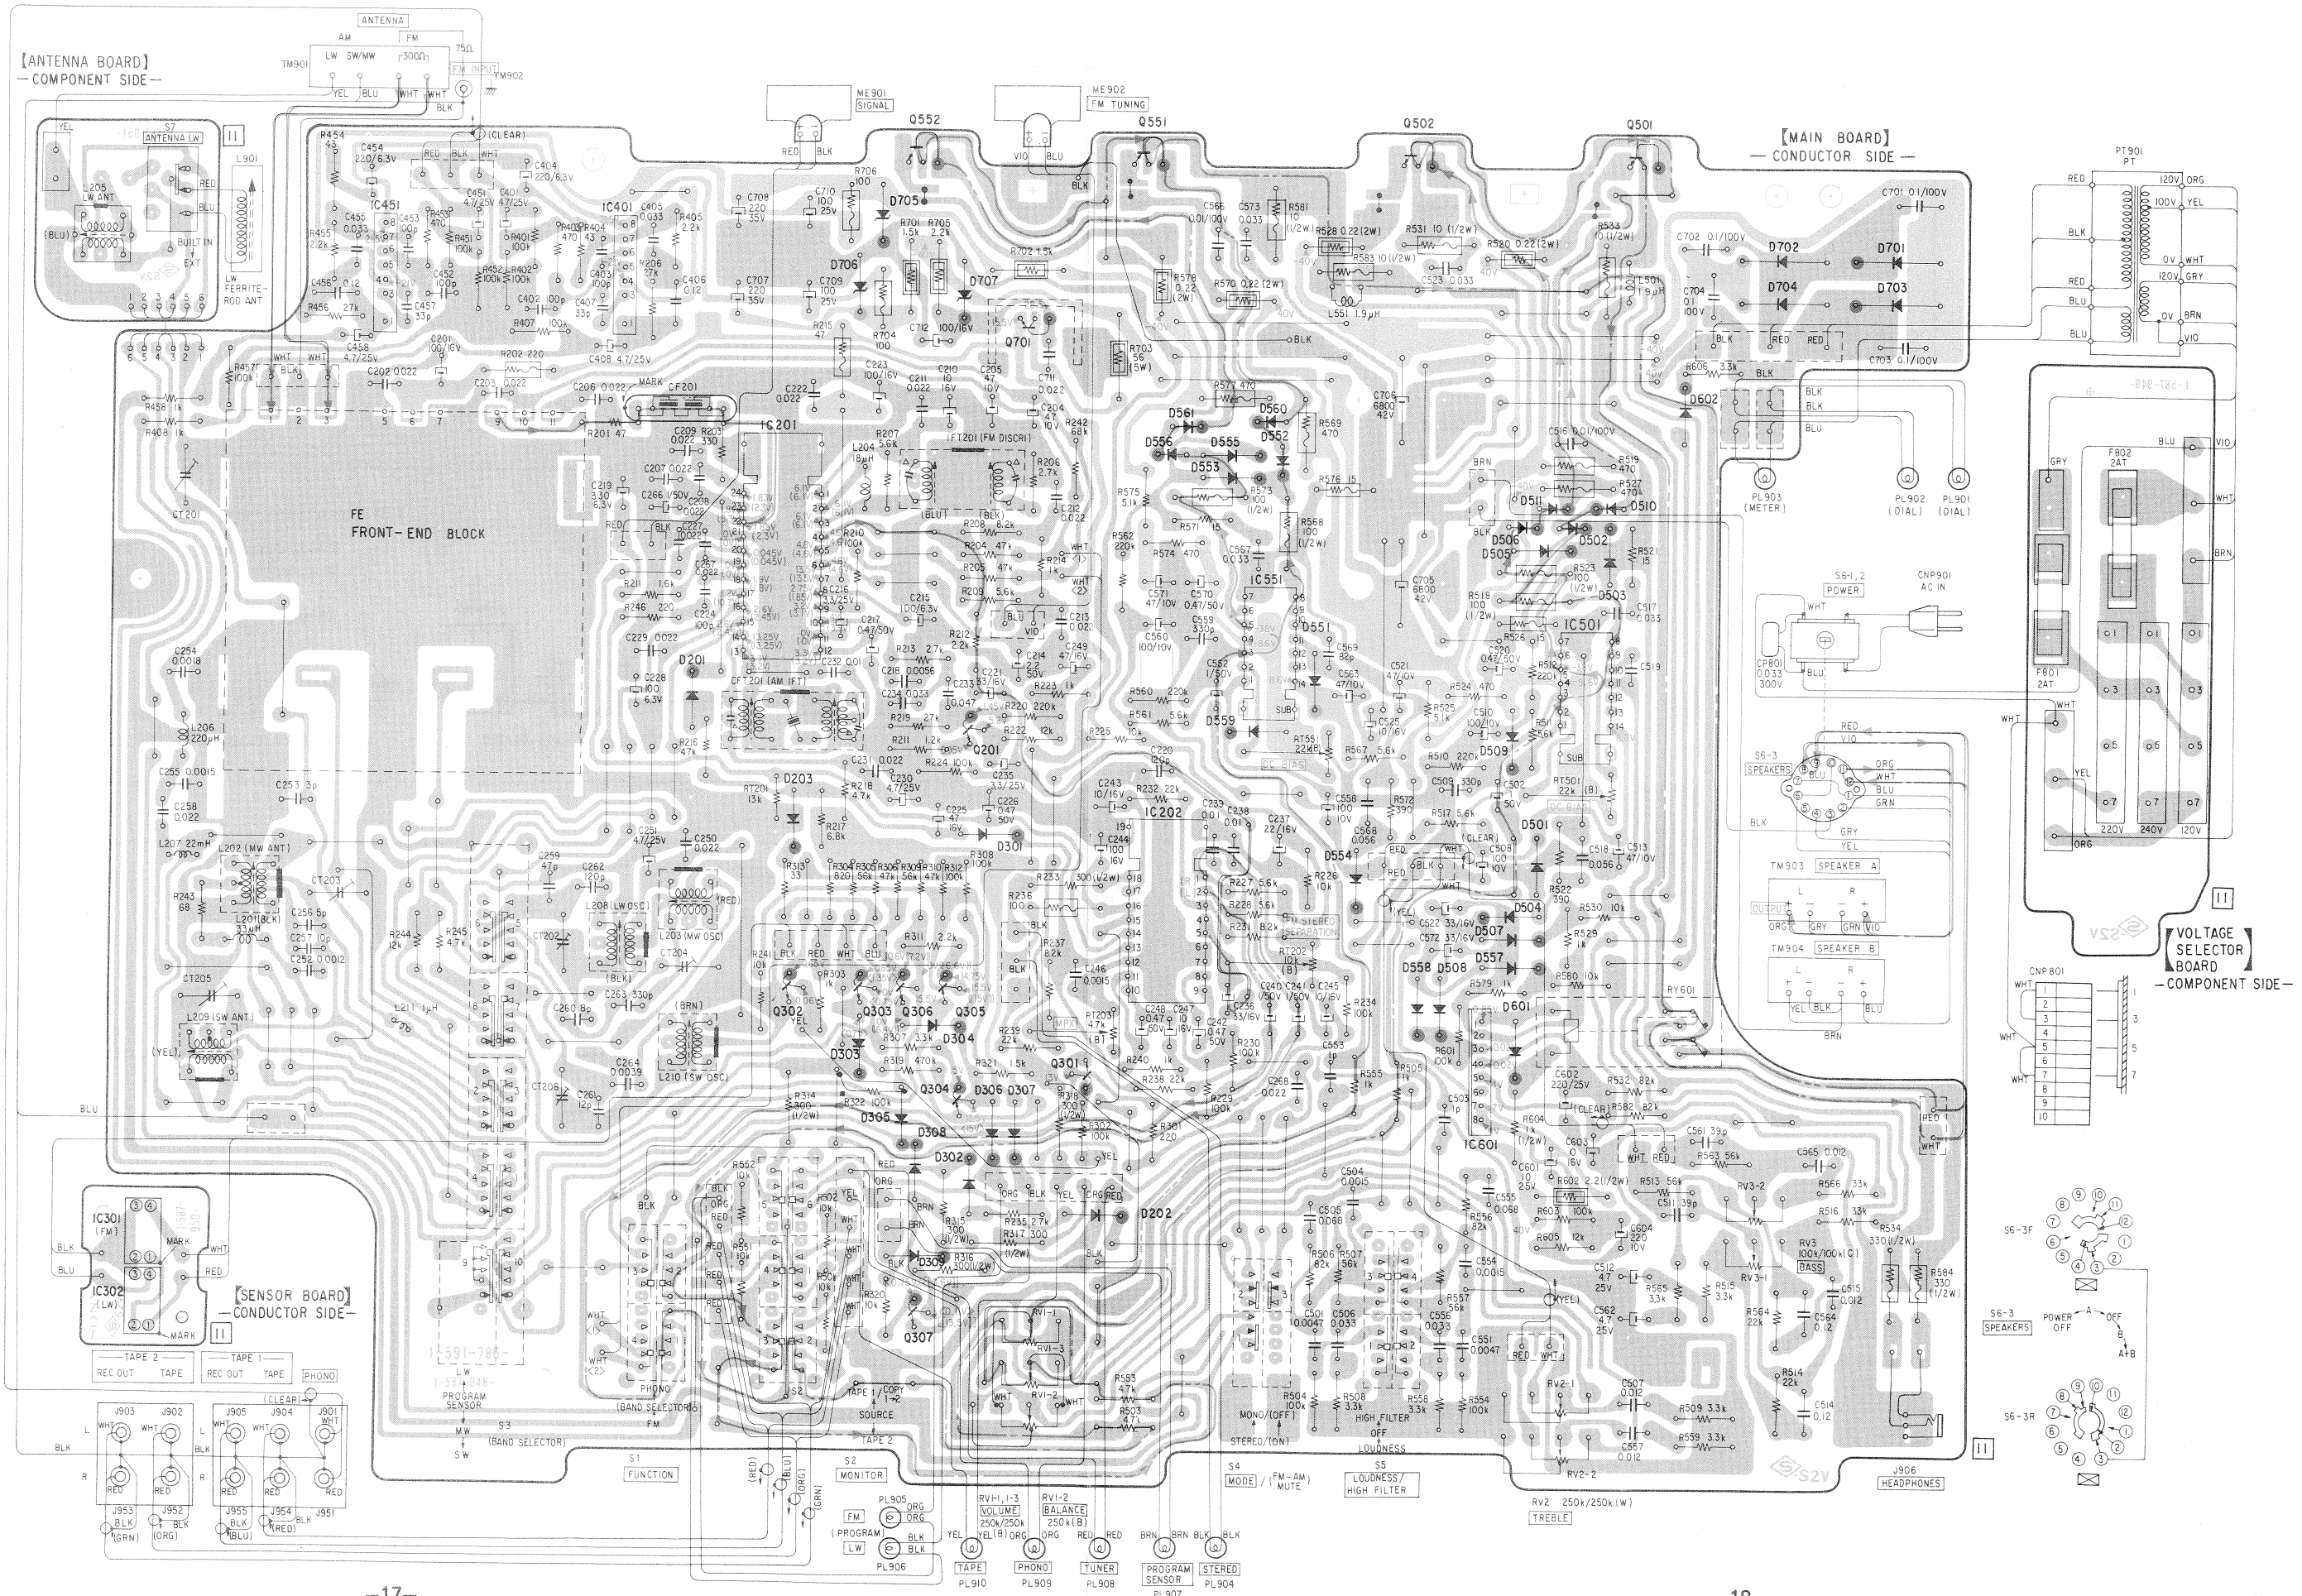


Q, IC	D
552, 551 502, 501	705
IC451, IC401	702, 701 704, 703 707 706
701	602
IC201	561, 560 552 556, 555 553
IC501	511, 510 506, 502 505, 503
IC501	551
201	
559	
201	509
203	
IC202	501 301 554
504 507 557 558, 508	
601	
302, 303 306, 305	304
301	
303 306, 307	305
IC601	308 302
202	
IC301	
IC302	309
307	



4-2. SCHEMATIC DIAGRAM

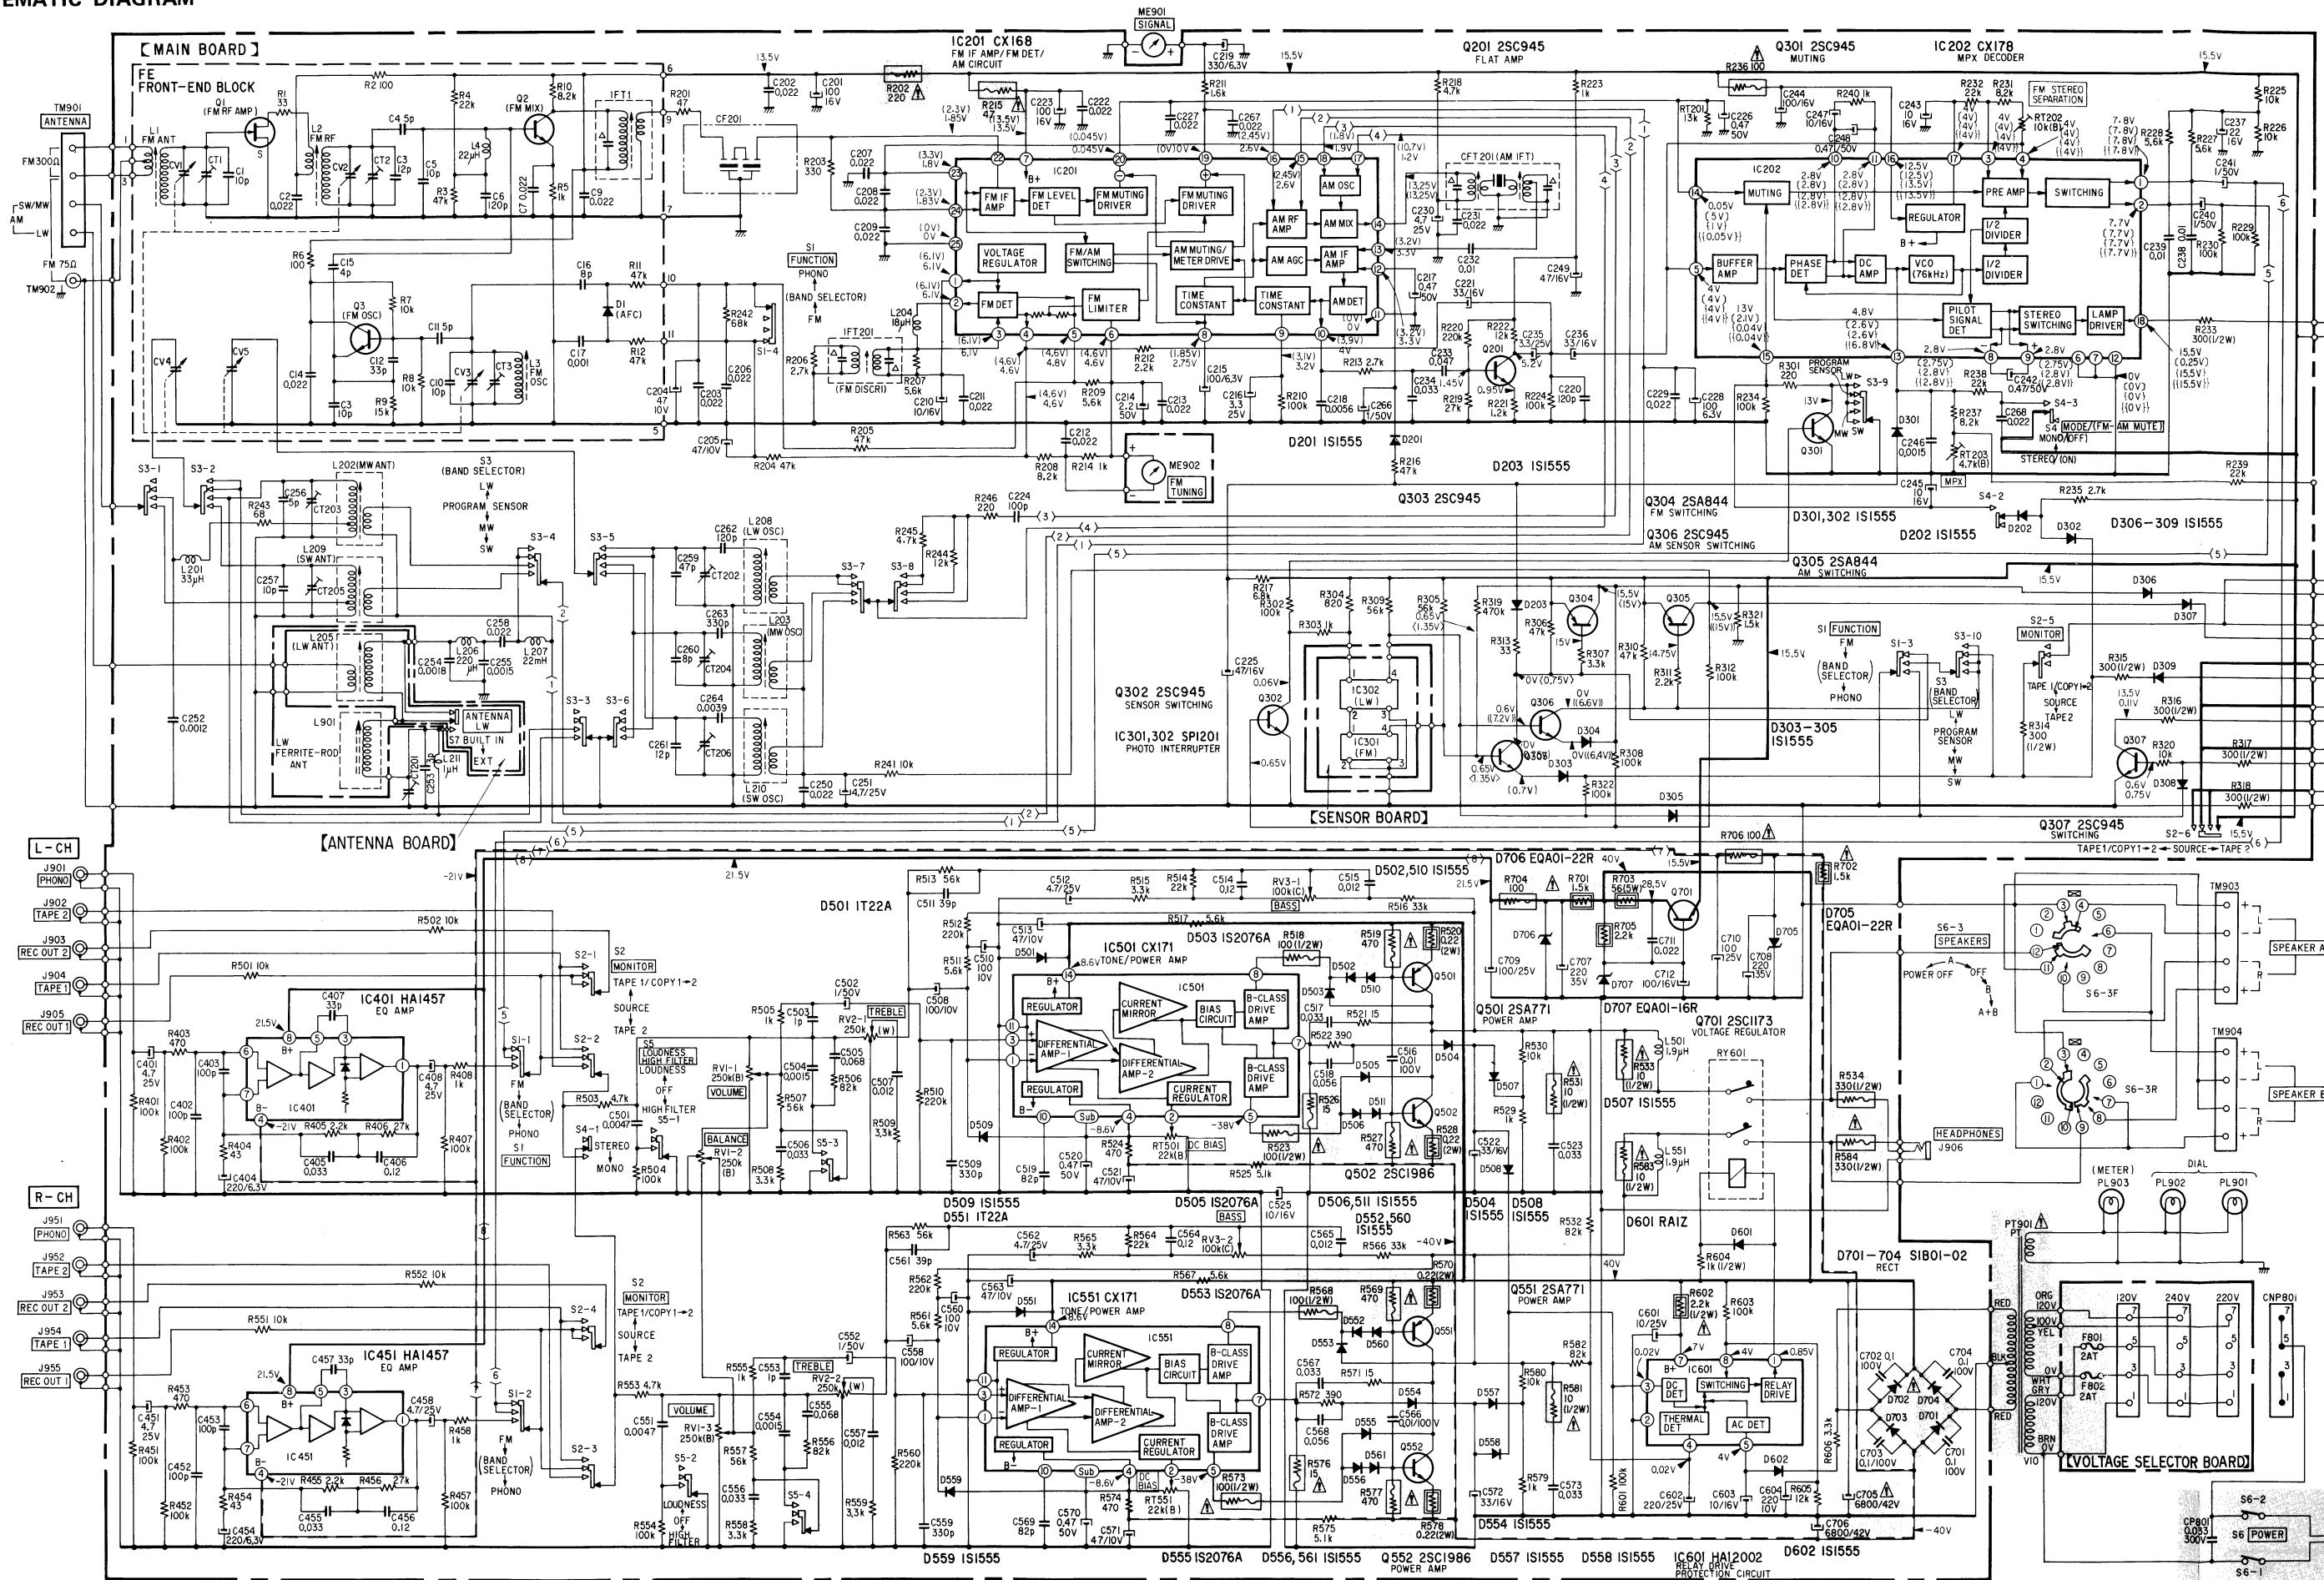

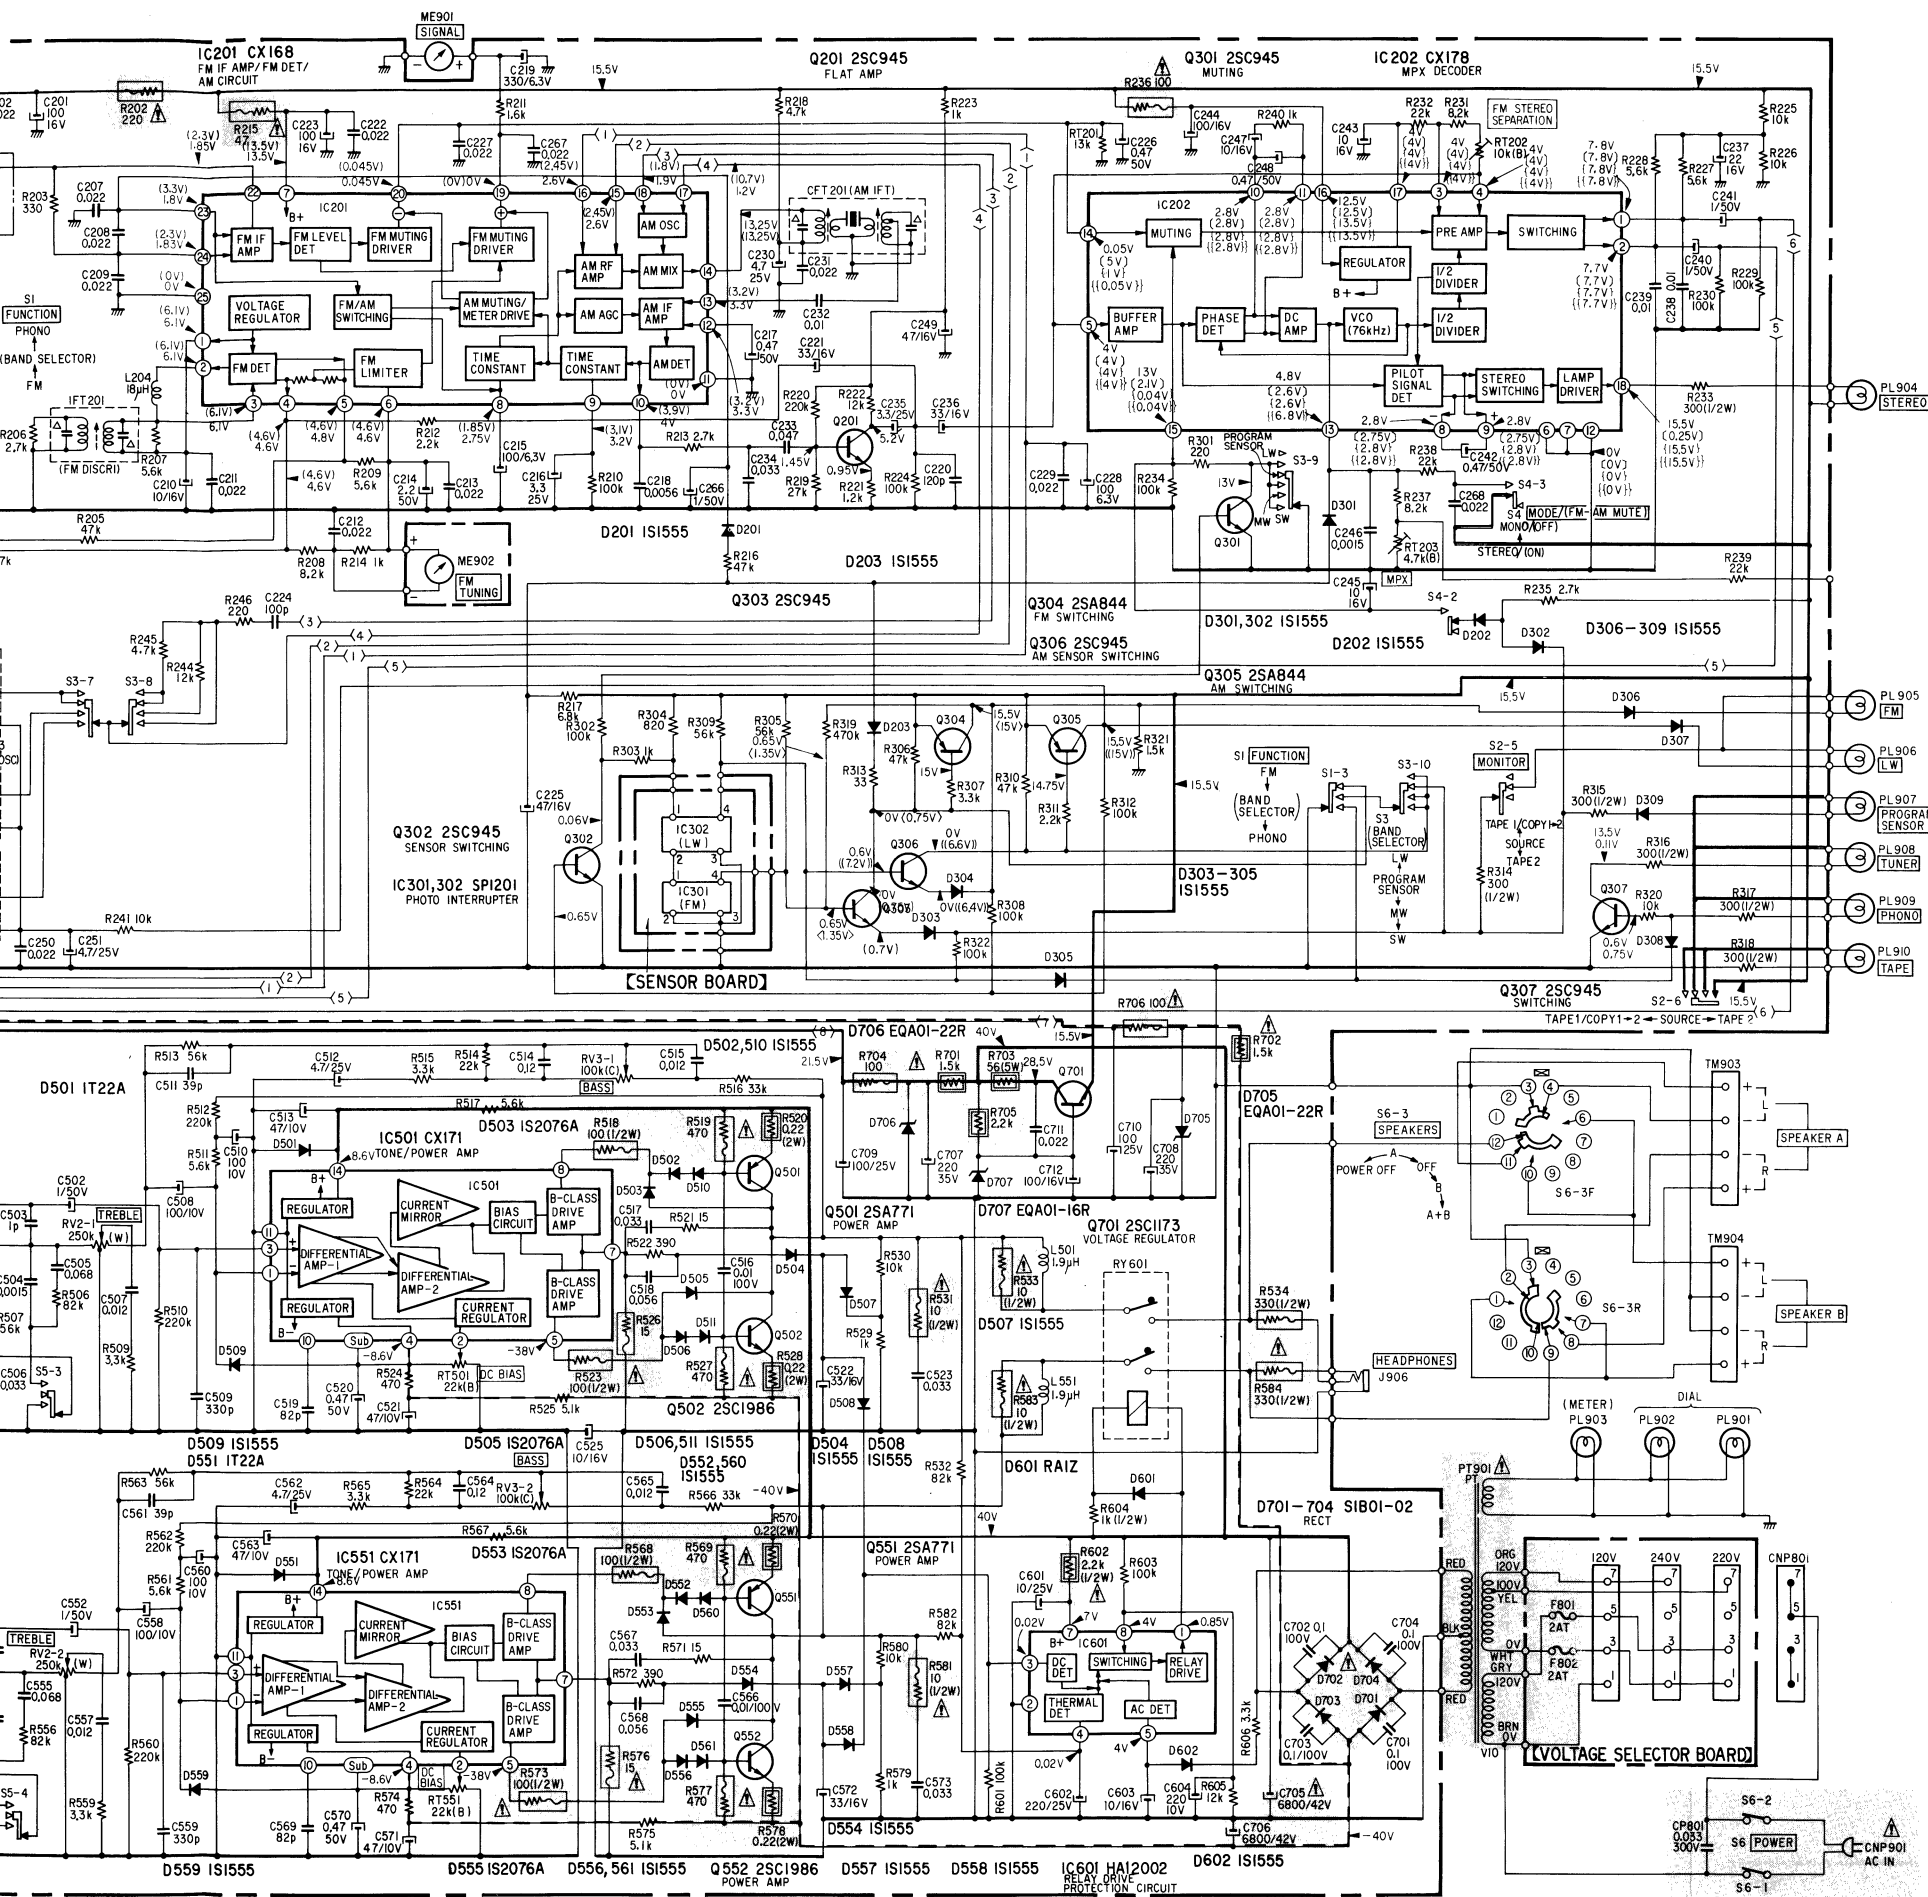


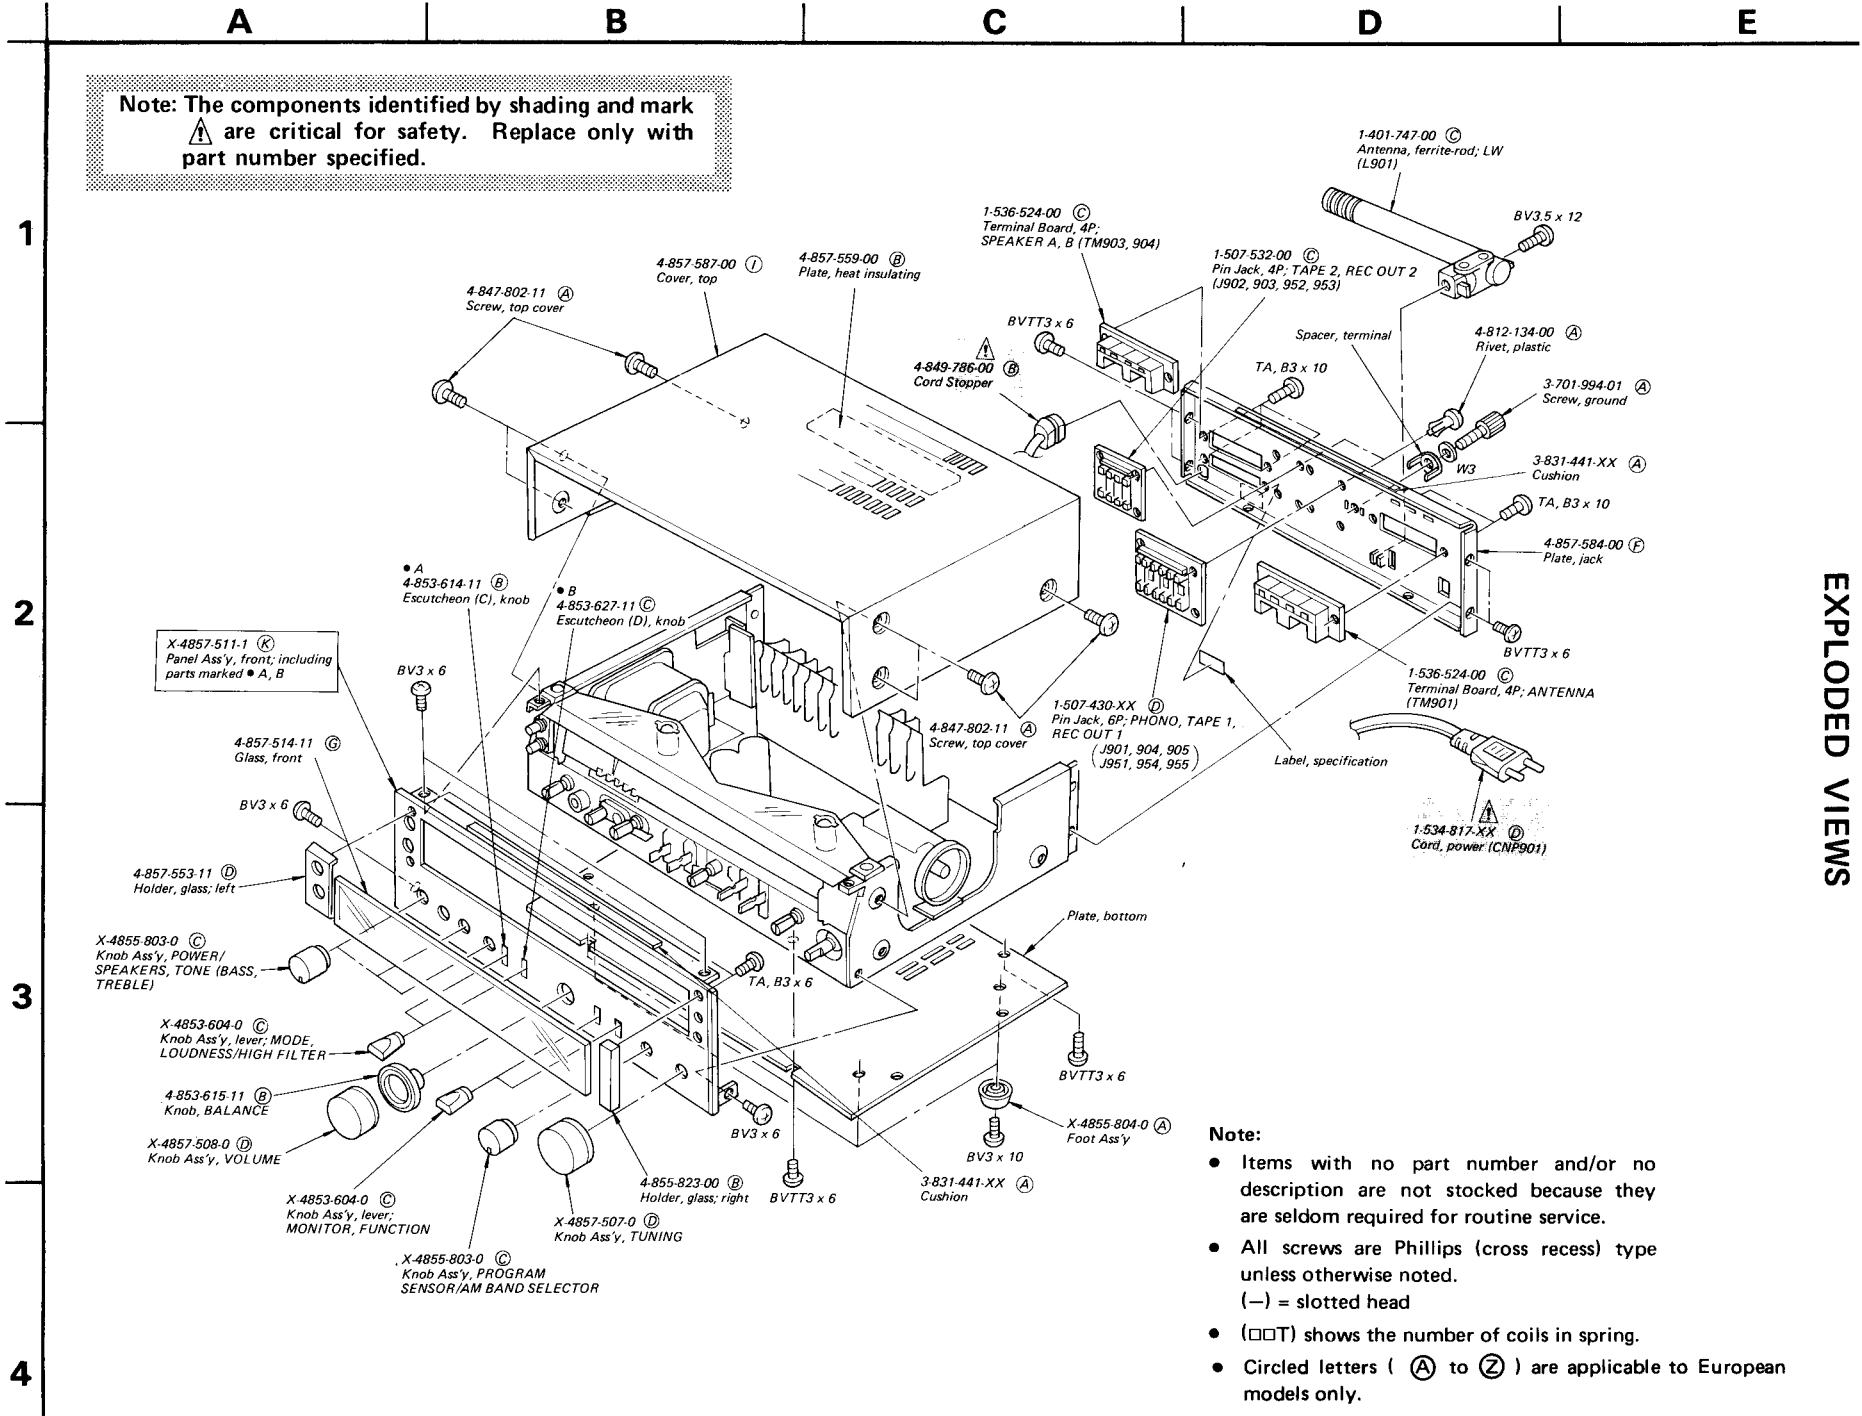
- Note:**
- All capacitors are in  $\mu\text{F}$  unless otherwise noted.  $\mu\text{F}$  50WV or less are not indicated except for electrolytics.
  - All resistors are in ohms,  $\frac{1}{4}\text{W}$  unless otherwise noted.  $\text{k}\Omega$  : 1000 $\Omega$ ;  $\text{M}\Omega$  : 1000 $\text{k}\Omega$ .
  - : fusible resistor.
  - : nonflammable resistor.
  - : B+ bus.
  - : B- bus.
  - : panel designation.
  - : adjustment for repair.
  - Voltages are dc with respect to ground unless otherwise noted.
  - Readings are taken under no-signal (detuned) conditions with a VOM (20  $\text{k}\Omega/\text{V}$ ).
  - ( ) : AM      << >> : TUNER PROGRAM
  - [ ] : FM STEREO      { } : TAPE, PHONO
  - < > : PROGRAM FM      { } : FM MUTING ON
  - ( ( ) ) : PROGRAM LW      { { } } : AM MUTING ON
  - No mark: FM MONO
  - Voltage variations may be noted due to normal production tolerances.
  - Switch

Ref. No.	Switch	Position
S1	FUNCTION	BAND SELECTOR
S2	MONITOR	SOURCE
S3	Band Selector	PROGRAM SENSOR
S4	MODE/(FM-AM MUTE)	STEREO/(ON)
S5	LOUDNESS/HIGH FILTER	OFF
S6	POWER/SPEAKERS	(ON)/A
S7	ANTENNA LW	BUILT IN

**Note:** The components identified by shading and mark are critical for safety. Replace only with part number specified.

SECTION 5  
EXPLODED VIEWS

Note: The components identified by shading and mark  are critical for safety. Replace only with part number specified.




- Note:**
- Items with no part number and/or no description are not stocked because they are seldom required for routine service.
  - All screws are Phillips (cross recess) type unless otherwise noted.  
(-) = slotted head
  - (□□T) shows the number of coils in spring.
  - Circled letters (A to Z) are applicable to European models only.

**A****B****C****D****E****Note:**

- Items with no part number and/or no description are not stocked because they are seldom required for routine service.
- All screws are Phillips (cross recess) type unless otherwise noted.  
(-) = slotted head
- (□T) shows the number of coils in spring.

- Circled letters ( **A** ) to ( **Z** ) are applicable to European models only.

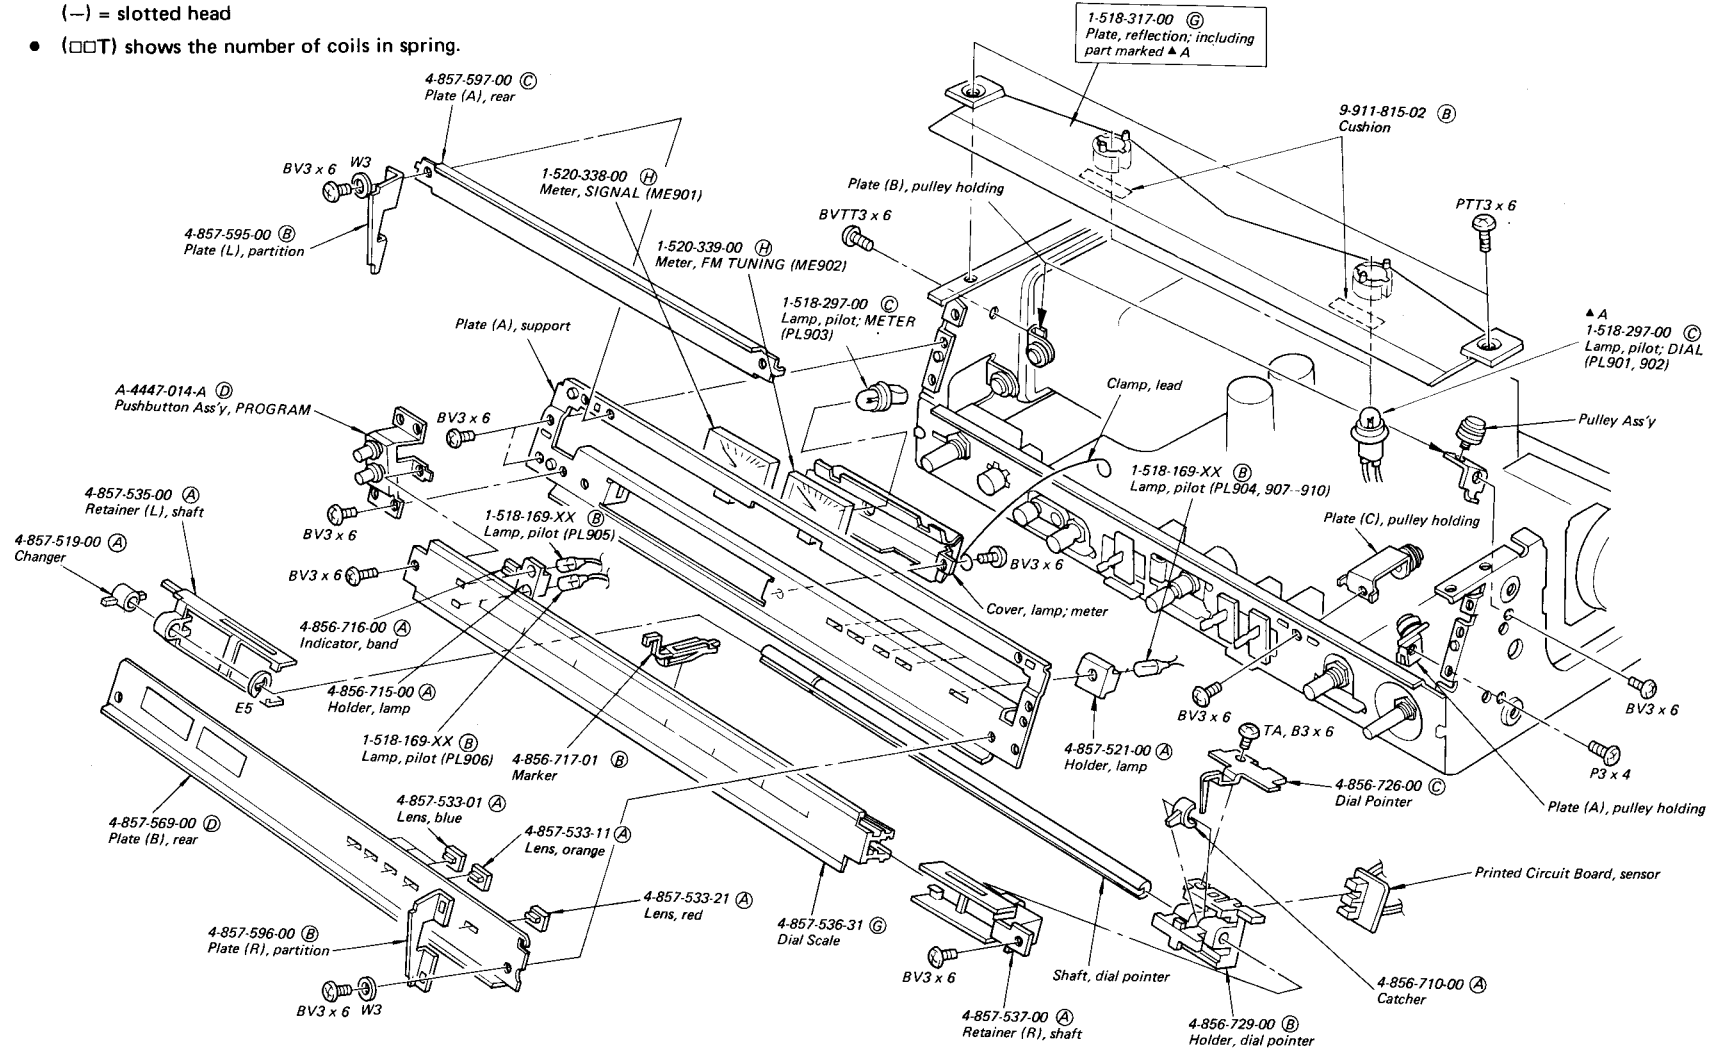

A

B

C

D

E


**Note:** The components identified by shading and mark **A** are critical for safety. Replace only with part number specified.

1

2

3

4

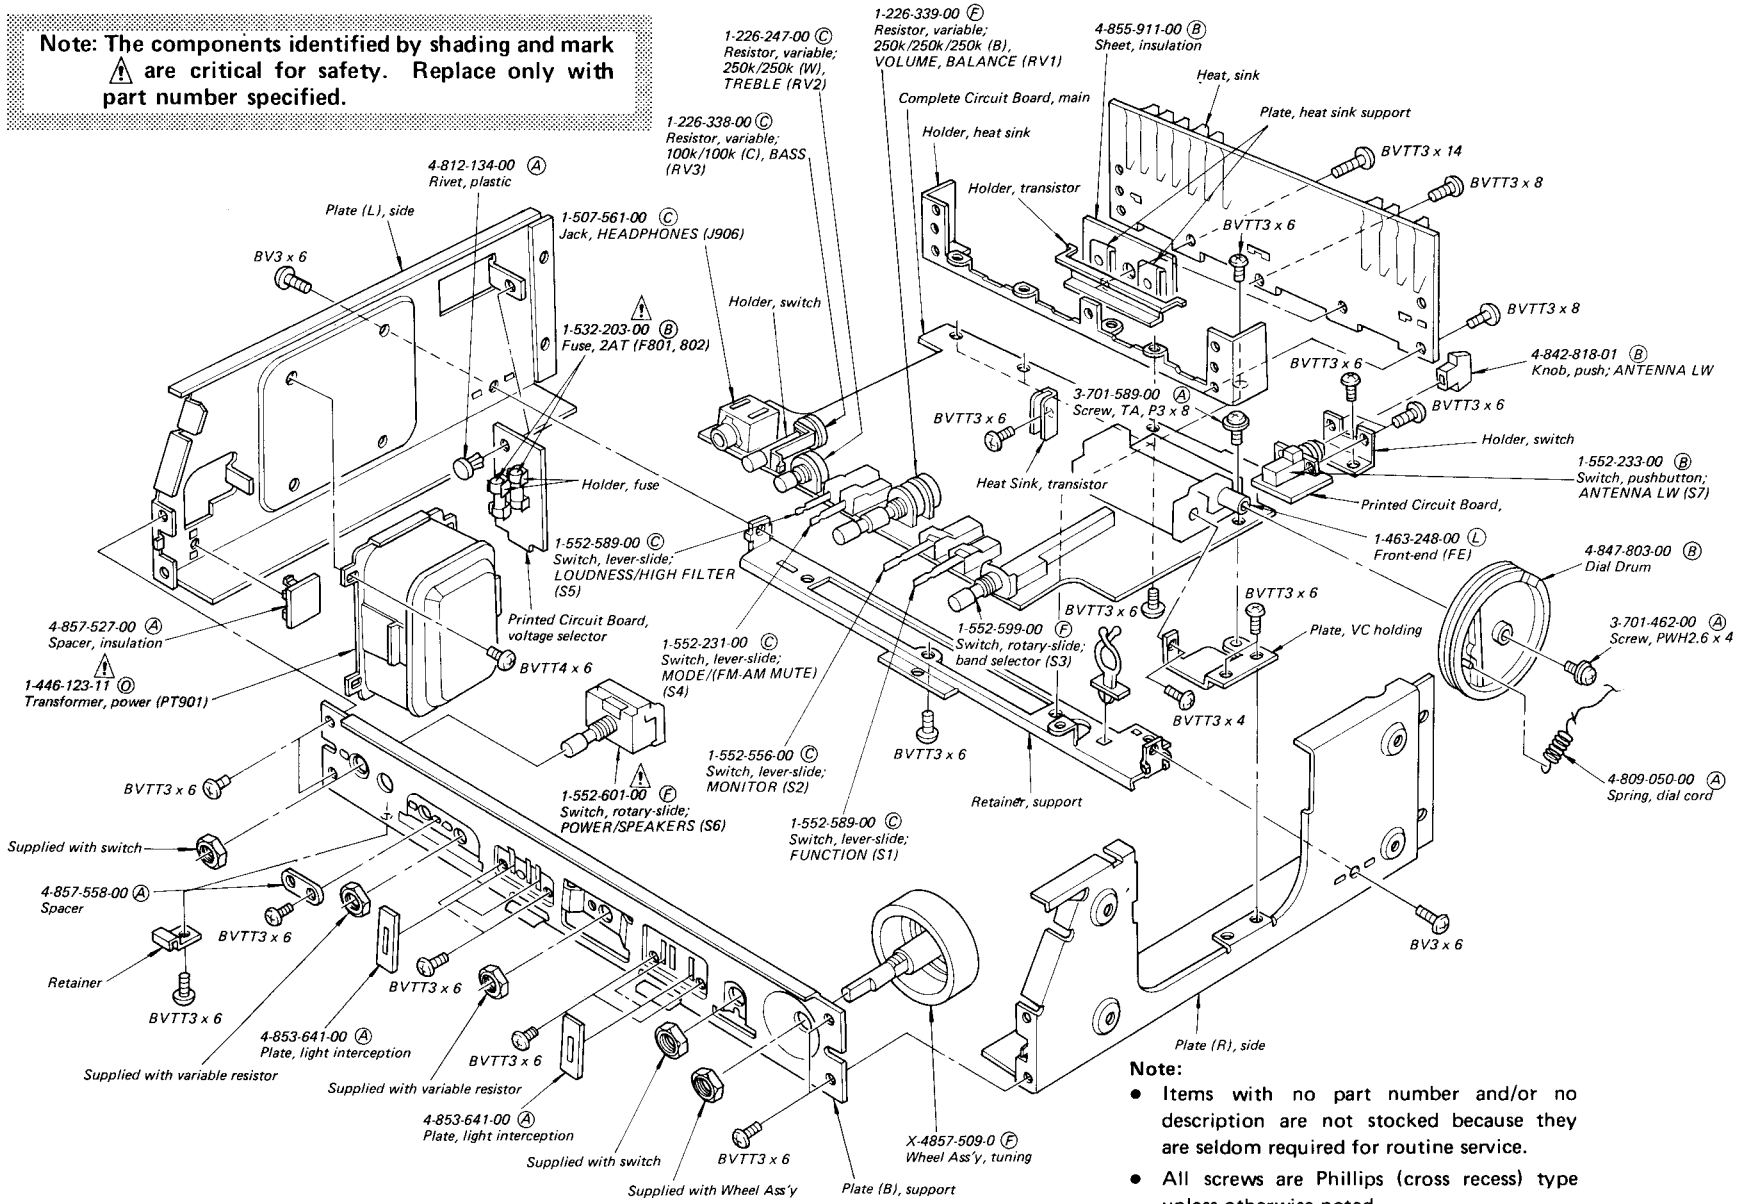

- Note:**
- Items with no part number and/or no description are not stocked because they are seldom required for routine service.
  - All screws are Phillips (cross recess) type unless otherwise noted.  
(-) = slotted head
  - (□□T) shows the number of coils in spring.
  - Circled letters (A to Z) are applicable to European models only.

**SECTION 6  
ELECTRICAL PARTS LIST**

• Circled letters ( A to Z ) are applicable to European models only.

Ref. No.    Part No.    Description

**SEMICONDUCTORS**

**Transistors**

⇒ Q201	8-729-663-47	(B) 2SC1364
⇒ Q301-303 ⇒ Q306, 307 ⇒ Q304, 305	8-729-663-47	(B) 2SC1364
	8-727-788-00	(B) 2SA678
Q501, 551	8-729-377-12	(E) 2SA771
⇒ Q502, 552	8-729-308-62	(E) 2SC1986C
Q701	8-729-217-33	(C) 2SC1173

**ICs**

IC201	8-751-680-01	(I) CX168
IC202	8-751-780-00	(G) CX178
IC301, 302	8-719-902-01	(B) SPI201
IC401, 451	8-759-314-57	(C) HA1457
IC501, 551	8-751-710-00	(G) CX171
IC601	8-759-320-02	(D) HA12002

**Diodes**

D201-203 D301-309	8-719-815-55	(B) 1S1555
⇒ D501, 551	8-719-422-21	(B) 1T22AM
D502, 504 D506-511	8-719-815-55	(B) 1S1555
D552, 554 D556-561	8-719-815-55	(B) 1S1555
D503, 505 D553, 555	8-719-923-76	(B) 1S2076A
⇒ D601	8-719-200-02	(B) 10E2
D602	8-719-815-55	(B) 1S1555
⇒ D701-704	8-719-200-02	(B) 10E2
⇒ D705, 706	8-719-931-22	(B) EQB01-22
⇒ D707	8-719-931-16	(B) EQB01-16

• ⇒: Due to standardization, interchangeable replacements may be substituted for parts specified in the diagrams.

Ref. No.    Part No.    Description

**COILS**

L202	1-401-728-00	(B) Antenna, MW
L203	1-405-797-00	(B) Osc, MW
L204	1-407-741-00	(B) Microinductor, 18μH
L205	1-401-709-00	(C) Antenna, LW
L207	1-407-210-XX	(A) Microinductor, 22mH
L208	1-405-813-00	(B) Osc, LW
L209	1-401-741-00	(B) Antenna, SW
L210	1-405-812-00	(B) Osc, SW
L211	1-407-178-XX	(A) Microinductor, 1μH

L901	1-401-747-00	(C) Antenna, ferrite-rod; LW
------	--------------	------------------------------

**TRANSFORMERS AND FILTER**

CF201	1-527-277-91	(G) Filter, ceramic
CFT201	1-404-087-00	(D) AM IFT
IFT201	1-404-011-00	(C) FM Discriminator
PT901	1-446-123-11	(C) Power

**CAPACITORS**

All capacitors are in μF and ceramic unless otherwise noted.  
50WV or less are not indicated except for electrolytics.  
pF : μμF, elect : electrolytic

C201	1-121-415-00	(A) 100	16V	elect
C202, 203	1-101-924-00	(A) 0.022		
C204, 205	1-123-192-00	(A) 47	10V	elect
C206-209	1-101-924-00	(A) 0.022		
C210	1-121-651-00	(A) 10	16V	elect
C211-213	1-101-924-00	(A) 0.022		
C214	1-121-450-00	(A) 2.2	50V	elect
C215	1-121-413-00	(A) 100	6.3V	elect
C216	1-121-392-00	(A) 3.3	25V	elect
C217	1-121-726-00	(A) 0.47	50V	elect

**Note: The components identified by shading and mark are critical for safety. Replace only with part number specified.**

● Circled letters ( A to Z ) are applicable to European models only.

<u>Ref. No.</u>	<u>Part No.</u>	<u>Description</u>			<u>Ref. No.</u>	<u>Part No.</u>	<u>Description</u>		
C218	1-108-355-00	(A)	0.0056	mylar	C261	1-102-262-00	(A)	12p	
C219	1-121-751-00	(A)	330	6.3V elect	C262	1-104-055-00	(A)	120p	polyethylene
C220	1-102-816-00	(A)	120p		C263	1-104-065-00	(A)	330p	polyethylene
C221	1-121-403-00	(A)	33	16V elect	C264	1-104-091-11	(A)	0.0039	polyethylene
C222	1-101-924-00	(A)	0.022						
C223	1-121-415-00	(A)	100	16V elect	C266	1-121-391-00	(A)	1	50V elect
C224	1-102-973-00	(A)	100p		C267, 268	1-101-924-00	(A)	0.022	
C225	1-121-409-00	(A)	47	16V elect	C401	1-121-915-00	(A)	4.7	25V elect
C226	1-121-726-00	(A)	0.47	50V elect	C402, 403	1-102-973-00	(A)	100p	
C227	1-101-924-00	(A)	0.022		C404	1-121-419-00	(B)	220	6.3V elect
C228	1-121-413-00	(A)	100	6.3V elect	C405	1-108-591-00	(A)	0.033	mylar
C229	1-101-924-00	(A)	0.022		C406	1-108-605-00	(B)	0.12	mylar
C230	1-121-395-00	(A)	4.7	25V elect	C407	1-102-963-00	(A)	33p	
C231	1-101-924-00	(A)	0.022		C408, 451	1-121-915-00	(B)	4.7	25V elect
C232	1-101-923-00	(A)	0.01		C452, 453	1-102-973-00	(A)	100p	
C233	1-108-246-00	(A)	0.047	mylar	C454	1-121-419-00	(B)	220	6.3V elect
C234	1-108-244-00	(A)	0.033	mylar	C455	1-108-591-00	(A)	0.033	mylar
C235	1-121-392-00	(A)	3.3	25V elect	C456	1-108-605-00	(B)	0.12	mylar
C236	1-121-403-00	(A)	33	16V elect	C457	1-102-963-00	(A)	33p	
C237	1-121-479-00	(A)	22	16V elect	C458	1-121-915-00	(B)	4.7	25V elect
C238, 239	1-108-579-00	(A)	0.01	mylar	C501, 551	1-108-234-00	(A)	0.0047	mylar
C240, 241	1-121-391-00	(A)	1	50V elect	C502, 552	1-121-391-00	(A)	1	50V elect
C242	1-121-726-00	(A)	0.47	50V elect	C503, 553	1-102-938-00	(A)	1p	
C243	1-121-651-00	(A)	10	16V elect	C504, 554	1-108-228-00	(A)	0.0015	mylar
C244	1-121-415-00	(A)	100	16V elect	C505, 555	1-108-249-00	(A)	0.068	mylar
C245	1-121-651-00	(A)	10	16V elect	C506, 556	1-108-244-00	(A)	0.033	mylar
C246	1-104-081-00	(A)	0.0015	polyethylene	C507, 557	1-108-357-00	(A)	0.012	mylar
C247	1-121-651-00	(A)	10	16V elect	C508, 558	1-121-414-00	(A)	100	10V elect
C248	1-121-726-00	(A)	0.47	50V elect	C509, 559	1-102-820-00	(A)	330p	
C249	1-121-409-00	(A)	47	16V elect	C510, 560	1-121-414-00	(A)	100	10V elect
C250	1-101-924-00	(A)	0.022		C511, 561	1-102-965-00	(A)	39p	
C251	1-121-395-00	(A)	4.7	25V elect	C512, 562	1-121-395-00	(A)	4.7	25V elect
C252	1-108-351-00	(A)	0.0012	mylar	C513, 563	1-123-192-00	(A)	47	10V elect
C253	1-102-936-00	(A)	3p		C514, 564	1-108-363-00	(A)	0.12	mylar
C254	1-108-352-00	(B)	0.0018	mylar	C515, 565	1-108-357-00	(A)	0.012	mylar
C255	1-108-228-00	(A)	0.0015	mylar	C516, 566	1-108-377-00	(A)	0.01	100V mylar
C256	1-102-807-00	(A)	5p		C517, 567	1-108-244-00	(A)	0.033	mylar
C257	1-102-947-00	(A)	10p		C518, 568	1-108-361-00	(A)	0.056	mylar
C258	1-101-924-00	(A)	0.022		C519, 569	1-102-971-00	(A)	82p	
C259	1-101-880-00	(A)	47p		C520, 570	1-121-726-00	(A)	0.47	50V elect
C260	1-102-282-00	(A)	8p		C521, 571	1-123-192-00	(A)	47	10V elect

Note: The components identified by shading and mark **△** are critical for safety. Replace only with part number specified.

• Circled letters ( **Ⓐ** to **Ⓔ** ) are applicable to European models only.

Ref. No.	Part No.	Description
<b>JACKS</b>		
J901, 904 J905, 951 J954, 955	1-507-430-XX	<b>Ⓓ</b> Pin Jack, 6P; PHONO, TAPE 1, REC OUT 1
J902, 903 J952, 953		<b>Ⓒ</b> Pin Jack, 4P; TAPE 2, REC OUT 2
J906		<b>Ⓒ</b> Jack, HEADPHONES

Ref. No.	Part No.	Description
RY601	1-515-303-00	<b>Ⓕ</b> Relay
TM901,903 TM904	1-536-524-00	<b>Ⓒ</b> Terminal Board, 4P; ANTENNA, SPEAKER A, B
		1-518-317-00
PL901,902	1-518-297-00	<b>Ⓒ</b> Lamp, pilot; 8V 300mA, DIAL

### MISCELLANEOUS

CNP901	<b>△</b> 1-534-817-XX	<b>Ⓓ</b> Cord, power
F801, 802	<b>△</b> 1-532-203-00	<b>Ⓑ</b> Fuse, 2AT
FE	1-463-248-00	<b>⒴</b> Front-end
ME901	1-520-338-00	<b>Ⓗ</b> Meter, SIGNAL
ME902	1-520-339-00	<b>Ⓗ</b> Meter, FM TUNING
PL901,902	1-518-297-00	<b>Ⓒ</b> Lamp, pilot; 8V 300mA, DIAL
PL903	1-518-297-00	<b>Ⓒ</b> Lamp, pilot; 8V 300mA, METER
PL904 PL910	1-518-169-XX	<b>Ⓑ</b> Lamp, pilot; 4.5V 40mA

### PACKING MATERIALS AND ACCESSORIES

Part No.	Description
1-501-184-00	<b>Ⓒ</b> Antenna, feeder
1-501-193-00	<b>Ⓑ</b> Antenna
3-701-630-00	<b>Ⓐ</b> Bag, polyethylene
3-770-599-11	<b>Ⓓ</b> Manual, instruction
4-809-251-00	<b>Ⓐ</b> Bag, polyethylene
4-847-802-11	<b>Ⓐ</b> Screw, case stopper
4-857-591-00	<b>Ⓓ</b> Carton
4-857-593-00	<b>Ⓑ</b> Cushion, upper
4-857-594-00	<b>Ⓑ</b> Cushion, lower

### 1/4 WATT CARBON RESISTORS **Ⓐ**

Ω	Part No.	Ω	Part No.	Ω	Part No.	Ω	Part No.	Ω	Part No.	Ω	Part No.	Ω	Part No.
1.0	1-246-401-00	10	1-246-425-00	100	1-246-449-00	1.0k	1-246-473-00	10k	1-246-497-00	100k	1-246-521-00	1.0M	1-246-545-00
1.1	1-246-402-00	11	1-246-426-00	110	1-246-450-00	1.1k	1-246-474-00	11k	1-246-498-00	110k	1-246-522-00	1.1M	1-210-814-00
1.2	1-246-403-00	12	1-246-427-00	120	1-246-451-00	1.2k	1-246-475-00	12k	1-246-499-00	120k	1-246-523-00	1.2M	1-210-815-00
1.3	1-246-404-00	13	1-246-428-00	130	1-246-452-00	1.3k	1-246-476-00	13k	1-246-500-00	130k	1-246-524-00	1.3M	1-210-816-00
1.5	1-246-405-00	15	1-246-429-00	150	1-246-453-00	1.5k	1-246-477-00	15k	1-246-501-00	150k	1-246-525-00	1.5M	1-210-817-00
1.6	1-246-406-00	16	1-246-430-00	160	1-246-454-00	1.6k	1-246-478-00	16k	1-246-502-00	160k	1-246-526-00	1.6M	1-210-818-00
1.8	1-246-407-00	18	1-246-431-00	180	1-246-455-00	1.8k	1-246-479-00	18k	1-246-503-00	180k	1-246-527-00	1.8M	1-210-819-00
2.0	1-246-408-00	20	1-246-432-00	200	1-246-456-00	2.0k	1-246-480-00	20k	1-246-504-00	200k	1-246-528-00	2.0M	1-210-820-00
2.2	1-246-409-00	22	1-246-433-00	220	1-246-457-00	2.2k	1-246-481-00	22k	1-246-505-00	220k	1-246-529-00	2.2M	1-210-821-00
2.4	1-246-410-00	24	1-246-434-00	240	1-246-458-00	2.4k	1-246-482-00	24k	1-246-506-00	240k	1-246-530-00	2.4M	1-244-754-00
2.7	1-246-411-00	27	1-246-435-00	270	1-246-459-00	2.7k	1-246-483-00	27k	1-246-507-00	270k	1-246-531-00	2.7M	1-244-755-00
3.0	1-246-412-00	30	1-246-436-00	300	1-246-460-00	3.0k	1-246-484-00	30k	1-246-508-00	300k	1-246-532-00	3.0M	1-244-756-00
3.3	1-246-413-00	33	1-246-437-00	330	1-246-461-00	3.3k	1-246-485-00	33k	1-246-509-00	330k	1-246-533-00	3.3M	1-244-757-00
3.6	1-246-414-00	36	1-246-438-00	360	1-246-462-00	3.6k	1-246-486-00	36k	1-246-510-00	360k	1-246-534-00	3.6M	1-244-758-00
3.9	1-246-415-00	39	1-246-439-00	390	1-246-463-00	3.9k	1-246-487-00	39k	1-246-511-00	390k	1-246-535-00	3.9M	1-244-759-00
4.3	1-246-416-00	43	1-246-440-00	430	1-246-464-00	4.3k	1-246-488-00	43k	1-246-512-00	430k	1-246-536-00	4.3M	1-244-760-00
4.7	1-246-417-00	47	1-246-441-00	470	1-246-465-00	4.7k	1-246-489-00	47k	1-246-513-00	470k	1-246-537-00	4.7M	1-244-761-00
5.1	1-246-418-00	51	1-246-442-00	510	1-246-466-00	5.1k	1-246-490-00	51k	1-246-514-00	510k	1-246-538-00	5.1M	1-244-762-00
5.6	1-246-419-00	56	1-246-443-00	560	1-246-467-00	5.6k	1-246-491-00	56k	1-246-515-00	560k	1-246-539-00		
6.2	1-246-420-00	62	1-246-444-00	620	1-246-468-00	6.2k	1-246-492-00	62k	1-246-516-00	620k	1-246-540-00		
6.8	1-246-421-00	68	1-246-445-00	680	1-246-469-00	6.8k	1-246-493-00	68k	1-246-517-00	680k	1-246-541-00		
7.5	1-246-422-00	75	1-246-446-00	750	1-246-470-00	7.5k	1-246-494-00	75k	1-246-518-00	750k	1-246-542-00		
8.2	1-246-423-00	82	1-246-447-00	820	1-246-471-00	8.2k	1-246-495-00	82k	1-246-519-00	820k	1-246-543-00		
9.1	1-246-424-00	91	1-246-448-00	910	1-246-472-00	9.1k	1-246-496-00	91k	1-246-520-00	910k	1-246-544-00		

**Sony Corporation**

9-958-560-01

© 1978

78J0445-1

-28-

Printed in Japan



- Circled letters ( A to Z ) are applicable to European models only.

Ref. No.	Part No.	Description
C522, 572	1-121-403-00	(A) 33 16V elect
C523, 573	1-108-244-00	(A) 0.033 mylar
C525	1-121-651-00	(A) 10 16V elect
C601	1-121-398-00	(A) 10 25V elect
C602	1-121-422-00	(B) 220 25V elect
C603	1-121-651-00	(A) 10 16V elect
C604	1-121-420-00	(B) 220 10V elect
C701-704	1-108-389-00	(B) 0.1 100V mylar
C705, 706	(A) 1-125-157-00	(D) 6800 42V elect
C707, 708	1-121-261-00	(B) 220 35V elect
C709, 710	1-121-417-00	(B) 100 25V elect
C711	1-101-005-00	(A) 0.022
C712	1-121-415-00	(A) 100 16V elect
CP801	(A) 1-108-750-00	(B) 0.033 300V mylar
CT201-206	1-141-171-00	(B) Trimmer

#### RESISTORS

All resistors are in ohms. Common ¼W carbon resistors are omitted. Refer to the list on the last page for their part numbers.

R202	(A) 1-212-889-00	(A) 220 ¼W fusible (nonflammable)
R215	(A) 1-217-395-00	(B) 47 ¼W fusible (nonflammable)
R233	1-244-860-00	(A) 300 ½W carbon
R236	(A) 1-217-399-00	(B) 100 ¼W fusible (nonflammable)
R314-318	1-244-860-00	(A) 300 ½W carbon
R518, 568	(A) 1-212-982-00	(A) 100 ½W fusible (nonflammable)
R519, 569	(A) 1-212-897-00	(A) 470 ¼W fusible (nonflammable)
R520, 570	(A) 1-217-151-00	(B) 0.22 2W wirewound
R523, 573	(A) 1-212-982-00	(A) 100 ½W fusible (nonflammable)
R526, 576	(A) 1-212-861-00	(A) 15 ¼W fusible (nonflammable)
R527, 577	(A) 1-212-897-00	(A) 470 ¼W fusible (nonflammable)
R528, 578	(A) 1-217-151-00	(B) 0.22 2W wirewound (nonflammable)

Ref. No.	Part No.	Description
R531, 581	(A) 1-212-958-00	(A) 10 ½W fusible (nonflammable)
R533, 583	(A) 1-211-626-00	(B) 330 ½W fusible (nonflammable)
R602	(A) 1-211-646-00	(B) 2.2k ½W carbon (nonflammable)
R604	1-244-873-00	(A) 1k ½W carbon
R701, 702	(A) 1-211-548-00	(B) 1.5k ¼W carbon (nonflammable)
R703	(A) 1-217-307-00	(B) 56 5W wirewound (nonflammable)
R704	(A) 1-217-399-00	(B) 100 ¼W fusible (nonflammable)
R705	(A) 1-211-945-00	(C) 2.2k ¼W carbon (nonflammable)
R706	(A) 1-217-399-00	(B) 100 ¼W fusible (nonflammable)
RT202	1-224-645-XX	(A) Adjustable, 10k (B); FM STEREO SEPARATION
RT203	1-224-644-XX	(A) Adjustable, 4.7k (B); MPX
RT501,551	1-224-646-XX	(A) Adjustable, 22k (B); DC BIAS
RV1	1-226-339-00	(F) Variable, 250k/250k/250k (B); VOLUME, BALANCE
RV2	1-226-247-00	(C) Variable, 250k/250k (W); TREBLE
RV3	1-226-338-00	(C) Variable, 100k/100k (C); BASS

#### SWITCHES

S1	1-552-589-00	(C) Lever-slide, FUNCTION
S2	1-552-556-00	(C) Lever-slide, MONITOR
S3	1-552-599-00	(F) Rotary-slide, band selector
S4	1-552-231-00	(C) Lever-slide, MODE/(FM-AM MUTE)
S5	1-552-589-00	(C) Lever-slide, LOUDNESS/HIGH FILTER
S6	(A) 1-552-601-00	(F) Rotary-slide, POWER/SPEAKERS
S7	1-552-233-00	(B) Pushbutton, ANTENNA LW

Note: The components identified by shading and mark (A) are critical for safety. Replace only with part number specified.