


# CDP-991

## SERVICE MANUAL

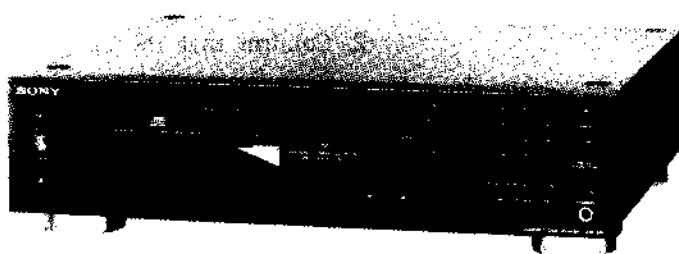

*US Model  
Canadian Model  
AEP Model  
UK Model  
E Model  
Australian Model*

### SPECIFICATIONS

#### Compact disc player

Frequency response	2 Hz - 20 kHz ± 3 dB
Signal to noise ratio	More than 113 dB
Dynamic range	More than 100 dB
Harmonic distortion	Less than 0.0025%
Channel separation	More than 105 dB

#### Outputs

LINE OUT (FIXED) (phono jacks)	Output level 2V (at 50 kilohms) Load impedance over 10 kilohms
LINE OUT (VARIABLE) (phono jacks)	Output level max. 2V (at 50 kilohms) Load impedance over 50 kilohms
DIGITAL OUT (OPTICAL) (optical output connector)	Wave length 660 nm Output level -16 dBm
HEADPHONES (Stereo phone jack)	Output level max. 28 mW Load impedance 32 ohms

#### General

Power requirements	AEP MODEL 220 - 230 V AC, 50/60 Hz UK, Australian MODEL 240 V AC, 50/60 Hz US, Canadian MODEL 120 V AC, 60 Hz E MODEL 110 - 120 or 220 - 240 V AC adjustable, 50/60 Hz
Power consumption	17 W
Dimensions (approx., including projections)	430×110×340 mm (w/h/d) (17×4 3/8×13 3/8 inches)
Weight (approx.)	4.5 kg (9 lbs 15 oz)

Model Name Using Similar Mechanism	CDP-391
CD Mechanism Name	CDM14-5BD1
Base Unit Name	BU-5BD1

#### Remote commander

Remote control system	Infrared control
Power requirements	3 V DC with two batteries size AA (IEC designation R6)
Dimensions	62×18×175 mm (w/h/d) (2 1/2×23/16×7 inches)
Weight	130 g (4 6 oz) Including batteries

#### Supplied accessories

Connecting cord	1 (2 phono plugs -- 2 phono plugs)
Remote commander	1
R6 (size AA) batteries	2

Design and specifications subject to change without notice.

**COMPACT DISC PLAYER**  
**SONY®**




## TABLE OF CONTENTS

<u>Section</u>	<u>Title</u>	<u>Page</u>
Specifications.....	1	
Servicing note.....	2	
<b>1. GENERAL .....</b>	<b>4</b>	
<b>2. ELECTRICAL BLOCK CHECKING .....</b>	<b>6</b>	
<b>3. DISASSEMBLY .....</b>	<b>8</b>	
<b>4. DIAGRAMS</b>		
4-1. Description in IC101 (CXA1372Q) .....	9	
4-2. Block Diagram .....	11	
4-3. Printed Wiring Board .....	14	
4-4. Schematic Diagram .....	17	
IC Block Diagram .....	21	
<b>5. EXPLODED VIEWS .....</b>	<b>23</b>	
<b>6. ELECTRICAL PARTS LIST .....</b>	<b>27</b>	

## MODEL IDENTIFICATION

— Specification Labels —

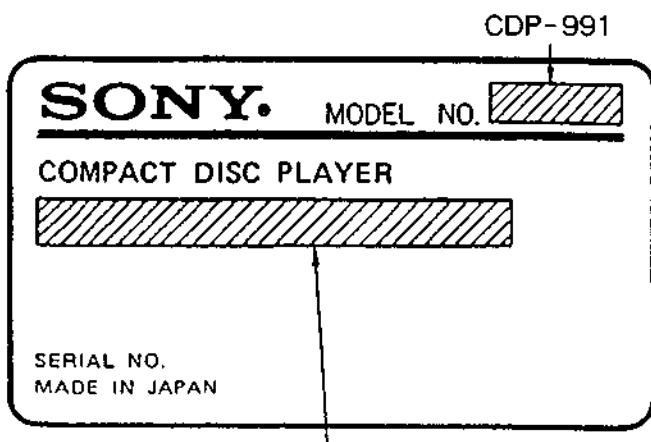

US. Canadian Models : AC : 120V 60Hz 17W

AEP Model : AC : 220V - 230V ∼ 50/60Hz 17W

UK, Australian Models : AC : 240V ∼ 50/60Hz 17W

E Model : AC : 110 - 120, 220 - 240V

∼ 50/60Hz 17W

## — SERVICING NOTE —

**LASER DIODE AND FOCUS SEARCH OPERATION CHECK**

1. Turn POWER switch on with no disc inserted and disc table closed.
2. Confirm that the operation indicated in Fig. A is performed while observing the objective lens.

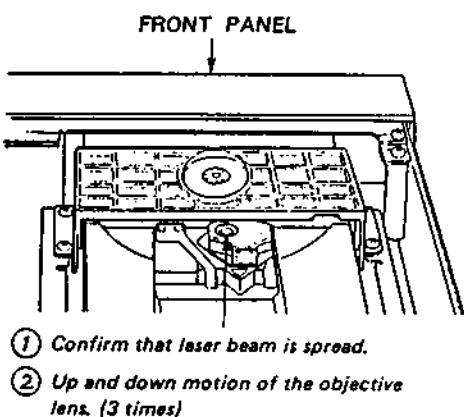


Fig. A

**SAFETY-RELATED COMPONENT WARNING!!**

COMPONENTS IDENTIFIED BY MARK OR DOTTED LINE WITH MARK ON THE SCHEMATIC DIAGRAMS AND IN THE PARTS LIST ARE CRITICAL TO SAFE OPERATION. REPLACE THESE COMPONENTS WITH SONY PARTS WHOSE PART NUMBERS APPEAR AS SHOWN IN THIS MANUAL OR IN SUPPLEMENTS PUBLISHED BY SONY.

**ATTENTION AU COMPOSANT AYANT RAPPORT À LA SÉCURITÉ!**

LES COMPOSANTS IDENTIFIÉS PAR UNE MARQUE SUR LES DIAGRAMMES SCHÉMATIQUES ET LA LISTE DES PIÈCES SONT CRITIQUES POUR LA SÉCURITÉ DE FONCTIONNEMENT. NE REMPLACER CES COMPOSANTS QUE PAR DES PIÈCES SONY DONT LES NUMÉROS SONT DONNÉS DANS CE MANUEL OU DANS LES SUPPLÉMENTS PUBLIÉS PAR SONY.

## SAFETY CHECK-OUT


After correcting the original service problem, perform the following safety check before releasing the set to the customer:

Check the antenna terminals, metal trim, "metallized" knobs, screws, and all other exposed metal parts for AC leakage. Check leakage as described below.

### LEAKAGE TEST

The AC leakage from any exposed metal part to earth ground and from all exposed metal parts to any exposed metal part having a return to chassis, must not exceed 0.5 mA (500 microamperes). Leakage current can be measured by any one of three methods.

1. A commercial leakage tester, such as the Simpson 229 or RCA WT-540A. Follow the manufacturers' instructions to use these instruments.
2. A battery-operated AC milliammeter. The Data Precision 245 digital multimeter is suitable for this job.
3. Measuring the voltage drop across a resistor by means of a VOM or battery-operated AC voltmeter. The "limit" indication is 0.75 V, so analog meters must have an accurate low-voltage scale. The Simpson 250 and Sanwa SH-63Trd are examples of a passive VOM that is suitable. Nearly all battery operated digital multimeters that have a 2V AC range are suitable. (See Fig. A)

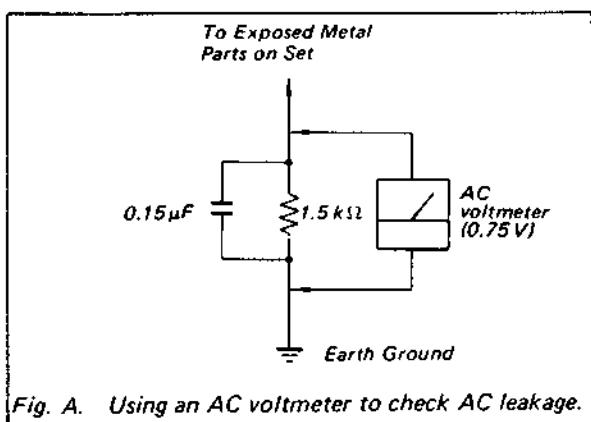

### NOTES ON HANDLING THE OPTICAL PICK-UP BLOCK OR BASE UNIT

The laser diode in the optical pick-up block may suffer electrostatic breakdown because of the potential difference generated by the charged electrostatic load, etc. on clothing and the human body. During repair, pay attention to electrostatic breakdown and also use the procedure in the printed matter which is included in the repair parts. The flexible board is easily damaged and should be handled with care.

### NOTES ON LASER DIODE EMISSION CHECK

The laser beam on this model is concentrated so as to be focused on the disc reflective surface by the objective lens in the optical pick-up block. Therefore, when checking the laser diode emission, observe more than 25 cm away from the objective lens.


CLASS 1 LASER PRODUCT  
LUOKAN 1 LASERLAITE  
KLASS 1 LASERAPPARAT

This Compact Disc player is classified as a CLASS 1 LASER Product. The CLASS 1 LASER PRODUCT label is located on the rear exterior.

### E MODEL

#### For the customers of the model equipped with the voltage selector

Check that the voltage selector is set to the local power line voltage. If not, set the selector to the correct position before connecting the AC power cord to a wall outlet.

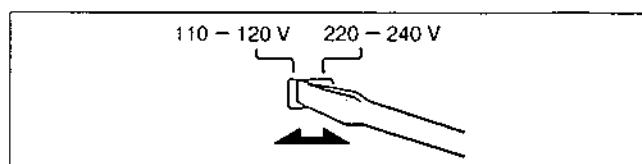


## SECTION 1 GENERAL

This section is extracted from instruction manual.

### Location of Controls

#### Front Panel

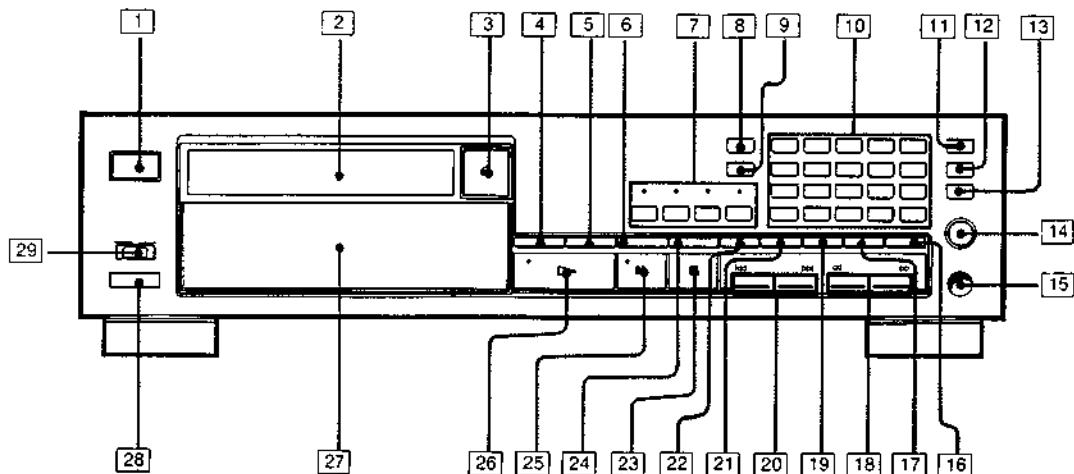


Refer to the pages indicated in ● for details.

- 1 POWER switch ●
- 2 Disc tray
- 3 ▲ OPEN/CLOSE button ●
- 4 TIME/MEMO button ●
- 5 REPEAT button ●
- 6 FADER (fade in/fade out) button ●
- 7 PLAY MODE buttons  
CONTINUE button and lamp ●  
SHUFFLE button and lamp ●  
PROGRAM button and lamp ●  
C. (custom) INDEX button and lamp ●
- 8 EDIT/TIME FADE button ●
- 9 TIME SET button ●
- 10 Numeric buttons ●
- 11 > 20 (over 20) button ●
- 12 CHECK (program check) button ●
- 13 CLEAR (program clear) button ●, ●
- 14 LINE OUT/PHONE LEVEL control ●, ●

- 15 PHONES jack
- 16 LEVEL FILE button ●
- 17 MUSIC SCAN button ●
- 18 ◀◀▶▶ (manual search) DISC MEMO buttons ●
- 19 FILE RECALL button ●
- 20 ▲◀◀▶▶AMS\* buttons ●
- 21 ERASE (memory erase) button ●
- 22 FILE (custom file) button ●
- 23 ■ (stop) button ●
- 24 PEAK SEARCH button ●
- 25 II (pause) button ●
- 26 ▶ (play) button ●
- 27 Display window ●
- 28 Remote sensor
- 29 TIMER switch ●


\* AMS is the abbreviation of Automatic Music Sensor.

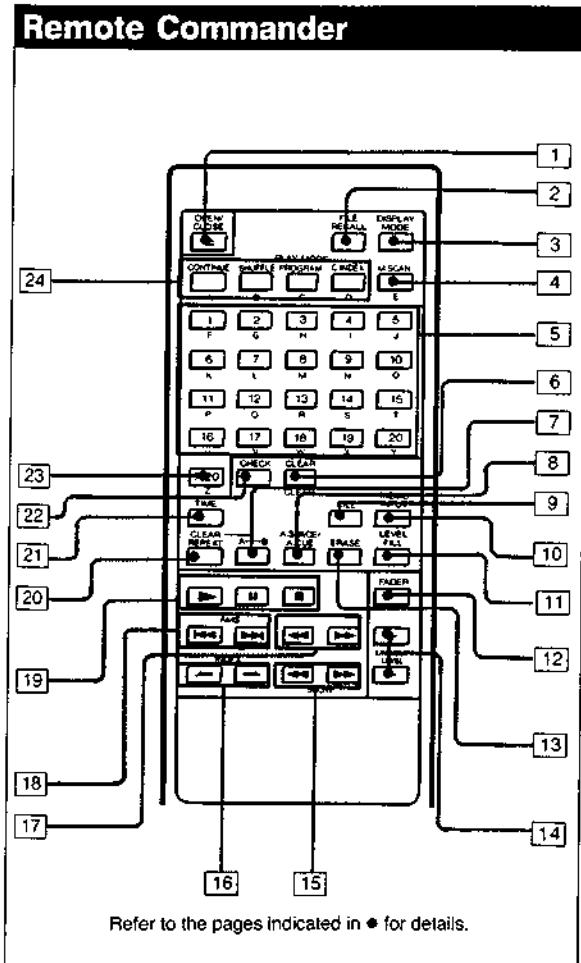

- [1] ▲ OPEN/CLOSE button \*
- [2] FILE RECALL button \*
- [3] DISPLAY MODE button \*
- [4] M (music). SCAN button \*
- [5] Numeric buttons \*
- [6] CLEAR button \*, \*
- [7] A → B repeat button \*
- [8] A. SPACE (auto space)/A. CUE (auto cue) button \*, \*
- [9] FILE (custom file) button \*
- [10] MEMO INPUT button \*
- [11] LEVEL FILE button \*
- [12] FADER (fade in/fade out) button \*
- [13] ERASE button \*
- [14] LINE OUT LEVEL (line out/headphone level) buttons \*, \*
- [15] ←→ SLOW (low speed manual search) buttons \*
- [16] ←→ INDEX buttons \*, \*
- [17] ←→ (manual search) button \*
- [18] ←→ AMS buttons \*
- [19] ■ (stop) button \*
- (pause) button \*
- ▶ (play) button \*
- [20] CLEAR REPEAT button (A → B repeat clear/repeat) button \*
- [21] TIME button \*
- [22] CHECK button \*
- [23] > 20 (over 20) button \*
- [24] PLAY MODE buttons  
CONTINUE button \*  
SHUFFLE button \*  
PROGRAM button \*  
C (custom). INDEX button \*

Buttons with yellow letters (A, B, C, ..... ) are for writing a disc memo (page 26).

## Installing Batteries in the Remote Commander

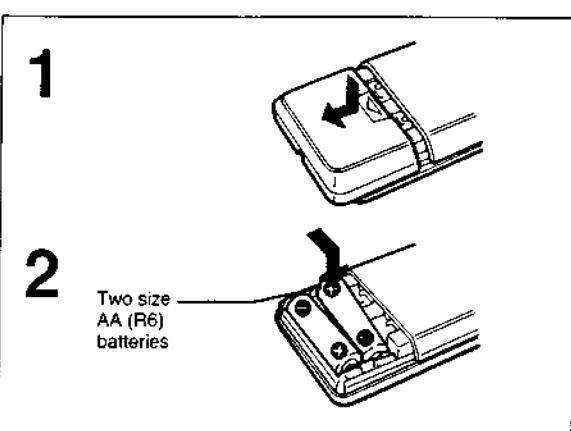

### On battery life

- About half a year of normal operation can be expected when using the Sony SUM-3(NS) batteries.
- When the batteries are run down, the remote commander will not operate the unit. In this case, replace both batteries with new ones.

### Notes on the remote commander and remote control operation


- Keep the commander away from extremely hot or humid places.
- Avoid dropping any foreign objects into the commander casing, particularly when replacing the batteries.
- Avoid exposing the remote sensor to direct sunlight or lighting apparatus. Such exposure can cause a malfunction.
- To avoid damage caused by battery leakage and corrosion, remove the batteries when the commander will not be used for a long time.

## SECTION 2


### ELECTRICAL BLOCK CHECKING

**Note :**

1. CD Block basically constructed to operate without adjustment. Therefore, check each item in order given.
2. Use YEDS-18 disc (3-702-101-01) unless otherwise indicated.
3. Use the oscilloscope with more than  $10M\Omega$  impedance.
4. Clean an object lens by an applicator with neutral detergent when the signal level is low than specified value with the following checks.

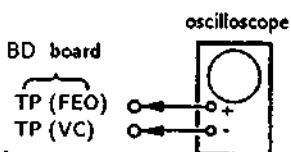**S Curve Check****Procedure :**


1. Connect oscilloscope to test point TP (FEO) on BD board.
2. Connect between test point TP (FES) and TP (VC) by lead wire.
3. Turned Power switch on and actuate the focus serch. (actuate the focus serch when disc table is moving in and out.)
4. Check the oscilloscope waveform (S curve) is symmetrical between A and B. And confirm peak to peak level within  $3 \pm 1V_{p-p}$ .

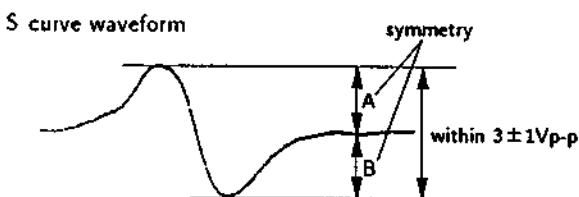

5. After check, remove the lead wire connected in step 2.

**Note :**



- Try to mesure several times to make sure that the ratio of A : B or B : A is more than 10 : 7.
- Take sweep time as long as possible and light up the brightness to obtain best waveform.

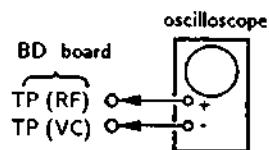**RF Level Check****Procedure :**

1. Connect oscilloscope to test point TP (RF) on BD board.
2. Turn Power switch on.
3. Put disc (YEDS-18) in and playback.
4. Confirm that oscilloscope waveform is clear and check RF signal level is correct or not.

**Note :**

Clear RF signal waveform means that the shape “◇” can be clearly distinguished at the center of the waveform.

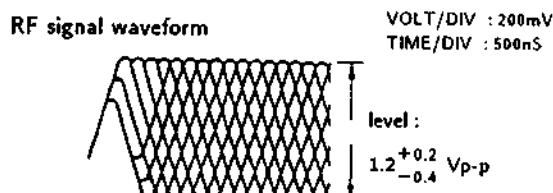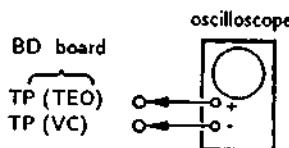**E-F Balance Check****Procedure :**

1. Connect test point TP (ADJ) to ground and TP (TES) to TP (VC) with lead wire.
2. Connect oscilloscope to test point TP (TEO) on BD board.
3. Turn Power switch on.
4. Put disc (YEDS-18) in and playback.
5. Confirm that the osilloscope waveform is symmetrical on the top and bottom in relation to 0V, and check this level.


**Traverse oscilloscope**

6. Remove the lead wire connected in step 1.

## RF PLL Free-run Frequency Check

### Procedure :

1. Connect frequency counter to test point (PCK) with lead wire.

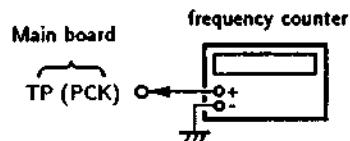

2. Turn Power switch on.
3. Confirm that reading on frequency counter is
4. 3218MHz.


### Focus/Tracking Gain

This gain has a margin, so even if it is slightly off. There is no problem.


Therefore, do not perform, this adjustment.

Please note that it should be fixed to mechanical center position when you moved and do not know original position.

Test point : BD board - conductor side -

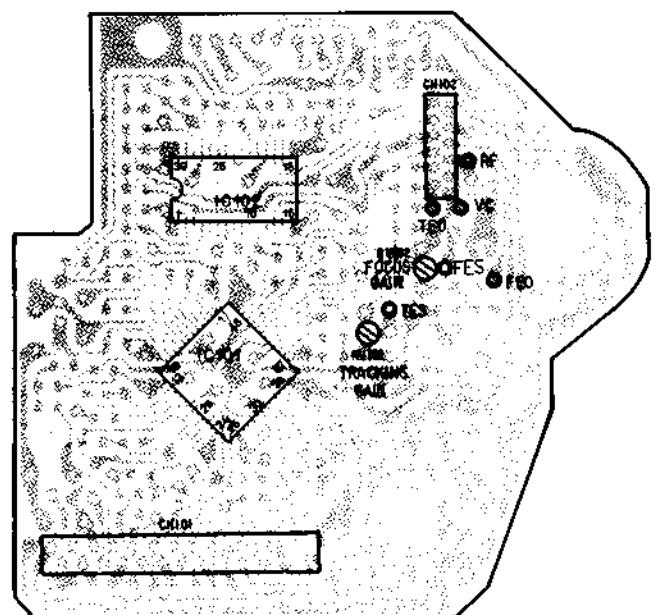

Test Location : main board - component side -

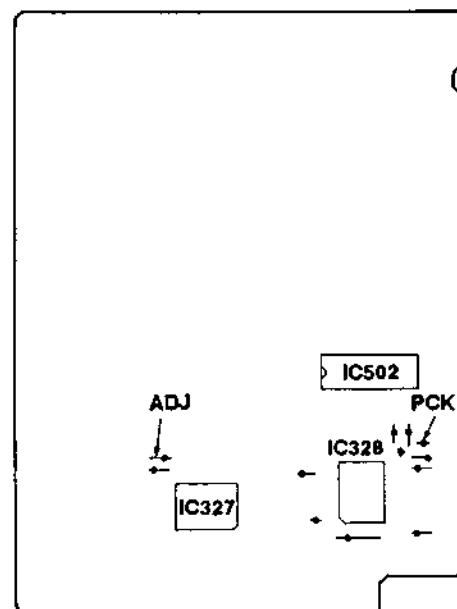


## SECTION 3


### DISASSEMBLY

NOTE: Follow the disassembly procedure in the numerical order given.

#### REMOVAL OF LOADING PANEL

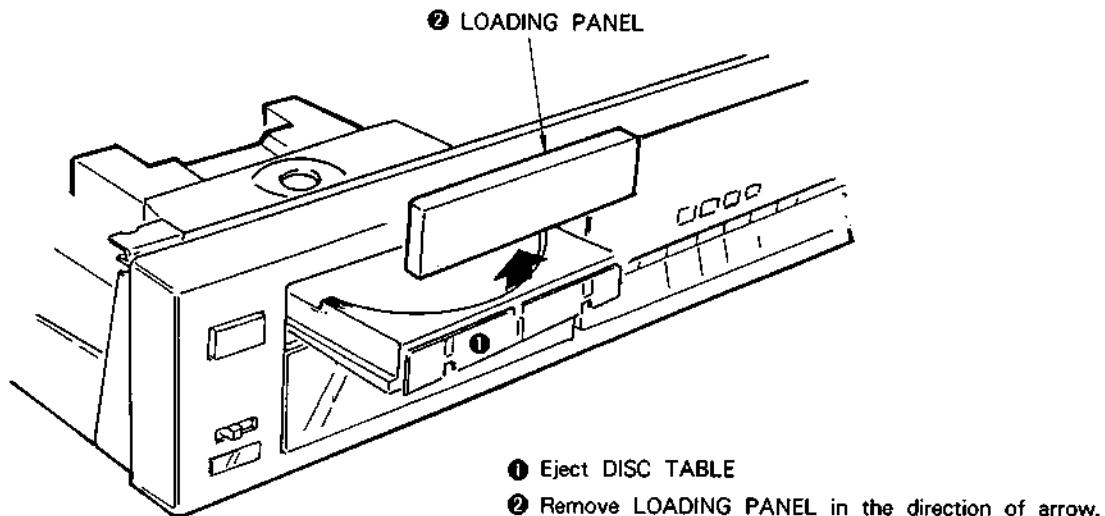

#### REMOVAL OF BASE UNIT (BU-5BD1)

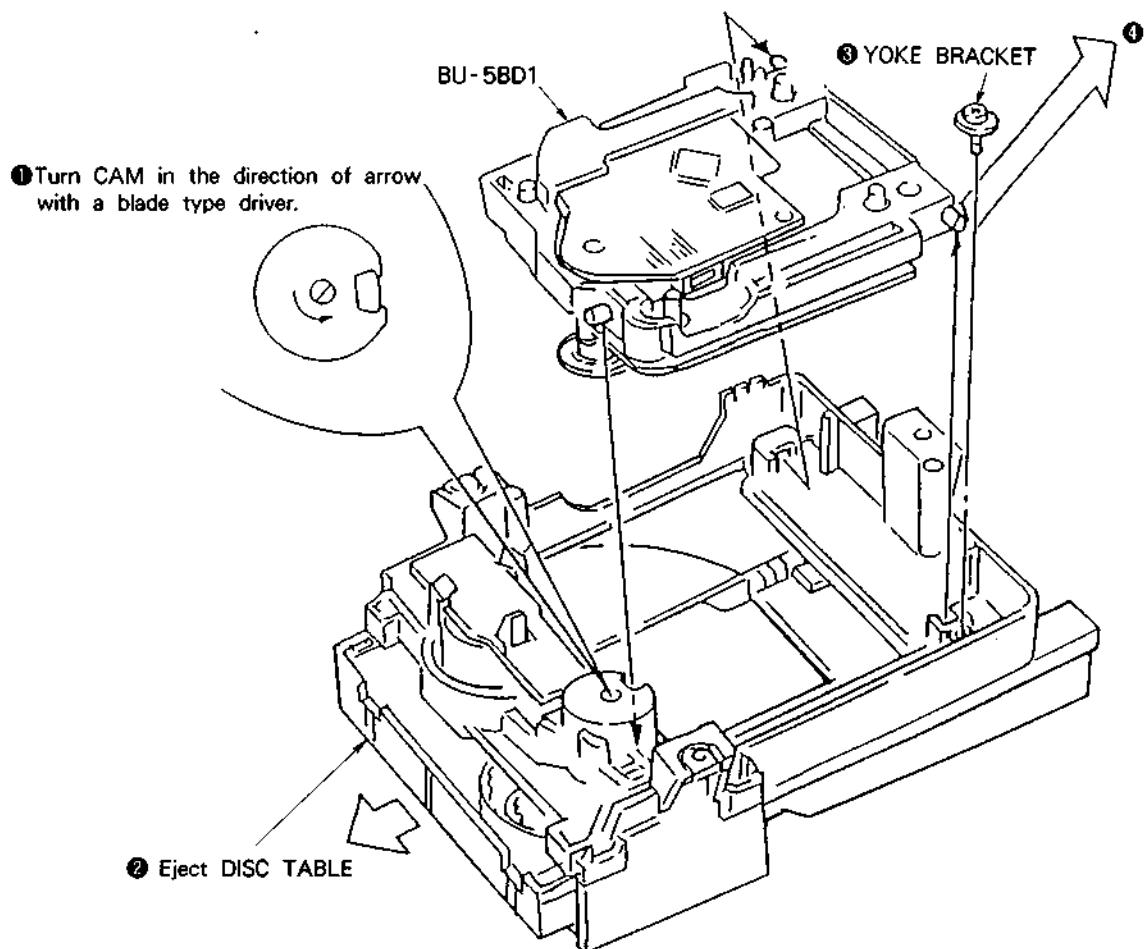


## SECTION 4 DIAGRAMS

### 4-1. Description on IC101 (CXA1372Q)


Pin No.	Pin Name	I/O	Pin Description
1	VC		GND when two ( $\pm$ ) dual power supplies are in use, or the center voltage (2.5 V) when a single power supply is in use.
2	FGD	I	Time constants for gain switching in normal mode/down mode and for focus gain are connected between the FGD and FS3 pins.
3	FS3	I	
4	FLB	I	The capacitor for low frequency boost in the focus servo loop is connected.
5	FEO	O	Focus drive output
6	FE-	I	Inverted input to focus amplifier
7	SRCH	I	Time constants to generate the focus search waveform are connected.
8	TGU	I	Time constants for gain switching in normal mode/up mode and for tracking gain are connected between TGU pin and TG2 pin.
9	TG2	I	
10	AVCC		Analog power supply (5 V when $\pm$ dual power supplies are in use, 5 V when a single power supply is in use.)
11	TAO	O	Tracking drive output
12	TA-	I	Inverted input to tracking amplifier
13	SL +	I	Non-inverted input to sled amplifier
14	SLO	O	Sled drive output
15	SL -	I	Non-inverted input to sled amplifier
16	FSET	I	The 510-k $\Omega$ phase compensator resistor is connected to this pin.
17	ISET	I	The current setting resistor is connected to this pin.
18	SSTOP	I	The limit switch is connected to this pin.
19	AVEE		Analog power supply (-5V when $\pm$ dual power supplies are in use, or GND when a single power supply is in use.)
20	DIRC	I	Direct control pin.
21	LOCK	I	Sled run-away prevention circuit operates when this signal is "L".
22	CLK	I	Serial data transfer clock input that is supplied from CPU (or DSP).
23	XLT	I	Latch input from CPU (or DSP).
24	DATA	I	Serial data input from CPU (or DSP).
25	XRST	I	System reset. "L" to reset.
26	C.OUT	O	Output to tracking counter.
27	SENS	O	SENS output
28	DGND		Digital ground (GND). (GND when $\pm$ dual power supplies are in use. GND when a single power supply is in use.)
29	MIRR	O	Mirror output.
30	DFCT	O	Defect output. "H" when defective.
31	ASY	I	Auto-assymmetry control input.
32	EFM	O	EFM comparator output.

Pin No.	Pin Name	I/O	Pin Description
33	FOK	O	Focus OK.
34	CC2	I	Defect-bottom-hold input (input by capacitive coupling).
35	CC1	O	Defect-bottom-hold output.
36	DVCC		Digital power supply (+5 V when $\pm$ dual power supplies in use. +5 V when a single power supply is in use.)
37	CB	I	The defect-bottom-hold capacitor is connected to this pin.
38	CP	I	The mirror hold capacitor is connected to this pin.
39	RFI	I	RF signal input (input by capacitive coupling).
40	RFO	I	RF signal input (input by DC coupling).
41	DVEE		Digital power supply (-5 V when $\pm$ dual power supplis are in use. GND when a single power supply is in use.)
42	TZC	I	Tracking zero cross comparator input.
43	TE	I	Tracking error input.
44	TDFCT	I	The defect prevention hold capacitor is connected to this pin.
45	ATSC	I	Anti-shock input.
46	FZC	I	Focus zero-cross comparator input.
47	FE	I	Focus error input.
48	FDFCT	I	The defect prevention hold capacitor is connected to this pin.

#### 4-2. BLOCK DIAGRAM

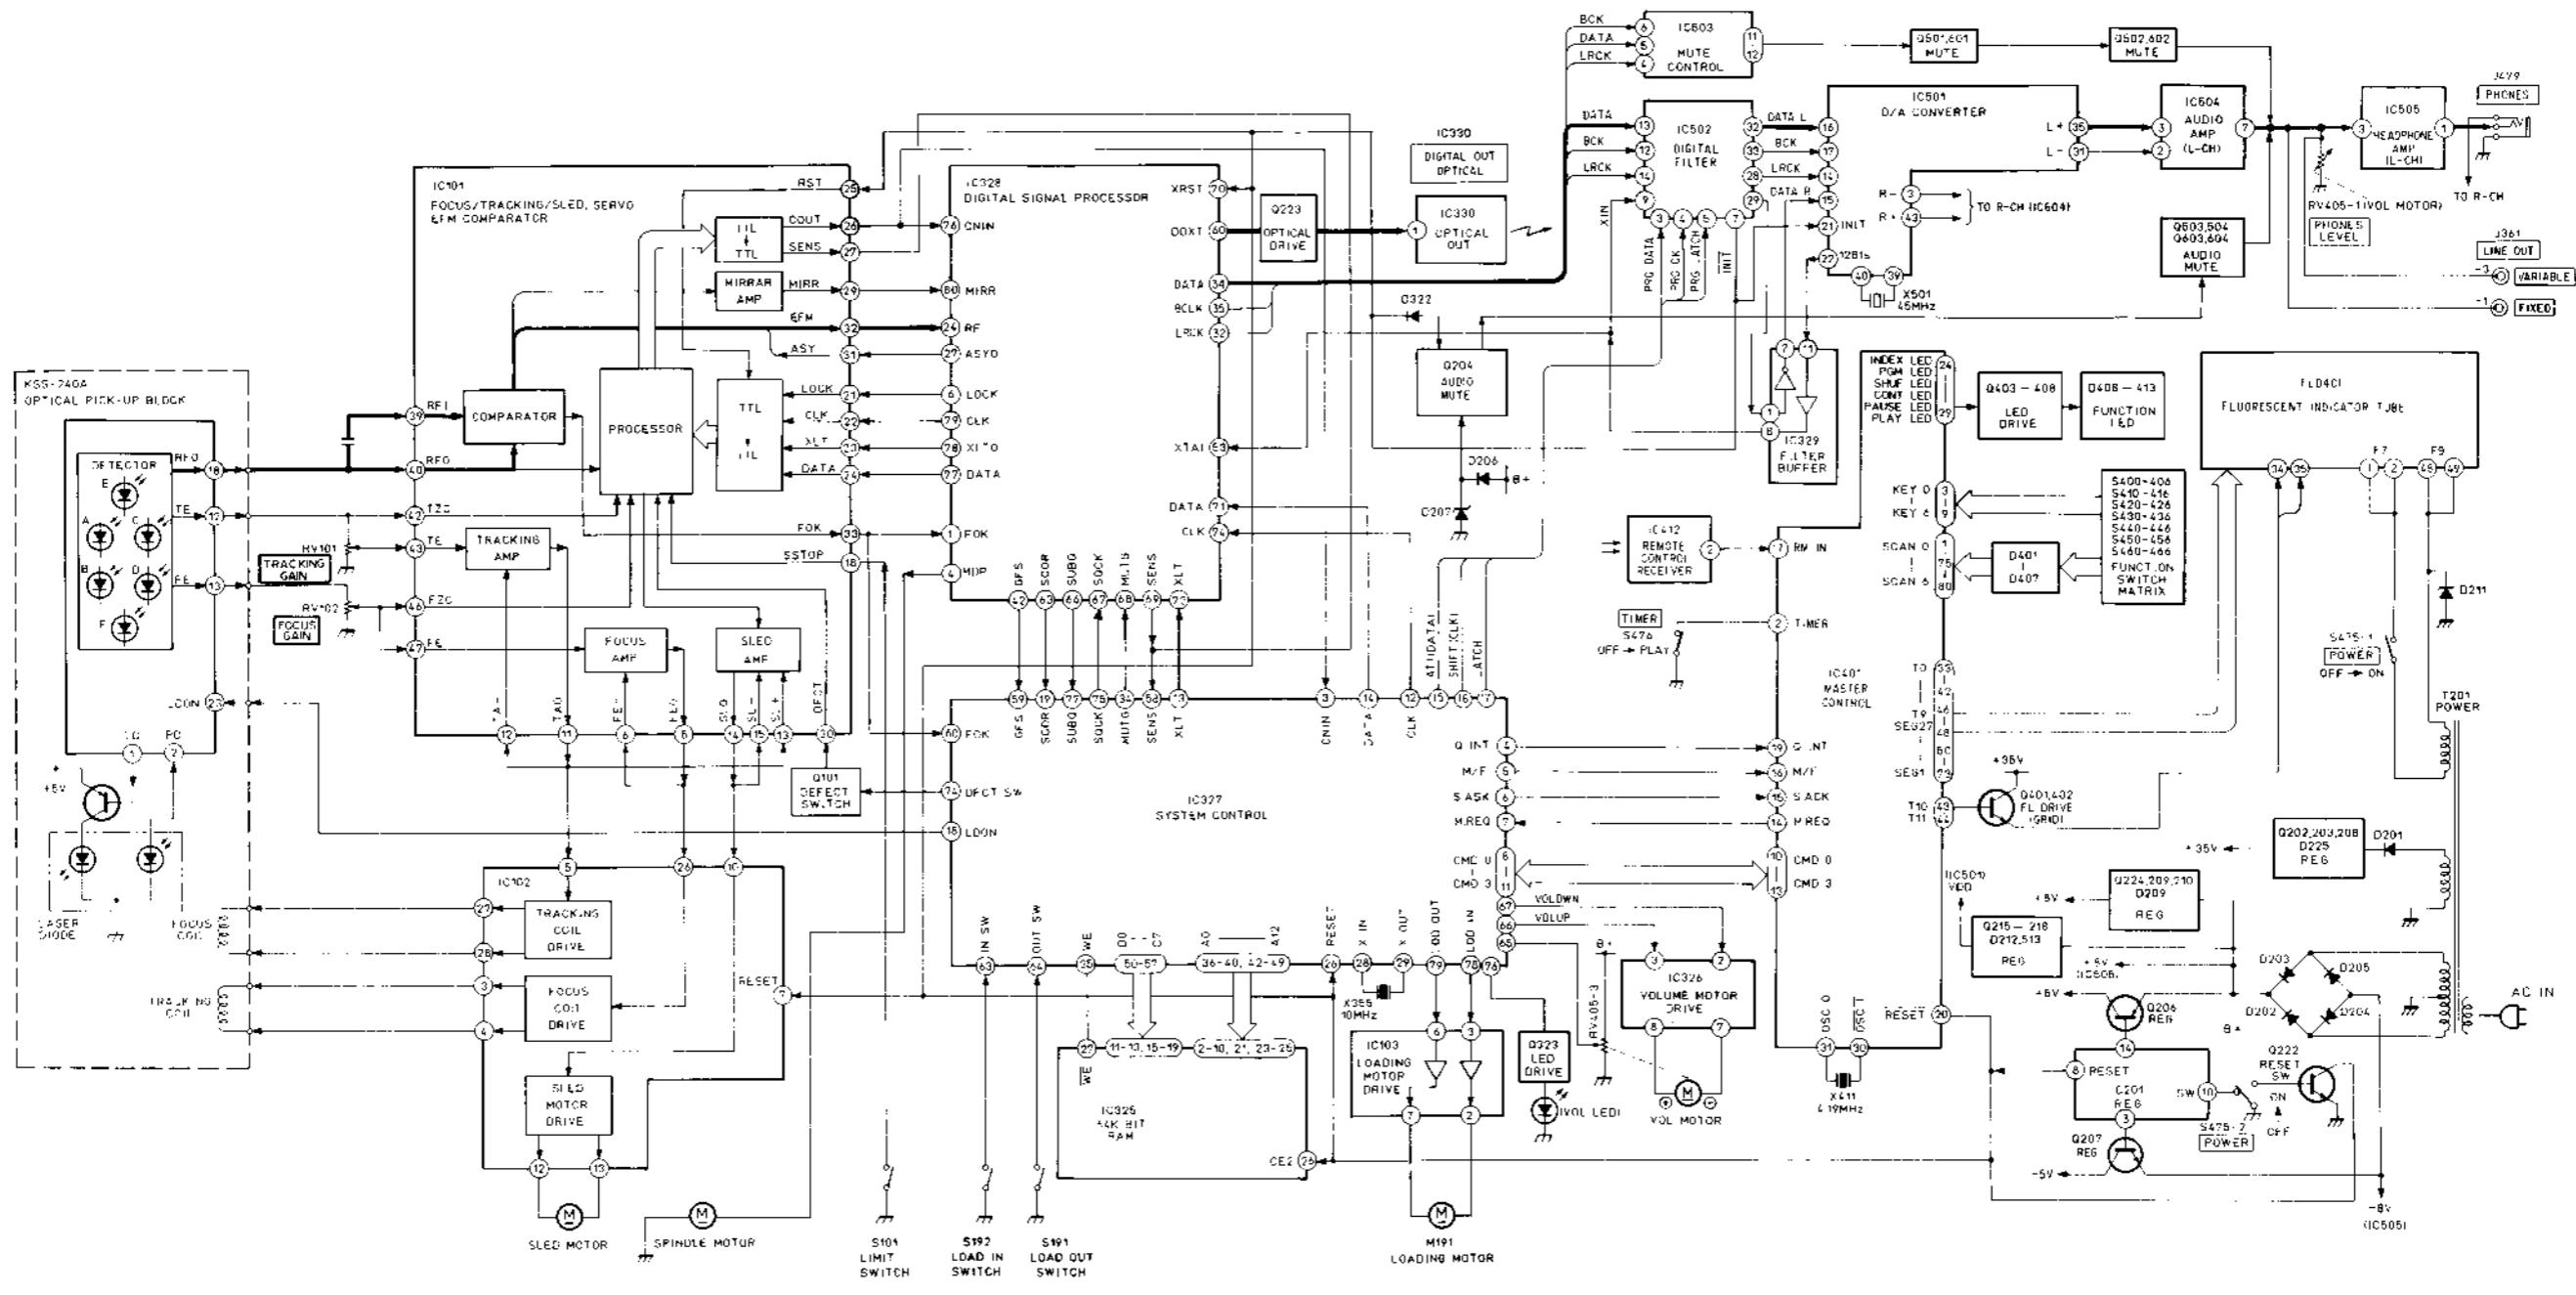


MC-Service

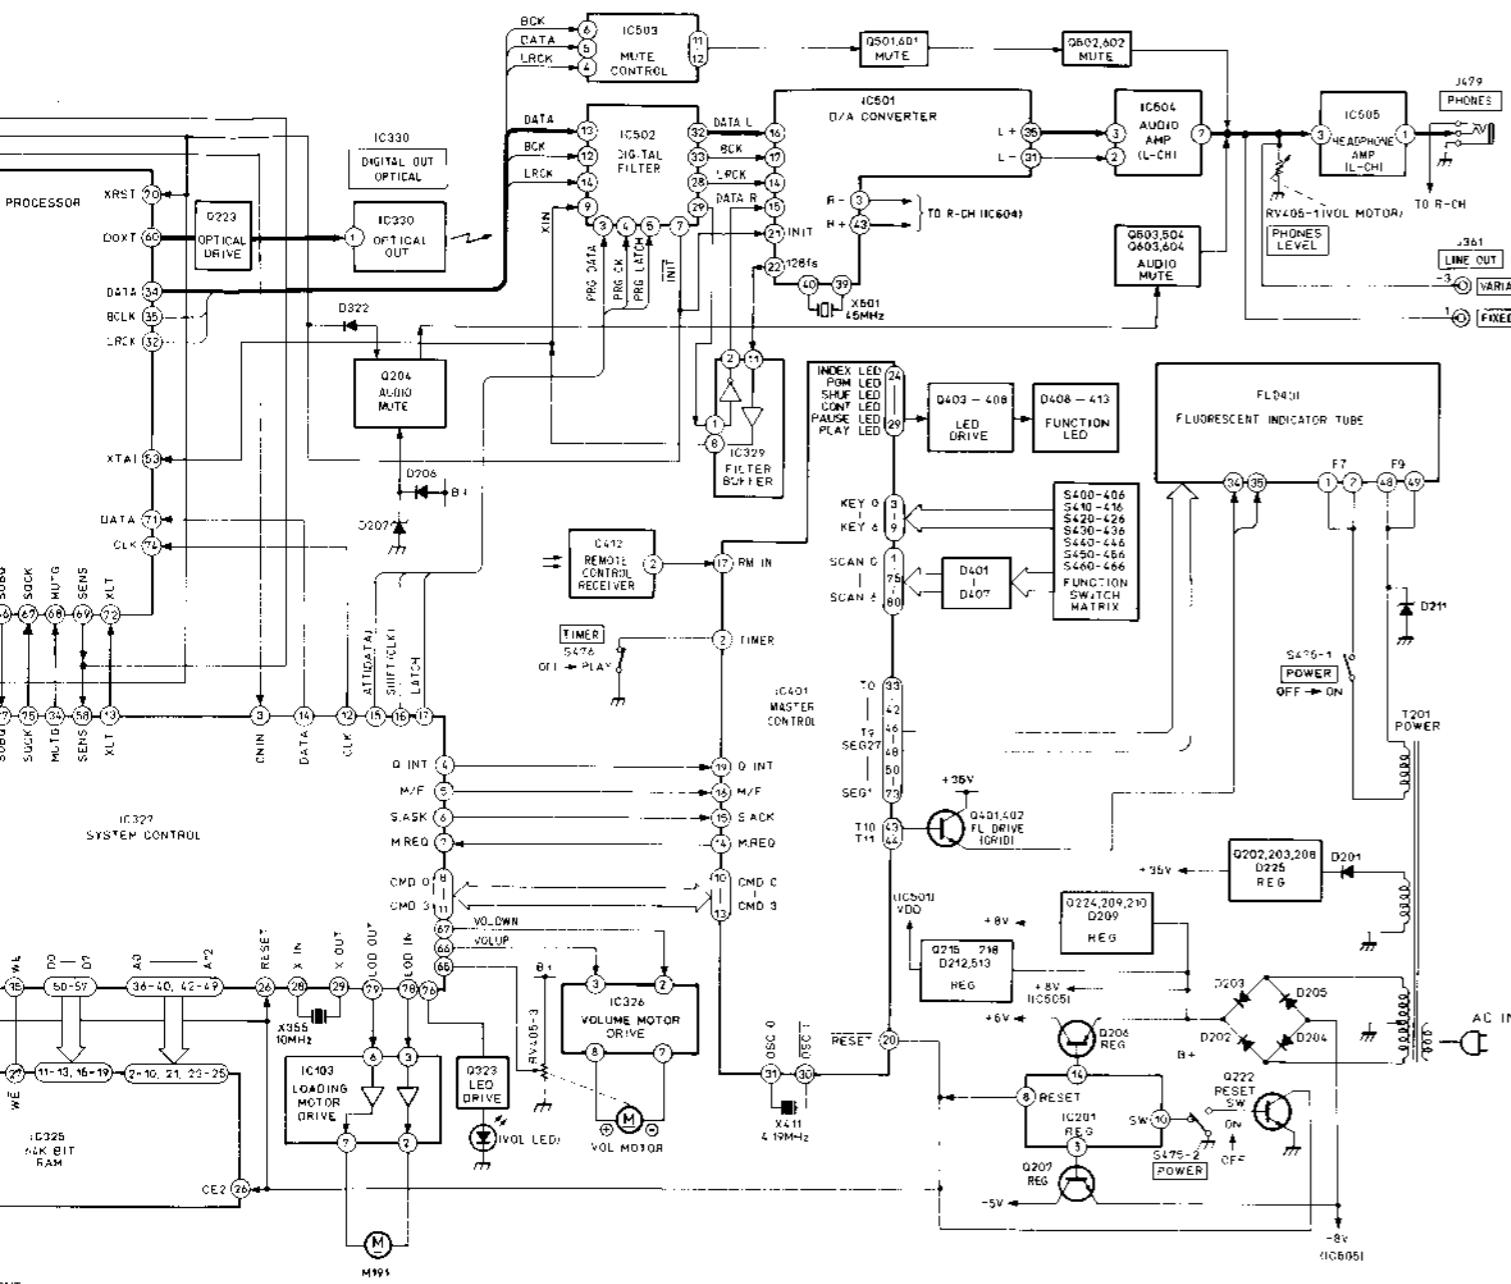

MC-Service

**FLUORESCENT DISPLAY TUBE FLD401 (1-519-622-11)**

GRID INDICATOR

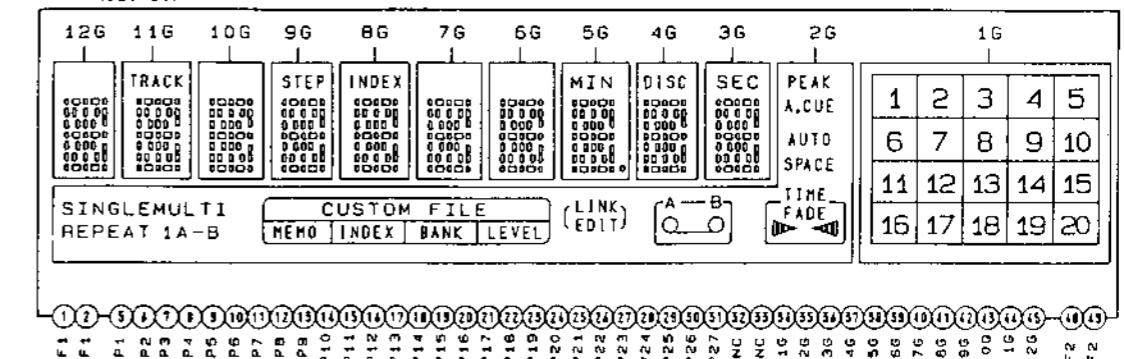


### ANODE CONNECTION

	12G	11G	10G	9G	8G	7G	6G	5G	4G	3G	2G	1G
P1	a	a	a	a	a	a	a	a	a	a	REPEAT	1
P2	b	b	b	b	b	b	b	b	b	b	1	2
P3	c	c	c	c	c	c	c	c	c	c	A-	3
P4	d	d	d	d	d	d	d	d	d	d	B	4
P5	e	e	e	e	e	e	e	e	e	e	A.CUE	5
P6	f	f	f	f	f	f	f	f	f	f	AUTO SPACE	6
P7	g	g	g	g	g	g	g	g	g	g	SINGLE	7
P8	h	h	h	h	h	h	h	h	h	h	MULTI	8
P9	i	i	i	i	i	i	i	i	i	i	CUSTOM FILE	9
P10	j	j	j	j	j	j	j	j	j	j	MEMO	10
P11	k	k	k	k	k	k	k	k	k	k	INDEX	11
P12	l	l	l	l	l	l	l	l	l	l	BANK	12
P13	m	m	m	m	m	m	m	m	m	m	LEVEL	13
P14	n	n	n	n	n	n	n	n	n	n	LINK	14
P15	o	o	o	o	o	o	o	o	o	o	EDIT	15
P16	p	p	p	p	p	p	p	p	p	p	-	16
P17	q	q	q	q	q	q	q	q	q	q	A	17
P18	r	r	r	r	r	r	r	r	r	r	B	18
P19	s	s	s	s	s	s	s	s	s	s	Q.D	19
P20	t	t	t	t	t	t	t	t	t	t	TIME	20
P21	u	u	u	u	u	u	u	u	u	u	FADE	-
P22	v	v	v	v	v	v	v	v	v	v	>	-
P23	w	w	w	w	w	w	w	w	w	w	<	-
P24	x	x	x	x	x	x	x	x	x	x	-	-
P25	y	y	y	y	y	y	y	y	y	y	-	
P26	-	TRACK	-	STEP	INDEX	-	-	MIN	DISC	SEC	PEAK	▷
P27	-	-	-	-	-	-	-	O	-	-	-	-

## 4-3. PRINTED WIRING BOARDS • See page 22 for Semiconductor Lead Layouts.


• Semiconductor Location

Ref. No.	Location
D101	B-12
D201	G-8
D202	E-9
D203	E-9
D204	E-9
D205	E-9
D206	C-6
D207	C-6
D209	G-9
D210	G-6
D211	G-8
D212	E-6
D214	E-4
D225	G-7
D322	D-6
D401	D-19
D402	D-19
D403	D-19
D404	D-19
D405	D-19
D406	D-18
D407	H-17
D408	D-20
D409	D-19
D410	D-18
D411	D-18
D412	B-18
D413	I-16
D501	D-3
D513	E-6
D601	E-3
IC101	C-11
IC102	B-11
IC103	B-11
IC201	F-7
IC325	H-7
IC326	G-5
IC327	I-6
IC328	I-4
IC329	F-5
IC350	B-4
IC401	H-16
IC412	J-23
IC501	E-5
IC502	G-4
IC503	E-3
IC504	C-5
IC505	B-7
IC604	C-4
Q101	D-11
Q202	G-7
Q203	G-8
Q204	C-6
Q206	F-7
Q207	F-7
Q208	G-8
Q209	G-9
Q210	G-9
Q215	E-6
Q216	E-6
Q217	D-7
Q218	D-7
Q222	H-8
Q223	C-3
Q224	G-9
Q323	H-5
Q401	I-17
Q402	I-17
Q403	D-18
Q404	D-18
Q405	D-17
Q406	D-18
Q407	D-18
Q408	I-15
Q501	D-3
Q502	B-4
Q503	B-5
Q504	B-5
Q601	E-3
Q602	B-4
Q603	B-4
Q604	B-4

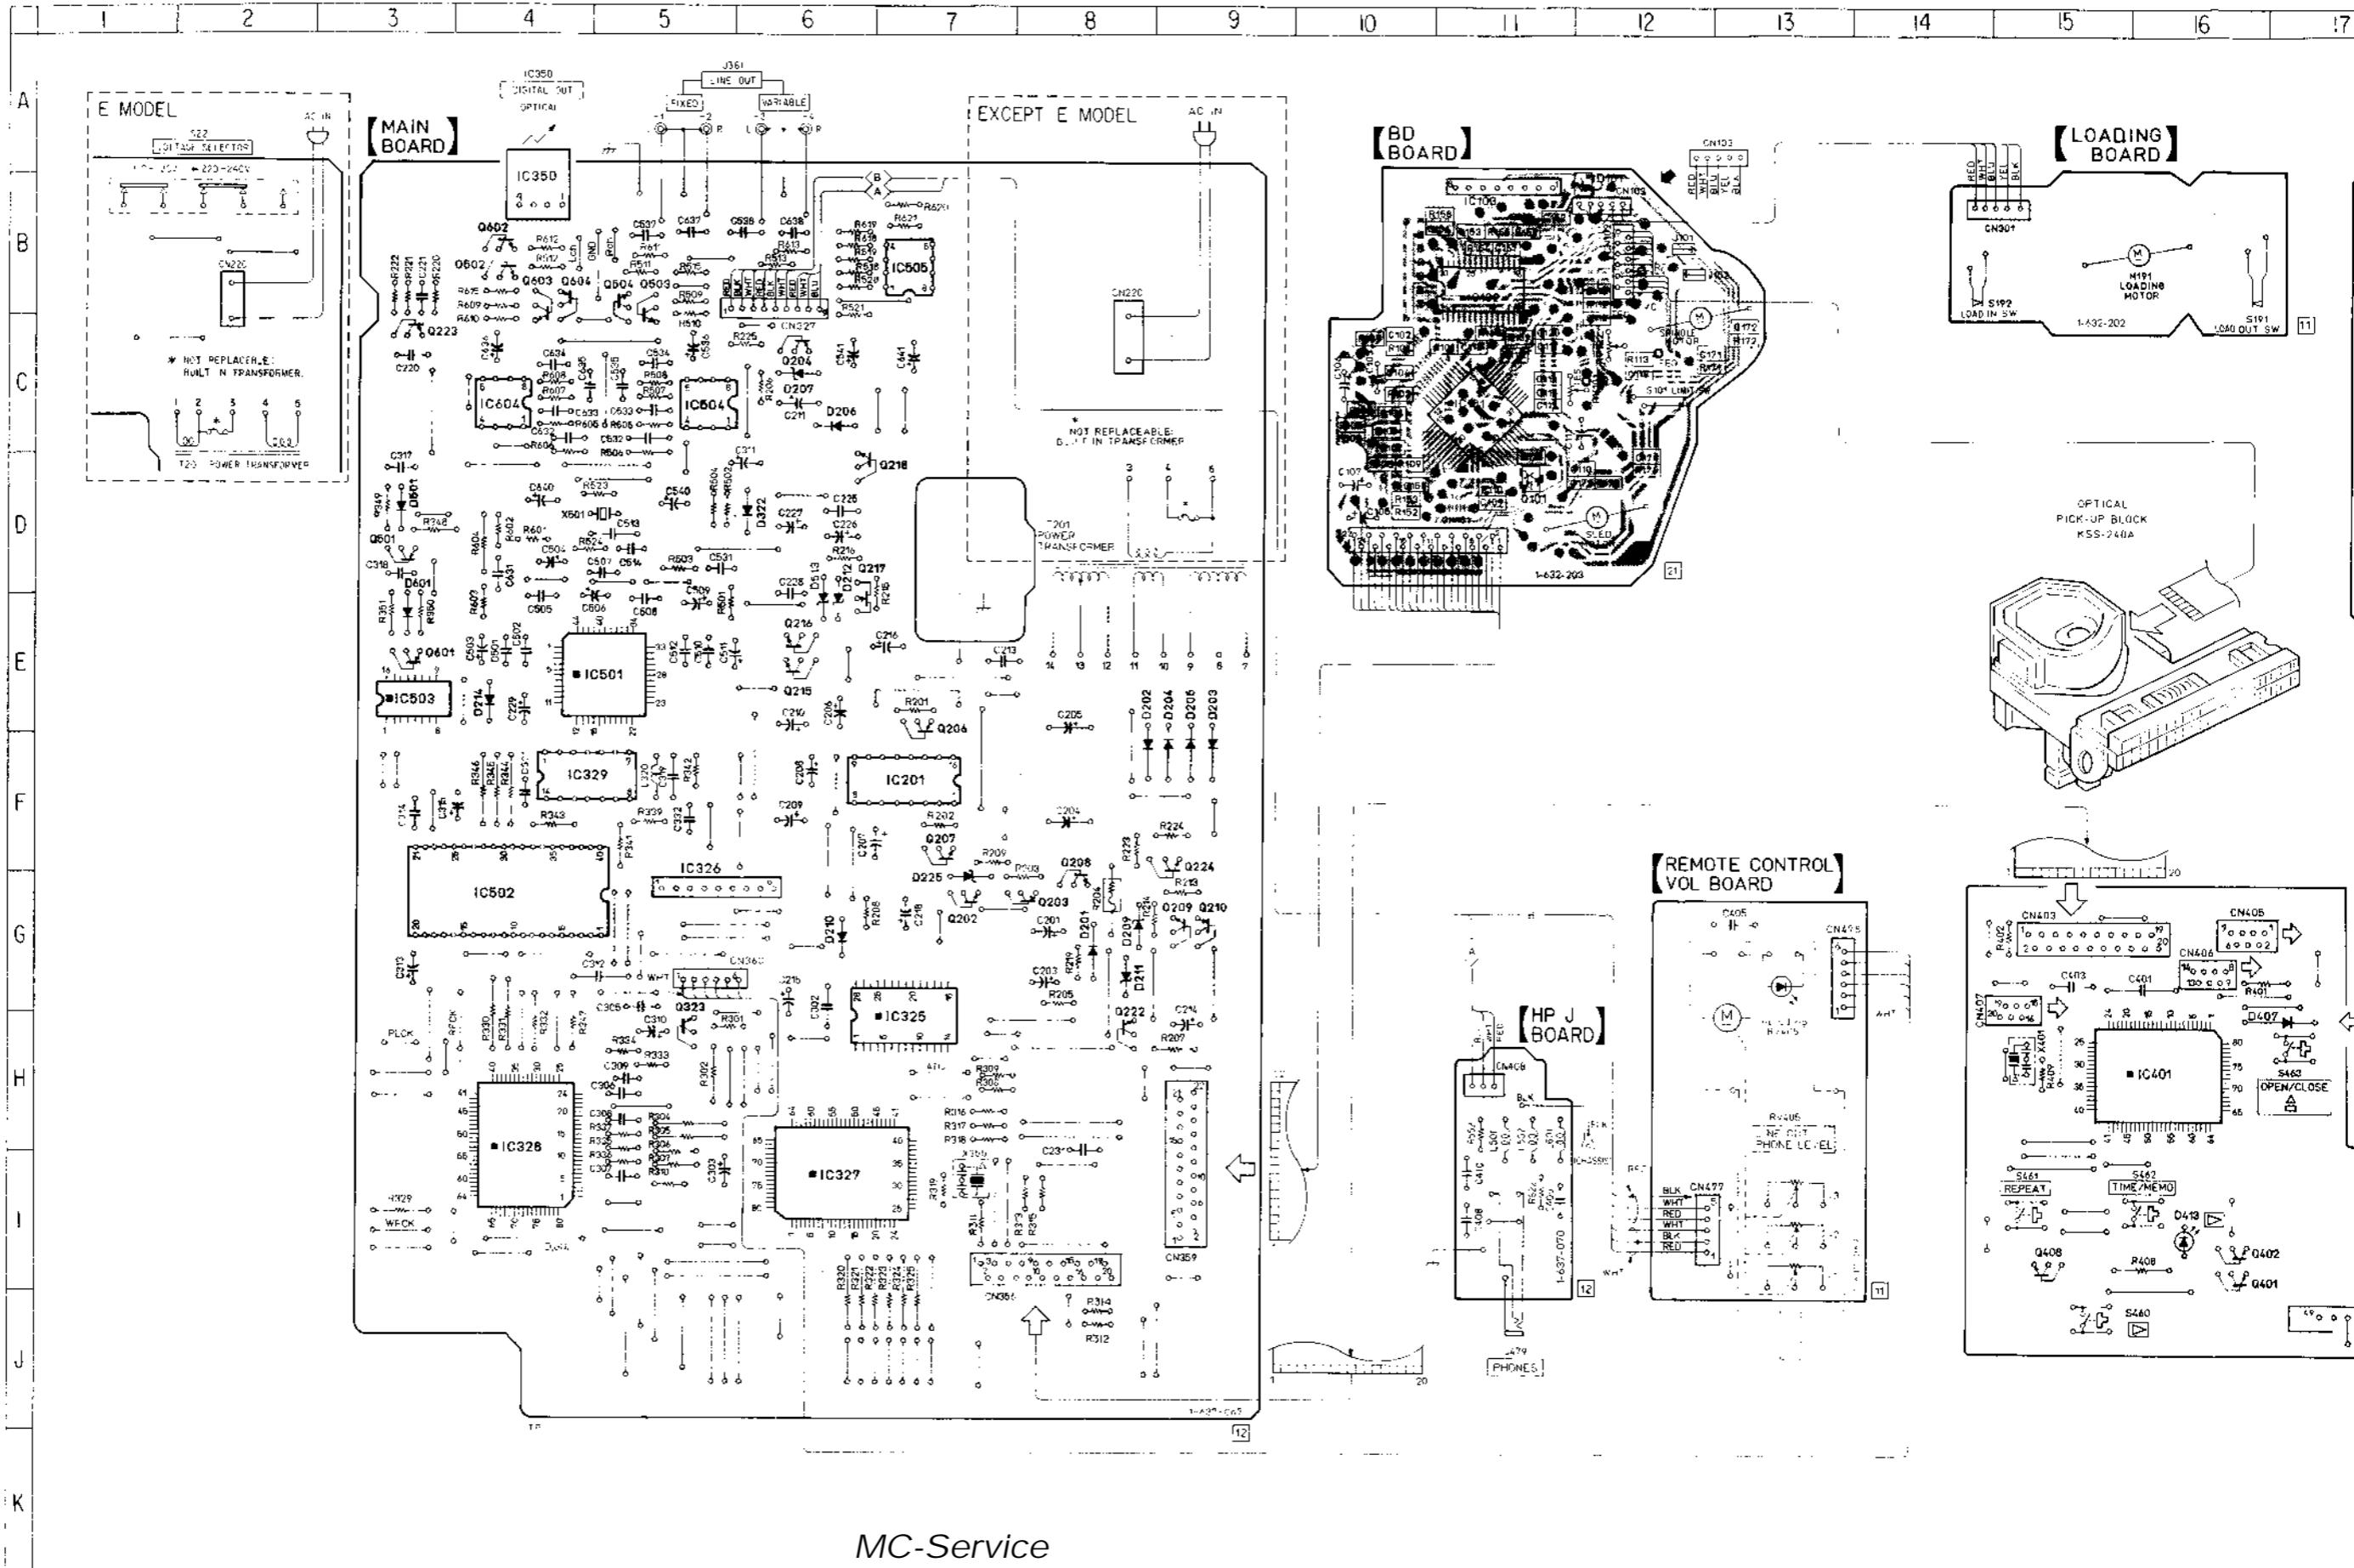

MC-Service


7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24

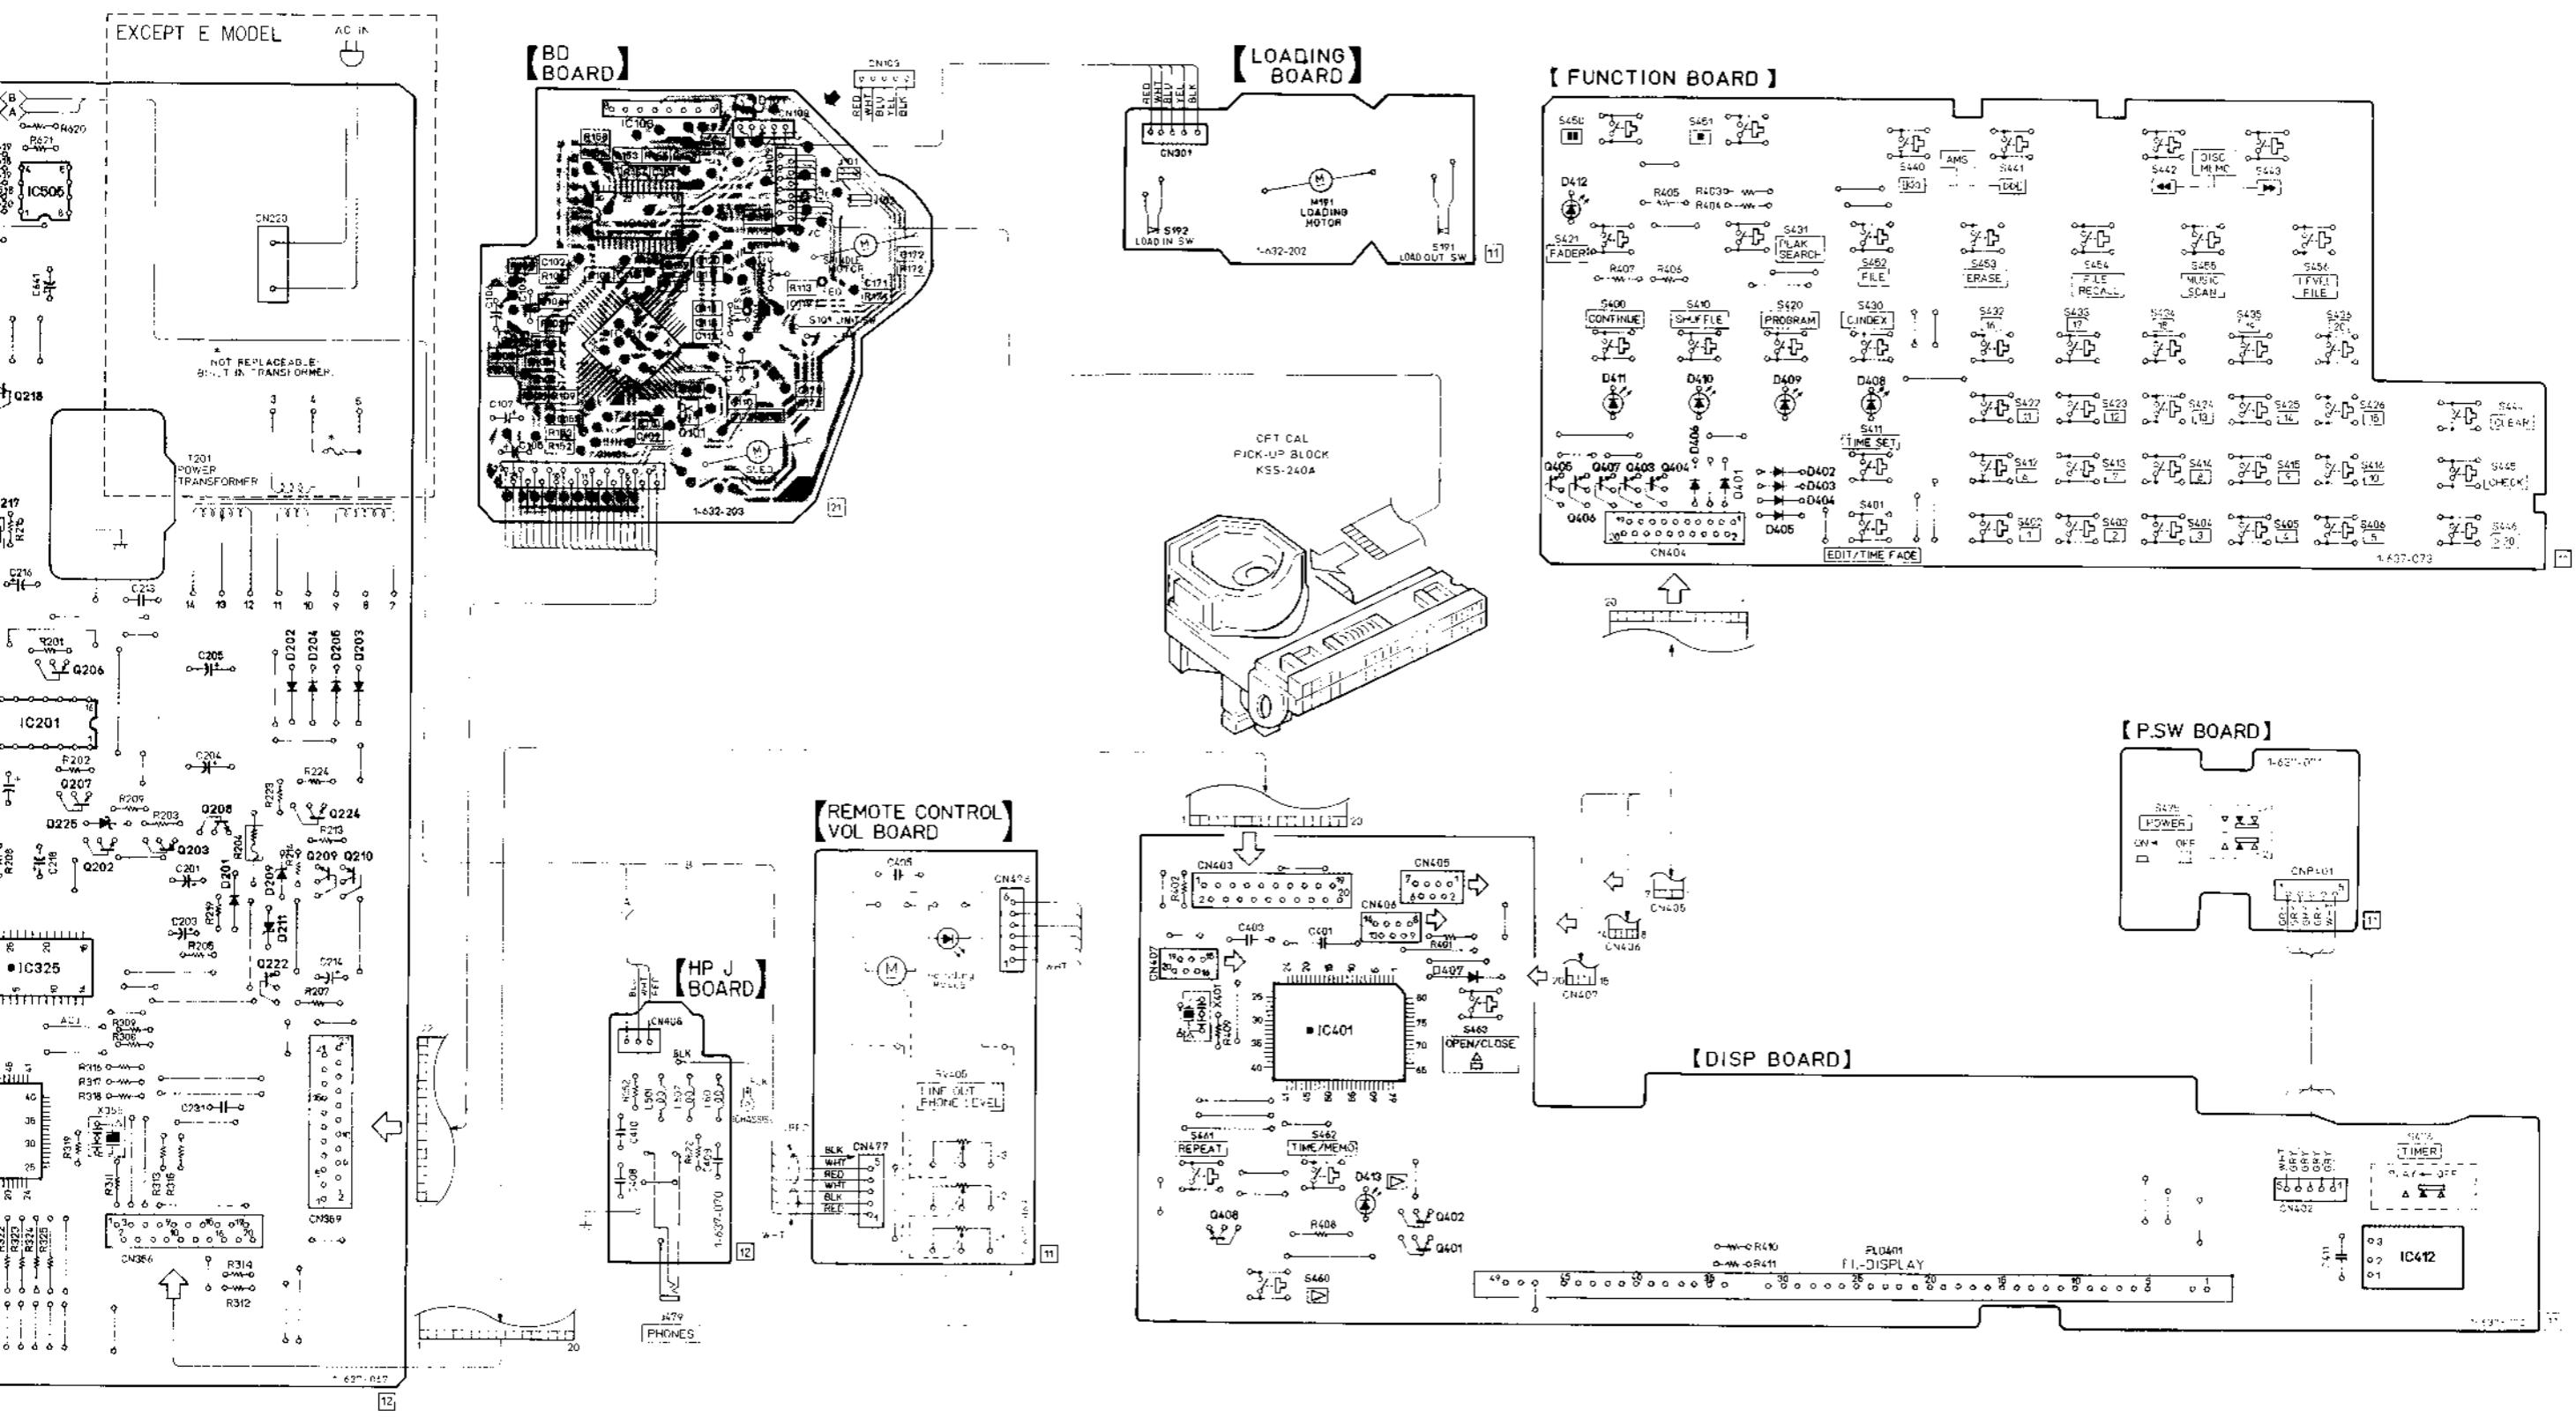


**Note on Mounting Diagram:**


- ○ : parts extracted from the component side.
- ■ : parts mounted on the conductor side.
- ● : Through hole.
- □ : Pattern on the side which is seen.
- □ : Pattern of the rear side.

MC-Service

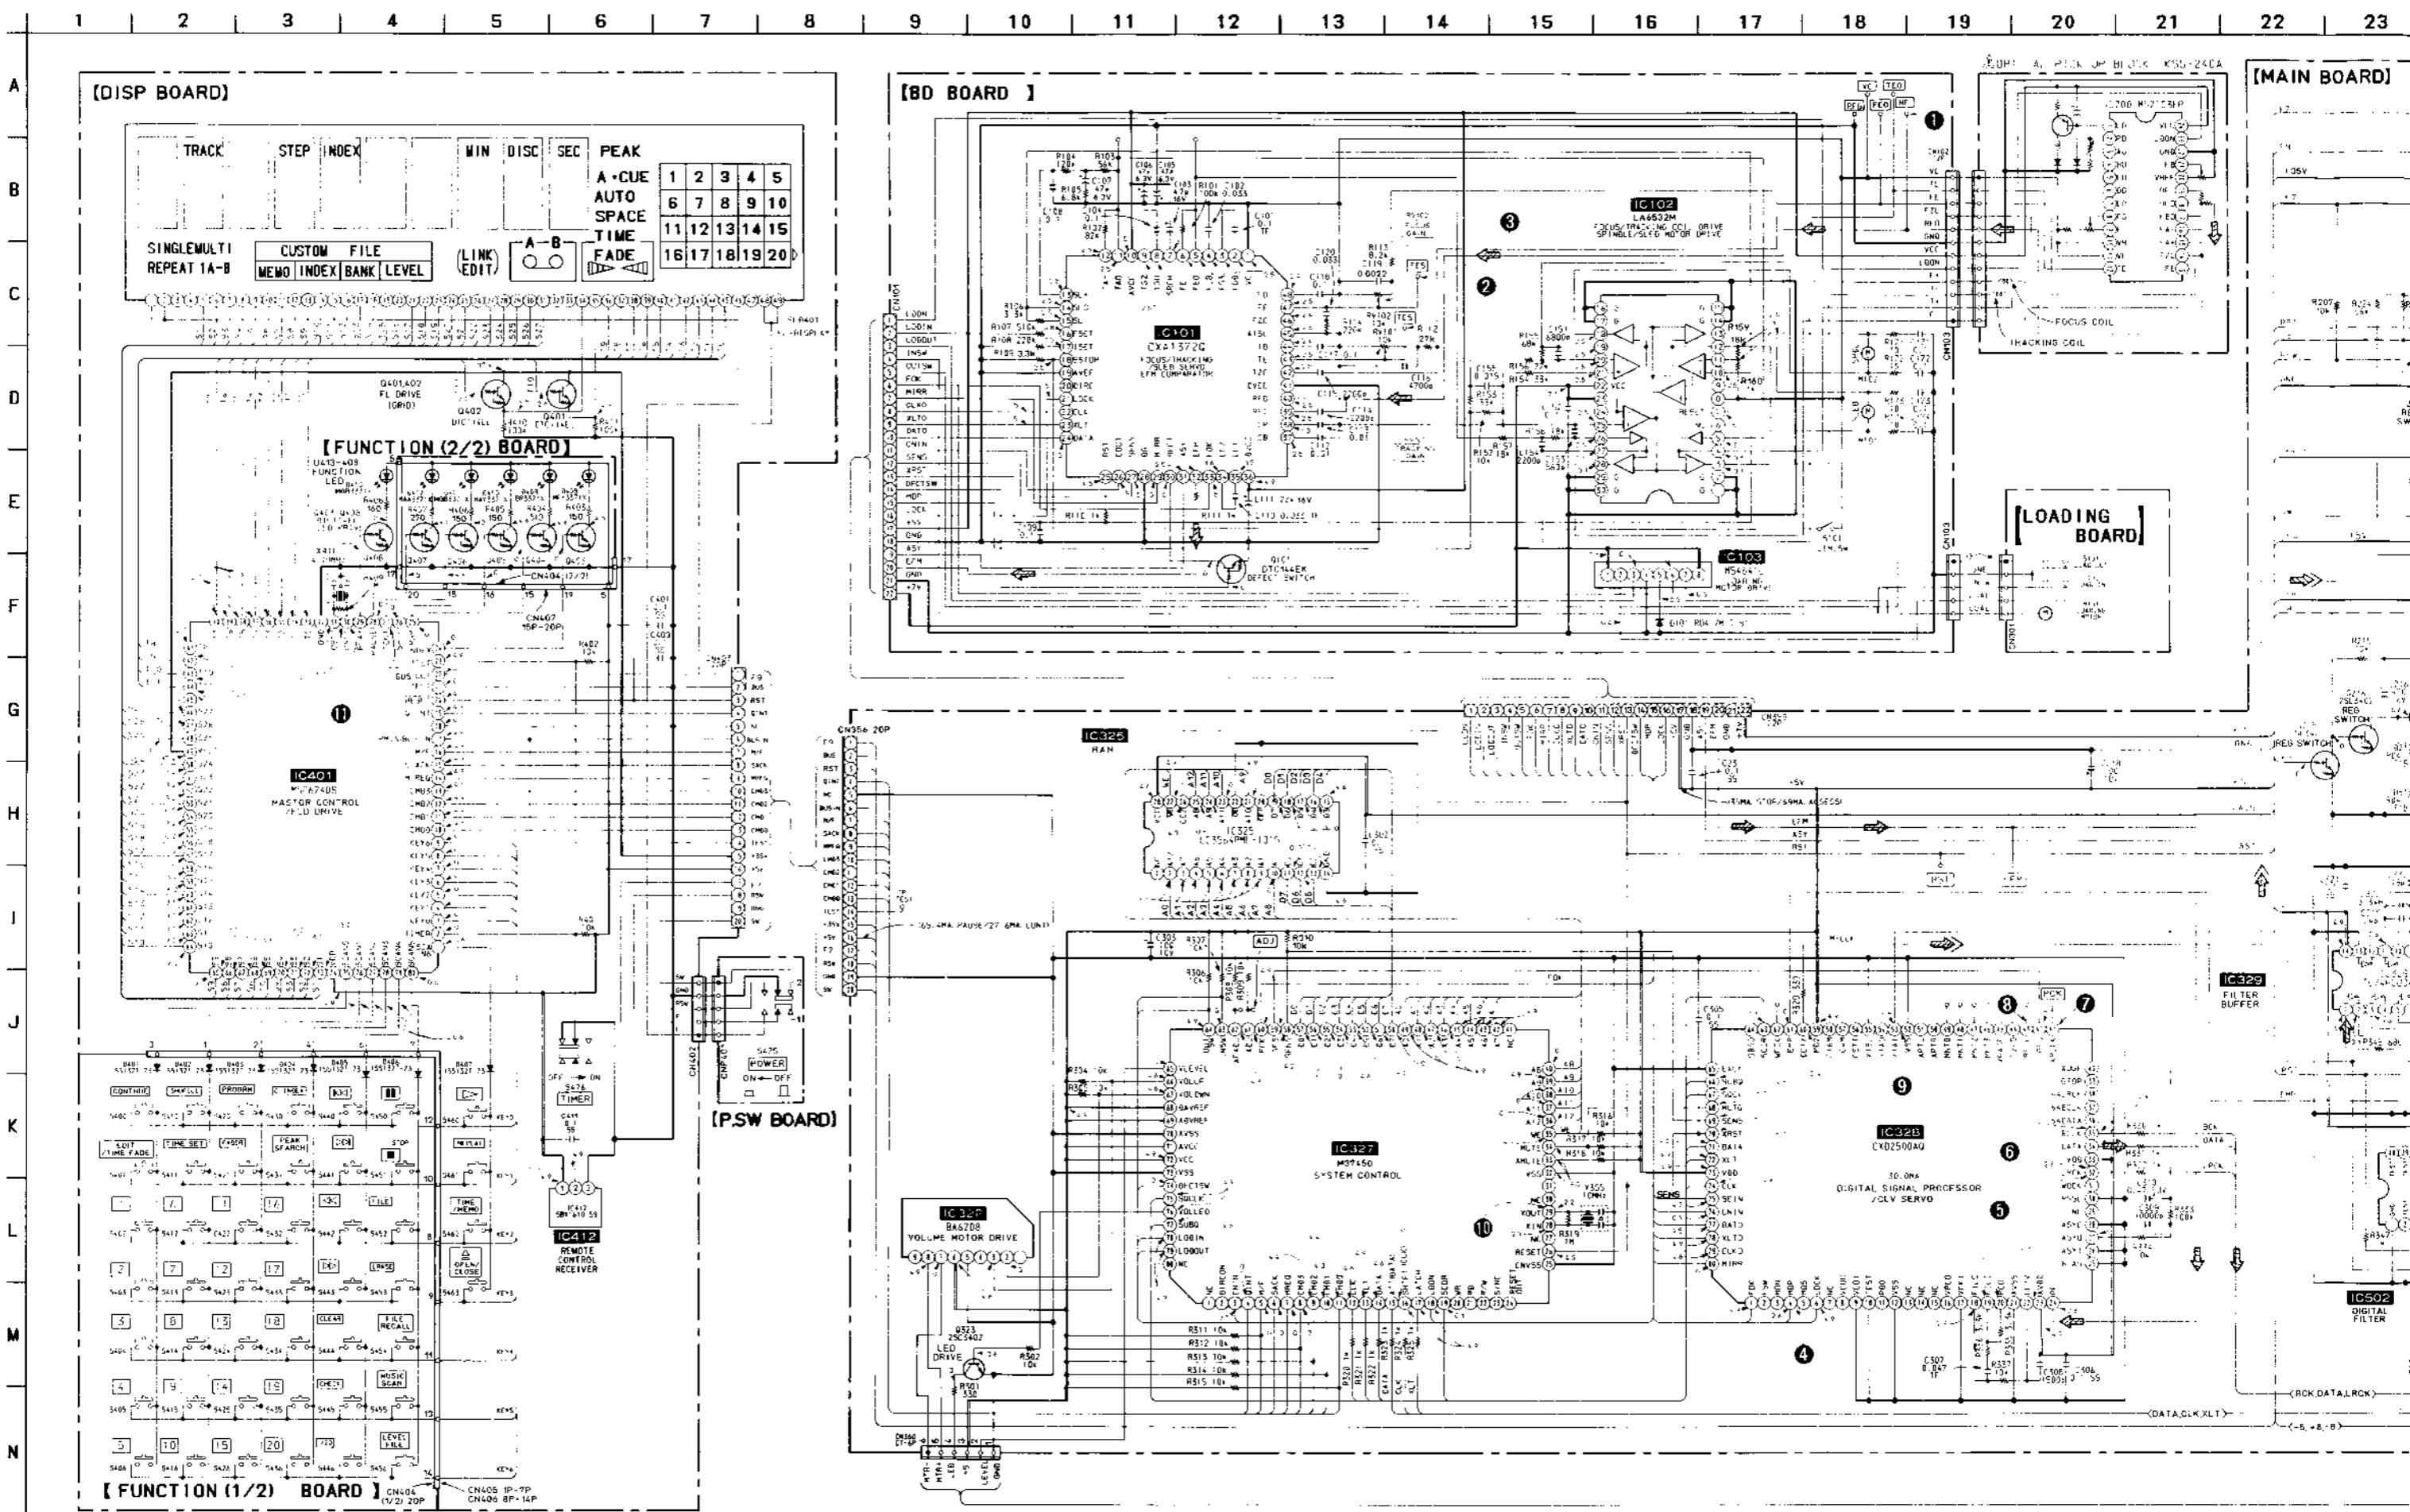


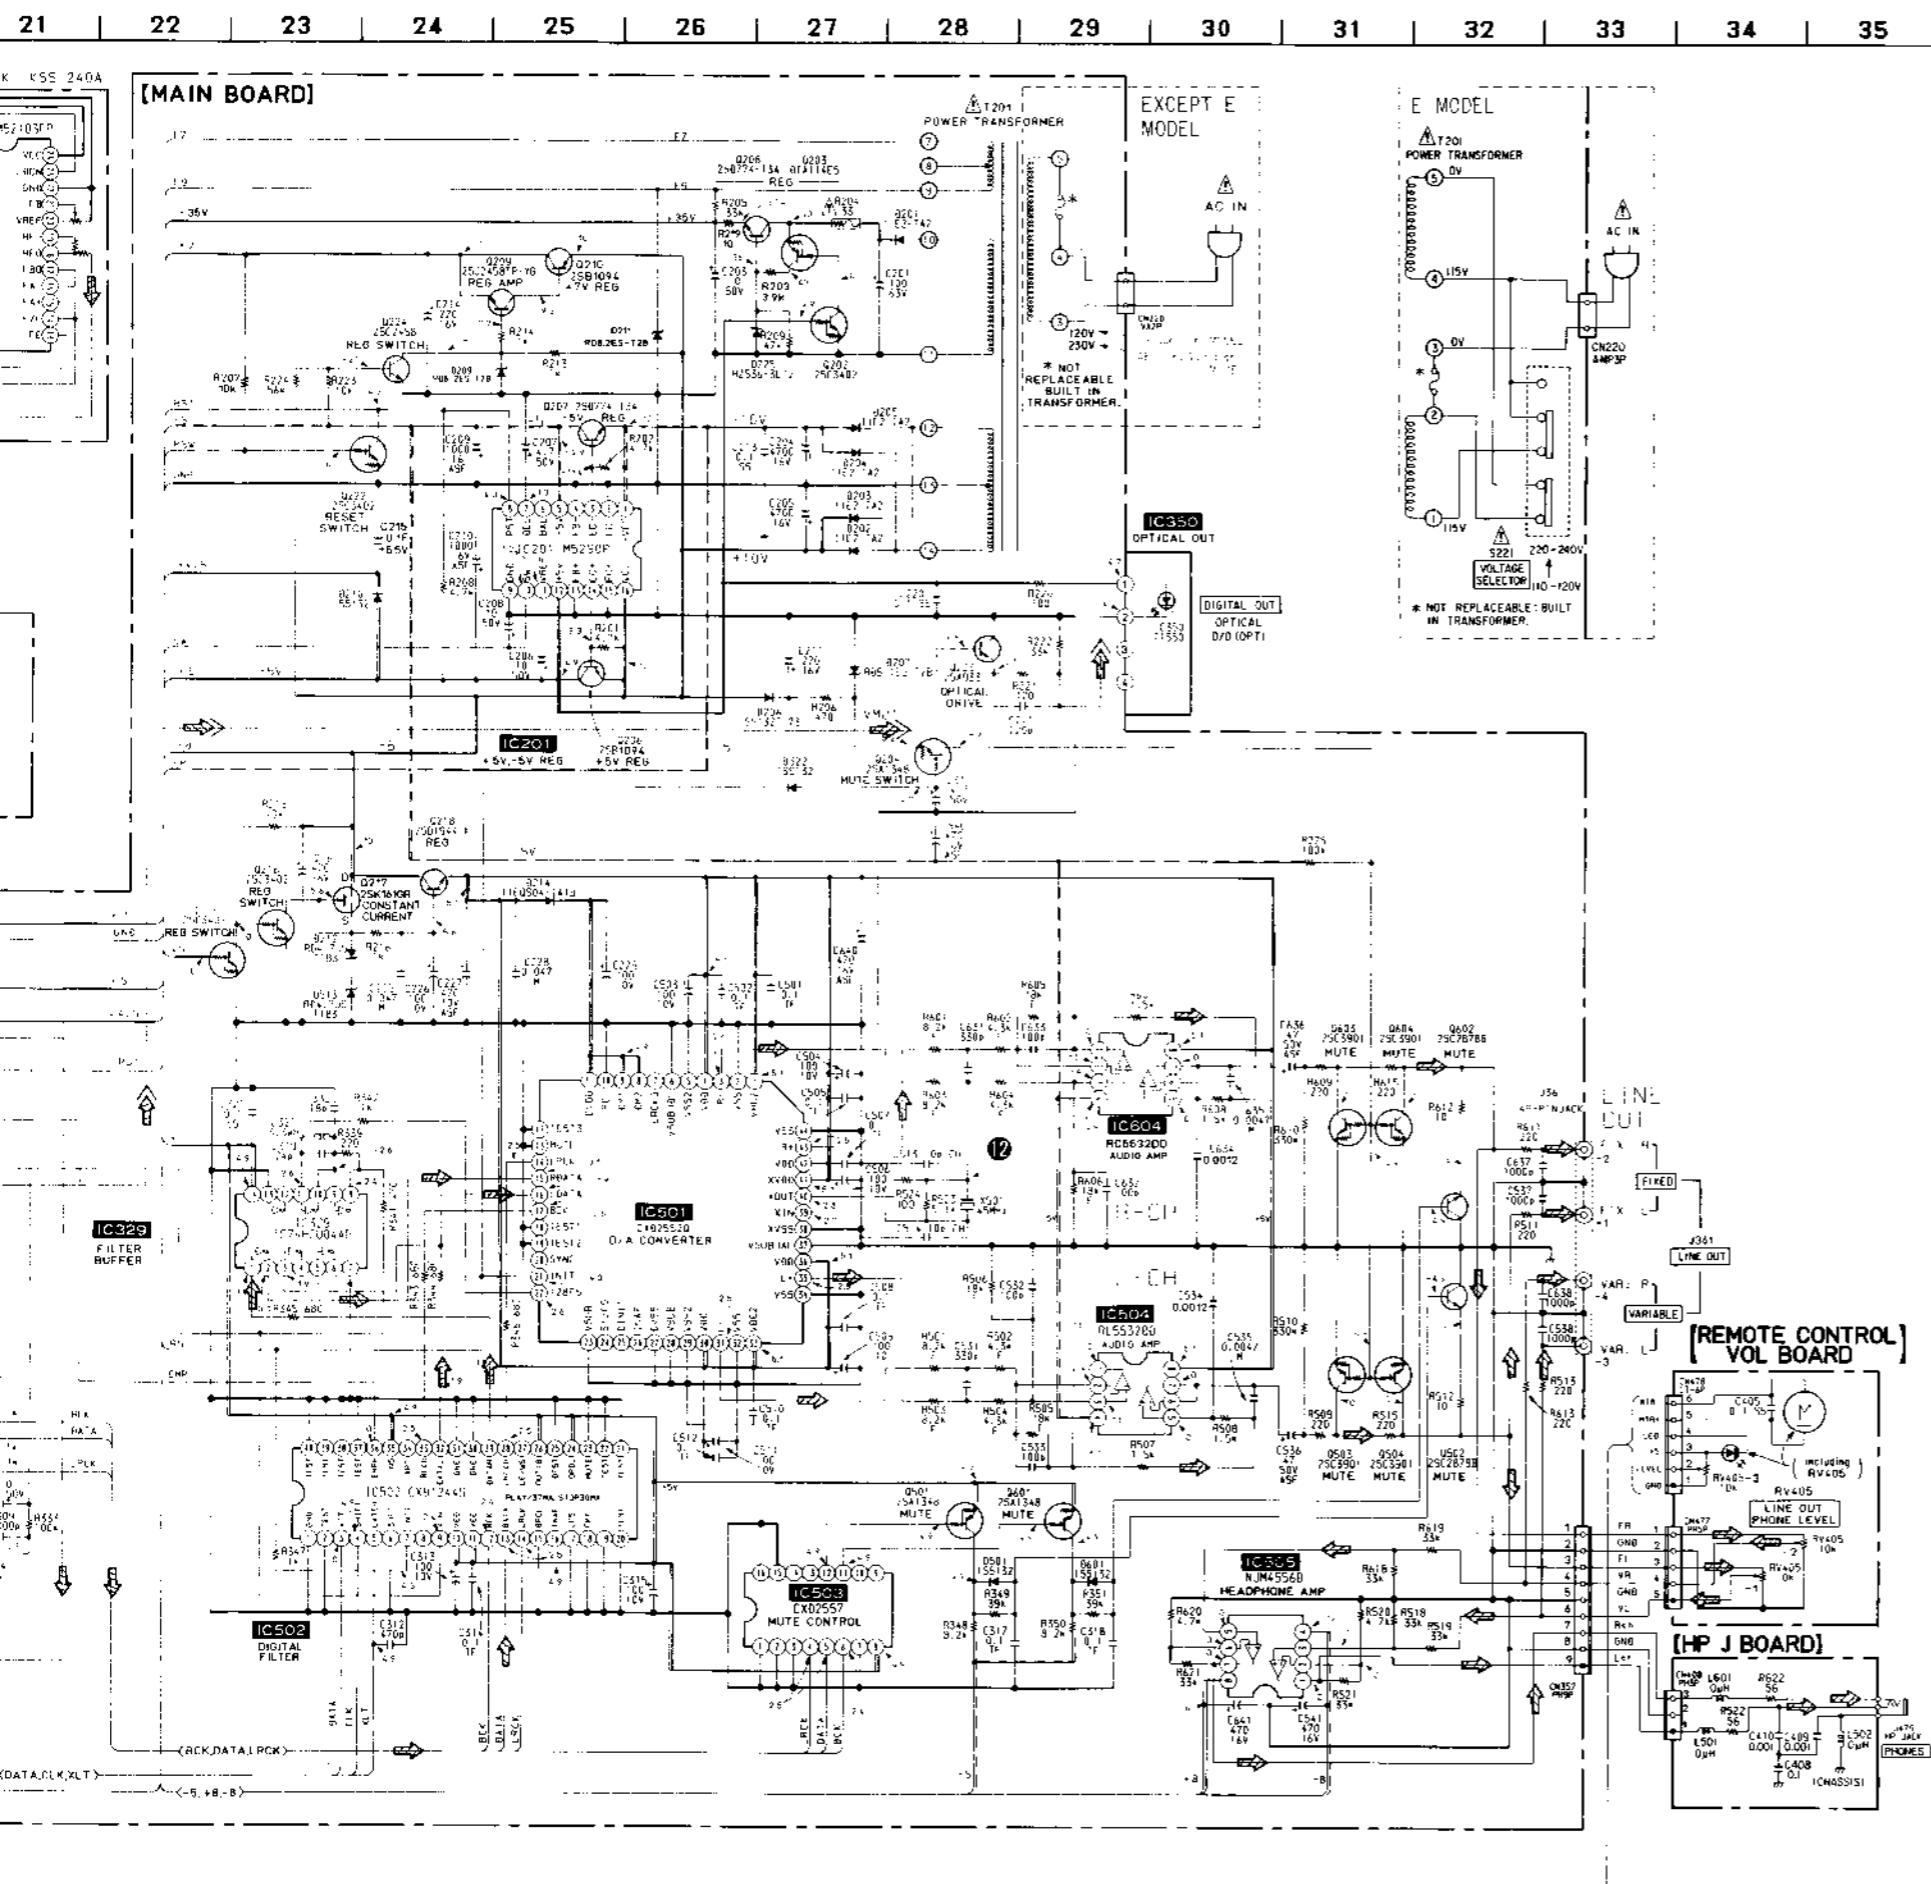


## • IC BLOCK DIAGRAM

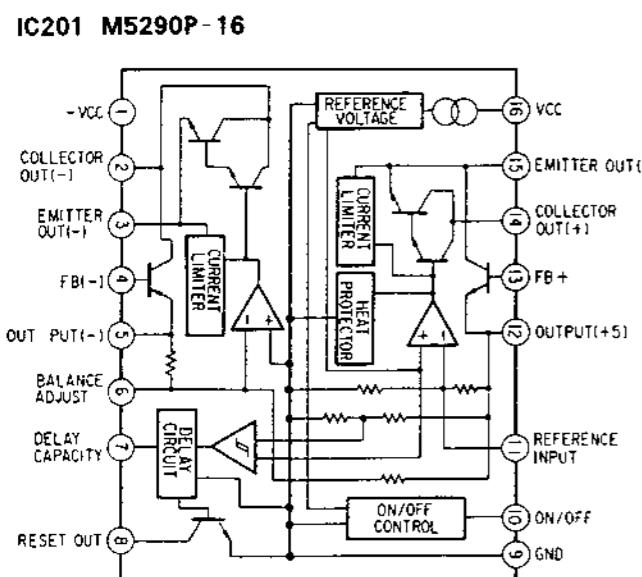


IC502 CXD1244S

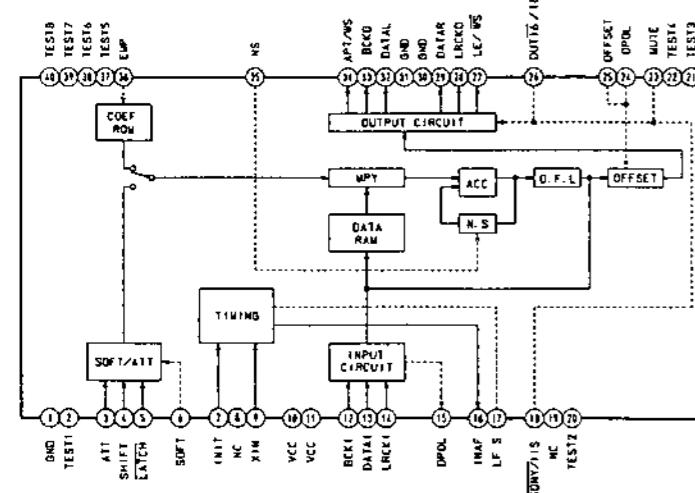


IC503 CXD2557M

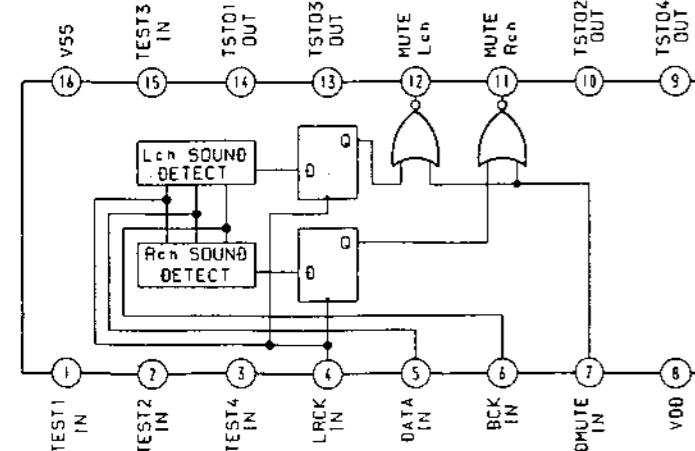


IC328 CXD2500A

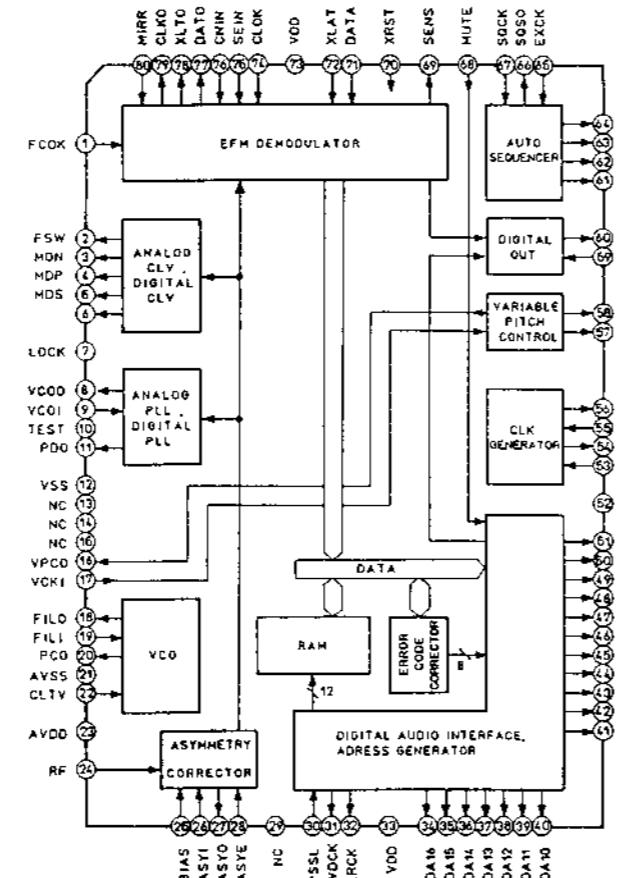


IC501 CXD2552Q-

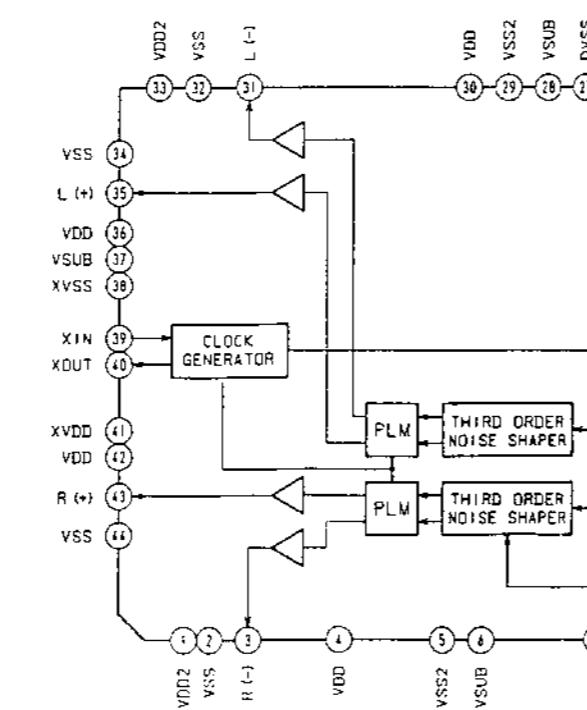

IC101 CXA1372C

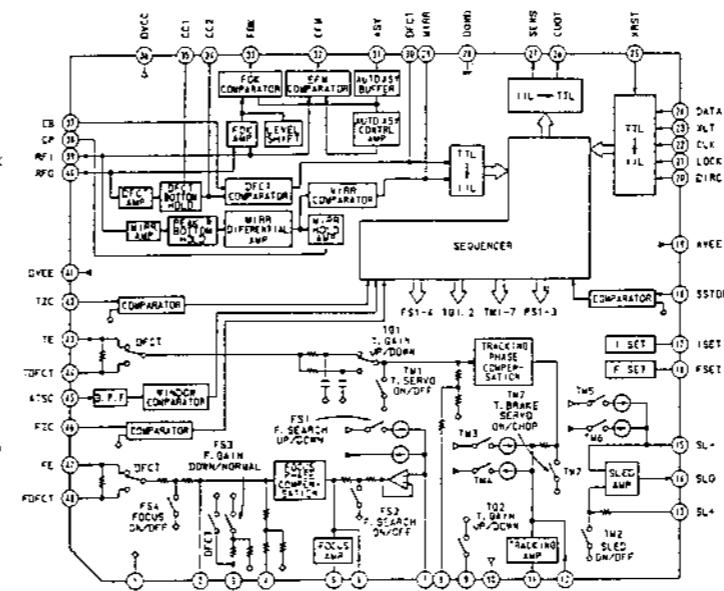

IC326 BA6208

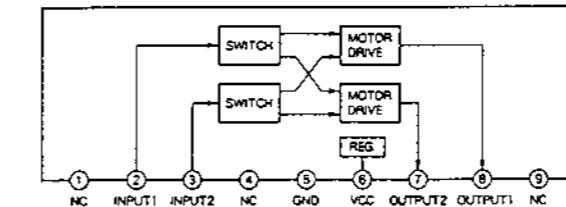

- Semiconductor Lead Layouts

**DTA114ES  
DTC114EF  
DTC114ES  
DTC143TS**

HZS36-3L  
RD4.7JS-B3  
RD5.1ES-B2  
RD8.2ES-B2  
1SS120  
11EQS04

**HZS36-3L**  
**RD4.7JS-B3**  
**RD5.1ES-B2**  
**RD8.2ES-B2**  
**1SS120**  
**11EQS04**



## 10E2

RD4.7M-B1

**BR3371X**  
**MAA3371X**  
**MAY3371X - M-177**  
**MBG3371X - J69K**  
**MGB3371X - 14**  
**MPY3371X**

## **SECTION 5**

### **EXPLODED VIEWS**

**NOTE :**


- XX, - X mean standardized parts, so they may have some differences from the original one.
  - Color Indication of Appearance Parts Example : KNOB, BALANCE (WHITE)...(RED)
 

↑	↑
Parts color	Cabinet's color
  - Items marked "\*" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
  - The mechanical parts with no reference number in the exploded views are not supplied.
  - Hardware (# mark) list is given in the last of this parts list.

The components identified by mark  or dotted line with mark  are critical for safety.  
Replace only with part number specified.


Les composants identifiés par une marque  sont critiques pour la sécurité.  
Ne les remplacer que par une pièce portant le numéro spécifié.

## **5-1. OVERALL SECTION 1**

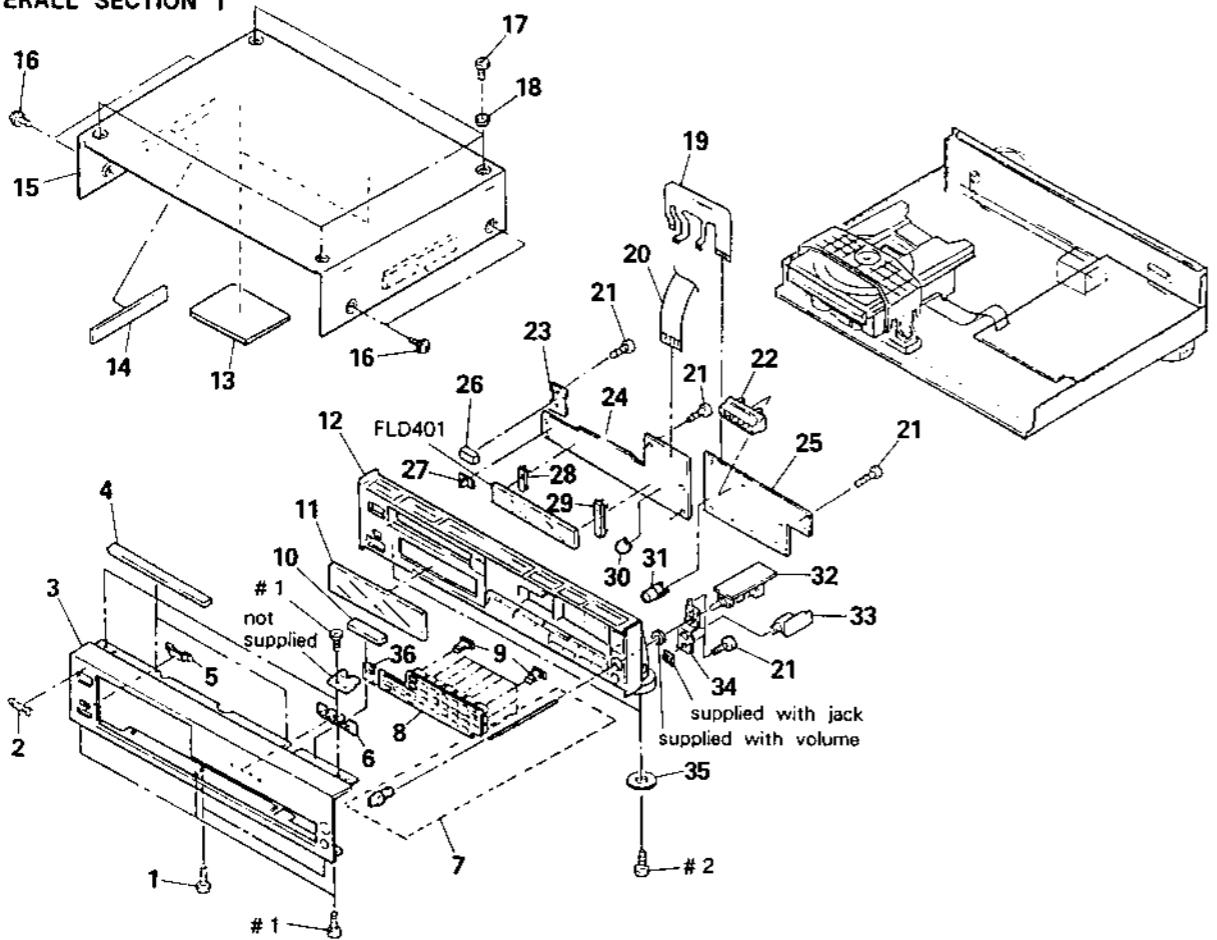

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description
1	3-703-685-21	SCREW (+BV 3X8)		16	3-704-366-01	SCREW (CASE) (M3X8)
2	4-908-848-01	EMBLEM, SONY		17	3-721-187-01	SCREW (3X8)
3	4-941-239-11	PANEL (FRONT) (AEP, UK, E, AUS)		18	4-928-025-11	ESCUITCHEON (TOP PLATE)
	4-941-239-01	PANEL (FRONT) (US, Canadian)		19	1-535-874-11	JUMPER, FILM (WITH TERM)
4	* 4-929-557-01	CUSHION (PANEL)		20	1-590-217-11	WIRE, FLAT TYPE (20 CORE)
5	4-933-236-01	PLATE, RAY CATCHER		21	4-928-635-01	SCREW, +BV (2.6X8) TAPP
6	4-941-254-01	INDICATOR (MODE)		22	* 4-941-259-01	HOLDER (LED/M)
7	A-4604-698-A	KNOB (HP) ASSY		23	* 1-637-071-11	P. SW BOARD
8	* 4-941-249-01	GUIDE, KNOB		24	* 1-637-072-11	DISP BOARD
9	4-941-250-01	BUTTON (MC/A)		25	* 1-637-073-11	FUNCTION BOARD
	4-941-251-01	BUTTON (MC/C)		26	4-922-921-01	BUTTON (POWER)
	4-941-252-01	BUTTON (MC/D)		27	4-922-518-11	KNOB (TIMER)
	4-941-253-01	BUTTON (MC/E)		28	* 4-941-171-01	HOLDER (L)
10	9-911-845-XX	CUSHION (25)		29	* 4-941-256-01	HOLDER (R)
11	4-941-246-01	PLATE, INDICATION		30	* 4-941-257-01	HOLDER (LED/PL)
12	X-4941-043-1	PANEL (SUB) ASSY (AEP, UK, E, AUS)		31	* 4-941-258-01	HOLDER (LED/PA)
	X-4941-342-1	PANEL (SUB) ASSY (US, Canadian)		32	* 1-637-069-11	REMOTE CONTROL BOARD
13	* 4-922-943-01	DUMPER		33	* 1-637-070-11	HP BOARD
14	* 4-929-561-01	CUSHION (CASE)		34	4-941-255-01	BRACKET (HP)
15	4-934-008-01	CASE		35	4-923-836-11	CUSHION
				36	* 4-943-086-01	GUIDE (B), KNOB
				FLD401	1-519-622-11	INDICATOR TUBE, FLUORESC


## 5-2. OVERALL SECTION 2

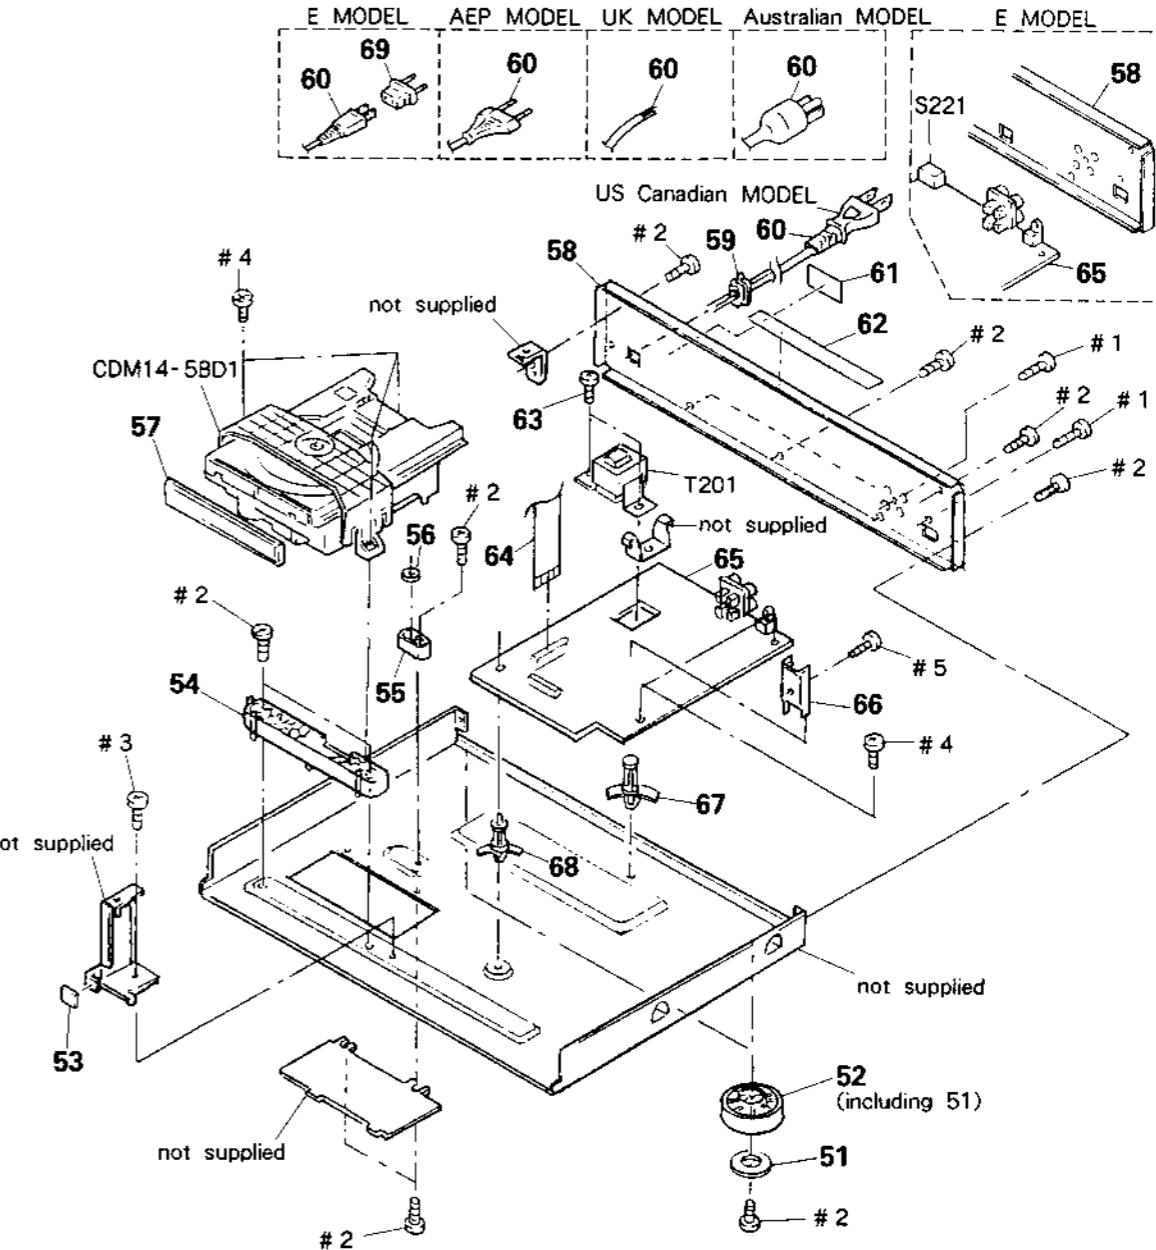

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
51	4-923-836-11	CUSHION		60	§ 1-558-945-21	CORD, POWER (POLAR, SPT-1) (US, Canadian)	
52	X-3304-938-2	FOOT ASSY (AEP, UK, E, AUS)		§ 1-558-946-21	CORD, POWER (POLAR, SPT-1) (UK)		
	X-4885-950-1	FOOT ASSY (US, Canadian)		§ 1-574-558-31	CORD, POWER (WITH CONNECTOR) (AUS)		
53	9-911-863-XX	SPACER		§ 1-575-653-21	CORD, POWER (E)		
				§ 1-575-651-21	CORD, POWER (AEP)		
54	4-941-169-01	BASE (MD/F)		61	* 4-941-548-01	LABEL, CLASS 1 (AEP, UK, E, AUS)	
55	4-941-170-01	BASE (MD/R)		62	* 4-927-553-01	SHEET (F/P)	
56	3-580-722-11	WASHER, INSULATING		63	4-886-821-11	SCREW, S TIGHT. #PTTWH 3X6	
57	4-941-168-01	PANEL, LOADING		64	1-575-002-11	WIRE, FLAT TYPE (22 CORE)	
58	* 4-941-248-11	PANEL, BACK (US)		65	* A-4617-567-A	MAIN BOARD, COMPLETE (EXCEPT E)	
	* 4-941-248-21	PANEL, BACK (Canadian)		* A-4617-779-A	MAIN BOARD, COMPLETE (E)		
	* 4-941-248-31	PANEL, BACK (UK)		66	* 4-941-237-01	HEAT SINK	
	* 4-941-248-41	PANEL, BACK (AEP)		67	* 3-349-025-41	HOLDER, PC BOARD	
	* 4-941-248-51	PANEL, BACK (E)		68	* 4-924-098-01	HOLDER, PC BOARD	
	* 4-941-248-61	PANEL, BACK (AUS)		69	§ 1-569-007-11	ADAPTOR, CONVERSION ?P (E)	
59	* 3-703-571-11	BUSHING (S) (4516), CORD (US, Canadian, E)		S221	§ 1-571-122-11	SWITCH, VOLTAGE SELECTION	
	* 3-703-244-00	BUSHING (2104), CORD (AEP, UK, AUS)					

<p><b>Note:</b>            The components identified by mark  or dotted line with mark  are critical for safety.            Replace only with part number specified.</p>	<p><b>Note:</b>            Les composants identifiés par une marque  ou une ligne pointillée avec une marque  sont critiques pour la sécurité.            Ne les remplacer que par une pièce portant le numéro spécifié.</p>
--	--


## 5-3. MD SECTION (CDM14-5BD1)

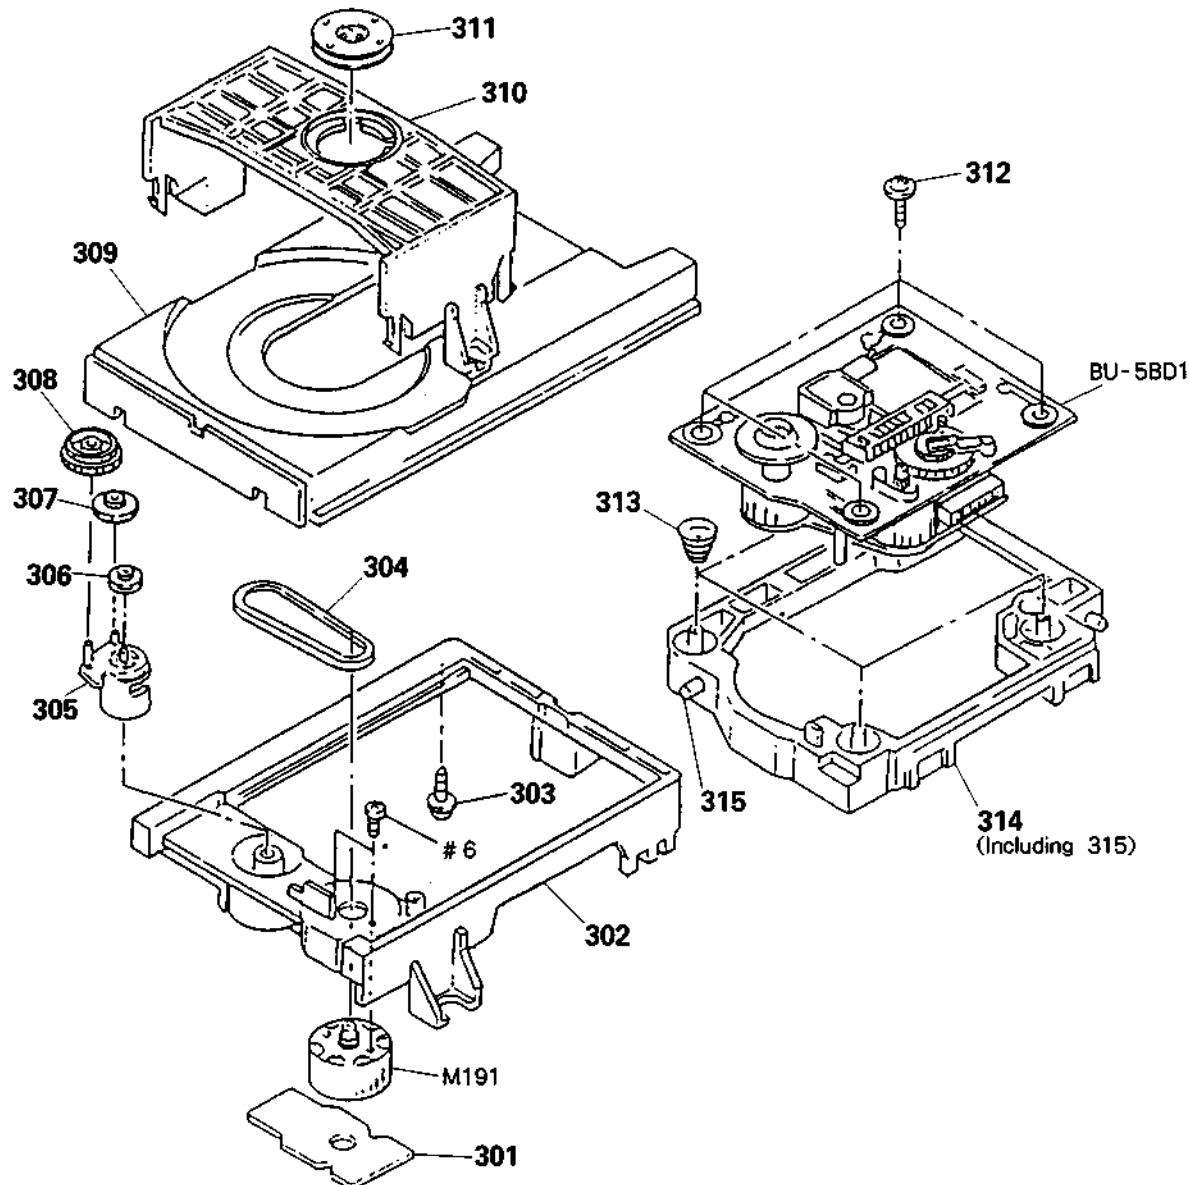

Ref. No.	Part No.	Description	Remark
301	* 1-632-202-11	LOADING BOARD	
302	4-933-111-01	CHASSIS (MD)	
303	* 4-917-583-21	BRACKET, YOKE	
304	4-927-649-01	BELT	
305	4-933-109-01	CAM	
306	4-927-651-01	PULLEY (S)	
307	4-927-628-01	GEAR (C)	
308	4-933-107-01	GEAR (PL)	

Ref. No.	Part No.	Description	Remark
309	4-933-112-01	TABLE, DISC	
310	4-933-110-01	HOLDER (MG)	
311	* 1-452-538-11	MAGNET	
312	4-933-134-01	SCREW (+PTPWH M2.6X6)	
313	4-917-541-01	SPRING (B)	
314	4-933-129-01	HOLDER (BU)	
315	4-933-108-01	SHAFT (CAM)	
M191	A-4604-363-A	MOTOR (L) ASSY	

## 5-4. OPTICAL PICK-UP BLICK (BU-5BD1)

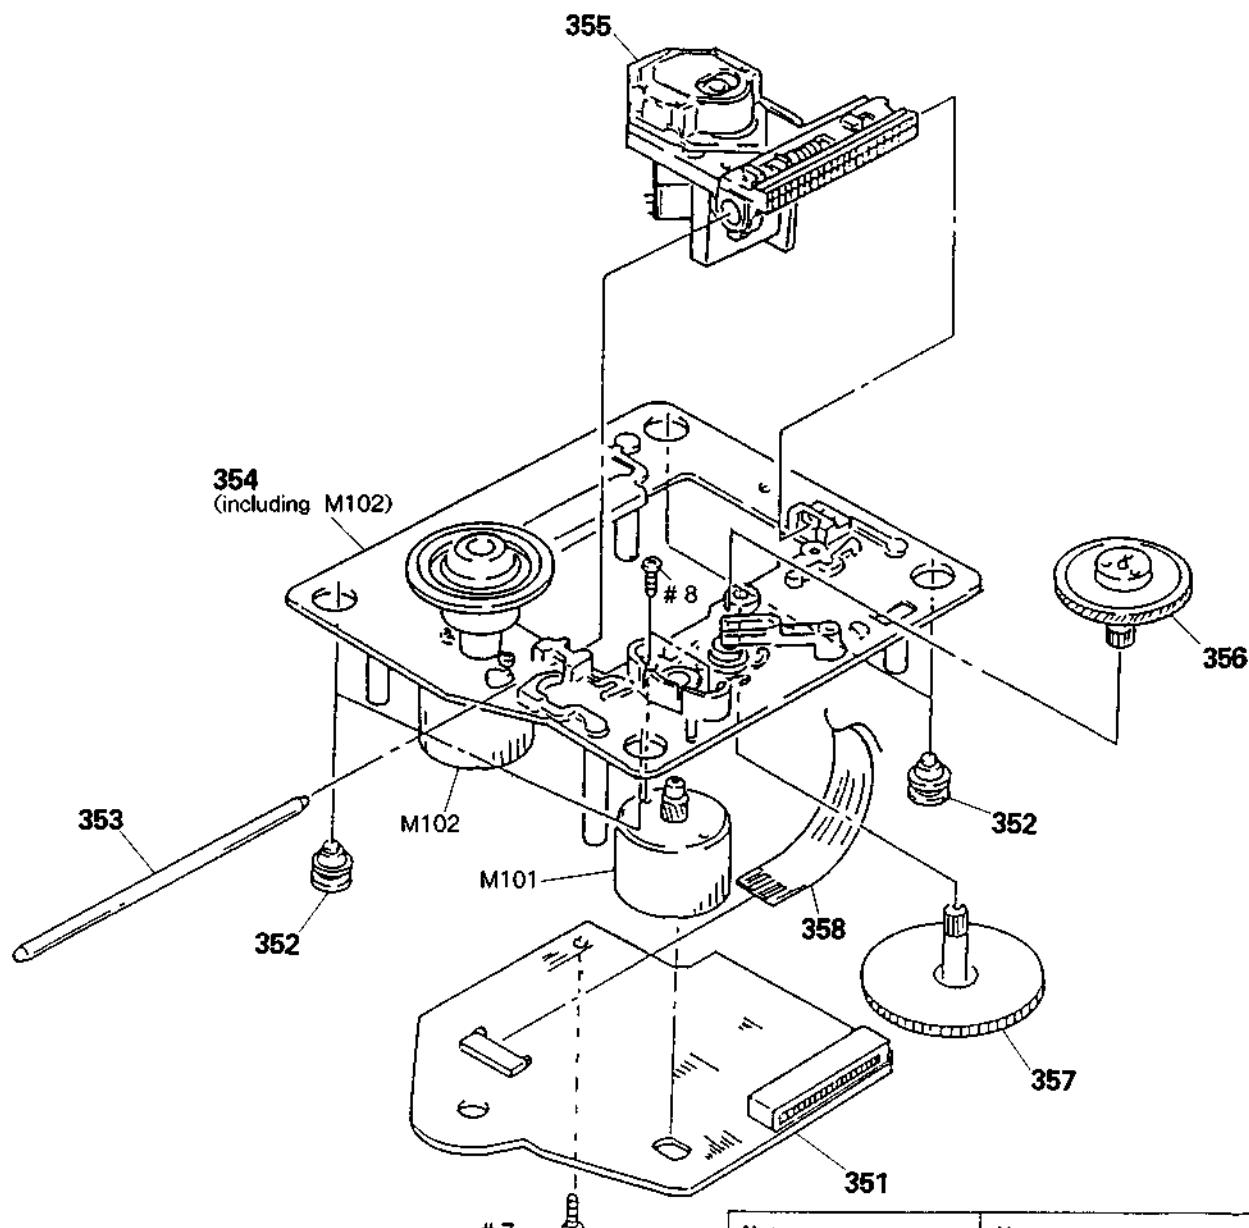

Ref. No.	Part No.	Description	Remark
351	* A-4617-161-A	BD BOARD, COMPLETE	
352	4-933-126-01	INSULATOR (A)	
353	4-912-565-01	SHAFT, SLED	
354	X-4917-523-3	BASE (OUTSERT) ASSY (M102 INCLUDING)	
355	▲ 8-848-144-11	DEVICE, OPTICAL KSS-240A	

Ref. No.	Part No.	Description	Remark
356	4-917-567-01	GEAR (M)	
357	4-917-564-01	GEAR (P), FLATNESS	
358	1-575-001-11	WIRE, FLAT TYPE (12 CORE)	
M101	X-4917-504-1	MOTOR ASSY (SLED)	

## SECTION 6

### ELECTRICAL PARTS LIST

BD

**NOTE :**

The components identified by mark  or dotted line with mark  are critical for safety.  
Replace only with part number specified.

Les composants identifiés par une marque  sont critiques pour la sécurité.  
Ne les remplacer que par une pièce portant le numéro spécifié.

When indicating parts by reference number, please include the board name.

- Due to standardization, replacements in the parts list may be different from the parts specified in the diagrams or the components used on the set.
- - XX, - X mean standardized parts, so they may have some difference from the original one.
- **RESISTORS**  
All resistors are in ohms.  
**METAL** : metal-film resistor  
**METAL OXIDE** : Metal Oxide-film resistor  
**F** : nonflammable
- Items marked "\*" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- **SEMICONDUCTORS**  
In each case, u :  $\mu$ , for example:  
uA... :  $\mu A...$ , uPA... :  $\mu PA...$ ,  
uPB... :  $\mu PB...$ , uPC... :  $\mu PC...$ ,  
uPD... :  $\mu PD...$
- **CAPACITORS** :  
uF :  $\mu F$
- **COILS**  
uH :  $\mu H$

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark		
<b>* A-4617-161-A BD BOARD, COMPLETE</b>									
*****									
<b>&lt; CAPACITOR &gt;</b>									
C101	1-163-038-00 CERAMIC CHIP	0.1uF	25V	CN101	1-568-796-11 SOCKET, CONNECTOR 22P				
C102	1-163-989-11 CERAMIC CHIP	0.033uF	10% 25V	CN102	1-568-795-11 SOCKET, CONNECTOR 12P				
C103	1-126-163-11 ELECT	4.7uF	20% 50V	CN103	* 1-564-721-11 PIN. CONNECTOR (SMALL TYPE) 5P				
C104	1-163-038-00 CERAMIC CHIP	0.1uF	25V	<b>&lt; DIODE &gt;</b>					
C105	1-126-154-11 ELECT	47uF	20% 6.3V	D101	8-719-105-72 DIODE RD4.7M-B1				
C106	1-126-154-11 ELECT	47uF	20% 6.3V	<b>&lt; IC &gt;</b>					
C107	1-126-154-11 ELECT	47uF	20% 6.3V	IC101	8-752-050-82 IC CXA1372Q				
C108	1-163-038-00 CERAMIC CHIP	0.1uF	25V	IC102	8-759-822-36 IC LA6532M-T1				
C109	1-163-038-00 CERAMIC CHIP	0.1uF	25V	IC103	8-759-633-65 IC M54641L				
C110	1-163-989-11 CERAMIC CHIP	0.033uF	10% 25V	<b>&lt; JUMPER &gt;</b>					
C111	1-131-367-00 TANTALUM	22uF	10% 20V	J101	1-216-295-00 METAL CHIP	0	5% 1/10W		
C112	1-164-232-11 CERAMIC CHIP	0.01uF	50V	J102	1-216-295-00 METAL CHIP	0	5% 1/10W		
C113	1-164-232-11 CERAMIC CHIP	0.01uF	50V	<b>&lt; TRANSISTOR &gt;</b>					
C114	1-164-161-11 CERAMIC CHIP	0.0022uF	10% 100V	Q101	8-729-901-01 TRANSISTOR DTC144EK				
C115	1-164-161-11 CERAMIC CHIP	0.0022uF	10% 100V	<b>&lt; RESISTOR &gt;</b>					
C117	1-163-038-00 CERAMIC CHIP	0.1uF	25V	R101	1-216-097-00 METAL CHIP	100K	5% 1/10W		
C118	1-163-038-00 CERAMIC CHIP	0.1uF	25V	R102	1-216-095-00 METAL CHIP	82K	5% 1/10W		
C119	1-164-161-11 CERAMIC CHIP	0.0022uF	10% 100V	R103	1-216-091-00 METAL CHIP	56K	5% 1/10W		
C120	1-163-989-11 CERAMIC CHIP	0.033uF	10% 25V	R104	1-216-099-00 METAL CHIP	120K	5% 1/10W		
C151	1-163-019-00 CERAMIC CHIP	0.0068uF	10% 50V	R105	1-216-069-00 METAL CHIP	6.8K	5% 1/10W		
C152	1-163-038-00 CERAMIC CHIP	0.1uF	25V	R106	1-216-061-00 METAL CHIP	3.3K	5% 1/10W		
C153	1-163-006-11 CERAMIC CHIP	560PF	10% 50V	R107	1-216-114-00 METAL GLAZE	510K	5% 1/10W		
C154	1-164-161-11 CERAMIC CHIP	0.0022uF	10% 100V	R108	1-216-105-00 METAL CHIP	220K	5% 1/10W		
C155	1-163-023-00 CERAMIC CHIP	0.015uF	5% 50V	R109	1-216-061-00 METAL CHIP	3.3K	5% 1/10W		
C171	1-163-038-00 CERAMIC CHIP	0.1uF	25V	R110	1-216-049-00 METAL CHIP	1K	5% 1/10W		
C172	1-163-038-00 CERAMIC CHIP	0.1uF	25V						
C173	1-163-038-00 CERAMIC CHIP	0.1uF	25V						
C174	1-163-038-00 CERAMIC CHIP	0.1uF	25V						

**BD** **DISP** **FUNCTION**

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
R111	1-216-049-00	METAL CHIP	1K	5%	1/10W		< FLUORESCENT INDICATOR >
R112	1-216-083-00	METAL CHIP	27K	5%	1/10W		
R113	1-216-071-00	METAL CHIP	8.2K	5%	1/10W		
R114	1-216-105-00	METAL CHIP	220K	5%	1/10W		
R152	1-216-073-00	METAL CHIP	10K	5%	1/10W		< IC >
R153	1-216-085-00	METAL CHIP	33K	5%	1/10W		
R154	1-216-085-00	METAL CHIP	33K	5%	1/10W		IC401 8-759-505-50 IC MSC62408-015GS-VIK
R155	1-216-093-00	METAL CHIP	68K	5%	1/10W		IC412 8-741-100-48 IC SBX1610-59
R156	1-216-081-00	METAL CHIP	22K	5%	1/10W		< TRANSISTOR >
R157	1-216-079-00	METAL CHIP	18K	5%	1/10W		
R158	1-216-079-00	METAL CHIP	18K	5%	1/10W		Q401 8-729-900-45 TRANSISTOR DTC114EF
R159	1-216-079-00	METAL CHIP	18K	5%	1/10W		Q402 8-729-900-45 TRANSISTOR DTC114EF
R160	1-216-049-00	METAL CHIP	1K	5%	1/10W		Q408 8-729-900-45 TRANSISTOR DTC114EF
R171	1-216-001-00	METAL CHIP	10	5%	1/10W		< RESISTOR >
R172	1-216-001-00	METAL CHIP	10	5%	1/10W		
R173	1-216-001-00	METAL CHIP	10	5%	1/10W		R401 1-249-429-11 CARBON 10K 5% 1/4W
R174	1-216-001-00	METAL CHIP	10	5%	1/10W		R402 1-249-429-11 CARBON 10K 5% 1/4W
							R408 1-247-812-11 CARBON 160 5% 1/4W
							R409 1-247-903-00 CARBON 1M 5% 1/4W
							R410 1-249-441-11 CARBON 100K 5% 1/4W
							R411 1-249-441-11 CARBON 100K 5% 1/4W
< VARIABLE RESISTOR >							
RV101	1-238-016-11	RES. ADJ. CARBON	10K				
RV102	1-238-016-11	RES. ADJ. CARBON	10K				< SWITCH >
							< SWITCH >
S101	1-572-085-11	SWITCH, LEAF					
*****							
							S460 1-554-303-21 SWITCH, TACTILE (►)
							S461 1-554-303-21 SWITCH, TACTILE (REPEAT)
							S462 1-554-303-21 SWITCH, TACTILE (TIME/MEMO)
							S463 1-554-303-21 SWITCH, TACTILE (OPEN/CLOSE)
							S476 1-554-481-00 SWITCH, SLIDE (TIMER)
*****							
							< CERAMIC >
							X411 1-577-101-11 VIBRATOR, CERAMIC
*****							
							* 1-637-073-11 FUNCTION BOARD
							*****
							* 4-941-258-01 HOLDER (LED/PA)
							* 4-941-259-01 HOLDER (LED/M)
							< CONNECTOR >
C401	1-164-159-11	CERAMIC	0.1uF		50V		
C403	1-164-159-11	CERAMIC	0.1uF		50V		
C411	1-164-159-11	CERAMIC	0.1uF		50V		
< CONNECTOR >							
CN403	* 1-568-837-11	SOCKET, CONNECTOR	20P				
CN405	* 1-580-481-11	SOCKET, CONNECTOR	8P				
CN406	* 1-580-470-11	SOCKET, CONNECTOR	7P				
CN407	* 1-580-471-11	SOCKET, CONNECTOR	6P				
							< DIODE >
D407	8-719-912-20	DIODE	ISS120				
D413	8-719-987-93	LED	MBG3371X-J69K (►)				

**FUNCTION** **HP** **LOADING**

Ref. No.	Part No.	Description	Remark		
D408	8-719-987-95	LED MPY3371X (C. INDEX)			
D409	8-719-987-97	LED BR3371X (PROGRAM)			
D410	8-719-971-52	LED MAY3371X-M-177 (SHUFFLE)			
D411	8-719-987-99	LED MCB3371X-14 (CONTINUE)			
D412	8-719-987-91	LED MAA3371X (FADER)			
		< TRANSISTOR >			
Q403	8-729-900-45	TRANSISTOR DTC114EF			
Q404	8-729-900-45	TRANSISTOR DTC114EF			
Q405	8-729-900-45	TRANSISTOR DTC114EF			
Q406	8-729-900-45	TRANSISTOR DTC114EF			
Q407	8-729-900-45	TRANSISTOR DTC114EF			
		< RESISTOR >			
R403	1-249-407-11	CARBON	150	5%	1/4W
R404	1-249-442-11	CARBON	510	5%	1/4W
R405	1-249-407-11	CARBON	150	5%	1/4W
R406	1-249-407-11	CARBON	150	5%	1/4W
R407	1-249-410-11	CARBON	270	5%	1/4W
		< SWITCH >			
S400	1-554-303-21	SWITCH, TACTILE (CONTINUE)			
S401	1-554-303-21	SWITCH, TACTILE (EDIT/TIME FADE)			
S402	1-554-303-21	SWITCH, TACTILE (1)			
S403	1-554-303-21	SWITCH, TACTILE (2)			
S404	1-554-303-21	SWITCH, TACTILE (3)			
S405	1-554-303-21	SWITCH, TACTILE (4)			
S406	1-554-303-21	SWITCH, TACTILE (5)			
S410	1-554-303-21	SWITCH, TACTILE (SHUFFLE)			
S411	1-554-303-21	SWITCH, TACTILE (TIME SET)			
S412	1-554-303-21	SWITCH, TACTILE (6)			
S413	1-554-303-21	SWITCH, TACTILE (7)			
S414	1-554-303-21	SWITCH, TACTILE (8)			
S415	1-554-303-21	SWITCH, TACTILE (9)			
S416	1-554-303-21	SWITCH, TACTILE (10)			
S420	1-554-303-21	SWITCH, TACTILE (PROGRAM)			
S421	1-554-303-21	SWITCH, TACTILE (FADER)			
S422	1-554-303-21	SWITCH, TACTILE (11)			
S423	1-554-303-21	SWITCH, TACTILE (12)			
S424	1-554-303-21	SWITCH, TACTILE (13)			
S425	1-554-303-21	SWITCH, TACTILE (14)			
S426	1-554-303-21	SWITCH, TACTILE (15)			
S430	1-554-303-21	SWITCH, TACTILE (C. INDEX)			
S431	1-554-303-21	SWITCH, TACTILE (PEAK SEARCH)			
S432	1-554-303-21	SWITCH, TACTILE (16)			
S433	1-554-303-21	SWITCH, TACTILE (17)			
S434	1-554-303-21	SWITCH, TACTILE (18)			
S435	1-554-303-21	SWITCH, TACTILE (19)			
S436	1-554-303-21	SWITCH, TACTILE (20)			
S440	1-554-303-21	SWITCH, TACTILE (KK)			

Ref. No.	Part No.	Description	Remark		
S441	1-554-303-21	SWITCH, TACTILE (NN)			
S442	1-554-303-21	SWITCH, TACTILE (KK)			
S443	1-554-303-21	SWITCH, TACTILE (PP)			
S444	1-554-303-21	SWITCH, TACTILE (CLEAR)			
S445	1-554-303-21	SWITCH, TACTILE (CHECK)			
S446	1-554-303-21	SWITCH, TACTILE (>20)			
S450	1-554-303-21	SWITCH, TACTILE (II)			
S451	1-554-303-21	SWITCH, TACTILE (III)			
S452	1-554-303-21	SWITCH, TACTILE (FILE)			
S453	1-554-303-21	SWITCH, TACTILE (ERASE)			
S454	1-554-303-21	SWITCH, TACTILE (FILE RECALL)			
S455	1-554-303-21	SWITCH, TACTILE (MUSIC SCAN)			
S456	1-554-303-21	SWITCH, TACTILE (LEVEL FILE)			
*****					
* 1-637-070-11 HP BOARD					
*****					
< CAPACITOR >					
C408	1-164-159-11	CERAMIC	0.1uF		50V
C409	1-162-294-31	CERAMIC	0.001uF	10%	50V
C410	1-162-294-31	CERAMIC	0.001uF	10%	50V
< CONNECTOR >					
CN408	* 1-564-705-11	PIN, CONNECTOR (SMALL TYPE)	3P		
< JACK >					
J479	1-568-519-41	JACK, LARGE TYPE			
< COIL >					
L501	* 1-410-858-11	INDUCTOR			
L502	* 1-410-858-11	INDUCTOR			
L601	* 1-410-858-11	INDUCTOR			
< RESISTOR >					
R522	1-249-402-11	CARBON	56	5%	1/4W
R622	1-249-402-11	CARBON	56	5%	1/4W
*****					
* 1-632-202-11 LOADING BOARD					
*****					
< CONNECTOR >					
CN301	* 1-564-707-11	PIN, CONNECTOR (SMALL TYPE)	5P		

## LOADING MAIN

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
< SWITCH >							
S271	1-572-086-11	SWITCH, LEAF		C317	1-136-165-00	FILM	0.1uF 5% 50V
S272	1-572-086-11	SWITCH, LEAF		C318	1-136-165-00	FILM	0.1uF 5% 50V
*****							
* A-4617-567-A MAIN BOARD, COMPLETE				C319	1-162-208-31	CERAMIC	24PF 5% 50V
*****				C321	1-164-159-11	CERAMIC	0.1uF 5% 50V
* 4-941-237-01 HEAT SINK 7-682-548-04 SCREW +BVTT 3X8 (S)				C332	1-162-205-31	CERAMIC	18PF 5% 50V
*****							
< CAPACITOR >							
C201	1-124-572-11	ELECT	100uF 20% 63V	C501	1-136-165-00	FILM	0.1uF 5% 50V
C203	1-126-059-11	ELECT	10uF 20% 50V	C502	1-136-165-00	FILM	0.1uF 5% 50V
C204	1-126-016-11	ELECT	4700uF 20% 16V	C503	1-124-994-11	ELECT	100uF 20% 10V
C205	1-126-016-11	ELECT	4700uF 20% 16V	C504	1-124-994-11	ELECT	100uF 20% 10V
C206	1-126-059-11	ELECT	10uF 20% 50V	C505	1-136-165-00	FILM	0.1uF 5% 50V
C207	1-126-163-11	ELECT	4.7uF 20% 50V	C506	1-124-994-11	ELECT	100uF 20% 10V
C208	1-126-059-11	ELECT	10uF 20% 50V	C507	1-136-165-00	FILM	0.1uF 5% 50V
C209	1-126-013-11	ELECT	1000uF 20% 16V	C508	1-136-165-00	FILM	0.1uF 5% 50V
C210	1-126-013-11	ELECT	1000uF 20% 16V	C509	1-124-994-11	ELECT	100uF 20% 10V
C211	1-126-024-11	ELECT	220uF 20% 16V	C510	1-136-165-00	FILM	0.1uF 5% 50V
C213	1-164-159-11	CERAMIC	0.1uF 50V	C511	1-124-994-11	ELECT	100uF 20% 10V
C214	1-126-024-11	ELECT	220uF 20% 16V	C512	1-136-165-00	FILM	0.1uF 5% 50V
C215	1-125-622-11	CAP, DOUBLE LAYERS 0.10F		C513	1-162-199-31	CERAMIC	10PF 5% 50V
C216	1-126-012-11	ELECT	470uF 20% 16V	C514	1-162-199-31	CERAMIC	10PF 5% 50V
C218	1-124-994-11	ELECT	100uF 20% 10V	C531	1-162-288-31	CERAMIC	330PF 10% 50V
C220	1-164-159-11	CERAMIC	0.1uF 50V	C532	1-162-282-31	CERAMIC	100PF 10% 50V
C221	1-162-286-31	CERAMIC	220PF 10% 50V	C533	1-162-282-31	CERAMIC	100PF 10% 50V
C225	1-130-491-00	MYLAR	0.047uF 5% 50V	C534	1-130-472-00	MYLAR	0.0012uF 5% 50V
C226	1-124-994-11	ELECT	100uF 20% 10V	C535	1-106-359-00	MYLAR	4700PF 5% 200V
C227	1-124-997-11	ELECT	470uF 20% 10V	C536	1-126-051-11	ELECT	47uF 20% 50V
C228	1-130-491-00	MYLAR	0.047uF 5% 50V	C537	1-162-294-31	CERAMIC	0.001uF 10% 50V
C229	1-124-994-11	ELECT	100uF 20% 10V	C538	1-162-294-31	CERAMIC	0.001uF 10% 50V
C231	1-164-159-11	CERAMIC	0.1uF 50V	C540	1-126-012-11	ELECT	470uF 20% 16V
C302	1-164-159-11	CERAMIC	0.1uF 50V	C541	1-126-012-11	ELECT	470uF 20% 16V
C303	1-124-994-11	ELECT	100uF 20% 10V	C631	1-162-288-31	CERAMIC	330PF 10% 50V
C305	1-164-159-11	CERAMIC	0.1uF 50V	C632	1-162-282-31	CERAMIC	100PF 10% 50V
C306	1-164-159-11	CERAMIC	0.1uF 50V	C633	1-162-282-31	CERAMIC	100PF 10% 50V
C307	1-136-161-00	FILM	0.047uF 5% 50V	C634	1-130-472-00	MYLAR	0.0012uF 5% 50V
C308	1-161-374-11	CERAMIC	0.0015uF 20% 50V	C635	1-106-359-00	MYLAR	4700PF 5% 200V
C309	1-162-306-11	CERAMIC	0.01uF 20% 16V	C636	1-126-051-11	ELECT	47uF 20% 50V
C310	1-126-043-11	ELECT	0.47uF 20% 50V	C637	1-162-294-31	CERAMIC	0.001uF 10% 50V
C311	1-126-163-11	ELECT	4.7uF 20% 50V	C638	1-162-294-31	CERAMIC	0.001uF 10% 50V
C312	1-162-290-31	CERAMIC	470PF 10% 50V	C640	1-126-012-11	ELECT	470uF 20% 16V
C313	1-124-994-11	ELECT	100uF 20% 10V	C641	1-126-012-11	ELECT	470uF 20% 16V
C314	1-136-165-00	FILM	0.1uF 5% 50V	< CONNECTOR >			
C315	1-124-994-11	ELECT	100uF 20% 10V	CN220	* 1-580-230-11	PIN, CONNECTOR (PC BOARD)	3P
				CN356	* 1-568-837-11	SOCKET, CONNECTOR 20P	
				CN357	* 1-564-711-11	PIN, CONNECTOR (SMALL TYPE) 9P	
				CN359	* 1-568-822-11	SOCKET, CONNECTOR 22P	
				CN360	* 1-568-955-11	PIN, CONNECTOR 6P	

## MAIN

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
< DIODE >							
D201	8-719-200-02	DIODE 10E2		Q208	8-729-140-96	TRANSISTOR 2SD774-34	
D202	8-719-200-02	DIODE 10E2		Q209	8-729-119-78	TRANSISTOR 2SC2785-HFE	
D203	8-719-200-02	DIODE 10E2		Q210	8-729-111-67	TRANSISTOR 2SB1094-L	
D204	8-719-200-02	DIODE 10E2		Q215	8-729-900-80	TRANSISTOR DTC114ES	
D205	8-719-200-02	DIODE 10E2		Q216	8-729-900-80	TRANSISTOR DTC114ES	
D206	8-719-912-20	DIODE ISS120		Q217	8-729-216-13	TRANSISTOR 2SK161GR	
D207	8-719-109-85	DIODE RD5.1ES-B2		Q218	8-729-905-67	TRANSISTOR 2SD1944-K	
D209	8-719-110-08	DIODE RD8.2ES-B2		Q222	8-729-900-80	TRANSISTOR DTC114ES	
D210	8-719-912-20	DIODE ISS120		Q223	8-729-119-76	TRANSISTOR 2SA1175-HFE	
D211	8-719-110-08	DIODE RD8.2ES-B2		Q224	8-729-119-78	TRANSISTOR 2SC2785-HFE	
D212	8-719-114-27	DIODE RD4.7JS-B3		Q232	8-729-900-80	TRANSISTOR DTC114ES	
D214	8-719-210-21	DIODE 31EQS04		Q501	8-729-900-61	TRANSISTOR DTA114ES	
D225	8-719-934-31	DIODE H2S36-3L		Q502	8-729-201-05	TRANSISTOR 2SC2878-B	
D322	8-719-912-20	DIODE ISS120		Q503	8-729-900-74	TRANSISTOR DTC143TS	
D501	8-719-912-20	DIODE ISS120		Q504	8-729-900-74	TRANSISTOR DTC143TS	
D513	8-719-114-27	DIODE RD4.7JS-B3		Q601	8-729-900-61	TRANSISTOR DTA114ES	
D601	8-719-912-20	DIODE ISS120		Q602	8-729-201-05	TRANSISTOR 2SC2878-B	
< IC >							
IC201	8-759-630-21	IC M5290P-16		R201	1-249-425-11	CARBON	4.7K 5% 1/4W
IC325	8-759-512-81	IC LH5160H-10L		R202	1-249-425-11	CARBON	4.7K 5% 1/4W
IC326	8-759-962-08	IC BA6208		R203	1-249-424-11	CARBON	3.9K 5% 1/4W
IC327	8-759-635-50	IC M37450M8-372FP		R204	1-212-869-00	FUSIBLE	33 5% 1/4W F
IC328	8-752-337-26	IC CXD2500AQ		R205	1-249-435-11	CARBON	33K 5% 1/4W
IC329	8-759-917-18	IC SN74HC04AN		R206	1-249-413-11	CARBON	470 5% 1/4W
IC350	8-749-921-20	IC T-1550		R207	1-249-429-11	CARBON	10K 5% 1/4W
IC501	8-752-335-53	IC CXD25520-3		R208	1-249-425-11	CARBON	4.7K 5% 1/4W
IC502	8-752-328-61	IC CXD1244S		R209	1-249-437-11	CARBON	47K 5% 1/4W
IC503	8-752-339-86	IC CXD2557M		R213	1-249-417-11	CARBON	1K 5% 1/4W
IC504	8-759-982-03	IC RC5532DD		R214	1-249-417-11	CARBON	1K 5% 1/4W
IC505	8-759-981-85	IC RC4556D		R215	1-249-429-11	CARBON	10K 5% 1/4W
IC604	8-759-982-03	IC RC5532DD		R216	1-249-417-11	CARBON	1K 5% 1/4W
< JACK >							
J361	* 1-569-443-11	JACK, PIN 4P		R219	1-249-393-11	CARBON	10 5% 1/4W
< COIL >							
L320	1-408-403-00	INDUCTOR	3.3uH	R220	1-249-405-11	CARBON	100 5% 1/4W
< TRANSISTOR >							
Q202	8-729-900-80	TRANSISTOR DTC114ES		R221	1-249-406-11	CARBON	120 5% 1/4W
Q203	8-729-900-61	TRANSISTOR DTA114ES		R222	1-249-435-11	CARBON	33K 5% 1/4W
Q204	8-729-900-61	TRANSISTOR DTA114ES		R223	1-249-429-11	CARBON	10K 5% 1/4W
Q206	8-729-111-67	TRANSISTOR 2SB1094-L		R224	1-249-438-11	CARBON	56K 5% 1/4W
Q207	8-729-140-96	TRANSISTOR 2SD774-34		R225	1-249-441-11	CARBON	100K 5% 1/4W

<b>Note:</b> The components identified by mark  or dotted line with mark  are critical for safety. Replace only with part number specified.	<b>Note:</b> Les composants identifiés par une marque  sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.
---	--

MAIN	P.SW	REMOTE
------	------	--------

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
R307	1-249-429-11	CARBON	10K 5% 1/4W	R510	1-249-891-00	CARBON	330K 5% 1/4W
R308	1-249-429-11	CARBON	10K 5% 1/4W	R511	1-249-409-11	CARBON	220 5% 1/4W
R309	1-249-429-11	CARBON	10K 5% 1/4W	R512	1-249-393-11	CARBON	10 5% 1/4W
R310	1-249-429-11	CARBON	10K 5% 1/4W	R513	1-249-409-11	CARBON	220 5% 1/4W
R311	1-249-429-11	CARBON	10K 5% 1/4W	R515	1-249-409-11	CARBON	220 5% 1/4W
R312	1-249-429-11	CARBON	10K 5% 1/4W	R518	1-249-435-11	CARBON	33K 5% 1/4W
R313	1-249-429-11	CARBON	10K 5% 1/4W	R519	1-249-435-11	CARBON	33K 5% 1/4W
R314	1-249-429-11	CARBON	10K 5% 1/4W	R520	1-249-425-11	CARBON	4.7K 5% 1/4W
R315	1-249-429-11	CARBON	10K 5% 1/4W	R521	1-249-435-11	CARBON	33K 5% 1/4W
R316	1-249-429-11	CARBON	10K 5% 1/4W	R523	1-247-848-11	CARBON	5.1K 5% 1/4W
R317	1-249-429-11	CARBON	10K 5% 1/4W	R524	1-249-405-11	CARBON	100 5% 1/4W
R318	1-249-429-11	CARBON	10K 5% 1/4W	R601	1-215-443-00	METAL	8.2K 1% 1/6W
R319	1-247-903-00	CARBON	1M 5% 1/4W	R602	1-215-436-00	METAL	4.3K 1% 1/6W
R320	1-249-417-11	CARBON	1K 5% 1/4W	R603	1-215-443-00	METAL	8.2K 1% 1/6W
R321	1-249-417-11	CARBON	1K 5% 1/4W	R604	1-215-436-00	METAL	4.3K 1% 1/6W
R322	1-249-417-11	CARBON	1K 5% 1/4W	R605	1-215-451-00	METAL	18K 1% 1/6W
R323	1-249-417-11	CARBON	1K 5% 1/4W	R606	1-215-451-00	METAL	18K 1% 1/6W
R324	1-249-417-11	CARBON	1K 5% 1/4W	R607	1-249-419-11	CARBON	1.5K 5% 1/4W
R325	1-249-417-11	CARBON	1K 5% 1/4W	R608	1-249-419-11	CARBON	1.5K 5% 1/4W
R329	1-249-411-11	CARBON	330 5% 1/4W	R609	1-249-409-11	CARBON	220 5% 1/4W
R330	1-249-417-11	CARBON	1K 5% 1/4W	R610	1-247-891-00	CARBON	330K 5% 1/4W
R331	1-249-417-11	CARBON	1K 5% 1/4W	R611	1-249-409-11	CARBON	220 5% 1/4W
R332	1-249-417-11	CARBON	1K 5% 1/4W	R612	1-249-393-11	CARBON	10 5% 1/4W
R333	1-249-441-11	CARBON	100K 5% 1/4W	R613	1-249-409-11	CARBON	220 5% 1/4W
R334	1-249-429-11	CARBON	10K 5% 1/4W	R615	1-249-409-11	CARBON	220 5% 1/4W
R335	1-249-423-11	CARBON	3.3K 5% 1/4W	R618	1-249-435-11	CARBON	33K 5% 1/4W
R336	1-249-423-11	CARBON	3.3K 5% 1/4W	R619	1-249-435-11	CARBON	33K 5% 1/4W
R337	1-249-429-11	CARBON	10K 5% 1/4W	R620	1-249-425-11	CARBON	4.7K 5% 1/4W
R339	1-249-409-11	CARBON	220 5% 1/4W	R621	1-249-435-11	CARBON	33K 5% 1/4W
R341	1-249-413-11	CARBON	470 5% 1/4W	< CRYSTAL >			
R342	1-249-417-11	CARBON	1K 5% 1/4W	X355	1-579-175-11	VIBRATOR, CERAMIC	
R343	1-249-415-11	CARBON	680 5% 1/4W	X501	1-579-161-11	VIBRATOR, CRYSTAL	
R344	1-249-415-11	CARBON	680 5% 1/4W	*****			
R345	1-249-415-11	CARBON	680 5% 1/4W	*****			
R346	1-249-415-11	CARBON	680 5% 1/4W	*****			
R347	1-249-417-11	CARBON	1K 5% 1/4W	* 1-637-071-11 P.SW BOARD			
R348	1-249-428-11	CARBON	8.2K 5% 1/4W	*****			
R349	1-249-436-11	CARBON	39K 5% 1/4W	< SWITCH >			
R350	1-249-428-11	CARBON	8.2K 5% 1/4W	S475	1-554-118-00	SWITCH, PUSH (1 KEY) (POWER)	
R351	1-249-436-11	CARBON	39K 5% 1/4W	*****			
R501	1-215-443-00	METAL	8.2K 1% 1/6W	*****			
R502	1-215-436-00	METAL	4.3K 1% 1/6W	*****			
R503	1-215-443-00	METAL	8.2K 1% 1/6W	*****			
R504	1-215-436-00	METAL	4.3K 1% 1/6W	* 1-637-069-11 REMOTE CONTROL BOARD			
R505	1-215-451-00	METAL	18K 1% 1/6W	*****			
R506	1-215-451-00	METAL	18K 1% 1/6W	< CAPACITOR >			
R507	1-249-419-11	CARBON	1.5K 5% 1/4W	C405	1-164-159-11	CERAMIC	0.1uF
R508	1-249-419-11	CARBON	1.5K 5% 1/4W	50V			
R509	1-249-409-11	CARBON	220 5% 1/4W				

**REMOTE**

Ref. No.	Part No.	Description	Remark
< CONNECTOR >			
CN477	* 1-564-707-11	PIN, CONNECTOR (SMALL TYPE) 5P	
CN478	* 1-568-955-11	PIN, CONNECTOR 6P	
< VARIABLE RESISTOR >			
RV405	1-241-304-11	RES. VAR. CARBON 10KX3 (LINE OUT, PHONE LEVEL)	
*****			
MISCELLANEOUS			
*****			
19	1-535-874-11	JUMPER, FILM (WITH TERMINAL)	
20	1-590-217-11	WIRE, FLAT TYPE (20 CORE)	
60	▲ 1-558-945-21	CORD, POWER (POLAR, SPT-1) (US, Canadian)	
	▲ 1-558-946-21	CORD, POWER (POLAR, SPT-1) (UK)	
	▲ 1-574-358-31	CORD, POWER (WITH CONNECTOR) (AUS)	
	▲ 1-575-651-21	CORD, POWER (AEP)	
	▲ 1-575-653-21	CORD, POWER (E)	
64	1-575-002-11	WIRE, FLAT TYPE (22 CORE)	
69	▲ 1-569-007-11	ADAPTOR, CONVERSION 2P (E)	
311	* 1-452-538-11	MAGNET	
355	▲ 8-848-144-11	DEVICE, OPTICAL KSS-240A	
358	1-575-001-11	WIRE, FLAT TYPE (12 CORE)	
M101	X-4917-504-1	MOTOR ASSY (SLED)	
M191	A-4604-363-A	MOTOR (L) ASSY	
S221	▲ 1-571-722-11	SWITCH, VOLTAGE SELECTION (VOLTAGE SELECTOR) (E)	
T201	▲ 1-449-921-11	TRANSFORMER, POWER (US, Canadian)	
	▲ 1-449-922-11	TRANSFORMER, POWER (AEP, UK, AUS)	
	▲ 1-449-923-11	TRANSFORMER, POWER (E)	
*****			
ACCESSORY & PACKING MATERIAL			
*****			
	1-465-593-11	COMMANDER, REMOTE (RM-D991)	
	1-559-533-11	CORD, CONNECTION	
*	3-704-343-01	SHEET (STANDARD), PROTECTION	
	3-707-584-01	COVER, BATTERY (for RM-D991)	
	3-752-357-11	MANUAL, INSTRUCTION (ENGLISH, FRENCH, SPANISH, PORTUGUESE) (Canadian, AEP, UK, E)	
	3-752-357-21	MANUAL, INSTRUCTION (ENGLISH) (US, AUS)	
	3-752-357-41	MANUAL, INSTRUCTION (GERMAN, DUTCH, SWEDISH, ITALIAN) (AEP)	
*	3-795-629-11	INSTRUCTION (AEP)	
*	4-934-088-01	CUSHION	
*	4-942-117-11	INDIVIDUAL CARTON	

Ref. No.	Part No.	Description	Remark
HARDWARE LIST			
*****			
# 1	7-685-646-79	SCREW +BVTP 3X8 TYPE2 N-S	
# 2	7-682-548-09	SCREW +BVTT 3X8 (S)	
# 3	7-685-870-01	SCREW +BVTT 3X5 (S)	
# 4	7-685-647-79	SCREW +BVTP 3X10 TYPE2 N-S	
# 5	7-682-548-04	SCREW +BVTT 3X8 (S)	
# 6	7-621-775-10	SCREW +B 2.6X4	
# 7	7-685-134-19	SCREW +BTP 2.6X8 TYPE2 N-S	
# 8	7-621-255-15	SCREW +P 2X3	

Note:  
The components identified by mark ▲ or dotted line with mark ▲ are critical for safety.  
Replace only with part number specified.

Note:  
Les composants identifiés par une marque ▲ sont critiques pour la sécurité.  
Ne les remplacer que par une pièce portant le numéro spécifié.