

CDP-X55ES

SERVICE MANUAL

*US Model
Canadian Model
AEP Model
UK Model
E Model
Australian Model*



Model Name Using Similar Mechanism	CDP-338ESD/608ESD
CD Mechanism Name	CDM11E-6C
Base Unit Name	BU-6C

SPECIFICATIONS

Compact disc player

Frequency response	2 Hz – 20 kHz \pm 0.3 dB
Signal to noise ratio	More than 115 dB
Dynamic range	More than 100 dB
Harmonic distortion	Less than 0.0018%
Channel separation	More than 110 dB

Weight (approx.)	12.5 kg (27 lbs 9 oz)
	UK, E Models 11.5 kg (25 lbs 6 oz)

* UK model is not equipped with the side panels.

Outputs

LINE OUT (FIXED) (phono jacks)	Output level 2 V (at 50 kilohms) Load impedance over 10 kilohms
LINE OUT (VARIABLE) (phono jacks)	Output level max. 2 V (at 50 kilohms) Load impedance over 50 kilohms
DIGITAL OUT (OPTICAL) (optical output connector)	Wave length 660 nm Output level – 18 dBm
HEADPHONES (stereo phone jack)	Output level max. 28 mW Load impedance 32 ohms

Remote commander (RM-D590)

Remote control system	Infrared control
Power requirements	3 V DC with two batteries size AA (IEC designation R6)
Dimensions	67 × 18 × 175 mm (w/h/d) (2 ⁷ / ₈ × 2 ³ / ₃₂ × 7 inches)
Weight	150 g (5.3 oz) Including batteries

General

Power requirements	AEP Model 220 V AC (or 240 V AC adjustable by Sony personnel), 50/60 Hz UK Model 240 V AC (or 220 V AC adjustable by Sony personnel), 50/60 Hz Australian Model 240 V AC, 50/60 Hz US, Canadian Models 120 V AC, 60 Hz E Model 110, 120, 220 or 240 V AC adjustable, 50/60 Hz
Power consumption	22 W
Dimensions (approx., including projections)	470 × 125 × 375 mm (w/h/d) (18 ⁵ / ₈ × 5 × 14 ⁷ / ₈ inches) UK Model * 430 × 125 × 375 mm (w/h/d) (17 × 5 × 14 ⁷ / ₈ inches)

Supplied accessories

Connecting cord	1 (2 phono plugs ↔ 2 phono plugs)
Remote commander	1
R6 (size AA) batteries	2
Screws (Except UK model)	8

Optional accessory

Audio optical connecting cord POC-15

Design and specifications subject to change without notice.

COMPACT DISC PLAYER
SONY®


TABLE OF CONTENTS

<u>Section</u>	<u>Title</u>	<u>Page</u>
Specifications	1
Model Identification	3
1. GENERAL	5
2. ADJUSTMENTS	6
3. DIAGRAMS		
3-1. Semiconductor Lead Layouts	8
3-2. Circuit Boards Location	9
3-3. Printed Wiring Boards	10
3-4. Schematic Diagram	15
IC Block Diagram	20
4. EXPLODED VIEWS	22
5. ELECTRICAL PARTS LIST	27

E Model :

For the customers of the model equipped with the voltage selector

Check that the voltage selector is set to the local power line voltage. If not, set the selector to the correct position before connecting the AC power cord to a wall outlet.

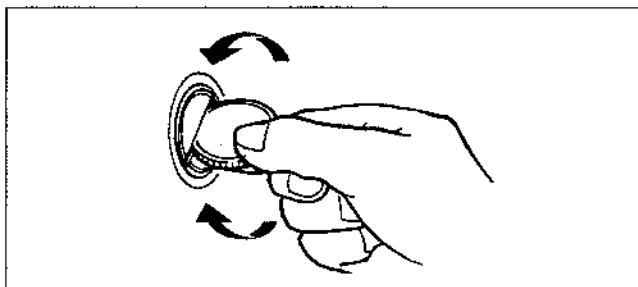

SAFETY-RELATED COMPONENT WARNING!!

COMPONENTS IDENTIFIED BY MARK Δ OR DOTTED LINE WITH MARK Δ ON THE SCHEMATIC DIAGRAMS AND IN THE PARTS LIST ARE CRITICAL TO SAFE OPERATION. REPLACE THESE COMPONENTS WITH SONY PARTS WHOSE PART NUMBERS APPEAR AS SHOWN IN THIS MANUAL OR IN SUPPLEMENTS PUBLISHED BY SONY.

ATTENTION AU COMPOSANT AYANT RAPPORT À LA SÉCURITÉ!

LES COMPOSANTS IDENTIFIÉS PAR UNE MARQUE Δ SUR LES DIAGRAMMES SCHÉMATIQUES ET LA LISTE DES PIÈCES SONT CRITIQUES POUR LA SÉCURITÉ DE FONCTIONNEMENT. NE REMPLACER CES COMPOSANTS QUE PAR DES PIÈCES SONY DONT LES NUMÉROS SONT DONNÉS DANS CE MANUEL OU DANS LES SUPPLÉMENTS PUBLIÉS PAR SONY.

SAFETY CHECK-OUT

After correcting the original service problem, perform the following safety check before releasing the set to the customer:

Check the antenna terminals, metal trim, "metallized" knobs, screws, and all other exposed metal parts for AC leakage. Check leakage as described below.

LEAKAGE TEST

The AC leakage from any exposed metal part to earth ground and from all exposed metal parts to any exposed metal part having a return to chassis, must not exceed 0.5 mA (500 microamperes). Leakage current can be measured by any one of three methods.

1. A commercial leakage tester, such as the Simpson 229 or RCA WT-540A. Follow the manufacturers' instructions to use these instruments.
2. A battery-operated AC milliammeter. The Data Precision 245 digital multimeter is suitable for this job.
3. Measuring the voltage drop across a resistor by means of a VOM or battery-operated AC voltmeter. The "limit" indication is 0.75 V, so analog meters must have an accurate low-voltage scale. The Simpson 250 and Sanwa SH-63Trd are examples of a passive VOM that is suitable. Nearly all battery operated digital multimeters that have a 2V AC range are suitable. (See Fig. A)


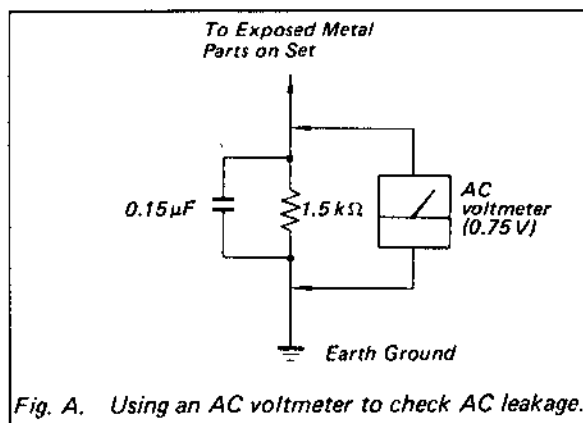


Fig. A. Using an AC voltmeter to check AC leakage.

MODEL IDENTIFICATION
— Specification Labels —

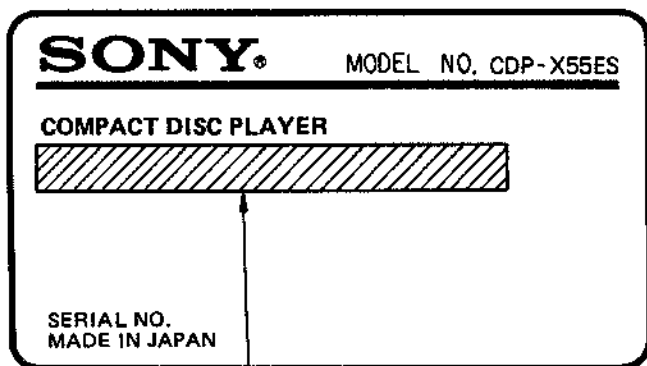


US, Canadian models : AC : 120V 60Hz 22W
 AEP model : AC : 220V \sim 50/60Hz
 UK, Australian models : AC : 240V \sim 50/60Hz
 E model : AC : 110, 120V, 220, 240V
 \sim 50/60Hz 22W

— SERVICING NOTE —

LASER DIODE AND FOCUS SEARCH OPERATION CHECK

1. Turn POWER switch on with no disc inserted and disc table closed.
2. Confirm that the operation indicated in Fig. A is performed while observing the objective lens.

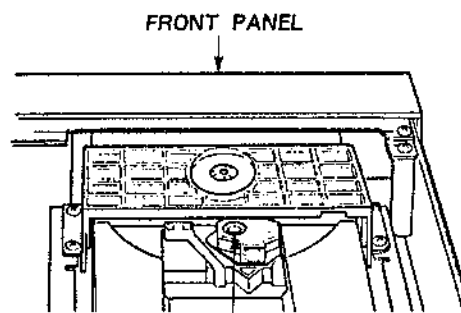

- ① Confirm that laser beam is spread.
- ② Up and down motion of the objective lens. (3 times)

Fig. A

NOTES ON HANDLING THE OPTICAL PICK-UP BLOCK OR BASE UNIT

The laser diode in the optical pick-up block may suffer electrostatic breakdown because of the potential difference generated by the charged electrostatic load, etc. on clothing and the human body.

During repair, pay attention to electrostatic breakdown and also use the procedure in the printed matter which is included in the repair parts.

The flexible board is easily damaged and should be handled with care.

NOTES ON LASER DIODE EMISSION CHECK

The laser beam on this model is concentrated so as to be focused on the disc reflective surface by the objective lens in the optical pick-up block. Therefore, when checking the laser diode emission, observe more than 25 cm away from the objective lens.

PROTECTION OF EYES FROM LASER BEAM DURING SERVICING

This set employs a laser. Therefore, be sure to follow carefully the instructions below when servicing.

CAUTION

Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

1. Laser Diode Properties

- Material: GaAlAs
- Wavelength: 780 nm
- Emission Duration: continuous
- Laser Output: max. 44.6 μ W*

* This output is the value measured at a distance of about 200 mm from the objective lens surface on the Optical Pick-up Block.

2. During service, do not take the Optical Pick-up Block apart, and do not adjust the APC circuit. If there is a breakdown in the APC circuit (including laser diode), replace the entire Optical Pick-up Block (including APC board).

BESKYTTELSE AF ØJNE MOD LASERSTRÅLING UNDER SERVICE

I dette apparat anvendes laserlys. Derfor skal nedenstående instruktioner nøje følges under service.

Følg iverigt instruktionerne i servicemanualen.

ADVARSEL!!

Under service må øjnene ikke komme nær objektiv-linsen på den optiske pick-up enhed. I tilfælde af at det er nødvendigt at kontrollere udsendelsen af laserlys, skal det ske i en afstand af mere end 25 cm fra den optiske pick-up.

1. Laser-diode data

- Materiale: GaAlAs
- Bølgelængde: 780 nm
- Udstråling: Kontinuerlig
- Laseroutput: Max. 0,4 mW*

* Målt i 1,6 mm afstand fra overfladen af objektiv-linsen på den optiske pick-up enhed.


- Klassifikation: Klasse IIIb.

2. Adskil aldrig den optiske pick-up enhed under service, og juster ikke APC kredsløbet (Automatic Power Control). Hvis APC kredsløbet (incl. laser-dioden) bryder ned, skal hele den optiske pick-up enhed (incl. APC printkortet) udskiftes.

LASER ADVARSEL MÆRKNING

Følgende mærkning findes indvendig i apparatet:


1. Advarsel Mærkning

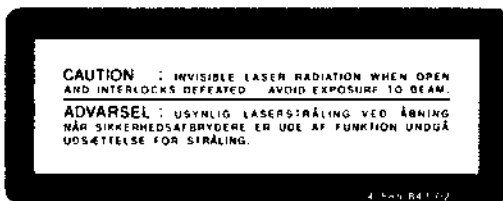

VAROITUS: Laitte sisältää, laserdiodin, joka lähettää (näkyvätöntä) silmille vaarallista lasersäteilyä.

SECTION 1 GENERAL

Front Panel

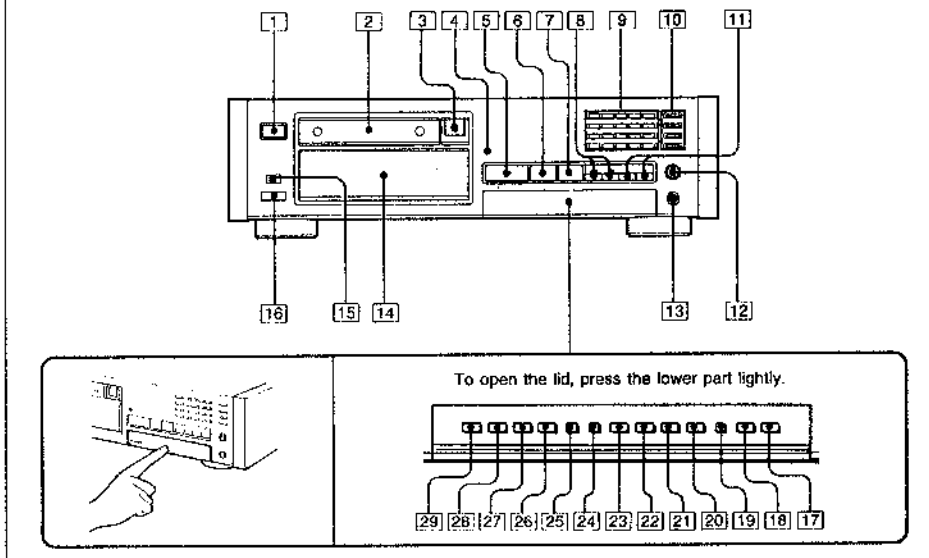


- 1 POWER switch
- 2 Disc tray
- 3 ▲ (open/close) button
- 4 DISPLAY MODE button
- 5 ► (play) button
- 6 || (pause) button
- 7 ■ (stop) button
- 8 ◀▶▶▶ (AMS*) buttons
- 9 Numeric buttons
- 10 PLAY MODE buttons
CONTINUE button
SHUFFLE button
PROGRAM button
C. (custom) INDEX button
- 11 ◀▶▶▶ (manual search) buttons
- 12 LINE OUT/PHONE LEVEL control
- 13 HEADPHONES jack

- 14 Display window
- 15 TIMER switch
- 16 Remote sensor
- 17 LEVEL FILE button
- 18 MULTI PGM (program) button
- 19 ERASE (memory erase) button
- 20 FILE (custom file) button
- 21 FILE RECALL button
- 22 TIME SET button
- 23 EDIT/TIME FADE button
- 24 CLEAR (program clear) button
- 25 CHECK (program check) button
- 26 FADER (fade in/fade out) button
- 27 REPEAT button
- 28 TIME/MEMO button
- 29 PEAK SEARCH button

* AMS is the abbreviation of Automatic Music Sensor.

Remote Commander

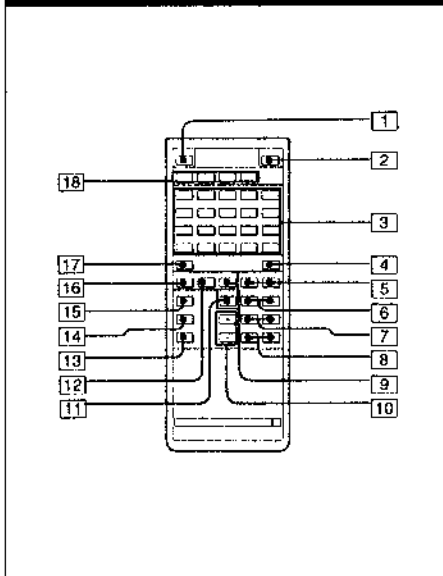

- 1 ▲ (open/close) button
- 2 DISPLAY MODE button
- 3 Numeric buttons
- 4 FILE (custom file) button
- 5 ◀▶▶▶ (AMS) buttons
- 6 ◀▶▶▶ INDEX buttons
- 7 ◀▶▶▶ (manual search) buttons
- 8 ◀▶▶▶ SLOW (low speed manual search) buttons
- 9 AUTO SPACE button
- 10 LINE OUT VOLUME (line out/headphone volume) buttons
- 11 FADER (fade in/fade out) button
- 12 A ↔ B repeat button
- 13 ■ (stop) button
- 14 || (pause) button
- 15 ► (play) button
- 16 CLEAR/REPEAT button (A ↔ B repeat clear/repeat) button
- 17 >20 (over 20) button
- 18 PLAY MODE buttons
CONTINUE button
SHUFFLE button
PGM (program) button
C. (custom) INDEX button

SECTION 2


ELECTRICAL ADJUSTMENTS

ELECTRICAL ADJUSTMENTS

1. Perform adjustments in the order given.
2. Use YEDS-18 (Part No: 3-702-101-01) disc unless otherwise indicated.
3. Use the oscilloscope with more than 10 MΩ impedance.

RF PLL Lock Frequency Check

Procedure :

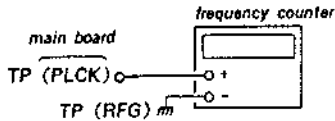


1. Ground TP (ADJ) for adjustment mode.
2. Ground TP (ASY).
3. Connect the frequency counter to TP (PCK).
4. Turn the power on.
5. Set disc (YESD-18) and play 5th program.
6. Confirm that the reading on frequency counter is 4,3218MHz.


E-F Balance Check

This check should be made after replacing the optical pick-up block.

Procedure :

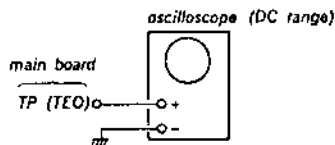


1. Ground TP (ADJ) for adjustment mode.
2. Ground TP (TES) with lead wire.
3. Connect oscilloscope to TP (TEO).
4. Set disc (YEDS-18) and press ▷PLAY button.
5. Confirm that the traverse waveform is symmetrical about 0V-axis.
6. Turn the power off and remove the lead wire connected to TP (ADJ) and TP (TES).




RF Level Check

This check should be made after replacing the optical pick-up block.

Procedure :

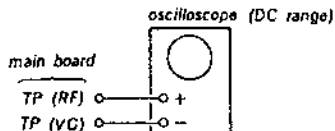

1. Ground TP (ADJ) for adjustment mode.
2. Connect the oscilloscope to TP (RF) and TP (GND).
3. Set disc (YEDS-18) and press PLAY button.
4. Confirm that waveform eye pattern is clear and RF level is optimum. The optimum eye pattern means that shape "◇" can be clearly distinguished at the center of the waveform.
5. Turn the power off.

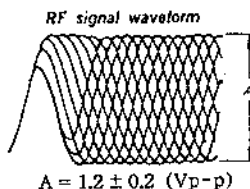

REFERENCE

Focus/Tracking Gain Adjustments

A frequency response analyzer is necessary in order to perform this adjustment exactly.

However, this gain has a margin, so even if it is slightly off, there is no problem. Therefore, do not perform this adjustment.

Focus/tracking gain determines the pick-up follow up (vertical and horizontal) relative to mechanical noise and shock when the 2-axis device operate.

However, as these reciprocate, the adjustment is at the point where both are satisfied.

- When gain is raised, the noise when the 2-axis device operates increases.
- When gain is lowered, mechanical shock and skipping occurs more easily.
- When gain adjustment is off, the symptoms below appear.


Symptoms	Gain	Focus	Tracking
• The time until music starts becomes longer for ■ STOP → ▷ PLAY or automatic selection. (◀◀, ▶▶ buttons pressed.) (Normally takes about 1 seconds.)		low	low or high
• Music does not start and disc continues to rotate for ■ STOP → ▷ PLAY or automatic selection. (◀◀, ▶▶ buttons pressed.)		-	low
• Sound is interrupted during PLAY or time counter display stops progressing.		-	low
• More noise during 2-axis device operation.		high	high

The following is a simple adjustment method.


- Primary Adjustment -

Note : Since exact adjustment cannot be performed, remember the positions of the controls before performing the adjustment. If the position after the primary adjustment are only a little different, return the controls to the original position.

Procedure :

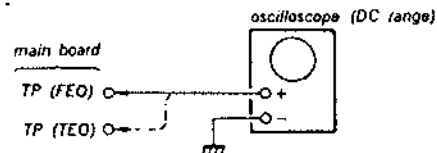


1. Keep the set horizontal.
(If the set is not horizontal, this adjustment cannot be performed due to the gravity against the 2-axis device.)
2. Put the set into test mode.
3. Set disc (YEDS-18) and turn POWER switch on.
4. Connect oscilloscope to main amp board TP (FEO).
5. Adjust RV201 so that the waveform is as shown in the figure below. (focus gain adjustment)

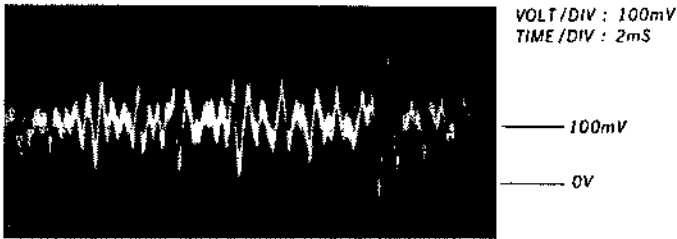


• Inccornt Examples (DC level changes more than on adjusted waveform)

low focus gain

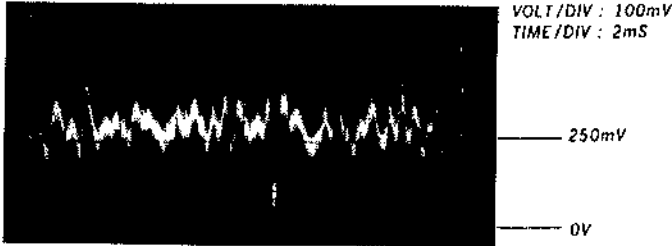

high focus gain

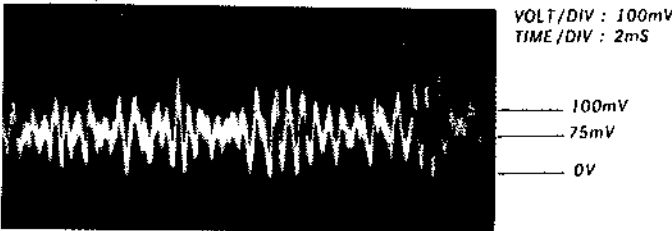


6. Connect oscilloscope to main board TP (TEO).
7. Adjust RV202 so that the waveform is as shown in the figure below. (tracking gain adjustment)
8. Turn POWER switch off.



• Inccornt Examples (fundamental wave appears)


low tracking gain

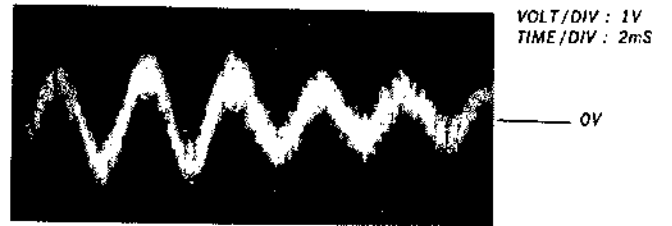

*high tracking gain
higher fundamental wave than for low gain*



Adjustment Location : MAIN BOARD — Component side —

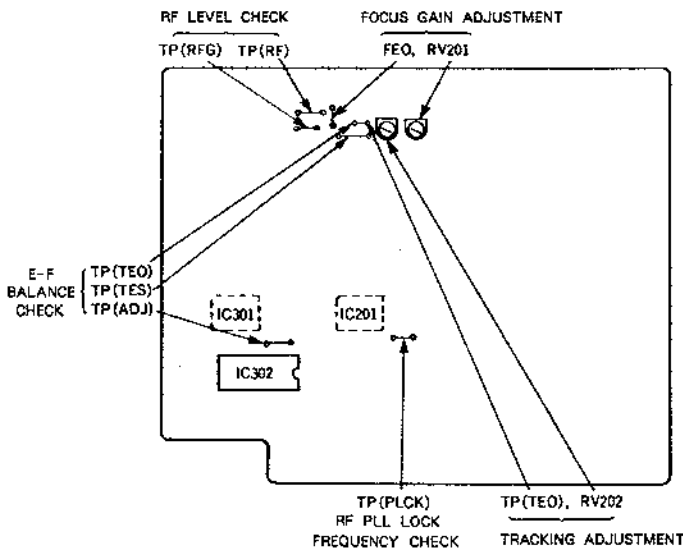

SECTION 3 DIAGRAMS

3-1. SEMICONDUCTOR LEAD LAYOUTS


BA6208




CXA1291P



**M5F78M12
M5F7805**




M5F7905



**DTA114ES
DTA124ES
DTC114ES
DTC144ES**



**DTC114EF
2SD1293M**



**2SA985A
2SC2275A**




**2SA1138
2SC2678
2SD774-34**




**2SC2878-B
2SC3823A-L**




**EQB01-08Q
21DQ05
31DF2-FA**




**HZS36-2L
HZS7B3L
RD4.7ES-B2
RD5.1JS-B1
RD5.1JS-B2
1SS202-1
11ES2**



RDF02M



10YD2.4A




AA5534S




BG5534S



**BR3371X
MAY3371X
MBG3371X
MPY3371X-177**



3-2. CIRCUIT BOARDS LOCATION

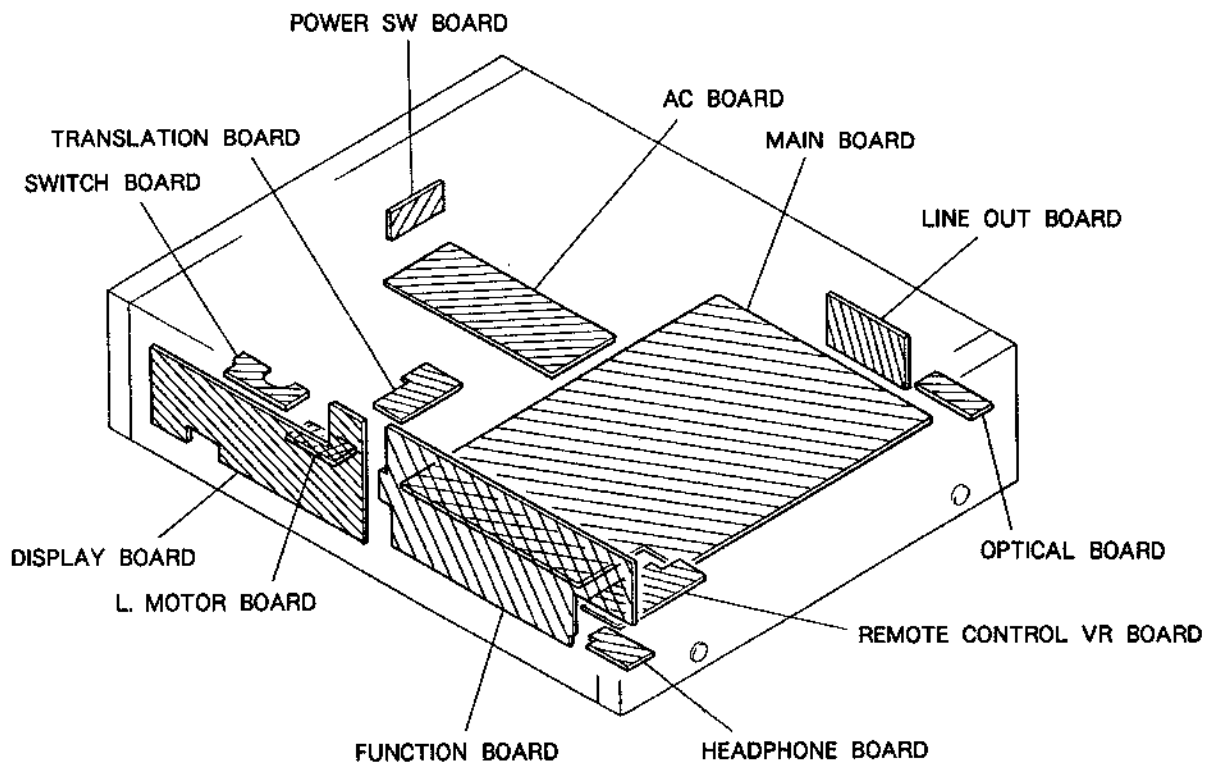


3-3. PRINTED WIRING BOARDS

Semiconductor Location

Ref. No.	Location	Ref. No.	Location
D401	I-7	IC403	I-8
D403	I-6	IC405	F-6
D404	I-6	IC406	F-4
D421	G-7	IC407	F-4
D431	H-1	IC506	H-4
D432	I-2	IC507	H-4
D433	B-4	IC551	E-4
D434	B-4	IC801	F-19
D471	I-3	IC802	F-14
D531	F-1	IC902	D-7
D532	E-2	IC903	E-7
D533	D-4	IC921	D-4
D534	D-4	IC931	D-2
D571	E-3		
D701	G-27	Q051	D-14
D702	G-27	Q052	D-15
D703	G-27	Q101	D-10
D704	G-26	Q301	F-12
D705	G-26	Q401	F-6
D706	G-26	Q403	I-7
D707	G-23	Q431	H-2
D708	G-24	Q432	H-2
D709	I-29	Q433	I-2
D710	I-29	Q434	H-2
D711	H-29	Q451	E-5
D712	H-29	Q471	F-3
D713	H-24	Q472	E-3
D801	H-21	Q473	E-3
D901	C-6	Q531	F-2
D907	F-7	Q532	G-2
D911	C-5	Q533	E-1
D914	C-5	Q534	F-2
D915	B-5	Q551	D-5
D921	D-6	Q571	H-3
D922	D-5	Q572	I-4
D923	D-5	Q573	I-4
D924	D-6	Q801	F-17
D931	E-2	Q802	F-17
D941	D-3	Q803	F-20
		Q804	F-20
IC051	D-15	Q805	F-20
IC101	D-9	Q806	F-20
IC102	C-10	Q807	F-20
IC103	C-12	Q808	F-21
IC201	F-9	Q911	B-5
IC202	H-9	Q931	D-2
IC203	D-6	Q941	D-3
IC210	B-19		
IC301	F-11		
IC302	G-11		
IC303	G-12		
IC401	G-7		
IC402	H-5		

Note on Mounting Diagram:

- : parts extracted from the component side.
- : parts mounted on the conductor side.
- : Through hole.
- ▨ : Pattern on the side which is seen.
- ▨ : Pattern of the rear side.

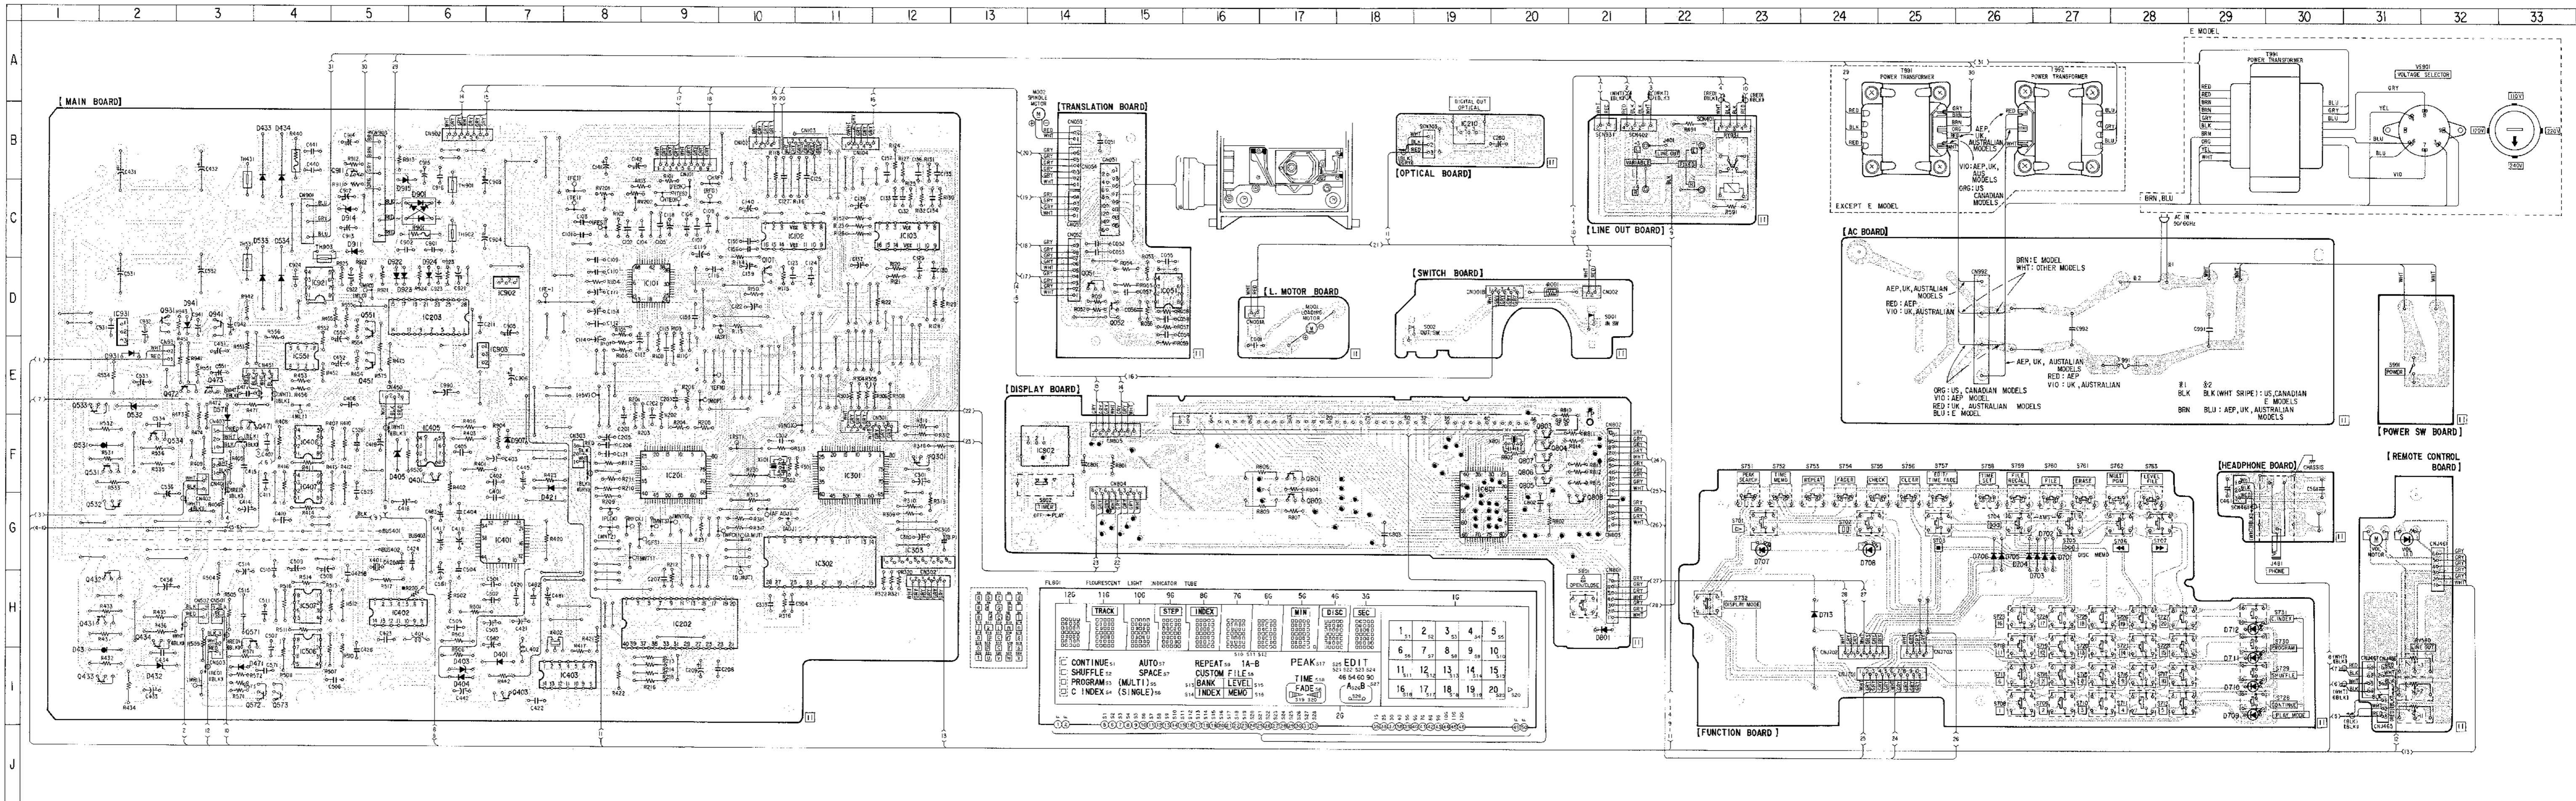










Note on Schematic Diagram:

- All capacitors are in μF unless otherwise noted. μF : μF 50WV or less are not indicated except for electrolytics and tantalums.
- All resistors are in Ω and $1/4\text{W}$ or less unless otherwise specified.
- % : indicates tolerance.
- Δ : internal component.
- \square : nonflammable resistor.
- \square : fusible resistor.


Note: The components identified by mark Δ or dotted line with mark Δ are critical for safety. Replace only with part number specified.

Note: Les composants identifiés par une marque Δ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

○ : B+ Line
 ○ : B- Line
 ○ : adjustment for repair.
 ○ : Voltage and waveforms are dc with respect to ground under no-signal conditions.
 ○ : Voltages are taken with a VOM (input impedance 10M Ω). Voltage variations may be noted due to normal production tolerances.
 ○ : Waveforms are taken with an oscilloscope. Voltage variations may be noted due to normal production tolerances.
 ○ : Circled numbers refer to waveforms.
 ○ : Signal path.
 ○ : CD
 ○ : digital out

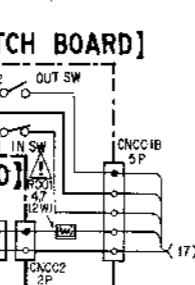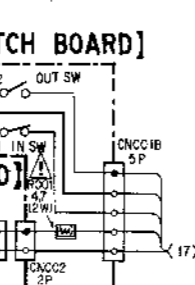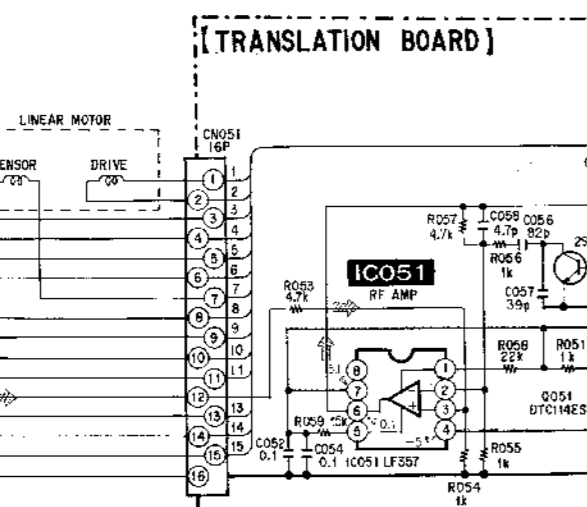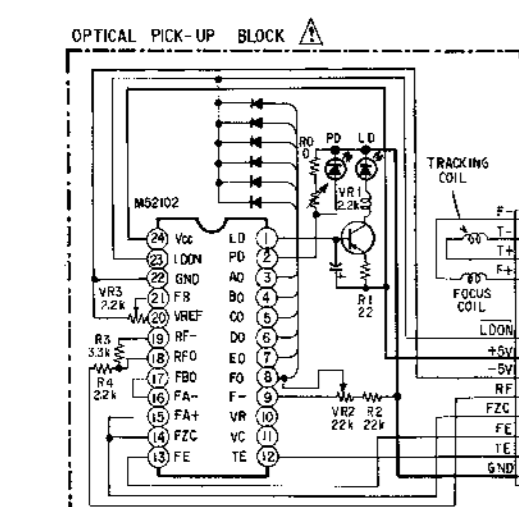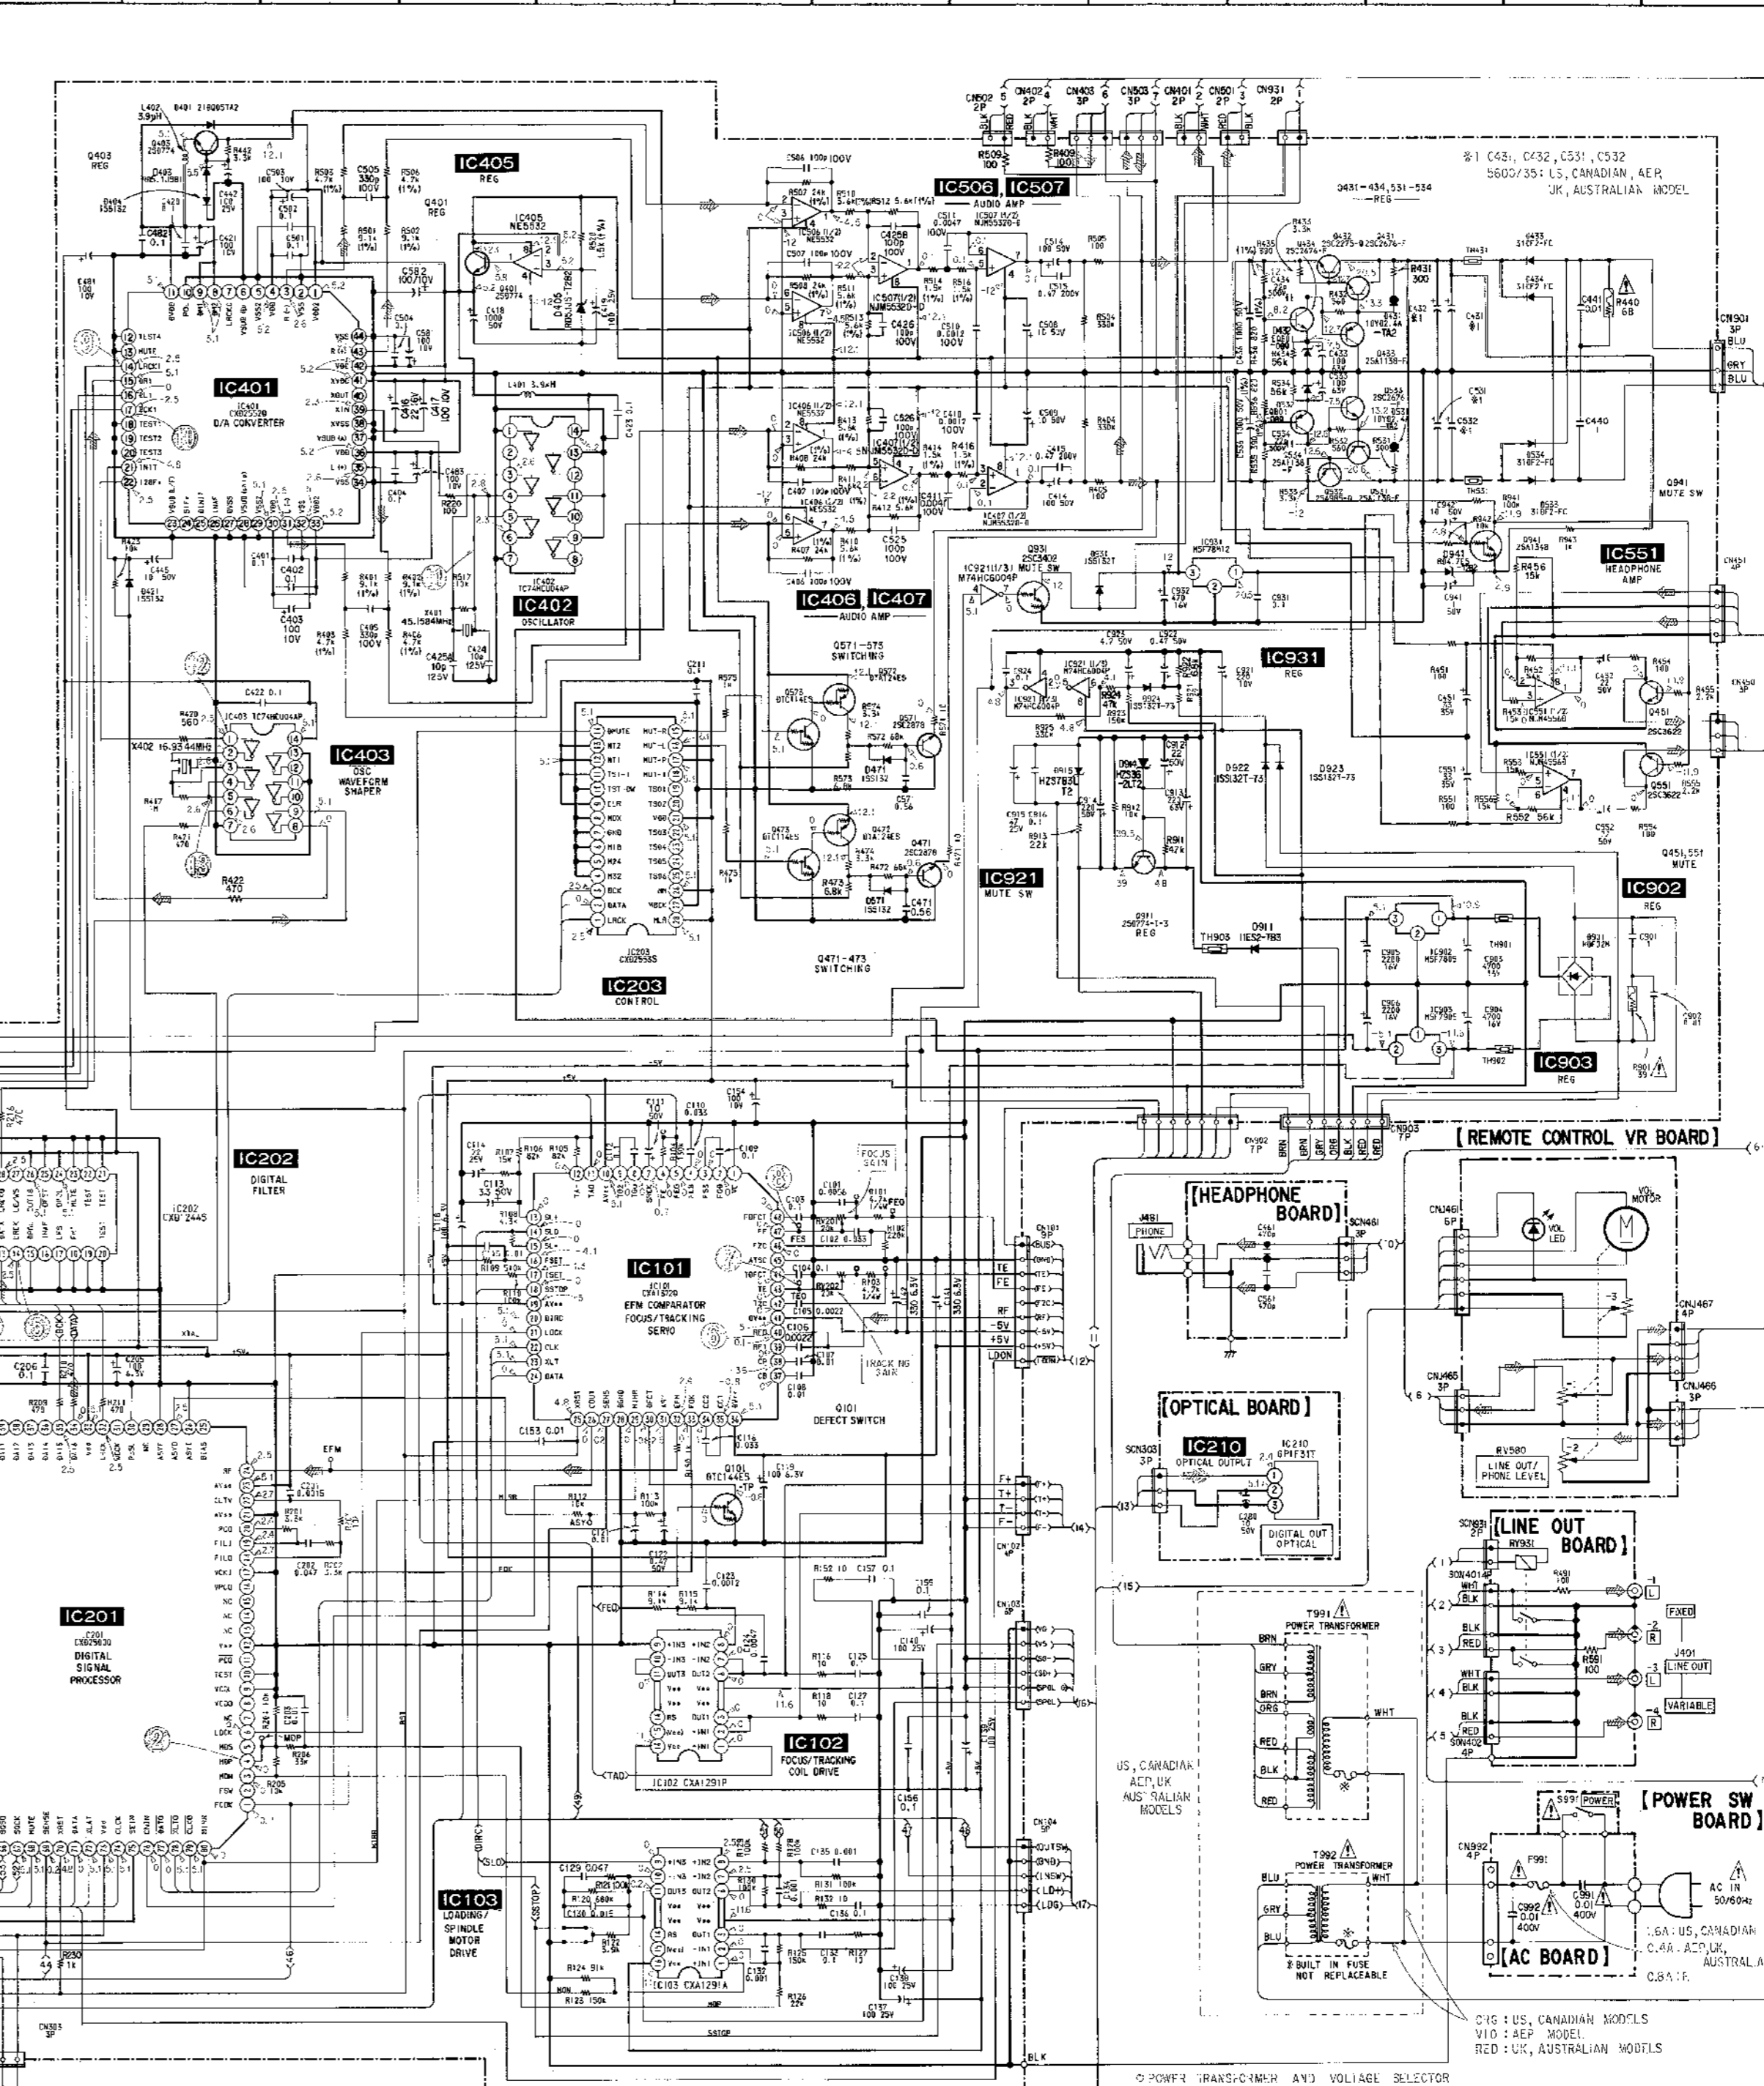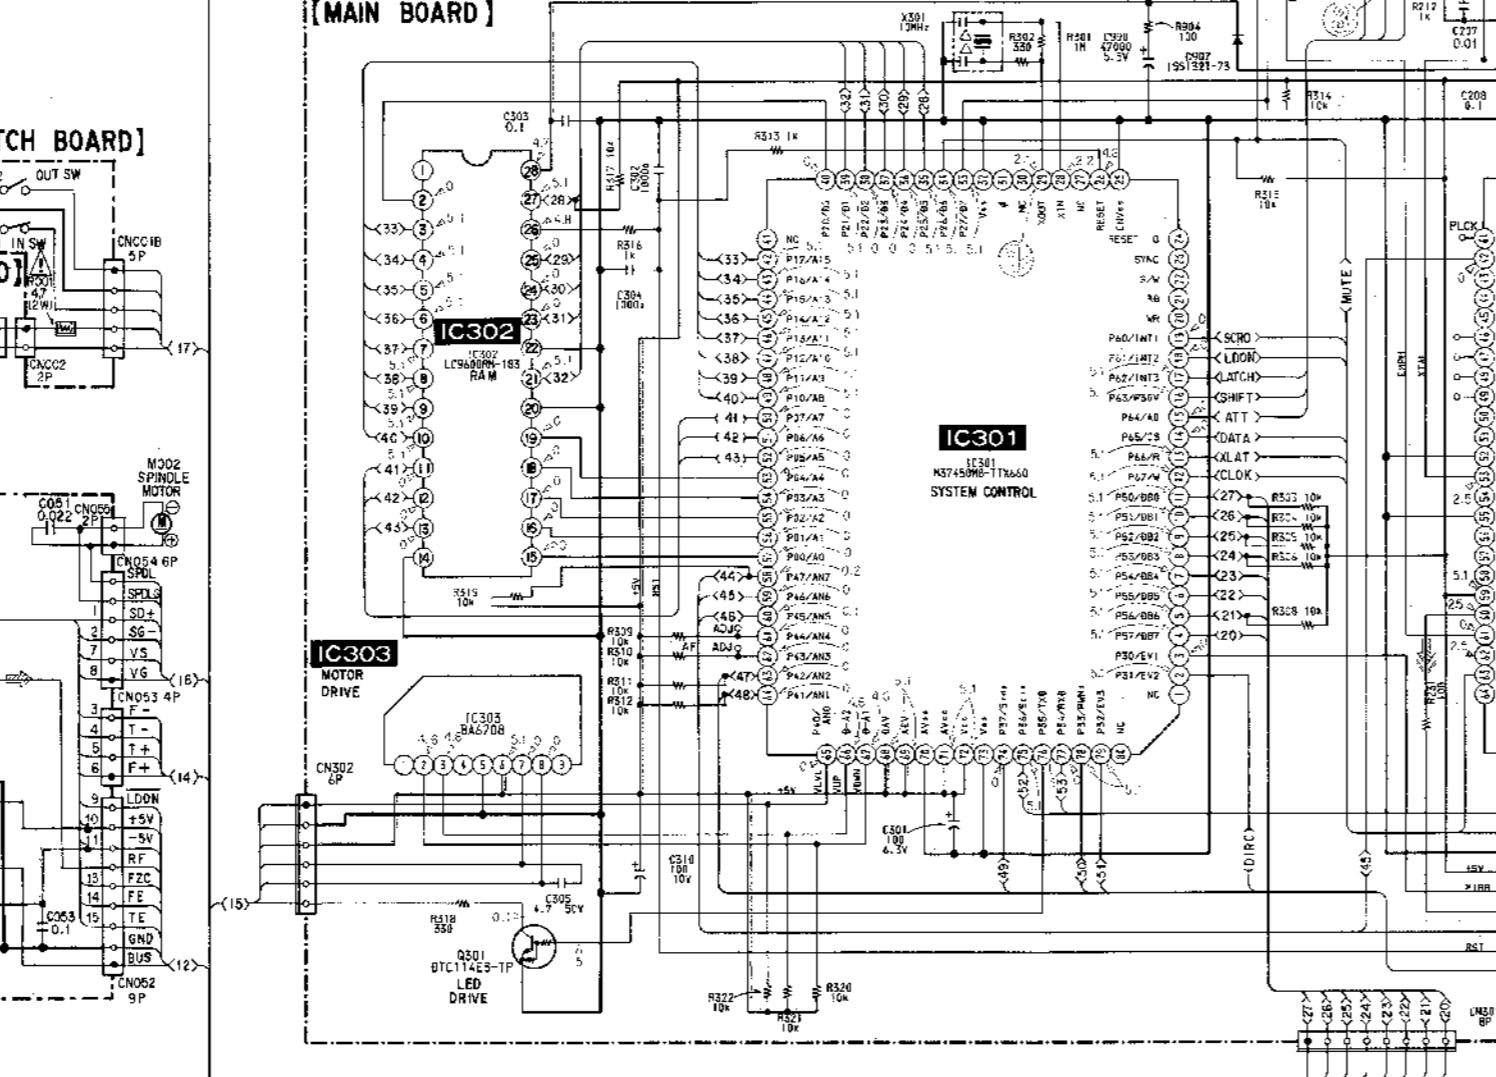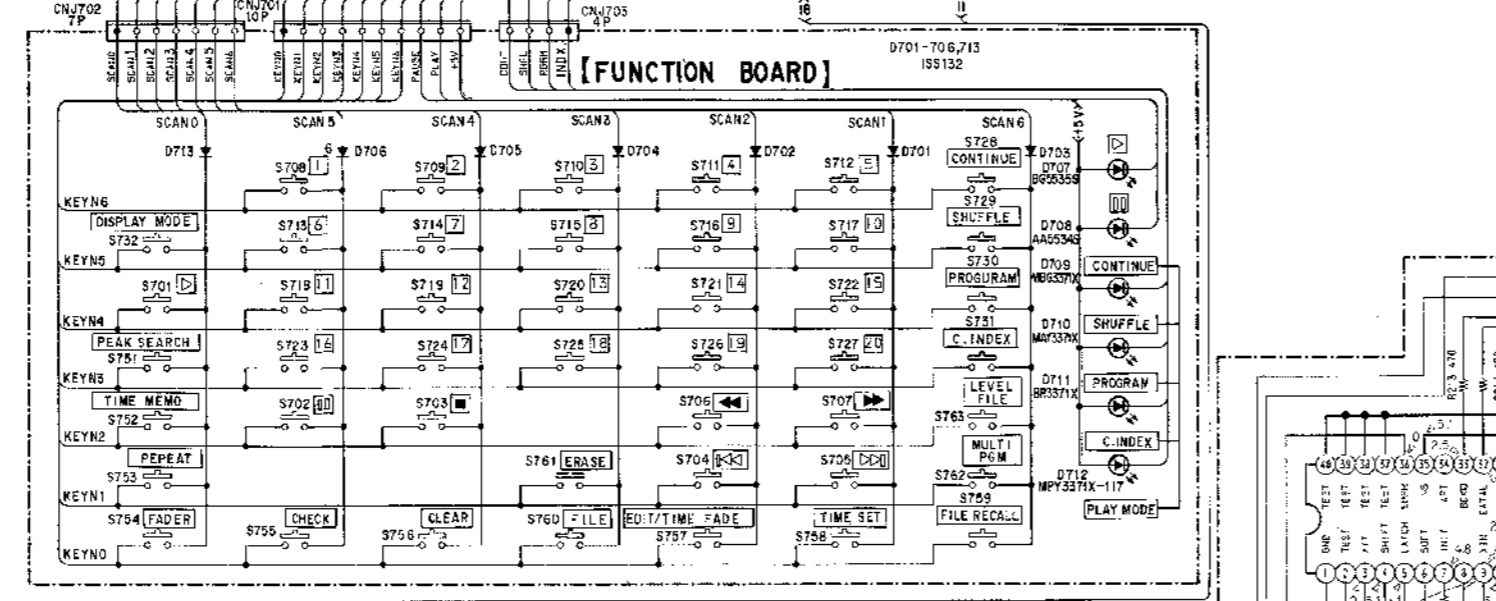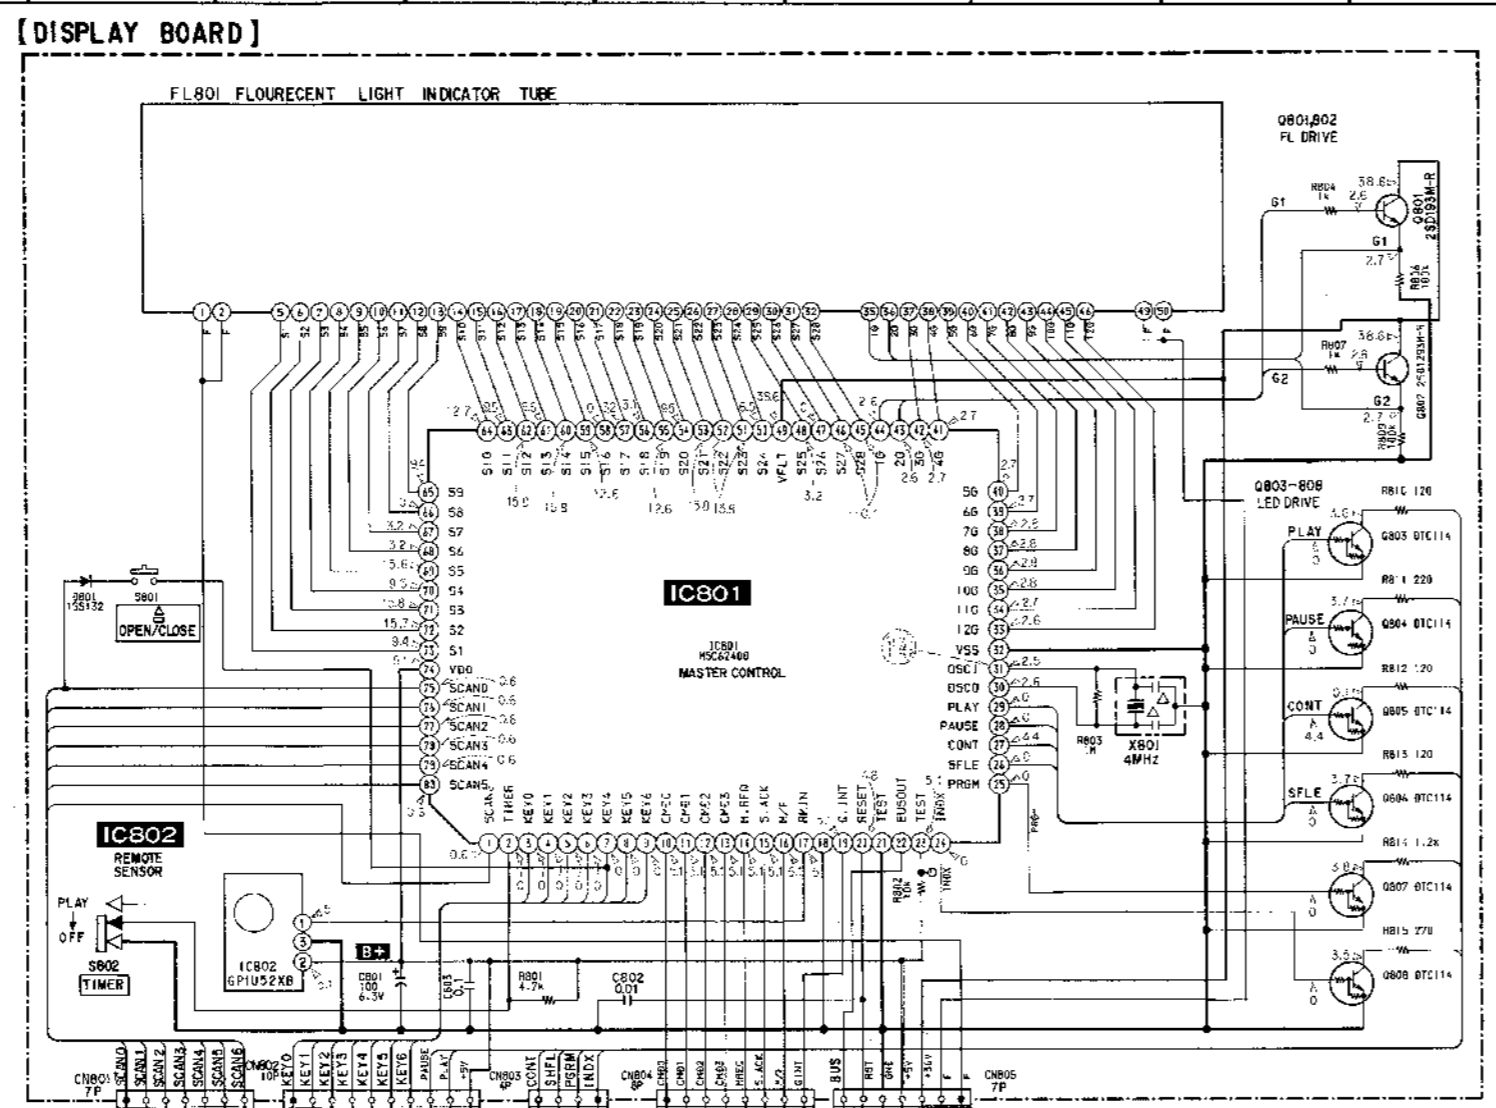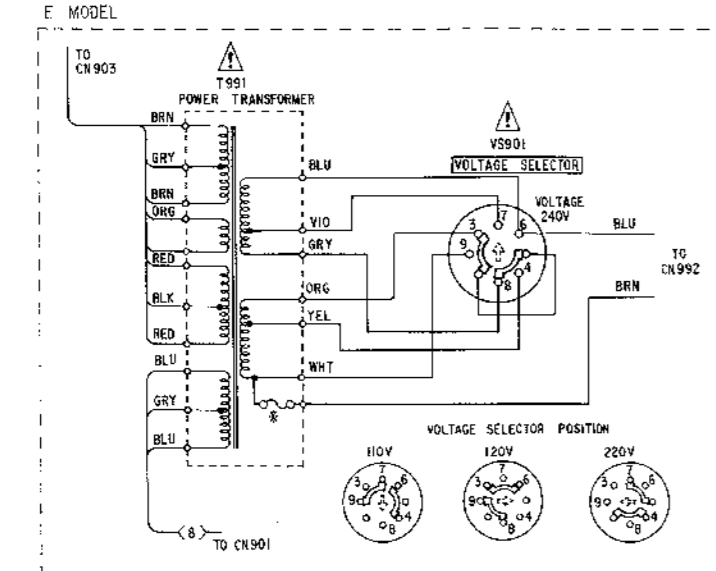


POWER TRANSFORMER AND VOLTAGE SELECTOR SECTION OF E MODEL IS SHOWN AT THE OTHER SIDE.

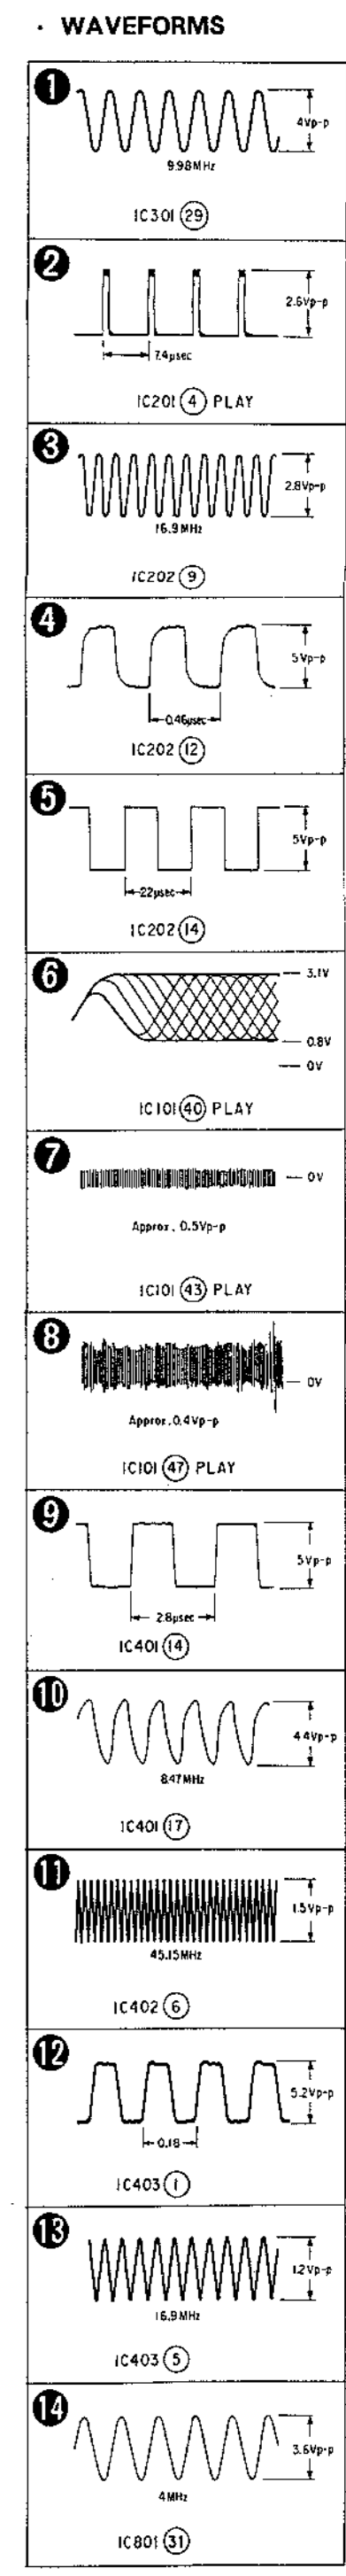


• IC BLOCK DIAGRAM


IC101 CXA1372Q

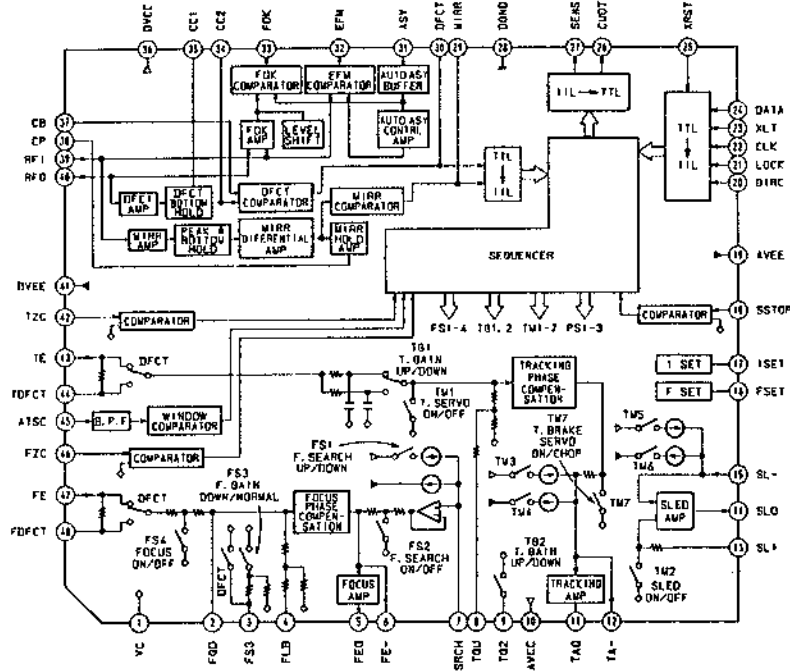


IC401 CXD2552Q

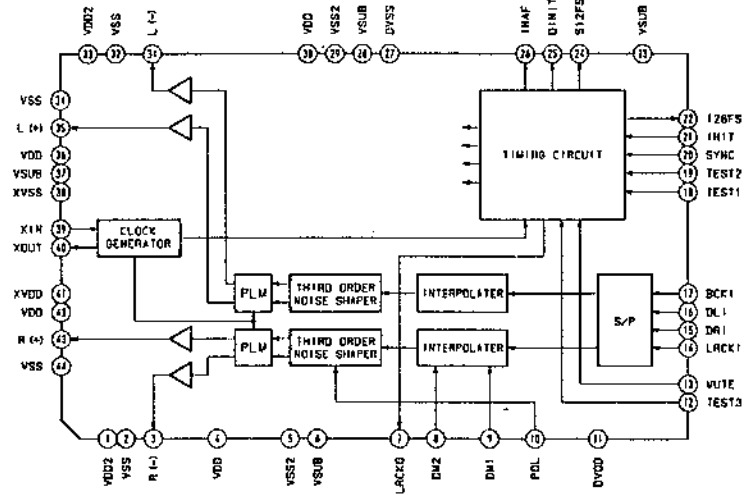


IC202 CXD1244S

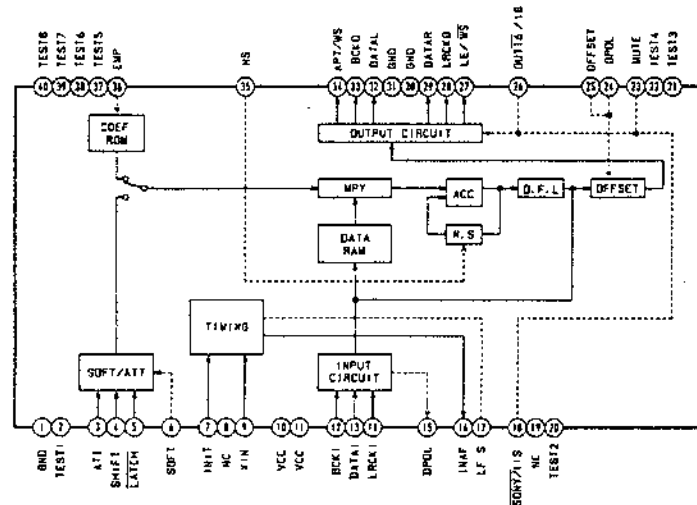


IC303 BA6208

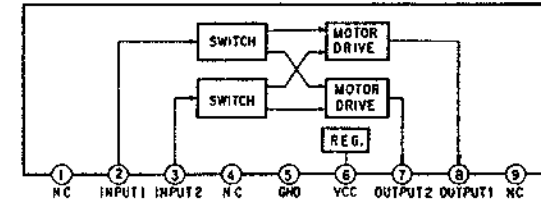

IC203 CXD2553S

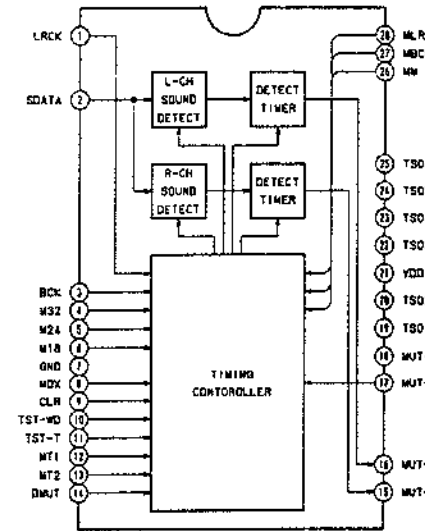

IC201 CXD2500Q

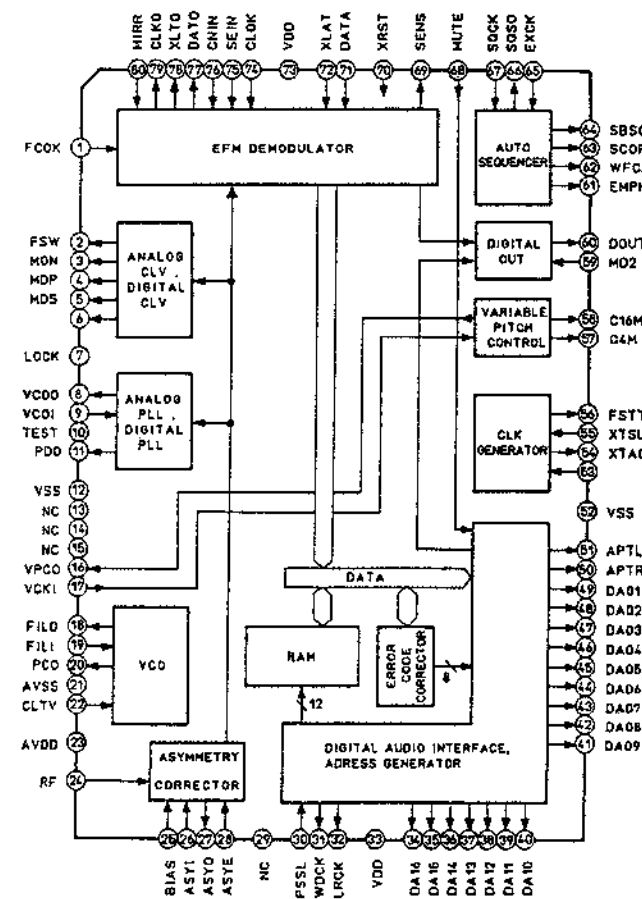

SECTION 4 EXPLODED VIEWS

NOTE:

- The mechanical parts with no reference number in the exploded views are not supplied.
- The construction parts of an assembled part are indicated with a collation number in the remark column.
- Items marked "*" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.

- Due to standardization, parts with part number suffix -XX and -X may be different from the parts specified in the components used on the set.


- Color Indication of Appearance Parts Example:
(RED) ... KNOB, BALANCE (WHITE)

↑ Cabinet's Color
↑ Parts' Color

The components identified by mark or dotted line with mark are critical for safety. Replace only with part number specified.


Les composants identifiés par une marque sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

4-1. OVERALL SECTION

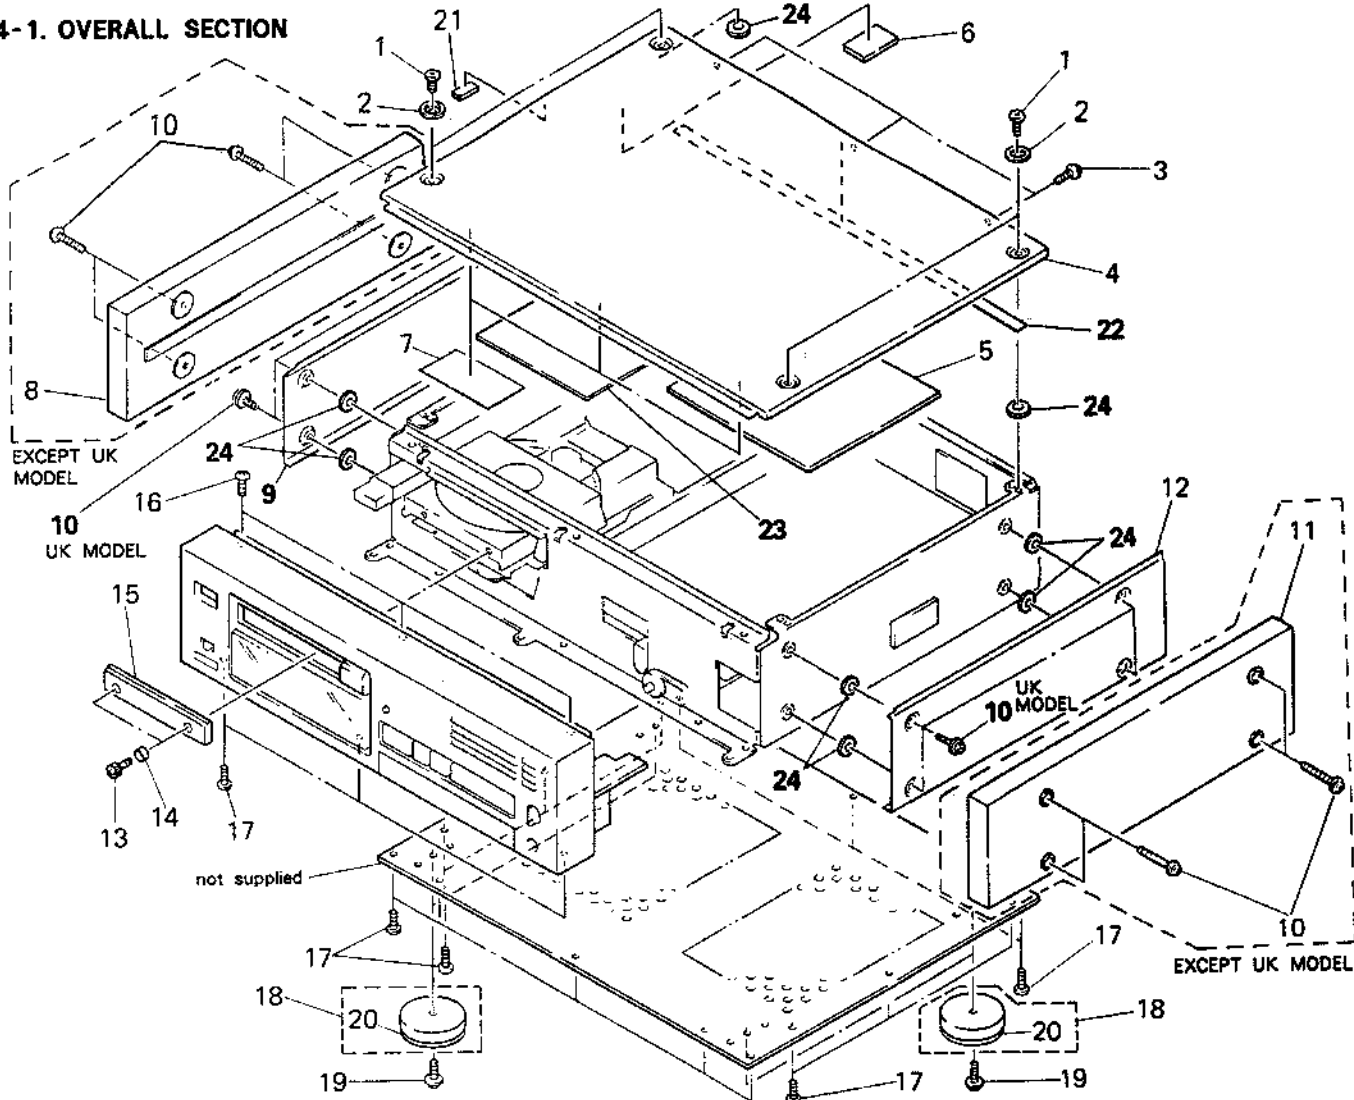


No.	Part No.	Description	Remarks	No.	Part No.	Description	Remarks
1	4-924-242-11	SCREW (M3X6), FLAT HEAD		12	4-925-369-11	CASE (RIGHT)	
2	4-928-025-11	ESCUTCHEON (TOP PLATE)		13	7-621-996-24	BOLT 2.6X4, HEXAGON SOCKET	
3	3-703-685-21	SCREW (+BV 3X8)		14	4-884-635-00	BASE, ORNAMENTAL	
4	4-925-367-21	CASE (TOP PLATE)		15	X-4934-006-1	(Canadian,AEP,UK)...PANEL ASSY, LOADING	
5	*4-913-189-11	FELT (B), ACOUSTIC ABSORBENT			X-4934-025-1	(US,E,Australian)...PANEL ASSY, LOADING	
6	*4-923-557-01	DUMPER		16	7-682-548-09	SCREW (3X8)	
7	*4-923-563-01	CUSHION		17	4-929-074-01	SCREW (3X8)	
8	X-4922-574-2	(AEP).....BOARD (LEFT) ASSY, SIDE		18	X-4922-549-1	FOOT ASSY	
	X-4928-001-1	(US,Canadian,E,Australian) ...PLATE (LEFT) ASSY, SIDE		19	7-682-964-09	SCREW +PSW 4X14	
9	4-925-368-11	CASE (LEFT)		20	4-922-543-01	FOOT	
10	4-847-802-00	(UK).....SCREW SWCH M4S		21	*4-929-017-01	CUSHION	
	4-885-979-11	(EXCEPT UK)...SCREW (4X25)		22	*4-378-254-31	SHEET	
11	X-4922-575-2	(AEP).....BOARD (RIGHT) ASSY, SIDE		23	*4-935-913-11	CUSHION	
	X-4928-002-1	(US,Canadian,E,Australian) ...PLATE (RIGHT) ASSY, SIDE		24	4-935-917-01	WASHER (CASE)	



4-2 FRONT PANEL SECTION

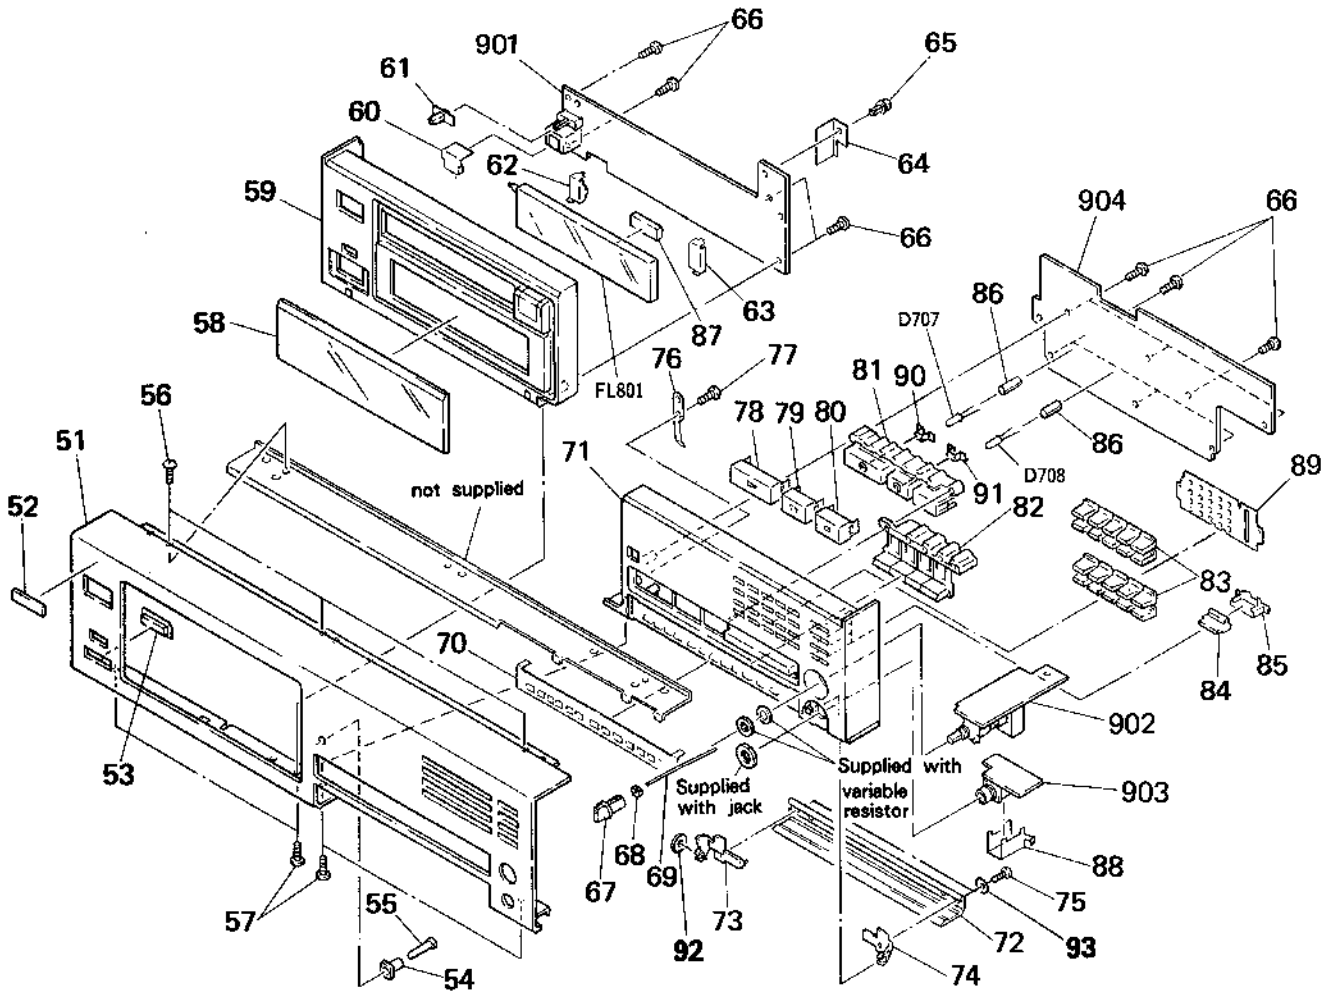


















No.	Part No.	Description	Remarks	No.	Part No.	Description	Remarks
51	4-934-074-01 4-934-074-11	(AEP,E,Australian)...PANEL, FRONT (US,Canadian,UK).....PANEL, FRONT		77	7-685-132-19	SCREW +BTP 2.6X5 TYPE2 N-S	
52	4-908-848-01	EMBLEM, SONY		78	4-928-043-01	CAP (L), KNOB	
53	4-934-036-01	PLATE, INDICATION		79	4-934-067-01	CAP (S), KNOB	
54	4-934-033-01	ESCUTCHEON (DISPLAY)		80	4-934-067-11	CAP (S), KNOB	
55	4-934-031-01	BUTTON (DISPLAY)		81	4-934-073-01	BUTTON (BASE)	
56	7-685-870-01	SCREW +BVTT 3X5 (S)		82	4-934-063-01	BUTTON (AMS)	
57	7-685-646-79	SCREW +BTP 3X8 TYPE2 N-S		83	4-934-026-01	BUTTON (M/C)	
58	4-934-037-01	WINDOW (LAY CATCHER)		84	4-934-065-01	BUTTON (MODE)	
59	X-4934-026-1	BASE (L) ASSY		85	4-934-064-01	BUTTON (MODE HOLDER)	
60	*4-927-311-01	COVER (REMOTE CONTROL)		86	*4-923-532-21	SPACER, LED	
61	4-922-518-11	KNOB (TIMER)		87	9-911-841-XX	SPACER	
62	*4-928-053-01	HOLDER (LEFT)		88	*4-934-048-01	PLATE, GROUND	
63	*4-928-052-01	HOLDER (RIGHT)		89	4-935-911-01	CUSHION (BUTTON)	
64	*4-934-051-01	COVER		90	4-934-049-01	INDICATOR (PLAY)	
65	3-531-576-01	RIVET		91	4-934-050-01	INDICATOR (PAUSE)	
66	7-685-134-19	SCREW +BTP 2.6X8 TYPE2 N-S		92	3-701-440-01	WASHER, 3.5 t=0.13	
67	4-922-977-01	KNOB (HP)			3-701-440-11	WASHER, 3.5 t=0.25	
68	4-922-978-01	HOLDER (FIBER)			3-701-440-21	WASHER, 3.5 t=0.5	
69	4-922-979-11	INDICATOR		93	7-688-001-12	W 2, MIDDLE	
70	4-934-062-01	PLATE (SEALING), ORNAMENTAL		901	*A-4617-226-A	MOUNTED PCB, DISPLAY	
71	X-4934-007-1	BASE (R) ASSY, PANEL		902	*1-632-980-11	PC BOARD, REMOTE CONTROL VR	
72	4-934-066-01	PANEL (SEALING)		903	*1-632-981-11	PC BOARD, HEADPHONE	
73	4-934-070-01	HOLDER (LEFT BEARING)		904	*1-632-979-11	PC BOARD, FUNCTION	
74	4-934-069-01	HOLDER (RIGHT BEARING)		D707	8-719-907-81	DIODE 6G5534S	
75	4-935-914-01	SCREW (2X6) (TYPE 2), +BTP		D708	8-719-907-75	DIODE AA5534S	
76	4-934-068-01	SPRING (BEARING)		FL801	1-519-554-11	INDICATOR TUBE, FLUORESCENT	

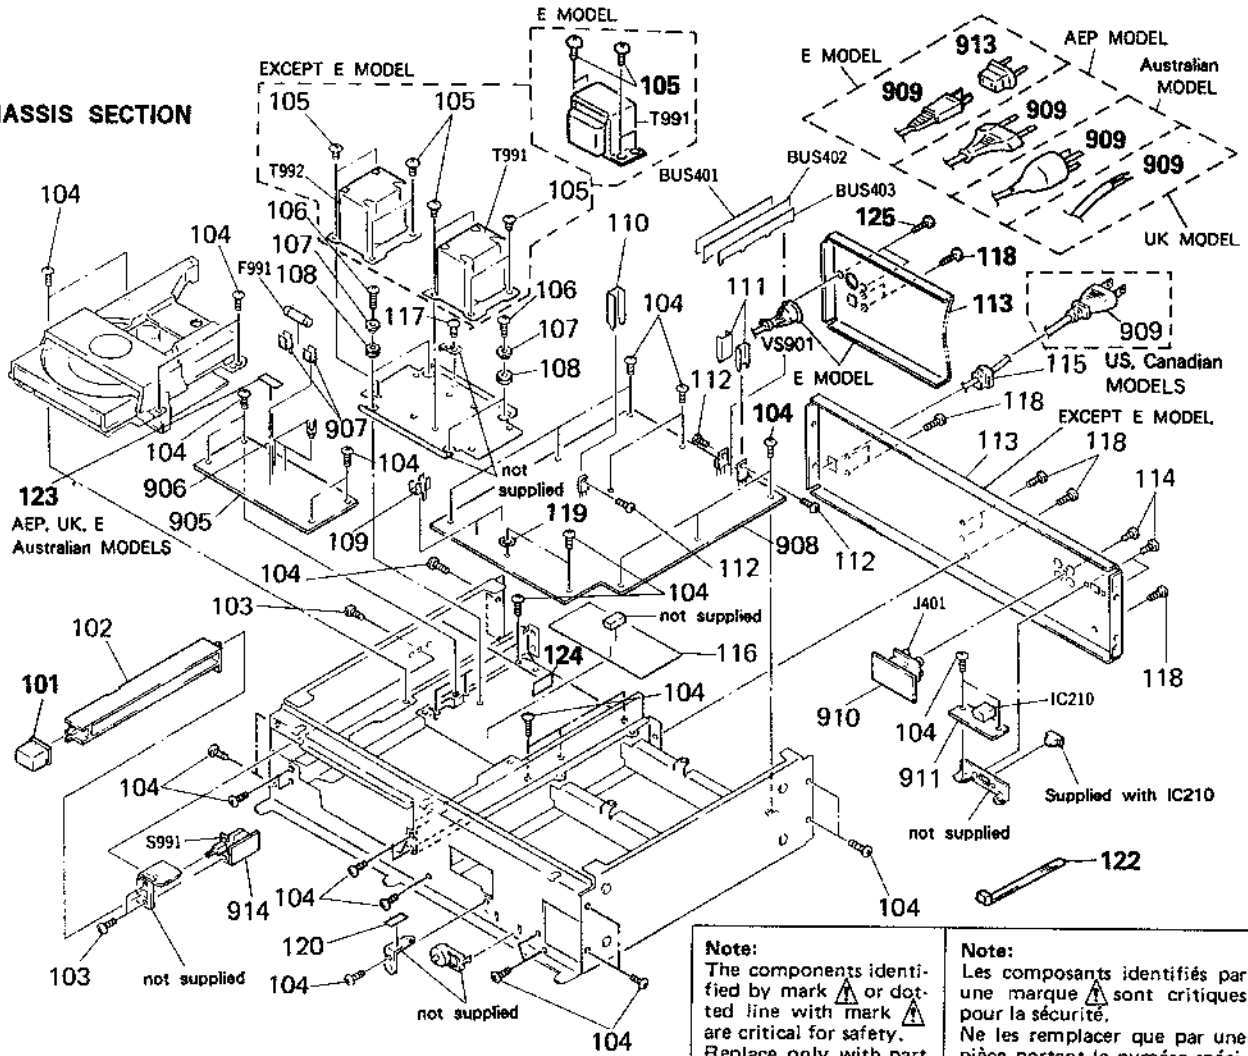4-3. CHASSIS SECTION




Note:
The components identified by mark  or dotted line with mark  are critical for safety. Replace only with part number specified.

Note:
Les composants identifiés par une marque  sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.


No.	Part No.	Description	Remarks	No.	Part No.	Description	Remarks
101	4-923-520-01	KNOB, POWER		905	*1-632-982-11	PC BOARD, AC	
102	*4-934-044-01	LEVER (POWER)		906	*1-535-771-11	TERMINAL	
103	7-682-548-04	SCREW +BVTT 3X8 (S)		907	1-533-183-11	HOLDER, FUSE	
104	7-682-548-09	SCREW (3X8)		908	*A-4617-393-A	(E).....MOUNTED PCB, MAIN	
					*A-4617-501-A	(EXCEPT E)...MOUNTED PCB, MAIN	
105	7-682-560-04	SCREW +BVTT 4X6 (S)		909	 .1-555-386-00	(E).....CORD, POWER	
106	7-685-873-09	SCREW +BVTT 3X10 (S)			 .1-555-795-00	(AEP).....CORD, POWER	
107	4-928-032-01	COLLAR (A)			 .1-556-035-11	(UK).....CORD, POWER	
108	*4-888-798-00	BUSHING, RUBBER			 .1-557-577-11	(US,Canadian)...CORD, POWER	
109	*4-922-525-01	HEAT SINK			 .1-575-379-11	(Australian)....CORD, POWER	
110	*4-886-555-00	HEAT SINK		910	*1-632-978-11	PC BOARD, LINE OUT	
111	4-902-345-01	HEAT SINK		911	*1-632-977-11	PC BOARD, OPTICAL	
112	7-682-147-15	SCREW, TR		913	 .1-526-565-00	(E)...AC PLUG ADAPTOR	
113	*4-934-002-02	(E).....PANEL, BACK		914	*1-633-230-11	PC BOARD, POWER SW	
	*4-934-002-61	(US).....PANEL, BACK		BUS401	1-569-135-11	BAR, BUS 4P	
	*4-934-002-71	(Canadian).....PANEL, BACK		BUS403	1-569-135-11	BAR, BUS 4P	
	*4-934-002-81	(AEP).....PANEL, BACK		BUS402	1-569-136-11	BAR, BUS 5P	
	*4-934-002-91	(UK,Australian)...PANEL, BACK		F991	 .1-532-066-11	(AEP,UK,Australian)..FUSE, TIME-LAG 0.4A	
114	3-703-685-21	SCREW (+BV 3X8)		F991	 .1-532-215-11	(E).....FUSE, TIME-LAG 0.8A	
115	2-231-019-00	CLAMPER, CORD		F991	 .1-532-742-11	(US,Canadian)...FUSE, GLASS TUBE 1.6A	
116	*4-935-908-01	SHEET		IC210	8-759-977-71	IC GP-1F31T	
117	7-682-547-04	SCREW +BVTT 3X6 (S)		J401	1-568-101-11	JACK, PIN 4P (LINE OUT)	
118	4-929-074-01	SCREW (3X8)		S991	 .1-570-156-11	SWITCH, PUSH (AC POWER)(1 KEY)(POWER)	
119	4-935-925-01	WASHER (MAIN MOUNT)		T991	 .1-450-024-11	(US,Canadian).....TRANSFORMER, POWER	
120	*4-883-473-00	SPACER, CASSETTE LID		T991	 .1-450-026-11	(AEP,UK,Australian)...TRANSFORMER, POWER	
122	3-655-653-21	BAND (TAITON), BINDING		T991	 .1-450-028-11	(E).....TRANSFORMER, POWER	
123	3-701-947-10	(E).....LABEL(T800M4), FUSE		T992	 .1-450-025-11	(US,Canadian).....TRANSFORMER, POWER	
	*3-701-948-10	(AEP,UK,Australian)...LABEL(T400M4), FUSE		T992	 .1-450-027-11	(AEP,UK,Australian)...TRANSFORMER, POWER	
124	*3-703-044-26	(US,Canadian)...LABEL, CAUTION		VS901	 .1-526-576-51	(E)...SELECTOR, POWER VOLTAGE (VOLTAGE SELECTOR)	
125	7-682-547-09	SCREW +B 3X6 BZN					



4-4. MECHANISM SECTION (CDM11E-6C)

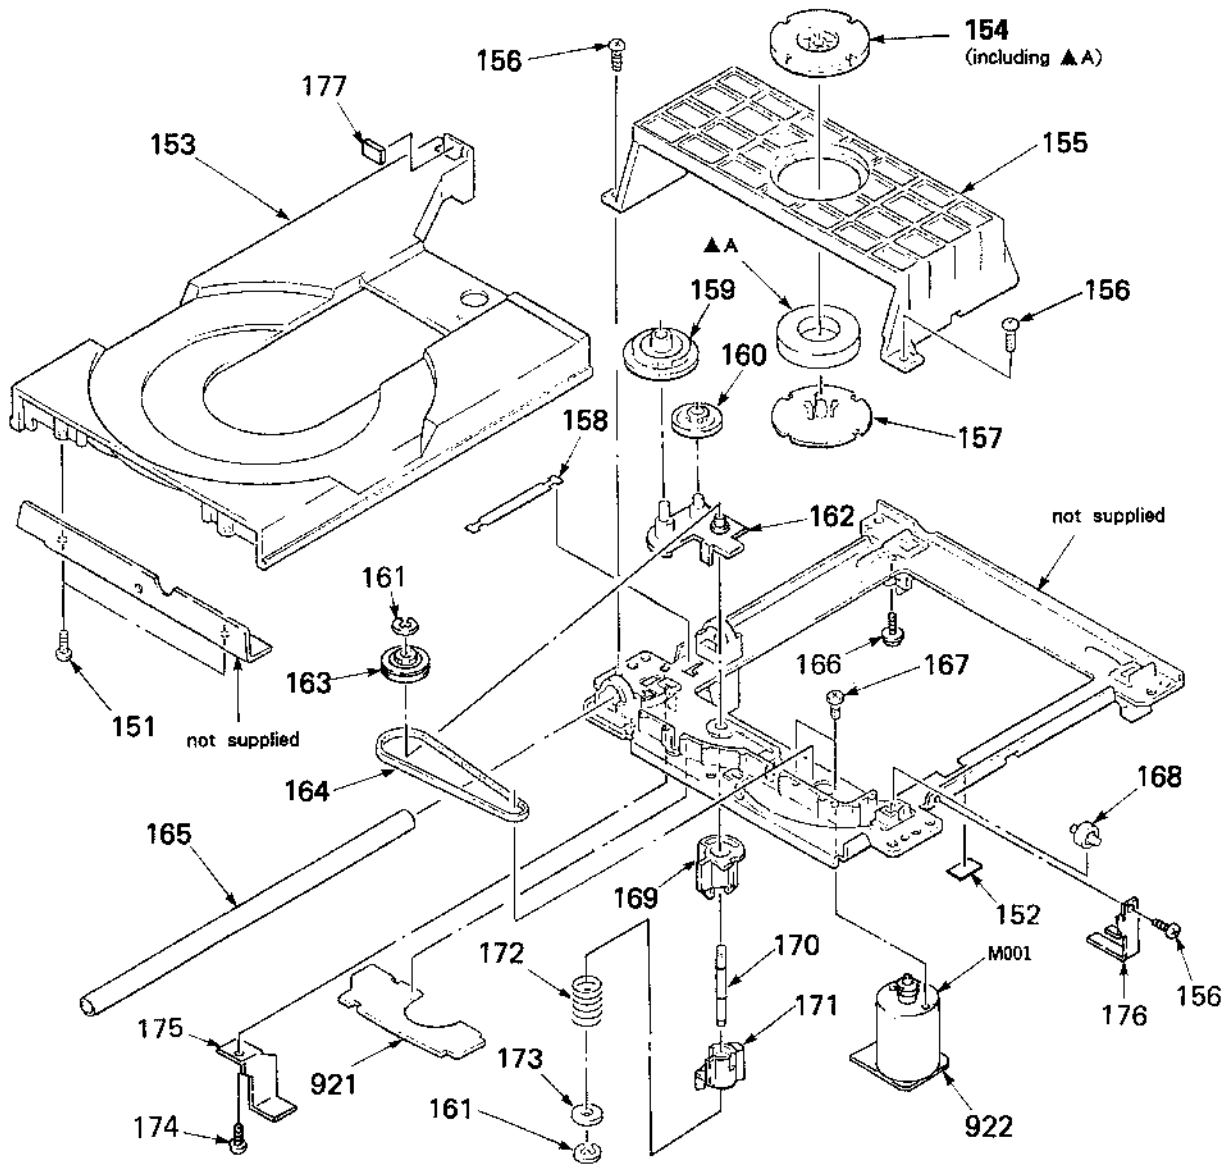



No.	Part No.	Description	Remarks	No.	Part No.	Description	Remarks
151	7-685-647-79	SCREW +P 3X10 TYPE2 SLIT		166	*4-917-583-21	BRACKET, YOKE	
152	3-831-441-11	CUSHION (A)		167	7-682-544-04	SCREW +P 3X3	
153	*4-927-642-01	TABLE (EXL), DISC		168	4-927-627-01	ROLLER (S,G)	
154	A-4665-024-A	MAGNET ASSY		169	4-927-624-01	CAM (L,A)	
155	*4-927-638-03	HOLDER (A,P)		170	4-927-665-01	SHAFT (S)	
156	7-621-770-67	SCREW +BVTT 2.6X6 (S)		171	4-927-635-01	CAM (L,B)	
157	*4-918-679-04	PULLEY, PRESS		172	3-659-338-00	SPRING, COMPRESSION	
158	*4-927-648-01	SLIDER (GROUND)		173	4-927-654-01	WASHER (LIMITER)	
159	4-927-620-01	GEAR (P)		174	7-621-773-86	SCREW +BVTT 2.6X4 (S)	
160	4-927-628-01	GEAR (C)		175	*4-927-659-01	LIMITER (BU-6)	
161	7-624-105-04	STOP RING 2.3, TYPE -E		176	*4-927-655-01	LIMITER	
162	X-4927-608-1	ARM ASSY, SWING		177	*4-927-670-01	CUSHION (MD)	
163	4-929-724-01	PULLEY (B)		921	*1-632-974-11	PC BOARD, SWITCH	
164	4-927-649-01	BELT		922	*1-632-975-11	PC BOARD, L.MOTOR	
165	4-927-617-01	BAR, GUIDE		M001	A-4604-347-A	MOTOR (L) ASSY (LOADING)	

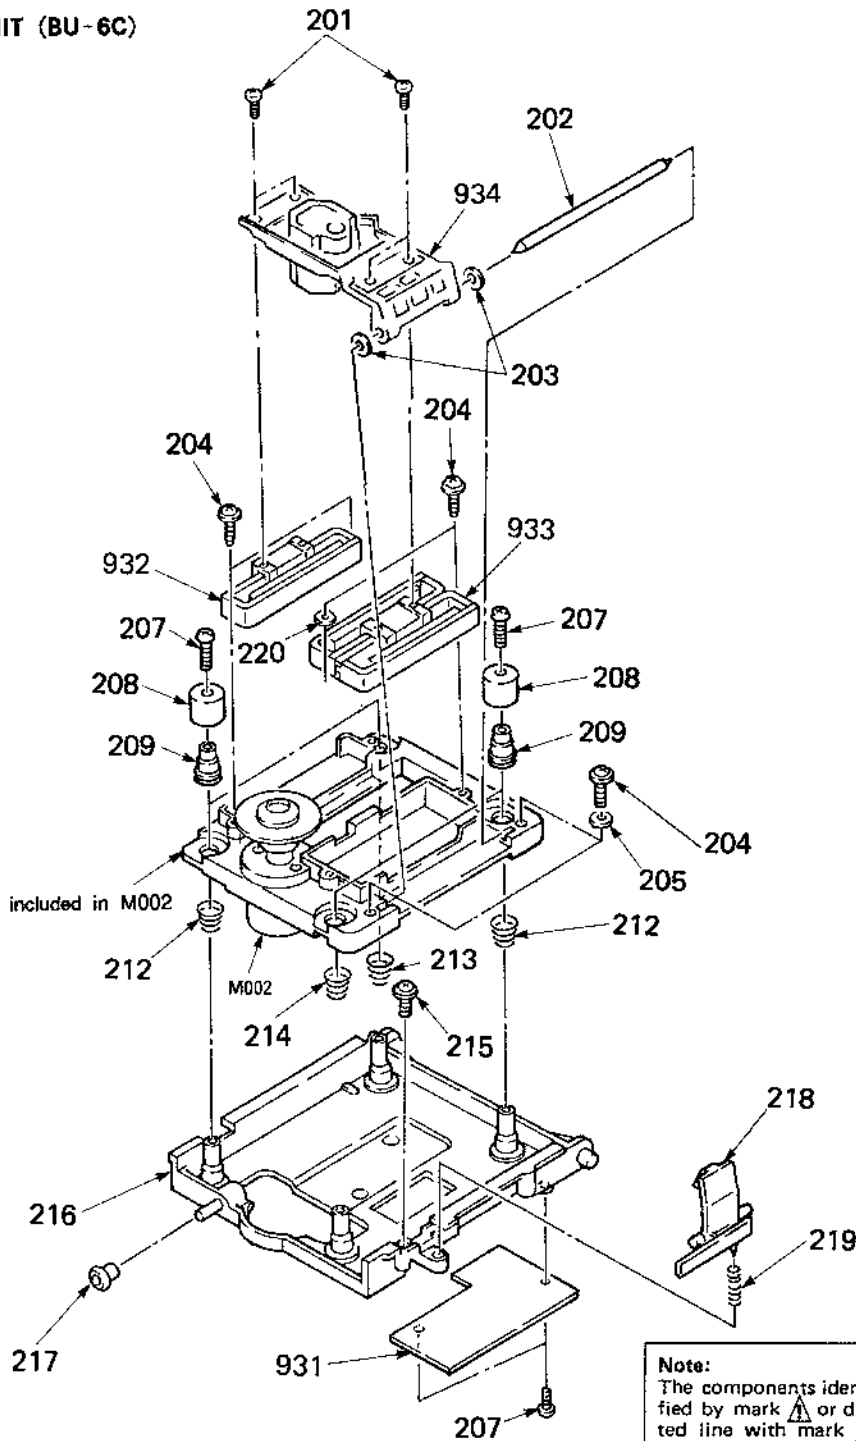4-5. BASE UNIT (BU-6C)



Note:
The components identified by mark  or dotted line with mark  are critical for safety. Replace only with part number specified.

Note:
Les composants identifiés par une marque  sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

No.	Part No.	Description	Remarks	No.	Part No.	Description	Remarks
201	3-318-203-61	SCREW (B1.7X4), TAPPING		215	7-685-132-19	+ PTPWH (2.6X5)	
202	*4-910-431-01	SHAFT, SLIDE		216	*4-927-637-01	HOLDER (BU-6)	
203	*4-917-582-01	CUSHION, SLIDE		217	4-927-631-01	ROLLER (L)	
204	7-685-646-79	SCREW, TAPPING +PTTWH M3X8		218	4-927-626-01	LEVER (L)	
205	4-927-318-01	WASHER		219	3-305-423-00	SPRING, COMPRESSION	
207	7-685-134-19	SCREW +BTP 2.6X8 TYPE2 N-S		220	4-927-669-01	WASHER (BU)	
208	4-927-634-01	HOLDER (SP)		931	*1-632-973-11	PC BOARD, TRANSLATION	
209	*4-917-584-11	INSULATOR		932	A-4638-084-A	SENSOR ASSY, SPEED	
212	4-917-572-01	SPRING (B)		933	A-4608-335-A	MOTOR ASSY, LINEAR	
213	4-917-571-01	SPRING (A)		934	 8-848-159-11	DEVICE, OPTICAL KSS-270A	
214	4-917-573-01	SPRING (E)		M002	X-4927-605-3	BASE ASSY, MECHANISM (SPINDLE MOTOR)	

SECTION 5 ELECTRICAL PARTS LIST

NOTE:

- Due to standardization, replacements in the parts list may be different from the parts specified in the diagrams or the components used on the set.
- Items marked "*" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- If there are two or more same circuits in a set such as a stereophonic machine, only typical circuit parts may be indicated and capacitors and resistors in other same circuits may be omitted.

CAPACITORS:
MF: μ F, PF: μ F.

RESISTORS
• All resistors are in ohms.
• F: nonflammable

COILS
• MMH: mH, UH: μ H

SEMICONDUCTORS
In each case, U: μ , for example:
UA...: μ A..., UPA...: μ PA...,
UPC...: μ PC, UPD...: μ PD...

The components identified by mark Δ or dotted line with mark Δ are critical for safety. Replace only with part number specified.

Les composants identifiés par une marque Δ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

Ref.No.	Part No.	Description
901	*A-4617-226-A	MOUNTED PCB, DISPLAY
902	*1-632-980-11	PC BOARD, REMOTE CONTROL VR
903	*1-632-981-11	PC BOARD, HEADPHONE
904	*1-632-979-11	PC BOARD, FUNCTION
905	*1-632-982-11	PC BOARD, AC
906	*1-535-771-11	TERMINAL
907	1-533-183-11	HOLDER, FUSE
908	*A-4617-393-A *A-4617-501-A	(E).....MOUNTED PCB, MAIN (EXCEPT E)...MOUNTED PCB, MAIN
909	Δ .1-555-386-00 Δ .1-555-795-00 Δ .1-556-035-11 Δ .1-557-577-11 Δ .1-575-379-11	(E).....CORD, POWER (AEP).....CORD, POWER (UK).....CORD, POWER (US,Canadian)...CORD, POWER (Australian)....CORD, POWER
910	*1-632-978-11	PC BOARD, LINE OUT
911	*1-632-977-11	PC BOARD, OPTICAL
913	Δ .1-526-565-00	(E)...AC PLUG ADAPTOR
914	*1-633-230-11	PC BOARD, POWER SW
921	*1-632-974-11	PC BOARD, SWITCH
922	*1-632-975-11	PC BOARD, L.MOTOR
931	*1-632-973-11	PC BOARD, TRANSLATION
932	A-4638-084-A	SENSOR ASSY, SPEED
933	A-4608-335-A	MOTOR ASSY, LINEAR
934	Δ .8-848-159-11	DEVICE, OPTICAL KSS-270A
BUS401	1-569-135-11	BAR, BUS 4P
BUS403	1-569-135-11	BAR, BUS 4P
BUS402	1-569-136-11	BAR, BUS 5P
C001	1-136-157-00	FILM 0.022MF 5% 50V
C051	1-136-157-00	FILM 0.022MF 5% 50V
C052	1-164-159-11	CERAMIC 0.1MF 50V
C053	1-164-159-11	CERAMIC 0.1MF 50V
C054	1-164-159-11	CERAMIC 0.1MF 50V
C055	1-164-159-11	CERAMIC 0.1MF 50V
C056	1-162-280-31	CERAMIC 82PF 10% 50V
C057	1-162-213-31	CERAMIC 39PF 5% 50V
C058	1-162-195-31	CERAMIC 4.7PF 10% 50V
C101	1-130-480-00	MYLAR 0.0056MF 5% 50V
C102	1-136-159-00	FILM 0.033MF 5% 50V
C103	1-136-165-00	FILM 0.1MF 5% 50V
C104	1-136-165-00	FILM 0.1MF 5% 50V
C105	1-161-375-00	CERAMIC 0.0022MF 20% 16V
C106	1-106-351-00	MYLAR 0.0022MF 5% 50V
C107	1-136-153-00	FILM 0.01MF 5% 50V
C108	1-136-153-00	FILM 0.01MF 5% 50V
C109	1-136-165-00	FILM 0.1MF 5% 50V

Ref.No.	Part No.	Description
C110	1-136-159-00	FILM 0.033MF 5% 50V
C111	1-123-875-11	ELECT 10MF 20% 50V
C112	1-136-165-00	FILM 0.1MF 5% 50V
C113	1-123-382-00	ELECT 3.3MF 20% 50V
C114	1-126-233-11	ELECT 22MF 20% 25V
C115	1-162-306-11	CERAMIC 0.01MF 20% 16V
C116	1-136-159-00	FILM 0.033MF 5% 50V
C118	1-124-443-00	ELECT 100MF 20% 6.3V
C119	1-124-443-00	ELECT 100MF 20% 6.3V
C121	1-136-153-00	FILM 0.01MF 5% 50V
C122	1-124-902-00	ELECT 0.47MF 20% 50V
C123	1-130-472-00	MYLAR 0.0012MF 5% 50V
C124	1-106-359-00	MYLAR 0.0047MF 5% 50V
C125	1-164-159-11	CERAMIC 0.1MF 50V
C127	1-164-159-11	CERAMIC 0.1MF 50V
C129	1-136-161-00	FILM 0.047MF 5% 50V
C130	1-136-155-00	FILM 0.015MF 5% 50V
C132	1-162-294-31	CERAMIC 0.001MF 10% 50V
C133	1-164-159-11	CERAMIC 0.1MF 50V
C134	1-162-294-31	CERAMIC 0.001MF 10% 50V
C135	1-162-294-31	CERAMIC 0.001MF 10% 50V
C136	1-164-159-11	CERAMIC 0.1MF 50V
C137	1-124-478-11	ELECT 100MF 20% 25V
C138	1-124-478-11	ELECT 100MF 20% 25V
C139	1-124-478-11	ELECT 100MF 20% 25V
C140	1-124-478-11	ELECT 100MF 20% 25V
C141	1-124-442-00	ELECT 330MF 20% 6.3V
C142	1-124-442-00	ELECT 330MF 20% 6.3V
C153	1-162-306-11	CERAMIC 0.01MF 20% 16V
C154	1-124-443-00	ELECT 100MF 20% 10V
C155	1-164-159-11	CERAMIC 0.1MF 50V
C156	1-164-159-11	CERAMIC 0.1MF 50V
C157	1-164-159-11	CERAMIC 0.1MF 50V
C201	1-106-347-00	MYLAR 0.0015MF 5% 50V
C202	1-136-161-00	FILM 0.047MF 5% 50V
C203	1-136-153-00	FILM 0.01MF 5% 50V
C205	1-124-443-00	ELECT 100MF 20% 6.3V
C206	1-164-159-11	CERAMIC 0.1MF 50V
C207	1-162-306-11	CERAMIC 0.01MF 20% 16V
C208	1-162-179-11	CERAMIC 0.1MF 50V
C209	1-126-176-11	ELECT 220MF 20% 10V
C211	1-162-179-11	CERAMIC 0.1MF 50V
C280	1-123-875-11	ELECT 10MF 20% 50V
C301	1-124-443-00	ELECT 100MF 20% 6.3V
C302	1-162-294-31	CERAMIC 0.001MF 10% 50V

Ref.No.	Part No.	Description			
C303	1-162-179-11	CERAMIC	0.1MF		50V
C304	1-162-294-31	CERAMIC	0.001MF	10%	50V
C305	1-124-768-11	ELECT	4.7MF	20%	50V
C310	1-124-443-00	ELECT	100MF	20%	10V
C401	1-136-165-00	FILM	0.1MF	5%	50V
C402	1-136-165-00	FILM	0.1MF	5%	50V
C403	1-126-101-11	ELECT	100MF	20%	10V
C404	1-136-165-00	FILM	0.1MF	5%	50V
C405	1-136-811-11	FILM	330PF	5%	100V
C406	1-136-808-11	FILM	100PF	5%	100V
C407	1-136-808-11	FILM	100PF	5%	100V
C410	1-136-228-11	FILM	0.0012MF	2%	100V
C411	1-136-233-11	FILM	0.0047MF	2%	100V
C414	1-124-572-11	ELECT	100MF	20%	50V
C415	1-136-580-11	FILM	0.47MF	10%	200V
C416	1-131-367-00	TANTALUM	22MF	20%	16V
C417	1-126-101-11	ELECT	100MF	20%	10V
C418	1-126-170-11	ELECT	1000MF	20%	50V
C419	1-123-333-00	ELECT	100MF	20%	25V
C420	1-136-165-00	FILM	0.1MF	5%	50V
C421	1-126-101-11	ELECT	100MF	20%	10V
C422	1-162-179-11	CERAMIC	0.1MF		50V
C423	1-136-165-00	FILM	0.1MF	5%	50V
C424	1-104-262-00	POLYSTYRENE	10PF	10%	125V
C425A	1-104-262-00	POLYSTYRENE	10PF	10%	125V
C425B	1-136-808-11	FILM	100PF	5%	100V
C426	1-136-808-11	FILM	100PF	5%	100V
C431	1-126-129-11	(E).....ELECT	6800MF	20%	35V
C431	1-126-982-11	(EXCEPT E)...ELECT	5600MF	20%	35V
C432	1-126-129-11	(E).....ELECT	6800MF	20%	35V
C432	1-126-982-11	(EXCEPT E)...ELECT	5600MF	20%	35V
C433	1-124-130-00	ELECT	100MF	20%	63V
C434	1-107-210-00	MICA	22PF	5%	500V
C436	1-126-170-11	ELECT	1000MF	20%	50V
C440	1-136-177-00	FILM	1MF	5%	50V
C441	1-130-483-00	MYLAR	0.01MF	5%	50V
C442	1-124-478-11	ELECT	100MF	20%	25V
C445	1-123-875-11	ELECT	10MF	20%	50V
C451	1-123-343-00	ELECT	33MF	20%	35V
C452	1-123-357-00	ELECT	22MF	20%	50V
C461	1-162-290-31	CERAMIC	470PF	10%	50V
C471	1-136-174-00	FILM	0.56MF	5%	50V
C481	1-126-101-11	ELECT	100MF	20%	10V
C482	1-136-165-00	FILM	0.1MF	5%	50V
C483	1-126-101-11	ELECT	100MF	20%	10V
C501	1-136-165-00	FILM	0.1MF	5%	50V
C502	1-136-165-00	FILM	0.1MF	5%	50V
C503	1-126-101-11	ELECT	100MF	20%	10V
C504	1-136-165-00	FILM	0.1MF	5%	50V
C505	1-136-811-11	FILM	330PF	5%	100V
C506	1-136-808-11	FILM	100PF	5%	100V
C507	1-136-808-11	FILM	100PF	5%	100V
C508	1-126-059-11	ELECT	10MF	20%	50V
C509	1-126-059-11	ELECT	10MF	20%	50V
C510	1-136-228-11	FILM	0.0012MF	2%	100V




Ref.No.	Part No.	Description			
C511	1-136-233-11	FILM	0.0047MF	2%	100V
C514	1-124-572-11	ELECT	100MF	20%	50V
C515	1-136-580-11	FILM	0.47MF	10%	200V
C525	1-136-808-11	FILM	100PF	5%	100V
C526	1-136-808-11	FILM	100PF	5%	100V
C531	1-126-129-11	(E).....ELECT	6800MF	20%	35V
C531	1-126-982-11	(EXCEPT E)...ELECT	5600MF	20%	35V
C532	1-126-129-11	(E).....ELECT	6800MF	20%	35V
C532	1-126-982-11	(EXCEPT E)...ELECT	5600MF	20%	35V
C533	1-124-130-00	ELECT	100MF	20%	63V
C534	1-107-210-00	MICA	22PF	5%	500V
C536	1-126-170-11	ELECT	1000MF	20%	50V
C551	1-123-343-00	ELECT	33MF	20%	35V
C552	1-123-357-00	ELECT	22MF	20%	50V
C561	1-162-290-31	CERAMIC	470PF	10%	50V
C571	1-136-174-00	FILM	0.56MF	5%	50V
C581	1-126-101-11	ELECT	100MF	20%	10V
C582	1-126-101-11	ELECT	100MF	20%	10V
C801	1-126-177-11	ELECT	100MF	20%	6.3V
C802	1-162-306-11	CERAMIC	0.01MF	20%	16V
C803	1-164-159-11	CERAMIC	0.1MF		50V
C901	1-136-177-00	FILM	1MF	5%	50V
C902	1-130-483-00	MYLAR	0.01MF	5%	50V
C903	1-126-076-11	ELECT	4700MF	20%	16V
C904	1-126-016-11	ELECT	4700MF	20%	16V
C905	1-124-556-11	ELECT	2200MF	20%	16V
C906	1-124-556-11	ELECT	2200MF	20%	16V
C912	1-126-233-11	ELECT	22MF	20%	50V
C913	1-124-919-11	ELECT	220MF	20%	63V
C914	1-124-911-11	ELECT	220MF	20%	50V
C915	1-124-477-11	ELECT	47MF	20%	25V
C916	1-162-179-11	CERAMIC	0.1MF		50V
C921	1-126-176-11	ELECT	220MF	20%	10V
C922	1-124-902-00	ELECT	0.47MF	20%	50V
C923	1-124-927-11	ELECT	4.7MF	20%	50V
C924	1-162-179-11	CERAMIC	0.1MF		50V
C931	1-162-179-11	CERAMIC	0.1MF		50V
C932	1-126-103-11	ELECT	470MF	20%	16V
C941	1-123-380-00	ELECT	1MF	20%	50V
C942	1-123-875-11	ELECT	10MF	20%	50V
C990	1-126-534-11	ELECT	47000MF		5.5V
C991	△ 1-161-744-00	CERAMIC	0.01MF		400V
C992	△ 1-161-744-00	CERAMIC	0.01MF		400V
CN051	1-569-429-11	SOCKET, CONNECTOR	16P		
CN101	*1-506-503-11	PIN, CONNECTOR	9P		
CN102	*1-564-338-00	PIN, CONNECTOR	4P		
CN103	*1-564-340-00	PIN, CONNECTOR	6P		
CN104	*1-564-339-00	PIN, CONNECTOR	5P		
CN301	*1-564-342-11	PIN, CONNECTOR	8P		
CN302	*1-564-340-00	PIN, CONNECTOR	6P		
CN303	*1-564-506-11	PLUG, CONNECTOR	3P		
CN401	*1-564-505-11	PLUG, CONNECTOR	2P		
CN402	*1-564-505-11	PLUG, CONNECTOR	2P		
CN403	*1-564-506-11	PLUG, CONNECTOR	3P		
CN450	*1-564-506-11	PLUG, CONNECTOR	3P		
CN451	*1-564-507-11	PLUG, CONNECTOR	4P		
CN501	*1-564-505-11	PLUG, CONNECTOR	2P		
CN502	*1-564-505-11	PLUG, CONNECTOR	2P		

Note:
The components identified by mark Δ or dotted line with mark Δ are critical for safety. Replace only with part number specified.

Note:
Les composants identifiés par une marque Δ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

Ref.No.	Part No.	Description
CN503	*1-564-506-11	PLUG, CONNECTOR 3P
CN801	*1-564-500-11	PIN, CONNECTOR 7P
CN802	*1-564-502-11	PIN, CONNECTOR 10P
CN803	*1-564-497-11	PIN, CONNECTOR 4P
CN901	*1-535-116-00	TERMINAL 3P WIRE RAP
CN902	*1-564-341-11	PIN, CONNECTOR 7P
CN903	*1-535-120-00	TERMINAL 7P WIRE RAP
CN931	*1-564-505-11	PLUG, CONNECTOR 2P
CN992	*1-535-141-00	BASE POST 22MM (10MM PITCH) 4P
D401	8-719-200-31	DIODE 21DQ05
D403	8-719-114-29	DIODE RD5.1JS-B1
D404	8-719-107-94	DIODE 1SS202-1
D405	8-719-114-30	DIODE RD5.1JS-B2
D421	8-719-107-94	DIODE 1SS202-1
D431	8-719-224-11	DIODE 10YD2.4A
D432	8-719-902-87	DIODE EQB01-08Q
D433	8-719-200-89	DIODE 31DF2-FA
D434	8-719-200-89	DIODE 31DF2-FA
D471	8-719-107-94	DIODE 1SS202-1
D531	8-719-224-11	DIODE 10YD2.4A
D532	8-719-902-87	DIODE EQB01-08Q
D533	8-719-200-89	DIODE 31DF2-FA
D534	8-719-200-89	DIODE 31DF2-FA
D571	8-719-107-94	DIODE 1SS202-1
D701	8-719-107-94	DIODE 1SS202-1
D702	8-719-107-94	DIODE 1SS202-1
D703	8-719-107-94	DIODE 1SS202-1
D704	8-719-107-94	DIODE 1SS202-1
D705	8-719-107-94	DIODE 1SS202-1
D706	8-719-107-94	DIODE 1SS202-1
D707	8-719-907-81	DIODE BG5534S
D708	8-719-907-75	DIODE AA5534S
D709	8-719-971-50	DIODE MBG3371X
D710	8-719-971-52	DIODE MAY3371X
D711	8-719-971-49	DIODE BR3371X
D712	8-719-970-98	DIODE MPY3371X
D713	8-719-107-94	DIODE 1SS202-1
D801	8-719-107-94	DIODE 1SS202-1
D901	8-719-937-49	DIODE R0F02M
D907	8-719-107-94	DIODE 1SS202-1
D911	8-719-200-82	DIODE 11ES2
D914	8-719-913-62	DIODE HZS36-2L
D915	8-719-933-48	DIODE HZS7B3L
D922	8-719-107-94	DIODE 1SS202-1
D923	8-719-107-94	DIODE 1SS202-1
D924	8-719-107-94	DIODE 1SS202-1
D931	8-719-107-94	DIODE 1SS202-1
D941	8-719-109-81	DIODE RD4.7ES-B2
F991	△.1-532-066-11	(AEP,UK,Australian) ...FUSE, TIME-LAG 0.4A
F991	△.1-532-215-11	(E).....FUSE, TIME-LAG 0.8A
F991	△.1-532-742-11	(US,Canadian)...FUSE, GLASS TUBE 1.6A
FL801	1-519-554-11	INDICATOR TUBE, FLUORESCENT
IC051	8-759-903-55	IC LF357N
IC101	8-752-037-33	IC CXA1372Q
IC102	8-752-035-28	IC CXA1291P

Ref.No.	Part No.	Description
IC103	8-752-035-28	IC CXA1291P
IC201	8-752-333-31	IC CXD2500Q
IC202	8-752-328-61	IC CXD1244S
IC203	8-752-334-77	IC CXD2553S
IC210	8-759-977-71	IC GP-1F31T
IC301	8-759-634-57	IC M37450MB-139FP
IC302	8-759-822-50	IC LC3564PL-15
IC303	8-759-962-08	IC BA6208
IC401	8-752-335-52	IC CXD2552Q-2
IC402	8-759-233-63	IC TC74HC004AP
IC403	8-759-233-63	IC TC74HC004AP
IC405	8-759-980-72	IC AD42712
IC406	8-759-982-03	IC RC5532DD
IC407	8-759-982-03	IC RC5532DD
IC506	8-759-982-03	IC RD5532DD
IC507	8-759-982-03	IC RD5532DD
IC551	8-759-981-85	IC NJM4556D
IC801	8-759-998-54	IC MSC62408-005GS-K
IC802	8-749-920-83	IC GPIU52XB
IC902	8-759-604-29	IC M5F7805
IC903	8-759-604-47	IC M5F7905
IC921	8-759-605-44	IC M74HC6004P
IC931	8-759-604-39	IC M5F78M12
J401	1-568-101-11	JACK, PIN 4P (LINE OUT)
J481	1-568-519-31	JACK, LARGE TYPE (PHONE)
L401	1-410-547-11	INDUCTOR 3.9UH
L402	1-410-547-11	INDUCTOR 3.9UH
M001	A-4604-347-A	MOTOR (L) ASSY (LOADING)
M002	X-4927-605-3	BASE ASSY, MECHANISM (SPINDLE MOTOR)
Q051	8-729-900-80	TRANSISTOR DTC114ES
Q052	8-729-184-53	TRANSISTOR 2SC1845-EA
Q101	8-729-900-89	TRANSISTOR DTC144ES
Q301	8-729-900-80	TRANSISTOR DTC114ES
Q401	8-729-140-96	TRANSISTOR 2SD1774-34
Q403	8-729-140-96	TRANSISTOR 2SD1774-34
Q431	8-729-167-62	TRANSISTOR 2SC2676
Q432	8-729-107-53	TRANSISTOR 2SC2275A
Q433	8-729-113-82	TRANSISTOR 2SA1138
Q434	8-729-167-62	TRANSISTOR 2SC2676
Q451	8-729-107-84	TRANSISTOR 2SC3623A-L
Q471	8-729-201-05	TRANSISTOR 2SC2878B
Q472	8-729-900-63	TRANSISTOR DTA124ES
Q473	8-729-900-80	TRANSISTOR DTC114ES
Q531	8-729-113-82	TRANSISTOR 2SA1138
Q532	8-729-190-53	TRANSISTOR 2SA985-A
Q533	8-729-167-62	TRANSISTOR 2SC2676
Q534	8-729-113-82	TRANSISTOR 2SA1138
Q551	8-729-107-84	TRANSISTOR 2SC3623A-L
Q571	8-729-201-05	TRANSISTOR 2SC2878-B
Q572	8-729-900-63	TRANSISTOR DTA124ES
Q573	8-729-900-80	TRANSISTOR DTC114ES
Q801	8-729-905-05	TRANSISTOR 2SD1293M
Q802	8-729-905-05	TRANSISTOR 2SD1293M
Q803	8-729-900-45	TRANSISTOR DTC114EF
Q804	8-729-900-45	TRANSISTOR DTC114EF
Q805	8-729-900-45	TRANSISTOR DTC114EF

<p>Note: The components identified by mark  or dotted line with mark  are critical for safety. Replace only with part number specified.</p>	<p>Note: Les composants identifiés par une marque  sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.</p>
--	--

Ref.No.	Part No.	Description					
Q806	8-729-900-45	TRANSISTOR DTC114EF					
Q807	8-729-900-45	TRANSISTOR DTC114EF					
Q808	8-729-900-45	TRANSISTOR DTC114EF					
Q911	8-729-140-96	TRANSISTOR 2SD774-34					
Q931	8-729-900-80	TRANSISTOR DTC114ES					
Q941	8-729-900-61	TRANSISTOR DTA114ES					
R001	△, 1-216-377-11	METAL OXIDE	4.7	5%	2W	F	
R051	1-249-417-11	CARBON	1K	5%	1/4W		
R052	1-249-425-11	CARBON	4.7K	5%	1/4W		
R053	1-249-425-11	CARBON	4.7K	5%	1/4W		
R054	1-249-417-11	CARBON	1K	5%	1/4W		
R055	1-249-417-11	CARBON	1K	5%	1/4W		
R056	1-249-417-11	CARBON	1K	5%	1/4W		
R057	1-249-425-11	CARBON	4.7K	5%	1/4W		
R058	1-249-433-11	CARBON	22K	5%	1/4W		
R059	1-249-431-11	CARBON	15K	5%	1/4W		
R101	1-249-425-11	CARBON	4.7K	5%	1/4W		
R102	1-247-887-00	CARBON	220K	5%	1/4W		
R103	1-249-425-11	CARBON	4.7K	5%	1/4W		
R104	1-247-882-11	CARBON	130K	5%	1/4W		
R105	1-249-440-11	CARBON	82K	5%	1/4W		
R106	1-249-440-11	CARBON	82K	5%	1/4W		
R107	1-249-431-11	CARBON	15K	5%	1/4W		
R108	1-247-846-11	CARBON	4.3K	5%	1/4W		
R109	1-247-896-11	CARBON	510K	5%	1/4W		
R110	1-249-441-11	CARBON	100K	5%	1/4W		
R112	1-249-429-11	CARBON	10K	5%	1/4W		
R113	1-249-441-11	CARBON	100K	5%	1/4W		
R114	1-247-854-11	CARBON	9.1K	5%	1/4W		
R115	1-247-854-11	CARBON	9.1K	5%	1/4W		
R116	1-249-393-11	CARBON	10	5%	1/4W		
R118	1-249-393-11	CARBON	10	5%	1/4W		
R120	1-247-899-11	CARBON	680K	5%	1/4W		
R121	1-249-441-11	CARBON	100K	5%	1/4W		
R122	1-249-424-11	CARBON	3.9K	5%	1/4W		
R123	1-247-883-00	CARBON	150K	5%	1/4W		
R124	1-247-878-00	CARBON	91K	5%	1/4W		
R125	1-247-883-00	CARBON	150K	5%	1/4W		
R126	1-249-433-11	CARBON	22K	5%	1/4W		
R127	1-249-393-11	CARBON	10	5%	1/4W		
R128	1-249-441-11	CARBON	100K	5%	1/4W		
R129	1-249-441-11	CARBON	100K	5%	1/4W		
R130	1-249-441-11	CARBON	100K	5%	1/4W		
R131	1-249-441-11	CARBON	100K	5%	1/4W		
R132	1-249-393-11	CARBON	10	5%	1/4W		
R150	1-249-417-11	CARBON	1K	5%	1/4W		
R152	1-249-393-11	CARBON	10	5%	1/4W		
R201	1-249-423-11	CARBON	3.3K	5%	1/4W		
R202	1-249-423-11	CARBON	3.3K	5%	1/4W		
R203	1-249-429-11	CARBON	10K	5%	1/4W		
R204	1-249-429-11	CARBON	10K	5%	1/4W		
R205	1-249-429-11	CARBON	10K	5%	1/4W		
R206	1-249-435-11	CARBON	33K	5%	1/4W		
R209	1-249-413-11	CARBON	470	5%	1/4W		
R210	1-249-413-11	CARBON	470	5%	1/4W		
R211	1-249-413-11	CARBON	470	5%	1/4W		
R212	1-249-417-11	CARBON	1K	5%	1/4W		

Ref.No.	Part No.	Description					
R213	1-249-413-11	CARBON	470	5%	1/4W		
R214	1-249-413-11	CARBON	470	5%	1/4W		
R215	1-249-413-11	CARBON	470	5%	1/4W		
R216	1-249-413-11	CARBON	470	5%	1/4W		
R220	1-249-405-11	CARBON	100	5%	1/4W		
R230	1-249-417-11	CARBON	1K	5%	1/4W		
R231	1-249-405-11	CARBON	100	5%	1/4W		
R301	1-247-903-00	CARBON	1M	5%	1/4W		
R302	1-249-411-11	CARBON	330	5%	1/4W		
R303	1-249-429-11	CARBON	10K	5%	1/4W		
R304	1-249-429-11	CARBON	10K	5%	1/4W		
R305	1-249-429-11	CARBON	10K	5%	1/4W		
R306	1-249-429-11	CARBON	10K	5%	1/4W		
R308	1-249-429-11	CARBON	10K	5%	1/4W		
R309	1-249-429-11	CARBON	10K	5%	1/4W		
R310	1-249-429-11	CARBON	10K	5%	1/4W		
R311	1-249-429-11	CARBON	10K	5%	1/4W		
R312	1-249-429-11	CARBON	10K	5%	1/4W		
R313	1-249-417-11	CARBON	1K	5%	1/4W		
R314	1-249-429-11	CARBON	10K	5%	1/4W		
R315	1-249-429-11	CARBON	10K	5%	1/4W		
R316	1-249-417-11	CARBON	1K	5%	1/4W		
R317	1-249-429-11	CARBON	10K	5%	1/4W		
R318	1-249-411-11	CARBON	330	5%	1/4W		
R319	1-249-429-11	CARBON	10K	5%	1/4W		
R320	1-249-429-11	CARBON	10K	5%	1/4W		
R321	1-249-429-11	CARBON	10K	5%	1/4W		
R322	1-249-429-11	CARBON	10K	5%	1/4W		
R401	1-249-946-11	CARBON	9.1K	1%	1/4W		
R402	1-249-946-11	CARBON	9.1K	1%	1/4W		
R403	1-247-721-11	CARBON	4.7K	1%	1/4W		
R404	1-247-891-00	CARBON	330K	5%	1/4W		
R405	1-247-700-11	CARBON	100	5%	1/4W		
R406	1-247-721-11	CARBON	4.7K	1%	1/4W		
R407	1-249-956-11	CARBON	24K	1%	1/4W		
R408	1-249-956-11	CARBON	24K	1%	1/4W		
R409	1-247-700-11	CARBON	100	5%	1/4W		
R410	1-249-941-11	CARBON	5.6K	1%	1/4W		
R411	1-249-941-11	CARBON	5.6K	1%	1/4W		
R412	1-249-941-11	CARBON	5.6K	1%	1/4W		
R413	1-249-941-11	CARBON	5.6K	1%	1/4W		
R414	1-247-715-11	CARBON	1.5K	1%	1/4W		
R416	1-247-715-11	CARBON	1.5K	1%	1/4W		
R417	1-247-903-00	CARBON	1M	5%	1/4W		
R420	1-249-414-11	CARBON	560	5%	1/4W		
R421	1-249-413-11	CARBON	470	5%	1/4W		
R422	1-249-413-11	CARBON	470	5%	1/4W		
R423	1-249-429-11	CARBON	10K	5%	1/4W		
R431	1-249-539-11	CARBON	300	5%	1/4W		
R432	1-247-710-11	CARBON	560	5%	1/4W		
R433	1-247-719-11	CARBON	3.3K	5%	1/4W		
R434	1-249-466-11	CARBON	56K	5%	1/4W		
R435	1-249-913-11	CARBON	390	1%	1/4W		
R436	1-249-921-11	CARBON	820	1%	1/4W		
R440	△, 1-212-877-11	FUSIBLE	68	5%	1/4W	F	
R442	1-249-423-11	CARBON	3.3K	5%	1/4W		
R451	1-259-404-11	CARBON	100	5%	1/6W		

<p>Note: The components identified by mark △ or dotted line with mark △ are critical for safety. Replace only with part number specified.</p>	<p>Notes: Les composants identifiés par une marque △ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.</p>
--	--

Ref.No.	Part No.	Description			
R452	1-259-470-11	CARBON	56K	5%	1/6W
R453	1-259-456-11	CARBON	15K	5%	1/6W
R454	1-259-404-11	CARBON	100	5%	1/6W
R455	1-259-436-11	CARBON	2.2K	5%	1/6W
R456	1-259-456-11	CARBON	15K	5%	1/6W
R471	1-249-504-11	CARBON	10	5%	1/4W
R472	1-259-472-11	CARBON	68K	5%	1/6W
R473	1-259-448-11	CARBON	6.8K	5%	1/6W
R474	1-259-440-11	CARBON	3.3K	5%	1/6W
R475	1-249-417-11	CARBON	1K	5%	1/4W
R491	1-247-700-11	CARBON	100	5%	1/4W
R501	1-249-946-11	CARBON	9.1K	1%	1/4W
R502	1-249-946-11	CARBON	9.1K	1%	1/4W
R503	1-247-721-11	CARBON	4.7K	1%	1/4W
R504	1-247-891-00	CARBON	330K	5%	1/4W
R505	1-247-700-11	CARBON	100	5%	1/4W
R506	1-247-721-11	CARBON	4.7K	1%	1/4W
R507	1-249-956-11	CARBON	24K	1%	1/4W
R508	1-249-956-11	CARBON	24K	1%	1/4W
R509	1-247-700-11	CARBON	100	5%	1/4W
R510	1-249-941-11	CARBON	5.6K	1%	1/4W
R511	1-249-941-11	CARBON	5.6K	1%	1/4W
R512	1-249-941-11	CARBON	5.6K	1%	1/4W
R513	1-249-941-11	CARBON	5.6K	1%	1/4W
R514	1-247-715-11	CARBON	1.5K	1%	1/4W
R516	1-247-715-11	CARBON	1.5K	1%	1/4W
R517	1-247-725-11	CARBON	10K	5%	1/4W
R520	1-247-715-11	CARBON	1.5K	1%	1/4W
R531	1-249-539-11	CARBON	300	5%	1/4W
R532	1-247-710-11	CARBON	560	5%	1/4W
R533	1-247-719-11	CARBON	3.3K	5%	1/4W
R534	1-249-466-11	CARBON	56K	5%	1/4W
R535	1-249-913-11	CARBON	390	1%	1/4W
R536	1-249-921-11	CARBON	820	1%	1/4W
R551	1-259-404-11	CARBON	100	5%	1/6W
R552	1-259-470-11	CARBON	56K	5%	1/6W
R553	1-259-456-11	CARBON	15K	5%	1/6W
R554	1-259-404-11	CARBON	100	5%	1/6W
R555	1-259-436-11	CARBON	2.2K	5%	1/6W
R556	1-259-456-11	CARBON	15K	5%	1/6W
R571	1-249-504-11	CARBON	10	5%	1/4W
R572	1-259-472-11	CARBON	68K	5%	1/6W
R573	1-259-448-11	CARBON	6.8K	5%	1/6W
R574	1-259-440-11	CARBON	3.3K	5%	1/6W
R575	1-249-417-11	CARBON	1K	5%	1/4W
R591	1-247-700-11	CARBON	100	5%	1/4W
R801	1-249-425-11	CARBON	4.7K	5%	1/4W
R802	1-249-429-11	CARBON	10K	5%	1/4W
R803	1-247-903-00	CARBON	1M	5%	1/4W
R804	1-249-417-11	CARBON	1K	5%	1/4W
R806	1-249-441-11	CARBON	100K	5%	1/4W
R807	1-249-417-11	CARBON	1K	5%	1/4W
R809	1-249-441-11	CARBON	100K	5%	1/4W
R810	1-249-406-11	CARBON	120	5%	1/4W
R811	1-249-409-11	CARBON	220	5%	1/4W
R812	1-249-406-11	CARBON	120	5%	1/4W
R813	1-249-406-11	CARBON	120	5%	1/4W

Ref.No.	Part No.	Description			
R814	1-249-418-11	CARBON	1.2K	5%	1/4W
R815	1-249-410-11	CARBON	270	5%	1/4W
R901	1-212-871-11	FUSIBLE	39	5%	1/4W F
R904	1-249-405-11	CARBON	100	5%	1/4W
R911	1-249-425-11	CARBON	4.7K	5%	1/4W
R912	1-249-429-11	CARBON	10K	5%	1/4W
R913	1-249-433-11	CARBON	22K	5%	1/4W
R921	1-249-401-11	CARBON	47	5%	1/4W
R922	1-249-427-11	CARBON	6.8K	5%	1/4W
R923	1-247-883-00	CARBON	150K	5%	1/4W
R924	1-249-437-11	CARBON	47K	5%	1/4W
R925	1-247-891-00	CARBON	330K	5%	1/4W
R941	1-249-441-11	CARBON	100K	5%	1/4W
R942	1-249-429-11	CARBON	10K	5%	1/4W
R943	1-249-417-11	CARBON	1K	5%	1/4W
RV201	1-228-995-00	RES, ADJ, CARBON 20K			
RV202	1-228-995-00	RES, ADJ, CARBON 20K			
RV580	1-238-776-11	RES, VAR, CARBON 10KX3 (LINE OUT/PHONE LEVEL)(including VOL LED/VOL MOTOR)			
RY931	1-515-683-11	RELAY			
S001	1-571-736-11	SWITCH, LEAF (IN)			
S002	1-571-736-11	SWITCH, LEAF (OUT)			
S701	1-554-596-21	SWITCH, KEY BOARD (▶)			
S702	1-554-596-21	SWITCH, KEY BOARD (■)			
S703	1-554-596-21	SWITCH, KEY BOARD (■)			
S704	1-554-596-21	SWITCH, KEY BOARD (◀)			
S705	1-554-596-21	SWITCH, KEY BOARD (▶▶)			
S706	1-554-596-21	SWITCH, KEY BOARD (◀◀)			
S707	1-554-596-21	SWITCH, KEY BOARD (▶▶)			
S708	1-554-596-21	SWITCH, KEY BOARD (1)			
S709	1-554-596-21	SWITCH, KEY BOARD (2)			
S710	1-554-596-21	SWITCH, KEY BOARD (3)			
S711	1-554-596-21	SWITCH, KEY BOARD (4)			
S712	1-554-596-21	SWITCH, KEY BOARD (5)			
S713	1-554-596-21	SWITCH, KEY BOARD (6)			
S714	1-554-596-21	SWITCH, KEY BOARD (7)			
S715	1-554-596-21	SWITCH, KEY BOARD (8)			
S716	1-554-596-21	SWITCH, KEY BOARD (9)			
S717	1-554-596-21	SWITCH, KEY BOARD (10)			
S718	1-554-596-21	SWITCH, KEY BOARD (11)			
S719	1-554-596-21	SWITCH, KEY BOARD (12)			
S720	1-554-596-21	SWITCH, KEY BOARD (13)			
S721	1-554-596-21	SWITCH, KEY BOARD (14)			
S722	1-554-596-21	SWITCH, KEY BOARD (15)			
S723	1-554-596-21	SWITCH, KEY BOARD (16)			
S724	1-554-596-21	SWITCH, KEY BOARD (17)			
S725	1-554-596-21	SWITCH, KEY BOARD (18)			
S726	1-554-596-21	SWITCH, KEY BOARD (19)			
S727	1-554-596-21	SWITCH, KEY BOARD (20)			
S728	1-554-596-21	SWITCH, KEY BOARD (CONTINUE)			
S729	1-554-596-21	SWITCH, KEY BOARD (SHUFFLE)			
S730	1-554-596-21	SWITCH, KEY BOARD (PROGRAM)			
S731	1-554-596-21	SWITCH, KEY BOARD (C.INDEX)			
S732	1-554-596-21	SWITCH, KEY BOARD (DISPLAY MODE)			
S751	1-554-088-00	SWITCH, KEY BOARD (PEAK SEARCH)			
S752	1-554-088-00	SWITCH, KEY BOARD (TIME MEMO)			

<p>Note: The components identified by mark Δ or dotted line with mark Δ are critical for safety. Replace only with part number specified.</p>	<p>Note: Les composants identifiés par une marque Δ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.</p>
--	--

Ref.No.	Part No.	Description
S753	1-554-088-00	SWITCH, KEY BOARD (REPEAT)
S754	1-554-088-00	SWITCH, KEY BOARD (FADER)
S755	1-554-088-00	SWITCH, KEY BOARD (CHECK)
S756	1-554-088-00	SWITCH, KEY BOARD (CLEAR)
S757	1-554-088-00	SWITCH, KEY BOARD (EDIT/TIME FADE)
S758	1-554-088-00	SWITCH, KEY BOARD (TIME SET)
S759	1-554-088-00	SWITCH, KEY BOARD (FILE RECALL)
S760	1-554-088-00	SWITCH, KEY BOARD (FILE)
S761	1-554-088-00	SWITCH, KEY BOARD (ERASE)
S762	1-554-088-00	SWITCH, KEY BOARD (MULTI PGM)
S763	1-554-088-00	SWITCH, KEY BOARD (LEVEL FILE)
S801	1-554-596-21	SWITCH, KEY BOARD (OPEN/CLOSE)
S802	1-570-157-51	SWITCH, SLIDE (TIMER)
S991	△.1-570-156-11	SWITCH, PUSH (AC POWER)(1 KEY)(POWER)
T991	△.1-450-024-11	(US,Canadian)...TRANSFORMER, POWER
T991	△.1-450-026-11	(AEP,UK,Australian) ...TRANSFORMER, POWER
T991	△.1-450-028-11	(E).....TRANSFORMER, POWER
T992	△.1-450-025-11	(US,Canadian)....TRANSFORMER, POWER
T992	△.1-450-027-11	(AEP,UK,Australian) ...TRANSFORMER, POWER
TH431	1-808-065-11	THERMISTOR, POSITIVE
TH531	1-808-065-11	THERMISTOR, POSITIVE
TH901	1-808-065-11	THERMISTOR, POSITIVE
TH902	1-808-065-11	THERMISTOR, POSITIVE
TH903	1-202-850-00	THERMISTOR, POSITIVE
VS901	△.1-526-576-51	(E)...SELECTOR, POWER VOLTAGE (VOLTAGE SELECTOR)
X301	1-577-377-11	VIBRATOR, CERAMIC (10MHz)
X401	1-577-686-11	VIBRATOR, CRYSTAL (45.1584MHz)
X402	1-577-685-11	FILTER, CRYSTAL (16.9344MHz)
X801	1-577-082-11	VIBRATOR, CERAMIC (4MHz)

ACCESSORY & PACKING MATERIAL

1-465-277-11	REMOTE COMMANDER (RM-D590)
1-558-271-11	CORD, CONNECTION
3-750-411-11	(Australian)...MANUAL, INSTRUCTION
3-750-926-11	(EXCEPT US)...MANUAL, INSTRUCTION
3-750-926-21	(US).....MANUAL, INSTRUCTION
3-750-926-41	(AEP).....MANUAL, INSTRUCTION
4-847-802-00	(EXCEPT UK)...SCREW
4-925-788-01	COVER, BATTERY (FOR RM-D590)
*4-923-548-01	CUSHION (UPPER)
*4-923-549-01	CUSHION (LOWER)
*4-925-305-01	(UK)...CUSHION, SIDE
*4-934-098-01	STOPPER, DISC TABLE
*4-935-902-11	INDIVIDUAL CARTON

Note:

The components identified by mark **△** or dotted line with mark **△** are critical for safety. Replace only with part number specified.

Note:

Les composants identifiés par une marque **△** sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.